

PARTS CATALOGUE



SEEDERS

Code:

0501090838

Product:

SDT 5000 2420



Series:

S-1107

Revision:

00



Date Revision:

NOVEMBRO/2007




INDEX


0501053987	TRANSMISSION HUB CARRYING-WHEELS
0501053997	SEED DOUBLE-DISC OPENER ASSY
0501054157	DEPTH WHEEL ASSY
0501055280	STUB SHAFT & HUB ASSY
0501057113	BLADE DISC ASSY
0511040952	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER
0511041259	DRAWBAR JACK ASSY
0511043568	21.12" X 4" X 26.57" HIDRAULI CYLINDER
0511043573	1.7" X 3.4" X 8.858" HIDRAULI CYLINDER
0909090966	DEPTH CONTROL PRESS WHEELS
0909090971	TRANSMISSION WHEELS ASSY
0909090972	HYDRAULIC CIRCUIT SDT 5000
0909091258	HIDRAULIC ROW MARKER ASSY
0909091305	SEED FERTIL ROW ASSY
0909092983	FRAME ASSY
0909092984	FINE SEED BOX
0909092985	SEED/FERTILIZER BOX ASSY

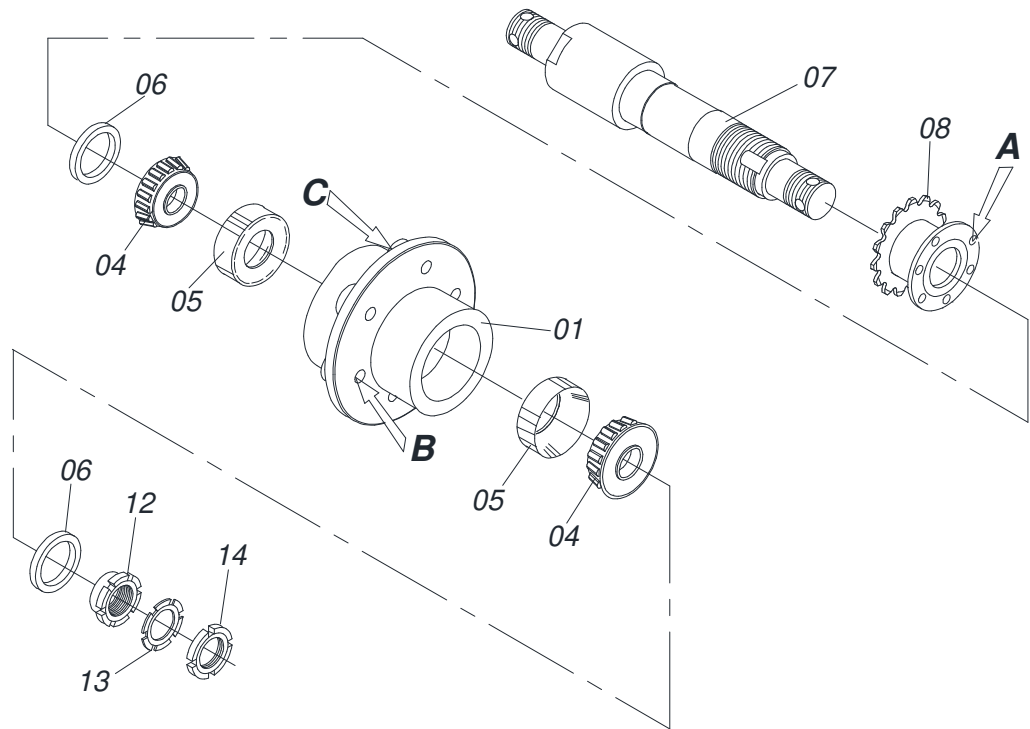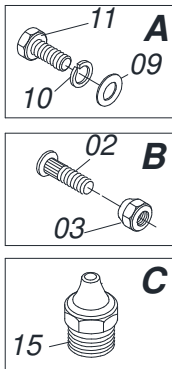


Item	Code	Description	See page	QT
01	0502011109	HUB SPDLE ASSY		01
02	0503010328	25590/25523 ROLLER BEARING		02
03	0503010804	00547-B SEAL		02
04	0531015334	WHEEL AXLE		01
05	0511063646	28Z GEAR WITH FLANGE		01
06	0501010694	8.5 X 18 X 1.5 FLAT WASHER		06
07	0503011444	SPRING WASHER		06
08	0503010365	NUT		06
09	0511015949	LOCK NUT		01
10	0503010329	LOCK WASHER		01
11	0503010330	KM 9 LOCKNUT		01
12	0503010002	1800 GREASE FITTING		01
13	0501010127	9/16" X 1-7/8" LUG BOLT		06
14	0503010035	9/16" CONIC NUT		06

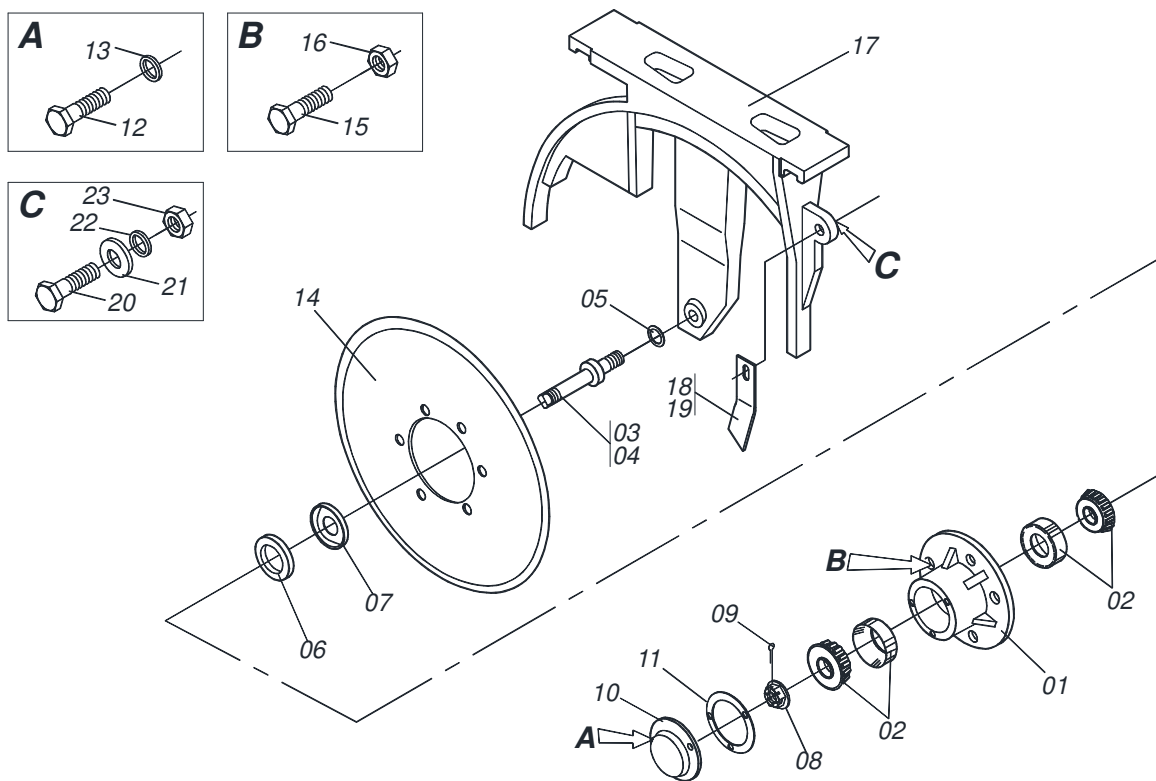


Item	Code	Description	See page
00	0501053997	SEED DOUBLE-DISC OPENER ASSY	
01	0502011930	DOUBLE DISC COULTER BOX	02
02	0503010598	30204 BALL BEARING	04
03	0531013736	LEFT DOUBLE DISC HUB AXLE	01
04	0531013735	RIGHT DOUBLE DISC HUB	01
05	0511015098	FLAT WASHER	02
06	0503011112	SEAL 02376-BRG	02
07	0511011927	DUST CLOAK	02
08	0503030282	3/4" CASTLE NUT	02
09	0503010257	1/8" X 1" COTTERPIN	02
10	0521019178	COVER DEPTH	02
11	0503030757	2.9" X 2" X 0.02" JOINT	02
12	0503010298	1/4" X 1/2" BOLT	06
13	0503010143	1/4" SPRING WASHER	06
14	0603023068	PLAIN COULTER BLADE	02
15	0503010546	5/16" X 7/8" BOLT	12
16	0503010337	5/16" NUT	12
17	0502012047	SUPPORT DOUBLE DISC	01
18	0531013568	RIGHT DOUBLE DISC SCRAPER	01
19	0531013569	LEFT DOUBLE-DISC SCRAPER	01
20	0503010451	5/8" X 1-1/4" BOLT	01
21	0501010984	FLAT WASHER	02
22	0503010025	3/8" SPRING WASHER	01
23	0503010026	3/8" NUT	01

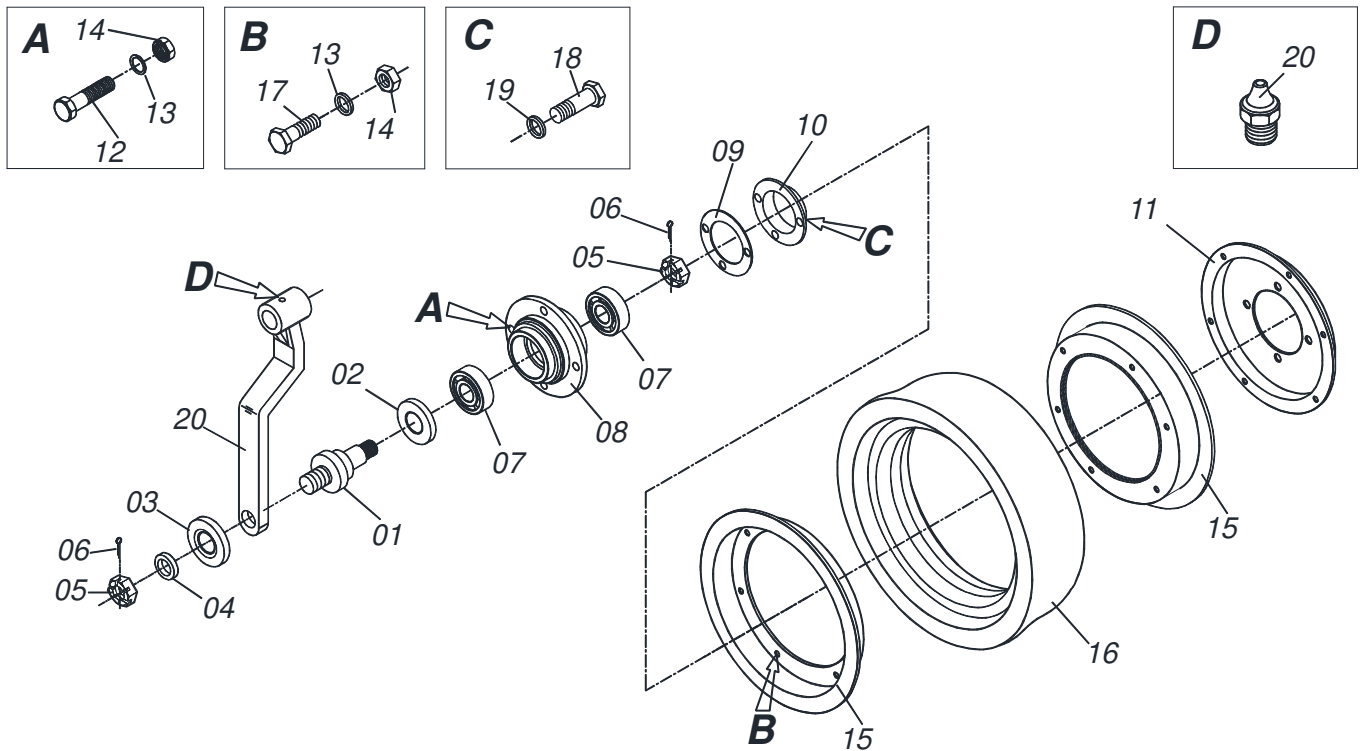

Item	Code	Description	See page
00	0501054157	DEPTH WHEEL ASSY	
01	0531014605	DEPTH CONTROL AXLE	01
02	0503011112	SEAL 02376-BRG	01
03	0511011927	DUST CLOAK	01
04	0531015265	FLAT WASHER	01
05	0503030282	3/4" CASTLE NUT	02
06	0503010297	5/32" X 1.1/4" COTTER PIN	02
07	0503010598	30204 BALL BEARING	02
08	0502012050	DEPHT WHEELS BOX	01
09	0503030757	2.9" X 2" X 0.02" JOINT	01
10	0521019178	COVER DEPTH	01
11	0531015295	DEPTH WHEEL FLANGE	01
12	0503010371	5/16" X 1" BOLT	04
13	0503010179	5/16" ZN SPRING WASHER	10
14	0503010337	5/16" NUT	10
15	0521018930	RIM SEMI	02
16	0503030891	RUBBER BAND	01
17	0503010358	5/16" X 5/8" BOLT	06
18	0503010298	1/4" X 1/2" BOLT	04
19	0503010143	1/4" SPRING WASHER	04
20	0502012074	DEPTH WHEEL ARM	01
21	0503010002	1800 GREASE FITTING	01

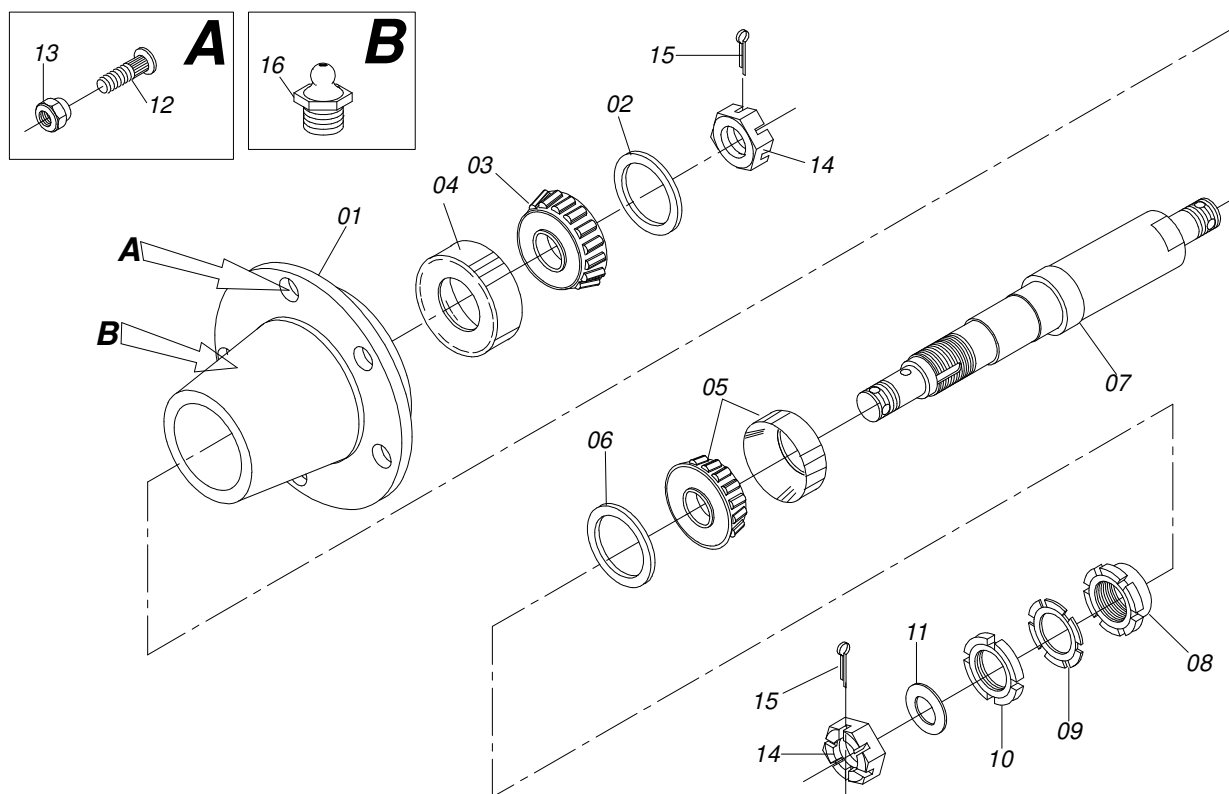

Item	Code	Description	See page	QT
01	0502010908	CARRYING WHEEL HUB		01
02	0503012747	SEAL 5144		01
03	0503010613	3780 CONE		01
04	0503010614	3720 CAP		01
05	0503010328	25590/25523 ROLLER BEARING		01
06	0503012162	5046 BAG SEAL RING		01
07	0541012124	TRANSP WHEELS AXLE		01
08	0511015949	LOCK NUT		01
09	0503010329	LOCK WASHER		01
10	0503010330	KM 9 LOCKNUT		01
11	0521011100	FLAT WASHER		01
12	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		08
13	0503010064	5/8 UNF CONIC NUT		08
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010067	3/16" X 2.1/2" COTTER PIN		02
16	0503010002	1800 GREASE FITTING		02

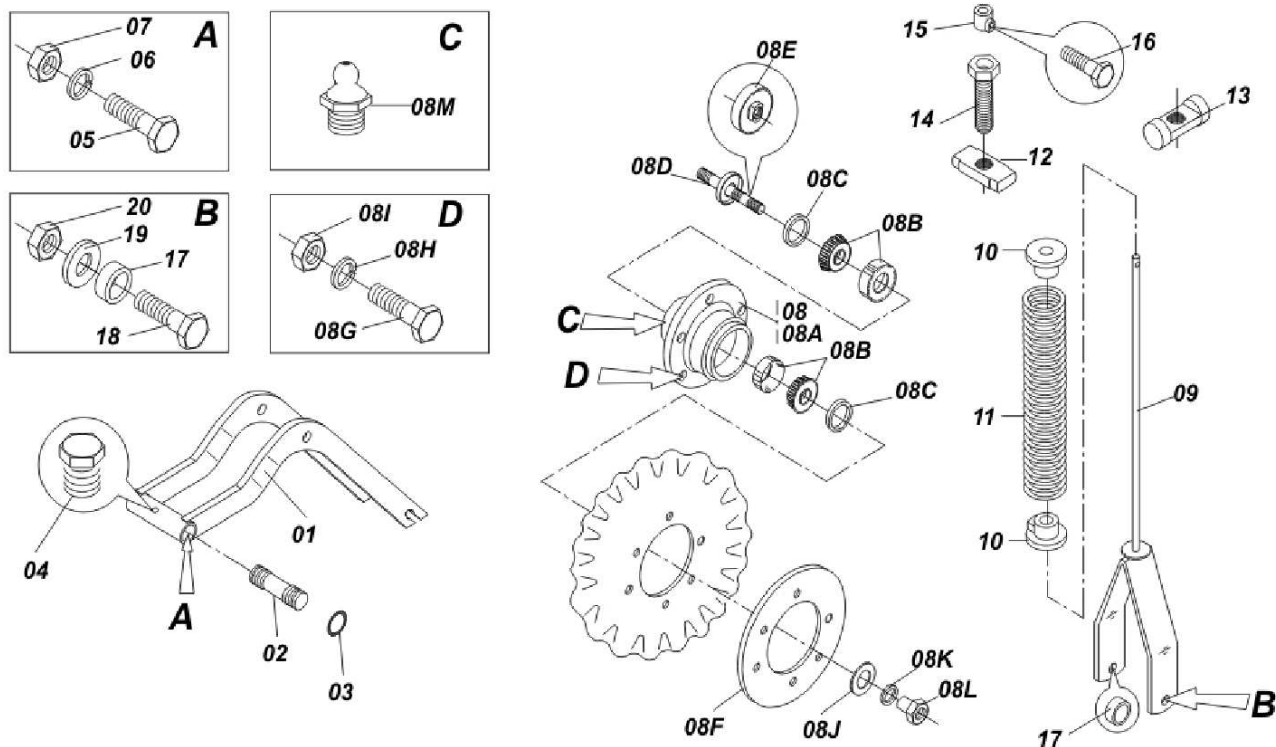


Item	Code	Description	See page
01	0511066354	ARM BLADE DISC	01
02	0531015029	BLADE DISC REEL	01
03	0503010046	2-216 N 3006-9B O'RING	01
04	0511017907	1/8" BSPT X 6 PLUG	02
05	0503012649	3/4" X 6-1/4" BOLT	01
06	0503010023	3/4" SPRING WASHER	01
07	0503010014	3/4" NUT	01
08	0501054169	DISC BLADE HUB ASSY	01
08A	0502012097	BLADE DISC HUB	01
08B	0503010215	30205 BEARING	02
08C	0503010213	SEAL 30205	02
08D	0511061647	BLADE DISC AXLE ASSY	01
08E	0501068582	7/8" UNF WITH DUST CLOAK NUT	01
08F	0501013839	WASHER	01
08G	0503010365	NUT	06
08H	0503011444	SPRING WASHER	06
08I	0503010337	5/16" NUT	06
08J	0511015346	FLAT WASHER	02
08K	0503011442	3/4" SPRING WASHER	02
08L	0531017617	3/4" X 0.63" D BLADE NUT	02
08M	0503010002	1800 GREASE FITTING	01
09	0511066352	BLADE DISC SPRING GUIDE	01
10	0502020635	SPRING UPPER SUPPORT	02
11	0503031379	COMPRESSION SPRING	02
12	0502012043	SPRING LOCKNUT	01
13	0521011158	SPRING LOCKNUT	01
14	0521012736	REGULATOR SPINDLE	01
15	0502040534	SPRING GUIDE BUSHING LOCK	02
16	0503010834	1/2 X 1 BOLT	01
17	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE	02
18	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN	01




SDT 5000 2420
BLADE DISC ASSY

Page 0
0501057113


Item	Code	Description	See page
19	0501012140	FLAT WASHER	02
20	0503012412	5/8 UNC SELF LOCKING NUT	02

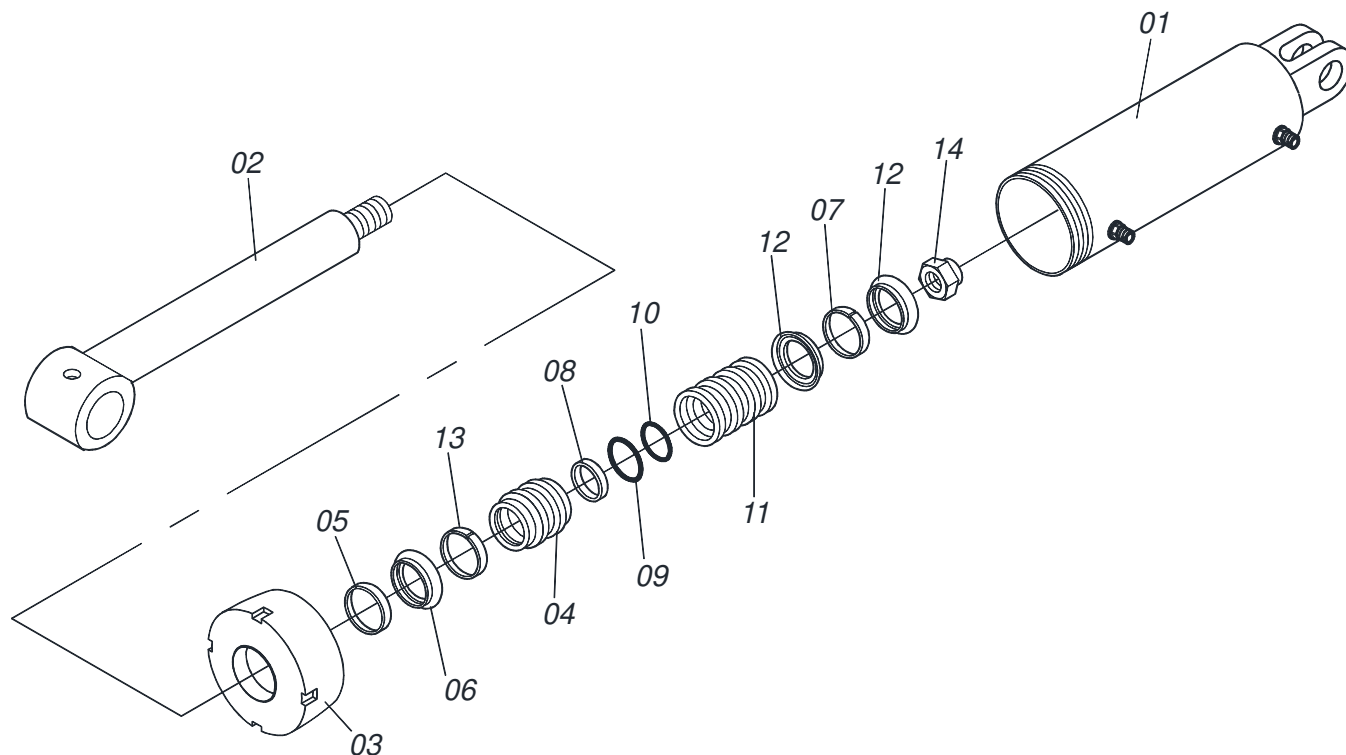


Item	Code	Description	See page
00	0511040952	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER	01
01	0511063676	2.5" X 16.1" CYLINDER CASE	01
02	0511063675	1.5" X 18.46" TURNBUCLE	01
03	0502010471	MOBILE COVER	01
04	0502010780	RING SUPPORT	01
05	0503010163	D-1500 SCRAPER RING	01
06	0503010989	1870-1500-375-B GASKET	01
07	0503010970	W1-1650-500 PK O'RING G.E	01
08	0503011058	8-330 BACK-UP RING	01
09	0503010161	2-330 N 3006 9B O'RING	01
10	0503010285	2-222 N 3006-9B O'RING	01
11	0502010783	1.5" X 2.5" PISTON	01
12	0503010160	2500 2000 GASKET	02
13	0503010973	W2-2500-500 PK O'RING G.E	01
14	0503010063	1" SELF-ALIGNING NUT	01

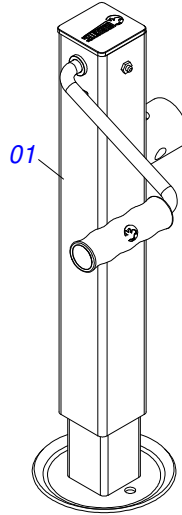


Item	Code	Description	See page	QT
01	0503062157	HEADER JACK		01

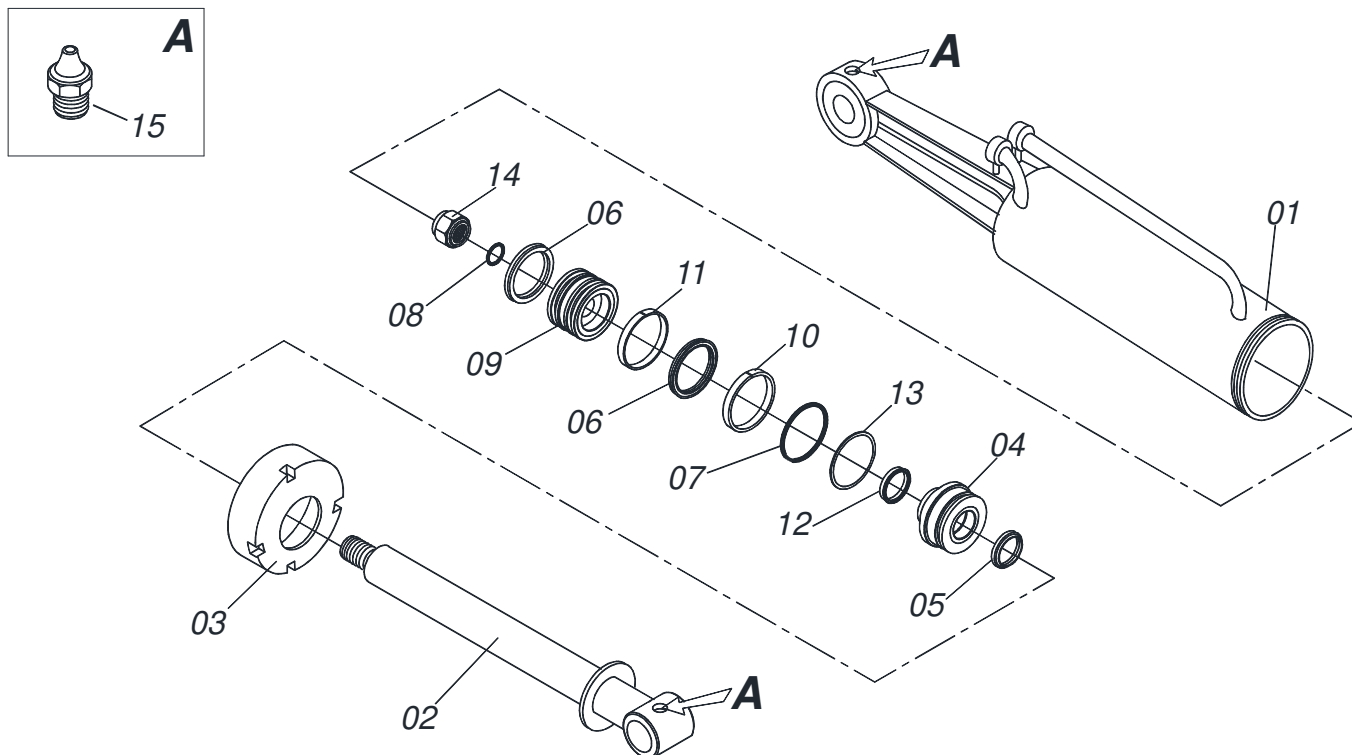

Item	Code	Description	See page
00	0511043573	1.7" X 3.4" X 8.858" HIDRAULI CYLINDER	
01	0511066404	3,374" X 13.110" CYLINDER CASE	01
02	0511066403	1.75" X 16.929" TURNBUCKLE	01
03	0502010993	DETACHABLE COVER	01
04	0502010781	RING SUPPORT	01
05	0503010761	D-1750 SCRAPER RING	01
06	0503010170	PACKING 3120 2750	02
07	0503010976	2-336 N 3006-9B O'RING	01
08	0503010042	2-214 N 3006-9B O'RING	01
09	0502010843	1.8" X 3.4" PISTON	01
10	0503010949	W2-2000-500 PK RING G.E	01
11	0503010948	W4-3346-590 PK RING G.E	01
12	0503010990	GASKET	01
13	0503011060	8-336 BACK-UP RING	01
14	0503010063	1" SELF-ALIGNING NUT	01
15	0503010002	1800 GREASE FITTING	02

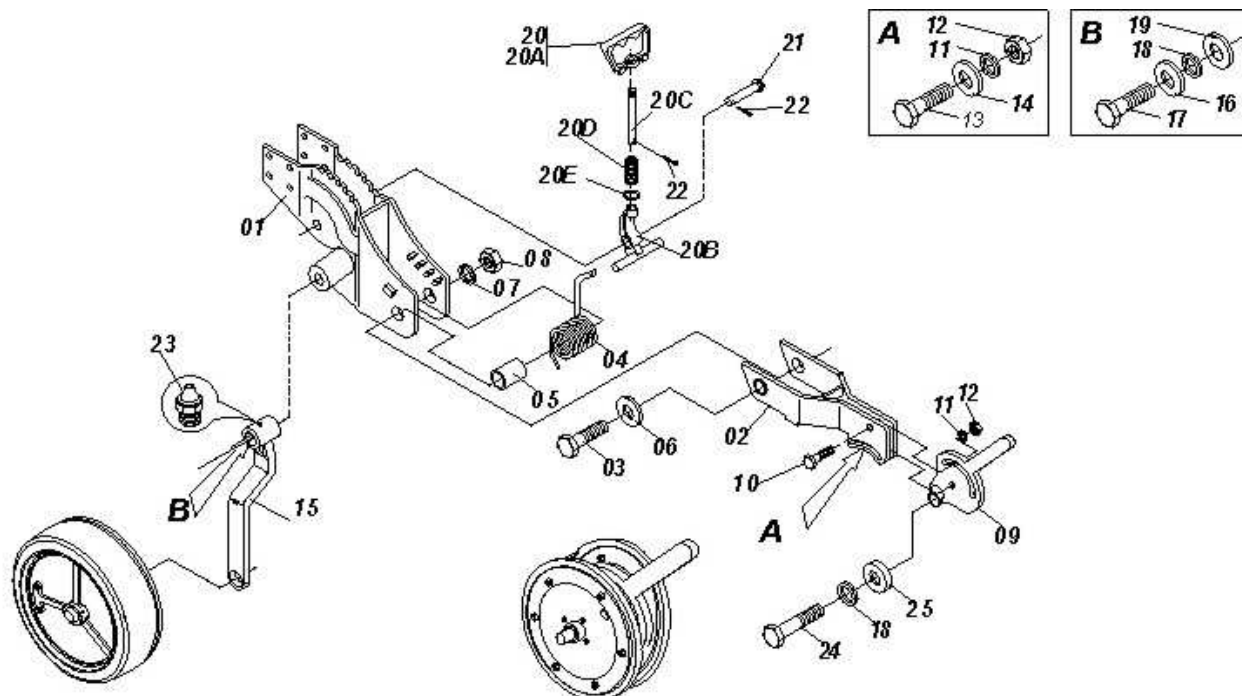

Item	Code	Description	See page
00	0501056364	DEPTH CONTROL SYSTEM	
01	0511063710	DEPTH CONTROL SUPPORT WITH AXLE	01
02	0502012046	PRESS WHEELS FORK	01
03	0501010452	5/8" X 5" BOLT	01
04	0503031742	LEFT TORSION SPRING	01
05	0531015043	0.65" X 1.81" X 2.03" SLEEVE	01
06	0501012140	FLAT WASHER	01
07	0503010027	5/8" SPRING WASHER	01
08	0503010013	5/8" NUT	01
09	0511066665	"V" PRESS WHEEL FIXER	01
10	0503010849	3/8" X 1-1/2" BOLT	01
11	0503010025	3/8" SPRING WASHER	02
12	0503010026	3/8" NUT	02
13	0503011404	BOLT	01
14	0501010984	FLAT WASHER	02
15	0502012074	DEPTH WHEEL ARM	02
16	0511015346	FLAT WASHER	14
17	0503010834	1/2 X 1 BOLT	02
18	0503010019	1/2" SPRING WASHER	04
19	0511017302	FLAT WASHER	02
20	0501053999	DEPTH WHEELS REGULATOR	01
20A	0502011882	5/8" UNF DEPTH CONTROL LEVER	01
20B	0502012045	SEED SIST CONTROL DEPTH LEVER	01
20C	0521017264	5/8"UNF DEPTH CONTROL AXLE	01
20D	0503030975	0.9" X 1.5" X 0.1" SPRING	01
20E	0511015976	FLAT WASHER	01
21	0531019373	PIVOT SHAFT	01
22	0503010257	1/8" X 1" COTTERPIN	02
23	0503010002	1800 GREASE FITTING	02
24	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	02
25	0521016316	DUST CLOAK	02

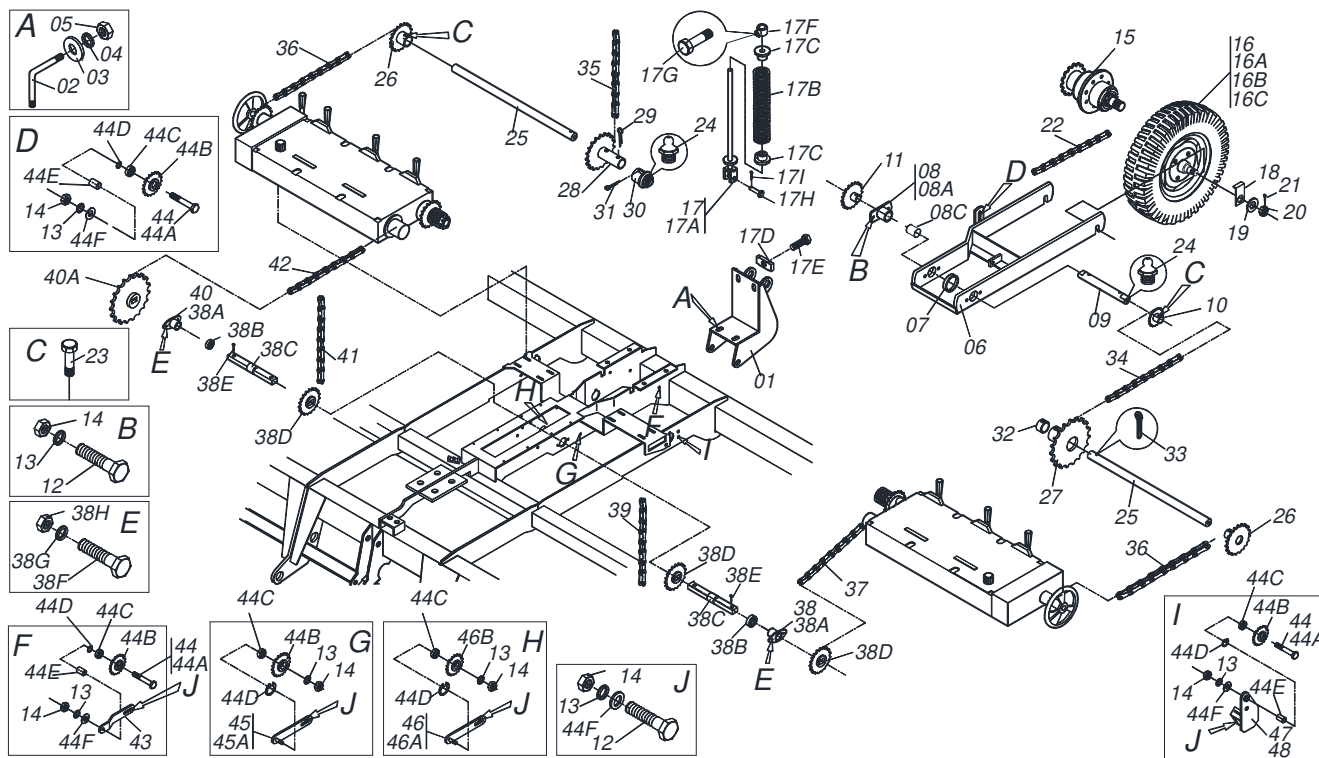


Item	Code	Description	See page
01	0511063603	CARRYING WHEELS ARM SUPPORT	01
02	0531018874	WHELL FASTENER ROTATE DRAW	02
03	0501012140	FLAT WASHER	04
04	0503010027	5/8" SPRING WASHER	04
05	0503010013	5/8" NUT	04
06	0511063602	CARRYING WHEELS ARM	01
07	0521011173	SLEEVE 75 X 63,30 X 15	02
08	0501110358	CARRYNG-WHEELS BEARING AXLE	02
08A	0501072818	CARRYNG-WHEELS RATCHET	02
08C	0521011184	1.2" X 1.8" 2.1" SLEEVE	02
09	0531015271	CARRYNG-WHEELS AXLE WORK	01
10	0511063635	17Z GEAR WITH SLEEVE	01
11	0511063637	28Z GEAR WITH SLEEVE	01
12	0503010920	1/2" X 1.1/2" BOLT	09
13	0503010019	1/2" SPRING WASHER	15
14	0503010060	1/2" NUT	15
15	0501054194	CARRYING WHEEL HUB TRANSMISSION	01
16	0503060141	WHEEL AND TIRE ASSY	01
16A	0503011101	CANVAS TIRE	01
16B	0503010894	0.2"X0.6"X4.6"X6F0.6"X6" WHEEL	01
16C	0503010694	INNER TIRE	01
17	0501054582	CARRYING WHEELS SPRING GUIDE	01
17A	0511063552	SPRING GUIDE	01
17B	0503031379	COMPRESSION SPRING	01
17C	0502020635	SPRING UPPER SUPPORT	01
17D	0521011158	SPRING LOCKNUT	01
17E	0521011157	REGULATOR SPINDLE	01
17F	0502040725	SPRING BUSHING LOCK GUIDE	01
17G	0503010834	1/2 X 1 BOLT	01
17H	0521010549	COUPLING SHAFT	01
17I	0503010257	1/8" X 1" COTTERPIN	01




TRANSMISSION WHEELS ASSY

0909090971

Item	Code	Description	See page
18	0503013056	50-1 CHAIN X 138 LINK + REDUCTION	01
19	0503010395	1/2" X 1-1/4" BOLT	02
20	0503010002	1800 GREASE FITTING	02
21	0531015270	CARRYNG-WHEELS AXLE TRANSMISSION	02
22	0511063582	17Z GEAR WITH SLEEVE	02
23	0511063636	36Z GEAR WHIT SLEEVE	01
24	0511063678	DRIVER TRANSMISSION	01
25	0503010010	1/4" X 2.1/2" COTTERPIN	02
26	0501110025	AGRICULTURAL BEARING	04
27	0503010140	1/8" X 3/4" COTTERPIN	04
28	0511015961	LOCK BUSHING	02
29	0503010523	1/4" X 2" COTTERPIN	04
30	0503013058	40-1 X 119 CHAIN LINK + MENDING	01
31	0503013059	40-1 X 197 CHAIN LINK-MENDING	01
32	0503013060	50-1 CHAIN X 47 LINK + MENDING	02
33	0503013061	50-1 CHAIN X 64 LINK + REDUCTION	02
34	0501054095	BERARING TRANSMISSION	01
34A	0511063679	BEARING TRANSMISSION	02
34B	0503011410	ROLLER BEARING	14
34C	0531015304	TRANSMISSION AXLE	02
34D	0511063630	17Z GEAR	03
34E	0503010577	3/16" X 1-1/4" COTTERPIN	04
34F	0503010421	5/16" X 1-1/2" BOLT	04
34G	0503010179	5/16" ZN SPRING WASHER	04
34H	0503010337	5/16" NUT	04
35	0503011718	50-1 X 67 CHAIN LINK + MENDING	04
36	0501054096	BEARING SEED TRANSMISSION	01
36A	0511063632	30Z GEAR	01
37	0503013057	50-1 CHAIN X 58 LINK + REDUCTION	01
38	0531015056	REAR CHAIN TENSIONER BODY	02
39	0501054092	CHAIN TENSIONER	05
39A	0531012640	AXLE CHAIN TIGHTENER	05
39B	0511063645	CHAIN TENSIONER BODY	05
39C	0503012882	BEARING	08
39D	0503011945	503050 CLAMPING RING (FOR AXLE)	08
39E	0531012678	4.5" X 0.9" X 0.2" SLEEVE	05
39F	0511017302	FLAT WASHER	05
40	0501054202	CHAIN TENSIONER CENTRAL	02
40A	0511063738	CNETER CHAIN TENSIONER	02
40B	0511063645	CHAIN TENSIONER BODY	02
41	0501054094	CHAIN TENSIONER SEED ASSY	01
41A	0511063854	FINE SPEED CHAIN TENSIONER	01
41B	0511063655	16Z CHAIN TENSIONER BODY	01
42	0511063706	RIGHT CHAIN TENSIONER SUPPORT	01
43	0511063705	CHAIN TENSIONER SUPPORT LEFT	01

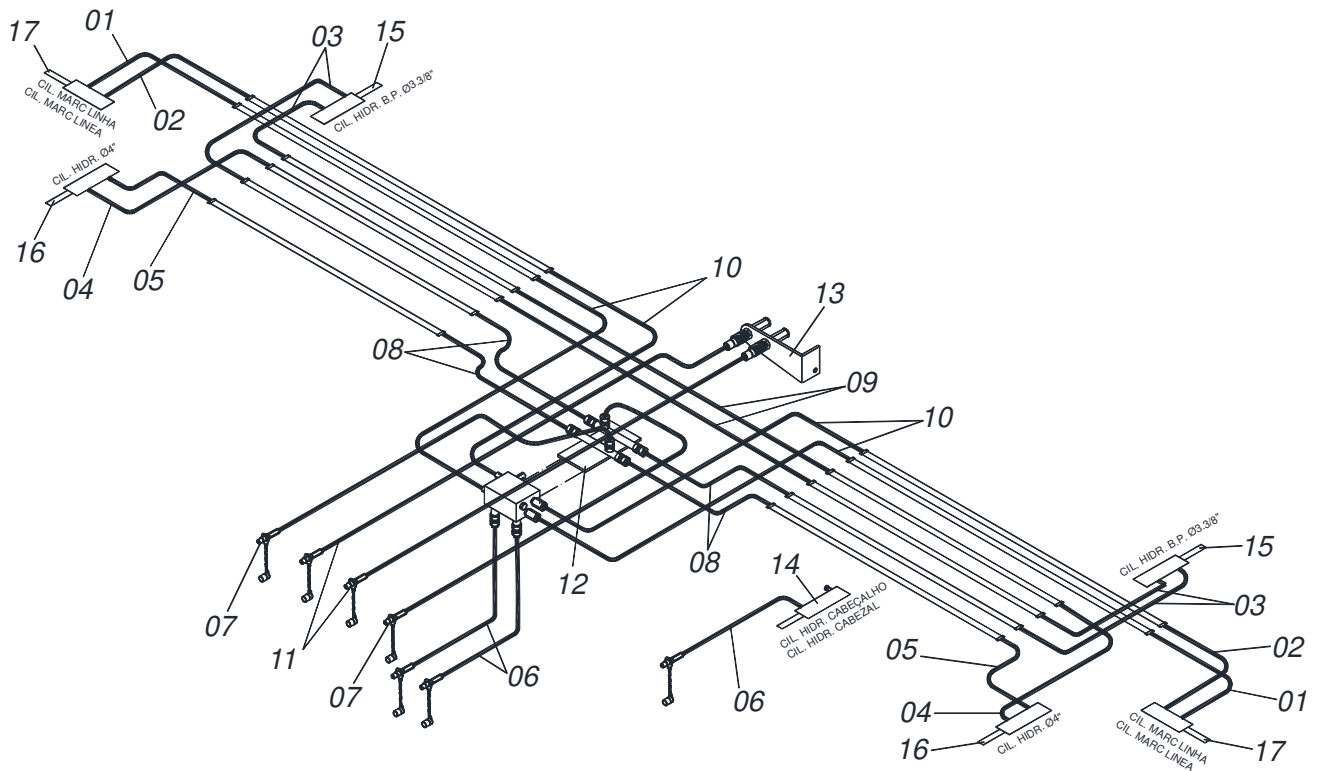

Item	Code	Description	See page
01	0501080541	3/8" X 51.18" TR-TC HOSE ASSY	02
02	0501080582	3/8" X 45.28" TR-TR HOSE ASSY	02
03	0501080867	3/8" X 114.17" TR-TR HOSE ASSY	04
04	0501080609	3/8" X 39.37" TR-TR HOSE ASSY	02
05	0501080922	3/8" X 33.46" TR-TC HOSE ASSY	02
06	0501080820	3/8" X 117.17" TC-TM HOSE ASSY	03
07	0501080664	3/8" X 188.98" TC-TM HOSE ASSY	02
08	0501080817	3/8" X 17.72" TR-TC HOSE ASSY	04
09	0501080606	3/8" X 21.65" TR-TR HOSE ASSY	02
10	0501080818	3/8" X 27.56" TR-TC HOSE ASSY	04
11	0501080703	3/8" X 263.78" TR-TC HOSE ASSY	02
12	0511064618	DOUBLE CONNECTION	01
13	0531018876	QUICK COUPLING SUPPORT	01
14	0511040952	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER	01
15	0511043573	1.7" X 3.4" X 8.858" HIDRAULI CYLINDER	02
16	0511043568	21.12" X 4" X 26.57" HIDRAULI CYLINDER	02
17	0511040972	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER	02

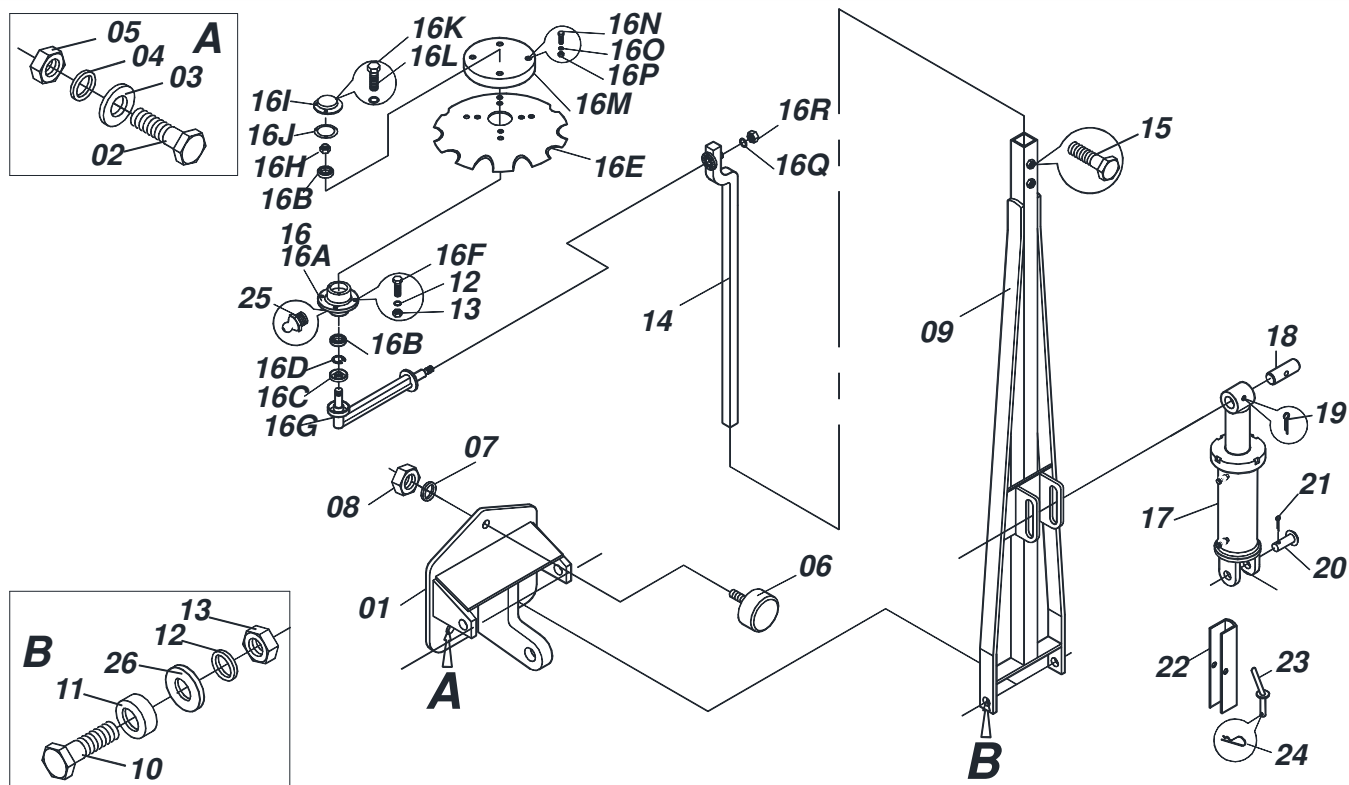


Item	Code	Description	See page
01	0511065449	ROW MARKER ARM SUPPORT	02
02	0501010098	3/4" UNC BOLT	08
03	0501012140	FLAT WASHER	08
04	0503010023	3/4" SPRING WASHER	08
05	0503010014	3/4" NUT	08
06	0503011070	BEATER	02
07	0503010019	1/2" SPRING WASHER	02
08	0503010060	1/2" NUT	02
09	0511063760	ROW MARKER ARM	02
10	0503011067	5/8" X 2-1/2" BOLT	04
11	0521010479	SLEEVE ARTICULATION	04
12	0503010027	5/8" SPRING WASHER	04
13	0503010013	5/8" NUT	04
14	0501066949	1235 TURNBUCKLE	02
15	0503010962	5/8" X 1-1/4" BOLT	04
16	0501053840	ROW MARKER DISC	02
16A	0502012077	MARKER ARM DISC HUB	01
16B	0503010598	30204 BALL BEARING	02
16C	0503011112	SEAL 02376-BRG	01
16D	0503011105	SEAL RING	01
16E	0602023094	DR16X3 C36AFPAFR73+4FR+4FR D474 10R	01
16F	0503010358	5/16" X 5/8" BOLT	04
16G	0511063375	ROW MARKER DISC AXLE	01
16H	0503010878	5/8" SELF ALIGNING NUT	01
16I	0521019178	COVER DEPTH	01
16J	0503030757	2.9" X 2" X 0.02" JOINT	01
16K	0503010298	1/4" X 1/2" BOLT	03
16L	0503011441	SPRING WASHER	03
16M	0501069226	ROW MARKER ROD STOP	01
16N	0501011778	3/8" X 2-1/2" BOLT	04
16O	0503010025	3/8" SPRING WASHER	04



HIDRAULIC ROW MARKER ASSY

0909091258

Item	Code	Description	See page
16P	0503010026	3/8" NUT	04
16Q	0503010023	3/4" SPRING WASHER	01
16R	0503010014	3/4" NUT	01
17	0511040972	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER	02
18	0511015779	1" X 4.2" AXLE	02
19	0503010523	1/4" X 2" COTTERPIN	02
20	0521010574	C0.9" X 3.3" COUPLING SHAFT	02
21	0503010571	1/4" X 1.1/2 COTTERPIN	02
22	0511017592	11.8" X 1.6" TRANSPORT LOCK	02
23	0501068994	0.3" X 3.1" LOCK PIN	02
24	0503030168	HAIR PIN	02
25	0503010002	1800 GREASE FITTING	01
26	0501012140	FLAT WASHER	08

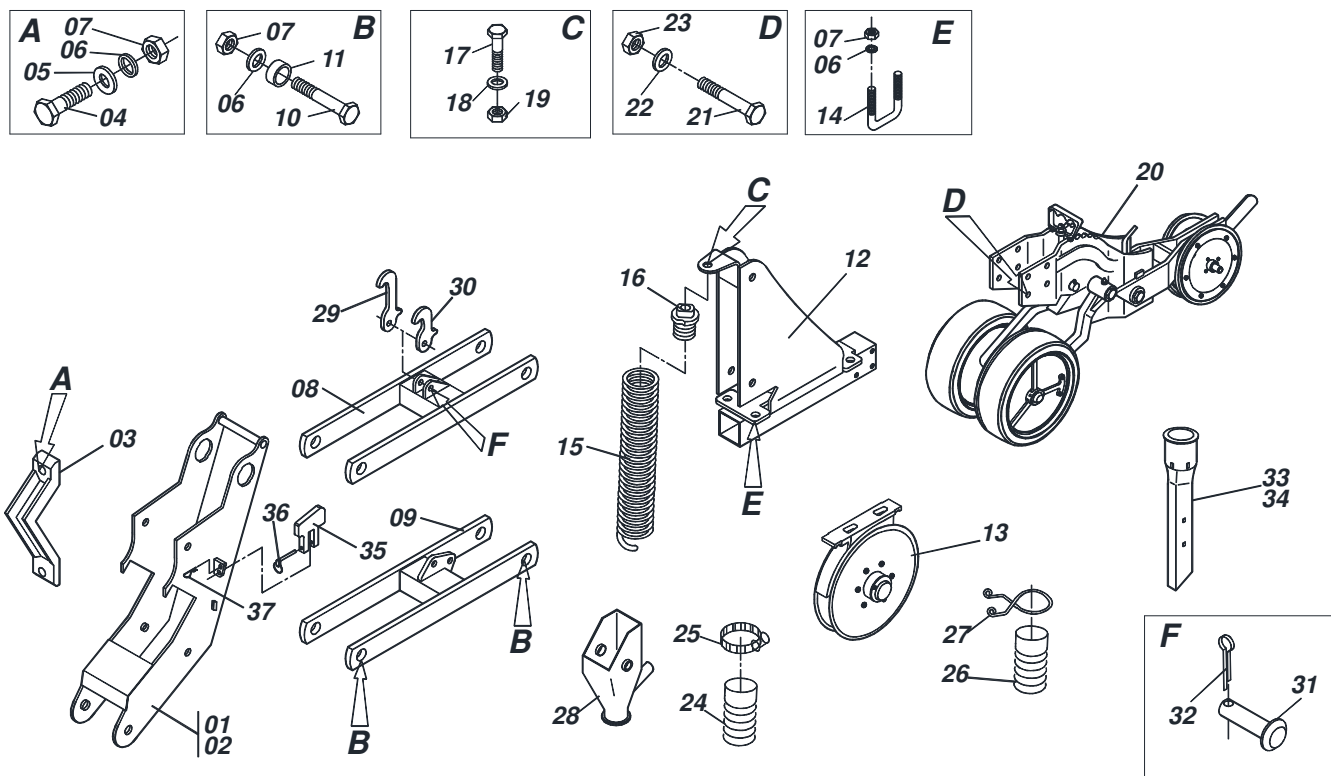


Item	Code	Description	See page
01	0511063696	FRONT ROW SUPPORT	01
02	0511063695	REAR ROW SUPPORT	01
03	0502010175	HITCH CLAMP	01
04	0501010163	5/8" X 4-1/2" BOLT	02
05	0501012140	FLAT WASHER	10
06	0503010027	5/8" SPRING WASHER	14
07	0503010013	5/8" NUT	14
08	0511063702	UPPER ROW PARALELOGRAMO	01
09	0511063703	ROW LOWER PARALELOGRAMO	01
10	0503012410	5/8" X 7.1/2" BOLT	04
11	0521010482	ARTICULAT SLEEVE	08
12	0511063697	ROW FRAME	01
13	0501053997	SEED DOUBLE-DISC OPENER ASSY	01
14	0531013805	5/8" UNC X 105 X 78 FASTENER	02
15	0503031389	2.11" X 8.83 X 0.39"TRACTION SPRING	01
16	0502011031	SPRING UPPER HITCH	01
17	0503013329	1/2" UNC X 4-3/4" BOLT	01
18	0511017302	FLAT WASHER	01
19	0503010060	1/2" NUT	01
20	0501054156	SEED FERTILIZER ROW REAR ASSY	01
21	0503010718	3/8" X 3-1/2" BOLT	04
22	0503010025	3/8" SPRING WASHER	04
23	0503010026	3/8" NUT	04
24	0503030616	17" X 17" X 15.7"HOSE	01
25	0503011342	3/4" TO 1 CLAMP	02
26	0503031145	2" X 2" X 20" HOSE	02
27	0503031076	2" HOSE CLAMP	04
28	0503031760	SOCKET SEED	01
29	0531015039	LOCK LARGE SEED ROW SUPPORT	01
30	0531015040	LOCK SMALLER SEED ROW SUPPORT	01
31	0531015268	0.44" X 1.81" COUPLING SHAFT	01



SDT 5000 2420
SEED FERTIL ROW ASSY

Page 0
0909091305

Item	Code	Description	See page
32	0503010140	1/8" X 3/4" COTTERPIN	01
33	0503030520	SEED SOCKET	01
34	0503030483	FERTILIZER SOCKET	01
35	0541016903	PARALELOGRAMO LOCK STOP	01
36	0503010683	0,2" X 1,2" SPRING PIN	01
37	0503030012	HAIR PIN	01

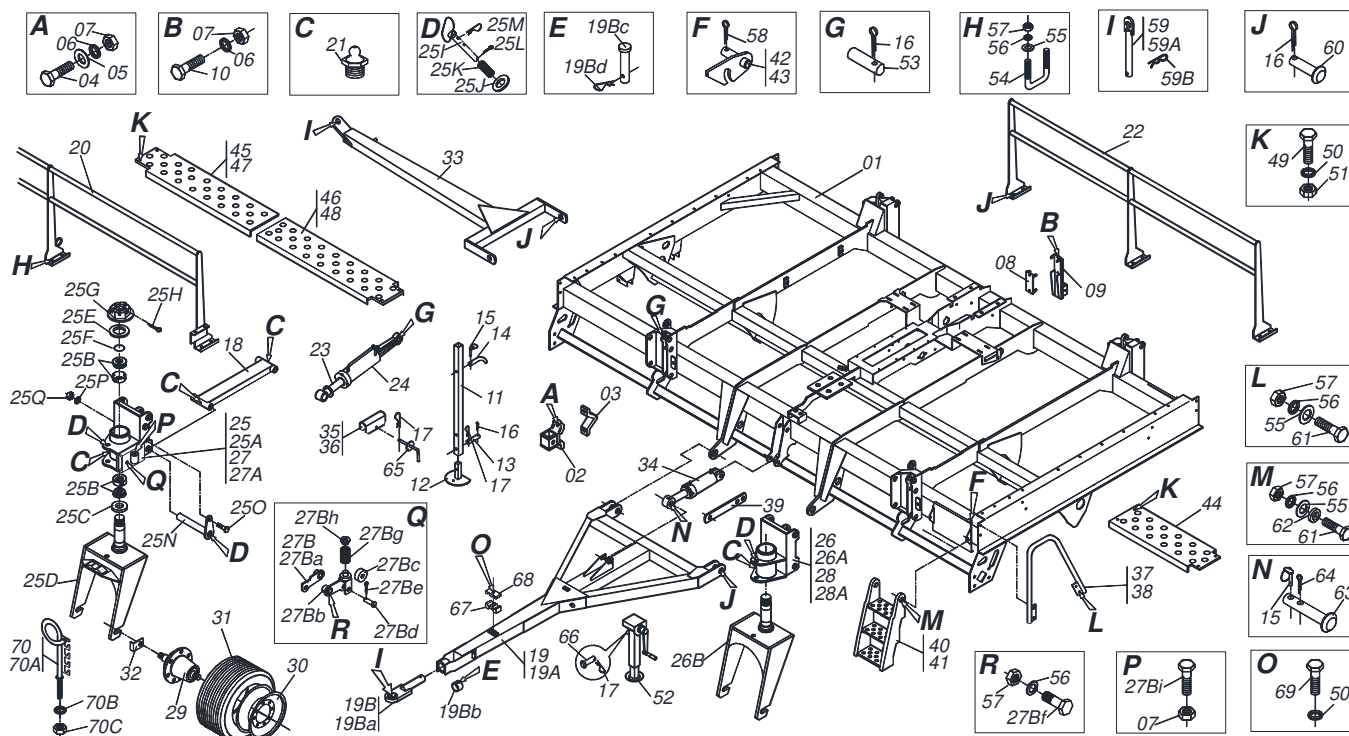


Item	Code	Description	See page
01	0511066645	FRAME SDT 5000 S-0405	01
02	0502011530	SUPPORT	02
03	0502010175	HITCH CLAMP	26
04	0501011543	5/8" X 4" BOLT	04
05	0501012140	FLAT WASHER	04
06	0503010027	5/8" SPRING WASHER	08
07	0503010013	5/8" NUT	10
08	0511063624	PLOUGH SUPPORT	22
09	0531015160	PLOUGH FIXER	02
10	0503010795	5/8" X 7" BOLT	04
11	0531015274	SQUARE TUBE	04
12	0501069636	PLOUGH SUPPORT	04
13	0521010790	COUPLING SHAFT	04
14	0501011075	PIN	04
15	0503030085	LOCK PIN	07
16	0503010010	1/4" X 2.1/2" COTTERPIN	12
17	0503030168	HAIR PIN	12
18	0501069217	CARRYNG-WHEELS PIVOT ARM	08
19	0511042106	DRAWBAR	01
19A	0511063576	DRAWBAR	01
19B	0501053494	TRACTOR HITCH ASSY	01
19Ba	0511062245	TRACTOR HITCH ASSY	01
19Bb	0521010681	BUSHING COUPLING BODY	01
19Bc	0521010639	COUPLING SHAFT	01
19Bd	0503031035	HAIR PIN	01
20	0511063606	FRONT HANDRAIL	01
21	0503010002	1800 GREASE FITTING	24
22	0511063753	REAR HANDRAIL	01
23	0511043573	1.7" X 3.4" X 8.858" HIDRAULI CYLINDER	02
24	0511043568	21.12" X 4" X 26.57" HIDRAULI CYLINDER	02
25	0501056317	RH CARRYING-WHEELS PIVOT	01



Item	Code	Description	See page
25A	0511066631	RH CARRYING-WHEELS PIVOT	01
25B	0503010059	33287/33462 ROLLER BEARING	08
25C	0503010050	SEAL 00085-B	04
25D	0511066634	LH CARRYING-WHEELS FORK	02
25E	0541016926	HUB COVER	04
25F	0503012314	2-248 1G05195 O'RING	04
25G	0502040080	2.1/2" SLOTTED NUT	04
25H	0503010073	3/8 X 3-1/2 COTTERPIN	04
25I	0511066628	CARRYING WHEELS LOCK	04
25J	0511015346	FLAT WASHER	04
25K	0503030978	COMPRES SPRING	04
25L	0503010018	5/32 X 1-1/2 COTTERPIN	04
25M	0503030012	HAIR PIN	04
25N	0511066603	38,10 X 300 COUPLING SHAFT	08
25O	0503010805	1/2" X 2" BOLT	08
25P	0503010019	1/2" SPRING WASHER	08
25Q	0503010028	1/2" NUT	08
26	0501056316	CARRYING-WHEELS PIVOT	01
26A	0511066632	RH CARRYING-WHEELS PIVOT	01
26B	0511066633	CARRYING-WHEELS FORK FRONT REAR	02
27	0501056315	RH REAR CARRYING-WHEELS PIVOT	01
27A	0511066630	RH REAR CARRYING-WHEELS PIVOT	01
27B	0501046478	LOCK CARRYNG-WHEELS ASSAY	01
27Ba	0501067328	LOK PIVOT	01
27Bb	0501067329	LOK PIVOT W/ GUIDE	01
27Bc	0511016229	PULLEY	01
27Bd	0511016227	COUPLING SHAFT	01
27Be	0503010071	3/16" X 1" COTTERPIN	01
27Bf	0511016244	BOLT	02
27Bg	0503031006	COMPRESSION SPRING	01
27Bh	0511016228	SPRING SUPPORT	01
27Bi	0501019274	5/8" X 2" BOLT	01
28	0501056314	LH REAR CARRYING-WHEELS PIVOT	01
28A	0511066629	LH REAR CARRYING-WHEELS PIVOT	01
29	0501055280	STUB SHAFT & HUB ASSY	04
30	0511065454	0.5" X 0.6" WHEEL CENTER	04
31	0503060141	WHEEL AND TIRE ASSY	01
32	0511014788	CARRYING WHEELS AXLE LOCK	08
33	0511063574	TRANSPORT DRAWBAR	01
34	0511040952	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER	01
35	0541016028	TRANSPORT LOCK	02
36	0541016022	TRANSPORT LOCK	02
37	0511063656	FRONT SIDE HANDRAIL	01
38	0511063657	REAR SIDE HANDRAIL	01
39	0531015557	DRAWBAR CYL LOCK	01
40	0511063756	FRONT LADDER	01
41	0511063694	REAR LADDER	01
42	0511063613	STAIR RIGHT LOCK	01
43	0511063614	STAIR LEFT LOCK	01
44	0531015098	FRONT PLATFORM	01
45	0531015096	RIGHT FRONT PLATFORM	01
46	0531015097	LEFT FRONT PLATFORM	01
47	0531015065	RIGHT REAR PLATAFORM	01
48	0531015035	LEFT RAER PLATAFORM	01
49	0503010237	3/8" X 1" BOLT	16
50	0503010025	3/8" SPRING WASHER	20
51	0503010026	3/8" NUT	16
52	0511041259	DRAWBAR JACK ASSY	01
53	0531019368	1.5" X 4.33" AXLE	04



Item	Code	Description	See page
54	0531015063	1/2" X 5.73" X 8.15" FASTENER	06
55	0511017302	FLAT WASHER	18
56	0503010019	1/2" SPRING WASHER	18
57	0503010060	1/2" NUT	18
58	0503010257	1/8" X 1" COTTERPIN	02
59	0501047881	AXIS JOINT ASSY	01
59A	0501068989	COUPLING SHAFT	01
59B	0503031035	HAIR PIN	01
60	0521010574	C0.9" X 3.3" COUPLING SHAFT	02
61	0503010395	1/2" X 1-1/4" BOLT	12
62	0531018627	0.5" X 1" X 0.2" SLEEVE	04
63	0521010586	0.9" X 6.1" COUPLING SHAFT WITH 2 H	03
64	0503010571	1/4" X 1.1/2 COTTERPIN	04
65	0501068994	0.3" X 3.1" LOCK PIN	04
66	0521010549	COUPLING SHAFT	01
67	0502040291	LOWER BODY CLIP	04
68	0502010477	HOSE CLAMP	04
69	0503011268	3/8" X 2-1/2" BOLT	04
70	0501040364	HOSE SUPPORT 3/4X640 ASSY	01
70A	0501060409	HOSE SOPPORT ASSY	01
70B	0503010023	3/4" SPRING WASHER	01
70C	0503010014	3/4" NUT	01

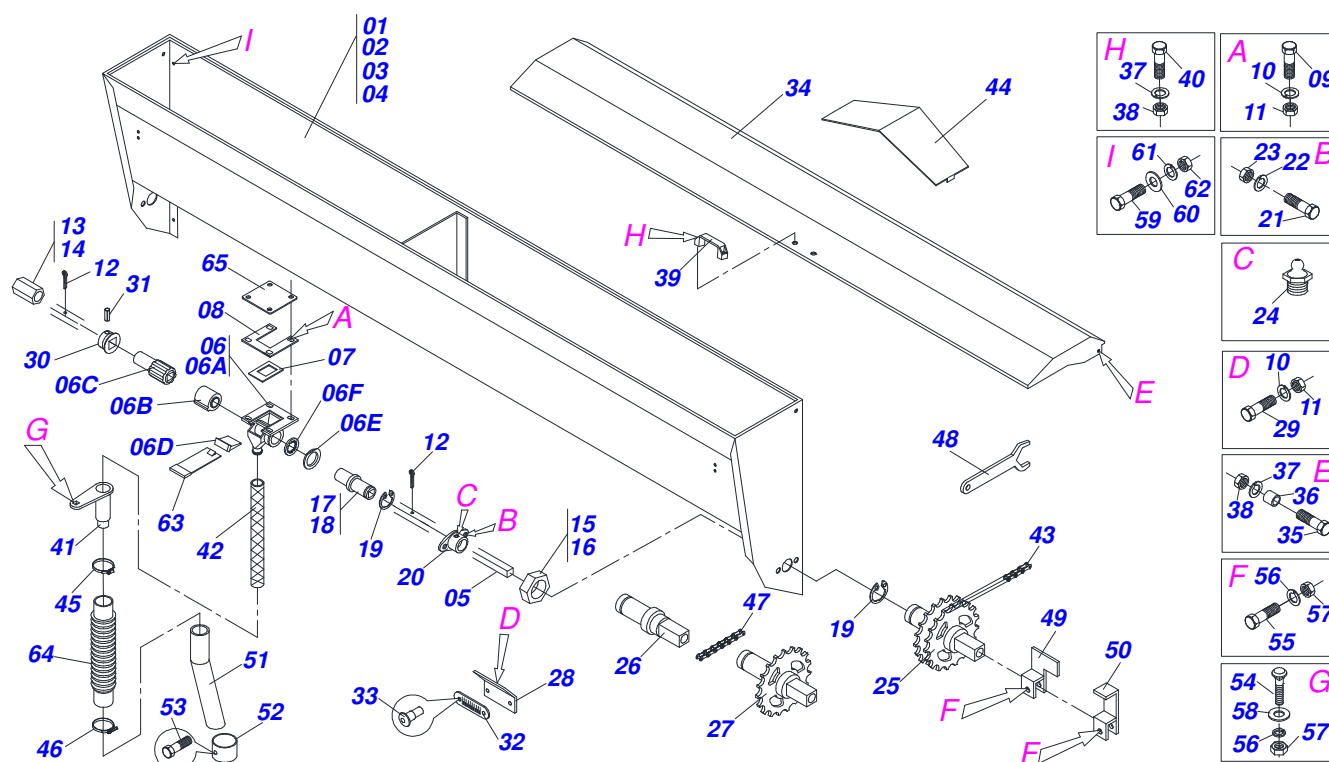


Item	Code	Description	See page
00	0501056015	RIGHT REAR FINE SEED BOX ASSY	01 00
000	0909092984	FINE SEED BOX	
00A	0501056016	LH REAR FINE SEED BOX ASSY	01 00
00B	0501056017	RIGHT FRONT FINE SEED BOX ASSY	01 00
00C	0501056018	LEFT REAR FINE SEED BOX ASSY	00 01
01	0511066416	RIGHT REAR FINE SEED BOX ASSY	01 00
02	0511066418	LH REAR FINE SEED BOX ASSY	00 01
03	0511066414	LEFT REAR FINE SEED BOX ASSY	01 00
04	0511066415	LEFT REAR FINE SEED BOX ASSY	00 01
05	0541015955	AXLE FINE SEED BOX	02 02
06	0503060150	FINE SEED DISTRIBUTOR	15 15
06A	0503030706	PASTURE SEED DISTRIBUTOR BOX	15 15
06B	0503030705	ROTOR GUIDES	15 15
06C	0503030701	ROTOR	15 15
06D	0503030702	DISTRIBUTOR BOX SEAL	15 15
06E	0503030704	MOBILE WASHER SUPPORT SLEEVE	15 15
06F	0503030703	ROTOR WHASHER	15 15
07	0541014816	SEED FLOW SWITCH BASE	15 15
08	0541014818	SEED FLOW SWITCH GUIDE	15 15
09	0503013815	1/4" X 5/8" BOLT	64 64
10	0503010143	1/4" SPRING WASHER	68 68
11	0503010144	1/4" NUT	68 68
12	0503010140	1/8" X 3/4" COTTERPIN	30 30
13	0531015344	RIGHT SEED FINE ADJUSTMENT	02 01
14	0531015345	LEFT SEED FINE ADJUSTMENT	00 01
15	0531015346	RIGHT SEED FINE REGULACION	02 01
16	0531015347	RIGHT SEED FINE REGULACION	00 01
17	0531014838	RIGHT SEED FINE BEARING REEL	02 00
18	0531014837	RIGHT SEED FINE BEARING REEL	00 02
19	0503011335	502024 CLAMPING RING (FOR AXLE)	03 04
20	0502010901	FINE SEED BOX AGRICULTURAL BEARING	04 04



SDT 5000 2420
FINE SEED BOX

Page 0
0909092984

Item	Code	Description	See page
21	0503010237	3/8" X 1" BOLT	08 08
22	0503010025	3/8" SPRING WASHER	08 08
23	0503010026	3/8" NUT	08 08
24	0503010002	1800 GREASE FITTING	04 04
25	0511063686	SEED FINE BOX BEARING INNER DOUBLE	01 00
26	0511063684	SEED FINE BOX BEARING INNER	00 02
27	0511063685	SEED FINE BOX BEARING INNER SIMPLE	01 00
28	0531018937	SEED FINE SUPPORT LADDER	02 02
29	0503010282	1/4" X 3/4" BOLT	04 04
30	0503032076	SMALLER DOSADOR	02 02
31	0503010838	0.1" X 0.8" SPRING PIN	02 02
32	0503030885	SEED DOSADOR SCALE	02 02
33	0503010001	3.2 X 5.5 RIVET	04 04
34	0511066382	SEED BOX COVER	02 02
35	0503010421	5/16" X 1-1/2" BOLT	04 04
36	0521011116	COVER PIVOT BUSHING	04 04
37	0503010179	5/16" ZN SPRING WASHER	08 08
38	0503010337	5/16" NUT	08 08
39	0503011907	PMC 594-S NYLON LUG	02 02
40	0503010363	5/16" X 1" BOLT	04 04
41	0511063921	HOSE SOCKET FINE SEED	15 15
42	0531016760	5/8" X 19.69" HOSE	15 15
43	0503013059	40-1 X 197 CHAIN LINK-MENDING	01 00
44	0531018615	FINE SEED BOX DEFLECTOR	10 10
45	0503010296	CLAMP	15 15
46	0503011342	3/4" TO 1 CLAMP	15 15
47	0503013058	40-1 X 119 CHAIN LINK + MENDING	01 00
48	0531015004	FINE SEED REGULATOR WRENCH	01 01
49	0511066622	SEED FINE FOLLOWER LARGER	01 01
50	0511066617	SEED FINE FOLLOWER SMALLER	01 01
51	0531015026	FINE SPEED SOCKET BODY	15 15
52	0531015091	SLEEVE	15 15
53	0503010461	1/4" X 1" BOLT	15 15
54	0503011953	5/16" X 1" BOLT	15 15
55	0503010371	5/16" X 1" BOLT	02 02
56	0503010179	5/16" ZN SPRING WASHER	17 17
57	0503010337	5/16" NUT	17 17
58	0501010694	8.5 X 18 X 1.5 FLAT WASHER	15 15
59	0503010237	3/8" X 1" BOLT	04 04
60	0501010984	FLAT WASHER	04 04
61	0503010025	3/8" SPRING WASHER	04 04
62	0503010026	3/8" NUT	04 04
63	0503050042	FINE SEED DISTR BOX INTER	15 15
64	0503030616	17" X 17" X 15.7"HOSE	15 15
65	0541015946	SOCKET COVER	01 01

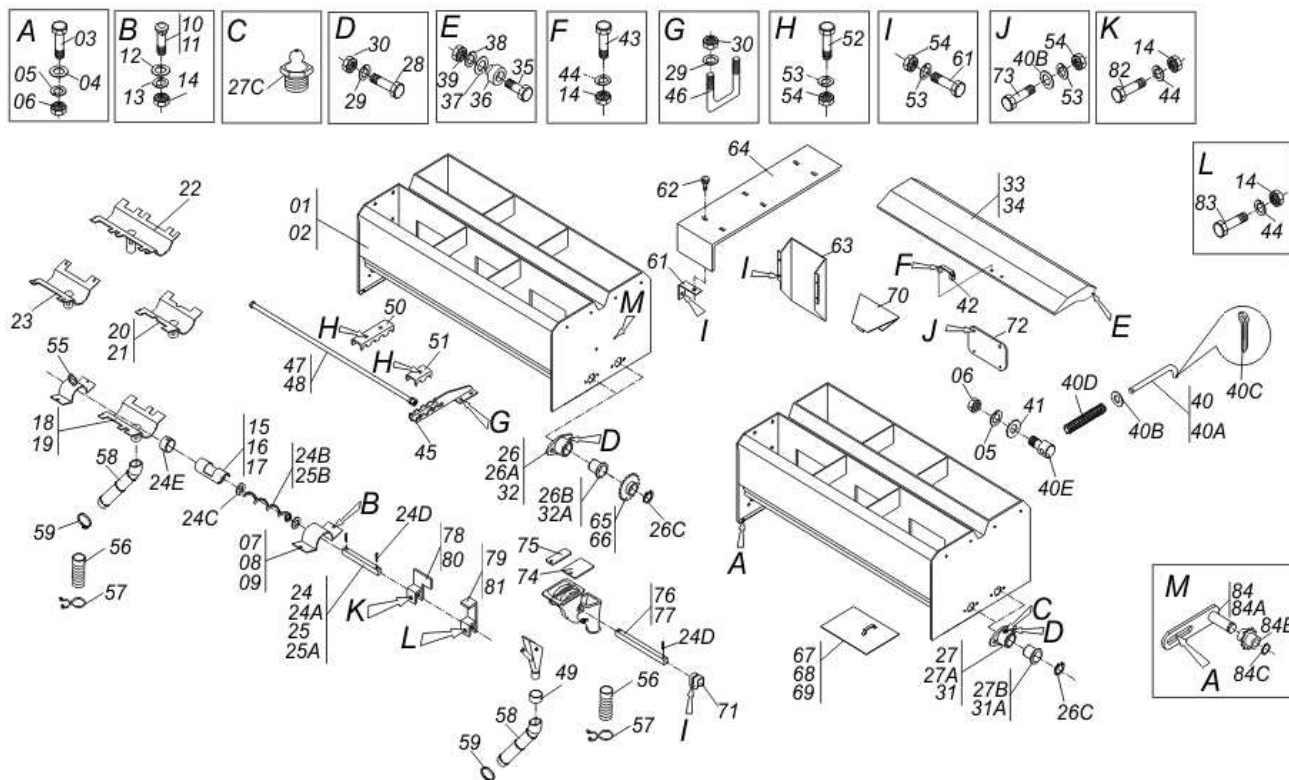

Item	Code	Description	See page
00	0501056373	RIGHT FERTILIZER/SEED HOUSING ASSY	01
00A	0501056374	LH FERTILIZER/SEED HOUSING ASSY	01
01	0511066668	BOX FERTILIZER SEED	01
02	0511066669	LH BOX FERTILIZER SEED	01
03	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	08
04	0501010984	FLAT WASHER	16
05	0503010025	3/8" SPRING WASHER	24
06	0503010026	3/8" NUT	24
07	0531014555	FIXER FERTILIZER CONDUCTOR	02
08	0511019234	3.93 FERTILIZER CONDUCTOR FIXER	22
09	0531014556	FIXER FERTILIZER CONDUCTOR	02
10	0503011953	5/16" X 1" BOLT	08
11	0503011952	5/16" X 3/4" BOLT	88
12	0521011039	FLAT WASHER	96
13	0503011444	SPRING WASHER	96
14	0503010337	5/16" NUT	112
15	0531014550	FERTILIZER TUBE	02
16	0531014549	FERTILIZER TUBE	20
17	0531014551	FERTILIZER TUBE	02
18	0511063519	RIGHT INNER FERTILIZER CONDUCTOR	01
19	0511063520	LEFT INNER FERTILIZER CONDUCTOR	01
20	0511063523	RIGHT FERTILIZER CONDUCTOR	10
21	0511063522	LEFT FERTILIZER CONDUCTOR	10
22	0511063521	RIGHT FERTILIZER OUTER CONDUCTOR	01
23	0511063524	LEFT OUTER CONDUCTOR FERTILIZER	01
24	0501054008	RIGHT FERTIL SYSTEM AXLE	01
24A	0531014365	RIGHT FERTILIZER BOX AXLE	01
24B	0503031734	LEFT HELICAL SPRING	12
24C	0511019256	LOCK WASHER	13
24D	0503010577	3/16" X 1-1/4" COTTERPIN	17
24E	0502012075	FERTILIZER SPRING LOCK SLEEVE	01



SEED/FERTILIZER BOX ASSY

0909092985

Item	Code	Description	See page
25	0501054009	LH FERTIL SISTEM AXLE	01
25A	0531015353	LEFT FERTILIZER BOX AXLE	01
25B	0503031733	RIGHT HELICAL SPRING	12
26	0501051798	AGRICULTURAL BEARING ASSY	03
26A	0501110250	BEARING BOX	03
26B	0521011127	AGRICULTURAL BEARING REEL	02
26C	0503010372	501050 CLAMPING RING (FOR AXLE)	04
27	0501054010	OUTER BEARING ASSY	02
27A	0501110359	OUTER BEARING ASSY	03
27B	0502040540	FERTILIZER BOX EXT BEARING REEL	02
27C	0503010002	1800 GREASE FITTING	04
28	0503010237	3/8" X 1" BOLT	16
29	0503010025	3/8" SPRING WASHER	16
30	0503010026	3/8" NUT	16
31	0501056002	OUTER BEARING ASSY	01
31A	0511066383	OUTER BEARING REEL SEED BOX	01
32	0501056003	INNER BEARING SEED BOX	01
32A	0511066384	INNER BEARING REEL SEED BOX	01
33	0511065448	FERTILIZER BOX COVER	02
34	0511065285	FINE SEED BOX CAP	02
35	0503010421	5/16" X 1-1/2" BOLT	08
36	0521011116	COVER PIVOT BUSHING	08
37	0501010694	8.5 X 18 X 1.5 FLAT WASHER	08
38	0503010179	5/16" ZN SPRING WASHER	08
39	0503010337	5/16" NUT	08
40	0501051927	COVER PIVOT SHAFT ASSY	08
40A	0521011120	COVER PIVOT SHAFT	01
40B	0501010694	8.5 X 18 X 1.5 FLAT WASHER	01
40C	0503010140	1/8" X 3/4" COTTERPIN	02
40D	0503031329	COMPRES SPRING	01
40E	0521011117	PIVOT SPRING AXLE	01
41	0501010984	FLAT WASHER	16
42	0503011907	PMC 594-S NYLON LUG	08
43	0503010363	5/16" X 1" BOLT	16
44	0503010179	5/16" ZN SPRING WASHER	16
45	0511063708	SUPPORT TUBE	06
46	0531015396	HOLDER	06
47	0511063670	OIL TUBE	04
48	0511063671	OIL TUBE	08
49	0531018513	SLEEVE NYLON 51 X 41 X 33	04
50	0521011021	OUTER FIXER TUBE LARGER	04
51	0521011019	SMALLER CLAMP	02
52	0503010420	BOLT	10
53	0503010143	1/4" SPRING WASHER	72
54	0503010144	1/4" NUT	72
55	0511064617	FERTILIZER DEFLECTOR	12
56	0503031145	2" X 2" X 20" HOSE	96
57	0503031076	2" HOSE CLAMP	96
58	0503031826	CURVED CONDUCTOR	48
59	0503010246	CLAMP	48
60	0531015049	COVER FIXER L	06
61	0503010461	1/4" X 1" BOLT	14
62	0503030878	LEVER CRANK	06
63	0531015050	CHAIN CAP	01
64	0531015054	BEARING WITH 21Z GEAR INNER	01
65	0511066594	25Z P5/8" GEAR SQUARE HOLE 19,6	01
66	0511066419	25Z P5/8" GEAR SQUARE HOLE 16,5	01
67	0511064870	LH FALSE BOTTON	02
68	0511064869	LH FALSE BOTTON	02



SEED/FERTILIZER BOX ASSY

0909092985

Item	Code	Description	See page
69	0511064868	CENTRAL FALSE BOTTON	04
70	0541016073	SEED BOX DEFLECTOR	22
71	0541015957	AXLE FASTENER 5/8	04
72	0531018949	COVER DIVIDING COVER	12
73	0503010282	1/4" X 3/4" BOLT	48
74	0541015961	DOUBLE COVER SEED BOX	12
75	0541015962	SIMPLE OUTPUT COVER SEED BOX	24
76	0531015355	RIGHT SEED BOX AXLE	01
77	0531015354	LH SEED BOX AXLE	01
78	0511066620	FERTILIZER LARGER FOLLOWER	01
79	0511066619	SMALLER FERTILIZER FOLLOWER	01
80	0511066621	LARGER SEED FOLLOWER	01
81	0511066618	SMALLER SEED FOLLOWER	01
82	0503010365	NUT	02
83	0503010397	5/16" X 1-3/4" BOLT	02
84	0501055873	FINE SPEED CHAIN TENSIONER ASSAY	01
84A	0511066135	FINE SPEED CHAIN TENSIONER	01
84B	0503031805	11Z 1/2" GEAR	01
84C	0503010302	501019 SEAL RING	01



www.marchesan.com.br



Technical Publications | Elaboration and Revision
JOSÉ DOMINGOS GASPARI