

ROW CROP PLANTERS

**COP FLEX SUPREMA P.P - FRAME
3245/4395/4845/5745/6645 - MTH - AFRICA**

Code: 0501091945
Series: S-0417
Revision: 00
Date Revision: MAIO/2021

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111200315	COP FLEX SUP PP 3245/4E900 MTH PP AFR S-0417
0111200308	COP FLEX SUP PP 4395/6E760 MTH PP AFR S-0417
0111200313	COP FLEX SUP PP 4845/6E900 MH MTH PP AFR S-0417
0111200314	COP FLEX SUP PP 5745/8E760 MH MTH PP AFR S-0417
0111200040	COP FLEX SUP PP 6645/12E500 MTH PP AFR S-0417
0111200335	COP FLEX SUP PP 6645/15E450 MTH PP AFR S-0417
0111200311	COP FLEX SUP PP 6645/8E900 MTH PP AFR S-0417

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.



MARCHESAN

INDEX

0909091967	ASSY FRAME	1
0511053436	DRAWBAR ASSY	2
0511053289	ASSY DRAWBAR	3
0511050644	DRAWBAR ASSY	4
0511053085	ASSY FIXER HEADER	5
0511054601	FULL ARTICULATED TRACTOR HITCH	6
0511055096	TRACTOR HITCH	7
0511053179	TRACTOR HITCH AXLE	8
0511058371	HUB AND SPINDLE RIGHT	9
0511058372	HUB AND SPINDLE LEFT	10
0501048672	CHAIN TENSIONER ASSY	11
0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED BOX	12
0511052766	CARRYING WHEEL HUB ASSY	13
0503062158	EEE WHEEL WITH TIRE 700 X 16-10L ASSY	14
0501053522	WHEEL CHAIN TENSIONER	15
0511053375	CURRENT DEVIATION ASSY WHEEL	16
0501058239	CHAIN TENSIONER BEARING	17
0511050439	RIGHT WHEEL ASSY	18
0511050440	WHITH LEFT WHEEL ASSY	19
0501054284	STRETCHER CURRENT TRANSMISSION SIDE	20
0511050443	WHITH RIGHT WHEEL ASSY WITHOUT TRANSMISSION	21
0511050444	WHITH LEFT WHEEL ASSY WITHOUT TRANSMISSION	22
0501110625	BEARING ARTICULATION WHEEL	23
0521051541	SET HIDRAULICO	24
0511053358	VALVE FIXING ASSEMBLY	25
0521051534	HOSE FIXING ASSY	26
0511053593	HYDRAULIC CYLINDER ASSEMBLY	27
0511053607	HOSE KIT	28
0511053385	SET HIDRAULICO	29
0511053383	FIXER ASSEMBLY HOSE HYDRAULIC	30
0511053384	HYDRAULIC CYLINDER ASSEMBLY	31
0511053309	HOSE KIT	32
0511053386	SET HIDRAULICO	33
0511053382	FIXER HYDRAULIC HOSE ASSEMBLY	34
0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	35
0511053373	SET HIDRAULICO	36
0511053350	FIXER HYDRAULIC HOSE ASSEMBLY	37
0511053368	HYDRAULIC CYLINDER ASSEMBLY	38
0511053290	HOSE KIT	39
0511058870	SET HIDRAULICO	40
0511058871	FIXER HYDRAULIC HOSE ASSEMBLY	41
0511053449	HOSE KIT	42
0511050639	RIGHT GEAR BOX ASSY	43
0501058212	SEMI MOUNTED RIGHT CHANGE	44
0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	45
0501056443	BEARING ASSY GEAR BOX	46
0501056271	BEARING CLOSED	47
0501054655	CHAIN TENSIONER ASSY	48
0511050640	LEFT GEAR BOX ASSY	49
0501058213	LH GEAR BOX	50
0511053666	SET BOX FERTILIZER	51
0511054296	ASSEMBLY FERTILIZER BOX RIGHT / LEFT	52
0511053352	SET BOX FERTILIZER	53
0511053455	SET BOX FERTILIZER	54
0511053374	SET BOX FERTILIZER COP F 600 13	55



MARCHESAN

INDEX

 
0511053667	PLATFORM SET	56
0511054297	PLATFORM ASSEMBLY	57
0511053353	PLATFORM SET	58
0511053339	PLATFORM SET	59
0511053453	PLATFORM SET	60
0511053356	ASSY LADDER	61
0511053668	JOINT HANDRAIL SET	62
0511054298	HANDRAIL ASSY	63
0511053388	JOINT HANDRAIL SET	64
0511053376	JOINT HANDRAIL SET	65
0511053454	JOINT HANDRAILSET	66
0511053306	MARKER HIDRAULICO	67
0511053287	MARKER HIDRAULICO	68
0511058449	HYDRAULIC CYLINDER	69
0511052333	ASSY SUPPORT LEFT FIXER CHANGE	70
0501050633	MARKER DISC ASSY LINE	71
0511053904	DISC LINE MARKER	72
0511053594	MOTOR SHAFT ASSEMBLY	73
0511054292	MOTOR SHAFT ASSEMBLY	74
0511053380	MOTOR SHAFT ASSEMBLY	75
0511053341	MOTOR SHAFT ASSEMBLY	76
0511053423	MOTOR SHAFT ASSEMBLY	77
0511047069	SIDE TRANSMISSION DRIVING	78
0511047070	LH SIDE TRANSMISSION DRIVING	79
0511051434	TRANSMISSION DRIVING ASSY	80
0511053605	HEX AXLE ASSEMBLY	81
0511054291	HEX AXLE ASSEMBLY	82
0511053381	HEX AXLE ASSEMBLY	83
0511053361	HEX AXLE ASSEMBLY	84
0511053456	HEX AXLE ASSEMBLY	85
0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	86
0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	87
0511056597	ASSY PORT MANUAL INSTRUCCION	88
0521051538	TURBINE ASSEMBLY	89
0521050261	DISTRIBUTOR AIR CENTER 08 MOUTHS - 19 A 21	90
0511057906	HOSE ASSY	91
0511059406	TURBINE P.P MOUNTED	92
0521050154	TURBINE P.P WITH HOLE	93
0521050976	ASSY TURBINE	94
0511057348	DISTRIBUTOR VACUUM	95
0521051358	TURBINE ASSEMBLY	96
0521050914	DISTRIBUTOR VACUUM SUPPORT	97
0521050016	DISTRIBUTOR AIR RIGHT 06 MOUTHS - 17 E500	98
0521050017	DISTRIBUTOR AIR LEFT 06 MOUTHS - 17 E500	99
0521051362	TURBINE ASSEMBLY	100
0521050262	RIGHT AIR DISTRIBUTOR	101
0521050263	LEFT AIR DISTRIBUTOR	102
0521050913	TURB PP - 6645	103
0511059090	VACUUM 8B LEFT DISTRIBUTOR	104
0521050915	DISTRIBUTOR VACUUM 8B RIGHT	105
0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	106
0511053342	SQUARE AXLE ASSEMBLY (730)	107
0511053434	SQUARE SHAFT SET	108
0501056444	BEARING WITH ROLLING	109
0511050906	DRAWBAR TURNBUCKLE	110

INDEX

0501059320	REAR HEADLIGHT ASSY		111
0909092683	ASSY SEED/FERTILIZER LINE		112
0511057244	RIGTH SHORT SEED ROW FRONT		113
0511057247	LEFT LONG SEED ROW FRONT		114
0511054635	BEARING AXLE BODY		115
0511057159	TRANSMISSION BOX SEED LINE		116
0511050609	BEARING WITH 17Z GEAR ASSY		117
0511055260	SEED ROW CHAIN TENSIONER		118
0521050912	REAR ASSY		119
0521050911	LEFT REAR ASSY		120
0511054827	CLOSE WHEEL STRIPED CENTER		121
0501052908	COMPACTOR WHEEL WITH BEARING		122
0511054830	SUBSET SET		123
0501056769	DEPTH WHEELS REGULATOR ASSY		124
0511059080	LH 15"X15" SEED UNAL DOUB-DISC ASSY		125
0501054167	BOX DDD ASSY DPL 15 RIGHT		126
0501054168	BOX DDD ASSY DPL 15 LEFT		127
0521050910	CONJ PP V-SET2		128
0511053409	FERTILIZER ROW SHORT ASSY		129
0511053410	SEED FERTILIZER LONG ROW		130
0511051818	DISC CUT 18 SEMI MOUNTED		131
0501052139	18 BLADE DISC WITH FLAT PLAN DISC		132
0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL		133
0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL		134
0501052538	DEPTH BAND WITH ARMS		135
0501054482	DEPTH CONTROL LEFT ARM WITH TIRE		136
0501056435	LEFT CONTROL ARM DEPTH WITHOUT WHEEL		137

ASSY FRAME

0909091967

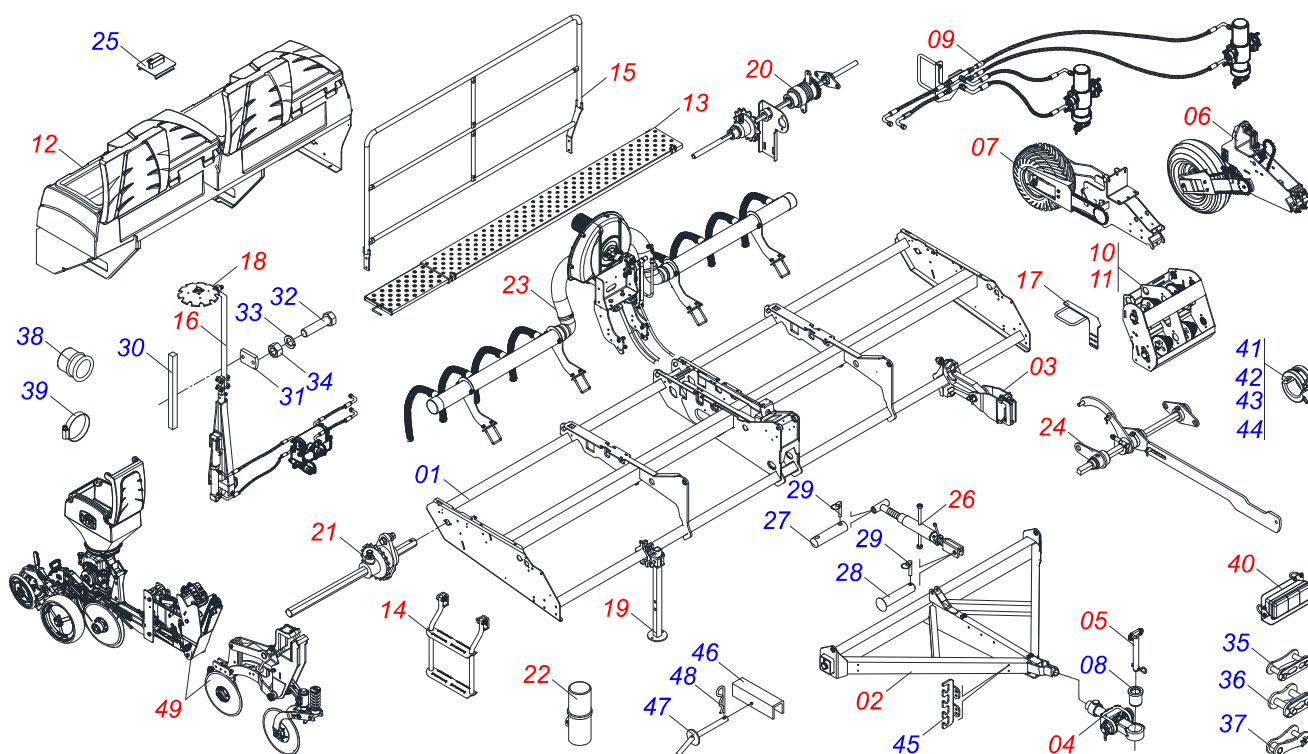

Item	Code	Description	See page	3245	4395	4845	5745	6645
01	0521061931	FRAME		01	00	00	00	00
01.	0521063941	FREME		00	01	00	00	00
01..	0521061841	FRAME		00	00	01	00	00
01...	0521061933	FRAME		00	00	00	01	00
01....	0521061934	FRAME		00	00	00	00	01
02	0511053436	DRAWBAR ASSY	2	01	01	01	00	00
02.	0511053289	ASSY DRAWBAR	3	00	00	00	01	00
02..	0511050644	DRAWBAR ASSY	4	00	00	00	00	01
03	0511053085	ASSY FIXER HEADER	5	00	00	00	00	01
04	0511054601	FULL ARTICULATED TRACTOR HITCH	6	01	01	01	01	00
04.	0511055096	TRACTOR HITCH	7	00	00	00	00	01
05	0511053179	TRACTOR HITCH AXLE	8	01	01	01	01	01
06	0511058371	HUB AND SPINDLE RIGHT	9	01	02	00	00	00
06.	0511058372	HUB AND SPINDLE LEFT	10	01	02	00	00	00
06..	0511050439	RIGHT WHEEL ASSY	18	00	00	02	02	02
06...	0511050440	WHITH LEFT WHEEL ASSY	19	00	00	02	02	02
07	0511050443	WHITH RIGHT WHEEL ASSY WITHOUT TRANSMISSION	21	00	00	00	01	01
07.	0511050444	WHITH LEFT WHEEL ASSY WITHOUT TRANSMISSION	22	00	00	00	01	01
08	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01	01	01	01	01
09	0521051541	SET HIDRAULICO	24	01	00	00	00	00
09.	0511053385	SET HIDRAULICO	29	00	01	00	00	00
09...	0511053386	SET HIDRAULICO	33	00	00	01	00	00
09....	0511053373	SET HIDRAULICO	36	00	00	00	01	00
09.....	0511058870	SET HIDRAULICO	40	00	00	00	00	01
10	0511050639	RIGHT GEAR BOX ASSY	43	01	01	01	01	01
11	0511050640	LEFT GEAR BOX ASSY	49	01	01	01	01	01
12	0511053666	SET BOX FERTILIZER	51	01	00	00	00	00
12.	0511054296	ASSEMBLY FERTILIZER BOX RIGHT / LEFT	52	00	01	00	00	00
12..	0511053352	SET BOX FERTILIZER	53	00	00	01	00	00
12...	0511053374	SET BOX FERTILIZER COP F 600 13	55	00	00	00	01	00

ASSY FRAME

0909091967

Item	Code	Description	See page	3245	4395	4845	5745	6645
12....	0511053455	SET BOX FERTILIZER	54	00	00	00	00	01
13	0511053667	PLATFORM SET	56	01	00	00	00	00
13.	0511054297	PLATFORM ASSEMBLY	57	00	01	00	00	00
13..	0511053353	PLATFORM SET	58	00	00	01	00	01
13...	0511053339	PLATFORM SET	59	00	00	00	01	00
13....	0511053453	PLATFORM SET	60	00	00	00	00	01
14	0511053356	ASSY LADDER	61	02	02	02	02	02
15	0511053668	JOINT HANDRAIL SET	62	01	00	00	00	00
15.	0511054298	HANDRAIL ASSY	63	00	01	00	00	00
15..	0511053388	JOINT HANDRAIL SET	64	00	00	01	00	00
15...	0511053376	JOINT HANDRAIL SET	65	00	00	00	01	00
15....	0511053454	JOINT HANDRAILSET	66	00	00	00	00	01
16	0511053306	MARKER HIDRAULICO	67	00	00	01	00	00
16.	0511053287	MARKER HIDRAULICO	68	00	00	00	01	00
17	0511052333	ASSY SUPPORT LEFT FIXER CHANGE	70	01	01	01	01	01
18	0501050633	MARKER DISC ASSY LINE	71	00	00	02	02	00
19	0511054971	RESTING ASSEMBLY		02	02	02	02	02
20	0511053594	MOTOR SHAFT ASSEMBLY	73	01	00	00	00	00
20.	0511054292	MOTOR SHAFT ASSEMBLY	74	00	01	00	00	00
20..	0511053380	MOTOR SHAFT ASSEMBLY	75	00	00	01	00	00
20...	0511053341	MOTOR SHAFT ASSEMBLY	76	00	00	00	01	00
20....	0511053423	MOTOR SHAFT ASSEMBLY	77	00	00	00	00	01
21	0511053605	HEX AXLE ASSEMBLY	81	01	00	00	00	00
21.	0511054291	HEX AXLE ASSEMBLY	82	00	01	00	00	00
21..	0511053381	HEX AXLE ASSEMBLY	83	00	00	01	00	00
21...	0511053361	HEX AXLE ASSEMBLY	84	00	00	00	01	00
21....	0511053456	HEX AXLE ASSEMBLY	85	00	00	00	00	01
22	0511056597	ASSY PORT MANUAL INSTRUCCION	88	01	01	01	01	01
23	0521051538	TURBINE ASSEMBLY	89	01	00	00	00	00
23.	0521050976	ASSY TURBINE	94	00	01	00	00	00
23..	0521051358	TURBINE ASSEMBLY	96	00	00	01	00	00
23...	0521051362	TURBINE ASSEMBLY	100	00	00	00	01	00
23....	0521050913	TURB PP - 6645	103	00	00	00	00	01
24	0511053342	SQUARE AXLE ASSEMBLY (730)	107	00	01	00	01	00
24.	0511053434	SQUARE SHAFT SET	108	01	00	01	00	01
25	0503032624	SILO FERTILIZER GUTTER		03	06	06	06	07
26	0511050906	DRAWBAR TURNBUCKLE	110	01	01	01	01	01
27	0521018532	1.4" X 12" COUPLING SHAFT		01	01	01	01	01
28	0521010578	COUPLING SHAFT		01	01	01	01	01
29	0503030085	LOCK PIN		02	02	02	02	02
30	0521013164	EXTENSOR		00	00	02	02	00
31	0501011310	FIXER LOCK		00	00	02	02	00
32	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		00	00	04	04	00
33	0503010019	1/2" SPRING WASHER		00	00	04	04	00
34	0503010060	1/2" NUT		00	00	04	04	00
35	0503011750	AMENDMENT WITH LOCK		06	06	06	06	06
36	0503011751	REDUCTION		06	06	06	06	06
37	0503010780	N-2050 AMENDMENT		06	06	06	06	06
38	0503031436	AIR DITRIBUTOR PUMP		04	04	04	04	04
39	0503010246	CLAMP		08	08	08	08	08
40	0501059320	REAR HEADLIGHT ASSY	111	01	01	01	01	01
41	0501047895	ROD STOP		06	06	06	06	06
42	0501047885	ROD STOP		06	06	06	06	06
43	0501047886	ROD STOP		06	06	06	06	06
44	0501047887	ROD STOP		06	06	06	06	06
45	0541011767	HOSE FIXATION		01	01	01	01	01
46	0561019087	DRAWBAR TRANSPORT LOCK		01	01	01	01	01
47	0501068994	0.3" X 3.1"LOCK PIN		01	01	01	01	01
48	0503030168	HAIR PIN		01	01	01	01	01




ASSY FRAME

0909091967

Item	Code	Description	See page	3245	4395	4845	5745	6645
49	0909092683	ASSY SEED/FERTILIZER LINE	112	01	01	01	01	01

DRAWBAR ASSY

 
0511053436

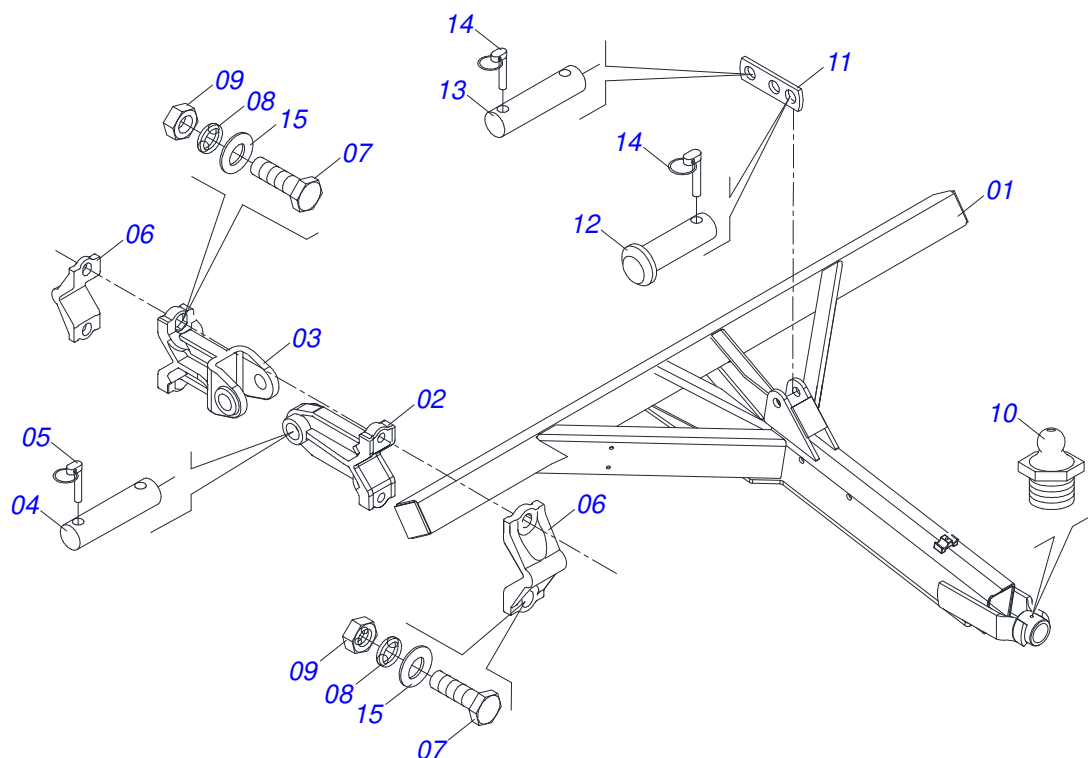

Item	Code	Description	See page	QT
01	0511064808	DRAWBAR		01
02	0502012328	DRAWBAR SUPPORT FRONT FIXATION		02
03	0502012329	DRAWBAR FIXATION REAR SUPPORT		02
04	0561014393	COUPLING SHAFT		02
05	0503030119	LOCK PIN		02
06	0502012330	SUPPORT FIXER PIVOT		04
07	0503011084	3/4" X 5" BOLT		08
08	0503010023	3/4" SPRING WASHER		04
09	0503010014	3/4" NUT		04
10	0503010002	1800 GREASE FITTING		01
11	0561019087	DRAWBAR TRANSPORT LOCK		01
12	0521018532	1.4" X 12" COUPLING SHAFT		01
13	0521010578	COUPLING SHAFT		01
14	0503030085	LOCK PIN		03
15	0501010322	FLAT WASHER		04

ASSY DRAWBAR

 
0511053289

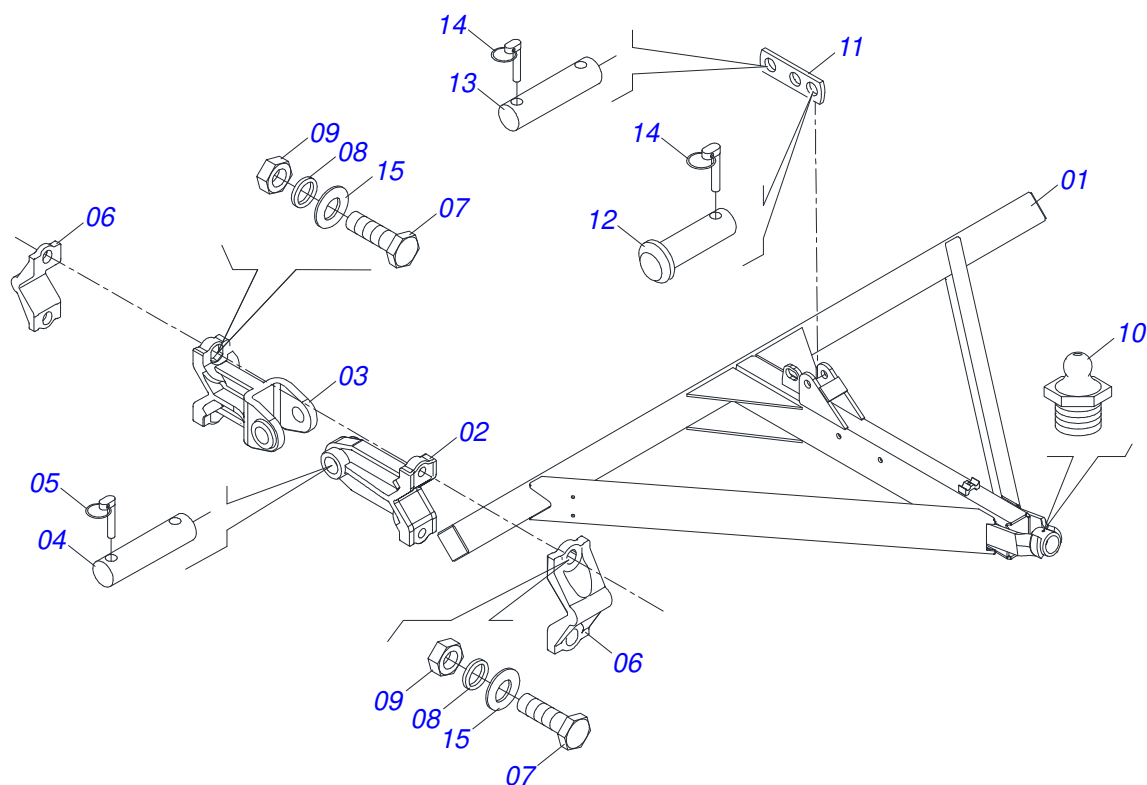

Item	Code	Description	See page	13 L
01	0511062824	DRAWBAR		00
02	0502012328	DRAWBAR SUPPORT FRONT FIXATION		04
03	0502012329	DRAWBAR FIXATION REAR SUPPORT		04
04	0561014393	COUPLING SHAFT		04
05	0503030119	LOCK PIN		04
06	0502012330	SUPPORT FIXER PIVOT		08
07	0503011084	3/4" X 5" BOLT		16
08	0503010023	3/4" SPRING WASHER		08
09	0503010014	3/4" NUT		08
10	0503010002	1800 GREASE FITTING		01
11	0561019087	DRAWBAR TRANSPORT LOCK		01
12	0521018532	1.4" X 12" COUPLING SHAFT		01
13	0521010578	COUPLING SHAFT		01
14	0503030085	LOCK PIN		03
15	0501010322	FLAT WASHER		08

DRAWBAR ASSY

 
0511050644

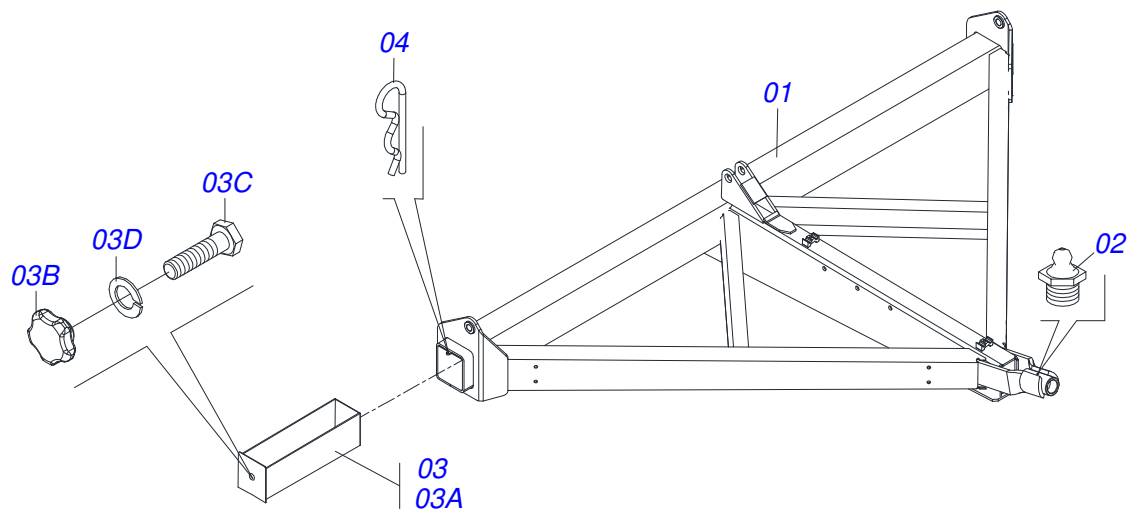


Item	Code	Description	See page	QT
01	0521062074	DRAWBAR		01
02	0503010002	1800 GREASE FITTING		01
03	0511043137	TOOLS BOX ASSY		02
03A	0511065471	BOX OF TOOLS		01
03B	0503010293	BAQUELITE MANIPULACION		01
03C	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
03D	0503011443	3/8" SPRING WASHER		01
04	0503030012	HAIR PIN		02

ASSY FIXER HEADER

 0511053085

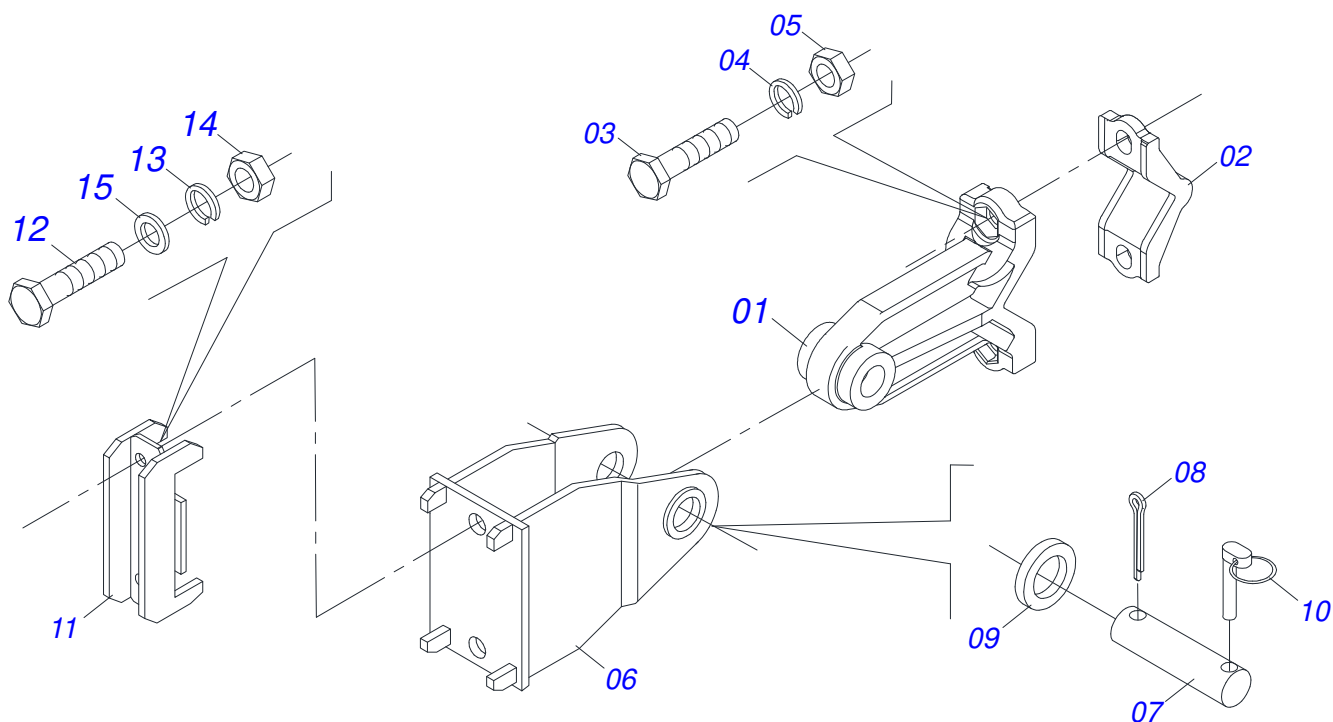


Item	Code	Description	See page	15
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	04	
02	0502012330	SUPPORT FIXER PIVOT	04	
03	0503011084	3/4" X 5" BOLT	08	
04	0503010023	3/4" SPRING WASHER	08	
05	0503010014	3/4" NUT	08	
06	0511065418	DRAWBAR SUPPORT FRONT FIXATION	04	
07	0561014393	COUPLING SHAFT	04	
08	0503010523	1/4" X 2" COTTERPIN	04	
09	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN	08	
10	0503030119	LOCK PIN	04	
11	0511065419	DRAWBAR FIXER CLAMP	04	
12	0521010066	3/4" X 8.12" BOLT	08	
13	0503010023	3/4" SPRING WASHER	08	
14	0503010014	3/4" NUT	08	
15	0501010322	FLAT WASHER	08	

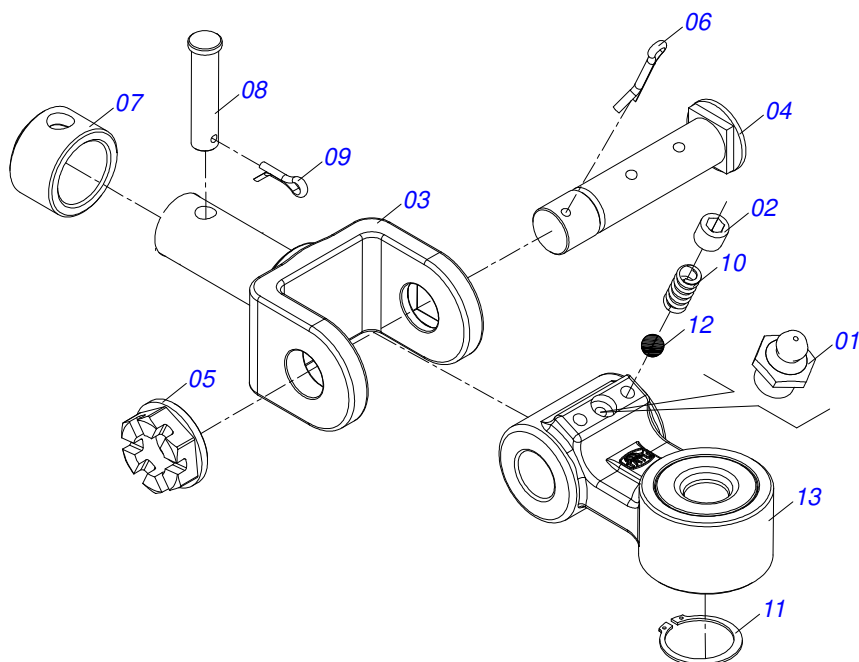 


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0571012612	PIVOT SHAFT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2 COTTERPIN		01
10	0503033731	COMPRESSION SPRING LEFT		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

TRACTOR HITCH

 0511055096

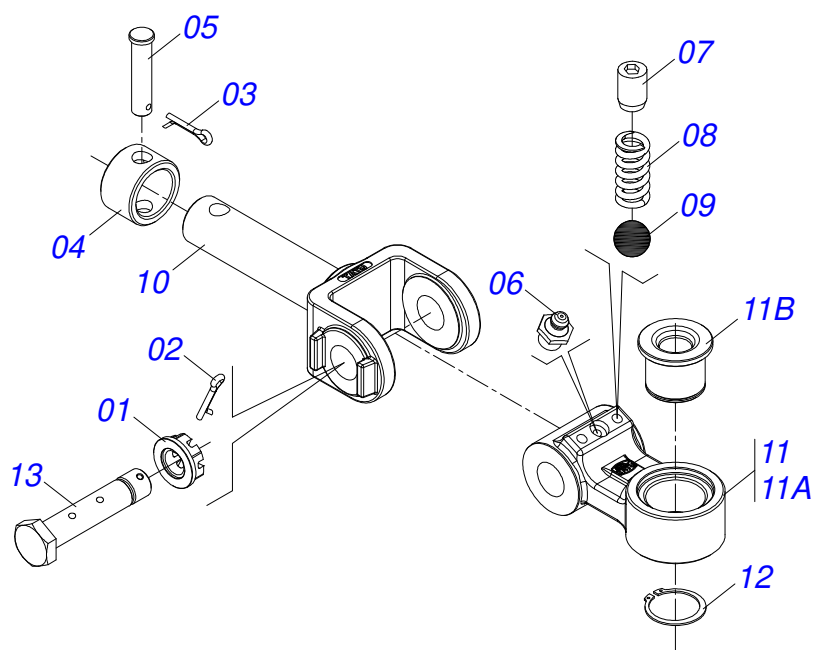


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	COMPRESSION SPRING LEFT		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

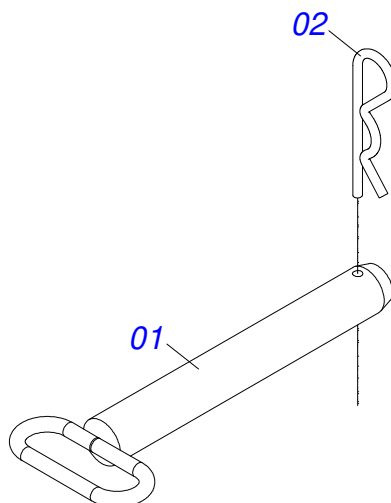 

Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HAIR PIN		01

HUB AND SPINDLE RIGHT

 0511058371

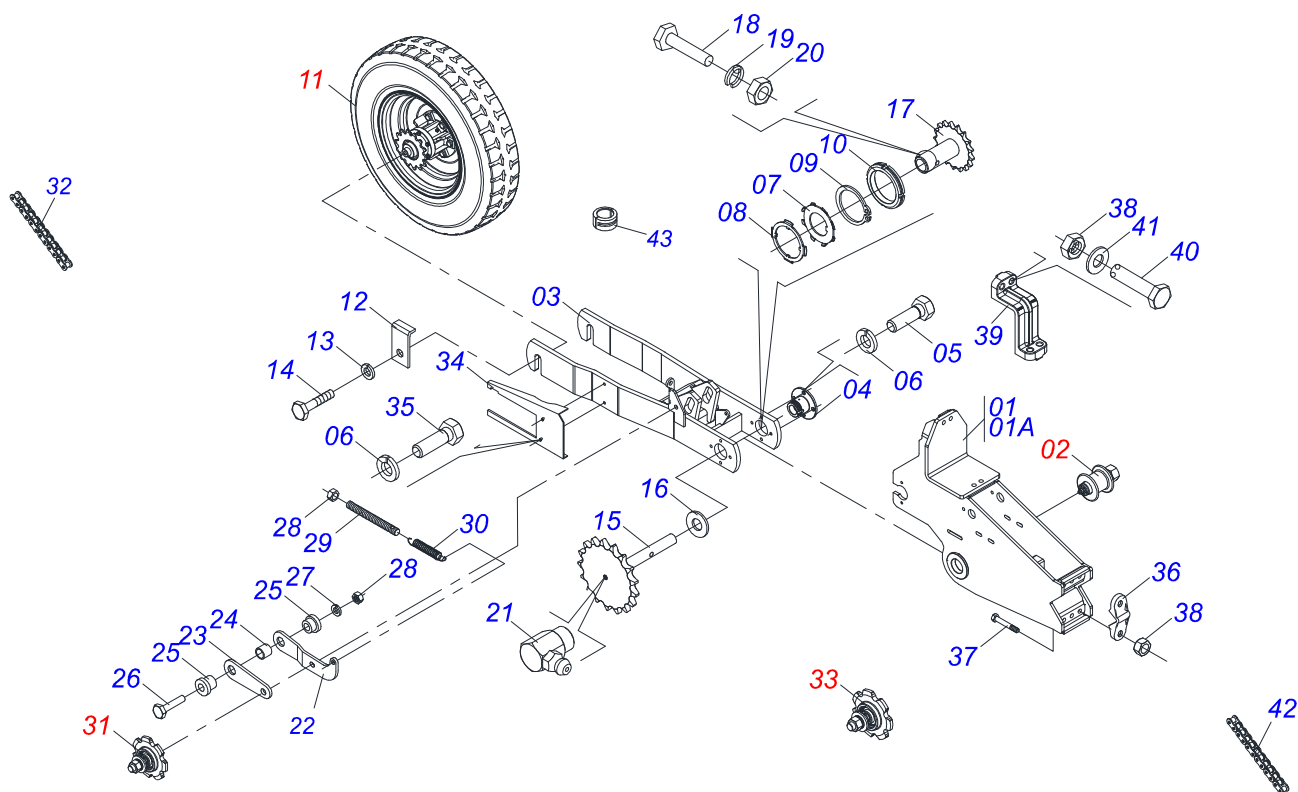

Item	Code	Description	See page	07A19 L
01	0521063678	WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY	11	02
03	0511064744	WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	23	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		10
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 12 BOX		01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011167	M16 X 2 X 30 BOLT		02
15	0511061808	15Z GEAR WITH AXLE,		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0531018654	CHAIN TIGHTENER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE		01
25	0531016916	SLEEVE BEARING SUPPORT		02
26	0503010899	5/8" X 2-1/4" BOLT		01
27	0503010027	5/8" SPRING WASHER		01
28	0503010013	5/8" NUT		02
29	0501013491	5/8" TENSIONER SPRING		01
30	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
31	0501053522	WHEEL CHAIN TENSIONER	15	01


HUB AND SPINDLE RIGHT

0511058371

Item	Code	Description	See page	07A19 L
32	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
33	0511053375	CURRENT DEVIATION ASSY WHEEL	16	01
34	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
35	0503010847	1/2" X 3.1/4" BOLT		02
36	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
37	0511010736	5/8" X 5-1/4" BOLT		04
38	0503010811	5/8" UNF SELF ADJUSTING NUT		08
39	0502012720	WHEEL SUPPORT FIXER		01
40	0503017857	BOLT 5/8 UNF 4		04
41	0501012140	FLAT WASHER		04
42	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
43	0501047888	ROD STOP		02

HUB AND SPINDLE LEFT

 0511058372

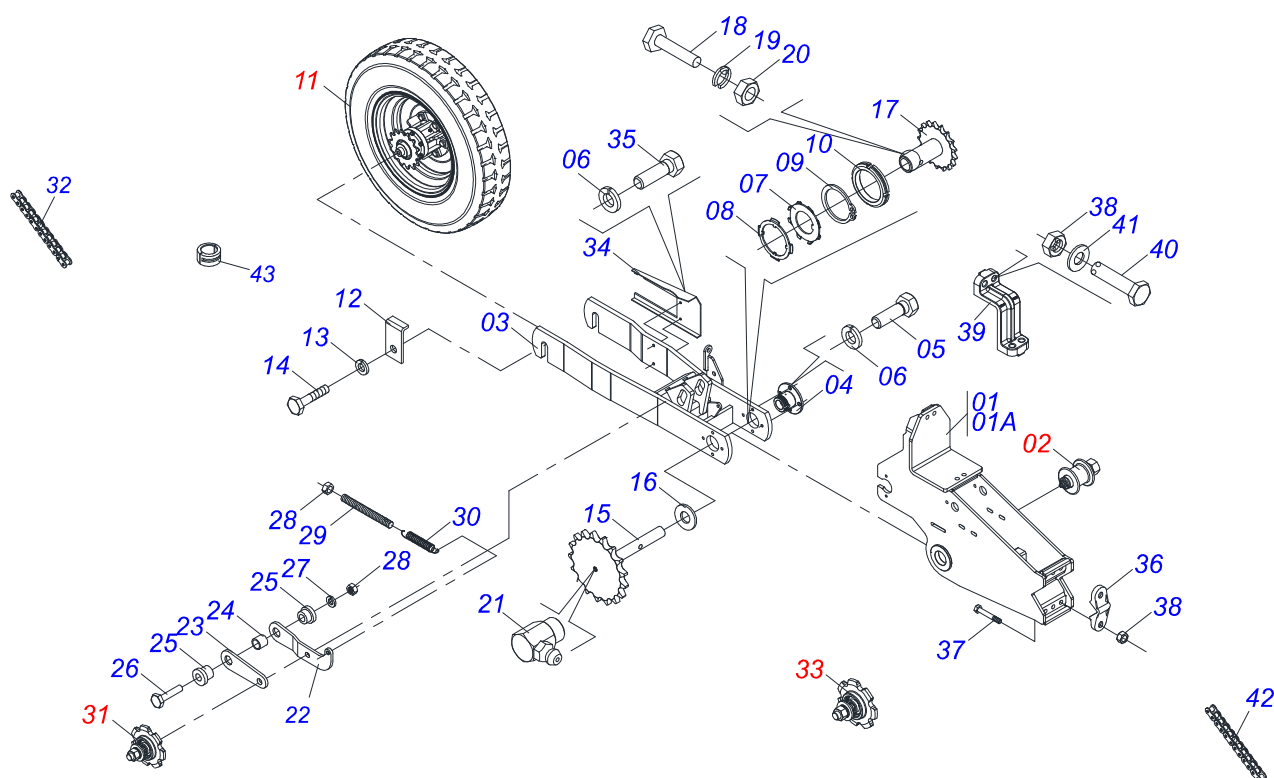


Item	Code	Description	See page	07A19 L
01	0521063678	WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY	11	02
03	0511065842	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	23	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		10
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 12 BOX		01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011167	M16 X 2 X 30 BOLT		02
15	0511061808	15Z GEAR WITH AXLE,		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE		01
25	0531016916	SLEEVE BEARING SUPPORT		02
26	0503010899	5/8" X 2-1/4" BOLT		01
27	0503010027	5/8" SPRING WASHER		01
28	0503010013	5/8" NUT		02
29	0501013491	5/8" TENSIONER SPRING		01
30	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
31	0501053522	WHEEL CHAIN TENSIONER	15	01


HUB AND SPINDLE LEFT

0511058372


Item	Code	Description	See page	07A19 L
32	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
33	0511053375	CURRENT DEVIATION ASSY WHEEL	16	01
34	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
35	0503010847	1/2" X 3.1/4" BOLT		02
36	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
37	0511010736	5/8" X 5-1/4" BOLT		04
38	0503010811	5/8" UNF SELF ADJUSTING NUT		08
39	0502012720	WHEEL SUPPORT FIXER		01
40	0503017857	BOLT 5/8 UNF 4		04
41	0501012140	FLAT WASHER		04
42	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
43	0501047888	ROD STOP		02

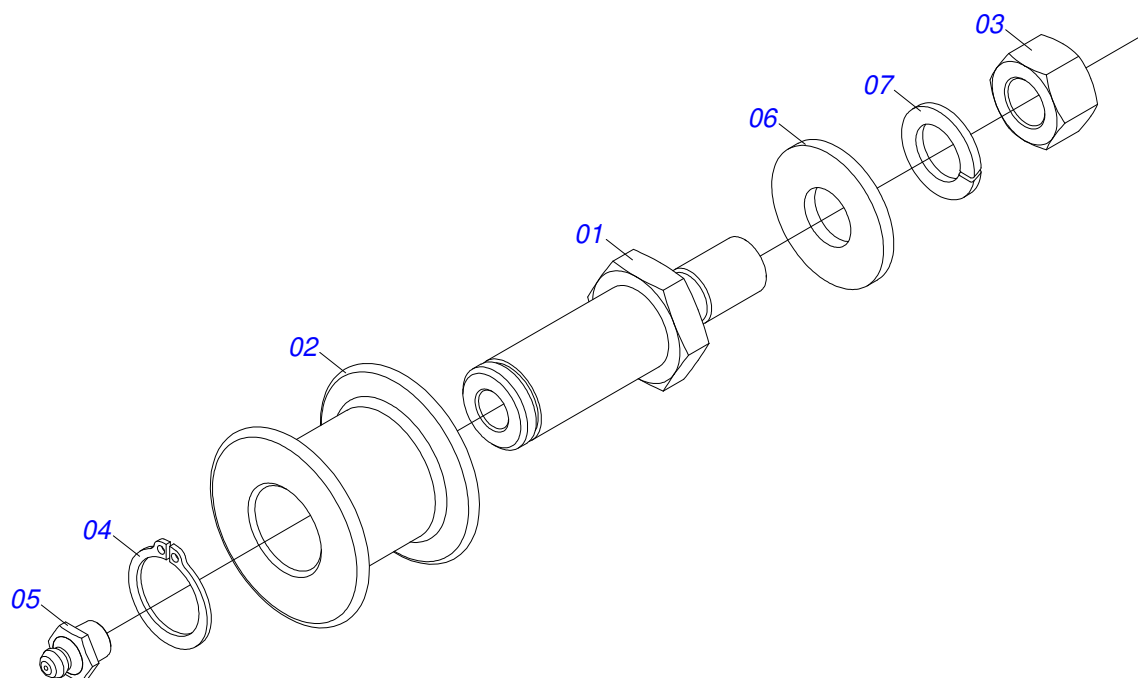 


Item	Code	Description	See page	QT
01	0521012529	CHAIN TIGHTENER AXLE		01
02	0503030402	PULLEY		01
03	0503010060	1/2" NUT		01
04	0503010302	501019 SEAL RING		01
05	0503010002	1800 GREASE FITTING		01
06	0511017302	FLAT WASHER		02
07	0503010019	1/2" SPRING WASHER		01

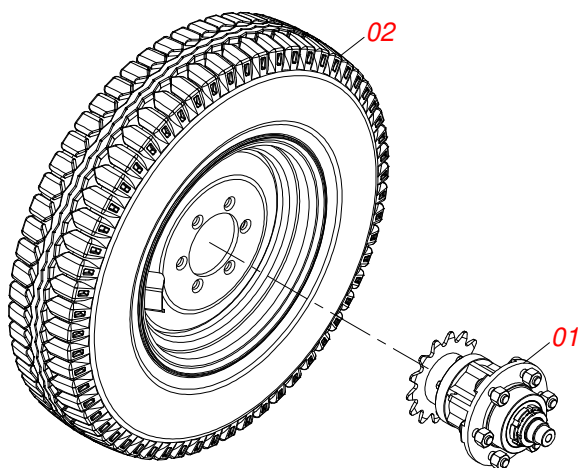 


Item	Code	Description	See page	QT
01	0511052766	CARRYING WHEEL HUB ASSY	13	01
02	0503062158	EEE WHEEL WITH TIRE 700 X 16-10L ASSY	14	01

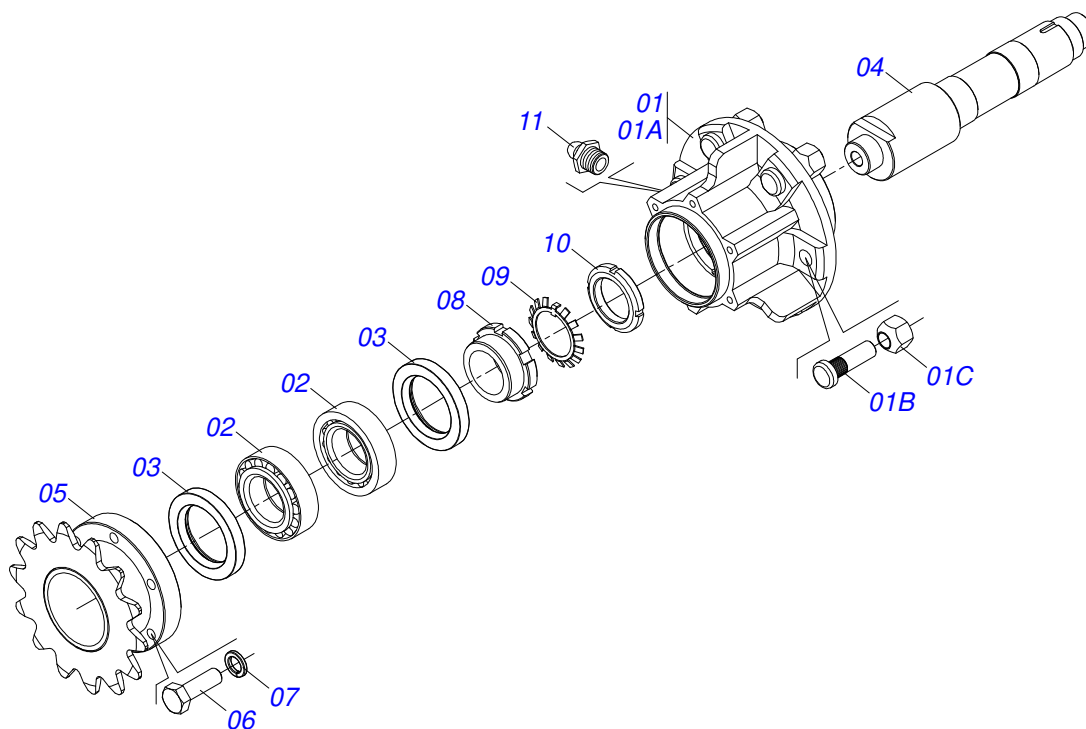 


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503010328	25590/25523 ROLLER BEARING		02
03	0503010804	00547-B SEAL		02
04	0521018363	00547-B SEAL		01
05	0511062015	14Z GEAR WITH FLANGE		01
06	0503010421	5/16" X 1-1/2" BOLT		06
07	0503011444	SPRING WASHER		06
08	0511015949	LOCK NUT		01
09	0503010329	LOCK WASHER		01
10	0503010330	KM 9 LOCKNUT		01
11	0503010002	1800 GREASE FITTING		01

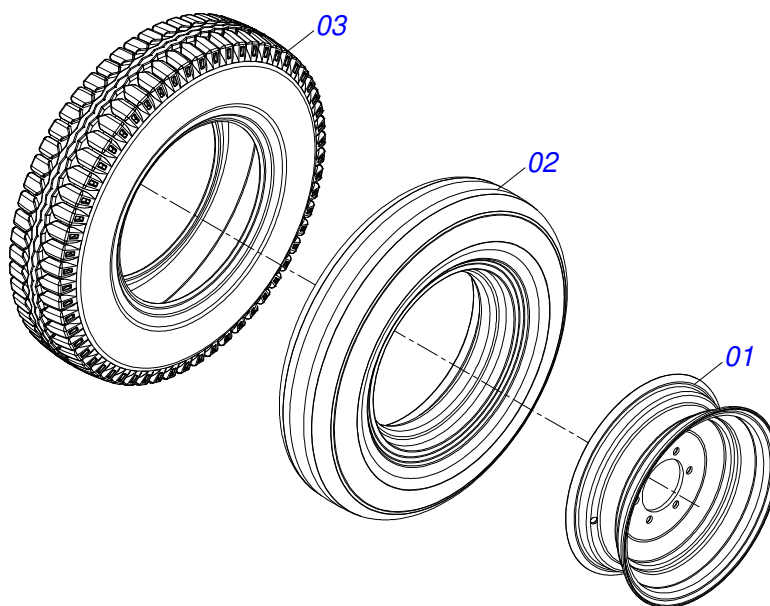 


Item	Code	Description	See page	QT
01	0503016518	RUEDA		01
02	0503012114	7.00 X 16 INNER TIRE		01
03	0503012113	PLY TIRE		01

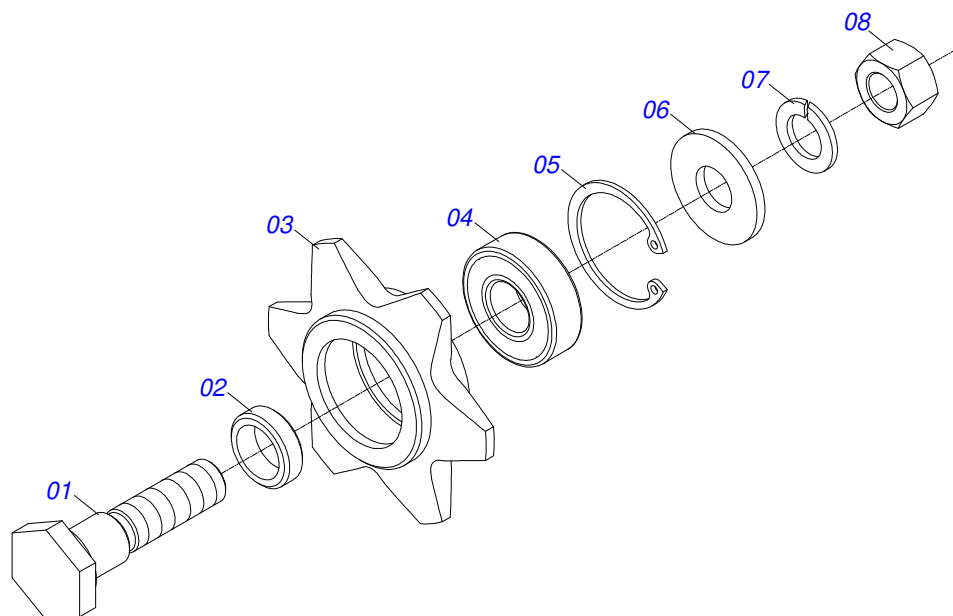 

Item	Code	Description	See page	QT
01	0531012640	AXLE CHAIN TIGHTENER		01
02	0531012678	4.5" X 0.9" X 0.2" SLEEVE		01
03	0502012853	GEAR		01
04	0503012882	BEARING		01
05	0503011945	503050 CLAMPING RING (FOR AXLE)		01
06	0511017302	FLAT WASHER		01
07	0503010019	1/2" SPRING WASHER		01
08	0503010060	1/2" NUT		01

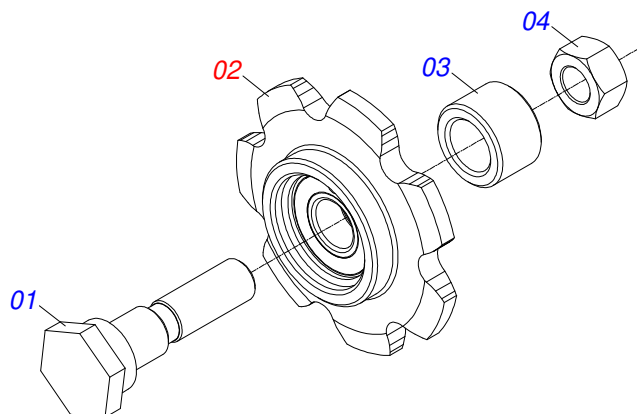 


Item	Code	Description	See page	QT
01	0551018252	CHAIN TIGHTENER AXLE		01
02	0501058239	CHAIN TENSIONER BEARING	17	01
03	0521010479	SLEEVE ARTICULATION		01
04	0503011336	1/2" HEX SELF ADJUSTING NUT		01

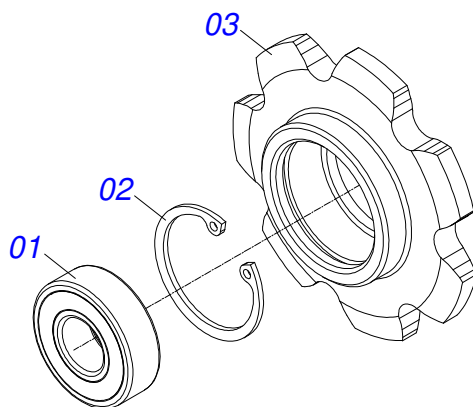 

Item	Code	Description	See page	QT
01	0503012882	BEARING		01
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012853	GEAR		01

RIGHT WHEEL ASSY

 0511050439

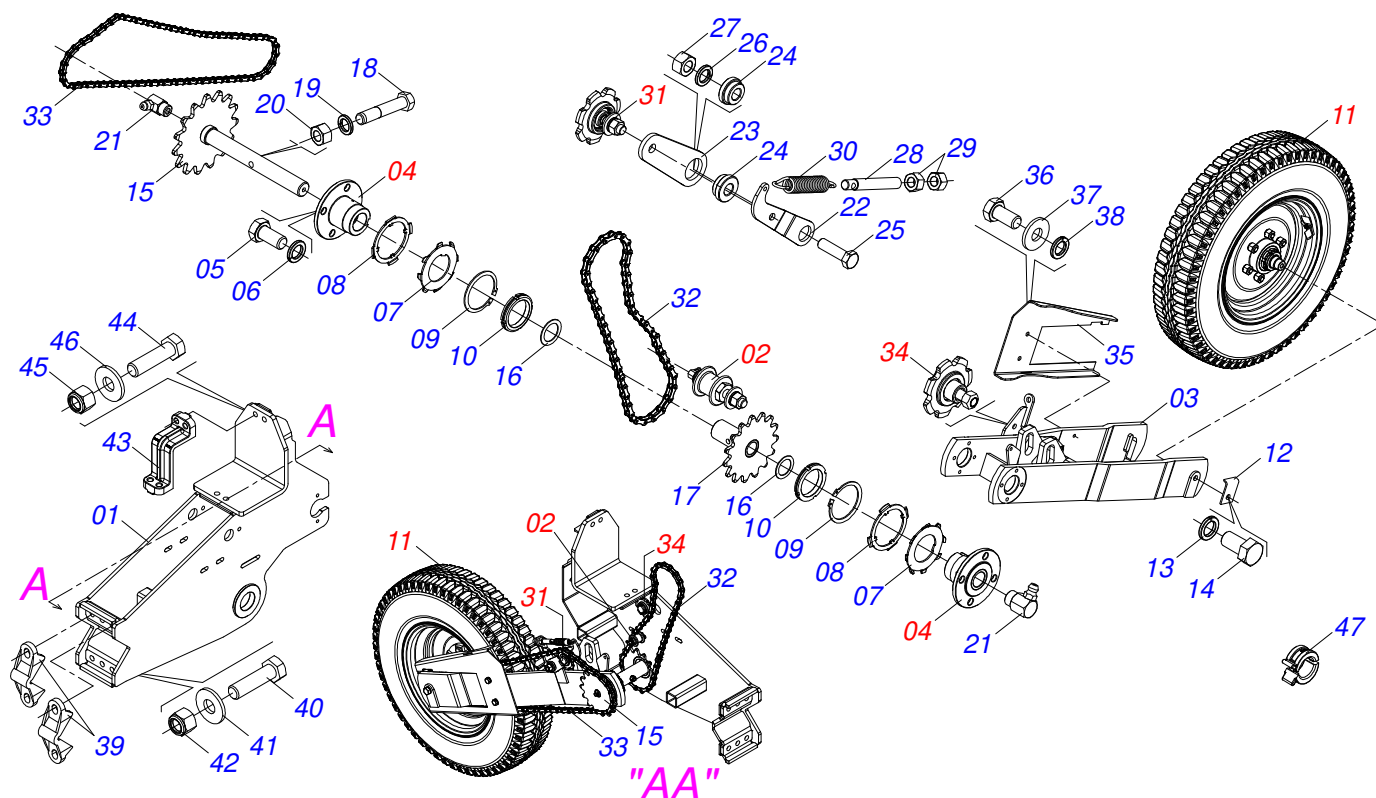


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0501054284	STRETCHER CURRENT TRANSMISSION SIDE	20	01
03	0511064744	WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	23	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 12 BOX		01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011167	M16 X 2 X 30 BOLT		02
15	0511061808	15Z GEAR WITH AXLE,		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0531016916	SLEEVE BEARING SUPPORT		02
25	0503010899	5/8" X 2-1/4" BOLT		01
26	0503010027	5/8" SPRING WASHER		01
27	0503010013	5/8" NUT		01
28	0501013491	5/8" TENSIONER SPRING		01
29	0503010013	5/8" NUT		02
30	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
31	0501053522	WHEEL CHAIN TENSIONER	15	01

RIGHT WHEEL ASSY

0511050439

Item	Code	Description	See page	QT
32	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
33	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
34	0511053375	CURRENT DEVIATION ASSY WHEEL	16	01
35	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
36	0503010834	1/2 X 1 BOLT		02
37	0511017302	FLAT WASHER		02
38	0503010019	1/2" SPRING WASHER		02
39	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
40	0511010736	5/8" X 5-1/4" BOLT		04
41	0501013753	FLAT WASHER		04
42	0503010811	5/8" UNF SELF ADJUSTING NUT		04
43	0502012720	WHEEL SUPPORT FIXER		01
44	0503017857	BOLT 5/8 UNF 4		04
45	0503010811	5/8" UNF SELF ADJUSTING NUT		04
46	0501012140	FLAT WASHER		04
47	0501047888	ROD STOP		01

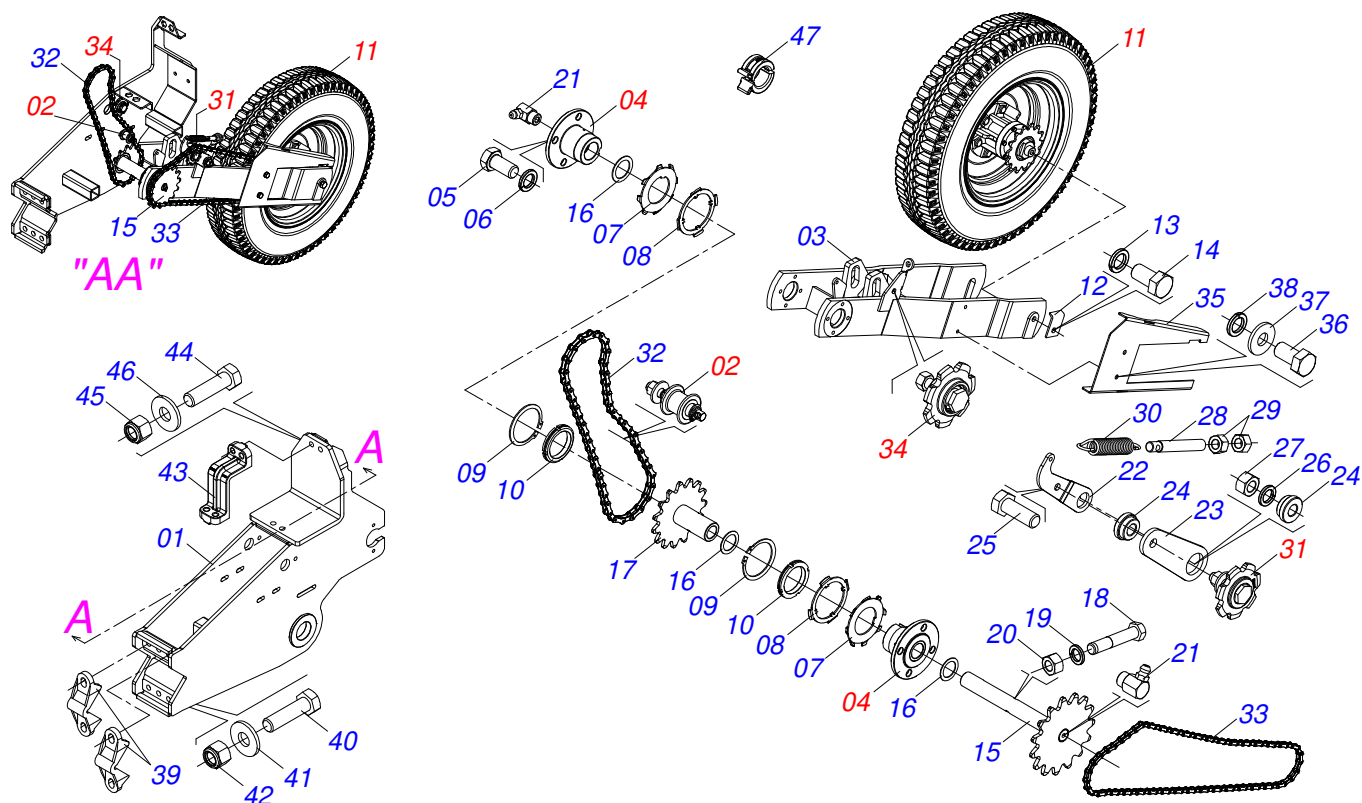 


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0501054284	STRETCHER CURRENT TRANSMISSION SIDE	20	01
03	0511065842	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	23	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 12 BOX		01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011167	M16 X 2 X 30 BOLT		02
15	0511061808	15Z GEAR WITH AXLE,		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0531018654	CHAIN TIGHTENER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0531016916	SLEEVE BEARING SUPPORT		02
25	0503010899	5/8" X 2-1/4" BOLT		01
26	0503010027	5/8" SPRING WASHER		01
27	0503010013	5/8" NUT		01
28	0501013491	5/8" TENSIONER SPRING		01
29	0503010013	5/8" NUT		02
30	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
31	0501053522	WHEEL CHAIN TENSIONER	15	01


WHITH LEFT WHEEL ASSY

0511050440


Item	Code	Description	See page	QT
32	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
33	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
34	0511053375	CURRENT DEVIATION ASSY WHEEL	16	01
35	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
36	0503010834	1/2 X 1 BOLT		02
37	0511017302	FLAT WASHER		02
38	0503010019	1/2" SPRING WASHER		02
39	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
40	0511010736	5/8" X 5-1/4" BOLT		04
41	0501013753	FLAT WASHER		04
42	0503010811	5/8" UNF SELF ADJUSTING NUT		04
43	0502012720	WHEEL SUPPORT FIXER		01
44	0503017857	BOLT 5/8 UNF 4		04
45	0503010811	5/8" UNF SELF ADJUSTING NUT		04
46	0501012140	FLAT WASHER		04
47	0501047888	ROD STOP		01

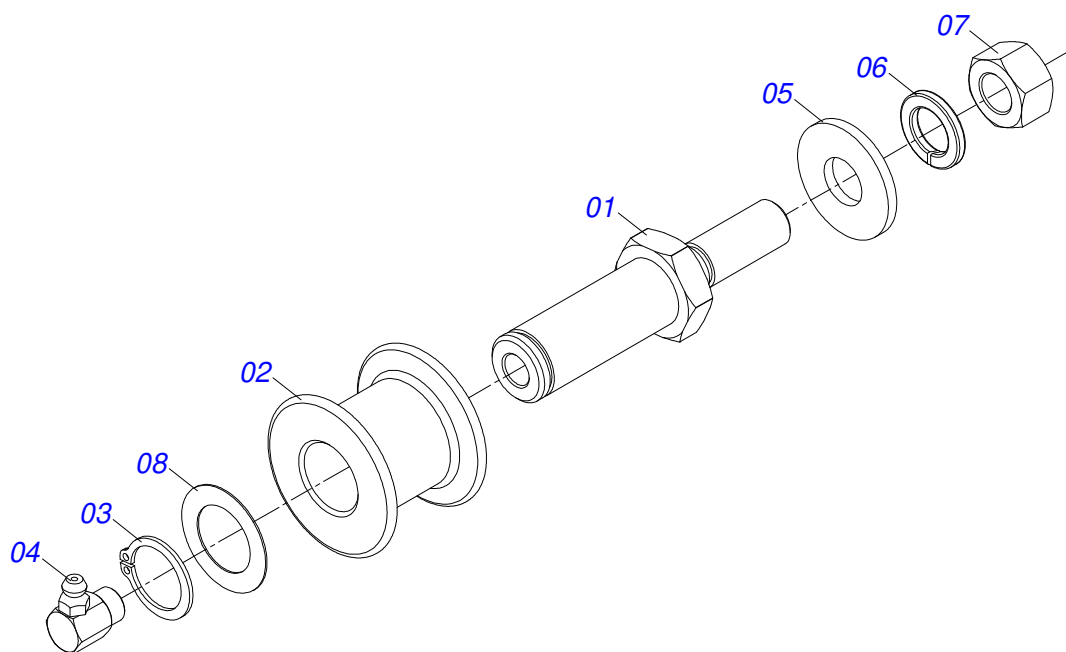 


Item	Code	Description	See page	QT
01	0531017202	AXLE CHAIN TIGHTENER		01
02	0503030402	PULLEY		01
03	0503010302	501019 SEAL RING		01
04	0503010004	1890 GREASE FITTING		01
05	0511017302	FLAT WASHER		01
06	0503010019	1/2" SPRING WASHER		01
07	0503010060	1/2" NUT		01
08	0511015098	FLAT WASHER		01

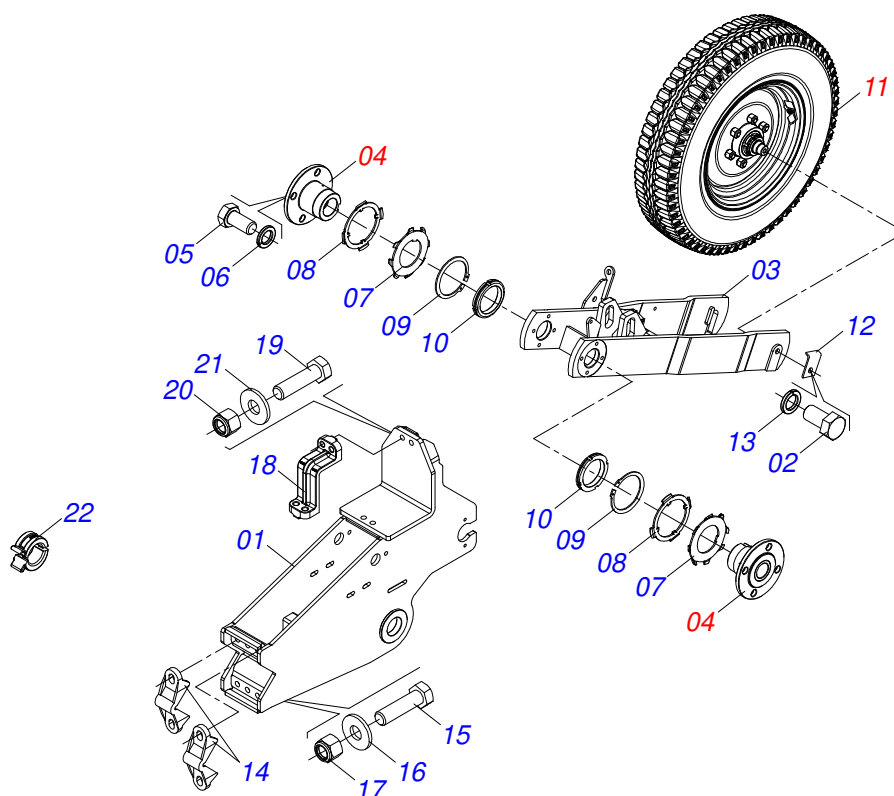 


Item	Code	Description	See page	5750/6850
01	0521063678	WHEEL SUPPORT		01
02	0503011167	M16 X 2 X 30 BOLT		02
03	0511064744	WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	23	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 12 BOX		01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
15	0511010736	5/8" X 5-1/4" BOLT		04
16	0501013753	FLAT WASHER		04
17	0503010811	5/8" UNF SELF ADJUSTING NUT		04
18	0502012720	WHEEL SUPPORT FIXER		01
19	0503017857	BOLT 5/8 UNF 4		04
20	0503010811	5/8" UNF SELF ADJUSTING NUT		04
21	0501012140	FLAT WASHER		04
22	0501047888	ROD STOP		01

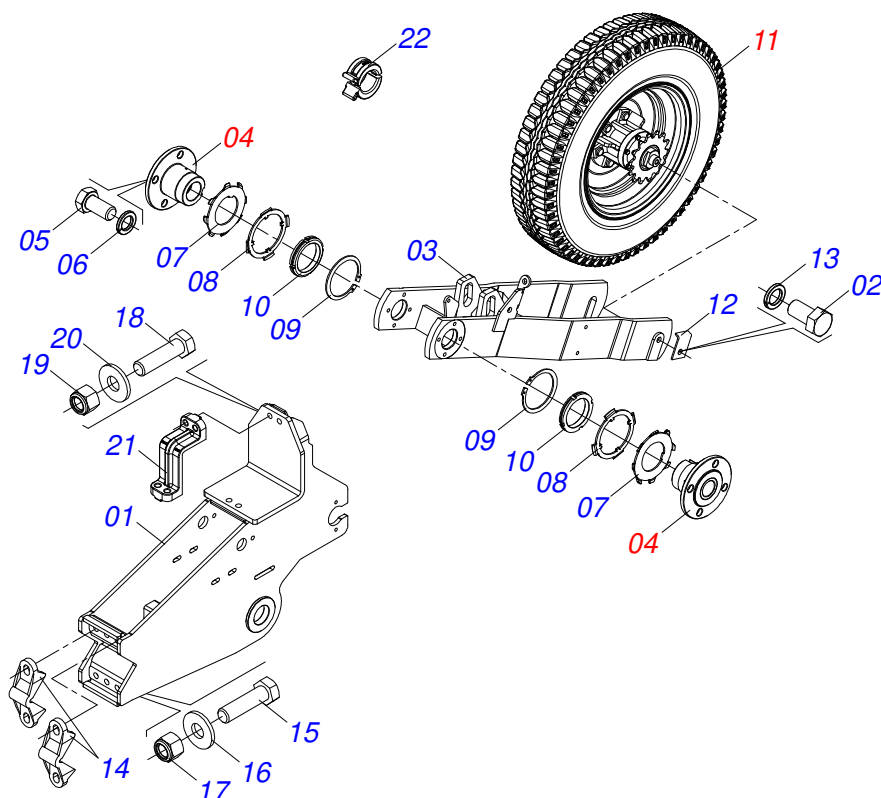 

Item	Code	Description	See page
01	0521063678	WHEEL SUPPORT	01
02	0503011167	M16 X 2 X 30 BOLT	02
03	0511065842	LEFT WHEEL FORK	01
04	0501110625	BEARING ARTICULATION WHEEL	23 02
05	0503013232	1/2" BOLT	08
06	0503010019	1/2" SPRING WASHER	08
07	0561013021	BEARING INNER LOK	02
08	0561013022	BEARING EXTERNAL LOCK	02
09	0503010398	501082 CLAMPING RING (FOR AXLE)	02
10	0561013020	KM 12 NUT	02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 12 BOX	01
12	0521012190	AXLE LOCK	02
13	0503010027	5/8" SPRING WASHER	02
14	0502010584	CARRYING-WHEELS SUPPORT FIXER	02
15	0511010736	5/8" X 5-1/4" BOLT	04
16	0501013753	FLAT WASHER	04
17	0503010811	5/8" UNF SELF ADJUSTING NUT	04
18	0503017857	BOLT 5/8 UNF 4	04
19	0503010811	5/8" UNF SELF ADJUSTING NUT	04
20	0501012140	FLAT WASHER	04
21	0502012720	WHEEL SUPPORT FIXER	01
22	0501047888	ROD STOP	01

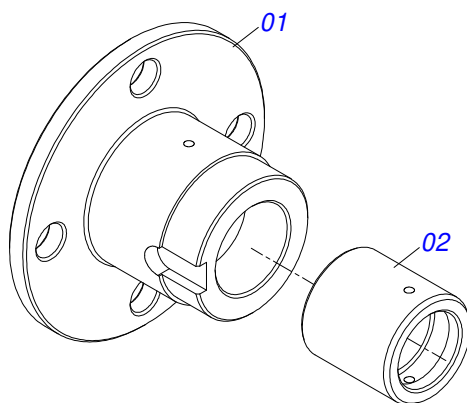 


Item	Code	Description	See page	QT
01	0561015879	WHEELED JOINT BEARING		01
02	0561012895	GLOVE 30,16 X 45,32/45,28 X 47		01

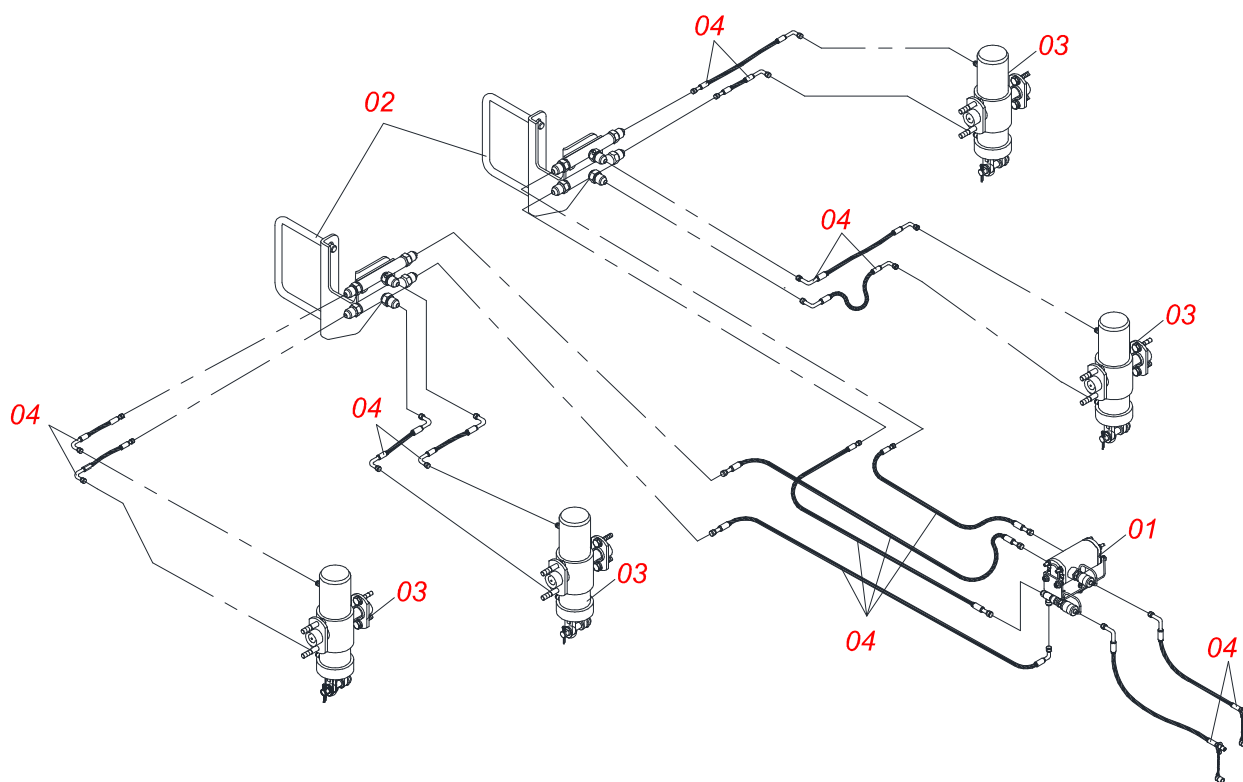 


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	25	01
02	0521051534	HOSE FIXING ASSY	26	01
03	0511053593	HYDRAULIC CYLINDER ASSEMBLY	27	04
04	0511053607	HOSE KIT	28	01

VALVE FIXING ASSEMBLY

 
0511053358

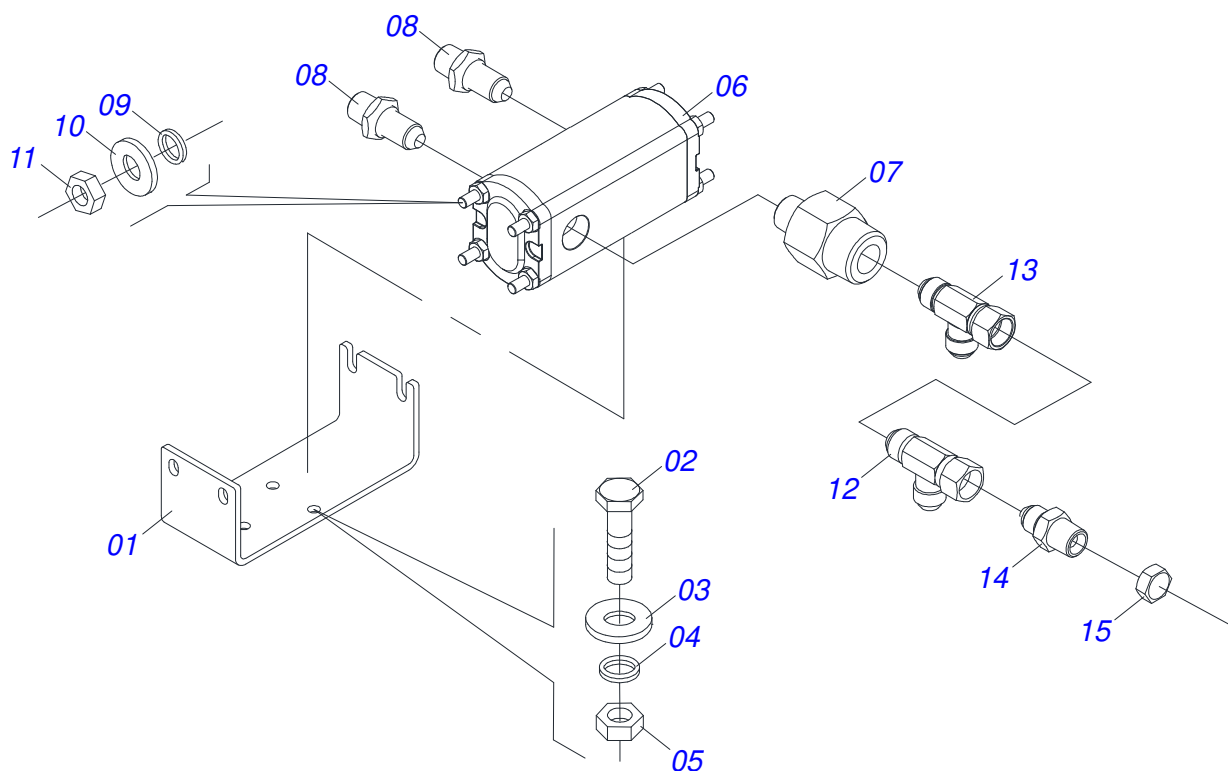

Item	Code	Description	See page	QT
01	0571010596	SUPPORT VALVE 50/50		01
02	0503010371	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02
06	0503013791	DOUBLE MOTOR		01
07	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE		01
08	0551012463	1/2" BSPT X 3/4" UNF X 51 NIPPLE		02
09	0503015075	M10 SPRING WASHER		04
10	0501010984	FLAT WASHER		04
11	0503011051	M10 X 0.6" NUT		04
12	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
13	0503012341	T 7/8" ADAPOR GIRAT NUT		02
14	0541012166	NIPPLE 3/4" UNF X 7/8"		01
15	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01

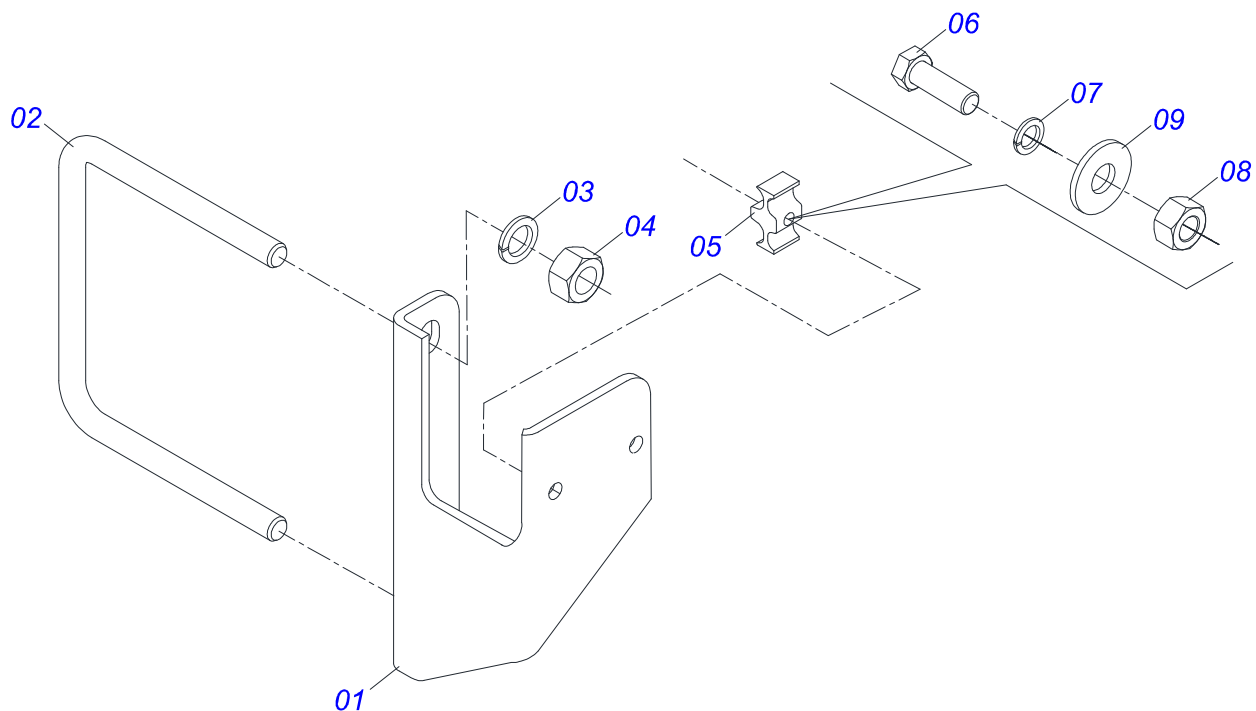 


Item	Code	Description	See page	QT
01	0561017277	OIL CONDUCTOR FIXER PLATE		04
02	0521010718	5/8" U BOLT		04
03	0503010027	5/8" SPRING WASHER		08
04	0503010013	5/8" NUT		08
05	0502012702	BODY SUPPORT CLAMP		04
06	0503011103	7/16" X 2-1/2" BOLT		04
07	0503010180	7/16" SPRING WASHER		04
08	0503010244	7/16" NUT		04
09	0501012140	FLAT WASHER		04

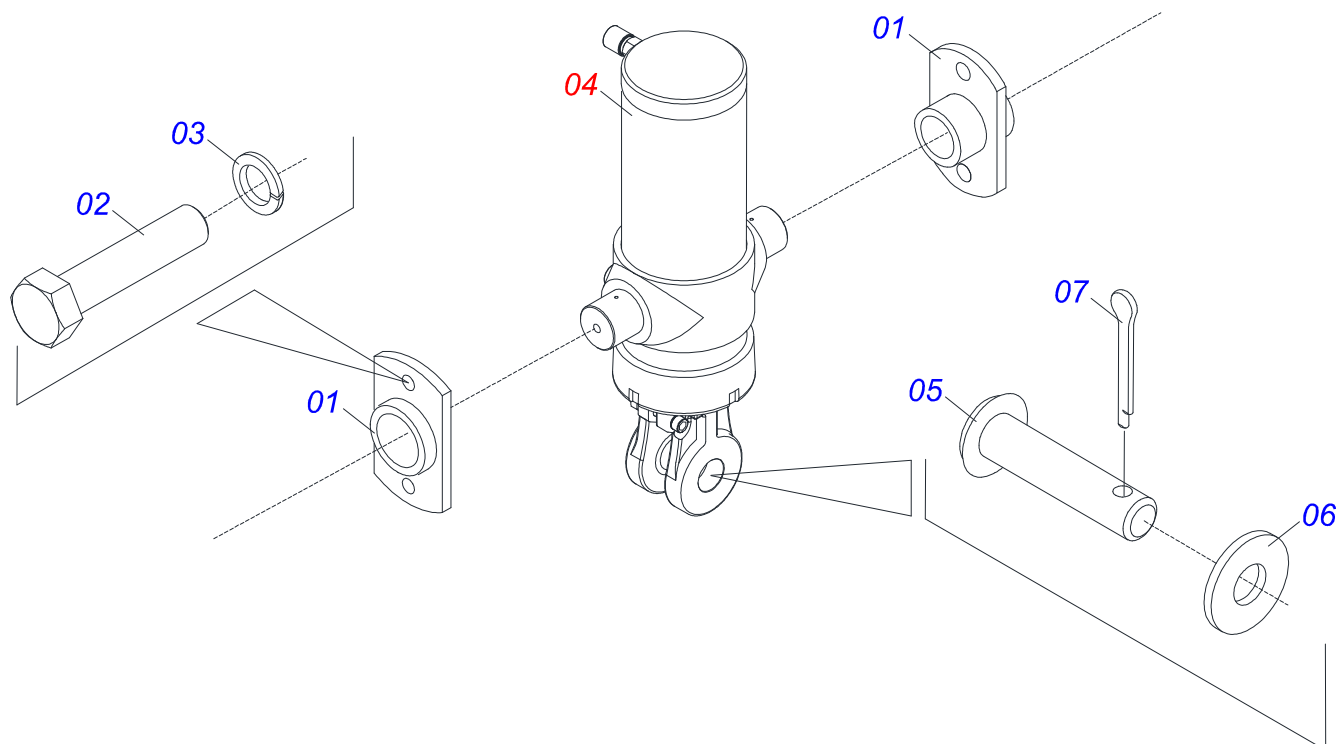 


Item	Code	Description	See page	QT
01	0511066351	FLANGE CYLINDER HYDRAULIC FIXER	04	
02	0503010834	1/2 X 1 BOLT	08	
03	0503010019	1/2" SPRING WASHER	08	
04	0511058411	HYDRAULIC CYLINDER	02	
05	0521010546	1.2" X 5.7" COUPLING SHAFT	02	
06	0501017779	32 X 60 X 4.75 FLAT WASHER	04	
07	0503010523	1/4" X 2" COTTERPIN	02	

HOSE KIT

 
0511053607

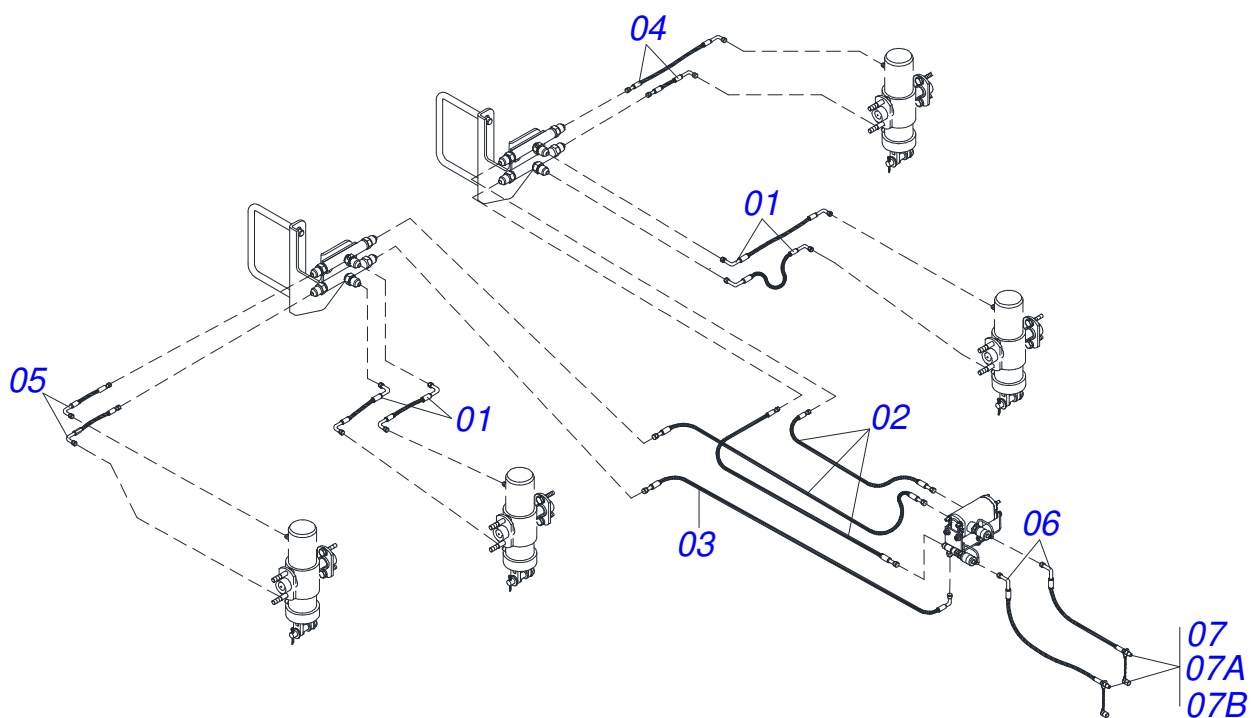


Item	Code	Description	See page	07 L
01	0501080760	3/8" X 500 TC-TC HOSE		04
02	0501080027	3/8" X 39,3" TR-TR HOSE ASSY		03
03	0501080055	3/8" X 1000 TR-TC HOSE		01
04	0501080302	TR-TC HOSE ASSY		02
05	0501080714	HOSE 3/8 X 1600 TR-TC		02
06	0501081073	HOSE 1/2 X 4200 TC-TM		02
07	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	35	02
07A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
07B	0503011882	MALE QUICK COUPLER CAP		01

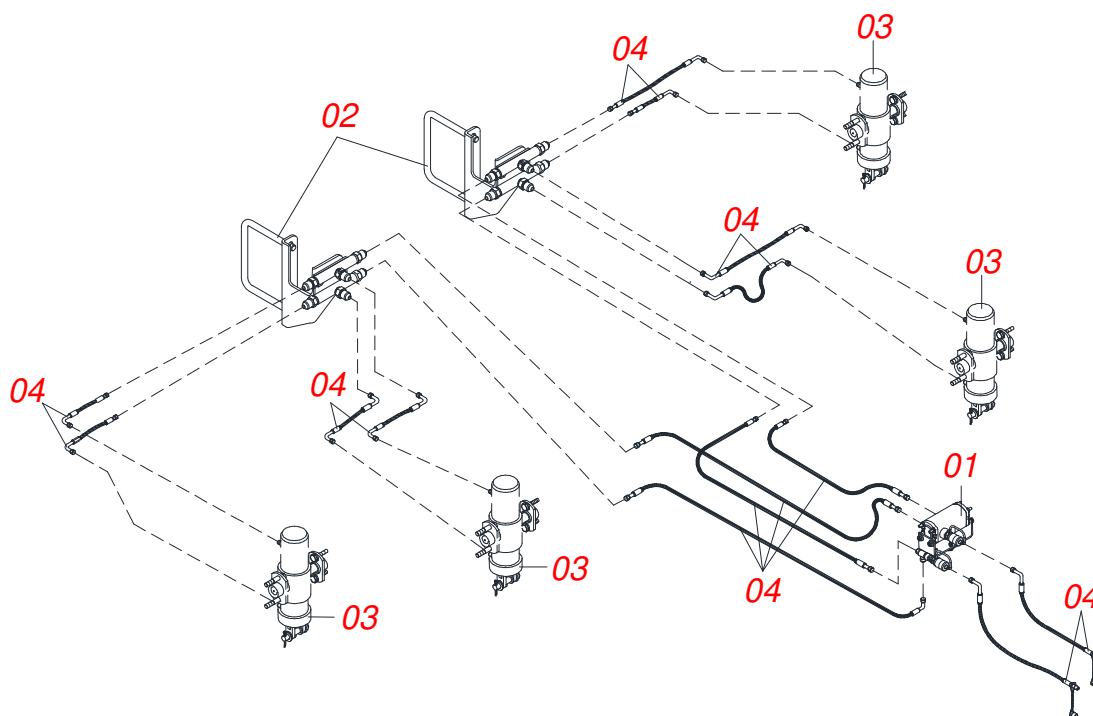 


Item	Code	Description	See page	11 L
01	0511053358	VALVE FIXING ASSEMBLY	25	01
02	0511053383	FIXER ASSEMBLY HOSE HYDRAULIC	30	01
03	0511053384	HYDRAULIC CYLINDER ASSEMBLY	31	01
04	0511053309	HOSE KIT	32	01

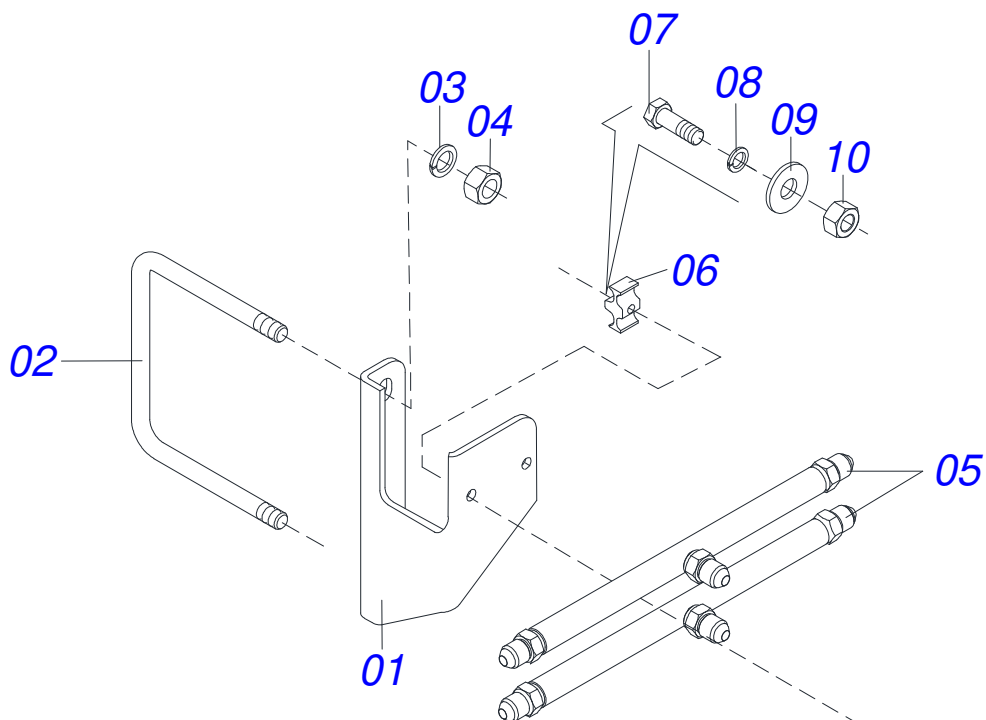 


Item	Code	Description	See page	11 L
01	0561017277	OIL CONDUCTOR FIXER PLATE		04
02	0521010718	5/8" U BOLT		04
03	0503010027	5/8" SPRING WASHER		08
04	0503010013	5/8" NUT		08
05	0521065265	OIL CONDUCTOR		04
06	0502012702	BODY SUPPORT CLAMP		04
07	0503011268	3/8" X 2-1/2" BOLT		04
08	0503010025	3/8" SPRING WASHER		04
09	0501012140	FLAT WASHER		08
10	0503010026	3/8" NUT		04

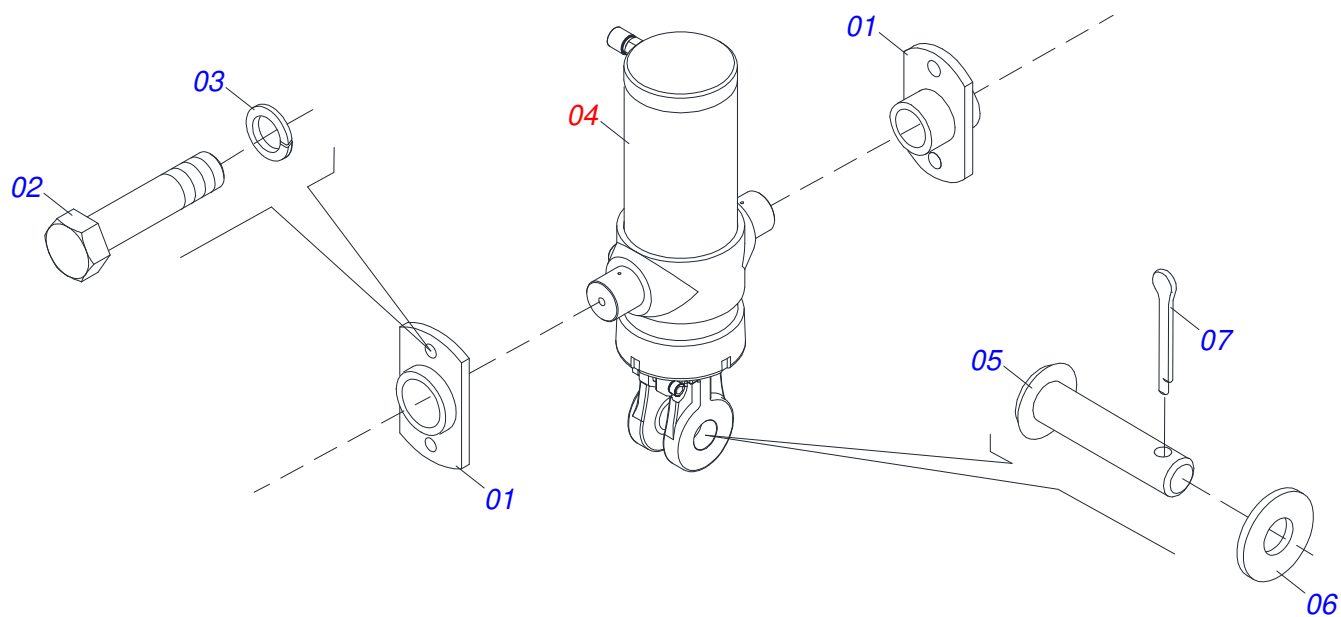 


Item	Code	Description	See page	QT
01	0511066351	FLANGE CYLINDER HYDRAULIC FIXER	08	
02	0503010834	1/2 X 1 BOLT	16	
03	0503010019	1/2" SPRING WASHER	16	
04	0511058411	HYDRAULIC CYLINDER	04	
05	0521010546	1.2" X 5.7" COUPLING SHAFT	04	
06	0501017779	32 X 60 X 4.75 FLAT WASHER	08	
07	0503010523	1/4" X 2" COTTERPIN	04	

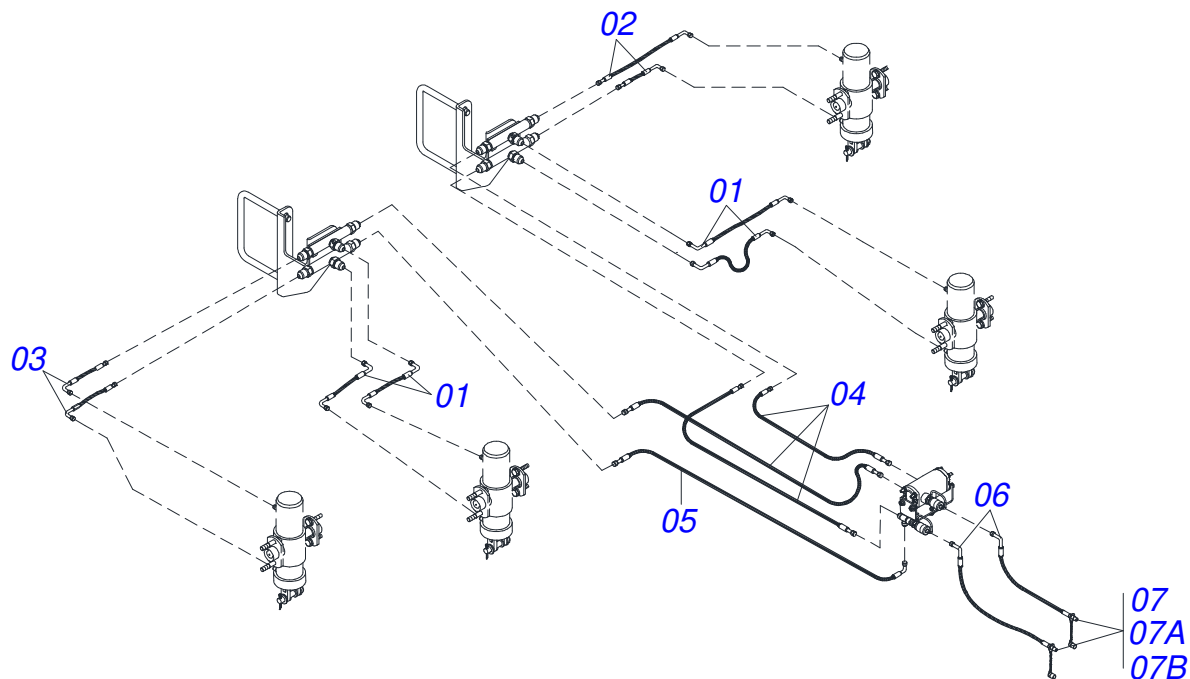 


Item	Code	Description	See page	11 L
01	0501080760	3/8" X 500 TC-TC HOSE		04
02	0501080150	HOSE ASSY		02
03	0501080055	3/8" X 1000 TR-TC HOSE		02
04	0501080321	3/8" X 47" TR-TR HOSE ASSY		03
05	0501080348	TR-TC HOSE ASSY		01
06	0501081073	HOSE 1/2 X 4200 TC-TM		02
07	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	35	02
07A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
07B	0503011882	MALE QUICK COUPLER CAP		01

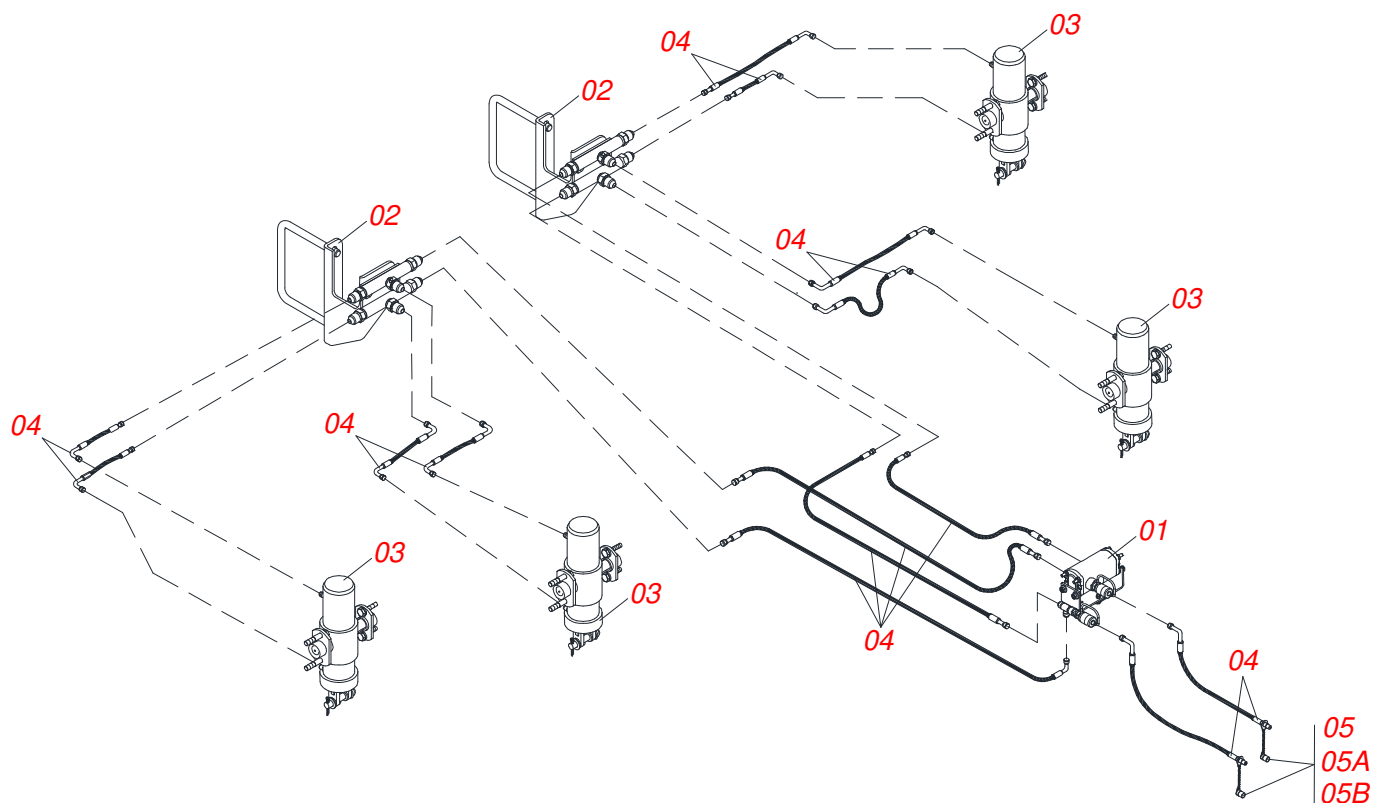 


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	25	01
02	0511053382	FIXER HYDRAULIC HOSE ASSEMBLY	34	01
03	0511053384	HYDRAULIC CYLINDER ASSEMBLY	31	01
04	0511053309	HOSE KIT	32	01
05	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	35	02
05A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
05B	0503011882	MALE QUICK COUPLER CAP		01

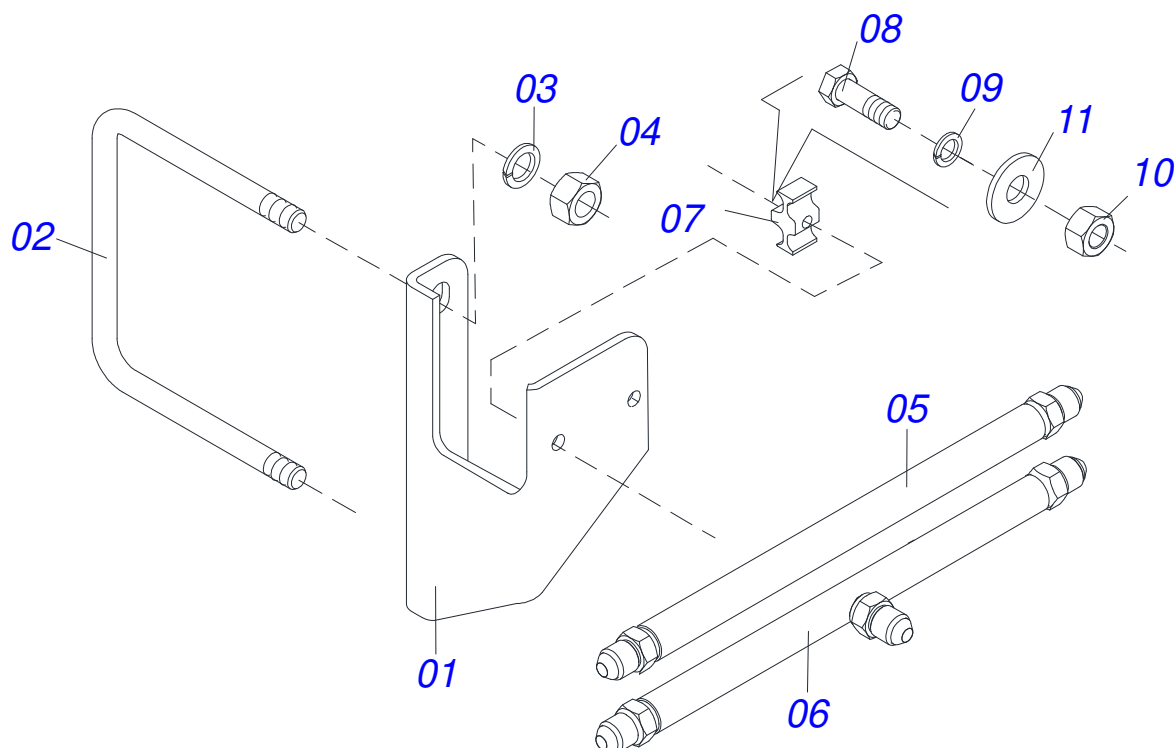 


Item	Code	Description	See page	QT
01	0561017277	OIL CONDUCTOR FIXER PLATE	04	
02	0521010718	5/8" U BOLT	04	
03	0503010027	5/8" SPRING WASHER	08	
04	0503010013	5/8" NUT	08	
05	0521065260	MH 11/450 OIL CONDUCTOR	04	
06	0521065265	OIL CONDUCTOR	04	
07	0502012702	BODY SUPPORT CLAMP	10	
08	0503011268	3/8" X 2-1/2" BOLT	10	
09	0503010025	3/8" SPRING WASHER	10	
10	0503010026	3/8" NUT	10	
11	0501012140	FLAT WASHER	08	

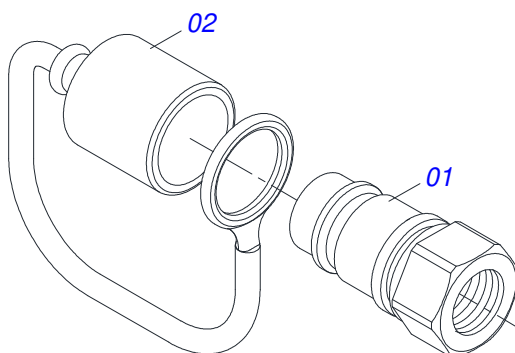 


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

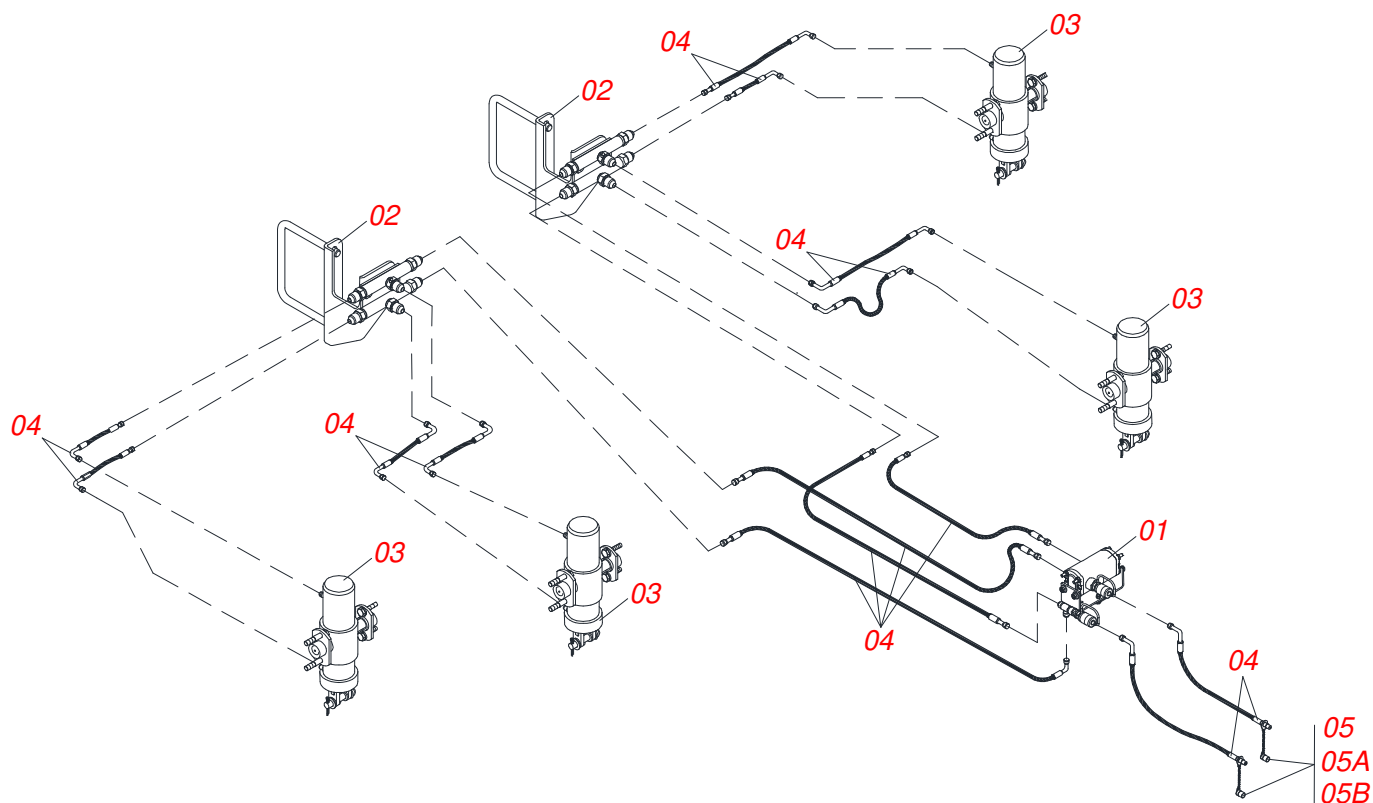 


Item	Code	Description	See page	13 L
01	0511053358	VALVE FIXING ASSEMBLY	25	01
02	0511053350	FIXER HYDRAULIC HOSE ASSEMBLY	37	01
03	0511053368	HYDRAULIC CYLINDER ASSEMBLY	38	01
04	0511053290	HOSE KIT	39	01
05	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	35	02
05A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
05B	0503011882	MALE QUICK COUPLER CAP		01

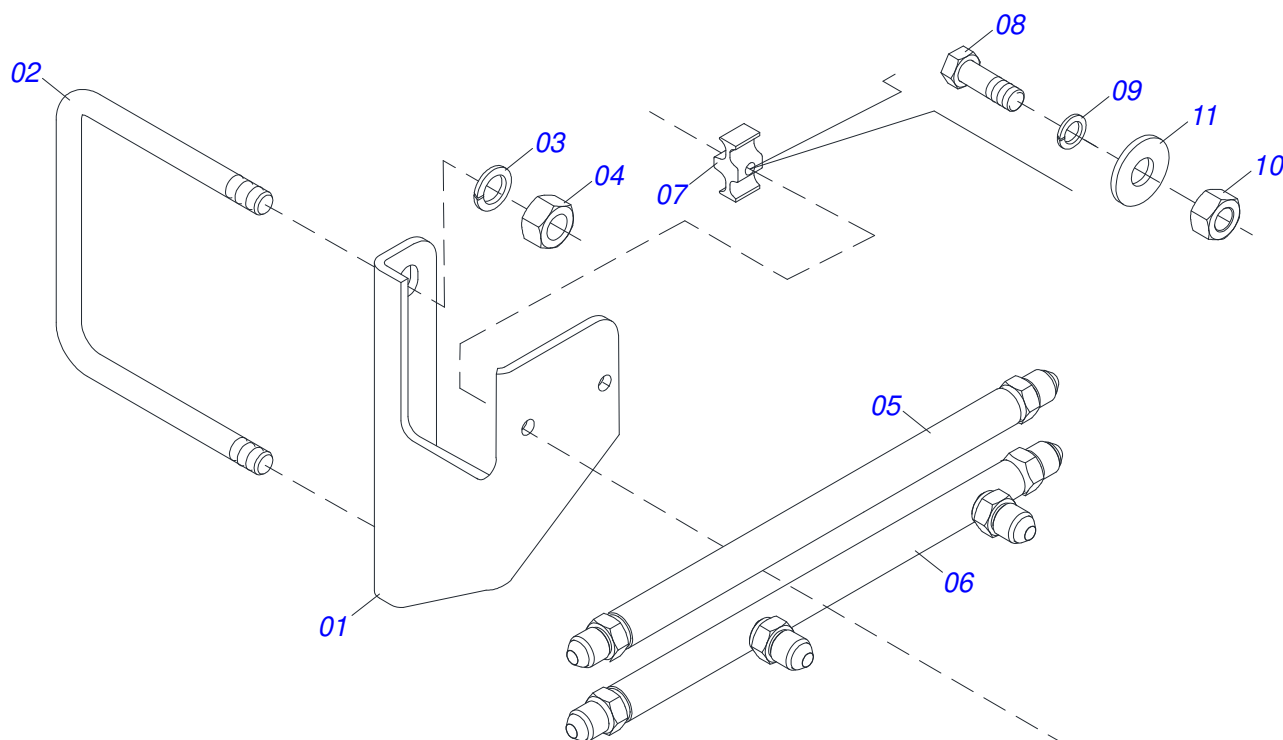 


Item	Code	Description	See page	13 L
01	0561017277	OIL CONDUCTOR FIXER PLATE	04	
02	0521010718	5/8" U BOLT	04	
03	0503010027	5/8" SPRING WASHER	08	
04	0503010013	5/8" NUT	08	
05	0521065261	MH OIL CONDUCTOR	04	
06	0521064673	OIL CONDUCTOR	04	
07	0502012702	BODY SUPPORT CLAMP	10	
08	0503011268	3/8" X 2-1/2" BOLT	10	
09	0503010025	3/8" SPRING WASHER	10	
10	0503010026	3/8" NUT	10	
11	0501012140	FLAT WASHER	08	

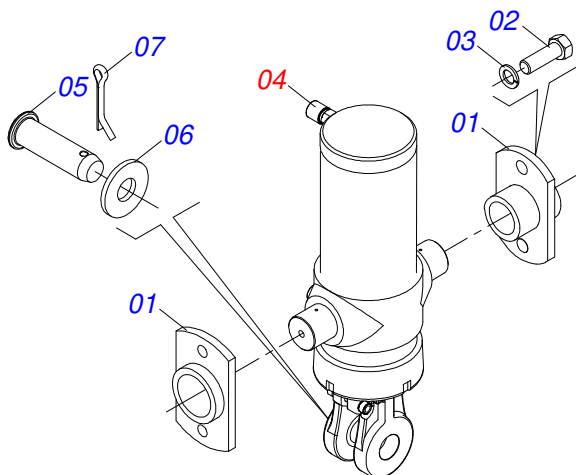 


Item	Code	Description	See page	QT
01	0511066351	FLANGE CYLINDER HYDRAULIC FIXER	12	
02	0503010834	1/2 X 1 BOLT	24	
03	0503010019	1/2" SPRING WASHER	24	
04	0511058411	HYDRAULIC CYLINDER	06	
05	0521010546	1.2" X 5.7" COUPLING SHAFT	06	
06	0501017779	32 X 60 X 4.75 FLAT WASHER	12	
07	0503010523	1/4" X 2" COTTERPIN	06	

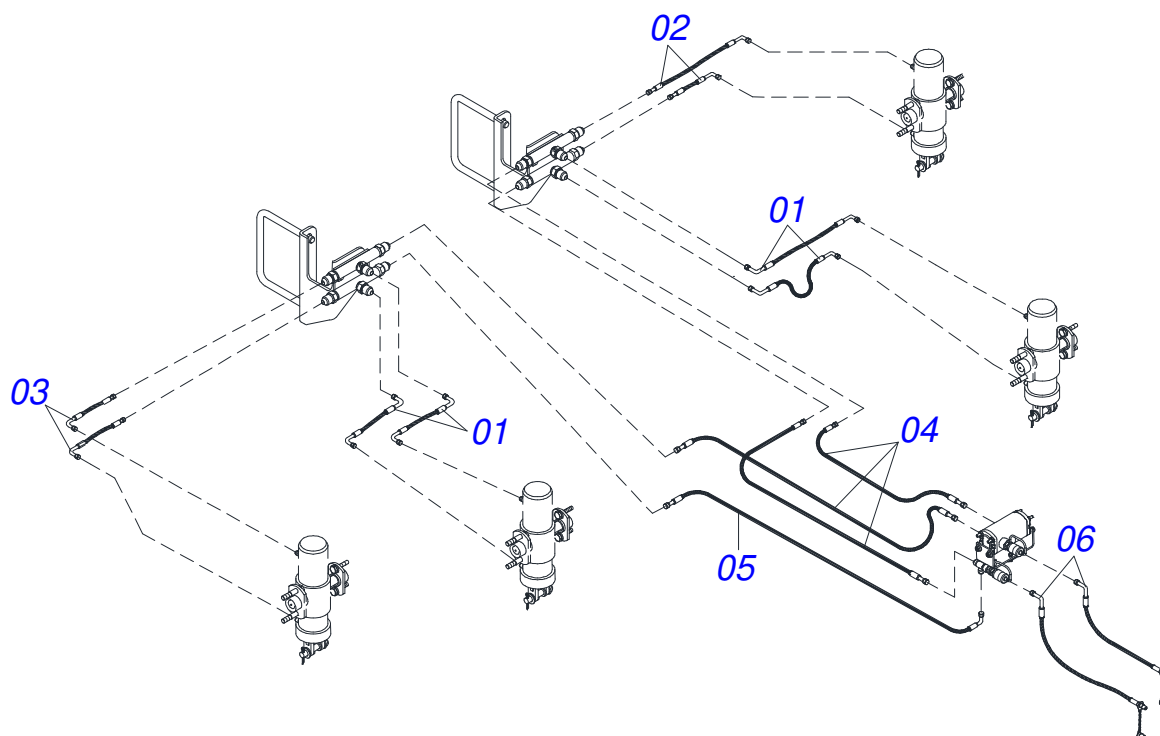 


Item	Code	Description	See page	13 L
01	0501080760	3/8" X 500 TC-TC HOSE		08
02	0501080413	3/8" X 27" TR-TC HOSE		02
03	0501080055	3/8" X 1000 TR-TC HOSE		02
04	0501080352	3/8" X 1400 TR-TR HOSE ASSY		03
05	0501080025	TR-TC HOSE ASSY		01
06	0501081073	HOSE 1/2 X 4200 TC-TM		02

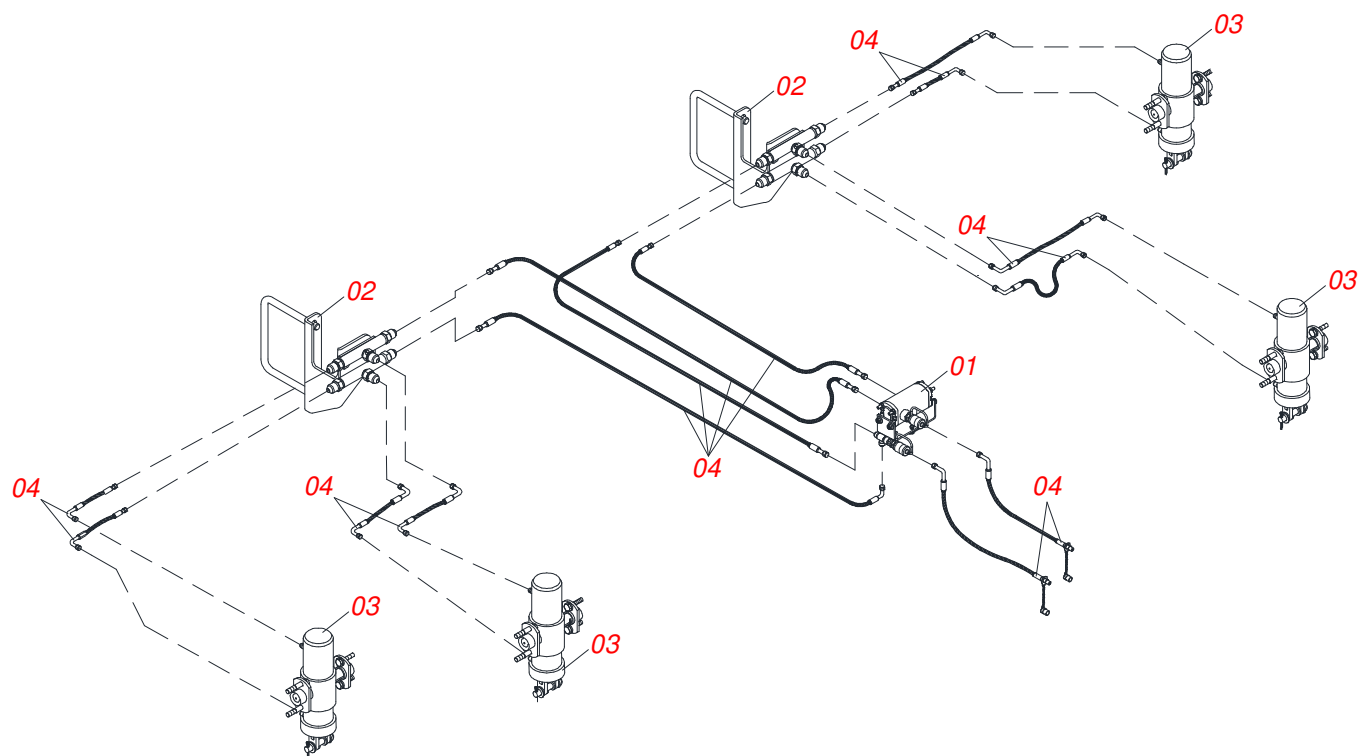 

Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	25	01
02	0511058871	FIXER HYDRAULIC HOSE ASSEMBLY	41	01
03	0511053368	HYDRAULIC CYLINDER ASSEMBLY	38	01
04	0511053449	HOSE KIT	42	01

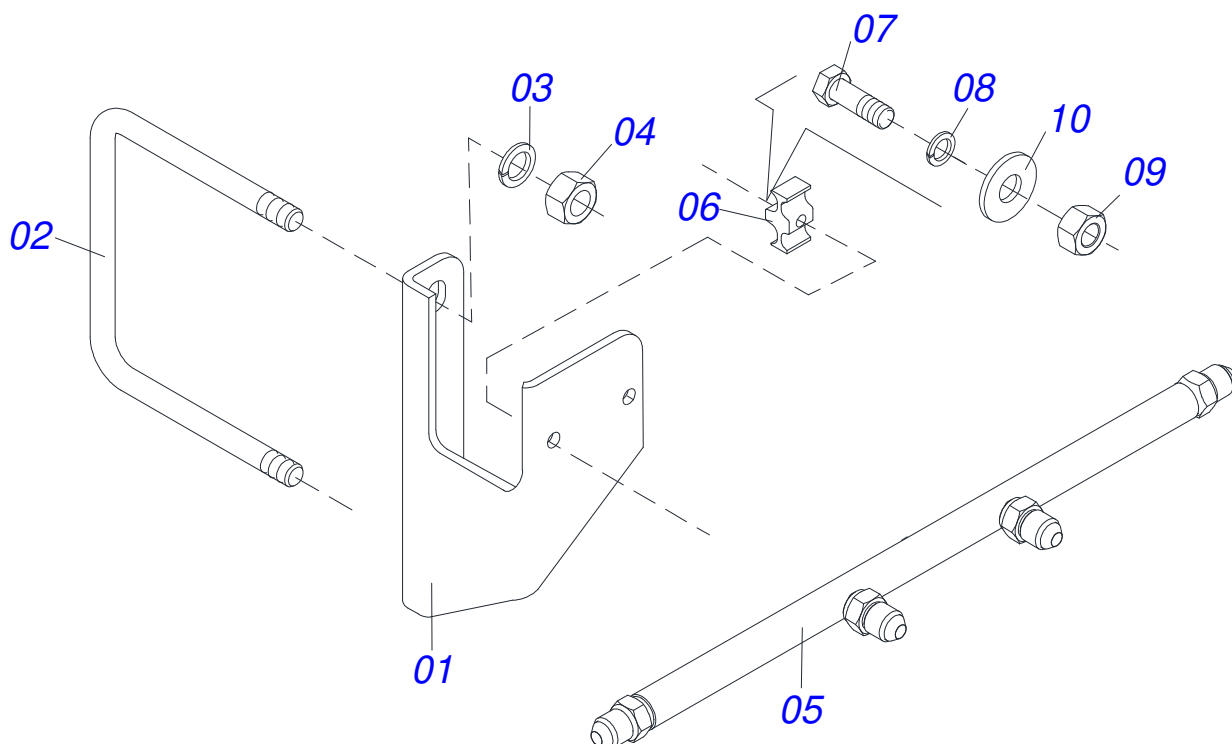 


Item	Code	Description	See page	QT
01	0561017277	OIL CONDUCTOR FIXER PLATE		04
02	0521010718	5/8" U BOLT		04
03	0503010027	5/8" SPRING WASHER		08
04	0503010013	5/8" NUT		08
05	0521064749	OIL CONDUCTOR		04
06	0502012702	BODY SUPPORT CLAMP		06
07	0503011268	3/8" X 2-1/2" BOLT		06
08	0503010025	3/8" SPRING WASHER		06
09	0503010026	3/8" NUT		06
10	0501012140	FLAT WASHER		04

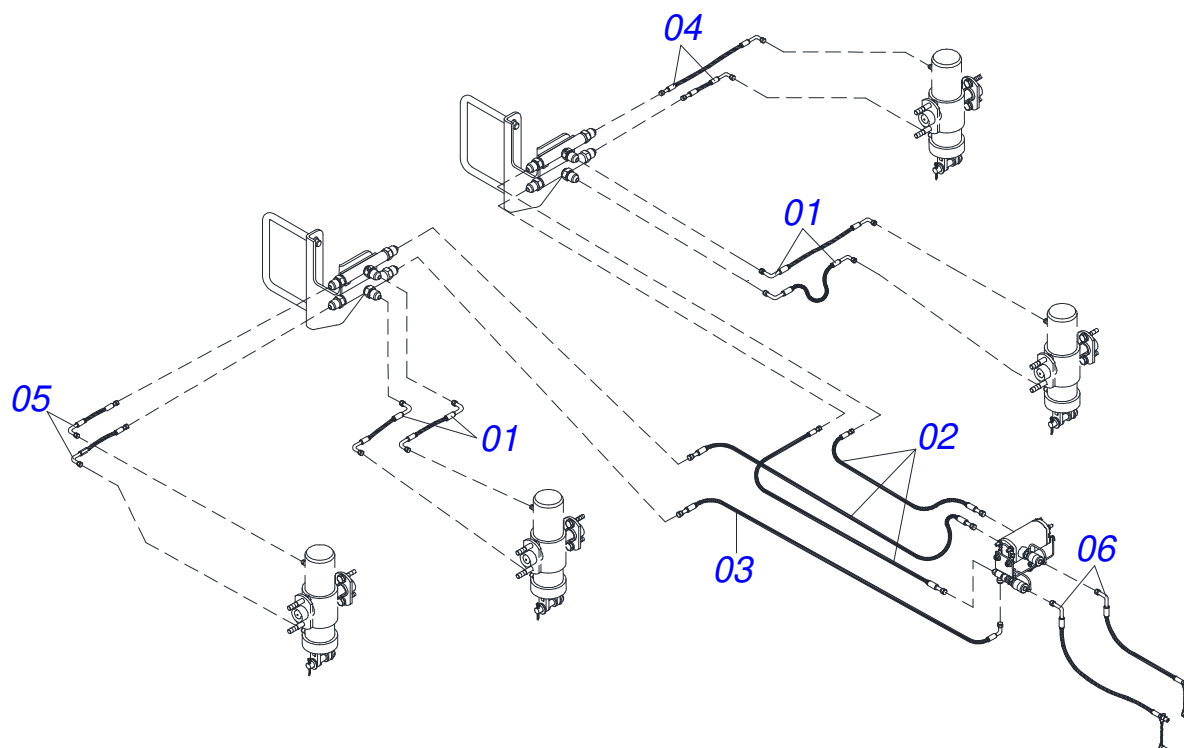 

Item	Code	Description	See page	QT
01	0501080760	3/8" X 500 TC-TC HOSE		08
02	0501080599	3/8 X 650 TC-TR HOSE		02
03	0501080328	3/8" X 29" TR-TC HOSE		02
04	0501080352	3/8" X 1400 TR-TR HOSE ASSY		03
05	0501080025	TR-TC HOSE ASSY		01
06	0501081073	HOSE 1/2 X 4200 TC-TM		02

RIGHT GEAR BOX ASSY

 0511050639

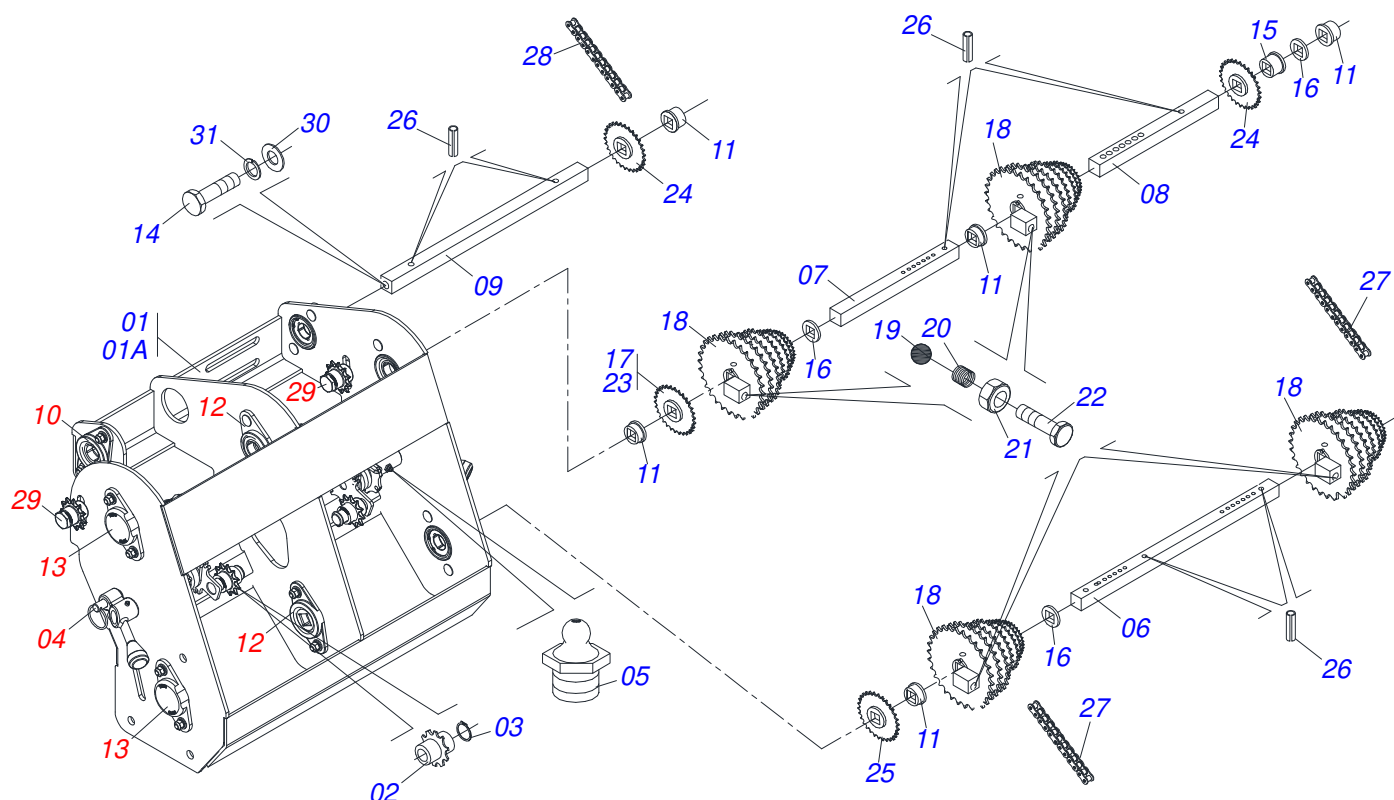


Item	Code	Description	See page	QT
01	0511050639	RIGHT GEAR BOX ASSY	43	01
01A	0501058212	SEMI MOUNTED RIGHT CHANGE	44	01
02	0503031805	11Z 1/2" GEAR		04
03	0503010302	501019 SEAL RING		04
04	0501048790	AXLE WITH LINK ASSY		02
05	0503010002	1800 GREASE FITTING		02
06	0551018209	DRIVING AXLE		01
07	0521018259	DRIVEN AXLE		01
08	0551018210	DRIVEN AXLE		01
09	0551018211	INTERM SHAFT		01
10	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	45	01
11	0503030303	SUPPORT WASHER		05
12	0501056443	BEARING ASSY GEAR BOX	46	02
13	0501056271	BEARING CLOSED	47	05
14	0503010256	3/8" X 3/4" BOLT		01
15	0503030275	AGRICULTURAL BEARING		01
16	0521018630	1.4" X SQUARE 0.8" WASHER		03
17	0511061822	25Z P0.5" GEAR SQUARE HOL		01
18	0502040868	GEAR CONE REPLACEMENT		04
19	0503012389	1/2 BALL		04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
21	0503010060	1/2" NUT		04
22	0503010395	1/2" X 1-1/4" BOLT		04
23	0521062072	33Z GEAR		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0511067501	26Z GEAR		01
26	0503010292	0.2" X 1.6" SPRING PIN		07
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0501054655	CHAIN TENSIONER ASSY	48	02
30	0501010984	FLAT WASHER		01




RIGHT GEAR BOX ASSY

0511050639


Item	Code	Description	See page	QT
31	0503010025	3/8" SPRING WASHER		01

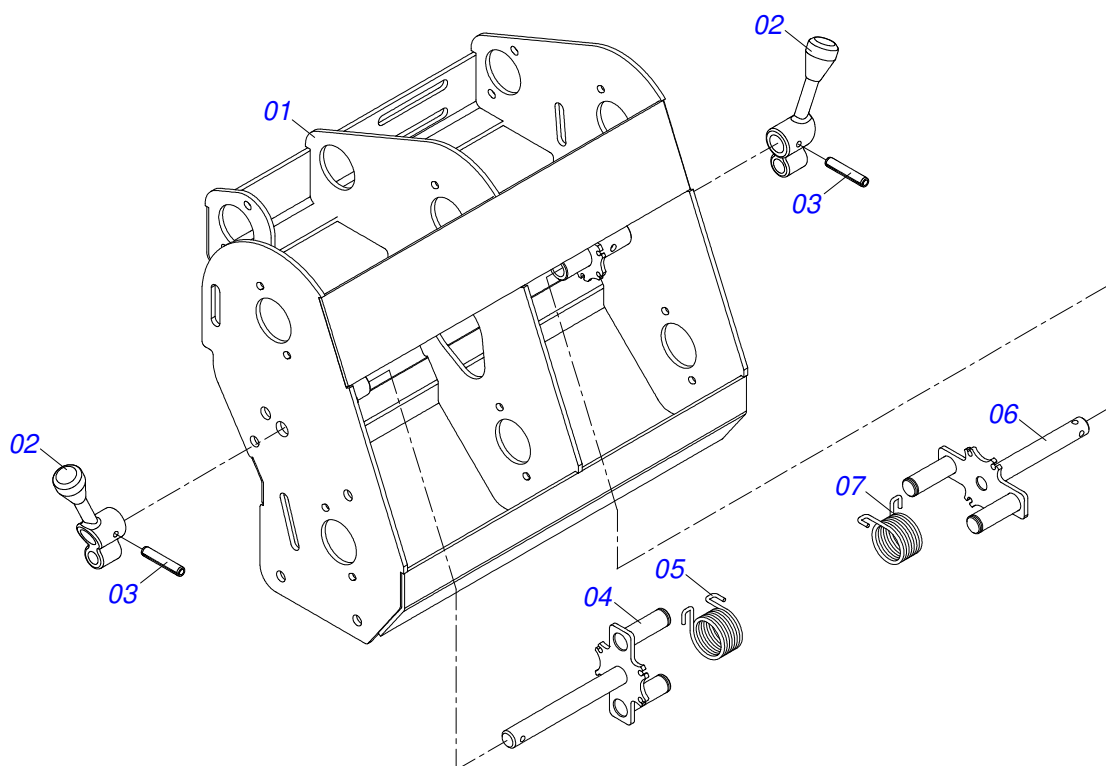 


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX	01	
02	0502011758	REAR TENSIONER LEVER	02	
03	0503010292	0.2" X 1.6" SPRING PIN	02	
04	0511061794	CHAIN TENSIONER	01	
05	0503031367	SPRING	01	
06	0511060392	CHAIN TENSIONER	01	
07	0503031366	RIGHT TWISTED SPRING RECAMBIO	01	

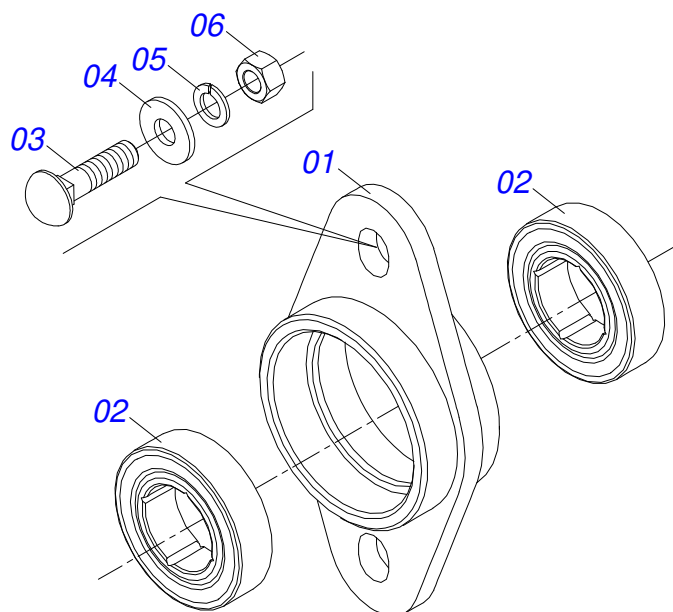 


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
05	0503010179	5/16" ZN SPRING WASHER		02
06	0503010337	5/16" NUT		02

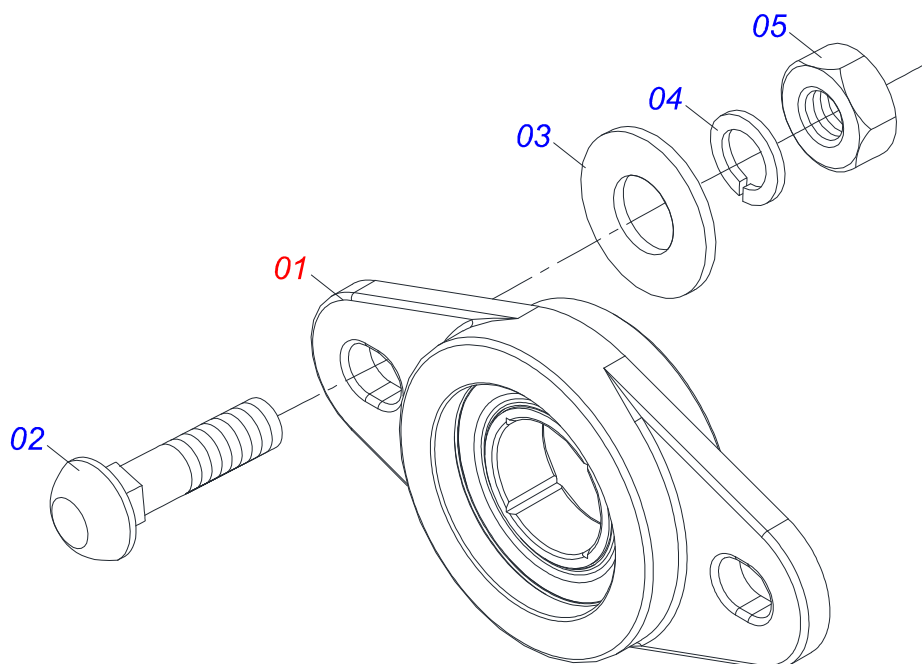 

Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	109	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

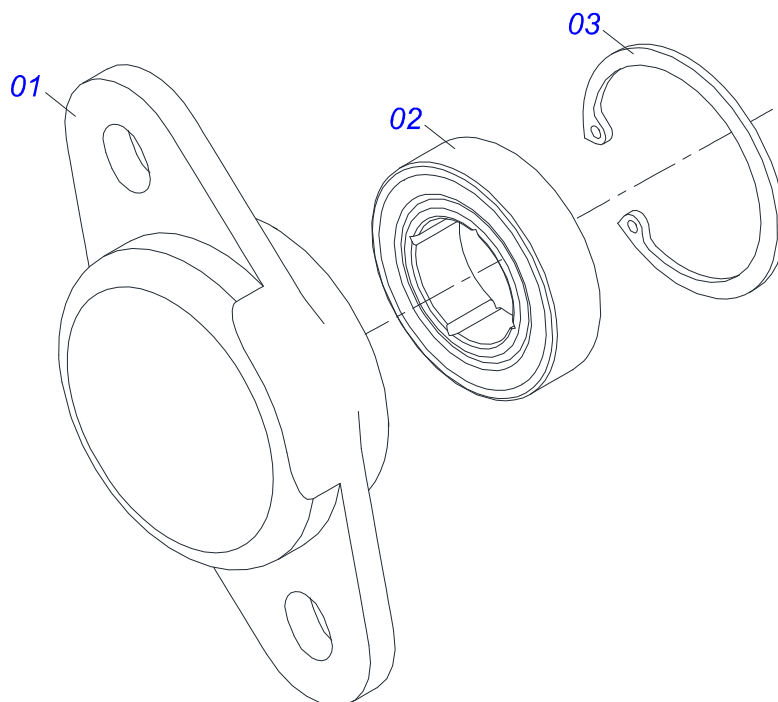 


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

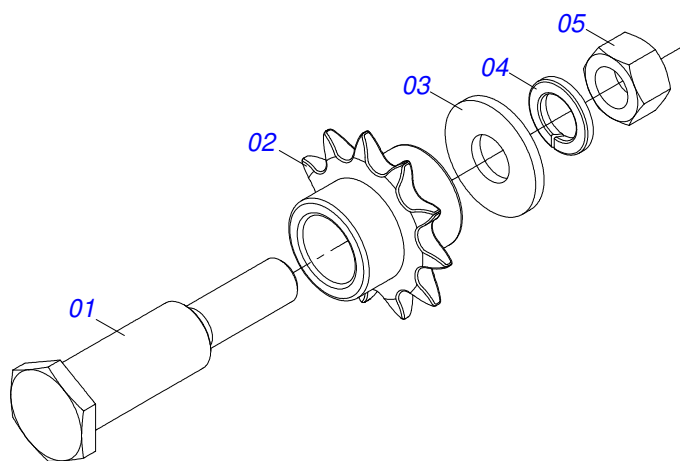 

Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

LEFT GEAR BOX ASSY

 0511050640

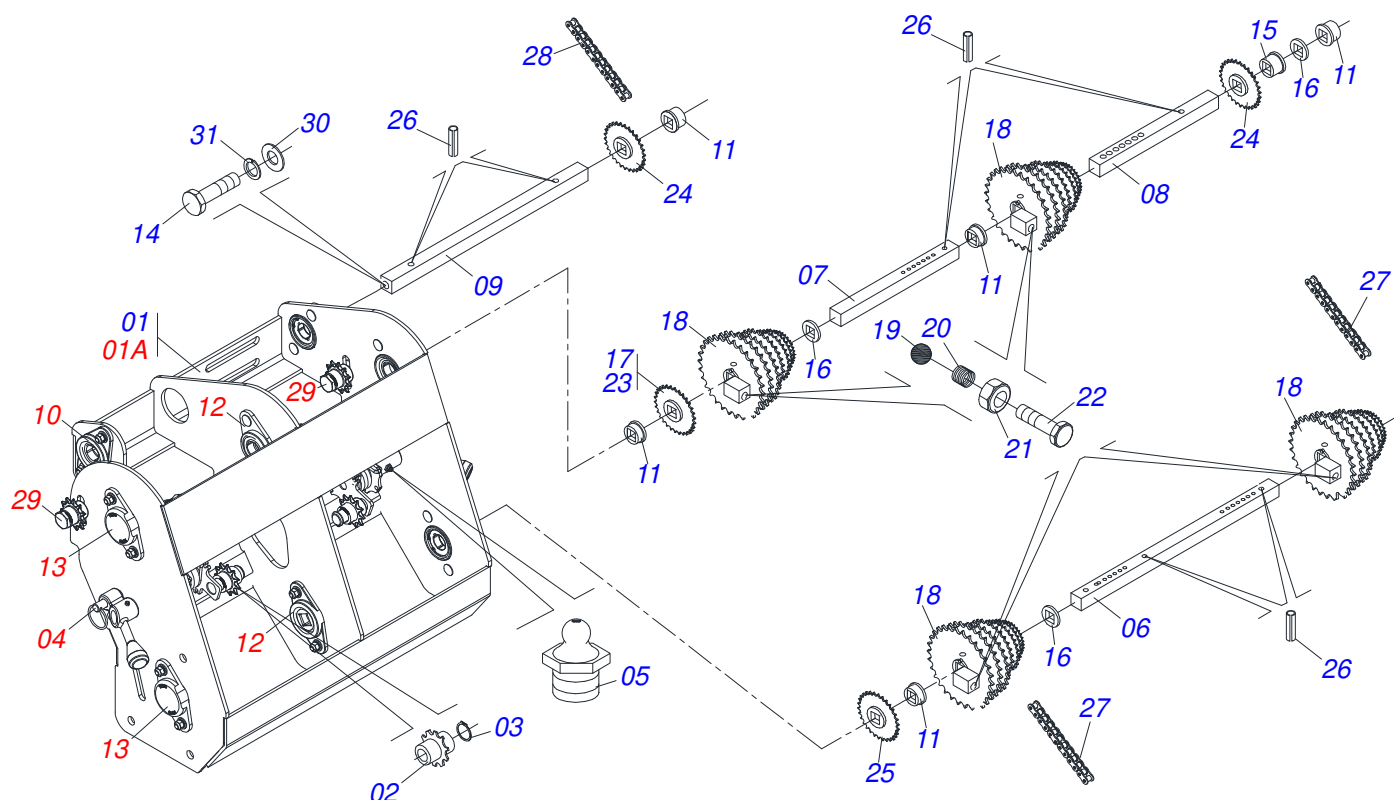


Item	Code	Description	See page	QT
01	0511050640	LEFT GEAR BOX ASSY	49	01
01A	0501058213	LH GEAR BOX	50	01
02	0503031805	11Z 1/2" GEAR		04
03	0503010302	501019 SEAL RING		04
04	0501048790	AXLE WITH LINK ASSY		02
05	0503010002	1800 GREASE FITTING		02
06	0551018209	DRIVING AXLE		01
07	0521018259	DRIVEN AXLE		01
08	0551018210	DRIVEN AXLE		01
09	0551018211	INTERM SHAFT		01
10	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	45	01
11	0503030303	SUPPORT WASHER		05
12	0501056443	BEARING ASSY GEAR BOX	46	02
13	0501056271	BEARING CLOSED	47	05
14	0503010256	3/8" X 3/4" BOLT		01
15	0503030275	AGRICULTURAL BEARING		01
16	0521018630	1.4" X SQUARE 0.8" WASHER		03
17	0511061822	25Z P0.5" GEAR SQUARE HOL		01
18	0502040868	GEAR CONE REPLACEMENT		04
19	0503012389	1/2 BALL		04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
21	0503010060	1/2" NUT		04
22	0503010395	1/2" X 1-1/4" BOLT		04
23	0521062072	33Z GEAR		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0511067501	26Z GEAR		01
26	0503010292	0.2" X 1.6" SPRING PIN		07
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0501054655	CHAIN TENSIONER ASSY	48	02
30	0501010984	FLAT WASHER		01



LEFT GEAR BOX ASSY

0511050640


Item	Code	Description	See page	QT
31	0503010025	3/8" SPRING WASHER		01

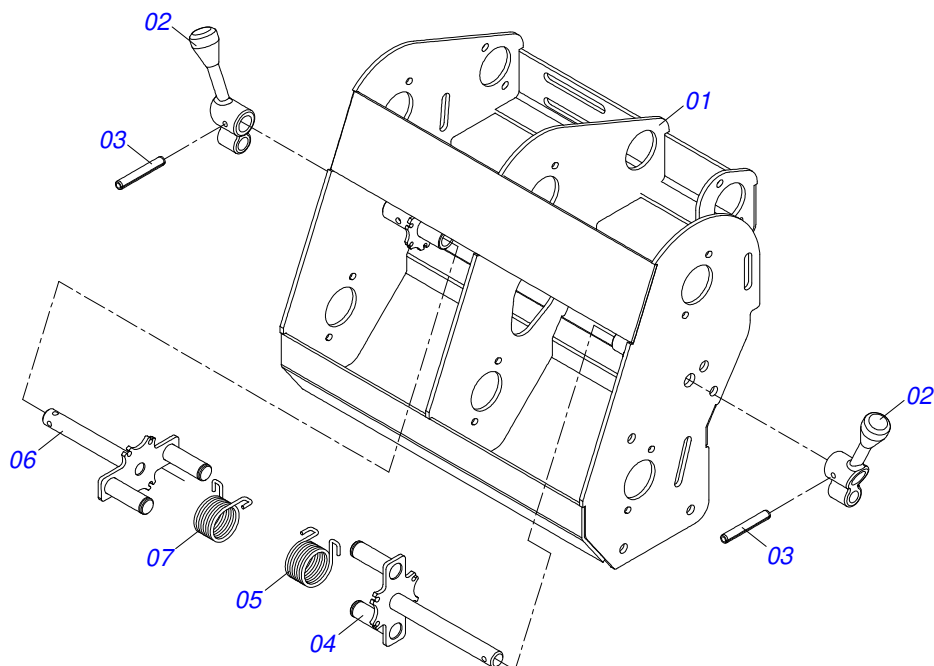 

Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

SET BOX FERTILIZER

 0511053666

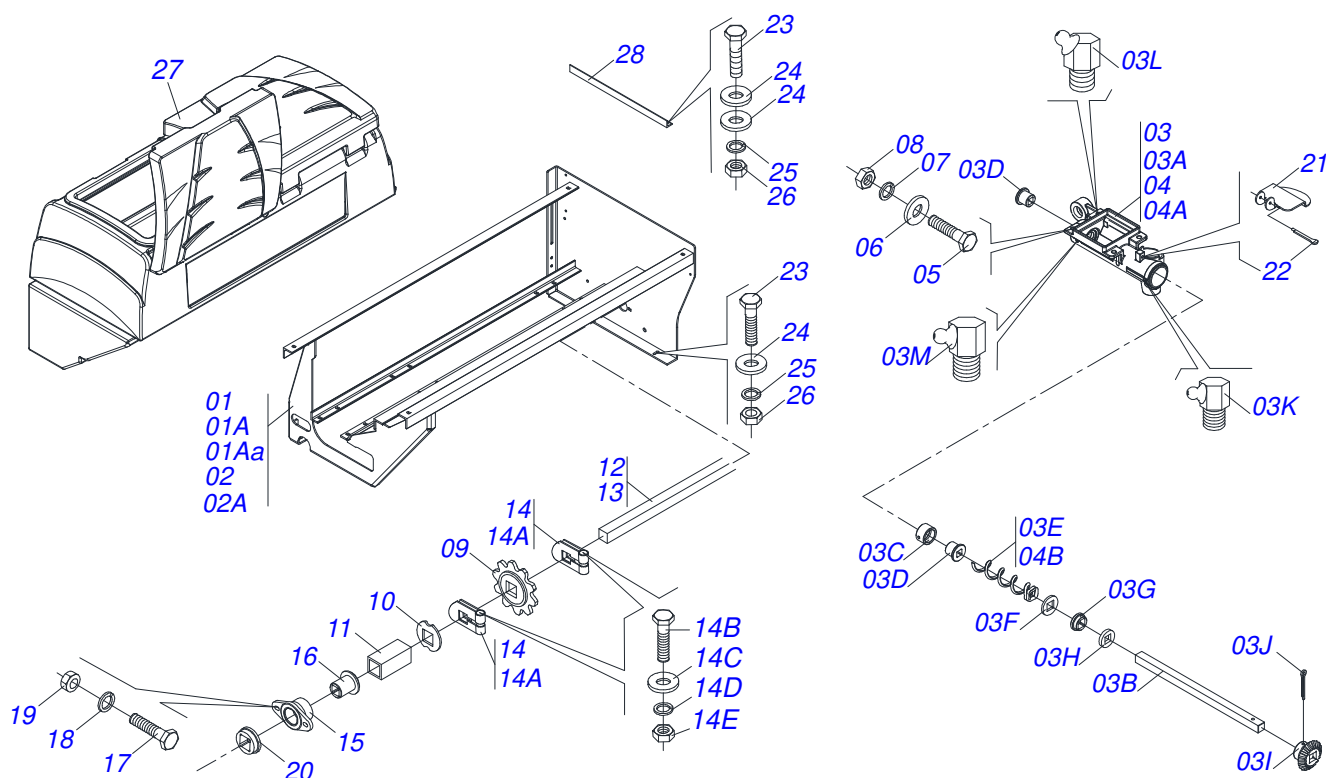

Item	Code	Description	See page	07 L
01	0511053666	SET BOX FERTILIZER	51	01
01A	0511050960	BOX SUPPORT DROIT ENGRAIS		01
01Aa	0521062311	FERTILIZER BEAM SUPPORT		01
02	0511050961	FERTILIZER LEFT BOX SUPPORT		01
02A	0521062310	FERTILIZER BEAM SUPPORT		01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2		04
03A	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		04
03B	0501019851	DISTRIBUTOR FERTILIZER AXLE		08
03C	0521010309	SLEEVE INTER		08
03D	0503030275	AGRICULTURAL BEARING		16
03E	0503031164	RIGHT HELICAL CONDUTOR		04
03F	0501010637	FLAT WASHER		08
03G	0503030303	SUPPORT WASHER		08
03H	0501013774	GREASE SEAL		08
03I	0502011412	18Z CONICAL GEAR		08
03J	0503010523	1/4\" X 2\" COTTERPIN		08
03K	0503011962	GREASE FITTING		08
03L	0503010003	1845 GREASE FITTING		08
03M	0503012826	CREASE FITTING		08
04	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2		04
04A	0501110676	SIDE FERTILIZER DISTRIBUTOR		04
04B	0503031165	LEFT HELICAL CONDUTOR		04
05	0503010751	C3/8\" X 1.1/4\" HEX BOLT G.5		32
06	0501010984	FLAT WASHER		32
07	0503011443	3/8\" SPRING WASHER		32
08	0503010026	3/8\" NUT		32
09	0511061759	22Z P12,70 FQ 3/4\" GEAR		02
10	0521014167	CONE LOCK		04
11	0551018055	22,65 X 60 SLEEVE		04
12	0561018740	SQUARE SHAFT		01
13	0561018739	SQUARE SHAFT		01


SET BOX FERTILIZER

0511053666

Item	Code	Description	See page	07 L
14	0501053788	Q3/4" FASTENER AXLE ASSY		04
14A	0521010691	AXLE FASTENER		04
14B	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		04
14C	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
14D	0503010143	1/4" SPRING WASHER		04
14E	0503010144	1/4" NUT		04
15	0501110392	SILO SUPPORT BEARING		02
16	0521012485	GEAR BOX BEARING AGRICUTURAL		02
17	0503010363	5/16" X 1" BOLT		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04
20	0503030303	SUPPORT WASHER		02
21	0571010590	FERTILIZER SIDE COVER		07
22	0503010257	1/8" X 1" COTTERPIN		07
23	0503010849	3/8" X 1-1/2" BOLT		16
24	0501010984	FLAT WASHER		24
25	0503010025	3/8" SPRING WASHER		16
26	0503010026	3/8" NUT		16
27	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		02
28	0571013223	ANGLE BAR		04


ASSEMBLY FERTILIZER BOX RIGHT / LEFT

 0511054296

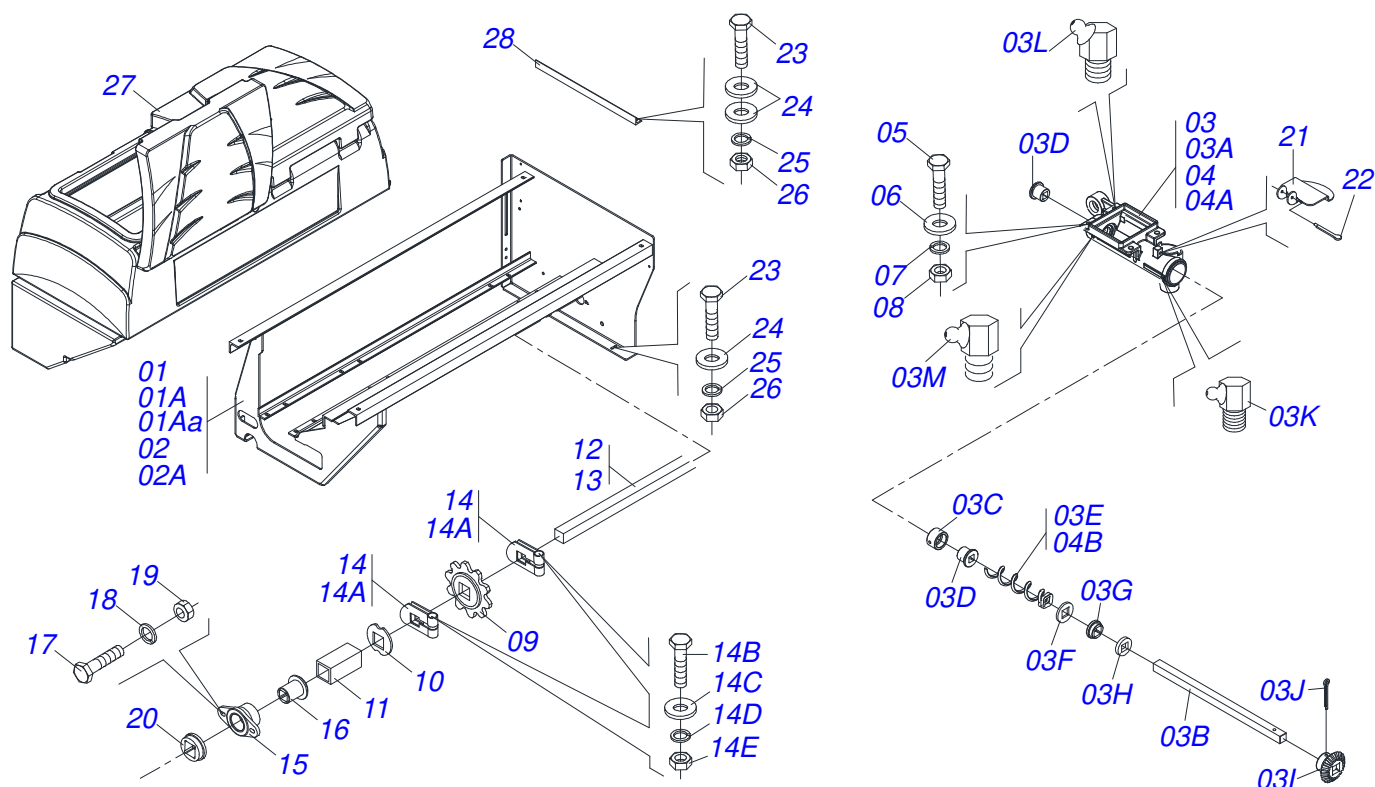

Item	Code	Description	See page	QT
01	0511054296	ASSEMBLY FERTILIZER BOX RIGHT / LEFT	52	01
01A	0511053111	LH FERTILIZER BOX SUPPORT		01
01Aa	0521063955	FERTILIZER BEAM SUPPORT		01
02	0511053112	LEFT FERTILIZER BOX SUPPORT		01
02A	0521063956	LFT FERTILIZER BEAM SUPPORT		01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2		05
03A	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
03B	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03C	0521010309	SLEEVE INTER		01
03D	0503030275	AGRICULTURAL BEARING		02
03E	0503031164	RIGHT HELICAL CONDUTOR		01
03F	0501010637	FLAT WASHER		01
03G	0503030303	SUPPORT WASHER		01
03H	0501013774	GREASE SEAL		01
03I	0502011412	18Z CONICAL GEAR		01
03J	0503010523	1/4\" X 2\" COTTERPIN		01
03K	0503011962	GREASE FITTING		01
03L	0503010003	1845 GREASE FITTING		01
03M	0503012826	CREASE FITTING		01
04	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2		05
04A	0501110676	SIDE FERTILIZER DISTRIBUTOR		05
04B	0503031165	LEFT HELICAL CONDUTOR		05
05	0503010751	C3/8\" X 1.1/4\" HEX BOLT G.5		40
06	0501010984	FLAT WASHER		40
07	0503011443	3/8\" SPRING WASHER		40
08	0503010026	3/8\" NUT		40
09	0511061759	22Z P12,70 FQ 3/4\" GEAR		02
10	0521014167	CONE LOCK		04
11	0551018055	22,65 X 60 SLEEVE		04
12	0551018213	3/4\" X 1830 SQUARE SHAFT		01
13	0561018365	SQUARE SHAFT		01

Item	Code	Description	See page	QT
14	0501053788	Q3/4" FASTENER AXLE ASSY		04
14A	0521010691	AXLE FASTENER		01
14B	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
14C	0511017303	FLAT WASHER		02
14D	0503010143	1/4" SPRING WASHER		01
14E	0503010144	1/4" NUT		01
15	0501110392	SILO SUPPORT BEARING		02
16	0521012485	GEAR BOX BEARING AGRICUTURAL		02
17	0503010363	5/16" X 1" BOLT		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04
20	0503030303	SUPPORT WASHER		02
21	0571010590	FERTILIZER SIDE COVER		10
22	0503010257	1/8" X 1" COTTERPIN		10
23	0503010849	3/8" X 1-1/2" BOLT		16
24	0501010984	FLAT WASHER		24
25	0503010025	3/8" SPRING WASHER		16
26	0503010026	3/8" NUT		16
27	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		02
28	0571013223	ANGLE BAR		04

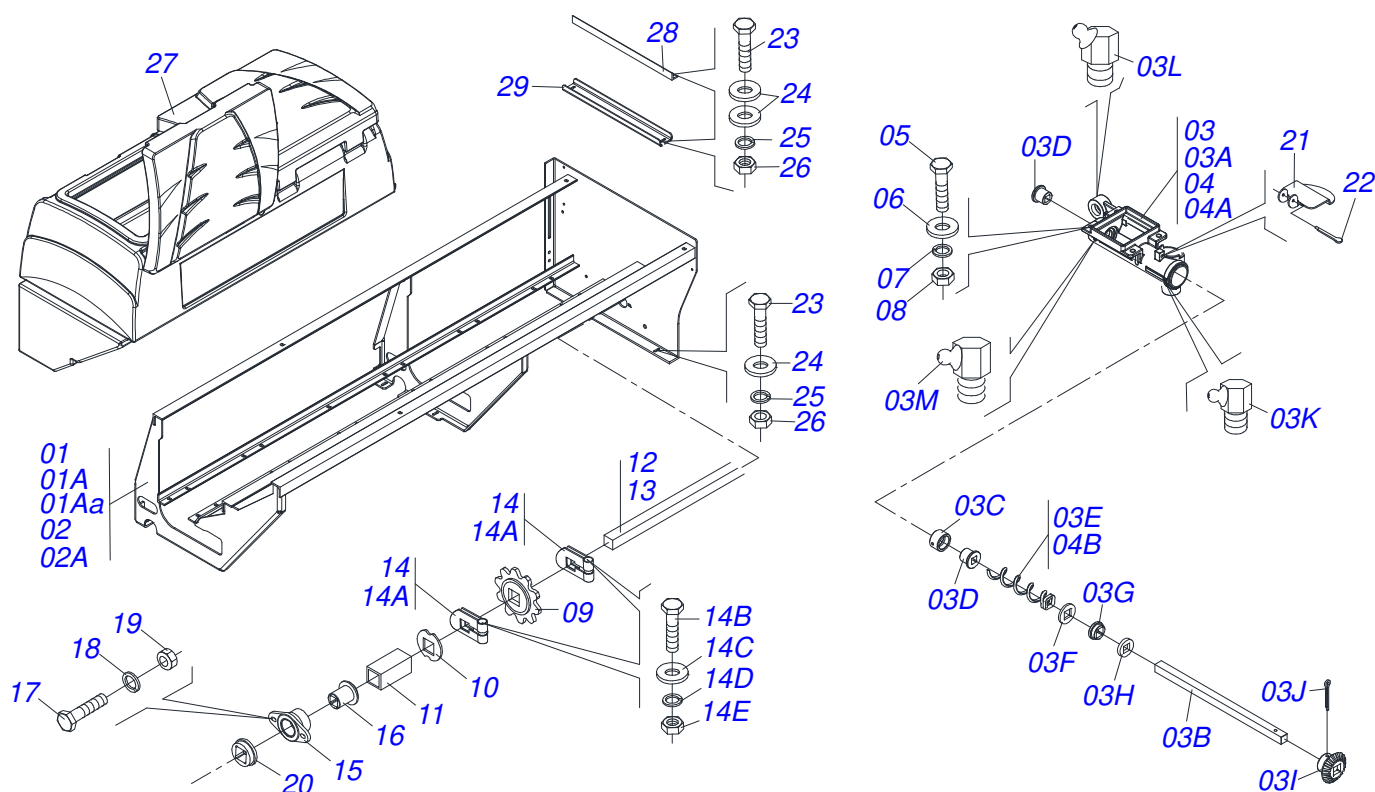 

Item	Code	Description	See page	11 L
01	0511053352	SET BOX FERTILIZER	53	01
01A	0511050392	BOX SUPPORT RIGHT FERTILIZER		01
01Aa	0521061871	RH FERTILIZER SILO SUPORT ASSY		01
02	0511050391	FERTILIZER LEFT BOX SUPPORT		01
02A	0521061872	LH FERTILIZER SILO SUPORT ASSY		01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2		06
03A	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		06
03B	0501019851	DISTRIBUTOR FERTILIZER AXLE		12
03C	0521010309	SLEEVE INTER		12
03D	0503030275	AGRICULTURAL BEARING		24
03E	0503031164	RIGHT HELICAL CONDUTOR		06
03F	0501010637	FLAT WASHER		12
03G	0503030303	SUPPORT WASHER		12
03H	0501013774	GREASE SEAL		12
03I	0502011412	18Z CONICAL GEAR		12
03J	0503010523	1/4" X 2" COTTERPIN		12
03K	0503011962	GREASE FITTING		12
03L	0503010003	1845 GREASE FITTING		12
03M	0503012826	CREASE FITTING		12
04	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2		06
04A	0501110676	SIDE FERTILIZER DISTRIBUTOR		06
04B	0503031165	LEFT HELICAL CONDUTOR		06
05	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		48
06	0501010984	FLAT WASHER		48
07	0503011443	3/8" SPRING WASHER		48
08	0503010026	3/8" NUT		48
09	0511061759	22Z P12,70 FQ 3/4" GEAR		02
10	0521014167	CONE LOCK		04
11	0551018055	22,65 X 60 SLEEVE		04
12	0551018198	SQUARE SHAFT		01
13	0551018198	SQUARE SHAFT		01


SET BOX FERTILIZER

0511053352

Item	Code	Description	See page	11 L
14	0501053788	Q3/4" FASTENER AXLE ASSY		04
14A	0521010691	AXLE FASTENER		04
14B	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		04
14C	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
14D	0503010143	1/4" SPRING WASHER		04
14E	0503010144	1/4" NUT		04
15	0501110392	SILO SUPPORT BEARING		02
16	0521012485	GEAR BOX BEARING AGRICUTURAL		02
17	0503010363	5/16" X 1" BOLT		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04
20	0503030303	SUPPORT WASHER		02
21	0571010590	FERTILIZER SIDE COVER		12
22	0503010257	1/8" X 1" COTTERPIN		12
23	0503010849	3/8" X 1-1/2" BOLT		20
24	0501010984	FLAT WASHER		28
25	0503010025	3/8" SPRING WASHER		20
26	0503010026	3/8" NUT		20
27	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		03
28	0571013223	ANGLE BAR		02
29	0571013224	STRINGER FIXING CASH FERTILIZER		02

SET BOX FERTILIZER

 0511053455

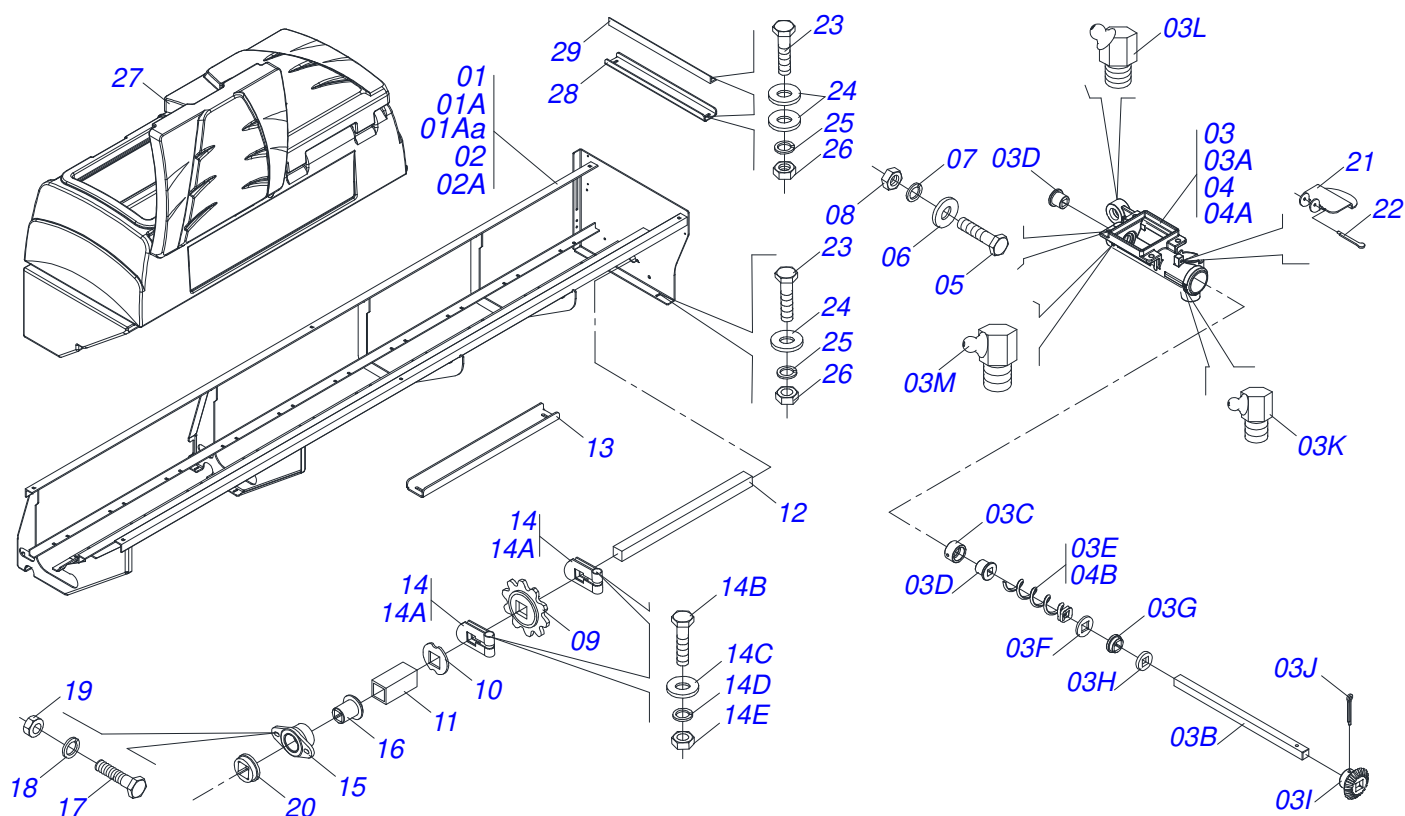


Item	Code	Description	See page	15 L
01	0511053455	SET BOX FERTILIZER	54	01
01A	0511050641	RH FERTILIZER BOX SUPPORT		01
01Aa	0521062052	RH FERTILIZER SILO SUPORT ASSY		01
02	0511050642	LEFT FERTILIZER BOX SUPPORT		01
02A	0521062051	LH FERTILIZER SILO SUPORT ASSY		01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2		08
03A	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		08
03B	0501019851	DISTRIBUTOR FERTILIZER AXLE		16
03C	0521010309	SLEEVE INTER		16
03D	0503030275	AGRICULTURAL BEARING		32
03E	0503031164	RIGHT HELICAL CONDUTOR		08
03F	0501010637	FLAT WASHER		16
03G	0503030303	SUPPORT WASHER		16
03H	0501013774	GREASE SEAL		16
03I	0502011412	18Z CONICAL GEAR		16
03J	0503010523	1/4" X 2" COTTERPIN		16
03K	0503011962	GREASE FITTING		16
03L	0503010003	1845 GREASE FITTING		16
03M	0503012826	CREASE FITTING		16
04	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2		08
04A	0501110676	SIDE FERTILIZER DISTRIBUTOR		08
04B	0503031165	LEFT HELICAL CONDUTOR		08
05	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		64
06	0501010984	FLAT WASHER		64
07	0503011443	3/8" SPRING WASHER		64
08	0503010026	3/8" NUT		64
09	0511061759	22Z P12,70 FQ 3/4" GEAR		02
10	0521014167	CONE LOCK		04
11	0551018055	22,65 X 60 SLEEVE		04
12	0561018585	SQUARE SHAFT		02
13	0571013224	STRINGER FIXING CASH FERTILIZER		04

SET BOX FERTILIZER

0511053455

Item	Code	Description	See page	15 L
14	0501053788	Q3/4" FASTENER AXLE ASSY		04
14A	0521010691	AXLE FASTENER		04
14B	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		04
14C	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
14D	0503010143	1/4" SPRING WASHER		04
14E	0503010144	1/4" NUT		04
15	0501110392	SILO SUPPORT BEARING		02
16	0521012485	GEAR BOX BEARING AGRICUTURAL		02
17	0503010363	5/16" X 1" BOLT		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04
20	0503030303	SUPPORT WASHER		02
21	0571010590	FERTILIZER SIDE COVER		15
22	0503010257	1/8" X 1" COTTERPIN		15
23	0503010849	3/8" X 1-1/2" BOLT		24
24	0501010984	FLAT WASHER		36
25	0503010025	3/8" SPRING WASHER		24
26	0503010026	3/8" NUT		24
27	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		04
28	0571016020	STRINGER FIXING CASH FERTILIZER		02
29	0571013223	ANGLE BAR		02

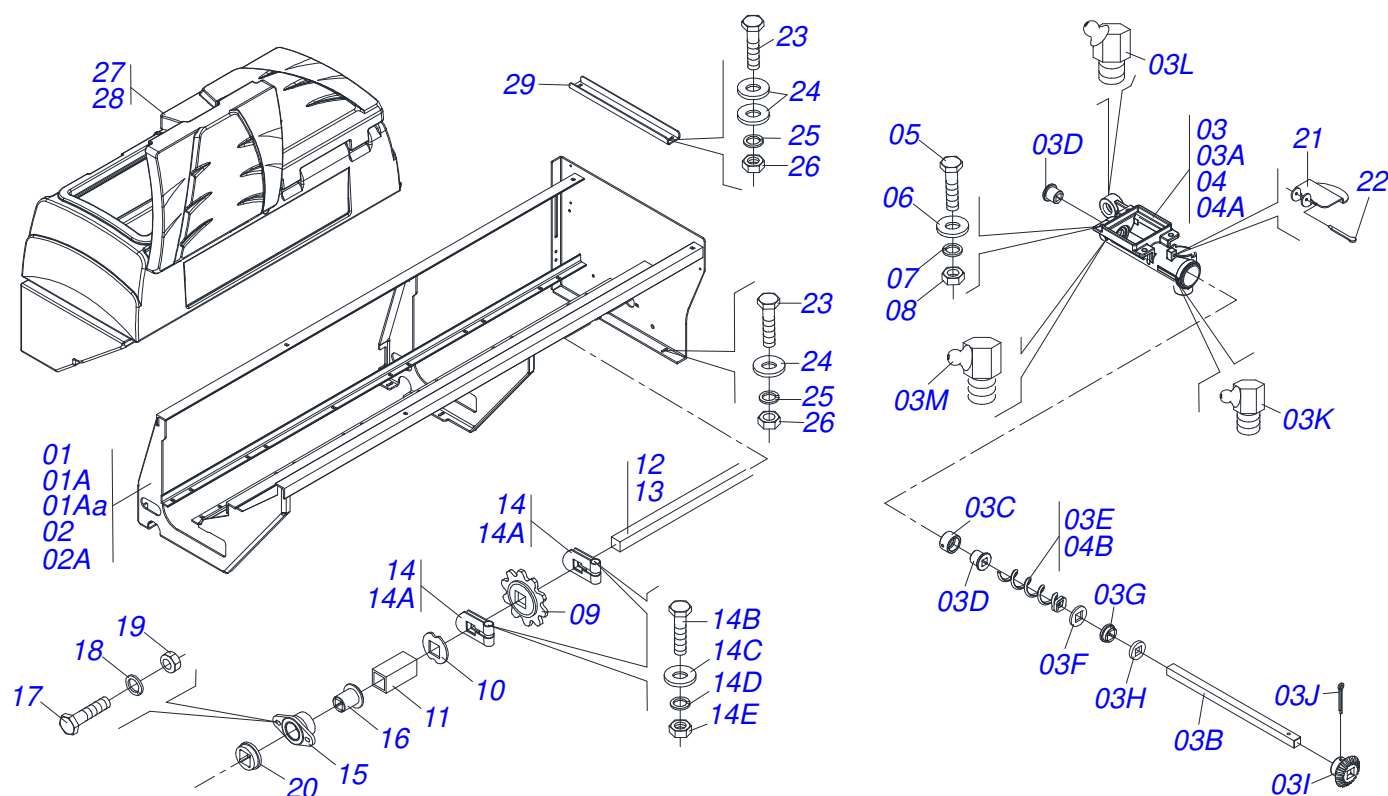 


Item	Code	Description	See page	13 L
01	0511053374	SET BOX FERTILIZER COP F 600 13	55	01
01A	0511050891	BOX SUPPORT RIGHT FERTILIZER		01
01Aa	0521062274	RH FERTILIZER SILO SUPORT ASSY		01
02	0511050892	FERTILIZER LEFT BOX SUPPORT		01
02A	0521062273	LH FERTILIZER SILO SUPORT ASSY		01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2		07
03A	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		07
03B	0501019851	DISTRIBUTOR FERTILIZER AXLE		14
03C	0521010309	SLEEVE INTER		14
03D	0503030275	AGRICULTURAL BEARING		28
03E	0503031164	RIGHT HELICAL CONDUTOR		07
03F	0501010637	FLAT WASHER		14
03G	0503030303	SUPPORT WASHER		14
03H	0501013774	GREASE SEAL		14
03I	0502011412	18Z CONICAL GEAR		14
03J	0503010523	1/4" X 2" COTTERPIN		14
03K	0503011962	GREASE FITTING		14
03L	0503010003	1845 GREASE FITTING		14
03M	0503012826	CREASE FITTING		14
04	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2		07
04A	0501110676	SIDE FERTILIZER DISTRIBUTOR		07
04B	0503031165	LEFT HELICAL CONDUTOR		07
05	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		56
06	0501010984	FLAT WASHER		56
07	0503011443	3/8" SPRING WASHER		56
08	0503010026	3/8" NUT		56
09	0511061759	22Z P12,70 FQ 3/4" GEAR		02
10	0521014167	CONE LOCK		04
11	0551018055	22,65 X 60 SLEEVE		04
12	0561018585	SQUARE SHAFT		01
13	0571013224	STRINGER FIXING CASH FERTILIZER		02

Item	Code	Description	See page	13 L
14	0501053788	Q3/4" FASTENER AXLE ASSY		04
14A	0521010691	AXLE FASTENER		04
14B	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		04
14C	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
14D	0503010143	1/4" SPRING WASHER		04
14E	0503010144	1/4" NUT		04
15	0501110392	SILO SUPPORT BEARING		02
16	0521012485	GEAR BOX BEARING AGRICUTURAL		02
17	0503010363	5/16" X 1" BOLT		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04
20	0503030303	SUPPORT WASHER		02
21	0571010590	FERTILIZER SIDE COVER		14
22	0503010257	1/8" X 1" COTTERPIN		14
23	0503010849	3/8" X 1-1/2" BOLT		16
24	0501010984	FLAT WASHER		24
25	0503010025	3/8" SPRING WASHER		16
26	0503010026	3/8" NUT		16
27	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		02
28	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		01
29	0571013223	ANGLE BAR		02

PLATFORM SET

 
0511053667

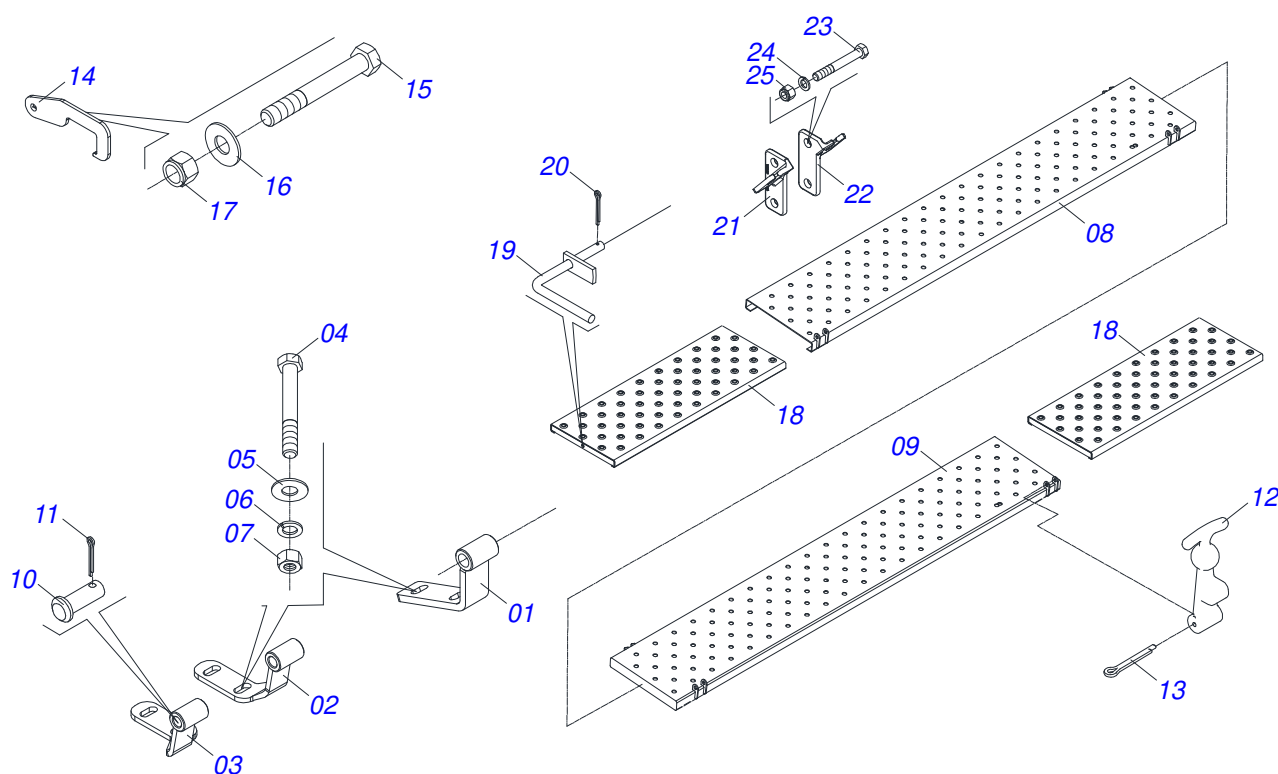

Item	Code	Description	See page	07 L
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0511069725	RIGHT PLATFORM	01	
09	0521062318	LEFT PLATFORM	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

PLATFORM ASSEMBLY

 
0511054297

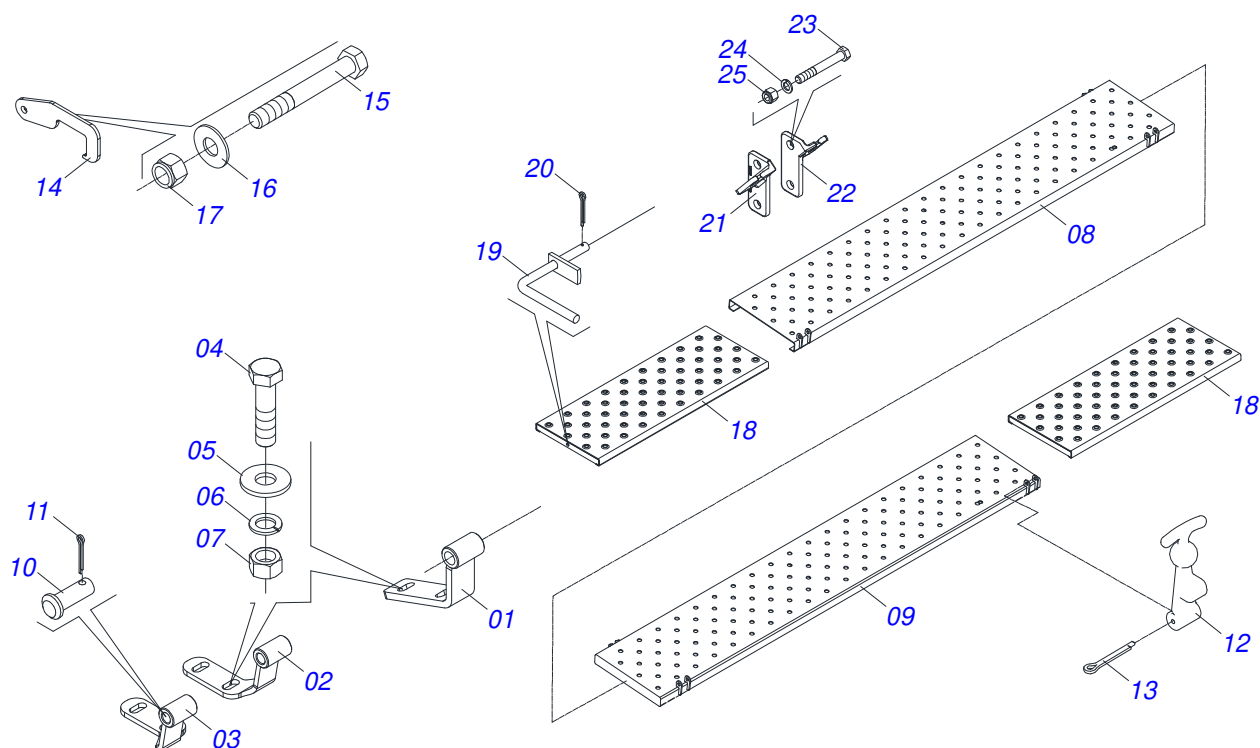

Item	Code	Description	See page	QT
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0521063947	PLATFORM RIGHT	01	
09	0521063944	LEFT PLATFORM	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503014007	1/2" X 1-1/4" BOLT	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

PLATFORM SET

 
0511053353

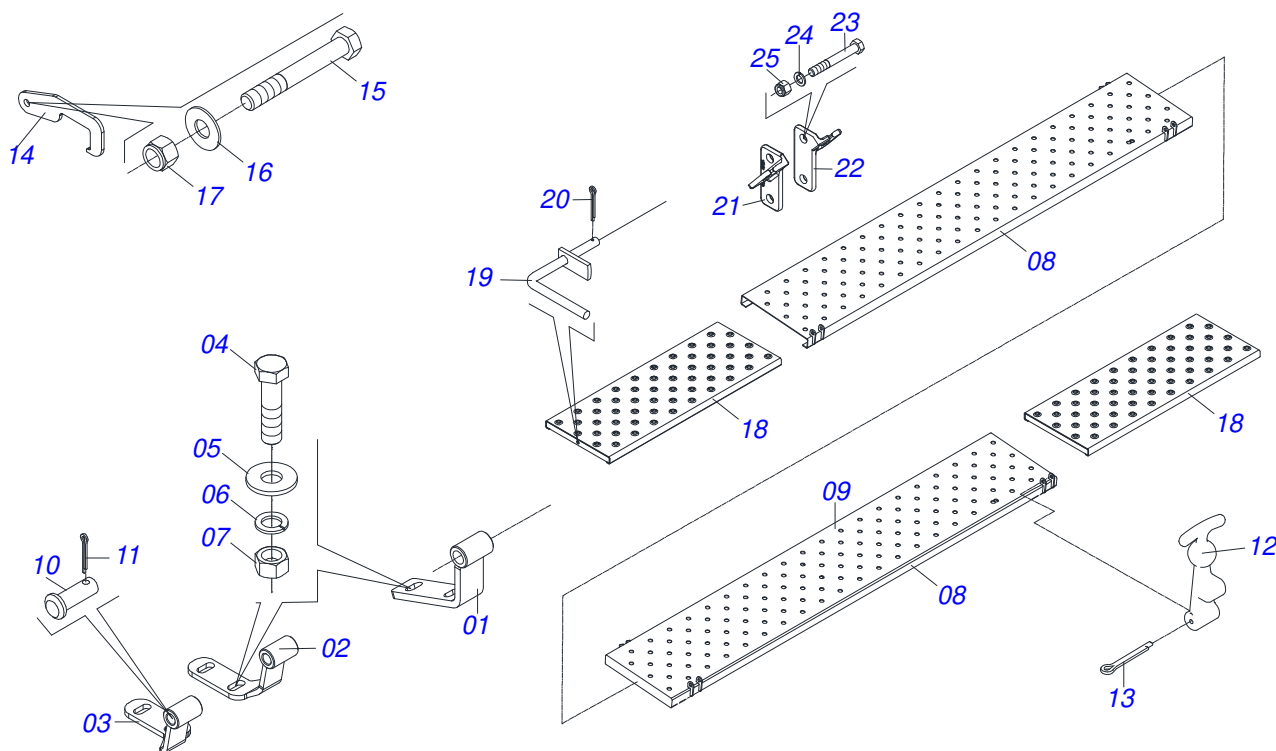

Item	Code	Description	See page	11 L
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0511069718	PLATFORM RIGHT PST4 11	01	
09	0521062324	PLATFORM LEFT PST4 11	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503014007	1/2" X 1-1/4" BOLT	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

PLATFORM SET

 
0511053339

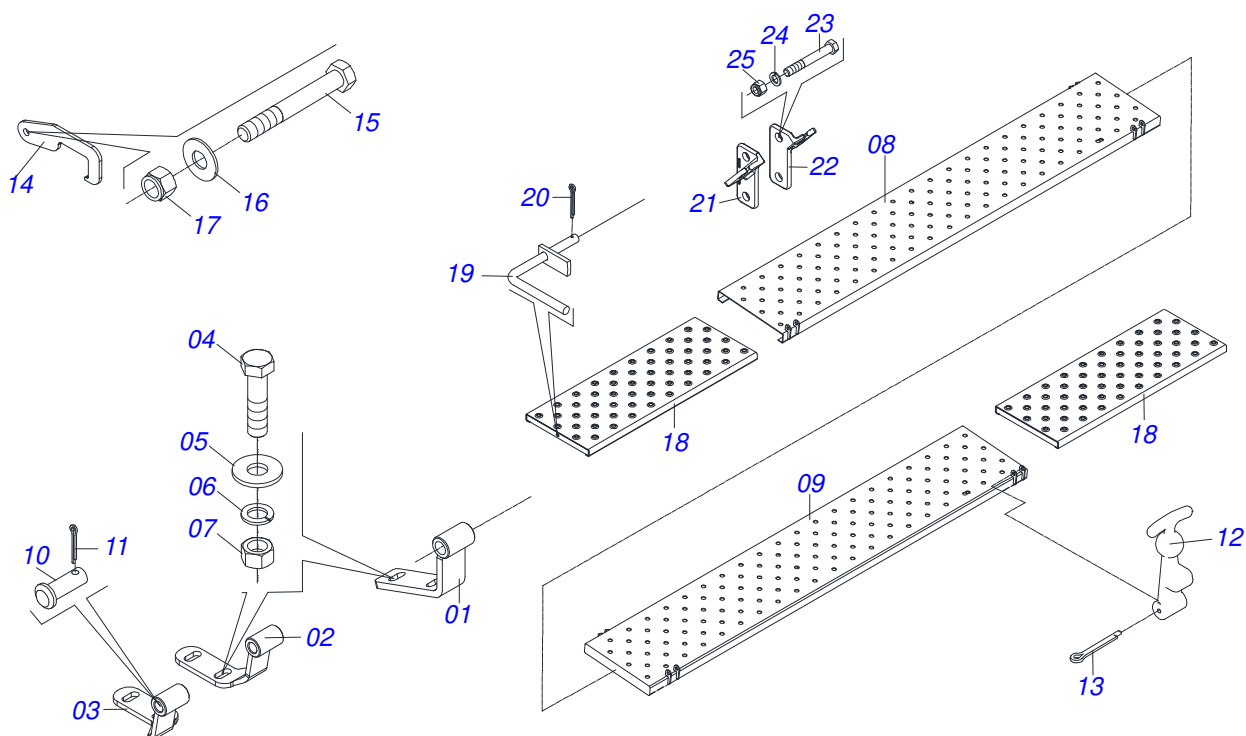


Item	Code	Description	See page	13 L
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0521062091	PLATFORM LEFT COP FLEX 13	01	
09	0521062092	PLATFORM RIGHT	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

PLATFORM SET

 
0511053453

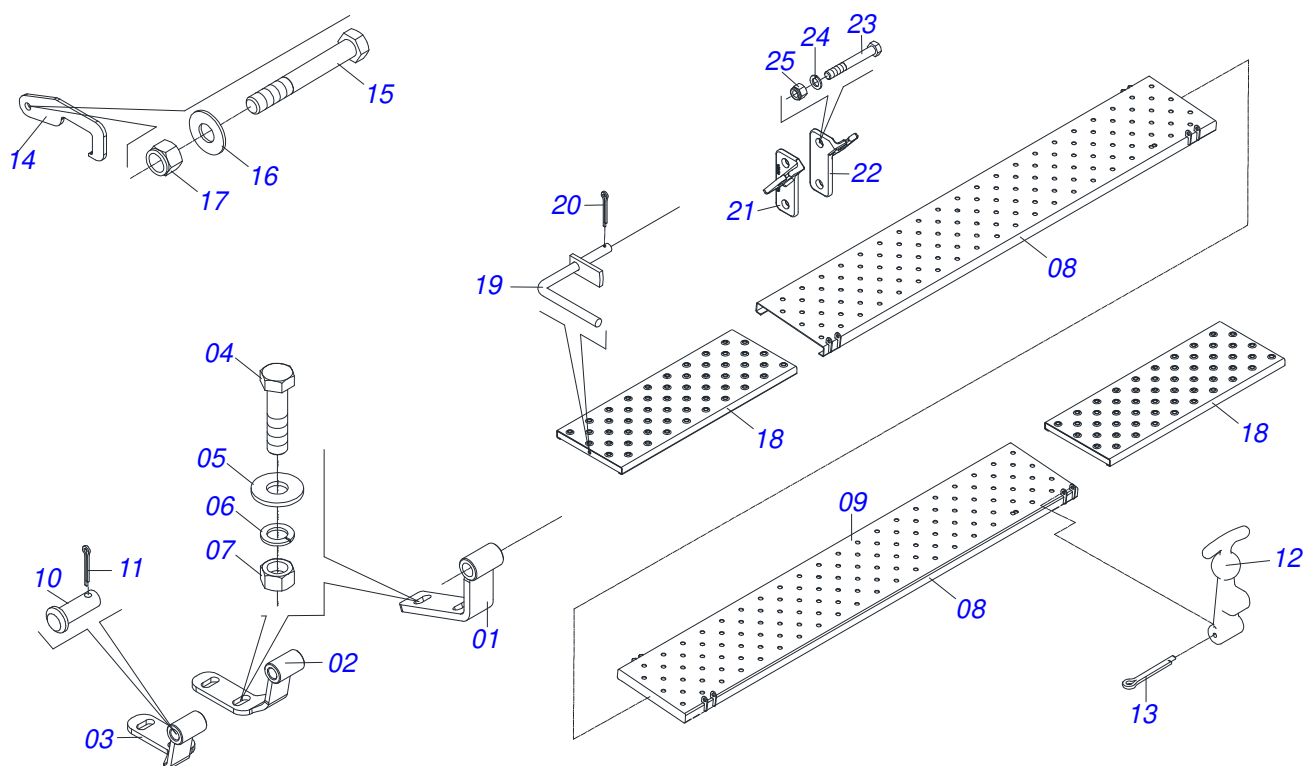


Item	Code	Description	See page	15 L
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0521062059	LEFT PLATFORM COP FLEX 15	01	
09	0521062058	RIGHT PLATFORM COP FLEX 15	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

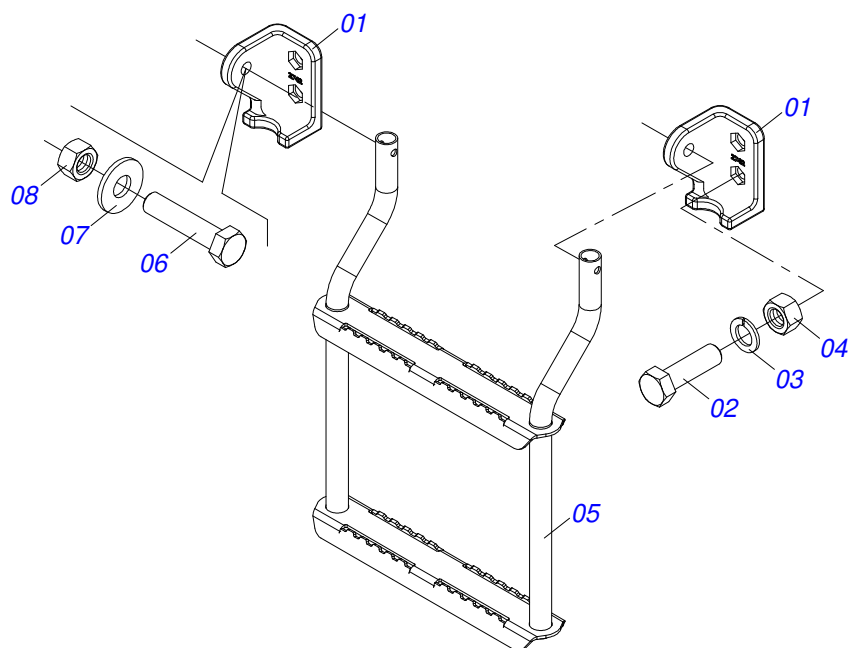 


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER		04
02	0503010237	3/8" X 1" BOLT		08
03	0503010025	3/8" SPRING WASHER		08
04	0503010026	3/8" NUT		08
05	0511069636	LADDER		02
06	0503011179	3/8" X 2-1/4" BOLT		04
07	0501010984	FLAT WASHER		04
08	0503013357	3/8" SELF-ADJUSTING NUT		04

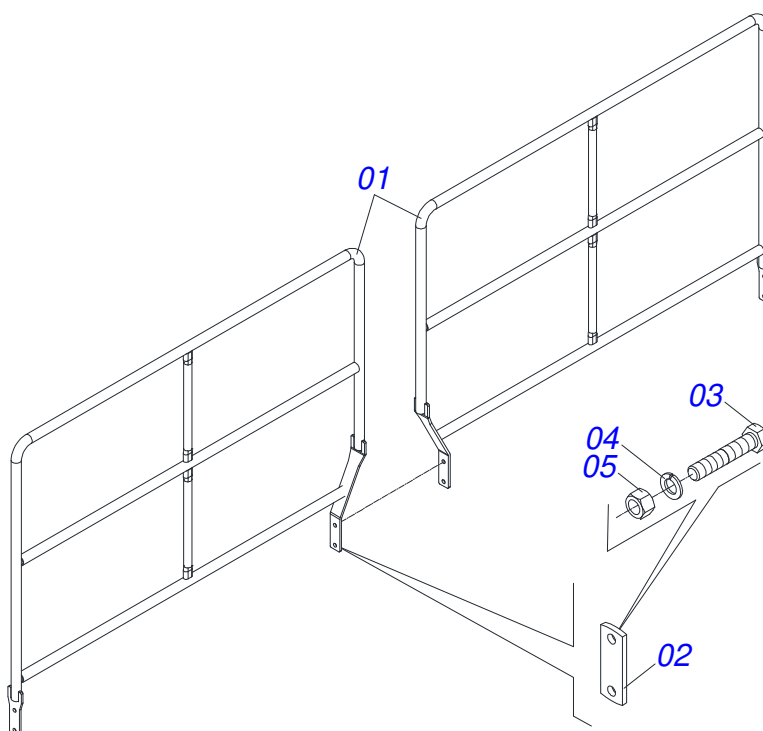 


Item	Code	Description	See page	07 L
01	0511069635	HANDRAIL		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

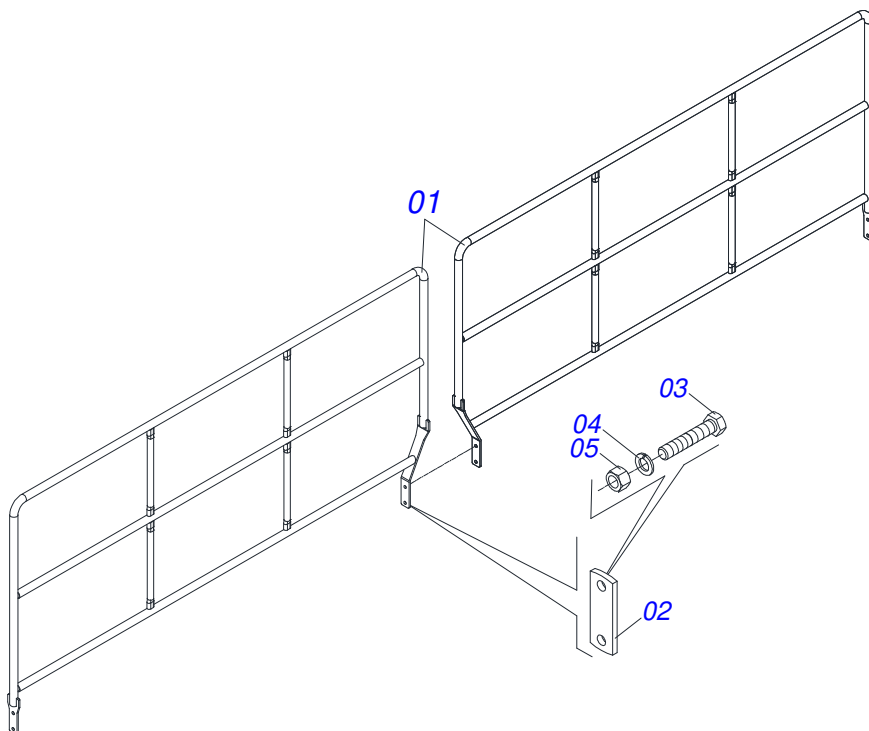 


Item	Code	Description	See page	QT
01	0521063948	JOINT HANDRAIL SET		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

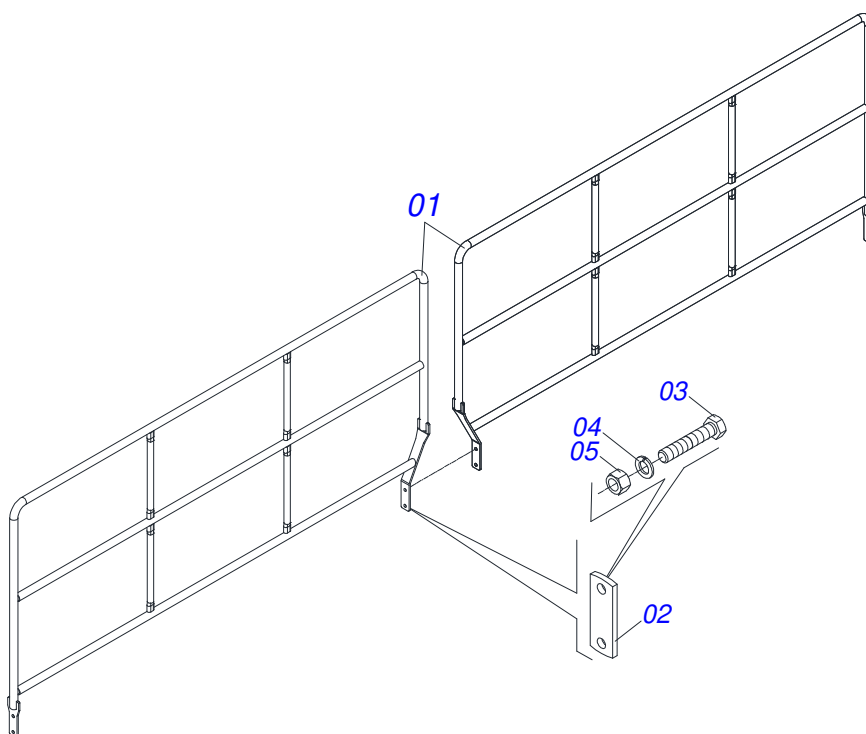 


Item	Code	Description	See page	11 L
01	0511069660	HANDRAIL		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

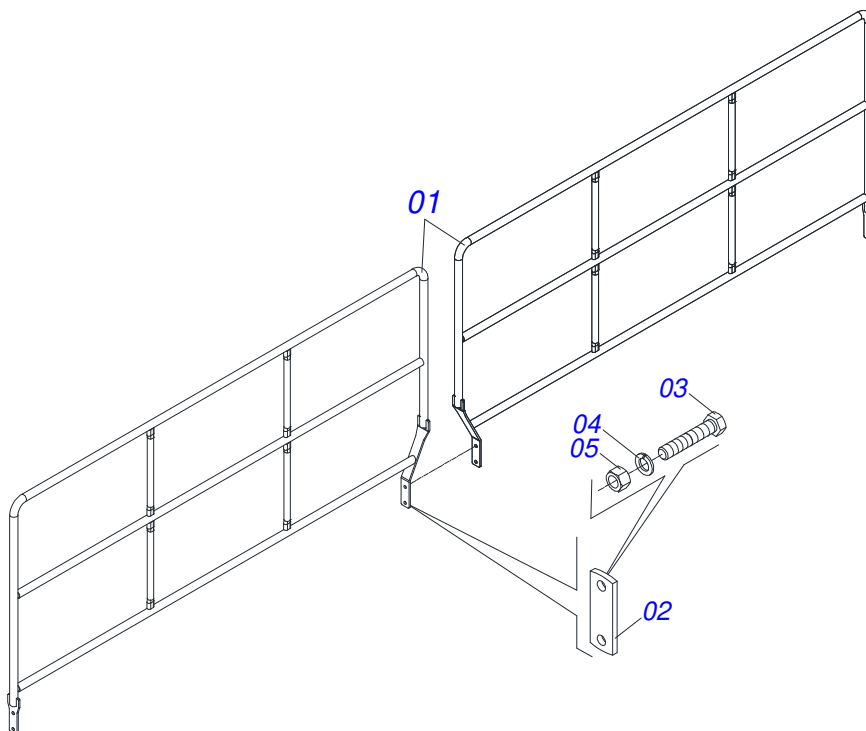 

Item	Code	Description	See page	13 L
01	0521061171	HANDRAIL		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

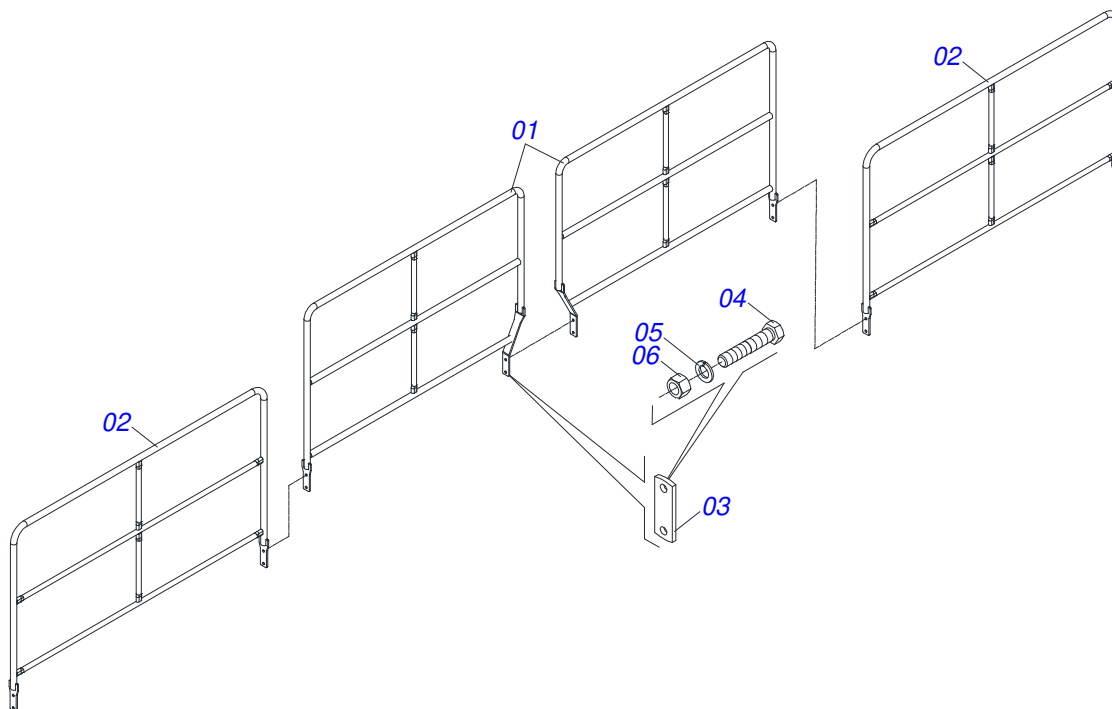 

Item	Code	Description	See page	15 L
01	0521064080	CENTRAL CHAIN		02
02	0521064101	SIDE CHAIN (1850)		02
03	0521018290	RANDRAIL HOLDER		06
04	0503010395	1/2" X 1-1/4" BOLT		08
05	0503010019	1/2" SPRING WASHER		08
06	0503010060	1/2" NUT		08

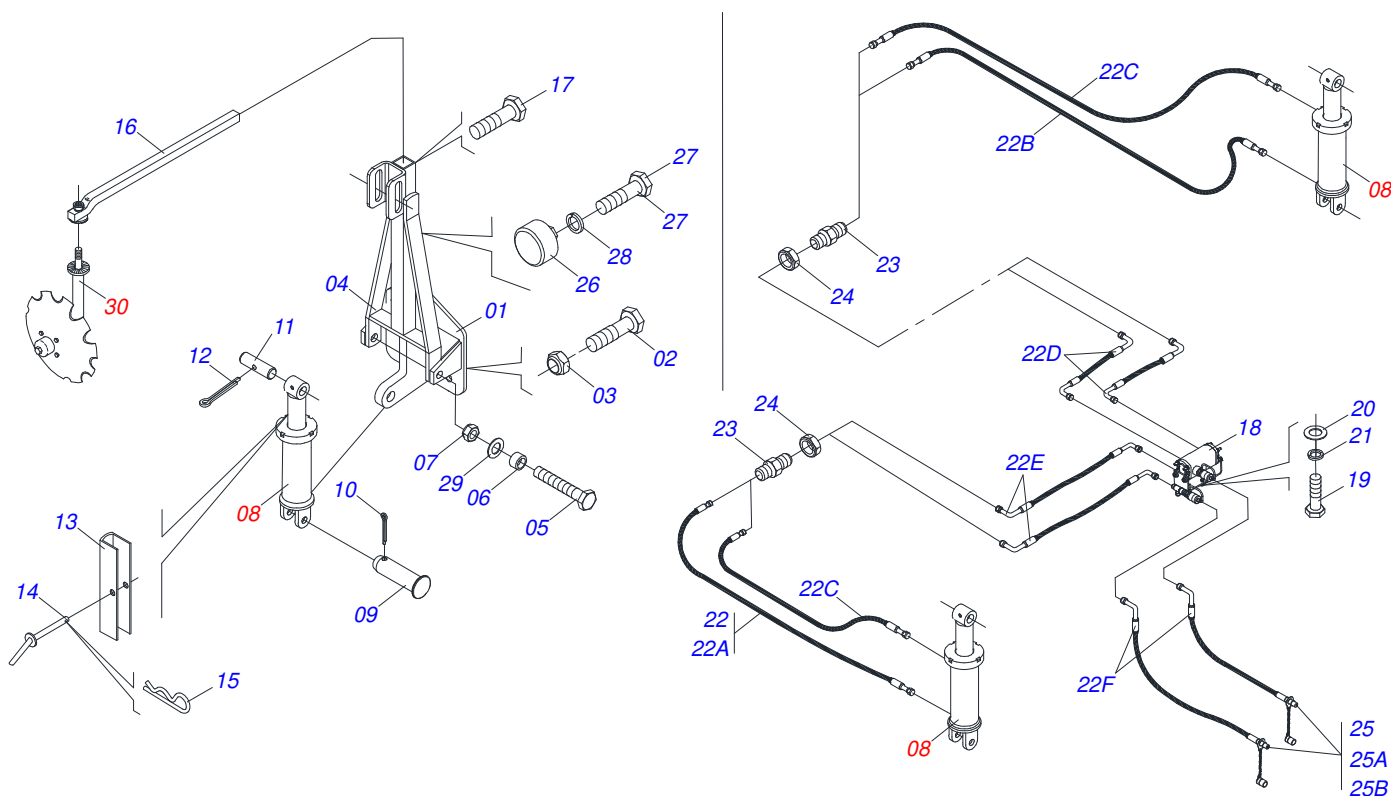 


Item	Code	Description	See page	11 L
01	0511065449	ROW MARKER ARM SUPPORT		02
02	0501010098	3/4" UNC BOLT		08
03	0503011255	3/4" LOCK NUT		08
04	0501069470	ROW MARKER ARM		02
05	0503011067	5/8" X 2-1/2" BOLT		04
06	0521010479	SLEEVE ARTICULATION		04
07	0503012795	5/8" HEX SELF ADJUSTING NUT		04
08	0511058449	HYDRAULIC CYLINDER	69	02
09	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
10	0503010571	1/4" X 1.1/2 COTTERPIN		02
11	0511015779	1" X 4.2" AXLE		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
14	0501068994	0.3" X 3.1" LOCK PIN		02
15	0503030168	HAIR PIN		02
16	0501069643	890 TURNBUCKLE		02
17	0503010962	5/8" X 1-1/4" BOLT		04
18	0501054649	SEQUENTIAL VALVE ASSY		01
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0501010984	FLAT WASHER		02
21	0503010025	3/8" SPRING WASHER		02
22	0511057082	HOSE KIT SYSTEM HYDRAULIC		01
22A	0501080635	3/8" X 19" TR-TR HOSE		02
22B	0501080124	HOSE 3/8 X 900 TR-TC		04
22C	0501080105	TR-TR HOSE ASSY		02
22D	0501080675	HOSE 3/8 X 1000 TC-TC 180G		02
22E	0501080301	HOSE 3/8 X 1300 TC-TC		02
22F	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
23	0541012165	3/4" NIPPLE		04
24	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		04
25	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	35	02

**MARKER HIDRAULICO**

 0511053306

Item	Code	Description	See page	11 L
26	0503011070	BEATER		02
27	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
28	0503010019	1/2" SPRING WASHER		02
29	0501012140	FLAT WASHER		04
30	0501050633	MARKER DISC ASSY LINE	71	01

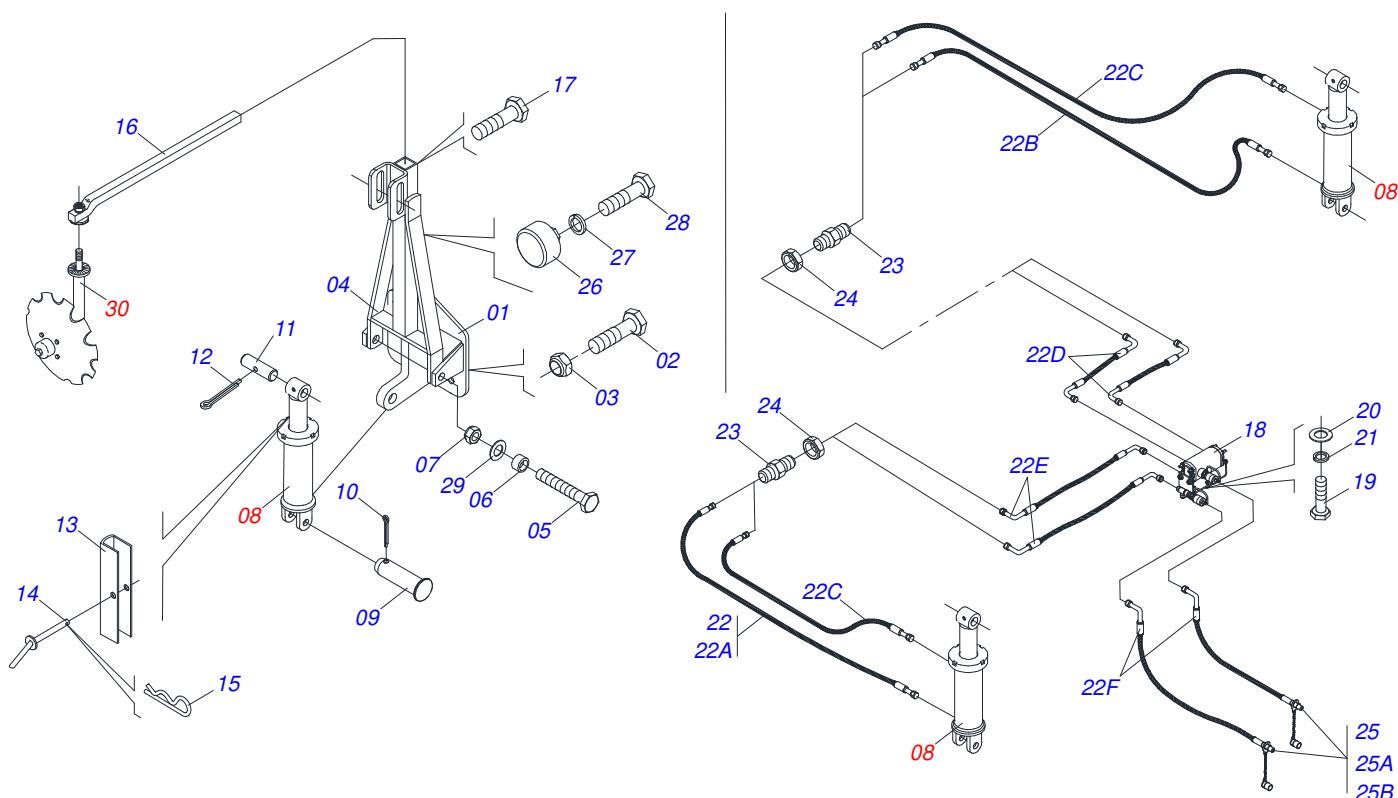

Item	Code	Description	See page	13 L
01	0511065449	ROW MARKER ARM SUPPORT		02
02	0501010098	3/4" UNC BOLT		08
03	0503011255	3/4" LOCK NUT		08
04	0511061811	ROW MARKER ARM		02
05	0503011067	5/8" X 2-1/2" BOLT		04
06	0521010479	SLEEVE ARTICULATION		04
07	0503012795	5/8" HEX SELF ADJUSTING NUT		04
08	0511058449	HYDRAULIC CYLINDER	69	02
09	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
10	0503010571	1/4" X 1.1/2 COTTERPIN		02
11	0511015779	1" X 4.2" AXLE		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
14	0501068994	0.3" X 3.1" LOCK PIN		02
15	0503030168	HAIR PIN		02
16	0501066949	1235 TURNBUCKLE		02
17	0503010962	5/8" X 1-1/4" BOLT		04
18	0501054649	SEQUENTIAL VALVE ASSY		01
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0501010984	FLAT WASHER		02
21	0503010025	3/8" SPRING WASHER		02
22	0511057082	HOSE KIT SYSTEM HYDRAULIC		01
22A	0501080635	3/8" X 19" TR-TR HOSE		02
22B	0501080124	HOSE 3/8 X 900 TR-TC		04
22C	0501080105	TR-TR HOSE ASSY		02
22D	0501080675	HOSE 3/8 X 1000 TC-TC 180G		02
22E	0501080301	HOSE 3/8 X 1300 TC-TC		02
22F	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
23	0541012165	3/4" NIPPLE		04
24	0511018387	3/4" X 0.3 ADJUSTMENT VALVE NUT		04
25	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	35	02


**MARKER HIDRAULICO**

 0511053287


Item	Code	Description	See page	13 L
25A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
25B	0503011882	MALE QUICK COUPLER CAP		01
26	0503011070	BEATER		02
27	0503010019	1/2" SPRING WASHER		02
28	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
29	0501012140	FLAT WASHER		04
30	0501050633	MARKER DISC ASSY LINE	71	01

HYDRAULIC CYLINDER


0511058449

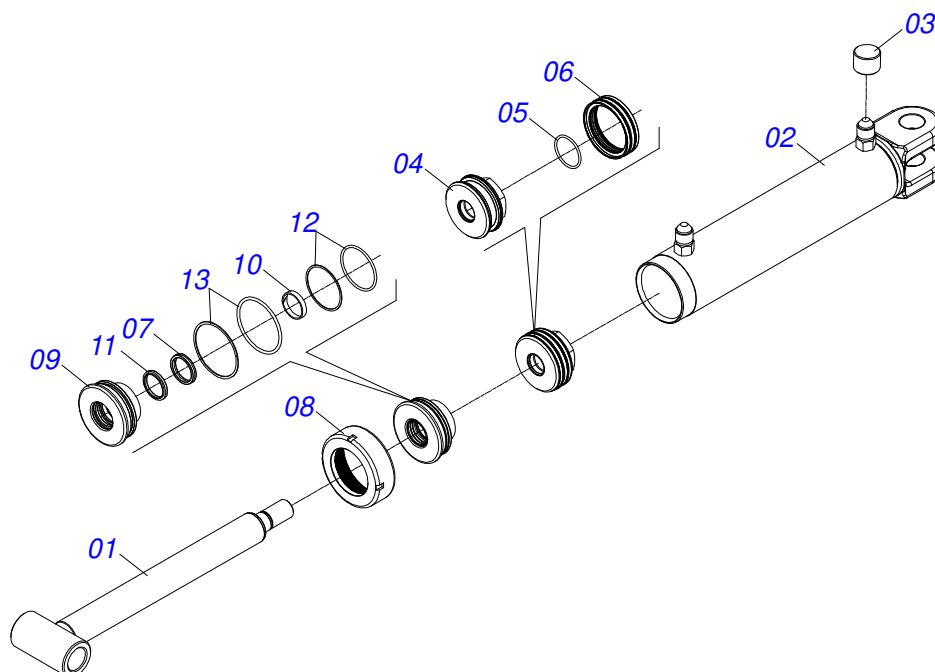

Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02

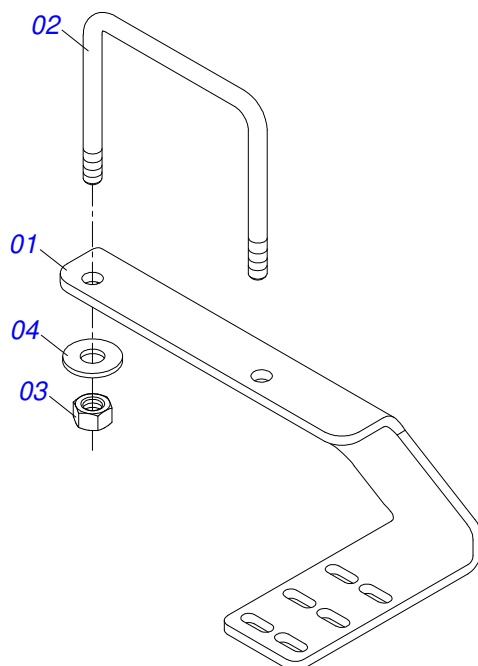 


Item	Code	Description	See page	QT
01	0561019898	LEFT SUPPORT FIXER RECAMBIO		01
02	0521010718	5/8" U BOLT		01
03	0503012412	5/8 UNC SELF LOCKING NUT		02
04	0501012140	FLAT WASHER		02

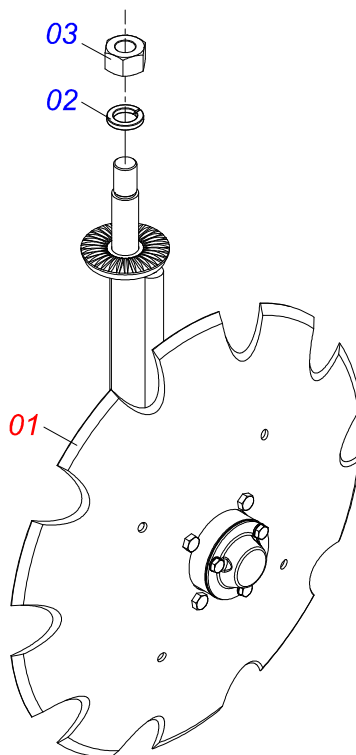 

Item	Code	Description	See page	QT
01	0511053904	DISC LINE MARKER	72	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

DISC LINE MARKER

 
0511053904

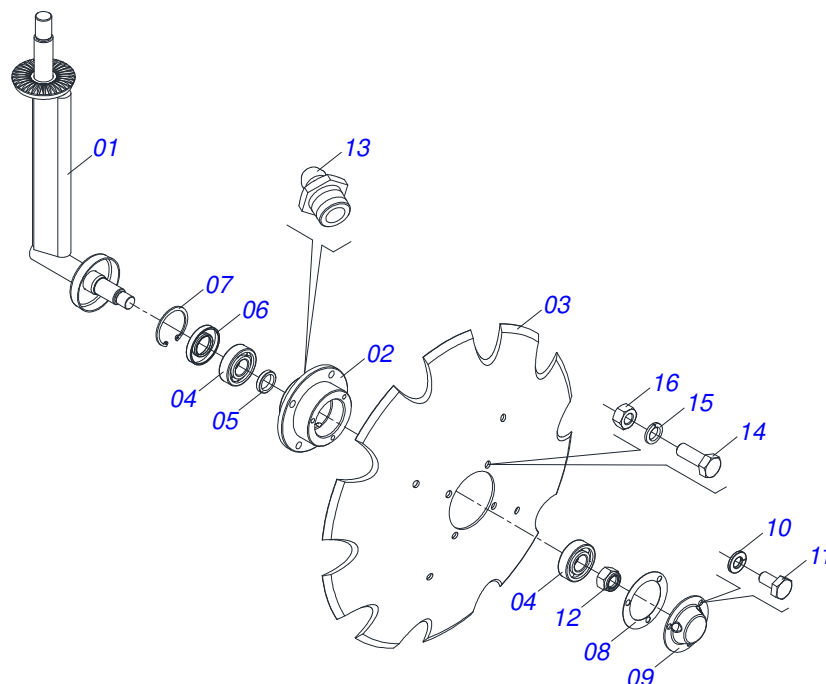

Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9\" X 2\" X 0.02\" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4\" UNF X 1/2\" BOLT		03
12	0503010878	5/8\" SELF ALIGNING NUT		01
13	0503010691	1/4\" GREASE FITTING		01
14	0503010358	5/16\" X 5/8\" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16\" NUT		04

MOTOR SHAFT ASSEMBLY

 
0511053594

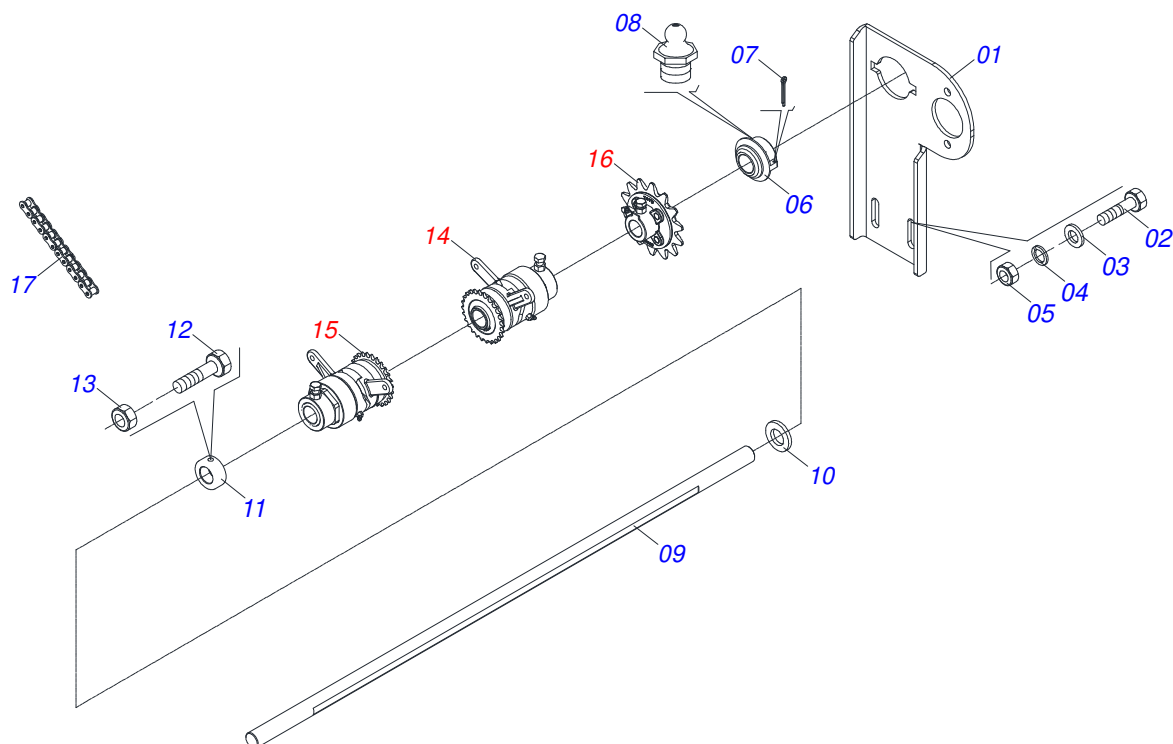

Item	Code	Description	See page	07 L
01	0561017269	MOTOR AXLE BEARING SUPPORT		02
02	0503011082	C1/2" X 1.3/4" SCREW		04
03	0511017302	FLAT WASHER		08
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04
06	0501110639	BEARING		06
07	0503010300	5/32" X 1" COTTERPIN		06
08	0503011099	GREASE FITTING		06
09	0561016882	1535 MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0511047069	SIDE TRANSMISSION DRIVING	78	01
15	0511047070	LH SIDE TRANSMISSION DRIVING	79	01
16	0511051434	TRANSMISSION DRIVING ASSY	80	04
17	0503012958	2050 CHAIN X 42 LINK + REDUCTION		04

MOTOR SHAFT ASSEMBLY

 
0511054292

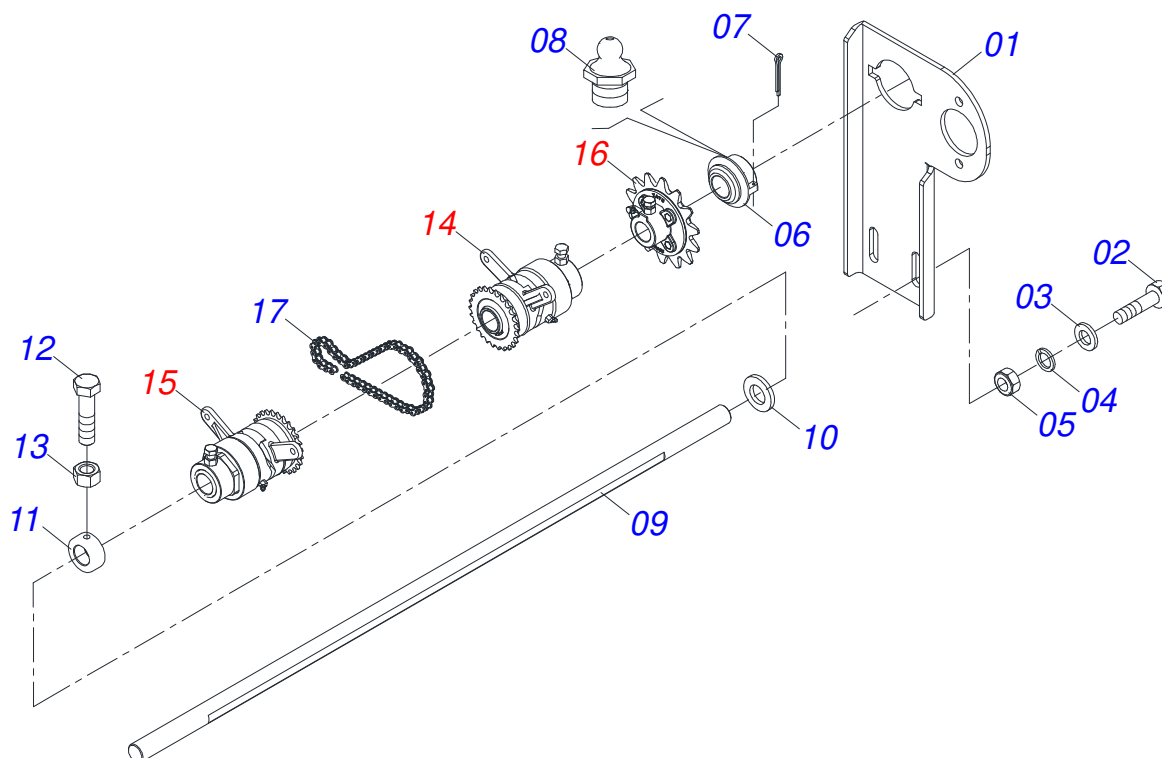

Item	Code	Description	See page	QT
01	0561017269	MOTOR AXLE BEARING SUPPORT		04
02	0503011082	C1/2" X 1.3/4" SCREW		08
03	0511017302	FLAT WASHER		16
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0501110639	BEARING		08
07	0503010300	5/32" X 1" COTTERPIN		08
08	0503011099	GREASE FITTING		08
09	0571013539	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0511047069	SIDE TRANSMISSION DRIVING	78	01
15	0511047070	LH SIDE TRANSMISSION DRIVING	79	01
16	0511051434	TRANSMISSION DRIVING ASSY	80	04
17	0503012958	2050 CHAIN X 42 LINK + REDUCTION		04

MOTOR SHAFT ASSEMBLY

 
0511053380

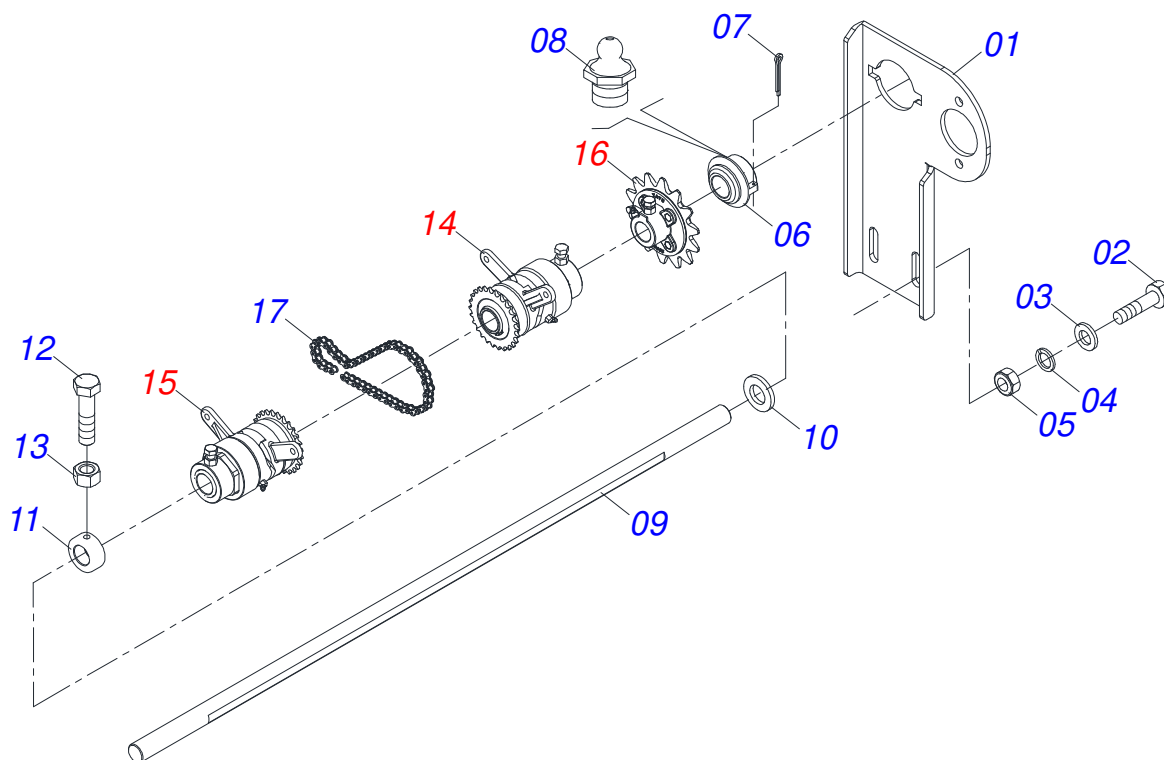

Item	Code	Description	See page	11 L
01	0561017269	MOTOR AXLE BEARING SUPPORT		04
02	0503011082	C1/2" X 1.3/4" SCREW		08
03	0511017302	FLAT WASHER		16
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0501110639	BEARING		08
07	0503010300	5/32" X 1" COTTERPIN		08
08	0503011099	GREASE FITTING		08
09	0561016876	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0511047069	SIDE TRANSMISSION DRIVING	78	01
15	0511047070	LH SIDE TRANSMISSION DRIVING	79	01
16	0511051434	TRANSMISSION DRIVING ASSY	80	04
17	0503012958	2050 CHAIN X 42 LINK + REDUCTION		04

MOTOR SHAFT ASSEMBLY

 
0511053341

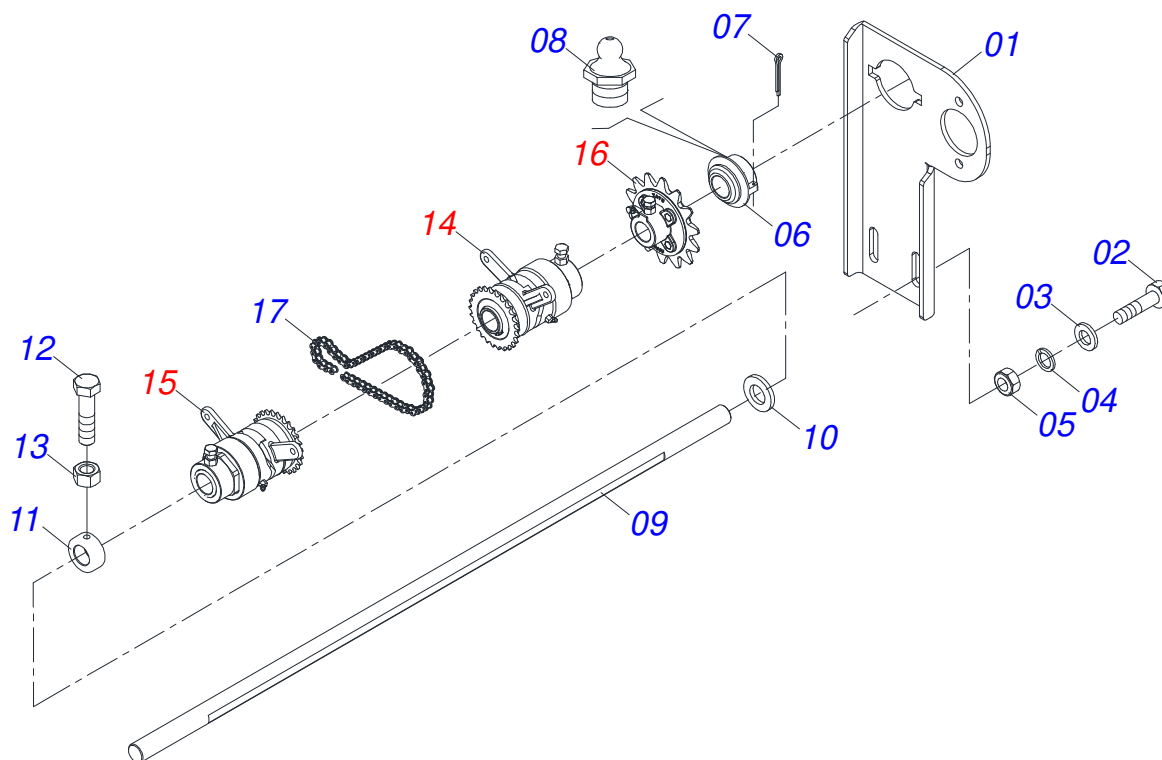


Item	Code	Description	See page	13A17 L
01	0561017269	MOTOR AXLE BEARING SUPPORT		04
02	0503011082	C1/2" X 1.3/4" SCREW		08
03	0511017302	FLAT WASHER		16
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0501110639	BEARING		08
07	0503010300	5/32" X 1" COTTERPIN		08
08	0503011099	GREASE FITTING		08
09	0561016795	2775 MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0511047069	SIDE TRANSMISSION DRIVING	78	01
15	0511047070	LH SIDE TRANSMISSION DRIVING	79	01
16	0511051434	TRANSMISSION DRIVING ASSY	80	04
17	0503012958	2050 CHAIN X 42 LINK + REDUCTION		04

MOTOR SHAFT ASSEMBLY

 
0511053423

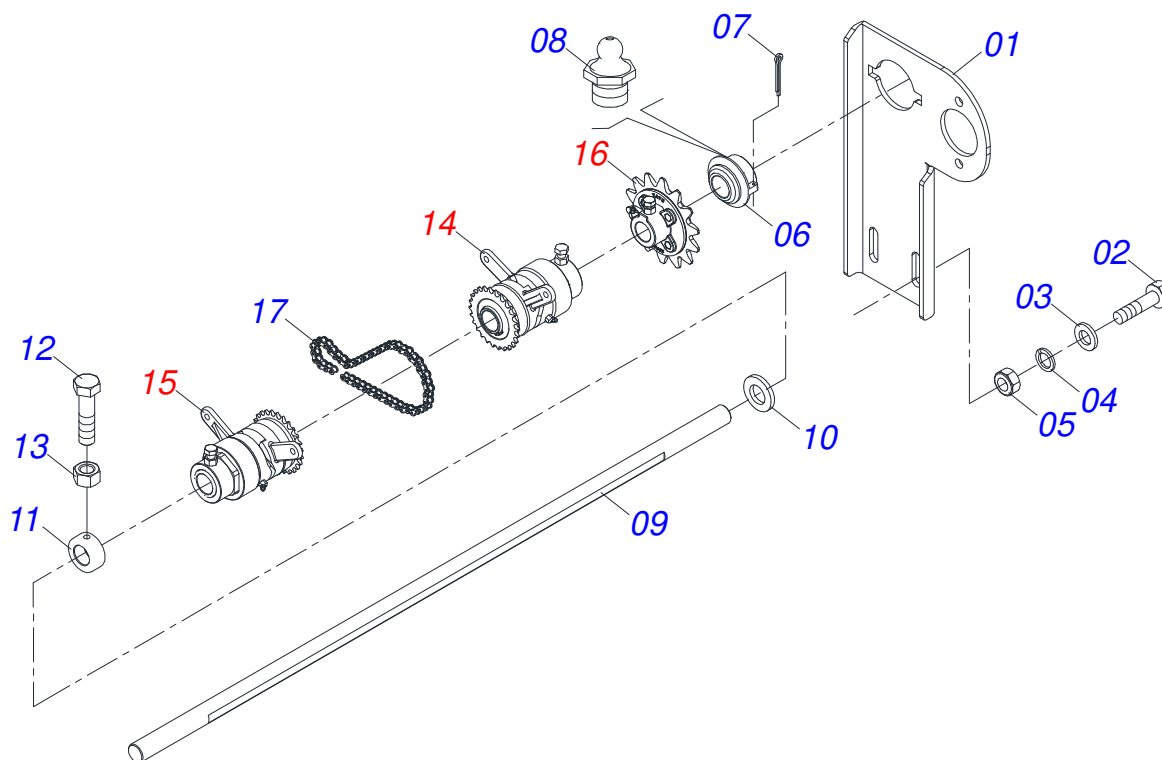


Item	Code	Description	See page	09A19 L
01	0561017269	MOTOR AXLE BEARING SUPPORT		04
02	0503011082	C1/2" X 1.3/4" SCREW		08
03	0511017302	FLAT WASHER		16
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0501110639	BEARING		08
07	0503010300	5/32" X 1" COTTERPIN		08
08	0503011099	GREASE FITTING		08
09	0561016881	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0511047069	SIDE TRANSMISSION DRIVING	78	01
15	0511047070	LH SIDE TRANSMISSION DRIVING	79	01
16	0511051434	TRANSMISSION DRIVING ASSY	80	04
17	0503012958	2050 CHAIN X 42 LINK + REDUCTION		04

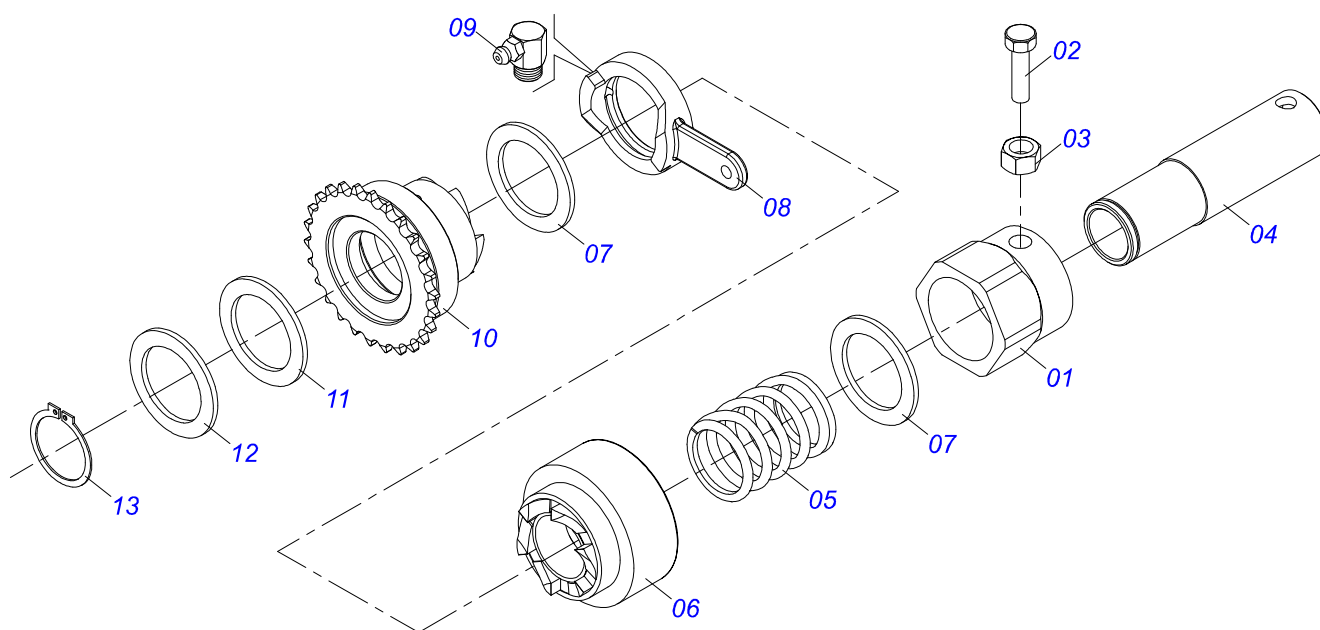 

Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

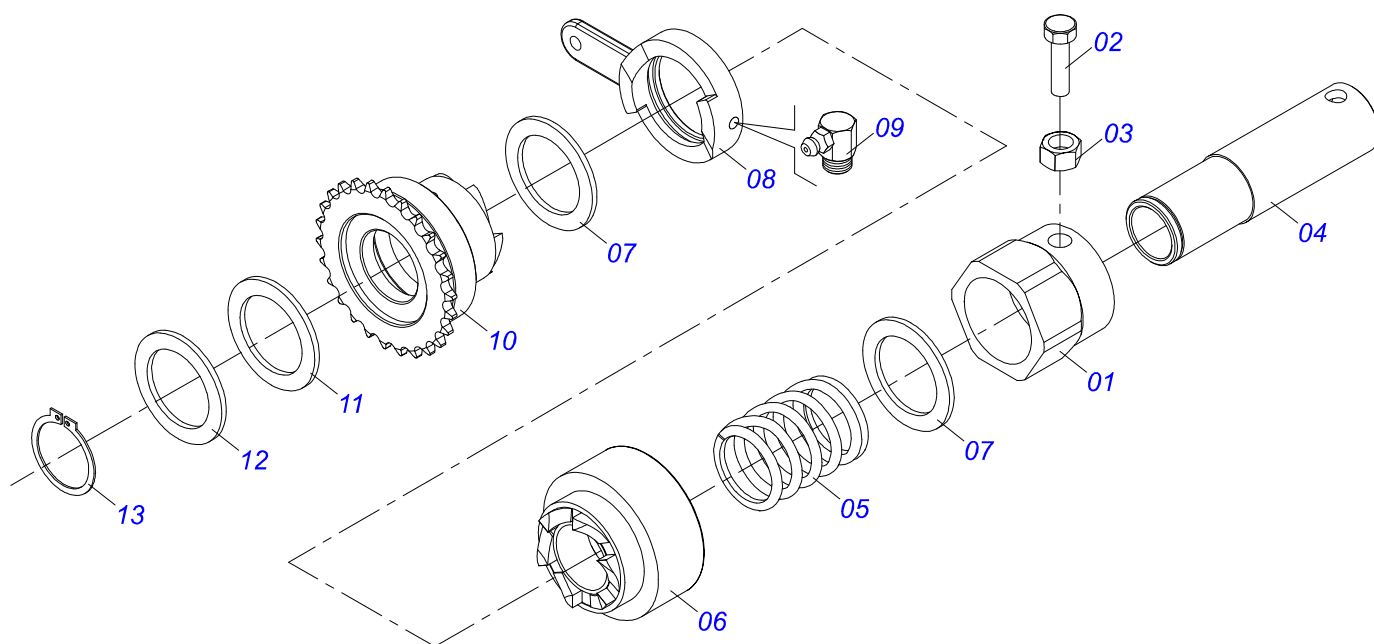 


Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

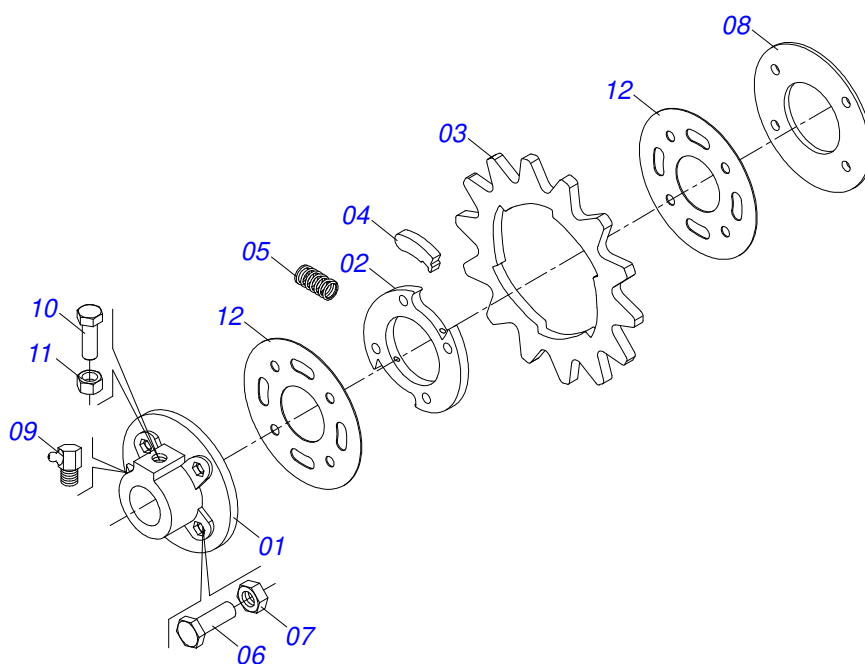 

Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

HEX AXLE ASSEMBLY

 
0511053605

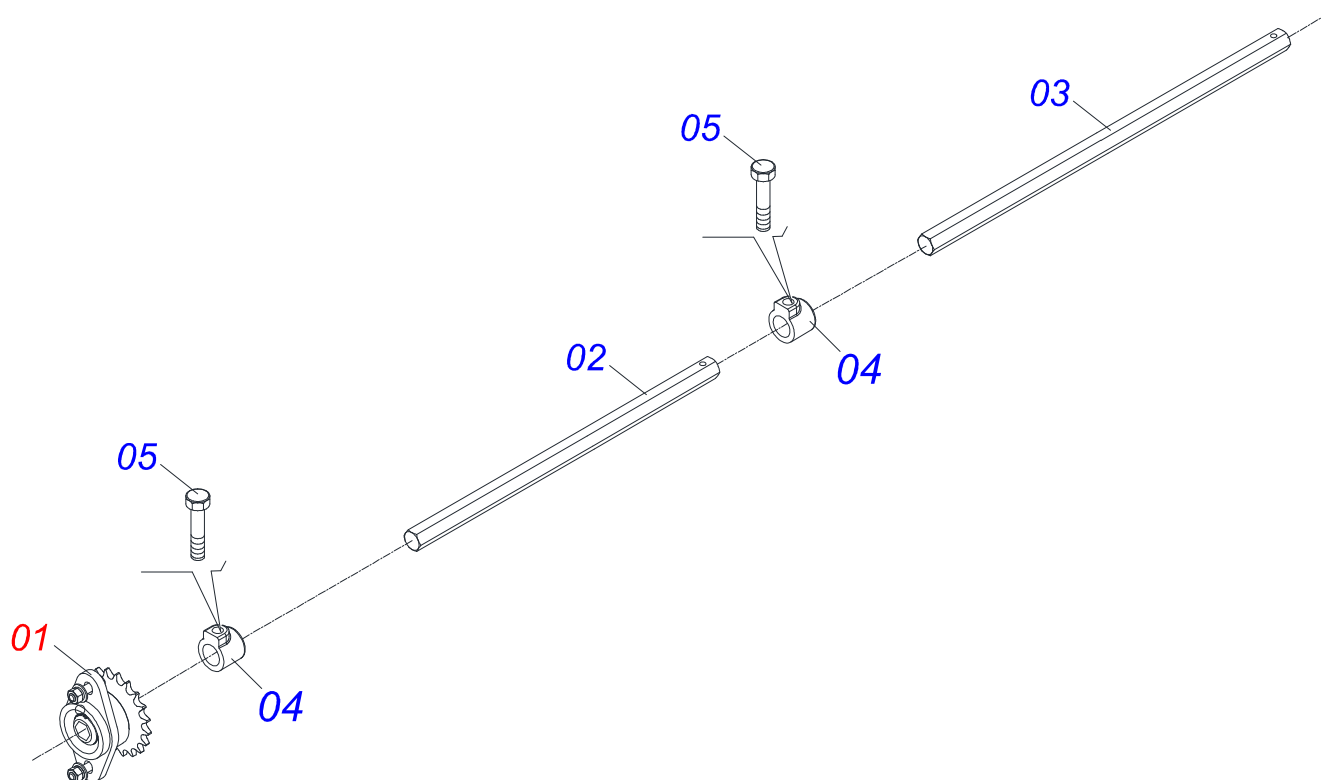

Item	Code	Description	See page	07 L
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	86	02
02	0521013432	5/8" X 59" AXLE HEX		01
03	0521013428	HEX AXLE		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

HEX AXLE ASSEMBLY

 
0511054291

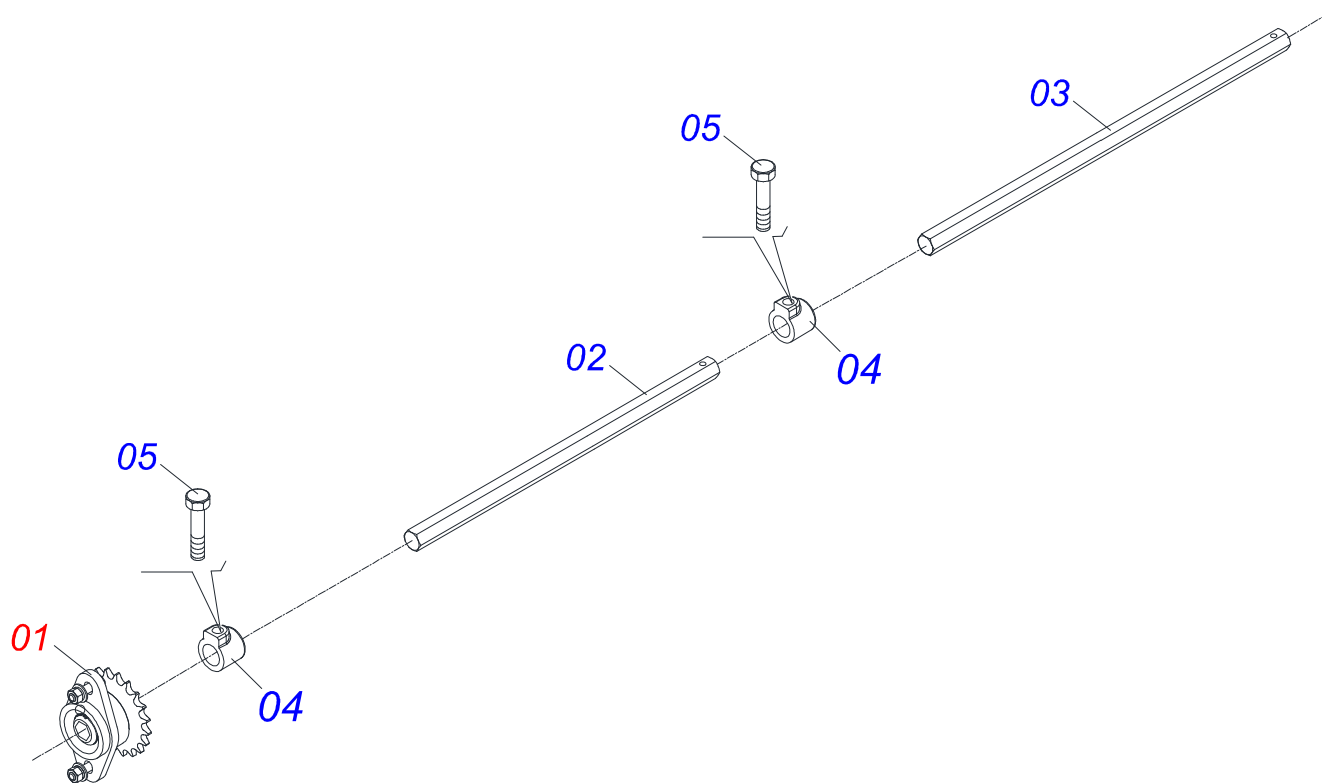

Item	Code	Description	See page	QT
01	0501053610	BEARING WITH 17Z GEAR INNER AXLE		02
02	0571013540	5/8" X 85" HEX AXLE		01
03	0571013538	5/8" X 2075 AXLE BODY		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

HEX AXLE ASSEMBLY

 
0511053381

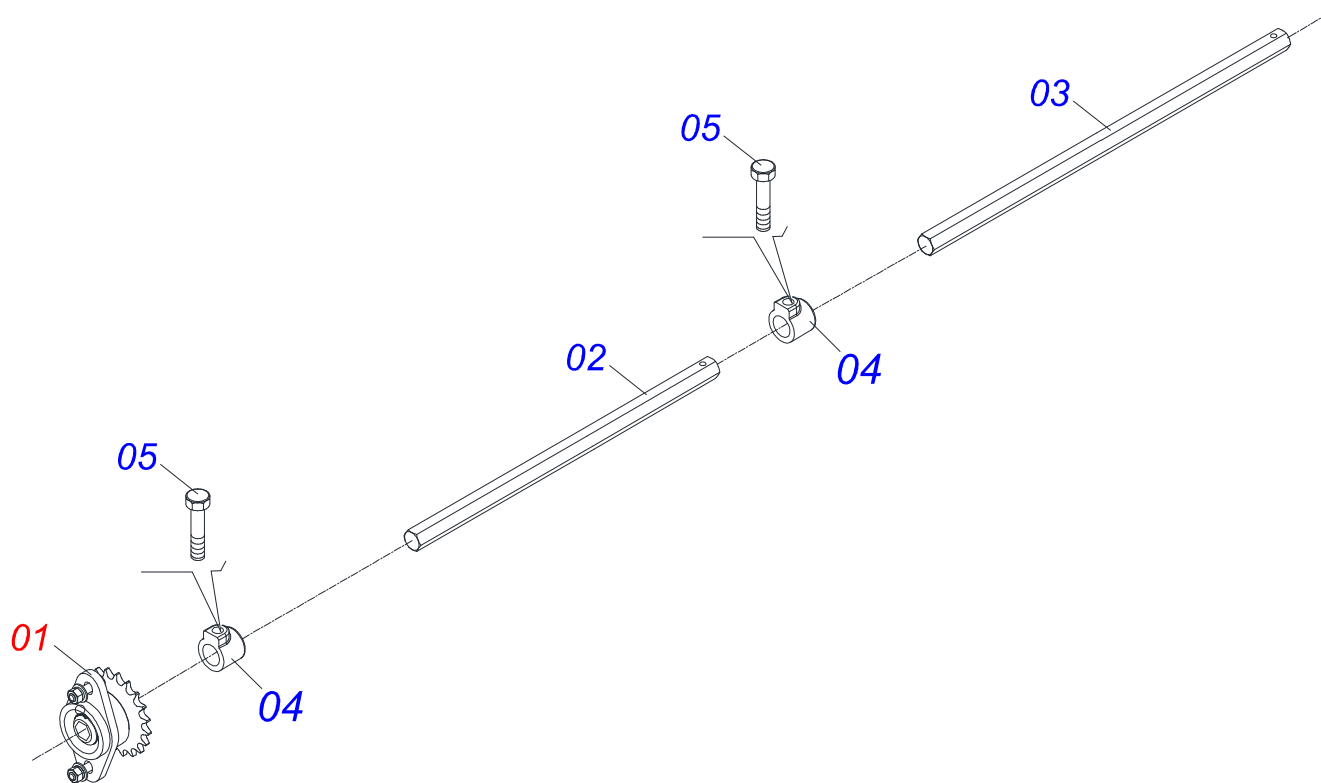

Item	Code	Description	See page	11 L
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	86	02
02	0531016944	RIGHT 5/8" X 96" HEX AXLE		01
03	0531016945	LEFT 5/8" X 90" HEX AXLE		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

HEX AXLE ASSEMBLY

 
0511053361

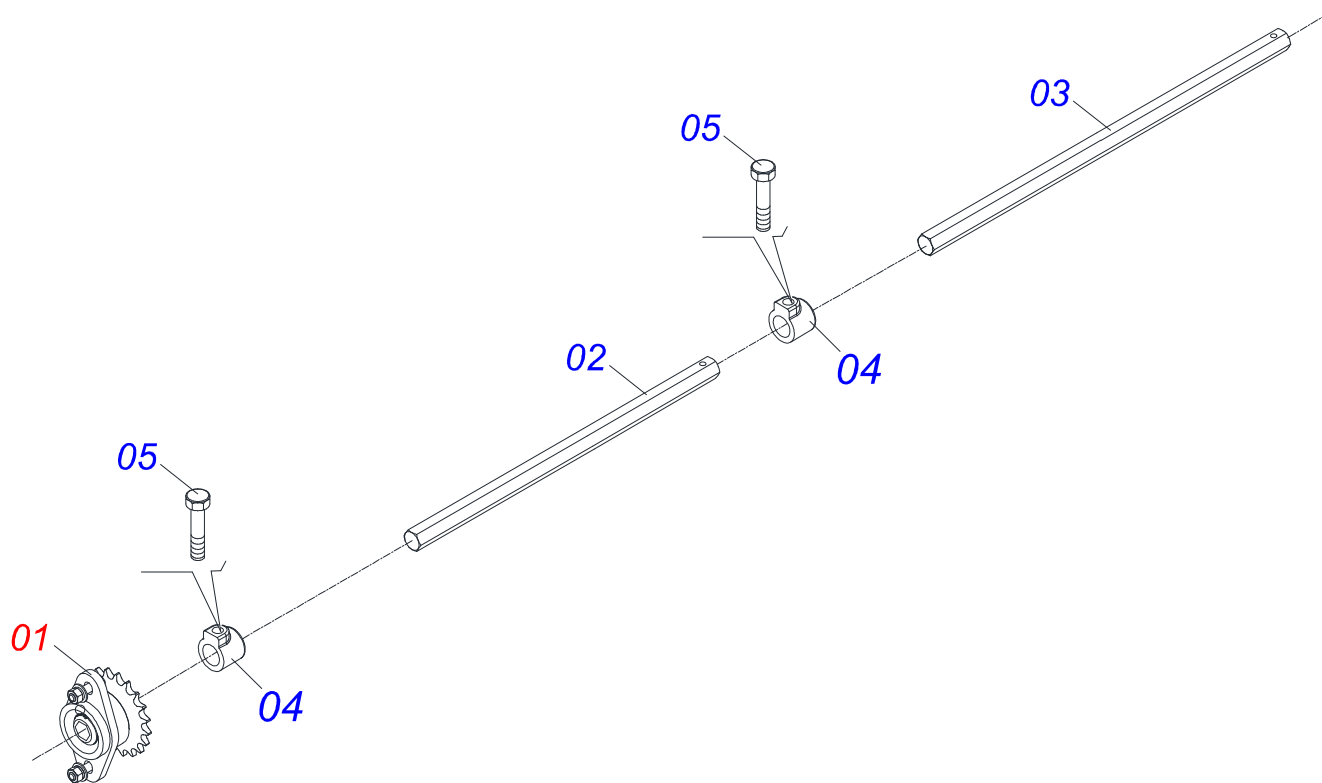


Item	Code	Description	See page	13 L
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	86	02
02	0531016946	5/8" X 114" AXLE HEX		01
03	0531016947	LEFT 5/8" X 108" AXLE HEX		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

HEX AXLE ASSEMBLY

 
0511053456

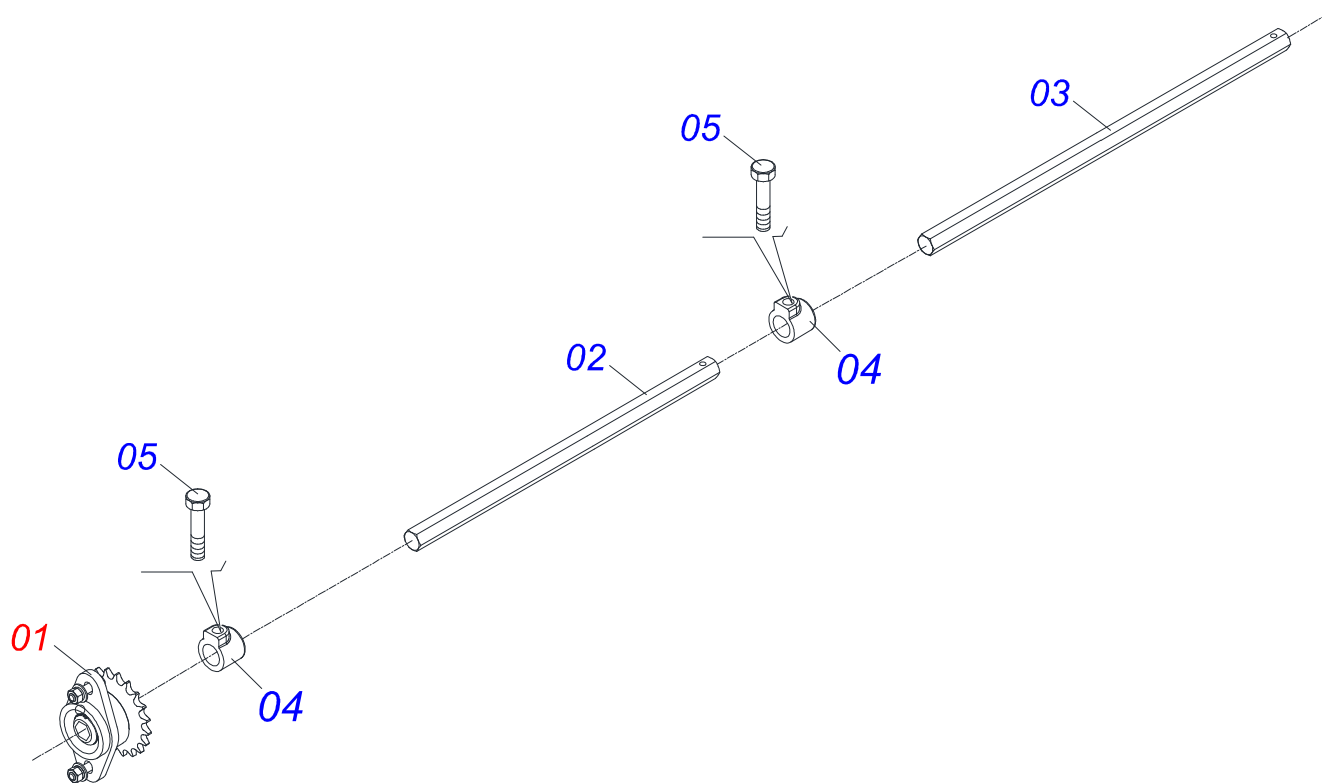


Item	Code	Description	See page	15 L
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	86	02
02	0531016948	RIGHT 5/8" X 131" AXLE HEX		01
03	0531016949	LEFT 5/8" X 125" AXLE HEX		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

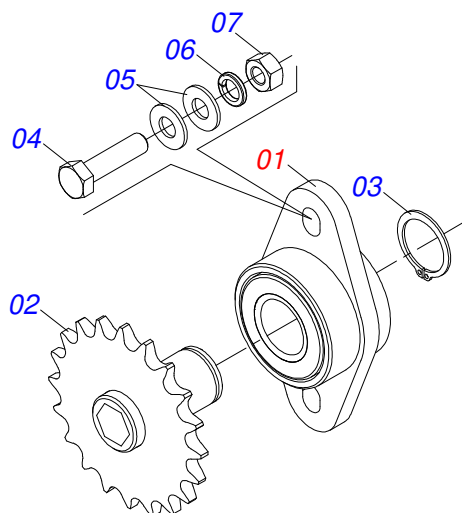 

Item	Code	Description	See page	QT
01	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	87	01
02	0511063106	20Z AXLE BEARING DOBLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0503010365	NUT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02

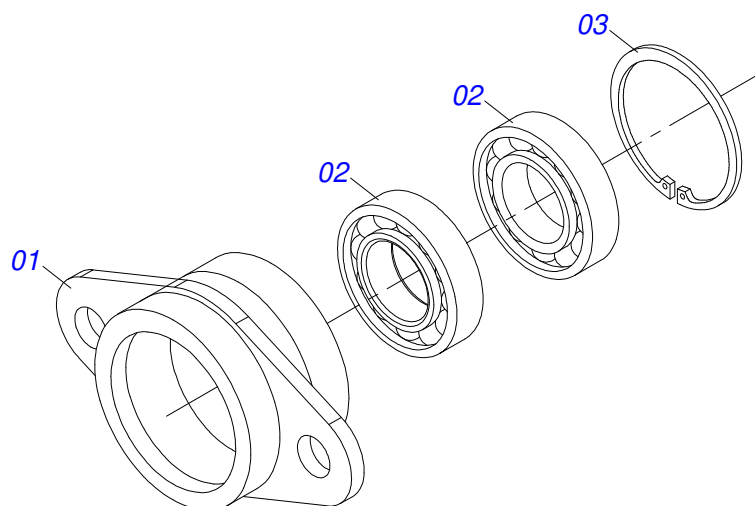 


Item	Code	Description	See page	QT
01	0502011987	DOUBLE HOUSING BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01

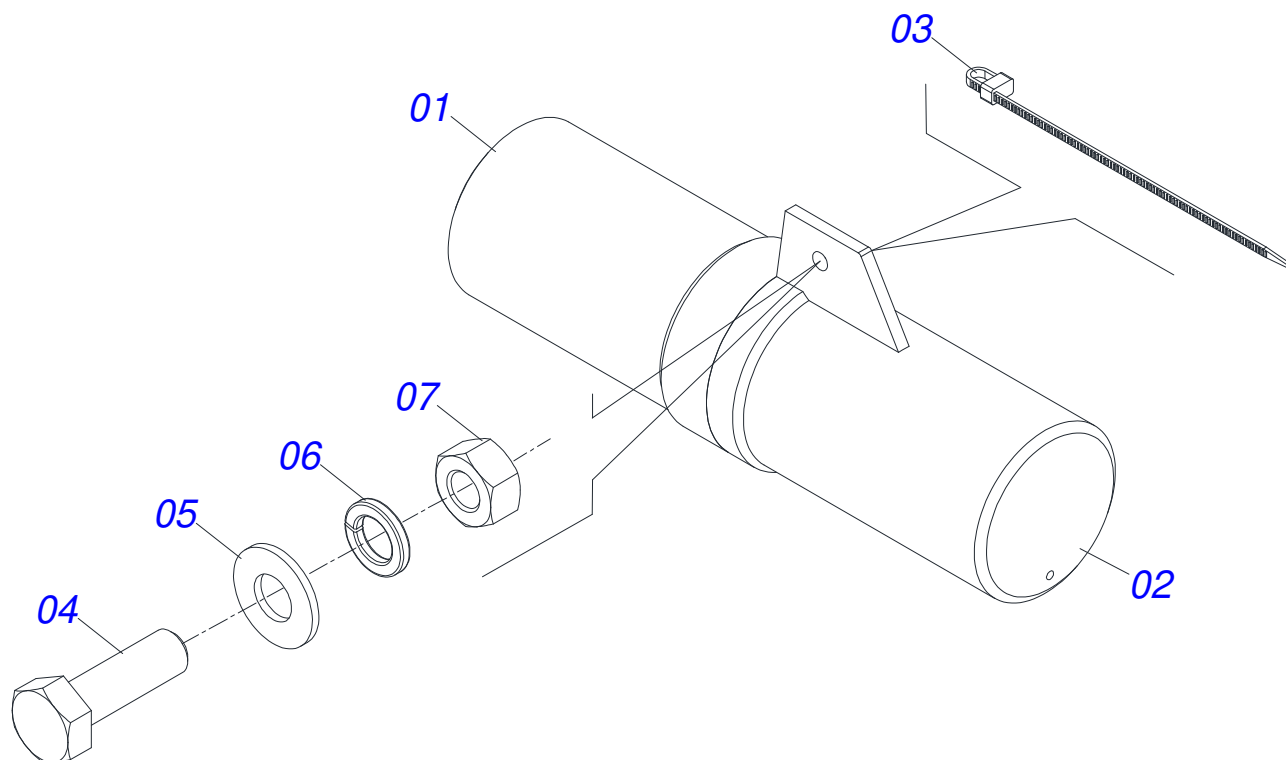 


Item	Code	Description	See page	QT
001	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
002	0511031562	BAG WITH MANUAL		01
003	0503010267	NYLON CLAMP		01
004	0503010363	5/16" X 1" BOLT		01
005	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
006	0503010179	5/16" ZN SPRING WASHER		01
007	0503010337	5/16" NUT		01

TURBINE ASSEMBLY

 
0521051538

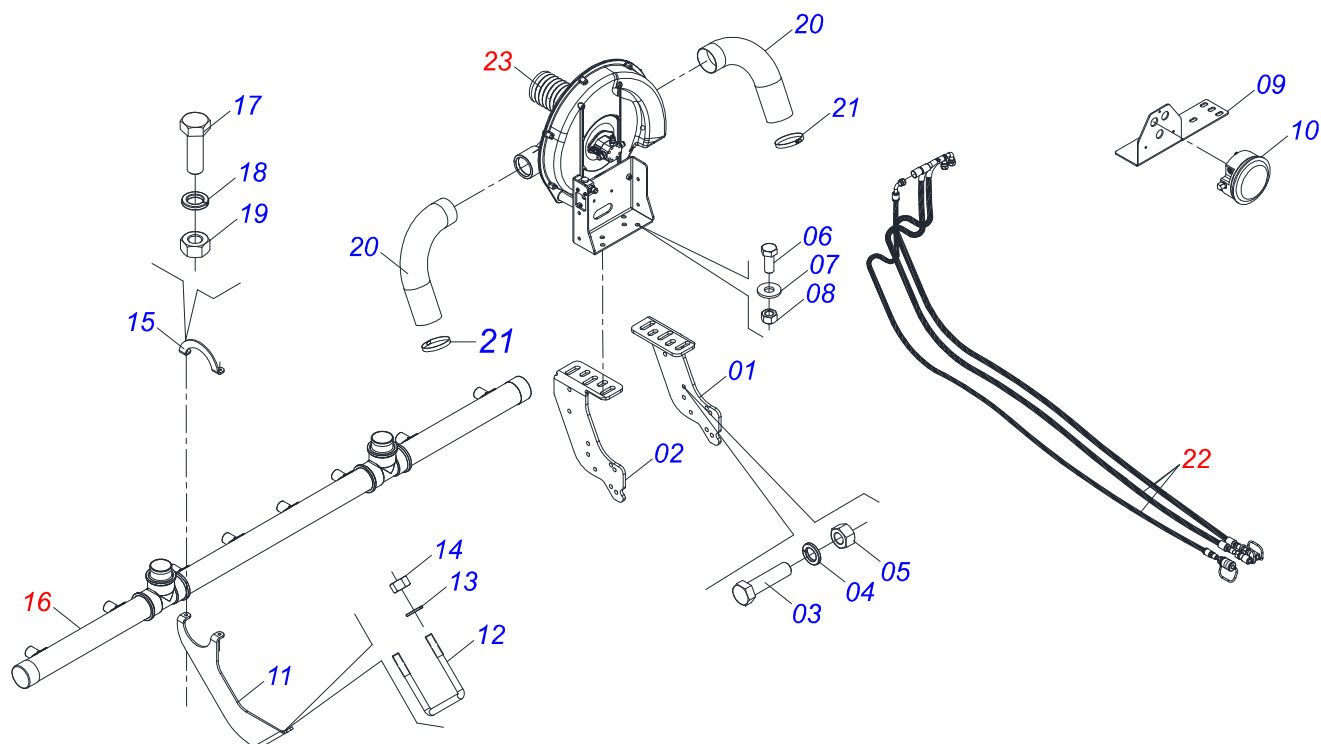


Item	Code	Description	See page	QT
01	0571019978	LEFT BODY		01
02	0571019979	SHAFT FIXER BODY		01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04
06	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		02
07	0501012140	FLAT WASHER		02
08	0503012412	5/8 UNC SELF LOCKING NUT		02
09	0571019552	SUPPORT VACUUM		01
10	0503013584	VACUUM GAUGE		01
11	0571019963	AIR DISTRIBUTOR SUPPORT		04
12	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
13	0503010019	1/2" SPRING WASHER		08
14	0503010060	1/2" NUT		08
15	0521014442	LOWER AIR DISTRIBUTOR SUPPORT		04
16	0521050261	DISTRIBUTOR AIR CENTER 08 MOUTHS - 19 A 21	90	01
17	0503010371	5/16" X 1" BOLT		08
18	0503010179	5/16" ZN SPRING WASHER		08
19	0503010337	5/16" NUT		08
20	0581012166	HOSE		02
21	0503011372	102 TO 121 CLAMP		04
22	0511057906	HOSE ASSY	91	01
23	0511059406	TURBINE P.P MOUNTED	92	01

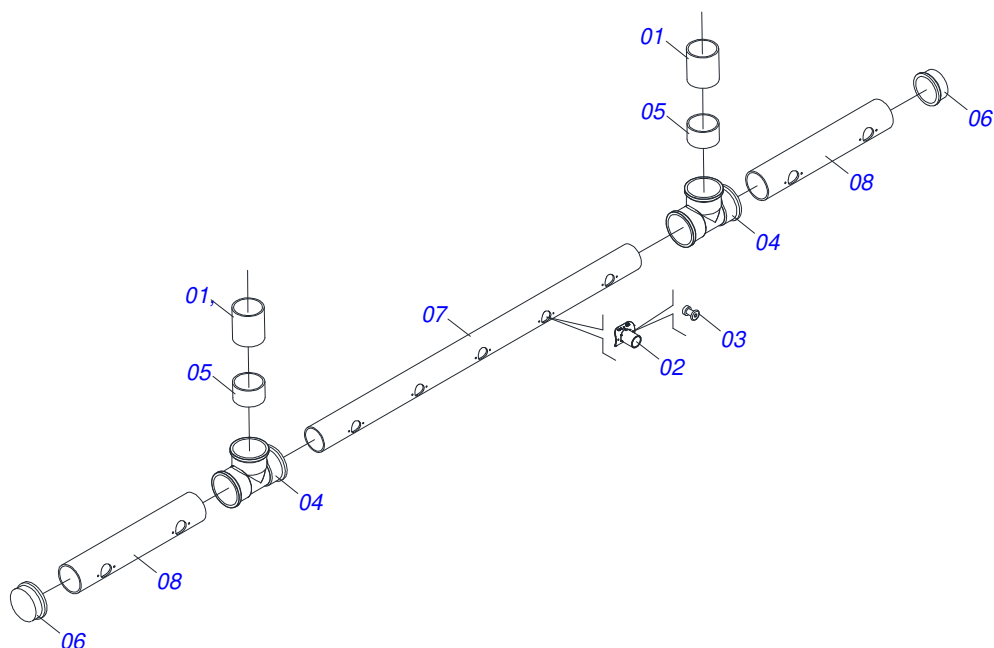 


Item	Code	Description	See page	QT
01	0571018559	WHITE PVC TUBE		02
02	0503031943	SOCKET		08
03	0503012856	REBITE POP		16
04	0503012567	T-JOIN FOR TUBE 110		02
05	0521015543	DUTO 110 X 55		02
06	0503012566	COVER KAP 110 YELLOW		02
07	0571019406	BODY DISTRIBUTOR VACUUM		01
08	0561017670	BODY DISTRIBUTOR AR		02

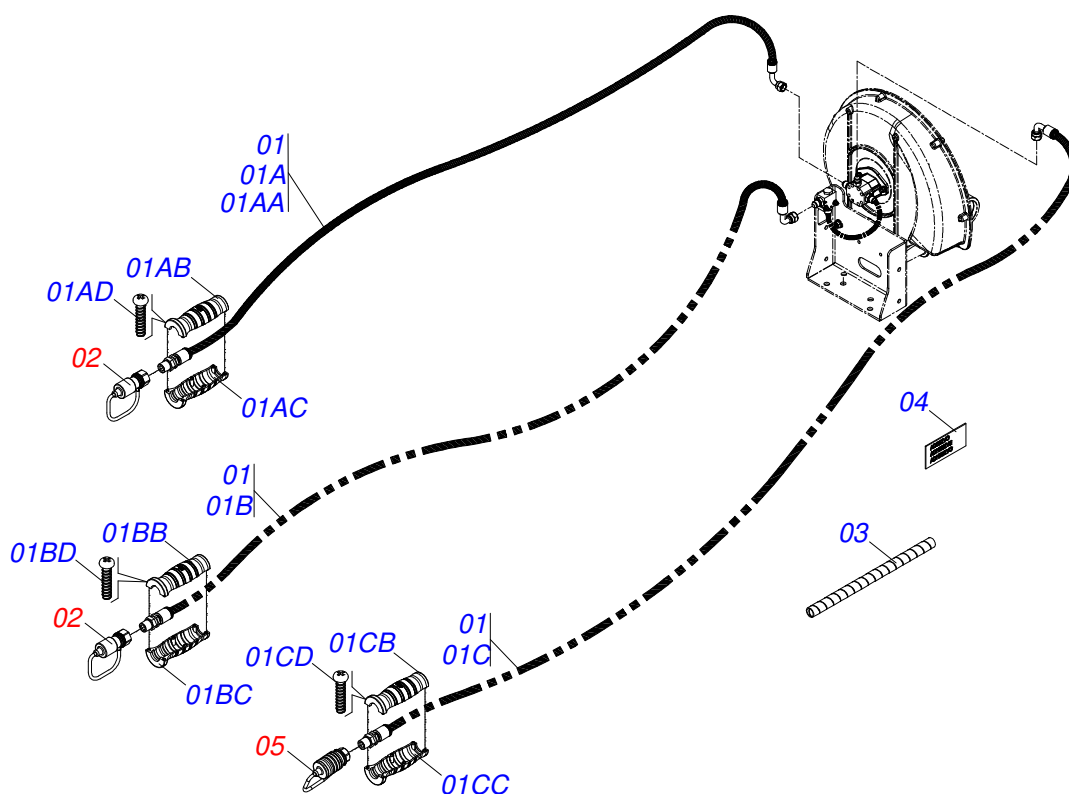 

Item	Code	Description	See page	QT
01	0511057840	ASSY TURBINE HOSE REAR		01
01A	0521052534	HOSE 1/2 X 7012 TC-TM YELLOW / RED		01
01AA	0501081247	HOSE 1/2 X 7012 TC-TM		01
01AB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01AC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
01AD	0503018952	PLASTIC BOLT		06
01B	0521052535	HOSE 1/2 X 7012 TC-TM YELLOW / BLUE		01
01BA	0501081247	HOSE 1/2 X 7012 TC-TM		01
01BB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01BC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
01BD	0503018952	PLASTIC BOLT		06
01C	0521052536	HOSE 3/8 X 7012 TC-TM YELLOW / GREEN		01
01CA	0501080477	HOSE 3/8 X 7012 TC-TM		01
01CB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01CC	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01
01CD	0503018952	PLASTIC BOLT		06
02	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	35	02
03	0581010092	SPRING PROTECTION PLASTIC HOSE 3/4		01
04	0503033981	ADHESIVE LABEL		01
05	0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	106	01

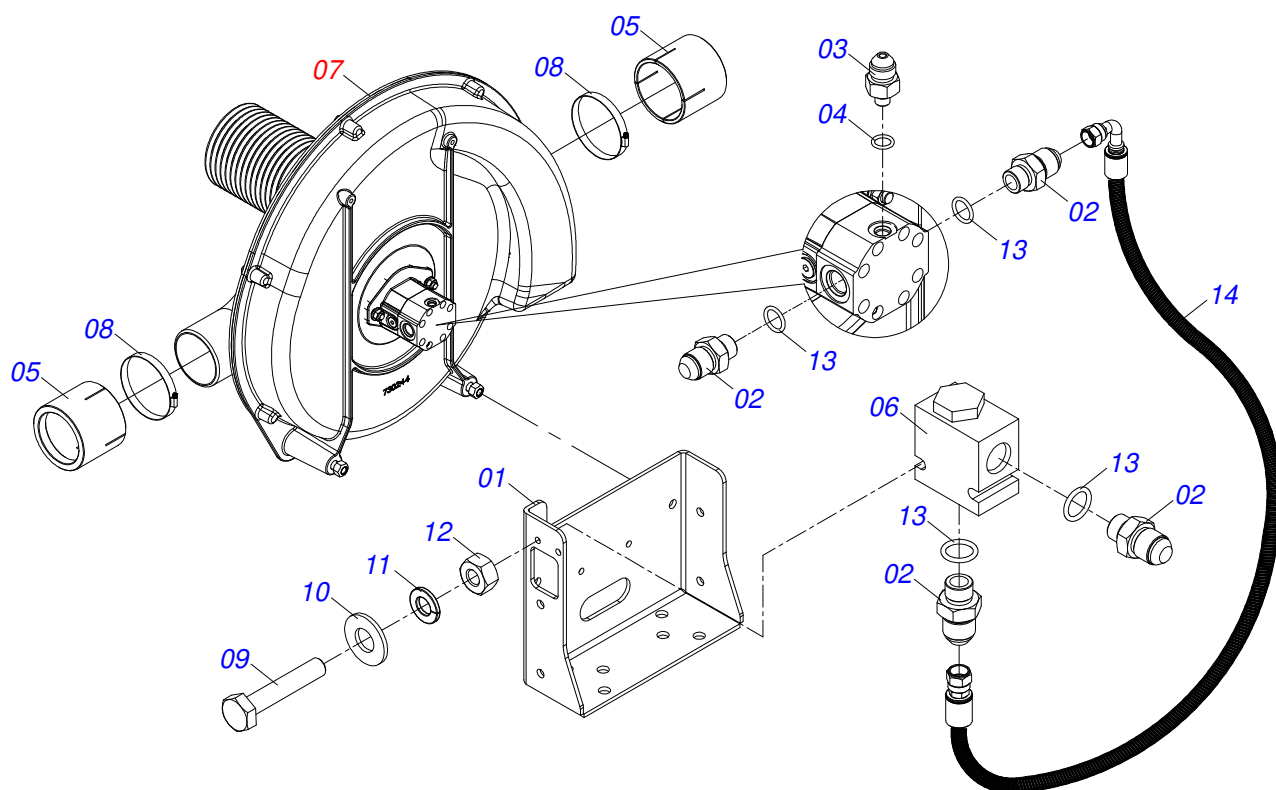 


Item	Code	Description	See page	QT
01	0581012099	BODY SUPPORT TURBINE		01
02	0501011460	7/8 NF REDUCTION NIPPLE		04
03	0503034385	NIPPLE 7/16 UNF X UNF JIC		01
04	0503010392	2-046 N 3006 9B O'RING		01
05	0581012096	ROUND SLEEVE		02
06	0503015420	VALVE ANTI-CAVITACAO CV10208TN5		01
07	0521050154	TURBINE P.P WITH HOLE	93	01
08	0503011372	102 TO 121 CLAMP		02
09	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
10	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
11	0503010143	1/4\" SPRING WASHER		02
12	0503010144	1/4\" NUT		02
13	0503010190	2-114 N 3006-9B O'RING		04
14	0501081235	1/2 X 650 TR- TC HOSE		01

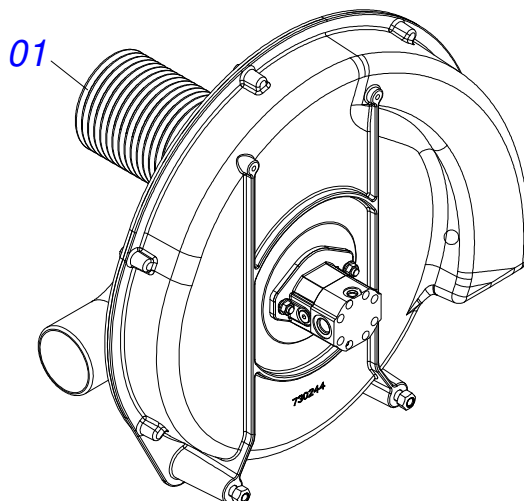 


Item	Code	Description	See page	QT
01	0503062627	HYDRAULIC TURBINE ASSY		01

ASSY TURBINE

 0521050976

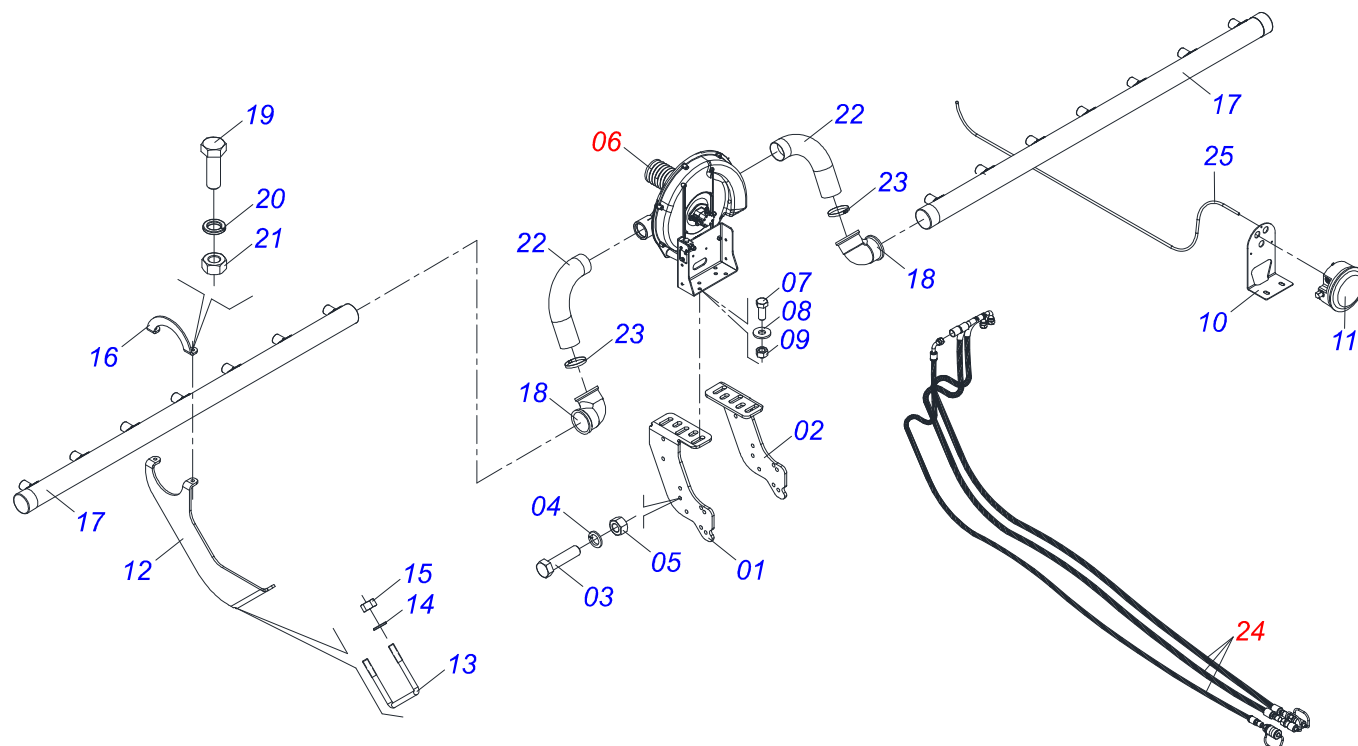


Item	Code	Description	See page	QT
01	0571019978	LEFT BODY		01
02	0571019979	SHAFT FIXER BODY		01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04
06	0511059406	TURBINE P.P MOUNTED	92	01
07	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		02
08	0501012140	FLAT WASHER		02
09	0503012412	5/8 UNC SELF LOCKING NUT		02
10	0571019552	SUPPORT VACUUM		01
11	0503013584	VACUUM GAUGE		01
12	0571019963	AIR DISTRIBUTOR SUPPORT		04
13	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
14	0503010019	1/2" SPRING WASHER		08
15	0503010060	1/2" NUT		08
16	0521014442	LOWER AIR DISTRIBUTOR SUPPORT		04
17	0511057348	DISTRIBUTOR VACUUM	95	02
18	0503031576	ELBOW		02
19	0503010371	5/16" X 1" BOLT		08
20	0503010179	5/16" ZN SPRING WASHER		08
21	0503010337	5/16" NUT		08
22	0581012166	HOSE		02
23	0503011372	102 TO 121 CLAMP		04
24	0511057906	HOSE ASSY	91	01
25	0503015062	TUBE		01

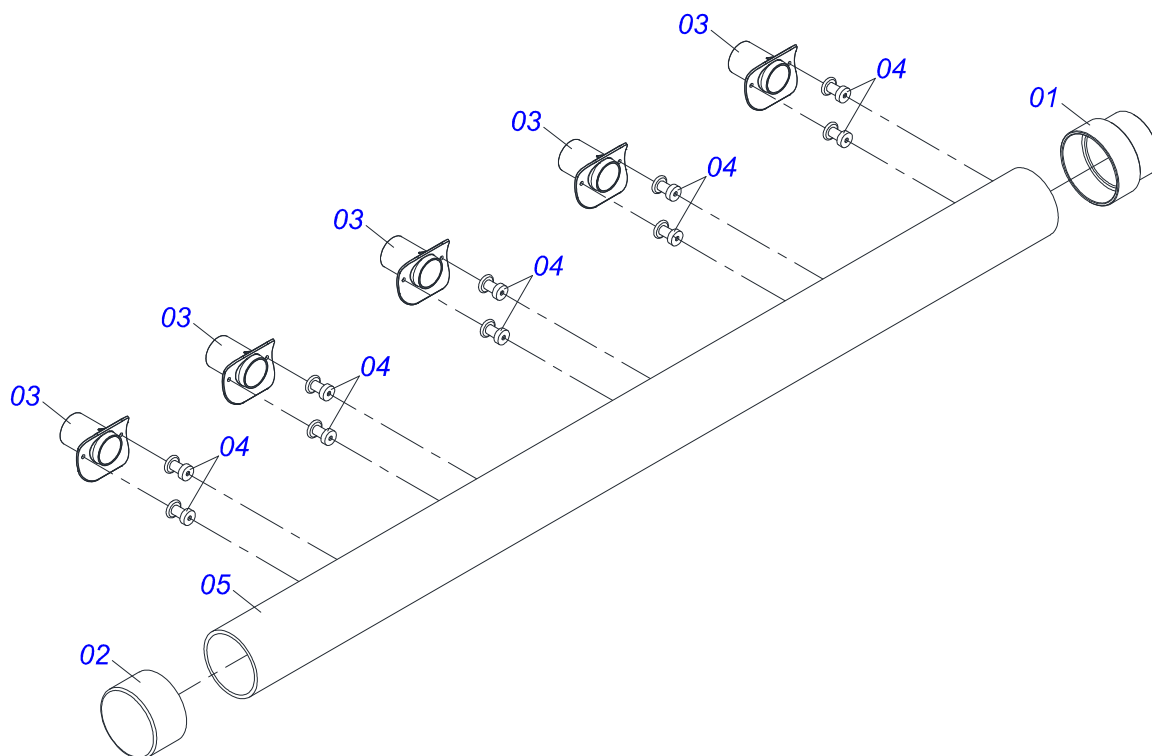 


Item	Code	Description	See page	QT
01	0571017215	SOCKET DISTRIBUTOR AR		01
02	0503012566	COVER KAP 110 YELLOW		01
03	0503031943	SOCKET		05
04	0503012856	REBITE POP		10
05	0571019405	BODY DISTRIBUTOR VACUUM 4845/5345		01

TURBINE ASSEMBLY

 
0521051358

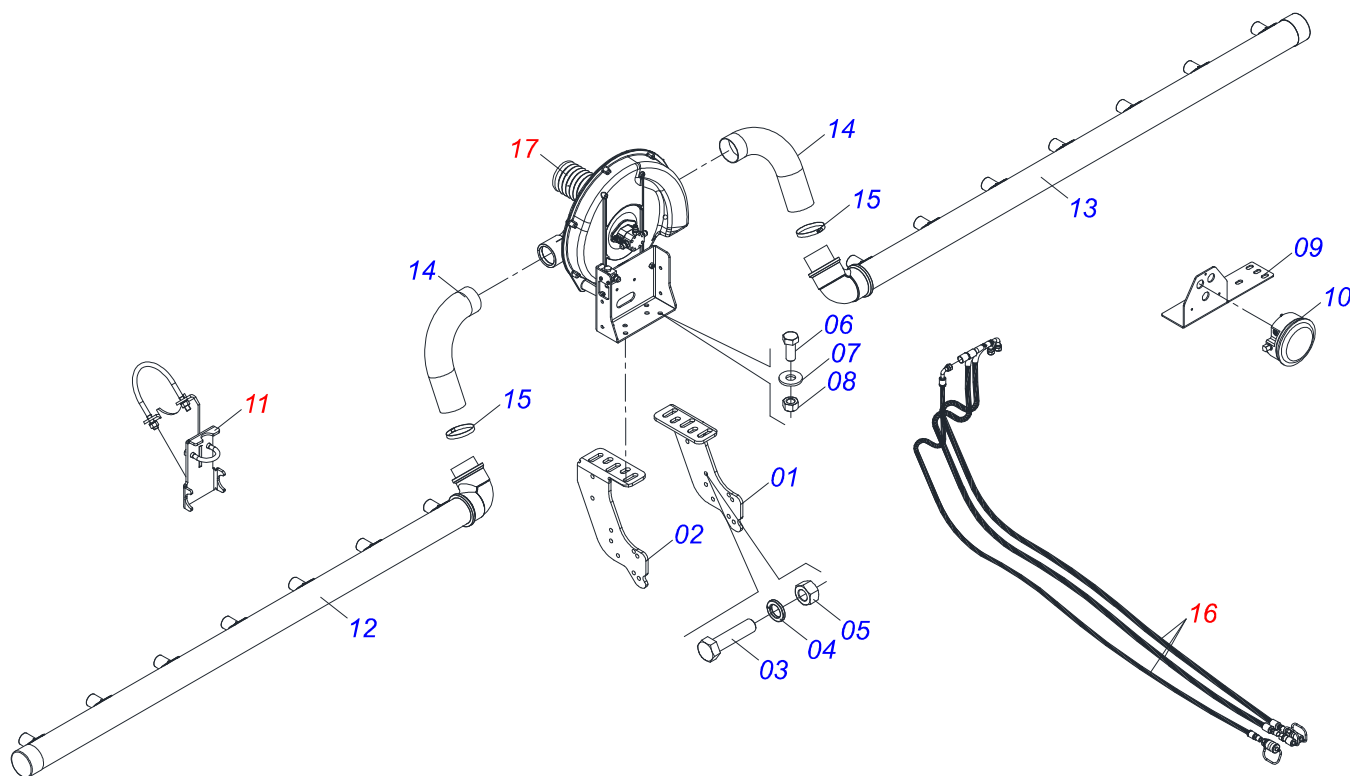


Item	Code	Description	See page	QT
01	0571019978	LEFT BODY		01
02	0571019979	SHAFT FIXER BODY		01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04
06	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		02
07	0501012140	FLAT WASHER		02
08	0503012412	5/8 UNC SELF LOCKING NUT		02
09	0571019552	SUPPORT VACUUM		01
10	0503013584	VACUUM GAUGE		01
11	0521050914	DISTRIBUTOR VACUUM SUPPORT	97	04
12	0521050016	DISTRIBUTOR AIR RIGHT 06 MOUTHS - 17 E500	98	01
13	0521050017	DISTRIBUTOR AIR LEFT 06 MOUTHS - 17 E500	99	01
14	0581012166	HOSE		02
15	0503011372	102 TO 121 CLAMP		04
16	0511057906	HOSE ASSY	91	01
17	0511059406	TURBINE P.P MOUNTED	92	01

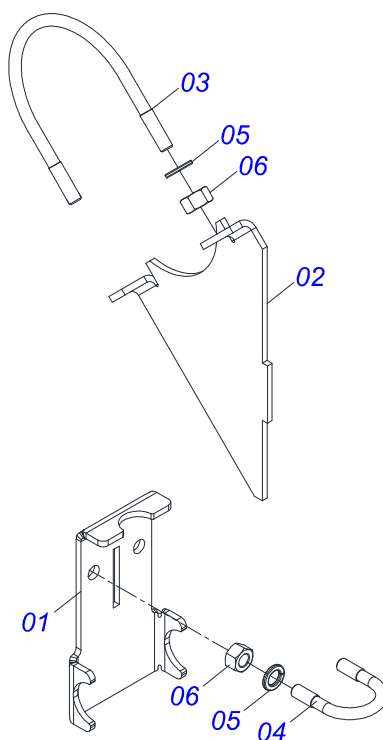 

Item	Code	Description	See page	QT
01	0581011679	SUPPORT BASE DISTRIBUTOR PNEUMATIC		01
02	0581011678	BODY SUPPORT		01
03	0571019403	STAPLE FIXER		01
04	0551019884	45 X 50 X 3/8 FASTENER		01
05	0503010025	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04

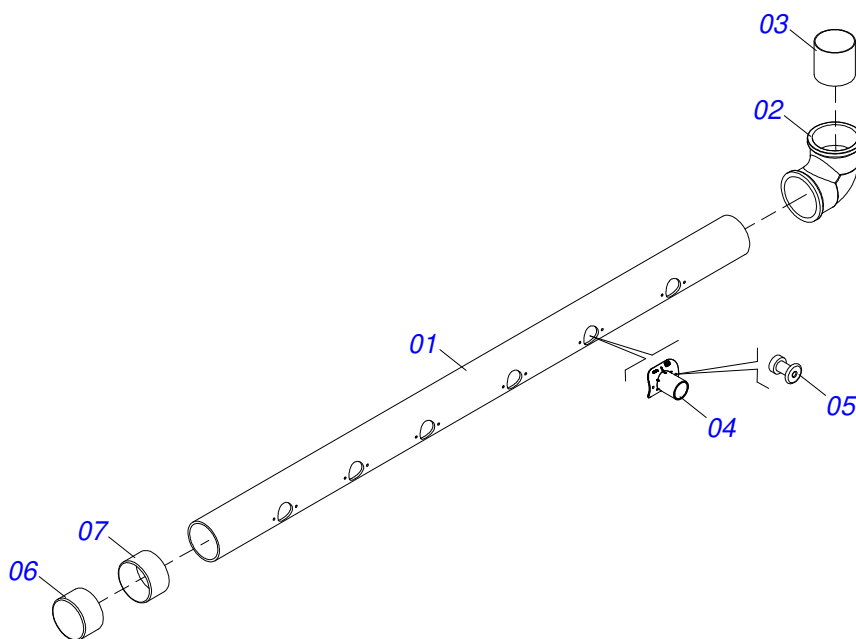 


Item	Code	Description	See page	QT
01	0581013131	ENG RAP FEMEA C DRENO TURB HIDR		01
02	0503017845	PVC KNEE 90 SOLD AVEL		01
03	0571018559	WHITE PVC TUBE		01
04	0503031943	SOCKET		06
05	0503012856	REBITE POP		12
06	0503012566	COVER KAP 110 YELLOW		01
07	0521015543	DUTO 110 X 55		01

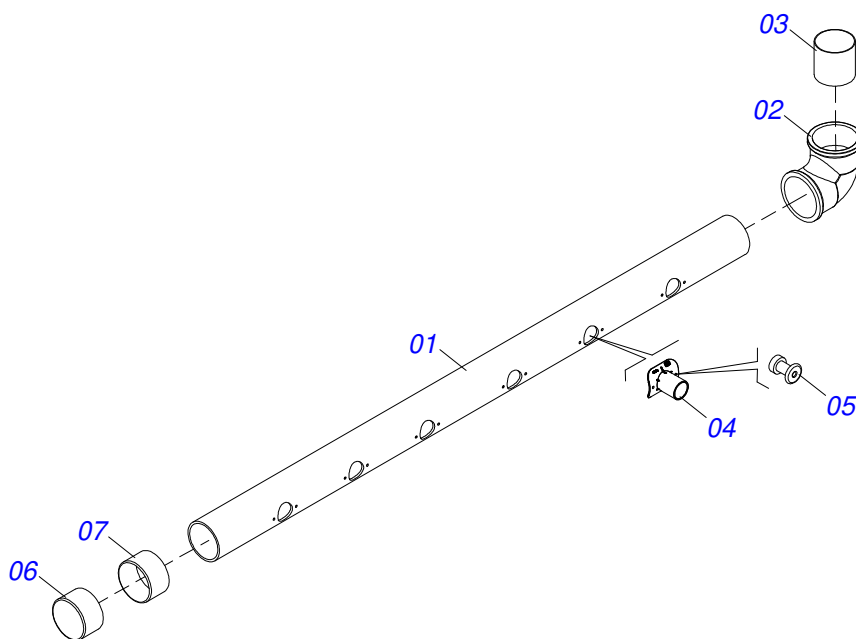 


Item	Code	Description	See page	QT
01	0581013131	ENG RAP FEMEA C DRENO TURB HIDR		01
02	0503017845	PVC KNEE 90 SOLD AVEL		01
03	0571018559	WHITE PVC TUBE		01
04	0503031943	SOCKET		06
05	0503012856	REBITE POP		12
06	0503012566	COVER KAP 110 YELLOW		01
07	0521015543	DUTO 110 X 55		01

TURBINE ASSEMBLY

 
0521051362

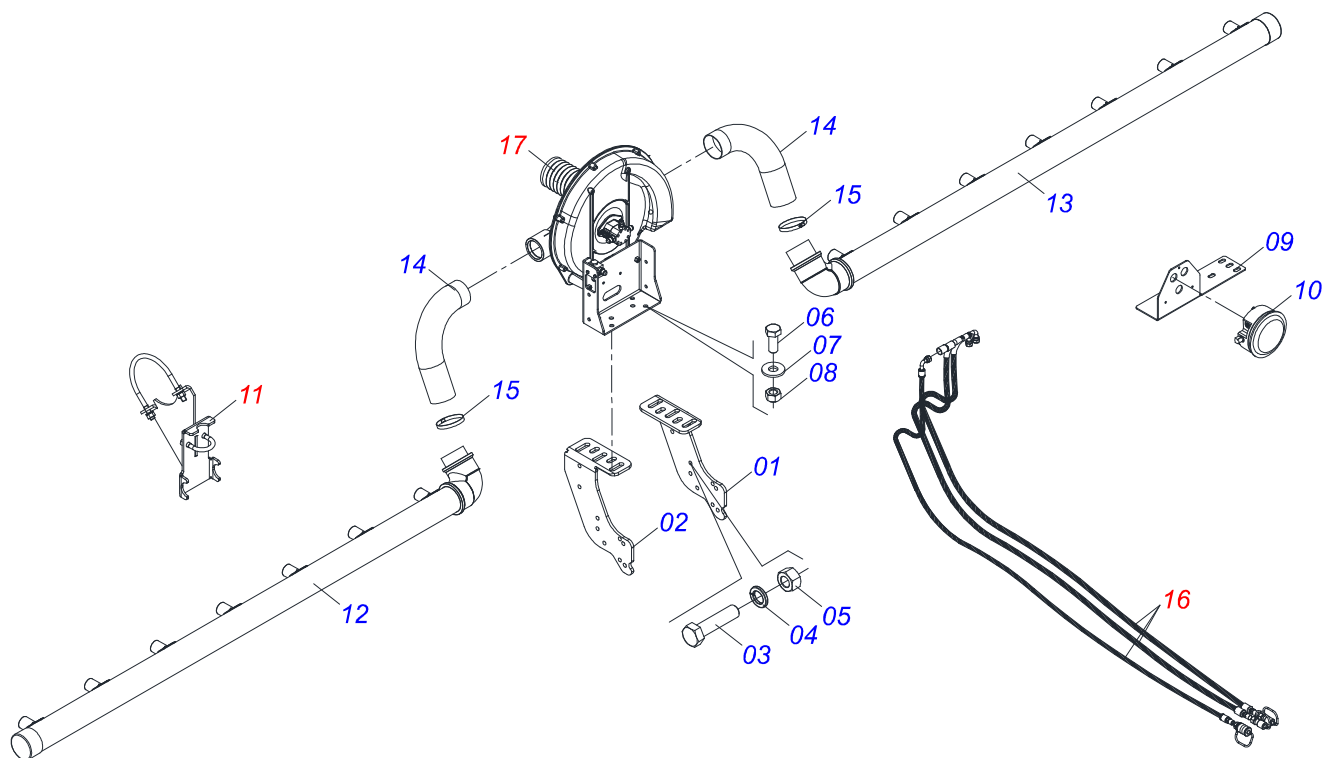


Item	Code	Description	See page	QT
01	0571019978	LEFT BODY		01
02	0571019979	SHAFT FIXER BODY		01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04
06	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		02
07	0501012140	FLAT WASHER		02
08	0503012412	5/8 UNC SELF LOCKING NUT		02
09	0571019552	SUPPORT VACUUM		01
10	0503013584	VACUUM GAUGE		01
11	0521050914	DISTRIBUTOR VACUUM SUPPORT	97	04
12	0521050262	RIGHT AIR DISTRIBUTOR	101	01
13	0521050263	LEFT AIR DISTRIBUTOR	102	01
14	0581012166	HOSE		02
15	0503011372	102 TO 121 CLAMP		04
16	0511057906	HOSE ASSY	91	01
17	0511059406	TURBINE P.P MOUNTED	92	01

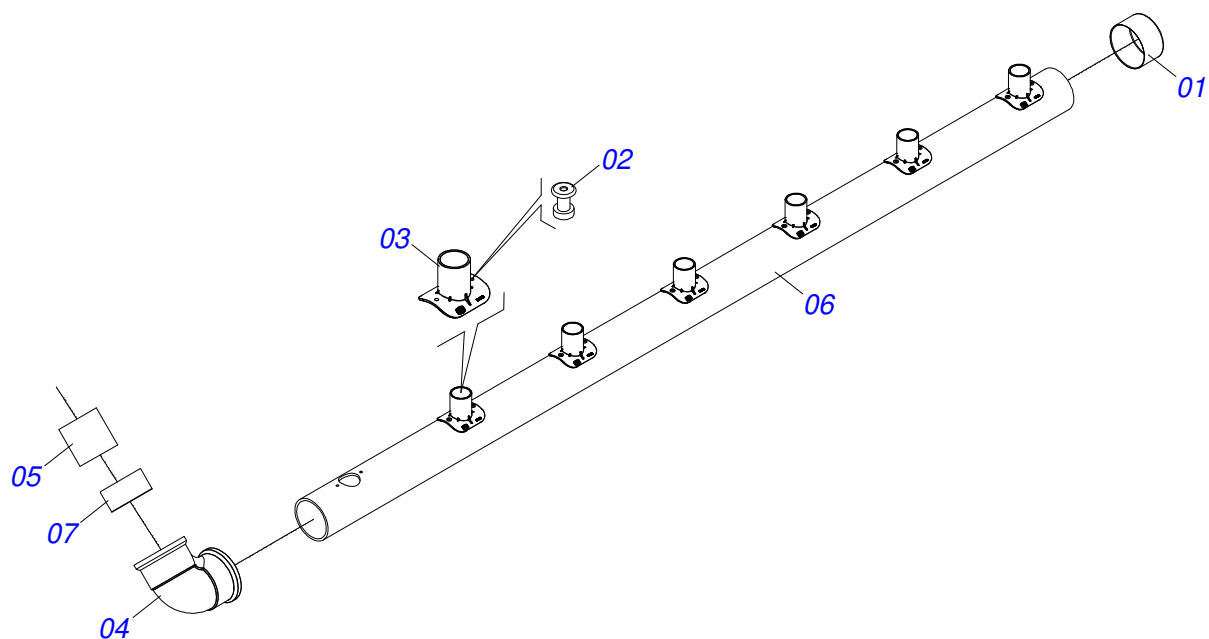 


Item	Code	Description	See page	QT
01	0503012566	COVER KAP 110 YELLOW		01
02	0503012856	REBITE POP		14
03	0503031943	SOCKET		07
04	0503017845	PVC KNEE 90 SOLD AVEL		01
05	0571018559	WHITE PVC TUBE		01
06	0581011923	BODY DISTRIBUTOR VACUUM COP		01
07	0521015543	DUTO 110 X 55		01

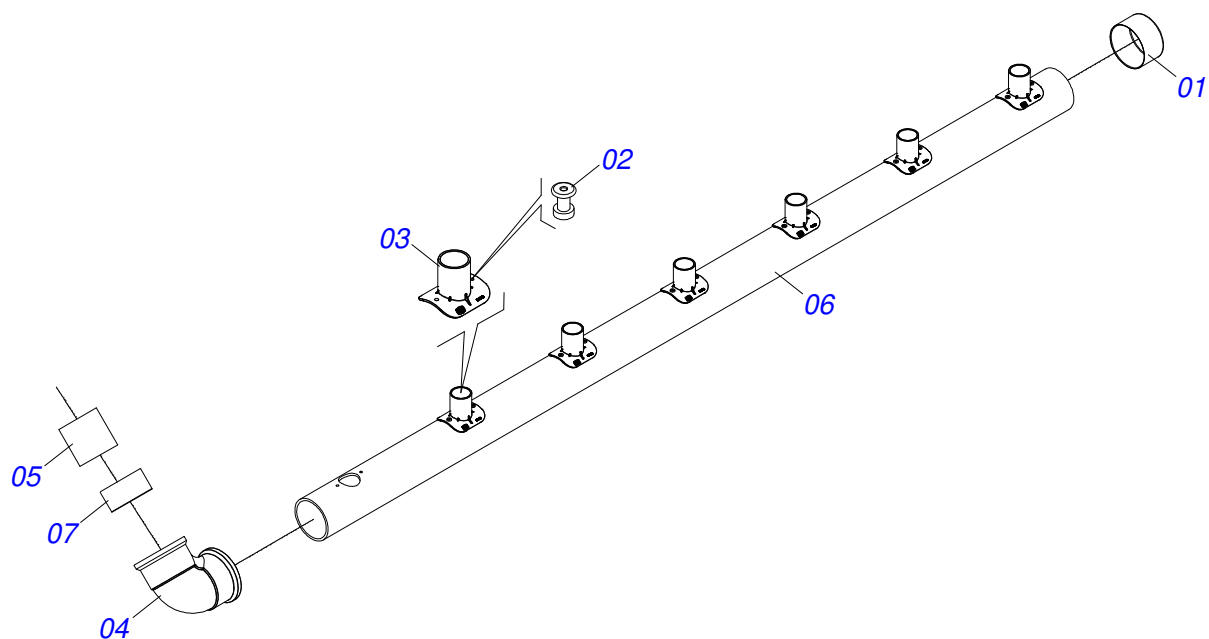 


Item	Code	Description	See page	QT
01	0503012566	COVER KAP 110 YELLOW		01
02	0503012856	REBITE POP		14
03	0503031943	SOCKET		07
04	0503017845	PVC KNEE 90 SOLD AVEL		01
05	0571018559	WHITE PVC TUBE		01
06	0581011923	BODY DISTRIBUTOR VACUUM COP		01
07	0521015543	DUTO 110 X 55		01

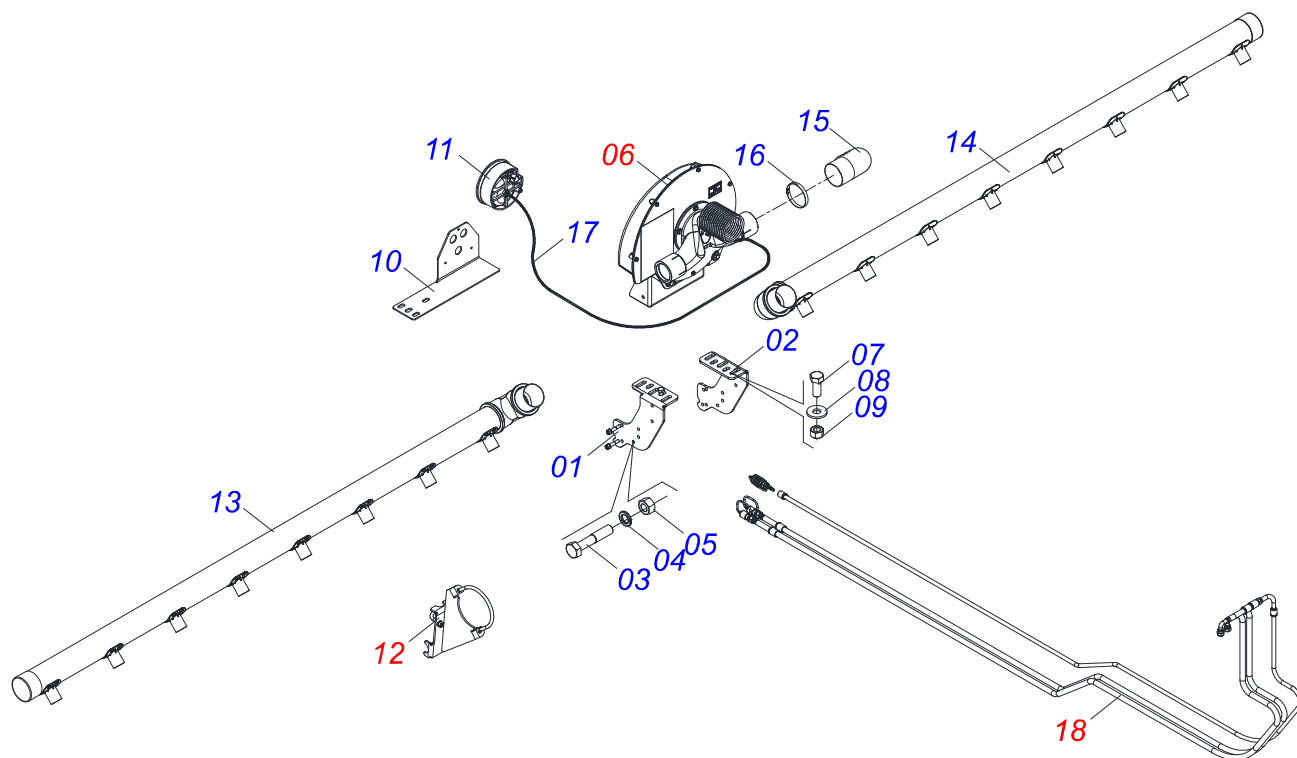 


Item	Code	Description	See page	QT
01	0571019978	LEFT BODY		01
02	0571019979	SHAFT FIXER BODY		01
03	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04
06	0511059406	TURBINE P.P MOUNTED	92	01
07	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		02
08	0501012140	FLAT WASHER		02
09	0503012412	5/8 UNC SELF LOCKING NUT		02
10	0571013731	VACUUM GAUGE SUPPORT		01
11	0503013584	VACUUM GAUGE		01
12	0521050914	DISTRIBUTOR VACUUM SUPPORT	97	04
13	0511059090	VACUUM 8B LEFT DISTRIBUTOR	104	01
14	0521050915	DISTRIBUTOR VACUUM 8B RIGHT	105	01
15	0581012166	HOSE		02
16	0503011372	102 TO 121 CLAMP		04
17	0503015062	TUBE		03
18	0511057906	HOSE ASSY	91	01

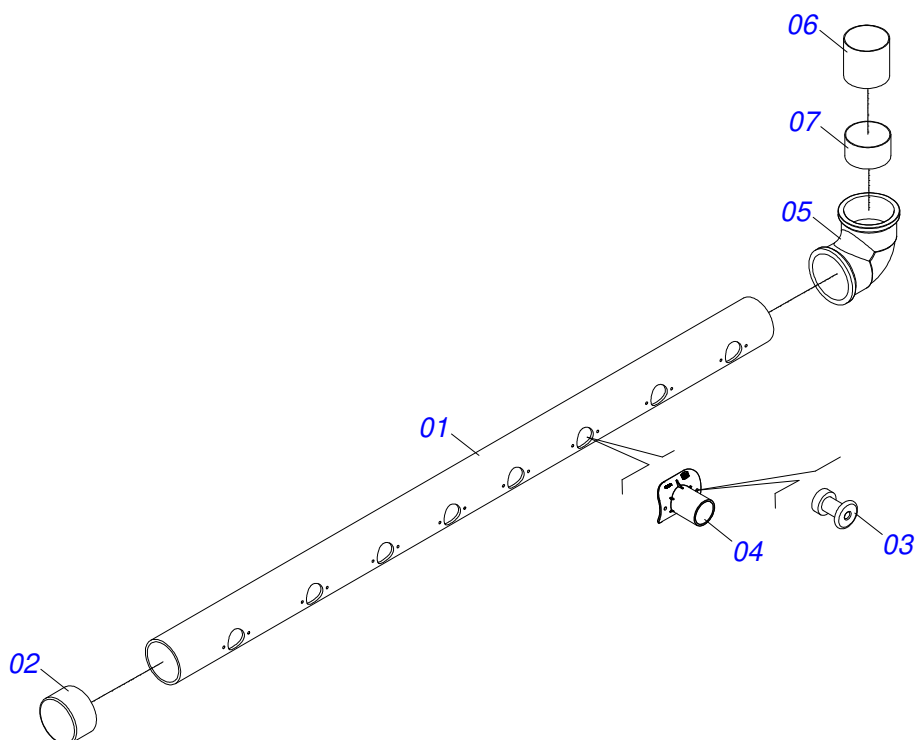 

Item	Code	Description	See page	QT
01	0581011677	BODY DISTRIBUTOR VACUUM		01
02	0503012566	COVER KAP 110 YELLOW		01
03	0503012856	REBITE POP		16
04	0503031943	SOCKET		08
05	0503017845	PVC KNEE 90 SOLD AVEL		01
06	0571018559	WHITE PVC TUBE		01
07	0521015543	DUTO 110 X 55		01

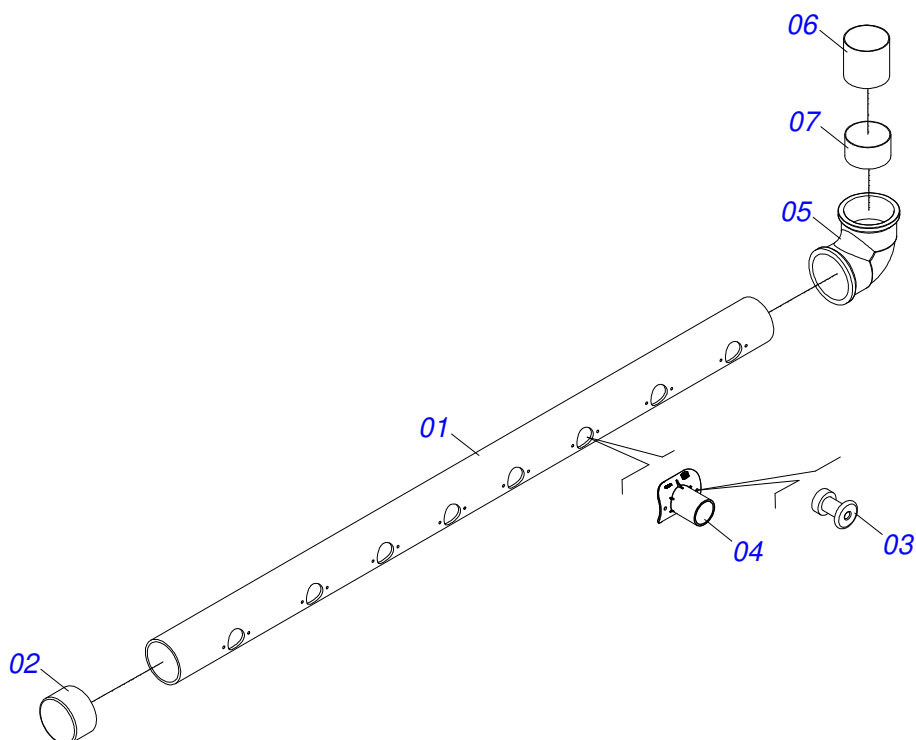 


Item	Code	Description	See page	QT
01	0581011677	BODY DISTRIBUTOR VACUUM		01
02	0503012566	COVER KAP 110 YELLOW		01
03	0503012856	REBITE POP		16
04	0503031943	SOCKET		08
05	0503017845	PVC KNEE 90 SOLD AVEL		01
06	0571018559	WHITE PVC TUBE		01
07	0521015543	DUTO 110 X 55		01

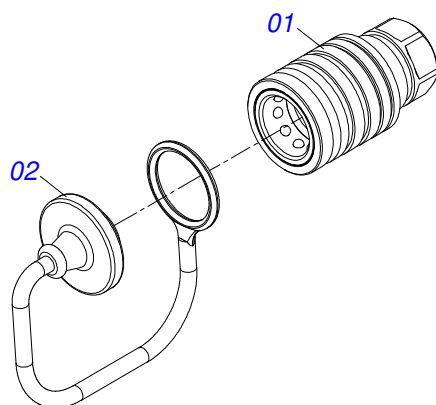 

Item	Code	Description	See page	QT
01	0503018799	QUICK COUPLING		01
02	0503011883	QUICK CONNECTION COVER		01

SQUARE AXLE ASSEMBLY (730)

 
0511053342

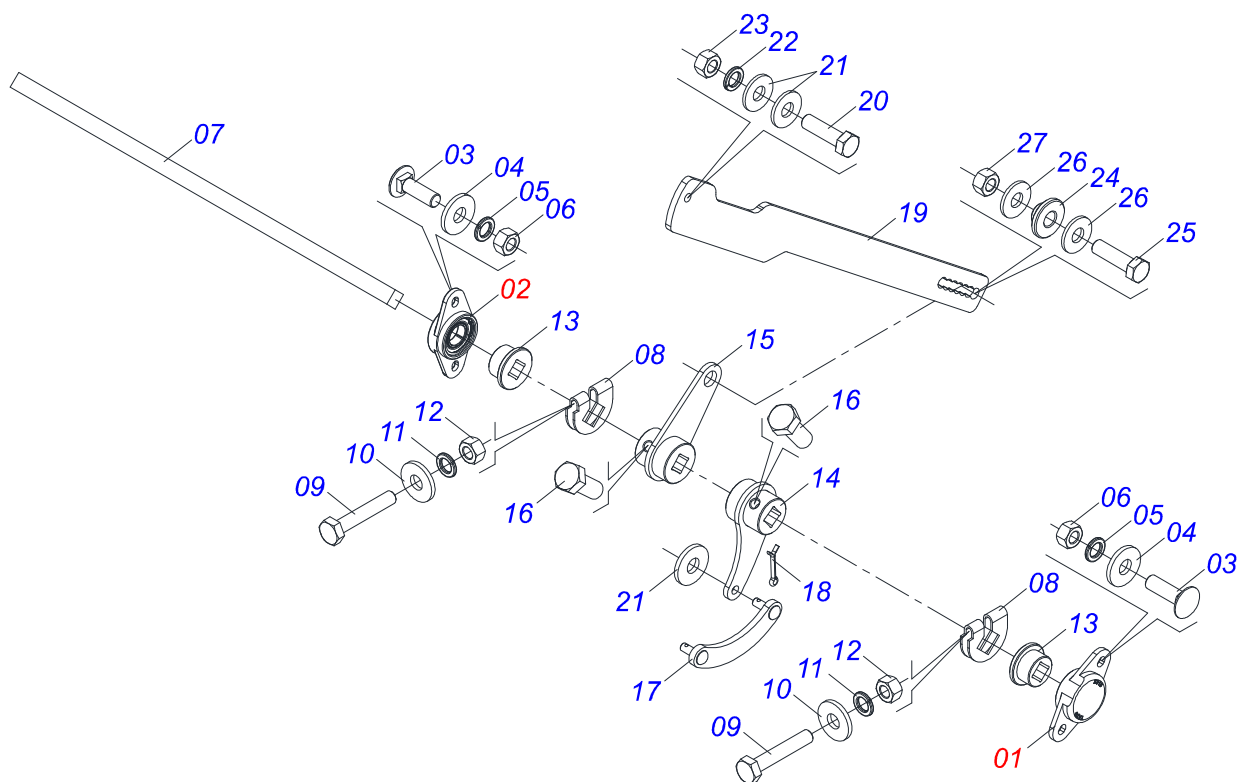


Item	Code	Description	See page	QT
01	0501056271	BEARING CLOSED	47	02
02	0501056444	BEARING WITH ROLLING	109	02
03	0503011953	5/16" X 1" BOLT		08
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
05	0503010179	5/16" ZN SPRING WASHER		08
06	0503010337	5/16" NUT		08
07	0511014218	3/4" X 28.7" SQUARE SHAFT		02
08	0521010691	AXLE FASTENER		04
09	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		04
10	0511017303	FLAT WASHER		04
11	0503010143	1/4" SPRING WASHER		04
12	0503010144	1/4" NUT		04
13	0503030303	SUPPORT WASHER		04
14	0521061852	LEVER RATCHET		02
15	0521061847	AXLE ADRIVING ASSY		02
16	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
17	0521061849	DISASSEMBLE LEVER		02
18	0503010140	1/8" X 3/4" COTTERPIN		04
19	0571012792	LOWER LEVER		02
20	0503011082	C1/2" X 1.3/4" SCREW		02
21	0511017302	FLAT WASHER		04
22	0503010019	1/2" SPRING WASHER		02
23	0503010060	1/2" NUT		02
24	0561016797	SLEEVE UNION LEVER ARM/DESARM		02
25	0501010096	3/8" X 2" BOLT		02
26	0501010984	FLAT WASHER		04
27	0503010026	3/8" NUT		04

SQUARE SHAFT SET

 0511053434

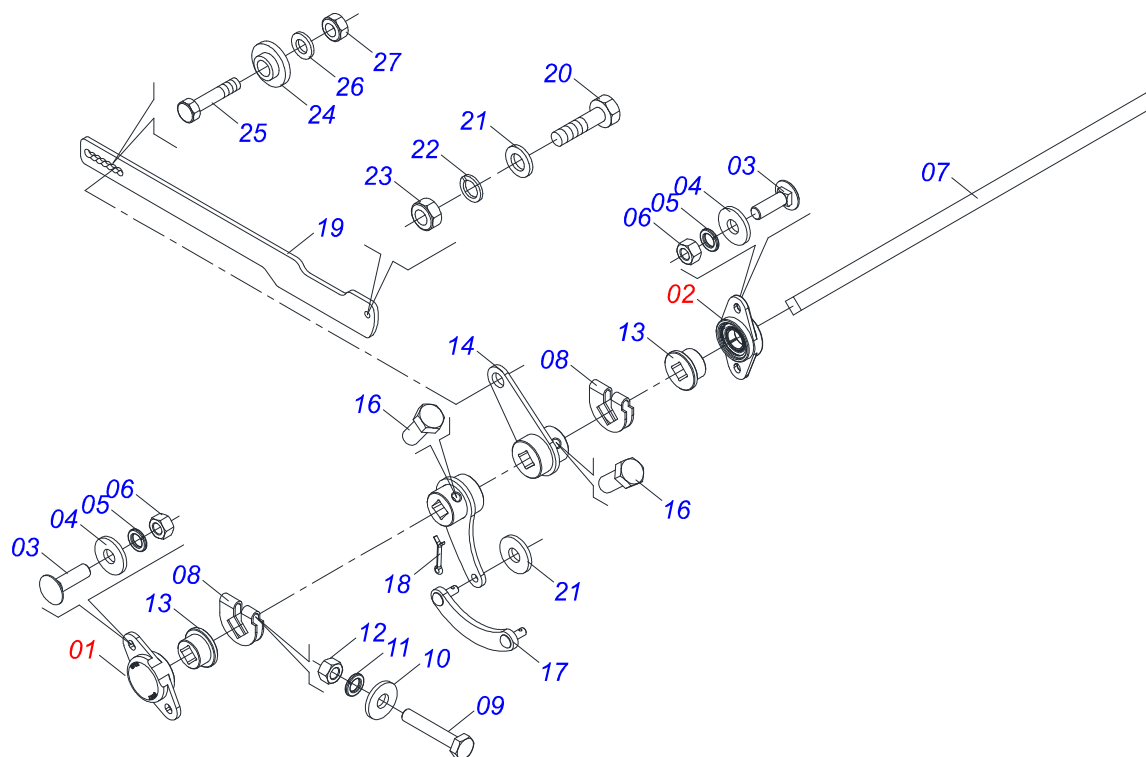


Item	Code	Description	See page	QT
01	0501056271	BEARING CLOSED	47	02
02	0501056444	BEARING WITH ROLLING	109	02
03	0503011953	5/16" X 1" BOLT		08
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
05	0503010179	5/16" ZN SPRING WASHER		08
06	0503010337	5/16" NUT		08
07	0501018653	3/4" X 46" SQUARE SHAFT		02
08	0521010691	AXLE FASTENER		04
09	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		04
10	0511017303	FLAT WASHER		04
11	0503010143	1/4" SPRING WASHER		04
12	0503010144	1/4" NUT		04
13	0503030303	SUPPORT WASHER		04
14	0521061852	LEVER RATCHET		02
15	0521061847	AXLE ADRIVING ASSY		02
16	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
17	0521061849	DISASSEMBLE LEVER		02
18	0503010140	1/8" X 3/4" COTTERPIN		04
19	0571012792	LOWER LEVER		02
20	0503011082	C1/2" X 1.3/4" SCREW		02
21	0511017302	FLAT WASHER		04
22	0503010019	1/2" SPRING WASHER		02
23	0503010060	1/2" NUT		02
24	0561016797	SLEEVE UNION LEVER ARM/DESARM		02
25	0501010096	3/8" X 2" BOLT		02
26	0501010984	FLAT WASHER		04
27	0503010026	3/8" NUT		04

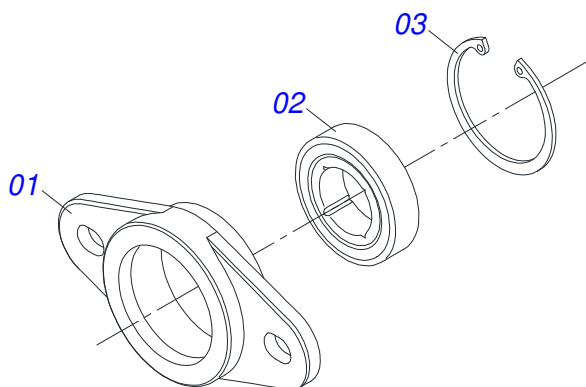 


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

DRAWBAR TURNBUCKLE

 
0511050906

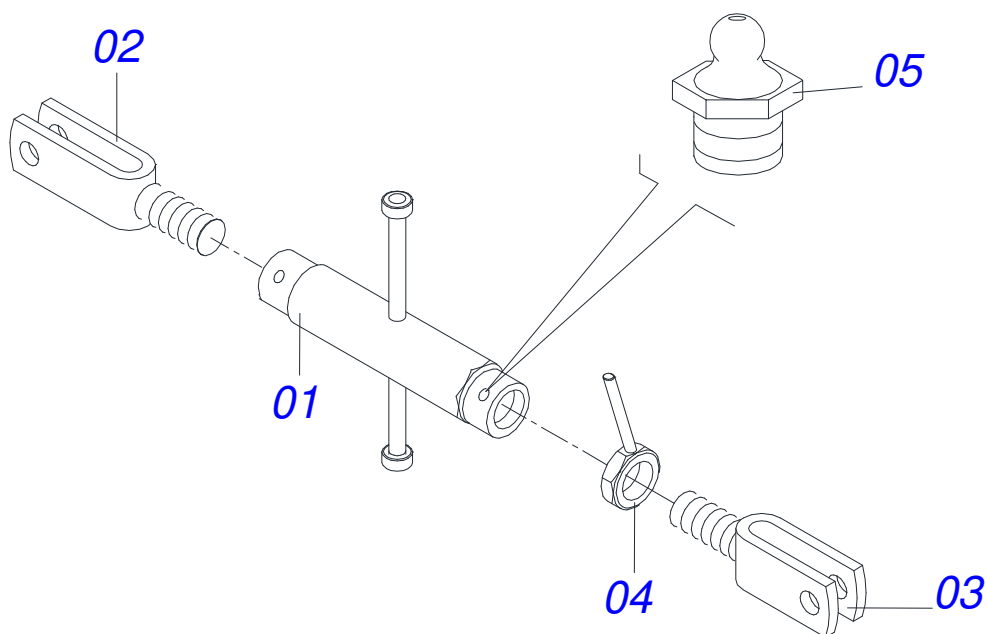


Item	Code	Description	See page	QT
01	0501069529	653 TURNBUCKLE		01
02	0521062278	RIGHT TURNBUCKLE		01
03	0511062888	LH TURNBUCKLE		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

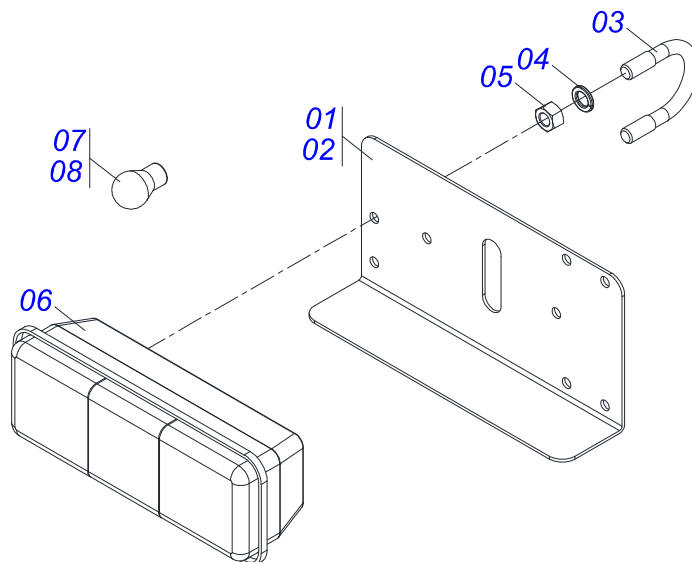 

Item	Code	Description	See page	QT
01	0551019882	SUPPORT FLASHLIGHT		01
02	0551019883	SUPPORT FLASHLIGHT LEFT		01
03	0551019884	45 X 50 X 3/8 FASTENER		06
04	0503010025	3/8" SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0503032811	FLASHLIGHT		02
07	0503032812	1141 12V LAMP		04
08	0503032813	67 12V 5W LAMP		02

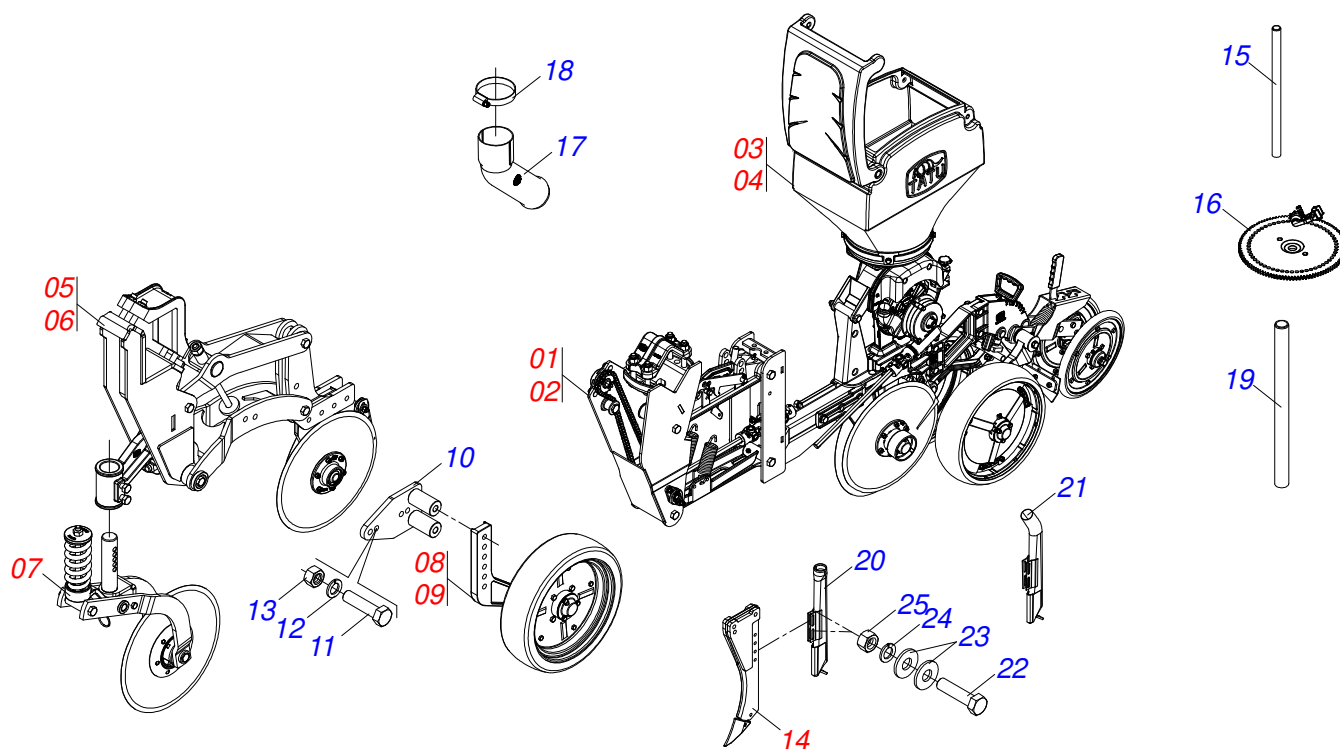 


Item	Code	Description	See page	QT
01	0511057244	RIGH SHORT SEED ROW FRONT	113	01
02	0511057247	LEFT LONG SEED ROW FRONT	114	01
03	0521050912	REAR ASSY	119	01
04	0521050911	LEFT REAR ASSY	120	01
05	0511053409	FERTILIZER ROW SHORT ASSY	129	01
06	0511053410	SEED FERTILIZER LONG ROW	130	01
07	0511051818	DISC CUT 18 SEMI MOUNTED	131	01
08	0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL	133	01
09	0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	136	01
10	0511065909	DEPTH FIXER BASE		01
11	0503010547	1/2" X 4" BOLT		01
12	0503010019	1/2" SPRING WASHER		01
13	0503010060	1/2" NUT		01
14	0501110231	SCARIFIER HEAD WITH SPIKE 0061		01
15	0531013600	PRESS ADJUSTMENT LEVER		01
16	0503062763	CONVERSION ASSY FOR DISTRIBUTOR SOY / BEANS		01
17	0503031050	CURVED CONDUCTOR		01
18	0503010246	CLAMP		01
19	0521018501	TURNBUCKLE LEVER		01
20	0511063823	FERT CONDUCTOR WITH REGULATOR		01
21	0511065843	FERT CONDUCTOR WITH REGULATOR		01
22	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
23	0501010984	FLAT WASHER		01
24	0503010025	3/8" SPRING WASHER		01
25	0503010026	3/8" NUT		01

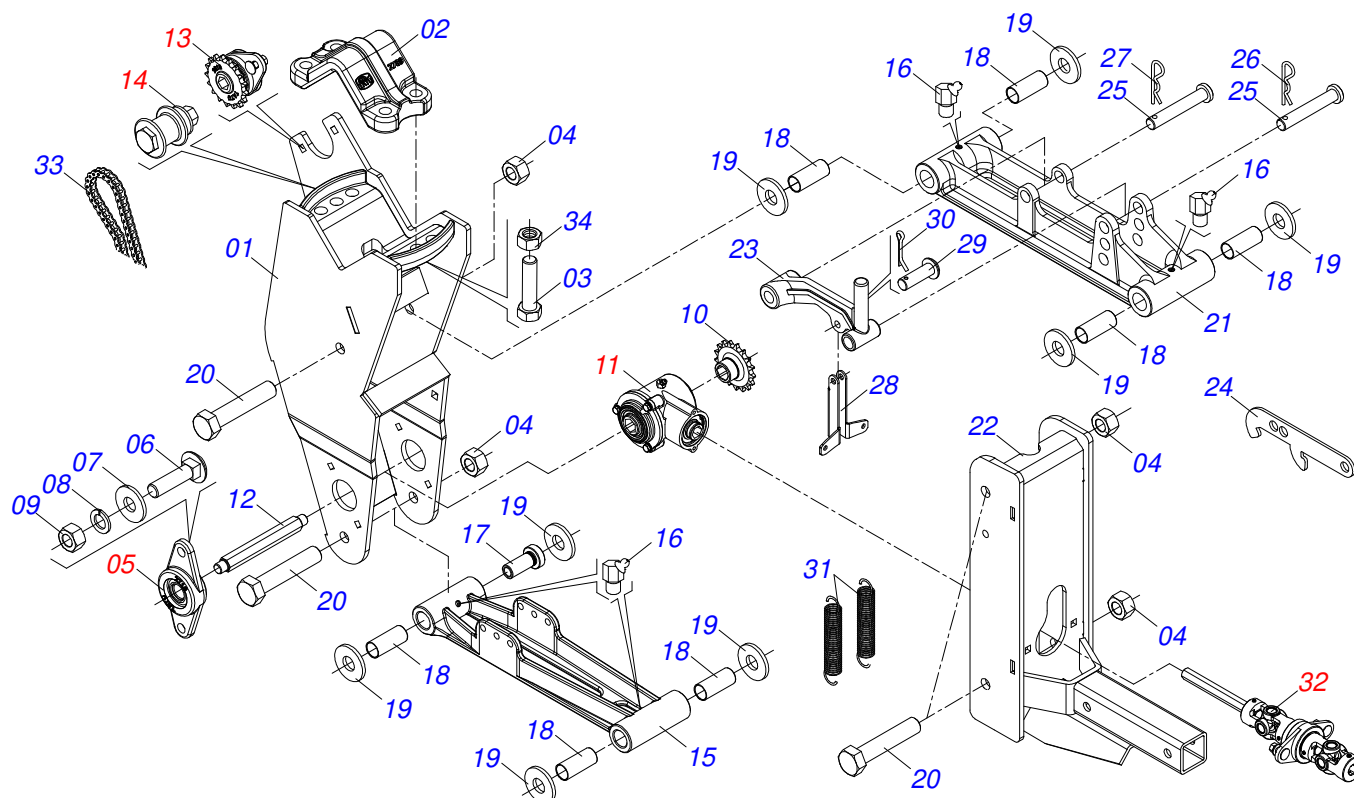 

Item	Code	Description	See page	QT
01	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8 UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	115	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
08	0503010179	5/16" ZN SPRING WASHER		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION BOX SEED LINE	116	01
12	0561014904	TRANSMISSION AXLE FRAME LINE		01
13	0511050609	BEARING WITH 17Z GEAR ASSY	117	01
14	0511055260	SEED ROW CHAIN TENSIONER	118	01
15	0502012666	SEDD ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521065847	SHORT TIRE SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HAIR PIN		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02



Item	Code	Description	See page	QT
32	0511052426	TRANSMISSION CARDAN ASSY		01
33	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

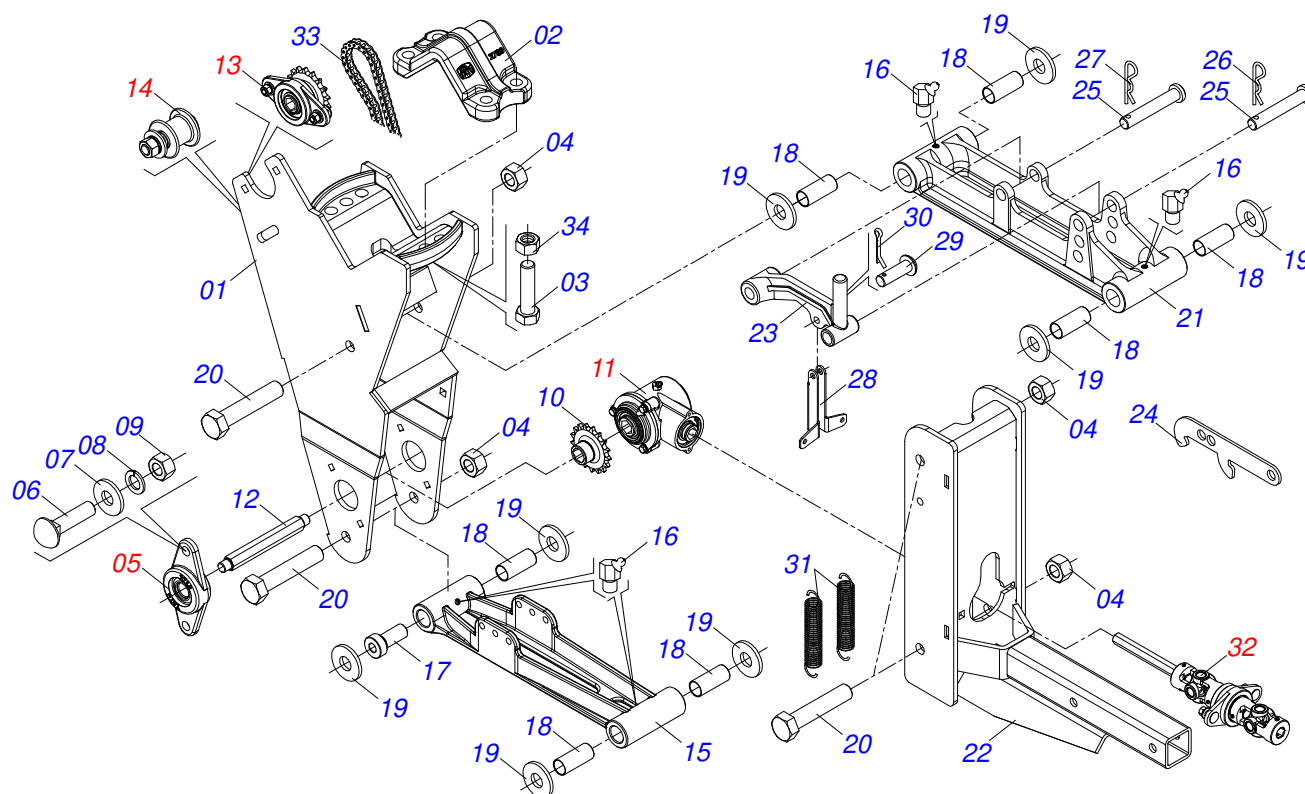 


Item	Code	Description	See page	QT
01	0521064650	LEFT SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8 UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	115	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
08	0503010179	5/16" ZN SPRING WASHER		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION BOX SEED LINE	116	01
12	0561014904	TRANSMISSION AXLE FRAME LINE		01
13	0511050609	BEARING WITH 17Z GEAR ASSY	117	01
14	0511055260	SEED ROW CHAIN TENSIONER	118	01
15	0502012666	SEDD ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521065847	SHORT TIRE SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HAIR PIN		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02


**LEFT LONG SEED ROW FRONT**

 0511057247


Item	Code	Description	See page	QT
32	0511052426	TRANSMISSION CARDAN ASSY		01
33	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

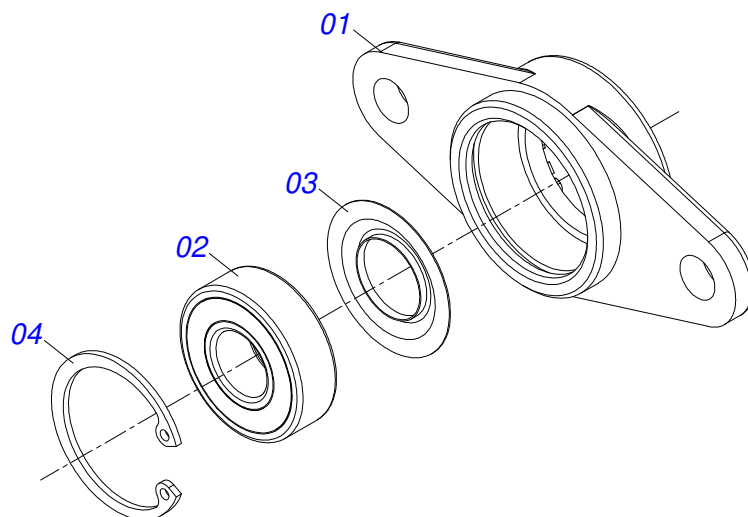


Item	Code	Description	See page	QT
01	0502012718	BEARIN BODY		01
02	0503012882	BEARING		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

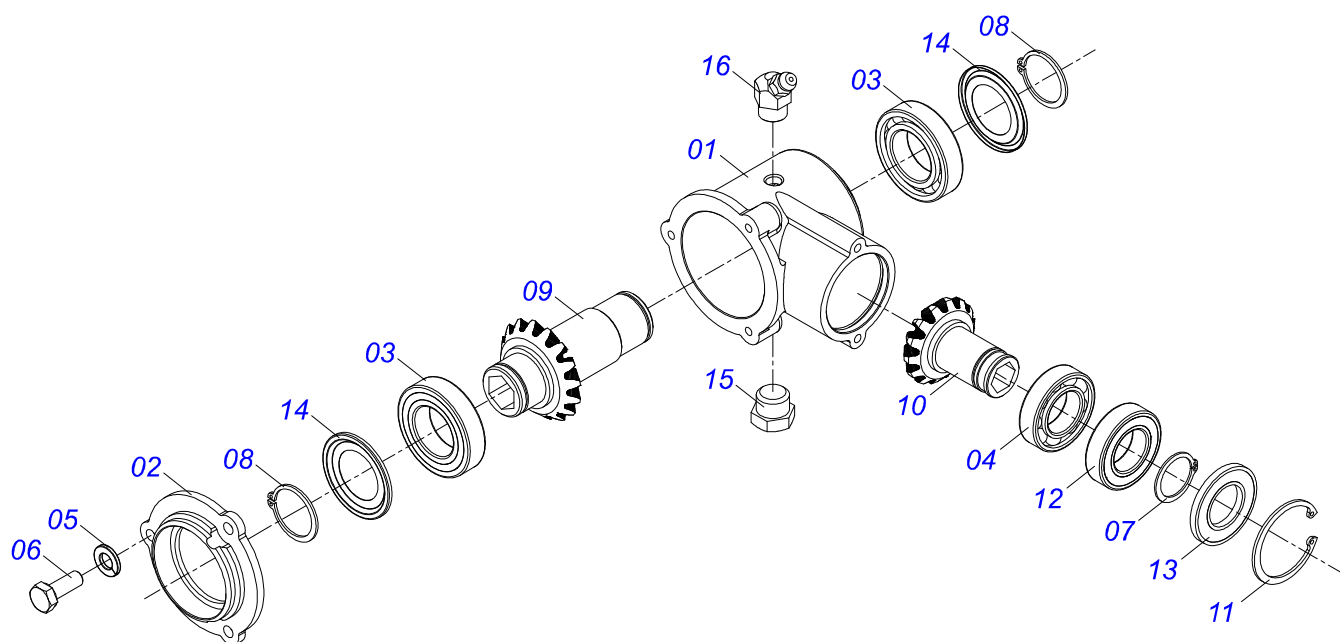 

Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01

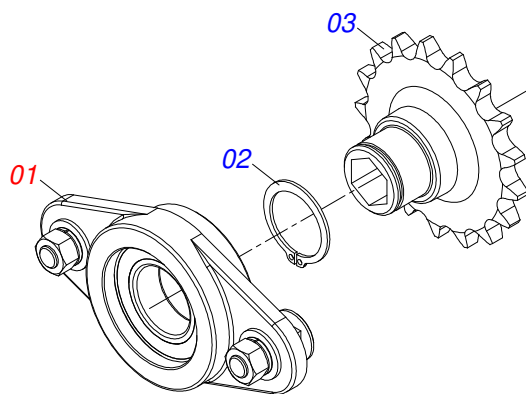 


Item	Code	Description	See page	QT
01	0511050617	FRONT SEED ROW BEARING		01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0502012819	17Z GEAR WITH HEX HOLE		01

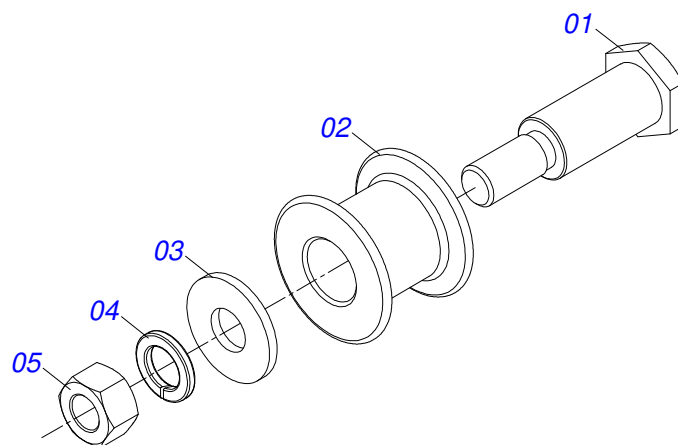 

Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

REAR ASSY

 0521050912

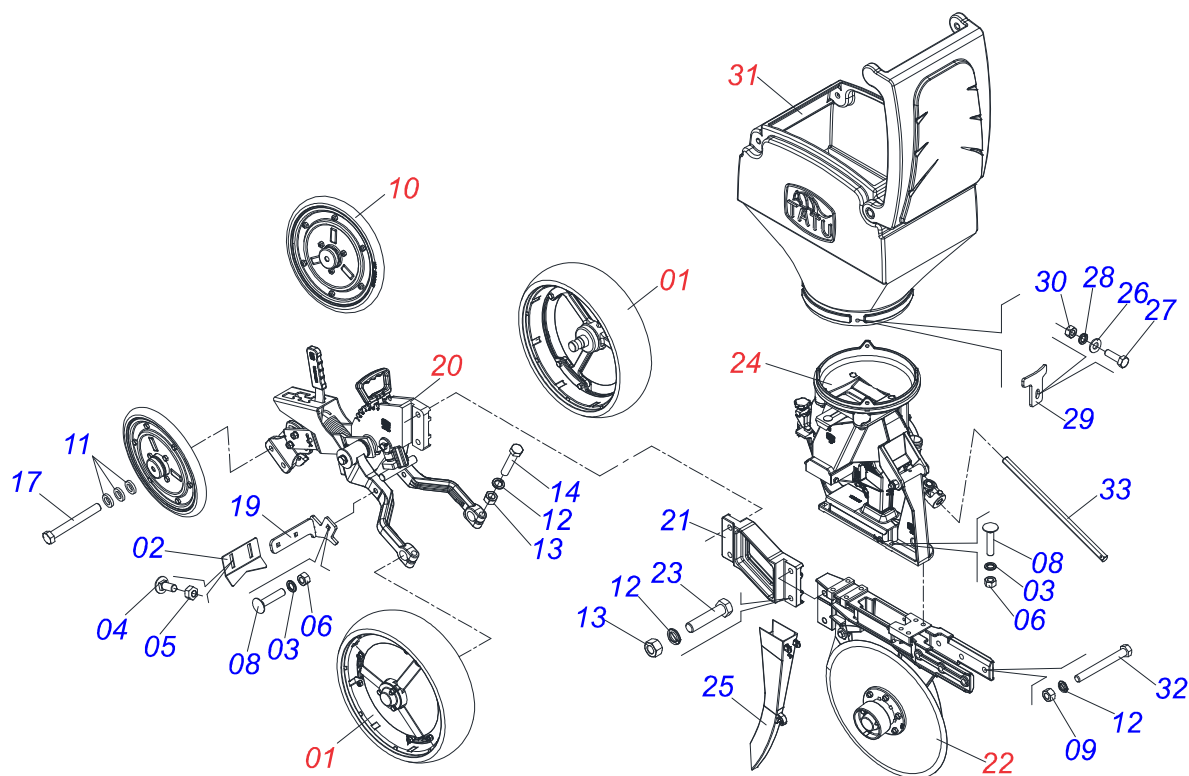

Item	Code	Description	See page	QT
01	0511054827	CLOSE WHEEL STRIPED CENTER	121	02
02	0561014438	SCRAPER BODY		02
03	0503010025	3/8" SPRING WASHER		06
04	0503011952	5/16" X 3/4" BOLT		04
05	0503013816	5/16" LOCKNUT		04
06	0503010026	3/8" NUT		06
07	0521064730	LEFT SCRAPER SUPPORT		01
08	0503015920	3/8" UNC X 1.3/4" BOLT		06
09	0503010060	1/2" NUT		06
10	0501052908	COMPACTOR WHEEL WITH BEARING	122	02
11	0521014508	FLAT WASHER		06
12	0503010019	1/2" SPRING WASHER		08
13	0503010028	1/2" NUT		02
14	0503016453	1/2" X 2.1/2 BOLT		02
15	0503016864	LH 1/2" LOCK NUT		01
16	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
17	0503016449	1/2 X 4 BOLT		01
18	0503012136	NUT 1/2 NF		01
19	0521064729	RIGHT SCRAPER SUPPORT		01
20	0511054830	SUBSET SET	123	01
21	0502012663	EXTENSION		01
22	0511059080	LH 15"X15" SEED UNAL DOUB-DISC ASSY	125	01
23	0503010905	1/2" X 2-1/4" BOLT		04
24	0521050910	CONJ PP V-SET2	128	01
25	0503062403	TUBE SEED P.P		01
26	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
27	0503010371	5/16" X 1" BOLT		04
28	0503010179	5/16" ZN SPRING WASHER		04
29	0531010631	SEED BEAM CLAMP		04
30	0503010337	5/16" NUT		04
31	0581012239	FERTILIZER BEAM ASSY		01


**REAR ASSY**

 0521050912

Item	Code	Description	See page	QT
32	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02
33	0581012756	HEX AXLE 5/8 X 360		01

LEFT REAR ASSY

0521050911

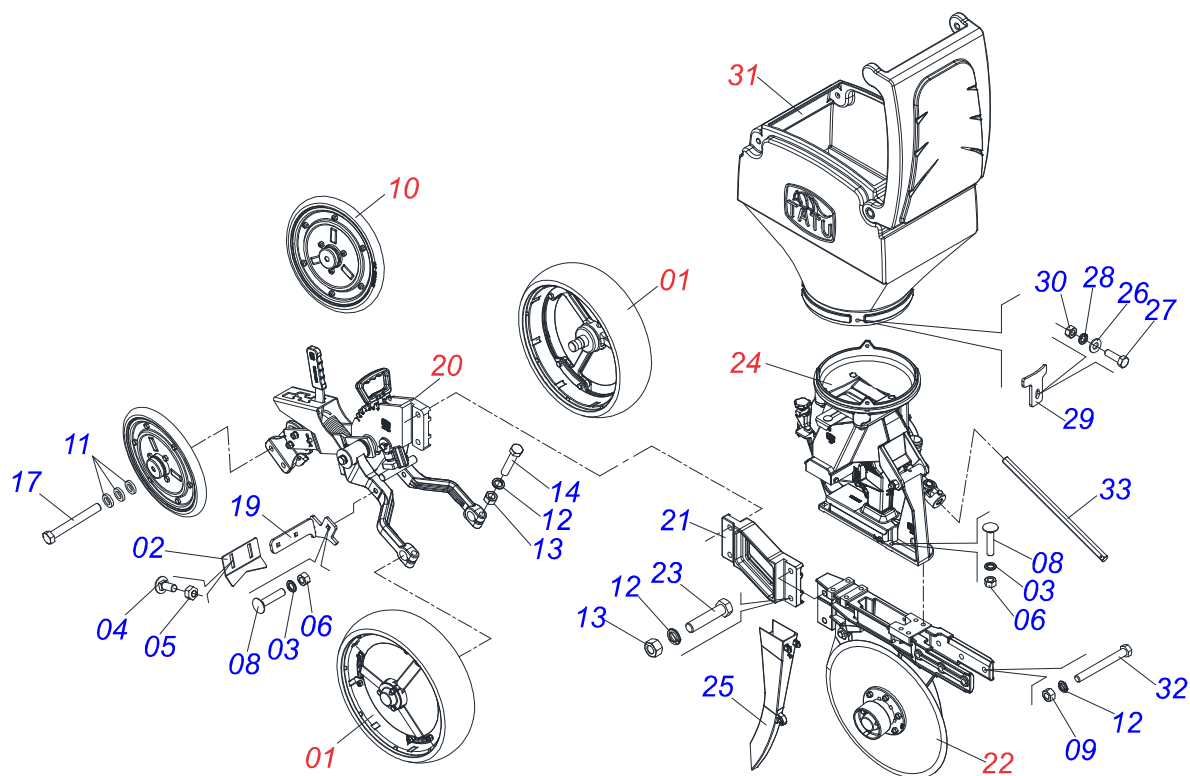


Item	Code	Description	See page	QT
01	0511054827	CLOSE WHEEL STRIPED CENTER	121	02
02	0561014438	SCRAPER BODY		02
03	0503010025	3/8" SPRING WASHER		06
04	0503011952	5/16" X 3/4" BOLT		04
05	0503013816	5/16" LOCKNUT		04
06	0503010026	3/8" NUT		06
07	0521064730	LEFT SCRAPER SUPPORT		01
08	0503015920	3/8" UNC X 1.3/4" BOLT		06
09	0503010060	1/2" NUT		06
10	0501052908	COMPACTOR WHEEL WITH BEARING	122	02
11	0521014508	FLAT WASHER		06
12	0503010019	1/2" SPRING WASHER		08
13	0503010028	1/2" NUT		02
14	0503016453	1/2" X 2.1/2 BOLT		02
15	0503016864	LH 1/2" LOCK NUT		01
16	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
17	0503016449	1/2 X 4 BOLT		01
18	0503012136	NUT 1/2 NF		01
19	0521064729	RIGHT SCRAPER SUPPORT		01
20	0511054830	SUBSET SET	123	01
21	0502012663	EXTENSION		01
22	0511059081	LH 15"X15" SEED UNAL DOUB-DISC ASSY		01
23	0503010905	1/2" X 2-1/4" BOLT		04
24	0521050910	CONJ PP V-SET2	128	01
25	0503062403	TUBE SEED P.P		01
26	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
27	0503010371	5/16" X 1" BOLT		04
28	0503010179	5/16" ZN SPRING WASHER		04
29	0531010631	SEED BEAM CLAMP		04
30	0503010337	5/16" NUT		04
31	0581012239	FERTILIZER BEAM ASSY		01




LEFT REAR ASSY

0521050911


Item	Code	Description	See page	QT
32	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02
33	0581012756	HEX AXLE 5/8 X 360		01

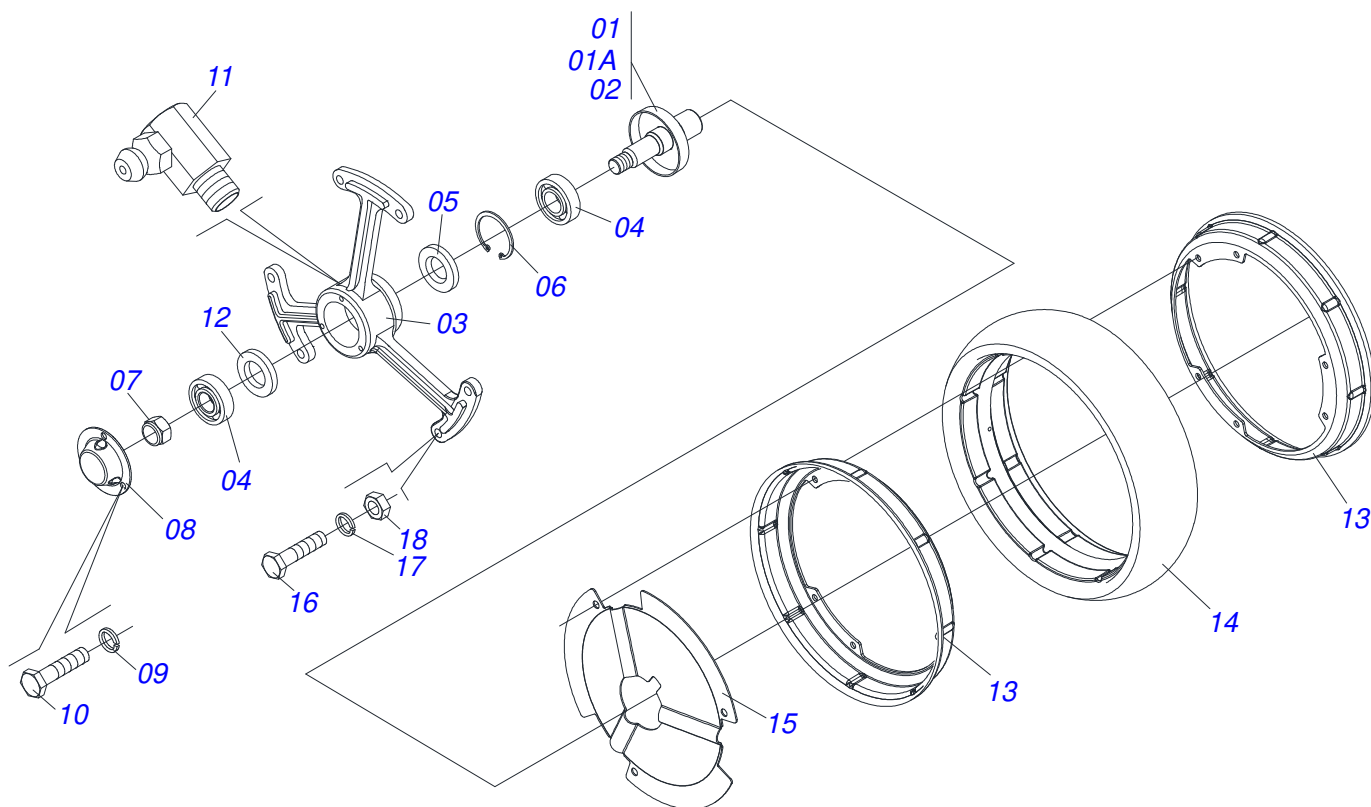 


Item	Code	Description	See page	QT
01	0511054827	CLOSE WHEEL STRIPED CENTER	121	01
01A	0511052287	DEPTH WHEEL HUB ASSY		01
02	0521063443	DEPTH CONTROL AXLE		01
03	0502011918	DEPHT WHEELS BOX		01
04	0503010269	6204 BALL BEARING		02
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010811	5/8" UNF SELF ADJUSTING NUT		01
08	0521019178	COVER DEPTH		01
09	0503011441	SPRING WASHER		03
10	0503010298	1/4" X 1/2" BOLT		03
11	0503010691	1/4" GREASE FITTING		01
12	0501013636	SPACING SLEEVE		01
13	0551019904	PRESS WHEEL RIM		02
14	0503032970	RUBBER BAND		01
15	0561016889	STRIPED CAP WHEEL DEPTH		01
16	0503010365	NUT		06
17	0503010179	5/16" ZN SPRING WASHER		06
18	0503010337	5/16" NUT		06

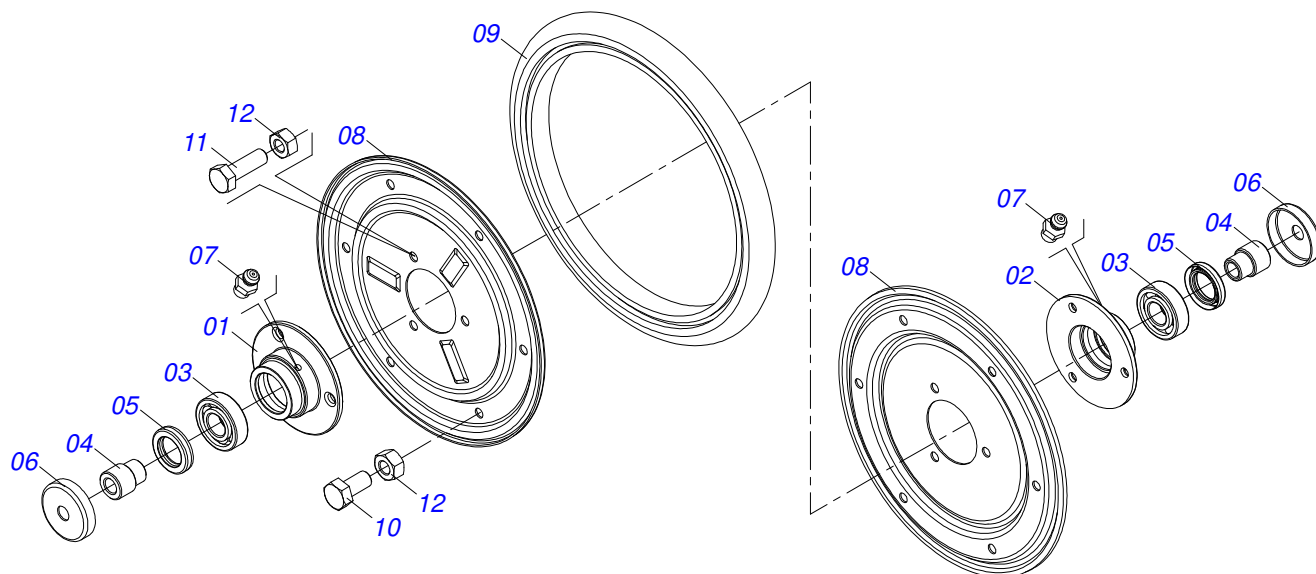 


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

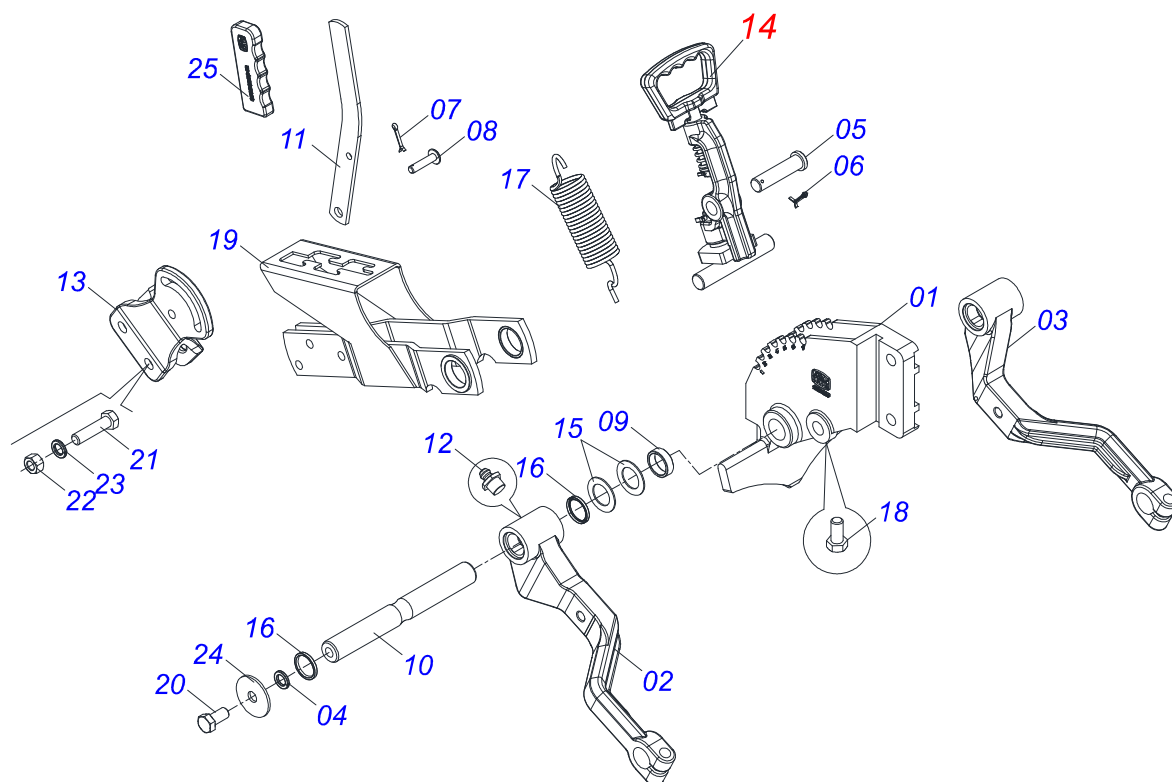 


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0502012762	FERTILIZER DEPTH WHEEL RIGHT ARM		01
03	0502012763	FERTILIZER DEPTH WHEEL LEFT ARM		01
04	0503011440	SPRING WASHER		02
05	0521019093	0.6" X 2.7" PIVOT SHAFT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0503010140	1/8" X 3/4" COTTERPIN		01
08	0521010539	0.3" X 1.2" COUPLING SHAFT		01
09	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
10	0531010765	DEPTH WHEEL AXLE		01
11	0541016906	PRESS WHEELS REGULATOR BODY		01
12	0503010002	1800 GREASE FITTING		02
13	0502012116	PRESS WHEEL ADJUSTER		01
14	0501056769	DEPTH WHEELS REGULATOR ASSY	124	01
15	0511015346	FLAT WASHER		04
16	0503015021	6871-GA SEAL RING		04
17	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
18	0503010256	3/8" X 3/4" BOLT		01
19	0521064073	REGULACION WHEEL COMPACTOR		01
20	0503010834	1/2 X 1 BOLT		02
21	0503010849	3/8" X 1-1/2" BOLT		02
22	0503010026	3/8" NUT		02
23	0503011443	3/8" SPRING WASHER		02
24	0571017749	FLAT WASHER		02
25	0503033942	COVER REGULATORY WHEEL		01

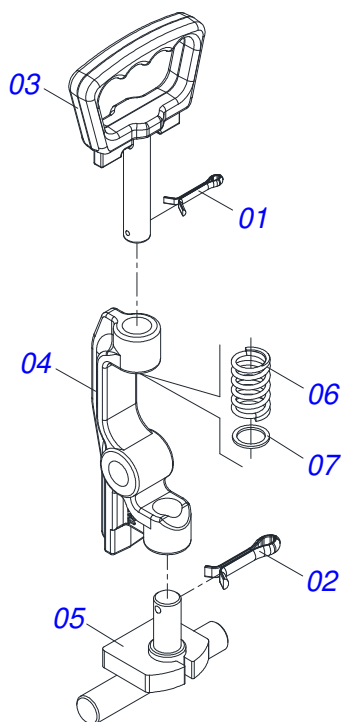 


Item	Code	Description	See page	QT
01	0503010257	1/8" X 1" COTTERPIN		01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0502011689	1/8" DEPTH CONTROL LEVER		01
04	0502011688	SEED SIST CONTROL DEPTH LEVER		01
05	0511065582	DEPTH WHEEL STOP		01
06	0503030975	0.9" X 1.5" X 0.1" SPRING		01
07	0511015976	FLAT WASHER		01

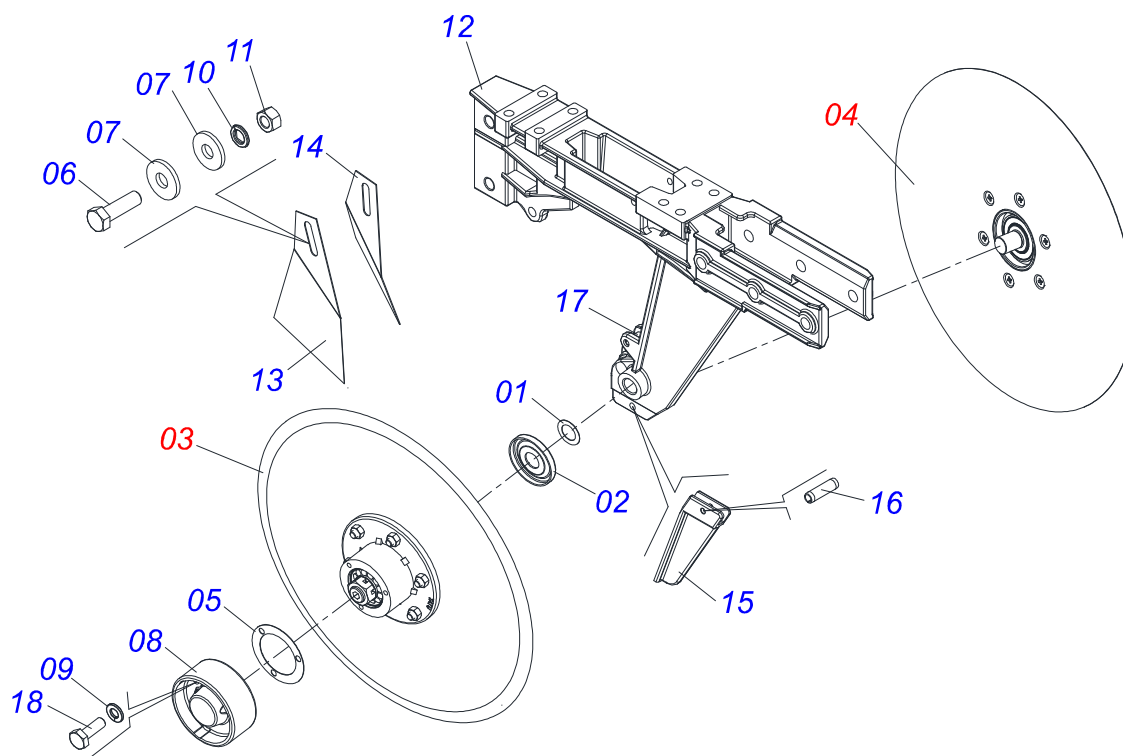 


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	BOX DDD ASSY DPL 15 RIGHT	126	01
04	0501054168	BOX DDD ASSY DPL 15 LEFT	127	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0502012517	COVER		02
09	0503011441	SPRING WASHER		06
10	0503011443	3/8" SPRING WASHER		01
11	0503010026	3/8" NUT		01
12	0502012780	SUPPORT DDD RIGHT		01
13	0571017963	RIGHT DOUBLE DISC SCRAPER		01
14	0571017964	LEFT DOUBLE DISC SCRAPER		01
15	1902012779	PROTECTION CONDUCTOR PRECISION	PNEUMATIC	01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0503013129	ELASTIC PIN		01
18	0503014891	1/4" X 3/4" BOLT		06

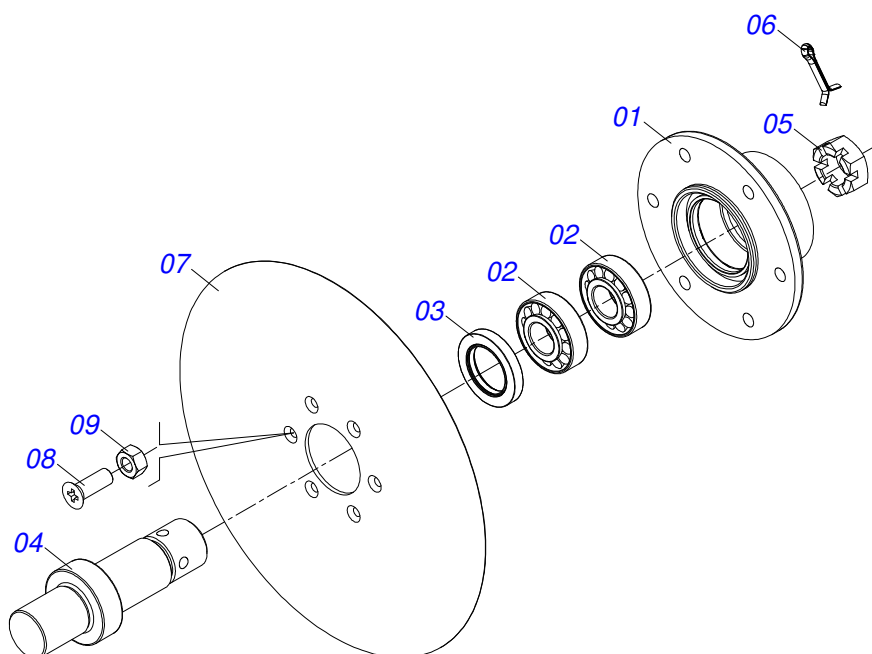 

Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT DOUB DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

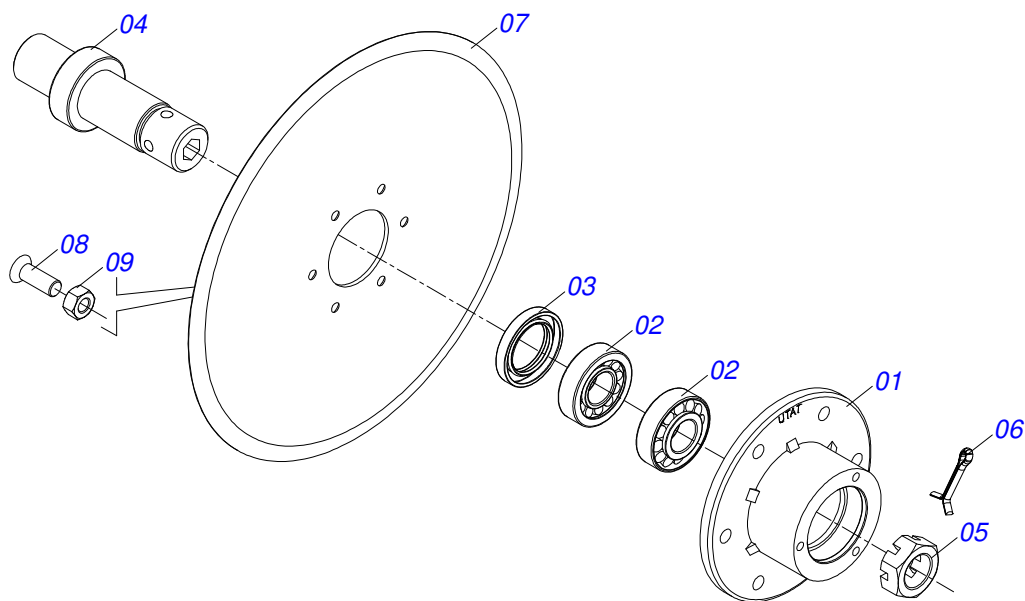 

Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

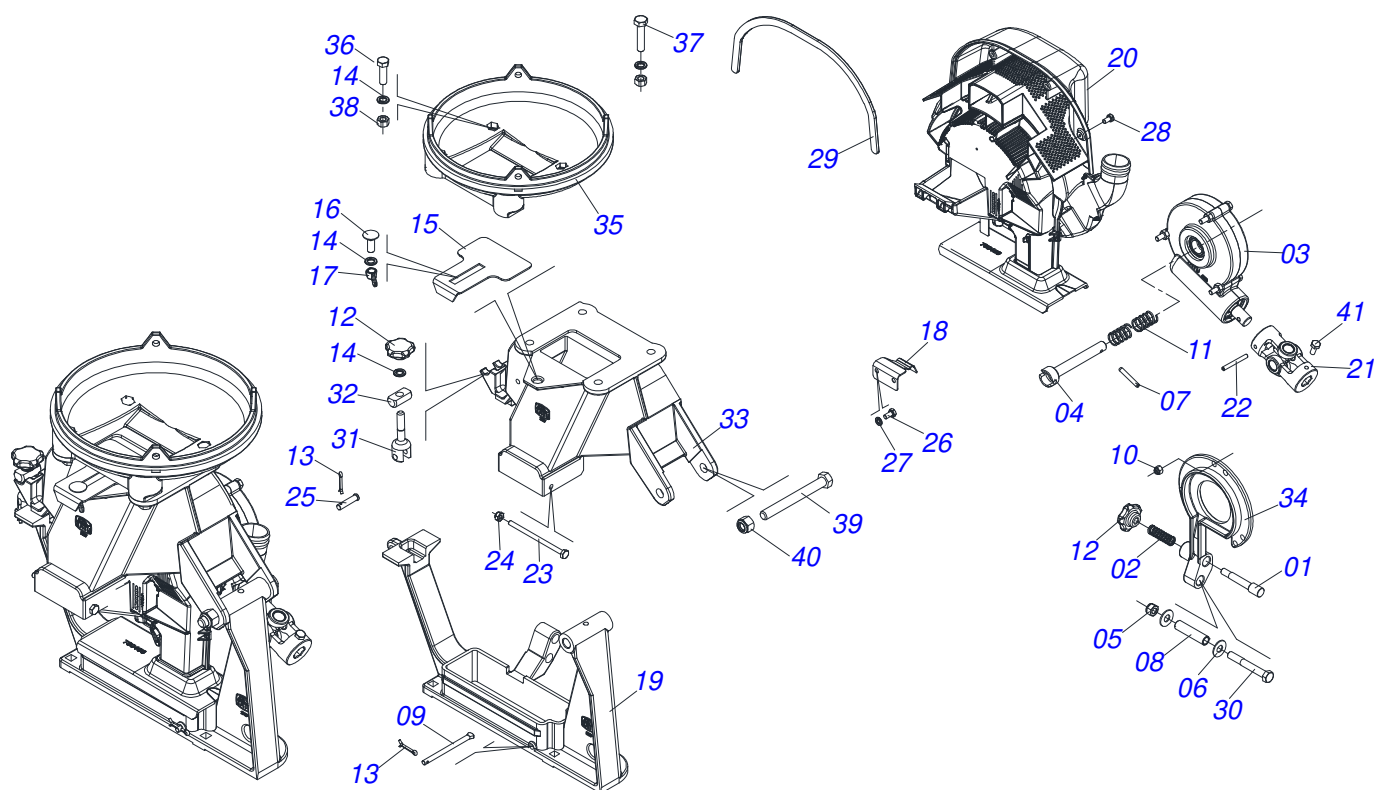 


Item	Code	Description	See page	QT
01	0571017899	PIN LOCK PP		01
02	0503030190	0.5" X 1.6" X 0.05" SPRING		01
03	0511057155	PRECISION PLANTING LEFT TRANSMISSION BOX		01
04	0571017894	PIN DRAG PRECISION PLANTING		01
05	0503013357	3/8" SELF-ADJUSTING NUT		01
06	0501013518	FLAT WASHER		02
07	0503015356	SPRING PIN		01
08	0571017896	SLEEVE ARTICULATION PRECISION PLANTING		01
09	0571017895	PIN FIXER CONDUCTOR P.P		01
10	0503011776	M6 SELF ADJUSTINGNUT		03
11	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		02
12	0503010293	BAQUELITE MANIPULACION		02
13	0503010140	1/8" X 3/4" COTTERPIN		02
14	0503010025	3/8" SPRING WASHER		06
15	0571019491	SLUICE PNEUMATIC PRECISION PLANTING		01
16	0501011643	3/8 X 1"BOLT		01
17	0503010209	3/8" UNC BUTTERFLY NUT		01
18	0571019489	CLAMP PRECISION PLANTING		01
19	0502012799	UPPER SUPPORT BASE PNEUMATIC PRECISION PLANTING		01
20	0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN DISC		01
21	0561014778	HEX UNIVERSAL JOINT		01
22	0503011855	0.2" X 1.8" SPRING PIN		01
23	0503012721	1/4" X 4" BOLT		01
24	0503012880	1/4" UNC SELF ADJUSTING NUT		01
25	0571014024	FAST BOLT GUIDE AXLE		01
26	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		02
27	0503015110	M06 SPRING WASHER		02
28	0503818139	BOLT		03
29	0503037390	PACKING FOR PLANTING		01
30	0503015752	3/8" X 2" BOLT		01

Item	Code	Description	See page	QT
31	0581011225	FIXER P PLANTING CONTR CPRA		01
32	0581011226	FIXER CLOSING P PLANTING CONTR CPRA		01
33	0502012807	SUPPORT BOX PRECISION PLANTING		01
34	0502012776	SUPPORT ARTICULATION PNEUMATIC PP		01
35	0502012798	SUPPORT BOX SEED		01
36	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		03
37	0503011404	BOLT		01
38	0503010026	3/8" NUT		04
39	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		01
40	0503010589	1/2" UNC SELF ADJUSTING NUT		01
41	0503010519	1/4" X 5/8" BOLT		01
42	0503010179	5/16" ZN SPRING WASHER		01

FERTILIZER ROW SHORT ASSY

 0511053409

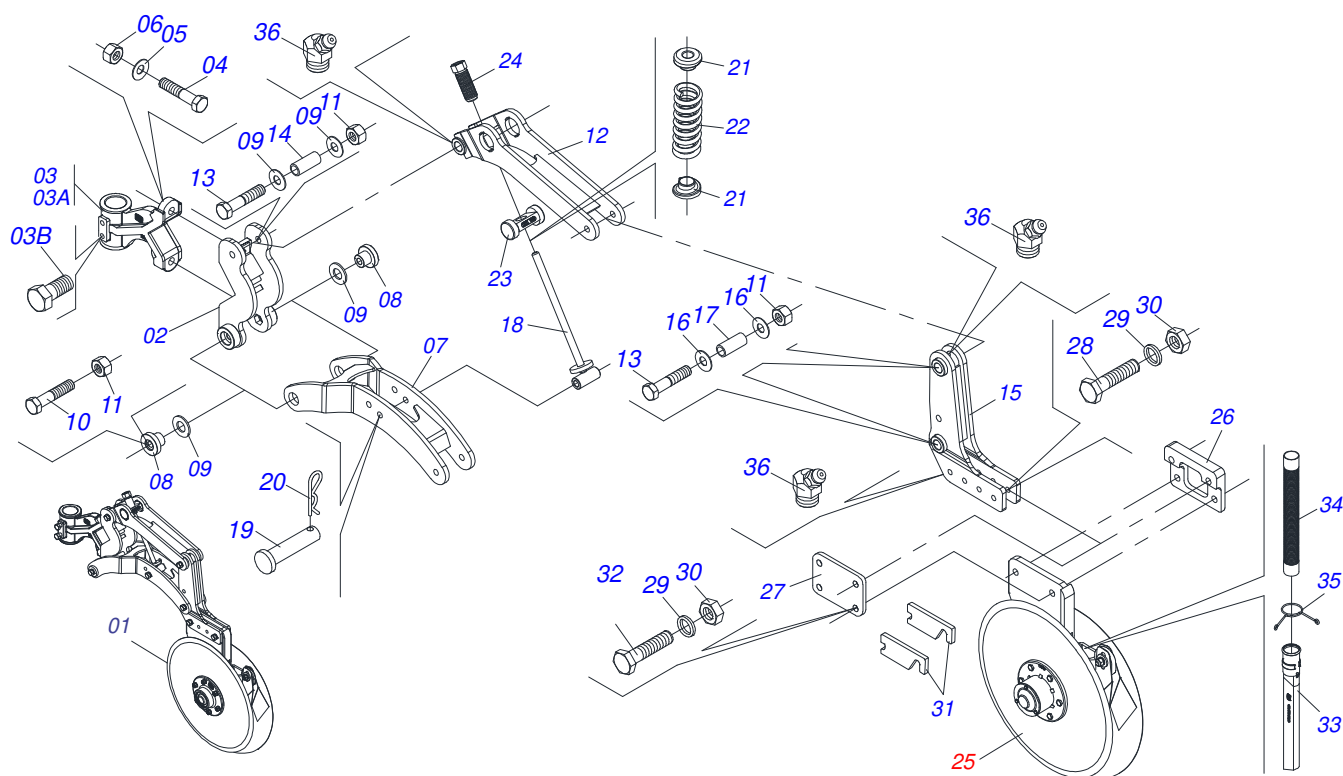


Item	Code	Description	See page	QT
01	0511053409	FERTILIZER ROW SHORT ASSY	129	01
02	0502012728	ROW FERTILIZER SUPPORT		01
03	0511053223	FERTILIZER ROW SUPPORT WITH SCREW		01
03A	0502012727	BLADE DISC SUPPORT		01
03B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
04	0503011328	3/4" X 4" BOLT		02
05	0501010322	FLAT WASHER		02
06	0503011255	3/4" LOCK NUT		02
07	0511065857	FERTILIZER ROW LOWER SUPPORT		01
08	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
09	0511015098	FLAT WASHER		06
10	0503010233	5/8" X 2-1/2" BOLT		02
11	0503012412	5/8 UNC SELF LOCKING NUT		05
12	0511063862	FERTILIZER ROW UPPER SUPPORT		01
13	0501010452	5/8" X 5" BOLT		03
14	0531016207	0.6" X 1" X 2.8" SLEEVE		01
15	0521061855	FERTILIZER ROW REAR SUPPORT		01
16	0531016031	1/2" SPRING WASHER		04
17	0531016207	0.6" X 1" X 2.8" SLEEVE		02
18	0521062073	SPRING GUIDE		01
19	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
20	0503030168	HAIR PIN		01
21	1902020393	SPRING UPPER SUPPORT		02
22	0503031450	2.7" X 9.2" X 0.03" SPRING		01
23	0521011158	SPRING LOCKNUT		01
24	0521018575	REGULATOR SPINDLE 100		01
25	0501059308	15" X 15" LEFT FERT UNAL-DD ASSY		01
26	0502012352	DOUBLE-DISC SPACING PLATE		01
27	0541013035	5.55" X 4.0" X 0.38" PLATE		01
28	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
29	0503010019	1/2" SPRING WASHER		04

**FERTILIZER ROW SHORT ASSY**

 
0511053409

Item	Code	Description	See page	QT
30	0503010060	1/2" NUT		04
31	0511018662	SPACING PLATE		02
32	0503010752	1/2" X 3.1/2" BOLT		02
33	0503030520	SEED SOCKET		01
34	0503030408	2X2X390 HOSE		01
35	0503031076	2" HOSE CLAMP		02
36	0503010003	1845 GREASE FITTING		03

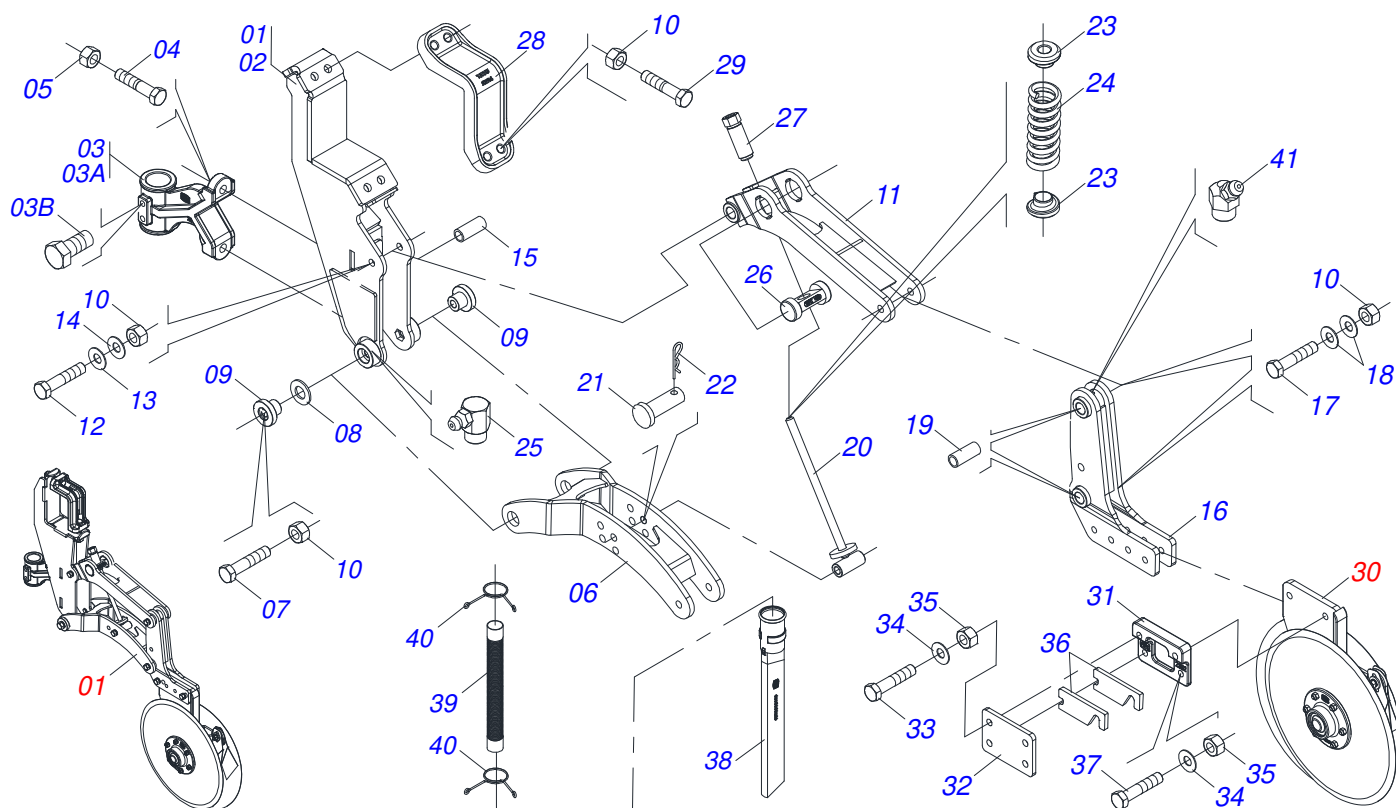


Item	Code	Description	See page	QT
01	0511053410	SEED FERTILIZER LONG ROW	130	01
02	0521063759	ROW FERTILIZER SUPPORT		01
03	0511053223	FERTILIZER ROW SUPPORT WITH SCREW		01
03A	0502012727	BLADE DISC SUPPORT		01
03B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
04	0501010125	3/4" X 2-1/2" BOLT		02
05	0503011255	3/4" LOCK NUT		02
06	0511065857	FERTILIZER ROW LOWER SUPPORT		01
07	0503010233	5/8" X 2-1/2" BOLT		02
08	0511015098	FLAT WASHER		06
09	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
10	0503012412	5/8 UNC SELF LOCKING NUT		09
11	0511063862	FERTILIZER ROW UPPER SUPPORT		01
12	0501010163	5/8" X 4-1/2" BOLT		01
13	0531015184	FLAT WASHER		01
14	0531016031	1/2" SPRING WASHER		01
15	0531016207	0.6" X 1" X 2.8" SLEEVE		01
16	0521061855	FERTILIZER ROW REAR SUPPORT		01
17	0501010452	5/8" X 5" BOLT		02
18	0531016031	1/2" SPRING WASHER		04
19	0531016207	0.6" X 1" X 2.8" SLEEVE		02
20	0521062073	SPRING GUIDE		01
21	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
22	0503030168	HAIR PIN		01
23	1902020393	SPRING UPPER SUPPORT		02
24	0503031450	2.7" X 9.2" X 0.03" SPRING		01
25	0503010004	1890 GREASE FITTING		01
26	0521011158	SPRING LOCKNUT		01
27	0521018575	REGULATOR SPINDLE 100		01
28	0502012724	FERTILIZER ROW FIXER		01
29	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		04


Item	Code	Description	See page	QT
30	0501059307	15 X 15 RIGHT FERT UNAL DOUB-DISC ASSY		01
31	0502012352	DOUBLE-DISC SPACING PLATE		01
32	0541013035	5.55" X 4.0" X 0.38" PLATE		01
33	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
34	0503010019	1/2" SPRING WASHER		04
35	0503010060	1/2" NUT		04
36	0511018662	SPACING PLATE		02
37	0503010752	1/2" X 3.1/2" BOLT		02
38	0503030520	SEED SOCKET		01
39	0503030408	2X2X390 HOSE		01
40	0503031076	2" HOSE CLAMP		02
41	0503010003	1845 GREASE FITTING		02

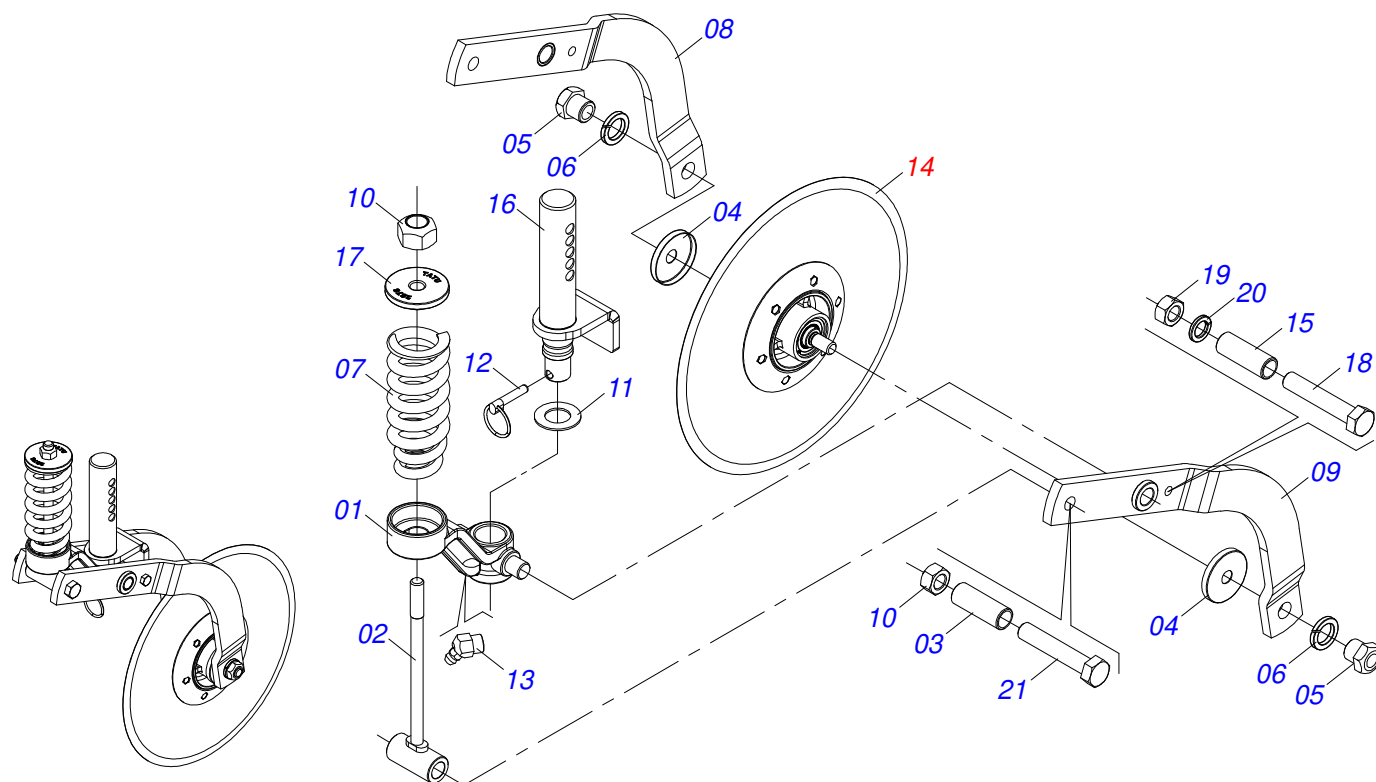 


Item	Code	Description	See page	QT
01	0502012369	BLADE DISC SUPPORT		01
02	0501067323	SPRING REGULATOR		01
03	0521010452	SLEEVE		01
04	0521015376	DUST CLOAK		02
05	0521013510	3/4" NUT		02
06	0503011438	SPRING WASHER		02
07	0503034498	SPRING		01
08	0521067844	RIGHT ARM		01
09	0521067843	LEFT ARM		01
10	0503011255	3/4" LOCK NUT		02
11	0581014407	FLAT WASHER 36.5 X 65.00 X 3.00		01
12	0503030430	7/16 X 2" PIN LOCK		01
13	0503010003	1845 GREASE FITTING		01
14	0501052139	18 BLADE DISC WITH FLAT PLAN DISC	132	01
15	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
16	0521062962	BLADE DISC AXLE		01
17	0581014524	SPRING SUPPORT WASHER		01
18	0503011411	1/2" X 5-1/2" BOLT		01
19	0503010060	1/2" NUT		01
20	0503011440	SPRING WASHER		01
21	0503013185	3/4" X 5-1/2" BOLT		01

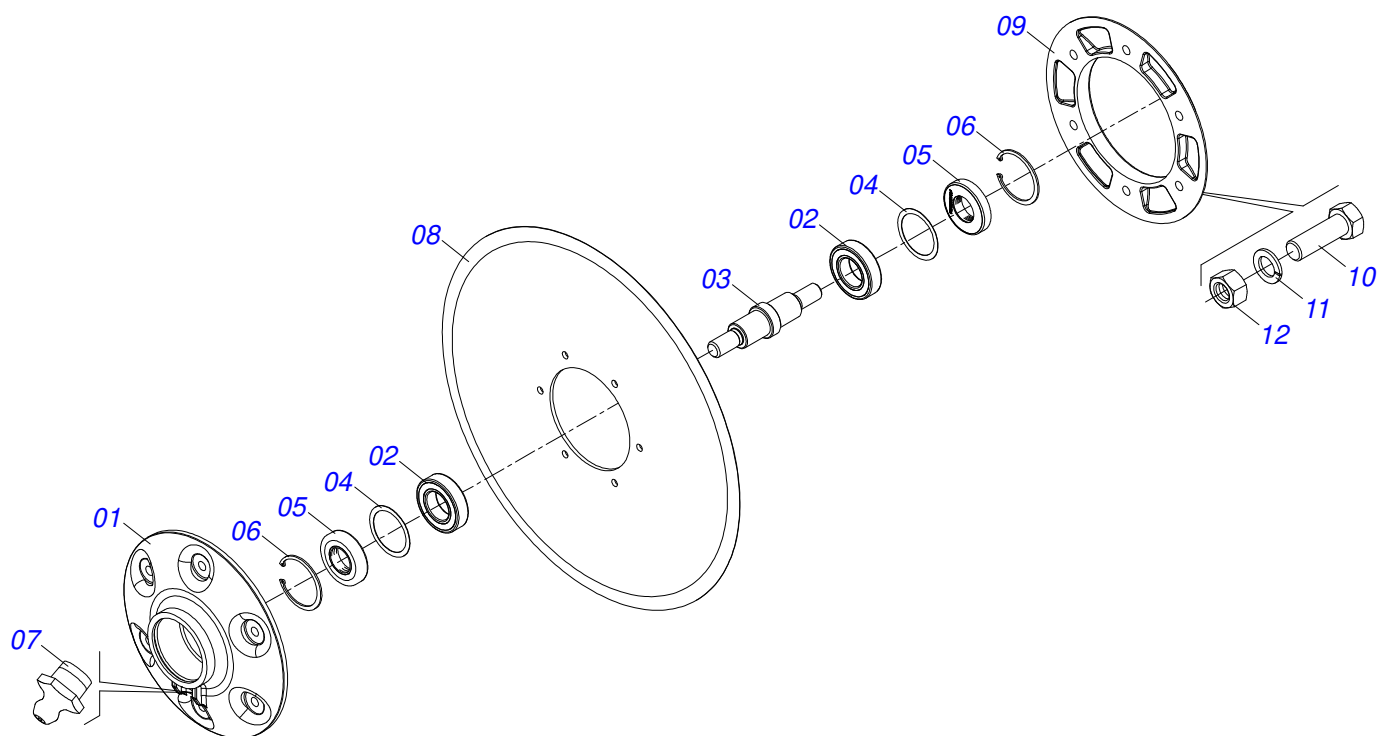 


Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503010276	6206 BALL BEARING		02
03	0521013610	BLADE DISC HUB AXLE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0603026013	PLAIN COULTER BLADE		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

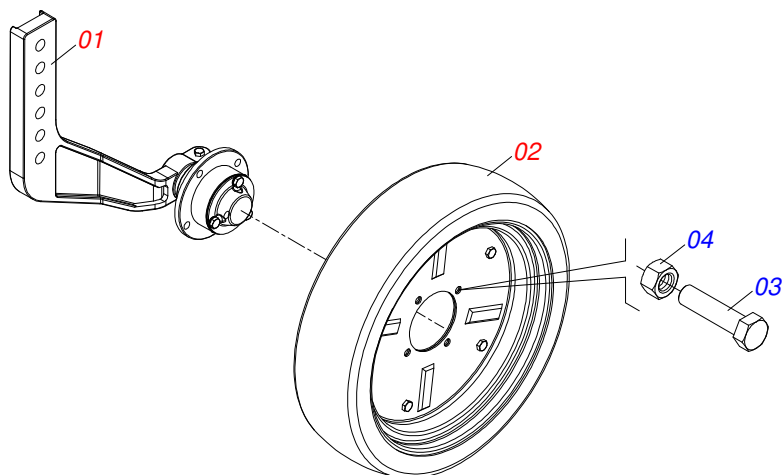 


Item	Code	Description	See page	QT
01	0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL	134	01
02	0501052538	DEPTH BAND WITH ARMS	135	01
03	0503010358	5/16" X 5/8" BOLT		04
04	0503013816	5/16" LOCKNUT		04

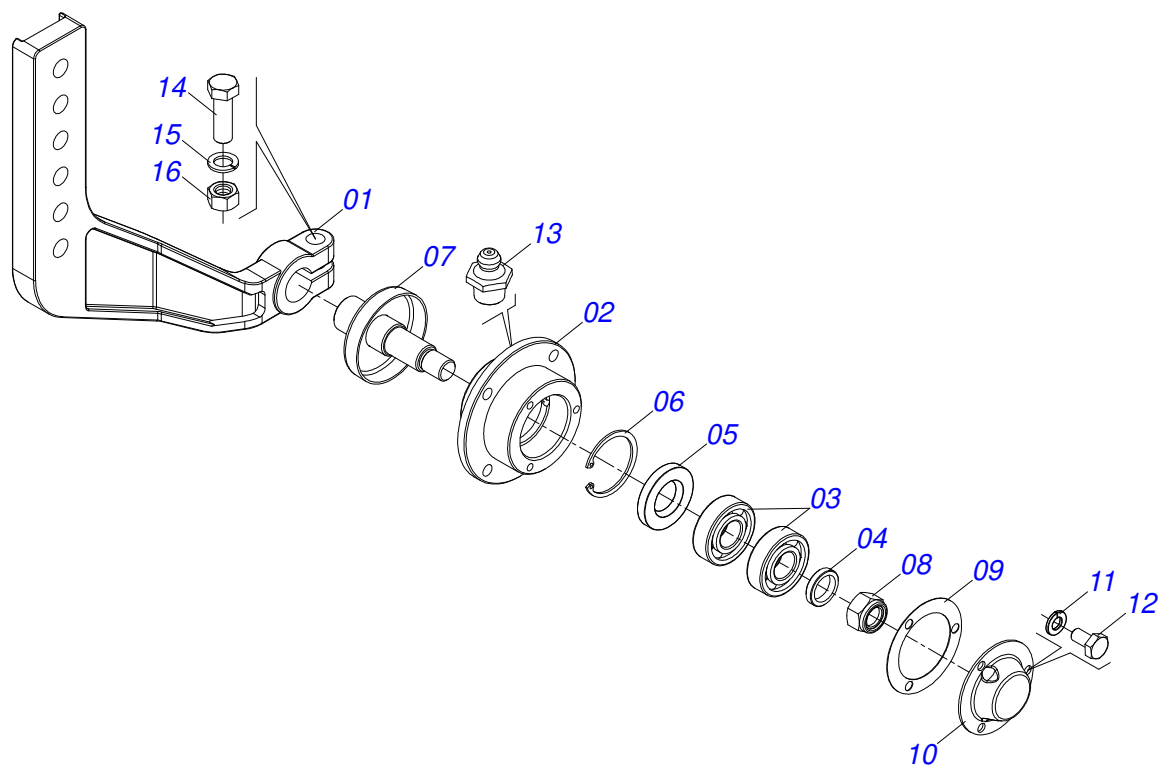 

Item	Code	Description	See page	QT
01	0502012090	DEPTH CONTROL RIGHT ARM		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
08	0503010878	5/8" SELF ALIGNING NUT		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0521019178	COVER DEPTH		01
11	0503011441	SPRING WASHER		03
12	0503014729	1/4" UNF X 1/2" BOLT		03
13	0503010691	1/4" GREASE FITTING		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01

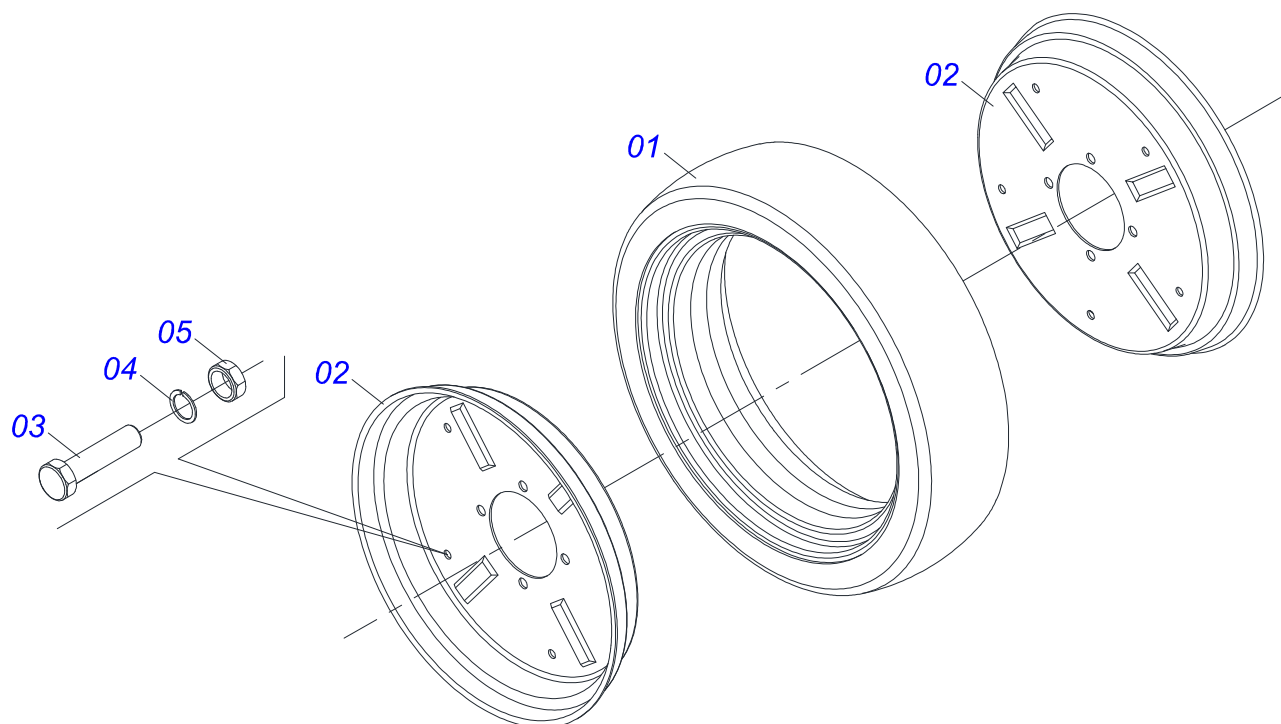 


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

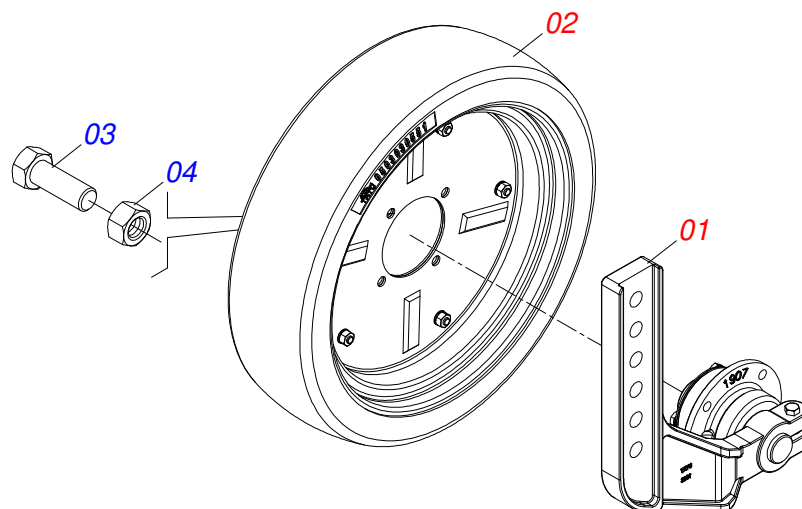 


Item	Code	Description	See page	QT
01	0501056435	LEFT CONTROL ARM DEPTH WITHOUT WHEEL	137	01
02	0501052538	DEPTH BAND WITH ARMS	135	01
03	0503010358	5/16" X 5/8" BOLT		04
04	0503013816	5/16" LOCKNUT		04

LEFT CONTROL ARM DEPTH WITHOUT WHEEL

 0501056435

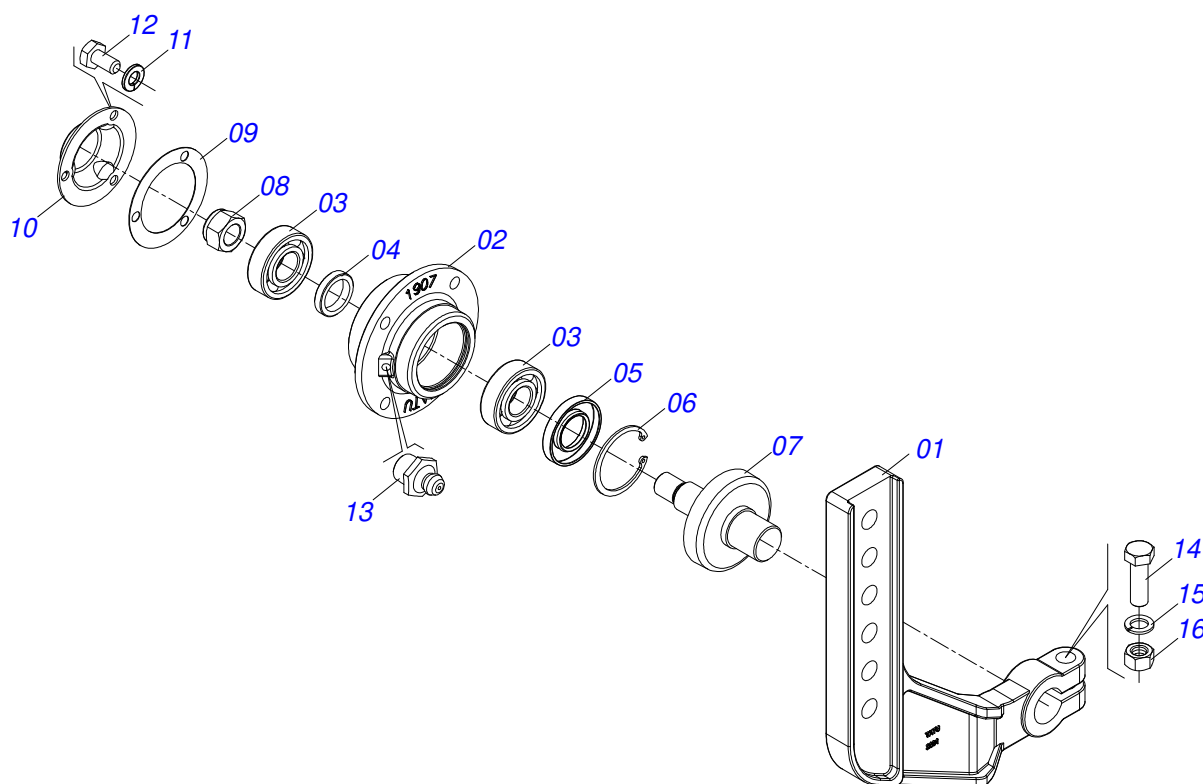

Item	Code	Description	See page	QT
01	0502012091	DEPTH CONTROL LEFT ARM		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
08	0503010878	5/8" SELF ALIGNING NUT		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0521019178	COVER DEPTH		01
11	0503011441	SPRING WASHER		03
12	0503014729	1/4" UNF X 1/2" BOLT		03
13	0503010691	1/4" GREASE FITTING		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01

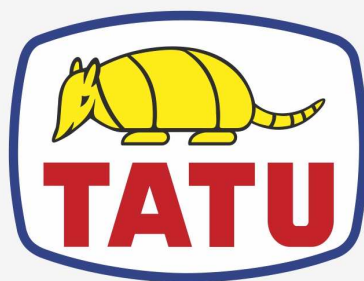 

MARCHESAN

Technical Publications | Elaboration and Revision

JOSÉ DOMINGOS GASPARI

www.marchesan.com.br

