

PARTS CATALOG

ROW CROP PLANTERS

PHT4 SUP G1 (ANGOLA)

Code: 0501091956



Series: S-0216

Rev.: 01

Date Rev.: JULHO/2017

**ORIGINAL PARTS
TATU**



PRODUCTS

Code

0111330024

Description

 
PHT4 SUP G1 3185/4E900 MH ANGOLA S-0216

ATTENTION: *IMPORTANT*

MARCHESAN S/A RESERVES THE RIGHT AT ANY TIME TO MAKE IMPROVEMENTS IN THE DESIGN, MATERIAL OR SPECIFICATIONS OF MACHINERY, EQUIPMENT OR PARTS WITHOUT THEREBY BECOMING LIABLE TO MAKE SIMILAR CHANGES IN MACHINERY, EQUIPMENT OR PARTS PREVIOUSLY SOLD.


INDEX

0909092691	FRAME		1
0511057582	CARDAN TURBINE		2
0501053886	PULLEY ASSY WITH FREE ROT		3
0501054649	SEQUENTIAL VALVE ASSY		4
0511041364	DRIVE SHAFT		5
0521040155	HYDRAULIC CYLINDER 31,75X50,8X365X595		6
0501052586	ESTABILIZER DRAWBAR ASSY		7
0501050633	MARKER DISC ASSY LINE		8
0521050859	RIGHT CARRYING-WHEELS		9
0511052484	WHEELS RIGHT		10
0511052486	WHEEL ARM RIGTH		11
0511052487	TURNBUCKLE		12
0501056444	BEARING WITH BALL BEARING		13
0521050860	LEFT CARRYING-WHEELS		14
0511052483	LEFT CARRYING-WHEELS		15
0511052485	LH WHELLS ARM		16
0521040712	FERTILIZER RIGHT BOX ASSY		17
0511051712	RH BEAM SUPPORT		18
0521040718	LH FERTILIZER BOX COVER ASSY		19
0511051717	LH BEAM SUPPORT		20
0909092693	SEED GEAR BOX		21
0909092696	FERTILIZER GEAR BOX		22
0909095354	SEED ROW ASSY (ANGOLA)		23
0511059157	RIGHT SEED ROW ASSY (ANGOLA)		24
0511059158	RIGHT SEED ROW ASSY (ANGOLA)		25
0511058992	LEFT SEED ROW ARM		26
0511052324	CARDAN TRANSMISSION BEARING		27
0511058993	SEED ROW ARM		28
0511057154	DDD RITGH SUPREMA PRECISION PLANTING		29
0511057153	DDD LEFT SUPREMA PRECISION PLANTING		30
0511050075	PNEUMATIC DISTRIBUTOR SUPPORT		31
0501058950	SEED SYSTEM SIDE		32
0521040159	DEPTH WHEEL SYSTEM		33
0511056937	DEPTH CONTROL SEMI MOUNTED		34
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE		35
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE		36
0501052627	ASSY DEPTH WHEEL BOX		37
0501052297	DEPTH WHEELS REGULATOR ASSY		38
0501052538	DEPTH BAND WITH ARMS		39
0511054333	COMPACT WHEEL RIGHT WITH BEARING		40
0511054334	COMPACT WHEEL LEFT WITH BEARING		41
0501059135	BOX SEED		42
0511058164	16" COULTER BLADE ASSY		43
0501056428	ROW 16 BLADE DISC ASSY		44
0511057589	RIGHT ARM FERTILIZER ROW ASSY		45
0511057591	LH FERTILIZER ROW ASSY		46
0501053348	RH FERTILIZER ROW ARM		47
0501052976	15 X 15 RIGHT FERT UNAL DOUB-DISC ASSY		48
0501053349	LH FERTILIZER ROW ARM		49
0501052977	DDD LEFT FERTILIZER 15 X 15 ASSY		50
0909090853	HYDRAULIC CIRCUIT (MH)	(OPTIONAL)	51
0521045722	HIDRAULIC TURBINE	(OPTIONAL)	52
0909092697	SYSTEM HYDRAULIC MTH	(OPTIONAL)	53
0511052675	7 ROW SEED MONITOR (PM100) ASSY	(OPTIONAL)	54

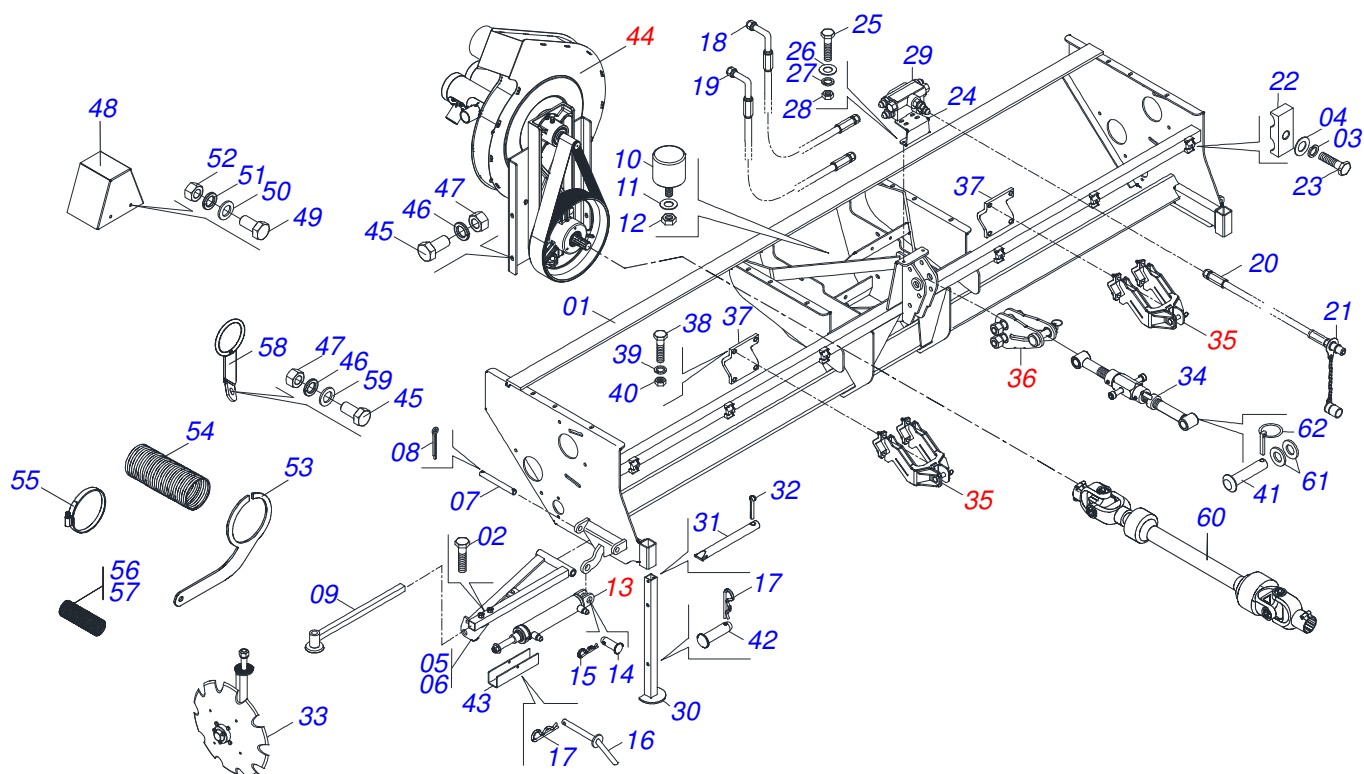


Item	Code	Description	See page	QT
01	0521062567	FRAME 3° SCORE		01
02	0503010834	1/2 X 1 BOLT		12
03	0503010025	3/8 SPRING WASHER		10
04	0501010984	FLAT WASHER		10
05	0521062818	BRACO LEFT MARKER LINE PHT4		01
06	0521062819	BRACO RIGHT MARKER LINE PHT4		01
07	0531012400	COUPLING SHAFT		02
08	0503010577	3/16" X 1-1/4" COTTERPIN		04
09	0501069307	ROW MARKER ARM		02
10	0503011070	BEATER		02
11	0551019213	FLAT WASHER		02
12	0503011336	1/2" HEX SELF ADJUSTING NUT		02
13	0521040155	HYDRAULIC CYLINDER 31,75X50,8X365X595	6	02
14	0521010571	COUPLING SHAFT		02
15	0503030168	HAIR PIN		02
16	0501068994	0.3" X 3.1" LOCK PIN		02
17	0503030168	HAIR PIN		04
18	0501080412	3/8" X 90.55" TR-TC HOSE		02
19	0501080469	3/8" X 98.42" TR-TR HOSE ASSY		02
20	0501080852	3/8" X 1500 TR-TM HOSE		02
21	0501053834	MALE QUICK COUPLING AGRICULTURAL WITH COVER - 1/2 NPT		02
22	0502012702	BODY SUPPORT CLAMP		06
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		08
24	0571010413	VALVE SUPPORT		01
25	0503010371	5/16" X 1" BOLT		02
26	0501010694	FLAT WASHER		02
27	0503010179	SPRING WASHER		02
28	0503010337	5/16" NUT		02
29	0501054649	SEQUENTIAL VALVE ASSY	4	01
30	0501065337	PLOUGH SUPPORT		02
31	0521010530	COUPLING SHAFT		02

Item	Code	Description	See page	QT
32	0503010140	1/8" X 3/4" COTTERPIN		02
33	0501050633	MARKER DISC ASSY LINE	8	02
34	0501052586	ESTABILIZER DRAWBAR ASSY	7	01
35	0521050312	LOWER HITCH ASSY		01
36	0521050521	UPPER HITCH		01
37	0511064353	FASTENER		02
38	0501013233	5/8" X 2-3/4" BOLT		08
39	0503010027	SPRING WASHER		20
40	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S		20
41	0521010580	COUPLING SHAFT		01
42	0521010809	11,11 X 64 COUPLING SHAFT		02
43	0561019695	PHT4 SUPREME MARKET TRANSMITTER		02
44	0511057582	CARDAN TURBINE	2	01
45	0503010834	1/2 X 1 BOLT		01
46	0503010019	1/2" SPRING WASHER		01
47	0503010060	1/2" NUT		01
48	0571012801	COVER PROTECTION TURBINE		01
49	0503010256	3/8" X 3/4" BOLT		01
50	0501010984	FLAT WASHER		01
51	0503010025	3/8 SPRING WASHER		01
52	0503010026	3/8" NUT		01
53	0571011434	HOSE ASSY FIXER SUPPORT OUTPUT AR		01
54	0571011448	AIR CONDUCTOR		01
55	0503010246	CLAMP		12
56	0521018571	HOSE		04
57	0521010647	HOSE		02
58	0511069907	HOSE HOLDER		06
59	0511017302	FLAT WASHER		05
60	0511041364	DRIVE SHAFT	5	01
61	0501011445	FLAT WASHER		01
62	0503030085	LOCK PIN		04

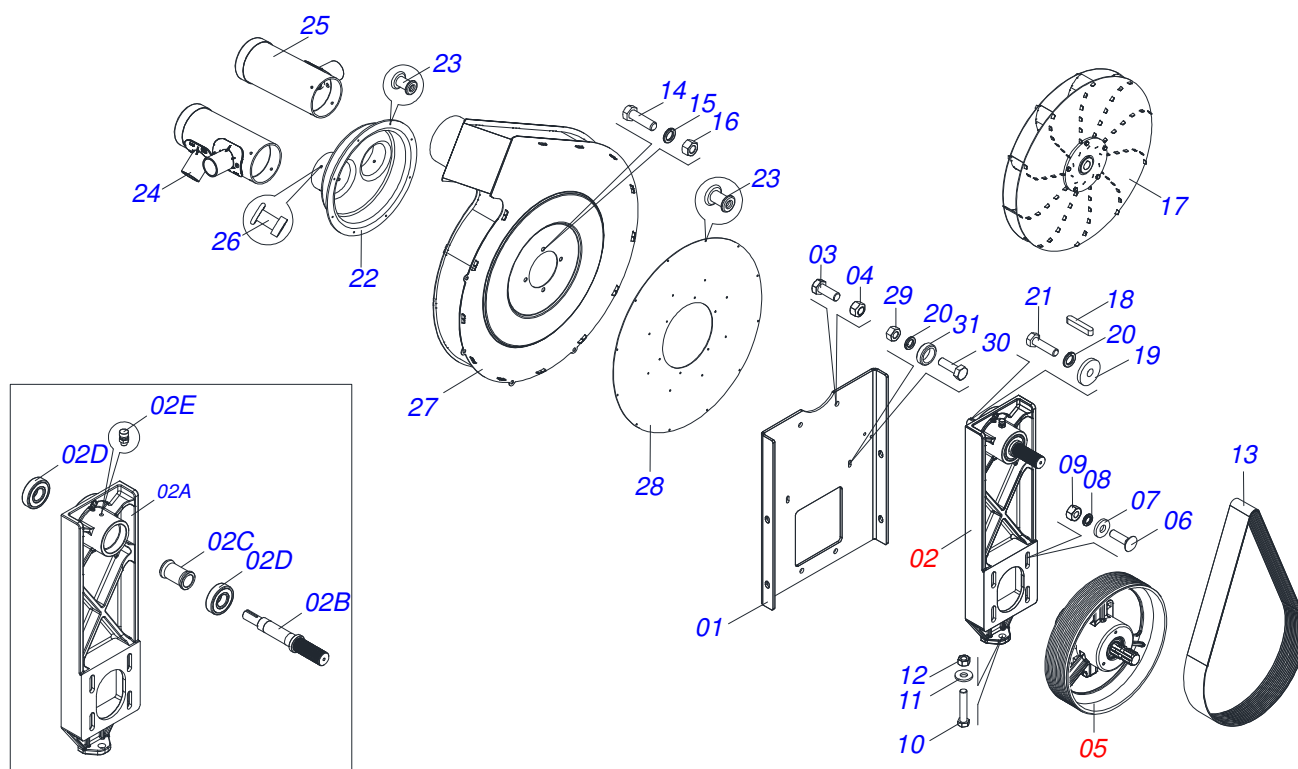 


Item	Code	Description	See page	QT
001	0531017265	TURBINE SUPPORT		01
002	0501053716	BEARING ASSY OF THE LARGER FAN		01
002A	0502012016	CHAIN TENSIONER SUPPOT		01
002B	0503012778	MIDDLE LARGER AXLE		01
002C	0531010881	INTERMEDIARY UPPER SLEEVE		01
002D	0503012689	6306 DDU BEARING		02
002E	0503010325	VCA-118 VALVE		01
003	0503010395	1/2" X 1-1/4" BOLT		04
004	0503011336	1/2" HEX SELF ADJUSTING NUT		04
005	0501053886	PULLEY ASSY WITH FREE ROT	3	01
006	0501011194	1/2" X 1-3/4" BOLT		04
007	0521018517	FLAT WASHER		04
008	0503010019	1/2" SPRING WASHER		04
009	0503010020	1/2"NUT		04
010	0503013030	5/8" X 3.1/4" BOLT		01
011	0501012140	FLAT WASHER		01
012	0503010013	5/8" NUT		01
013	0503012780	LARGER TURBINE BELT		01
014	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
015	0503010025	3/8 SPRING WASHER		04
016	0503010026	3/8" NUT		04
017	0521044612	FAN		01
018	0503011775	6 X 6 X 35 KEYWAY		01
019	0503011774	PULLEY		01
020	0503010179	SPRING WASHER		03
021	0503011257	M 8 X 1,25 X 30 BOLT		01
022	0571011731	CONECTOR CENTER		01
023	0503012722	0.16" X 0.4" BLIND RIVET		20
024	0511051733	AIR DISTRIBUTOR		01
025	0511051994	LH AIR DISTRIBUTOR		01
026	0503012856	REBITE POP		08


Item	Code	Description	See page	QT
027	0521066238	SNAIL MECHANICAL		01
028	0571018577	COVER SNAIL TURBINE		01
029	0503010337	5/16" NUT		02
030	0503010363	5/16" X 1" BOLT		02
031	0531012678	4.5" X 0.9" X 0.2" SLEEVE		02

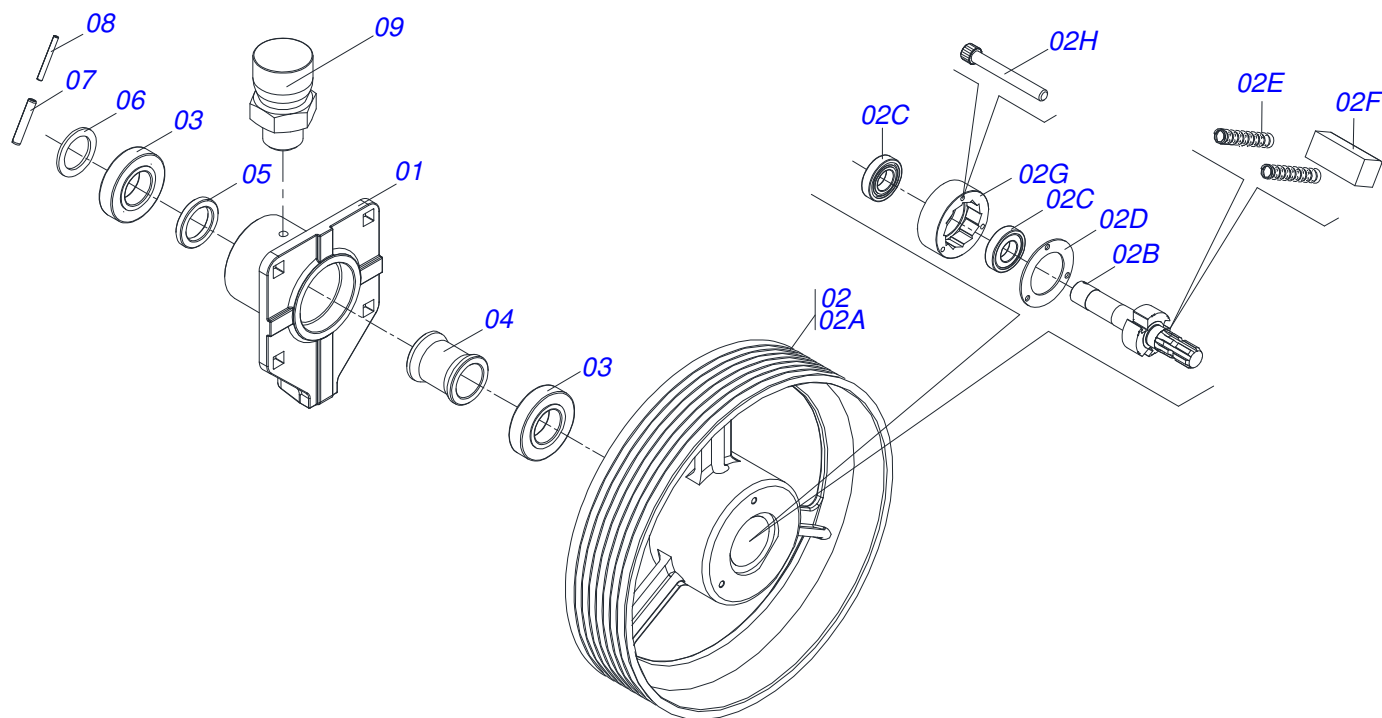 


Item	Code	Description	See page	QT
001	0502012020	PULLEY HOUSING BEARING		01
002	0501053888	TURBINE PULLEY ASSY		01
002A	0502012055	TURBINE PULLEY ASSY		01
002B	0503031732	RATCHET TURBINE PULLEY AXLE		01
002C	0503011081	6207 2RS BEARING		02
002D	0531014520	WASHER RATCHET		01
002E	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		06
002F	0501010649	RATCHET CLICK		03
002G	0503031731	RATCHET PULLEY TURBINE		01
002H	0503012950	5/16" X 2-1/2" BOLT		03
003	0503011081	6207 2RS BEARING		02
004	0531014518	INTERMEDIARY LOWER BUSHING BEARING		01
005	0531014519	FLAT WASHER		01
006	0531014527	FLAT WASHER		01
007	0503010301	0.3" X 1.8" SPRING PIN		01
008	0503011855	0.2" X 1.8" SPRING PIN		01
009	0503010325	VCA-118 VALVE		01

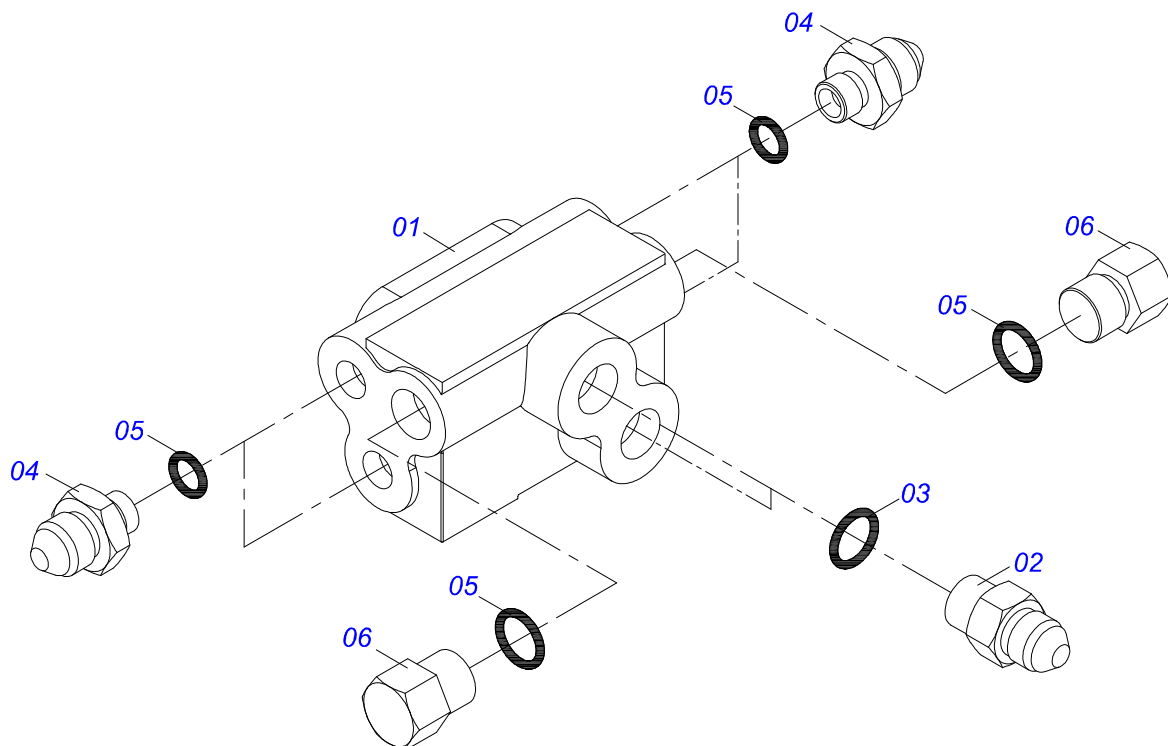 


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

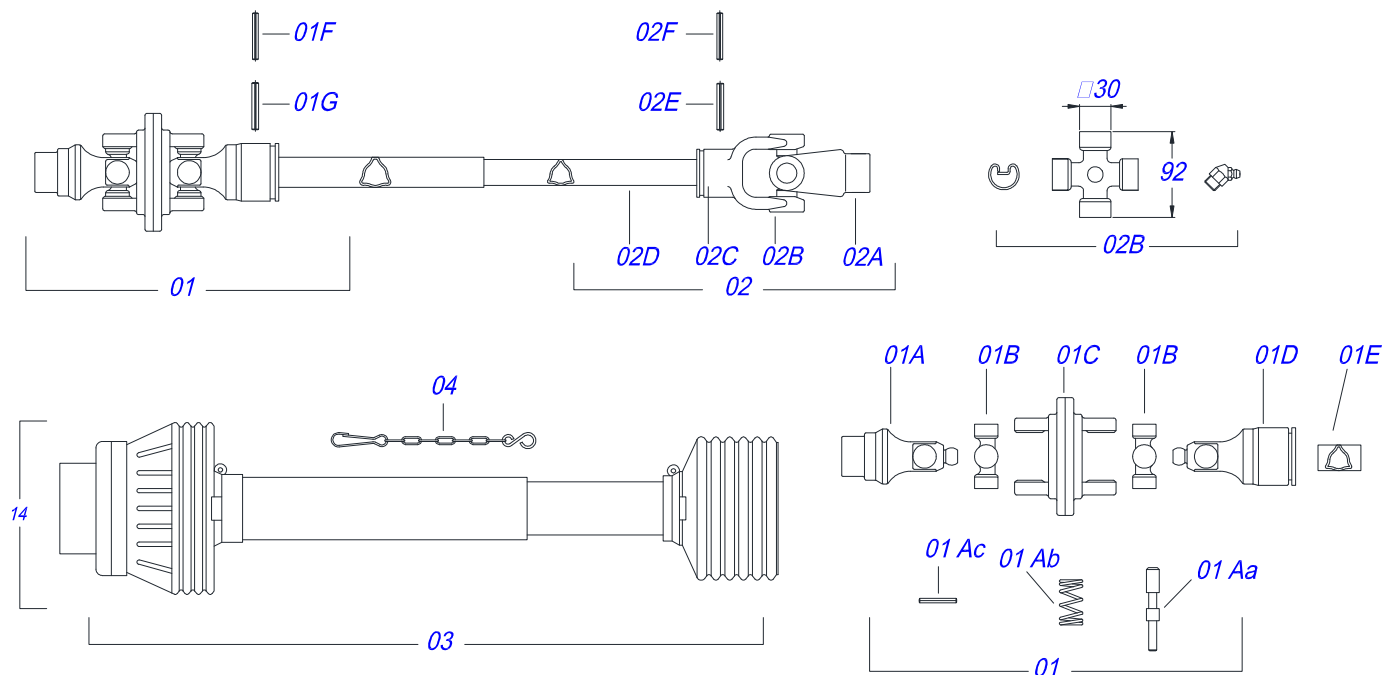 


Item	Code	Description	See page	QT
01	0501055638	HOMO JOINT WITH FEMALE BUSHING		01
01A	0503012607	TRACTOR HOMOCINETIC TERMINAL		01
01Aa	0521010638	0.5" X 3.3" QUIC HITCH COUPL SHAFT		01
01Ab	0503030518	0.5"X1.0"X 0.1" COMPRESSION SPRING		01
01Ac	0503010140	1/8" X 3/4" COTTERPIN		01
01B	0503012605	CROSSPIECE		02
01C	0503012606	CENTER BODY		01
01D	0503012604	HOMO TERMINAL W/ FEMALE BUSHING		01
01E	0503012618	2.1" X 2.0" X 31" TRIAN FEMALE TUB		01
01F	0503010843	0.4" X 3.3" SPRING PIN		01
01G	0503011878	0.2" X 3.3" SPRING PIN		01
02	0501055639	UNIVERSAL JOINT		01
02A	0503013132	CC292 TERMINAL		01
02B	0503012096	CROSSPIECE		01
02C	0503013187	TERMINAL		01
02D	0503012619	1.8" X 1.7" X 31" TRIAN MALE TUB		01
02E	0503011069	0.4" X 2.8" SPRING PIN		01
02F	0503011805	0.2" X 2.8" SPRING PIN		01
03	0503013189	PROTECTION ASSY		01
04	0503012023	CHAIN FOR UNIV JOINT PROTECTION		01

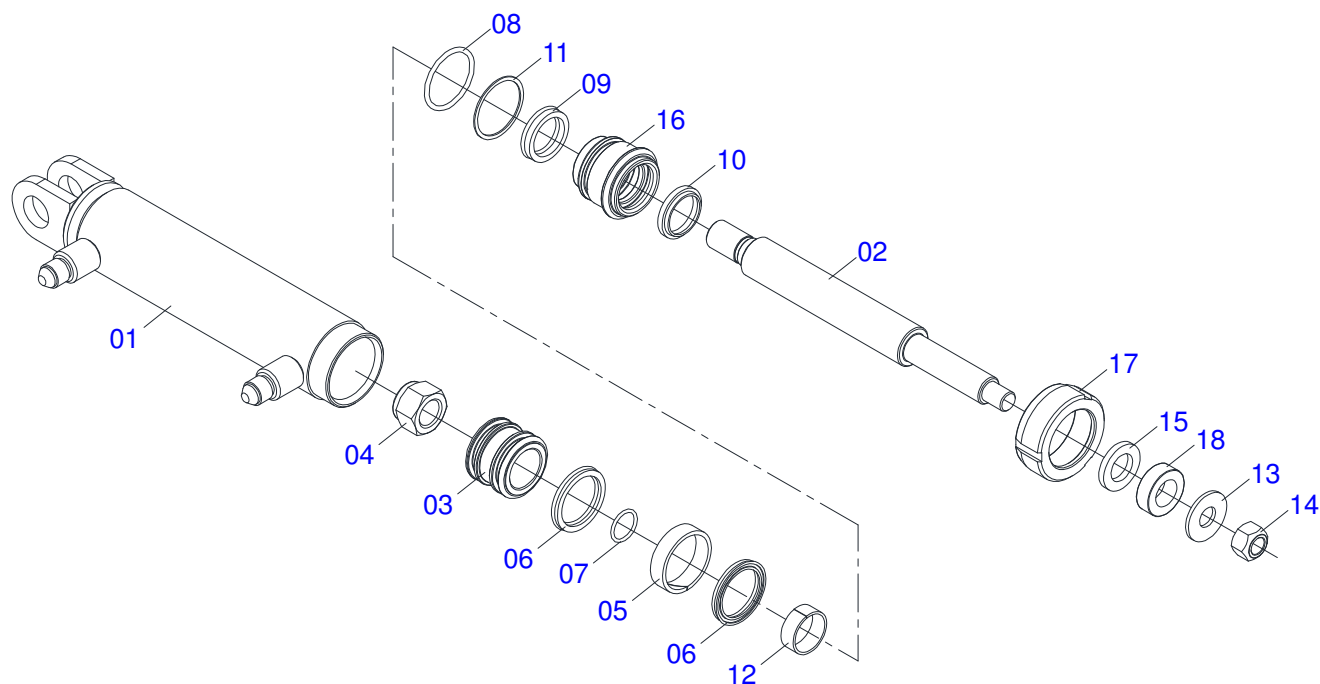 


Item	Code	Description	See page	QT
01	0521062810	CYLINDER CASE		01
02	0571010344	31,75 X 456 ROD		01
03	0551019990	31,75 X 50,80 X 39,40 PISTON		01
04	0503010812	7/8" SELF-ADJUSTING NUT		01
05	0503010949	W2-2000-500 PK RING G.E		01
06	0503013920	GASKET 1870-1625		02
07	0503014677	2-118 O'RING		01
08	0503013917	O'RING 2-224		01
09	0503013914	1870-1250-312B GASKET		01
10	0503013915	D-1250 SCRAPER RING		01
11	0503013918	8-224 BACK-UP RING		01
12	0503014683	W1-1400-500 RING GUIDE		01
13	0501012140	FLAT WASHER		01
14	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S		01
15	0571010576	SUPPORT WASHER		01
16	0571011410	SUPPORT RING CYLINDER LINE PHT4		01
17	0571011411	MOBILE COVER		01
18	0503033686	SLEEVE 22 X 38 X 12,50 RUBBER		02

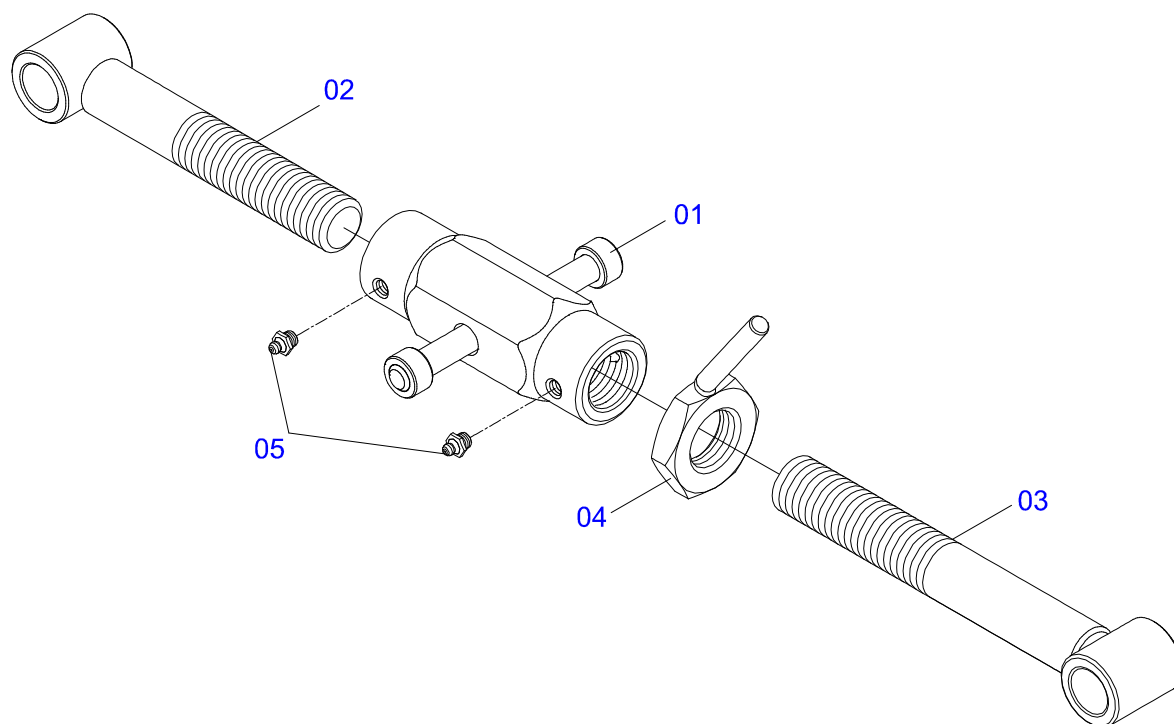 

Item	Code	Description	See page	QT
01	0501110096	165 ADJUSTMENT NUT		01
02	0511061503	8.86" RIGTH TURNBUCKLE		01
03	0511061504	8.86" LH TURNBUCKLE		01
04	0501064974	LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

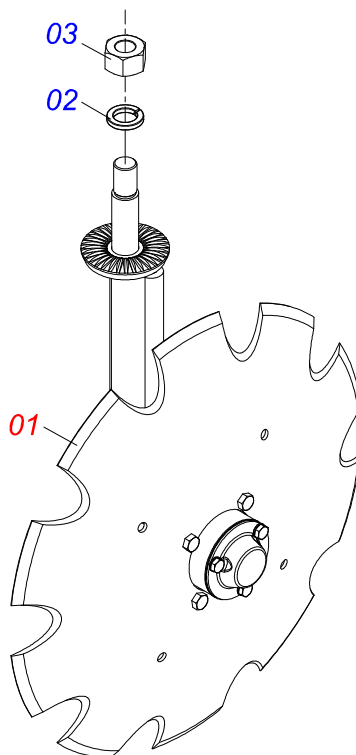 


Item	Code	Description	See page	QT
01	0511053904	DISC LINE MARKER		01
02	0503010023	SPRING WASHER		01
03	0503010014	3/4" NUT		01

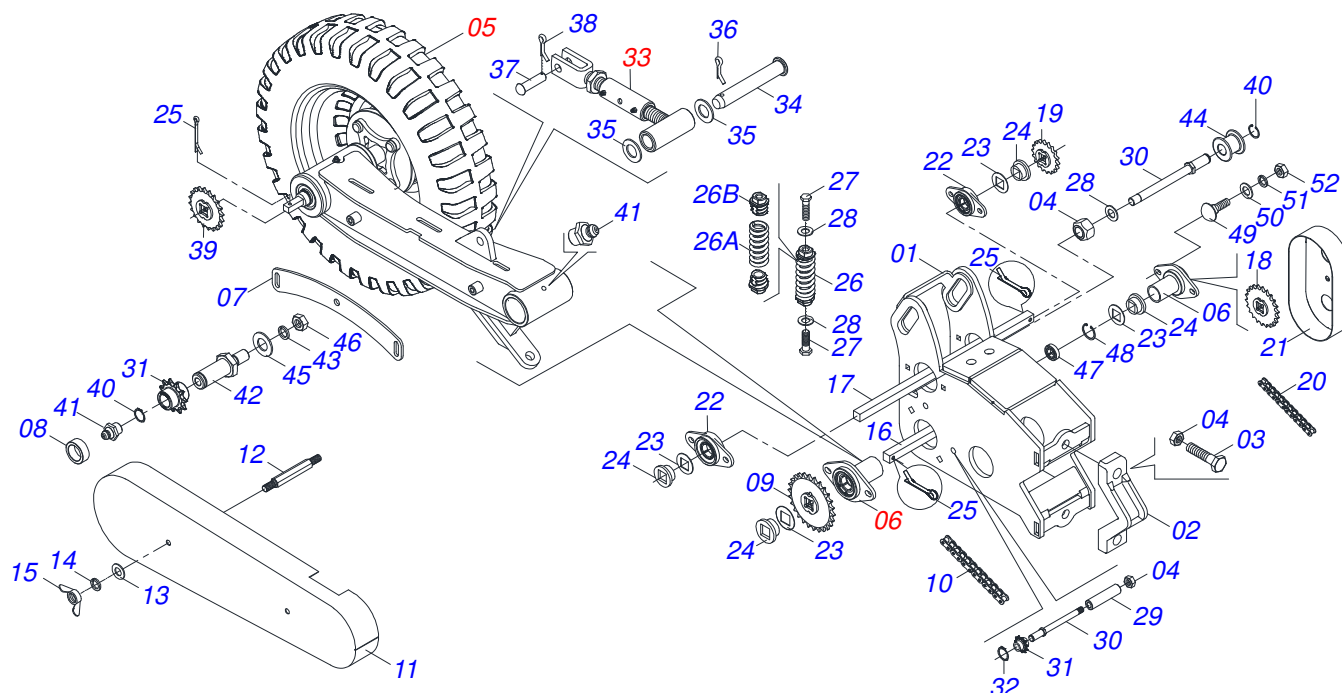 


Item	Code	Description	See page	QT
01	0521063583	WHEEL SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S		08
05	0511052484	WHEELS RIGHT	10	01
06	0521062809	BEARING		04
07	0571010967	CHAIN TENSIONER		02
08	0561016501	GLOVE 30,50		02
09	0511067501	26Z GEAR		02
10	0503012718	40-1 CHAIN X 111 LINK + MENDING		02
11	0571010830	RIGHT CHAIN COVER		01
12	0561016503	PRISONER 3/8 UNC		06
13	0501010984	FLAT WASHER		08
14	0503010025	3/8 SPRING WASHER		08
15	0503010209	3/8" UNC BUTTERFLY NUT		06
16	0571010341	SQUARE SHAFT		02
17	0581014148	AXLE		02
18	0521060880	GEAR 22 TEETH		02
19	0511061757	18Z GEAR		02
20	0503018182	40-1 X 39 CHAIN LINK + MENDING		02
21	0561019679	CHAIN CAP		01
22	0501056444	BEARING WITH BALL BEARING	13	04
23	0521018630	1.4" X SQUARE 0.8" WASHER		08
24	0503030303	SUPPORT WASHER		08
25	0503010577	3/16" X 1-1/4" COTTERPIN		12
26	0511057192	EXTENSION SPRING		02
26A	0503031681	2.1" X 7.78" EXTENSION SPRING		04
26B	0502011031	SPRING UPPER HITCH		02
27	0503013618	BOLT		04
28	0501011299	FLAT WASHER		04
29	0571010541	BEATER SLEEVE		02


Item	Code	Description	See page	QT
30	0571010964	TENSIONER CHAIN		02
31	0503031805	11Z 1/2" GEAR		02
32	0503010302	501019 SEAL RING		04
33	0511052487	TURNBUCKLE	12	02
34	0521010784	COUPLING SHAFT		02
35	0501011445	FLAT WASHER		04
36	0503010571	1/4" X 1.1/2 COTTERPIN		02
37	0521017623	0.5" X 1.5" COUPLING SHAFT		02
38	0503010257	1/8" X 1" COTTERPIN		02
39	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		01
40	0503010302	501019 SEAL RING		02
41	0503010002	1800 GREASE FITTING		02
42	0521012529	CHAIN TIGHTENER AXLE		01
43	0503010019	1/2" SPRING WASHER		01
44	0503030402	PULLEY		01
45	0511017302	FLAT WASHER		03
46	0503010060	1/2" NUT		01
47	0503013462	BEARING WITH BALL BEARING		02
48	0503011105	SEAL RING		02
49	0503011953	5/16" X 1" BOLT		08
50	0501010694	FLAT WASHER		08
51	0503010179	SPRING WASHER		08
52	0503010337	5/16" NUT		08

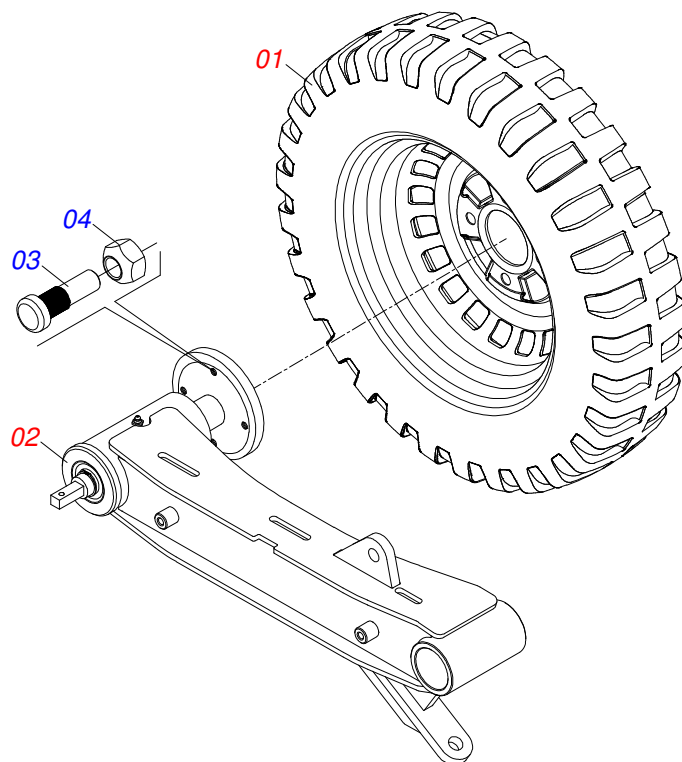 


Item	Code	Description	See page	QT
01	0503060105	WELL AND TIRE ASSY		01
02	0511052486	WHEEL ARM RIGTH	11	01
03	0501010127	9/16" X 1-7/8" LUG BOLT		04
04	0503010035	9/16" CONIC NUT		04

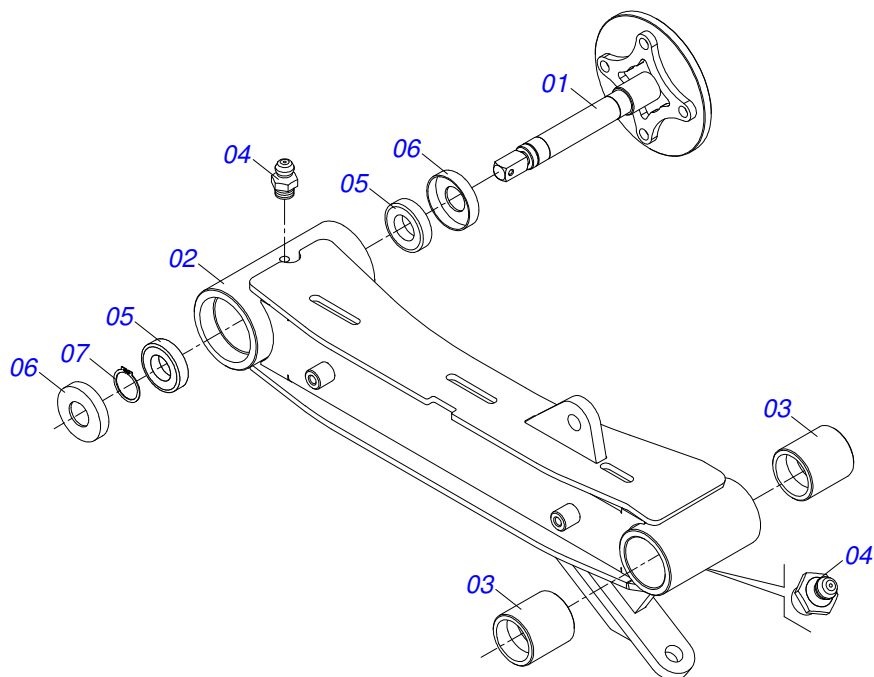 


Item	Code	Description	See page	QT
01	0521061662	WHEELED AXLE		01
02	0521063588	RH WHEEL ARM		01
03	0571010311	SLEEVE INTERMEDIARY		02
04	0503010002	1800 GREASE FITTING		02
05	0503013170	ROLLER BEARING		02
06	0561016502	GUARD POWDER		02
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01

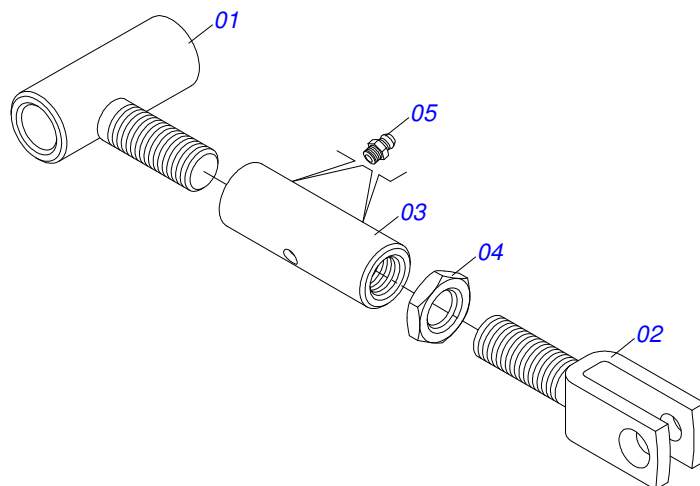 

Item	Code	Description	See page	QT
01	0521063584	BODY RIGHT TURNBUCKLE		01
02	0521063585	LEFT EXTENSOR BODY		01
03	0541010618	STABILIZER BODY		01
04	0541010087	LOCK NUT		01
05	0503010691	1/4" GREASE FITTING		02

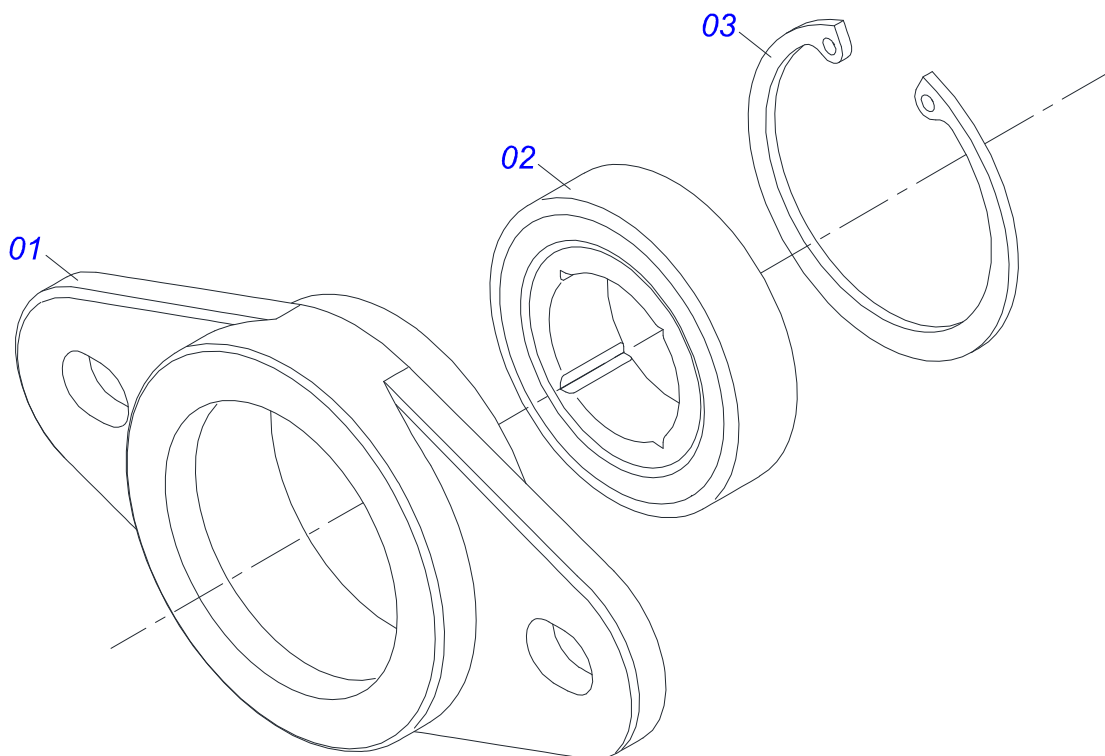 


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

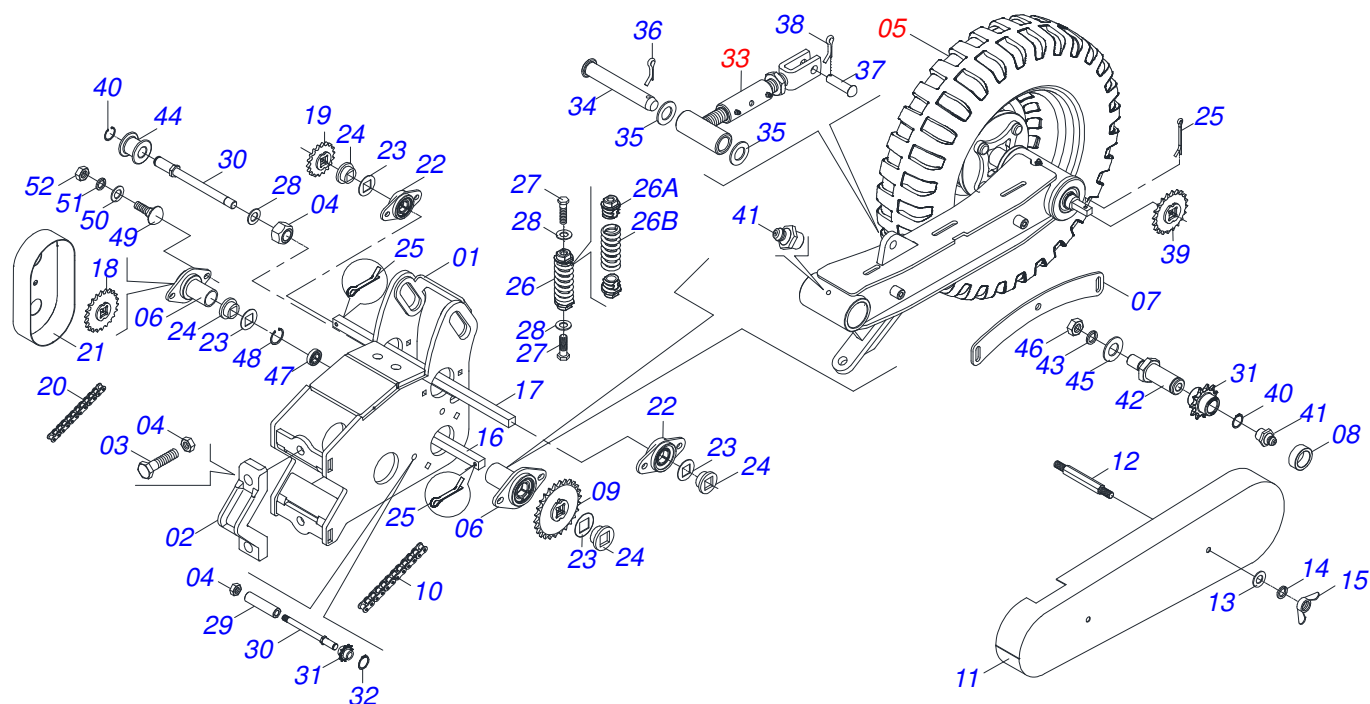 


Item	Code	Description	See page	QT
01	0521063583	WHEEL SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S		08
05	0511052483	LEFT CARRYING-WHEELS	15	01
06	0521062809	BEARING		04
07	0571010967	CHAIN TENSIONER		02
08	0561016501	GLOVE 30,50		02
09	0511067501	26Z GEAR		02
10	0503012718	40-1 CHAIN X 111 LINK + MENDING		02
11	0561019680	LEFT CHAIN COVER		01
12	0561016503	PRISONER 3/8 UNC		06
13	0501010984	FLAT WASHER		08
14	0503010025	3/8 SPRING WASHER		08
15	0503010209	3/8" UNC BUTTERFLY NUT		06
16	0571010341	SQUARE SHAFT		02
17	0581014148	AXLE		02
18	0521060880	GEAR 22 TEETH		02
19	0511061757	18Z GEAR		02
20	0503018182	40-1 X 39 CHAIN LINK + MENDING		02
21	0561019679	CHAIN CAP		01
22	0501056444	BEARING WITH BALL BEARING	13	04
23	0521018630	1.4" X SQUARE 0.8" WASHER		08
24	0503030303	SUPPORT WASHER		08
25	0503010577	3/16" X 1-1/4" COTTERPIN		12
26	0511057192	EXTENSION SPRING		02
26A	0503031681	2.1" X 7.78" EXTENSION SPRING		04
26B	0502011031	SPRING UPPER HITCH		02
27	0503013618	BOLT		04
28	0501011299	FLAT WASHER		04
29	0571010541	BEATER SLEEVE		02


Item	Code	Description	See page	QT
30	0571010964	TENSIONER CHAIN		02
31	0503031805	11Z 1/2" GEAR		02
32	0503010302	501019 SEAL RING		04
33	0511052487	TURNBUCKLE	12	02
34	0521010784	COUPLING SHAFT		02
35	0501011445	FLAT WASHER		04
36	0503010571	1/4" X 1.1/2 COTTERPIN		02
37	0521017623	0.5" X 1.5" COUPLING SHAFT		02
38	0503010257	1/8" X 1" COTTERPIN		02
39	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		01
40	0503010302	501019 SEAL RING		02
41	0503010002	1800 GREASE FITTING		02
42	0521012529	CHAIN TIGHTENER AXLE		01
43	0503010019	1/2" SPRING WASHER		01
44	0503030402	PULLEY		01
45	0511017302	FLAT WASHER		03
46	0503010060	1/2" NUT		01
47	0503013462	BEARING WITH BALL BEARING		02
48	0503011105	SEAL RING		02
49	0503011953	5/16" X 1" BOLT		08
50	0501010694	FLAT WASHER		08
51	0503010179	SPRING WASHER		08
52	0503010337	5/16" NUT		08

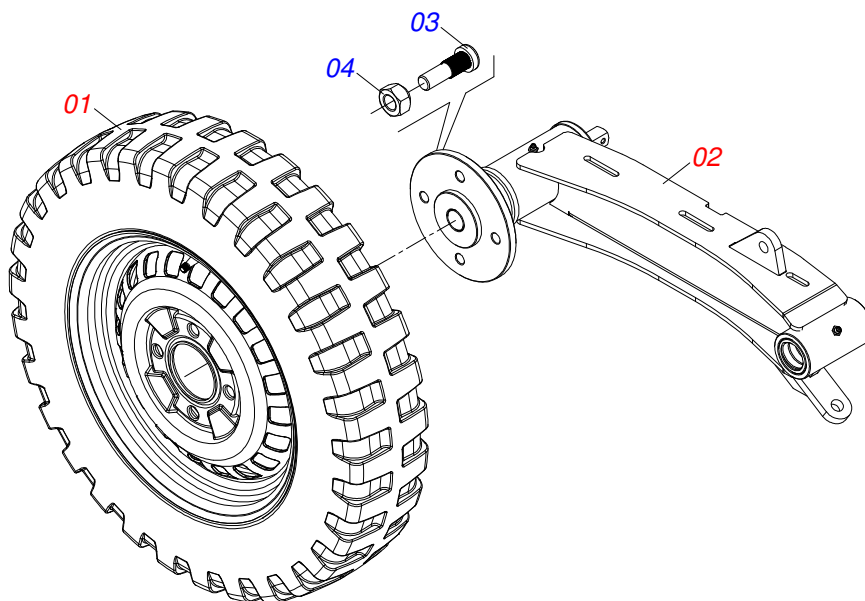 


Item	Code	Description	See page	QT
01	0503060105	WELL AND TIRE ASSY	16	01
02	0511052485	LH WHELLS ARM		01
03	0501010127	9/16" X 1-7/8" LUG BOLT		04
04	0503010035	9/16" CONIC NUT		04

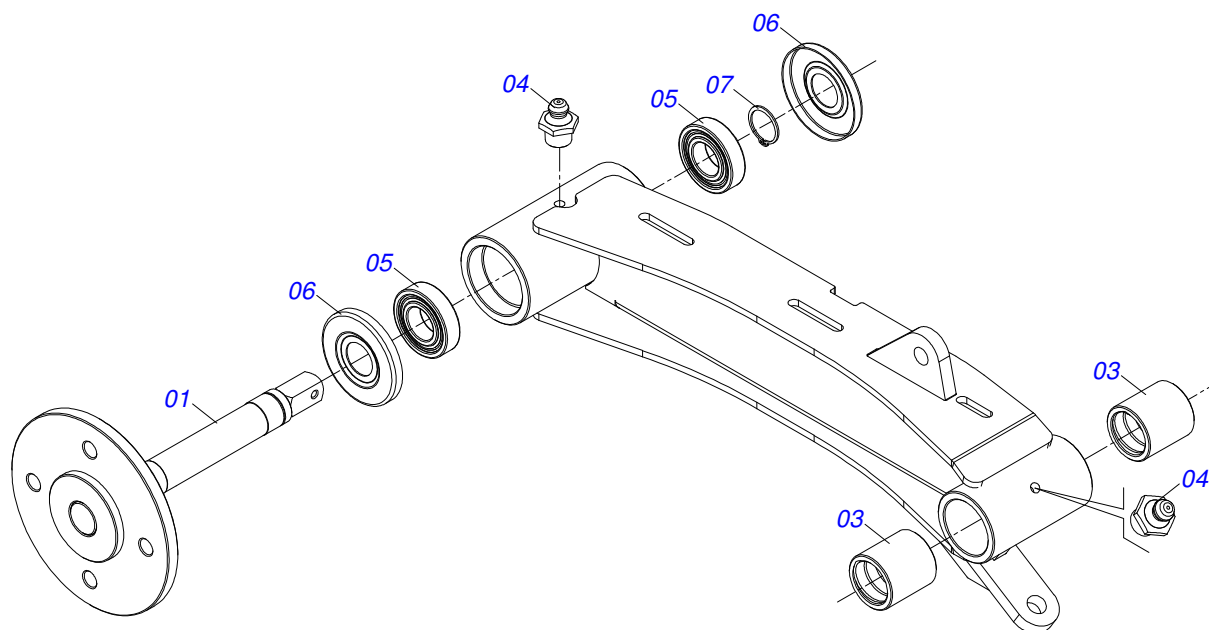 


Item	Code	Description	See page	QT
01	0521061662	WHEELED AXLE		01
02	0521063587	LH WHEEL ARM		01
03	0571010311	SLEEVE INTERMEDIARY		02
04	0503010002	1800 GREASE FITTING		02
05	0503013170	ROLLER BEARING		02
06	0561016502	GUARD POWDER		02
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01

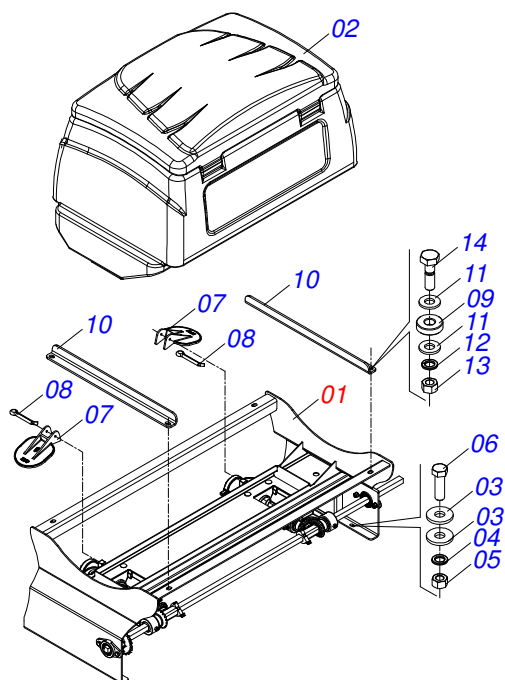 


Item	Code	Description	See page	QT
01	0511051712	RH BEAM SUPPORT	18	01
02	0503060693	BOX FERTILIZER ASSY		01
03	0501010984	FLAT WASHER		08
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0503034396	FERTILIZER SIDE COVER		02
08	0503010362	1/8" X 1.1/4" COTTERPIN		02
09	0581018852	GLOVE Ø13,5 X Ø35 X 10		04
10	0581018853	SEED BOX FIXATION		02
11	0501010937	FLAT WASHER		08
12	0503010019	1/2" SPRING WASHER		04
13	0503010060	1/2" NUT		04
14	0501019219	1/2" X 1-3/4" BOLT		04

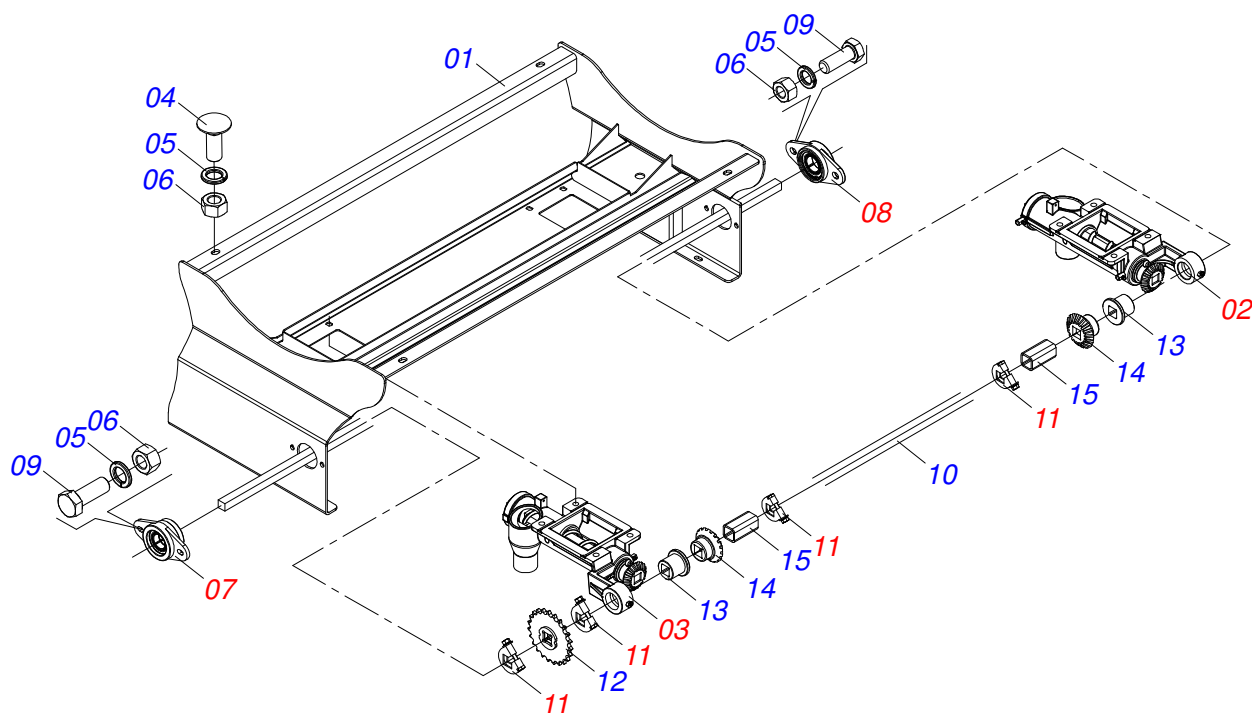 


Item	Code	Description	See page	QT
01	0521062960	SUPPORT BIN FERTILIZER BOX PLASTIC		01
02	0511051714	SIDE FERTILIZER DISTRIBUTOR		01
03	0511051715	SIDE FERTILIZER DISTRIBUTOR		01
04	0501811643	SCREW 3/8 UNC X 1 CAPQ G.2		08
05	0503011443	SPRING WASHER		12
06	0503810026	3/8" NUT		12
07	0501056451	BEARING		01
08	0501056444	BEARING WITH BALL BEARING	13	01
09	0503810237	3/8 UNC X 1 C S G.5 SA BOLT		04
10	0561018362	SQUARE SHAFT		01
11	0501053788	Q3/4" FASTENER AXLE ASSY		04
12	0511066098	23Z GEAR		01
13	0503030275	AGRICULTURAL BEARING		02
14	1902010685	18Z CONICAL GEAR		02
15	0551018055	22,65 X 60 SLEEVE		02

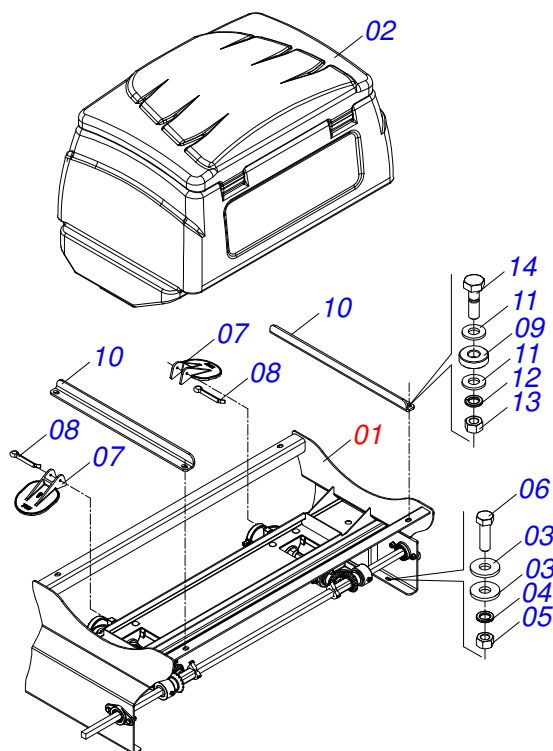 

Item	Code	Description	See page	QT
01	0511051717	LH BEAM SUPPORT	20	01
02	0503060693	BOX FERTILIZER ASSY		01
03	0501010984	FLAT WASHER		08
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0503034396	FERTILIZER SIDE COVER		02
08	0503010362	1/8" X 1.1/4" COTTERPIN		02
09	0581018852	GLOVE Ø13,5 X Ø35 X 10		04
10	0581018853	SEED BOX FIXATION		02
11	0501010937	FLAT WASHER		08
12	0503010019	1/2" SPRING WASHER		04
13	0503010060	1/2" NUT		04
14	0501019219	1/2" X 1-3/4" BOLT		04

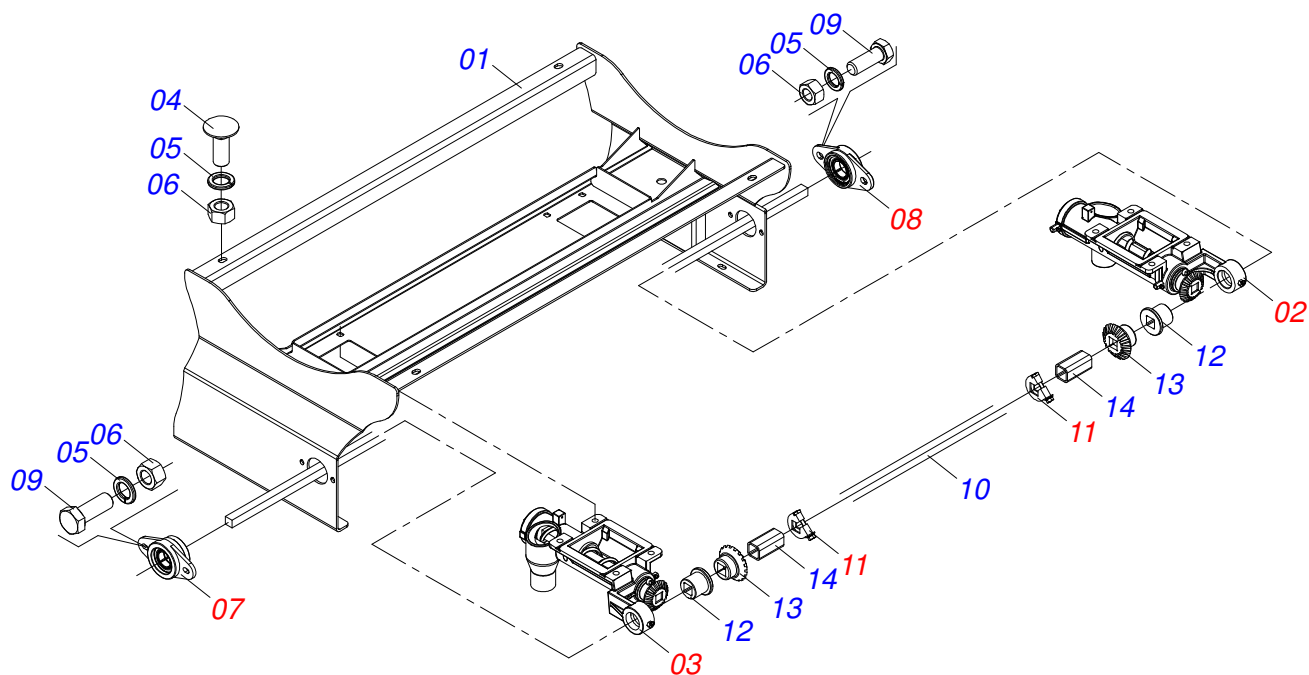 

Item	Code	Description	See page	QT
01	0521062960	SUPPORT BIN FERTILIZER BOX PLASTIC		01
02	0511051714	SIDE FERTILIZER DISTRIBUTOR		01
03	0511051715	SIDE FERTILIZER DISTRIBUTOR		01
04	0501811643	SCREW 3/8 UNC X 1 CAPQ G.2		08
05	0503011443	SPRING WASHER		12
06	0503810026	3/8" NUT		12
07	0501056444	BEARING WITH BALL BEARING	13	01
08	0501056451	BEARING		01
09	0503810237	3/8 UNC X 1 C S G.5 SA BOLT		04
10	0561018362	SQUARE SHAFT		01
11	0501053788	Q3/4" FASTENER AXLE ASSY		02
12	0503030275	AGRICULTURAL BEARING		02
13	1902010685	18Z CONICAL GEAR		02
14	0551018055	22,65 X 60 SLEEVE		02

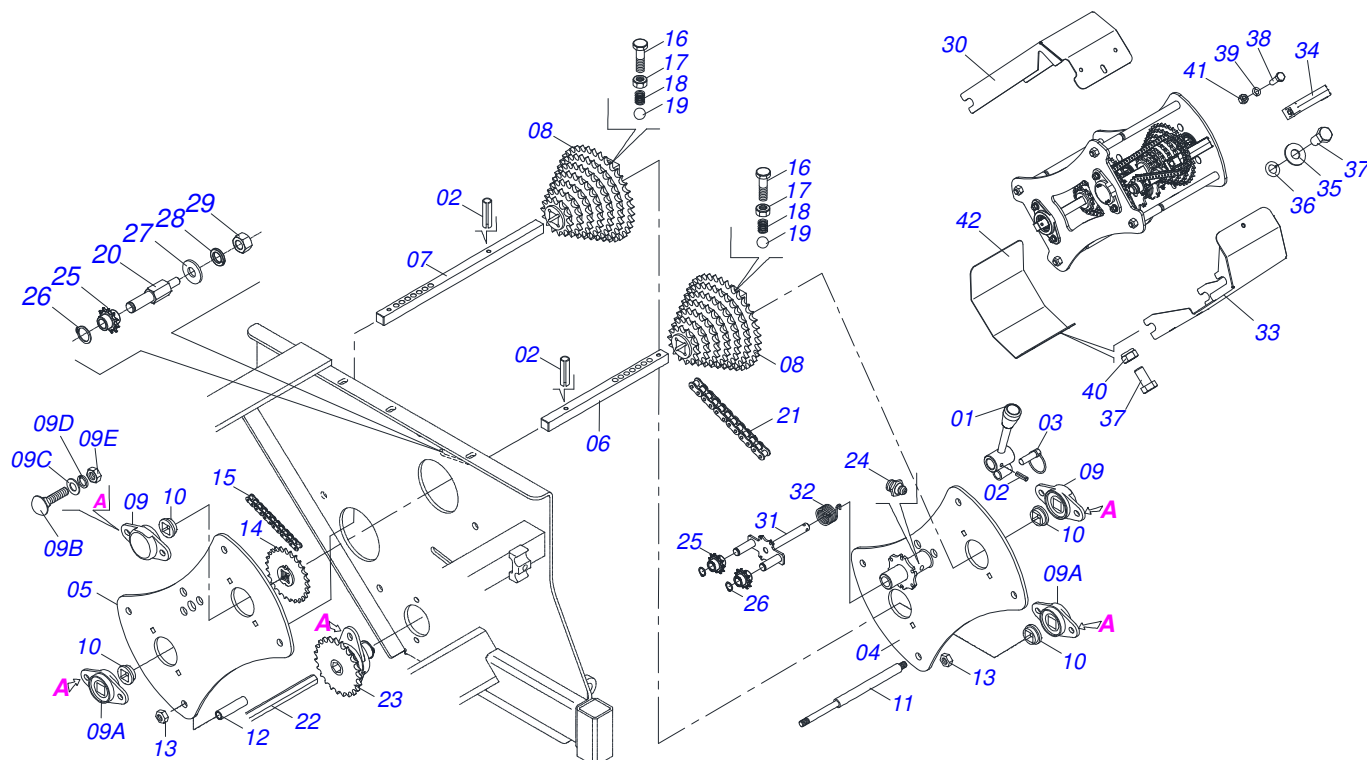 


Item	Code	Description	See page	QT
01	0502011758	REAR TENSIONER LEVER	01	
02	0503010292	0.2" X 1.6" SPRING PIN	03	
03	0501048790	AXLE WITH LINK ASSY	01	
04	0521062568	SIDE	01	
05	0561019671	BODY	01	
06	0581014147	MOTOR SHAFT	01	
07	0561017353	MOTOR SHAFT	01	
08	0511060396	DRIVE/DRIVEN AXLE CONE	02	
09	0511059266	CLOSED BEARING	03	
09A	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	01	
09B	0503011953	5/16" X 1" BOLT	09	
09C	0501010694	FLAT WASHER	09	
09D	0503010179	SPRING WASHER	09	
09E	0503010337	5/16" NUT	09	
10	0503030303	SUPPORT WASHER	04	
11	0571010425	JACK	04	
12	0571010426	SLEEVE SUPPORT	04	
13	0503011336	1/2" HEX SELF ADJUSTING NUT	08	
14	0511067501	26Z GEAR	01	
15	0503014528	40-1 CHAIN X 72 LINK + REDECTION	01	
16	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02	
17	0503010060	1/2" NUT	03	
18	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING	02	
19	0503012389	1/2 BALL	02	
20	0561016554	CURRENT STRETCH AXIS WHEELED SUPPORT	01	
21	0503012204	40-1 CHAIN X 82 LINK + RED	01	
22	0571011451	HEX AXLE	01	
23	0511051511	BEARING	01	
24	0503010002	1800 GREASE FITTING	01	
25	0503031805	11Z 1/2" GEAR	03	
26	0503010302	501019 SEAL RING	03	

SEED GEAR BOX


0909092693

Item	Code	Description	See page	QT
27	0511017302	FLAT WASHER		01
28	0503010019	1/2" SPRING WASHER		01
29	0503010060	1/2" NUT		01
30	0581012582	LEFT UPPER COVER		01
31	0511060392	CHAIN TENSIONER		01
32	0503031366	RH TORSION SPRING		01
33	0521067248	LEFT PROTECTION COVER		01
34	0503011907	PMC 594-S NYLON LUG		01
35	0501013518	FLAT WASHER		06
36	0503010025	3/8 SPRING WASHER		04
37	0503010256	3/8" X 3/4" BOLT		08
38	0503010363	5/16" X 1" BOLT		04
39	0503010179	SPRING WASHER		06
40	0503013357	3/8" SELF-ADJUSTING NUT		04
41	0503010337	5/16" NUT		01
42	0581012580	REAR COVER		01

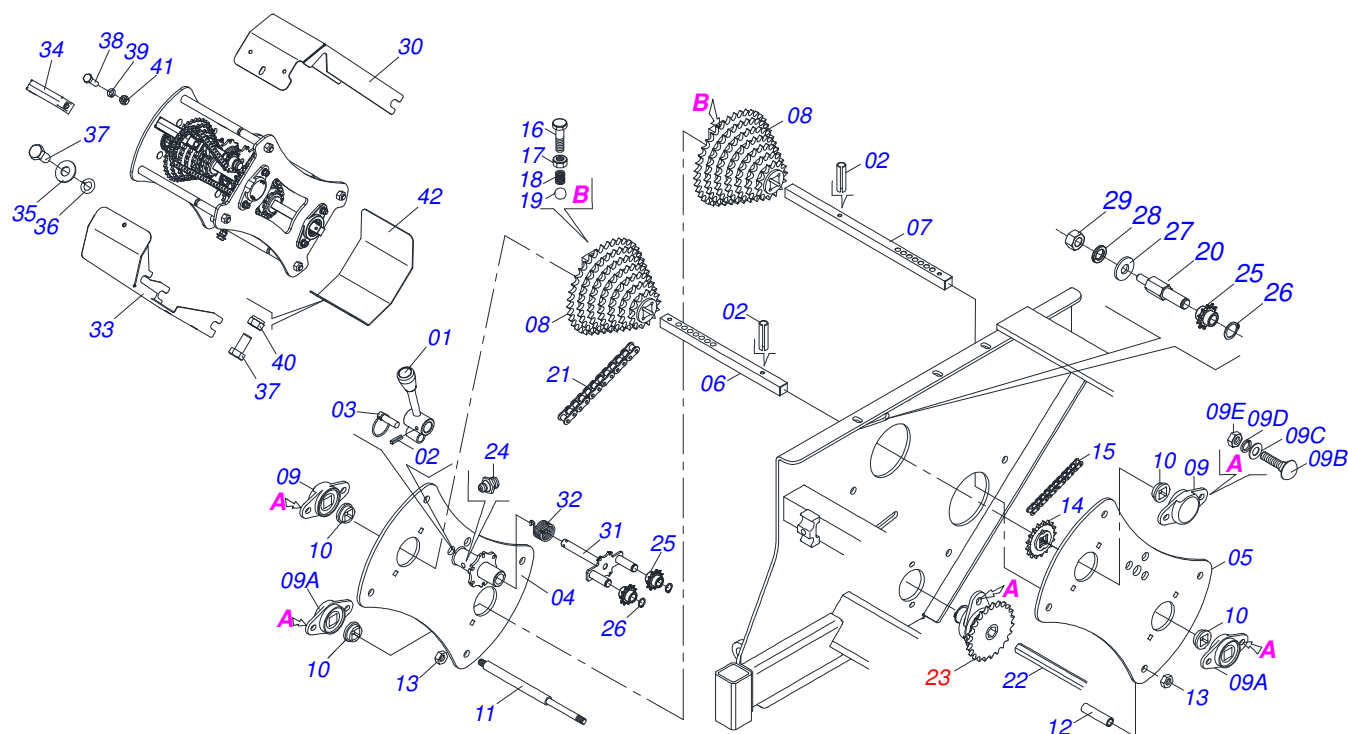 


Item	Code	Description	See page	QT
01	0502011758	REAR TENSIONER LEVER	01	
02	0503010292	0.2" X 1.6" SPRING PIN	03	
03	0501048790	AXLE WITH LINK ASSY	01	
04	0521062568	SIDE	01	
05	0561019671	BODY	01	
06	0581014147	MOTOR SHAFT	01	
07	0561017353	MOTOR SHAFT	01	
08	0511060396	DRIVE/DRIVEN AXLE CONE	02	
09	0511059266	CLOSED BEARING	03	
09A	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	01	
09B	0503011953	5/16" X 1" BOLT	09	
09C	0501010694	FLAT WASHER	09	
09D	0503010179	SPRING WASHER	09	
09E	0503010337	5/16" NUT	09	
10	0503030303	SUPPORT WASHER	04	
11	0571010425	JACK	04	
12	0571010426	SLEEVE SUPPORT	04	
13	0503011336	1/2" HEX SELF ADJUSTING NUT	08	
14	0511061830	17Z P 0.5" GEAR SQUARE HOL	01	
15	0503014528	40-1 CHAIN X 72 LINK + REDECTION	01	
16	0503010834	1/2 X 1 BOLT	02	
17	0503010060	1/2" NUT	03	
18	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING	02	
19	0503012389	1/2 BALL	02	
20	0511069978	CHAIN TENSIONER	01	
21	0503012204	40-1 CHAIN X 82 LINK + RED	01	
22	0571011451	HEX AXLE	01	
23	0511051511	BEARING	01	
24	0503010002	1800 GREASE FITTING	01	
25	0503031805	11Z 1/2" GEAR	03	
26	0503010302	501019 SEAL RING	03	


Item	Code	Description	See page	QT
27	0511017302	FLAT WASHER		01
28	0503010019	1/2" SPRING WASHER		01
29	0503010060	1/2" NUT		01
30	0581012581	TOP RIGHT COVER		01
31	0511060392	CHAIN TENSIONER		01
32	0503031366	RH TORSION SPRING		01
33	0521067247	RIGHT PROTECTION COVER		01
34	0503011907	PMC 594-S NYLON LUG		02
35	0501013518	FLAT WASHER		06
36	0503010025	3/8 SPRING WASHER		04
37	0503010256	3/8" X 3/4" BOLT		08
38	0503010363	5/16" X 1" BOLT		04
39	0503010179	SPRING WASHER		06
40	0503013357	3/8" SELF-ADJUSTING NUT		04
41	0503010337	5/16" NUT		01
42	0581012580	REAR COVER		01

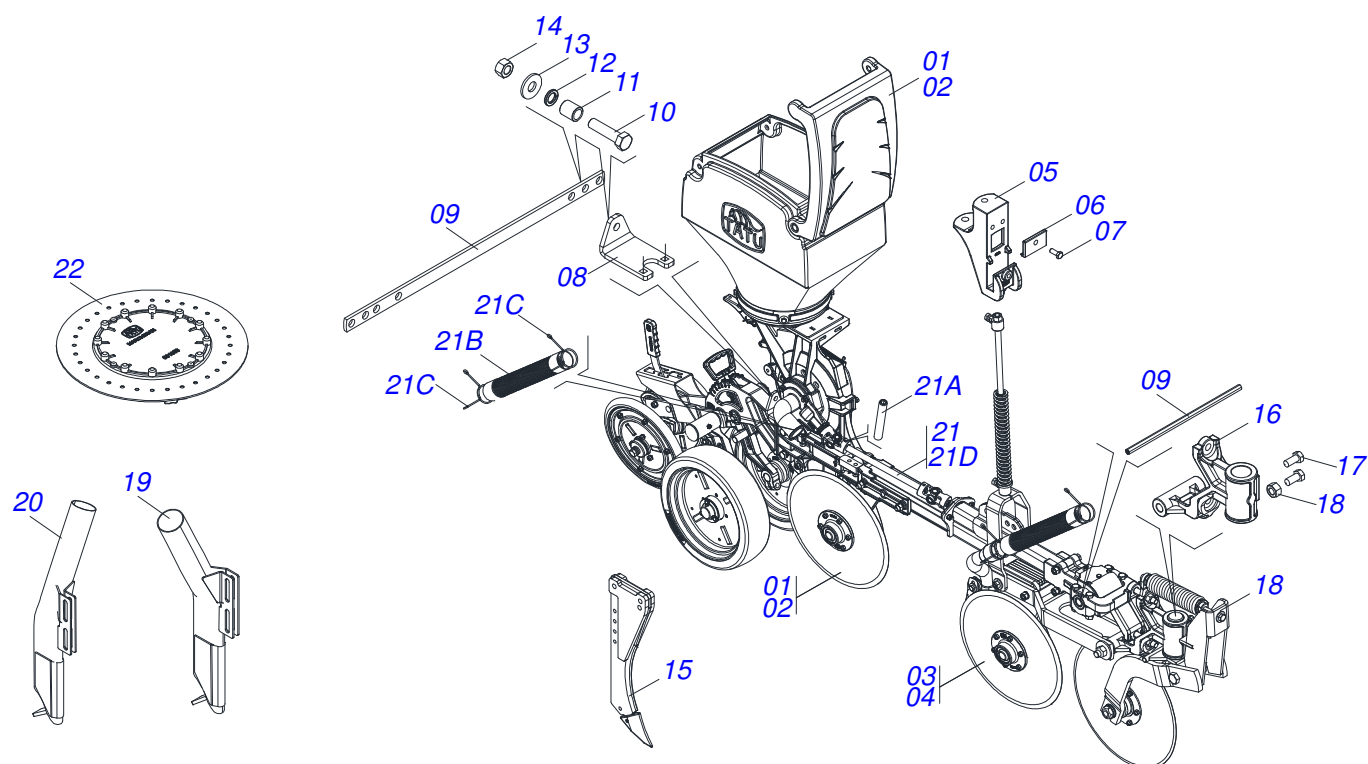 


Item	Code	Description	See page	QT
01	0511059157	RIGHT SEED ROW ASSY (ANGOLA)	24	01
02	0511059158	RIGHT SEED ROW ASSY (ANGOLA)	25	01
03	0511057589	RIGHT ARM FERTILIZER ROW ASSY	45	01
04	0511057591	LH FERTILIZER ROW ASSY	46	01
05	0571011443	ROD GUIDE SUPPORT		01
06	0502010891	SPRING CHOCK SUPPORT VARON		01
07	0503010920	1/2" X 1.1/2" BOLT		02
08	0571019424	SUPPORT		01
09	0501018652	CORN STABILIZER BAR		01
10	0503010740	1/2" X 2" BOLT		01
11	0521010505	13,50 X 19,00 X 21,50 SLEEVE		01
12	0503010019	1/2" SPRING WASHER		01
13	0511017302	FLAT WASHER		01
14	0503010060	1/2" NUT		01
15	0501110231	SCARIFIER HEAD WITH SPIKE 0061		01
16	0511058212	SET LINE SUPPORT FERTILIZER		01
17	0501010163	5/8" X 4-1/2" BOLT		02
18	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S		02
19	0511061769	FERTILIZER CONDUCTOR RIGHT		01
20	0511061770	FERTILIZER CONDUCTOR LEFT		01
21	0521050861	SEED / FERTILIZER TRANSMISSION		01
21A	0503011855	0.2" X 1.8" SPRING PIN		02
21B	0503030331	1.2" X 1.2" X 12.2" HOSE		01
21C	0503010243	CLAMP		02
21D	0503062657			01
22	0503011369	DISC 3250 MIDDLE CORN		01

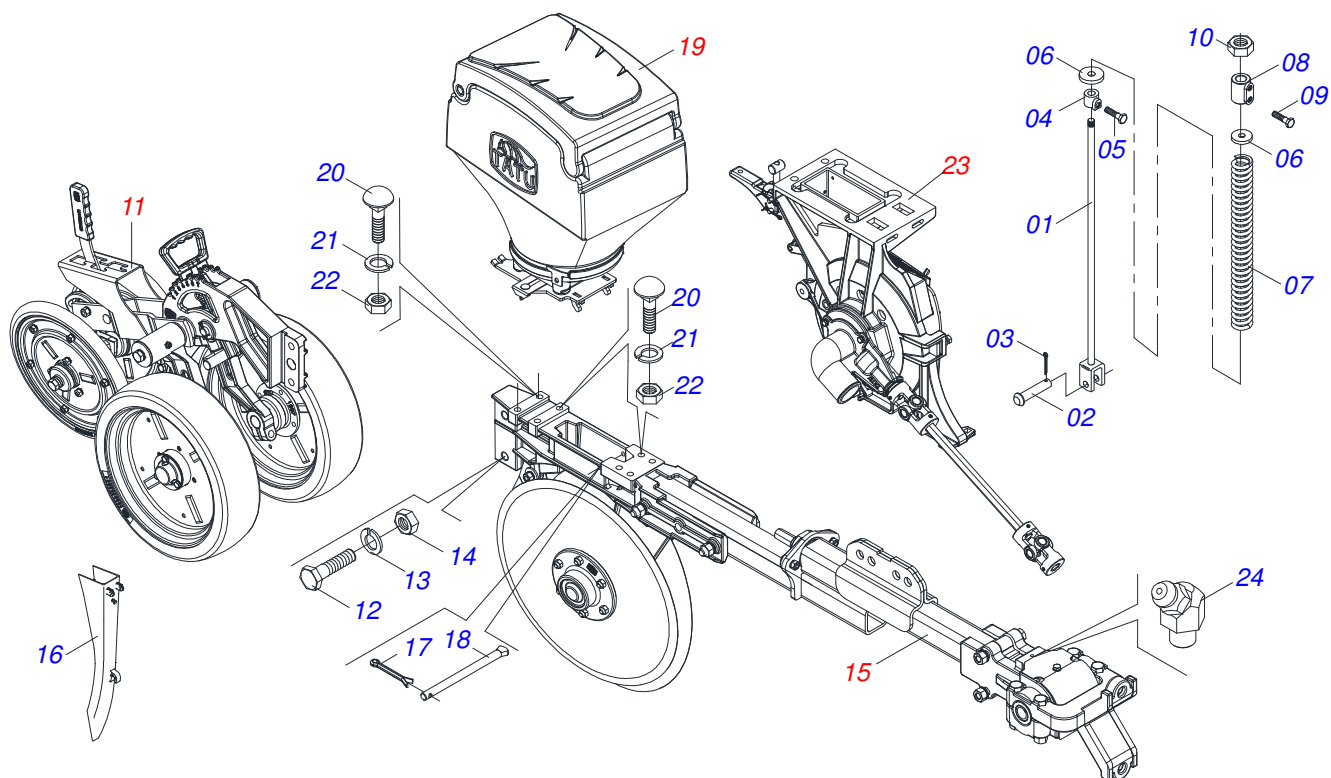 


Item	Code	Description	See page	QT
001	0521062824	SPINDLE GUIDE		01
002	0521010542	COUPLING SHAFT		01
003	0503010257	1/8" X 1" COTTERPIN		01
004	0521062825	LOCK VARON GUIDE		01
005	0503010834	1/2 X 1 BOLT		02
006	0531019915	FLAT WASHER		01
007	0503031360	1.68"X17.75"X0.3" COMPRESS SPRING		01
008	0502040534	SPRING GUIDE BUSHING LOCK		01
009	0501018535	1/2 X 1 BOLT		01
010	0503010014	3/4" NUT		01
011	0521040159	DEPTH WHEEL SYSTEM	33	01
012	0503010740	1/2" X 2" BOLT		02
013	0503010019	1/2" SPRING WASHER		02
014	0503010060	1/2" NUT		02
015	0511058993	SEED ROW ARM	28	01
016	0503062390	SEED CONDUCTOR		01
017	0503010140	1/8" X 3/4" COTTERPIN		01
018	0571017895	PIN FIXER CONDUCTOR PRECISION PLANTING		01
019	0501059135	BOX SEED	42	01
020	0503015920	3/8" UNC X 1.3/4" BOLT		04
021	0503010025	3/8 SPRING WASHER		04
022	0503010026	3/8" NUT		04
023	0511058995			01
024	0503011099	GREASE FITTING		01

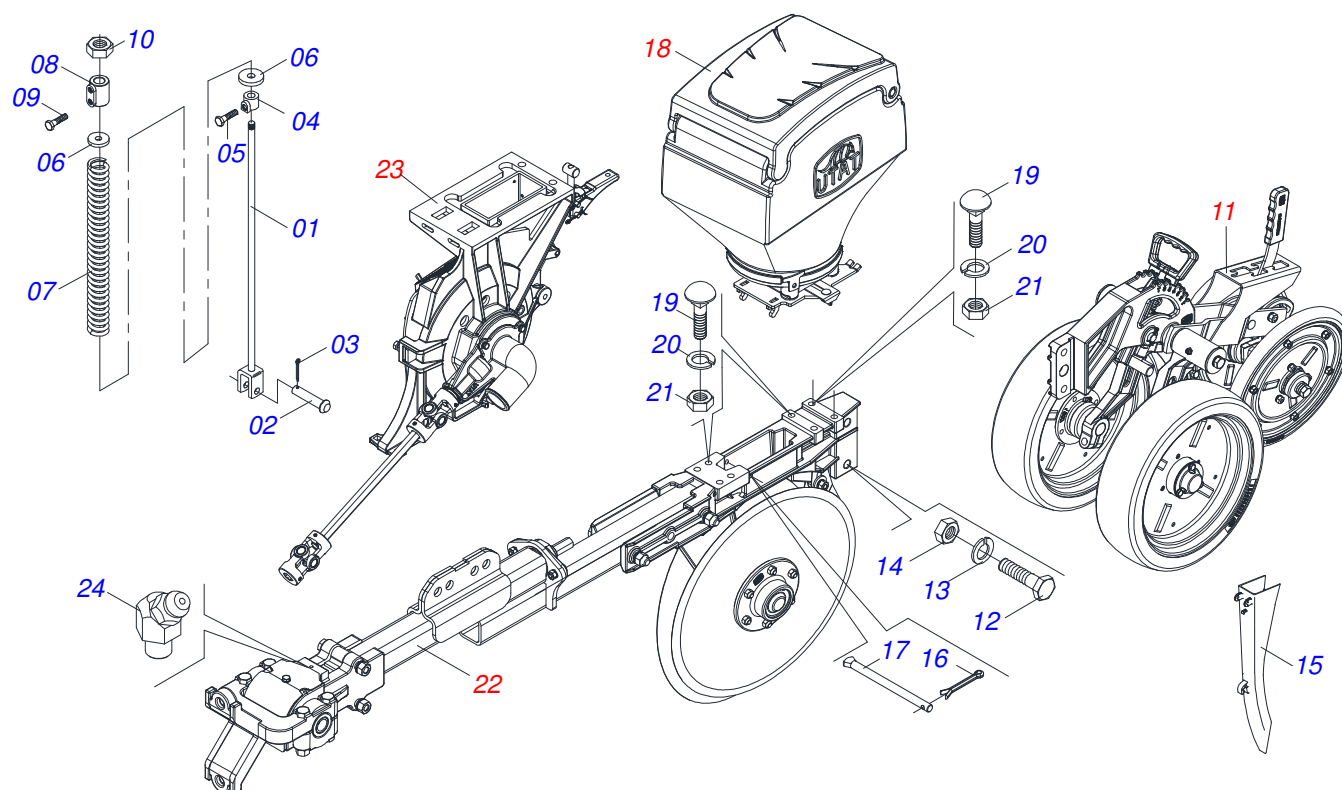 


Item	Code	Description	See page	QT
001	0521062824	SPINDLE GUIDE		01
002	0521010542	COUPLING SHAFT		01
003	0503010257	1/8" X 1" COTTERPIN		01
004	0521062825	LOCK VARON GUIDE		01
005	0503010834	1/2 X 1 BOLT		02
006	0531019915	FLAT WASHER		01
007	0503031360	1.68"X17.75"X0.3" COMPRESS SPRING		01
008	0502040534	SPRING GUIDE BUSHING LOCK		01
009	0501018535	1/2 X 1 BOLT		01
010	0503010014	3/4" NUT		01
011	0521040159	DEPTH WHEEL SYSTEM	33	01
012	0503010740	1/2" X 2" BOLT		02
013	0503010019	1/2" SPRING WASHER		02
014	0503010060	1/2" NUT		02
015	0503062390	SEED CONDUCTOR		01
016	0503010140	1/8" X 3/4" COTTERPIN		01
017	0571017895	PIN FIXER CONDUCTOR PRECISION PLANTING		01
018	0501059135	BOX SEED	42	01
019	0503015920	3/8" UNC X 1.3/4" BOLT		04
020	0503010025	3/8 SPRING WASHER		04
021	0503010026	3/8" NUT		04
022	0511058992	LEFT SEED ROW ARM	26	01
023	0511058995			01
024	0503011099	GREASE FITTING		01

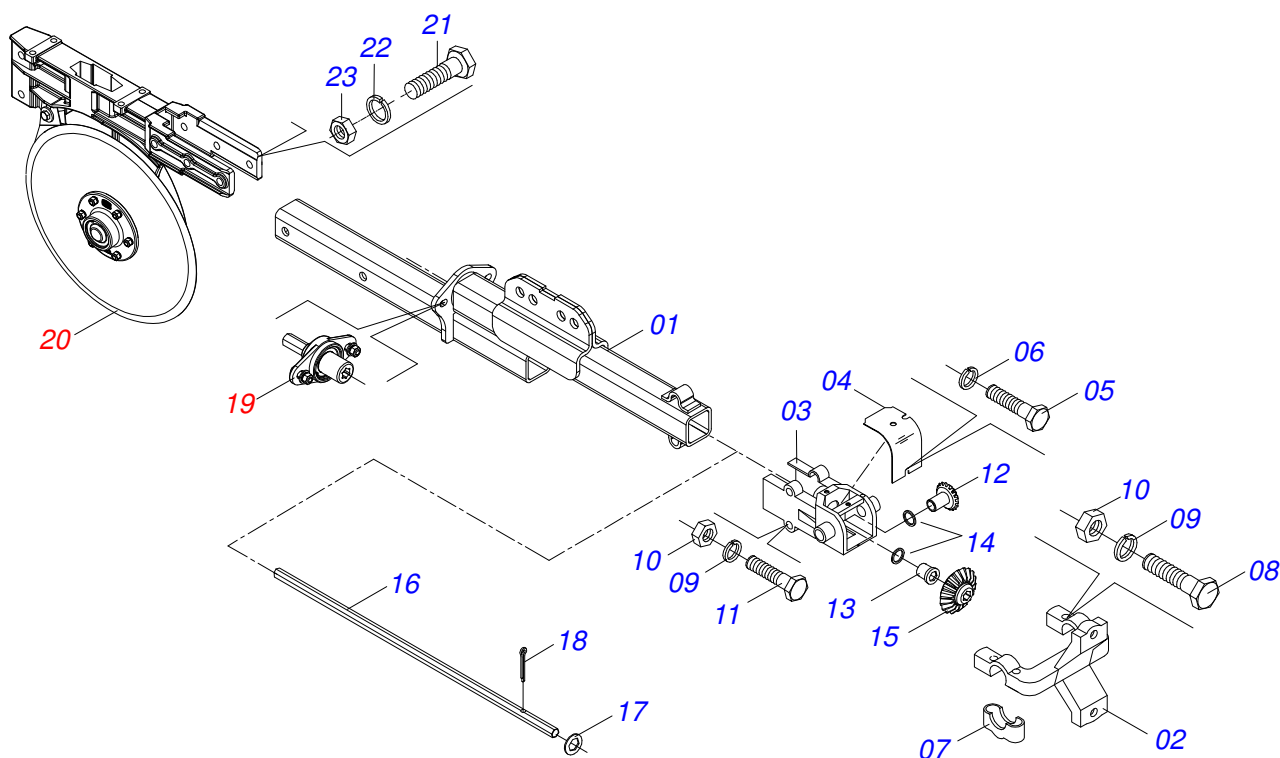 


Item	Code	Description	See page	QT
001	0521066077	SEED ROW ARM		01
002	0502011561	BEARING SEMI		01
003	0571010152	ROW SEED SUPPORT ARTICULACION		01
004	0521018079	SEEP ROW DRAWBAR COVER		01
005	0503014729	1/4" UNF X 1/2" BOLT		02
006	0503011441	SPRING WASHER		02
007	0502010426	UPPER BEARING SEMI		02
008	0503010479	1/2" X 3" BOLT		04
009	0503011440	SPRING WASHER		04
010	0503010060	1/2" NUT		04
011	0503010752	1/2" X 3.1/2" BOLT		02
012	0502011400	18Z CONICAL GEAR		01
013	0502011296	1/2 HEX AXLE BEARING SLEEVE		01
014	0501013354	FLAT WASHER		02
015	0502011505	18Z CONICAL GEAR		01
016	0561019673	1/2" X 540 HEX AXLE		01
017	0501013352	FLAT WASHER		01
018	0503010257	1/8" X 1" COTTERPIN		01
019	0511052324	CARDAN TRANSMISSION BEARING	27	01
020	0511057153	DDD LEFT SUPREMA PRECISION PLANTING	30	01
021	0503010706	1/2" X 4.1/2" BOLT		02
022	0503011440	SPRING WASHER		02
023	0503010060	1/2" NUT		02

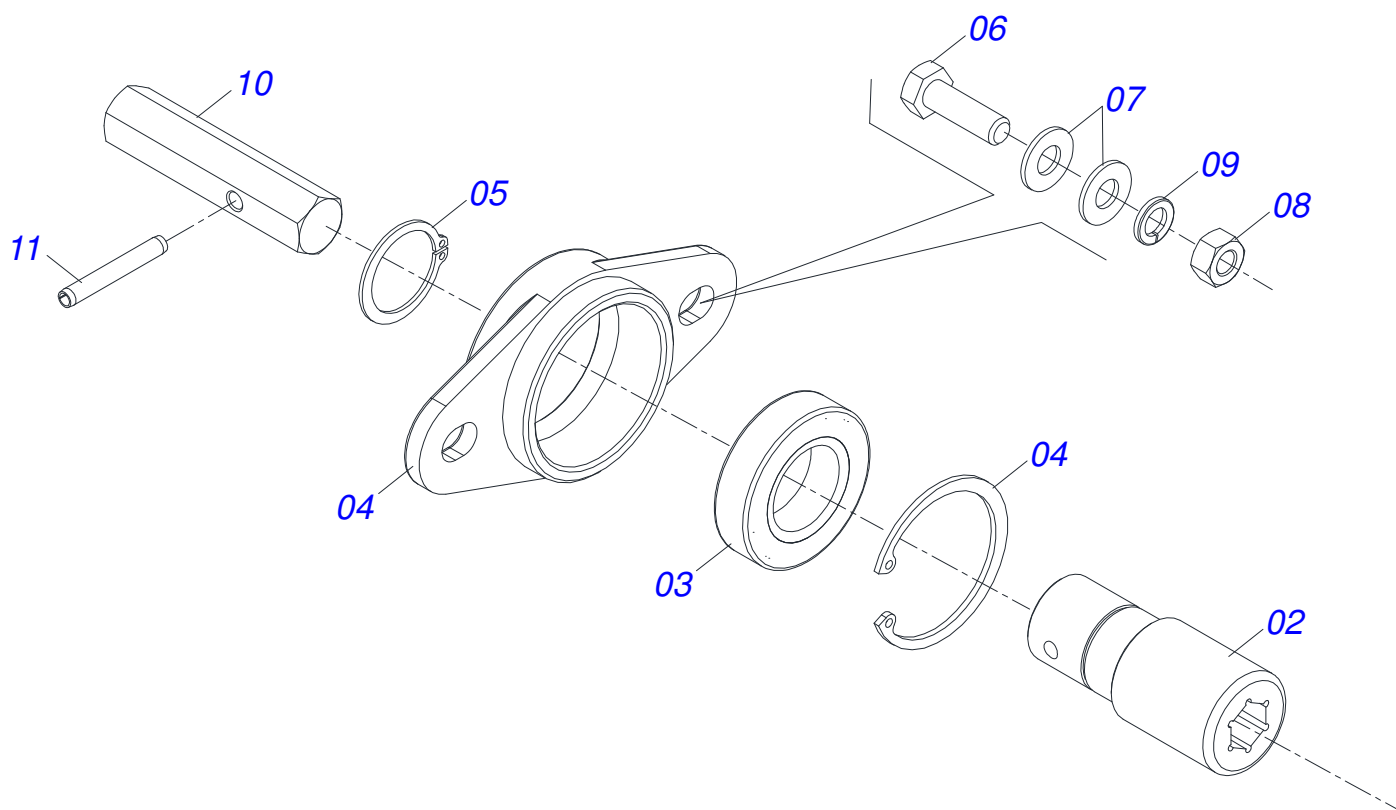 


Item	Code	Description	See page	QT
001	0571012290	BEARIN BODY		01
002	0571012289	SLLEVE FIXER AXLE		01
003	0503011410	ROLLER BEARING		01
004	0503011105	SEAL RING		01
005	0503010406	501025 CLAMPING RING (FOR AXLE)		01
006	0503010371	5/16" X 1" BOLT		02
007	0501010694	FLAT WASHER		04
008	0503010337	5/16" NUT		02
009	0503010179	SPRING WASHER		02
010	0571012288	HEX AXLE		01
011	0503015356	SPRING PIN		01

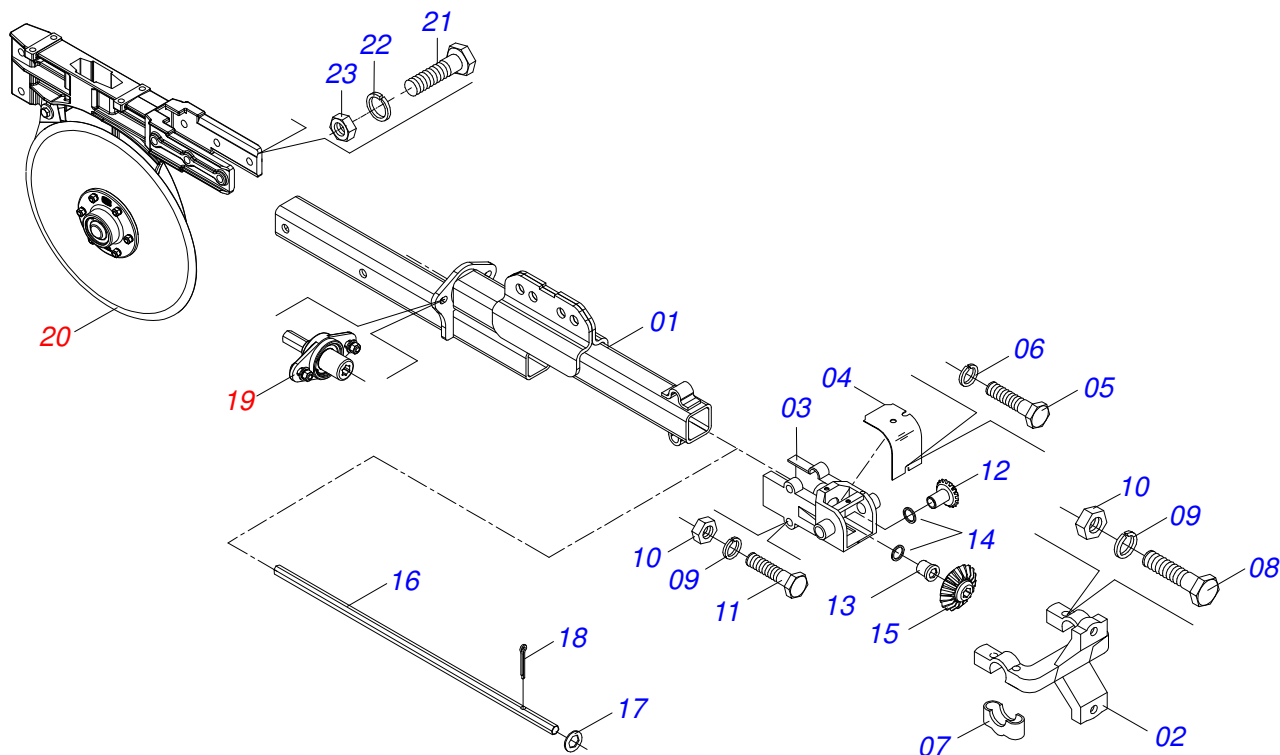 


Item	Code	Description	See page	QT
001	0521066077	SEED ROW ARM		01
002	0502011561	BEARING SEMI		01
003	0571010152	ROW SEED SUPPORT ARTICULACION		01
004	0521018079	SEEP ROW DRAWBAR COVER		01
005	0503014729	1/4" UNF X 1/2" BOLT		02
006	0503011441	SPRING WASHER		02
007	0502010426	UPPER BEARING SEMI		02
008	0503010479	1/2" X 3" BOLT		04
009	0503011440	SPRING WASHER		04
010	0503010060	1/2" NUT		04
011	0503010752	1/2" X 3.1/2" BOLT		02
012	0502011400	18Z CONICAL GEAR		01
013	0502011296	1/2 HEX AXLE BEARING SLEEVE		01
014	0501013354	FLAT WASHER		02
015	0502011505	18Z CONICAL GEAR		01
016	0561019673	1/2" X 540 HEX AXLE		01
017	0501013352	FLAT WASHER		01
018	0503010257	1/8" X 1" COTTERPIN		01
019	0511052324	CARDAN TRANSMISSION BEARING	27	01
020	0511057154	DDD RITGH SUPREMA PRECISION PLANTING	29	01
021	0503010706	1/2" X 4.1/2" BOLT		02
022	0503011440	SPRING WASHER		02
023	0503010060	1/2" NUT		02

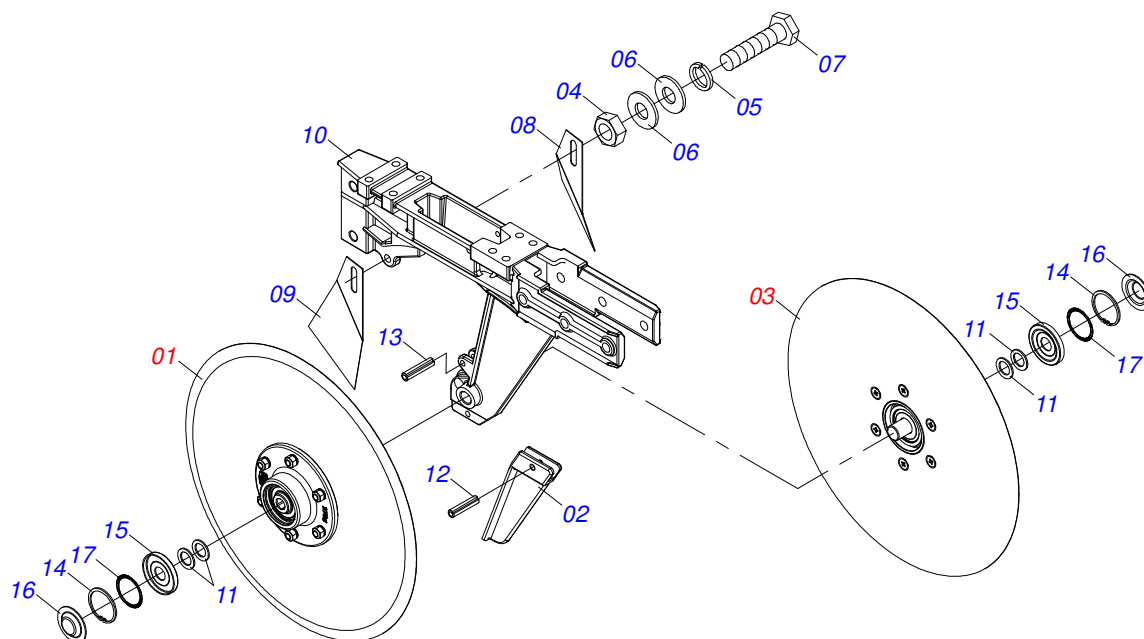 


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15		01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	CUBE LOW RIGHT WITH DISC 15		01
04	0503010026	3/8" NUT		01
05	0503011443	SPRING WASHER		01
06	0501010984	FLAT WASHER		02
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012780	SUPPORT DDD RIGHT		01
11	0511015098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O-RING		02

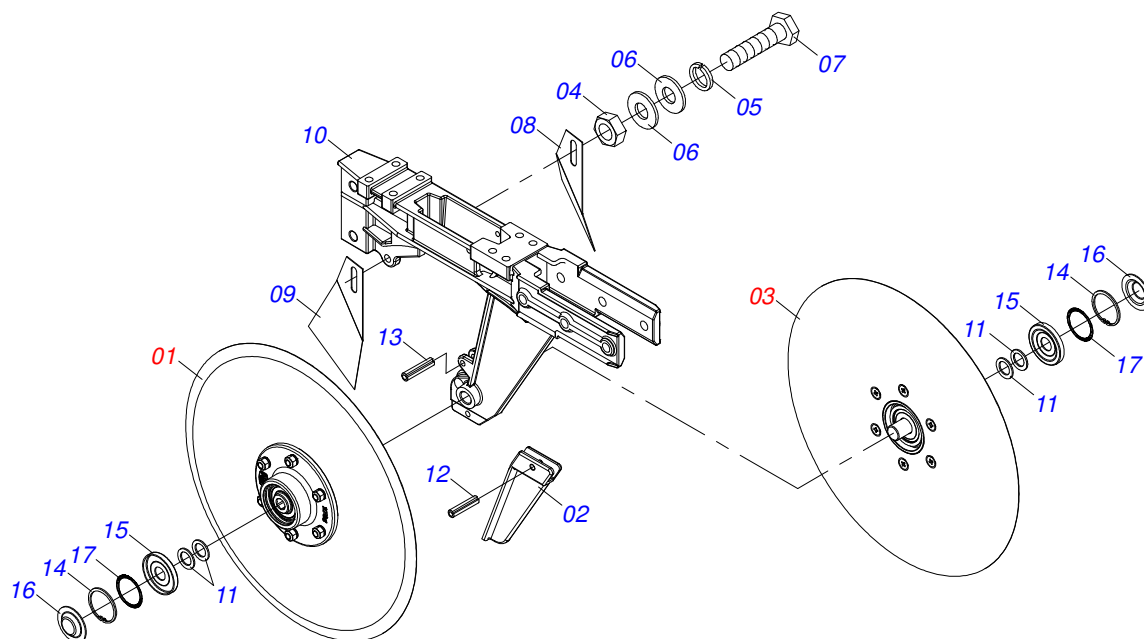 

Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15		01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	CUBE LOW RIGHT WITH DISC 15		01
04	0503010026	3/8" NUT		01
05	0503011443	SPRING WASHER		01
06	0501010984	FLAT WASHER		02
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012781	SUPPORT DDD LEFT		01
11	0511015098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O'RING		02

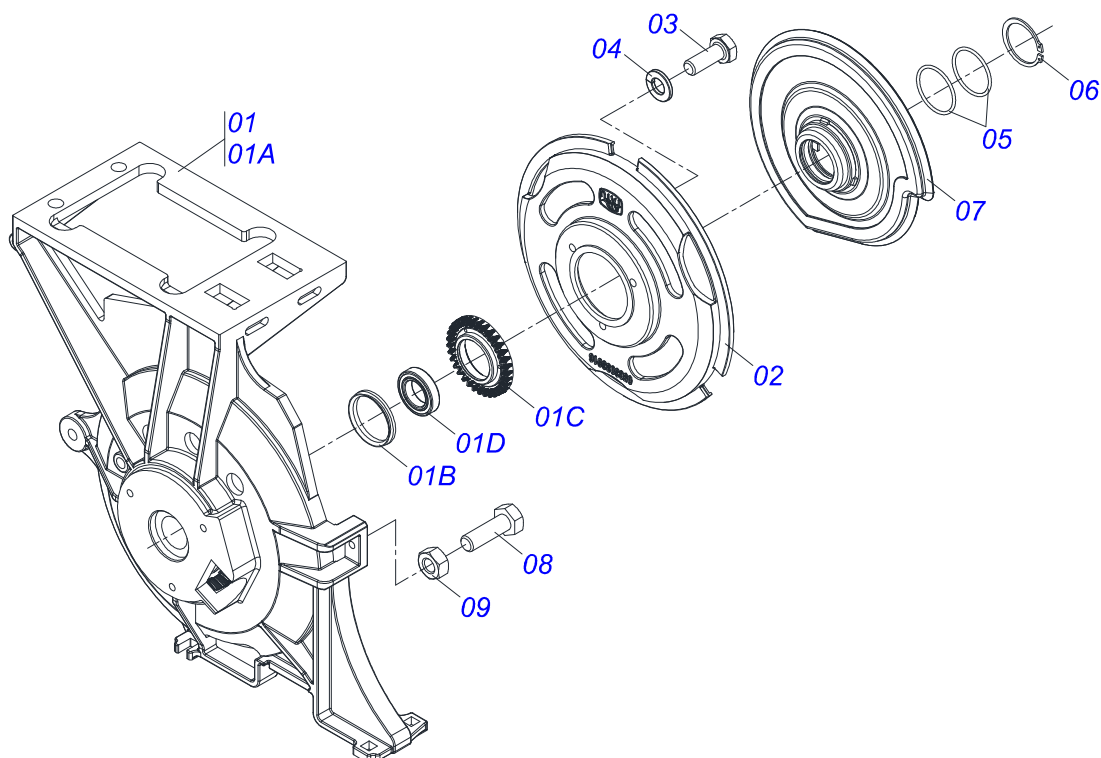 


Item	Code	Description	See page	QT
01	0501110649	INNER SUPPORT NEUMATIC SEED DISTR		01
01A	0502012599	PNEUMATIC SEED DISTRIBUTOR SUPPORT		01
01B	0503011770	SEAL # V-75 A		01
01C	0502012649	18Z CONICAL GEAR 34 TEETH		01
01D	0503011771	6008 2RS BALL BEARING		01
02	0502050003	SUPPORT INTERNAL DISC SEED VULCANIZ		01
03	0503011378	M6 X 1" BOLT		03
04	0503010143	SPRING WASHER		03
05	0503012849	2-129 N 3006 9B O'RING		02
06	0503010217	501040 CLAMPING RING (FOR AXLE)		01
07	0503033121	PNEUMATIC SWITCH		01
08	0503011295	M 8 X 1,25 X 25 BOLT		01
09	0503010427	METRIC M8 X P.0.5" NUT		01

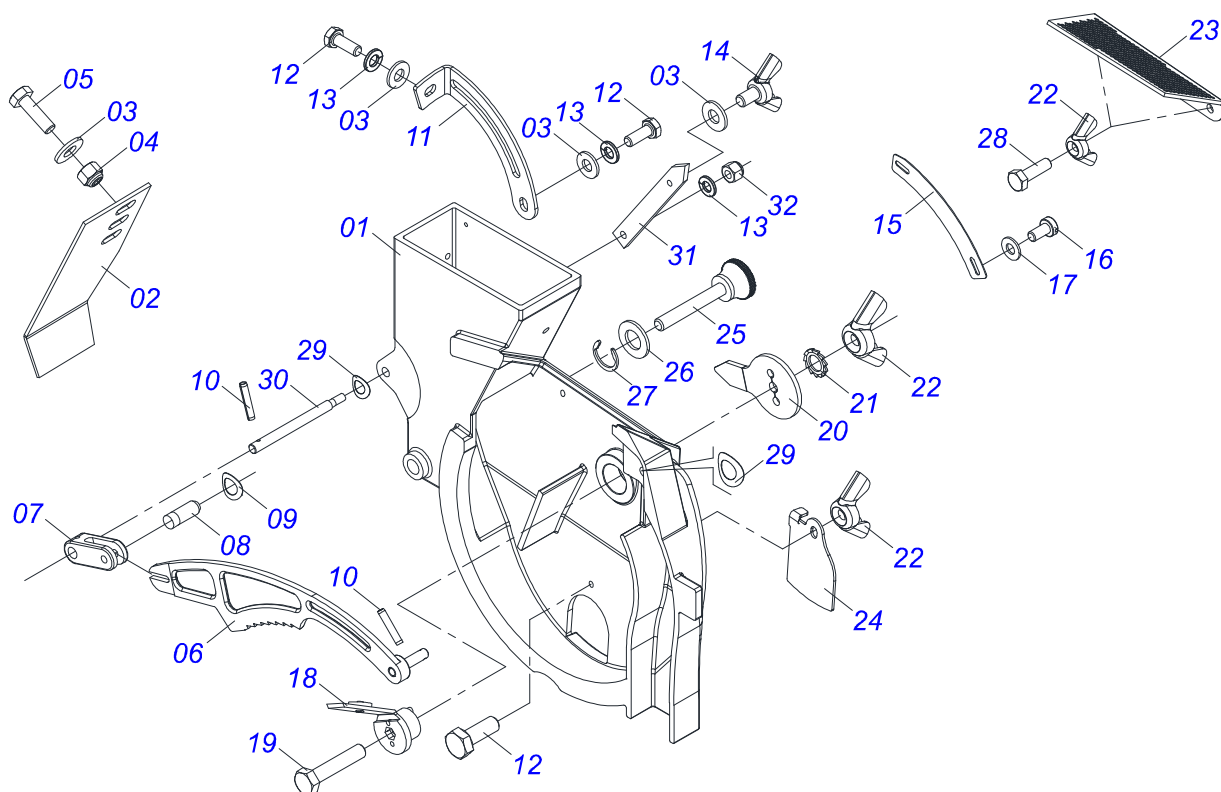 


Item	Code	Description	See page	QT
001	0561012486	LATERAL COVER	01	
002	0511017186	SEED LEVEL REGULATOR	01	
003	0511017303	FLAT WASHER	04	
004	0503011776	M6 SELF ADJUSTINGNUT	01	
005	0503014141	M6 X 1 X 20 BOLT	01	
006	0503011817	UPPER SELECTOR	01	
007	0502020559	UPPER SELECTOR ACTUATOR	01	
008	0531014481	0.2" X 0.6" AXLE	01	
009	0503011821	CRINKLE WASHER	01	
010	0503011823	0.1" X 0.6" SPRING PIN	02	
011	0511017219	SCALE INDICATOR GUIDE	01	
012	0503011378	M6 X 1" BOLT	03	
013	0503010143	SPRING WASHER	03	
014	0503011810	M6 X 1" BUTTERFLY BOLT	01	
015	0503031058	UPPER SELECTOR SCALE	01	
016	0503011825	M4 X 8" BOLT	02	
017	0503011840	FLAT WASHER	02	
018	0501110311	LOWER SELECTOR ASSY	01	
019	0503011813	M6 X 1.2" BOLT	01	
020	0511016220	LOWER SELECTOR INDICATOR	01	
021	0503011815	TOOTHED WASHER	01	
022	0503012445	M6 C/ABA 1.20" BUTTERFLY NUT	04	
023	0503013179	PNEUMATIC SEED DISTRIBUTOR VISOR	01	
024	0561012741	SEED DRAINER COVER	01	
025	0503011809	M12 KNOB	01	
026	0503011828	FLAT WASHER	01	
027	0503011827	504.100 CLAMPING RING (FOR HOLE)	01	
028	0503011104	M6 X 1" BOLT	02	
029	0503011820	CRINKLE WASHER	02	
030	0511017199	PST SUP AXLE	01	
031	0511017198	SCALE INDICATOR	01	




Item	Code	Description	See page	QT
032	0503015536	M6 X 1" SELF ADJUSTING NUT		01

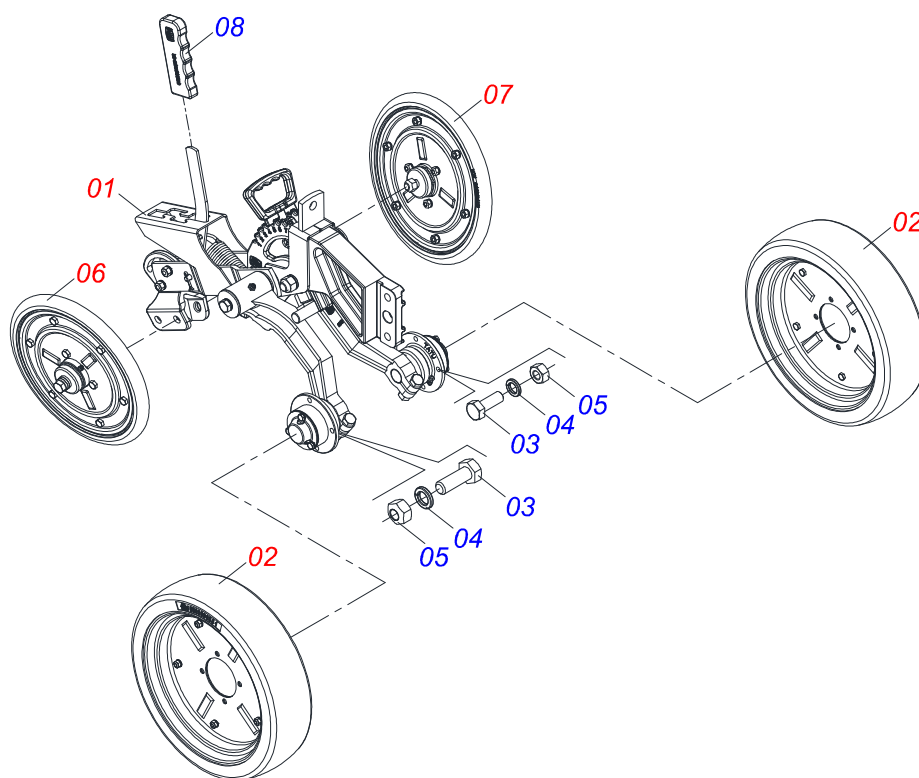 


Item	Code	Description	See page	QT
01	0511056937	DEPTH CONTROL SEMI MOUNTED	34	01
02	0501052538	DEPTH BAND WITH ARMS	39	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503010179	SPRING WASHER		08
05	0503013816	5/16" LOCKNUT		08
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	41	01
07	0511054333	COMPACT WHEEL RIGHT WITH BEARING	40	01
08	0503033942	COVER REGULATORY WHEEL		01

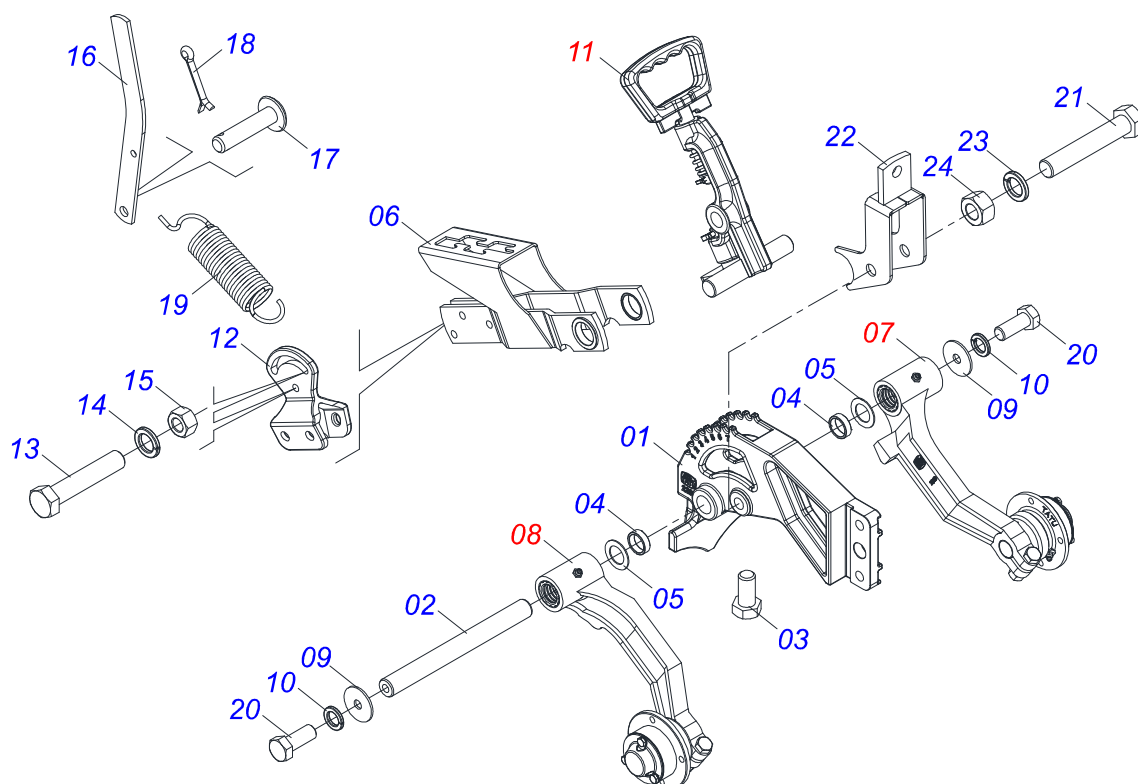 


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0503010256	3/8" X 3/4" BOLT		01
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
05	0511015346	FLAT WASHER		02
06	0521064073	REGULACION WHEEL COMPACTOR		01
07	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	36	01
08	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	35	01
09	0571017749	FLAT WASHER		02
10	0503011440	SPRING WASHER		02
11	0501052297	DEPTH WHEELS REGULATOR ASSY	38	01
12	1902012116	PRESS WHEEL ADJUSTER		01
13	0503010849	3/8" X 1-1/2" BOLT		02
14	0503011443	SPRING WASHER		02
15	0503010026	3/8" NUT		02
16	0541016906	PRESS WHEELS REGULATOR BODY		01
17	0521010539	0.3" X 1.2" COUPLING SHAFT		01
18	0503010140	1/8" X 3/4" COTTERPIN		01
19	0503030805	1.6" X 6" X 0.2"TRACTION SPRING		01
20	0503010311	1/2" X 1-1/4" BOLT		02
21	0503010762	5/8" X 3-12" BOLT		01
22	0521062527	SUPPORT STABILIZER BAR		01
23	0503011445	SPRING WASHER		01
24	0503010013	5/8" NUT		01

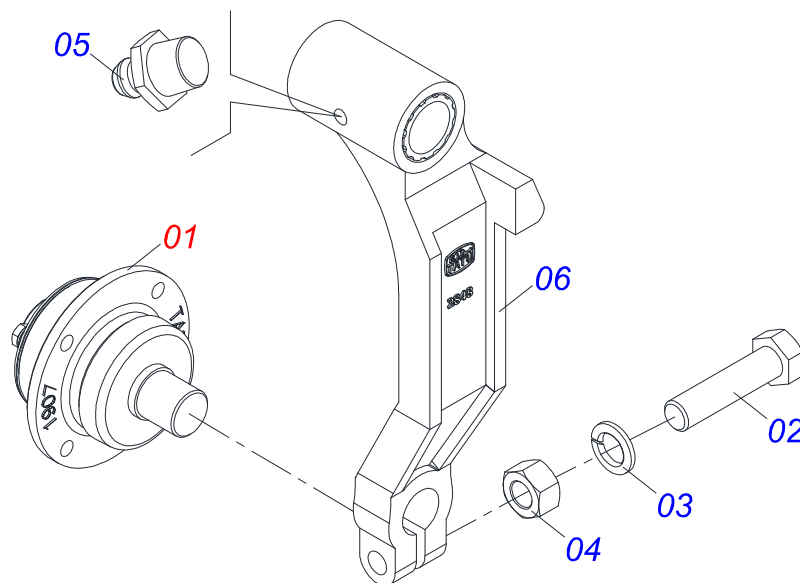 


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL BOX	37	01
02	0503010740	1/2" X 2" BOLT		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

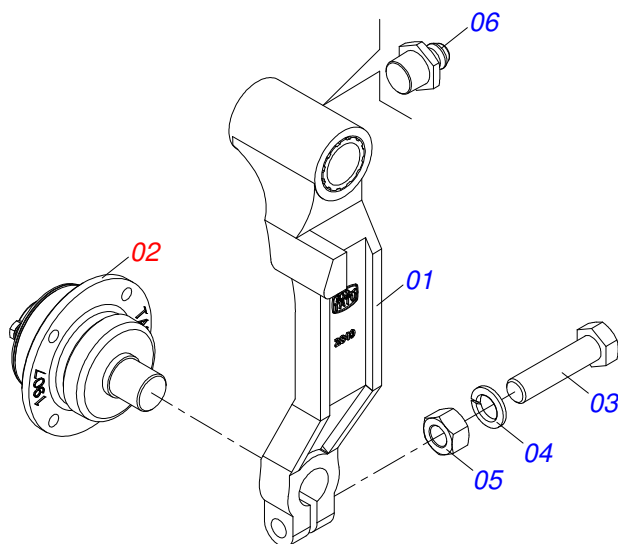 


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL BOX	37	01
03	0503010740	1/2" X 2" BOLT		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01

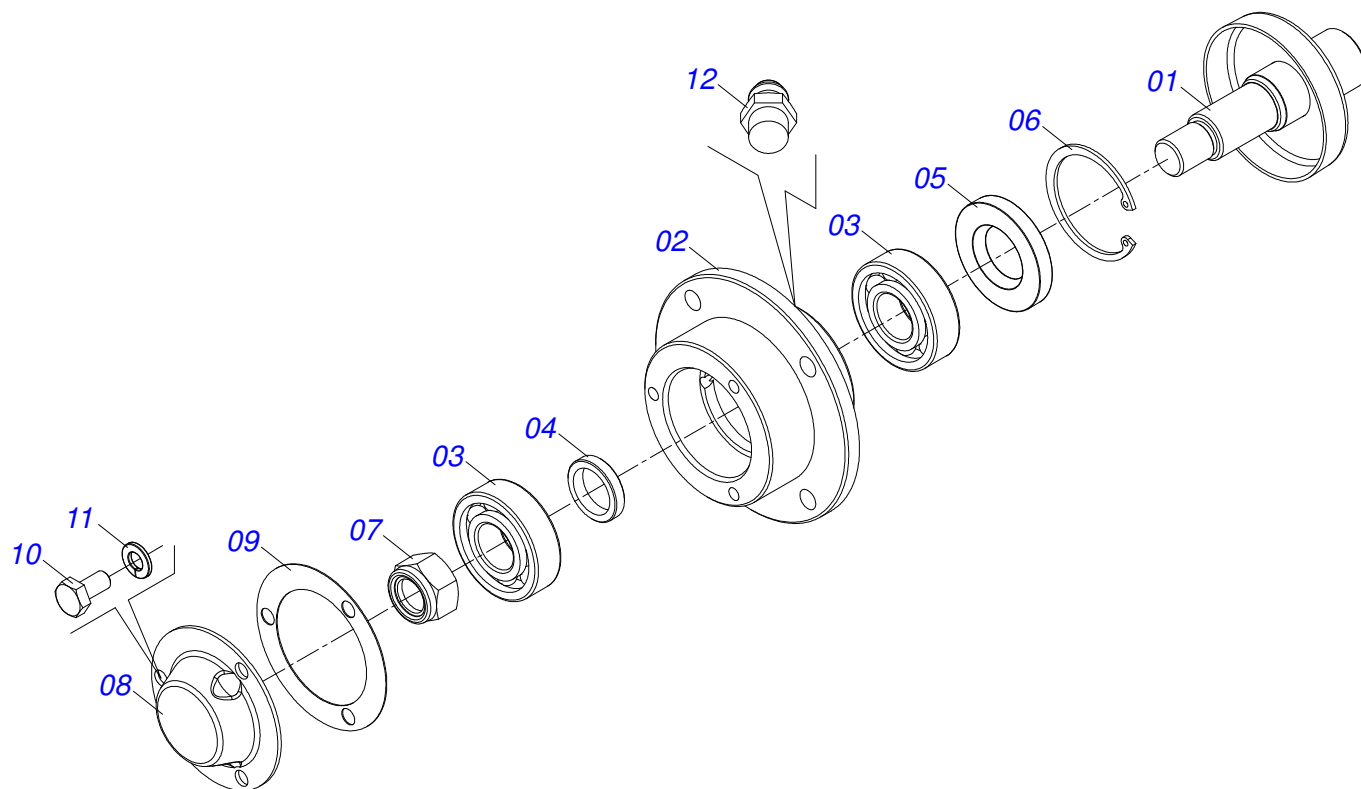 


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	COVER DEPTH		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

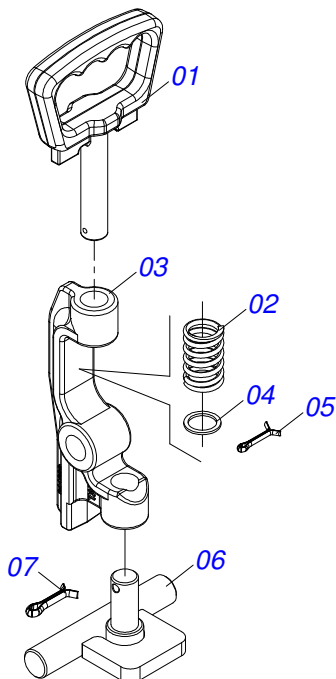 


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	SEED SIST CONTROL DEPTH LEVER		01
04	0511015976	FLAT WASHER		01
05	0503010257	1/8" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503010071	3/16" X 1" COTTERPIN		01

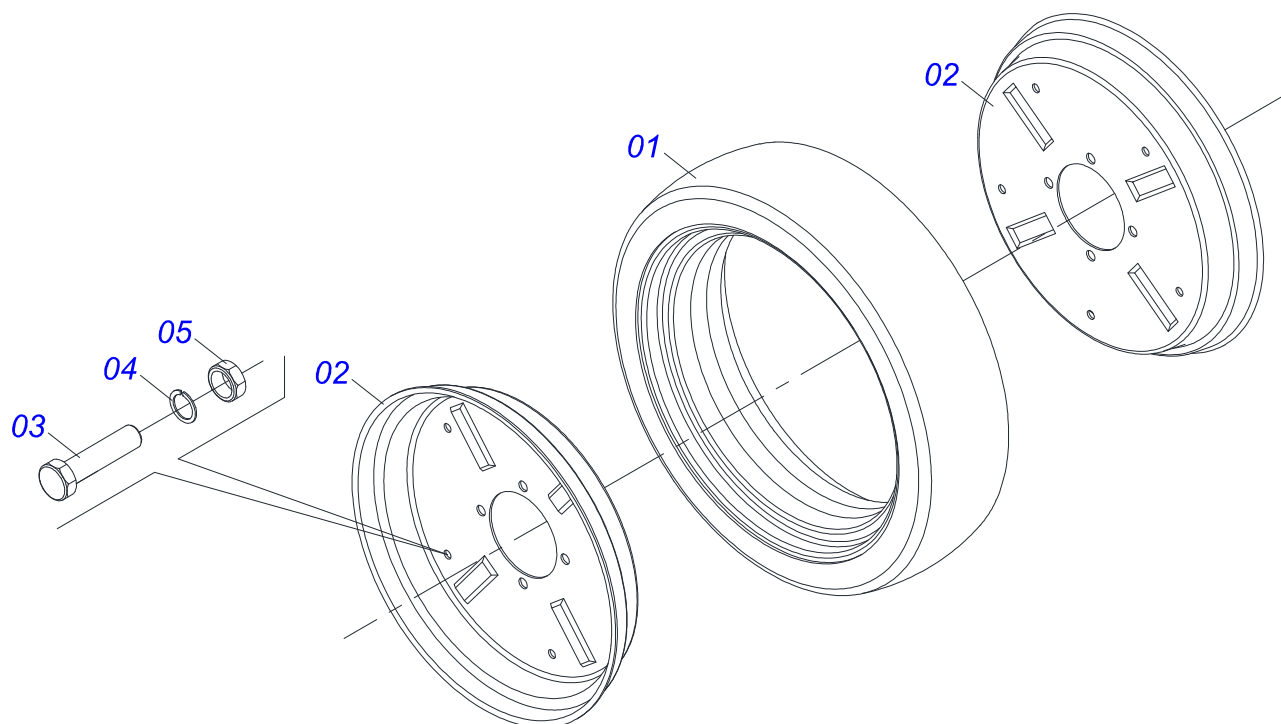 


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	SPRING WASHER		05
05	0503010144	1/4" NUT		05

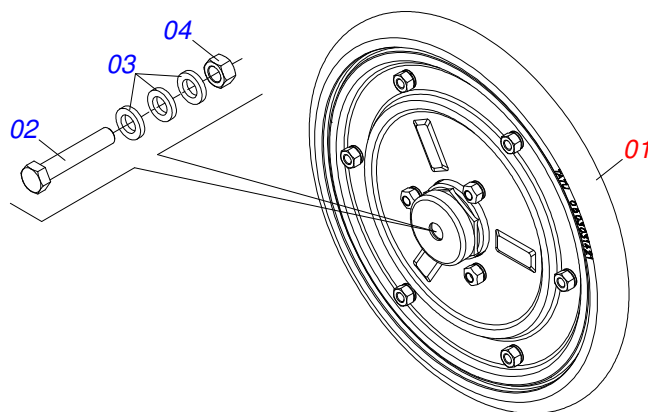 


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING		01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	1 X 9 BOLT		01

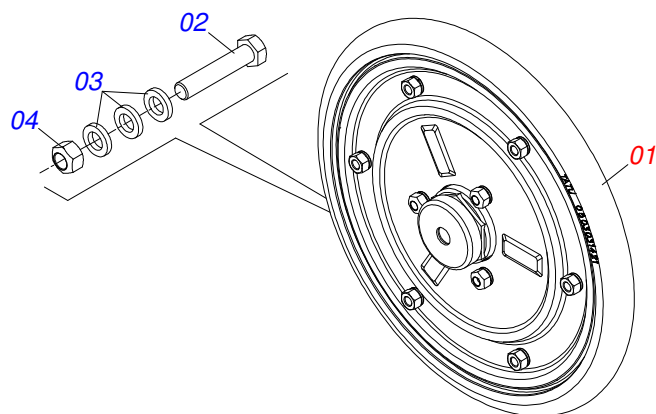 


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING		01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

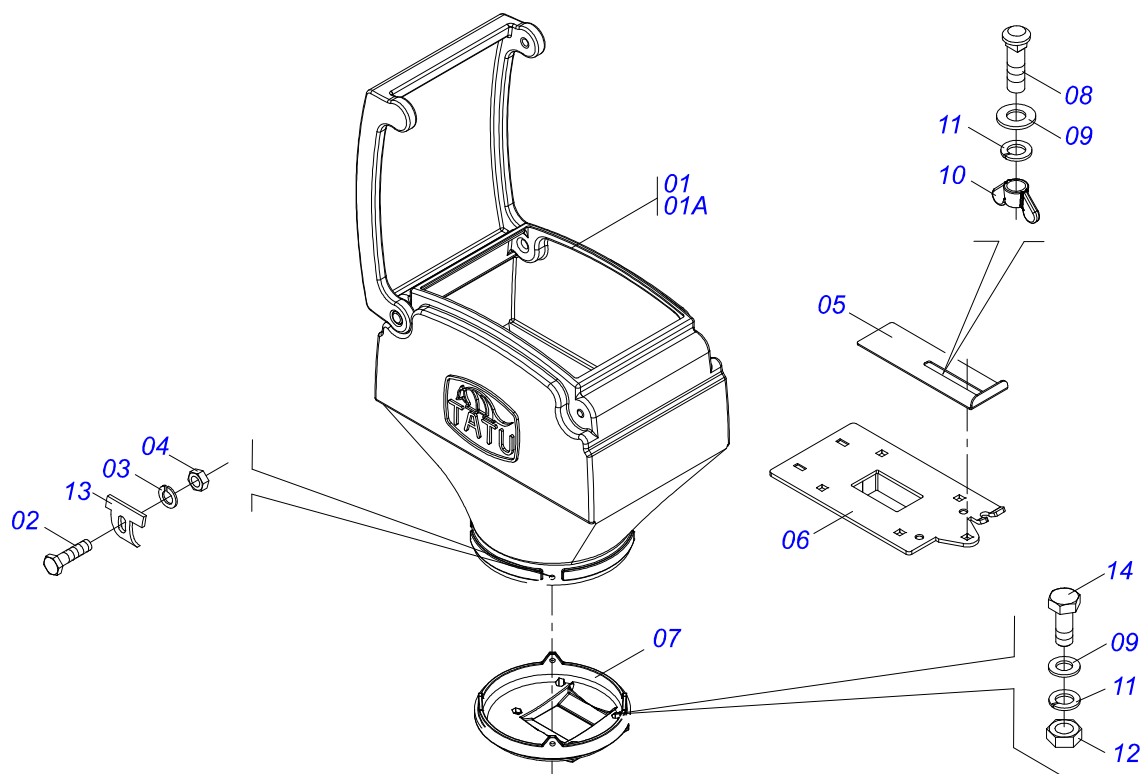 


Item	Code	Description	See page	QT
01	0501059135	BOX SEED	42	01
01A	0503060516	SEED BOX WITH SMALLER CAP		01
02	0503010371	5/16" X 1" BOLT		04
03	0503010179	SPRING WASHER		04
04	0503010337	5/16" NUT		04
05	0531018349	SEED FLOW SWITCH PNEUMATIC SYSTEM		01
06	0521060631	FIXING BASE BOX		01
07	0502011760	SEED SILO SUPPORT		01
08	0501011643	3/8 X 1" BOLT		01
09	0501010984	FLAT WASHER		05
10	0503010209	3/8" UNC BUTTERFLY NUT		01
11	0503010025	3/8 SPRING WASHER		05
12	0503010026	3/8" NUT		04
13	0531010631	SEED BEAM CLAMP		04
14	0503010849	3/8" X 1-1/2" BOLT		04

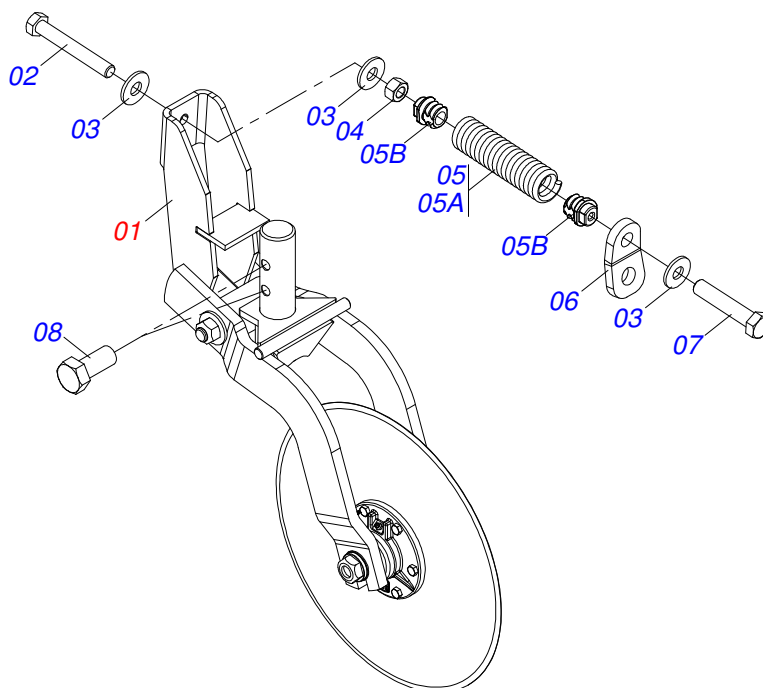 


Item	Code	Description	See page	QT
01	0501056428	ROW 16 BLADE DISC ASSY	44	01
02	0503013329	1/2" UNC X 4-3/4" BOLT		01
03	0511017302	FLAT WASHER		03
04	0503010060	1/2" NUT		01
05	0511057192	EXTENSION SPRING		01
05A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
05B	0502011031	SPRING UPPER HITCH		02
06	0531012869	SUPPORT SPRING		01
07	0503011264	1/2" X 2-1/2" BOLT		01
08	0511016156	5/8" X 1.1/2" BOLT		02

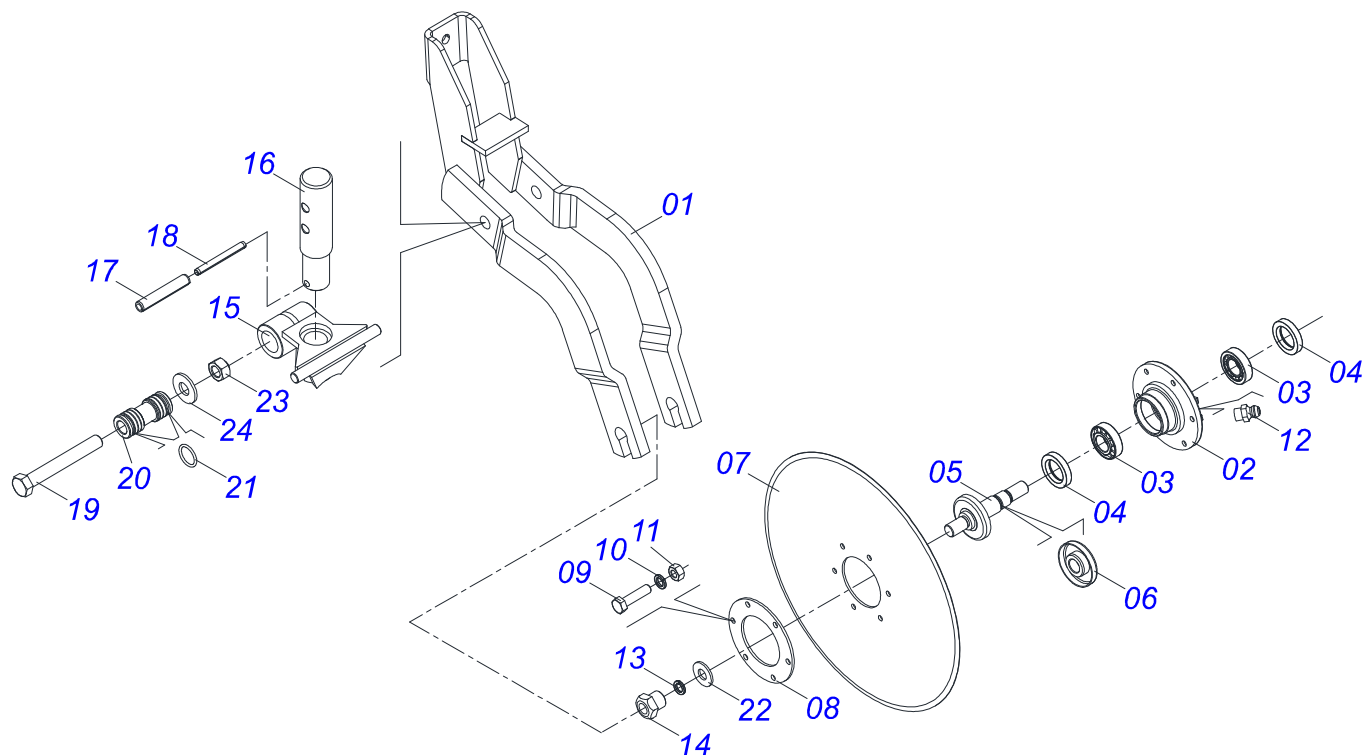 


Item	Code	Description	See page	QT
001	0511063081	DISC BLADE SUPPORT	01	
002	0502011279	DISC HUB	01	
003	0503010215	30205 BEARING	02	
004	0503010213	SEAL 30205	02	
005	0511061647	BLADE DISC AXLE ASSY	01	
006	0501068582	7/8" UNF WITH DUST CLOAK NUT	01	
007	0603023009	16" X 0.2" FLAT PLAIN DISC	01	
008	0501013839	WASHER	01	
009	0503010365	NUT	06	
010	0503011444	SPRING WASHER	06	
011	0503010337	5/16" NUT	06	
012	0503010691	1/4" GREASE FITTING	01	
013	0503011438	SPRING WASHER	02	
014	0521013510	3/4" NUT	02	
015	0511063073	DISC BLADE FIXER	01	
016	0531012999	DISC BLADE FIXER AXLE	01	
017	0503010361	SPRING PIN	01	
018	0503010756	0.2" X 2.4" SPRING PIN	01	
019	0503013185	3/4" X 5-1/2" BOLT	01	
020	0521014321	ARTICULATION ARM REEL	01	
021	0503010046	2-216 N 3006-9B O'RING	02	
022	0511015346	FLAT WASHER	02	
023	0503011255	3/4" LOCK NUT	01	
024	0501010322	FLAT WASHER	01	

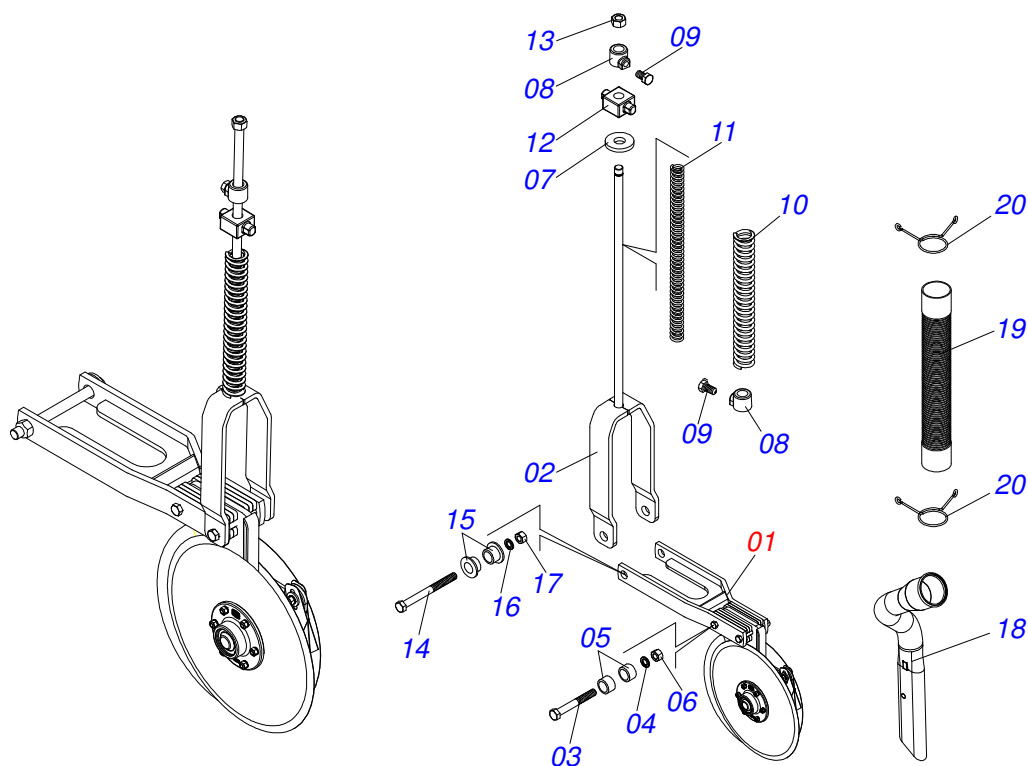 


Item	Code	Description	See page	QT
001	0511057590	RH FERTILIZER ROW ARM		01
002	0521066715	VARAO SPRING ADB PHT4		01
003	0503011411	1/2" X 5-1/2" BOLT		01
004	0511017302	FLAT WASHER		02
005	0521010445	0.53" X 0.75" X 0.45" SLEEVE		02
006	0503011336	1/2" HEX SELF ADJUSTING NUT		01
007	0501013753	FLAT WASHER		01
008	0502040534	SPRING GUIDE BUSHING LOCK		01
009	0501018535	1/2 X 1 BOLT		01
010	0503030609	1"X11.81"X 0.16" COMPRESSION SPRING		01
011	0503030917	1.6"X11.8"X 0.2" COMPRESSION SPRING		01
012	0502011538	SPRING GUIDE		01
013	0503010013	5/8" NUT		01
014	0511016281	3/4" X 8" BOLT		01
015	0521018797	0.7" X 1" X .55" SLEEVE		02
016	0511017232	FLAT WASHER		02
017	0503011255	3/4" LOCK NUT		01
018	0503030391	RIGHT FERTILIZER SOCKET		01
019	0503030408	10 X 2 X 390 HOSE		01
020	0503031076	2" HOSE CLAMP		02

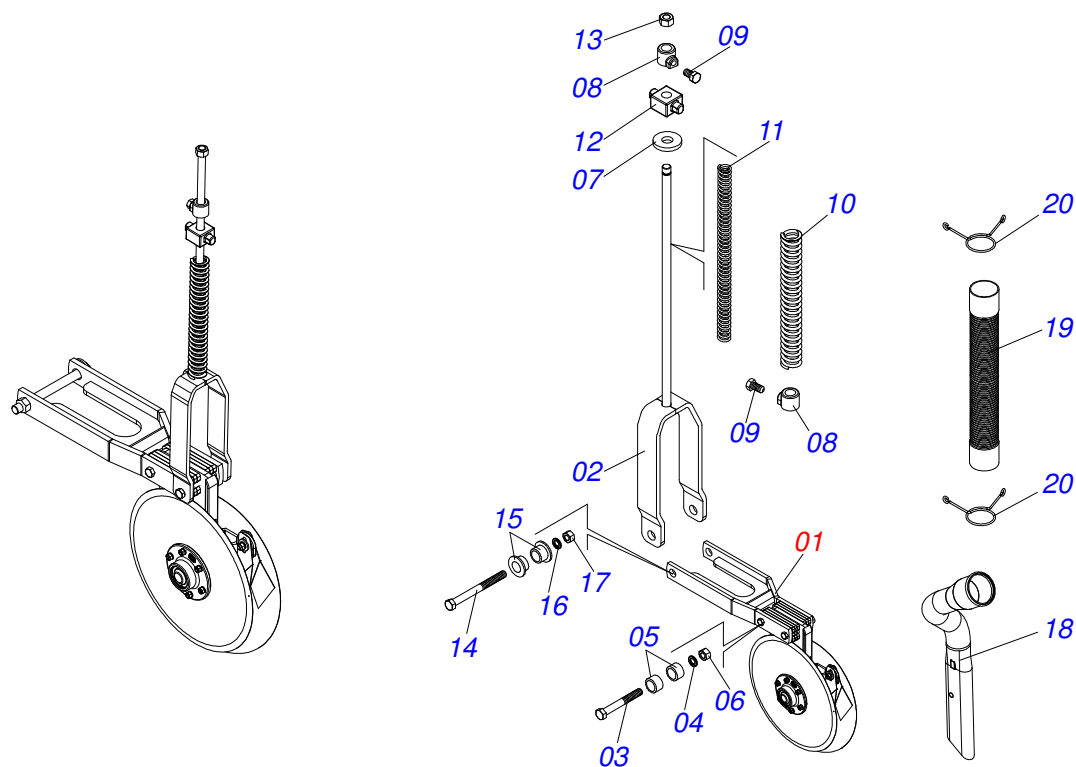 


Item	Code	Description	See page	QT
001	0511057592	LH FERTILIZER ROW ARM		01
002	0521066715	VARAO SPRING ADB PHT4		01
003	0503011411	1/2" X 5-1/2" BOLT		01
004	0511017302	FLAT WASHER		02
005	0521010445	0.53" X 0.75" X 0.45" SLEEVE		02
006	0503011336	1/2" HEX SELF ADJUSTING NUT		01
007	0501013753	FLAT WASHER		01
008	0502040534	SPRING GUIDE BUSHING LOCK		01
009	0501018535	1/2 X 1 BOLT		01
010	0503030609	1"X11.81"X 0.16" COMPRESSION SPRING		01
011	0503030917	1.6"X11.8"X 0.2" COMPRESSION SPRING		01
012	0502011538	SPRING GUIDE		01
013	0503010013	5/8" NUT		01
014	0511016281	3/4" X 8" BOLT		01
015	0521018797	0.7" X 1" X .55" SLEEVE		02
016	0511017232	FLAT WASHER		02
017	0503011255	3/4" LOCK NUT		01
018	0503030392	LEFT FERTILIZER SOCKET		01
019	0503030408	10 X 2 X 390 HOSE		01
020	0503031076	2" HOSE CLAMP		02

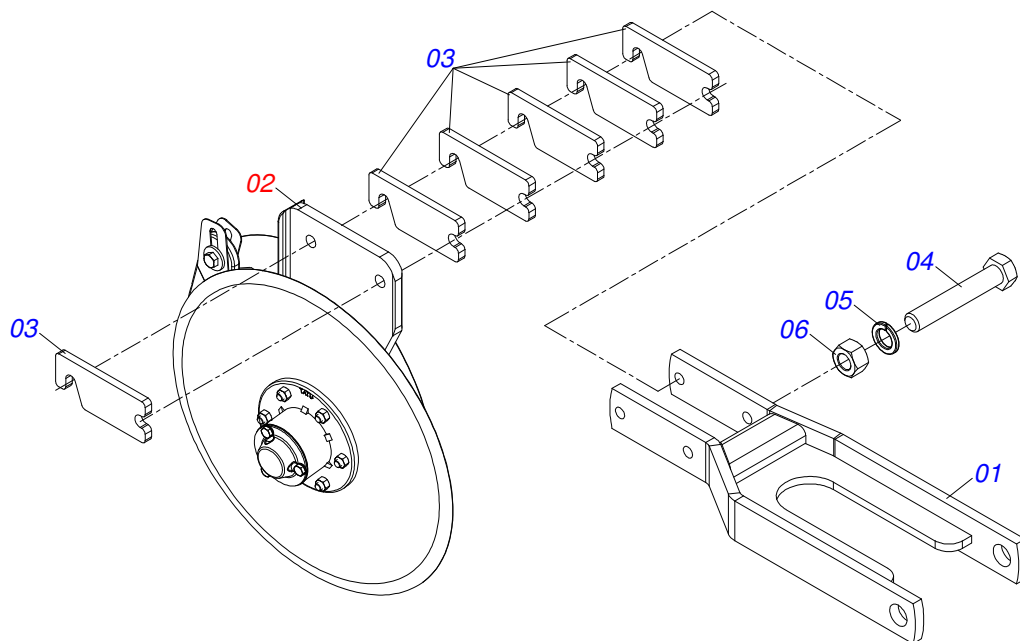 


Item	Code	Description	See page	QT
001	0521063737	FERTILIZER ROW ARM		01
002	0501052976	15 X 15 RIGHT FERT UNAL DOUB-DISC ASSY	48	01
003	0511018662	SPACING PLATE		06
004	0503010706	1/2" X 4.1/2" BOLT		01
005	0503011440	SPRING WASHER		01
006	0503010060	1/2" NUT		01

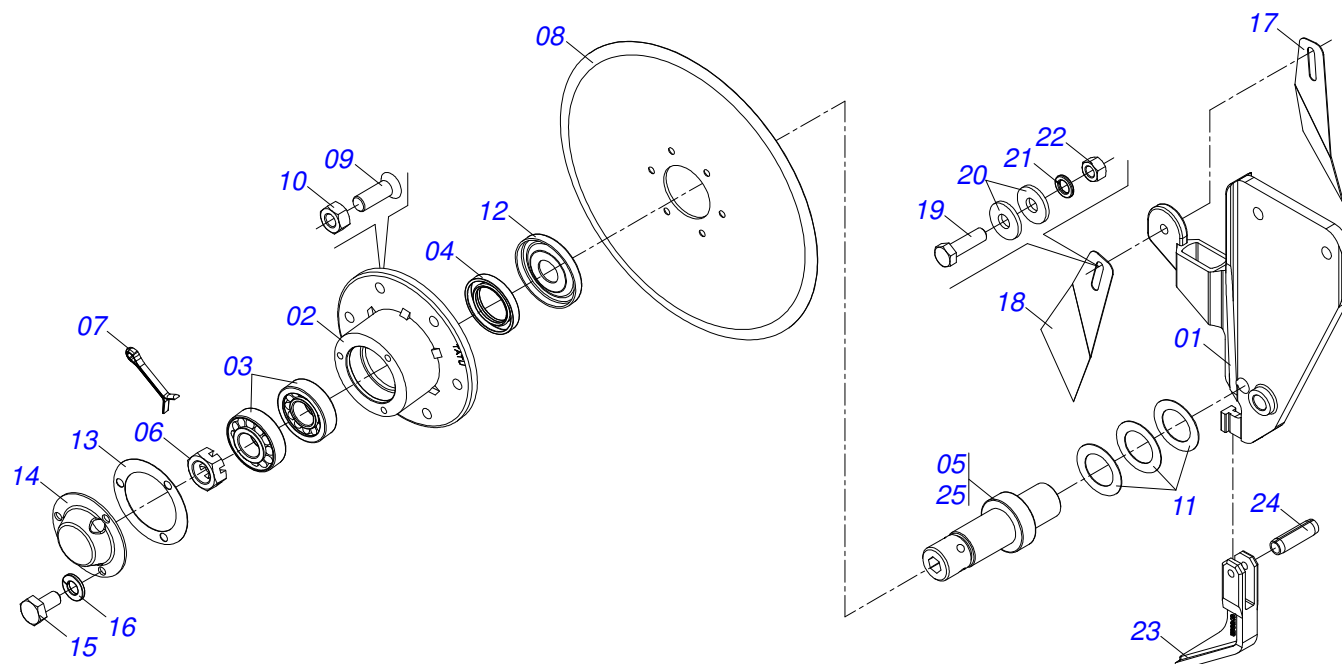 


Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT	01	
02	0502011930	DOUBLE DISC COULTER BOX	02	
03	0503010598	30204 BALL BEARING	04	
04	0503011112	SEAL 02376-BRG	02	
05	0521019148	LEFT DOUBLE DISC HUB	01	
06	0503030282	3/4" CASTLE NUT	02	
07	0503010257	1/8" X 1" COTTERPIN	02	
08	0603022042	13" X 0.12" PLAIN COULTER BLADE	02	
09	0503010546	5/16" X 7/8" BOLT	12	
10	0503010337	5/16" NUT	12	
11	0511015098	FLAT WASHER	06	
12	0511011927	DUST CLOAK	02	
13	0503030757	2.9" X 2" X 0.02" JOINT	02	
14	0521019178	COVER DEPTH	02	
15	0503014729	1/4" UNF X 1/2" BOLT	06	
16	0503011441	SPRING WASHER	06	
17	0501017542	LH DOUBLE DISC SCRAPER	01	
18	0501017541	RH DOUBLE DISC SCRAPER	01	
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
20	0501010984	FLAT WASHER	02	
21	0503011443	SPRING WASHER	01	
22	0503010026	3/8" NUT	01	
23	0502070062	SCRAPER	01	
24	0503011402	0.2" X 0.8" SPRING PIN	01	
25	0521019154	RIGHT DOUB DISC HUB	01	

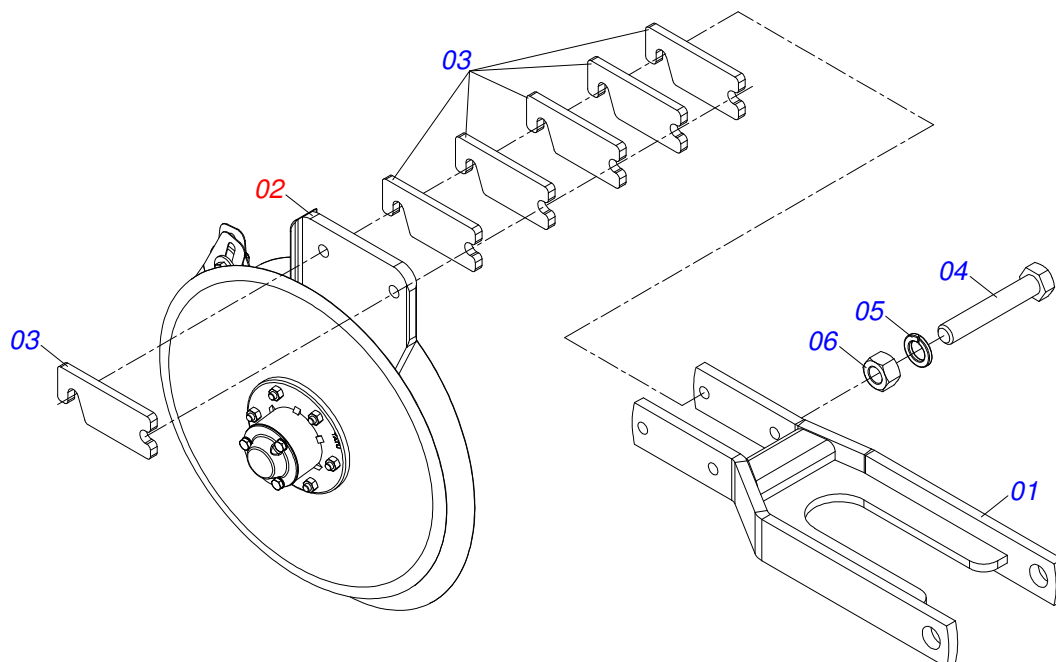 

Item	Code	Description	See page	QT
001	0521063737	FERTILIZER ROW ARM		01
002	0501052977	DDD LEFT FERTILIZER 15 X 15 ASSY	50	01
003	0511018662	SPACING PLATE		06
004	0503010706	1/2" X 4.1/2" BOLT		01
005	0503011440	SPRING WASHER		01
006	0503010060	1/2" NUT		01

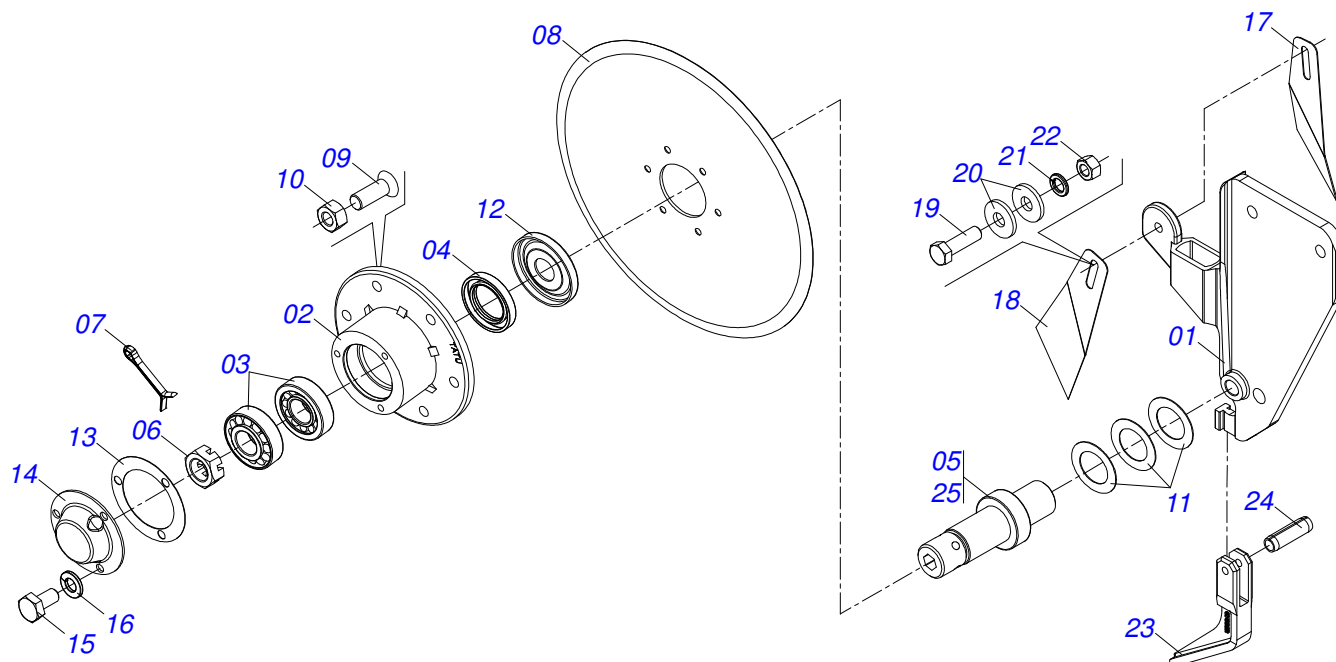 


Item	Code	Description	See page	QT
01	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT	01	
02	0502011930	DOUBLE DISC COULTER BOX	02	
03	0503010598	30204 BALL BEARING	04	
04	0503011112	SEAL 02376-BRG	02	
05	0521019148	LEFT DOUBLE DISC HUB	01	
06	0503030282	3/4" CASTLE NUT	02	
07	0503010257	1/8" X 1" COTTERPIN	02	
08	0603022042	13" X 0.12" PLAIN COULTER BLADE	02	
09	0503010546	5/16" X 7/8" BOLT	12	
10	0503010337	5/16" NUT	12	
11	0511015098	FLAT WASHER	06	
12	0511011927	DUST CLOAK	02	
13	0503030757	2.9" X 2" X 0.02" JOINT	02	
14	0521019178	COVER DEPTH	02	
15	0503014729	1/4" UNF X 1/2" BOLT	06	
16	0503011441	SPRING WASHER	06	
17	0501017542	LH DOUBLE DISC SCRAPER	01	
18	0501017541	RH DOUBLE DISC SCRAPER	01	
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
20	0501010984	FLAT WASHER	02	
21	0503011443	SPRING WASHER	01	
22	0503010026	3/8" NUT	01	
23	0502070062	SCRAPER	01	
24	0503011402	0.2" X 0.8" SPRING PIN	01	
25	0521019154	RIGHT DOUB DISC HUB	01	

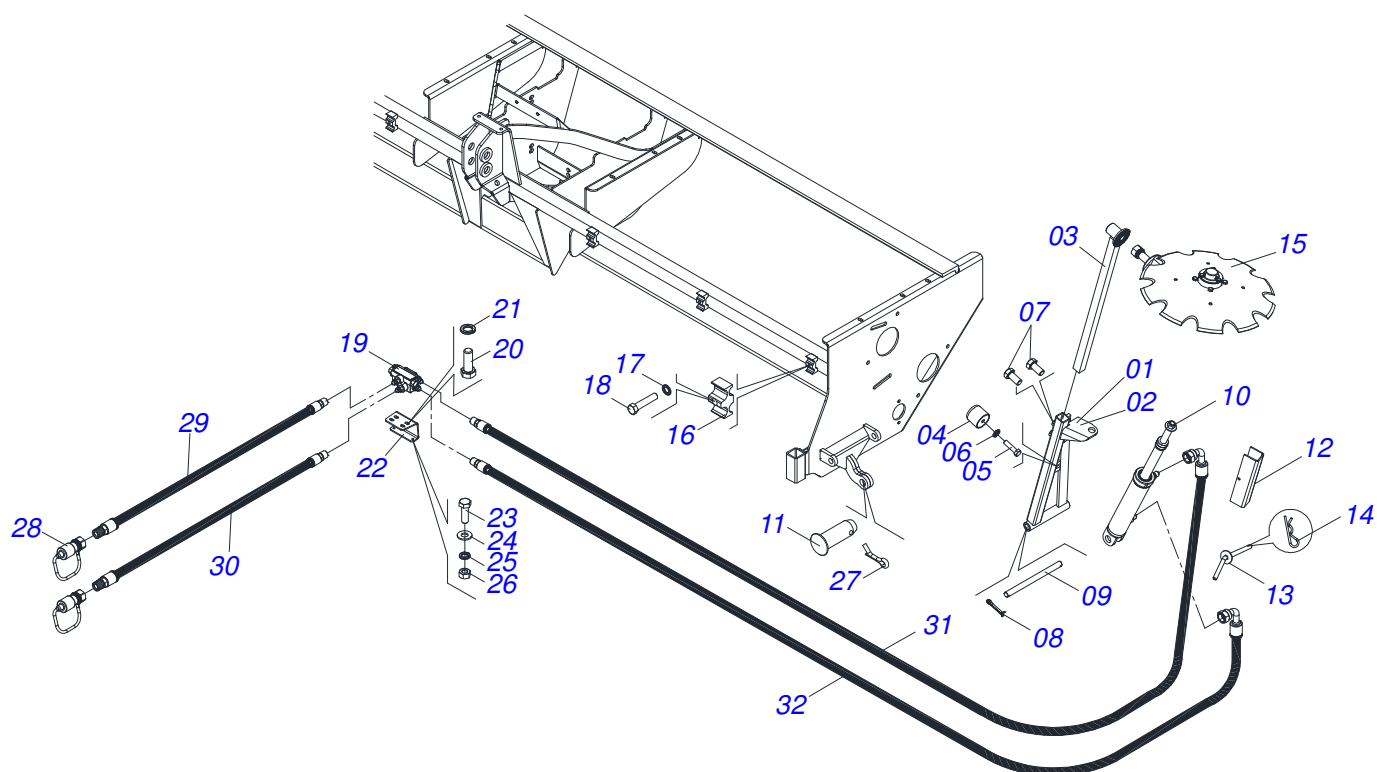 


Item	Code	Description	See page	QT
001	0521062818	BRACO LEFT MARKER LINE PHT4		01
002	0521062819	BRACO RIGHT MARKER LINE PHT4		01
003	0501069307	ROW MARKER ARM		02
004	0503011070	BEATER		02
005	0503010740	1/2" X 2" BOLT		02
006	0503010019	1/2" SPRING WASHER		02
007	0503010834	1/2 X 1 BOLT		04
008	0503010577	3/16" X 1-1/4" COTTERPIN		02
009	0531012400	COUPLING SHAFT		02
010	0521040155	HYDRAULIC CYLINDER 31,75X50,8X365X595	6	02
011	0521010571	COUPLING SHAFT		02
012	0561019695	PHT4 SUPREME MARKET TRANSMITTER		02
013	0501068994	0.3" X 3.1" LOCK PIN		02
014	0503030168	HAIR PIN		02
015	0501050633	MARKER DISC ASSY LINE	8	01
016	0502012702	BODY SUPPORT CLAMP		06
017	0503010180	7/16" SPRING WASHER		06
018	0503012555	7/16" X 2" BOLT		06
019	0501054649	SEQUENTIAL VALVE ASSY	4	01
020	0503010237	3/8" X 1" BOLT		02
021	0503010025	3/8 SPRING WASHER		02
022	0571010413	VALVE SUPPORT		01
023	0503010371	5/16" X 1" BOLT		02
024	0501010694	FLAT WASHER		02
025	0503010179	SPRING WASHER		02
026	0503010337	5/16" NUT		02
027	0503010571	1/4" X 1.1/2 COTTERPIN		02
028	0501053834	MALE QUICK COUPLING AGRICULTURAL WITH COVER - 1/2 NPT		02
029	0521052313	HOSE 3/8 X 1500 TR-TM PURPLE / BLUE		01
029A	0501080852	3/8" X 1500 TR-TM HOSE		01
029B	0503034491	HYDRAULIC HOSE HANDLE (PURPLE)		01


Item	Code	Description	See page	QT
029C	0503034494	HYDRAULIC HOSE DEPTH (BLUE)		01
029D	0503018952	PLASTIC BOLT		06
030	0521052313	HOSE 3/8 X 1500 TR-TM PURPLE / BLUE		01
030A	0501080852	3/8" X 1500 TR-TM HOSE		01
030B	0503034491	HYDRAULIC HOSE HANDLE (PURPLE)		01
030C	0503034494	HYDRAULIC HOSE DEPTH (BLUE)		01
030D	0503018952	PLASTIC BOLT		06
031	0501080469	3/8" X 98.42" TR-TR HOSE ASSY		02
032	0501080412	3/8" X 90.55" TR-TC HOSE		02

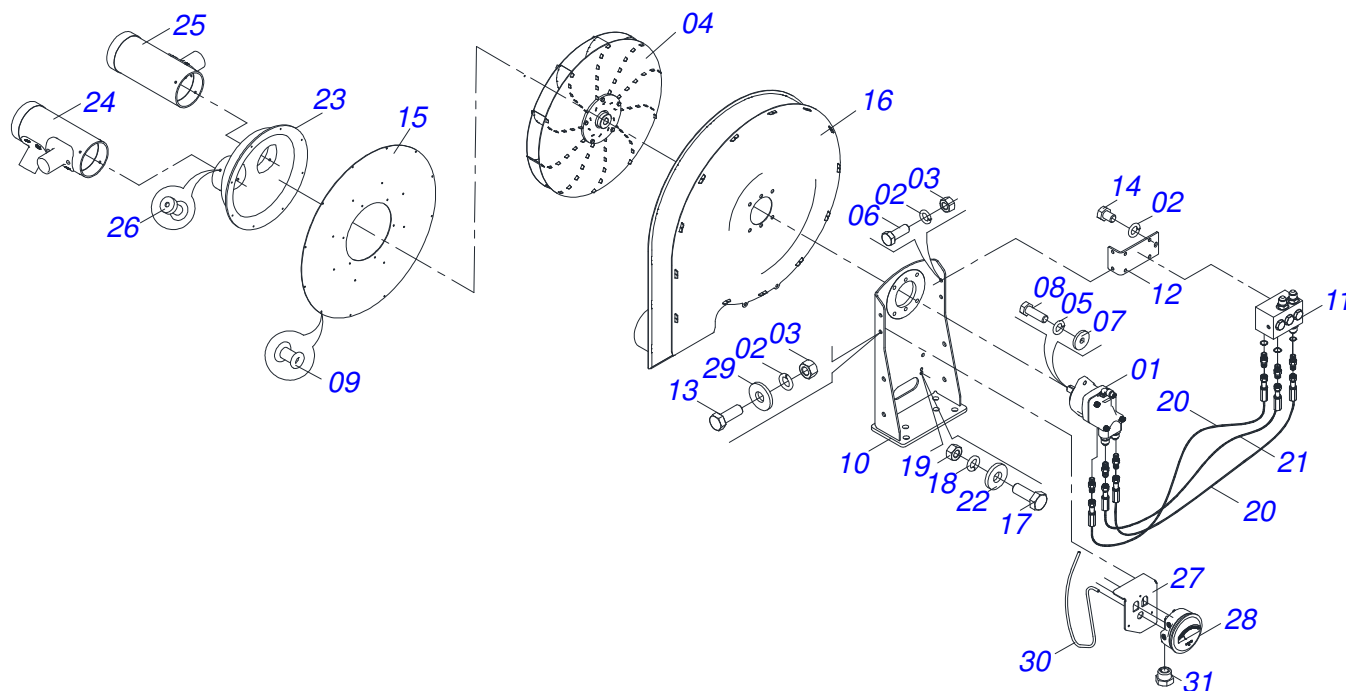 

Item	Code	Description	See page	QT
001	0501054983	NIPPLE HIDRAULIC MOTOR		01
002	0503010025	3/8 SPRING WASHER		12
003	0503010026	3/8" NUT		10
004	0521044613	FAN 480 X 50 S (HIDRAULIC)		01
005	0503010143	SPRING WASHER		01
006	0503010849	3/8" X 1-1/2" BOLT		02
007	0531018764	FLAT WASHER		01
008	0503011104	M6 X 1" BOLT		01
009	0503012722	0.16" X 0.4" BLIND RIVET		20
010	0521065858	TURBIN SUPPORT		01
011	0501054577	BLOCK COMMAND WITH NIPLES HYDRAULIC TURBINE		01
012	0561010634	VALVE SUPPORT ASSY		01
013	0503010237	3/8" X 1" BOLT		08
014	0503010206	3/8" X 1/2" BOLT		02
015	0571018577	COVER SNAIL TURBINE		01
016	0521066237	SNAIL MECHANICAL TURBINE HIDRAULIC		01
017	0503010358	5/16" X 5/8" BOLT		02
018	0503010179	SPRING WASHER		02
019	0503010337	5/16" NUT		02
020	0501080125	HOSE 1/2 X 500 TR TR		02
021	0501080635	3/8" X 19" TR-TR HOSE		01
022	0521018517	FLAT WASHER		02
023	0571011731	CONECTOR CENTER		01
024	0511051733	AIR DISTRIBUTOR		01
025	0511051994	LH AIR DISTRIBUTOR		01
026	0503012856	REBITE POP		08
027	0581013480	SUPPORT VACUUM		01
028	0503013584	VACUUM GAUGE		01
029	0501010984	FLAT WASHER		02
030	0503015062	TUBE		01
031	0581014411	BREATHE		01

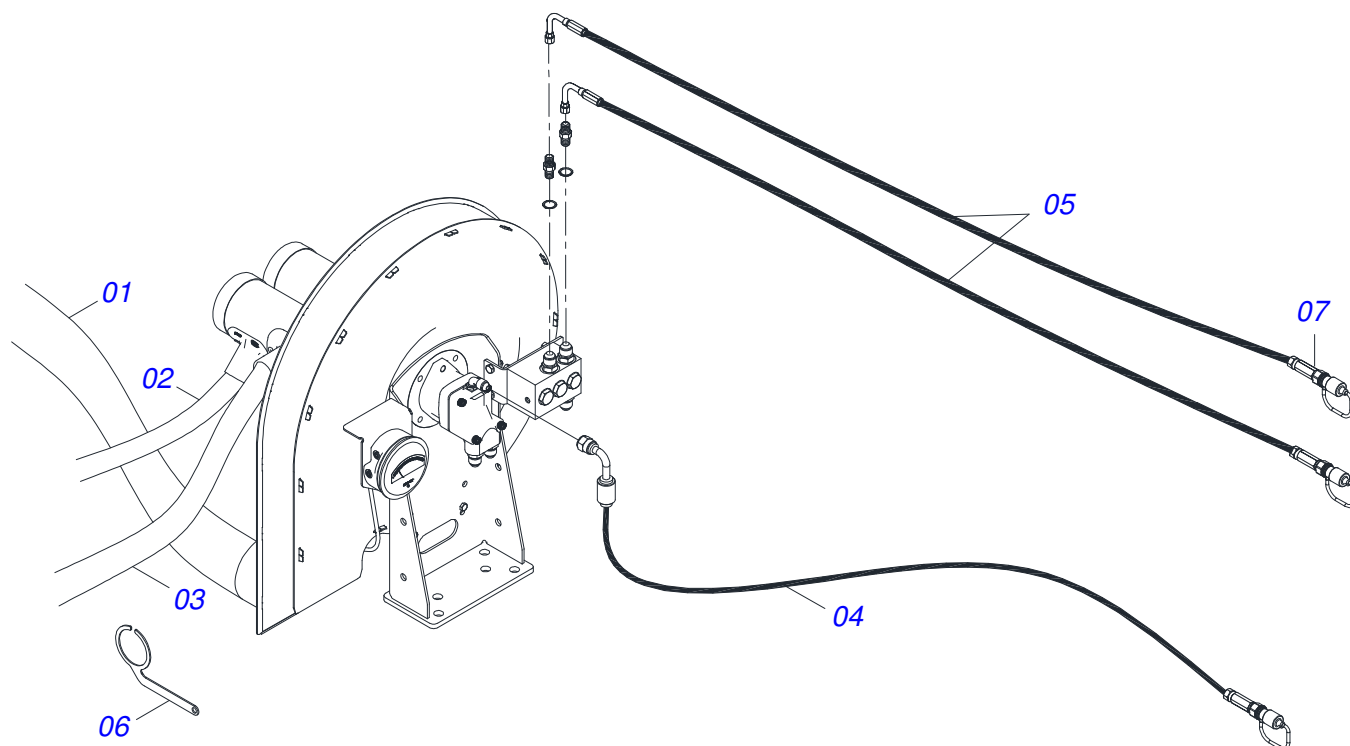 

Item	Code	Description	See page	QT
01	0571011448	AIR CONDUCTOR		01
02	0521010647	HOSE		01
03	0521018571	HOSE		01
04	0501080652	3/8" X 78" TC-TM HOSE ASSY		01
05	0501080630	1/2" X 78" TC-TM HOSE ASSY		02
06	0571011434	HOSE ASSY FIXER SUPPORT OUTPUT AR		01
07	0501053834	MALE QUICK COUPLING AGRICULTURAL WITH COVER - 1/2 NPT		03

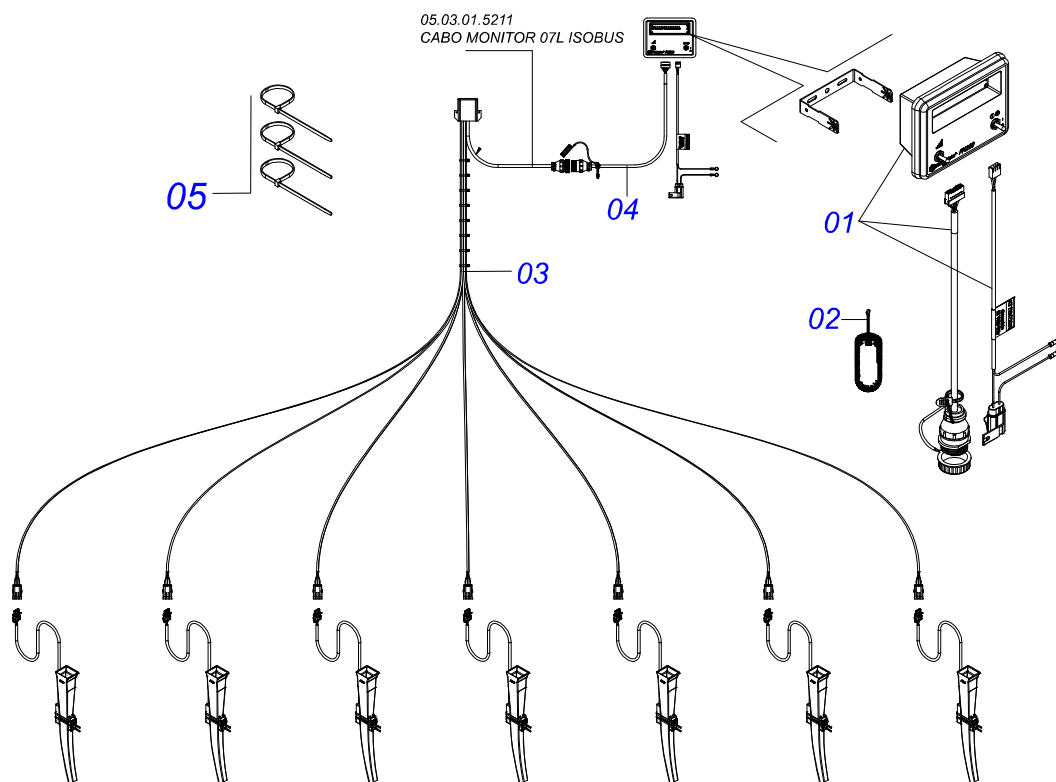 

Item	Code	Description	See page	QT
001	0503016491	MONITOR PLANT PM100		01
002	0503017031	CLEANING BRUSH		01
003	0503016553	7 ROW SIMPLE MONITOR CABLE		01
004	0503018418	UNIQUE CABLE PM 100		01
005	0503016033	4,8 X 1,3 X 300 MM NYLON CLAMP		**

This image shows a single page from a notebook or ledger. The page is white with rounded corners and features horizontal ruling lines spaced evenly down its length. There are no margins, text, or other markings on the page.





MARCHESAN IMPLEMENTOS E MÁQUINAS AGRÍCOLAS TATU S.A.

AV. Marchesan, 1979 - Post office box, 131 - CEP 15994-900 - Matão - SP - Brazil

Phone +55 16.3382-8282

(FAX Parts) + 55 16.3382. 8297 - (Export) + 55 16.3382.1003

e.mail: tatu@marchesan.com.br www.marchesan.com.br

Technical Publications: Elaboration

MARINA PEREZ NIZA

Technical Publications: Revision

JOSÉ DOMINGOS GASPARI

Contact Catálogo:

E-mail = jgaspari@marchesan.com.br

**ORIGINAL PARTS
TATU**

