

ROW CROP PLANTERS

PST DUO FLEX TITANIUM - FRAME 4790 - CSU - DOUBLE HEAD

Code: 0501092096
Series: S-0119
Revision: 00
Date Revision: JULHO/2021

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0521049744	CABEÇALHO DUPLO COM MARCADOR HIDRAULICO
0111240433	PST DUO FLEX TITANIUM 4790/11E450 DIREITO - 0111240433
0111240434	PST DUO FLEX TITANIUM 4790/11E450 ESQUERDO - 0111240434

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.

INDEX

0909098724	PST DUO FLEX TITANIUM WITH DOUBLE HEAD	1
0521049744	DOUBLE HEAD WITH HYDRAULIC MARKER	2
0909098725	PST DUO FLEX TITANIUM 4790/11E450 RIGHT - 0111240433	3
0909098726	PST DUO FLEX TITANIUM 4790/11E450 LEFT - 0111240434	4
0521057014	DOUBLE HEAD SEMI MOUNTED HYDRAULIC MARKER	5
0501053835	FEMALE QUICK COUPLER	6
0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	7
0501054694	FLOW DIVIDING VALVE ASSY	8
0503062157	HEADER JACK	9
0501054061	SEQUENCE VALVE WITH NIPPLES	10
0501054863	WELL AND TIRE ASSY	11
0503060414	WHEEL AND TIRE	12
0501051799	STUB SHAFT & HUB ASSY	13
0521025972	BOX WITH COMPONENTS DOUBLE HEAD HYDRAULIC MARKER	14
0521053756	DOUBLE HEAD ARTICULATION ASSEMBLY	15
0511053179	TRACTOR HITCH AXLE	16
0511056409	TRACTOR HITCH	17
0511056736	HOSE SUPPORT	18
0501054862	AXIS LOCK RODE ASSY	19
0909098729	HYDRAULIC MARKER ASSY DOUBLE HEAD	20
0501050633	MARKER DISC ASSY LINE	21
0511053904	DISC LINE MARKER	22
0511058431	HYDRAULIC CYLINDER	23
0909098730	HYDRAULIC CIRCUIT DOUBLE HEAD HYDRAULIC MARKER	24
0521056828	FRAME WITH ARTICULATION RIGHT MACHINE 4790	25
0521056830	RIGHT FRAME WITH ROUND AXLE 4790 RIGHT MACHINE	26
0521056831	LEFT FRAME WITH ROUND AXLE 4790 RIGHT MACHINE	27
0511058667	SPRING FLOW ENSEMBLY	28
0521055229	WHEELED WITH 655 DRIFT SPRING WITH TRANSMISSION	29
0521055231	655 WHEELED SUPPORT WITH TRANSMISSION	30
0501058241	TENSIONER CHAIN SUPPORT	31
0521055232	WHEEL WITH PNEU	32
0503062159	WHEEL	33
0521055233	WHEELED TRANSMISSION WITHOUT TIRE	34
0521055234	WHEELED FASTENER	35
0521055236	INTERMEDIARY CURRENT STRETCHER	36
0521055237	WHEEL FIXED CURRENT STRETCHER	37
0521055235	WHEEL MOBILE CURRENT STRETCHER	38
0521054561	CYLINDER ASSEMBLY	39
0511058406	HYDRAULIC CYLINDER	40
0511056742	ASSY SYSTEM HYDRAULIC 4880/5720/5950	41
0909098717	HEADER ASSY	42
0511055096	TRACTOR HITCH	43
0521053310	LEFT EXTENSION HEADER 36.00 - 4880/5720/5950	44
0521053311	RIGHT EXTENSOR HEAD 36,00 - 4880/5720/5950	45
0511052311	3 POINT TURNBUCKLE	46
0521056834	SILO FERTILIZER ASSY 4790 RIGHT MACHINE	47
0521056836	SILO SUPPORT FERTILIZER RIGHT WITH DISTRIBUTOR 4790 RIGHT MACHINE	48
0521056837	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 4790 RIGHT MACHINE	49
0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	50
0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51
0501053788	Q3/4" FASTENER AXLE ASSY	52



MARCHESAN

INDEX


0909095187	ASSEMBLY TRANSMISSION 4880/5340/5950/6350/6850	53
0501052560	AXLE MOTOR SLOW-MOVING ASSY	54
0511051434	TRANSMISSION DRIVING ASSY	55
0511047069	SIDE TRANSMISSION DRIVING	56
0511047070	LH SIDE TRANSMISSION DRIVING	57
0521043316	RIGHT GEAR BOX ASSY	58
0521043317	LEFT GEAR BOX ASSY	59
0501058212	SEMI MOUNTED RIGHT CHANGE	60
0501058213	LH GEAR BOX	61
0511059266	CLOSED BEARING	62
0501056271	BEARING CLOSED	63
0501056443	BEARING ASSY GEAR BOX	64
0501056444	BEARING WITH ROLLING	65
0501048790	AXLE WITH LINK ASSY	66
0501054655	CHAIN TENSIONER ASSY	67
0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	68
0521056841	PLATFORMS 4790 RIGHT MACHINE ASSY	69
0501055112	MICRO GRANULATED CHAIN TENSIONER	70
0521055217	LOWER CURRENT STRETCH	71
0501058254	UPPER SEED CHAIN TENSIONER	72
0521055216	BEARING WITH GEAR	73
0521055218	BEARING GEAR WITH DOUBLE	74
0521055214	BEARING GEAR WITH	75
0521055215	DOUBLE TRANSMISSION BEARING	76
0511054363	CHAIN TENSIONER	77
0521056843	HANDRAIL ASSEMBLY 4790	78
0511054971	RESTING ASSEMBLY	79
0511056536	ASSEMBLY LADDER	80
0511058997	ASSEMBLY CSU	81
0511058996	ASSEMBLY CSU	82
0511057690	SEED CONDUCTOR 3 ARTICULATED ASSY CSU	83
0521052687	RH SUPPORT TOWER SILO	84
0521051931	LH SUPPORT TOWER SILO	85
0521051927	TOWER SUPPORT HOPPER	86
0521054580	REAR LIGHTING ASSEMBLY 4880	87
0521052792	MOUNTED REAR LIGHT	88
0521054585	ASSY MANUAL DOOR	89
0909098731	ASSY SEED / FERTILIZER LINE	90
0521053227	LEFT SHORT SEED ROW FRONT	91
0521053230	SHORT SEED ROW FRONT	92
0521053228	LEFT SHORT SEED ROW FRONT	93
0521053229	SHORT SEED ROW FRONT	94
0521054737	FRONT SEMI MOUNTED LINE LONG LEFT SEED WITHOUT LUBRICATION	95
0521054736	FRONT SEMI MOUNTED ROW LONG RIGHT SEED LINE WITHOUT LUBRICATION	96
0521055213	LINE BEARING SEED	97
0521055223	SEED LINE TRANSMISSION BOX	98
0511055260	SEED ROW CHAIN TENSIONER	99
0521055226	BEARING WITH AXLE JOINT	100
0501059326	UNIVERSAL JOINT AXLE	101
0521055219	BEARING WITH GEAR 17Z HEX 5/8	102
0521055220	BEARING FRONT LINE SEED	103
0511059333	SEMI-ASSEMBLED MECHANICAL FRAME	104
0511059334	BEARING WITH LONG FRONT AXLE	105




MARCHESAN

INDEX


0511058143	UNIVERSAL JOINT AXLE	106
0521054771	LEFT REAR SEAL LINE WITHOUT LUBRICATION	107
0521054770	REAR RIGHT SEED LINE WITHOUT LUBRICATION	108
0521054818	BASE 5/8 FIXATION WITHOUT ASSY LUBRICATION	109
0521054763	DDD LEFT SEED	110
0511052302	LH SUPPORT DDD GUIDE	111
0521054762	RIGHT DDD SEED	112
0511052301	SUPPORT DDD 15 RIGHT	113
0521054761	LEFT LOW CUBE	114
0521054760	DOWN LOW CUBE	115
0521055053	DEEP WHEEL / COMPACTOR SYSTEM	116
0521055065	ASSY DEPTH / COMPACTOR	117
0521055033	COMPACTADOR BODY	118
0521055054	LEFT ARM WITH SLEEVE	119
0521055066	RIGHT ARM WITH GLOVE	120
0521055068	RAYED WHEEL CENTER CLOSED	121
0521055055	BOX WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	122
0521054990	LEFT COMPACTOR WHEEL	123
0521055017	RIGHT COMPACTOR WHEEL	124
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	125
0521054811	FERTILIZER SHORT LINE	126
0521053231	DPL 20 SHORT LINE WITHOUT LUBRICATION CONICAL BEARING	127
0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	128
0521053697	CUTTING DISK BOX	129
0521054906	SPRING ASSY FERTILIZER	130
0521054812	LONG FERTILIZER LINE	131
0521053232	DPL 20 LONG LINE WITHOUT LUBRICATION CONICAL BEARING	132
0521054769	LEFT FERTILIZER WITH SUPPORT	133
0521054765	DDD LEFT FERTILIZER	134
0521054768	DDD RIGHT FERTILIZER WITH SUPPORT	135
0521054764	DDD RIGHT FERTILIZER	136
0521050096	SEED DEPOSIT SYSTEM (CSU)	137
0511052058	SEED SYSTEM TITANIUM	138
0511052024	FAST CLOSING SET	139
0521053946	SCARING ROD	140
0521050525	FIXER FERTILIZER CONDUCTOR	141
0521054181	TOOL BOX ASSEMBLY	142
0521054525	CONTAINER WATER TANK	143
0909098718	ASSY HEX AXLE	144
0521056983	SEMI MOUNTED HYDRAULIC MARKER 4880	145
0511058449	HYDRAULIC CYLINDER	146
0501054649	SEQUENTIAL VALVE ASSY	147
0521055204	LIGNE DE DISQUE MARKER	148
0521057015	HYDRAULIC MARKER LABEL ASSY	149
0521056829	JOINT FRAME 4790 LEFT MACHINE	150
0521056832	RIGHT FRAME WITH ROUND AXLE 4790 LEFT MACHINE	151
0521056833	LEFT FRAME WITH ROUND AXLE 4790 LEFT MACHINE	152
0521056835	SILO FERTILIZER ASSY 4790 LEFT MACHINE	153
0521056838	SILO SUPPORT FERTILIZER RIGHT WITH DISTRIBUTOR 4790 LEFT MACHINE	154
0521056840	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 4790 LEFT MACHINE	155
0521056842	PLATFORMS 4790 LEFT MACHINE ASSY	156

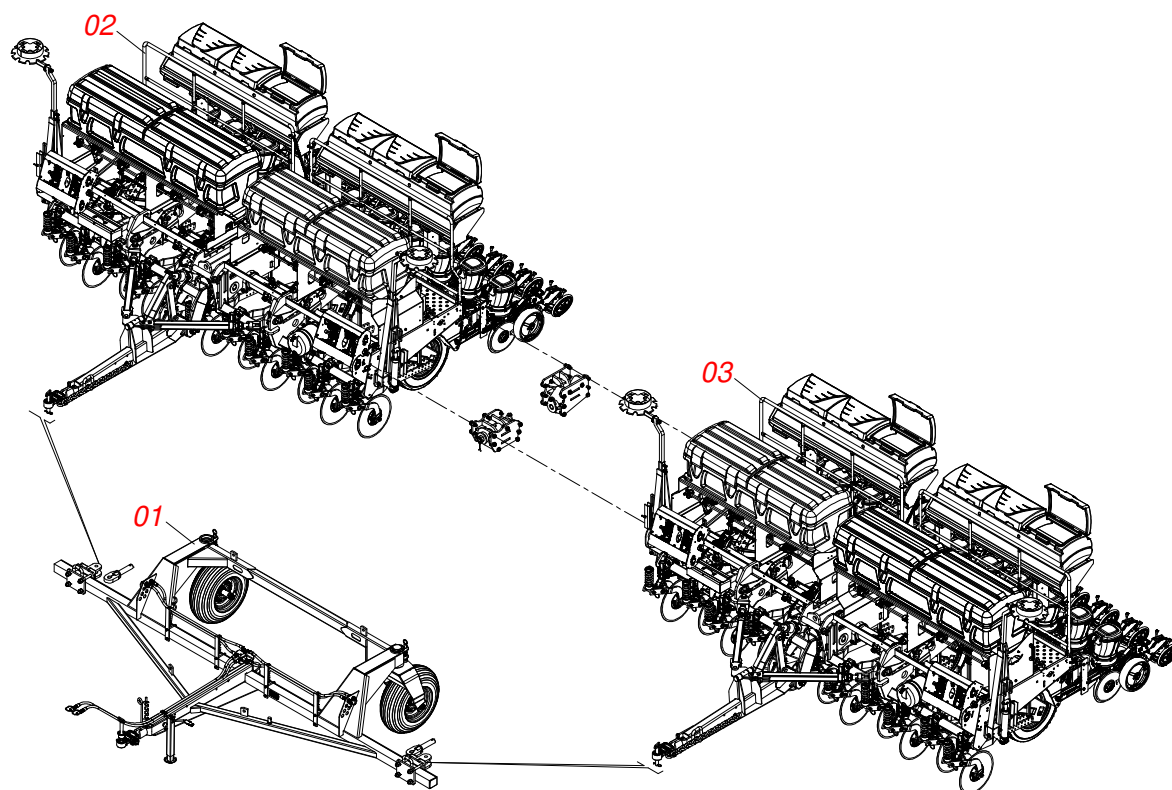

Item	Code	Description	See page	QT
01	0521049744	DOUBLE HEAD WITH HYDRAULIC MARKER	2	01
02	0909098725	PST DUO FLEX TITANIUM 4790/11E450 RIGHT - 3 0111240433		01
03	0909098726	PST DUO FLEX TITANIUM 4790/11E450 LEFT - 4 0111240434		01

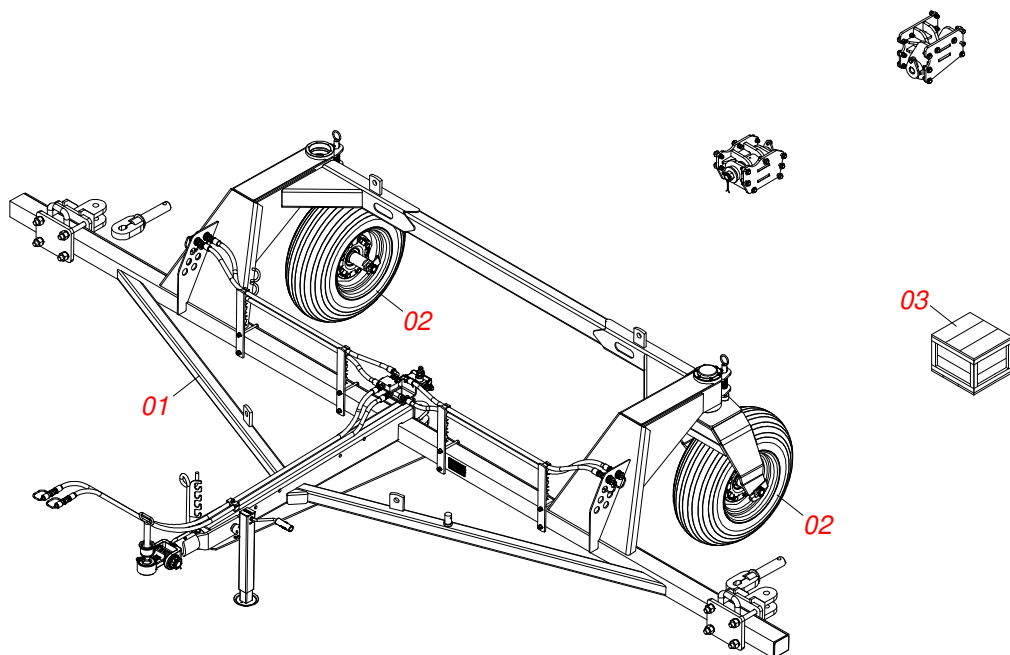


Item	Code	Description	See page	QT
01	0521057014	DOUBLE HEAD SEMI MOUNTED HYDRAULIC MARKER	5	01
02	0501054863	WELL AND TIRE ASSY	11	02
03	0521025972	BOX WITH COMPONENTS DOUBLE HEAD HYDRAULIC MARKER	14	01

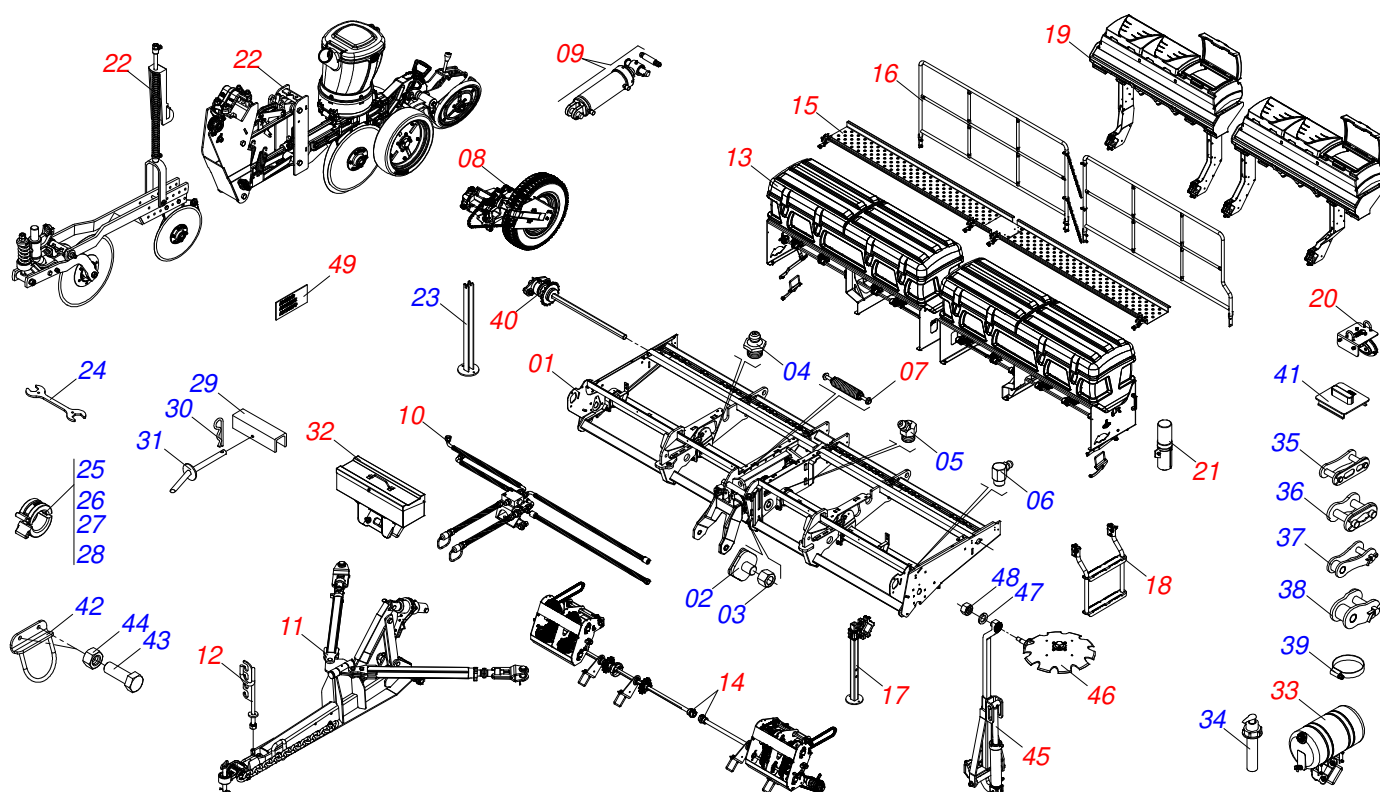


Item	Code	Description	See page	QT
01	0521056828	FRAME WITH ARTICULATION RIGHT MACHINE 4790	25	01
02	0521064285	LOCK LOWER FRAME		01
03	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		01
04	0503010002	1800 GREASE FITTING		01
05	0503010003	1845 GREASE FITTING		05
06	0503010004	1890 GREASE FITTING		02
07	0511058667	SPRING FLOW ENSEMBLY	28	01
08	0521055229	WHEELED WITH 655 DRIFT SPRING WITH TRANSMISSION	29	04
09	0521054561	CYLINDER ASSEMBLY	39	01
10	0511056742	ASSY SYSTEM HYDRAULIC 4880/5720/5950	41	01
11	0909098717	HEADER ASSY	42	01
12	0511056736	HOSE SUPPORT	18	01
13	0521056834	SILO FERTILIZER ASSY 4790 RIGHT MACHINE	47	01
14	0909095187	ASSEMBLY TRANSMISSION 4880/5340/5950/6350/6850	53	01
15	0521056841	PLATFORMS 4790 RIGHT MACHINE ASSY	69	01
16	0521056843	HANDRAIL ASSEMBLY 4790	78	01
17	0511054971	RESTING ASSEMBLY	79	04
18	0511056536	ASSEMBLY LADDER	80	02
19	0511058997	ASSEMBLY CSU	81	01
20	0521054580	REAR LIGHTING ASSEMBLY 4880	87	01
21	0521054585	ASSY MANUAL DOOR	89	01
22	0909098731	ASSY SEED / FERTILIZER LINE	90	01
23	0501065677	STRUT		02
24	0541015451	FIXED KEY 2.3/8 X 2.3/4		01
25	0501047895	ROD STOP		02
26	0501047885	ROD STOP		02
27	0501047886	ROD STOP		02
28	0501047887	ROD STOP		02
29	0521013022	TRANSPORT LOCK		02

Item	Code	Description	See page	QT
30	0503030168	HAIR PIN		02
31	0501068994	0.3" X 3.1" LOCK PIN		02
32	0521054181	TOOL BOX ASSEMBLY	142	01
33	0521054525	CONTAINER WATER TANK	143	01
34	0503019262	SOAP DISH VACUUM		01
35	0503010780	N-2050 AMENDMENT		02
36	0503011750	AMENDMENT WITH LOCK		06
37	0503011751	REDUCTION		06
38	0503010951	REDUCTION		04
39	0503010246	CLAMP		11
40	0909098718	ASSY HEX AXLE	144	01
41	0503032624	SILO FERTILIZER GUTTER		06
42	0521065613	HOSE HOLDER		01
43	0503011953	5/16" X 1" BOLT		02
44	0503013816	5/16" LOCKNUT		02
45	0521056983	SEMI MOUNTED HYDRAULIC MARKER 4880	145	01
46	0521055204	LIGNE DE DISQUE MARKER	148	02
47	0503010023	3/4" SPRING WASHER		02
48	0503010014	3/4" NUT		02
49	0521057015	HYDRAULIC MARKER LABEL ASSY	149	01

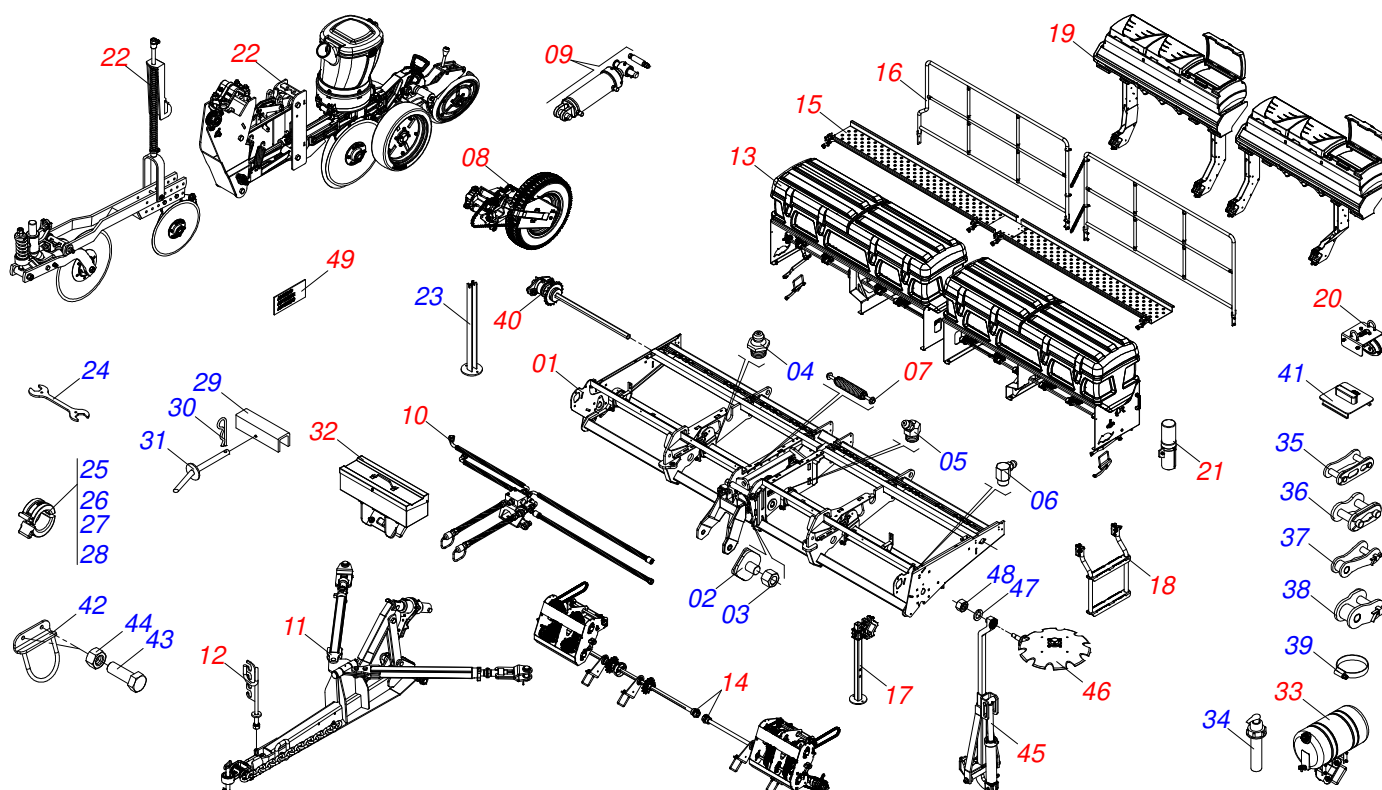


Item	Code	Description	See page	QT
01	0521056829	JOINT FRAME 4790 LEFT MACHINE	150	01
02	0521064285	LOCK LOWER FRAME		01
03	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		01
04	0503010002	1800 GREASE FITTING		01
05	0503010003	1845 GREASE FITTING		05
06	0503010004	1890 GREASE FITTING		02
07	0511058667	SPRING FLOW ENSEMBLY	28	01
08	0521055229	WHEELED WITH 655 DRIFT SPRING WITH 29 TRANSMISSION	29	04
09	0521054561	CYLINDER ASSEMBLY	39	01
10	0511056742	ASSY SYSTEM HYDRAULIC 4880/5720/5950	41	01
11	0909098717	HEADER ASSY	42	01
12	0511056736	HOSE SUPPORT	18	01
13	0521056835	SILO FERTILIZER ASSY 4790 LEFT MACHINE	153	01
14	0909095187	ASSEMBLY TRANSMISSION 4880/5340/5950/6350/6850	53	01
15	0521056842	PLATFORMS 4790 LEFT MACHINE ASSY	156	01
16	0521056843	HANDRAIL ASSEMBLY 4790	78	01
17	0511054971	RESTING ASSEMBLY	79	04
18	0511056536	ASSEMBLY LADDER	80	02
19	0511058997	ASSEMBLY CSU	81	01
20	0521054580	REAR LIGHTING ASSEMBLY 4880	87	01
21	0521054585	ASSY MANUAL DOOR	89	01
22	0909098731	ASSY SEED / FERTILIZER LINE	90	01
23	0501065677	STRUT		02
24	0541015451	FIXED KEY 2.3/8 X 2.3/4		01
25	0501047895	ROD STOP		02
26	0501047885	ROD STOP		02
27	0501047886	ROD STOP		02
28	0501047887	ROD STOP		02
29	0521013022	TRANSPORT LOCK		02
30	0503030168	HAIR PIN		02

Item	Code	Description	See page	QT
31	0501068994	0.3" X 3.1" LOCK PIN		02
32	0521054181	TOOL BOX ASSEMBLY	142	01
33	0521054525	CONTAINER WATER TANK	143	01
34	0503019262	SOAP DISH VACUUM		01
35	0503010780	N-2050 AMENDMENT		02
36	0503011750	AMENDMENT WITH LOCK		06
37	0503011751	REDUCTION		06
38	0503010951	REDUCTION		04
39	0503010246	CLAMP		11
40	0909098718	ASSY HEX AXLE	144	01
41	0503032624	SILO FERTILIZER GUTTER		06
42	0521065613	HOSE HOLDER		01
43	0503011953	5/16" X 1" BOLT		02
44	0503013816	5/16" LOCKNUT		02
45	0521056983	SEMI MOUNTED HYDRAULIC MARKER 4880	145	01
46	0521055204	LIGNE DE DISQUE MARKER	148	02
47	0503010023	3/4" SPRING WASHER		02
48	0503010014	3/4" NUT		02
49	0521057015	HYDRAULIC MARKER LABEL ASSY	149	01

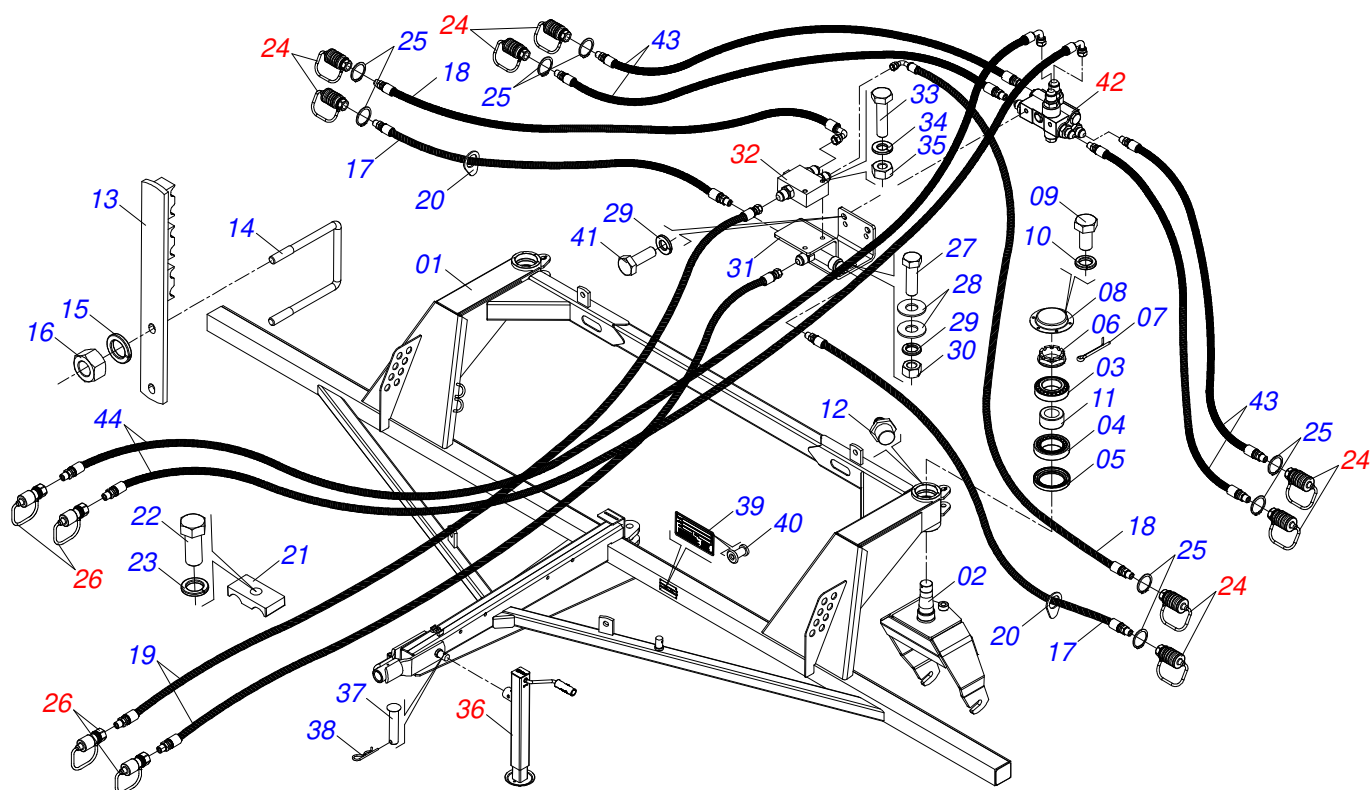


Item	Code	Description	See page	QT
01	0511064305	FRAME HEADER DOUBLE		01
02	0511064219	FORK WHEEL DRAWBAR DOUBLE		02
03	0503010007	3982/3920 ROLLER BEARING		02
04	0503010059	33287/33462 ROLLER BEARING		02
05	0503013106	SEAL 00085-B		02
06	0502040080	2.1/2" SLOTTED NUT		02
07	0503011345	1/4" X 3-1/2" COTTERPIN		02
08	0541013225	WHEEL BOX COVER		02
09	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		12
10	0503011444	SPRING WASHER		12
11	1882970002	GREASE SOAP		0.001Kg
12	0503010002	1800 GREASE FITTING		03
13	0511064222	FIXER SUPPORT BOLT HOSE		04
14	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
15	0503010019	1/2" SPRING WASHER		08
16	0503010060	1/2" NUT		08
17	0501080072	1/2" X 63" TR-TM HOSE ASSY		02
18	0501080335	1/2" X 63" TC-TM HOSE ASSY		02
19	0501080004	HOSE 1/2 X 3500 TR-TM		02
20	0531017560	DISPLAYED IDENTIFICATION		10
21	0502010477	HOSE CLAMP		09
22	0503011135	BOLT		09
23	0503010180	7/16" SPRING WASHER		09
24	0501053835	FEMALE QUICK COUPLER	6	08
25	0503010217	501040 CLAMPING RING (FOR AXLE)		16
26	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	7	04
27	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
28	0501013518	FLAT WASHER		04
29	0503010025	3/8" SPRING WASHER		04
30	0503010026	3/8" NUT		04
31	0511066114	CONDUCTOR VALVE SUPPORT DOUBLE HEADER		01


Item	Code	Description	See page	QT
32	0501054694	FLOW DIVIDING VALVE ASSY	8	01
33	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
34	0503010143	1/4" SPRING WASHER		02
35	0503010144	1/4" NUT		02
36	0503062157	HEADER JACK	9	01
37	0521010549	COUPLING SHAFT		01
38	0503030168	HAIR PIN		01
39	0503034003	SERIAL NUMBER TAG 61 X 118		01
40	0503010001	3.2 X 5.5 RIVET		04
41	0503010237	3/8" X 1" BOLT		02
42	0501054061	SEQUENCE VALVE WITH NIPPLES	10	01
43	0501080846	3/8" X 1550 TR-TM HOSE		04
44	0501080678	HOSE 1/2 X 3800 TC-TM		02

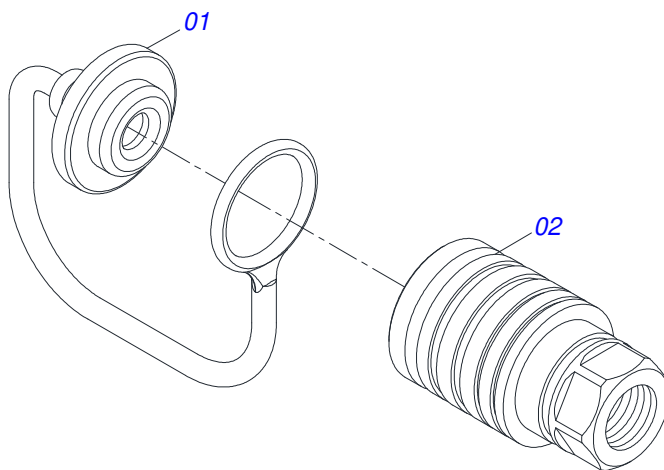


Item	Code	Description	See page	QT
01	0503011883	QUICK CONNECTION COVER		01
02	0503011628	FEMALE QUICK COUPLER		01

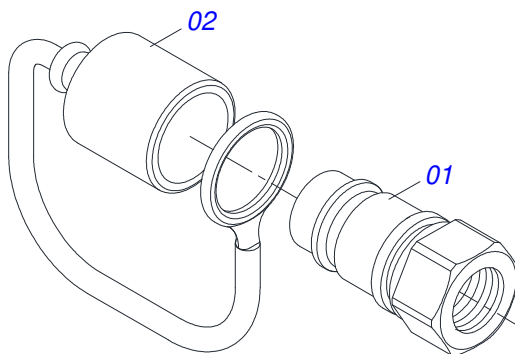


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

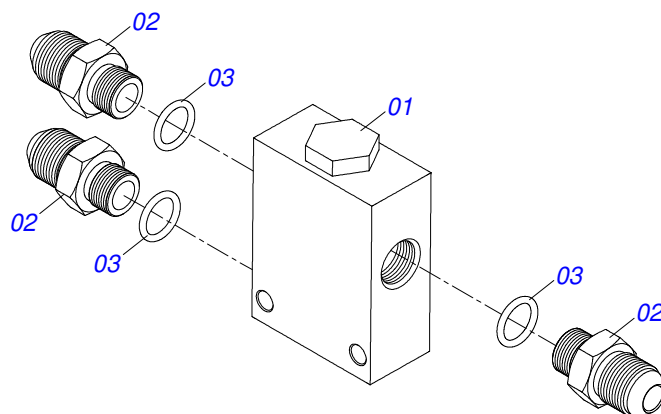


Item	Code	Description	See page	QT
01	0503012481	FLOW DIVIDING VALVE		01
02	0503030923	3/4" UNF X 13/16UN OFS X 40 NIPPLE		03
03	0503010190	2-114 N 3006-9B O'RING		03

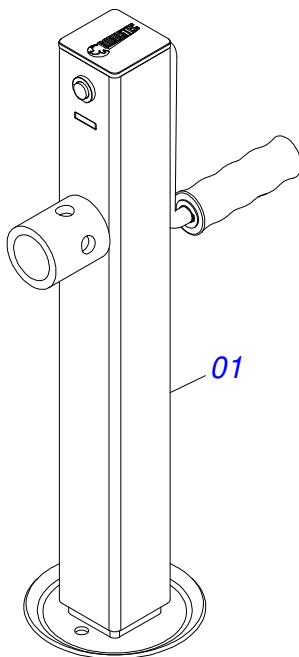


Item	Code	Description	See page	QT
01	0503062157	HEADER JACK	9	01

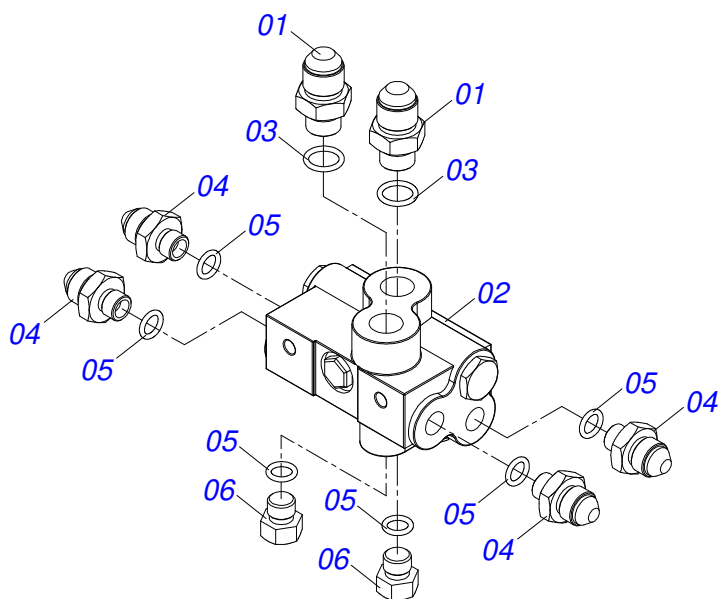


Item	Code	Description	See page	QT
01	0501011460	7/8 NF REDUCTION NIPPLE		02
02	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

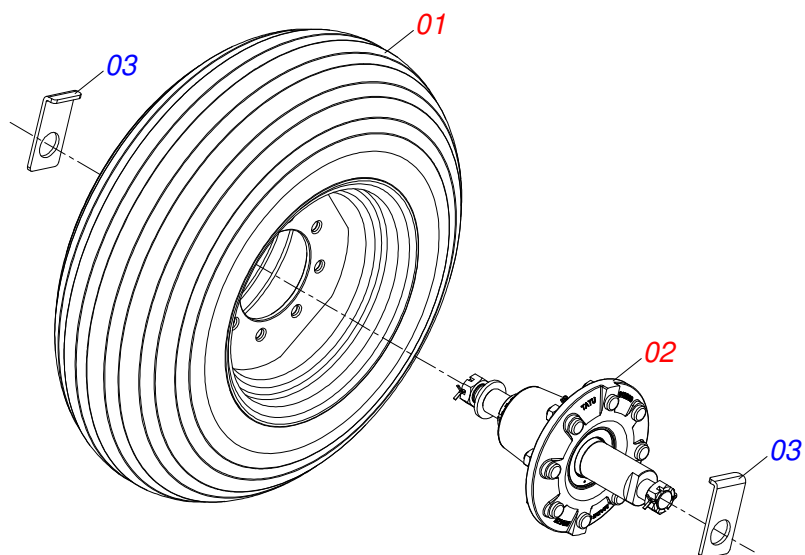


Item	Code	Description	See page	QT
01	0503060414	WHEEL AND TIRE	12	01
02	0501051799	STUB SHAFT & HUB ASSY	13	01
03	0531015109	WHEEL AXLE LOCK		02

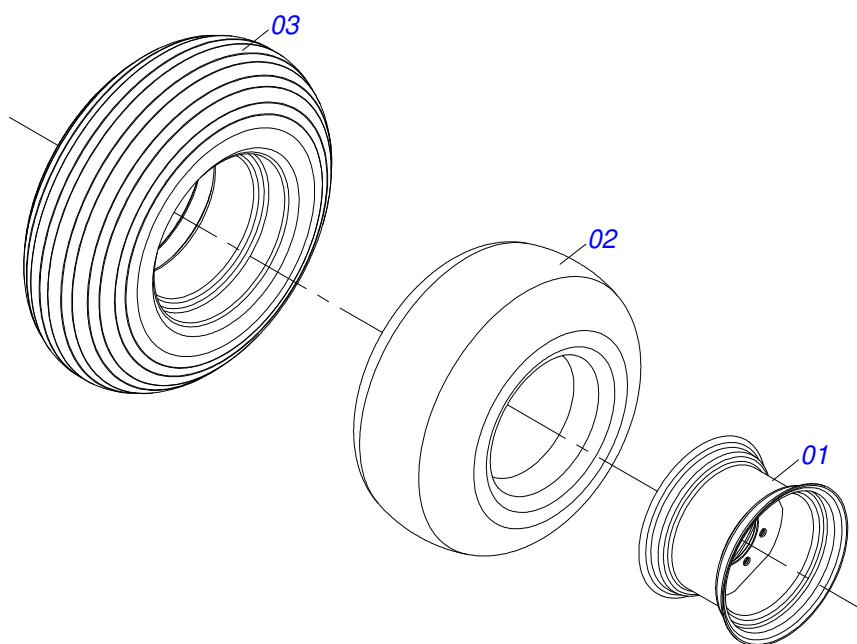


Item	Code	Description	See page	QT
01	0503012108	RODA 10 LB X 15 X 8F X 203 GCRO		01
02	0503010860	CAMARA AR 11L 15		01
03	0503011469	RIB TIRE 12L		01

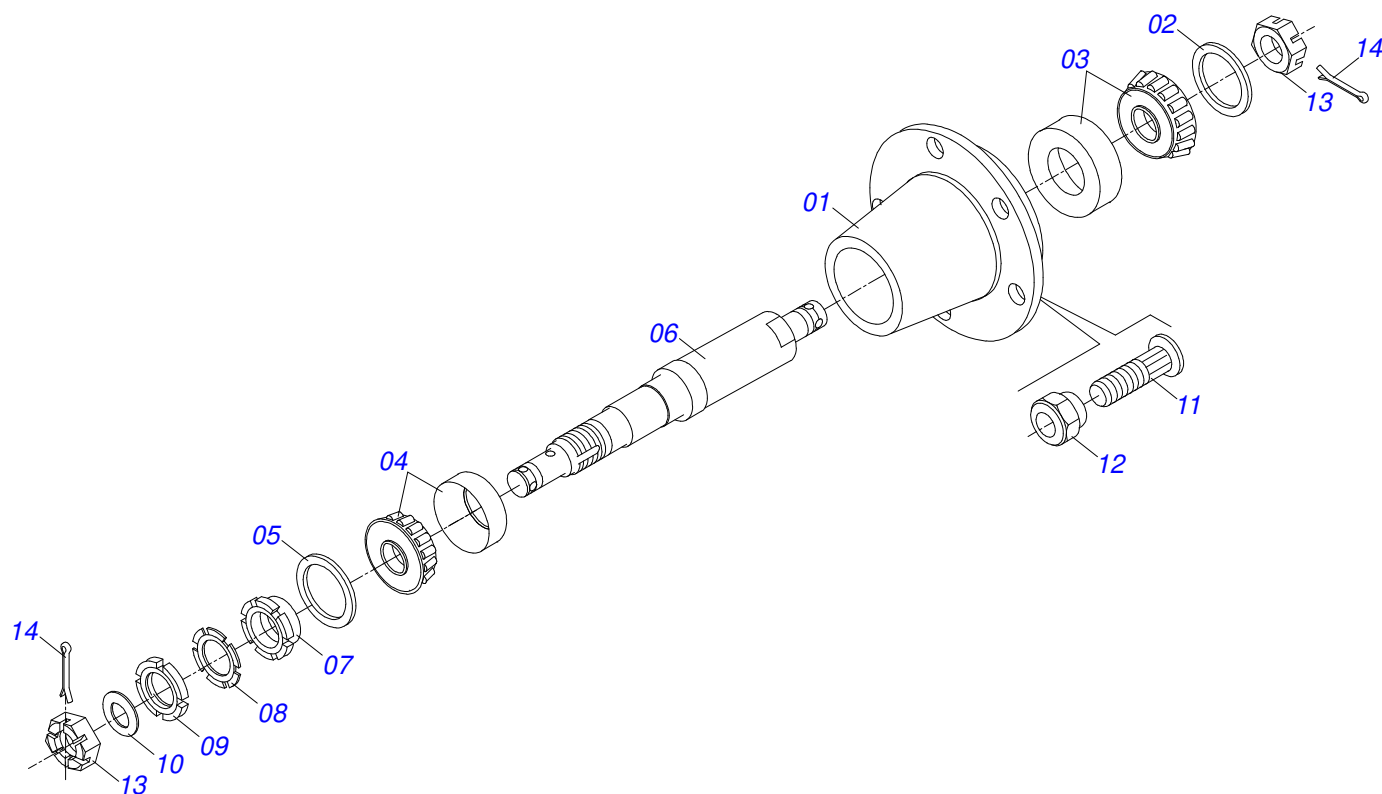


Item	Code	Description	See page	QT
01	0502010908	CARRYING WHEEL HUB		01
02	0503012159	4.0" X 2.5" X 0.5" SEAL 5144		01
03	0503010008	ROLAMENTO 3780/37203		01
04	0503010328	25590/25523 ROLLER BEARING		01
05	0503012162	5046 BAG SEAL RING		01
06	0521011209	425 TRANSP WHEEL AXLE		01
07	0511015949	LOCK NUT		01
08	0503010329	LOCK WASHER		01
09	0503010330	KM 9 LOCKNUT		01
10	0501010086	FLAT WASHER		01
11	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		08
12	0503010064	5/8 UNF CONIC NUT		08
13	0503011052	1.1/4" X 0.77" CASTLE NUT		02
14	0503010067	3/16" X 2.1/2" COTTER PIN		02

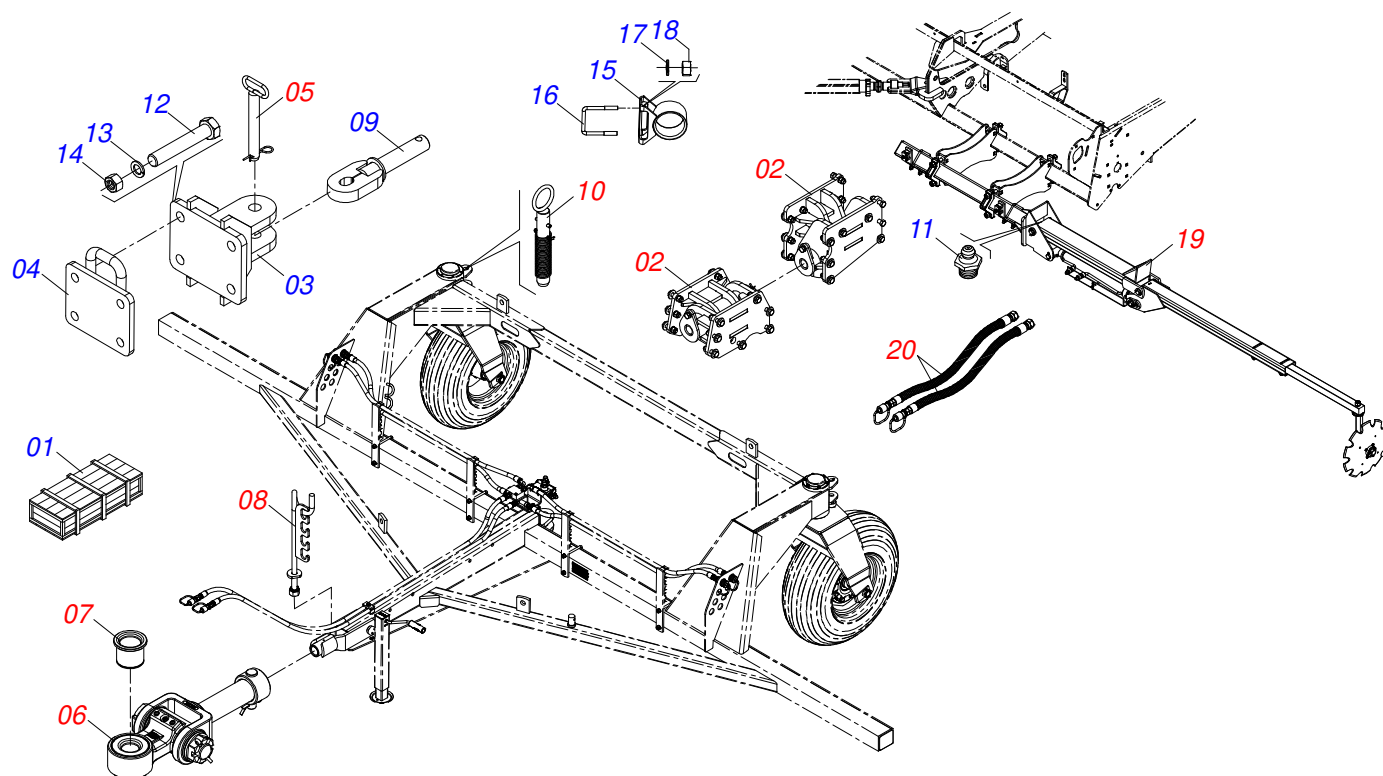

Item	Code	Description	See page	QT
01	0501100160	WOODEN BOX 2450X1050X920		01
02	0521053756	DOUBLE HEAD ARTICULATION ASSEMBLY	15	01
03	0511064220	COUPLING SUPPORT DOUBLE DRAWBAR		02
04	0521067935	FIXER PLATE		02
05	0511053179	TRACTOR HITCH AXLE	16	01
06	0511056409	TRACTOR HITCH	17	01
07	0571017510	GLOVE ARTICULATED HITCH		01
08	0511056736	HOSE SUPPORT	18	01
09	0501069632	TRACTOR HITCH		02
10	0501054862	AXIS LOCK RODE ASSY	19	02
11	0503010002	1800 GREASE FITTING		05
12	0501014172	1" X 8" BOLT		08
13	0503010012	1" SPRING WASHER		08
14	0501010059	1.5/8 NUT		08
15	0521067421	HOSE GUIDE DOUBLE HEAD MARKER		02
16	0521010683	3/8 UNC FASTENER		02
17	0503010025	3/8" SPRING WASHER		04
18	0503010026	3/8" NUT		04
19	0909098729	HYDRAULIC MARKER ASSY DOUBLE HEAD	20	01
20	0909098730	HYDRAULIC CIRCUIT DOUBLE HEAD HYDRAULIC MARKER	24	01

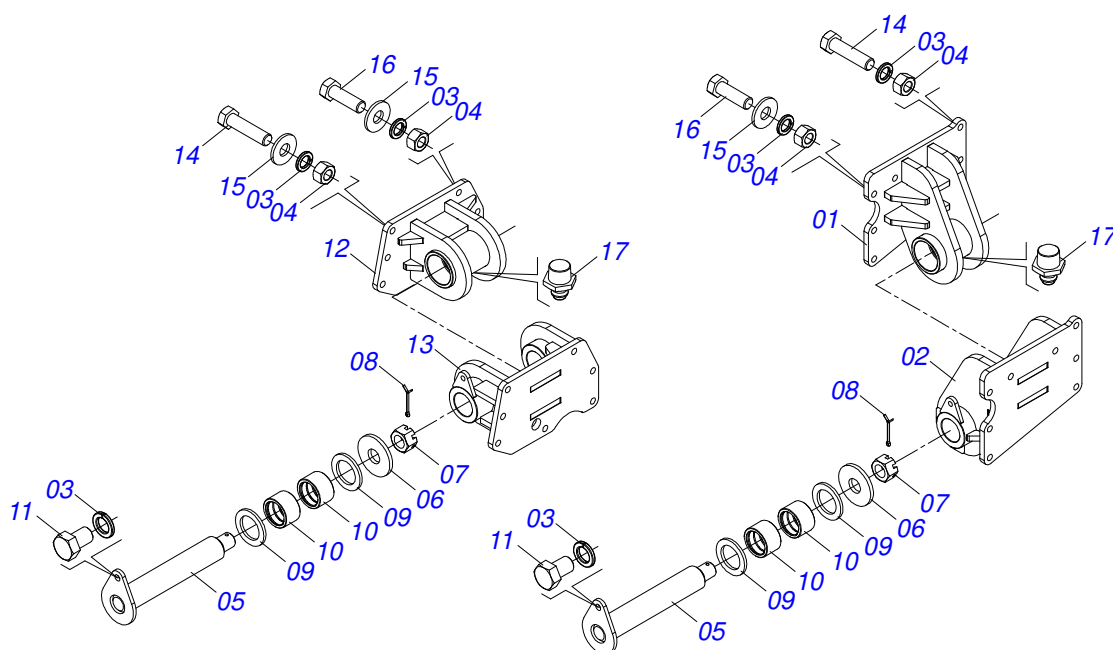


Item	Code	Description	See page	QT
01	0521069065	REAR RIGHT DOUBLE HEADER ARTICULATOR	01	
02	0521069052	ARTICULATOR REAR LEFT DOUBLE HEADER	01	
03	0503010019	1/2" SPRING WASHER	32	
04	0503010060	1/2" NUT	30	
05	0521067428	ARTICULATED HEAD AXIS	02	
06	0581013265	SUPPORT WASHER	02	
07	0503013026	1.1/4" CASTLE NUT	02	
08	0503010067	3/16" X 2.1/2" COTTER PIN	02	
09	0501015875	FLAT WASHER	04	
10	0581013263	SLEEVE INTER	04	
11	0503011401	1/2" X 3/4" BOLT	02	
12	0521069064	ARTICULATOR FRONT RIGHT DOUBLE HEADER	01	
13	0521069051	ARTICULATOR FRONT LEFT DOUBLE HEADER	01	
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	16	
15	0511017302	FLAT WASHER	26	
16	0503011082	C1/2" X 1.3/4" SCREW	14	
17	0503010002	1800 GREASE FITTING	02	

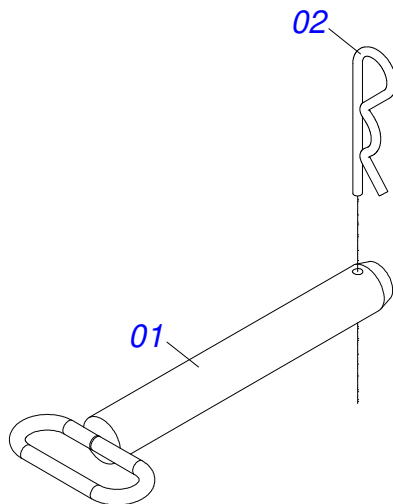


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HAIR PIN		01

TRACTOR HITCH


0511056409

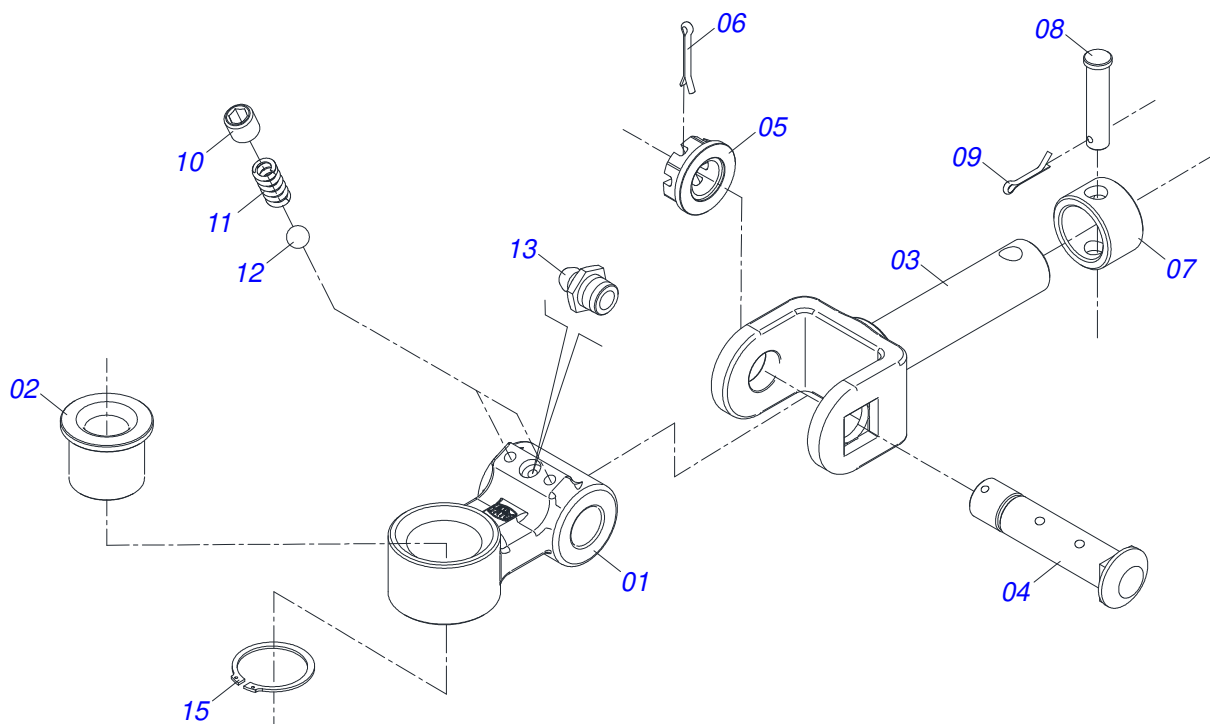


Item	Code	Description	See page	QT
001	0571017512	HITCH JOINT		01
002	0571017511	SLEEVE HITCH ARTICULATION		01
003	0502040850	U TRACTOR COUPLING		01
004	0571012612	PIVOT SHAFT		01
005	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
006	0503010010	1/4" X 2.1/2" COTTERPIN		01
007	0521010681	BUSHING COUPLING BODY		01
008	0521010639	COUPLING SHAFT		01
009	0503010571	1/4" X 1.1/2 COTTERPIN		01
010	0503016482	BOLT		02
011	0503033731	COMPRESSION SPRING LEFT		02
012	0503011331	3/8 BALL		02
013	0503010002	1800 GREASE FITTING		01
014	1882970002	GREASE SOAP		01
015	0503010378	CLAMPING RING (FOR AXLE)		01

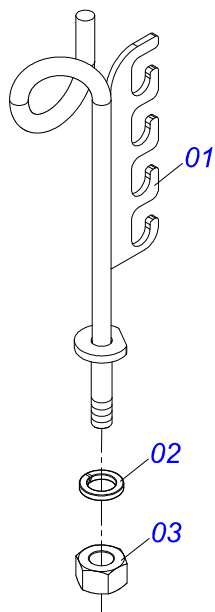


Item	Code	Description	See page	QT
01	0521065611	HOSE SUPPORT		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

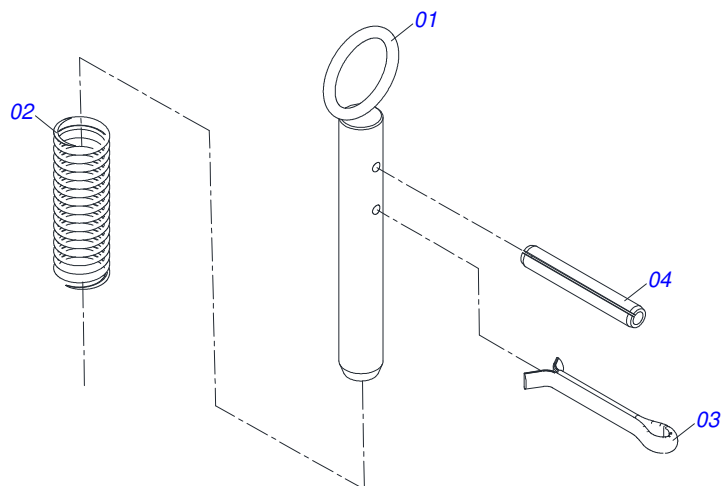

Item	Code	Description	See page	QT
01	0511064229	LOCK PIN		01
02	0503030978	COMPRES SPRING		01
03	0503010131	3/16" X 1-1/2" COTTERPIN		01
04	0503010292	0.2" X 1.6" SPRING PIN		01

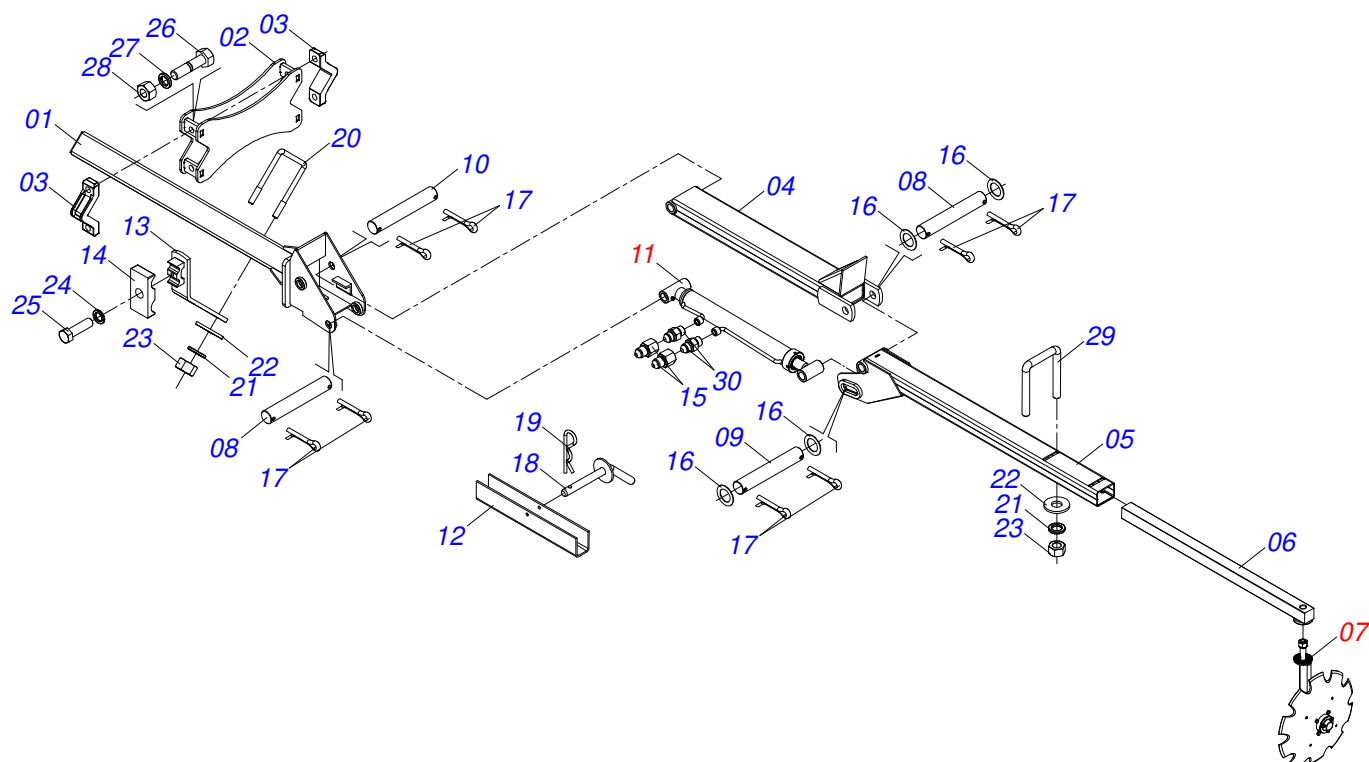


Item	Code	Description	See page	QT
01	0511061022	ROW MARKER SUPPORT		02
02	0511061021	SUPPORT FASTENER		04
03	0502010175	HITCH CLAMP		08
04	0511060013	ROW MARKER ARM		02
05	0511060014	ROW MARKER ARM		02
06	0511060010	1400 TURNBUCKLE		02
07	0501050633	MARKER DISC ASSY LINE	21	02
08	0521011142	1.1/4" X 7.5" AXLE		04
09	0521011141	1.1/4" X 6.5" AXLE		02
10	0521013347	1.1/4" X 8.4" AXLE		02
11	0511058431	HYDRAULIC CYLINDER	23	02
12	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
13	0511064228	HOSE HOLDER		04
14	0502010477	HOSE CLAMP		04
15	0511018012	HIDRAULIC ADAPTER		04
16	0501019435	32 X 50 X 1.5 FLAT WASHER		08
17	0503010523	1/4" X 2" COTTERPIN		16
18	0501068994	0.3" X 3.1" LOCK PIN		02
19	0503030168	HAIR PIN		02
20	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
21	0503010019	1/2" SPRING WASHER		16
22	0511017302	FLAT WASHER		16
23	0503010060	1/2" NUT		16
24	0503010180	7/16" SPRING WASHER		04
25	0503011135	BOLT		04
26	0501010216	3/4" X 4-1/2" BOLT		16
27	0503010023	3/4" SPRING WASHER		16
28	0503010014	3/4" NUT		16
29	0521012324	1/2" X 3.2" X 2.54" FASTENER		04
30	0501010617	3/4" NIPPLE		04

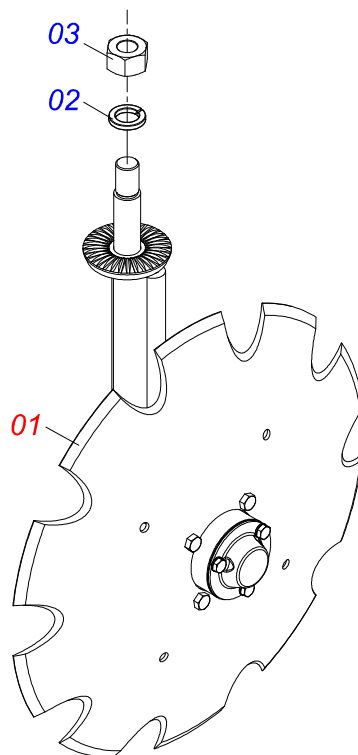


Item	Code	Description	See page	QT
01	0511053904	DISC LINE MARKER	22	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

DISC LINE MARKER


0511053904

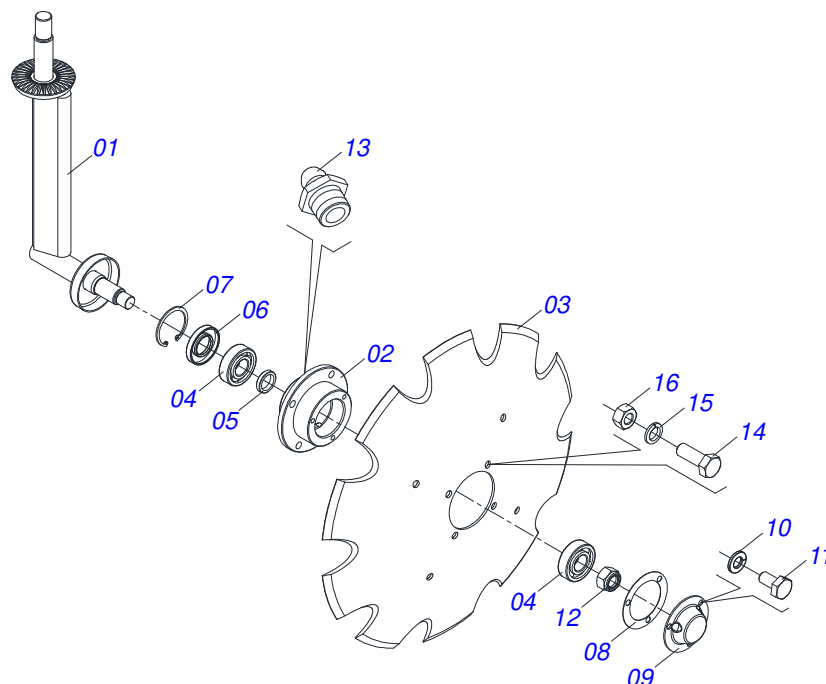


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

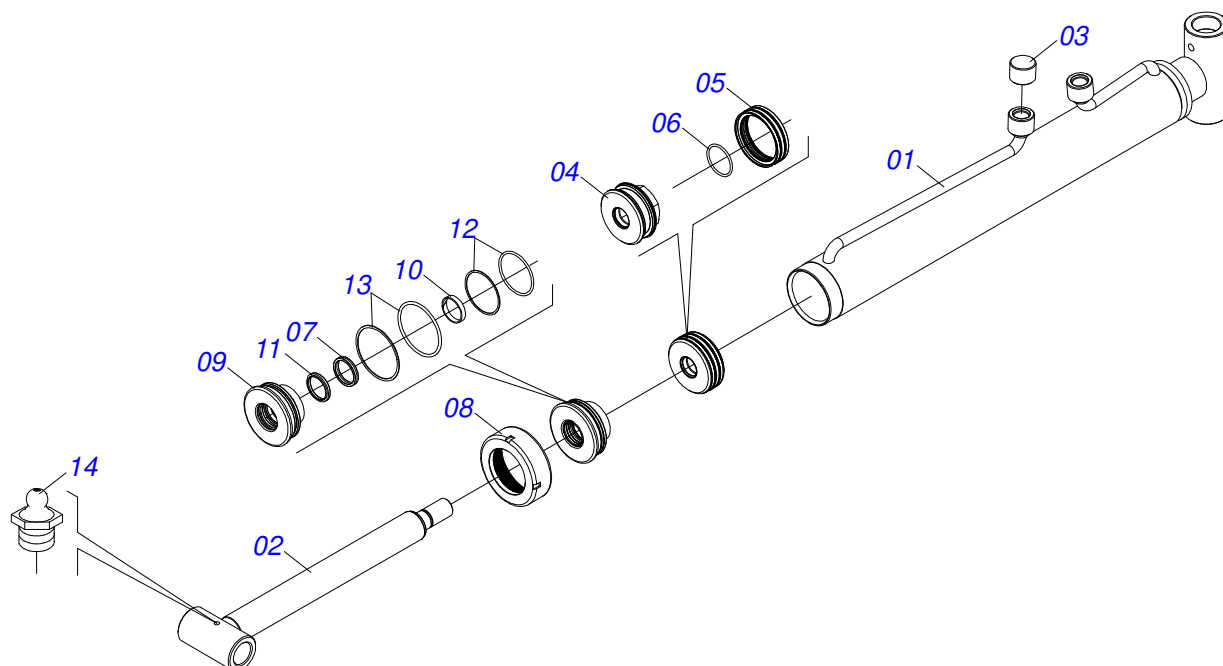


Item	Code	Description	See page	QT
01	0501067700	2.5" X 25" CYLINDER CASE		01
02	0521066632	EXTENDER		01
03	0503030384	CON PLUG N-001		02
04	0502012837	PISTON		01
05	0503018005	RING		01
06	0503011109	2-119 N 3006-9B O'RING		01
07	0503010163	D-1500 SCRAPER RING		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503018004	RING		01
11	0503018003	GASKET		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0503010002	1800 GREASE FITTING		02

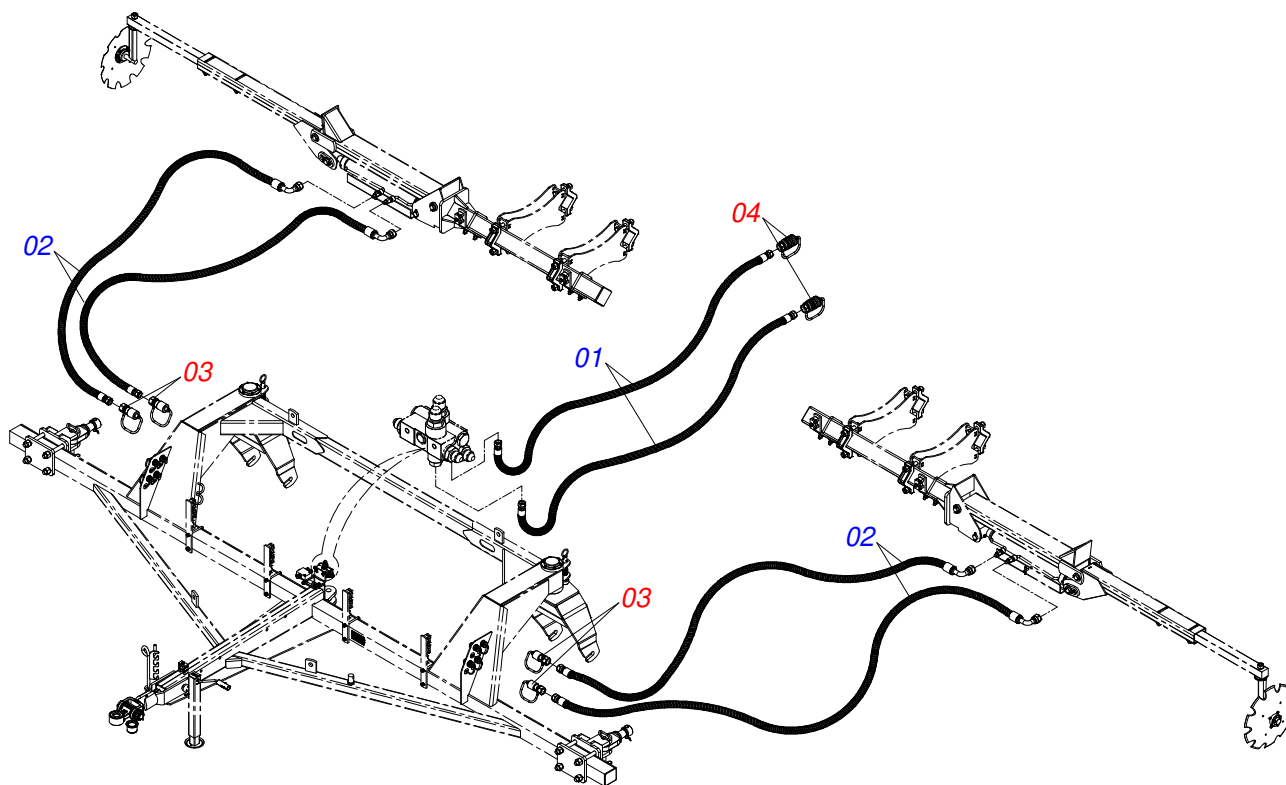


Item	Code	Description	See page	QT
01	0501080779	1/2 X 1500 TM-TM HOSE		02
02	0501080850	3/8" X 6100 TC-TM HOSE		04
03	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	7	04
04	0501053835	FEMALE QUICK COUPLER	6	02

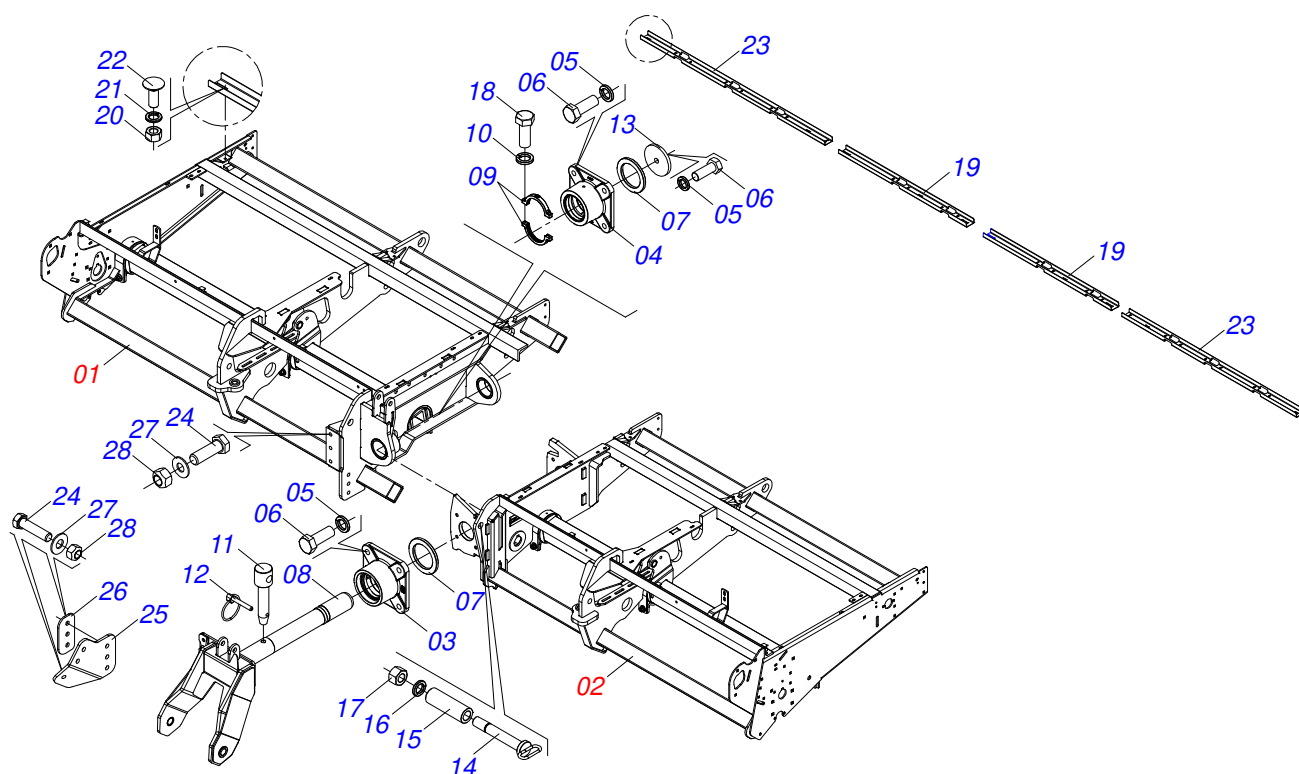


Item	Code	Description	See page	QT
01	0521056830	RIGHT FRAME WITH ROUND AXLE 4790 RIGHT 26 MACHINE		01
02	0521056831	LEFT FRAME WITH ROUND AXLE 4790 RIGHT 27 MACHINE		01
03	0501110791	DRIVER WHEEL HUB		01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		01
05	0503011442	3/4" SPRING WASHER		09
06	0501010098	3/4" UNC BOLT		09
07	0571010094	SLEEVE FLANGE		02
08	0521065616	ARTICULATION		01
09	0502012698	CLAMP		02
10	0503011444	SPRING WASHER		02
11	0571013510	LOCK AXLE		01
12	0503030085	LOCK PIN		01
13	0571010095	FLAT WASHER		01
14	0521063003	LOCK PIN		01
15	0571010969	LOCK SLEEVE FRAME		01
16	0503013627	1.1/2 SPRING WASHER		01
17	0501010110	1.1/2" NUT		01
18	0503010365	NUT		02
19	0581018965	TROUGH 24 X 50 X 940		02
20	0503010026	3/8" NUT		08
21	0503010025	3/8" SPRING WASHER		08
22	0501011643	3/8 X 1" BOLT		08
23	0591011622	24 X 50 X 1275 GUTTER		02
24	0503019521	SCREW 3/4 UNF 3 CSRP G.8 ZN		09
25	0591011660	ARTICULATED AXLE REINFORCEMENT LOCK		01
26	0591011661	LATCH SUPPORT		01
27	0501017065	FLAT WASHER		09
28	0503019522	HEX NUT		09

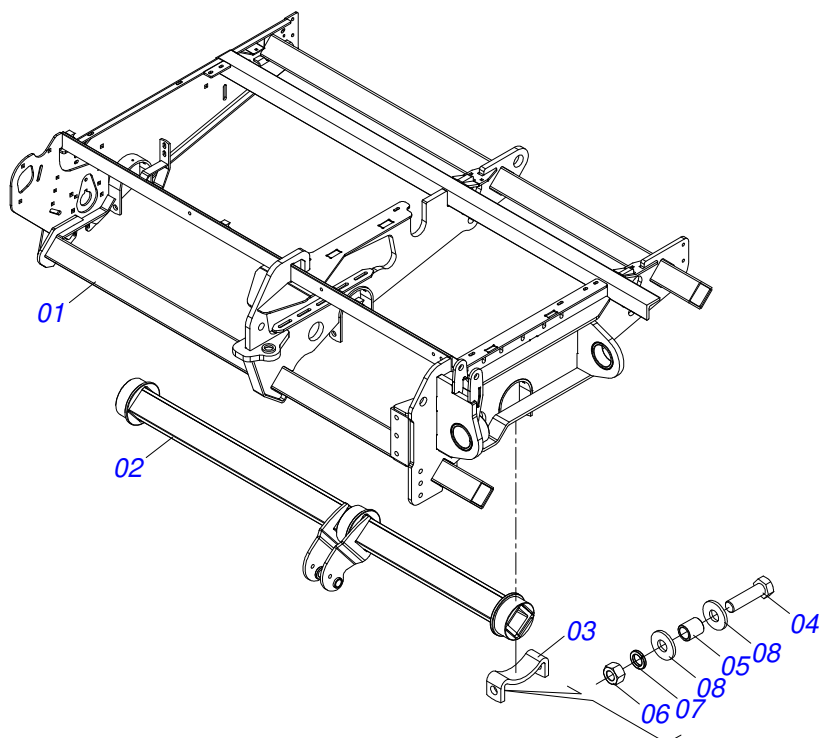


Item	Code	Description	See page	QT
01	0531060338	RIGHT FRAME 4790 RIGHT ASSY		01
02	0531060342	ARTICULATED AXIS ROTATE RIGHT SIDE 4790		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0531013922	0.6" X 0.8" X 1" SLEEVE		06
06	0503010013	5/8" NUT		06
07	0503011445	SPRING WASHER		06
08	0501012140	FLAT WASHER		12

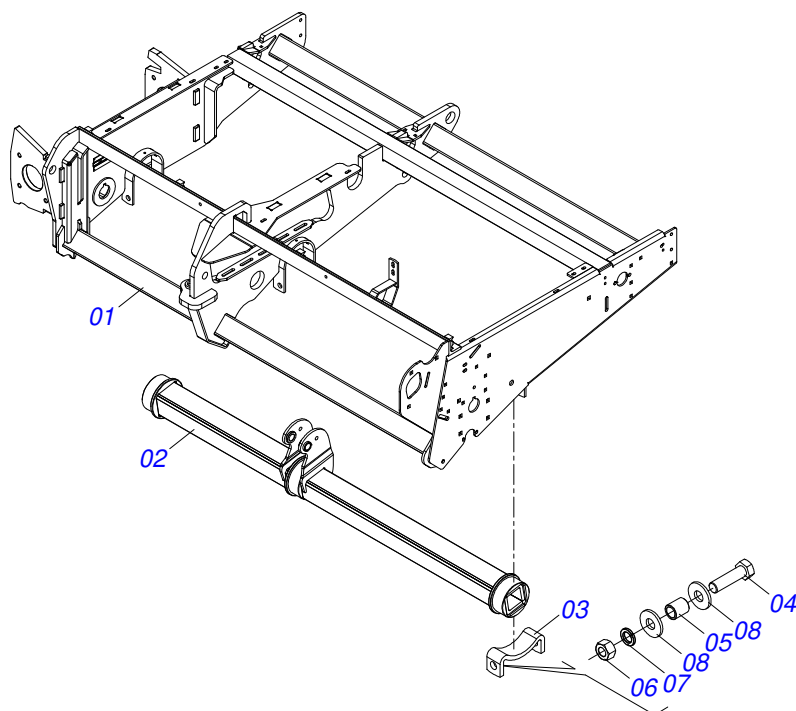


Item	Code	Description	See page	QT
01	0531060339	FRAME LEFT 4790 RIGHT ASSY		01
02	0531060343	LEFT SKEWING ARTICULATED SHAFT 4790		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0531013922	0.6" X 0.8" X 1" SLEEVE		06
06	0503010013	5/8" NUT		06
07	0503011445	SPRING WASHER		06
08	0501012140	FLAT WASHER		12

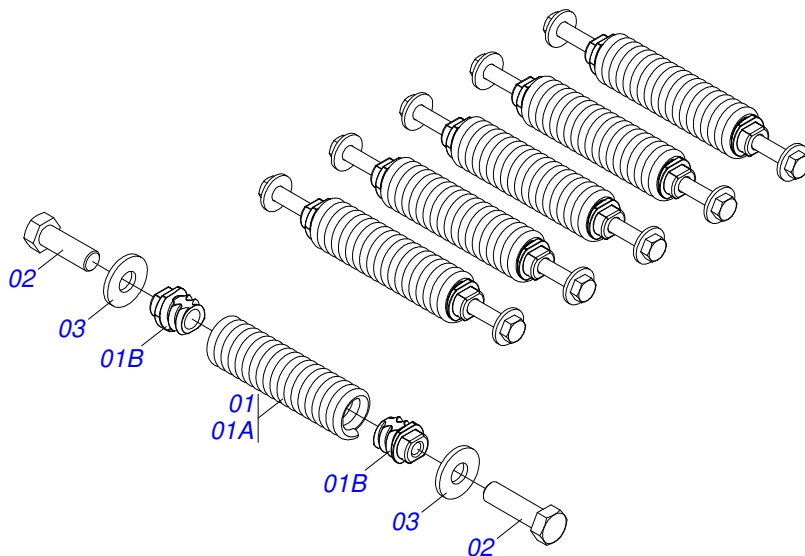


Item	Code	Description	See page	QT
01	0511050681	TRACTION SPRING		06
01A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
01B	0561016062	SPRING HITCH		02
02	0503013030	5/8" X 3.1/4" BOLT		12
03	0501012140	FLAT WASHER		24

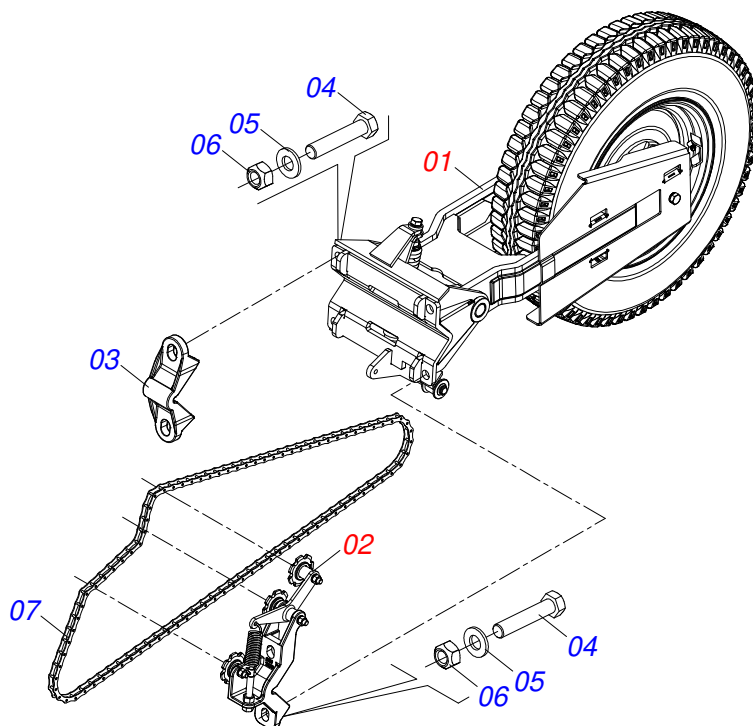


Item	Code	Description	See page	QT
01	0521055231	655 WHEELED SUPPORT WITH TRANSMISSION	30	01
02	0521055234	WHEELED FASTENER	35	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

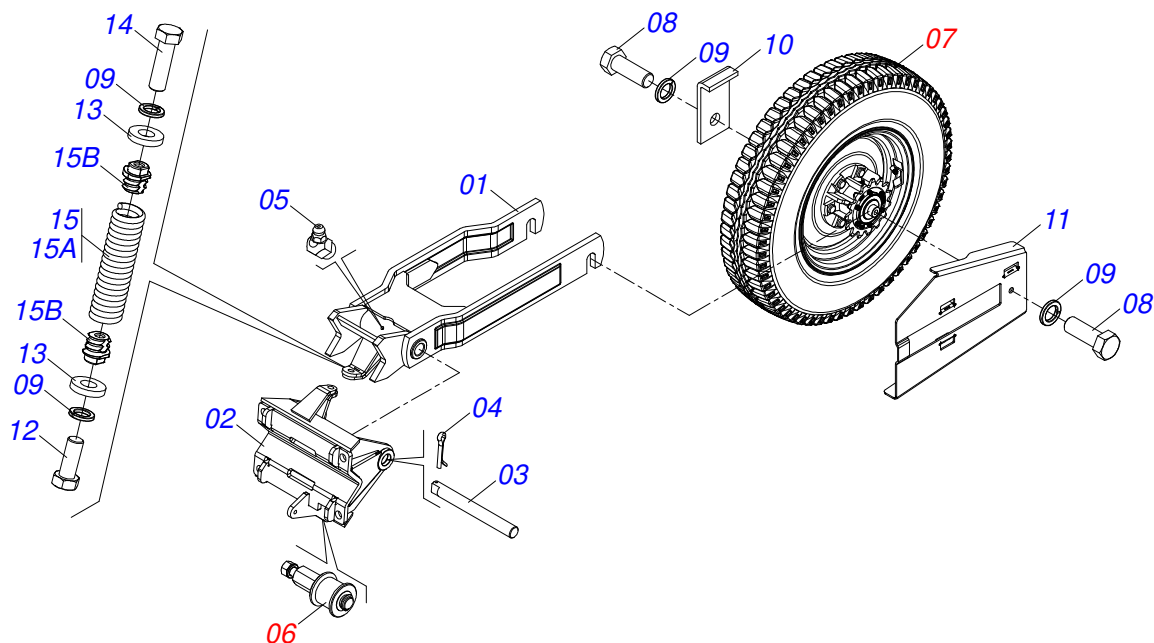


Item	Code	Description	See page	QT
01	0521061566	CARRYING WHEEL ARM TRACTION		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" COTTERPIN		01
05	0503010003	1845 GREASE FITTING		01
06	0501058241	TENSIONER CHAIN SUPPORT	31	01
07	0521055232	WHEEL WITH PNEU	32	01
08	0503018981	BOLT		02
09	0503010027	5/8" SPRING WASHER		04
10	0521012190	AXLE LOCK		01
11	0581011124	WHEELED COVER		01
12	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
13	0551017715	FLAT WASHER		02
14	0503013030	5/8" X 3.1/4" BOLT		01
15	0511050681	TRACTION SPRING		01
15A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
15B	0561016062	SPRING HITCH		02

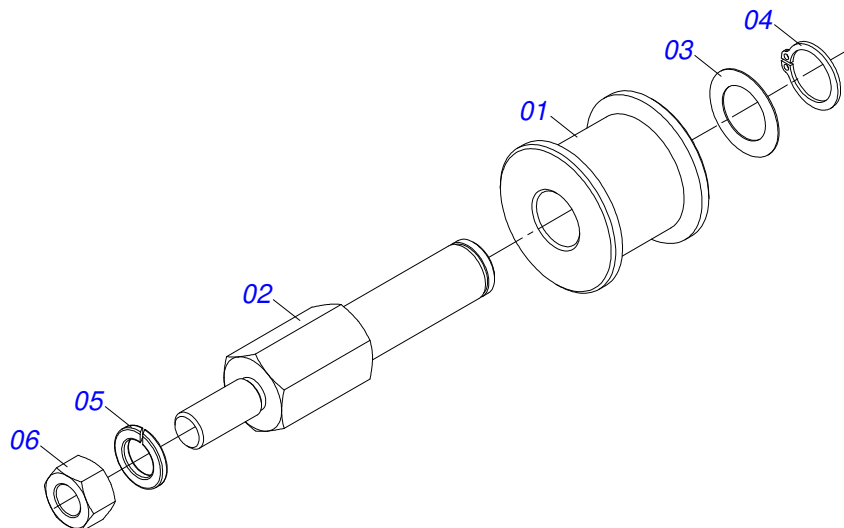


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	FERT CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

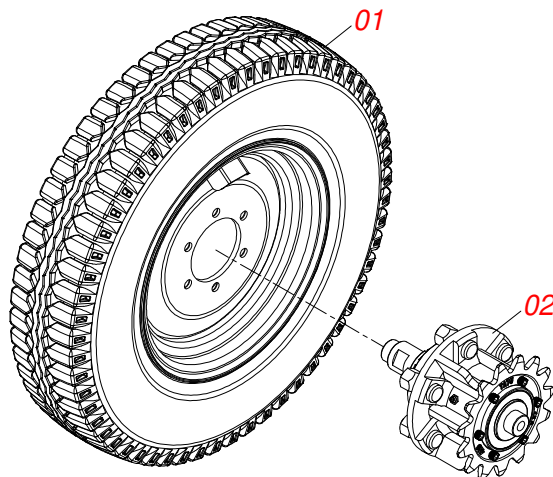


Item	Code	Description	See page	QT
01	0503062159	WHEEL	33	01
02	0521055233	WHEELED TRANSMISSION WITHOUT TIRE	34	01

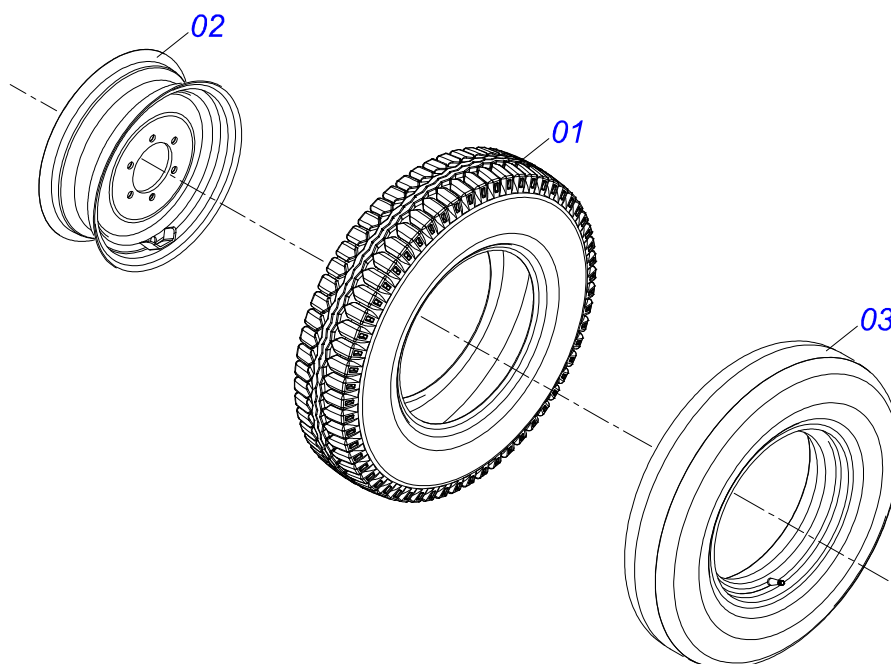


Item	Code	Description	See page	QT
01	0503012113	PLY TIRE		01
02	0503016517	WHEEL EI		01
03	0503012114	7.00 X 16 INNER TIRE		01

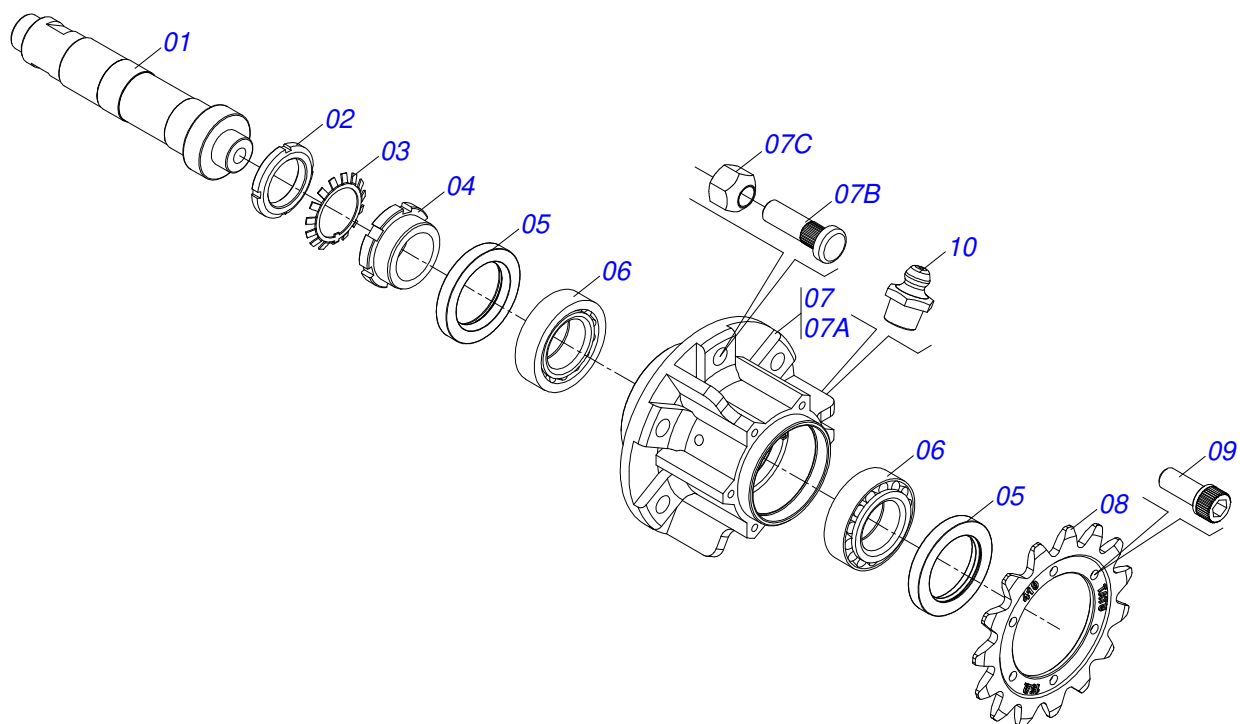


Item	Code	Description	See page	QT
01	0521012185	TRANSM AXLE CARRYING-WHEEL	01	
02	0503010330	KM 9 LOCKNUT	01	
03	0503010329	LOCK WASHER	01	
04	0511015949	LOCK NUT	01	
05	0503010804	00547-B SEAL	02	
06	0503019364	BEARING 25590/25523	02	
07	0501110721	WHEEL HUB WITH SCREW / NUTS	01	
07A	0571012990	CARRYING WHEEL HUB TRANSMISSION	01	
07B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR	06	
07C	0503016516	5/8 UNF CONIC NUT	06	
08	0502011339	15Z GEAR P 1.25"	01	
09	0503012550	5/16" X 3/4" BOLT	06	
10	0503010002	1800 GREASE FITTING	01	

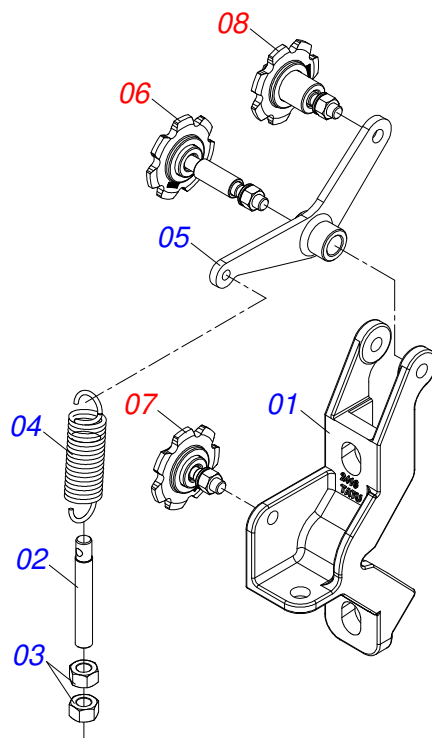


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8" NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0521055236	INTERMEDIARY CURRENT STRETCHER	36	01
07	0521055237	WHEEL FIXED CURRENT STRETCHER	37	01
08	0521055235	WHEEL MOBILE CURRENT STRETCHER	38	01

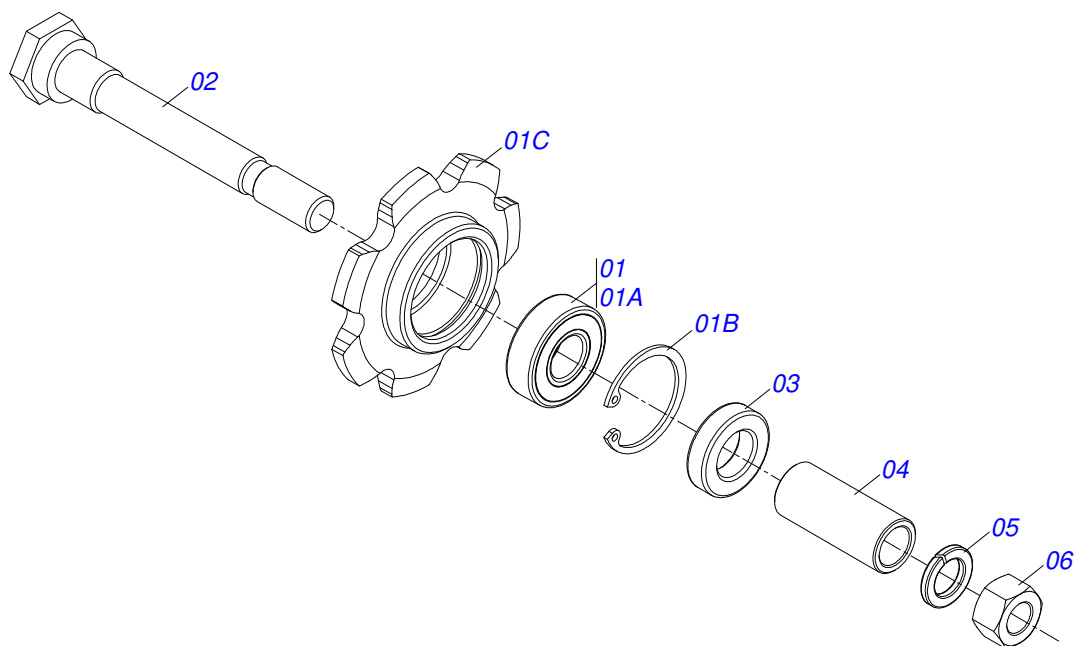


Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN		01
01A	0503019355	BEARING 6202 2RS1		01
01B	0503011945	503050 CLAMPING RING (FOR AXLE)		01
01C	0502012853	GEAR		01
02	0551018245	CHAIN TENSIONER AXLE		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0551018239	SLEEVE 19 X 13,50 X 45		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

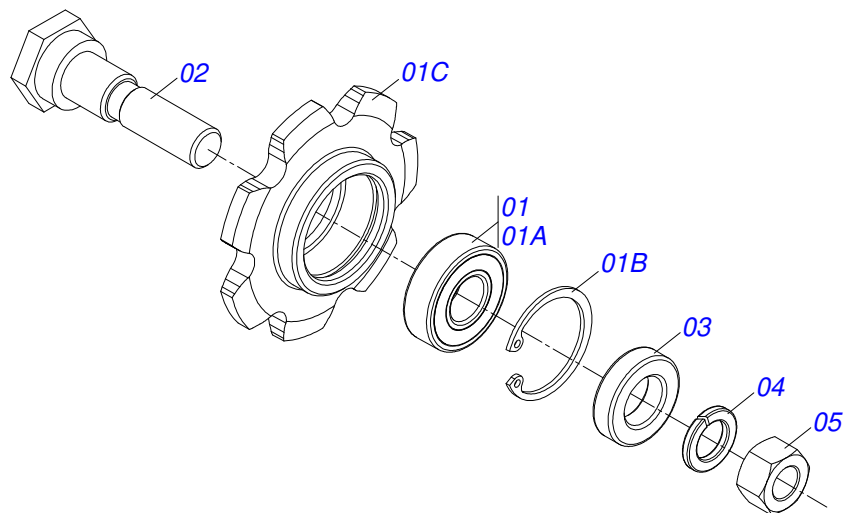


Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN		01
01A	0503019355	BEARING 6202 2RS1		01
01B	0503011945	503050 CLAMPING RING (FOR AXLE)		01
01C	0502012853	GEAR		01
02	0551018252	CHAIN TIGHTENER AXLE		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

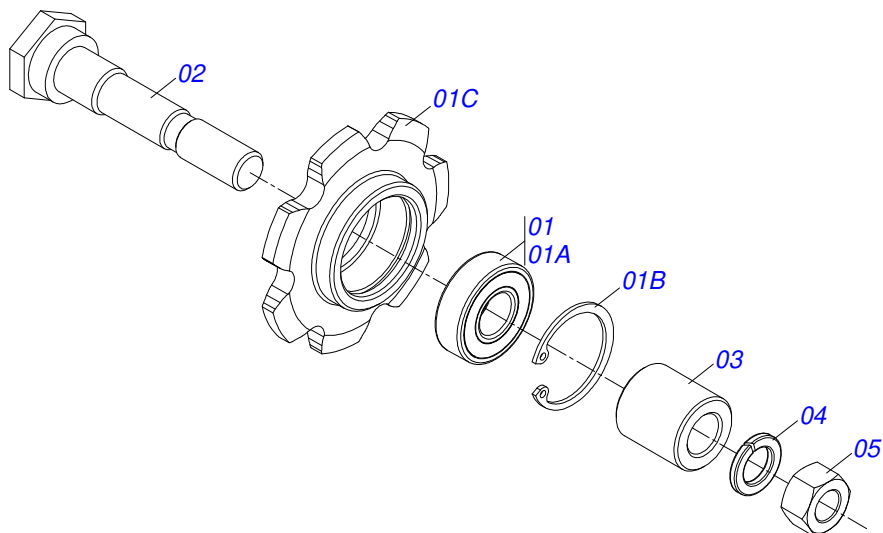


Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN		01
01A	0503019355	BEARING 6202 2RS1		01
01B	0503011945	503050 CLAMPING RING (FOR AXLE)		01
01C	0502012853	GEAR		01
02	0551018244	CHAIN UPPER AXLE		01
03	0551018240	SLEEVE		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

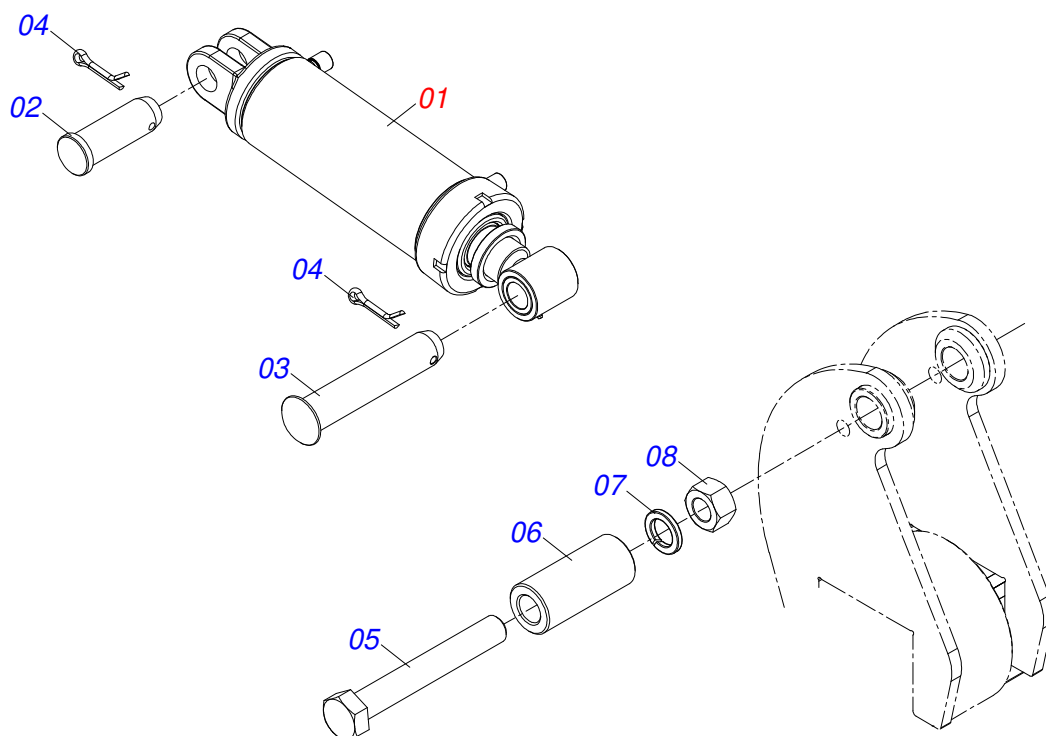

Item	Code	Description	See page	QT
01	0511058406	HYDRAULIC CYLINDER	40	02
02	0521012538	1.2" X 3.5" COUPLING SHAFT		02
03	0521015501	COUPLING SHAFT		02
04	0503010523	1/4" X 2" COTTERPIN		04
05	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02
06	0531012565	SLEEVE 16,3X 30 X 88		02
07	0503010027	5/8" SPRING WASHER		02
08	0503010013	5/8" NUT		02

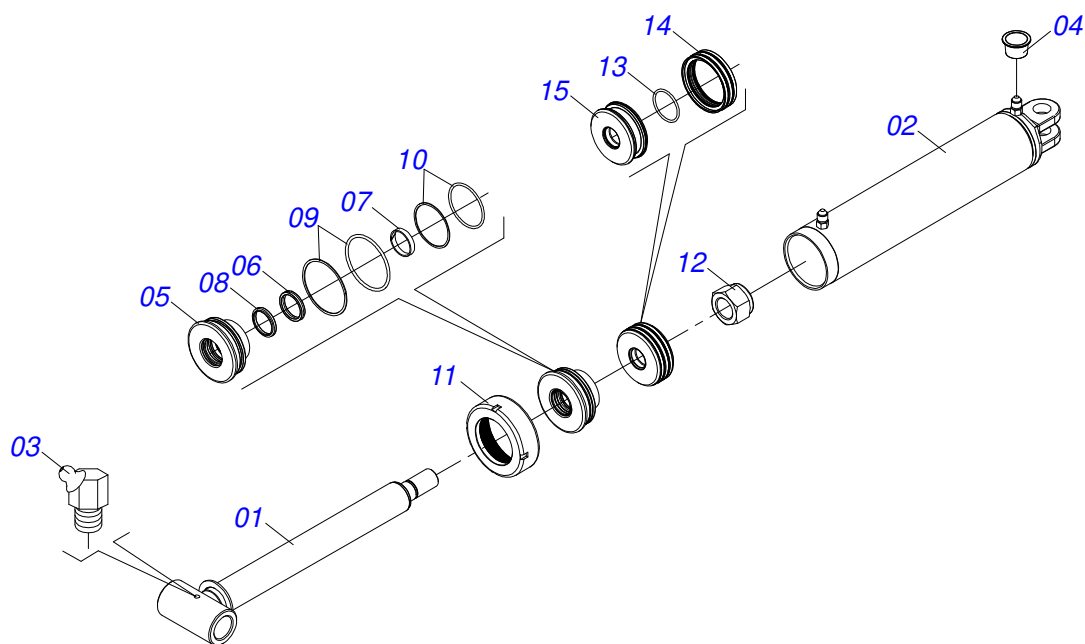

Item	Code	Description	See page	QT
01	0511064053	SLEEVE 2" X 14" TURNBUCLE		01
02	0511064052	4" X 12.1" CYLINDER CASE		01
03	0503010003	1845 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010678	50,80 X 101 RING SUPPORT		01
06	0503015636	SCRAPER SEAL		01
07	0503018025	RING GUIDE		01
08	0503018026	1870-2000-375 B GASKET		01
09	0503010338	2-342 N 3006-9B O-RING		02
10	0503011061	8-342 BACK-UP RING		02
11	0502012822	101.60 END CAP		01
12	0503010817	1.1/4" SELF LOCKING NUT		01
13	0503010345	2-218 N 3006-9B O-RING		01
14	0503015633	SELEMASTER SEALING		01
15	0502012842	50,80 X 101,60 PISTON		01

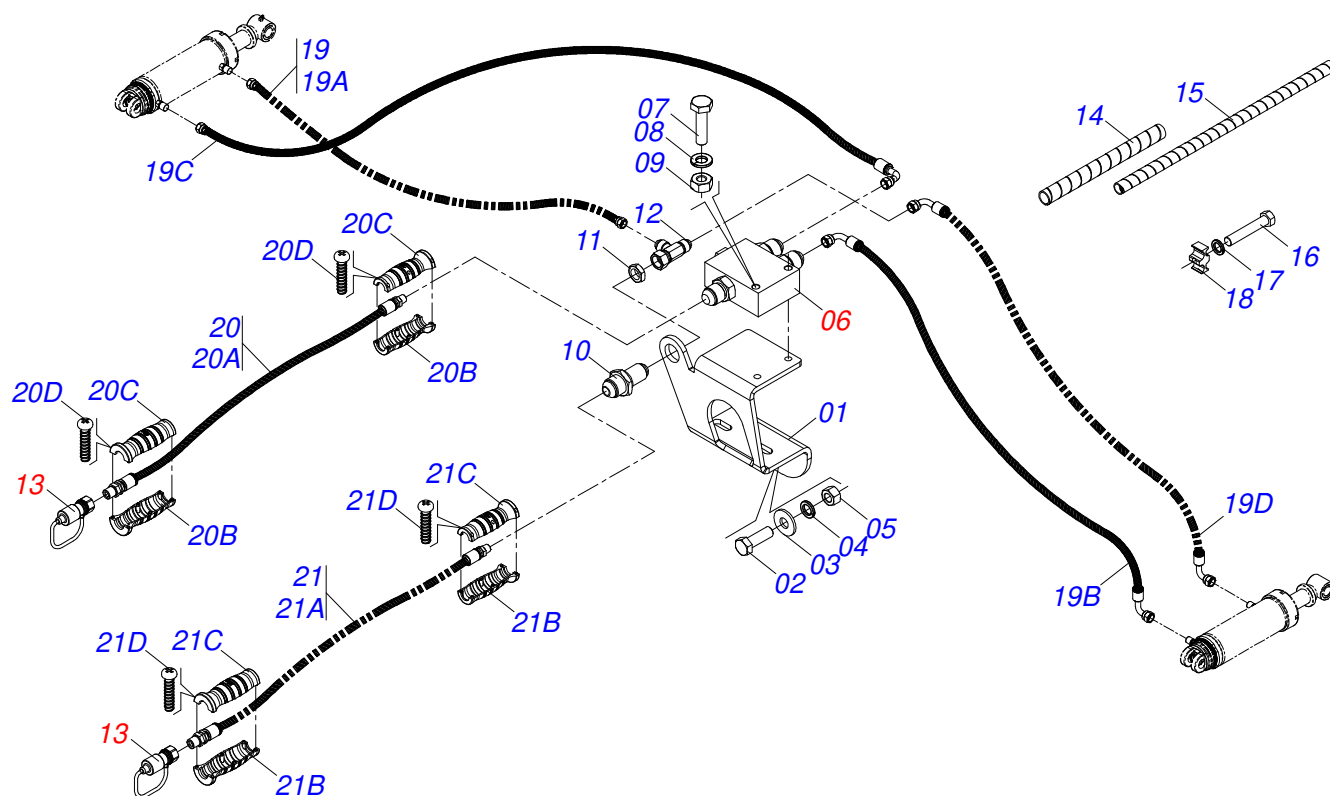


Item	Code	Description	See page	QT
01	0571017027	SOPORTE VALV		01
02	0503010920	1/2" X 1.1/2" BOLT		02
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		02
05	0503010060	1/2" NUT		02
06	0501054694	FLOW DIVIDING VALVE ASSY	8	01
07	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
08	0503010143	1/4" SPRING WASHER		02
09	0503010144	1/4" NUT		02
10	0541012166	NIPPLE 3/4" UNF X 7/8"		01
11	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01
12	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
13	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	7	02
14	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
15	0571017774	SPRING PROTECTION QUICK HOSE		02
16	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		03
17	0503010180	7/16" SPRING WASHER		03
18	0502012702	BODY SUPPORT CLAMP		03
19	0511057089	HOSE KIT SYSTEM HYDRAULIC		01
19A	0501080045	3/8" X 850 TR-TR HOSE		01
19B	0501080999	3/8" X 39" TC-TC HOSE		01
19C	0501081987	HOSE 3/8 X 1550 TR-TC		01
19D	0501081986	HOSE 3/8 X 1550 TC-TC		01
20	0521052299	HOSE 1/2 X 4000 TR-TM BLACK / RED		01
20A	0501080185	HOSE 1/2 X 4000 TR-TM		01
20B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
20C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
20D	0503018952	PLASTIC BOLT		06
21	0521052300	HOSE 1/2 X 4000 TR-TM BLACK / BLUE		01
21A	0501080185	HOSE 1/2 X 4000 TR-TM		01
21B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01



Item	Code	Description	See page	QT
21C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
21D	0503018952	PLASTIC BOLT		06

HEADER ASSY


0909098717

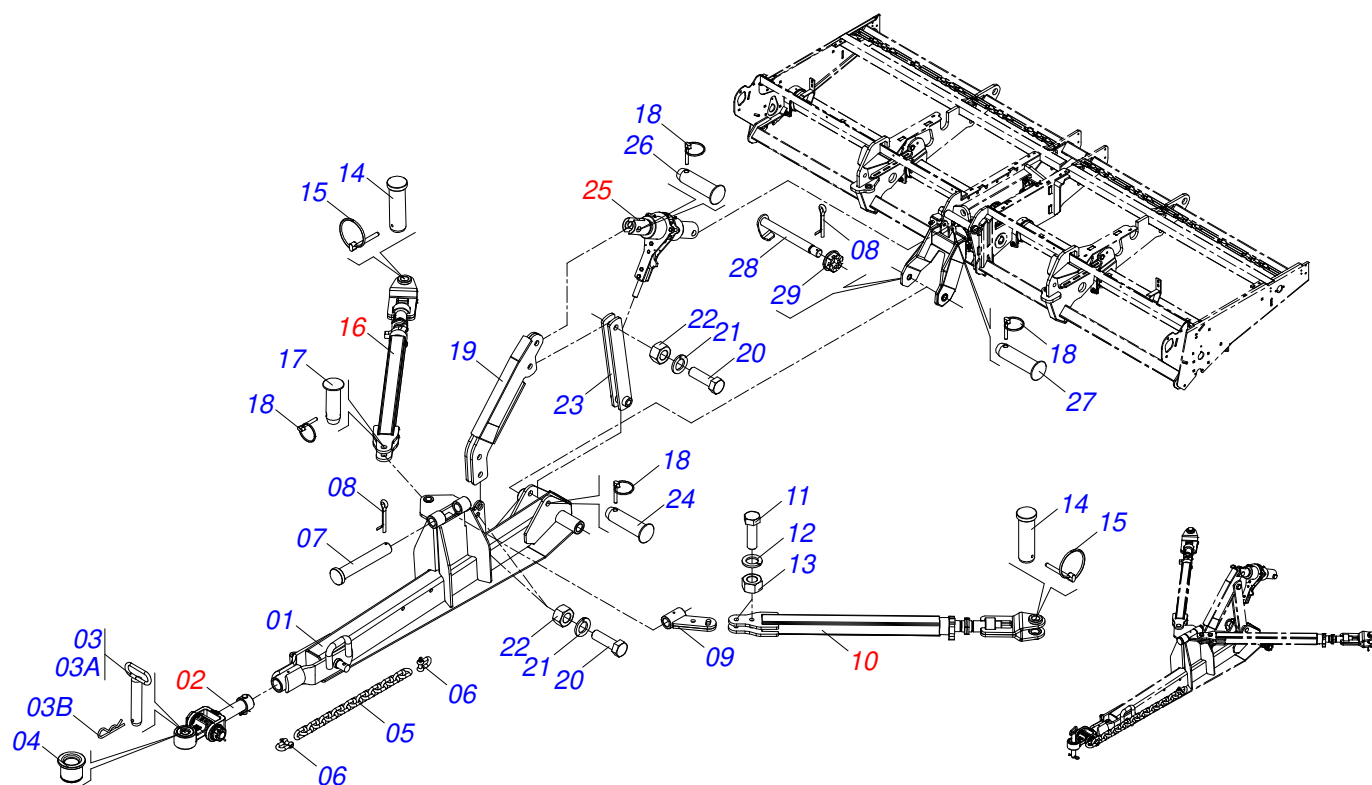


Item	Code	Description	See page	QT
01	0521068561	LONG COUPLING HEADER		01
02	0511055096	TRACTOR HITCH	43	01
03	0511053179	TRACTOR HITCH AXLE	16	01
03A	0521064036	TRACTOR HITCH AXLE		01
03B	0503030012	HAIR PIN		01
04	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
05	0503014120	CHAIN		01
06	0503014321	CABLE STEEL SHACKLE		02
07	0571010661	PIVOT SHAFT		01
08	0503010010	1/4" X 2.1/2" COTTERPIN		02
09	0521064203	EAR PIVOT DRAWBAR		01
10	0521053310	LEFT EXTENSION HEADER 36.00 - 4880/5720/5950	44	01
11	0501010500	3/4"X3"BOLT		02
12	0503010023	3/4" SPRING WASHER		02
13	0503010014	3/4" NUT		02
14	0571019949	JUNCTION SHAFT		02
15	0503030119	LOCK PIN		02
16	0521053311	RIGHT EXTENSOR HEAD 36,00 - 4880/5720/5950	45	01
17	0521010572	0.9" X 2.9" COUPLING SHAFT		01
18	0503030085	LOCK PIN		04
19	0521063528	EXTENDING FIXER		01
20	0501010171	BOLT 1 UNC X 3.1/2 C S G.5		03
21	0503010012	1" SPRING WASHER		03
22	0501010059	1.5/8 NUT		03
23	0521062916	LEFT FRENCH HAND		01
24	0521010585	0.9" X 5.9" COUPLING SHAFT		01
25	0511052311	3 POINT TURNBUCKLE	46	01
26	0521012532	0.9" X 3.9" COUPLING SHAFT		01
27	0521010582	COUPLING SHAFT		01
28	0521063529	LOCK AXLE		01
29	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01

TRACTOR HITCH


0511055096

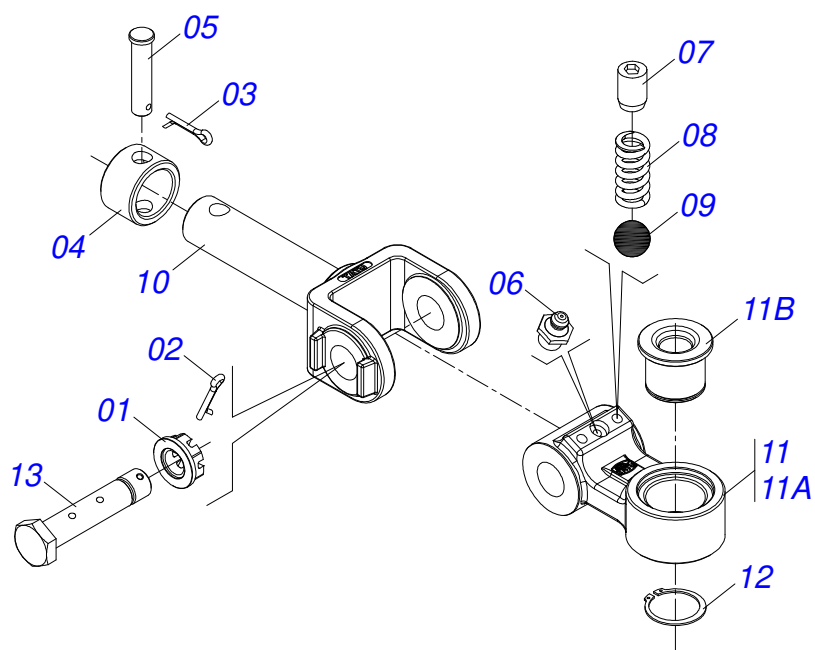


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	COMPRESSION SPRING LEFT		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

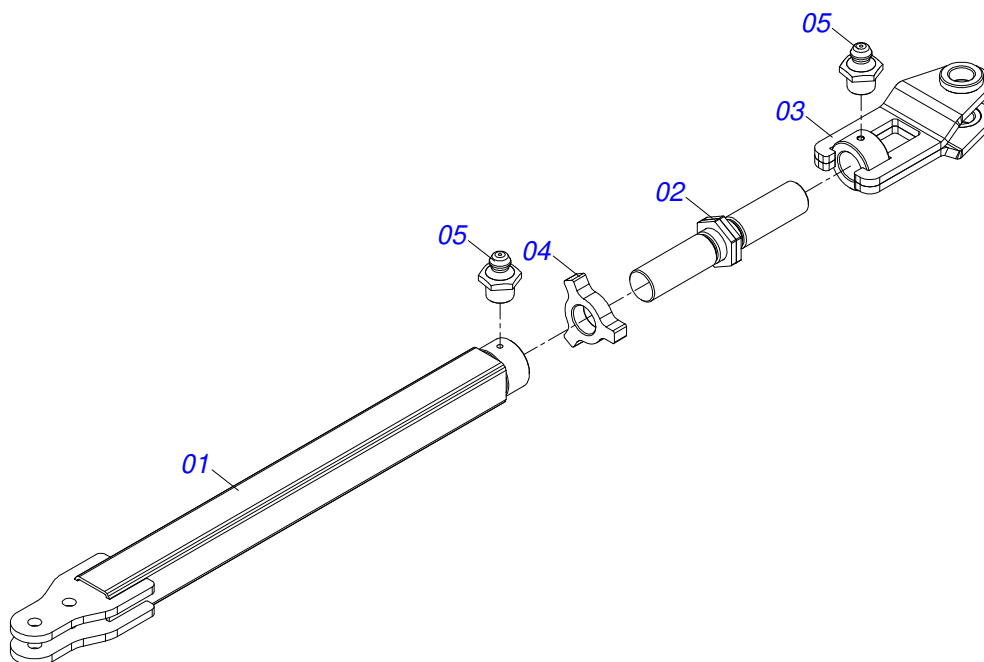


Item	Code	Description	See page	QT
01	0521064426	POINT FIXER EXTENDING LEFT		01
02	0501078990	TURNBUCLE AXLE		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0503010002	1800 GREASE FITTING		02

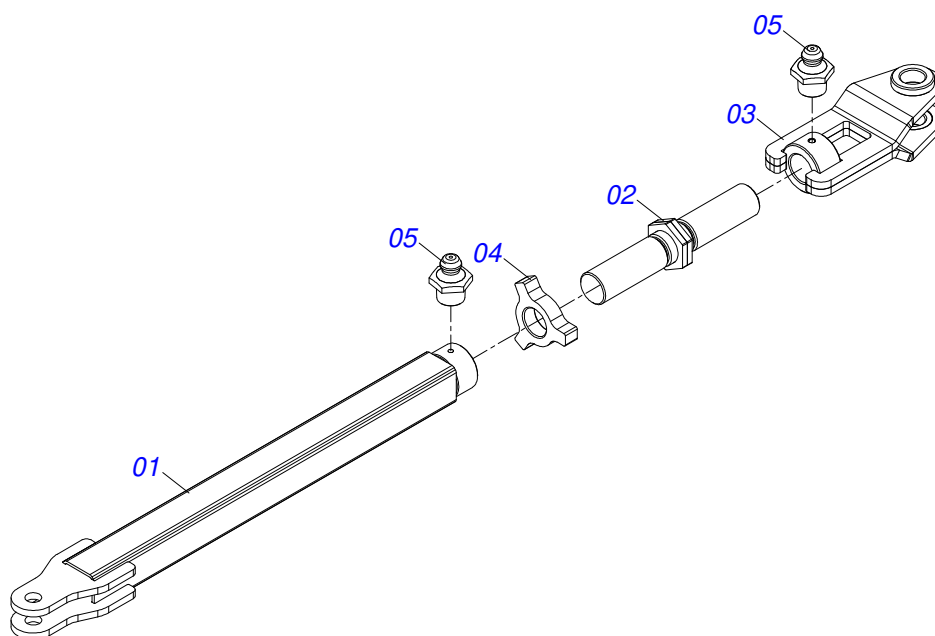

Item	Code	Description	See page	QT
01	0521064425	POINT FIXER EXTENDING RIGHT		01
02	0501078990	TURNBUCLE AXLE		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0503010002	1800 GREASE FITTING		02

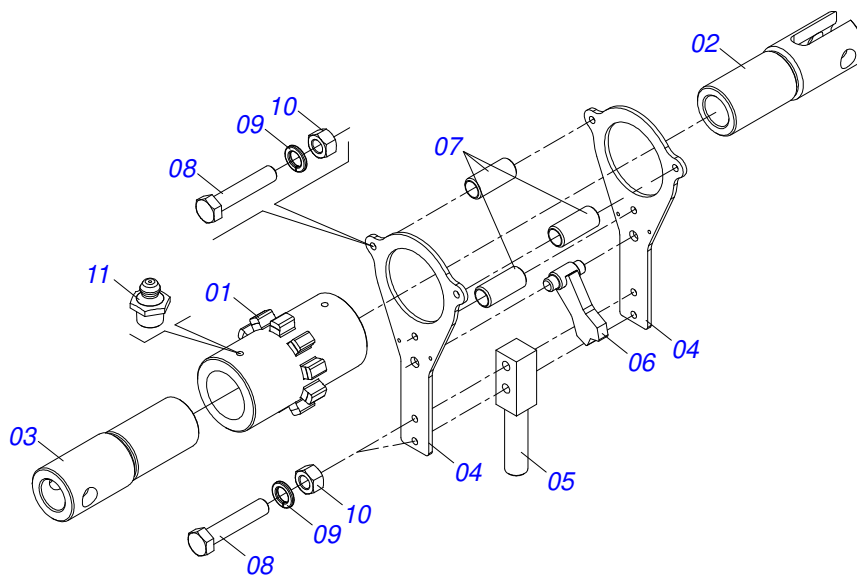


Item	Code	Description	See page	QT
01	0502012783	STABILIZER BODY GREATER		01
02	0571012279	JACK RIGHT		01
03	0571012280	JACK LEFT		01
04	0531010264	SIDE RATCHET		02
05	0521018500	SHAFT LEVER EXTENSOR		01
06	0511061881	RATCHET FOLLOWER		01
07	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
08	0503011179	3/8" X 2-1/4" BOLT		05
09	0503011443	3/8" SPRING WASHER		05
10	0503010026	3/8" NUT		05
11	0503010002	1800 GREASE FITTING		02

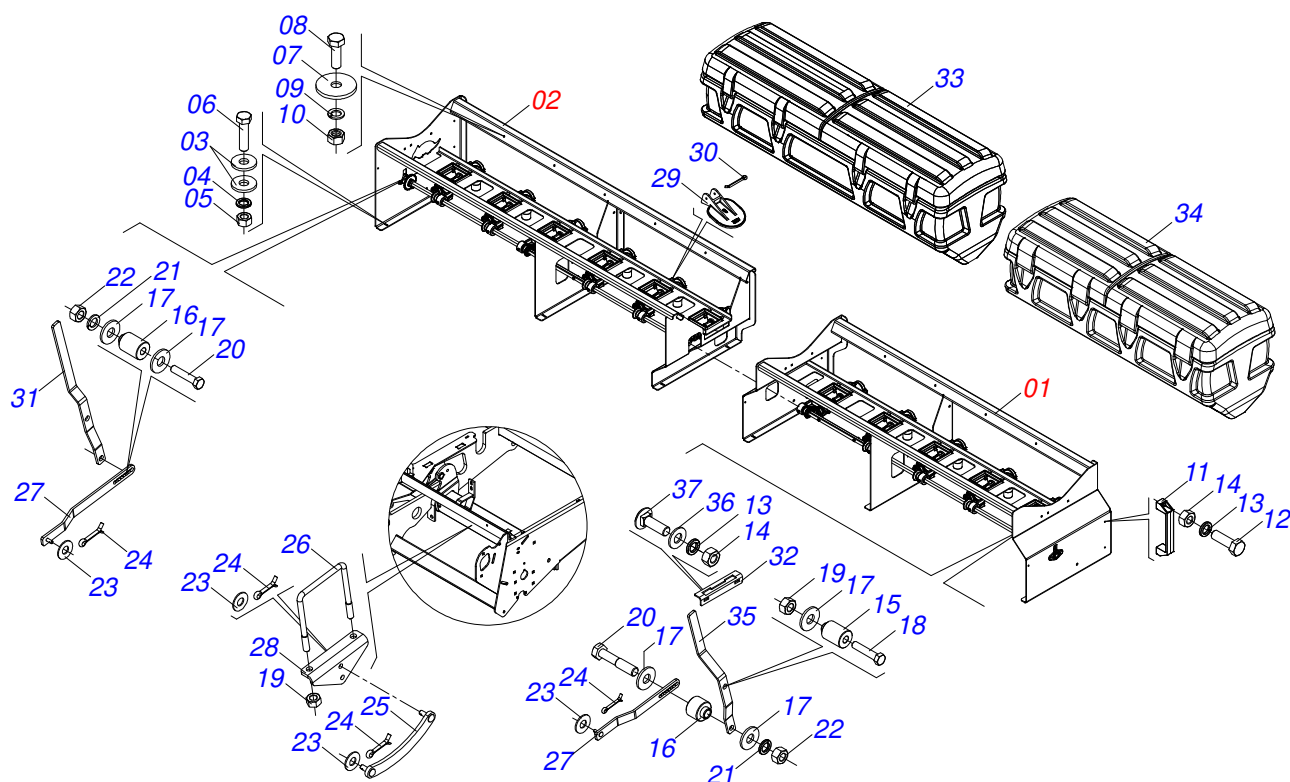


Item	Code	Description	See page	QT
01	0521056837	SILO SUPPORT LEFT FERTILIZER WITH 49 DISTRIBUTOR 4790 RIGHT MACHINE	01	01
02	0521056836	SILO SUPPORT FERTILIZER RIGHT WITH 48 DISTRIBUTOR 4790 RIGHT MACHINE	01	01
03	0501010984	FLAT WASHER		24
04	0503010025	3/8" SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0503010849	3/8" X 1-1/2" BOLT		12
07	0571019051	FIXER BOX WASHER		18
08	0503013751	3/8 UNC X 1.1/4 BOLT		18
09	0503012535	3/8" SPRING WASHER		18
10	0503012531	3/8" INOX NUT		18
11	0503011957	NYLON LUG		01
12	0503010371	5/16" X 1" BOLT		02
13	0503010179	5/16" ZN SPRING WASHER		06
14	0503010337	5/16" NUT		06
15	0551019168	SLEEVE		02
16	0551019167	SLEEVE UNION		02
17	0511017302	FLAT WASHER		06
18	0503010479	BOLT		02
19	0503011336	1/2" HEX SELF ADJUSTING NUT		06
20	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
21	0503010019	1/2" SPRING WASHER		02
22	0503010060	1/2" NUT		02
23	0501013518	FLAT WASHER		06
24	0503010140	1/8" X 3/4" COTTERPIN		06
25	0511069678	LH LOWER LEVER		02
26	0561016468	FASTENER		02
27	0521061741	INNTER LEVER		02
28	0551019159	LEVER FIXER BODY		02
29	0503034396	FERTILIZER SIDE COVER		11
30	0503010362	1/8" X 1.1/4" COTTERPIN		11




Item	Code	Description	See page	QT
31	0551019160	LEVER		01
32	0581012605	GEAR BOX LEVER LOCK		02
33	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED		01
34	0503062391	SILO FERTILIZER 05 MOUTHS		01
35	0591011630	ARM / DISARM LEVER 4790		01
36	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
37	0503011953	5/16" X 1" BOLT		04

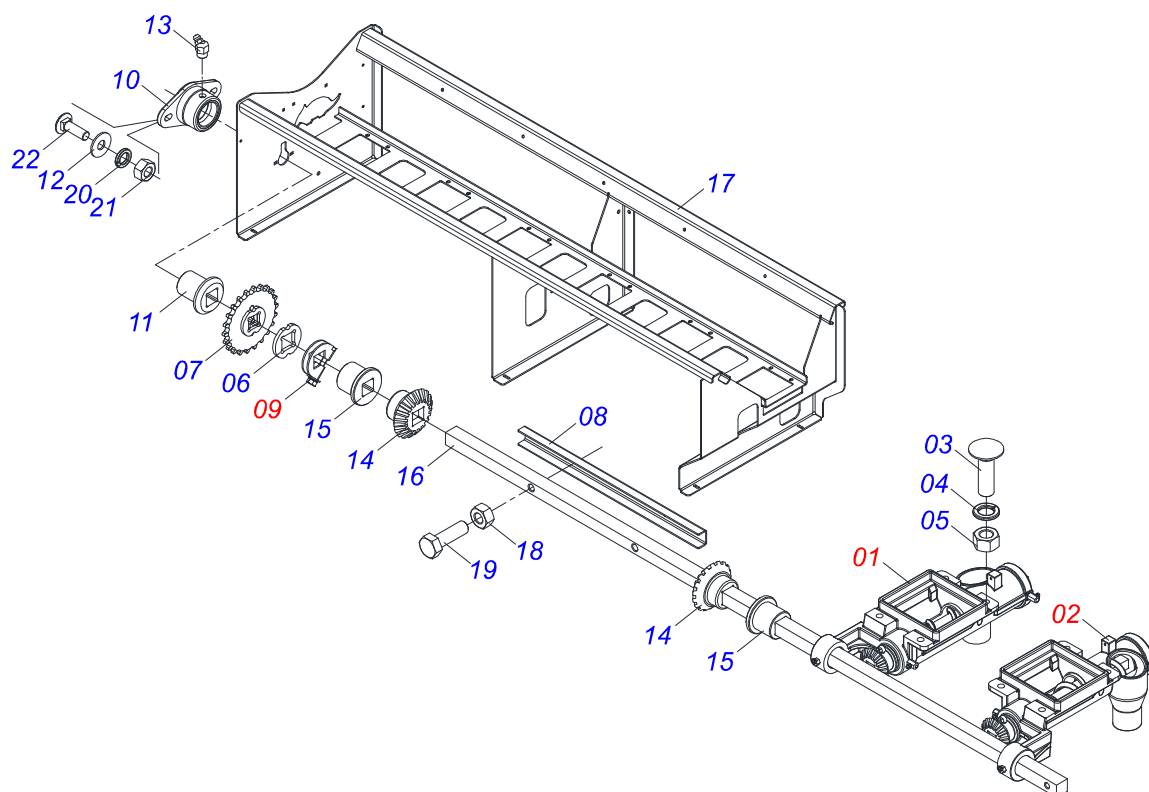


Item	Code	Description	See page	QT
01	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	50	02
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51	04
03	0501010942	3/8" X 1-1/4" BOLT		24
04	0503010025	3/8" SPRING WASHER		24
05	0503010026	3/8" NUT		24
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0501053788	Q3/4" FASTENER AXLE ASSY	52	01
10	0501110392	SILO SUPPORT BEARING		01
11	0521012485	GEAR BOX BEARING AGRICUTURAL		01
12	0521011039	FLAT WASHER		02
13	0503010003	1845 GREASE FITTING		01
14	1902010685	18Z CONICAL GEAR		06
15	0503030275	AGRICULTURAL BEARING		06
16	0591011631	3/4 X 2280 SQUARE SHAFT		01
17	0531060344	RIGHT SUPPORT SILO FERTILIZER 4790 RIGHT MACHINE		01
18	0503013816	5/16" LOCKNUT		02
19	0503011953	5/16" X 1" BOLT		02
20	0503010337	5/16" NUT		02
21	0503010179	5/16" ZN SPRING WASHER		02
22	0503010365	NUT		02

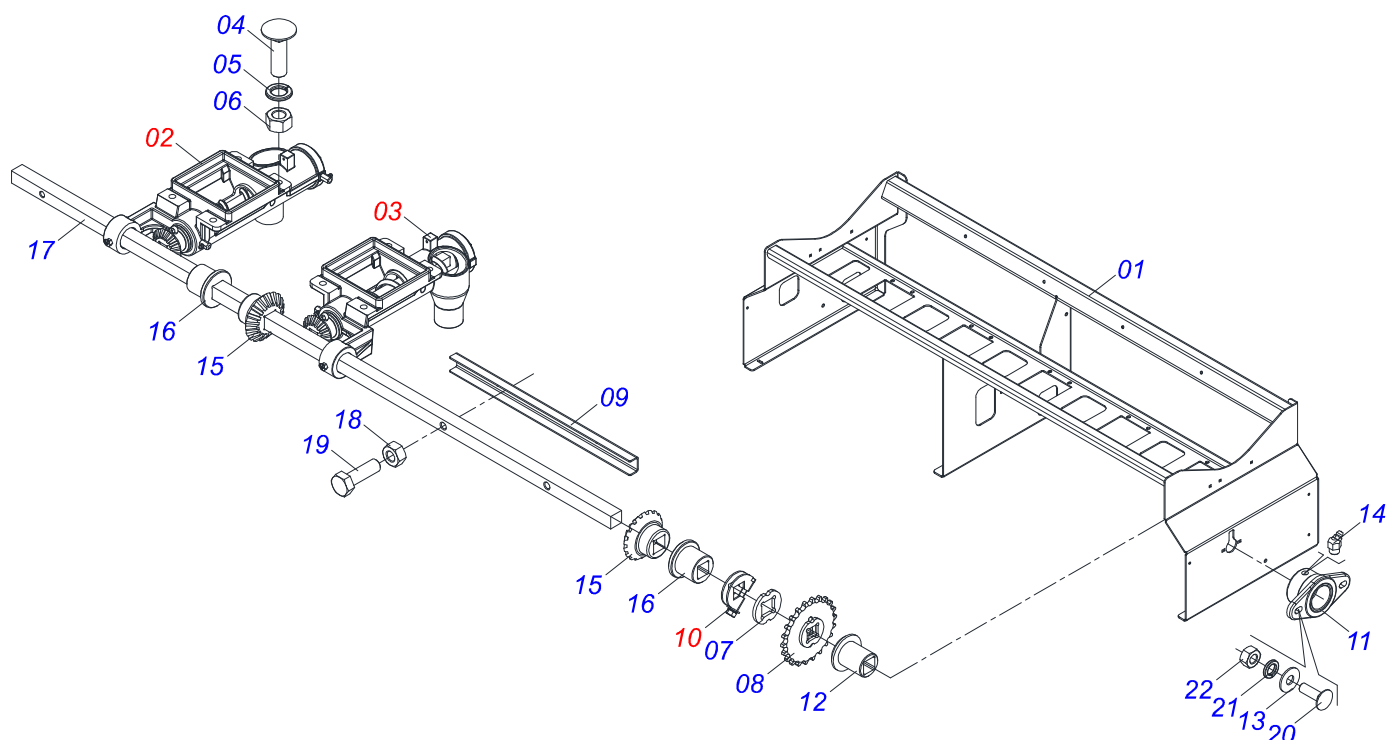


Item	Code	Description	See page	QT
01	0531060345	LEFT SUPPORT SILO FERTILIZER 4790 RIGHT MACHINE		01
02	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	50	01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51	04
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503010025	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0501053788	Q3/4" FASTENER AXLE ASSY	52	01
11	0501110392	SILO SUPPORT BEARING		01
12	0521012485	GEAR BOX BEARING AGRICUTURAL		01
13	0521011039	FLAT WASHER		02
14	0503010003	1845 GREASE FITTING		01
15	1902010685	18Z CONICAL GEAR		05
16	0503030275	AGRICULTURAL BEARING		05
17	0591011639	3/4 X 2046 SQUARE SHAFT		01
18	0503013816	5/16" LOCKNUT		02
19	0503010365	NUT		02
20	0503011953	5/16" X 1" BOLT		02
21	0503010179	5/16" ZN SPRING WASHER		02
22	0503010337	5/16" NUT		02

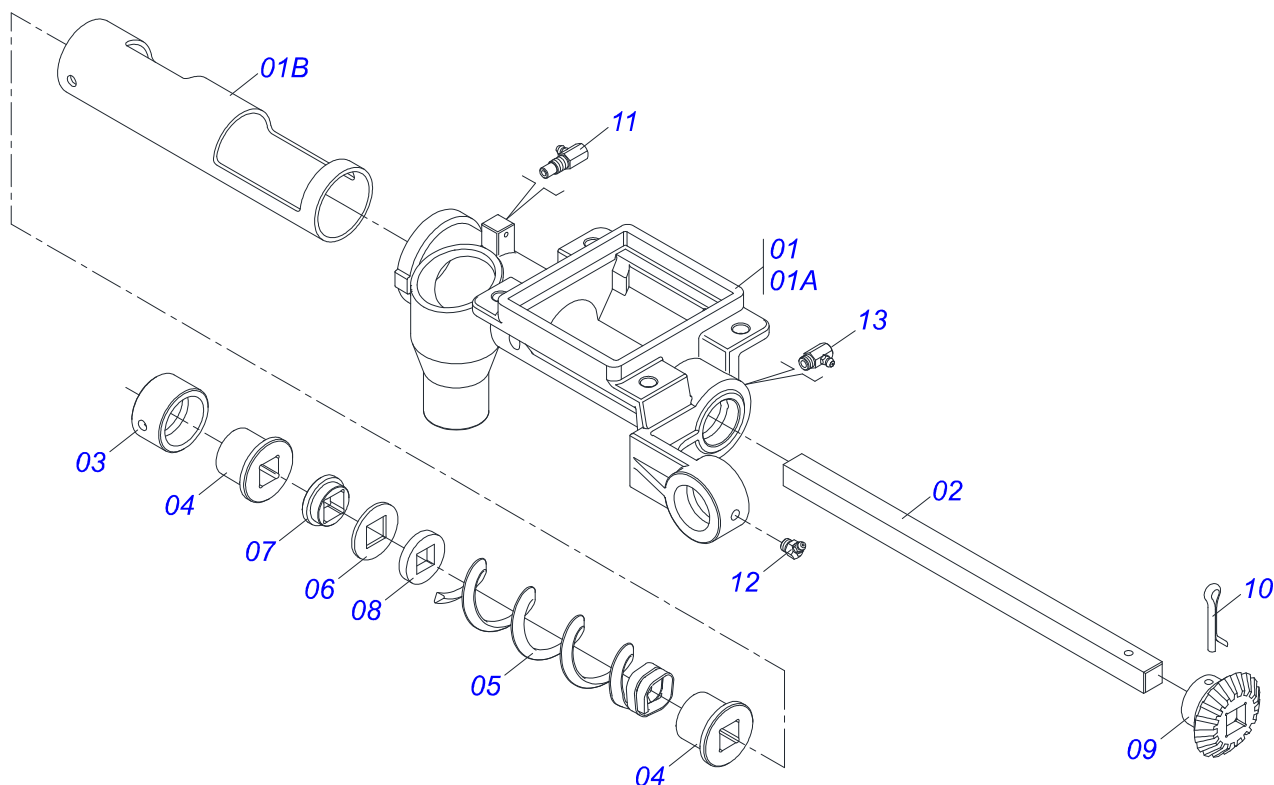


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

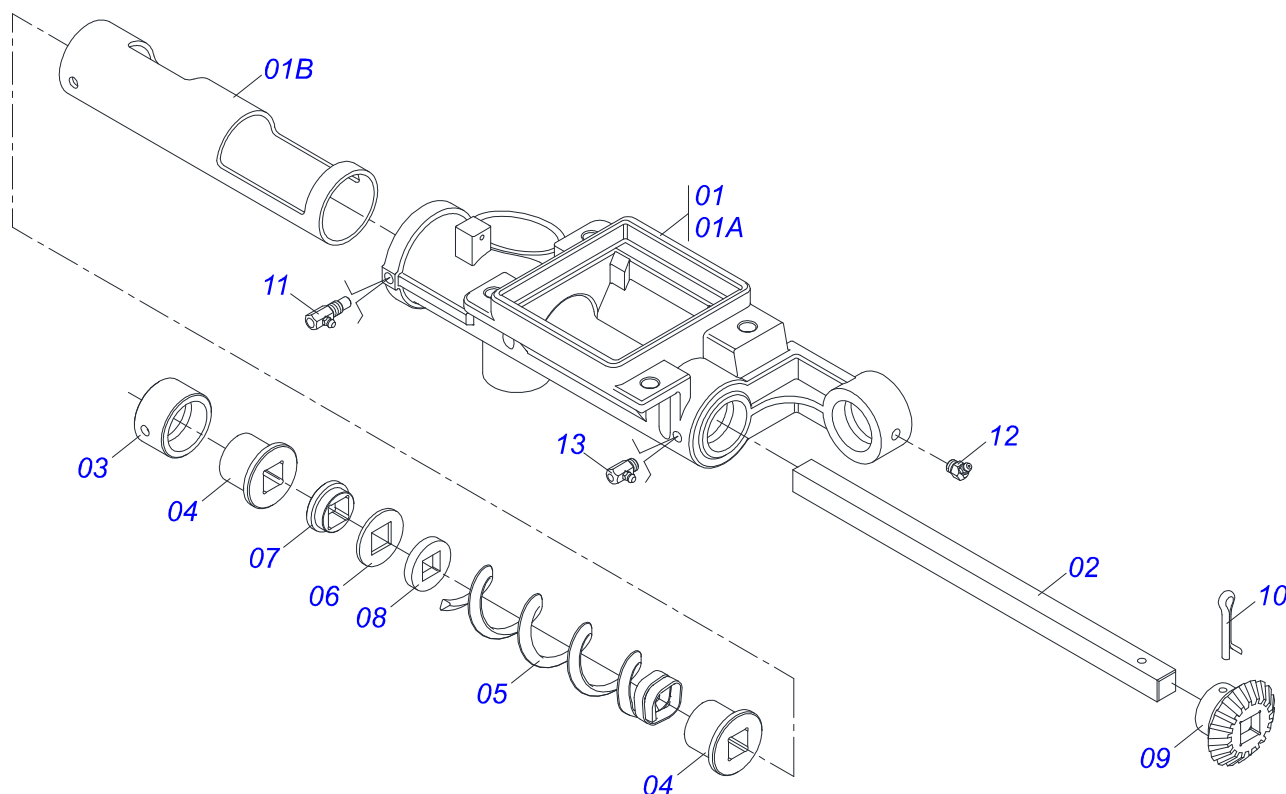


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

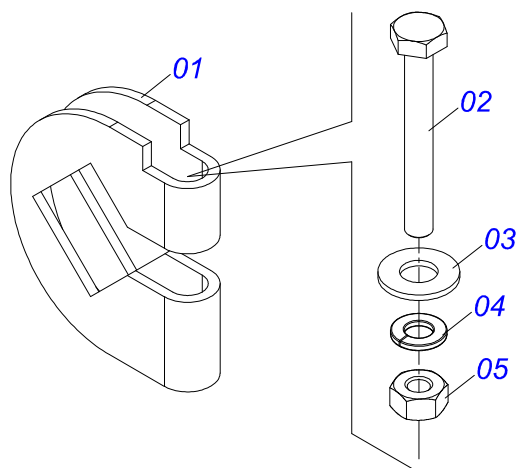


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511817303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

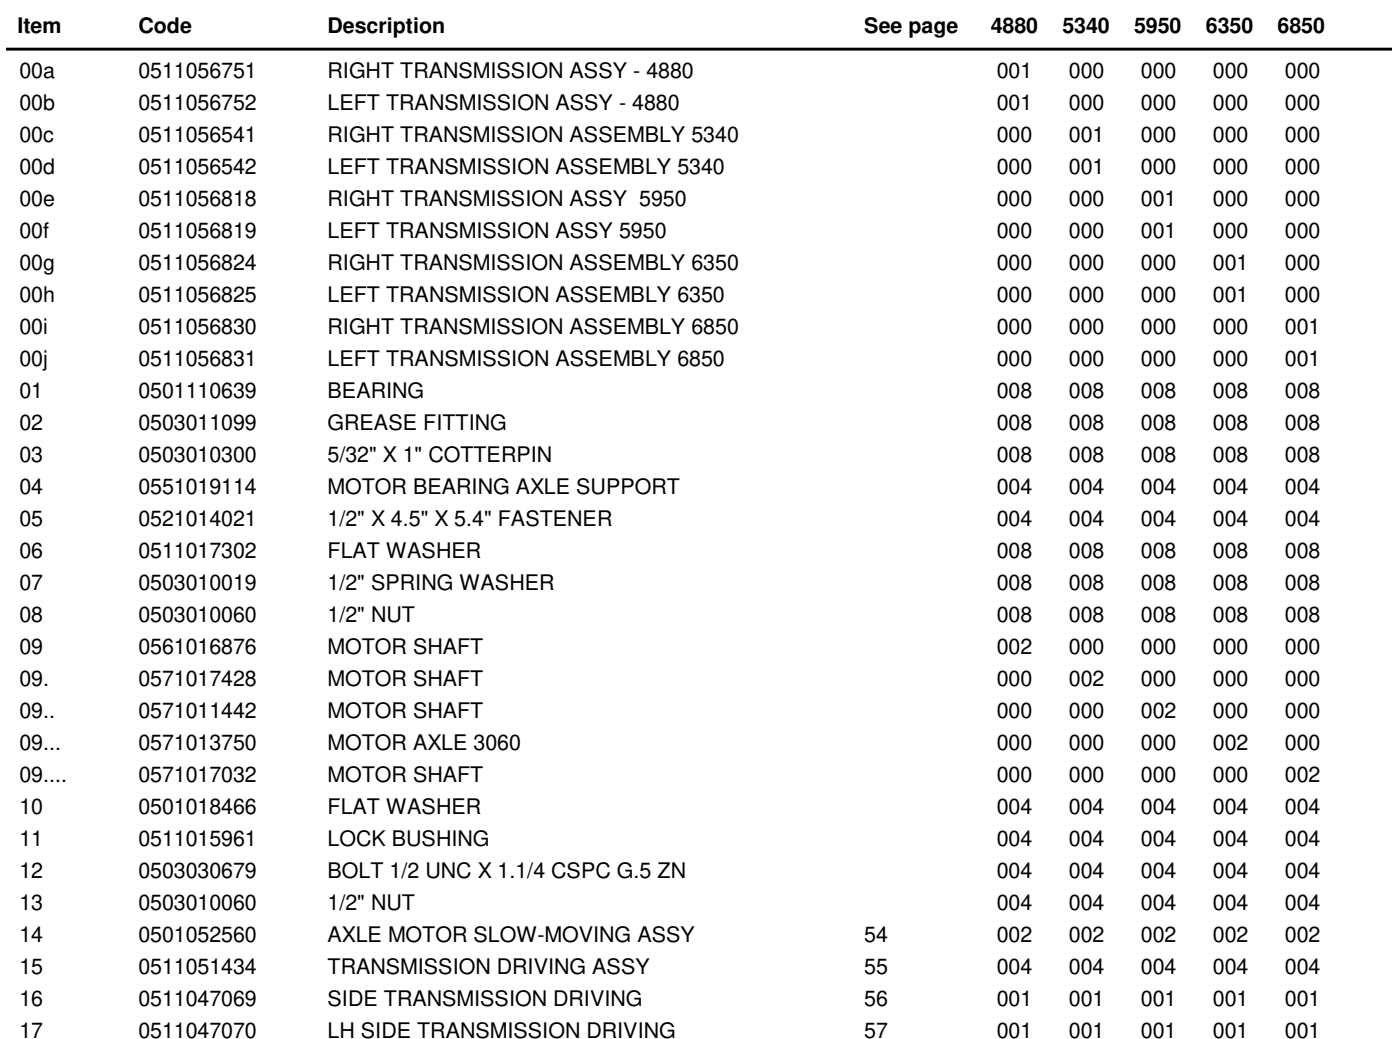


Item	Code	Description	See page	4880	5340	5950	6350	6850
18	0521043316	RIGHT GEAR BOX ASSY	58	001	001	001	001	001
19	0521043317	LEFT GEAR BOX ASSY	59	001	001	001	001	001
20	0503014734	BOLT		006	006	006	006	006
21	0503010920	1/2" X 1.1/2" BOLT		004	004	004	004	004
22	0511017302	FLAT WASHER		008	008	008	008	008
23	0503010019	1/2" SPRING WASHER		010	010	010	010	010
24	0503010060	1/2" NUT		010	010	010	010	010
25	0521064448	GEAR		002	002	002	002	002
26	0501055112	MICRO GRANULATED CHAIN TENSIONER	70	002	002	002	002	002
27	0521055217	LOWER CURRENT STRETCH	71	002	002	002	002	002
28	0501058254	UPPER SEED CHAIN TENSIONER	72	002	002	002	002	002
29	0521055216	BEARING WITH GEAR	73	002	002	002	002	002
30	0521055218	BEARING GEAR WITH DOUBLE	74	002	002	002	002	002
31	0521055214	BEARING GEAR WITH	75	002	002	002	002	002
32	0503012204	40-1 CHAIN X 82 LINK + RED		002	002	002	002	002
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		002	002	002	002	002
34	0503012718	40-1 CHAIN X 111 LINK + MENDING		002	002	002	002	002
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		002	002	002	002	002
36	0503010256	3/8" X 3/4" BOLT		002	002	002	002	002
37	0503010025	3/8" SPRING WASHER		002	002	002	002	002
38	0501010984	FLAT WASHER		002	002	002	002	002
39	0501010637	FLAT WASHER		004	004	004	004	004
40	0503030275	AGRICULTURAL BEARING		002	002	002	002	002
41	0511054363	CHAIN TENSIONER	77	002	002	002	002	002

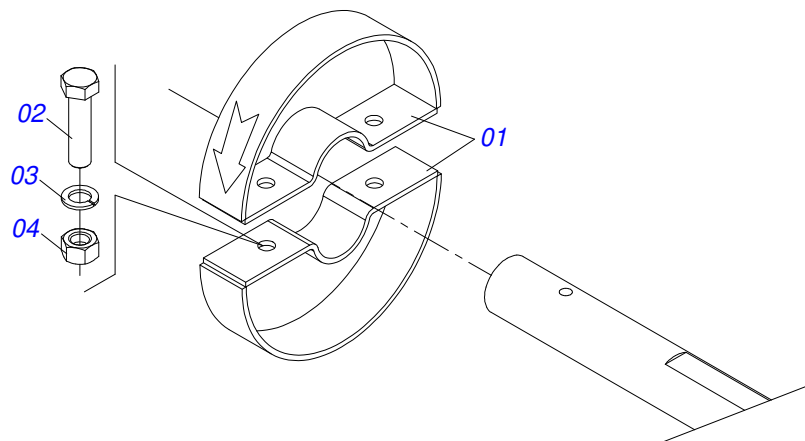


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	5/16" X 3/4" BOLT		02
03	0503010179	5/16" ZN SPRING WASHER		02
04	0503010337	5/16" NUT		02

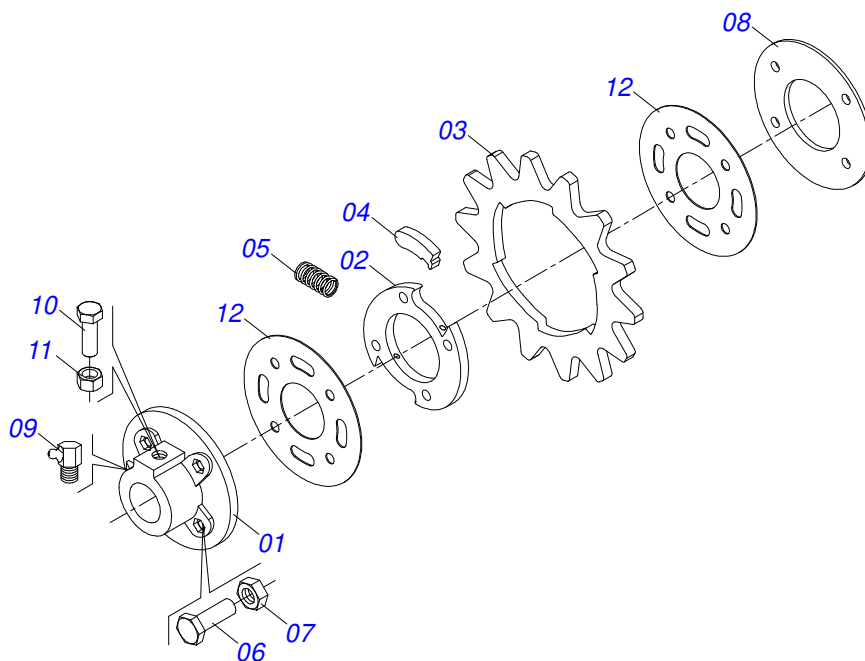

Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

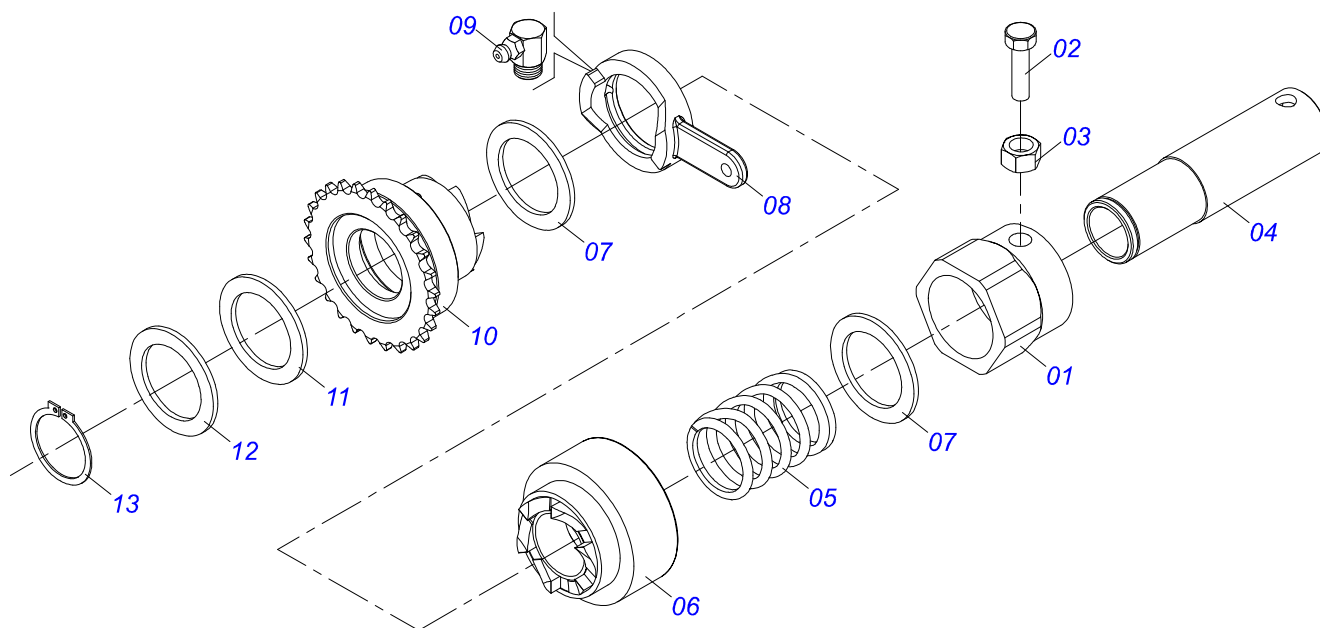


Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

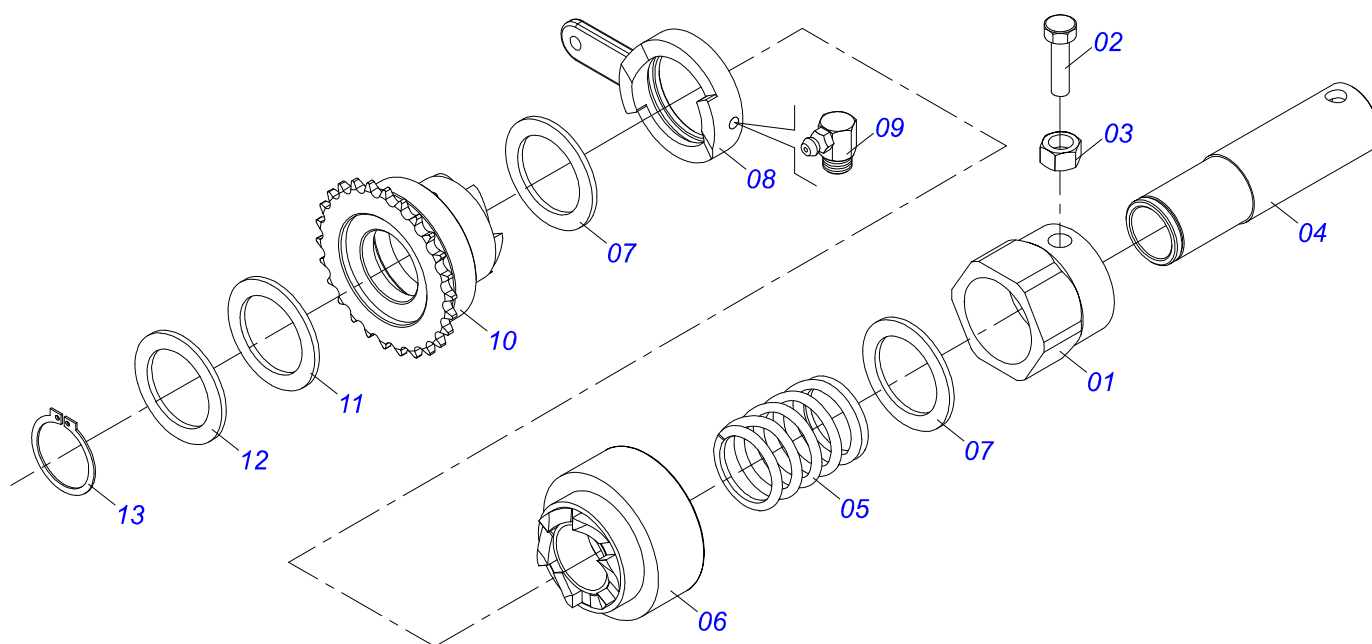

Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

RIGHT GEAR BOX ASSY


0521043316

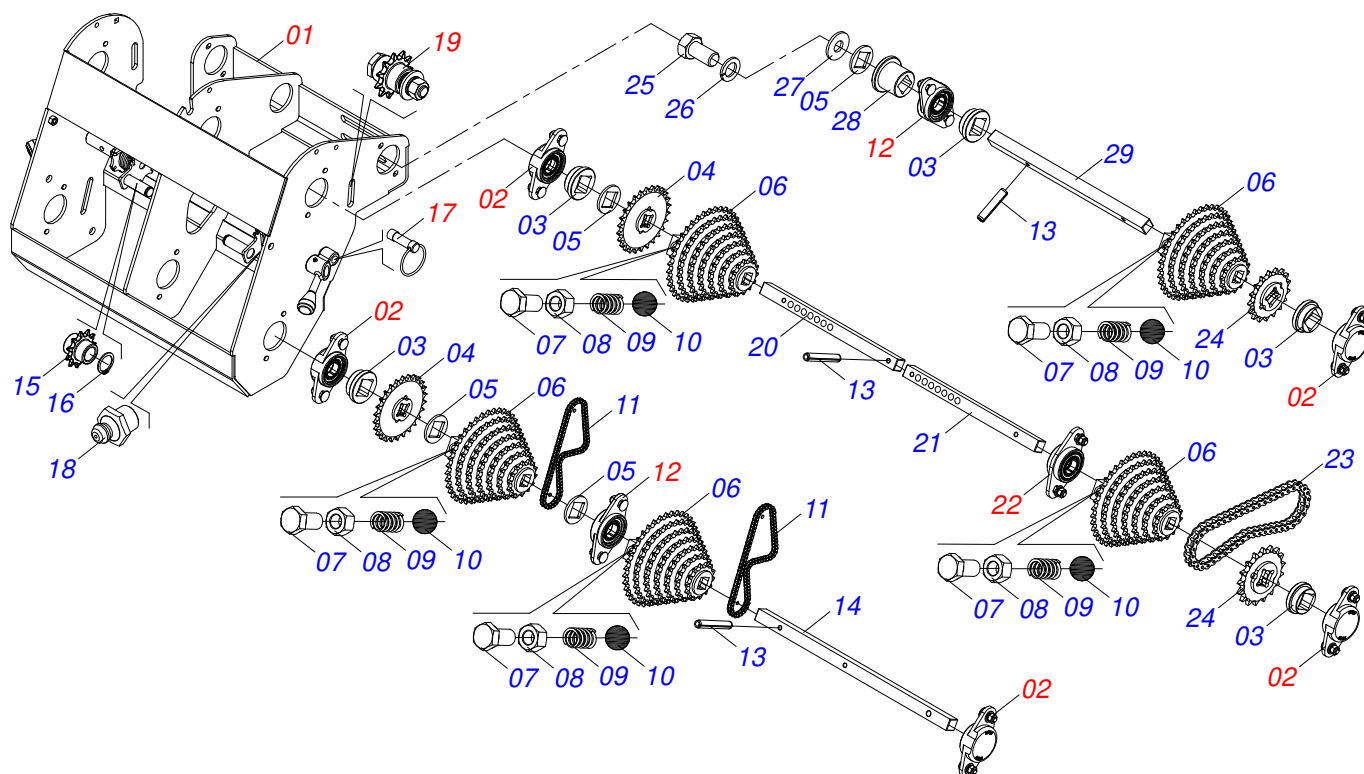


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	60	01
02	0511059266	CLOSED BEARING	62	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN AXLE CONE		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2" NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	BEARING ASSY GEAR BOX	64	02
13	0503010292	0.2" X 1.6" SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH LINK ASSY	66	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	67	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	68	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8" SPRING WASHER		01
27	0501010984	FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

LEFT GEAR BOX ASSY


0521043317

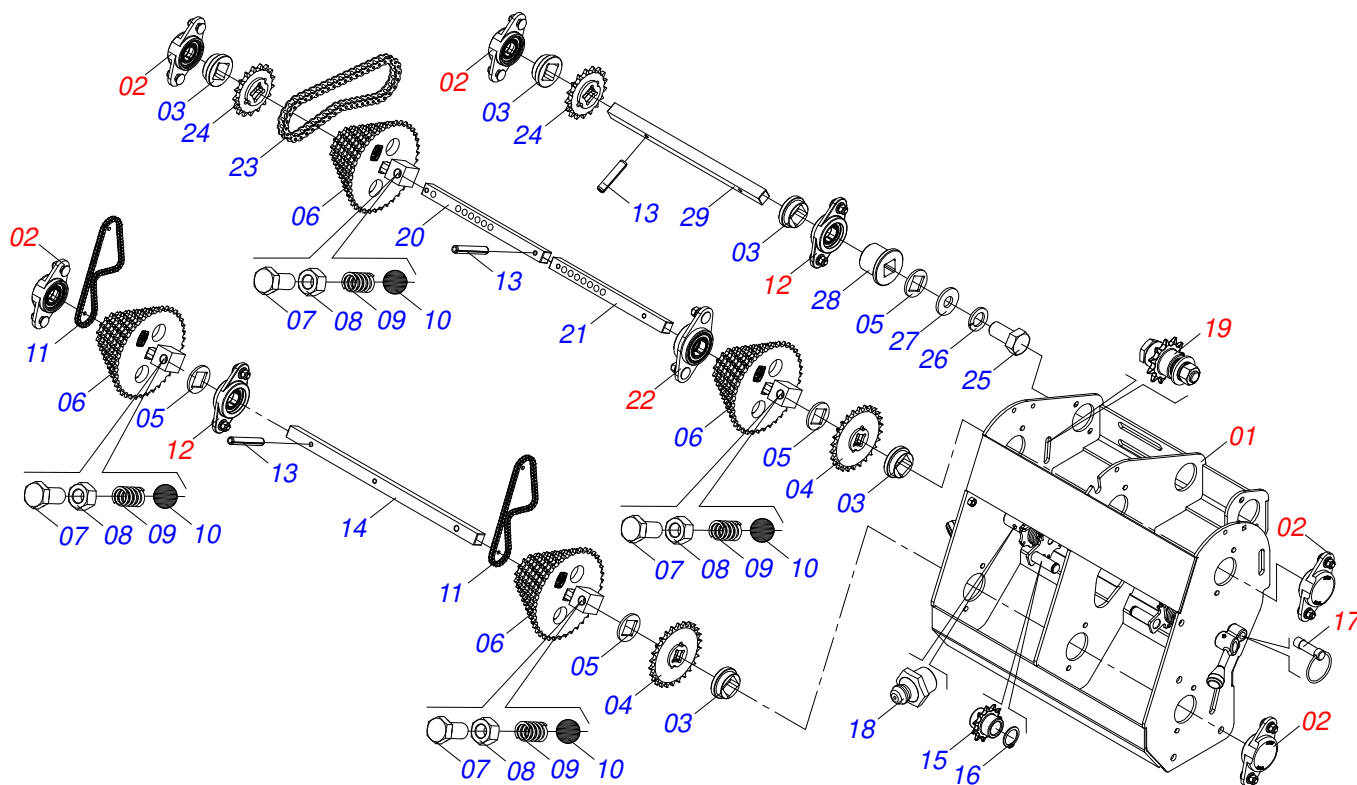


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	61	01
02	0511059266	CLOSED BEARING	62	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN AXLE CONE		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2" NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	BEARING ASSY GEAR BOX	64	02
13	0503010292	0.2" X 1.6" SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH LINK ASSY	66	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	67	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	68	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8" SPRING WASHER		01
27	0501010984	FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

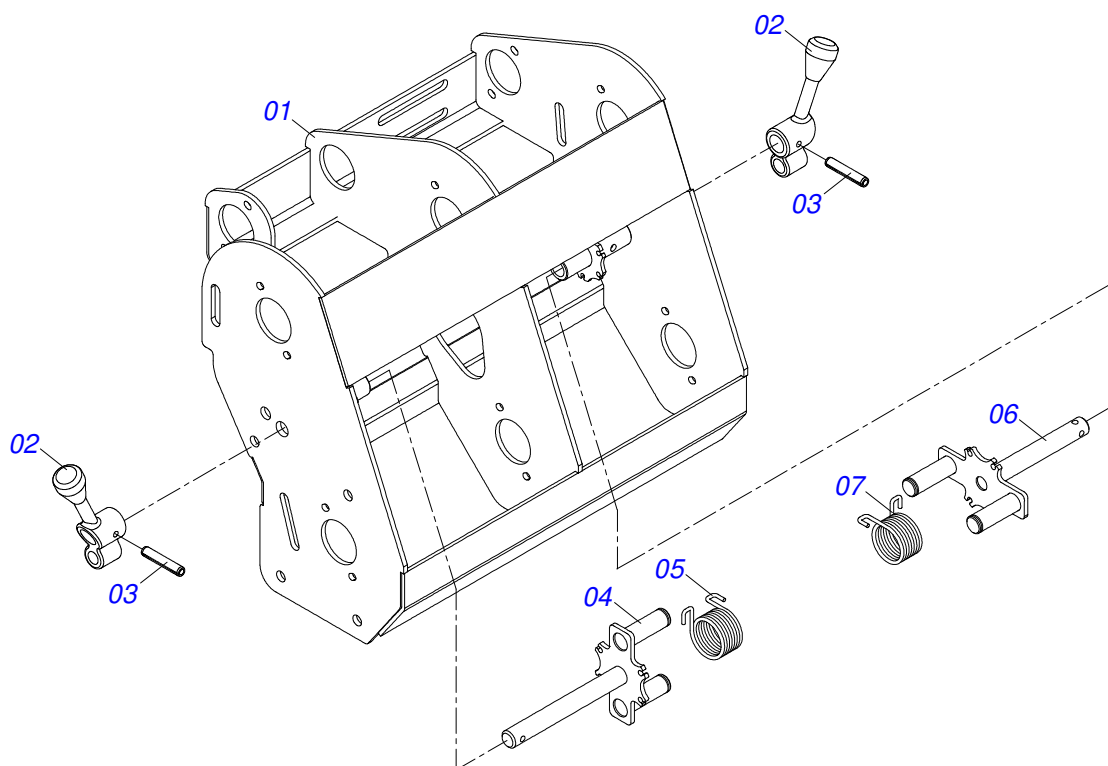


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

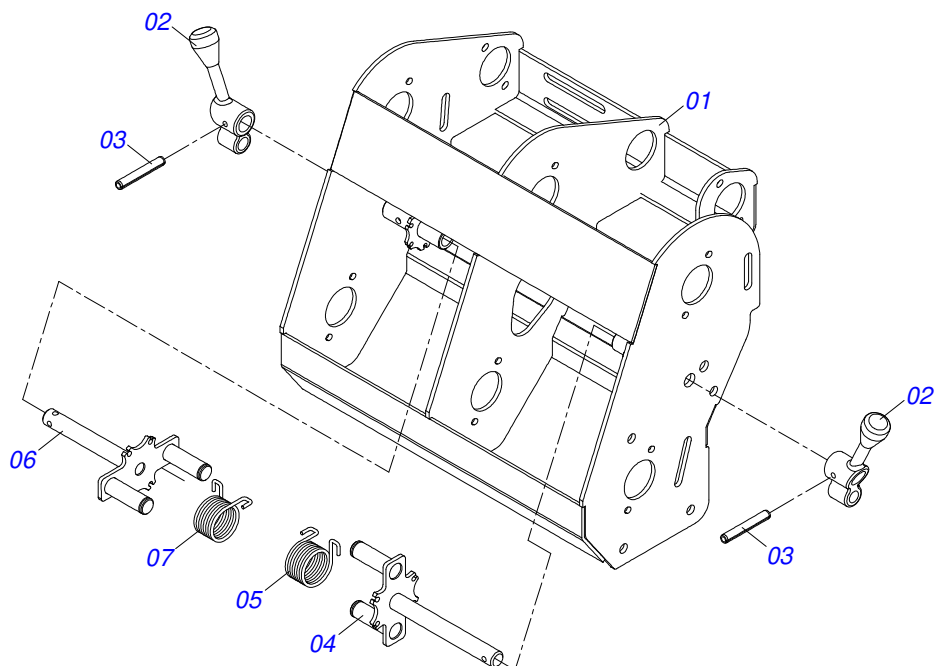


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

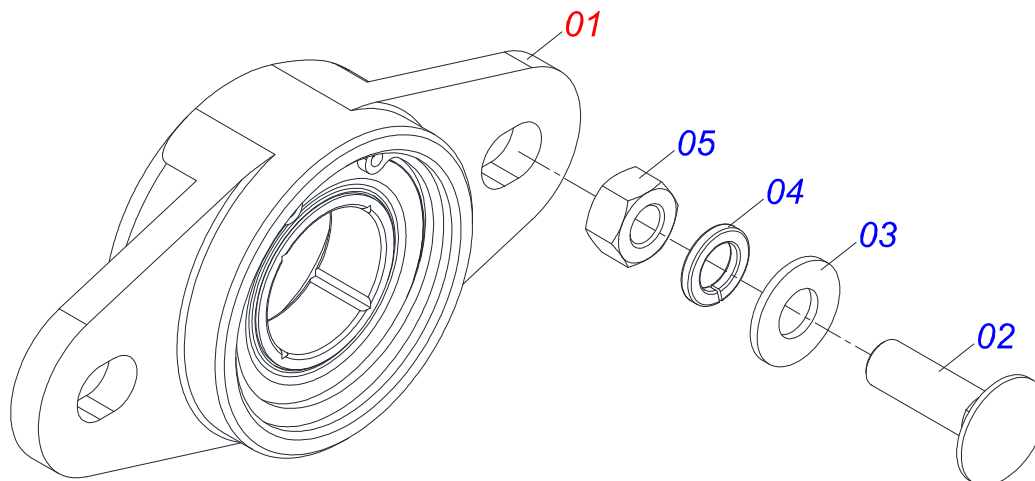


Item	Code	Description	See page	QT
01	0501056271	BEARING CLOSED	63	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

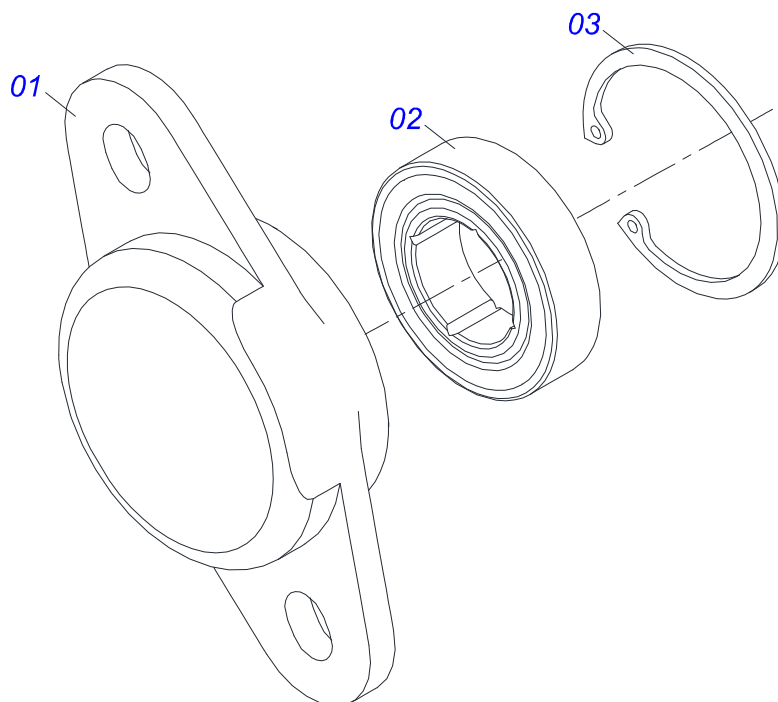


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

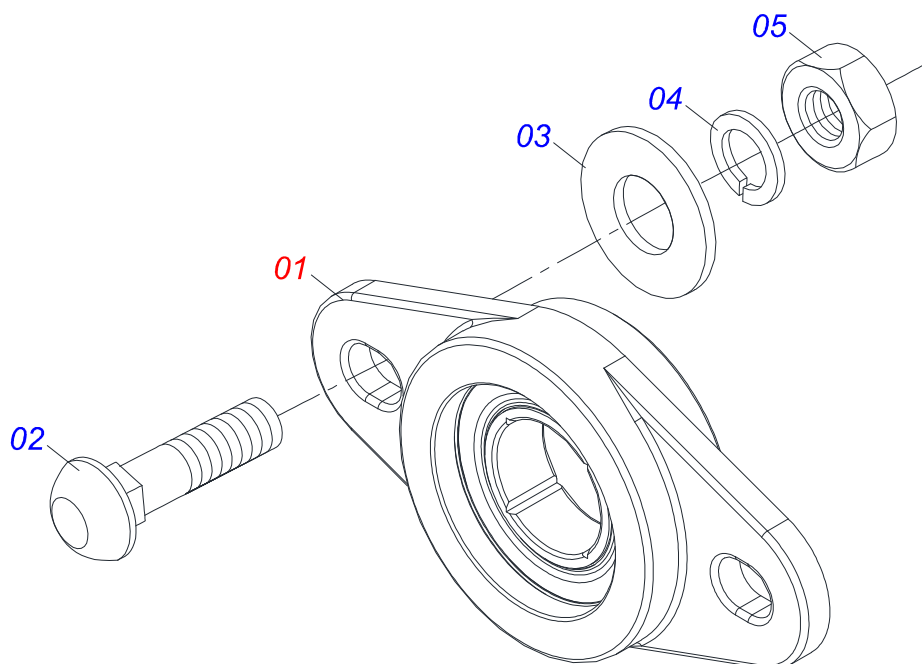


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	65	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

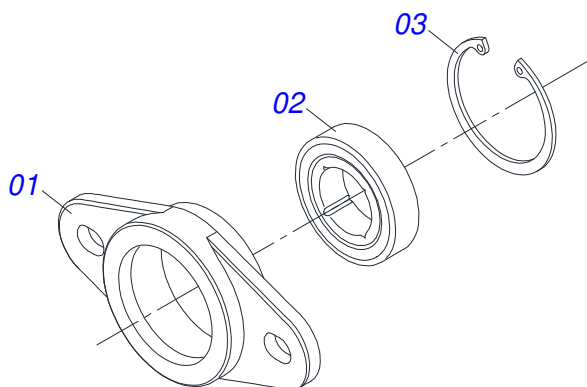


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

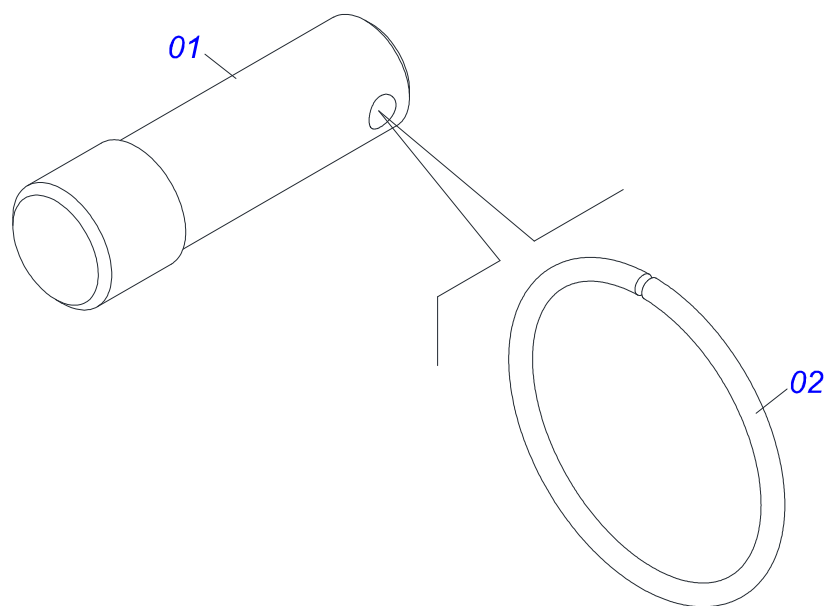


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

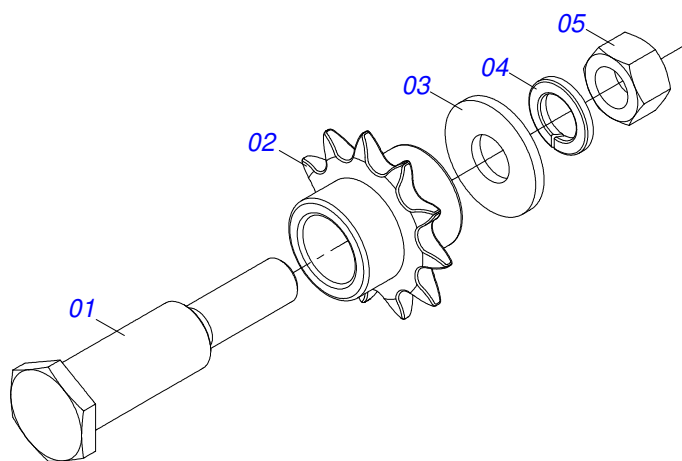


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

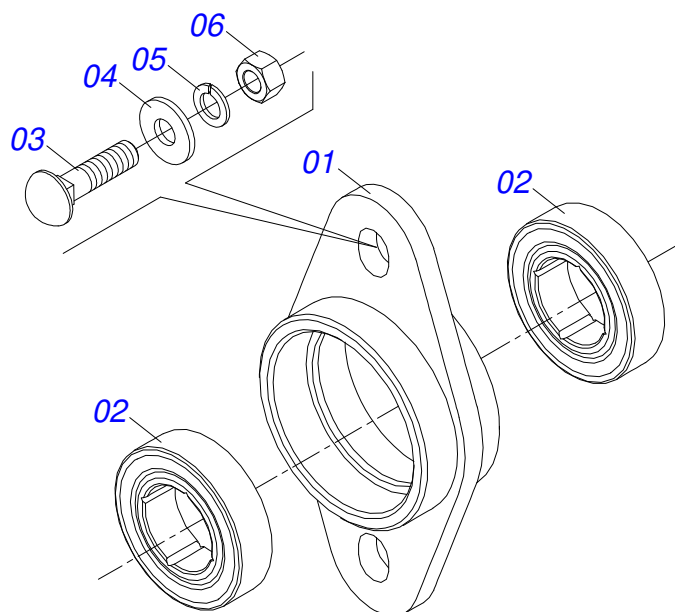


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
05	0503010179	5/16" ZN SPRING WASHER		02
06	0503010337	5/16" NUT		02

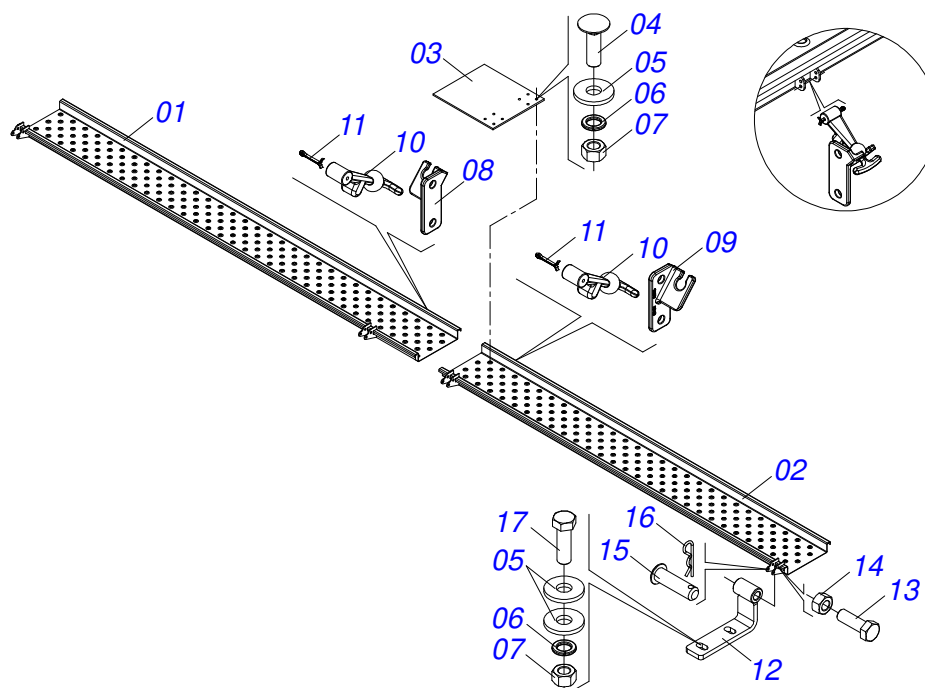


Item	Code	Description	See page	QT
01	0531060348	PLATFORMS RIGHT 4790 RIGHT MACHINE	01	
02	0531060349	PLATFORMS LEFT 4790 RIGHT MACHINE	01	
03	0581015863	PLATFORM ENHANCEMENT PROTECTION	01	
04	0501010942	3/8" X 1-1/4" BOLT	02	
05	0501010984	FLAT WASHER	18	
06	0503010025	3/8" SPRING WASHER	10	
07	0503010026	3/8" NUT	10	
08	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
09	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
10	0503011333	COVER FIXER	02	
11	0503010274	5/32"X 2" COTTERPIN	02	
12	0521068316	JOINT SUPPORT	04	
13	0503010741	1/2" X 2-3/4" BOLT	04	
14	0503011336	1/2" HEX SELF ADJUSTING NUT	04	
15	0521010549	COUPLING SHAFT	04	
16	0503030168	HAIR PIN	04	
17	0503010849	3/8" X 1-1/2" BOLT	08	

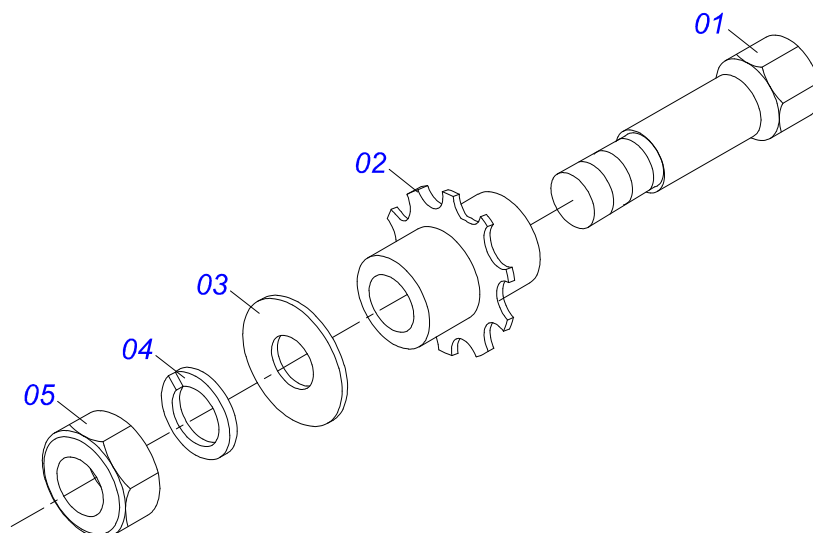


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

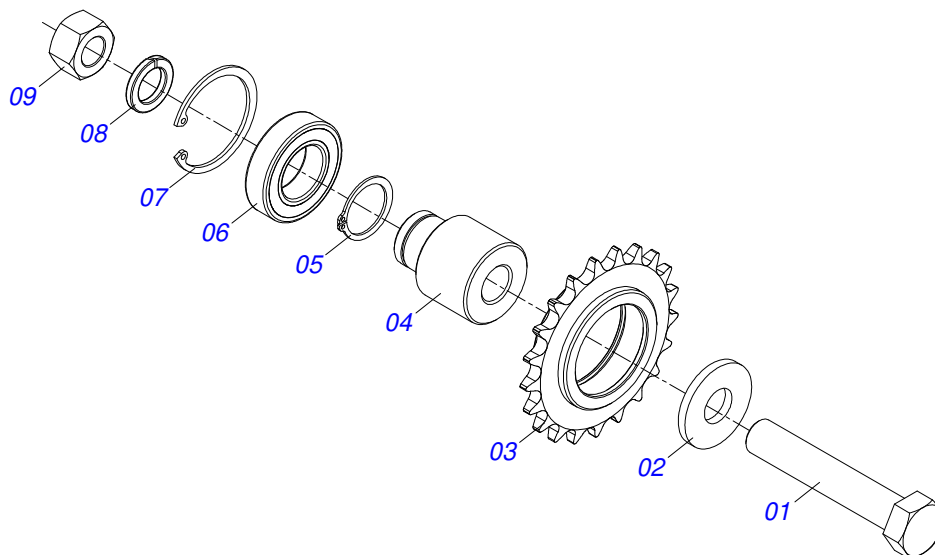


Item	Code	Description	See page	QT
01	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
02	0501012140	FLAT WASHER		01
03	0511062169	21Z P 1/2" GEAR		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503019356	BEARING 6005 2RS1		01
07	0503011105	SEAL RING		01
08	0503010027	5/8" SPRING WASHER		01
09	0503010013	5/8" NUT		01

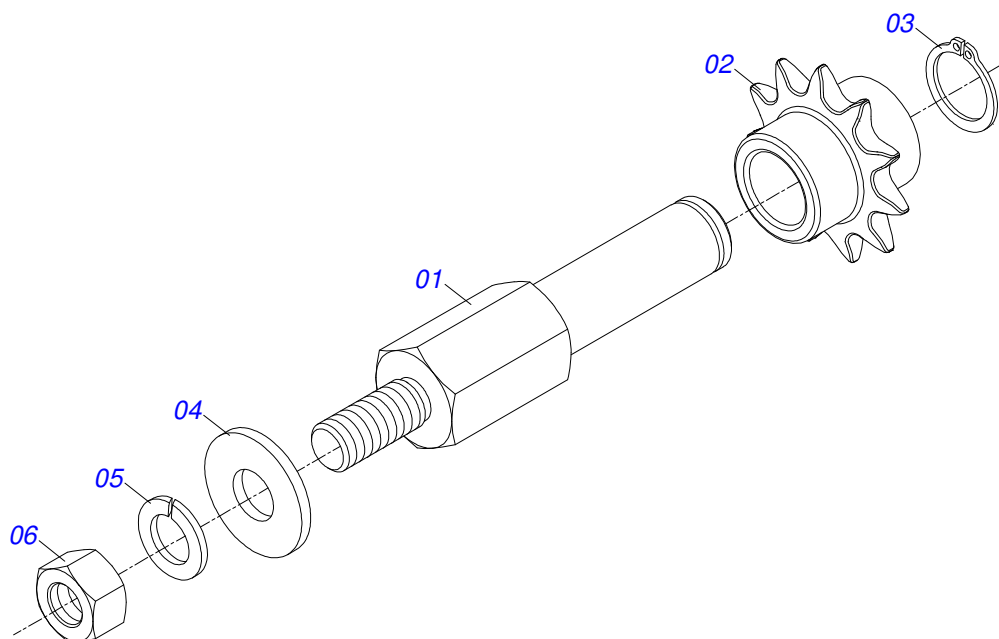


Item	Code	Description	See page	QT
01	0521018933	FERT CHAIN TENSIONER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

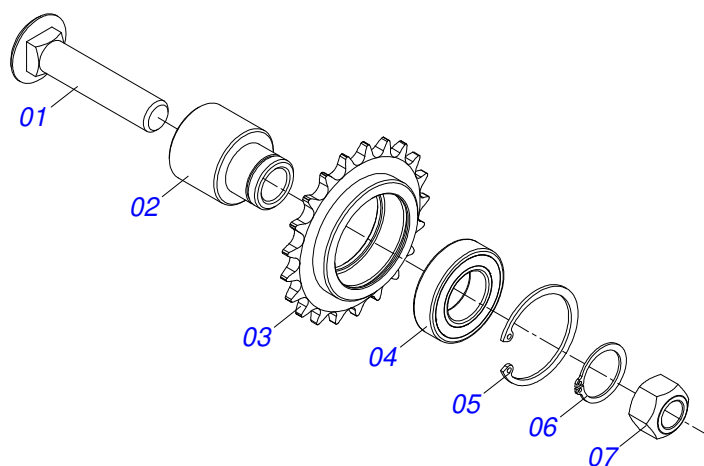


Item	Code	Description	See page	QT
01	0501011234	5/8" X 3" BOLT		01
02	0531017086	50 AXLETIGHTENER		01
03	0511062169	21Z P 1/2" GEAR		01
04	0503019356	BEARING 6005 2RS1		01
05	0503011105	SEAL RING		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01

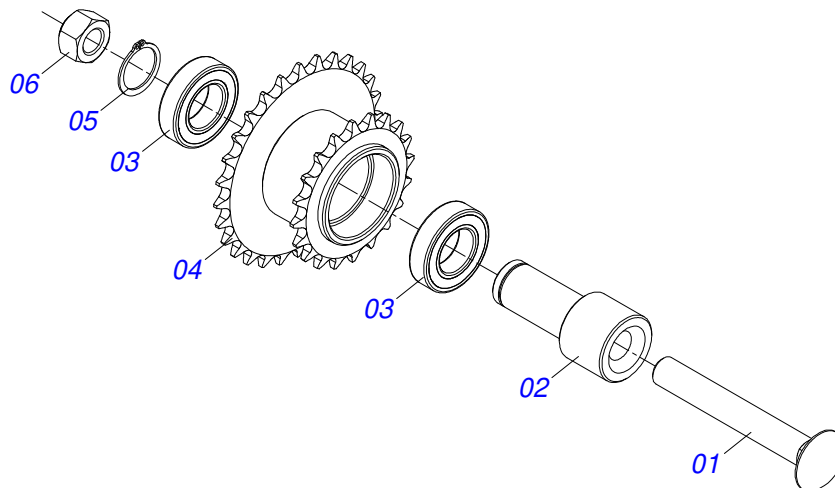


Item	Code	Description	See page	QT
01	0503016460	5/8" X 4.1/2" BOLT		01
02	0551019175	DOUBLE GEAR AXLE		01
03	0503019356	BEARING 6005 2RS1		02
04	0511069680	20Z X 28Z DOBLE GEAR		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503012412	5/8 UNC SELF LOCKING NUT		01

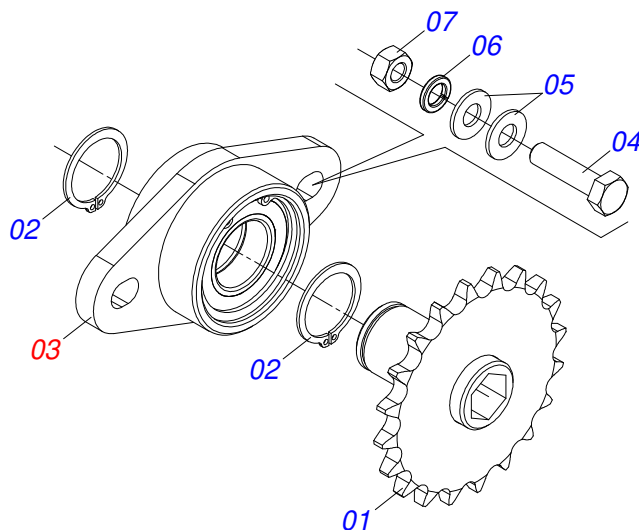


Item	Code	Description	See page	QT
01	0511063106	20Z AXLE BEARING DOBLE		01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		02
03	0521055215	DOUBLE TRANSMISSION BEARING	76	01
04	0503010365	NUT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02

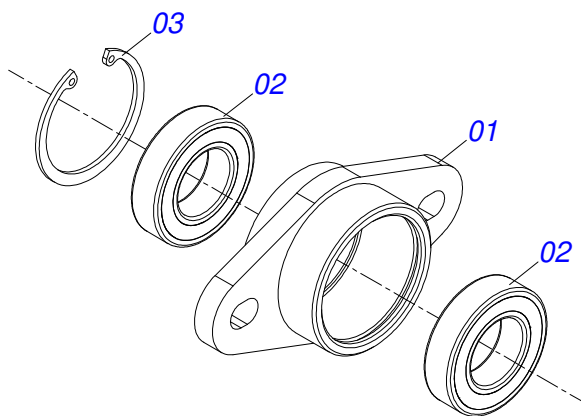


Item	Code	Description	See page	QT
01	0502011987	DOUBLE HOUSING BEARING		01
02	0503019356	BEARING 6005 2RS1		02
03	0503011105	SEAL RING		01

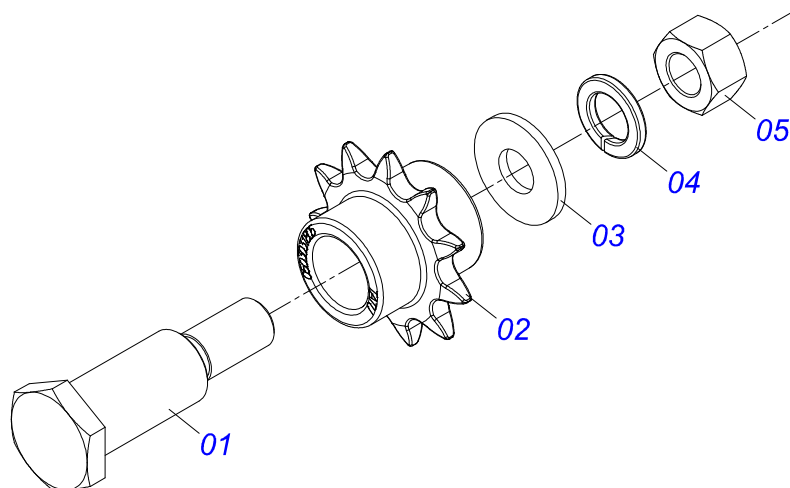


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

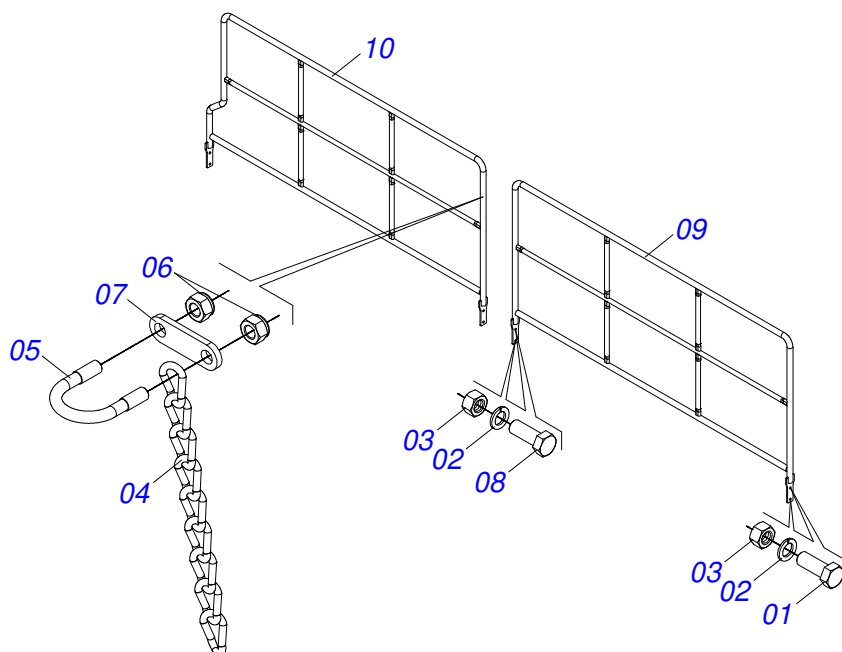


Item	Code	Description	See page	QT
01	0503010395	1/2" X 1-1/4" BOLT		02
02	0503010019	1/2" SPRING WASHER		06
03	0503010060	1/2" NUT		06
04	0503034094	22 TWISTED CHAIN		02
05	0551019884	45 X 50 X 3/8 FASTENER		04
06	0503013357	3/8" SELF-ADJUSTING NUT		08
07	0571017991	CHAIN FIXER HANDRAIL		04
08	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
09	0531060353	SIDE HANDRAIL		01
10	0531060352	CENTRAL HANDRAIL		01

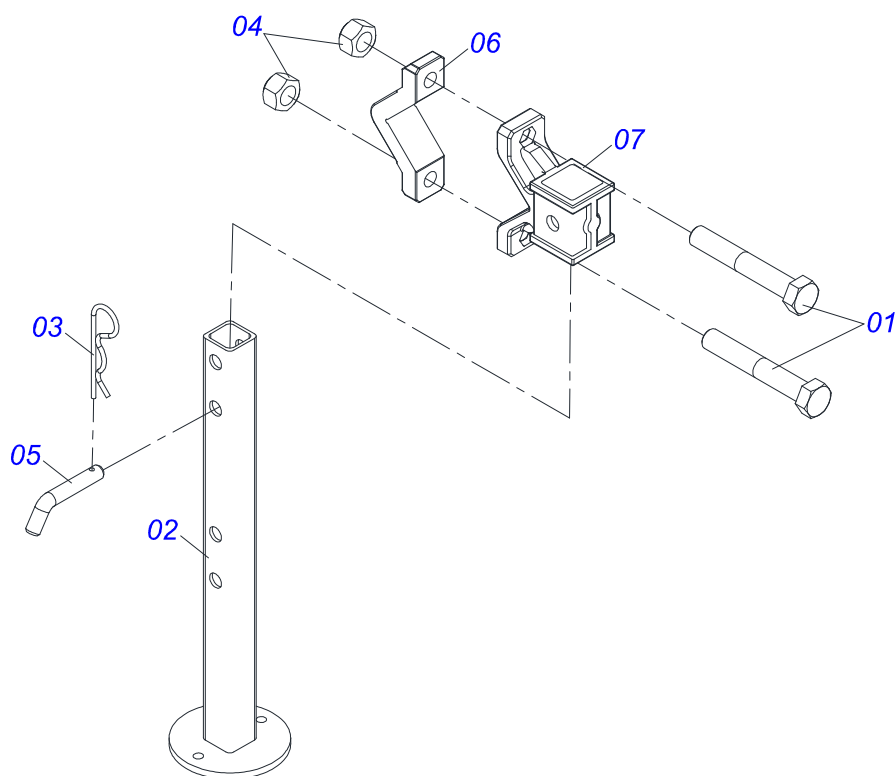


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

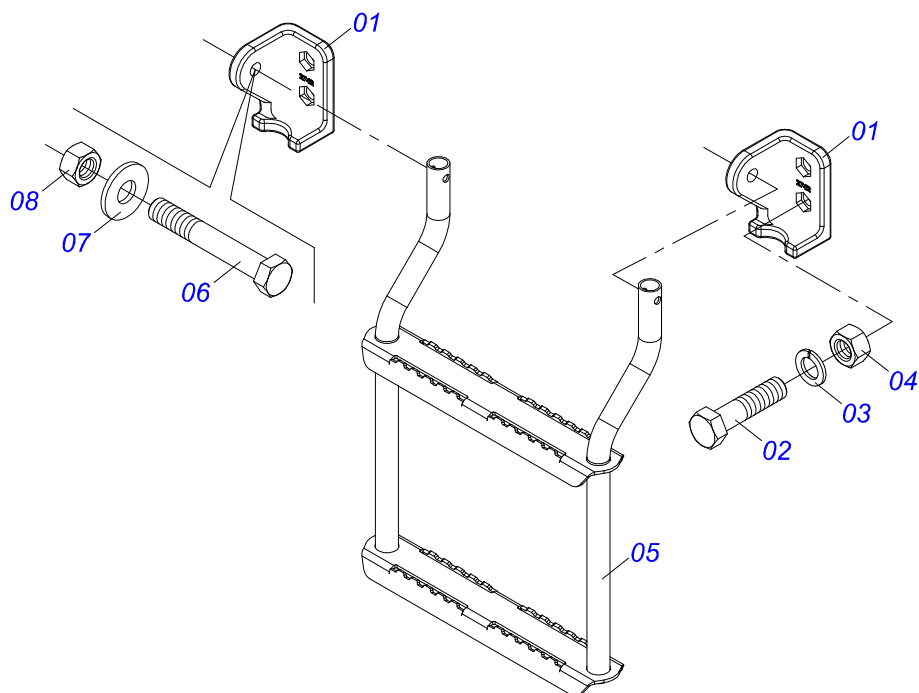


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8" SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	FLAT WASHER	02	
08	0503013357	3/8" SELF-ADJUSTING NUT	02	

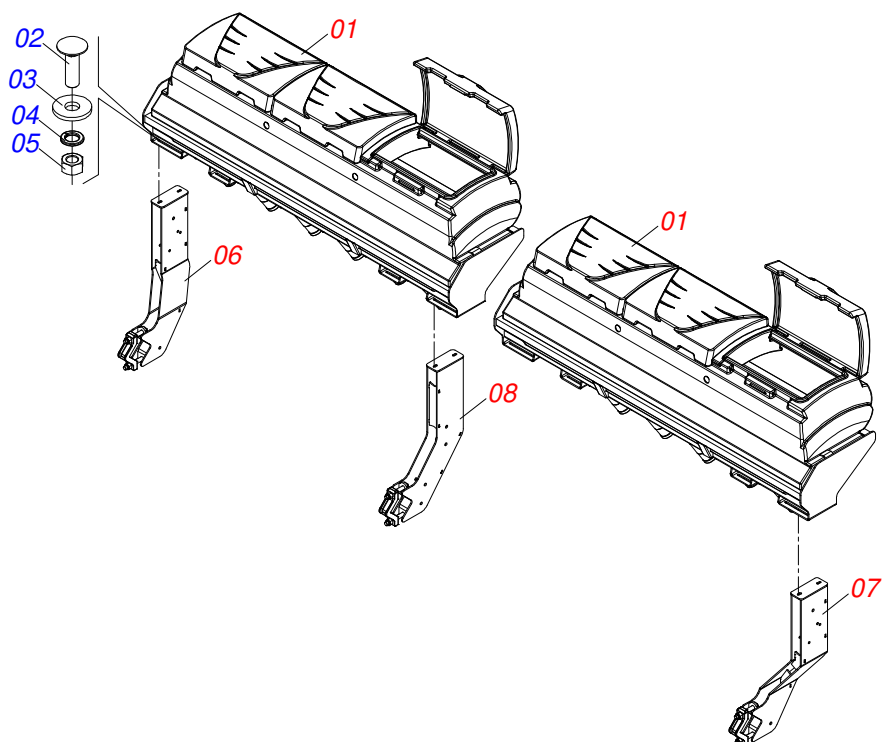


Item	Code	Description	See page	QT
01	0511058996	ASSEMBLY CSU	82	01
02	0501010942	3/8" X 1-1/4" BOLT		08
03	0501010984	FLAT WASHER		08
04	0503010025	3/8" SPRING WASHER		08
05	0503010026	3/8" NUT		08
06	0521052687	RH SUPPORT TOWER SILO	84	01
07	0521051931	LH SUPPORT TOWER SILO	85	01
08	0521051927	TOWER SUPPORT HOPPER	86	02

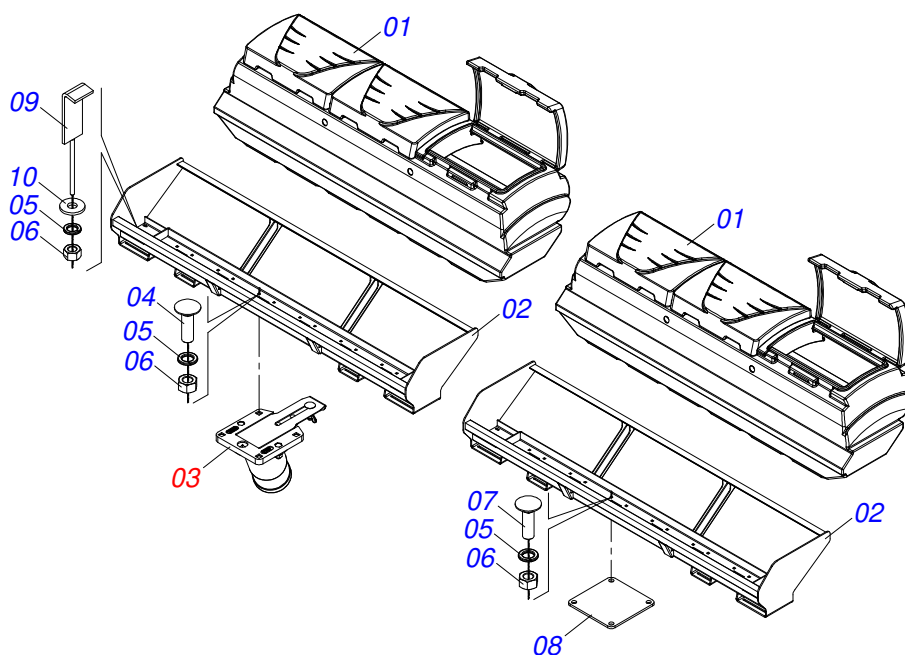


Item	Code	Description	See page	QT
01	0503061899	REAR BEAN FERTILIZER ASSY		02
02	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS		02
03	0511057690	SEED CONDUCTOR 3 ARTICULATED ASSY CSU	83	11
04	0501010942	3/8" X 1-1/4" BOLT		44
05	0503010025	3/8" SPRING WASHER		52
06	0503010026	3/8" NUT		52
07	0501011643	3/8 X 1"BOLT		04
08	0571015773	SUPPORT SEED CSU		01
09	0521063401	SEED BOX ONLY FIXING LOCK		04
10	0501010984	FLAT WASHER		04

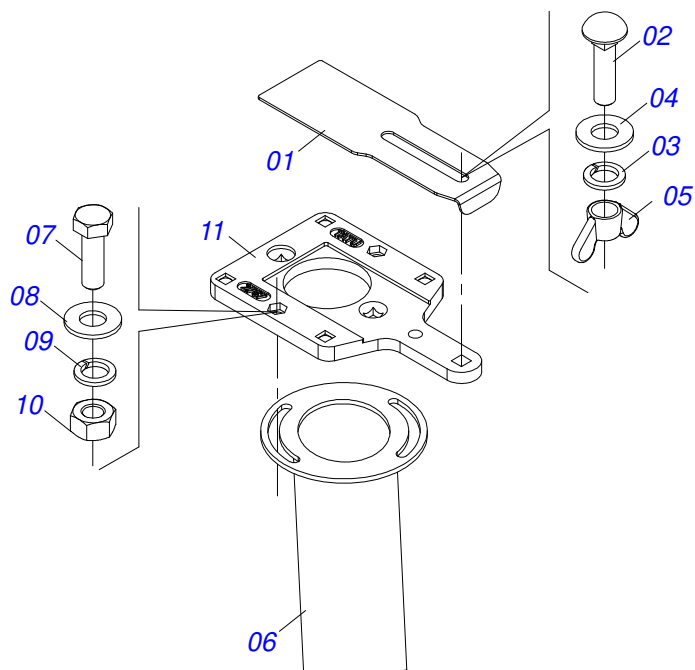


Item	Code	Description	See page	QT
01	0571015779	COVER SUPPORT CONDUCTOR ARTICULATION		01
02	0501010942	3/8" X 1-1/4" BOLT		01
03	0503010025	3/8" SPRING WASHER		01
04	0501010984	FLAT WASHER		01
05	0503010209	3/8" UNC BUTTERFLY NUT		01
06	0521066332	CONDUCTOR WITH FLANGE		01
07	0503010371	5/16" X 1" BOLT		02
08	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
09	0503010179	5/16" ZN SPRING WASHER		02
10	0503010337	5/16" NUT		02
11	0502012767	FIXER CONDUCTOR SEED CSU SUPPORT		01

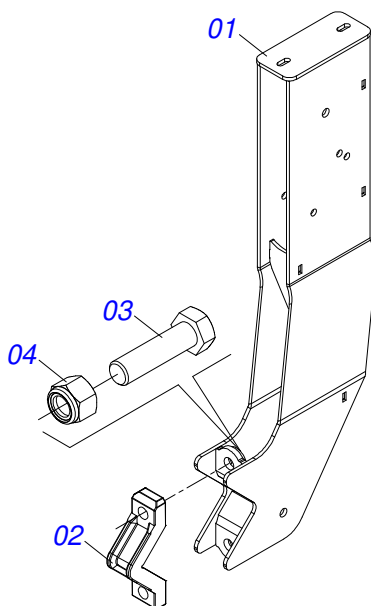


Item	Code	Description	See page	QT
01	0521066206	RH SUPPORT TOWER SILO		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

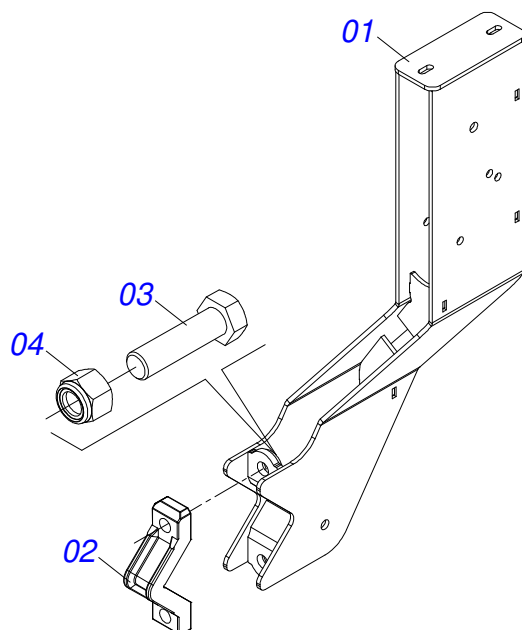


Item	Code	Description	See page	QT
01	0521066207	LH SUPPORT TOWER SILO		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

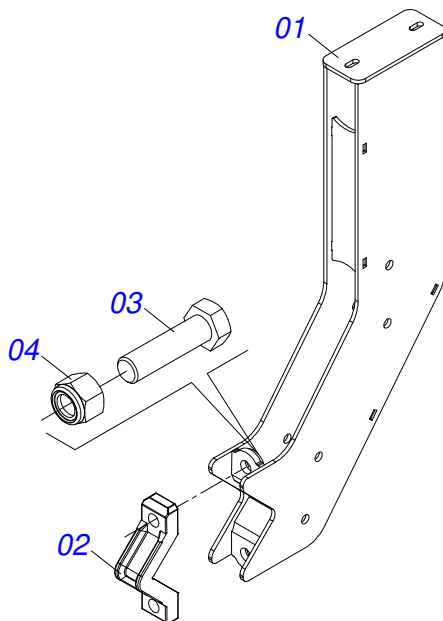


Item	Code	Description	See page	QT
01	0521066208	SUPPORT TOWER SILO		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

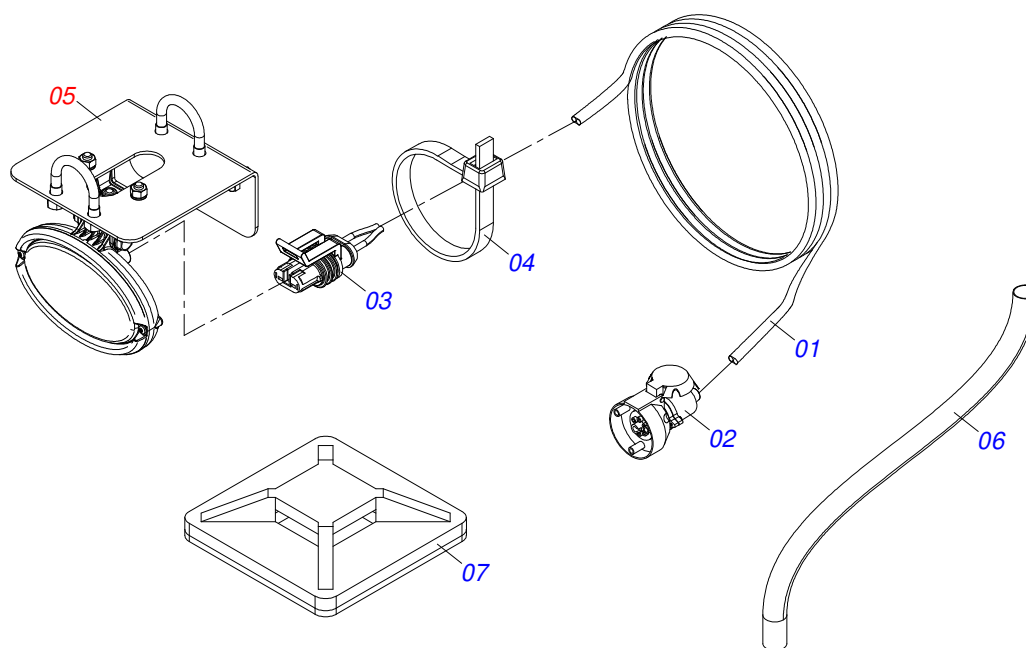


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		15mt
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		02
04	0503012903	T-80M CRAMP NYLON		50
05	0521052792	MOUNTED REAR LIGHT	88	02
06	3505151602	TUBE		0,3mt
07	0503017702	FIXER		14

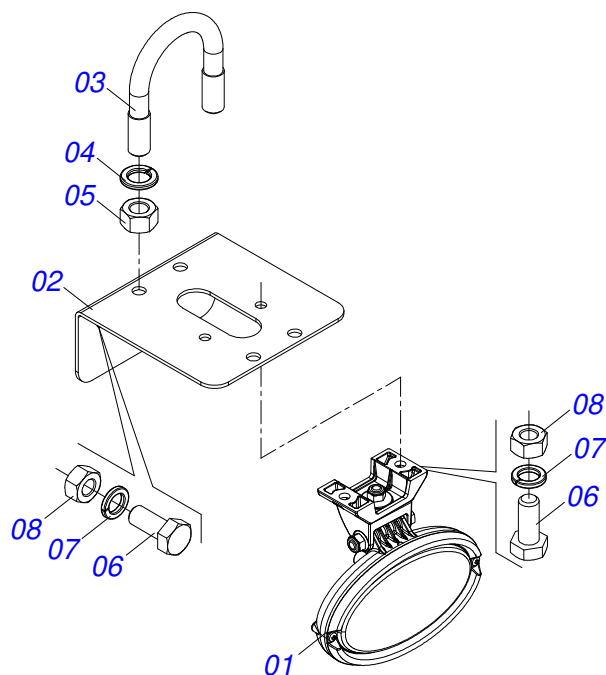

Item	Code	Description	See page	QT
01	0503018738	LIGHTHOUSE		01
02	0581016999	REAR LIGHT SUPPORT		01
03	0551019884	45 X 50 X 3/8 FASTENER		02
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
07	0503010179	5/16" ZN SPRING WASHER		04
08	0503010337	5/16" NUT		04

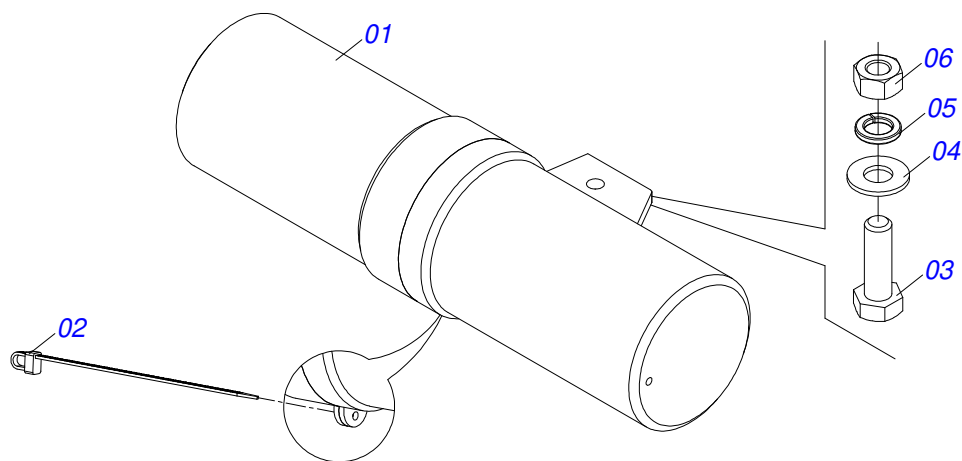


Item	Code	Description	See page	QT
01	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
02	0503010267	NYLON CLAMP		01
03	0503010363	5/16" X 1" BOLT		01
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
05	0503010179	5/16" ZN SPRING WASHER		01
06	0503010337	5/16" NUT		01
07	0511033413	PACKAGING WITH MANUAL / CATALOG		01

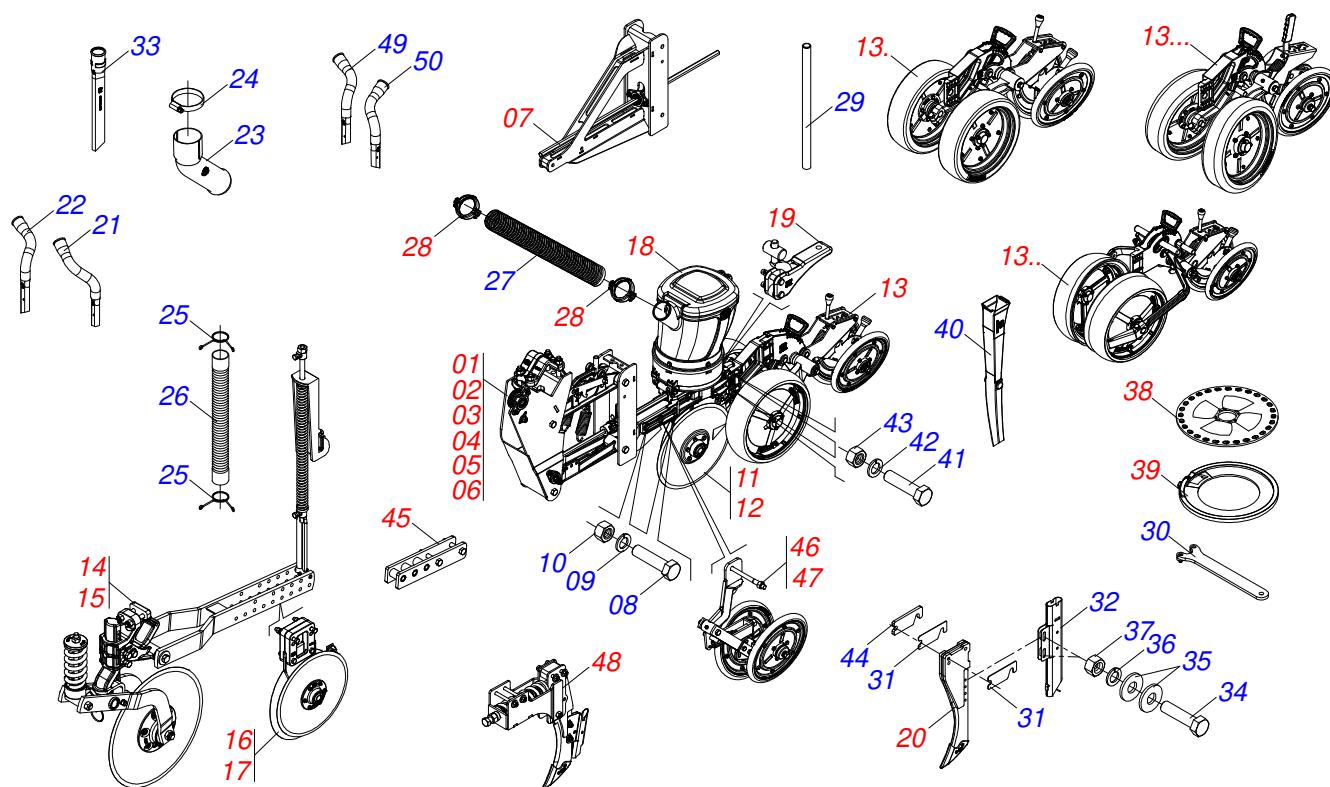

Item	Code	Description	See page	QT
01	0521053227	LEFT SHORT SEED ROW FRONT	91	01
02	0521053230	SHORT SEED ROW FRONT	92	01
03	0521053228	LEFT SHORT SEED ROW FRONT	93	01
04	0521053229	SHORT SEED ROW FRONT	94	01
05	0521054737	FRONT SEMI MOUNTED LINE LONG LEFT SEED WITHOUT LUBRICATION	95	01
06	0521054736	FRONT SEMI MOUNTED ROW LONG RIGHT SEED LINE WITHOUT LUBRICATION	96	01
07	0511059333	SEMI-ASSEMBLED MECHANICAL FRAME	104	01
07.	0521052266	SEMI-ASSEMBLED MECHANICAL FRAME SPA		01
08	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		01
09	0503010019	1/2" SPRING WASHER		01
10	0503010060	1/2" NUT		01
11	0521054771	LEFT REAR SEAL LINE WITHOUT LUBRICATION	107	01
12	0521054770	REAR RIGHT SEED LINE WITHOUT LUBRICATION	108	01
13	0521055053	DEEP WHEEL / COMPACTOR SYSTEM	116	01
13.	0521054984	DEPTH SYSTEM / COMPACTOR WITHOUT LUBRICATION		01
13..	0521055397	DEEP WHEEL / COMPACTOR SYSTEM		01
13...	0521056317	DEPTH CONTROL WITH LEVER ANGLE REGULATOR AXIS CPERA		01
14	0521054811	FERTILIZER SHORT LINE	126	01
14.	0521058972	FERTILIZER SHORT LINE DPLO20		01
15	0521054812	LONG FERTILIZER LINE	131	01
15.	0521058973	LONG FERTILIZER LINE DPLO20		01
16	0521054769	LEFT FERTILIZER WITH SUPPORT	133	01
17	0521054768	DDD RIGHT FERTILIZER WITH SUPPORT	135	01
18	0521050096	SEED DEPOSIT SYSTEM (CSU)	137	01
19	0511052024	FAST CLOSING SET	139	01
20	0521053946	SCARING ROD	140	01
21	0503030391	RIGHT FERTILIZER NOZZLE		01
22	0503030392	LEFT FERTILIZER NOZZLE		01


Item	Code	Description	See page	QT
23	0503031050	CURVED CONDUCTOR		01
24	0503010246	CLAMP		01
25	0503031076	2" HOSE CLAMP		01
26	0503031145	2" X 2" X 20" HOSE		01
27	0571011730	SEED CONDUCTOR 3X1500		01
28	0521050525	FIXER FERTILIZER CONDUCTOR	141	01
29	0531013600	PRESS ADJUSTMENT LEVER		01
30	0521068982	KEY CASH DISC CUTTING		01
31	0511017969	0.1" SPACING PLATE		01
32	0521069127	BOTTOM NOZZLE FERTILIZER		01
33	0503030483	FERTILIZER SOCKET		01
34	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
35	0501010984	FLAT WASHER		01
36	0503010025	3/8" SPRING WASHER		01
37	0503010026	3/8" NUT		01
38	0503062066	DISC SET WITH CORN RING		01
39	0503062067	DISC SET / RING SOY 90F TITANIUM		01
40	0503033672	NOZZLE WITHOUT TITANIUM		01
41	0503010905	1/2" X 2-1/4" BOLT		01
42	0503010019	1/2" SPRING WASHER		01
43	0503010060	1/2" NUT		01
44	0511018662	SPACING PLATE		01
45	0521057957	FIXED ROD EXTENSION WITH FIXATION		01
46	0501054292	V RIGHT WHEEL PRESS FERTILIZER ASSY		01
47	0501054293	V LEFT WHEEL PRESS FERTILIZER ASSY		01
48	0521053947	HDA		01
49	0581010082	FERTILIZER SOCKET RIGHT		01
50	0581010083	FERTILIZER SOCKET LEFT		01

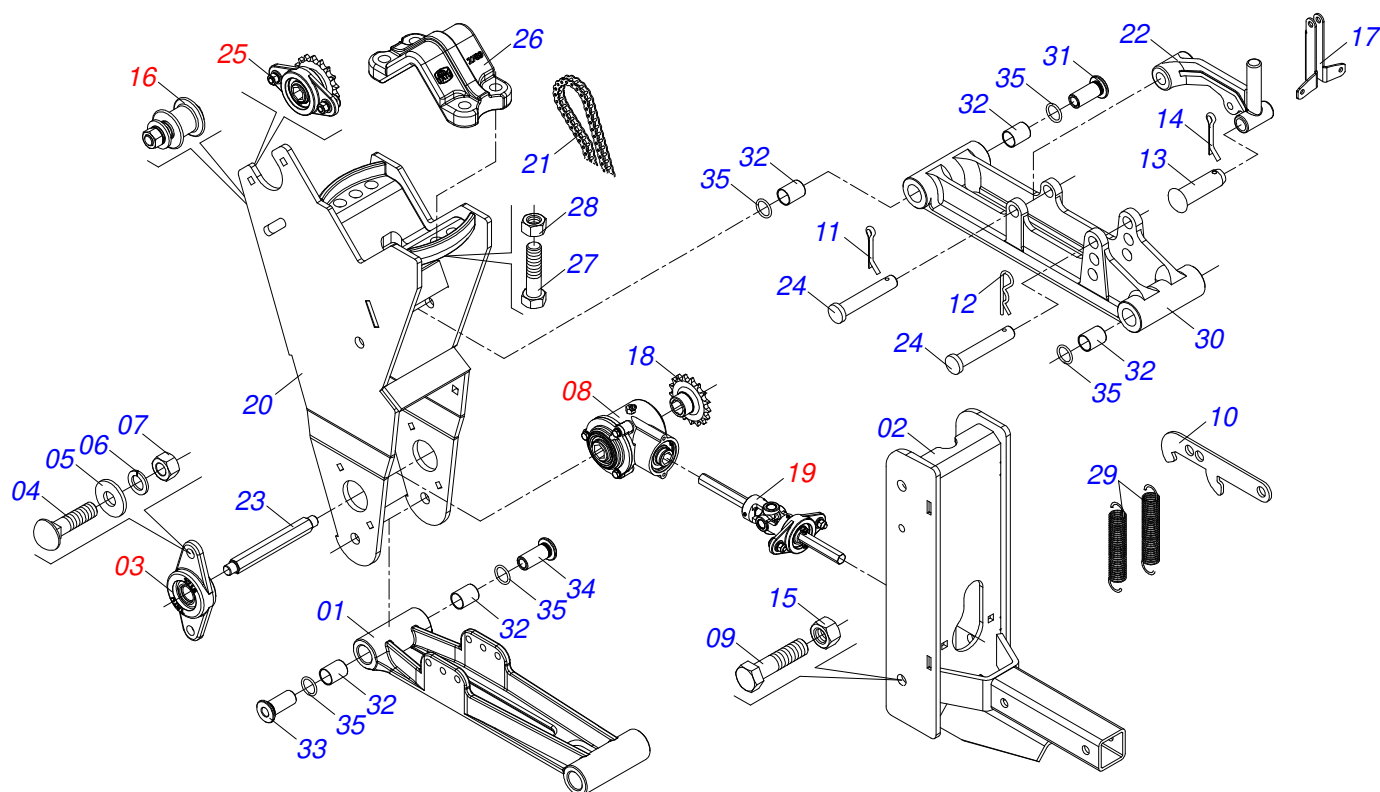

Item	Code	Description	See page	QT
01	0581017623	LOWER ARM SEED LINE WITHOUT LUBRICATION		01
02	0521061427	SHORT SEED ROW FRAME		01
03	0521055213	LINE BEARING SEED	97	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	98	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HAIR PIN		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	99	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	100	01
20	0521064651	LEFT SEED ROW SUPPORT FRONT		01
21	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	102	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0581017653	ARM SUPPORT LINE SEED WITHOUT LUBRICATION		01
31	0581017624	SPACING SLEEVE		06




Item	Code	Description	See page	QT
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

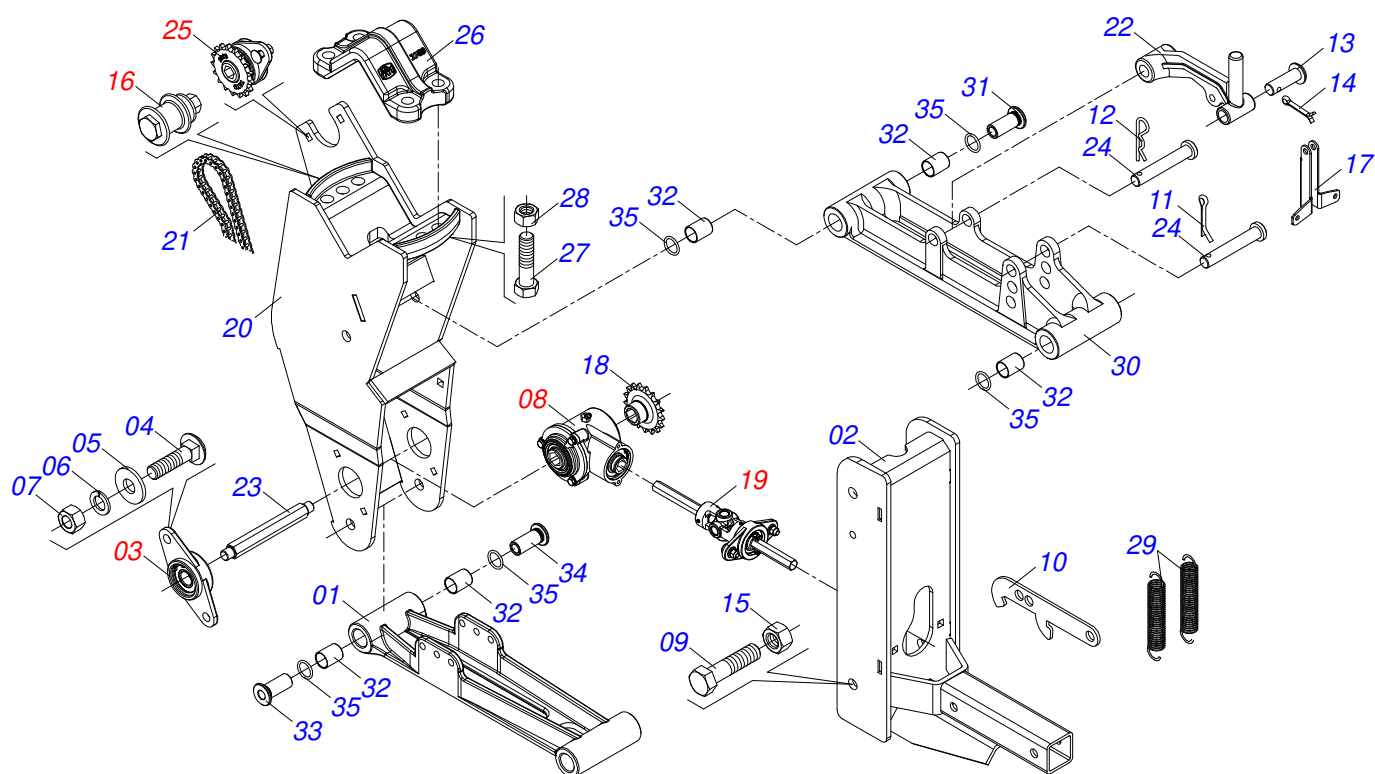

Item	Code	Description	See page	QT
01	0581017623	LOWER ARM SEED LINE WITHOUT LUBRICATION		01
02	0521061426	LH SEED ROW SUPPORT FRONT		01
03	0521055213	LINE BEARING SEED	97	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	98	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HAIR PIN		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	99	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	100	01
20	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
21	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	102	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0581017653	ARM SUPPORT LINE SEED WITHOUT LUBRICATION		01
31	0581017624	SPACING SLEEVE		06




Item	Code	Description	See page	QT
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

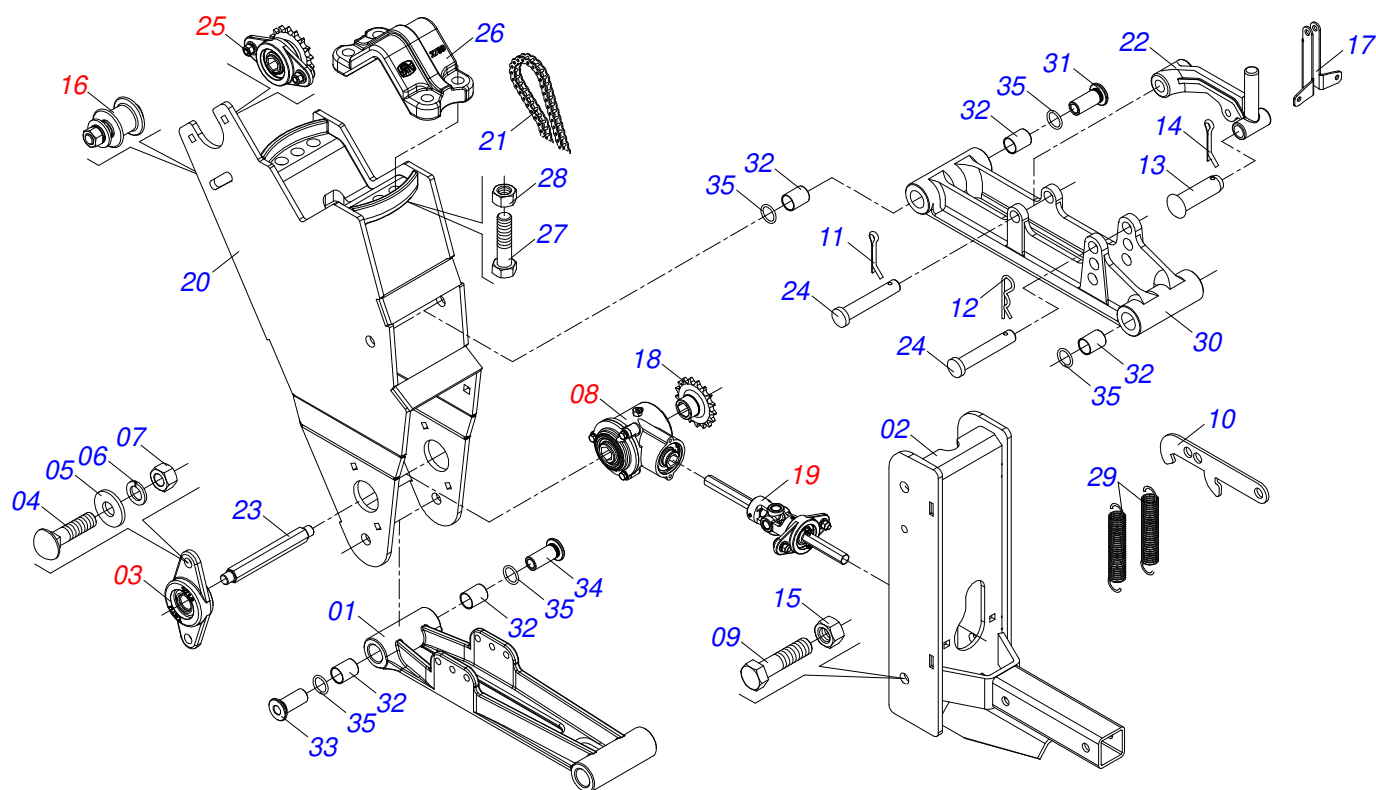

Item	Code	Description	See page	QT
01	0581017623	LOWER ARM SEED LINE WITHOUT LUBRICATION		01
02	0521061427	SHORT SEED ROW FRAME		01
03	0521055213	LINE BEARING SEED	97	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	98	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HAIR PIN		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	99	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	100	01
20	0521064650	LEFT SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	102	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0581017653	ARM SUPPORT LINE SEED WITHOUT LUBRICATION		01
31	0581017624	SPACING SLEEVE		06




Item	Code	Description	See page	QT
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

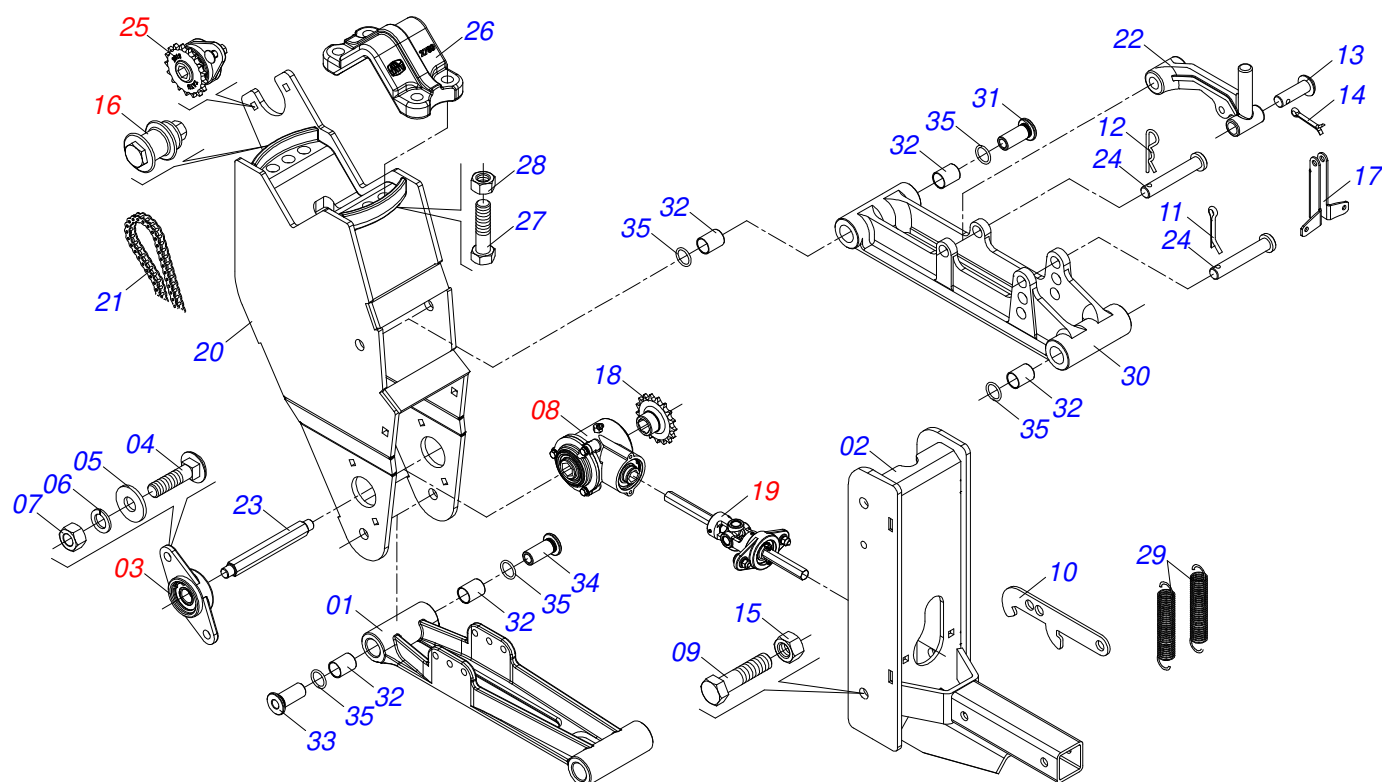

Item	Code	Description	See page	QT
01	0581017623	LOWER ARM SEED LINE WITHOUT LUBRICATION		01
02	0521061427	SHORT SEED ROW FRAME		01
03	0521055213	LINE BEARING SEED	97	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	98	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HAIR PIN		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	99	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	100	01
20	0521064652	RH SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	102	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0581017653	ARM SUPPORT LINE SEED WITHOUT LUBRICATION		01
31	0581017624	SPACING SLEEVE		06



Item	Code	Description	See page	QT
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

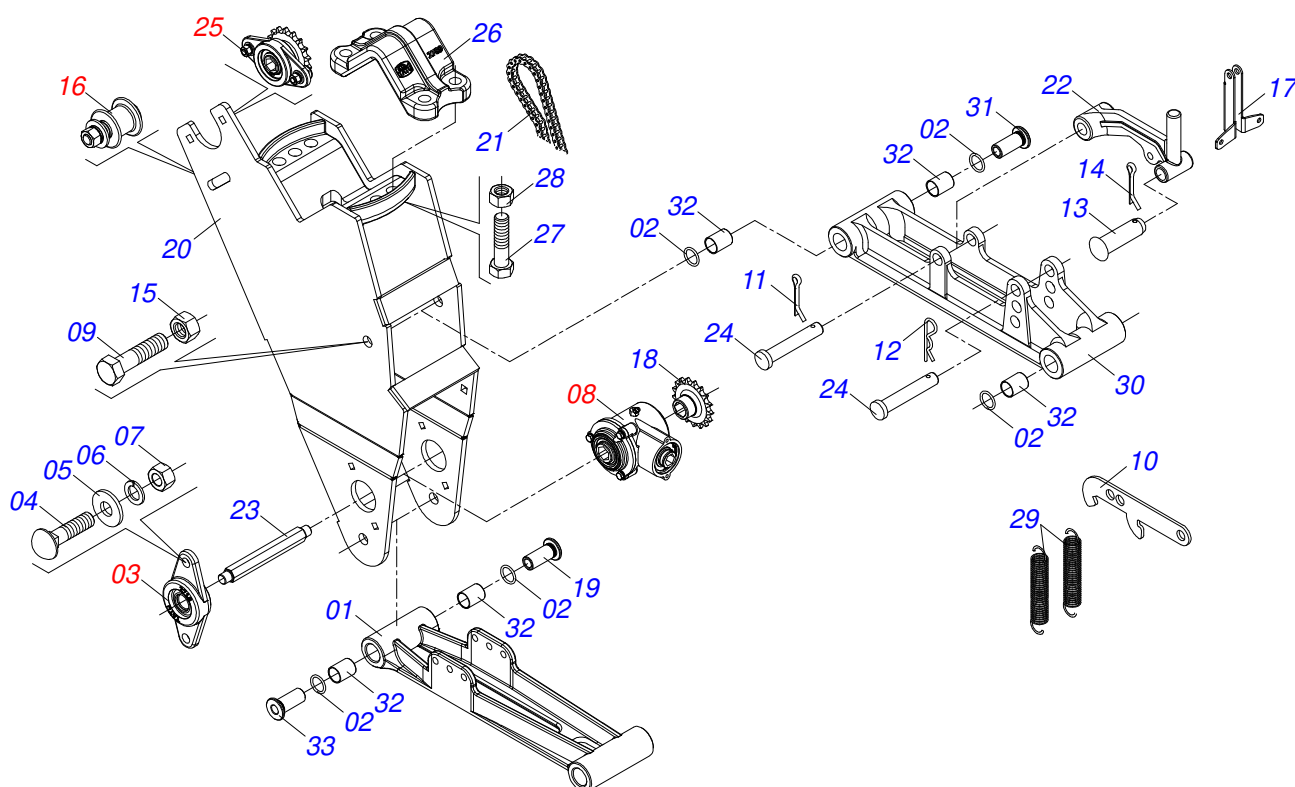


Item	Code	Description	See page	QT
01	0581017623	LOWER ARM SEED LINE WITHOUT LUBRICATION		01
02	0503010045	O'RING		08
03	0521055213	LINE BEARING SEED	97	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	98	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HAIR PIN		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	99	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
20	0521064650	LEFT SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	102	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0581017653	ARM SUPPORT LINE SEED WITHOUT LUBRICATION		01



PST DUO FLEX TITANIUM - FRAME 4790 - CSU - DOUBLE
FRONT SEMI MOUNTED LINE LONG LEFT SEED WITHOUT

Page 95
0521054737

Item	Code	Description	See page	QT
31	0581017624	SPACING SLEEVE		06
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01

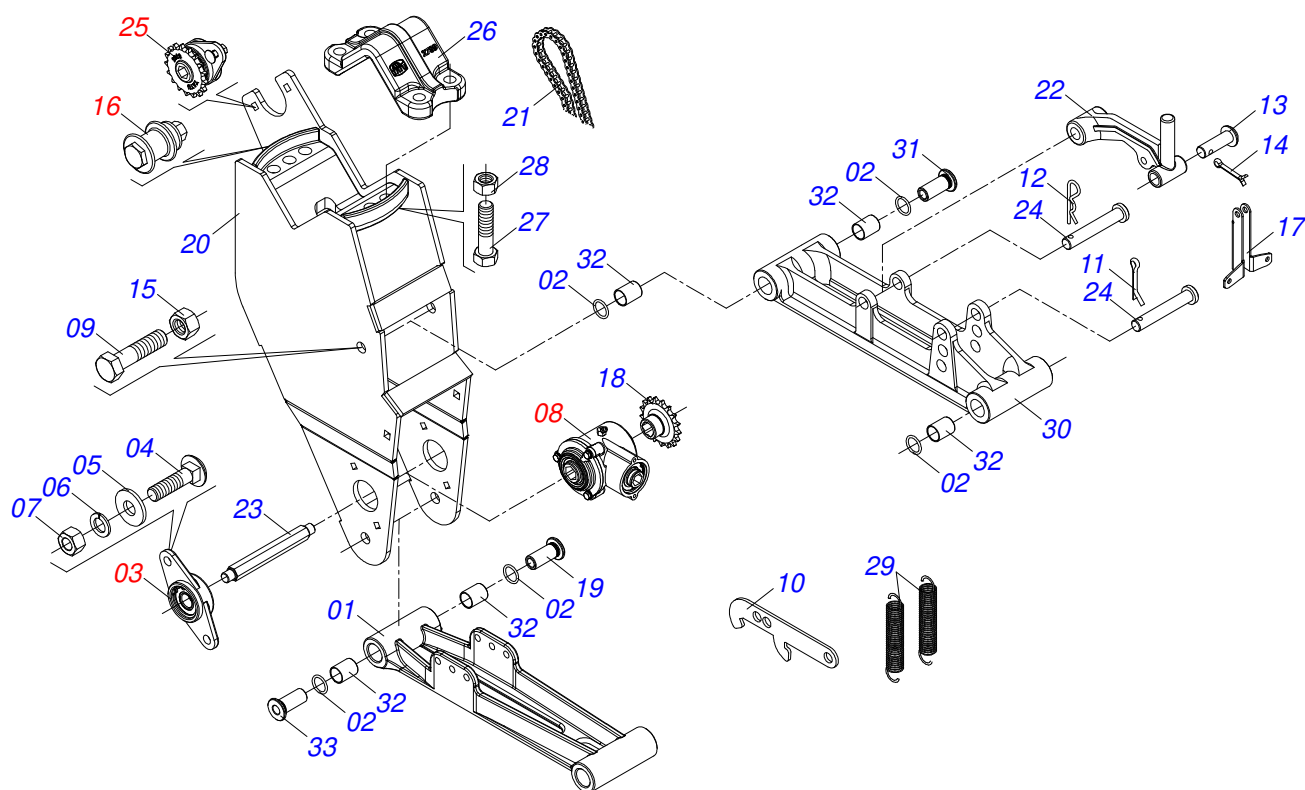


Item	Code	Description	See page	QT
01	0581017623	LOWER ARM SEED LINE WITHOUT LUBRICATION		01
02	0503010045	O'RING		08
03	0521055213	LINE BEARING SEED	97	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	98	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HAIR PIN		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	99	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
20	0521064652	RH SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	102	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0581017653	ARM SUPPORT LINE SEED WITHOUT LUBRICATION		01




PST DUO FLEX TITANIUM - FRAME 4790 - CSU - DOUBLE
FRONT SEMI MOUNTED ROW LONG RIGHT SEED LINE

Page 96
0521054736


Item	Code	Description	See page	QT
31	0581017624	SPACING SLEEVE		06
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01

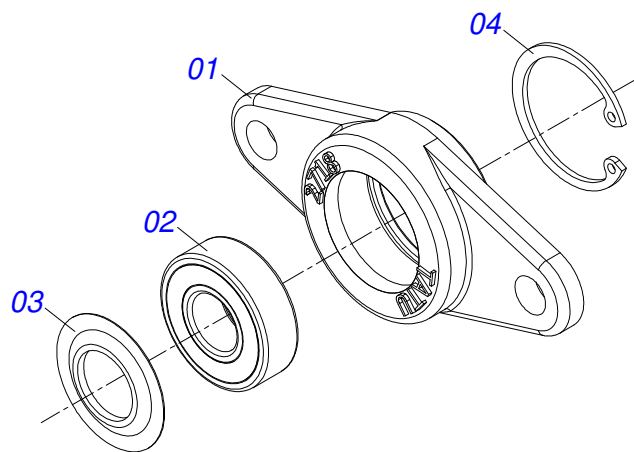


Item	Code	Description	See page	QT
01	0502012718	BEARIN BODY		01
02	0503019355	BEARING 6202 2RS1		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

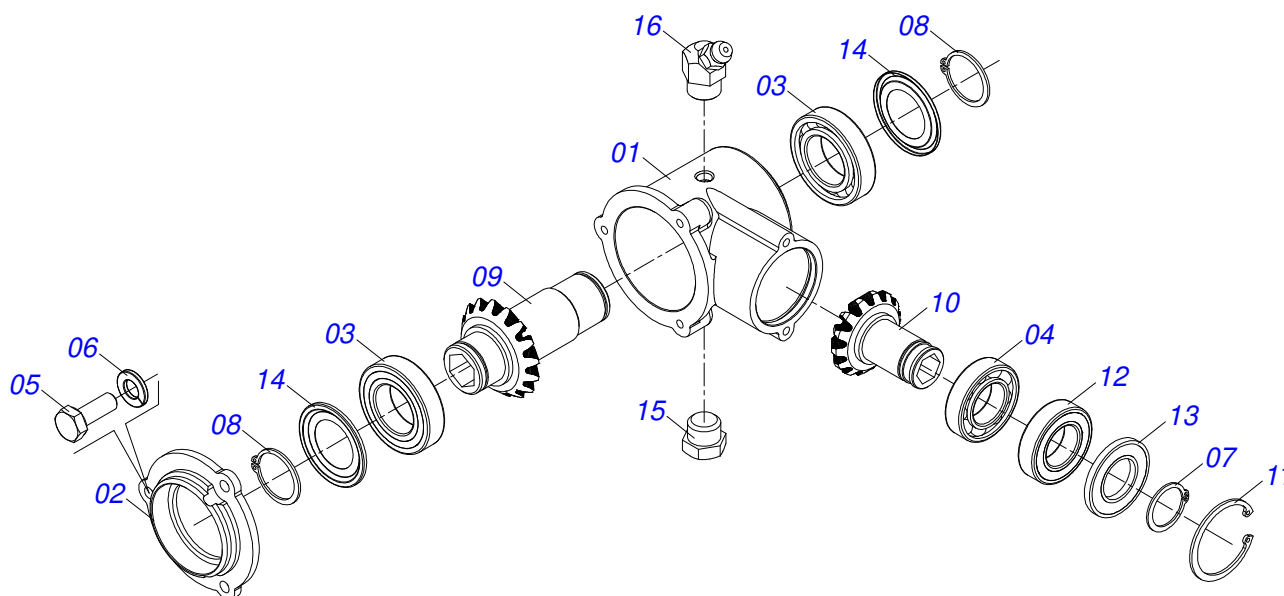


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503019361	BEARING 6006 RS1		02
04	0503019363	BEARING 6005		01
05	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
06	0503010143	1/4" SPRING WASHER		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503019362	BEARING 6005 RS1		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01

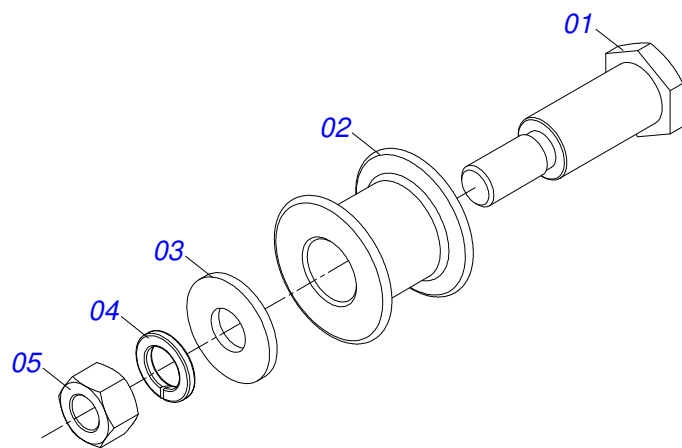


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

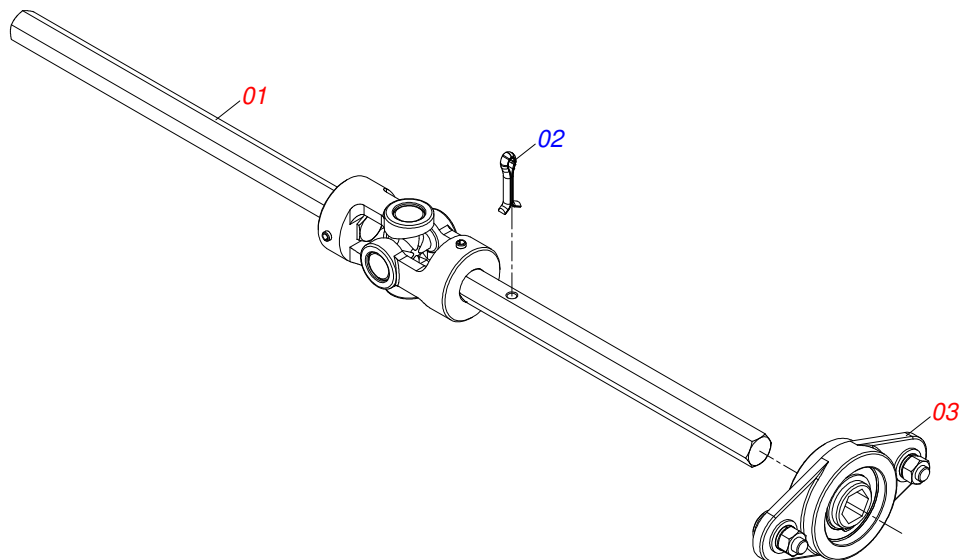


Item	Code	Description	See page	QT
01	0501059326	UNIVERSAL JOINT AXLE	101	01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0521055227	BEARING SHAFT HEX		01

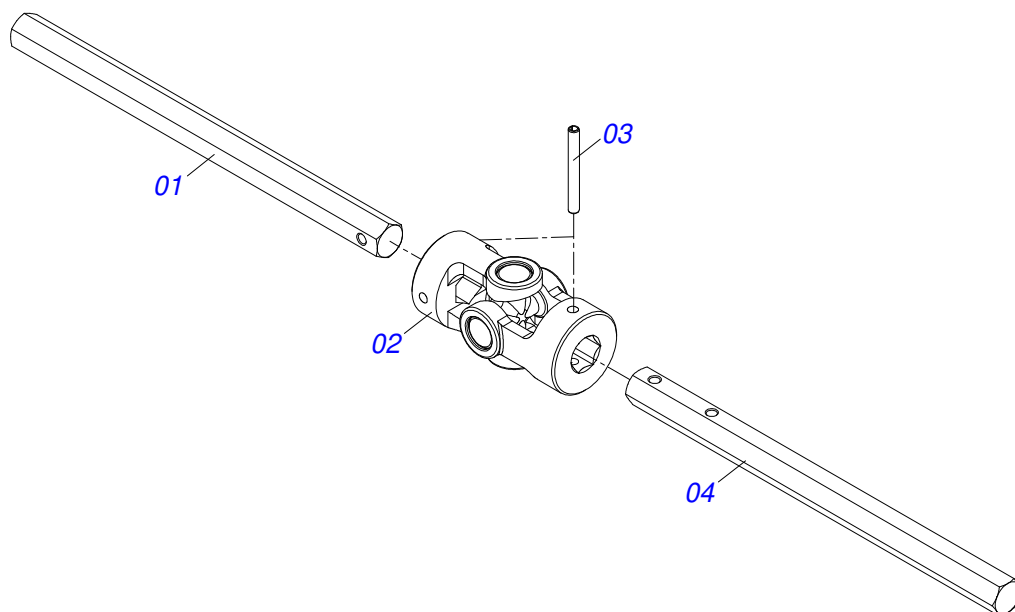


Item	Code	Description	See page	QT
01	0561016322	5/8" HEX AXLE		01
02	0501056296	UNIVERSAL JOINT		01
03	0503011855	0.2" X 1.8" SPRING PIN		02
04	0561014794	350 AXLE HEX		01

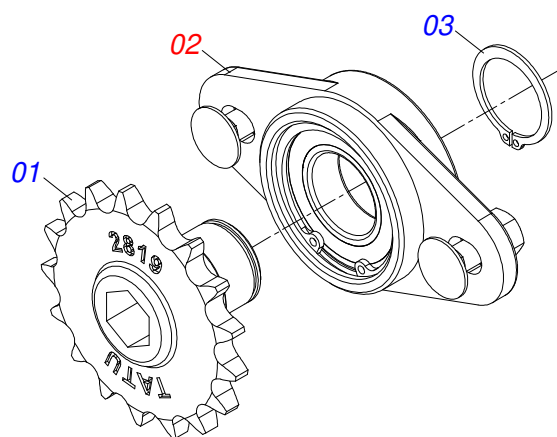


Item	Code	Description	See page	QT
01	0502012819	17Z GEAR WITH HEX HOLE		01
02	0521055220	BEARING FRONT LINE SEED	103	01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01

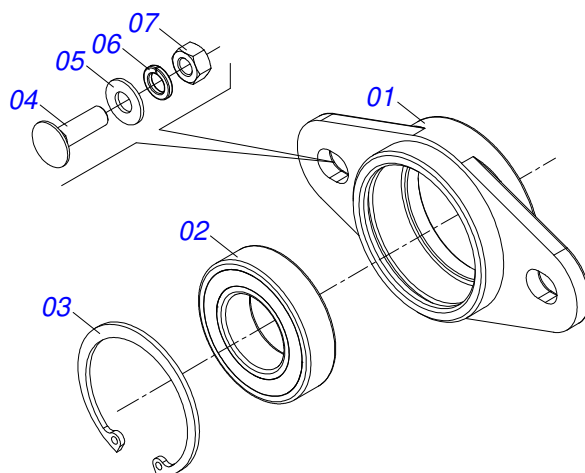


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503019356	BEARING 6005 2RS1		01
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02

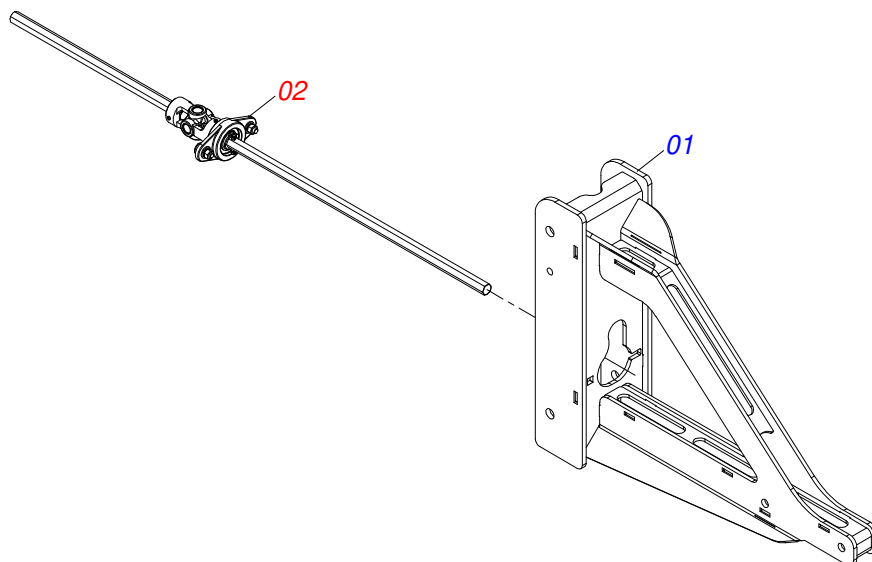


Item	Code	Description	See page	QT
01	0521066496	FRAME MECHANICAL CENTRAL SEED LINE		01
02	0511059334	BEARING WITH LONG FRONT AXLE	105	01

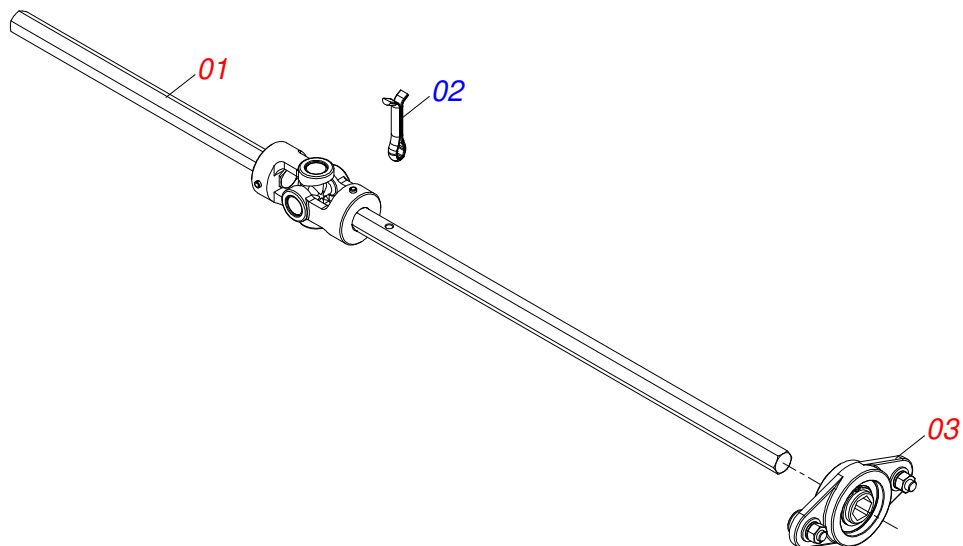


Item	Code	Description	See page	QT
01	0511058143	UNIVERSAL JOINT AXLE	106	01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0521055227	BEARING SHAFT HEX		01

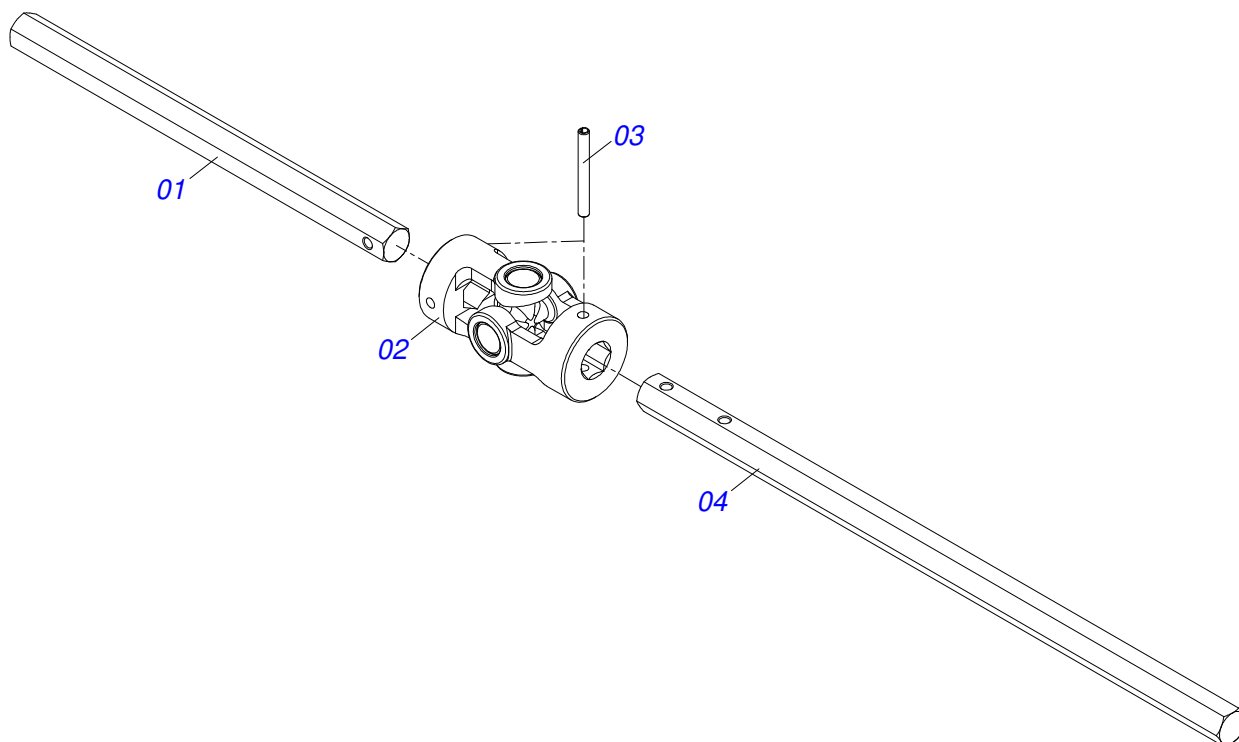


Item	Code	Description	See page	QT
01	0561014794	350 AXLE HEX		01
02	0501056296	UNIVERSAL JOINT		01
03	0503011855	0.2" X 1.8" SPRING PIN		02
04	0581010483	HEX AXLE		01

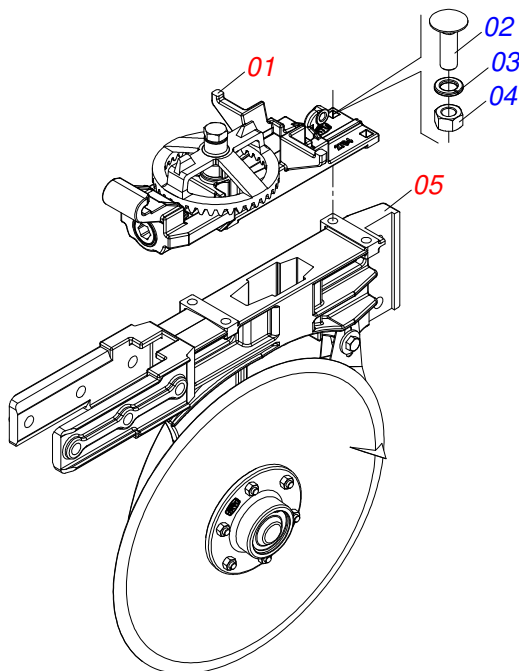


Item	Code	Description	See page	QT
01	0521054818	BASE 5/8 FIXATION WITHOUT ASSY LUBRICATION	109	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0521054763	DDD LEFT SEED	110	01

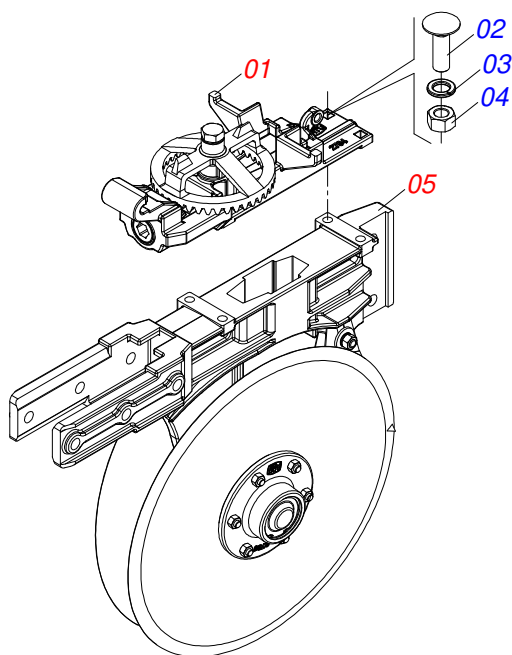


Item	Code	Description	See page	QT
01	0521054818	BASE 5/8 FIXATION WITHOUT ASSY LUBRICATION	109	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0521054762	RIGHT DDD SEED	112	01

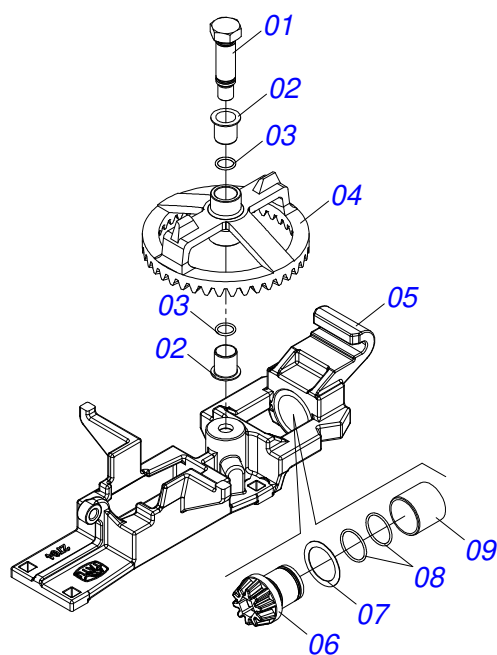


Item	Code	Description	See page	QT
01	0581019201	CROWN SHAFT		01
02	0503019340	LUBRICANT GLOVE		02
03	0503011030	2-014 N 3006-9B O'RING		02
04	0581019200	CONICA 40Z GEAR		01
05	0581019199	FIXED BASE		01
06	0581019202	PINHAO CONICO 10Z X 5/8		01
07	0501013354	FLAT WASHER		01
08	0503010410	RING		02
09	0503019341	LUBRICANT GLOVE		01

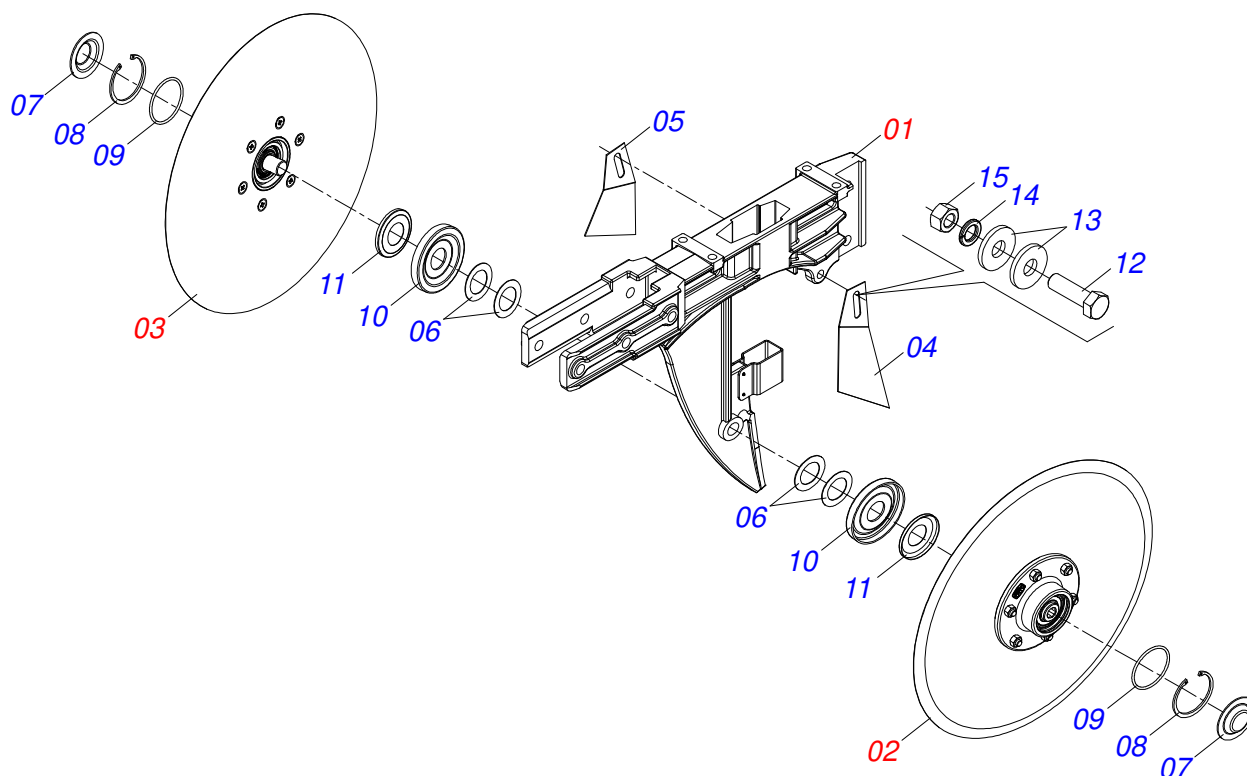


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE	111	01
02	0521054761	LEFT LOW CUBE	114	01
03	0521054760	DOWN LOW CUBE	115	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0511015098	FLAT WASHER		04
07	0571011152	DOUBLE DISC CAP		02
08	0503015081	502052 CLAMPING RING (FOR AXLE)		02
09	0503014679	2-134 O'RING		02
10	0511011927	DUST CLOAK		02
11	0503034055	CLAMPING RING		02
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
13	0501010984	FLAT WASHER		02
14	0503010025	3/8" SPRING WASHER		01
15	0503010026	3/8" NUT		01

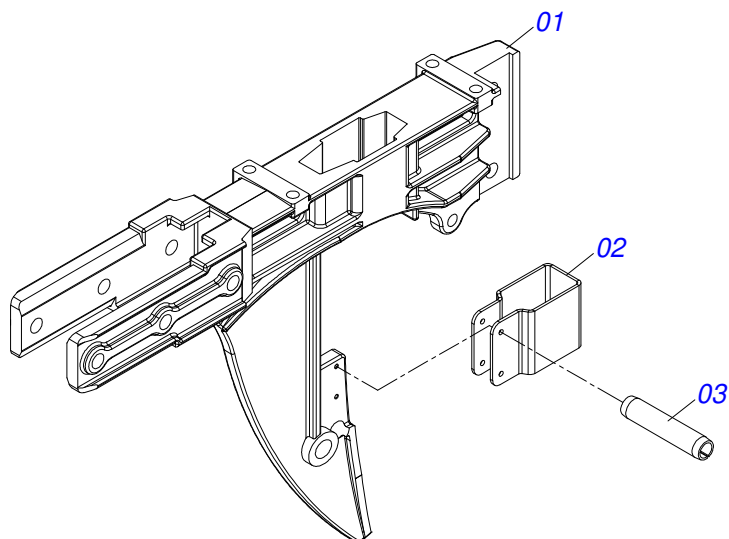


Item	Code	Description	See page	QT
01	0561015592	LEFT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

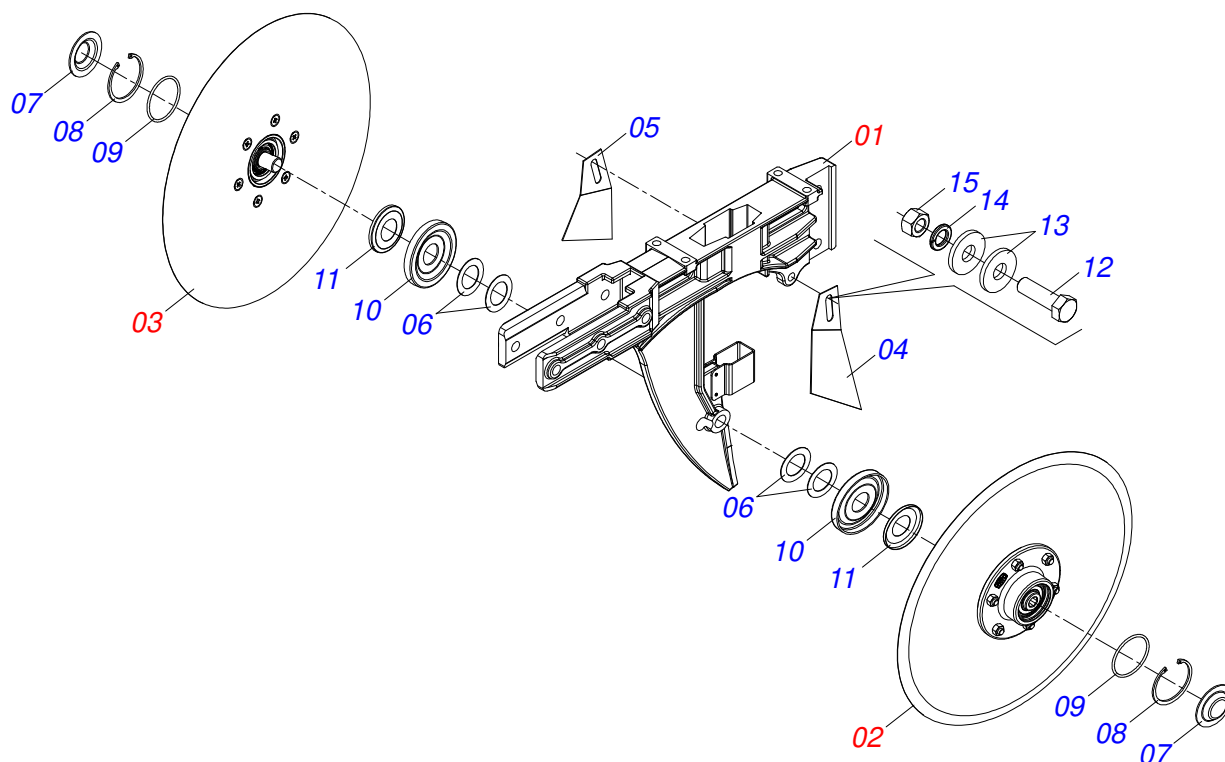


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT	113	01
02	0521054761	LEFT LOW CUBE	114	01
03	0521054760	DOWN LOW CUBE	115	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0511015098	FLAT WASHER		04
07	0571011152	DOUBLE DISC CAP		02
08	0503015081	502052 CLAMPING RING (FOR AXLE)		02
09	0503014679	2-134 O'RING		02
10	0511011927	DUST CLOAK		02
11	0503034055	CLAMPING RING		02
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
13	0501010984	FLAT WASHER		02
14	0503010025	3/8" SPRING WASHER		01
15	0503010026	3/8" NUT		01

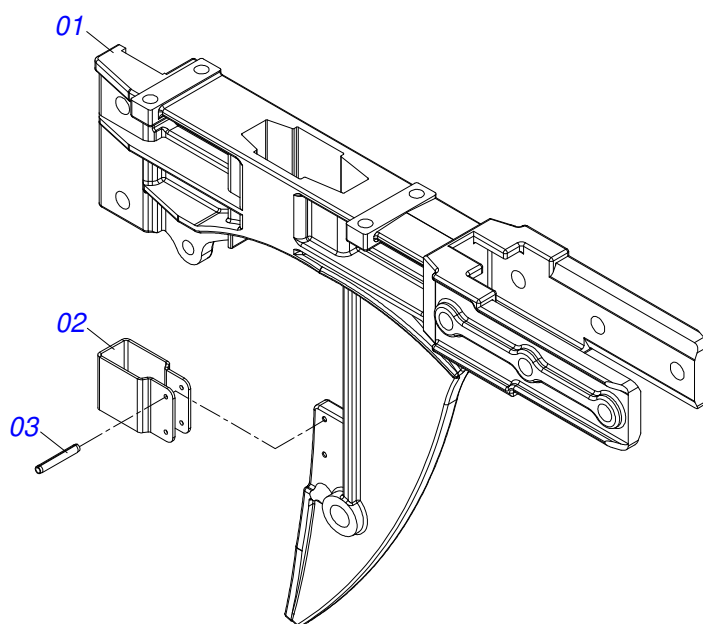


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

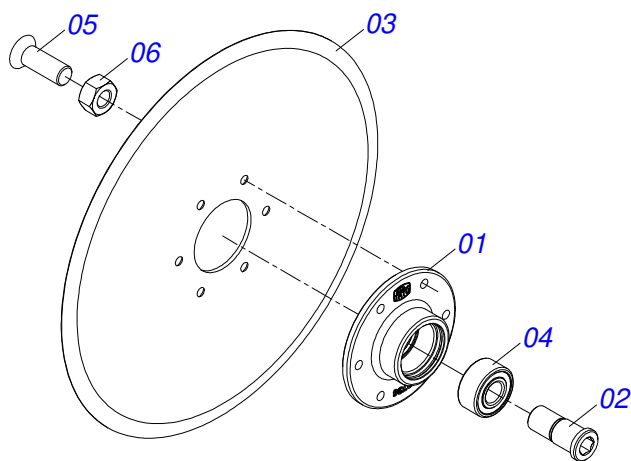


Item	Code	Description	See page	QT
01	0502012736	HUB LOWR DDD		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503019342	ROLLER BEARING		01
05	0503010546	5/16" X 7/8" BOLT		06
06	0503010337	5/16" NUT		06

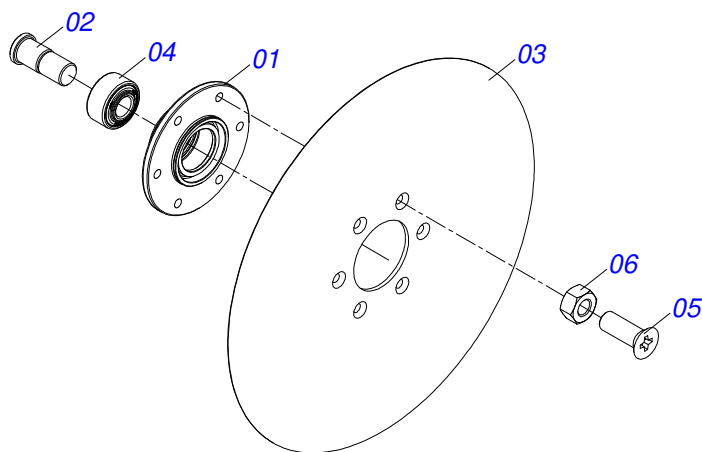


Item	Code	Description	See page	QT
01	0502012736	HUB LOWR DDD		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503019342	ROLLER BEARING		01
05	0503010546	5/16" X 7/8" BOLT		06
06	0503010337	5/16" NUT		06

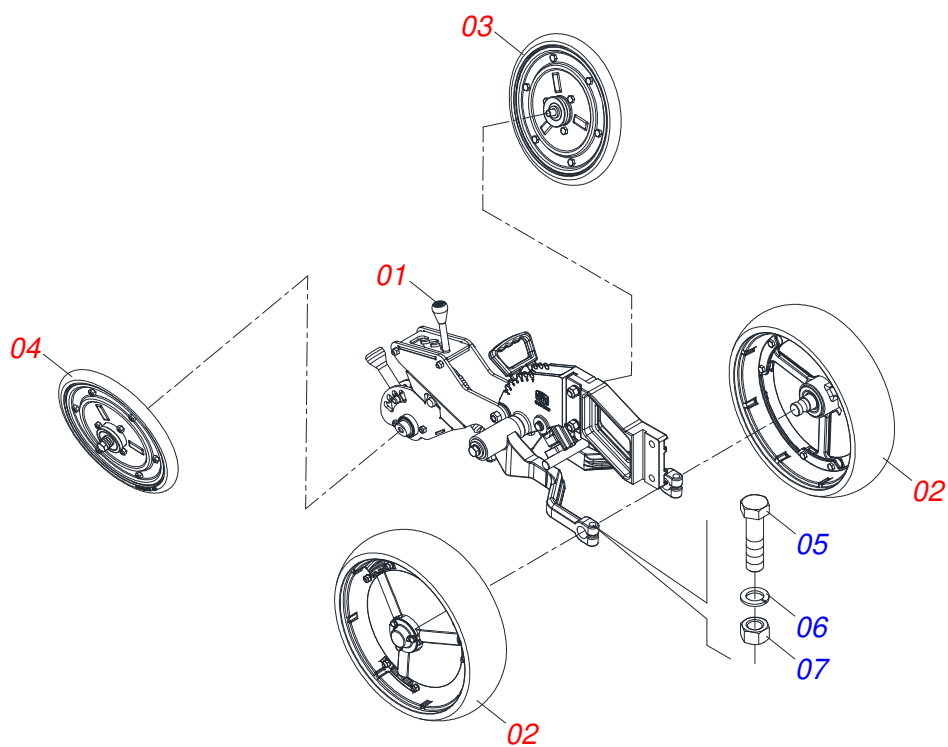


Item	Code	Description	See page	QT
01	0521055065	ASSY DEPTH / COMPACTOR	117	01
02	0521055068	RAYED WHEEL CENTER CLOSED	121	02
03	0521054990	LEFT COMPACTOR WHEEL	123	01
04	0521055017	RIGHT COMPACTOR WHEEL	124	01
05	0503016453	1/2" X 2.1/2 BOLT		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010028	1/2" NUT		02

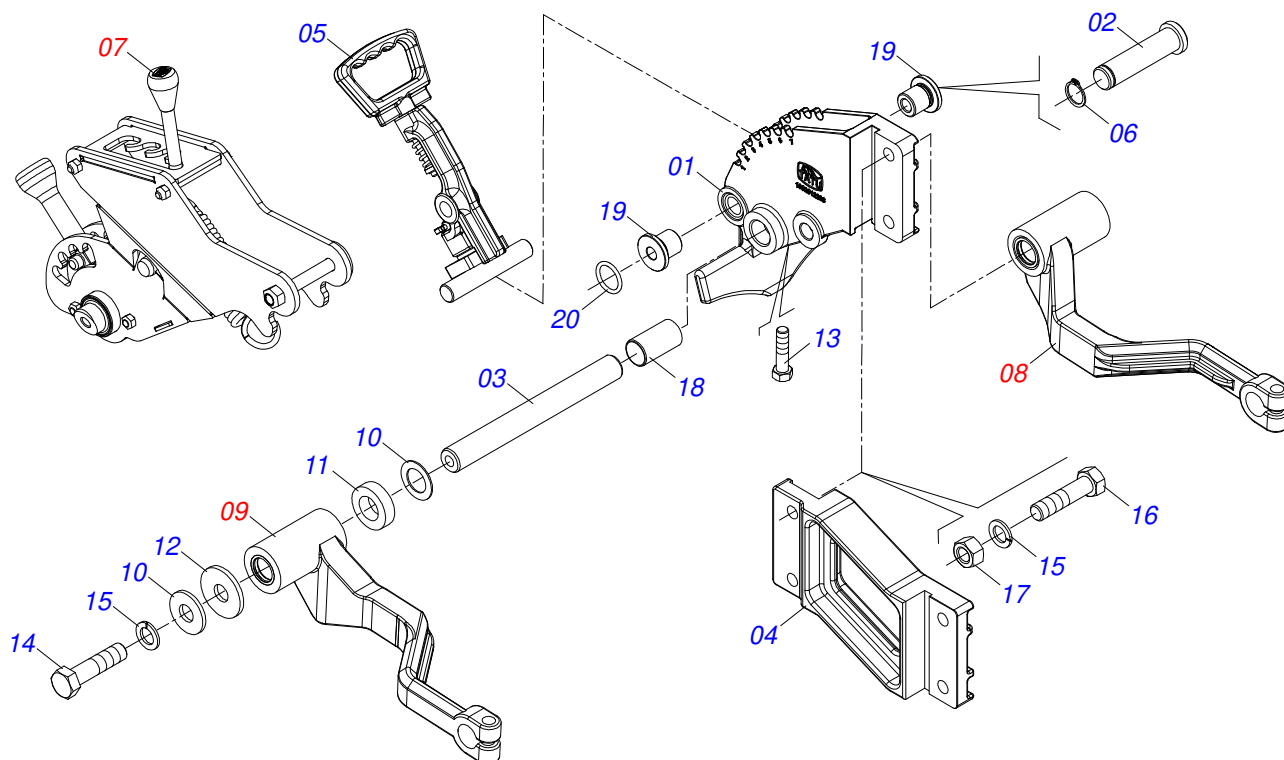


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0571013054	DEPTH CONTROL WHEEL AXLE		01
04	0502012663	EXTENSION		01
05	0501056769	DEPTH WHEELS REGULATOR ASSY		01
06	0503010581	RING		01
07	0521055033	COMPACTADOR BODY	118	01
08	0521055054	LEFT ARM WITH SLEEVE	119	01
09	0521055066	RIGHT ARM WITH GLOVE	120	01
10	0511015346	FLAT WASHER		04
11	0571015974	WASHER		02
12	0511017302	FLAT WASHER		02
13	0503010256	3/8" X 3/4" BOLT		01
14	0503010311	1/2" X 1-1/4" BOLT		02
15	0503010019	1/2" SPRING WASHER		04
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2" NUT		02
18	0503019275	SLEEVE LUBRICATION SYSTEM		01
19	0581019473	ARTICULATED GLOVE		02
20	0503010045	O'RING		02

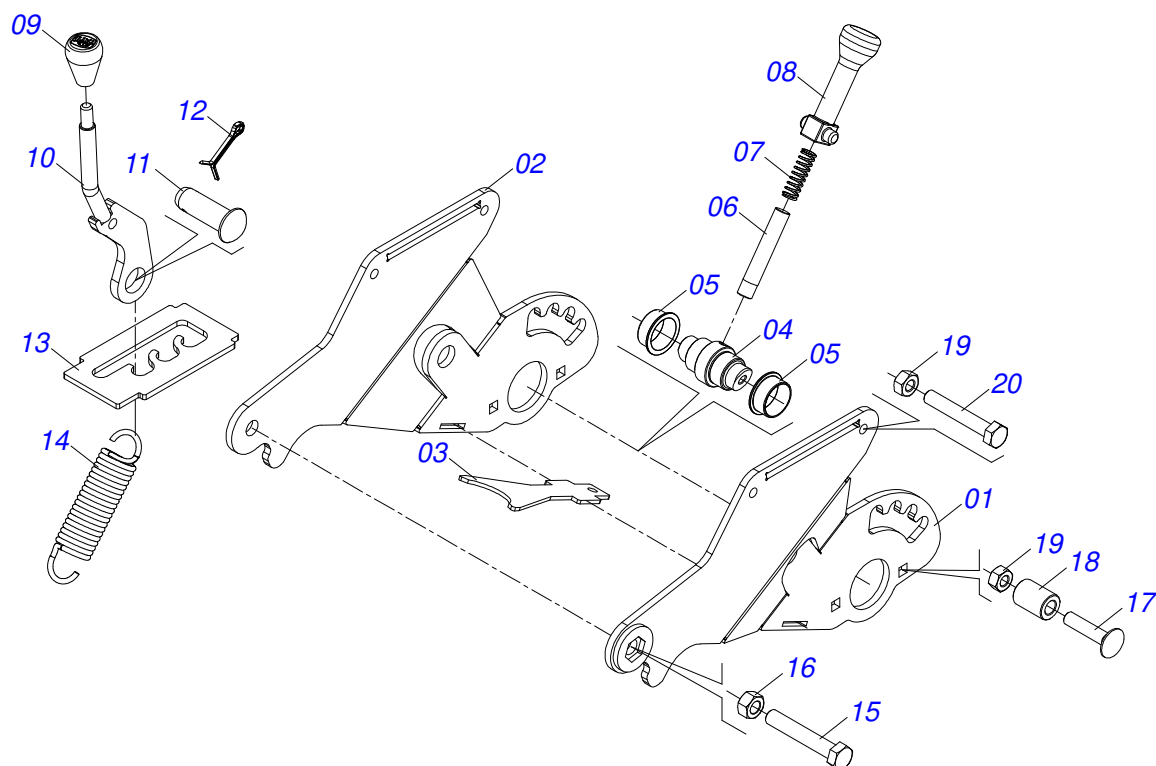


Item	Code	Description	See page	QT
01	0521069585	LEFT SIDE		01
02	0581019475	RIGHT SIDE BODY		01
03	0581019511	COVER		01
04	0581019510	AXIS		01
05	0503019351	LUBRICANT GLOVE		02
06	0581019520	AXIS		01
07	0503030190	0.5" X 1.6" X 0.05" SPRING		01
08	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
09	0503030878	LEVER CRANK		01
10	0521068661	LEVER		01
11	0571012442	COUPLING SHAFT		01
12	0503010257	1/8" X 1" COTTERPIN		01
13	0581019512	PLATE TOP		01
14	0503034817	SPRING		01
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503011336	1/2" HEX SELF ADJUSTING NUT		01
17	0501011753	5/16" X 1-3/4" BOLT		02
18	0581015855	SLEEVE		02
19	0503013816	5/16" LOCKNUT		04
20	0503010848	5/16" X 3.1/2" BOLT		02

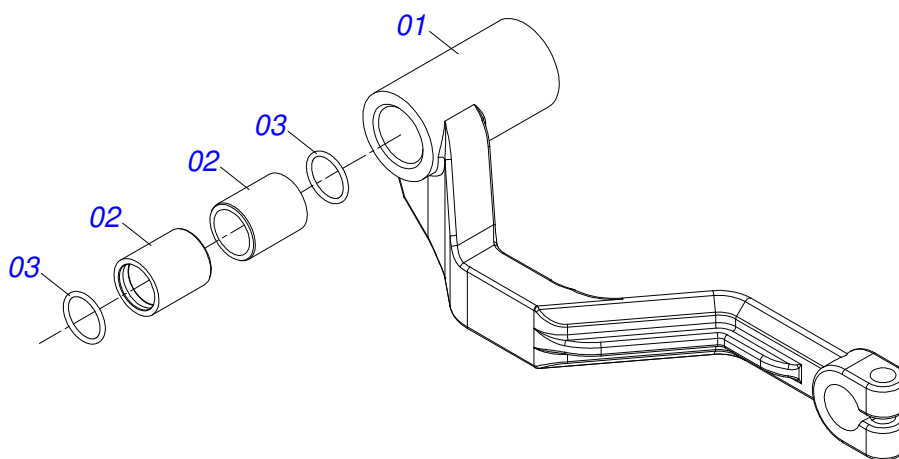


Item	Code	Description	See page	QT
01	0581019523	LEFT ARM WHEEL DEPTH		01
02	0581019514	LUBRICANT GLOVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

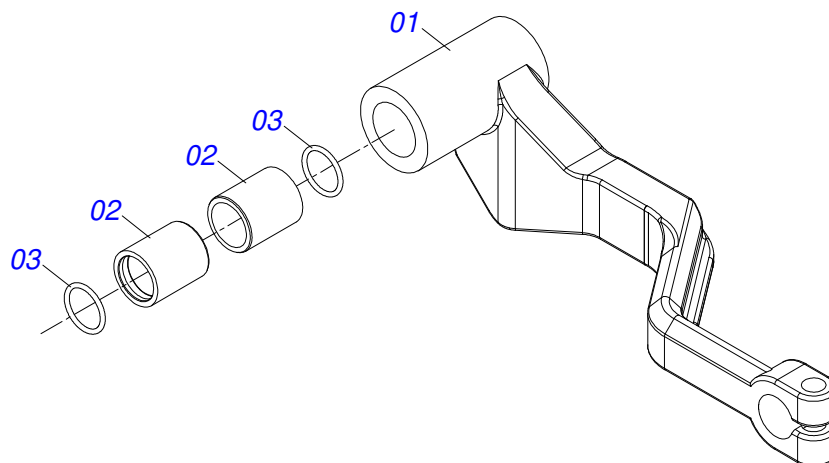


Item	Code	Description	See page	QT
01	0581019524	RIGHT ARM DEPTH		01
02	0581019514	LUBRICANT GLOVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

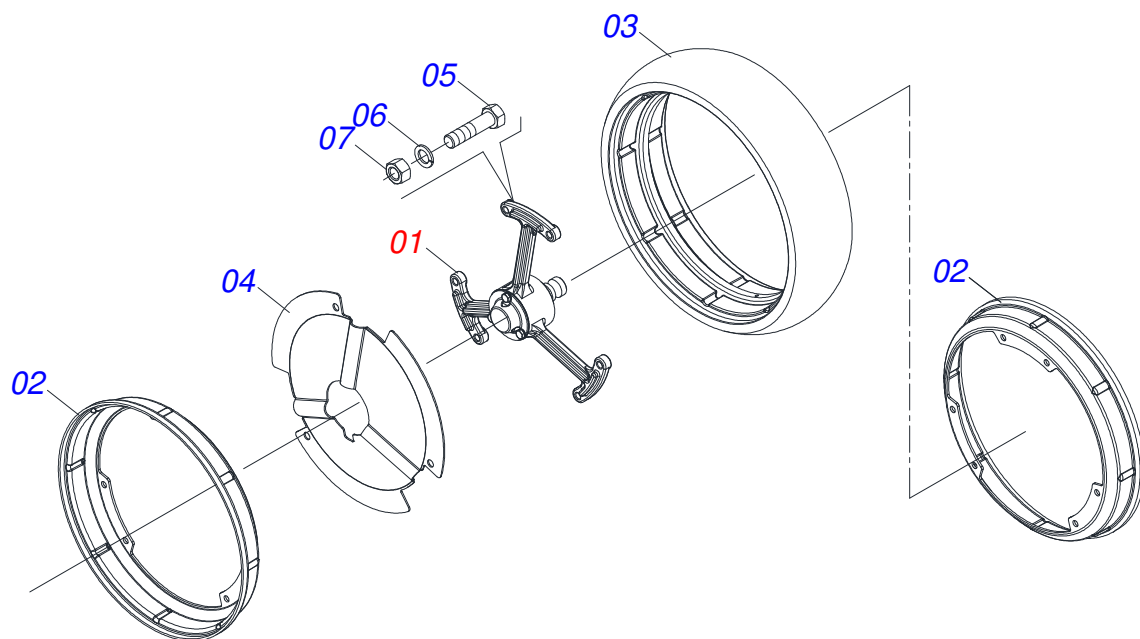


Item	Code	Description	See page	QT
01	0521055055	BOX WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	122	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	NUT		06
06	0503010179	5/16" ZN SPRING WASHER		06
07	0503010337	5/16" NUT		06

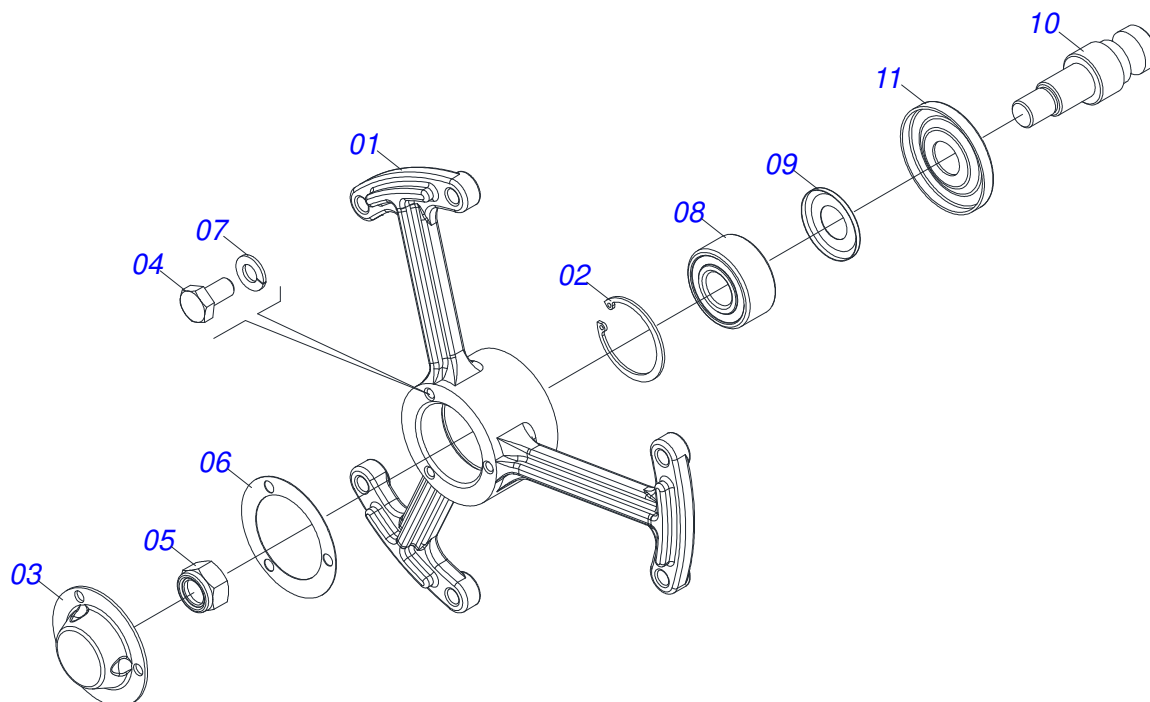


Item	Code	Description	See page	QT
01	0581019522	CASE WHEEL DEPTH WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	COVER DEPTH		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010878	5/8" SELF ALIGNING NUT		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0503010143	1/4" SPRING WASHER		03
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019529	DEPTH REGULATOR SHAFT		01
11	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01

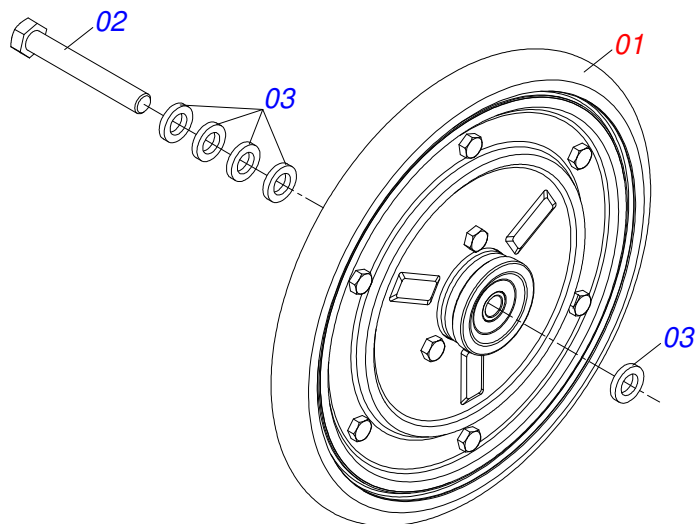


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	125	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

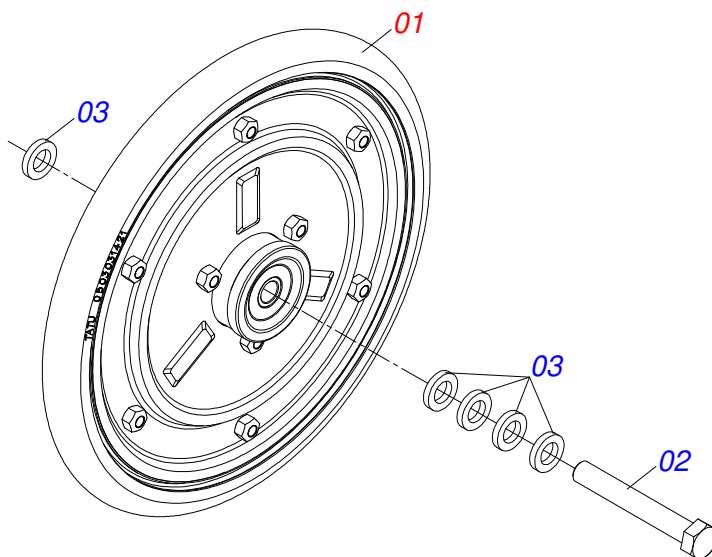


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	125	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

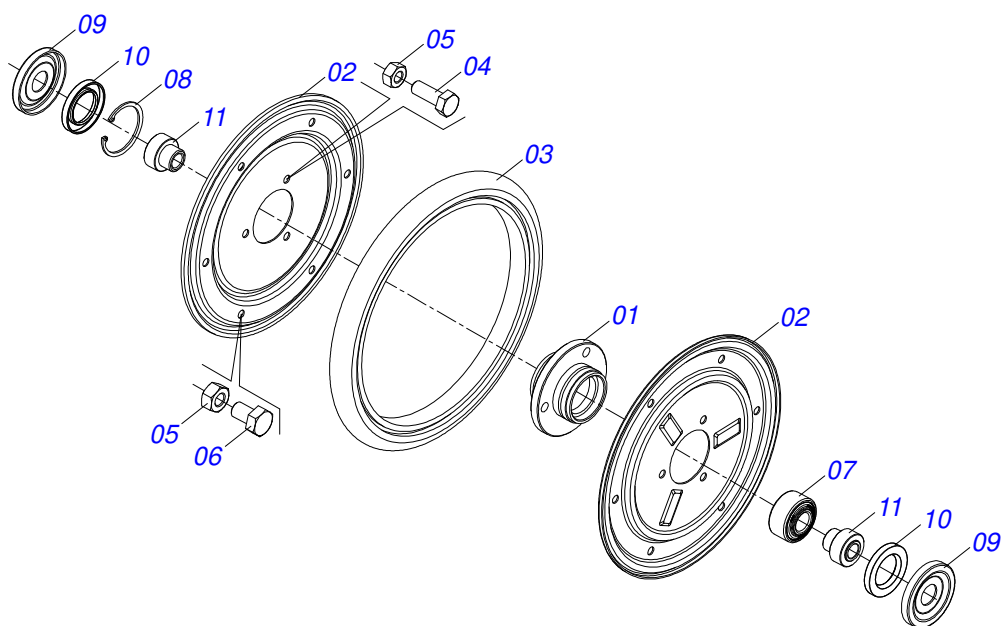


Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

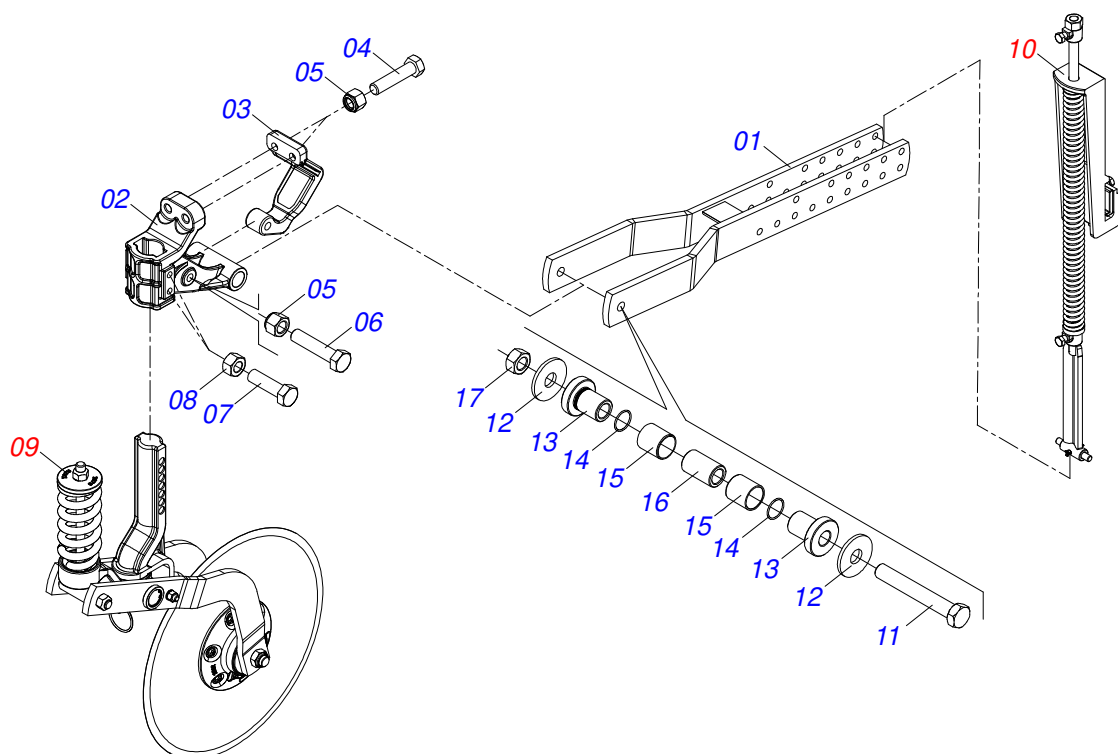

Item	Code	Description	See page	QT
01	0521066231	SHORT FERTILIZER LINE ARM		01
02	0502012873	SUPPORT DC LINE FERTILIZER		01
03	0502012876	CLAMP		01
04	0503016110	BOLT 5/8 UNC X 4 C S G.7 ZN		02
05	0503012412	5/8 UNC SELF LOCKING NUT		03
06	0501011027	5/8" X 3-3/4" BOLT		01
07	0503019116	BOLT		02
08	0503010013	5/8" NUT		02
09	0521053231	DPL 20 SHORT LINE WITHOUT LUBRICATION 127 CONICAL BEARING		01
10	0521054906	SPRING ASSY FERTILIZER	130	01
11	0501010066	3/4" X 9" BOLT		01
12	0511017232	FLAT WASHER		02
13	0581019195	SIDE GUIDE GLOVE		02
14	0503010410	RING		02
15	0503019278	LUBRICANT GLOVE		02
16	0581019196	CENTRAL GUIDE GLOVE		01
17	0503011255	3/4" LOCK NUT		01

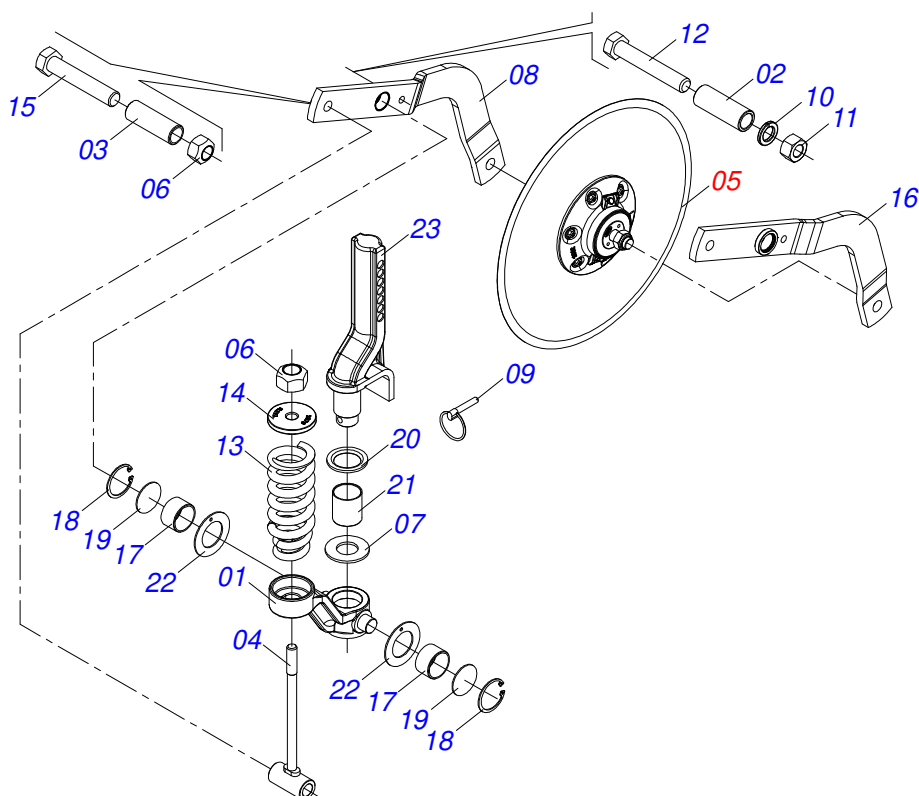


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT WITHOUT LUBRICATION		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	128	01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	WASHER BRACKET AXIS DC PST		01
08	0521068887	DC RIGHT ARM WITH GLOVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2" NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH GLOVE		01
17	0503019272	LUBRICANT GLOVE		02
18	0503010390	SEAL RING		02
19	0581017628	COVER		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012825	SHAFT FIXING SHAFT CUT LINE SHORT		01

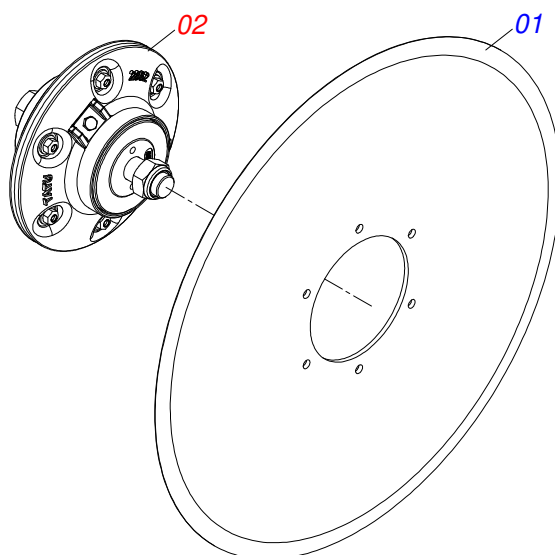


Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521053697	CUTTING DISK BOX	129	01

CUTTING DISK BOX


0521053697

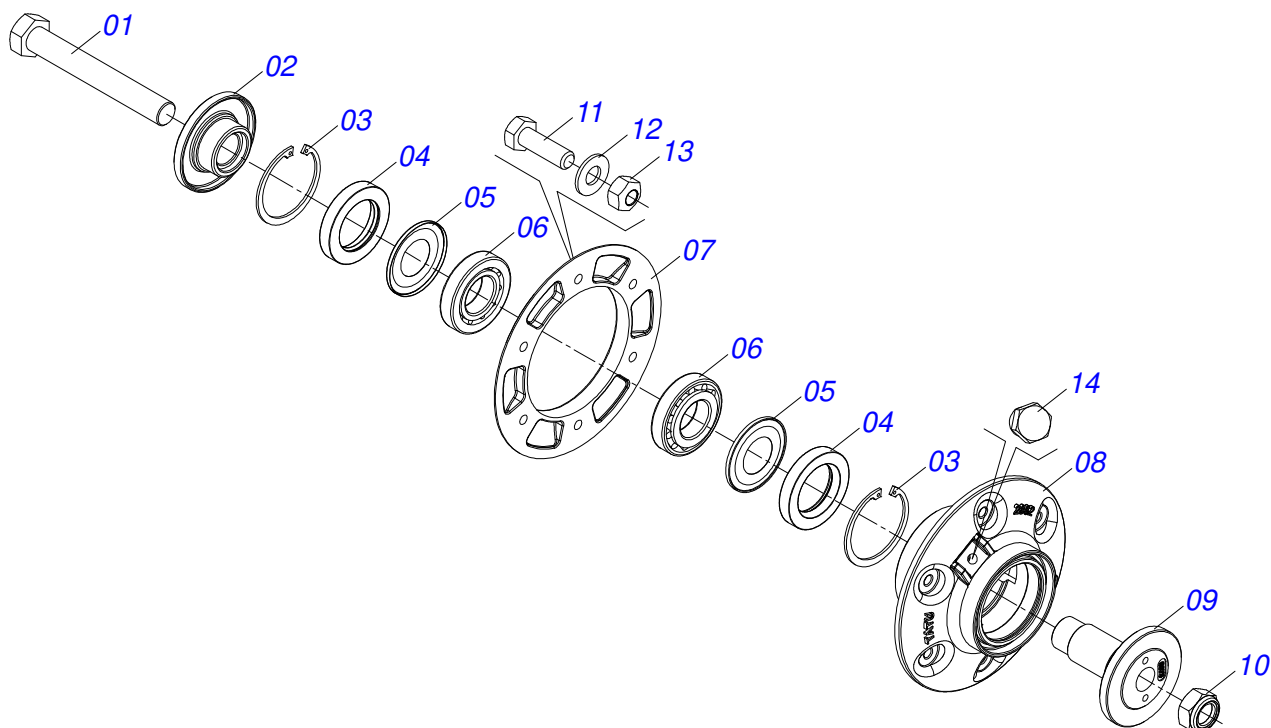


Item	Code	Description	See page	QT
01	0503019283	SCREW 7/8 UNF X 6.1/4		01
02	0502040872	REGULATORY NUT		01
03	0503010370	502072 CLAMPING RING (FOR AXLE)		02
04	0503010590	00674-B SEAL		02
05	0503019285	RING		02
06	0503012170	30207 ROLLER BEARING		02
07	0502020641	BLADE DISC FLANGE		01
08	0502012862	CUTTING DISK BOX		01
09	0502040873	CUTTING DISC AXLE		01
10	0503017755	NUT		01
11	0503018825	5/16 UNC UNC BOLT		06
12	0501010694	8.5 X 18 X 1.5 FLAT WASHER		06
13	0503013816	5/16" LOCKNUT		06
14	0511017907	1/8" BSPT X 6 PLUG		02

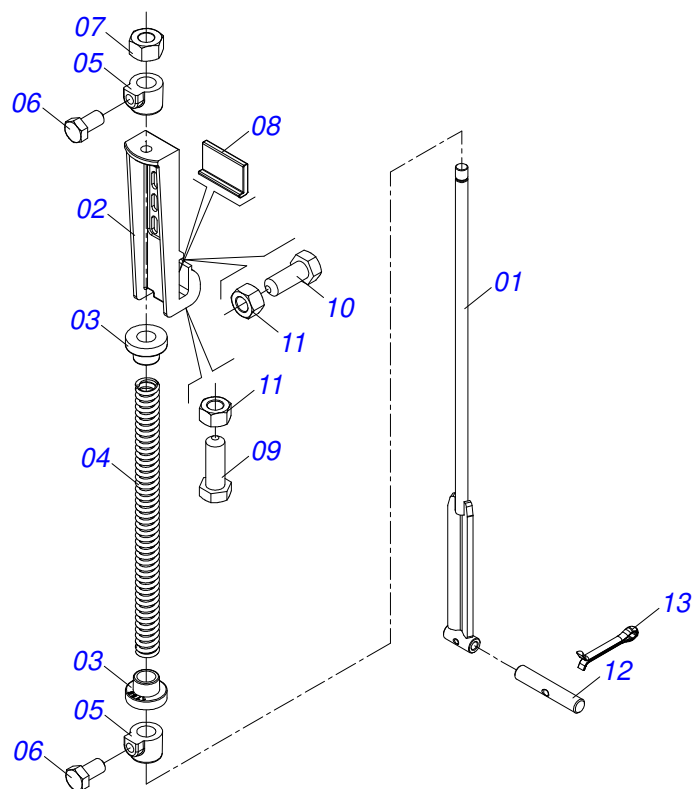


Item	Code	Description	See page	QT
01	0521067619	TUBE LINE FERTILIZER		01
02	0502012510	SPRING ROD SUPPORT		01
03	0502012184	FERTILIZER SPRING GUIDE		02
04	0503031910	1.7" X 22.8" X 0.3" SPRING		01
05	0502040534	SPRING GUIDE BUSHING LOCK		02
06	0501018535	1/2 X 1 BOLT		02
07	0503010014	3/4" NUT		01
08	0502010891	SPRING CHOCK SUPPORT VARON		01
09	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
10	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		02
12	0581013793	PIN LOCK		01
13	0503010577	3/16" X 1-1/4" COTTERPIN		01

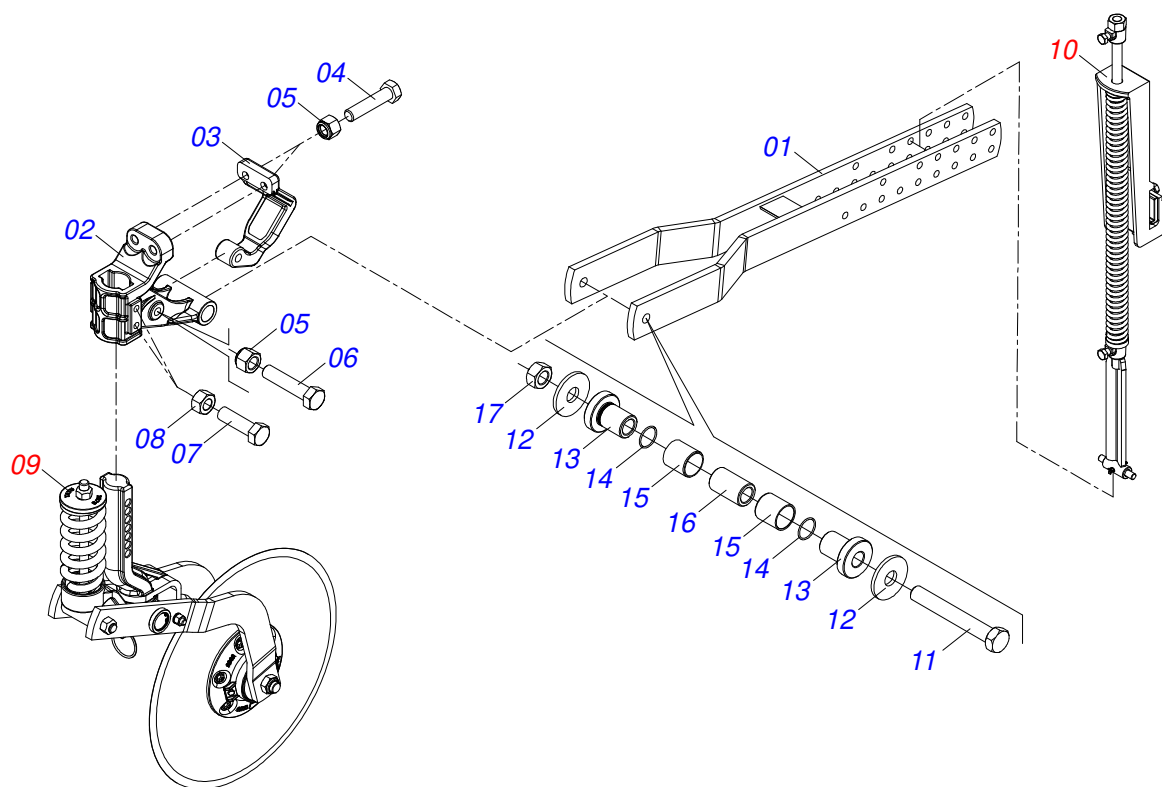


Item	Code	Description	See page	QT
01	0521066230	LONG FERTILIZER LINE ARM		01
02	0502012873	SUPPORT DC LINE FERTILIZER		01
03	0502012876	CLAMP		01
04	0503016110	BOLT 5/8 UNC X 4 C S G.7 ZN		02
05	0503012412	5/8 UNC SELF LOCKING NUT		03
06	0501011027	5/8" X 3-3/4" BOLT		01
07	0503019116	BOLT		02
08	0503010013	5/8" NUT		02
09	0521053232	DPL 20 LONG LINE WITHOUT LUBRICATION 132 CONICAL BEARING		01
10	0521054906	SPRING ASSY FERTILIZER	130	01
11	0501010066	3/4" X 9" BOLT		01
12	0511017232	FLAT WASHER		02
13	0581019195	SIDE GUIDE GLOVE		02
14	0503010410	RING		02
15	0503019278	LUBRICANT GLOVE		02
16	0581019196	CENTRAL GUIDE GLOVE		01
17	0503011255	3/4" LOCK NUT		01

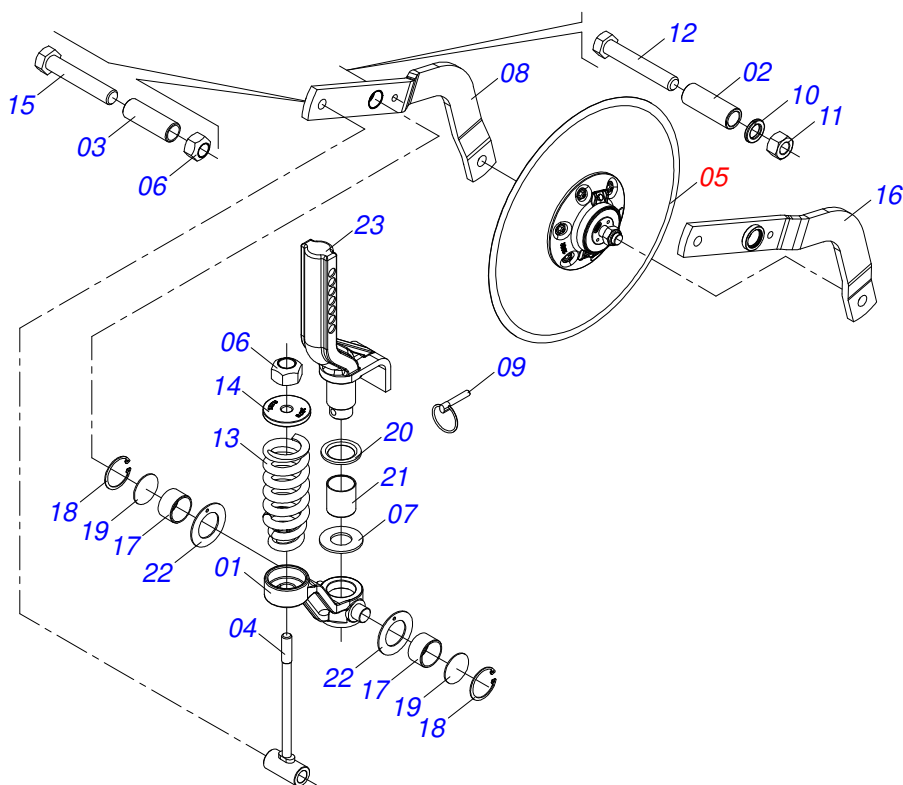


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT WITHOUT LUBRICATION		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	128	01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	WASHER BRACKET AXIS DC PST		01
08	0521068887	DC RIGHT ARM WITH GLOVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2" NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH GLOVE		01
17	0503019272	LUBRICANT GLOVE		02
18	0503010390	SEAL RING		02
19	0581017628	COVER		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012824	FIXING SHAFT DISC CUT LINE		01

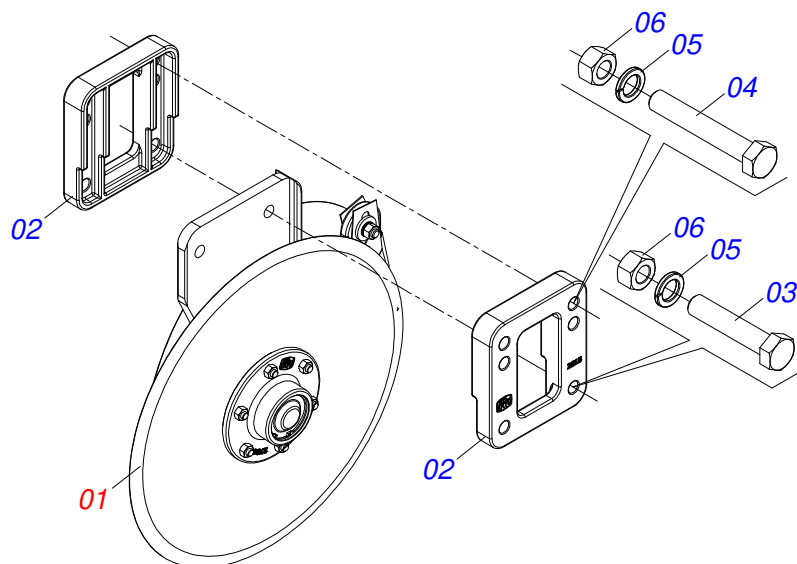


Item	Code	Description	See page	QT
01	0521054765	DDD LEFT FERTILIZER	134	01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2" NUT		04

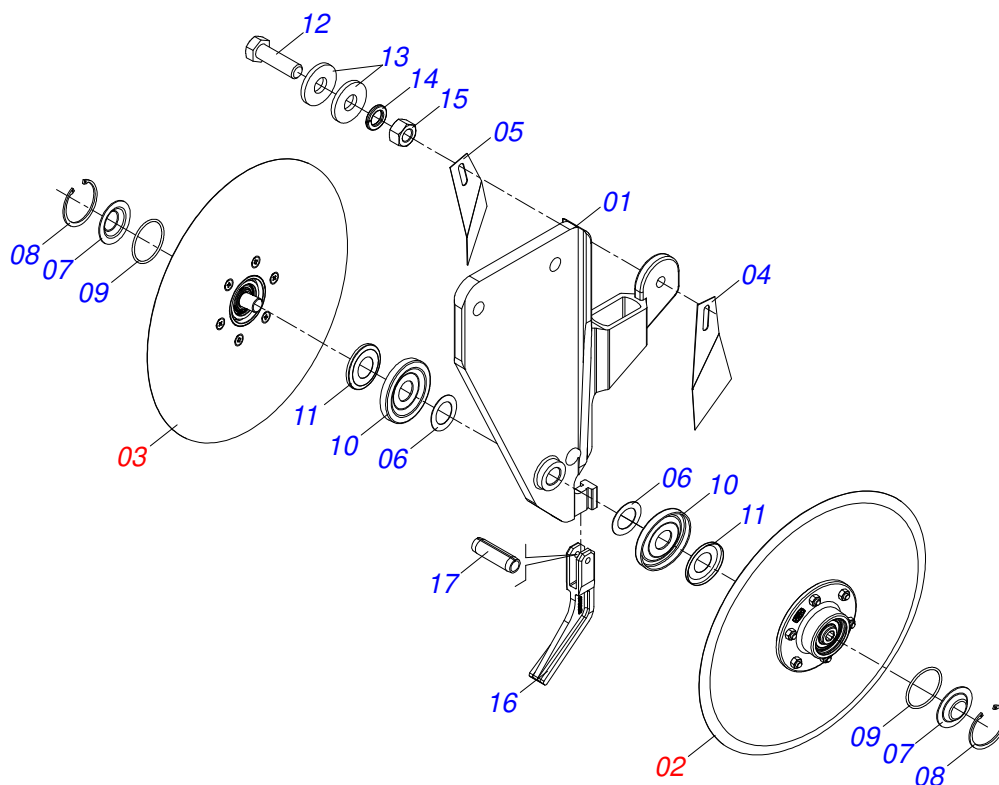


Item	Code	Description	See page	QT
01	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
02	0521054761	LEFT LOW CUBE	114	01
03	0521054760	DOWN LOW CUBE	115	01
04	0501017541	RIGHT DOUBLE DISC SCRAPER		01
05	0501017542	LH DOUBLE DISC SCRAPER		01
06	0511015098	FLAT WASHER		02
07	0571011152	DOUBLE DISC CAP		02
08	0503015081	502052 CLAMPING RING (FOR AXLE)		02
09	0503014679	2-134 O'RING		02
10	0511011927	DUST CLOAK		02
11	0503034055	CLAMPING RING		02
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
13	0501010984	FLAT WASHER		02
14	0503010025	3/8" SPRING WASHER		01
15	0503010026	3/8" NUT		01
16	0502070062	SCRAPER		01
17	0503011402	0.2" X 0.8" SPRING PIN		01

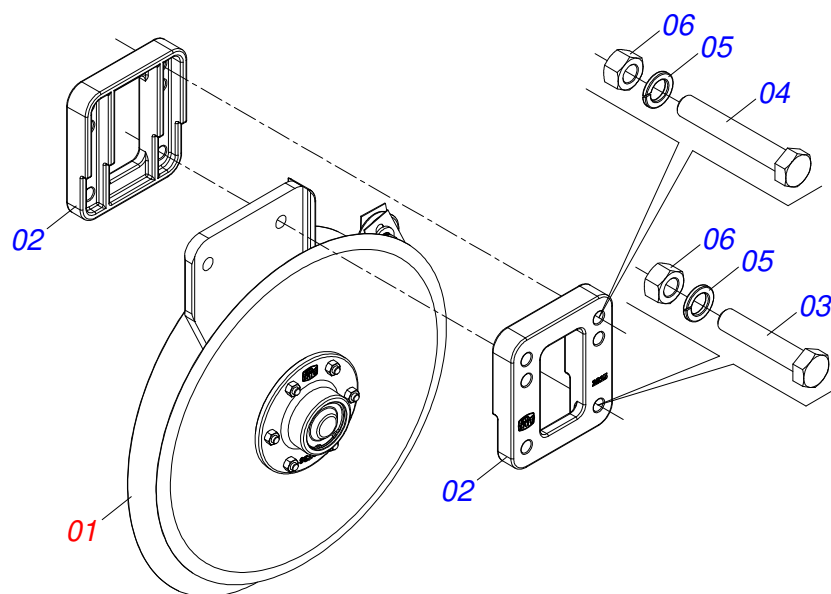


Item	Code	Description	See page	QT
01	0521054764	DDD RIGHT FERTILIZER	136	01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2" NUT		04

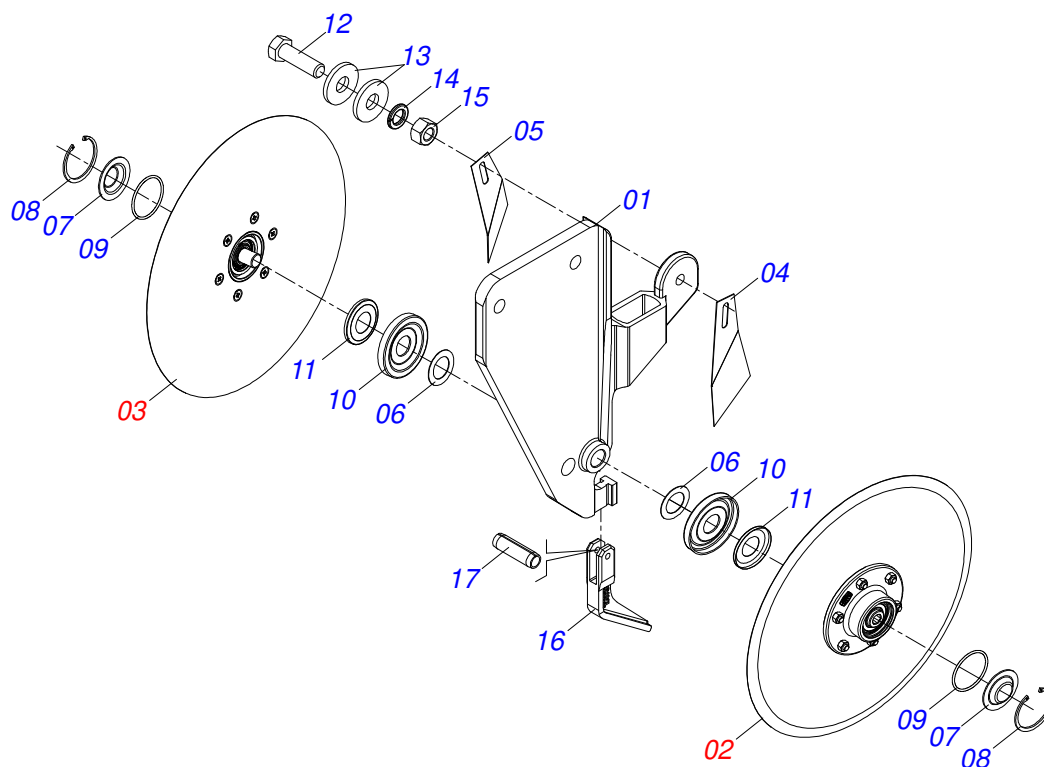


Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0521054761	LEFT LOW CUBE	114	01
03	0521054760	DOWN LOW CUBE	115	01
04	0501017541	RIGHT DOUBLE DISC SCRAPER		01
05	0501017542	LH DOUBLE DISC SCRAPER		01
06	0511015098	FLAT WASHER		02
07	0571011152	DOUBLE DISC CAP		02
08	0503015081	502052 CLAMPING RING (FOR AXLE)		02
09	0503014679	2-134 O'RING		02
10	0511011927	DUST CLOAK		02
11	0503034055	CLAMPING RING		02
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
13	0501010984	FLAT WASHER		02
14	0503010025	3/8" SPRING WASHER		01
15	0503010026	3/8" NUT		01
16	0502070062	SCRAPER		01
17	0503011402	0.2" X 0.8" SPRING PIN		01

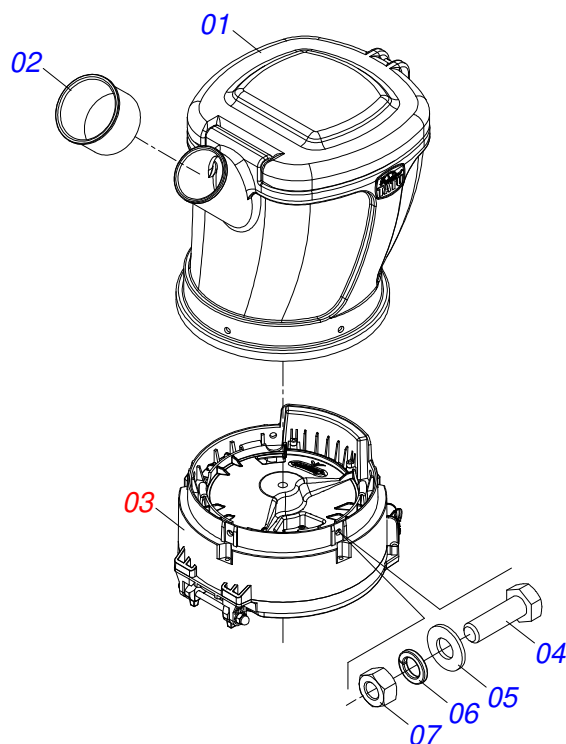


Item	Code	Description	See page	QT
01	0521050118	DEPOSIT SEED BOCAL		01
02	0581014295	FIXING GLOVE		01
03	0511052058	SEED SYSTEM TITANIUM	138	01
04	0503010358	5/16" X 5/8" BOLT		05
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		05
06	0503010179	5/16" ZN SPRING WASHER		05
07	0503010337	5/16" NUT		05

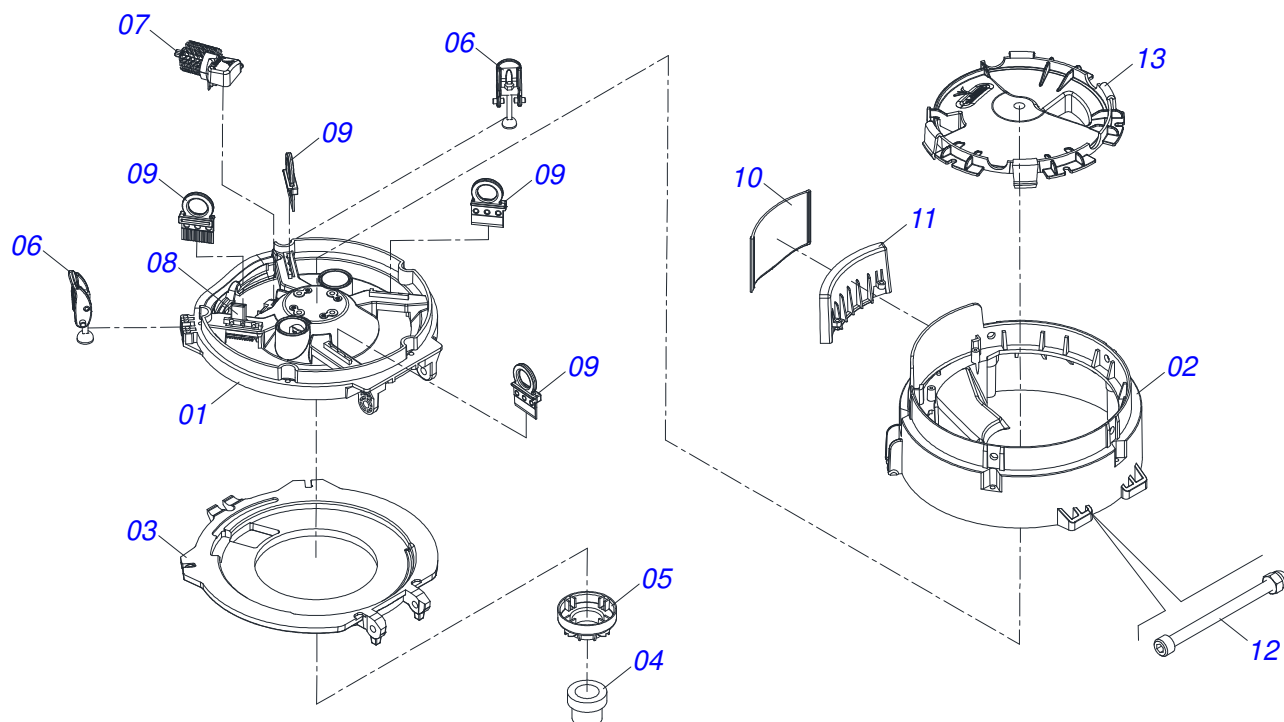


Item	Code	Description	See page	QT
01	0503062031	BASE SET		01
02	0503062032	NECK TITANIUM ASSY		01
03	0503062033	OPPOSITE BASE SET		01
04	0503062034	CENTRAL ADAPTER SET		01
05	0503062035	SET FALSE ADAPT CENTER		01
06	0503062036	SUBSET ASSY LOCK BASE		01
07	0503062037	SUBSET ESCOVAFLEX ASSY		01
08	0503062038	ASSY ANTI-LEAP		01
09	0503062039	POLIFLOW TITANIUM ASSY		01
10	0503062040	DISPLAY ASSY TITANIUM 1050010		01
11	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
12	0503062042	SET BOLT ARTICULADOR		01
13	0503062043	ASSY LIMIT WEIGHT		01

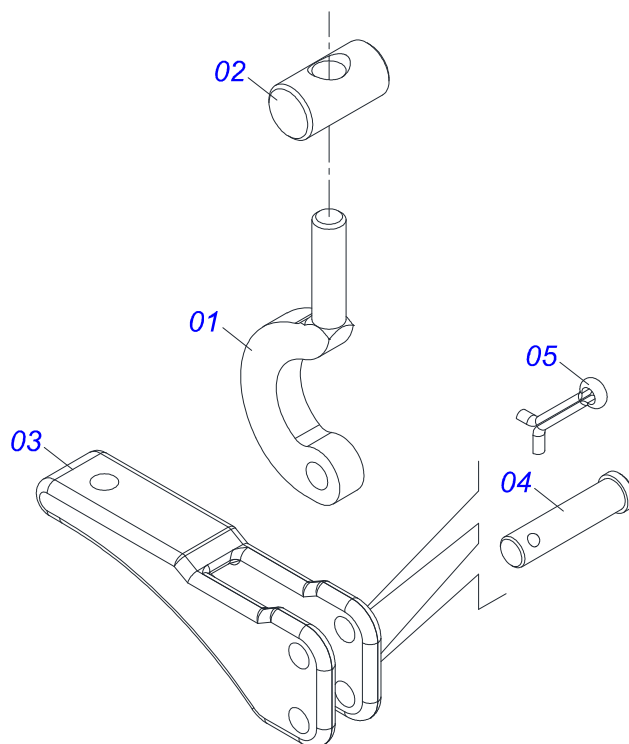


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

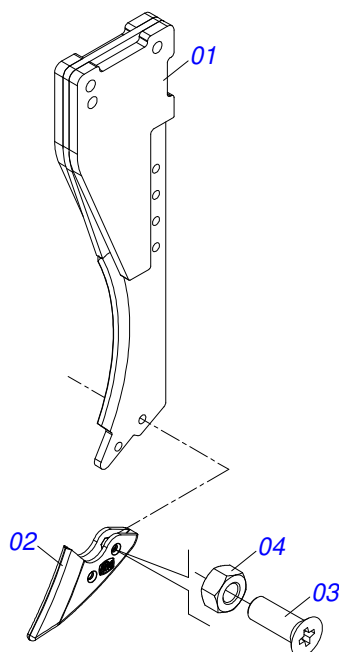


Item	Code	Description	See page	QT
01	0521065998	SCARIFIER SPINDLE		01
02	0502040869	FIXED ROD BEARING		01
03	0503010546	5/16" X 7/8" BOLT		02
04	0503010337	5/16" NUT		02

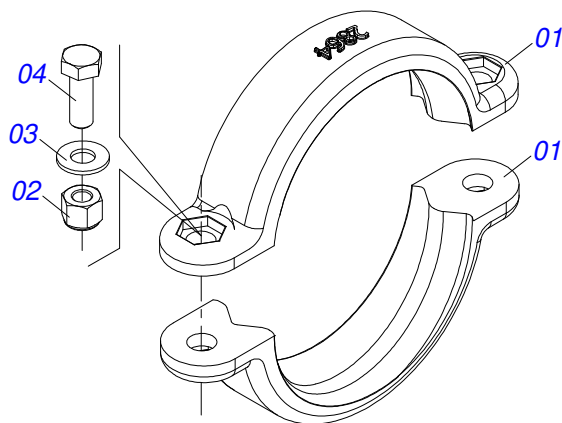


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010365	NUT		02

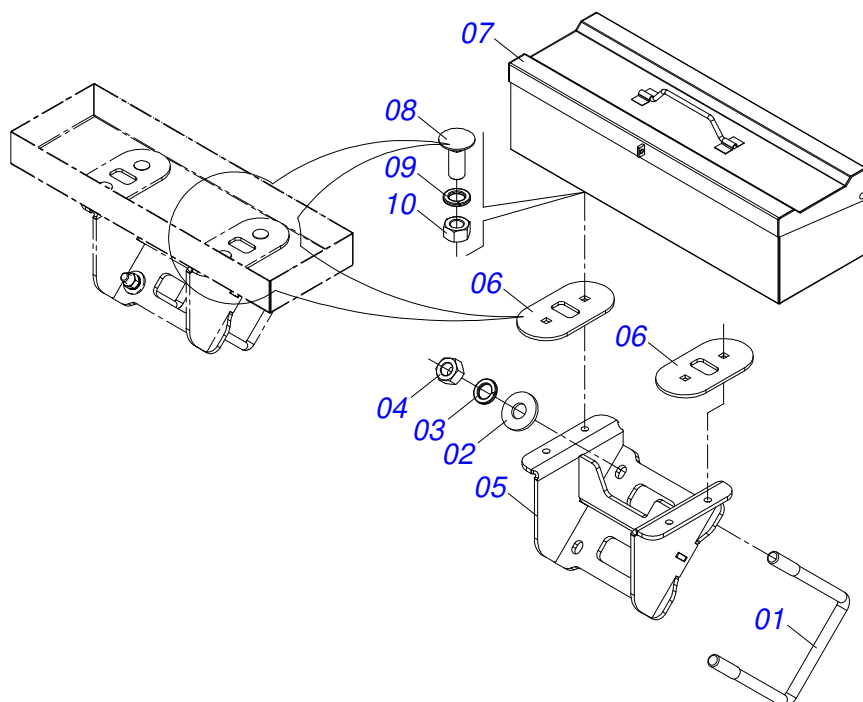


Item	Code	Description	See page	QT
01	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
02	0511017302	FLAT WASHER		04
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2" NUT		04
05	0521069295	SUPPORT TOOL CHEST		01
06	0581017000	PLATE INTERMEDIARY		02
07	0503034772	BOX		01
08	0501011643	3/8 X 1" BOLT		04
09	0503010025	3/8" SPRING WASHER		04
10	0503010026	3/8" NUT		04

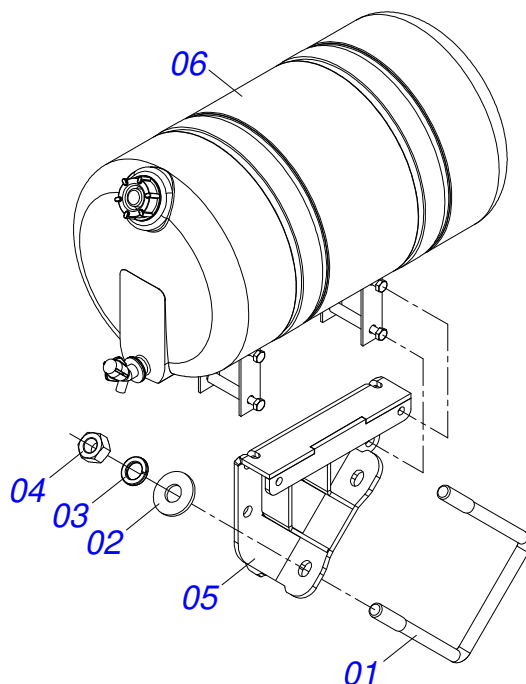

Item	Code	Description	See page	QT
01	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
02	0511017302	FLAT WASHER		04
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2" NUT		04
05	0521069405	WATER TANK SUPPORT		01
06	0503014820	COROTE BLACK WATER		01

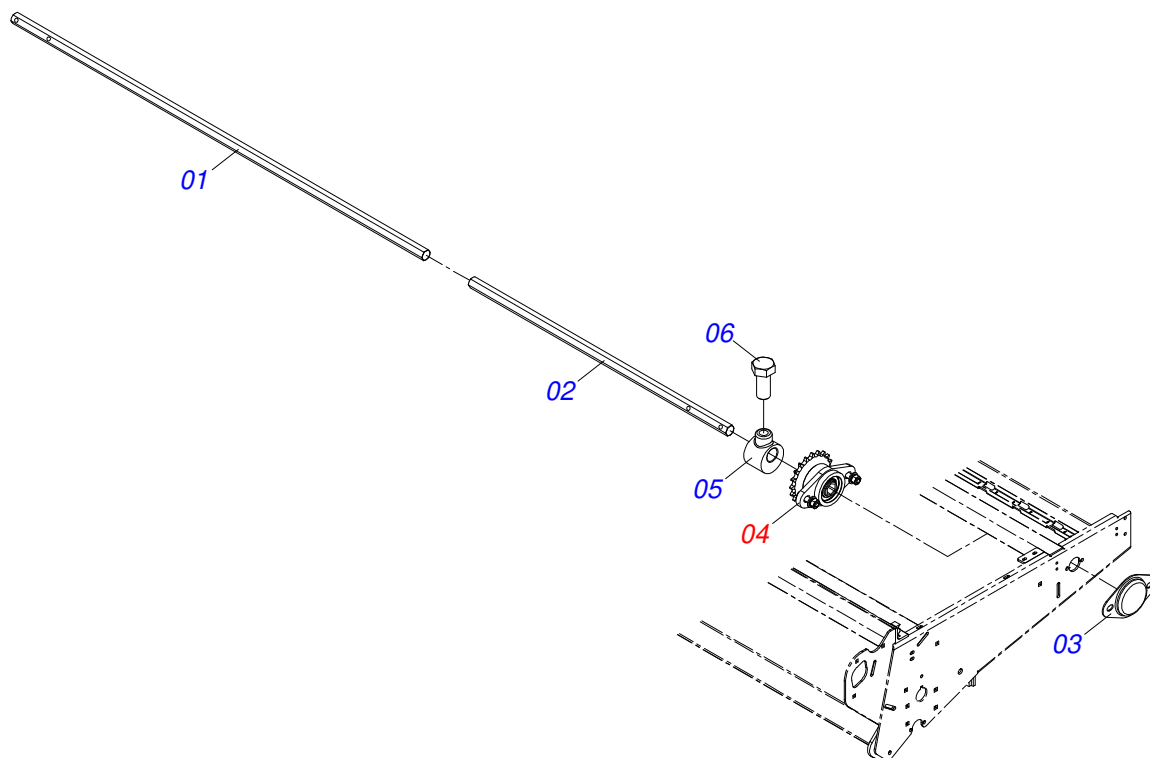


Item	Code	Description	See page	QT
01	0531016944	RIGHT 5/8" X 96" HEX AXLE		01
02	0561019199	5/8" X 2275 AXLE HEX		01
03	0561014215	BEARING COVER LOWER ROW FRAME		02
04	0521055214	BEARING GEAR WITH	75	02
05	0502040534	SPRING GUIDE BUSHING LOCK		04
06	0501018535	1/2 X 1 BOLT		04

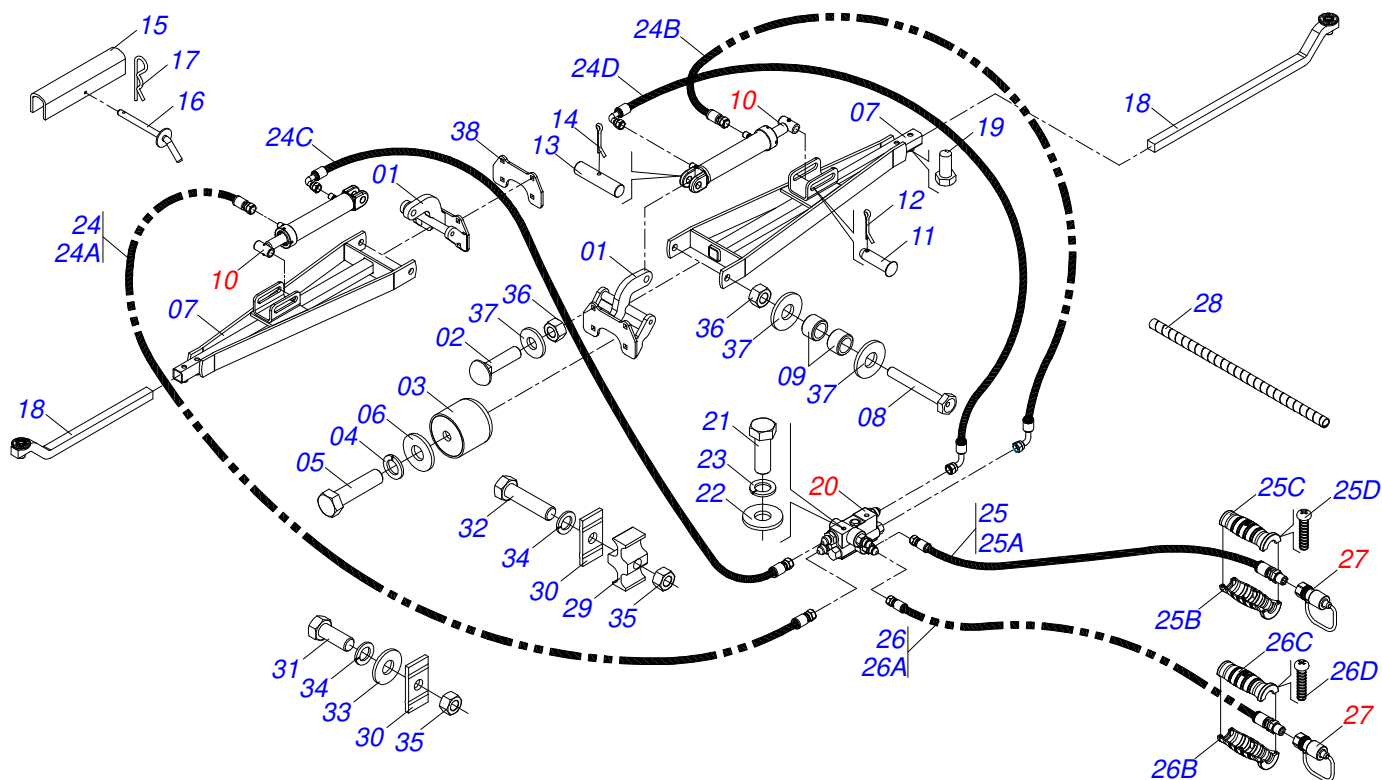


Item	Code	Description	See page	QT
01	0511069622	ROW MARKER ARM SUPPORT		02
02	0501014177	5/8" X 2-1/2" BOLT		08
03	0503011070	BEATER		02
04	0503010019	1/2" SPRING WASHER		02
05	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
06	0551019213	FLAT WASHER		02
07	0511061811	ROW MARKER ARM		02
08	0521061655	BOLT 5/8 UNC X 320 MM		02
09	0521010479	SLEEVE ARTICULATION		04
10	0511058449	HYDRAULIC CYLINDER	146	02
11	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511015779	1" X 4.2" AXLE		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
16	0501068994	0.3" X 3.1" LOCK PIN		02
17	0503030168	HAIR PIN		02
18	0501066949	1235 TURNBUCKLE		02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
20	0501054649	SEQUENTIAL VALVE ASSY	147	01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
22	0501010984	FLAT WASHER		02
23	0503010025	3/8" SPRING WASHER		02
24	0511057090	HYDRAULIC MARKER HAND SET		01
24A	0501081728	HOSE 3/8 X 3100 TR-TR		01
24B	0501080392	3/8" X 3300 TR-TC HOSE		01
24C	0501081988	3/8" X 145.6" TR-TC HOSE		01
24D	0501081682	TC-TC HOSE ASSY		01
25	0521052417	HOSE 3/8 X 4000 TR-TM PURPLE / RED		01
25A	0501080361	3/8" X 157" TR-TM HOSE		01
25B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01


Item	Code	Description	See page	QT
25C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
25D	0503018952	PLASTIC BOLT		06
26	0521052418	HOSE 3/8 X 4000 TR-TM PURPLE / BLUE		01
26A	0501080361	3/8" X 157" TR-TM HOSE		01
26B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
26C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
26D	0503018952	PLASTIC BOLT		06
27	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	7	02
28	0571017773	SPRING PROTECTION PLASTIC HOSE 3/4		02
29	0502012702	BODY SUPPORT CLAMP		06
30	0531011180	UPPER BODY CLIP		04
31	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
32	0503011103	7/16" X 2-1/2" BOLT		02
33	0501012803	FLAT WASHER		02
34	0503010180	7/16" SPRING WASHER		06
35	0503010244	7/16" NUT		02
36	0503012412	5/8 UNC SELF LOCKING NUT		10
37	0501012140	FLAT WASHER		04
38	0551018948	BODY MARKER SUPPORT LINE		02

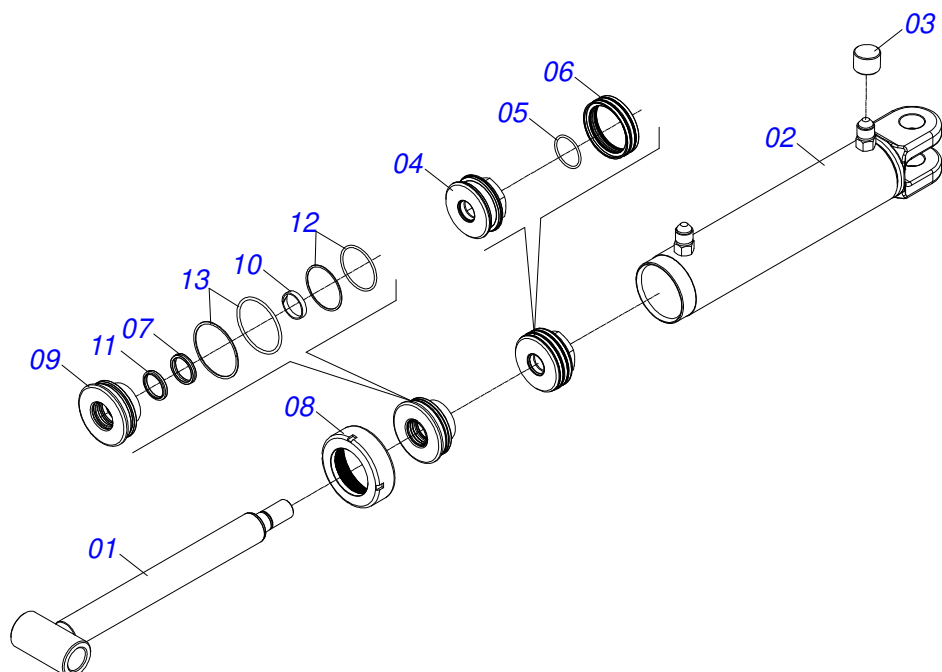

Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02

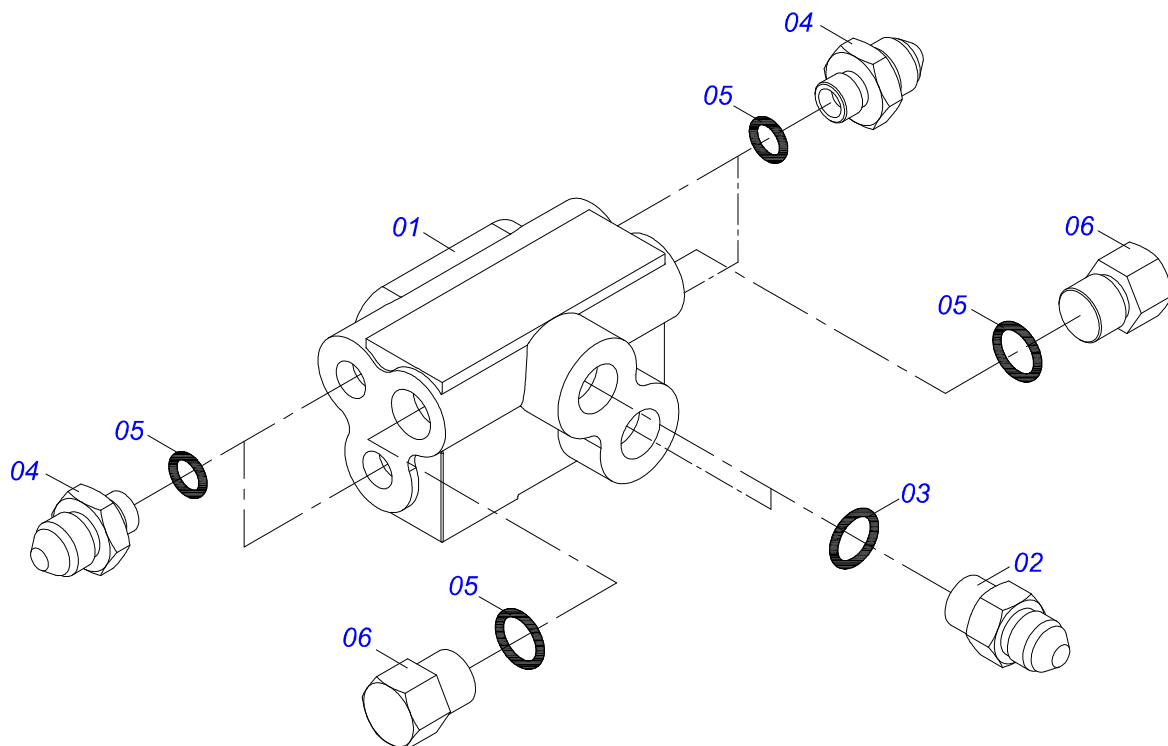

Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

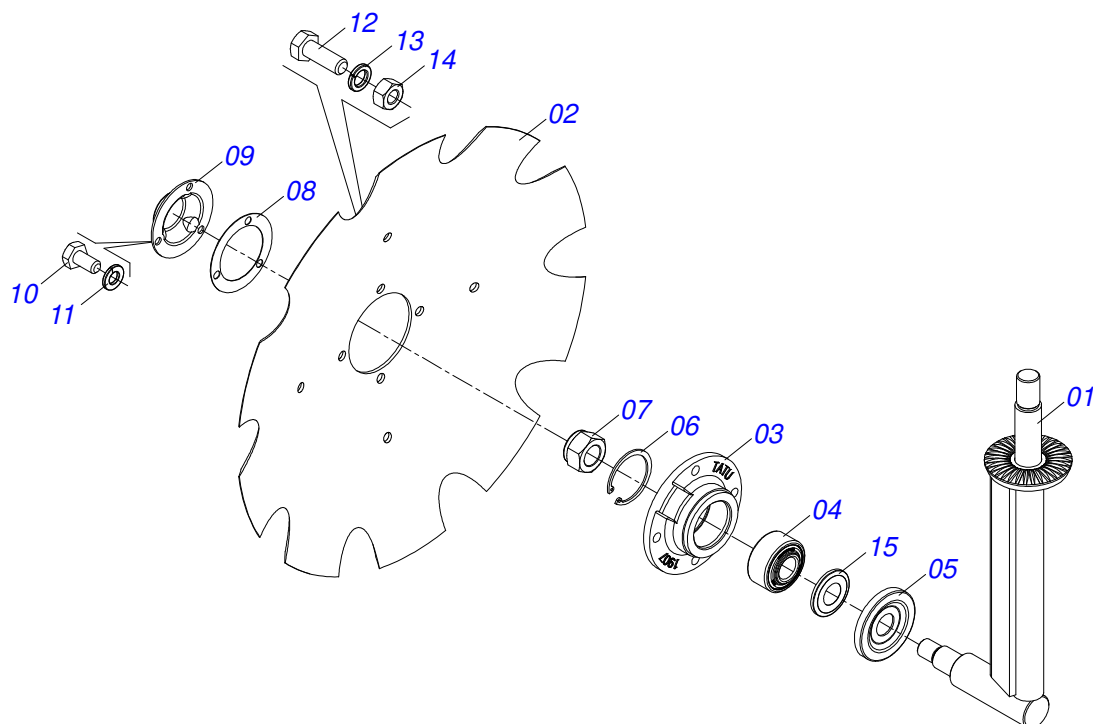

Item	Code	Description	See page	QT
01	0521069643	DISC AXLE MARKER LINE		01
02	0602023094	DR16X3 C36AFPAFR73+4FR+4FR D474 10R		01
03	0581019513	DEPTH WHEEL BOX		01
04	0503019342	ROLLER BEARING		01
05	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503013758	1/4" X 1-1/2" BOLT		03
11	0503010143	1/4" SPRING WASHER		03
12	0503010358	5/16" X 5/8" BOLT		04
13	0503010179	5/16" ZN SPRING WASHER		04
14	0503010337	5/16" NUT		04
15	0503034055	CLAMPING RING		01




Item	Code	Description	See page	QT
01	0503034786	MINOR ADHESIVE LABEL (03 MOUTH)		01
02	0503034785	LABEL ADHESIVE PST DUO FLEX (04/06 MOUTHS)		01
03	0503034782	LABEL ADHESIVE LOGO SMALLER TATU (03 MOUTHS)		01
04	0503033857	LABEL ADHESIVE		01
05	0503033854	ADHESIVE LABEL		01
06	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING		02
07	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
08	0503033421	ADHESIVE LABEL 7 NUMBER FOR PLANTING		02
09	0503033423	LABEL ADHESIVE NUMBER 9		02
10	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
11	0503033008	ADHESIVE LABEL		02
12	0503031428	READ MANUAL DECAL		01
13	0503031942	ADHESIVE LABEL		01
14	0503033676	WARNING LABEL ADHESIVE SEAL LOCK AXIS		01
15	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
16	0503031565	ADHESIVE LABEL CARE		02
17	0503031566	ADHESIVE LABEL		02
18	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
19	0503031425	ADHESIVE LABEL ATTENTION		02
20	0503031669	ADHESIVE LABEL		01
21	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
22	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
23	0503032930	ADHESIVE LABEL DANGER		06
24	0503031087	ADHESIVE LABEL		01
25	0503034078	LIFTING POINTS DECAL		03
26	0503034003	SERIAL NUMBER TAG 61 X 118		01
27	0503010001	3.2 X 5.5 RIVET		04
28	0503032979	ADHESIVE LABEL LETTERS A B C D		02
29	0503034500	ADHESIVE LABEL		01




PST DUO FLEX TITANIUM - FRAME 4790 - CSU - DOUBLE
HYDRAULIC MARKER LABEL ASSY

Page 149
0521057015


Item	Code	Description	See page	QT
30	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02

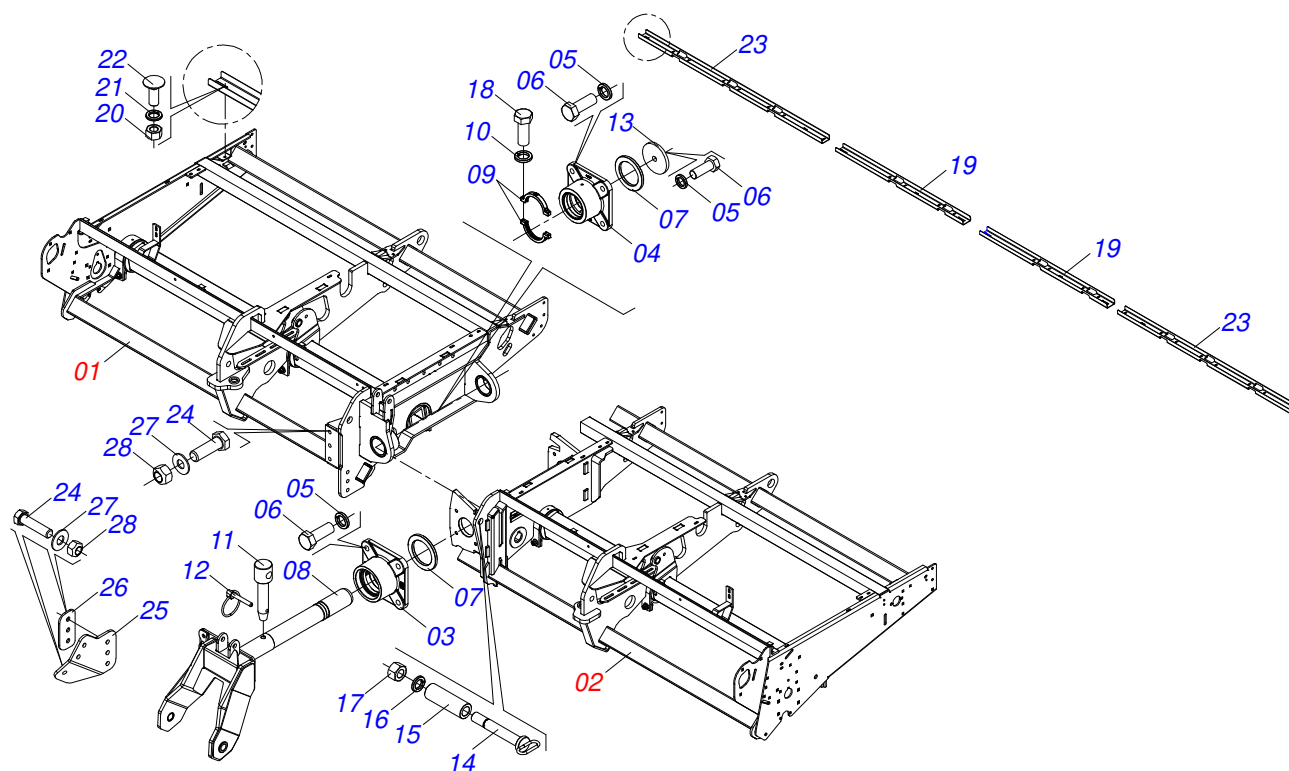


Item	Code	Description	See page	QT
01	0521056832	RIGHT FRAME WITH ROUND AXLE 4790 LEFT 151 MACHINE	01	01
02	0521056833	LEFT FRAME WITH ROUND AXLE 4790 LEFT 152 MACHINE	01	01
03	0501110791	DRIVER WHEEL HUB		01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		01
05	0503011442	3/4" SPRING WASHER		09
06	0501010098	3/4" UNC BOLT		09
07	0571010094	SLEEVE FLANGE		02
08	0521065616	ARTICULATION		01
09	0502012698	CLAMP		02
10	0503011444	SPRING WASHER		02
11	0571013510	LOCK AXLE		01
12	0503030085	LOCK PIN		01
13	0571010095	FLAT WASHER		01
14	0521063003	LOCK PIN		01
15	0571010969	LOCK SLEEVE FRAME		01
16	0503013627	1.1/2 SPRING WASHER		01
17	0501010110	1.1/2" NUT		01
18	0503010365	NUT		02
19	0581018965	TROUGH 24 X 50 X 940		02
20	0503010026	3/8" NUT		08
21	0503010025	3/8" SPRING WASHER		08
22	0501011643	3/8 X 1" BOLT		08
23	0591011622	24 X 50 X 1275 GUTTER		02
24	0503019521	SCREW 3/4 UNF 3 CSRP G.8 ZN		09
25	0591011660	ARTICULATED AXLE REINFORCEMENT LOCK		01
26	0591011661	LATCH SUPPORT		01
27	0501017065	FLAT WASHER		09
28	0503019522	HEX NUT		09

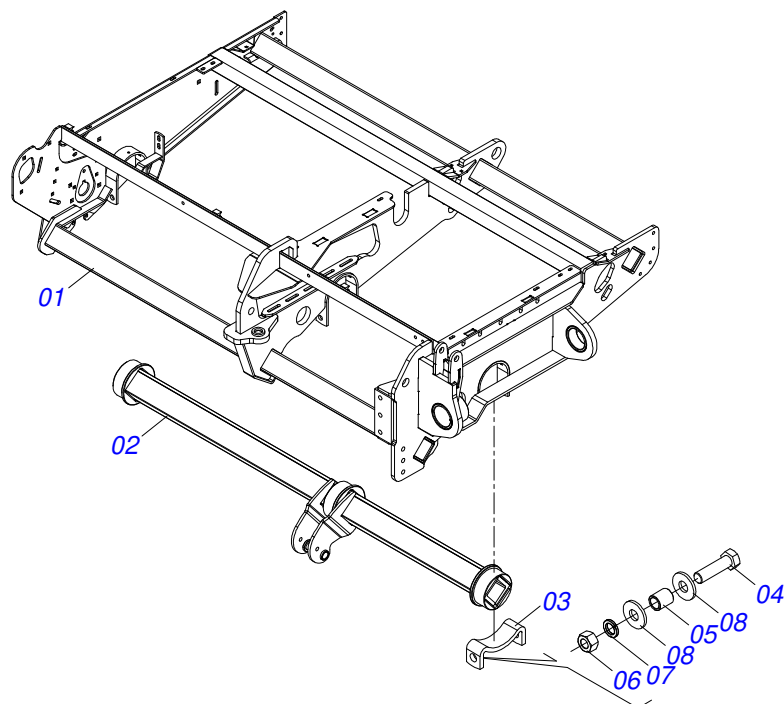

Item	Code	Description	See page	QT
01	0531060340	RIGHT FRAME LEFT ASSY 4790		01
02	0531060342	ARTICULATED AXIS ROTATE RIGHT SIDE 4790		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0531013922	0.6" X 0.8" X 1" SLEEVE		06
06	0503010013	5/8" NUT		06
07	0503011445	SPRING WASHER		06
08	0501012140	FLAT WASHER		12

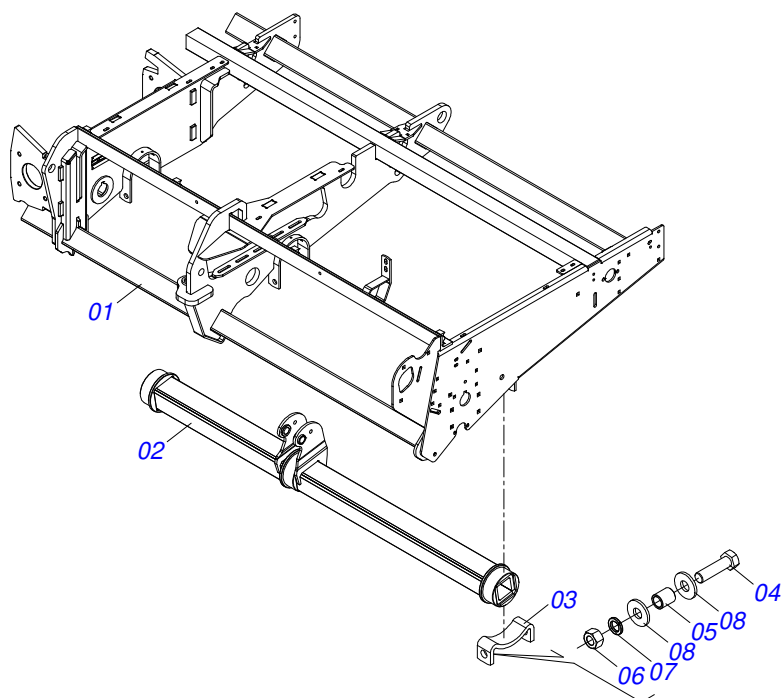

Item	Code	Description	See page	QT
01	0531060341	LEFT FRAME LEFT ASSY 4790		01
02	0531060343	LEFT SKEWING ARTICULATED SHAFT 4790		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0531013922	0.6" X 0.8" X 1" SLEEVE		06
06	0503010013	5/8" NUT		06
07	0503011445	SPRING WASHER		06
08	0501012140	FLAT WASHER		12

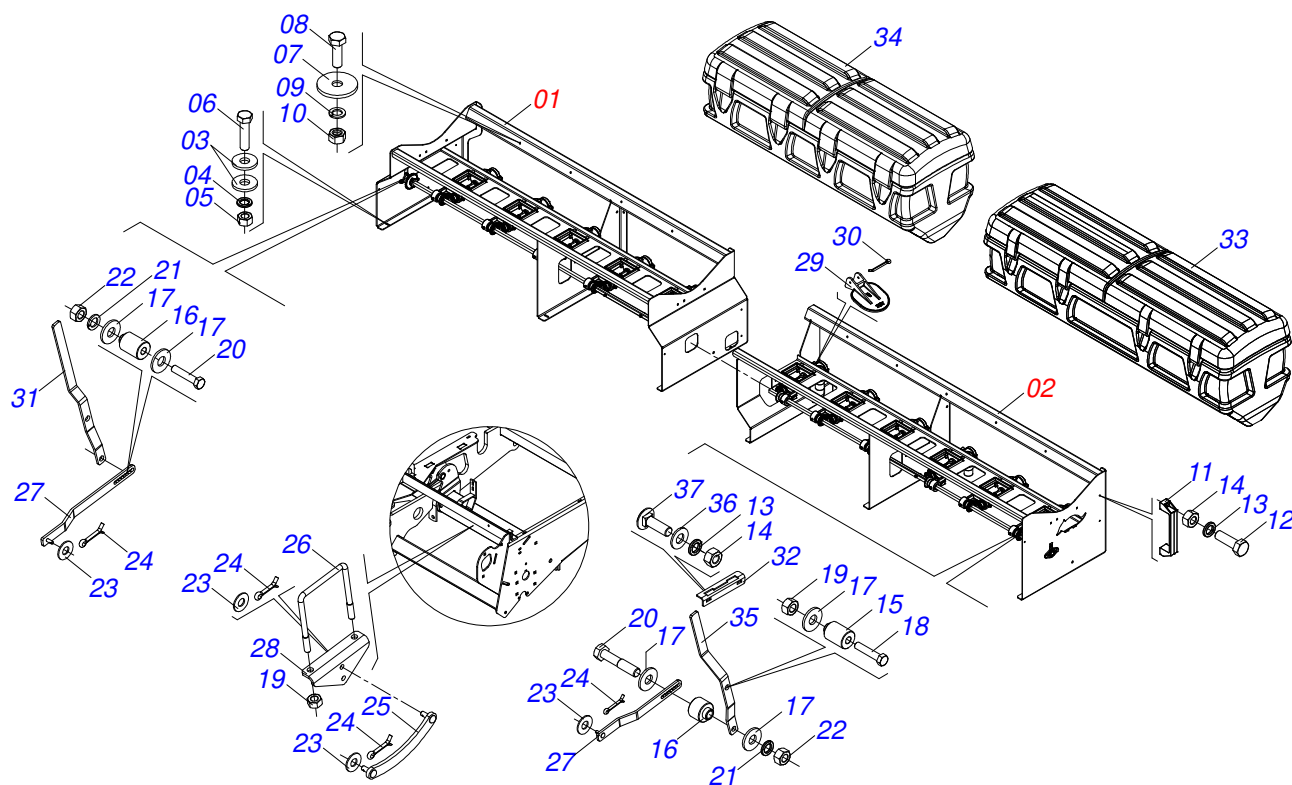


Item	Code	Description	See page	QT
01	0521056838	SILO SUPPORT FERTILIZER RIGHT WITH 154 DISTRIBUTOR 4790 LEFT MACHINE	154	01
02	0521056840	SILO SUPPORT LEFT FERTILIZER DISTRIBUTOR 4790 LEFT MACHINE	155	01
03	0501010984	FLAT WASHER		24
04	0503010025	3/8" SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0503010849	3/8" X 1-1/2" BOLT		12
07	0571019051	FIXER BOX WASHER		18
08	0503013751	3/8 UNC X 1.1/4 BOLT		18
09	0503012535	3/8" SPRING WASHER		18
10	0503012531	3/8" INOX NUT		18
11	0503011957	NYLON LUG		01
12	0503010371	5/16" X 1" BOLT		02
13	0503010179	5/16" ZN SPRING WASHER		06
14	0503010337	5/16" NUT		06
15	0551019168	SLEEVE		02
16	0551019167	SLEEVE UNION		02
17	0511017302	FLAT WASHER		06
18	0503010479	BOLT		02
19	0503011336	1/2" HEX SELF ADJUSTING NUT		06
20	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
21	0503010019	1/2" SPRING WASHER		02
22	0503010060	1/2" NUT		02
23	0501013518	FLAT WASHER		06
24	0503010140	1/8" X 3/4" COTTERPIN		06
25	0511069678	LH LOWER LEVER		02
26	0561016468	FASTENER		02
27	0521061741	INNTER LEVER		02
28	0551019159	LEVER FIXER BODY		02
29	0503034396	FERTILIZER SIDE COVER		11
30	0503010362	1/8" X 1.1/4" COTTERPIN		11


**SILO FERTILIZER ASSY 4790 LEFT MACHINE**

0521056835


Item	Code	Description	See page	QT
31	0551019160	LEVER		01
32	0581012605	GEAR BOX LEVER LOCK		02
33	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED		01
34	0503062391	SILO FERTILIZER 05 MOUTHS		01
35	0591011630	ARM / DISARM LEVER 4790		01
36	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
37	0503011953	5/16" X 1" BOLT		04

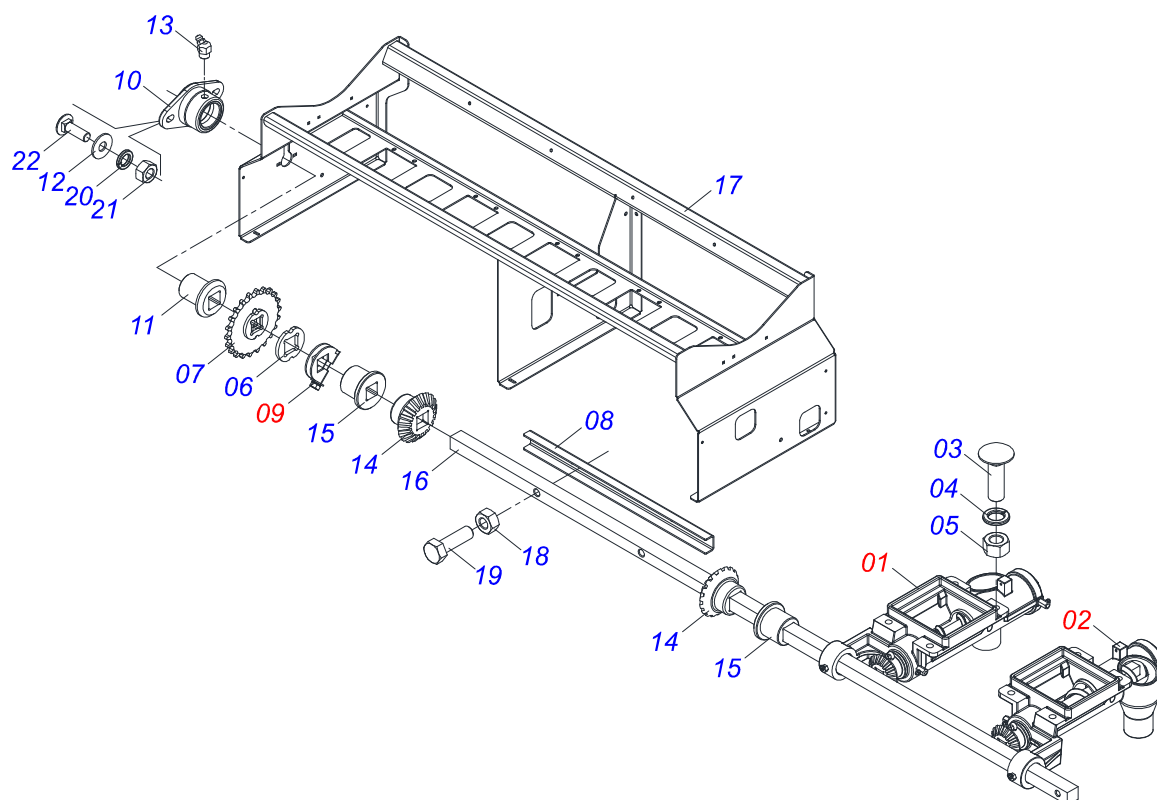


Item	Code	Description	See page	QT
01	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	50	02
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51	04
03	0501010942	3/8" X 1-1/4" BOLT		24
04	0503010025	3/8" SPRING WASHER		24
05	0503010026	3/8" NUT		24
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0501053788	Q3/4" FASTENER AXLE ASSY	52	01
10	0501110392	SILO SUPPORT BEARING		01
11	0521012485	GEAR BOX BEARING AGRICUTURAL		01
12	0521011039	FLAT WASHER		02
13	0503010003	1845 GREASE FITTING		01
14	1902010685	18Z CONICAL GEAR		06
15	0503030275	AGRICULTURAL BEARING		06
16	0591011631	3/4 X 2280 SQUARE SHAFT		01
17	0531060346	RIGHT SUPPORT SILO FERTILIZER 4790 LEFT MACHINE		01
18	0503013816	5/16" LOCKNUT		02
19	0503011953	5/16" X 1" BOLT		02
20	0503010337	5/16" NUT		02
21	0503010179	5/16" ZN SPRING WASHER		02
22	0503010365	NUT		02

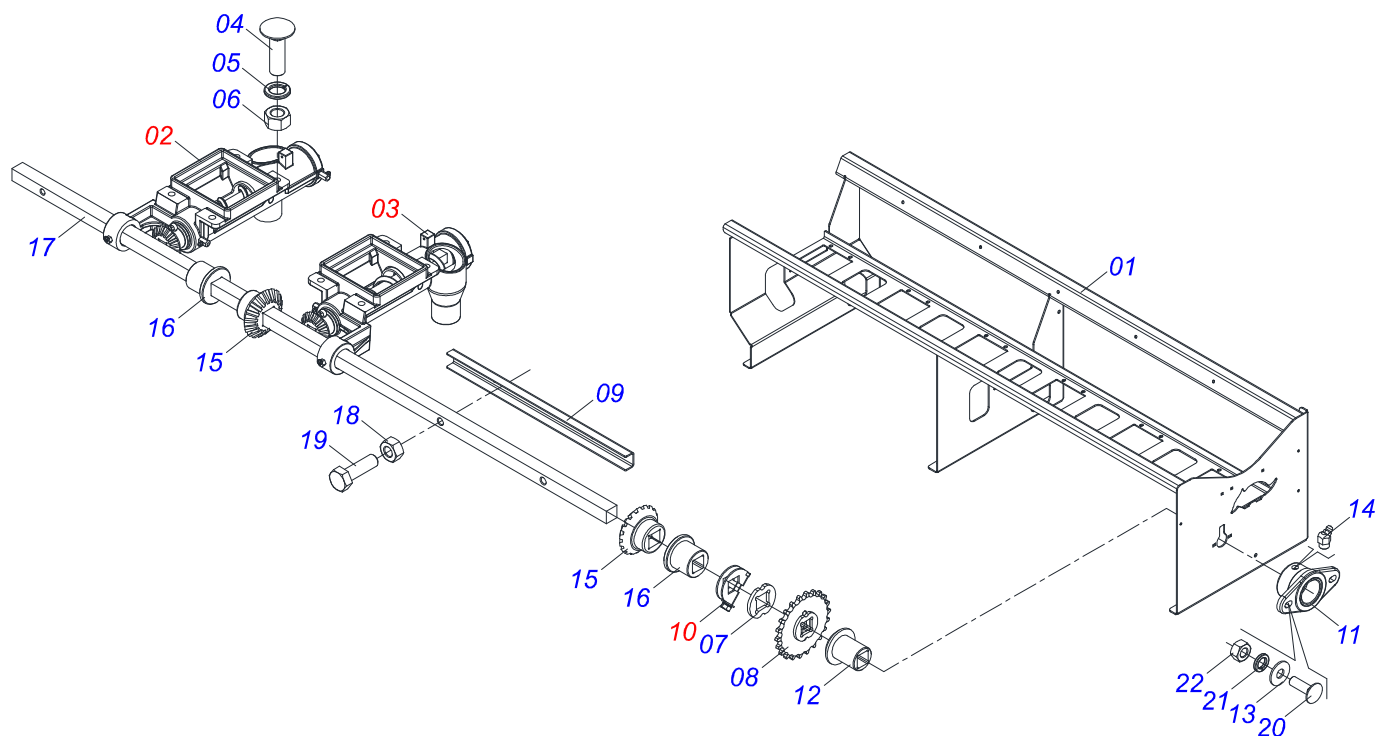

Item	Code	Description	See page	QT
01	0531060347	LEFT SUPPORT SILO FERTILIZER 4790 LEFT MACHINE		01
02	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	50	01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51	04
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503010025	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0501053788	Q3/4" FASTENER AXLE ASSY	52	01
11	0501110392	SILO SUPPORT BEARING		01
12	0521012485	GEAR BOX BEARING AGRICUTURAL		01
13	0521011039	FLAT WASHER		02
14	0503010003	1845 GREASE FITTING		01
15	1902010685	18Z CONICAL GEAR		05
16	0503030275	AGRICULTURAL BEARING		05
17	0591011639	3/4 X 2046 SQUARE SHAFT		01
18	0503013816	5/16" LOCKNUT		02
19	0503010365	NUT		02
20	0503011953	5/16" X 1" BOLT		02
21	0503010179	5/16" ZN SPRING WASHER		02
22	0503010337	5/16" NUT		02

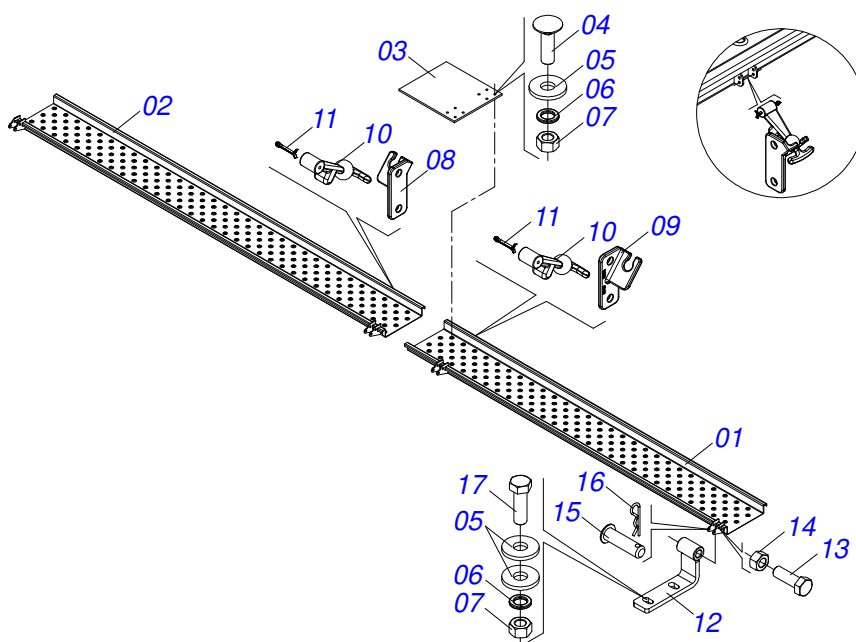

Item	Code	Description	See page	QT
01	0531060350	RIGHT PLATFORM 4790 LEFT MACHINE	01	
02	0531060351	LEFT PLATFORM 4790 LEFT MACHINE	01	
03	0581015863	PLATFORM ENHANCEMENT PROTECTION	01	
04	0501010942	3/8" X 1-1/4" BOLT	02	
05	0501010984	FLAT WASHER	18	
06	0503010025	3/8" SPRING WASHER	10	
07	0503010026	3/8" NUT	10	
08	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
09	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
10	0503011333	COVER FIXER	02	
11	0503010274	5/32"X 2" COTTERPIN	02	
12	0521068316	JOINT SUPPORT	04	
13	0503010741	1/2" X 2-3/4" BOLT	04	
14	0503011336	1/2" HEX SELF ADJUSTING NUT	04	
15	0521010549	COUPLING SHAFT	04	
16	0503030168	HAIR PIN	04	
17	0503010849	3/8" X 1-1/2" BOLT	08	

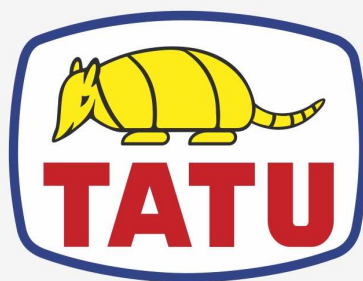

MARCHESAN

Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI

www.marchesan.com.br

