

PARTS CATALOG

ROW CROP PLANTERS

COP TRIO 13/15 L

Code: 0501092113



Series: S-0117

Rev.: 01

Date Rev.: FEVEREIRO/2018

**ORIGINAL PARTS
TATU**



PRODUCTS

Code	Description
0111460029	COP TRIO 5750/13E450 D/HDA MH CPRA CSU TIT S-0117
0111460025	COP TRIO 5750/13E450 D/HDA MH TIT S-0117
0111460023	COP TRIO 5750/13E450 D/IAP MH CSU TIT S-0117
0111460021	COP TRIO 5750/13E450 D/IAP MH DC20 TIT PM400 S0117
0111460030	COP TRIO 5750/13E450 ESPECIAL S-0117
0111460028	COP TRIO 6350/13E500 D/IAP MH CBR CSU TIT S-0117
0111460016	COP TRIO 6350/13E500 ESPECIAL S-0117
0111460033	COP TRIO 6350/13E500 ESPECIAL S-0117
0111460017	COP TRIO 6350/13E500 MH CSU TIT S-0117
0111460019	COP TRIO 6850/15E450 MH CSU TIT PM100 S-0117
0111460018	COP TRIO 7350/15E500 ESPECIAL S-0117
0111460032	COP TRIO 7350/15E500 ESPECIAL S-0117
0111460031	COP TRIO 7350/15E500 ESPECIAL S-0117

ATTENTION: **IMPORTANT**

MARCHESAN S/A RESERVES THE RIGHT AT ANY TIME TO MAKE IMPROVEMENTS IN THE DESIGN, MATERIAL OR SPECIFICATIONS OF MACHINERY, EQUIPMENT OR PARTS WITHOUT THEREBY BECOMING LIABLE TO MAKE SIMILAR CHANGES IN MACHINERY, EQUIPMENT OR PARTS PREVIOUSLY SOLD.

INDEX

 
0909093710	FRAME COP TRIO 13-15 L	1
0521050238	CH C/ARTICULATION	2
0521050978	CH C/ARTICULATION	3
0511059560	CH C/ARTICULATION	4
0511058136	CH C/ARTICULATION	5
0511059494	TRACTION SPRING	6
0909093711	ASSY DRAWBAR	7
0909093712	ASSY DRAWBAR	8
0521045756	HYDRAULIC CYLINDER	9
0511059237	3 POINT TURNBUCKLE	10
0521050133	TURNBUCKLE SIDE	11
0511055096	TRACTOR HITCH	12
0511058123	WHITH RIGHT WHEEL ASSY	13
0511058124	WHITH RIGHT WHEEL ASSY	14
0511050439	WHITH RIGHT WHEEL ASSY	15
0511050440	WHITH RIGHT WHEEL ASSY	16
0511050443	WHITH RIGHT WHEEL ASSY	17
0511050444	WITH LEFT WHEEL SET	18
0521050234	PLATFORM SET	19
0511057799	PLATFORM SET	20
0511059561	PLATFORM SET	21
0511058133	PLATFORM SET	22
0521050229	SET FERTILIZER SILO	23
0511057811	SET FERTILIZER SILO	24
0521050903	SET FERTILIZER SILO	25
0511058129	SET FERTILIZER SILO	26
0521050220	LFT FERTILIZER BEAM SUPPORT	27
0511057812	FERTILIZER BEAM SUPPORT	28
0521050891	FERTILIZER BEAM SUPPORT	29
0511058130	FERTILIZER BEAM SUPPORT	30
0521050219	FERTILIZER BEAM SUPPORT	31
0511057813	FERTILIZER BEAM SUPPORT	32
0521050890	FERTILIZER BEAM SUPPORT	33
0511058131	FERTILIZER BEAM SUPPORT	34
0521050218	CENTER FERTILIZER SILO SUPPORT	35
0511057814	CENTER FERTILIZER SILO SUPPORT	36
0511058132	CENTER FERTILIZER SILO SUPPORT	37
0521050194	RH SUPPORT	38
0521050195	LEFT SUPPORT	39
0521050235	JOINT HANDRAILSET	40
0511057800	JOINT HANDRAILSET	41
0511059562	JOINT HANDRAILSET	42
0511058134	JOINT HANDRAILSET	43
0521050847	HIDRAULIC ROW MARKER ASSY	44
0521050848	HIDRAULIC ROW MARKER ASSY	45
0511058449	HYDRAULIC CYLINDER	46
0501050633	DISC ASSY FOR ROW MARKER	47
0511053904	ROW MARKER DISC	48
0909090391	ROW MARKER	49
0521050689	SET HIDRAULICO	50
0521050973	SET HIDRAULICO	51
0521050897	SET HIDRAULICO	52
0521050765	SET HIDRAULICO	53
0521050849	SET HIDRAULICO	54
0521050584	SET SAFETY VALVE	55
0511057843	OIL CONDUCTOR ASSY	56
0511058127	OIL CONDUCTOR ASSY	57
0521050231	OIL CONDUCTOR ASSY	58
0511059567	OIL CONDUCTOR ASSY	59
0511053368	HYDRAULIC CYLINDER ASSEMBLY	60
0521050695	HOSE KIT SYSTEM HYDRAULIC	61
0521050570	RIGHT COVER PROTECTION	62
0521050572	RIGHT PROTECTION SUPPORT	63
0501053834	FAST COUPLER AGRICULTURAL WITH COVER - 1/2 NPT	64
0501054649	SEQUENTIAL VALVE ASSY	65
0511058431	HYDRAULIC CYLINDER	66

INDEX

0511048939	RIGHT GEAR BOX ASSY	67
0511048940	LEFT GEAR BOX ASSY	68
0501058213	LH GEAR BOX	69
0501058212	RH GEAR	70
0501048790	AXLE WITH LINK ASSY	71
0501056447	CENTRAL BEARING GEAR BOX	72
0501056443	BEARING ASSY GEAR BOX	73
0501056271	GEAR BOX CLOSE BEARINGONE	74
0511052332	SET SUPPORT RIGHT FIXER CHANGE	75
0511052333	SET SUPPORT LEFT FIXER CHANGE	76
0511053356	SET LADDER	77
0511054971	SET PST3 P/ULTRA P	78
0521050225	MOTOR SHAFT ASSEMBLY	79
0511057797	MOTOR SHAFT ASSEMBLY	80
0511059566	MOTOR SHAFT ASSEMBLY	81
0511058125	MOTOR SHAFT ASSEMBLY	82
0511047069	SIDE TRANSMISSION DRIVING	83
0511047070	LH SIDE TRANSMISSION DRIVING	84
0511051434	TRANSMISSION DRIVING ASSY	85
0501052560	AXLE MOTOR SLOW-MOVING ASSY	86
0511058146	RIGHT TRANSMISSION ASSY	87
0511059162	RIGHT TRANSMISSION ASSY	88
0521050228	ASSEMBLY CSU	89
0521050979	ASSEMBLY CSU	90
0521050909	ASSEMBLY CSU	91
0511058579	ASSEMBLY CSU	92
0511058564	ASSEMBLY CSU	93
0511058580	ASSEMBLY CSU	94
0511057755	ASSEMBLY CSU	95
0511057951	ASSEMBLY CSU	96
0511057803	SET DOOR HAND BOOK	97
0511053342	SQUARE SHAFT SET	98
0909093717	FERTILIZER AND SEED LINE	99
0511052411	FRONT SEED LONG ROW WITH CARDAN	100
0511052410	FRONT SEED SHORT ROW WITH CARDAN	101
0521050843	FRONT SEED LONG	102
0511054884	TRANSMISSION BOX	103
0521050835	CH MEC SM COP TRIO S-0117	104
0521050096	SEED DEPOSIT SYSTEM (CSU)	105
0511056608	TITANIUM SEED SYSTEM	106
0511053024	FERTILIZER SHORT LINE	107
0511053023	LONG FERTILIZER LINE	108
0511053209	LEFT 15 X 15 UNAL DOUBLE-DISC	109
0511053208	RIGHT 15 X 15 UNAL DOUBLE-DISC	110
0511053173	LH HUB LOWR Y/DISC	111
0511053172	RIGHT HUB LOWR Y/DISC	112
0511057955	RIGHT REAR SEED ROW ASSY	113
0511057138	RIGHT REAR SEED ROW ASSY	114
0511056585	RIGHT 15" X 15" DOUBLE DISC	115
0511057136	RIGHT REAR SEED ROW ASSY	116
0521041848	REAR RIGHT SEED ROW	117
0511057956	LEFT REAR SEED ROW ASSY	118
0511057139	RIGHT REAR SEED ROW ASSY	119
0511056586	15 X 15 SEED UNAL DOUBLE-DISC ASSY LEFT	120
0511057137	RIGHT REAR SEED ROW ASSY	121
0521041849	REAR LEFT SEED ROW	122
0511051818	18" BLADE DISC ASSY	123
0501052139	18 BLADE DISC WITH FLAT PLAN DISC	124
0511051819	20 BLADE DISC ASSY	125
0501054887	20 BLADE DISC WITH FLAT PLAN DISC	126
0521046501	DEPTH CONTROL AND PRESS WHEEL WITH FAST ADJUSTING	127
0511059462	DEPTH CONTROL WITH FAST ADJUSTMENT	128
0511059463	COMFORT WHEEL WITH FAST ADJUSTMENT	129
0501056769	DEPTH WHEELS REGULATOR ASSY	130
0511050077	WHEEL STRIPED	131


INDEX

0501052908	PRESS WHEELS ASSY	132
0521046122	SYSTEM DEPTH COMPACTOR	133
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	134
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	135
0501052627	DEPHT WHEELS BOX	136
0501052297	DEPTH WHEELS REGULATOR ASSY	137
0511054333	COMPACT WHEEL RIGHT C/ BEARING	138
0511054334	COMPACT WHEEL LEFT C/ BEARING	139
0521044538	DEPHT WHIT REGULACION ANGLE COMPACT CONTROL	140
0511052971	CPRA DEPTH CONTROL ASSY	141
0511059325	LEFT ARM WHEELS	142
0511051546	LH DEPTH CONTROL ASSY	143
0511051547	RH DEPTH CONTROL ASSY	144
0511051583	DEPTH WHEEL HUB SEMIFINISHED	145
0511055819	DEPTH WHIT AROS BAND	146
0511052970	CPRA V PRESS WHEEL ASSY	147
0521044269	PRESS WHEELS/DEPTH ASSY	148
0511055326	DEPTH CONTROL PRESS WHEEL ASSY	149
0501059228	ADJUSTMENT LEVER	150
0511055328	DEPTH WHEEL SYSTEM	151
0511055627	DEPTH CONTROL PRESS WHEELS	152
0511055626	STRIPED BOX WHEEL DEPTH	153
0511055329	LEFT DEPTH WHEEL	154
0521044460	SYSTEM PROF/COMPACT C E500 A 900 SPA	155
0511055690	WHEEL SISTEM	156
0511055628	DEPTH WHEEL SYSTEM	157
0511055629	DEPTH WHEEL SYSTEM	158
0511055327	PRESS WHEEL AXLE V BORR C SPA	159
0501054481	DEPTH CONTROL RIGTH ARM WITH TIRE	160
0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	161
0521050525	FIXER FERTILIZER CONDUCTOR	162
0511052024	FAST CLOSING SET	163
0501052234	SEED SISTEM ASSY	164
0501051094	SEED DISTRIB ASSY WITH DOUB PULLEY	165
0501051119	DOUBLE PULLEY ROCKER'S	166
0511059565		167
0511057798		168
0521050226		169
0511058126		170

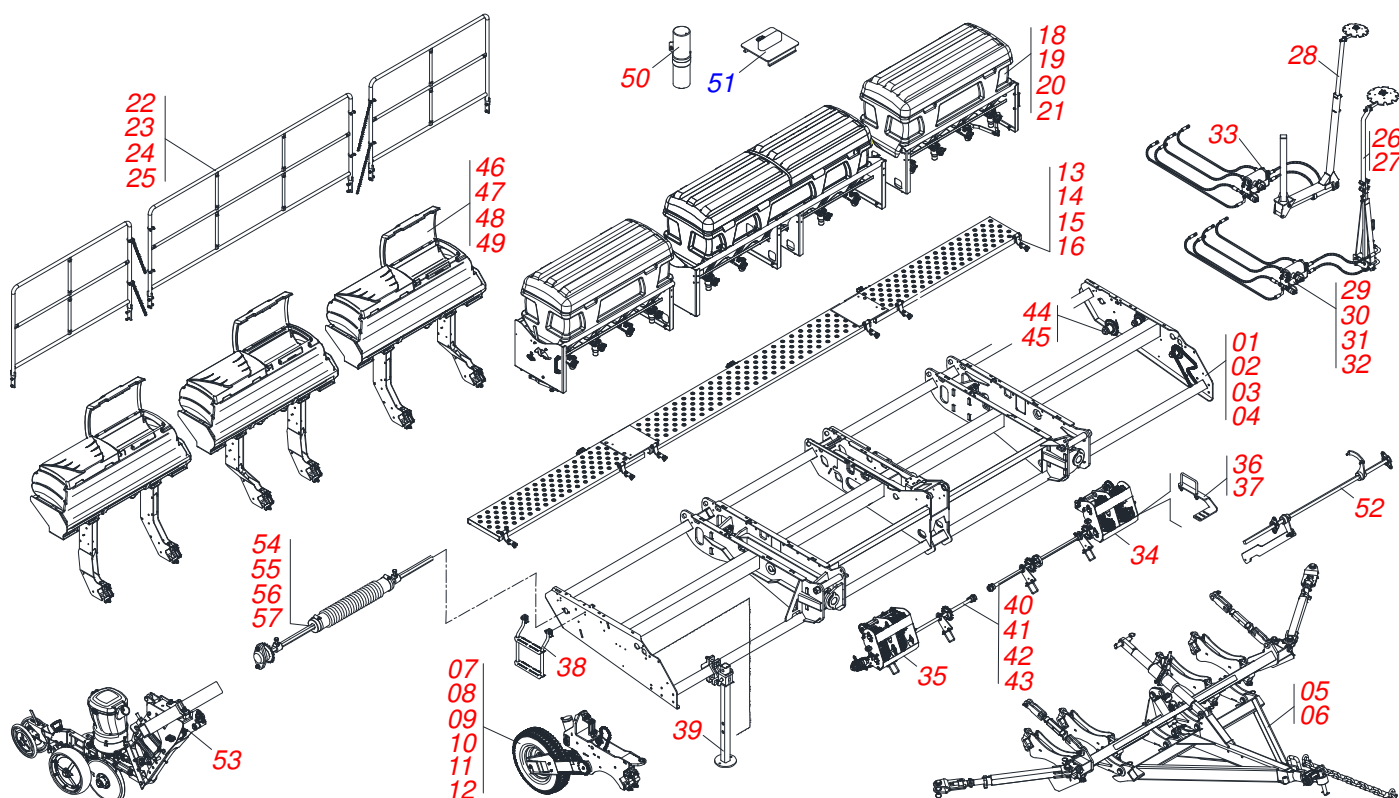


Item	Code	Description	15 13 L.
01	0521050238	CH C/ARTICULATION	01 00
02	0521050978	CH C/ARTICULATION	01 00
03	0511059560	CH C/ARTICULATION	00 01
04	0511058136	CH C/ARTICULATION	00 01
05	0909093711	ASSY DRAWBAR	01 01
06	0909093712	ASSY DRAWBAR	01 01
07	0511058123	WHITH RIGHT WHEEL ASSY	01 01
08	0511058124	WHITH RIGHT WHEEL ASSY	01 01
09	0511050439	WHITH RIGHT WHEEL ASSY	01 01
10	0511050440	WHITH RIGHT WHEEL ASSY	01 01
11	0511050443	WHITH RIGHT WHEEL ASSY	01 01
12	0511050444	WITH LEFT WHEEL SET	01 01
13	0521050234	PLATFORM SET	01 01
14	0511057799	PLATFORM SET	01 01
15	0511059561	PLATFORM SET	01 01
16	0511058133	PLATFORM SET	01 01
18	0521050229	SET FERTILIZER SILO	01 01
19	0511057811	SET FERTILIZER SILO	01 01
20	0521050903	SET FERTILIZER SILO	01 01
21	0511058129	SET FERTILIZER SILO	01 01
22	0521050235	JOINT HANDRAILSET	01 01
23	0511057800	JOINT HANDRAILSET	01 01
24	0511059562	JOINT HANDRAILSET	01 01
25	0511058134	JOINT HANDRAILSET	01 01
26	0521050847	HIDRAULIC ROW MARKER ASSY	01 01
27	0521050848	HIDRAULIC ROW MARKER ASSY	01 01
28	0909090391	ROW MARKER	01 01
29	0521050689	SET HIDRAULICO	01 01
30	0521050973	SET HIDRAULICO	01 01
31	0521050897	SET HIDRAULICO	01 01
32	0521050765	SET HIDRAULICO	01 01
33	0521050849	SET HIDRAULICO	01 01
34	0511048939	RIGHT GEAR BOX ASSY	01 01


Item	Code	Description	15 13 L.
35	0511048940	LEFT GEAR BOX ASSY	01 01
36	0511052332	SET SUPPORT RIGHT FIXER CHANGE	01 01
37	0511052333	SET SUPPORT LEFT FIXER CHANGE	01 01
38	0511053356	SET LADDER	01 01
39	0511054971	SET PST3 P/ULTRA P	02 02
40	0521050225	MOTOR SHAFT ASSEMBLY	01 01
41	0511057797	MOTOR SHAFT ASSEMBLY	01 01
42	0511059566	MOTOR SHAFT ASSEMBLY	01 01
43	0511058125	MOTOR SHAFT ASSEMBLY	01 01
44	0511058146	RIGHT TRANSMISSION ASSY	01 01
45	0511059162	RIGHT TRANSMISSION ASSY	01 01
46	0521050228	ASSEMBLY CSU	01 01
47	0521050979	ASSEMBLY CSU	01 01
48	0521050909	ASSEMBLY CSU	01 01
49	0511058579	ASSEMBLY CSU	01 01
50	0511057803	SET DOOR HAND BOOK	01 01
51	0503032624	FERTILIZER BEAN LIP	07 08
52	0511053342	SQUARE SHAFT SET	02 02
53	0909093717	FERTILIZER AND SEED LINE	13 15
54	0511059565		01 01
55	0511057798		01 01
56	0521050226		01 01
57	0511058126		01 01

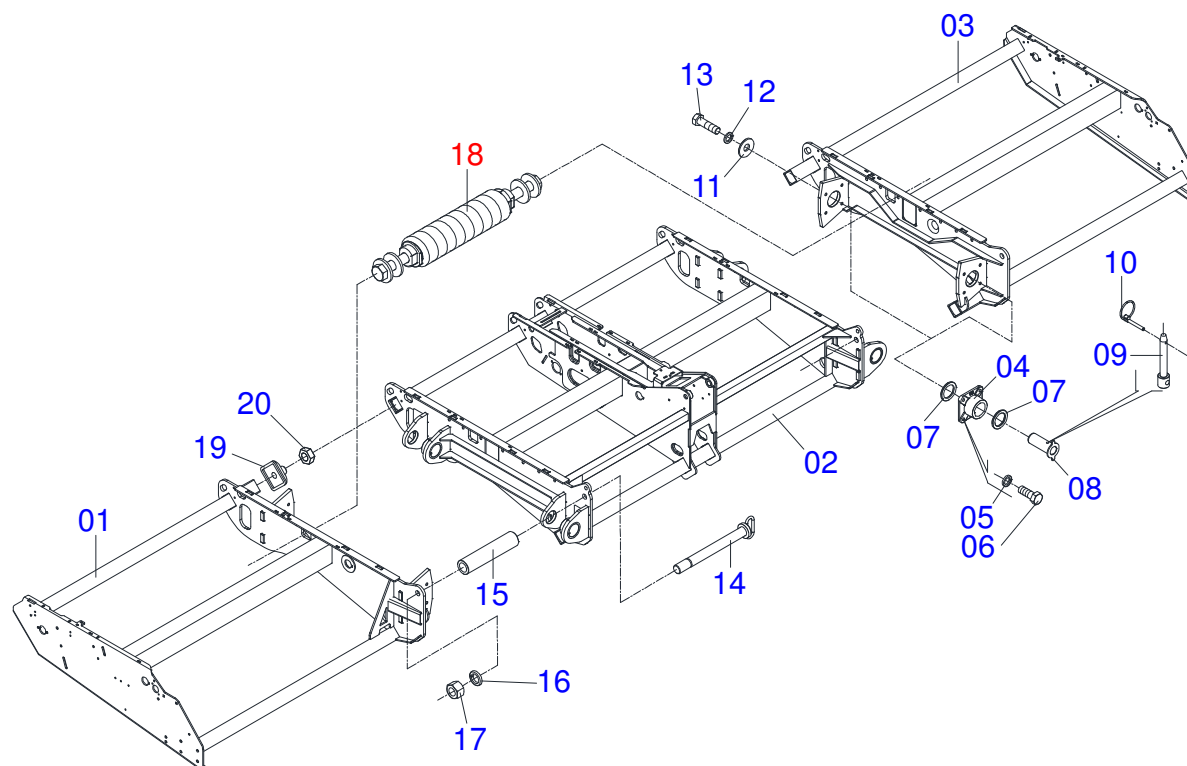 


Item	Code	Description	QT
001	0521067445	CH LAT DIR COP TRIO 7350 S-0415	01
002	0521067076	CENTRAL CHASSIS	01
003	0521067446	CH LAT ESQ COP TRIO 7350 S-0415	01
004	0501110683	ARTICULACION HUB WITH SLEEVES	04
005	0503011442	3/4" SPRING WASHER	16
006	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	16
007	0571010094	SLEEVE FLANGE	12
008	0521066298	ARTICULATOR	04
009	0571013510	LOCK AXLE	04
010	0503030085	LOCK PIN	04
011	0571010095	FLAT WASHER	04
012	0503011442	3/4" SPRING WASHER	04
013	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	04
014	0521063003	LOCK PIN	02
015	0571010969	LOCK SLEEVE FRAME	02
016	0503013627	1.1/2 SPRING WASHER	02
017	0501010110	1.1/2" NUT	02
018	0511059494	TRACTION SPRING	10
019	0521064285	LOCK LOWER FRAME	04
020	0501010116	1.5/8" 2.3/8" NUT	04

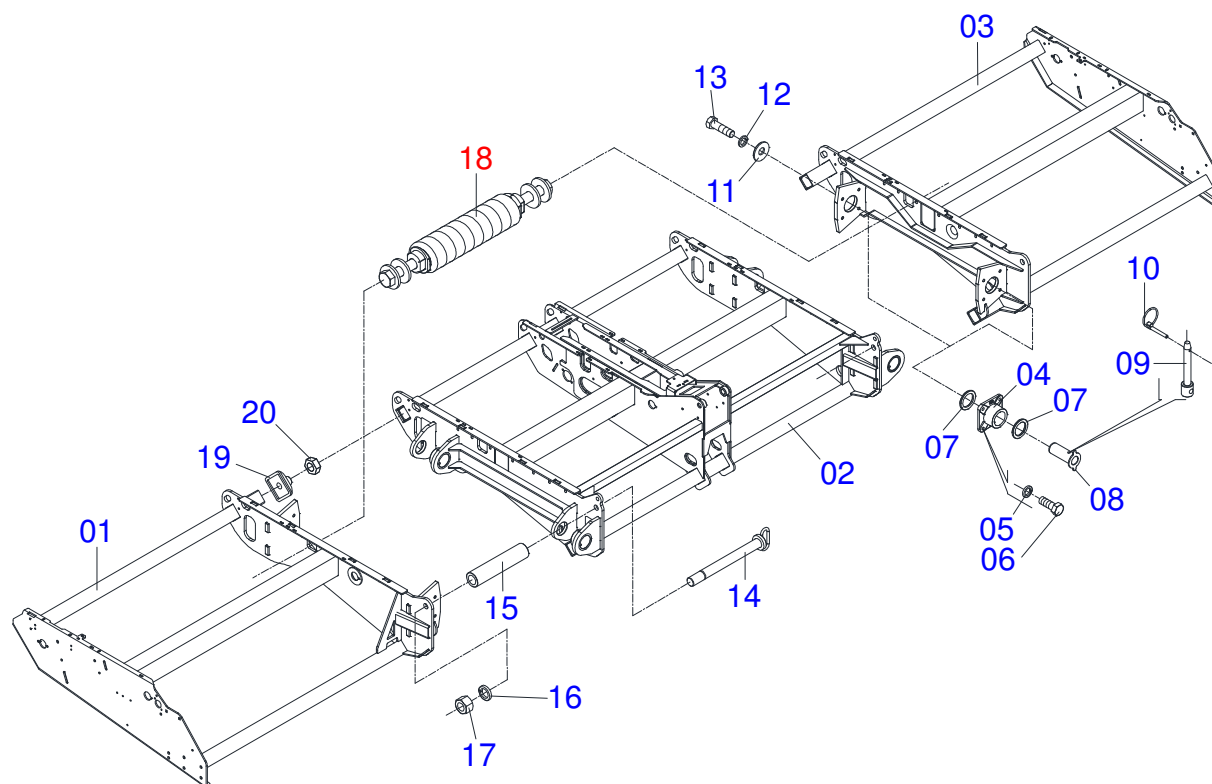 


Item	Code	Description	QT
001	0521067797	CH LAT DIR COP TRIO 6850 S-0117	01
002	0521066293	CENTRAL CHASSIS	01
003	0521067798	CH LAT ESQ COP TRIO 6850 S-0117	01
004	0501110683	ARTICULACION HUB WITH SLEEVES	04
005	0503011442	3/4" SPRING WASHER	16
006	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	16
007	0571010094	SLEEVE FLANGE	12
008	0521066298	ARTICULATOR	04
009	0571013510	LOCK AXLE	04
010	0503030085	LOCK PIN	04
011	0571010095	FLAT WASHER	04
012	0503011442	3/4" SPRING WASHER	04
013	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	04
014	0521063003	LOCK PIN	02
015	0571010969	LOCK SLEEVE FRAME	02
016	0503013627	1.1/2 SPRING WASHER	02
017	0501010110	1.1/2" NUT	02
018	0511059494	TRACTION SPRING	10
019	0521064285	LOCK LOWER FRAME	04
020	0501010116	1.5/8" 2.3/8" NUT	04

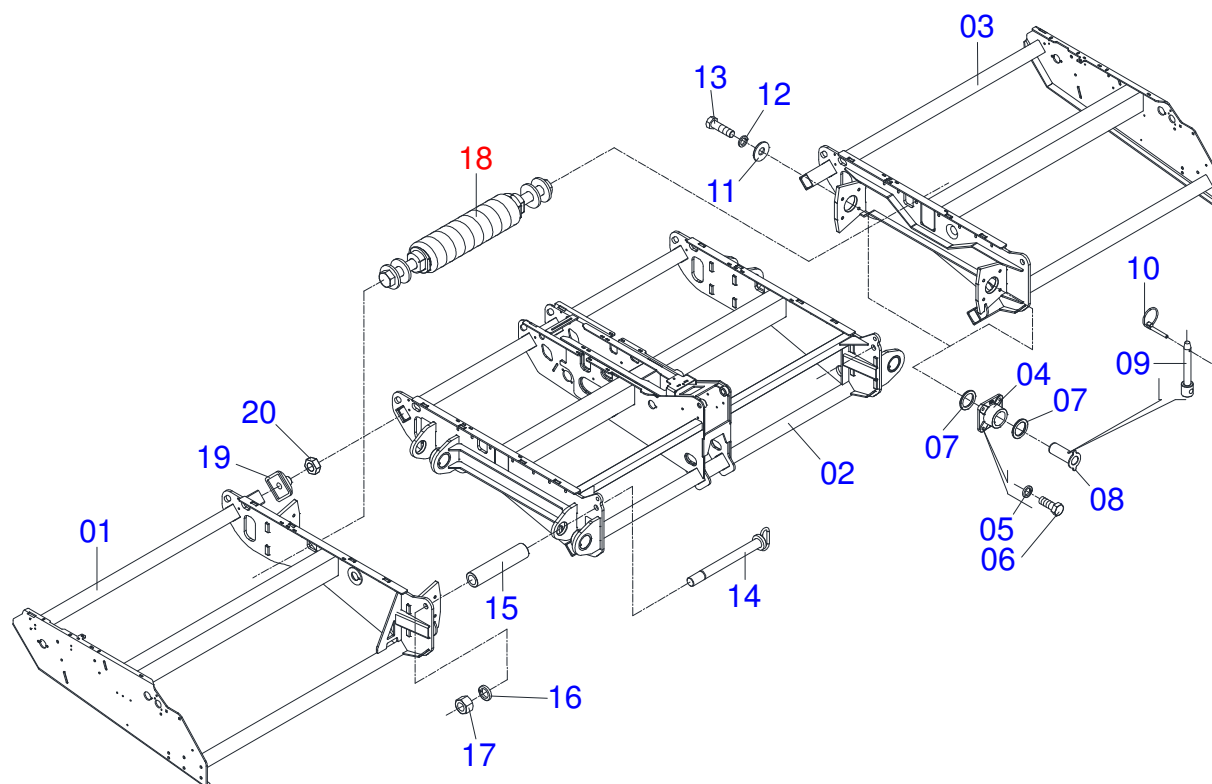 


Item	Code	Description	QT
001	0521067077	RIGHT SIDE FRAME ASSY	01
002	0521067076	CENTRAL CHASSIS	01
003	0521067078	RIGHT SIDE FRAME ASSY	01
004	0501110683	ARTICULACION HUB WITH SLEEVES	04
005	0503011442	3/4" SPRING WASHER	16
006	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	16
007	0571010094	SLEEVE FLANGE	12
008	0521066298	ARTICULATOR	04
009	0571013510	LOCK AXLE	04
010	0503030085	LOCK PIN	04
011	0571010095	FLAT WASHER	04
012	0503011442	3/4" SPRING WASHER	04
013	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	04
014	0521063003	LOCK PIN	02
015	0571010969	LOCK SLEEVE FRAME	02
016	0503013627	1.1/2 SPRING WASHER	02
017	0501010110	1.1/2" NUT	02
018	0511059494	TRACTION SPRING	10
019	0521064285	LOCK LOWER FRAME	04
020	0501010116	1.5/8" 2.3/8" NUT	04

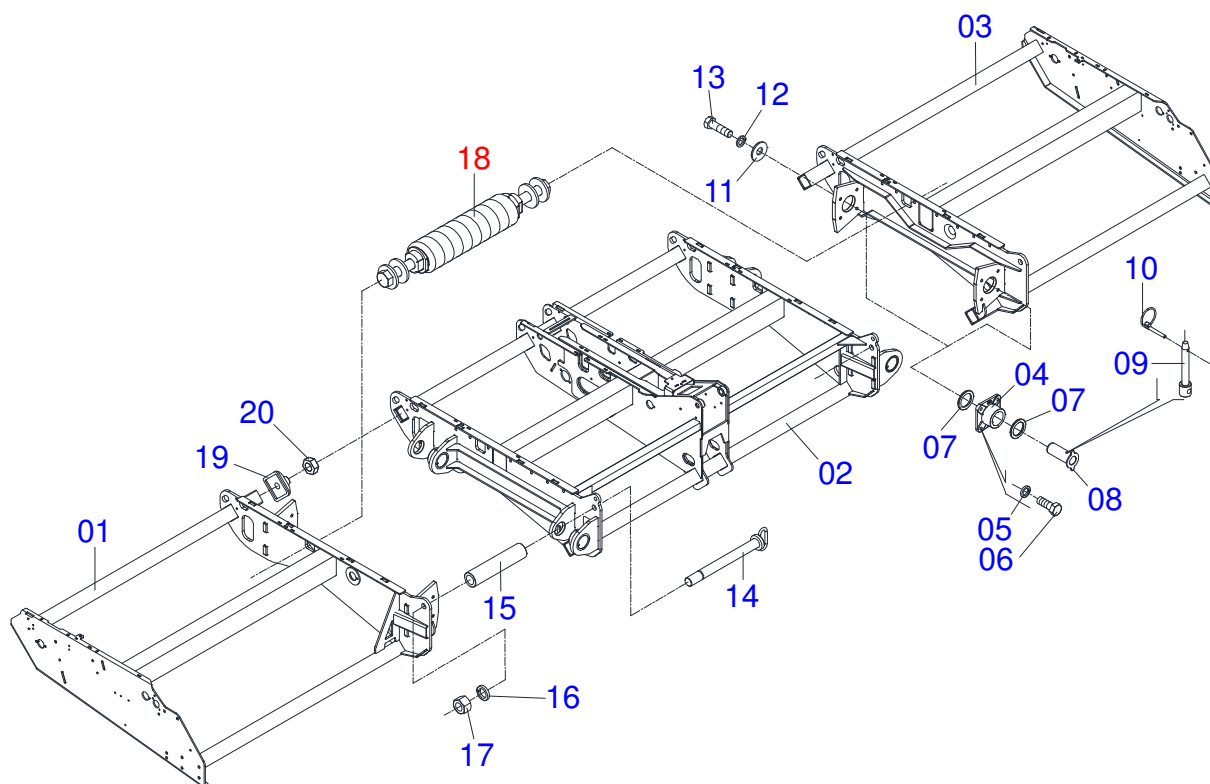 

Item	Code	Description	QT
001	0521066475	RIGHT SIDE FRAME ASSY	01
002	0521066293	CENTRAL CHASSIS	01
003	0521066476	RIGHT SIDE FRAME ASSY	01
004	0501110683	ARTICULACION HUB WITH SLEEVES	04
005	0503011442	3/4" SPRING WASHER	16
006	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	16
007	0571010094	SLEEVE FLANGE	12
008	0521066298	ARTICULATOR	04
009	0571013510	LOCK AXLE	04
010	0503030085	LOCK PIN	04
011	0571010095	FLAT WASHER	04
012	0503011442	3/4" SPRING WASHER	04
013	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	04
014	0521063003	LOCK PIN	02
015	0571010969	LOCK SLEEVE FRAME	02
016	0503013627	1.1/2 SPRING WASHER	02
017	0501010110	1.1/2" NUT	02
018	0511059494	TRACTION SPRING	10
019	0521064285	LOCK LOWER FRAME	04
020	0501010116	1.5/8" 2.3/8" NUT	04

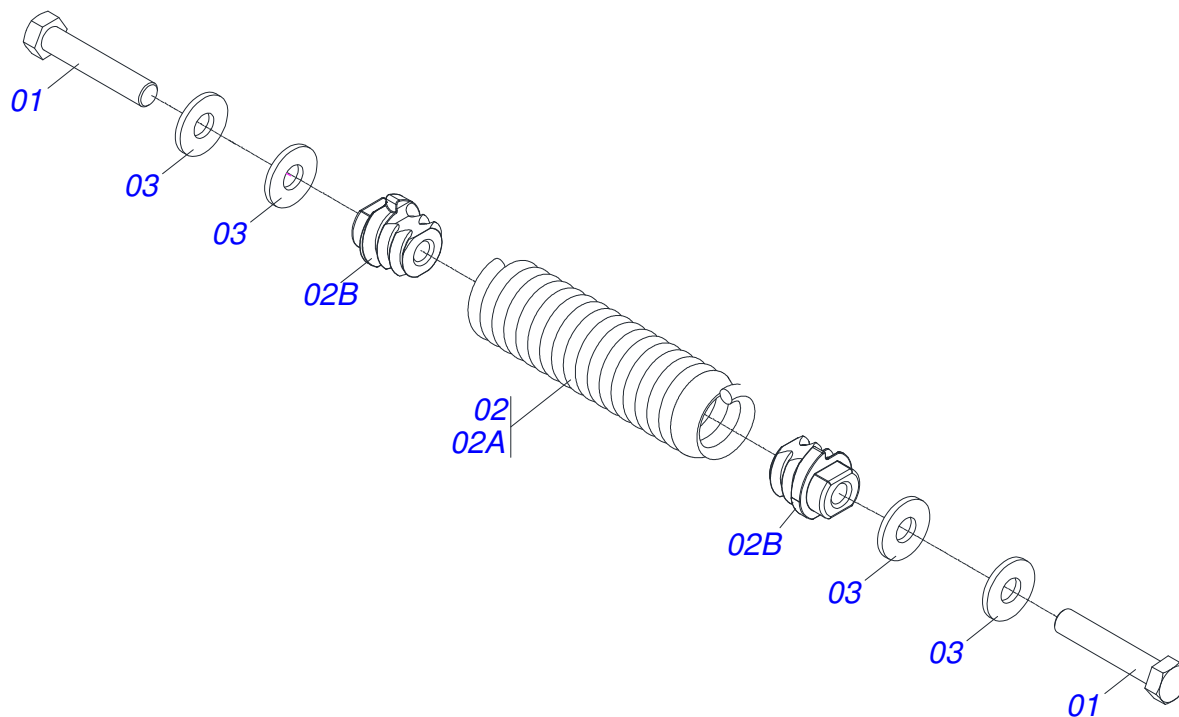 


Item	Code	Description	QT
001	0503013030	5/8" X 3.1/4" BOLT	02
002	0511050681	TRACTION SPRING	01
002A	0503031681	2.1" X 7.78" EXTENSION SPRING	01
002B	0561016062	SPRING HITCH	02
003	0501012140	FLAT WASHER	04

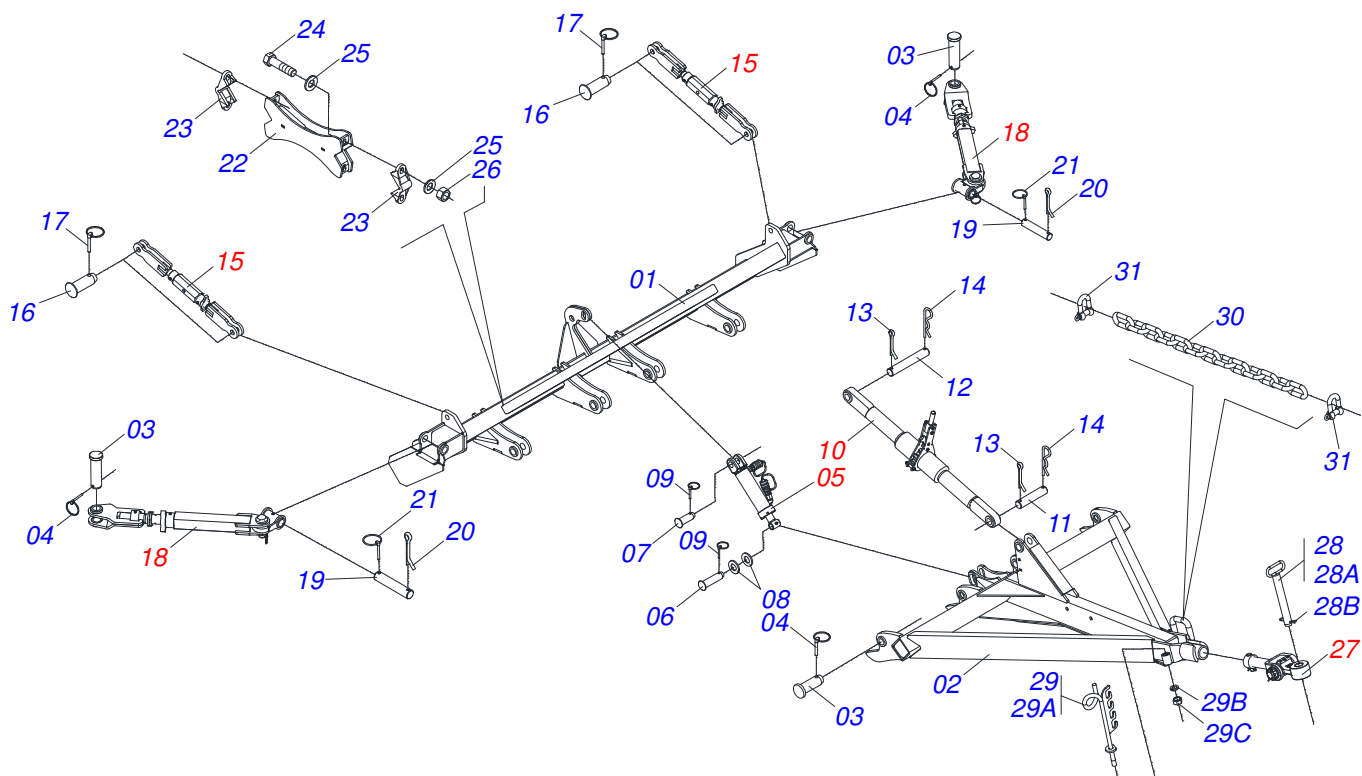 


Item	Code	Description	QT
01	0521066290	INTERMEDIATE HEAD	01
02	0521066289	IDRAULIC HEAD	01
03	0571019949	JUNCTION SHAFT	05
04	0503030119	LOCK PIN	05
05	0521045756	HYDRAULIC CYLINDER	02
06	0521010581	0.9" X 4.9" COUPLING SHAFT	01
07	0521010779	COUPLING SHAFT	01
08	0531016049	FLAT WASHER	02
09	0503030085	LOCK PIN	02
10	0511059237	3 POINT TURNBUCKLE	01
11	0571019950	COUPLING SHAFT	01
12	0571019951	JUNCTION SHAFT	01
13	0503010523	1/4" X 2" COTTERPIN	02
14	0503030119	LOCK PIN	02
15	0521051614	TURNBUCKLE SIDE UPPER	02
16	0521010571	COUPLING SHAFT	04
17	0503030085	LOCK PIN	04
18	0521050133	TURNBUCKLE SIDE	02
19	0571019951	JUNCTION SHAFT	02
20	0503010523	1/4" X 2" COTTERPIN	02
21	0503030119	LOCK PIN	02
22	0521067716	FIXER TUBE	04
23	1902010175	HITCH CLAMP	04
24	0503016485	BOLT 3/4	08
25	0501010322	FLAT WASHER	16
26	0503010152	3/4" UNF SELF ADJUSTING NUT	08
27	0511055096	TRACTOR HITCH	01
28	0511053179	TRACTOR HITCH AXLE	01
28A	0521064036	TRACTOR HITCH AXLE	01
28B	0503030012	HAIR PIN	01
29	0511056736	HOSE SUPPORT	01
29A	0521065611	HOSE HOLDER	01
29B	0503010023	SPRING WASHER	01

Item	Code	Description	QT
29C	0503010014	3/4" NUT	01
30	0503014120	CHAIN	01
31	0503014321	CABLE STEEL SHACKLE	02

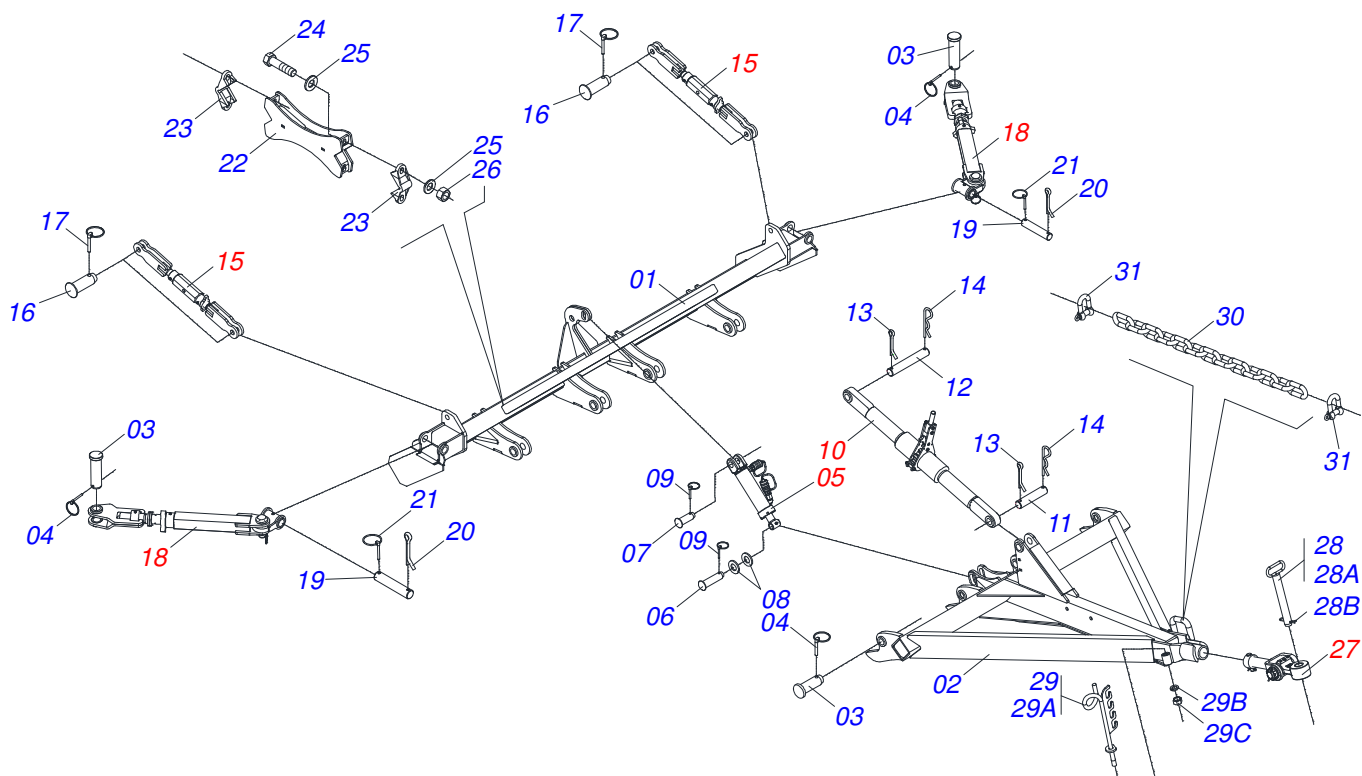 


Item	Code	Description	QT
01	0521067075	TELESCOPIC HEADER	01
02	0521066289	IDRAULIC HEAD	01
03	0571019949	JUNCTION SHAFT	05
04	0503030119	LOCK PIN	05
05	0521045756	HYDRAULIC CYLINDER	02
06	0521010581	0.9" X 4.9" COUPLING SHAFT	01
07	0521010779	COUPLING SHAFT	01
08	0531016049	FLAT WASHER	02
09	0503030085	LOCK PIN	02
10	0511059237	3 POINT TURNBUCKLE	01
11	0571019950	COUPLING SHAFT	01
12	0571019951	JUNCTION SHAFT	01
13	0503010523	1/4" X 2" COTTERPIN	02
14	0503030119	LOCK PIN	02
15	0521051614	TURNBUCKLE SIDE UPPER	02
16	0521010571	COUPLING SHAFT	04
17	0503030085	LOCK PIN	04
18	0521050133	TURNBUCKLE SIDE	02
19	0571019951	JUNCTION SHAFT	02
20	0503010523	1/4" X 2" COTTERPIN	02
21	0503030119	LOCK PIN	02
22	0521067716	FIXER TUBE	04
23	1902010175	HITCH CLAMP	04
24	0503016485	BOLT 3/4	08
25	0501010322	FLAT WASHER	16
26	0503010152	3/4" UNF SELF ADJUSTING NUT	08
27	0511055096	TRACTOR HITCH	01
28	0511053179	TRACTOR HITCH AXLE	01
28A	0521064036	TRACTOR HITCH AXLE	01
28B	0503030012	HAIR PIN	01
29	0511056736	HOSE SUPPORT	01
29A	0521065611	HOSE HOLDER	01
29B	0503010023	SPRING WASHER	01


Item	Code	Description	QT
29C	0503010014	3/4" NUT	01
30	0503014120	CHAIN	01
31	0503014321	CABLE STEEL SHACKLE	02

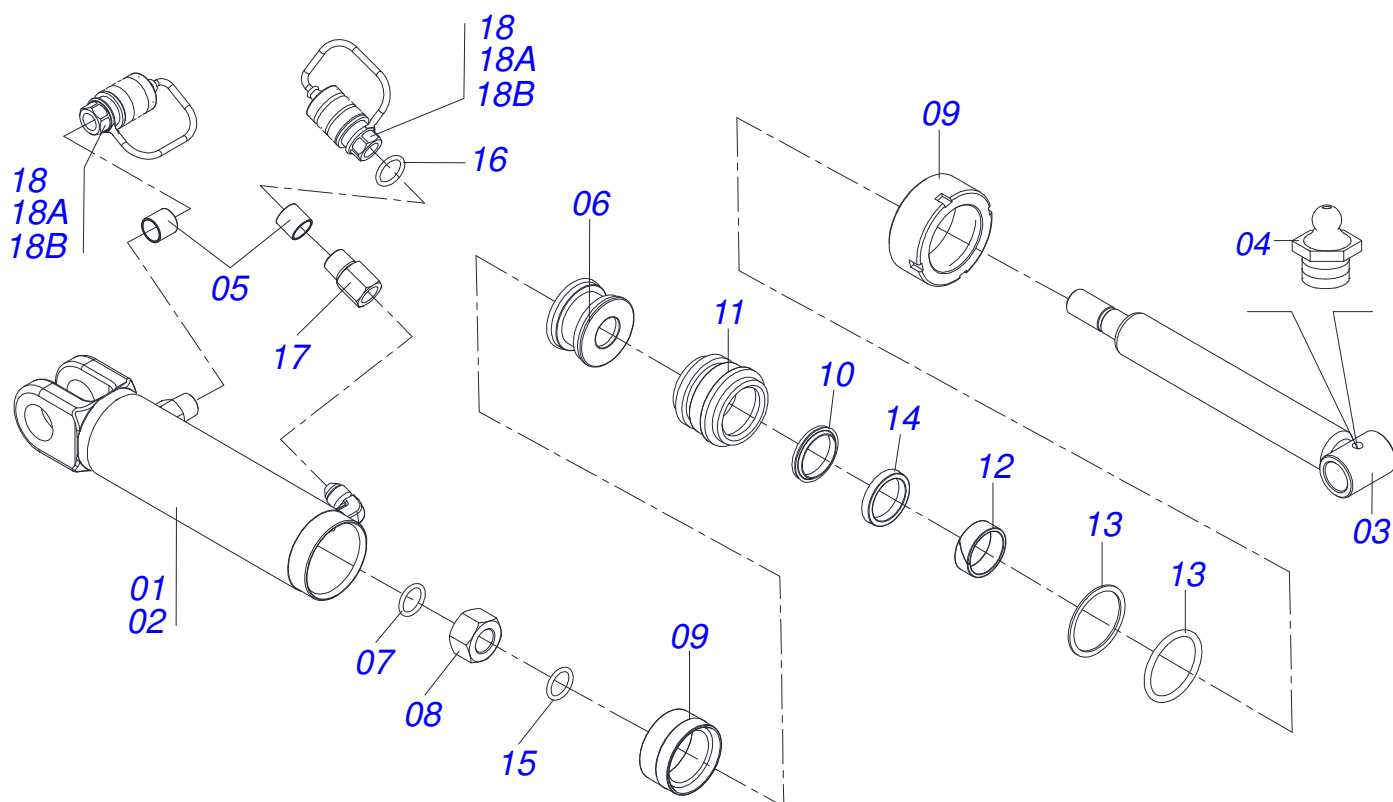 


Item	Code	Description	QT
01	0511057653	HYDRAULIC CYLINDER	01
02	0521066550	CYLINDER CASE	01
03	0521066551	EXTENSION DRAWBAR	01
04	0503010002	1800 GREASE FITTING	01
05	0503030385	PLUG	02
06	0581010669	EMBOLUS 63.50 X 40 USAP	01
07	0503018005	RING	01
08	0503010558	7/8" NUT	01
09	0502010471	MOBILE COVER	01
10	0503011058	8-330 BACK-UP RING	01
11	0571019866	RING SUPPORT	01
12	0503010163	D-1500 SCRAPER RING	01
13	0503018004	RING	02
14	0503010161	2-330 N 3006 9B O-RING	01
15	0503018003	GASKET	01
16	0503010605	O-RING	01
17	0581010652	JIC ADAPTER	01
18	0501053835	FEMALE QUICK COUPLER	01
18A	0503011883	QUICK CONNECTION COVER	01
18B	0503011628	FEMALE QUICK COUPLER	01

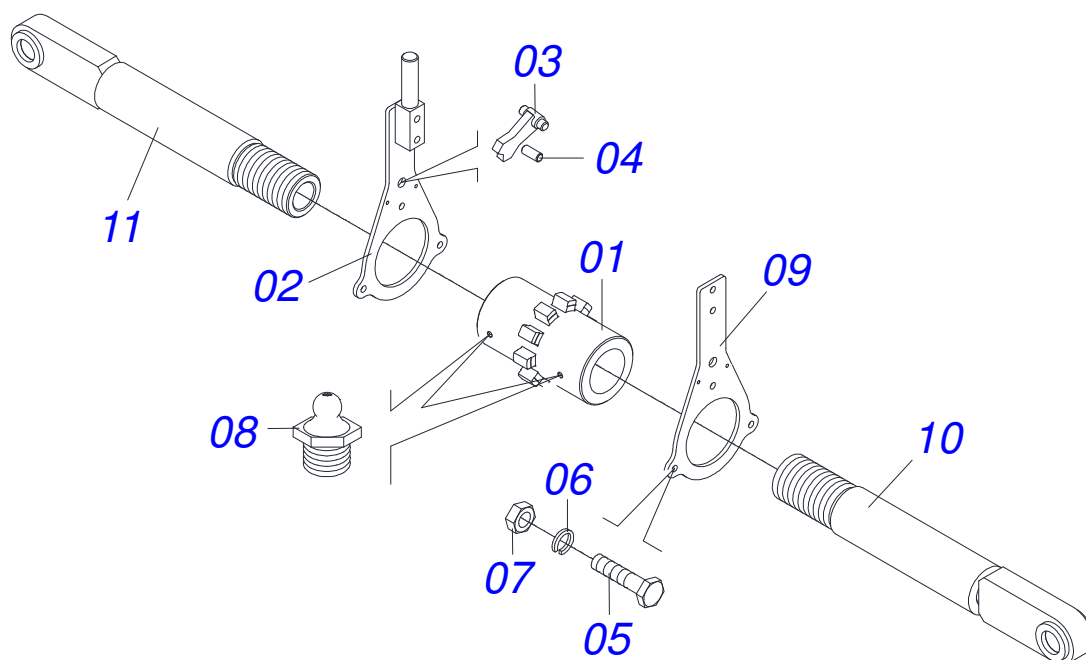 


Item	Code	Description	QT
001	0502012783	STABILIZER BODY GREATER	01
002	0511061880	SIDE RIGHT RATCHET	01
003	0511061881	RATCHET FOLLOWER	01
004	0521018920	0.4" X 0.5" X 0.2" SLEEVE	03
005	0503011179	3/8" X 2-1/4" BOLT	05
006	0503010025	3/8 SPRING WASHER	05
007	0503010026	3/8" NUT	05
008	0503010002	1800 GREASE FITTING	02
009	0531010264	SIDE RATCHET	01
010	0521066919	3-POINT EXTENSOR RIGHT FUSE	01
011	0521066337	LEFT EXTENSOR 3 SPIKE	01

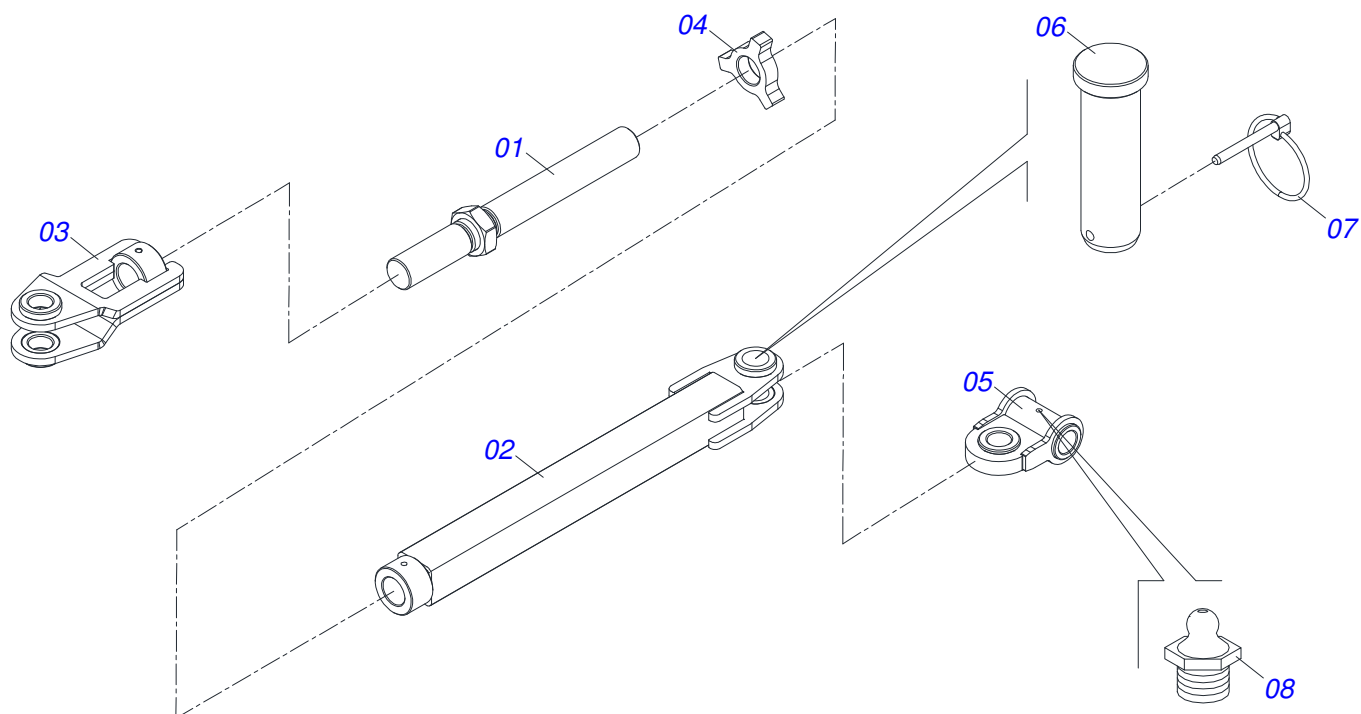 

Item	Code	Description	QT
001	0501078990	TURNBUCKLE AXLE	01
002	0521067392	FIXED BRACKET	01
003	0521066338	EXTERNAL ROTATING BRIDGE	01
004	0561019879	LOCK ATTACHMENT BAR	01
005	0521067393	EXTERNAL SIDE EAR	01
006	0571019949	JUNCTION SHAFT	01
007	0503030119	LOCK PIN	01
008	0503010002	1800 GREASE FITTING	03

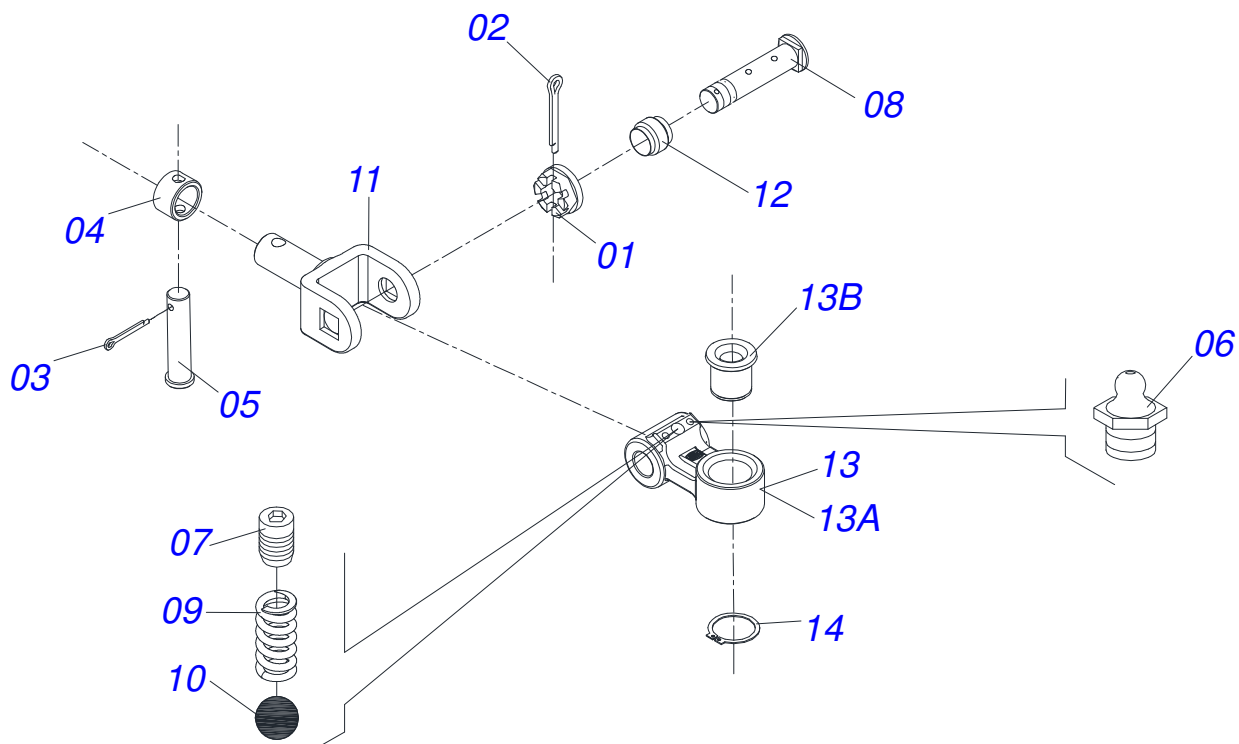 


Item	Code	Description	15-17-19 L
001	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT	01-01-01
002	0503010010	1/4" X 2.1/2" COTTERPIN	01-01-01
003	0503010571	1/4" X 1.1/2 COTTERPIN	01-01-01
004	0521010681	BUSHING COUPLING BODY	01-01-01
005	0521010639	COUPLING SHAFT	01-01-01
006	0503010002	1800 GREASE FITTING	01-01-01
007	0503016482	BOLT	02-02-02
008	0571012612	PIVOT SHAFT	01-01-01
009	0503033731	COMPRESSION SPRING LEFT	02-02-02
010	0503011331	3/8 BALL	02-02-02
011	0502040850	U TRACTOR COUPLING	01-01-01
012	1882970002	GREASE SOAP	00-00-00
013	0501110778	TRACTOR HITCH	01-01-01
013A	0502040853	HITCH JOINT	01-01-01
013B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4	01-01-01
014	0503010396	501060 CLAMPING RING (FOR AXLE)	01-01-01

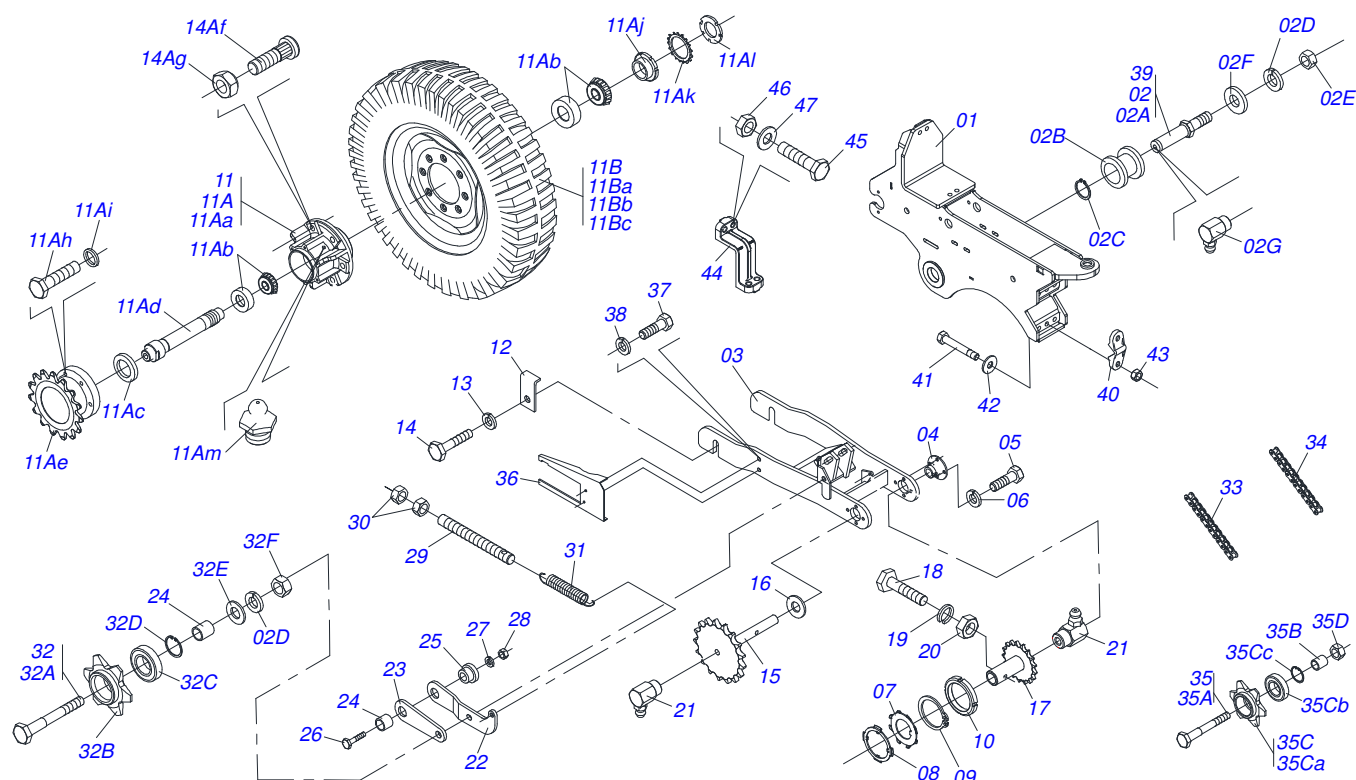 


Item	Code	Description	QT
001	0521066480	RH WHELLS SUPPORT	01
002	0501048672	CHAIN TENSIONER ASSY	02
002A	0531017202	AXLE CHAIN TIGHTENER	02
002B	0503030402	PULLEY	02
002C	0503010302	501019 SEAL RING	02
002D	0503010019	1/2" SPRING WASHER	20
002E	0503010060	1/2" NUT	02
002F	0511017302	FLAT WASHER	04
002G	0503010004	1890 GREASE FITTING	04
003	0511064744	WHEEL FORK	01
004	0501110625	WHEEL PIVOT BEARING	02
005	0503013232	1/2" UNF X 1" BOLT	08
006	0503010019	1/2" SPRING WASHER	08
007	0561013021	BEARING INNER LOK	02
008	0561013022	BEARING EXTERNAL LOCK	02
009	0503010398	501082 CLAMPING RING (FOR AXLE)	02
010	0561013020	KM 12 NUT	02
011	0511052768	REQUIRES TIRE	01
011A	0511052766	CARRYING WHEEL HUB ASSY	01
011Aa	0571012990	CARRYING WHEEL HUB TRANSMISSION	01
011Ab	0503010328	25590/25523 ROLLER BEARING	02
011Ac	0503010804	00547-B SEAL	02
011Ad	0521018363	00547-B SEAL	01
011Ae	0511062015	14Z GEAR WITH FLANGE	01
011Af	0501010186	PARAFUSO ROD 5/8UNF X 2.1/8CR	06
011Ag	0503016516	5/8 UNF CONIC NUT	06
011Ah	0503010421	5/16" X 1-1/2" BOLT	06
011Ai	0503011444	SPRING WASHER	06
011Aj	0511015949	LOCK NUT	01
011Ak	0503010329	LOCK WASHER	01
011Al	0503010330	KM 9 LOCKNUT	01
011Am	0503010002	1800 GREASE FITTING	01
011B	0503062158	REQUIRES TIRE	01

Item	Code	Description	QT
011Ba	0503012113	PLY TIRE	01
011Bb	0503016518	RUEDA	01
011Bc	0503012114	7.00 X 16 INNER TIRE	01
012	0521012190	AXLE LOCK	02
013	0503010027	SPRING WASHER	02
014	0503011167	M16 X 2 X 30 BOLT	02
015	0511061808	15Z GEAR WITH AXLE,	01
016	0501018466	FLAT WASHER	01
017	0511061809	15Z GEAR WITH COUPLING	01
018	0503011103	7/16" X 2-1/2" BOLT	01
019	0503010180	7/16" SPRING WASHER	01
020	0503010244	7/16" NUT	01
021	0503010004	1890 GREASE FITTING	02
022	0531018654	CHAIN TIGHTENER SUPPORT	01
023	0531018653	CHAIN TIGHTENER MINOR SUPPORT	01
024	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE	01
025	0531016916	SLEEVE BEARING SUPPORT	02
026	0503010899	5/8" X 2-1/4" BOLT	01
027	0503010027	SPRING WASHER	01
028	0503010013	5/8" NUT	01
029	0501013491	5/8" TENSIONER SPRING	01
030	0503010013	5/8" NUT	01
031	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING	01
032	0501053522	WHEEL CHAIN TENSIONER	01
032A	0551018252	CHAIN TIGHTENER AXLE	01
032B	0502012018	CHAIN TIGHTENER BEARING	01
032C	0503012882	BALL BEARING	01
032D	0503011945	503050 CLAMPING RING (FOR AXLE)	01
032E	0511017302	FLAT WASHER	01
032F	0503010060	1/2" NUT	04
033	0503016738	2050 CHAIN X 44 LINK + REDUCTION	01
034	0503012570	CHAIN 2050 X 2.8" LINK + MENDING	01
035	0511053375	CHAIN DEVIATION	01
035A	0551018252	CHAIN TIGHTENER AXLE	01
035B	0521010479	SLEEVE ARTICULATION	01
035C	0501058239	CHAIN TENSIONER BEARING	01
035Ca	0502012018	CHAIN TIGHTENER BEARING	01
035Cb	0503012882	BALL BEARING	01
035Cc	0503011945	503050 CLAMPING RING (FOR AXLE)	01
035D	0503011336	1/2" HEX SELF ADJUSTING NUT	01
036	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP	01
037	0503010847	1/2" X 3.1/4" BOLT	02
038	0503010019	1/2" SPRING WASHER	02
039	0501048672	CHAIN TENSIONER ASSY	01
040	0502010584	CARRYING-WHEELS SUPPORT FIXER	02
041	0511010736	5/8" X 5-1/4" BOLT	04
042	0501013753	FLAT WASHER	04
043	0503010811	5/8" UNF SELF ADJUSTING NUT	04
044	0502012720	FIXER THE RODEIRO SUPPORT	01
045	0503017857	BOLT 5/8 UNF 4	04
046	0503010811	5/8" UNF SELF ADJUSTING NUT	04
047	0501012140	FLAT WASHER	04

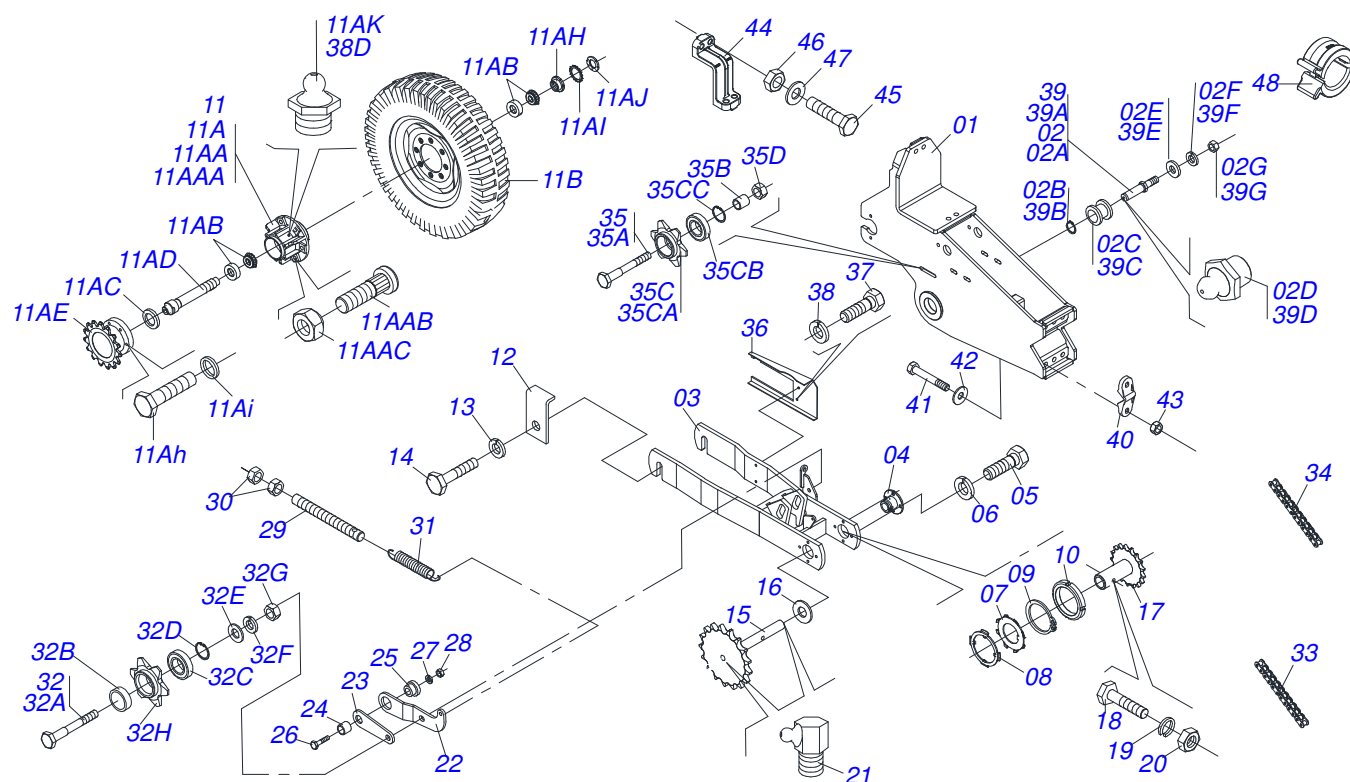 


Item	Code	Description	5750
001	0521066479	RH WHELLS SUPPORT	01
002	0501048672	CHAIN TENSIONER ASSY	02
002A	0521012529	CHAIN TIGHTENER AXLE	01
002B	0503030402	PULLEY	01
002C	0503010302	501019 SEAL RING	01
002D	0503010002	1800 GREASE FITTING	01
002E	0511017302	FLAT WASHER	02
002F	0503010019	1/2" SPRING WASHER	01
002G	0503010060	1/2" NUT	01
003	0511065842	LEFT WHEEL FORK	01
004	0501110625	WHEEL PIVOT BEARING	02
005	0503013232	1/2" UNF X 1" BOLT	08
006	0503010019	1/2" SPRING WASHER	08
007	0561013021	BEARING INNER LOK	02
008	0561013022	BEARING EXTERNAL LOCK	02
009	0503010398	501082 CLAMPING RING (FOR AXLE)	02
010	0561013020	KM 12 NUT	02
011	0511052768	REQUIRES TIRE	01
011A	0511052766	CARRYING WHEEL HUB ASSY	01
011AA	0501110721	WHEEL HUB WITH SCREW / NUTS	01
011AAA	0571012990	CARRYING WHEEL HUB TRANSMISSION	01
011AAB	0501010186	PARAFUSO ROD 5/8UNF X 2.1/8CR	06
011AAC	0503016516	5/8 UNF CONIC NUT	06
011AB	0503010328	25590/25523 ROLLER BEARING	02
011AC	0503010804	00547-B SEAL	02
011AD	0521018363	00547-B SEAL	01
011AE	0511062015	14Z GEAR WITH FLANGE	01
011AF	0503010421	5/16" X 1-1/2" BOLT	06
011AG	0503011444	SPRING WASHER	06
011AH	0511015949	LOCK NUT	01
011AI	0503010329	LOCK WASHER	01
011AJ	0503010330	KM 9 LOCKNUT	01
011AK	0503010002	1800 GREASE FITTING	01

Item	Code	Description	5750
011AL	1882970002	GREASE SOAP	00
011B	0503062158	REQUIRES TIRE	01
012	0521012190	AXLE LOCK	02
013	0503010027	SPRING WASHER	02
014	0503011167	M16 X 2 X 30 BOLT	02
015	0511061808	15Z GEAR WITH AXLE,	01
016	0501018466	FLAT WASHER	01
017	0511061809	15Z GEAR WITH COUPLING	01
018	0503011103	7/16" X 2-1/2" BOLT	01
019	0503010180	7/16" SPRING WASHER	01
020	0503010244	7/16" NUT	01
021	0503010004	1890 GREASE FITTING	02
022	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPOT	01
023	0531018653	CHAIN TIGHTENER MINOR SUPPORT	01
024	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE	01
025	0531016916	SLEEVE BEARING SUPPORT	02
026	0503010899	5/8" X 2-1/4" BOLT	01
027	0503010027	SPRING WASHER	01
028	0503010013	5/8" NUT	01
029	0501013491	5/8" TENSIONER SPRING	01
030	0503010013	5/8" NUT	02
031	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING	01
032	0501053522	WHEEL CHAIN TENSIONER	01
032A	0531012640	AXLE CHAIN TIGHTENER	01
032B	0531012678	4.5" X 0.9" X 0.2" SLEEVE	01
032C	0503012882	BALL BEARING	01
032D	0503011945	503050 CLAMPING RING (FOR AXLE)	01
032E	0511017302	FLAT WASHER	01
032F	0503010019	1/2" SPRING WASHER	01
032G	0503010060	1/2" NUT	01
032H	0502012853	07Z GEAR	01
033	0503016738	2050 CHAIN X 44 LINK + REDUCTION	01
034	0503012570	CHAIN 2050 X 2.8" LINK + MENDING	01
035	0511053375	CHAIN DEVIATION	01
035A	0551018252	CHAIN TIGHTENER AXLE	01
035B	0521010479	SLEEVE ARTICULATION	01
035C	0501058239	CHAIN TENSIONER BEARING	01
035CA	0503012882	BALL BEARING	01
035CB	0503011945	503050 CLAMPING RING (FOR AXLE)	01
035CC	0502012853	07Z GEAR	01
035D	0503011336	1/2" HEX SELF ADJUSTING NUT	01
036	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION	01
037	0503010847	1/2" X 3.1/4" BOLT	02
038	0503010019	1/2" SPRING WASHER	02
039	0501048672	CHAIN TENSIONER ASSY	01
039A	0521012529	CHAIN TIGHTENER AXLE	01
039B	0503030402	PULLEY	01
039C	0503010302	501019 SEAL RING	01
039D	0503010002	1800 GREASE FITTING	01
039E	0511017302	FLAT WASHER	02
039F	0503010019	1/2" SPRING WASHER	01
039G	0503010060	1/2" NUT	01
040	0502010584	CARRYING-WHEELS SUPPORT FIXER	02
041	0511010736	5/8" X 5-1/4" BOLT	04
042	0501013753	FLAT WASHER	04
043	0503010811	5/8" UNF SELF ADJUSTING NUT	04
044	0502012720	FIXER THE RODEIRO SUPPORT	01
045	0503017857	BOLT 5/8 UNF 4	04
046	0503010811	5/8" UNF SELF ADJUSTING NUT	04
047	0501012140	FLAT WASHER	04

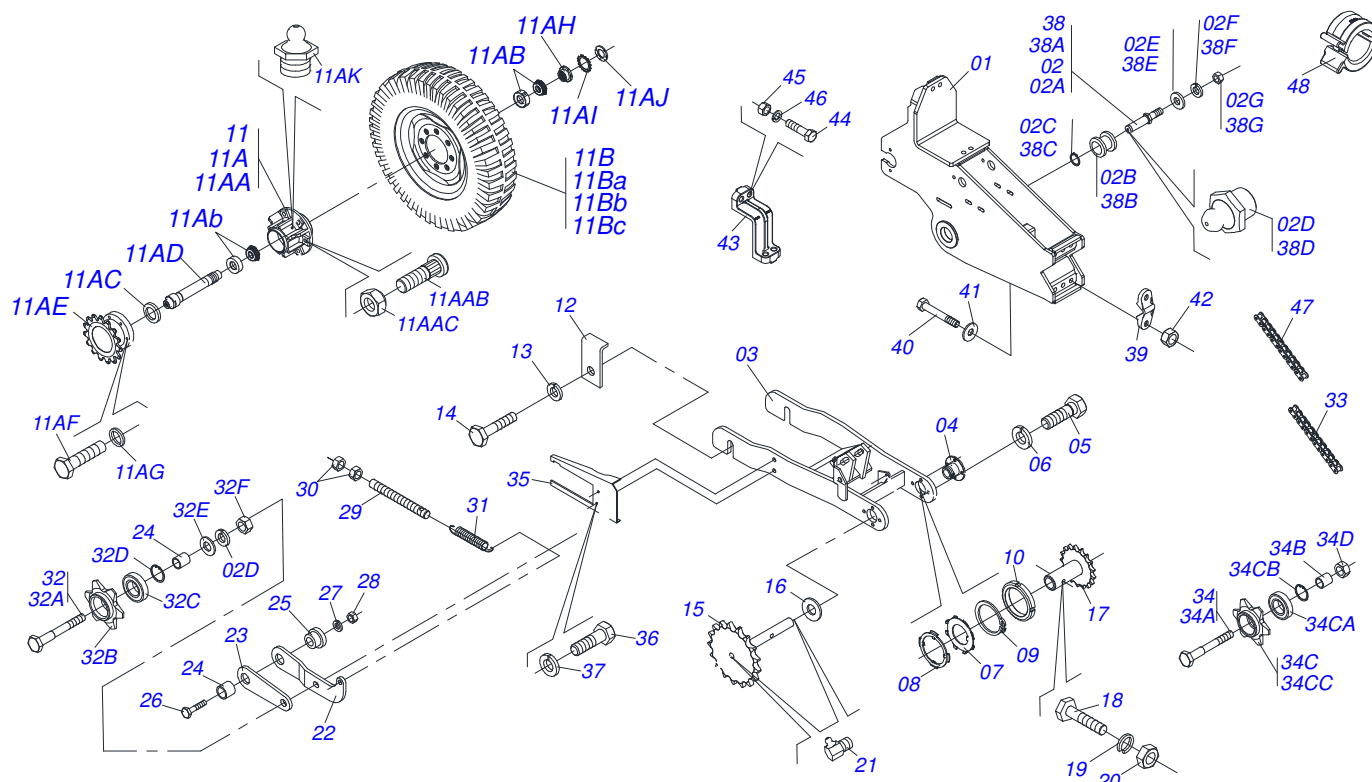 


Item	Code	Description	5750-6850
001	0521063678	WHEEL SUPPORT	01 02
002	0501048672	CHAIN TENSIONER ASSY	01 02
002A	0521012529	CHAIN TIGHTENER AXLE	01 00
002B	0503030402	PULLEY	01 00
002C	0503010302	501019 SEAL RING	01 00
002D	0503010002	1800 GREASE FITTING	01 00
002E	0511017302	FLAT WASHER	02 00
002F	0503010019	1/2" SPRING WASHER	01 00
002G	0503010060	1/2" NUT	01 00
003	0511064744	WHEEL FORK	01 02
004	0501110625	WHEEL PIVOT BEARING	02 04
005	0503013232	1/2" UNF X 1" BOLT	08 16
006	0503010019	1/2" SPRING WASHER	08 16
007	0561013021	BEARING INNER LOK	02 04
008	0561013022	BEARING EXTERNAL LOCK	02 04
009	0503010398	501082 CLAMPING RING (FOR AXLE)	02 04
010	0561013020	KM 12 NUT	02 04
011	0511052768	REQUIRES TIRE	01 02
011A	0511052766	CARRYING WHEEL HUB ASSY	01 00
011AA	0501110721	WHEEL HUB WITH SCREW / NUTS	01 00
011AAA	0571012990	CARRYING WHEEL HUB TRANSMISSION	01 00
011AAB	0501010186	PARAFUSO ROD 5/8UNF X 2.1/8CR	06 00
011AAC	0503016516	5/8 UNF CONIC NUT	06 00
011AB	0503010328	25590/25523 ROLLER BEARING	02 00
011AC	0503010804	00547-B SEAL	02 00
011AD	0521018363	00547-B SEAL	01 00
011AE	0511062015	14Z GEAR WITH FLANGE	01 00
011AF	0503010421	5/16" X 1-1/2" BOLT	06 00
011AG	0503011444	SPRING WASHER	06 00
011AH	0511015949	LOCK NUT	01 00
011AI	0503010329	LOCK WASHER	01 00
011AJ	0503010330	KM 9 LOCKNUT	01 00
011AK	0503010002	1800 GREASE FITTING	01 00

Item	Code	Description	5750-6850	
011AL	1882970002	GREASE SOAP	00	00
011B	0503062158	REQUIRES TIRE	01	00
012	0521012190	AXLE LOCK	02	04
013	0503010027	SPRING WASHER	02	04
014	0503011167	M16 X 2 X 30 BOLT	02	04
015	0511061808	15Z GEAR WITH AXLE,	01	02
016	0501018466	FLAT WASHER	01	02
017	0511061809	15Z GEAR WITH COUPLING	01	02
018	0503011103	7/16" X 2-1/2" BOLT	01	02
019	0503010180	7/16" SPRING WASHER	01	02
020	0503010244	7/16" NUT	01	02
021	0503010004	1890 GREASE FITTING	02	04
022	0531018654	CHAIN TIGHTENER SUPPORT	01	02
023	0531018653	CHAIN TIGHTENER MINOR SUPPORT	01	02
024	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE	01	02
025	0531016916	SLEEVE BEARING SUPPORT	02	04
026	0503010899	5/8" X 2-1/4" BOLT	01	02
027	0503010027	SPRING WASHER	01	02
028	0503010013	5/8" NUT	01	02
029	0501013491	5/8" TENSIONER SPRING	01	02
030	0503010013	5/8" NUT	01	02
031	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING	01	02
032	0501053522	WHEEL CHAIN TENSIONER	01	02
033	0503016738	2050 CHAIN X 44 LINK + REDUCTION	01	02
034	0511053375	CHAIN DEVIATION	01	02
034A	0551018252	CHAIN TIGHTENER AXLE	01	01
034B	0521010479	SLEEVE ARTICULATION	01	01
034C	0501058239	CHAIN TENSIONER BEARING	01	00
034CA	0503012882	BALL BEARING	01	00
034CB	0503011945	503050 CLAMPING RING (FOR AXLE)	01	00
034CC	0502012853	07Z GEAR	01	00
034D	0503011336	1/2" HEX SELF ADJUSTING NUT	01	00
035	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP	00	00
036	0503010847	1/2" X 3.1/4" BOLT	02	04
037	0503010019	1/2" SPRING WASHER	02	04
038	0501048672	CHAIN TENSIONER ASSY	01	02
038A	0521012529	CHAIN TIGHTENER AXLE	01	00
038B	0503030402	PULLEY	01	00
038C	0503010302	501019 SEAL RING	01	00
038D	0503010002	1800 GREASE FITTING	01	00
038E	0511017302	FLAT WASHER	02	00
038F	0503010019	1/2" SPRING WASHER	01	00
038G	0503010060	1/2" NUT	01	00
039	0502010584	CARRYING-WHEELS SUPPORT FIXER	00	00
040	0511010736	5/8" X 5-1/4" BOLT	04	08
041	0501013753	FLAT WASHER	04	08
042	0503010811	5/8" UNF SELF ADJUSTING NUT	04	08
043	0502012720	FIXER THE RODEIRO SUPPORT	01	02
044	0503017857	BOLT 5/8 UNF 4	04	08
045	0503010811	5/8" UNF SELF ADJUSTING NUT	04	08
046	0501012140	FLAT WASHER	04	08
047	0503012570	CHAIN 2050 X 2.8" LINK + MENDING	01	02
048	0501047888	ROD STOP	01	02

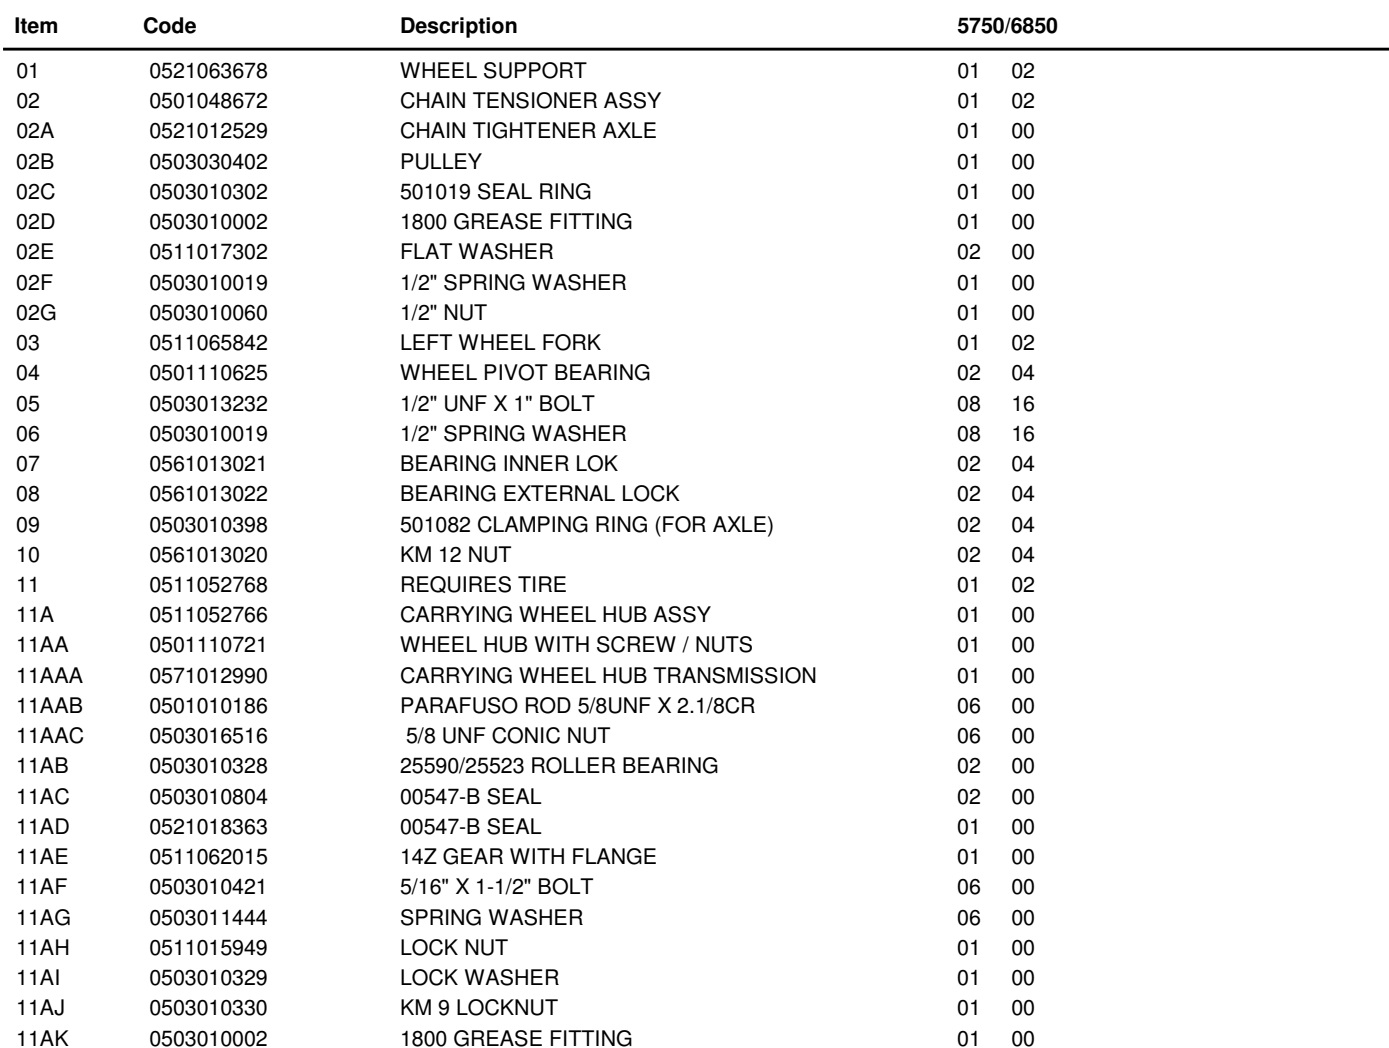 


Item	Code	Description	5750/6850
11AL	1882970002	GREASE SOAP	00 00
11B	0503062158	REQUIRES TIRE	01 00
12	0521012190	AXLE LOCK	02 04
13	0503010027	SPRING WASHER	02 04
14	0503011167	M16 X 2 X 30 BOLT	02 04
15	0511061808	15Z GEAR WITH AXLE,	01 02
16	0501018466	FLAT WASHER	01 02
17	0511061809	15Z GEAR WITH COUPLING	01 02
18	0503011103	7/16" X 2-1/2" BOLT	01 02
19	0503010180	7/16" SPRING WASHER	01 02
20	0503010244	7/16" NUT	01 02
21	0503010004	1890 GREASE FITTING	02 04
22	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPOT	01 02
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT	01 02
24	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE	01 02
25	0531016916	SLEEVE BEARING SUPPORT	02 04
26	0503010899	5/8" X 2-1/4" BOLT	01 02
27	0503010027	SPRING WASHER	01 02
28	0503010013	5/8" NUT	01 02
29	0501013491	5/8" TENSIONER SPRING	01 02
30	0503010013	5/8" NUT	02 04
31	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING	01 02
32	0501053522	WHEEL CHAIN TENSIONER	01 02
32A	0551018252	CHAIN TIGHTENER AXLE	01 00
32B	0502012018	CHAIN TIGHTENER BEARING	01 00
32C	0503012882	BALL BEARING	01 00
32D	0503011945	503050 CLAMPING RING (FOR AXLE)	01 00
32E	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE	01 00
32F	0511017302	FLAT WASHER	01 00
32G	0503010019	1/2" SPRING WASHER	01 00
32H	0503010060	1/2" NUT	01 00
33	0503016738	2050 CHAIN X 44 LINK + REDUCTION	01 01
34	0511053375	CHAIN DEVIATION	01 02
34A	0551018252	CHAIN TIGHTENER AXLE	01 00
34B	0521010479	SLEEVE ARTICULATION	01 00
34C	0501058239	CHAIN TENSIONER BEARING	01 00
34CA	0502012018	CHAIN TIGHTENER BEARING	01 00
34CB	0503012882	BALL BEARING	01 00
34CC	0503011945	503050 CLAMPING RING (FOR AXLE)	01 00
34D	0503011336	1/2" HEX SELF ADJUSTING NUT	01 00
35	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION	01 00
36	0503010847	1/2" X 3.1/4" BOLT	02 04
37	0503010019	1/2" SPRING WASHER	02 04
38	0501048672	CHAIN TENSIONER ASSY	01 02
38A	0521012529	CHAIN TIGHTENER AXLE	01 00
38B	0503030402	PULLEY	01 00
38C	0503010302	501019 SEAL RING	01 00
38D	0503010002	1800 GREASE FITTING	01 00
38E	0511017302	FLAT WASHER	02 00
38F	0503010019	1/2" SPRING WASHER	01 00
38G	0503010060	1/2" NUT	01 00
39	0502010584	CARRYING-WHEELS SUPPORT FIXER	01 01
40	0511010736	5/8" X 5-1/4" BOLT	04 08
41	0501013753	FLAT WASHER	04 08
42	0503010811	5/8" UNF SELF ADJUSTING NUT	04 08
43	0502012720	FIXER THE RODEIRO SUPPORT	01 02
44	0503017857	BOLT 5/8 UNF 4	04 08
45	0503010811	5/8" UNF SELF ADJUSTING NUT	04 08
46	0501012140	FLAT WASHER	04 08
47	0503012570	CHAIN 2050 X 2.8" LINK + MENDING	01 02
48	0501047888	ROD STOP	01 02

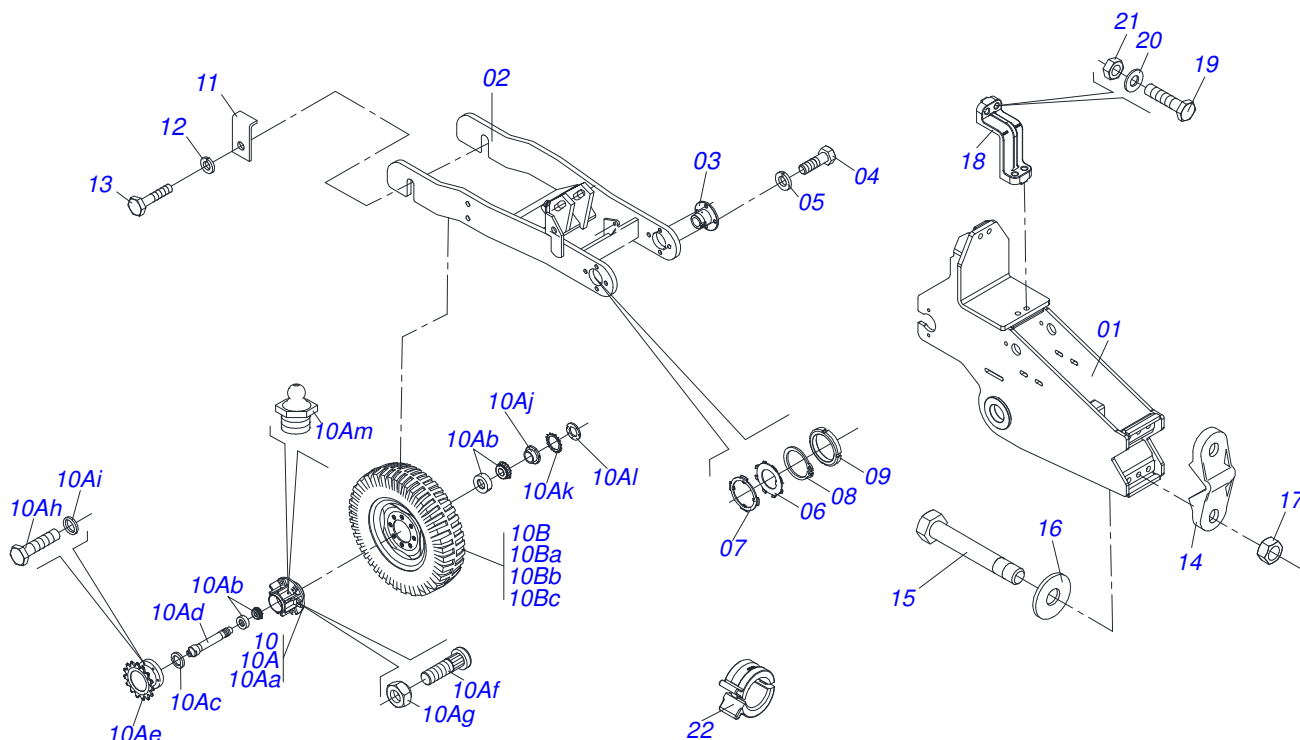 


Item	Code	Description	5750/6850
001	0521063678	WHEEL SUPPORT	01 01
002	0511064744	WHEEL FORK	01 01
003	0501110625	WHEEL PIVOT BEARING	02 02
004	0503013232	1/2" UNF X 1" BOLT	08 08
005	0503010019	1/2" SPRING WASHER	08 08
006	0561013021	BEARING INNER LOK	02 02
007	0561013022	BEARING EXTERNAL LOCK	02 02
008	0503010398	501082 CLAMPING RING (FOR AXLE)	02 02
009	0561013020	KM 12 NUT	02 02
010	0511052768	REQUIRES TIRE	01 01
010A	0511052766	CARRYING WHEEL HUB ASSY	01 01
010Aa	0571012990	CARRYING WHEEL HUB TRANSMISSION	01 01
010Ab	0503010328	25590/25523 ROLLER BEARING	02 02
010Ac	0503010804	00547-B SEAL	02 02
010Ad	0521018363	00547-B SEAL	01 01
010Ae	0511062015	14Z GEAR WITH FLANGE	01 01
010Af	0501010186	PARAFUSO ROD 5/8UNF X 2.1/8CR	06 06
010Ag	0503016516	5/8 UNF CONIC NUT	06 06
010Ah	0503010421	5/16" X 1-1/2" BOLT	06 06
010Ai	0503011444	SPRING WASHER	06 06
010Aj	0511015949	LOCK NUT	01 01
010Ak	0503010329	LOCK WASHER	01 01
010Al	0503010330	KM 9 LOCKNUT	01 01
010Am	0503010002	1800 GREASE FITTING	01 01
010B	0503062158	REQUIRES TIRE	01 01
010Ba	0503012113	PLY TIRE	01 01
010Bb	0503016518	RUEDA	01 01
010Bc	0503012114	7.00 X 16 INNER TIRE	01 01
011	0521012190	AXLE LOCK	02 02
012	0503010027	SPRING WASHER	02 02
013	0503011167	M16 X 2 X 30 BOLT	02 02
014	0502010584	CARRYING-WHEELS SUPPORT FIXER	02 02
015	0511010736	5/8" X 5-1/4" BOLT	04 04

Item	Code	Description	5750/6850	
016	0501013753	FLAT WASHER	04	04
017	0503010811	5/8" UNF SELF ADJUSTING NUT	04	04
018	0502012720	FIXER THE RODEIRO SUPPORT	01	01
019	0503017857	BOLT 5/8 UNF 4	04	04
020	0503010811	5/8" UNF SELF ADJUSTING NUT	04	04
021	0501012140	FLAT WASHER	04	04
022	0501047888	ROD STOP	01	01

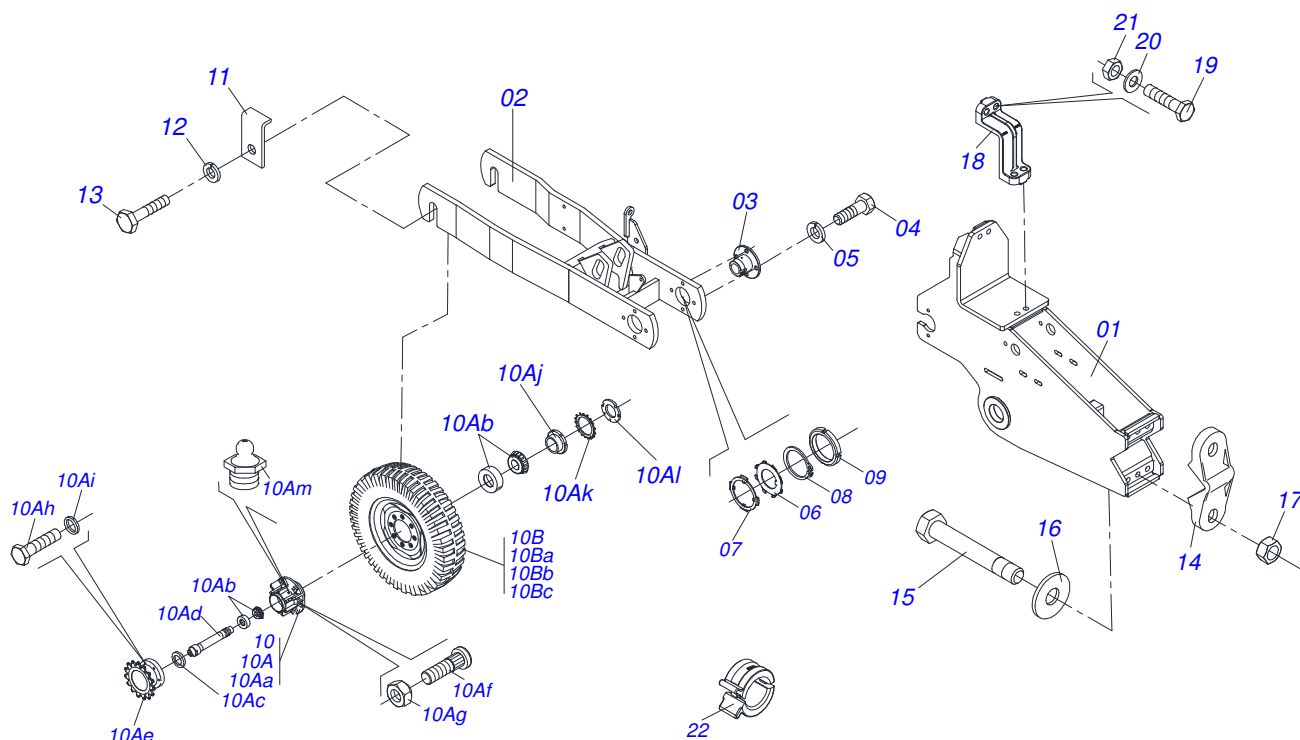 


Item	Code	Description	5750/6850
001	0521063678	WHEEL SUPPORT	01 01
002	0511065842	LEFT WHEEL FORK	01 01
003	0501110625	WHEEL PIVOT BEARING	02 02
004	0503013232	1/2" UNF X 1" BOLT	08 08
005	0503010019	1/2" SPRING WASHER	08 08
006	0561013021	BEARING INNER LOK	02 02
007	0561013022	BEARING EXTERNAL LOCK	02 02
008	0503010398	501082 CLAMPING RING (FOR AXLE)	02 02
009	0561013020	KM 12 NUT	02 02
010	0511052768	REQUIRES TIRE	01 01
010A	0511052766	CARRYING WHEEL HUB ASSY	01 01
010Aa	0571012990	CARRYING WHEEL HUB TRANSMISSION	01 01
010Ab	0503010328	25590/25523 ROLLER BEARING	02 02
010Ac	0503010804	00547-B SEAL	02 02
010Ad	0521018363	00547-B SEAL	01 01
010Ae	0511062015	14Z GEAR WITH FLANGE	01 01
010Af	0501010186	PARAFUSO ROD 5/8UNF X 2.1/8CR	06 06
010Ag	0503016516	5/8 UNF CONIC NUT	06 06
010Ah	0503010421	5/16" X 1-1/2" BOLT	06 06
010Ai	0503011444	SPRING WASHER	06 06
010Aj	0511015949	LOCK NUT	01 01
010Ak	0503010329	LOCK WASHER	01 01
010Al	0503010330	KM 9 LOCKNUT	01 01
010Am	0503010002	1800 GREASE FITTING	01 01
010B	0503062158	REQUIRES TIRE	01 01
010Ba	0503012113	PLY TIRE	01 01
010Bb	0503016518	RUEDA	01 01
010Bc	0503012114	7.00 X 16 INNER TIRE	01 01
011	0521012190	AXLE LOCK	02 02
012	0503010027	SPRING WASHER	02 02
013	0503011167	M16 X 2 X 30 BOLT	02 02
014	0502010584	CARRYING-WHEELS SUPPORT FIXER	02 02
015	0511010736	5/8" X 5-1/4" BOLT	04 04


Item	Code	Description	5750/6850	
016	0501013753	FLAT WASHER	04	04
017	0503010811	5/8" UNF SELF ADJUSTING NUT	04	04
018	0502012720	FIXER THE RODEIRO SUPPORT	01	01
019	0503017857	BOLT 5/8 UNF 4	04	04
020	0503010811	5/8" UNF SELF ADJUSTING NUT	04	04
021	0501012140	FLAT WASHER	04	04
022	0501047888	ROD STOP	01	01

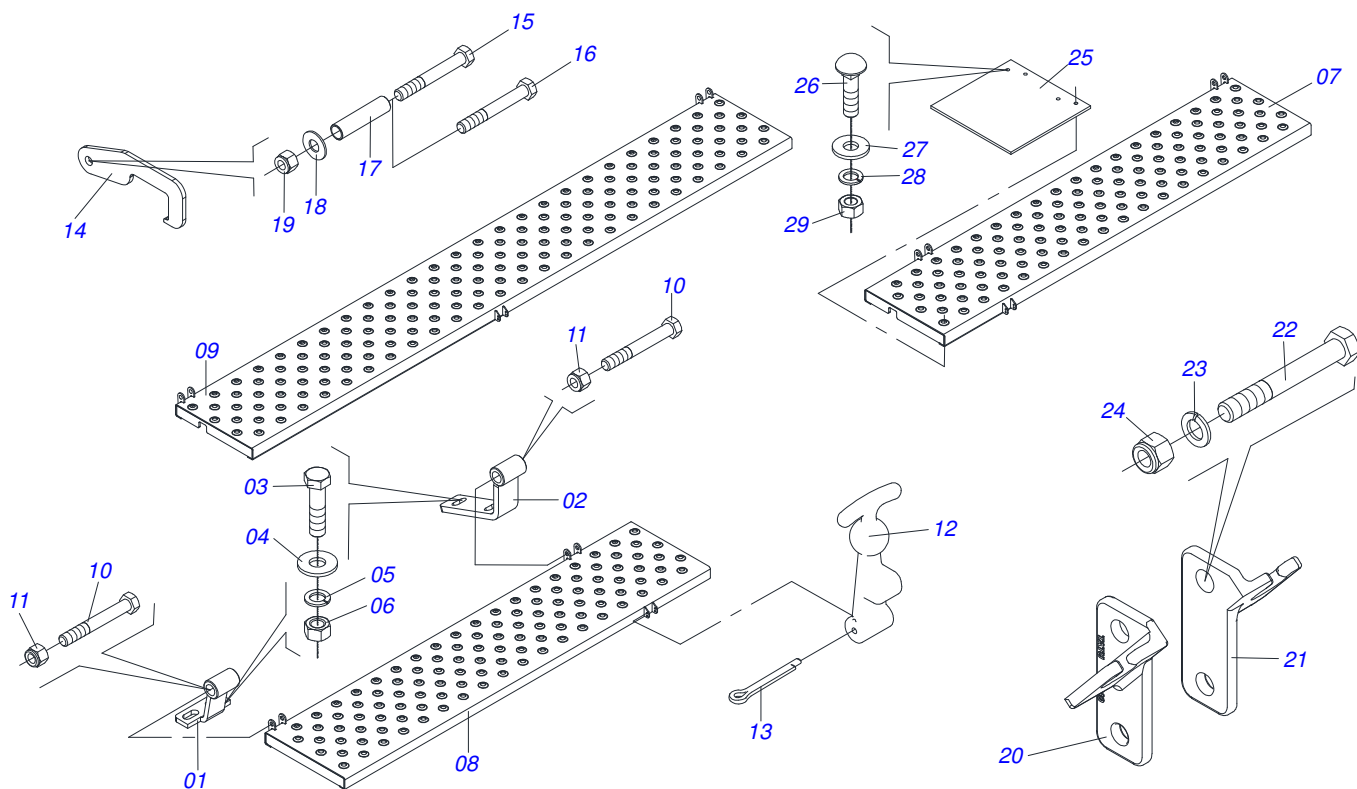 


Item	Code	Description	QT
001	0521061861	PLATFORM FIXER	02
002	0511069661	PLATFORM SUPPORT PIVOT	04
003	0503010849	3/8" X 1-1/2" BOLT	12
004	0501010984	FLAT WASHER	24
005	0503010025	3/8 SPRING WASHER	12
006	0503010026	3/8" NUT	12
007	0521067448	SIDE PLATFORM	01
008	0521067447	RIGHT PLATAFORM	01
009	0521067086	PLATFORM CENTER	01
010	0503011172	1/2" X 2-1/2" BOLT	06
011	0503011336	1/2" HEX SELF ADJUSTING NUT	06
012	0503011333	COVER FIXER	03
013	0503010274	5/32"X 2" COTTERPIN	03
014	0551019115	LOCK	03
015	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
016	0501010096	3/8" X 2" BOLT	02
017	0571019831	X 0.2" SLEEVE	02
018	0501010984	FLAT WASHER	03
019	0503013357	3/8" SELF-ADJUSTING NUT	03
020	0502012740	PLATFORM RIGHT FIXER SUPPORT	01
021	0502012739	PLATFORM LEFT FIXER SUPPORT	02
022	0503010740	1/2" X 2" BOLT	02
023	0503010019	1/2" SPRING WASHER	02
024	0503010060	1/2" NUT	02
025	0571017990	PLATFORM ENHANCEMENT PROTECTION	02
026	0501010942	3/8" X 1-1/4" BOLT	04
027	0501010984	FLAT WASHER	04
028	0503010025	3/8 SPRING WASHER	04
029	0503010026	3/8" NUT	04

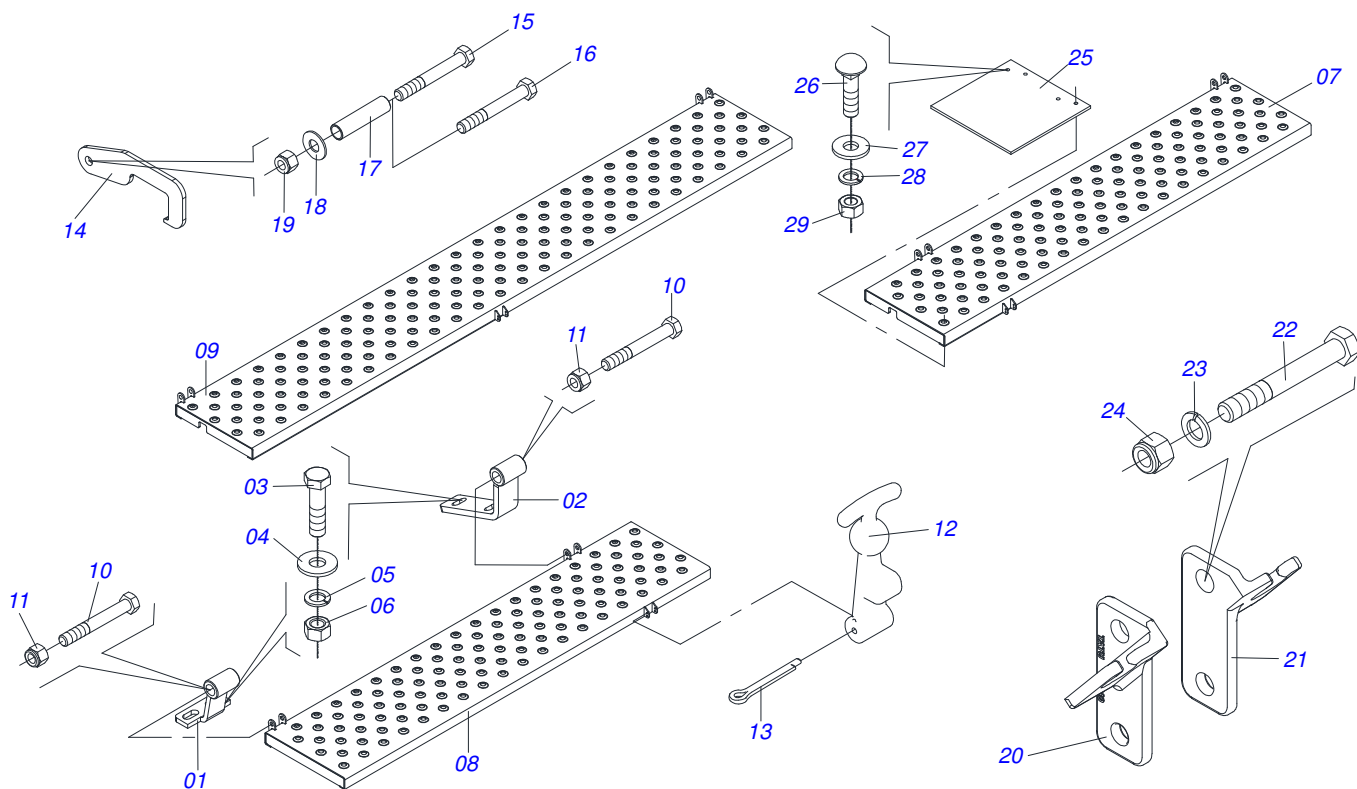 


Item	Code	Description	QT
001	0521061861	PLATFORM FIXER	02
002	0511069661	PLATFORM SUPPORT PIVOT	04
003	0503010849	3/8" X 1-1/2" BOLT	12
004	0501010984	FLAT WASHER	24
005	0503010025	3/8 SPRING WASHER	12
006	0503010026	3/8" NUT	12
007	0521063868	SIDE PLATFORM	01
008	0521063869	RIGHT PLATFORM	01
009	0521063870	PLATFORM CENTER	01
010	0503011172	1/2" X 2-1/2" BOLT	06
011	0503011336	1/2" HEX SELF ADJUSTING NUT	06
012	0503011333	COVER FIXER	03
013	0503010274	5/32"X 2" COTTERPIN	03
014	0551019115	LOCK	03
015	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
016	0501010096	3/8" X 2" BOLT	02
017	0571019831	X 0.2" SLEEVE	02
018	0501010984	FLAT WASHER	03
019	0503013357	3/8" SELF-ADJUSTING NUT	03
020	0502012740	PLATFORM RIGHT FIXER SUPPORT	01
021	0502012739	PLATFORM LEFT FIXER SUPPORT	02
022	0503010740	1/2" X 2" BOLT	06
023	0503010019	1/2" SPRING WASHER	06
024	0503010060	1/2" NUT	06
025	0571017990	PLATFORM ENHANCEMENT PROTECTION	02
026	0501010942	3/8" X 1-1/4" BOLT	04
027	0501010984	FLAT WASHER	04
028	0503010025	3/8 SPRING WASHER	04
029	0503010026	3/8" NUT	04

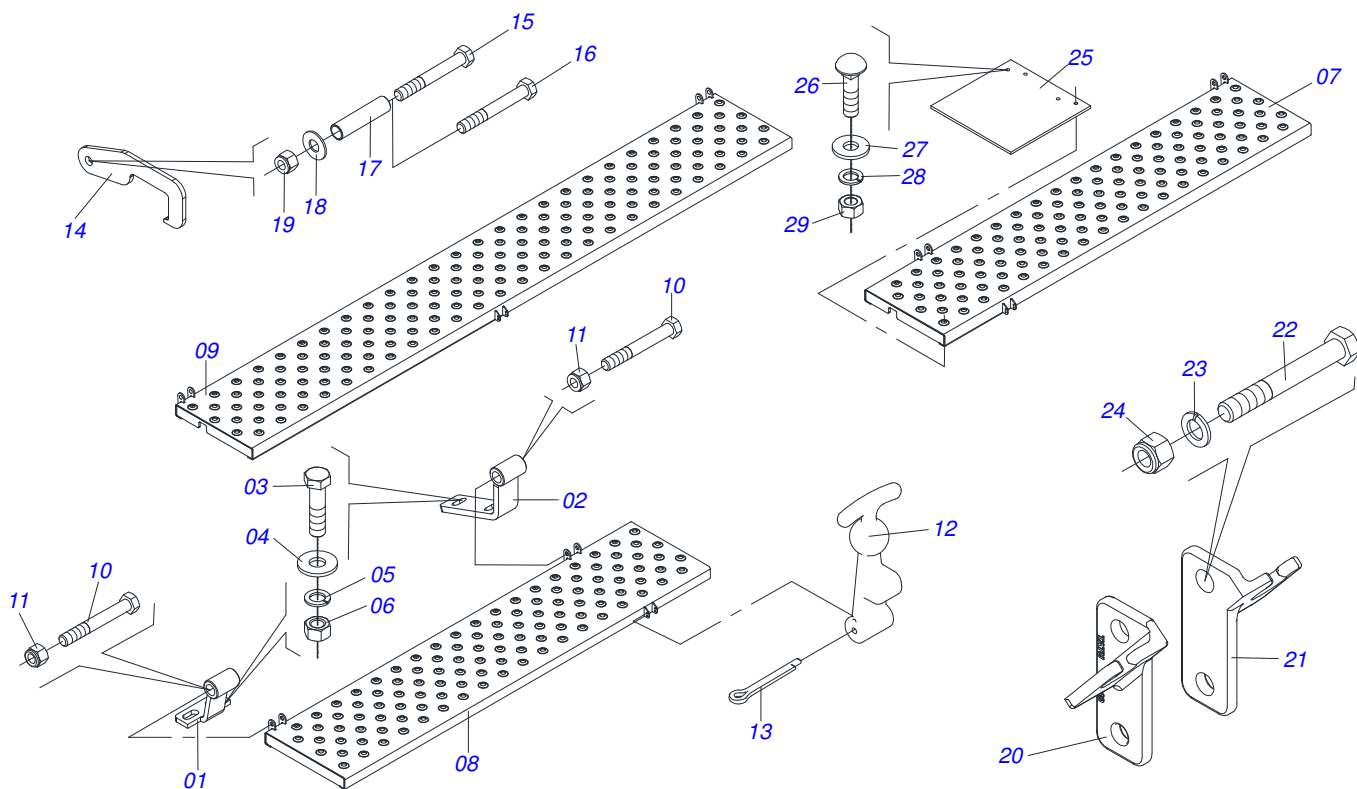 


Item	Code	Description	QT
001	0521061861	PLATFORM FIXER	02
002	0511069661	PLATFORM SUPPORT PIVOT	04
003	0503010849	3/8" X 1-1/2" BOLT	12
004	0501010984	FLAT WASHER	24
005	0503010025	3/8 SPRING WASHER	12
006	0503010026	3/8" NUT	12
007	0521067085	SIDE PLATFORM	01
008	0521067084	RIGHT PLATAFORM	01
009	0521067086	PLATFORM CENTER	01
010	0503011172	1/2" X 2-1/2" BOLT	06
011	0503011336	1/2" HEX SELF ADJUSTING NUT	06
012	0503011333	COVER FIXER	03
013	0503010274	5/32"X 2" COTTERPIN	03
014	0551019115	LOCK	03
015	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
016	0501010096	3/8" X 2" BOLT	02
017	0571019831	X 0.2" SLEEVE	02
018	0501010984	FLAT WASHER	03
019	0503013357	3/8" SELF-ADJUSTING NUT	03
020	0502012740	PLATFORM RIGHT FIXER SUPPORT	01
021	0502012739	PLATFORM LEFT FIXER SUPPORT	02
022	0503010740	1/2" X 2" BOLT	02
023	0503010019	1/2" SPRING WASHER	02
024	0503010060	1/2" NUT	02
025	0571017990	PLATFORM ENHANCEMENT PROTECTION	02
026	0501010942	3/8" X 1-1/4" BOLT	04
027	0501010984	FLAT WASHER	04
028	0503010025	3/8 SPRING WASHER	04
029	0503010026	3/8" NUT	04

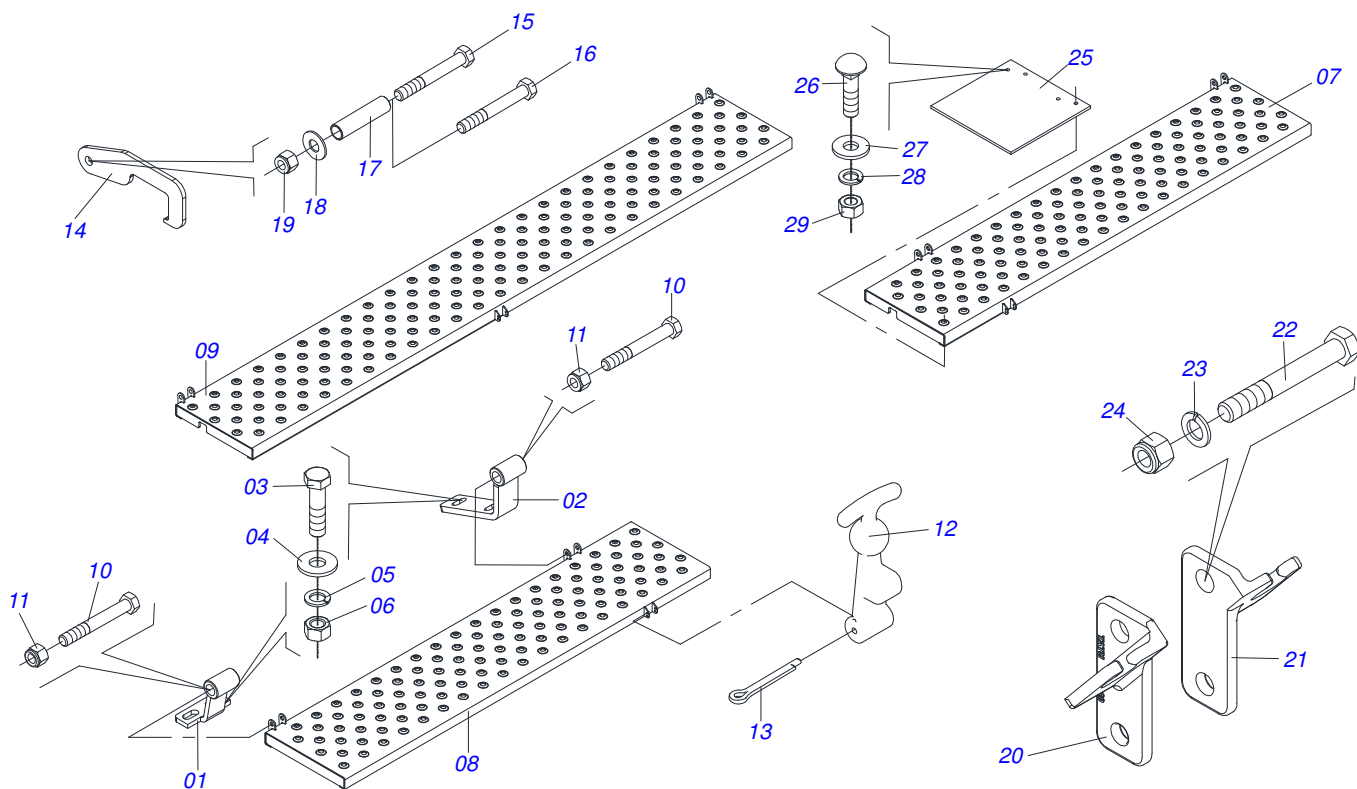 


Item	Code	Description	QT
001	0521061861	PLATFORM FIXER	02
002	0511069661	PLATFORM SUPPORT PIVOT	04
003	0503010849	3/8" X 1-1/2" BOLT	12
004	0501010984	FLAT WASHER	24
005	0503010025	3/8 SPRING WASHER	12
006	0503010026	3/8" NUT	12
007	0521066487	SIDE PLATFORM	01
008	0521066486	RIGHT PLATAFORM	01
009	0521063870	PLATFORM CENTER	01
010	0503011172	1/2" X 2-1/2" BOLT	06
011	0503011336	1/2" HEX SELF ADJUSTING NUT	06
012	0503011333	COVER FIXER	03
013	0503010274	5/32"X 2" COTTERPIN	03
014	0551019115	LOCK	03
015	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
016	0501010096	3/8" X 2" BOLT	02
017	0571019831	X 0.2" SLEEVE	02
018	0501010984	FLAT WASHER	03
019	0503013357	3/8" SELF-ADJUSTING NUT	03
020	0502012740	PLATFORM RIGHT FIXER SUPPORT	01
021	0502012739	PLATFORM LEFT FIXER SUPPORT	02
022	0503010740	1/2" X 2" BOLT	02
023	0503010019	1/2" SPRING WASHER	02
024	0503010060	1/2" NUT	02
025	0571017990	PLATFORM ENHANCEMENT PROTECTION	02
026	0501010942	3/8" X 1-1/4" BOLT	04
027	0501010984	FLAT WASHER	04
028	0503010025	3/8 SPRING WASHER	04
029	0503010026	3/8" NUT	04

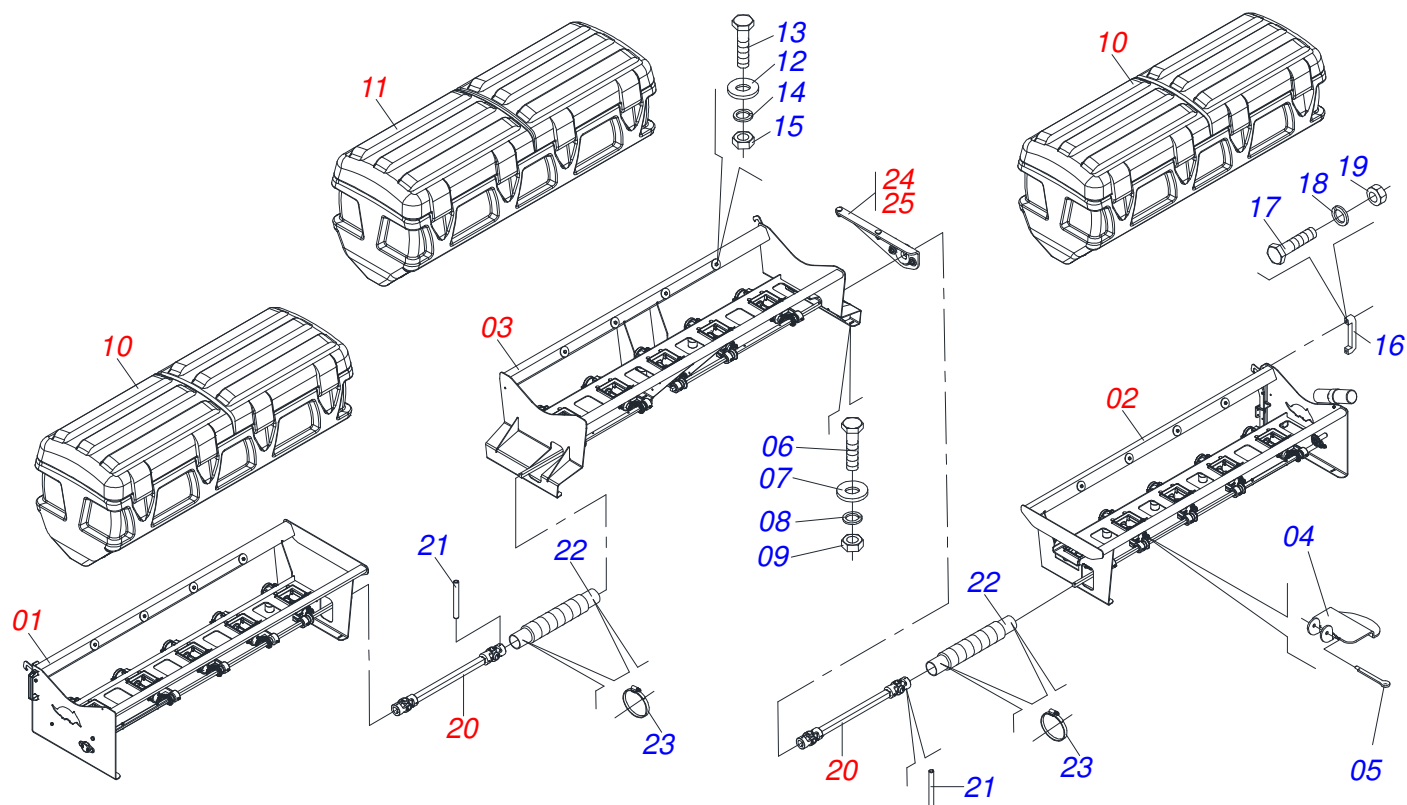 


Item	Code	Description	QT
001	0521050220	LFT FERTILIZER BEAM SUPPORT	01
002	0521050219	FERTILIZER BEAM SUPPORT	01
003	0521050218	CENTER FERTILIZER SILO SUPPORT	01
004	0503034396	FERTILIZER SIDE COVER	15
005	0503010362	1/8" X 1.1/4" COTTERPIN	15
006	0503010849	3/8" X 1-1/2" BOLT	16
007	0501010984	FLAT WASHER	32
008	0503010025	3/8 SPRING WASHER	16
009	0503010026	3/8" NUT	16
010	0503062391	BEAN FERTILIZ 5 MOUTHS	02
011	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED	01
012	0571019051	FIXER BOX WASHER	26
013	0503013751	3/8 UNC X 1.1/4 BOLT	26
014	0503012535	3/8" SPRING WASHER	26
015	0503012531	3/8" INOX NUT	26
016	0503011957	PMC 596-S NYLON LUG	02
017	0503010371	5/16" X 1" BOLT	04
018	0503010179	SPRING WASHER	04
019	0503010337	5/16" NUT	04
020	0503062476	CARDAN TERMINAL	02
021	0503011855	0.2" X 1.8" SPRING PIN	04
022	0503030331	1.2" X 1.2" X 12.2" HOSE	02
023	0503010243	CLAMP	04
024	0521050194	RH SUPPORT	02
025	0521050195	LEFT SUPPORT	02

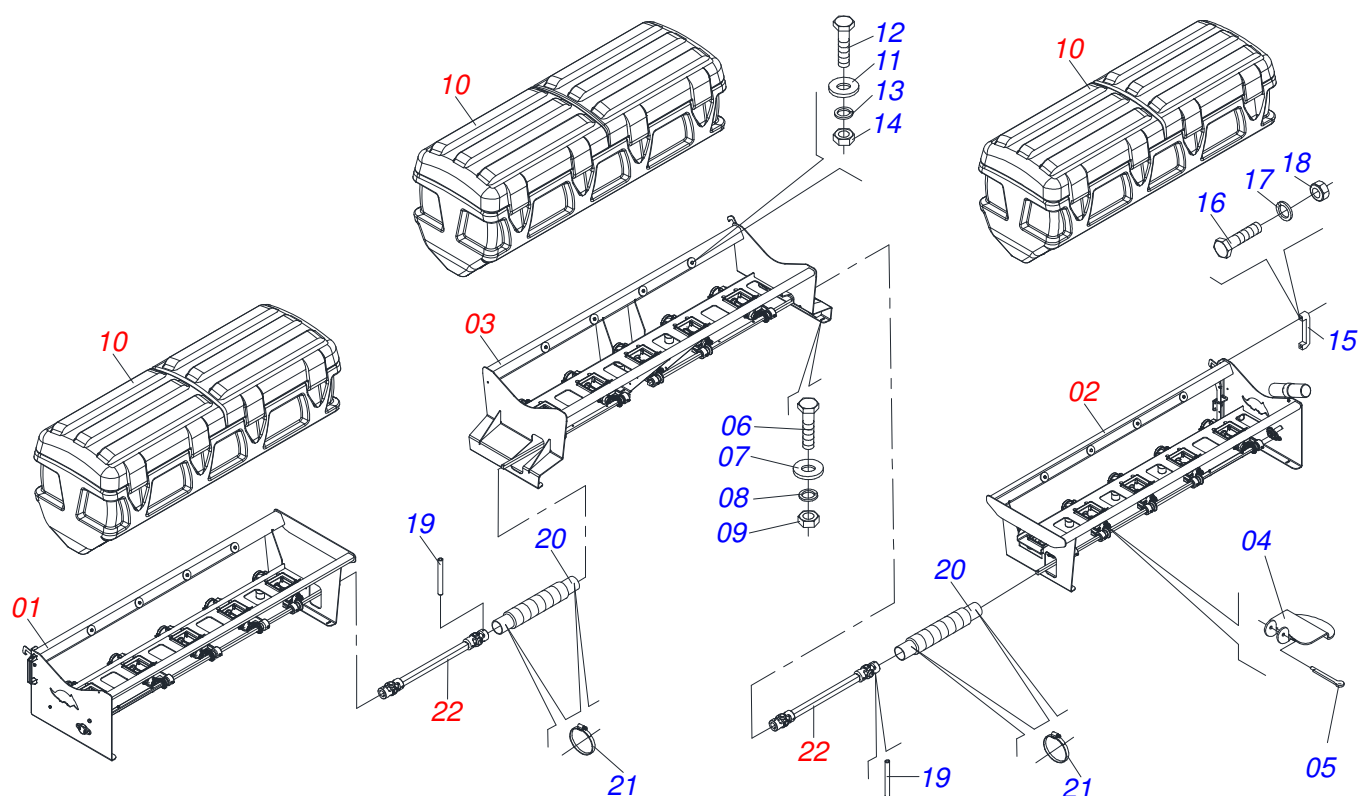 


Item	Code	Description	QT
001	0511057813	FERTILIZER BEAM SUPPORT	01
002	0511057812	FERTILIZER BEAM SUPPORT	01
003	0511057814	CENTER FERTILIZER SILO SUPPORT	01
004	0571010590	FERTILIZER SIDE COVER	15
005	0503010362	1/8" X 1.1/4" COTTERPIN	15
006	0503010849	3/8" X 1-1/2" BOLT	12
007	0501010984	FLAT WASHER	24
008	0503010025	3/8 SPRING WASHER	12
009	0503010026	3/8" NUT	12
010	0503062391	BEAN FERTILIZ 5 MOUTHS	03
011	0571019051	FIXER BOX WASHER	24
012	0503013751	3/8 UNC X 1.1/4 BOLT	24
013	0503012535	3/8" SPRING WASHER	24
014	0503012531	3/8" INOX NUT	24
015	0503011957	PMC 596-S NYLON LUG	02
016	0503010371	5/16" X 1" BOLT	04
017	0503010179	SPRING WASHER	04
018	0503010337	5/16" NUT	04
019	0503011855	0.2" X 1.8" SPRING PIN	04
020	0503030331	1.2" X 1.2" X 12.2" HOSE	02
021	0503010243	CLAMP	04
022	0503062208	CARDAN TERMINAL	02

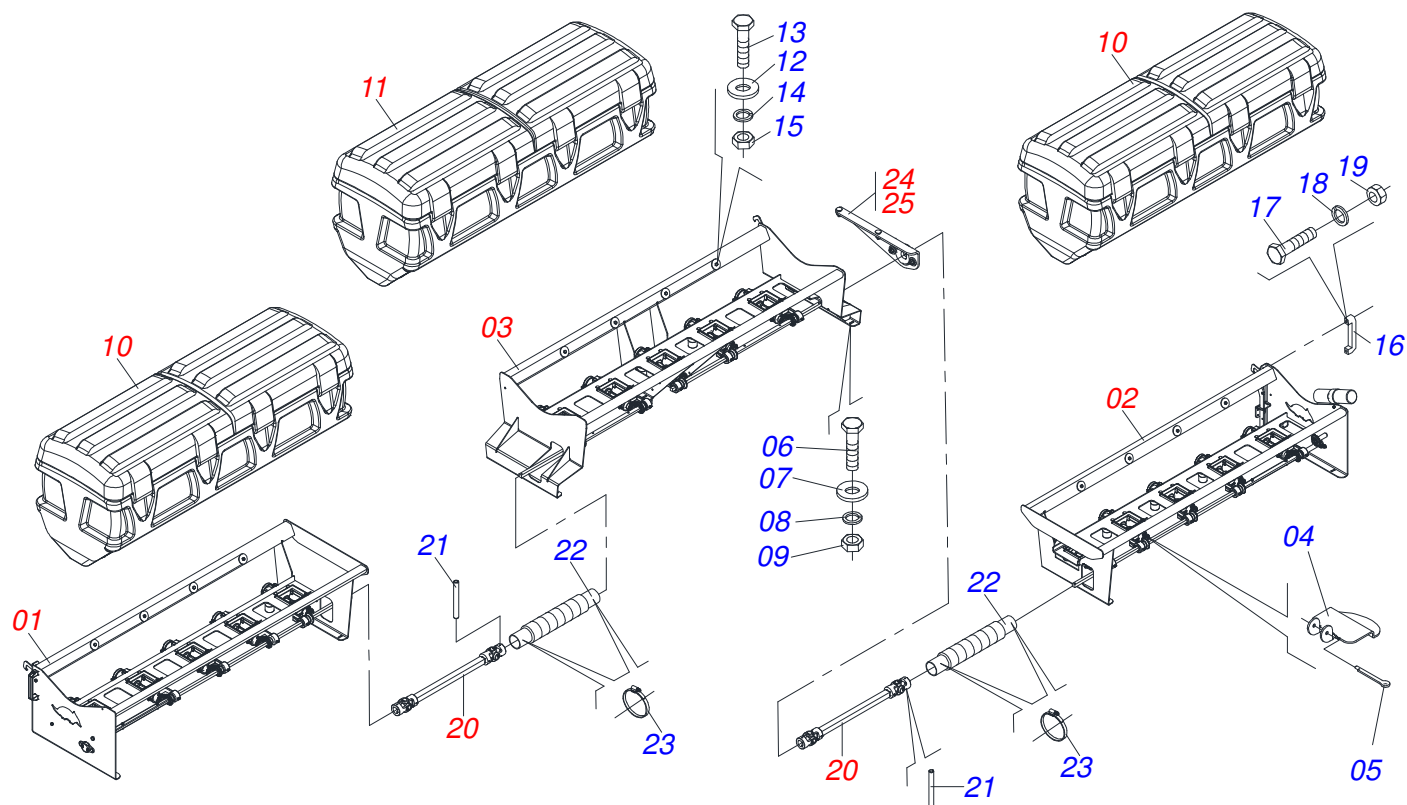 


Item	Code	Description	QT
001	0521050890	FERTILIZER BEAM SUPPORT	01
002	0521050891	FERTILIZER BEAM SUPPORT	01
003	0521050218	CENTER FERTILIZER SILO SUPPORT	01
004	0503034396	FERTILIZER SIDE COVER	14
005	0503010362	1/8" X 1.1/4" COTTERPIN	14
006	0503010849	3/8" X 1-1/2" BOLT	16
007	0501010984	FLAT WASHER	32
008	0503010025	3/8 SPRING WASHER	16
009	0503010026	3/8" NUT	16
010	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED	01
011	0503062362	BEAN FERTILIZER ASSY	02
012	0571019051	FIXER BOX WASHER	22
013	0503013751	3/8 UNC X 1.1/4 BOLT	22
014	0503012535	3/8" SPRING WASHER	22
015	0503012531	3/8" INOX NUT	22
016	0503011957	PMC 596-S NYLON LUG	02
017	0503010371	5/16" X 1" BOLT	04
018	0503010179	SPRING WASHER	04
019	0503010337	5/16" NUT	04
020	0503062476	CARDAN TERMINAL	02
021	0503011855	0.2" X 1.8" SPRING PIN	04
022	0503030331	1.2" X 1.2" X 12.2" HOSE	02
023	0503010243	CLAMP	04
024	0521050194	RH SUPPORT	01
025	0521050195	LEFT SUPPORT	01

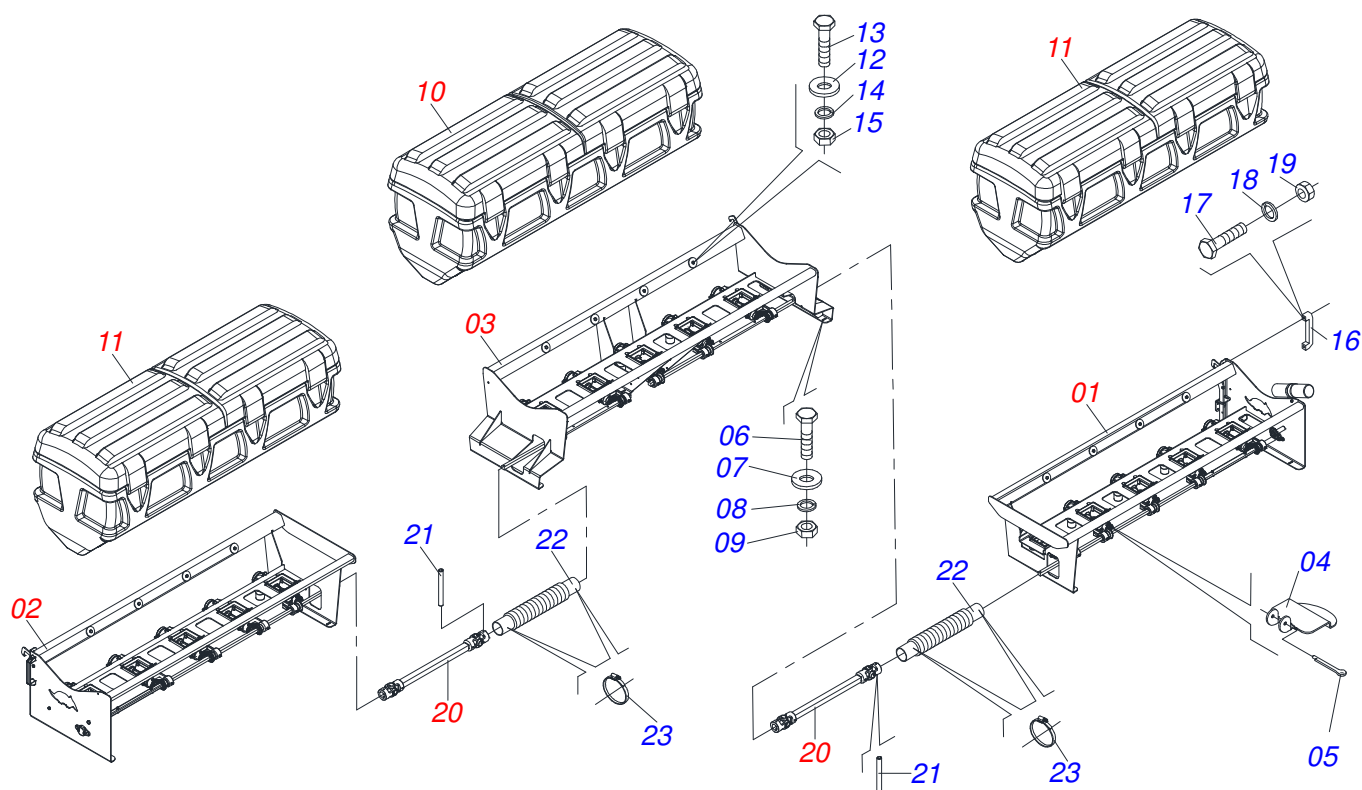 


Item	Code	Description	QT
001	0511058130	FERTILIZER BEAM SUPPORT	01
002	0511058131	FERTILIZER BEAM SUPPORT	01
003	0511058132	CENTER FERTILIZER SILO SUPPORT	01
004	0571010590	FERTILIZER SIDE COVER	13
005	0503010362	1/8" X 1.1/4" COTTERPIN	13
006	0503010849	3/8" X 1-1/2" BOLT	16
007	0501010984	FLAT WASHER	32
008	0503010025	3/8 SPRING WASHER	16
009	0503010026	3/8" NUT	16
010	0503062391	BEAN FERTILIZ 5 MOUTHS	01
011	0503062362	BEAN FERTILIZER ASSY	02
012	0571019051	FIXER BOX WASHER	20
013	0503013751	3/8 UNC X 1.1/4 BOLT	20
014	0503012535	3/8" SPRING WASHER	20
015	0503012531	3/8" INOX NUT	20
016	0503011957	PMC 596-S NYLON LUG	02
017	0503010371	5/16" X 1" BOLT	04
018	0503010179	SPRING WASHER	04
019	0503010337	5/16" NUT	04
020	0503062476	CARDAN TERMINAL	02
021	0503011855	0.2" X 1.8" SPRING PIN	04
022	0503030331	1.2" X 1.2" X 12.2" HOSE	02
023	0503010243	CLAMP	04

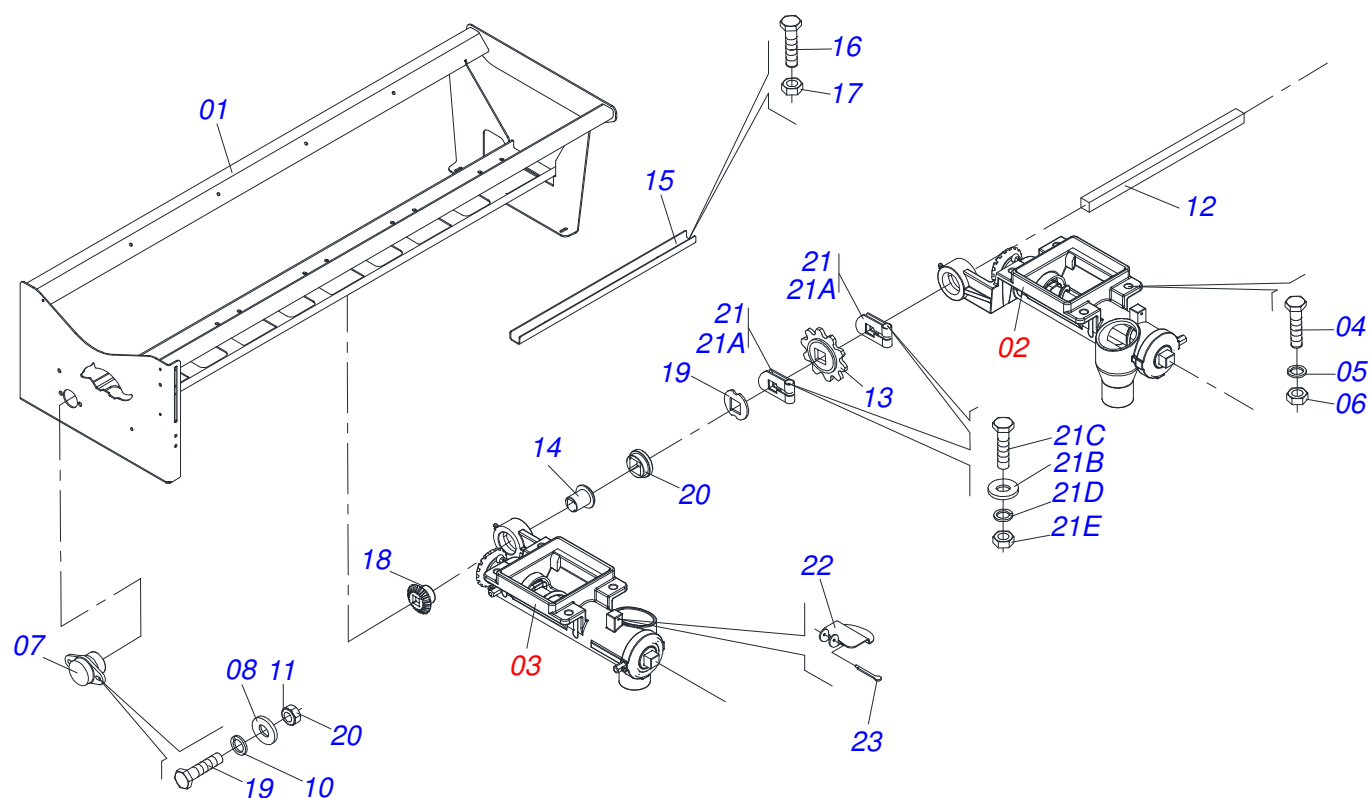 


Item	Code	Description	QT
001	0521067456	LH FERTILIZER BOX SUPPORT	01
002	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	01
003	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	04
004	0501010942	3/8" X 1-1/4" BOLT	20
005	0503011443	SPRING WASHER	20
006	0503010026	3/8" NUT	20
007	0501056271	GEAR BOX CLOSE BEARINGONE	01
008	0521011039	FLAT WASHER	02
009	0503011953	5/16" X 1" BOLT	02
010	0503011444	SPRING WASHER	02
011	0503010337	5/16" NUT	02
012	0581013342	SQUARE SHAFT	01
013	1902010685	18Z CONICAL GEAR	05
014	0503030275	AGRICULTURAL BEARING	05
015	0571019828	LOCK AXLE	01
016	0503010365	NUT	02
017	0503013816	5/16" LOCKNUT	02
018	0511061759	22Z P12,70 FQ 3/4" GEAR	01
019	0521014167	CONE LOCK	03
020	0503030303	SUPPORT WASHER	01
021	0511059491	FASTENER	01
021A	0521010691	AXLE FASTENER	01
021B	0501010694	FLAT WASHER	01
021C	0503010373	1/4" X 2" BOLT	01
021D	0503011441	SPRING WASHER	01
021E	0503010144	1/4" NUT	01
22	0571010590	FERTILIZER SIDE COVER	05
23	0503010362	1/8" X 1.1/4" COTTERPIN	05

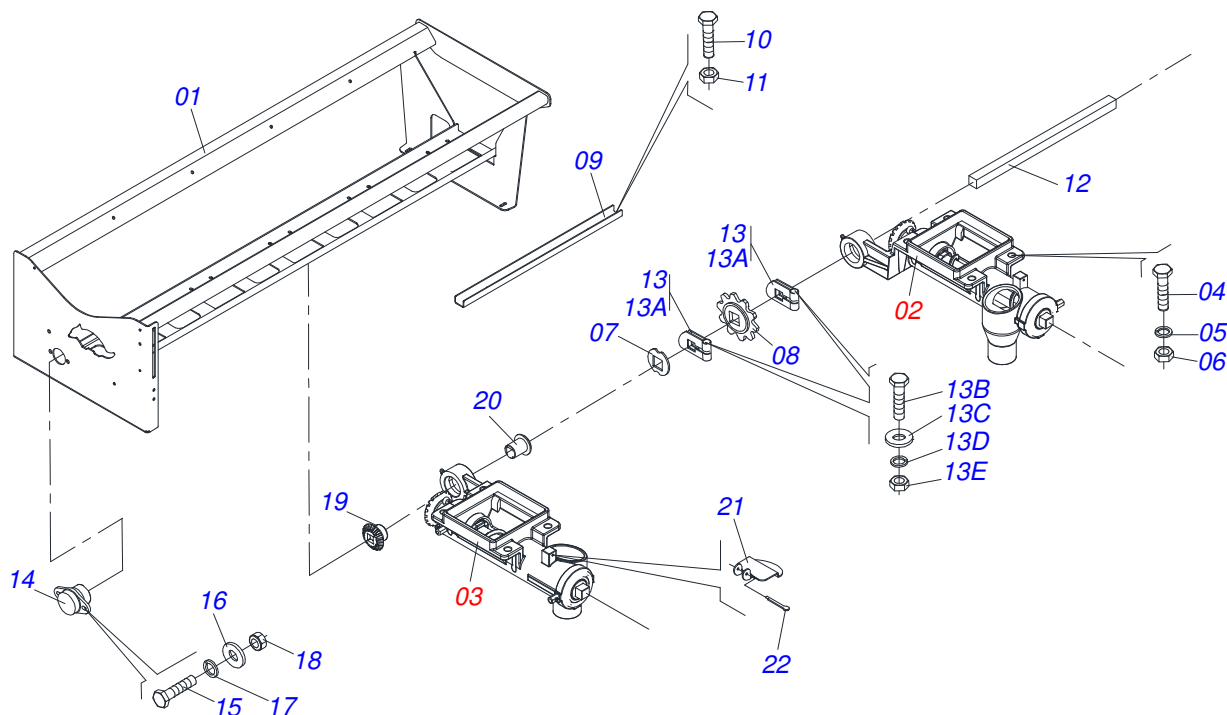 


Item	Code	Description	QT
001	0521066297	FERTILIZER SUPPORT LEFT BEAM	01
002	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	02
003	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	03
004	0501010942	3/8" X 1-1/4" BOLT	20
005	0503011443	SPRING WASHER	20
006	0503010026	3/8" NUT	20
007	0521014167	CONE LOCK	02
008	0511061759	22Z P12,70 FQ 3/4" GEAR	01
009	0571019828	LOCK AXLE	01
010	0503010365	NUT	02
011	0503013816	5/16" LOCKNUT	02
012	0571019827	SQUARE SHAFT	01
013	0501053788	Q3/4" FASTENER AXLE ASSY	02
013A	0521010691	AXLE FASTENER	04
013B	0503010373	1/4" X 2" BOLT	04
013C	0501010694	FLAT WASHER	04
013D	0503010143	SPRING WASHER	04
013E	0503010144	1/4" NUT	04
014	0501056271	GEAR BOX CLOSE BEARINGONE	01
015	0503011953	5/16" X 1" BOLT	02
016	0521011039	FLAT WASHER	02
017	0503011444	SPRING WASHER	02
018	0503010337	5/16" NUT	02
019	1902010685	18Z CONICAL GEAR	05
020	0521012485	GEAR BOX BEARING AGRICUTURAL	02
021	0571010590	FERTILIZER SIDE COVER	05
022	0503010362	1/8" X 1.1/4" COTTERPIN	05

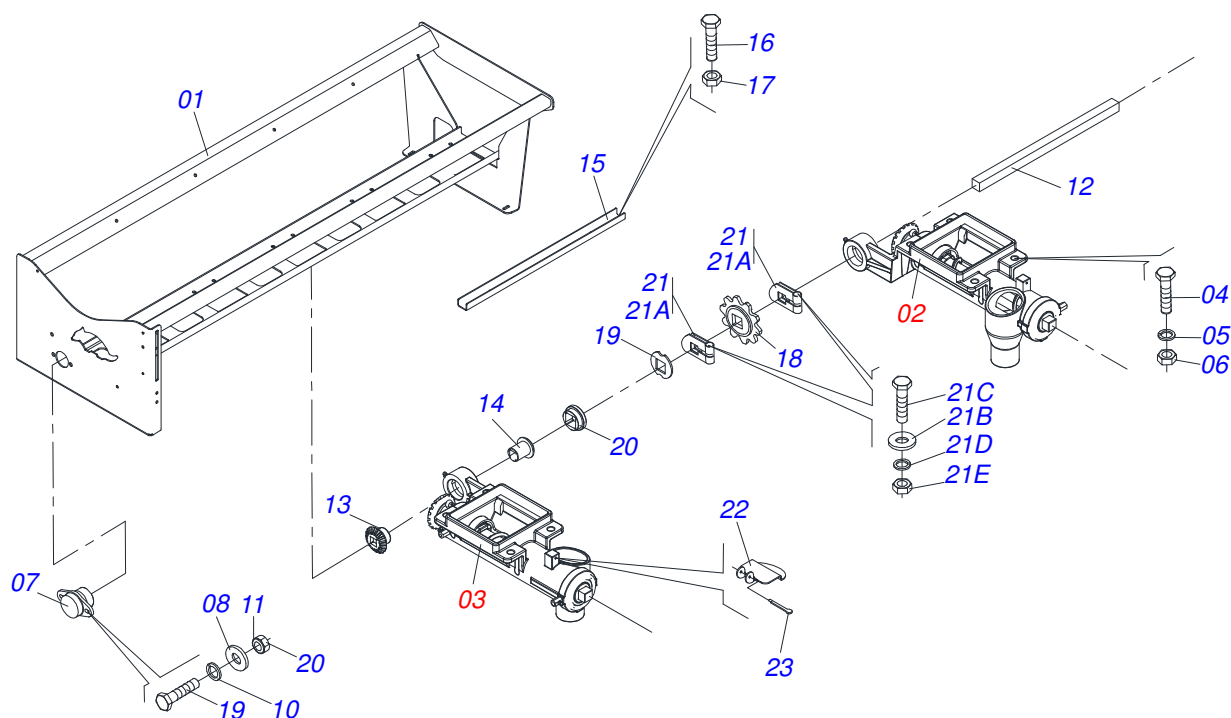 


Item	Code	Description	QT
001	0521067081	LH FERTILIZER BOX SUPPORT	01
002	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	02
003	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	02
004	0501010942	3/8" X 1-1/4" BOLT	16
005	0503011443	SPRING WASHER	16
006	0503010026	3/8" NUT	16
007	0501056271	GEAR BOX CLOSE BEARINGONE	01
008	0521011039	FLAT WASHER	02
009	0503011953	5/16" X 1" BOLT	02
010	0503011444	SPRING WASHER	02
011	0503010337	5/16" NUT	02
012	0581014216	SQUARE SHAFT	01
013	1902010685	18Z CONICAL GEAR	04
014	0503030275	AGRICULTURAL BEARING	04
015	0571019828	LOCK AXLE	01
016	0503010365	NUT	02
017	0503013816	5/16" LOCKNUT	02
018	0511061759	22Z P12,70 FQ 3/4" GEAR	01
019	0521014167	CONE LOCK	03
020	0503030303	SUPPORT WASHER	01
021	0511059491	FASTENER	01
021A	0521010691	AXLE FASTENER	01
021B	0501010694	FLAT WASHER	01
021C	0503010373	1/4" X 2" BOLT	01
021D	0503011441	SPRING WASHER	01
021E	0503010144	1/4" NUT	01
22	0571010590	FERTILIZER SIDE COVER	05
23	0503010362	1/8" X 1.1/4" COTTERPIN	05

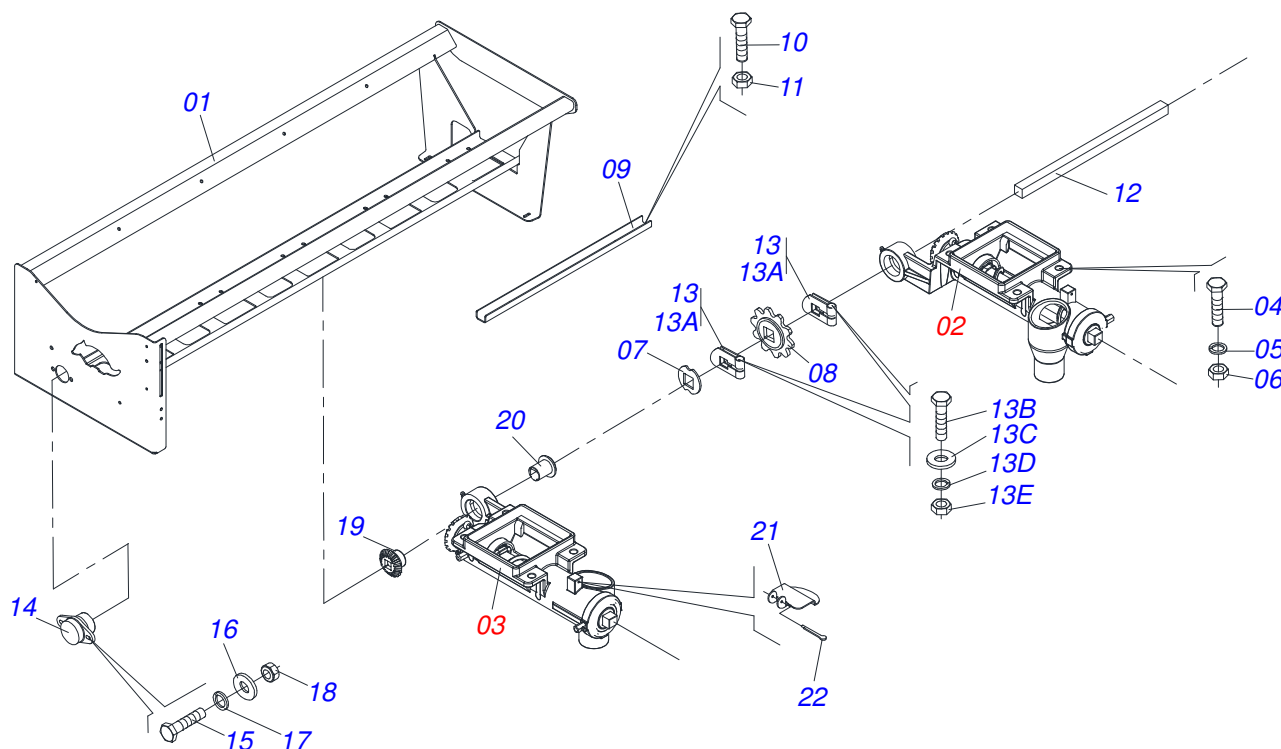 


Item	Code	Description	QT
001	0521066471	FERTILIZER SUPPORT LEFT BEAM	01
002	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	01
003	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	03
004	0501010942	3/8" X 1-1/4" BOLT	16
005	0503011443	SPRING WASHER	16
006	0503010026	3/8" NUT	16
007	0521014167	CONE LOCK	02
008	0511061759	22Z P12,70 FQ 3/4" GEAR	01
009	0571019828	LOCK AXLE	01
010	0503010365	NUT	02
011	0503013816	5/16" LOCKNUT	02
012	0581010469	SQUARE SHAFT	01
013	0501053788	Q3/4" FASTENER AXLE ASSY	02
013A	0521010691	AXLE FASTENER	04
013B	0503010373	1/4" X 2" BOLT	04
013C	0501010694	FLAT WASHER	04
013D	0503010143	SPRING WASHER	04
013E	0503010144	1/4" NUT	04
014	0501056271	GEAR BOX CLOSE BEARINGONE	01
015	0503011953	5/16" X 1" BOLT	02
016	0521011039	FLAT WASHER	02
017	0503011444	SPRING WASHER	02
018	0503010337	5/16" NUT	02
019	1902010685	18Z CONICAL GEAR	04
020	0503030275	AGRICULTURAL BEARING	04
21	0571010590	FERTILIZER SIDE COVER	05
22	0503010362	1/8" X 1.1/4" COTTERPIN	05

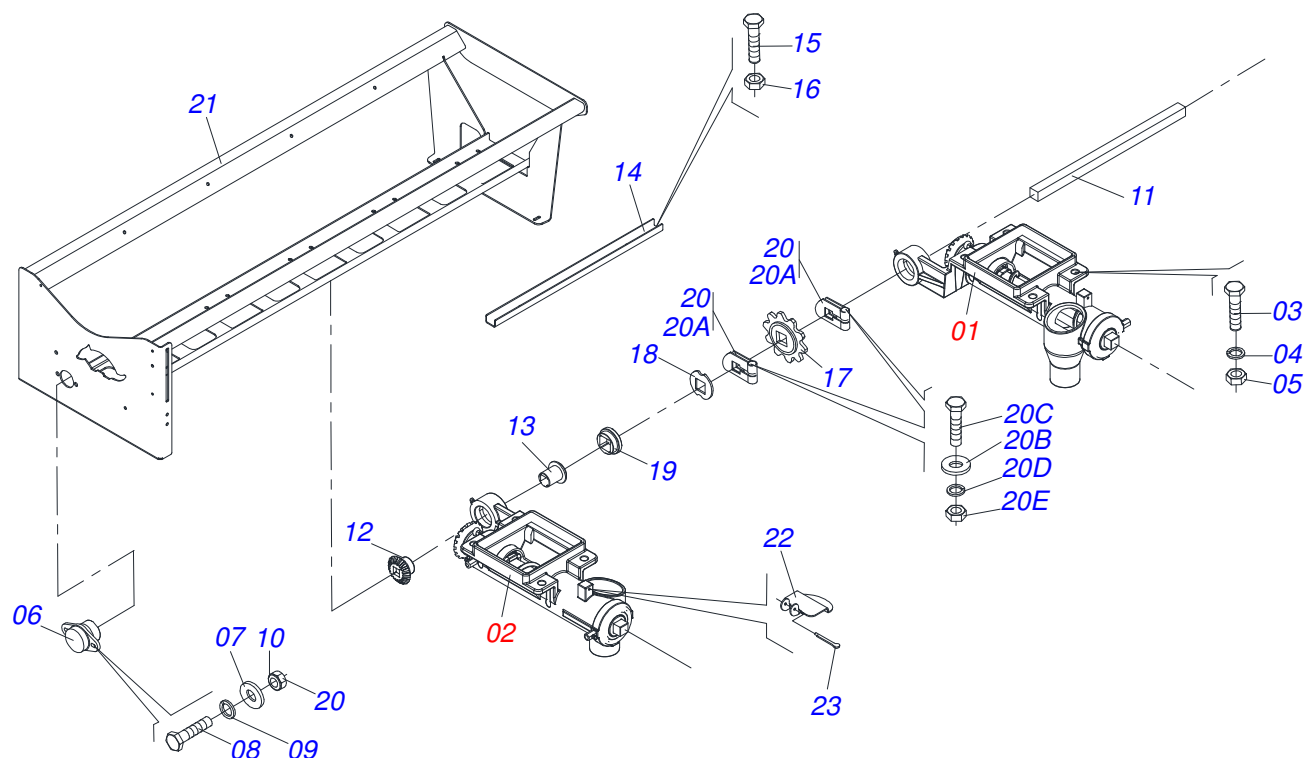 


Item	Code	Description	QT
001	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	04
002	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	01
003	0501010942	3/8" X 1-1/4" BOLT	20
004	0503011443	SPRING WASHER	20
005	0503010026	3/8" NUT	20
006	0501056271	GEAR BOX CLOSE BEARINGONE	01
007	0521011039	FLAT WASHER	02
008	0503011953	5/16" X 1" BOLT	02
009	0503011444	SPRING WASHER	02
010	0503010337	5/16" NUT	02
011	0581013342	SQUARE SHAFT	01
012	1902010685	18Z CONICAL GEAR	05
013	0503030275	AGRICULTURAL BEARING	05
014	0571019828	LOCK AXLE	01
015	0503010365	NUT	02
016	0503013816	5/16" LOCKNUT	02
017	0511061759	22Z P12,70 FQ 3/4" GEAR	01
018	0521014167	CONE LOCK	03
019	0503030303	SUPPORT WASHER	01
020	0511059491	FASTENER	01
020A	0521010691	AXLE FASTENER	01
020B	0501010694	FLAT WASHER	01
020C	0503010373	1/4" X 2" BOLT	01
020D	0503011441	SPRING WASHER	01
020E	0503010144	1/4" NUT	01
021	0521067455	FERTILIZER BEAN RIGHT SUPPORT	01
22	0571010590	FERTILIZER SIDE COVER	05
23	0503010362	1/8" X 1.1/4" COTTERPIN	05

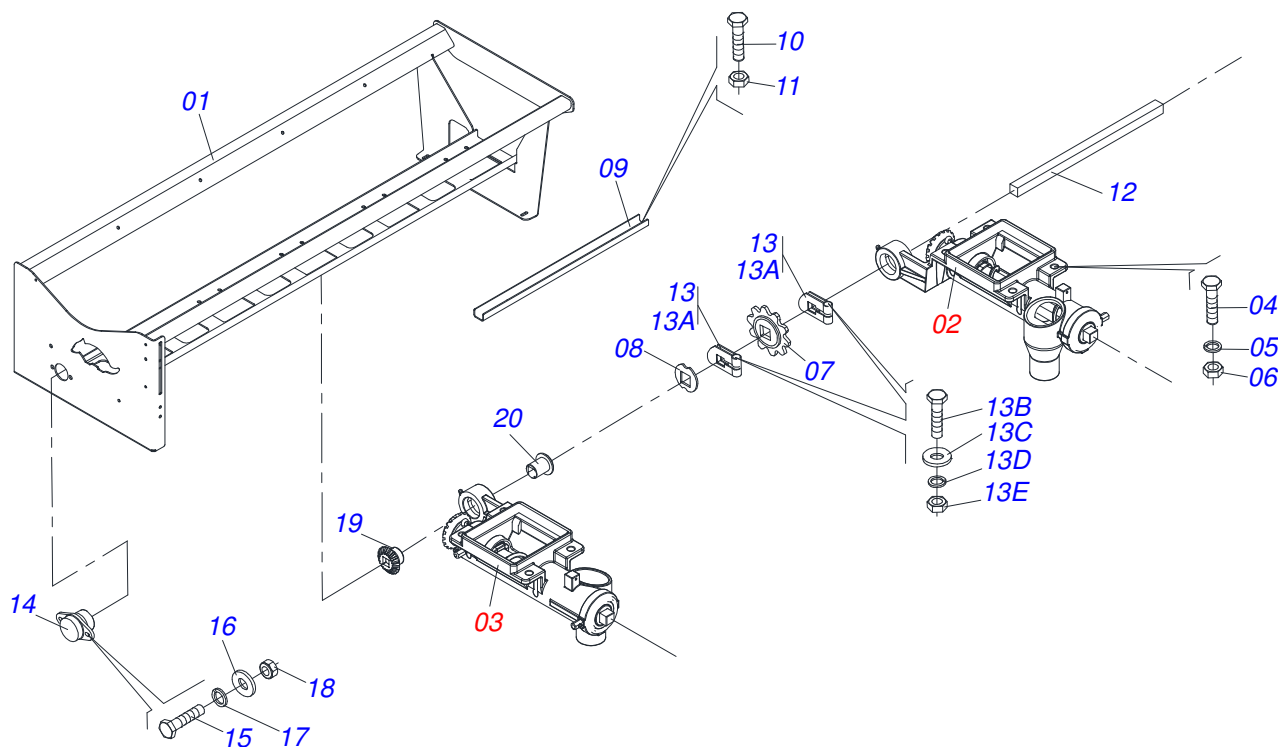 


Item	Code	Description	QT
001	0521066295	FERTILIZER BEAM RIGHT SUPPORT	01
002	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	03
003	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	02
004	0501010942	3/8" X 1-1/4" BOLT	20
005	0503011443	SPRING WASHER	20
006	0503010026	3/8" NUT	20
007	0511061759	22Z P12,70 FQ 3/4" GEAR	01
008	0521014167	CONE LOCK	02
009	0571019828	LOCK AXLE	01
010	0503010365	NUT	02
011	0503013816	5/16" LOCKNUT	02
012	0571019827	SQUARE SHAFT	01
013	0501053788	Q3/4" FASTENER AXLE ASSY	02
013A	0521010691	AXLE FASTENER	04
013B	0503010373	1/4" X 2" BOLT	04
013C	0501010694	FLAT WASHER	04
013D	0503010143	SPRING WASHER	04
013E	0503010144	1/4" NUT	04
014	0501056271	GEAR BOX CLOSE BEARINGONE	01
015	0503011953	5/16" X 1" BOLT	02
016	0521011039	FLAT WASHER	02
017	0503011444	SPRING WASHER	02
018	0503010337	5/16" NUT	02

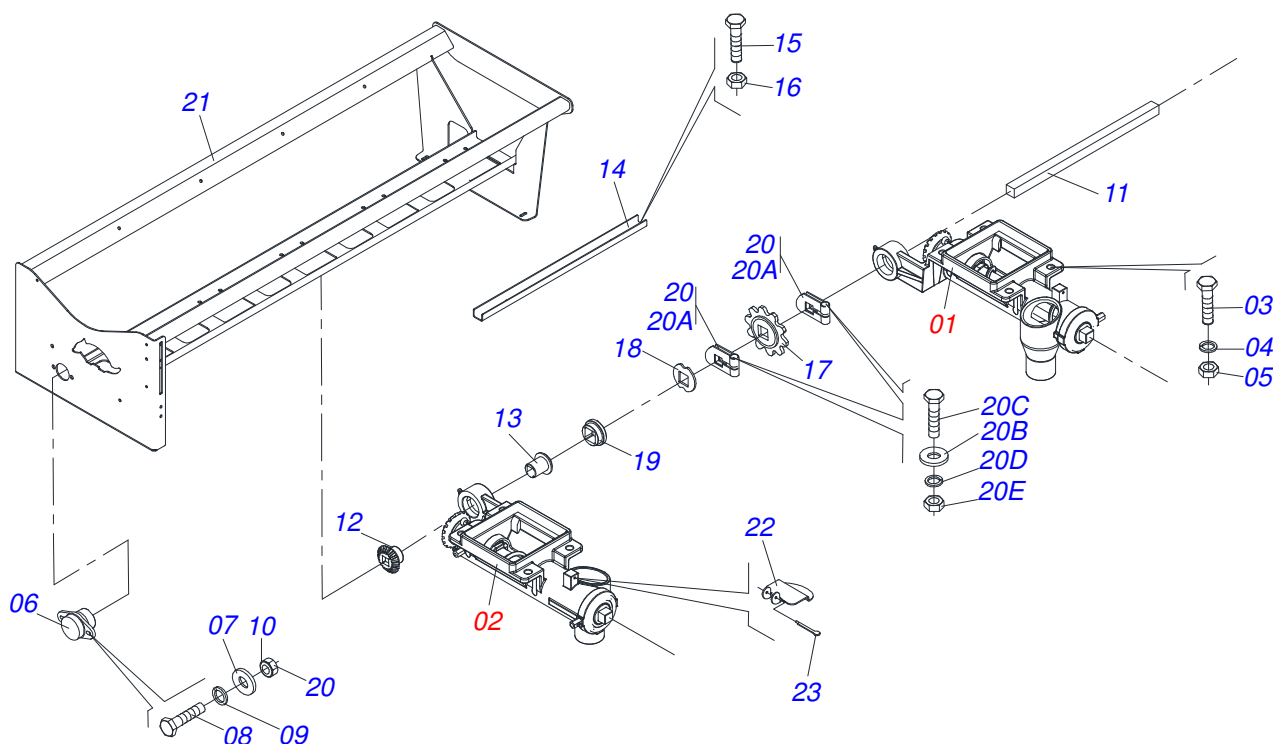 


Item	Code	Description	QT
001	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	02
002	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	02
003	0501010942	3/8" X 1-1/4" BOLT	16
004	0503011443	SPRING WASHER	16
005	0503010026	3/8" NUT	16
006	0501056271	GEAR BOX CLOSE BEARINGONE	01
007	0521011039	FLAT WASHER	02
008	0503011953	5/16" X 1" BOLT	02
009	0503011444	SPRING WASHER	02
010	0503010337	5/16" NUT	02
011	0581014216	SQUARE SHAFT	01
012	1902010685	18Z CONICAL GEAR	04
013	0503030275	AGRICULTURAL BEARING	04
014	0571019828	LOCK AXLE	01
015	0503010365	NUT	02
016	0503013816	5/16" LOCKNUT	02
017	0511061759	22Z P12,70 FQ 3/4" GEAR	01
018	0521014167	CONE LOCK	03
019	0503030303	SUPPORT WASHER	01
020	0511059491	FASTENER	01
020A	0521010691	AXLE FASTENER	01
020B	0501010694	FLAT WASHER	01
020C	0503010373	1/4" X 2" BOLT	01
020D	0503011441	SPRING WASHER	01
020E	0503010144	1/4" NUT	01
021	0521067079	FERTILIZER BEAN RIGHT SUPPORT	01
022	0571010590	FERTILIZER SIDE COVER	05
023	0503010362	1/8" X 1.1/4" COTTERPIN	05

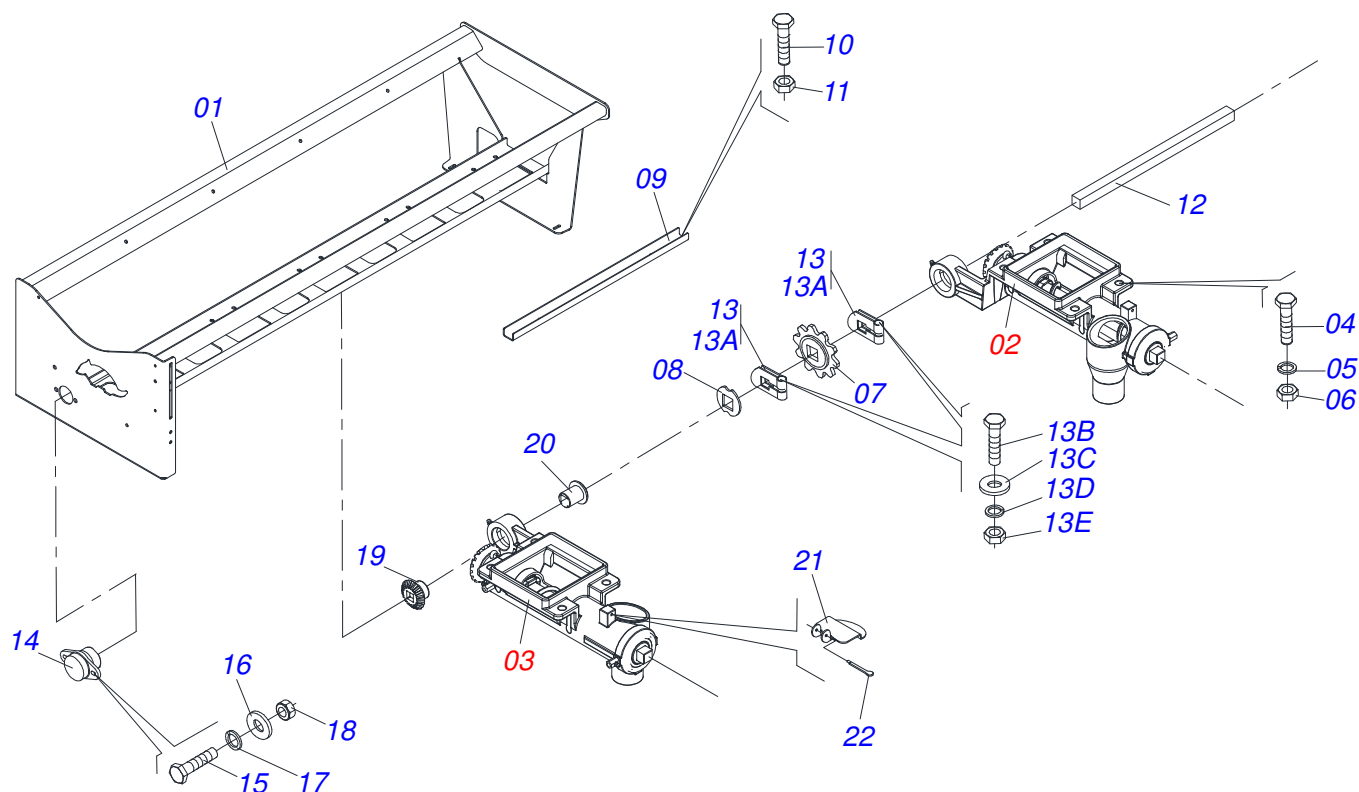 


Item	Code	Description	QT
001	0521066472	FERTILIZER BEAN RIGHT SUPPORT	01
002	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	03
003	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	01
004	0501010942	3/8" X 1-1/4" BOLT	16
005	0503011443	SPRING WASHER	16
006	0503010026	3/8" NUT	16
007	0511061759	22Z P12,70 FQ 3/4" GEAR	01
008	0521014167	CONE LOCK	02
009	0571019828	LOCK AXLE	01
010	0503010365	NUT	02
011	0503013816	5/16" LOCKNUT	02
012	0581010469	SQUARE SHAFT	01
013	0501053788	Q3/4" FASTENER AXLE ASSY	02
013A	0521010691	AXLE FASTENER	04
013B	0503010373	1/4" X 2" BOLT	04
013C	0501010694	FLAT WASHER	04
013D	0503010143	SPRING WASHER	04
013E	0503010144	1/4" NUT	04
014	0501056271	GEAR BOX CLOSE BEARINGONE	01
015	0503011953	5/16" X 1" BOLT	02
016	0521011039	FLAT WASHER	02
017	0503011444	SPRING WASHER	02
018	0503010337	5/16" NUT	02
019	1902010685	18Z CONICAL GEAR	04
020	0503030275	AGRICULTURAL BEARING	04

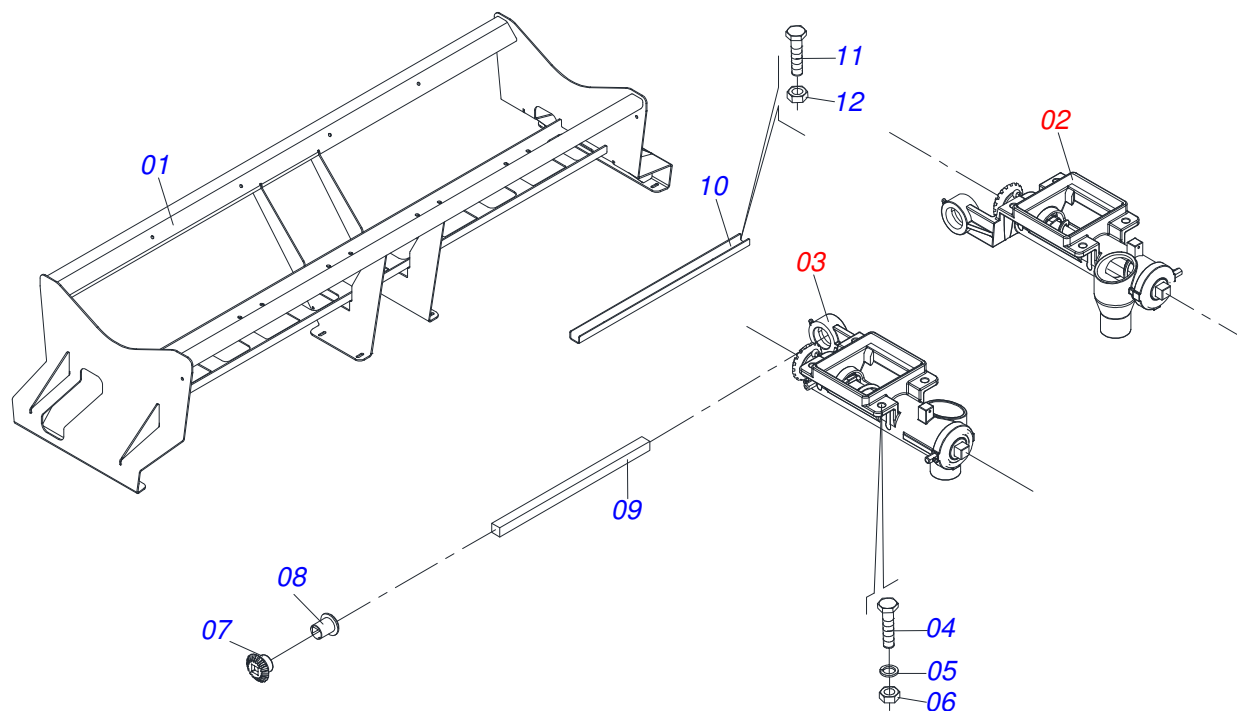 


Item	Code	Description	QT
001	0521067454	CENTER FERTILIZER SILO SUPPORT	01
002	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	03
003	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	03
004	0501010942	3/8" X 1-1/4" BOLT	24
005	0503011443	SPRING WASHER	24
006	0503010026	3/8" NUT	24
007	1902010685	18Z CONICAL GEAR	06
008	0503030275	AGRICULTURAL BEARING	06
009	0581013338	SQUARE SHAFT	02
010	0571019828	LOCK AXLE	02
011	0503010365	NUT	04
012	0503013816	5/16" LOCKNUT	04

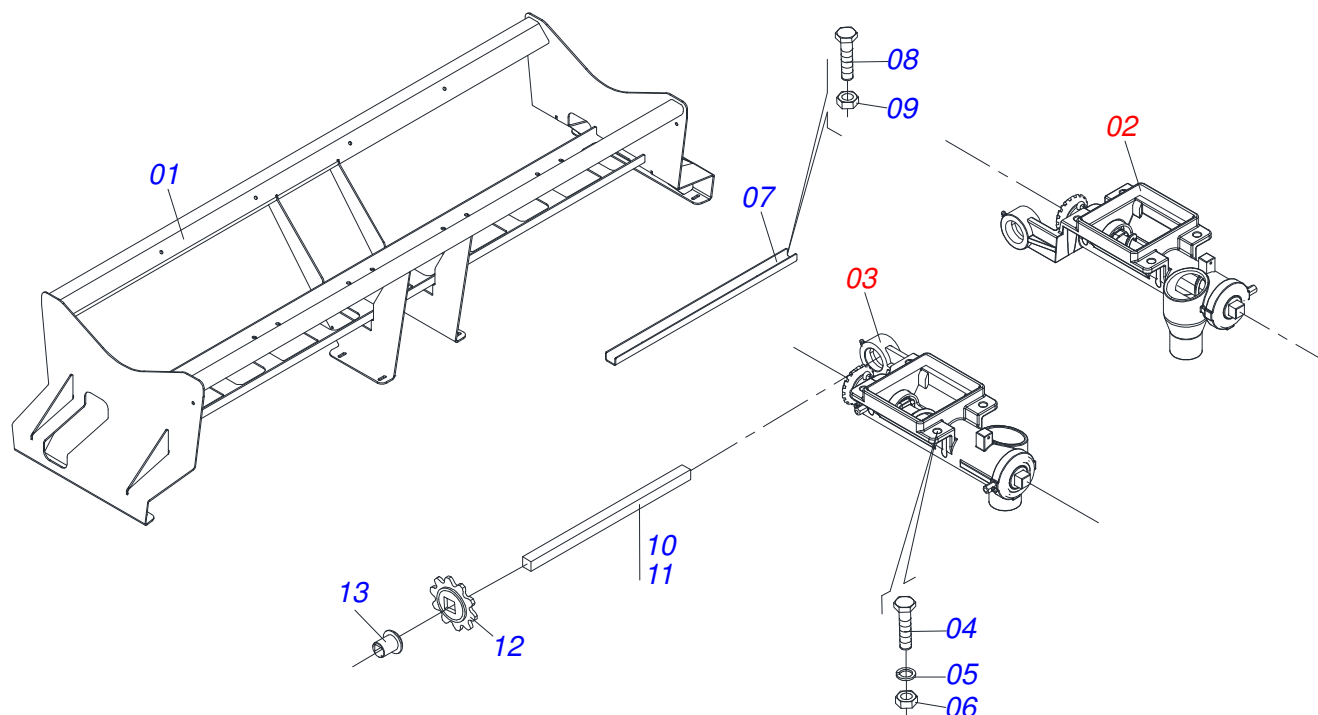 


Item	Code	Description	QT
001	0521066296	SEED SILO CENTRAL SUPPORT	01
002	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	02
003	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	03
004	0501010942	3/8" X 1-1/4" BOLT	20
005	0503011443	SPRING WASHER	20
006	0503010026	3/8" NUT	20
007	0571019828	LOCK AXLE	02
008	0503010365	NUT	04
009	0503013816	5/16" LOCKNUT	04
010	0571019826	SQUARE SHAFT	01
011	0571019825	SQUARE SHAFT	01
012	1902010685	18Z CONICAL GEAR	01
013	0503030275	AGRICULTURAL BEARING	01

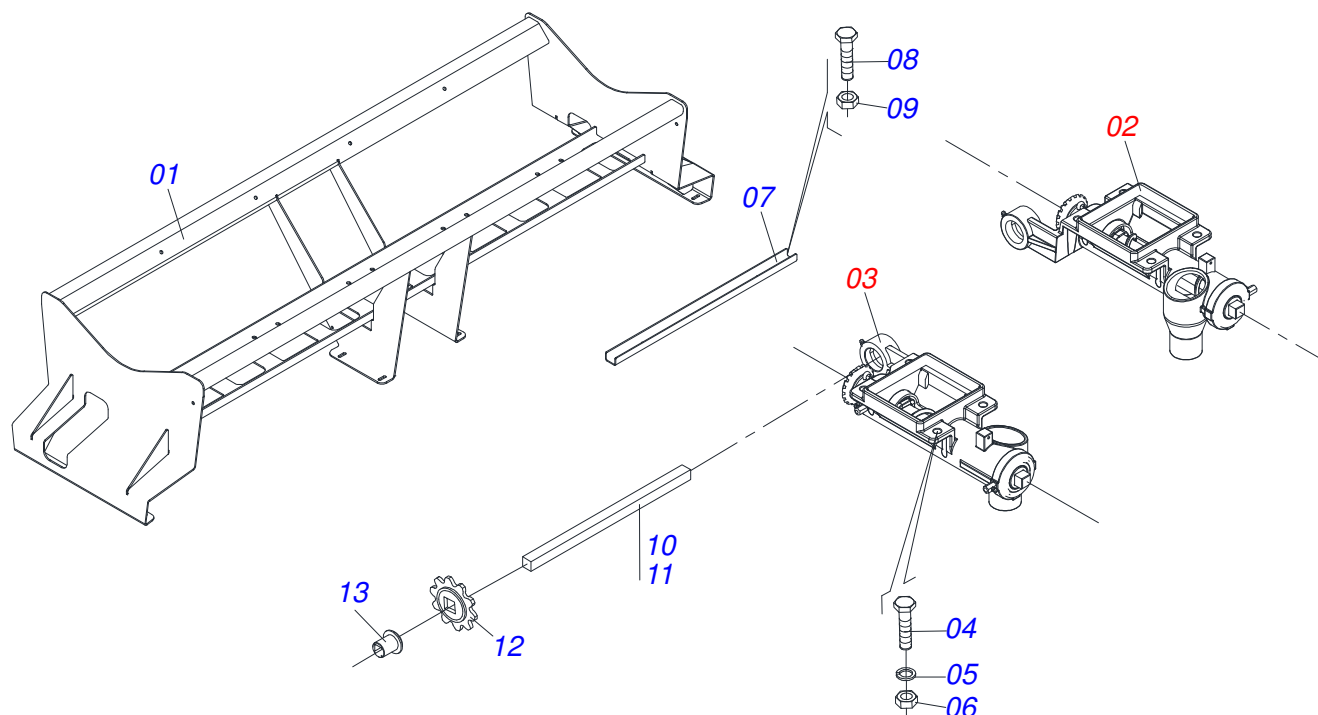 


Item	Code	Description	QT
001	0521066296	SEED SILO CENTRAL SUPPORT	01
002	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	02
003	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	03
004	0501010942	3/8" X 1-1/4" BOLT	20
005	0503011443	SPRING WASHER	20
006	0503010026	3/8" NUT	20
007	0571019828	LOCK AXLE	02
008	0503010365	NUT	04
009	0503013816	5/16" LOCKNUT	04
010	0581010470	SQUARE SHAFT	01
011	0581010471	SQUARE SHAFT	01
012	1902010685	18Z CONICAL GEAR	05
013	0503030275	AGRICULTURAL BEARING	05

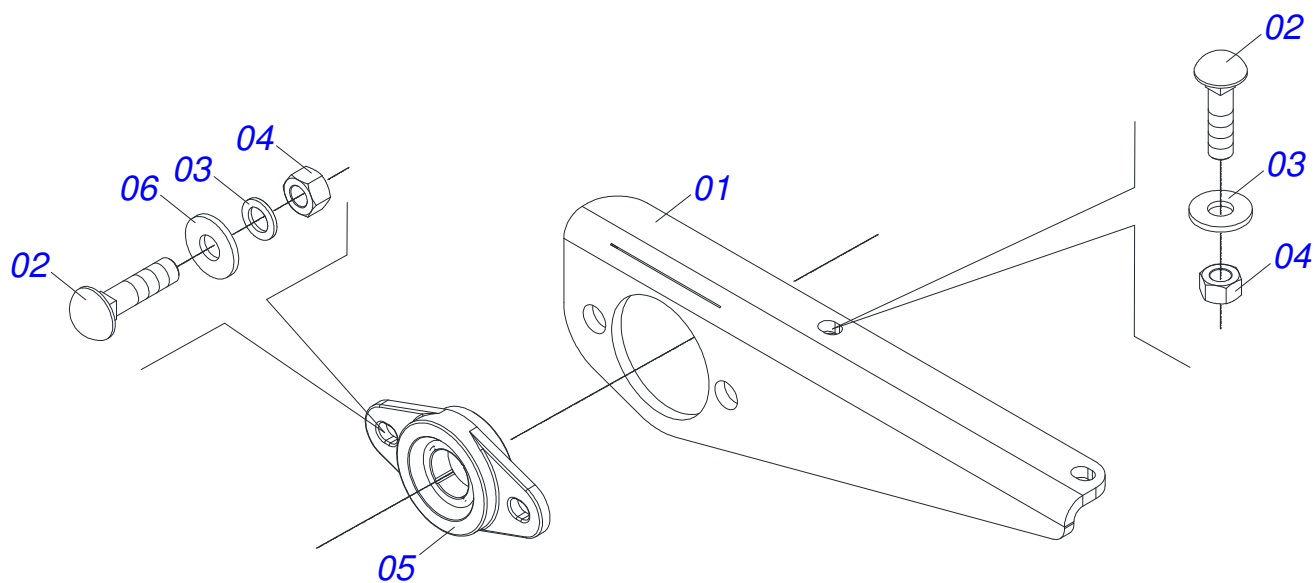 


Item	Code	Description	QT
001	0581013322	BEARING RIGHT SUPPORT	01
002	0503011953	5/16" X 1" BOLT	04
003	0501010694	FLAT WASHER	04
004	0503013816	5/16" LOCKNUT	04
005	0501056444	BEARING WITH BALL BEARING	01
006	0501010984	FLAT WASHER	02

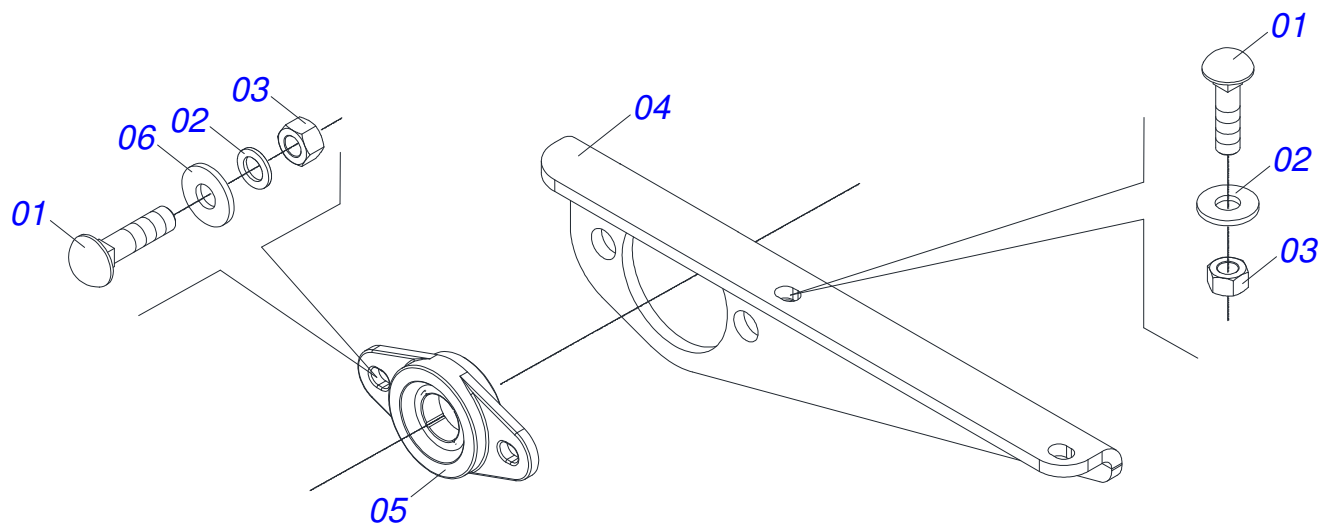 


Item	Code	Description	QT
001	0503011953	5/16" X 1" BOLT	04
002	0501010694	FLAT WASHER	04
003	0503013816	5/16" LOCKNUT	04
004	0581013324	BEARING LEFT SUPPORT	01
005	0501056444	BEARING WITH BALL BEARING	01
006	0501010984	FLAT WASHER	02

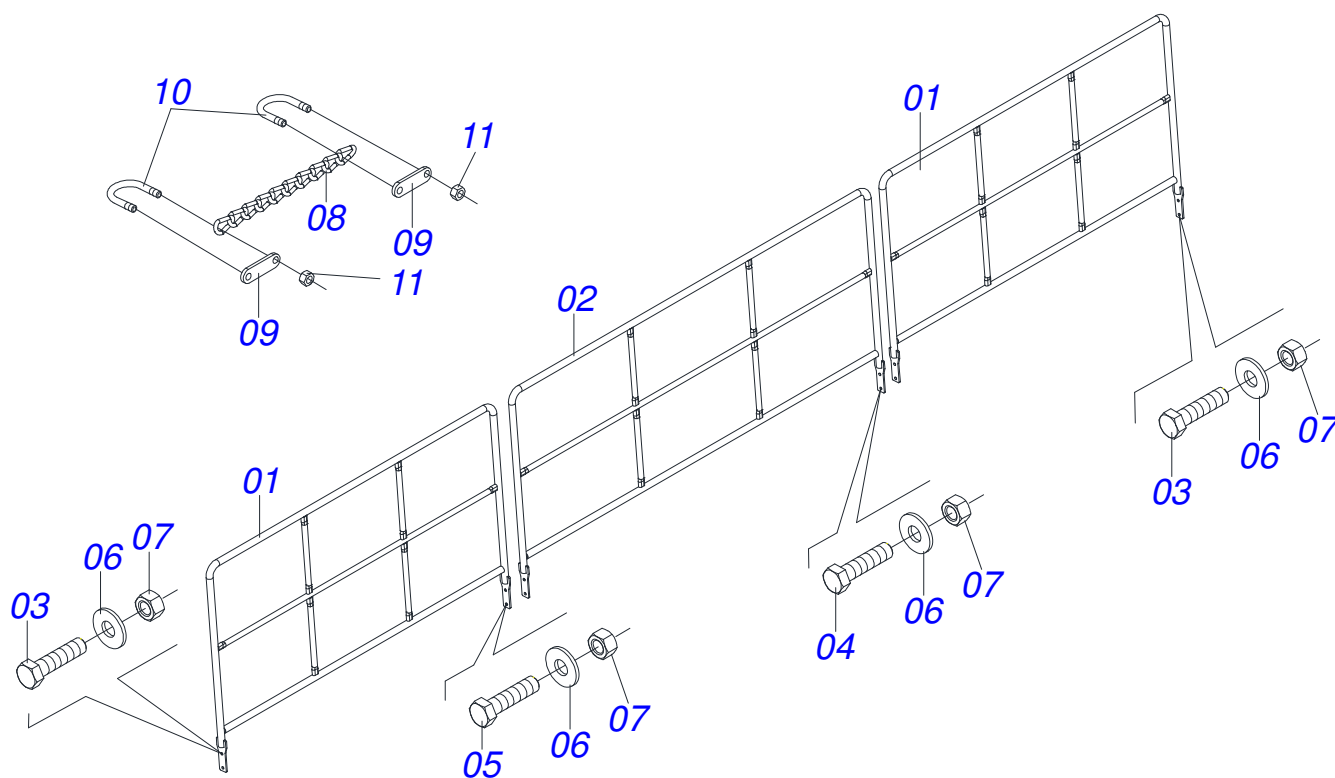 


Item	Code	Description	QT
001	0521067449	FRONT SIDE CORRIMAO	02
002	0521064018	CENTRAL HANDRAIL	01
003	0503010395	1/2" X 1-1/4" BOLT	04
004	0503011082	C1/2" X 1.3/4" BOLT	04
005	0503010740	1/2" X 2" BOLT	04
006	0503010019	1/2" SPRING WASHER	12
007	0503010060	1/2" NUT	12
008	0503034094	22 TWISTED CHAIN	04
009	0571017991	FIXADOR CORRENTE CORRIMÃO	08
010	0551019884	45 X 50 X 3/8 FASTENER	08
011	0503013357	3/8" SELF-ADJUSTING NUT	16

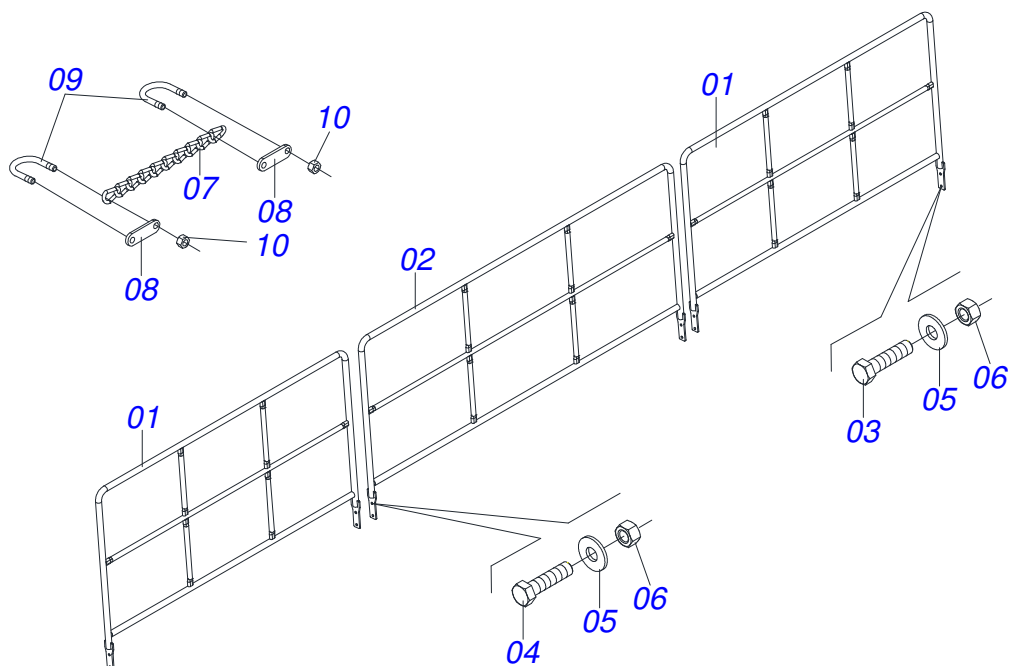 


Item	Code	Description	QT
001	0521063871	SIDE HANDRAIL	02
002	0521063875	CENTRAL HANDRAIL	01
003	0503010395	1/2" X 1-1/4" BOLT	04
004	0503011082	C1/2" X 1.3/4" BOLT	04
005	0503010019	1/2" SPRING WASHER	08
006	0503010060	1/2" NUT	08
007	0503034094	22 TWISTED CHAIN	04
008	0571017991	FIXADOR CORRENTE CORRIMÃO	08
009	0551019884	45 X 50 X 3/8 FASTENER	08
010	0503013357	3/8" SELF-ADJUSTING NUT	16

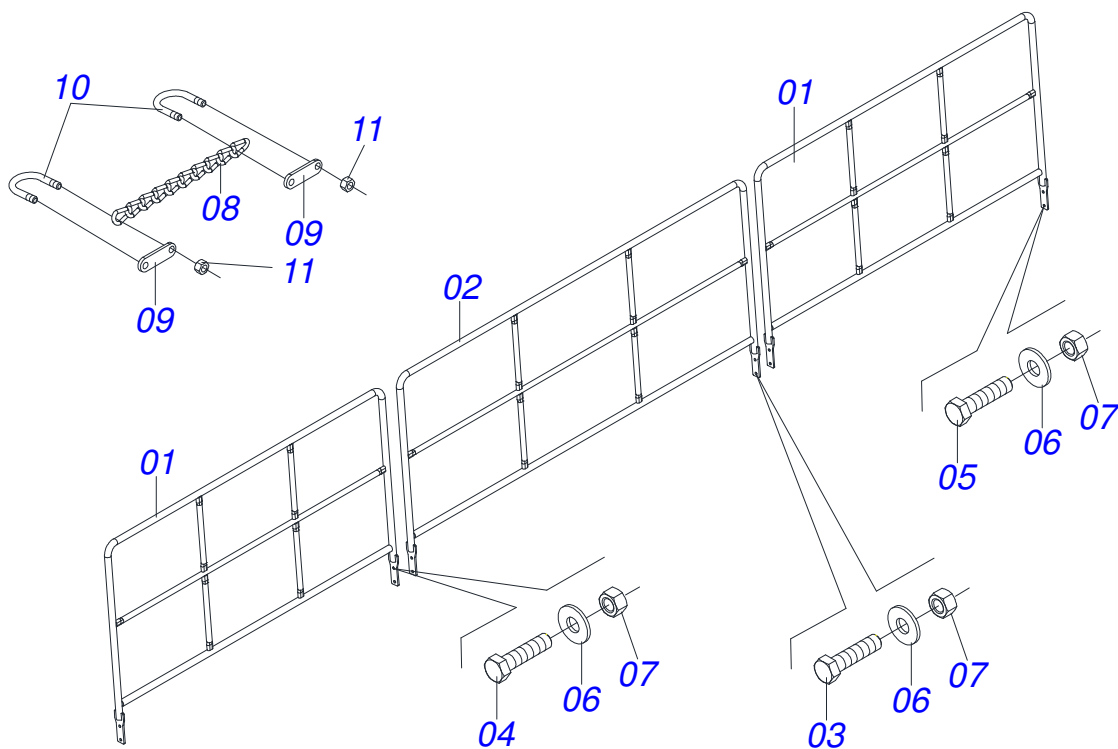 

Item	Code	Description	QT
001	0521067082	FRONT SIDE CORRIMAO	02
002	0521064018	CENTRAL HANDRAIL	01
003	0503010395	1/2" X 1-1/4" BOLT	04
004	0503011082	C1/2" X 1.3/4" BOLT	04
005	0503010740	1/2" X 2" BOLT	04
006	0503010019	1/2" SPRING WASHER	12
007	0503010060	1/2" NUT	12
008	0503034094	22 TWISTED CHAIN	04
009	0571017991	FIXADOR CORRENTE CORRIMÃO	08
010	0551019884	45 X 50 X 3/8 FASTENER	08
011	0503013357	3/8" SELF-ADJUSTING NUT	16

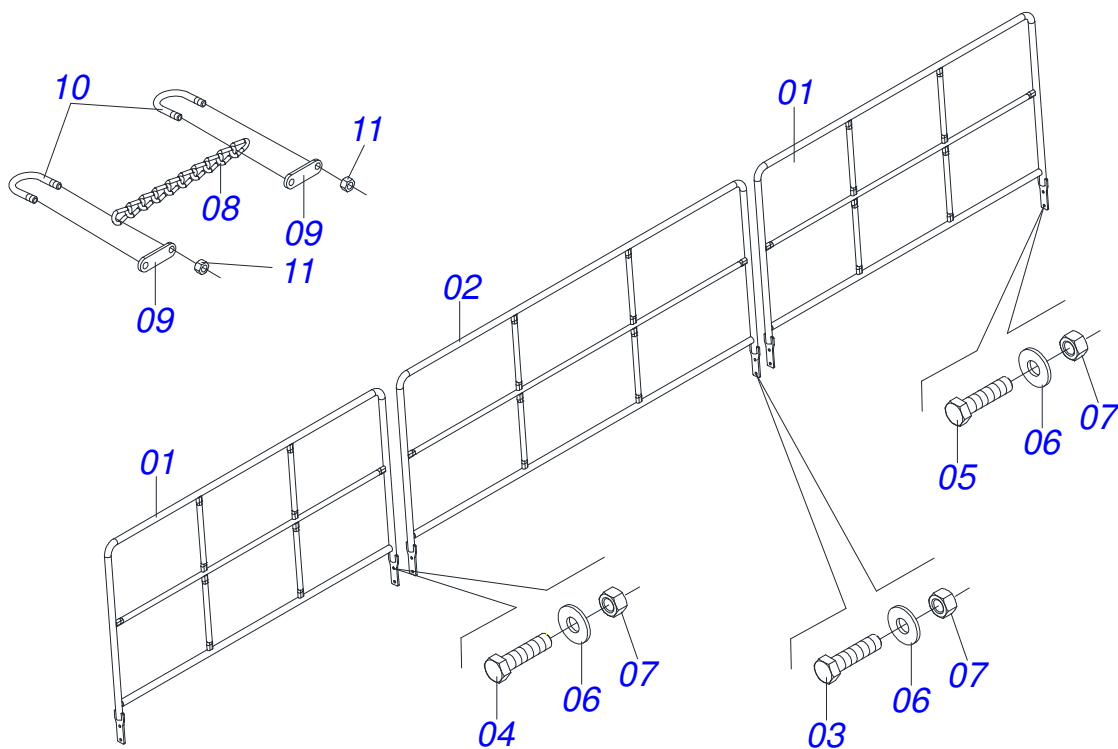 


Item	Code	Description	QT
001	0521066485	FRONT SIDE CORRIMAO	02
002	0521063875	CENTRAL HANDRAIL	01
003	0503010395	1/2" X 1-1/4" BOLT	04
004	0503011082	C1/2" X 1.3/4" BOLT	04
005	0503010740	1/2" X 2" BOLT	04
006	0503010019	1/2" SPRING WASHER	12
007	0503010060	1/2" NUT	12
008	0503034094	22 TWISTED CHAIN	04
009	0571017991	FIXADOR CORRENTE CORRIMÃO	08
010	0551019884	45 X 50 X 3/8 FASTENER	08
011	0503013357	3/8" SELF-ADJUSTING NUT	16

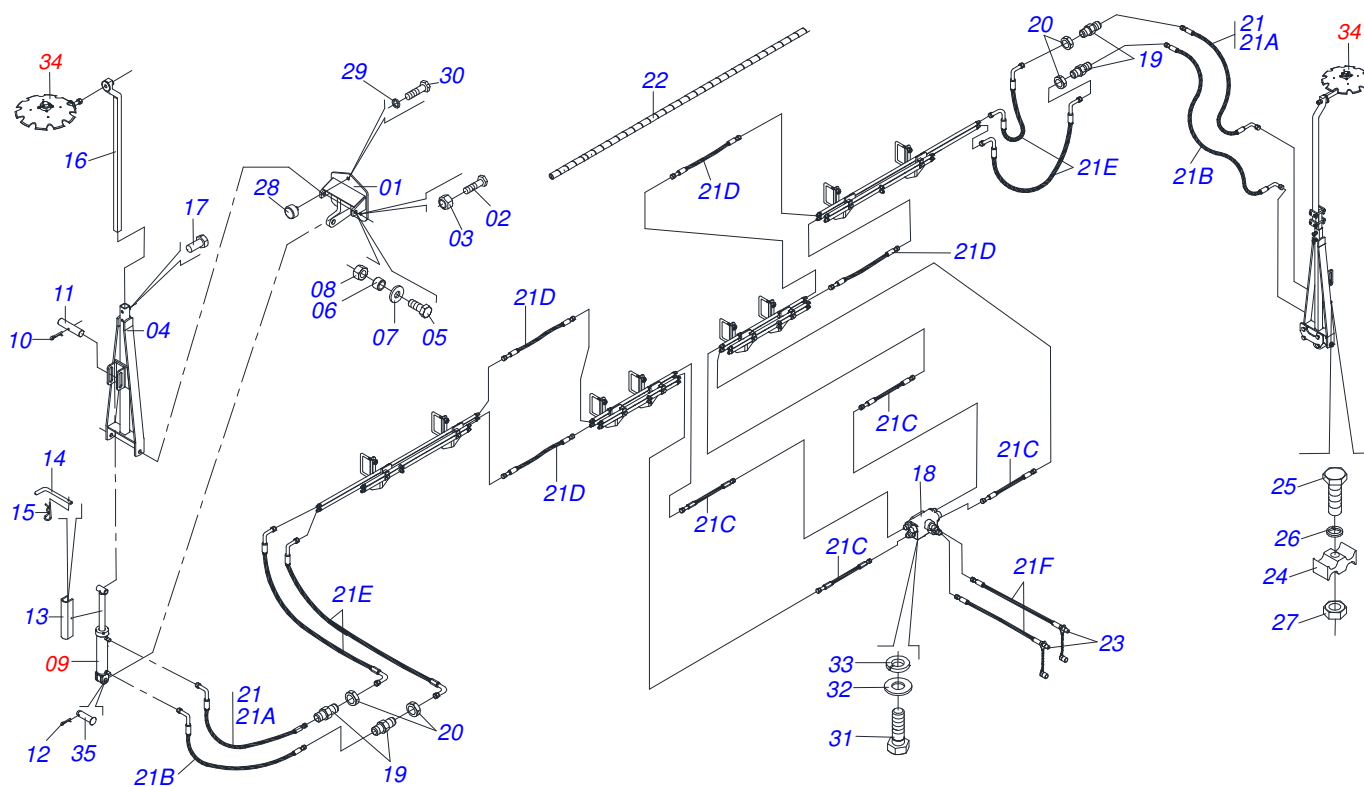 


Item	Code	Description	QT
001	0511065449	ROW MARKER ARM SUPPORT	02
002	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	08
003	0503011255	3/4" LOCK NUT	08
004	0511061811	ROW MARKER ARM	02
005	0503011067	5/8" X 2-1/2" BOLT	04
006	0521010479	SLEEVE ARTICULATION	04
007	0501012140	FLAT WASHER	04
008	0503012795	5/8" HEX SELF ADJUSTING NUT	04
009	0511058449	HYDRAULIC CYLINDER	02
010	0503010571	1/4" X 1.1/2 COTTERPIN	02
011	0511015779	1" X 4.2" AXLE	02
012	0503010523	1/4" X 2" COTTERPIN	02
013	0511017592	11.8" X 1.6" TRANSPORT LOCK	02
014	0501068994	0.3" X 3.1" LOCK PIN	02
015	0503030168	HAIR PIN	02
016	0501066949	1235 TURNBUCKLE	02
017	0511016156	5/8" X 1.1/2" BOLT	04
018	0501054649	SEQUENTIAL VALVE ASSY	01
019	0541012165	3/4" NIPPLE	04
020	0511018387	3/4" X 0.3 ADJUSTMENT VALVE NUT	04
021	0521050694	HOSE ASSY	01
021A	0501080635	3/8" X 19" TR-TR HOSE	02
021B	0501080413	3/8" X 27" TR-TC HOSE ASSY	02
021C	0501080150	TR-TC HOSE ASSY	04
021D	0501080460	3/8" X 23" TR-TR HOSE	04
021E	0501080675	3/8" X 165" TC-TM HOSE ASSY	04
021F	0501082121	3/8 X 4450 TR-TM HOSE ASSY	02
022	0581010090	SPRING PROTECTION PLASTIC HOSE 3/4 X	02
023	0501053834	FAST COUPLER AGRICULTURAL WITH COVER - 1/2	02
024	0502012702	BODY SUPPORT CLAMP	02
025	0503010677	7/16" X 2-3/4" BOLT	02
026	0503010180	7/16" SPRING WASHER	02
027	0503010244	7/16" NUT	02

Item	Code	Description	QT
028	0503011070	BEATER	02
029	0503010019	1/2" SPRING WASHER	02
030	0503011082	C1/2" X 1.3/4" BOLT	02
031	0503010256	3/8" X 3/4" BOLT	02
032	0501010984	FLAT WASHER	02
033	0503010025	3/8 SPRING WASHER	02
034	0501050633	DISC ASSY FOR ROW MARKER	02
035	0521010575	C0.9" X 3.3" COUPLING SHAFT	02

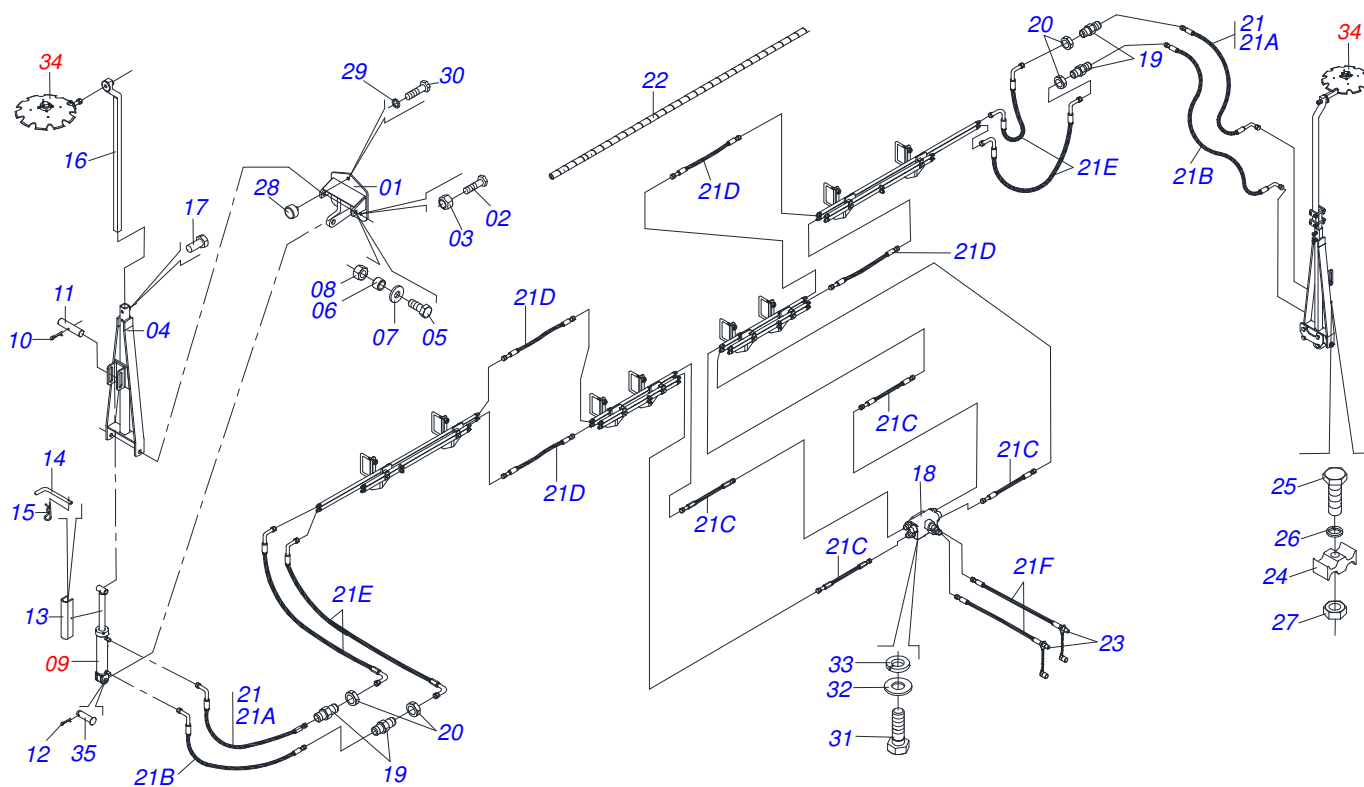 


Item	Code	Description	QT
001	0511065449	ROW MARKER ARM SUPPORT	02
002	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	08
003	0503011255	3/4" LOCK NUT	08
004	0511061811	ROW MARKER ARM	02
005	0503011067	5/8" X 2-1/2" BOLT	04
006	0521010479	SLEEVE ARTICULATION	04
007	0501012140	FLAT WASHER	04
008	0503012795	5/8" HEX SELF ADJUSTING NUT	04
009	0511058449	HYDRAULIC CYLINDER	02
010	0503010571	1/4" X 1.1/2 COTTERPIN	02
011	0511015779	1" X 4.2" AXLE	02
012	0503010523	1/4" X 2" COTTERPIN	02
013	0511017592	11.8" X 1.6" TRANSPORT LOCK	02
014	0501068994	0.3" X 3.1" LOCK PIN	02
015	0503030168	HAIR PIN	02
016	0501066949	1235 TURNBUCKLE	02
017	0511016156	5/8" X 1.1/2" BOLT	04
018	0501054649	SEQUENTIAL VALVE ASSY	01
019	0541012165	3/4" NIPPLE	04
020	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	04
021	0521050766	SET HOSE KIT	01
021A	0501080635	3/8" X 19" TR-TR HOSE	02
021B	0501080413	3/8" X 27" TR-TC HOSE ASSY	02
021C	0501080150	TR-TC HOSE ASSY	04
021D	0501080460	3/8" X 23" TR-TR HOSE	04
021E	0501080301	HOSE 3/8 X 1300 TC-TC USAP	04
021F	0501082121	3/8 X 4450 TR-TM HOSE ASSY	02
022	0581010090	SPRING PROTECTION PLASTIC HOSE 3/4 X	02
023	0501053834	FAST COUPLER AGRICULTURAL WITH COVER - 1/2	02
024	0502012702	BODY SUPPORT CLAMP	02
025	0503010677	7/16" X 2-3/4" BOLT	02
026	0503010180	7/16" SPRING WASHER	02
027	0503010244	7/16" NUT	02


Item	Code	Description	QT
028	0503011070	BEATER	02
029	0503010019	1/2" SPRING WASHER	02
030	0503011082	C1/2" X 1.3/4" BOLT	02
031	0503010256	3/8" X 3/4" BOLT	02
032	0501010984	FLAT WASHER	02
033	0503010025	3/8 SPRING WASHER	02
034	0501050633	DISC ASSY FOR ROW MARKER	02
035	0521010575	C0.9" X 3.3" COUPLING SHAFT	02

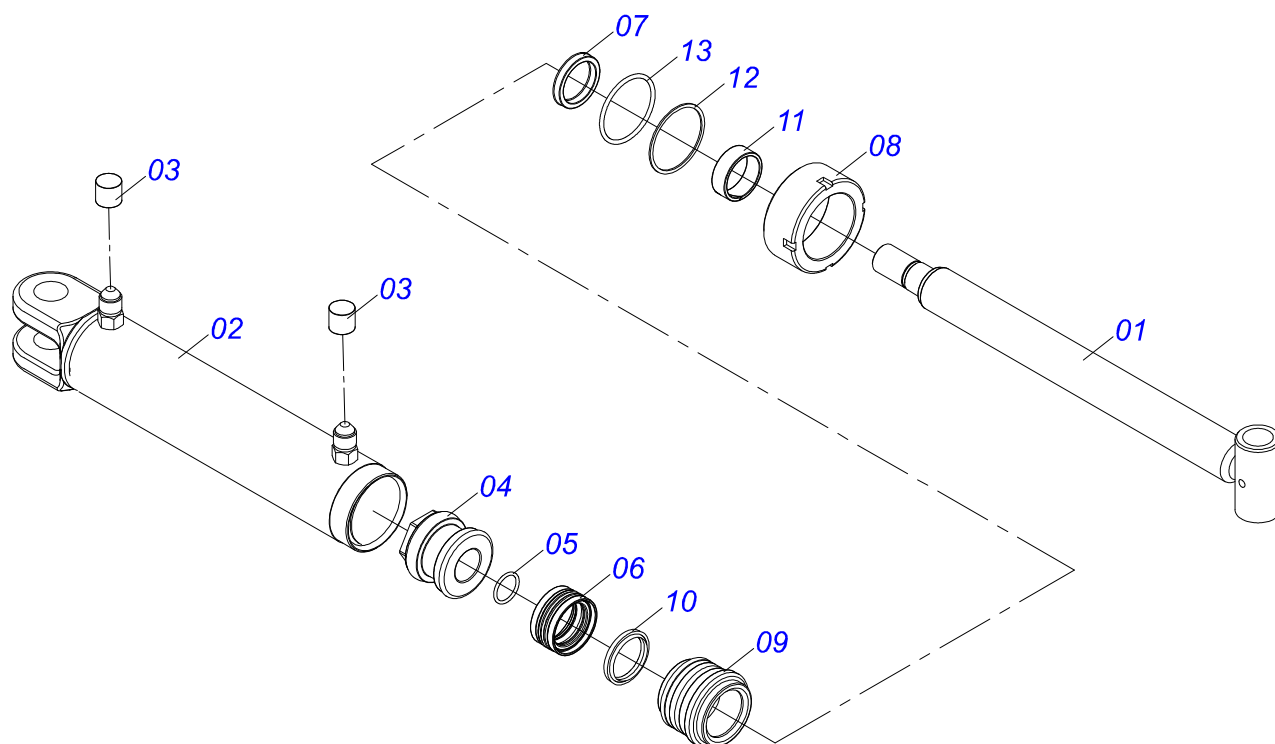 


Item	Code	Description	QT
01	0521066635	TURNBUCKLE	01
02	0511062810	2.5" X 15"CYLINDER CASE	01
03	0503030385	PLUG	02
04	0502012837	PISTON	01
05	0503011109	2-119 N 3006-9B O'RING	01
06	0503018005	RING	01
07	0503018003	GASKET	01
08	0502010471	MOBILE COVER	01
09	0581010668	RING SUPPORT	01
10	0503010163	D-1500 SCRAPER RING	01
11	0503018004	RING	01
12	0503018163	BACK-UP RING	02
13	0503018162	O'RING	02

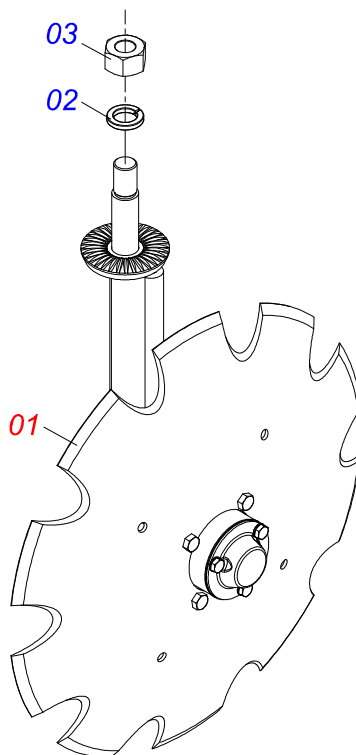


Item	Code	Description	QT
01	0511053904	ROW MARKER DISC	01
02	0503010023	SPRING WASHER	01
03	0503010014	3/4" NUT	01

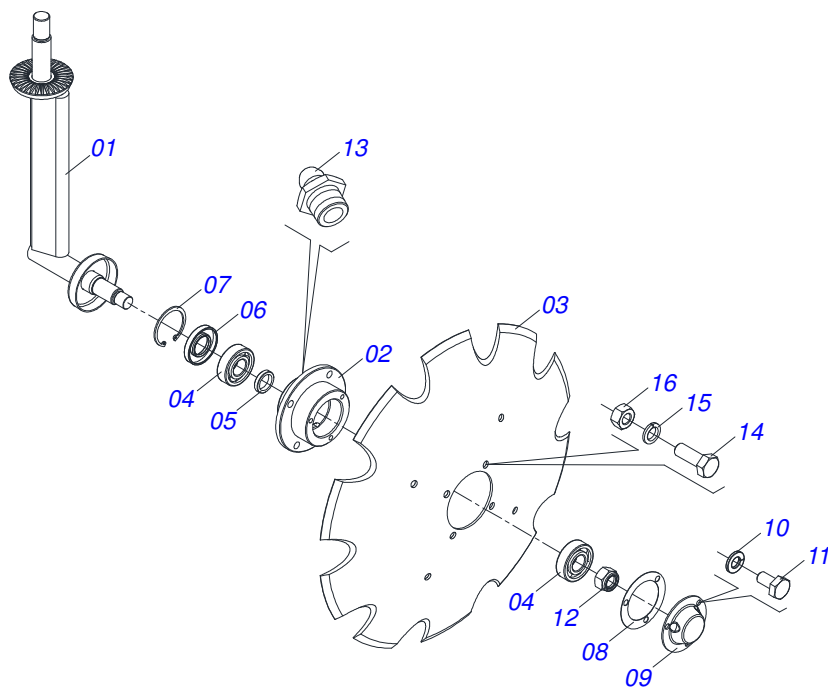 


Item	Code	Description	QT
01	0501066800	ROW MARKER DISC AXLE ASSY	01
02	0502011907	DEPTH CONTROL WHEEL HUB	01
03	0602023110	DR16X3 NOTCHED DISC BLADE	01
04	0503010269	6204 BALL BEARING	02
05	0501013636	SPACING SLEEVE	01
06	0503010689	SEAL 00763-BR	01
07	0503011105	SEAL RING	01
08	0503030757	2.9" X 2" X 0.02" JOINT	01
09	0521019178	COVER DEPTH	01
10	0503011441	SPRING WASHER	03
11	0503014729	1/4" UNF X 1/2" BOLT	03
12	0503010878	5/8" SELF ALIGNING NUT	01
13	0503010691	1/4" GREASE FITTING	01
14	0503010358	5/16" X 5/8" BOLT	04
15	0503011444	SPRING WASHER	04
16	0503010337	5/16" NUT	04

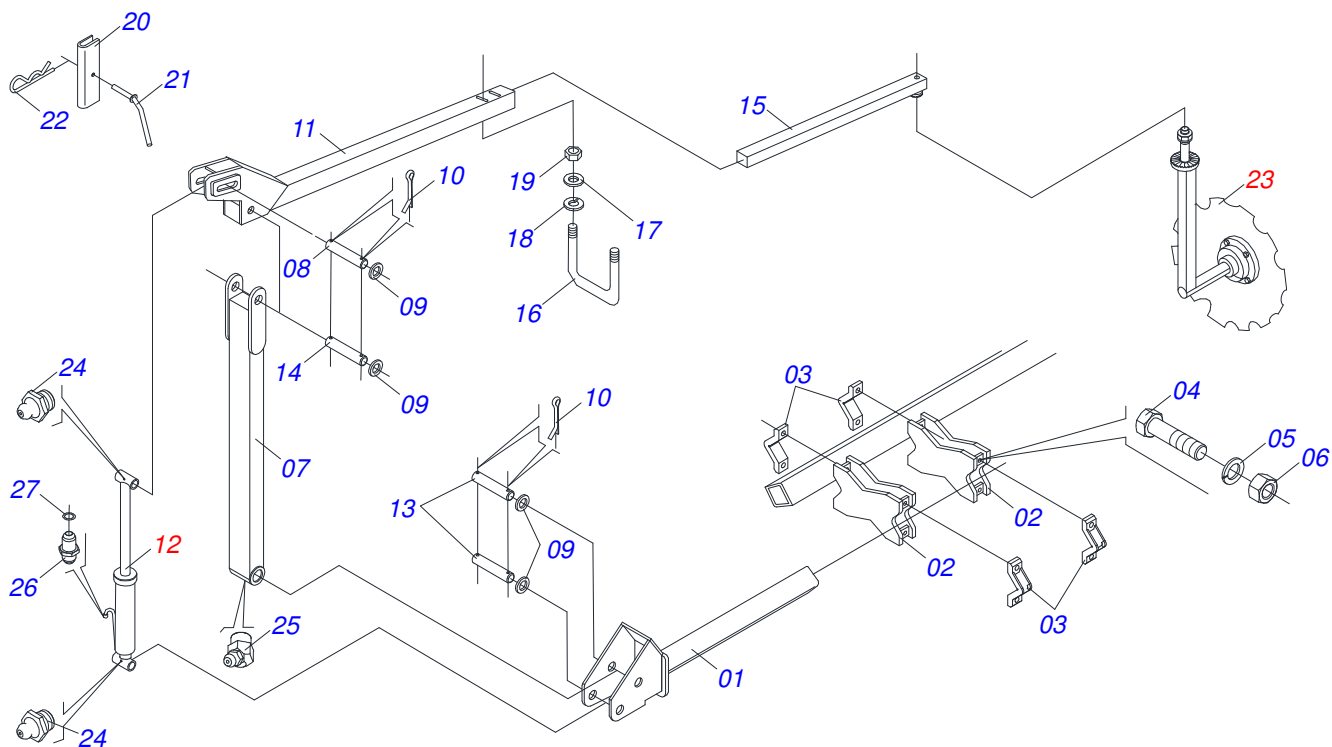 


Item	Code	Description	QT
01	0511061022	ROW MARKER SUPPORT	02
02	0511066119	MARKER SUPP FIXER FASTENER	04
03	0502010175	HITCH CLAMP	08
04	0501010216	3/4" X 4-1/2" BOLT	16
05	0503010023	SPRING WASHER	16
06	0503010014	3/4" NUT	16
07	0511060013	ROW MARKER ARM	02
08	0521013347	1.1/4" X 8.4" AXLE	02
09	0501019435	FLAT WASHER	16
10	0503010523	1/4" X 2" COTTERPIN	16
11	0511060014	ROW MARKER ARM	02
12	0511058431	HYDRAULIC CYLINDER	02
13	0521011142	1.1/4" X 7.5" AXLE	04
14	0521011141	1.1/4" X 6.5" AXLE	02
15	0511060010	1400 TURNBUCKLE	02
16	0521012324	1/2" X 3.2"X 2.54" FASTENER	04
17	0511017302	FLAT WASHER	08
18	0503010019	1/2" SPRING WASHER	08
19	0503010060	1/2" NUT	08
20	0511015573	2.07" X 1.6" TRANSPORT LOCK	02
21	0501068994	0.3" X 3.1"LOCK PIN	02
22	0503030168	HAIR PIN	02
23	0501050633	DISC ASSY FOR ROW MARKER	02
24	0503010002	1800 GREASE FITTING	04
25	0503010004	1890 GREASE FITTING	02
26	0501010617	3/4" NIPPLE	04
27	0503010190	2-114 N 3006-9B O'RING	04

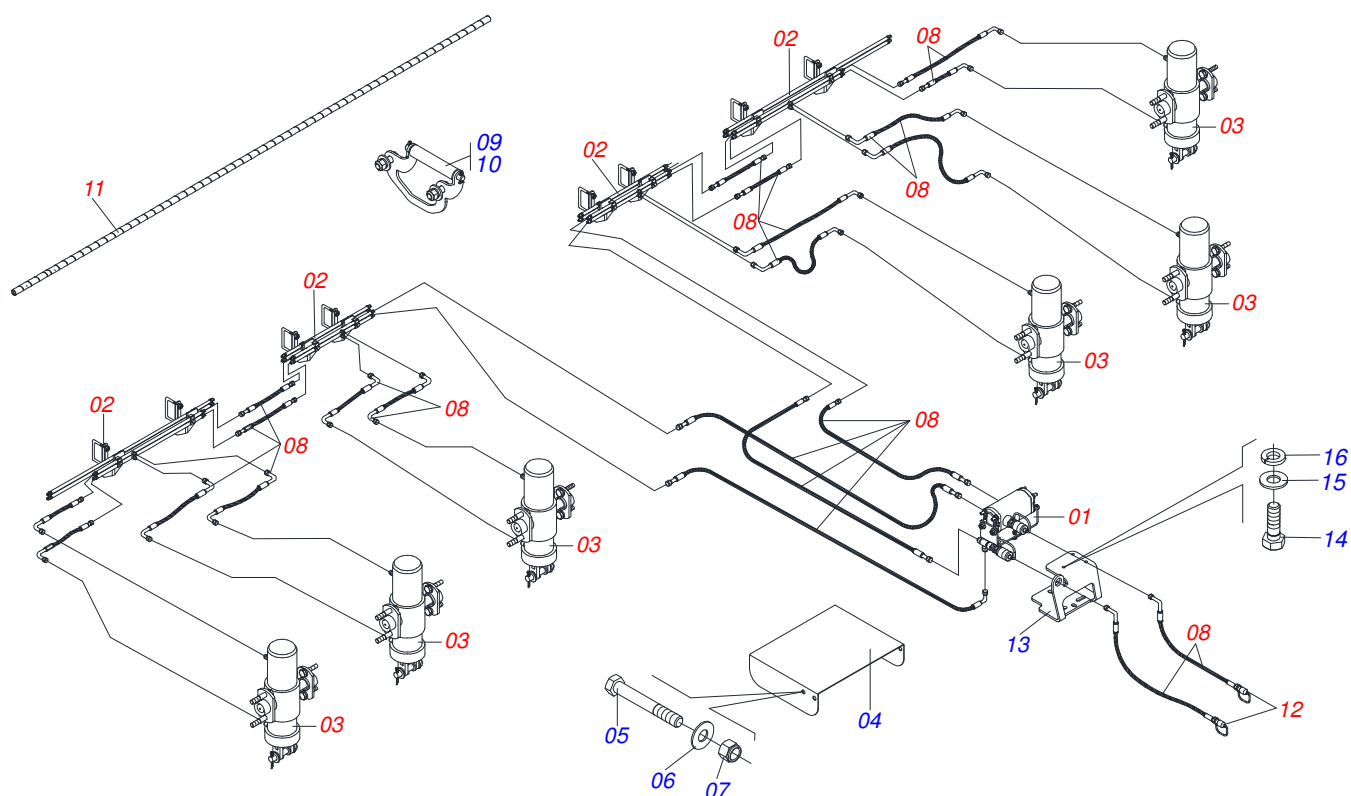 


Item	Code	Description	QT
001	0521050584	SET SAFETY VALVE	01
002	0521050231	OIL CONDUCTOR ASSY	01
003	0511053368	HYDRAULIC CYLINDER ASSEMBLY	01
004	0581010324	HOSE PROTECTOR	01
005	0503010358	5/16" X 5/8" BOLT	04
006	0503010179	SPRING WASHER	04
007	0503010337	5/16" NUT	04
008	0521050695	HOSE KIT SYSTEM HYDRAULIC	01
009	0521050570	RIGHT COVER PROTECTION	02
010	0521050572	RIGHT PROTECTION SUPPORT	02
011	0581010729	SPRING PROTECTION PLASTIC HOSE 3/4" X 1/2"	01
012	0501053834	FAST COUPLER AGRICULTURAL WITH COVER - 1/2"	02
013	0581013560	VALV. SUPPORT	01
014	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02
015	0501010984	FLAT WASHER	02
016	0503010025	3/8" SPRING WASHER	02

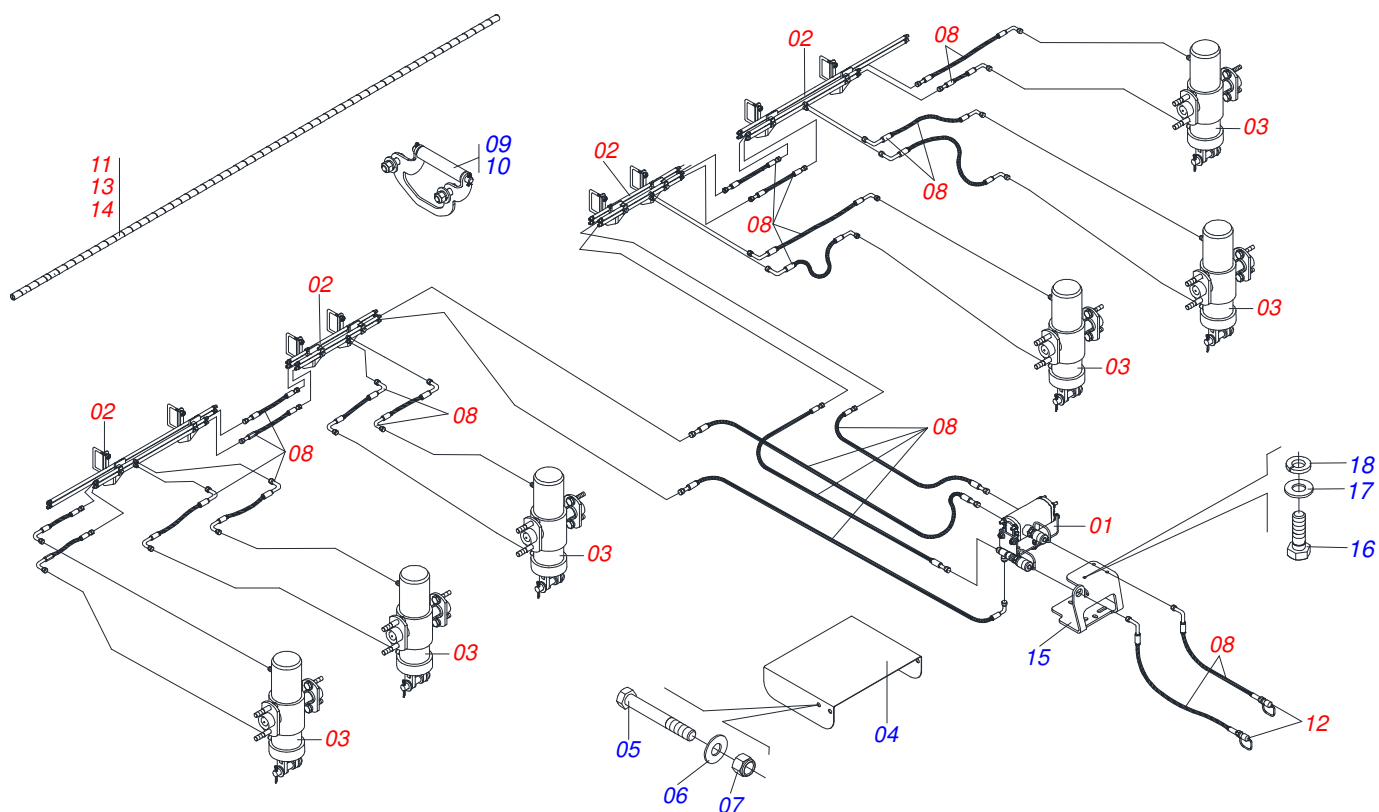 


Item	Code	Description	QT
001	0521050584	SET SAFETY VALVE	01
002	0511057843	OIL CONDUCTOR ASSY	01
003	0511053368	HYDRAULIC CYLINDER ASSEMBLY	01
004	0581010324	HOSE PROTECTOR	01
005	0503010358	5/16" X 5/8" BOLT	04
006	0503010179	SPRING WASHER	04
007	0503010337	5/16" NUT	04
008	0521050695	HOSE KIT SYSTEM HYDRAULIC	01
009	0521050570	RIGHT COVER PROTECTION	02
010	0521050572	RIGHT PROTECTION SUPPORT	02
011	0581010091	SPRING PROTECTION PLASTIC HOSE	01
012	0501053834	FAST COUPLER AGRICULTURAL WITH COVER - 1/2	02
013	0581010090	SPRING PROTECTION PLASTIC HOSE 3/4 X	02
014	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM	01
015	0581013560	VALV. SUPPORT	01
016	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02
017	0501010984	FLAT WASHER	02
018	0503010025	3/8 SPRING WASHER	02

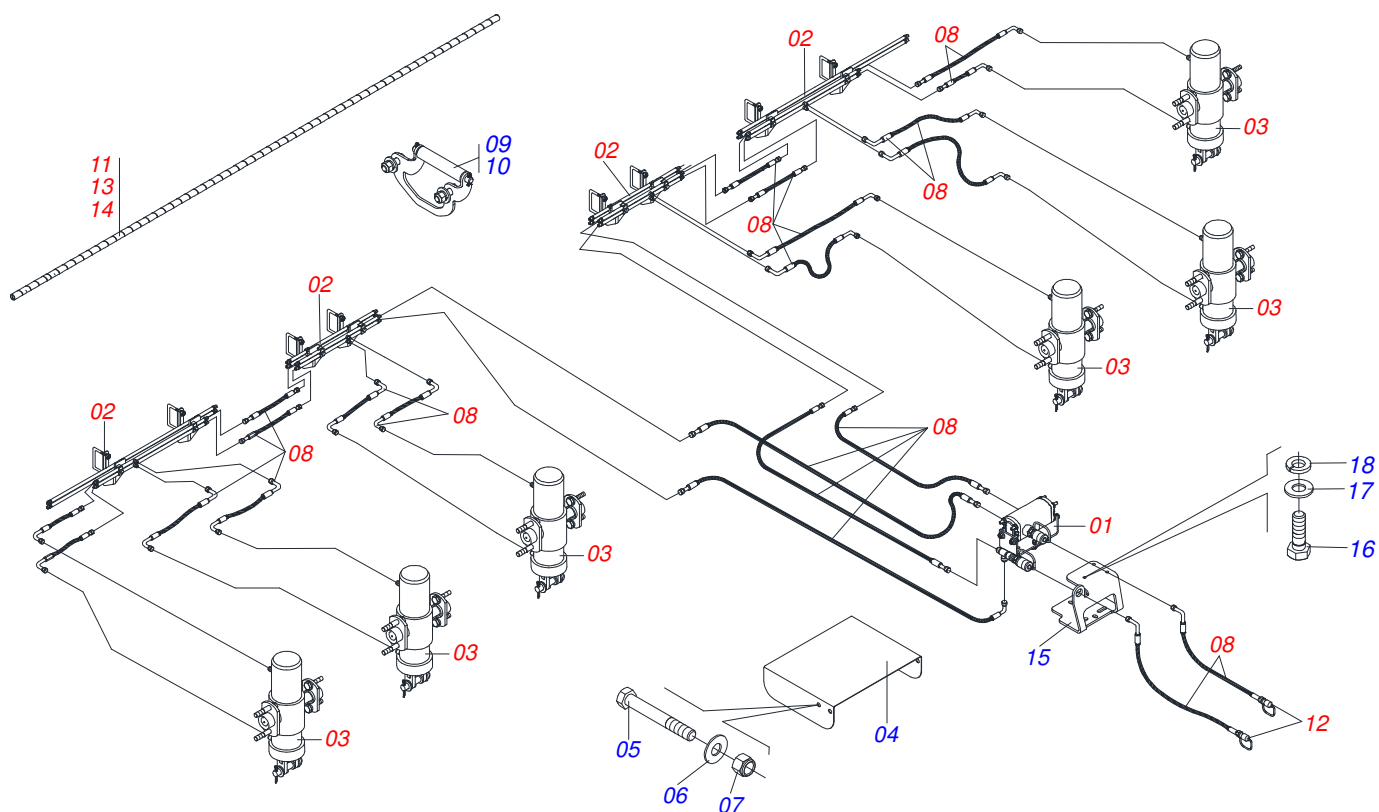 


Item	Code	Description	QT
001	0521050584	SET SAFETY VALVE	01
002	0511059567	OIL CONDUCTOR ASSY	01
003	0511053368	HYDRAULIC CYLINDER ASSEMBLY	01
004	0581010324	HOSE PROTECTOR	01
005	0503010358	5/16" X 5/8" BOLT	04
006	0503010179	SPRING WASHER	04
007	0503010337	5/16" NUT	04
008	0521050695	HOSE KIT SYSTEM HYDRAULIC	01
009	0521050570	RIGHT COVER PROTECTION	02
010	0521050572	RIGHT PROTECTION SUPPORT	02
011	0581010091	SPRING PROTECTION PLASTIC HOSE	01
012	0501053834	FAST COUPLER AGRICULTURAL WITH COVER - 1/2	02
013	0581010090	SPRING PROTECTION PLASTIC HOSE 3/4 X	02
014	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM	01
015	0581013560	VALV. SUPPORT	01
016	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02
017	0501010984	FLAT WASHER	02
018	0503010025	3/8 SPRING WASHER	02

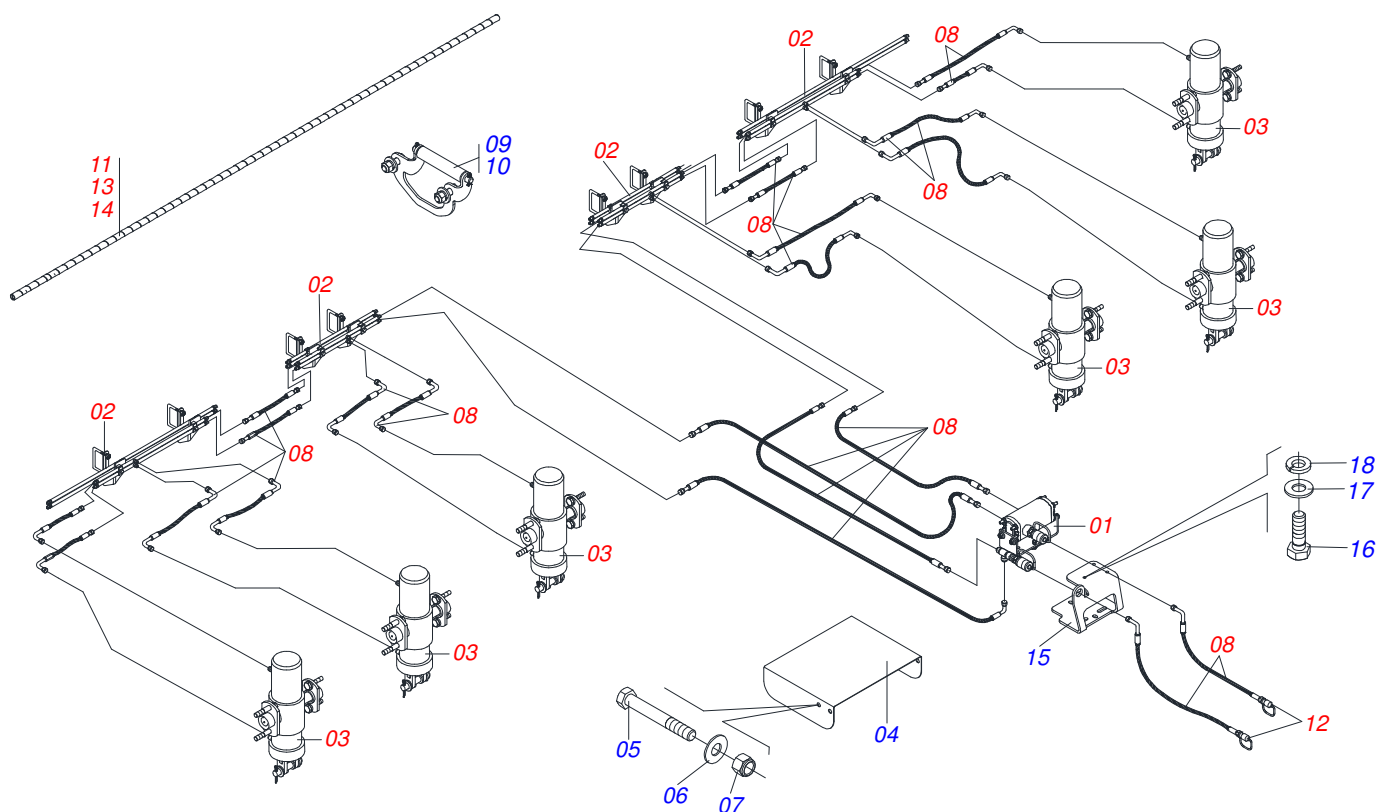 


Item	Code	Description	QT
001	0521050584	SET SAFETY VALVE	01
002	0511058127	OIL CONDUCTOR ASSY	01
003	0511053368	HYDRAULIC CYLINDER ASSEMBLY	01
004	0581010324	HOSE PROTECTOR	01
005	0503010358	5/16" X 5/8" BOLT	04
006	0503010179	SPRING WASHER	04
007	0503010337	5/16" NUT	04
008	0521050695	HOSE KIT SYSTEM HYDRAULIC	01
009	0521050570	RIGHT COVER PROTECTION	02
010	0521050572	RIGHT PROTECTION SUPPORT	02
011	0581010091	SPRING PROTECTION PLASTIC HOSE	01
012	0501053834	FAST COUPLER AGRICULTURAL WITH COVER - 1/2	02
013	0581010090	SPRING PROTECTION PLASTIC HOSE 3/4 X	02
014	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM	01
015	0581013560	VALV. SUPPORT	01
016	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02
017	0501010984	FLAT WASHER	02
018	0503010025	3/8 SPRING WASHER	02

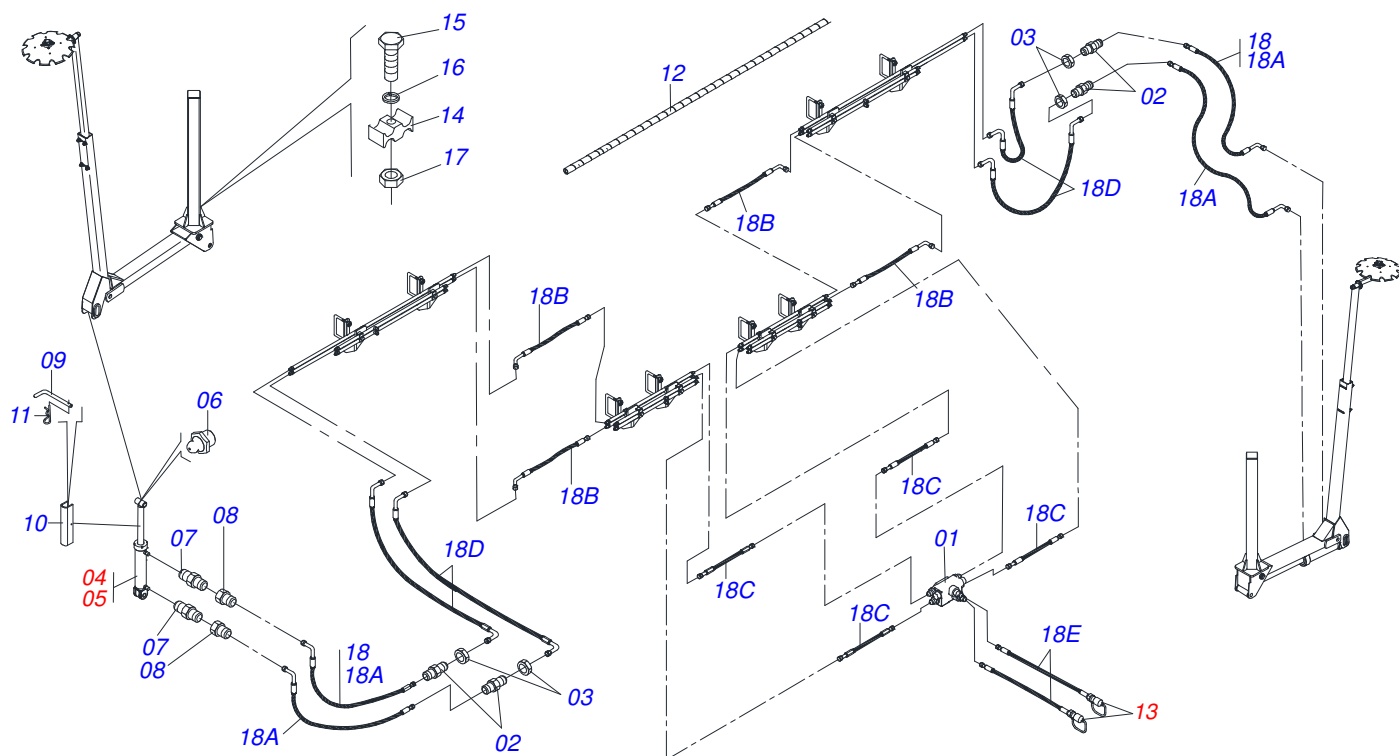 


Item	Code	Description	QT
001	0501054649	SEQUENTIAL VALVE ASSY	01
002	0541012165	3/4" NIPPLE	04
003	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	04
004	0511058431	HYDRAULIC CYLINDER	01
005	0511058431	HYDRAULIC CYLINDER	01
006	0503010002	1800 GREASE FITTING	04
007	0501010617	3/4" NIPPLE	04
008	0551016274	HYDRAULIC CYLINDER ADAPTER	02
009	0501068994	0.3" X 3.1" LOCK PIN	02
010	0511015573	2.07" X 1.6" TRANSPORT LOCK	02
011	0503030168	HAIR PIN	02
012	0581011173	SPRING PROTECTION PLASTIC HOSE	02
013	0501053834	FAST COUPLER AGRICULTURAL WITH COVER - 1/2	02
014	0502012702	BODY SUPPORT CLAMP	02
015	0503010677	7/16" X 2-3/4" BOLT	02
016	0503010180	7/16" SPRING WASHER	02
017	0503010244	7/16" NUT	02
018	0521050850	HOSE ASSY	01
018A	0501080714	3/8" X 63" TR-TC HOSE ASSY	04
018B	0501080150	TR-TC HOSE ASSY	04
018C	0501080460	3/8" X 23" TR-TR HOSE	04
018D	0501080675	3/8" X 165" TC-TM HOSE ASSY	04
018E	0501082121	3/8 X 4450 TR-TM HOSE ASSY	02

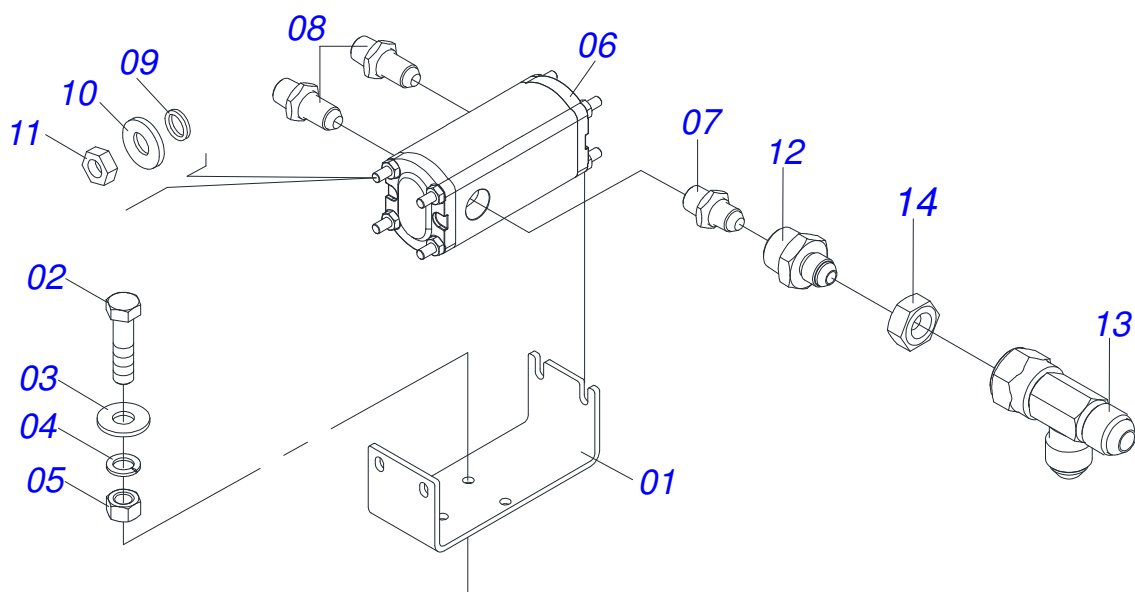 


Item	Code	Description	QT
001	0571010596	SUPPORT VALVE 50/50	01
002	0503010365	NUT	02
003	0501010694	FLAT WASHER	02
004	0503010179	SPRING WASHER	02
005	0503010337	5/16" NUT	02
006	0503013791	DOUBLE MOTOR	01
007	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE	01
008	0551012463	1/2" BSPT X 3/4" UNF X 51 NIPPLE	02
009	0503015075	M10 SPRING WASHER	04
010	0501010984	FLAT WASHER	04
011	0503011051	M10 X 0.6" NUT	04
012	0541012166	NIPPLE 3/4" UNF X 7/8"	01
013	0503062180	ADAPT T C / PORCA GIRAT LAT	01
014	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	01

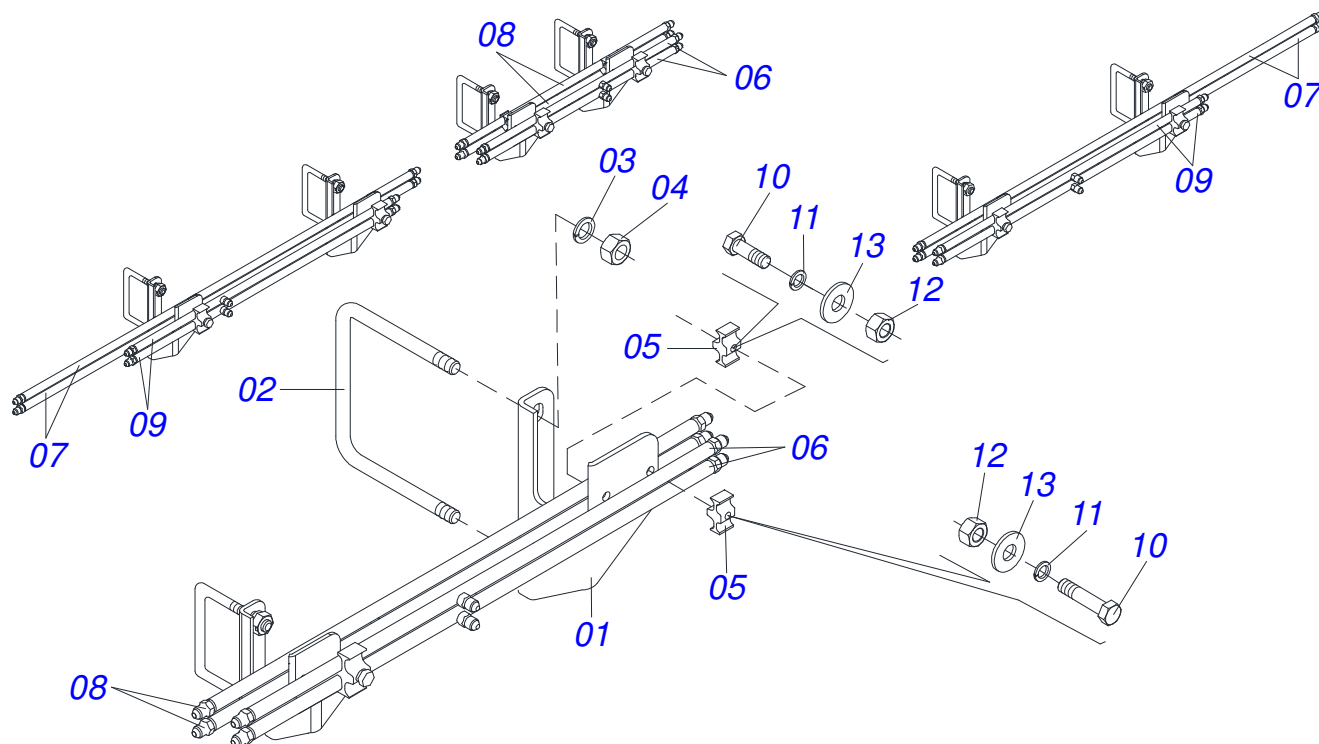 


Item	Code	Description	QT
001	0561017277	OIL CONDUCTOR FIXER PLATE	08
002	0521010718	5/8" U BOLT	08
003	0503010027	SPRING WASHER	16
004	0503010013	5/8" NUT	16
005	0502012702	BODY SUPPORT CLAMP	16
006	0521066305	OIL CONDUCTOR	04
007	0521066421	CONDUCTOR ACEITE	04
008	0521065258	MH 9/450 OIL CONDUCTOR	04
009	0521066306	OIL CONDUCTOR	04
010	0503011268	3/8" X 2-1/2" BOLT	12
011	0503010025	3/8 SPRING WASHER	12
012	0503010026	3/8" NUT	12
013	0501012140	FLAT WASHER	12

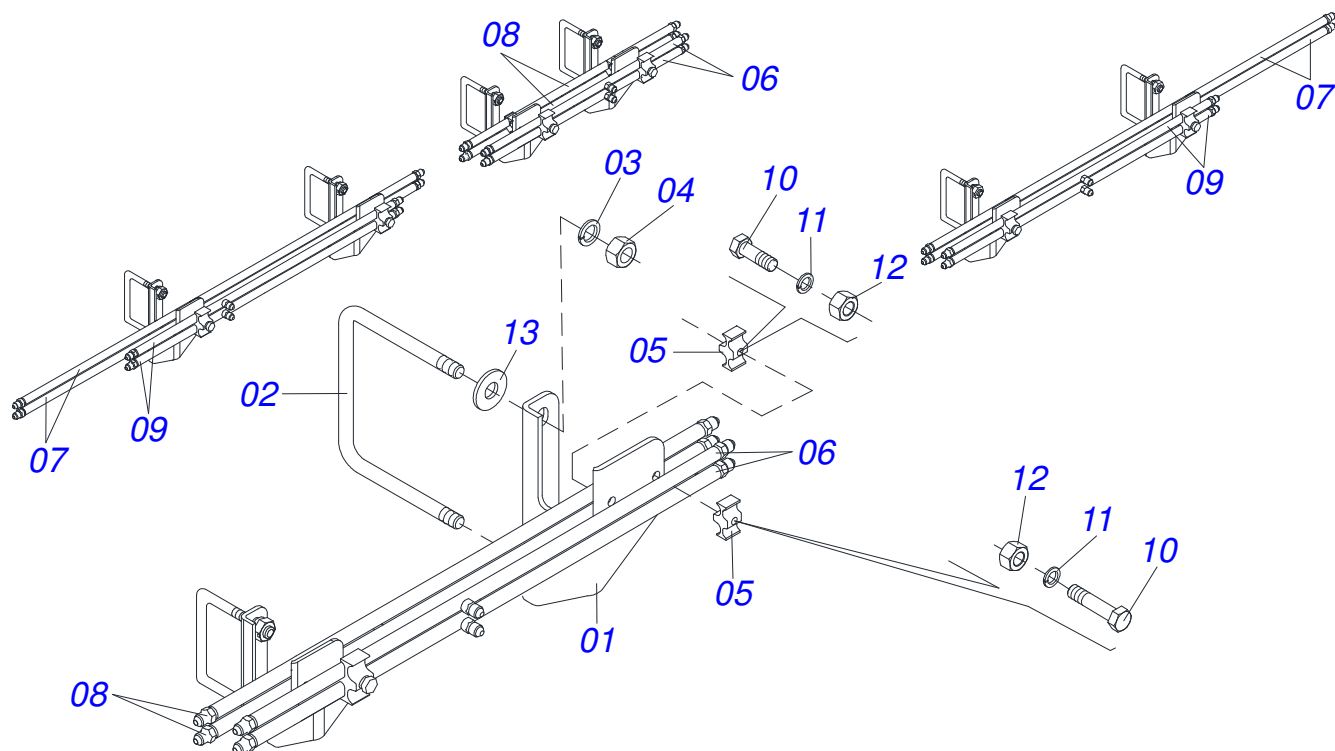 


Item	Code	Description	QT
001	0561017277	OIL CONDUCTOR FIXER PLATE	06
002	0521010718	5/8" U BOLT	06
003	0503010027	SPRING WASHER	12
004	0503010013	5/8" NUT	12
005	0502012702	BODY SUPPORT CLAMP	12
006	0521066483	OIL CONDUCTOR	04
007	0521066484	OIL CONDUCTOR	04
008	0521066306	OIL CONDUCTOR	04
009	0521066305	OIL CONDUCTOR	04
010	0503011268	3/8" X 2-1/2" BOLT	12
011	0503010025	3/8 SPRING WASHER	12
012	0503010026	3/8" NUT	12
013	0501012140	FLAT WASHER	12

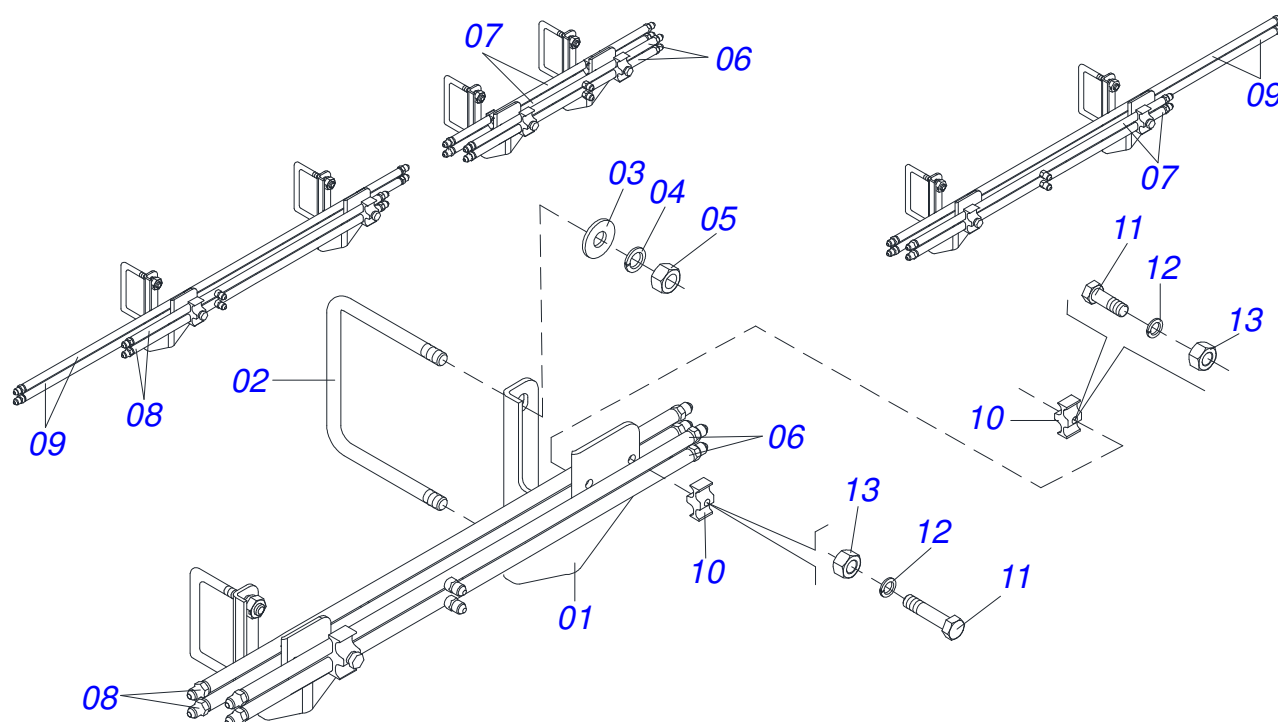 


Item	Code	Description	QT
001	0561017277	OIL CONDUCTOR FIXER PLATE	08
002	0521010718	5/8" U BOLT	08
003	0501012140	FLAT WASHER	16
004	0503010027	SPRING WASHER	16
005	0503010013	5/8" NUT	16
006	0521066484	OIL CONDUCTOR	04
007	0521067088	OIL CONDUCTOR	04
008	0521067452	OIL CONDUCTOR	04
009	0521067453	OIL CONDUCTOR	04
010	0502012702	BODY SUPPORT CLAMP	16
011	0503011268	3/8" X 2-1/2" BOLT	16
012	0503010025	3/8 SPRING WASHER	16
013	0503010026	3/8" NUT	16

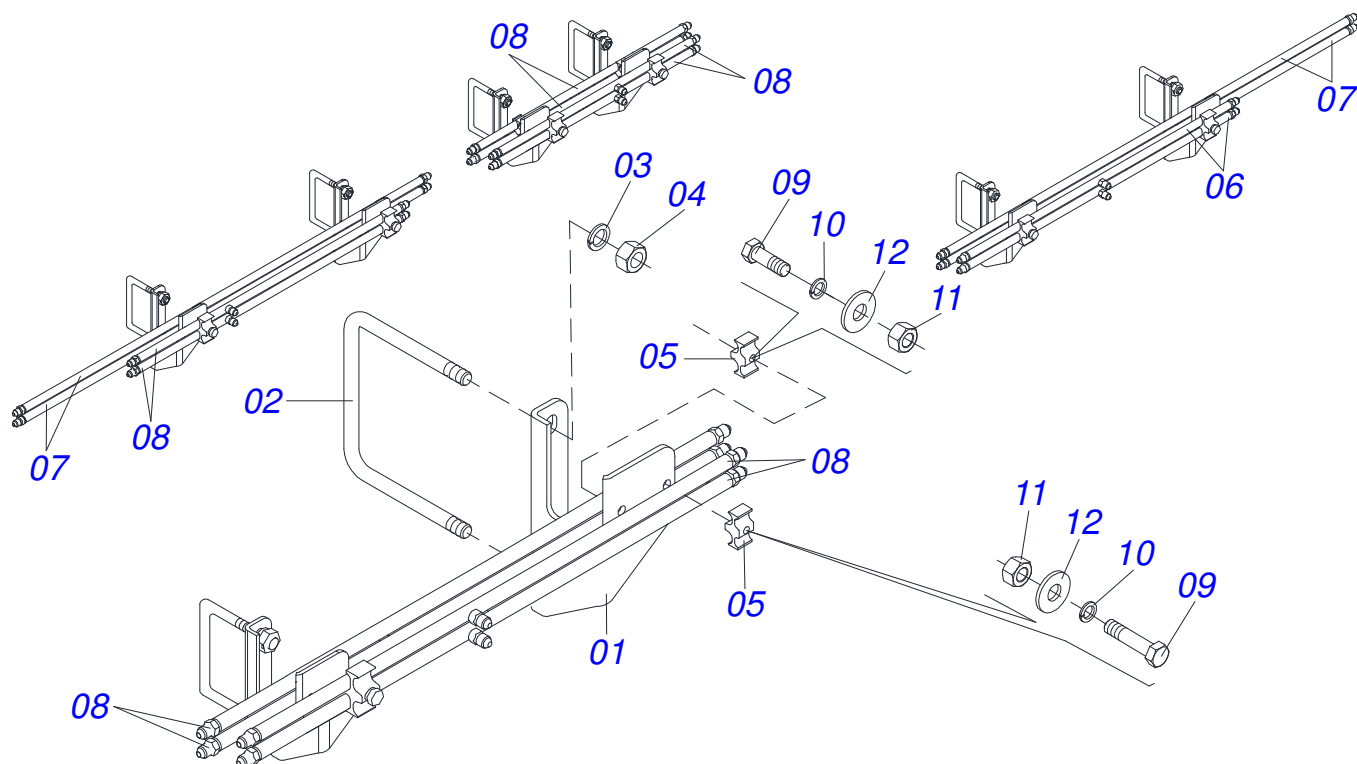 


Item	Code	Description	QT
001	0561017277	OIL CONDUCTOR FIXER PLATE	08
002	0521010718	5/8" U BOLT	08
003	0503010027	SPRING WASHER	16
004	0503010013	5/8" NUT	16
005	0502012702	BODY SUPPORT CLAMP	16
006	0521066484	OIL CONDUCTOR	04
007	0521067089	OIL CONDUCTOR	04
008	0521067088	OIL CONDUCTOR	08
009	0503011268	3/8" X 2-1/2" BOLT	16
010	0503010025	3/8 SPRING WASHER	16
011	0503010026	3/8" NUT	16
012	0501012140	FLAT WASHER	16

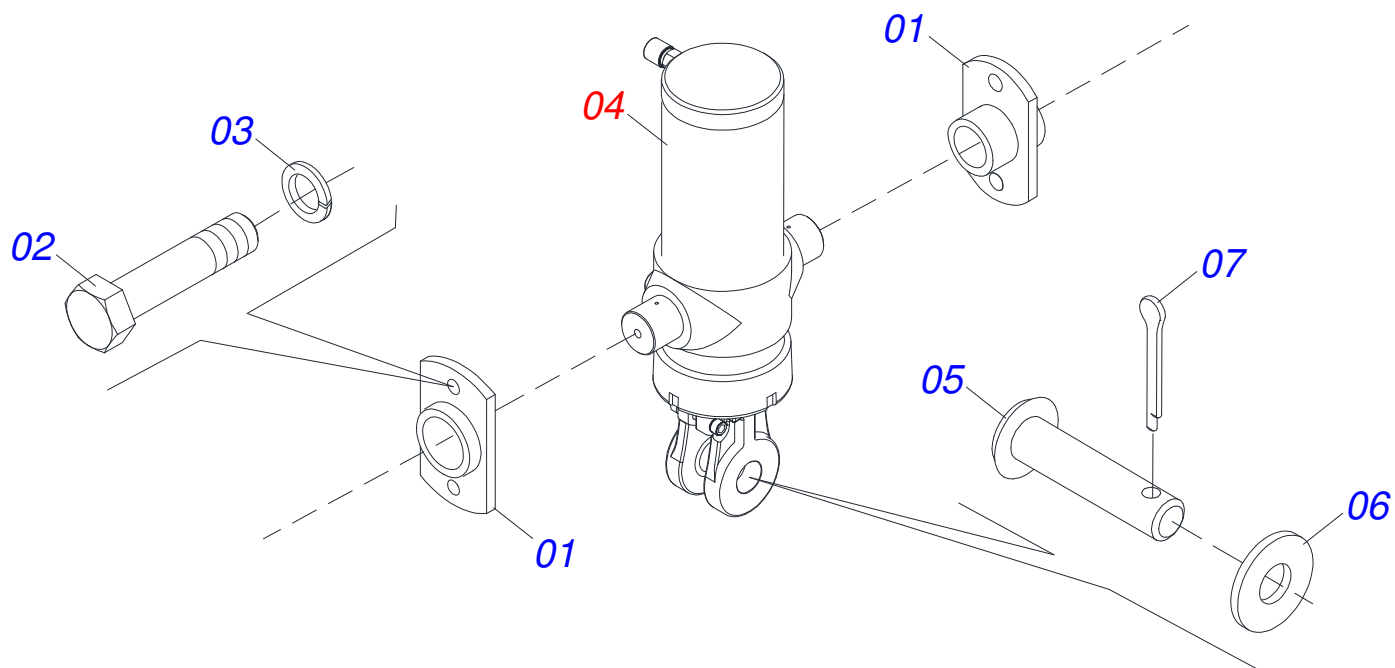 


Item	Code	Description	QT
001	0511066351	FLANGE CYLINDER HYDRAULIC FIXER	12
002	0503010834	1/2 X 1 BOLT	24
003	0503010019	1/2" SPRING WASHER	24
004	0511058411	HYDRAULIC CYLINDER	06
005	0521010546	1.2" X 5.7" COUPLING SHAFT	06
006	0501017779	FLAT WASHER	12
007	0503010523	1/4" X 2" COTTERPIN	06

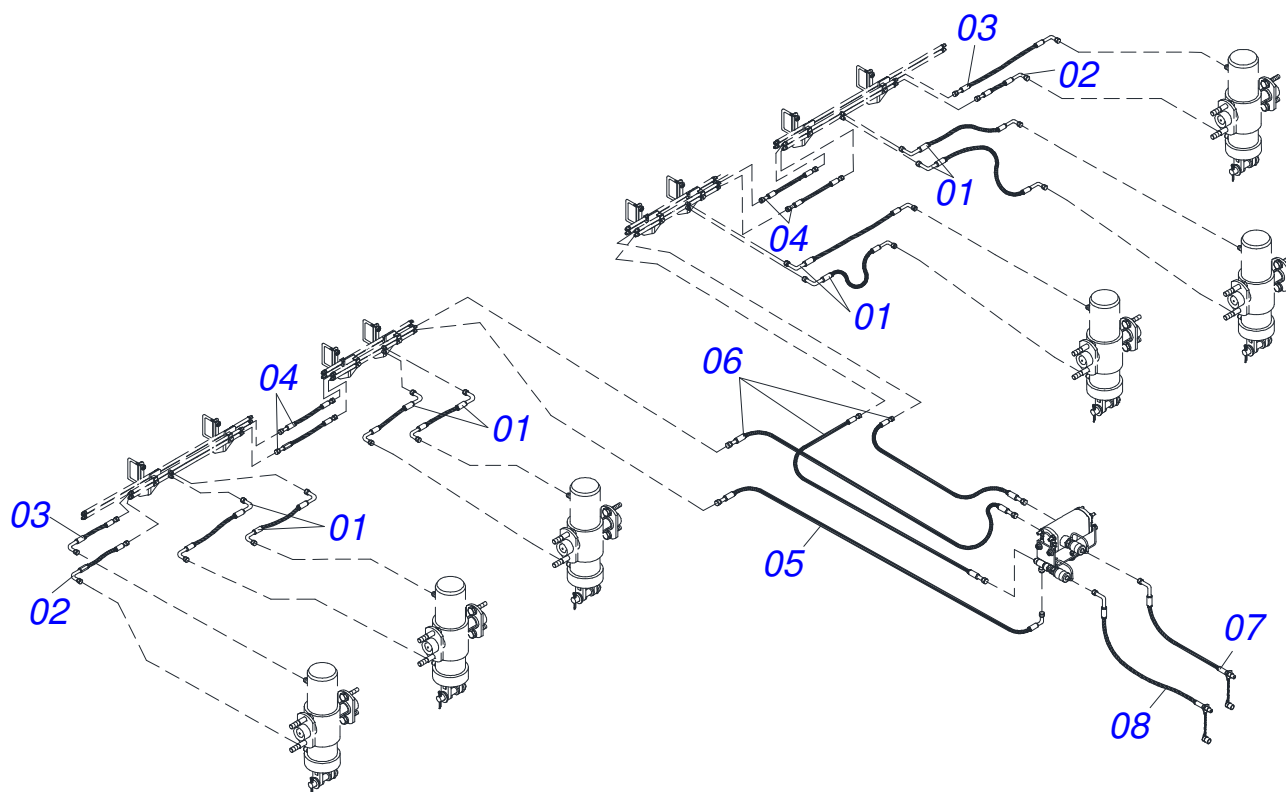 


Item	Code	Description	QT
001	0501080760	3/8" X 500 TC-TC HOSE	08
002	0501080599	3/8 X 650 TC-TR HOSE	02
003	0501080328	3/8" X 29" TR-TC HOSE	02
004	0501080105	TR-TR HOSE ASSY	04
005	0501080150	TR-TC HOSE ASSY	01
006	0501080055	3/8" X 1000 TR-TC HOSE	03
007	0501082120	1/2" X 177" TR-TM HOSE ASSY	01
008	0501082119	1/2" X 185" TR-TM HOSE ASSY	01

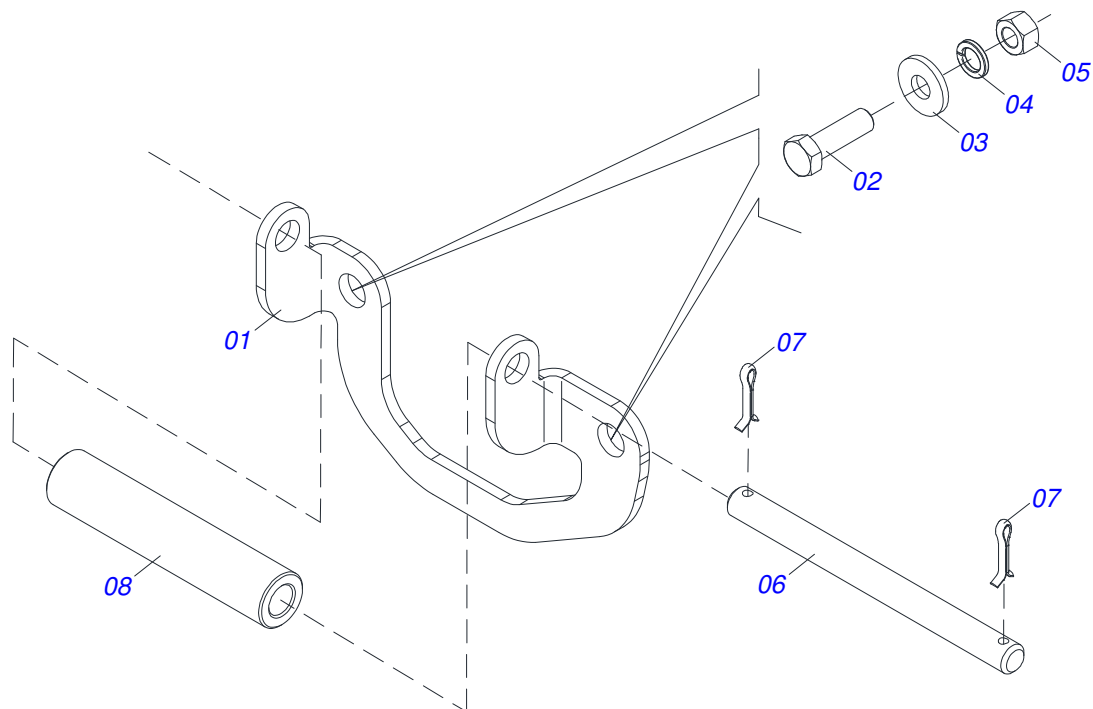 


Item	Code	Description	QT
001	0581013808	RIGHT SUPPORT	01
002	0501010100	5/8 UNC X 2 C S G.5 BOLT	02
003	0501012140	FLAT WASHER	02
004	0503010027	SPRING WASHER	02
005	0503010013	5/8" NUT	02
006	0581013806	SUPPORT AXLE HOSE PROTECTOR	01
007	0503010071	3/16" X 1" COTTERPIN	02
008	0581013805	0.6" X 1.2" SLEEVE	01

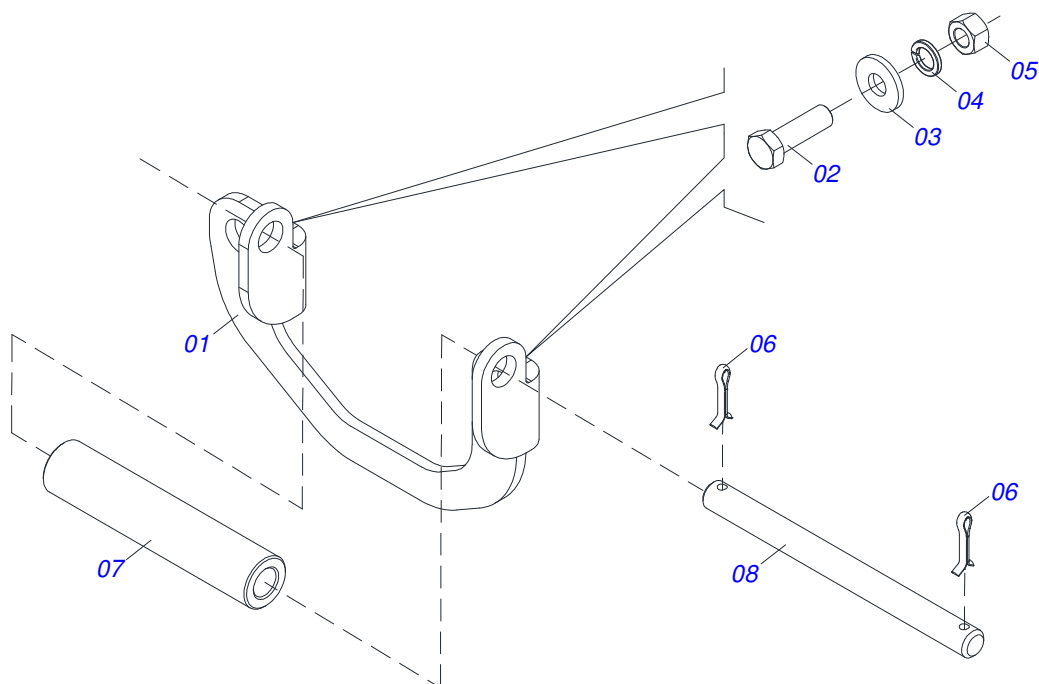 


Item	Code	Description	QT
001	0581013807	LEFT SUPPORT HOSE PROTECTION	01
002	0501010100	5/8 UNC X 2 C S G.5 BOLT	02
003	0501012140	FLAT WASHER	02
004	0503010027	SPRING WASHER	02
005	0503010013	5/8" NUT	02
006	0503010071	3/16" X 1" COTTERPIN	02
007	0581013805	0.6" X 1.2" SLEEVE	01
008	0581013806	SUPPORT AXLE HOSE PROTECTOR	01

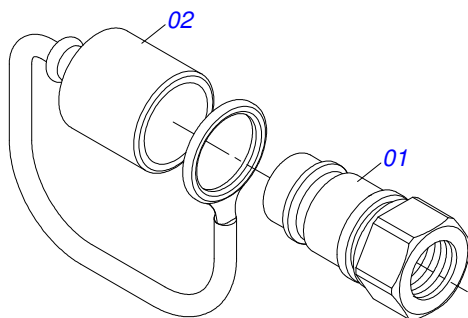 


Item	Code	Description	QT
01	0503011627	QUICK CONNECTION (MALE) AGR 1/2 NPT	01
02	0503011882	QUICK CONNECTION COVER	01

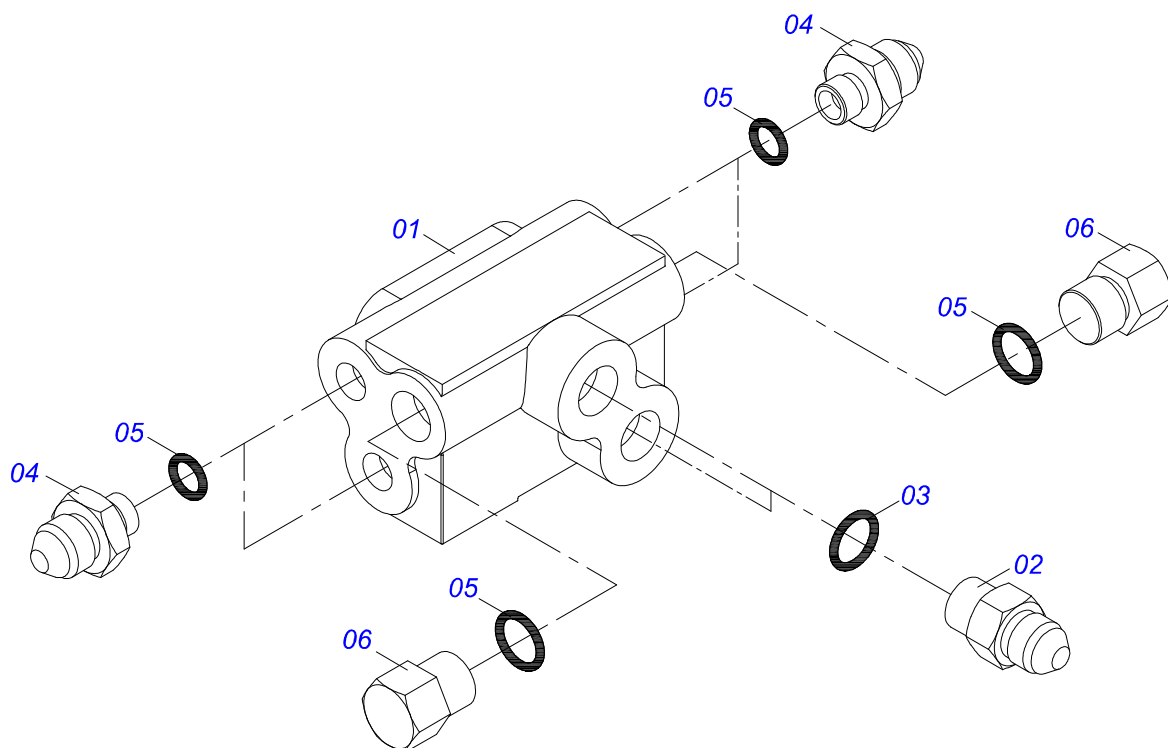 


Item	Code	Description	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE	01
02	0501010617	3/4" NIPPLE	02
03	0503010190	2-114 N 3006-9B O'RING	02
04	0501012109	3/4" X 9/16" NIPPLE	04
05	0503011036	2-111 N 3006-9B O'RING	06
06	0531019339	9/16" UNF X 12 PUMP	02

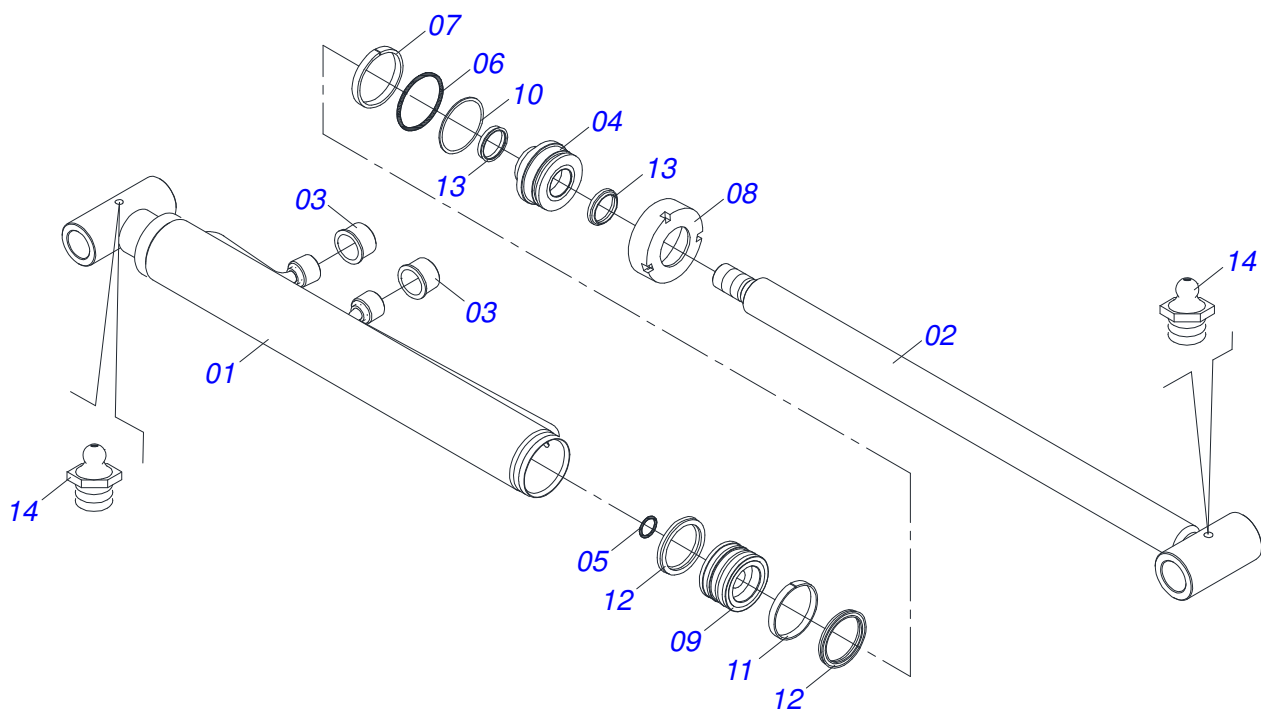 


Item	Code	Description	QT
001	0501067700	2.5" X 25" CYLINDER CASE	01
002	0521066632	EXTENSOR	01
003	0503030384	CON N-001 PLUG	02
004	0502012837	PISTON	01
005	0503018005	RING	01
006	0503011109	2-119 N 3006-9B O-RING	01
007	0503010163	D-1500 SCRAPER RING	01
008	0502010471	MOBILE COVER	01
009	0581010668	RING SUPPORT	01
010	0503018004	RING	01
011	0503018003	GASKET	01
012	0503018163	BACK-UP RING	02
013	0503018162	O-RING	02
014	0503010002	1800 GREASE FITTING	02

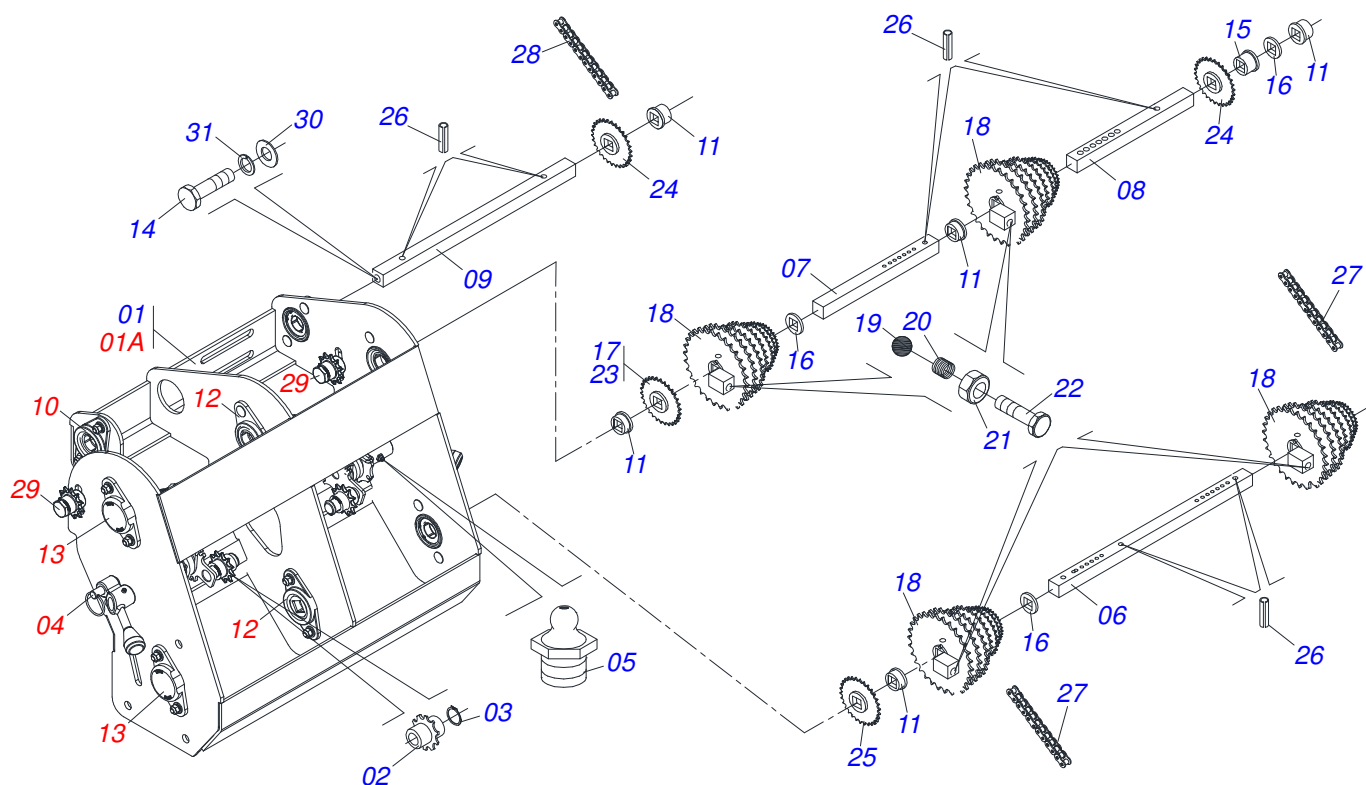 


Item	Code	Description	QT
001	0511048939	RIGHT GEAR BOX ASSY	01
001A	0501058212	RH GEAR	01
002	0503031805	11Z 1/2" GEAR	04
003	0503010302	501019 SEAL RING	04
004	0501048790	AXLE WITH LINK ASSY	02
005	0503010002	1800 GREASE FITTING	02
006	0551018209	DRIVING AXLE	01
007	0521018259	DRIVEN AXLE	01
008	0551018210	DRIVEN AXLE	01
009	0551018211	INTERM SHAFT	01
010	0501056447	CENTRAL BEARING GEAR BOX	01
011	0503030303	SUPPORT WASHER	05
012	0501056443	BEARING ASSY GEAR BOX	02
013	0501056271	GEAR BOX CLOSE BEARINGONE	05
014	0503010256	3/8" X 3/4" BOLT	01
015	0503030275	AGRICULTURAL BEARING	01
016	0521018630	1.4" X SQUARE 0.8" WASHER	03
017	0511061822	25Z P0.5" GEAR SQUARE HOL	01
018	0502040868	GEAR CONE REPLACEMENT	04
019	0503012389	1/2 BALL	04
020	0503031512	0.4" X 0.1"X 2" X 0.6" SPRING	04
021	0503010060	1/2" NUT	04
022	0503010395	1/2" X 1-1/4" BOLT	04
023	0521062072	33Z GEAR	01
024	0511061830	17Z P 0.5" GEAR SQUARE HOL	02
025	0511067501	26Z GEAR	01
026	0503010292	0.2" X 1.6" SPRING PIN	07
027	0503012204	40-1 CHAIN X 82 LINK + RED	02
028	0503012713	40-1 CHAIN X 45 LINK + MEN	01
029	0501054655	CHAIN TENSIONER ASSY	02
030	0501010984	FLAT WASHER	01
031	0503010025	3/8 SPRING WASHER	01

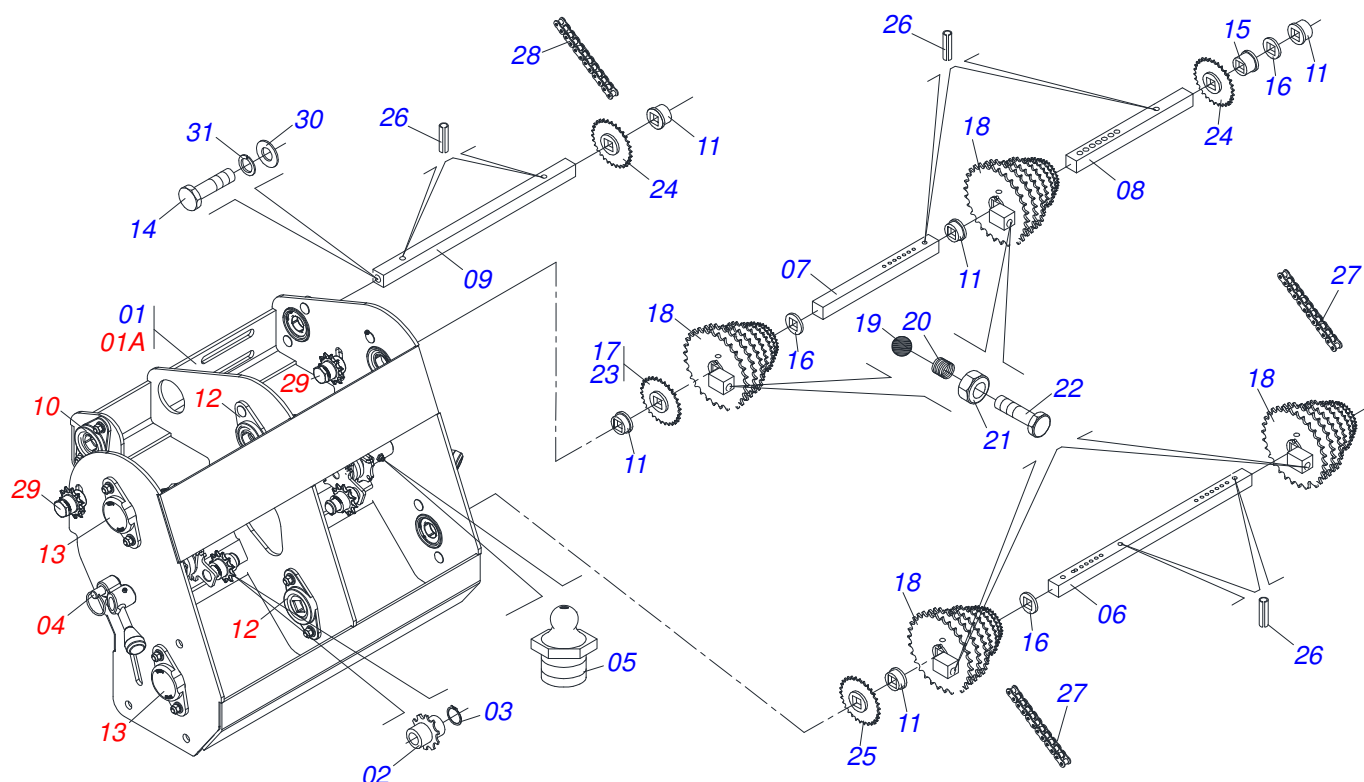 


Item	Code	Description	QT
001	0511050640	LEFT GEAR BOX ASSY	01
001A	0501058213	LH GEAR BOX	01
002	0503031805	11Z 1/2" GEAR	04
003	0503010302	501019 SEAL RING	04
004	0501048790	AXLE WITH LINK ASSY	02
005	0503010002	1800 GREASE FITTING	02
006	0551018209	DRIVING AXLE	01
007	0521018259	DRIVEN AXLE	01
008	0551018210	DRIVEN AXLE	01
009	0551018211	INTERM SHAFT	01
010	0501056447	CENTRAL BEARING GEAR BOX	01
011	0503030303	SUPPORT WASHER	05
012	0501056443	BEARING ASSY GEAR BOX	02
013	0501056271	GEAR BOX CLOSE BEARINGONE	05
014	0503010256	3/8" X 3/4" BOLT	01
015	0503030275	AGRICULTURAL BEARING	01
016	0521018630	1.4" X SQUARE 0.8" WASHER	03
017	0511061822	25Z P0.5" GEAR SQUARE HOL	01
018	0502040868	GEAR CONE REPLACEMENT	04
019	0503012389	1/2 BALL	04
020	0503031512	0.4" X 0.1"X 2" X 0.6" SPRING	04
021	0503010060	1/2" NUT	04
022	0503010395	1/2" X 1-1/4" BOLT	04
023	0521062072	33Z GEAR	01
024	0511061830	17Z P 0.5" GEAR SQUARE HOL	02
025	0511067501	26Z GEAR	01
026	0503010292	0.2" X 1.6" SPRING PIN	07
027	0503012204	40-1 CHAIN X 82 LINK + RED	02
028	0503012713	40-1 CHAIN X 45 LINK + MEN	01
029	0501054655	CHAIN TENSIONER ASSY	02
030	0501010984	FLAT WASHER	01
031	0503010025	3/8 SPRING WASHER	01

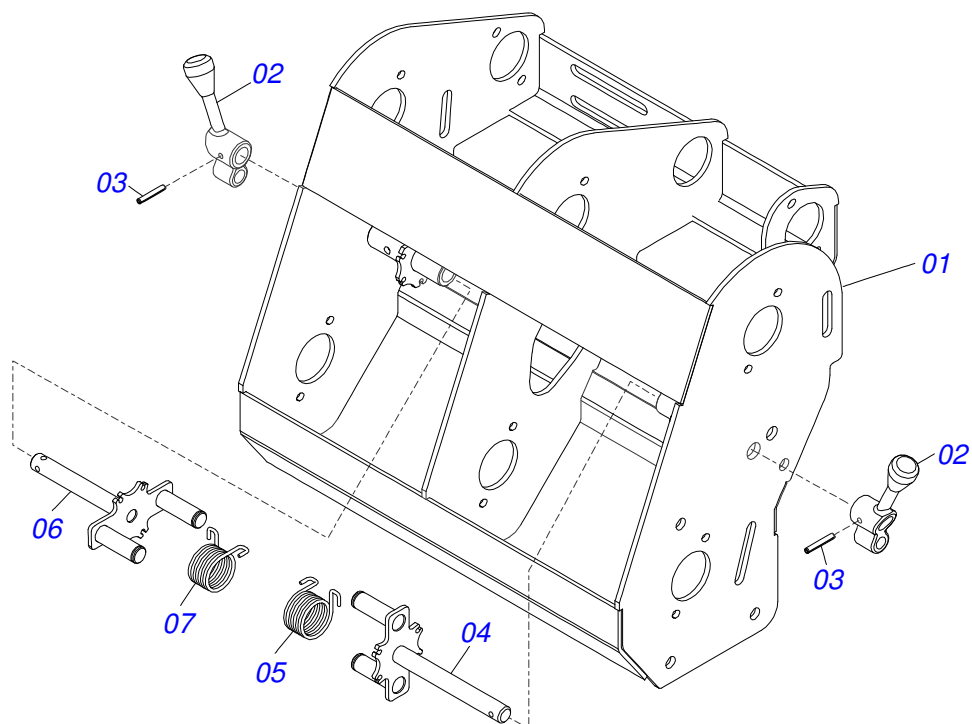 


Item	Code	Description	QT
001	0511069566	LEFT GEAR BOX	01
002	0502011758	REAR TENSIONER LEVER	02
003	0503010292	0.2" X 1.6" SPRING PIN	02
004	0511061794	CHAIN TENSIONER	01
005	0503031367	SPRING	01
006	0511060392	CHAIN TENSIONER	01
007	0503031366	RH TORSION SPRING	01

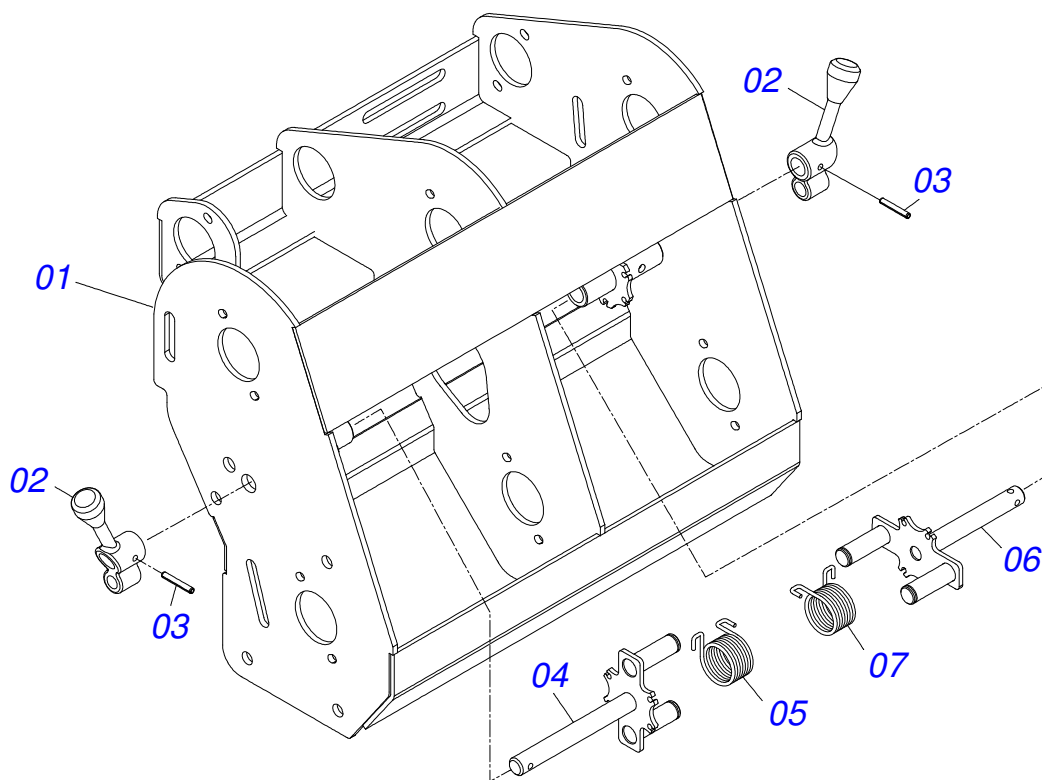 


Item	Code	Description	QT
01	0511069565	LEFT GEAR BOX	01
02	0502011758	REAR TENSIONER LEVER	02
03	0503010292	0.2" X 1.6" SPRING PIN	02
04	0511061794	CHAIN TENSIONER	01
05	0503031367	SPRING	01
06	0511060392	CHAIN TENSIONER	01
07	0503031366	RH TORSION SPRING	01

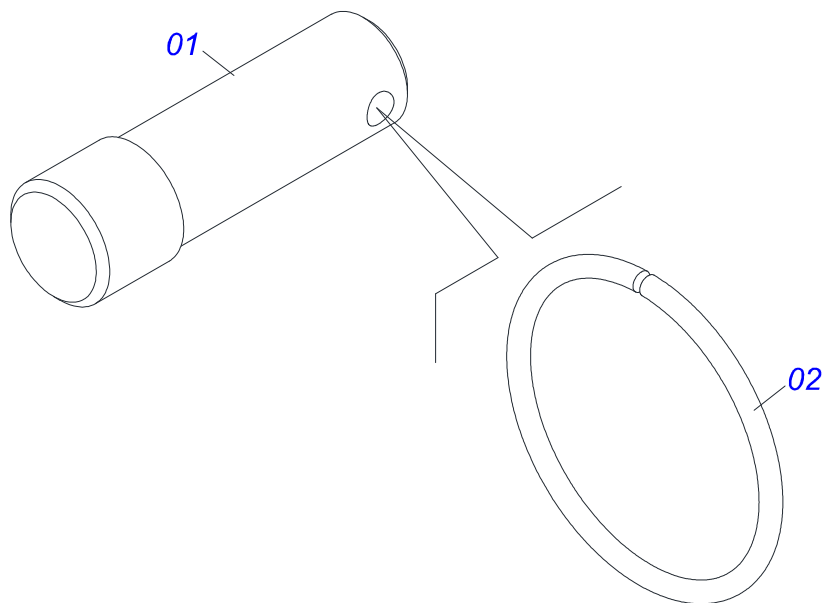 


Item	Code	Description	QT
001	0521012476	GEAR BOX LEVER AXLE	01
002	0503031369	LINK	01

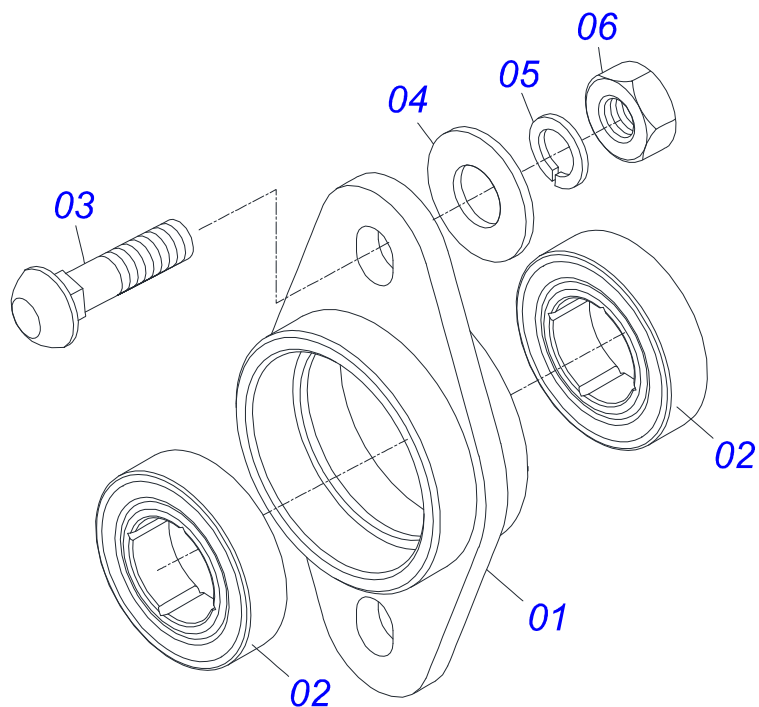 


Item	Code	Description	QT
01	0502011978	HOUSING CENTRAL BEARING	01
02	0503013462	BEARING WITH BALL BEARING	02
03	0503011953	5/16" X 1" BOLT	02
04	0501010694	FLAT WASHER	02
05	0503010179	SPRING WASHER	02
06	0503010337	5/16" NUT	02

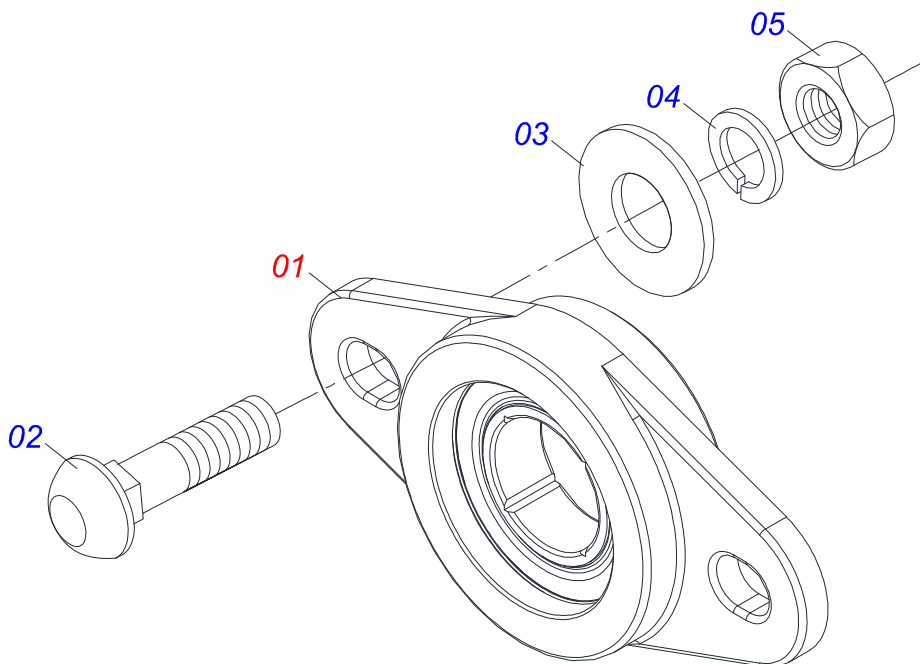 


Item	Code	Description	QT
01	0501056444	BEARING WITH BALL BEARING	01
02	0503011953	5/16" X 1" BOLT	02
03	0501010694	FLAT WASHER	02
04	0503010179	SPRING WASHER	02
05	0503010337	5/16" NUT	02

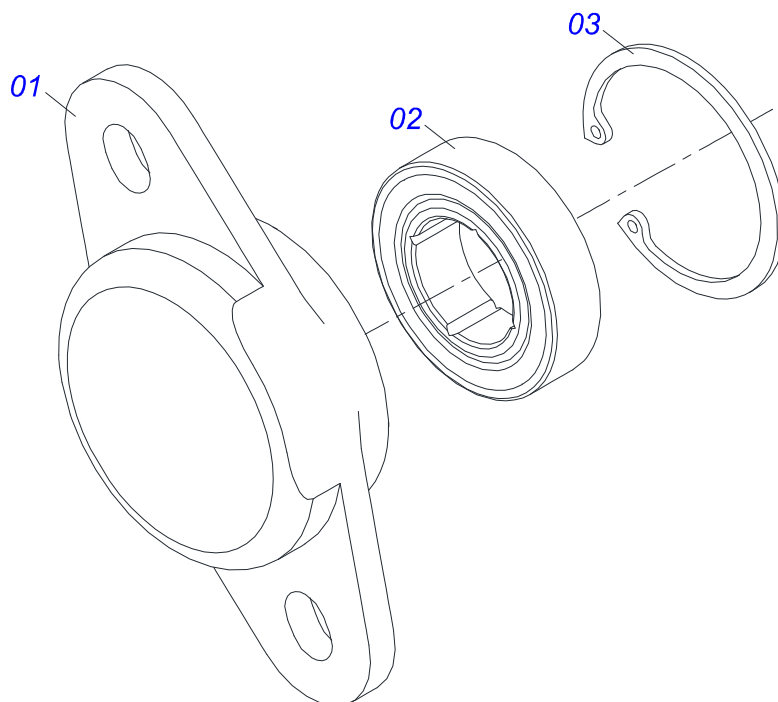 


Item	Code	Description	QT
01	0502012310	GEAR BOX CLOSE BEARING	01
02	0503013462	BEARING WITH BALL BEARING	01
03	0503011105	SEAL RING	01

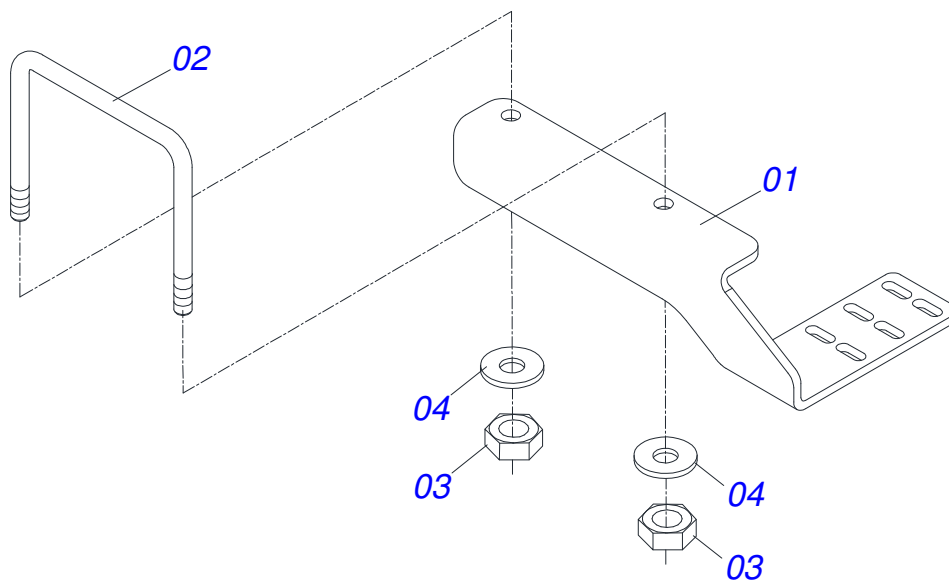 


Item	Code	Description	QT
001	0561019899	RIGHT SUPPORT FIXER RECAMBIO	01
002	0521010718	5/8" U BOLT	01
003	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
004	0501012140	FLAT WASHER	02

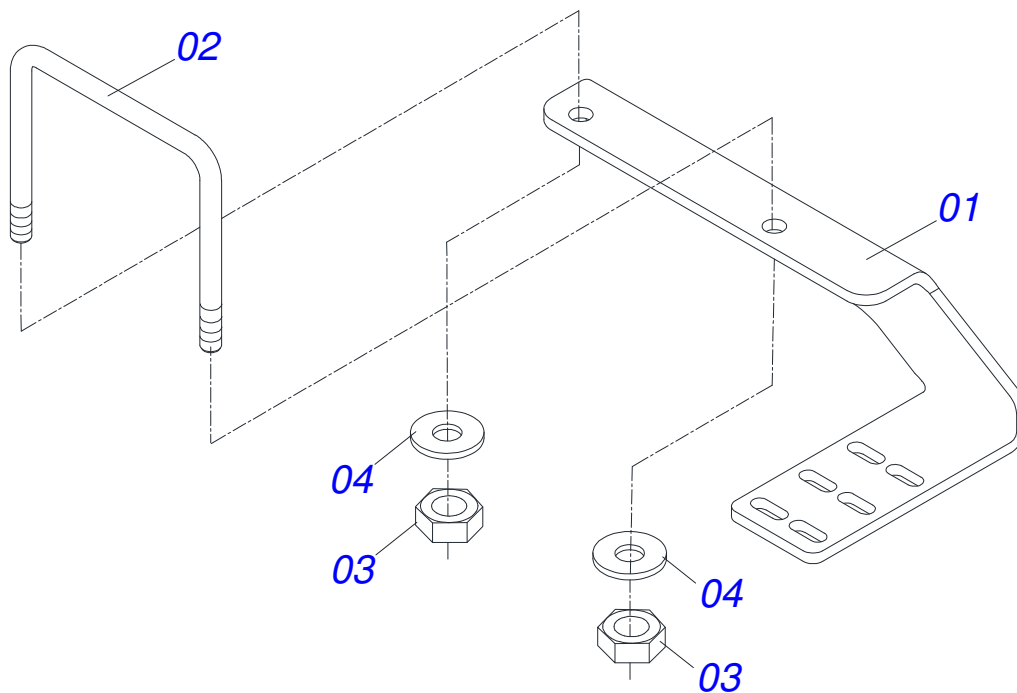 


Item	Code	Description	QT
001	0561019898	LEFT SUPPORT FIXER RECAMBIO	01
002	0521010718	5/8" U BOLT	01
003	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
004	0501012140	FLAT WASHER	02

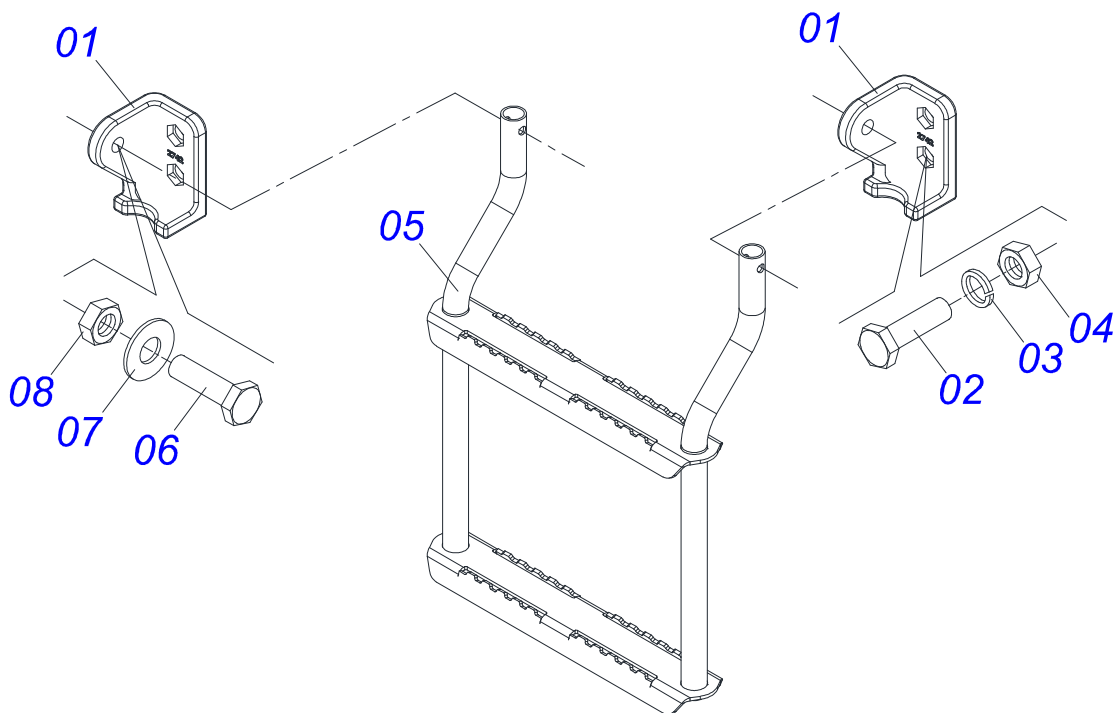 


Item	Code	Description	07A19 L
001	0502012742	FIXER SUPPORT LADDER	04
002	0503010237	3/8" X 1" BOLT	08
003	0503010025	3/8 SPRING WASHER	08
004	0503010026	3/8" NUT	08
005	0511069636	LADDER	02
006	0503011179	3/8" X 2-1/4" BOLT	04
007	0501010984	FLAT WASHER	04
008	0503013357	3/8" SELF-ADJUSTING NUT	04

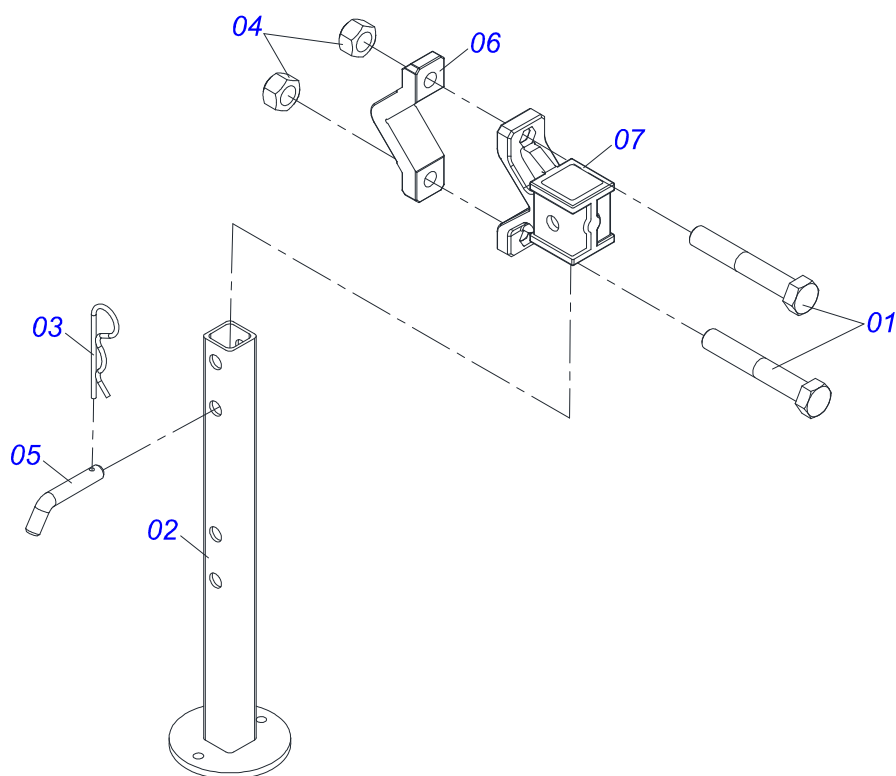 


Item	Code	Description	QT
001	0501011543	5/8" X 4" BOLT	02
002	0511061835	PLOUGH SUPPORT	01
003	0503030012	HAIR PIN	01
004	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
005	0501011075	PIN	01
006	0502010175	HITCH CLAMP	01
007	0502011530	SUPPORT	01

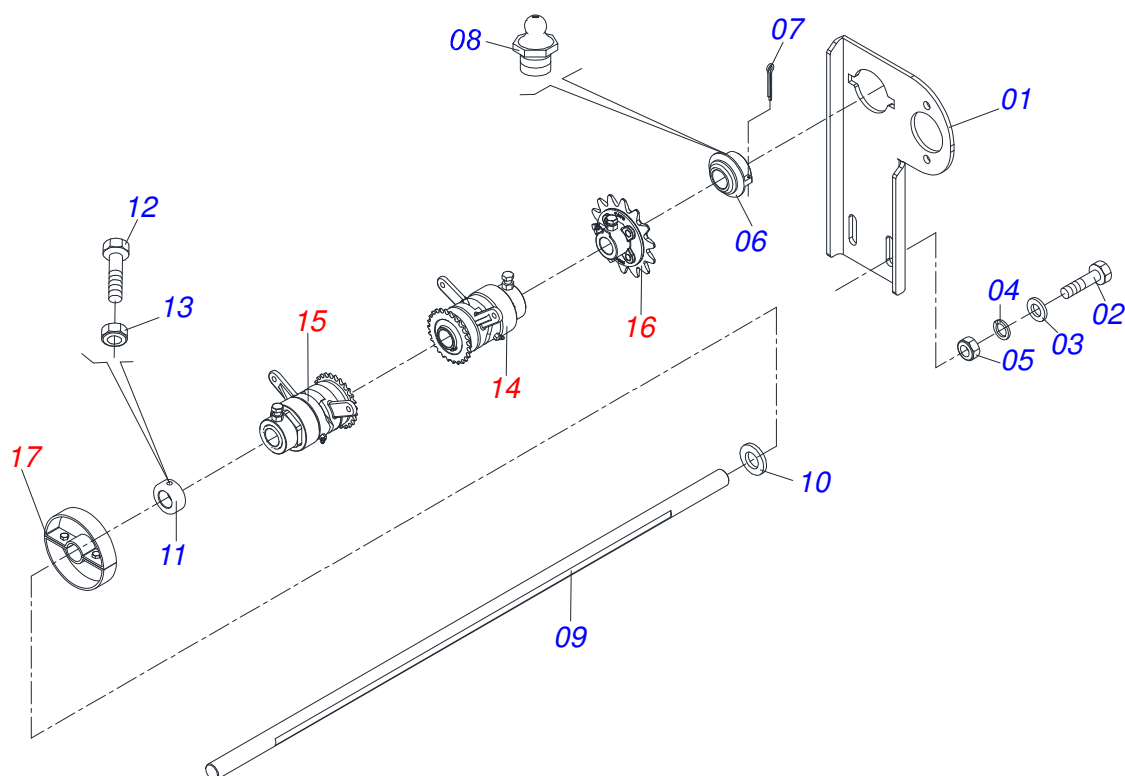 


Item	Code	Description	QT
001	0561017269	MOTOR AXLE BEARING SUPPORT	04
002	0503011082	C1/2" X 1.3/4" BOLT	08
003	0511017302	FLAT WASHER	16
004	0503010019	1/2" SPRING WASHER	08
005	0503010060	1/2" NUT	08
006	0501110639	AGRIC BEARING	08
007	0503010300	5/32" X 1" COTTERPIN	08
008	0503011099	GREASE FITTING	08
009	0581013330	MOTOR SHAFT ASSEMBLY	02
010	0501018466	FLAT WASHER	04
011	0511015961	LOCK BUSHING	04
012	0503030679	1/2" X 1-1/4" BOLT	04
013	0503010060	1/2" NUT	04
014	0511047069	SIDE TRANSMISSION DRIVING	01
015	0511047070	LH SIDE TRANSMISSION DRIVING	01
016	0511051434	TRANSMISSION DRIVING ASSY	04
017	0501052560	AXLE MOTOR SLOW-MOVING ASSY	02

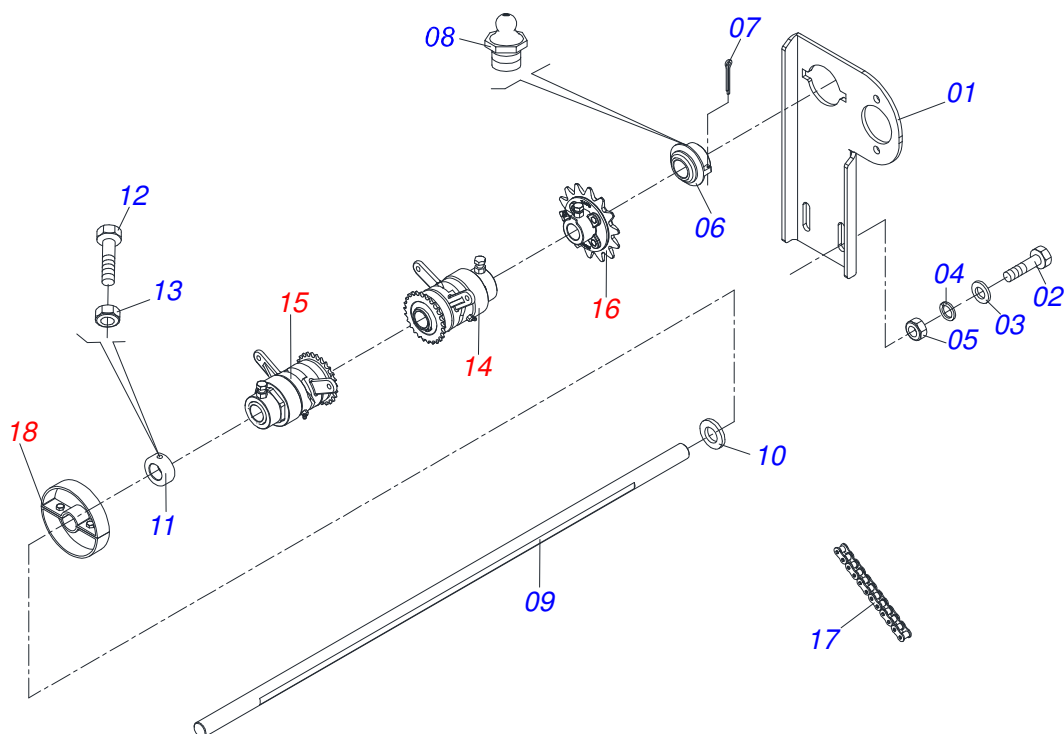 


Item	Code	Description	QT
001	0561017269	MOTOR AXLE BEARING SUPPORT	04
002	0503011082	C1/2" X 1.3/4" BOLT	08
003	0511017302	FLAT WASHER	16
004	0503010019	1/2" SPRING WASHER	08
005	0503010060	1/2" NUT	08
006	0501110639	AGRIC BEARING	08
007	0503010300	5/32" X 1" COTTERPIN	08
008	0503011099	GREASE FITTING	08
009	0571014441	MOTOR SHAFT	02
010	0501018466	FLAT WASHER	04
011	0511015961	LOCK BUSHING	04
012	0503030679	1/2" X 1-1/4" BOLT	04
013	0503010060	1/2" NUT	04
014	0511047069	SIDE TRANSMISSION DRIVING	01
015	0511047070	LH SIDE TRANSMISSION DRIVING	01
016	0511051434	TRANSMISSION DRIVING ASSY	04
017	0503012958	2050 CHAIN X 42 LINK + REDUCTION	04
018	0501052560	AXLE MOTOR SLOW-MOVING ASSY	02

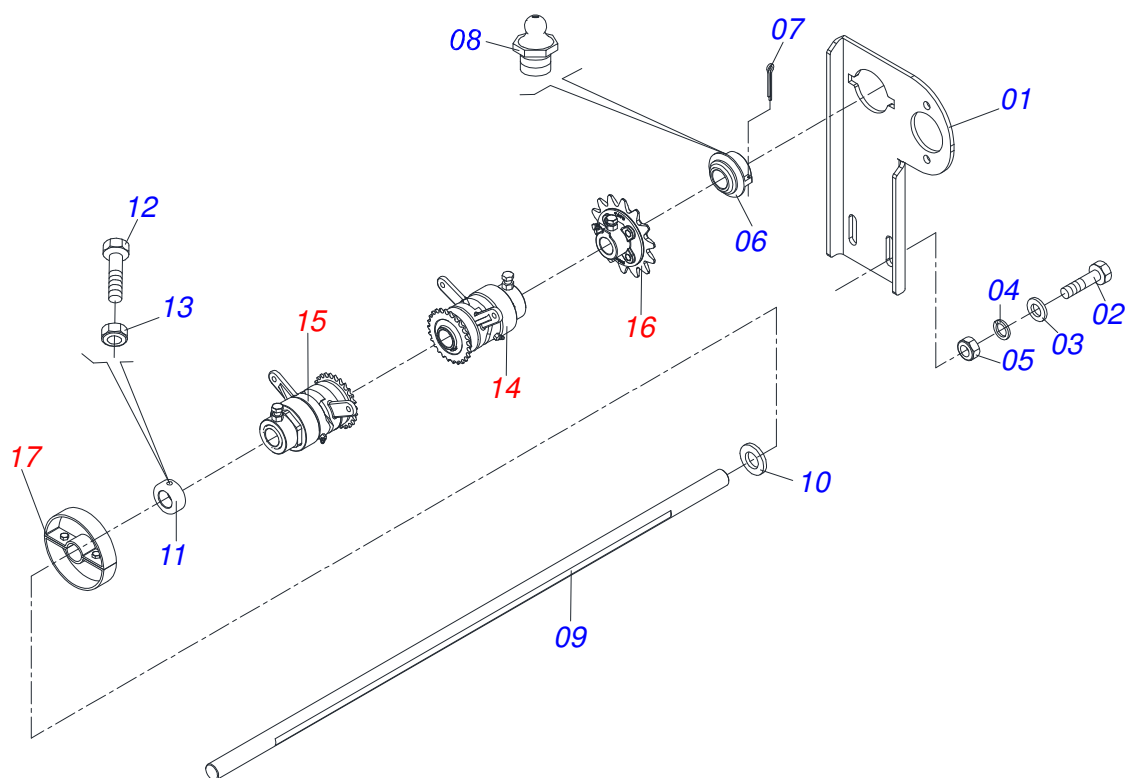 


Item	Code	Description	QT
001	0561017269	MOTOR AXLE BEARING SUPPORT	04
002	0503011082	C1/2" X 1.3/4" BOLT	08
003	0511017302	FLAT WASHER	16
004	0503010019	1/2" SPRING WASHER	08
005	0503010060	1/2" NUT	08
006	0501110639	AGRIC BEARING	08
007	0503010300	5/32" X 1" COTTERPIN	08
008	0503011099	GREASE FITTING	08
009	0581012156	MOTOR SHAFT ASSEMBLY	02
010	0501018466	FLAT WASHER	04
011	0511015961	LOCK BUSHING	04
012	0503030679	1/2" X 1-1/4" BOLT	04
013	0503010060	1/2" NUT	04
014	0511047069	SIDE TRANSMISSION DRIVING	01
015	0511047070	LH SIDE TRANSMISSION DRIVING	01
016	0511051434	TRANSMISSION DRIVING ASSY	04
017	0501052560	AXLE MOTOR SLOW-MOVING ASSY	02

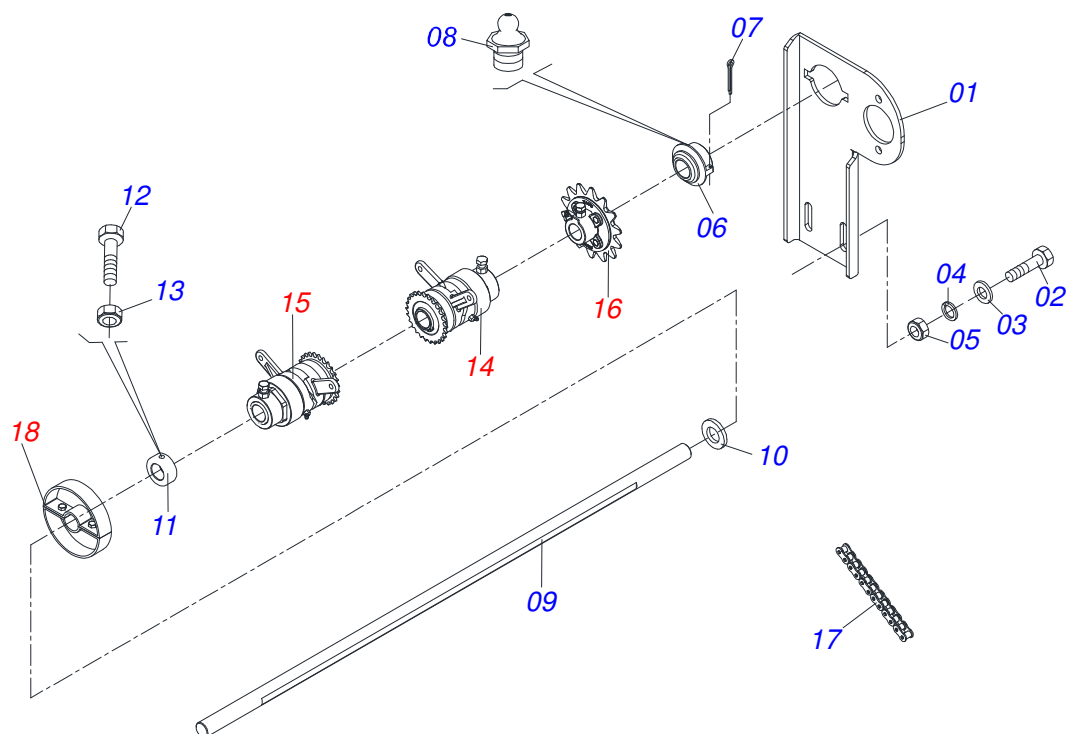 


Item	Code	Description	QT
001	0561017269	MOTOR AXLE BEARING SUPPORT	04
002	0503011082	C1/2" X 1.3/4" BOLT	08
003	0511017302	FLAT WASHER	16
004	0503010019	1/2" SPRING WASHER	08
005	0503010060	1/2" NUT	08
006	0501110639	AGRIC BEARING	08
007	0503010300	5/32" X 1" COTTERPIN	08
008	0503011099	GREASE FITTING	08
009	0581010468	MOTOR SHAFT ASSEMBLY	02
010	0501018466	FLAT WASHER	04
011	0511015961	LOCK BUSHING	04
012	0503030679	1/2" X 1-1/4" BOLT	04
013	0503010060	1/2" NUT	04
014	0511047069	SIDE TRANSMISSION DRIVING	01
015	0511047070	LH SIDE TRANSMISSION DRIVING	01
016	0511051434	TRANSMISSION DRIVING ASSY	04
017	0503012958	2050 CHAIN X 42 LINK + REDUCTION	04
018	0501052560	AXLE MOTOR SLOW-MOVING ASSY	02

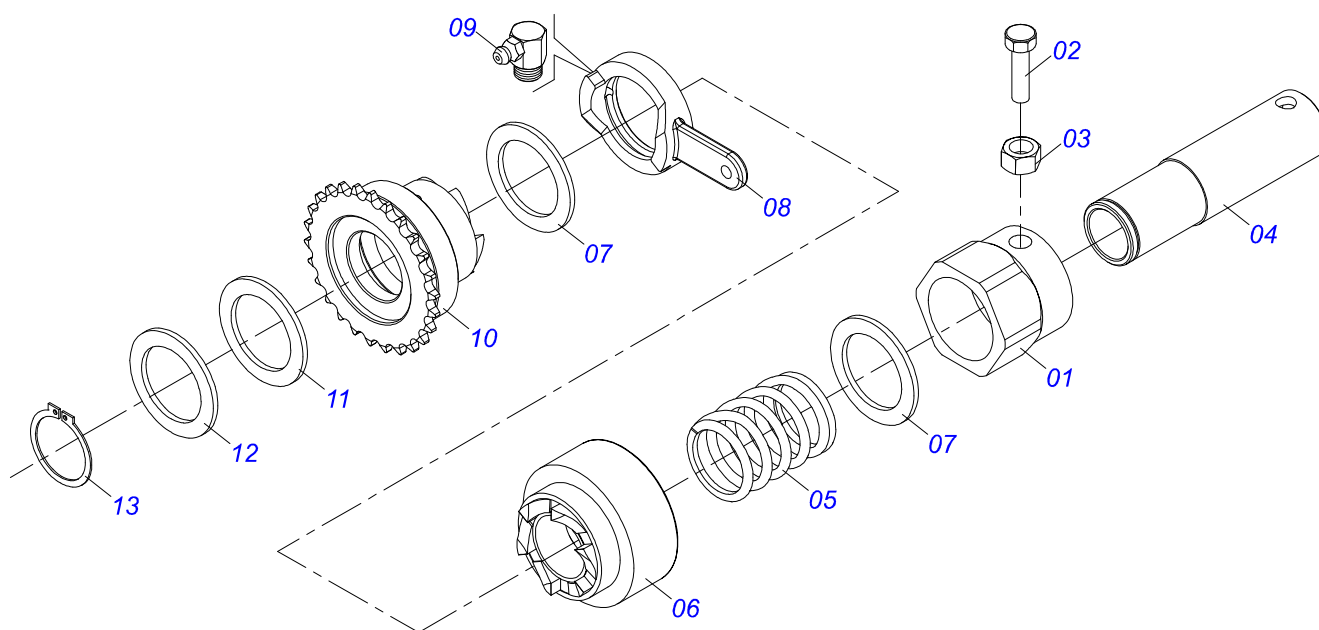 


Item	Code	Description	QT
01	0502011996	SLLEVE FIXER	01
02	0503030678	1/2"X1-1/2"BOLT	01
03	0503010060	1/2" NUT	01
04	0521017590	GUIDE AXLE	01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING	01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER	01
07	0501019734	FLAT WASHER	02
08	0502010710	RIGHT CAM, SMALLER	02
09	0503010003	1845 GREASE FITTING	02
10	0502012539	26Z P12,7 GEAR	01
11	0501019735	FLAT WASHER	01
12	0521017593	FLAT WASHER	01
13	0503010542	501045 CLAMPING RING (FOR AXLE)	01

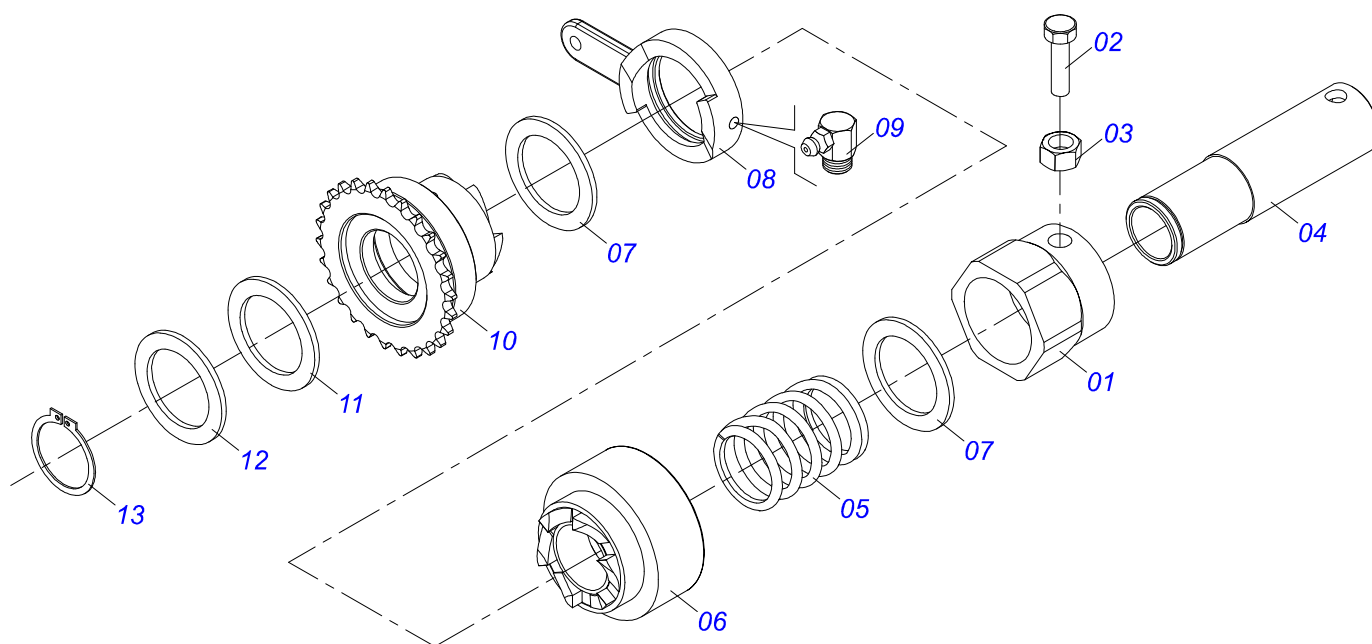 


Item	Code	Description	QT
01	0502011996	SLLEVE FIXER	01
02	0503030678	1/2"X1-1/2"BOLT	01
03	0503010060	1/2" NUT	01
04	0521017590	GUIDE AXLE	01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING	01
06	0502011995	LH DRIVING AXLE FOLLOWER	01
07	0501019734	FLAT WASHER	02
08	0502010720	RIGHT CAM, SMALLER	02
09	0503010003	1845 GREASE FITTING	02
10	0502012540	26Z P12,7 GEAR	01
11	0501019735	FLAT WASHER	01
12	0521017593	FLAT WASHER	01
13	0503010542	501045 CLAMPING RING (FOR AXLE)	01

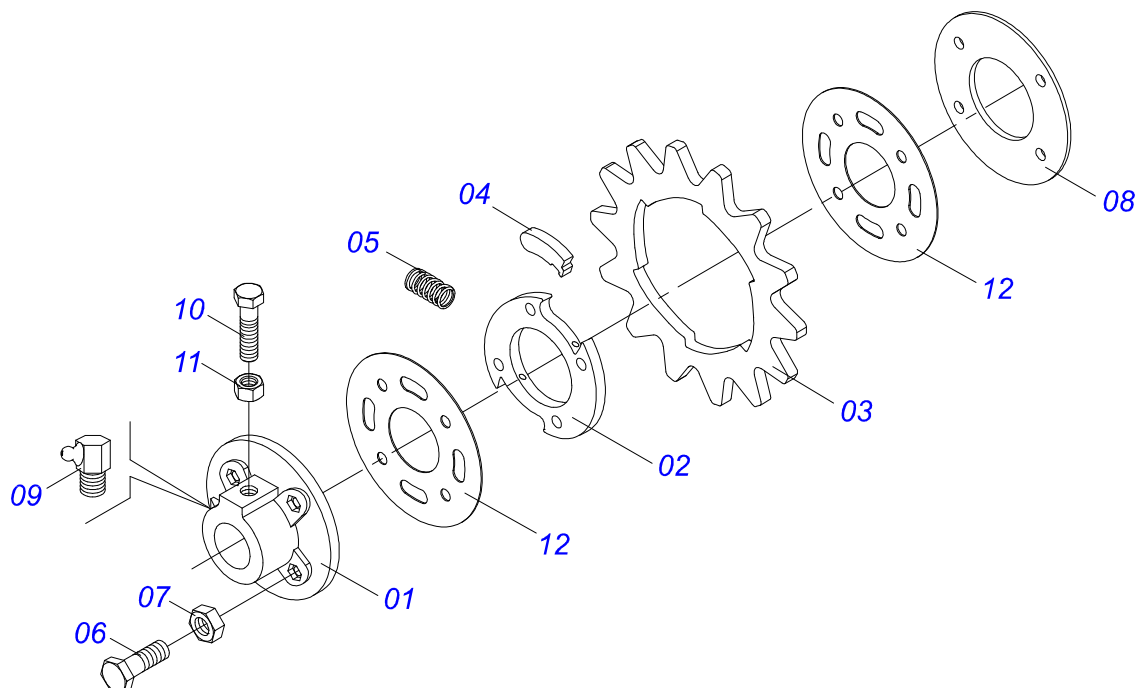 

Item	Code	Description	QT
01	0502012696	RIGHT RATCHET HANDLE BODY	01
02	0571010151	GRAGGER RATCHET BODY	01
03	0561019923	RATCHET PULLER GEAR	01
04	0551019100	LOCK RATCHET	02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING	02
06	0503010365	NUT	04
07	0503013816	5/16" LOCKNUT	04
08	0571010164	SEAT SIDE OF RATCHET	01
09	0503010004	1890 GREASE FITTING	01
10	0503030678	1/2"X1-1/2"BOLT	01
11	0503010060	1/2" NUT	01
12	0571010763	FLANGE WASHER	02

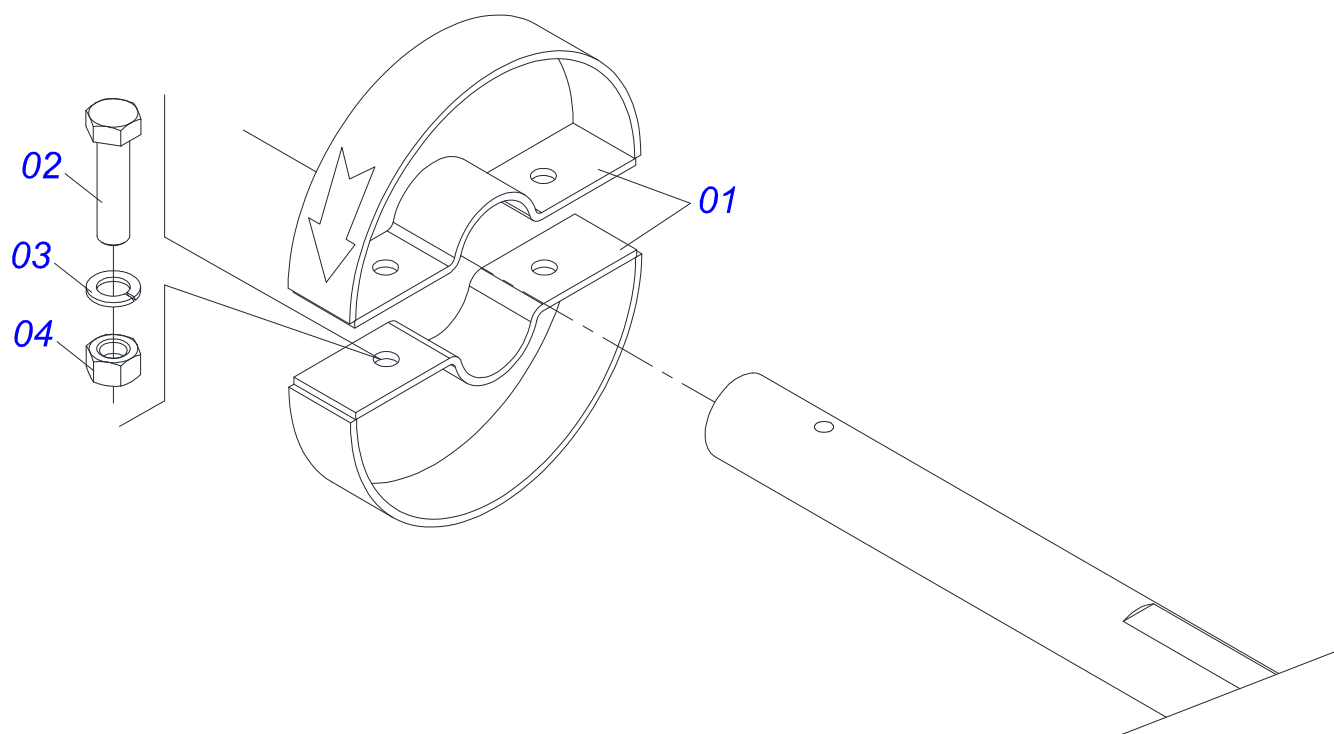 


Item	Code	Description	QT
001	0503031825	AXLE MOTOR SLOW-MOVING	02
002	0503010240	5/16" X 3/4" BOLT	02
003	0503010179	SPRING WASHER	02
004	0503010337	5/16" NUT	02

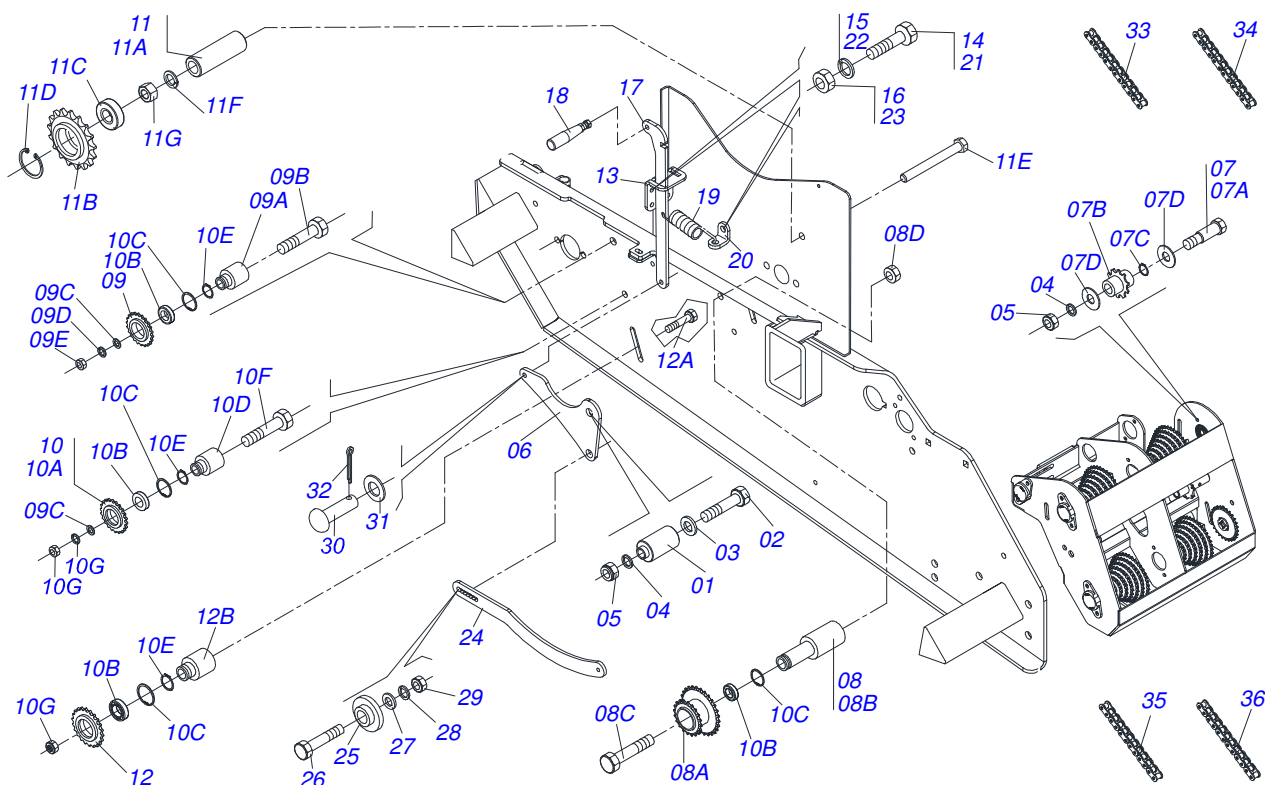 


Item	Code	Description	QT
001	0561018212	ARTICULAT SLEEVE	02
002	0503010547	1/2" X 4" BOLT	02
003	0511017302	FLAT WASHER	02
004	0503010019	1/2" SPRING WASHER	02
005	0503010060	1/2" NUT	02
006	0561017281	ARTICULACION ARM	02
007	0511053366	CHAIN TENSIONER	02
007A	0531019479	AXLE CHAIN GEAR	01
007B	0503031805	11Z 1/2" GEAR	01
007C	0503010302	501019 SEAL RING	01
007D	0511017302	FLAT WASHER	02
007E	0503010019	1/2" SPRING WASHER	01
007F	0503010060	1/2" NUT	01
008	0511050385	BEARING WITH	02
008A	0521061843	20Z DOBLE GEAR	01
008B	0503011410	ROLLER BEARING	02
008C	0551019175	DOUBLE GEAR AXLE	01
008D	0503010406	501025 CLAMPING RING (FOR AXLE)	01
008E	0501010163	5/8" X 4-1/2" BOLT	01
008F	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
009	0501058265	LOWER CHAIN TENSIONER ASSY	02
009A	0511062169	21Z P 1/2" GEAR	01
009B	0503011410	ROLLER BEARING	01
009C	0503011105	SEAL RING	01
009D	0531017086	50 AXLETIGHTENER	01
009E	0503010406	501025 CLAMPING RING (FOR AXLE)	01
009F	0503010762	5/8" X 3-12" BOLT	01
009G	0501012140	FLAT WASHER	01
009H	0503010027	SPRING WASHER	01
009I	0503010013	5/8" NUT	01
010	0511056387	INNER BEARING	02
010A	0511062169	21Z P 1/2" GEAR	01
010B	0503011410	ROLLER BEARING	01

Item	Code	Description	QT
010C	0503011105	SEAL RING	01
010D	0531017086	50 AXLETIGHTENER	01
010E	0503010406	501025 CLAMPING RING (FOR AXLE)	01
010F	0503010762	5/8" X 3-12" BOLT	01
010G	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
011	0511057852	CHAIN DEVIATION	02
011A	0571019832	SLEEVE CHAIN DEVIATION	01
011B	0502012367	17Z X P 1/2" GEAR INTERM	01
011C	0503012882	BALL BEARING	01
011D	0503011945	503050 CLAMPING RING (FOR AXLE)	01
011E	0503010706	1/2" X 4.1/2" BOLT	01
011F	0503010019	1/2" SPRING WASHER	01
011G	0503010060	1/2" NUT	01
012	0501053126	FERTILIZER CHAIN TENSIONER ASSY	02
012A	0501011541	5/8" X 3" BOLT	01
012B	0511062169	21Z P 1/2" GEAR	01
012C	0503011410	ROLLER BEARING	01
012D	0503011105	SEAL RING	01
012E	0521018415	TIGHTENER AXLE	01
012F	0503010406	501025 CLAMPING RING (FOR AXLE)	01
012G	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
013	0571019829	LEVER FIXER	02
014	0503010237	3/8" X 1" BOLT	02
015	0503010025	3/8 SPRING WASHER	02
016	0503010026	3/8" NUT	02
017	0571019830	LEVER FIXER	02
018	0503011312	ROTATIVE CABLE	02
019	0503030093	TRACTION SPRING	02
020	0561017273	FIXER SPRING	02
021	0503010237	3/8" X 1" BOLT	02
022	0503010025	3/8 SPRING WASHER	02
023	0503010026	3/8" NUT	02
024	0561017282	LOWER LEVER	02
025	0561016797	SLEEVE UNION LEVER ARM/DESARM	02
026	0503011082	C1/2" X 1.3/4" BOLT	02
027	0511017302	FLAT WASHER	04
028	0503010019	1/2" SPRING WASHER	02
029	0503010060	1/2" NUT	02
030	0521010773	0.37" X 1.18" COUPLING SHAFT	04
031	0501010984	FLAT WASHER	02
032	0503010140	1/8" X 3/4" COTTERPIN	04
033	0503012143	78 CHAIN X 40-1 LINK + REDUCTION	02
034	0503012717	40-1 CHAIN X 101 LINK + MENDING	02
035	0503012719	40-1 CHAIN X 113 LINK + MENDING	02
036	0503011721	40-1 CHAIN X 122 LINK + REDUCTION	02

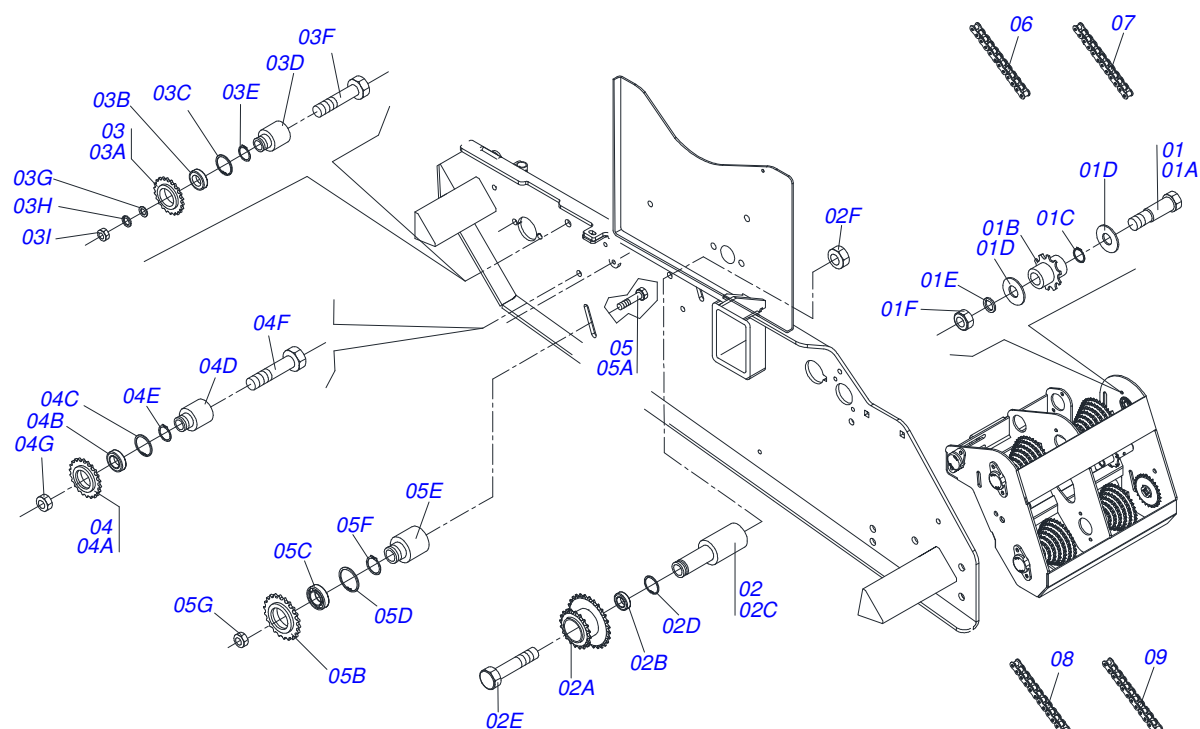 


Item	Code	Description	QT
001	0511053366	CHAIN TENSIONER	02
001A	0531019479	AXLE CHAIN GEAR	01
001B	0503031805	11Z 1/2" GEAR	01
001C	0503010302	501019 SEAL RING	01
001D	0511017302	FLAT WASHER	02
001E	0503010019	1/2" SPRING WASHER	01
001F	0503010060	1/2" NUT	01
002	0511050385	BEARING WITH	02
002A	0521061843	20Z DOBLE GEAR	01
002B	0503011410	ROLLER BEARING	02
002C	0551019175	DOUBLE GEAR AXLE	01
002D	0503010406	501025 CLAMPING RING (FOR AXLE)	01
002E	0501010163	5/8" X 4-1/2" BOLT	01
002F	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
003	0501058265	LOWER CHAIN TENSIONER ASSY	02
003A	0511062169	21Z P 1/2" GEAR	01
003B	0503011410	ROLLER BEARING	01
003C	0503011105	SEAL RING	01
003D	0531017086	50 AXLETIGHTENER	01
003E	0503010406	501025 CLAMPING RING (FOR AXLE)	01
003F	0503010762	5/8" X 3-12" BOLT	01
003G	0501012140	FLAT WASHER	01
003H	0503010027	SPRING WASHER	01
003I	0503010013	5/8" NUT	01
004	0511056387	INNER BEARING	02
004A	0511062169	21Z P 1/2" GEAR	01
004B	0503011410	ROLLER BEARING	01
004C	0503011105	SEAL RING	01
004D	0531017086	50 AXLETIGHTENER	01
004E	0503010406	501025 CLAMPING RING (FOR AXLE)	01
004F	0503010762	5/8" X 3-12" BOLT	01
004G	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
005	0501053126	FERTILIZER CHAIN TENSIONER ASSY	02


Item	Code	Description	QT
005A	0501011541	5/8" X 3" BOLT	01
005B	0511062169	21Z P 1/2" GEAR	01
005C	0503011410	ROLLER BEARING	01
005D	0503011105	SEAL RING	01
005E	0521018415	TIGHTENER AXLE	01
005F	0503010406	501025 CLAMPING RING (FOR AXLE)	01
005G	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
006	0503012143	78 CHAIN X 40-1 LINK + REDUCTION	02
007	0503012717	40-1 CHAIN X 101 LINK + MENDING	02
008	0503015124	40-1 X 5" CHAIN LINK + MENDING	02
009	0503011721	40-1 CHAIN X 122 LINK + REDUCTION	02

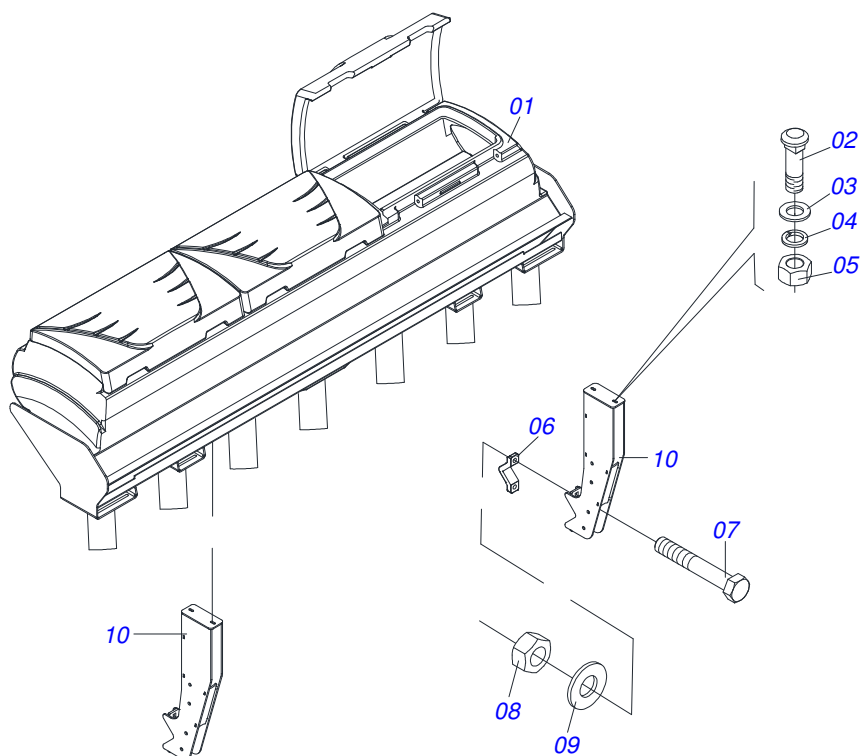 


Item	Code	Description	QT
001	0511057951	ASSEMBLY CSU	01
002	0501010942	3/8" X 1-1/4" BOLT	12
003	0501010984	FLAT WASHER	12
004	0503010025	3/8 SPRING WASHER	12
005	0503010026	3/8" NUT	12
006	0502010175	HITCH CLAMP	06
007	0501011543	5/8" X 4" BOLT	12
008	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	12
009	0501010453	FLAT WASHER	12
010	0521063064	SUPPORT TOWER SILO SEED CSU	06

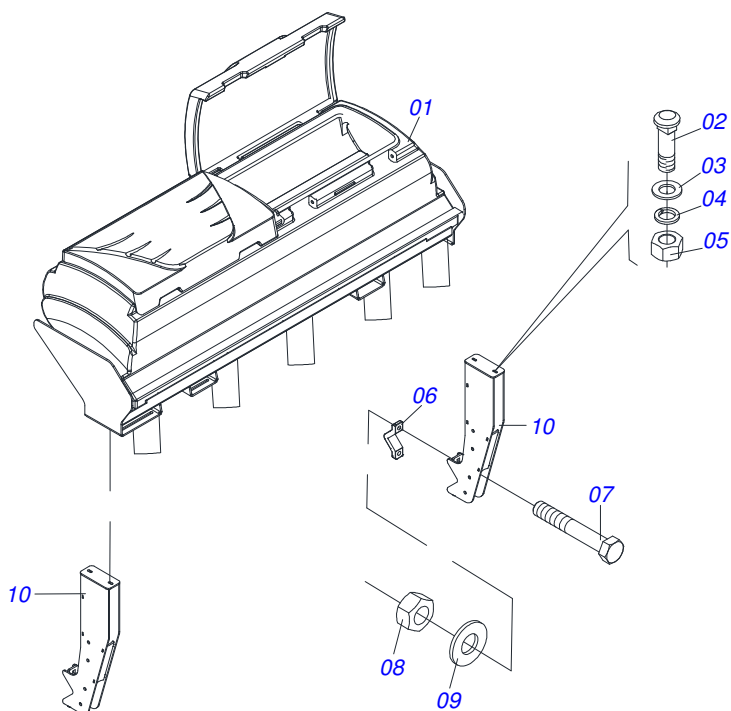 


Item	Code	Description	QT
001	0511057755	ASSEMBLY CSU	01
002	0501010942	3/8" X 1-1/4" BOLT	12
003	0501010984	FLAT WASHER	12
004	0503010025	3/8 SPRING WASHER	12
005	0503010026	3/8" NUT	12
006	0502010175	HITCH CLAMP	06
007	0501011543	5/8" X 4" BOLT	12
008	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	12
009	0501010453	FLAT WASHER	12
010	0521063064	SUPPORT TOWER SILO SEED CSU	06

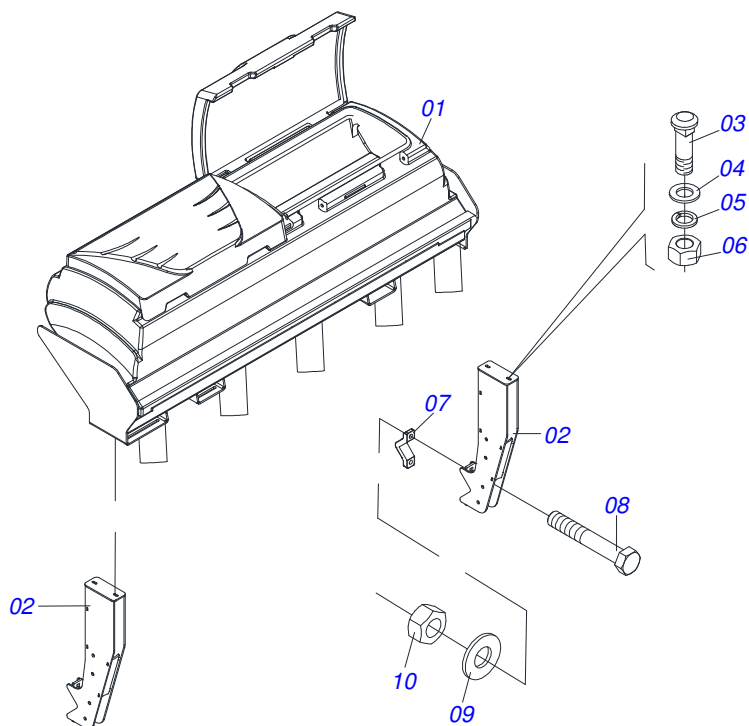 


Item	Code	Description	QT
001	0511058564	ASSEMBLY CSU	01
002	0521063064	SUPPORT TOWER SILO SEED CSU	06
003	0501010942	3/8" X 1-1/4" BOLT	12
004	0501010984	FLAT WASHER	12
005	0503010025	3/8 SPRING WASHER	12
006	0503010026	3/8" NUT	12
007	0502010175	HITCH CLAMP	06
008	0501011543	5/8" X 4" BOLT	12
009	0501010453	FLAT WASHER	12
010	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	12

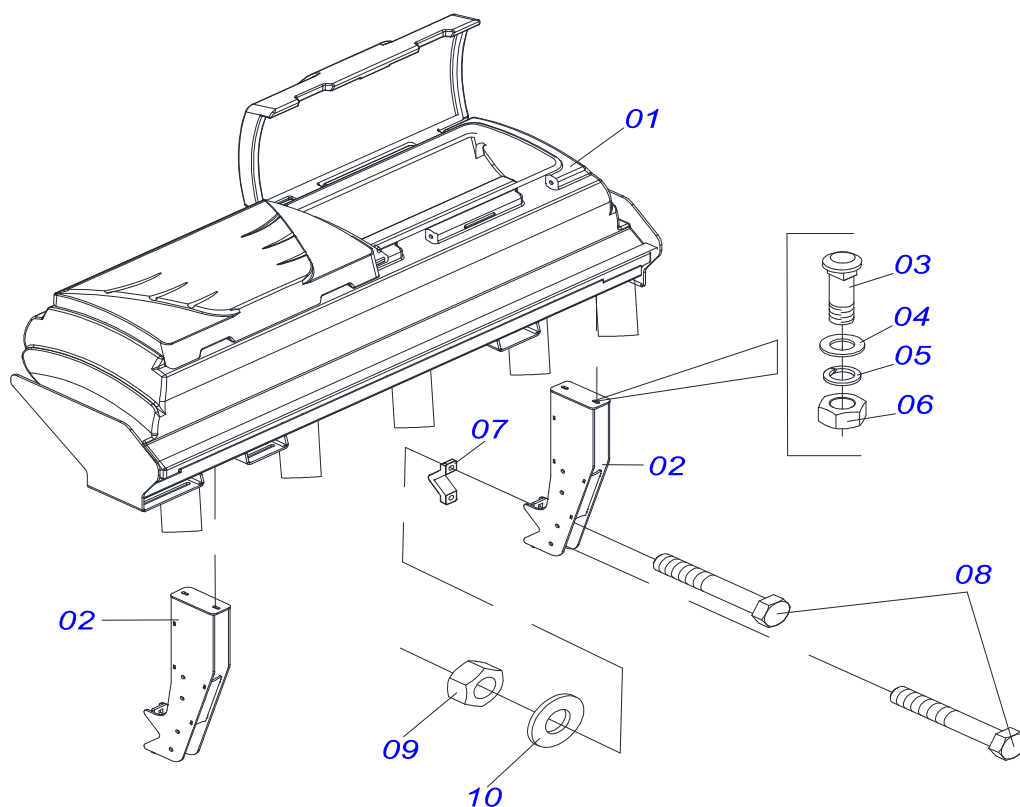 


Item	Code	Description	QT
001	0511058580	ASSEMBLY CSU	01
002	0521063064	SUPPORT TOWER SILO SEED CSU	06
003	0501010942	3/8" X 1-1/4" BOLT	12
004	0501010984	FLAT WASHER	12
005	0503010025	3/8 SPRING WASHER	12
006	0503010026	3/8" NUT	12
007	0502010175	HITCH CLAMP	06
008	0501011543	5/8" X 4" BOLT	12
009	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	12
010	0501012140	FLAT WASHER	12

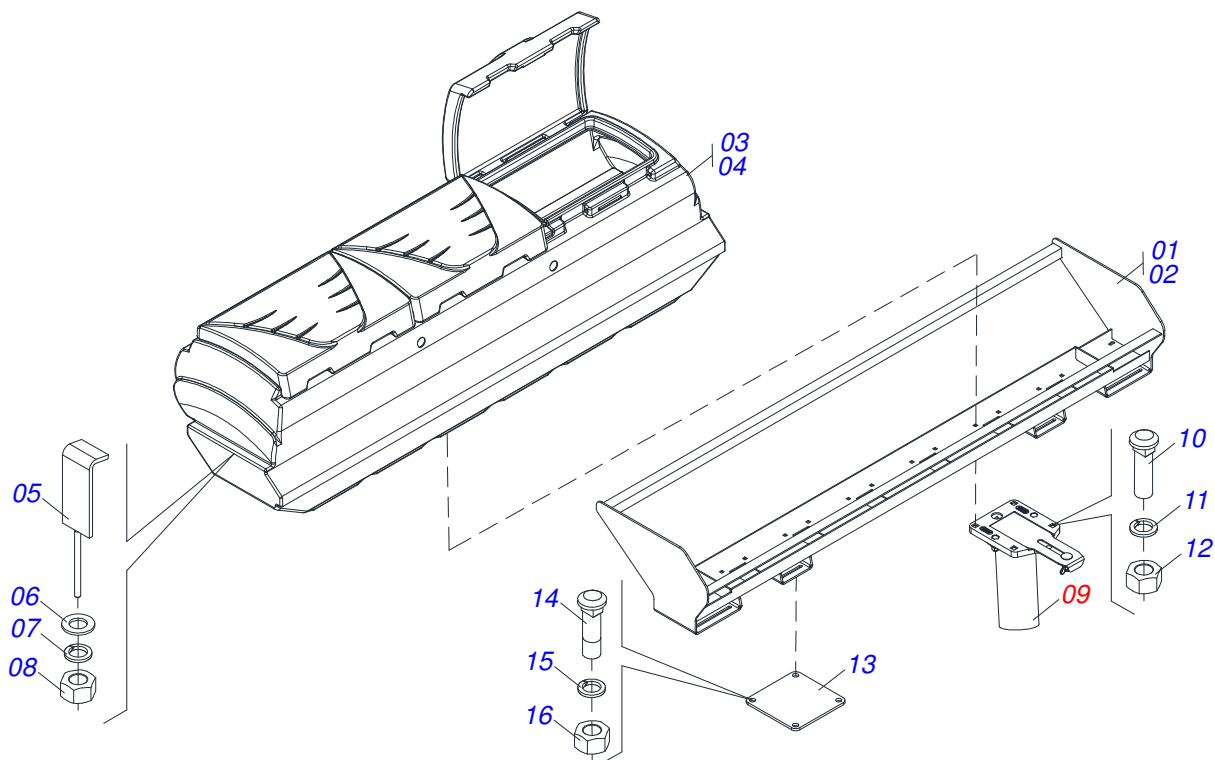 


Item	Code	Description	QT
001	0521064748	07 MOUTHS CSU SUPPORT	02
002	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS	01
003	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED	02
004	0503061899	REAR BEAN FERTILIZER ASSY	01
005	0521063401	SEED BOX ONLY FIXING LOCK	06
006	0501010984	FLAT WASHER	06
007	0503010025	3/8 SPRING WASHER	06
008	0503010026	3/8" NUT	06
009	0511057690	SEED TUBE ASSY WITH 3 ADJUSTING POSITION	13
010	0501010942	3/8" X 1-1/4" BOLT	52
011	0503010025	3/8 SPRING WASHER	52
012	0503010026	3/8" NUT	52
013	0571015773	CAP SUPPORT SEED BOX ONLY	03
014	0501011643	3/8 X 1"BOLT	12
015	0503010025	3/8 SPRING WASHER	12
016	0503010026	3/8" NUT	12

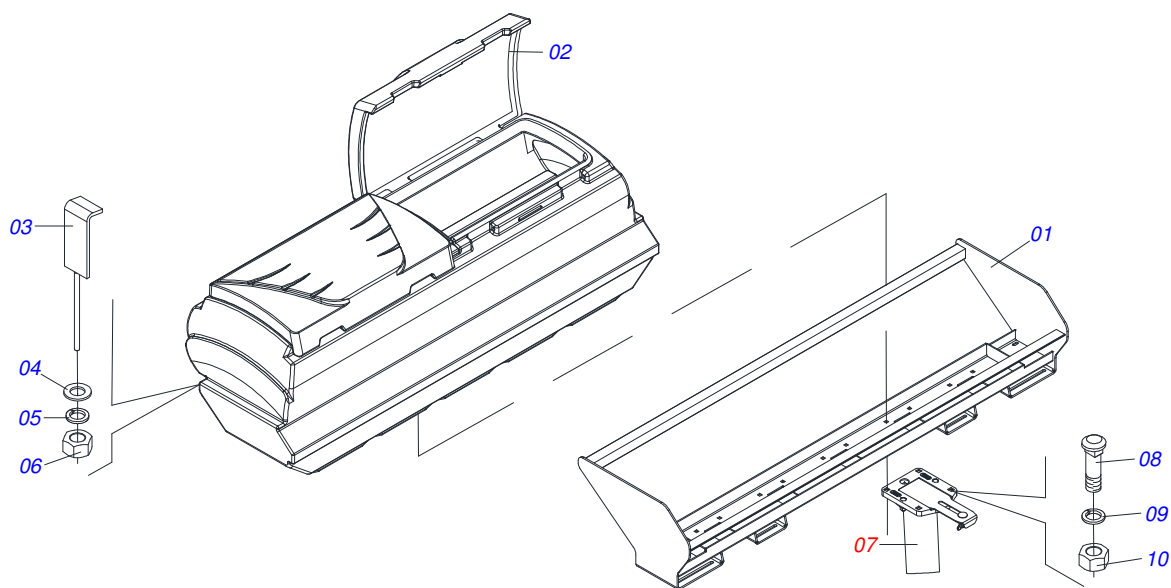 


Item	Code	Description	QT
001	0521064748	07 MOUTHS CSU SUPPORT	03
002	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED	03
003	0521063401	SEED BOX ONLY FIXING LOCK	06
004	0501010984	FLAT WASHER	06
005	0503010025	3/8 SPRING WASHER	06
006	0503010026	3/8" NUT	06
007	0511057690	SEED TUBE ASSY WITH 3 ADJUSTING POSITION	15
008	0501010942	3/8" X 1-1/4" BOLT	60
009	0503010025	3/8 SPRING WASHER	60
010	0503010026	3/8" NUT	60

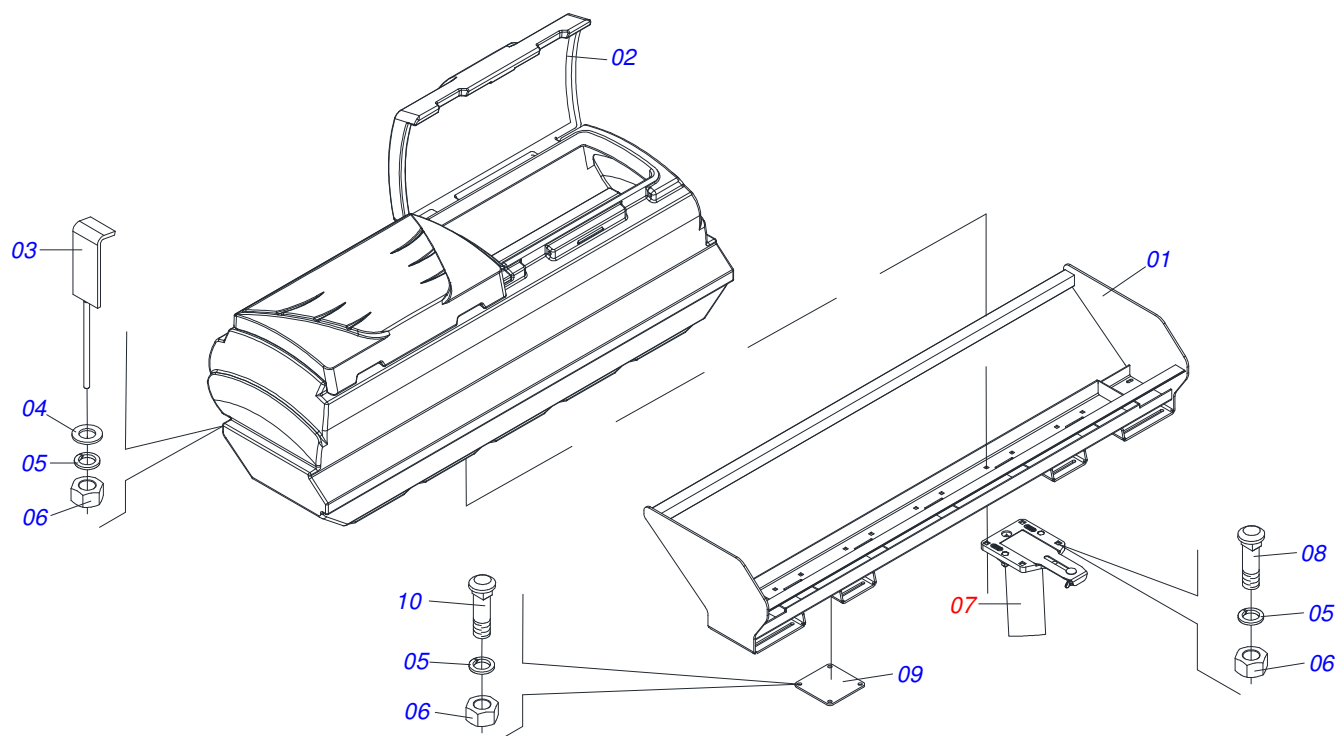 


Item	Code	Description	QT
001	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS	03
002	0503061899	REAR BEAN FERTILIZER ASSY	03
003	0521063401	SEED BOX ONLY FIXING LOCK	06
004	0501010984	FLAT WASHER	06
005	0503010025	3/8 SPRING WASHER	78
006	0503010026	3/8" NUT	78
007	0511057690	SEED TUBE ASSY WITH 3 ADJUSTING POSITION	15
008	0501010942	3/8" X 1-1/4" BOLT	60
009	0571015773	CAP SUPPORT SEED BOX ONLY	03
010	0501011643	3/8 X 1" BOLT	12

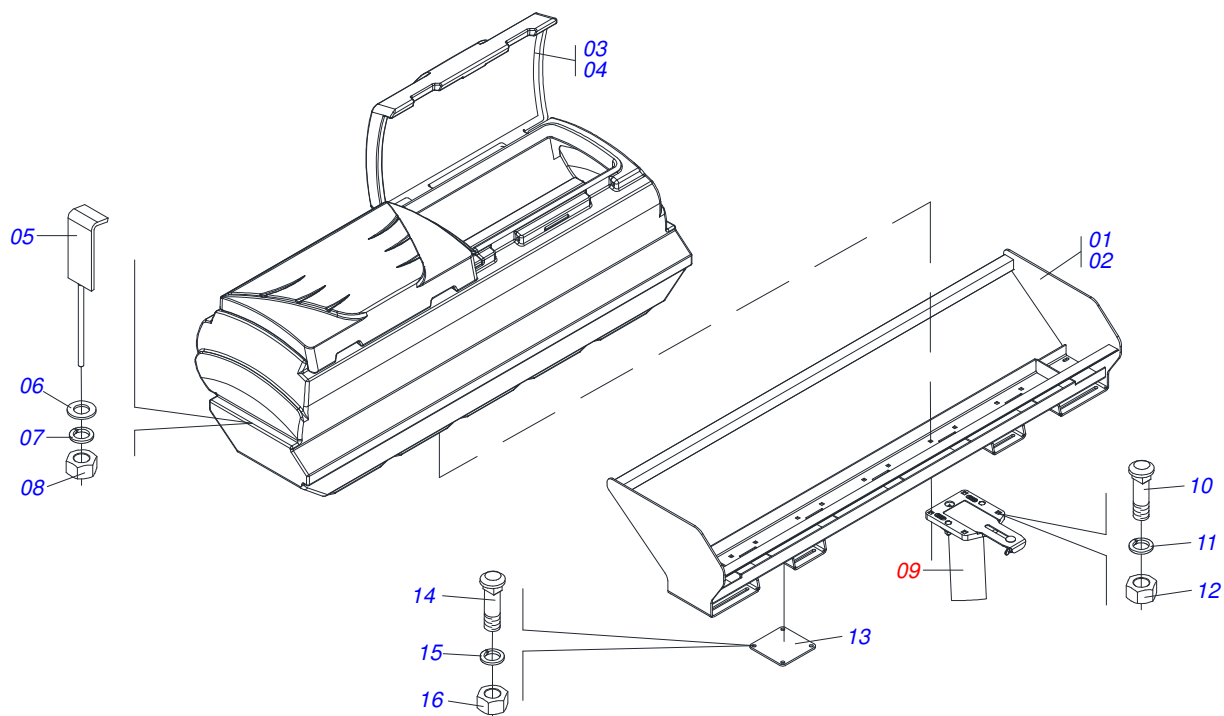 


Item	Code	Description	QT
001	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS	02
002	0521064874	07 MOUTHS SUPPORT BOX SEED ONLY	01
003	0503061899	REAR BEAN FERTILIZER ASSY	02
004	0503062165	HOPPER FERTILIZER 07 MOUTHS FRONT	01
005	0521063401	SEED BOX ONLY FIXING LOCK	06
006	0501010984	FLAT WASHER	06
007	0503010025	3/8 SPRING WASHER	06
008	0503010026	3/8" NUT	06
009	0511057690	SEED TUBE ASSY WITH 3 ADJUSTING POSITION	15
010	0501010942	3/8" X 1-1/4" BOLT	60
011	0503010025	3/8 SPRING WASHER	60
012	0503010026	3/8" NUT	60
013	0571015773	CAP SUPPORT SEED BOX ONLY	04
014	0501011643	3/8 X 1" BOLT	16
015	0503010025	3/8 SPRING WASHER	16
016	0503010026	3/8" NUT	16

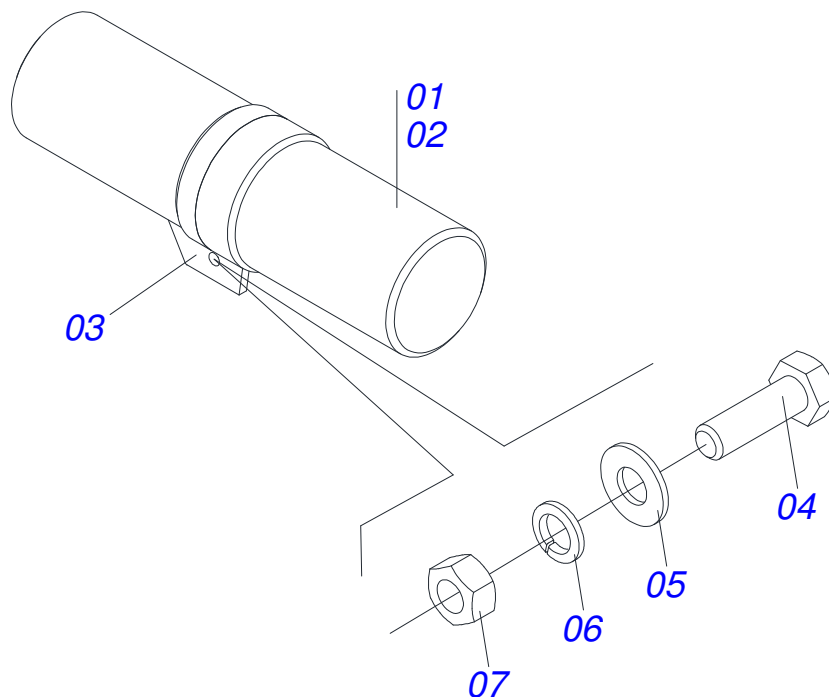 

Item	Code	Description	QT
001	0503060100	HAND BOOK COMPARTMENT	01
002	0511031859	BAG WITH MANUAL	01
003	0503010267	NYLON CLAMP	01
004	0503010363	5/16" X 1" BOLT	01
005	0501010694	FLAT WASHER	01
006	0503010179	SPRING WASHER	01
007	0503010337	5/16" NUT	01

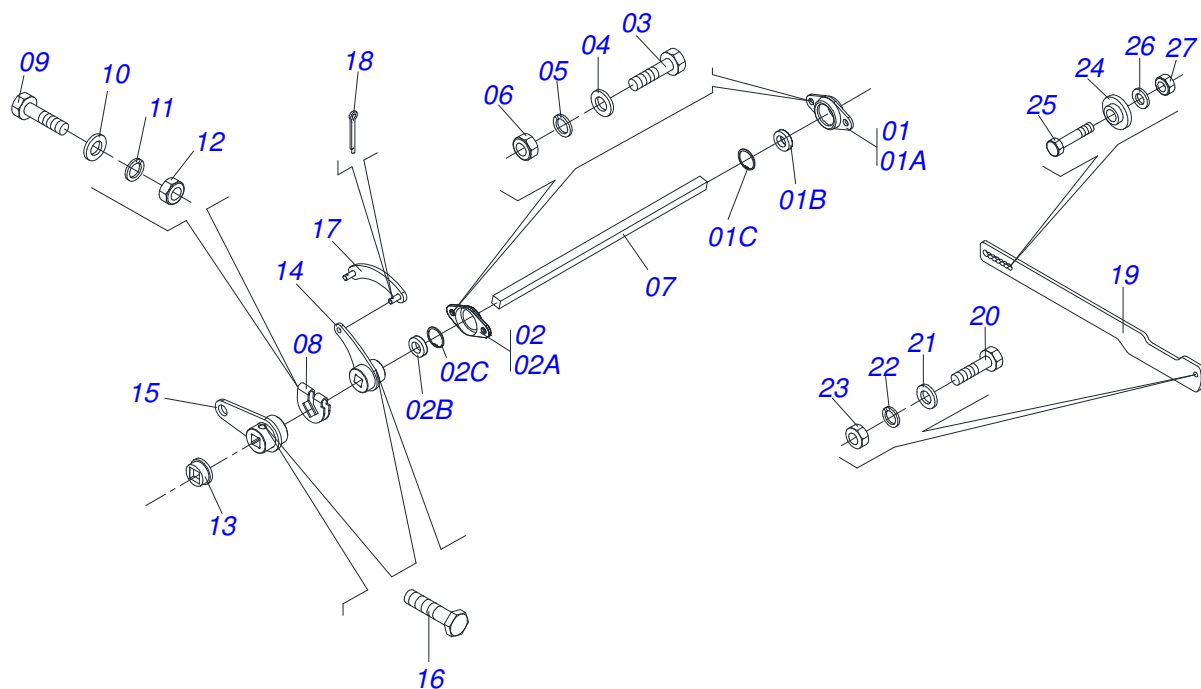 


Item	Code	Description	QT
001	0501056271	GEAR BOX CLOSE BEARINGONE	02
001A	0502012310	GEAR BOX CLOSE BEARING	02
001B	0503013462	BEARING WITH BALL BEARING	02
001C	0503011105	SEAL RING	02
002	0501056444	BEARING WITH BALL BEARING	02
002A	0502011697	BEARING OF THE GEAR BOX	02
002B	0503013462	BEARING WITH BALL BEARING	02
002C	0503011105	SEAL RING	02
003	0503011953	5/16" X 1" BOLT	08
004	0501010694	FLAT WASHER	08
005	0503010179	SPRING WASHER	08
006	0503010337	5/16" NUT	08
007	0511014218	3/4" X 28.7"SQUARE SHAFT	02
008	0521010691	AXLE FASTENER	04
009	0503010373	1/4" X 2" BOLT	04
010	0511017303	FLAT WASHER	04
011	0503010143	SPRING WASHER	04
012	0503010144	1/4" NUT	04
013	0503030303	SUPPORT WASHER	04
014	0521061852	LEVER RATCHET	02
015	0521061847	AXLE ADRIVING ASSY	02
016	0503030679	1/2" X 1-1/4" BOLT	04
017	0521061849	DISASSEMBLE LEVER	02
018	0503010140	1/8" X 3/4" COTTERPIN	04
019	0571012792	LOWER LEVER	02
020	0503011082	C1/2" X 1.3/4" BOLT	02
021	0511017302	FLAT WASHER	04
022	0503010019	1/2" SPRING WASHER	02
023	0503010060	1/2" NUT	02
024	0561016797	SLEEVE UNION LEVER ARM/DESARM	02
025	0501010096	3/8" X 2" BOLT	02
026	0501010984	FLAT WASHER	04
027	0503010026	3/8" NUT	04

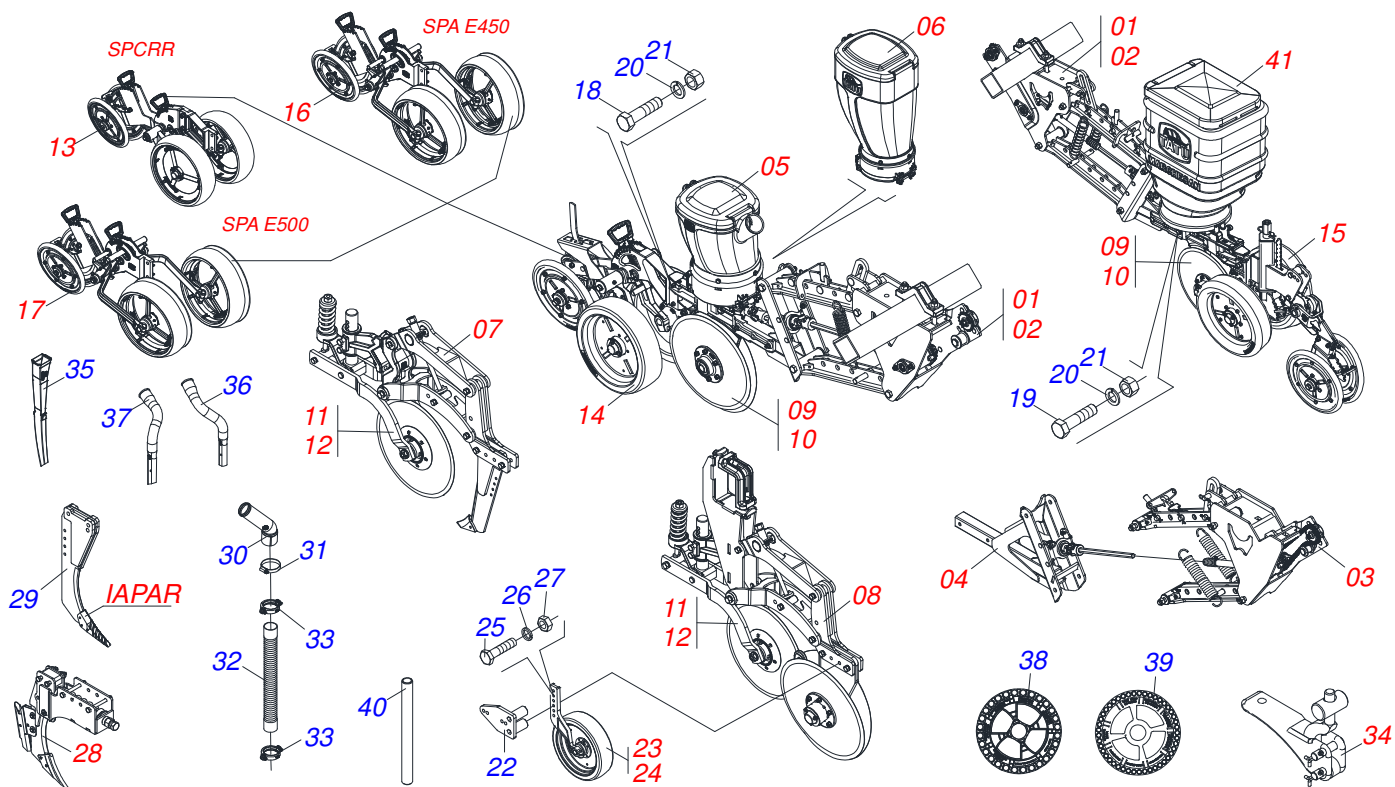 

Item	Code	Description	13 15 L
01	0511052411	FRONT SEED LONG ROW WITH CARDAN	13 15
02	0511052410	FRONT SEED SHORT ROW WITH CARDAN	13 15
03	0521050843	FRONT SEED LONG	02 02
04	0521050835	CH MEC SM COP TRIO S-0117	02 02
05	0521050096	SEED DEPOSIT SYSTEM (CSU)	13 15
06	0511056608	TITANIUM SEED SYSTEM	13 15
07	0511053024	FERTILIZER SHORT LINE	13 15
08	0511053023	LONG FERTILIZER LINE	13 15
09	0511057955	RIGHT REAR SEED ROW ASSY	08 08
09.	0511057138	RIGHT REAR SEED ROW ASSY	08 08
09..	0511057136	RIGHT REAR SEED ROW ASSY	08 08
09...	0521041848	REAR RIGHT SEED ROW	08 08
10	0511057956	LEFT REAR SEED ROW ASSY	07 07
10.	0511057139	RIGHT REAR SEED ROW ASSY	07 07
10..	0511057137	RIGHT REAR SEED ROW ASSY	07 07
10...	0521041849	REAR LEFT SEED ROW	07 07
11	0511051818	18" BLADE DISC ASSY	13 15
12	0511051819	20 BLADE DISC ASSY	13 15
13	0521046501	DEPTH CONTROL AND PRESS WHEEL WITH FAST	13 15
14	0521046122	SYSTEM DEPTH COMPACTOR	13 15
15	0521044538	DEPHT WHIT REGULACION ANGLE COMPACT	13 15
16	0521044269	PRESS WHEELS/DEPTH ASSY	13 15
17	0521044460	SYSTEM PROF/COMPACT C E500 A 900 SPA	13 15
18	0503010905	1/2" X 2-1/4" BOLT	26 30
19	0503010706	1/2" X 4.1/2" BOLT	26 30
20	0503010019	1/2" SPRING WASHER	52 60
21	0503010060	1/2" NUT	52 60
22	0511065909	DEPTH FIXER BASE	13 15
23	0501054481	DEPTH CONTROL RIGTH ARM WITH TIRE	13 15
24	0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	13 15
25	0503010547	1/2" X 4" BOLT	26 30
26	0503010019	1/2" SPRING WASHER	26 30
27	0503010060	1/2" NUT	26 30

Item	Code	Description	13 15 L
28	0511059452	HDA BC COP S-0616	13 15
29	0501110723	SCARIFIER SPINDLE ASSY	13 15
30	0503031050	CURVED CONDUCTOR	13 15
31	0503010246	CLAMP	13 15
32	0571011730	PVC HOSE	13 15
33	0521050525	FIXER FERTILIZER CONDUCTOR	26 30
34	0511052024	FAST CLOSING SET	13 15
35	0503033672	NOZZLE WITHOUT TITANIUM	13 15
36	0581010082	FERTILIZER SOCKET RIGHT	13 15
37	0581010083	FERTILIZER SOCKET LEFT	13 15
38	0503062066	DISC SET WITH CORN RING	13 15
39	0503062067	DISC SET / RING SOY 90F TITANIUM	13 15
40	0531013600	PRESS ADJUSTMENT LEVER	01 01
41	0501052234	SEED SISTEM ASSY	13 15

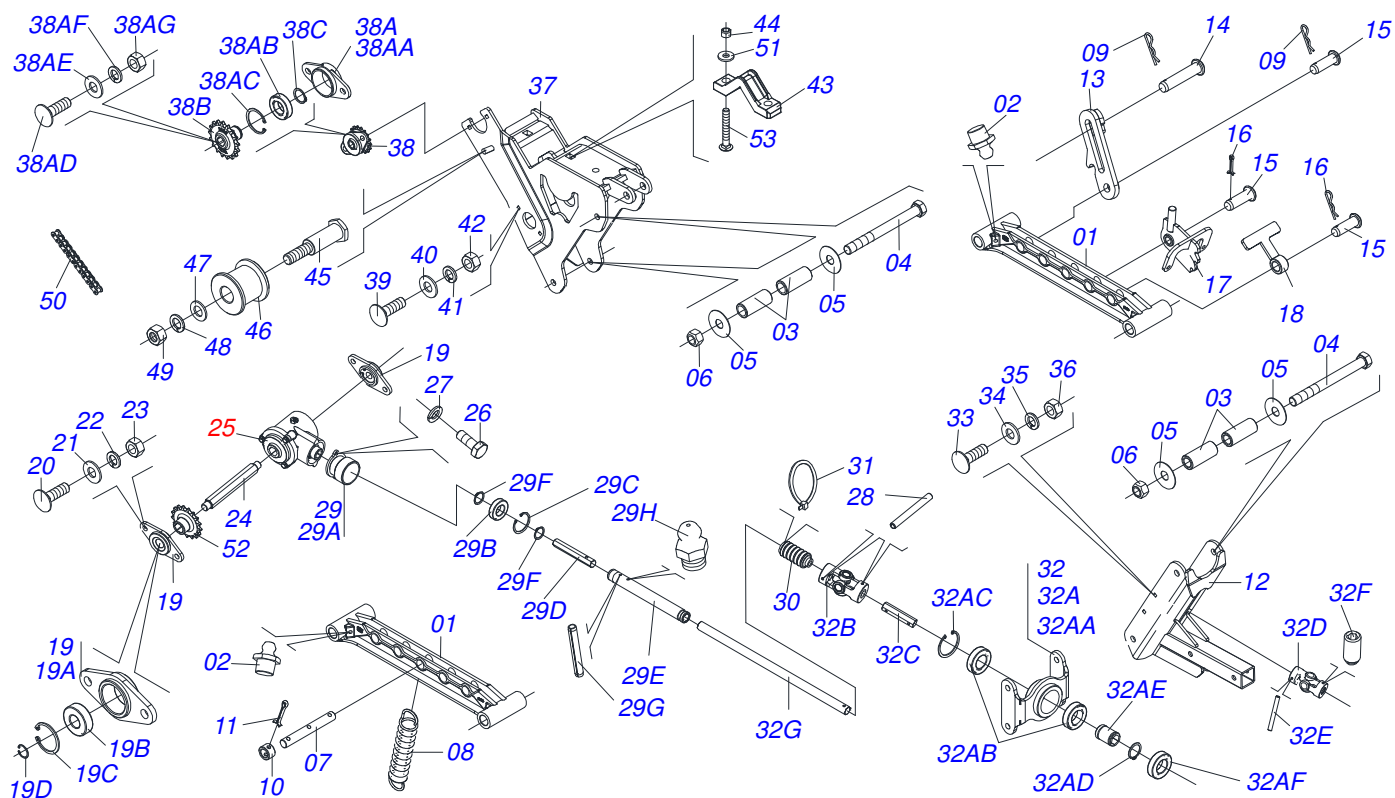 


Item	Code	Description	QT
001	0502012784	DRIVER PIVOT	02
002	0503010002	1800 GREASE FITTING	04
003	0531015151	0.6" X 1" X 2.4" SLEEVE	08
004	0501010422	5/8" X 6-1/2" BOLT	04
005	0531015184	FLAT WASHER	08
006	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	04
007	0571012449	CONTROL AXLE	01
008	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING	02
009	0503030168	HAIR PIN	02
010	0571012448	LOCK SLEEVE AXLE REGULATION	01
011	0503010131	3/16" X 1-1/2" COTTERPIN	01
012	0521063526	SEED LINE REAR FRAME	01
013	0521065677	LIMITER	01
014	0571012443	COUPLING SHAFT	01
015	0571012442	COUPLING SHAFT	03
016	0503010131	3/16" X 1-1/2" COTTERPIN	02
017	0502012785	SEED ROW ADJUSTMENT LEVER ASSY	01
018	0502012814	BOX LEVER LOCK	01
019	0511054635	BEARING AXLE BODY	02
019A	0502012718	BEARIN BODY	01
019B	0503012882	BALL BEARING	01
019C	0503017011	SEAL RING	01
019D	0503011945	503050 CLAMPING RING (FOR AXLE)	01
020	0503011953	5/16" X 1" BOLT	04
021	0501010694	FLAT WASHER	04
022	0503010179	SPRING WASHER	04
023	0503010337	5/16" NUT	04
024	0571012441	TRANSMISSION AXLE	01
025	0511054884	TRANSMISSION BOX	01
026	0503011378	M6 X 1" BOLT	02
027	0503015110	M06 SPRING WASHER	02
028	0503011855	0.2" X 1.8" SPRING PIN	01
029	0511052393	BEARING FOLLOWER ROW ASSY	01

FRONT SEED LONG ROW WITH CARDAN

0511052411

Item	Code	Description	QT
029A	0521063532	BEARING FOLLOWER ROW ASSY	01
029B	0503011410	ROLLER BEARING	01
029C	0503011105	SEAL RING	01
029D	0571012450	COP FLEX AXLE	01
029E	0571012459	COP FLEX AXLE	01
029F	0503010406	501025 CLAMPING RING (FOR AXLE)	02
029G	0503015356	SPRING PIN	01
029H	0503010691	1/4" GREASE FITTING	01
030	0503032984	HOOD HEX AXLE ROW	01
031	0503013100	NYLON CLAMP	01
032	0521041482	BEARING ROW SEED ASSY	01
032A	0511052413	ROW SEED BEARING	01
032AA	0521063530	ROW BEARING	01
032AB	0503011410	ROLLER BEARING	02
032AC	0503011105	SEAL RING	01
032AD	0503010406	501025 CLAMPING RING (FOR AXLE)	02
032AE	0571017815	BEARING AXLE BODY	01
032AF	0503017008	SEAL RING	01
032B	0501056296	UNIVERSAL JOINT ASSY	01
032C	0571017900	5/8" X 77" HEX AXLE	01
032D	0561014778	HEX UNIVERSAL JOINT	01
032E	0503011855	0.2" X 1.8" SPRING PIN	03
032F	0503013958	1/4" X 1" BOLT	01
032G	0571012452	HEX AXLE	01
033	0503011953	5/16" X 1" BOLT	04
034	0501010694	FLAT WASHER	04
035	0503010179	SPRING WASHER	04
036	0503010337	5/16" NUT	04
037	0521063524	FRAME FRONT LINE SEED	01
038	0511050609	BEARING WITH 17Z GEAR	01
038A	0511050617	FRONT SEED ROW BEARING	01
038AA	0502011697	BEARING OF THE GEAR BOX	01
038AB	0503011410	ROLLER BEARING	01
038AC	0503011105	SEAL RING	01
038AD	0503011953	5/16" X 1" BOLT	02
038AE	0501010694	FLAT WASHER	02
038AF	0503010179	SPRING WASHER	02
038AG	0503010337	5/16" NUT	02
038B	0561017909	17Z GEAR WITH HEX HOLE	01
038C	0503010406	501025 CLAMPING RING (FOR AXLE)	01
039	0503011953	5/16" X 1" BOLT	02
040	0501010694	FLAT WASHER	02
041	0503010179	SPRING WASHER	02
042	0503010337	5/16" NUT	02
043	1902010175	HITCH CLAMP	01
044	0503010811	5/8" UNF SELF ADJUSTING NUT	02
045	0531019479	AXLE CHAIN GEAR	01
046	0541016454	PULLEY	01
047	0503011828	FLAT WASHER	01
048	0503010019	1/2" SPRING WASHER	01
049	0503010060	1/2" NUT	01
050	0503012142	40-1 CHAIN X 61 LINK + MENDING	01
051	0501012140	FLAT WASHER	02
052	0502012782	17Z GEAR WITH HEX HOLE	01
053	0503817859	5/8" X 4.3/4" BOLT	02

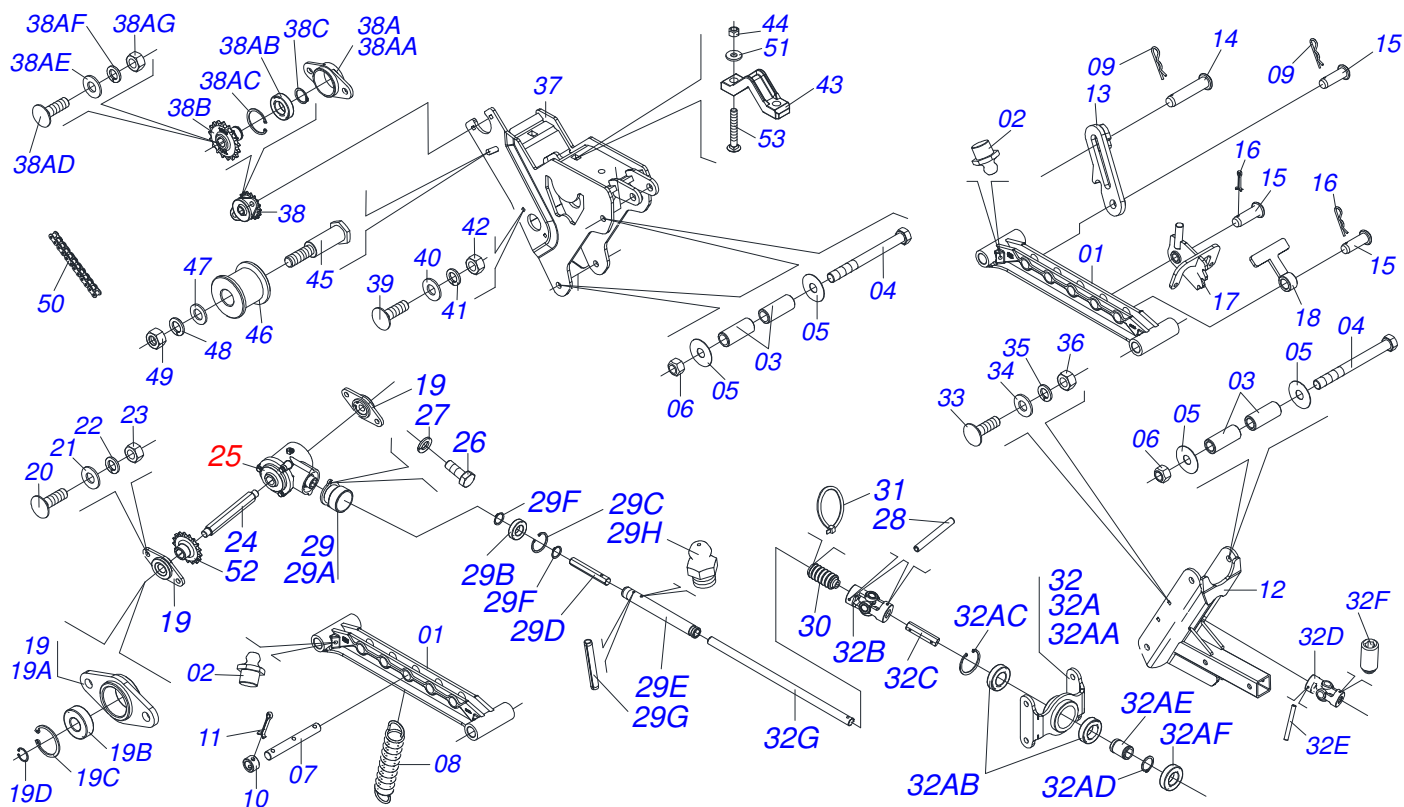 


Item	Code	Description	QT
001	0502012784	DRIVER PIVOT	02
002	0503010002	1800 GREASE FITTING	04
003	0531015151	0.6" X 1" X 2.4" SLEEVE	08
004	0501010422	5/8" X 6-1/2" BOLT	04
005	0531015184	FLAT WASHER	08
006	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	04
007	0571012449	CONTROL AXLE	01
008	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING	02
009	0503030168	HAIR PIN	02
010	0571012448	LOCK SLEEVE AXLE REGULATION	01
011	0503010131	3/16" X 1-1/2" COTTERPIN	01
012	0521063526	SEED LINE REAR FRAME	01
013	0521065677	LIMITER	01
014	0571012443	COUPLING SHAFT	01
015	0571012442	COUPLING SHAFT	03
016	0503010131	3/16" X 1-1/2" COTTERPIN	02
017	0502012785	SEED ROW ADJUSTMENT LEVER ASSY	01
018	0502012814	BOX LEVER LOCK	01
019	0511054635	BEARING AXLE BODY	02
019A	0502012718	BEARIN BODY	01
019B	0503012882	BALL BEARING	01
019C	0503017011	SEAL RING	01
019D	0503011945	503050 CLAMPING RING (FOR AXLE)	01
020	0503011953	5/16" X 1" BOLT	04
021	0501010694	FLAT WASHER	04
022	0503010179	SPRING WASHER	04
023	0503010337	5/16" NUT	04
024	0571012441	TRANSMISSION AXLE	01
025	0511054884	TRANSMISSION BOX	01
026	0503011378	M6 X 1" BOLT	02
027	0503015110	M06 SPRING WASHER	02
028	0503011855	0.2" X 1.8" SPRING PIN	01
029	0511052393	BEARING FOLLOWER ROW ASSY	01

FRONT SEED SHORT ROW WITH CARDAN


0511052410

Item	Code	Description	QT
029A	0521063532	BEARING FOLLOWER ROW ASSY	01
029B	0503011410	ROLLER BEARING	01
029C	0503011105	SEAL RING	01
029D	0571012450	COP FLEX AXLE	01
029E	0571012459	COP FLEX AXLE	01
029F	0503010406	501025 CLAMPING RING (FOR AXLE)	02
029G	0503015356	SPRING PIN	01
029H	0503010691	1/4" GREASE FITTING	01
030	0503032984	HOOD HEX AXLE ROW	01
031	0503013100	NYLON CLAMP	01
032	0521041482	BEARING ROW SEED ASSY	01
032A	0511052413	ROW SEED BEARING	01
032AA	0521063530	ROW BEARING	01
032AB	0503011410	ROLLER BEARING	02
032AC	0503011105	SEAL RING	01
032AD	0503010406	501025 CLAMPING RING (FOR AXLE)	02
032AE	0571017815	BEARING AXLE BODY	01
032AF	0503017008	SEAL RING	01
032B	0501056296	UNIVERSAL JOINT ASSY	01
032C	0571017900	5/8" X 77" HEX AXLE	01
032D	0561014778	HEX UNIVERSAL JOINT	01
032E	0503011855	0.2" X 1.8" SPRING PIN	03
032F	0503013958	1/4" X 1" BOLT	01
032G	0571012452	HEX AXLE	01
033	0503011953	5/16" X 1" BOLT	04
034	0501010694	FLAT WASHER	04
035	0503010179	SPRING WASHER	04
036	0503010337	5/16" NUT	04
037	0521063525	SHORT SEED ROW FRONT	01
038	0511050609	BEARING WITH 17Z GEAR	01
038A	0511050617	FRONT SEED ROW BEARING	01
038AA	0502011697	BEARING OF THE GEAR BOX	01
038AB	0503011410	ROLLER BEARING	01
038AC	0503011105	SEAL RING	01
038AD	0503011953	5/16" X 1" BOLT	02
038AE	0501010694	FLAT WASHER	02
038AF	0503010179	SPRING WASHER	02
038AG	0503010337	5/16" NUT	02
038B	0561017909	17Z GEAR WITH HEX HOLE	01
038C	0503010406	501025 CLAMPING RING (FOR AXLE)	01
039	0503011953	5/16" X 1" BOLT	02
040	0501010694	FLAT WASHER	02
041	0503010179	SPRING WASHER	02
042	0503010337	5/16" NUT	02
043	1902010175	HITCH CLAMP	01
044	0503010811	5/8" UNF SELF ADJUSTING NUT	02
045	0531019479	AXLE CHAIN GEAR	01
046	0541016454	PULLEY	01
047	0503011828	FLAT WASHER	01
048	0503010019	1/2" SPRING WASHER	01
049	0503010060	1/2" NUT	01
050	0503016501	40-1 X 49 CHAIN LINK + MENDING	01
051	0501012140	FLAT WASHER	02
052	0502012782	17Z GEAR WITH HEX HOLE	01
053	0503817859	5/8" X 4.3/4" BOLT	02

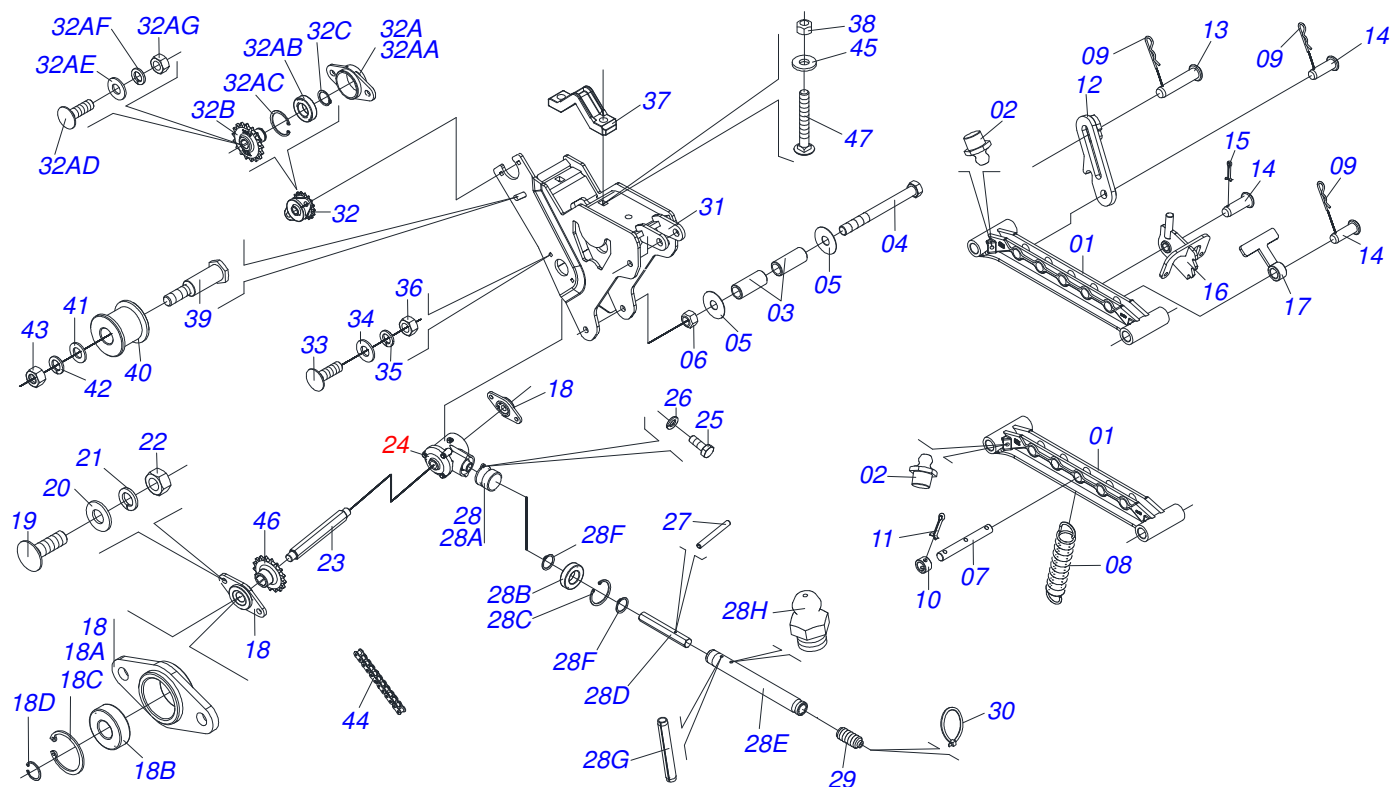 


Item	Code	Description	QT
001	0502012784	DRIVER PIVOT	02
002	0503010002	1800 GREASE FITTING	04
003	0581014435	SLEEVE ARM LINE SEED	08
004	0501010422	5/8" X 6-1/2" BOLT	04
005	0531015184	FLAT WASHER	08
006	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	04
007	0571012449	CONTROL AXLE	01
008	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING	02
009	0503030168	HAIR PIN	02
010	0571012448	LOCK SLEEVE AXLE REGULATION	01
011	0503010131	3/16" X 1-1/2" COTTERPIN	01
012	0521065677	LIMITER	01
013	0571012443	COUPLING SHAFT	01
014	0571012442	COUPLING SHAFT	03
015	0503010131	3/16" X 1-1/2" COTTERPIN	02
016	0502012785	SEED ROW ADJUSTMENT LEVER ASSY	01
017	0502012814	BOX LEVER LOCK	01
018	0511054635	BEARING AXLE BODY	02
018A	0502012718	BEARIN BODY	01
018B	0503012882	BALL BEARING	01
018C	0503017011	SEAL RING	01
018D	0503011945	503050 CLAMPING RING (FOR AXLE)	01
019	0503011953	5/16" X 1" BOLT	04
020	0501010694	FLAT WASHER	04
021	0503010179	SPRING WASHER	04
022	0503010337	5/16" NUT	04
023	0571012441	TRANSMISSION AXLE	01
024	0511054884	TRANSMISSION BOX	01
025	0503011378	M6 X 1" BOLT	02
026	0503015110	M06 SPRING WASHER	02
027	0503011855	0.2" X 1.8" SPRING PIN	01
028	0511052393	BEARING FOLLOWER ROW ASSY	01
028A	0521063532	BEARING FOLLOWER ROW ASSY	01


Item	Code	Description	QT
028B	0503011410	ROLLER BEARING	01
028C	0503011105	SEAL RING	01
028D	0571012450	COP FLEX AXLE	01
028E	0571012459	COP FLEX AXLE	01
028F	0503010406	501025 CLAMPING RING (FOR AXLE)	02
028G	0503015356	SPRING PIN	01
028H	0503010691	1/4" GREASE FITTING	01
029	0503032984	HOOD HEX AXLE ROW	01
030	0503013100	NYLON CLAMP	01
031	0521063524	FRAME FRONT LINE SEED	01
032	0511050609	BEARING WITH 17Z GEAR	01
032A	0511050617	FRONT SEED ROW BEARING	01
032AA	0502011697	BEARING OF THE GEAR BOX	01
032AB	0503011410	ROLLER BEARING	01
032AC	0503011105	SEAL RING	01
032AD	0503011953	5/16" X 1" BOLT	02
032AE	0501010694	FLAT WASHER	02
032AF	0503010179	SPRING WASHER	02
032AG	0503010337	5/16" NUT	02
032B	0503010406	501025 CLAMPING RING (FOR AXLE)	01
032C	0502012819	17Z GEAR WITH HEX HOLE	01
033	0503011953	5/16" X 1" BOLT	02
034	0501010694	FLAT WASHER	02
035	0503010179	SPRING WASHER	02
036	0503010337	5/16" NUT	02
037	1902010175	HITCH CLAMP	01
038	0503010811	5/8" UNF SELF ADJUSTING NUT	02
039	0531019479	AXLE CHAIN GEAR	01
040	0541016454	PULLEY	01
041	0503011828	FLAT WASHER	01
042	0503010019	1/2" SPRING WASHER	01
043	0503010060	1/2" NUT	01
044	0503012142	40-1 CHAIN X 61 LINK + MENDING	01
045	0501012140	FLAT WASHER	02
046	0502012782	17Z GEAR WITH HEX HOLE	01
047	0503817859	5/8" X 4.3/4" BOLT	02

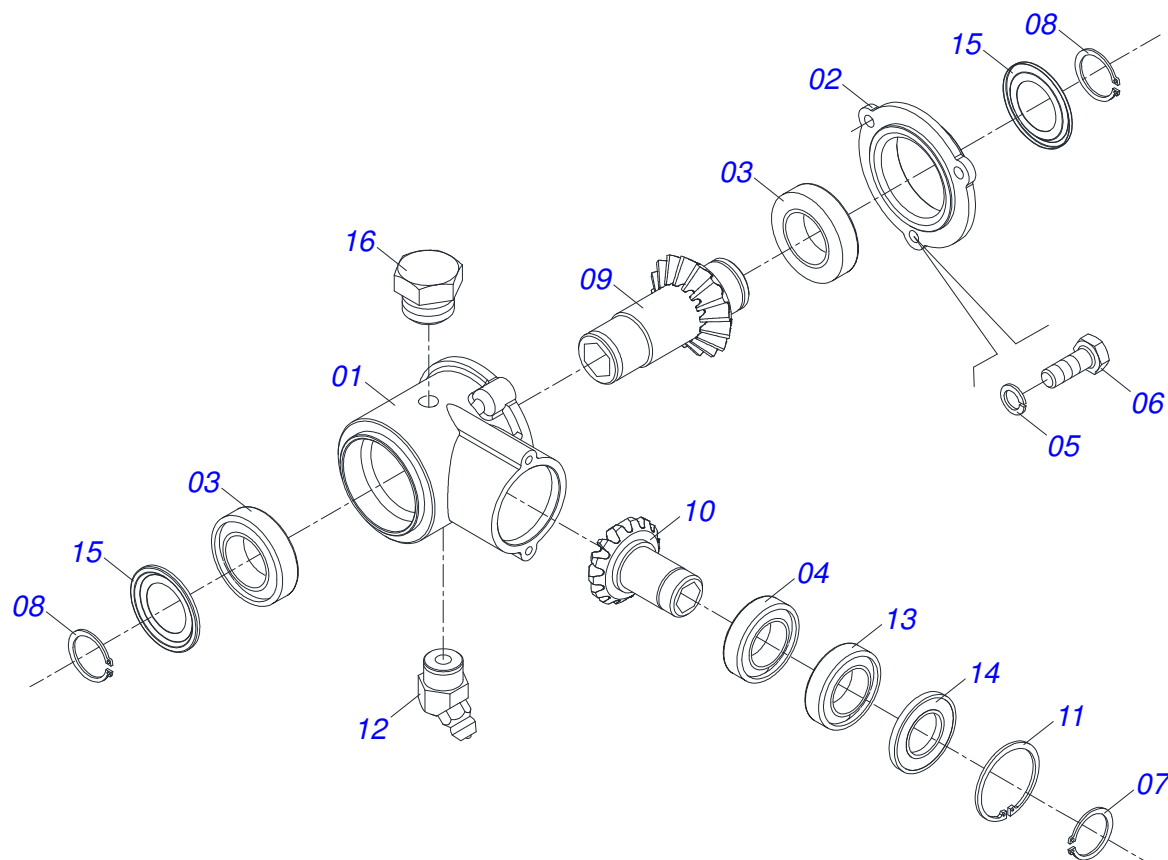 


Item	Code	Description	QT
01	0502012465	TRANSMISSION HUB	01
02	0502012464	BOX TRANSMISSION COVER	01
03	0503016995	6006 BALL BEARING	02
04	0503015895	6005 Z BALL BEARING	01
05	0503010143	SPRING WASHER	03
06	0503011378	M6 X 1" BOLT	03
07	0503010406	501025 CLAMPING RING (FOR AXLE)	01
08	0503010707	501030 CLAMPING RING (FOR AXLE)	02
09	0502040856	CONICAL GEAR	01
10	0502040857	CONICAL GEAR	01
11	0503011105	SEAL RING	01
12	0503010003	1845 GREASE FITTING	01
13	0503011409	6005 Z BALL BEARING	01
14	0503017008	SEAL RING	01
15	0503017007	SEAL RING	02
16	0511017907	1/8" BSPT X 6 PLUG	01

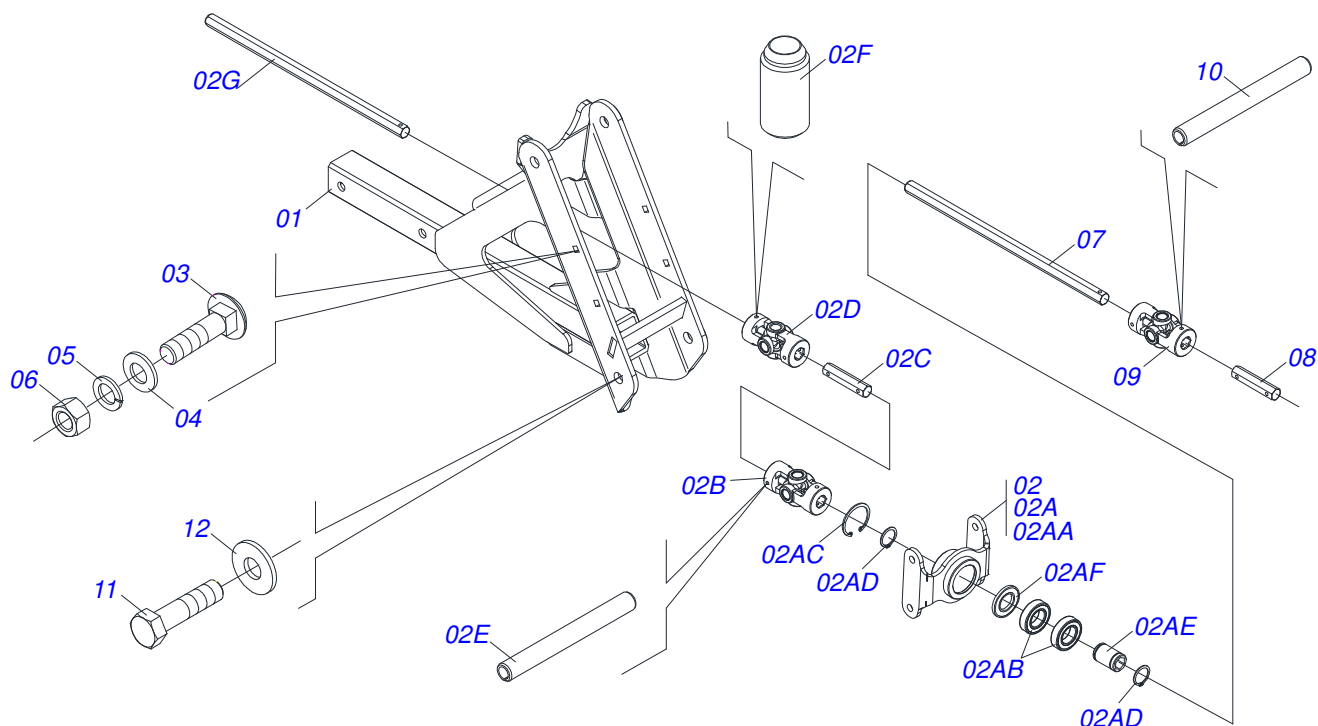 


Item	Code	Description	QT
001	0521067717	SEED LINE REAR FRAME	01
002	0521041482	BEARING ROW SEED ASSY	01
002A	0511052413	ROW SEED BEARING	01
002AA	0521063530	ROW BEARING	01
002AB	0503011410	ROLLER BEARING	02
002AC	0503011105	SEAL RING	01
002AD	0503010406	501025 CLAMPING RING (FOR AXLE)	02
002AE	0571017815	BEARING AXLE BODY	01
002AF	0503017008	SEAL RING	01
002B	0501056296	UNIVERSAL JOINT ASSY	01
002C	0571017900	5/8" X 77" HEX AXLE	01
002D	0561014778	HEX UNIVERSAL JOINT	01
002E	0503011855	0.2" X 1.8" SPRING PIN	03
002F	0503013958	1/4" X 1" BOLT	01
002G	0571012452	HEX AXLE	01
003	0503011953	5/16" X 1" BOLT	04
004	0501010984	FLAT WASHER	04
005	0503010179	SPRING WASHER	04
006	0503010337	5/16" NUT	04
007	0581014137	5/8" X HEX AXLE	01
008	0571012447	TRANSMISSION AXLE	01
009	0501056296	UNIVERSAL JOINT ASSY	01
010	0503011855	0.2" X 1.8" SPRING PIN	02
011	0503010237	3/8" X 1" BOLT	01
012	0501010984	FLAT WASHER	01

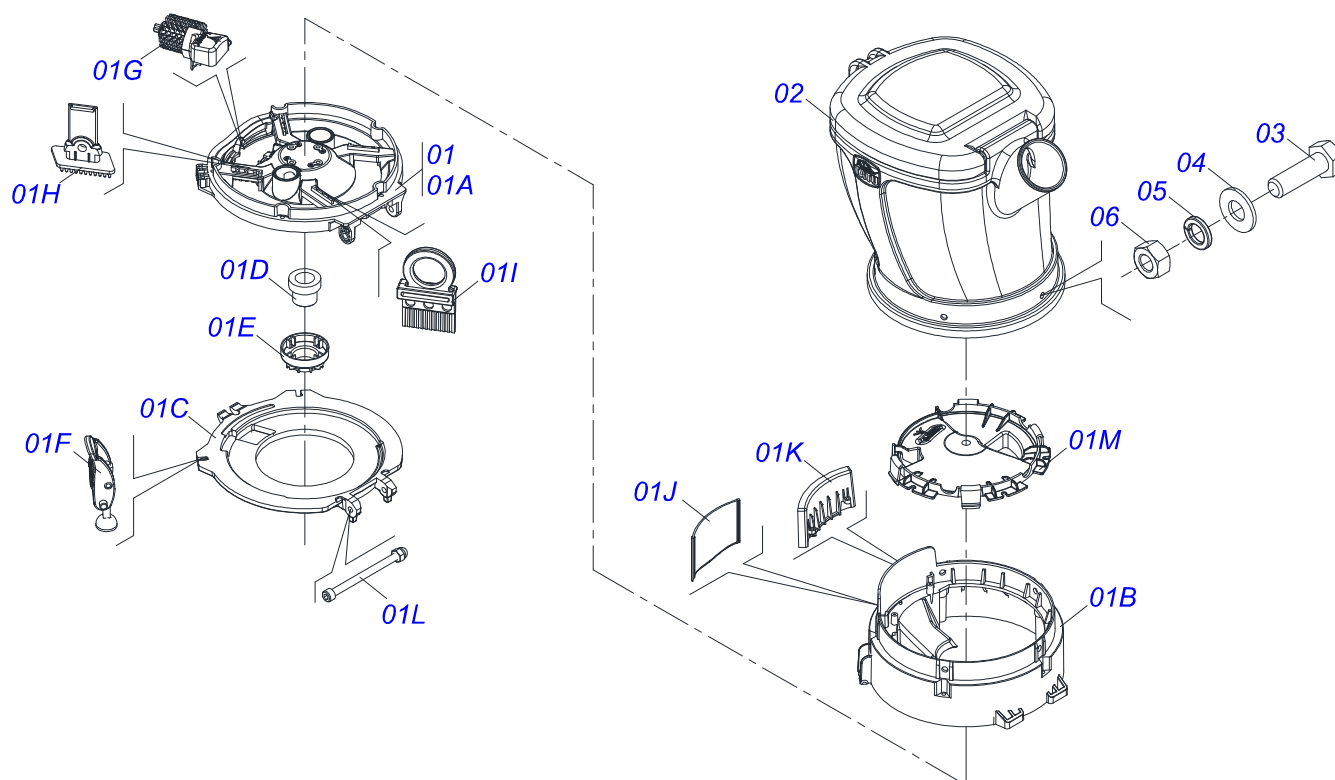 

Item	Code	Description	QT
01	0511052058	SEED SYSTEM TITANIUM	01
01A	0503062031	BASE SET	01
01B	0503062032	NECK TITANIUM ASSY	01
01C	0503062033	OPPOSITE BASE SET	01
01D	0503062034	CENTRAL ADAPTER SET	01
01E	0503062035	SET FALSE ADAPT CENTER	01
01F	0503062036	SUBSET SET LOCK BASE	01
01G	0503062037	SUBSET ESCOVAFLEX SET	01
01H	0503062038	SET ANTI-LEAP	01
01I	0503062039	POLIFLOW TITANIUM ASSY	01
01J	0503062040	DISPLAY ASSY TITANIUM 1050010	01
01K	0503062041	TITANIUM DISPLAY PROTECTION ASSY	01
01L	0503062042	SET BOLT ARTICULADOR	01
01M	0503062043	SET LIMIT WEIGHT	01
02	0521050118	DEPOSIT SEED BOCAL	01
03	0503010358	5/16" X 5/8" BOLT	05
04	0501010694	FLAT WASHER	05
05	0503010179	SPRING WASHER	05
06	0503010337	5/16" NUT	05

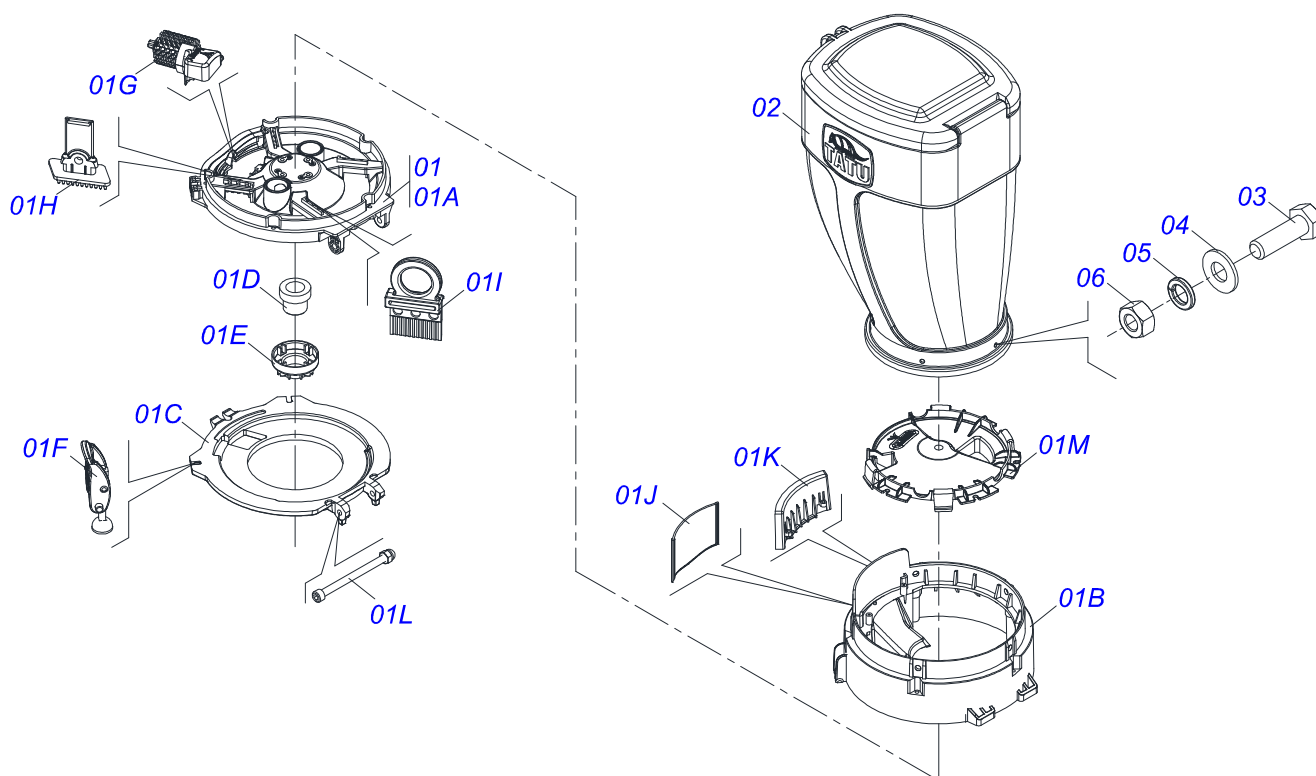 

Item	Code	Description	QT
01	0511052058	SEED SYSTEM TITANIUM	01
01A	0503062031	BASE SET	01
01B	0503062032	NECK TITANIUM ASSY	01
01C	0503062033	OPPOSITE BASE SET	01
01D	0503062034	CENTRAL ADAPTER SET	01
01E	0503062035	SET FALSE ADAPT CENTER	01
01F	0503062036	SUBSET SET LOCK BASE	01
01G	0503062037	SUBSET ESCOVAFLEX SET	01
01H	0503062038	SET ANTI-LEAP	01
01I	0503062039	POLIFLOW TITANIUM ASSY	01
01J	0503062040	DISPLAY ASSY TITANIUM 1050010	01
01K	0503062041	TITANIUM DISPLAY PROTECTION ASSY	01
01L	0503062042	SET BOLT ARTICULADOR	01
01M	0503062043	SET LIMIT WEIGHT	01
02	0503062276	SEED BOX	01
03	0503010371	5/16" X 1" BOLT	05
04	0501010694	FLAT WASHER	05
05	0503010179	SPRING WASHER	05
06	0503010337	5/16" NUT	05

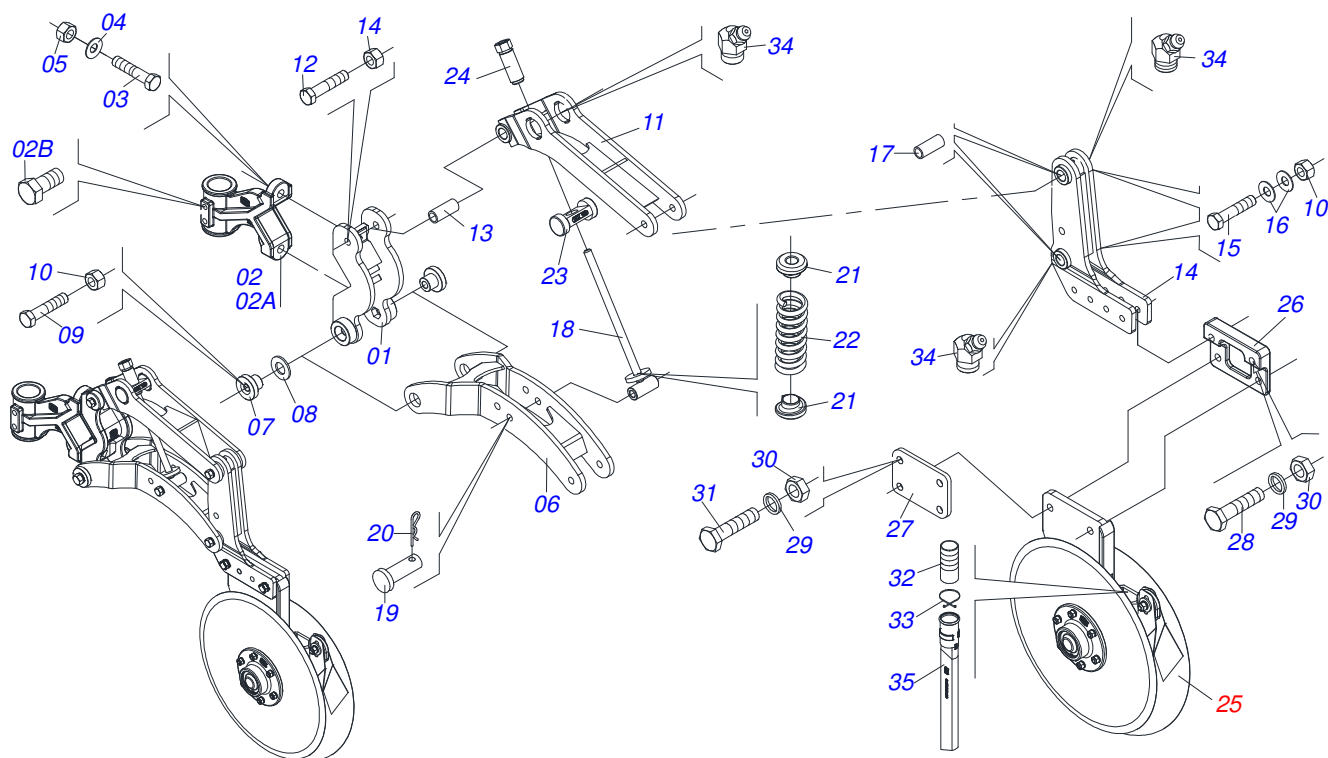 


Item	Code	Description	
01	0511053024	FERTILIZER SHORT LINE	01
01A	0502012728	ROW FERTILIZER SUPPORT	01
02	0511053223	FERTILIZER ROW SUPPORT	01
02A	0502012727	BLADE DISC SUPPORT	01
02B	0511016156	5/8" X 1.1/2" BOLT	02
03	0503017856	BOLT 3/4	02
04	0501010322	FLAT WASHER	02
05	0503011255	3/4" LOCK NUT	02
06	0511065857	FERTILIZER ROW LOWER SUPPORT	01
07	0561017928	FERTILIZER ROW ARTICULAT SLEEVE	02
08	0511015098	FLAT WASHER	06
09	0503010233	5/8" X 2-1/2" BOLT	02
10	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	05
11	0511063862	FERTILIZER ROW UPPER SUPPORT	01
12	0501010452	5/8" X 5" BOLT	01
13	0531016207	0.6" X 1" X 2.8" SLEEVE	01
14	0521061855	FERTILIZER ROW REAR SUPPORT	01
15	0501010452	5/8" X 5" BOLT	02
16	0531016031	1/2" SPRING WASHER	04
17	0531016207	0.6" X 1" X 2.8" SLEEVE	02
18	0521062073	SPRING GUIDE	01
19	0521016057	COUP SHA OF THE CARRY-W SPRING GUI	01
20	0503030168	HAIR PIN	01
21	1902020393	SPRING UPPER SUPPORT	02
22	0503031450	2.7" X 9.2" X 0.03" SPRING	01
23	0521011158	SPRING LOCKNUT	01
24	0521018575	REGULATOR SPINDLE 100	01
25	0511053209	LEFT 15 X 15 UNAL DOUBLE-DISC	01
26	0502012352	DOUBLE-DISC SPACING PLATE	01
27	0541013035	5.55" X 4.0" X 0.38" PLATE	01
28	0503010740	1/2" X 2" BOLT	02
29	0503010019	1/2" SPRING WASHER	04
30	0503010060	1/2" NUT	04



COP TRIO 13/15 L
FERTILIZER SHORT LINE


Page 107
0511053024

Item	Code	Description	
31	0503010752	1/2" X 3.1/2" BOLT	02
32	0503031145	2" X 2" X 20" HOSE	01
33	0503031076	2" HOSE CLAMP	02
34	0503010003	1845 GREASE FITTING	03
35	0503030520	SEED SOCKET	01

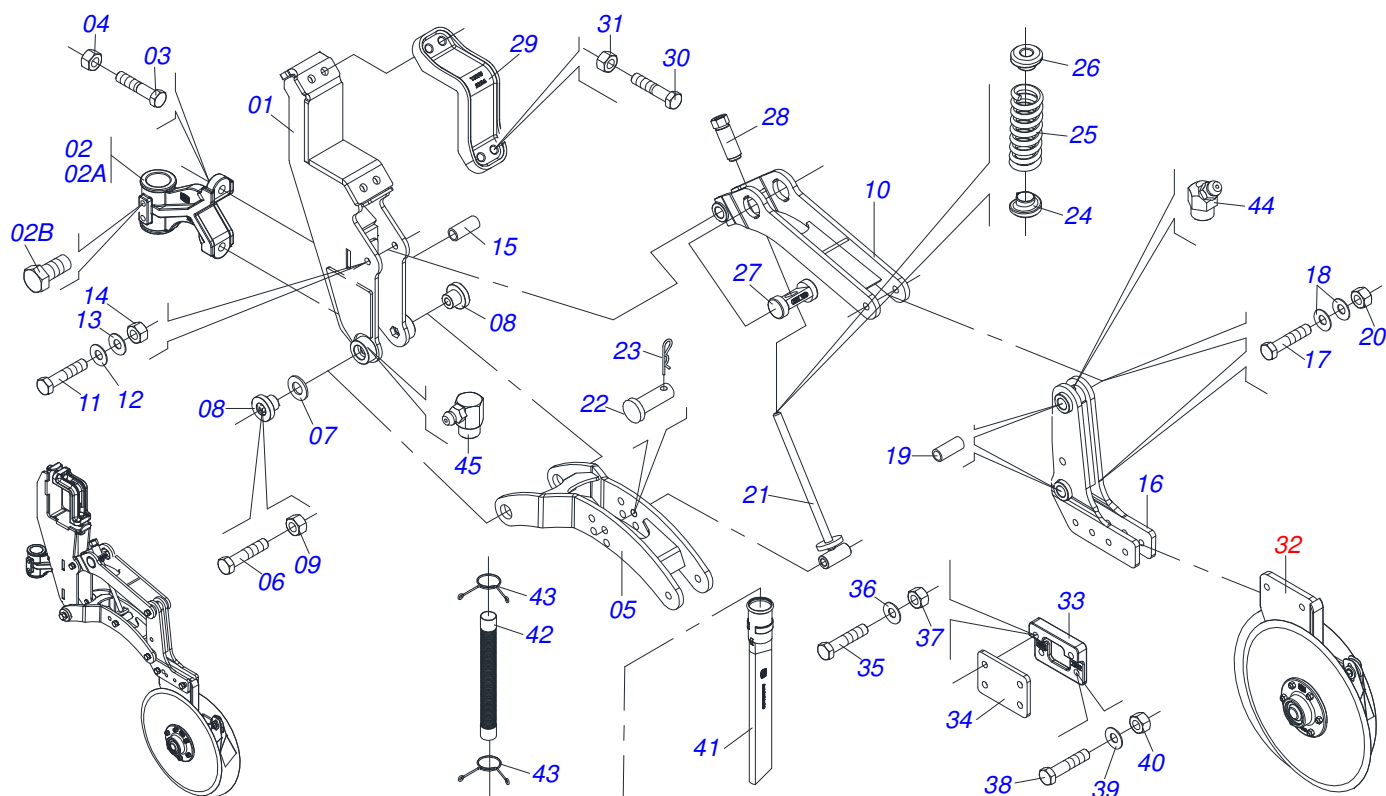 


Item	Code	Description	QT
001	0521063759	ROW FERTILIZER SUPPORT	01
002	0511053223	FERTILIZER ROW SUPPORT	01
002A	0502012727	BLADE DISC SUPPORT	01
002B	0511016156	5/8" X 1.1/2" BOLT	02
003	0503017855	BOLT 3/4	02
004	0503010152	3/4" UNF SELF ADJUSTING NUT	02
005	0521063504	FERTILIZER ROW LOWER SUPPORT	01
006	0503010233	5/8" X 2-1/2" BOLT	02
007	0511015098	FLAT WASHER	06
008	0561017928	FERTILIZER ROW ARTICULAT SLEEVE	02
009	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
010	0511063862	FERTILIZER ROW UPPER SUPPORT	01
011	0501010163	5/8" X 4-1/2" BOLT	01
012	0531015184	FLAT WASHER	01
013	0531016031	1/2" SPRING WASHER	01
014	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
015	0531016207	0.6" X 1" X 2.8" SLEEVE	01
016	0521061855	FERTILIZER ROW REAR SUPPORT	01
017	0501010452	5/8" X 5" BOLT	02
018	0531016031	1/2" SPRING WASHER	04
019	0531016207	0.6" X 1" X 2.8" SLEEVE	02
020	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
021	0521062073	SPRING GUIDE	01
022	0521016057	COUP SHA OF THE CARRY-W SPRING GUI	01
023	0503030168	HAIR PIN	01
024	1902020393	SPRING UPPER SUPPORT	01
025	0503031450	2.7" X 9.2" X 0.03" SPRING	01
026	1902020393	SPRING UPPER SUPPORT	01
027	0521011158	SPRING LOCKNUT	01
028	0521018575	REGULATOR SPINDLE 100	01
029	0502012724	FERTILIZER ROW FIXER	01
030	0503017960	5/8" X 3-12" BOLT	04
031	0503010811	5/8" UNF SELF ADJUSTING NUT	04


Item	Code	Description	QT
032	0511053208	RIGHT 15 X 15 UNAL DOUBLE-DISC	01
033	0502012352	DOUBLE-DISC SPACING PLATE	01
034	0541013035	5.55" X 4.0" X 0.38" PLATE	01
035	0503010740	1/2" X 2" BOLT	02
036	0503010019	1/2" SPRING WASHER	02
037	0503010060	1/2" NUT	02
038	0503010752	1/2" X 3.1/2" BOLT	02
039	0503010019	1/2" SPRING WASHER	02
040	0503010060	1/2" NUT	02
041	0503030520	SEED SOCKET	01
042	0503031145	2" X 2" X 20" HOSE	01
043	0503031076	2" HOSE CLAMP	02
044	0503010003	1845 GREASE FITTING	02
045	0503010004	1890 GREASE FITTING	01

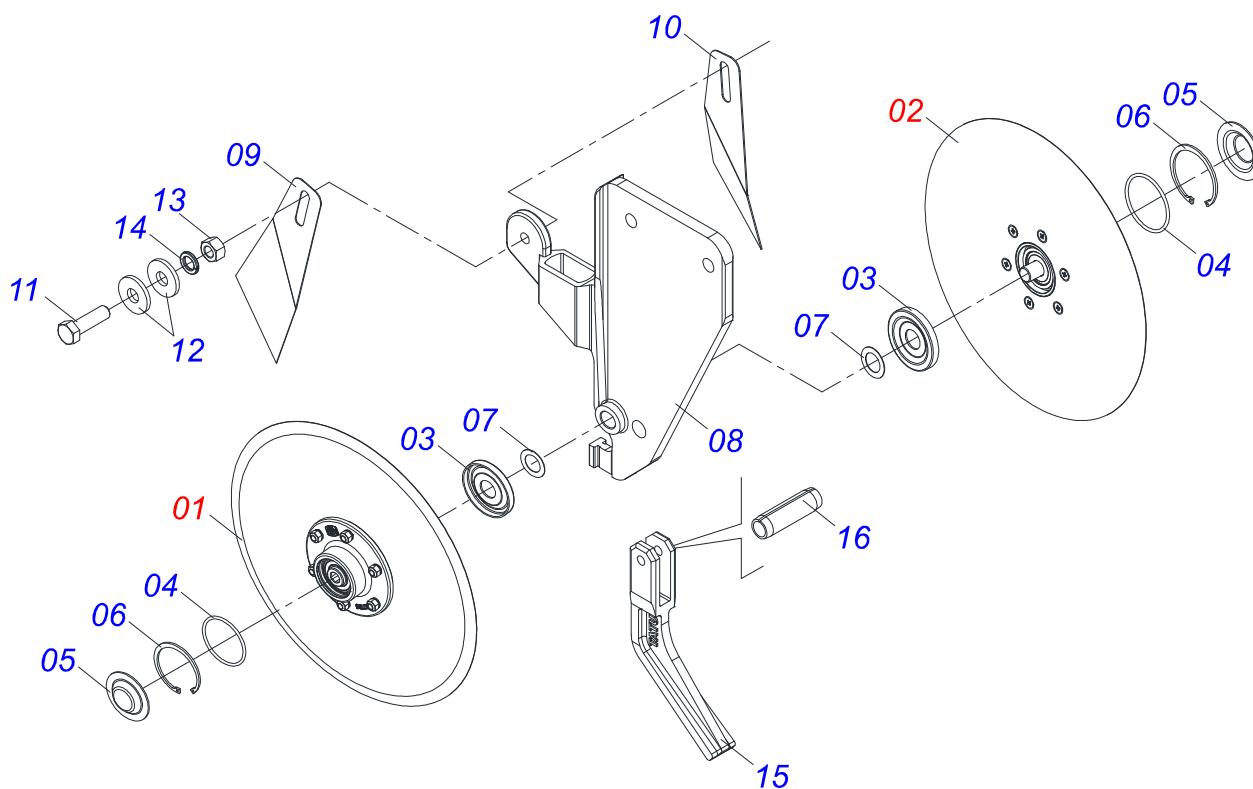 


Item	Code	Description	QT
01	0511053172	RIGHT HUB LOWR Y/DISC	01
02	0511053173	LH HUB LOWR Y/DISC	01
03	0511011927	DUST CLOAK	02
04	0503014679	2-134 O'RING	02
05	0571011152	DOUBLE DISC CAP	02
06	0503015081	502052 CLAMPING RING (FOR AXLE)	02
07	0511015098	FLAT WASHER	02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT	01
09	0501017542	LH DOUBLE DISC SCRAPER	01
10	0501017541	RH DOUBLE DISC SCRAPER	01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
12	0501010984	FLAT WASHER	02
13	0503010026	3/8" NUT	01
14	0503011443	SPRING WASHER	01
15	0502070062	SCRAPER	01
16	0503011402	0.2" X 0.8" SPRING PIN	01

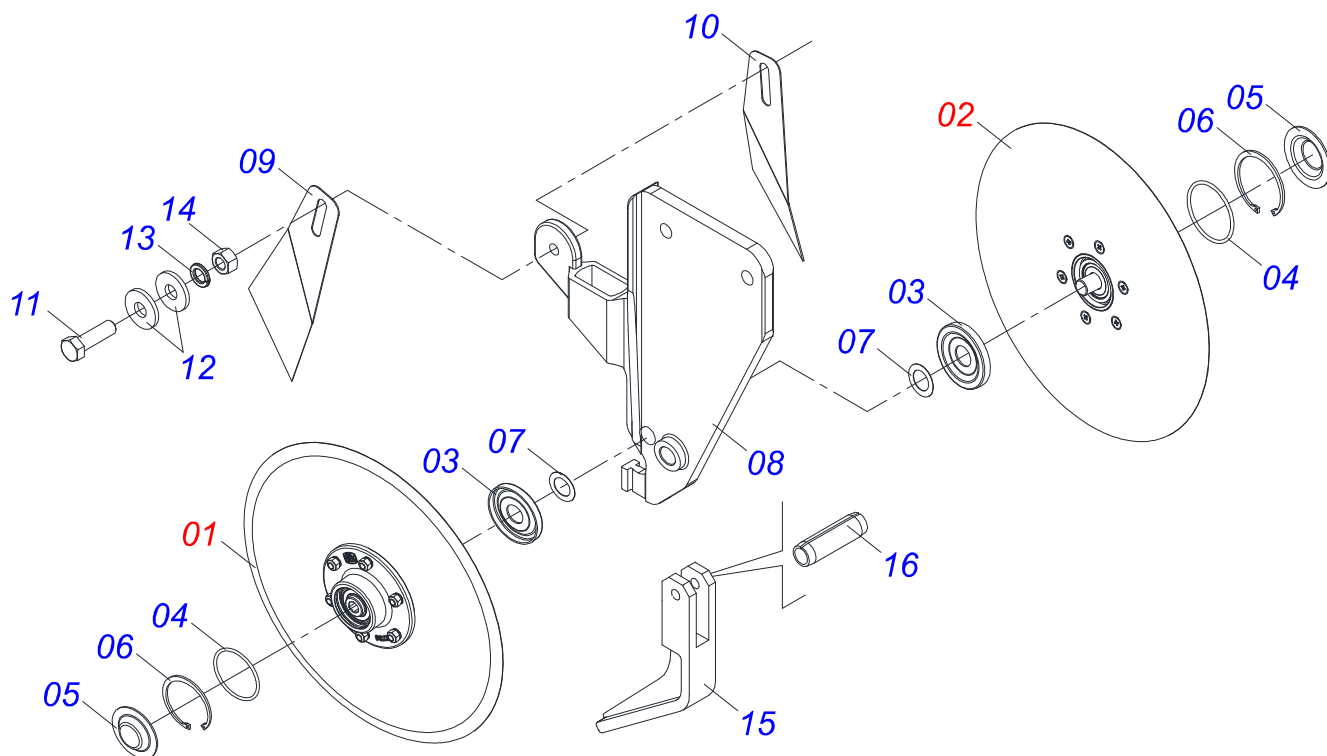 


Item	Code	Description	QT
01	0511053173	LH HUB LOWR Y/DISC	01
02	0511053172	RIGHT HUB LOWR Y/DISC	01
03	0511011927	DUST CLOAK	02
04	0503014679	2-134 O'RING	02
05	0571011152	DOUBLE DISC CAP	02
06	0503015081	502052 CLAMPING RING (FOR AXLE)	02
07	0511015098	FLAT WASHER	02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT	01
09	0501017542	LH DOUBLE DISC SCRAPER	01
10	0501017541	RH DOUBLE DISC SCRAPER	01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
12	0501010984	FLAT WASHER	02
13	0503011443	SPRING WASHER	01
14	0503010026	3/8" NUT	01
15	0502070062	SCRAPER	01
16	0503011402	0.2" X 0.8" SPRING PIN	01

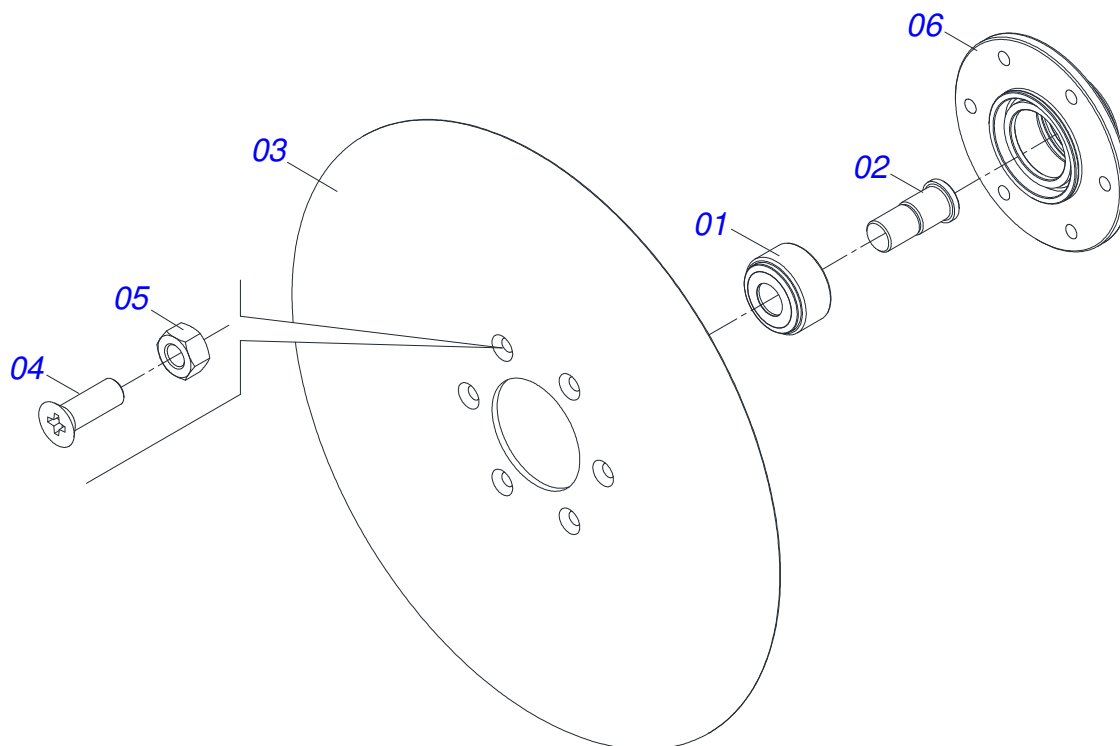 


Item	Code	Description	QT
001	0503062300	EVA-F8 ESF2CARR BALL BEARING	01
002	0571011150	RIGHT DOUB DISC - HUB	01
003	0603022042	13" X 0.12" PLAIN COULTER BLADE	01
004	0503010546	5/16" X 7/8" BOLT	06
005	0503010337	5/16" NUT	06
006	0502012736	HUB LOWR DDD	01

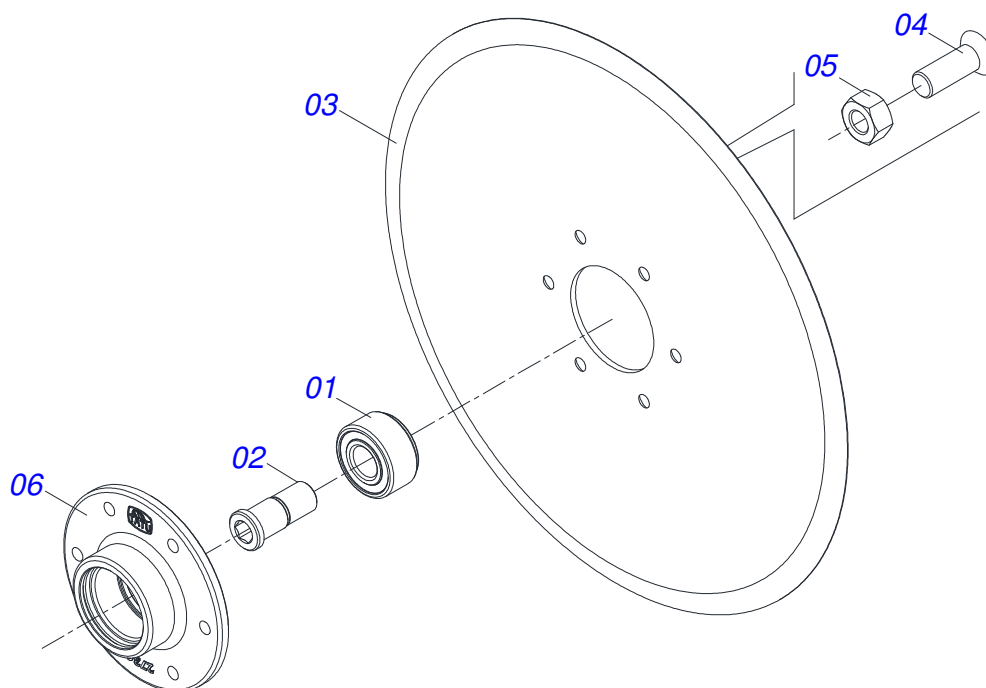 


Item	Code	Description	QT
001	0503062300	EVA-F8 ESF2CARR BALL BEARING	01
002	0571011151	LEFT DOUBLE DISC HUB	01
003	0603022042	13" X 0.12" PLAIN COULTER BLADE	01
004	0503010546	5/16" X 7/8" BOLT	06
005	0503010337	5/16" NUT	06
006	0502012736	HUB LOWR DDD	01

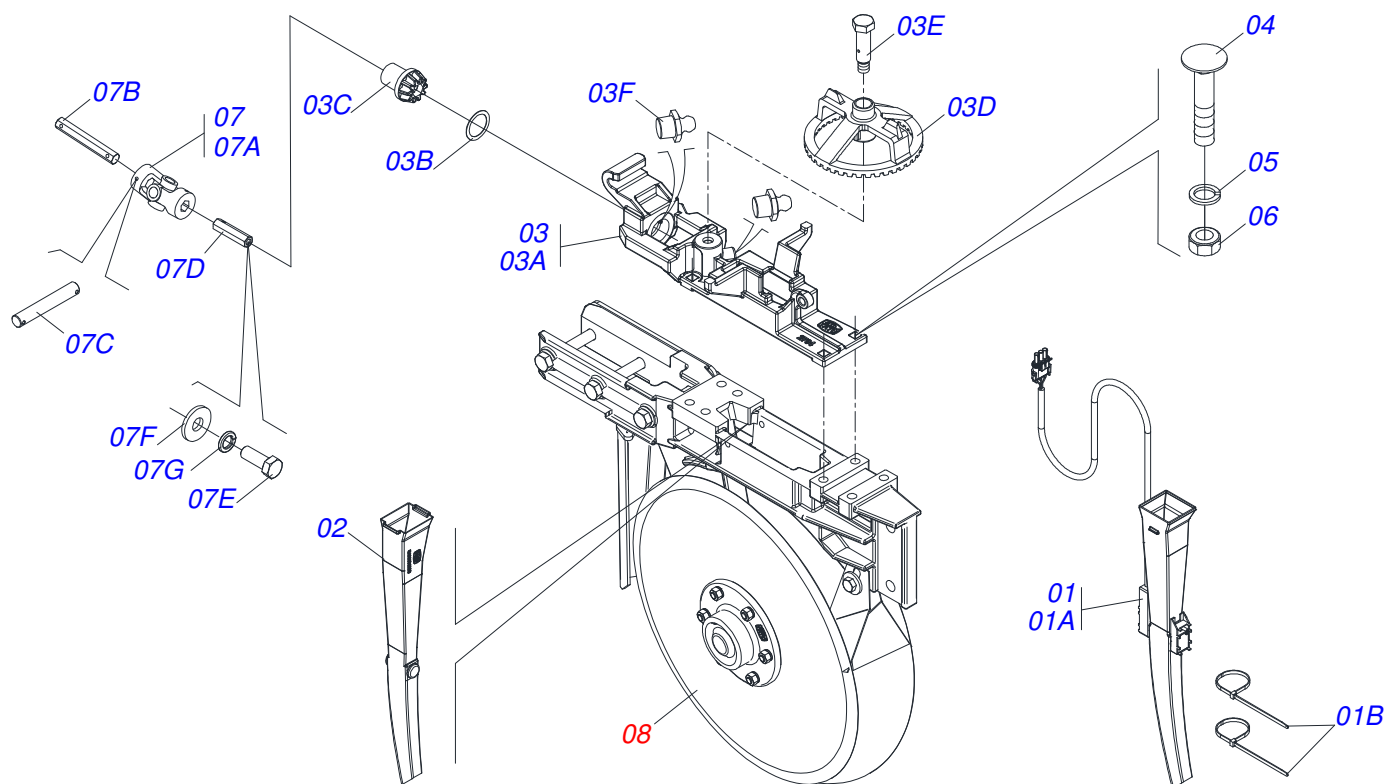 


Item	Code	Description	QT
001	0511053118	ASSEMBLY SENSOR ELECTRONIC	01
001A	0503016492	ELECTRIC PHOTO SENSOR PM 100	01
001B	0503013100	NYLON CLAMP	05
002	0503033672	NOZZLE WITHOUT TITANIUM	01
003	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY	01
003A	0502012704	BASE FIXING SYSTEM	01
003B	0501013354	FLAT WASHER	01
003C	0502012639	12Z LOWER CONICAL GEAR	01
003D	0502011418	40Z CONICAL GEAR	01
003E	0511018700	AXLE	01
003F	0503010002	1800 GREASE FITTING	02
004	0503017813	3/8" X 2" BOLT	04
005	0503011443	SPRING WASHER	04
006	0503010026	3/8" NUT	04
007	0511053284	UNIVERSAL JOINT	01
007A	0501056296	UNIVERSAL JOINT ASSY	01
007B	0551017540	5/8" X 73 AXLE HEX	01
007C	0503011855	0.2" X 1.8" SPRING PIN	02
007D	0571012447	TRANSMISSION AXLE	01
007E	0503010237	3/8" X 1" BOLT	01
007F	0501010984	FLAT WASHER	01
007G	0503010025	3/8 SPRING WASHER	01
008	0511056585	RIGHT 15" X 15" DOUBLE DISC	01

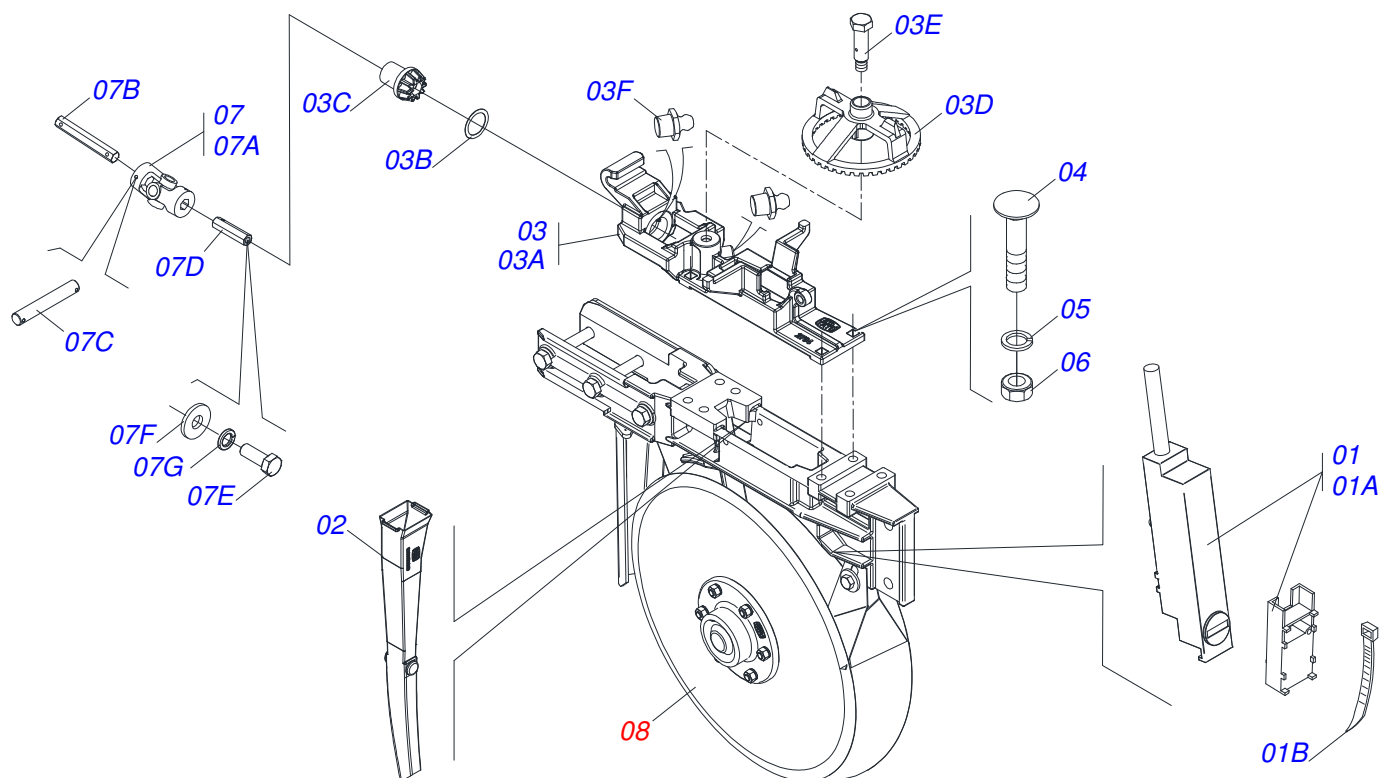 


Item	Code	Description	QT
001	0501058972	ASSEMBLY SENSOR ELECTRONIC	01
001A	0503015218	SENSOR FOTOELE PM 400	01
001B	0503016033	4,8 X 1,3 X 300 MM NYLON CLAMP	03
002	0503033672	NOZZLE WITHOUT TITANIUM	01
003	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY	01
003A	0502012704	BASE FIXING SYSTEM	01
003B	0501013354	FLAT WASHER	01
003C	0502012639	12Z LOWER CONICAL GEAR	01
003D	0502011418	40Z CONICAL GEAR	01
003E	0511018700	AXLE	01
003F	0503010002	1800 GREASE FITTING	02
004	0503017813	3/8" X 2" BOLT	04
005	0503011443	SPRING WASHER	04
006	0503010026	3/8" NUT	04
007	0511053284	UNIVERSAL JOINT	01
007A	0501056296	UNIVERSAL JOINT ASSY	01
007B	0551017540	5/8" X 73 AXLE HEX	01
007C	0503011855	0.2" X 1.8" SPRING PIN	02
007D	0571012447	TRANSMISSION AXLE	01
007E	0503010237	3/8" X 1" BOLT	01
007F	0501010984	FLAT WASHER	01
007G	0503010025	3/8 SPRING WASHER	01
008	0511056585	RIGHT 15" X 15" DOUBLE DISC	01

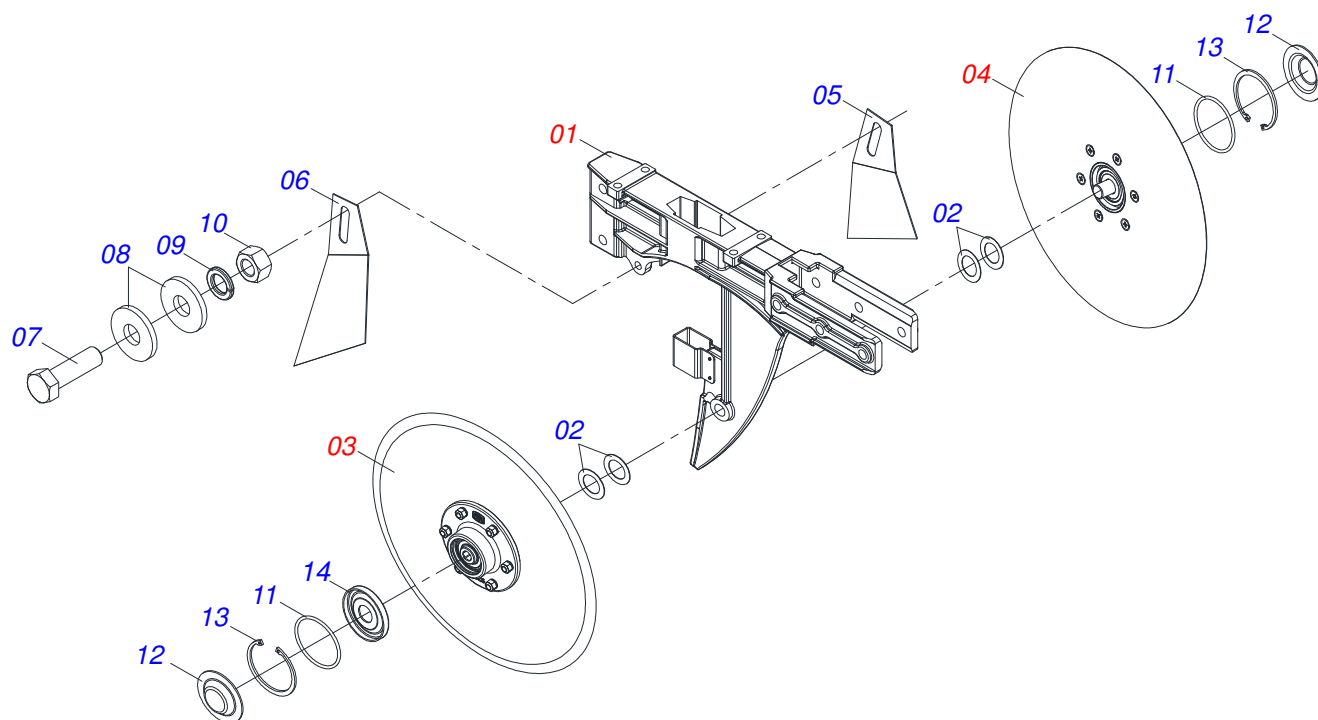 


Item	Code	Description	QT
01	0511052301	DOBLE DISC SUPPORT W/GUIDE	01
02	0511015098	FLAT WASHER	04
03	0511053173	LH HUB LOWR Y/DISC	01
04	0511053172	RIGHT HUB LOWR Y/DISC	01
05	0561010264	RH DOUBLE DISC SCRAPER	01
06	0561010265	LH DOUBLE DISC SCRAPER	01
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
08	0501010984	FLAT WASHER	02
09	0503011443	SPRING WASHER	01
10	0503010026	3/8" NUT	01
11	0503014679	2-134 O'RING	02
12	0571011152	DOUBLE DISC CAP	02
13	0503015081	502052 CLAMPING RING (FOR AXLE)	02
14	0511011927	DUST CLOAK	02

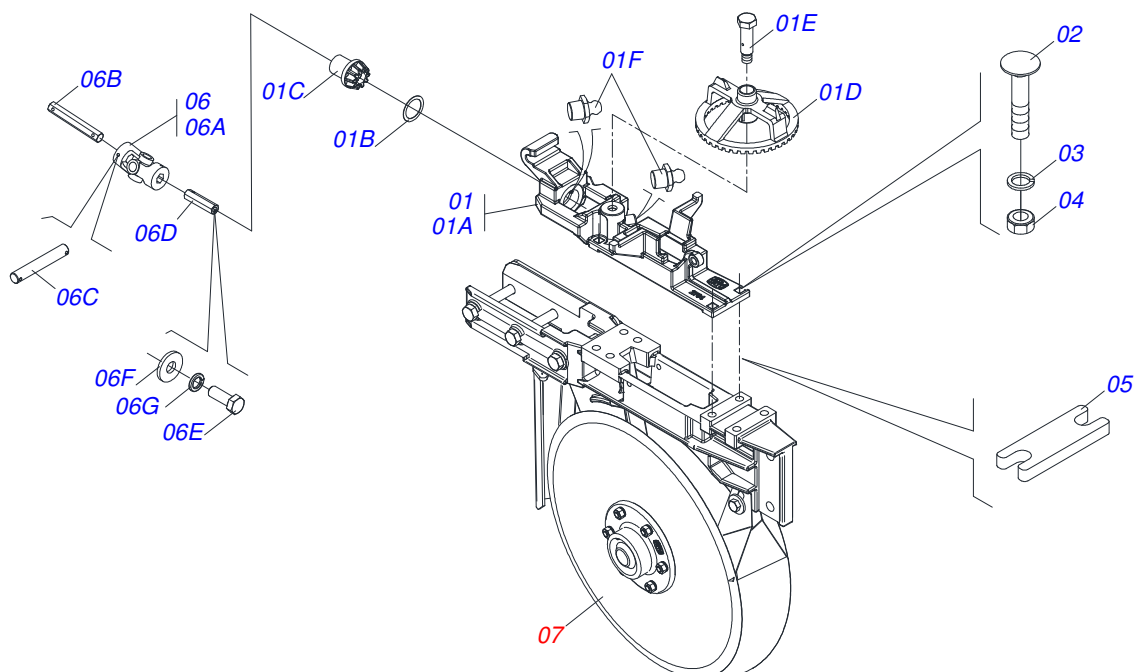 


Item	Code	Description	QT
001	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY	01
001A	0502012704	BASE FIXING SYSTEM	01
001B	0501013354	FLAT WASHER	01
001C	0502012639	12Z LOWER CONICAL GEAR	01
001D	0502011418	40Z CONICAL GEAR	01
001E	0511018700	AXLE	01
001F	0503010002	1800 GREASE FITTING	02
002	0503017813	3/8" X 2" BOLT	04
003	0503011443	SPRING WASHER	04
004	0503010026	3/8" NUT	04
005	0571012451	CHOCK	02
006	0511053284	UNIVERSAL JOINT	01
006A	0501056296	UNIVERSAL JOINT ASSY	01
006B	0551017540	5/8" X 73 AXLE HEX	01
006C	0503011855	0.2" X 1.8" SPRING PIN	02
006D	0571012447	TRANSMISSION AXLE	01
006E	0503010237	3/8" X 1" BOLT	01
006F	0501010984	FLAT WASHER	01
006G	0503010025	3/8 SPRING WASHER	01
007	0511056585	RIGHT 15" X 15" DOUBLE DISC	01

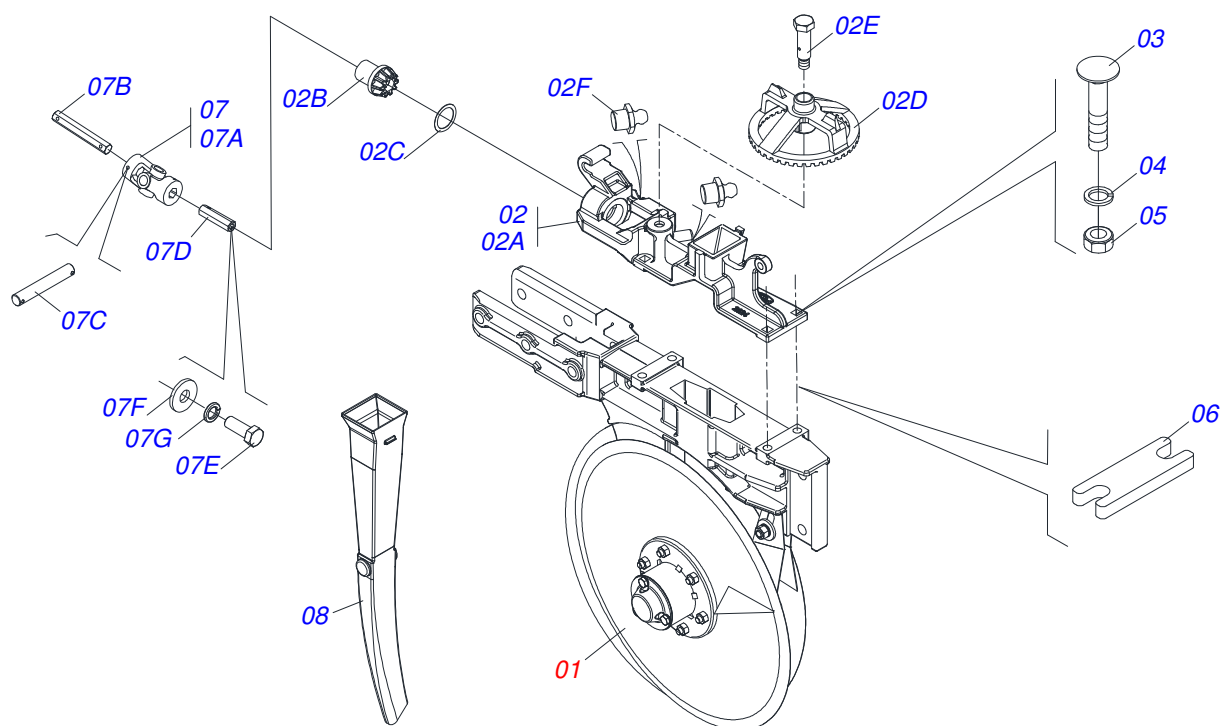 

Item	Code	Description	QT
001	0501059631	RIGHT 15" X 15" SEED UNAL DOUB-DISC	01
002	0501059648	SEED BOX FIXING BASE	01
002A	0502012624	SEED BOX FIXING BASE	01
002B	0502012639	12Z LOWER CONICAL GEAR	01
002C	0501013354	FLAT WASHER	01
002D	0502011418	40Z CONICAL GEAR	01
002E	0511018700	AXLE	01
002F	0503010002	1800 GREASE FITTING	02
003	0503017813	3/8" X 2" BOLT	04
004	0503011443	SPRING WASHER	04
005	0503010026	3/8" NUT	04
006	0571012451	CHOCK	02
007	0511053284	UNIVERSAL JOINT	01
007A	0501056296	UNIVERSAL JOINT ASSY	01
007B	0551017540	5/8" X 73 AXLE HEX	01
007C	0503011855	0.2" X 1.8" SPRING PIN	02
007D	0571012447	TRANSMISSION AXLE	01
007E	0503010237	3/8" X 1" BOLT	01
007F	0501010984	FLAT WASHER	01
007G	0503010025	3/8 SPRING WASHER	01
008	0503033124	SOCKET SEED	01

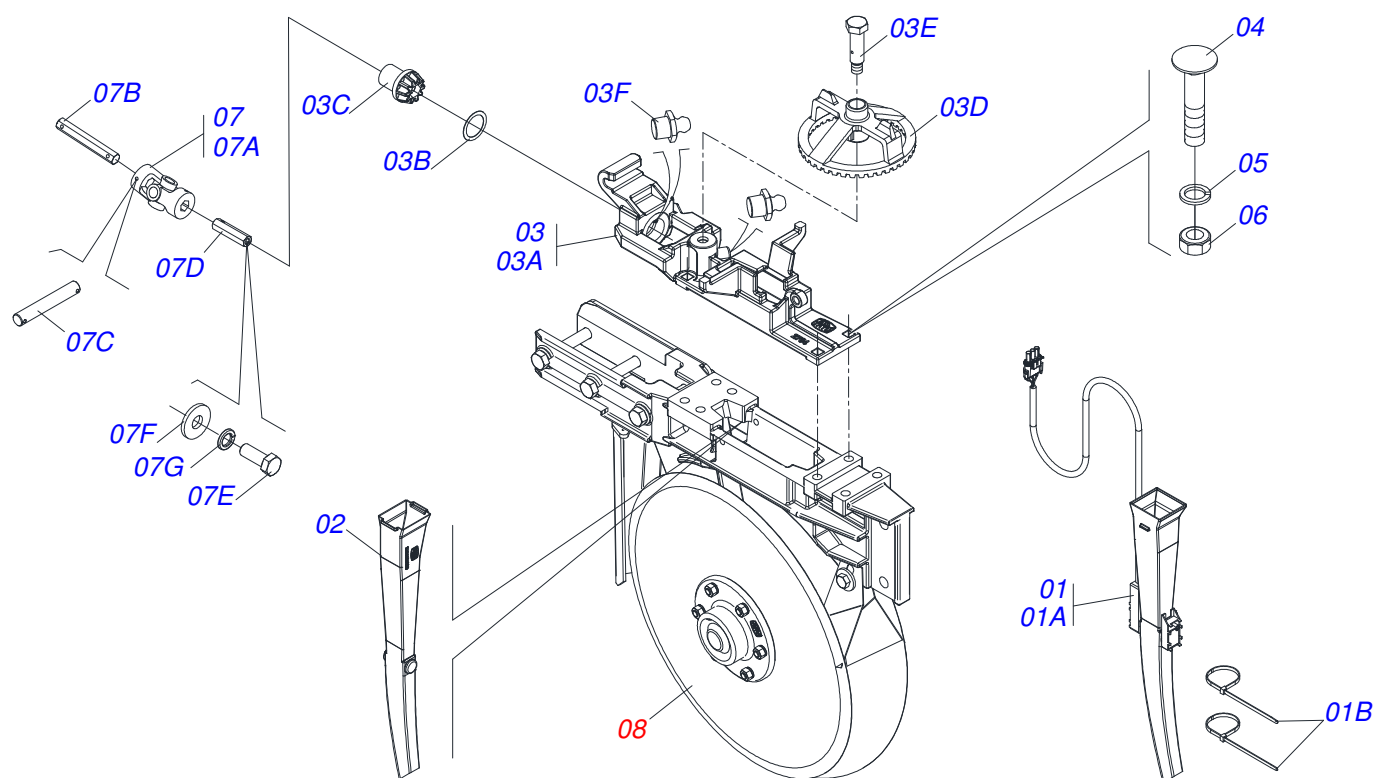 


Item	Code	Description	QT
001	0511053118	ASSEMBLY SENSOR ELECTRONIC	01
001A	0503016492	ELECTRIC PHOTO SENSOR PM 100	01
001B	0503013100	NYLON CLAMP	05
002	0503033672	NOZZLE WITHOUT TITANIUM	01
003	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY	01
003A	0502012704	BASE FIXING SYSTEM	01
003B	0501013354	FLAT WASHER	01
003C	0502012639	12Z LOWER CONICAL GEAR	01
003D	0502011418	40Z CONICAL GEAR	01
003E	0511018700	AXLE	01
003F	0503010002	1800 GREASE FITTING	02
004	0503017813	3/8" X 2" BOLT	04
005	0503011443	SPRING WASHER	04
006	0503010026	3/8" NUT	04
007	0511053284	UNIVERSAL JOINT	01
007A	0501056296	UNIVERSAL JOINT ASSY	01
007B	0551017540	5/8" X 73 AXLE HEX	01
007C	0503011855	0.2" X 1.8" SPRING PIN	02
007D	0571012447	TRANSMISSION AXLE	01
007E	0503010237	3/8" X 1" BOLT	01
007F	0501010984	FLAT WASHER	01
007G	0503010025	3/8 SPRING WASHER	01
008	0511056586	15 X 15 SEED UNAL DOUBLE-DISC ASSY LEFT	01

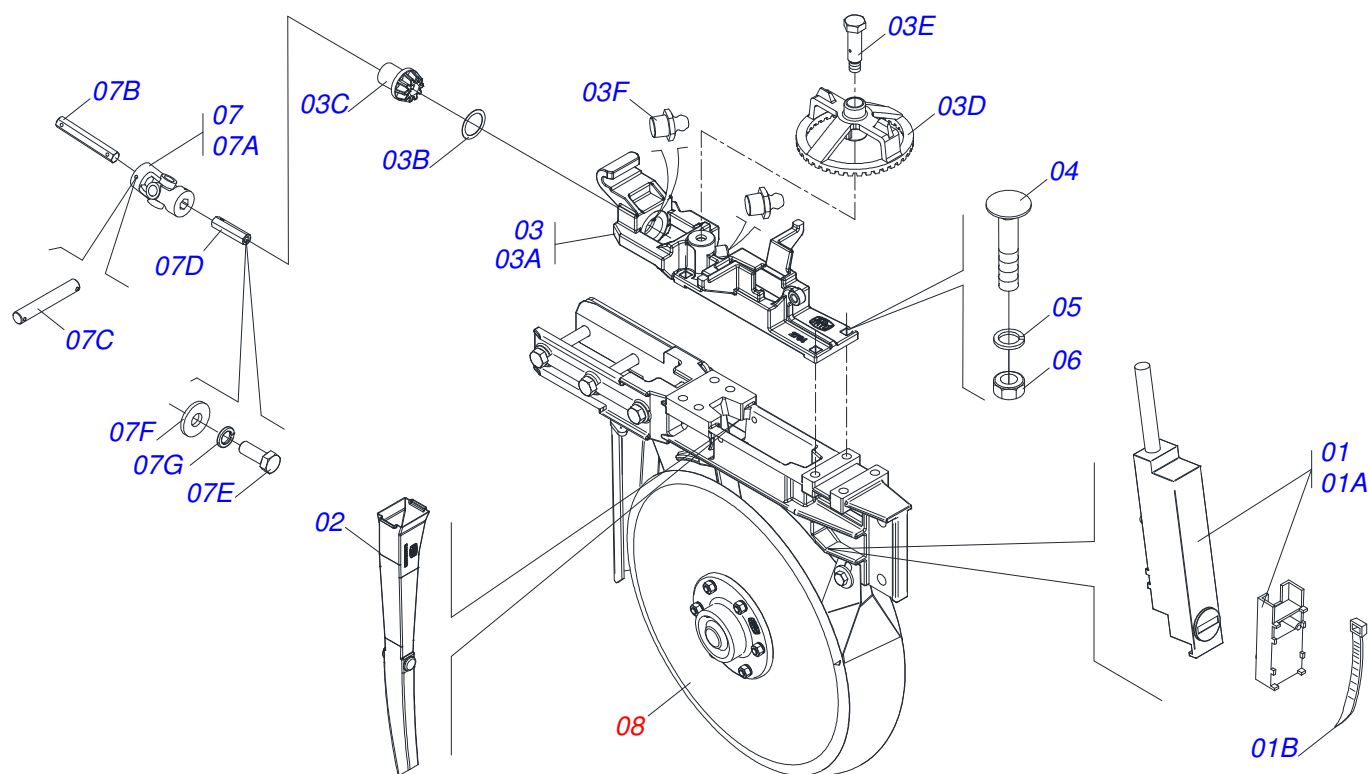 


Item	Code	Description	QT
001	0501058972	ASSEMBLY SENSOR ELECTRONIC	01
001A	0503015218	SENSOR FOTOELE PM 400	01
001B	0503016033	4,8 X 1,3 X 300 MM NYLON CLAMP	03
002	0503033672	NOZZLE WITHOUT TITANIUM	01
003	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY	01
003A	0502012704	BASE FIXING SYSTEM	01
003B	0501013354	FLAT WASHER	01
003C	0502012639	12Z LOWER CONICAL GEAR	01
003D	0502011418	40Z CONICAL GEAR	01
003E	0511018700	AXLE	01
003F	0503010002	1800 GREASE FITTING	02
004	0503017813	3/8" X 2" BOLT	04
005	0503011443	SPRING WASHER	04
006	0503010026	3/8" NUT	04
007	0511053284	UNIVERSAL JOINT	01
007A	0501056296	UNIVERSAL JOINT ASSY	01
007B	0551017540	5/8" X 73 AXLE HEX	01
007C	0503011855	0.2" X 1.8" SPRING PIN	02
007D	0571012447	TRANSMISSION AXLE	01
007E	0503010237	3/8" X 1" BOLT	01
007F	0501010984	FLAT WASHER	01
007G	0503010025	3/8 SPRING WASHER	01
008	0511056586	15 X 15 SEED UNAL DOUBLE-DISC ASSY LEFT	01

15 X 15 SEED UNAL DOUBLE-DISC ASSY LEFT

 
0511056586

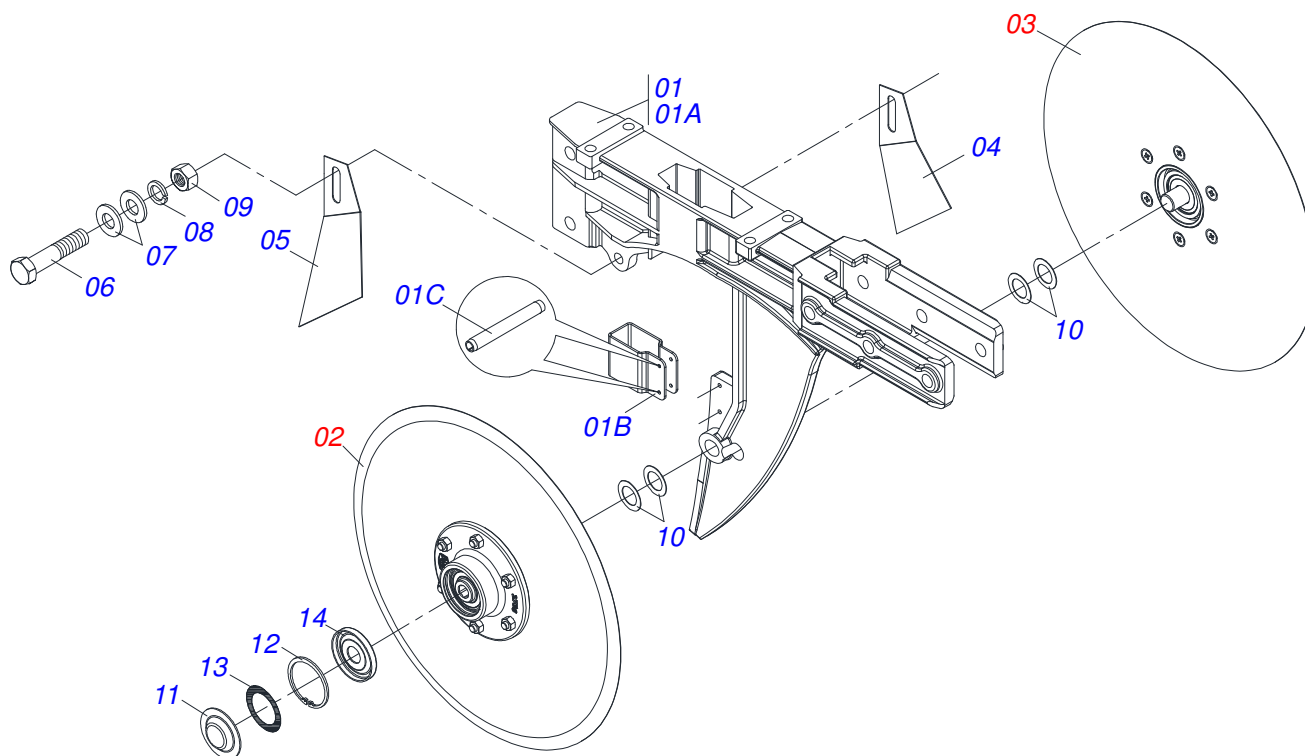


Item	Code	Description	QT
01	0511052302	LH SUPPORT DDD W/ GUIDE	01
01A	0561015592	15" X 15" RIGHT DOUBLE DISC SUPPORT	01
01B	0571012491	SOCKET SEED GUIDE	01
01C	0503010838	0.1" X 0.8" SPRING PIN	02
02	0511053172	RIGHT HUB LOWR Y/DISC	01
03	0511053173	LH HUB LOWR Y/DISC	01
04	0561010264	RH DOUBLE DISC SCRAPER	01
05	0561010265	LH DOUBLE DISC SCRAPER	01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
07	0501010984	FLAT WASHER	02
08	0503011443	SPRING WASHER	01
09	0503010026	3/8" NUT	01
10	0511015098	FLAT WASHER	04
11	0571011152	DOUBLE DISC CAP	02
12	0503015081	502052 CLAMPING RING (FOR AXLE)	02
13	0503014679	2-134 O-RING	02
14	0511011927	DUST CLOAK	02

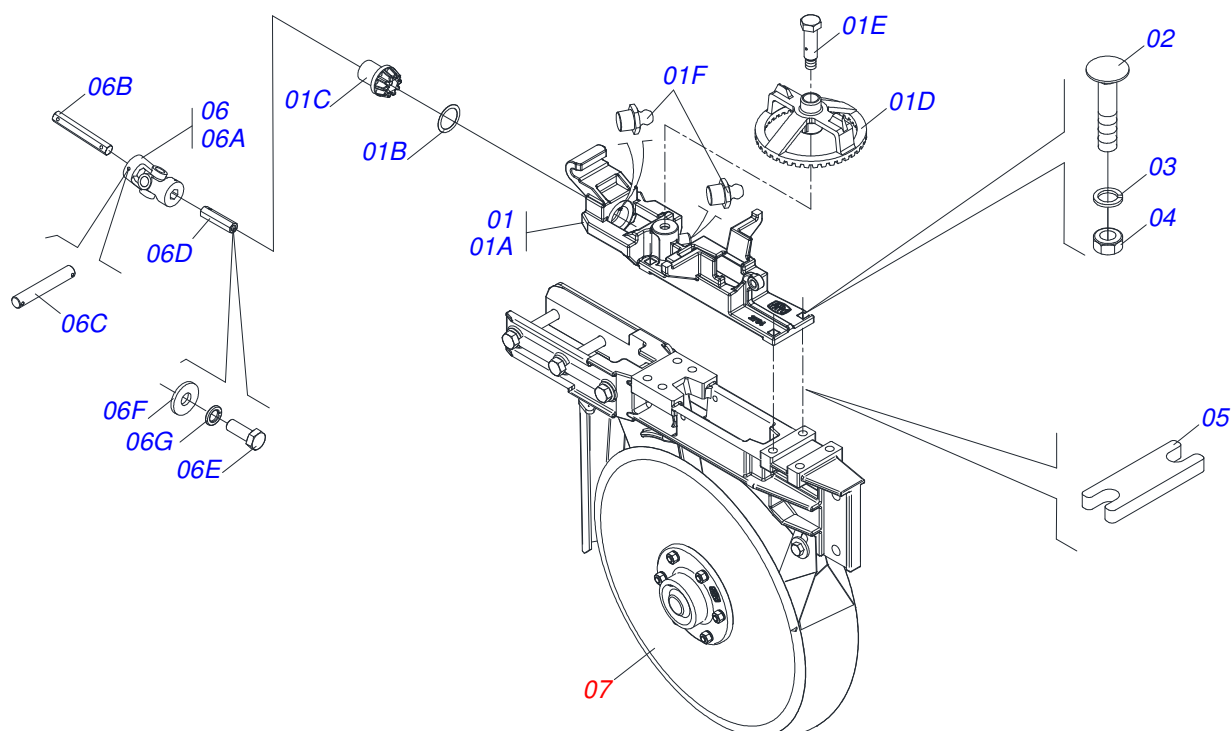 

Item	Code	Description	QT
001	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY	01
001A	0502012704	BASE FIXING SYSTEM	01
001B	0501013354	FLAT WASHER	01
001C	0502012639	12Z LOWER CONICAL GEAR	01
001D	0502011418	40Z CONICAL GEAR	01
001E	0511018700	AXLE	01
001F	0503010002	1800 GREASE FITTING	02
002	0503017813	3/8" X 2" BOLT	04
003	0503011443	SPRING WASHER	04
004	0503010026	3/8" NUT	04
005	0571012451	CHOCK	02
006	0511053284	UNIVERSAL JOINT	01
006A	0501056296	UNIVERSAL JOINT ASSY	01
006B	0551017540	5/8" X 73 AXLE HEX	01
006C	0503011855	0.2" X 1.8" SPRING PIN	02
006D	0571012447	TRANSMISSION AXLE	01
006E	0503010237	3/8" X 1" BOLT	01
006F	0501010984	FLAT WASHER	01
006G	0503010025	3/8 SPRING WASHER	01
007	0511056586	15 X 15 SEED UNAL DOUBLE-DISC ASSY LEFT	01

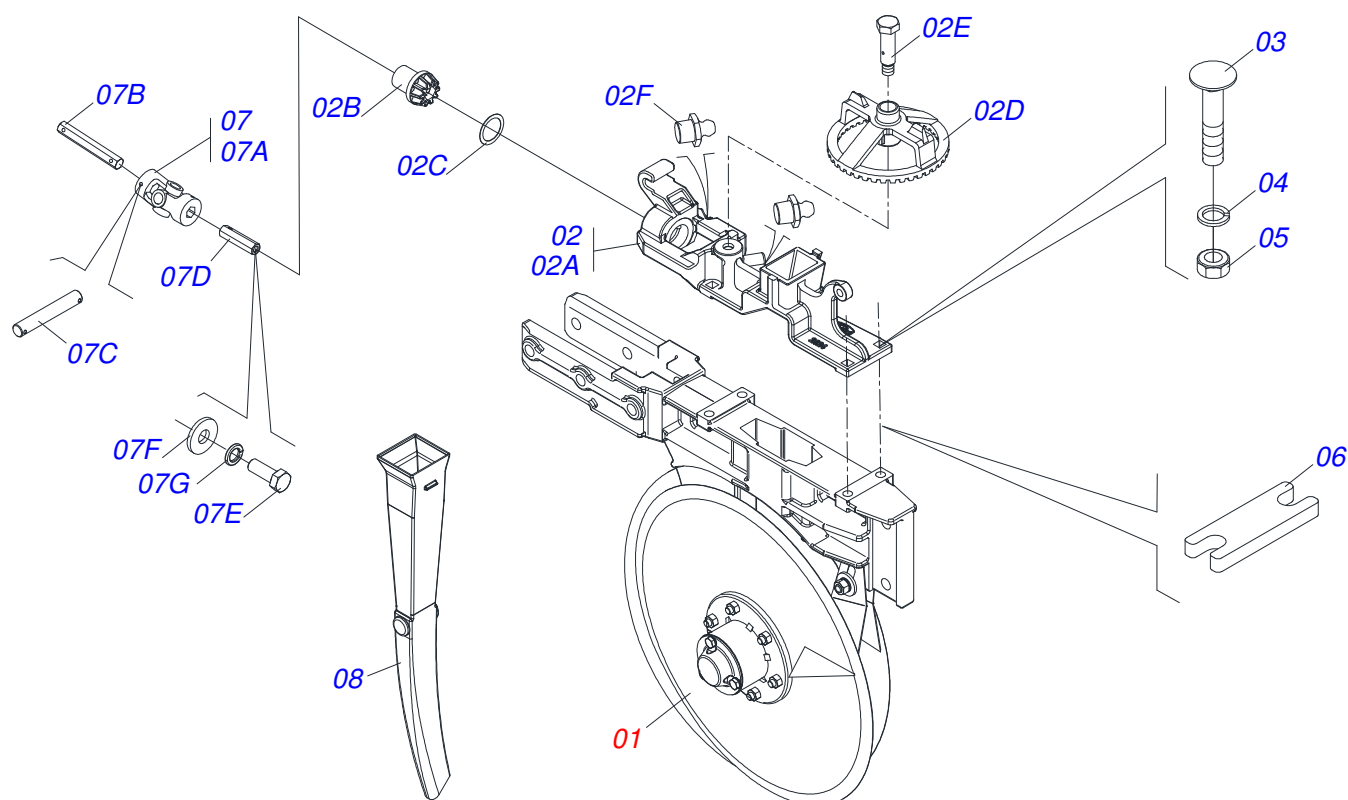 


Item	Code	Description	QT
001	0501059632	LH 15"X15"SEED UNAL DOUBLE DISC	01
002	0501059648	SEED BOX FIXING BASE	01
002A	0502012624	SEED BOX FIXING BASE	01
002B	0502012639	12Z LOWER CONICAL GEAR	01
002C	0501013354	FLAT WASHER	01
002D	0502011418	40Z CONICAL GEAR	01
002E	0511018700	AXLE	01
002F	0503010002	1800 GREASE FITTING	02
003	0503017813	3/8" X 2" BOLT	04
004	0503011443	SPRING WASHER	04
005	0503010026	3/8" NUT	04
006	0571012451	CHOCK	02
007	0511053284	UNIVERSAL JOINT	01
007A	0501056296	UNIVERSAL JOINT ASSY	01
007B	0551017540	5/8" X 73 AXLE HEX	01
007C	0503011855	0.2" X 1.8" SPRING PIN	02
007D	0571012447	TRANSMISSION AXLE	01
007E	0503010237	3/8" X 1" BOLT	01
007F	0501010984	FLAT WASHER	01
007G	0503010025	3/8 SPRING WASHER	01
008	0503033124	SOCKET SEED	01

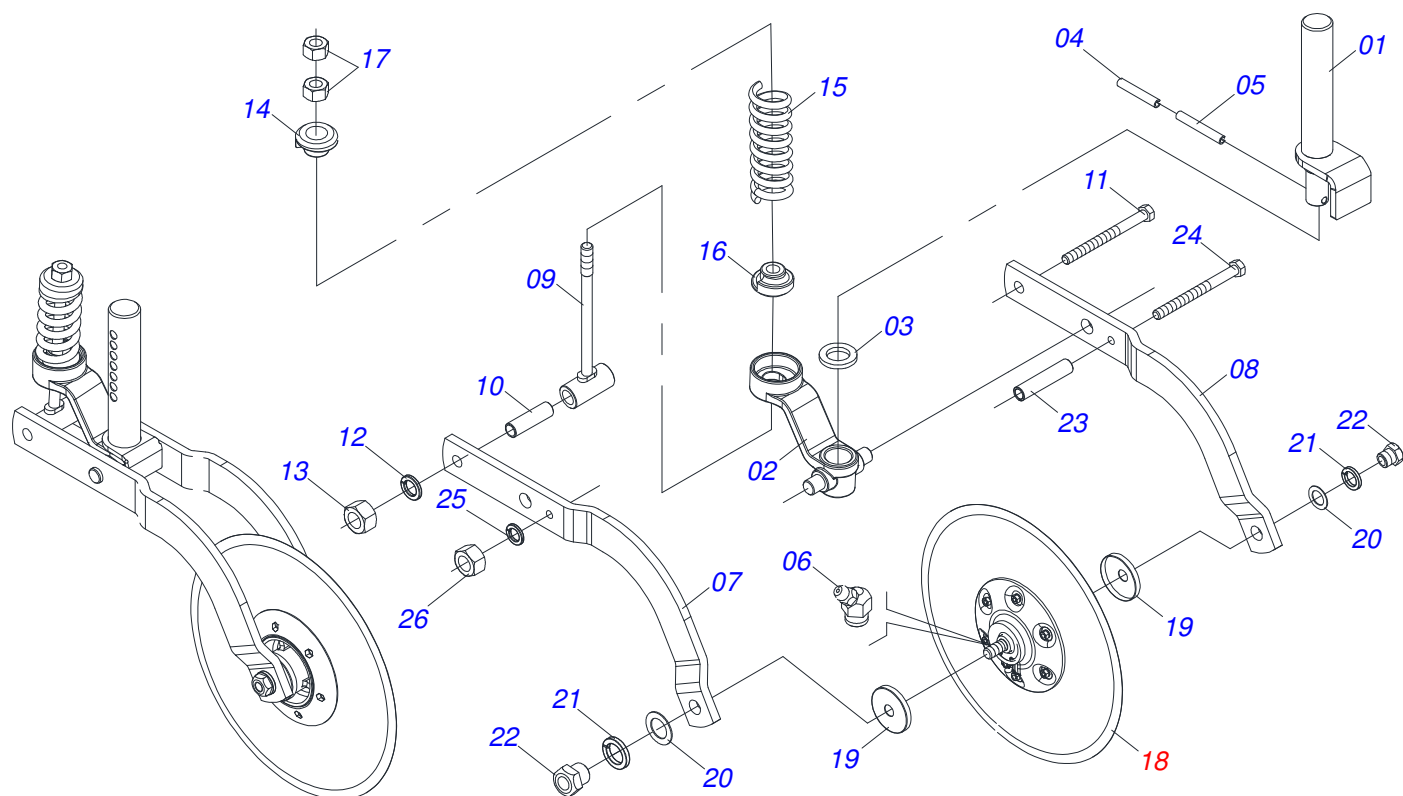 


Item	Code	Description	
01	0511051818	18" BLADE DISC ASSY	01
02	0521062962	BLADE DISC AXLE	01
03	0502012369	BLADE DISC SUPPORT	01
04	0541018684	FLAT WASHER	01
05	0503010361	SPRING PIN	01
06	0503010756	0.2" X 2.4" SPRING PIN	01
07	0503010003	1845 GREASE FITTING	01
08	0521018935	RIGHT ARM OF THE BLADE DISC	01
09	0521018936	LEFT ARM OF THE BLADE DISC	01
10	0501067323	SPRING REGULATOR	01
11	0521010452	SLEEVE	01
12	0503013185	3/4" X 5-1/2" BOLT	01
13	0503011255	3/4" LOCK NUT	01
14	0502020393	SPRING UPPER SUPPORT	01
15	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING	01
16	0502020394	SPRING SUPPORT	01
17	0503010014	3/4" NUT	2
18	0501052139	18 BLADE DISC WITH FLAT PLAN DISC	01
19	0521015376	DUST CLOAK	02
20	0511015346	FLAT WASHER	02
21	0503011438	SPRING WASHER	02
22	0521013510	3/4" NUT	02
23	0571010188	13,50 X 19 X 86,30/86 SLEEVE	01
24	0503011411	1/2" X 5-1/2" BOLT	01
25	0503011440	SPRING WASHER	01
26	0503010060	1/2" NUT	01

18 BLADE DISC WITH FLAT PLAN DISC

 
0501052139

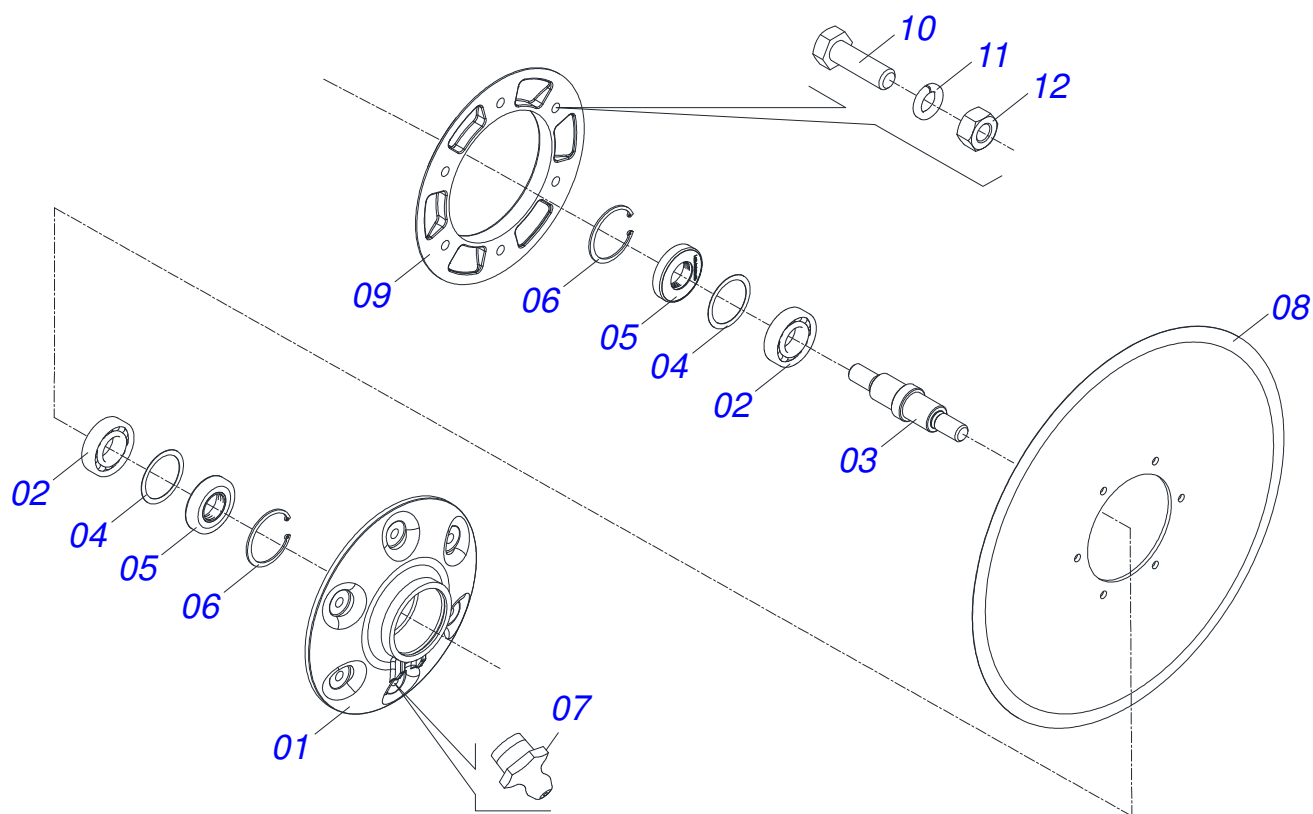


Item	Code	Description	QT
01	0502011562	DC PST ACT/ULTR BOX	01
02	0503010276	6206 BALL BEARING	02
03	0521013610	BLADE DISC HUB AXLE	01
04	0503030832	FLAT WASHER	02
05	0503012417	SEAL	02
06	0503011800	SEAL RING	02
07	0503010691	1/4" GREASE FITTING	01
08	0603026013	PLAIN COULTER BLADE	01
09	0502020641	BLADE DISC FLANGE	01
10	0503010371	5/16" X 1" BOLT	06
11	0503011444	SPRING WASHER	06
12	0503010337	5/16" NUT	06

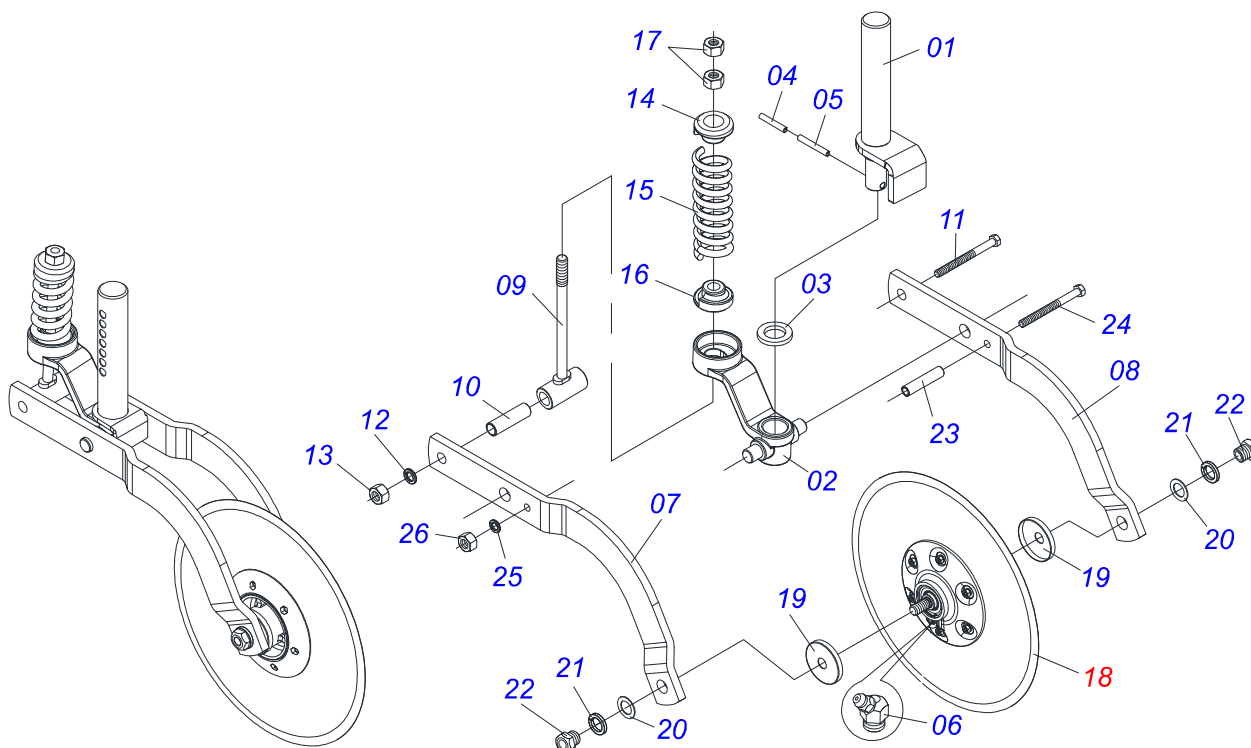 


Item	Code	Description	QT
01	0521062962	BLADE DISC AXLE	01
02	0502012369	BLADE DISC SUPPORT	01
03	0541018684	FLAT WASHER	01
04	0503010361	SPRING PIN	01
05	0503010756	0.2" X 2.4" SPRING PIN	01
06	0503010003	1845 GREASE FITTING	01
07	0521018935	RIGHT ARM OF THE BLADE DISC	01
08	0521018936	LEFT ARM OF THE BLADE DISC	01
09	0501067323	SPRING REGULATOR	01
10	0521010452	SLEEVE	01
11	0503016525	3/4" X 6" BOLT	01
12	0503011442	3/4" SPRING WASHER	01
13	0503010014	3/4" NUT	01
14	0502020393	SPRING UPPER SUPPORT	01
15	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING	01
16	0502020394	SPRING SUPPORT	01
17	0503010014	3/4" NUT	02
18	0501054887	20 BLADE DISC WITH FLAT PLAN DISC	01
19	0521015376	DUST CLOAK	02
20	0511015346	FLAT WASHER	02
21	0503011438	SPRING WASHER	02
22	0521013510	3/4" NUT	02
23	0571010188	13,50 X 19 X 86,30/86 SLEEVE	01
24	0503011411	1/2" X 5-1/2" BOLT	01
25	0503011440	SPRING WASHER	01
26	0503010060	1/2" NUT	01

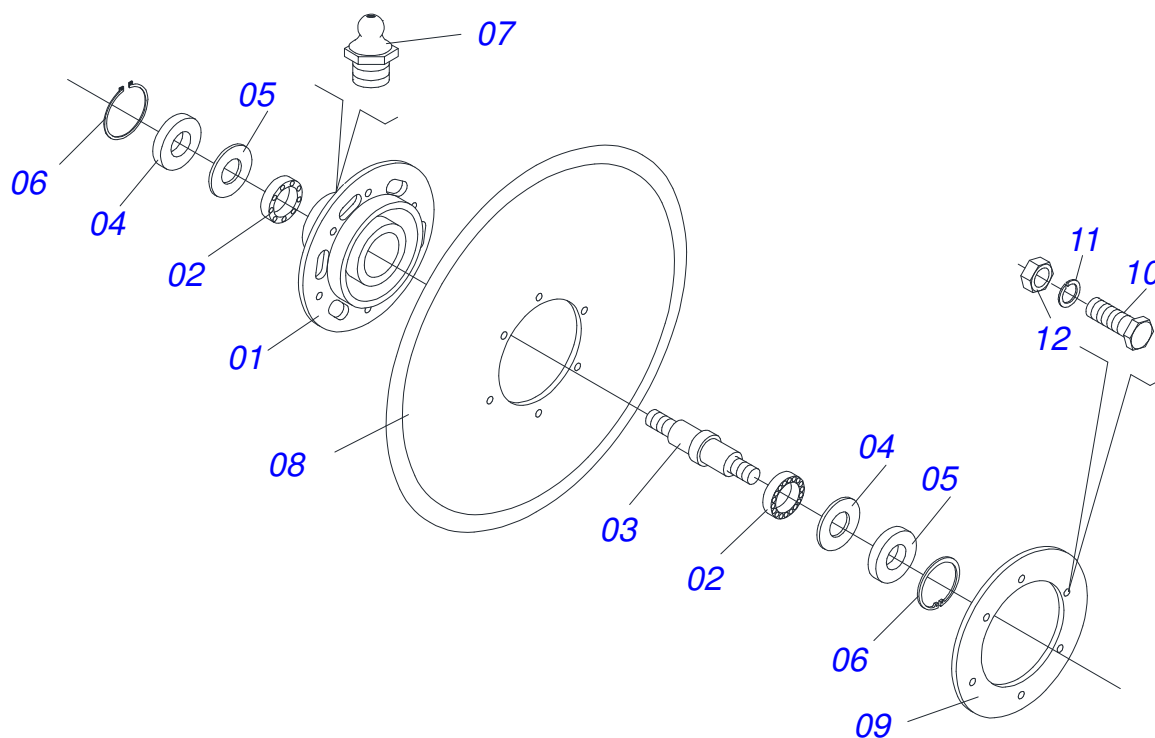 

Item	Code	Description	QT
01	0502011562	DC PST ACT/ULTR BOX	01
02	0503010276	6206 BALL BEARING	02
03	0521013610	BLADE DISC HUB AXLE	01
04	0503030832	FLAT WASHER	02
05	0503012417	SEAL	02
06	0503011800	SEAL RING	02
07	0503010691	1/4" GREASE FITTING	01
08	0603027851	20" X 0.2" FLAT PLAIN DISC	01
09	0502020641	BLADE DISC FLANGE	01
10	0503010371	5/16" X 1" BOLT	06
11	0503011444	SPRING WASHER	06
12	0503010337	5/16" NUT	06

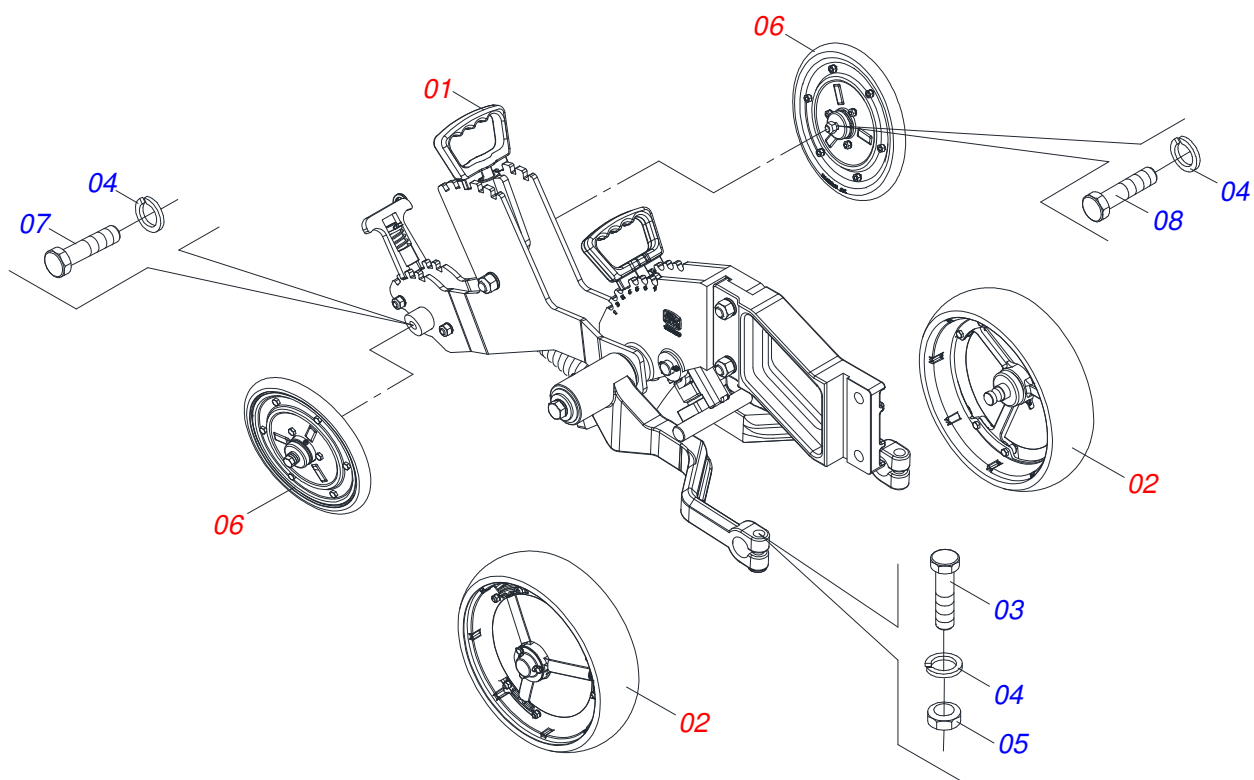 


Item	Code	Description	QT
001	0511059462	DEPTH CONTROL WITH FAST ADJUSTMENT	01
002	0511050077	WHEEL STRIPED	02
003	0503016453	1/2" X 2.1/2 BOLT	02
004	0503010019	1/2" SPRING WASHER	04
005	0503010028	1/2" NUT	02
006	0501052908	PRESS WHEELS ASSY	02
007	0503010752	1/2" X 3.1/2" BOLT	01
008	0503013739	1/2" X 1" BOLT	01

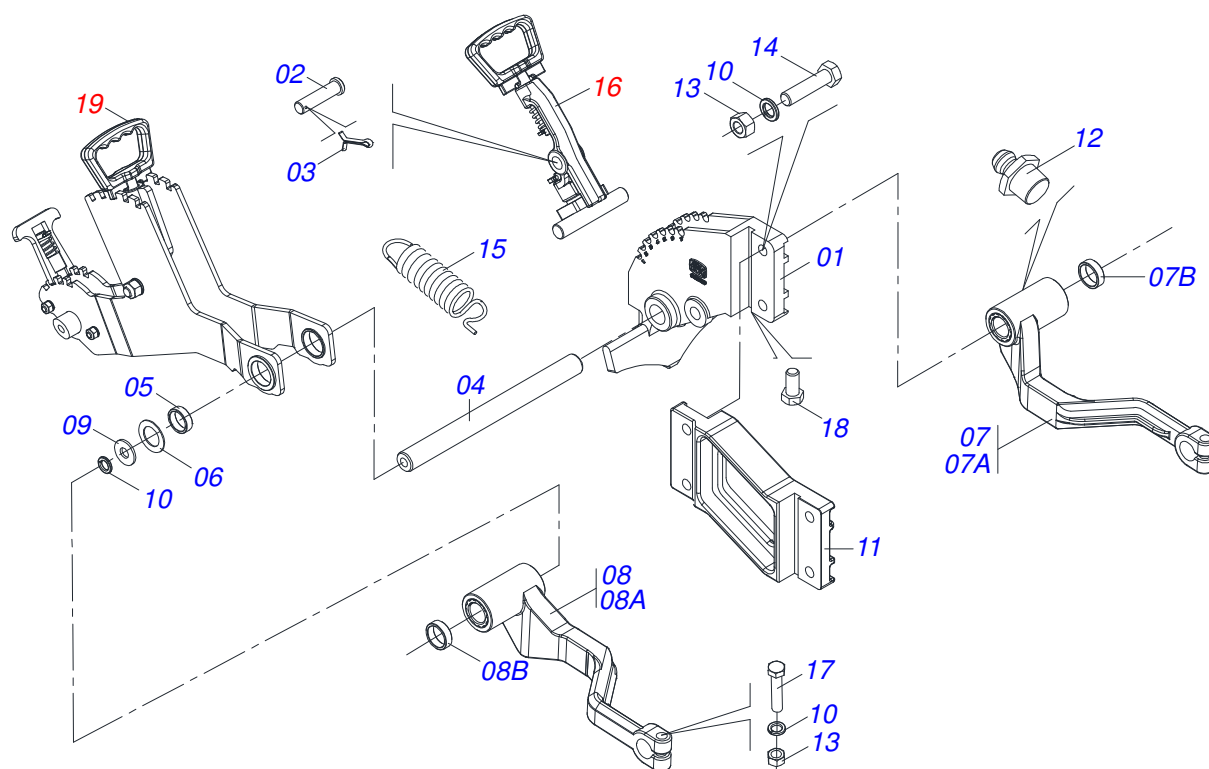 


Item	Code	Description	QT
001	0502012283	DEPTH CONTROL SUPPORT	01
002	0521019093	0.6" X 2.7" PIVOT SHAFT	01
003	0503010257	1/8" X 1" COTTERPIN	01
004	0571013054	DEPTH CONTROL WHEEL AXLE	01
005	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE	02
006	0511015346	FLAT WASHER	04
007	0501110720	ARM,LEFT	01
007A	0502012726	LEFT DEPTH WHEEL ARM	01
007B	0503034375	SLEEVE ARM WHEEL DEPTH CONTROL	02
008	0501110719	DEPTH CONTROL RIGHT ARM	01
008A	0501110720	ARM,LEFT	01
008B	0503034375	SLEEVE ARM WHEEL DEPTH CONTROL	02
009	0511017302	FLAT WASHER	02
010	0503011440	SPRING WASHER	04
011	0502012663	EXTENSION	01
012	0503010002	1800 GREASE FITTING	02
013	0503010060	1/2" NUT	02
014	0503010740	1/2" X 2" BOLT	02
015	0503031393	1.57" X 5.98" X 0.2"TRACTION SPRING	01
016	0501056769	DEPTH WHEELS REGULATOR ASSY	01
017	0503010311	1/2" X 1-1/4" BOLT	02
018	0503010256	3/8" X 3/4" BOLT	01
019	0511059463	COMFORT WHEEL WITH FAST ADJUSTMENT	01

COMFORT WHEEL WITH FAST ADJUSTMENT

 
0511059463

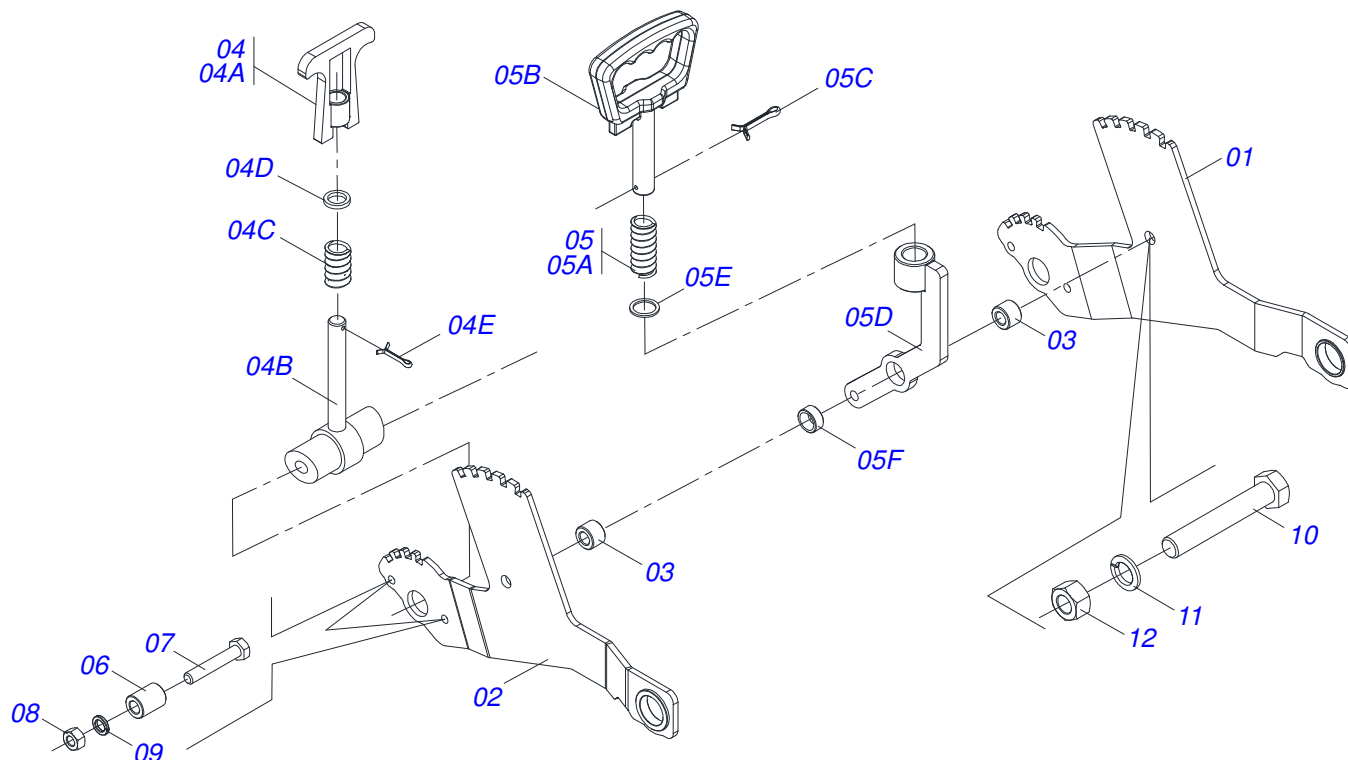


Item	Code	Description	QT
001	0521067072	COMPACT WHEEL RIGHT ARM	01
002	0521067071	COMPACT RUEDA LEFT ARM	01
003	0541012144	8,50 X 16 X 21 SLEEVE	02
004	0501055289	HANDLE SMALLER ASSY	01
004A	0511065451	PRESS WHEEL ADJUSTER	01
004B	0511065496	PRESS WHEEL FIXER	01
004C	0503031719	0.7" X 1" X 1,1" COMPRESSION SPRING	01
004D	0541012143	FLAT WASHER	01
004E	0503010257	1/8" X 1" COTTERPIN	01
005	0511059461	COMPLETE REGULATOR	01
005A	0503030174	COMPRESSION SPRING	01
005B	0502011689	1/8" DEPTH CONTROL LEVER	01
005C	0503010257	1/8" X 1" COTTERPIN	01
005D	0521067070	PRESS WHEEL ADJUSTER	01
005E	0511015976	FLAT WASHER	01
005F	0541012146	0.53" X 0.74" X 0.33" SLEEVE	01
006	0541012145	SLEEV 13,5 X 25 X 18	02
007	0503010479	1/2" X 3" BOLT	01
008	0503010060	1/2" NUT	01
009	0503011440	SPRING WASHER	01
010	0503010397	5/16" X 1-3/4" BOLT	02
011	0503011444	SPRING WASHER	02
012	0503010337	5/16" NUT	02

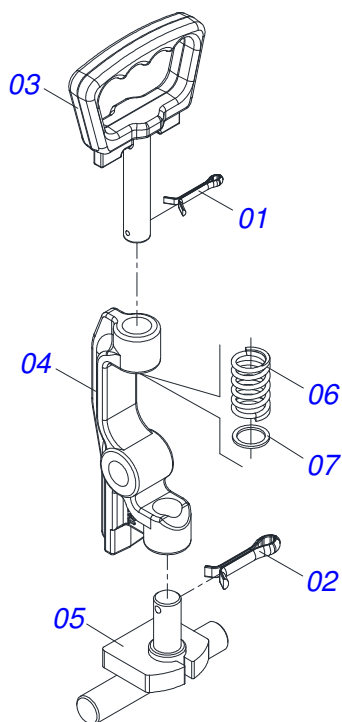 


Item	Code	Description	QT
001	0503010257	1/8" X 1" COTTERPIN	01
002	0503010071	3/16" X 1" COTTERPIN	01
003	0502011689	1/8" DEPTH CONTROL LEVER	01
004	0502011688	SEED SIST CONTROL DEPTH LEVER	01
005	0511065582	DEPTH WHEEL STOP	01
006	0503030975	0.9" X 1.5" X 0.1" SPRING	01
007	0511015976	FLAT WASHER	01

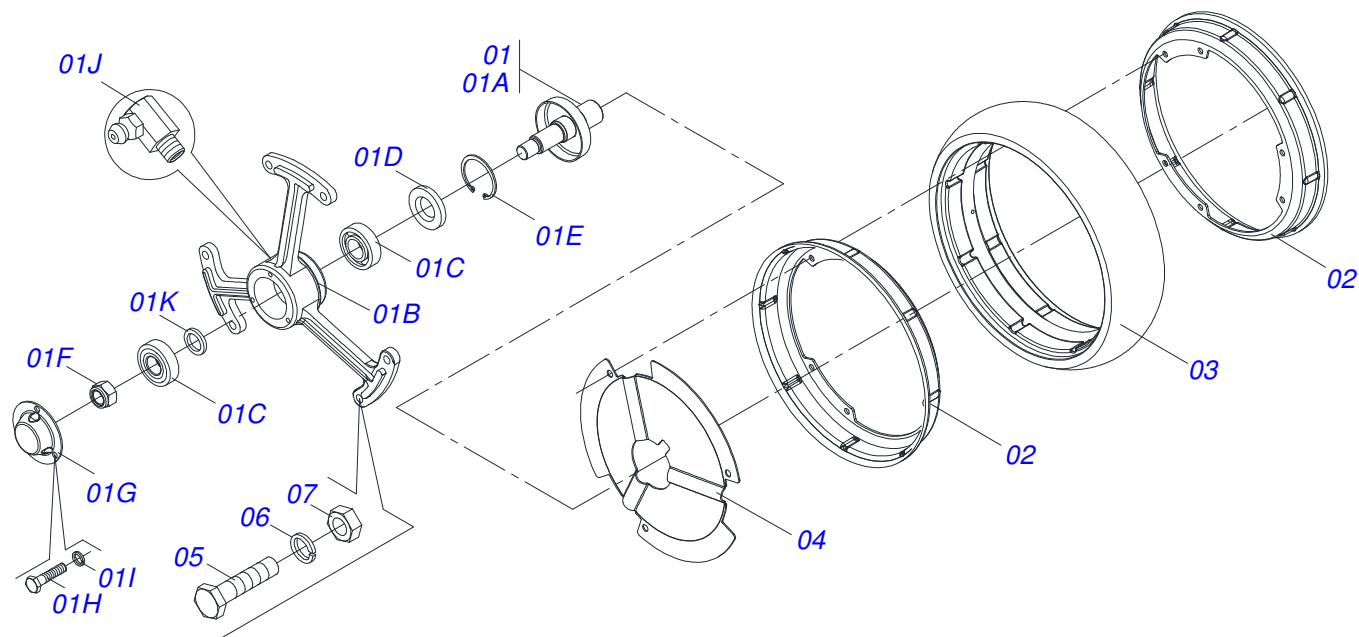 


Item	Code	Description	QT
01	0511052287	DEPTH WHEEL HUB ASSY	01
01A	0521063443	DEPTH CONTROL AXLE	01
01B	0502011918	DEPHT WHEELS BOX	01
01C	0503010269	6204 BALL BEARING	02
01D	0503010689	SEAL 00763-BR	01
01E	0503011105	SEAL RING	01
01F	0503010811	5/8" UNF SELF ADJUSTING NUT	01
01G	0521019178	COVER DEPTH	01
01H	0503010298	1/4" X 1/2" BOLT	03
01I	0503011441	SPRING WASHER	03
01J	0503011098	1/4" GREASE FITTING	01
01K	0501013636	SPACING SLEEVE	01
02	0551019904	PRESS WHEEL RIM	02
03	0503032970	RUBBER BAND	01
04	0561016889	STRIPED CAP WHEEL DEPTH	01
05	0503010365	NUT	06
06	0503010179	SPRING WASHER	06
07	0503010337	5/16" NUT	06

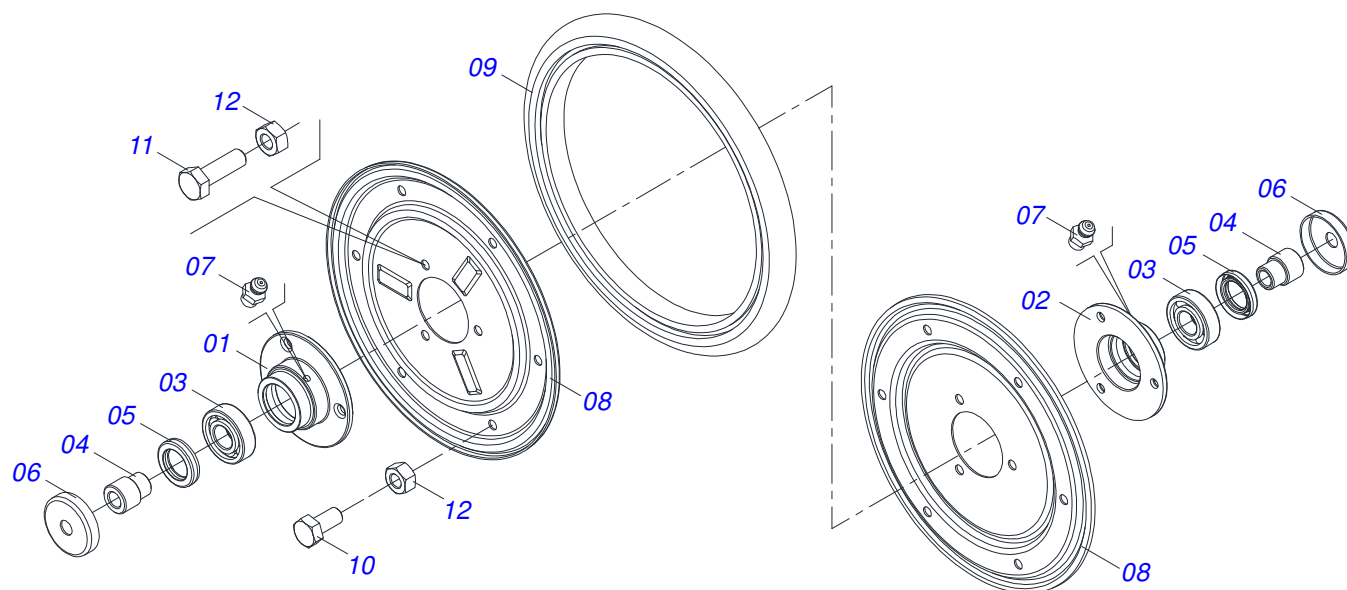 


Item	Code	Description	QT
01	0502011919	PRESS WHEEL HUB	01
02	0502011877	PRESS WHEEL HUB	01
03	0503010269	6204 BALL BEARING	02
04	0521018922	PRESS WHEEL PASSANG AXLE	02
05	0503012734	SEAL 01556 BR	02
06	0521018921	DUST CLOAK	02
07	0503010691	1/4" GREASE FITTING	01
08	0521018928	PRESS WHEEL RIM	02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND	01
10	0503010011	5/16" X 1/2" BOLT	06
11	0503010358	5/16" X 5/8" BOLT	03
12	0503013816	5/16" LOCKNUT	03

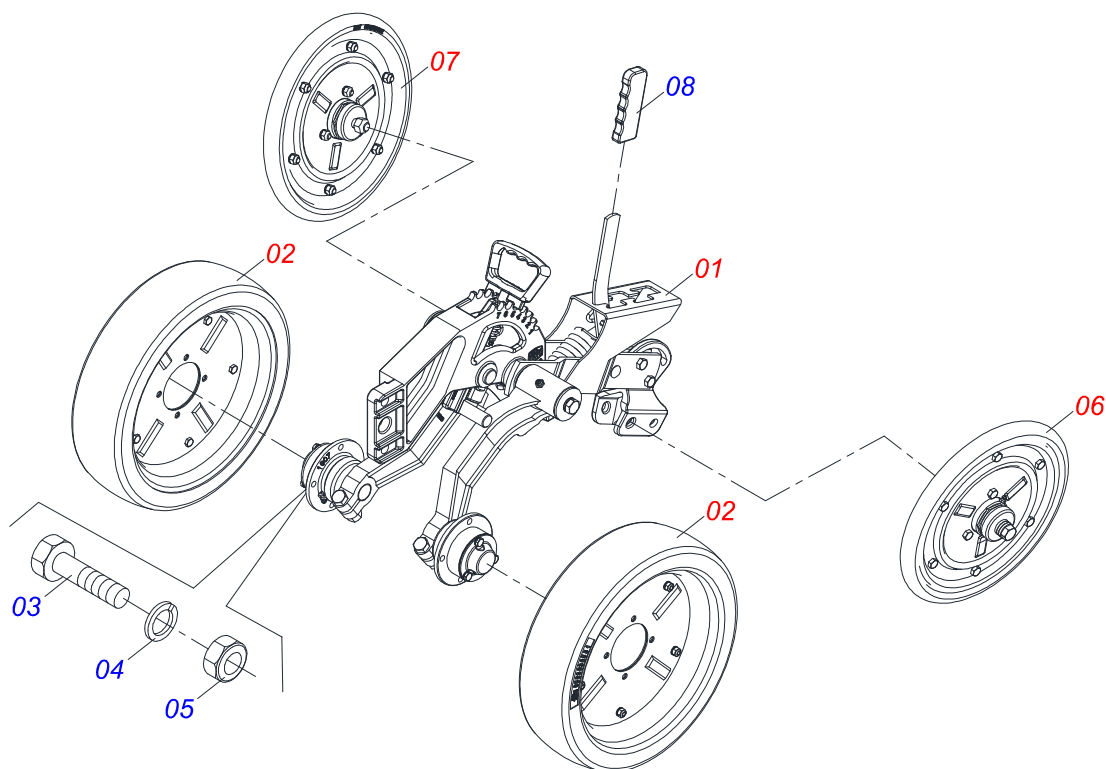 


Item	Code	Description	QT
001	0511058650	CONTROL DEPTH	01
002	0501052538	DEPTH CONTROL WHEEL RUBBER BAND	02
003	0503010358	5/16" X 5/8" BOLT	08
004	0503010179	SPRING WASHER	08
005	0503013816	5/16" LOCKNUT	08
006	0511054333	COMPACT WHEEL RIGHT C/ BEARING	01
007	0511054334	COMPACT WHEEL LEFT C/ BEARING	01
008	0503033942	COVER REGULATORY WHEEL	01

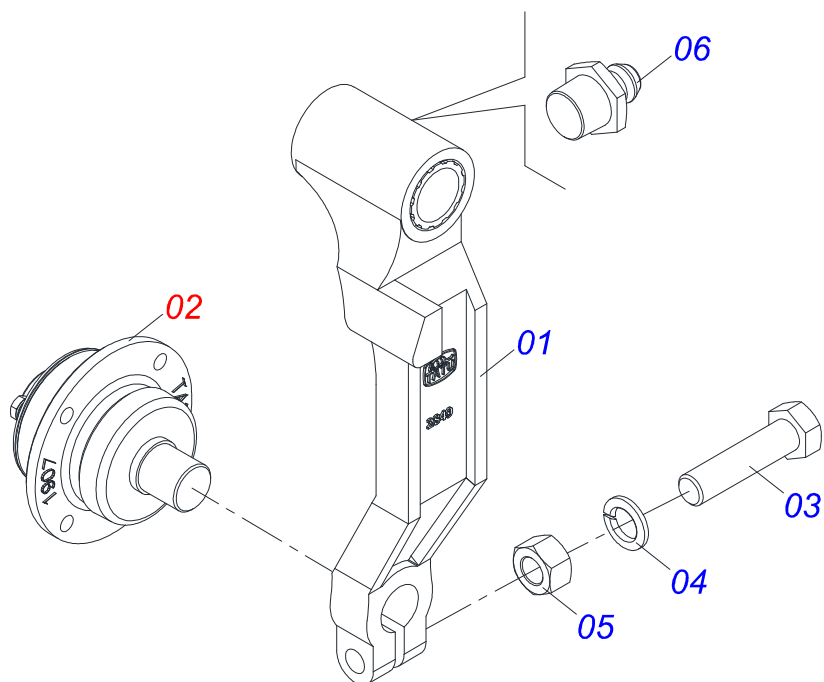 


Item	Code	Description	QT
001	0501110834	LH ARM	01
002	0501052627	DEPHT WHEELS BOX	01
003	0503010740	1/2" X 2" BOLT	01
004	0503011440	SPRING WASHER	01
005	0503010060	1/2" NUT	01
006	0503010002	1800 GREASE FITTING	01

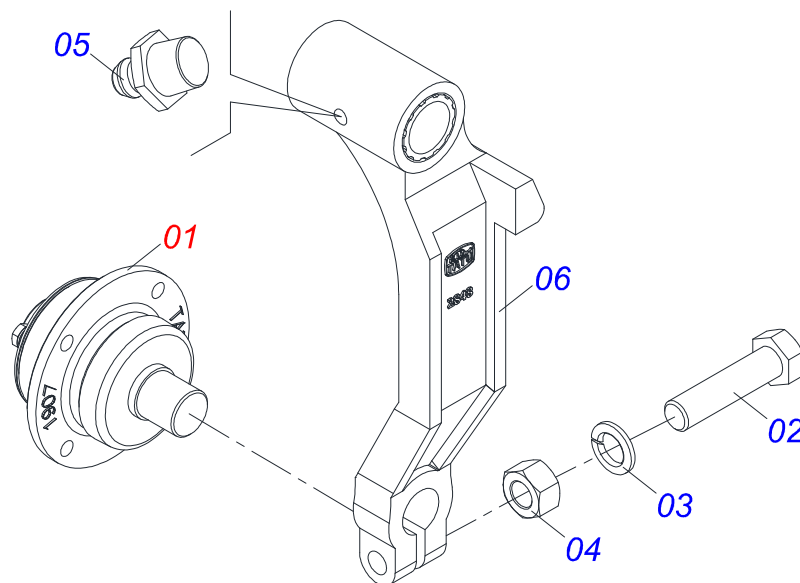 


Item	Code	Description	QT
001	0501052627	DEPHT WHEELS BOX	01
002	0503010740	1/2" X 2" BOLT	01
003	0503011440	SPRING WASHER	01
004	0503010060	1/2" NUT	01
005	0503010002	1800 GREASE FITTING	01
006	0501110833	DEPTH CONTROL RIGHT ARM	01

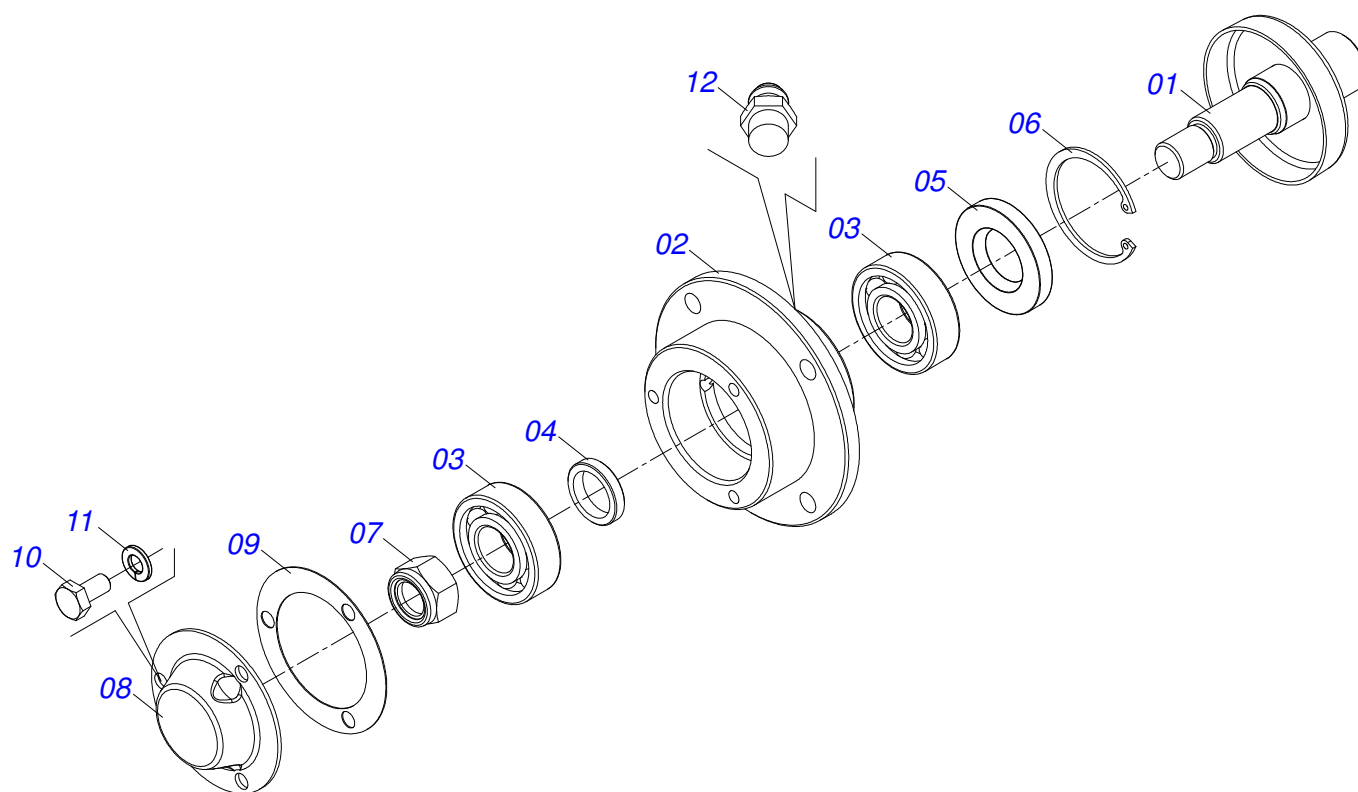 


Item	Code	Description	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK	01
02	0502011907	DEPTH CONTROL WHEEL HUB	01
03	0503010269	6204 BALL BEARING	02
04	0501013636	SPACING SLEEVE	01
05	0503010689	SEAL 00763-BR	01
06	0503011105	SEAL RING	01
07	0503010878	5/8" SELF ALIGNING NUT	01
08	0521019178	COVER DEPTH	01
09	0503030757	2.9" X 2" X 0.02" JOINT	01
10	0503014729	1/4" UNF X 1/2" BOLT	03
11	0503011441	SPRING WASHER	03
12	0503010691	1/4" GREASE FITTING	01

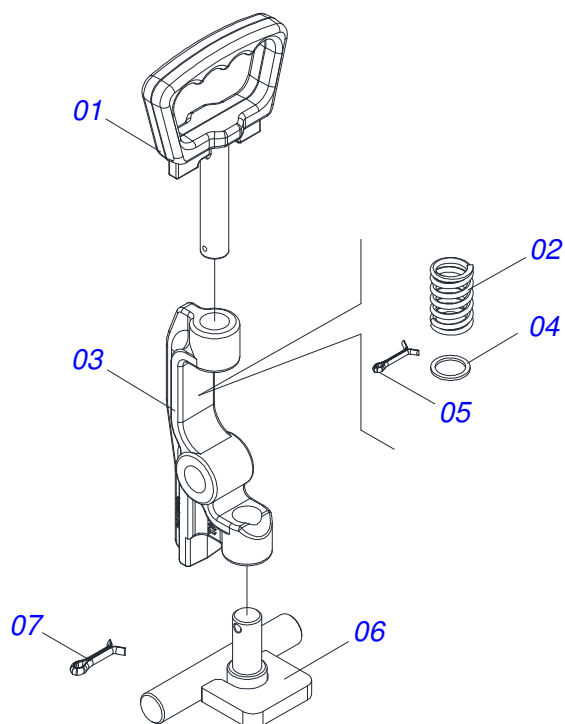 


Item	Code	Description	QT
01	0502011689	1/8" DEPTH CONTROL LEVER	01
02	0503030975	0.9" X 1.5" X 0.1" SPRING	01
03	0502011688	SEED SIST CONTROL DEPTH LEVER	01
04	0511015976	FLAT WASHER	01
05	0503010257	1/8" X 1" COTTERPIN	01
06	0511060699	DEPTH WHEEL STOP	01
07	0503010071	3/16" X 1" COTTERPIN	01

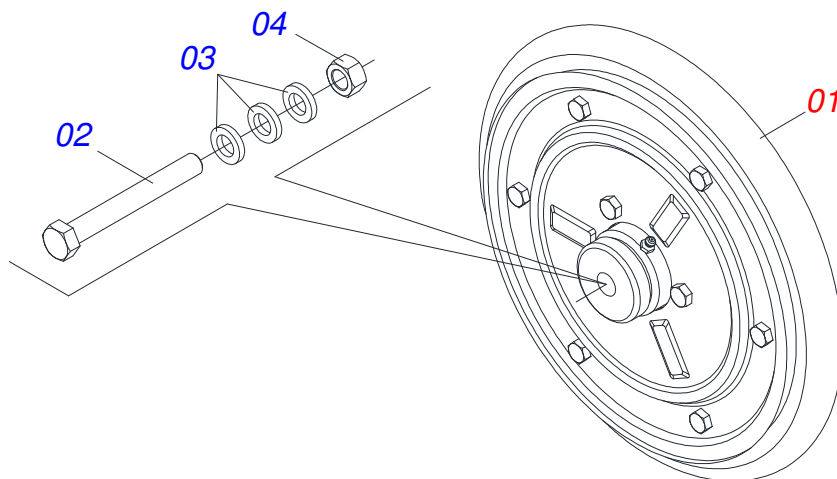 


Item	Code	Description	QT
01	0501052908	PRESS WHEELS ASSY	01
02	0503016449	1/2 X 4 BOLT	01
03	0521014508	FLAT WASHER	03
04	0503012136	1 X 9 BOLT	01

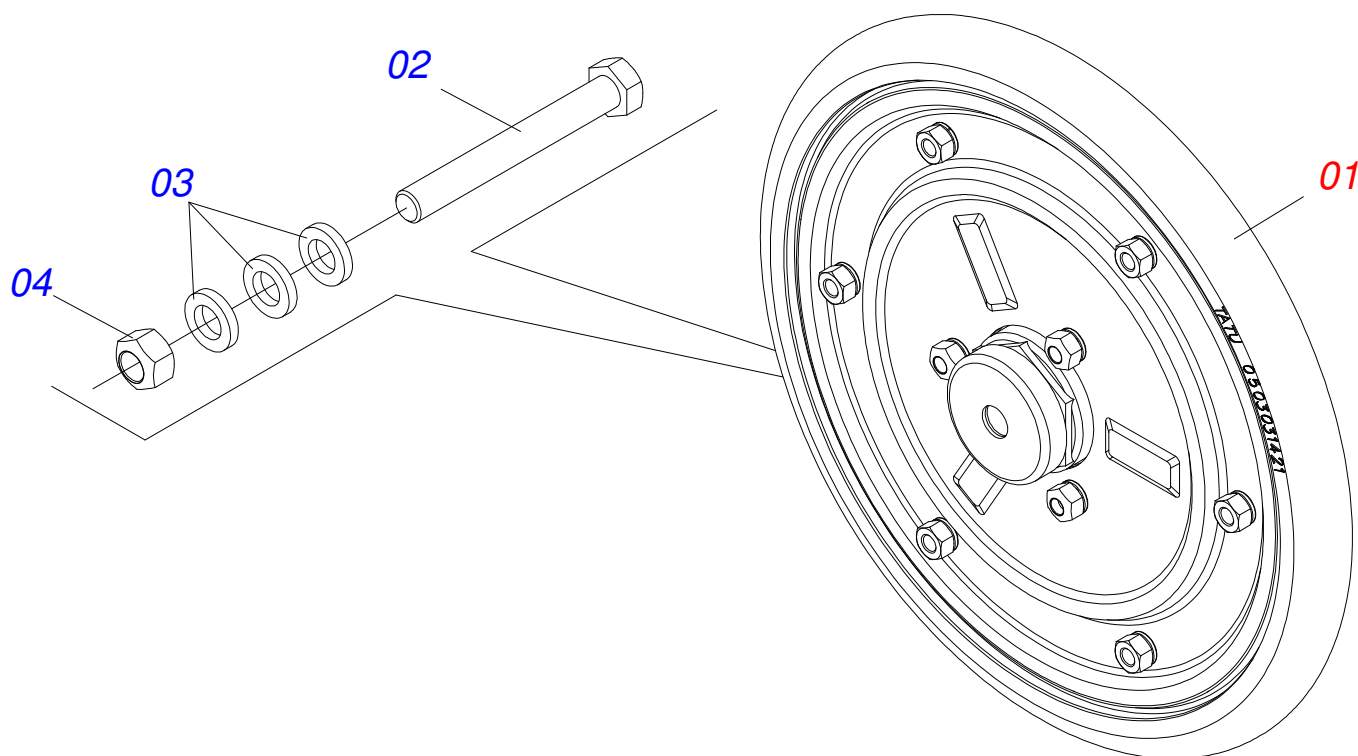 


Item	Code	Description	QT
001	0501052908	PRESS WHEELS ASSY	01
002	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT	01
003	0521014508	FLAT WASHER	03
004	0503016864	LH 1/2" LOCK NUT	01

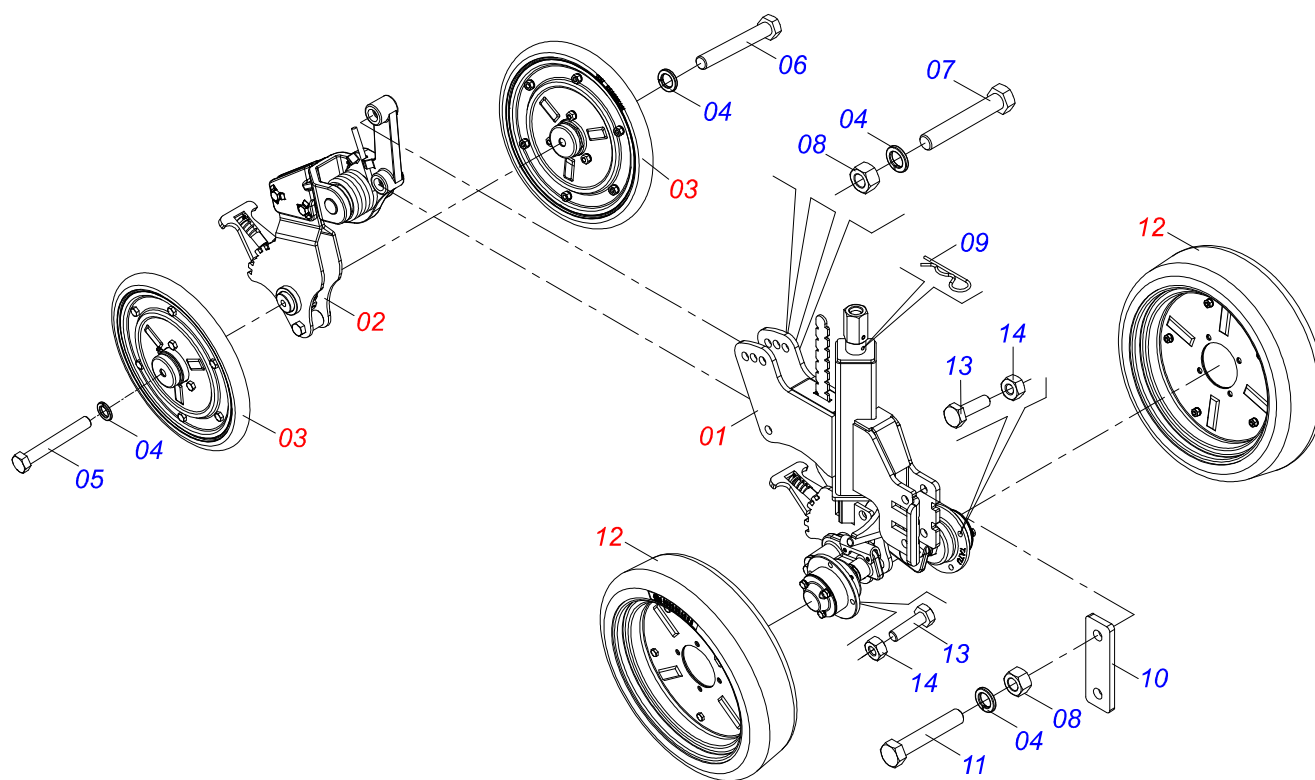 


Item	Code	Description	QT
01	0511052971	CPRA DEPTH CONTROL ASSY	01
02	0511052970	CPRA V PRESS WHEEL ASSY	01
03	0501052908	PRESS WHEELS ASSY	02
04	0503010019	1/2" SPRING WASHER	06
05	0503010752	1/2" X 3.1/2" BOLT	01
06	0503013739	1/2" X 1" BOLT	01
07	0503010479	1/2" X 3" BOLT	02
08	0503010060	1/2" NUT	04
09	0503030012	HAIR PIN	01
10	0571013222	FIXING CHOCK	01
11	0503010741	1/2" X 2-3/4" BOLT	02
12	0511055819	DEPTH WHIT AROS BAND	02
13	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT	08
14	0503013816	5/16" LOCKNUT	08

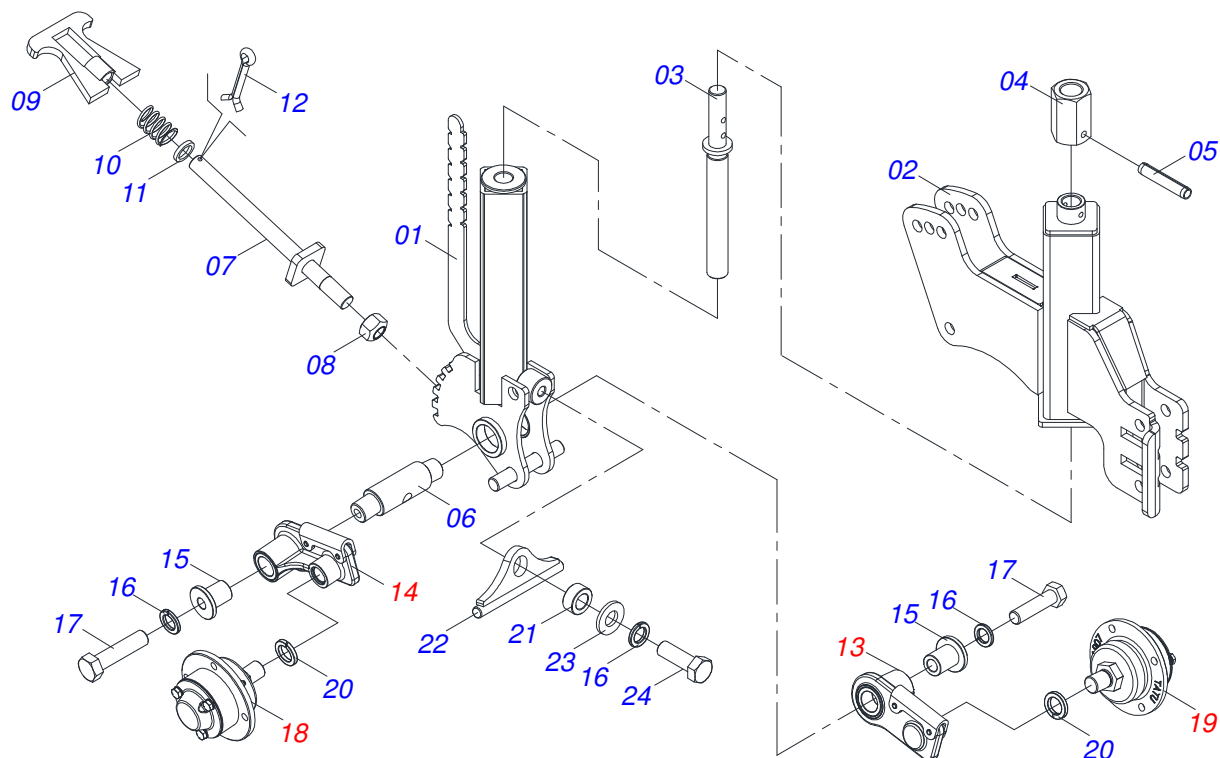 


Item	Code	Description	QT
01	0521063808	DEPTH CONTROL INNER COLUMN CONTROL WITH	01
02	0521063809	DEPTH CONTROL EXTERNAL COLUMN CONTROL	01
03	0571013194	REGULATOR SPINDLE	01
04	0551010616	ROD HEX	01
05	0503010683	0,2" X 1,2" SPRING PIN	01
06	0571013202	REGULATOR AXLE WHEELS COBRIDORA	01
07	0521063812	REGULATOR LEVER ALXE	01
08	0503011336	1/2" HEX SELF ADJUSTING NUT	01
09	0511065308	LOCK REGULATOR	01
10	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING	01
11	0541011627	FLAT WASHER	01
12	0503010140	1/8" X 3/4" COTTERPIN	01
13	0511059325	LEFT ARM WHEELS	01
14	0511059324	ARM RIGHT WHEEL COBRIDORA	01
15	0571014709	SLEEVE LOCK CONTROL ARM	02
16	0503011440	SPRING WASHER	03
17	0503819099	BOLT	02
18	0511051546	LH DEPTH CONTROL ASSY	01
19	0511051547	RH DEPTH CONTROL ASSY	01
20	0503011442	3/4" SPRING WASHER	02
21	0571013189	SLEEVE SUPPORT BEATER	01
22	0521063813	WHEEL PRESS BEATER	01
23	0501010937	FLAT WASHER	01
24	0503010920	1/2" X 1.1/2" BOLT	01

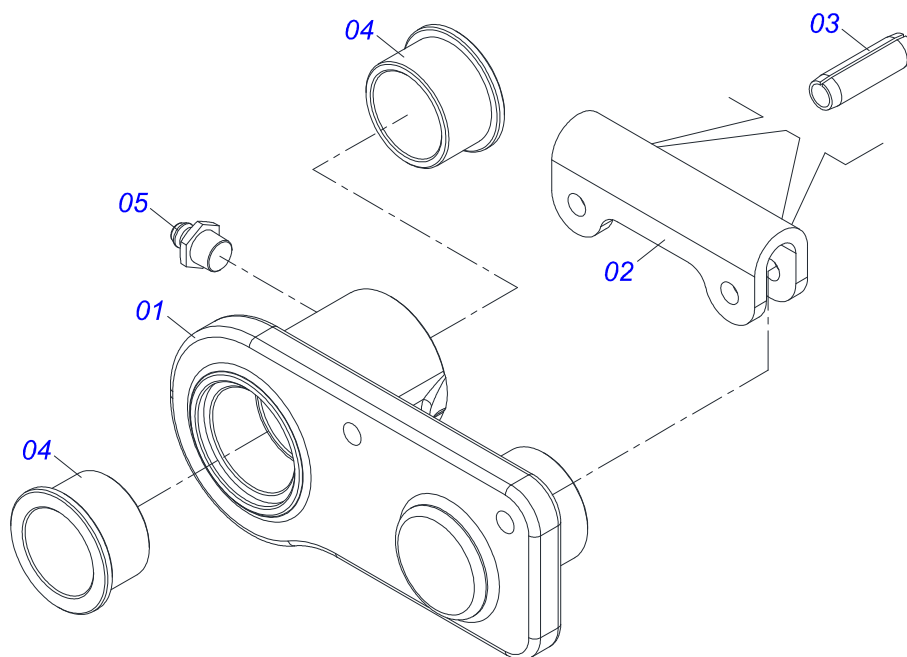 


Item	Code	Description	QT
001	0502012844	LEFT ARM WHEELS	01
002	0581011340	ARM COVER	01
003	0503011402	0.2" X 0.8" SPRING PIN	02
004	0503034383	GLOVE SUPPORT ARM WHEEL COBRIDORA	02
005	0503010002	1800 GREASE FITTING	01

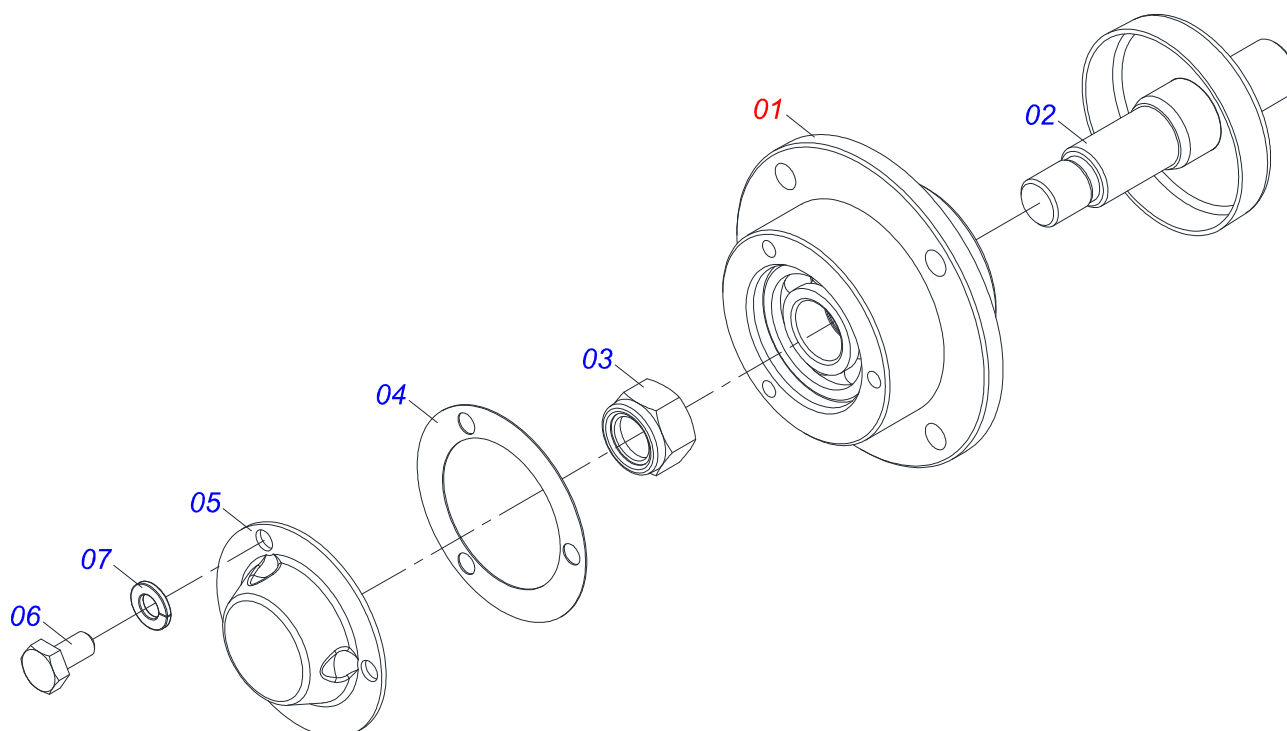 


Item	Code	Description	QT
01	0511051583	DEPTH WHEEL HUB SEMIFINISHED	01
02	0511066638	AXLE WHEEL RIGHT DEPTH WITH DOOR DUST	01
03	0503010878	5/8" SELF ALIGNING NUT	01
04	0503030757	2.9" X 2" X 0.02" JOINT	01
05	0521019178	COVER DEPTH	01
06	0503014729	1/4" UNF X 1/2" BOLT	03
07	0503011441	SPRING WASHER	03

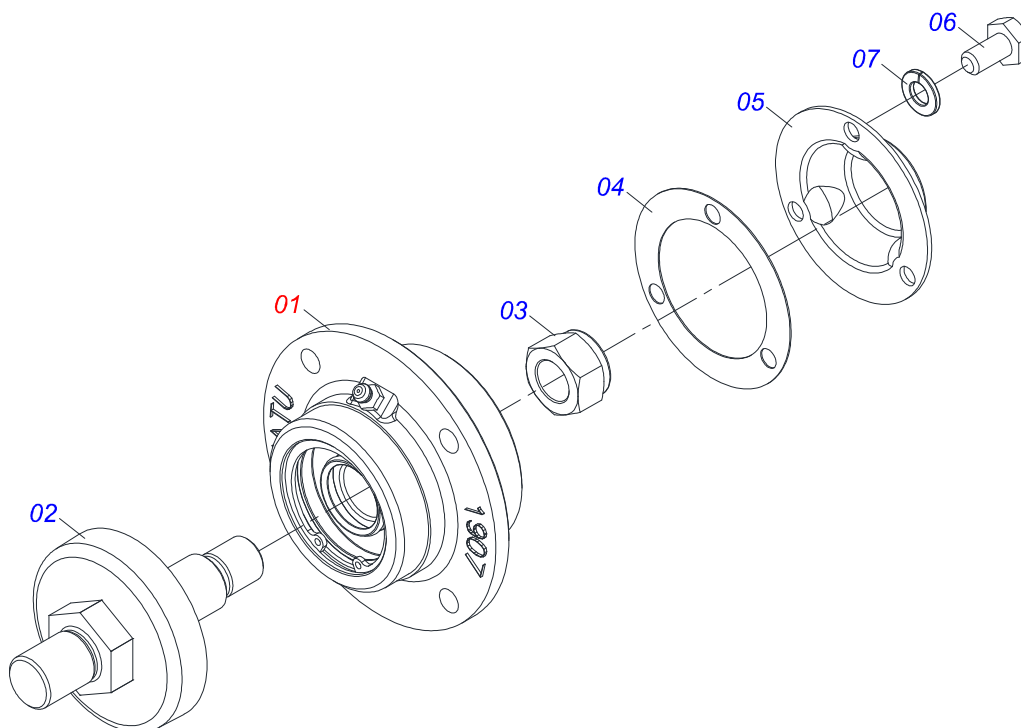 


Item	Code	Description	QT
01	0511051583	DEPTH WHEEL HUB SEMIFINISHED	01
02	0511066637	AXLE WHEEL LEFT DEPTH WITH DOOR DUST	01
03	0503010878	5/8" SELF ALIGNING NUT	01
04	0503030757	2.9" X 2" X 0.02" JOINT	01
05	0521019178	COVER DEPTH	01
06	0503014729	1/4" UNF X 1/2" BOLT	03
07	0503011441	SPRING WASHER	03

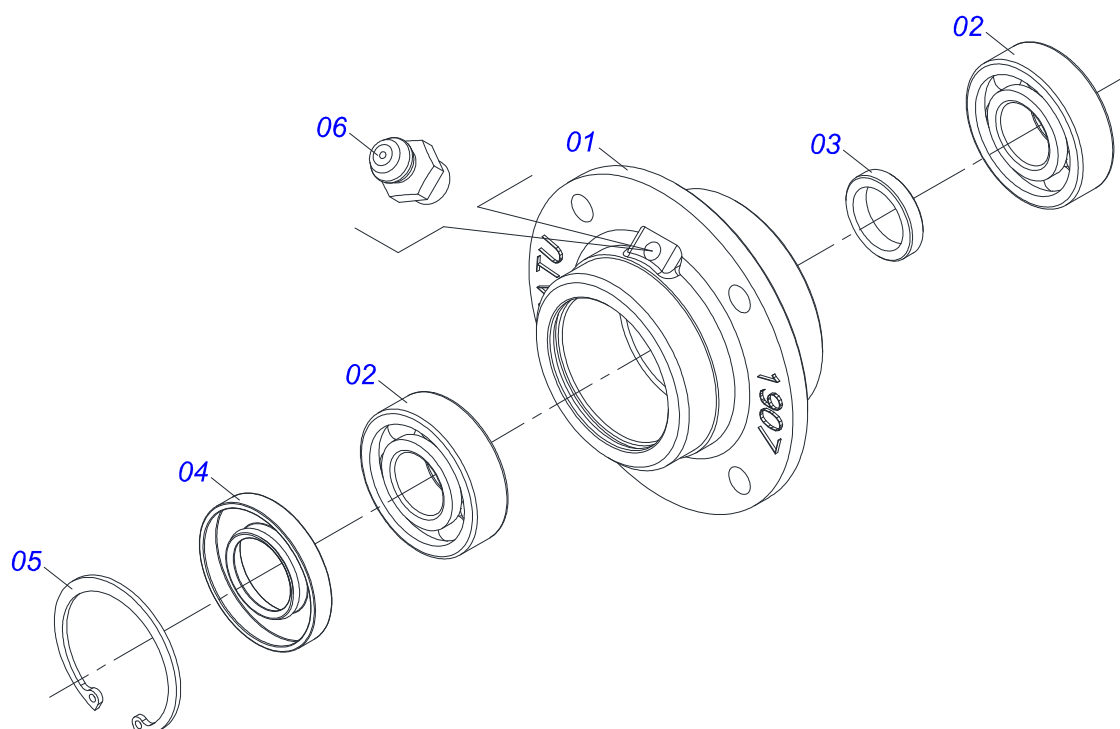 


Item	Code	Description	QT
001	0502011907	DEPTH CONTROL WHEEL HUB	01
002	0503010269	6204 BALL BEARING	02
003	0501013636	SPACING SLEEVE	01
004	0503010689	SEAL 00763-BR	01
005	0503011105	SEAL RING	01
006	0503010691	1/4" GREASE FITTING	01

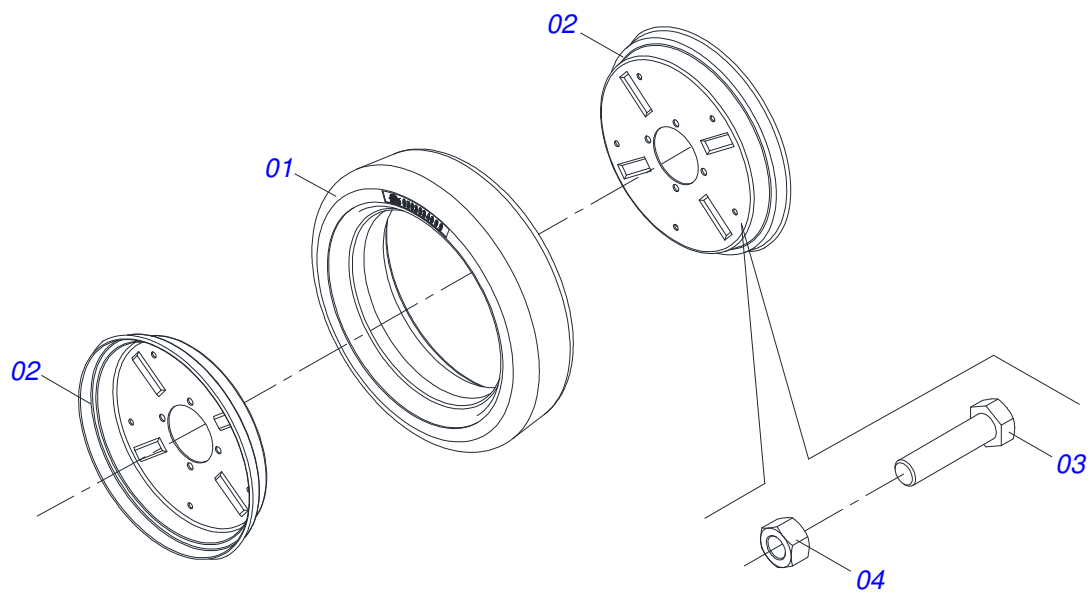 


Item	Code	Description	QT
001	0503034008	DEPTH CONTROL	01
002	0521010832	RIM FLANGE	02
003	0503010298	1/4" X 1/2" BOLT	05
004	0503010144	1/4" NUT	05

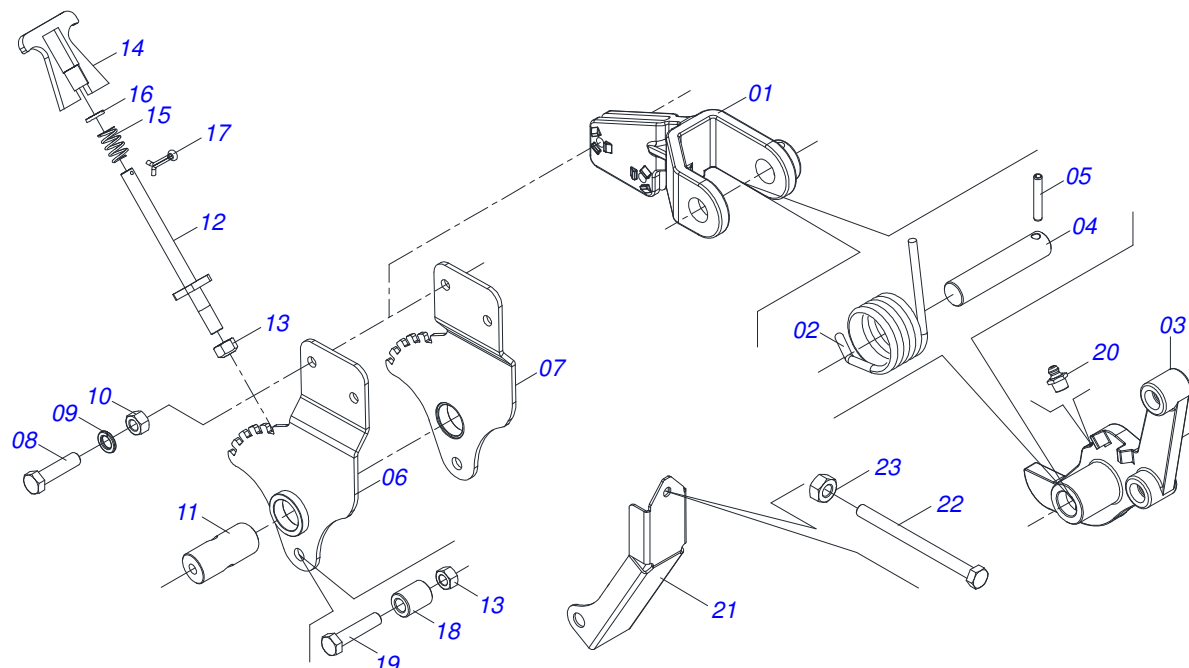 


Item	Code	Description	QT
01	0502012850	PRESS WHEELS ARM	01
02	0503030883	RIGHT TORSION SPRING	01
03	0502011066	PRESS WHEELS ARM SUPPORT	01
04	0531017415	1" X 4.72" AXLE JOINT	01
05	0503010839	03"X 0.6" SPRING PIN	01
06	0521063841	REGULATOR RIGHT COMPACTOR	01
07	0521063842	REGULATOR LEFT COMPACTOR	01
08	0503811404	BOLT	02
09	0503011443	SPRING WASHER	02
10	0503010026	3/8" NUT	02
11	0571013295	ALXE REGULATOR COMPACTOR	01
12	0521063812	REGULATOR LEVER ALXE	01
13	0503011336	1/2" HEX SELF ADJUSTING NUT	02
14	0511065308	LOCK REGULATOR	01
15	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING	01
16	0541011627	FLAT WASHER	01
17	0503010140	1/8" X 3/4" COTTERPIN	01
18	0571013293	SLEEVE LOCK COMPACTOR V CONTROL WITH	01
19	0503811172	BOLT	01
20	0503010002	1800 GREASE FITTING	01
21	0581013744	PROTECTION COVER - CPRA	01
22	0503813096	BOLT	01
23	0503013816	5/16" LOCKNUT	0

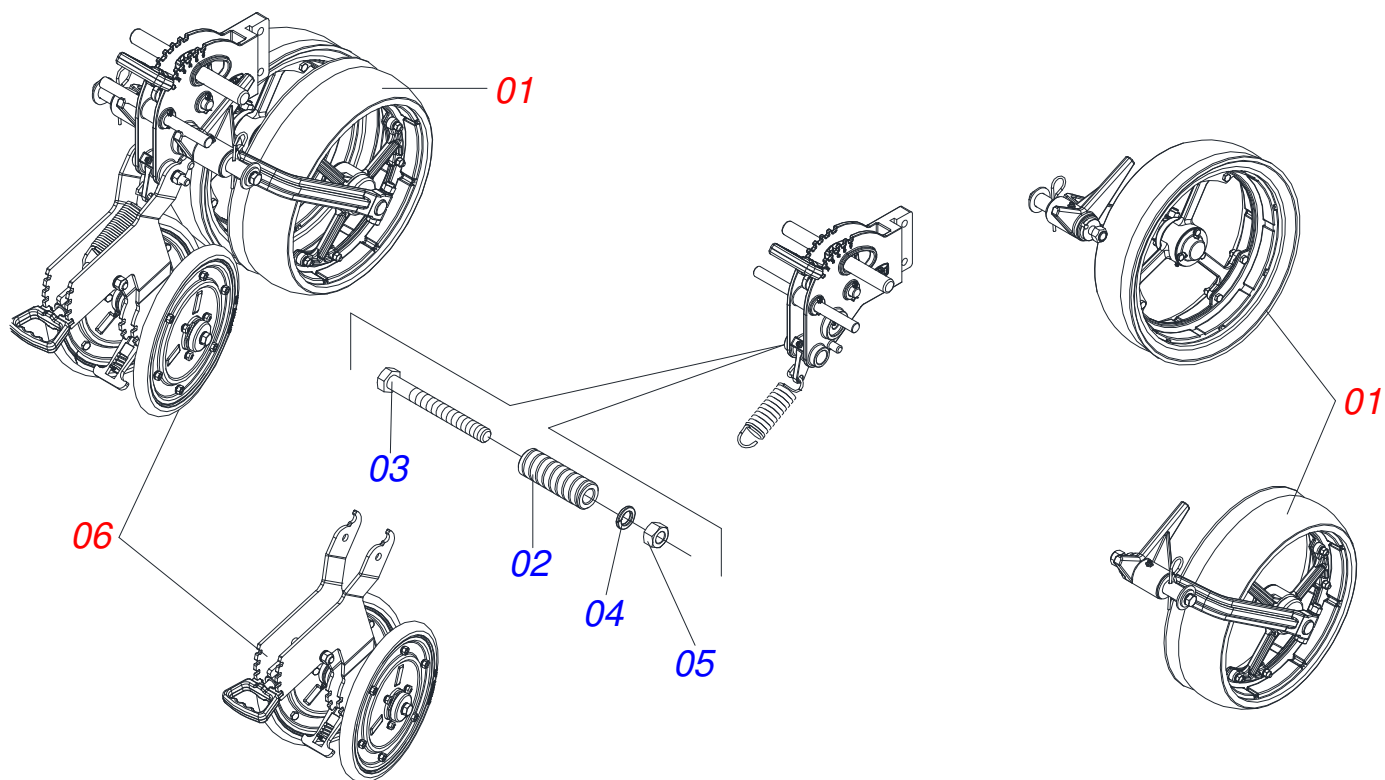 


Item	Code	Description	QT
001	0511055326	DEPTH CONTROL PRESS WHEEL ASSY	01
002	0551019650	SLEEVE 13,20 X 25 X 74	01
003	0503010706	1/2" X 4.1/2" BOLT	01
004	0503010019	1/2" SPRING WASHER	01
005	0503010060	1/2" NUT	01
006	0511055327	PRESS WHEEL AXLE V BORR C SPA	01

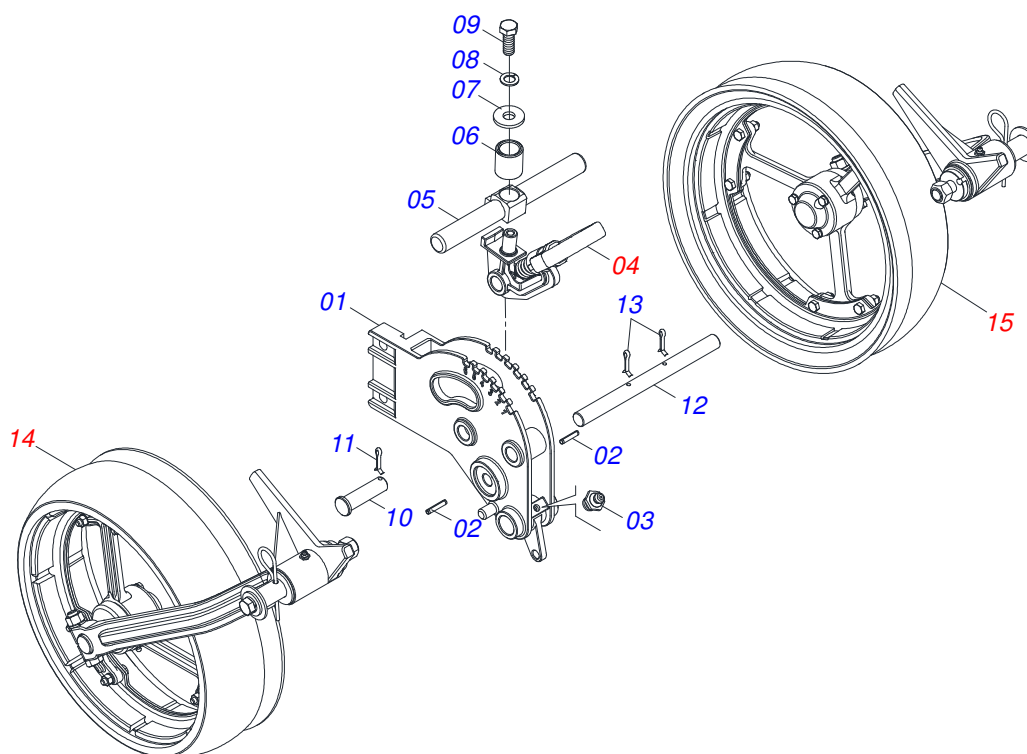 


Item	Code	Description	QT
001	0502012758	DEPTH CONTROL SUPPORT	01
002	0503010585	0.24" X 1.18" SPRING PIN	02
003	0503010002	1800 GREASE FITTING	01
004	0501059228	ADJUSTMENT LEVER	01
005	0502012611	DEPTH CONTROL AXLE	01
006	0571015326	ARTICULATION SLEEVE HANDLE	01
007	0501010984	FLAT WASHER	01
008	0503011443	SPRING WASHER	01
009	0503010237	3/8" X 1" BOLT	01
010	0571016132	PIVOT SHAFT	01
011	0503010071	3/16" X 1" COTTERPIN	01
012	0561014336	PIVOT SHAFT	01
013	0503010071	3/16" X 1" COTTERPIN	02
014	0511055328	DEPTH WHEEL SYSTEM	01
015	0511055329	LEFT DEPTH WHEEL	01

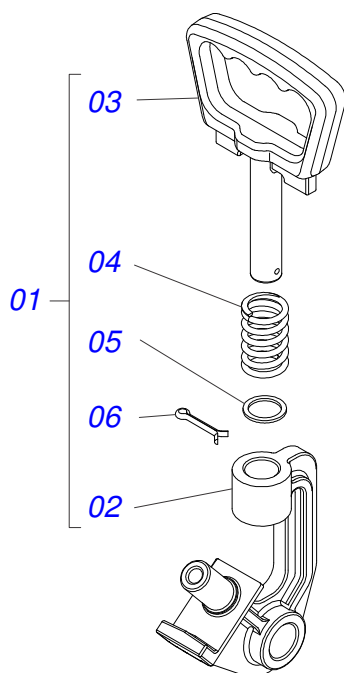 


Item	Code	Description	QT
01	0501059228	ADJUSTMENT LEVER	01
02	0502012603	ADJUSTMENT LEVER	01
03	0502011689	1/8" DEPTH CONTROL LEVER	01
04	0503030975	0.9" X 1.5" X 0.1" SPRING	01
05	0511015976	FLAT WASHER	01
06	0503010140	1/8" X 3/4" COTTERPIN	01

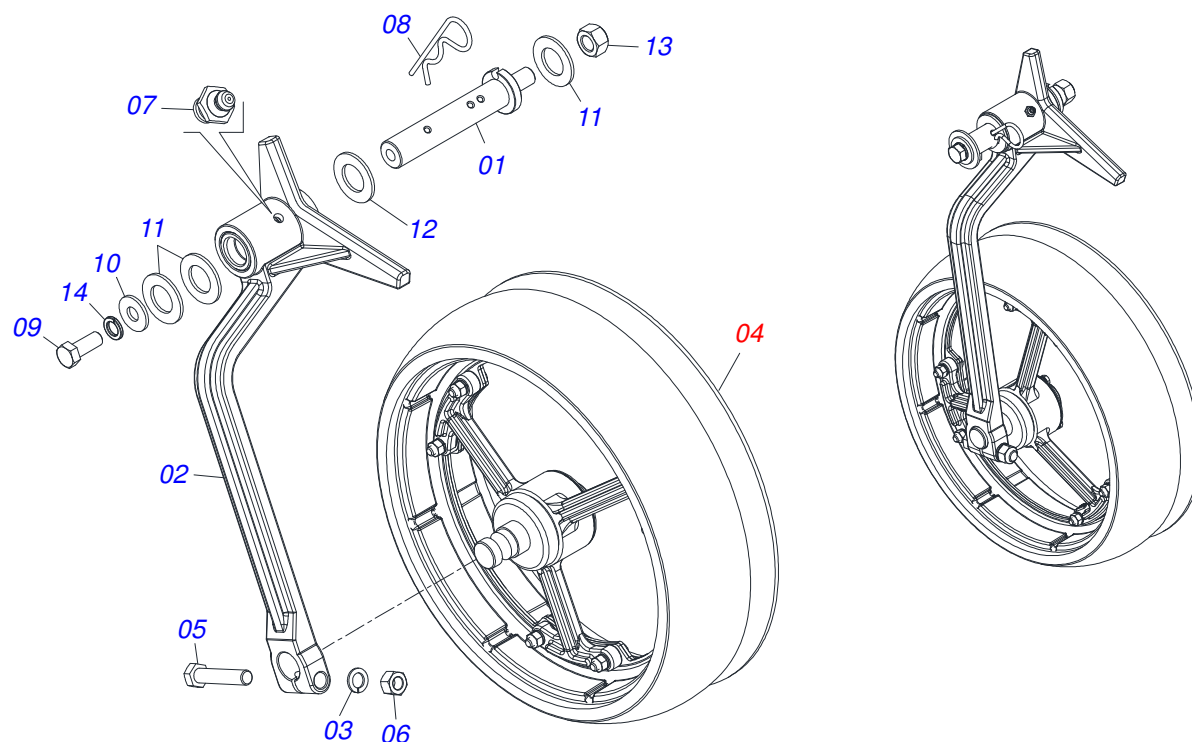 


Item	Code	Description	QT
001	0561014385	CARRYING-WHEELS PIVOT SHAFT	01
002	0501110777	RIGHT WHEEL ARM	01
003	0503010019	1/2" SPRING WASHER	01
004	0511055627	DEPTH CONTROL PRESS WHEELS	01
005	0503016453	1/2" X 2.1/2 BOLT	01
006	0503010060	1/2" NUT	01
007	0503010002	1800 GREASE FITTING	01
008	0503030012	HAIR PIN	01
009	0503014007	1/2" X 1-1/4" BOLT	01
010	0511017302	FLAT WASHER	01
011	0501011445	FLAT WASHER	03
012	0571015974	WASHER	01
013	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
014	0503011440	SPRING WASHER	01

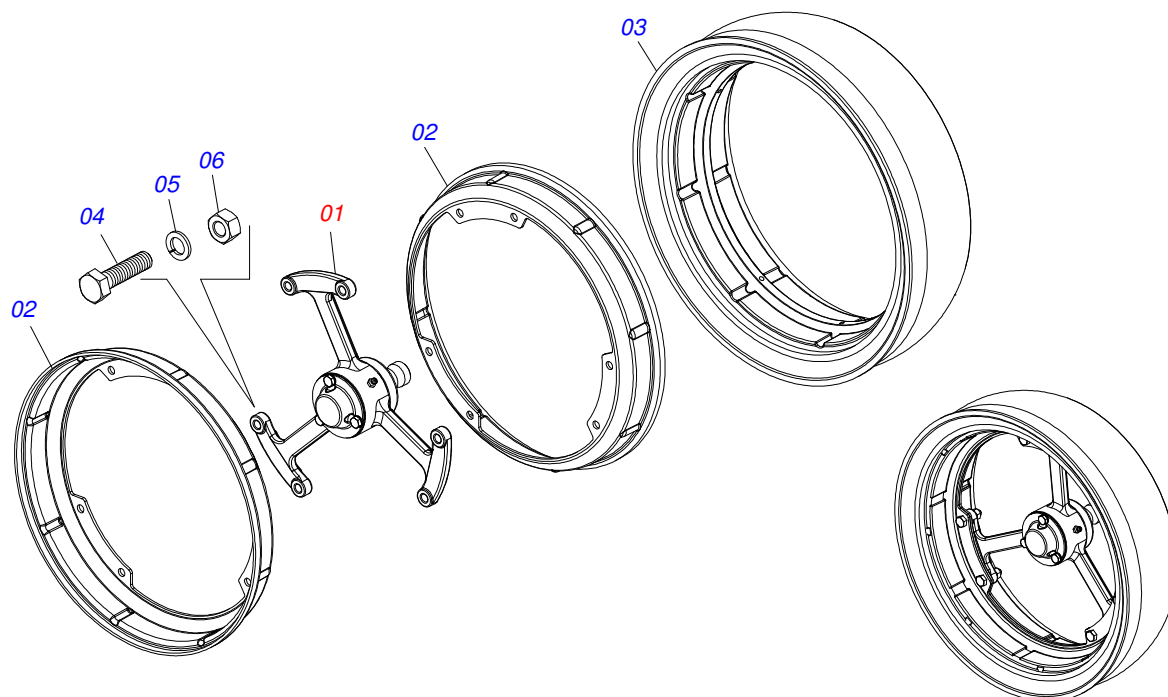 


Item	Code	Description	QT
01	0511055626	STRIPED BOX WHEEL DEPTH	01
02	0551019904	PRESS WHEEL RIM	02
03	0503030891	RUBBER BAND	01
04	0503010365	NUT	06
05	0503010179	SPRING WASHER	06
06	0503010337	5/16" NUT	06

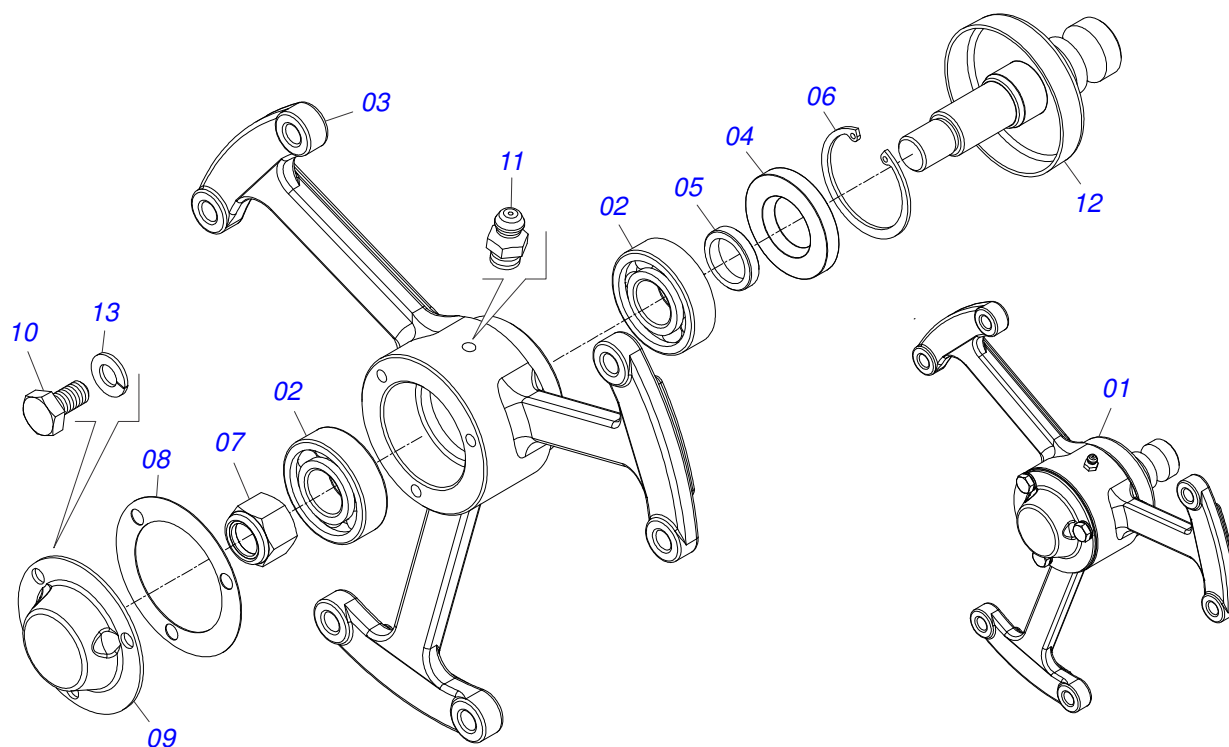 


Item	Code	Description	QT
01	0511055626	STRIPED BOX WHEEL DEPTH	
02	0503010269	6204 BALL BEARING	02
03	0502012607	STRIPED BOX WHEEL DEPTH	01
04	0503010689	SEAL 00763-BR	01
05	0501013636	SPACING SLEEVE	01
06	0503011105	SEAL RING	01
07	0503010811	5/8" UNF SELF ADJUSTING NUT	01
08	0503030757	2.9" X 2" X 0.02" JOINT	01
09	0521019178	COVER DEPTH	01
10	0503013758	1/4" X 1-1/2" BOLT	03
11	0503010691	1/4" GREASE FITTING	01
12	0521063443	DEPTH CONTROL AXLE	01
13	0503011441	SPRING WASHER	03

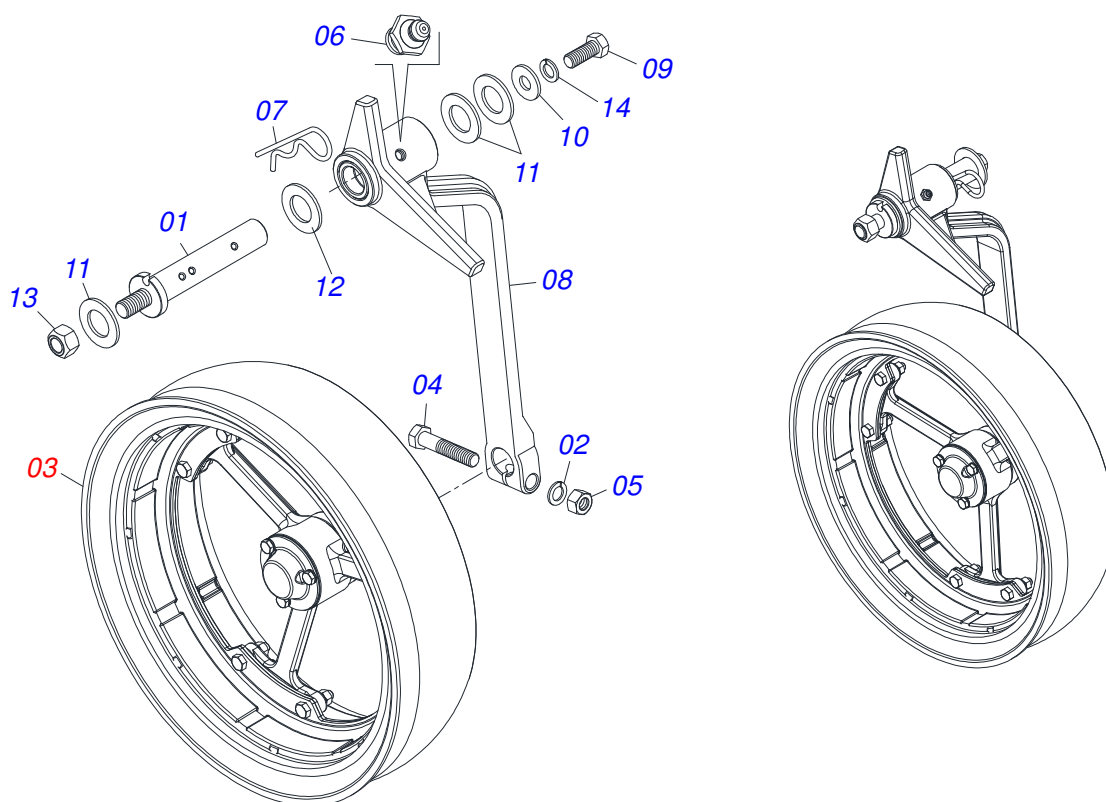 


Item	Code	Description	QT
001	0571015973	CARRYING-WHEELS PIVOT SHAFT	01
002	0503010019	1/2" SPRING WASHER	01
003	0511055627	DEPTH CONTROL PRESS WHEELS	01
004	0503016453	1/2" X 2.1/2 BOLT	01
005	0503010060	1/2" NUT	01
006	0503010002	1800 GREASE FITTING	01
007	0503030012	HAIR PIN	01
008	0501110776	ARM,LEFT	01
009	0503014007	1/2" X 1-1/4" BOLT	01
010	0511017302	FLAT WASHER	01
011	0501011445	FLAT WASHER	03
012	0571015974	WASHER	01
013	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
014	0503011440	SPRING WASHER	01

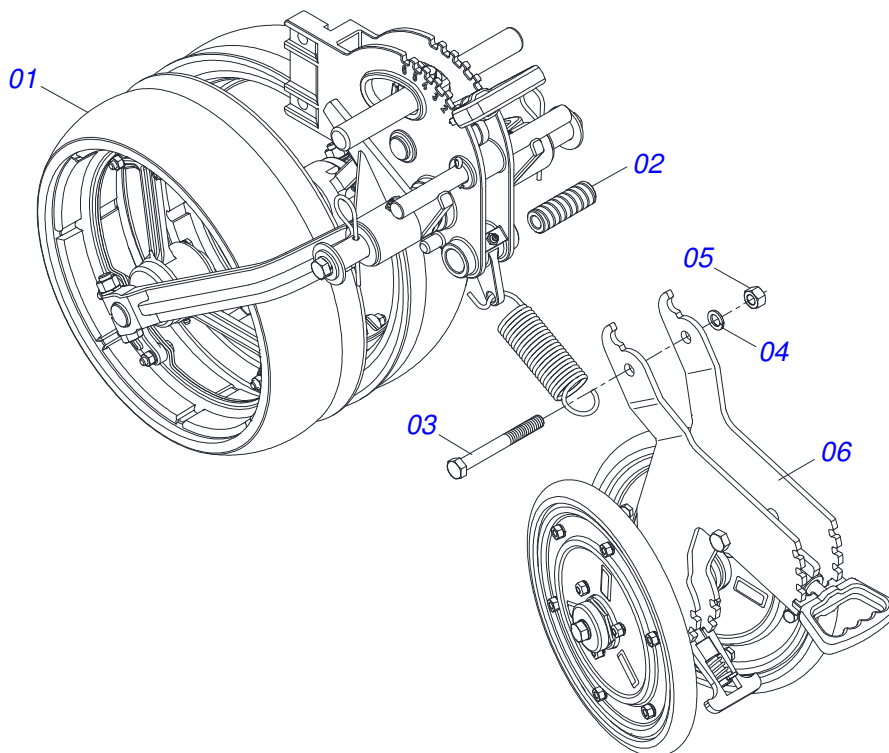 


Item	Code	Description	QT
01	0511055690	WHEEL SISTEM	01
02	0551019650	SLEEVE 13,20 X 25 X 74	01
03	0503010706	1/2" X 4.1/2" BOLT	01
04	0503010019	1/2" SPRING WASHER	01
05	0503010060	1/2" NUT	01
06	0511055327	PRESS WHEEL AXLE V BORR C SPA	01

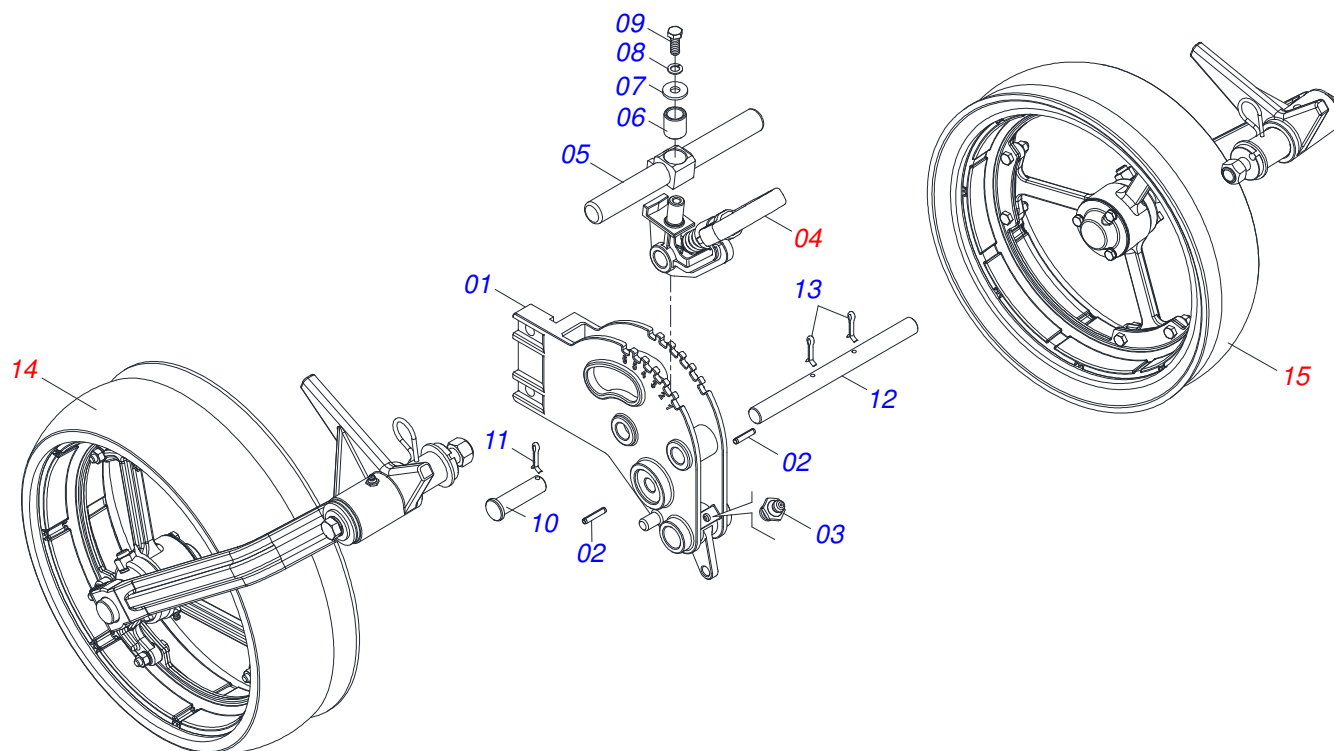 


Item	Code	Description	QT
01	0502012758	DEPTH CONTROL SUPPORT	01
02	0503010585	0,24" X 1.18" SPRING PIN	02
03	0503010002	1800 GREASE FITTING	01
04	0501059228	ADJUSTMENT LEVER	01
05	0502012611	DEPTH CONTROL AXLE	01
06	0571015326	ARTICULATION SLEEVE HANDLE	01
07	0501010984	FLAT WASHER	01
08	0503011443	SPRING WASHER	01
09	0503010237	3/8" X 1" BOLT	01
10	0571016132	PIVOT SHAFT	01
11	0503010071	3/16" X 1" COTTERPIN	01
12	0561014336	PIVOT SHAFT	01
13	0503010071	3/16" X 1" COTTERPIN	02
14	0511055628	DEPTH WHEEL SYSTEM	01
15	0511055629	DEPTH WHEEL SYSTEM	01

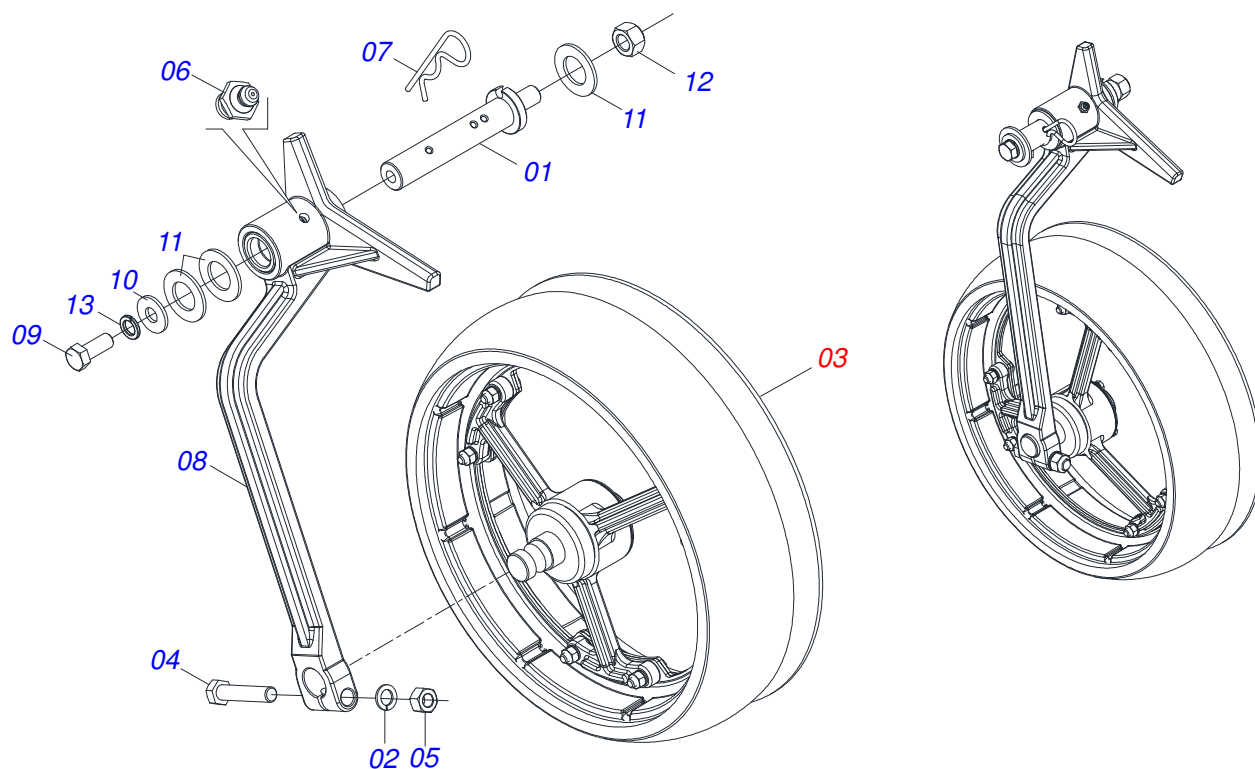 

Item	Code	Description	QT
01	0561014385	CARRYNG-WHEELS PIVOT SHAFT	01
02	0503010019	1/2" SPRING WASHER	01
03	0511055627	DEPTH CONTROL PRESS WHEELS	01
04	0503016453	1/2" X 2.1/2 BOLT	01
05	0503010060	1/2" NUT	01
06	0503010002	1800 GREASE FITTING	01
07	0503030012	HAIR PIN	01
08	0501110777	RIGHT WHEEL ARM	01
09	0503014007	1/2" X 1-1/4" BOLT	01
10	0511017302	FLAT WASHER	01
11	0501011445	FLAT WASHER	03
12	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
13	0503011440	SPRING WASHER	01

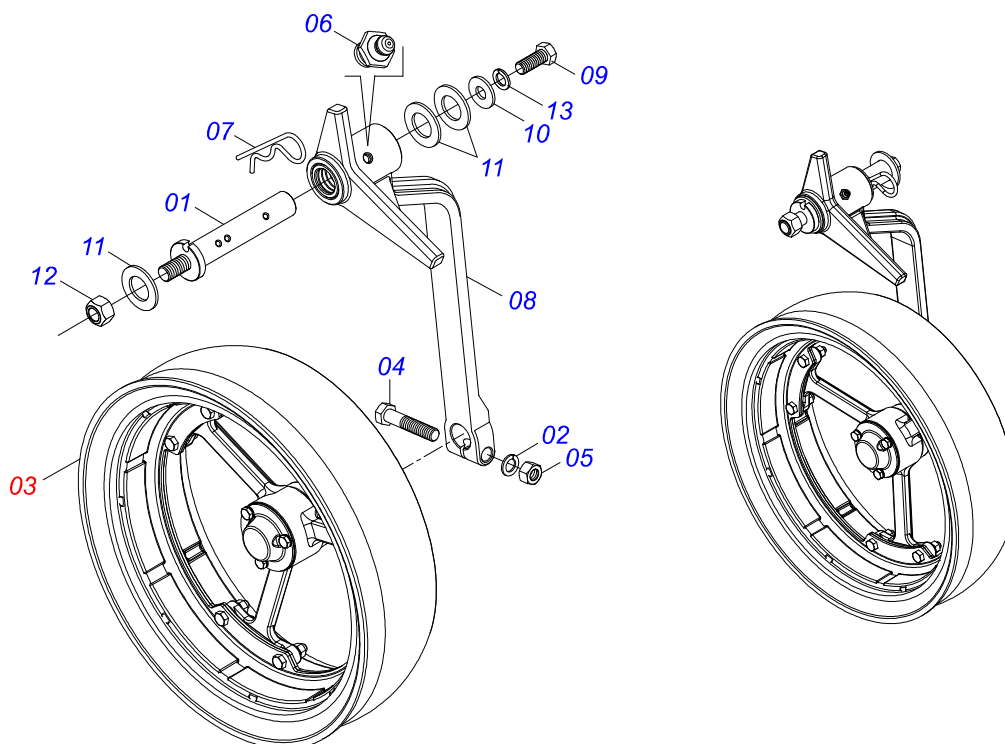 


Item	Code	Description	QT
01	0571015973	CARRYING-WHEELS PIVOT SHAFT	01
02	0503010019	1/2" SPRING WASHER	01
03	0511055627	DEPTH CONTROL PRESS WHEELS	01
04	0503016453	1/2" X 2.1/2 BOLT	01
05	0503010060	1/2" NUT	01
06	0503010002	1800 GREASE FITTING	01
07	0503030012	HAIR PIN	01
08	0501110776	ARM,LEFT	01
09	0503014007	1/2" X 1-1/4" BOLT	01
10	0511017302	FLAT WASHER	01
11	0501011445	FLAT WASHER	03
12	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
13	0503011440	SPRING WASHER	01

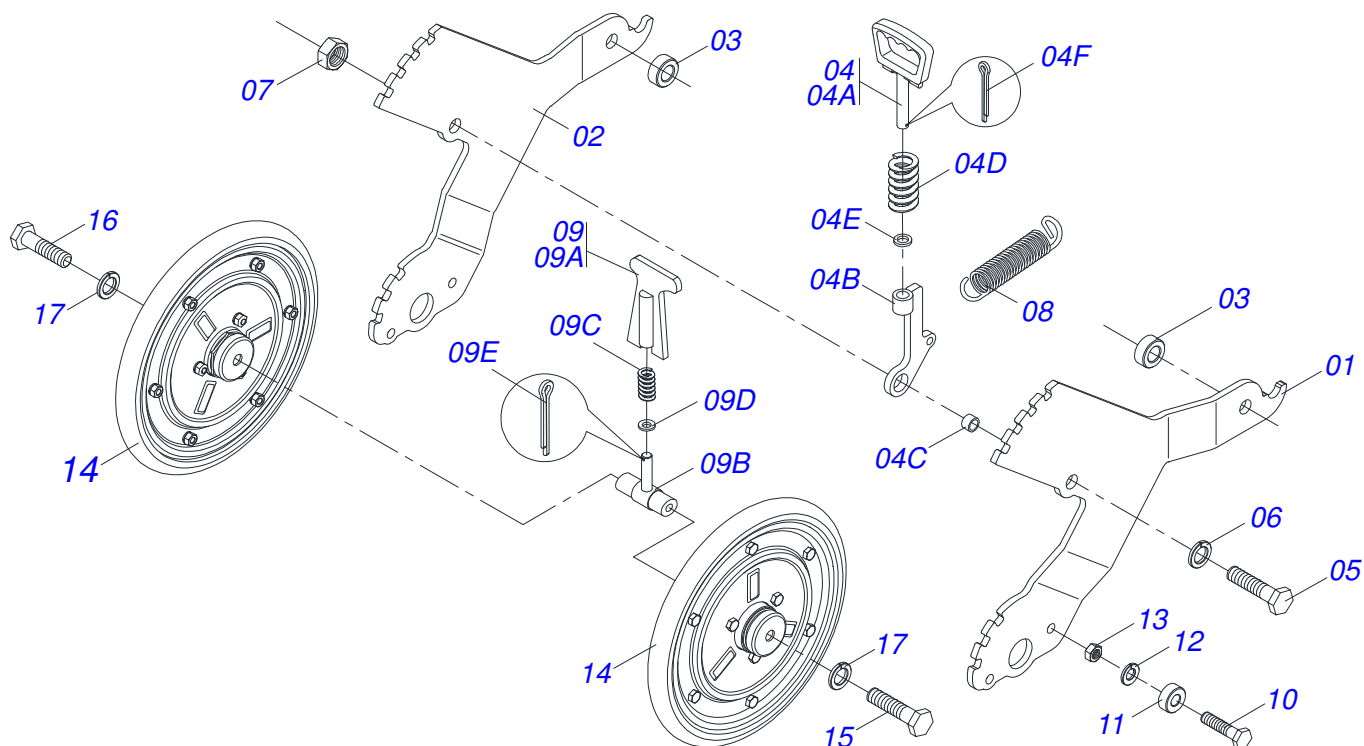 

Item	Code	Description	QT
01	0571015324	COMPACT WHEEL RIGHT ARM	01
02	0571015325	LH ARM PRESS WHEELS	01
03	0541012145	SLEEVE 13,5 X 25 X 18	02
04	0501058362	LARGER HANDLE ASSY	01
04A	0502011689	1/8" DEPTH CONTROL LEVER	01
04B	0521064892	REGULACION SPRING COMPACTOR	01
04C	0541012146	0.53" X 0.74" X 0.33" SLEEVE	01
04D	0503030174	COMPRESSION SPRING	01
04E	0541012143	FLAT WASHER	01
04F	0503010257	1/8" X 1" COTTERPIN	01
05	0503010479	1/2" X 3" BOLT	01
06	0503010019	1/2" SPRING WASHER	01
07	0503010060	1/2" NUT	01
08	0503031393	1.57" X 5.98" X 0.2" TRACTION SPRING	01
09	0501055289	HANDLE SMALLER ASSY	01
09A	0511065451	PRESS WHEEL ADJUSTER	01
09B	0511065496	PRESS WHEEL FIXER	01
09C	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING	01
09D	0541012143	FLAT WASHER	01
09E	0503010257	1/8" X 1" COTTERPIN	01
10	0503010397	5/16" X 1-3/4" BOLT	02
11	0541012144	8,50 X 16 X 21 SLEEVE	02
12	0503011444	SPRING WASHER	02
13	0503010337	5/16" NUT	02
14	0501052908	PRESS WHEELS ASSY	02
15	0503010752	1/2" X 3.1/2" BOLT	01
16	0503013739	1/2" X 1" BOLT	01
17	0503011440	SPRING WASHER	02

DEPTH CONTROL RIGTH ARM WITH TIRE

 
0501054481

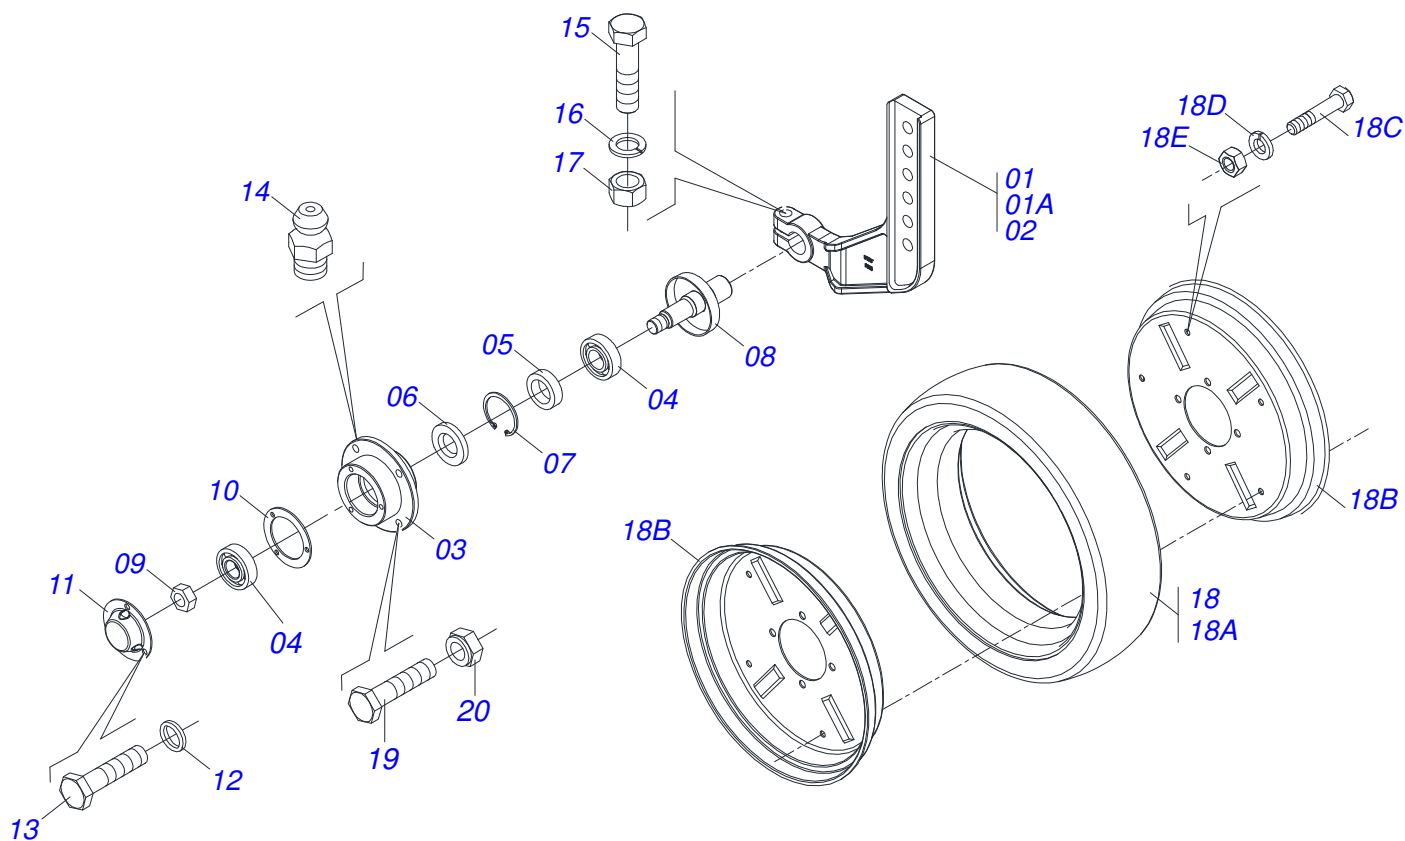


Item	Code	Description	QT
01	0501054481	DEPTH CONTROL RIGTH ARM WITH TIRE	01
01A	0501056430	DEPTH CONTROL RIGTH ARM	01
02	0502012090	DEPTH CONTROL RIGHT ARM	01
03	0502011907	DEPTH CONTROL WHEEL HUB	01
04	0503010269	6204 BALL BEARING	02
05	0501013636	SPACING SLEEVE	01
06	0503010689	SEAL 00763-BR	01
07	0503011105	SEAL RING	01
08	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK	01
09	0503010878	5/8" SELF ALIGNING NUT	01
10	0503030757	2.9" X 2" X 0.02" JOINT	01
11	0521019178	COVER DEPTH	01
12	0503011441	SPRING WASHER	03
13	0503014729	1/4" UNF X 1/2" BOLT	03
14	0503010691	1/4" GREASE FITTING	01
15	0503010740	1/2" X 2" BOLT	01
16	0503011440	SPRING WASHER	01
17	0503010060	1/2" NUT	01
18	0501052538	DEPTH CONTROL WHEEL RUBBER BAND	01
18A	0503030551	DEPTH CONTROL WHEEL RUBBER BAND	01
18B	0521010832	RIM FLANGE	02
18C	0503010298	1/4" X 1/2" BOLT	05
18D	0503010143	SPRING WASHER	05
18E	0503010144	1/4" NUT	05
19	0503010358	5/16" X 5/8" BOLT	04
20	0503013816	5/16" LOCKNUT	04

DEPTH CONTROL LEFT ARM WITH TIRE

 
0501054482

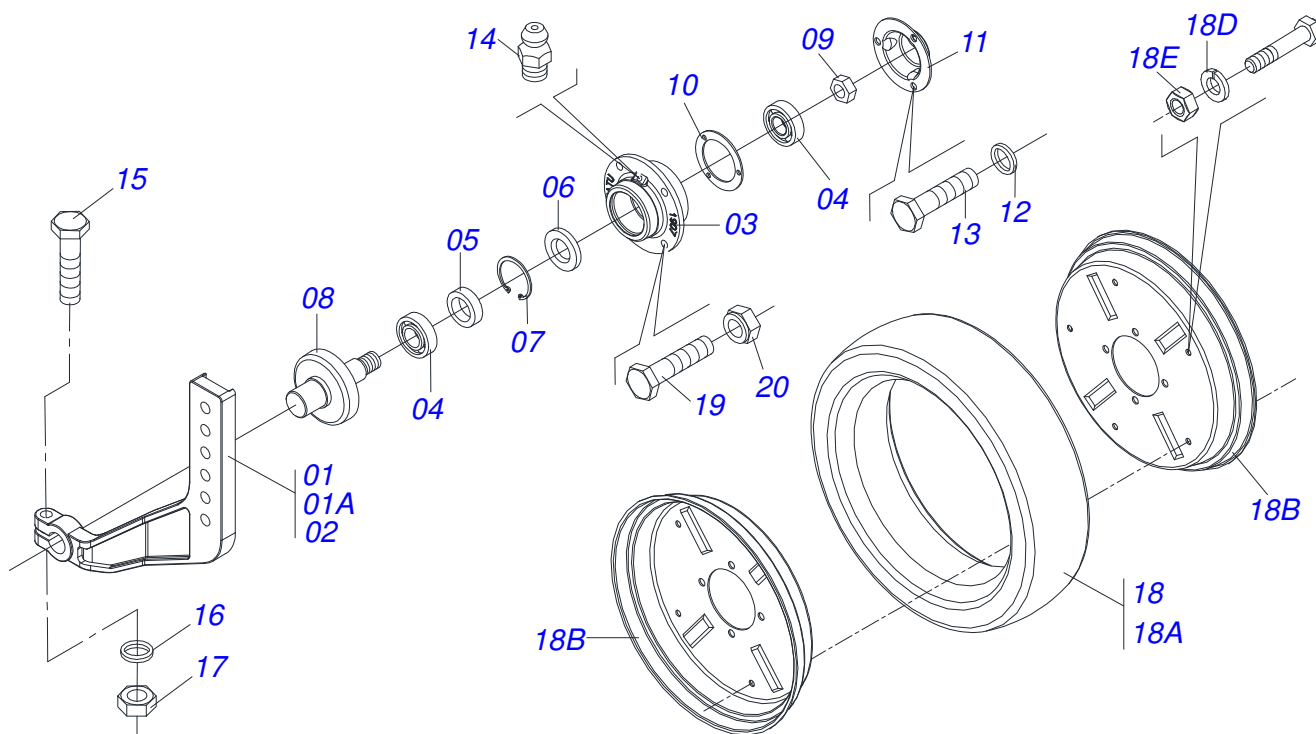


Item	Code	Description	QT
01	0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	01
01A	0501056435	DEPTH CONTROL LEFT ARM	01
02	0502012091	DEPTH CONTROL LEFT ARM	01
03	0502011907	DEPTH CONTROL WHEEL HUB	01
04	0503010269	6204 BALL BEARING	02
05	0501013636	SPACING SLEEVE	01
06	0503010689	SEAL 00763-BR	01
07	0503011105	SEAL RING	01
08	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK	01
09	0503010878	5/8" SELF ALIGNING NUT	01
10	0503030757	2.9" X 2" X 0.02" JOINT	01
11	0521019178	COVER DEPTH	01
12	0503011441	SPRING WASHER	03
13	0503014729	1/4" UNF X 1/2" BOLT	03
14	0503010691	1/4" GREASE FITTING	01
15	0503010740	1/2" X 2" BOLT	01
16	0503011440	SPRING WASHER	01
17	0503010060	1/2" NUT	01
18	0501052538	DEPTH CONTROL WHEEL RUBBER BAND	01
18A	0503030551	DEPTH CONTROL WHEEL RUBBER BAND	01
18B	0521010832	RIM FLANGE	02
18C	0503010298	1/4" X 1/2" BOLT	05
18D	0503010143	SPRING WASHER	05
18E	0503010144	1/4" NUT	05
19	0503010358	5/16" X 5/8" BOLT	04
20	0503013816	5/16" LOCKNUT	04

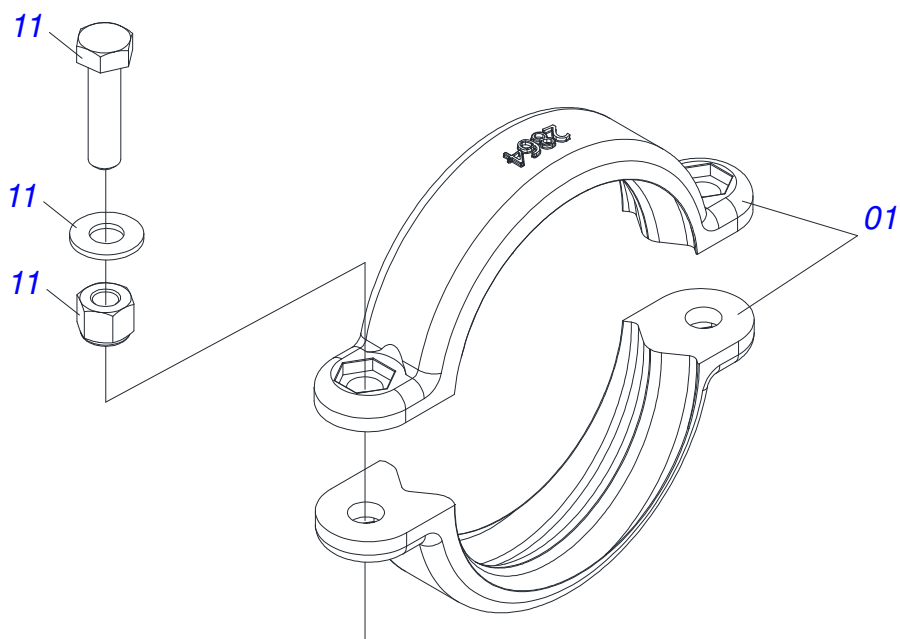 


Item	Code	Description	QT
001	1902012864	3 CLAMP	02
002	0503013759	NUT	02
003	0501010694	FLAT WASHER	02
004	0503010365	NUT	02

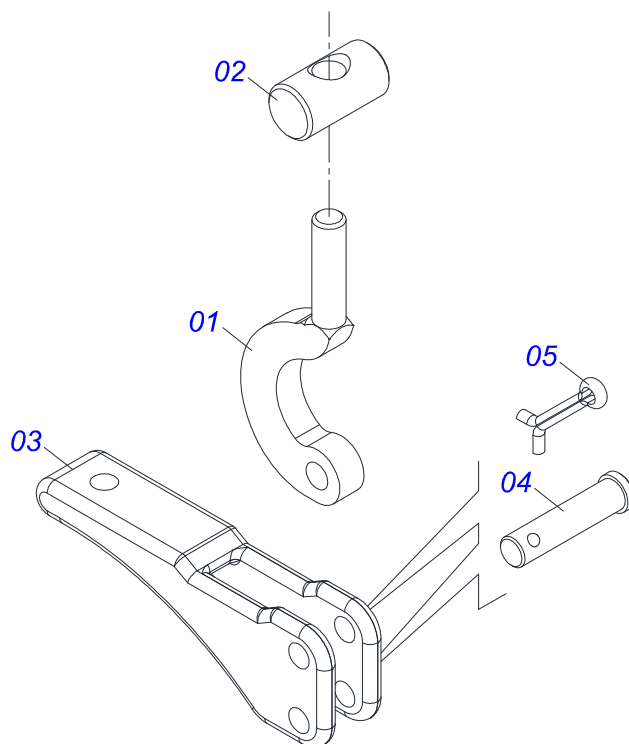 


Item	Code	Description	QT
01	0571011803	PRISONER CLOSE FAST	01
02	0571011804	FAST BOLT ADJUSTMENT	01
03	0502012744	SPEED LOCK LEVER ASSY	01
04	0571014024	FAST BOLT GUIDE AXLE	02
05	0503010140	1/8" X 3/4" COTTERPIN	02

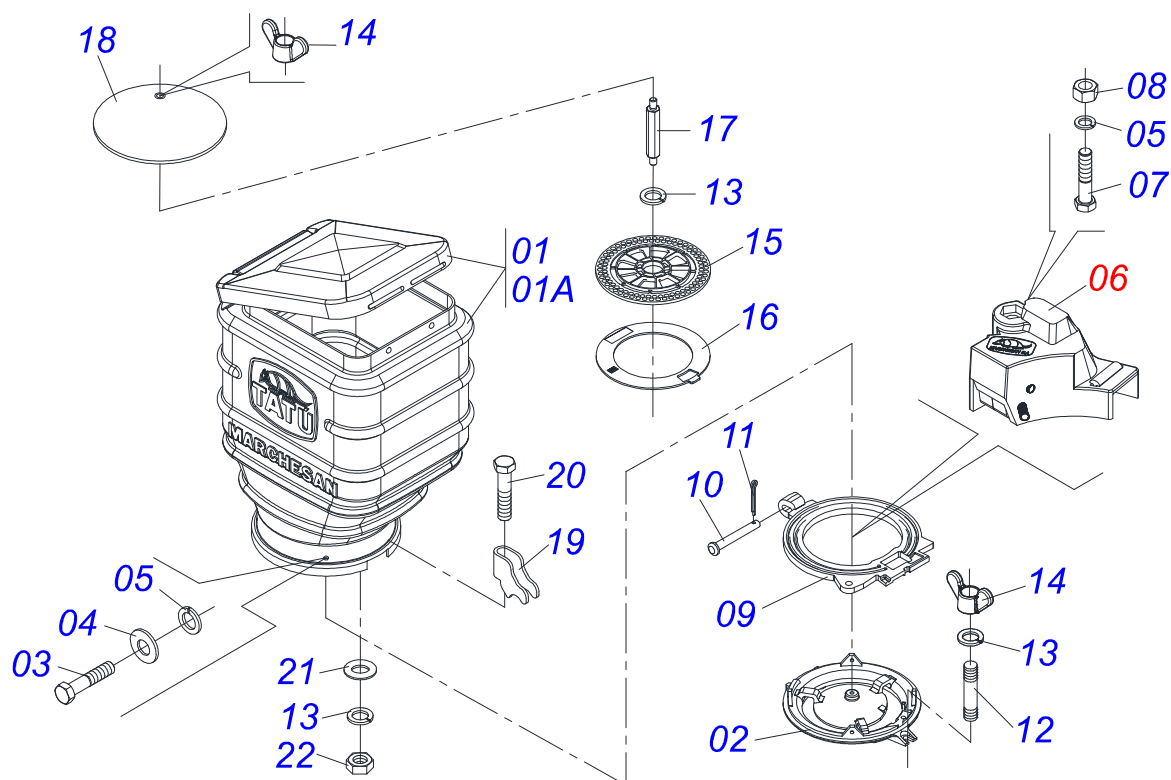 


Item	Code	Description	
01	0501052234	SEED SISTEM ASSY	01
01A	0503031508	COVER GREEN BEAM SEED YELLOW	01
02	0502020324	SEED BOX SUPPORT	01
03	0503010295	5/16" X 5/8" BOLT	04
04	0501010694	FLAT WASHER	05
05	0503010179	SPRING WASHER	04
06	0501051094	SEED DISTRIB ASSY WITH DOUB PULLEY	01
07	0503010675	5/16" X 2.1/4" BOLT	01
08	0503010337	5/16" NUT	01
09	0502010408	SEED DISC LOWER TRAIL	01
10	0521010536	0.3" X 3.8" COUPLING SHAFT	01
11	0503010140	1/8" X 3/4" COTTERPIN	01
12	0503030083	3/8" X 3/8" X 1.6" STUD	01
13	0503010025	3/8 SPRING WASHER	03
14	0503010209	3/8" UNC BUTTERFLY NUT	02
15	0503016217	SOYBEAN SEED DISC 34 OBLONG	01
16	0503016219	RING TO SOYBEANS	01
17	0571018536	HEX PRISONER	01
18	0503034131	DEFLECTOR	01
19	0531018622	BOLT FAST SUPPORT UPPER	01
20	0501010096	3/8" X 2" BOLT	01
21	0501010984	FLAT WASHER	01
22	0503010026	3/8" NUT	01

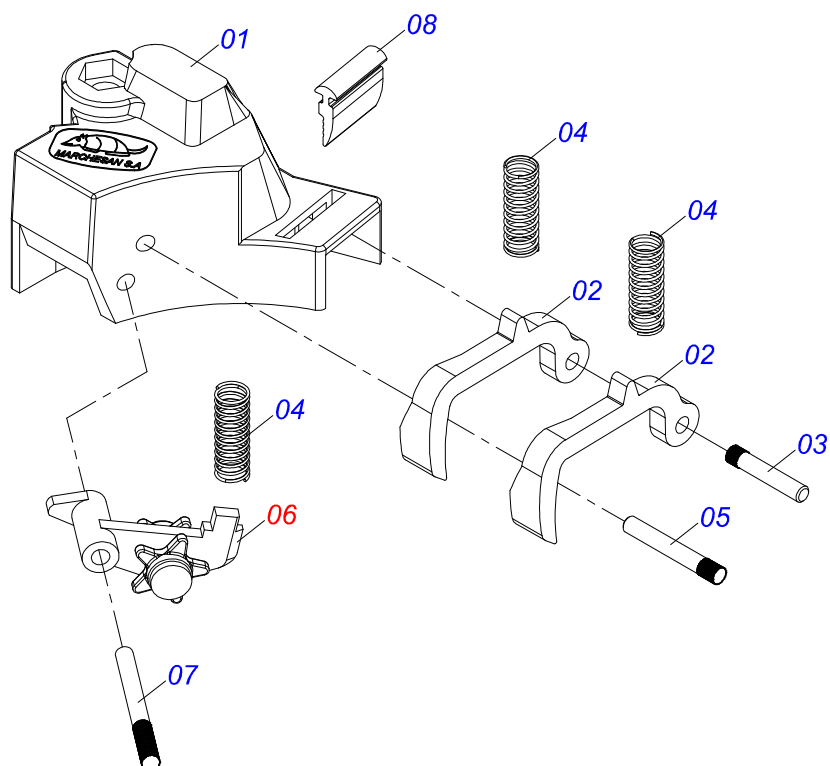 


Item	Code	Description	QT
01	0503030381	SEED DISTRIBUTOR BOX	01
02	0502010447	TRIGGER	02
03	0501013467	KEY AXLE	01
04	0503030378	0.4" X 1.1" X 0.03" SPRING	03
05	0501013466	KEY LIMITER AXLE	01
06	0501051119	DOUBLE PULLEY ROCKER'S	01
07	0501013468	ROCKER ARM AXLE, OF THE PULLEY	01
08	0503030377	SCRAPER	01

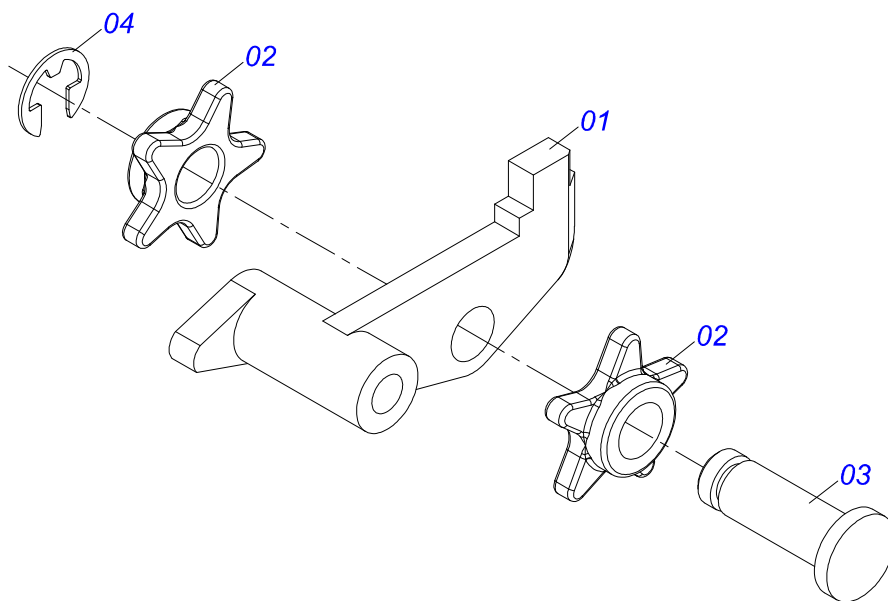 


Item	Code	Description	QT
01	0503031129	DOUBLE PULLEY ROCKER ARM	01
02	0503031128	5Z PLASTIC DOUB PULLEY FOR SOYBEAN	02
03	0521010649	TOOTH PULLEY COUPLING SHAFT	01
04	0503011853	503050 CLAMPING RING (FOR HOLE)	01

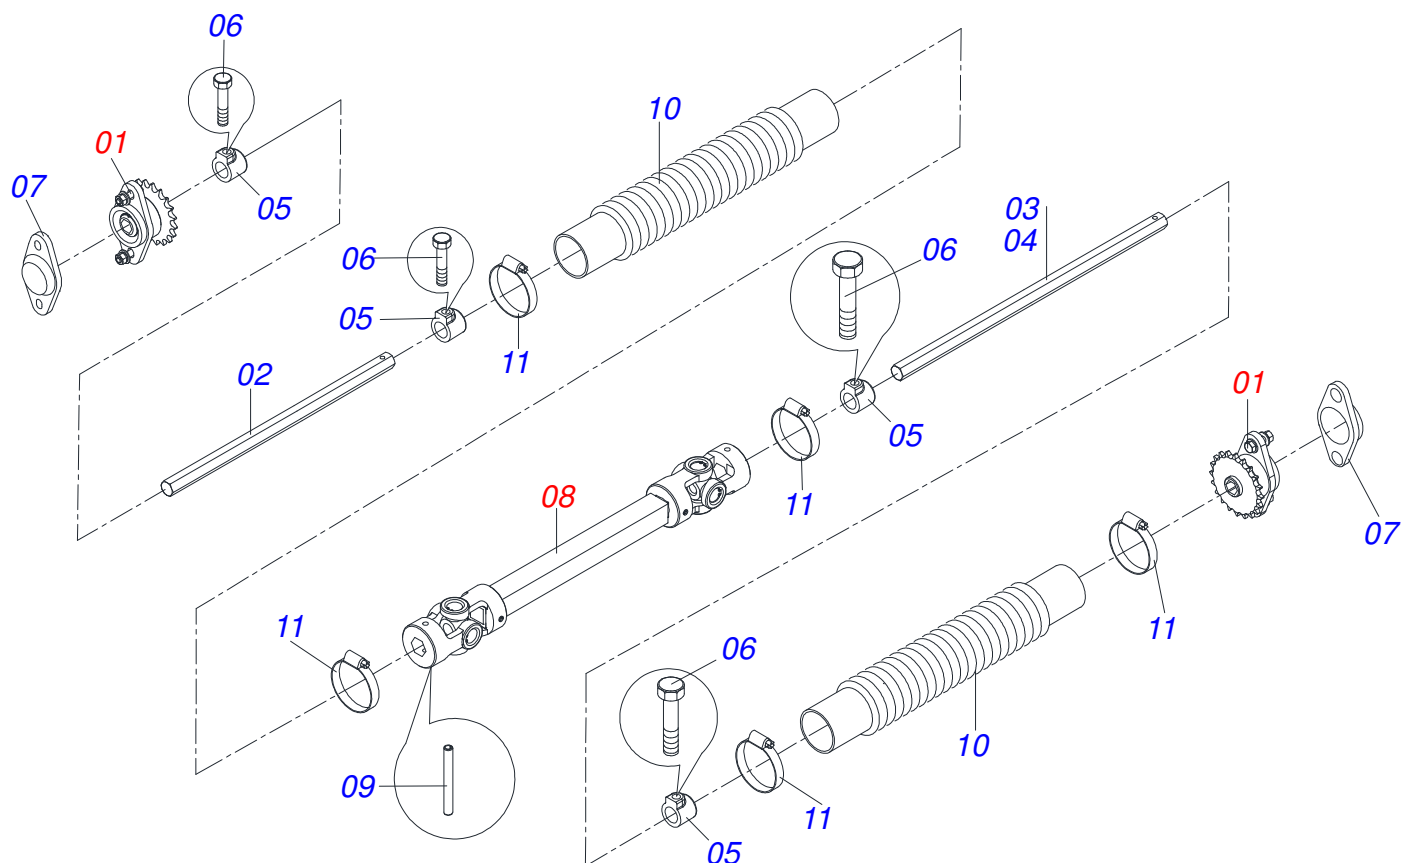 


Item	Code	Description	QT
001	0501053608	BEARING ASSY WITH GEAR 20Z & 5/8" HEX AXLE	02
002	0581012155	5/8" X HEX AXLE	01
003	0571013724	5/8 X 1250 HEX AXLE	01
004	0581012154		01
005	0502040534	SPRING GUIDE BUSHING LOCK	08
006	0503010834	1/2 X 1 BOLT	08
007	0561014215	BEARING COVER LOWER ROW FRAME	02
008	0503062206	CARDAN TERMINAL	02
009	0503011855	0.2" X 1.8" SPRING PIN	04
010	0503030331	1.2" X 1.2" X 12.2" HOSE	02
011	0503010243	CLAMP	04

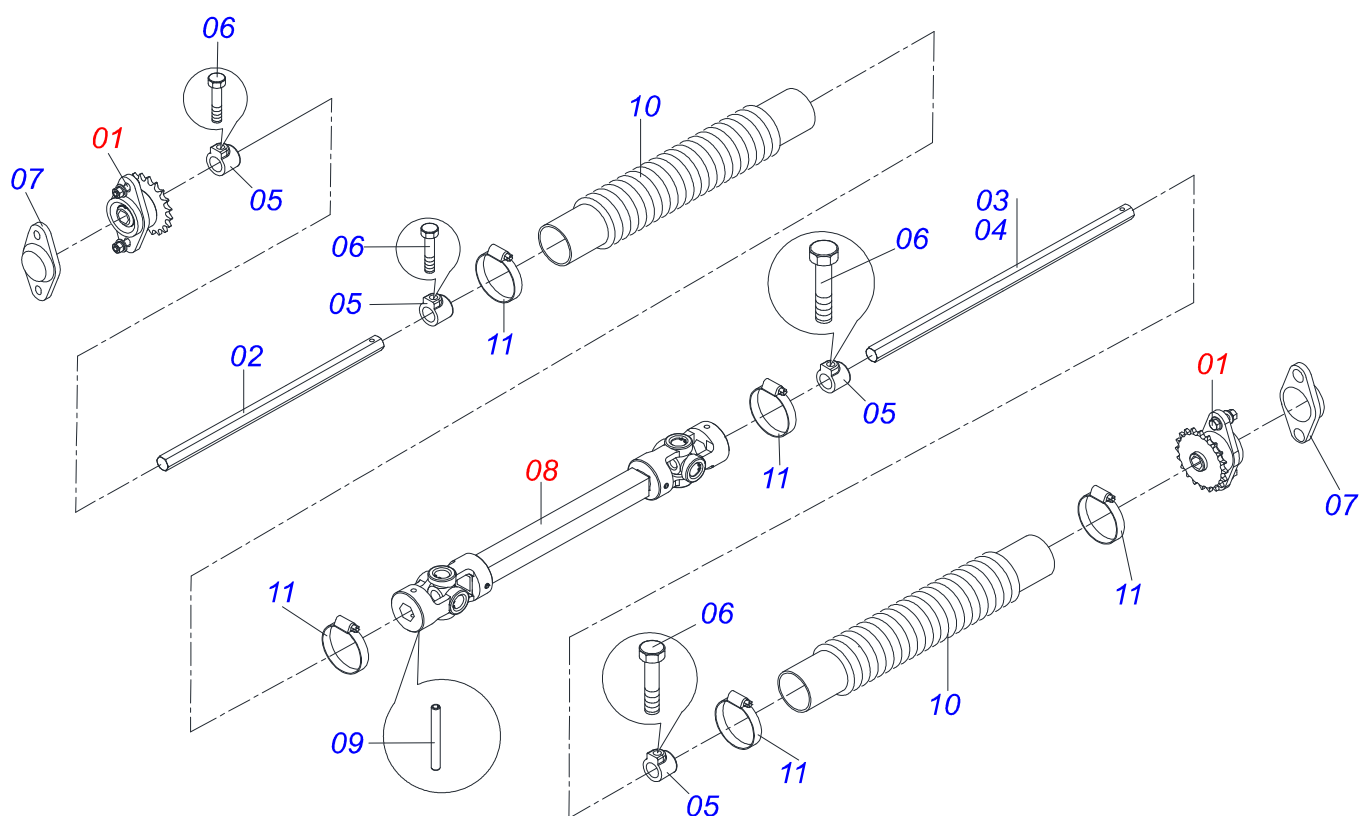 

Item	Code	Description	QT
001	0501053608	BEARING ASSY WITH GEAR 20Z & 5/8" HEX AXLE	02
002	0571013468	5/8 X 2040 HEX AXLE	02
003	0571013470	5/8 X 1100 HEX AXLE	01
004	0571013469	5/8 X 700 HEX AXLE	01
005	0502040534	SPRING GUIDE BUSHING LOCK	08
006	0503010834	1/2 X 1 BOLT	08
007	0561014215	BEARING COVER LOWER ROW FRAME	02
008	0503062206	CARDAN TERMINAL	02
009	0503011855	0.2" X 1.8" SPRING PIN	04
010	0503030331	1.2" X 1.2" X 12.2" HOSE	02
011	0503010243	CLAMP	04

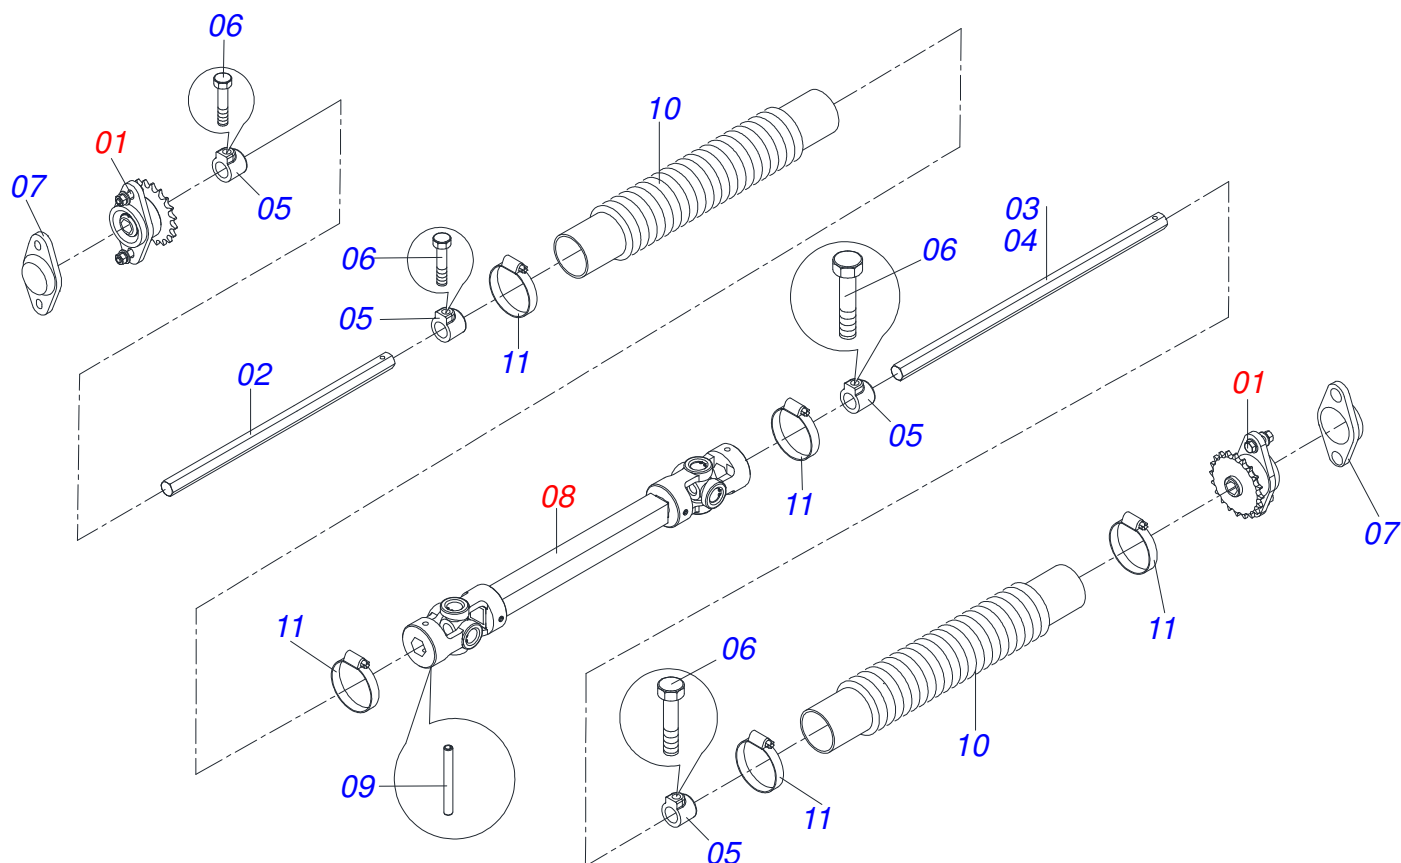 

Item	Code	Description	QT
001	0501053608	BEARING ASSY WITH GEAR 20Z & 5/8" HEX AXLE	02
002	0581012154		01
003	0571013724	5/8 X 1250 HEX AXLE	01
004	0581013331	5/8" X HEX AXLE	02
005	0502040534	SPRING GUIDE BUSHING LOCK	08
006	0503010834	1/2 X 1 BOLT	08
007	0561014215	BEARING COVER LOWER ROW FRAME	02
008	0503062206	CARDAN TERMINAL	02
009	0503011855	0.2" X 1.8" SPRING PIN	04
010	0503030331	1.2" X 1.2" X 12.2" HOSE	02
011	0503010243	CLAMP	04

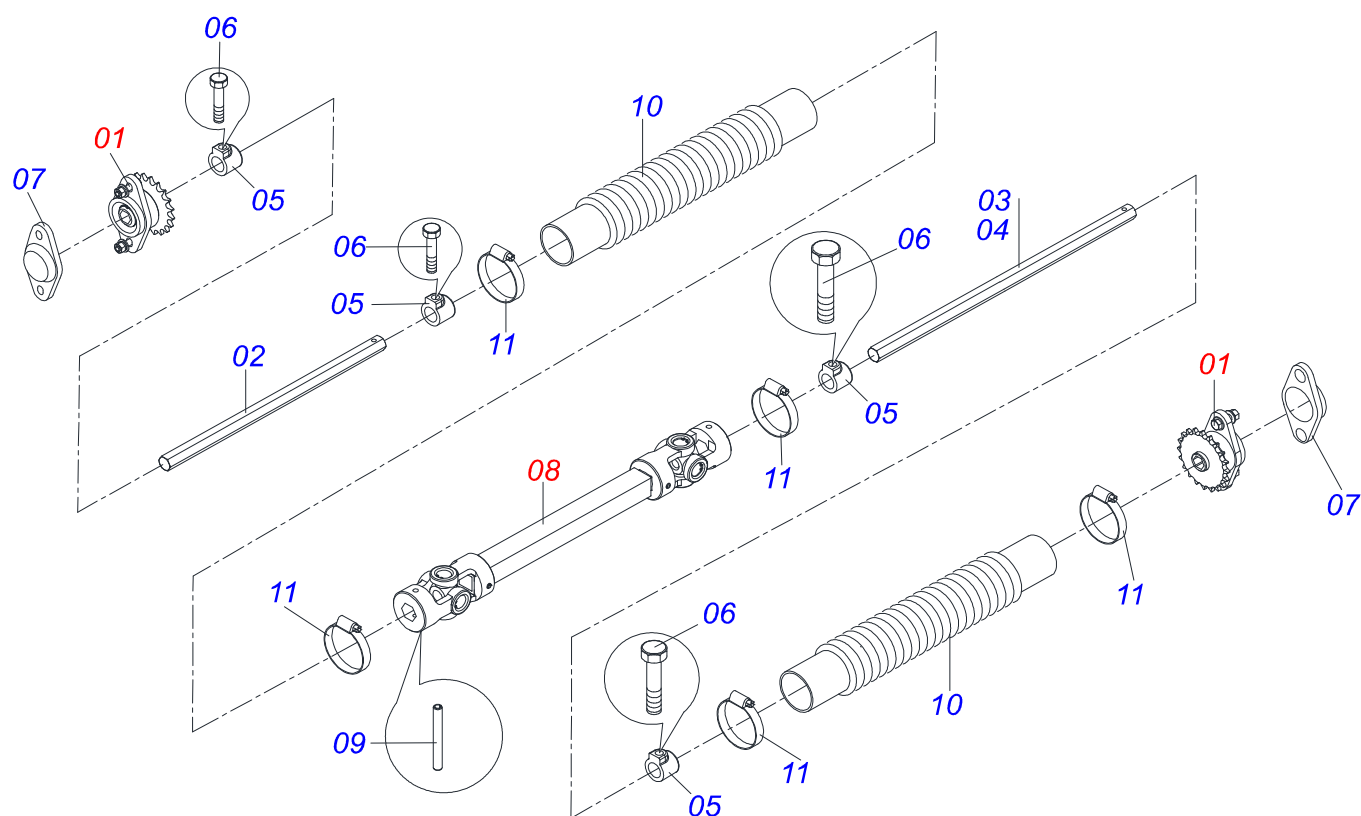 

Item	Code	Description	QT
001	0501053608	BEARING ASSY WITH GEAR 20Z & 5/8" HEX AXLE	02
002	0581010472	HEX AXLE	02
003	0571013470	5/8 X 1100 HEX AXLE	01
004	0571013469	5/8 X 700 HEX AXLE	01
005	0502040534	SPRING GUIDE BUSHING LOCK	08
006	0503010834	1/2 X 1 BOLT	08
007	0561014215	BEARING COVER LOWER ROW FRAME	02
008	0503062206	CARDAN TERMINAL	02
009	0503011855	0.2" X 1.8" SPRING PIN	04
010	0503030331	1.2" X 1.2" X 12.2" HOSE	02
011	0503010243	CLAMP	04

This image shows a single page of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines visible. The top corners of the paper are rounded. The entire page is framed by a thin black border.





MARCHESAN IMPLEMENTOS E MÁQUINAS AGRÍCOLAS TATU S.A.

AV. Marchesan, 1979 - Post office box, 131 - CEP 15994-900 - Matão - SP - Brazil

Phone +55 16.3382-8282

(FAX Parts) + 55 16.3382. 8297 - (Export) + 55 16.3382.1003

e.mail: tatu@marchesan.com.br www.marchesan.com.br

Technical Publications: Elaboration

LUIZ CANDIDO

Technical Publications: Revision

LUIZ CANDIDO

Contact Catálogo:

E-mail = jgaspari@marchesan.com.br

**ORIGINAL PARTS
TATU**

