

PARTS CATALOG

ROW CROP PLANTERS

COP FLEX 600 SUP PP AFRICA

Code: 0501092242



Series: S-0115

Rev.: 00

Date Rev.: JUNHO/2018

**ORIGINAL PARTS
TATU**



PRODUCTS

Code	Description
0111201128	COP FLEX 600 SUP PP 4045/6E700 ESPECIAL S-0115
0111201129	COP FLEX 600 SUP PP 4845/6E800 ESPECIAL AFR S0115
0111201130	COP FLEX 600 SUP PP 5745/8E750 ESPECIAL AFR S-0115
0111201131	COP FLEX 600 SUP PP 6645/8E900 ESPECIAL AFR S-0115

ATTENTION: **IMPORTANT**


MARCHESAN S/A RESERVES THE RIGHT AT ANY TIME TO MAKE IMPROVEMENTS IN THE DESIGN, MATERIAL OR SPECIFICATIONS OF MACHINERY, EQUIPMENT OR PARTS WITHOUT THEREBY BECOMING LIABLE TO MAKE SIMILAR CHANGES IN MACHINERY, EQUIPMENT OR PARTS PREVIOUSLY SOLD.

INDEX

0909094196	FRAME COP FLEX	1
0511053436	DRAWBAR ASSY	2
0511050644	DRAWBAR ASSY	3
0511053289	DRAWBAR	4
0511053085	SET FIXER HEADER	5
0511054601	TRACTOR HITCH	6
0511055096	TRACTOR HITCH	7
0511052981	WHEELED SET RIGHT WITH TIRE	8
0511052982	LEFT HUB AND SPINDLE ASSY	9
0501055275	11L15 HUB WITH TIRE WHEEL ASSY	10
0511051434	TRANSMISSION DRIVING ASSY	11
0511053386	SET HIDRAULICO	12
0511053427	SET HIDRAULICO	13
0511053458	SET HIDRAULICO	14
0511053373	SET HIDRAULICO	15
0511053358	SET VALVE FIXADOR	16
0511053382	FIXER HYDRAULIC HOSE ASSEMBLY	17
0511053384	HYDRAULIC CYLINDER ASSEMBLY	18
0511058411	HYDRAULIC CYLINDER	19
0511053309	HOSE KIT	20
0501053834	QUICK CONECTION (MALE) 1/2	21
0511056292	FIXER HYDRAULIC HOSE ASSEMBLY	22
0511053425	HOSE KIT	23
0511053457	FIXING ASSEMBLY HOSE HYDRAULIC	24
0511053368	HYDRAULIC CYLINDER ASSEMBLY	25
0511053449	HOSE KIT	26
0511053350	FIXER HYDRAULIC HOSE ASSEMBLY	27
0511053290	HOSE KIT	28
0511057322	FIXING ASSEMBLY	29
0511057337	FIXING ASSEMBLY	30
0511053455	SET BOX FERTILIZER	31
0511053374	SET BOX FERTILIZER COP F 600 13	32
0511053352	SET BOX FERTILIZER	33
0511053429	SET BOX FERTILIZER	34
0511053430	PLATFORM SET COP FLEX 600 9	35
0511053353	PLATFORM SET	36
0511053339	PLATFORM SET	37
0511053453	PLATFORM SET	38
0511053356	SET LADDER	39
0511053431	JOINT HANDRAIL SET	40
0511053388	JOINT HANDRAIL SET	41
0511053454	JOINT HANDRAILSET	42
0511053306	MARKER HIDRAULICO	43
0511053426	MARKER HIDRAULICO	44
0511053287	MARKER HIDRAULICO	45
0511053450	MARKER HIDRAULICO	46
0511058449	HYDRAULIC CYLINDER	47
0501050633	DISC ASSY FOR ROW MARKER	48
0501054649	SEQUENTIAL VALVE ASSY	49
0909094617	CIRCUIT MARKER HIDRAULICO	50
0511053904	ROW MARKER DISC	51
0511054971	SET PST3 P/ULTRA P	52
0511053380	MOTOR SHAFT ASSEMBLY	53
0511053423	MOTOR SHAFT ASSEMBLY	54
0511053341	MOTOR SHAFT ASSEMBLY	55
0511047069	SIDE TRANSMISSION DRIVING	56
0511047070	LH SIDE TRANSMISSION DRIVING	57
0511056598	SET DOOR HAND BOOK	58
0511053342	SQUARE SHAFT SET	59
0511053434	SQUARE SHAFT SET	60
0909094197	FERTILIZER SEED ROW ASSY	61
0511057729	FRONT SEED SHORT	62
0511057730	FRONT SEED LONG	63
0511054884	TRANSMISSION BOX	64
0511058631	REAR RIGHT SEED ROW SUPREMA	65
0511058632	LH REAR LEFT SEED ROW	66

INDEX

0511057317	LH REAR LEFT SEED ROW	67
0511057316	ASSEMBLY TRANSMISSION	68
0511057502	SET PRECISION PLANTING	69
0511057509	SEED RESERVOIR PNEUMATIC ASSY	70
0511057318	RIGHT 15" X 15" SEED	71
0511057319	LH 15" X 15" DOUBLE DISC	72
0501054481	DEPTH CONTROL RIGTH ARM WITH TIRE	73
0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	74
0511053409	FERTILIZER ROW SHORT ASSY	75
0511053410	SEED FERTILIZER LONG ROW	76
0501059308	15" X 15" LEFT FERT UNAL-DD ASSY	77
0501059307	15 X 15 RIGHT FERT UNAL DOUB-DISC ASSY	78
0511051818	18" BLADE DISC ASSY	79
0501052139	18 BLADE DISC WITH FLAT PLAN DISC	80
0511054827	CLOSE WHEEL STRIPED CENTER	81
0511054333	COMPACT WHEEL RIGHT C/ BEARING	82
0511054334	COMPACT WHEEL LEFT C/ BEARING	83
0501052908	PRESS WHEELS ASSY	84
0511053381	HEX AXLE ASSEMBLY	85
0511053424	HEX AXLE ASSEMBLY	86
0511053361	HEX AXLE ASSEMBLY	87
0511053456	HEX AXLE ASSEMBLY	88
0511052332	SET SUPPORT RIGHT FIXER CHANGE	89
0511052333	SET SUPPORT LEFT FIXER CHANGE	90
0511053364	SET TRANSMISSION LEFT ASSY	91
0511053357	SET TRANSMISSION RIGHT ASSY	92
0511058094	HYDRAULIC TURBINE ASSEMBLY	93
0511058114	HYDRAULIC TURBINE ASSEMBLY	94
0511053218	REAR FIXING TURBINE ASSY	95
0511058605	HYDRAULIC TURBINE ASSEMBLY	96
0511057700	HYDRAULIC TURBINE	97
0511050639	RIGHT GEAR BOX ASSY	98
0511050640	LEFT GEAR BOX ASSY	99
0501048790	AXLE WITH LINK ASSY	100
0501056447	CENTRAL BEARING GEAR BOX	101
0501056443	BEARING ASSY GEAR BOX	102
0501056271	GEAR BOX CLOSE BEARINGONE	103
0501054655	CHAIN TENSIONER ASSY	104
0909090739	PM100 SEED MONITORING ASSEMBLY - PART I	105

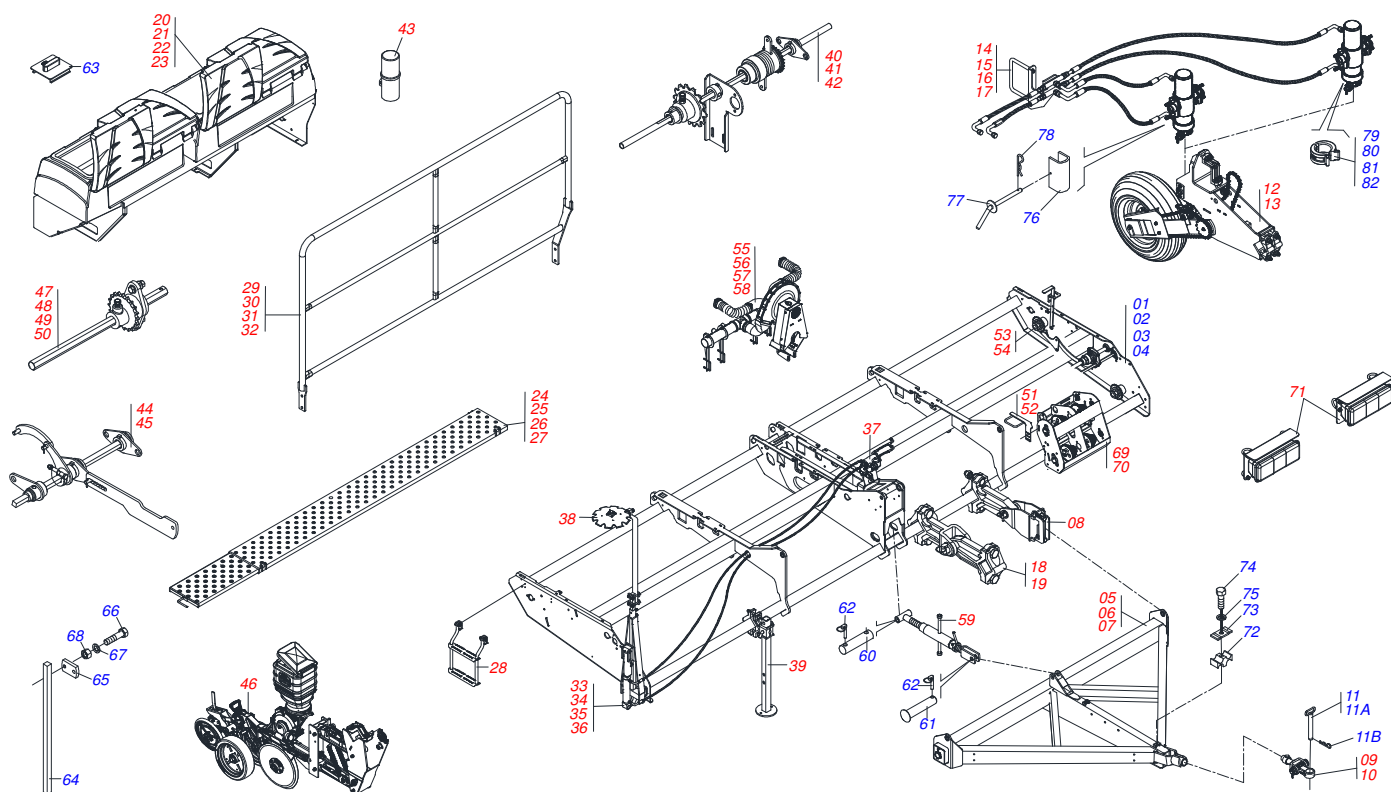


Item	Code	Description	06 08 L
001	0521061932	FRAME 9	01 00
002	0521061841	FRAME 11	01 00
003	0521061933	FRAME 13	00 01
004	0521061934	FRAME COP FLEX 15	00 01
005	0511053436	DRAWBAR ASSY	01 00
006	0511050644	DRAWBAR ASSY	00 01
007	0511053289	DRAWBAR	00 01
008	0511053085	SET FIXER HEADER	01 01
009	0511054601	TRACTOR HITCH	01 01
010	0511055096	TRACTOR HITCH	01 01
011	0511053179	TRACTOR HITCH AXLE	01 01
011A	0521064036	TRACTOR HITCH AXLE	01 01
011B	0503030012	HAIR PIN	01 01
012	0511052981	WHEELED SET RIGHT WITH TIRE	01 01
013	0511052982	LEFT HUB AND SPINDLE ASSY	01 01
014	0511053386	SET HIDRAULICO	01 00
015	0511053427	SET HIDRAULICO	01 00
016	0511053458	SET HIDRAULICO	00 01
017	0511053373	SET HIDRAULICO	00 01
018	0511057322	FIXING ASSEMBLY	01 00
019	0511057337	FIXING ASSEMBLY	01 01
019.	0511057340	FIXING ASSEMBLY	01 01
020	0511053455	SET BOX FERTILIZER	00 01
021	0511053374	SET BOX FERTILIZER COP F 600 13	00 01
022	0511053352	SET BOX FERTILIZER	01 00
023	0511053429	SET BOX FERTILIZER	01 00
024	0511053430	PLATFORM SET COP FLEX 600 9	01 00
025	0511053353	PLATFORM SET	01 00
026	0511053339	PLATFORM SET	00 01
027	0511053453	PLATFORM SET	00 01
028	0511053356	SET LADDER	01 01
029	0511053431	JOINT HANDRAIL SET	01 00
030	0511053388	JOINT HANDRAIL SET	01 00

Item	Code	Description	06 08 L
031	0511053376	JOINT HANDRAIL SET COP FLEX 600 13	00 01
032	0511053454	JOINT HANDRAILSET	00 01
033	0511053306	MARKER HIDRAULICO	01 00
034	0511053426	MARKER HIDRAULICO	01 00
035	0511053287	MARKER HIDRAULICO	00 01
036	0511053450	MARKER HIDRAULICO	00 01
037	0909094617	CIRCUIT MARKER HIDRAULICO	01 01
038	0501050633	DISC ASSY FOR ROW MARKER	02 02
039	0511054971	SET PST3 P/ULTRA P	02 02
040	0511053380	MOTOR SHAFT ASSEMBLY	01 00
041	0511053423	MOTOR SHAFT ASSEMBLY	01 01
042	0511053341	MOTOR SHAFT ASSEMBLY	00 01
043	0511056598	SET DOOR HAND BOOK	01 01
044	0511053342	SQUARE SHAFT SET	01 01
045	0511053434	SQUARE SHAFT SET	01 01
046	0909094197	FERTILIZER SEED ROW ASSY	06 08
047	0511053381	HEX AXLE ASSEMBLY	01 00
048	0511053424	HEX AXLE ASSEMBLY	01 00
049	0511053361	HEX AXLE ASSEMBLY	00 01
050	0511053456	HEX AXLE ASSEMBLY	00 01
051	0511052332	SET SUPPORT RIGHT FIXER CHANGE	01 01
052	0511052333	SET SUPPORT LEFT FIXER CHANGE	01 01
053	0511053364	SET TRANSMISSION LEFT ASSY	01 01
054	0511053357	SET TRANSMISSION RIGHT ASSY	01 01
055	0511058094	HYDRAULIC TURBINE ASSEMBLY	01 00
056	0511058114	HYDRAULIC TURBINE ASSEMBLY	01 00
057	0511053218	REAR FIXING TURBINE ASSY	00 01
058	0511058605	HYDRAULIC TURBINE ASSEMBLY	00 01
059	0511050906	DRAWBAR TURNBUCKLE	01 01
060	0521018532	1.4" X 12" COUPLING SHAFT	01 01
061	0521010578	COUPLING SHAFT	01 01
062	0503030085	LOCK PIN	03 03
063	0503032624	FERTILIZER BEAN LIP	04 04
064	0521013164	PROTRACTOR TURNBUCKLE	02 02
065	0501011310	FIXER LOCK	02 02
066	0503010706	1/2" X 4.1/2" BOLT	04 04
067	0503010019	1/2" SPRING WASHER	04 04
068	0503010060	1/2" NUT	04 04
069	0511050639	RIGHT GEAR BOX ASSY	01 01
070	0511050640	LEFT GEAR BOX ASSY	01 01
071	0501059320	REAR HEADLIGHT ASSY	01 01
072	0502012702	BODY SUPPORT CLAMP	01 01
073	0531011180	UPPER BODY CLIP	01 01
074	0503012555	7/16" X 2" BOLT	01 01
075	0503010180	7/16" SPRING WASHER	01 01
076	0521013022	TRANSPORT LOCK	01 01
077	0501068994	0.3" X 3.1" LOCK PIN	01 01
078	0503030168	HAIR PIN	01 01
079	0501047885	ROD STOP	01 01
080	0501047886	ROD STOP	01 01
081	0501047887	ROD STOP	04 04
082	0501047895	ROD STOP	04 04

DRAWBAR ASSY


0511053436

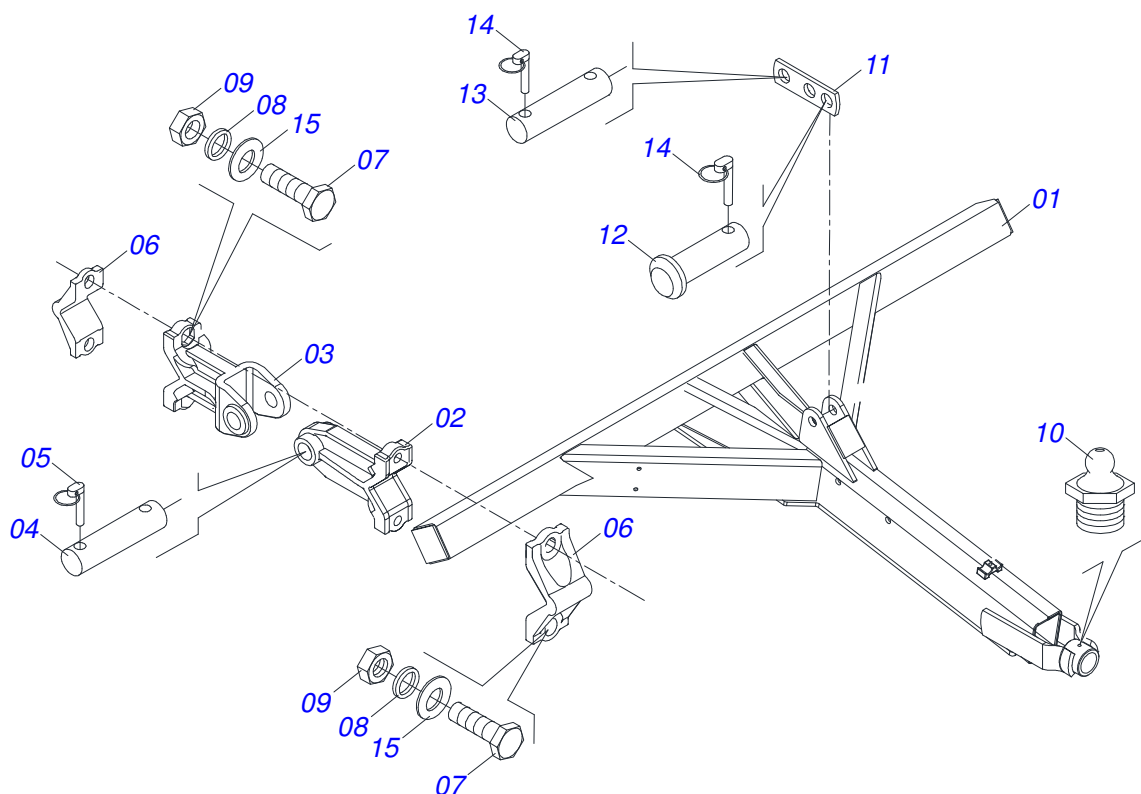

Item	Code	Description	07-08-09-10 L
001	0511064808	DRAWBAR	01-01-01-01
002	0502012328	DRAWBAR SUPPORT FRONT FIXATION	02-02-02-02
003	0502012329	DRAWBAR FIXATION REAR SUPPORT	02-02-02-02
004	0561014393	COUPLING SHAFT	02-02-02-02
005	0503030119	LOCK PIN	02-02-02-02
006	0502012330	SUPPORT FIXER PIVOT	04-04-04-04
007	0503011084	3/4" X 5" BOLT	08-08-08-08
008	0503010023	SPRING WASHER	04-04-04-04
009	0503010014	3/4" NUT	04-04-04-04
010	0503010002	1800 GREASE FITTING	01-01-01-01
011	0561019087	DRAWBAR TRANSPORT LOCK	01-01-01-01
012	0521018532	1.4" X 12" COUPLING SHAFT	01-01-01-01
013	0521010578	COUPLING SHAFT	01-01-01-01
014	0503030085	LOCK PIN	03-03-03-03
015	0501010322	FLAT WASHER	04-04-04-04

DRAWBAR ASSY


0511050644

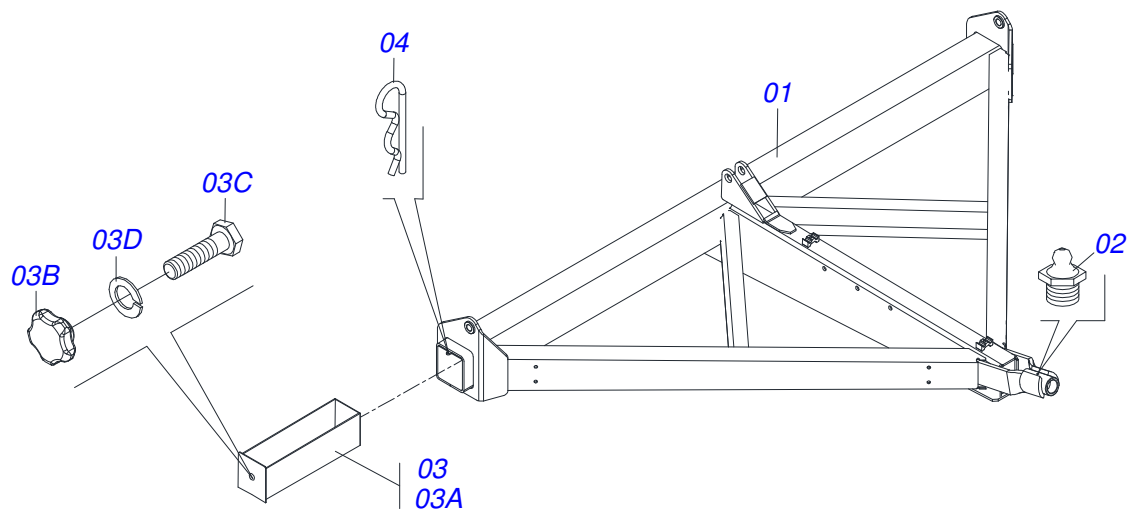


Item	Code	Description	15-17-19 L
001	0521062074	DRAWBAR	01-01-01
002	0503010002	1800 GREASE FITTING	01-01-01
003	0511043137	TOOLS BOX ASSY	02-02-02
003A	0511065471	BOX OF TOOLS	01-01-01
003B	0503010293	BAQUELITE MANIPULACION	01-01-01
003C	0503011334	3/8" X 3/4" BOLT	01-01-01
003D	0503011443	SPRING WASHER	01-01-01
004	0503030012	HAIR PIN	02-02-02

DRAWBAR


0511053289

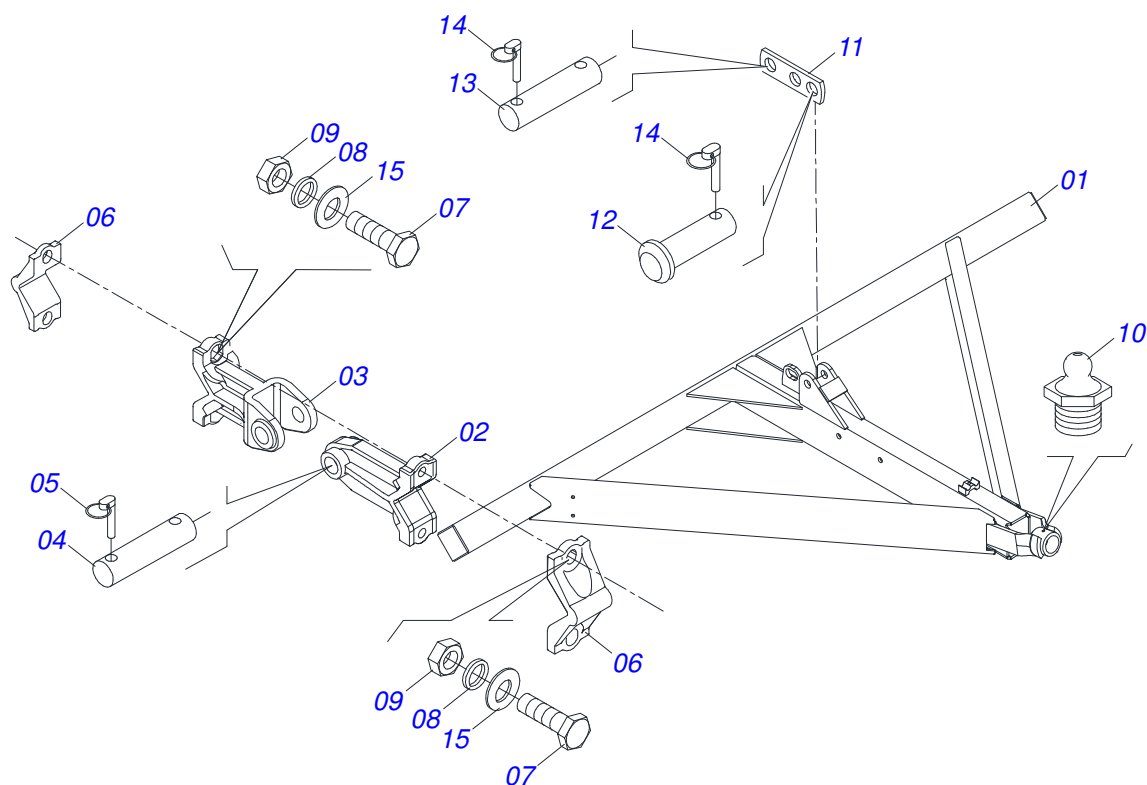


Item	Code	Description	13 L
001	0511062824	DRAWBAR	00
002	0502012328	DRAWBAR SUPPORT FRONT FIXATION	04
003	0502012329	DRAWBAR FIXATION REAR SUPPORT	04
004	0561014393	COUPLING SHAFT	04
005	0503030119	LOCK PIN	04
006	0502012330	SUPPORT FIXER PIVOT	08
007	0503011084	3/4" X 5" BOLT	16
008	0503010023	SPRING WASHER	08
009	0503010014	3/4" NUT	08
010	0503010002	1800 GREASE FITTING	01
011	0561019087	DRAWBAR TRANSPORT LOCK	01
012	0521018532	1.4" X 12" COUPLING SHAFT	01
013	0521010578	COUPLING SHAFT	01
014	0503030085	LOCK PIN	03
015	0501010322	FLAT WASHER	08

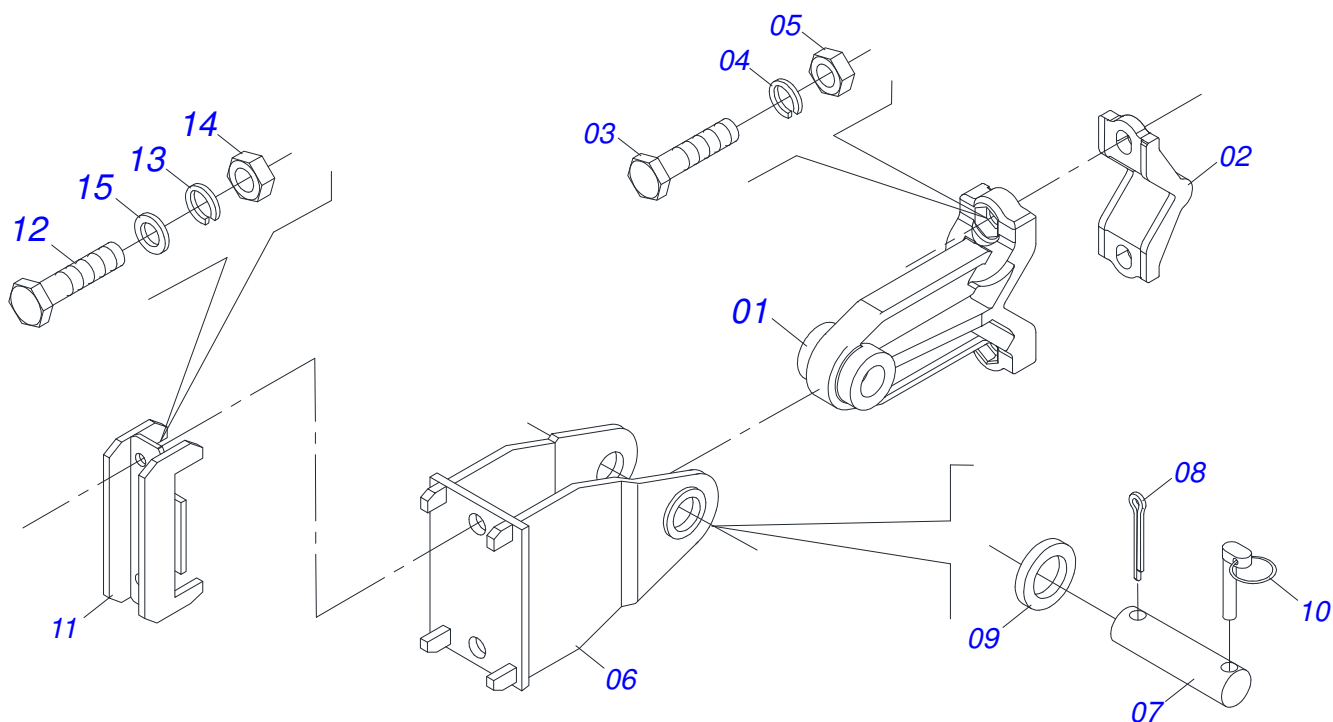


Item	Code	Description	15
001	0502012329	DRAWBAR FIXATION REAR SUPPORT	04
002	0502012330	SUPPORT FIXER PIVOT	04
003	0503011084	3/4" X 5" BOLT	08
004	0503010023	SPRING WASHER	08
005	0503010014	3/4" NUT	08
006	0511065418	DRAWBAR SUPPORT FRONT FIXATION	04
007	0561014393	COUPLING SHAFT	04
008	0503010523	1/4" X 2" COTTERPIN	04
009	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN	08
010	0503030119	LOCK PIN	04
011	0511065419	DRAWBAR FIXER CLAMP	04
012	0521010066	3/4" X 8.12" BOLT	08
013	0503010023	SPRING WASHER	08
014	0503010014	3/4" NUT	08
015	0501010322	FLAT WASHER	08

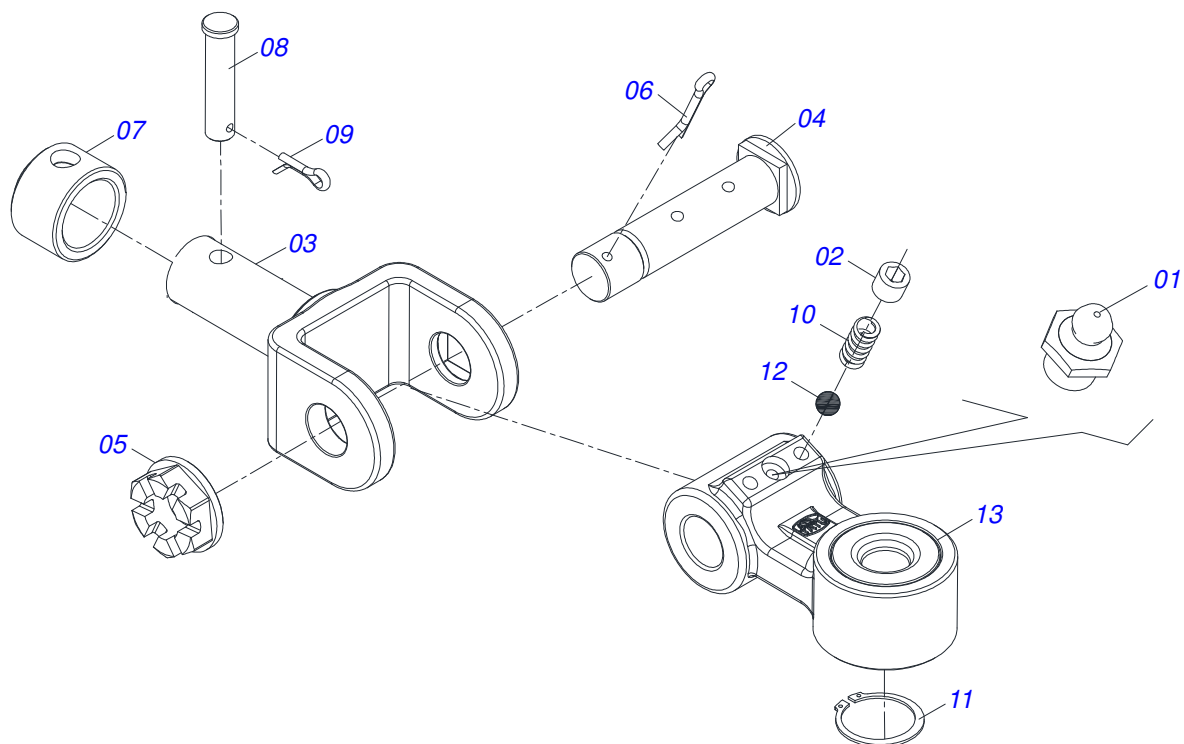

Item	Code	Description	QT
001	0503010002	1800 GREASE FITTING	01
002	0503016482	BOLT	02
003	0502040846	U TRACTOR HITCH	01
004	0571012612	PIVOT SHAFT	01
005	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT	01
006	0503010010	1/4" X 2.1/2" COTTERPIN	01
007	0521010681	BUSHING COUPLING BODY	01
008	0521010639	COUPLING SHAFT	01
009	0503010571	1/4" X 1.1/2 COTTERPIN	01
010	0503033731	COMPRESSION SPRING LEFT	02
011	0503010396	501060 CLAMPING RING (FOR AXLE)	01
012	0503011331	3/8 BALL	02
013	0501110778	TRACTOR HITCH	01

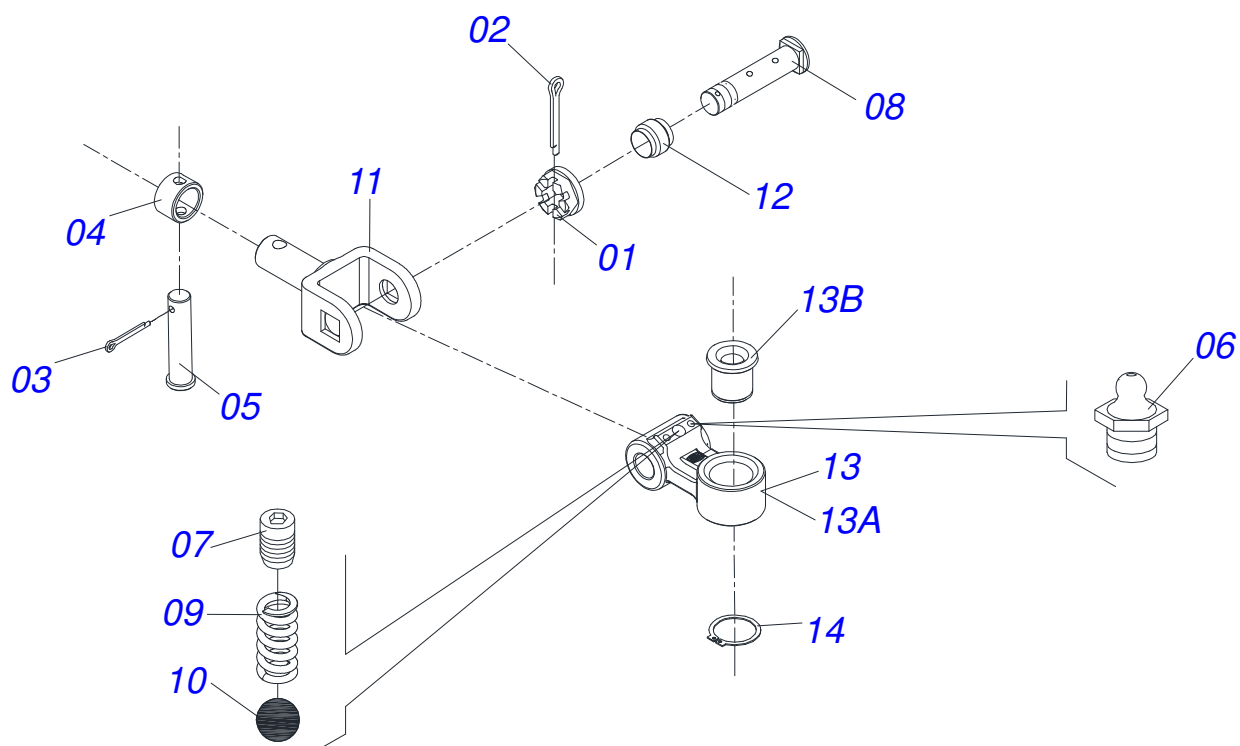


Item	Code	Description	15-17-19 L
001	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT	01-01-01
002	0503010010	1/4" X 2.1/2" COTTERPIN	01-01-01
003	0503010571	1/4" X 1.1/2 COTTERPIN	01-01-01
004	0521010681	BUSHING COUPLING BODY	01-01-01
005	0521010639	COUPLING SHAFT	01-01-01
006	0503010002	1800 GREASE FITTING	01-01-01
007	0503016482	BOLT	02-02-02
008	0571012612	PIVOT SHAFT	01-01-01
009	0503033731	COMPRESSION SPRING LEFT	02-02-02
010	0503011331	3/8 BALL	02-02-02
011	0502040850	U TRACTOR COUPLING	01-01-01
012	1882970002	GREASE SOAP	00-00-00
013	0501110778	TRACTOR HITCH	01-01-01
013A	0502040853	HITCH JOINT	01-01-01
013B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4	01-01-01
014	0503010396	501060 CLAMPING RING (FOR AXLE)	01-01-01

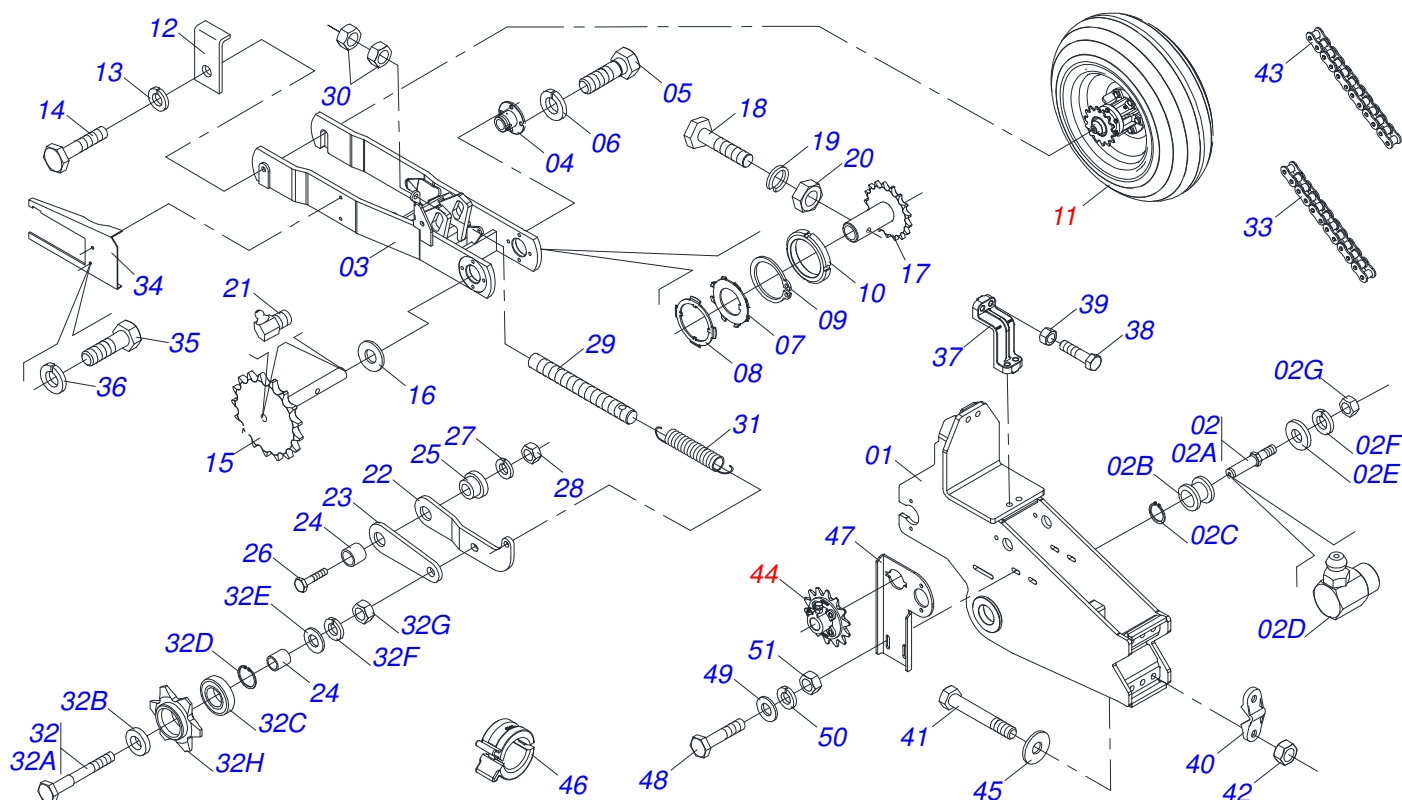


Item	Code	Description	QT
001	0521063678	WHEEL SUPPORT	01
002	0501054284	SIDE TENSIONER CHAIN TRANSM	01
002A	0531017202	AXLE CHAIN TIGHTENER	01
002B	0503030402	PULLEY	01
002C	0503010302	501019 SEAL RING	01
002D	0503010004	1890 GREASE FITTING	01
002E	0511017302	FLAT WASHER	02
002F	0503010019	1/2" SPRING WASHER	01
002G	0503010060	1/2" NUT	01
003	0511065935	RIGHT WHEEL FORK	01
004	0501110625	WHEEL PIVOT BEARING	02
005	0503013232	1/2" UNF X 1" BOLT	08
006	0503010019	1/2" SPRING WASHER	08
007	0561013021	BEARING INNER LOK	02
008	0561013022	BEARING EXTERNAL LOCK	02
009	0503010398	501082 CLAMPING RING (FOR AXLE)	02
010	0561013020	KM 12 NUT	02
011	0501055275	11L15 HUB WITH TIRE WHEEL ASSY	01
012	0521012190	AXLE LOCK	02
013	0503010027	SPRING WASHER	02
014	0503011167	M16 X 2 X 30 BOLT	02
015	0511061808	15Z GEAR WITH AXLE,	01
016	0501018466	FLAT WASHER	01
017	0511061809	15Z GEAR WITH COUPLING	01
018	0503011103	7/16" X 2-1/2" BOLT	01
019	0503010180	7/16" SPRING WASHER	01
020	0503010244	7/16" NUT	01
021	0503010004	1890 GREASE FITTING	02
022	0531018654	CHAIN TIGHTENER SUPPORT	01
023	0531018653	CHAIN TIGHTENER MINOR SUPPORT	01
024	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE	01
025	0531016916	SLEEVE BEARING SUPPORT	02
026	0503010899	5/8" X 2-1/4" BOLT	01

Item	Code	Description	QT
027	0503010027	SPRING WASHER	01
028	0503010013	5/8" NUT	01
029	0501013491	5/8" TENSIONER SPRING	01
030	0503010013	5/8" NUT	02
031	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING	01
032	0501053522	WHEEL CHAIN TENSIONER	01
032A	0531012640	AXLE CHAIN TIGHTENER	01
032B	0531012678	4.5" X 0.9" X 0.2" SLEEVE	01
032C	0503012882	BALL BEARING	01
032D	0503011945	503050 CLAMPING RING (FOR AXLE)	01
032E	0511017302	FLAT WASHER	01
032F	0503010019	1/2" SPRING WASHER	01
032G	0503010060	1/2" NUT	01
032H	0502012853	07Z GEAR	01
033	0503012570	CHAIN 2050 X 2.8" LINK + MENDING	01
034	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP	01
035	0503010847	1/2" X 3.1/4" BOLT	02
036	0503010019	1/2" SPRING WASHER	02
037	0502012720	FIXER THE RODEIRO SUPPORT	01
038	0503017857	BOLT 5/8 UNF 4	04
039	0503010811	5/8" UNF SELF ADJUSTING NUT	04
040	0502010584	CARRYING-WHEELS SUPPORT FIXER	02
041	0511010736	5/8" X 5-1/4" BOLT	04
042	0503010811	5/8" UNF SELF ADJUSTING NUT	04
043	0503012958	2050 CHAIN X 42 LINK + REDUCTION	01
044	0511051434	TRANSMISSION DRIVING ASSY	01
045	0501012140	FLAT WASHER	04
046	0501047888	ROD STOP	01
047	0561017269	MOTOR AXLE BEARING SUPPORT	01
048	0503011082	C1/2" X 1.3/4" BOLT	02
049	0511017302	FLAT WASHER	02
050	0503010019	1/2" SPRING WASHER	02
051	0503010060	1/2" NUT	02

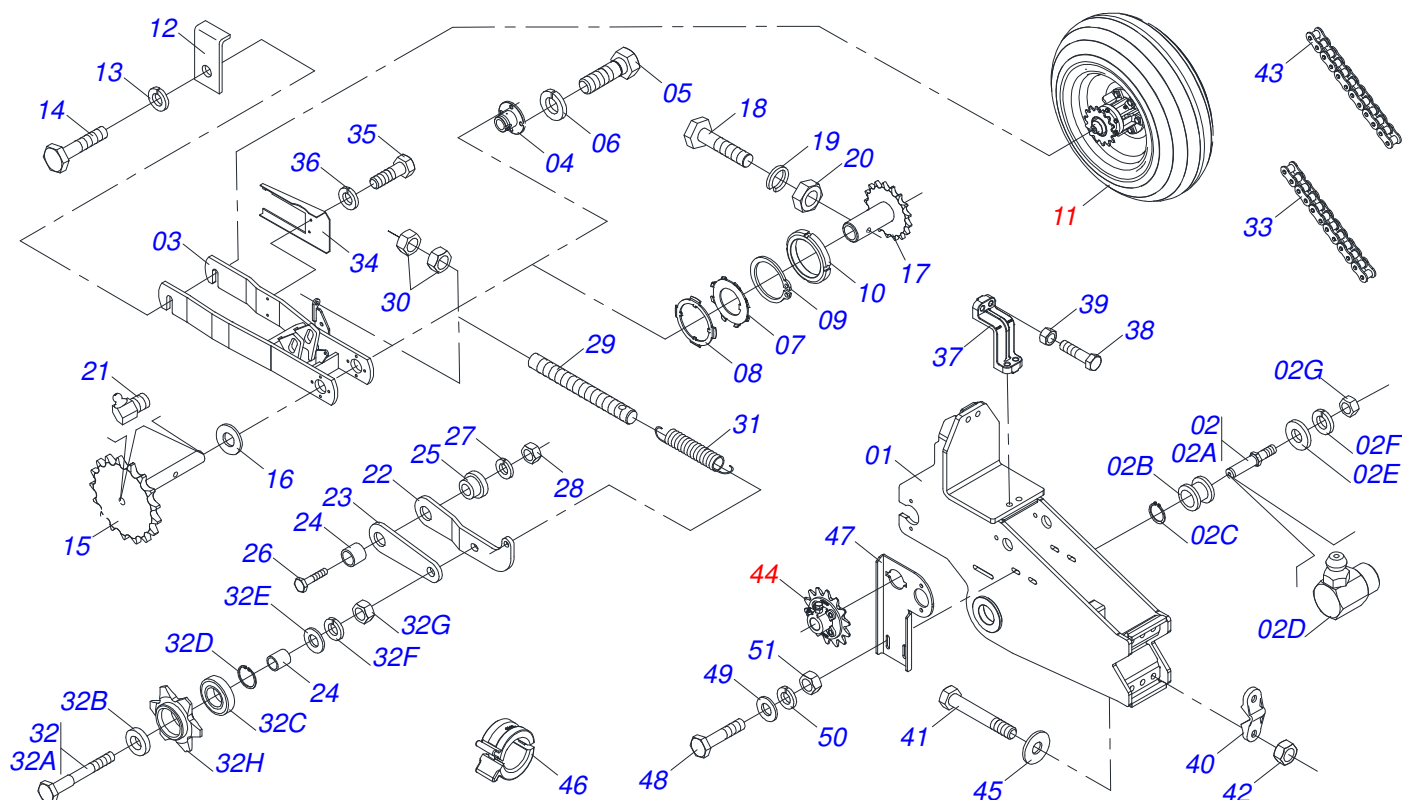


Item	Code	Description	QT
001	0521063678	WHEEL SUPPORT	01
002	0501054284	SIDE TENSIONER CHAIN TRANSM	01
002A	0531017202	AXLE CHAIN TIGHTENER	01
002B	0503030402	PULLEY	01
002C	0503010302	501019 SEAL RING	01
002D	0503010004	1890 GREASE FITTING	01
002E	0511017302	FLAT WASHER	02
002F	0503010019	1/2" SPRING WASHER	01
002G	0503010060	1/2" NUT	01
003	0511065934	LEFT WHEEL FORK	01
004	0501110625	WHEEL PIVOT BEARING	02
005	0503013232	1/2" UNF X 1" BOLT	08
006	0503010019	1/2" SPRING WASHER	08
007	0561013021	BEARING INNER LOK	02
008	0561013022	BEARING EXTERNAL LOCK	02
009	0503010398	501082 CLAMPING RING (FOR AXLE)	02
010	0561013020	KM 12 NUT	02
011	0501055275	11L15 HUB WITH TIRE WHEEL ASSY	01
011A	0503060244	RODA C/ PNEU11L-15 10L 8F COMP GCRO	01
011AA	0503012108	RODA 10 LB X 15 X 8F X 203 GCRO	01
011AB	0503010860	CAMARA AR 11L 15	01
011AC	0503010858	CANVAS TIRE	01
011B	0501055330	CARRYING WHEEL HUB ASSY WITH TIRE	01
011BA	0501110740	HUB AND SPINDLE WITH BOLT	01
011BAA	0502012261	TIRE FOR WHEEL BOX	01
011BAB	0501010186	PARAFUSO ROD 5/8UNF X 2.1/8CR	08
011BAC	0503010064	5/8 UNF CONIC NUT	08
011BB	0503010328	25590/25523 ROLLER BEARING	01
011BC	0503010008	ROLAMENTO 3780/37203	01
011BD	0503010804	00547-B SEAL	02
011BE	0541012162	WHEEL BOX AXLE	01
011BF	0511065460	FLANGE 14Z GEAR	01
011BG	0503011444	SPRING WASHER	06


Item	Code	Description	QT
011BH	0503010421	5/16" X 1-1/2" BOLT	06
011BI	0511015949	LOCK NUT	01
011BJ	0503010329	LOCK WASHER	01
011BK	0503010330	KM 9 LOCKNUT	01
011BL	0503010002	1800 GREASE FITTING	01
011BM	1882970002	GREASE SOAP	00
012	0521012190	AXLE LOCK	02
013	0503010027	SPRING WASHER	02
014	0503011167	M16 X 2 X 30 BOLT	02
015	0511061808	15Z GEAR WITH AXLE,	01
016	0501018466	FLAT WASHER	01
017	0511061809	15Z GEAR WITH COUPLING	01
018	0503011103	7/16" X 2-1/2" BOLT	01
019	0503010180	7/16" SPRING WASHER	01
020	0503010244	7/16" NUT	01
021	0503010004	1890 GREASE FITTING	02
022	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPOT	01
023	0531018653	CHAIN TIGHTENER MINOR SUPPORT	01
024	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE	01
025	0531016916	SLEEVE BEARING SUPPORT	02
026	0503010899	5/8" X 2-1/4" BOLT	01
027	0503010027	SPRING WASHER	01
028	0503010013	5/8" NUT	01
029	0501013491	5/8" TENSIONER SPRING	01
030	0503010013	5/8" NUT	02
031	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING	01
032	0501053522	WHEEL CHAIN TENSIONER	01
032A	0531012640	AXLE CHAIN TIGHTENER	01
032B	0531012678	4.5" X 0.9" X 0.2" SLEEVE	01
032C	0503012882	BALL BEARING	01
032D	0503011945	503050 CLAMPING RING (FOR AXLE)	01
032E	0511017302	FLAT WASHER	01
032F	0503010019	1/2" SPRING WASHER	01
032G	0503010060	1/2" NUT	01
032H	0502012853	07Z GEAR	01
033	0503012570	CHAIN 2050 X 2.8" LINK + MENDING	01
034	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION	01
035	0503010847	1/2" X 3.1/4" BOLT	02
036	0503010019	1/2" SPRING WASHER	02
037	0502012720	FIXER THE RODEIRO SUPPORT	01
038	0503017857	BOLT 5/8 UNF 4	04
039	0503010811	5/8" UNF SELF ADJUSTING NUT	04
040	0502010584	CARRYING-WHEELS SUPPORT FIXER	02
041	0511010736	5/8" X 5-1/4" BOLT	04
042	0503010811	5/8" UNF SELF ADJUSTING NUT	04
043	0503012958	2050 CHAIN X 42 LINK + REDUCTION	01
044	0511051434	TRANSMISSION DRIVING ASSY	01
045	0501012140	FLAT WASHER	04
046	0501047888	ROD STOP	01
047	0561017269	MOTOR AXLE BEARING SUPPORT	01
048	0503011082	C1/2" X 1.3/4" BOLT	02
049	0511017302	FLAT WASHER	02
050	0503010019	1/2" SPRING WASHER	02
051	0503010060	1/2" NUT	02

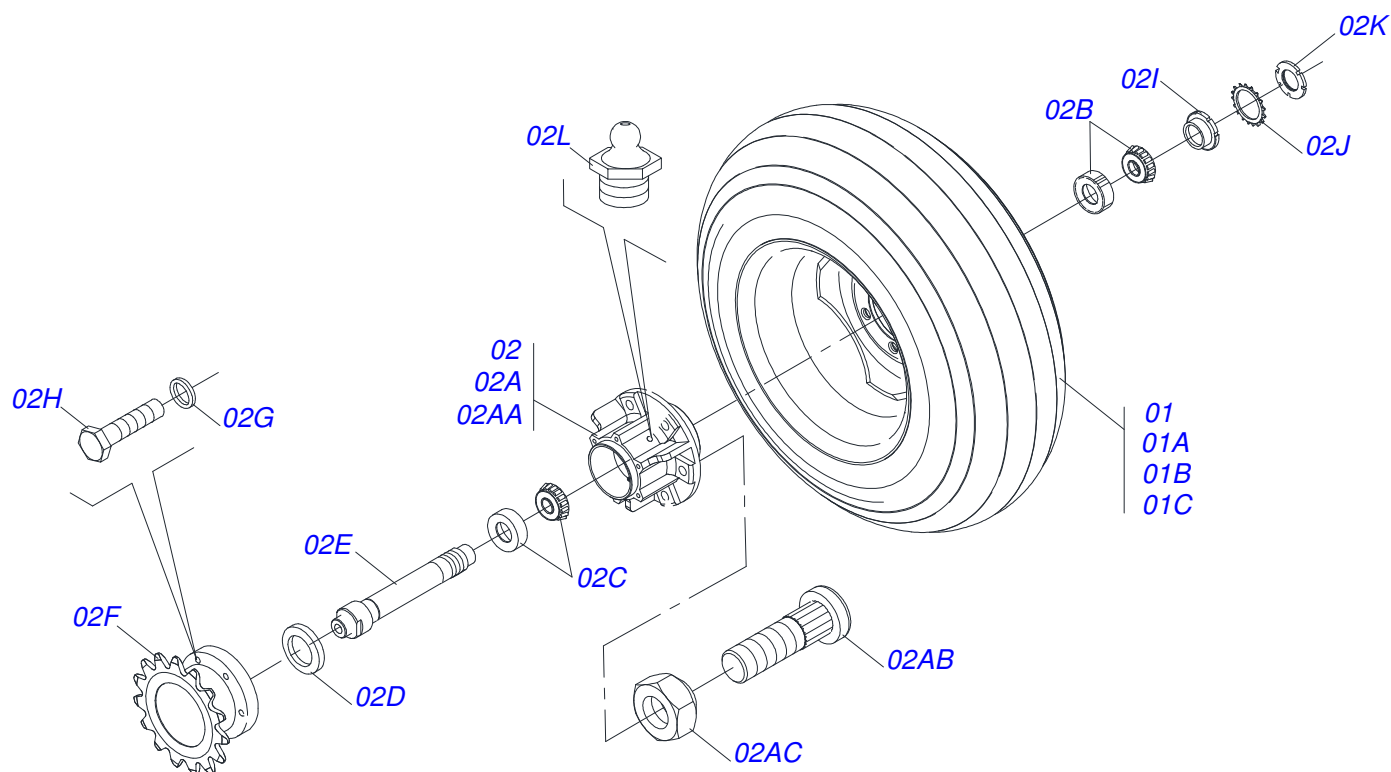


Item	Code	Description	QT
001	0503060244	RODA C/ PNEU11L-15 10L 8F COMP GCRO	01
001A	0503012108	RODA 10 LB X 15 X 8F X 203 GCRO	01
001B	0503010860	CAMARA AR 11L 15	01
001C	0503010858	CANVAS TIRE	01
002	0501055330	CARRYING WHEEL HUB ASSY WITH TIRE	01
002A	0501110740	HUB AND SPINDLE WITH BOLT	01
002AA	0502012261	TIRE FOR WHEEL BOX	01
002AB	0501010186	PARAFUSO ROD 5/8UNF X 2.1/8CR	08
002AC	0503010064	5/8 UNF CONIC NUT	08
002B	0503010328	25590/25523 ROLLER BEARING	01
002C	0503010008	ROLAMENTO 3780/37203	01
002D	0503010804	00547-B SEAL	02
002E	0541012162	WHEEL BOX AXLE	01
002F	0511065460	FLANGE 14Z GEAR	01
002G	0503011444	SPRING WASHER	06
002H	0503010421	5/16" X 1-1/2" BOLT	06
002I	0511015949	LOCK NUT	01
002J	0503010329	LOCK WASHER	01
002K	0503010330	KM 9 LOCKNUT	01
002L	0503010002	1800 GREASE FITTING	01
002M	1882970002	GREASE SOAP	00

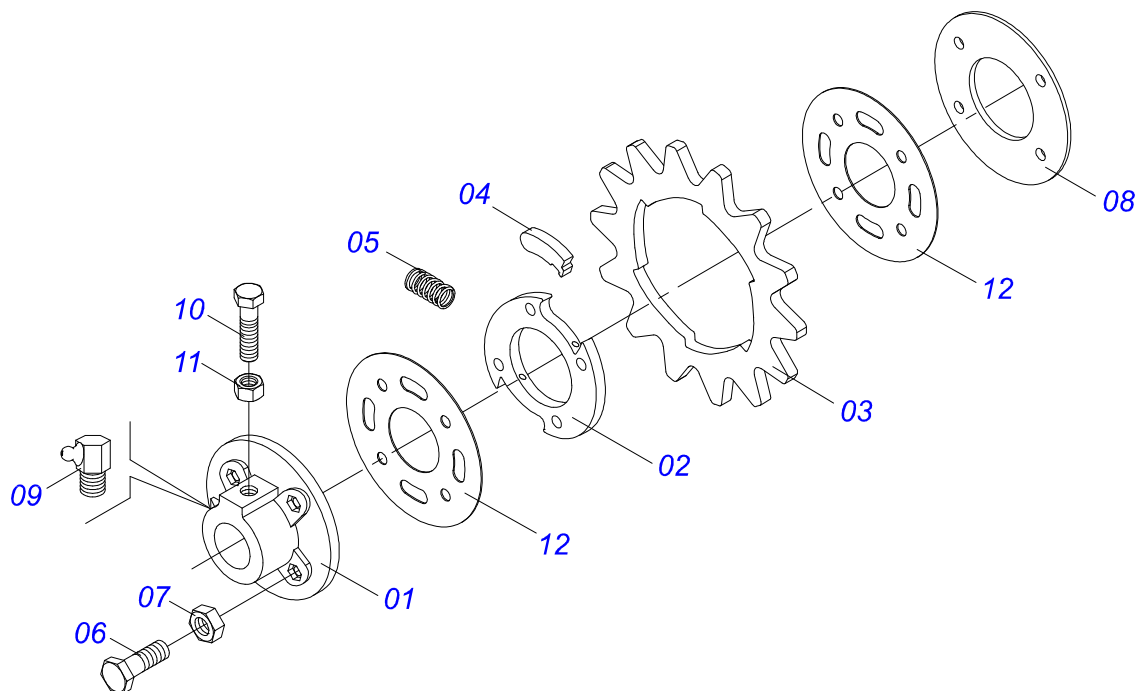


Item	Code	Description	QT
01	0502012696	RIGHT RATCHET HANDLE BODY	01
02	0571010151	GRAGGER RATCHET BODY	01
03	0561019923	RATCHET PULLER GEAR	01
04	0551019100	LOCK RATCHET	02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING	02
06	0503010365	NUT	04
07	0503013816	5/16" LOCKNUT	04
08	0571010164	SEAT SIDE OF RATCHET	01
09	0503010004	1890 GREASE FITTING	01
10	0503030678	1/2"X1-1/2"BOLT	01
11	0503010060	1/2" NUT	01
12	0571010763	FLANGE WASHER	02

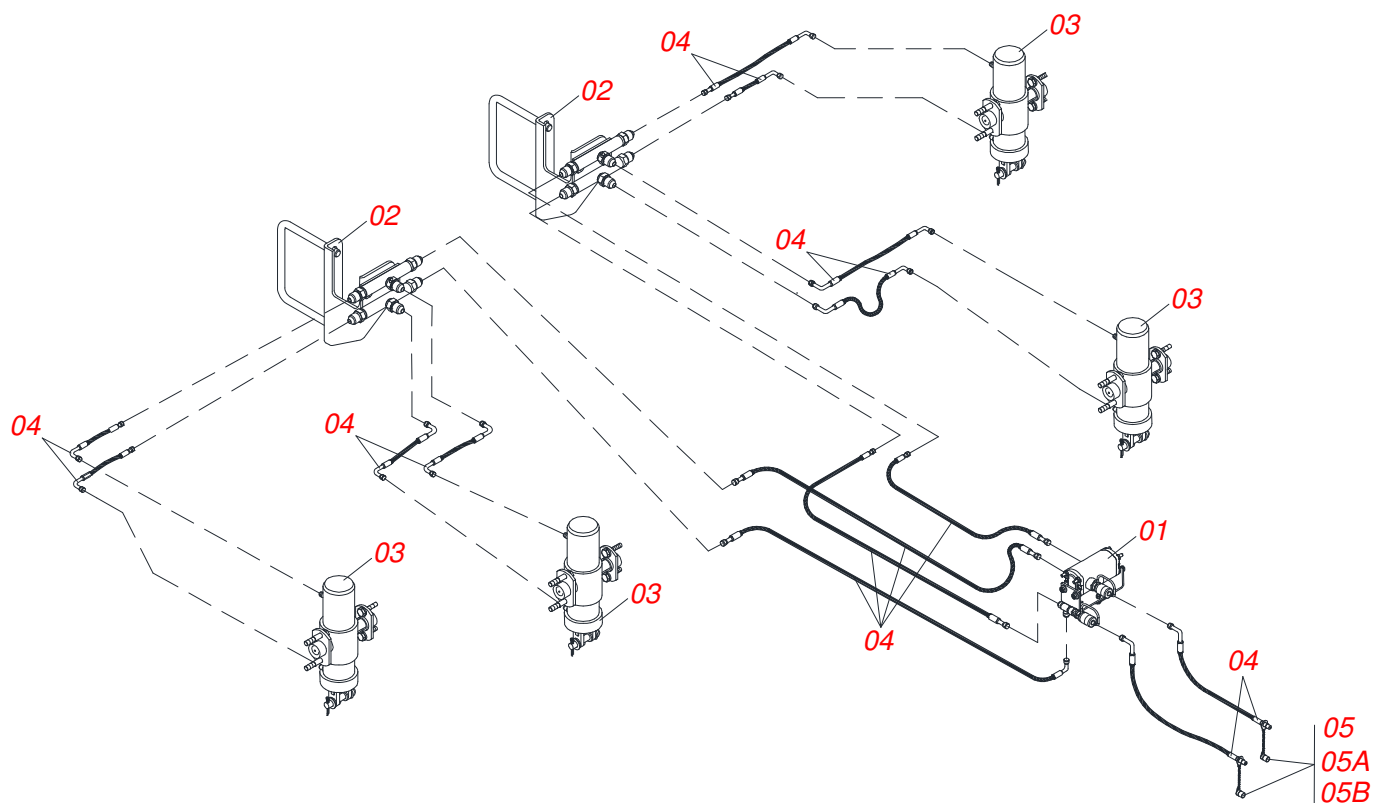


Item	Code	Description	QT
001	0511053358	SET VALVE FIXADOR	01
002	0511053382	FIXER HYDRAULIC HOSE ASSEMBLY	01
003	0511053384	HYDRAULIC CYLINDER ASSEMBLY	01
004	0511053309	HOSE KIT	01
005	0501053834	QUICK CONECTION (MALE) 1/2	02
005A	0503011627	QUICK CONNECTION (MALE) AGR 1/2 NPT	01
005B	0503011882	QUICK CONNECTION COVER	01

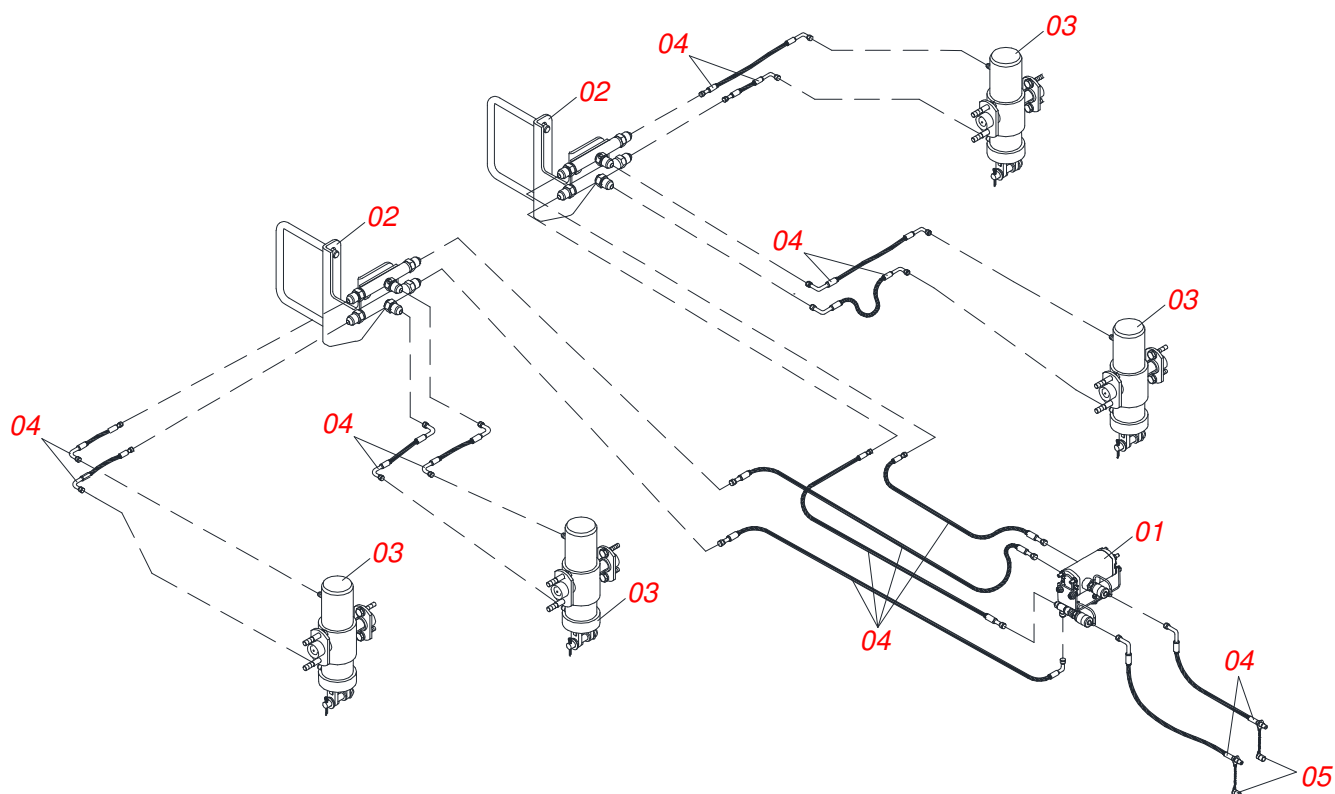


Item	Code	Description	09 L
001	0511053358	SET VALVE FIXADOR	01
002	0511056292	FIXER HYDRAULIC HOSE ASSEMBLY	01
003	0511053384	HYDRAULIC CYLINDER ASSEMBLY	01
004	0511053425	HOSE KIT	01
005	0501053834	QUICK CONECTION (MALE) 1/2	02

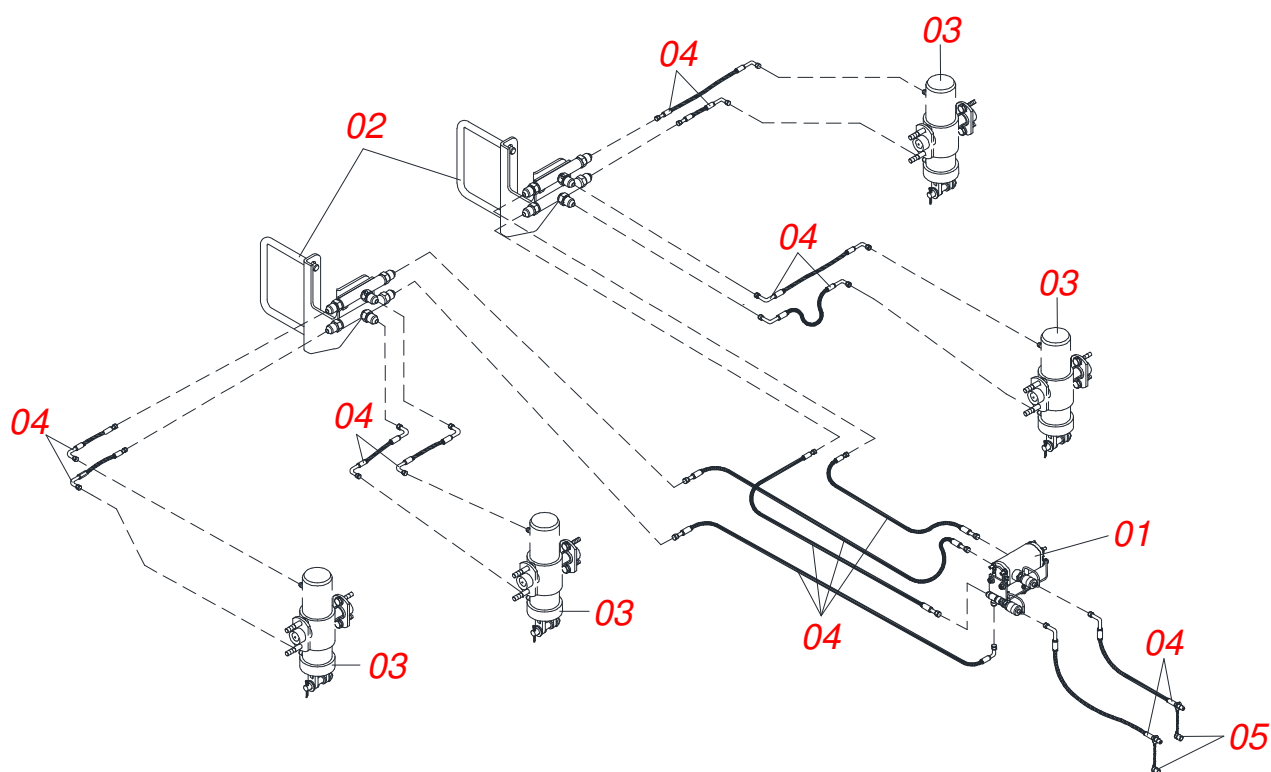


Item	Code	Description	QT
001	0511053358	SET VALVE FIXADOR	01
002	0511053457	FIXING ASSEMBLY HOSE HYDRAULIC	01
003	0511053368	HYDRAULIC CYLINDER ASSEMBLY	01
004	0511053449	HOSE KIT	01
005	0501053834	QUICK CONECTION (MALE) 1/2	02

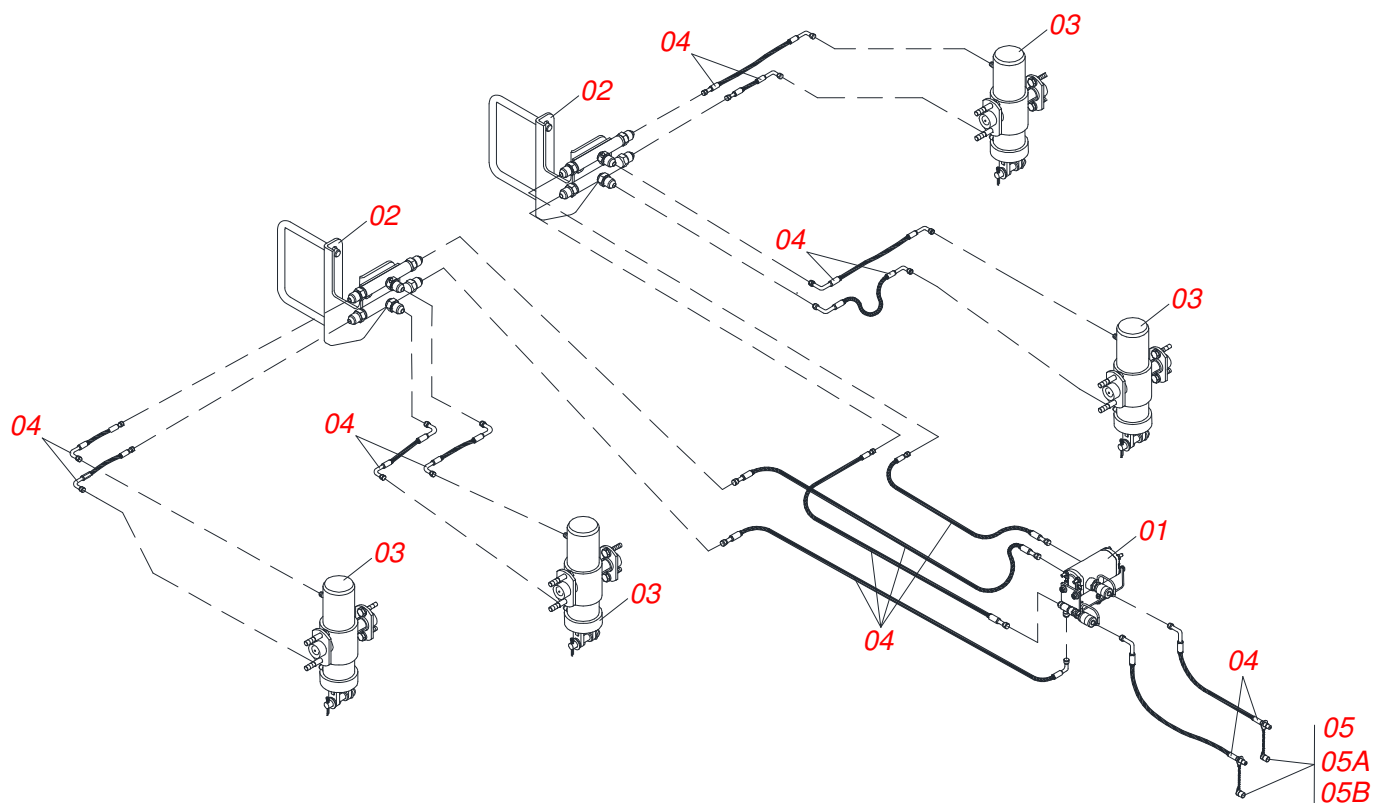


Item	Code	Description	13 L
001	0511053358	SET VALVE FIXADOR	01
002	0511053350	FIXER HYDRAULIC HOSE ASSEMBLY	01
003	0511053368	HYDRAULIC CYLINDER ASSEMBLY	01
004	0511053290	HOSE KIT	01
005	0501053834	QUICK CONECTION (MALE) 1/2	02
005A	0503011627	QUICK CONNECTION (MALE) AGR 1/2 NPT	01
005B	0503011882	QUICK CONNECTION COVER	01

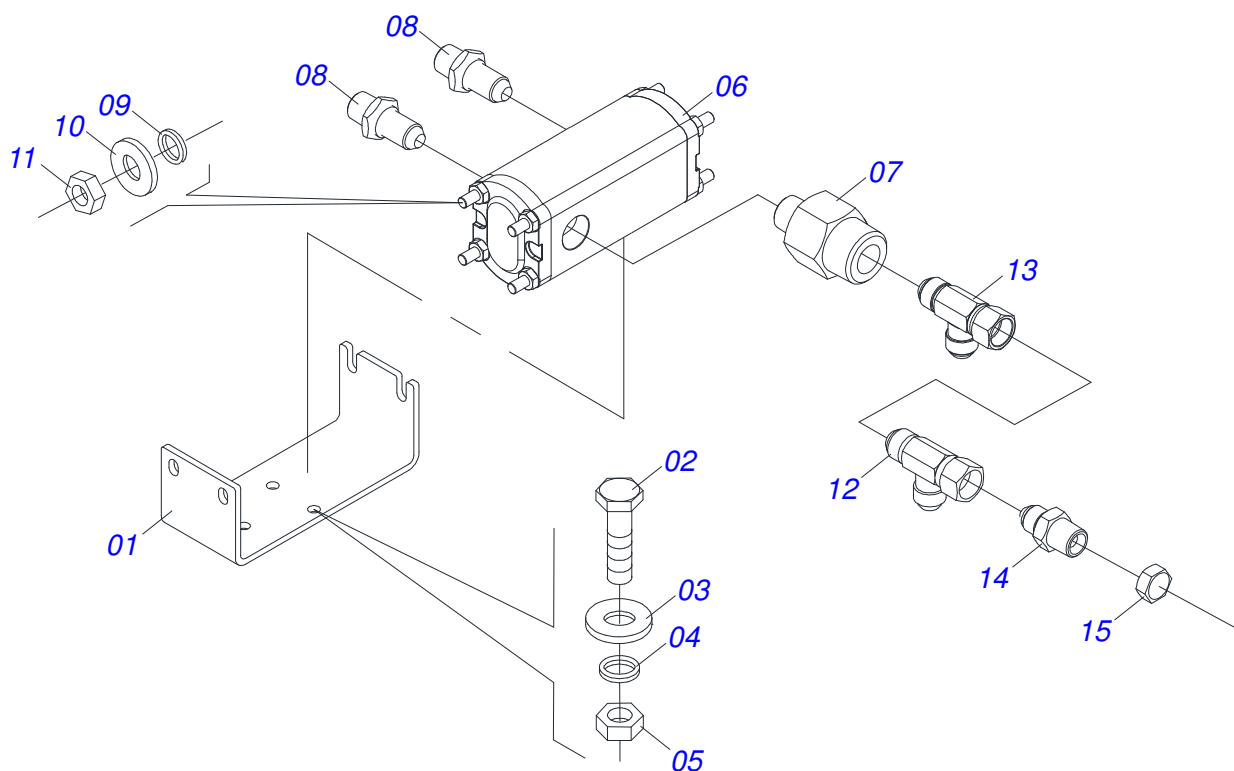


Item	Code	Description	QT
001	0571010596	SUPPORT VALVE 50/50	01
002	0503010371	5/16" X 1" BOLT	02
003	0501010694	FLAT WASHER	02
004	0503010179	SPRING WASHER	02
005	0503010337	5/16" NUT	02
006	0503013791	DOUBLE MOTOR	01
007	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE	01
008	0551012463	1/2" BSPT X 3/4" UNF X 51 NIPPLE	02
009	0503015075	M10 SPRING WASHER	04
010	0501010984	FLAT WASHER	04
011	0503011051	M10 X 0.6" NUT	04
012	0503011968	T ADAPTOR WITH GIRAT	01
013	0503012341	T 7/8" ADAPOR GIRAT NUT	02
014	0541012166	NIPPLE 3/4" UNF X 7/8"	01
015	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	01

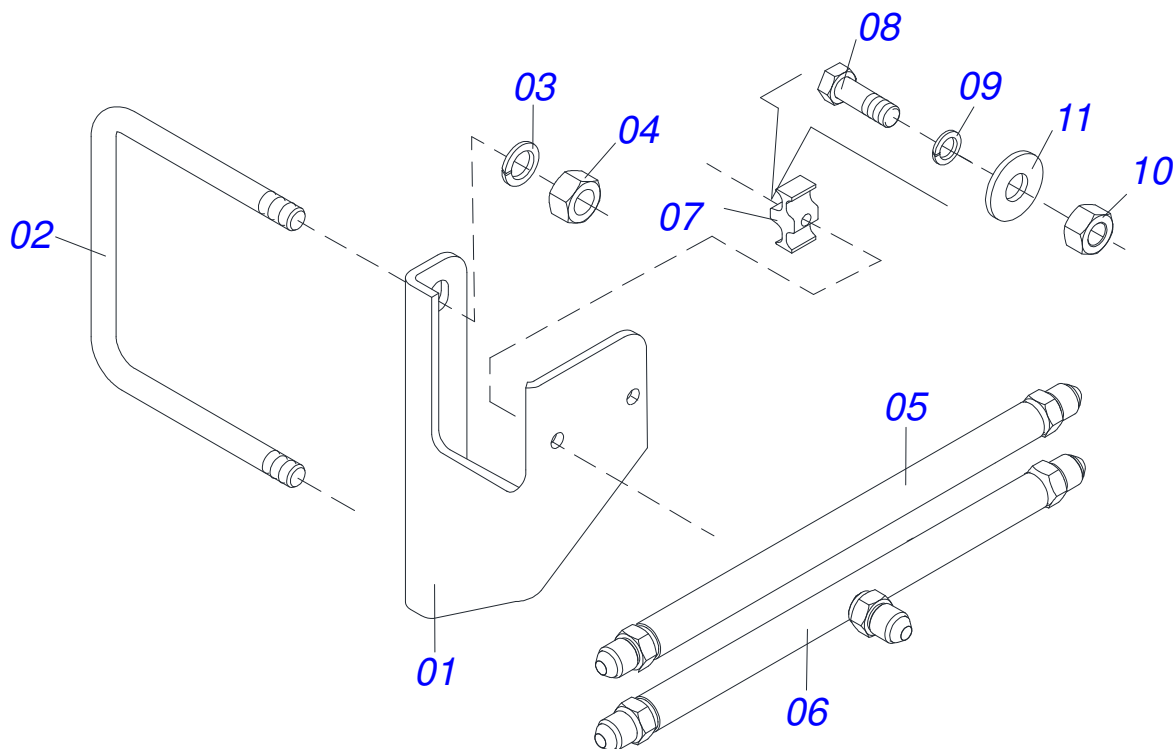


Item	Code	Description	QT
001	0561017277	OIL CONDUCTOR FIXER PLATE	04
002	0521010718	5/8" U BOLT	04
003	0503010027	SPRING WASHER	08
004	0503010013	5/8" NUT	08
005	0521065260	MH 11/450 OIL CONDUCTOR	04
006	0521065265	OIL CONDUCTOR	04
007	0502012702	BODY SUPPORT CLAMP	10
008	0503011268	3/8" X 2-1/2" BOLT	10
009	0503010025	3/8 SPRING WASHER	10
010	0503010026	3/8" NUT	10
011	0501012140	FLAT WASHER	08

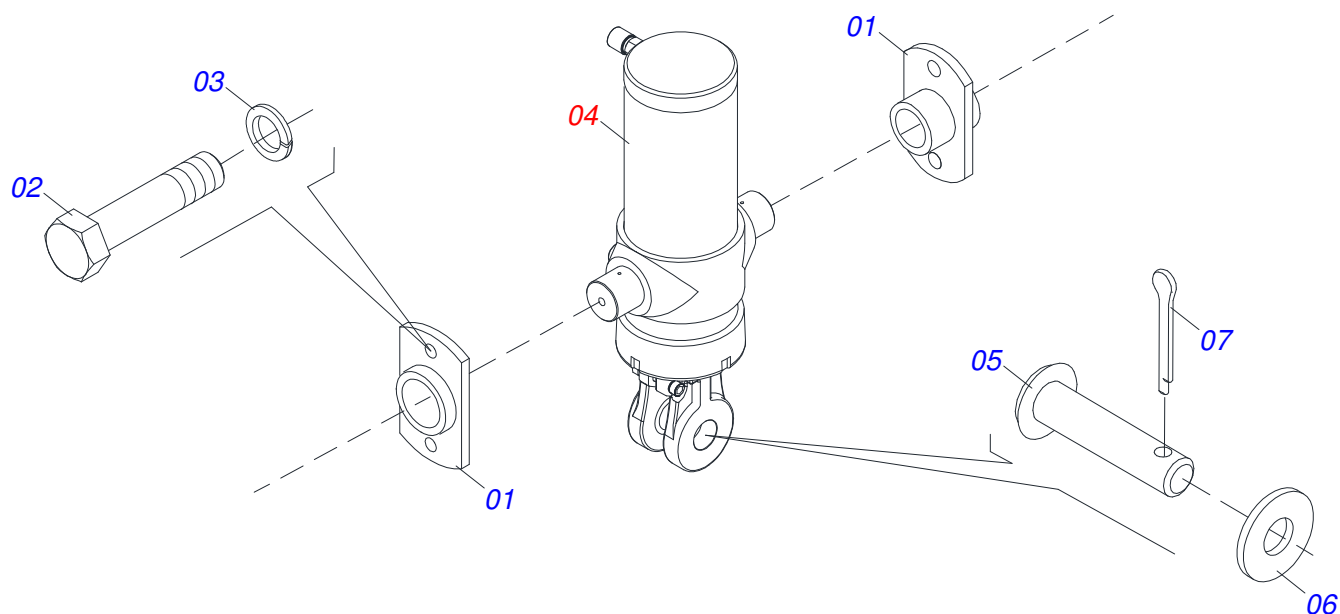


Item	Code	Description	QT
001	0511066351	FLANGE CYLINDER HYDRAULIC FIXER	08
002	0503010834	1/2 X 1 BOLT	16
003	0503010019	1/2" SPRING WASHER	16
004	0511058411	HYDRAULIC CYLINDER	04
005	0521010546	1.2" X 5.7" COUPLING SHAFT	04
006	0501017779	FLAT WASHER	08
007	0503010523	1/4" X 2" COTTERPIN	04

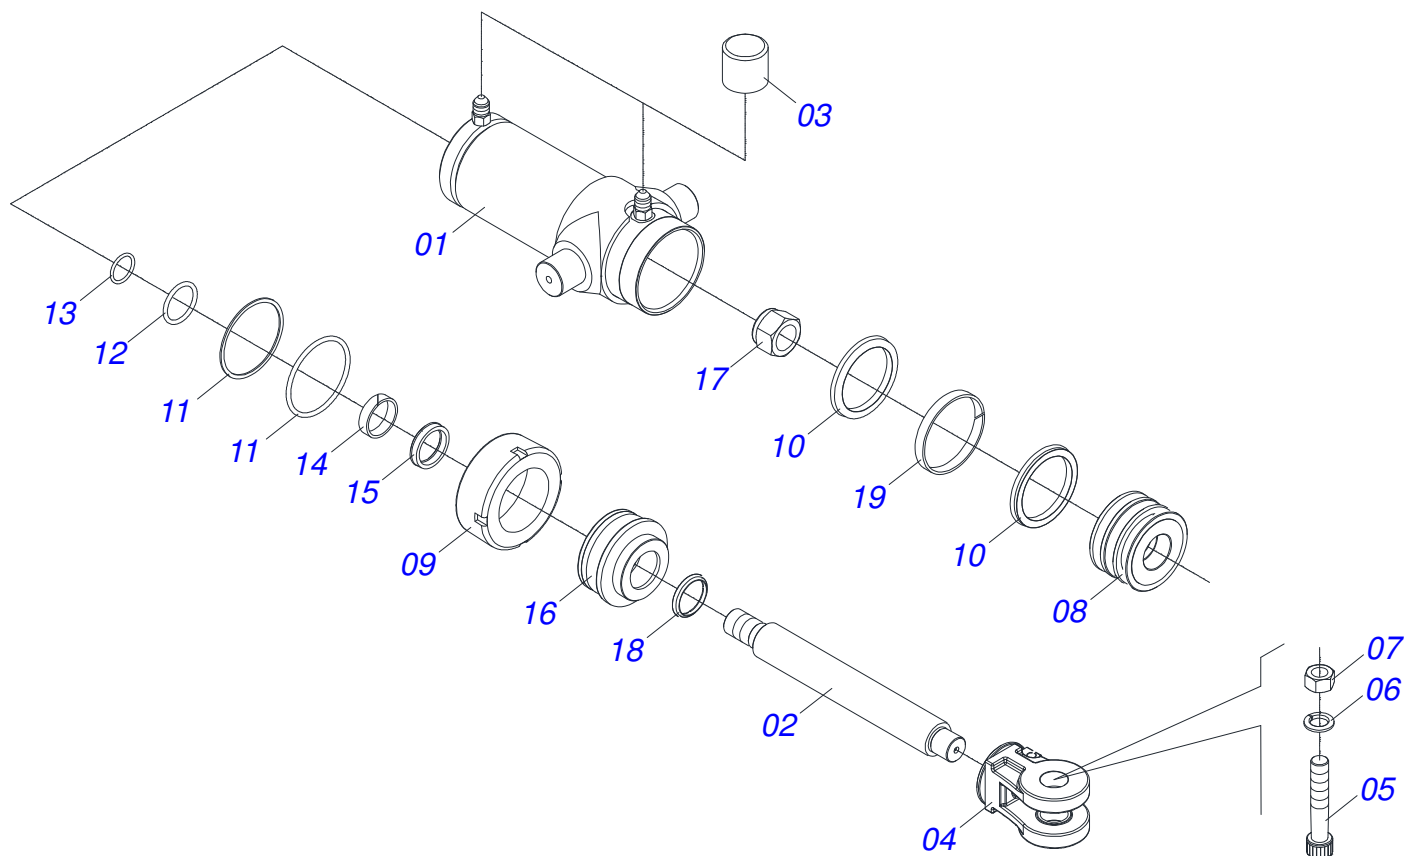


Item	Code	Description	QT
001	0511066774	2.5" X 28" CYLINDER CASE	01
002	0541017674	TURNBUCLE BODY	01
003	0503030385	PLUG	02
004	0511064408	FORK COP	01
005	0503011094	3/8" X 2" BOLT C C S I 12.9	01
006	0503010025	3/8 SPRING WASHER	01
007	0503010026	3/8" NUT	01
008	0581010302	RING OF SUPPORT	01
009	0502012822	101,60 MOBILE COVER	01
010	0503011061	8-342 BACK-UP RING	02
011	0503010338	2-342 N 3006-9B O'RING	02
012	0503017936	RING	01
013	0503017938	RING GUIDE	01
014	0503017937	GASKET	01
015	0503010761	D-1750 SCRAPER RING	01
016	0581010837	PISTON	01
017	0503010817	1-1/4" SELF-ADJUSTING NUT	01
018	0503015633	SELEMASTER SEALING	01
019	0503018029	2-217 O'RING	01

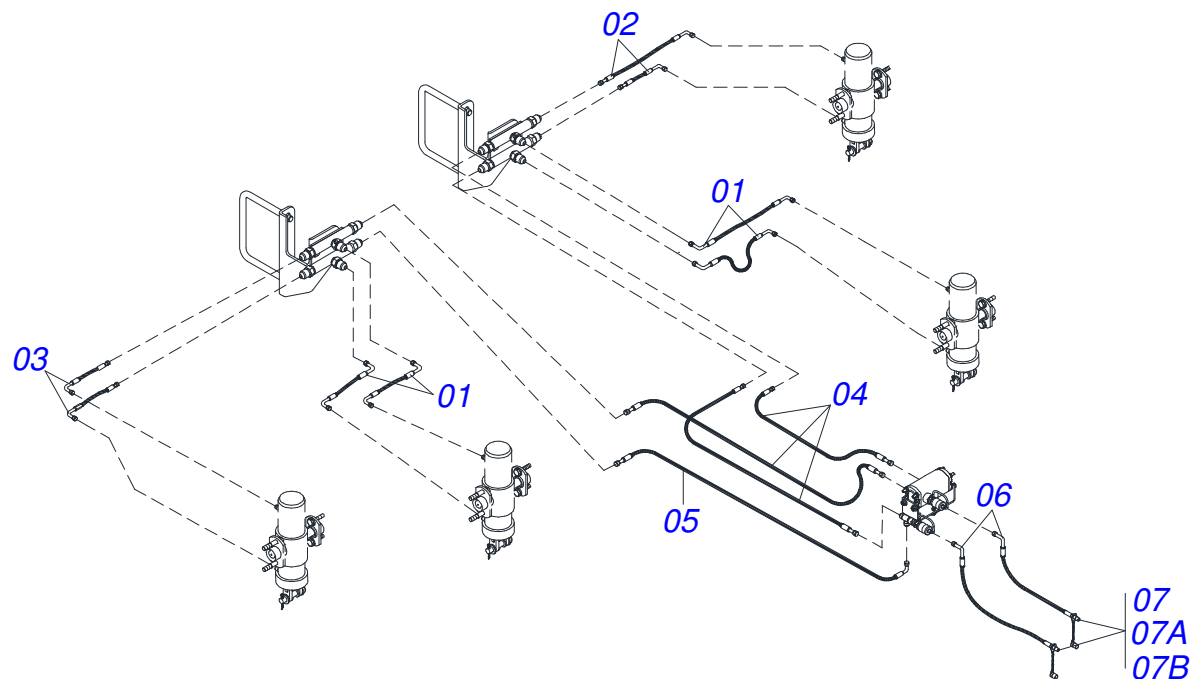


Item	Code	Description	11 L
001	0501080760	3/8" X 500 TC-TC HOSE	04
002	0501080150	TR-TC HOSE ASSY	02
003	0501080055	3/8" X 1000 TR-TC HOSE	02
004	0501080321	3/8" X 47" TR-TR HOSE ASSY	03
005	0501080348	TR-TC HOSE ASSY	01
006	0501081073	1/2" X 4200 TC-TM HOSE	02
007	0501053834	QUICK CONECTION (MALE) 1/2	02
007A	0503011627	QUICK CONNECTION (MALE) AGR 1/2 NPT	01
007B	0503011882	QUICK CONNECTION COVER	01

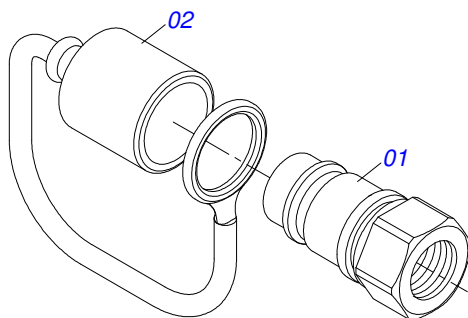


Item	Code	Description	QT
01	0503011627	QUICK CONNECTION (MALE) AGR 1/2 NPT	01
02	0503011882	QUICK CONNECTION COVER	01

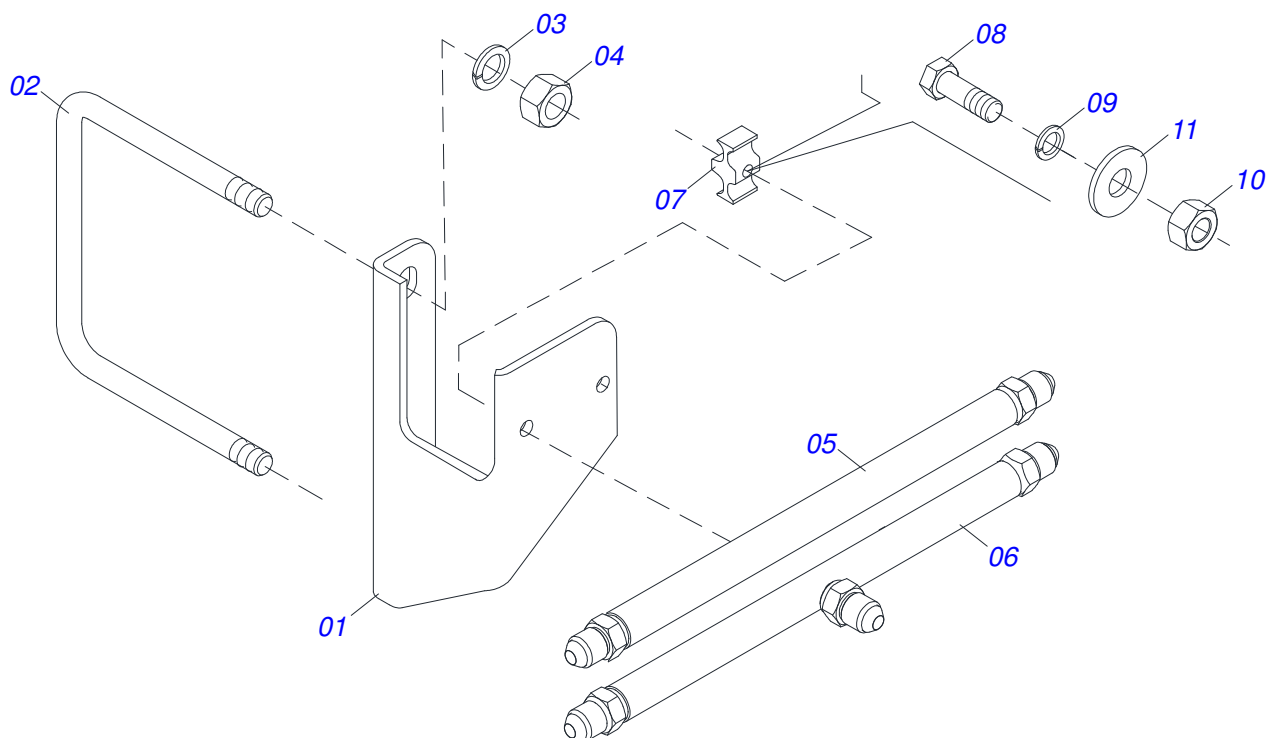


Item	Code	Description	QT
001	0561017277	OIL CONDUCTOR FIXER PLATE	04
002	0521010718	5/8" U BOLT	04
003	0503010027	SPRING WASHER	08
004	0503010013	5/8" NUT	08
005	0521065258	MH 9/450 OIL CONDUCTOR	04
006	0521065265	OIL CONDUCTOR	04
007	0502012702	BODY SUPPORT CLAMP	10
008	0503011268	3/8" X 2-1/2" BOLT	10
009	0503010025	3/8 SPRING WASHER	10
010	0503010026	3/8" NUT	10
011	0501012140	FLAT WASHER	08

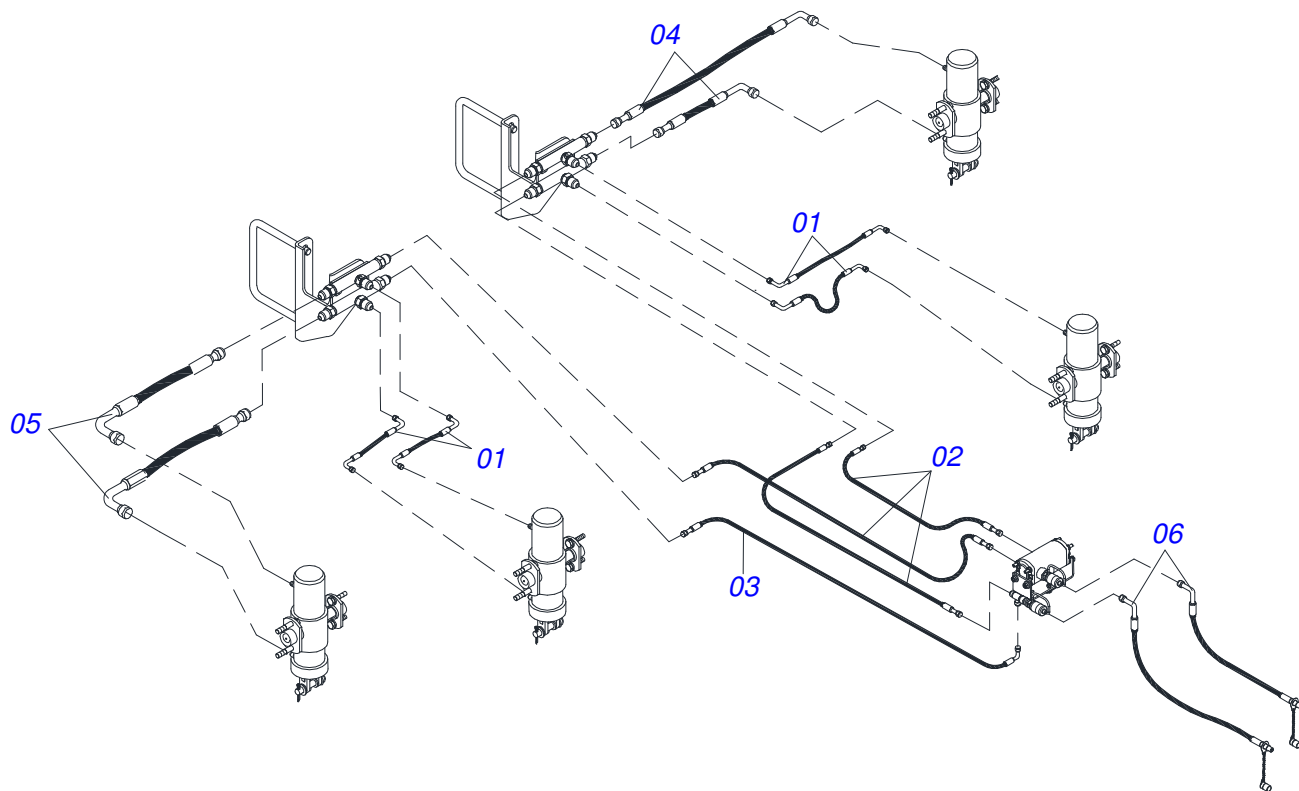


Item	Code	Description	QT
001	0501080760	3/8" X 500 TC-TC HOSE	04
002	0501080027	3/8" X 1000 TR-TR HOSE ASSY	03
003	0501080055	3/8" X 1000 TR-TC HOSE	01
004	0501080150	TR-TC HOSE ASSY	02
005	0501080055	3/8" X 1000 TR-TC HOSE	02
006	0501081073	1/2" X 4200 TC-TM HOSE	02

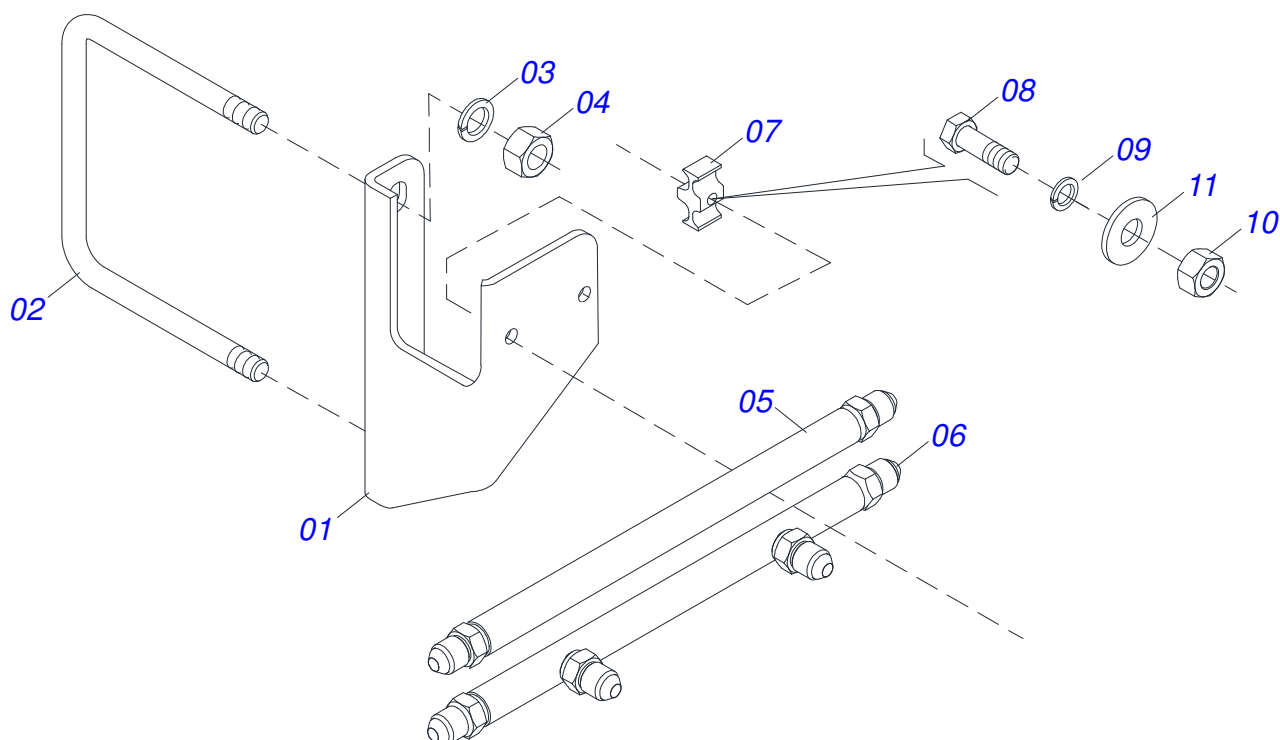


Item	Code	Description	15 L
001	0561017277	OIL CONDUCTOR FIXER PLATE	04
002	0521010718	5/8" U BOLT	04
003	0503010027	SPRING WASHER	08
004	0503010013	5/8" NUT	08
005	0521065262	MH 15/450 OIL CONDUCTOR	04
006	0521064749	OIL CONDUCTOR	04
007	0502012702	BODY SUPPORT CLAMP	10
008	0503011268	3/8" X 2-1/2" BOLT	10
009	0503010025	3/8 SPRING WASHER	10
010	0503010026	3/8" NUT	10
011	0501012140	FLAT WASHER	08

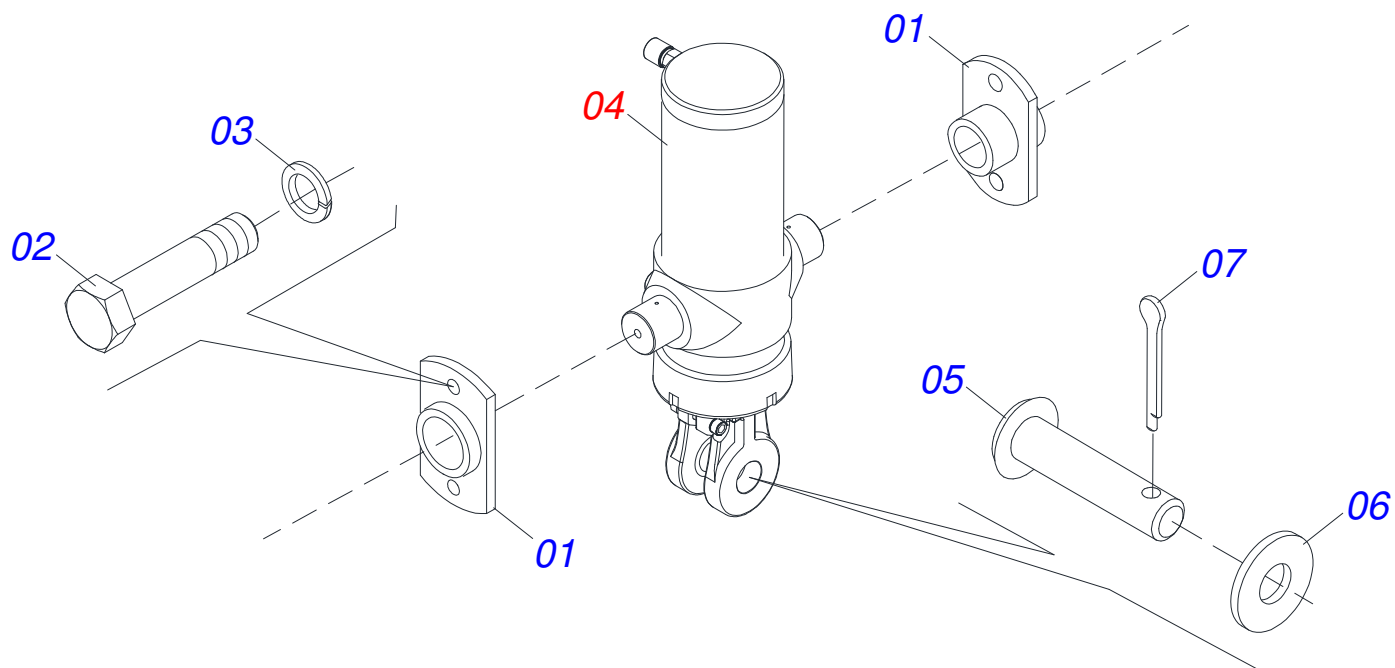


Item	Code	Description	QT
001	0511066351	FLANGE CYLINDER HYDRAULIC FIXER	12
002	0503010834	1/2 X 1 BOLT	24
003	0503010019	1/2" SPRING WASHER	24
004	0511058411	HYDRAULIC CYLINDER	06
005	0521010546	1.2" X 5.7" COUPLING SHAFT	06
006	0501017779	FLAT WASHER	12
007	0503010523	1/4" X 2" COTTERPIN	06

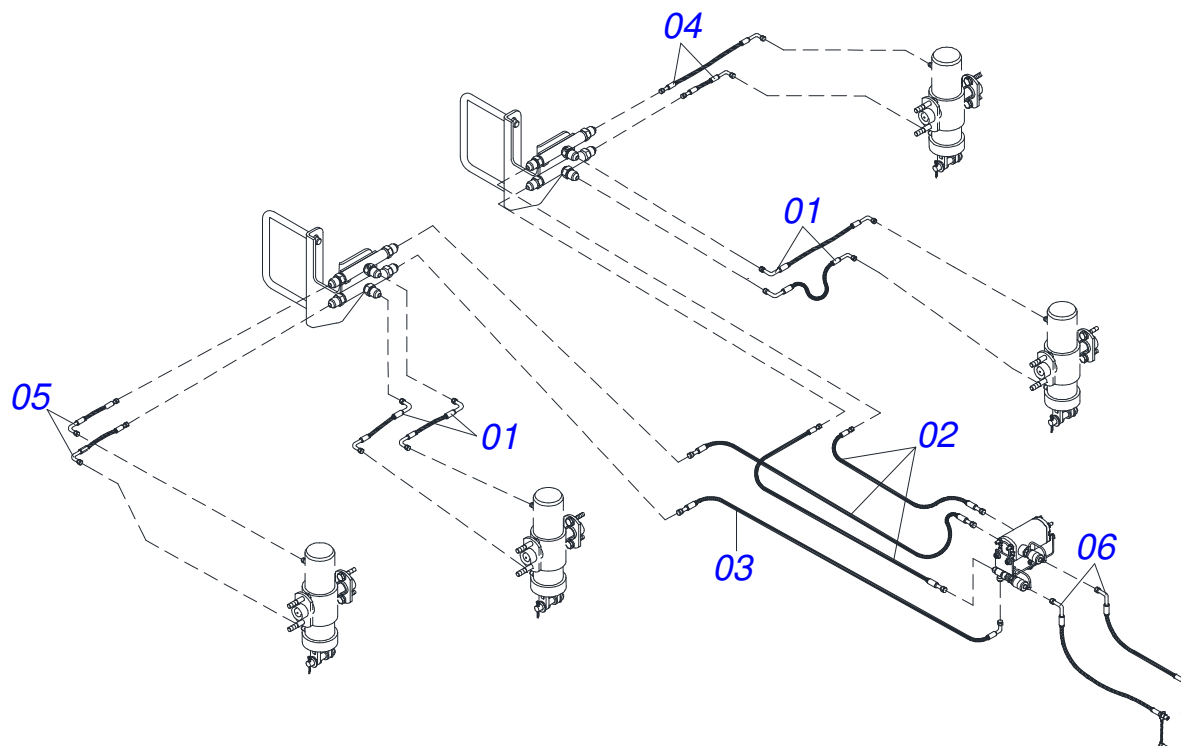


Item	Code	Description	QT
001	0501080760	3/8" X 500 TC-TC HOSE	08
002	0501080599	3/8 X 650 TC-TR HOSE	02
003	0501080328	3/8" X 29" TR-TC HOSE	02
004	0501080352	3/8" X 1400 TR-TR HOSE ASSY	03
005	0501080025	TR-TC HOSE ASSY	01
006	0501081073	1/2" X 4200 TC-TM HOSE	02

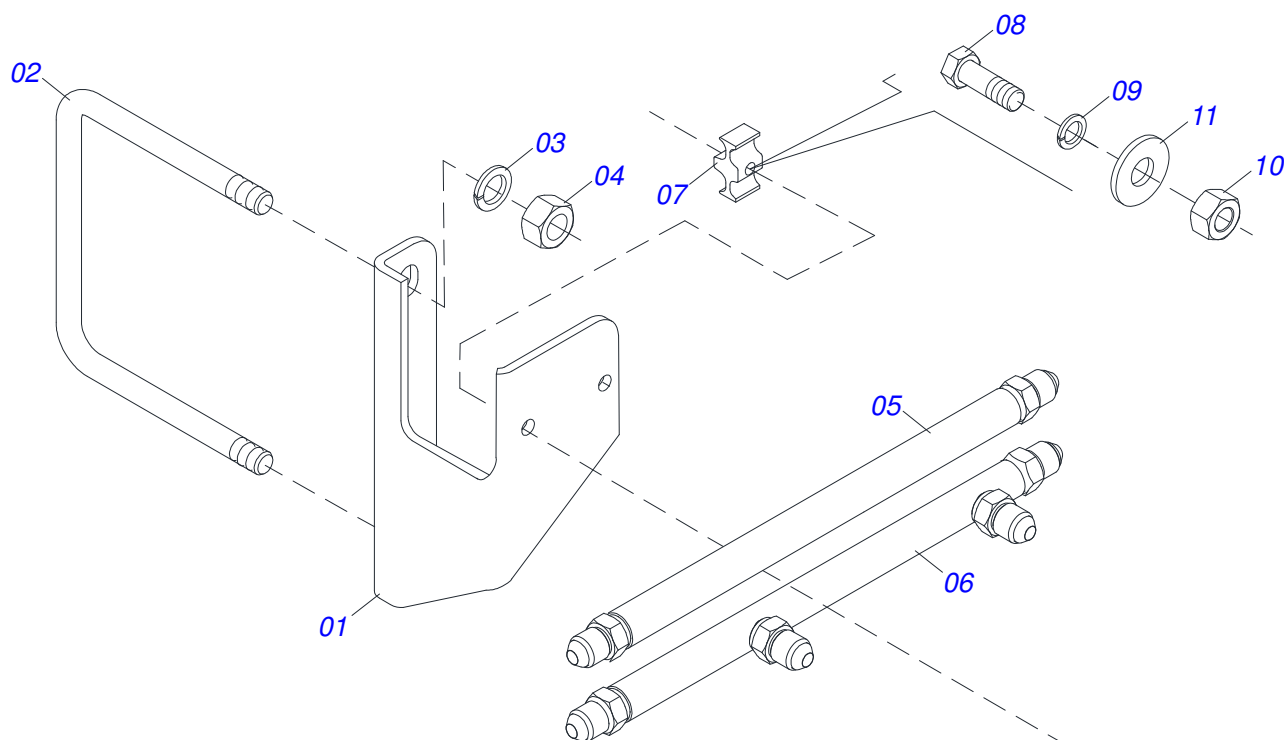


Item	Code	Description	13 L
001	0561017277	OIL CONDUCTOR FIXER PLATE	04
002	0521010718	5/8" U BOLT	04
003	0503010027	SPRING WASHER	08
004	0503010013	5/8" NUT	08
005	0521065261	MH 13/450 OIL CONDUCTOR	04
006	0521064673	OIL CONDUCTOR	04
007	0502012702	BODY SUPPORT CLAMP	10
008	0503011268	3/8" X 2-1/2" BOLT	10
009	0503010025	3/8 SPRING WASHER	10
010	0503010026	3/8" NUT	10
011	0501012140	FLAT WASHER	08

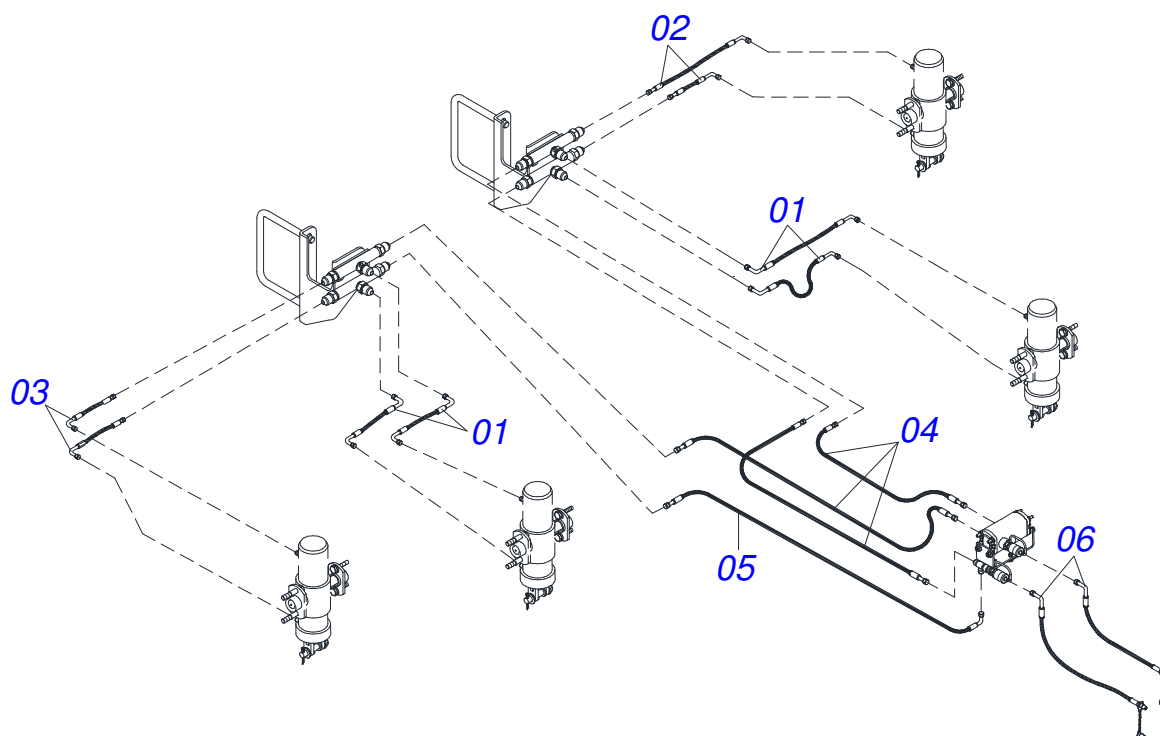


Item	Code	Description	13 L
001	0501080760	3/8" X 500 TC-TC HOSE	08
002	0501080413	3/8" X 27" TR-TC HOSE ASSY	02
003	0501080055	3/8" X 1000 TR-TC HOSE	02
004	0501080352	3/8" X 1400 TR-TR HOSE ASSY	03
005	0501080025	TR-TC HOSE ASSY	01
006	0501081073	1/2" X 4200 TC-TM HOSE	02

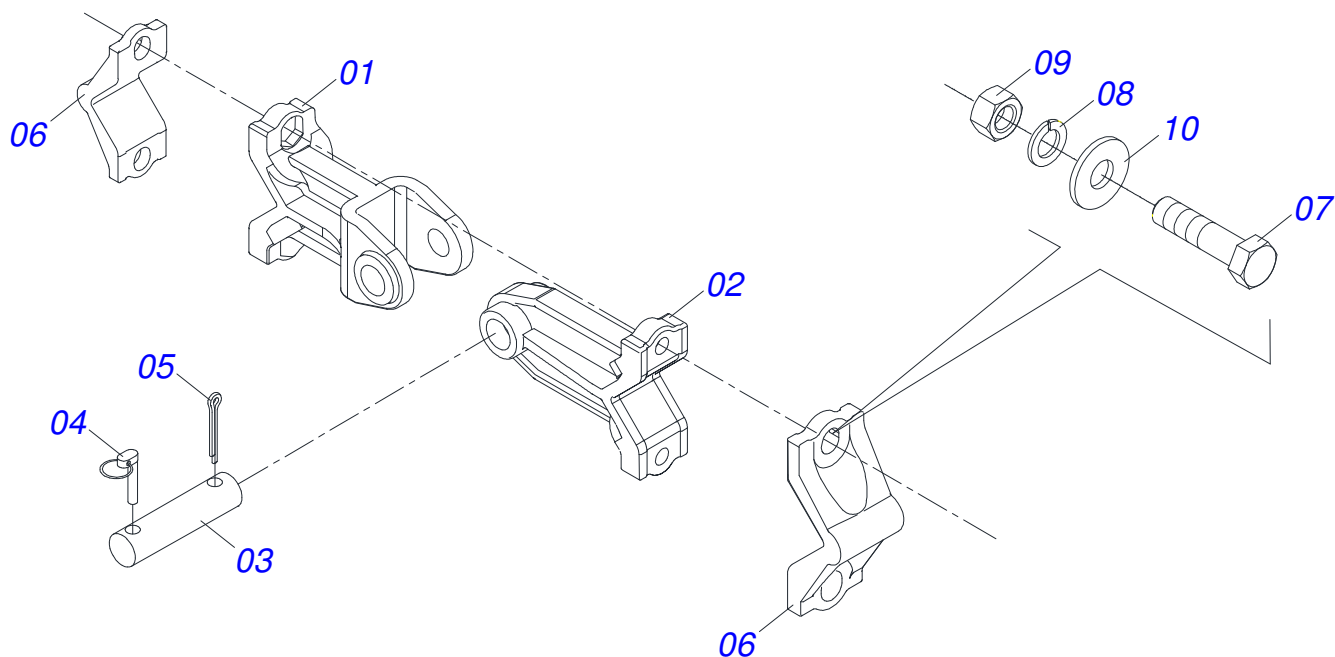

Item	Code	Description	QT
001	0502012328	DRAWBAR SUPPORT FRONT FIXATION	02
002	0502012329	DRAWBAR FIXATION REAR SUPPORT	02
003	0561014393	COUPLING SHAFT	02
004	0503030119	LOCK PIN	02
005	0503010523	1/4" X 2" COTTERPIN	02
006	0502012330	SUPPORT FIXER PIVOT	04
007	0503011084	3/4" X 5" BOLT	08
008	0503010023	SPRING WASHER	04
009	0503010014	3/4" NUT	04
010	0501010322	FLAT WASHER	04

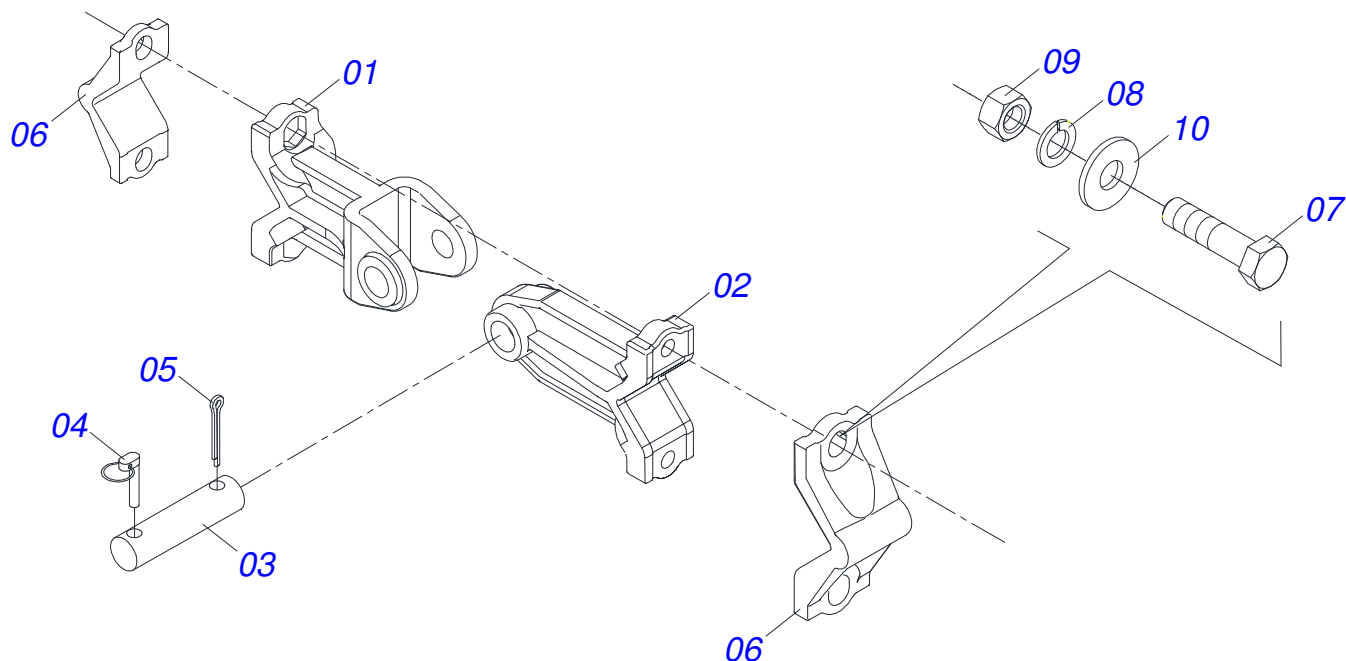


Item	Code	Description	QT
001	0502012328	DRAWBAR SUPPORT FRONT FIXATION	04
002	0502012329	DRAWBAR FIXATION REAR SUPPORT	04
003	0561014393	COUPLING SHAFT	04
004	0503030119	LOCK PIN	04
005	0503010523	1/4" X 2" COTTERPIN	04
006	0502012330	SUPPORT FIXER PIVOT	08
007	0503011084	3/4" X 5" BOLT	16
008	0503010023	SPRING WASHER	08
009	0503010014	3/4" NUT	08
010	0501010322	FLAT WASHER	08

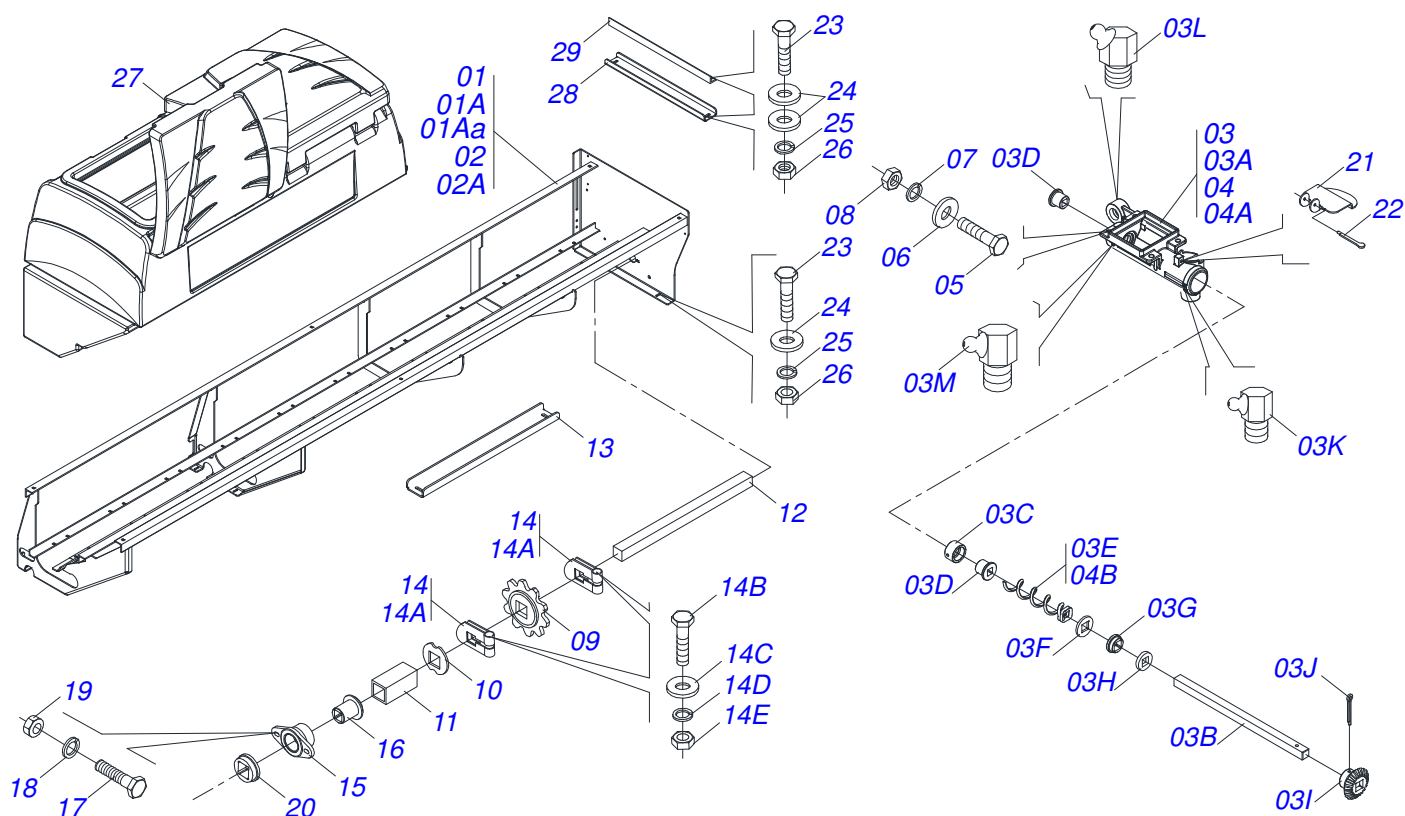


Item	Code	Description	15 L
01	0511053455	SET BOX FERTILIZER	01
01A	0511050641	RH FERTILIZER BOX SUPPORT	01
01Aa	0521062052	RH FERTILIZER SILO SUPORT ASSY	01
02	0511050642	LEFT FERTILIZER BOX SUPPORT	01
02A	0521062051	LH FERTILIZER SILO SUPORT ASSY	01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	08
03A	0501110682	FERTILZER DISTRIBUTOR	08
03B	0501019851	DISTRIBUTOR FERTILIZER AXLE	16
03C	0521010309	SLEEVE INTER	16
03D	0503030275	AGRICULTURAL BEARING	32
03E	0503031164	RIGHT HELICAL CONDUTOR	08
03F	0501010637	FLAT WASHER	16
03G	0503030303	SUPPORT WASHER	16
03H	0501013774	GREASE SEAL	16
03I	0502011412	18Z CONICAL GEAR	16
03J	0503010523	1/4" X 2" COTTERPIN	16
03K	0503011962	GREASE FITTING	16
03L	0503010003	1845 GREASE FITTING	16
03M	0503012826	CREASE FITTING	16
04	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	08
04A	0501110676	SIDE FERTILIZER DISTRIBUTOR	08
04B	0503031165	LEFT HELICAL CONDUTOR	08
05	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	64
06	0501010984	FLAT WASHER	64
07	0503011443	SPRING WASHER	64
08	0503010026	3/8" NUT	64
09	0511061759	22Z P12,70 FQ 3/4" GEAR	02
10	0521014167	CONE LOCK	04
11	0551018055	22,65 X 60 SLEEVE	04
12	0561018585	SQUARE SHAFT	02
13	0571013224	STRINGER FIXING CASH FERTILIZER	04
14	0501053788	Q3/4" FASTENER AXLE ASSY	04
14A	0521010691	AXLE FASTENER	04

Item	Code	Description	15 L
14B	0503010373	1/4" X 2" BOLT	04
14C	0501010694	FLAT WASHER	04
14D	0503010143	SPRING WASHER	04
14E	0503010144	1/4" NUT	04
15	0501110392	SILO SUPPORT BEARING	02
16	0521012485	GEAR BOX BEARING AGRICUTURAL	02
17	0503010363	5/16" X 1" BOLT	04
18	0503011444	SPRING WASHER	04
19	0503010337	5/16" NUT	04
20	0503030303	SUPPORT WASHER	02
21	0571010590	FERTILIZER SIDE COVER	15
22	0503010257	1/8" X 1" COTTERPIN	15
23	0503010849	3/8" X 1-1/2" BOLT	24
24	0501010984	FLAT WASHER	36
25	0503010025	3/8 SPRING WASHER	24
26	0503010026	3/8" NUT	24
27	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS	04
28	0571016020	STRINGER FIXING CASH FERTILIZER	02
29	0571013223	ANGLE BAR	02

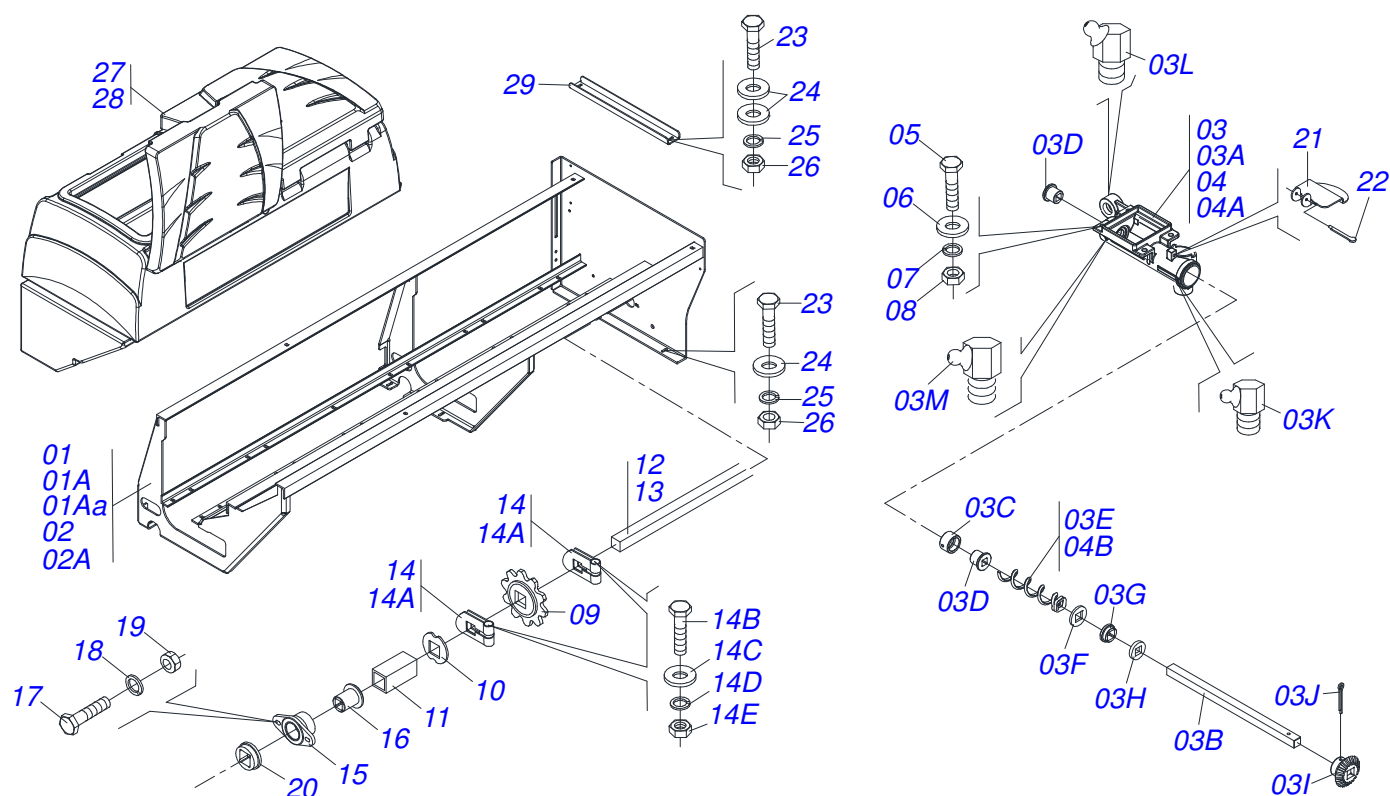


Item	Code	Description	13 L
01	0511053374	SET BOX FERTILIZER COP F 600 13	01
01A	0511050891	BOX SUPPORT RIGHT FERTILIZER	01
01Aa	0521062274	RH FERTILIZER SILO SUPORT ASSY	01
02	0511050892	FERTILIZER LEFT BOX SUPPORT	01
02A	0521062273	LH FERTILIZER SILO SUPORT ASSY	01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	07
03A	0501110682	FERTILIZER DISTRIBUTOR	07
03B	0501019851	DISTRIBUTOR FERTILIZER AXLE	14
03C	0521010309	SLEEVE INTER	14
03D	0503030275	AGRICULTURAL BEARING	28
03E	0503031164	RIGHT HELICAL CONDUTOR	07
03F	0501010637	FLAT WASHER	14
03G	0503030303	SUPPORT WASHER	14
03H	0501013774	GREASE SEAL	14
03I	0502011412	18Z CONICAL GEAR	14
03J	0503010523	1/4" X 2" COTTERPIN	14
03K	0503011962	GREASE FITTING	14
03L	0503010003	1845 GREASE FITTING	14
03M	0503012826	CREASE FITTING	14
04	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	07
04A	0501110676	SIDE FERTILIZER DISTRIBUTOR	07
04B	0503031165	LEFT HELICAL CONDUTOR	07
05	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	56
06	0501010984	FLAT WASHER	56
07	0503011443	SPRING WASHER	56
08	0503010026	3/8" NUT	56
09	0511061759	22Z P12,70 FQ 3/4" GEAR	02
10	0521014167	CONE LOCK	04
11	0551018055	22,65 X 60 SLEEVE	04
12	0561018585	SQUARE SHAFT	01
13	0571013224	STRINGER FIXING CASH FERTILIZER	02
14	0501053788	Q3/4" FASTENER AXLE ASSY	04
14A	0521010691	AXLE FASTENER	04

Item	Code	Description	13 L
14B	0503010373	1/4" X 2" BOLT	04
14C	0501010694	FLAT WASHER	04
14D	0503010143	SPRING WASHER	04
14E	0503010144	1/4" NUT	04
15	0501110392	SILO SUPPORT BEARING	02
16	0521012485	GEAR BOX BEARING AGRICUTURAL	02
17	0503010363	5/16" X 1" BOLT	04
18	0503011444	SPRING WASHER	04
19	0503010337	5/16" NUT	04
20	0503030303	SUPPORT WASHER	02
21	0571010590	FERTILIZER SIDE COVER	14
22	0503010257	1/8" X 1" COTTERPIN	14
23	0503010849	3/8" X 1-1/2" BOLT	16
24	0501010984	FLAT WASHER	24
25	0503010025	3/8 SPRING WASHER	16
26	0503010026	3/8" NUT	16
27	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS	02
28	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS	01
29	0571013223	ANGLE BAR	02

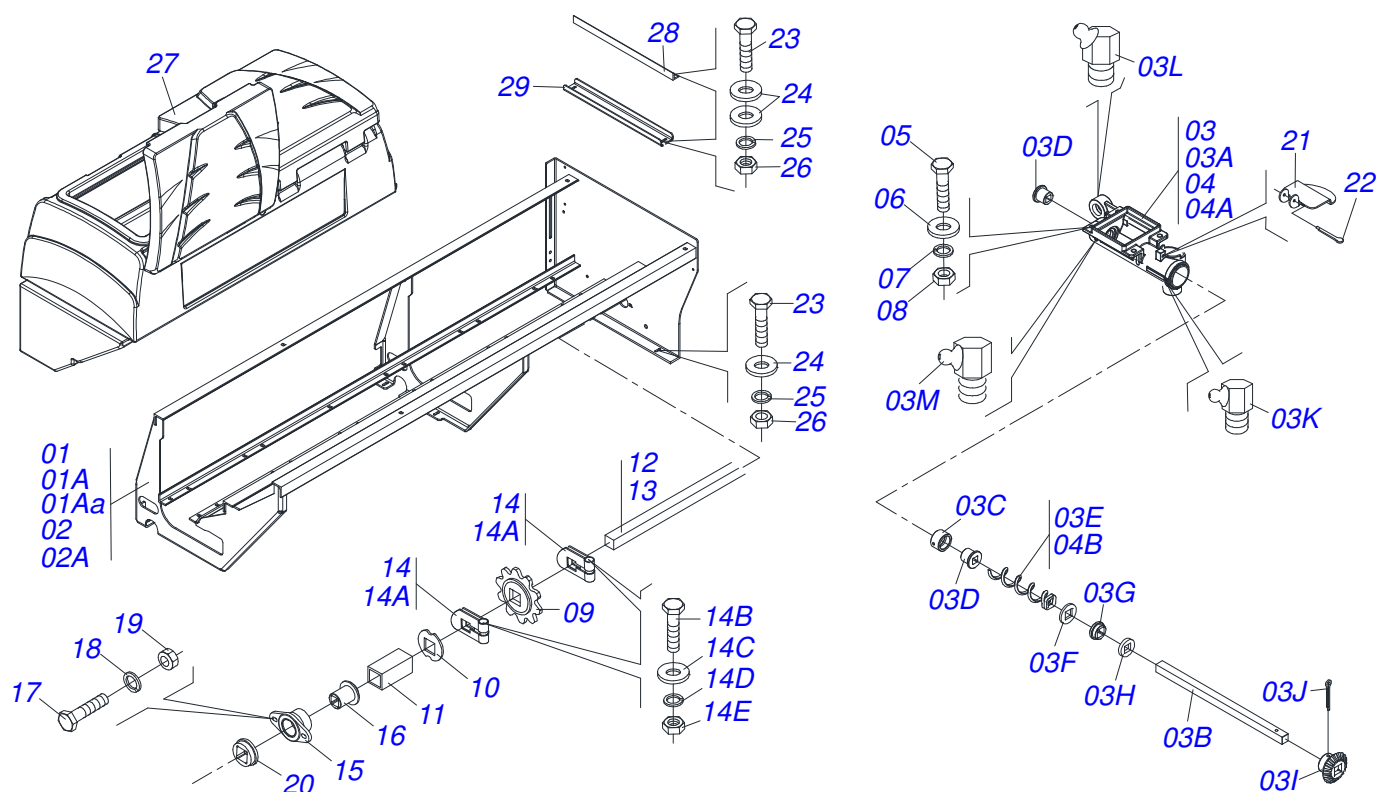


Item	Code	Description	11 L
01	0511053352	SET BOX FERTILIZER	01
01A	0511050392	BOX SUPPORT RIGHT FERTILIZER	01
01Aa	0521061871	RH FERTILIZER SILO SUPORT ASSY	01
02	0511050391	FERTILIZER LEFT BOX SUPPORT	01
02A	0521061872	LH FERTILIZER SILO SUPORT ASSY	01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	06
03A	0501110682	FERTILIZER DISTRIBUTOR	06
03B	0501019851	DISTRIBUTOR FERTILIZER AXLE	12
03C	0521010309	SLEEVE INTER	12
03D	0503030275	AGRICULTURAL BEARING	24
03E	0503031164	RIGHT HELICAL CONDUTOR	06
03F	0501010637	FLAT WASHER	12
03G	0503030303	SUPPORT WASHER	12
03H	0501013774	GREASE SEAL	12
03I	0502011412	18Z CONICAL GEAR	12
03J	0503010523	1/4\" X 2\" COTTERPIN	12
03K	0503011962	GREASE FITTING	12
03L	0503010003	1845 GREASE FITTING	12
03M	0503012826	CREASE FITTING	12
04	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	06
04A	0501110676	SIDE FERTILIZER DISTRIBUTOR	06
04B	0503031165	LEFT HELICAL CONDUTOR	06
05	0503010751	C3/8\" X 1.1/4\" HEX BOLT G.5	48
06	0501010984	FLAT WASHER	48
07	0503011443	SPRING WASHER	48
08	0503010026	3/8\" NUT	48
09	0511061759	22Z P12,70 FQ 3/4\" GEAR	02
10	0521014167	CONE LOCK	04
11	0551018055	22,65 X 60 SLEEVE	04
12	0551018198	SQUARE SHAFT	01
13	0551018198	SQUARE SHAFT	01
14	0501053788	Q3/4\" FASTENER AXLE ASSY	04
14A	0521010691	AXLE FASTENER	04

Item	Code	Description	11 L
14B	0503010373	1/4" X 2" BOLT	04
14C	0501010694	FLAT WASHER	04
14D	0503010143	SPRING WASHER	04
14E	0503010144	1/4" NUT	04
15	0501110392	SILO SUPPORT BEARING	02
16	0521012485	GEAR BOX BEARING AGRICUTURAL	02
17	0503010363	5/16" X 1" BOLT	04
18	0503011444	SPRING WASHER	04
19	0503010337	5/16" NUT	04
20	0503030303	SUPPORT WASHER	02
21	0571010590	FERTILIZER SIDE COVER	12
22	0503010257	1/8" X 1" COTTERPIN	12
23	0503010849	3/8" X 1-1/2" BOLT	20
24	0501010984	FLAT WASHER	28
25	0503010025	3/8 SPRING WASHER	20
26	0503010026	3/8" NUT	20
27	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS	03
28	0571013223	ANGLE BAR	02
29	0571013224	STRINGER FIXING CASH FERTILIZER	02

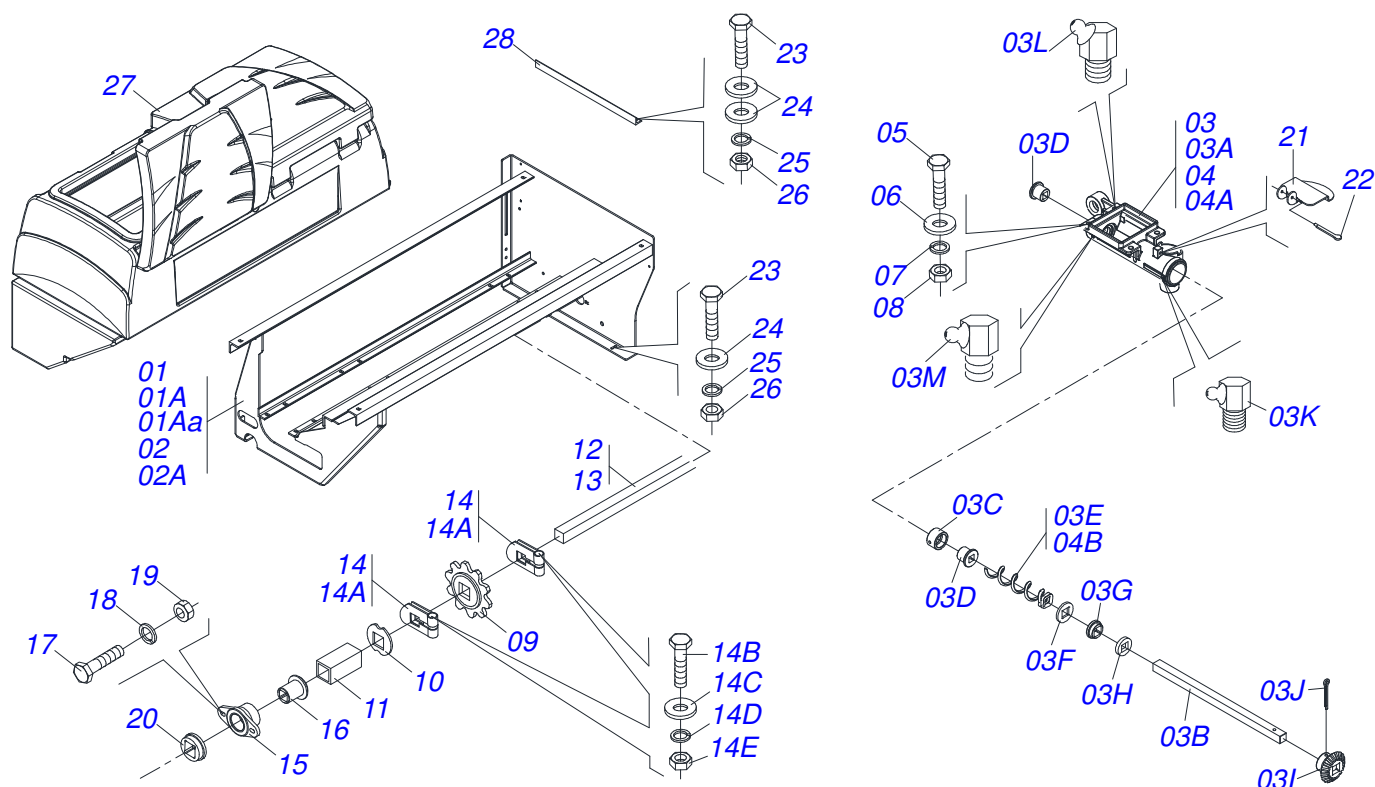


Item	Code	Description	09 L
01	0511053429	SET BOX FERTILIZER	01
01A	0511050936	BOX SUPPORT RIGHT FERTILIZER	01
01Aa	0521062290	RH FERTILIZER SILO SUPORT ASSY	01
02	0511050935	FERTILIZER LEFT BOX SUPPORT	01
02A	0521062291	LH FERTILIZER SILO SUPORT ASSY	01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2 -	05
03A	0501110682	FERTILIZER DISTRIBUTOR	05
03B	0501019851	DISTRIBUTOR FERTILIZER AXLE	10
03C	0521010309	SLEEVE INTER	10
03D	0503030275	AGRICULTURAL BEARING	20
03E	0503031164	RIGHT HELICAL CONDUTOR	10
03F	0501010637	FLAT WASHER	10
03G	0503030303	SUPPORT WASHER	10
03H	0501013774	GREASE SEAL	10
03I	0502011412	18Z CONICAL GEAR	10
03J	0503010523	1/4\" X 2\" COTTERPIN	10
03K	0503011962	GREASE FITTING	10
03L	0503010003	1845 GREASE FITTING	10
03M	0503012826	CREASE FITTING	10
04	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2 -	05
04A	0501110676	SIDE FERTILIZER DISTRIBUTOR	05
04B	0503031165	LEFT HELICAL CONDUTOR	05
05	0503010751	C3/8\" X 1.1/4\" HEX BOLT G.5	40
06	0501010984	FLAT WASHER	40
07	0503011443	SPRING WASHER	40
08	0503010026	3/8\" NUT	40
09	0511061759	22Z P12,70 FQ 3/4\" GEAR	02
10	0521014167	CONE LOCK	04
11	0551018055	22,65 X 60 SLEEVE	04
12	0551018213	3/4\" X 1830 SQUARE SHAFT	01
13	0561018365	SQUARE SHAFT	01
14	0501053788	Q3/4\" FASTENER AXLE ASSY	04
14A	0521010691	AXLE FASTENER	04


Item	Code	Description	09 L
14B	0503010373	1/4" X 2" BOLT	04
14C	0501010694	FLAT WASHER	04
14D	0503010143	SPRING WASHER	04
14E	0503010144	1/4" NUT	04
15	0501110392	SILO SUPPORT BEARING	02
16	0521012485	GEAR BOX BEARING AGRICUTURAL	02
17	0503010363	5/16" X 1" BOLT	04
18	0503011444	SPRING WASHER	04
19	0503010337	5/16" NUT	04
20	0503030303	SUPPORT WASHER	02
21	0571010590	FERTILIZER SIDE COVER	10
22	0503010257	1/8" X 1" COTTERPIN	10
23	0503010849	3/8" X 1-1/2" BOLT	16
24	0501010984	FLAT WASHER	24
25	0503010025	3/8 SPRING WASHER	16
26	0503010026	3/8" NUT	16
27	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS	02
28	0571013223	ANGLE BAR	04

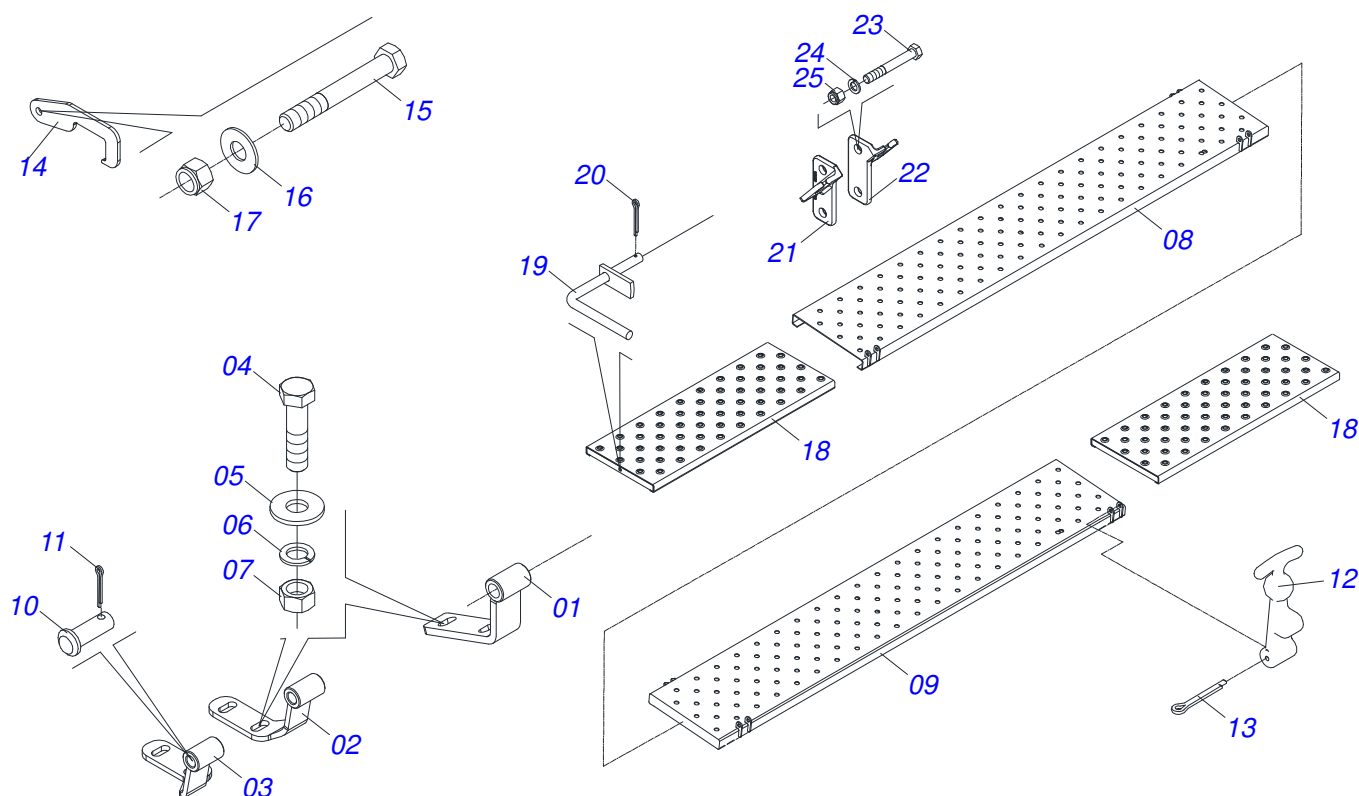


Item	Code	Description	09 L
001	0521061861	PLATFORM FIXER	02
002	0521062061	CENTRAL ARTICULACION	01
003	0521062062	CENTRAL ARTICULACION	01
004	0503010849	3/8" X 1-1/2" BOLT	08
005	0501010984	FLAT WASHER	16
006	0503010025	3/8" SPRING WASHER	08
007	0503010026	3/8" NUT	08
008	0511069665	PLATFORM RIGHT PST4 9	01
009	0521062323	PLATFORM LEFT PST4 9	01
010	0521010549	COUPLING SHAFT	04
011	0503010300	5/32" X 1" COTTERPIN	04
012	0503011333	COVER FIXER	02
013	0503010274	5/32"X 2" COTTERPIN	02
014	0551019115	LOCK	02
015	0501010096	3/8" X 2" BOLT	02
016	0501010984	FLAT WASHER	02
017	0503013357	3/8" SELF-ADJUSTING NUT	02
018	0521061676	PLATFORM PROLONG	02
019	0511069664	PLATFORM EXTENSION LOCK	02
020	0503010257	1/8" X 1" COTTERPIN	02
021	0502012740	PLATFORM RIGHT FIXER SUPPORT	01
022	0502012739	PLATFORM LEFT FIXER SUPPORT	01
023	0503010740	1/2" X 2" BOLT	04
024	0503010019	1/2" SPRING WASHER	04
025	0503010060	1/2" NUT	04

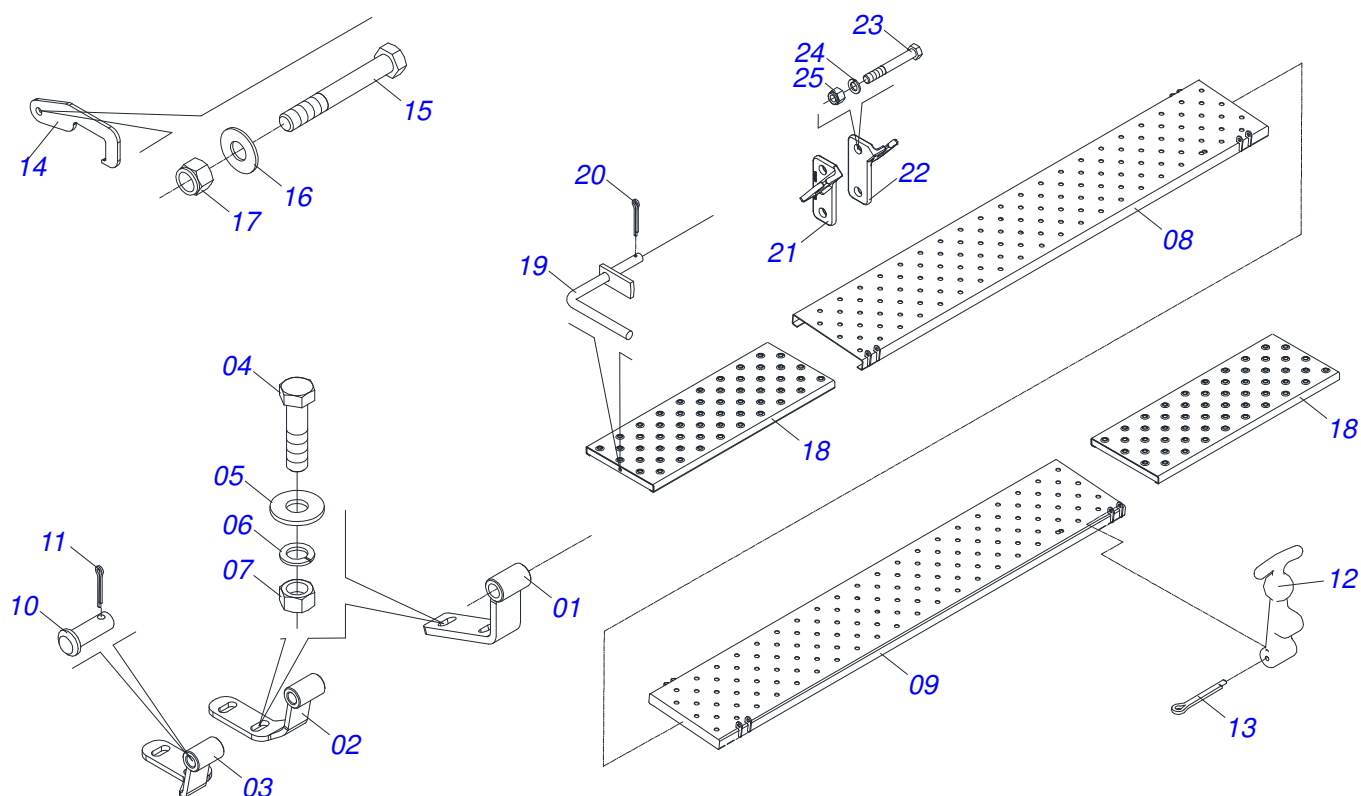


Item	Code	Description	11 L
001	0521061861	PLATFORM FIXER	02
002	0521062061	CENTRAL ARTICULACION	01
003	0521062062	CENTRAL ARTICULACION	01
004	0503010849	3/8" X 1-1/2" BOLT	08
005	0501010984	FLAT WASHER	16
006	0503010025	3/8 SPRING WASHER	08
007	0503010026	3/8" NUT	08
008	0511069718	PLATFORM RIGHT PST4 11	01
009	0521062324	PLATFORM LEFT PST4 11	01
010	0521010549	COUPLING SHAFT	04
011	0503010300	5/32" X 1" COTTERPIN	04
012	0503011333	COVER FIXER	02
013	0503010274	5/32"X 2" COTTERPIN	02
014	0551019115	LOCK	02
015	0501010096	3/8" X 2" BOLT	02
016	0501010984	FLAT WASHER	02
017	0503013357	3/8" SELF-ADJUSTING NUT	02
018	0521061676	PLATFORM PROLONG	02
019	0511069664	PLATFORM EXTENSION LOCK	02
020	0503010257	1/8" X 1" COTTERPIN	02
021	0502012740	PLATFORM RIGHT FIXER SUPPORT	01
022	0502012739	PLATFORM LEFT FIXER SUPPORT	01
023	0503014007	1/2" X 1-1/4" BOLT	04
024	0503010019	1/2" SPRING WASHER	04
025	0503010060	1/2" NUT	04

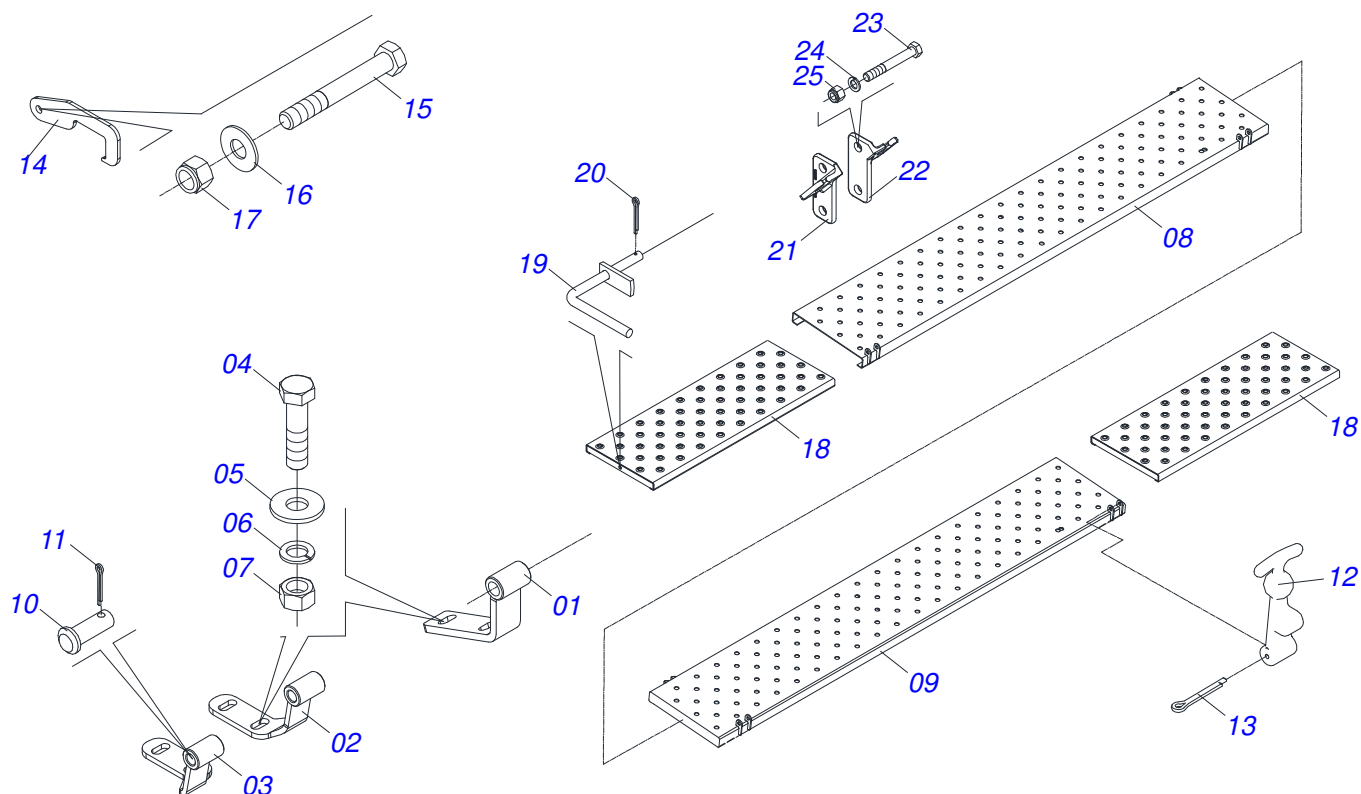


Item	Code	Description	13 L
001	0521061861	PLATFORM FIXER	02
002	0521062061	CENTRAL ARTICULACION	01
003	0521062062	CENTRAL ARTICULACION	01
004	0503010849	3/8" X 1-1/2" BOLT	08
005	0501010984	FLAT WASHER	16
006	0503010025	3/8 SPRING WASHER	08
007	0503010026	3/8" NUT	08
008	0521062091	PLATFORM LEFT COP FLEX 13	01
009	0521062092	PLATFORM RIGHT COP FLEX 13	01
010	0521010549	COUPLING SHAFT	04
011	0503010300	5/32" X 1" COTTERPIN	04
012	0503011333	COVER FIXER	02
013	0503010274	5/32"X 2" COTTERPIN	02
014	0551019115	LOCK	02
015	0501010096	3/8" X 2" BOLT	02
016	0501010984	FLAT WASHER	02
017	0503013357	3/8" SELF-ADJUSTING NUT	02
018	0521061676	PLATFORM PROLONG	02
019	0511069664	PLATFORM EXTENSION LOCK	02
020	0503010257	1/8" X 1" COTTERPIN	02
021	0502012740	PLATFORM RIGHT FIXER SUPPORT	01
022	0502012739	PLATFORM LEFT FIXER SUPPORT	01
023	0503010740	1/2" X 2" BOLT	04
024	0503010019	1/2" SPRING WASHER	04
025	0503010060	1/2" NUT	04

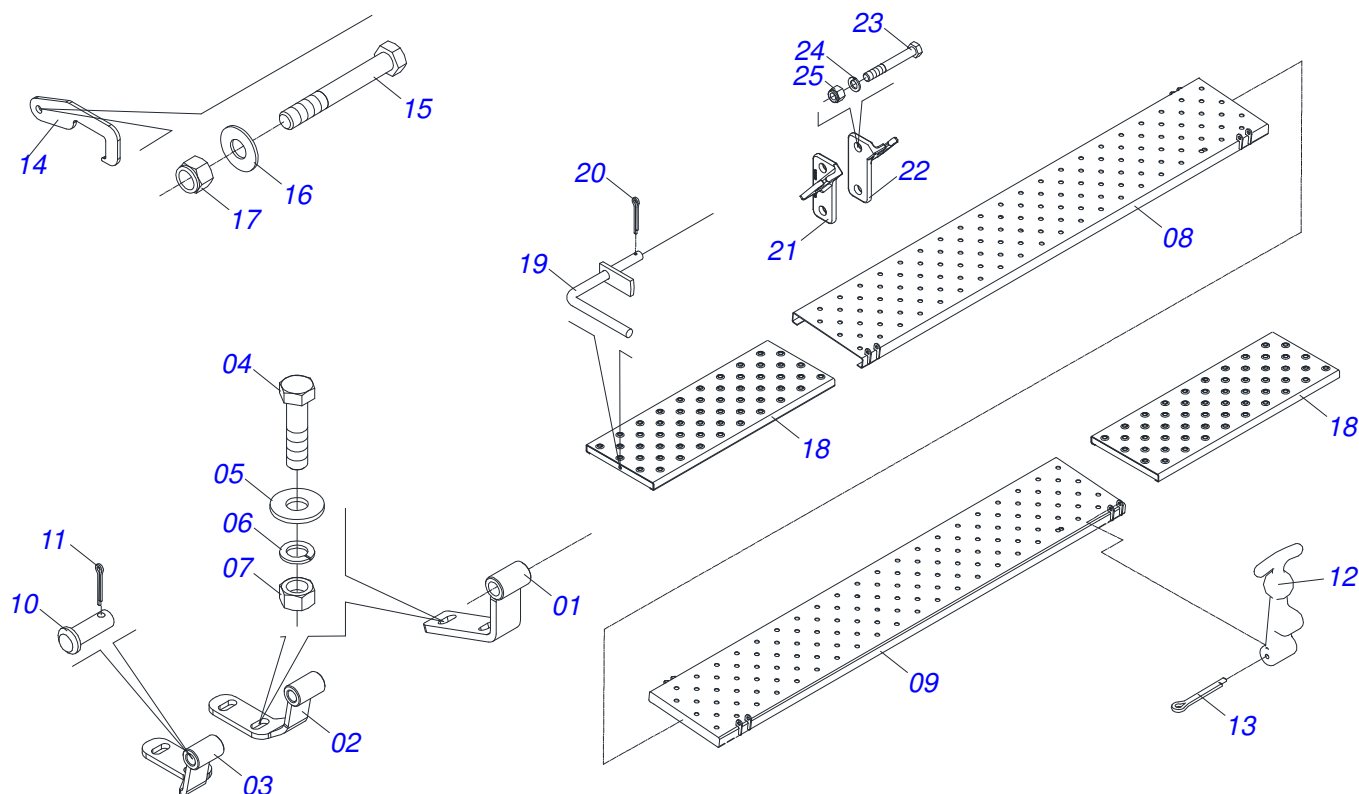


Item	Code	Description	15 L
001	0521061861	PLATFORM FIXER	02
002	0521062061	CENTRAL ARTICULACION	01
003	0521062062	CENTRAL ARTICULACION	01
004	0503010849	3/8" X 1-1/2" BOLT	08
005	0501010984	FLAT WASHER	16
006	0503010025	3/8 SPRING WASHER	08
007	0503010026	3/8" NUT	08
008	0521062059	LEFT PLATFORM COP FLEX 15	01
009	0521062058	RIGHT PLATFORM COP FLEX 15	01
010	0521010549	COUPLING SHAFT	04
011	0503010300	5/32" X 1" COTTERPIN	04
012	0503011333	COVER FIXER	02
013	0503010274	5/32"X 2" COTTERPIN	02
014	0551019115	LOCK	02
015	0501010096	3/8" X 2" BOLT	02
016	0501010984	FLAT WASHER	02
017	0503013357	3/8" SELF-ADJUSTING NUT	02
018	0521061676	PLATFORM PROLONG	02
019	0511069664	PLATFORM EXTENSION LOCK	02
020	0503010257	1/8" X 1" COTTERPIN	02
021	0502012740	PLATFORM RIGHT FIXER SUPPORT	01
022	0502012739	PLATFORM LEFT FIXER SUPPORT	01
023	0503010740	1/2" X 2" BOLT	04
024	0503010019	1/2" SPRING WASHER	04
025	0503010060	1/2" NUT	04

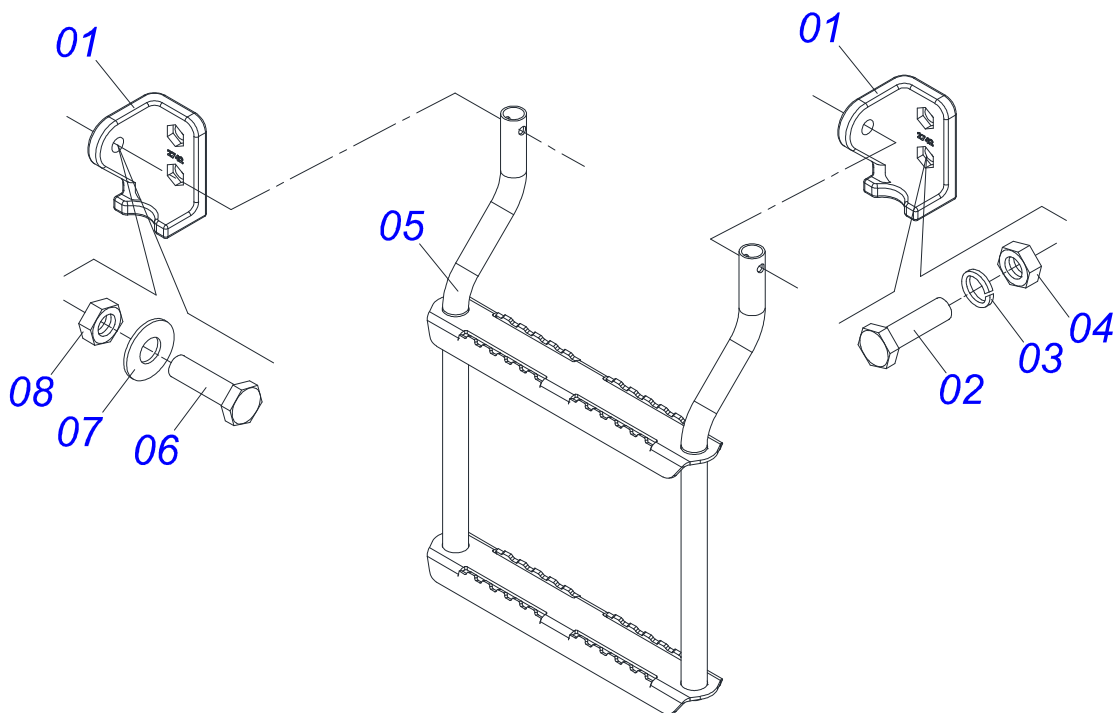


Item	Code	Description	07A19 L
001	0502012742	FIXER SUPPORT LADDER	04
002	0503010237	3/8" X 1" BOLT	08
003	0503010025	3/8 SPRING WASHER	08
004	0503010026	3/8" NUT	08
005	0511069636	LADDER	02
006	0503011179	3/8" X 2-1/4" BOLT	04
007	0501010984	FLAT WASHER	04
008	0503013357	3/8" SELF-ADJUSTING NUT	04

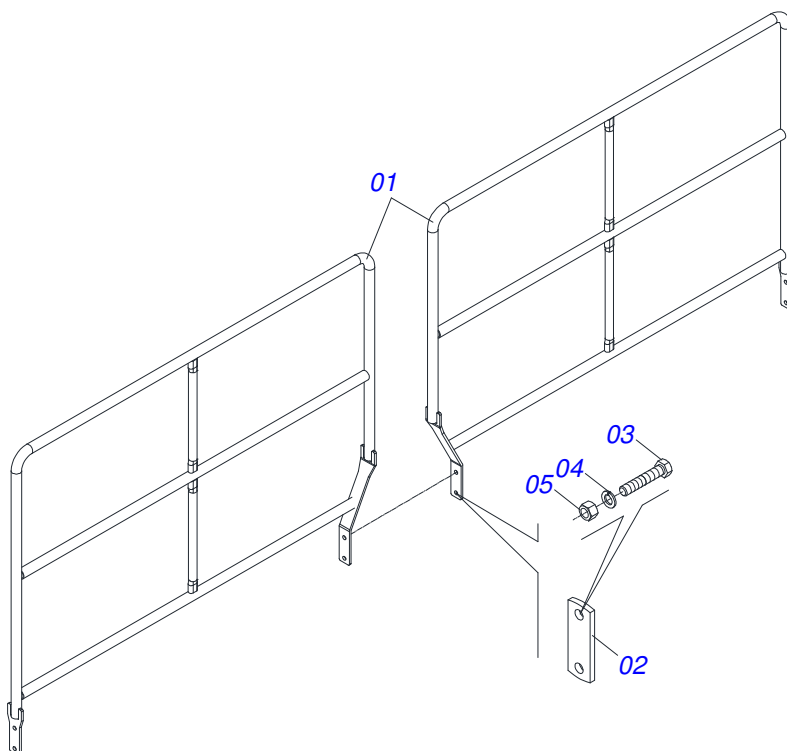


Item	Code	Description	09 L
001	0511069656	HANDRAIL COP FLEX 600 9	02
002	0521018290	RANDRAIL HOLDER	02
003	0503010395	1/2" X 1-1/4" BOLT	04
004	0503010019	1/2" SPRING WASHER	04
005	0503010060	1/2" NUT	04

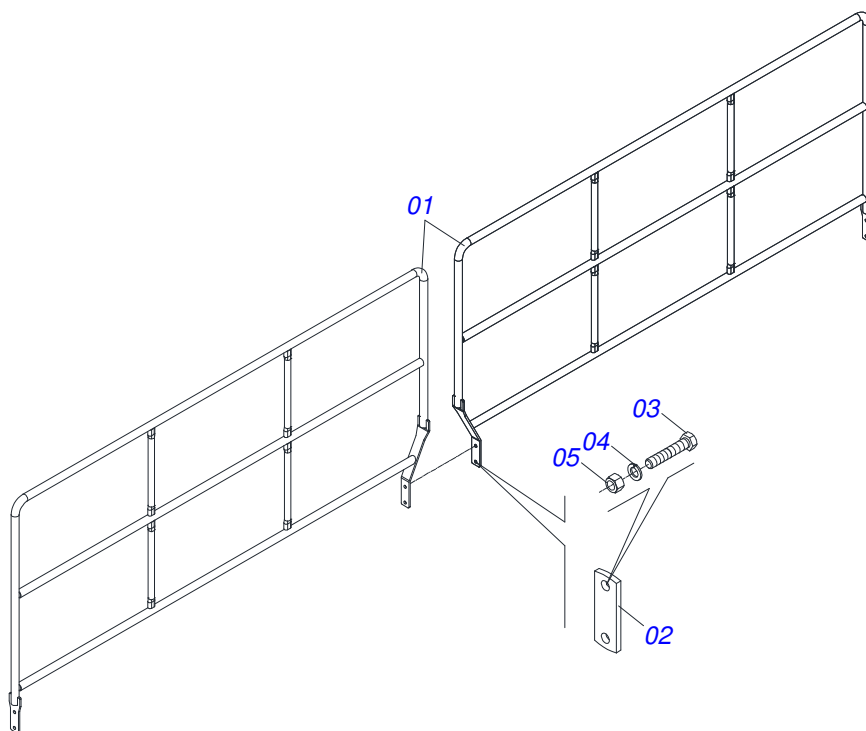

Item	Code	Description	11 L
001	0511069660	HANDRAIL COP FLEX 600 11	02
002	0521018290	RANDRAIL HOLDER	02
003	0503010395	1/2" X 1-1/4" BOLT	04
004	0503010019	1/2" SPRING WASHER	04
005	0503010060	1/2" NUT	04

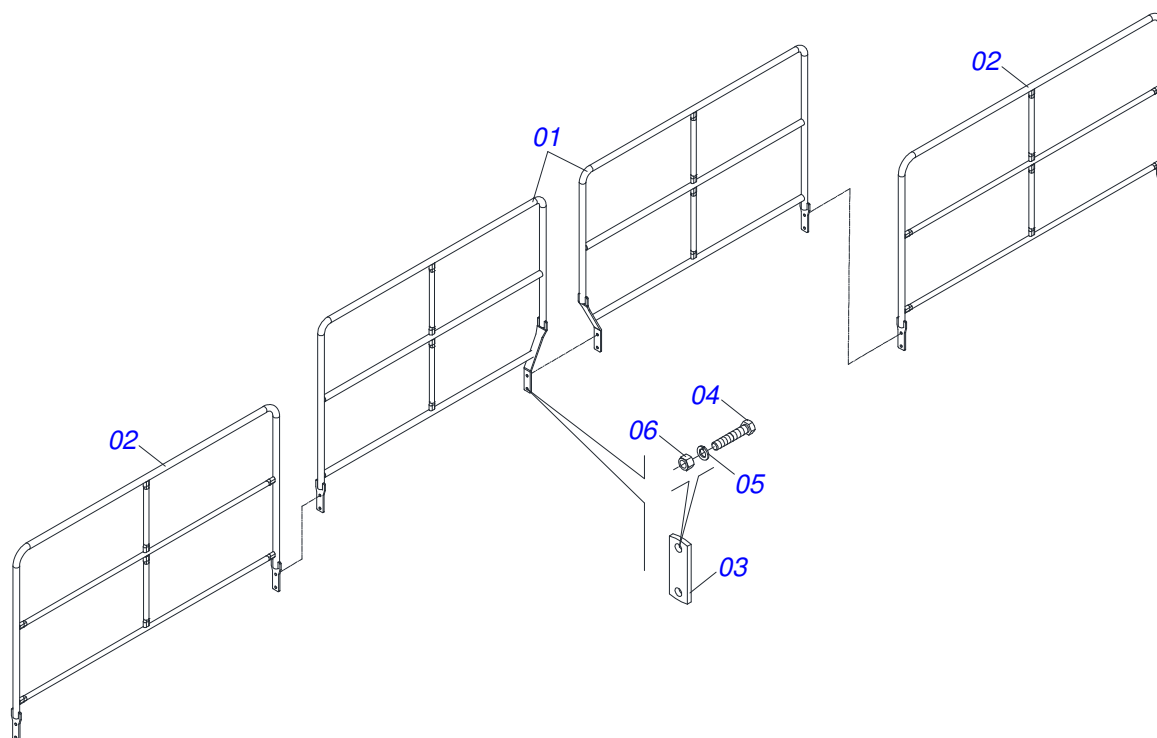


Item	Code	Description	15 L
001	0521064080	CENTRAL CHAIN	02
002	0521064101	SIDE CHAIN (1850)	02
003	0521018290	RANDRAIL HOLDER	06
004	0503010395	1/2" X 1-1/4" BOLT	08
005	0503010019	1/2" SPRING WASHER	08
006	0503010060	1/2" NUT	08

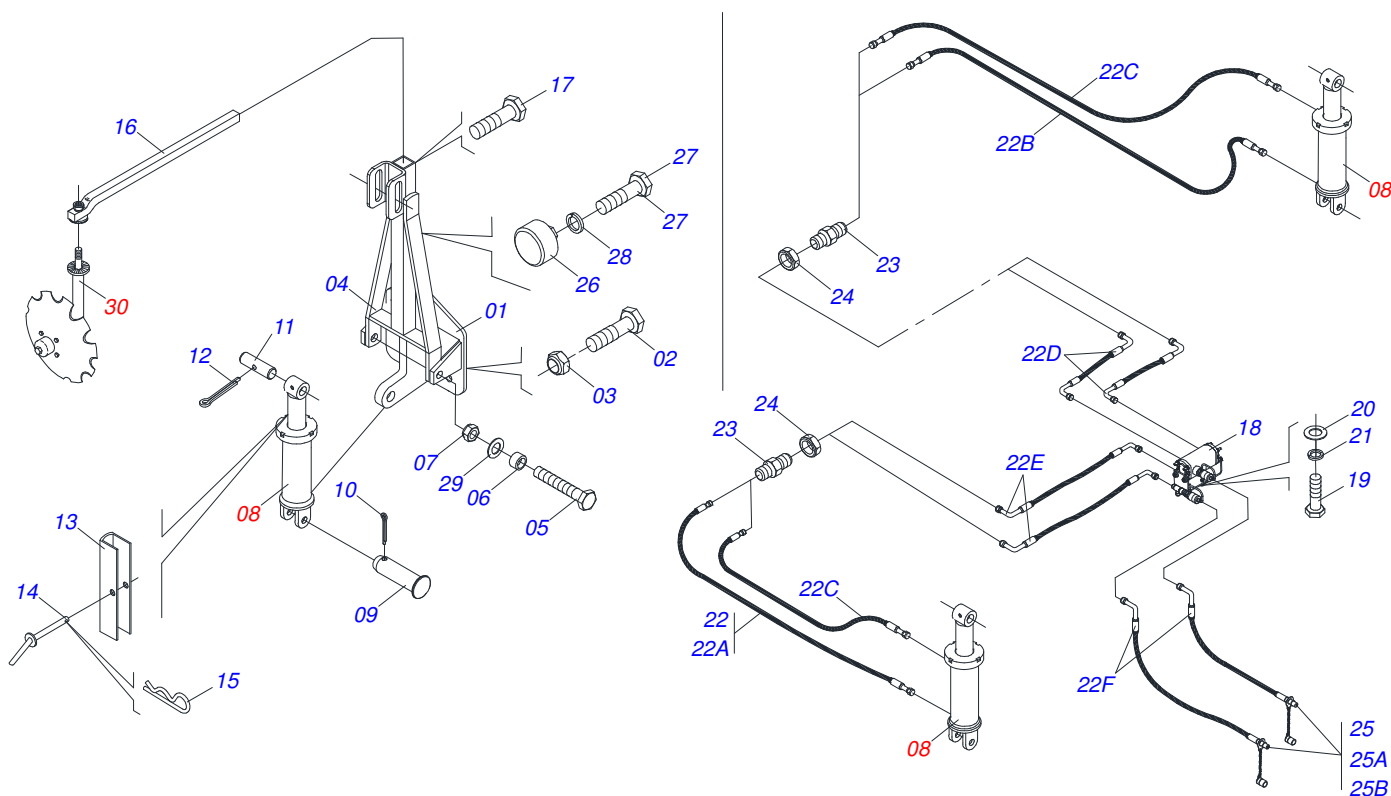

Item	Code	Description	11 L
001	0511065449	ROW MARKER ARM SUPPORT	02
002	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	08
003	0503011255	3/4" LOCK NUT	08
004	0501069470	ROW MARKER ARM	02
005	0503011067	5/8" X 2-1/2" BOLT	04
006	0521010479	SLEEVE ARTICULATION	04
007	0503012795	5/8" HEX SELF ADJUSTING NUT	04
008	0511058449	HYDRAULIC CYLINDER	02
009	0521010575	C0.9" X 3.3" COUPLING SHAFT	02
010	0503010571	1/4" X 1.1/2 COTTERPIN	02
011	0511015779	1" X 4.2" AXLE	02
012	0503010523	1/4" X 2" COTTERPIN	02
013	0511017592	11.8" X 1.6" TRANSPORT LOCK	02
014	0501068994	0.3" X 3.1" LOCK PIN	02
015	0503030168	HAIR PIN	02
016	0501069643	890 TURNBUCKLE	02
017	0503010962	5/8" X 1-1/4" BOLT	04
018	0501054649	SEQUENTIAL VALVE ASSY	01
019	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02
020	0501010984	FLAT WASHER	02
021	0503010025	3/8 SPRING WASHER	02
022	0511057082	HOSE KIT SYSTEM HYDRAULIC	01
022A	0501080635	3/8" X 19" TR-TR HOSE	02
022B	0501080124	3/8" X 35.4" TR-TC HOSE ASSY	04
022C	0501080105	TR-TR HOSE ASSY	02
022D	0501080675	3/8" X 165" TC-TM HOSE ASSY	02
022E	0501080301	HOSE 3/8 X 1300 TC-TC USAP	02
022F	0501080878	3/8 X 4200 TC-TM HOSE ASSY	02
023	0541012165	3/4" NIPPLE	04
024	0511018387	3/4" X 0.3 ADJUSTMENT VALVE NUT	04
025	0501053834	QUICK CONECTION (MALE) 1/2	02
026	0503011070	BEATER	02
027	0503010740	1/2" X 2" BOLT	02


Item	Code	Description	11 L
028	0503010019	1/2" SPRING WASHER	02
029	0501012140	FLAT WASHER	04
030	0501050633	DISC ASSY FOR ROW MARKER	01

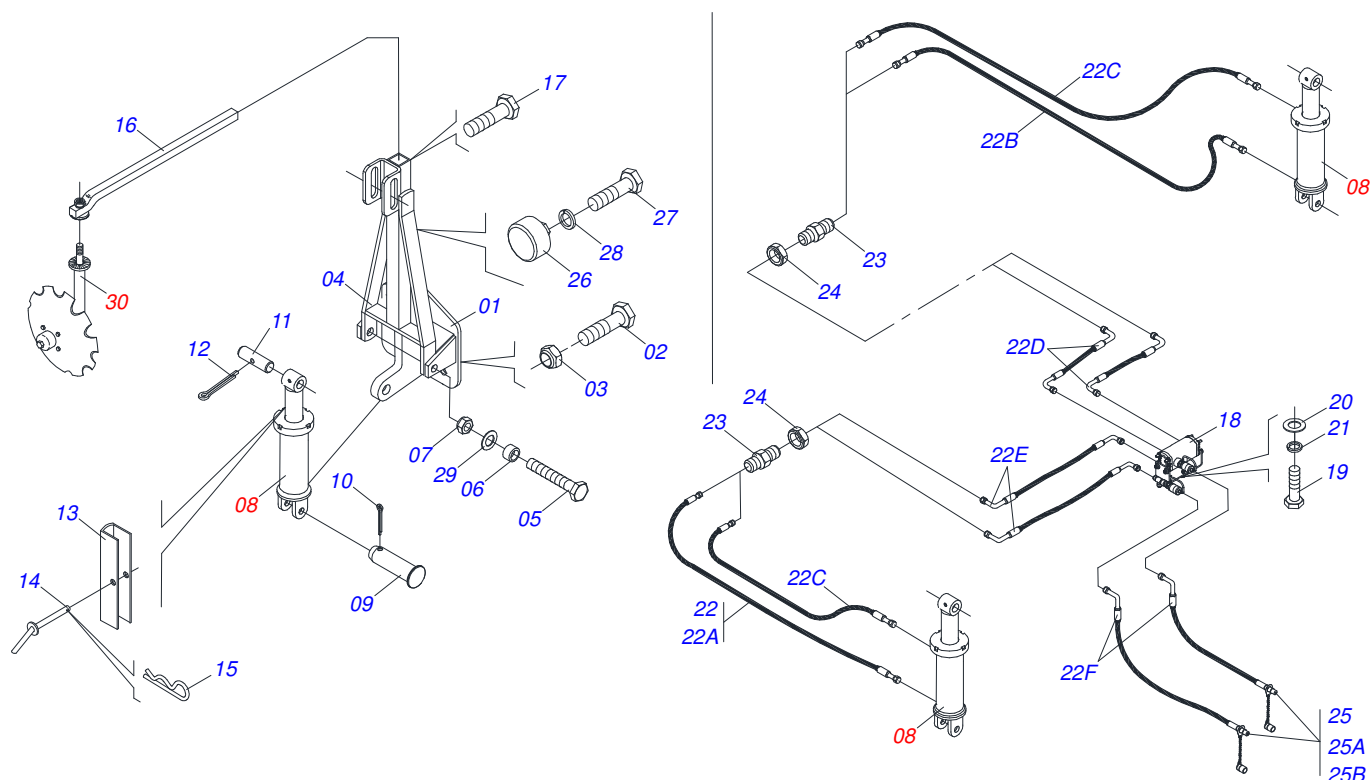

Item	Code	Description	09 L
001	0511065449	ROW MARKER ARM SUPPORT	02
002	0501018059	3/4" X 2-1/4" BOLT	08
003	0503011255	3/4" LOCK NUT	08
004	0501069470	ROW MARKER ARM	02
005	0503011067	5/8" X 2-1/2" BOLT	04
006	0521010479	SLEEVE ARTICULATION	04
007	0503012795	5/8" HEX SELF ADJUSTING NUT	04
008	0511058449	HYDRAULIC CYLINDER	02
009	0521010575	C0.9" X 3.3" COUPLING SHAFT	02
010	0503010571	1/4" X 1.1/2 COTTERPIN	02
011	0511015779	1" X 4.2" AXLE	02
012	0503010523	1/4" X 2" COTTERPIN	02
013	0511017592	11.8" X 1.6" TRANSPORT LOCK	02
014	0501068994	0.3" X 3.1" LOCK PIN	02
015	0503030168	HAIR PIN	02
016	0501069643	890 TURNBUCKLE	02
017	0503010962	5/8" X 1-1/4" BOLT	04
018	0501054649	SEQUENTIAL VALVE ASSY	01
019	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02
020	0501010984	FLAT WASHER	02
021	0503010025	3/8 SPRING WASHER	02
022	0511057082	HOSE KIT SYSTEM HYDRAULIC	01
022A	0501080635	3/8" X 19" TR-TR HOSE	02
022B	0501080124	3/8" X 35.4" TR-TC HOSE ASSY	04
022C	0501080105	TR-TR HOSE ASSY	02
022D	0501080675	3/8" X 165" TC-TM HOSE ASSY	02
022E	0501080301	HOSE 3/8 X 1300 TC-TC USAP	02
022F	0501080878	3/8 X 4200 TC-TM HOSE ASSY	02
023	0541012165	3/4" NIPPLE	04
024	0511018387	3/4" X 0.3 ADJUSTMENT VALVE NUT	04
025	0501053834	QUICK CONECTION (MALE) 1/2	02
025A	0503011627	QUICK CONNECTION (MALE) AGR 1/2 NPT	01
025B	0503011882	QUICK CONNECTION COVER	01




Item	Code	Description	09 L
026	0503011070	BEATER	02
027	0503010740	1/2" X 2" BOLT	02
028	0503010019	1/2" SPRING WASHER	02
029	0501012140	FLAT WASHER	04
030	0501050633	DISC ASSY FOR ROW MARKER	01

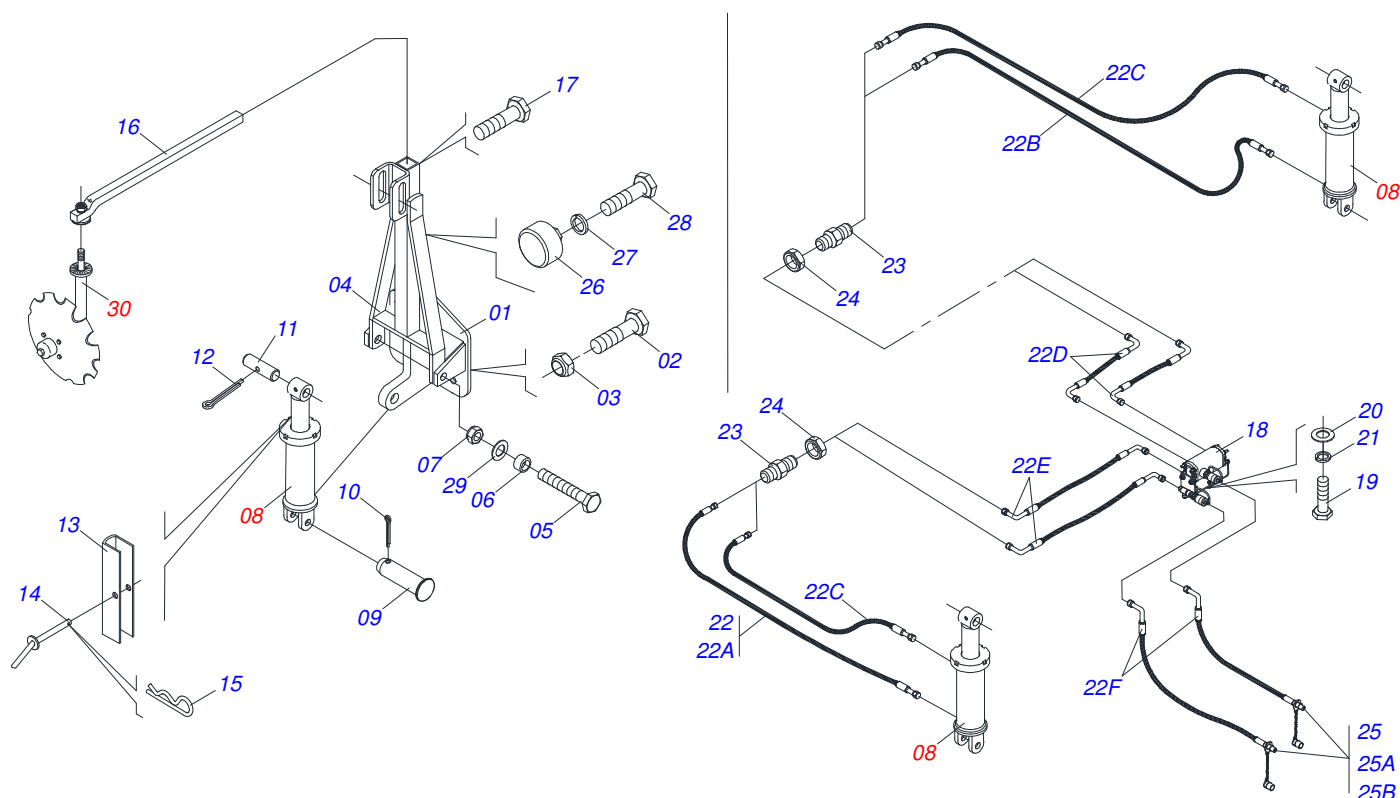

Item	Code	Description	13 L
001	0511065449	ROW MARKER ARM SUPPORT	02
002	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	08
003	0503011255	3/4" LOCK NUT	08
004	0511061811	ROW MARKER ARM	02
005	0503011067	5/8" X 2-1/2" BOLT	04
006	0521010479	SLEEVE ARTICULATION	04
007	0503012795	5/8" HEX SELF ADJUSTING NUT	04
008	0511058449	HYDRAULIC CYLINDER	02
009	0521010575	C0.9" X 3.3" COUPLING SHAFT	02
010	0503010571	1/4" X 1.1/2 COTTERPIN	02
011	0511015779	1" X 4.2" AXLE	02
012	0503010523	1/4" X 2" COTTERPIN	02
013	0511017592	11.8" X 1.6" TRANSPORT LOCK	02
014	0501068994	0.3" X 3.1" LOCK PIN	02
015	0503030168	HAIR PIN	02
016	0501066949	1235 TURNBUCKLE	02
017	0503010962	5/8" X 1-1/4" BOLT	04
018	0501054649	SEQUENTIAL VALVE ASSY	01
019	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02
020	0501010984	FLAT WASHER	02
021	0503010025	3/8 SPRING WASHER	02
022	0511057082	HOSE KIT SYSTEM HYDRAULIC	01
022A	0501080635	3/8" X 19" TR-TR HOSE	02
022B	0501080124	3/8" X 35.4" TR-TC HOSE ASSY	04
022C	0501080105	TR-TR HOSE ASSY	02
022D	0501080675	3/8" X 165" TC-TM HOSE ASSY	02
022E	0501080301	HOSE 3/8 X 1300 TC-TC USAP	02
022F	0501080878	3/8 X 4200 TC-TM HOSE ASSY	02
023	0541012165	3/4" NIPPLE	04
024	0511018387	3/4" X 0.3 ADJUSTMENT VALVE NUT	04
025	0501053834	QUICK CONECTION (MALE) 1/2	02
025A	0503011627	QUICK CONNECTION (MALE) AGR 1/2 NPT	01
025B	0503011882	QUICK CONNECTION COVER	01


Item	Code	Description	13 L
026	0503011070	BEATER	02
027	0503010019	1/2" SPRING WASHER	02
028	0503010740	1/2" X 2" BOLT	02
029	0501012140	FLAT WASHER	04
030	0501050633	DISC ASSY FOR ROW MARKER	01

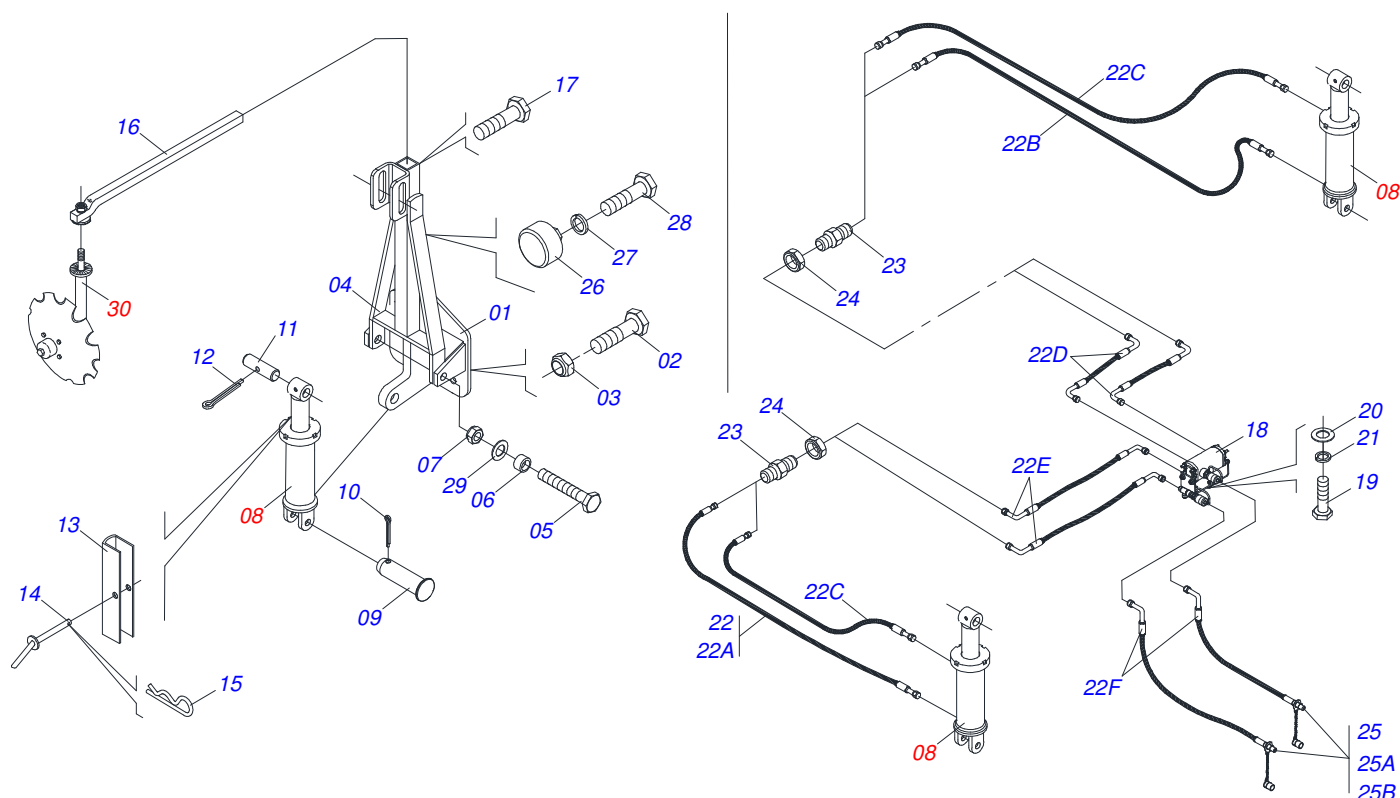


Item	Code	Description	15 L
001	0511065449	ROW MARKER ARM SUPPORT	02
002	0501010098	HEX BOLT 3/4 UNC X 2 C S G.5 ZN	08
003	0503011255	3/4" LOCK NUT	08
004	0511061811	ROW MARKER ARM	02
005	0503011067	5/8" X 2-1/2" BOLT	04
006	0521010479	SLEEVE ARTICULATION	04
007	0503012795	5/8" HEX SELF ADJUSTING NUT	04
008	0511058449	HYDRAULIC CYLINDER	02
009	0521010575	C0.9" X 3.3" COUPLING SHAFT	02
010	0503010571	1/4" X 1.1/2 COTTERPIN	02
011	0511015779	1" X 4.2" AXLE	02
012	0503010523	1/4" X 2" COTTERPIN	02
013	0511017592	11.8" X 1.6" TRANSPORT LOCK	02
014	0501068994	0.3" X 3.1" LOCK PIN	02
015	0503030168	HAIR PIN	02
016	0501066949	1235 TURNBUCKLE	02
017	0503010962	5/8" X 1-1/4" BOLT	04
018	0501054649	SEQUENTIAL VALVE ASSY	01
019	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02
020	0501010984	FLAT WASHER	02
021	0503010025	3/8 SPRING WASHER	02
022	0511057082	HOSE KIT SYSTEM HYDRAULIC	01
022A	0501080635	3/8" X 19" TR-TR HOSE	02
022B	0501080124	3/8" X 35.4" TR-TC HOSE ASSY	04
022C	0501080105	TR-TR HOSE ASSY	02
022D	0501080675	3/8" X 165" TC-TM HOSE ASSY	02
022E	0501080301	HOSE 3/8 X 1300 TC-TC USAP	02
022F	0501080878	3/8 X 4200 TC-TM HOSE ASSY	02
023	0541012165	3/4" NIPPLE	04
024	0511018387	3/4" X 0.3 ADJUSTMENT VALVE NUT	04
025	0501053834	QUICK CONECTION (MALE) 1/2	02
025A	0503011627	QUICK CONNECTION (MALE) AGR 1/2 NPT	01
025B	0503011882	QUICK CONNECTION COVER	01




Item	Code	Description	15 L
026	0503011070	BEATER	02
027	0503010019	1/2" SPRING WASHER	02
028	0503010740	1/2" X 2" BOLT	02
029	0501012140	FLAT WASHER	04
030	0501050633	DISC ASSY FOR ROW MARKER	02

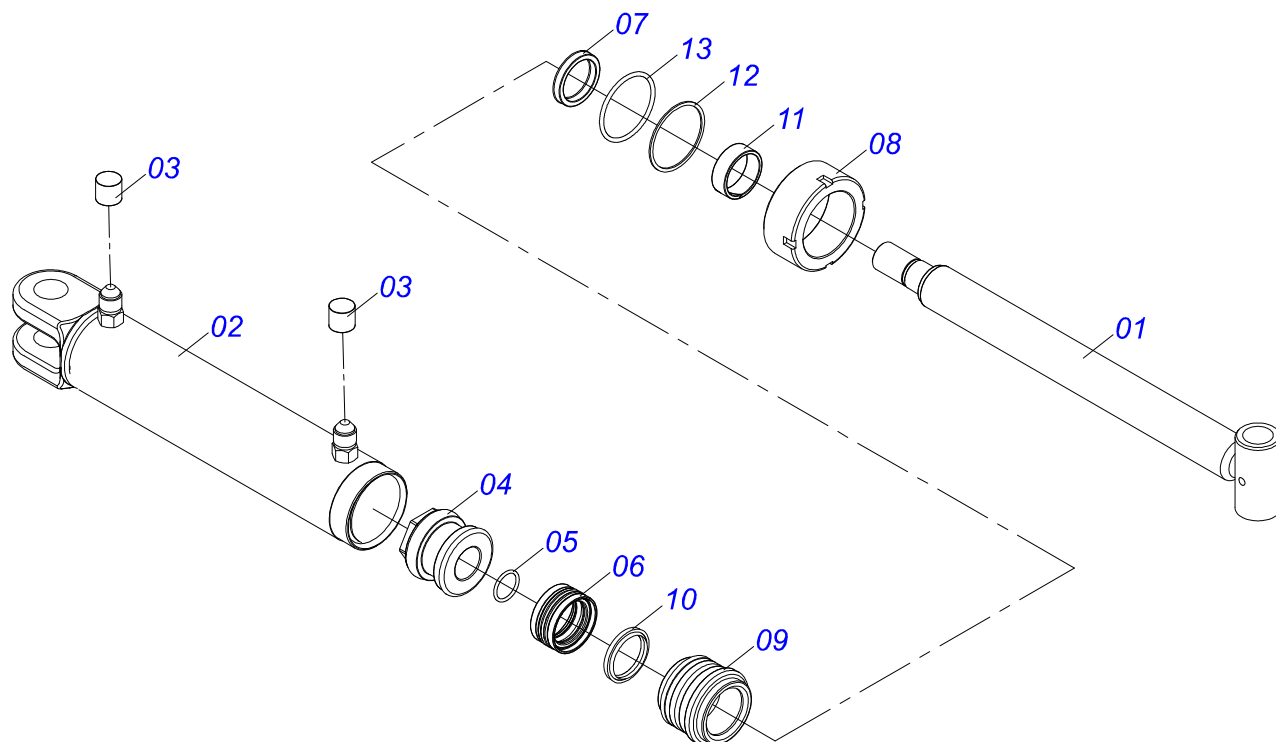


Item	Code	Description	QT
01	0521066635	TURNBUCKLE	01
02	0511062810	2.5" X 15"CYLINDER CASE	01
03	0503030385	PLUG	02
04	0502012837	PISTON	01
05	0503011109	2-119 N 3006-9B O'RING	01
06	0503018005	RING	01
07	0503018003	GASKET	01
08	0502010471	MOBILE COVER	01
09	0581010668	RING SUPPORT	01
10	0503010163	D-1500 SCRAPER RING	01
11	0503018004	RING	01
12	0503018163	BACK-UP RING	02
13	0503018162	O'RING	02

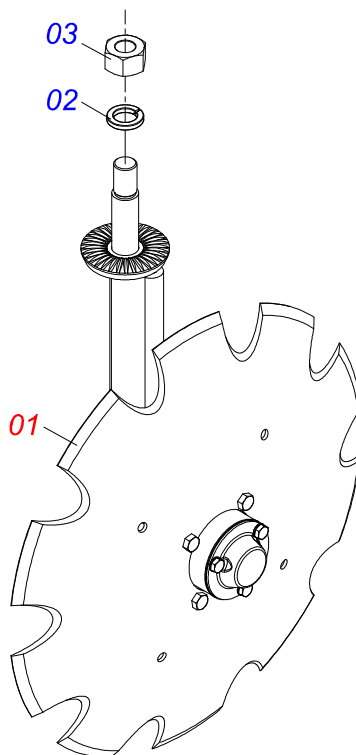

Item	Code	Description	QT
01	0511053904	ROW MARKER DISC	01
02	0503010023	SPRING WASHER	01
03	0503010014	3/4" NUT	01

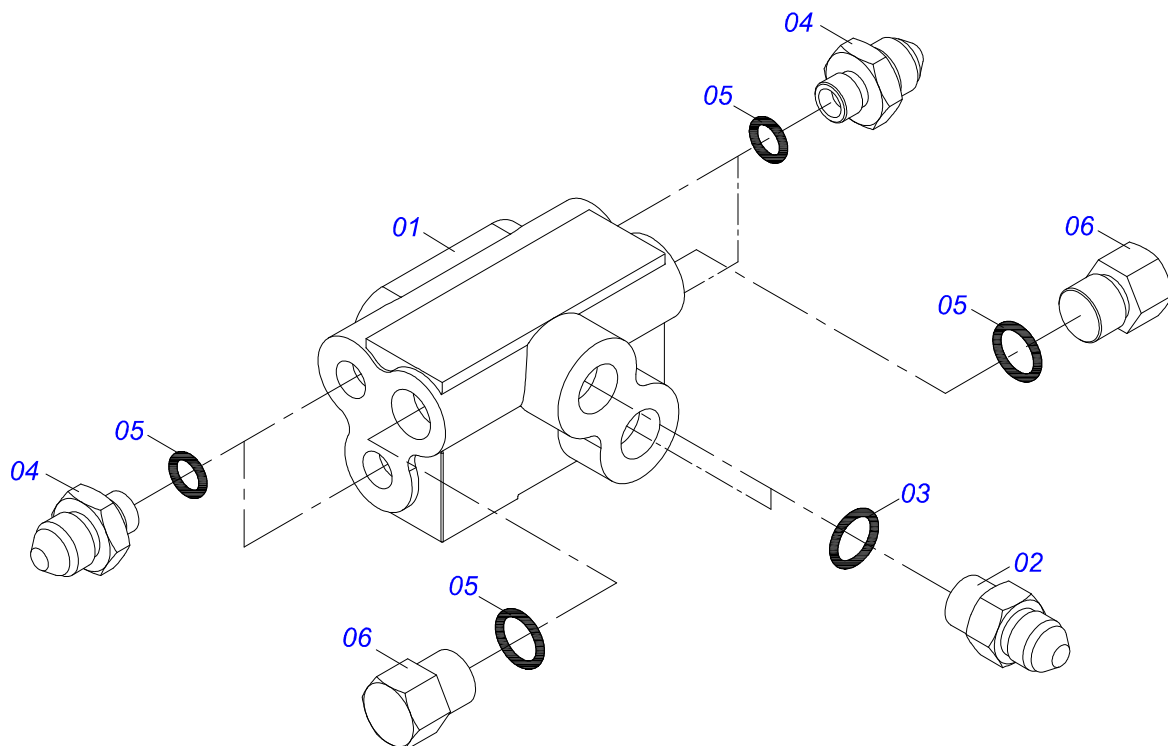

Item	Code	Description	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE	01
02	0501010617	3/4" NIPPLE	02
03	0503010190	2-114 N 3006-9B O'RING	02
04	0501012109	3/4" X 9/16" NIPPLE	04
05	0503011036	2-111 N 3006-9B O'RING	06
06	0531019339	9/16" UNF X 12 PUMP	02

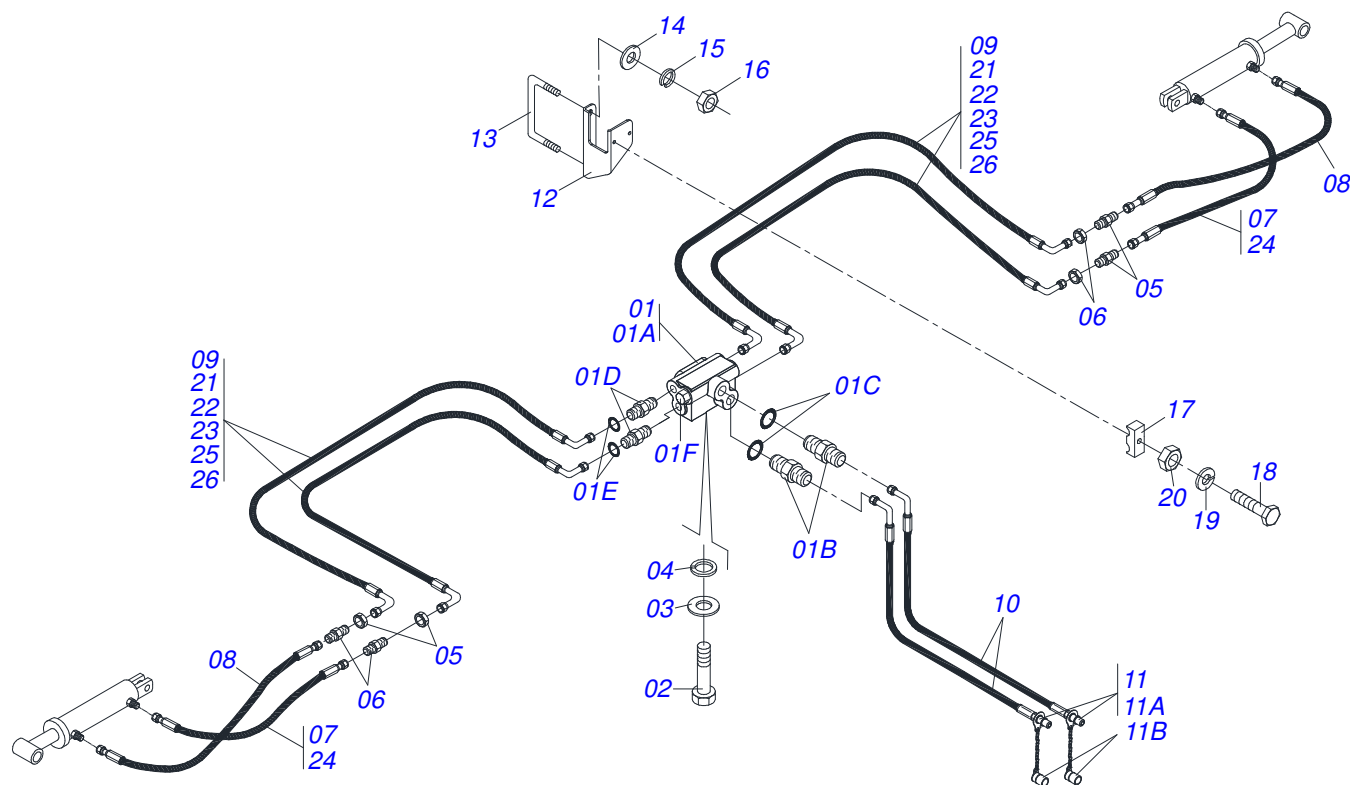


Item	Code	Description	07 09 10 11 13 15 L
01	0501054649	SEQUENTIAL VALVE ASSY	01 01 01 01 01 01
01A	0503060132	VDFS-002 T SEQUENCAL VALVE	01 01 01 01 01 01
01B	0501010617	3/4" NIPPLE	02 02 02 02 02 02
01C	0503010190	2-114 N 3006-9B O'RING	02 02 02 02 02 02
01D	0501012109	3/4" X 9/16" NIPPLE	04 04 04 04 04 04
01E	0503011036	2-111 N 3006-9B O'RING	06 06 06 06 06 06
01F	0531019339	9/16" UNF X 12 PUMP	02 02 02 02 02 02
02	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02 02 02 02 02 02
03	0501010984	FLAT WASHER	02 02 02 02 02 02
04	0503010025	3/8 SPRING WASHER	02 02 02 02 02 02
05	0541012165	3/4" NIPPLE	04 04 04 04 04 04
06	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	04 04 04 04 04 04
07	0501080635	3/8" X 19" TR-TR HOSE	02 02 02 02 02 02
08	0501080105	TR-TR HOSE ASSY	02 02 02 02 02 02
09	0501080750	3/8" X 149" TC-TC HOSE ASSY	00 04 00 00 00 00
10	0501080878	3/8 X 4200 TC-TM HOSE ASSY	02 02 02 02 02 02
11	0501053834	QUICK CONECTION (MALE) 1/2	02 02 02 02 02 02
11A	0503011627	QUICK CONNECTION (MALE) AGR 1/2 NPT	02 02 02 02 02 02
11B	0503011882	QUICK CONNECTION COVER	02 02 02 02 02 02
12	0561017277	OIL CONDUCTOR FIXER PLATE	02 02 02 02 02 02
13	0521010718	5/8" U BOLT	02 02 02 02 02 02
14	0501012140	FLAT WASHER	04 04 04 04 04 04
15	0503010027	SPRING WASHER	04 04 04 04 04 04
16	0503010013	5/8" NUT	04 04 04 04 04 04
17	0502012702	BODY SUPPORT CLAMP	04 04 04 04 04 04
18	0503011103	7/16" X 2-1/2" BOLT	04 04 04 04 04 04
19	0503010180	7/16" SPRING WASHER	04 04 04 04 04 04
20	0503010244	7/16" NUT	04 04 04 04 04 04
21	0501081646	TC-TC HOSE ASSY	04 00 00 00 00 00
22	0501081644	HOSE 3/8 X 3350 TC-TC USAP	00 04 00 00 00 00
23	0501080750	3/8" X 149" TC-TC HOSE ASSY	00 00 04 00 00 00
24	0501081639	HOSE	00 00 00 04 00 00
25	0501080611	3/8" X 17.8" TR-TR HOSE ASSY	00 00 00 00 04 00




COP FLEX 600 SUP PP AFRICA
CIRCUIT MARKER HIDRAULICO

Page 50
0909094617


Item	Code	Description	07 09 10 11 13 15 L
26	0501080753	3/8" X 185" TC-TC HOSE ASSY	00 00 00 00 00 04

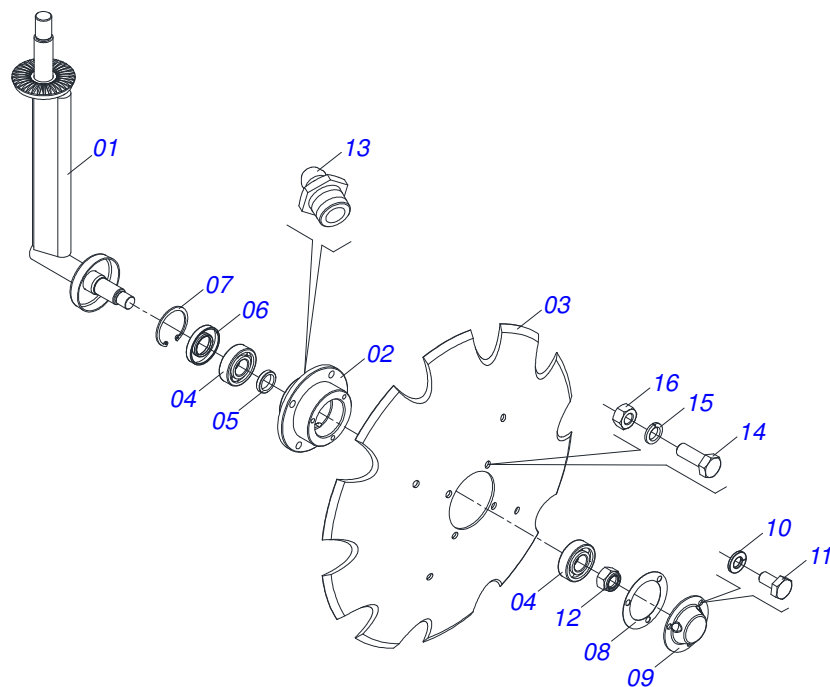


Item	Code	Description	QT
01	0501066800	ROW MARKER DISC AXLE ASSY	01
02	0502011907	DEPTH CONTROL WHEEL HUB	01
03	0602023110	DR16X3 NOTCHED DISC BLADE	01
04	0503010269	6204 BALL BEARING	02
05	0501013636	SPACING SLEEVE	01
06	0503010689	SEAL 00763-BR	01
07	0503011105	SEAL RING	01
08	0503030757	2.9" X 2" X 0.02" JOINT	01
09	0521019178	COVER DEPTH	01
10	0503011441	SPRING WASHER	03
11	0503014729	1/4" UNF X 1/2" BOLT	03
12	0503010878	5/8" SELF ALIGNING NUT	01
13	0503010691	1/4" GREASE FITTING	01
14	0503010358	5/16" X 5/8" BOLT	04
15	0503011444	SPRING WASHER	04
16	0503010337	5/16" NUT	04

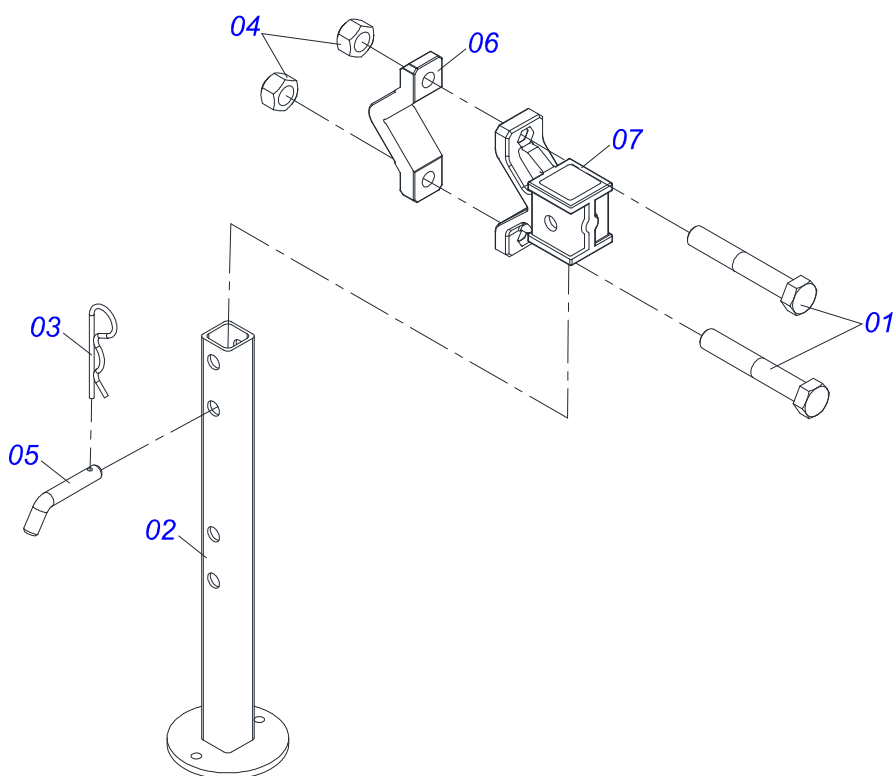


Item	Code	Description	QT
001	0501011543	5/8" X 4" BOLT	02
002	0511061835	PLOUGH SUPPORT	01
003	0503030012	HAIR PIN	01
004	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
005	0501011075	PIN	01
006	0502010175	HITCH CLAMP	01
007	0502011530	SUPPORT	01

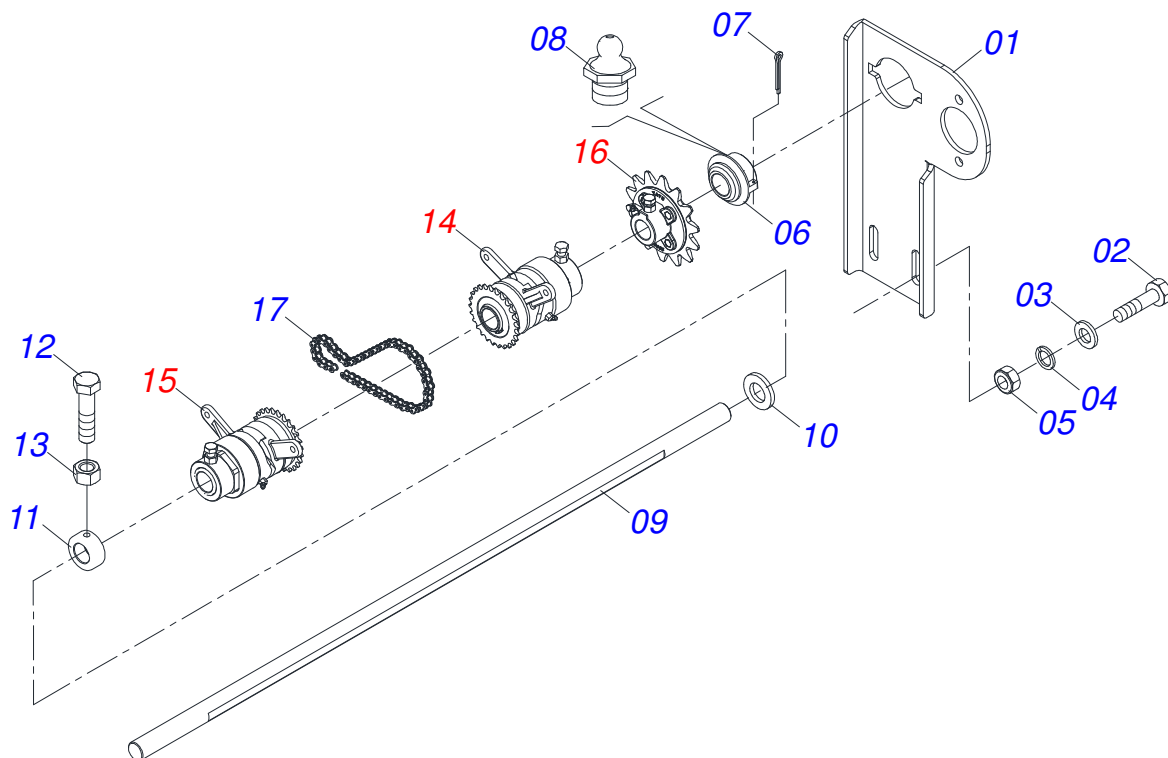


Item	Code	Description	11 L
001	0561017269	MOTOR AXLE BEARING SUPPORT	04
002	0503011082	C1/2" X 1.3/4" BOLT	08
003	0511017302	FLAT WASHER	16
004	0503010019	1/2" SPRING WASHER	08
005	0503010060	1/2" NUT	08
006	0501110639	AGRIC BEARING	08
007	0503010300	5/32" X 1" COTTERPIN	08
008	0503011099	GREASE FITTING	08
009	0561016876	MOTOR SHAFT	02
010	0501018466	FLAT WASHER	04
011	0511015961	LOCK BUSHING	04
012	0503030679	1/2" X 1-1/4" BOLT	04
013	0503010060	1/2" NUT	04
014	0511047069	SIDE TRANSMISSION DRIVING	01
015	0511047070	LH SIDE TRANSMISSION DRIVING	01
016	0511051434	TRANSMISSION DRIVING ASSY	04
017	0503012958	2050 CHAIN X 42 LINK + REDUCTION	04

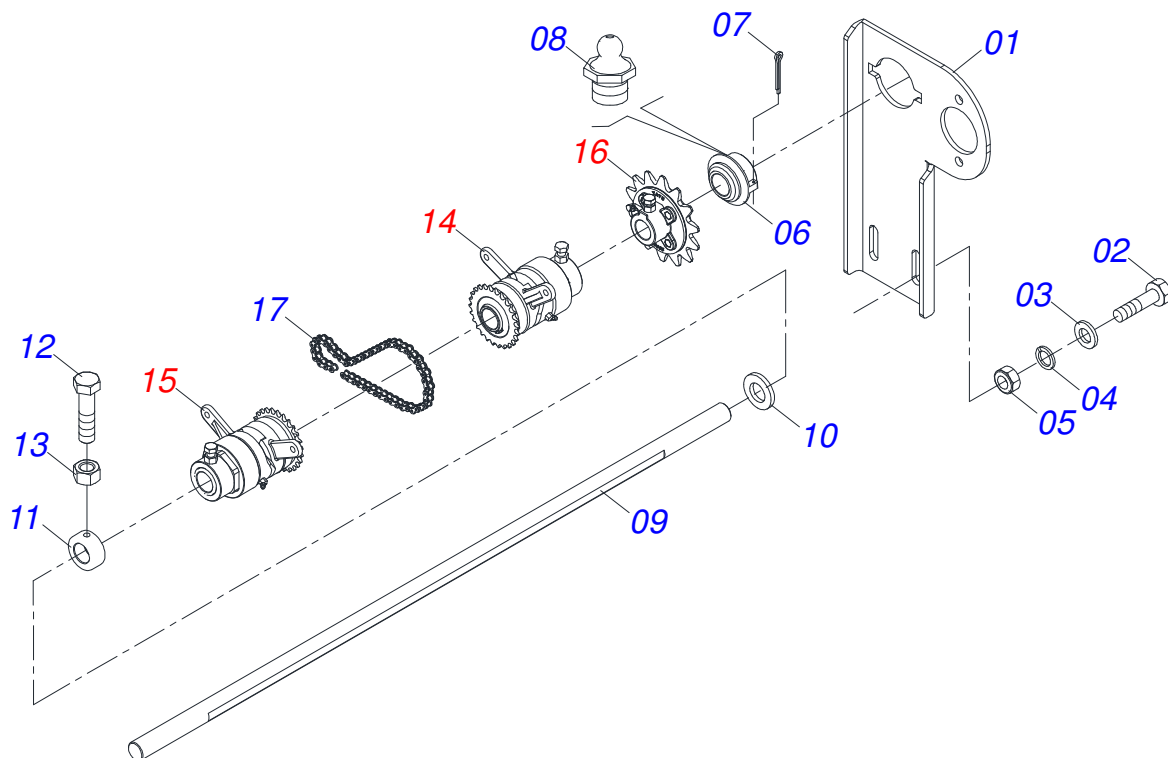


Item	Code	Description	09A19 L
001	0561017269	MOTOR AXLE BEARING SUPPORT	04
002	0503011082	C1/2" X 1.3/4" BOLT	08
003	0511017302	FLAT WASHER	16
004	0503010019	1/2" SPRING WASHER	08
005	0503010060	1/2" NUT	08
006	0501110639	AGRIC BEARING	08
007	0503010300	5/32" X 1" COTTERPIN	08
008	0503011099	GREASE FITTING	08
009	0561016881	MOTOR SHAFT	02
010	0501018466	FLAT WASHER	04
011	0511015961	LOCK BUSHING	04
012	0503030679	1/2" X 1-1/4" BOLT	04
013	0503010060	1/2" NUT	04
014	0511047069	SIDE TRANSMISSION DRIVING	01
015	0511047070	LH SIDE TRANSMISSION DRIVING	01
016	0511051434	TRANSMISSION DRIVING ASSY	04
017	0503012958	2050 CHAIN X 42 LINK + REDUCTION	04

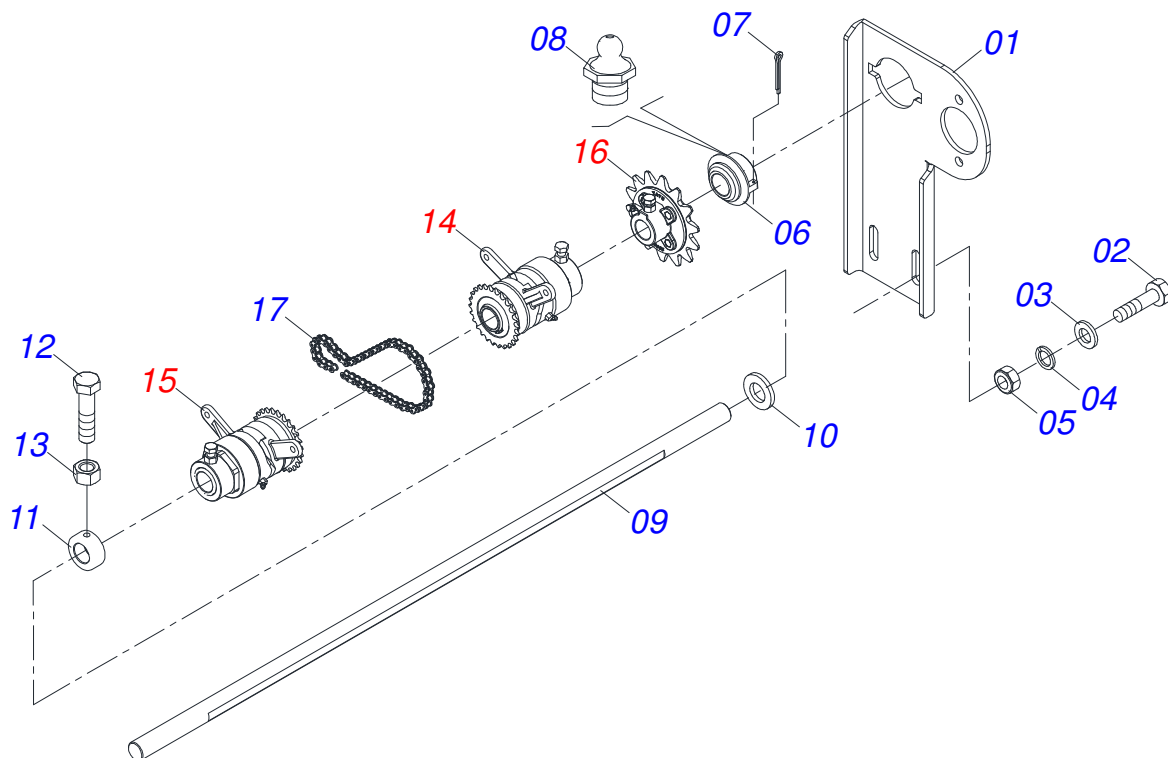


Item	Code	Description	13A17 L
001	0561017269	MOTOR AXLE BEARING SUPPORT	04
002	0503011082	C1/2" X 1.3/4" BOLT	08
003	0511017302	FLAT WASHER	16
004	0503010019	1/2" SPRING WASHER	08
005	0503010060	1/2" NUT	08
006	0501110639	AGRIC BEARING	08
007	0503010300	5/32" X 1" COTTERPIN	08
008	0503011099	GREASE FITTING	08
009	0561016795	2775 MOTOR SHAFT	02
010	0501018466	FLAT WASHER	04
011	0511015961	LOCK BUSHING	04
012	0503030679	1/2" X 1-1/4" BOLT	04
013	0503010060	1/2" NUT	04
014	0511047069	SIDE TRANSMISSION DRIVING	01
015	0511047070	LH SIDE TRANSMISSION DRIVING	01
016	0511051434	TRANSMISSION DRIVING ASSY	04
017	0503012958	2050 CHAIN X 42 LINK + REDUCTION	04

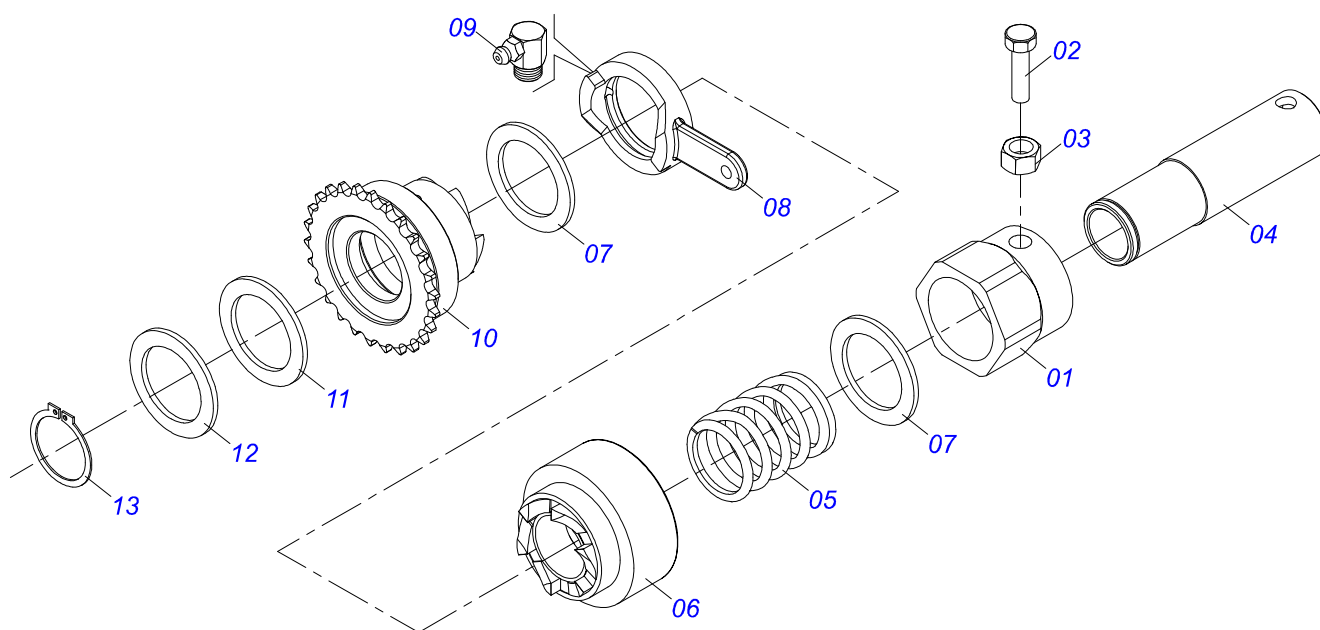

Item	Code	Description	QT
01	0502011996	SLLEVE FIXER	01
02	0503030678	1/2"X1-1/2"BOLT	01
03	0503010060	1/2" NUT	01
04	0521017590	GUIDE AXLE	01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING	01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER	01
07	0501019734	FLAT WASHER	02
08	0502010710	RIGHT CAM, SMALLER	02
09	0503010003	1845 GREASE FITTING	02
10	0502012539	26Z P12,7 GEAR	01
11	0501019735	FLAT WASHER	01
12	0521017593	FLAT WASHER	01
13	0503010542	501045 CLAMPING RING (FOR AXLE)	01

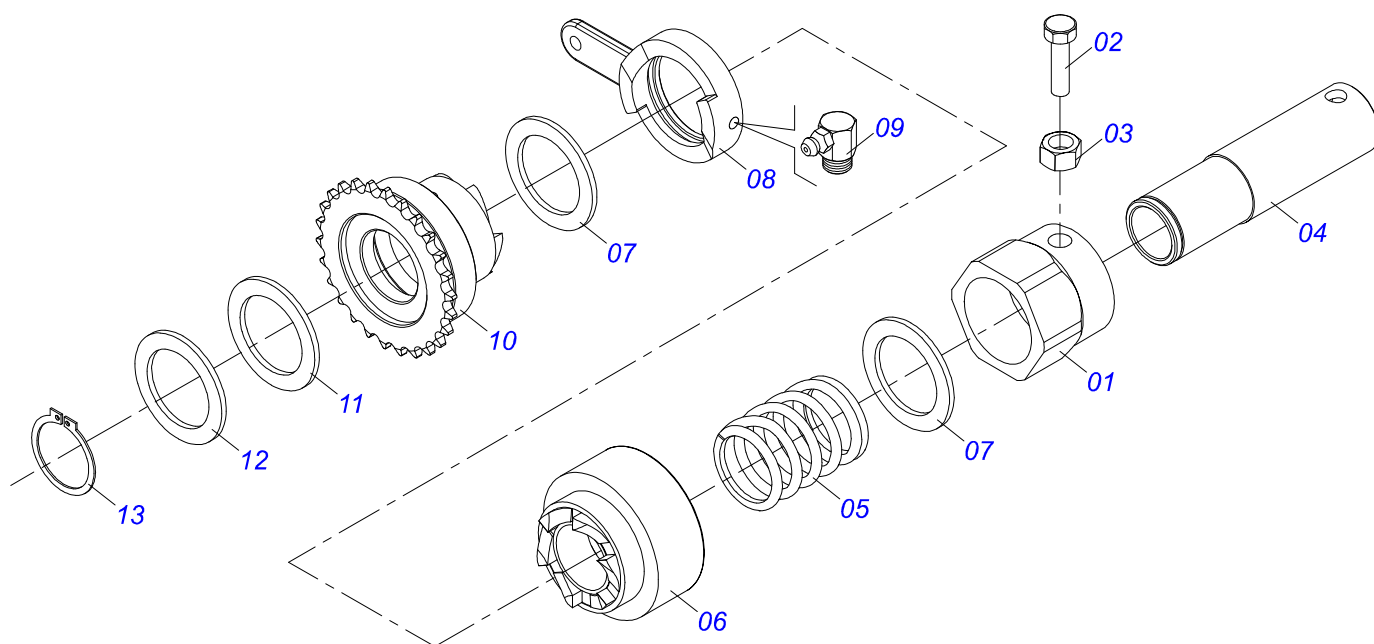


Item	Code	Description	QT
01	0502011996	SLLEVE FIXER	01
02	0503030678	1/2"X1-1/2"BOLT	01
03	0503010060	1/2" NUT	01
04	0521017590	GUIDE AXLE	01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING	01
06	0502011995	LH DRIVING AXLE FOLLOWER	01
07	0501019734	FLAT WASHER	02
08	0502010720	RIGHT CAM, SMALLER	02
09	0503010003	1845 GREASE FITTING	02
10	0502012540	26Z P12,7 GEAR	01
11	0501019735	FLAT WASHER	01
12	0521017593	FLAT WASHER	01
13	0503010542	501045 CLAMPING RING (FOR AXLE)	01

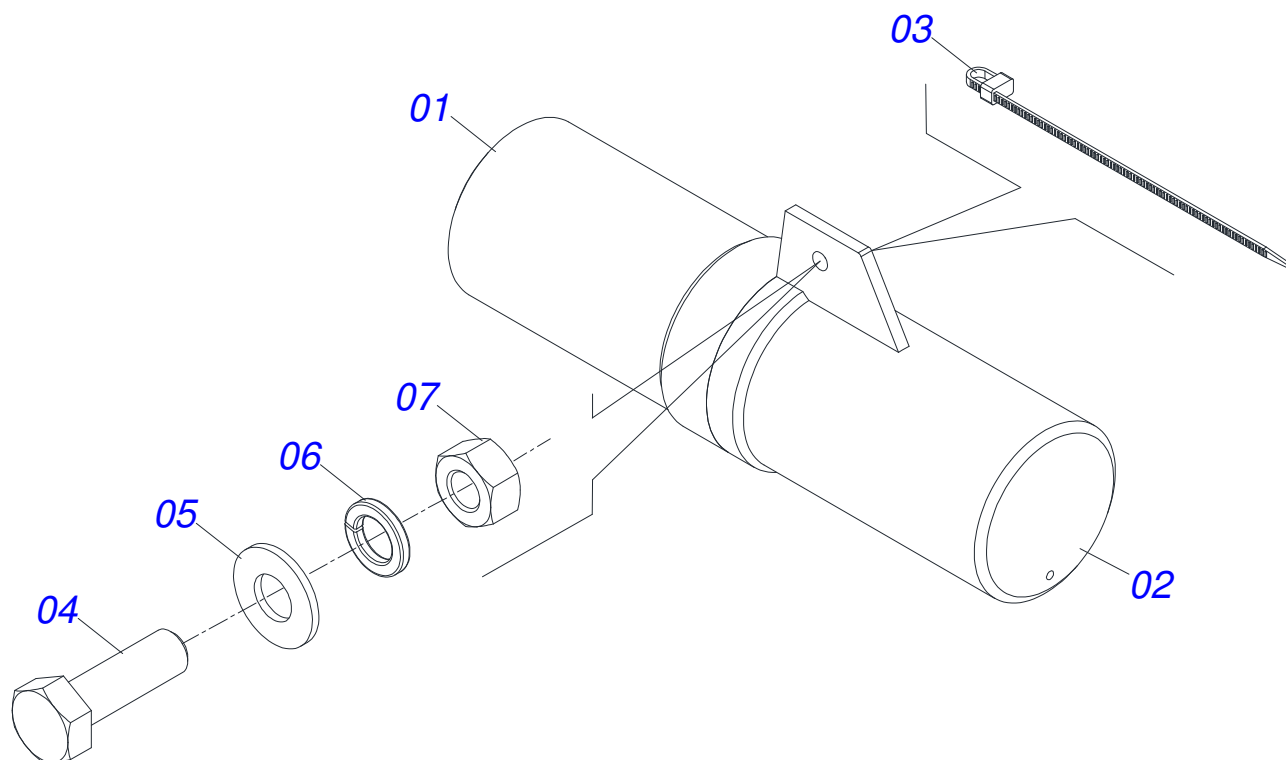

Item	Code	Description	QT
001	0503060100	HAND BOOK COMPARTMENT	01
002	0511031563	BAG WITH MANUAL	01
003	0503010267	NYLON CLAMP	01
004	0503010363	5/16" X 1" BOLT	01
005	0501010694	FLAT WASHER	01
006	0503010179	SPRING WASHER	01
007	0503010337	5/16" NUT	01

SQUARE SHAFT SET


0511053342

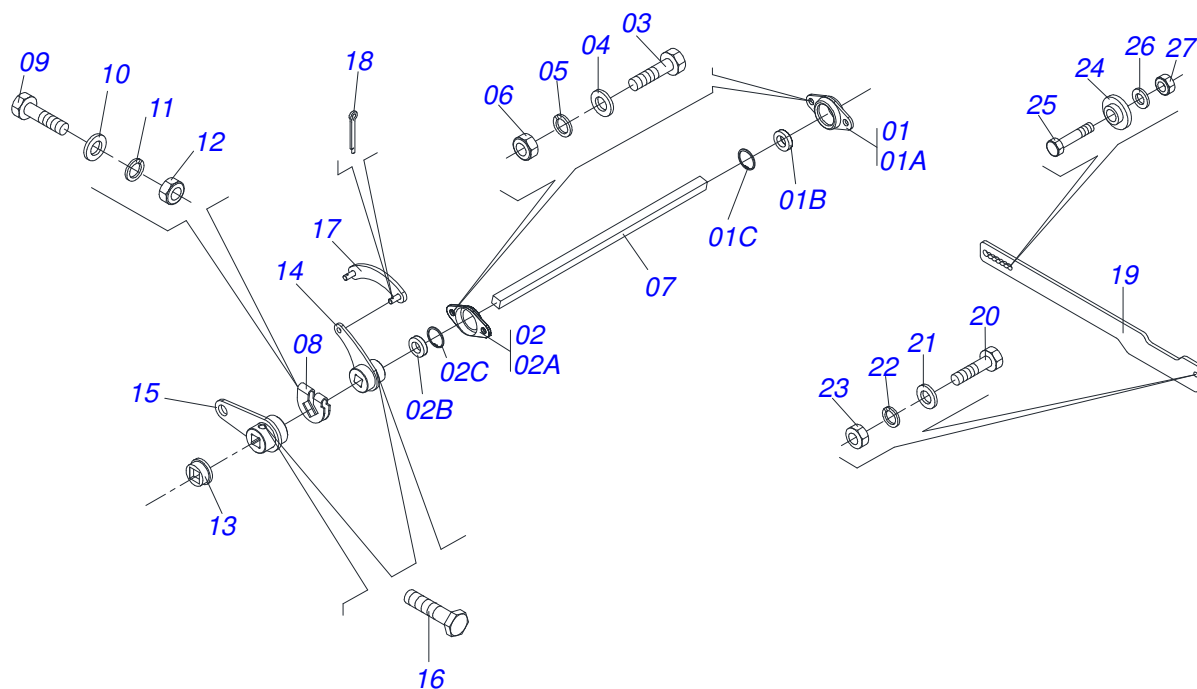


Item	Code	Description	QT
001	0501056271	GEAR BOX CLOSE BEARINGONE	02
001A	0502012310	GEAR BOX CLOSE BEARING	02
001B	0503013462	BEARING WITH BALL BEARING	02
001C	0503011105	SEAL RING	02
002	0501056444	BEARING WITH BALL BEARING	02
002A	0502011697	BEARING OF THE GEAR BOX	02
002B	0503013462	BEARING WITH BALL BEARING	02
002C	0503011105	SEAL RING	02
003	0503011953	5/16" X 1" BOLT	08
004	0501010694	FLAT WASHER	08
005	0503010179	SPRING WASHER	08
006	0503010337	5/16" NUT	08
007	0511014218	3/4" X 28.7"SQUARE SHAFT	02
008	0521010691	AXLE FASTENER	04
009	0503010373	1/4" X 2" BOLT	04
010	0511017303	FLAT WASHER	04
011	0503010143	SPRING WASHER	04
012	0503010144	1/4" NUT	04
013	0503030303	SUPPORT WASHER	04
014	0521061852	LEVER RATCHET	02
015	0521061847	AXLE ADRIVING ASSY	02
016	0503030679	1/2" X 1-1/4" BOLT	04
017	0521061849	DISASSEMBLE LEVER	02
018	0503010140	1/8" X 3/4" COTTERPIN	04
019	0571012792	LOWER LEVER	02
020	0503011082	C1/2" X 1.3/4" BOLT	02
021	0511017302	FLAT WASHER	04
022	0503010019	1/2" SPRING WASHER	02
023	0503010060	1/2" NUT	02
024	0561016797	SLEEVE UNION LEVER ARM/DESARM	02
025	0501010096	3/8" X 2" BOLT	02
026	0501010984	FLAT WASHER	04
027	0503010026	3/8" NUT	04

SQUARE SHAFT SET

0511053434

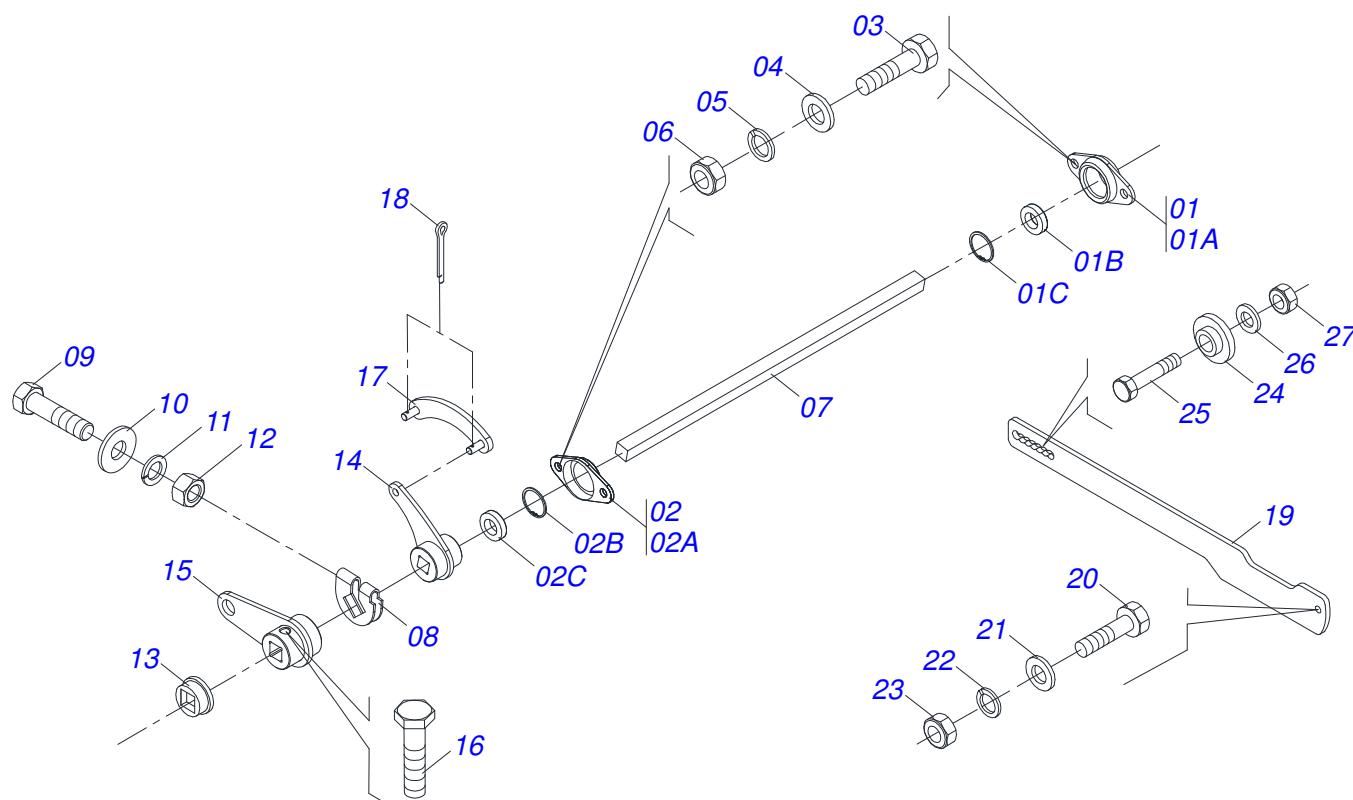

Item	Code	Description	QT
001	0501056271	GEAR BOX CLOSE BEARINGONE	02
001A	0502012310	GEAR BOX CLOSE BEARING	01
001B	0503013462	BEARING WITH BALL BEARING	01
001C	0503011105	SEAL RING	01
002	0501056444	BEARING WITH BALL BEARING	02
002A	0502011697	BEARING OF THE GEAR BOX	01
002B	0503013462	BEARING WITH BALL BEARING	01
002C	0503011105	SEAL RING	01
003	0503011953	5/16" X 1" BOLT	08
004	0501010694	FLAT WASHER	08
005	0503010179	SPRING WASHER	08
006	0503010337	5/16" NUT	08
007	0501018653	3/4" X 46"SQUARE SHAFT	02
008	0521010691	AXLE FASTENER	04
009	0503010373	1/4" X 2" BOLT	04
010	0511017303	FLAT WASHER	04
011	0503010143	SPRING WASHER	04
012	0503010144	1/4" NUT	04
013	0503030303	SUPPORT WASHER	04
014	0521061852	LEVER RATCHET	02
015	0521061847	AXLE ADRIVING ASSY	02
016	0503030679	1/2" X 1-1/4" BOLT	04
017	0521061849	DISASSEMBLE LEVER	02
018	0503010140	1/8" X 3/4" COTTERPIN	04
019	0571012792	LOWER LEVER	02
020	0503011082	C1/2" X 1.3/4" BOLT	02
021	0511017302	FLAT WASHER	04
022	0503010019	1/2" SPRING WASHER	02
023	0503010060	1/2" NUT	02
024	0561016797	SLEEVE UNION LEVER ARM/DESARM	02
025	0501010096	3/8" X 2" BOLT	02
026	0501010984	FLAT WASHER	04
027	0503010026	3/8" NUT	04

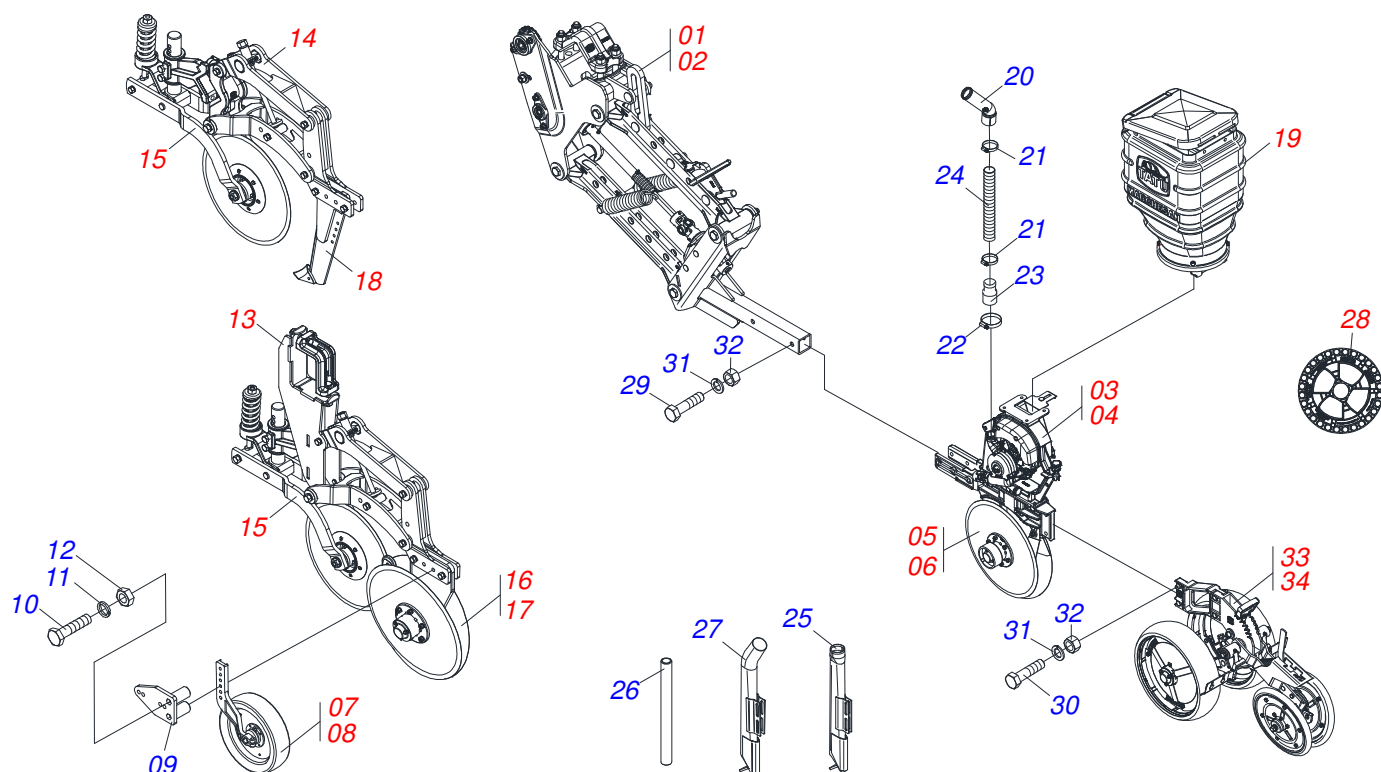


Item	Code	Description	QT
01	0511057729	FRONT SEED SHORT	01
02	0511057730	FRONT SEED LONG	01
03	0511058631	REAR RIGHT SEED ROW SUPREMA	01
04	0511058632	LH REAR LEFT SEED ROW	01
05	0511057318	RIGHT 15" X 15" SEED	01
06	0511057319	LH 15" X 15" DOUBLE DISC	01
07	0501054481	DEPTH CONTROL RIGTH ARM WITH TIRE	01
08	0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	01
09	0511065909	DEPTH FIXER BASE	01
10	0503010547	1/2" X 4" BOLT	02
11	0503010019	1/2" SPRING WASHER	02
12	0503010060	1/2" NUT	02
13	0511053409	FERTILIZER ROW SHORT ASSY	01
14	0511053410	SEED FERTILIZER LONG ROW	01
15	0511051818	18" BLADE DISC ASSY	01
16	0501059307	15 X 15 RIGHT FERT UNAL DOUB-DISC ASSY	01
17	0501059308	15" X 15" LEFT FERT UNAL-DD ASSY	01
18	0501110231	SCARIFIER SPINDLE	01
19	0511057509	SEED RESERVOIR PNEUMATIC ASSY	01
20	0503031050	CURVED CONDUCTOR	01
21	0503010246	CLAMP	02
22	0503010243	CLAMP	01
23	0571019716	ADAPTER	02
24	0571019712	AIR CONDUCTOR	01
25	0511063823	FERT CONDUCTOR WITH REGULATOR	01
26	0531013600	PRESS ADJUSTMENT LEVER	01
27	0511065843	FERT CONDUCTOR WITH REGULATOR	01
28	0503062417	KIT CORN DISTRIBUTION	01
29	0503010706	1/2" X 4.1/2" BOLT	02
30	0503010905	1/2" X 2-1/4" BOLT	02
31	0503010019	1/2" SPRING WASHER	04
32	0503010060	1/2" NUT	04
33	0511057316	ASSEMBLY TRANSMISSION	01



COP FLEX 600 SUP PP AFRICA
FERTILIZER SEED ROW ASSY

Page 61
0909094197

Item	Code	Description	QT
34	0511057317	LH REAR LEFT SEED ROW	01

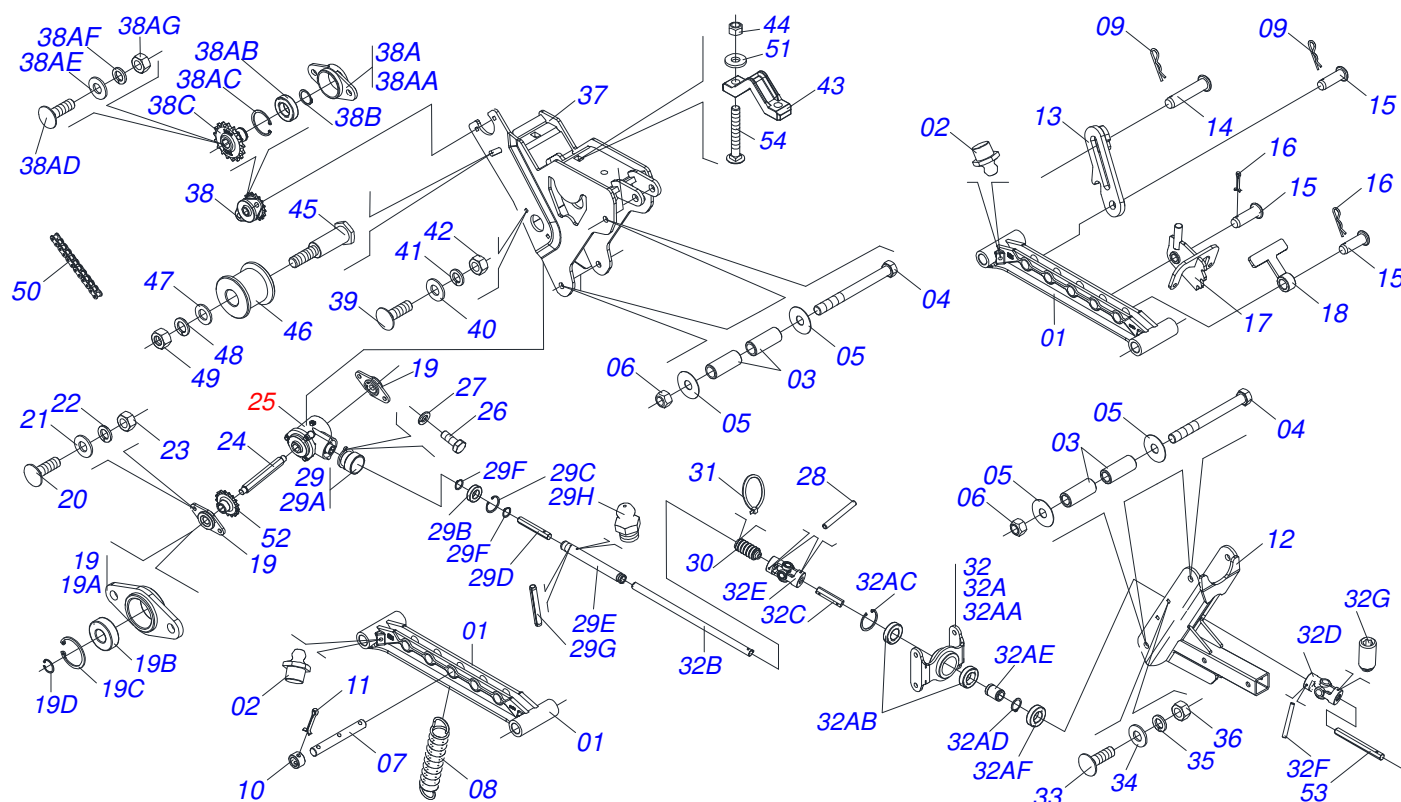


Item	Code	Description	QT
001	0502012784	DRIVER PIVOT	02
002	0503010002	1800 GREASE FITTING	04
003	0531015151	0.6" X 1" X 2.4" SLEEVE	08
004	0501010422	5/8" X 6-1/2" BOLT	04
005	0531015184	FLAT WASHER	08
006	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	04
007	0571012449	CONTROL AXLE	01
008	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING	02
009	0503030168	HAIR PIN	02
010	0571012448	LOCK SLEEVE AXLE REGULATION	01
011	0503010131	3/16" X 1-1/2" COTTERPIN	01
012	0521065914	FRAME ASSY	01
013	0521065677	LIMITER	01
014	0571012443	COUPLING SHAFT	01
015	0571012442	COUPLING SHAFT	03
016	0503010131	3/16" X 1-1/2" COTTERPIN	02
017	0502012785	SEED ROW ADJUSTMENT LEVER ASSY	01
018	0502012814	BOX LEVER LOCK	01
019	0511054635	BEARING AXLE BODY	02
019A	0502012718	BEARIN BODY	01
019B	0503012882	BALL BEARING	01
019C	0503017011	SEAL RING	01
019D	0503011945	503050 CLAMPING RING (FOR AXLE)	01
020	0503011953	5/16" X 1" BOLT	04
021	0501010694	FLAT WASHER	04
022	0503010179	SPRING WASHER	04
023	0503010337	5/16" NUT	04
024	0571012441	TRANSMISSION AXLE	01
025	0511054884	TRANSMISSION BOX	01
026	0503011378	M6 X 1" BOLT	02
027	0503015110	M06 SPRING WASHER	02
028	0503011855	0.2" X 1.8" SPRING PIN	01
029	0511052393	BEARING FOLLOWER ROW ASSY	01

FRONT SEED SHORT


0511057729

Item	Code	Description	QT
029A	0521063532	BEARING FOLLOWER ROW ASSY	01
029B	0503011410	ROLLER BEARING	01
029C	0503011105	SEAL RING	01
029D	0571012450	COP FLEX AXLE	01
029E	0571012459	COP FLEX AXLE	01
029F	0503010406	501025 CLAMPING RING (FOR AXLE)	02
029G	0503015356	SPRING PIN	01
029H	0503010691	1/4" GREASE FITTING	01
030	0503032984	HOOD HEX AXLE ROW	01
031	0503013100	NYLON CLAMP	01
032	0511057625	ROW SEED BEARING	01
032A	0511057156	BEARING AXLE BODY	01
032AA	0521065913	ROW SEED BEARING	01
032AB	0503011410	ROLLER BEARING	02
032AC	0503011105	SEAL RING	01
032AD	0503010406	501025 CLAMPING RING (FOR AXLE)	02
032AE	0571017815	BEARING AXLE BODY	01
032AF	0503017008	SEAL RING	01
032B	0571018731	HEX AXLE	01
032C	0571017900	5/8" X 77" HEX AXLE	01
032D	0561014778	HEX UNIVERSAL JOINT	01
032E	0501056296	UNIVERSAL JOINT ASSY	01
032F	0503011855	0.2" X 1.8" SPRING PIN	03
032G	0503013958	1/4" X 1" BOLT	02
033	0503011953	5/16" X 1" BOLT	04
034	0501010694	FLAT WASHER	04
035	0503010179	SPRING WASHER	04
036	0503010337	5/16" NUT	04
037	0521063525	SHORT SEED ROW FRONT	01
038	0511050609	BEARING WITH 17Z GEAR	01
038A	0511050617	FRONT SEED ROW BEARING	01
038AA	0502011697	BEARING OF THE GEAR BOX	01
038AB	0503011410	ROLLER BEARING	01
038AC	0503011105	SEAL RING	01
038AD	0503011953	5/16" X 1" BOLT	02
038AE	0501010694	FLAT WASHER	02
038AF	0503010179	SPRING WASHER	02
038AG	0503010337	5/16" NUT	02
038B	0503010406	501025 CLAMPING RING (FOR AXLE)	01
038C	0502012819	17Z GEAR WITH HEX HOLE	01
039	0503011953	5/16" X 1" BOLT	02
040	0501010694	FLAT WASHER	02
041	0503010179	SPRING WASHER	02
042	0503010337	5/16" NUT	02
043	1902010175	HITCH CLAMP	01
044	0503010811	5/8" UNF SELF ADJUSTING NUT	02
045	0531019479	AXLE CHAIN GEAR	01
046	0541016454	PULLEY	01
047	0503011828	FLAT WASHER	01
048	0503010019	1/2" SPRING WASHER	01
049	0503010060	1/2" NUT	01
050	0503016501	40-1 X 49 CHAIN LINK + MENDING	01
051	0501012140	FLAT WASHER	02
052	0502012782	17Z GEAR WITH HEX HOLE	01
053	0571019706	HEX AXLE	01
054	0503016460	5/8" X 4.1/2" BOLT	02

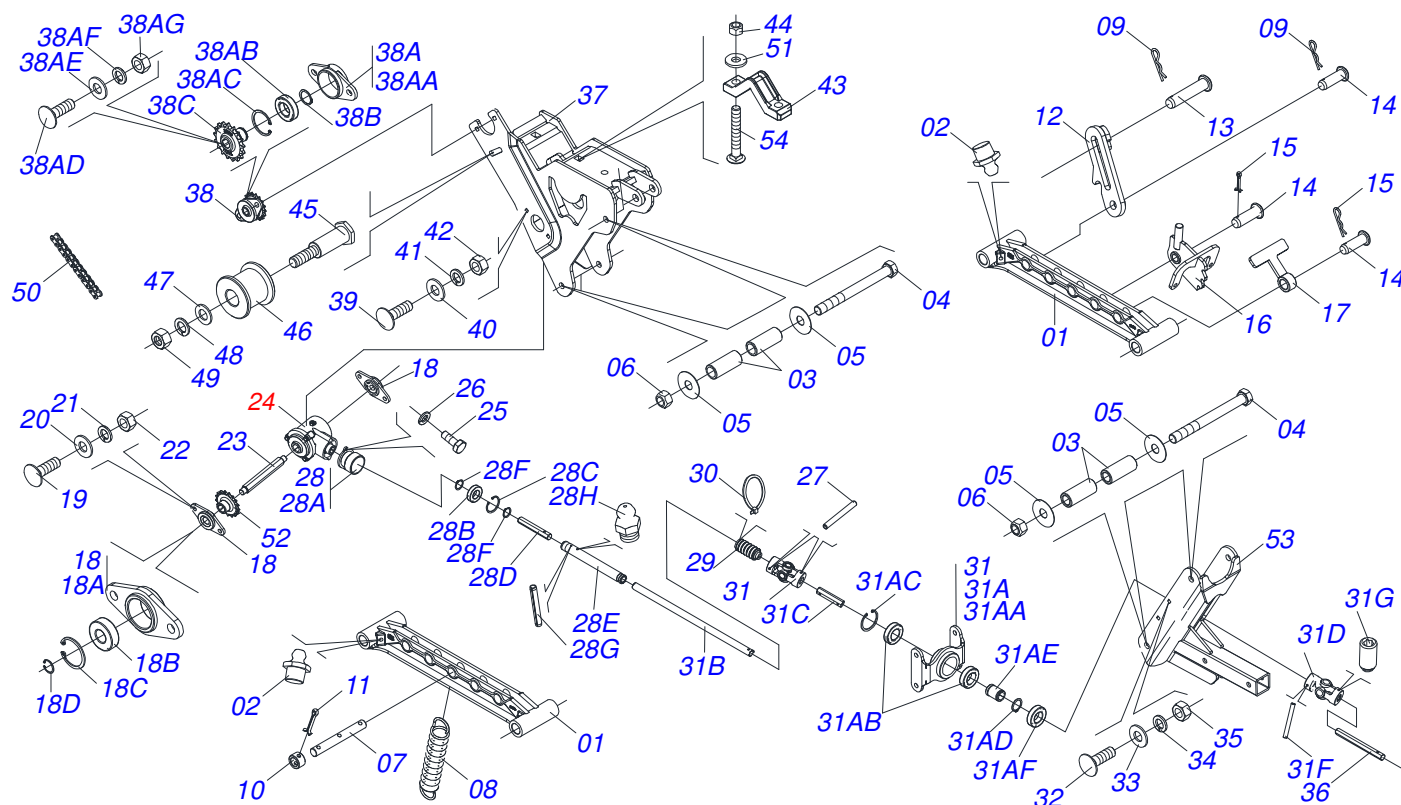


Item	Code	Description	QT
001	0502012784	DRIVER PIVOT	02
002	0503010002	1800 GREASE FITTING	04
003	0531015151	0.6" X 1" X 2.4" SLEEVE	08
004	0501010422	5/8" X 6-1/2" BOLT	04
005	0531015184	FLAT WASHER	08
006	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	04
007	0571012449	CONTROL AXLE	01
008	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING	02
009	0503030168	HAIR PIN	02
010	0571012448	LOCK SLEEVE AXLE REGULATION	01
011	0503010131	3/16" X 1-1/2" COTTERPIN	01
012	0521065677	LIMITER	01
013	0571012443	COUPLING SHAFT	01
014	0571012442	COUPLING SHAFT	03
015	0503010131	3/16" X 1-1/2" COTTERPIN	02
016	0502012785	SEED ROW ADJUSTMENT LEVER ASSY	01
017	0502012814	BOX LEVER LOCK	01
018	0511054635	BEARING AXLE BODY	02
018A	0502012718	BEARIN BODY	01
018B	0503012882	BALL BEARING	01
018C	0503017011	SEAL RING	01
018D	0503011945	503050 CLAMPING RING (FOR AXLE)	01
019	0503011953	5/16" X 1" BOLT	04
020	0501010694	FLAT WASHER	04
021	0503010179	SPRING WASHER	04
022	0503010337	5/16" NUT	04
023	0571012441	TRANSMISSION AXLE	01
024	0511054884	TRANSMISSION BOX	01
025	0503011378	M6 X 1" BOLT	02
026	0503015110	M06 SPRING WASHER	02
027	0503011855	0.2" X 1.8" SPRING PIN	01
028	0511052393	BEARING FOLLOWER ROW ASSY	01
028A	0521063532	BEARING FOLLOWER ROW ASSY	01


Item	Code	Description	QT
028B	0503011410	ROLLER BEARING	01
028C	0503011105	SEAL RING	01
028D	0571012450	COP FLEX AXLE	01
028E	0571012459	COP FLEX AXLE	01
028F	0503010406	501025 CLAMPING RING (FOR AXLE)	02
028G	0503015356	SPRING PIN	01
028H	0503010691	1/4" GREASE FITTING	01
029	0503032984	HOOD HEX AXLE ROW	01
030	0503013100	NYLON CLAMP	01
031	0511057625	ROW SEED BEARING	01
031A	0511057156	BEARING AXLE BODY	01
031AA	0521065913	ROW SEED BEARING	01
031AB	0503011410	ROLLER BEARING	02
031AC	0503011105	SEAL RING	01
031AD	0503010406	501025 CLAMPING RING (FOR AXLE)	02
031AE	0571017815	BEARING AXLE BODY	01
031AF	0503017008	SEAL RING	01
031B	0571018731	HEX AXLE	01
031C	0571017900	5/8" X 77" HEX AXLE	01
031D	0561014778	HEX UNIVERSAL JOINT	01
031E	0501056296	UNIVERSAL JOINT ASSY	01
031F	0503011855	0.2" X 1.8" SPRING PIN	03
031G	0503013958	1/4" X 1" BOLT	02
032	0503011953	5/16" X 1" BOLT	04
033	0501010694	FLAT WASHER	04
034	0503010179	SPRING WASHER	04
035	0503010337	5/16" NUT	04
036	0571019706	HEX AXLE	01
037	0521063524	FRAME FRONT LINE SEED	01
038	0511050609	BEARING WITH 17Z GEAR	01
038A	0511050617	FRONT SEED ROW BEARING	01
038AA	0502011697	BEARING OF THE GEAR BOX	01
038AB	0503011410	ROLLER BEARING	01
038AC	0503011105	SEAL RING	01
038AD	0503011953	5/16" X 1" BOLT	02
038AE	0501010694	FLAT WASHER	02
038AF	0503010179	SPRING WASHER	02
038AG	0503010337	5/16" NUT	02
038B	0503010406	501025 CLAMPING RING (FOR AXLE)	01
038C	0502012819	17Z GEAR WITH HEX HOLE	01
039	0503011953	5/16" X 1" BOLT	02
040	0501010694	FLAT WASHER	02
041	0503010179	SPRING WASHER	02
042	0503010337	5/16" NUT	02
043	1902010175	HITCH CLAMP	01
044	0503010811	5/8" UNF SELF ADJUSTING NUT	02
045	0531019479	AXLE CHAIN GEAR	01
046	0541016454	PULLEY	01
047	0503011828	FLAT WASHER	01
048	0503010019	1/2" SPRING WASHER	01
049	0503010060	1/2" NUT	01
050	0503012142	40-1 CHAIN X 61 LINK + MENDING	01
051	0501012140	FLAT WASHER	02
052	0502012782	17Z GEAR WITH HEX HOLE	01
053	0521065914	FRAME ASSY	01
054	0503817859	5/8" X 4.3/4" BOLT	02

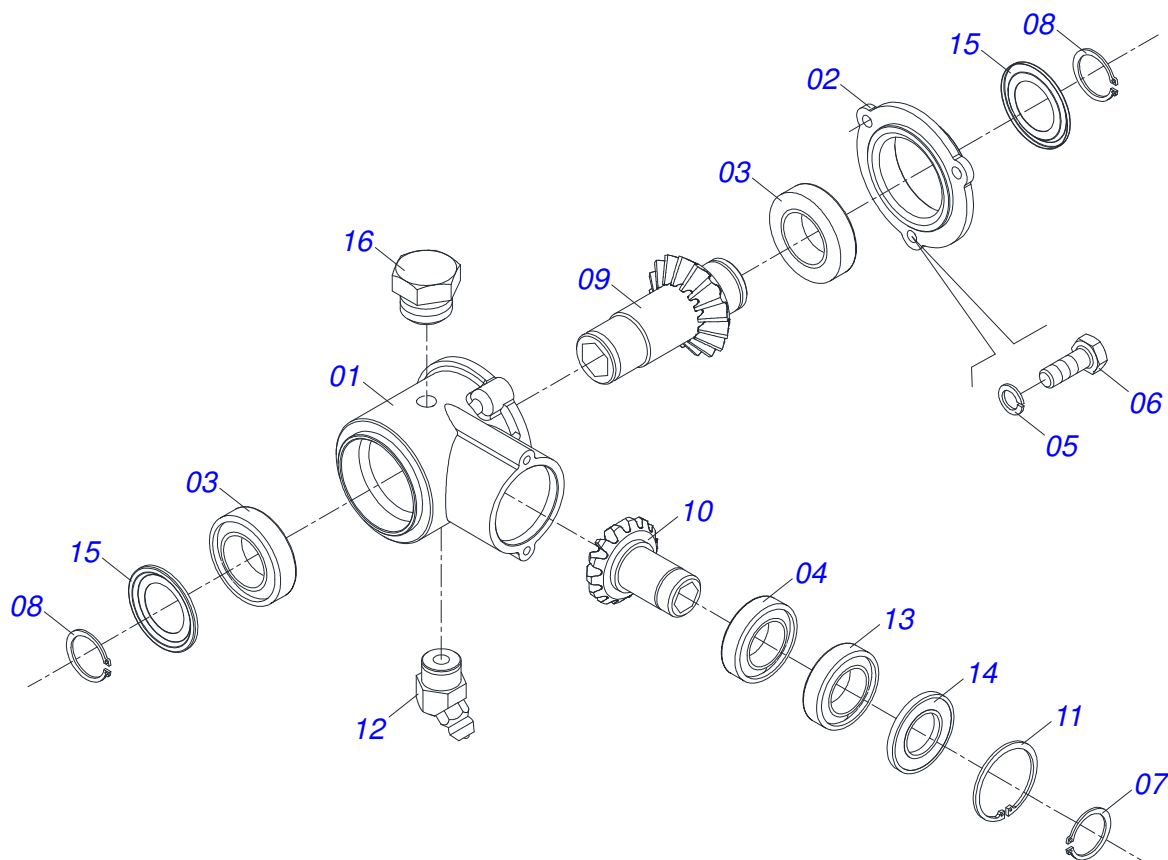


Item	Code	Description	QT
01	0502012465	TRANSMISSION HUB	01
02	0502012464	BOX TRANSMISSION COVER	01
03	0503016995	6006 BALL BEARING	02
04	0503015895	6005 Z BALL BEARING	01
05	0503010143	SPRING WASHER	03
06	0503011378	M6 X 1" BOLT	03
07	0503010406	501025 CLAMPING RING (FOR AXLE)	01
08	0503010707	501030 CLAMPING RING (FOR AXLE)	02
09	0502040856	CONICAL GEAR	01
10	0502040857	CONICAL GEAR	01
11	0503011105	SEAL RING	01
12	0503010003	1845 GREASE FITTING	01
13	0503011409	6005 Z BALL BEARING	01
14	0503017008	SEAL RING	01
15	0503017007	SEAL RING	02
16	0511017907	1/8" BSPT X 6 PLUG	01

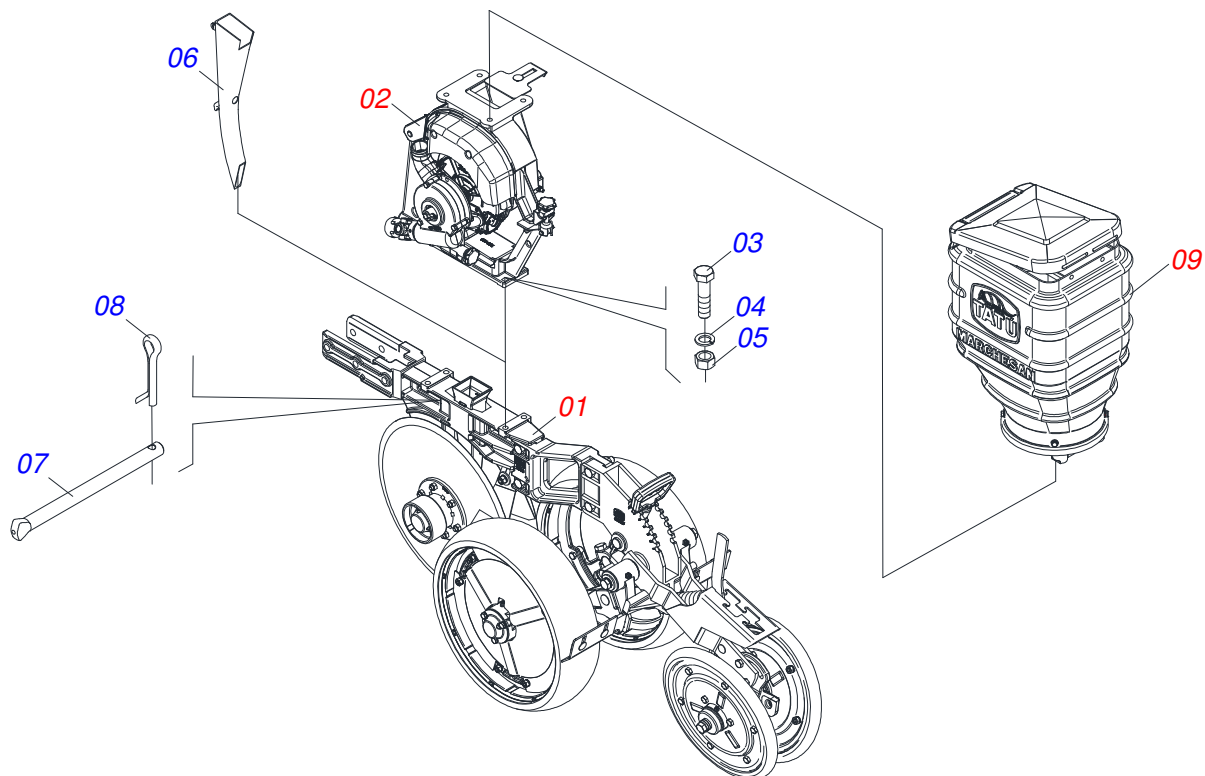

Item	Code	Description	QT
001	0511057317	LH REAR LEFT SEED ROW	01
002	0511057502	SET PRECISION PLANTING	01
003	0503015920	3/8" UNC X 1.3/4" BOLT	04
004	0503010025	3/8 SPRING WASHER	04
005	0503010026	3/8" NUT	04
006	0503062403	TUBE SEED PRECISION PLANTING	01
007	0571017895	PIN FIXER CONDUCTOR PRECISION PLANTING	01
008	0503010140	1/8" X 3/4" COTTERPIN	01
009	0511057509	SEED RESERVOIR PNEUMATIC ASSY	01

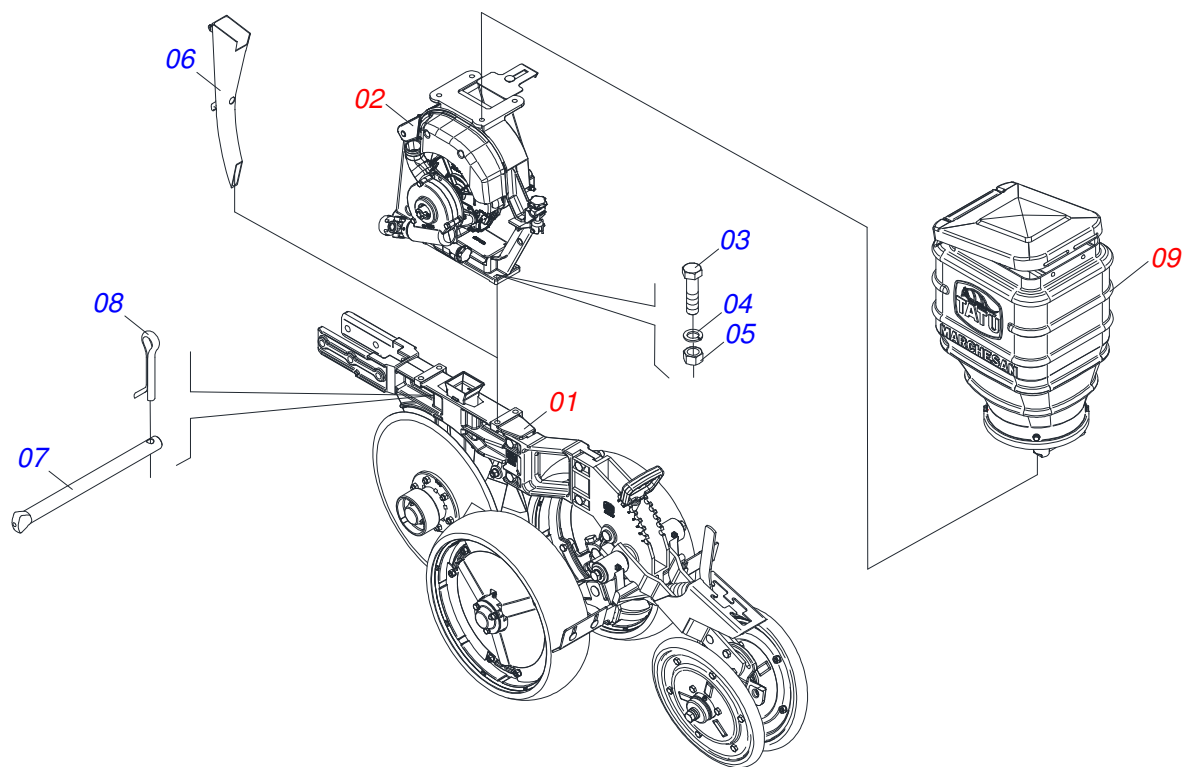


Item	Code	Description	QT
001	0511057316	ASSEMBLY TRANSMISSION	01
002	0511057502	SET PRECISION PLANTING	01
003	0503015920	3/8" UNC X 1.3/4" BOLT	04
004	0503010025	3/8 SPRING WASHER	04
005	0503010026	3/8" NUT	04
006	0503062403	TUBE SEED PRECISION PLANTING	01
007	0571017895	PIN FIXER CONDUCTOR PRECISION PLANTING	01
008	0503010140	1/8" X 3/4" COTTERPIN	01
009	0511057509	SEED RESERVOIR PNEUMATIC ASSY	01

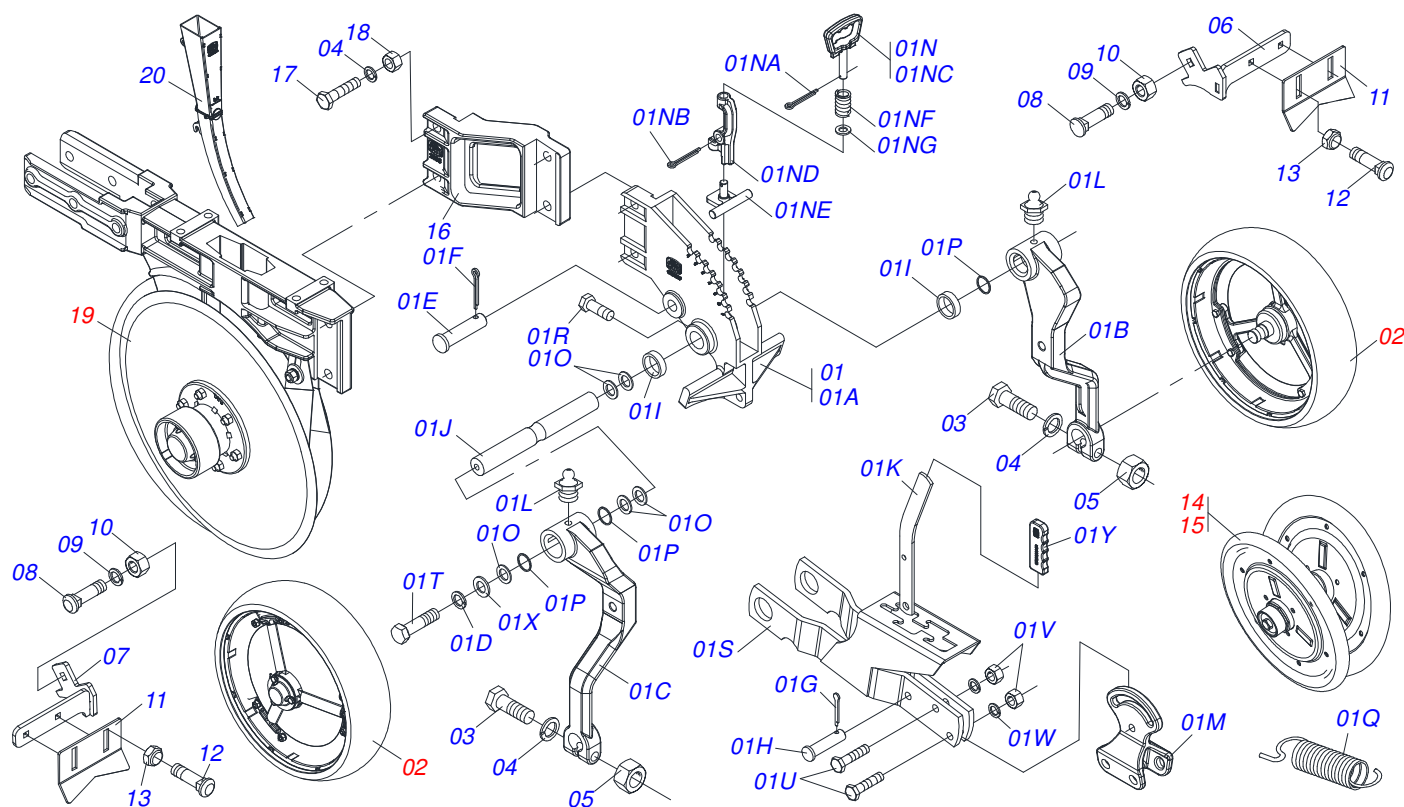


Item	Code	Description	QT
001	0511054830	SUBSET SET	01
001A	0502012283	DEPTH CONTROL SUPPORT	01
001B	0502012762	FERTILIZER DEPTH WHEEL RIGHT ARM	01
001C	0502012763	FERTILIZER DEPTH WHEEL LEFT ARM	01
001D	0503011440	SPRING WASHER	02
001E	0521019093	0.6" X 2.7" PIVOT SHAFT	01
001F	0503010257	1/8" X 1" COTTERPIN	01
001G	0503010140	1/8" X 3/4" COTTERPIN	01
001H	0521010539	0.3" X 1.2" COUPLING SHAFT	01
001I	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE	02
001J	0531010765	DEPTH WHEEL AXLE	01
001K	0541016906	PRESS WHEELS REGULATOR BODY	01
001L	0503010002	1800 GREASE FITTING	02
001M	0502012116	PRESS WHEEL ADJUSTER	01
001N	0501056769	DEPTH WHEELS REGULATOR ASSY	01
001NA	0503010257	1/8" X 1" COTTERPIN	01
001NB	0503010071	3/16" X 1" COTTERPIN	01
001NC	0502011689	1/8" DEPTH CONTROL LEVER	01
001ND	0502011688	SEED SIST CONTROL DEPTH LEVER	01
001NE	0511065582	DEPTH WHEEL STOP	01
001NF	0503030975	0.9" X 1.5" X 0.1" SPRING	01
001NG	0511015976	FLAT WASHER	01
001O	0511015346	FLAT WASHER	04
001P	0503015021	6871-GA SEAL RING	04
001Q	0503030805	1.6" X 6" X 0.2" TRACTION SPRING	01
001R	0503010256	3/8" X 3/4" BOLT	01
001S	0521064073	REGULACION WHEEL COMPACTOR	01
001T	0503010834	1/2 X 1 BOLT	02
001U	0503010849	3/8" X 1-1/2" BOLT	02
001V	0503010026	3/8" NUT	02
001W	0503011443	SPRING WASHER	02
001X	0571017749	FLAT WASHER	02
001Y	0503033942	COVER REGULATORY WHEEL	01

Item	Code	Description	QT
002	0511054827	CLOSE WHEEL STRIPED CENTER	02
003	0503016453	1/2" X 2.1/2 BOLT	02
004	0503010019	1/2" SPRING WASHER	02
005	0503010028	1/2" NUT	02
006	0521064730	LEFT SCRAPER SUPPORT	01
007	0521064729	RIGHT SCRAPER SUPPORT	01
008	0503015920	3/8" UNC X 1.3/4" BOLT	02
009	0503010025	3/8 SPRING WASHER	02
010	0503010026	3/8" NUT	02
011	0561014438	SCRAPER BODY	02
012	0503011952	5/16" X 3/4" BOLT	04
013	0503013816	5/16" LOCKNUT	04
014	0511054333	COMPACT WHEEL RIGHT C/ BEARING	01
015	0511054334	COMPACT WHEEL LEFT C/ BEARING	01
016	0502012663	EXTENSION	01
017	0503010905	1/2" X 2-1/4" BOLT	04
018	0503010060	1/2" NUT	04
019	0511057318	RIGHT 15" X 15" SEED	01
020	0503062390	SEED CONDUCTOR	01

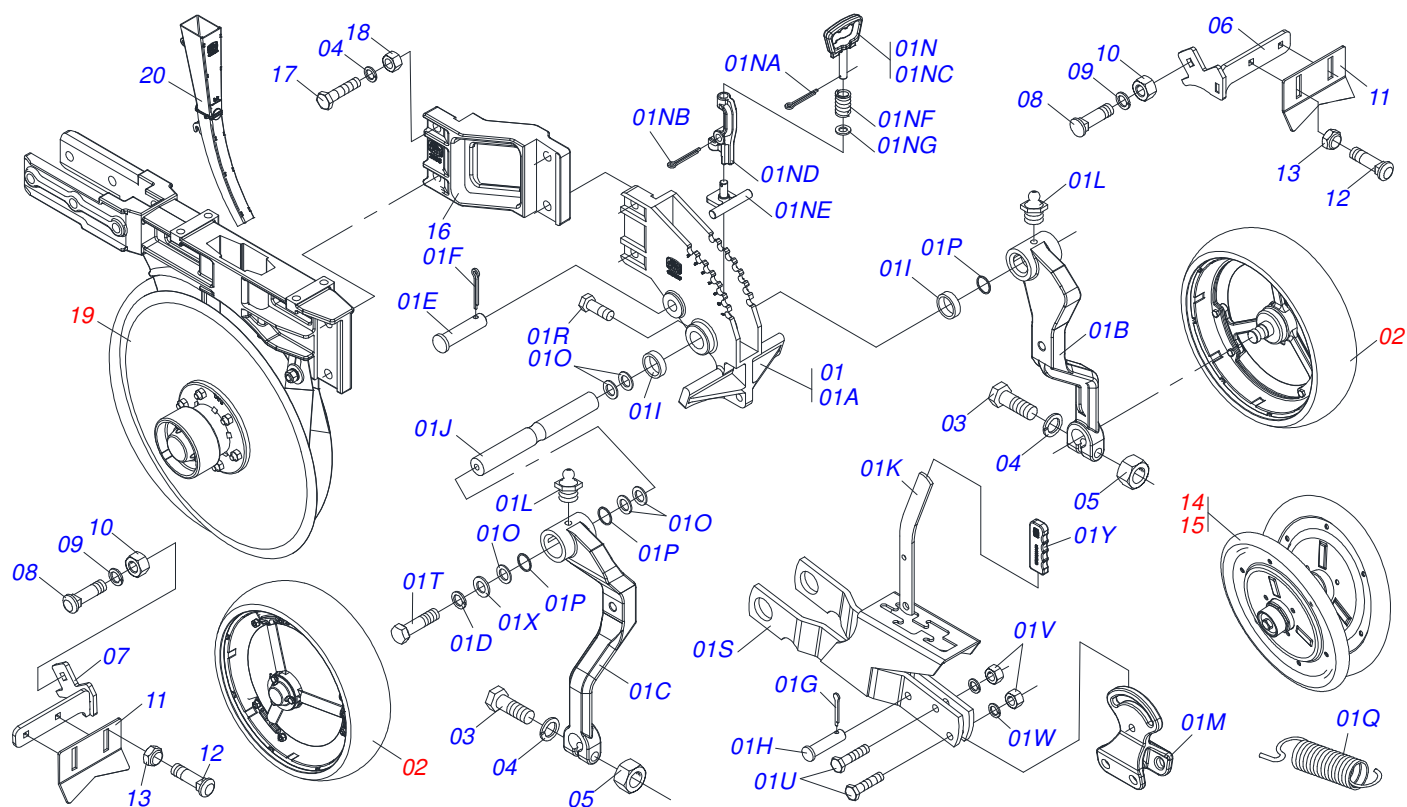


Item	Code	Description	QT
001	0511054830	SUBSET SET	01
001A	0502012283	DEPTH CONTROL SUPPORT	01
001B	0502012762	FERTILIZER DEPTH WHEEL RIGHT ARM	01
001C	0502012763	FERTILIZER DEPTH WHEEL LEFT ARM	01
001D	0503011440	SPRING WASHER	02
001E	0521019093	0.6" X 2.7" PIVOT SHAFT	01
001F	0503010257	1/8" X 1" COTTERPIN	01
001G	0503010140	1/8" X 3/4" COTTERPIN	01
001H	0521010539	0.3" X 1.2" COUPLING SHAFT	01
001I	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE	02
001J	0531010765	DEPTH WHEEL AXLE	01
001K	0541016906	PRESS WHEELS REGULATOR BODY	01
001L	0503010002	1800 GREASE FITTING	02
001M	0502012116	PRESS WHEEL ADJUSTER	01
001N	0501056769	DEPTH WHEELS REGULATOR ASSY	01
001NA	0503010257	1/8" X 1" COTTERPIN	01
001NB	0503010071	3/16" X 1" COTTERPIN	01
001NC	0502011689	1/8" DEPTH CONTROL LEVER	01
001ND	0502011688	SEED SIST CONTROL DEPTH LEVER	01
001NE	0511065582	DEPTH WHEEL STOP	01
001NF	0503030975	0.9" X 1.5" X 0.1" SPRING	01
001NG	0511015976	FLAT WASHER	01
001O	0511015346	FLAT WASHER	04
001P	0503015021	6871-GA SEAL RING	04
001Q	0503030805	1.6" X 6" X 0.2" TRACTION SPRING	01
001R	0503010256	3/8" X 3/4" BOLT	01
001S	0521064073	REGULACION WHEEL COMPACTOR	01
001T	0503010834	1/2 X 1 BOLT	02
001U	0503010849	3/8" X 1-1/2" BOLT	02
001V	0503010026	3/8" NUT	02
001W	0503011443	SPRING WASHER	02
001X	0571017749	FLAT WASHER	02
001Y	0503033942	COVER REGULATORY WHEEL	01

Item	Code	Description	QT
002	0511054827	CLOSE WHEEL STRIPED CENTER	02
003	0503016453	1/2" X 2.1/2 BOLT	02
004	0503010019	1/2" SPRING WASHER	02
005	0503010028	1/2" NUT	02
006	0521064730	LEFT SCRAPER SUPPORT	01
007	0521064729	RIGHT SCRAPER SUPPORT	01
008	0503015920	3/8" UNC X 1.3/4" BOLT	02
009	0503010025	3/8 SPRING WASHER	02
010	0503010026	3/8" NUT	02
011	0561014438	SCRAPER BODY	02
012	0503011952	5/16" X 3/4" BOLT	04
013	0503013816	5/16" LOCKNUT	04
014	0511054333	COMPACT WHEEL RIGHT C/ BEARING	01
015	0511054334	COMPACT WHEEL LEFT C/ BEARING	01
016	0502012663	EXTENSION	01
017	0503010905	1/2" X 2-1/4" BOLT	04
018	0503010060	1/2" NUT	04
019	0511057319	LH 15" X 15" DOUBLE DISC	01
020	0503062390	SEED CONDUCTOR	01

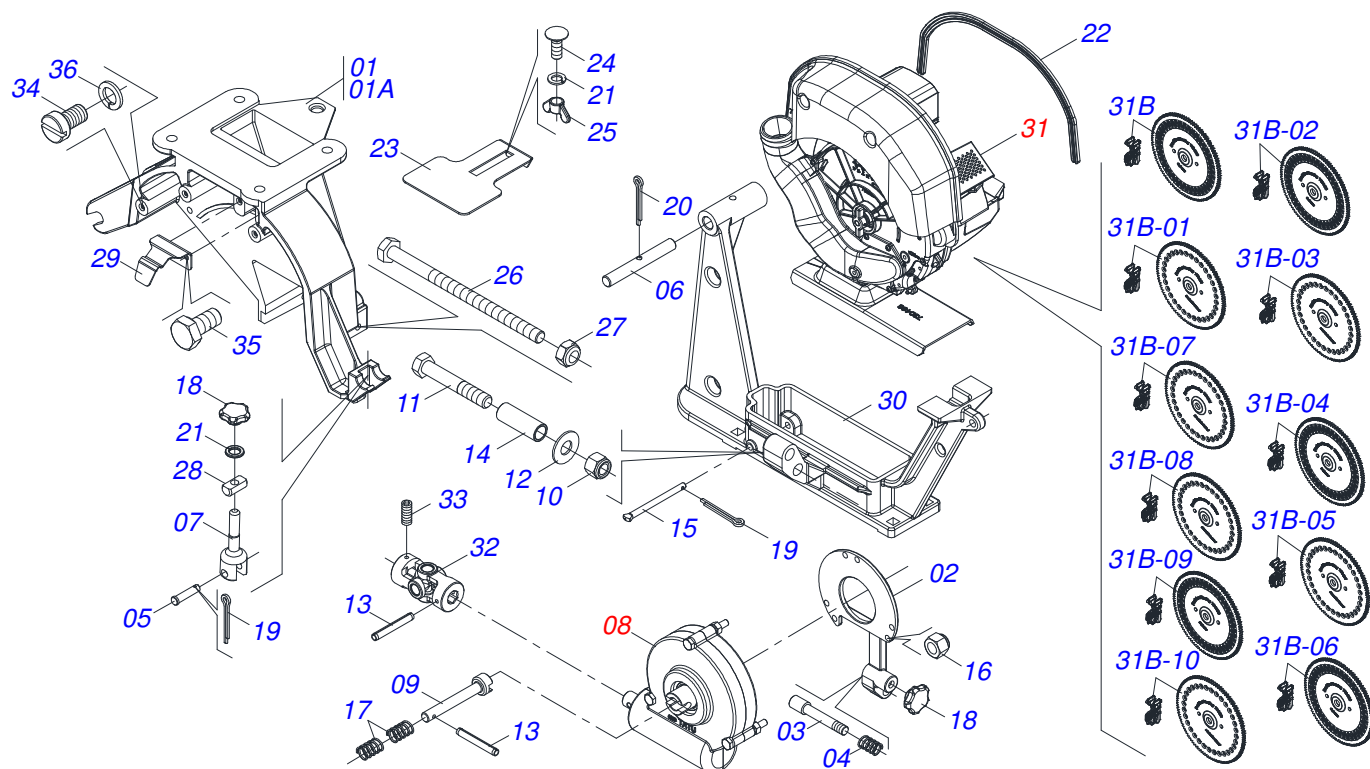


Item	Code	Description	QT
01	0502012807	SUPPORT BOX PRECISION PLANTING	01
01A	1902012807	SEED BOX SUPPORT	01
02	0502012776	SUPPORT ARTICULATION PNEUMATIC PP	01
03	0571017899	PIN LOCK PP	01
04	0503030190	0.5" X 1.6" X 0.05" SPRING	01
05	0571014024	FAST BOLT GUIDE AXLE	02
06	0571017897	AXLE ARTICULATION PRECISION PLANTING	01
07	0581011225	FIXER P PLANTING CONTR CPRA	01
08	0511057155	TRANSMISSION BOX PRECISION PLANTING	01
09	0571017894	PIN DRAG PRECISION PLANTING	01
10	0503013357	3/8" SELF-ADJUSTING NUT	01
11	0503015752	3/8" X 2" BOLT	01
12	0501013518	FLAT WASHER	02
13	0503015356	SPRING PIN	01
14	0571017896	SLEEVE ARTICULATION PRECISION PLANTING	01
15	0571017895	PIN FIXER CONDUCTOR PRECISION PLANTING	01
16	0503011776	M6 SELF ADJUSTINGNUT	03
17	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING	02
18	0503010293	BAQUELITE MANIPULACION	01
19	0503010140	1/8" X 3/4" COTTERPIN	03
20	0503010131	3/16" X 1-1/2" COTTERPIN	01
21	0503010025	3/8 SPRING WASHER	01
22	0503037390	PACKING FOR PLANTING	01
23	0571019491	SLUICE PNEUMATIC PRECISION PLANTING	01
24	0501011643	3/8 X 1"BOLT	01
25	0503010209	3/8" UNC BUTTERFLY NUT	01
26	0503012721	1/4" X 4" BOLT	01
27	0503012880	1/4" UNC SELF ADJUSTING NUT	01
28	0581011226	FIXER CLOSING P PLANTING CONTR CPRA	01
29	0571019489	CLAMP PRECISION PLANTING	01
30	0502012799	UPPER SUPPORT BASE PNEUMATIC PRECISION	01
31	0511057491	ASSY PP SOYBEANS WHIT SEED DISTRIBUTOR	01
31A	0503062405	SEED DISTRIBUTOR	01

Item	Code	Description	QT
31B	0503062407	SET SOYBEAN DISTRIBUTION	01
31B-01	0503062417	KIT CORN DISTRIBUTION	01
31B-02	0503062471	DISTRIBUTION ASSY (SORGHUM / MILLET)	01
31B-03	0503062577	DISTRIBUTION ASSY (LARGE CORN / SUNFLOWER	01
31B-04	0503062578	DISTRIBUTION ASSY (LARGE CORN)	01
31B-05	0503062579	DISTRIBUTION ASSY (CORN / SUNFLOWER)	01
31B-06	0503062580	DISTRIBUTION ASSY (POPCORN / COTTON)	01
31B-07	0503062581	DISTRIBUTION ASSY (SMALL CORN / POP CORN)	01
31B-08	0503062573	CONVERSATION SET FOR DISTRIBUTION (LARGE	01
31B-09	0503062574	CONVERSATION SET FOR DISTRIBUTION (SMALL	01
31B-10	0503062564	CONVERSATION SET FOR DISTRIBUTION (	01
32	0561014778	HEX UNIVERSAL JOINT	01
33	0503013958	1/4" X 1" BOLT	02
34	0503818139	M6 BOLT	03
35	0503011812	M6 X 1" BOLT	02
36	0503015110	M06 SPRING WASHER	02

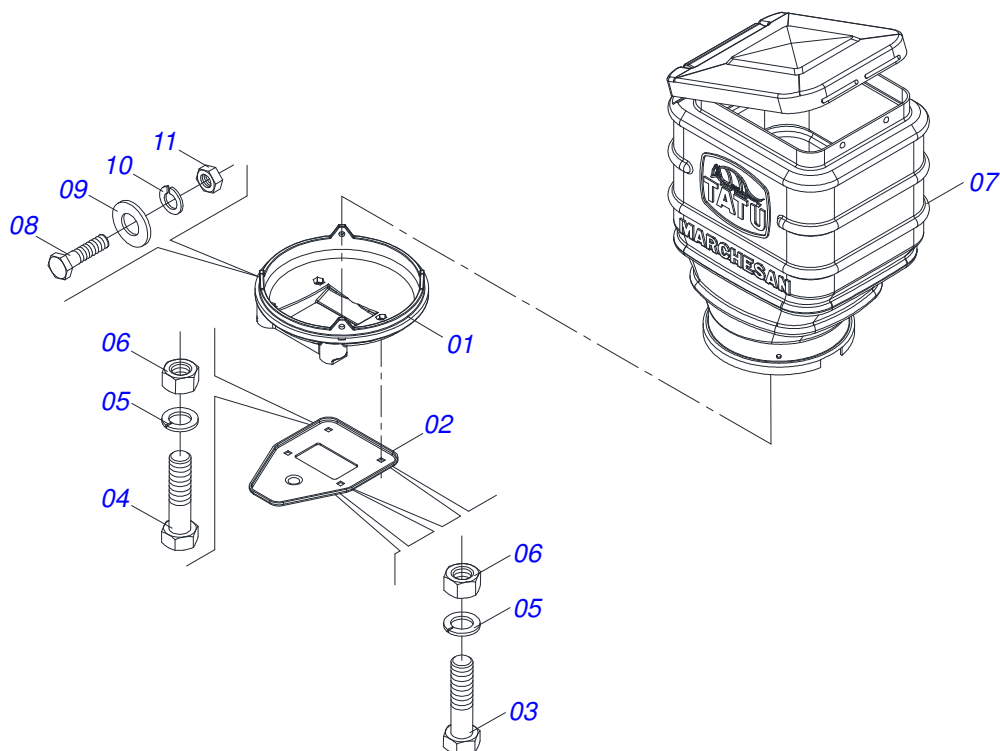


Item	Code	Description	QT
01	0502012798	SUPPORT BOX SEED	01
02	0581012694	COMPACT PROTECTION	01
03	0503010849	3/8" X 1-1/2" BOLT	03
04	0501010096	3/8" X 2" BOLT	01
05	0503010025	3/8 SPRING WASHER	04
06	0503010026	3/8" NUT	04
07	0503031508	COVER GREEN BEAM SEED YELLOW	01
08	0503010358	5/16" X 5/8" BOLT	04
09	0501010694	FLAT WASHER	04
10	0503010179	SPRING WASHER	04
11	0503010337	5/16" NUT	04

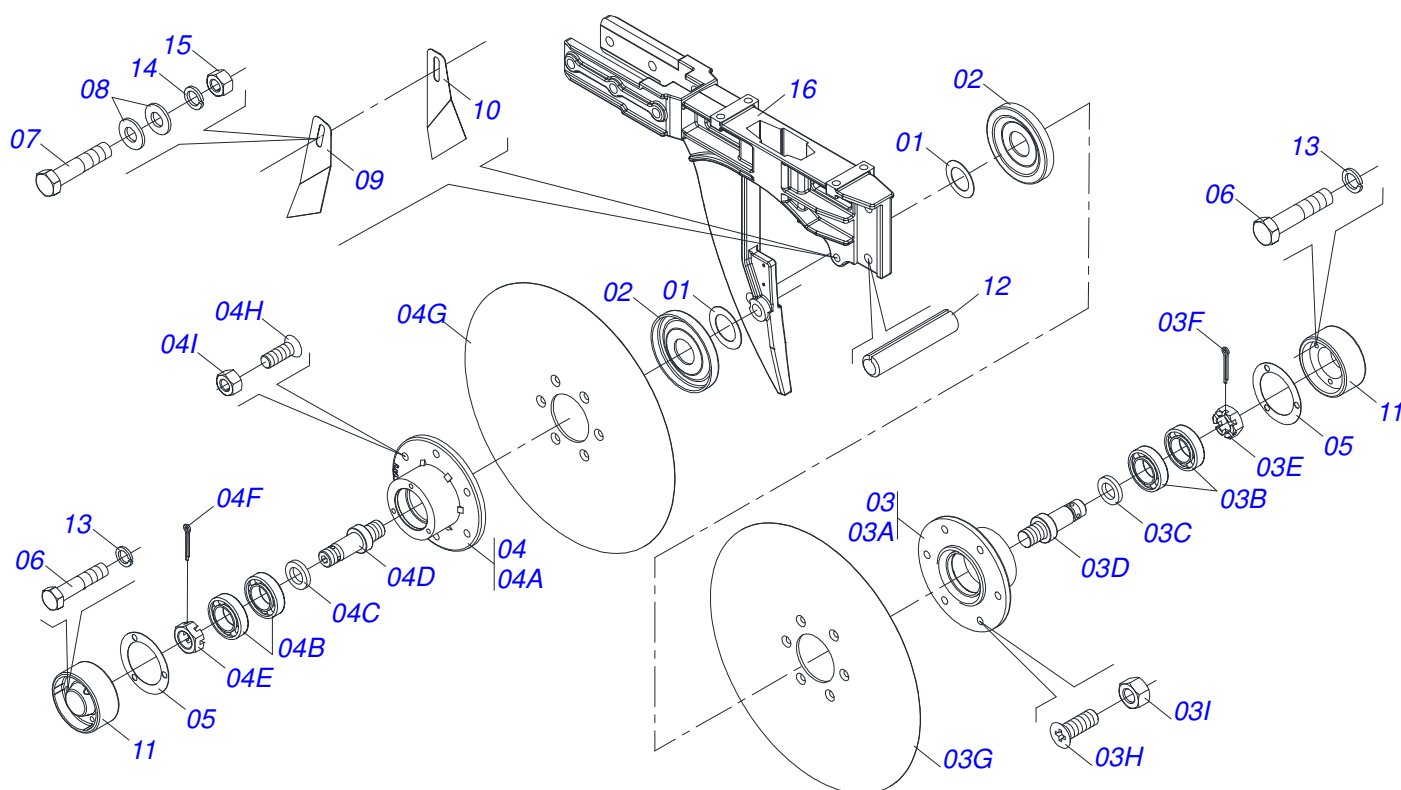

Item	Code	Description	QT
001	0511015098	FLAT WASHER	02
002	0511011927	DUST CLOAK	02
003	0501054167	DOUBLE DISC HUB WITH 15" COULTER	01
003A	0502011930	DOUBLE DISC COULTER BOX	01
003B	0503010598	30204 BALL BEARING	02
003C	0503011112	SEAL 02376-BRG	01
003D	0521019154	RIGHT DOUB DISC HUB	01
003E	0503030282	3/4" CASTLE NUT	01
003F	0503010257	1/8" X 1" COTTERPIN	01
003G	0603022042	13" X 0.12" PLAIN COULTER BLADE	01
003H	0503010546	5/16" X 7/8" BOLT	06
003I	0503010337	5/16" NUT	06
004	0501054168	LEFT UNAL DOBLE-DISC BOX ASSY	01
004A	0502011930	DOUBLE DISC COULTER BOX	01
004B	0503010598	30204 BALL BEARING	02
004C	0503011112	SEAL 02376-BRG	01
004D	0521019148	LEFT DOUBLE DISC HUB	01
004E	0503030282	3/4" CASTLE NUT	01
004F	0503010257	1/8" X 1" COTTERPIN	01
004G	0603022042	13" X 0.12" PLAIN COULTER BLADE	01
004H	0503010546	5/16" X 7/8" BOLT	06
004I	0503010337	5/16" NUT	06
005	0503030757	2.9" X 2" X 0.02" JOINT	02
006	0503013758	1/4" X 1-1/2" BOLT	06
007	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
008	0501010984	FLAT WASHER	02
009	0561010265	LH DOUBLE DISC SCRAPER	01
010	0561010264	RH DOUBLE DISC SCRAPER	01
011	0502012517	COVER	02
012	0503010838	0.1" X 0.8" SPRING PIN	02
013	0503011441	SPRING WASHER	06
014	0503011443	SPRING WASHER	01
015	0503010026	3/8" NUT	01



Item	Code	Description	QT
016	0502012780	SUPPORT DDD RIGHT	01

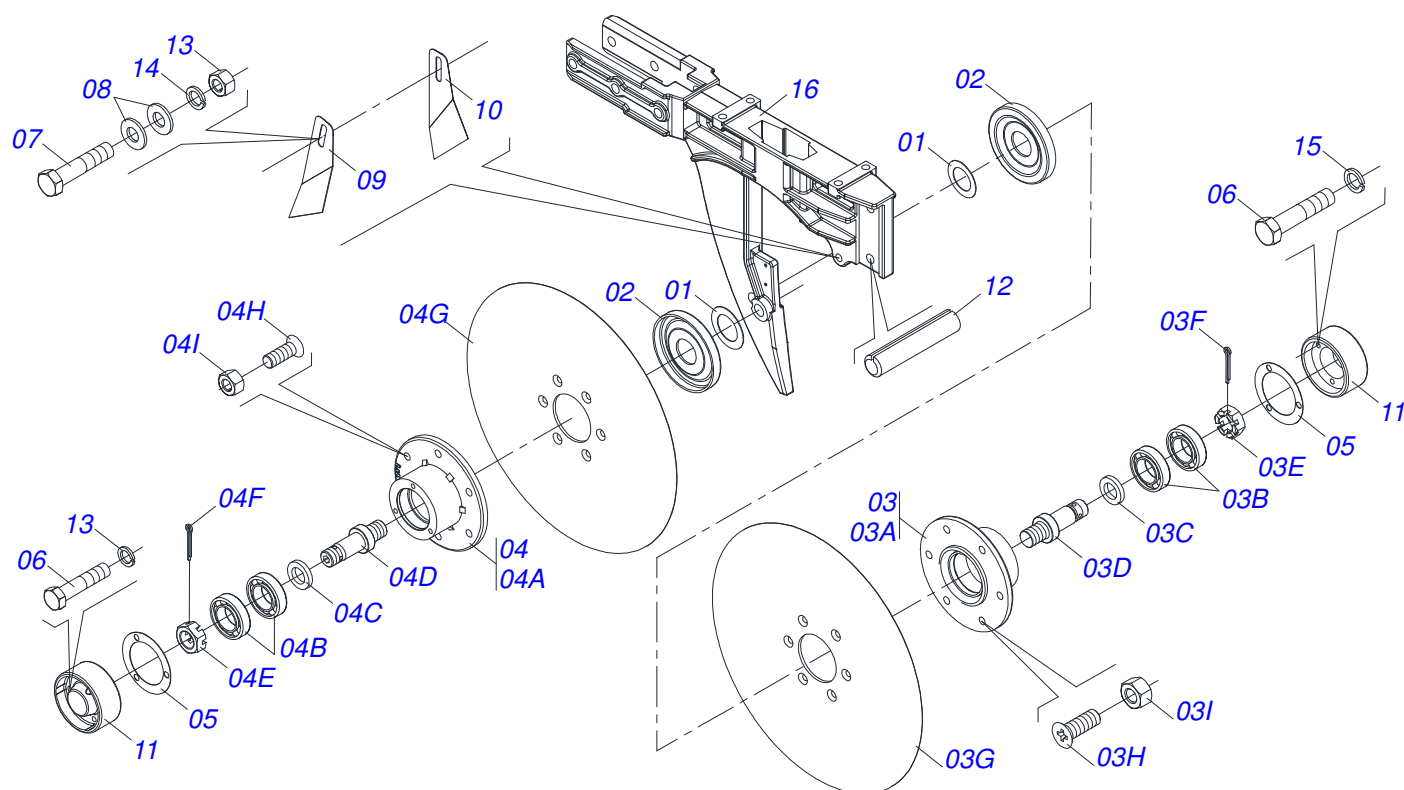


Item	Code	Description	QT
001	0511015098	FLAT WASHER	02
002	0511011927	DUST CLOAK	02
003	0501054167	DOUBLE DISC HUB WITH 15" COULTER	01
003A	0502011930	DOUBLE DISC COULTER BOX	01
003B	0503010598	30204 BALL BEARING	02
003C	0503011112	SEAL 02376-BRG	01
003D	0521019154	RIGHT DOUB DISC HUB	01
003E	0503030282	3/4" CASTLE NUT	01
003F	0503010257	1/8" X 1" COTTERPIN	01
003G	0603022042	13" X 0.12" PLAIN COULTER BLADE	01
003H	0503010546	5/16" X 7/8" BOLT	06
003I	0503010337	5/16" NUT	06
004	0501054168	LEFT UNAL DOBLE-DISC BOX ASSY	01
004A	0502011930	DOUBLE DISC COULTER BOX	01
004B	0503010598	30204 BALL BEARING	02
004C	0503011112	SEAL 02376-BRG	01
004D	0521019148	LEFT DOUBLE DISC HUB	01
004E	0503030282	3/4" CASTLE NUT	01
004F	0503010257	1/8" X 1" COTTERPIN	01
004G	0603022042	13" X 0.12" PLAIN COULTER BLADE	01
004H	0503010546	5/16" X 7/8" BOLT	06
004I	0503010337	5/16" NUT	06
005	0503030757	2.9" X 2" X 0.02" JOINT	02
006	0503013758	1/4" X 1-1/2" BOLT	06
007	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
008	0501010984	FLAT WASHER	02
009	0561010265	LH DOUBLE DISC SCRAPER	01
010	0561010264	RH DOUBLE DISC SCRAPER	01
011	0502012517	COVER	02
012	0503010838	0.1" X 0.8" SPRING PIN	02
013	0503010026	3/8" NUT	01
014	0503011443	SPRING WASHER	01
015	0503011441	SPRING WASHER	06




COP FLEX 600 SUP PP AFRICA
LH 15" X 15" DOUBLE DISC

Page 72
0511057319


Item	Code	Description	QT
016	0502012781	SUPPORT DDD LEFT	01

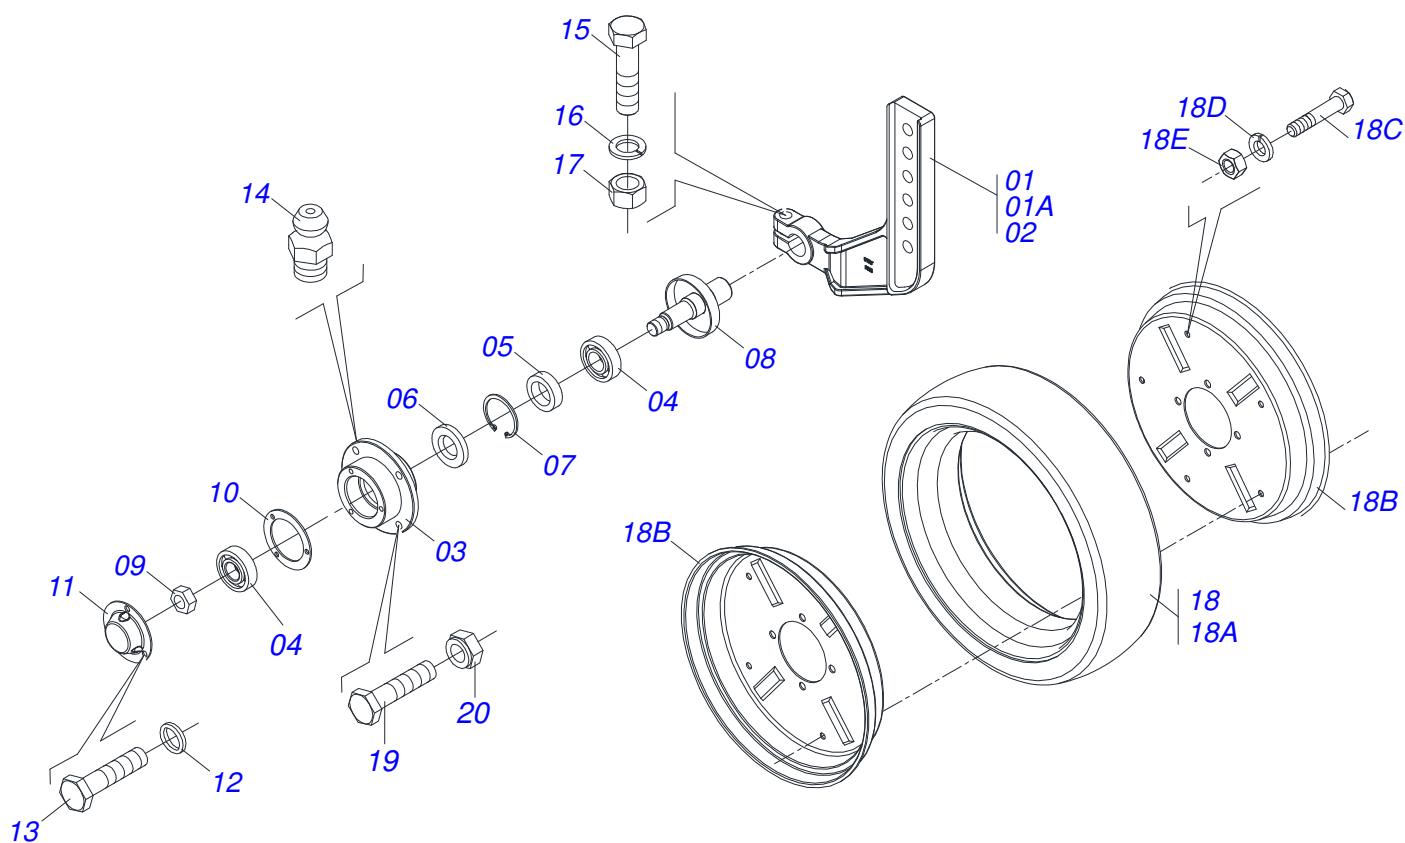

Item	Code	Description	QT
01	0501054481	DEPTH CONTROL RIGTH ARM WITH TIRE	01
01A	0501056430	DEPTH CONTROL RIGTH ARM	01
02	0502012090	DEPTH CONTROL RIGHT ARM	01
03	0502011907	DEPTH CONTROL WHEEL HUB	01
04	0503010269	6204 BALL BEARING	02
05	0501013636	SPACING SLEEVE	01
06	0503010689	SEAL 00763-BR	01
07	0503011105	SEAL RING	01
08	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK	01
09	0503010878	5/8" SELF ALIGNING NUT	01
10	0503030757	2.9" X 2" X 0.02" JOINT	01
11	0521019178	COVER DEPTH	01
12	0503011441	SPRING WASHER	03
13	0503014729	1/4" UNF X 1/2" BOLT	03
14	0503010691	1/4" GREASE FITTING	01
15	0503010740	1/2" X 2" BOLT	01
16	0503011440	SPRING WASHER	01
17	0503010060	1/2" NUT	01
18	0501052538	DEPTH CONTROL WHEEL RUBBER BAND	01
18A	0503030551	DEPTH CONTROL WHEEL RUBBER BAND	01
18B	0521010832	RIM FLANGE	02
18C	0503010298	1/4" X 1/2" BOLT	05
18D	0503010143	SPRING WASHER	05
18E	0503010144	1/4" NUT	05
19	0503010358	5/16" X 5/8" BOLT	04
20	0503013816	5/16" LOCKNUT	04

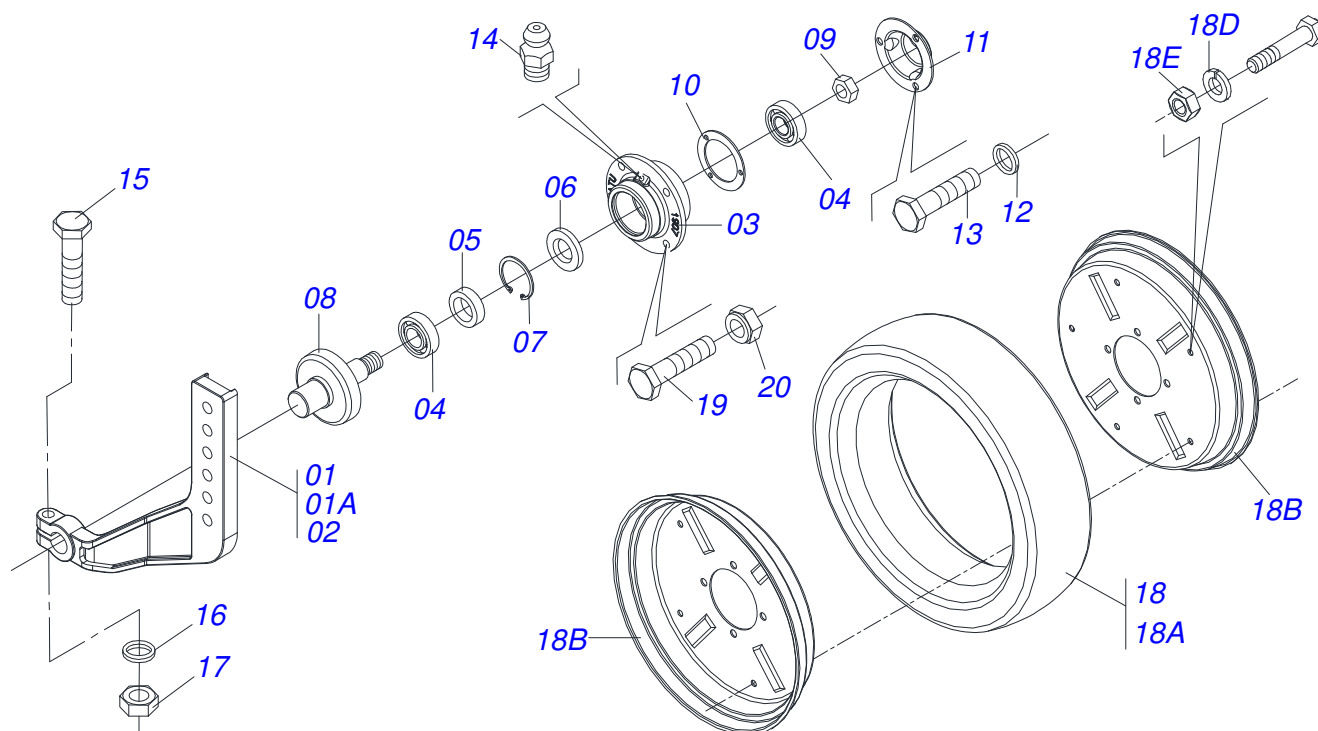

Item	Code	Description	QT
01	0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	01
01A	0501056435	DEPTH CONTROL LEFT ARM	01
02	0502012091	DEPTH CONTROL LEFT ARM	01
03	0502011907	DEPTH CONTROL WHEEL HUB	01
04	0503010269	6204 BALL BEARING	02
05	0501013636	SPACING SLEEVE	01
06	0503010689	SEAL 00763-BR	01
07	0503011105	SEAL RING	01
08	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK	01
09	0503010878	5/8" SELF ALIGNING NUT	01
10	0503030757	2.9" X 2" X 0.02" JOINT	01
11	0521019178	COVER DEPTH	01
12	0503011441	SPRING WASHER	03
13	0503014729	1/4" UNF X 1/2" BOLT	03
14	0503010691	1/4" GREASE FITTING	01
15	0503010740	1/2" X 2" BOLT	01
16	0503011440	SPRING WASHER	01
17	0503010060	1/2" NUT	01
18	0501052538	DEPTH CONTROL WHEEL RUBBER BAND	01
18A	0503030551	DEPTH CONTROL WHEEL RUBBER BAND	01
18B	0521010832	RIM FLANGE	02
18C	0503010298	1/4" X 1/2" BOLT	05
18D	0503010143	SPRING WASHER	05
18E	0503010144	1/4" NUT	05
19	0503010358	5/16" X 5/8" BOLT	04
20	0503013816	5/16" LOCKNUT	04

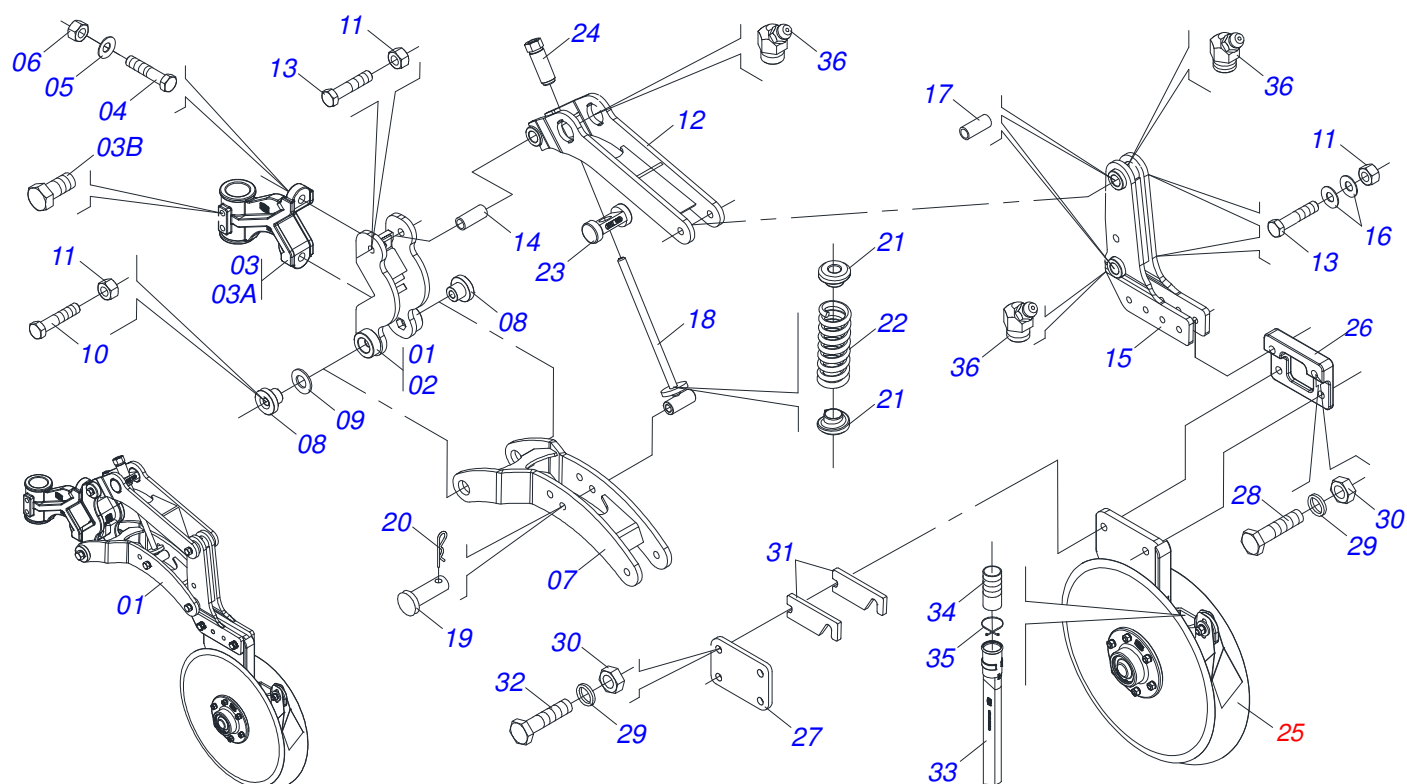


Item	Code	Description	QT
01	0511053409	FERTILIZER ROW SHORT ASSY	01
02	0502012728	ROW FERTILIZER SUPPORT	01
03	0511053223	FERTILIZER ROW SUPPORT	01
03A	0502012727	BLADE DISC SUPPORT	01
03B	0511016156	5/8" X 1.1/2" BOLT	02
04	0503011328	3/4" X 4" BOLT	02
05	0501010322	FLAT WASHER	02
06	0503011255	3/4" LOCK NUT	02
07	0511065857	FERTILIZER ROW LOWER SUPPORT	01
08	0561017928	FERTILIZER ROW ARTICULAT SLEEVE	02
09	0511015098	FLAT WASHER	06
10	0503010233	5/8" X 2-1/2" BOLT	02
11	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	05
12	0511063862	FERTILIZER ROW UPPER SUPPORT	01
13	0501010452	5/8" X 5" BOLT	03
14	0531016207	0.6" X 1" X 2.8" SLEEVE	01
15	0521061855	FERTILIZER ROW REAR SUPPORT	01
16	0531016031	1/2" SPRING WASHER	04
17	0531016207	0.6" X 1" X 2.8" SLEEVE	02
18	0521062073	SPRING GUIDE	01
19	0521016057	COUP SHA OF THE CARRY-W SPRING GUI	01
20	0503030168	HAIR PIN	01
21	1902020393	SPRING UPPER SUPPORT	02
22	0503031450	2.7" X 9.2" X 0.03" SPRING	01
23	0521011158	SPRING LOCKNUT	01
24	0521018575	REGULATOR SPINDLE 100	01
25	0501059308	15" X 15" LEFT FERT UNAL-DD ASSY	01
26	0502012352	DOUBLE-DISC SPACING PLATE	01
27	0541013035	5.55" X 4.0" X 0.38" PLATE	01
28	0503010740	1/2" X 2" BOLT	02
29	0503010019	1/2" SPRING WASHER	04
30	0503010060	1/2" NUT	04
31	0511018662	SPACING PLATE	02




COP FLEX 600 SUP PP AFRICA
FERTILIZER ROW SHORT ASSY

Page 75
0511053409


Item	Code	Description	QT
32	0503010752	1/2" X 3.1/2" BOLT	02
33	0503030520	SEED SOCKET	01
34	0503030408	10 X 2 X 390 HOSE	01
35	0503031076	2" HOSE CLAMP	02
36	0503010003	1845 GREASE FITTING	03

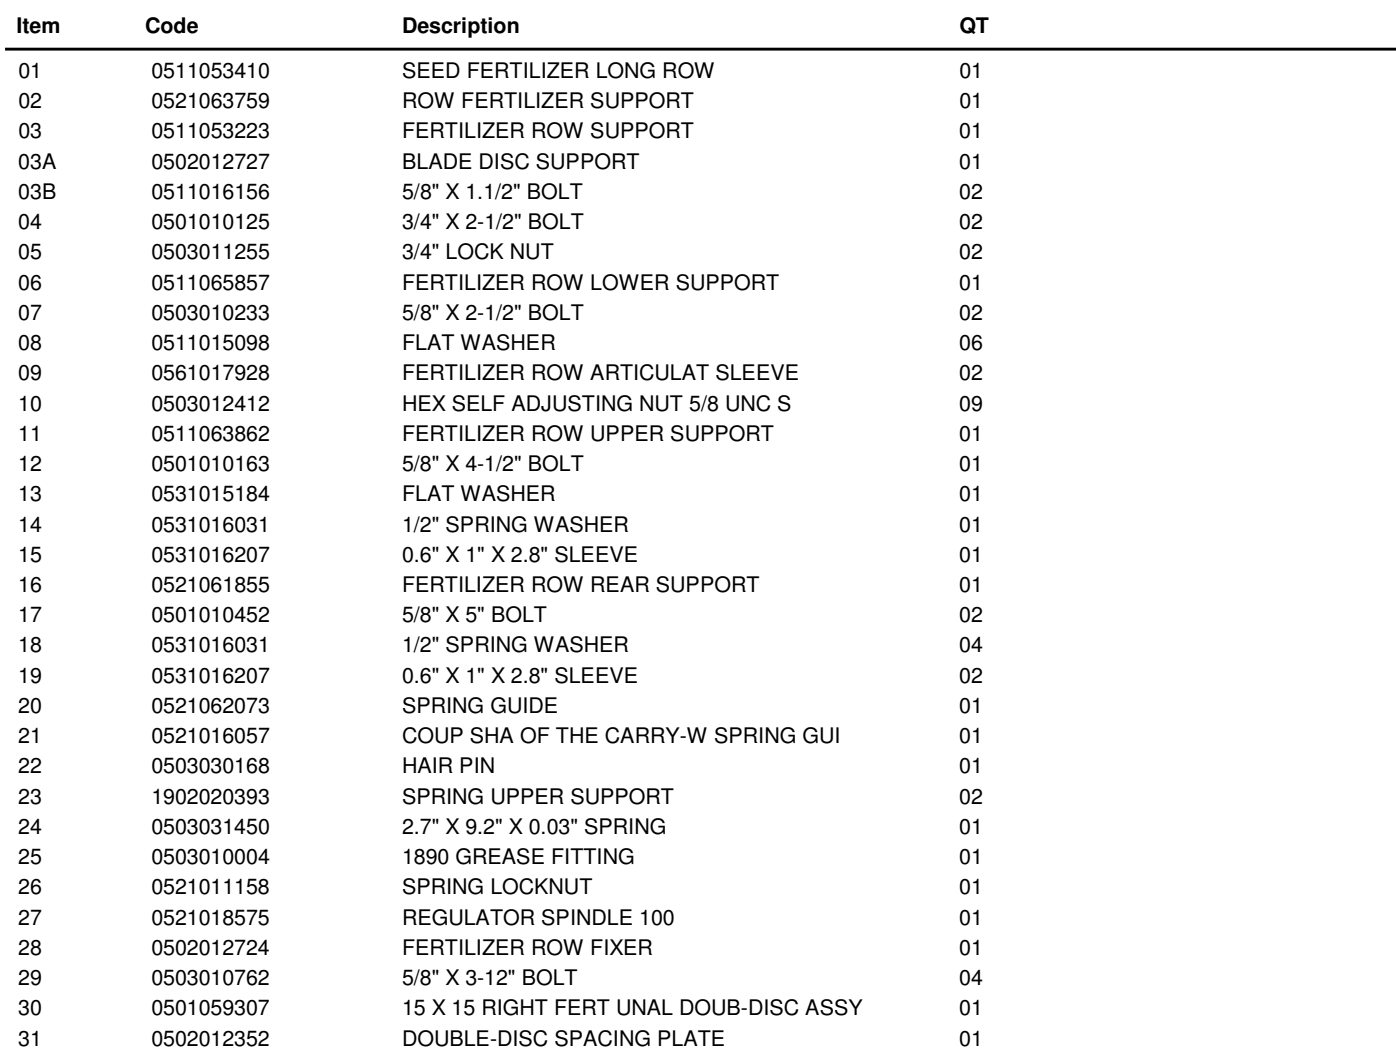

Item	Code	Description	QT
32	0541013035	5.55" X 4.0" X 0.38" PLATE	01
33	0503010740	1/2" X 2" BOLT	02
34	0503010019	1/2" SPRING WASHER	04
35	0503010060	1/2" NUT	04
36	0511018662	SPACING PLATE	02
37	0503010752	1/2" X 3.1/2" BOLT	02
38	0503030520	SEED SOCKET	01
39	0503030408	10 X 2 X 390 HOSE	01
40	0503031076	2" HOSE CLAMP	02
41	0503010003	1845 GREASE FITTING	02

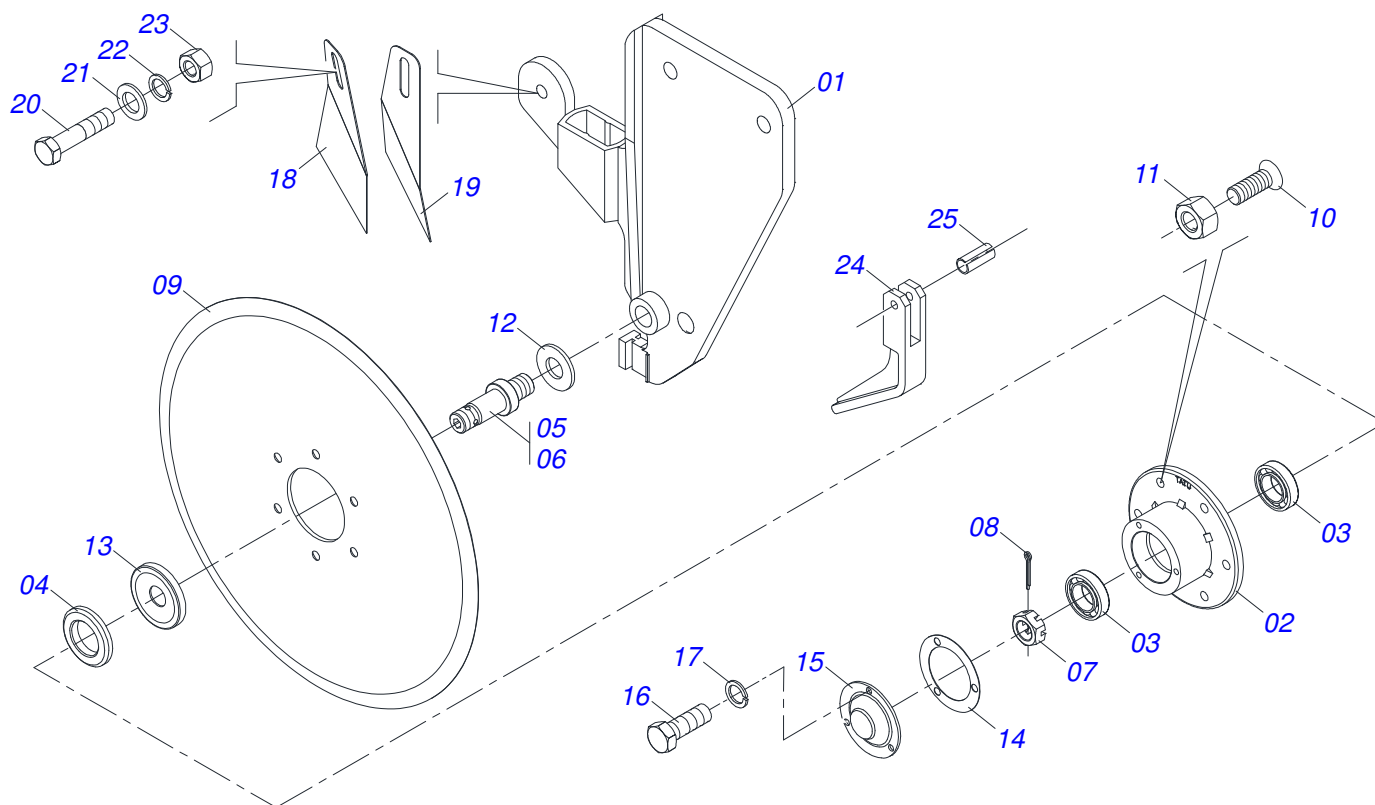


Item	Code	Description	QT
00	0501059308	15" X 15" LEFT FERT UNAL-DD ASSY	01
01	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT	01
02	0502011930	DOUBLE DISC COULTER BOX	02
03	0503010598	30204 BALL BEARING	04
04	0503011112	SEAL 02376-BRG	02
05	0521019154	RIGHT DOUB DISC HUB	01
06	0521019148	LEFT DOUBLE DISC HUB	01
07	0503030282	3/4" CASTLE NUT	02
08	0503010257	1/8" X 1" COTTERPIN	02
09	0603022042	13" X 0.12" PLAIN COULTER BLADE	02
10	0503010546	5/16" X 7/8" BOLT	12
11	0503010337	5/16" NUT	12
12	0511015098	FLAT WASHER	06
13	0511011927	DUST CLOAK	02
14	0503030757	2.9" X 2" X 0.02" JOINT	02
15	0502012517	COVER	02
16	0503014891	1/4" X 3/4" BOLT	06
17	0503011441	SPRING WASHER	06
18	0501017542	LH DOUBLE DISC SCRAPER	01
19	0501017541	RH DOUBLE DISC SCRAPER	01
20	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
21	0501010984	FLAT WASHER	02
22	0503011443	SPRING WASHER	01
23	0503010026	3/8" NUT	01
24	0502070062	SCRAPER	01
25	0503011402	0.2" X 0.8" SPRING PIN	01

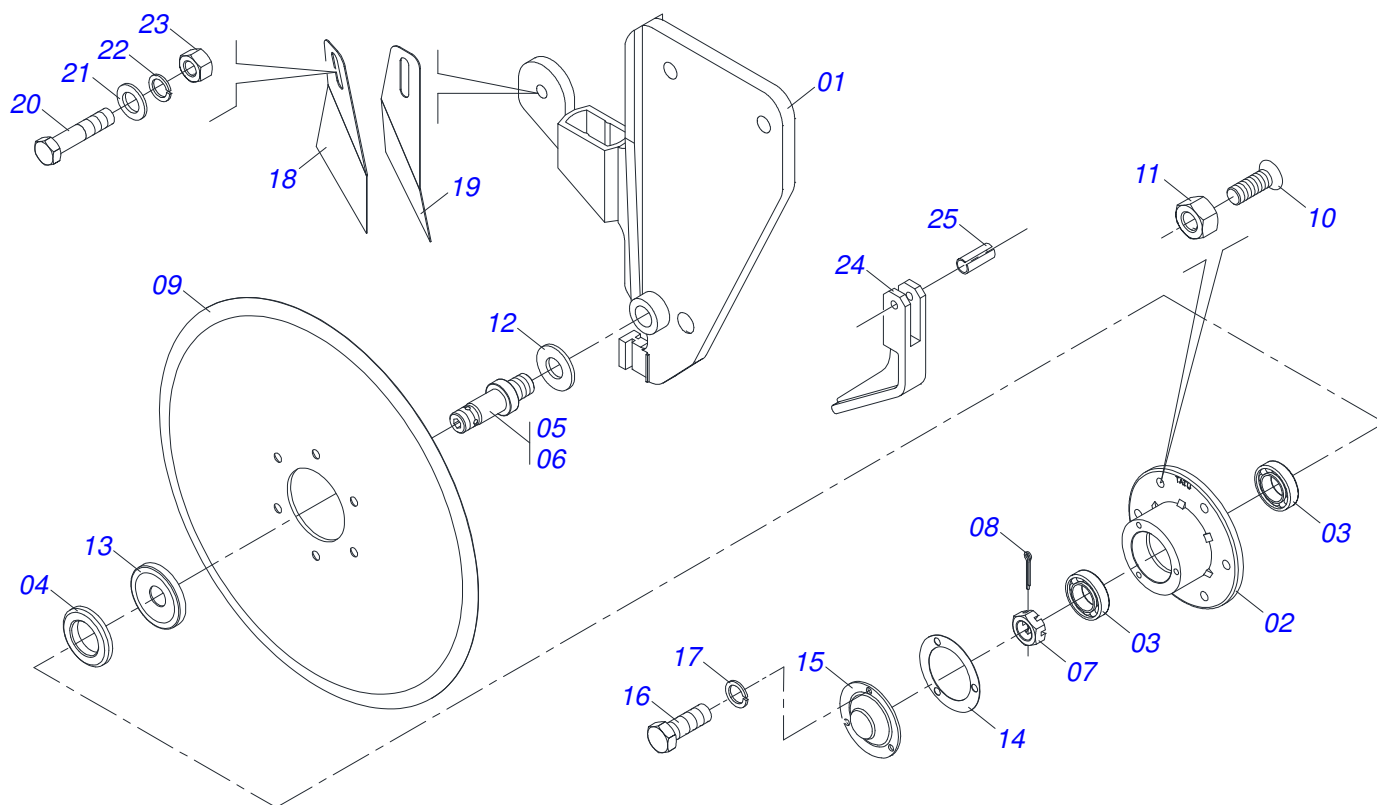


Item	Code	Description	QT
00	0501059307	15 X 15 RIGHT FERT UNAL DOUB-DISC ASSY	01
01	0502011160	15\"X15\" RIGHT DOUBLE DISC SUPPORT	01
02	0502011930	DOUBLE DISC COULTER BOX	02
03	0503010598	30204 BALL BEARING	04
04	0503011112	SEAL 02376-BRG	02
05	0521019154	RIGHT DOUB DISC HUB	01
06	0521019148	LEFT DOUBLE DISC HUB	01
07	0503030282	3/4\" CASTLE NUT	02
08	0503010257	1/8\" X 1\" COTTERPIN	02
09	0603022042	13\" X 0.12\" PLAIN COULTER BLADE	02
10	0503010546	5/16\" X 7/8\" BOLT	12
11	0503010337	5/16\" NUT	12
12	0511015098	FLAT WASHER	06
13	0511011927	DUST CLOAK	02
14	0503030757	2.9\" X 2\" X 0.02\" JOINT	02
15	0502012517	COVER	02
16	0503014891	1/4\" X 3/4\" BOLT	06
17	0503011441	SPRING WASHER	06
18	0501017542	LH DOUBLE DISC SCRAPER	01
19	0501017541	RH DOUBLE DISC SCRAPER	01
20	0503010751	C3/8\" X 1.1/4\" HEX BOLT G.5	01
21	0501010984	FLAT WASHER	02
22	0503011443	SPRING WASHER	01
23	0503010026	3/8\" NUT	01
24	0502070062	SCRAPER	01
25	0503011402	0.2\" X 0.8\" SPRING PIN	01

18" BLADE DISC ASSY


0511051818

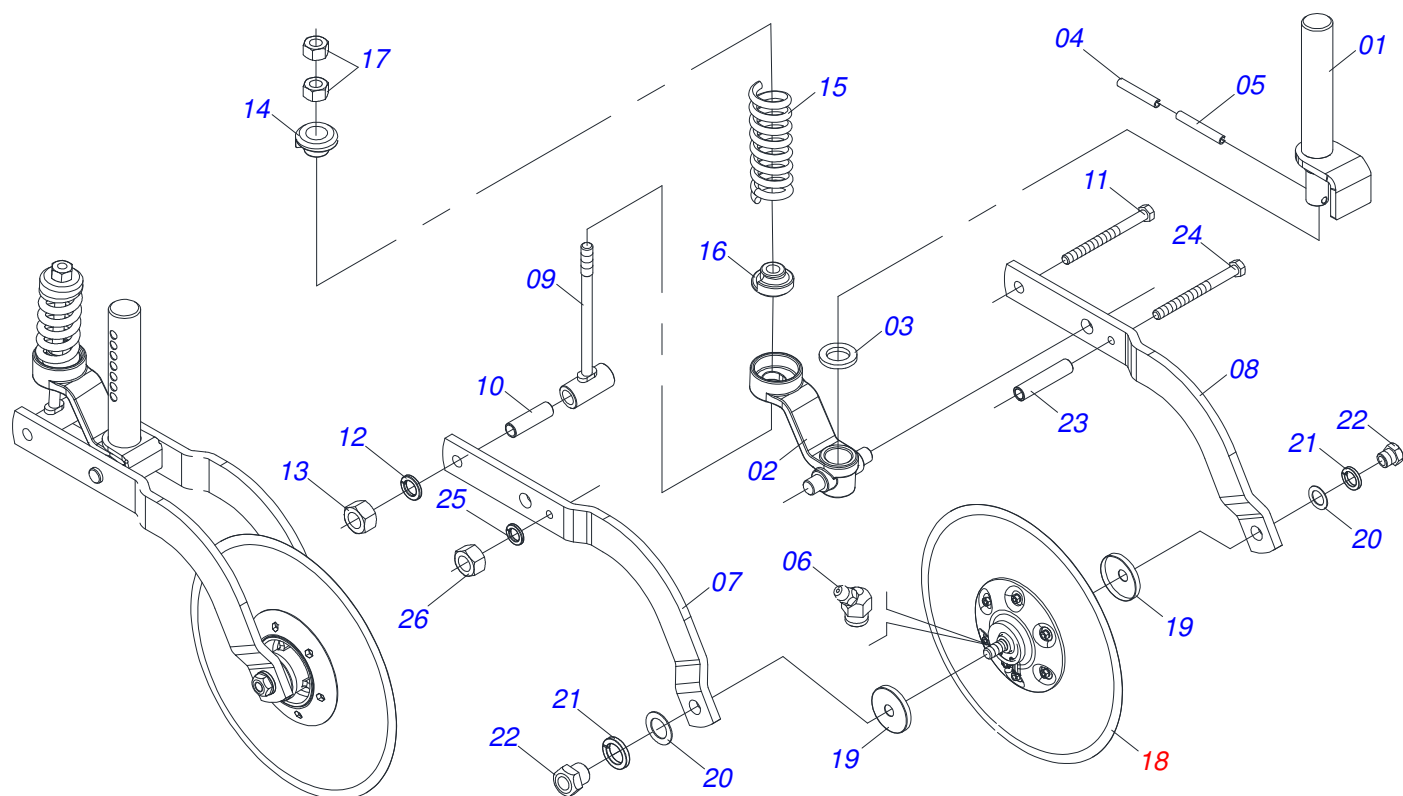


Item	Code	Description	
01	0511051818	18" BLADE DISC ASSY	01
02	0521062962	BLADE DISC AXLE	01
03	0502012369	BLADE DISC SUPPORT	01
04	0541018684	FLAT WASHER	01
05	0503010361	SPRING PIN	01
06	0503010756	0.2" X 2.4" SPRING PIN	01
07	0503010003	1845 GREASE FITTING	01
08	0521018935	RIGHT ARM OF THE BLADE DISC	01
09	0521018936	LEFT ARM OF THE BLADE DISC	01
10	0501067323	SPRING REGULATOR	01
11	0521010452	SLEEVE	01
12	0503013185	3/4" X 5-1/2" BOLT	01
13	0503011255	3/4" LOCK NUT	01
14	0502020393	SPRING UPPER SUPPORT	01
15	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING	01
16	0502020394	SPRING SUPPORT	01
17	0503010014	3/4" NUT	2
18	0501052139	18 BLADE DISC WITH FLAT PLAN DISC	01
19	0521015376	DUST CLOAK	02
20	0511015346	FLAT WASHER	02
21	0503011438	SPRING WASHER	02
22	0521013510	3/4" NUT	02
23	0571010188	13,50 X 19 X 86,30/86 SLEEVE	01
24	0503011411	1/2" X 5-1/2" BOLT	01
25	0503011440	SPRING WASHER	01
26	0503010060	1/2" NUT	01

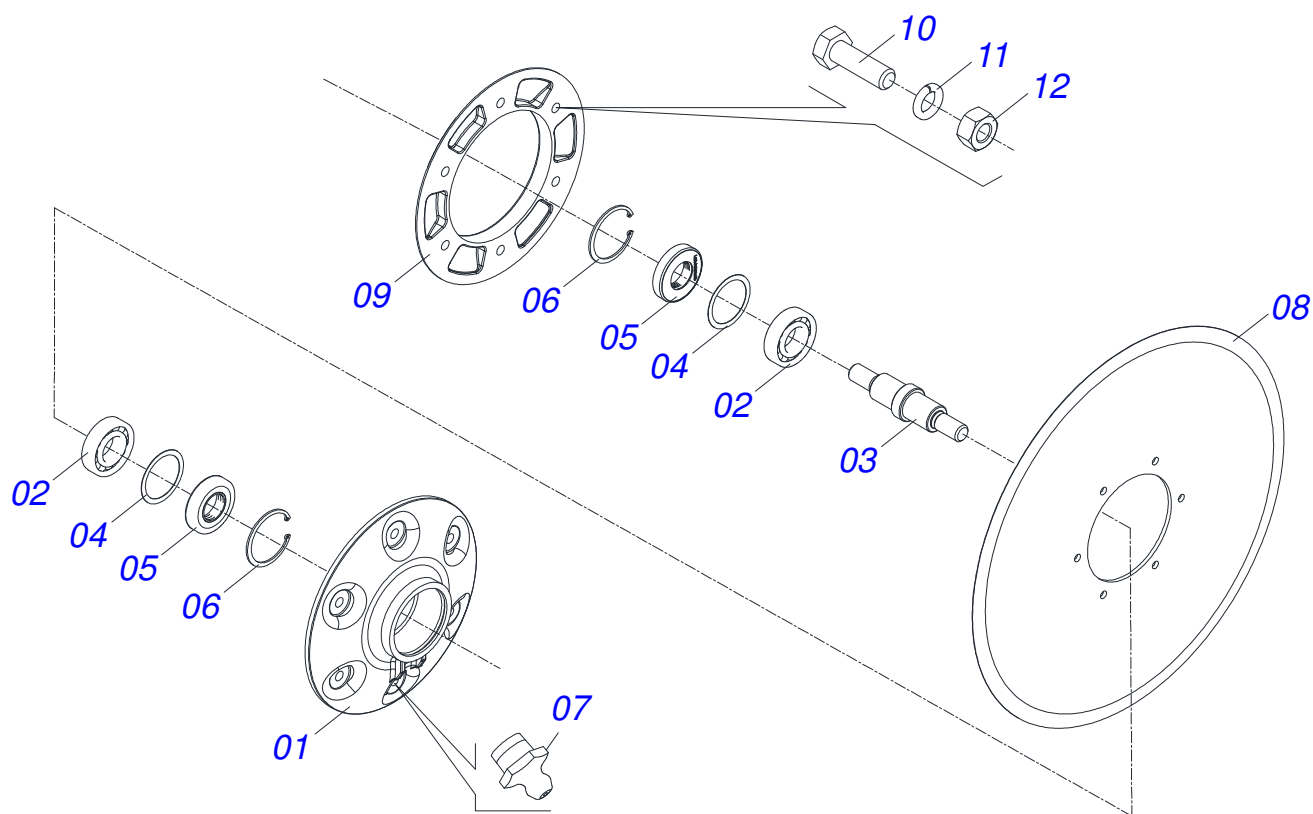


Item	Code	Description	QT
01	0502011562	DC PST ACT/ULTR BOX	01
02	0503010276	6206 BALL BEARING	02
03	0521013610	BLADE DISC HUB AXLE	01
04	0503030832	FLAT WASHER	02
05	0503012417	SEAL	02
06	0503011800	SEAL RING	02
07	0503010691	1/4" GREASE FITTING	01
08	0603026013	PLAIN COULTER BLADE	01
09	0502020641	BLADE DISC FLANGE	01
10	0503010371	5/16" X 1" BOLT	06
11	0503011444	SPRING WASHER	06
12	0503010337	5/16" NUT	06

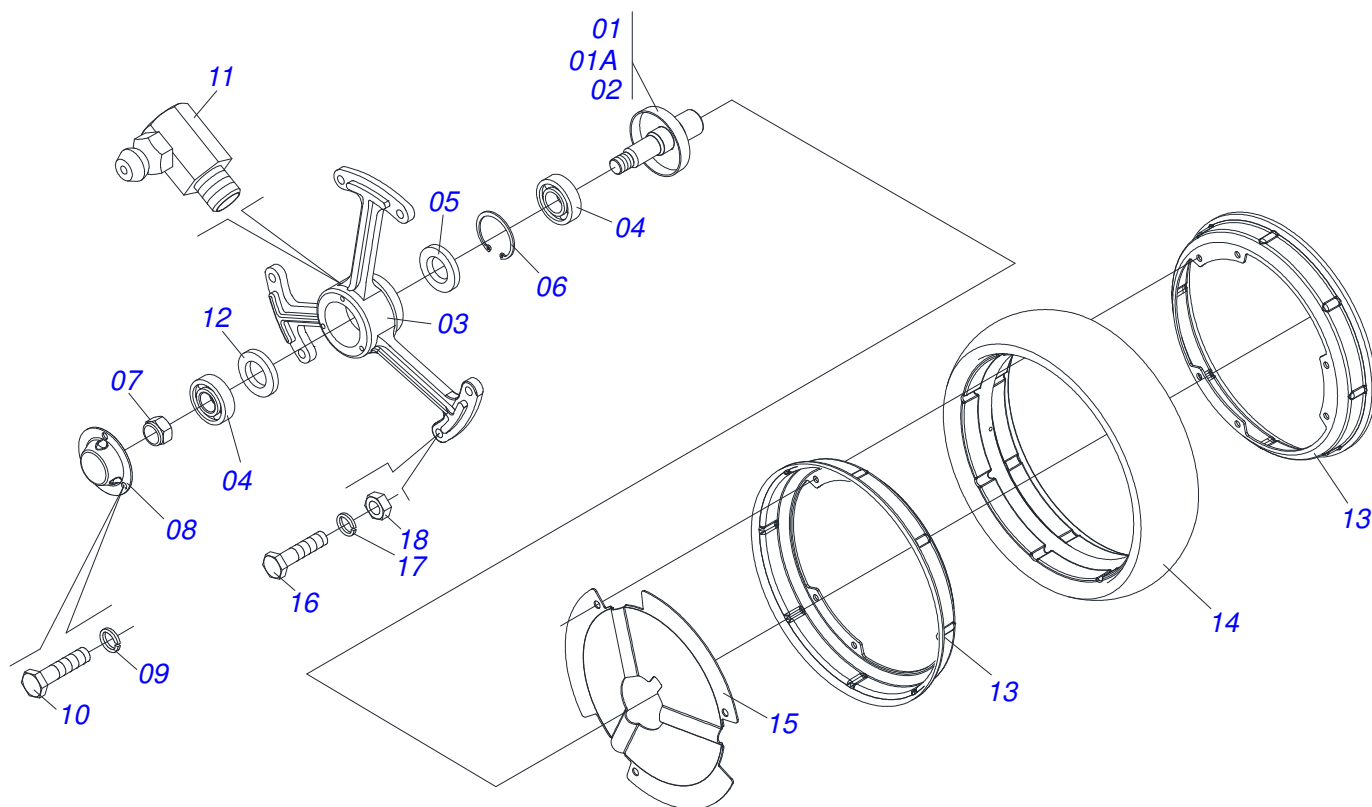


Item	Code	Description	QT
01	0511054827	CLOSE WHEEL STRIPED CENTER	01
01A	0511052287	DEPTH WHEEL HUB ASSY	01
02	0521063443	DEPTH CONTROL AXLE	01
03	0502011918	DEPHT WHEELS BOX	01
04	0503010269	6204 BALL BEARING	02
05	0503010689	SEAL 00763-BR	01
06	0503011105	SEAL RING	01
07	0503010811	5/8" UNF SELF ADJUSTING NUT	01
08	0521019178	COVER DEPTH	01
09	0503011441	SPRING WASHER	03
10	0503010298	1/4" X 1/2" BOLT	03
11	0503010691	1/4" GREASE FITTING	01
12	0501013636	SPACING SLEEVE	01
13	0551019904	PRESS WHEEL RIM	02
14	0503032970	RUBBER BAND	01
15	0561016889	STRIPED CAP WHEEL DEPTH	01
16	0503010365	NUT	06
17	0503010179	SPRING WASHER	06
18	0503010337	5/16" NUT	06

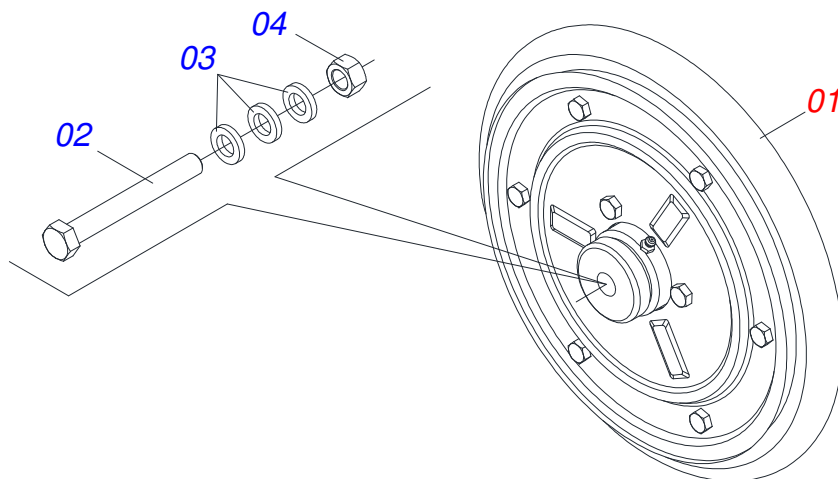

Item	Code	Description	QT
01	0501052908	PRESS WHEELS ASSY	01
02	0503016449	1/2 X 4 BOLT	01
03	0521014508	FLAT WASHER	03
04	0503012136	1 X 9 BOLT	01

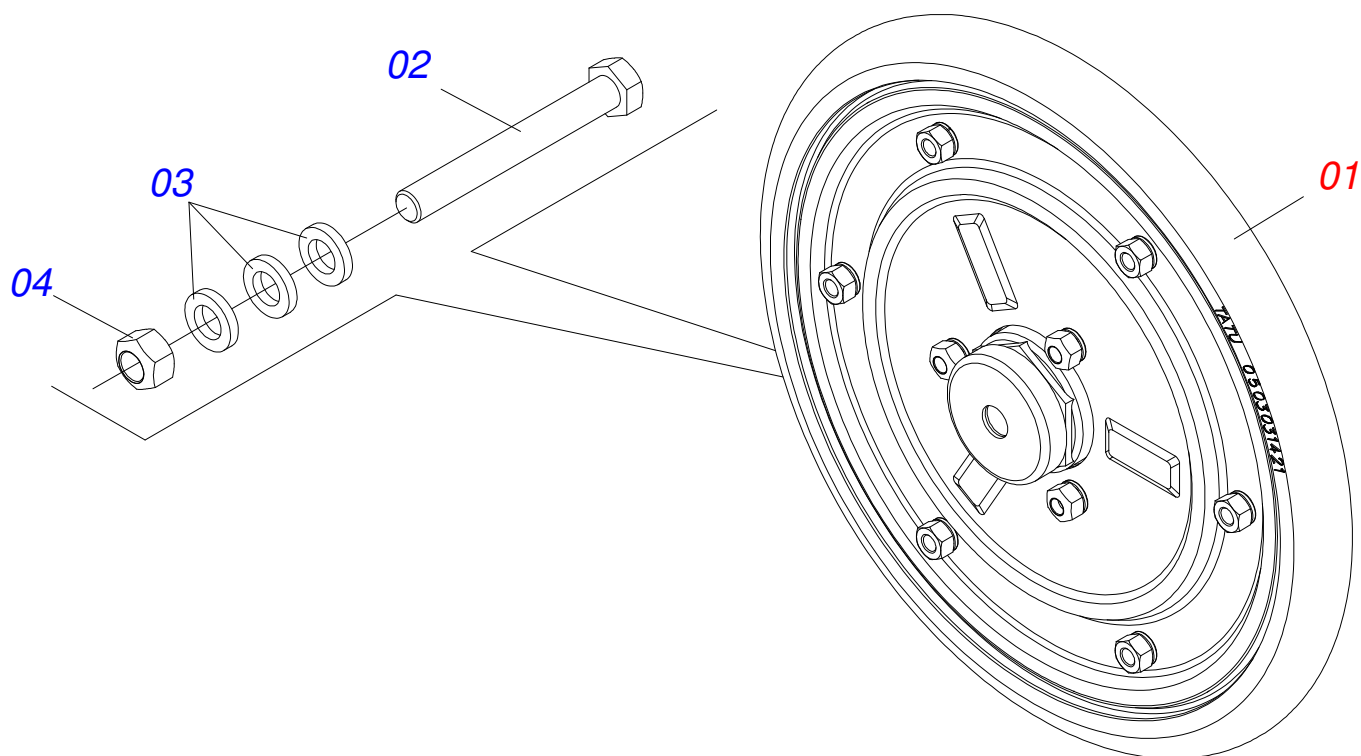


Item	Code	Description	QT
001	0501052908	PRESS WHEELS ASSY	01
002	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT	01
003	0521014508	FLAT WASHER	03
004	0503016864	LH 1/2" LOCK NUT	01

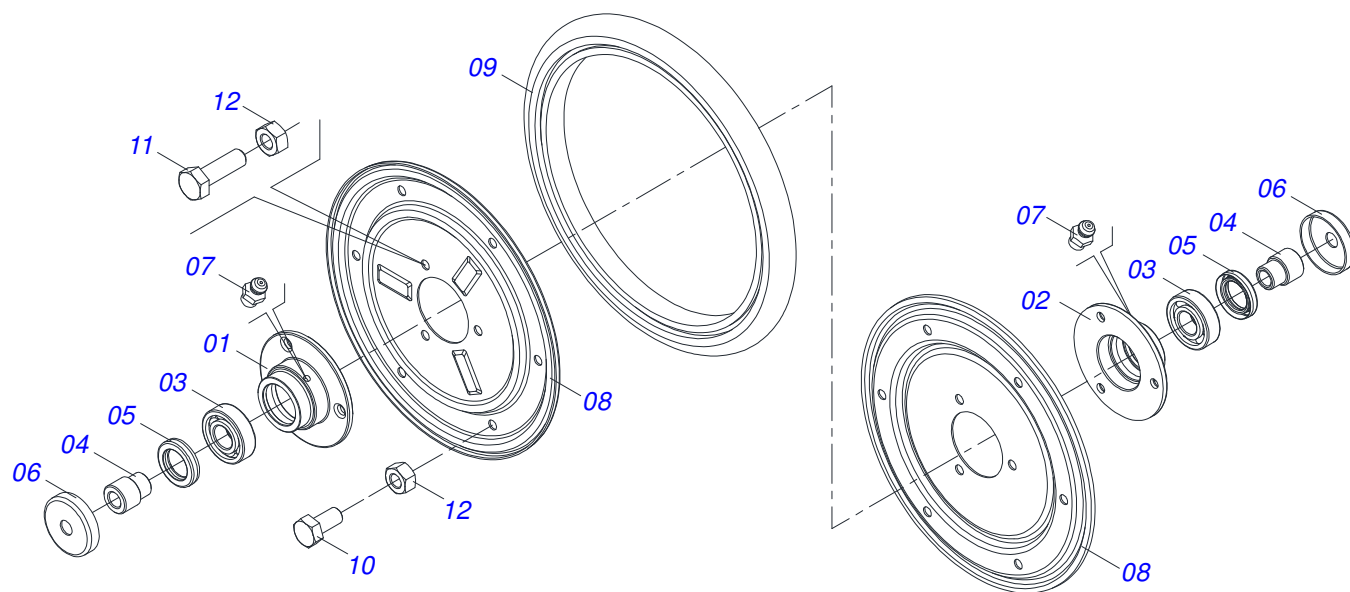

Item	Code	Description	QT
01	0502011919	PRESS WHEEL HUB	01
02	0502011877	PRESS WHEEL HUB	01
03	0503010269	6204 BALL BEARING	02
04	0521018922	PRESS WHEEL PASSANG AXLE	02
05	0503012734	SEAL 01556 BR	02
06	0521018921	DUST CLOAK	02
07	0503010691	1/4" GREASE FITTING	01
08	0521018928	PRESS WHEEL RIM	02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND	01
10	0503010011	5/16" X 1/2" BOLT	06
11	0503010358	5/16" X 5/8" BOLT	03
12	0503013816	5/16" LOCKNUT	03

HEX AXLE ASSEMBLY


0511053381

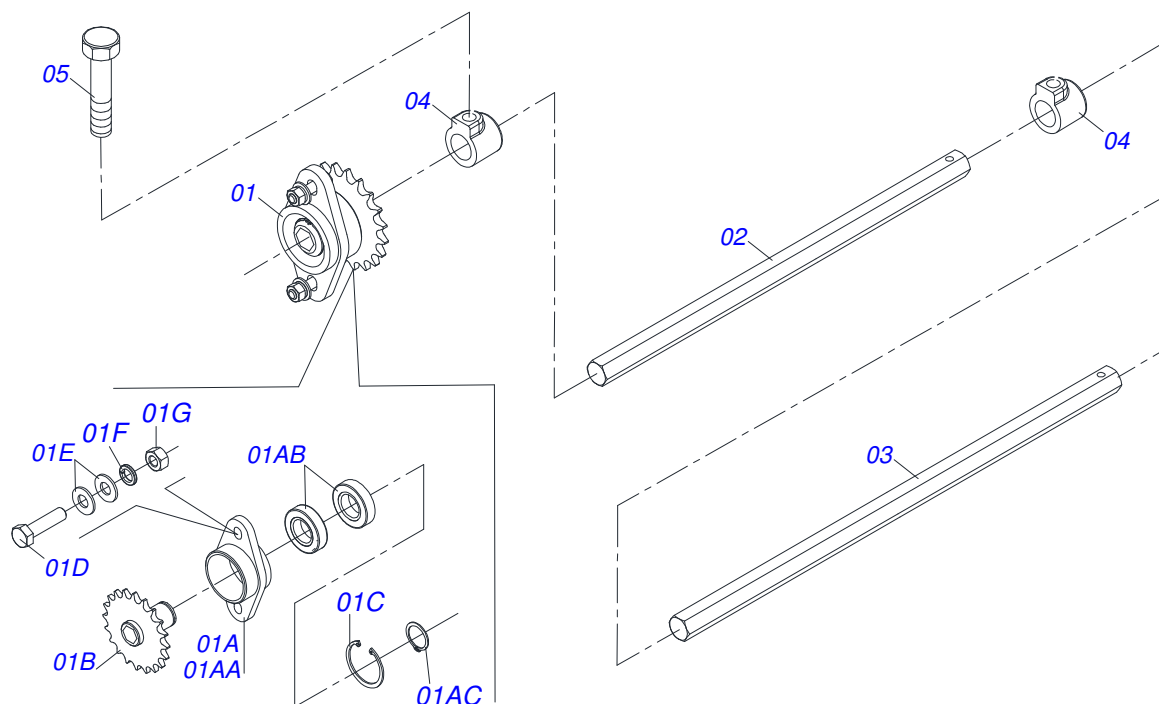

Item	Code	Description	11 L
001	0501053608	BEARING ASSY WITH GEAR 20Z & 5/8" HEX AXLE	02
001A	0501053609	5/8 DOUB BEARING OF THE SEED TRANSM	01
001AA	0502011987	DOUBLE HOUSING BEARING	01
001AB	0503011410	ROLLER BEARING	02
001AC	0503011105	SEAL RING	01
001B	0511063106	20Z AXLE BEARING DOBLE	01
001C	0503010406	501025 CLAMPING RING (FOR AXLE)	02
001D	0503010365	NUT	02
001E	0501010694	FLAT WASHER	04
001F	0503010179	SPRING WASHER	02
001G	0503010337	5/16" NUT	02
002	0531016944	RIGHT 5/8" X 96" HEX AXLE	01
003	0531016945	LEFT 5/8" X 90" HEX AXLE	01
004	0511063123	BUSHING WITH NUT	04
005	0503010834	1/2 X 1 BOLT	04

HEX AXLE ASSEMBLY


0511053424

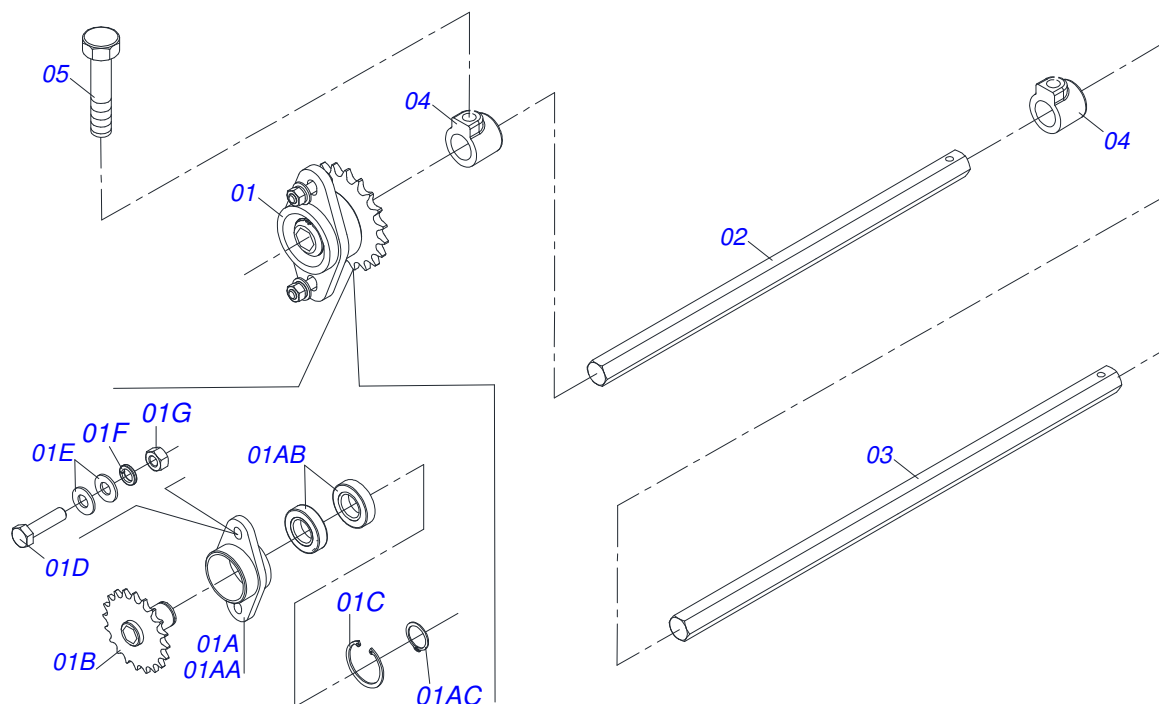

Item	Code	Description	09 L
001	0501053608	BEARING ASSY WITH GEAR 20Z & 5/8" HEX AXLE	02
001A	0501053609	5/8 DOUB BEARING OF THE SEED TRANSM	01
001AA	0502011987	DOUBLE HOUSING BEARING	01
001AB	0503011410	ROLLER BEARING	02
001AC	0503011105	SEAL RING	01
001B	0511063106	20Z AXLE BEARING DOBLE	01
001C	0503010406	501025 CLAMPING RING (FOR AXLE)	02
001D	0503010365	NUT	02
001E	0501010694	FLAT WASHER	04
001F	0503010179	SPRING WASHER	02
001G	0503010337	5/16" NUT	02
002	0531016942	5/8 X 2050 HEX AXLE	01
003	0531016943	5/8" X 75" AXLE HEX	01
004	0511063123	BUSHING WITH NUT	04
005	0503010834	1/2 X 1 BOLT	04

HEX AXLE ASSEMBLY


0511053361

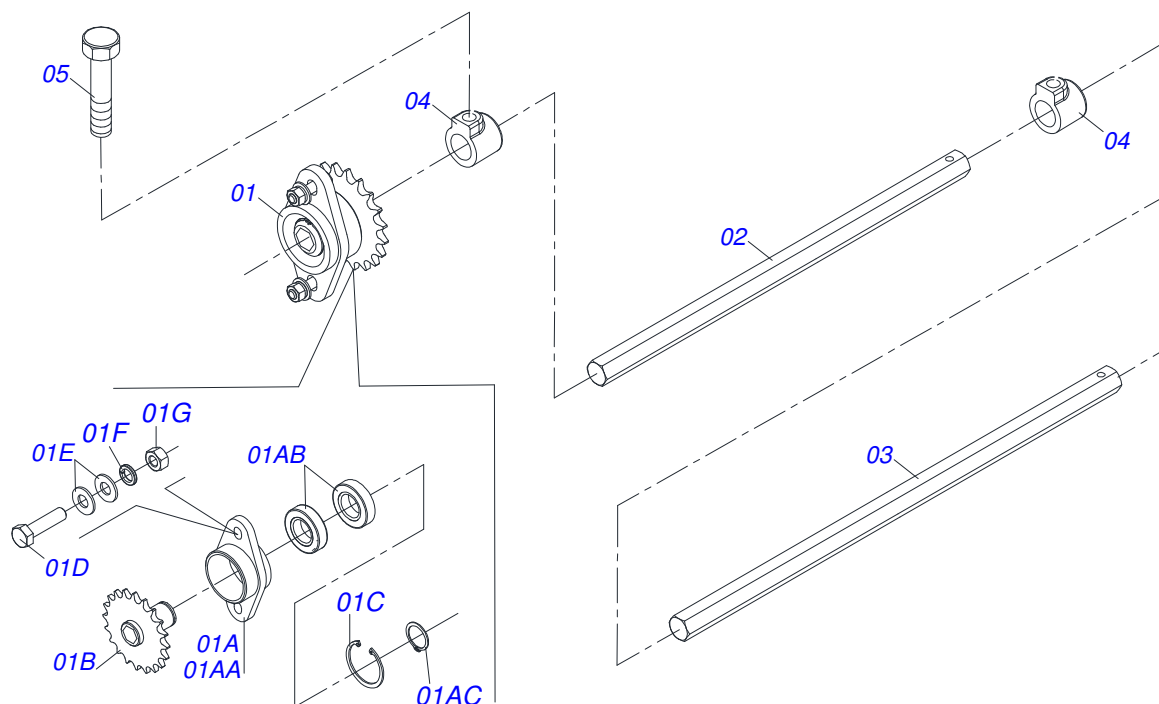


Item	Code	Description	13 L
001	0501053608	BEARING ASSY WITH GEAR 20Z & 5/8" HEX AXLE	02
001A	0501053609	5/8 DOUB BEARING OF THE SEED TRANSM	01
001AA	0502011987	DOUBLE HOUSING BEARING	01
001AB	0503011410	ROLLER BEARING	02
001AC	0503011105	SEAL RING	01
001B	0511063106	20Z AXLE BEARING DOBLE	01
001C	0503010406	501025 CLAMPING RING (FOR AXLE)	02
001D	0503010365	NUT	02
001E	0501010694	FLAT WASHER	04
001F	0503010179	SPRING WASHER	02
001G	0503010337	5/16" NUT	02
002	0531016946	5/8" X 114" AXLE HEX	01
003	0531016947	LEFT 5/8" X 108" AXLE HEX	01
004	0511063123	BUSHING WITH NUT	04
005	0503010834	1/2 X 1 BOLT	04

HEX AXLE ASSEMBLY


0511053456

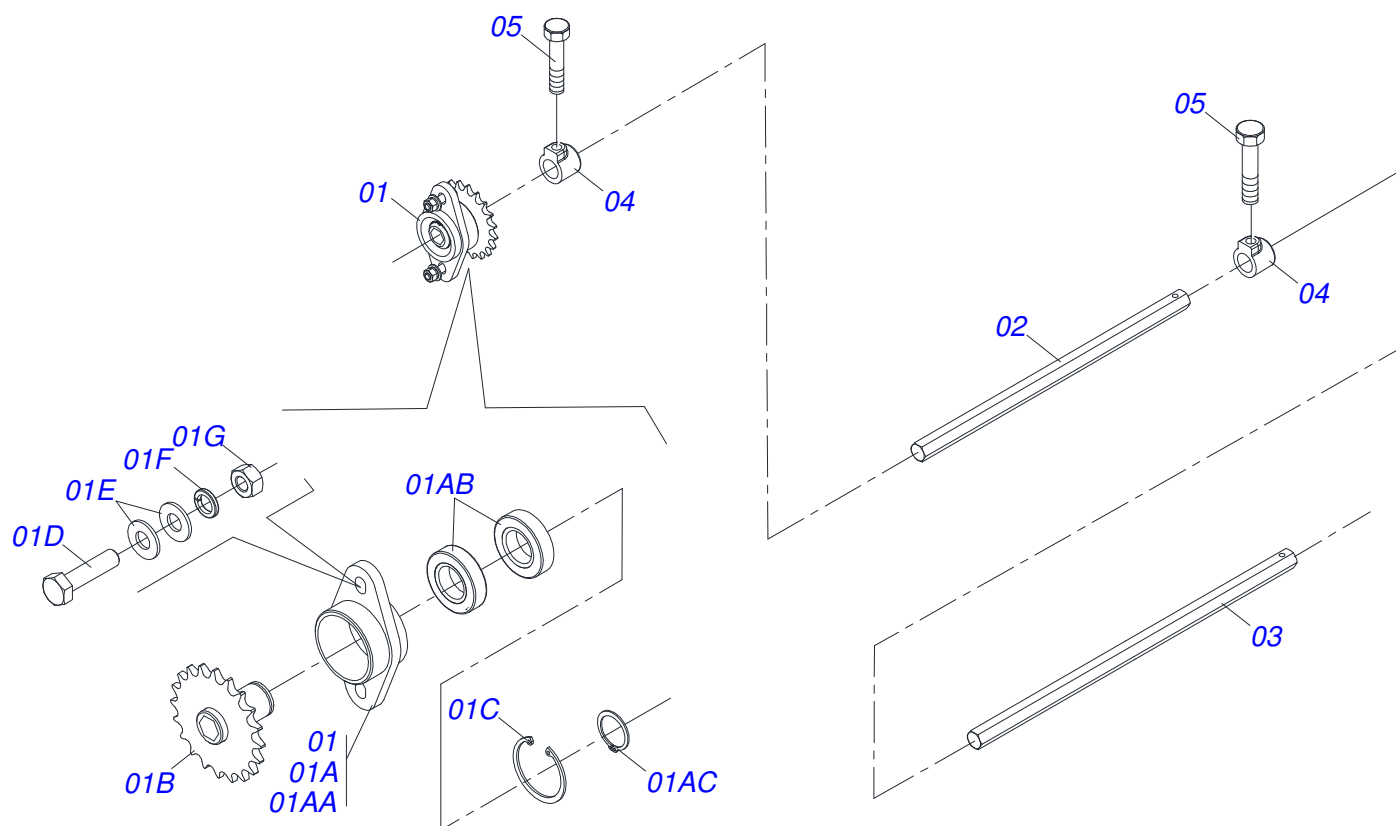


Item	Code	Description	15 L
001	0501053608	BEARING ASSY WITH GEAR 20Z & 5/8" HEX AXLE	02
001A	0501053609	5/8 DOUB BEARING OF THE SEED TRANSM	01
001AA	0502011987	DOUBLE HOUSING BEARING	01
001AB	0503011410	ROLLER BEARING	02
001AC	0503011105	SEAL RING	01
001B	0511063106	20Z AXLE BEARING DOBLE	01
001C	0503010406	501025 CLAMPING RING (FOR AXLE)	02
001D	0503010365	NUT	02
001E	0501010694	FLAT WASHER	04
001F	0503010179	SPRING WASHER	02
001G	0503010337	5/16" NUT	02
002	0531016948	RIGHT 5/8" X 131" AXLE HEX	01
003	0531016949	LEFT 5/8" X 125" AXLE HEX	01
004	0511063123	BUSHING WITH NUT	04
005	0503010834	1/2 X 1 BOLT	04

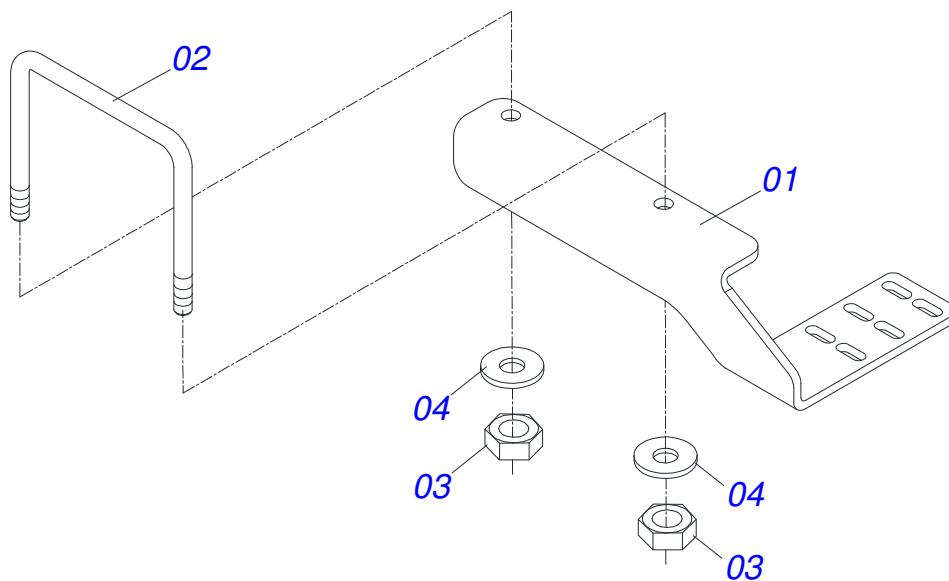

Item	Code	Description	QT
001	0561019899	RIGHT SUPPORT FIXER RECAMBIO	01
002	0521010718	5/8" U BOLT	01
003	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
004	0501012140	FLAT WASHER	02

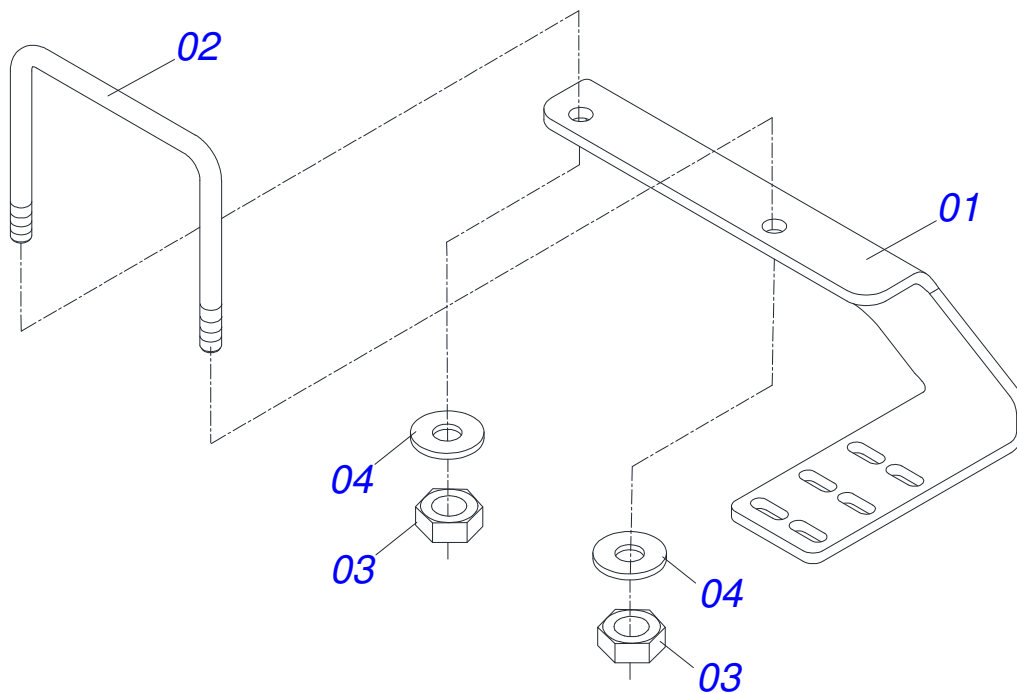


Item	Code	Description	QT
001	0561019898	LEFT SUPPORT FIXER RECAMBIO	01
002	0521010718	5/8" U BOLT	01
003	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
004	0501012140	FLAT WASHER	02

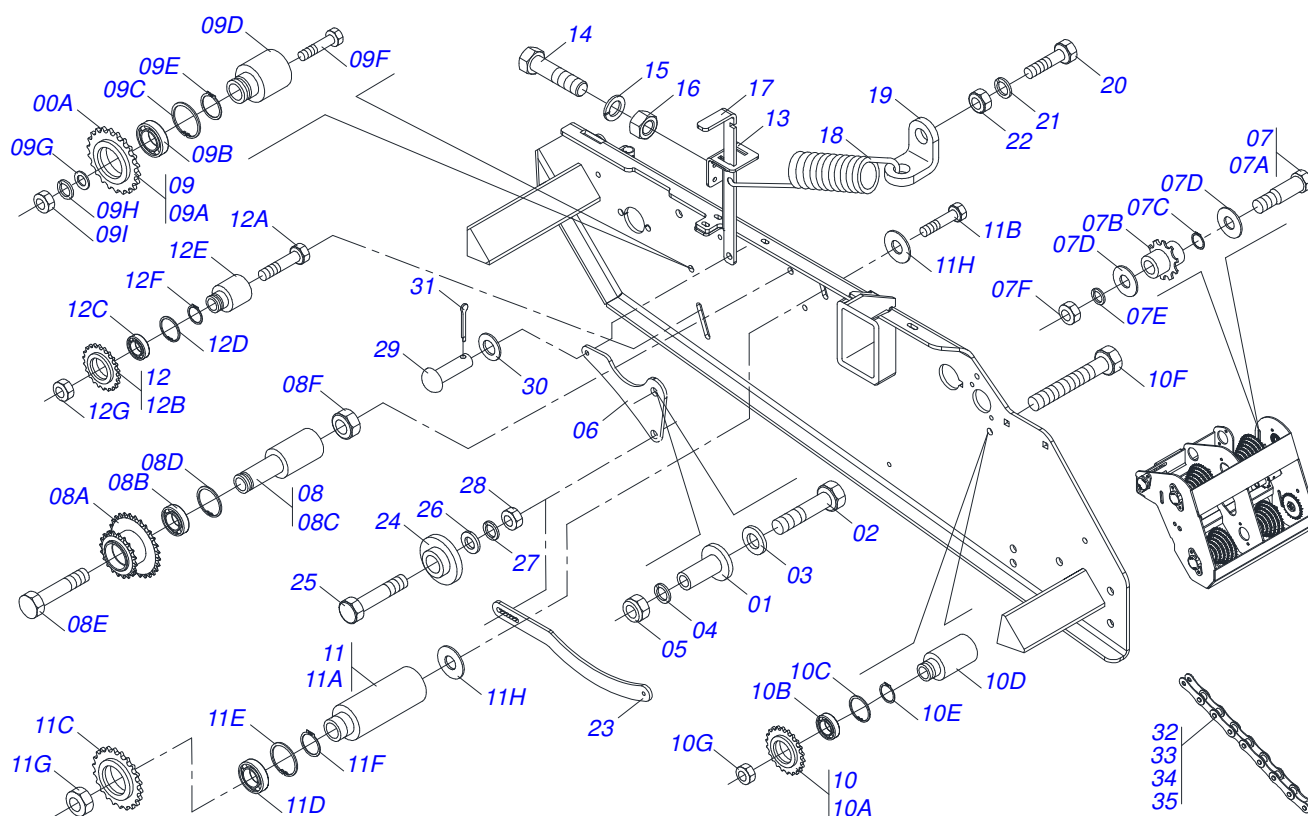


Item	Code	Description	QT
001	0561018212	ARTICULAT SLEEVE	01
002	0503010547	1/2" X 4" BOLT	01
003	0511017302	FLAT WASHER	01
004	0503010019	1/2" SPRING WASHER	01
005	0503010060	1/2" NUT	01
006	0561017281	ARTICULACION ARM	01
007	0511053366	CHAIN TENSIONER	01
007A	0531019479	AXLE CHAIN GEAR	01
007B	0503031805	11Z 1/2" GEAR	01
007C	0503010302	501019 SEAL RING	01
007D	0511017302	FLAT WASHER	02
007E	0503010019	1/2" SPRING WASHER	01
007F	0503010060	1/2" NUT	01
008	0511050385	BEARING WITH	01
008A	0521061843	20Z DOBLE GEAR	01
008B	0503011410	ROLLER BEARING	02
008C	0551019175	DOUBLE GEAR AXLE	01
008D	0503010406	501025 CLAMPING RING (FOR AXLE)	01
008E	0501010163	5/8" X 4-1/2" BOLT	01
008F	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
009	0501058265	LOWER CHAIN TENSIONER ASSY	01
009A	0511062169	21Z P 1/2" GEAR	01
009B	0503011410	ROLLER BEARING	01
009C	0503011105	SEAL RING	01
009D	0531017086	50 AXLETIGHTENER	01
009E	0503010406	501025 CLAMPING RING (FOR AXLE)	01
009F	0503010762	5/8" X 3-12" BOLT	01
009G	0501012140	FLAT WASHER	01
009H	0503010027	SPRING WASHER	01
009I	0503010013	5/8" NUT	01
010	0511056387	INNER BEARING	01
010A	0511062169	21Z P 1/2" GEAR	01
010B	0503011410	ROLLER BEARING	01

Item	Code	Description	QT
010C	0503011105	SEAL RING	01
010D	0531017086	50 AXLETIGHTENER	01
010E	0503010406	501025 CLAMPING RING (FOR AXLE)	01
010F	0503010762	5/8" X 3-12" BOLT	01
010G	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
011	0511050127	CHAIN TENSIONER SUPPORT	01
011A	0561015677	CHAIN TIGHTENER AXLE	01
011B	0501010452	5/8" X 5" BOLT	01
011C	0511062169	21Z P 1/2" GEAR	01
011D	0503011410	ROLLER BEARING	01
011E	0503011105	SEAL RING	01
011F	0503010406	501025 CLAMPING RING (FOR AXLE)	01
011G	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
011H	0501012140	FLAT WASHER	02
012	0501053126	FERTILIZER CHAIN TENSIONER ASSY	01
012A	0501011541	5/8" X 3" BOLT	01
012B	0511062169	21Z P 1/2" GEAR	01
012C	0503011410	ROLLER BEARING	01
012D	0503011105	SEAL RING	01
012E	0521018415	TIGHTENER AXLE	01
012F	0503010406	501025 CLAMPING RING (FOR AXLE)	01
012G	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
013	0561017275	LEVER FIXER	01
014	0503010237	3/8" X 1" BOLT	02
015	0503010025	3/8 SPRING WASHER	02
016	0503010026	3/8" NUT	02
017	0561017280	LH LEVER DISASSEMBLE (COP 11)	01
018	0503030093	TRACTION SPRING	01
019	0561017273	FIXER SPRING	01
020	0503010237	3/8" X 1" BOLT	01
021	0503010025	3/8 SPRING WASHER	01
022	0503010026	3/8" NUT	01
023	0561017282	LOWER LEVER	01
024	0561016797	SLEEVE UNION LEVER ARM/DESARM	01
025	0503011082	C1/2" X 1.3/4" BOLT	01
026	0511017302	FLAT WASHER	02
027	0503010019	1/2" SPRING WASHER	01
028	0503010060	1/2" NUT	01
029	0521010773	0.37" X 1.18" COUPLING SHAFT	02
030	0501010984	FLAT WASHER	01
031	0503010140	1/8" X 3/4" COTTERPIN	02
032	0503012143	78 CHAIN X 40-1 LINK + REDUCTION	01
033	0503012717	40-1 CHAIN X 101 LINK + MENDING	01
034	0503016737	40-1 X 114 CHAIN LINK + REDUCION	01
035	0503011721	40-1 CHAIN X 122 LINK + REDUCTION	01

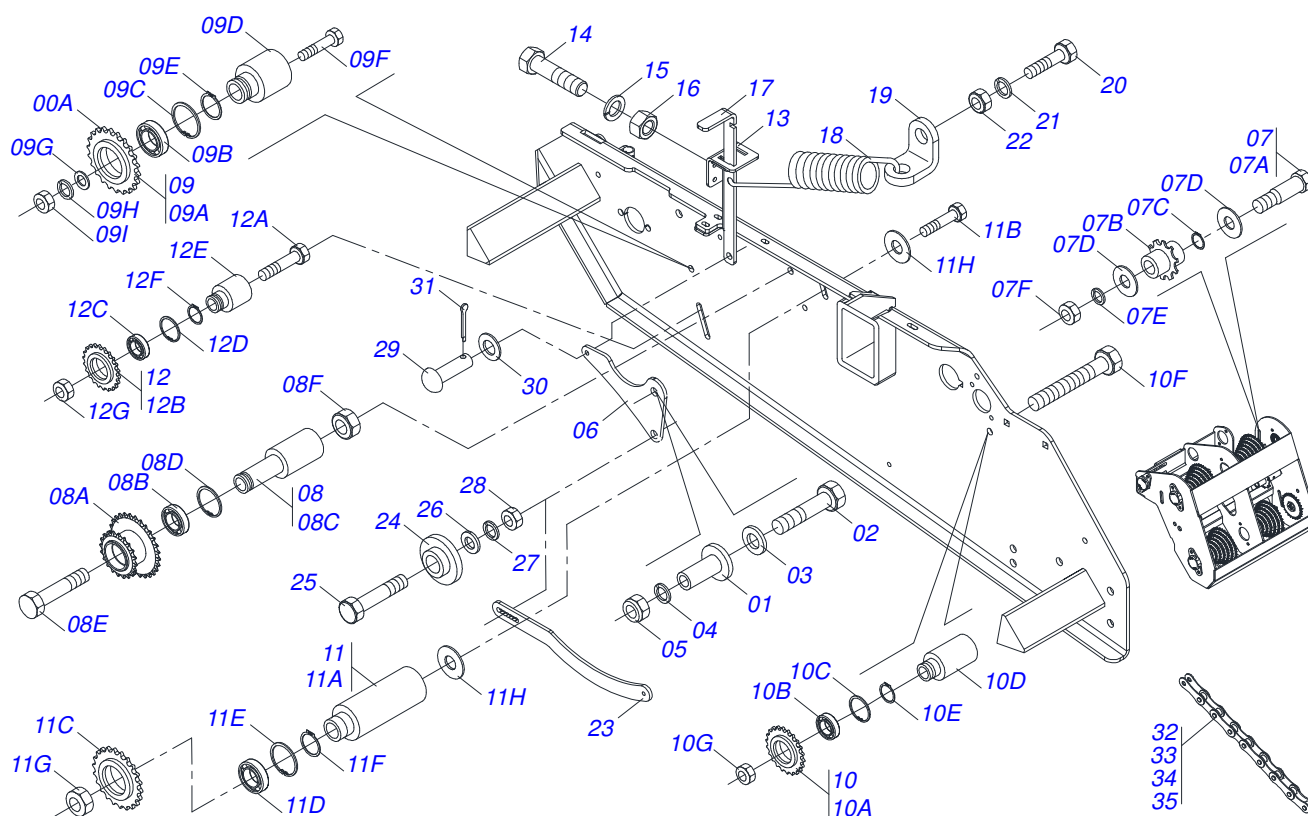


Item	Code	Description	QT
001	0561018212	ARTICULAT SLEEVE	01
002	0503010547	1/2" X 4" BOLT	01
003	0511017302	FLAT WASHER	01
004	0503010019	1/2" SPRING WASHER	01
005	0503010060	1/2" NUT	01
006	0561017281	ARTICULACION ARM	01
007	0511053366	CHAIN TENSIONER	01
007A	0531019479	AXLE CHAIN GEAR	01
007B	0503031805	11Z 1/2" GEAR	01
007C	0503010302	501019 SEAL RING	01
007D	0511017302	FLAT WASHER	02
007E	0503010019	1/2" SPRING WASHER	01
007F	0503010060	1/2" NUT	01
008	0511050385	BEARING WITH	01
008A	0521061843	20Z DOBLE GEAR	01
008B	0503011410	ROLLER BEARING	02
008C	0551019175	DOUBLE GEAR AXLE	01
008D	0503010406	501025 CLAMPING RING (FOR AXLE)	01
008E	0501010163	5/8" X 4-1/2" BOLT	01
008F	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
009	0501058265	LOWER CHAIN TENSIONER ASSY	01
009A	0511062169	21Z P 1/2" GEAR	01
009B	0503011410	ROLLER BEARING	01
009C	0503011105	SEAL RING	01
009D	0531017086	50 AXLETIGHTENER	01
009E	0503010406	501025 CLAMPING RING (FOR AXLE)	01
009F	0503010762	5/8" X 3-12" BOLT	01
009G	0501012140	FLAT WASHER	01
009H	0503010027	SPRING WASHER	01
009I	0503010013	5/8" NUT	01
010	0511056387	INNER BEARING	01
010A	0511062169	21Z P 1/2" GEAR	01
010B	0503011410	ROLLER BEARING	01

Item	Code	Description	QT
010C	0503011105	SEAL RING	01
010D	0531017086	50 AXLETIGHTENER	01
010E	0503010406	501025 CLAMPING RING (FOR AXLE)	01
010F	0503010762	5/8" X 3-12" BOLT	01
010G	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
011	0511050127	CHAIN TENSIONER SUPPORT	01
011A	0561015677	CHAIN TIGHTENER AXLE	01
011B	0501010452	5/8" X 5" BOLT	01
011C	0511062169	21Z P 1/2" GEAR	01
011D	0503011410	ROLLER BEARING	01
011E	0503011105	SEAL RING	01
011F	0503010406	501025 CLAMPING RING (FOR AXLE)	01
011G	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
011H	0501012140	FLAT WASHER	02
012	0501053126	FERTILIZER CHAIN TENSIONER ASSY	01
012A	0501011541	5/8" X 3" BOLT	01
012B	0511062169	21Z P 1/2" GEAR	01
012C	0503011410	ROLLER BEARING	01
012D	0503011105	SEAL RING	01
012E	0521018415	TIGHTENER AXLE	01
012F	0503010406	501025 CLAMPING RING (FOR AXLE)	01
012G	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	01
013	0561017275	LEVER FIXER	01
014	0503010237	3/8" X 1" BOLT	02
015	0503010025	3/8 SPRING WASHER	02
016	0503010026	3/8" NUT	02
017	0561017279	RH LEVER DISASSEMBLE (COP 11)	01
018	0503030093	TRACTION SPRING	01
019	0561017273	FIXER SPRING	01
020	0503010237	3/8" X 1" BOLT	01
021	0503010025	3/8 SPRING WASHER	01
022	0503010026	3/8" NUT	01
023	0561017282	LOWER LEVER	01
024	0561016797	SLEEVE UNION LEVER ARM/DESARM	01
025	0503011082	C1/2" X 1.3/4" BOLT	01
026	0511017302	FLAT WASHER	02
027	0503010019	1/2" SPRING WASHER	01
028	0503010060	1/2" NUT	01
029	0521010773	0.37" X 1.18" COUPLING SHAFT	02
030	0501010984	FLAT WASHER	01
031	0503010140	1/8" X 3/4" COTTERPIN	02
032	0503012143	78 CHAIN X 40-1 LINK + REDUCTION	01
033	0503012717	40-1 CHAIN X 101 LINK + MENDING	01
034	0503016737	40-1 X 114 CHAIN LINK + REDUCION	01
035	0503011721	40-1 CHAIN X 122 LINK + REDUCTION	01

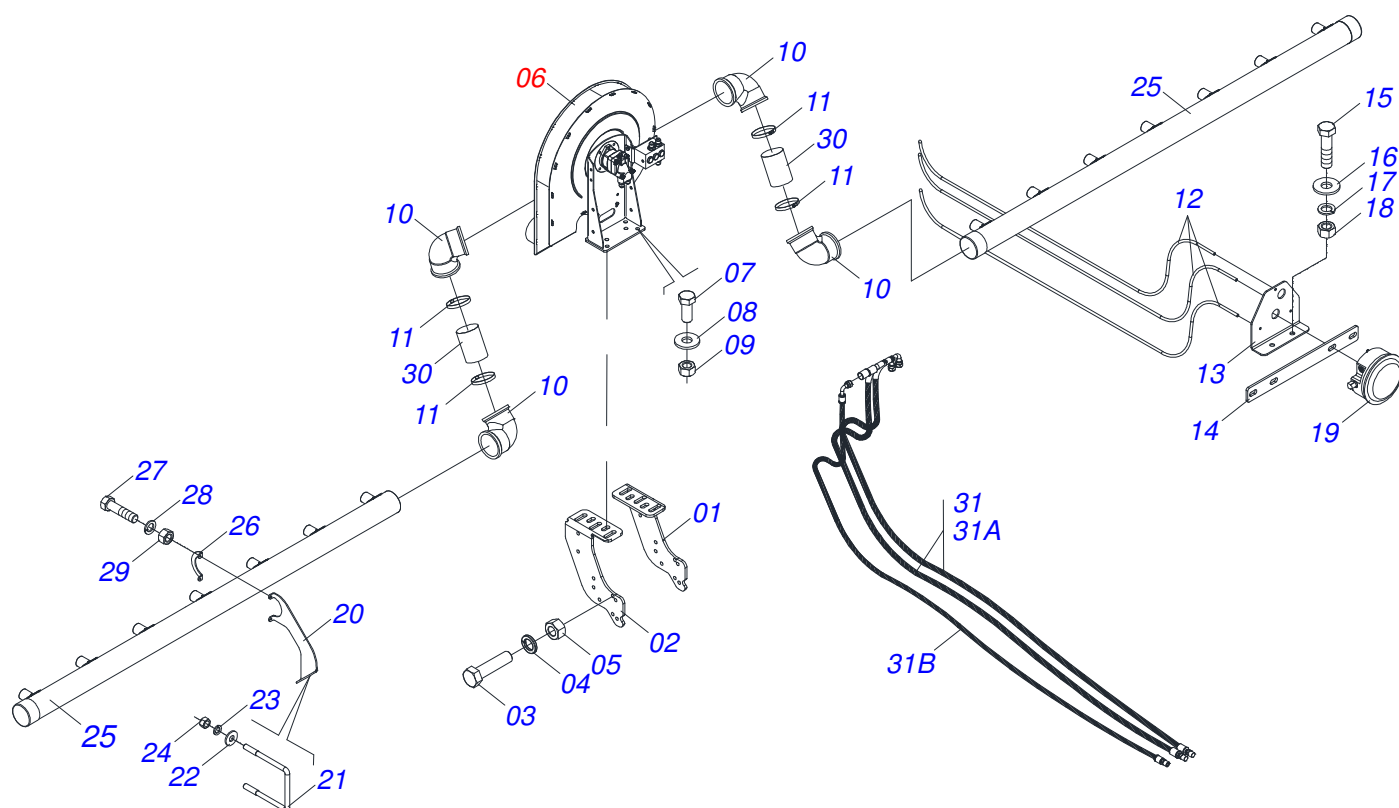


Item	Code	Description	QT
001	0571019978	SHAFT FIXER BODY	01
002	0571019979	SHAFT FIXER BODY	01
003	0503010740	1/2" X 2" BOLT	04
004	0503010019	1/2" SPRING WASHER	04
005	0503010060	1/2" NUT	04
006	0511057700	HYDRAULIC TURBINE	01
007	0503011267	5/8" X 1.1/2" BOLT	02
008	0501012140	FLAT WASHER	02
009	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
010	0503031576	ELBOW	04
011	0503011372	102 TO 121 CLAMP	04
012	0503015062	TUBE	03
013	0571012663	VACUUM GAUGE SUPPORT	01
014	0571016669	CONECTOR CAPE	01
015	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02
016	0501010984	FLAT WASHER	02
017	0503010025	3/8 SPRING WASHER	02
018	0503010026	3/8" NUT	02
019	0503013584	VACUUM GAUGE	01
020	0571019963	AIR DISTRIBUTOR SUPPORT	04
021	0521014021	1/2" X 4.5" X 5.4" FASTENER	04
022	0501013519	FLAT WASHER	08
023	0503010019	1/2" SPRING WASHER	08
024	0503010060	1/2" NUT	08
025	0511057347	DISTRIBUTOR VACUUM 4845/5345	02
026	0521014442	HOSE SUPPORT	04
027	0503010363	5/16" X 1" BOLT	08
028	0503010179	SPRING WASHER	08
029	0503010337	5/16" NUT	08
030	0521018615	"4 X 1300" AIR CONDUCTOR	02
031	0511057840	SET TURBINE HOSE REAR COP TRIO	02
031A	0501081247	HOSE	02
031B	0501080477	3/8" X 275" TC-TM HOSE ASSY	01

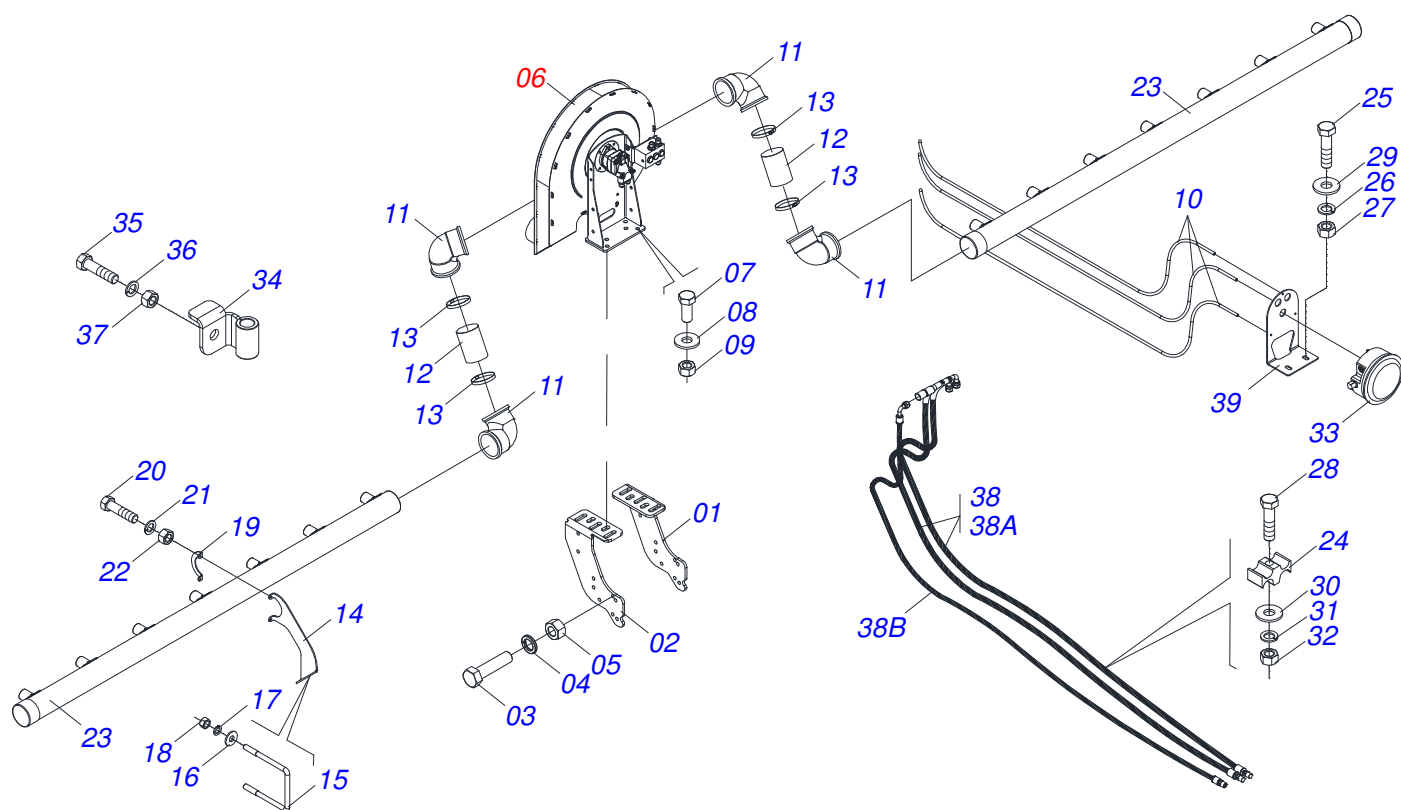


Item	Code	Description	QT
001	0571019979	SHAFT FIXER BODY	01
002	0571019978	SHAFT FIXER BODY	01
003	0503010740	1/2" X 2" BOLT	04
004	0503010019	1/2" SPRING WASHER	04
005	0503010060	1/2" NUT	04
006	0511057700	HYDRAULIC TURBINE	01
007	0503011267	5/8" X 1.1/2" BOLT	02
008	0501012140	FLAT WASHER	02
009	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
010	0503015062	TUBE	03
011	0503031576	ELBOW	04
012	0521018615	"4 X 1300" AIR CONDUCTOR	02
013	0503011372	102 TO 121 CLAMP	04
014	0571019963	AIR DISTRIBUTOR SUPPORT	04
015	0521014021	1/2" X 4.5" X 5.4" FASTENER	04
016	0501013519	FLAT WASHER	08
017	0503010019	1/2" SPRING WASHER	08
018	0503010060	1/2" NUT	08
019	0521014442	HOSE SUPPORT	04
020	0503010371	5/16" X 1" BOLT	08
021	0503010179	SPRING WASHER	08
022	0503010337	5/16" NUT	08
023	0511057348	DISTRIBUTOR VACUUM	02
024	0502012702	BODY SUPPORT CLAMP	02
025	0503010481	BOLT	01
026	0503010025	3/8 SPRING WASHER	01
027	0503010026	3/8" NUT	01
028	0503010371	5/16" X 1" BOLT	02
029	0501010984	FLAT WASHER	02
030	0501010694	FLAT WASHER	02
031	0503010179	SPRING WASHER	02
032	0503010337	5/16" NUT	02
033	0503013584	VACUUM GAUGE	01

Item	Code	Description	QT
034	0521063404	SUPPORT FIXER HOSE	01
035	0501010452	5/8" X 5" BOLT	01
036	0503010027	SPRING WASHER	01
037	0503010013	5/8" NUT	01
038	0511057840	SET TURBINE HOSE REAR COP TRIO	02
038A	0501081247	HOSE	02
038B	0501080477	3/8" X 275" TC-TM HOSE ASSY	01
039	0571019552	SUPPORT VACUUM	01

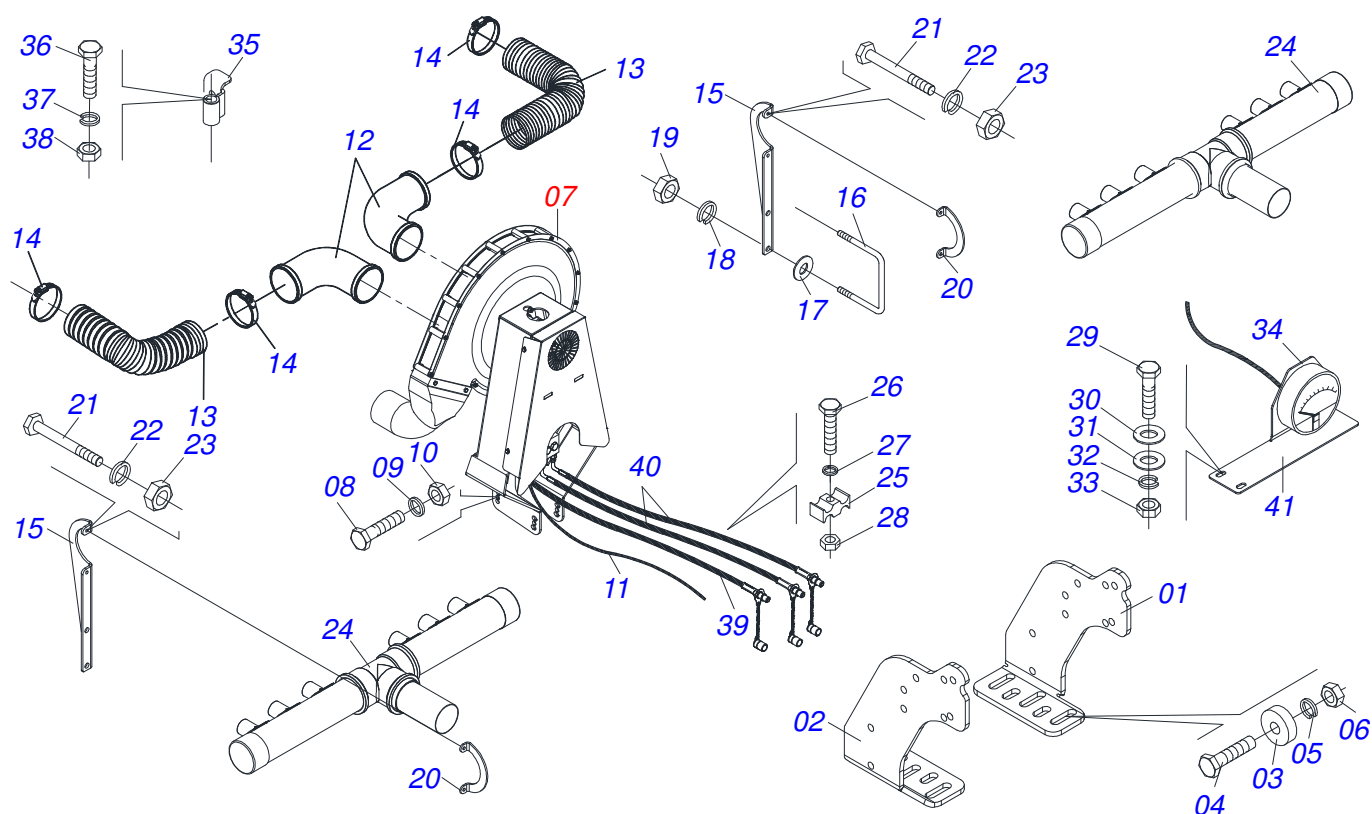


Item	Code	Description	13 L
001	0571019979	SHAFT FIXER BODY	01
002	0571019978	SHAFT FIXER BODY	01
003	0551019213	FLAT WASHER	02
004	0503010740	1/2" X 2" BOLT	02
005	0503010019	1/2" SPRING WASHER	02
006	0503010060	1/2" NUT	02
007	0511057700	HYDRAULIC TURBINE	01
008	0503011267	5/8" X 1.1/2" BOLT	02
009	0501012140	FLAT WASHER	02
010	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
011	0503015062	TUBE	03
012	0503031576	ELBOW	04
013	0521018615	"4 X 1300" AIR CONDUCTOR	02
014	0503011372	102 TO 121 CLAMP	04
015	0571019963	AIR DISTRIBUTOR SUPPORT	04
016	0521014021	1/2" X 4.5" X 5.4" FASTENER	04
017	0501013519	FLAT WASHER	08
018	0503010019	1/2" SPRING WASHER	08
019	0503010060	1/2" NUT	08
020	0521014442	HOSE SUPPORT	04
021	0503010371	5/16" X 1" BOLT	08
022	0503010179	SPRING WASHER	08
023	0503010337	5/16" NUT	08
024	0511057785	DISTRIBUTOR PNEUMATIC	02
025	0502012702	BODY SUPPORT CLAMP	02
026	0503010481	BOLT	01
027	0503010025	3/8 SPRING WASHER	01
028	0503010026	3/8" NUT	01
029	0503010371	5/16" X 1" BOLT	02
030	0501010984	FLAT WASHER	02
031	0501010694	FLAT WASHER	02
032	0503010179	SPRING WASHER	02
033	0503010337	5/16" NUT	02

Item	Code	Description	13 L
034	0503013584	VACUUM GAUGE	01
035	0521063404	SUPPORT FIXER HOSE	01
036	0501010452	5/8" X 5" BOLT	01
037	0503010027	SPRING WASHER	01
038	0503010013	5/8" NUT	01
039	0501081811	3/8 X 7100 TC-TM HOSE ASSY	01
040	0501081810	HOSE	02
041	0571013731	VACUUM GAUGE SUPPORT	01

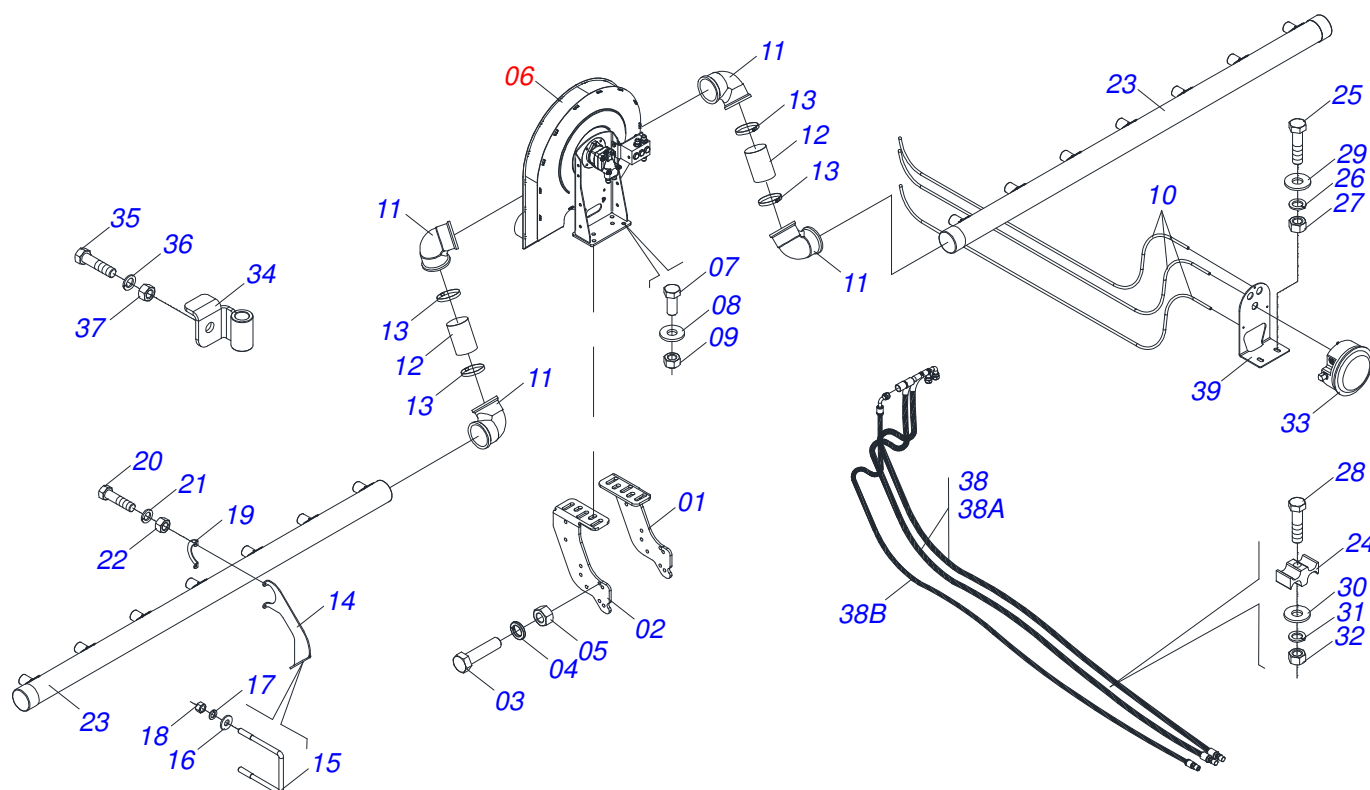


Item	Code	Description	QT
001	0571019979	SHAFT FIXER BODY	01
002	0571019978	SHAFT FIXER BODY	01
003	0503010740	1/2" X 2" BOLT	04
004	0503010019	1/2" SPRING WASHER	04
005	0503010060	1/2" NUT	04
006	0511057700	HYDRAULIC TURBINE	01
007	0503011267	5/8" X 1.1/2" BOLT	02
008	0501012140	FLAT WASHER	02
009	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S	02
010	0503015062	TUBE	03
011	0503031576	ELBOW	04
012	0531016195	4" X 94" AIR CONDUCTOR	02
013	0503011372	102 TO 121 CLAMP	04
014	0571019963	AIR DISTRIBUTOR SUPPORT	04
015	0521014021	1/2" X 4.5" X 5.4" FASTENER	04
016	0501013519	FLAT WASHER	08
017	0503010019	1/2" SPRING WASHER	08
018	0503010060	1/2" NUT	08
019	0521014442	HOSE SUPPORT	04
020	0503010371	5/16" X 1" BOLT	08
021	0503010179	SPRING WASHER	08
022	0503010337	5/16" NUT	08
023	0511057784	DISTRIBUTOR PNEUMATIC	02
024	0502012702	BODY SUPPORT CLAMP	02
025	0503010481	BOLT	01
026	0503010025	3/8 SPRING WASHER	01
027	0503010026	3/8" NUT	01
028	0503010371	5/16" X 1" BOLT	02
029	0501010984	FLAT WASHER	02
030	0501010694	FLAT WASHER	02
031	0503010179	SPRING WASHER	02
032	0503010337	5/16" NUT	02
033	0503013584	VACUUM GAUGE	01

Item	Code	Description	QT
034	0521063404	SUPPORT FIXER HOSE	01
035	0501010452	5/8" X 5" BOLT	01
036	0503010027	SPRING WASHER	01
037	0503010013	5/8" NUT	01
038	0511057840	SET TURBINE HOSE REAR COP TRIO	02
038A	0501081247	HOSE	02
038B	0501080477	3/8" X 275" TC-TM HOSE ASSY	01
039	0571019552	SUPPORT VACUUM	01

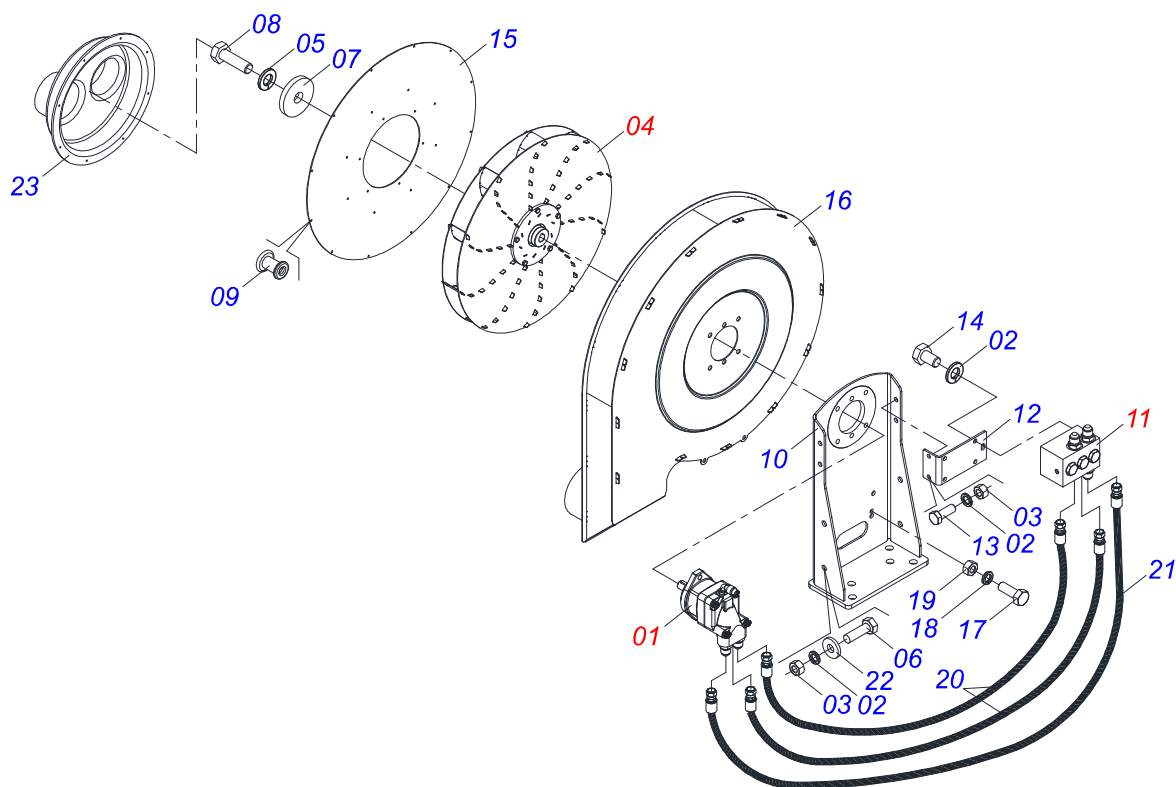


Item	Code	Description	QT
01	0501054983	NIPPLE HIDRAULIC MOTOR	01
02	0503010025	3/8 SPRING WASHER	10
03	0503010026	3/8" NUT	08
04	0521044613	FAN 480 X 50 S (HIDRAULIC)	01
05	0503010143	SPRING WASHER	01
06	0503010849	3/8" X 1-1/2" BOLT	02
07	0531018764	FLAT WASHER	01
08	0503011104	M6 X 1" BOLT	01
09	0503012722	0.16" X 0.4" BLIND RIVET	20
10	0521065858	TURBIN SUPPORT	01
11	0501054577	BLOCK COMMAND	01
12	0561010634	VALVE SUPPORT ASSY	01
13	0503010237	3/8" X 1" BOLT	06
14	0503010206	3/8" X 1/2" BOLT	02
15	0571018577	COVER SNAIL TURBINE	01
16	0521066237	SNAIL MECHANICAL TURBINE HIDRAULIC	01
17	0503010358	5/16" X 5/8" BOLT	02
18	0503010179	SPRING WASHER	02
19	0503010337	5/16" NUT	02
20	0501080125	HOSE 1/2 X 500 TR TR	02
21	0501080635	3/8" X 19" TR-TR HOSE	01
22	0521018517	FLAT WASHER	02
23	0503031649	CONECTOR CENTER	01

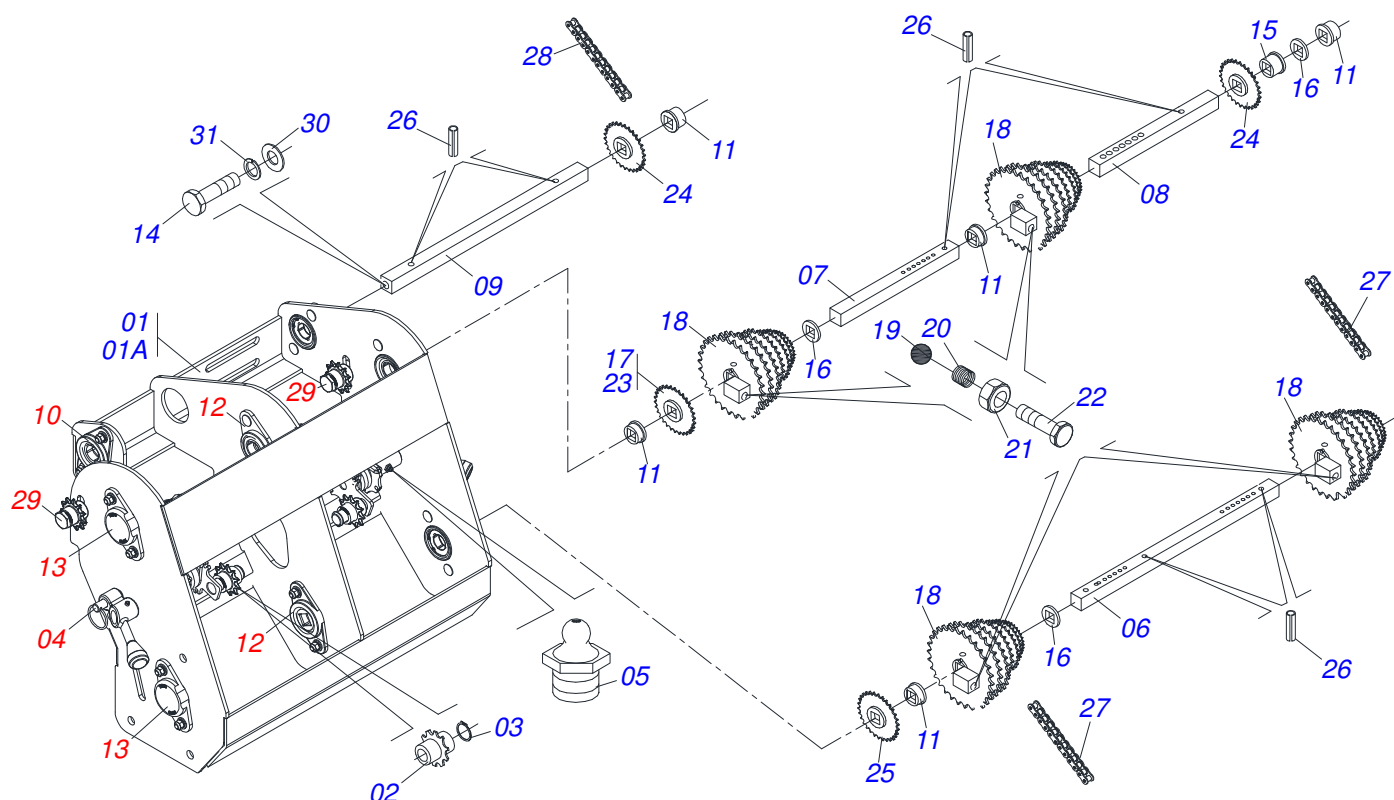


Item	Code	Description	QT
001	0511050639	RIGHT GEAR BOX ASSY	01
001A	0501058212	RH GEAR	01
002	0503031805	11Z 1/2" GEAR	04
003	0503010302	501019 SEAL RING	04
004	0501048790	AXLE WITH LINK ASSY	02
005	0503010002	1800 GREASE FITTING	02
006	0551018209	DRIVING AXLE	01
007	0521018259	DRIVEN AXLE	01
008	0551018210	DRIVEN AXLE	01
009	0551018211	INTERM SHAFT	01
010	0501056447	CENTRAL BEARING GEAR BOX	01
011	0503030303	SUPPORT WASHER	05
012	0501056443	BEARING ASSY GEAR BOX	02
013	0501056271	GEAR BOX CLOSE BEARINGONE	05
014	0503010256	3/8" X 3/4" BOLT	01
015	0503030275	AGRICULTURAL BEARING	01
016	0521018630	1.4" X SQUARE 0.8" WASHER	03
017	0511061822	25Z P0.5" GEAR SQUARE HOL	01
018	0502040868	GEAR CONE REPLACEMENT	04
019	0503012389	1/2 BALL	04
020	0503031512	0.4" X 0.1"X 2" X 0.6" SPRING	04
021	0503010060	1/2" NUT	04
022	0503010395	1/2" X 1-1/4" BOLT	04
023	0521062072	33Z GEAR	01
024	0511061830	17Z P 0.5" GEAR SQUARE HOL	02
025	0511067501	26Z GEAR	01
026	0503010292	0.2" X 1.6" SPRING PIN	07
027	0503012204	40-1 CHAIN X 82 LINK + RED	02
028	0503012713	40-1 CHAIN X 45 LINK + MEN	01
029	0501054655	CHAIN TENSIONER ASSY	02
030	0501010984	FLAT WASHER	01
031	0503010025	3/8 SPRING WASHER	01

LEFT GEAR BOX ASSY


0511050640

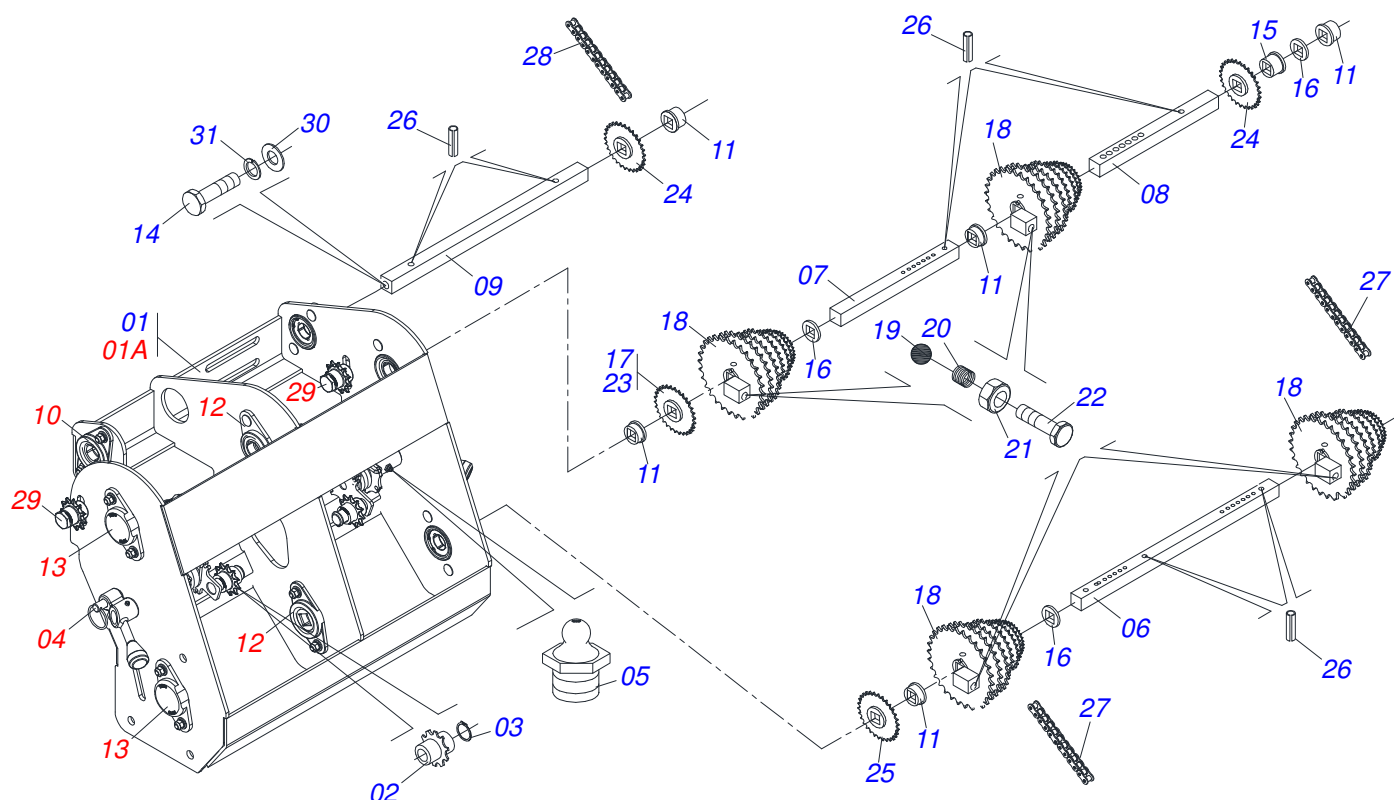


Item	Code	Description	QT
001	0511050640	LEFT GEAR BOX ASSY	01
001A	0501058213	LH GEAR BOX	01
002	0503031805	11Z 1/2" GEAR	04
003	0503010302	501019 SEAL RING	04
004	0501048790	AXLE WITH LINK ASSY	02
005	0503010002	1800 GREASE FITTING	02
006	0551018209	DRIVING AXLE	01
007	0521018259	DRIVEN AXLE	01
008	0551018210	DRIVEN AXLE	01
009	0551018211	INTERM SHAFT	01
010	0501056447	CENTRAL BEARING GEAR BOX	01
011	0503030303	SUPPORT WASHER	05
012	0501056443	BEARING ASSY GEAR BOX	02
013	0501056271	GEAR BOX CLOSE BEARINGONE	05
014	0503010256	3/8" X 3/4" BOLT	01
015	0503030275	AGRICULTURAL BEARING	01
016	0521018630	1.4" X SQUARE 0.8" WASHER	03
017	0511061822	25Z P0.5" GEAR SQUARE HOL	01
018	0502040868	GEAR CONE REPLACEMENT	04
019	0503012389	1/2 BALL	04
020	0503031512	0.4" X 0.1"X 2" X 0.6" SPRING	04
021	0503010060	1/2" NUT	04
022	0503010395	1/2" X 1-1/4" BOLT	04
023	0521062072	33Z GEAR	01
024	0511061830	17Z P 0.5" GEAR SQUARE HOL	02
025	0511067501	26Z GEAR	01
026	0503010292	0.2" X 1.6" SPRING PIN	07
027	0503012204	40-1 CHAIN X 82 LINK + RED	02
028	0503012713	40-1 CHAIN X 45 LINK + MEN	01
029	0501054655	CHAIN TENSIONER ASSY	02
030	0501010984	FLAT WASHER	01
031	0503010025	3/8 SPRING WASHER	01

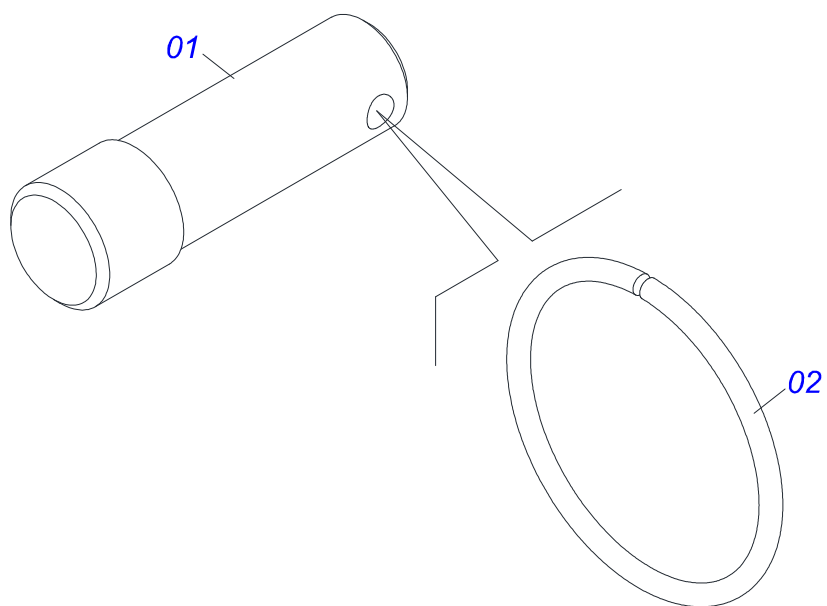


Item	Code	Description	QT
001	0521012476	GEAR BOX LEVER AXLE	01
002	0503031369	LINK	01

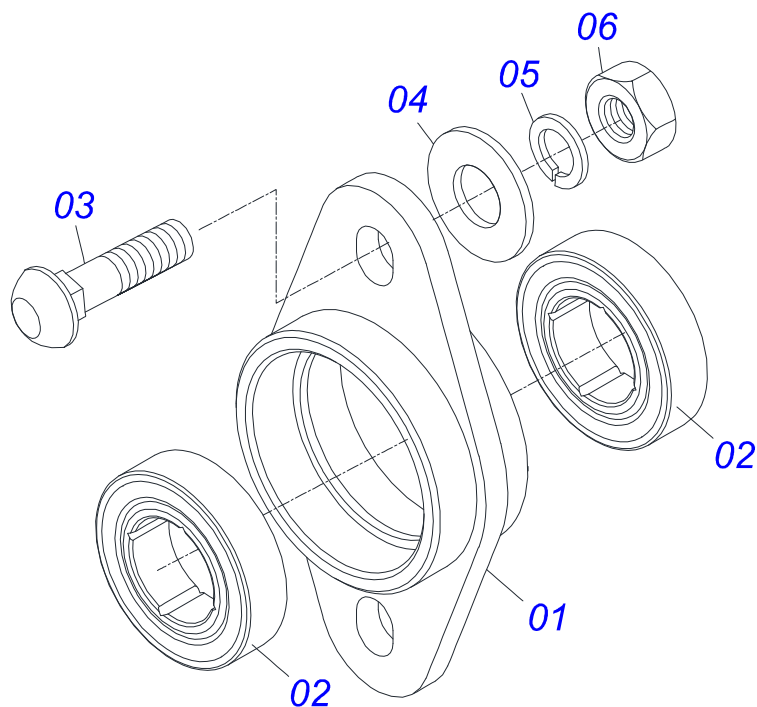


Item	Code	Description	QT
01	0502011978	HOUSING CENTRAL BEARING	01
02	0503013462	BEARING WITH BALL BEARING	02
03	0503011953	5/16" X 1" BOLT	02
04	0501010694	FLAT WASHER	02
05	0503010179	SPRING WASHER	02
06	0503010337	5/16" NUT	02

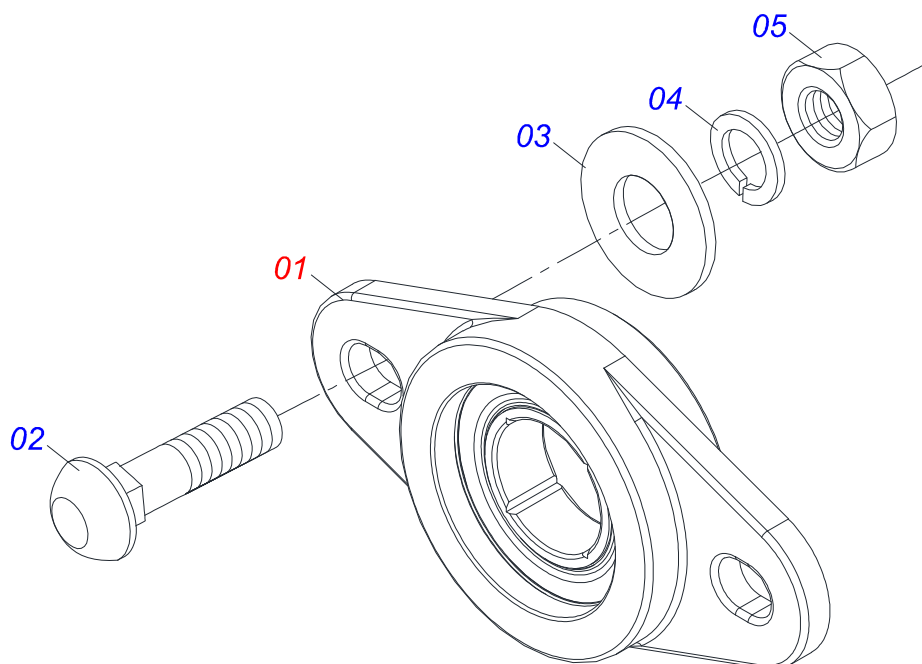


Item	Code	Description	QT
01	0501056444	BEARING WITH BALL BEARING	01
02	0503011953	5/16" X 1" BOLT	02
03	0501010694	FLAT WASHER	02
04	0503010179	SPRING WASHER	02
05	0503010337	5/16" NUT	02

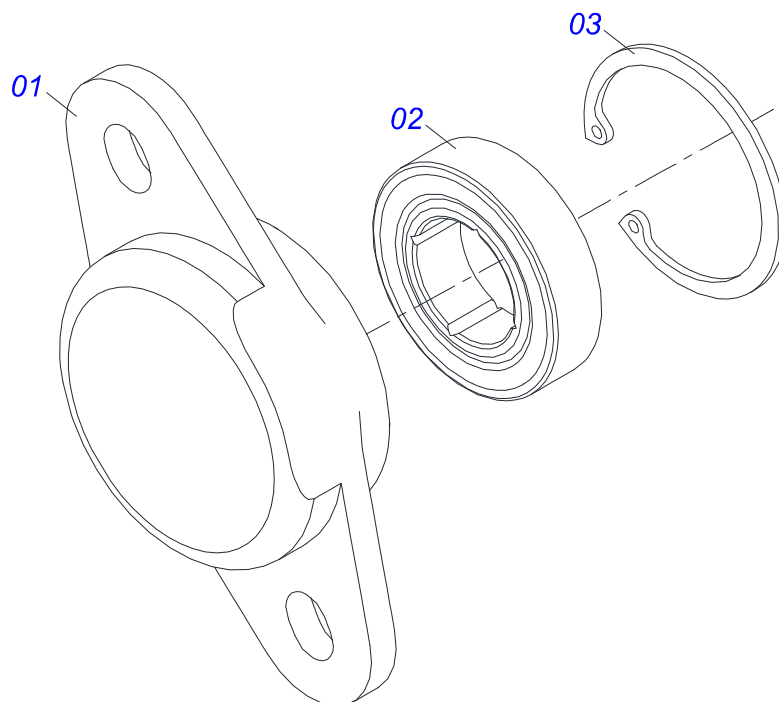

Item	Code	Description	QT
01	0502012310	GEAR BOX CLOSE BEARING	01
02	0503013462	BEARING WITH BALL BEARING	01
03	0503011105	SEAL RING	01

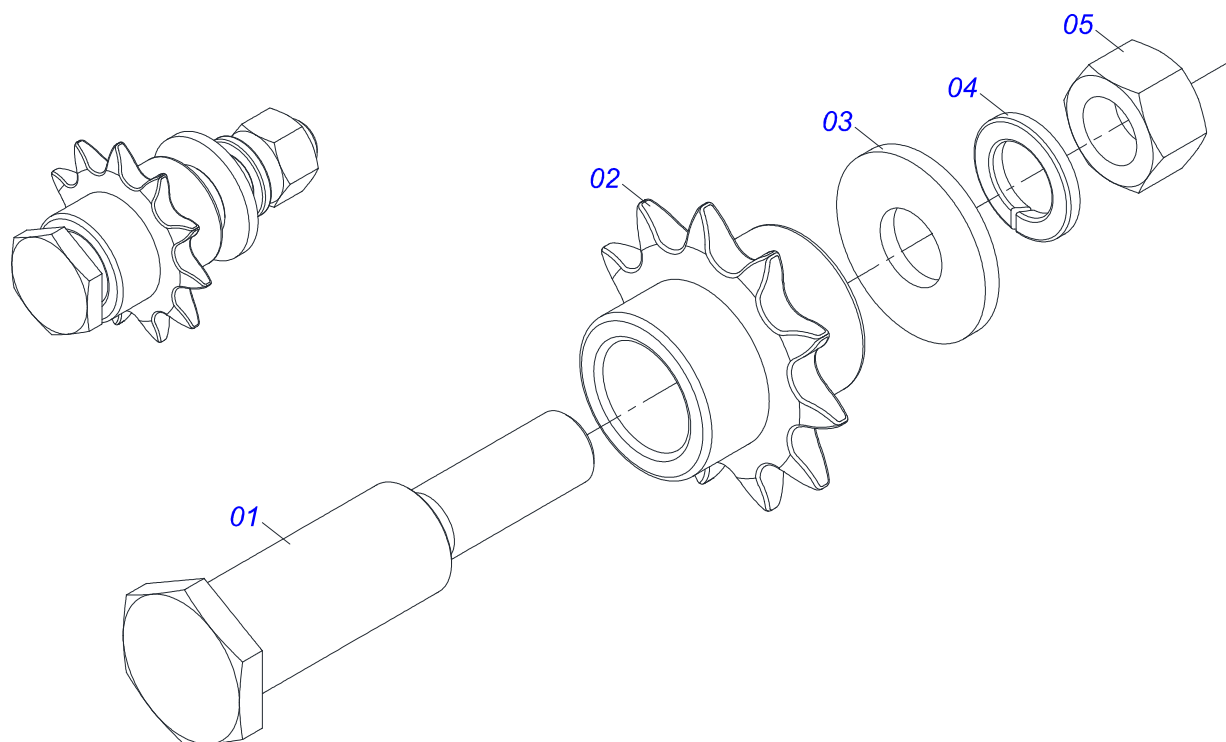

Item	Code	Description	QT
01	0531019479	AXLE CHAIN GEAR	01
02	0503031805	11Z 1/2" GEAR	01
03	0511017302	FLAT WASHER	01
04	0503010019	1/2" SPRING WASHER	01
05	0503010060	1/2" NUT	01

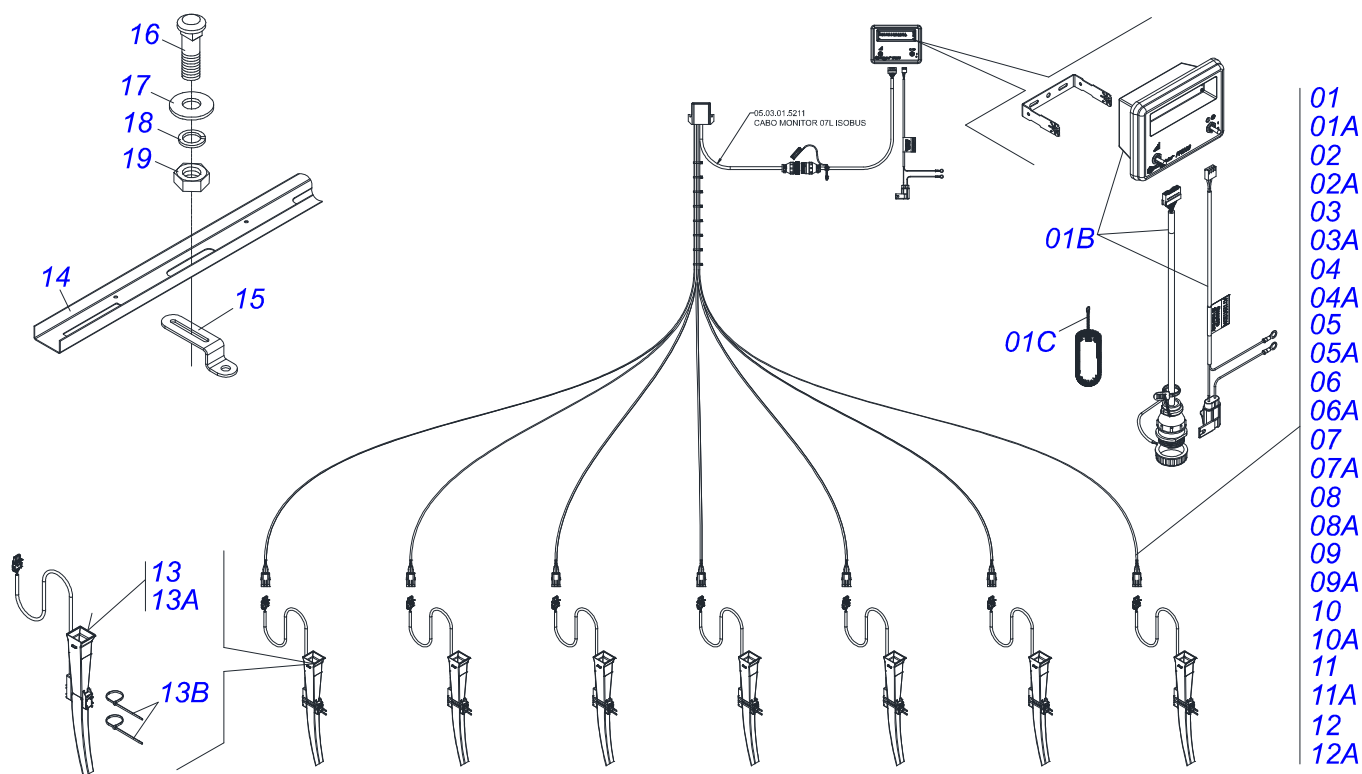

Item	Code	Description	03	05	07	08	09	10
01	0511052714	SEDD ROW MONITOR ASSY	01	00	00	00	00	00
01A	0503015244	MONITOR CABLE	01	00	00	00	00	00
01B	0503016491	MONITOR PLANT PM100	01	00	00	00	00	00
01C	0503017031	CLEANING BRUSH	01	00	00	00	00	00
02	0511052715	PLANTING OF MONITORING ASSEMBLY PM100	00	01	00	00	00	00
02A	0503015245	05L MONITOR CABLE	00	01	00	00	00	00
03	0511052675	7 ROW SEED MONITOR (PM100) ASSY	00	00	01	00	00	00
03A	0503015211	MONITOR CABLE	00	00	01	00	00	00
04	0511052676	8 ROW SEED MONITOR (PM100) ASSY	00	00	00	01	00	00
04A	0503015247	MONITOR CABLE	00	00	00	01	00	00
05	0511052677	09 ROW SEED MONITOR (PM100) ASSY	00	00	00	00	01	00
05A	0503015212	FERTILIZER MONITORING ASSEMBLY	00	00	00	00	01	00
06	0511052678	10 ROW SEED MONITOR (PM100) ASSY	00	00	00	00	00	01
06A	0503015248	MONITOR CABLE	00	00	00	00	00	01
07	0511052679	11 ROW SEED MONITOR (PM100) ASSY	00	00	00	00	00	00
07A	0503015213	MONITOR CABLE	00	00	00	00	00	00
08	0511052680	12 ROW SEED MONITOR (PM100) ASSY	00	00	00	00	00	00
08A	0503015249	MONITOR CABLE	00	00	00	00	00	00
09	0511052681	13 ROW SEED MONITOR (PM100) ASSY	00	00	00	00	00	00
09A	0503015214	MONITOR CABLE	00	00	00	00	00	00
10	0511052682	14 ROW SEED MONITOR (PM100) ASSY	00	00	00	00	00	00
10A	0503015250	MONITOR CABLE	00	00	00	00	00	00
11	0511052683	15 ROW SEED MONITOR (PM100) ASSY	00	00	00	00	00	00
11A	0503015215	MONITOR CABLE	00	00	00	00	00	00
12	0511052684	16 ROW SEED MONITOR (PM100) ASSY	00	00	00	00	00	00
12A	0503015251	MONITOR CABLE	00	00	00	00	00	00
13	0511053118	ASSEMBLY SENSOR ELECTRONIC	03	05	07	08	09	10
13A	0503016492	ELECTRIC PHOTO SENSOR PM 100	03	05	07	08	09	10
13B	0503013100	NYLON CLAMP	15	25	35	40	45	50
14	0571018391	GUTTER 25 X 58 X 1200 USAP	02	02	02	02	02	02
15	0571017368	SUPPORT GUTTER	04	04	04	04	04	04
16	0501011643	3/8 X 1" BOLT	04	04	04	04	04	04
17	0501010984	FLAT WASHER	04	04	04	04	04	04



COP FLEX 600 SUP PP AFRICA
PM100 SEED MONITORING ASSEMBLY - PART I

Page 105
0909090739

Item	Code	Description	03	05	07	08	09	10
18	0503010025	3/8 SPRING WASHER	04	04	04	04	04	04
19	0503010026	3/8" NUT	04	04	04	04	04	04

[illegible]



MARCHESAN IMPLEMENTOS E MÁQUINAS AGRÍCOLAS TATU S.A.

AV. Marchesan, 1979 - Post office box, 131 - CEP 15994-900 - Matão - SP - Brazil

Phone +55 16.3382-8282

(FAX Parts) + 55 16.3382. 8297 - (Export) + 55 16.3382.1003

e.mail: tatu@marchesan.com.br www.marchesan.com.br

Technical Publications: Elaboration

LUIZ CANDIDO

Technical Publications: Revision

LUIZ CANDIDO

Contact Catálogo:

E-mail = jgaspari@marchesan.com.br

**ORIGINAL PARTS
TATU**

