

PARTS CATALOG

ROW CROP PLANTERS

PHT4 SUPREMA 7/4 MH ANGOLA

Code: 0501092571



Series: 0312

Rev.: 00

Date Rev.: OUTUBRO/2019

**ORIGINAL PARTS
TATU**



PRODUCTS

Code	Description	
0111330004	PHT4 SUP 7/4 MH	ANGOLA

ATTENTION: **IMPORTANT**

 
MARCHESAN S/A RESERVES THE RIGHT AT ANY TIME TO MAKE IMPROVEMENTS IN THE DESIGN, MATERIAL OR SPECIFICATIONS OF MACHINERY, EQUIPMENT OR PARTS WITHOUT THEREBY BECOMING LIABLE TO MAKE SIMILAR CHANGES IN MACHINERY, EQUIPMENT OR PARTS PREVIOUSLY SOLD.

INDEX

0909090844	CHASSI PHT4/SUPREMA 01/16	0
0511057582	CARDAN TURBINE	1
0501053886	PULLEY ASSY WITH FREE ROT	2
0501054649	SEQUENTIAL VALVE ASSY	3
0521040155	HYDRAULIC CYLINDER 31,75X50,8X365X595 PHT4 SUP	4
0511041364	DRIVE SHAFT	5
0501052586	ESTABILIZER DRAWBAR ASSY	6
0501050633	MARKER DISC ASSY LINE	7
0521050859	RIGHT CARRYING-WHEELS	8
0511052484	WHEELS RIGHT	9
0511052486	WHEEL ARM RIGTH	10
0521050860	LEFT CARRYING-WHEELS	11
0511052483	LEFT CARRYING-WHEELS	12
0511052485	LH WHELLS ARM	13
0503060105	WELL AND TIRE ASSY	14
0511052487	TURNBUCKLE	15
0501056444	BEARING WITH BALL BEARING	16
0521040712	FERTILIZER RIGHT BOX ASSY	17
0511051712	RH BEAM SUPPORT	18
0521040718	LH FERTILIZER BOX COVER ASSY	19
0511051717	LH BEAM SUPPORT	20
0511051714	SIDE FERTILIZER DISTRIBUTOR	21
0511051715	SIDE FERTILIZER DISTRIBUTOR	22
0501056451	BEARING	23
0501053788	Q3/4" FASTENER AXLE ASSY	24
0909092680	SEED GEAR BOX	25
0511059266	CLOSED BEARING	26
0501056443	BEARING ASSY GEAR BOX	27
0511051511	BEARING	28
0909092738	FERTILIZER GEAR BOX	29
0909095368	SEED AND FERTILIZER ROW PHT4 SUPREMA ANGOLA	30
0511057613	RIGHT SEED ROW PHT SUPREMA ANGOLA	31
0511057614	LEFTH SEED ROW PHT4 SUPLEMA	32
0511057586	RH SEED ROW ARM	33
0511052324	CARDAN TRANSMISSION BEARING	34
0511057588	LH SEED ROW ARM	35
0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	36
0511056586	15 X 15 SEED DDD LEFT	37
0511057611	PNEUMATIC SEED DISTRIBUTOR	38
0511057612	PNEUMATIC SEED DISTRIBUTOR	39
0511055631	SUPPORT PNEUMATIC	40
0511055624	COVER SYTEM PNEUMATIC	41
0511055632	BOX TRANSMISSION PNEUMATIC	42
0521040159	DEPTH WHEEL SYSTEM	43
0511056937	DEPTH CONTROL SEMI MOUNTED	44
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	45
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	46
0501052627	ASSY DEPTH WHEEL BOX	47
0501052297	DEPTH WHEELS REGULATOR ASSY	48
0501052538	DEPTH BAND WITH ARMS	49
0511054333	COMPACT WHEEL RIGHT WITH BEARING	50
0511054334	COMPACT WHEEL LEFT WITH BEARING	51
0511057674	SEED BOX	52
0511058164	16" COULTER BLADE ASSY	53
0501056428	ROW 16 BLADE DISC ASSY	54
0511057589	RIGHT ARM FERTILIZER ROW ASSY	55
0511057590	RH FERTILIZER ROW ARM	56
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	57
0511057591	LH FERTILIZER ROW ASSY	58
0511057592	LH FERTILIZER ROW ARM	59
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	60


INDEX

0511057604	HYDRAULIC MARKER ASSY		61
0909090853	HYDRAULIC CIRCUIT (MH)		62

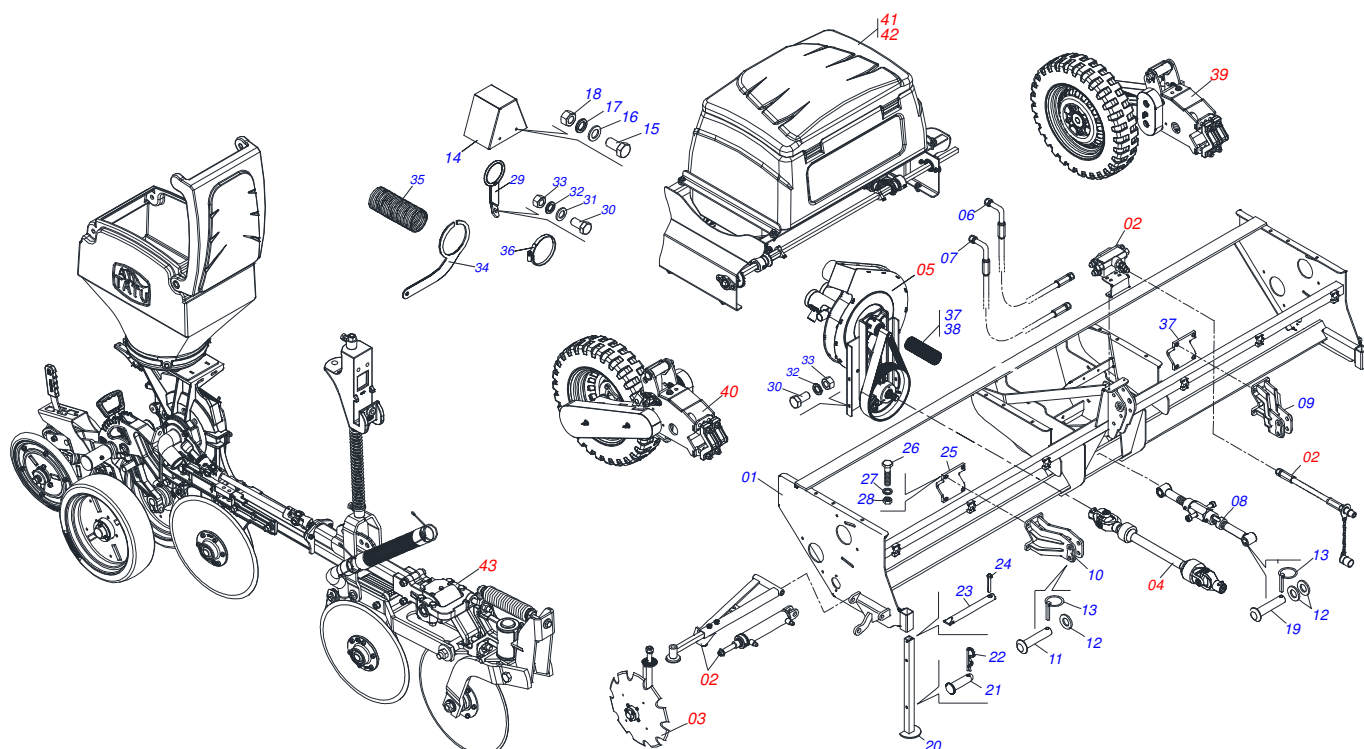

Item	Code	Description	See page	QT
01	0521062567	FRAME 3º SCORE		01
02	0511057604	HYDRAULIC MARKER ASSY	61	01
03	0501050633	MARKER DISC ASSY LINE	7	02
04	0511041364	DRIVE SHAFT	5	01
05	0511057582	CARDAN TURBINE	1	01
06	0501080412	3/8" X 90.55" TR-TC HOSE		02
07	0501080469	3/8" X 98.42" TR-TR HOSE ASSY		02
08	0501052586	ESTABILIZER DRAWBAR ASSY	6	01
09	0521063895	HITCH LOWER OFFSET		01
10	0521063894	HITCH LOWER OFFSET		01
11	0521010582	COUPLING SHAFT		03
12	0501011445	FLAT WASHER		05
13	0503030085	LOCK PIN		04
14	0571012801	COVER PROTECTION TURBINE		01
15	0503010256	3/8" X 3/4" BOLT		01
16	0501010984	FLAT WASHER		01
17	0503010025	3/8 SPRING WASHER		01
18	0503010026	3/8" NUT		01
19	0521010580	COUPLING SHAFT		01
20	0501065337	PLOUGH SUPPORT		02
21	0521010809	11,11 X 64 COUPLING SHAFT		02
22	0503030168	HAIR PIN		04
23	0521010530	COUPLING SHAFT		02
24	0503010140	1/8" X 3/4" COTTERPIN		02
25	0511064353	FASTENER		02
26	0501013233	5/8" X 2-3/4" BOLT		08
27	0503010027	SPRING WASHER		20
28	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S		20
29	0511069907	HOSE HOLDER		06
30	0503010834	1/2 X 1 BOLT		01
31	0541012143	FLAT WASHER		01

Item	Code	Description	See page	QT
32	0503010019	1/2" SPRING WASHER		01
33	0503010060	1/2" NUT		01
34	0571011434	HOSE ASSY FIXER SUPPORT OUTPUT AR		01
35	0571011448	AIR CONDUCTOR		01
36	0503010246	CLAMP		12
37	0521018571	HOSE		04
38	0521010647	HOSE		02
39	0521050859	RIGHT CARRYING-WHEELS	8	01
40	0521050860	LEFT CARRYING-WHEELS	11	01
41	0521040712	FERTILIZER RIGHT BOX ASSY	17	01
42	0521040718	LH FERTILIZER BOX COVER ASSY	19	01
43	0909095368	SEED AND FERTILIZER ROW PHT4 SUPREMA 30 ANGOLA		01

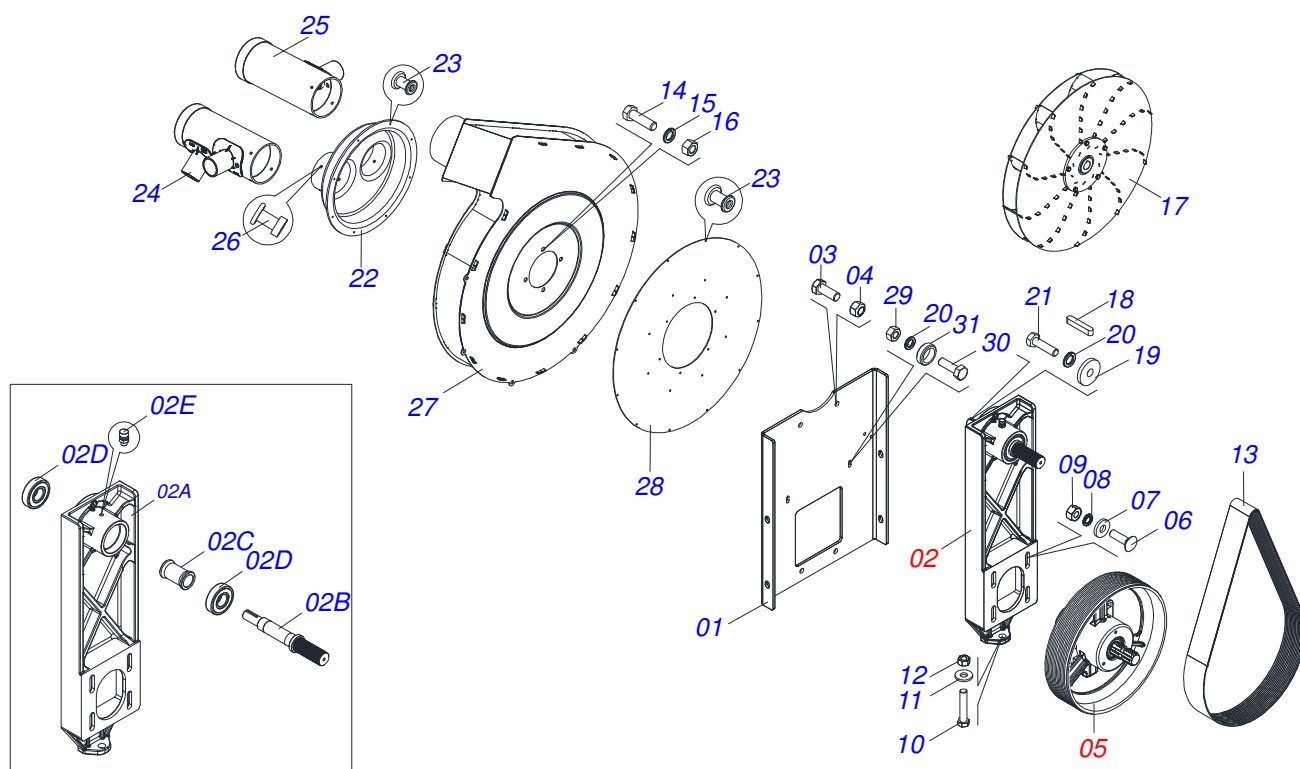 


Item	Code	Description	See page	QT
001	0531017265	TURBINE SUPPORT		01
002	0501053716	BEARING ASSY OF THE LARGER FAN		01
002A	0502012016	CHAIN TENSIONER SUPPOT		01
002B	0503012778	MIDDLE LARGER AXLE		01
002C	0531010881	INTERMEDIARY UPPER SLEEVE		01
002D	0503012689	6306 DDU BEARING		02
002E	0503010325	VCA-118 VALVE		01
003	0503010395	1/2" X 1-1/4" BOLT		04
004	0503011336	1/2" HEX SELF ADJUSTING NUT		04
005	0501053886	PULLEY ASSY WITH FREE ROT	2	01
006	0501011194	1/2" X 1-3/4" BOLT		04
007	0521018517	FLAT WASHER		04
008	0503010019	1/2" SPRING WASHER		04
009	0503010020	1/2"NUT		04
010	0503013030	5/8" X 3.1/4" BOLT		01
011	0501012140	FLAT WASHER		01
012	0503010013	5/8" NUT		01
013	0503012780	LARGER TURBINE BELT		01
014	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
015	0503010025	3/8 SPRING WASHER		04
016	0503010026	3/8" NUT		04
017	0521044612	FAN		01
018	0503011775	6 X 6 X 35 KEYWAY		01
019	0503011774	PULLEY		01
020	0503010179	SPRING WASHER		03
021	0503011257	M 8 X 1,25 X 30 BOLT		01
022	0571011731	CONECTOR CENTER		01
023	0503012722	0.16" X 0.4" BLIND RIVET		20
024	0511051733	AIR DISTRIBUTOR		01
025	0511051994	LH AIR DISTRIBUTOR		01
026	0503012856	REBITE POP		08




CARDAN TURBINE

0511057582


Item	Code	Description	See page	QT
027	0521066238	SNAIL MECHANICAL		01
028	0571018577	COVER SNAIL TURBINE		01
029	0503010337	5/16" NUT		02
030	0503010363	5/16" X 1" BOLT		02
031	0531012678	4.5" X 0.9" X 0.2" SLEEVE		02

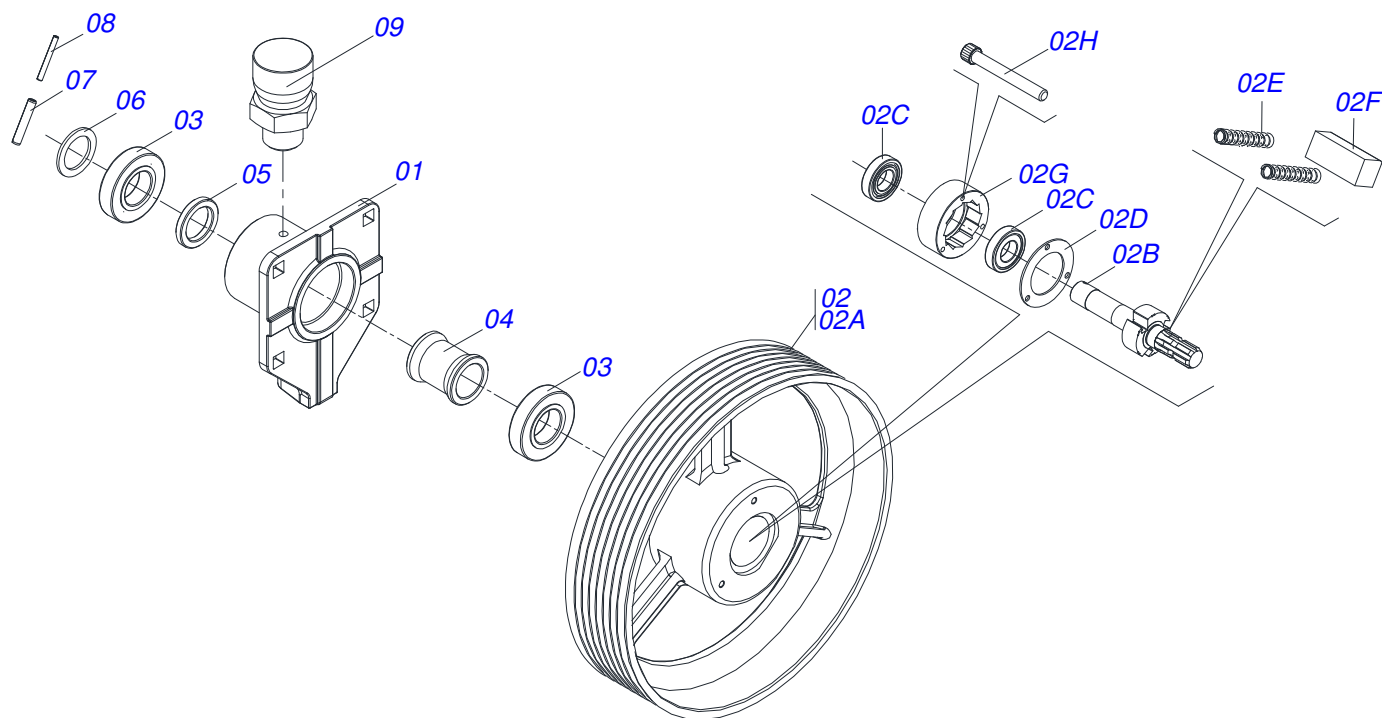 


Item	Code	Description	See page	QT
001	0502012020	PULLEY HOUSING BEARING		01
002	0501053888	TURBINE PULLEY ASSY		01
002A	0502012055	TURBINE PULLEY ASSY		01
002B	0503031732	RATCHET TURBINE PULLEY AXLE		01
002C	0503011081	6207 2RS BEARING		02
002D	0531014520	WASHER RATCHET		01
002E	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		06
002F	0501010649	RATCHET CLICK		03
002G	0503031731	RATCHET PULLEY TURBINE		01
002H	0503012950	5/16" X 2-1/2" BOLT		03
003	0503011081	6207 2RS BEARING		02
004	0531014518	INTERMEDIARY LOWER BUSHING BEARING		01
005	0531014519	FLAT WASHER		01
006	0531014527	FLAT WASHER		01
007	0503010301	0.3" X 1.8" SPRING PIN		01
008	0503011855	0.2" X 1.8" SPRING PIN		01
009	0503010325	VCA-118 VALVE		01

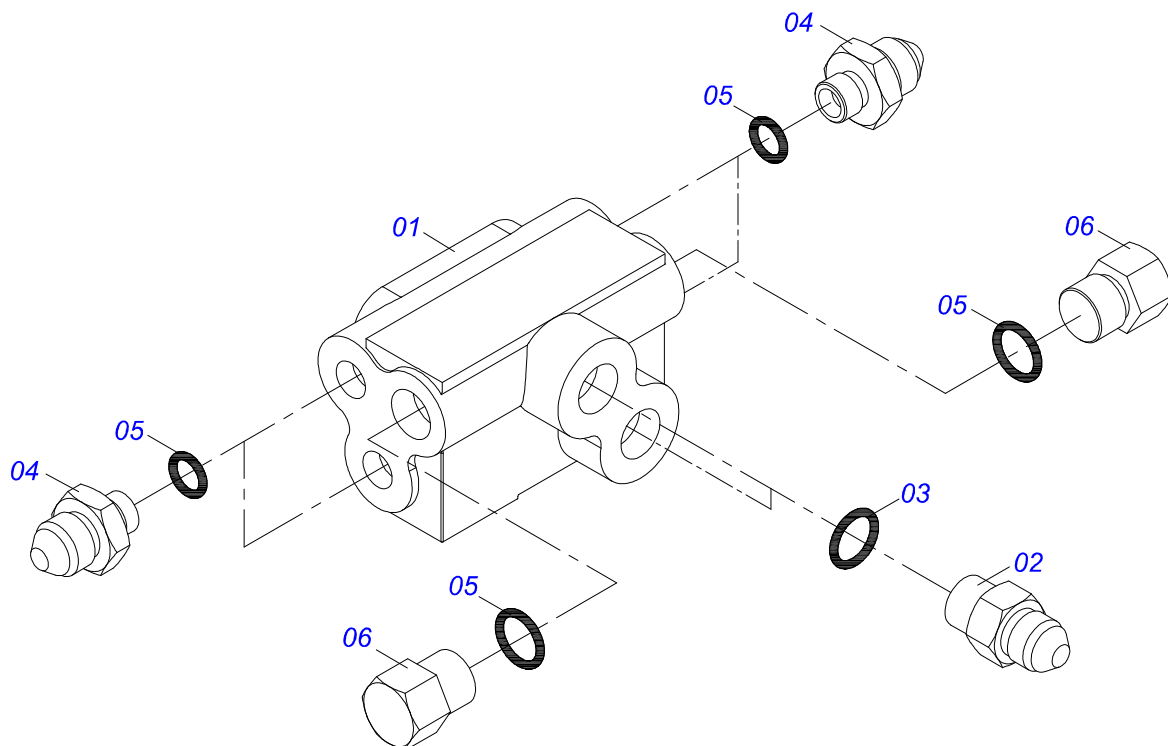 


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

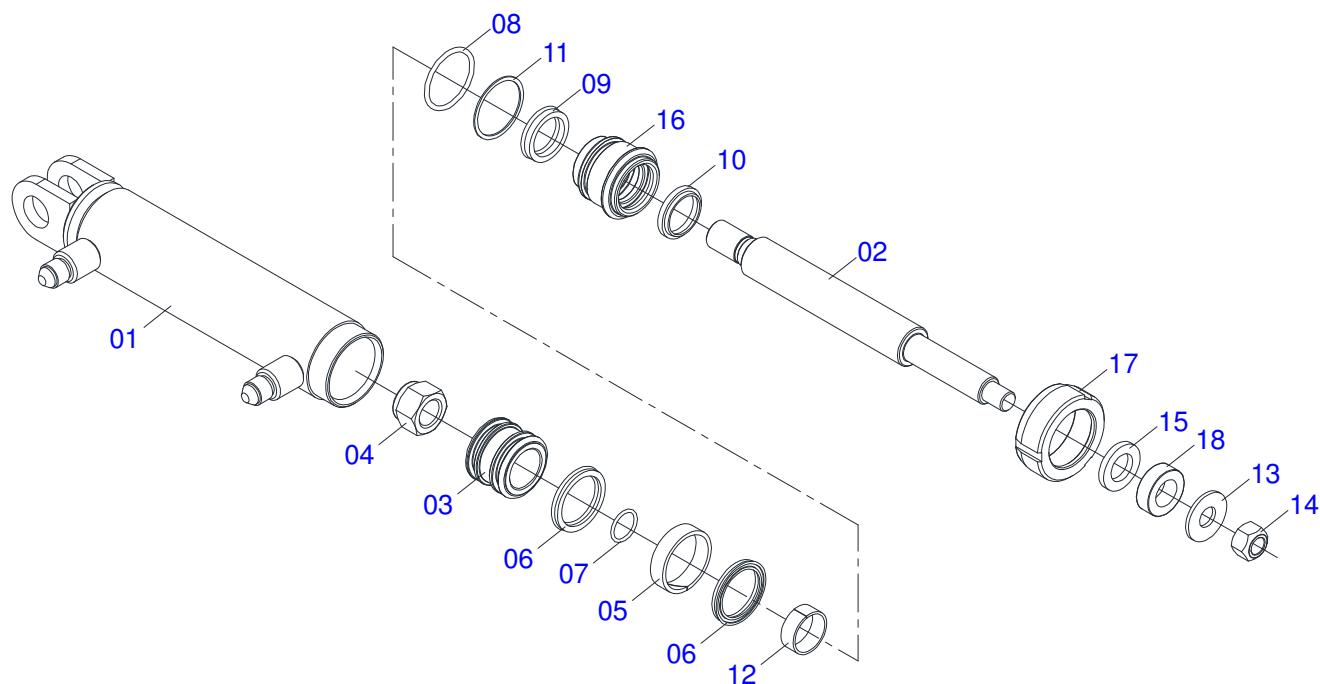 


Item	Code	Description	See page	QT
01	0521062810	CYLINDER CASE		01
02	0571010344	31,75 X 456 ROD		01
03	0551019990	31,75 X 50,80 X 39,40 PISTON		01
04	0503010812	7/8" SELF-ADJUSTING NUT		01
05	0503010949	W2-2000-500 PK RING G.E		01
06	0503013920	GASKET 1870-1625		02
07	0503014677	2-118 O'RING		01
08	0503013917	O`RING 2-224		01
09	0503013914	1870-1250-312B GASKET		01
10	0503013915	D-1250 SCRAPER RING		01
11	0503013918	8-224 BACK-UP RING		01
12	0503014683	W1-1400-500 RING GUIDE		01
13	0501012140	FLAT WASHER		01
14	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S		01
15	0571010576	SUPPORT WASHER		01
16	0571011410	SUPPORT RING CYLINDER LINE PHT4		01
17	0571011411	MOBILE COVER		01
18	0503033686	SLEEVE 22 X 38 X 12,50 RUBBER		02
19	0501038643	ASSEMBLY		01

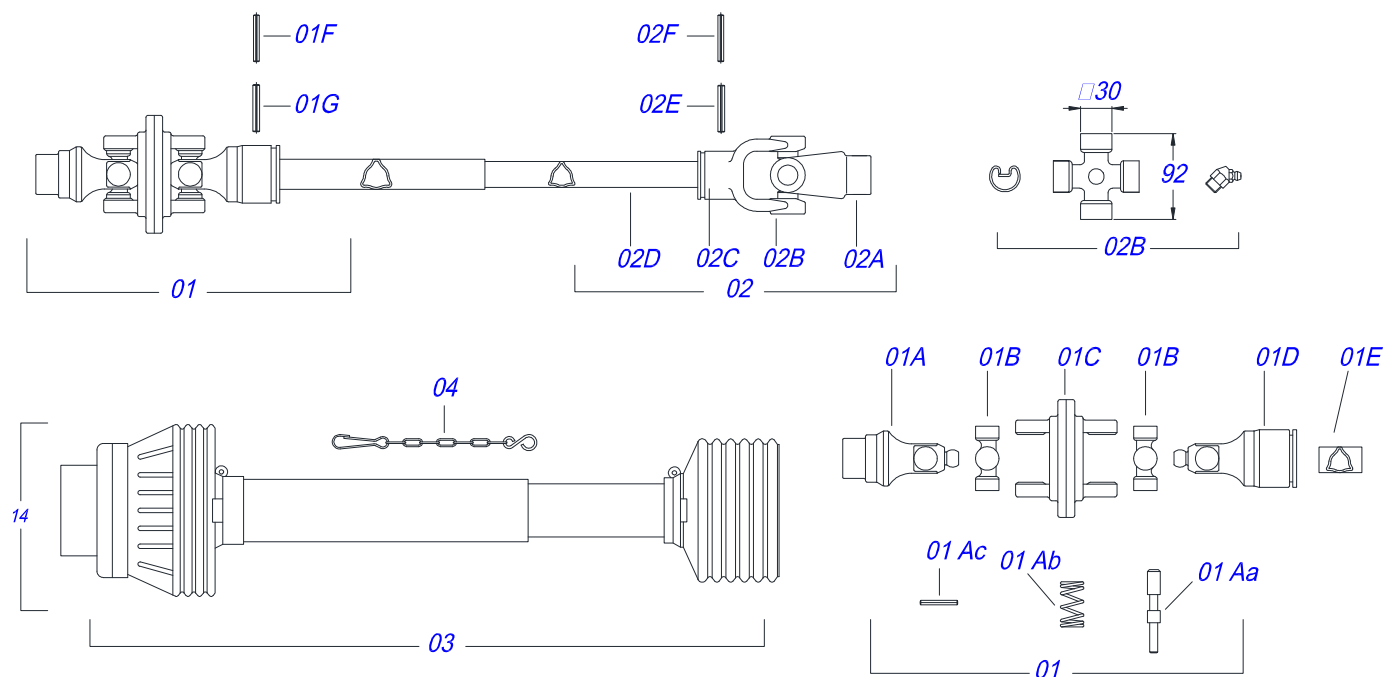 


Item	Code	Description	See page	QT
01	0501055638	HOMO JOINT WITH FEMALE BUSHING		01
01A	0503012607	TRACTOR HOMOCINETIC TERMINAL		01
01Aa	0521010638	0.5" X 3.3" QUIC HITCH COUPL SHAFT		01
01Ab	0503030518	0.5"X1.0"X 0.1" COMPRESSION SPRING		01
01Ac	0503010140	1/8" X 3/4" COTTERPIN		01
01B	0503012605	CROSSPIECE		02
01C	0503012606	CENTER BODY		01
01D	0503012604	HOMO TERMINAL W/ FEMALE BUSHING		01
01E	0503012618	2.1" X 2.0" X 31" TRIAN FEMALE TUB		01
01F	0503010843	0.4" X 3.3" SPRING PIN		01
01G	0503011878	0.2" X 3.3" SPRING PIN		01
02	0501055639	UNIVERSAL JOINT		01
02A	0503013132	CC292 TERMINAL		01
02B	0503012096	CROSSPIECE		01
02C	0503013187	TERMINAL		01
02D	0503012619	1.8" X 1.7" X 31" TRIAN MALE TUB		01
02E	0503011069	0.4" X 2.8" SPRING PIN		01
02F	0503011805	0.2" X 2.8" SPRING PIN		01
03	0503013189	PROTECTION ASSY		01
04	0503012023	CHAIN FOR UNIV JOINT PROTECTION		01

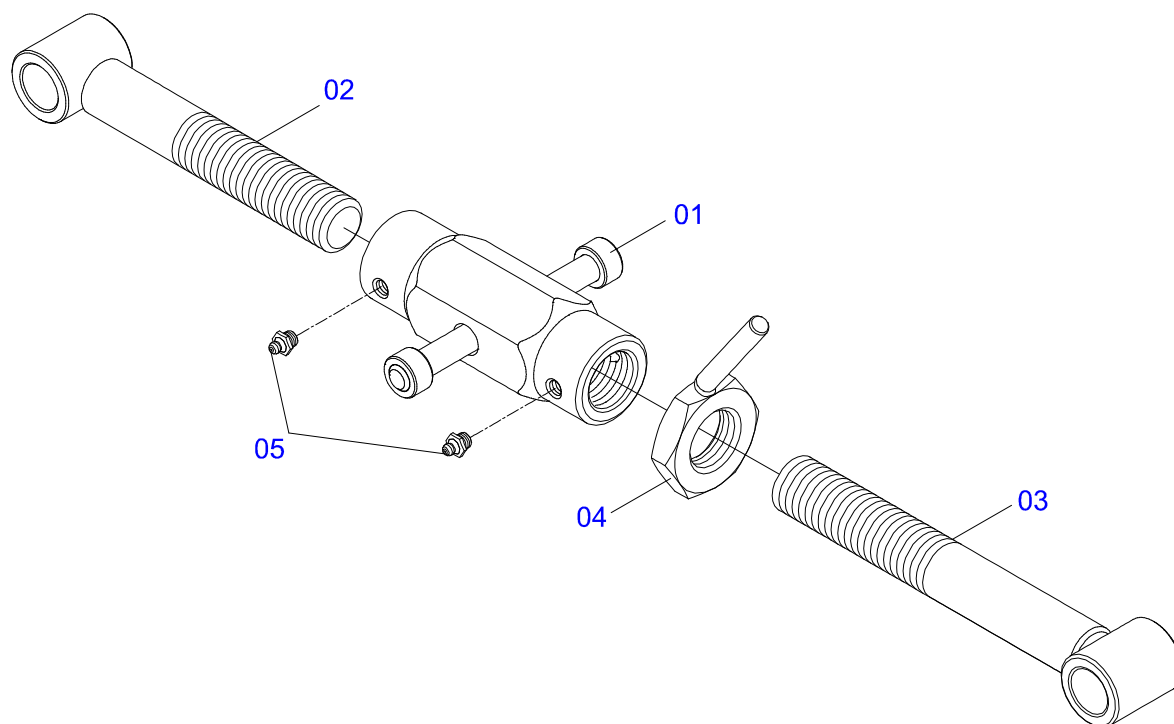 

Item	Code	Description	See page	QT
01	0501110096	165 ADJUSTMENT NUT		01
02	0511061503	8.86" RIGTH TURNBUCKLE		01
03	0511061504	8.86" LH TURNBUCKLE		01
04	0501064974	LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

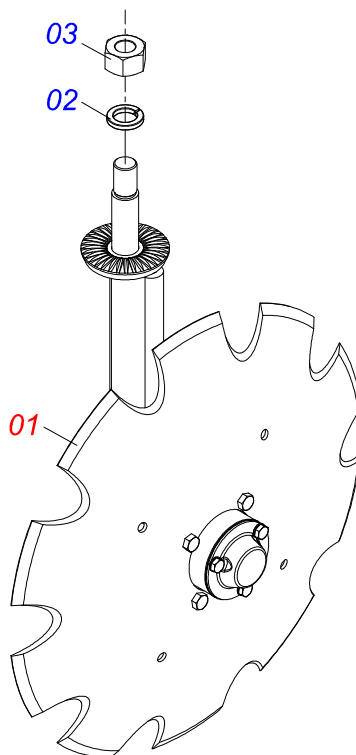 


Item	Code	Description	See page	QT
01	0511053904	DISC LINE MARKER		01
02	0503010023	SPRING WASHER		01
03	0503010014	3/4" NUT		01

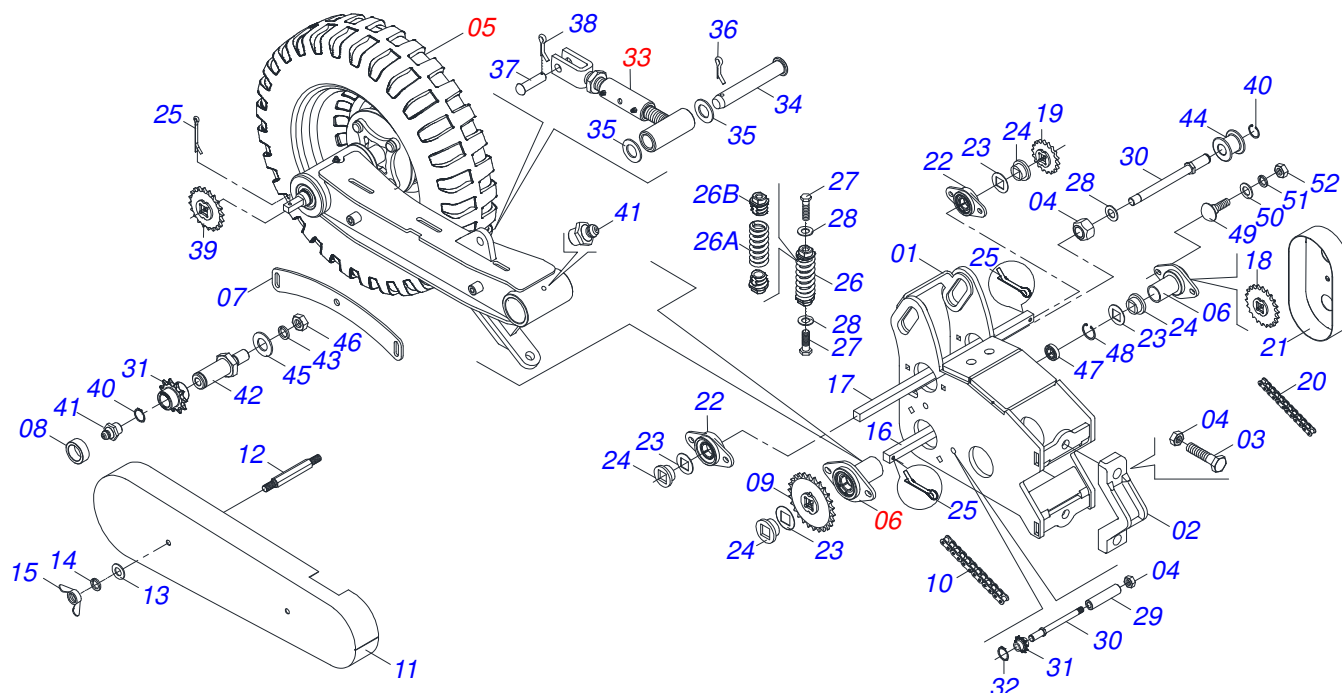 


Item	Code	Description	See page	QT
01	0521063583	WHEEL SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S		08
05	0511052484	WHEELS RIGHT	9	01
06	0521062809	BEARING		04
07	0571010967	CHAIN TENSIONER		02
08	0561016501	GLOVE 30,50		02
09	0511067501	26Z GEAR		02
10	0503012718	40-1 CHAIN X 111 LINK + MENDING		02
11	0571010830	RIGHT CHAIN COVER		01
12	0561016503	PRISONER 3/8 UNC		06
13	0501010984	FLAT WASHER		08
14	0503010025	3/8 SPRING WASHER		08
15	0503010209	3/8" UNC BUTTERFLY NUT		06
16	0571010341	SQUARE SHAFT		02
17	0581014148	AXLE		02
18	0521060880	GEAR 22 TEETH		02
19	0511061757	18Z GEAR		02
20	0503018182	40-1 X 39 CHAIN LINK + MENDING		02
21	0561019679	CHAIN CAP		01
22	0501056444	BEARING WITH BALL BEARING	16	04
23	0521018630	1.4" X SQUARE 0.8" WASHER		08
24	0503030303	SUPPORT WASHER		08
25	0503010577	3/16" X 1-1/4" COTTERPIN		12
26	0511057192	EXTENSION SPRING		02
26A	0503031681	2.1" X 7.78" EXTENSION SPRING		04
26B	0502011031	SPRING UPPER HITCH		02
27	0503013618	BOLT		04
28	0501011299	FLAT WASHER		04
29	0571010541	BEATER SLEEVE		02


Item	Code	Description	See page	QT
30	0571010964	TENSIONER CHAIN		02
31	0503031805	11Z 1/2" GEAR		02
32	0503010302	501019 SEAL RING		04
33	0511052487	TURNBUCKLE	15	02
34	0521010784	COUPLING SHAFT		02
35	0501011445	FLAT WASHER		04
36	0503010571	1/4" X 1.1/2 COTTERPIN		02
37	0521017623	0.5" X 1.5" COUPLING SHAFT		02
38	0503010257	1/8" X 1" COTTERPIN		02
39	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		01
40	0503010302	501019 SEAL RING		02
41	0503010002	1800 GREASE FITTING		02
42	0521012529	CHAIN TIGHTENER AXLE		01
43	0503010019	1/2" SPRING WASHER		01
44	0503030402	PULLEY		01
45	0511017302	FLAT WASHER		03
46	0503010060	1/2" NUT		01
47	0503013462	BEARING WITH BALL BEARING		02
48	0503011105	SEAL RING		02
49	0503011953	5/16" X 1" BOLT		08
50	0501010694	FLAT WASHER		08
51	0503010179	SPRING WASHER		08
52	0503010337	5/16" NUT		08

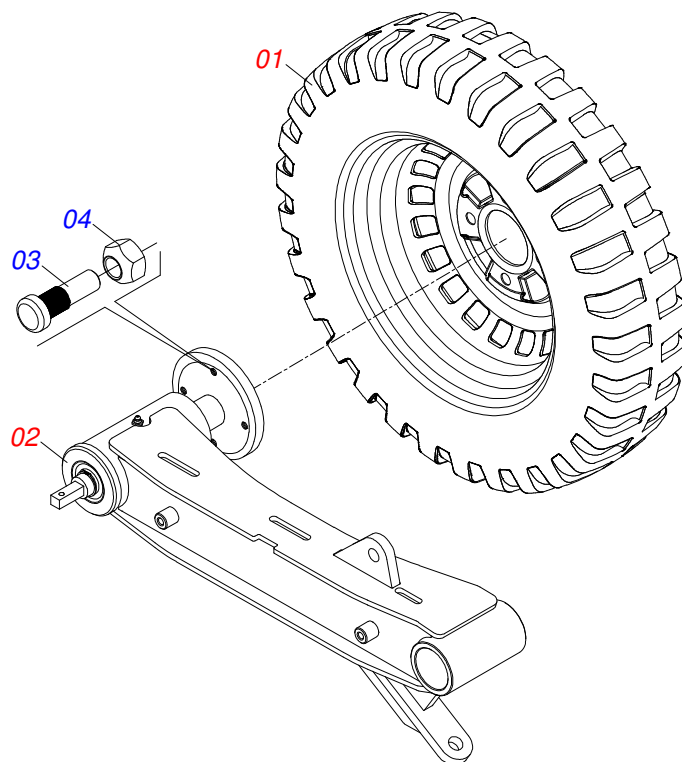 

Item	Code	Description	See page	QT
01	0503060105	WELL AND TIRE ASSY	14	01
02	0511052486	WHEEL ARM RIGTH	10	01
03	0501010127	9/16" X 1-7/8" LUG BOLT		04
04	0503010035	9/16" CONIC NUT		04

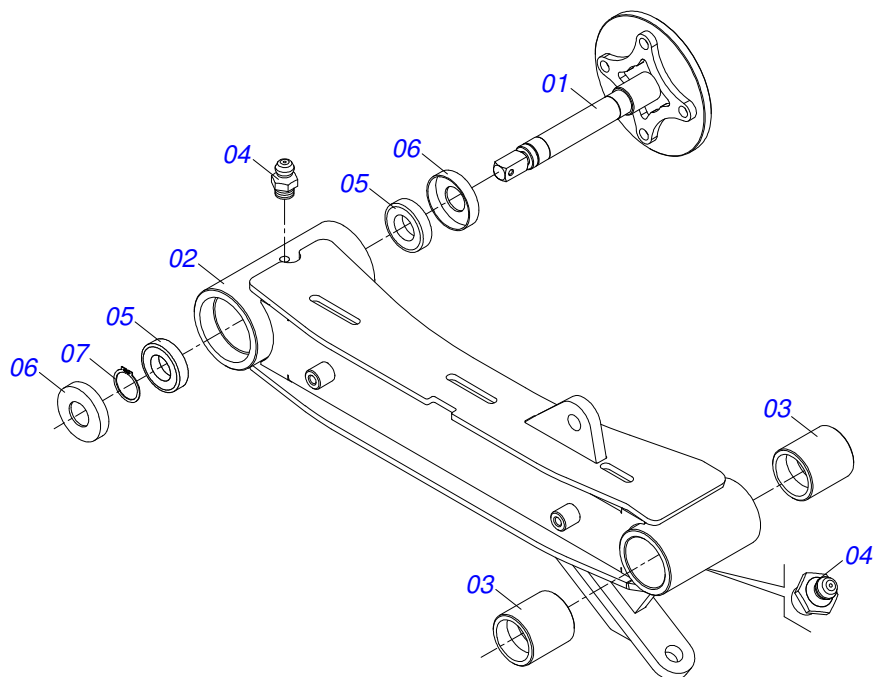 

Item	Code	Description	See page	QT
01	0521061662	WHEELED AXLE		01
02	0521063588	RH WHEEL ARM		01
03	0571010311	SLEEVE INTERMEDIARY		02
04	0503010002	1800 GREASE FITTING		02
05	0503013170	ROLLER BEARING		02
06	0561016502	GUARD POWDER		02
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01

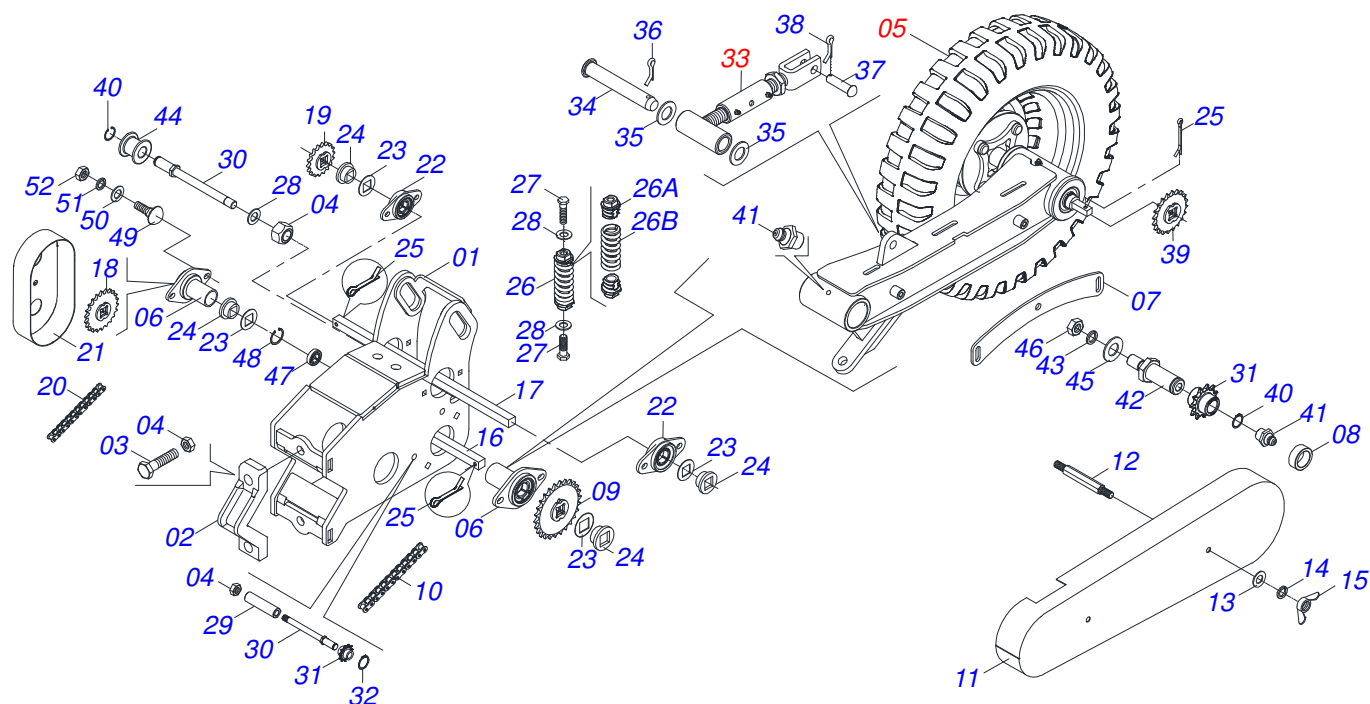 


Item	Code	Description	See page	QT
01	0521063583	WHEEL SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	HEX SELF ADJUSTING NUT 5/8 UNC S		08
05	0511052483	LEFT CARRYING-WHEELS	12	01
06	0521062809	BEARING		04
07	0571010967	CHAIN TENSIONER		02
08	0561016501	GLOVE 30,50		02
09	0511067501	26Z GEAR		02
10	0503012718	40-1 CHAIN X 111 LINK + MENDING		02
11	0561019680	LEFT CHAIN COVER		01
12	0561016503	PRISONER 3/8 UNC		06
13	0501010984	FLAT WASHER		08
14	0503010025	3/8 SPRING WASHER		08
15	0503010209	3/8" UNC BUTTERFLY NUT		06
16	0571010341	SQUARE SHAFT		02
17	0581014148	AXLE		02
18	0521060880	GEAR 22 TEETH		02
19	0511061757	18Z GEAR		02
20	0503018182	40-1 X 39 CHAIN LINK + MENDING		02
21	0561019679	CHAIN CAP		01
22	0501056444	BEARING WITH BALL BEARING	16	04
23	0521018630	1.4" X SQUARE 0.8" WASHER		08
24	0503030303	SUPPORT WASHER		08
25	0503010577	3/16" X 1-1/4" COTTERPIN		12
26	0511057192	EXTENSION SPRING		02
26A	0503031681	2.1" X 7.78" EXTENSION SPRING		04
26B	0502011031	SPRING UPPER HITCH		02
27	0503013618	BOLT		04
28	0501011299	FLAT WASHER		04
29	0571010541	BEATER SLEEVE		02


LEFT CARRYING-WHEELS

0521050860


Item	Code	Description	See page	QT
30	0571010964	TENSIONER CHAIN		02
31	0503031805	11Z 1/2" GEAR		02
32	0503010302	501019 SEAL RING		04
33	0511052487	TURNBUCKLE	15	02
34	0521010784	COUPLING SHAFT		02
35	0501011445	FLAT WASHER		04
36	0503010571	1/4" X 1.1/2 COTTERPIN		02
37	0521017623	0.5" X 1.5" COUPLING SHAFT		02
38	0503010257	1/8" X 1" COTTERPIN		02
39	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		01
40	0503010302	501019 SEAL RING		02
41	0503010002	1800 GREASE FITTING		02
42	0521012529	CHAIN TIGHTENER AXLE		01
43	0503010019	1/2" SPRING WASHER		01
44	0503030402	PULLEY		01
45	0511017302	FLAT WASHER		03
46	0503010060	1/2" NUT		01
47	0503013462	BEARING WITH BALL BEARING		02
48	0503011105	SEAL RING		02
49	0503011953	5/16" X 1" BOLT		08
50	0501010694	FLAT WASHER		08
51	0503010179	SPRING WASHER		08
52	0503010337	5/16" NUT		08

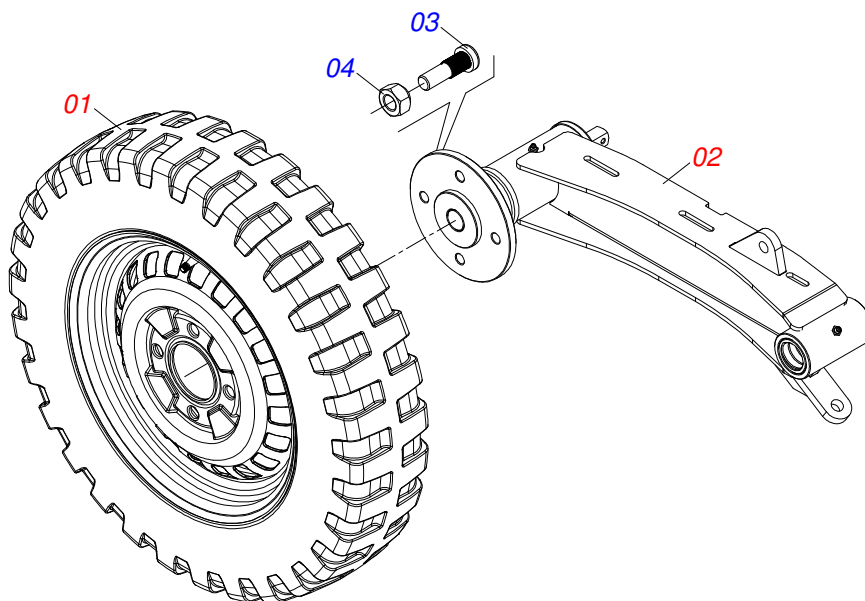 


Item	Code	Description	See page	QT
01	0503060105	WELL AND TIRE ASSY	14	01
02	0511052485	LH WHELLS ARM	13	01
03	0501010127	9/16" X 1-7/8" LUG BOLT		04
04	0503010035	9/16" CONIC NUT		04

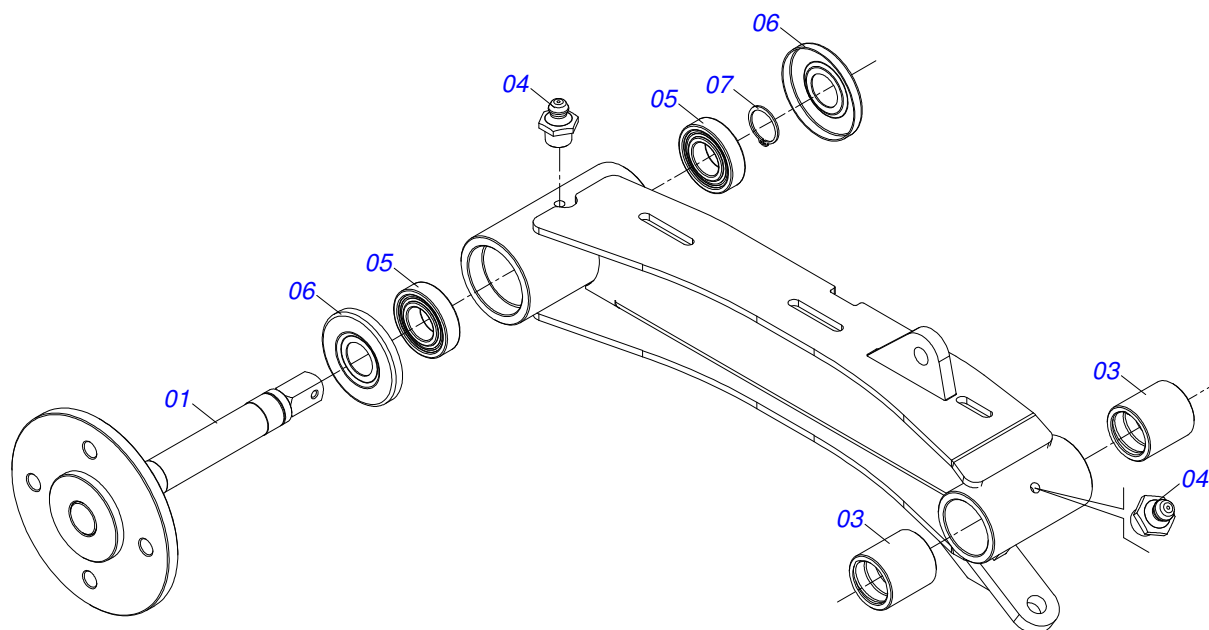 


Item	Code	Description	See page	QT
01	0521061662	WHEELED AXLE		01
02	0521063587	LH WHEEL ARM		01
03	0571010311	SLEEVE INTERMEDIARY		02
04	0503010002	1800 GREASE FITTING		02
05	0503013170	ROLLER BEARING		02
06	0561016502	GUARD POWDER		02
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01

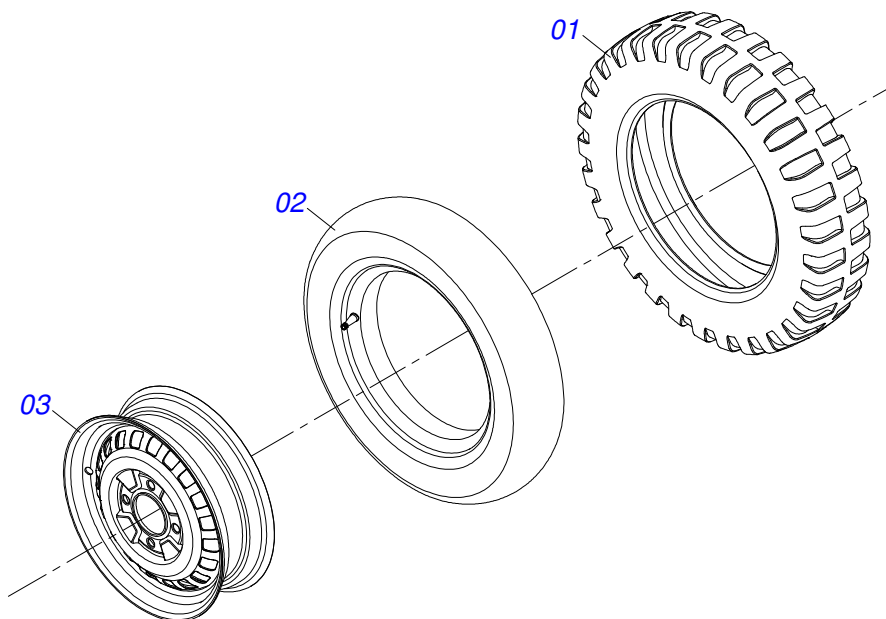 


Item	Code	Description	See page	QT
01	0503011010	CANVAS TIRE		01
02	0503010791	AR F 15 INNER TIRE		01
03	0503010789	0.2"J X 15H2" X0.2"F X0.6"X6" WHEEL		01

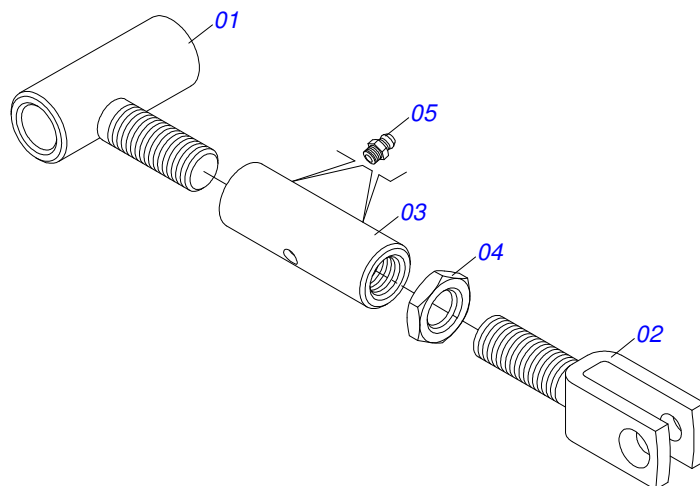 


Item	Code	Description	See page	QT
01	0521063584	BODY RIGHT TURNBUCKLE		01
02	0521063585	LEFT EXTENSOR BODY		01
03	0541010618	STABILIZER BODY		01
04	0541010087	LOCK NUT		01
05	0503010691	1/4" GREASE FITTING		02

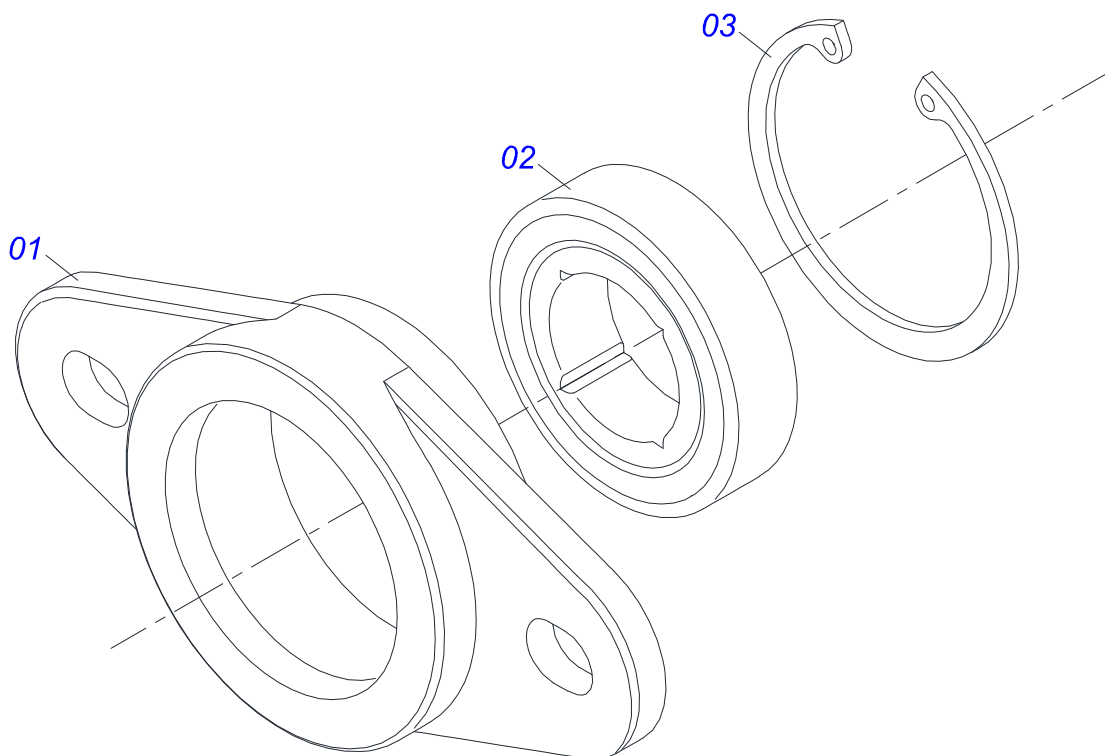 


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

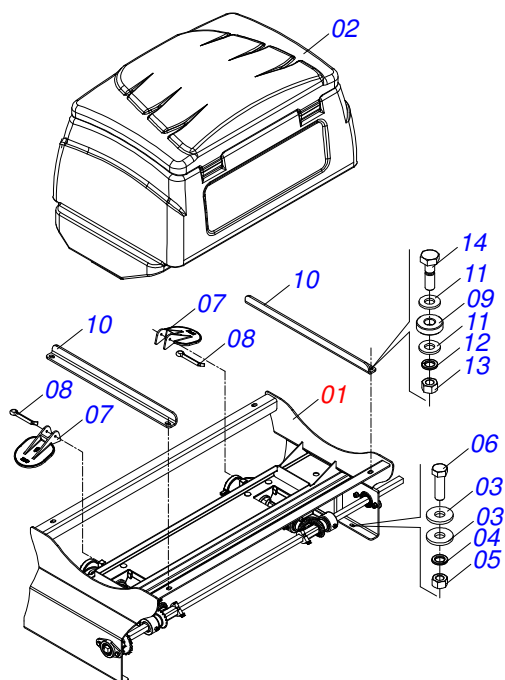 


Item	Code	Description	See page	QT
01	0511051712	RH BEAM SUPPORT	18	01
02	0503060693	BOX FERTILIZER ASSY		01
03	0501010984	FLAT WASHER		08
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0503034396	FERTILIZER SIDE COVER		02
08	0503010362	1/8" X 1.1/4" COTTERPIN		02
09	0581018852	GLOVE Ø13,5 X Ø35 X 10		04
10	0581018853	SEED BOX FIXATION		02
11	0501010937	FLAT WASHER		08
12	0503010019	1/2" SPRING WASHER		04
13	0503010060	1/2" NUT		04
14	0501019219	1/2" X 1-3/4" BOLT		04

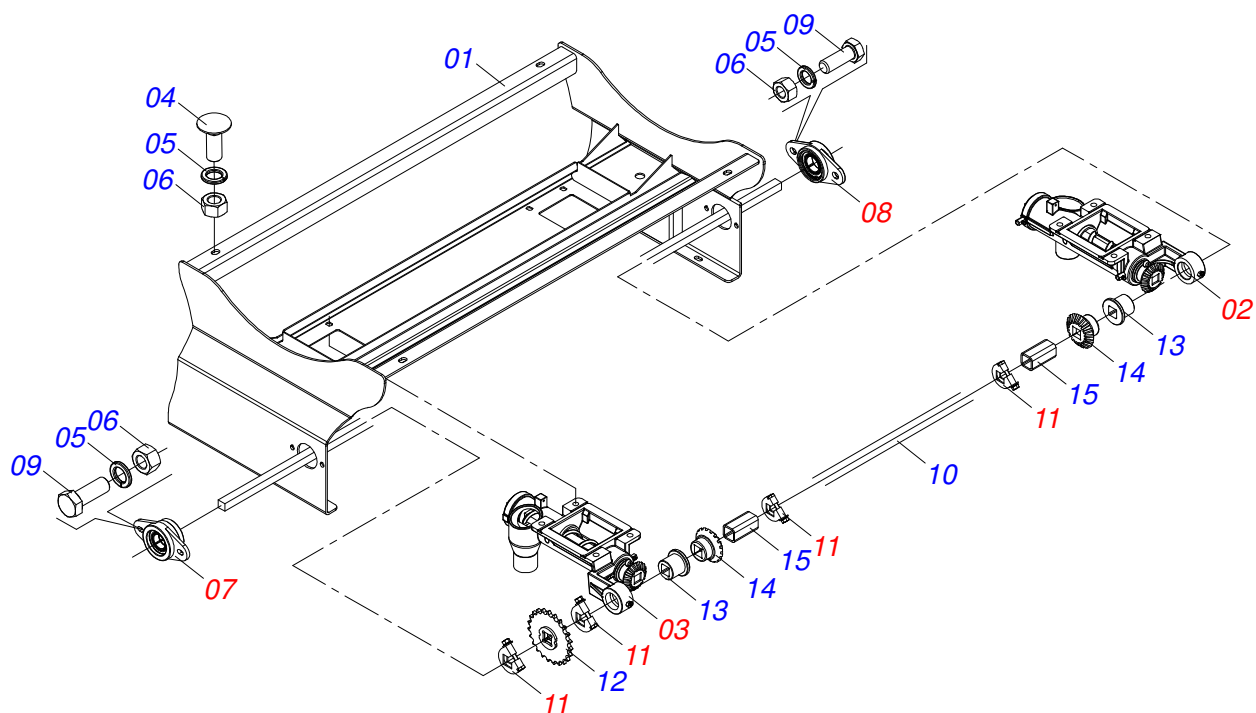 


Item	Code	Description	See page	QT
01	0521062960	SUPPORT BIN FERTILIZER BOX PLASTIC		01
02	0511051714	SIDE FERTILIZER DISTRIBUTOR	21	01
03	0511051715	SIDE FERTILIZER DISTRIBUTOR	22	01
04	0501811643	SCREW 3/8 UNC X 1 CAPQ G.2		08
05	0503011443	SPRING WASHER		12
06	0503810026	3/8" NUT		12
07	0501056451	BEARING	23	01
08	0501056444	BEARING WITH BALL BEARING	16	01
09	0503810237	3/8 UNC X 1 C S G.5 SA BOLT		04
10	0561018362	SQUARE SHAFT		01
11	0501053788	Q3/4" FASTENER AXLE ASSY	24	04
12	0511066098	23Z GEAR		01
13	0503030275	AGRICULTURAL BEARING		02
14	1902010685	18Z CONICAL GEAR		02
15	0551018055	22,65 X 60 SLEEVE		02

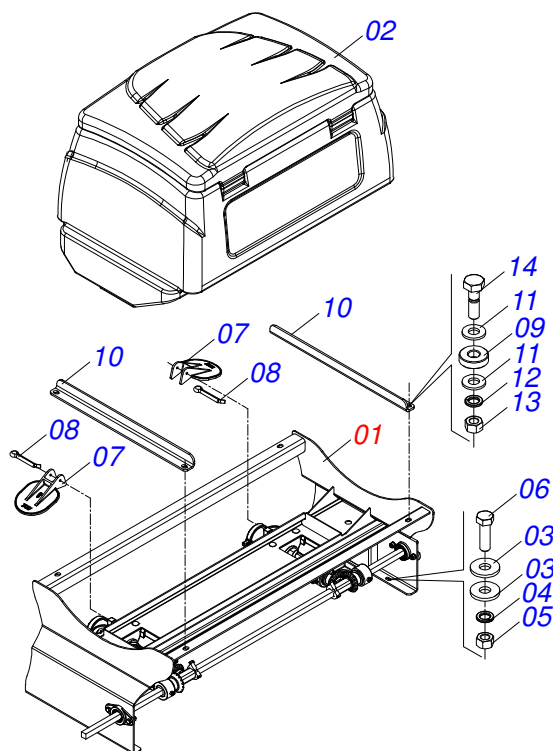 


Item	Code	Description	See page	QT
01	0511051717	LH BEAM SUPPORT	20	01
02	0503060693	BOX FERTILIZER ASSY		01
03	0501010984	FLAT WASHER		08
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0503034396	FERTILIZER SIDE COVER		02
08	0503010362	1/8" X 1.1/4" COTTERPIN		02
09	0581018852	GLOVE Ø13,5 X Ø35 X 10		04
10	0581018853	SEED BOX FIXATION		02
11	0501010937	FLAT WASHER		08
12	0503010019	1/2" SPRING WASHER		04
13	0503010060	1/2" NUT		04
14	0501019219	1/2" X 1-3/4" BOLT		04

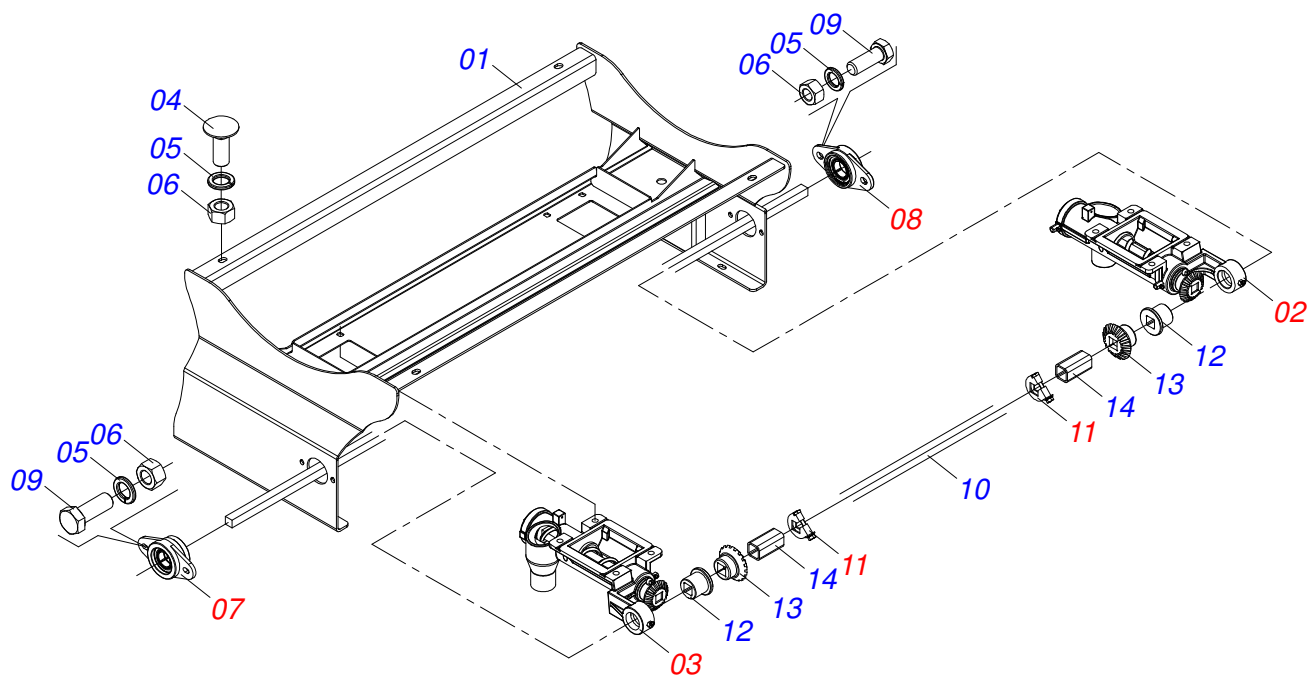 


Item	Code	Description	See page	QT
01	0521062960	SUPPORT BIN FERTILIZER BOX PLASTIC		01
02	0511051714	SIDE FERTILIZER DISTRIBUTOR	21	01
03	0511051715	SIDE FERTILIZER DISTRIBUTOR	22	01
04	0501811643	SCREW 3/8 UNC X 1 CAPQ G.2		08
05	0503011443	SPRING WASHER		12
06	0503810026	3/8" NUT		12
07	0501056444	BEARING WITH BALL BEARING	16	01
08	0501056451	BEARING	23	01
09	0503810237	3/8 UNC X 1 C S G.5 SA BOLT		04
10	0561018362	SQUARE SHAFT		01
11	0501053788	Q3/4" FASTENER AXLE ASSY	24	02
12	0503030275	AGRICULTURAL BEARING		02
13	1902010685	18Z CONICAL GEAR		02
14	0551018055	22,65 X 60 SLEEVE		02

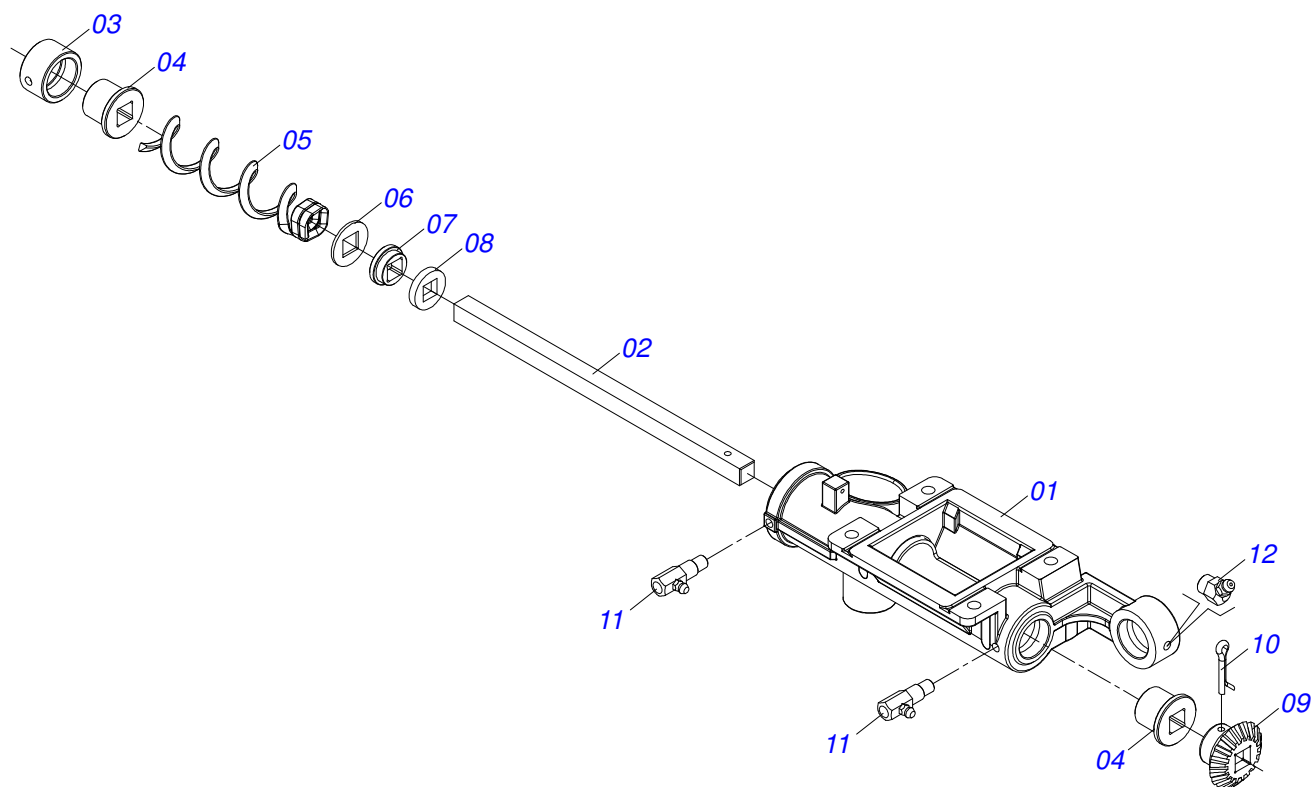 


Item	Code	Description	See page	QT
01	0501110690	DISTRIBUTOR FERTILIZER		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		02
12	0503010003	1845 GREASE FITTING		01

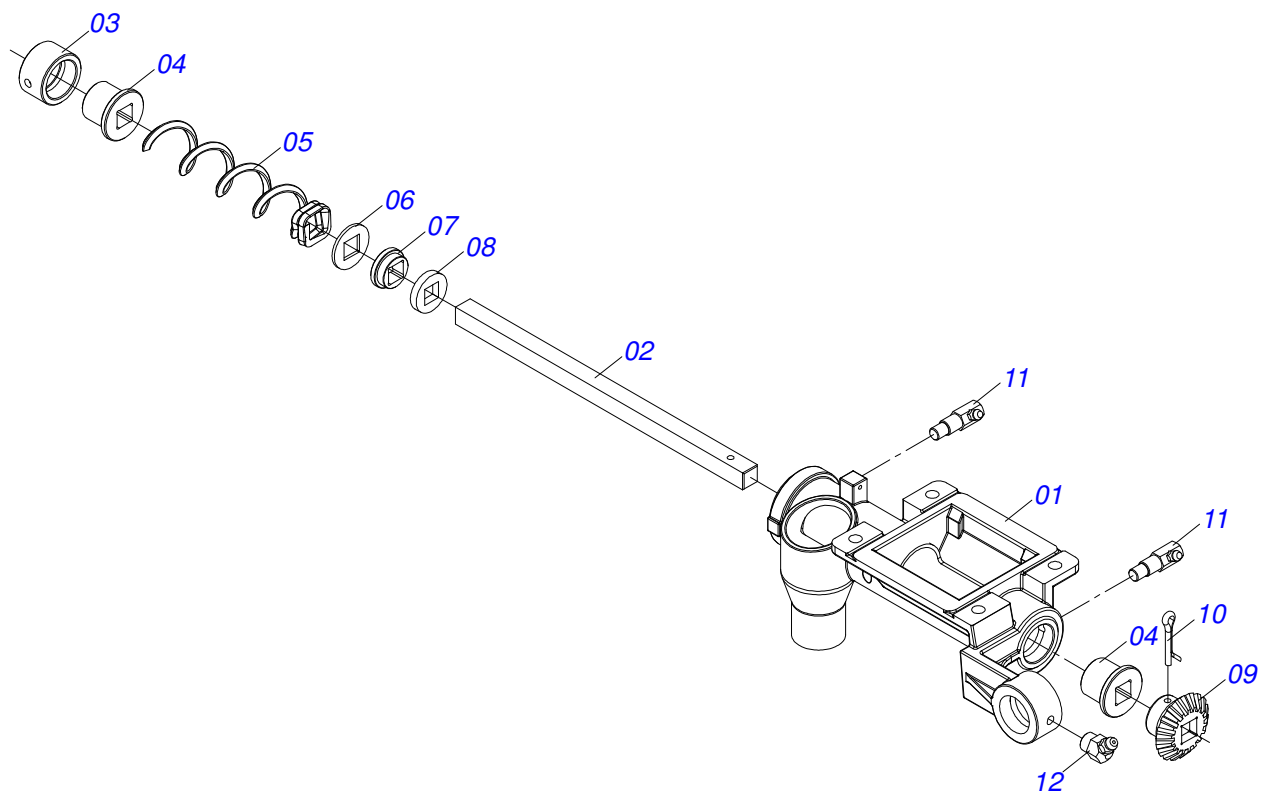 


Item	Code	Description	See page	QT
01	0501110691	DISTRIBUTOR FERTILIZER WITH SIDE OUTPUT		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		02
12	0503010003	1845 GREASE FITTING		01

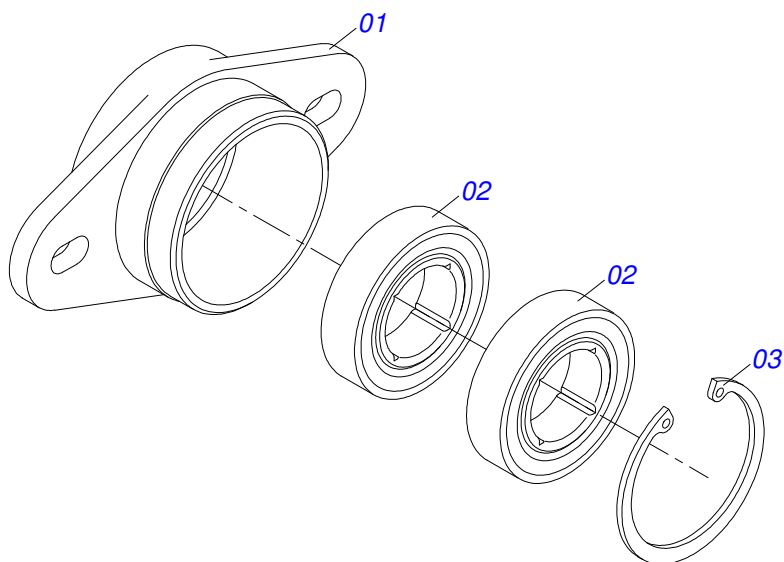 

Item	Code	Description	See page	QT
01	0502011971	HOUSING WITH DOUBLE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011105	SEAL RING		01

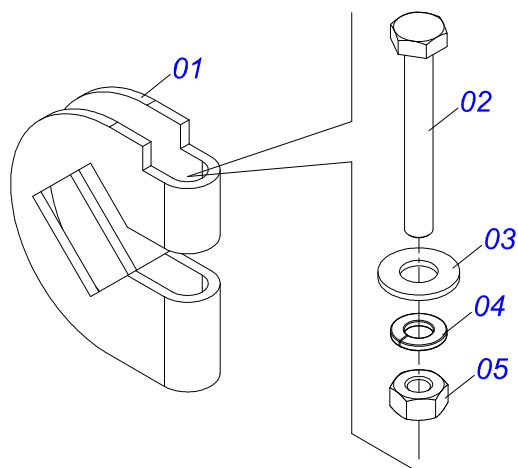 

Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	1/4" X 2" BOLT		01
03	0511817303	FLAT WASHER		01
04	0503010143	SPRING WASHER		01
05	0503010144	1/4" NUT		01

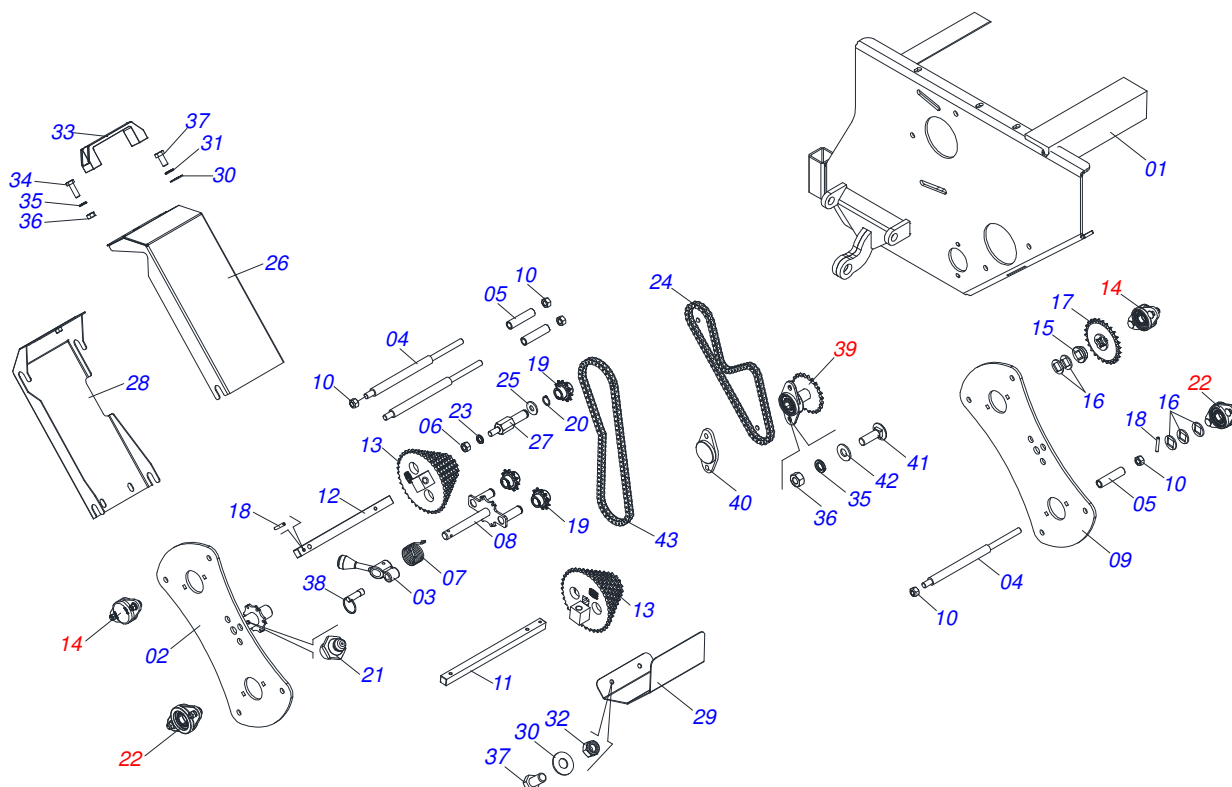 


Item	Code	Description	See page	QT
01	0521062567	FRAME 3° SCORE		1
02	0521062568	SIDE		2
03	0502011758	REAR TENSIONER LEVER		2
04	0571010425	JACK		8
05	0571010426	SLEEVE SUPPORT		8
06	0503010060	1/2" NUT		1
07	0503031367	SPRING		1
08	0511060392	CHAIN TENSIONER		2
09	0561019671	BODY		2
10	0503011336	1/2" HEX SELF ADJUSTING NUT		16
11	0581014147	MOTOR SHAFT		2
12	0561017353	MOTOR SHAFT		2
13	0511060396	DRIVE/DRIVEN AXLE CONE		4
14	0511059266	CLOSED BEARING	26	6
15	0503030303	SUPPORT WASHER		2
16	0521018630	1.4" X SQUARE 0.8" WASHER		18
17	0511067501	26Z GEAR		1
18	0503010292	0.2" X 1.6" SPRING PIN		8
19	0503031805	11Z 1/2" GEAR		5
20	0503010302	501019 SEAL RING		3
21	0503010002	1800 GREASE FITTING		2
22	0501056443	BEARING ASSY GEAR BOX	27	2
23	0503010019	1/2" SPRING WASHER		1
24	0503012204	40-1 CHAIN X 82 LINK + RED		2
25	0511017302	FLAT WASHER		1
26	0581012582	LEFT UPPER COVER		1
27	0561016554	CURRENT STRETCH AXIS WHEELED SUPPORT		1
28	0521067248	LEFT PROTECTION COVER		1
29	0581012580	REAR COVER		2
30	0501013518	FLAT WASHER		6
31	0503010025	3/8 SPRING WASHER		2


SEED GEAR BOX

0909092680


Item	Code	Description	See page	QT
32	0503013357	3/8" SELF-ADJUSTING NUT		4
33	0503011907	PMC 594-S NYLON LUG		2
34	0503010363	5/16" X 1" BOLT		4
35	0503010179	SPRING WASHER		6
36	0503010337	5/16" NUT		6
37	0503010256	3/8" X 3/4" BOLT		6
38	0501048790	AXLE WITH LINK ASSY		2
39	0511051511	BEARING	28	1
40	0561014215	BEARING COVER LOWER ROW FRAME		1
41	0503011953	5/16" X 1" BOLT		2
42	0501010694	FLAT WASHER		2
43	0503014528	40-1 CHAIN X 72 LINK + REDECTION		1

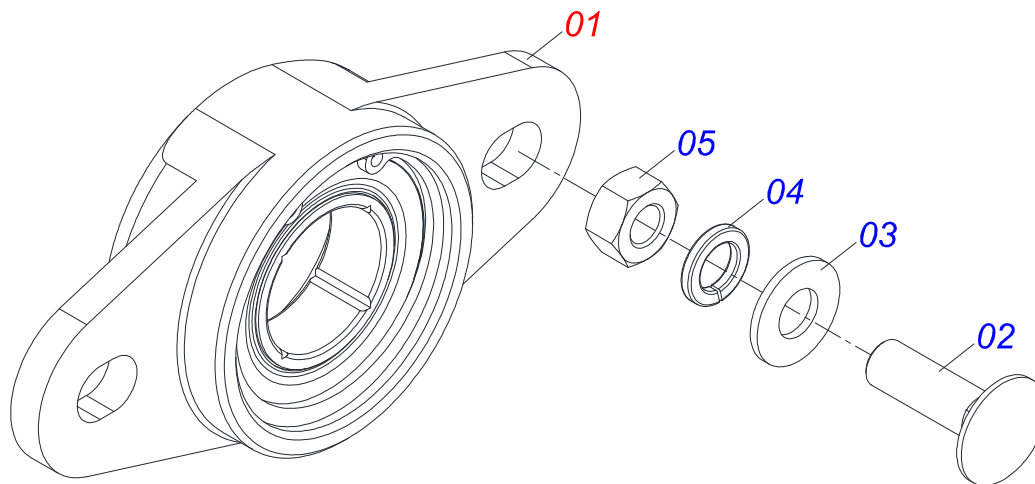 


Item	Code	Description	See page	QT
01	0501056271	BEARING CLOSED		01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	SPRING WASHER		02
05	0503010337	5/16" NUT		02

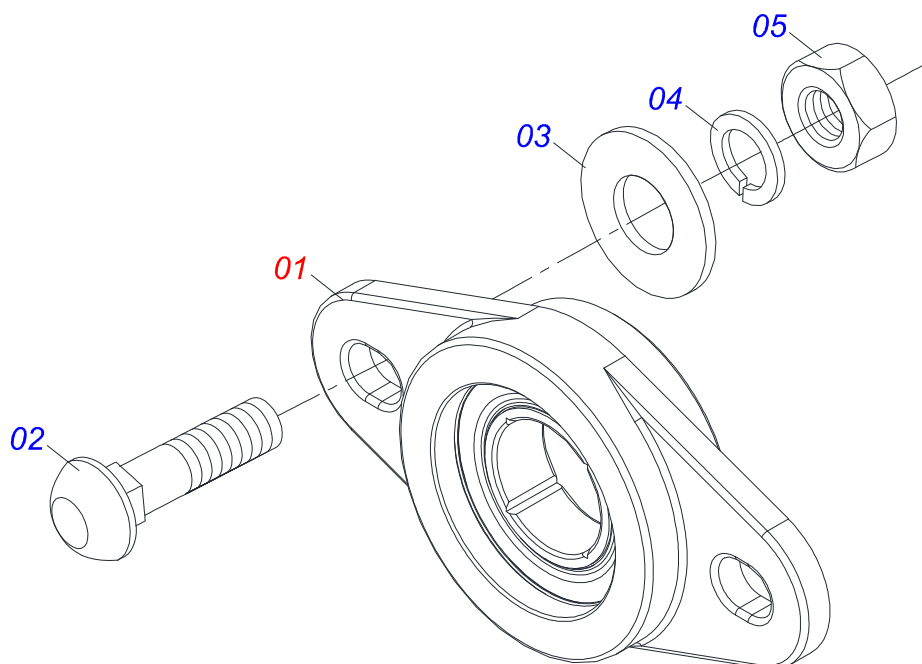 

Item	Code	Description	See page	QT
01	0501056444	BEARING WITH BALL BEARING	16	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	SPRING WASHER		02
05	0503010337	5/16" NUT		02

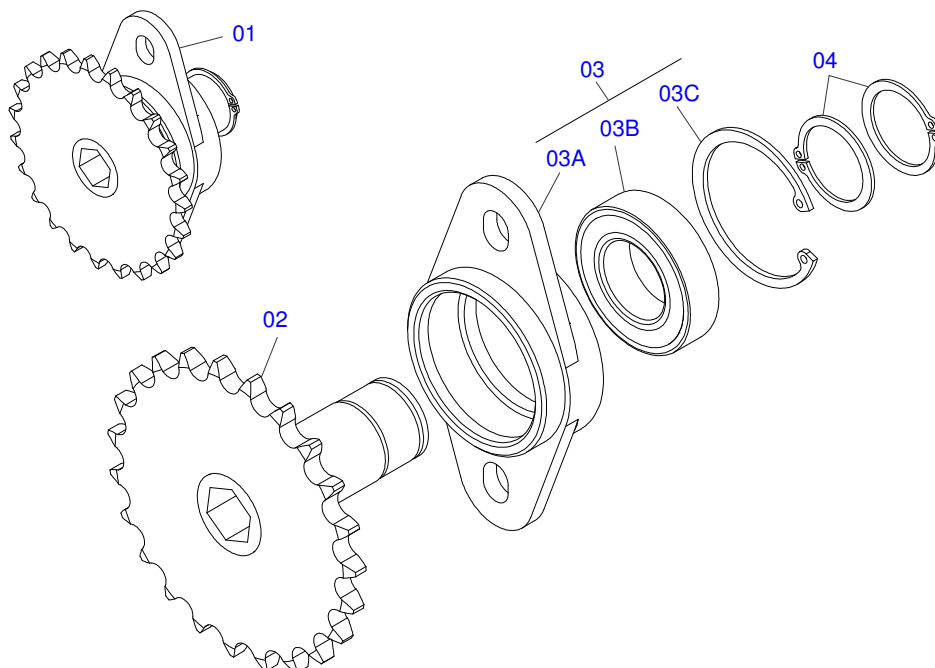 

Item	Code	Description	See page	QT
01	0511051511	BEARING	28	01
02	0521062842	23Z GEAR		01
03	0501059059	LARGE BEARING ROW SEED ASSY		01
03A	0502011697	BEARING OF THE GEAR BOX		01
03B	0503011410	ROLLER BEARING		01
03C	0503011105	SEAL RING		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		02

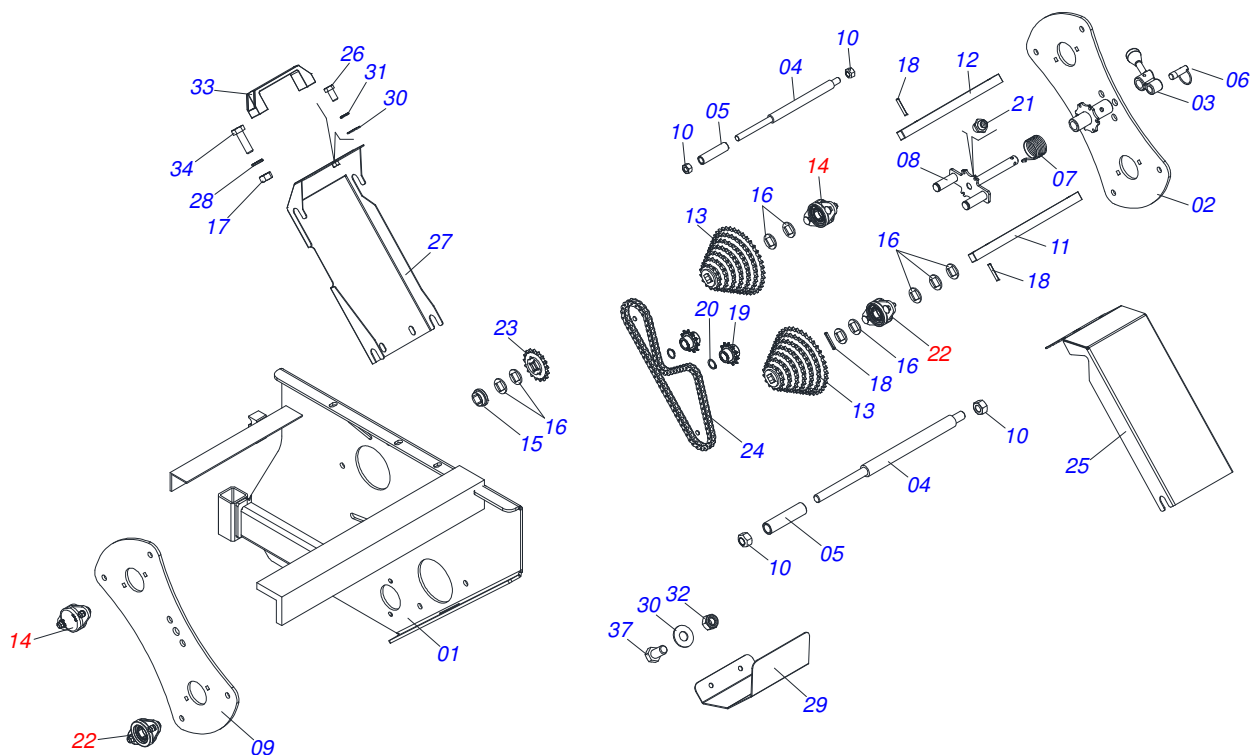 


Item	Code	Description	See page	QT
01	0521062567	FRAME 3º SCORE		1
02	0521062568	SIDE		2
03	0502011758	REAR TENSIONER LEVER		2
04	0571010425	JACK		8
05	0571010426	SLEEVE SUPPORT		8
06	0501048790	AXLE WITH LINK ASSY		2
07	0503031367	SPRING		1
08	0511060392	CHAIN TENSIONER		2
09	0561019671	BODY		2
10	0503011336	1/2" HEX SELF ADJUSTING NUT		16
11	0581014147	MOTOR SHAFT		2
12	0561017353	MOTOR SHAFT		2
13	0511060396	DRIVE/DRIVEN AXLE CONE		4
14	0511059266	CLOSED BEARING	26	6
15	0503030303	SUPPORT WASHER		2
16	0521018630	1.4" X SQUARE 0.8" WASHER		18
17	0503010337	5/16" NUT		6
18	0503010292	0.2" X 1.6" SPRING PIN		8
19	0503031805	11Z 1/2" GEAR		5
20	0503010302	501019 SEAL RING		3
21	0503010002	1800 GREASE FITTING		2
22	0501056443	BEARING ASSY GEAR BOX	27	2
23	0511061830	17Z P 0.5" GEAR SQUARE HOL		1
24	0503012204	40-1 CHAIN X 82 LINK + RED		2
25	0581012581	TOP RIGHT COVER		1
26	0503010256	3/8" X 3/4" BOLT		6
27	0521067247	RIGHT PROTECTION COVER		1
28	0503010256	3/8" X 3/4" BOLT		6
29	0581012580	REAR COVER		2
30	0501013518	FLAT WASHER		6
31	0503010025	3/8 SPRING WASHER		2



PHT4 SUPREMA 7/4 MH ANGOLA
FERTILIZER GEAR BOX

Page 29
0909092738


Item	Code	Description	See page	QT
32	0503013357	3/8" SELF-ADJUSTING NUT		4
33	0503011907	PMC 594-S NYLON LUG		2
34	0503010363	5/16" X 1" BOLT		4
35	0503010179	SPRING WASHER		6

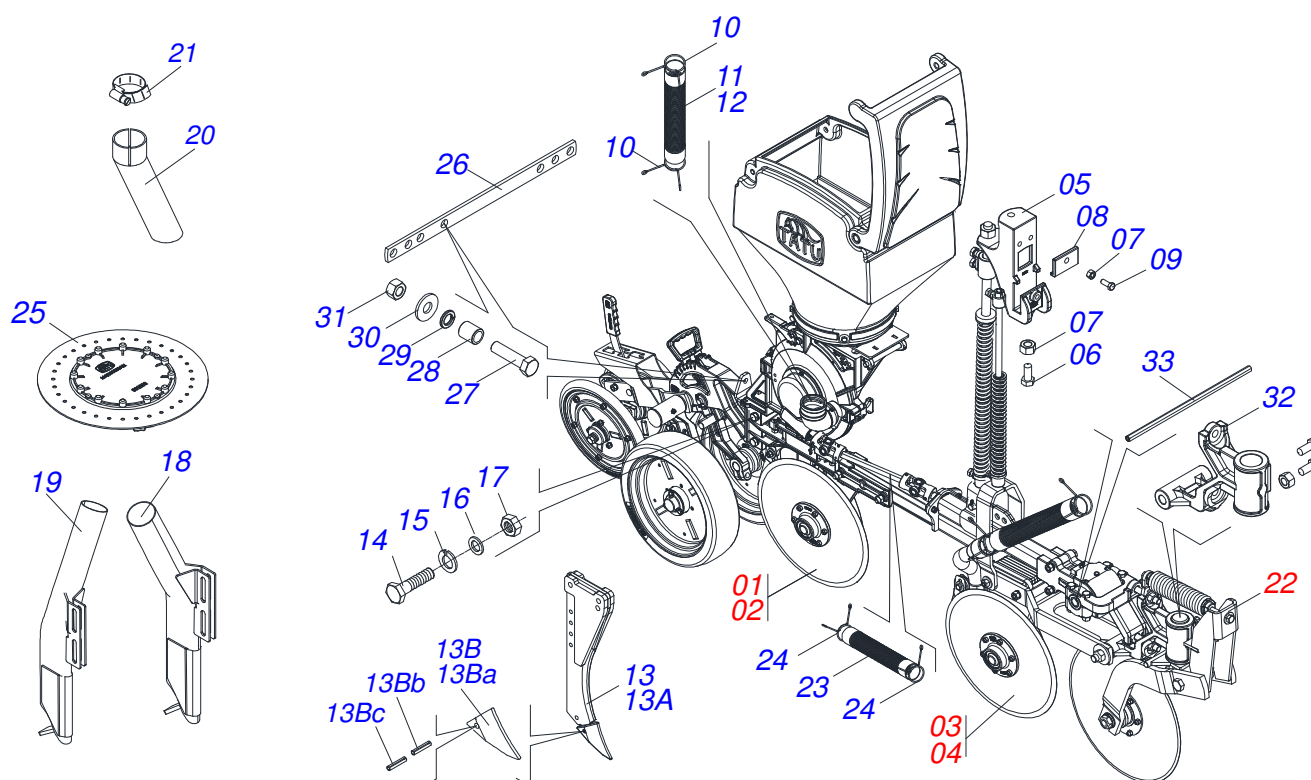 


Item	Code	Description	See page	QT
01	0511057613	RIGHT SEED ROW PHT SUPREMA ANGOLA	31	01
02	0511057614	LEFTH SEED ROW PHT4 SUPLEMA	32	01
03	0511057589	RIGHT ARM FERTILIZER ROW ASSY	55	01
04	0511057591	LH FERTILIZER ROW ASSY	58	01
05	0571011443	ROD GUIDE SUPPORT		01
06	0503010920	1/2" X 1.1/2" BOLT		01
07	0503010060	1/2" NUT		02
08	0502010891	SPRING CHOCK SUPPORT VARON		01
09	0503010395	1/2" X 1-1/4" BOLT		01
10	0503010246	CLAMP		02
11	0521018571	HOSE		01
12	0521010647	HOSE		01
13	0501110231	SCARIFIER HEAD WITH SPIKE 0061		01
13A	0511061768	FERTILIZER SCARIFIER SPINDLE		01
13B	0501056132	POINT SUBSOILER		01
13Ba	0502070061	POINT SUBSOILER		01
13Bb	0503010585	0,24" X 1.18" SPRING PIN		01
13Bc	0503011373	0.4" X 1.1" SPRING PIN		01
14	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
15	0501010984	FLAT WASHER		04
16	0503010025	3/8 SPRING WASHER		02
17	0503010026	3/8" NUT		02
18	0511061769	FERTILIZER CONDUCTOR RIGHT		01
19	0511061770	FERTILIZER CONDUCTOR LEFT		01
20	0503031050	CURVED CONDUCTOR		01
21	0503010246	CLAMP		01
22	0511058164	16" COULTER BLADE ASSY	53	01
23	0503030195	2" X 2" X 12.2" HOSE		01
24	0503031076	2" HOSE CLAMP		01
25	0511058626	SOYBEAN DISC 7040		04
26	0501018652	CORN STABILIZER BAR		01




Item	Code	Description	See page	QT
27	0503010740	1/2" X 2" BOLT		01
28	0521010505	13,50 X 19,00 X 21,50 SLEEVE		01
29	0503010019	1/2" SPRING WASHER		01
30	0511017302	FLAT WASHER		01
31	0503010060	1/2" NUT		01
32	0511058212	SET LINE SUPPORT FERTILIZER		01
33	0571011451	HEX AXLE		01

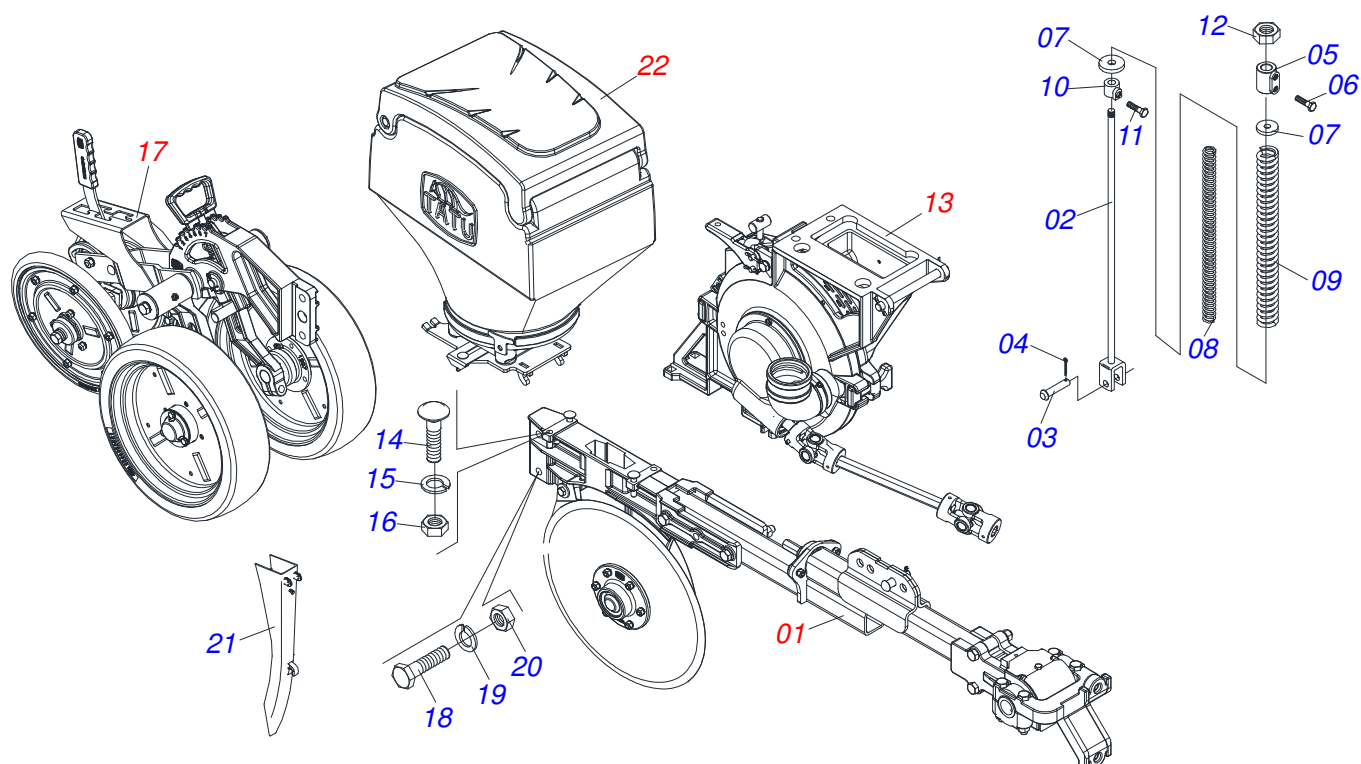 


Item	Code	Description	See page	QT
001	0511057586	RH SEED ROW ARM	33	01
002	0521062824	SPINDLE GUIDE		01
003	0521010542	COUPLING SHAFT		01
004	0503010257	1/8" X 1" COTTERPIN		01
005	0521062825	LOCK VARON GUIDE		01
006	0503010834	1/2 X 1 BOLT		02
007	0531019915	FLAT WASHER		01
008	0503031359	1"X15.75"X0.15" COMPRESSION SPRING		01
009	0503031360	1.68"X17.75"X0.3" COMPRESS SPRING		01
010	0502040534	SPRING GUIDE BUSHING LOCK		01
011	0501018535	1/2 X 1 BOLT		01
012	0503010335	3/4"NUT		01
013	0511057611	PNEUMATIC SEED DISTRIBUTOR	38	01
014	0503011404	3/8" X 1-3/4" BOLT		04
015	0503010025	3/8 SPRING WASHER		04
016	0503010026	3/8" NUT		04
017	0521040159	DEPTH WHEEL SYSTEM	43	01
018	0503010740	1/2" X 2" BOLT		02
019	0503010019	1/2" SPRING WASHER		02
020	0503010060	1/2" NUT		02
021	0503062403	TUBE SEED PRECISION PLANTING		01
022	0511057674	SEED BOX	52	01

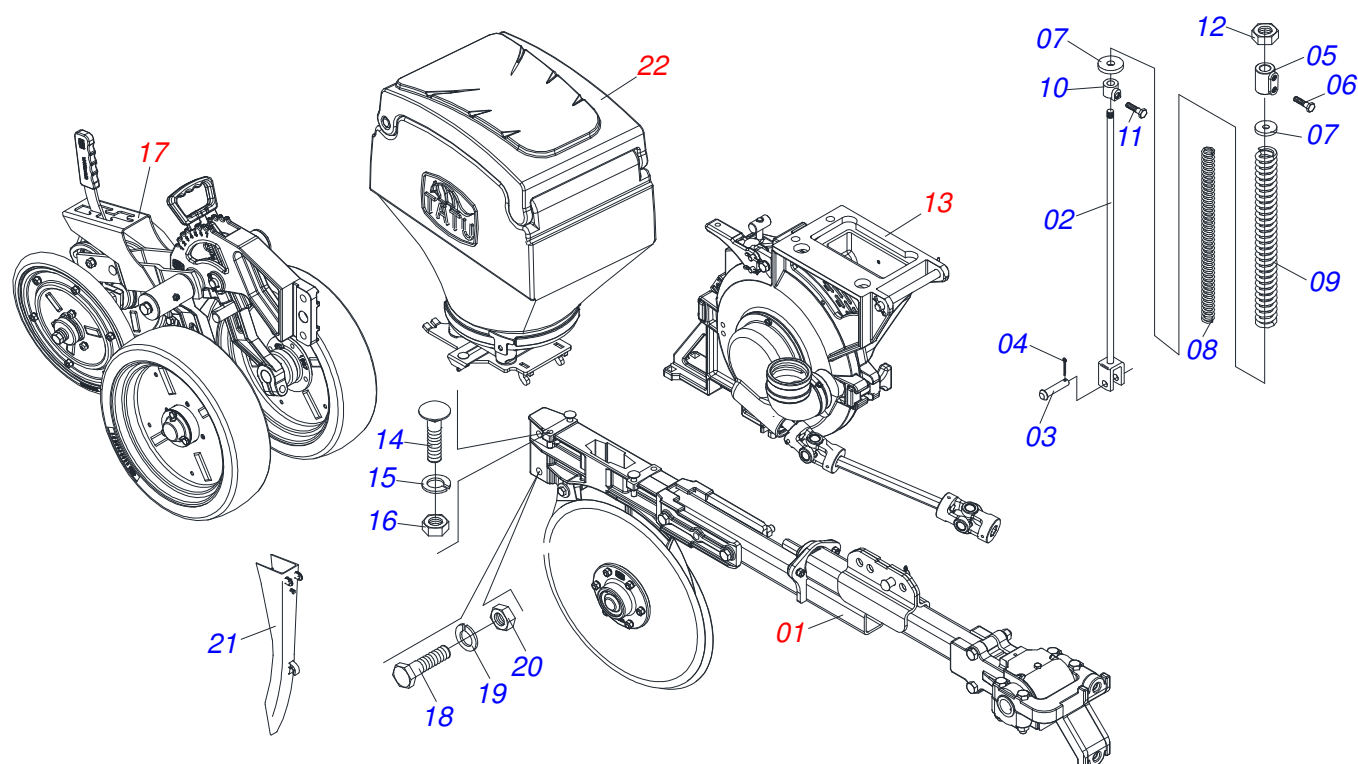 


Item	Code	Description	See page	QT
001	0511057588	LH SEED ROW ARM	35	01
002	0521062824	SPINDLE GUIDE		01
003	0521010542	COUPLING SHAFT		01
004	0503010257	1/8" X 1" COTTERPIN		01
005	0521062825	LOCK VARON GUIDE		01
006	0503010834	1/2 X 1 BOLT		02
007	0531019915	FLAT WASHER		01
008	0503031359	1"X15.75"X0.15" COMPRESSION SPRING		01
009	0503031360	1.68"X17.75"X0.3" COMPRESS SPRING		01
010	0502040534	SPRING GUIDE BUSHING LOCK		01
011	0501018535	1/2 X 1 BOLT		01
012	0503010335	3/4"NUT		01
013	0511057611	PNEUMATIC SEED DISTRIBUTOR	38	01
014	0503011404	3/8" X 1-3/4" BOLT		04
015	0503010025	3/8 SPRING WASHER		04
016	0503010026	3/8" NUT		04
017	0521040159	DEPTH WHEEL SYSTEM	43	01
018	0503010740	1/2" X 2" BOLT		02
019	0503010019	1/2" SPRING WASHER		02
020	0503010060	1/2" NUT		02
021	0503062403	TUBE SEED PRECISION PLANTING		01
022	0511057674	SEED BOX	52	01

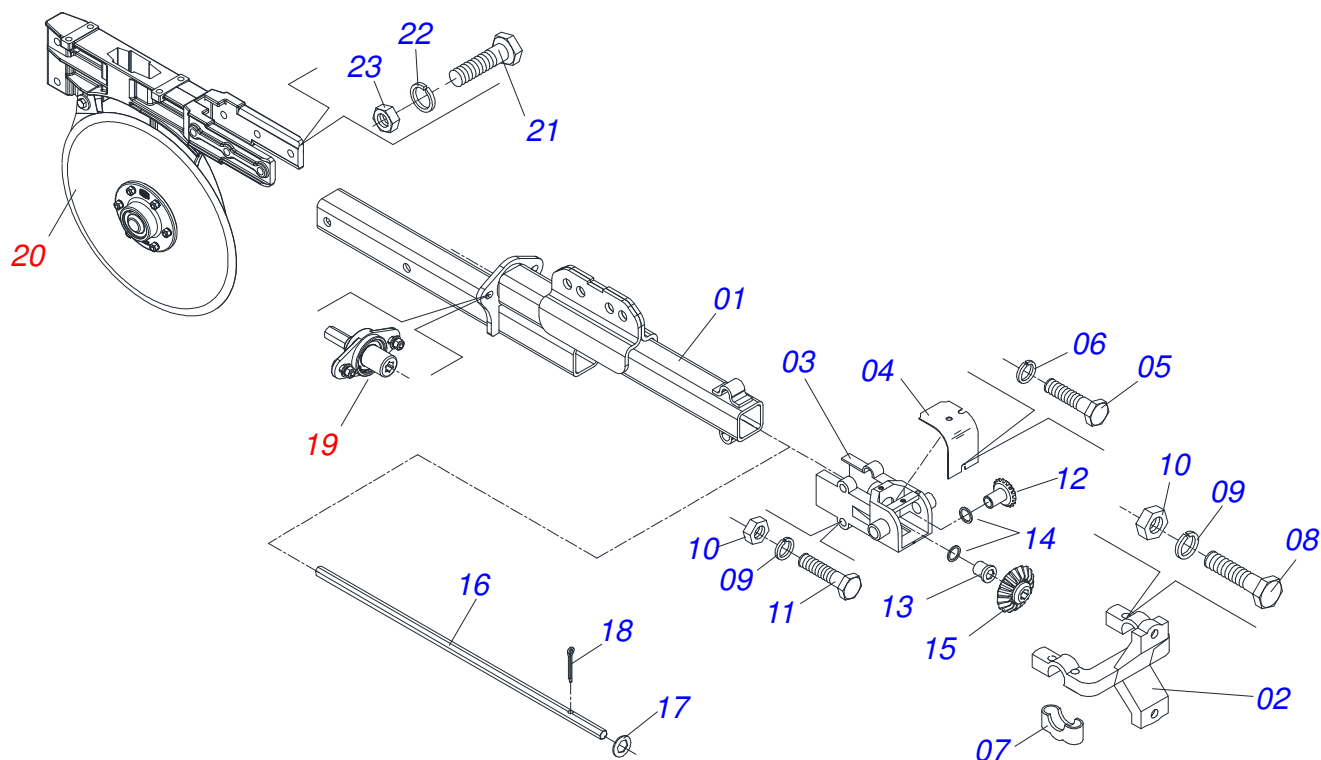 


Item	Code	Description	See page	QT
001	0521066077	SEED ROW ARM		01
002	0502011561	BEARING SEMI		01
003	0571010152	ROW SEED SUPPORT ARTICULACION		01
004	0521018079	SEEP ROW DRAWBAR COVER		01
005	0503014729	1/4" UNF X 1/2" BOLT		02
006	0503011441	SPRING WASHER		02
007	0502010426	UPPER BEARING SEMI		02
008	0503010479	1/2" X 3" BOLT		04
009	0503011440	SPRING WASHER		04
010	0503010060	1/2" NUT		04
011	0503010752	1/2" X 3.1/2" BOLT		02
012	0502011400	18Z CONICAL GEAR		01
013	0502011296	1/2 HEX AXLE BEARING SLEEVE		01
014	0501013354	FLAT WASHER		02
015	0502011505	18Z CONICAL GEAR		01
016	0561019673	1/2" X 540 HEX AXLE		01
017	0501013352	FLAT WASHER		01
018	0503010257	1/8" X 1" COTTERPIN		01
019	0511052324	CARDAN TRANSMISSION BEARING	34	01
020	0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	36	01
021	0503010706	1/2" X 4.1/2" BOLT		02
022	0503011440	SPRING WASHER		02
023	0503010060	1/2" NUT		02

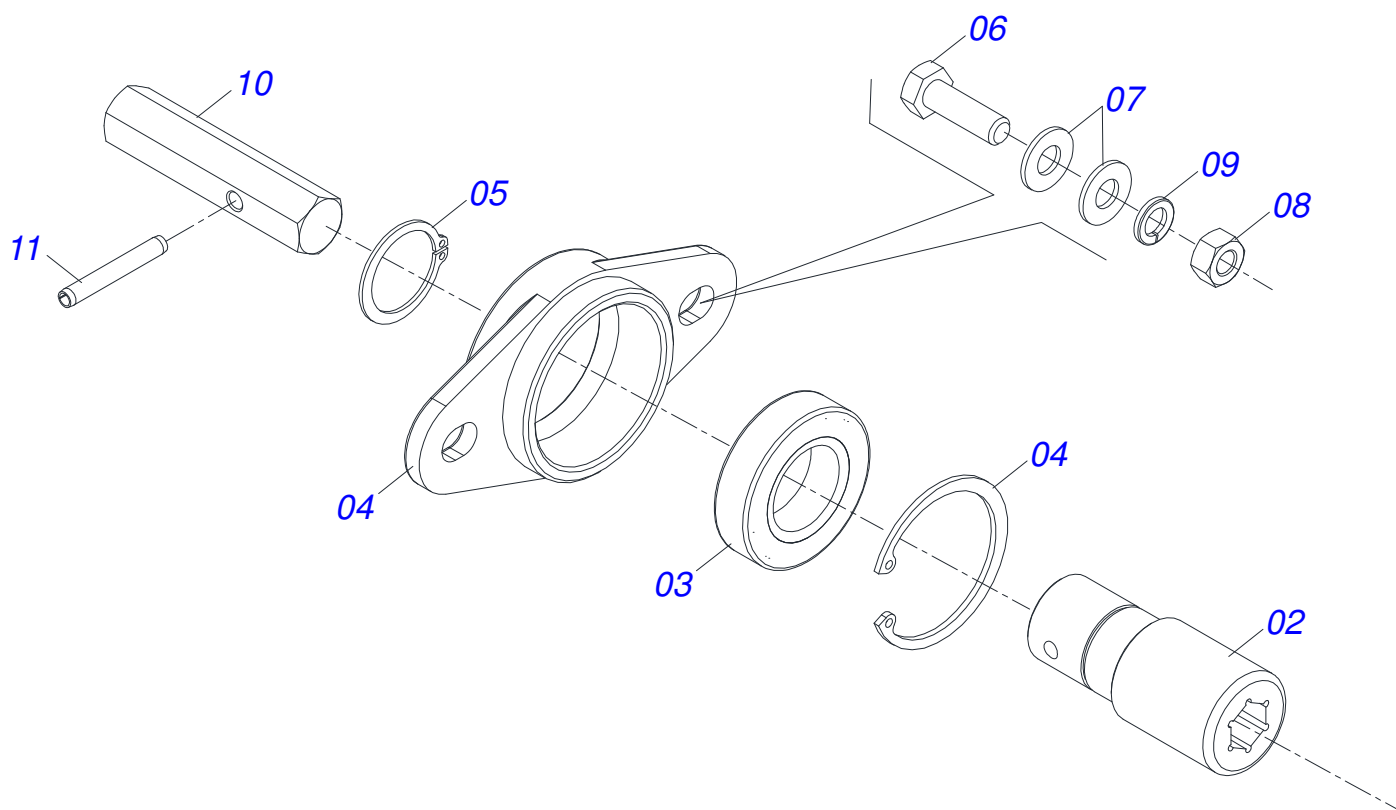 


Item	Code	Description	See page	QT
001	0571012290	BEARIN BODY		01
002	0571012289	SLLEVE FIXER AXLE		01
003	0503011410	ROLLER BEARING		01
004	0503011105	SEAL RING		01
005	0503010406	501025 CLAMPING RING (FOR AXLE)		01
006	0503010371	5/16" X 1" BOLT		02
007	0501010694	FLAT WASHER		04
008	0503010337	5/16" NUT		02
009	0503010179	SPRING WASHER		02
010	0571012288	HEX AXLE		01
011	0503015356	SPRING PIN		01

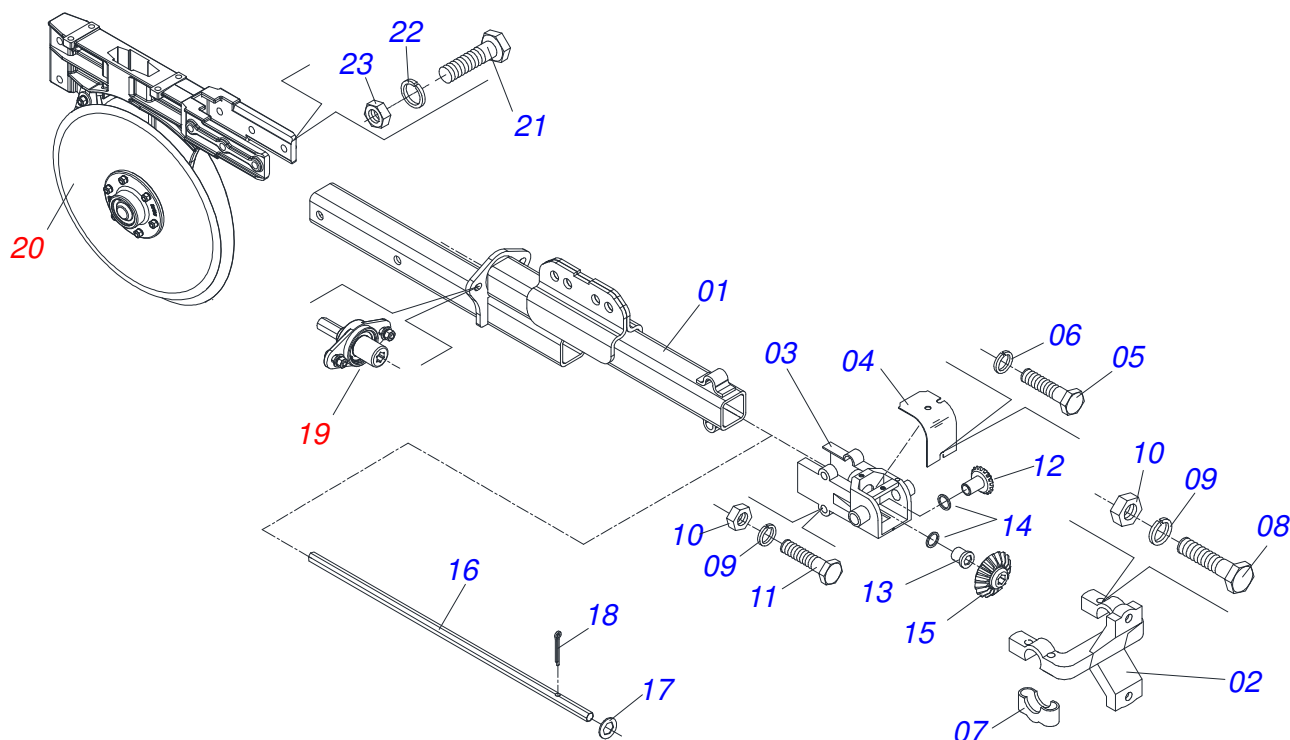 


Item	Code	Description	See page	QT
001	0521066077	SEED ROW ARM		01
002	0502011561	BEARING SEMI		01
003	0571010152	ROW SEED SUPPORT ARTICULACION		01
004	0521018079	SEEP ROW DRAWBAR COVER		01
005	0503014729	1/4" UNF X 1/2" BOLT		02
006	0503011441	SPRING WASHER		02
007	0502010426	UPPER BEARING SEMI		02
008	0503010479	1/2" X 3" BOLT		04
009	0503011440	SPRING WASHER		04
010	0503010060	1/2" NUT		04
011	0503010752	1/2" X 3.1/2" BOLT		02
012	0502011400	18Z CONICAL GEAR		01
013	0502011296	1/2 HEX AXLE BEARING SLEEVE		01
014	0501013354	FLAT WASHER		02
015	0502011505	18Z CONICAL GEAR		01
016	0561019673	1/2" X 540 HEX AXLE		01
017	0501013352	FLAT WASHER		01
018	0503010257	1/8" X 1" COTTERPIN		01
019	0511052324	CARDAN TRANSMISSION BEARING	34	01
020	0511056586	15 X 15 SEED DDD LEFT	37	01
021	0503010706	1/2" X 4.1/2" BOLT		02
022	0503011440	SPRING WASHER		02
023	0503010060	1/2" NUT		02

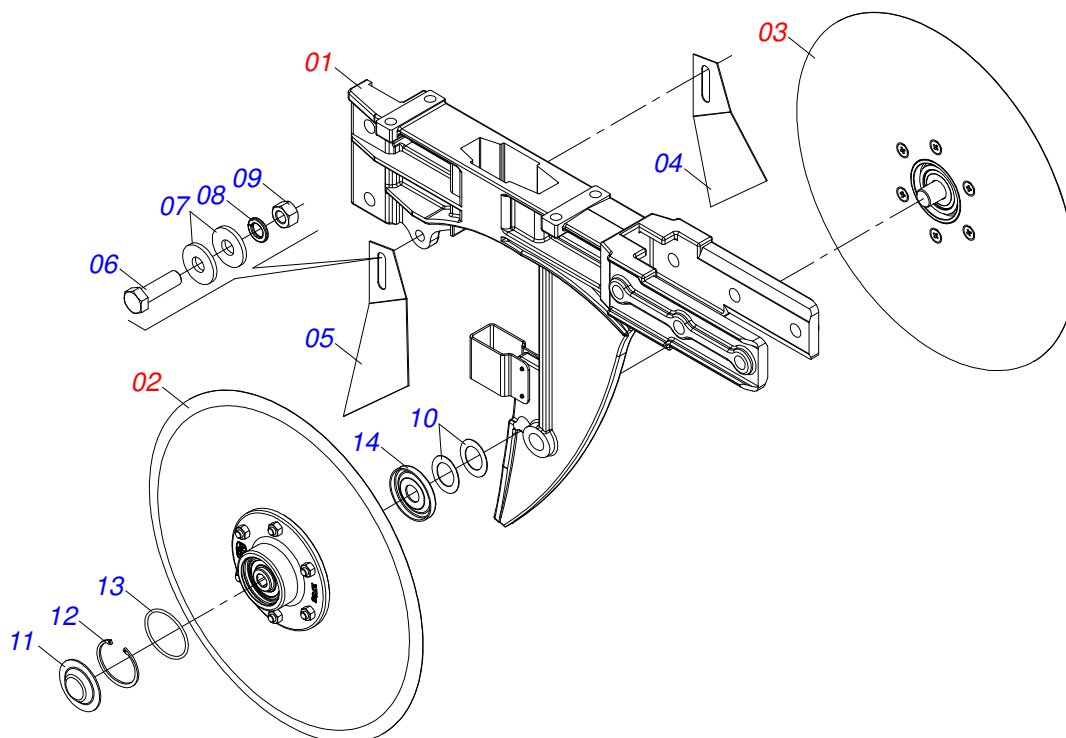 


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT		01
02	0511053173	CUBE LOW RIGHT WITH DISC 15		01
03	0511053172	LEFT LOW CUBE WITH DISC 15		01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503010025	3/8 SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511015098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O-RING		02
14	0511011927	DUST CLOAK		02

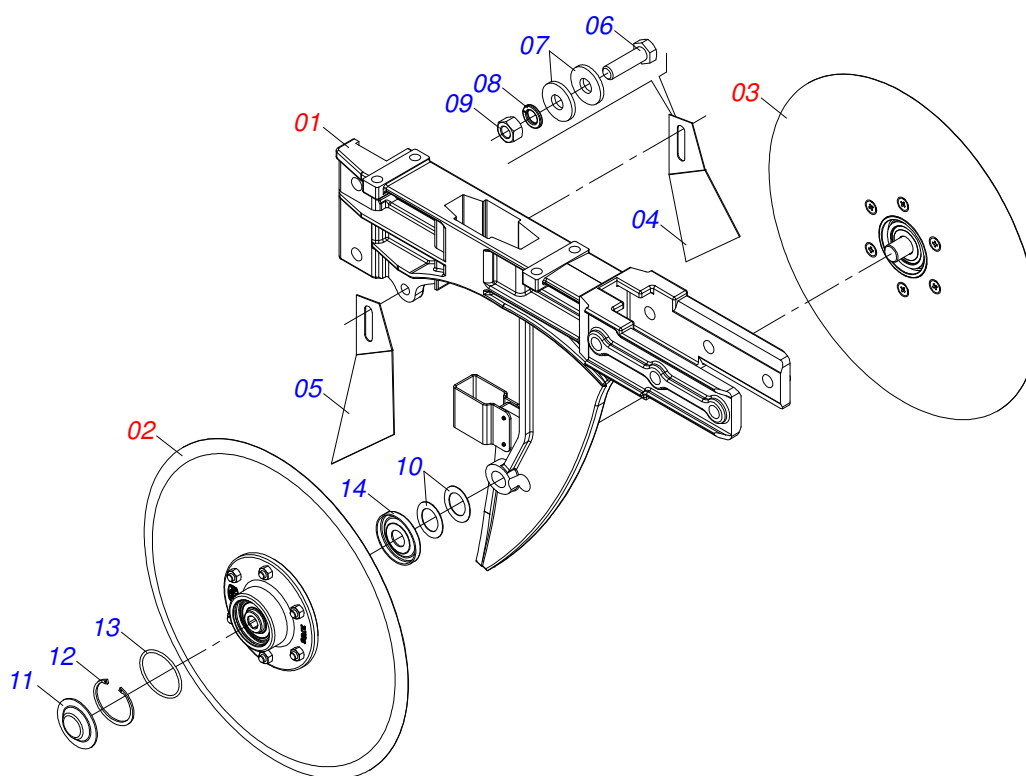 


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE		01
02	0511053173	CUBE LOW RIGHT WITH DISC 15		01
03	0511053172	LEFT LOW CUBE WITH DISC 15		01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503011443	SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511015098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O'RING		02
14	0511011927	DUST CLOAK		02

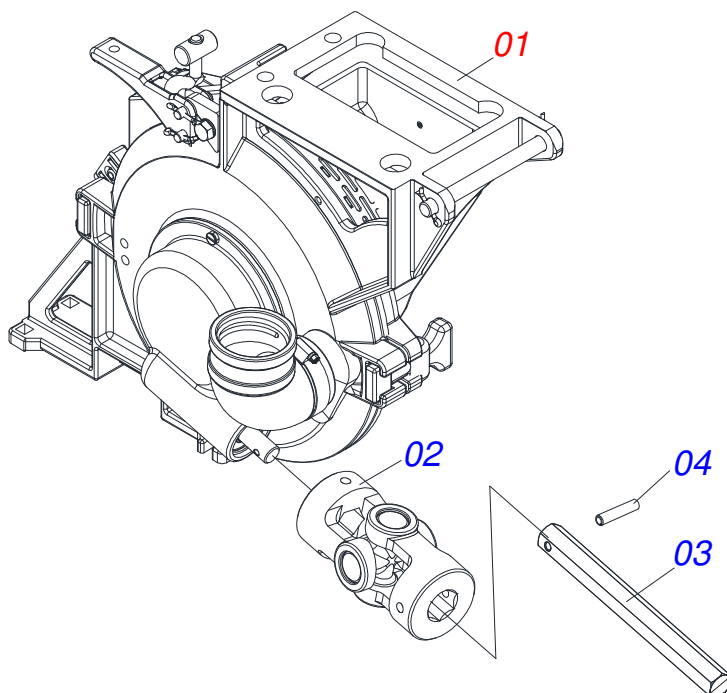 


Item	Code	Description	See page	QT
001	0511057612	PNEUMATIC SEED DISTRIBUTOR	39	01
002	0501056296	UNIVERSAL JOINT ASSY		02
003	0571018555	170 HEX AXLE SEED		01
004	0503011855	0.2" X 1.8" SPRING PIN		02

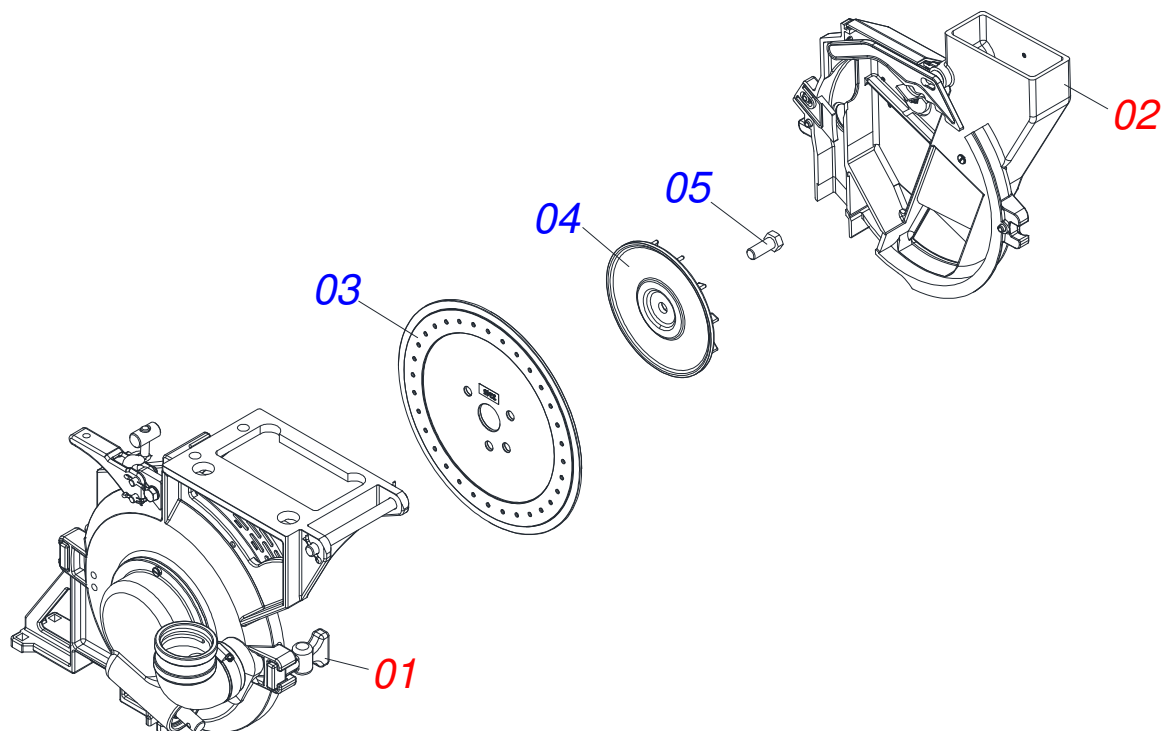 


Item	Code	Description	See page	QT
001	0511055631	SUPPORT PNEUMATIC	40	01
002	0511055624	COVER SYTEM PNEUMATIC	41	01
003	0511058621	CORN DISC PNEUMATIC		01
004	0503033839	STIRRER SEED PNEUMATIC DISTRIBUTOR		01
005	0503017375	1/2" X 1-1/4" BOLT		01

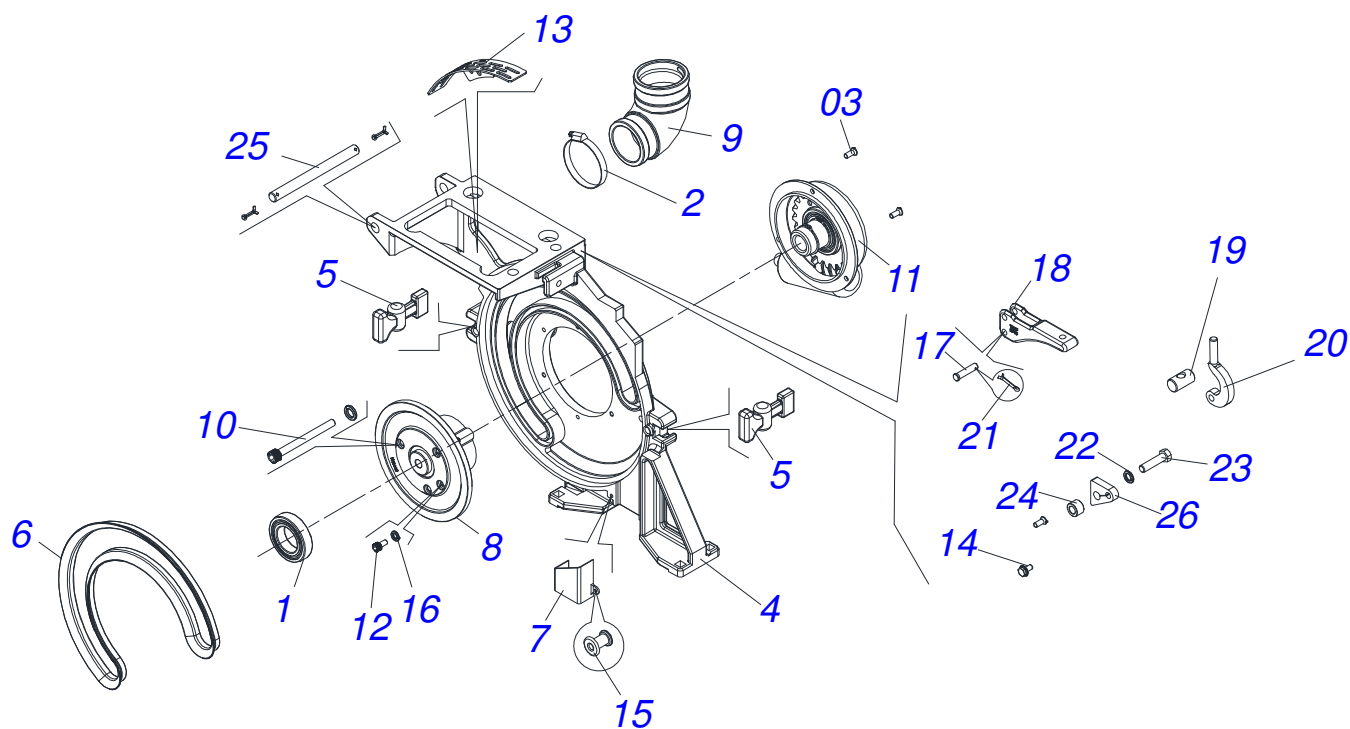 


Item	Code	Description	See page	QT
001	0503011183	6007 ROLLER BEARING		01
002	0503010246	CLAMP		01
003	0503017374	M6 X 1" BOLT		03
004	0502012761	SUPPORT PNEUMATIC		01
005	0503033978	FASTENER JOINT RUBBER		02
006	0503033977	GASKET PNEUMATIC		01
007	0503033958	PROTECTION COVER SOCKET PNEUMATIC		01
008	0502050020	SUPPORT DISC PNEUMATIC		01
009	0503033974	ELBOW SUCTION PNEUMATIC		01
010	0503017372	BOLT M6 X 1 X 65		03
011	0511055632	BOX TRANSMISSION PNEUMATIC	42	01
012	0503017373	BOLT		01
013	0521065278	STRAW SHIELD PNEUMATIC		01
014	0503017868	BOLT		01
015	0503012722	0.16" X 0.4" BLIND RIVET		02
016	0503010179	SPRING WASHER		04
017	0571014024	FAST BOLT GUIDE AXLE		02
018	0502012744	SPEED LOCK LEVER ASSY		01
019	0571011804	FAST BOLT ADJUSTMENT		01
020	0571011803	PRISONER CLOSE FAST		01
021	0503010140	1/8" X 3/4" COTTERPIN		04
022	0503010025	3/8 SPRING WASHER		01
023	0503010849	3/8" X 1-1/2" BOLT		01
024	0571018506	SLEEVE SUPPORT		01
025	0571018508	SEED BOX BASE AXLE		01
026	0571018507	FIXER OF PROTECTION		01

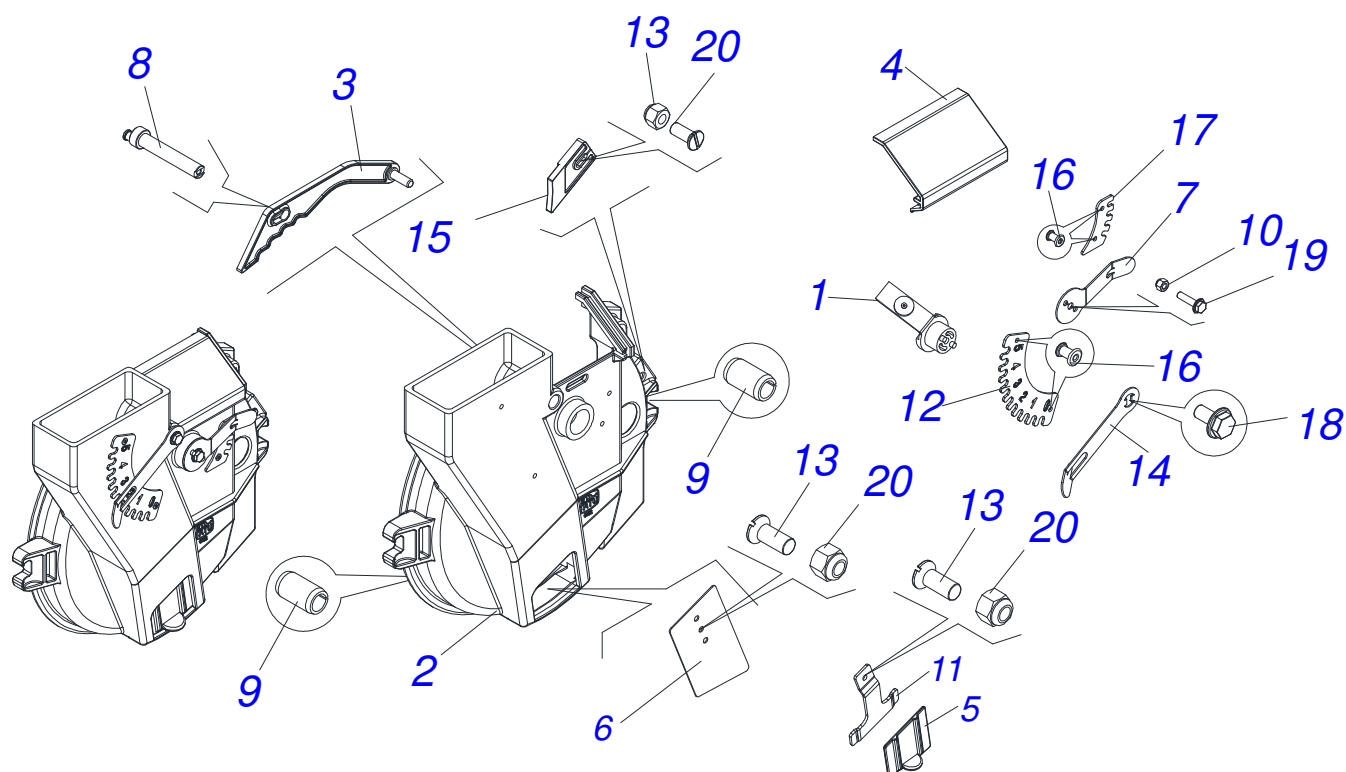 


Item	Code	Description	See page	QT
001	0501110311	LOWER SELECTOR ASSY		01
002	0502050051	COVER KIT PNEUMATIC		01
003	0503033959	SELECTOR PNEUMATIC		01
004	0503033957	DISPLAY		01
005	0503033960	DRAINER PNEUMATIC		01
006	0571016191	SLUICE DOSER PNEUMATIC		01
007	0571016189	REGULATOR PNEUMATIC		01
008	0571016188	ADJUSTMENT AXLE SELECTOR PNEUMATIC		01
009	0503010846	0.31" X 0.55" 701179 SPRING PIN		02
010	0503011776	M6 SELF ADJUSTINGNUT		01
011	0571016520	FIXER SLUICE VALVE PNEUMATIC		01
012	0571016202	DISPLAY REGULATOR		01
013	0503015536	M6 X 1" SELF ADJUSTING NUT		02
014	0571017273	REGULATOR SELECTOR PNEUMATIC		01
015	0571017267	POSITIONER RADIUS PNEUMATIC		01
016	0503012722	0.16" X 0.4" BLIND RIVET		04
017	0571018556	DISPLAY REGULATOR		01
018	0503017868	BOLT		01
019	0503017869	M6 X 1" BOLT		01
020	0503017374	M6 X 1" BOLT		03

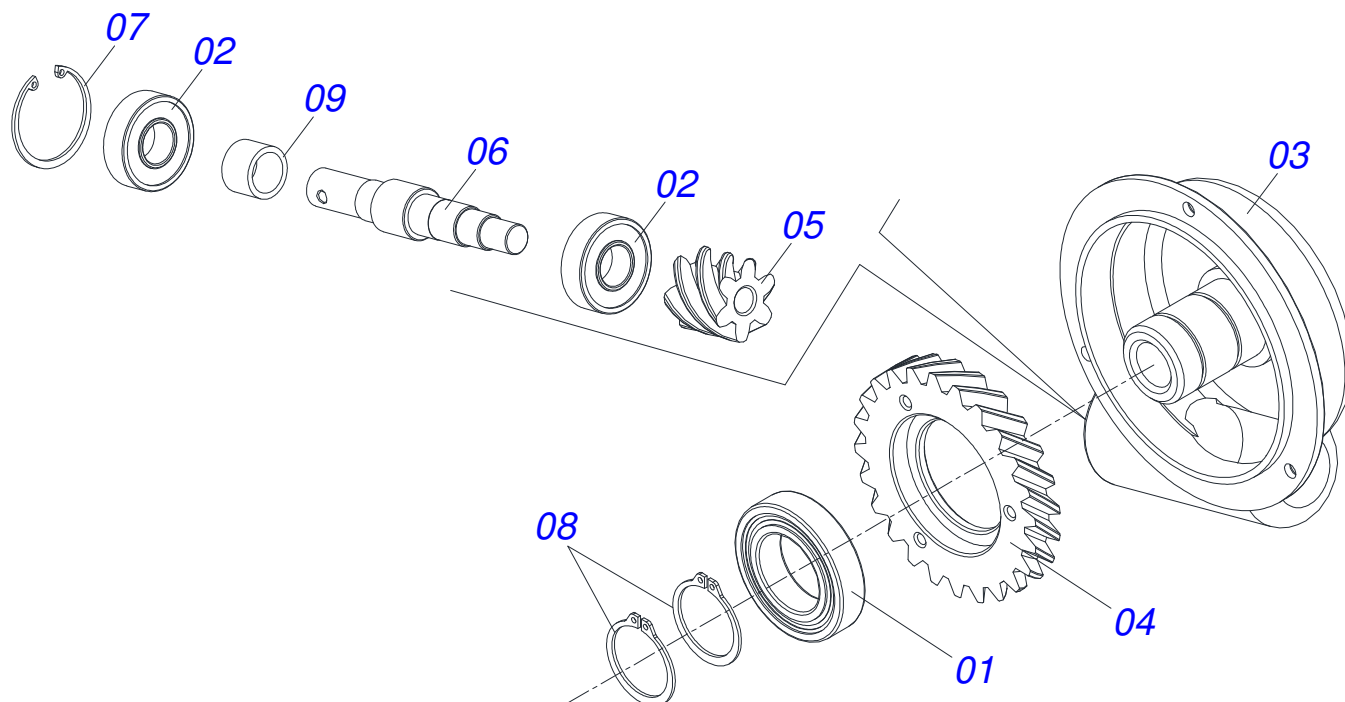 


Item	Code	Description	See page	QT
01	0503011183	6007 ROLLER BEARING		01
02	0503011182	6203 ROLLER BEARING		02
03	0502050050	BOX TRANSMISSION		01
04	0503033975	24Z GEAR PNEUMATIC		01
05	0503033976	GEAR 6Z PNEUMATIC 2014		01
06	0571016187	PINION AXLE 6Z PNEUMATIC		01
07	0503011184	502040 CLAMPING RING (FOR AXLE)		01
08	0503010845	501035 CLAMPING RING (FOR AXLE)		02
09	0571017655	SLEVE FIXER HITCH PNEUMATIC		01

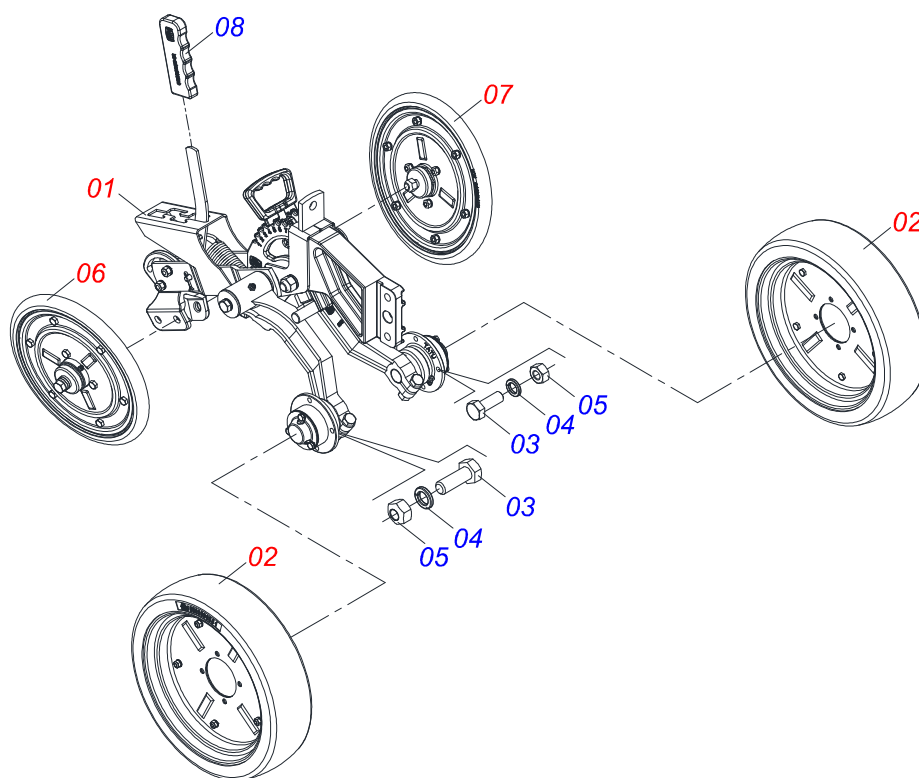 


Item	Code	Description	See page	QT
01	0511056937	DEPTH CONTROL SEMI MOUNTED	44	01
02	0501052538	DEPTH BAND WITH ARMS	49	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503010179	SPRING WASHER		08
05	0503013816	5/16" LOCKNUT		08
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	51	01
07	0511054333	COMPACT WHEEL RIGHT WITH BEARING	50	01
08	0503033942	COVER REGULATORY WHEEL		01

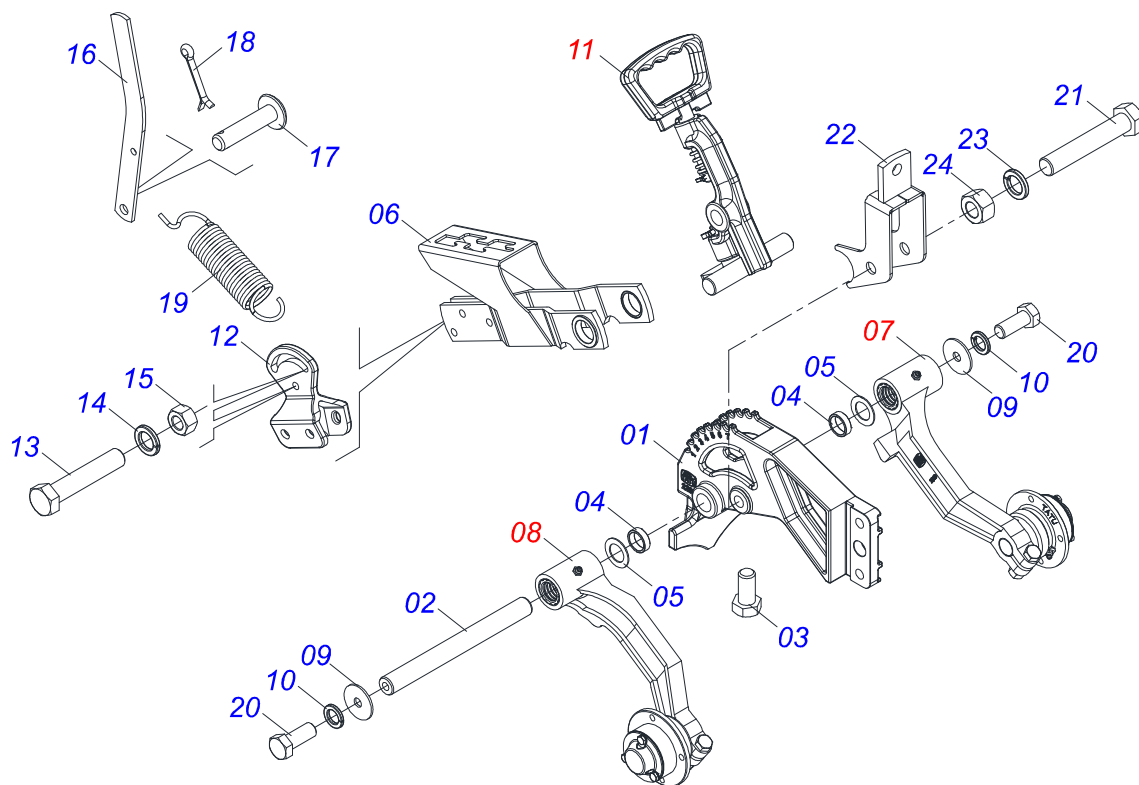 


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0503010256	3/8" X 3/4" BOLT		01
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
05	0511015346	FLAT WASHER		02
06	0521064073	REGULACION WHEEL COMPACTOR		01
07	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	45	01
08	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	46	01
09	0571017749	FLAT WASHER		02
10	0503011440	SPRING WASHER		02
11	0501052297	DEPTH WHEELS REGULATOR ASSY	48	01
12	1902012116	PRESS WHEEL ADJUSTER		01
13	0503010849	3/8" X 1-1/2" BOLT		02
14	0503011443	SPRING WASHER		02
15	0503010026	3/8" NUT		02
16	0541016906	PRESS WHEELS REGULATOR BODY		01
17	0521010539	0.3" X 1.2" COUPLING SHAFT		01
18	0503010140	1/8" X 3/4" COTTERPIN		01
19	0503030805	1.6" X 6" X 0.2"TRACTION SPRING		01
20	0503010311	1/2" X 1-1/4" BOLT		02
21	0503010762	5/8" X 3-12" BOLT		01
22	0521062527	SUPPORT STABILIZER BAR		01
23	0503011445	SPRING WASHER		01
24	0503010013	5/8" NUT		01

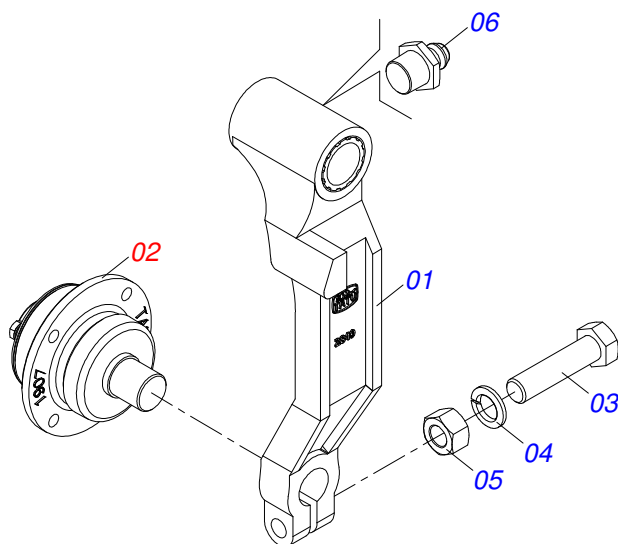 


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL BOX	47	01
03	0503010740	1/2" X 2" BOLT		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01

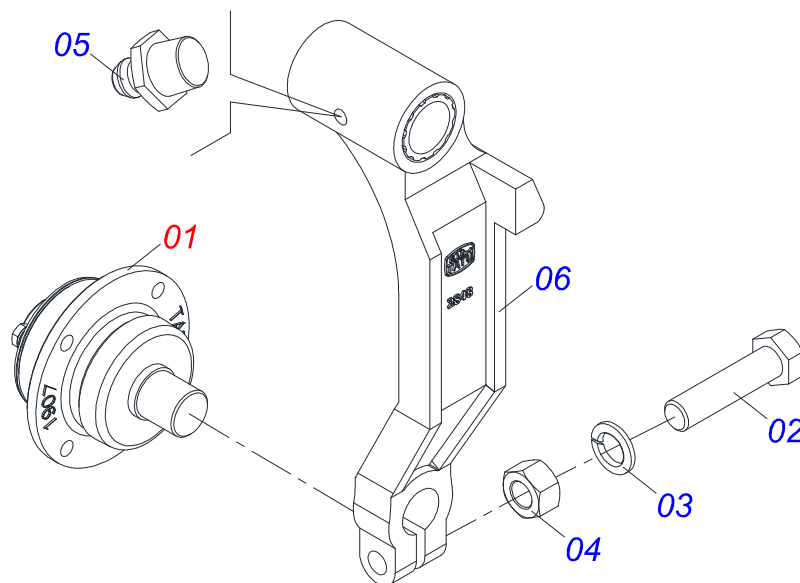 


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL BOX	47	01
02	0503010740	1/2" X 2" BOLT		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

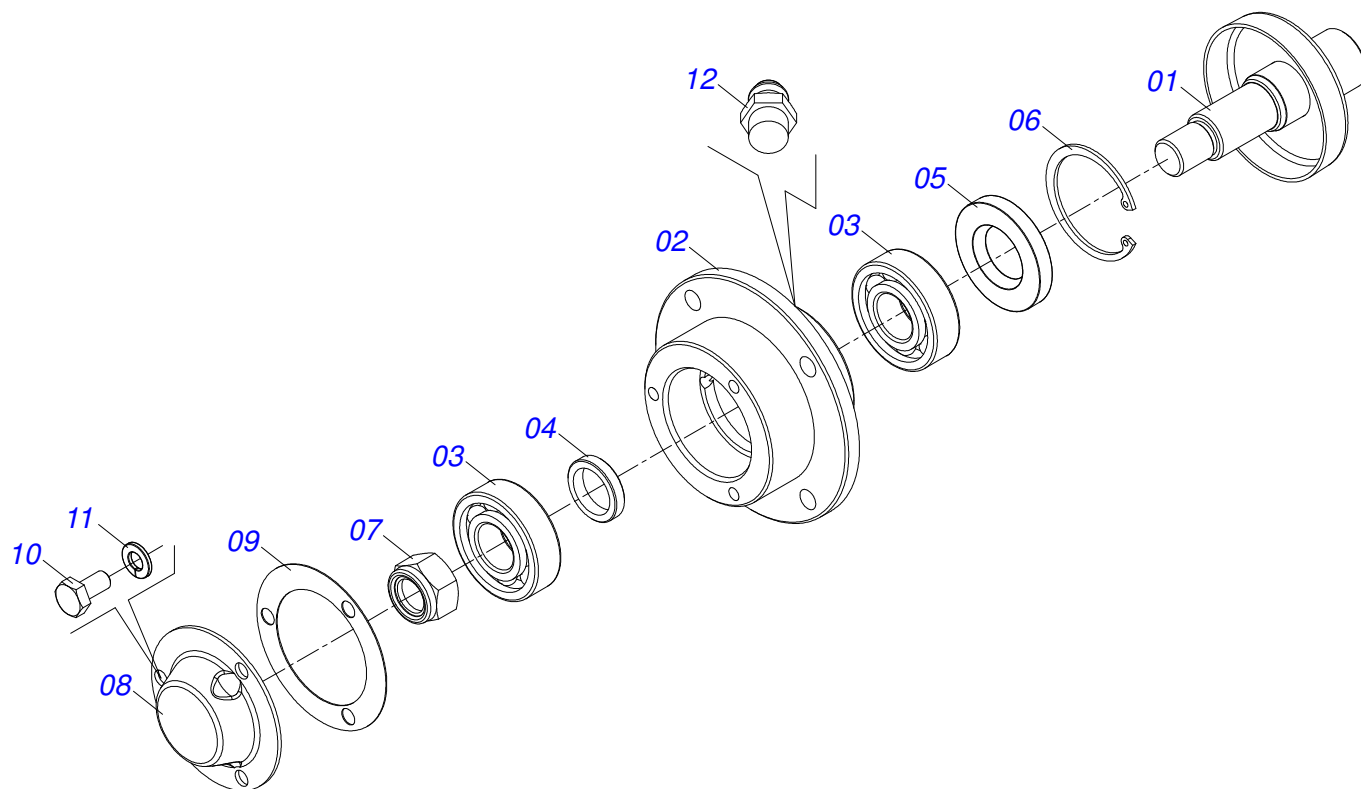 


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	COVER DEPTH		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

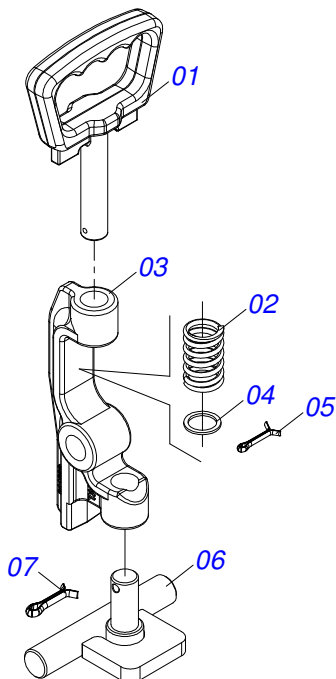 


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	SEED SIST CONTROL DEPTH LEVER		01
04	0511015976	FLAT WASHER		01
05	0503010257	1/8" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503010071	3/16" X 1" COTTERPIN		01

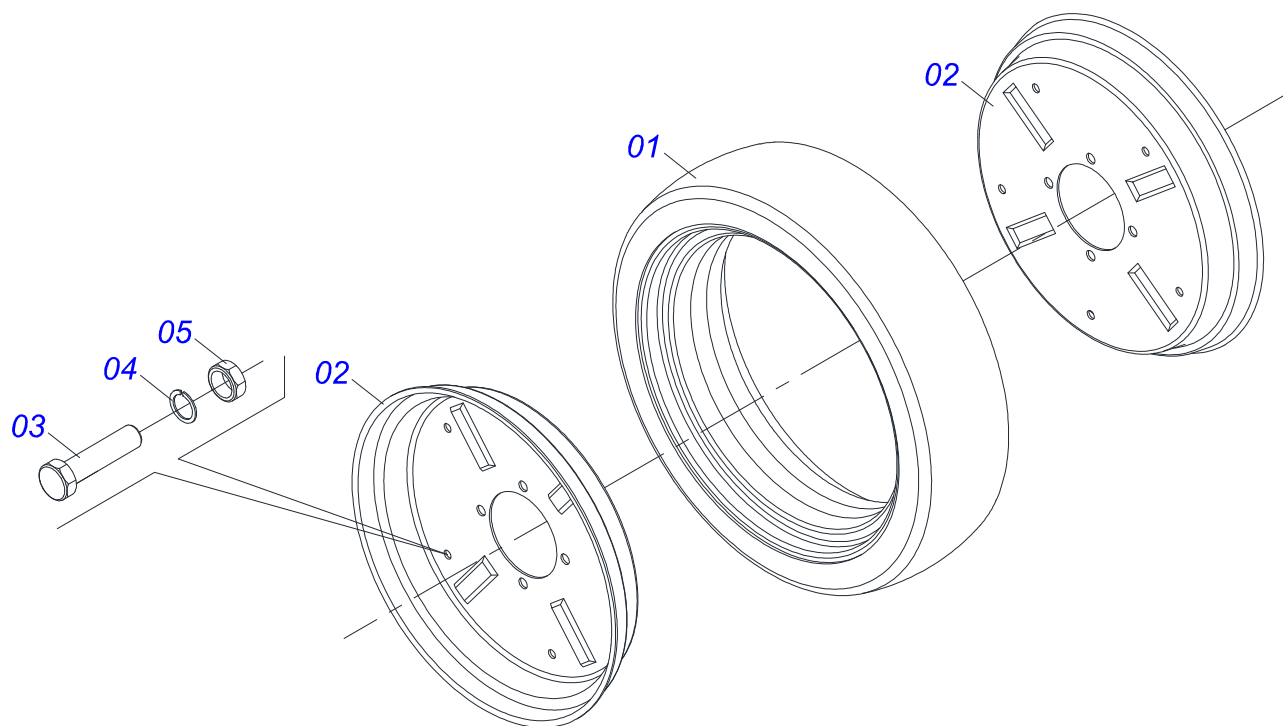 

Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	SPRING WASHER		05
05	0503010144	1/4" NUT		05

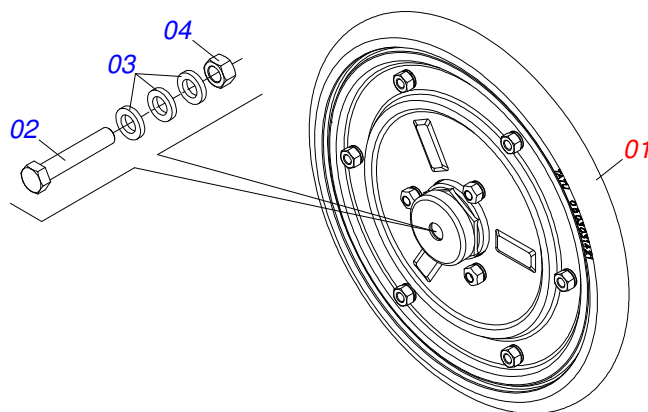 


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING		01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	1 X 9 BOLT		01

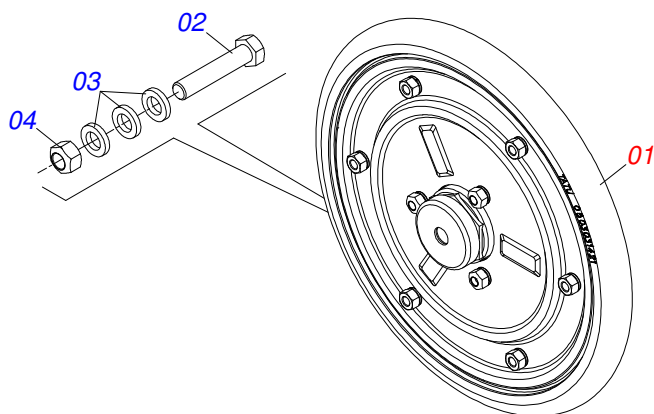 


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING		01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

SEED BOX

 
0511057674

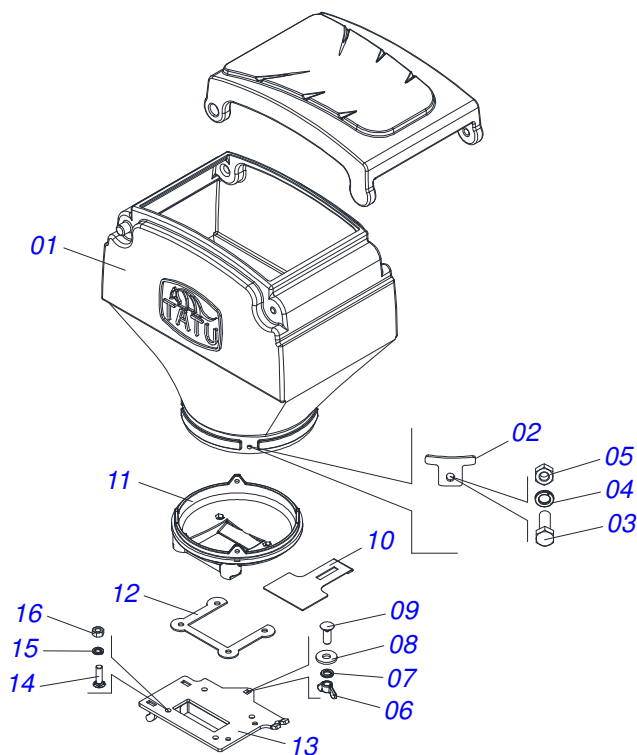


Item	Code	Description	See page	QT
001	0503060516	SEED BOX WITH SMALLER CAP	01	
002	0531010631	SEED BEAM CLAMP	04	
003	0503010371	5/16" X 1" BOLT	04	
004	0503010179	SPRING WASHER	04	
005	0503010337	5/16" NUT	04	
006	0503010209	3/8" UNC BUTTERFLY NUT	01	
007	0503010025	3/8 SPRING WASHER	01	
008	0501010984	FLAT WASHER	01	
009	0501011643	3/8 X 1"BOLT	01	
010	0571018513	SLUICE PNEUMATIC	01	
011	0502012798	SUPPORT BOX SEED	01	
012	0571018512	GUIDE SLUICE PNEUMATIC	01	
013	0521065830	SUPPORT BASE SYSTEM PNEUMATIC	01	
014	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	04	
015	0503010025	3/8 SPRING WASHER	04	
016	0503010026	3/8" NUT	04	

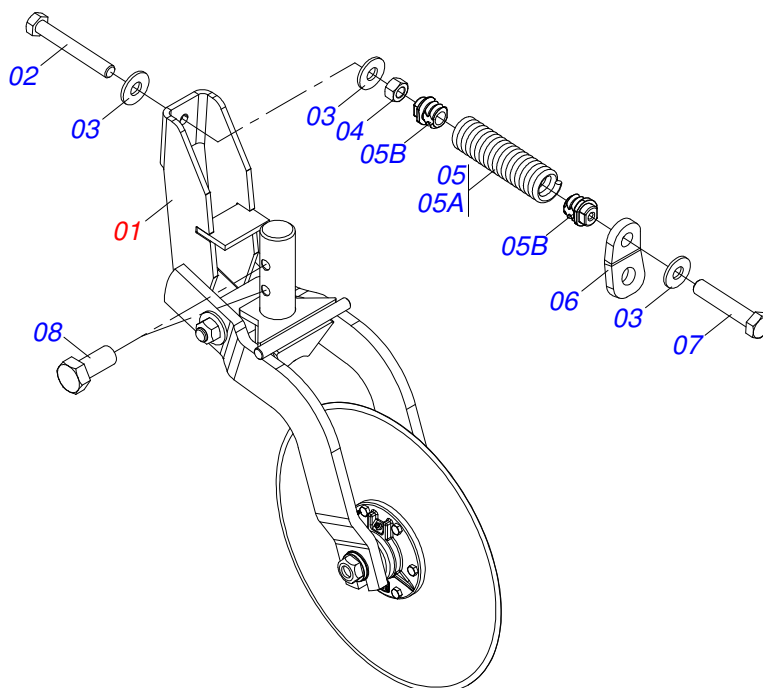 


Item	Code	Description	See page	QT
01	0501056428	ROW 16 BLADE DISC ASSY	54	01
02	0503013329	1/2" UNC X 4-3/4" BOLT		01
03	0511017302	FLAT WASHER		03
04	0503010060	1/2" NUT		01
05	0511057192	EXTENSION SPRING		01
05A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
05B	0502011031	SPRING UPPER HITCH		02
06	0531012869	SUPPORT SPRING		01
07	0503011264	1/2" X 2-1/2" BOLT		01
08	0511016156	5/8" X 1.1/2" BOLT		02

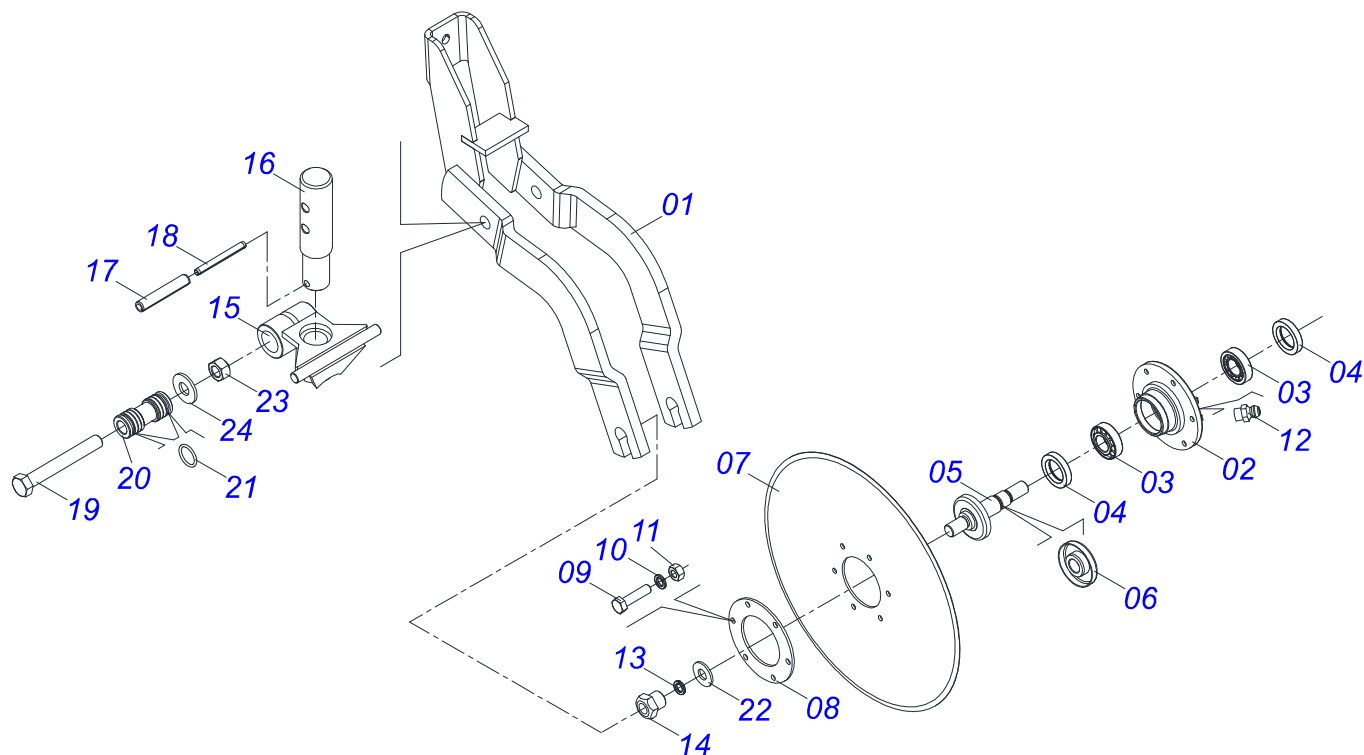 


Item	Code	Description	See page	QT
001	0511063081	DISC BLADE SUPPORT		01
002	0502011279	DISC HUB		01
003	0503010215	30205 BEARING		02
004	0503010213	SEAL 30205		02
005	0511061647	BLADE DISC AXLE ASSY		01
006	0501068582	7/8" UNF WITH DUST CLOAK NUT		01
007	0603023009	16" X 0.2" FLAT PLAIN DISC		01
008	0501013839	WASHER		01
009	0503010365	NUT		06
010	0503011444	SPRING WASHER		06
011	0503010337	5/16" NUT		06
012	0503010691	1/4" GREASE FITTING		01
013	0503011438	SPRING WASHER		02
014	0521013510	3/4" NUT		02
015	0511063073	DISC BLADE FIXER		01
016	0531012999	DISC BLADE FIXER AXLE		01
017	0503010361	SPRING PIN		01
018	0503010756	0.2" X 2.4" SPRING PIN		01
019	0503013185	3/4" X 5-1/2" BOLT		01
020	0521014321	ARTICULATION ARM REEL		01
021	0503010046	2-216 N 3006-9B O'RING		02
022	0511015346	FLAT WASHER		02
023	0503011255	3/4" LOCK NUT		01
024	0501010322	FLAT WASHER		01

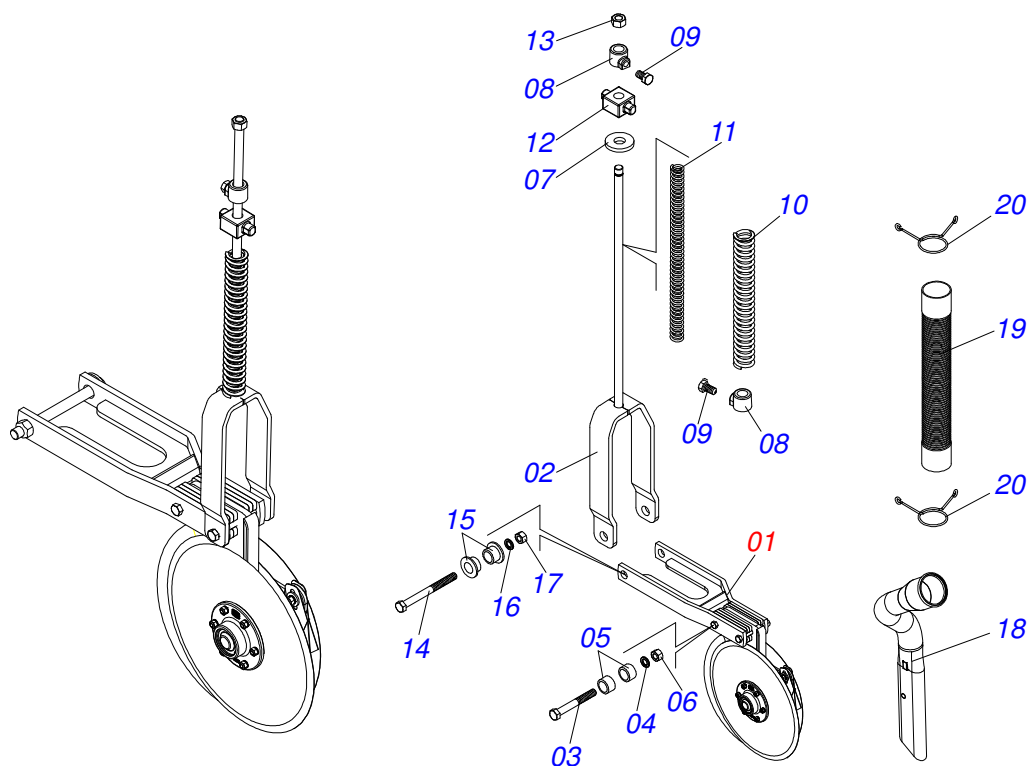 


Item	Code	Description	See page	QT
001	0511057590	RH FERTILIZER ROW ARM	56	01
002	0521066715	VARAO SPRING ADB PHT4		01
003	0503011411	1/2" X 5-1/2" BOLT		01
004	0511017302	FLAT WASHER		02
005	0521010445	0.53" X 0.75" X 0.45" SLEEVE		02
006	0503011336	1/2" HEX SELF ADJUSTING NUT		01
007	0501013753	FLAT WASHER		01
008	0502040534	SPRING GUIDE BUSHING LOCK		01
009	0501018535	1/2 X 1 BOLT		01
010	0503030609	1"X11.81"X 0.16" COMPRESSION SPRING		01
011	0503030917	1.6"X11.8"X 0.2" COMPRESSION SPRING		01
012	0502011538	SPRING GUIDE		01
013	0503010013	5/8" NUT		01
014	0511016281	3/4" X 8" BOLT		01
015	0521018797	0.7" X 1" X .55" SLEEVE		02
016	0511017232	FLAT WASHER		02
017	0503011255	3/4" LOCK NUT		01
018	0503030391	RIGHT FERTILIZER SOCKET		01
019	0503030408	10 X 2 X 390 HOSE		01
020	0503031076	2" HOSE CLAMP		02

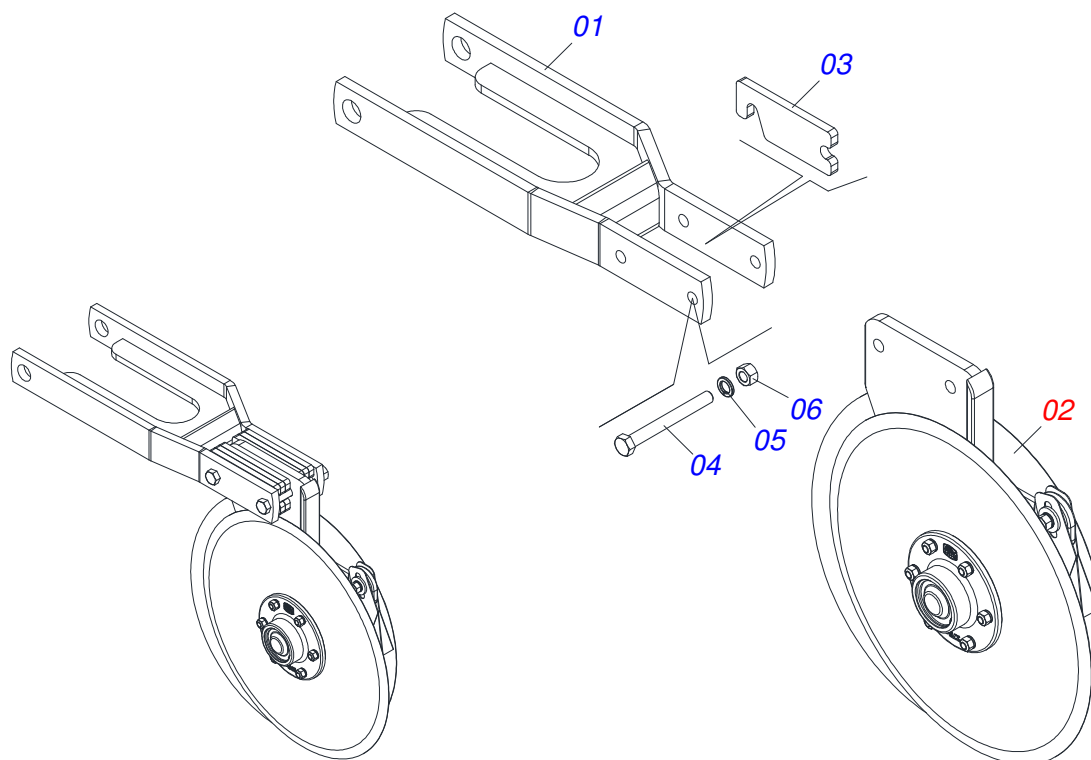 


Item	Code	Description	See page	QT
001	0521063737	FERTILIZER ROW ARM		01
002	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	57	01
003	0511018662	SPACING PLATE		06
004	0503010706	1/2" X 4.1/2" BOLT		01
005	0503011440	SPRING WASHER		01
006	0503010060	1/2" NUT		01

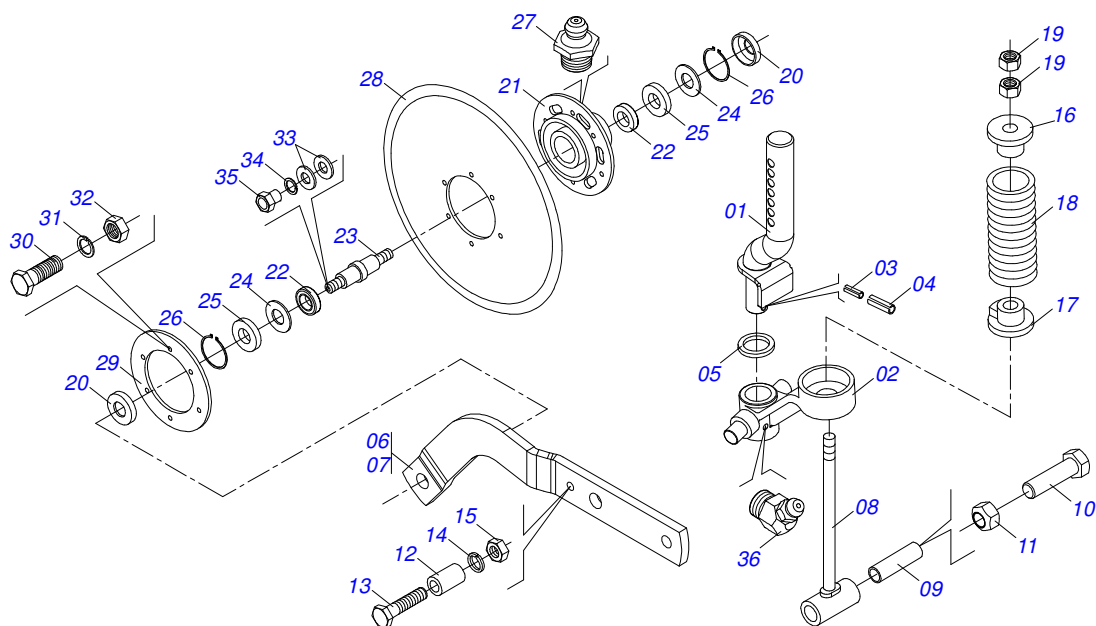 


Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15		01
02	0511053172	LEFT LOW CUBE WITH DISC 15		01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O-RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RH DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010025	3/8 SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

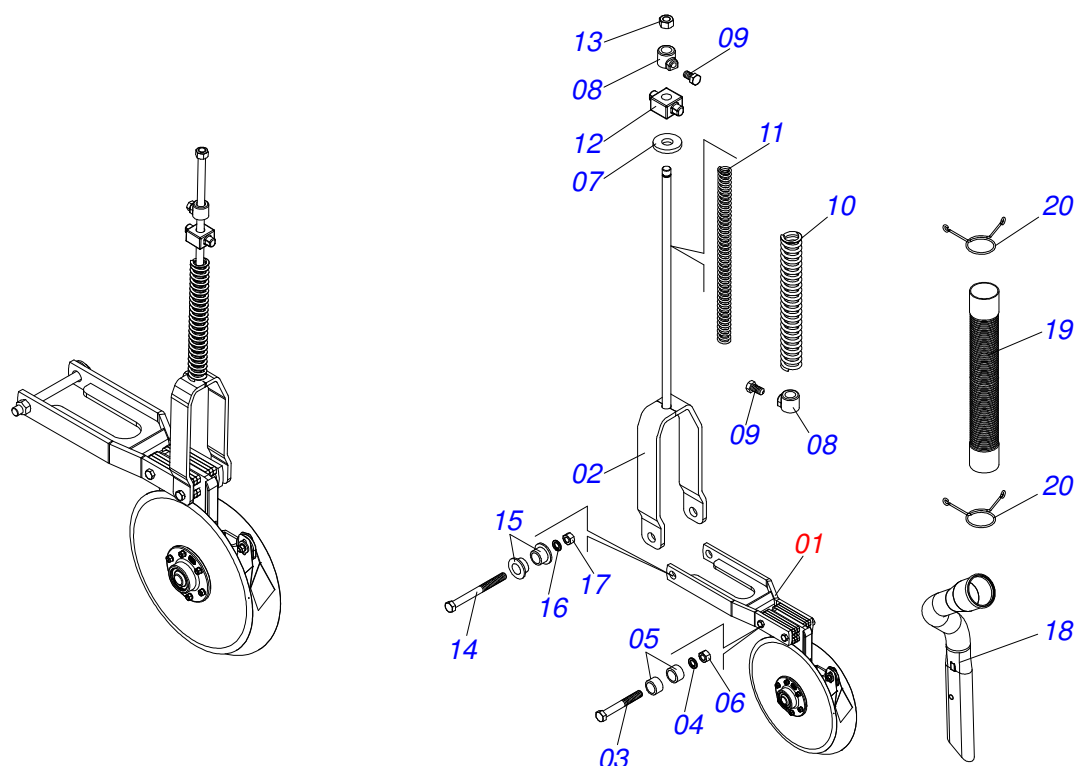 


Item	Code	Description	See page	QT
001	0511057592	LH FERTILIZER ROW ARM	59	01
002	0521066715	VARAO SPRING ADB PHT4		01
003	0503011411	1/2" X 5-1/2" BOLT		01
004	0511017302	FLAT WASHER		02
005	0521010445	0.53" X 0.75" X 0.45" SLEEVE		02
006	0503011336	1/2" HEX SELF ADJUSTING NUT		01
007	0501013753	FLAT WASHER		01
008	0502040534	SPRING GUIDE BUSHING LOCK		01
009	0501018535	1/2 X 1 BOLT		01
010	0503030609	1"X11.81"X 0.16" COMPRESSION SPRING		01
011	0503030917	1.6"X11.8"X 0.2" COMPRESSION SPRING		01
012	0502011538	SPRING GUIDE		01
013	0503010013	5/8" NUT		01
014	0511016281	3/4" X 8" BOLT		01
015	0521018797	0.7" X 1" X .55" SLEEVE		02
016	0511017232	FLAT WASHER		02
017	0503011255	3/4" LOCK NUT		01
018	0503030392	LEFT FERTILIZER SOCKET		01
019	0503030408	10 X 2 X 390 HOSE		01
020	0503031076	2" HOSE CLAMP		02

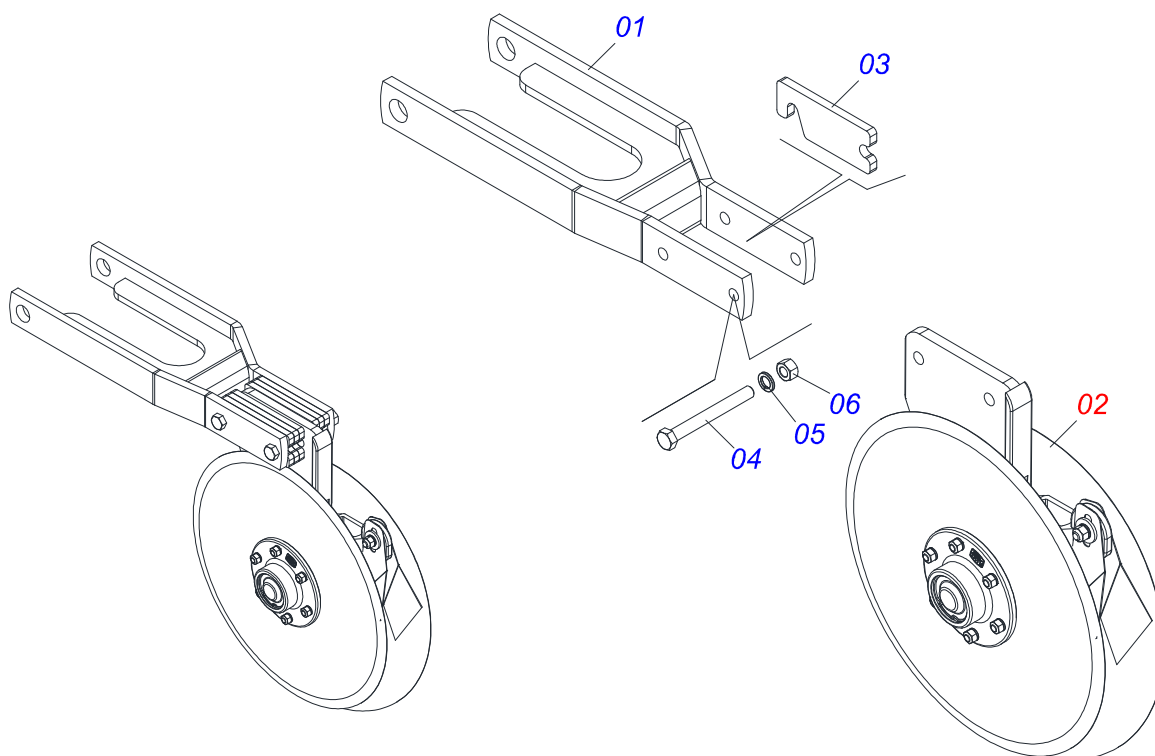 

Item	Code	Description	See page	QT
001	0521063737	FERTILIZER ROW ARM		01
002	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	60	01
003	0511018662	SPACING PLATE		06
004	0503010706	1/2" X 4.1/2" BOLT		01
005	0503011440	SPRING WASHER		01
006	0503010060	1/2" NUT		01

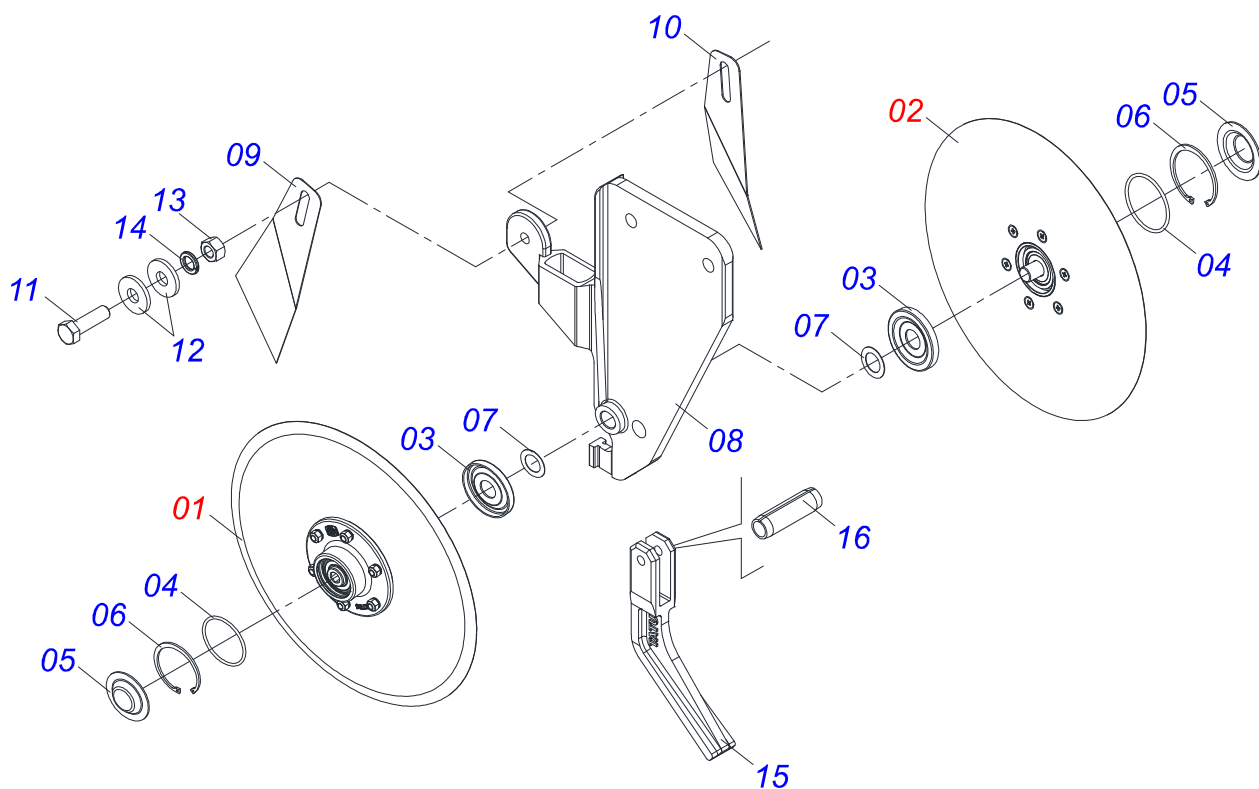 

Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15		01
02	0511053173	CUBE LOW RIGHT WITH DISC 15		01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RH DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503011443	SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

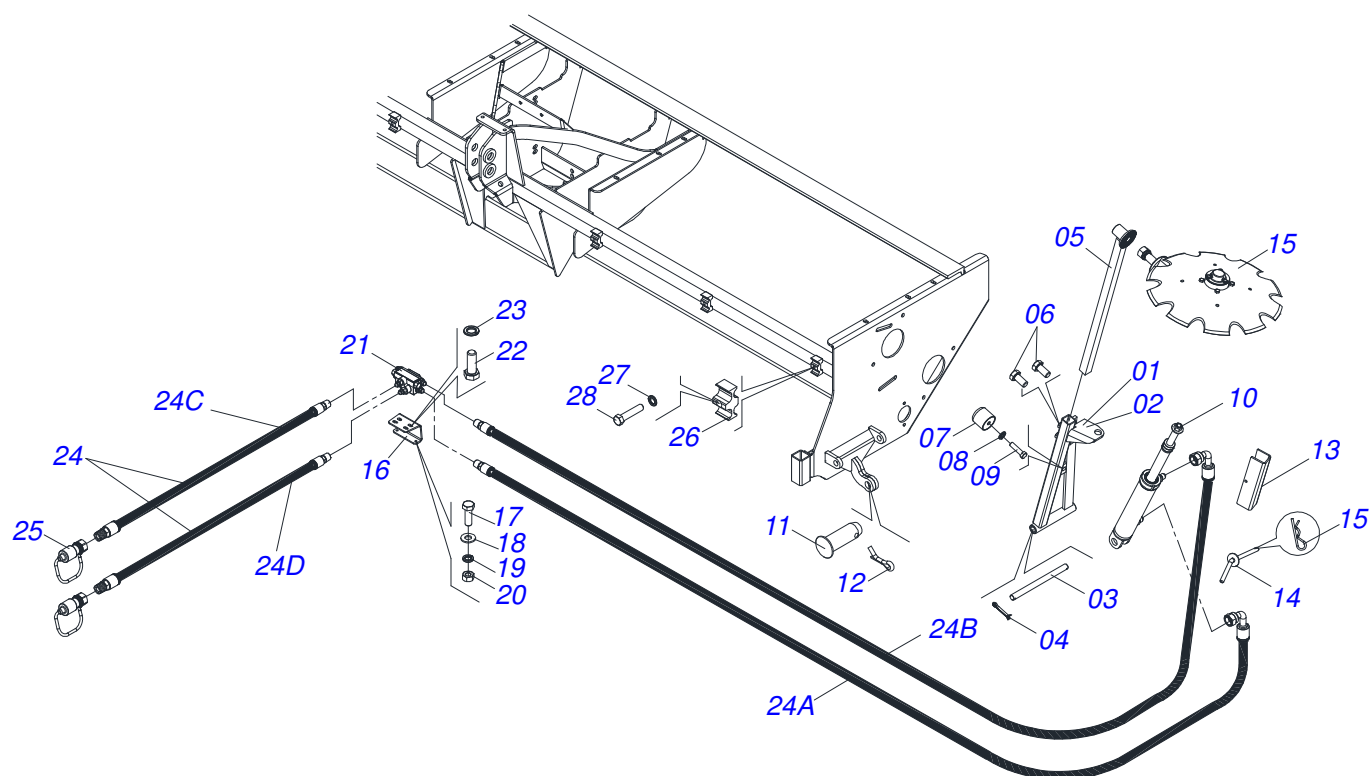 


Item	Code	Description	See page	QT
001	0521062818	BRACO LEFT MARKER LINE PHT4		01
002	0521062819	BRACO RIGHT MARKER LINE PHT4		01
003	0531012400	COUPLING SHAFT		02
004	0503010577	3/16" X 1-1/4" COTTERPIN		02
005	0501069307	ROW MARKER ARM		02
006	0503010834	1/2 X 1 BOLT		04
007	0503011070	BEATER		02
008	0503010019	1/2" SPRING WASHER		02
009	0503010740	1/2" X 2" BOLT		02
010	0521040155	HYDRAULIC CYLINDER 31,75X50,8X365X595 PHT4 4 SUP		02
011	0521010571	COUPLING SHAFT		02
012	0503010571	1/4" X 1.1/2 COTTERPIN		02
013	0561019695	PHT4 SUPREME MARKET TRANSMITTER		02
014	0501068994	0.3" X 3.1" LOCK PIN		02
015	0503030168	HAIR PIN		02
016	0571010413	VALVE SUPPORT		01
017	0503010371	5/16" X 1" BOLT		02
018	0501010694	FLAT WASHER		02
019	0503010179	SPRING WASHER		02
020	0503010337	5/16" NUT		02
021	0501054649	SEQUENTIAL VALVE ASSY	3	01
022	0503010237	3/8" X 1" BOLT		02
023	0503010025	3/8 SPRING WASHER		02
024	0511057603	HOSE KIT		01
024A	0501080469	3/8" X 98.42" TR-TR HOSE ASSY		02
024B	0501080412	3/8" X 90.55" TR-TC HOSE		02
024C	0521052312	HOSE 3/8 X 1500 TR-TM PURPLE / RED		01
024D	0521052313	HOSE 3/8 X 1500 TR-TM PURPLE / BLUE		01
025	0501053834	MALE QUICK COUPLING AGRICULTURAL WITH COVER - 1/2 NPT		02
026	0502012702	BODY SUPPORT CLAMP		06



PHT4 SUPREMA 7/4 MH ANGOLA
HYDRAULIC MARKER ASSY

Page 61
0511057604

Item	Code	Description	See page	QT
027	0503010180	7/16" SPRING WASHER		06
028	0503012555	7/16" X 2" BOLT		06

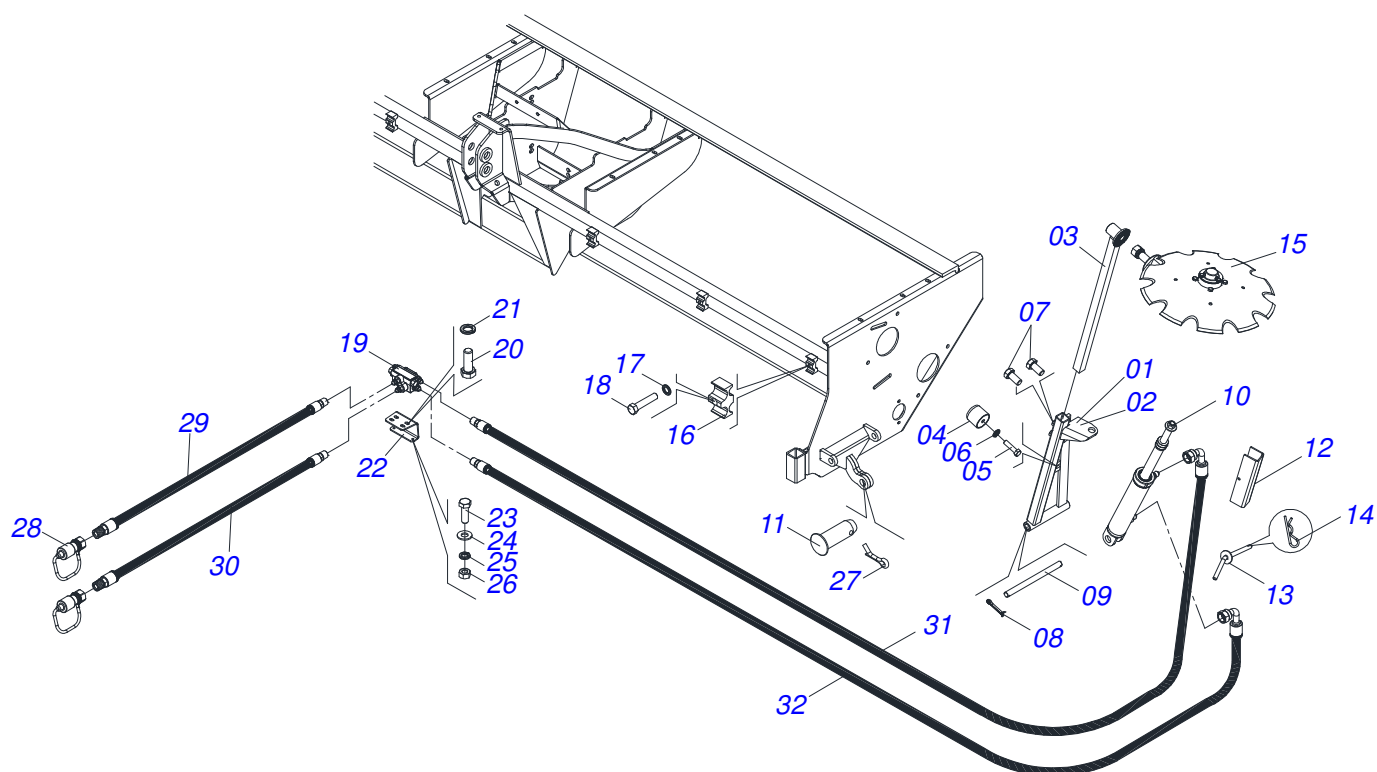 

Item	Code	Description	See page	QT
001	0521062818	BRACO LEFT MARKER LINE PHT4		01
002	0521062819	BRACO RIGHT MARKER LINE PHT4		01
003	0501069307	ROW MARKER ARM		02
004	0503011070	BEATER		02
005	0503010740	1/2" X 2" BOLT		02
006	0503010019	1/2" SPRING WASHER		02
007	0503010834	1/2 X 1 BOLT		04
008	0503010577	3/16" X 1-1/4" COTTERPIN		02
009	0531012400	COUPLING SHAFT		02
010	0521040155	HYDRAULIC CYLINDER 31,75X50,8X365X595 PHT4 4 SUP		02
011	0521010571	COUPLING SHAFT		02
012	0561019695	PHT4 SUPREME MARKET TRANSMITTER		02
013	0501068994	0.3" X 3.1" LOCK PIN		02
014	0503030168	HAIR PIN		02
015	0501050633	MARKER DISC ASSY LINE	7	01
016	0502012702	BODY SUPPORT CLAMP		06
017	0503010180	7/16" SPRING WASHER		06
018	0503012555	7/16" X 2" BOLT		06
019	0501054649	SEQUENTIAL VALVE ASSY	3	01
020	0503010237	3/8" X 1" BOLT		02
021	0503010025	3/8 SPRING WASHER		02
022	0571010413	VALVE SUPPORT		01
023	0503010371	5/16" X 1" BOLT		02
024	0501010694	FLAT WASHER		02
025	0503010179	SPRING WASHER		02
026	0503010337	5/16" NUT		02
027	0503010571	1/4" X 1.1/2 COTTERPIN		02
028	0501053834	MALE QUICK COUPLING AGRICULTURAL WITH COVER - 1/2 NPT		02
029	0521052313	HOSE 3/8 X 1500 TR-TM PURPLE / BLUE		01
029A	0501080852	3/8" X 1500 TR-TM HOSE		01

Item	Code	Description	See page	QT
029B	0503034491	HYDRAULIC HOSE HANDLE (PURPLE)		01
029C	0503034494	HYDRAULIC HOSE DEPTH (BLUE)		01
029D	0503018952	PLASTIC BOLT		06
030	0521052313	HOSE 3/8 X 1500 TR-TM PURPLE / BLUE		01
030A	0501080852	3/8" X 1500 TR-TM HOSE		01
030B	0503034491	HYDRAULIC HOSE HANDLE (PURPLE)		01
030C	0503034494	HYDRAULIC HOSE DEPTH (BLUE)		01
030D	0503018952	PLASTIC BOLT		06
031	0501080469	3/8" X 98.42" TR-TR HOSE ASSY		02
032	0501080412	3/8" X 90.55" TR-TC HOSE		02

This image shows a single page of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines in total. The top corners of the page are rounded. The paper appears to be from a notebook or a standard sheet of stationery.





MARCHESAN IMPLEMENTOS E MÁQUINAS AGRÍCOLAS TATU S.A.

AV. Marchesan, 1979 - Post office box, 131 - CEP 15994-900 - Matão - SP - Brazil

Phone +55 16.3382-8282

(FAX Parts) + 55 16.3382. 8297 - (Export) + 55 16.3382.1003

e.mail: tatu@marchesan.com.br www.marchesan.com.br

Technical Publications: Elaboration

JOSÉ DOMINGOS GASPARI

Technical Publications: Revision

JOSÉ DOMINGOS GASPARI

Contact Catálogo:

E-mail = jgaspari@marchesan.com.br

**ORIGINAL PARTS
TATU**

