

ROW CROP PLANTERS

**PHT4 FLEX SUPREMA P.P - CHASSI 3190/4E900 -
CSU / MH / MTH**

Code: 0501092613
Series: S-1018
Revision: 00
Revision Date: OCTOBER/2022

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Working Width	Description
0111480014		PHT4 FLEX SUP PP 3190/4E900 CSU MTHPP S-1018
0111480016		PHT4 FLEX SUP PP 3190/4E900 CSU S/ADB MTHPP S-1018
0111480017		PHT4 FLEX SUP PP 3190/4E900 ESPECIAL S-1018
0111480015		PHT4 FLEX SUP PP 3190/4E900 MH CSU MTHPP S-1018

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX


0909095032	FRAME ASSY	1
0521054615	ASSY LEFT WHEEL	2
0521054616	ASSY RIGHT WHEEL	3
0511052483	LEFT CARRYING-WHEELS	4
0511052484	WHEELS RIGHT	5
0503060105	WELL AND TIRE ASSY	6
0511052485	LH WHELLS ARM	7
0511052486	WHEEL ARM RIGTH	8
0511052487	TURNBUCKLE	9
0501056444	ROLLER BEARING	10
0511057192	EXTENSION SPRING	11
0521054617	LEFT FERTILIZER ROW	12
0521054618	RIGHT FERTILIZER ROW	13
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	14
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	15
0511053172	LEFT LOW HUB WITH 15 DISC	16
0511053173	RIGHT LOW HUB WITH 15 DISC	17
0521053891	FRONT SEED	18
0521053565	SEED ROW SUPPORT	19
0511054635	BEARING AXLE BODY	20
0501052769	BEARING WITH 17Z GEAR	21
0511055260	SEED ROW CHAIN TENSIONER	22
0521053688	SEED ROW FRAME	23
0511057159	TRANSMISSION HOPPER SEED ROW	24
0521054636	ASSY CARDAN TRANSMISSION	25
0511052389	BEARING DOUBLE FRONT ROW SEED	26
0521054639	HITCH TO THE THIRD POINT	27
0521054689	HYDRAULIC MARKER ASSEMBLY	28
0521040155	HYDRAULIC CYLINDER 31,75 X 50,8 X 365 X 595	29
0501054649	HBM SEQUENTIAL VALVE	30
0501050633	ROW MARKER DISC ASSEMBLY	31
0511053904	ROW MARKER DISC	32
0521054696	ASSEMBLY SUPPORT	33
0521054691	ASSEMBLY LADDER	34
0531055995	2" AIR DUCT SUPPORT	35
0521053964	VALVE SUPPORT	36
0521054665	FERTILIZER GEARBOX	37
0511059266	CLOSED BEARING	38
0501056271	GEARBOX CLOSED BEARING	39
0501056443	GEAR HOUSING BEARING	40
0501048790	AXLE WITH RING	41
0521054666	CHAIN TENSIONER	42
0521054694	SEED TRANSMISSION	43
0511057698	20Z BEARING GEAR	44
0501059059	LARGE BEARING ROW SEED ASSY	45
0531055988	HYDRAULIC TURBINE WITH AIR TUBE	46
0909096548	HYDRAULIC TURBINE WITH FIXING	47
0531055987	HYDRAULIC TURBINE	48
0531055985	HYDRAULIC TURBINE WITH HOLE	49
0531055989	425 AIR DISTRIBUTOR	50
0521054692	ASSEMBLY PLATFORM	51
0521054695	HANDRAIL ASSEMBLY	52
0521053558	HANDRAIL EXTERNAL	53
0521053543	HANDRAIL INTERNAL	54
0511059383	INTERNAL HANDRAILING FIXER	55
0521054635	INSTRUCTION MANUAL CANISTER ASSEMBLY	56
0521054693	SEED ASSEMBLY	57
0521053559	SEED HOPPER ASSEMBLY	58
0521040712	RIGHT FERTILIZER HOPPER ASSY	59



MARCHESAN


INDEX

0521040718	LEFT FERTILIZER HOPPER ASSY	60
0511051712	RH BEAM SUPPORT	61
0511051717	LH BEAM SUPPORT	62
0511051714	SIDE FERTILIZER DISTRIBUTOR	63
0511051715	SIDE FERTILIZER DISTRIBUTOR	64
0501056451	BEARING	65
0501053788	3/4" SQUARE AXLE FASTENER	66
0521053562	RIGHT REAR SEED ROW ASSEMBLY	67
0521053560	LEFT REAR SEED ROW ASSEMBLY	68
0521053564	ASSEMBLY PRECISION PLANTING	69
0521053561	PRECISION PLANTING ASSEMBLY V-SET2 LEFT	70
0511057155	PRECISION PLANTING LEFT TRANSMISSION HOPPER	71
0521053548	DISTRIBUTOR SEED COMPLETE WITH DISC PEANUT	72
0511059081	LH 15"X15" SEED UNAL DOUB-DISC ASSY	73
0501054167	15" RIGHT DOUBLE DISC HUB	74
0501054168	15" LEFT DOUBLE DISC HUB	75
0521052617	WHEEL SYSTEM DEPTH / COMPACTOR	76
0501056769	DEPTH WHEELS REGULATOR ASSY	77
0521051423	COMPACTOR SUPPORT	78
0501052908	COMPACTOR WHEEL WITH BEARING	79
0511059489	CENTRAL RAIL WHEEL	80
0511052287	DEPTH WHEEL HUB ASSY	81
0521050525	FIXER FERTILIZER CONDUCTOR	82
0909095039	ROW MARKER HYDRAULIC CIRCUIT	83
0909095040	MTH TURBINE HYDRAULIC CIRCUIT	84
0531055992	RIGHT AIR DUCT SUPPORT	85
0531055991	LEFT AIR DUCT SUPPORT	86
0501053834	MALE QUICK COUPLER	87

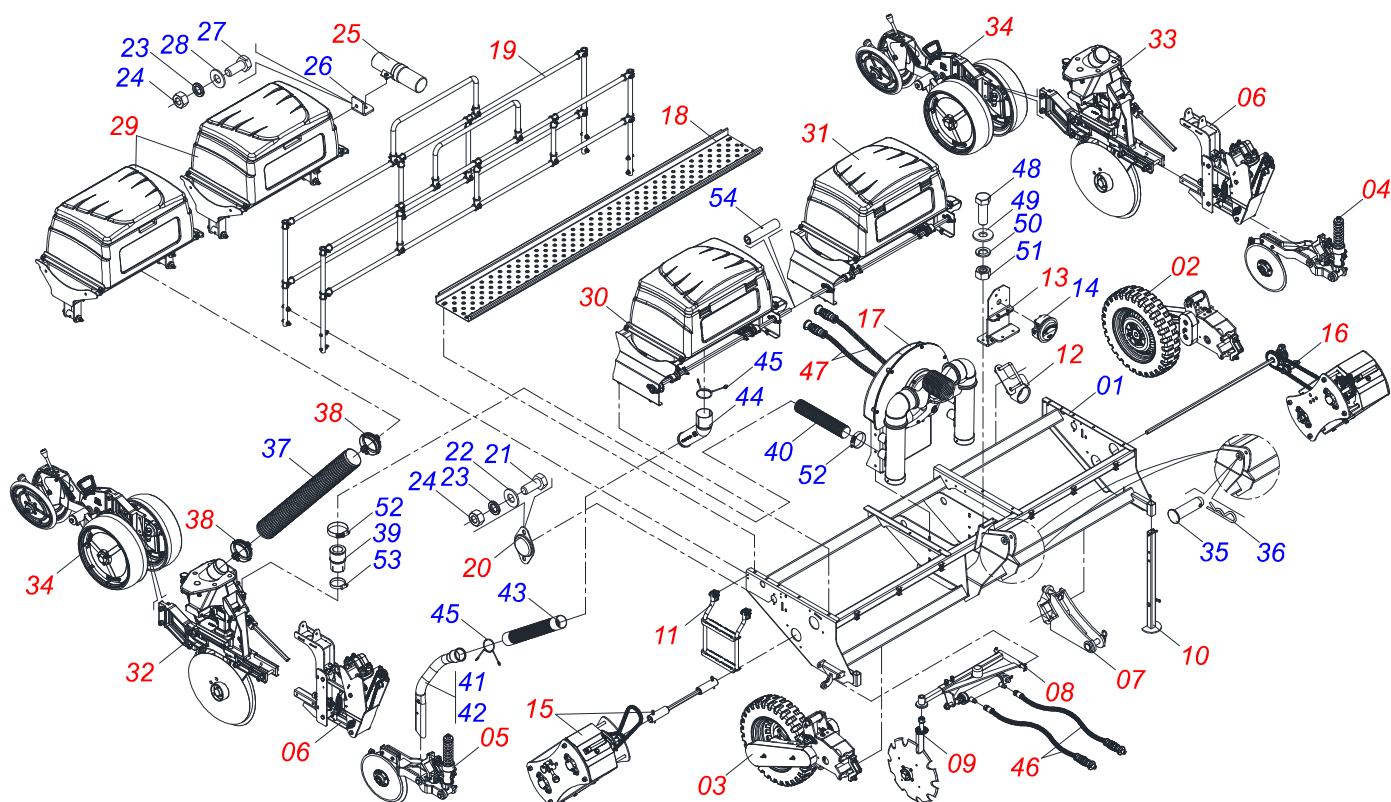


Item	Code	Description	See page	QT
01	0521069011	FRAME		01
02	0521054615	ASSY LEFT WHEEL	2	01
03	0521054616	ASSY RIGHT WHEEL	3	01
04	0521054618	RIGHT FERTILIZER ROW	13	02
05	0521054617	LEFT FERTILIZER ROW	12	02
06	0521053891	FRONT SEED	18	04
07	0521054639	HITCH TO THE THIRD POINT	27	02
08	0521054689	HYDRAULIC MARKER ASSEMBLY	28	01
09	0501050633	ROW MARKER DISC ASSEMBLY	31	02
10	0521054696	ASSEMBLY SUPPORT	33	02
11	0521054691	ASSEMBLY LADDER	34	01
12	0531055995	2" AIR DUCT SUPPORT	35	04
13	0521053964	VALVE SUPPORT	36	01
14	0503013584	VACUUM GAUGE		01
15	0521054665	FERTILIZER GEARBOX	37	01
16	0521054694	SEED TRANSMISSION	43	01
17	0531055988	HYDRAULIC TURBINE WITH AIR TUBE	46	01
18	0521054692	ASSEMBLY PLATFORM	51	01
19	0521054695	HANDRAIL ASSEMBLY	52	01
20	0561014215	BEARING COVER LOWER ROW FRAME		01
21	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		02
22	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		02
23	0503010179	LOCK WASHER 5/16 ZN 1K01528		03
24	0503010337	NUT 5/16 UNC G.5 ZN		03
25	0521054635	INSTRUCTION MANUAL CANISTER ASSEMBLY	56	01
26	0581010406	MANUAL CASE FIXER		01
27	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
28	0521011039	FLAT WASHER		01
29	0521054693	SEED ASSEMBLY	57	01
30	0521040712	RIGHT FERTILIZER HOPPER ASSY	59	01
31	0521040718	LEFT FERTILIZER HOPPER ASSY	60	01
32	0521053562	RIGHT REAR SEED ROW ASSEMBLY	67	02

Item	Code	Description	See page	QT
33	0521053560	LEFT REAR SEED ROW ASSEMBLY	68	02
34	0521052617	WHEEL SYSTEM DEPTH / COMPACTOR	76	04
35	0521010579	COUPLING SHAFT		01
36	0503031035	HITCH PIN CLIP		01
37	0581017313	SEED CONDUCTOR		04
38	0521050525	FIXER FERTILIZER CONDUCTOR	82	08
39	0501215301	2" X 1.1/2" X 75 REDUCING SLEEVE		04
40	0501215311	2" X 2000 HOSE		04
41	0503030391	RIGHT FERTILIZER NOZZLE		02
42	0503030392	LEFT FERTILIZER NOZZLE		02
43	0503030408	2 X 2 X 390 HOSE		04
44	0503031050	CURVED CONDUCTOR		04
45	0503031076	2" HOSE CLAMP		08
46		ROW MARKER HYDRAULIC CIRCUIT	83	
47		MTH TURBINE HYDRAULIC CIRCUIT	84	
48	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
49	0501010984	FLAT WASHER 10.50 X 27 X 3.00		02
50	0503010025	SPRING WASHER 3/8"		02
51	0503010026	NUT 3/8"		02
52	0503010246	CLAMP		12
53	0503010243	CLAMP		04
54	0502012007	SQUARE SLEEVE		01

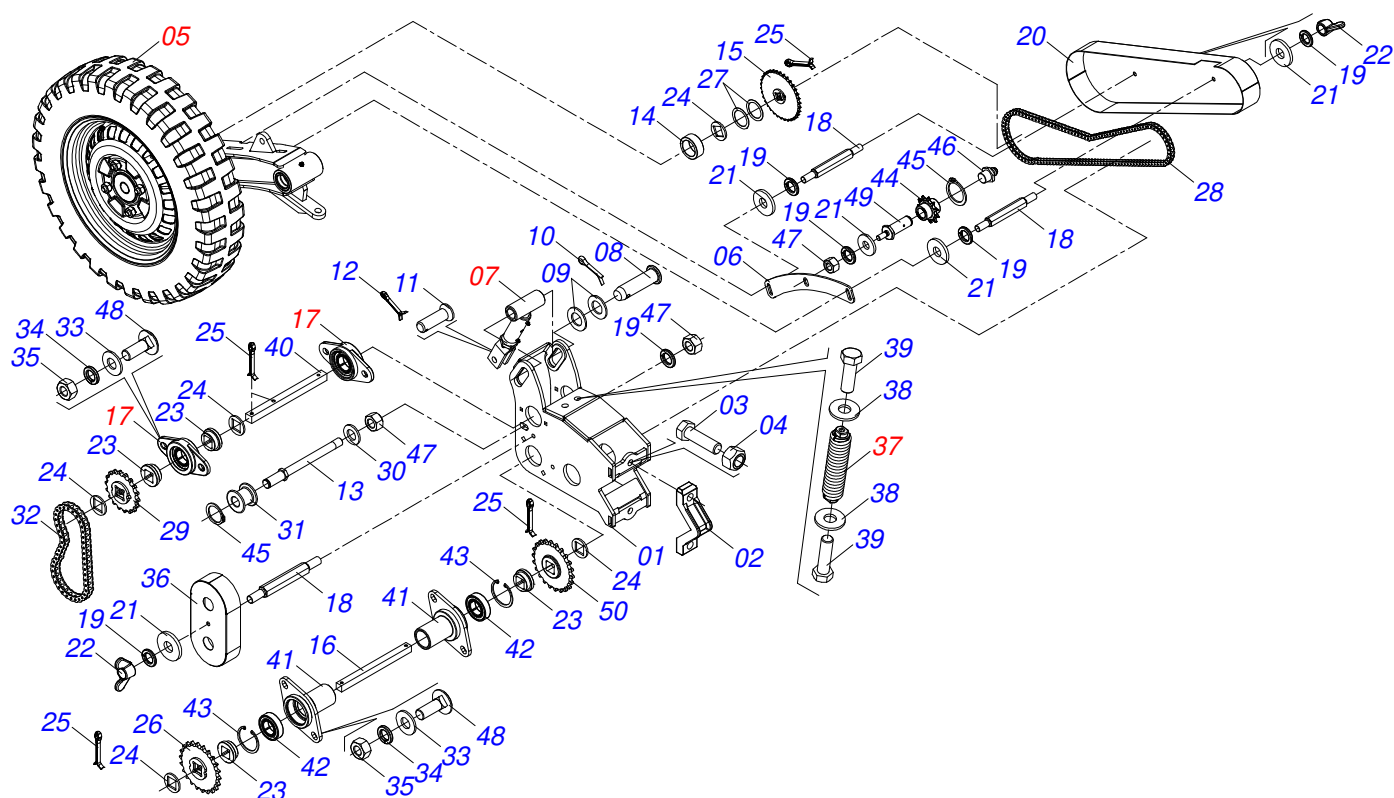


Item	Code	Description	See page	QT
01	0521063583	WHEEL SUPPORT		01
02	0502010175	HITCH CLAMP		01
03	0501011543	5/8" X 4" BOLT		02
04	0503012412	5/8" UNC SELF LOCKING NUT		03
05	0511052483	LEFT CARRYING-WHEELS	4	01
06	0571010967	CHAIN TENSIONER		01
07	0511052487	TURNBUCKLE	9	01
08	0521010784	COUPLING SHAFT		01
09	0501011445	FLAT WASHER		02
10	0503010571	SPLIT PIN 1/4" X 1.1/2"		01
11	0521017623	0.5" X 1.5" COUPLING SHAFT		01
12	0503010257	1/8" X 1" SPLIT PIN		01
13	0571010964	TENSIONER CHAIN		01
14	0561016501	30,50 X 42 X 16 SLEEVE		01
15	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		01
16	0571010341	SQUARE SHAFT		01
17	0501056444	ROLLER BEARING	10	02
18	0561016503	PRISONER 3/8 UNC		03
19	0503010025	SPRING WASHER 3/8"		07
20	0561019680	LEFT CHAIN COVER		01
21	0501010984	FLAT WASHER 10.50 X 27 X 3.00		06
22	0503010209	3/8" UNC BUTTERFLY NUT		03
23	0503030303	SUPPORT WASHER		04
24	0521018630	1.4" X SQUARE 0.8" WASHER		05
25	0503010577	3/16" X 1.1/4" SPLIT PIN		05
26	0521060880	GEAR 22 TEETH		01
27	0501013354	FLAT WASHER		02
28	0503012718	40-1 CHAIN X 111 LINK + MENDING		01
29	0511061757	18Z GEAR		01
30	0501011299	FLAT WASHER		01
31	0503030402	PULLEY		01
32	0503018182	40-1 X 39 CHAIN LINK + MENDING		01

Item	Code	Description	See page	QT
33	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		08
34	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
35	0503010337	NUT 5/16 UNC G.5 ZN		08
36	0561019679	CHAIN CAP		01
37	0511057192	EXTENSION SPRING	11	01
38	0511017302	FLAT WASHER 13.50 X 32.50 X 3.0 ZN		02
39	0503013618	BOLT 1/2 UNC X 3.1/2 CSRT G.5 ZN		02
40	0581018867	AXIS 3/4 "X 245 CARDAN TRANSMISSION		01
41	0521062809	BEARING		02
42	0503013462	6005 2RS1 ROLLER BEARING		02
43	0503011105	SEAL RING		02
44	0503031805	11Z 1/2" GEAR		01
45	0503010302	501019 SEAL RING		02
46	0503010002	GREASE FITTING 1800		01
47	0503010026	NUT 3/8"		02
48	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		08
49	0521012311	CHAIN TIGHTENER AXLE		01
50	0502012717	GEAR 22Z P.1/2 FQ 3/4"		01

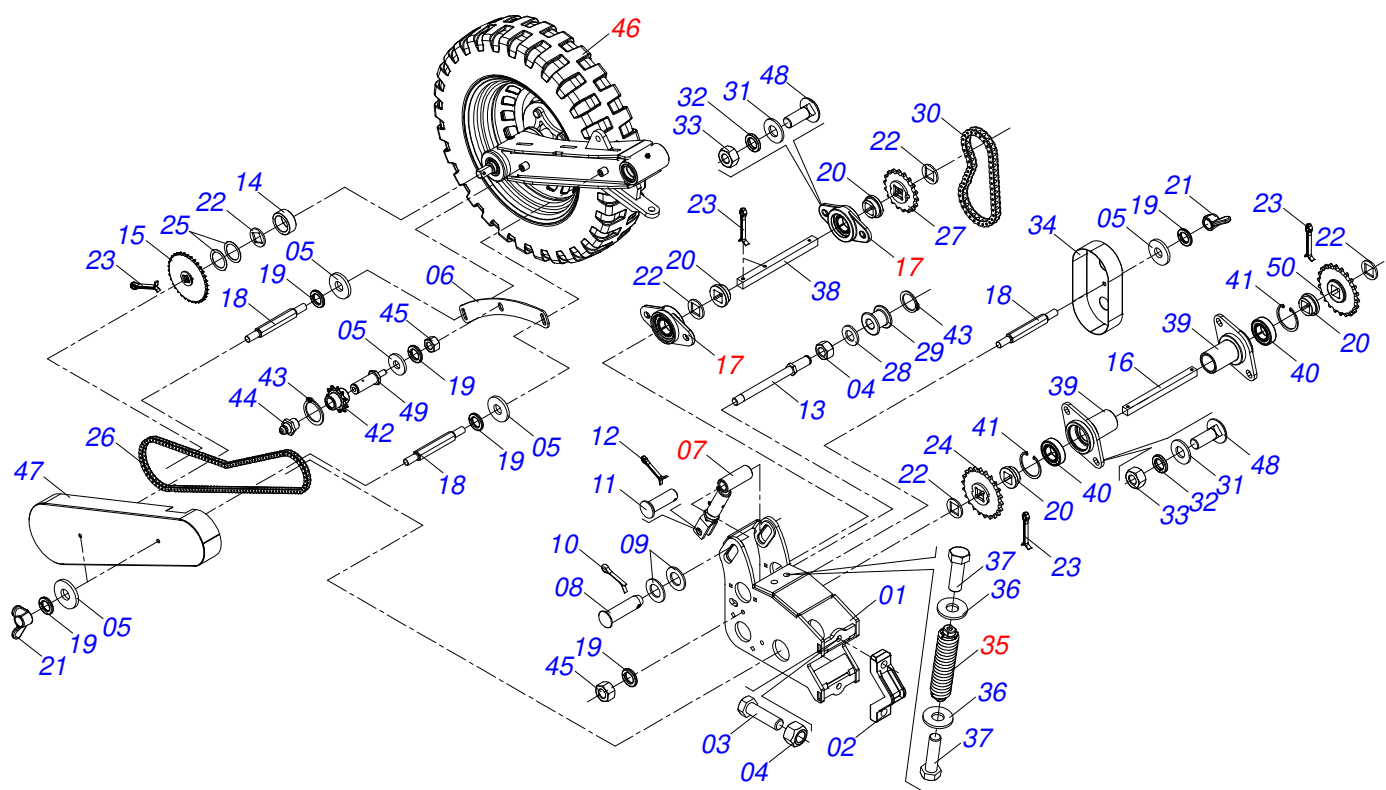


Item	Code	Description	See page	QT
01	0521063583	WHEEL SUPPORT		01
02	0502010175	HITCH CLAMP		01
03	0501011543	5/8" X 4" BOLT		02
04	0503012412	5/8" UNC SELF LOCKING NUT		03
05	0501010984	FLAT WASHER 10.50 X 27 X 3.00		06
06	0571010967	CHAIN TENSIONER		01
07	0511052487	TURNBUCKLE	9	01
08	0521010784	COUPLING SHAFT		01
09	0501011445	FLAT WASHER		02
10	0503010571	SPLIT PIN 1/4" X 1.1/2"		01
11	0521017623	0.5" X 1.5" COUPLING SHAFT		01
12	0503010257	1/8" X 1" SPLIT PIN		01
13	0571010964	TENSIONER CHAIN		01
14	0561016501	30,50 X 42 X 16 SLEEVE		01
15	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		01
16	0571010341	SQUARE SHAFT		01
17	0501056444	ROLLER BEARING	10	02
18	0561016503	PRISONER 3/8 UNC		03
19	0503010025	SPRING WASHER 3/8"		07
20	0503030303	SUPPORT WASHER		04
21	0503010209	3/8" UNC BUTTERFLY NUT		03
22	0521018630	1.4" X SQUARE 0.8" WASHER		05
23	0503010577	3/16" X 1.1/4" SPLIT PIN		05
24	0521060880	GEAR 22 TEETH		01
25	0501013354	FLAT WASHER		02
26	0503012718	40-1 CHAIN X 111 LINK + MENDING		01
27	0511061757	18Z GEAR		01
28	0501011299	FLAT WASHER		01
29	0503030402	PULLEY		01
30	0503018182	40-1 X 39 CHAIN LINK + MENDING		01
31	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		08
32	0503010179	LOCK WASHER 5/16 ZN 1K01528		08


Item	Code	Description	See page	QT
33	0503010337	NUT 5/16 UNC G.5 ZN		08
34	0561019679	CHAIN CAP		01
35	0511057192	EXTENSION SPRING	11	01
36	0511017302	FLAT WASHER 13.50 X 32.50 X 3.0 ZN		02
37	0503013618	BOLT 1/2 UNC X 3.1/2 CSRT G.5 ZN		02
38	0581018867	AXIS 3/4 "X 245 CARDAN TRANSMISSION		01
39	0521062809	BEARING		02
40	0503013462	6005 2RS1 ROLLER BEARING		02
41	0503011105	SEAL RING		02
42	0503031805	11Z 1/2" GEAR		01
43	0503010302	501019 SEAL RING		02
44	0503010002	GREASE FITTING 1800		01
45	0503010026	NUT 3/8"		02
46	0511052484	WHEELS RIGHT	5	01
47	0571010830	RIGHT CHAIN COVER		01
48	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		08
49	0521012311	CHAIN TIGHTENER AXLE		01
50	0502012717	GEAR 22Z P.1/2 FQ 3/4"		01

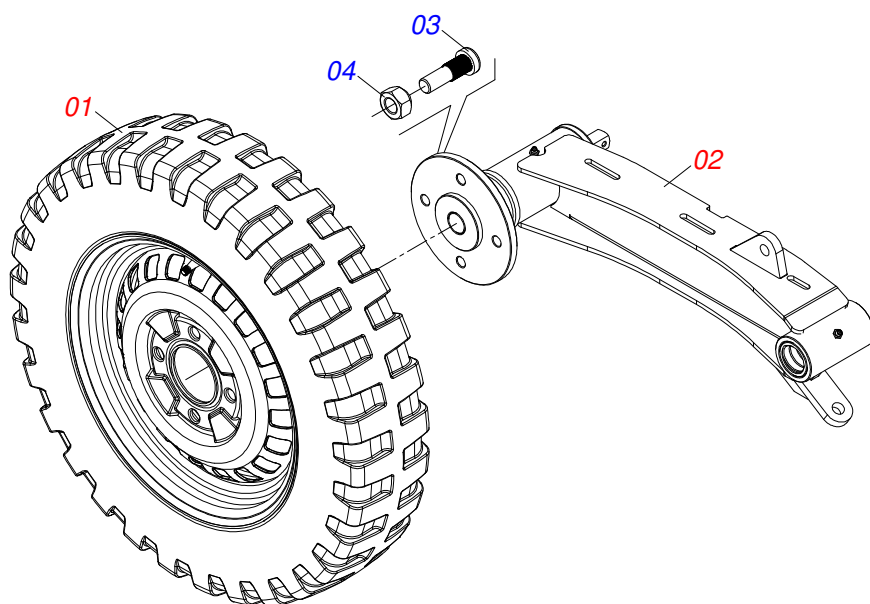


Item	Code	Description	See page	QT
01	0503060105	WELL AND TIRE ASSY	6	01
02	0511052485	LH WHELLS ARM	7	01
03	0501010127	9/16" X 1-7/8" LUG BOLT		04
04	0503010035	9/16" CONIC NUT		04

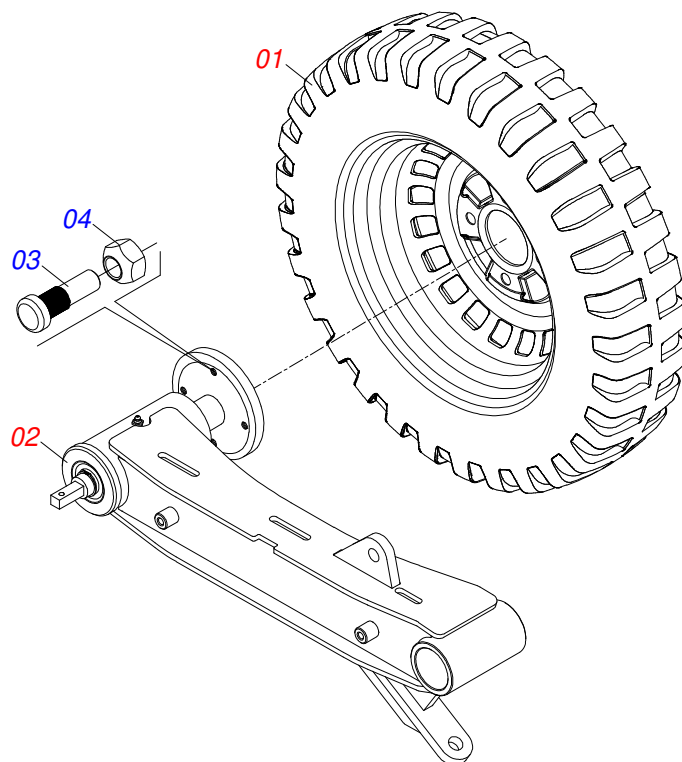


Item	Code	Description	See page	QT
01	0503060105	WELL AND TIRE ASSY	6	01
02	0511052486	WHEEL ARM RIGTH	8	01
03	0501010127	9/16" X 1-7/8" LUG BOLT		04
04	0503010035	9/16" CONIC NUT		04

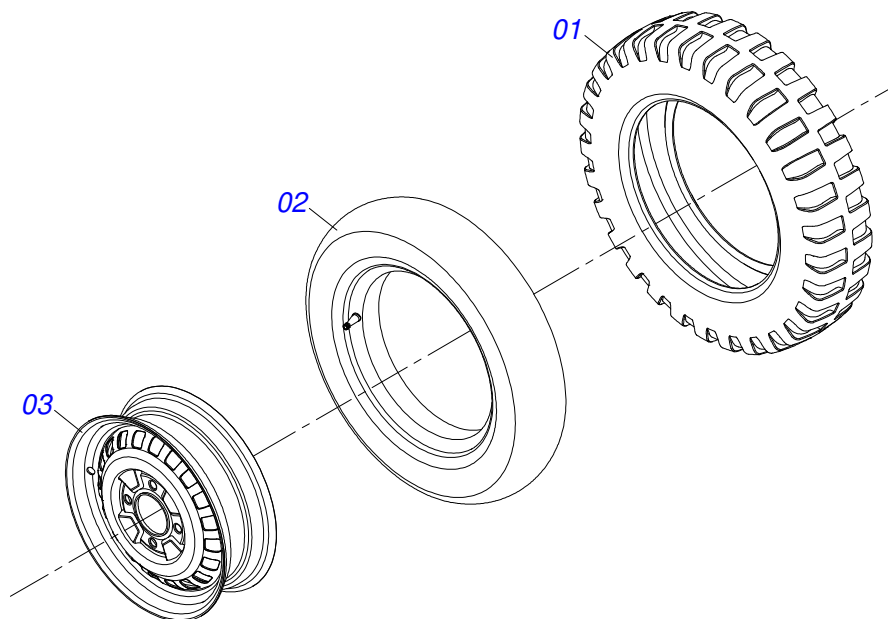


Item	Code	Description	See page	QT
01	0503011010	CANVAS TIRE		01
02	0503010791	AR F 15 INNER TIRE		01
03	0503010789	0.2"J X 15H2" X0.2"F X0.6"X6" WHEEL		01

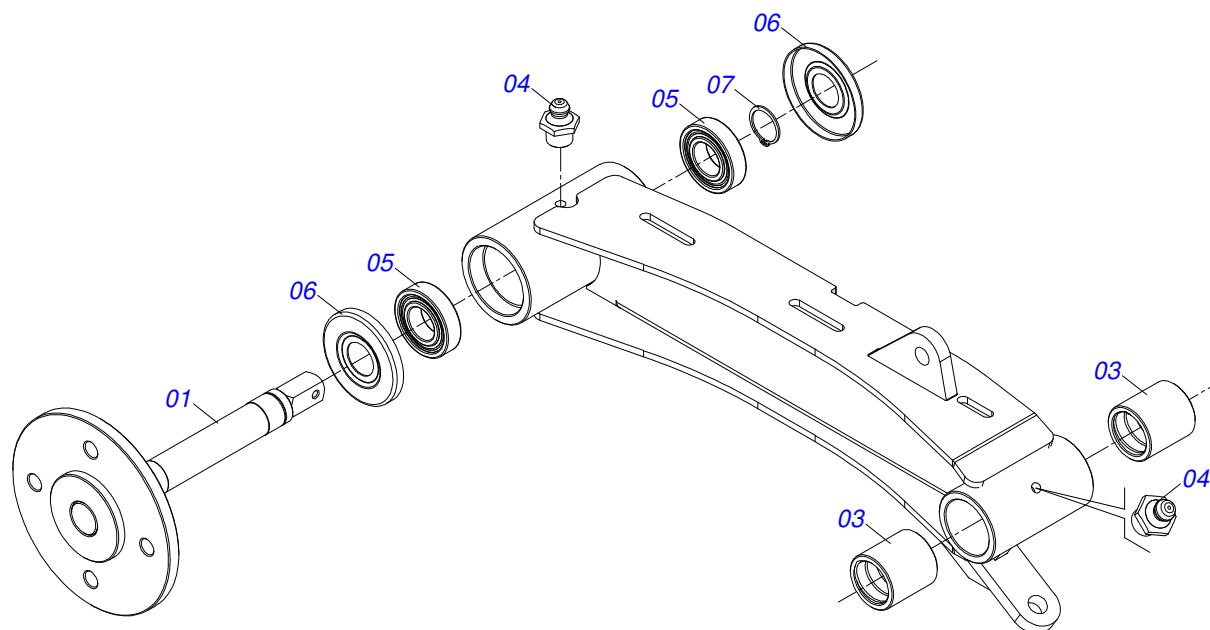


Item	Code	Description	See page	QT
01	0521061662	WHEELED AXLE		01
02	0521063587	LH WHEEL ARM		01
03	0571010311	SLEEVE INTERMEDIARY		02
04	0503010002	GREASE FITTING 1800		02
05	0503013170	ROLLER BEARING		02
06	0561016502	GUARD POWDER		02
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01

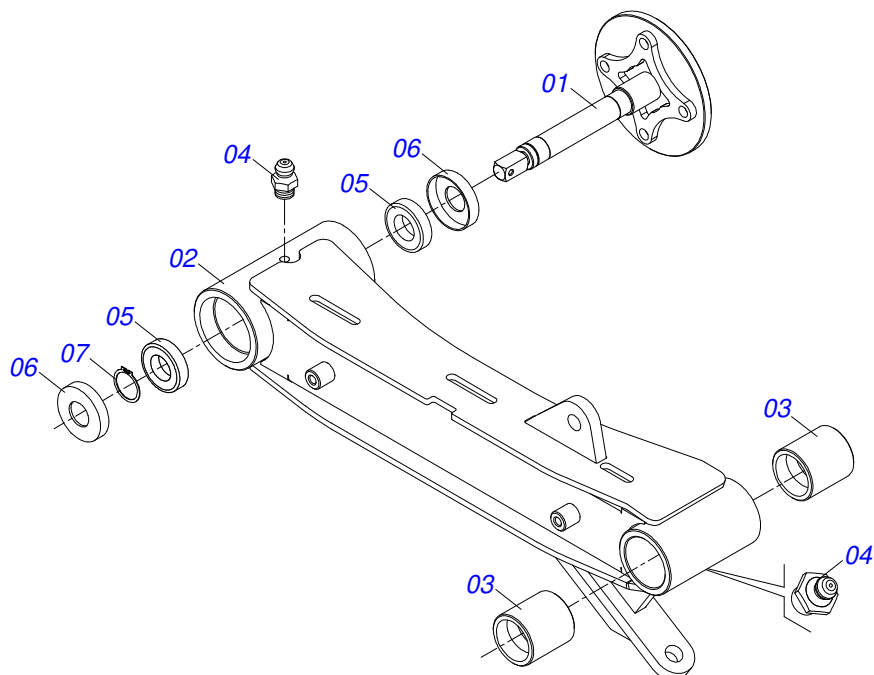


Item	Code	Description	See page	QT
01	0521061662	WHEELED AXLE		01
02	0521063588	RH WHEEL ARM		01
03	0571010311	SLEEVE INTERMEDIARY		02
04	0503010002	GREASE FITTING 1800		02
05	0503013170	ROLLER BEARING		02
06	0561016502	GUARD POWDER		02
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01

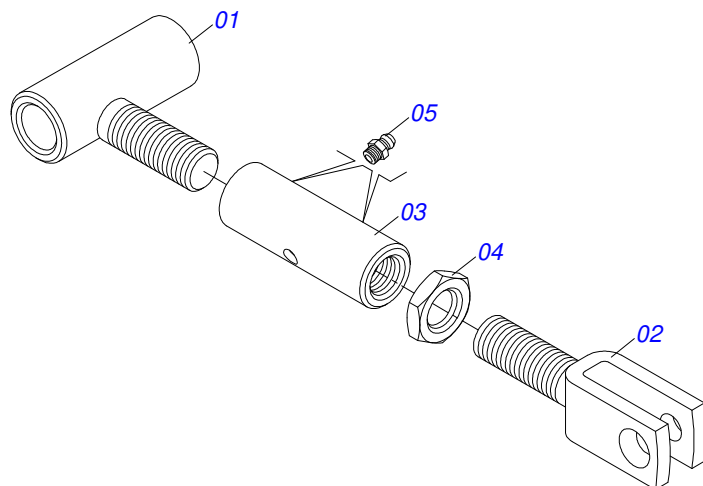


Item	Code	Description	See page	QT
01	0521063584	BODY RIGHT TURNBUCLE		01
02	0521063585	LEFT EXTENSOR BODY		01
03	0541010618	STABILIZER BODY		01
04	0541010087	LOOK NUT		01
05	0503010691	GREASE FITTING 1/4"		02

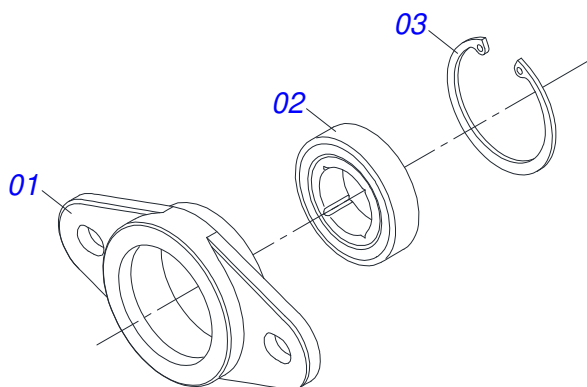


Item	Code	Description	See page	QT
01	0502011697	GEARBOX SUPPORT		01
02	0503013462	6005 2RS1 ROLLER BEARING		01
03	0503011105	SEAL RING		01

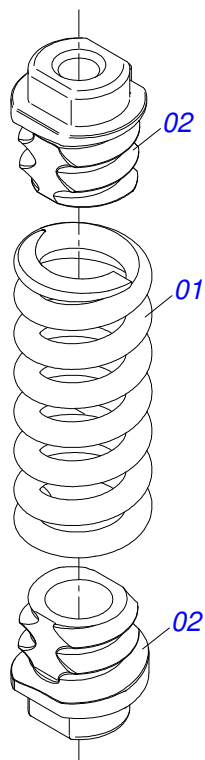


Item	Code	Description	See page	QT
01	0503031681	2.1" X 7.78" EXTENSION SPRING		01
02	0502011031	SPRING UPPER HITCH		02

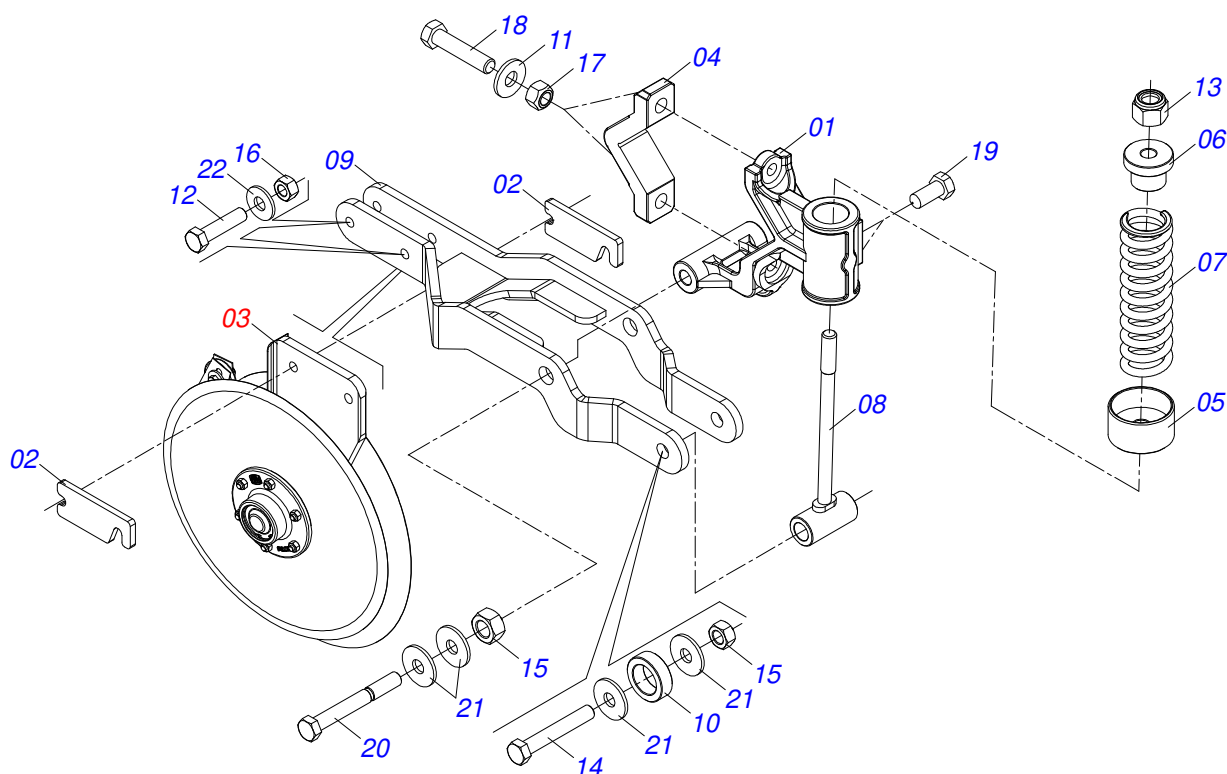


Item	Code	Description	See page	QT
01	0502011567	FERTILIZER ROW SUPPORT		01
02	0511018662	SPACING PLATE		02
03	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	14	01
04	0502010175	HITCH CLAMP		01
05	0581017926	LOWER SUPPORT SPRING FERTILIZER		01
06	0581017927	SUPPORT SPRING FERTILIZER		01
07	0503034712	LONG SPRING 10,50 X 46,50 X 230		01
08	0521069017	SPRING REGULATOR		01
09	0521069394	LEFT FERTILIZER ROW BODY		01
10	0581018866	63,5 X 42 X 20 SPACER SLEEVE		01
11	0501012140	FLAT WASHER 16,50 X 40 X 4,00 ZN		02
12	0503010847	1/2" X 3.1/4" BOLT		02
13	0503011075	3/4 UNC LOCK NUT		01
14	0503011198	BOLT 3/4" UNC X 6" CS G.5		01
15	0503011255	3/4" LOCK NUT		02
16	0503011336	1/2" HEX SELF ADJUSTING NUT		02
17	0503012412	5/8" UNC SELF LOCKING NUT		02
18	0503016110	BOLT 5/8 UNC X 4 C S G.7 ZN		02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
20	0511016281	3/4" X 8" BOLT		01
21	0511017232	FLAT WASHER		04
22	0511017302	FLAT WASHER 13.50 X 32.50 X 3.0 ZN		02

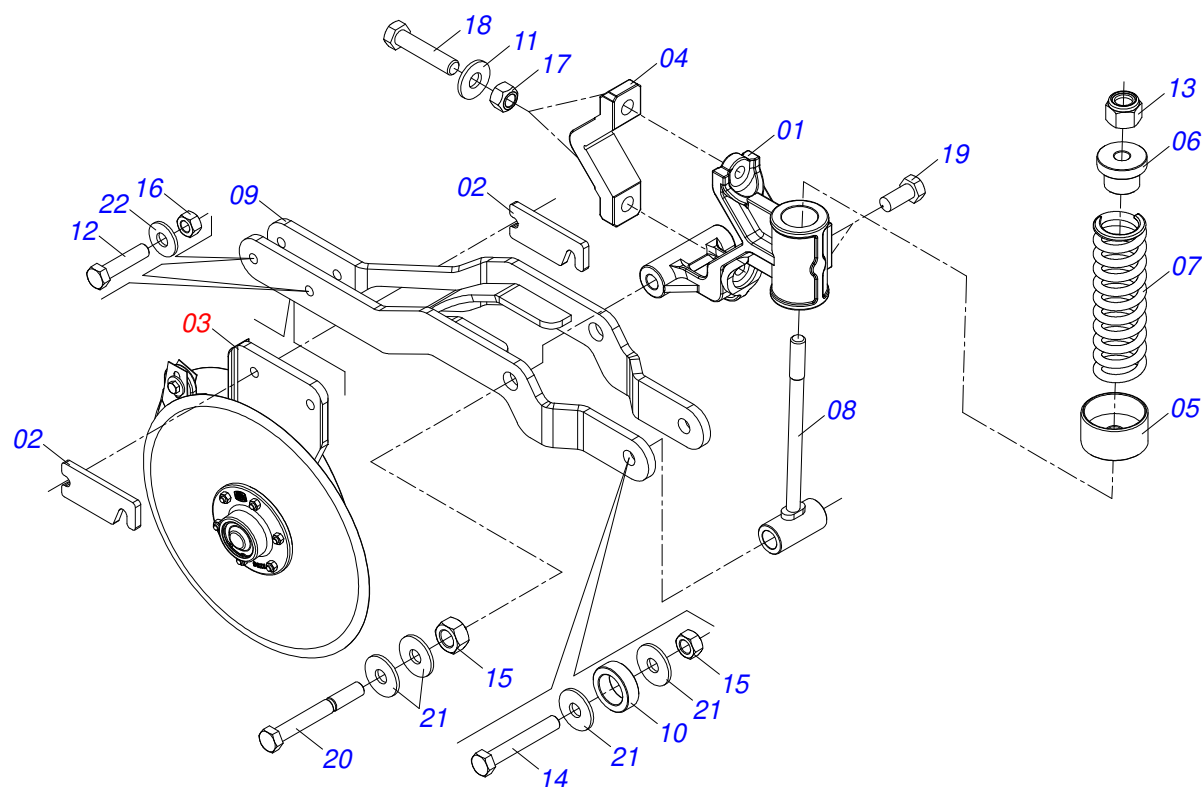


Item	Code	Description	See page	QT
01	0502011567	FERTILIZER ROW SUPPORT		01
02	0511018662	SPACING PLATE		02
03	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	15	01
04	0502010175	HITCH CLAMP		01
05	0581017926	LOWER SUPPORT SPRING FERTILIZER		01
06	0581017927	SUPPORT SPRING FERTILIZER		01
07	0503034712	LONG SPRING 10,50 X 46,50 X 230		01
08	0521069017	SPRING REGULATOR		01
09	0521069393	RIGHT FERTILIZER ROW BODY		01
10	0581018866	63,5 X 42 X 20 SPACER SLEEVE		01
11	0501012140	FLAT WASHER 16,50 X 40 X 4,00 ZN		02
12	0503010847	1/2" X 3.1/4" BOLT		02
13	0503011075	3/4 UNC LOCK NUT		01
14	0503011198	BOLT 3/4" UNC X 6" CS G.5		01
15	0503011255	3/4" LOCK NUT		02
16	0503011336	1/2" HEX SELF ADJUSTING NUT		02
17	0503012412	5/8" UNC SELF LOCKING NUT		02
18	0503016110	BOLT 5/8 UNC X 4 C S G.7 ZN		02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
20	0511016281	3/4" X 8" BOLT		01
21	0511017232	FLAT WASHER		04
22	0511017302	FLAT WASHER 13.50 X 32.50 X 3.0 ZN		02

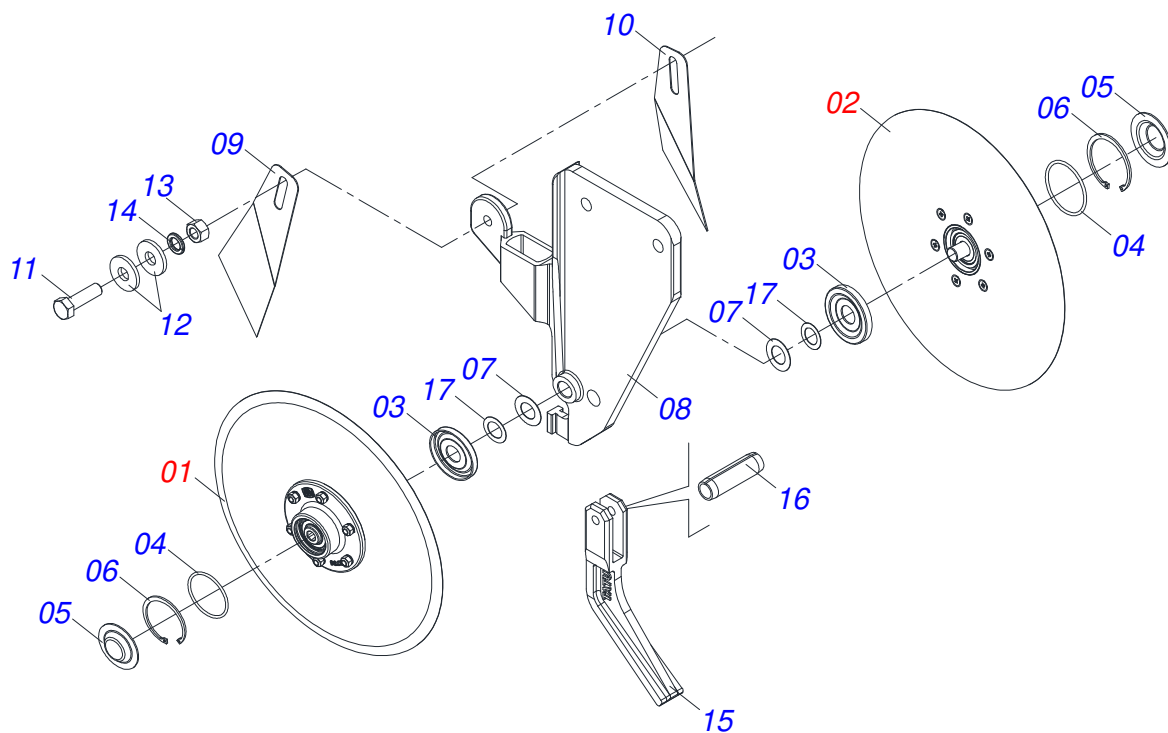


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW HUB WITH 15 DISC	16	01
02	0511053173	RIGHT LOW HUB WITH 15 DISC	17	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011161	SUPPORT DDD 15 X 15 LEFT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER 10.50 X 27 X 3.00		02
13	0503010026	NUT 3/8"		01
14	0503010025	SPRING WASHER 3/8"		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

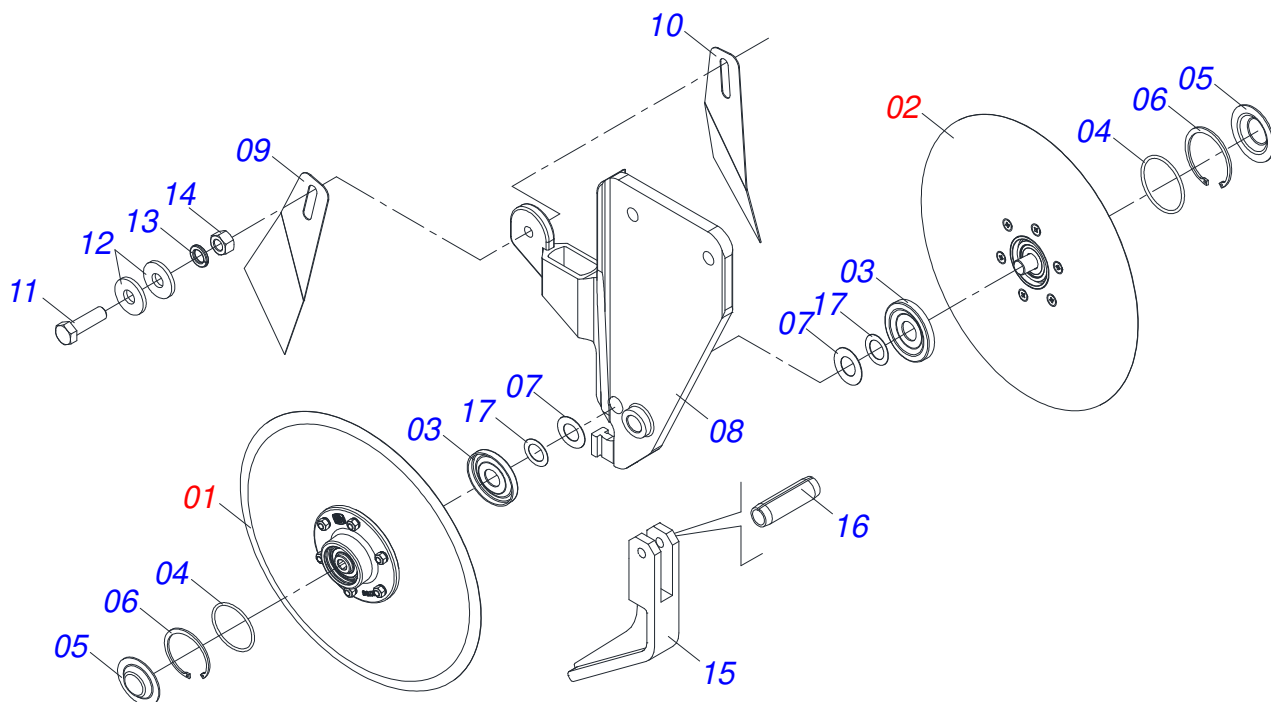


Item	Code	Description	See page	QT
01	0511053173	RIGHT LOW HUB WITH 15 DISC	17	01
02	0511053172	LEFT LOW HUB WITH 15 DISC	16	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER 10.50 X 27 X 3.00		02
13	0503010025	SPRING WASHER 3/8"		01
14	0503010026	NUT 3/8"		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

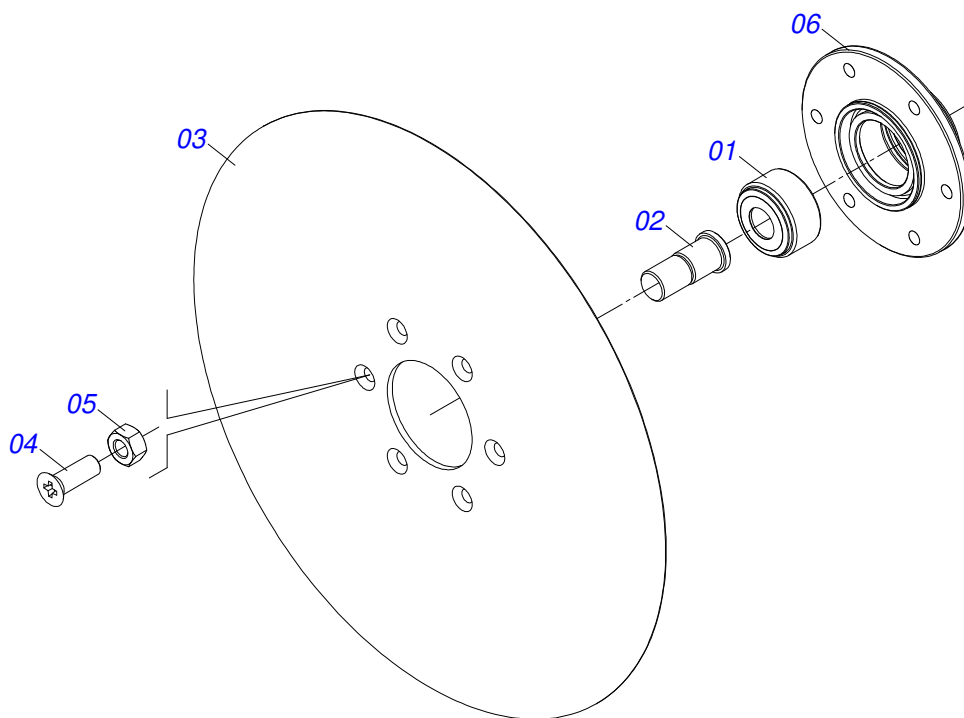


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	NUT 5/16 UNC G.5 ZN		06
06	0502012736	HUB LOWER		01

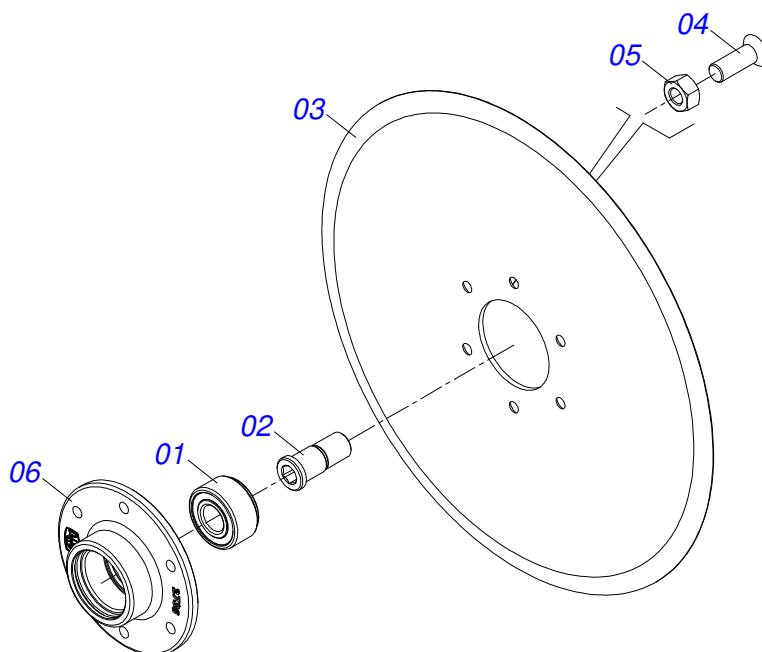


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011150	RIGHT DOUBLE DISC AXLE		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	NUT 5/16 UNC G.5 ZN		06
06	0502012736	HUB LOWER		01

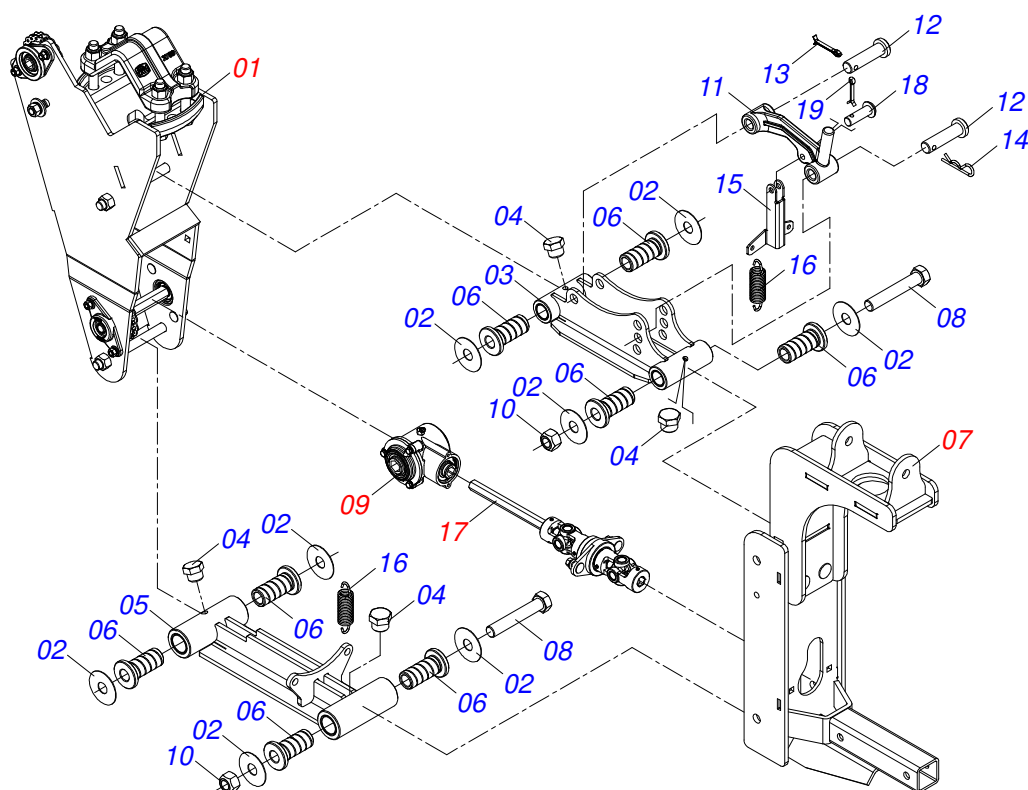


Item	Code	Description	See page	QT
01	0521053565	SEED ROW SUPPORT	19	01
02	0531015184	FLAT WASHER		08
03	0501110906	TOP SEED ROW ARM WITH SLEEVE		01
04	0511017907	1/8" BSPT X 6 PLUG		04
05	0501110905	BOTTOM SEED ROW ARM WITH SLEEVE		01
06	0581017914	PANTOGRAPHO SLEEVE		08
07	0521053688	SEED ROW FRAME	23	01
08	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		02
09	0511057159	TRANSMISSION HOPPER SEED ROW	24	01
10	0503012412	5/8" UNC SELF LOCKING NUT		02
11	0502012568	UPPER ROCKER ARM		01
12	0581019051	JUNCTION 15.88 X 85 SHAFT		02
13	0503010577	3/16" X 1.1/4" SPLIT PIN		01
14	0503030168	HITCH PIN CLIP		01
15	0581018487	FIXER UPPER SPRING		01
16	0503034580	TRACTION SPRING		02
17	0521054636	ASSY CARDAN TRANSMISSION	25	01
18	0521010773	0.37" X 1.18" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" SPLIT PIN		01

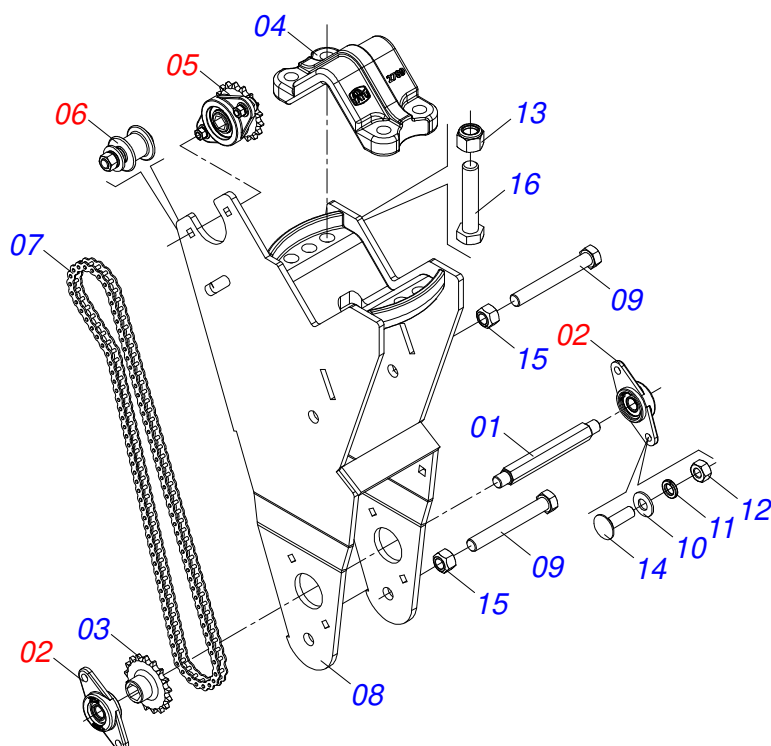


Item	Code	Description	See page	QT
01	0561814904	ROW FRAME TRANSMISSION AXLE		01
02	0511054635	BEARING AXLE BODY	20	02
03	0502012782	GEAR 17Z		01
04	0502012789	FIXER SUPPORT FERTILIZER ROW		01
05	0501052769	BEARING WITH 17Z GEAR	21	01
06	0511055260	SEED ROW CHAIN TENSIONER	22	01
07	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
08	0521069395	FRONT SUPPORT		01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		02
10	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		04
11	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
12	0503010337	NUT 5/16 UNC G.5 ZN		04
13	0503010811	5/8" UNF SELF ADJUSTING NUT		04
14	0503011953	5/16" X 1" BOLT		04
15	0503012412	5/8" UNC SELF LOCKING NUT		02
16	0503017857	BOLT 5/8 UNF 4		04

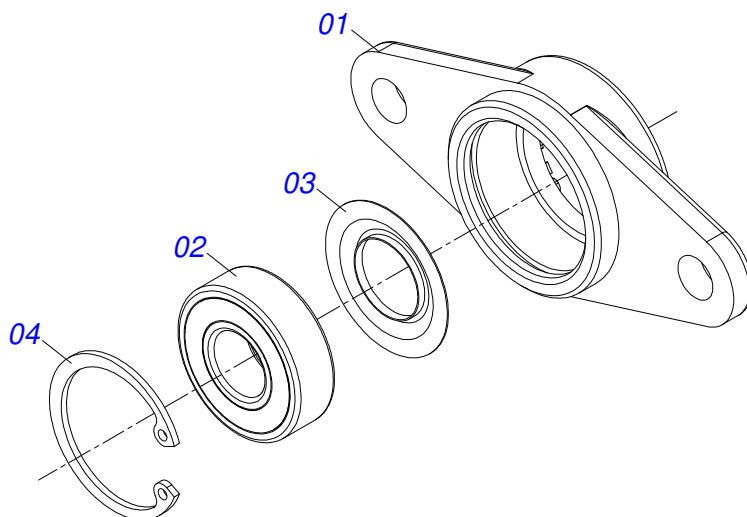


Item	Code	Description	See page	QT
01	0502012718	ROW BEARING		01
02	0503012882	BEARING		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

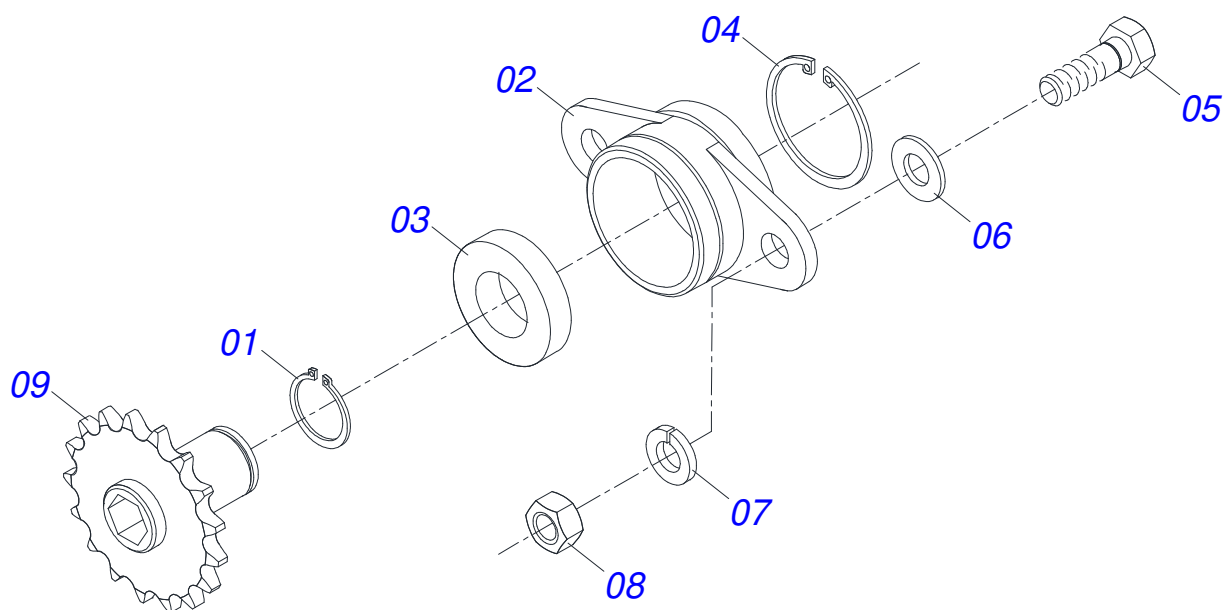


Item	Code	Description	See page	QT
01	0503010406	501025 CLAMPING RING (FOR AXLE)		01
02	0502011697	GEARBOX SUPPORT		01
03	0503011410	ROLLER BEARING		01
04	0503011105	SEAL RING		01
05	0503011953	5/16" X 1" BOLT		02
06	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		02
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
08	0503010337	NUT 5/16 UNC G.5 ZN		02
09	0502012819	GEAR 17Z		01

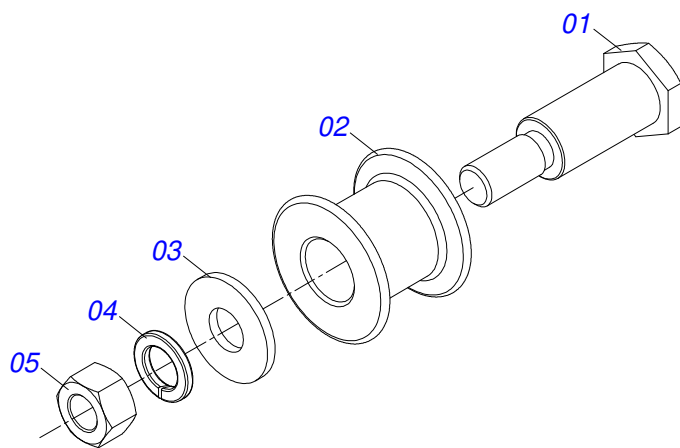


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER 13.50 X 32.50 X 3.0 ZN		01
04	0503010019	SPRING WASHER 1/2"		01
05	0503010060	HEX NUT 1/2 UNC G.5 ZN		01

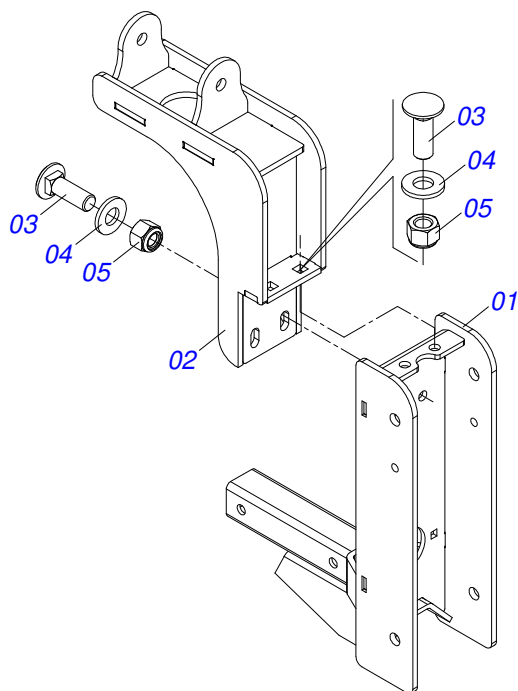


Item	Code	Description	See page	QT
01	0521061427	SHORT SEED ROW FRAME		01
02	0521069012	SEED ROW COMPLEMENT		01
03	0503014378	BOLT 1/2" X 1-1/2"		04
04	0501010937	FLAT WASHER 13.50 X 28 X 3.00		04
05	0503010589	SELF ADJUSTING NUT 1/2" UNC		04

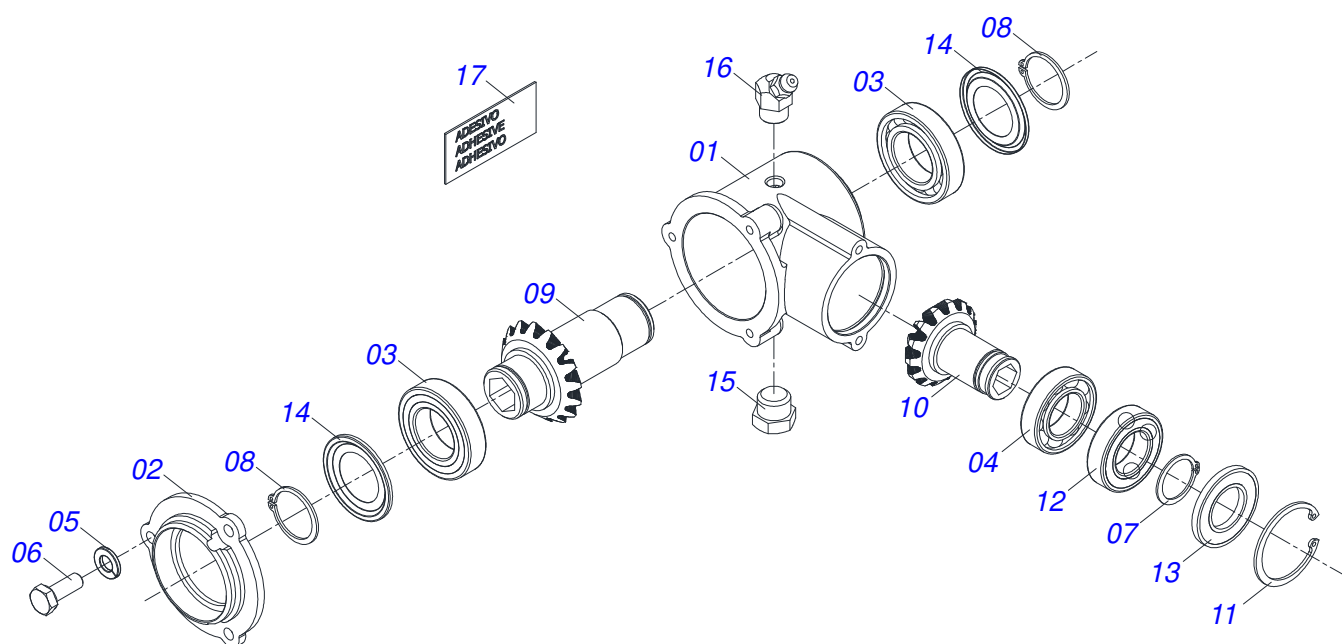


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	SPRING WASHER 1/4"		03
06	0503011378	M6 X 1 X 16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	GREASE FITTING 3/8"		01
17	0503035316	LUBRICATED POINTS DECAL		01

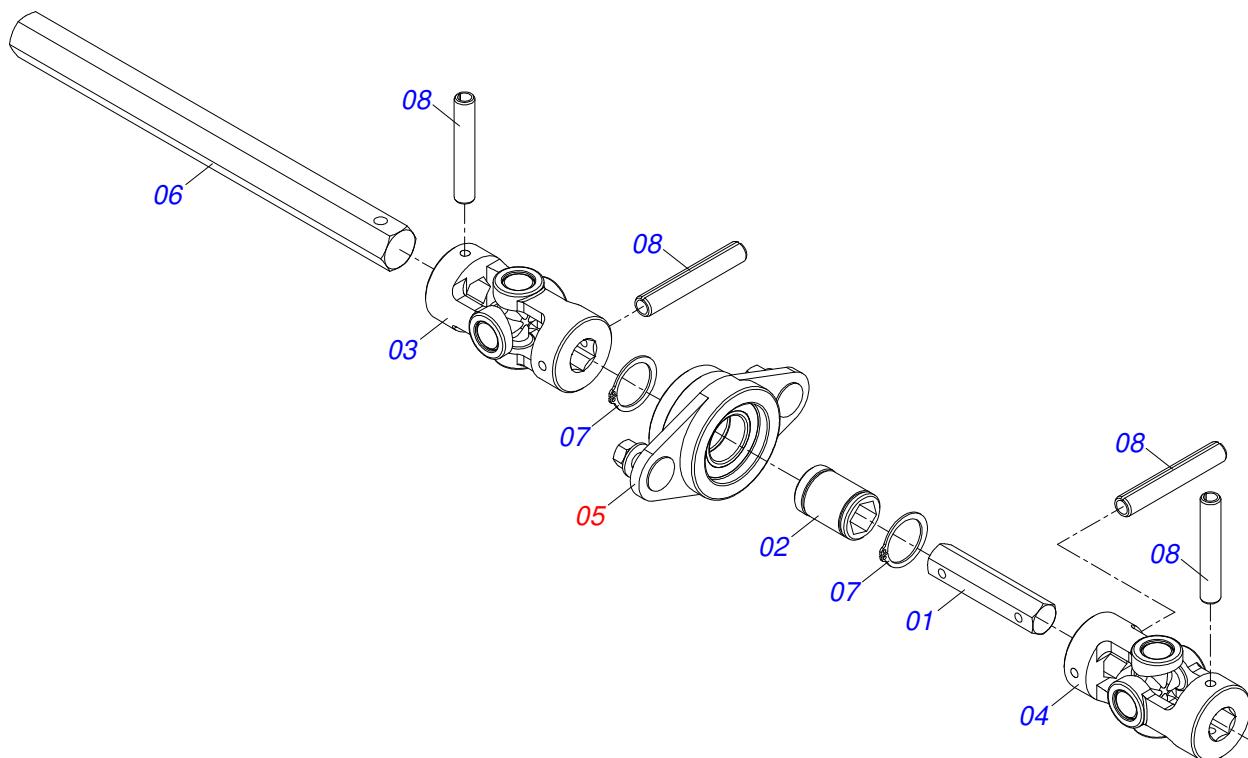


Item	Code	Description	See page	QT
01	0551017540	5/8" X 73 AXLE HEX		01
02	0551017559	BEARING AXLE BODY		01
03	0501056296	UNIVERSAL JOINT		01
04	0561014778	HEX UNIVERSAL JOINT		01
05	0511052389	BEARING DOUBLE FRONT ROW SEED	26	01
06	0581018851	HEX AXLE 5/8 "X 195		01
07	0503010406	501025 CLAMPING RING (FOR AXLE)		02
08	0503011855	0.2" X 1.8" SPRING PIN		04

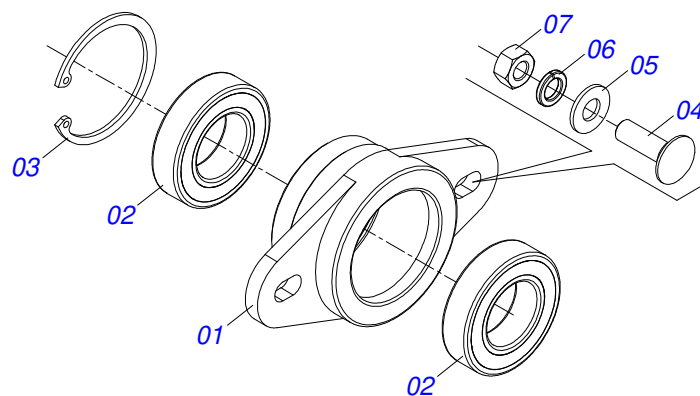


Item	Code	Description	See page	QT
01	0502011971	HOUSING WITH DOUBLE BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		02
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	NUT 5/16 UNC G.5 ZN		02

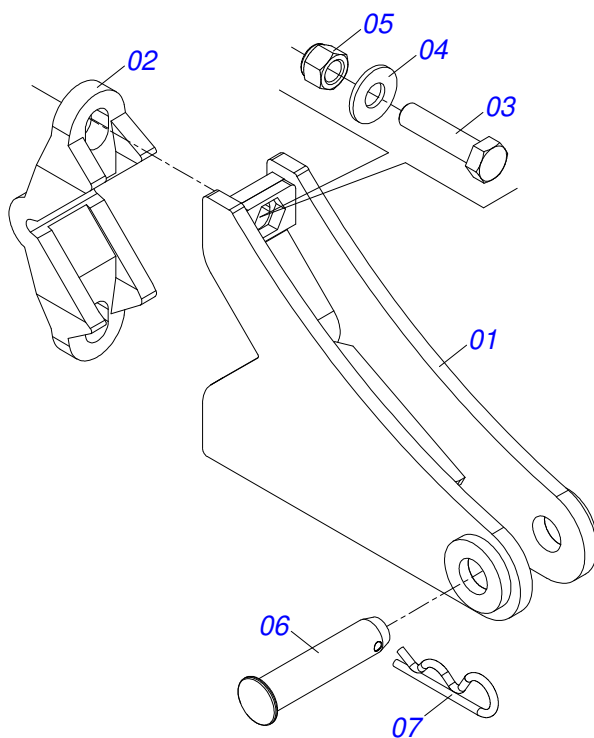


Item	Code	Description	See page	QT
01	0521069288	HITCH TO THE TRACTOR LOWER		01
02	1902010584	CARRYING-WHEELS SUPPORT FIXER		01
03	0503017856	BOLT 3/4		02
04	0501010322	FLAT WASHER 20.50 X 46 X 4.00 ZN		02
05	0503010152	3/4" SELF LOCKING NUT		02
06	0521010596	COUPLING SHAFT		01
07	0503031035	HITCH PIN CLIP		01

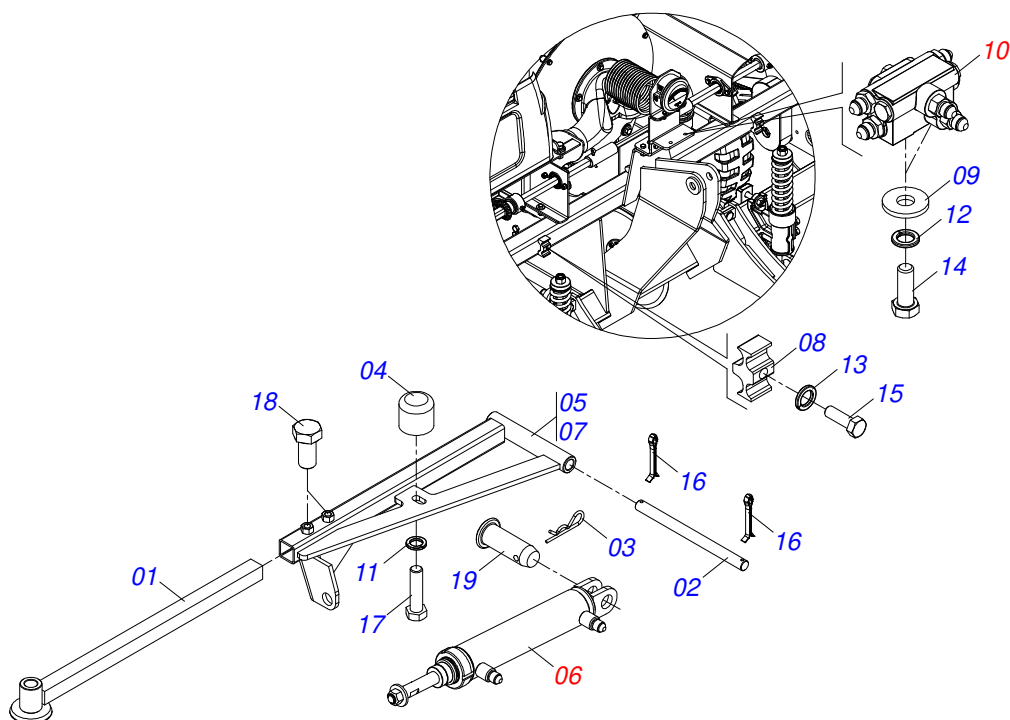


Item	Code	Description	See page	QT
01	0501069307	ROW MARKER ARM		02
02	0531012400	COUPLING SHAFT		02
03	0503030168	HITCH PIN CLIP		02
04	0503011070	BEATER		02
05	0521062818	LEFT ARM		01
06	0521040155	HYDRAULIC CYLINDER 31,75 X 50,8 X 365 X 595	29	02
07	0521062819	RIGHT ARM		01
08	1902012702	UPPER CLAMP BODY		06
09	0501010984	FLAT WASHER 10.50 X 27 X 3.00		02
10	0501054649	HBM SEQUENTIAL VALVE	30	01
11	0503010019	SPRING WASHER 1/2"		02
12	0503010025	SPRING WASHER 3/8"		02
13	0503010180	SPRING WASHER 7/16"		06
14	0503010237	BOLT 3/8" X 1"		02
15	0503012555	7/16" UNC X 2" CS RT G.7 ZN SCREW		06
16	0503010577	3/16" X 1.1/4" SPLIT PIN		04
17	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
18	0503010834	1/2 X 1 BOLT		04
19	0521010571	COUPLING SHAFT		02

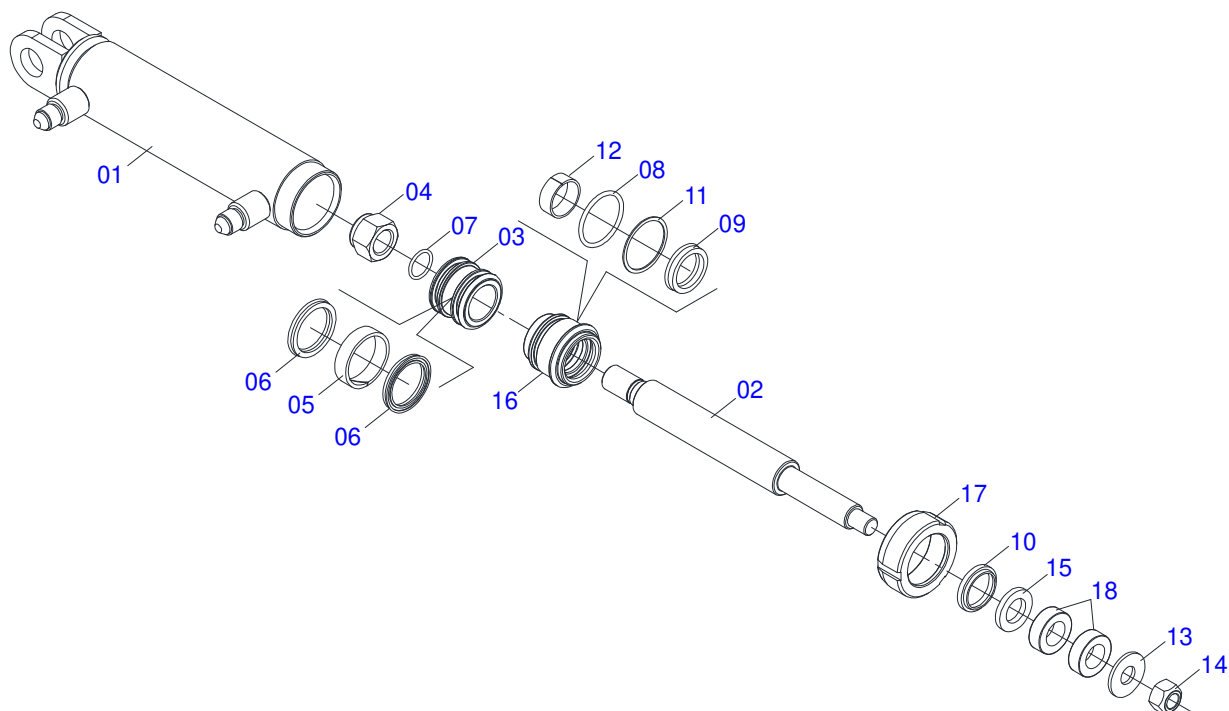


Item	Code	Description	See page	QT
01	0521062810	2X 350 CYLINDER BARREL		01
02	0571010344	31,75 X 456 ROD		01
03	0551019990	PISTON 31.75 X 50.80 X 39.40		01
04	0503010812	SELF LOCKING NUT 7/8" UNF		01
05	0503010949	RING G.E W2-2000-500 PK		01
06	0503013920	GASKET 1870-1625		02
07	0503014677	O'RING 2-118		01
08	0503013917	O'RING 2-224		01
09	0503013914	GASKET 1870-1250-312B		01
10	0503013915	SCRAPER RING D-1250		01
11	0503013918	BACK-UP RING 8-224		01
12	0503014683	RING GUIDE W1-1400-500		01
13	0501012140	FLAT WASHER 16,50 X 40 X 4,00 ZN		01
14	0503012412	5/8" UNC SELF LOCKING NUT		01
15	0571010576	MARKER SUPPORT WASHER		01
16	0571011410	RING SUPPORT		01
17	0571011411	MOBILE CYLINDER LID		01
18	0503033686	SLEEVE 22 X 38 X 12,50 RUBBER		02
19	0501038643	CYLINDER REPAIR KIT (0503032411)		01

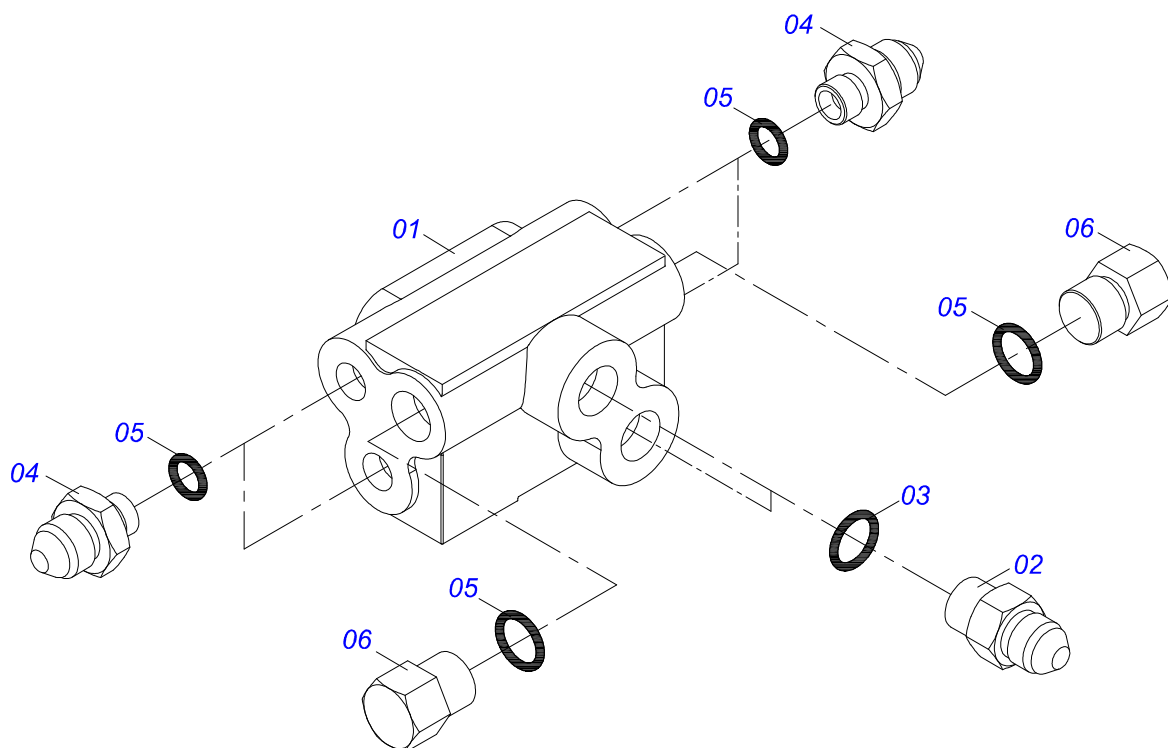


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	NIPLE 3/4" NF X 3/4" NF HEX. 7/8" X 44		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

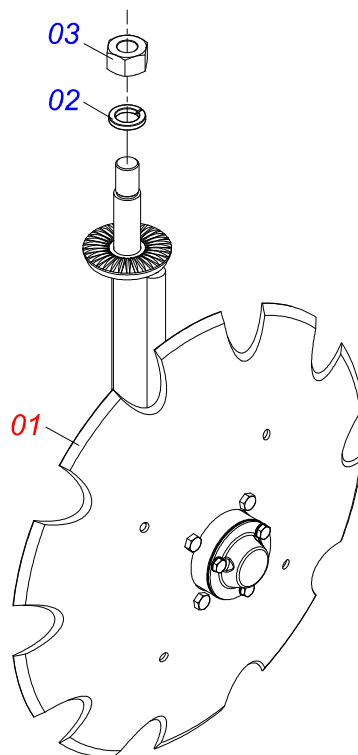


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC	32	01
02	0503010023	SPRING WASHER 3/4"		01
03	0503010014	HEX NUT 3/4" ZN G.5 (HEAVY) UNC		01

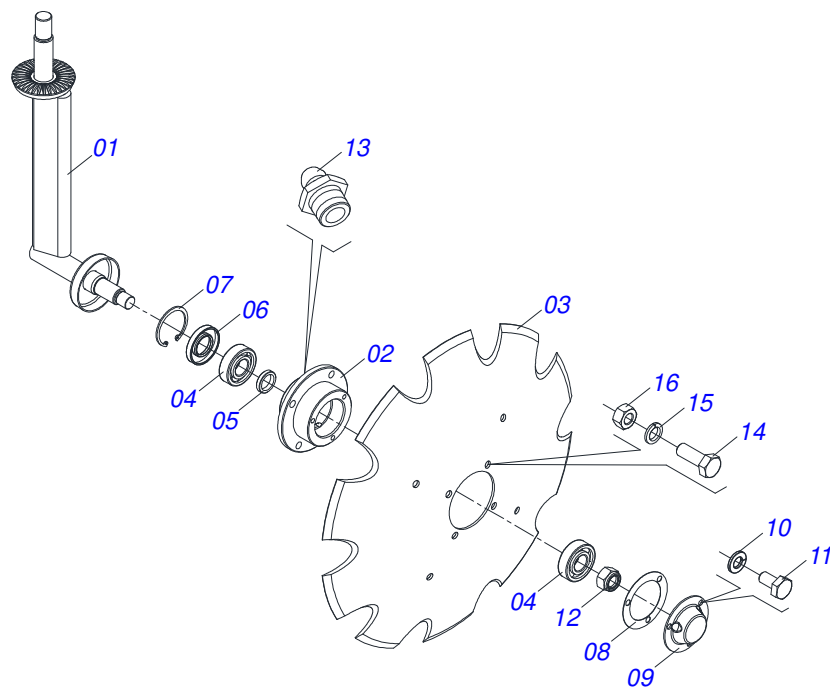


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	PROTECTION LID		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	GREASE FITTING 1/4"		01
14	0503010358	BOLT 5/16" X 5/8"		04
15	0503011444	SPRING WASHER 5/16"		04
16	0503010337	NUT 5/16 UNC G.5 ZN		04

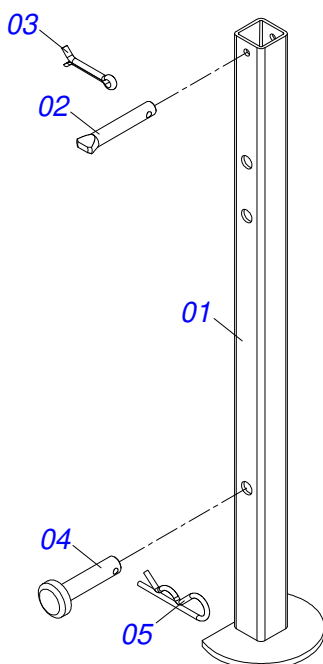


Item	Code	Description	See page	QT
01	0501065337	PLOUGH SUPPORT		01
02	0521010530	JUNCTION AXLE 6,80 X 60		01
03	0503010140	1/8" X 3/4" SPLIT PIN		01
04	0521010809	11,11 X 64 COUPLING SHAFT		01
05	0503030168	HITCH PIN CLIP		01

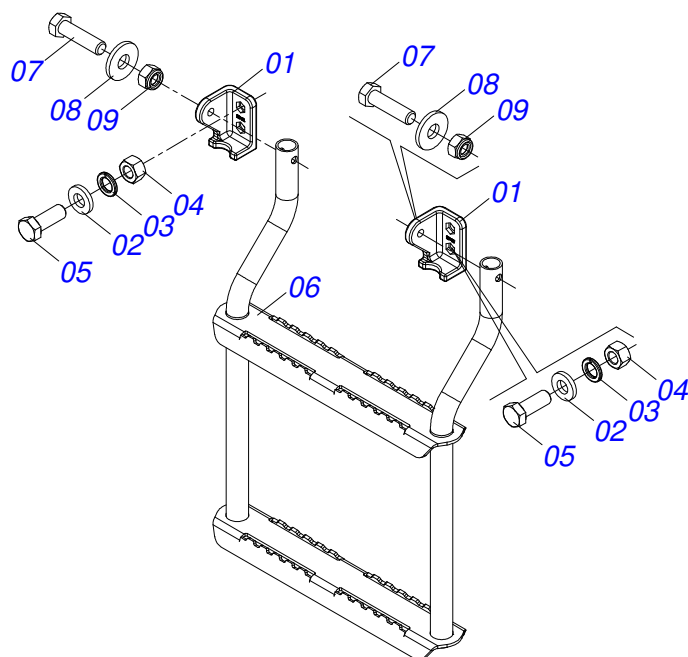


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER		04
02	0501013687	FLAT WASHER		08
03	0503010025	SPRING WASHER 3/8"		08
04	0503010026	NUT 3/8"		08
05	0503010237	BOLT 3/8" X 1"		08
06	0511069636	LADDER		02
07	0501010096	3/8" X 2" BOLT		04
08	0501010984	FLAT WASHER 10.50 X 27 X 3.00		04
09	0503013357	SELF-ADJUSTING NUT 3/8"		04

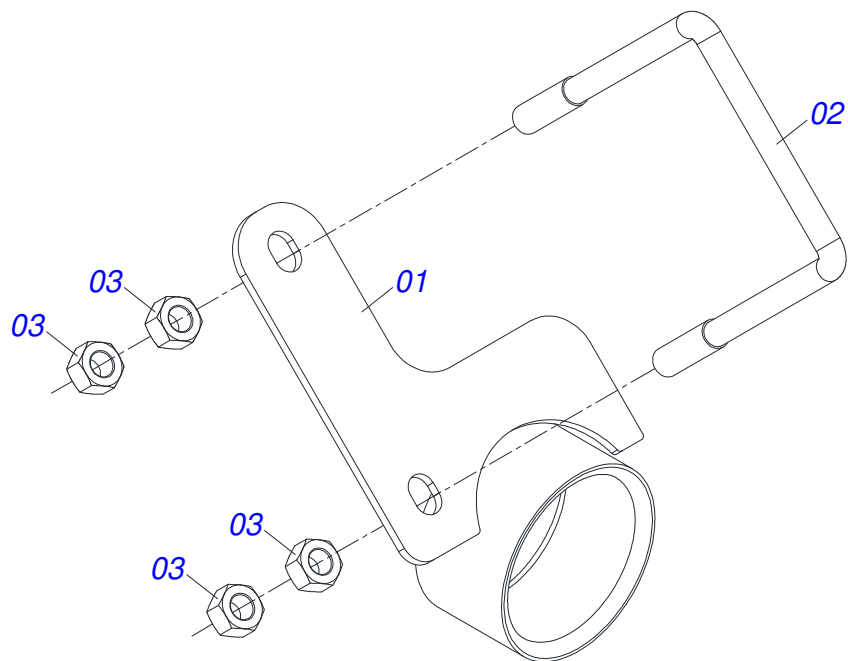

Item	Code	Description	See page	QT
01	0531064421	2" AIR DUCT SUPPORT		01
02	0521014021	1/2" X 4.5" X 5.4" FASTENER		01
03	0503010060	HEX NUT 1/2 UNC G.5 ZN		04

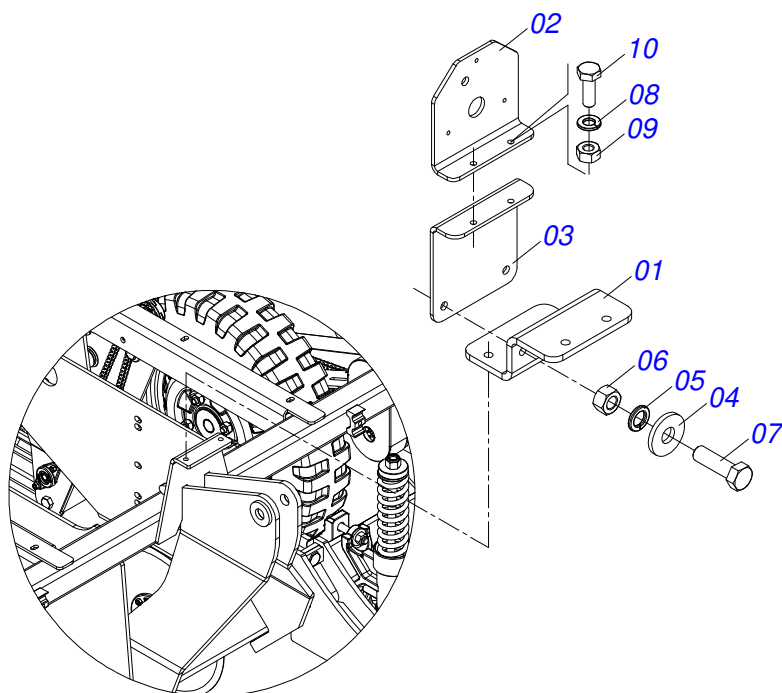

Item	Code	Description	See page	QT
01	0581018366	ROW MARKER VALVE SUPPORT		01
02	0581018364	SUPPORT VACUOMETER		01
03	0581018365	BASE SUPPORT VACUOMETER		01
04	0501010984	FLAT WASHER 10.50 X 27 X 3.00		02
05	0503010025	SPRING WASHER 3/8"		02
06	0503010026	NUT 3/8"		02
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
08	0503010143	SPRING WASHER 1/4"		02
09	0503010144	1/4" NUT		02
10	0503013849	1/4" UNC X 3/4" BOLT		02

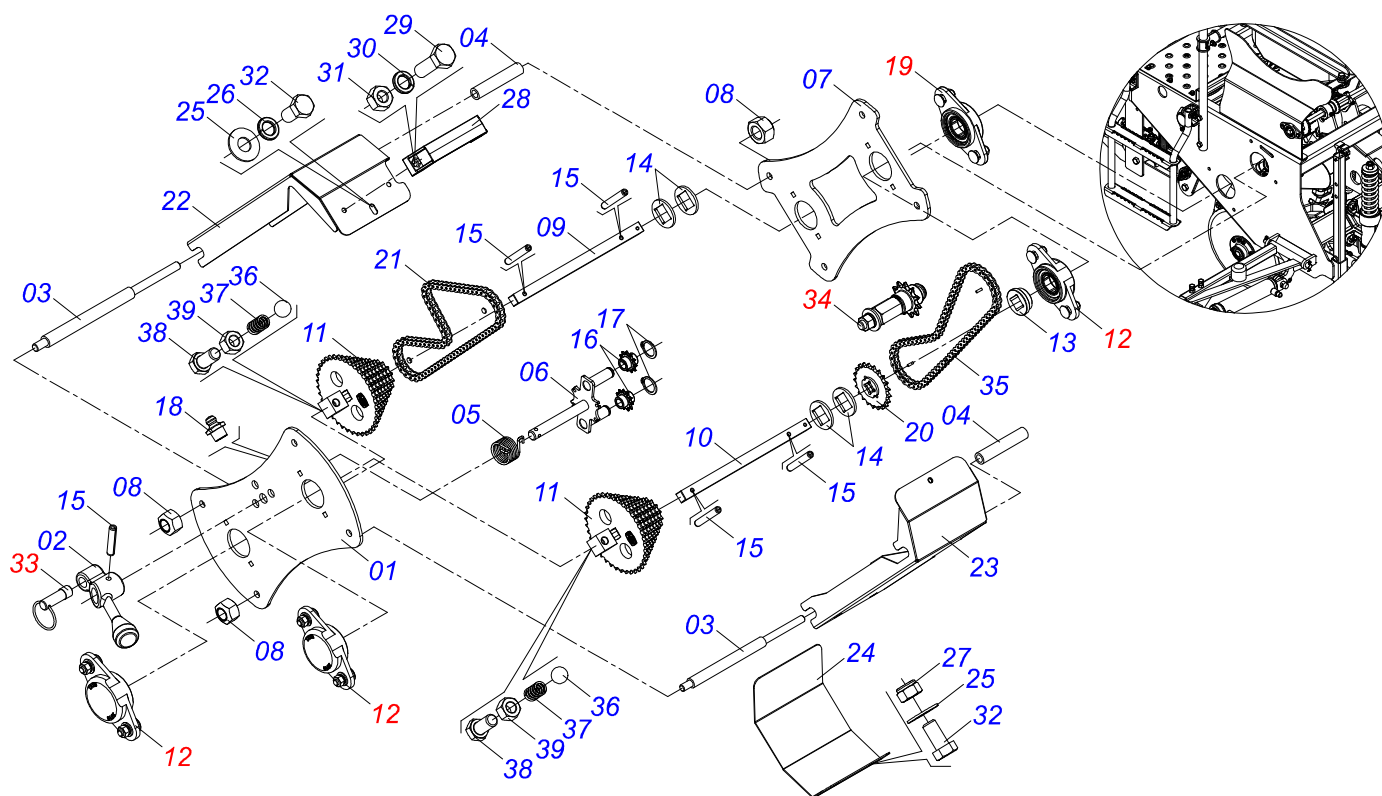


Item	Code	Description	See page	QT
01	0521062568	SIDE		01
02	0502011758	REAR TIGHTENER LEVER		01
03	0571010425	JACK		04
04	0571010426	SLEEVE SUPPORT		04
05	0503031366	RIGHT TWISTED SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0581019073			01
08	0503011336	1/2" HEX SELF ADJUSTING NUT		08
09	0581014147	MOTOR SHAFT		01
10	0561017353	MOTOR SHAFT		01
11	0511060396	DRIVE/DRIVEN SHAFT		02
12	0511059266	CLOSED BEARING	38	03
13	0503030303	SUPPORT WASHER		01
14	0521018630	1.4" X SQUARE 0.8" WASHER		09
15	0503010292	701164 6 X 40 SPRING PIN		05
16	0503031805	11Z 1/2" GEAR		02
17	0503010302	501019 SEAL RING		02
18	0503010002	GREASE FITTING 1800		01
19	0501056443	GEAR HOUSING BEARING	40	01
20	0511061830	17Z P 0.5" GEAR SQUARE HOL		01
21	0503012204	40-1 CHAIN X 82 LINK + RED		01
22	0581012581	TOP RIGHT COVER		01
23	0521067247	RIGHT PROTECTION COVER		01
24	0581012580	REAR COVER		01
25	0501013518	FLAT WASHER 10.50 X 24 X 1.50 ZN		03
26	0503010025	SPRING WASHER 3/8"		01
27	0503013357	SELF-ADJUSTING NUT 3/8"		02
28	0503011907	NYLON HANDLE		01
29	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		02
30	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
31	0503010337	NUT 5/16 UNC G.5 ZN		02
32	0503010256	3/8" X 3/4" BOLT		03


FERTILIZER GEARBOX

0521054665


Item	Code	Description	See page	QT
33	0501048790	AXLE WITH RING	41	01
34	0521054666	CHAIN TENSIONER	42	01
35	0503014528	40-1 CHAIN X 72 LINK + REDECTION		01
36	0503012389	1/2 BALL		02
37	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
38	0503010395	1/2" X 1-1/4" BOLT		02
39	0503010060	HEX NUT 1/2 UNC G.5 ZN		02

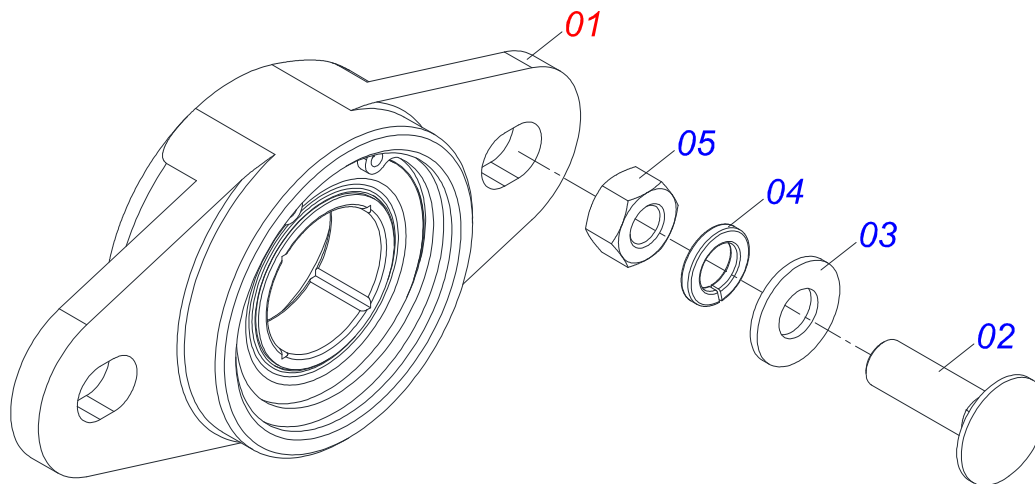


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	39	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	NUT 5/16 UNC G.5 ZN		02

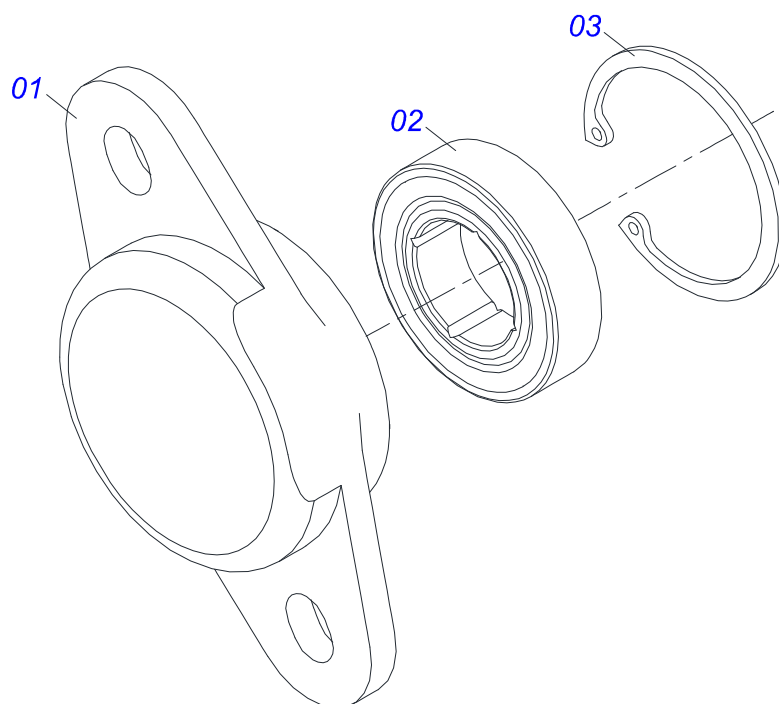


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	6005 2RS1 ROLLER BEARING		01
03	0503011105	SEAL RING		01

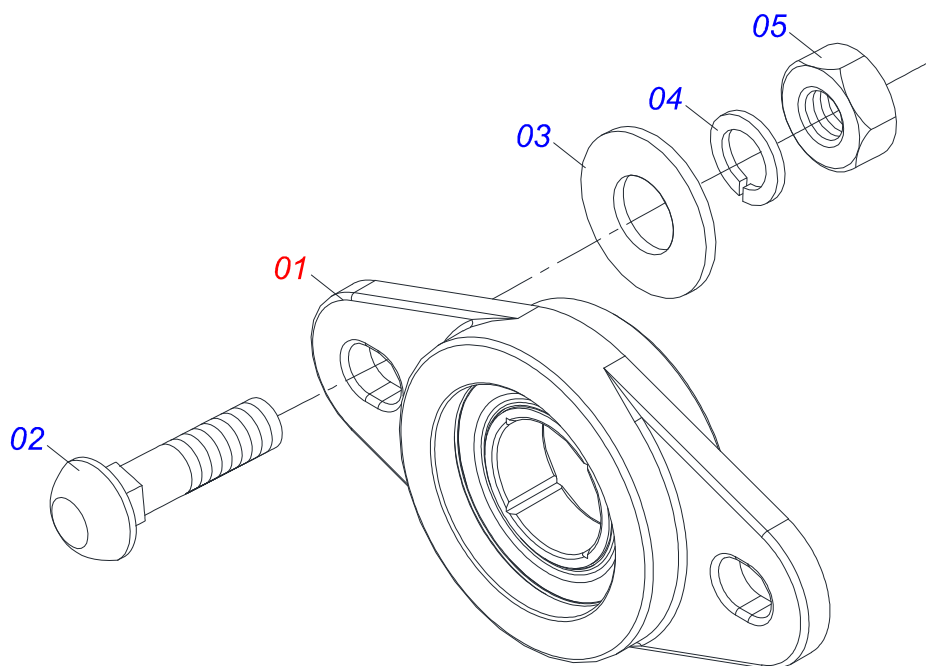


Item	Code	Description	See page	QT
01	0501056444	ROLLER BEARING	10	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	NUT 5/16 UNC G.5 ZN		02

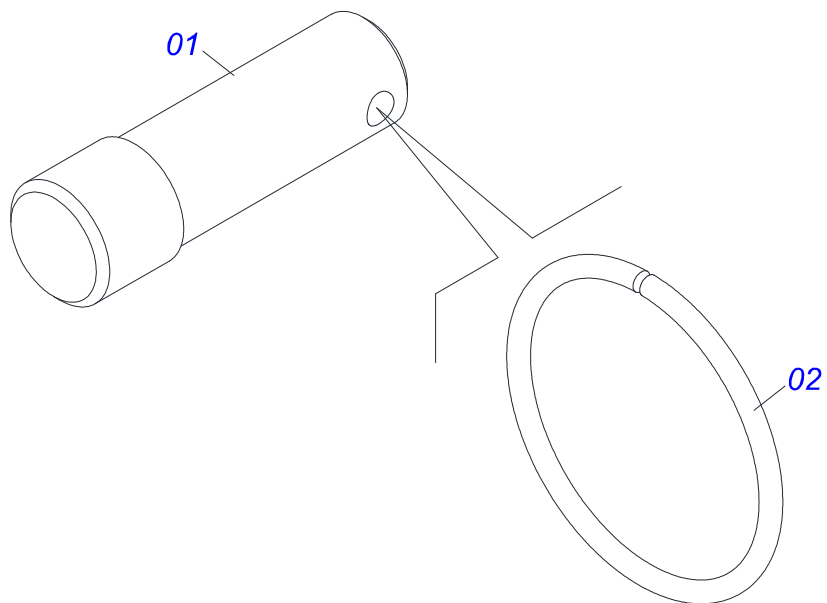

Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

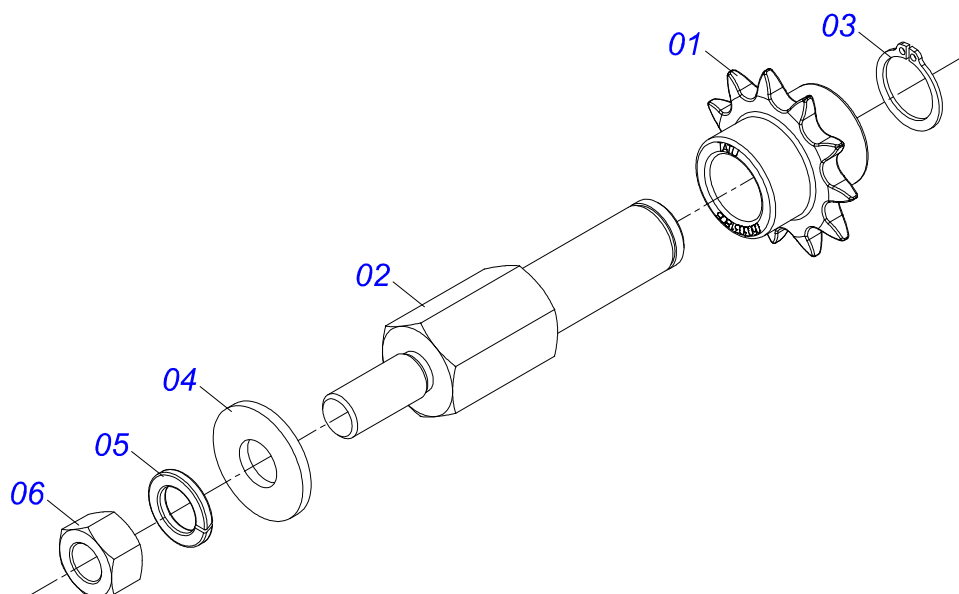


Item	Code	Description	See page	QT
01	0503031805	11Z 1/2" GEAR		01
02	0561016554	CURRENT STRETCH AXIS WHEELED SUPPORT		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER 13.50 X 32.50 X 3.0 ZN		01
05	0503010019	SPRING WASHER 1/2"		01
06	0503010060	HEX NUT 1/2 UNC G.5 ZN		01

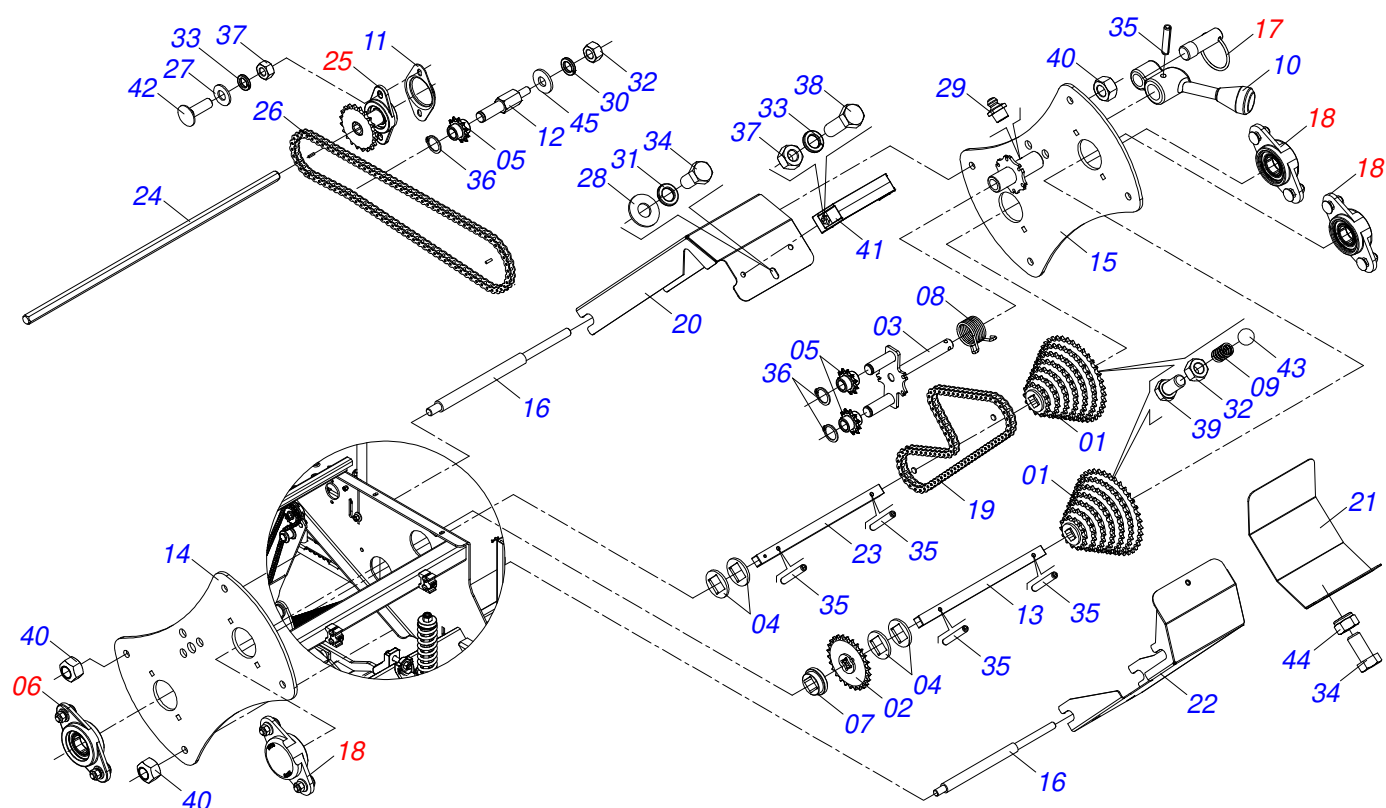


Item	Code	Description	See page	QT
01	0511060396	DRIVE/DRIVEN SHAFT		02
02	0511067501	26Z GEAR		01
03	0511060392	CHAIN TENSIONER		01
04	0521018630	1.4" X SQUARE 0.8" WASHER		04
05	0503031805	11Z 1/2" GEAR		03
06	0501056443	GEAR HOUSING BEARING	40	01
07	0503030303	SUPPORT WASHER		01
08	0503031366	RIGHT TWISTED SPRING		01
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
10	0502011758	REAR TIGHTENER LEVER		01
11	0561014215	BEARING COVER LOWER ROW FRAME		01
12	0561016554	CURRENT STRETCH AXIS WHEELED SUPPORT		01
13	0561017353	MOTOR SHAFT		01
14	0561019671	BODY		01
15	0521062568	SIDE		01
16	0571010425	JACK		04
17	0501048790	AXLE WITH RING	41	01
18	0511059266	CLOSED BEARING	38	03
19	0503012204	40-1 CHAIN X 82 LINK + RED		01
20	0581012582	LEFT UPPER COVER		01
21	0581012580	REAR COVER		01
22	0521067248	LEFT PROTECTION COVER		01
23	0581014147	MOTOR SHAFT		01
24	0581017912	AXIS HEX 5/8 X 3195		01
25	0511057698	20Z BEARING GEAR	44	01
26	0503014852	40-1 CHAIN X 90 LINK + REDUCTION		01
27	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		02
28	0501013518	FLAT WASHER 10.50 X 24 X 1.50 ZN		01
29	0503010002	GREASE FITTING 1800		01
30	0503010019	SPRING WASHER 1/2"		01
31	0503010025	SPRING WASHER 3/8"		01
32	0503010060	HEX NUT 1/2 UNC G.5 ZN		03


Item	Code	Description	See page	QT
33	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
34	0503010256	3/8" X 3/4" BOLT		03
35	0503010292	701164 6 X 40 SPRING PIN		05
36	0503010302	501019 SEAL RING		03
37	0503010337	NUT 5/16 UNC G.5 ZN		04
38	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		02
39	0503010834	1/2 X 1 BOLT		02
40	0503011336	1/2" HEX SELF ADJUSTING NUT		08
41	0503011907	NYLON HANDLE		01
42	0503011953	5/16" X 1" BOLT		02
43	0503012389	1/2 BALL		02
44	0503013357	SELF-ADJUSTING NUT 3/8"		02
45	0511017302	FLAT WASHER 13.50 X 32.50 X 3.0 ZN		01

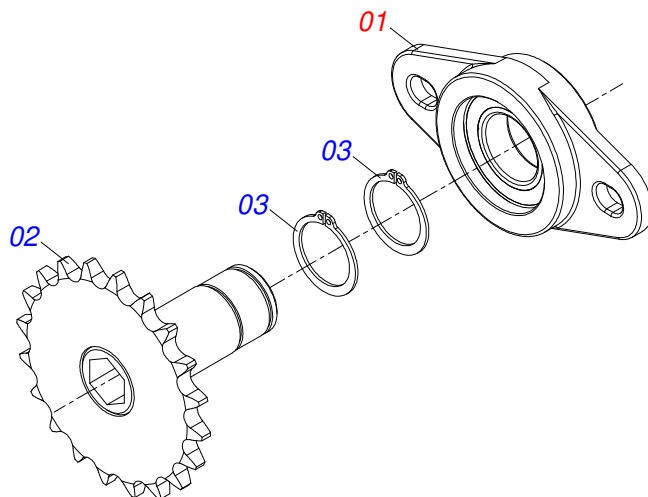


Item	Code	Description	See page	QT
01	0501059059	LARGE BEARING ROW SEED ASSY	45	01
02	0521066333	GEAR 20Z WITH AXIS F HEX 16,5X69		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02

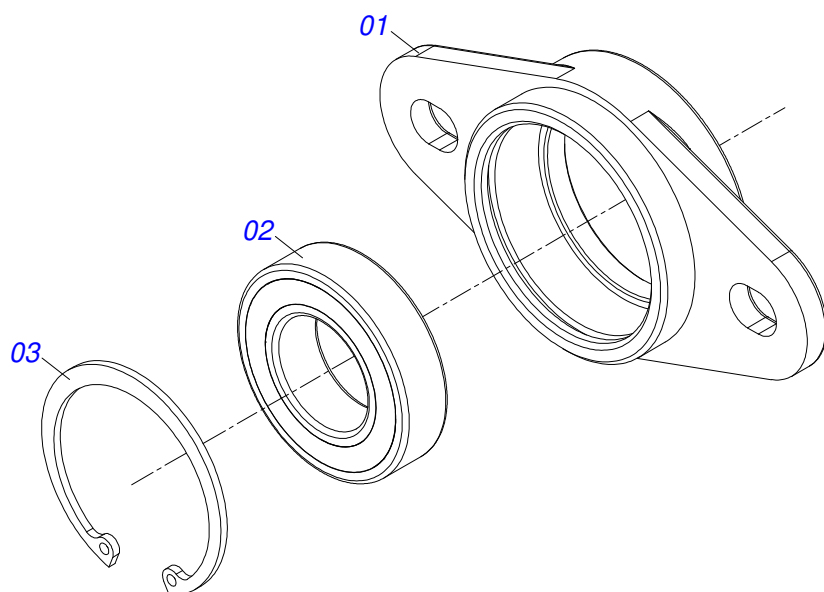


Item	Code	Description	See page	QT
01	0502011697	GEARBOX SUPPORT		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01

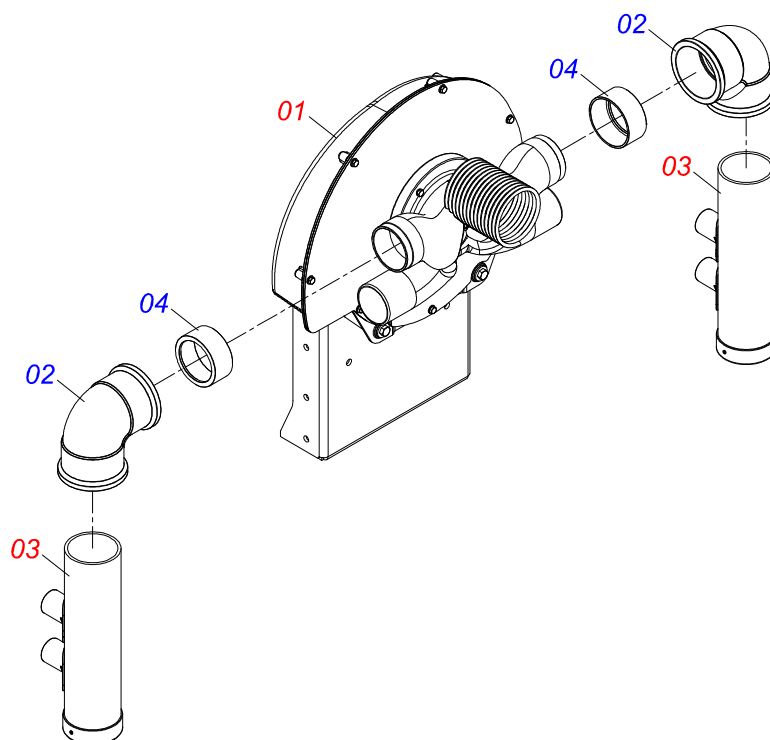


Item	Code	Description	See page	QT
01	0531055987	HYDRAULIC TURBINE	48	01
02	0503017845	90 PVC KNEE		02
03	0531055989	425 AIR DISTRIBUTOR	50	02
04	0501215296	AIR DISTRIBUTOR NOZZLE		02

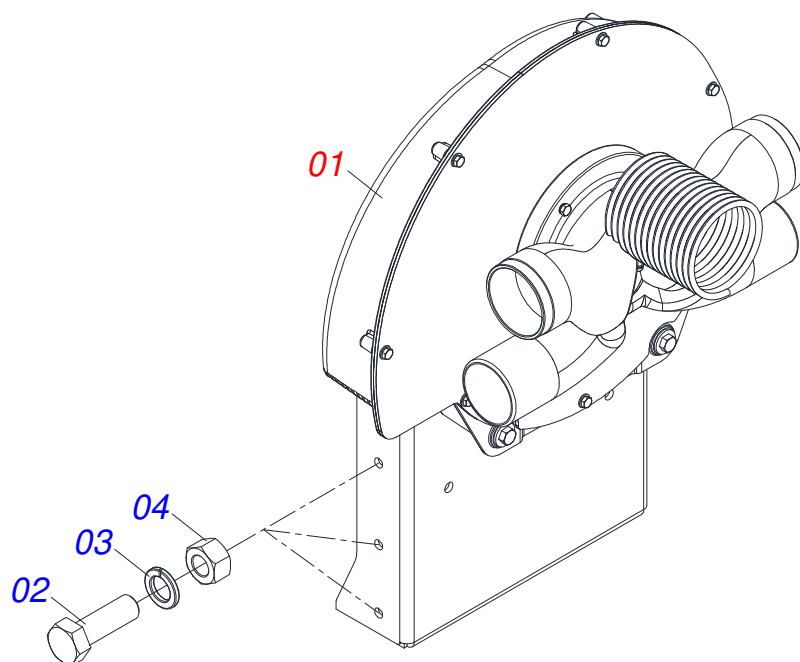


Item	Code	Description	See page	QT
01	0531055987	HYDRAULIC TURBINE	48	01
02	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		06
03	0503010019	SPRING WASHER 1/2"		06
04	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		06

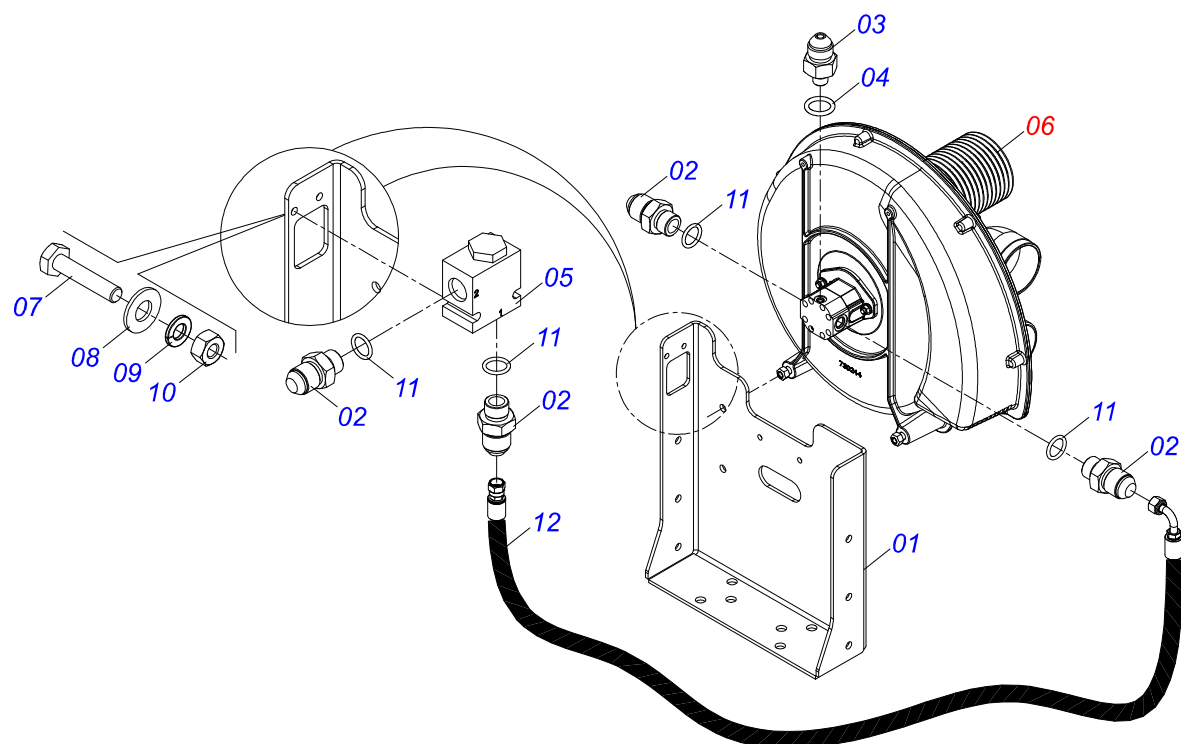


Item	Code	Description	See page	QT
01	0581018314	TURBINE SUPPORT BODY		01
02	0501011460	7/8 NF REDUCTION NIPPLE		04
03	0503034385	NIPPLE 7/16 UNF X UNF JIC		01
04	0503010392	2-046 N 3006 9B O'RING		01
05	0503015420	CV10208TN5 ANTI-CAVITATION VALVE		01
06	0531055985	HYDRAULIC TURBINE WITH HOLE	49	01
07	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
08	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		02
09	0503010143	SPRING WASHER 1/4"		02
10	0503010144	1/4" NUT		02
11	0503010190	2-114 N 3006-9B O'RING		04
12	0501082253	1/2 X 620 TR-TC HOSE		01

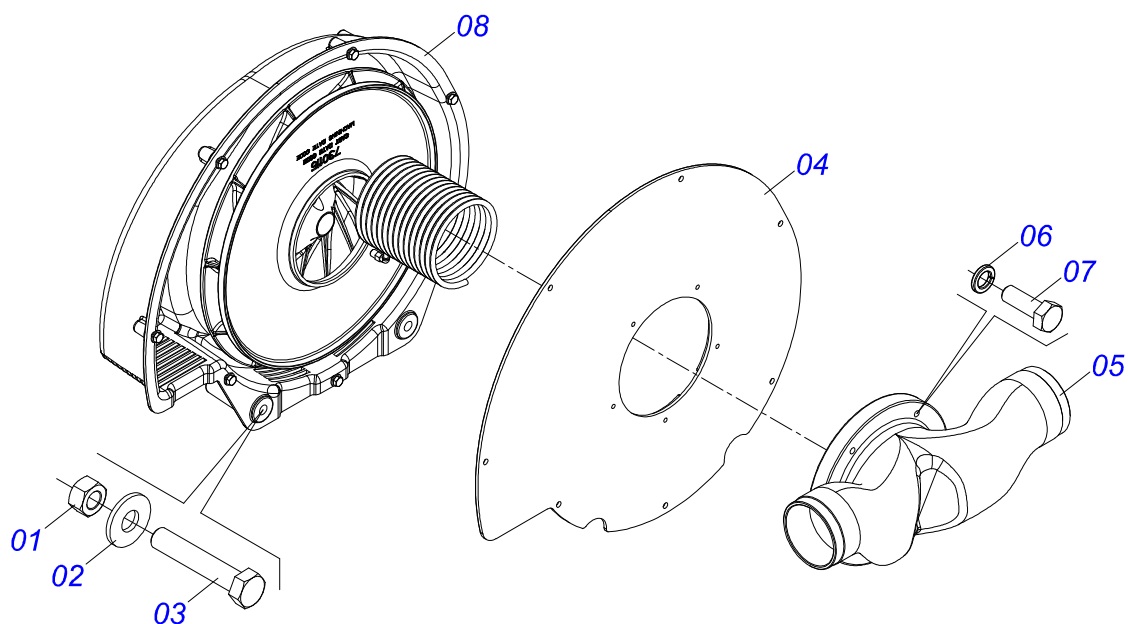


Item	Code	Description	See page	QT
01	0503011336	1/2" HEX SELF ADJUSTING NUT		02
02	0511017302	FLAT WASHER 13.50 X 32.50 X 3.0 ZN		02
03	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
04	0531064418	TURNINE LID WITH SLEEVE		01
05	0501215298	440 SUCTION DUCT		01
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		05
07	0503010421	5/16" X 1-1/2" BOLT		05
08	0503062627	HYDRAULIC TURBINE ASSY		01

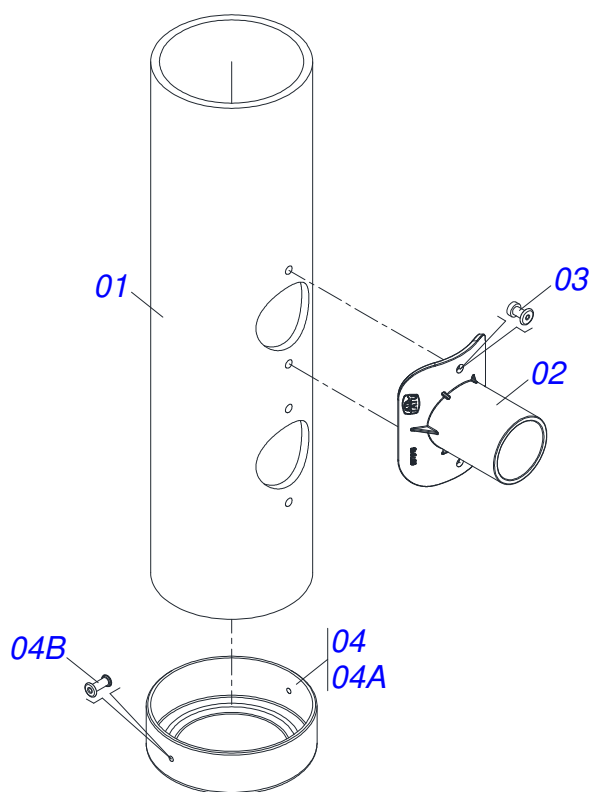


Item	Code	Description	See page	QT
01	0501215297	425 AIR DISTRIBUTOR BODY		01
02	0503031943	SOCKET		02
03	0503012856	POP RIVET		04
04	0521056049	AIR DISTRIBUTOR CAP WITH RIVET		01
04A	0503034763	AIR DITRIBUTOR PUMP		01
04B	0503015341	POP RIVET		02

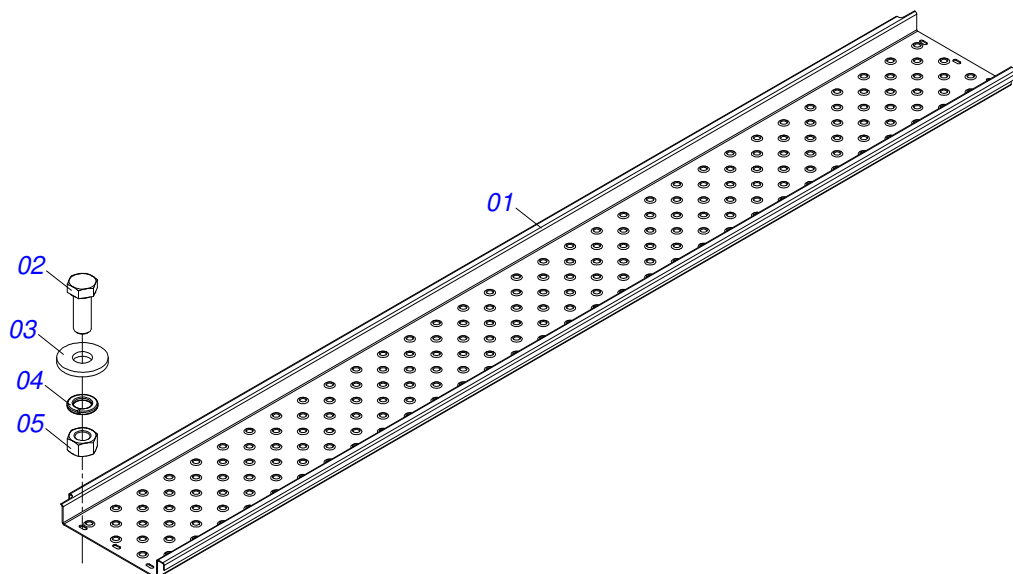


Item	Code	Description	See page	QT
01	0581017911	PLATFORM		01
02	0503010237	BOLT 3/8" X 1"		06
03	0501010984	FLAT WASHER 10.50 X 27 X 3.00		06
04	0503010025	SPRING WASHER 3/8"		06
05	0503010026	NUT 3/8"		06

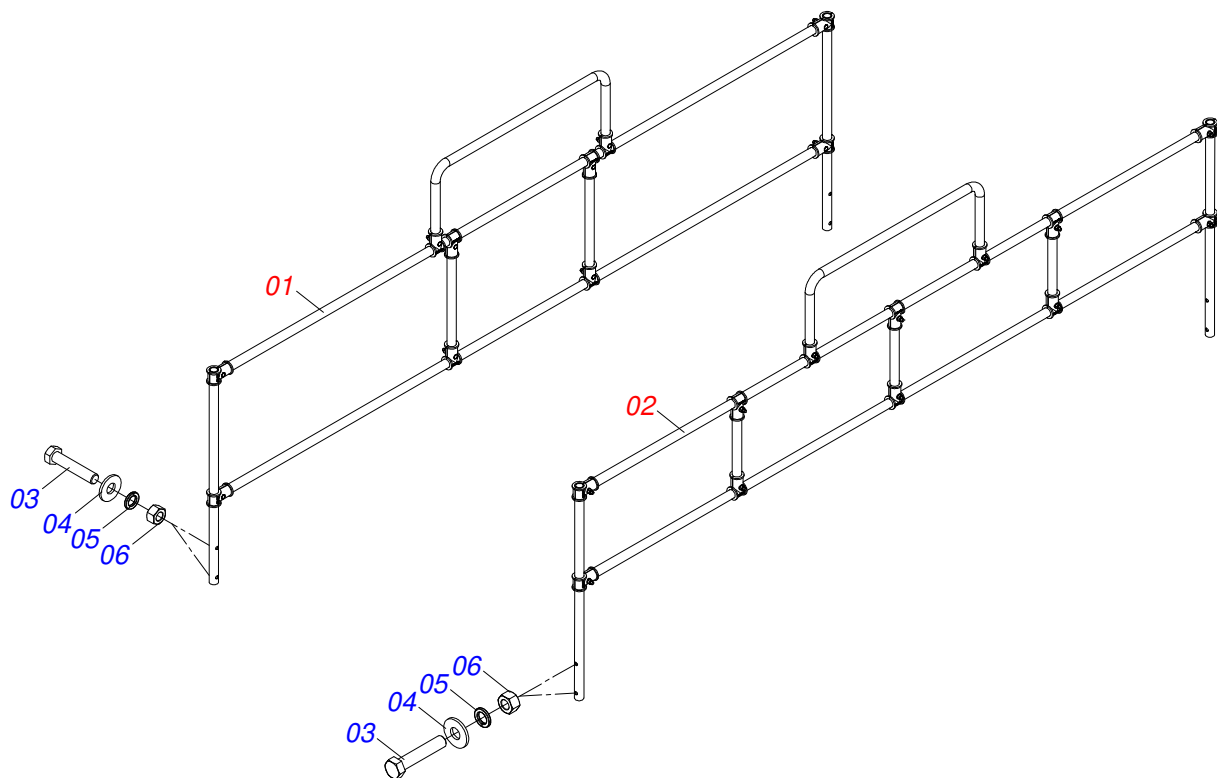


Item	Code	Description	See page	QT
01	0521053558	HANDRAIL EXTERNAL	53	01
02	0521053543	HANDRAIL INTERNAL	54	01
03	0503016453	1/2" X 2.1/2 BOLT		08
04	0511017302	FLAT WASHER 13.50 X 32.50 X 3.0 ZN		08
05	0503010019	SPRING WASHER 1/2"		08
06	0503010060	HEX NUT 1/2 UNC G.5 ZN		08

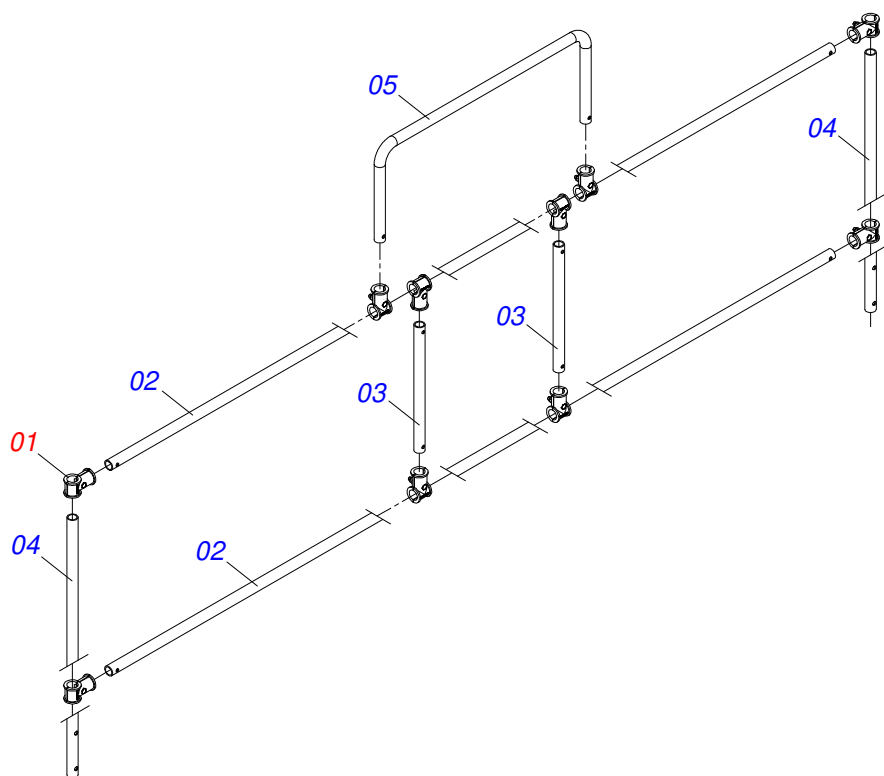


Item	Code	Description	See page	QT
01	0511059383	INTERNAL HANDRAILING FIXER	55	10
02	0581017934	TUBE 33,7 X 27 X 3055		02
03	0581017936	TUBE 33,7 X 27 X 460		02
04	0581017915	TUBE 33,7 X 27 X 942		02
05	0581017996	TUBE COMPLEMENT RAILING		01

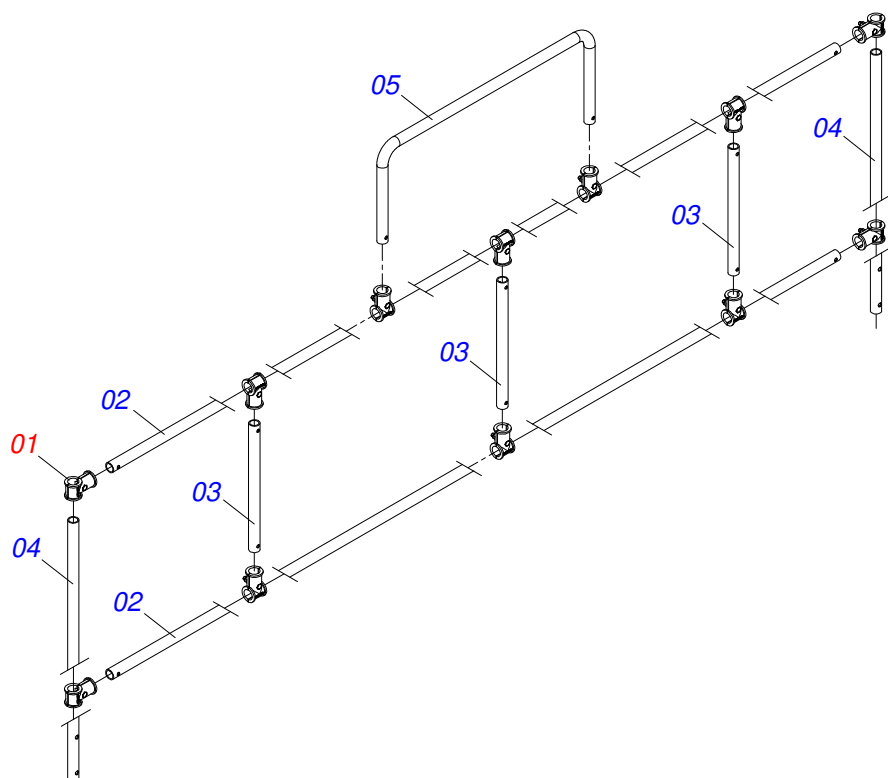


Item	Code	Description	See page	QT
01	0511059383	INTERNAL HANDRAILING FIXER	55	12
02	0581017997	TUBE 33,7 X 27 X 3145		02
03	0581017916	TUBE 33,7 X 27 X 315		03
04	0581017915	TUBE 33,7 X 27 X 942		02
05	0581017996	TUBE COMPLEMENT RAILING		01

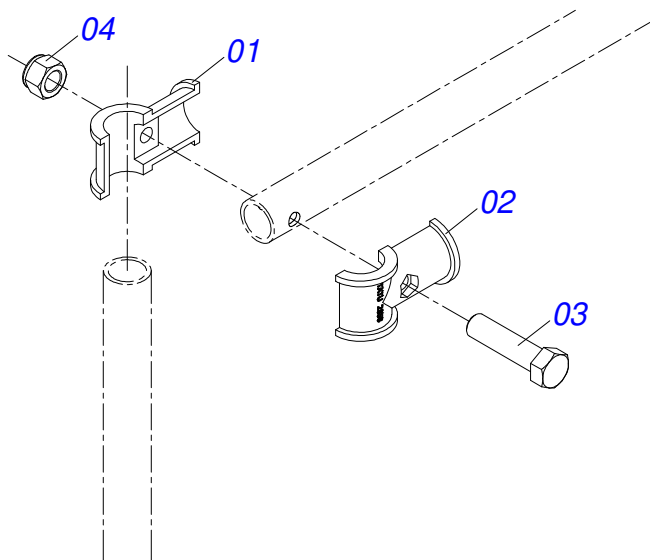


Item	Code	Description	See page	QT
01	0502012857	EXTERNAL FIXER HANDRAIL		01
02	0502012858	INTERNAL FIXER HANDRAIL		01
03	0503019083	7/16 UNC X 2.1/4 C S R P G.5 ZN BOLT		01
04	0503015490	SELF-LOCKING NUT 7/16		01

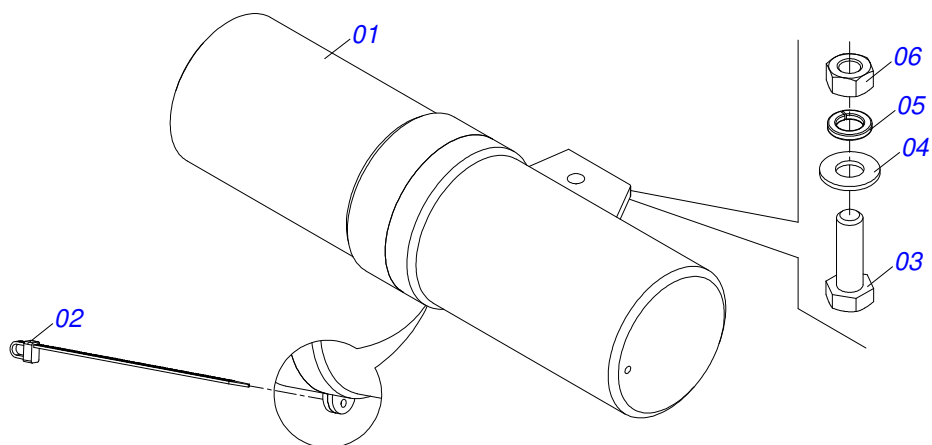


Item	Code	Description	See page	QT
01	0503060100	SUPPORT INSTRUCTION MANUAL		01
02	0503010267	NYLON CLAMP 3.60 X 1.3 X 155 MM		01
03	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
04	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
06	0503010337	NUT 5/16 UNC G.5 ZN		01

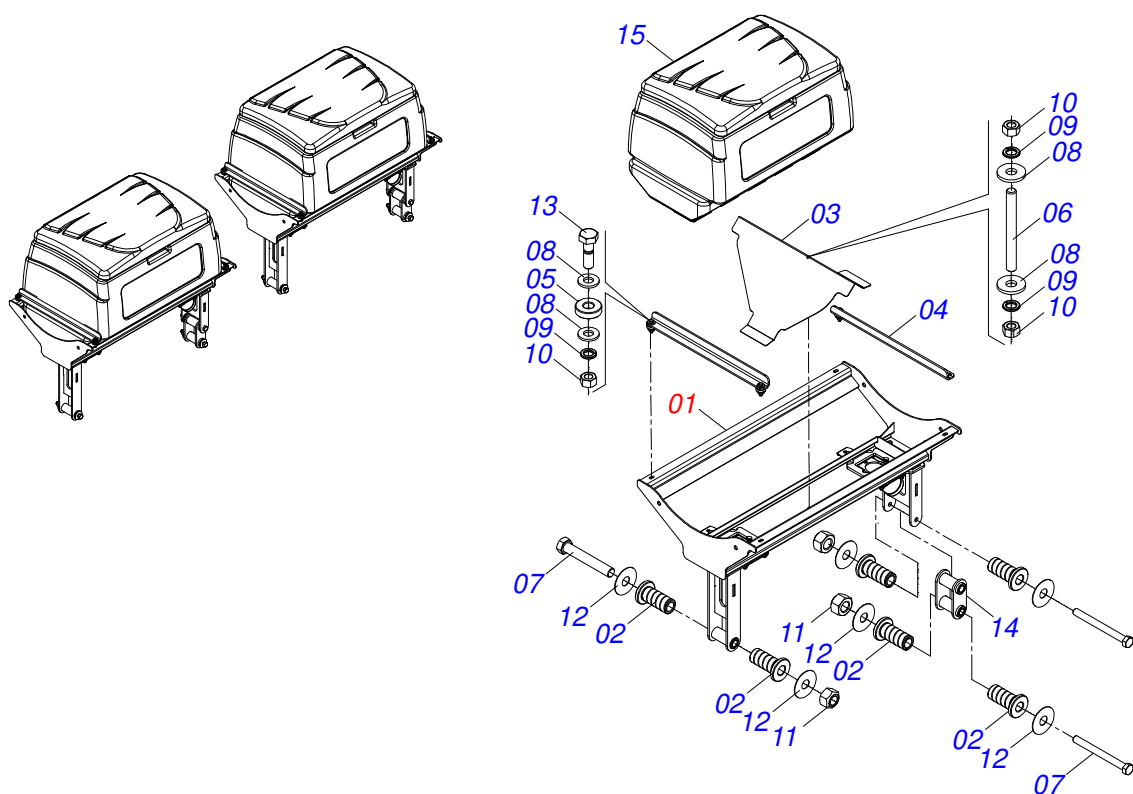


Item	Code	Description	See page	QT
01	0521053559	SEED HOPPER ASSEMBLY	58	02
02	0581017914	PANTOGRAPHO SLEEVE		12
03	0581017913	SEED HOPPER DEFLECTOR		02
04	0581018853	SEED HOPPER FIXING		04
05	0581018852	13,5 X 35 X 10 SLEEVE		08
06	0581018864	DEFLECTOR SEED		02
07	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		06
08	0501010984	FLAT WASHER 10.50 X 27 X 3.00		20
09	0503010025	SPRING WASHER 3/8"		12
10	0503010026	NUT 3/8"		12
11	0503012412	5/8" UNC SELF LOCKING NUT		06
12	0531015184	FLAT WASHER		12
13	0503011404	BOLT		08
14	0501110915	ROW MOVABLE ARTICULATION		02
15	0503060693	FERTILIZER HOPPER ASSY		02

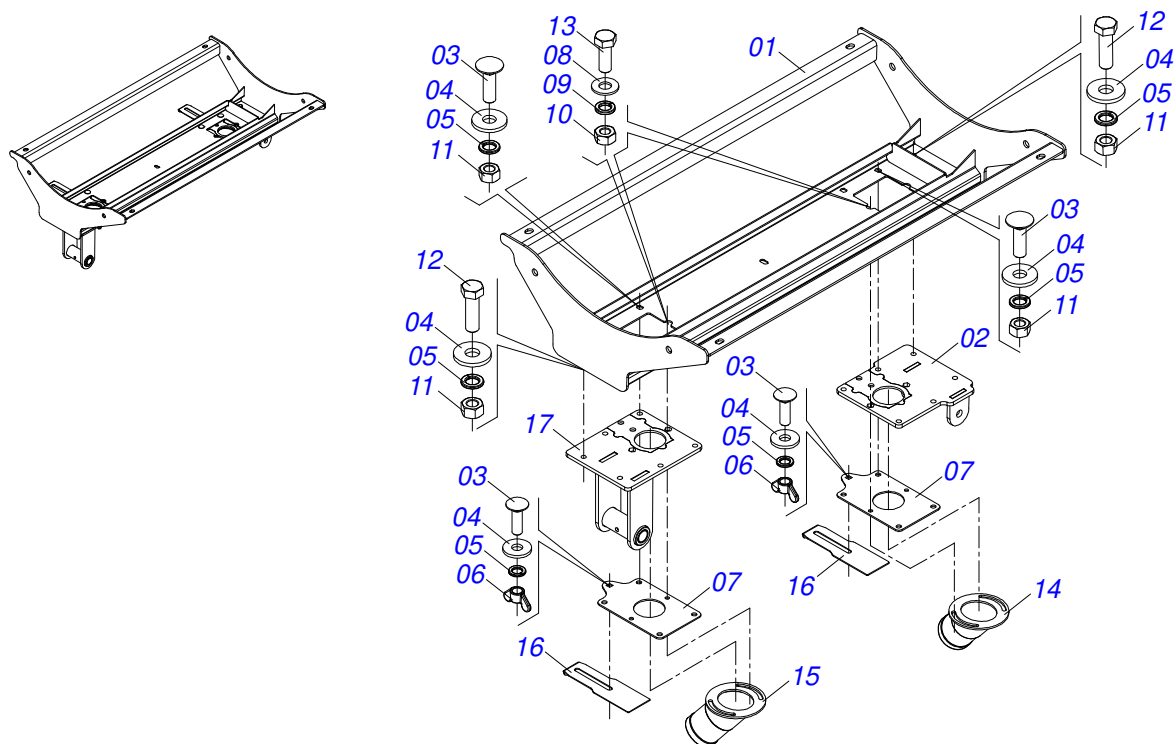


Item	Code	Description	See page	QT
01	0521069020	SEED HOPPER SUPPORT		01
02	0531064462	LEFT SEED ROW JOINT ASSEMBLY		01
03	0501010942	3/8" X 1-1/4" BOLT		10
04	0501010984	FLAT WASHER 10.50 X 27 X 3.00		14
05	0503010025	SPRING WASHER 3/8"		14
06	0503010209	3/8" UNC BUTTERFLY NUT		02
07	0581017941	UPPER BASE LEFT JOINT SYSTEM		02
08	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		04
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
10	0503010337	NUT 5/16 UNC G.5 ZN		04
11	0503010026	NUT 3/8"		12
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
13	0503010371	5/16" X 1" BOLT		04
14	0521069043	TOP CONDUCTOR LEFT SEED		01
15	0521069044	TOP RIGHT SEED CONDUCTOR		01
16	0501210513	ARTICULATION NOZZLE SUPPORT LID		02
17	0501111153	SEED ROW FIXED JOINT		01

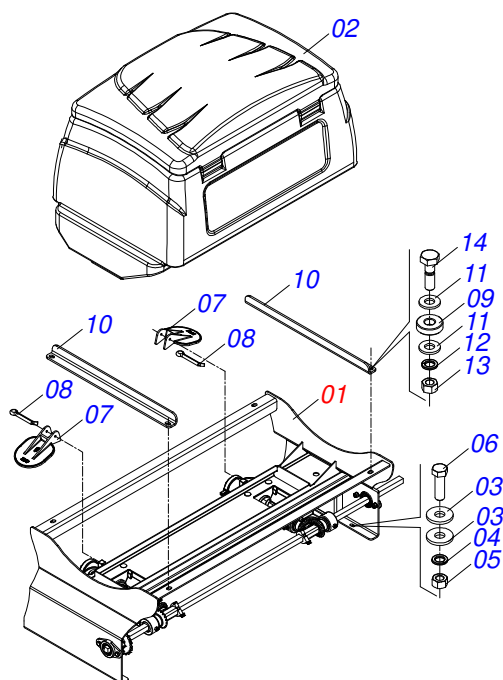


Item	Code	Description	See page	QT
01	0511051712	RH BEAM SUPPORT	61	01
02	0503060693	FERTILIZER HOPPER ASSY		01
03	0501010984	FLAT WASHER 10.50 X 27 X 3.00		08
04	0503010025	SPRING WASHER 3/8"		04
05	0503010026	NUT 3/8"		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0503034396	FERTILIZER SIDE COVER		02
08	0503010362	SPLIT PIN 1/8" X 1.1/4"		02
09	0581018852	13,5 X 35 X 10 SLEEVE		04
10	0581018853	SEED HOPPER FIXING		02
11	0501010937	FLAT WASHER 13.50 X 28 X 3.00		08
12	0503010019	SPRING WASHER 1/2"		04
13	0503010060	HEX NUT 1/2 UNC G.5 ZN		04
14	0501019219	1/2" X 1-3/4" BOLT		04

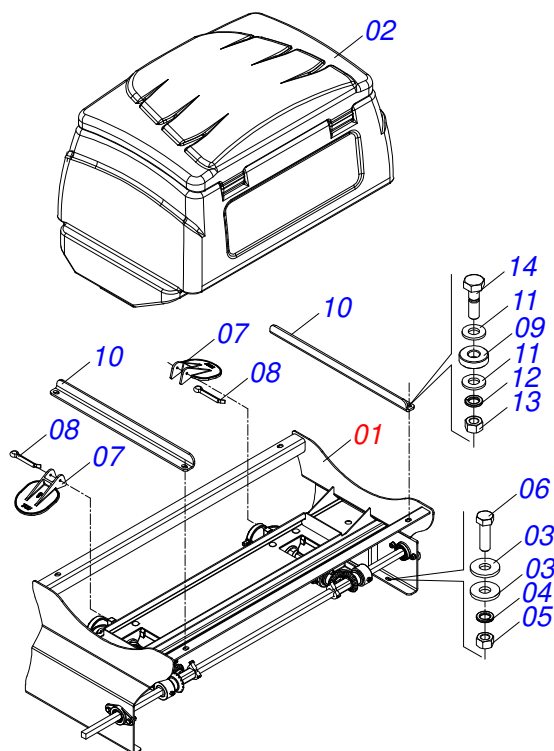


Item	Code	Description	See page	QT
01	0511051717	LH BEAM SUPPORT	62	01
02	0503060693	FERTILIZER HOPPER ASSY		01
03	0501010984	FLAT WASHER 10.50 X 27 X 3.00		08
04	0503010025	SPRING WASHER 3/8"		04
05	0503010026	NUT 3/8"		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0503034396	FERTILIZER SIDE COVER		02
08	0503010362	SPLIT PIN 1/8" X 1.1/4"		02
09	0581018852	13,5 X 35 X 10 SLEEVE		04
10	0581018853	SEED HOPPER FIXING		02
11	0501010937	FLAT WASHER 13.50 X 28 X 3.00		08
12	0503010019	SPRING WASHER 1/2"		04
13	0503010060	HEX NUT 1/2 UNC G.5 ZN		04
14	0501019219	1/2" X 1-3/4" BOLT		04

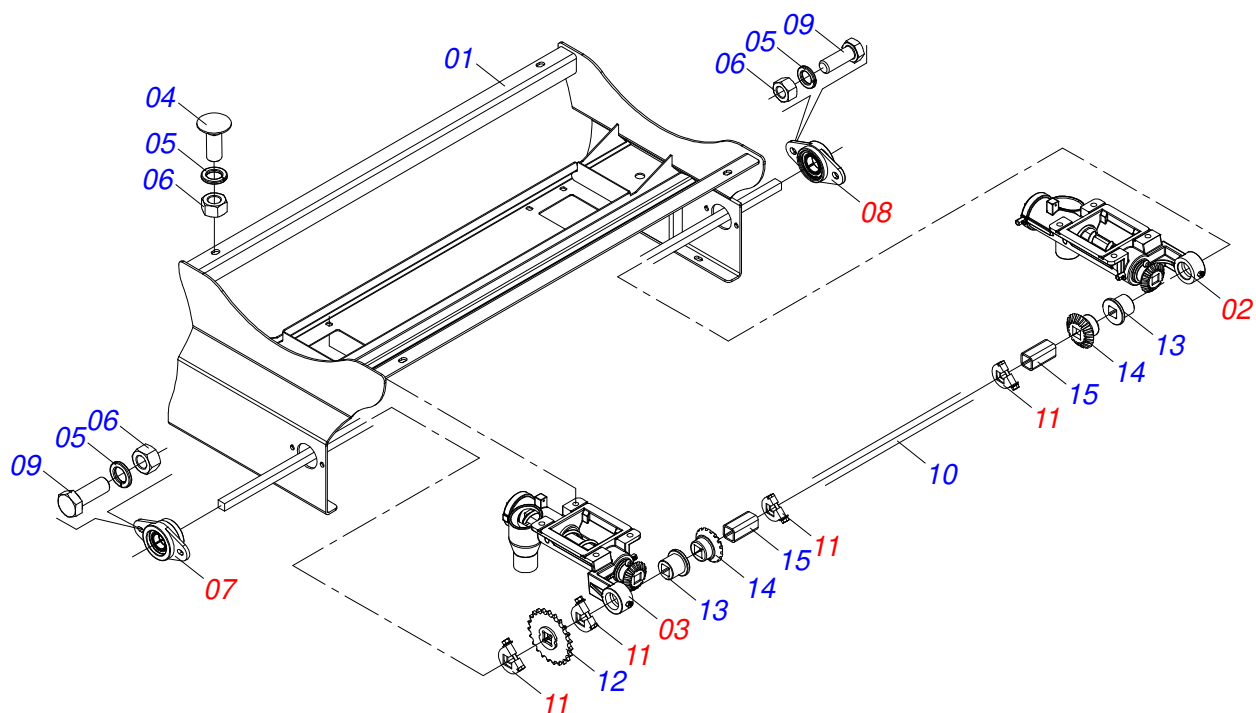


Item	Code	Description	See page	QT
01	0521062960	FERTILIZER HOPPER SUPPORT (PLASTIC HOPPER)		01
02	0511051714	SIDE FERTILIZER DISTRIBUTOR	63	01
03	0511051715	SIDE FERTILIZER DISTRIBUTOR	64	01
04	0501811643	SCREW 3/8 UNC X 1 CAPQ G.2		08
05	0503011443	SPRING WASHER 3/8"		12
06	0503810026	3/8" NUT		12
07	0501056451	BEARING	65	01
08	0501056444	ROLLER BEARING	10	01
09	0503810237	3/8 UNC X 1 C S G.5 SA BOLT		04
10	0501215313	3/4 X 1605 SQUARE AXLE		01
11	0501053788	3/4" SQUARE AXLE FASTENER	66	04
12	0511066098	23Z GEAR		01
13	0503030275	AGRICULTURAL BEARING		02
14	1902010685	18Z CONICAL GEAR		02
15	0551018055	22,65 X 60 SLEEVE		02

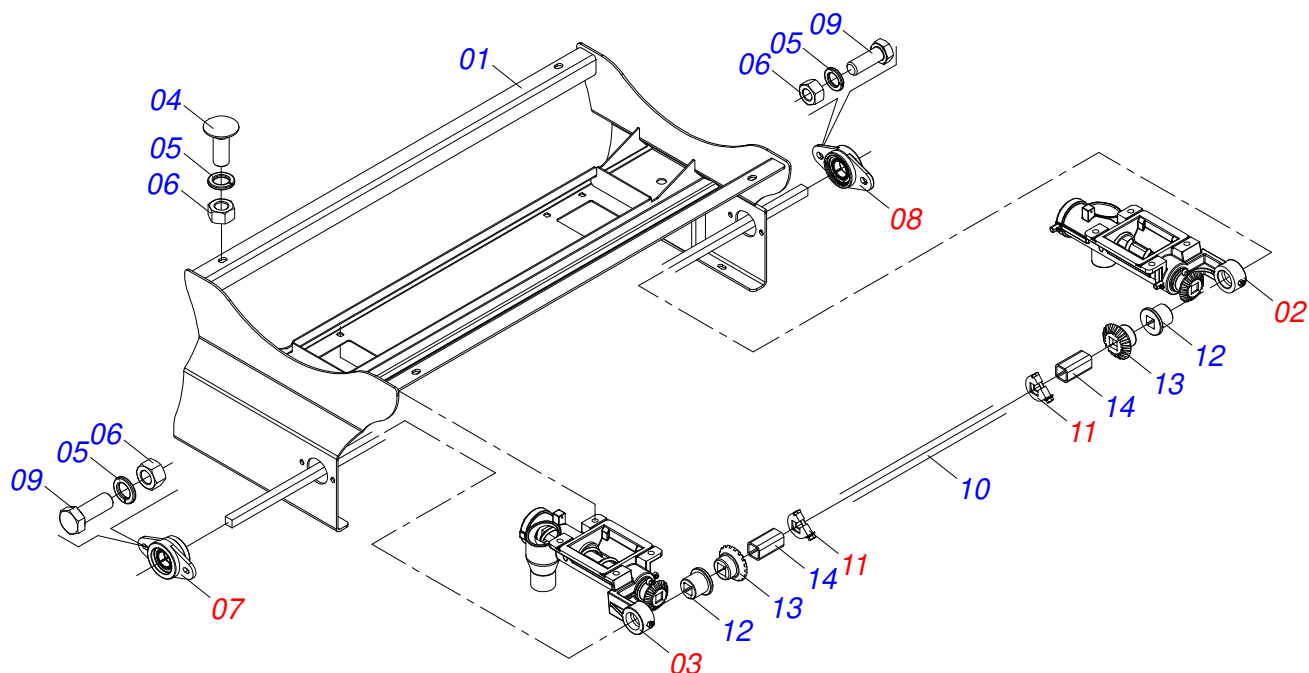


Item	Code	Description	See page	QT
01	0521062960	FERTILIZER HOPPER SUPPORT (PLASTIC HOPPER)		01
02	0511051714	SIDE FERTILIZER DISTRIBUTOR	63	01
03	0511051715	SIDE FERTILIZER DISTRIBUTOR	64	01
04	0501811643	SCREW 3/8 UNC X 1 CAPQ G.2		08
05	0503011443	SPRING WASHER 3/8"		12
06	0503810026	3/8" NUT		12
07	0501056444	ROLLER BEARING	10	01
08	0501056451	BEARING	65	01
09	0503810237	3/8 UNC X 1 C S G.5 SA BOLT		04
10	0501215313	3/4 X 1605 SQUARE AXLE		01
11	0501053788	3/4" SQUARE AXLE FASTENER	66	02
12	0503030275	AGRICULTURAL BEARING		02
13	1902010685	18Z CONICAL GEAR		02
14	0551018055	22,65 X 60 SLEEVE		02

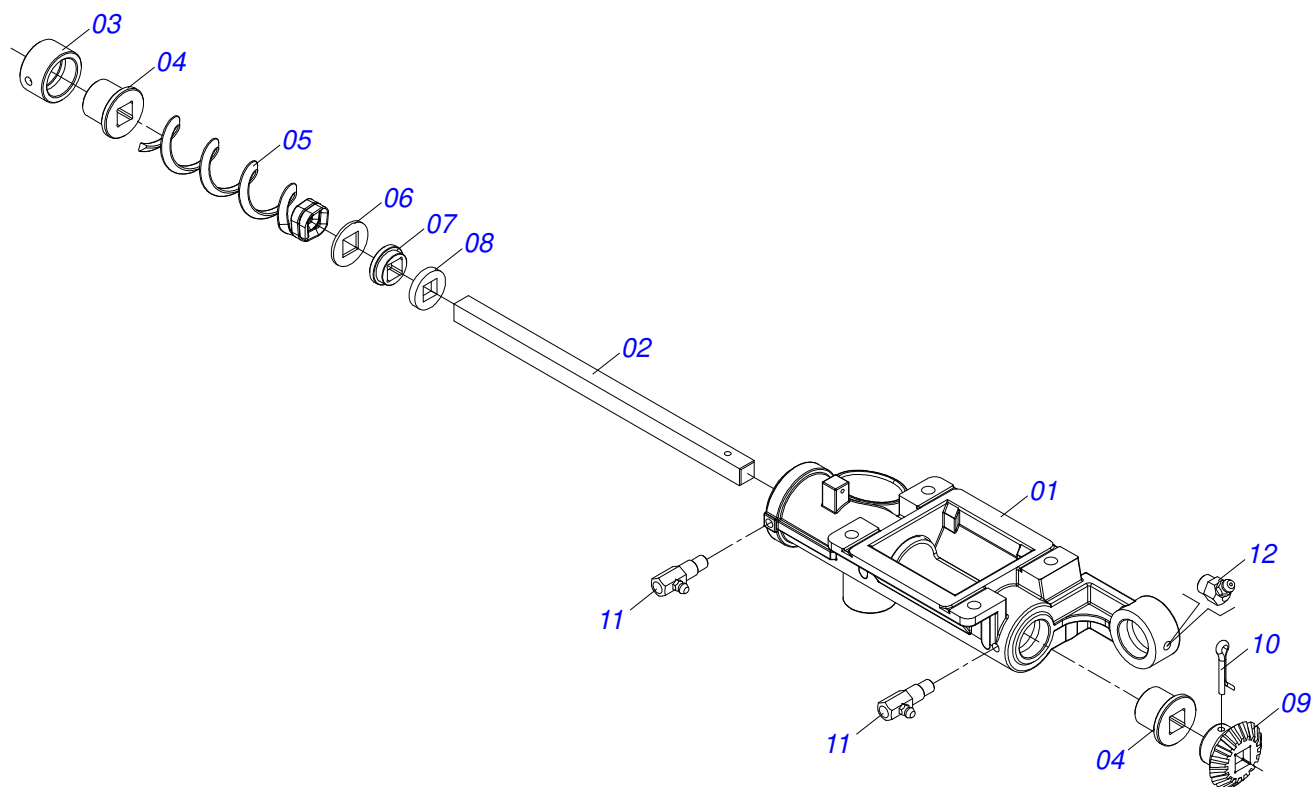


Item	Code	Description	See page	QT
01	0501110690	DISTRIBUTOR FERTILIZER		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4 X 2 SPLIT PIN		01
11	0503011962	GREASE FITTING		02
12	0503010003	GREASE FITTING 3/8"		01

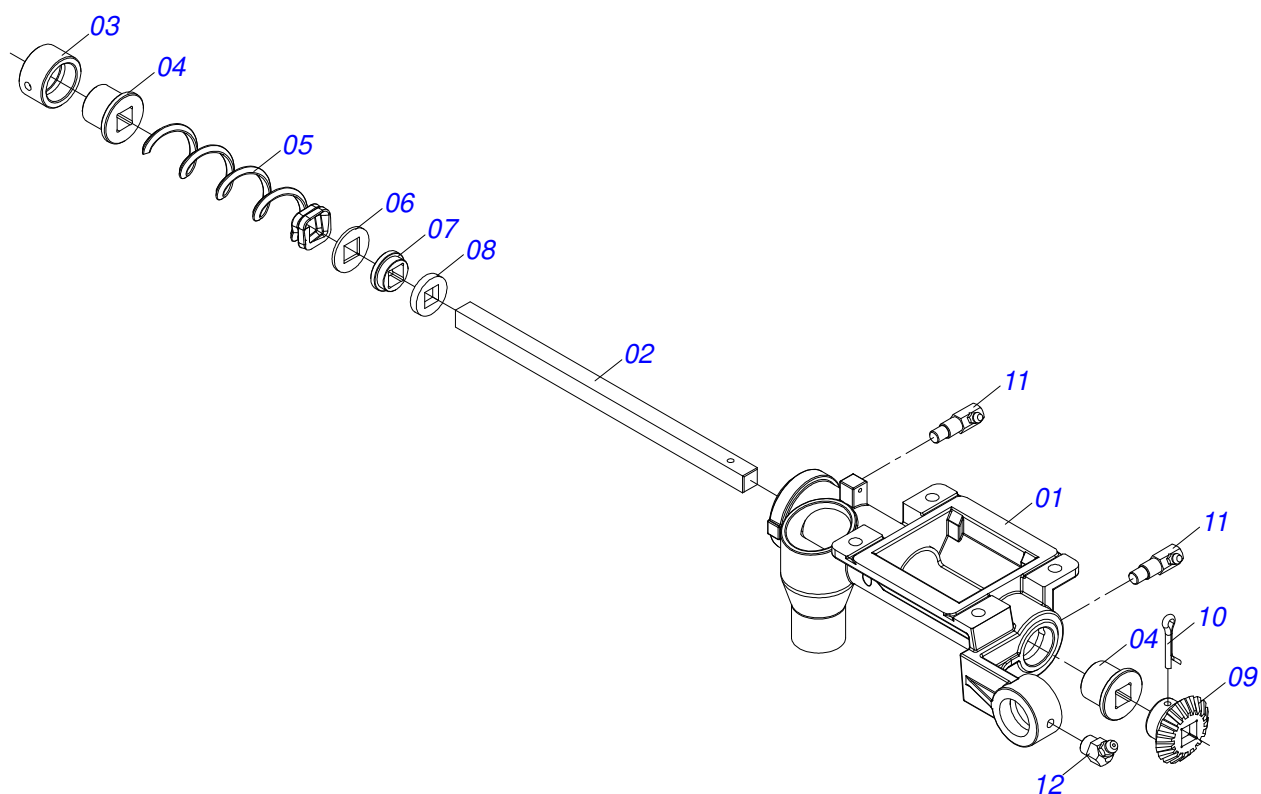


Item	Code	Description	See page	QT
01	0501110691	DISTRIBUTOR FERTILIZER WITH SIDE OUTPUT		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4 X 2 SPLIT PIN		01
11	0503011962	GREASE FITTING		02
12	0503010003	GREASE FITTING 3/8"		01

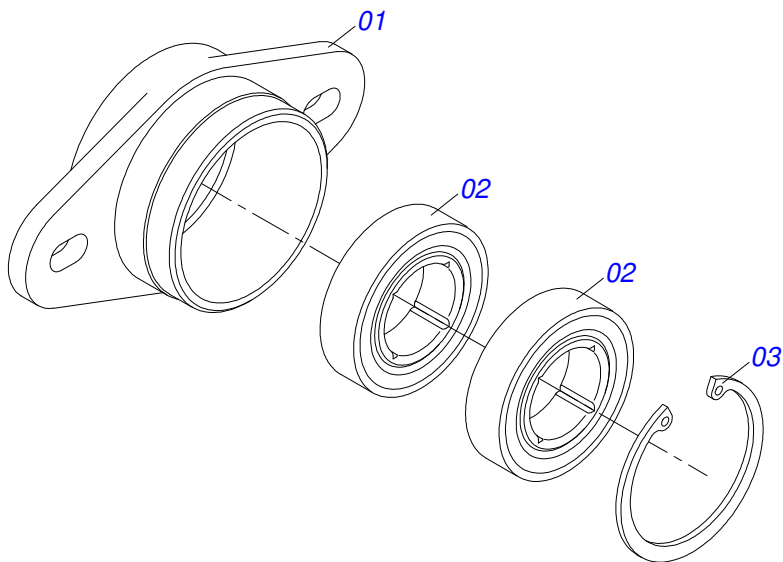


Item	Code	Description	See page	QT
01	0502011971	HOUSING WITH DOUBLE BEARING		01
02	0503013462	6005 2RS1 ROLLER BEARING		02
03	0503011105	SEAL RING		01

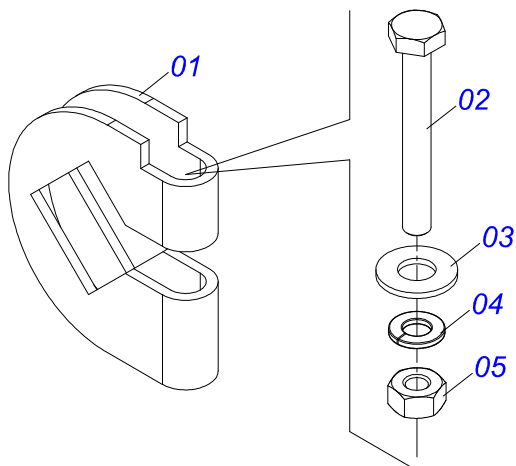


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	SPRING WASHER 1/4"		01
05	0503010144	1/4" NUT		01

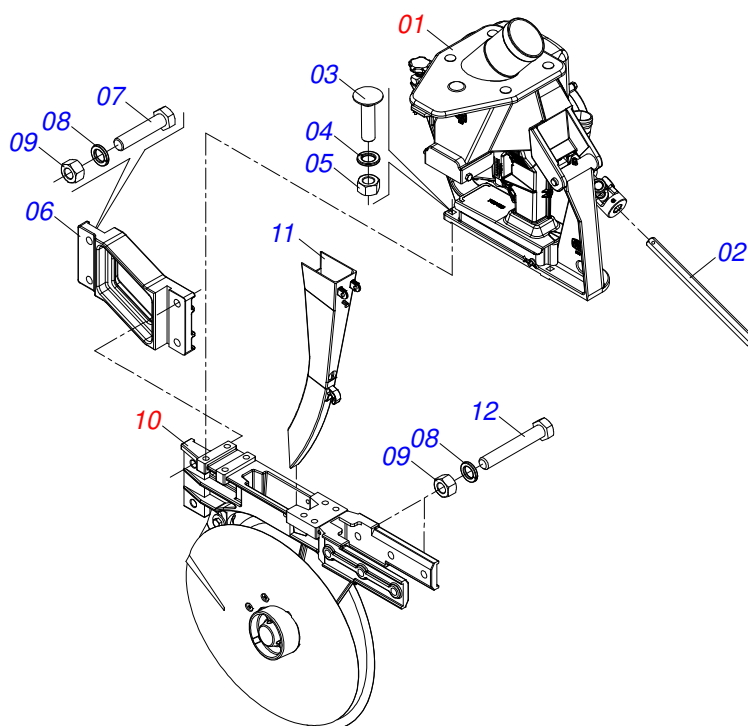

Item	Code	Description	See page	QT
01	0521053564	ASSEMBLY PRECISION PLANTING	69	01
02	0581018871	HEX AXLE 5/8" X 255		01
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503010025	SPRING WASHER 3/8"		04
05	0503010026	NUT 3/8"		04
06	0502012663	EXTENSION		01
07	0503010905	1/2" X 2-1/4" BOLT		04
08	0503010019	SPRING WASHER 1/2"		06
09	0503010060	HEX NUT 1/2 UNC G.5 ZN		06
10	0511059081	LH 15"X15" SEED UNAL DOUB-DISC ASSY	73	01
11	0503062403	TUBE SEED P.P		01
12	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02

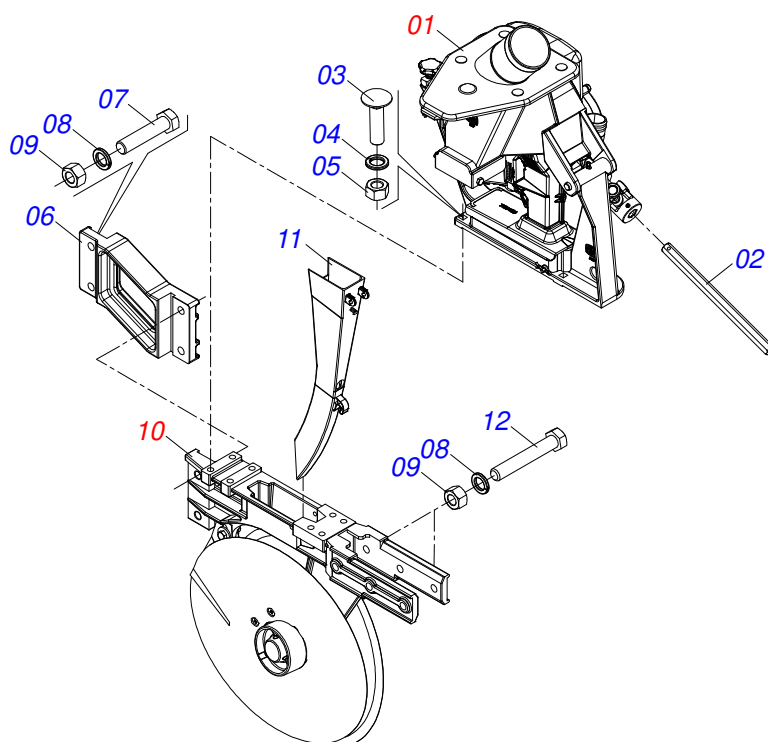

Item	Code	Description	See page	QT
01	0521053561	PRECISION PLANTING ASSEMBLY V-SET2 LEFT	70	01
02	0581018871	HEX AXLE 5/8" X 255		01
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503010025	SPRING WASHER 3/8"		04
05	0503010026	NUT 3/8"		04
06	0502012663	EXTENSION		01
07	0503010905	1/2" X 2-1/4" BOLT		04
08	0503010019	SPRING WASHER 1/2"		06
09	0503010060	HEX NUT 1/2 UNC G.5 ZN		06
10	0511059081	LH 15"X15" SEED UNAL DOUB-DISC ASSY	73	01
11	0503062403	TUBE SEED P.P		01
12	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02

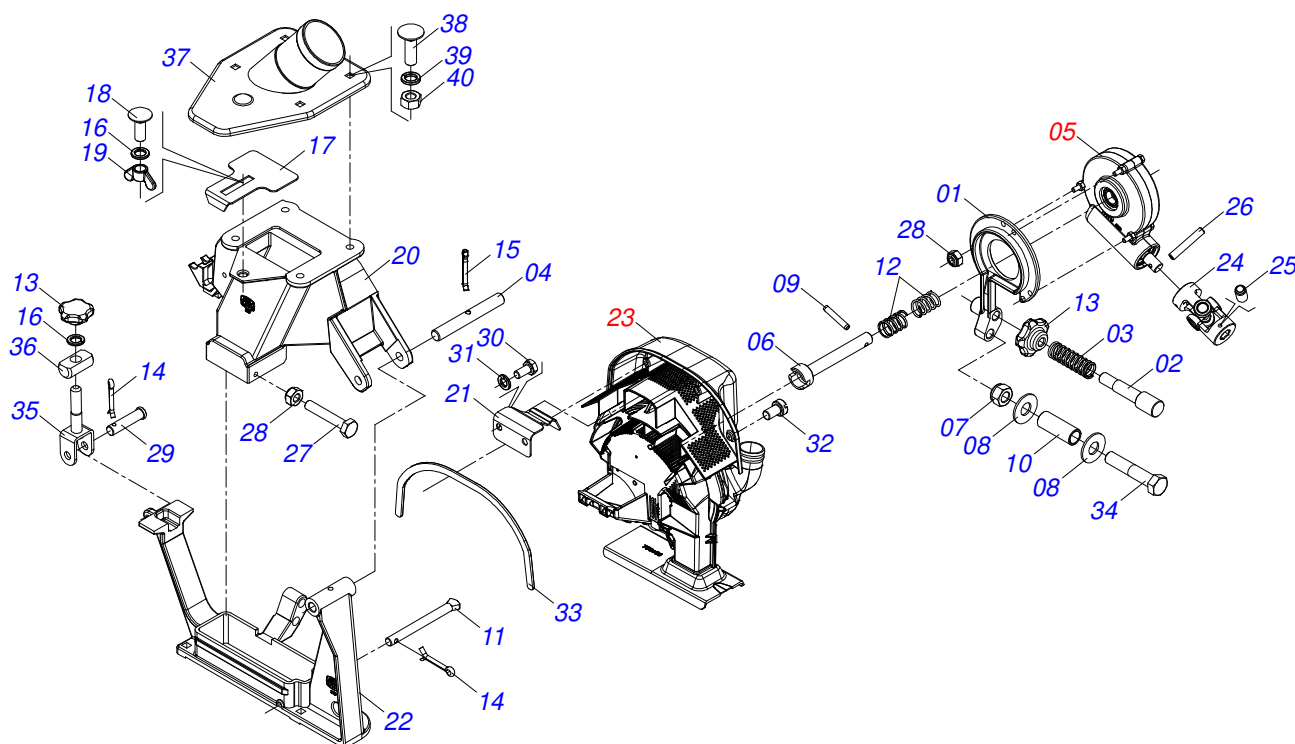


Item	Code	Description	See page	QT
01	0502012776	SUPPORT ARTICULATION PNEUMATIC PP		01
02	0571017899	PIN LOCK		01
03	0503030190	0.5" X 1.6" X 0.05" SPRING		01
04	0571017897	AXLE ARTICULATION PRECISION PLANTING		01
05	0511057155	PRECISION PLANTING LEFT TRANSMISSION 71 HOPPER		01
06	0571017894	PIN DRAG PRECISION PLANTING		01
07	0503013357	SELF-ADJUSTING NUT 3/8"		01
08	0501013518	FLAT WASHER 10.50 X 24 X 1.50 ZN		02
09	0503015356	SPRING PIN		01
10	0571017896	SLEEVE ARTICULATION PRECISION PLANTING		01
11	0571017895	PIN FIXER CONDUCTOR P.P		01
12	0503032035	COMPRESSION SPRING 0.7" X 1.2" X 1"		02
13	0503010293	CLAMP KNOB		02
14	0503010140	1/8" X 3/4" SPLIT PIN		02
15	0503010131	3/16" X 1.1/2" SPLIT PIN		01
16	0503010025	SPRING WASHER 3/8"		02
17	0571019491	SLUICE PNEUMATIC		01
18	0501011643	BOLT 3/8 X 1"		01
19	0503010209	3/8" UNC BUTTERFLY NUT		01
20	0502012807	SUPPORT HOPPER PRECISION PLANTING		01
21	0571019489	CLAMP PRECISION PLANTING		01
22	0502012799	UPPER SUPPORT BASE PNEUMATIC PRECISION PLANTING		01
23	0521053548	DISTRIBUTOR SEED COMPLETE WITH DISC 72 PEANUT		01
24	0561014778	HEX UNIVERSAL JOINT		01
25	0503013958	BOLT 1/4" X 1"		02
26	0503011855	0.2" X 1.8" SPRING PIN		01
27	0503012721	1/4" X 4" BOLT		01
28	0503012880	1/4" UNC SELF ADJUSTING NUT		04
29	0571014024	FAST BOLT GUIDE AXLE		01

Item	Code	Description	See page	QT
30	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		02
31	0503015110	M06 SPRING WASHER		02
32	0503818139	BOLT		03
33	0503037390	PACKING FOR PLANTING		01
34	0503015752	3/8" X 2" BOLT		01
35	0581011225	FIXER P PLANTING CONTR CPRA		01
36	0581011226	FIXER CLOSING P. PLANTING CONTROL CPRA		01
37	0521069013	OFFSET RIGHT FEEDER 3		01
38	0503011953	5/16" X 1" BOLT		04
39	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
40	0503010337	NUT 5/16 UNC G.5 ZN		01

PRECISION PLANTING ASSEMBLY V-SET2 LEFT

0521053561

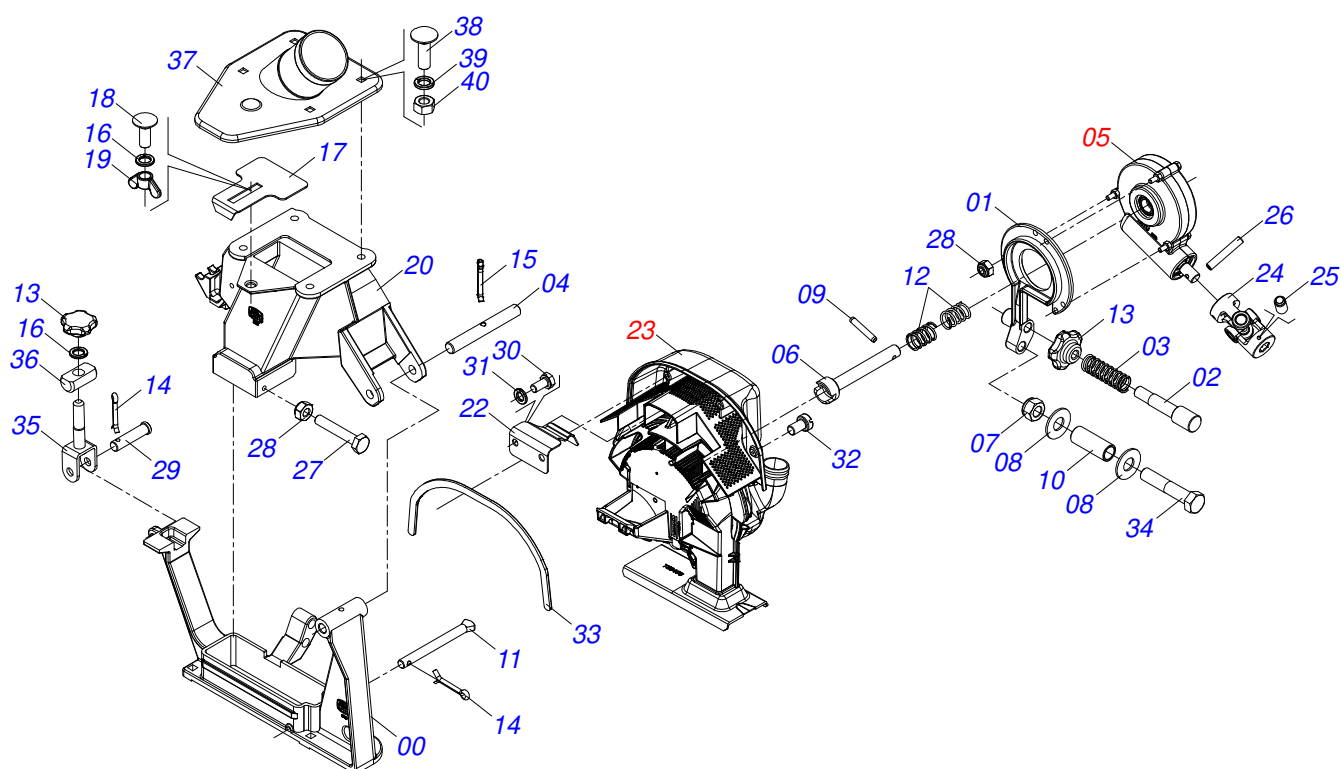


Item	Code	Description	See page	QT
01	0502012776	SUPPORT ARTICULATION PNEUMATIC PP		01
02	0571017899	PIN LOCK		01
03	0503030190	0.5" X 1.6" X 0.05" SPRING		01
04	0571017897	AXLE ARTICULATION PRECISION PLANTING		01
05	0511057155	PRECISION PLANTING LEFT TRANSMISSION 71 HOPPER		01
06	0571017894	PIN DRAG PRECISION PLANTING		01
07	0503013357	SELF-ADJUSTING NUT 3/8"		01
08	0501013518	FLAT WASHER 10.50 X 24 X 1.50 ZN		02
09	0503015356	SPRING PIN		01
10	0571017896	SLEEVE ARTICULATION PRECISION PLANTING		01
11	0571017895	PIN FIXER CONDUCTOR P.P		01
12	0503032035	COMPRESSION SPRING 0.7" X 1.2" X 1"		02
13	0503010293	CLAMP KNOB		02
14	0503010140	1/8" X 3/4" SPLIT PIN		02
15	0503010131	3/16" X 1.1/2" SPLIT PIN		01
16	0503010025	SPRING WASHER 3/8"		02
17	0571019491	SLUICE PNEUMATIC		01
18	0501011643	BOLT 3/8 X 1"		01
19	0503010209	3/8" UNC BUTTERFLY NUT		01
20	0502012807	SUPPORT HOPPER PRECISION PLANTING		01
21	0571019489	CLAMP PRECISION PLANTING		01
22	0502012799	UPPER SUPPORT BASE PNEUMATIC PRECISION PLANTING		01
23	0521053548	DISTRIBUTOR SEED COMPLETE WITH DISC 72 PEANUT		01
24	0561014778	HEX UNIVERSAL JOINT		01
25	0503013958	BOLT 1/4" X 1"		02
26	0503011855	0.2" X 1.8" SPRING PIN		01
27	0503012721	1/4" X 4" BOLT		01
28	0503012880	1/4" UNC SELF ADJUSTING NUT		04
29	0571014024	FAST BOLT GUIDE AXLE		01


PRECISION PLANTING ASSEMBLY V-SET2 LEFT

0521053561


Item	Code	Description	See page	QT
30	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		02
31	0503015110	M06 SPRING WASHER		02
32	0503818139	BOLT		03
33	0503037390	PACKING FOR PLANTING		01
34	0503015752	3/8" X 2" BOLT		01
35	0581011225	FIXER P PLANTING CONTR CPRA		01
36	0581011226	FIXER CLOSING P. PLANTING CONTROL CPRA		01
37	0521069040	DUTY LOWER 3 SEED CONDUCTOR		01
38	0503011953	5/16" X 1" BOLT		04
39	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
40	0503010337	NUT 5/16 UNC G.5 ZN		01

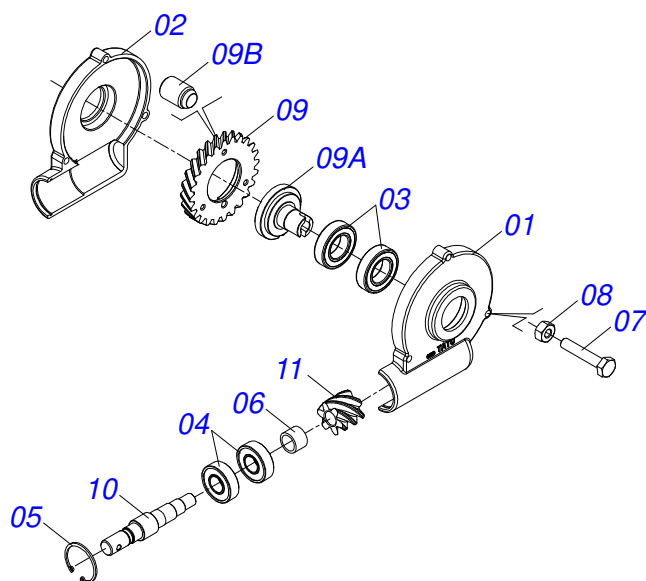


Item	Code	Description	See page	QT
01	0502050052	LEFT SIDE TRANSMISSION HOPPER PP		01
02	0502050053	RIGHT SIDE TRANSMISSION HOPPER PP		01
03	0503011410	ROLLER BEARING		02
04	0503011182	6203 ROLLER BEARING		02
05	0503011184	502040 CLAMPING RING (FOR AXLE)		01
06	0571017655	FIXER SLEEVE		01
07	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		03
08	0503010144	1/4" NUT		03
09	0511057504	JOIN GEAR		01
09A	0571017898	BODY GEAR TRANSMISSION		01
09B	0503011769	M8 X 0.5" BOLT		01
10	0581011222	PINION AXLE 6Z PNEUMATIC		01
11	0503034340	PINION AXLE 6Z PNEUMATIC		01

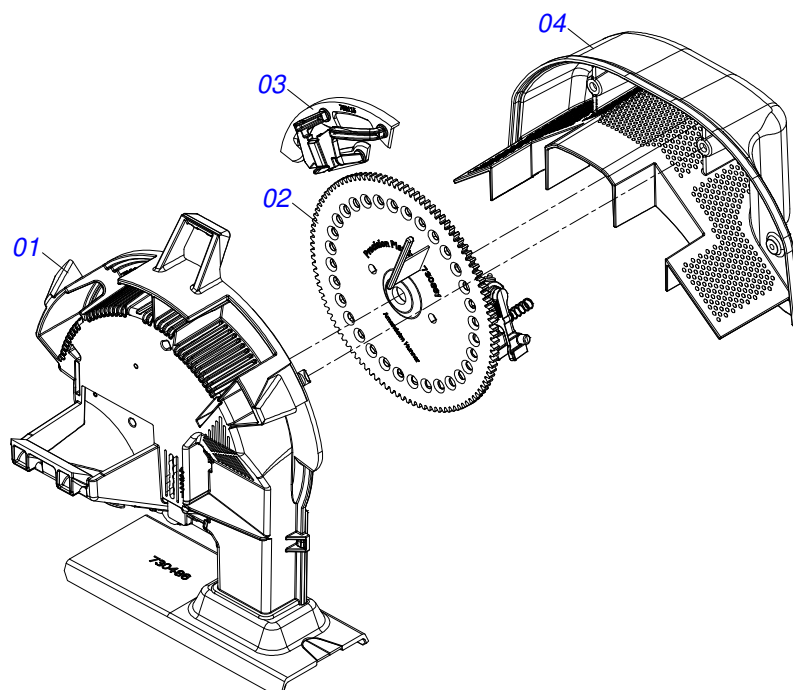


Item	Code	Description	See page	QT
01	0503062405	SEED DISTRIBUTOR		01
02	0503062576	GIANT PEANUT DISTRIBUTOR ASSEMBLY		01
03	0503062569	SELECTOR SEED		01
04	0571019613	STRAW PRECISION PLANTING SHIELD		01

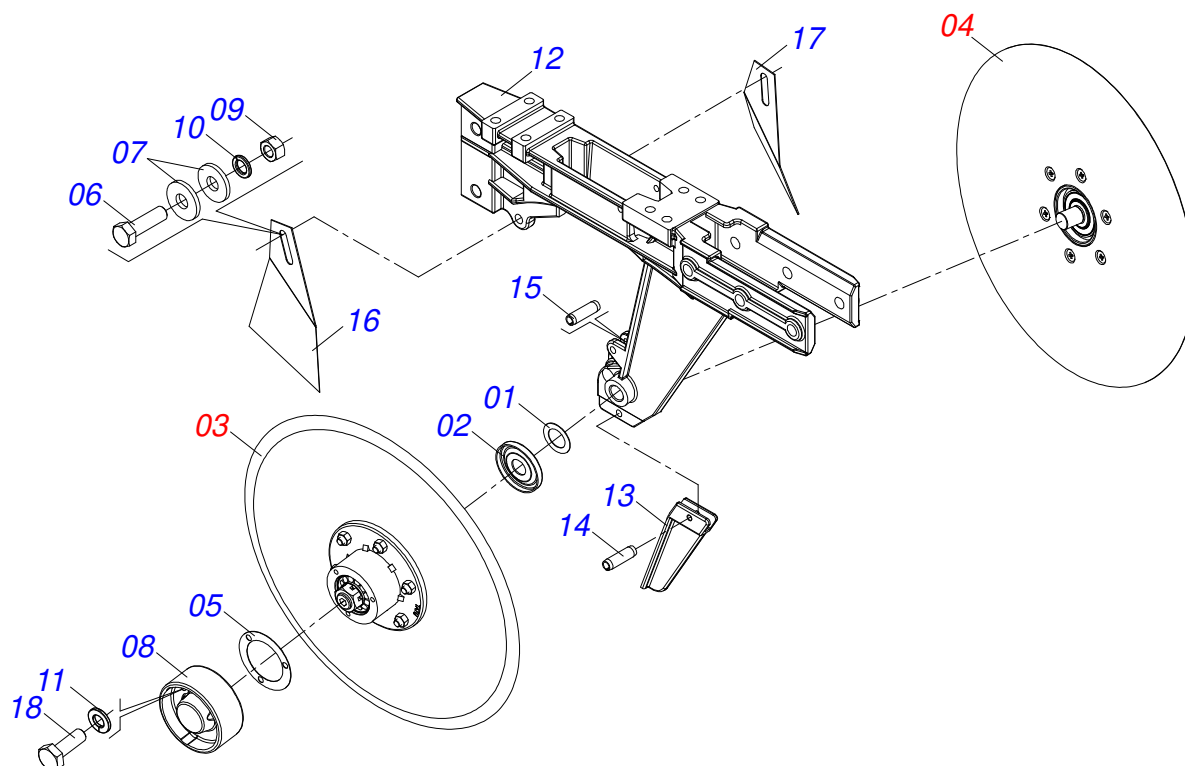


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	15" RIGHT DOUBLE DISC HUB	74	01
04	0501054168	15" LEFT DOUBLE DISC HUB	75	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER 10.50 X 27 X 3.00		02
08	0502012517	COVER		02
09	0503010026	NUT 3/8"		01
10	0503011443	SPRING WASHER 3/8"		01
11	0503011441	SPRING WASHER		06
12	0502012781	SUPPORT DDD LEFT		01
13	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
14	0503011402	0.2" X 0.8" SPRING PIN		01
15	0503013129	ELASTIC PIN		01
16	0571017963	RIGHT DOUBLE DISC SCRAPER		01
17	0571017964	LEFT DOUBLE DISC SCRAPER		01
18	0503014891	1/4" X 3/4" BOLT		06

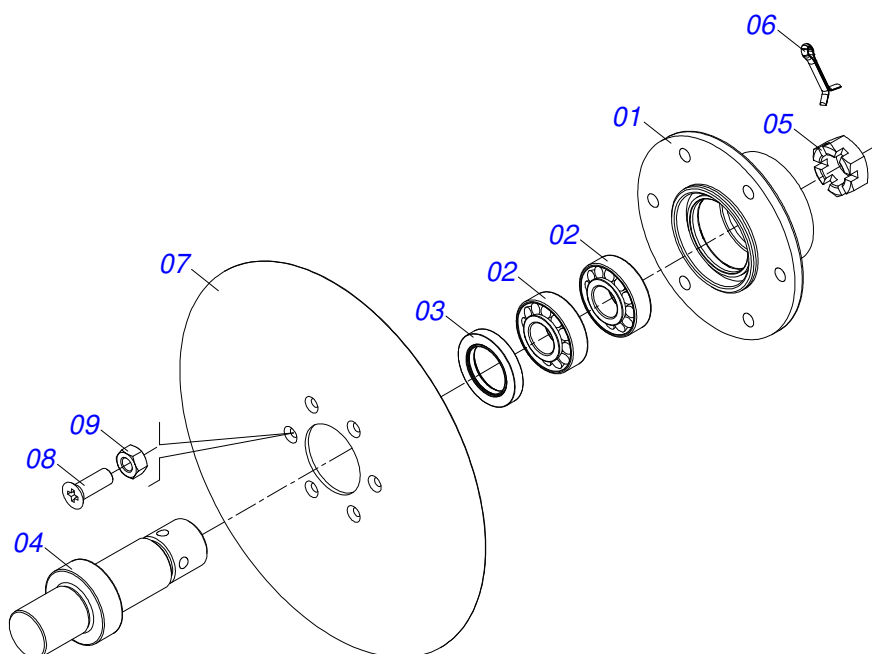


Item	Code	Description	See page	QT
01	0502011930	OPENING DISCS HUB		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT SHAFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" SPLIT PIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	NUT 5/16 UNC G.5 ZN		06

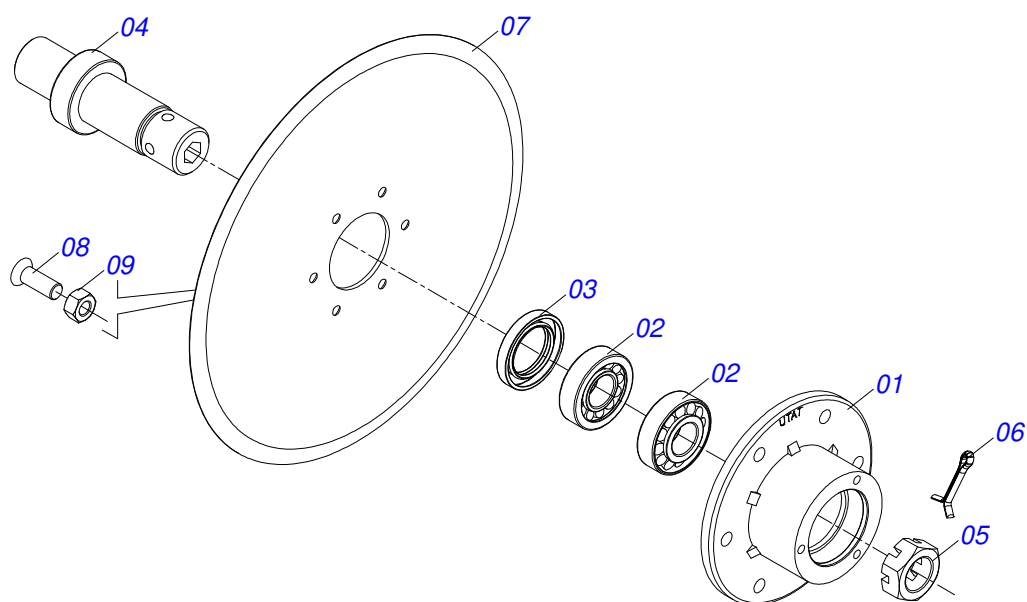


Item	Code	Description	See page	QT
01	0502011930	OPENING DISCS HUB		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" SPLIT PIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	NUT 5/16 UNC G.5 ZN		06

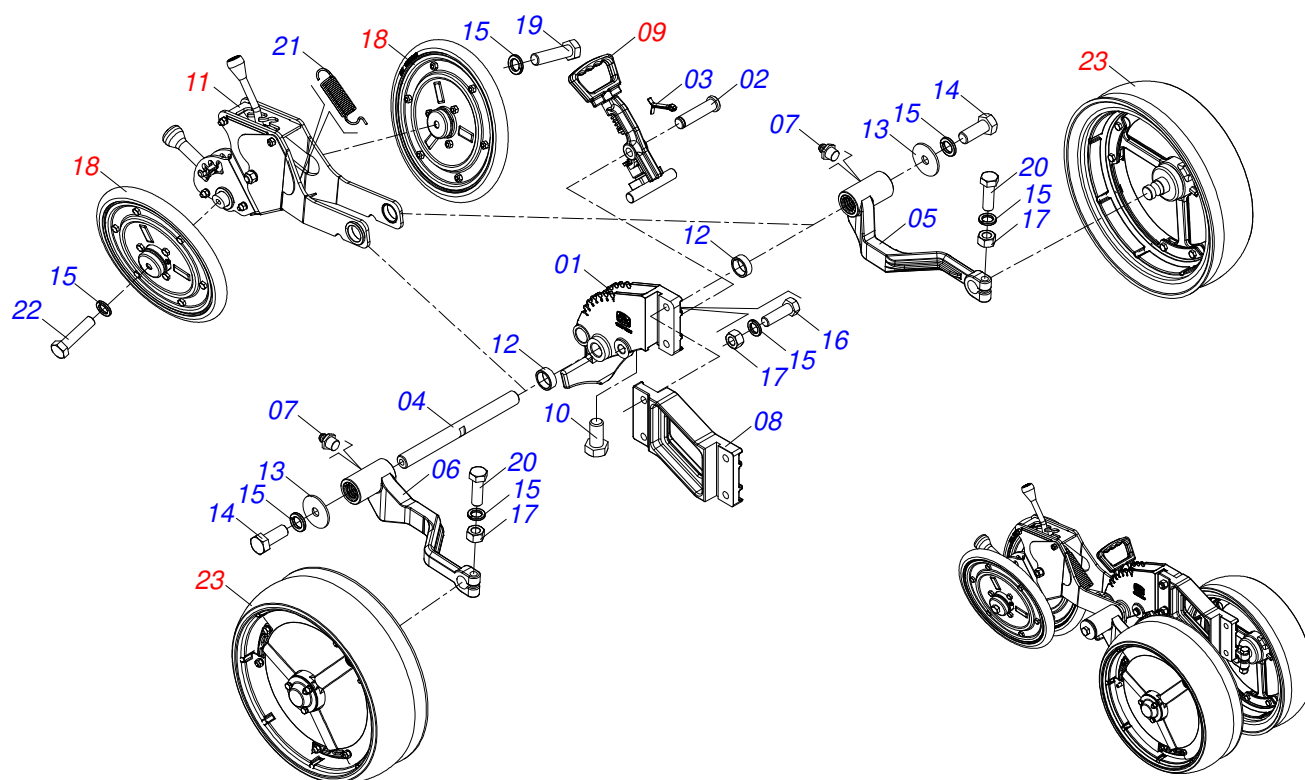


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0503010257	1/8" X 1" SPLIT PIN		01
04	0581014858	DEPTH WHEEL AXLE		01
05	0501110720	ARM LEFT		01
06	0501110719	DEPTH CONTROL RIGHT ARM		01
07	0502012663	EXTENSION		01
08	0503010002	GREASE FITTING 1800		02
09	0501056769	DEPTH WHEELS REGULATOR ASSY	77	01
10	0503810256	SCREW		01
11	0521051423	COMPACTOR SUPPORT	78	01
12	0503034793	ARTICULATION SLEEVE		02
13	0571017749	FLAT WASHER		02
14	0503010311	1/2" X 1-1/4" BOLT		02
15	0503010019	SPRING WASHER 1/2"		08
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	HEX NUT 1/2 UNC G.5 ZN		04
18	0501052908	COMPACTOR WHEEL WITH BEARING	79	02
19	0503013739	1/2" X 1" BOLT		01
20	0503016453	1/2" X 2.1/2 BOLT		02
21	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
22	0503010752	1/2" X 3.1/2" BOLT		01
23	0511059489	CENTRAL RAIL WHEEL	80	02

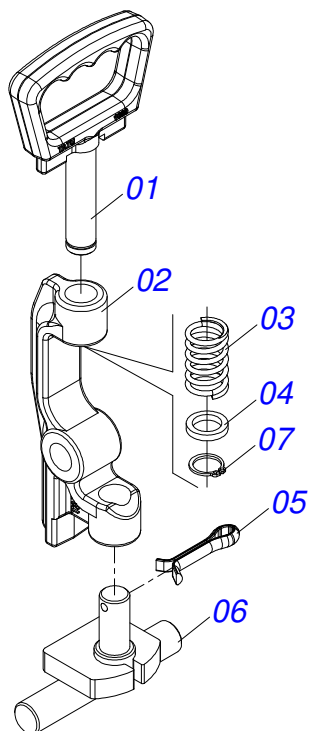


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" SPLIT PIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

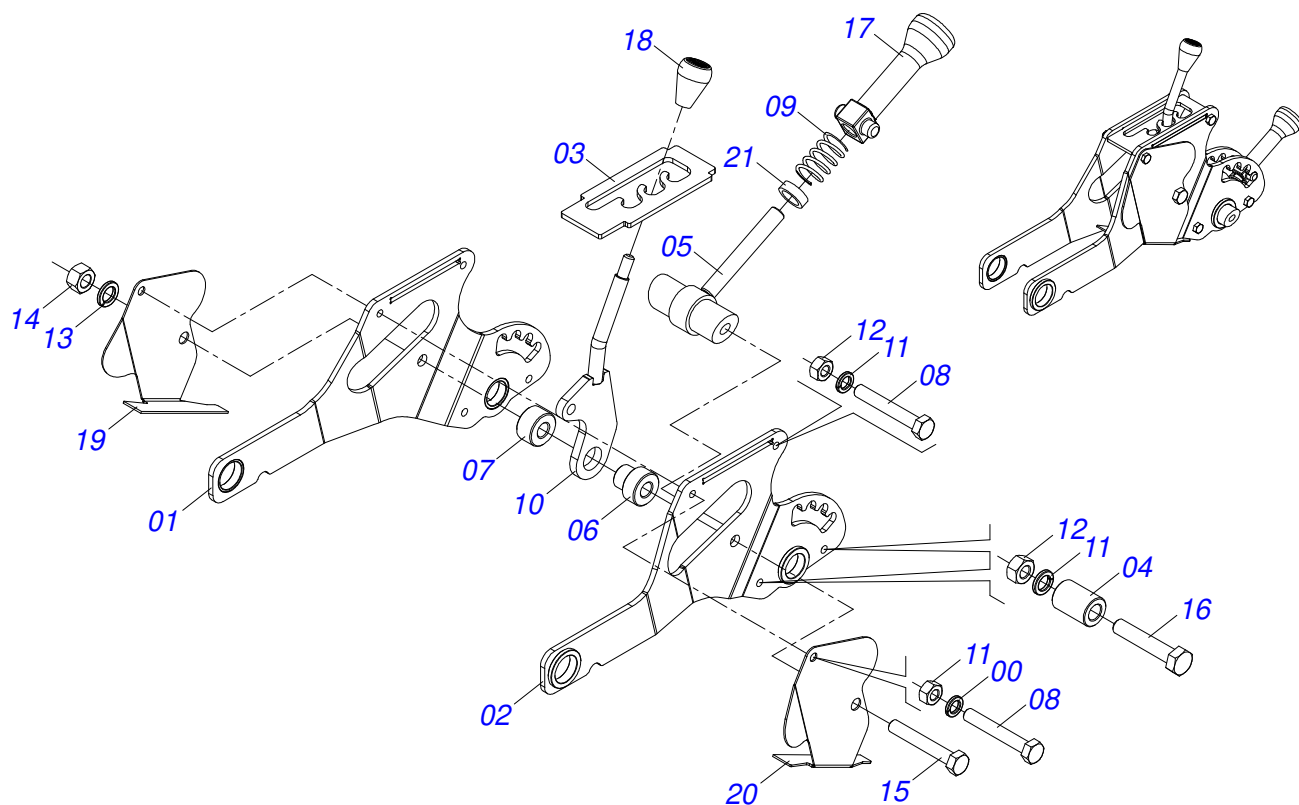


Item	Code	Description	See page	QT
01	0521068003	RIGHT SIDE		01
02	0521068002	LEFT SIDE		01
03	0581014847	PLATE UPPER		01
04	0581015855	SLEEVE		02
05	0521068004	HANDLE BODY		01
06	0581014969	GUIDE SLEEVE		01
07	0581014968	SLEEVE FLANGE		01
08	0503010937	5/16" X 3" BOLT		02
09	0503032035	COMPRESSION SPRING 0.7" X 1.2" X 1"		01
10	0521068005	LEVER		01
11	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
12	0503010337	NUT 5/16 UNC G.5 ZN		04
13	0503010019	SPRING WASHER 1/2"		01
14	0503010060	HEX NUT 1/2 UNC G.5 ZN		01
15	0503010847	1/2" X 3.1/4" BOLT		01
16	0503010882	BOLT		02
17	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
18	0503030878	LEVER CRANK		01
19	0581015854	RIGHT PROTECTION COVER		01
20	0581015853	LEFT PROTECTION COVER		01
21	0581015903	SPACER WASHER		01

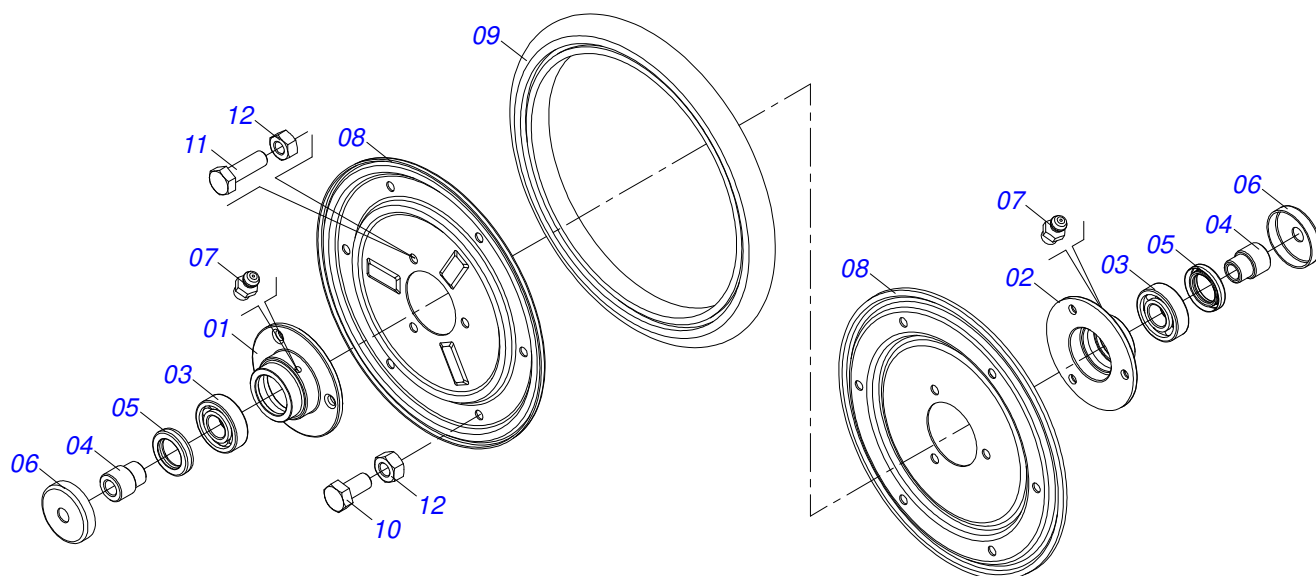


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	GREASE FITTING 1/4"		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	BOLT 5/16" X 5/8"		03
12	0503013816	5/16" LOCKNUT		03

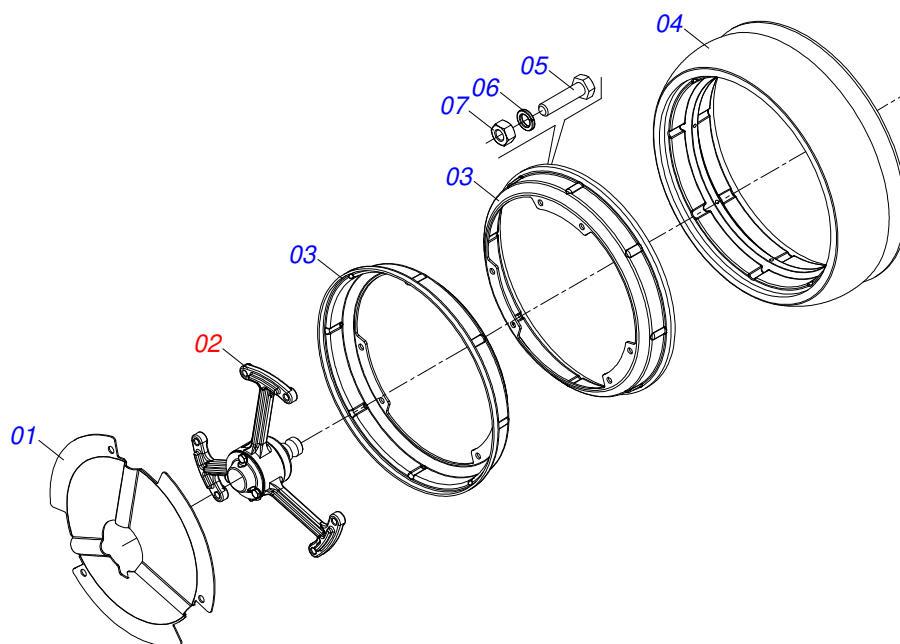


Item	Code	Description	See page	QT
01	0561016889	STRIPED CAP WHEEL DEPTH	81	01
02	0511052287	DEPTH WHEEL HUB ASSY		04
03	0551019904	PRESS WHEEL RIM		02
04	0503030891	RUBBER BAND		01
05	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
07	0503010337	NUT 5/16 UNC G.5 ZN		06

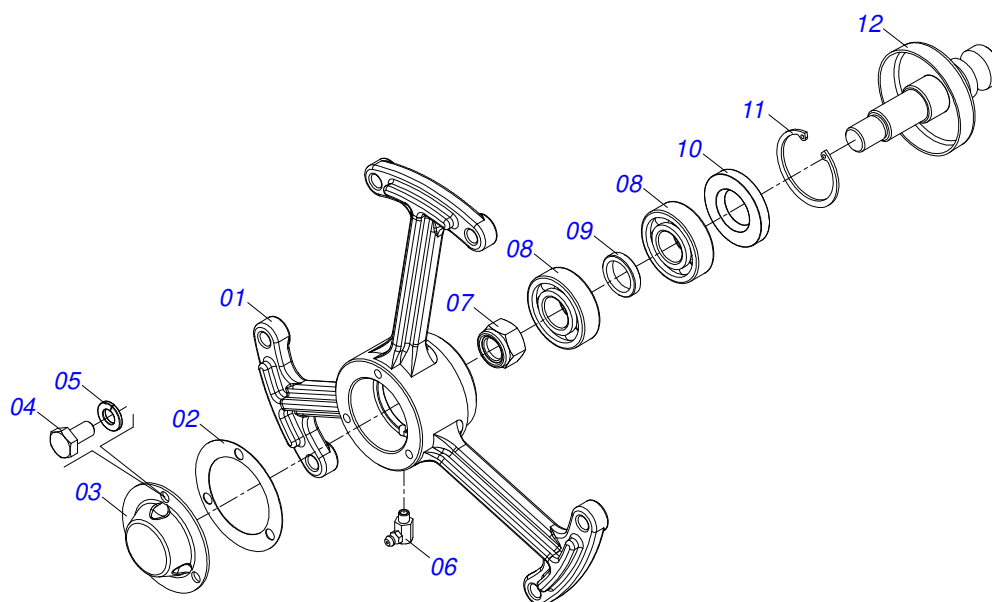


Item	Code	Description	See page	QT
01	0502011918	DEPHT WHEEL HUB		01
02	0503030757	2.9" X 2" X 0.02" JOINT		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	SPRING WASHER 1/4"		03
06	0503011098	1/4" GREASE FITTING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503010269	6204 BALL BEARING		02
09	0501013636	SPACING SLEEVE		01
10	0503010689	SEAL 00763-BR		01
11	0503011105	SEAL RING		01
12	0521063443	DEPTH CONTROL AXLE		01

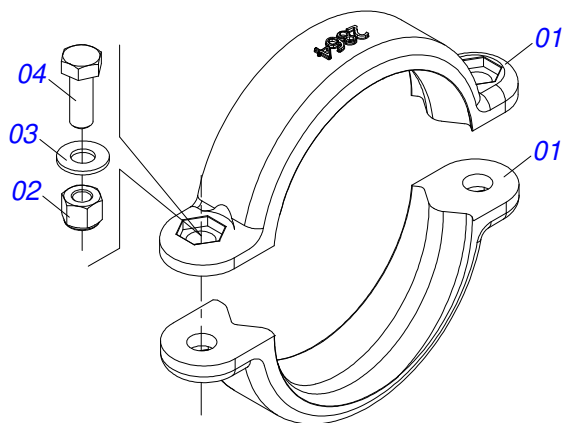


Item	Code	Description	See page	QT
01	0502012864	CLAMP 3 CSU		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER 8.50 X 18 X 1.50 ZN		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02

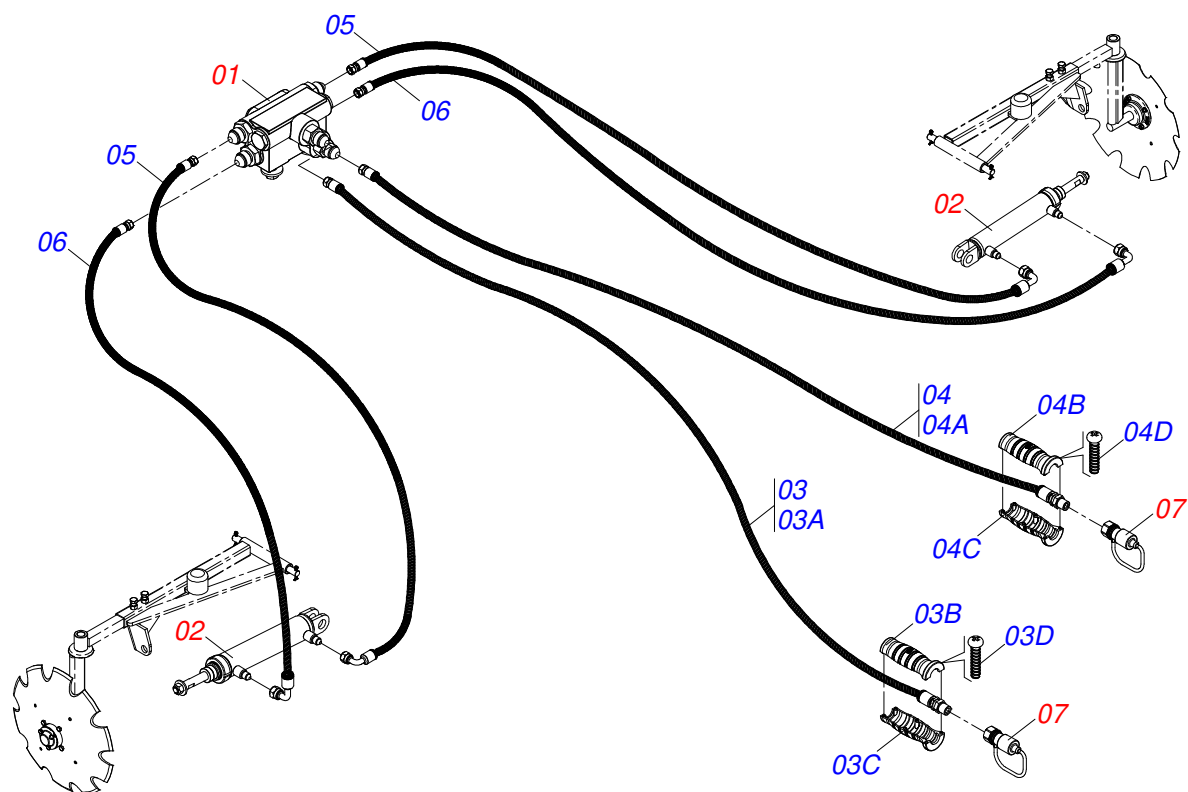


Item	Code	Description	See page	QT
01	0501054649	HBM SEQUENTIAL VALVE	30	01
02	0521040155	HYDRAULIC CYLINDER 31,75 X 50,8 X 365 X 595	29	02
03	0521052312	3/8" X 59.05" TR-TM PURPLE/RED HOSE		01
03A	0501080852	3/8" X 59.05" TR-TM HOSE		01
03B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
03C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
03D	0503018952	PLASTIC BOLT PH 2.5 X 10 ZB		06
04	0521052313	3/8" X 59.05" TR-TM PURPLE/BLUE HOSE		01
04A	0501080852	3/8" X 59.05" TR-TM HOSE		01
04B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
04C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
04D	0503018952	PLASTIC BOLT PH 2.5 X 10 ZB		06
05	0501080412	3/8" X 90.55" TR-TC HOSE		02
06	0501080469	3/8" X 98.40" TR-TC HOSE		02
07	0501053834	MALE QUICK COUPLER	87	02

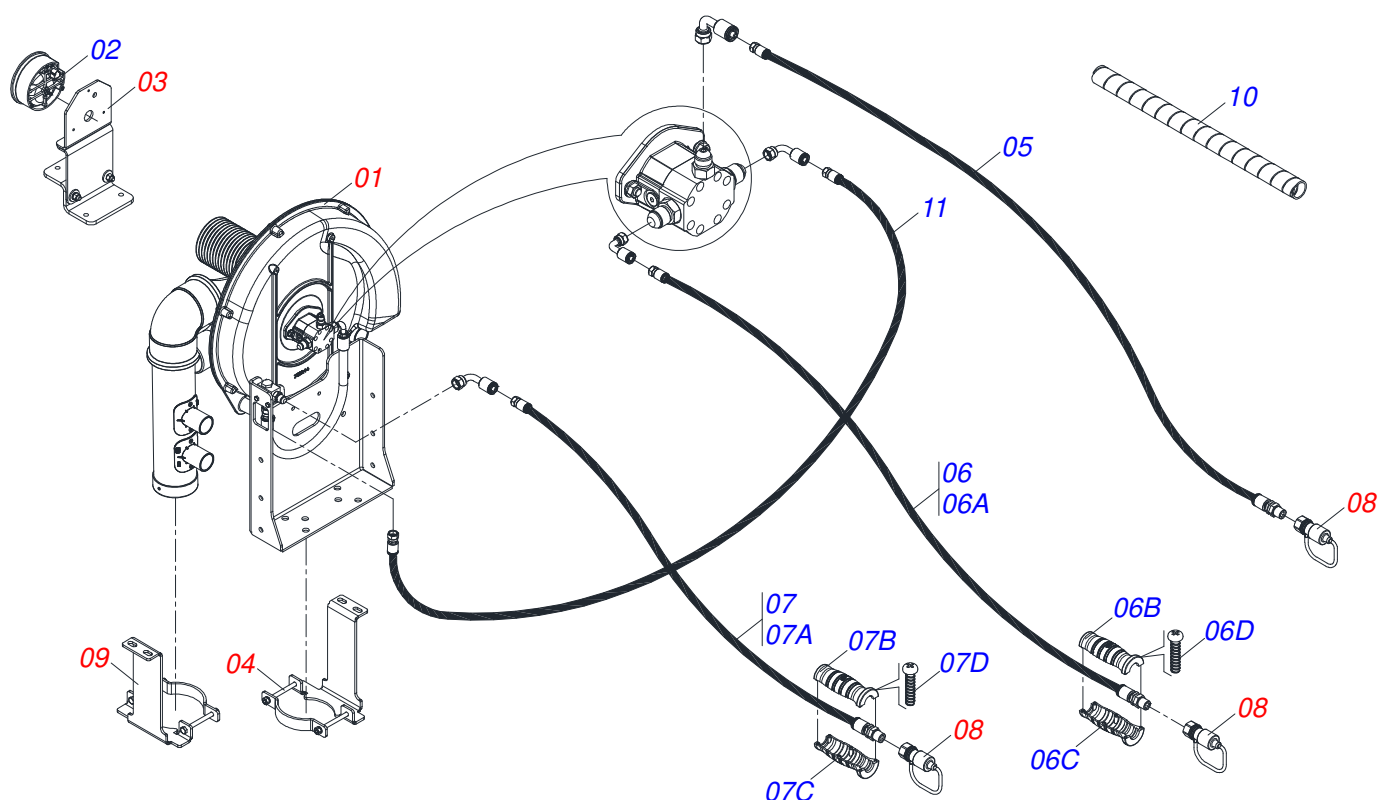


Item	Code	Description	See page	QT
01	0531055988	HYDRAULIC TURBINE WITH AIR TUBE	46	01
02	0503013584	VACUUM GAUGE		01
03	0521053964	VALVE SUPPORT	36	01
04	0531055992	RIGHT AIR DUCT SUPPORT	85	01
05	0501081417	3/8 X 2500 TC- TM HOSE		01
06	0521054646	HOSE 1/2 "X 2300 TC-TM RED / YELLOW		01
06A	0501080112	HOSE 1/2 X 2300 TC-TM		01
06B	0503034495	HYDRAULIC HOSE GRIP (RED)		01
06C	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
06D	0503018952	PLASTIC BOLT PH 2.5 X 10 ZB		06
07	0521054647	HOSE 1/2 "X 2300 TC-TM BLUE / YELLOW		01
07A	0501080112	HOSE 1/2 X 2300 TC-TM		01
07B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
07C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
07D	0503018952	PLASTIC BOLT PH 2.5 X 10 ZB		06
08	0501053834	MALE QUICK COUPLER	87	03
09	0531055991	LEFT AIR DUCT SUPPORT	86	01
10	0581018894	SPRING PLASTIC PROTECTION HOSE 3/4 X 2850 MM		01
11	0501082253	1/2 X 620 TR-TC HOSE		01

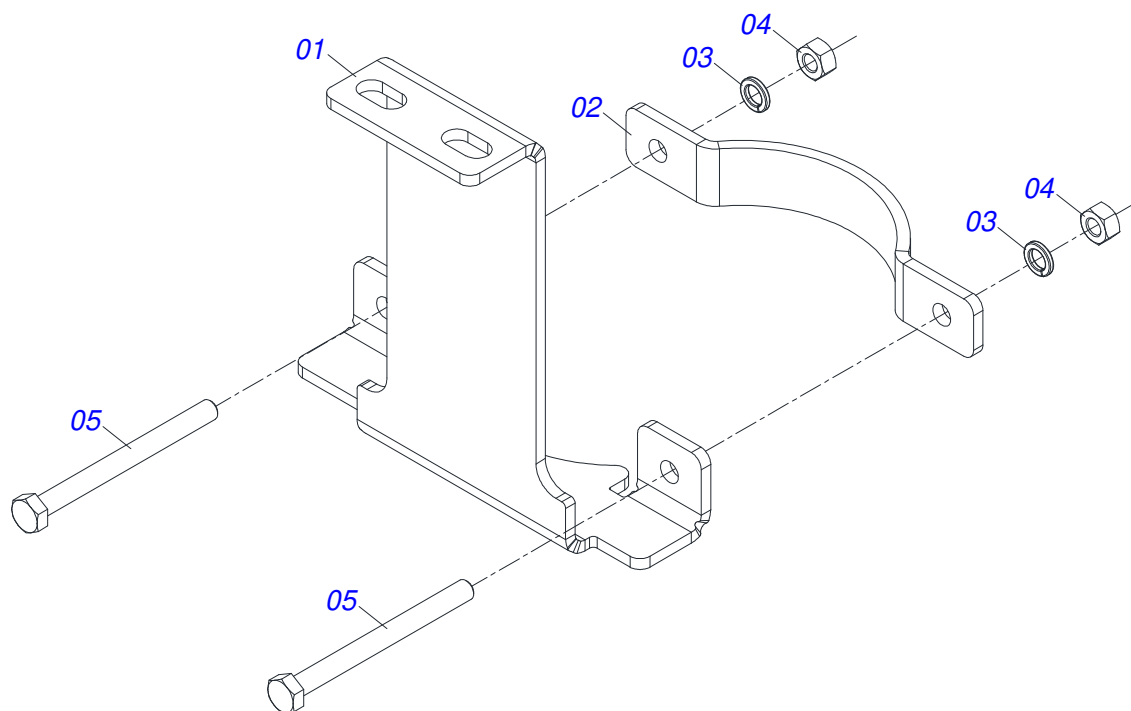


Item	Code	Description	See page	QT
01	0501215305	RIGHT AIR DUCT SUPPORT BODY		01
02	0521018402	AIR CONDUCTOR CLAMP		01
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	NUT 5/16 UNC G.5 ZN		02
05	0503010848	5/16" X 3.1/2" BOLT		02

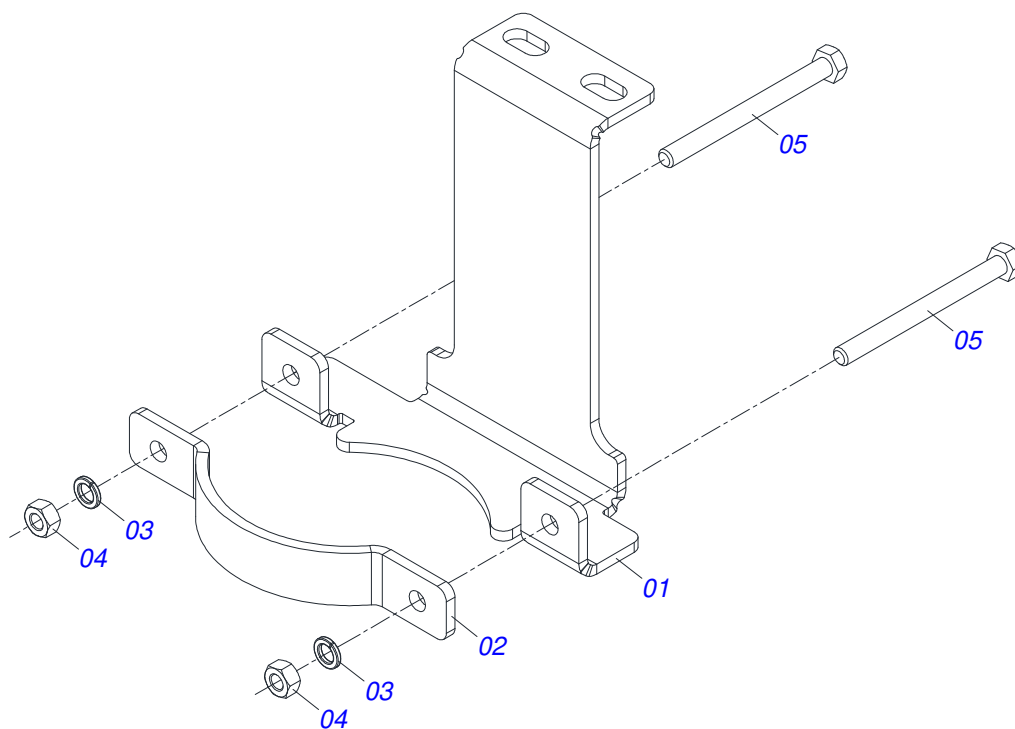

Item	Code	Description	See page	QT
01	0501215304	LEFT AIR DUCT SUPPORT BODY		01
02	0521018402	AIR CONDUCTOR CLAMP		01
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	NUT 5/16 UNC G.5 ZN		02
05	0503010848	5/16" X 3.1/2" BOLT		02

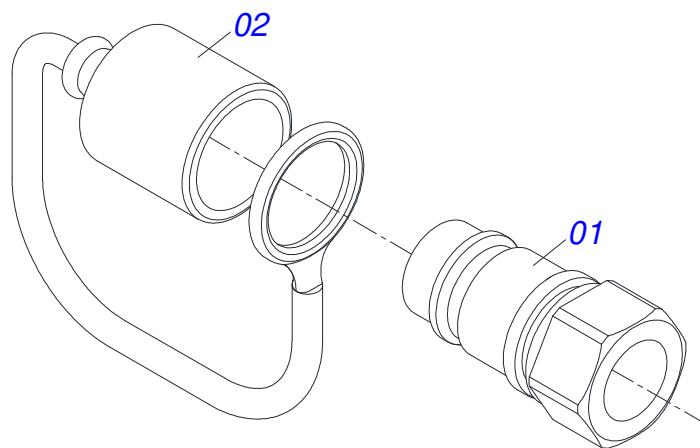

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

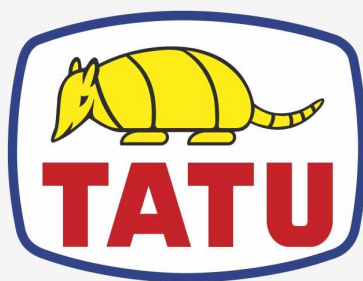

MARCHESAN

Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI

www.marchesan.com.br

