

ROW CROP PLANTERS

COP CA - 07/09 LINES (UP TO 03/2022)

Code: 0501092793
Series: S-0913
Revision: 00
Date Revision: AGOSTO/2020

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111300026	COP CA 7/7 S-0913
0111300006	COP CA 7/7 MH S-0913
0111300013	COP CA 7/7 MH MS PM100 S-0913
0111300004	COP CA 9/6 MH S-0913
0111300005	COP CA 9/9 S-0913
0111300001	COP CA 9/9 MH S-0913
0111300022	COP CA 9/9 MH MS S-0913
0111300003	COP CA 9/9 MH MSA S-0913
0111300015	COP CA 9/9 MH TVS S-0913

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



 
MARCHESAN

INDEX

0909091797	07 AT 09 ROW FRAME	1
0501059662	CONJUNTO RODADO DIREITO SEMI MONTADO	2
0501059663	SET WHEELED LEFT SEMI MOUNTED	3
0501059655	HUB CARRYING-WHEELS	4
0511053887	WHEEL FIXING ASSY	5
0511055725	TRANSMISSION ASSEMBLY	6
0511053899	TRANSMISSION ASSEMBLY	7
0511053898	SET OF INTERNAL TRANSMISSION	8
0511053897	TRANSMISSION ASSEMBLY	9
0511048348	RIGHT GEAR BOX ASSY	10
0501058212	SEMI MOUNTED RIGHT CHANGE	11
0511048349	RIGHT GEAR BOX ASSY	12
0501058213	LH GEAR BOX	13
0511053915	HEXAGONAL SHAFT ASSEMBLY	14
0511053886	HEXAGONAL AXLE ASSEMBLY	15
0511053918	FERTILIZER BOX ASSEMBLY	16
0511053892	FERTILIZER BOX ASSEMBLY	17
0511051077	SUPPORT RIGHT BOX FERTILIZER WITH DISTRIBUTOR	18
0511051078	SUPPORT LEFT BOX FERTILIZER WITH DISTRIBUTOR	19
0501059656	FERTILIZER SUPORT RIGHT BOX	20
0501059657	FERTILIZER SUPORT LEFT BOX	21
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	22
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	23
0511053919	HYDRAULIC ASSEMBLY	24
0511053893	HYDRAULIC ASSEMBLY	25
0511053894	HYDRAULIC CYLINDER ASSEMBLY	26
0511058411	HYDRAULIC CYLINDER	27
0511053920	OIL PIPE ASSEMBLY	28
0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	29
0511052909	HYDRAULIC MARKER	30
0511058449	HYDRAULIC CYLINDER	31
0501050633	ROW MARKER DISK ASSEMBLY	32
0511052197	WHEELS HOSE ASSEMBLY	33
0501053834	MALE QUICK COUPLER	34
0511053895	OIL DUCT ASSEMBLY	35
0511053917	PLATFORM ASSEMBLY	36
0511053891	PLATFORM ASSEMBLY	37
0511053916	HANDRAIL ASSEMBLE	38
0511053889	HANDRAIL ASSEMBLE	39
0511053890	HANDRAIL ASSEMBLE	40
0511053085	ASSY FIXER HEADER	41
0511043100	DRAWBAR ASSY	42
0511058192	ASSY PORT MANUAL INSTRUCCION	43
0909091800	SEED/FERTILIZER ROW ASSEMBLE	44
0501059362	LONG SEED ROW FRONT	45
0501059350	LONG FRONT SEED ROW	46
0501059349	SHORT SEED ROW FRONT	47
0501059361	SHORT SEED ROW FRONT	48
0511052317	RH SEED ROW REAR	49
0511051783	RIGHT REAR SEED ROW TITANIUM	50
0511052318	LH SEED ROW REAR	51
0511051782	LEFT REAR SEED ROW	52
0501052234	ASSY SEED SYSTEM	53
0511052319	RIGHT REAR SEED ROW	54
0511052320	REAR LEFT ROW SEED TITANIUM	55

INDEX


0511054884	TRANSMISSION BOX		56
0511051720	SEED SYSTEM TITANIUM ASSY		57
0511048339	24" BLADE DISC ASSY		58
0909093298	15X15 SEED UNAL DOUB-DISC ASSY		59
0909091573	SISTEM WHEEL PROF COMPACT FULL		60
0909091572	SISTEM WHEEL PROF COMPACT FULL		61
0909091574	SISTEM WHEEL PROF COMPACT FULL		62
0909091575	IRON PRESS WHEEL		63
0909091576	PRESS WHEELS RIGHT/LEFT V		64
0511055327	COMPACTING WHEEL V ASSY RUBBER		65
0501059241	STRIPED BOX WHEEL DEPTH WITH TIRE		66
0909091583	PRESS WHEELS BALL BEARING		67
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR		68
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR		69
0501055579	DRAWBAR ESTABILIZER		70
0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER		71
0511056793	PLATFORM SET		72
0511058101	ASSEMBLY CSU C3 SEMI MOUNTED 4045/4495		73
0511058100	2 BOXES WITH 9 CONDUCTORS ASSEMBLY		74
0511059023	SEED SYSTEM ASSY		75
0511057690	3" ARTICULATED SEED CONDUCTOR		76
0521046122	DEPTH SYSTEM / COMPACTOR ASSY		77

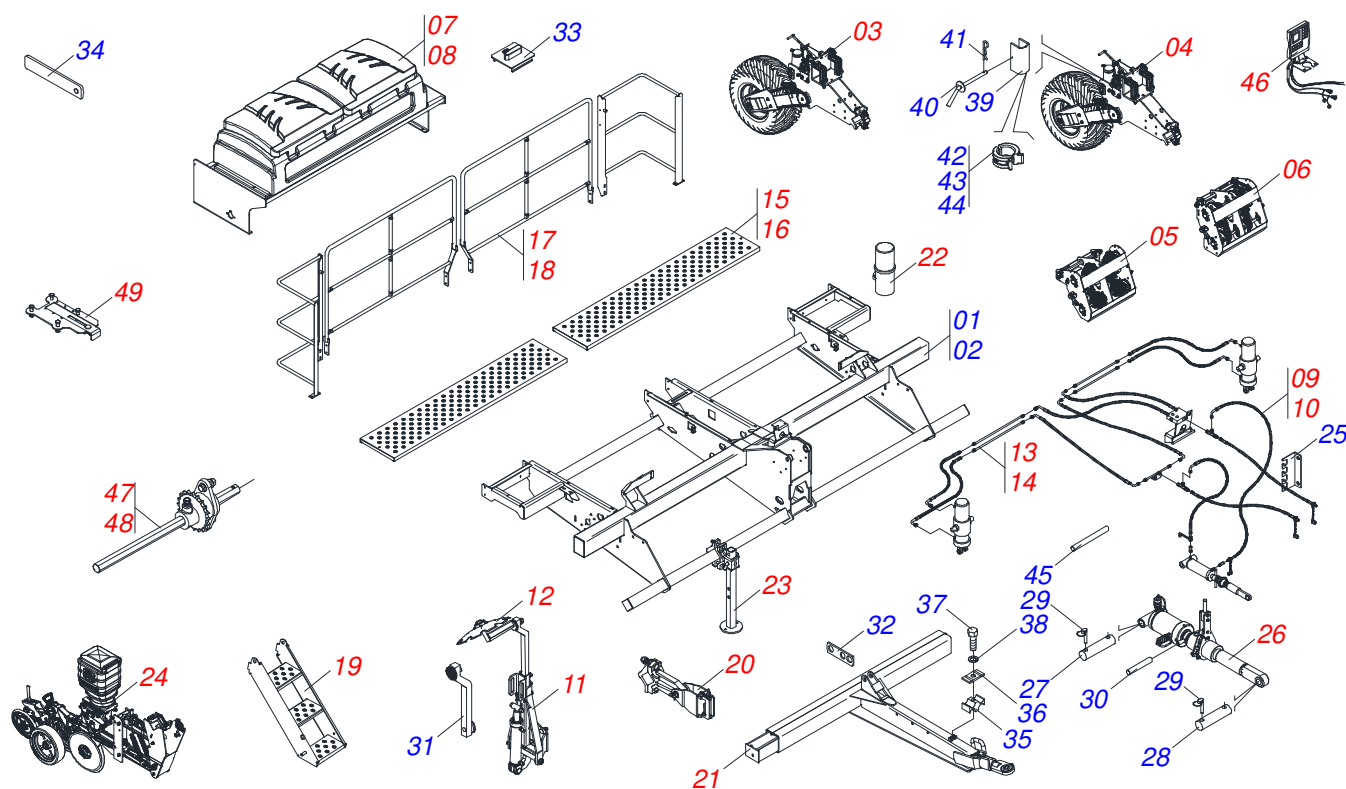

Item	Code	Description	See page	07/09 L.
01	0521062422	FRAME		01 00
02	0521061323	FRAME		00 01
03	0501059662	CONJUNTO RODADO DIREITO SEMI MONTADO	2	01 01
04	0501059663	SET WHEELED LEFT SEMI MOUNTED	3	01 01
05	0511055725	TRANSMISSION ASSEMBLY	6	01 00
06	0511053899	TRANSMISSION ASSEMBLY	7	00 01
07	0511053918	FERTILIZER BOX ASSEMBLY	16	02 00
08	0511053892	FERTILIZER BOX ASSEMBLY	17	00 02
09	0511053919	HYDRAULIC ASSEMBLY	24	01 00
10	0511053893	HYDRAULIC ASSEMBLY	25	00 01
11	0511052909	HYDRAULIC MARKER	30	01 01
12	0501050633	ROW MARKER DISK ASSEMBLY	32	01 01
13	0511053920	OIL PIPE ASSEMBLY	28	01 00
14	0511053895	OIL DUCT ASSEMBLY	35	00 00
15	0511053917	PLATFORM ASSEMBLY	36	01 00
16	0511053891	PLATFORM ASSEMBLY	37	00 01
17	0511053916	HANDRAIL ASSEMBLE	38	01 00
18	0511053889	HANDRAIL ASSEMBLE	39	00 01
19	0511053890	HANDRAIL ASSEMBLE	40	02 02
20	0511053085	ASSY FIXER HEADER	41	02 02
21	0511043100	DRAWBAR ASSY	42	01 01
22	0511058192	ASSY PORT MANUAL INSTRUCCION	43	01 01
23	0511058191	REST ASSY		01 01
24	0909091800	SEED/FERTILIZER ROW ASSEMBLE	44	07 09
25	0541014576	HOSE FIXER ASSY		01 01
26	0501055579	DRAWBAR ESTABILIZER	70	01 01
27	0521018532	1.4" X 12" COUPLING SHAFT		01 01
28	0521018531	1.4" X 4.5" COUPLING SHAFT		01 01
29	0503030085	LOCK PIN		02 02
30	0521018501	TURNBUCKLE LEVER		01 01
31	0511066652	400 TURNBUCKLE		02 02



Item	Code	Description	See page	07/09 L.
32	0561019087	DRAWBAR TRANSPORT LOCK		01 01
33	0503032624	SILO FERTILIZER GUTTER		06 06
34	0511015627	SEED DISC LEVER		01 01
35	0502012702	BODY SUPPORT CLAMP		03 03
36	0531011180	UPPER BODY CLIP		01 01
37	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04 04
38	0503010180	7/16" SPRING WASHER		04 04
39	0521013022	TRANSPORT LOCK		02 02
40	0501068994	0.3" X 3.1" LOCK PIN		02 02
41	0503030168	CUPILLA		02 02
42	0501047885	ROD STOP		03 03
43	0501047886	ROD STOP		03 03
44	0501047887	ROD STOP		03 03
45	0531013600	PRESS ADJUSTMENT LEVER		01 01
46	0511056393	PLANTING OF MONITORING ASSEMBLY		01 01
47	0511053915	HEXAGONAL SHAFT ASSEMBLY	14	01 00
48	0511053886	HEXAGONAL AXLE ASSEMBLY	15	00 01
49	0511059709	SUPPOT BASE		07 09

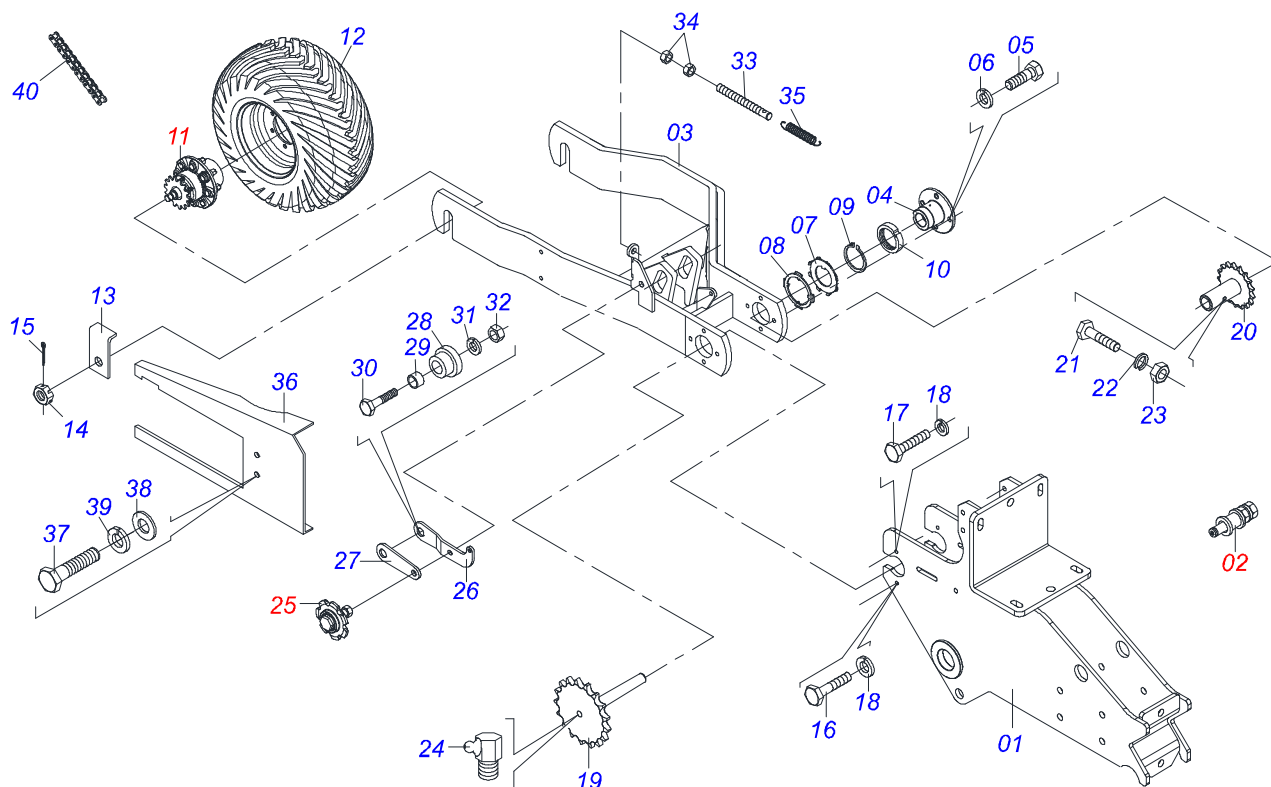 

Item	Code	Description	See page	QT
01	0511065423	WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY		01
03	0521061337	RIGHT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0501059655	HUB CARRYING-WHEELS	4	01
12	0503060602	400/60 X 15,5-14L RODA		01
13	0531015109	WHEEL AXLE LOCK		02
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010523	1/4" X 2" COTTERPIN		02
16	0503010834	1/2 X 1 BOLT		03
17	0503010395	1/2" X 1-1/4" BOLT		01
18	0503010019	1/2" SPRING WASHER		04
19	0511064769	15Z GEAR WITH AXLE		01
20	0511061809	15Z GEAR WITH COUPLING		01
21	0503011103	7/16" X 2-1/2" BOLT		01
22	0503010180	7/16" SPRING WASHER		01
23	0503010244	7/16" NUT		01
24	0503010004	1890 GREASE FITTING		02
25	0501053522	WHEEL CHAIN TENSIONER		01
26	0531018654	CHAIN TIGHTENER SUPPORT		01
27	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
28	0531016916	SLEEVE BEARING SUPPORT		02
29	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE		01
30	0503010899	5/8" X 2-1/4" BOLT		01
31	0503010027	5/8" SPRING WASHER		01


**COP CA - 07/09 LINES****(UP TO 03/2022)**

Page 2

CONJUNTO RODADO DIREITO SEMI MONTADO

0501059662

 Item	Code	Description	See page	QT
32	0503010013	5/8" NUT		01
33	0501013491	5/8" TENSIONER SPRING		01
34	0503010013	5/8" NUT		02
35	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
36	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
37	0501018535	1/2 X 1 BOLT		02
38	0511017302	FLAT WASHER		02
39	0503010019	1/2" SPRING WASHER		02
40	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01

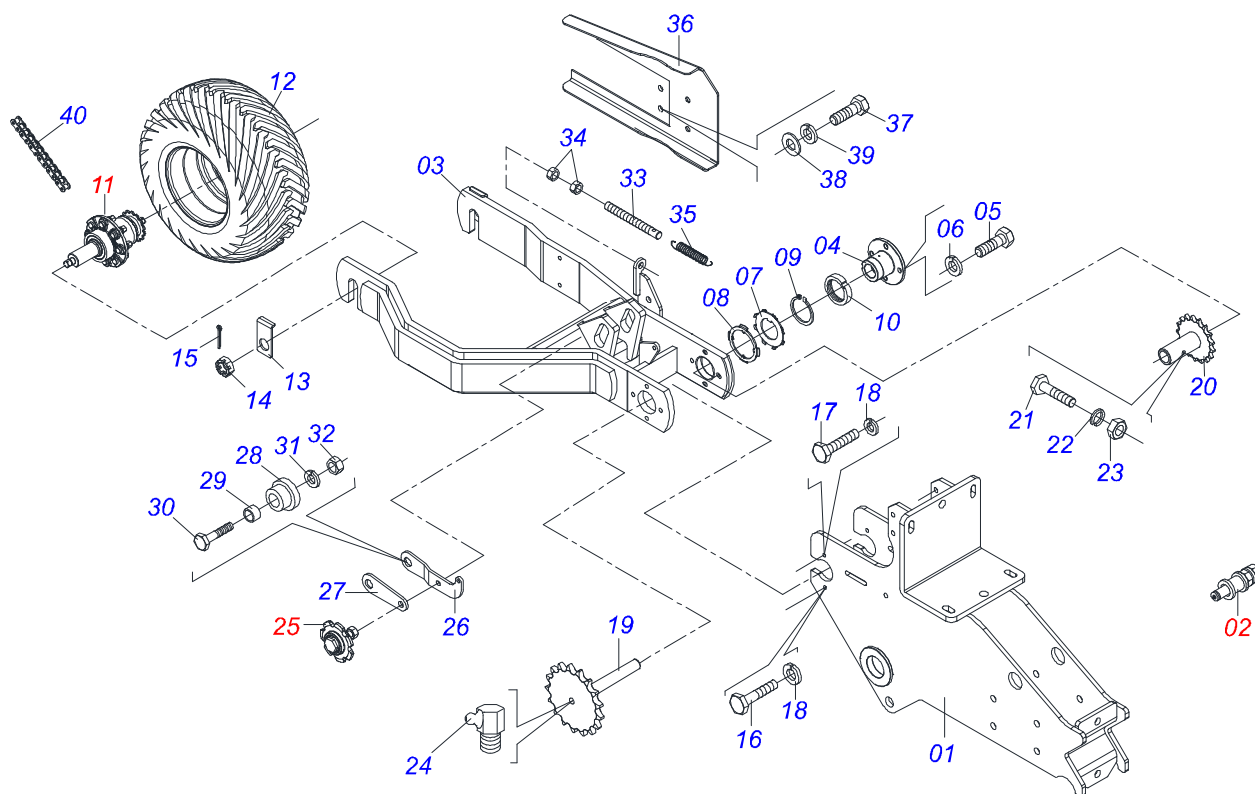

Item	Code	Description	See page	QT
01	0511065423	WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY		01
03	0521061338	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0501059655	HUB CARRYING-WHEELS	4	01
12	0503060602	400/60 X 15,5-14L RODA		01
13	0531015109	WHEEL AXLE LOCK		02
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010523	1/4" X 2" COTTERPIN		02
16	0503010834	1/2 X 1 BOLT		03
17	0503010395	1/2" X 1-1/4" BOLT		01
18	0503010019	1/2" SPRING WASHER		04
19	0511064769	15Z GEAR WITH AXLE		01
20	0511061809	15Z GEAR WITH COUPLING		01
21	0503011103	7/16" X 2-1/2" BOLT		01
22	0503010180	7/16" SPRING WASHER		01
23	0503010244	7/16" NUT		01
24	0503010004	1890 GREASE FITTING		02
25	0501053522	WHEEL CHAIN TENSIONER		01
26	0531018654	CHAIN TIGHTENER SUPPORT		01
27	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
28	0531016916	SLEEVE BEARING SUPPORT		02
29	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE		01
30	0503010899	5/8" X 2-1/4" BOLT		01
31	0503010027	5/8" SPRING WASHER		01




SET WHEELED LEFT SEMI MOUNTED

0501059663


Item	Code	Description	See page	QT
32	0503010013	5/8" NUT		01
33	0501013491	5/8" TENSIONER SPRING		01
34	0503010013	5/8" NUT		02
35	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
36	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
37	0501018535	1/2 X 1 BOLT		02
38	0511017302	FLAT WASHER		02
39	0503010019	1/2" SPRING WASHER		02
40	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01

HUB CARRYING-WHEELS

 
0501059655

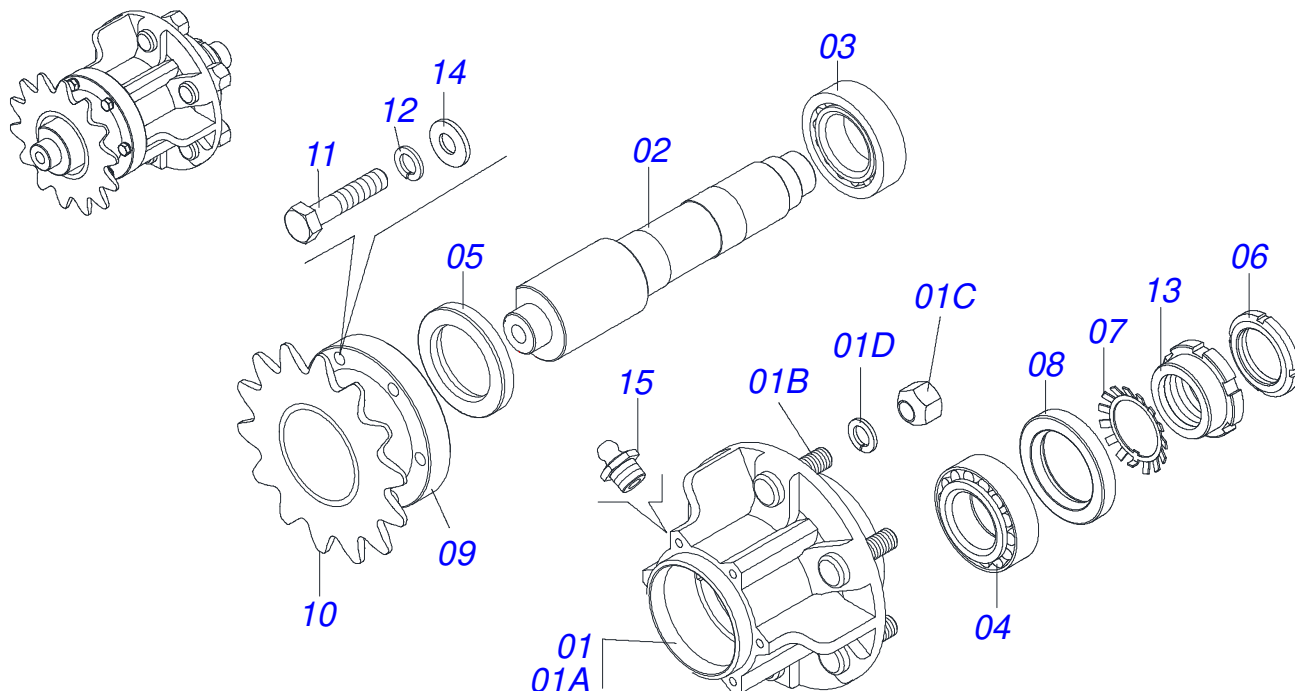


Item	Code	Description	See page	QT
01	0501110751	HUB AND SPINDLE WITH BOLT		01
01A	0502040522	HUB CARRYING-WHEELS		01
01B	0503011339	M22 X 1,5 X 72 BOLT		08
01C	0503011341	M22 X 0.6" NUT GR8 NUT		08
01D	0503011340	SPHERICAL SPRING WASHER		08
02	0561015609	WHEEL AXLE		01
03	0503010059	33287/33462 ROLLER BEARING		01
04	0503010007	3982/3920 ROLLER BEARING		01
05	0503010050	SEAL 00085-B		01
06	0503012702	KM-12 NUT		02
07	0503012703	LOCK WASHER		01
08	0503010528	SEAL # 00838-B		01
09	0551017794	PROTRACTOR GEAR		01
10	0502012177	14Z FLANG GEAR		01
11	0503010397	5/16" X 1-3/4" BOLT		06
12	0503011444	SPRING WASHER		06
13	0503011052	1.1/4" X 0.77" CASTLE NUT		02
14	0501010694	FLAT WASHER		06
15	0503010002	1800 GREASE FITTING		01

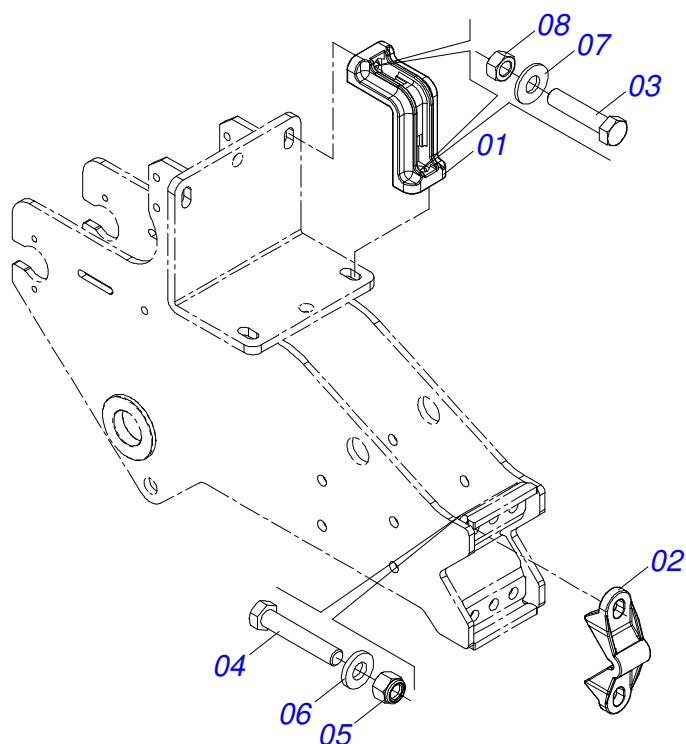 


Item	Code	Description	See page	QT
01	0502012400	ROW FERTILIZER FIXER		04
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		04
03	0503010797	3/4" X 4" BOLT		08
04	0503016485	BOLT 3/4		08
05	0503010152	3/4" SELF LOCKING NUT		08
06	0541010763	FLAT WASHER		08
07	0501010322	FLAT WASHER		08
08	0503011255	3/4" LOCK NUT		08

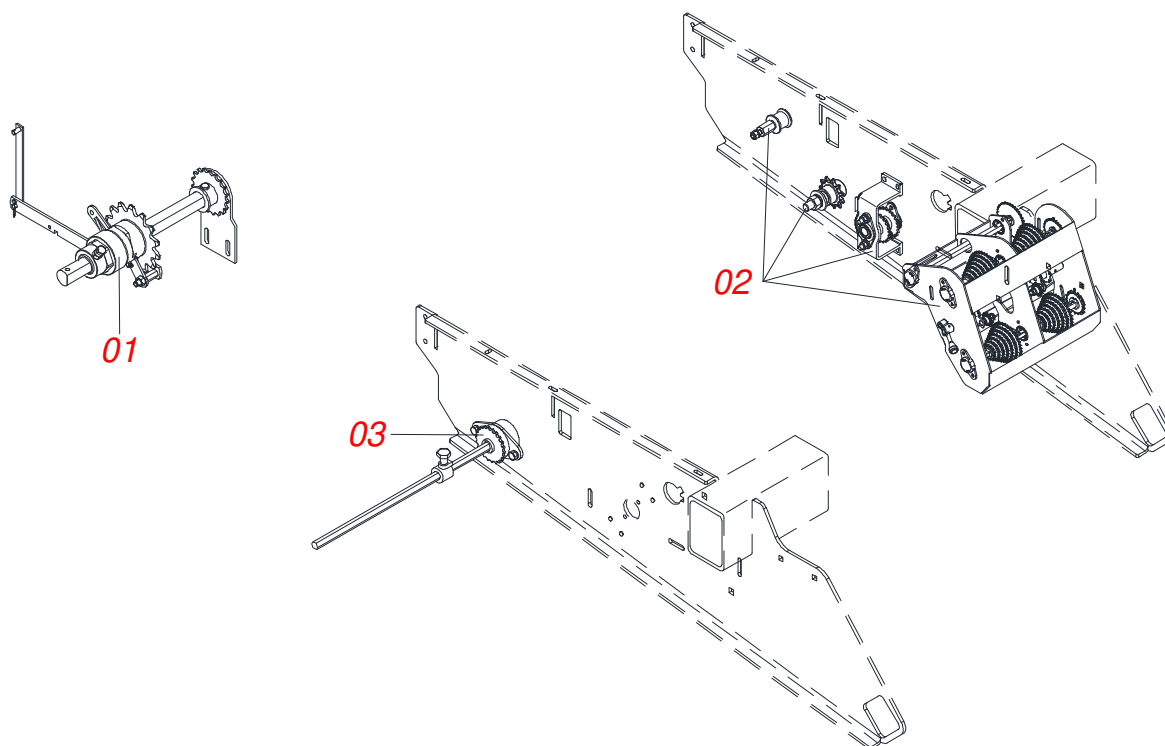 

Item	Code	Description	See page	QT
01	0511053898	SET OF INTERNAL TRANSMISSION	8	01
02	0511053897	TRANSMISSION ASSEMBLY	9	01
03	0511053915	HEXAGONAL SHAFT ASSEMBLY	14	01

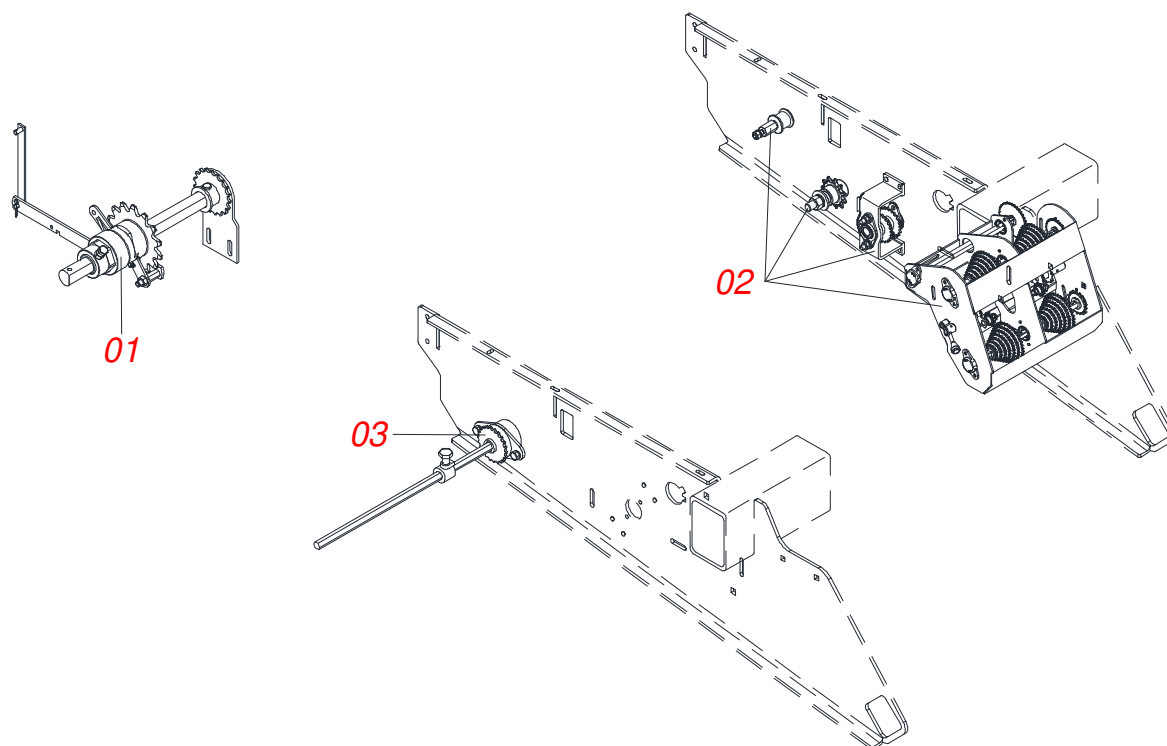 

Item	Code	Description	See page	QT
01	0511053898	SET OF INTERNAL TRANSMISSION	8	01
02	0511053897	TRANSMISSION ASSEMBLY	9	01
03	0511053886	HEXAGONAL AXLE ASSEMBLY	15	01

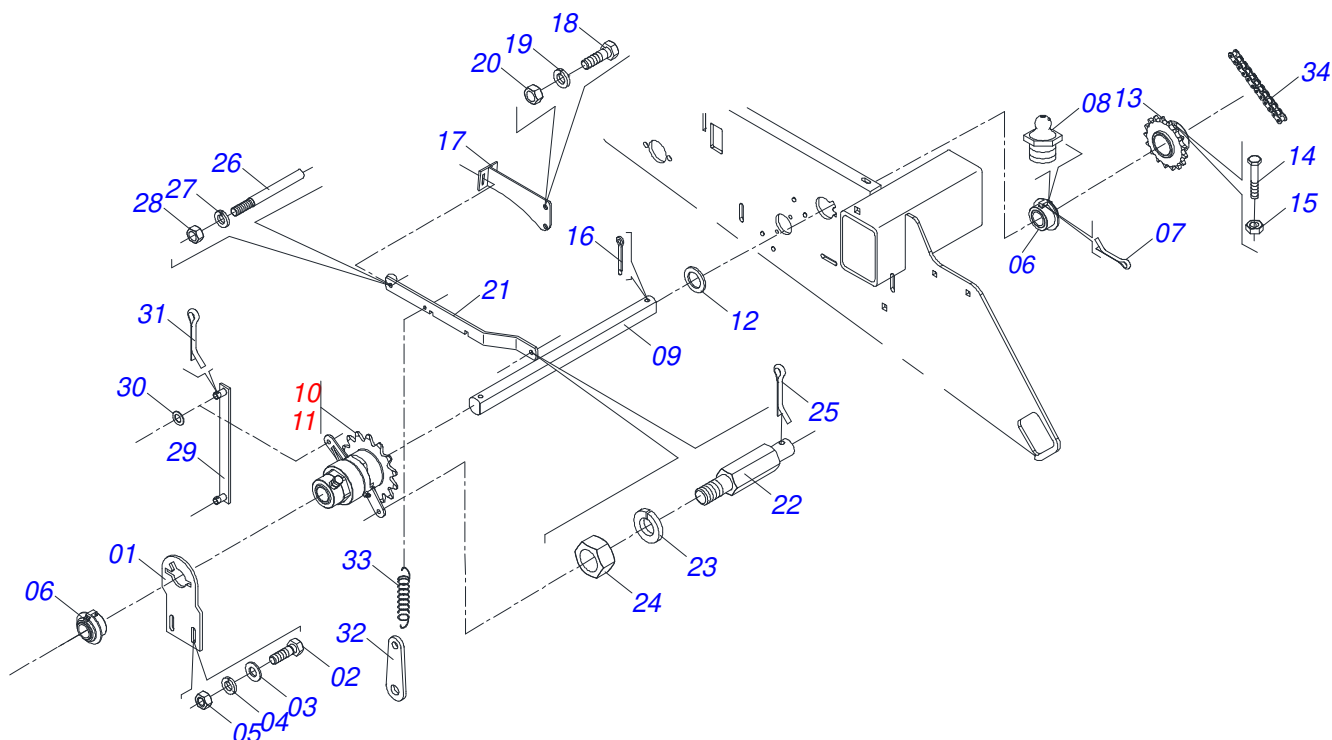 

Item	Code	Description	See page	QT
01	0531019365	PLATE FIXER BEARING AXIS	02	
02	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN	04	
03	0511017302	FLAT WASHER	04	
04	0503010019	1/2" SPRING WASHER	04	
05	0503010060	1/2" NUT	04	
06	0501110639	BEARING	04	
07	0503010257	1/8" X 1" COTTERPIN	04	
08	0503010002	1800 GREASE FITTING	04	
09	0561015384	518 MOTOR SHAFT	02	
10	0511040424	RH TRANSMISSION DRIVING ASSY	01	
11	0501049265	LH TRANSMISSION DRIVING ASSY	01	
12	0501018466	FLAT WASHER	08	
13	0511064105	17Z P 5/8" RH 1.4" GEAR	02	
14	0503010937	5/16" X 3" BOLT	02	
15	0503010337	5/16" NUT	04	
16	0503010010	1/4" X 2.1/2" COTTERPIN	02	
17	0511061896	RATCHET DISMANTLE SUPPORT	02	
18	0503010395	1/2" X 1-1/4" BOLT	04	
19	0503010019	1/2" SPRING WASHER	04	
20	0503010060	1/2" NUT	04	
21	0521018428	ASSEMBLE AND DISASSEMBLE ARM	02	
22	0521015800	REAR LEVER FASTENER	02	
23	0503010025	3/8" SPRING WASHER	02	
24	0503010026	3/8" NUT	02	
25	0503010140	1/8" X 3/4" COTTERPIN	02	
26	0521018560	HANDLE LEVER	02	
27	0503010019	1/2" SPRING WASHER	02	
28	0503010060	1/2" NUT	02	
29	0511065949	ASSEMBLE AND DISASSEMBLE ARM	02	
30	0501010984	FLAT WASHER	04	
31	0503010140	1/8" X 3/4" COTTERPIN	04	



COP CA - 07/09 LINES

(UP TO 03/2022)

Page 8


SET OF INTERNAL TRANSMISSION

0511053898

Item	Code	Description	See page	QT
32	0541014046	SPRING HITCH		02
33	0503030242	0.8" X 4.7" X 0.08" TRACTION SPRING		02
34	0503012708	2050 CHAIN X 34 LINKS + REDUCTION		02

TRANSMISSION ASSEMBLY

 
0511053897

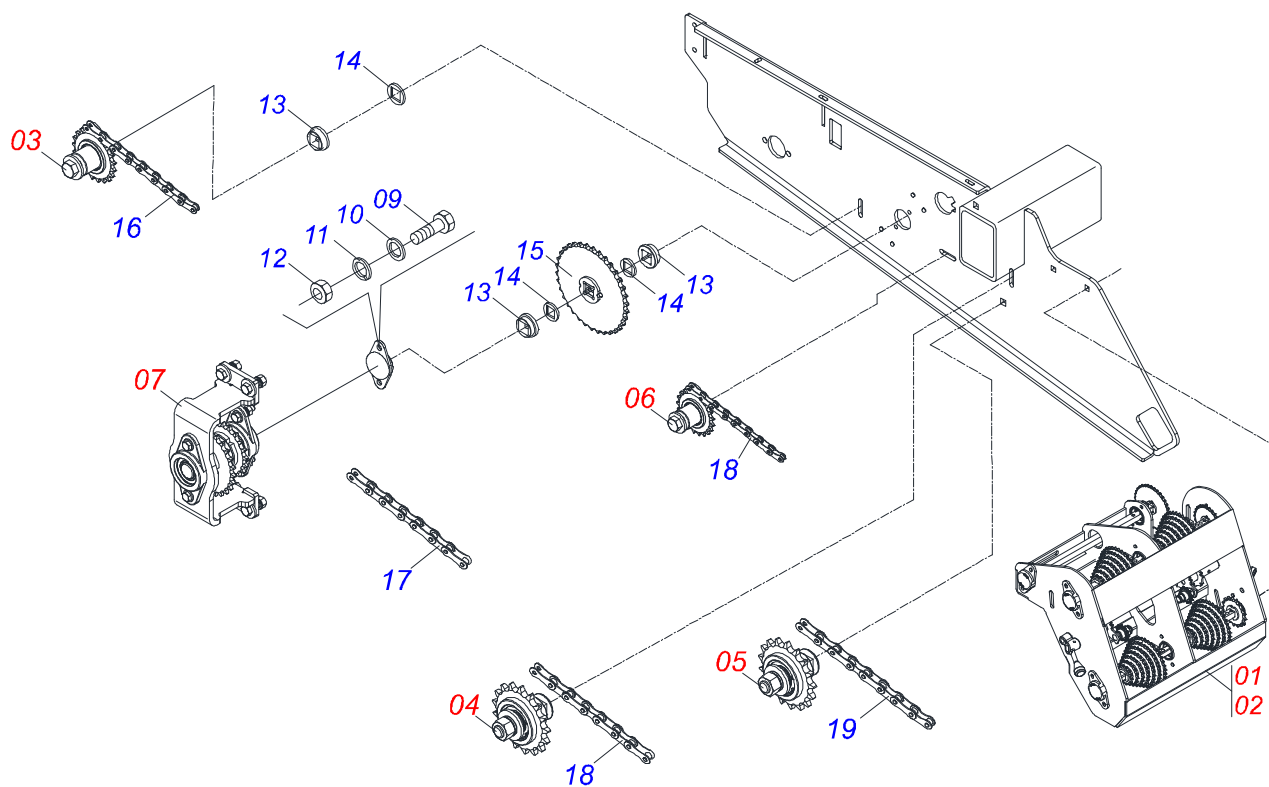

Item	Code	Description	See page	QT
01	0511048348	RIGHT GEAR BOX ASSY	10	01
02	0511048349	RIGHT GEAR BOX ASSY	12	01
03	0501054655	CHAIN TENSIONER ASSY		02
04	0501054686	GEAR BOX CHAIN TENSIONER		02
05	0501052788	CHAIN TENSIONER ASSY		02
06	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY		02
07	0501053846	MIDDLE BEARING OF THE TRANSMISSION		02
08	0561014215	BEARING COVER LOWER ROW FRAME		02
09	0503010365	NUT		04
10	0501010694	FLAT WASHER		04
11	0503010179	LOCK WASHER		04
12	0503010337	5/16" NUT		04
13	0503030303	SUPPORT WASHER		04
14	0501010637	FLAT WASHER		04
15	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		02
16	0503016852	50-1 X 85 CHAIN LINK + MENDING		02
17	0503015364	40-1 X 51 CHAIN LINK + MENDING		02
18	0503012390	40-1 CHAIN X 93 LINK + MENDING		02
19	0503013214	40-1 CHAIN X 97 LINK + MENDING		02

RIGHT GEAR BOX ASSY

 0511048348

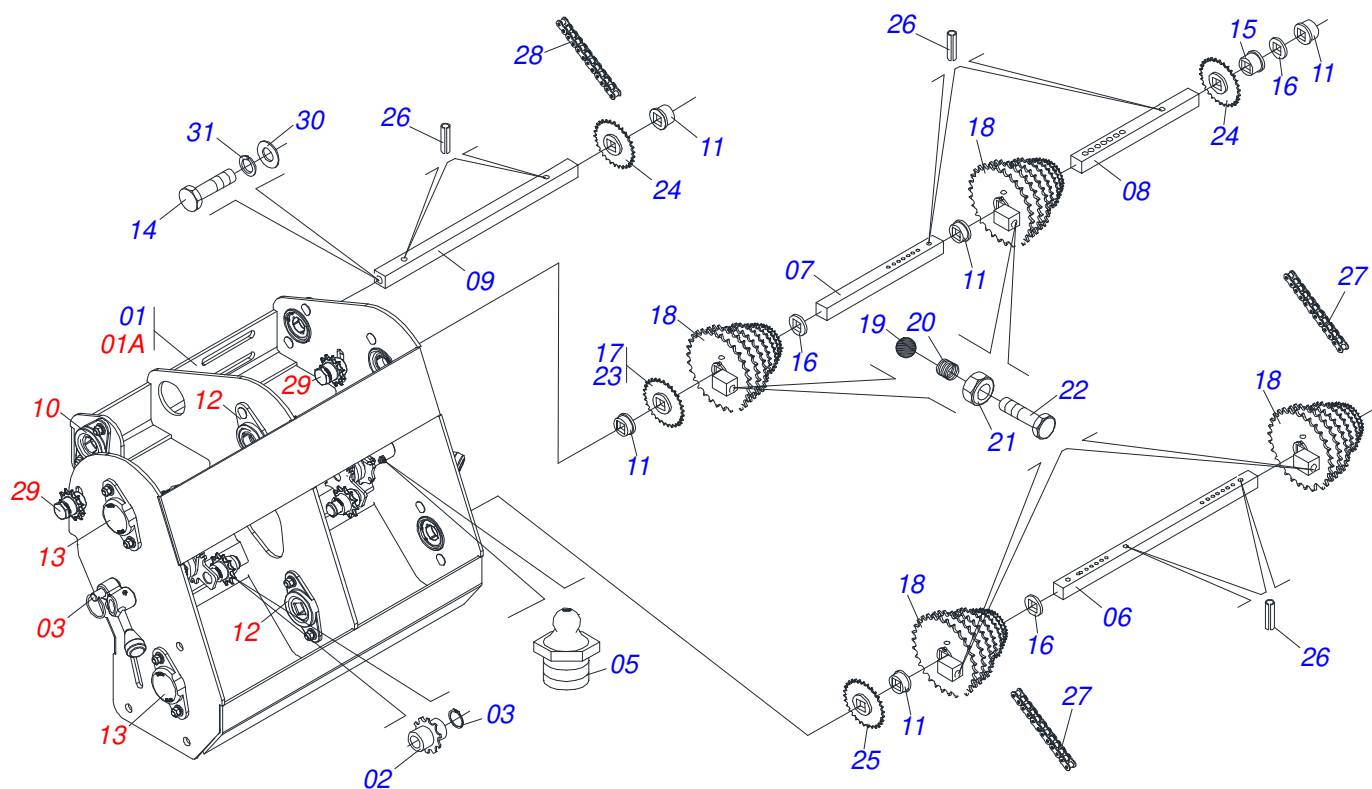

Item	Code	Description	See page	07 09
001	0511050639	RIGHT GEAR BOX ASSY		01
001A	0501058212	SEMI MOUNTED RIGHT CHANGE	11	01
002	0503031805	11Z 1/2" GEAR		04
003	0503010302	501019 SEAL RING		04
004	0501048790	AXLE WITH RING		02
005	0503010002	1800 GREASE FITTING		02
006	0551018209	DRIVING AXLE		01
007	0521018259	DRIVEN AXLE		01
008	0551018210	DRIVEN AXLE		01
009	0551018211	INTERM SHAFT		01
010	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING		01
011	0503030303	SUPPORT WASHER		05
012	0501056443	GEAR HOUSING BEARING		02
013	0501056271	GEARBOX CLOSED BEARING		05
014	0503010256	3/8" X 3/4" BOLT		01
015	0503030275	AGRICULTURAL BEARING		01
016	0521018630	1.4" X SQUARE 0.8" WASHER		03
017	0511061822	25Z P0.5" GEAR SQUARE HOL		01
018	0502040868	GEAR CONE REPLACEMENT		04
019	0503012389	1/2 BALL		04
020	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
021	0503010060	1/2" NUT		04
022	0503010395	1/2" X 1-1/4" BOLT		04
023	0521062072	33Z GEAR		01
024	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
025	0511067501	26Z GEAR		01
026	0503010292	0.2" X 1.6" SPRING PIN		07
027	0503012204	40-1 CHAIN X 82 LINK + RED		02
028	0503012713	40-1 CHAIN X 45 LINK + MEN		01
029	0501054655	CHAIN TENSIONER ASSY		02
030	0501010984	FLAT WASHER		01



COP CA - 07/09 LINES


(UP TO 03/2022)

Page 10


RIGHT GEAR BOX ASSY

0511048348

Item	Code	Description	See page	07 09
031	0503010025	3/8" SPRING WASHER		01

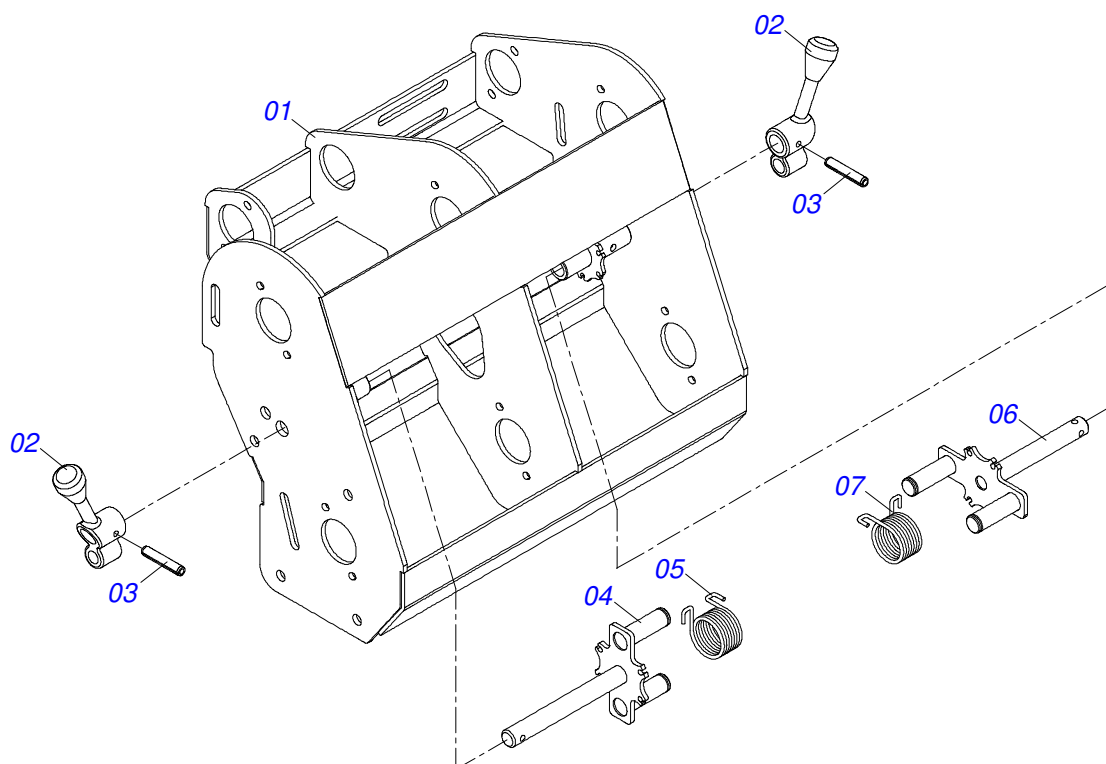 

Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

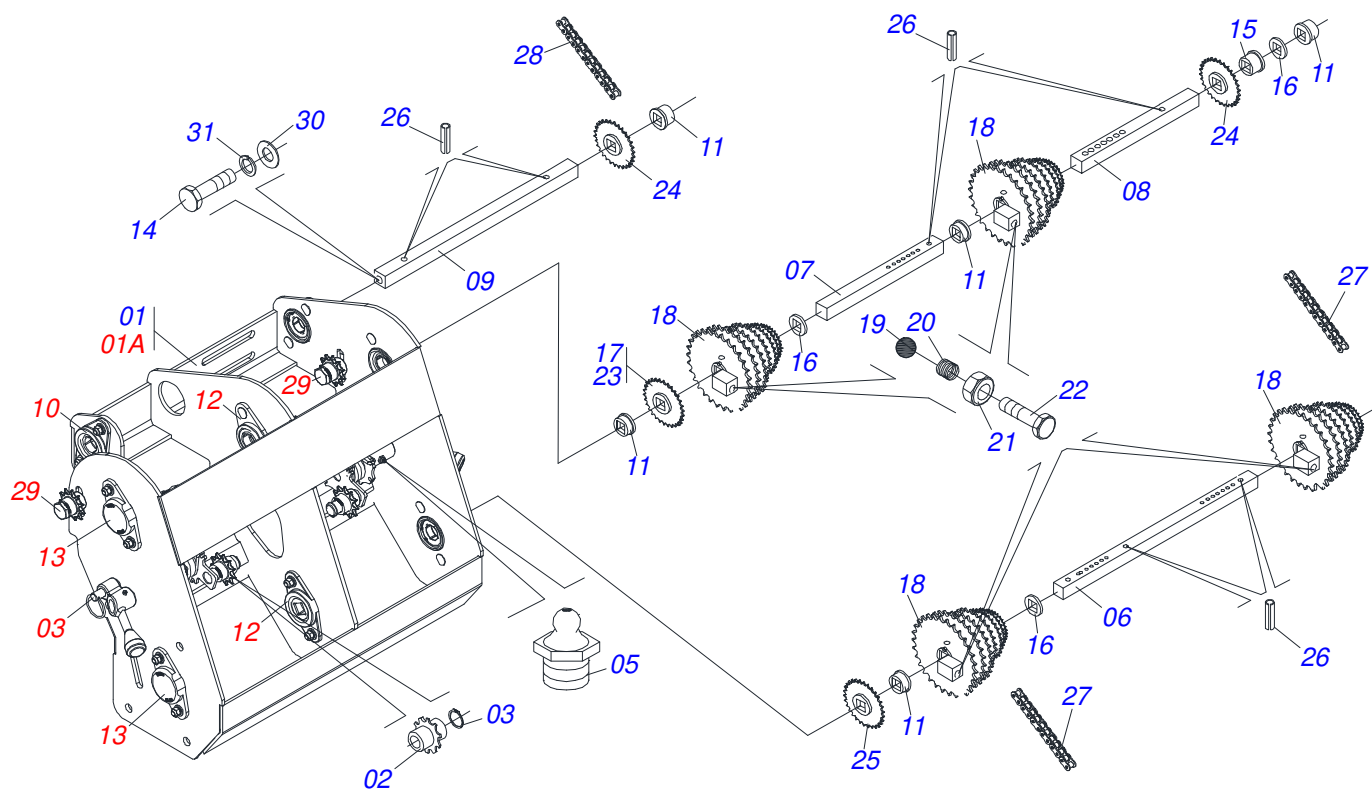 

Item	Code	Description	See page	07 09
01	0501058213	LH GEAR BOX	13	01 01
01A	0501058213	LH GEAR BOX	13	01 01
02	0503031805	11Z 1/2" GEAR		12 12
03	0503010302	501019 SEAL RING		04 04
04	0501048790	AXLE WITH RING		02 02
05	0503010002	1800 GREASE FITTING		02 02
06	0551018209	DRIVING AXLE		01 01
07	0521018259	DRIVEN AXLE		01 01
08	0551018210	DRIVEN AXLE		01 01
09	0551018211	INTERM SHAFT		01 01
10	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING		01 01
11	0503030303	SUPPORT WASHER		05 05
12	0501056443	GEAR HOUSING BEARING		02 02
13	0501056271	GEARBOX CLOSED BEARING		05 05
14	0503010256	3/8" X 3/4" BOLT		01 01
15	0503030275	AGRICULTURAL BEARING		01 01
16	0521018630	1.4" X SQUARE 0.8" WASHER		03 03
17	0511061822	25Z P0.5" GEAR SQUARE HOL		01 01
18	0511060396	DRIVE/DRIVEN AXLE CONE		08 08
19	0503012389	1/2 BALL		04 04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04 04
21	0503010060	1/2" NUT		04 04
22	0503010395	1/2" X 1-1/4" BOLT		04 04
23	0511061822	25Z P0.5" GEAR SQUARE HOL		01 01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02 02
25	0501069874	GEAR 17Z P 15,87 FQ 3/4		02 02
26	0503010292	0.2" X 1.6" SPRING PIN		07 07
27	0503012204	40-1 CHAIN X 82 LINK + RED		04 04
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01 01
29	0501054655	CHAIN TENSIONER ASSY		04 04
30	0501010984	FLAT WASHER		02 02



COP CA - 07/09 LINES


(UP TO 03/2022)

Page 12


RIGHT GEAR BOX ASSY

0511048349


Item	Code	Description	See page	07 09
31	0503010025	3/8" SPRING WASHER		01 01

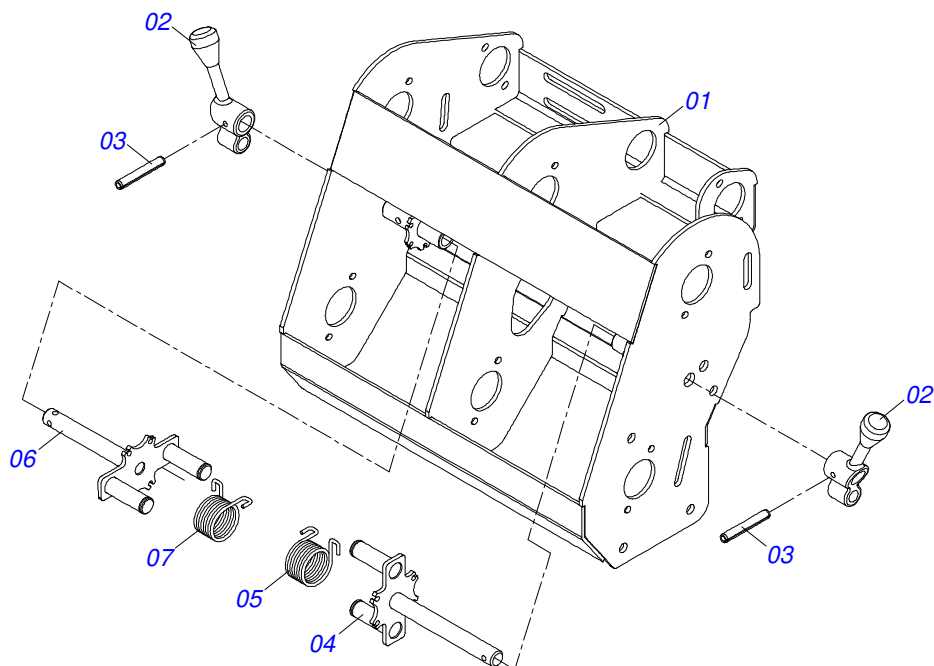 


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

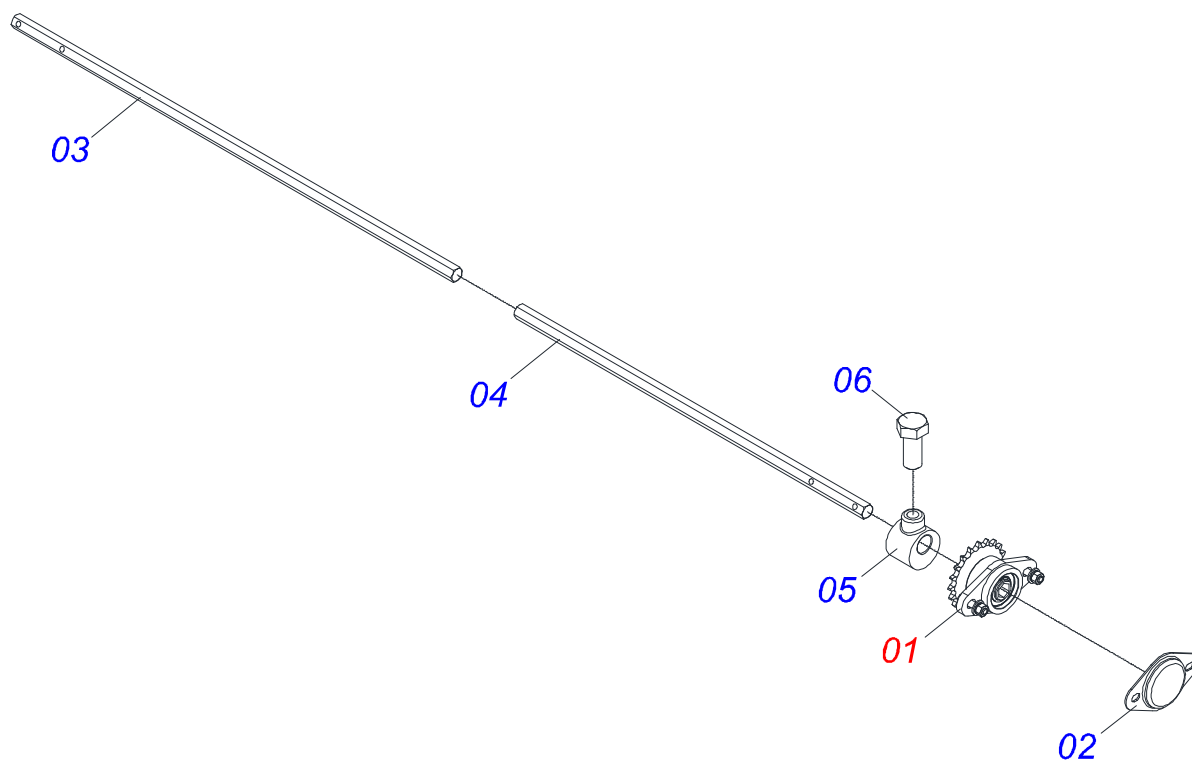 

Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		02
02	0561014215	BEARING COVER LOWER ROW FRAME		02
03	0531016940	5/8 X 1650 RIGHT HEX AXLE		01
04	0531016941	LEFT 5/8" X 59" AXLE HEX		01
05	0502040534	SPRING GUIDE BUSHING LOCK		04
06	0501018535	1/2 X 1 BOLT		04

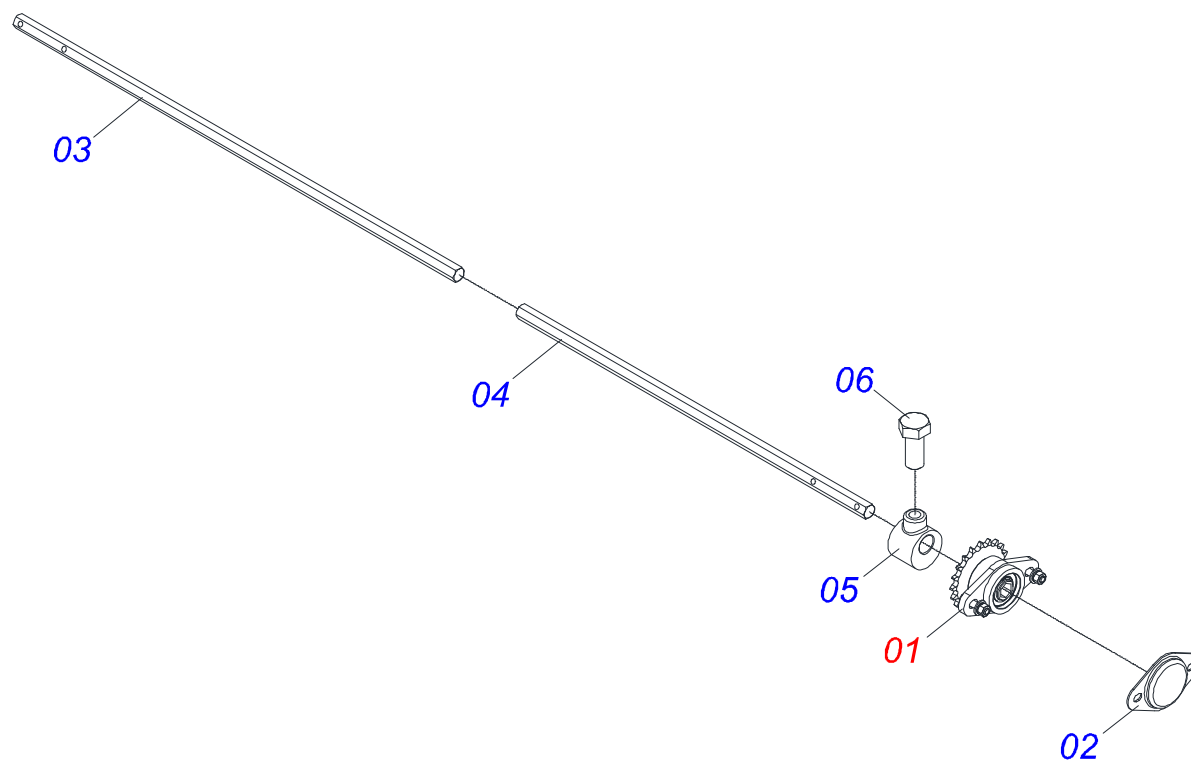 


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		02
02	0561014215	BEARING COVER LOWER ROW FRAME		02
03	0561018823	5/8" X 2250 MOTOR SHAFT		01
04	0531016942	RIGHT HEX AXLE 5/8 X 2050		01
05	0502040534	SPRING GUIDE BUSHING LOCK		04
06	0501018535	1/2 X 1 BOLT		04

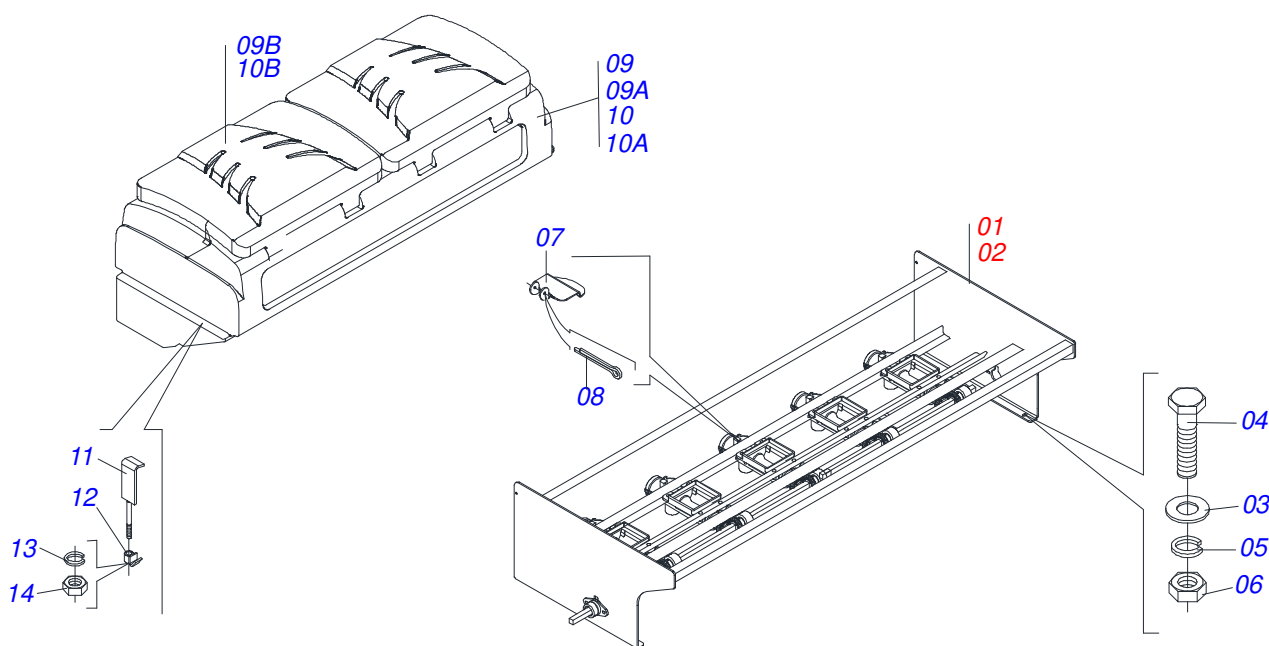 


Item	Code	Description	See page	QT
001	0511051077	SUPPORT RIGHT BOX FERTILIZER WITH DISTRIBUTOR	18	01
002	0511051078	SUPPORT LEFT BOX FERTILIZER WITH DISTRIBUTOR	19	01
003	0501010984	FLAT WASHER		16
004	0503010849	3/8" X 1-1/2" BOLT		08
005	0503010025	3/8" SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0571010590	FERTILIZER SIDE COVER		08
008	0503010362	1/8" X 1.1/4" COTTERPIN		08
009	0503060636	COVER BOX RIGHT FERTILIZER		01
009A	0503031948	SILO RIGHT FERTILIZER		01
009B	0503031950	TUBE SILO FERTILIZER		02
010	0503060637	COVER BOX LEFT FERTILIZER		01
010A	0503031949	SILO LEFT FERTILIZER		01
010B	0503031950	TUBE SILO FERTILIZER		02
011	0511062099	FERTILIZER BEAM CLAMP		04
012	0511061886	FERTILIZER BEAM LOCK		04
013	0503010019	1/2" SPRING WASHER		04
014	0503010060	1/2" NUT		04

FERTILIZER BOX ASSEMBLY

 
0511053892

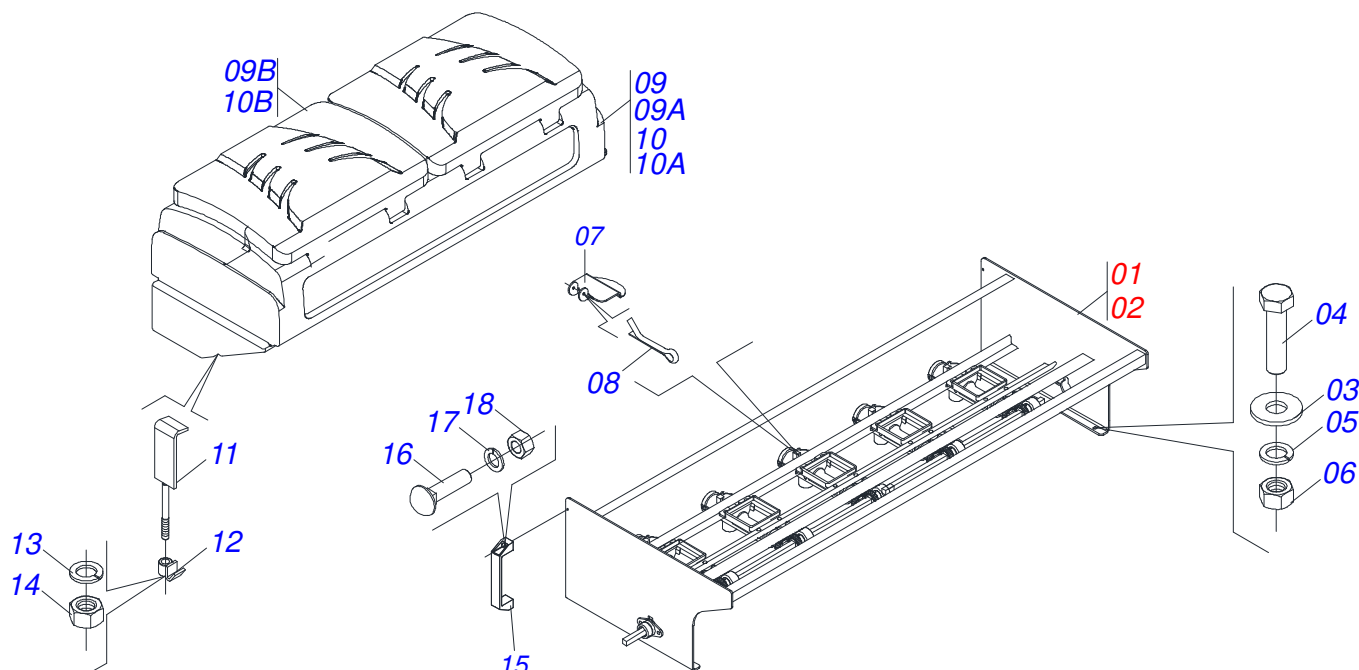


Item	Code	Description	See page	QT
001	0501059656	FERTILIZER SUPORT RIGHT BOX	20	01
002	0501059657	FERTILIZER SUPORT LEFT BOX	21	01
003	0501010984	FLAT WASHER		16
004	0503010849	3/8" X 1-1/2" BOLT		08
005	0503010025	3/8" SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0571010590	FERTILIZER SIDE COVER		10
008	0503010362	1/8" X 1.1/4" COTTERPIN		10
009	0503060640	COVER BOX RIGHT FERTILIZER		01
009A	0503031954	SILO RIGHT FERTILIZER		01
009B	0503031956	TUBE SILO FERTILIZER		02
010	0503060641	COVER BOX LEFT FERTILIZER		01
010A	0503031955	SILO LEFT FERTILIZER		01
010B	0503031956	TUBE SILO FERTILIZER		02
011	0511062099	FERTILIZER BEAM CLAMP		04
012	0511061886	FERTILIZER BEAM LOCK		04
013	0503010019	1/2" SPRING WASHER		04
014	0503010060	1/2" NUT		04
015	0503011957	NYLON LUG		02
016	0503010371	5/16" X 1" BOLT		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04

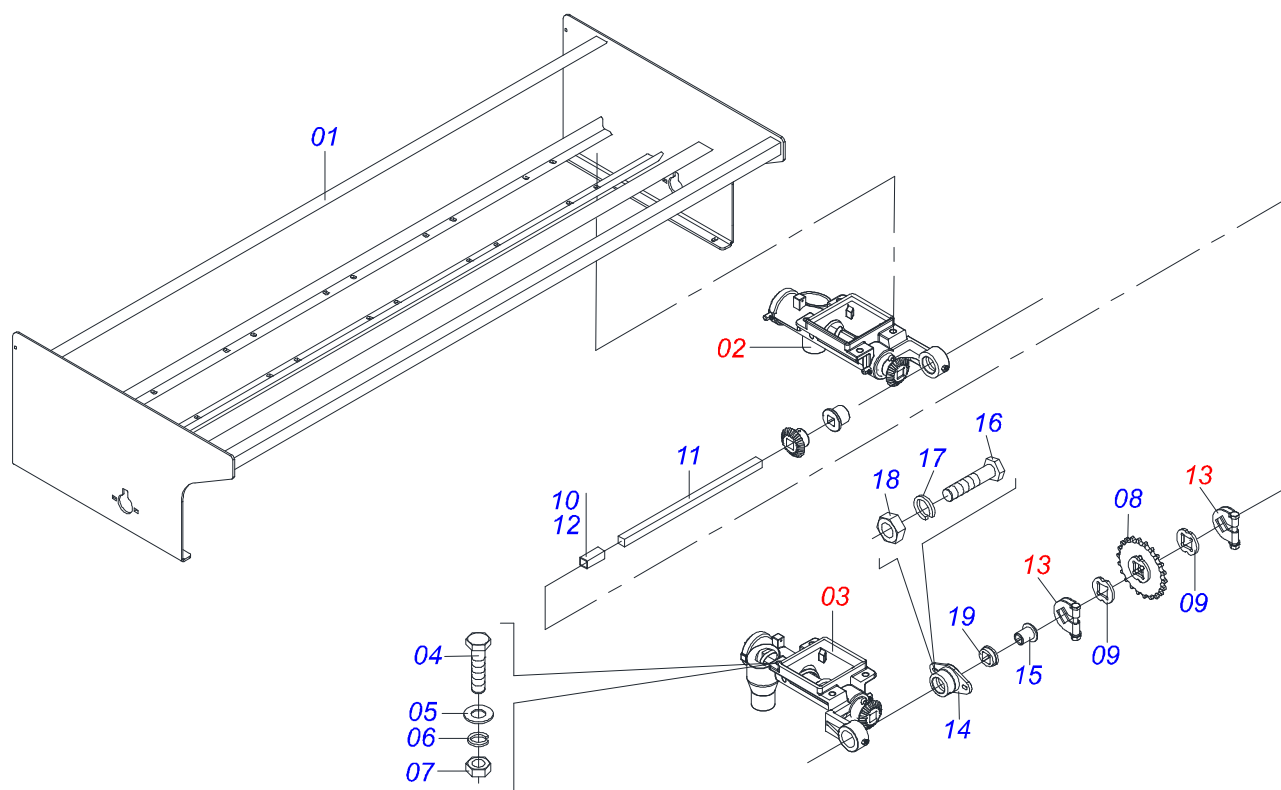 


Item	Code	Description	See page	QT
01	0521062410	RH BEAM SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	22	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	23	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	FLAT WASHER		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0501018700	3/4" X 58"SQUARE SHAFT		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

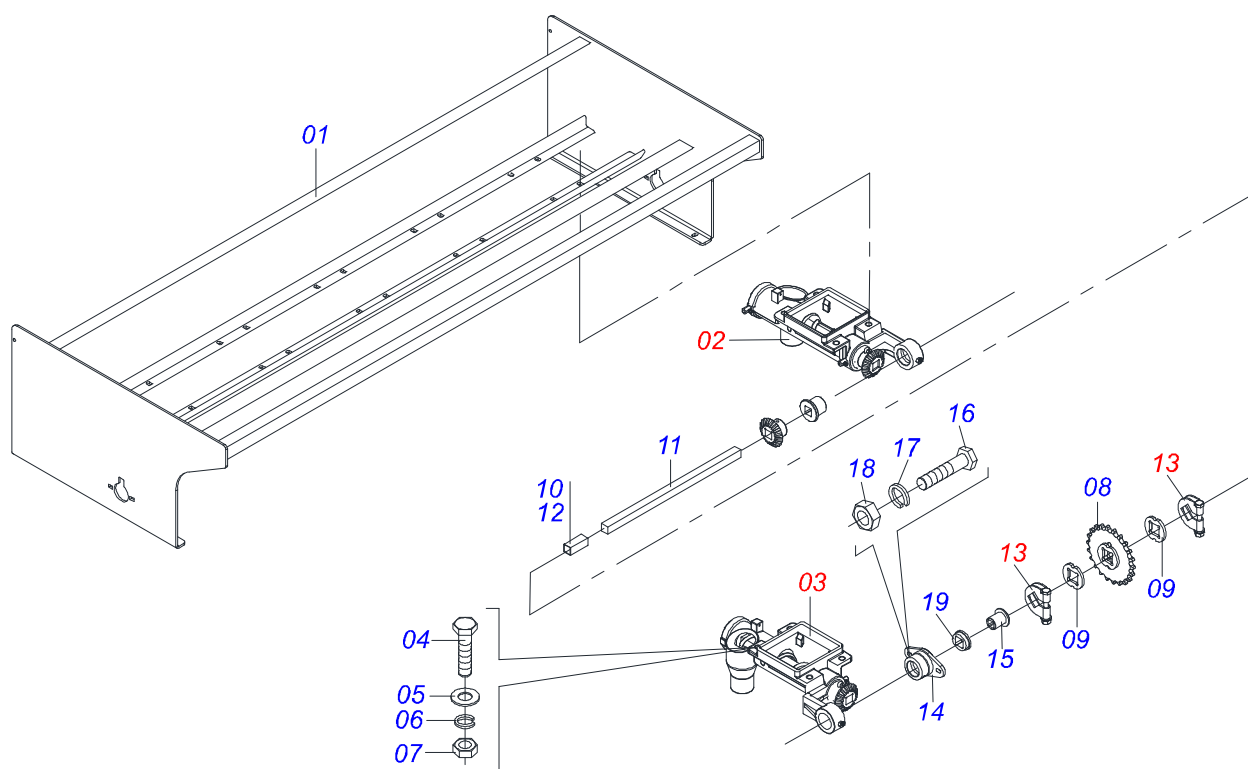 

Item	Code	Description	See page	QT
01	0521062412	LH BEAM SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	22	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	23	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	FLAT WASHER		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		02
11	0501018700	3/4" X 58"SQUARE SHAFT		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

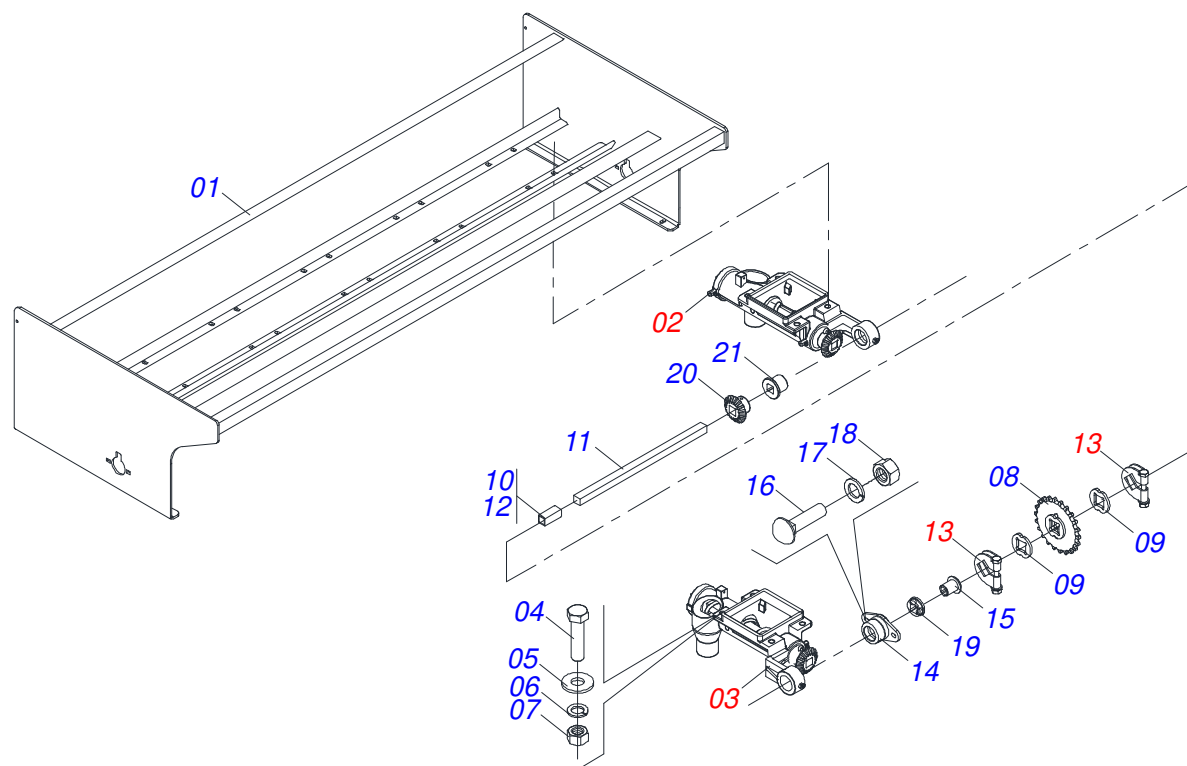 


Item	Code	Description	See page	QT
01	0521061324	BOX FERTILIZER SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	22	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	23	03
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		20
05	0501010984	FLAT WASHER		20
06	0503011443	3/8" SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0511010866	RIGHT AXLE		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01
20	0502012990	CONICA 14Z SQUARE GEAR		05
21	0503030275	AGRICULTURAL BEARING		05

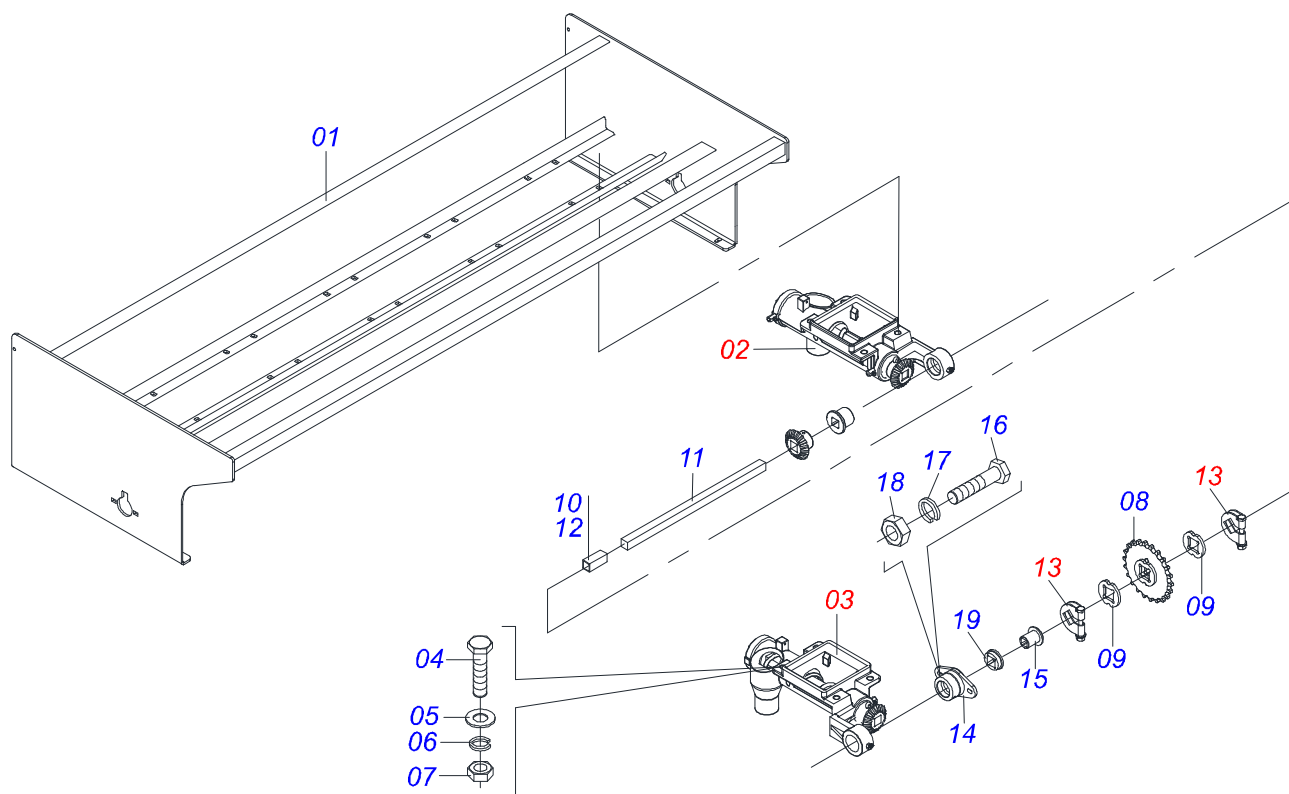 


Item	Code	Description	See page	QT
01	0521061325	FERTILIZER SUPORT LEFT BOX		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	22	03
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	23	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		20
05	0501010984	FLAT WASHER		20
06	0503011443	3/8" SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0511010866	RIGHT AXLE		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

LEFT SIDE FERTILIZER DISTRIBUTOR






 
0511051558

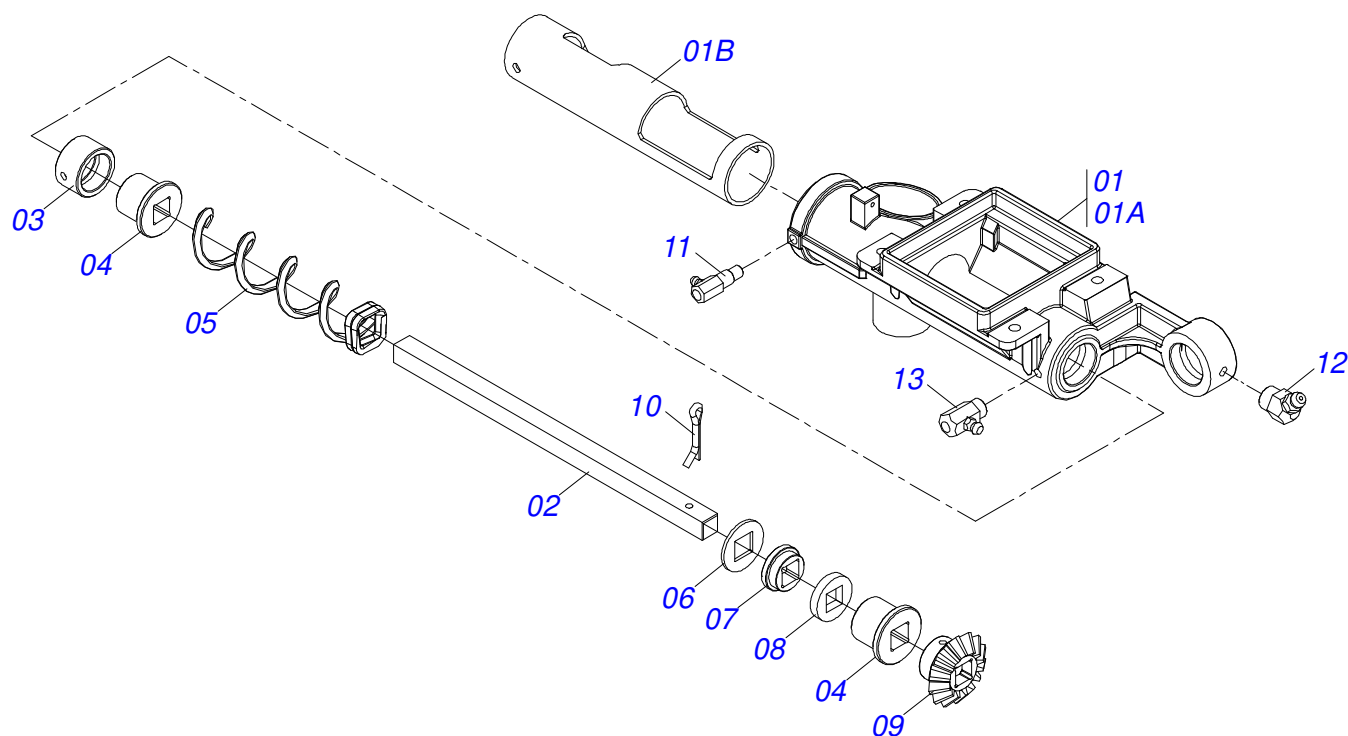







Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

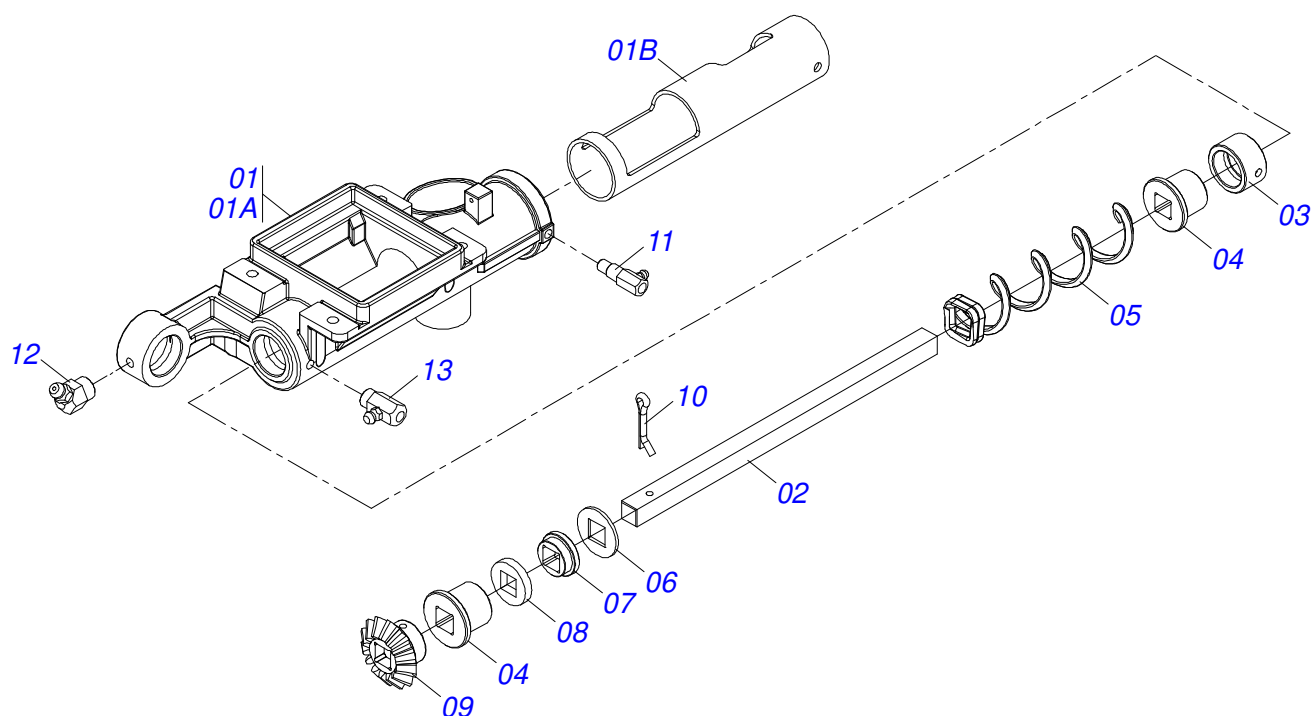 


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

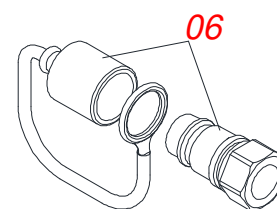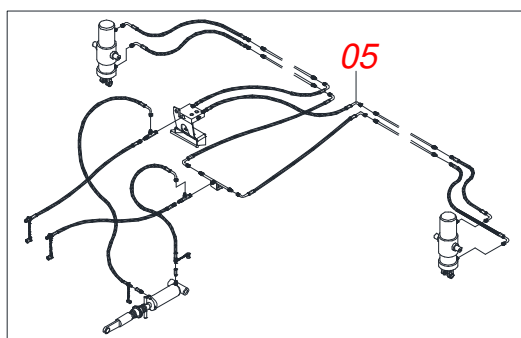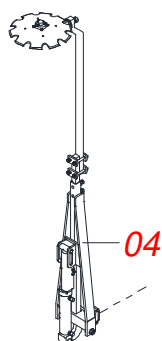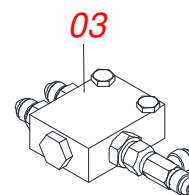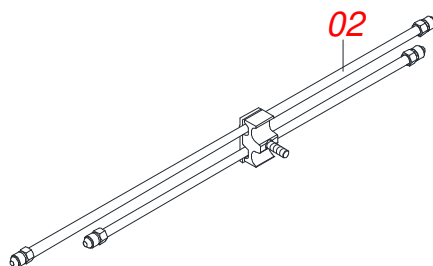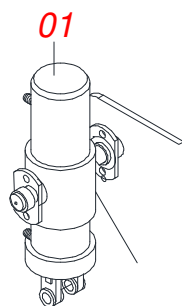      

Item	Code	Description	See page	QT
01	0511053894	HYDRAULIC CYLINDER ASSEMBLY	26	01
02	0511053920	OIL PIPE ASSEMBLY	28	01
03	0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	29	01
04	0511052909	HYDRAULIC MARKER	30	01
05	0511052197	WHEELS HOSE ASSEMBLY	33	01
06	0501053834	MALE QUICK COUPLER	34	02

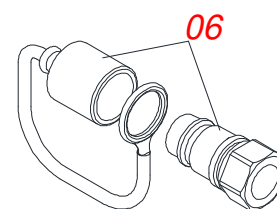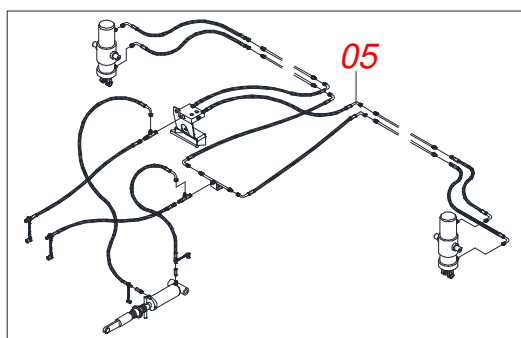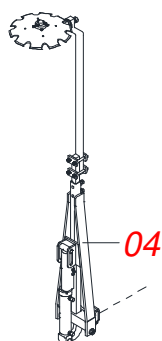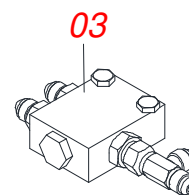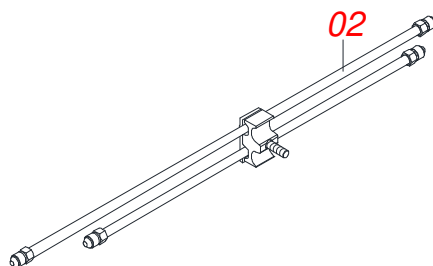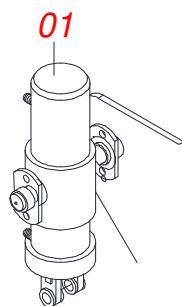      


Item	Code	Description	See page	QT
01	0511053894	HYDRAULIC CYLINDER ASSEMBLY	26	01
02	0511053895	OIL DUCT ASSEMBLY	35	01
03	0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	29	01
04	0511052909	HYDRAULIC MARKER	30	01
05	0511052197	WHEELS HOSE ASSEMBLY	33	01
06	0501053834	MALE QUICK COUPLER	34	02

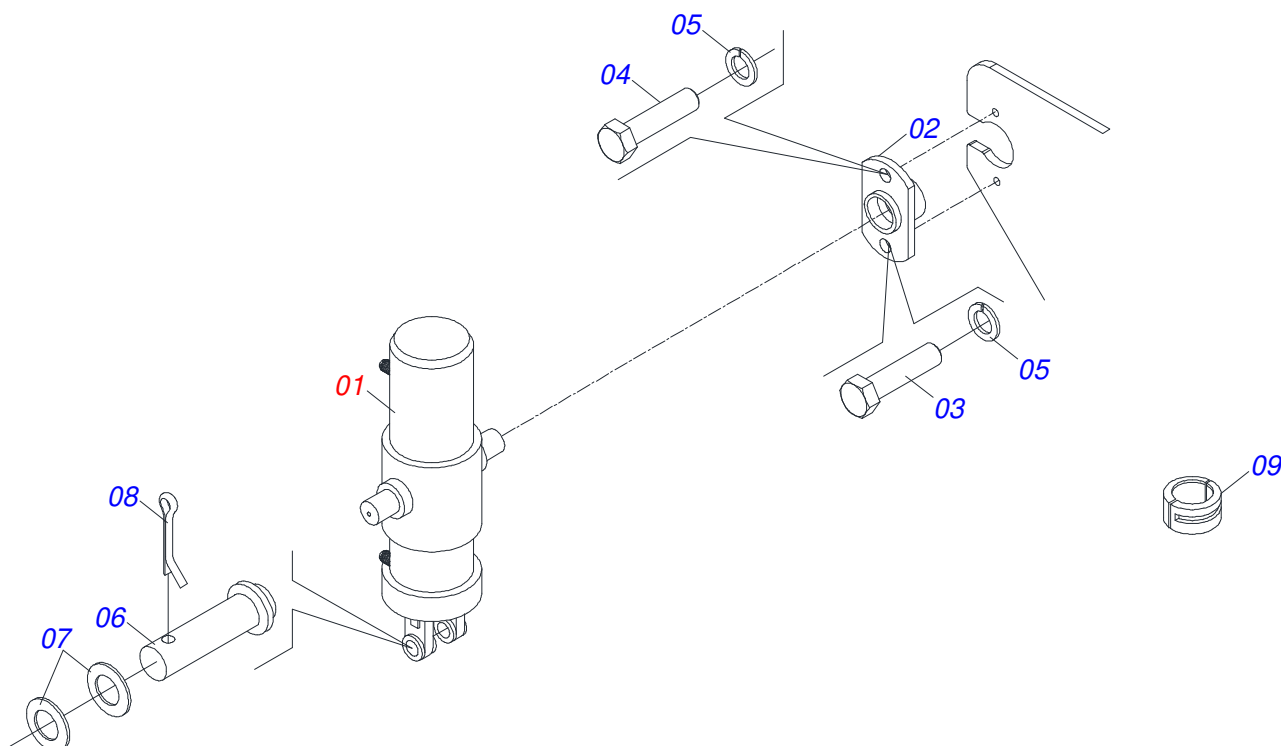 


Item	Code	Description	See page	QT
001	0511058411	HYDRAULIC CYLINDER	27	02
002	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		04
003	0503010834	1/2 X 1 BOLT		06
004	0503010395	1/2" X 1-1/4" BOLT		02
005	0503010019	1/2" SPRING WASHER		08
006	0521010546	1.2" X 5.7" COUPLING SHAFT		02
007	0501017779	32 X 60 X 4.75 FLAT WASHER		04
008	0503010523	1/4" X 2" COTTERPIN		02
009	0501047887	ROD STOP		02

HYDRAULIC CYLINDER

 
0511058411

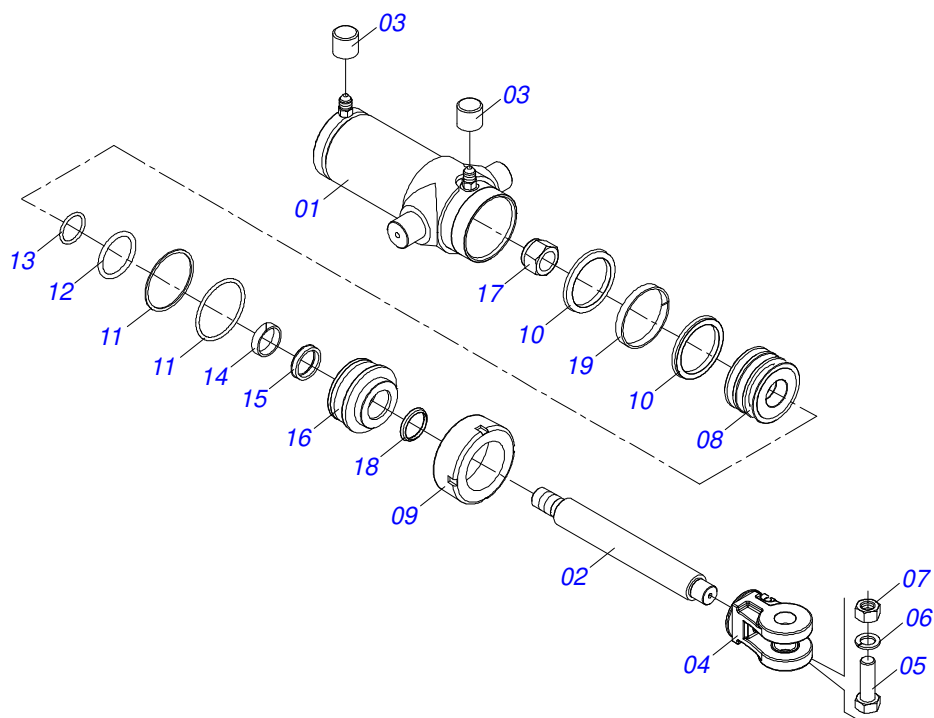


Item	Code	Description	See page	QT
01	0511066774	2.5" X 28" CYLINDER CASE		01
02	0541017674	TURNBUCLE BODY		01
03	0503030385	CYLINDER PLUG N-002		02
04	0511064408	FORK		01
05	0503011094	3/8" X 2" BOLT		01
06	0503010025	3/8" SPRING WASHER		01
07	0503010026	3/8" NUT		01
08	0581010302	RING OF SUPPORT		01
09	0502012822	101.60 END CAP		01
10	0503011061	8-342 BACK-UP RING		02
11	0503010338	2-342 N 3006-9B O'RING		02
12	0503017936	RING		01
13	0503017938	RING GUIDE		01
14	0503017937	GASKET		01
15	0503010761	D-1750 SCRAPER RING		01
16	0581010837	PISTON		01
17	0503010817	1.1/4" SELF LOCKING NUT		01
18	0503015633	SELEMASTER SEALING		01
19	0503018029	2-217 O'RING		01

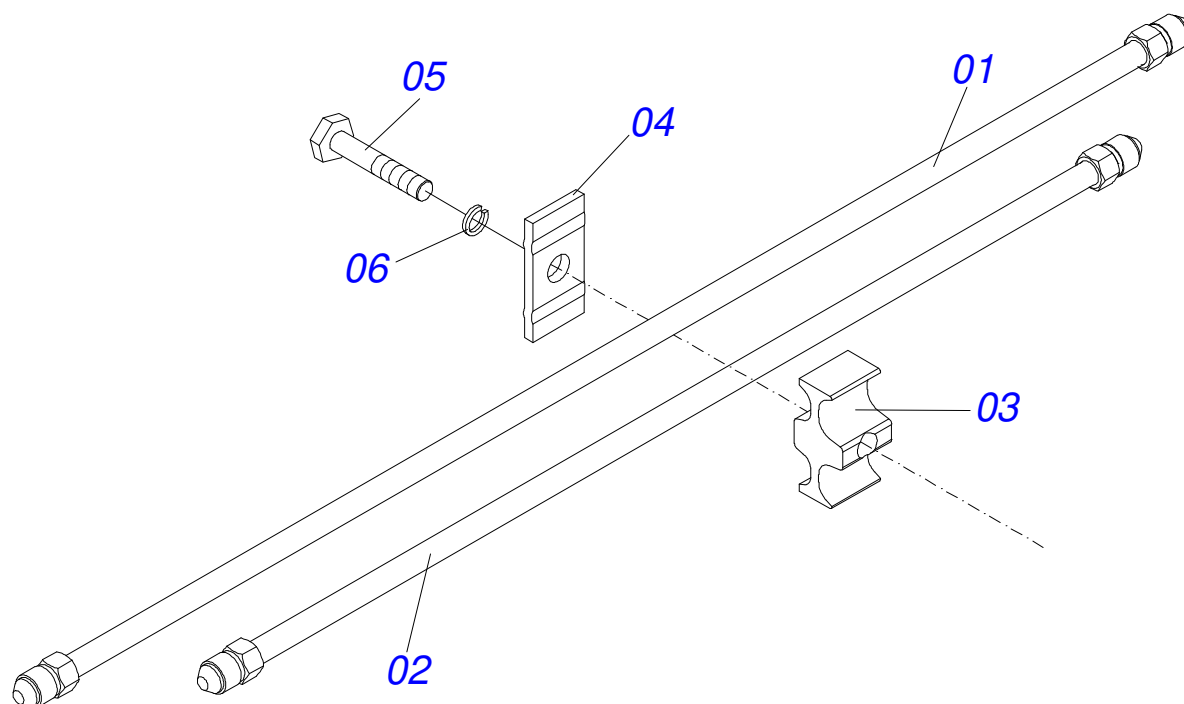 

Item	Code	Description	See page	QT
001	0521062404	OIL TUBE		04
002	0521063408	OIL TUBE		04
003	0502012702	BODY SUPPORT CLAMP		04
004	0531011180	UPPER BODY CLIP		04
005	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
006	0503010180	7/16" SPRING WASHER		04

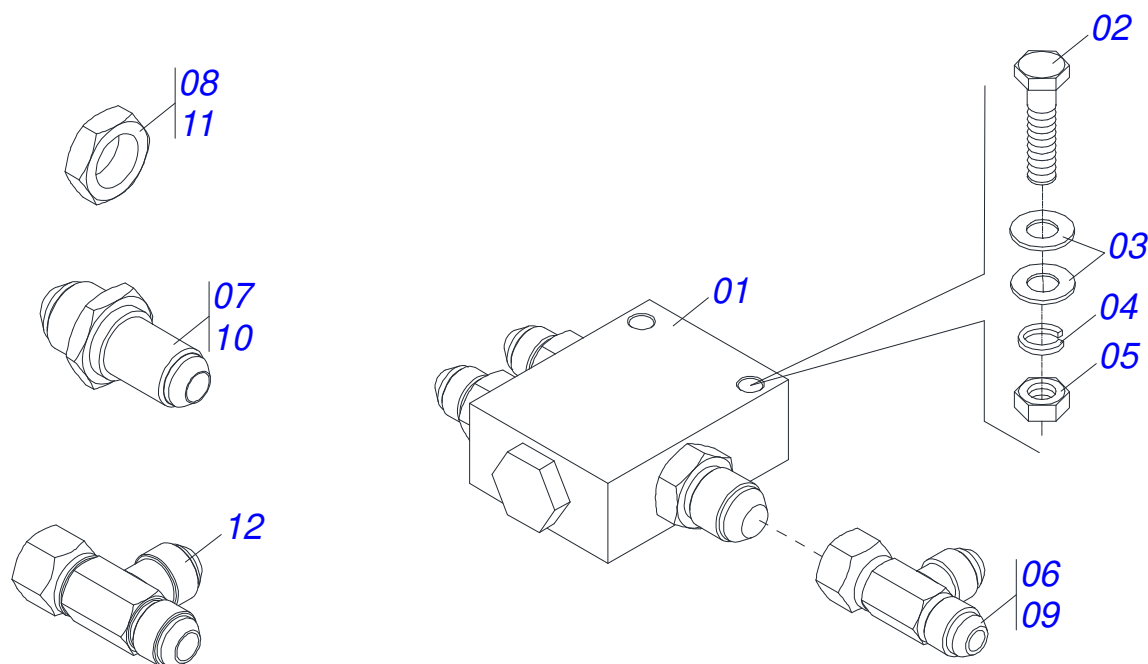 

Item	Code	Description	See page	QT
001	0501054452	FLOW DIVIDING VALVE		01
002	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
003	0501010694	FLAT WASHER		04
004	0503010143	1/4" SPRING WASHER		02
005	0503010144	1/4" NUT		02
006	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
007	0541012166	NIPPLE 3/4" UNF X 7/8"		01
008	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01
009	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
010	0541012166	NIPPLE 3/4" UNF X 7/8"		01
011	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01
012	0503012341	T 7/8" ADAPOR GIRAT NUT		01

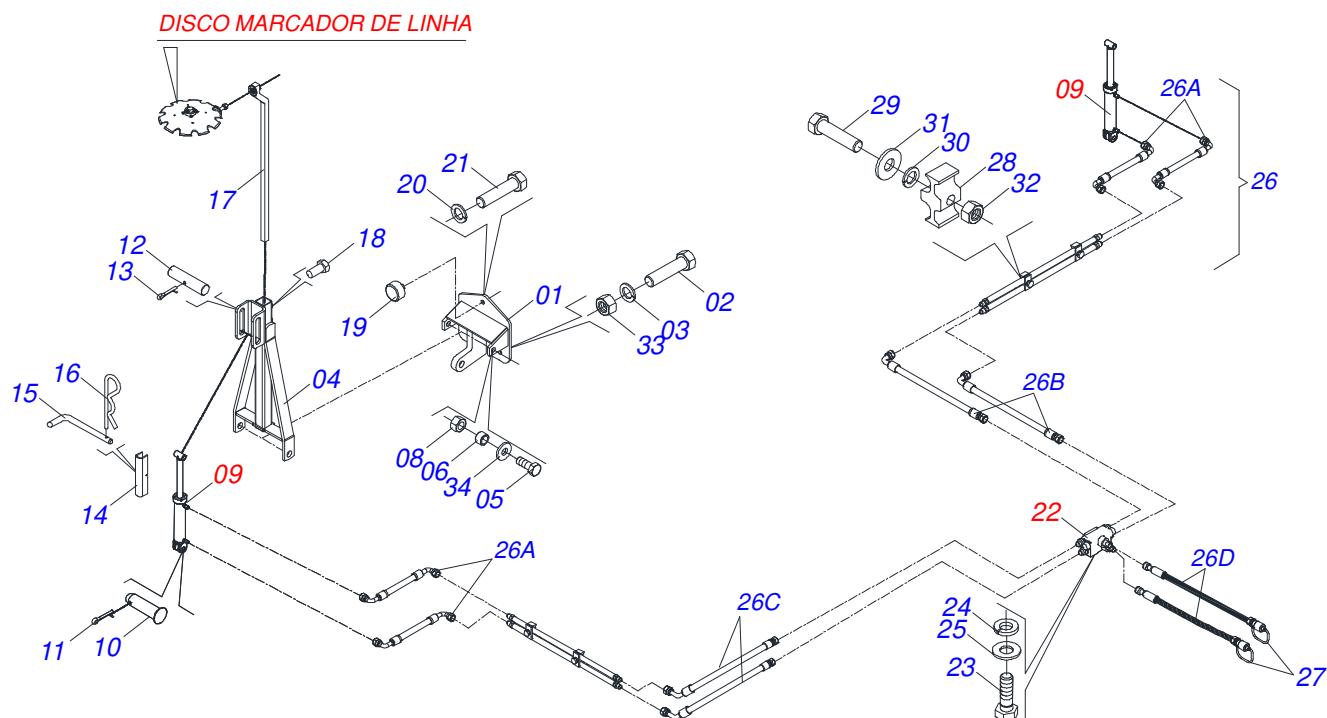 


Item	Code	Description	See page	QT
001	0511065449	ROW MARKER ARM SUPPORT		02
002	0501018059	3/4" X 2-1/4" BOLT		08
003	0503010023	3/4" SPRING WASHER		08
004	0501069470	ROW MARKER ARM		02
005	0503011067	5/8" X 2-1/2" BOLT		04
006	0521010479	SLEEVE ARTICULATION		04
008	0503012795	5/8" HEX SELF ADJUSTING NUT		04
009	0511058449	HYDRAULIC CYLINDER	31	02
010	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
011	0503010571	1/4" X 1.1/2 COTTERPIN		02
012	0511015779	1" X 4.2" AXLE		02
013	0503010523	1/4" X 2" COTTERPIN		02
014	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
015	0501068994	0.3" X 3.1" LOCK PIN		02
016	0503030168	CUPILLA		02
017	0501069643	890 TURNBUCKLE		02
018	0503010962	5/8" X 1-1/4" BOLT		04
019	0503011070	BEATER		02
020	0503010019	1/2" SPRING WASHER		02
021	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
022	0501054649	HBM SEQUENTIAL VALVE		01
023	0503010371	5/16" X 1" BOLT		02
024	0503010179	LOCK WASHER		02
025	0501010694	FLAT WASHER		02
026	0511051082	SET OF HYDRAULIC MARKER HOSES		01
026A	0501080687	3/8 X 1150 TC-TC HOSE ASSY		04
026B	0501080436	3/8 X 1500 TR-TC HOSE		02
026C	0501080402	HOSE 3/8 X 1700 TR-TC		02
026D	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
027	0501053834	MALE QUICK COUPLER	34	02
028	0502012702	BODY SUPPORT CLAMP		02




HYDRAULIC MARKER

0511052909


Item	Code	Description	See page	QT
029	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
030	0503010180	7/16" SPRING WASHER		02
031	0501012803	FLAT WASHER		02
032	0503010244	7/16" NUT		04
033	0503011255	3/4" LOCK NUT		08
034	0501012140	FLAT WASHER		04

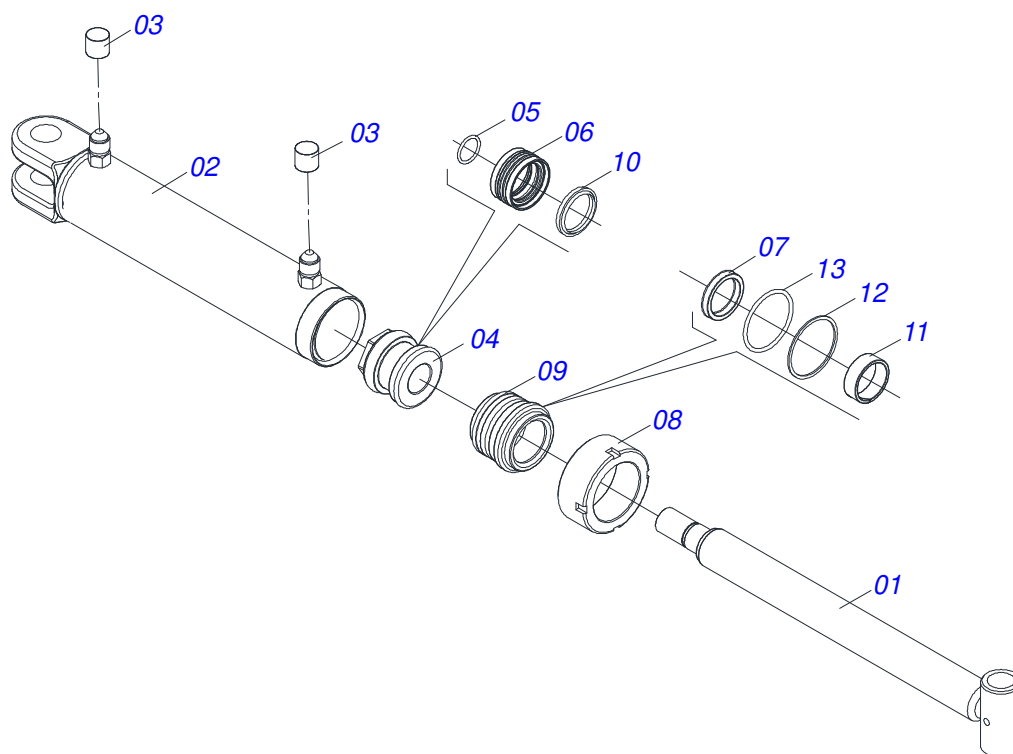 


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

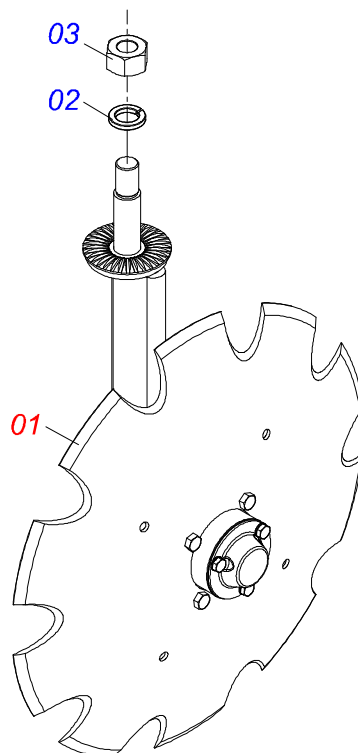 


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

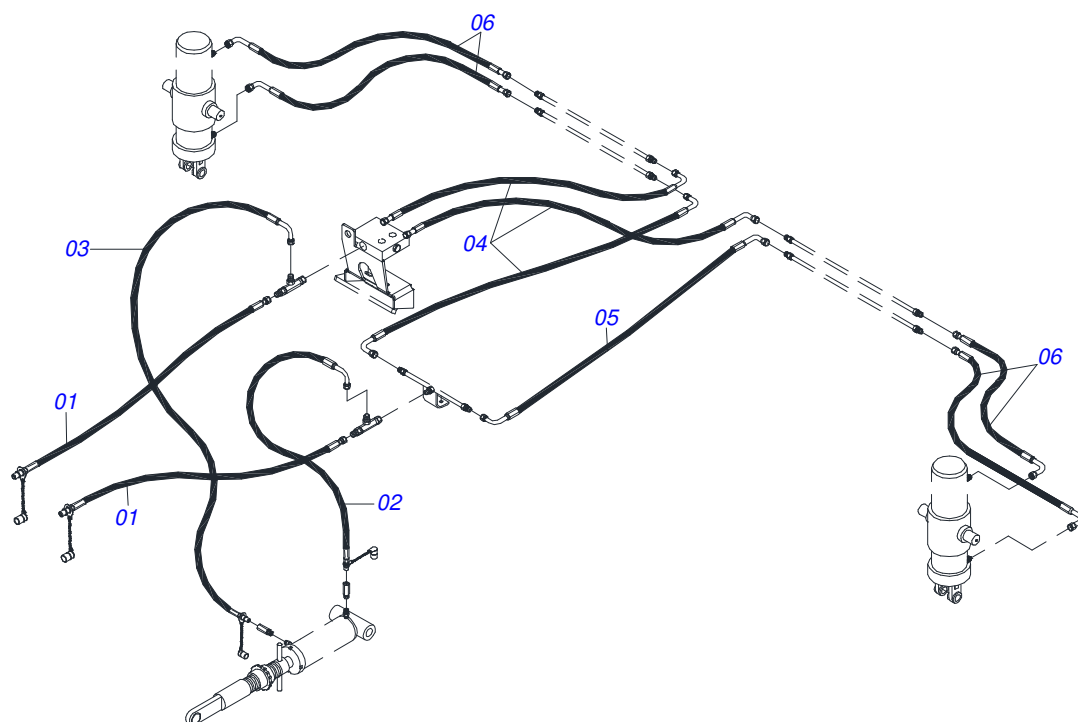 


Item	Code	Description	See page	QT
01	0501080933	HOSE 1/2 X 4200 TR-TM		02
02	0501080116	TR-TM HOSE ASSY		01
03	0501080182	1/2" X 850 TR-TM HOSE ASSY		01
04	0501080396	3/8" X 45" HOSE		03
05	0501080687	3/8 X 1150 TC-TC HOSE ASSY		01
06	0501080054	3/8" X 17" TR-TC HOSE ASSY		04

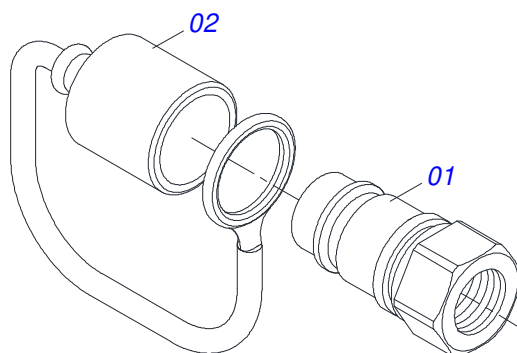 


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

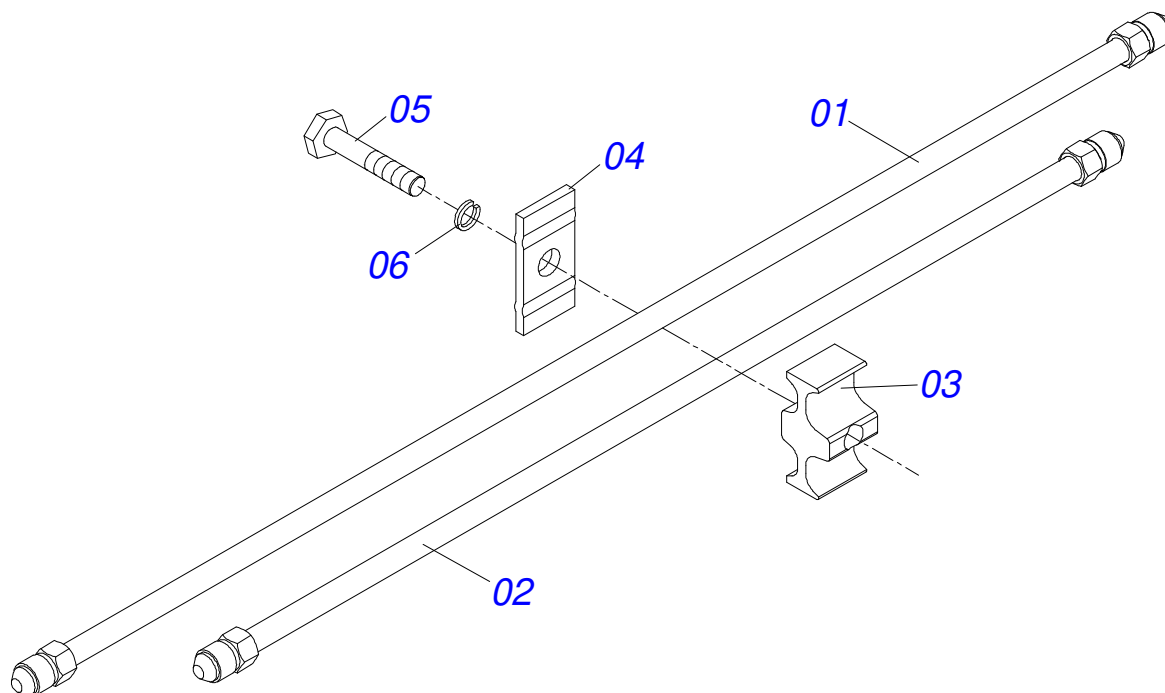 

Item	Code	Description	See page	QT
001	0521061340	OIL TUBE		04
002	0521063409	2120 OIL TUBE		04
003	0502012702	BODY SUPPORT CLAMP		04
004	0531011180	UPPER BODY CLIP		04
005	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
006	0503010180	7/16" SPRING WASHER		04

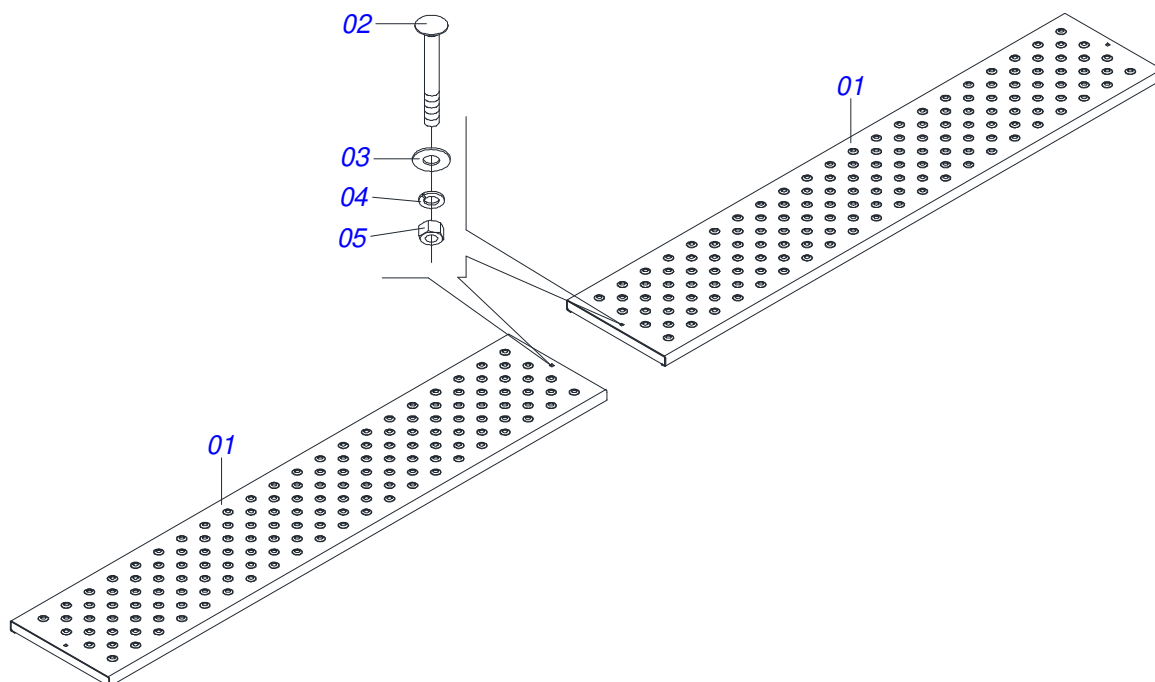 


Item	Code	Description	See page	QT
01	0521062416	PLATFORM		02
02	0501011755	3/8" X 3" BOLT		04
03	0501010984	FLAT WASHER		04
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04

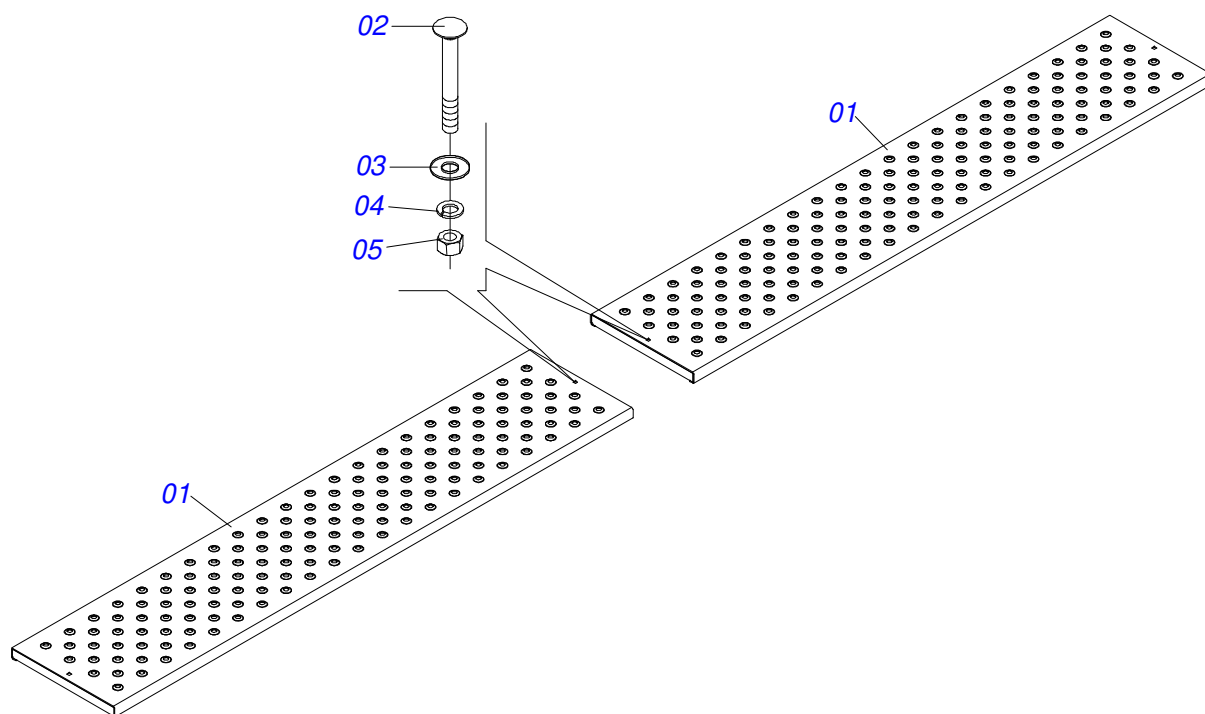 

Item	Code	Description	See page	QT
01	0521061333	PLATFORM		02
02	0501011755	3/8" X 3" BOLT		04
03	0501010984	FLAT WASHER		04
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04

HANDRAIL ASSEMBLE

 
0511053916

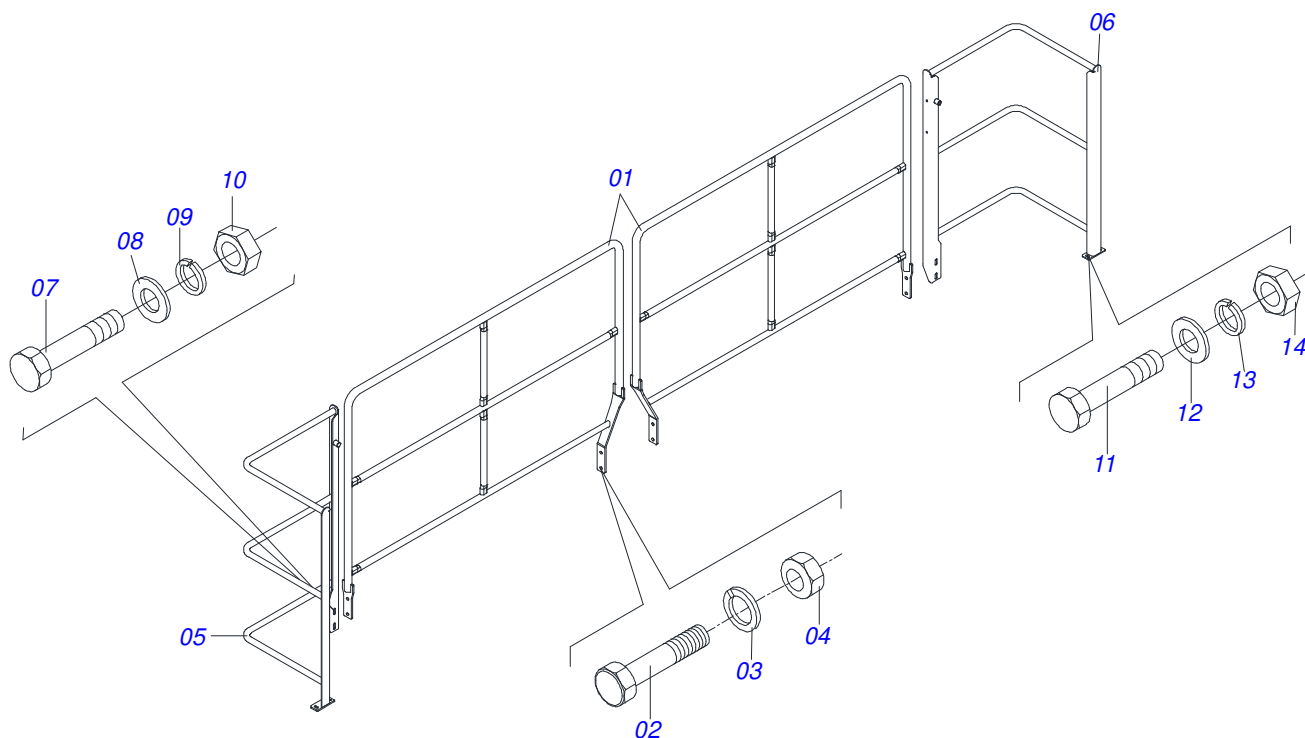


Item	Code	Description	See page	QT
01	0521062417	HANDRAIL	02	
02	0503010920	1/2" X 1.1/2" BOLT	08	
03	0503010019	1/2" SPRING WASHER	08	
04	0503010060	1/2" NUT	08	
05	0521061335	RIGHT SIDE HANDRAIL	01	
06	0521061336	LH SIDE HANDRAIL	01	
07	0503011088	3/8" X 1-1/4" BOLT	04	
08	0501010984	FLAT WASHER	08	
09	0503010025	3/8" SPRING WASHER	04	
10	0503010026	3/8" NUT	04	
11	0501010161	1/2" X 1.1/4" BOLT	04	
12	0511017302	FLAT WASHER	04	
13	0503010019	1/2" SPRING WASHER	04	
14	0503010060	1/2" NUT	04	

HANDRAIL ASSEMBLE

 0511053889

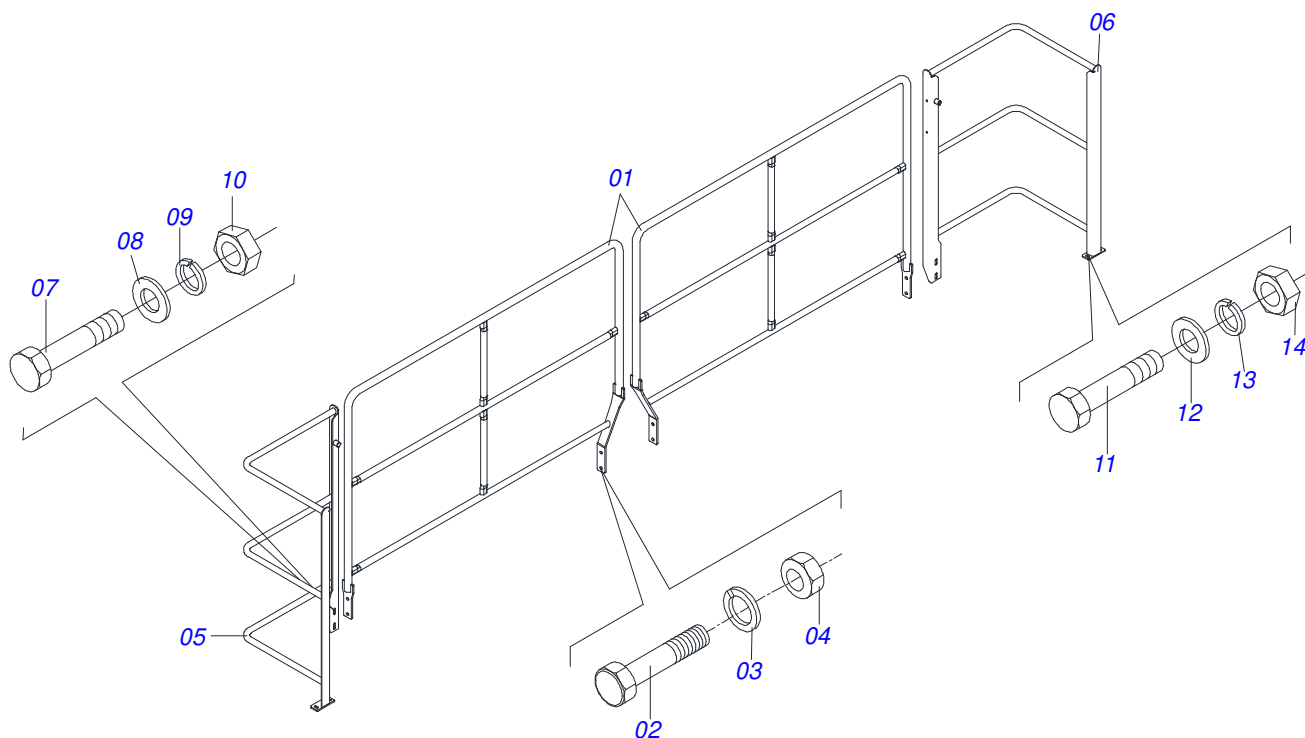


Item	Code	Description	See page	QT
01	0521061334	HANDRAIL	02	
02	0503010920	1/2" X 1.1/2" BOLT	08	
03	0503010019	1/2" SPRING WASHER	08	
04	0503010060	1/2" NUT	08	
05	0521061335	RIGHT SIDE HANDRAIL	01	
06	0521061336	LH SIDE HANDRAIL	01	
07	0503011088	3/8" X 1-1/4" BOLT	04	
08	0501010984	FLAT WASHER	08	
09	0503010025	3/8" SPRING WASHER	04	
10	0503010026	3/8" NUT	04	
11	0501010161	1/2" X 1.1/4" BOLT	04	
12	0511017302	FLAT WASHER	04	
13	0503010019	1/2" SPRING WASHER	04	
14	0503010060	1/2" NUT	04	

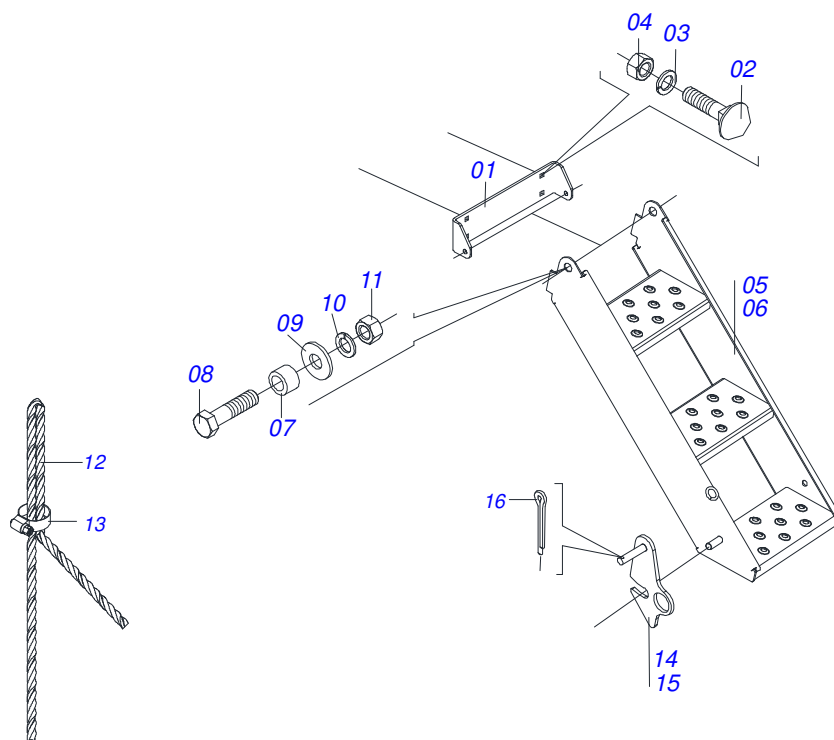 

Item	Code	Description	See page	QT
001	0561015343	ARTICULACION SUPPORT		02
002	0501010243	1/2" X 1-1/2" BOLT		08
003	0503010019	1/2" SPRING WASHER		08
004	0503010060	1/2" NUT		08
005	0521061331	RIGHT LADDER		01
006	0521061332	LEFT LADDER		01
007	0531018627	0.5" X 1" X 0.2" SLEEVE		04
008	0503010920	1/2" X 1.1/2" BOLT		04
009	0511017302	FLAT WASHER		04
010	0503010019	1/2" SPRING WASHER		04
011	0503010060	1/2" NUT		04
012	0511010369	3/8" X 74.80" LEVER ROPE		02
013	0503010296	CLAMP		04
014	0511065678	STAIR RIGHT LOCK		01
015	0511065679	STAIR RIGHT LOCK		01
016	0503010257	1/8" X 1" COTTERPIN		02

ASSY FIXER HEADER

 
0511053085

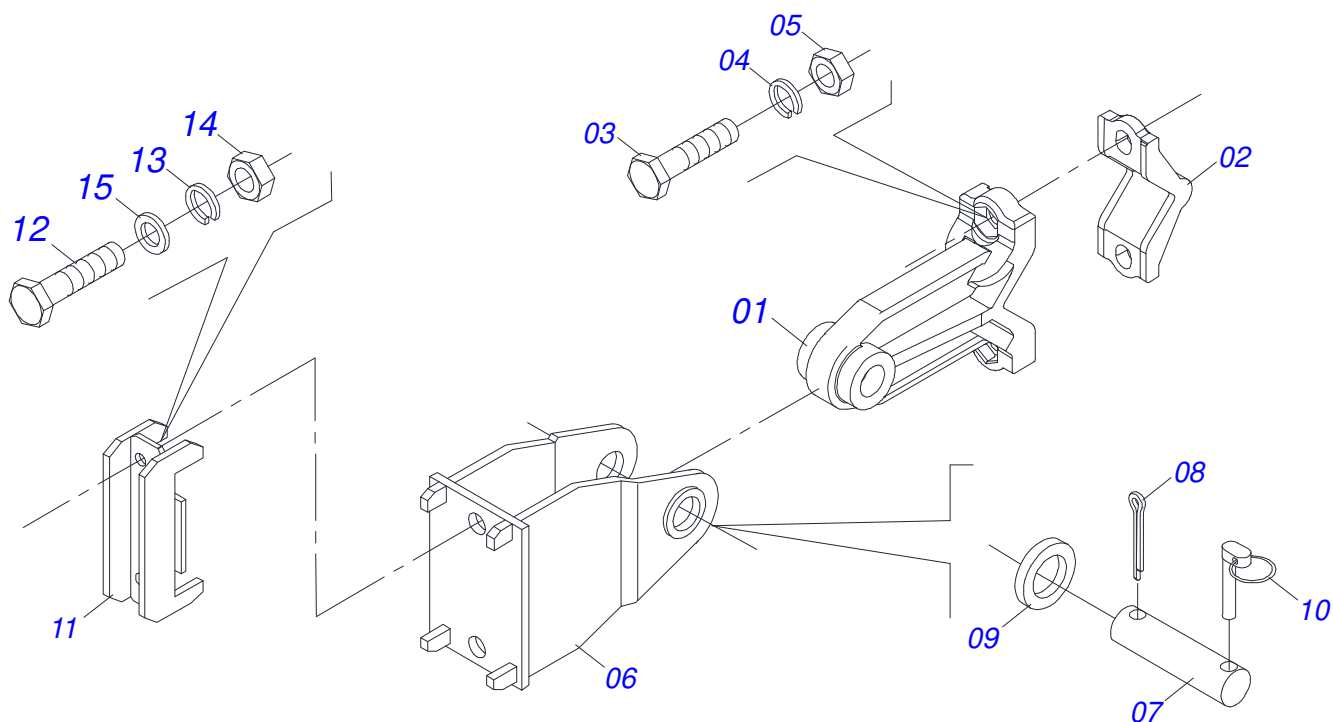


Item	Code	Description	See page	QT
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	04	
02	0502012330	SUPPORT FIXER PIVOT	04	
03	0503011084	3/4" X 5" BOLT	08	
04	0503010023	3/4" SPRING WASHER	08	
05	0503010014	3/4" NUT	08	
06	0511065418	DRAWBAR SUPPORT FRONT FIXATION	04	
07	0561014393	COUPLING SHAFT	04	
08	0503010523	1/4" X 2" COTTERPIN	04	
09	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN	08	
10	0503030119	LOCK PIN	04	
11	0511065419	DRAWBAR FIXER CLAMP	04	
12	0521010066	3/4" X 8.12" BOLT	08	
13	0503010023	3/4" SPRING WASHER	08	
14	0503010014	3/4" NUT	08	
15	0501010322	FLAT WASHER	08	

DRAWBAR ASSY

 
0511043100

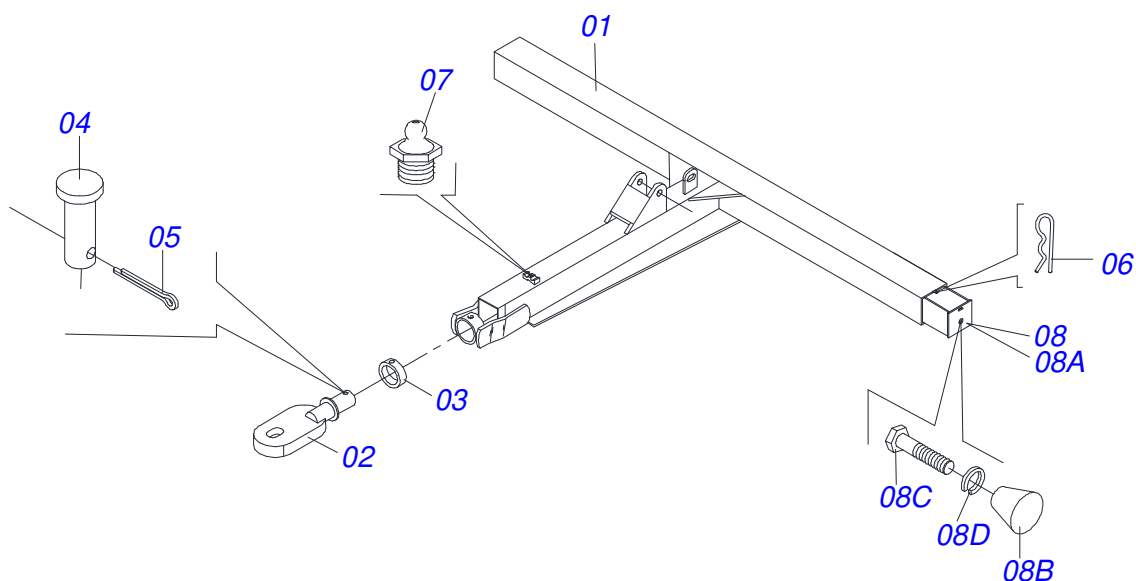


Item	Code	Description	See page	QT
001	0511065905	DRAWBAR COP-CE		01
002	0501069632	TRACTOR HITCH		01
003	0521010681	BUSHING COUPLING BODY		01
004	0521010639	COUPLING SHAFT		01
005	0503010571	1/4" X 1.1/2 COTTERPIN		01
006	0503030012	HAIR PIN		02
007	0503010002	1800 GREASE FITTING		01
008	0511043137	TOOLS BOX ASSY		02
008A	0511065471	BOX OF TOOLS		01
008B	0503010293	BAQUELITE MANIPULACION		01
008C	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
008D	0503011443	3/8" SPRING WASHER		01

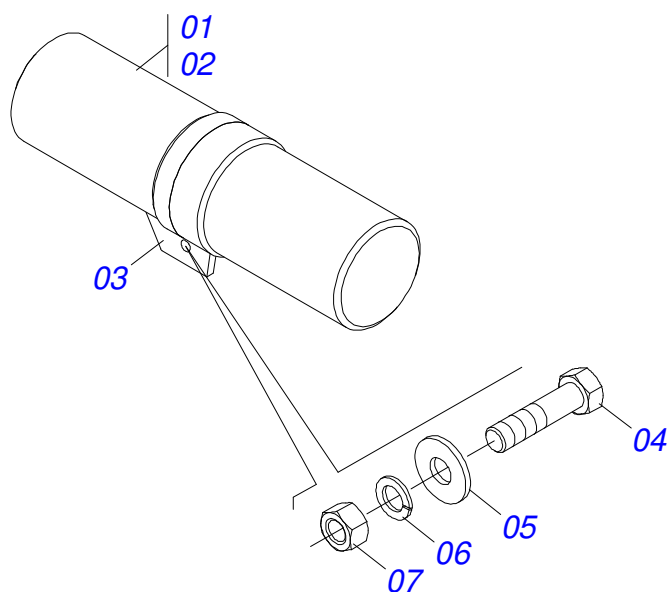 

Item	Code	Description	See page	QT
001	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
002	0511031937	BAG WITH MANUAL CATALOG		01
003	0503010267	NYLON CLAMP		01
004	0503010363	5/16" X 1" BOLT		01
005	0501010694	FLAT WASHER		01
006	0503010179	LOCK WASHER		01
007	0503010337	5/16" NUT		01

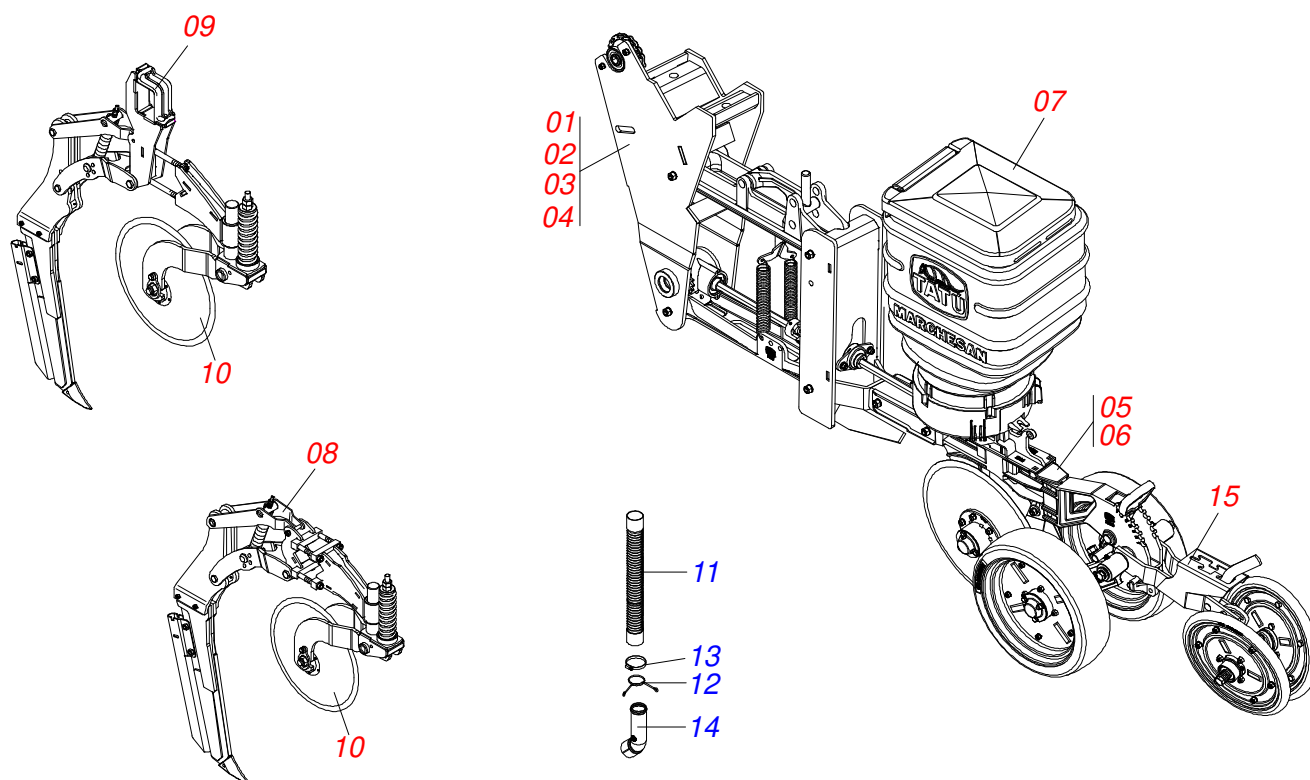 

Item	Code	Description	See page	QT
01	0501059362	LONG SEED ROW FRONT	45	03
02	0501059350	LONG FRONT SEED ROW	46	03
03	0501059349	SHORT SEED ROW FRONT	47	03
04	0501059361	SHORT SEED ROW FRONT	48	03
05	0511052317	RH SEED ROW REAR	49	07
06	0511052318	LH SEED ROW REAR	51	06
07	0501052234	ASSY SEED SYSTEM	53	13
08	0511053825	SEMI-ASSEMBLED SHORT FERTILIZER LINE		07
09	0511053826	SEMI-ASSEMBLED LONG FERTILIZER LINE		07
10	0511048339	24" BLADE DISC ASSY	58	13
11	0503031145	2" X 2" X 20" HOSE		01
12	0503031076	2" HOSE CLAMP		02
13	0503010246	CLAMP		02
14	0503031050	CURVED CONDUCTOR		01
15	0521045198	PRESS WHEELS		01

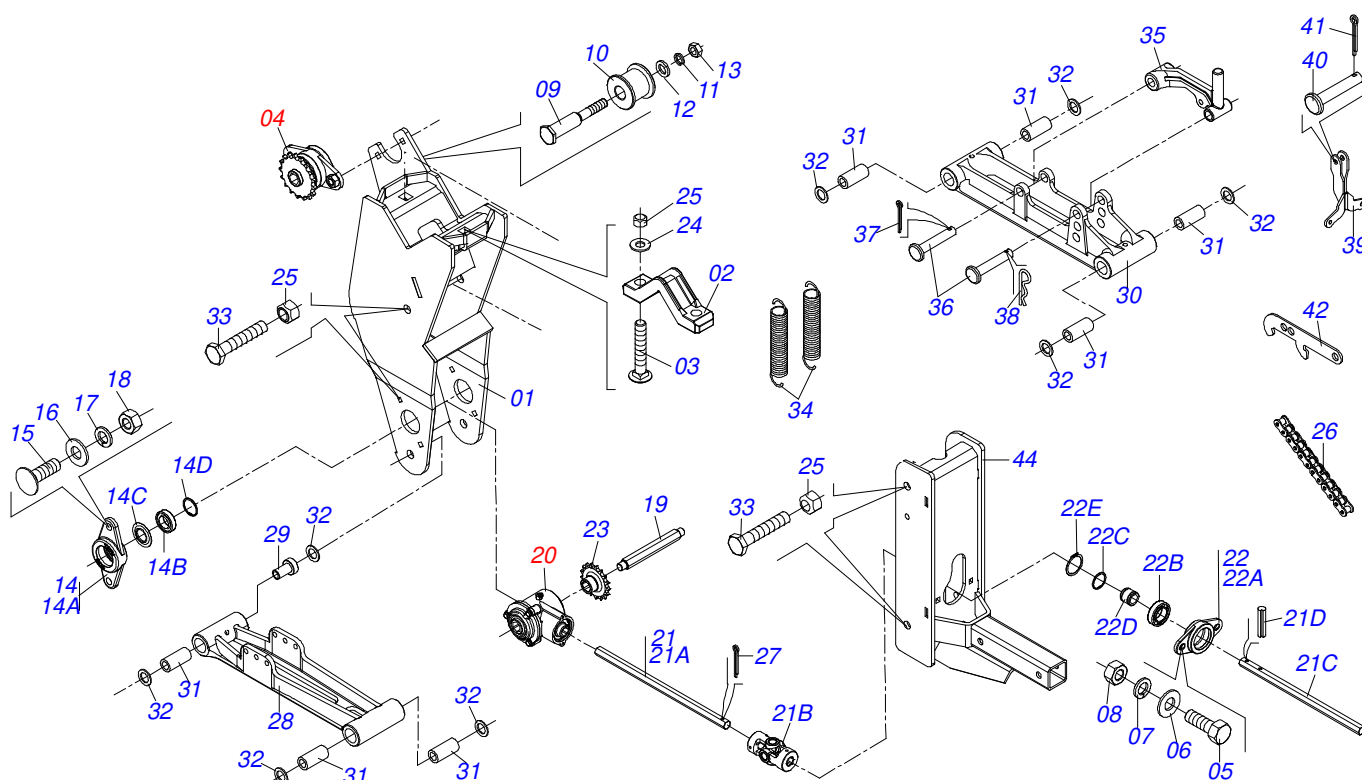 


Item	Code	Description	See page	QT
001	0521064653	RIGH SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR		01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
014A	0502012718	BEARIN BODY		01
014B	0503012882	BEARING		01
014C	0503017011	SEAL RING		01
014D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	56	01
021	0501059327	UNIVERSAL JOINT AXLE		01
021A	0561014794	350 AXLE HEX		01
021B	0501056296	UNIVERSAL JOINT		01
021C	0561016631	HEX AXLE		01
021D	0503011855	0.2" X 1.8" SPRING PIN		02
022	0501059363	5/8" HEX AXLE BEARING		01
022A	0502011697	BEARING OF THE GEAR BOX		01

LONG SEED ROW FRONT

0501059362

Item	Code	Description	See page	QT
022B	0503011410	ROLLER BEARING		01
022C	0503011105	SEAL RING		01
022D	0561014911	AXLE SLEEVE GUIDES HEX		01
022E	0503010406	501025 CLAMPING RING (FOR AXLE)		02
023	0502012782	17Z GEAR WITH HEX HOLE		01
024	0501012140	FLAT WASHER		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02
026	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	CUPILLA		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0503010013	5/8" NUT		02
044	0521061428	CC TIRE ROW FRAME		01

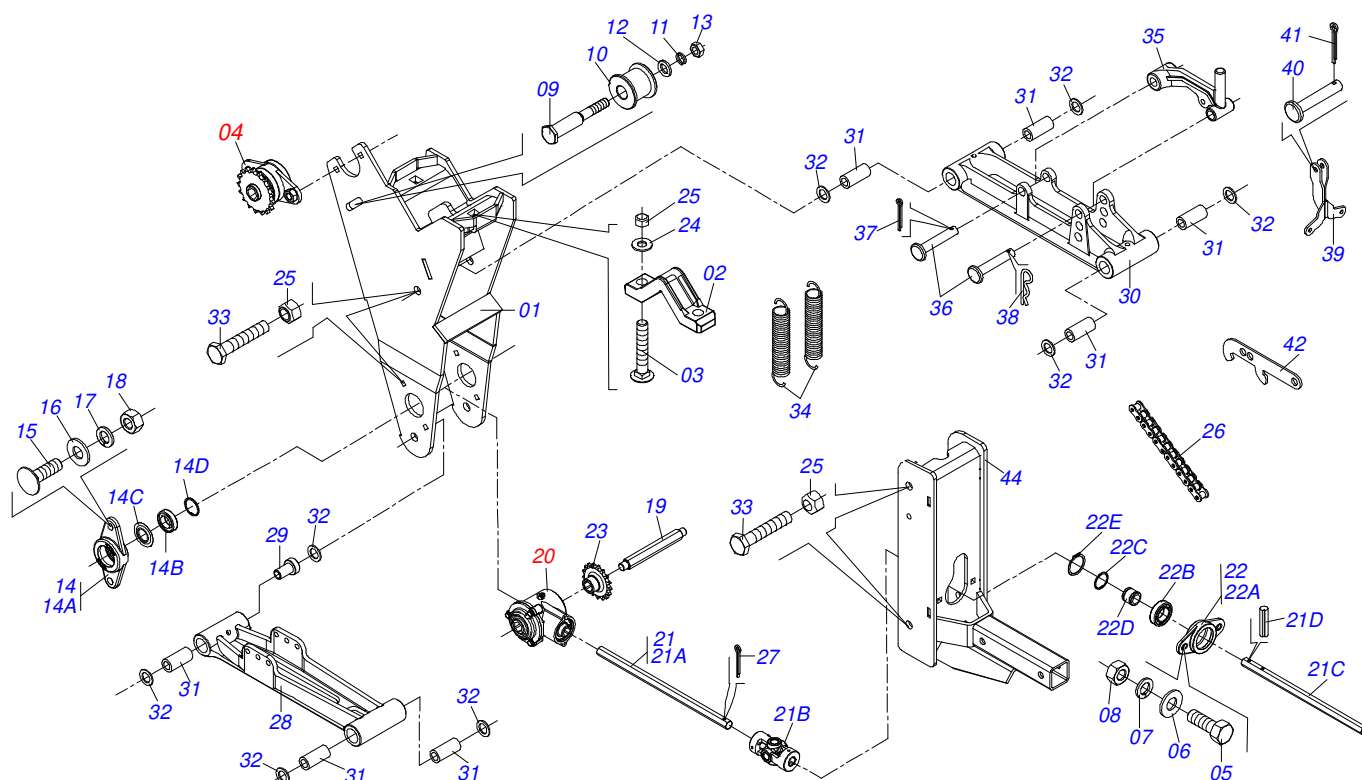 


Item	Code	Description	See page	QT
001	0521064651	LEFT SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR		01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	56	01
021	0501059327	UNIVERSAL JOINT AXLE		01
022	0501059363	5/8" HEX AXLE BEARING		01
022A	0502011697	BEARING OF THE GEAR BOX		01
022B	0503011410	ROLLER BEARING		01
022C	0503011105	SEAL RING		01
022D	0561014911	AXLE SLEVE GUIDES HEX		01
022E	0503010406	501025 CLAMPING RING (FOR AXLE)		02
023	0502012782	17Z GEAR WITH HEX HOLE		01
024	0501012140	FLAT WASHER		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02
026	0503013114	40-1 CHAIN X 89 LINK + MENDING		01



LONG FRONT SEED ROW

0501059350

Item	Code	Description	See page	QT
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	CUPILLA		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0503010013	5/8" NUT		02
044	0521061428	CC TIRE ROW FRAME		01

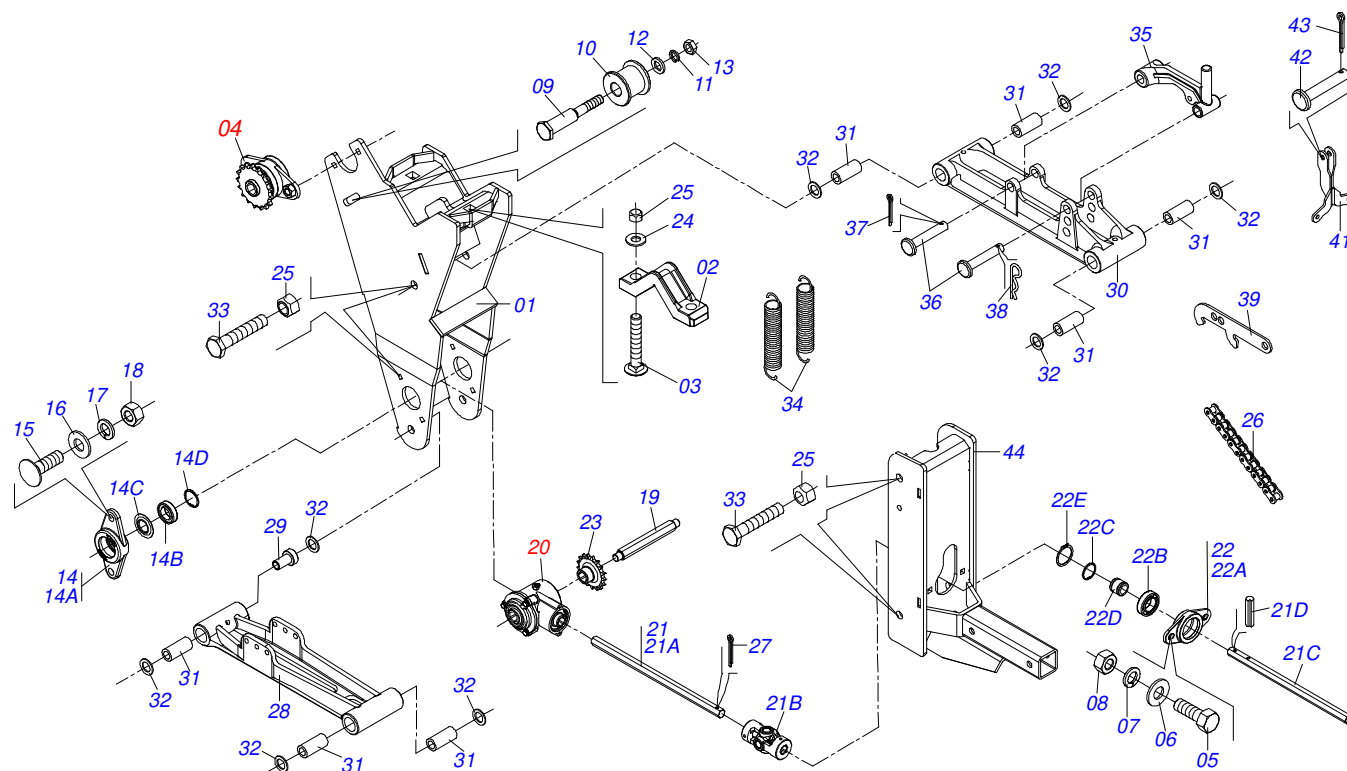 


Item	Code	Description	See page	QT
001	0521064651	LEFT SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR		01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
014A	0502012718	BEARIN BODY		01
014B	0503012882	BEARING		01
014C	0503017011	SEAL RING		01
014D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	56	01
021	0501059326	UNIVERSAL JOINT AXLE		01
021A	0561014794	350 AXLE HEX		01
021B	0501056296	UNIVERSAL JOINT		01
021C	0561016322	5/8" HEX AXLE		01
021D	0503011855	0.2" X 1.8" SPRING PIN		02
022	0501059363	5/8" HEX AXLE BEARING		01
023	0502012782	17Z GEAR WITH HEX HOLE		01

SHORT SEED ROW FRONT

0501059349

Item	Code	Description	See page	QT
024	0501012140	FLAT WASHER		02
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	CUPILLA		01
039	0561019032	SEED FERTIL ROW LOCK		01
040	0503010013	5/8" NUT		02
041	0521061850	SPRING UPPER FIXER		01
042	0521010773	0.37" X 1.18" COUPLING SHAFT		01
043	0503010140	1/8" X 3/4" COTTERPIN		01
044	0521061427	SHORT SEED ROW FRAME		01
045	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
046	0503012412	5/8 UNC SELF LOCKING NUT		02
047	0503012412	5/8 UNC SELF LOCKING NUT		04

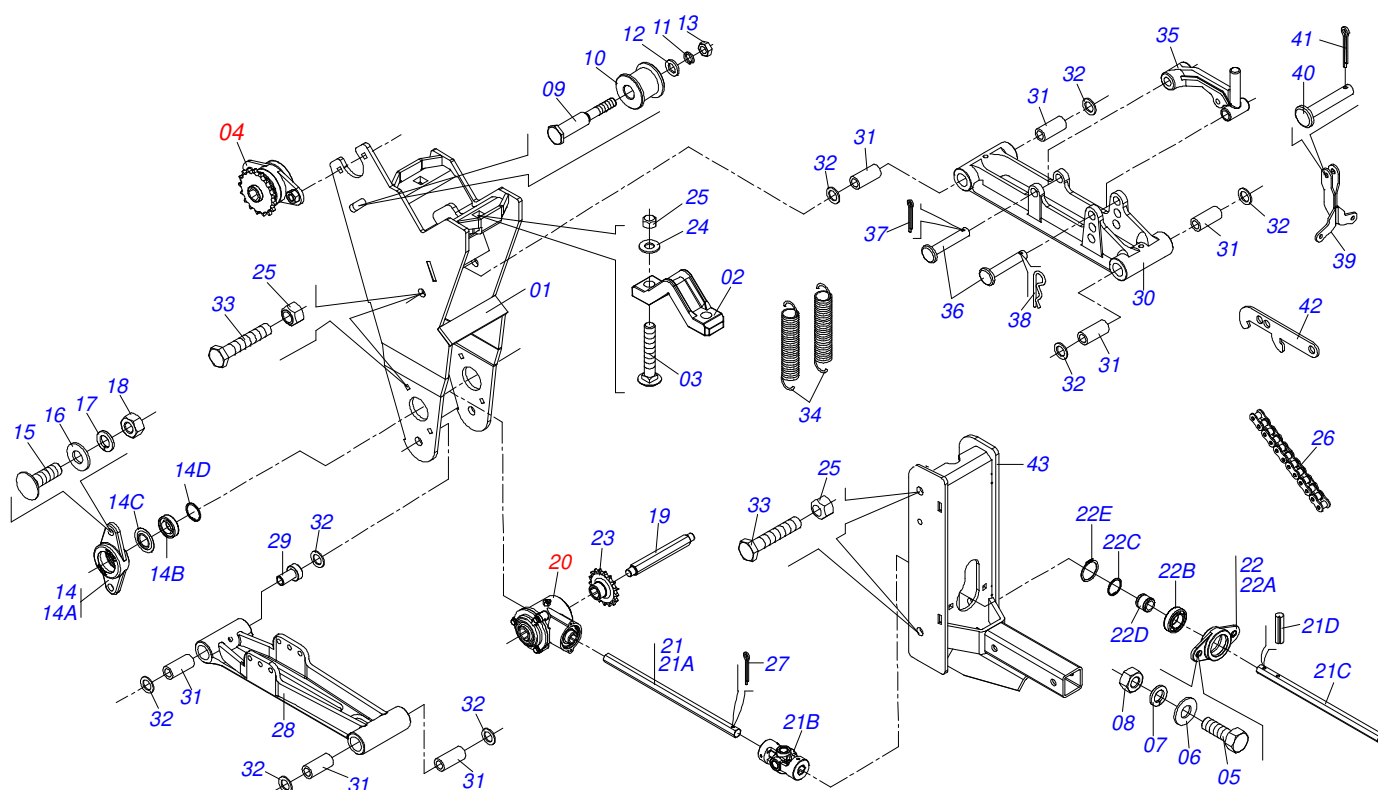 


Item	Code	Description	See page	QT
001	0521064653	RIGH SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR		01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	56	01
021	0501059326	UNIVERSAL JOINT AXLE		01
022	0501059363	5/8" HEX AXLE BEARING		01
023	0503010365	NUT		02
024	0501010694	FLAT WASHER		02
025	0503010179	LOCK WASHER		02
026	0503010337	5/16" NUT		02
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08


SHORT SEED ROW FRONT

0501059361


Item	Code	Description	See page	QT
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	CUPILLA		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0521061427	SHORT SEED ROW FRAME		01
044	0503010013	5/8" NUT		02
045	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
046	0503012412	5/8 UNC SELF LOCKING NUT		02
047	0503012412	5/8 UNC SELF LOCKING NUT		04
048	0501012140	FLAT WASHER		02
049	0502012782	17Z GEAR WITH HEX HOLE		01

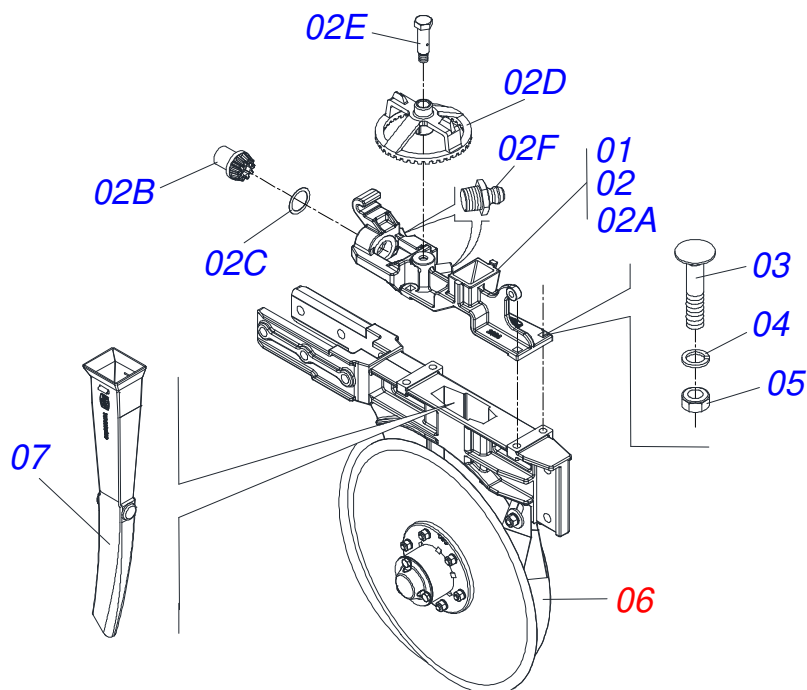 


Item	Code	Description	See page	QT
01	0511052317	RH SEED ROW REAR	49	01
02	0501059648	SEED BOX FIXING BASE		01
02A	0502012624	SEED BOX FIXING BASE		01
02B	0502012639	12Z LOWER CONICAL GEAR		01
02C	0501013354	FLAT WASHER		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059631	DDD SEED 15 X 15 RIGHT		01
07	0503033124	SOCKET SEED		01

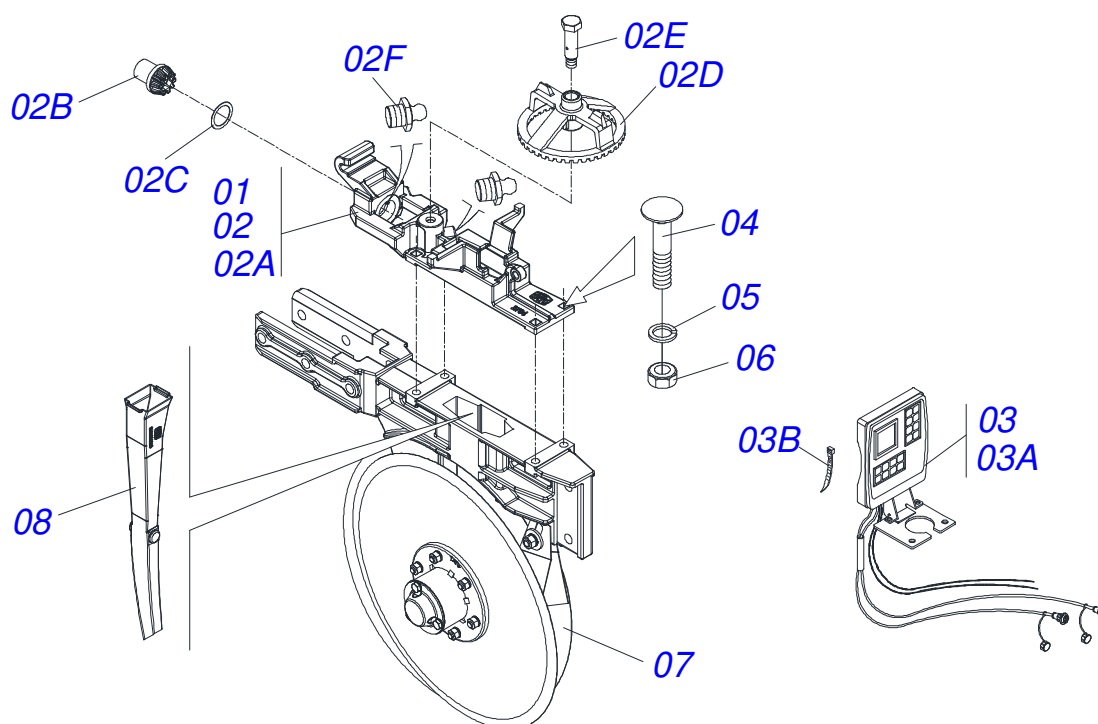 


Item	Code	Description	See page	QT
01	0511051783	RIGHT REAR SEED ROW TITANIUM	50	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0501058972	ASSEMBLY SENSOR ELECTRONIC		01
03A	0503015218	SENSOR FOTOELE PM 400		01
03B	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03
04	0503015920	3/8" UNC X 1.3/4" BOLT		04
05	0503011443	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0501059631	DDD SEED 15 X 15 RIGHT		01
08	0503033672	NOZZLE WITHOUT TITANIUM		01

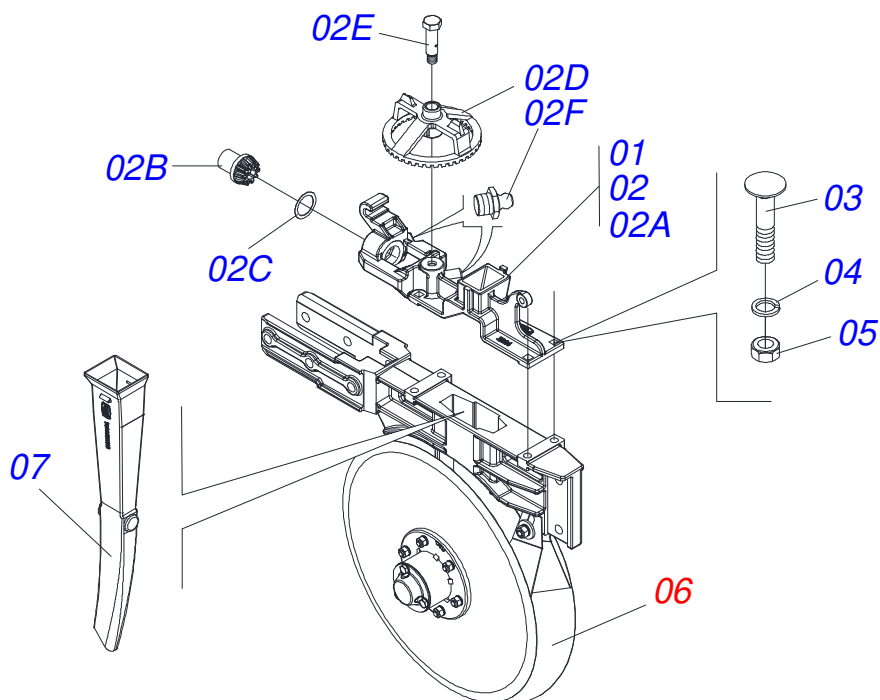 


Item	Code	Description	See page	QT
01	0511052318	LH SEED ROW REAR	51	01
02	0501059648	SEED BOX FIXING BASE		01
02A	0502012624	SEED BOX FIXING BASE		01
02B	0502012639	12Z LOWER CONICAL GEAR		01
02C	0501013354	FLAT WASHER		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059632	DDD SEED 15X15 LEFT		01
07	0503033124	SOCKET SEED		01

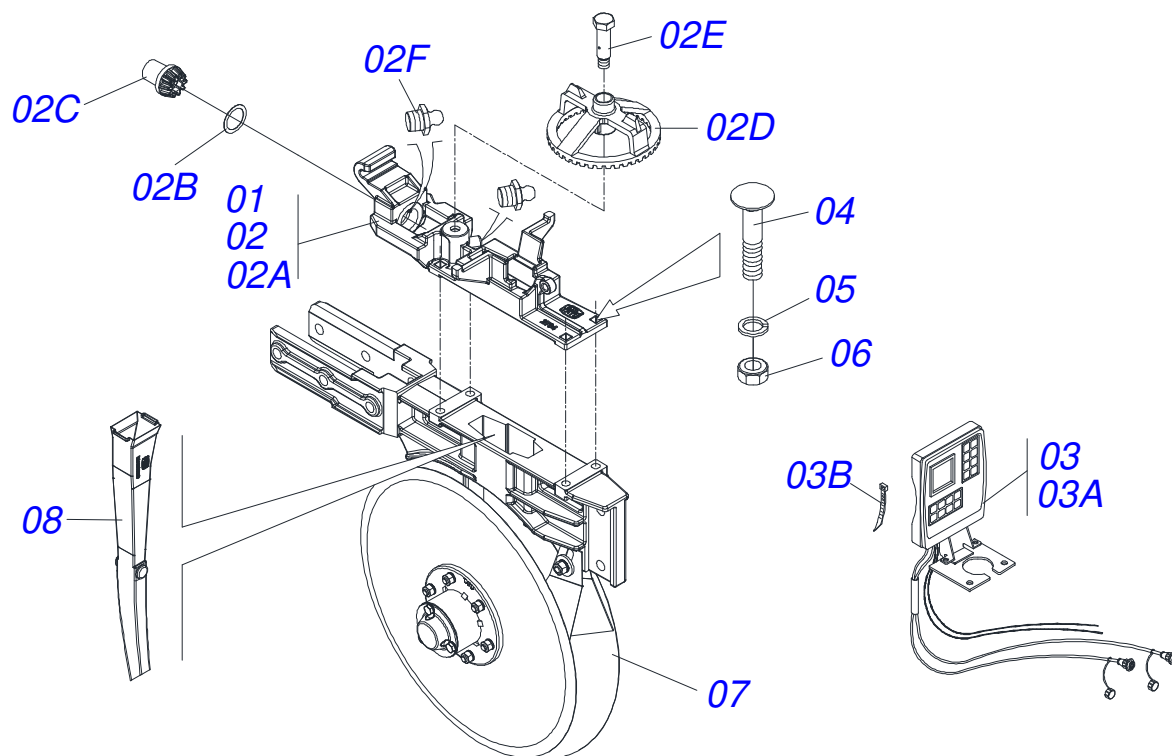 


Item	Code	Description	See page	QT
01	0511051782	LEFT REAR SEED ROW	52	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0501058972	ASSEMBLY SENSOR ELECTRONIC		01
03A	0503015218	SENSOR FOTOELE PM 400		01
03B	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03
04	0503015920	3/8" UNC X 1.3/4" BOLT		04
05	0503011443	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0501059632	DDD SEED 15X15 LEFT		01
08	0503033672	NOZZLE WITHOUT TITANIUM		01

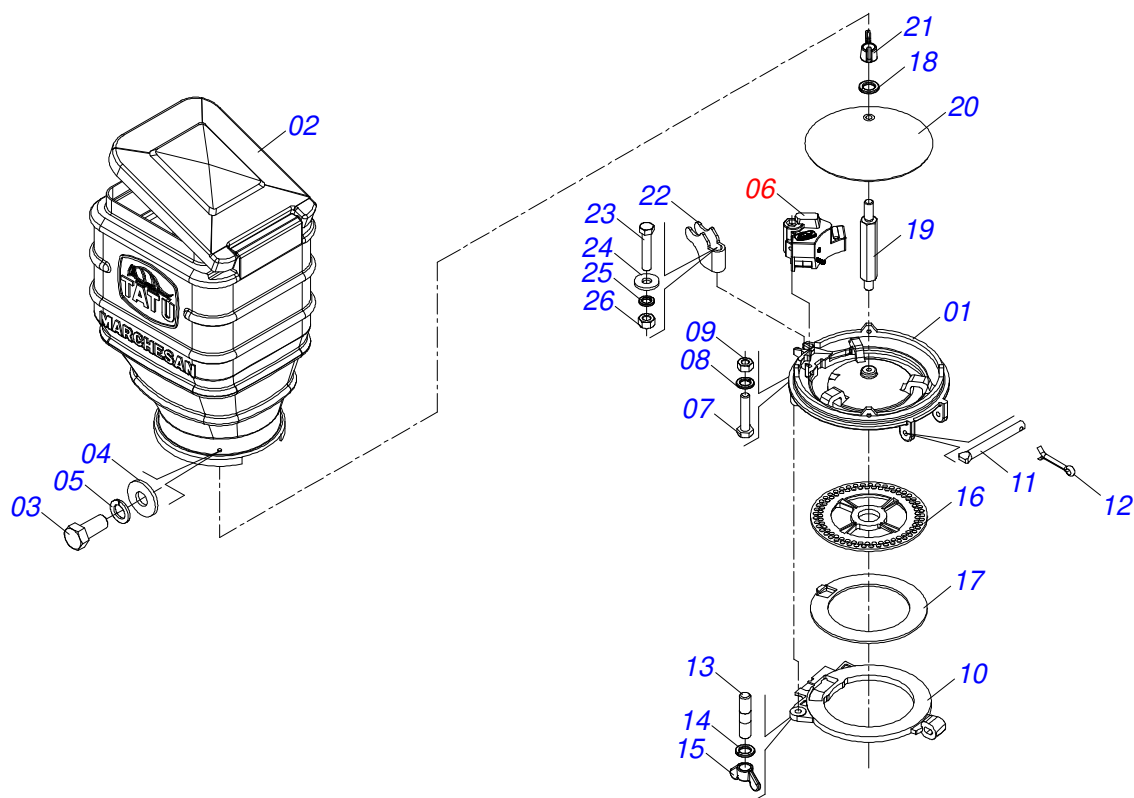 

Item	Code	Description	See page	QT
01	0502020324	SEED BOX SUPPORT	01	
02	0503031508	COVER GREEN BEAM SEED YELLOW	01	
03	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN	04	
04	0501010694	FLAT WASHER	04	
05	0503010179	LOCK WASHER	04	
06	0501051094	ASSY SEED DISTRIBUTOR	01	
07	0503010675	5/16" X 2.1/4" BOLT	01	
08	0503010179	LOCK WASHER	01	
09	0503010337	5/16" NUT	01	
10	0502010408	SEED DISC LOWER TRAIL	01	
11	0521010536	0.3" X 3.8" COUPLING SHAFT	01	
12	0503010140	1/8" X 3/4" COTTERPIN	01	
13	0503030083	3/8" X 3/8" X 1.6" STUD	01	
14	0503010025	3/8" SPRING WASHER	01	
15	0503010209	3/8" UNC BUTTERFLY NUT	01	
16	0503016217	SOYBEAN SEED DISC 34 OBLONG	01	
17	0503016219	RING TO SOYBEANS	01	
18	0503010025	3/8" SPRING WASHER	01	
19	0571018536	HEX PRISONER	01	
20	0503034131	DEFLECTOR	01	
21	0503010209	3/8" UNC BUTTERFLY NUT	01	
22	0531018622	BOLT FAST SUPPORT UPPER	01	
23	0501010096	3/8" X 2" BOLT	01	
24	0501010984	FLAT WASHER	01	
25	0503010025	3/8" SPRING WASHER	01	
26	0503010026	3/8" NUT	01	

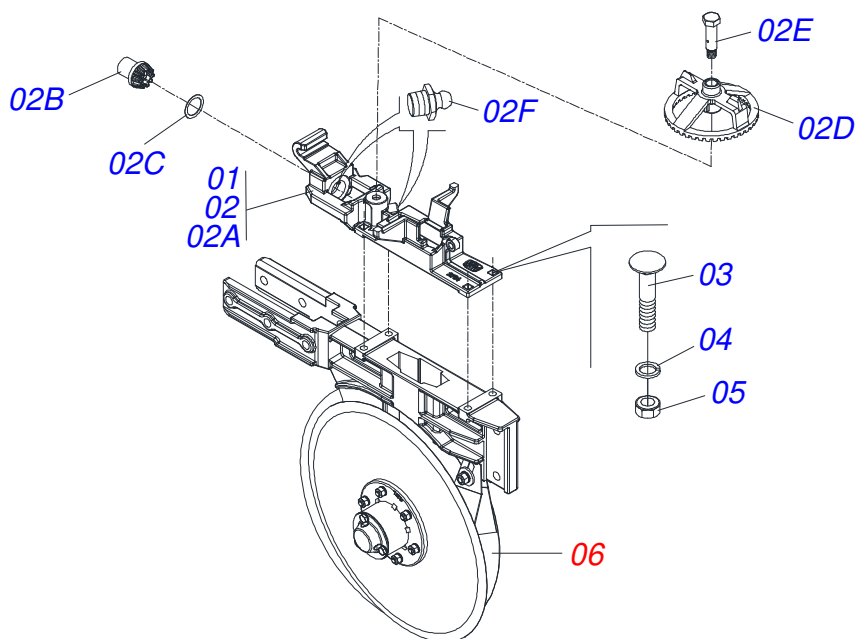 


Item	Code	Description	See page	QT
01	0511052319	RIGHT REAR SEED ROW	54	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059631	DDD SEED 15 X 15 RIGHT		01

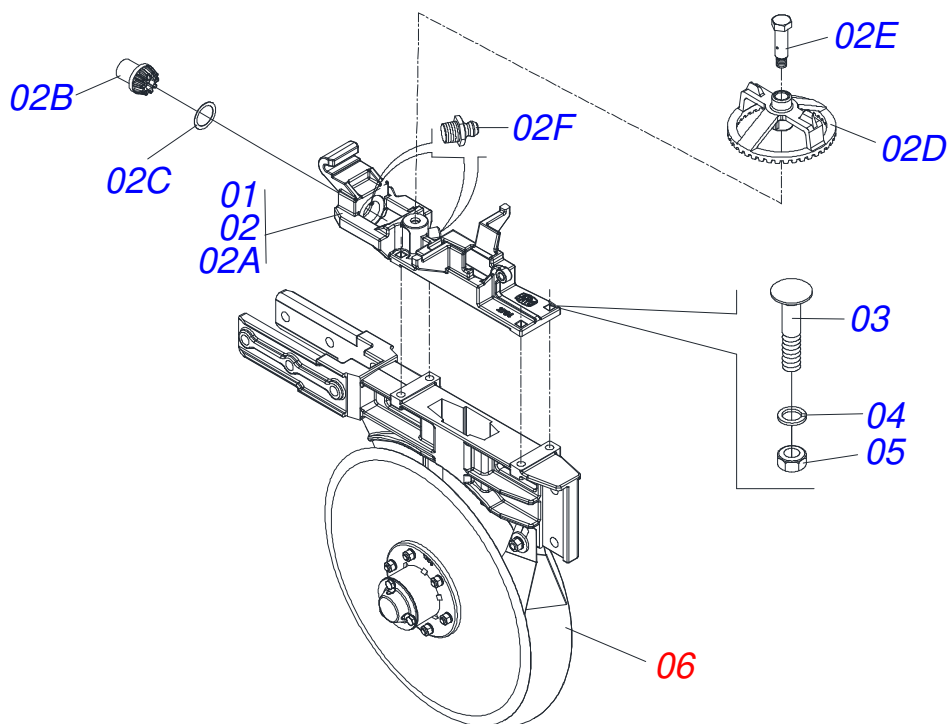 


Item	Code	Description	See page	QT
01	0511052320	REAR LEFT ROW SEED TITANIUM	55	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0502012639	12Z LOWER CONICAL GEAR		01
02C	0501013354	FLAT WASHER		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059632	DDD SEED 15X15 LEFT		01

TRANSMISSION BOX

 0511054884

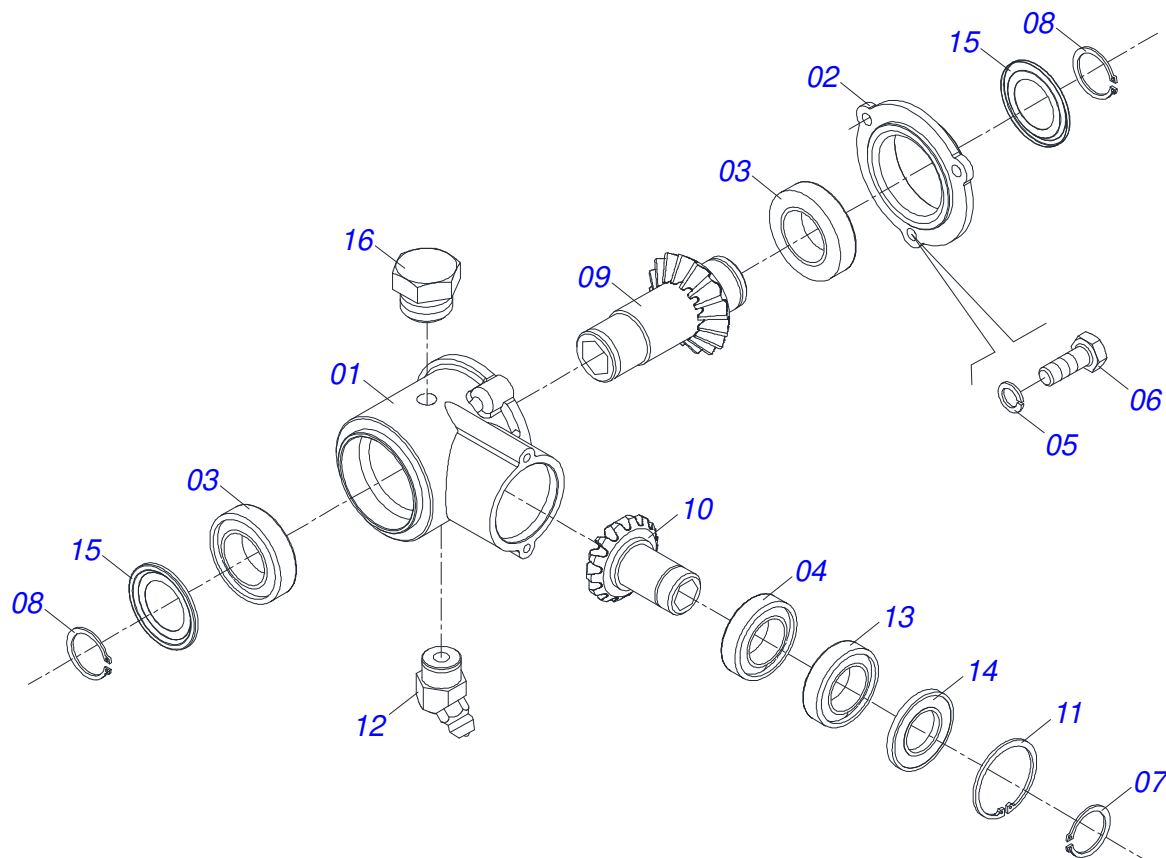


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0502040857	CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503010003	1845 GREASE FITTING		01
13	0503011409	6005 Z BALL BEARING		01
14	0503017008	SEAL RING		01
15	0503017007	SEAL RING		02
16	0511017907	1/8" BSPT X 6 PLUG		01

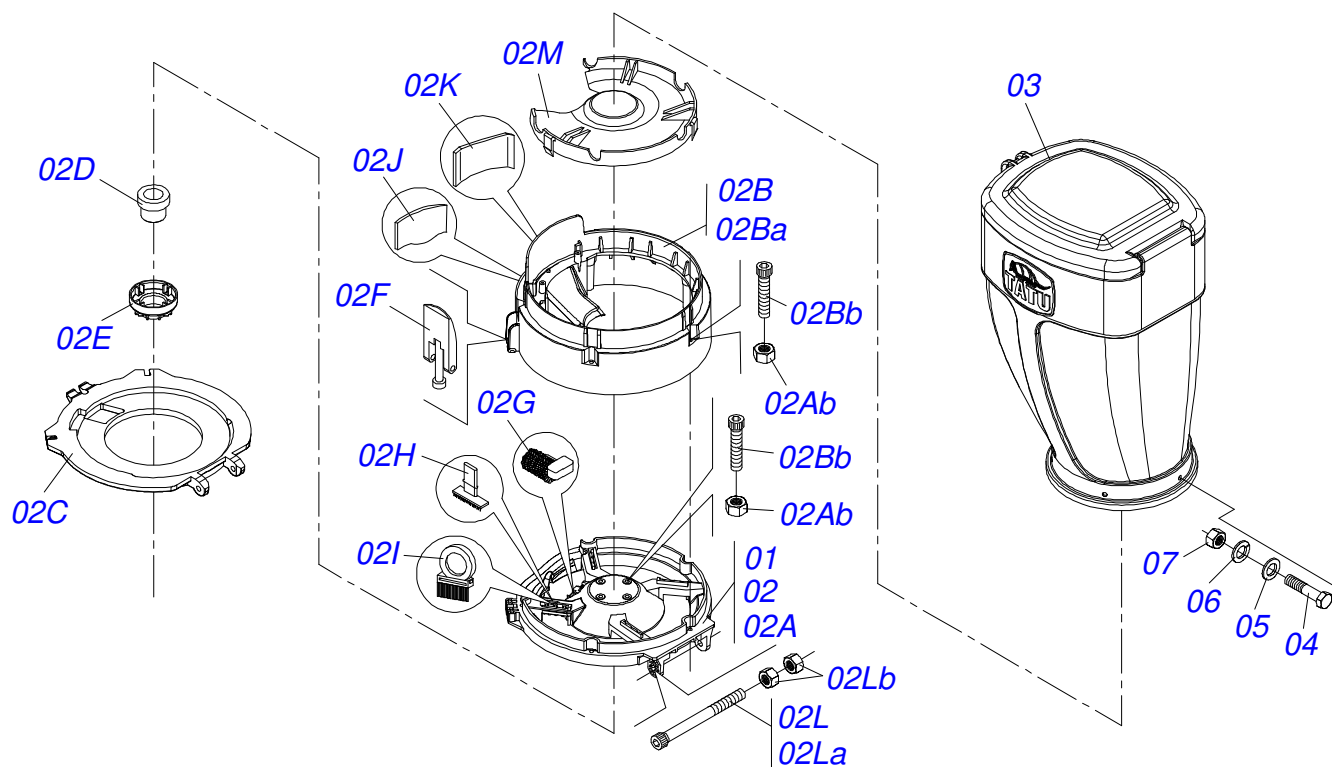 

Item	Code	Description	See page	QT
01	0511051720	SEED SYSTEM TITANIUM ASSY	57	01
02	0511052058	SEED SYSTEM TITANIUM		01
02A	0503062031	BASE SET		01
02Aa	0503016268	BASE TITANIUM		01
02Ab	0503016269	HEX NUT		09
02B	0503062032	NECK TITANIUM ASSY		01
02Ba	0503016270	NECK TITANIUM ASSY		01
02Bb	0503016271	ALLEN BOLT		09
02C	0503062033	OPPOSITE BASE SET		01
02D	0503062034	CENTRAL ADAPTER SET		01
02E	0503062035	SET FALSE ADAPT CENTER		01
02F	0503062036	SUBSET ASSY LOCK BASE		01
02G	0503062037	SUBSET ESCOVAFLEX ASSY		01
02H	0503062038	ASSY ANTI-LEAP		01
02I	0503062039	POLIFLOW TITANIUM ASSY		01
02J	0503062040	DISPLAY ASSY TITANIUM 1050010		01
02K	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
02L	0503062042	SET BOLT ARTICULADOR		01
02La	0503016282	ALLEN BOLT		01
02Lb	0503016283	M8 NUT HEX		02
02M	0503062043	ASSY LIMIT WEIGHT		01
03	0571016901	SEED BEAN ASSY		01
04	0503010371	5/16" X 1" BOLT		05
05	0501010694	FLAT WASHER		05
06	0503010179	LOCK WASHER		05
07	0503010337	5/16" NUT		05

24" BLADE DISC ASSY

 0511048339

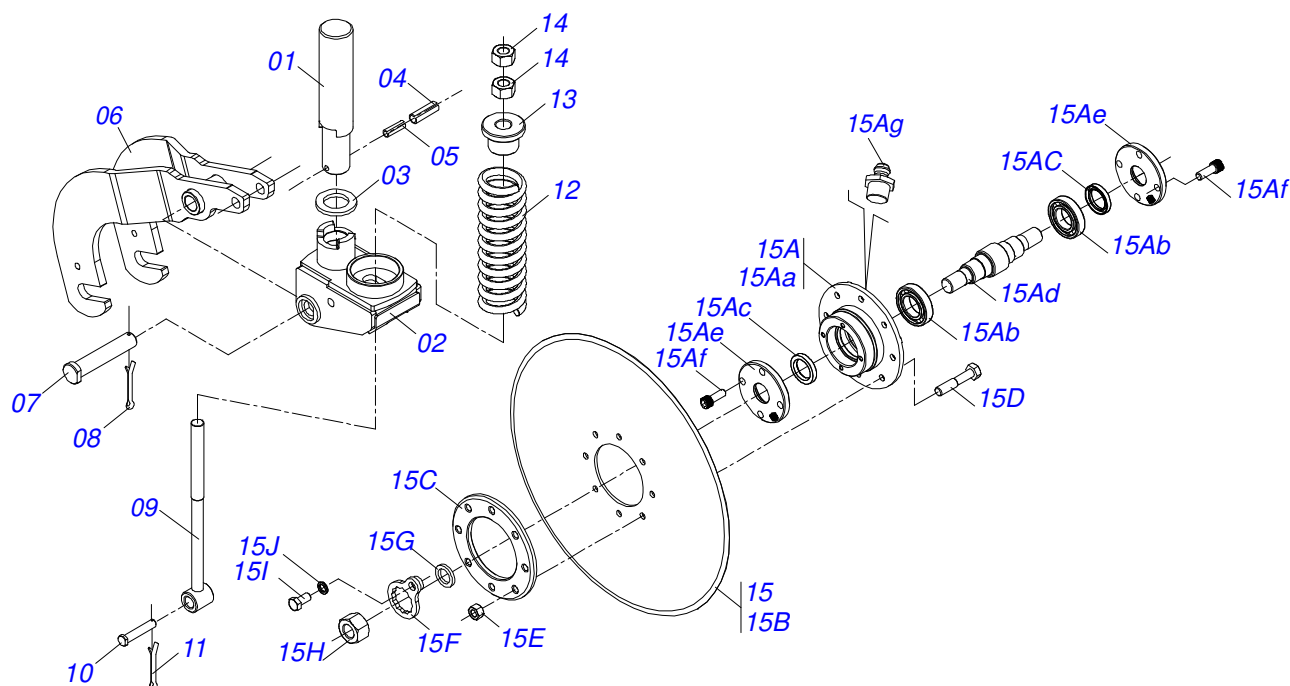

Item	Code	Description	See page	QT
01	0561015334	BLADE DISC AXLE ASSY	01	
02	0521061328	SWIVEL BASE	01	
03	0561015610	FLAT WASHER	01	
04	0503010361	SPRING PIN	01	
05	0503010756	0.2" X 2.4" SPRING PIN	01	
06	0521062418	BLADE DISC FORK	01	
07	0561015339	BLADE DISC AXLE ASSY	01	
08	0503010010	1/4" X 2.1/2" COTTERPIN	01	
09	0501069390	SPRING ROD	01	
10	0561019515	COUPLING SHAFT	01	
11	0503010571	1/4" X 1.1/2 COTTERPIN	01	
12	0503031346	COMPRESSION SPRING	01	
13	0561015400	BLADE DISC SPRING GUIDE	01	
14	0503014018	1" NUT	01	
15	0511050746	24" BLADE DISC ASSY	01	
15A	0501057526	DISC HUB	01	
15Aa	0502011478	DISC HUB	01	
15Ab	0503011291	6209 BALL BEARING	02	
15Ac	0503012106	00521-BR RETAINER	02	
15Ad	0521012661	BLADE DISC AXLE HUB	01	
15Ae	0502011477	BLADE DISC HOUSIG CP	02	
15Af	0503010134	3/8" X 1" BOLT	08	
15Ag	0503010002	1800 GREASE FITTING	01	
15B	0603030044	24" X 0.2" FLAT PLAIN DISC	01	
15C	0521011824	BLADE DISC FLANGE OUTER	01	
15D	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	08	
15E	0503010060	1/2" NUT	16	
15F	0501069637	AXLE NUT LOCK	02	
15G	0521012664	FLAT WASHER	02	
15H	0501010087	1.1/4" NUT	02	
15I	0503010962	5/8" X 1-1/4" BOLT	02	



COP CA - 07/09 LINES


(UP TO 03/2022)

Page 58

24" BLADE DISC ASSY

0511048339

Item	Code	Description	See page	QT
15J	0503010027	5/8" SPRING WASHER		02

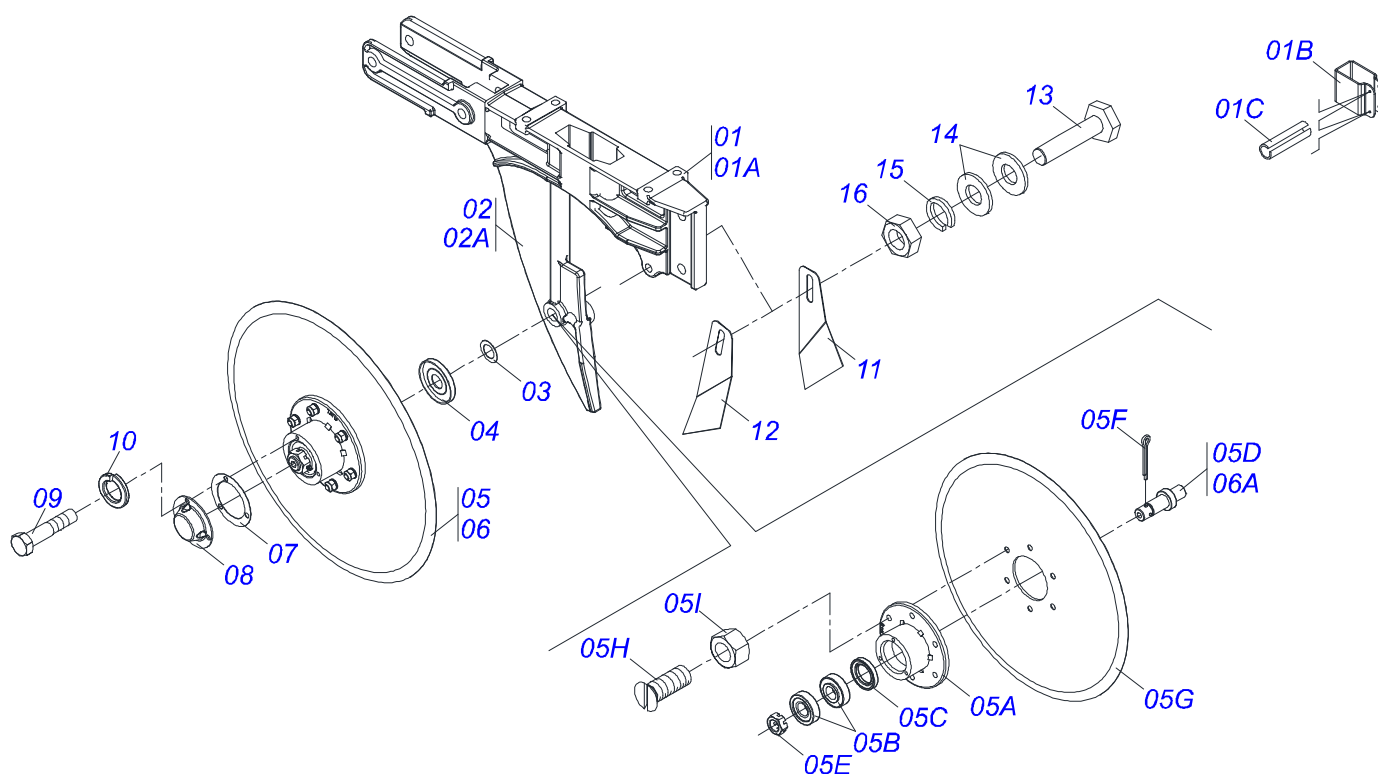 

Item	Code	Description	See page	DIR	ESQ
00	0501059631	DDD SEED 15 X 15 RIGHT		01	00
00A	0501059632	DDD SEED 15X15 LEFT		00	01
01	0511052301	SUPPORT DDD 15 RIGHT		01	00
01A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01	00
01B	0571012491	SOCKET SEED GUIDE		01	01
01C	0503010838	0.1" X 0.8" SPRING PIN		02	02
02	0511052302	LH SUPPORT DDD GUIDE		00	01
02A	0561015592	LEFT DOUBLE DISC SUPPORT		00	01
03	0511015098	FLAT WASHER		06	06
04	0511011927	DUST CLOAK		02	02
05	0501054167	BOX DDD ASSY DPL 15 RIGHT		01	00
05A	0502011930	DOUBLE DISC COULTER BOX		02	02
05B	0503010598	30204 BALL BEARING		04	04
05C	0503011112	SEAL 02376-BRG		02	02
05D	0521019154	RIGHT DOUB DISC HUB		01	00
05E	0503030282	3/4" CASTLE NUT		02	02
05F	0503010257	1/8" X 1" COTTERPIN		02	02
05G	0603022042	13" X 0.12" PLAIN COULTER BLADE		02	02
05H	0503010546	5/16" X 7/8" BOLT		12	12
05I	0503010337	5/16" NUT		12	12
06	0501054168	BOX DDD ASSY DPL 15 LEFT		00	01
06A	0521019148	LEFT DOUBLE DISC HUB		00	01
07	0503030757	2.9" X 2" X 0.02" JOINT		02	02
08	0521019178	COVER DEPTH		02	02
09	0503014729	1/4" UNF X 1/2" BOLT		06	06
10	0503011441	SPRING WASHER		06	06
11	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01	01
12	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01	01
13	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01	01
14	0501010984	FLAT WASHER		02	02
15	0503011443	3/8" SPRING WASHER		01	01



COP CA - 07/09 LINES


(UP TO 03/2022)

Page 59


15X15 SEED UNAL DOUB-DISC ASSY

0909093298


Item	Code	Description	See page	DIR	ESQ
16	0503010026	3/8" NUT		01	01

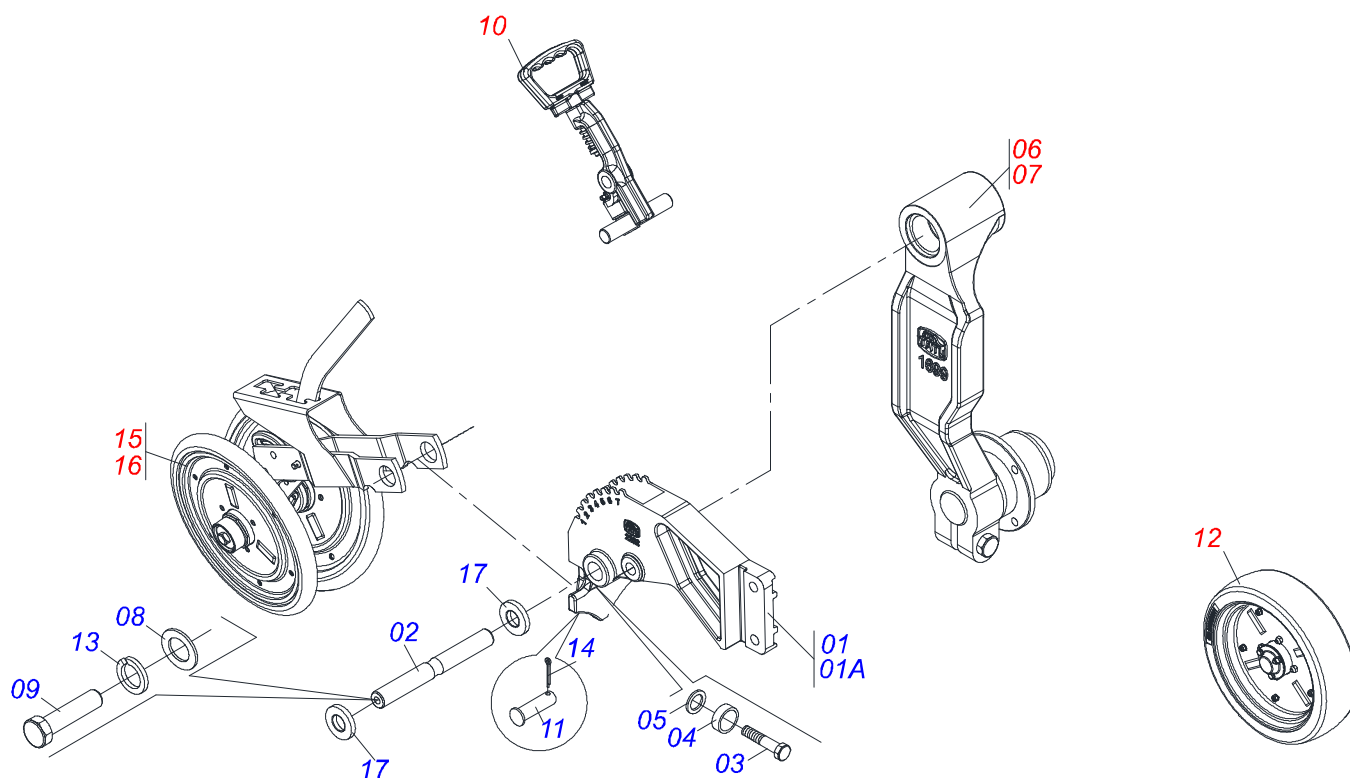 

Item	Code	Description	See page	QT
00	0521040111	ASSY DEPTH WHEEL/COMPACTOR SYSTEM	01	
01	0511051447	CONTROL DEPTH ASSY	01	
01A	0502012282	DEPTH CONTROL SUPPORT	01	
02	0531010765	DEPTH WHEEL AXLE	01	
03	0503010256	3/8" X 3/4" BOLT	01	
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE	02	
05	0511015346	FLAT WASHER	04	
06	0501058576	RIGHT WHEEL ARM	01	
07	0501058577	RIGHT ARM DEPTH CONTROL WHEEL	01	
08	0511017302	FLAT WASHER	02	
09	0503010311	1/2" X 1-1/4" BOLT	02	
10	0501052297	DEPTH WHEELS REGULATOR ASSY	01	
11	0521019093	0.6" X 2.7" PIVOT SHAFT	01	
12	0501052538	DEPTH BAND WITH ARMS	02	
12A	0503030551	DEPTH CONTROL WHEEL RUBBER BAND	01	
12B	0521010832	RIM FLANGE	02	
12C	0503010298	1/4" X 1/2" BOLT	05	
12D	0503010143	1/4" SPRING WASHER	05	
12E	0503010144	1/4" NUT	05	
13	0511055329	LEFT DEPTH WHEEL	04	
14	0551019650	SLEEVE 13,20 X 25 X 74	02	
15	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN	01	
16	0511054334	COMPACT WHEEL LEFT WITH BEARING	01	
17	0503015021	6871-GA SEAL RING	02	

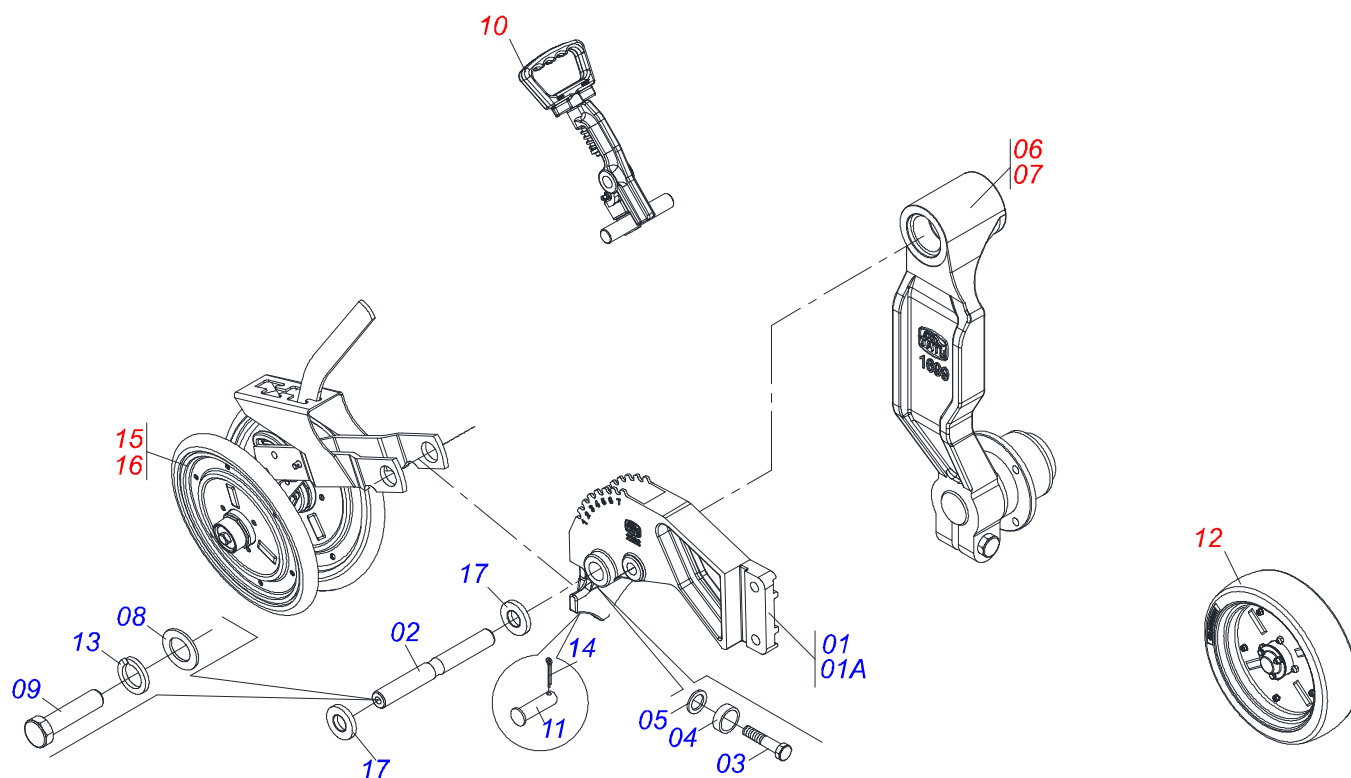 

Item	Code	Description	See page	QT
00	0521041945	SYSTEM CONTROL WHEELS COMPACTOR IRON		01
01	0511051447	CONTROL DEPTH ASSY		01
01A	0502012282	DEPTH CONTROL SUPPORT		01
02	0531010765	DEPTH WHEEL AXLE		01
03	0503010256	3/8" X 3/4" BOLT		01
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
05	0511015346	FLAT WASHER		04
06	0501058576	RIGHT WHEEL ARM		01
07	0501058577	RIGHT ARM DEPTH CONTROL WHEEL		01
08	0511017302	FLAT WASHER		02
09	0503010311	1/2" X 1-1/4" BOLT		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY		01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0501052538	DEPTH BAND WITH ARMS		02
13	0503011440	SPRING WASHER		04
14	0503010257	1/8" X 1" COTTERPIN		02
15	0511054837	RH IRON PRESS WHEEL		01
16	0511054838	LH IRON PRESS WHEEL		01
17	0503015021	6871-GA SEAL RING		02

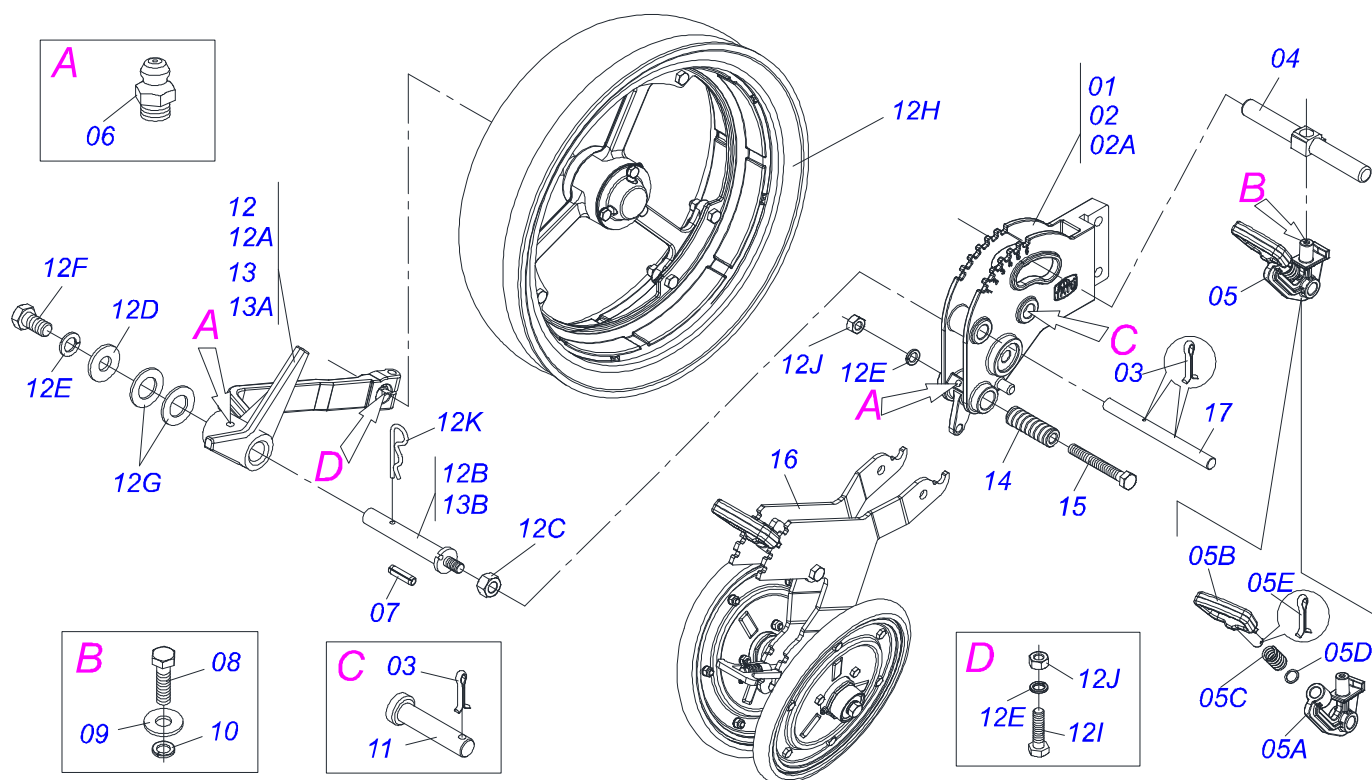 

Item	Code	Description	See page	QT
01	0521044269	PRESS WHEELS/DEPTH ASSY	01	
02	0511055326	DEPTH CONTROL PRESS WHEEL ASSY	01	
02A	0502012758	DEPTH CONTROL SUPPORT	01	
03	0503010071	3/16" X 1" COTTERPIN	03	
04	0502012611	DEPTH CONTROL AXLE	01	
05	0501059228	ADJUSTMENT LEVER	01	
05A	0502012603	ADJUSTMENT LEVER	01	
05B	0502011689	1/8" DEPTH CONTROL LEVER	01	
05C	0503030975	0.9" X 1.5" X 0.1" SPRING	01	
05D	0581019519	FLAT WASHER	01	
05E	0503019398	AXLE RETAINER RING	01	
06	0503010002	1800 GREASE FITTING	03	
07	0503011402	0.2" X 0.8" SPRING PIN	02	
08	0503010237	3/8" X 1" BOLT	01	
09	0501010984	FLAT WASHER	01	
10	0503010025	3/8" SPRING WASHER	01	
11	0571016132	PIVOT SHAFT	01	
12	0511055328	DEPTH WHEEL SYSTEM	01	
12A	0503010019	1/2" SPRING WASHER	02	
12B	0511055627	WHEEL ASSY RAYED	01	
12C	0503016453	1/2" X 2.1/2 BOLT	01	
12D	0503010060	1/2" NUT	01	
12E	0503010002	1800 GREASE FITTING	01	
12F	0503030012	HAIR PIN	01	
12G	0501011445	FLAT WASHER	02	
12H	0561014385	CARRYING-WHEELS PIVOT SHAFT	01	
12I	0571015974	WASHER	01	
12J	0511017302	FLAT WASHER	01	
12K	0503012412	5/8 UNC SELF LOCKING NUT	01	
12L	0501110777	RIGHT WHEEL ARM	01	
12M	0503010395	1/2" X 1-1/4" BOLT	01	


SISTEM WHEEL PROF COMPACT FULL

0909091574


Item	Code	Description	See page	QT
13	0511055329	LEFT DEPTH WHEEL		01
13A	0501110776	ARM,LEFT		01
13B	0511055627	WHEEL ASSY RAYED		01
13C	0571015974	WASHER		01
13D	0571015973	CARRYING-WHEELS PIVOT SHAFT		01
13E	0503010019	1/2" SPRING WASHER		02
13F	0503016453	1/2" X 2.1/2 BOLT		01
13G	0503010002	1800 GREASE FITTING		01
13H	0503030012	HAIR PIN		01
13I	0503012412	5/8 UNC SELF LOCKING NUT		01
13J	0503010028	1/2" NUT		01
13K	0501011445	FLAT WASHER		02
13L	0511017302	FLAT WASHER		01
13M	0503010395	1/2" X 1-1/4" BOLT		01
14	0551019650	SLEEVE 13,20 X 25 X 74		01
15	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
16	0511055327	COMPACTING WHEEL V ASSY RUBBER	65	01
17	0561014336	PIVOT SHAFT		01

IRON PRESS WHEEL

 
0909091575

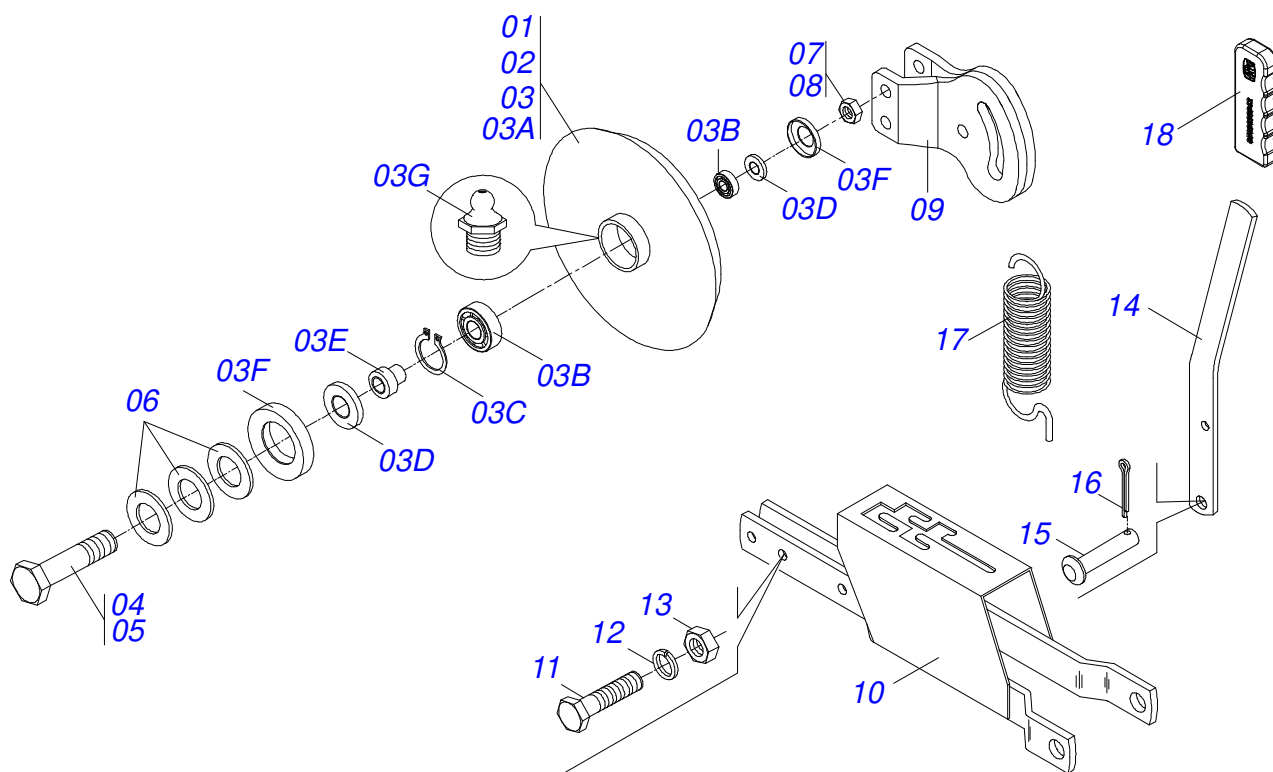


Item	Code	Description	See page
01	0511054837	RH IRON PRESS WHEEL	01
02	0511054838	LH IRON PRESS WHEEL	01
03	0501052957	IRON V PRESS WHEELS	01
03A	0502011932	IRON PRESS WHEELS	02
03B	0503010269	6204 BALL BEARING	02
03C	0503011105	SEAL RING	01
03D	0503013848	5072-BR SEAL	02
03E	0521019147	V COMPACT WHEELS AXLE	02
03F	0511011927	DUST CLOAK	02
03G	0503010691	1/4" GREASE FITTING	01
04	0503016449	1/2 X 4 BOLT	01
05	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT	01
06	0521014508	FLAT WASHER	06
07	0503012136	NUT 1/2 NF	01
08	0503016864	LH 1/2" LOCK NUT	01
09	0502012116	PRESS WHEEL ADJUSTER	01
10	0511069633	PRESS WHEELS COMPACTOR	01
11	0503010849	3/8" X 1-1/2" BOLT	02
12	0503011443	3/8" SPRING WASHER	02
13	0503010026	3/8" NUT	02
14	0541016906	PRESS WHEELS REGULATOR BODY	01
15	0521010539	0.3" X 1.2" COUPLING SHAFT	01
16	0503010140	1/8" X 3/4" COTTERPIN	01
17	0503030805	1.6" X 6" X 0.2 TRACTION SPRING	01
18	0503033942	COVER REGULATORY WHEEL	01

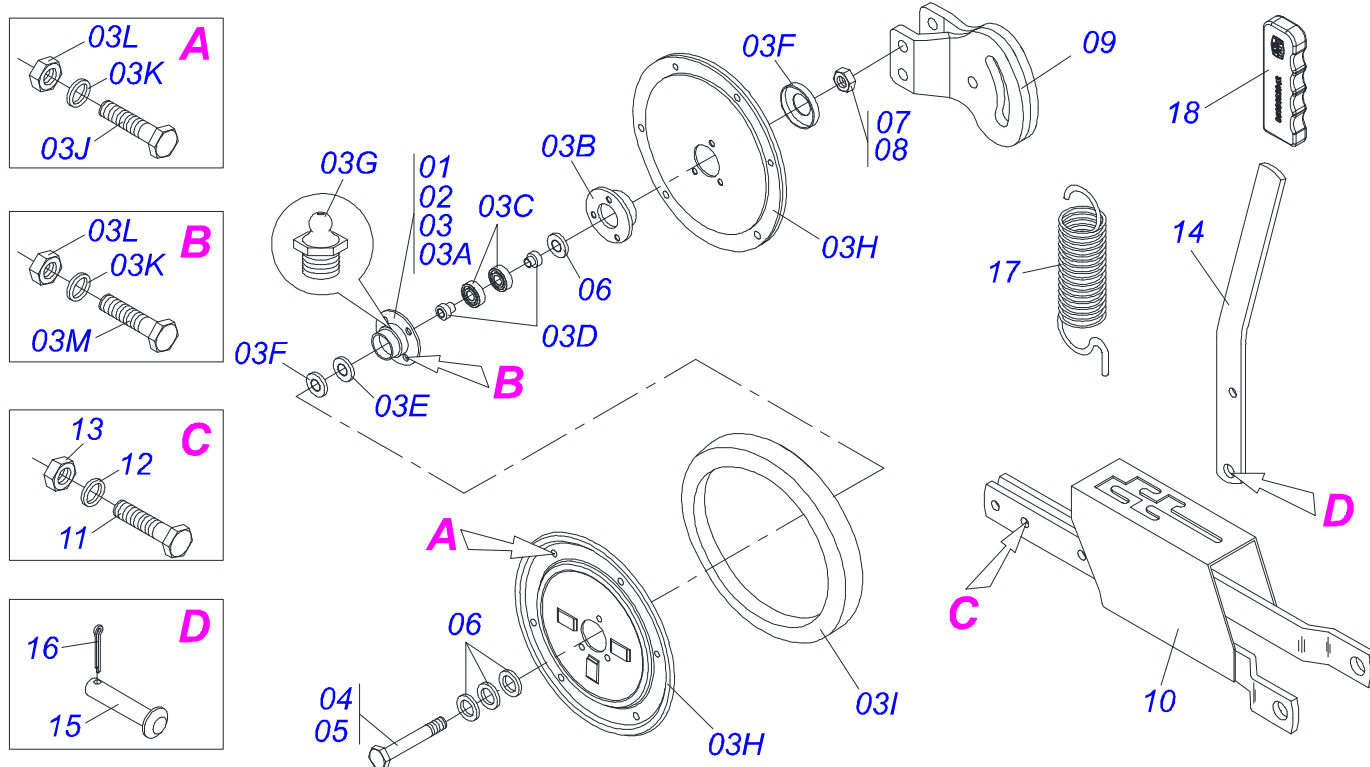 


Item	Code	Description	See page	DIR ESQ
01	0511054333	COMPACT WHEEL RIGHT WITH BEARING	01	
02	0511054334	COMPACT WHEEL LEFT WITH BEARING	01	
03	0501052908	COMPACTOR WHEEL WITH BEARING	01	
03A	0502011919	PRESS WHEEL HUB	01	
03B	0502011877	PRESS WHEEL HUB	01	
03C	0503010269	6204 BALL BEARING	02	
03D	0521018922	PRESS WHEEL PASSANG AXLE	02	
03E	0503012734	SEAL 01556 BR	02	
03F	0521018921	DUST CLOAK	02	
03G	0503010691	1/4" GREASE FITTING	01	
03H	0521018928	PRESS WHEEL RIM	02	
03I	0503031421	DEPTH CONTROL WHEEL RUBBER BAND	01	
03J	0503013816	5/16" LOCKNUT	09	
03K	0503010011	5/16" X 1/2" BOLT	06	
03L	0503010358	5/16" X 5/8" BOLT	03	
04	0503016449	1/2 X 4 BOLT	01	
05	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT	01	
06	0521014508	FLAT WASHER	06	
07	0503012136	NUT 1/2 NF	01	
08	0503016864	LH 1/2" LOCK NUT	01	
09	0502012116	PRESS WHEEL ADJUSTER	01	
10	0511069633	PRESS WHEELS COMPACTOR	01	
11	0503010849	3/8" X 1-1/2" BOLT	02	
12	0503011443	3/8" SPRING WASHER	02	
13	0503010026	3/8" NUT	02	
14	0541016906	PRESS WHEELS REGULATOR BODY	01	
15	0521010539	0.3" X 1.2" COUPLING SHAFT	01	
16	0503010140	1/8" X 3/4" COTTERPIN	01	
17	0503030805	1.6" X 6" X 0.2 TRACTION SPRING	01	
18	0503033942	COVER REGULATORY WHEEL	01	

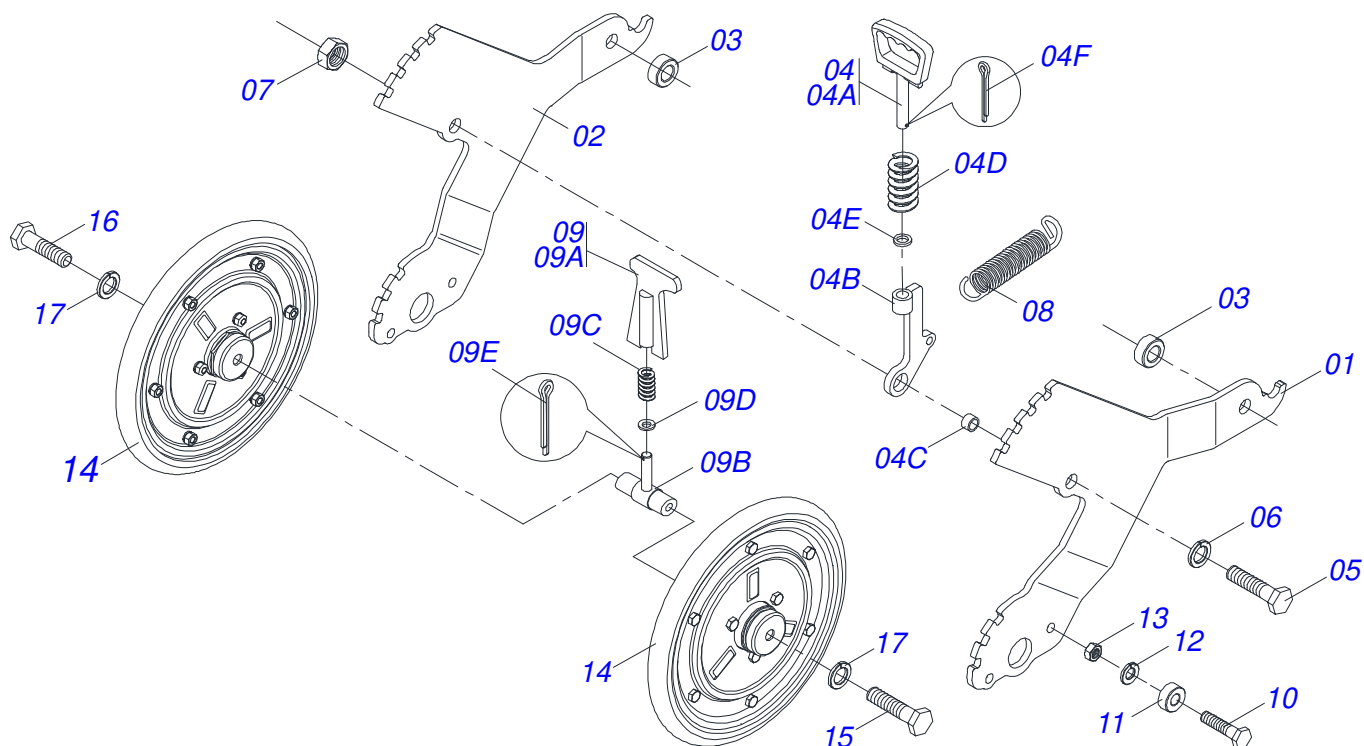 


Item	Code	Description	See page	QT
01	0571015324	COMPACT WHEEL RIGHT ARM	01	
02	0571015325	LH ARM PRESS WHEELS	01	
03	0541012145	SLEEV 13,5 X 25 X 18	02	
04	0501058362	LARGER HANDLE ASSY	01	
04A	0502011689	1/8" DEPTH CONTROL LEVER	01	
04B	0521064892	REGULACION SPRING COMPACTOR	01	
04C	0541012146	0.53" X 0.74" X 0.33" SLEEVE	01	
04D	0503030174	COMPRESSION SPRING	01	
04E	0541012143	FLAT WASHER	01	
04F	0503010257	1/8" X 1" COTTERPIN	01	
05	0503010479	BOLT	01	
06	0503010019	1/2" SPRING WASHER	01	
07	0503010060	1/2" NUT	01	
08	0503031393	1.57" X 5.98" X 0.2" TRACTION SPRING	01	
09	0501055289	HANDLE SMALLER ASSY	01	
09A	0511065451	PRESS WHEEL ADJUSTER	01	
09B	0511065496	PRESS WHEEL FIXER	01	
09C	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING	01	
09D	0541012143	FLAT WASHER	01	
09E	0503010257	1/8" X 1" COTTERPIN	01	
10	0503010397	5/16" X 1-3/4" BOLT	02	
11	0541012144	8,50 X 16 X 21 SLEEVE	02	
12	0503011444	SPRING WASHER	02	
13	0503010337	5/16" NUT	02	
14	0501052908	COMPACTOR WHEEL WITH BEARING	02	
15	0503010752	1/2" X 3.1/2" BOLT	01	
16	0503013739	1/2" X 1" BOLT	01	
17	0503011440	SPRING WASHER	02	

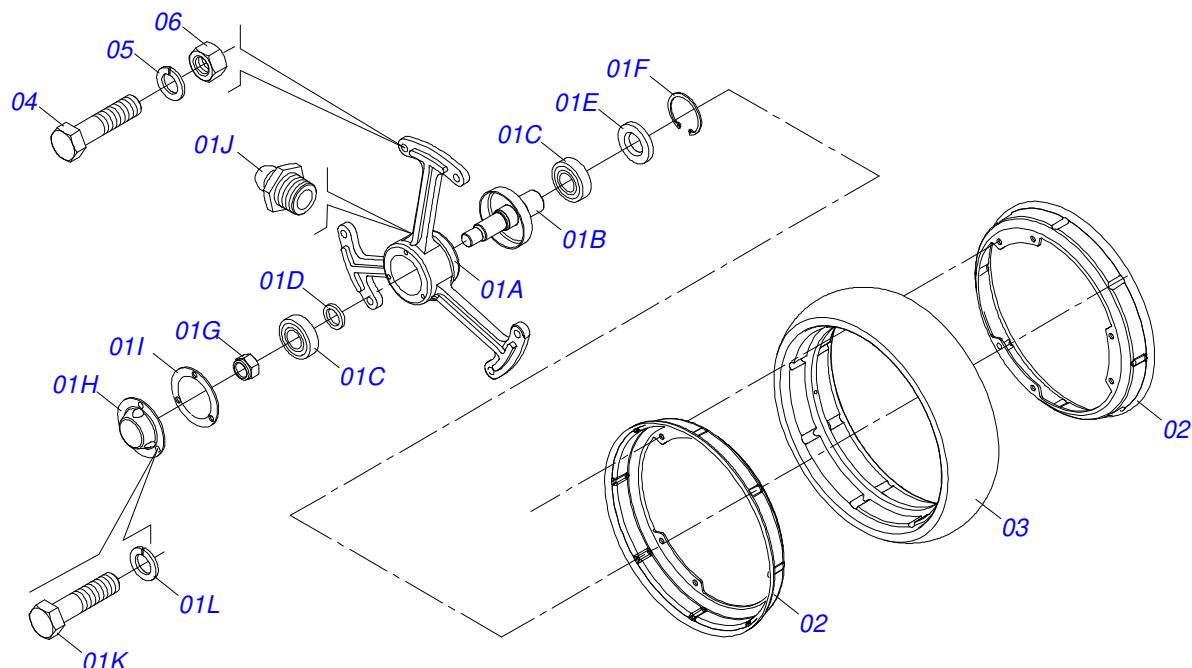 


Item	Code	Description	See page	QT
01	0501059240	STRIPED BOX WHEEL DEPTH ASSY		01
01A	0502012607	STRIPED BOX WHEEL DEPTH		01
01B	0511069860	DEPTH CONTROL AXLE WITH DUST CLOAK		01
01C	0503010269	6204 BALL BEARING		02
01D	0501013636	SPACING SLEEVE		01
01E	0503010689	SEAL 00763-BR		01
01F	0503011105	SEAL RING		01
01G	0503010811	5/8" UNF SELF ADJUSTING NUT		01
01H	0521019178	COVER DEPTH		01
01I	0503030757	2.9" X 2" X 0.02" JOINT		01
01J	0503010691	1/4" GREASE FITTING		01
01K	0503013758	1/4" X 1-1/2" BOLT		03
01L	0503011441	SPRING WASHER		03
02	0551019904	PRESS WHEEL RIM		02
03	0503030891	RUBBER BAND		01
04	0503010365	NUT		06
05	0503010179	LOCK WASHER		06
06	0503010337	5/16" NUT		06

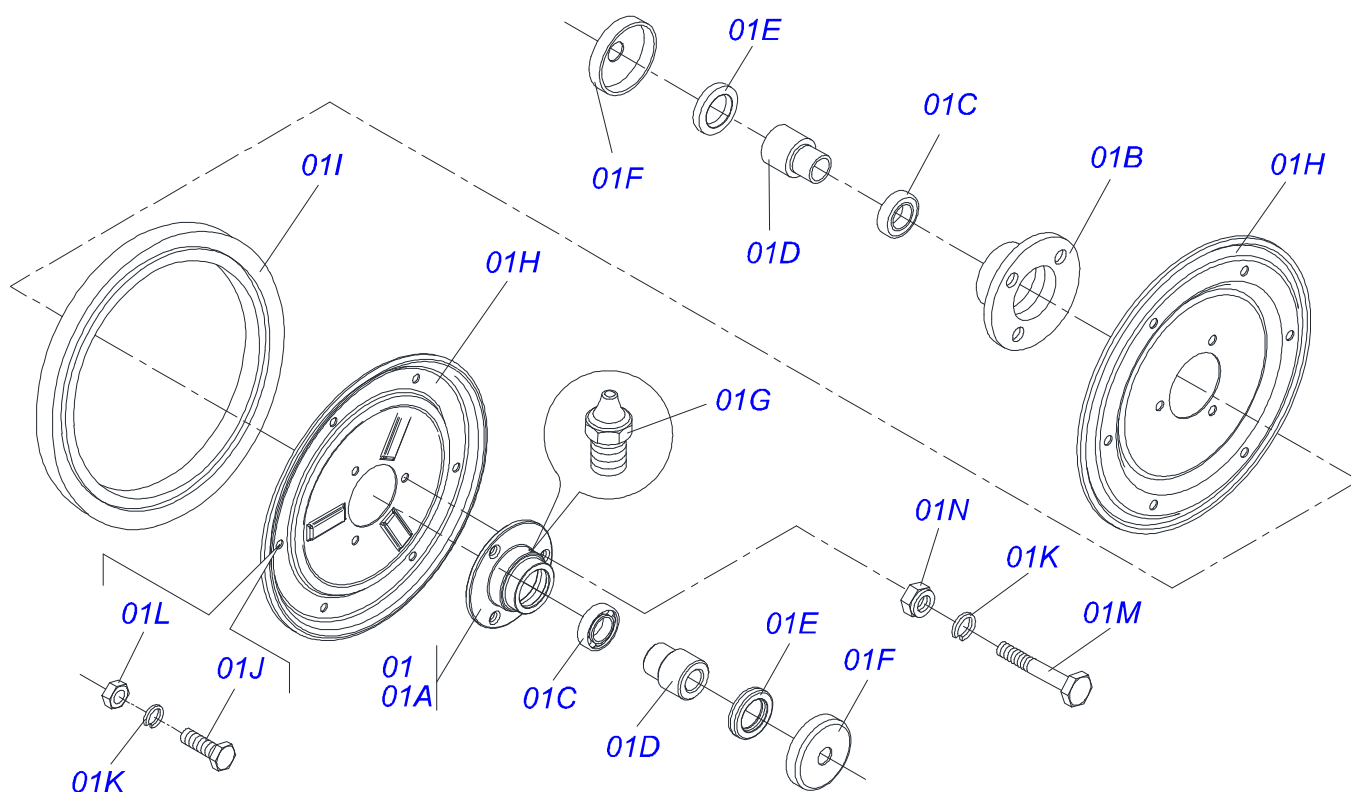 

Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING		01
01A	0502011919	PRESS WHEEL HUB		01
01B	0502011877	PRESS WHEEL HUB		01
01C	0503010269	6204 BALL BEARING		02
01D	0521018922	PRESS WHEEL PASSANG AXLE		02
01E	0503012734	SEAL 01556 BR		02
01F	0521018921	DUST CLOAK		02
01G	0503010691	1/4" GREASE FITTING		01
01H	0521018928	PRESS WHEEL RIM		02
01I	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
01J	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		06
01K	0503010179	LOCK WASHER		09
01L	0503010337	5/16" NUT		06
01M	0503010371	5/16" X 1" BOLT		03
01N	0503013816	5/16" LOCKNUT		03

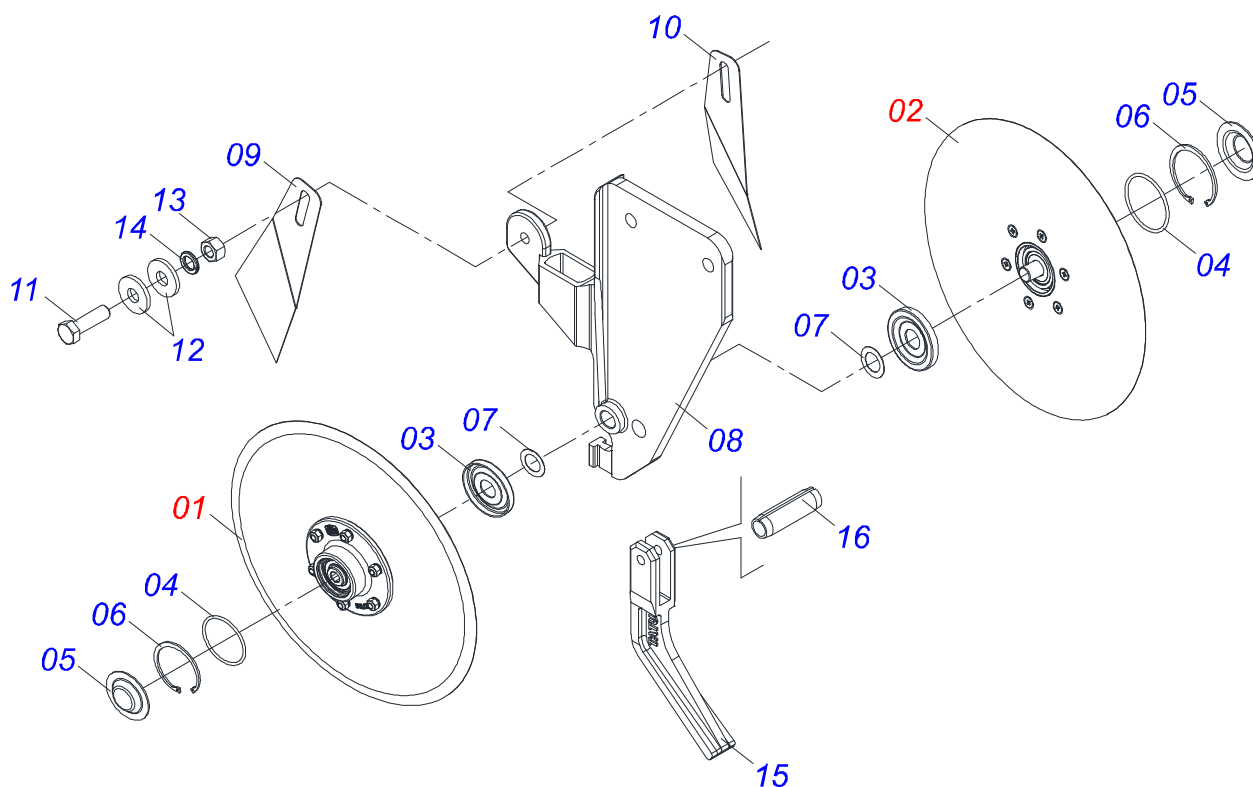 


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15		01
02	0511053173	CUBE LOW RIGHT WITH DISC 15		01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503010025	3/8" SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

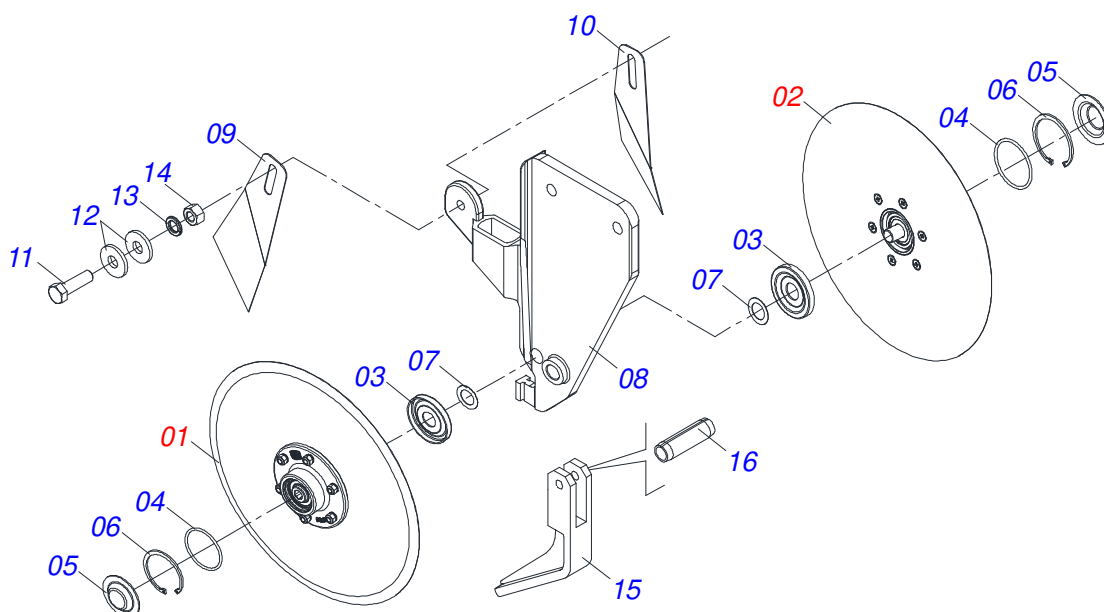 


Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15		01
02	0511053172	LEFT LOW CUBE WITH DISC 15		01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010025	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

DRAWBAR ESTABILIZER

 
0501055579

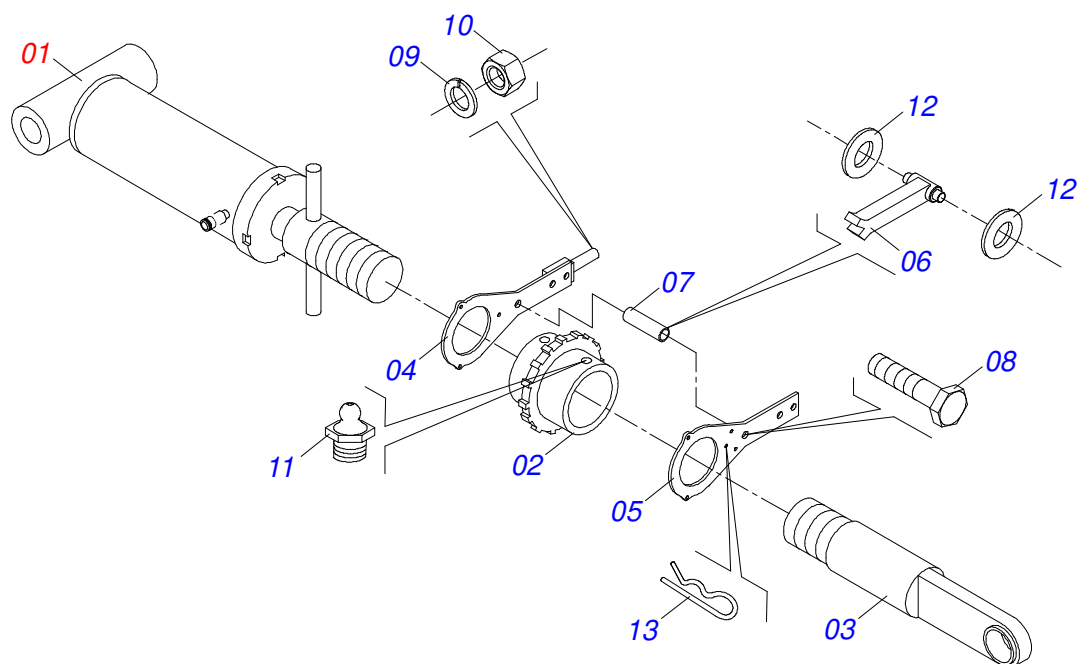


Item	Code	Description	See page	QT
001	0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER	71	01
002	0502011237	ESTABILIZER BODY		01
003	0511065467	LH SCREW ARBOR		01
004	0511061880	SIDE RIGHT RATCHET		01
005	0531010264	SIDE RATCHET		01
006	0511061881	RATCHET FOLLOWER		01
007	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
008	0503011179	3/8" X 2-1/4" BOLT		05
009	0503010025	3/8" SPRING WASHER		05
010	0503010026	3/8" NUT		05
011	0503010002	1800 GREASE FITTING		02
012	0521018517	FLAT WASHER		02
013	0503030012	HAIR PIN		01

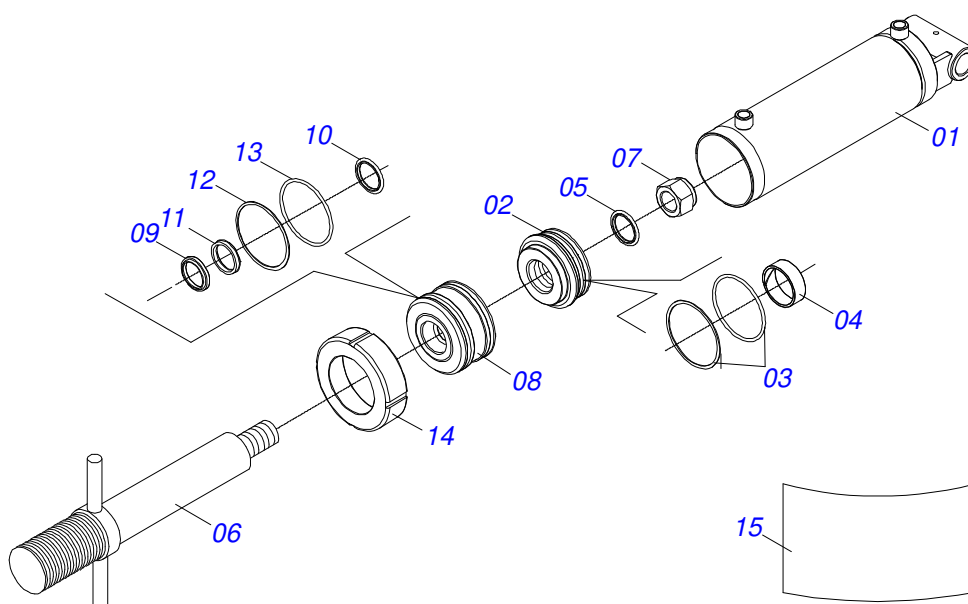 


Item	Code	Description	See page	07
01	0511064908	4.5" X 25.4" CYLINDER CASE		01
02	0502011221	2.0" X 4.5" PISTON		01
03	0503011890	3750-3750 GASKET		02
04	0503011891	W2-4500-500 RING G.E		01
05	0503010345	2-218 N 3006-9B O'RING		01
06	0511064909	2" X 14.4" TURNBUCLE		01
07	0503010817	1.1/4" SELF LOCKING NUT		01
08	0502011220	2" X 4.5" RING SUPPORT		01
09	0503010952	W2-2250-500 RING		01
10	0503010991	1870-2000-375-B GASKET		01
11	0503010039	D-2000 SCRAPER RING		01
12	0503011892	O' RING, 2-346 N 3006-9B		01
13	0503011893	BACK-UP RING, 8-346		01
14	0502011222	0.56" END CAP		01
15	0501032513	HYDRAULIC CYLINDER REPAIR KIT		01

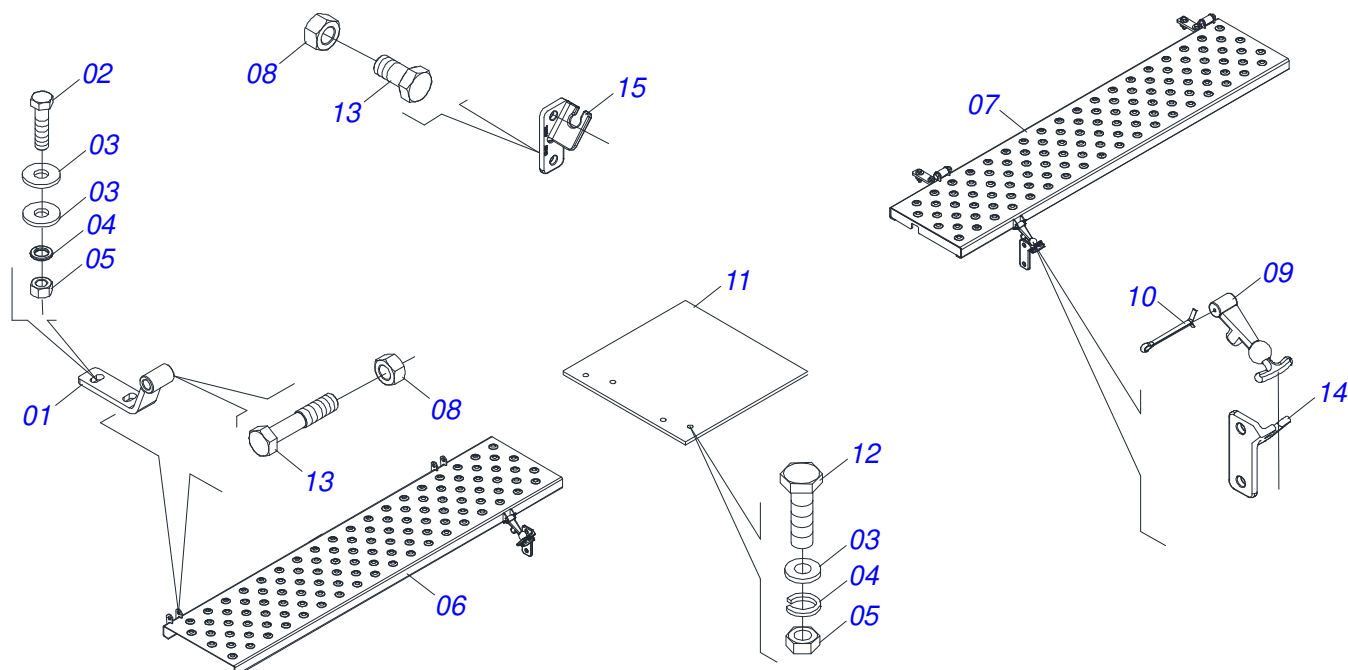 


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT		04
002	0503010849	3/8" X 1-1/2" BOLT		08
003	0501010984	FLAT WASHER		18
004	0503010025	3/8" SPRING WASHER		10
005	0503010026	3/8" NUT		10
006	0521063178	RIGHT PLATFORM		01
007	0521063179	LEFT PLATFORM PST DUO 13/F		01
008	0503011336	1/2" HEX SELF ADJUSTING NUT		04
009	0503011333	COVER FIXER		02
010	0503010274	5/32"X 2" COTTERPIN		02
011	0571017990	PLATFORM ENHANCEMENT PROTECTION		01
012	0501010942	3/8" X 1-1/4" BOLT		02
013	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		04
014	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
015	0502012739	PLATFORM LEFT FIXER SUPPORT		01

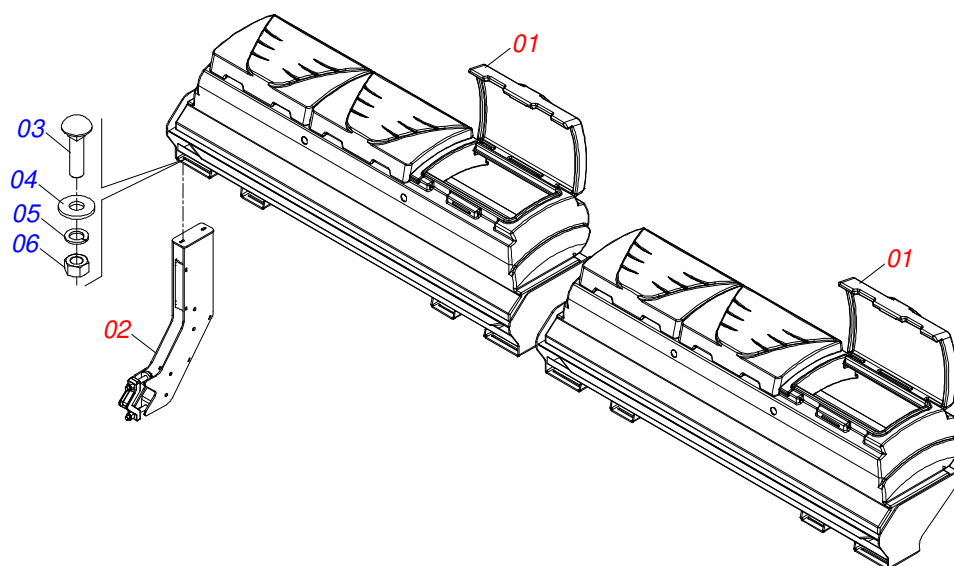 


Item	Code	Description	See page	QT
01	0511058100	2 BOXES WITH 9 CONDUCTORS ASSEMBLY	74	01
02	0521051927	TOWER SUPPORT HOPPER		04
03	0501010942	3/8" X 1-1/4" BOLT		08
04	0501010984	FLAT WASHER		08
05	0503010025	3/8" SPRING WASHER		08
06	0503010026	3/8" NUT		08

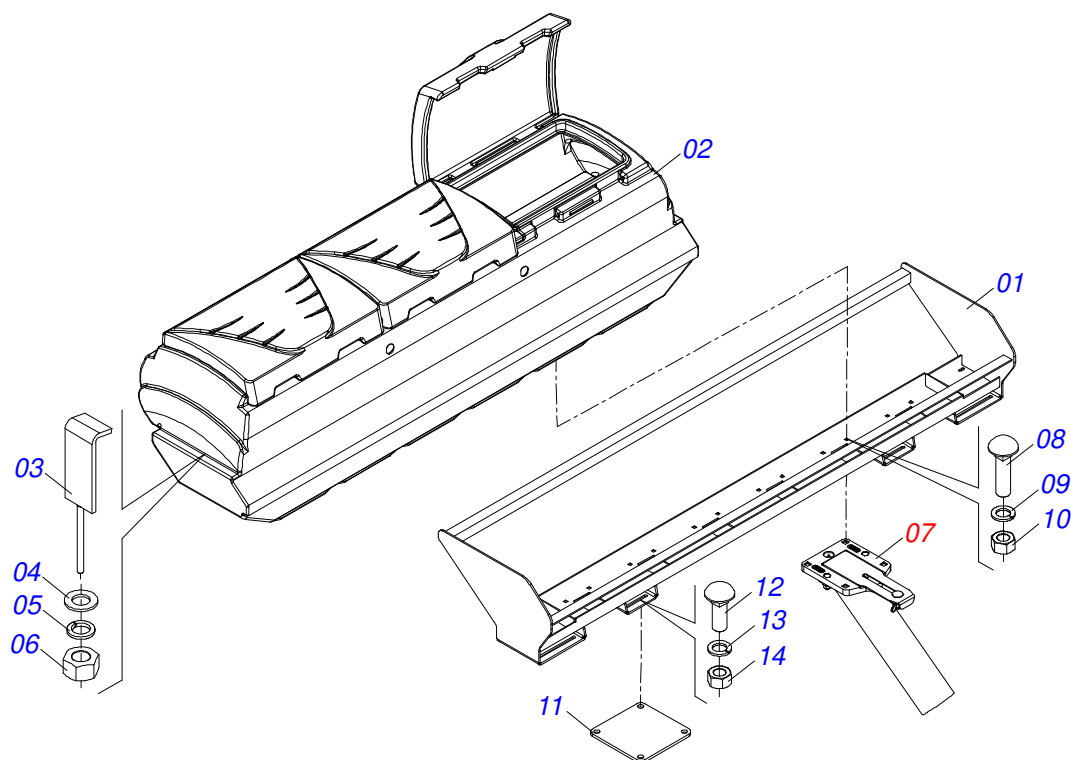 


Item	Code	Description	See page	QT
01	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS		02
02	0503061899	REAR BEAN FERTILIZER ASSY		02
03	0521063401	SEED BOX ONLY FIXING LOCK		04
04	0501010984	FLAT WASHER		04
05	0503010025	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0511057690	3" ARTICULATED SEED CONDUCTOR	76	09
08	0501010942	3/8" X 1-1/4" BOLT		36
09	0503010025	3/8" SPRING WASHER		36
10	0503010026	3/8" NUT		36
11	0571015773	SUPPORT SEED		03
12	0501011643	3/8 X 1" BOLT		12
13	0503010025	3/8" SPRING WASHER		12
14	0503010026	3/8" NUT		12

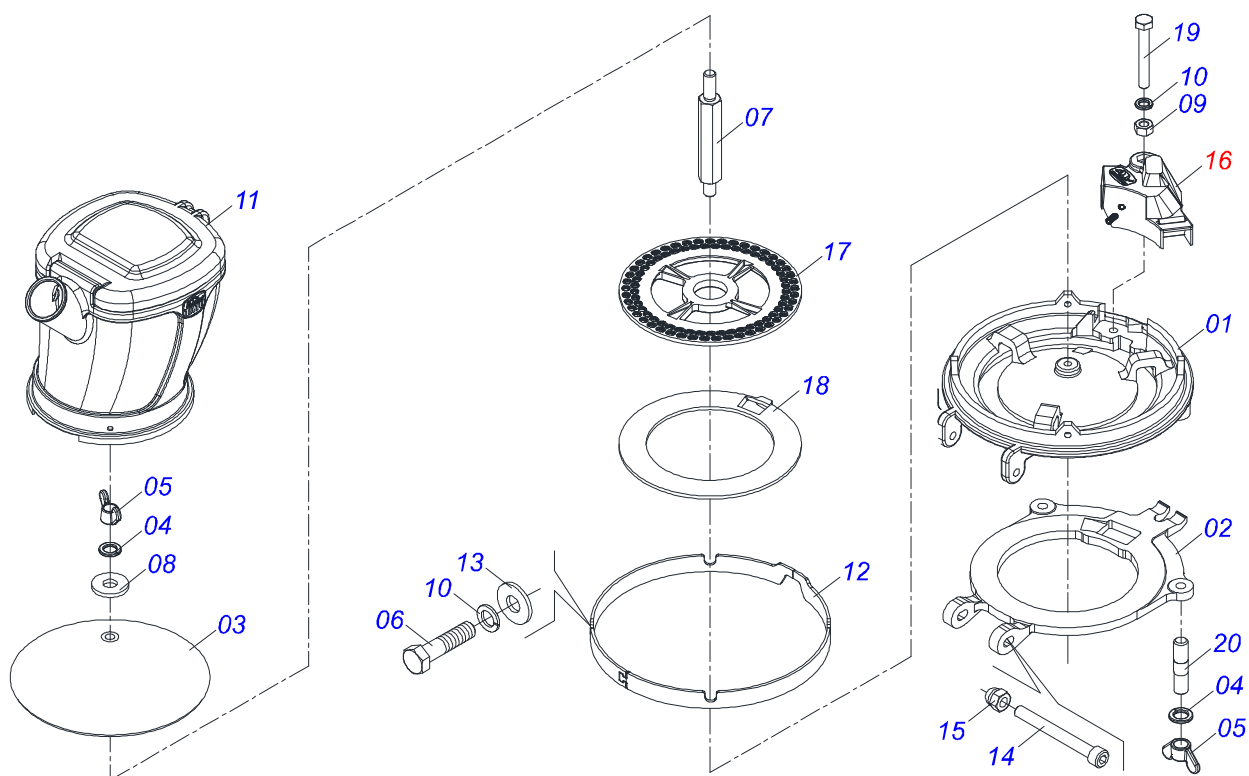 


Item	Code	Description	See page	QT
01	0502020693	SUPPORT SEED BOX	01	
02	0502012721	SEED DISC LOWER TRAIL	01	
03	0503034131	DEFLECTOR	01	
04	0503010025	3/8" SPRING WASHER	03	
05	0503010209	3/8" UNC BUTTERFLY NUT	03	
06	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN	04	
07	0571018536	HEX PRISONER	01	
08	0501010984	FLAT WASHER	01	
09	0503010337	5/16" NUT	01	
10	0503010179	LOCK WASHER	05	
11	0503062582	DEPOSIT SEED	01	
12	0581011346	ADAPTER DEPOSIT	01	
13	0501010694	FLAT WASHER	04	
14	0503016282	ALLEN BOLT	01	
15	0503016283	M8 NUT HEX	01	
16	0501051094	ASSY SEED DISTRIBUTOR	01	
17	0503016217	SOYBEAN SEED DISC 34 OBLONG	01	
18	0503016219	RING TO SOYBEANS	01	
19	0503010675	5/16" X 2.1/4" BOLT	01	
20	0503030083	3/8" X 3/8" X 1.6" STUD	02	

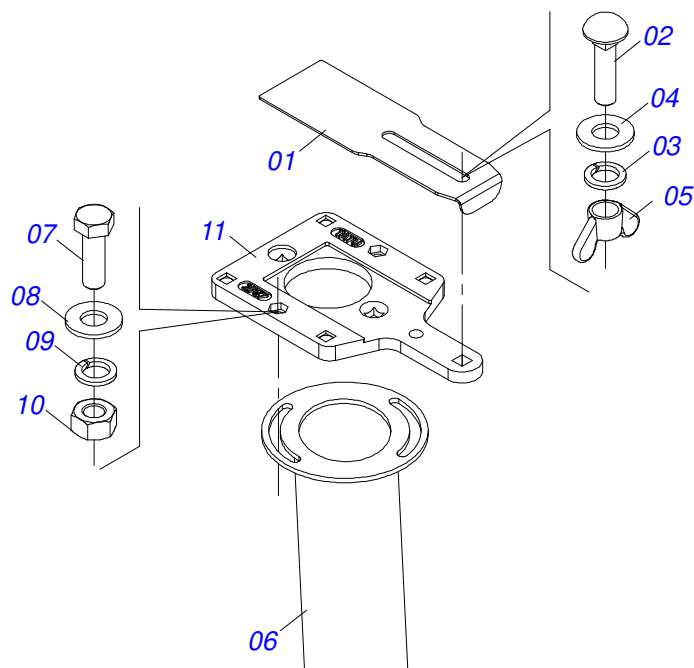 

Item	Code	Description	See page	QT
01	0571015779	COVER SUPPORT CONDUCTOR ARTICULATION		01
02	0501010942	3/8" X 1-1/4" BOLT		01
03	0503010025	3/8" SPRING WASHER		01
04	0501010984	FLAT WASHER		01
05	0503010209	3/8" UNC BUTTERFLY NUT		01
06	0521066332	CONDUCTOR WITH FLANGE		01
07	0503010371	5/16" X 1" BOLT		02
08	0501010694	FLAT WASHER		02
09	0503010179	LOCK WASHER		02
10	0503010337	5/16" NUT		02
11	0502012767	FIXER CONDUCTOR SEED CSU SUPPORT		01

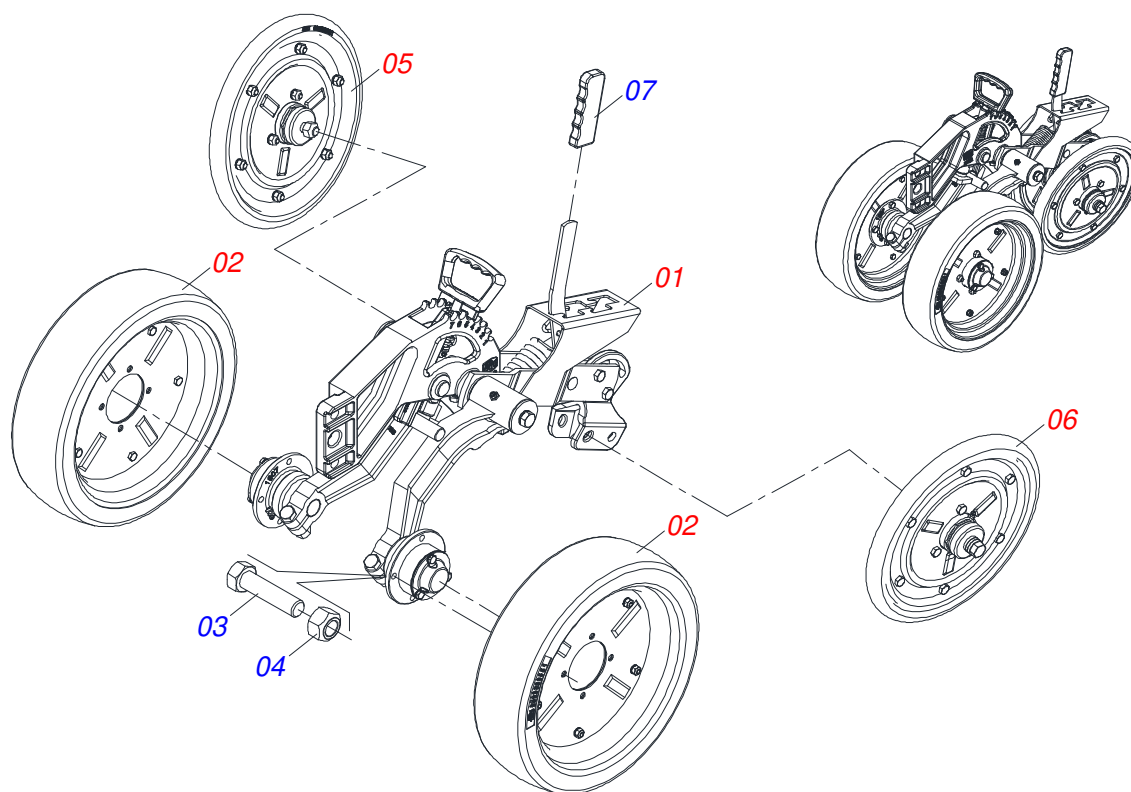 

Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL		01
02	0501052538	DEPTH BAND WITH ARMS		02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING		01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING		01
07	0503033942	COVER REGULATORY WHEEL		01

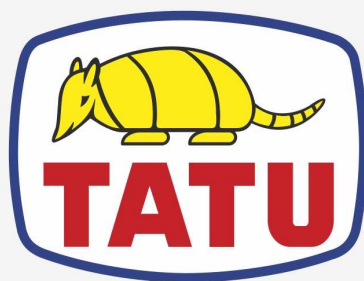 

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

