

ROW CROP PLANTERS

COP CA - TITANIUM - LINES 07/09 - CSU

Code: 0501092795
Series: S-0913
Revision: 00
Date Revision: JULHO/2021

PARTS CATALOGUE



MARCHESAN

PRODUCTS

Code	Description
0111300023	COP CA 7/7 MH CSU TIT S-0913
0111300025	COP CA 7/7 MH CSU TIT PM400 S-0913
0111300037	COP CA 9/9 CSU TIT MSA PM400 S-0913
0111300030	COP CA 9/9 CSU TIT S-0913
0111300042	COP CA 9/9 MH CSU SPCRR TVS S-0913
0111300016	COP CA 9/9 MH CSU TIT S-0913
0111300020	COP CA 9/9 MH CSU TIT MSA S-0913
0111300029	COP CA 9/9 MH CSU TIT PM100 S-0913
0111300031	COP CA 9/9 MH CSU TIT PM400 S-0913
0111300041	COP CA 9/9 MH SPCRR CSU TIT PM400 S-0913
0111300043	COP CA 9/9 MH SPCRR CSU TIT S-0913

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.



MARCHESAN

INDEX


0909099173	07 AT 09 ROW FRAME	1
0501059662	CONJUNTO RODADO DIREITO SEMI MONTADO	2
0501059663	SET WHEELED LEFT SEMI MOUNTED	3
0501048672	CHAIN TENSIONER ASSY	4
0501059655	HUB CARRYING-WHEELS	5
0501053522	WHEEL CHAIN TENSIONER	6
0511053887	WHEEL FIXING ASSY	7
0511055725	TRANSMISSION ASSEMBLY	8
0511053899	TRANSMISSION ASSEMBLY	9
0511053898	SET OF INTERNAL TRANSMISSION	10
0511053897	TRANSMISSION ASSEMBLY	11
0511048348	RIGHT GEAR BOX ASSY	12
0501058212	SEMI MOUNTED RIGHT CHANGE	13
0511048349	RIGHT GEAR BOX ASSY	14
0501058213	LH GEAR BOX	15
0501054655	CHAIN TENSIONER ASSY	16
0501054686	GEAR BOX CHAIN TENSIONER	17
0501052788	CHAIN TENSIONER ASSY	18
0501052810	TRANSMISSION CHAIN TENSIONER ASSY	19
0501053846	MIDDLE BEARING OF THE TRANSMISSION	20
0511053915	HEXAGONAL SHAFT ASSEMBLY	21
0511053886	HEXAGONAL AXLE ASSEMBLY	22
0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	23
0511053918	FERTILIZER BOX ASSEMBLY	24
0511053892	FERTILIZER BOX ASSEMBLY	25
0511051077	SUPPORT RIGHT BOX FERTILIZER WITH DISTRIBUTOR	26
0511051078	SUPPORT LEFT BOX FERTILIZER WITH DISTRIBUTOR	27
0501059656	FERTILIZER SUPORT RIGHT BOX	28
0501059657	FERTILIZER SUPORT LEFT BOX	29
0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	30
0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	31
0511053919	HYDRAULIC ASSEMBLY	32
0511053893	HYDRAULIC ASSEMBLY	33
0511053894	HYDRAULIC CYLINDER ASSEMBLY	34
0511058411	HYDRAULIC CYLINDER	35
0511053920	OIL PIPE ASSEMBLY	36
0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	37
0511052909	HYDRAULIC MARKER	38
0511058449	HYDRAULIC CYLINDER	39
0501050633	MARKER DISC ASSY LINE	40
0511052197	WHEELS HOSE ASSEMBLY	41
0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	42
0511053895	OIL DUCT ASSEMBLY	43
0511053917	PLATFORM ASSEMBLY	44
0511053891	PLATFORM ASSEMBLY	45
0511053916	HANDRAIL ASSEMBLE	46
0511053889	HANDRAIL ASSEMBLE	47
0511053890	HANDRAIL ASSEMBLE	48
0511053085	ASSY FIXER HEADER	49
0511043100	DRAWBAR ASSY	50
0511058192	ASSY PORT MANUAL INSTRUCCION	51
0511058191	REST ASSY	52
0909092346	SEED/FERTILIZER ROW ASSEMBLE	53
0501059362	LONG SEED ROW FRONT	54
0501059350	LONG FRONT SEED ROW	55



MARCHESAN


INDEX

0501059349	SHORT SEED ROW FRONT	56
0501059361	SHORT SEED ROW FRONT	57
0501052769	BEARING WITH 17Z GEAR	58
0511054884	TRANSMISSION BOX	59
0511052319	RIGHT REAR SEED ROW	60
0511052320	REAR LEFT ROW SEED TITANIUM	61
0501059631	DDD SEED 15" X 15" RIGHT	62
0501054168	BOX DDD ASSY DPL 15 LEFT	63
0501054167	BOX DDD ASSY DPL 15 RIGHT	64
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	65
0511058650	SEMI-MOUNTED DEPTH CONTROL	66
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	67
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	68
0501052627	ASSY DEPTH WHEEL BOX	69
0501052297	DEPTH WHEELS REGULATOR ASSY	70
0501052538	DEPTH BAND WITH ARMS	71
0511054333	COMPACT WHEEL RIGHT WITH BEARING	72
0511054334	COMPACT WHEEL LEFT WITH BEARING	73
0501052908	COMPACTOR WHEEL WITH BEARING	74
0521051424	WHEEL SYSTEM DEPTH / COMPACTOR QUICK ADJUSTMENT	75
0511053825	SEMI-ASSEMBLED SHORT FERTILIZER LINE	76
0511053826	SEMI-ASSEMBLED LONG FERTILIZER LINE	77
0511048339	24" BLADE DISC ASSY	78
0503062066	DISC SET WITH CORN RING	79
0503062067	DISC SET / RING SOY 90F TITANIUM	80
0511052024	FAST CLOSING SET	81
0511056393	PLANTING OF MONITORING ASSEMBLY	82
0521053462	PLANTING OF MONITORING ASSEMBLY	83
0511058100	ENSEMBLE BOX UNIQUE SEED C3	84
0511058101	ASSEMBLY CSU C3 SEMI MOUNTED 4045/4495	85
0511058368	EAR MOVABLE	86

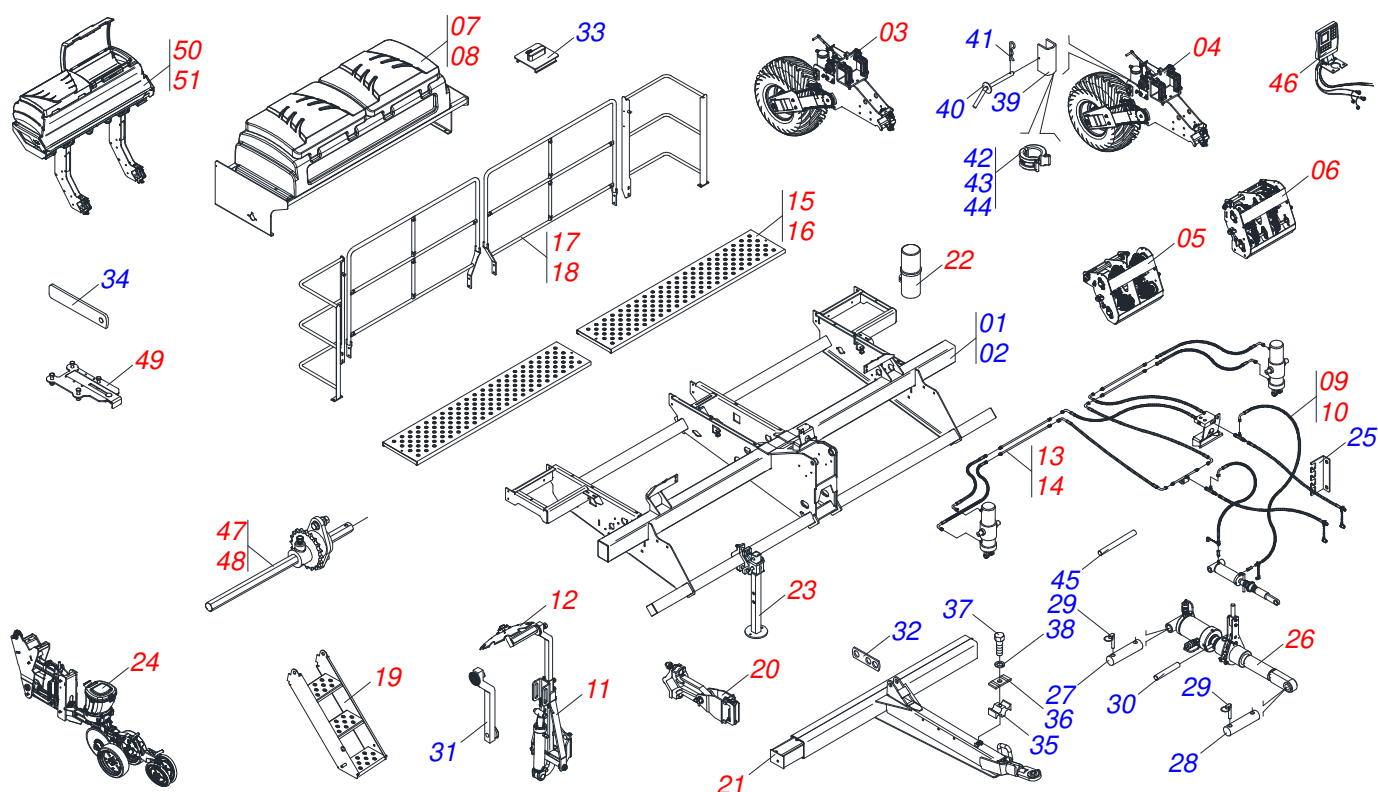

Item	Code	Description	See page	07 09
01	0521062422	FRAME		01 00
02	0521061323	FRAME		00 01
03	0501059662	CONJUNTO RODADO DIREITO SEMI MONTADO	2	01 01
04	0501059663	SET WHEELED LEFT SEMI MOUNTED	3	01 01
05	0511055725	TRANSMISSION ASSEMBLY	8	01 00
06	0511053899	TRANSMISSION ASSEMBLY	9	00 01
07	0511053918	FERTILIZER BOX ASSEMBLY	24	02 00
08	0511053892	FERTILIZER BOX ASSEMBLY	25	00 02
09	0511053919	HYDRAULIC ASSEMBLY	32	01 00
10	0511053893	HYDRAULIC ASSEMBLY	33	00 01
11	0511052909	HYDRAULIC MARKER	38	01 01
12	0501050633	MARKER DISC ASSY LINE	40	01 01
13	0511053920	OIL PIPE ASSEMBLY	36	01 00
14	0511053895	OIL DUCT ASSEMBLY	43	00 00
15	0511053917	PLATFORM ASSEMBLY	44	01 00
16	0511053891	PLATFORM ASSEMBLY	45	00 01
17	0511053916	HANDRAIL ASSEMBLE	46	01 00
18	0511053889	HANDRAIL ASSEMBLE	47	00 01
19	0511053890	HANDRAIL ASSEMBLE	48	02 02
20	0511053085	ASSY FIXER HEADER	49	02 02
21	0511043100	DRAWBAR ASSY	50	01 01
22	0511058192	ASSY PORT MANUAL INSTRUCCION	51	01 01
23	0511058191	REST ASSY	52	01 01
24	0909099175	SEED/FERTILIZER ROW ASSEMBLE		07 09
25	0541014576	HOSE FIXER ASSY		01 01
26	0501055579	DRAWBAR ESTABILIZER		01 01
27	0521018532	1.4" X 12" COUPLING SHAFT		01 01
28	0521018531	1.4" X 4.5" COUPLING SHAFT		01 01
29	0503030085	LOCK PIN		02 02
30	0521018501	TURNBUCKLE LEVER		01 01
31	0511066652	400 TURNBUCKLE		02 02

Item	Code	Description	See page	07 09
32	0561019087	DRAWBAR TRANSPORT LOCK		01 01
33	0503032624	SILO FERTILIZER GUTTER		06 06
34	0511015627	SEED DISC LEVER		01 01
35	0502012702	BODY SUPPORT CLAMP		03 03
36	0531011180	UPPER BODY CLIP		01 01
37	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04 04
38	0503010180	7/16" SPRING WASHER		04 04
39	0521013022	TRANSPORT LOCK		02 02
40	0501068994	0.3" X 3.1" LOCK PIN		02 02
41	0503030168	HAIR PIN		02 02
42	0501047885	ROD STOP		03 03
43	0501047886	ROD STOP		03 03
44	0501047887	ROD STOP		03 03
45	0531013600	PRESS ADJUSTMENT LEVER		01 01
46	0511056393	PLANTING OF MONITORING ASSEMBLY	82	01 01
46.	0521053462	PLANTING OF MONITORING ASSEMBLY	83	01 01
47	0511053915	HEXAGONAL SHAFT ASSEMBLY	21	01 00
48	0511053886	HEXAGONAL AXLE ASSEMBLY	22	00 01
49	0511059709	SUPPOT BASE		07 09
50	0511058101	ASSEMBLY CSU C3 SEMI MOUNTED 4045/4495	85	01 00
51	0511058100	ENSEMBLE BOX UNIQUE SEED C3	84	00 01
52	0511058368	EAR MOVABLE	86	01 01

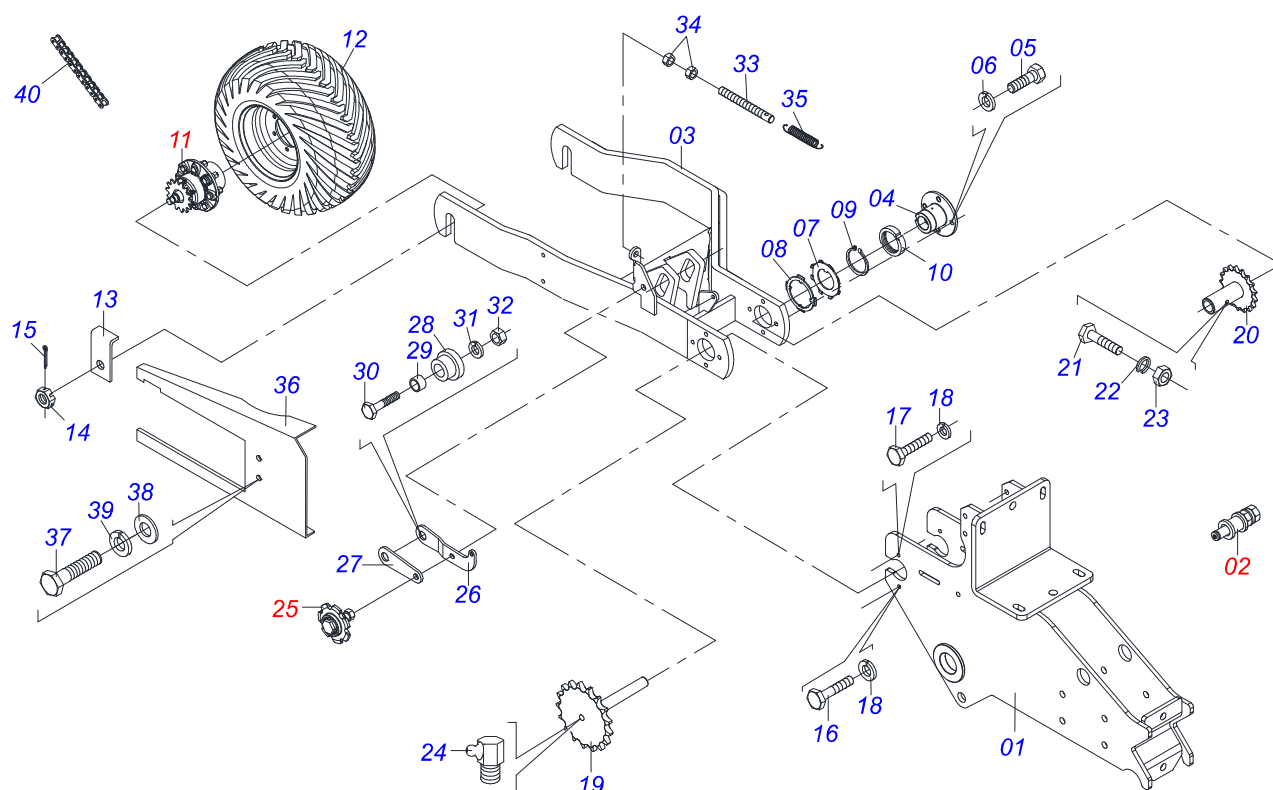


Item	Code	Description	See page	QT
01	0511065423	WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY	4	01
03	0521061337	RIGHT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0501059655	HUB CARRYING-WHEELS	5	01
12	0503060602	400/60 X 15,5-14L RODA		01
13	0531015109	WHEEL AXLE LOCK		02
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010523	1/4" X 2" COTTERPIN		02
16	0503010834	1/2 X 1 BOLT		03
17	0503010395	1/2" X 1-1/4" BOLT		01
18	0503010019	1/2" SPRING WASHER		04
19	0511064769	15Z GEAR WITH AXLE		01
20	0511061809	15Z GEAR WITH COUPLING		01
21	0503011103	7/16" X 2-1/2" BOLT		01
22	0503010180	7/16" SPRING WASHER		01
23	0503010244	7/16" NUT		01
24	0503010004	1890 GREASE FITTING		02
25	0501053522	WHEEL CHAIN TENSIONER	6	01
26	0531018654	CHAIN TIGHTENER SUPPORT		01
27	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
28	0531016916	SLEEVE BEARING SUPPORT		02
29	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE		01
30	0503010899	5/8" X 2-1/4" BOLT		01
31	0503010027	5/8" SPRING WASHER		01



COP CA - TITANIUM - LINES 07/09 - CSU
CONJUNTO RODADO DIREITO SEMI MONTADO


Page 2
0501059662

Item	Code	Description	See page	QT
32	0503010013	5/8" NUT		01
33	0501013491	5/8" TENSIONER SPRING		01
34	0503010013	5/8" NUT		02
35	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
36	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
37	0501018535	1/2 X 1 BOLT		02
38	0511017302	FLAT WASHER		02
39	0503010019	1/2" SPRING WASHER		02
40	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01

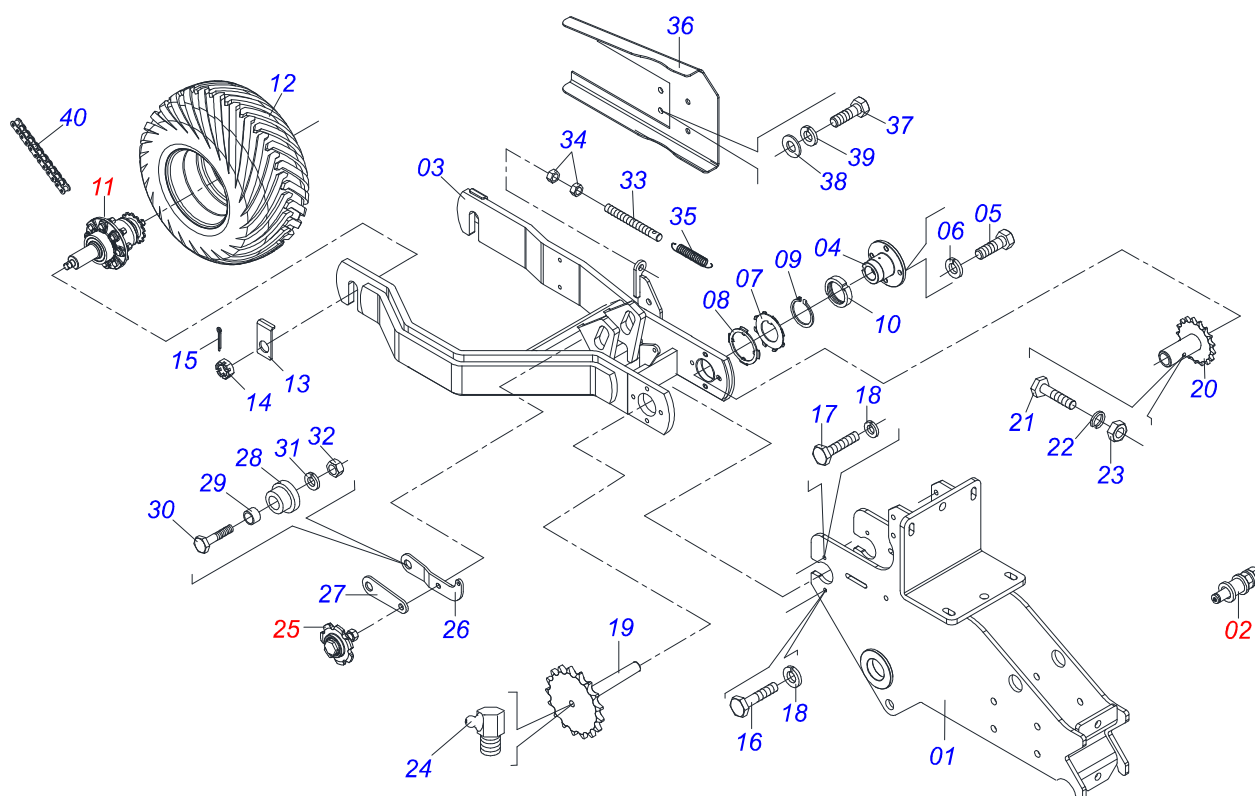

Item	Code	Description	See page	QT
01	0511065423	WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY	4	01
03	0521061338	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0501059655	HUB CARRYING-WHEELS	5	01
12	0503060602	400/60 X 15,5-14L RODA		01
13	0531015109	WHEEL AXLE LOCK		02
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010523	1/4" X 2" COTTERPIN		02
16	0503010834	1/2 X 1 BOLT		03
17	0503010395	1/2" X 1-1/4" BOLT		01
18	0503010019	1/2" SPRING WASHER		04
19	0511064769	15Z GEAR WITH AXLE		01
20	0511061809	15Z GEAR WITH COUPLING		01
21	0503011103	7/16" X 2-1/2" BOLT		01
22	0503010180	7/16" SPRING WASHER		01
23	0503010244	7/16" NUT		01
24	0503010004	1890 GREASE FITTING		02
25	0501053522	WHEEL CHAIN TENSIONER	6	01
26	0531018654	CHAIN TIGHTENER SUPPORT		01
27	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
28	0531016916	SLEEVE BEARING SUPPORT		02
29	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE		01
30	0503010899	5/8" X 2-1/4" BOLT		01
31	0503010027	5/8" SPRING WASHER		01


Item	Code	Description	See page	QT
32	0503010013	5/8" NUT		01
33	0501013491	5/8" TENSIONER SPRING		01
34	0503010013	5/8" NUT		02
35	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
36	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
37	0501018535	1/2 X 1 BOLT		02
38	0511017302	FLAT WASHER		02
39	0503010019	1/2" SPRING WASHER		02
40	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01

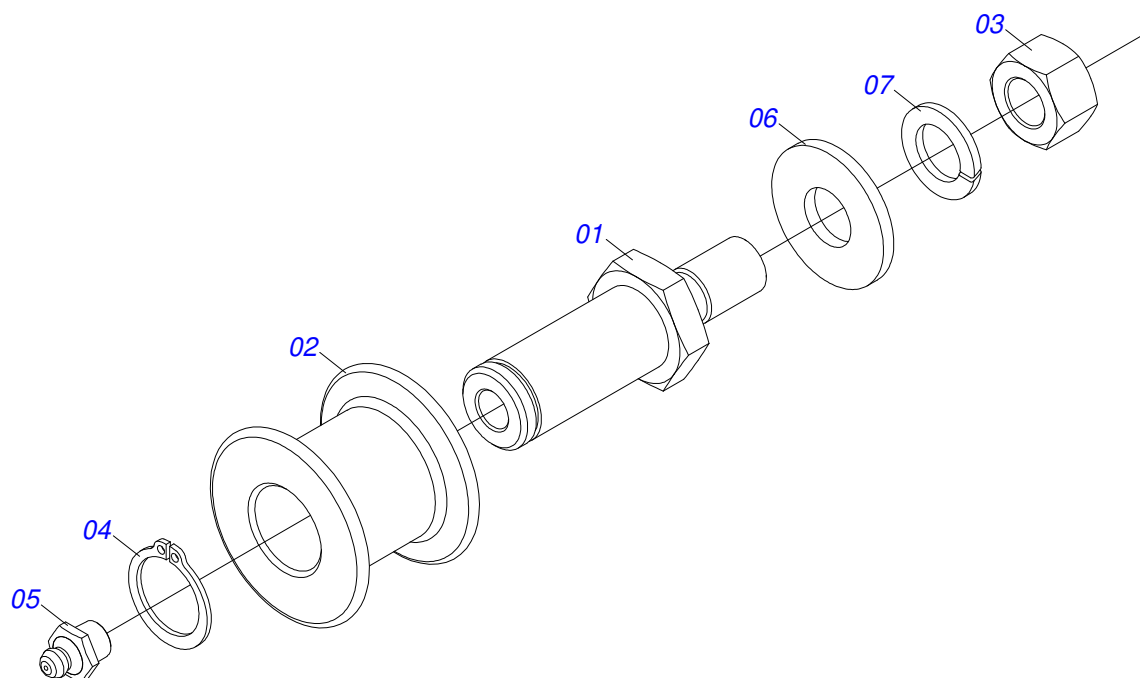


Item	Code	Description	See page	QT
01	0521012529	CHAIN TIGHTENER AXLE		01
02	0503030402	PULLEY		01
03	0503010060	1/2" NUT		01
04	0503010302	501019 SEAL RING		01
05	0503010002	1800 GREASE FITTING		01
06	0511017302	FLAT WASHER		02
07	0503010019	1/2" SPRING WASHER		01

HUB CARRYING-WHEELS


0501059655

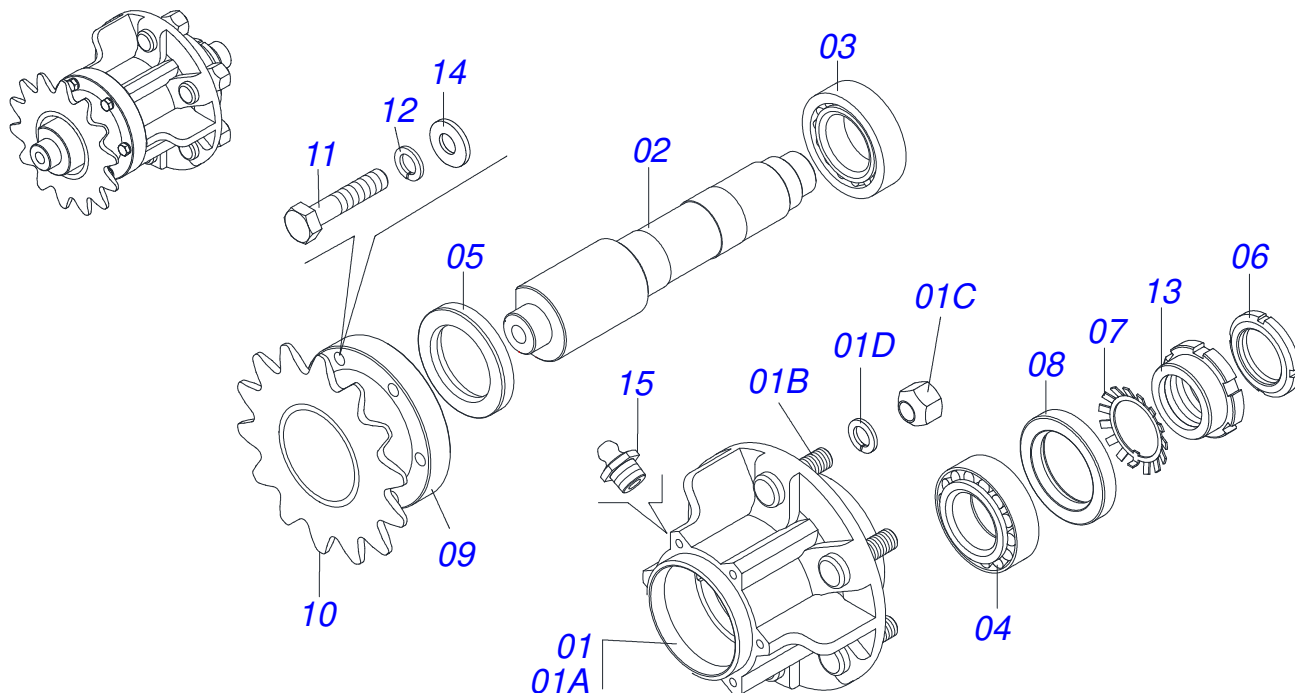


Item	Code	Description	See page	QT
01	0501110751	HUB AND SPINDLE WITH BOLT		01
01A	0502040522	HUB CARRYING-WHEELS		01
01B	0503011339	M22 X 1,5 X 72 BOLT		08
01C	0503011341	M22 X 0.6" NUT GR8 NUT		08
01D	0503011340	SPHERICAL SPRING WASHER		08
02	0561015609	WHEEL AXLE		01
03	0503010059	33287/33462 ROLLER BEARING		01
04	0503010007	3982/3920 ROLLER BEARING		01
05	0503010050	SEAL 00085-B		01
06	0503012702	KM-12 NUT		02
07	0503012703	LOCK WASHER		01
08	0503010528	SEAL # 00838-B		01
09	0551017794	PROTRACTOR GEAR		01
10	0502012177	14Z FLANG GEAR		01
11	0503010397	5/16" X 1-3/4" BOLT		06
12	0503011444	SPRING WASHER		06
13	0503011052	1.1/4" X 0.77" CASTLE NUT		02
14	0501010694	8.5 X 18 X 1.5 FLAT WASHER		06
15	0503010002	1800 GREASE FITTING		01

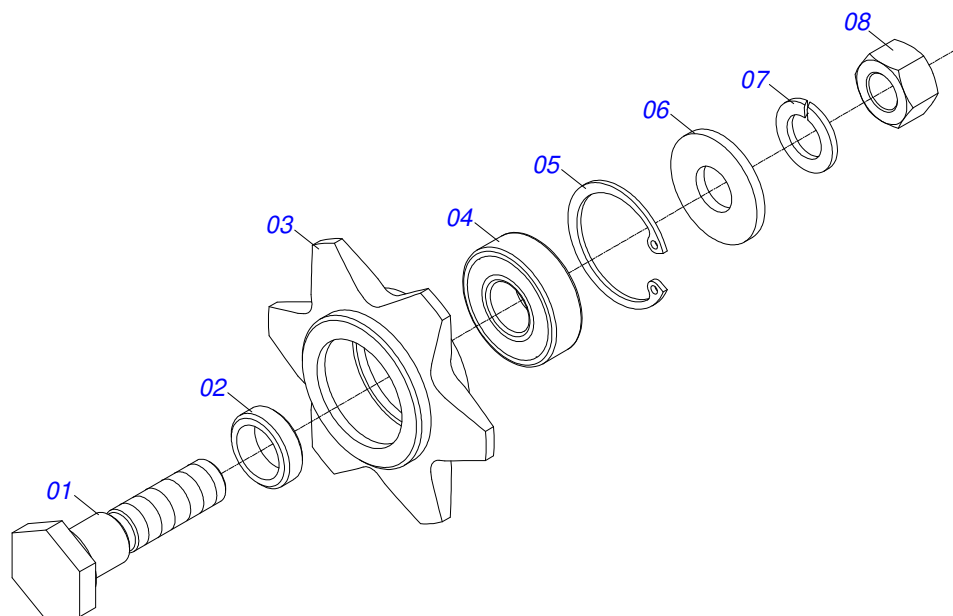


Item	Code	Description	See page	QT
01	0531012640	AXLE CHAIN TIGHTENER		01
02	0531012678	4.5" X 0.9" X 0.2" SLEEVE		01
03	0502012853	GEAR		01
04	0503012882	BEARING		01
05	0503011945	503050 CLAMPING RING (FOR AXLE)		01
06	0511017302	FLAT WASHER		01
07	0503010019	1/2" SPRING WASHER		01
08	0503010060	1/2" NUT		01

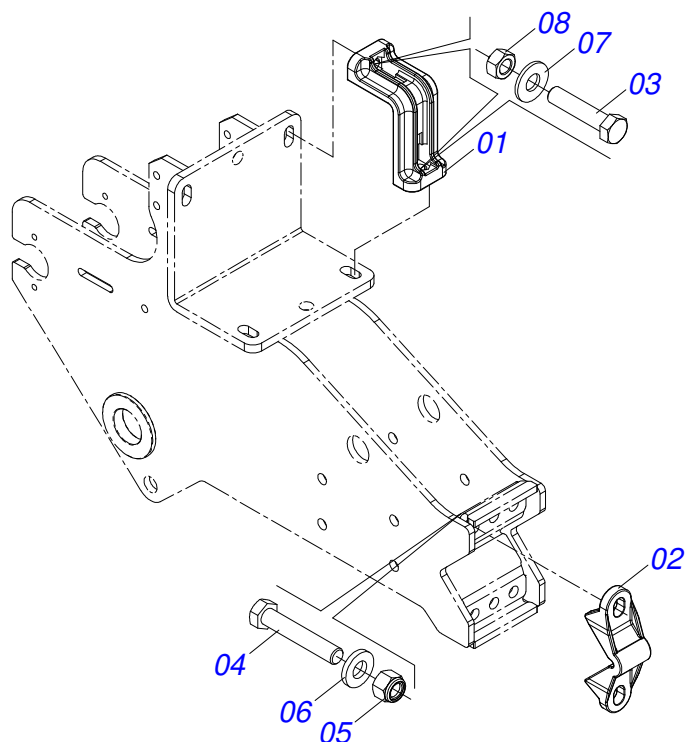


Item	Code	Description	See page	QT
01	0502012400	ROW FERTILIZER FIXER		04
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		04
03	0503010797	3/4" X 4" BOLT		08
04	0503016485	BOLT 3/4		08
05	0503010152	3/4" SELF LOCKING NUT		08
06	0541010763	FLAT WASHER		08
07	0501010322	FLAT WASHER		08
08	0503011255	3/4" LOCK NUT		08

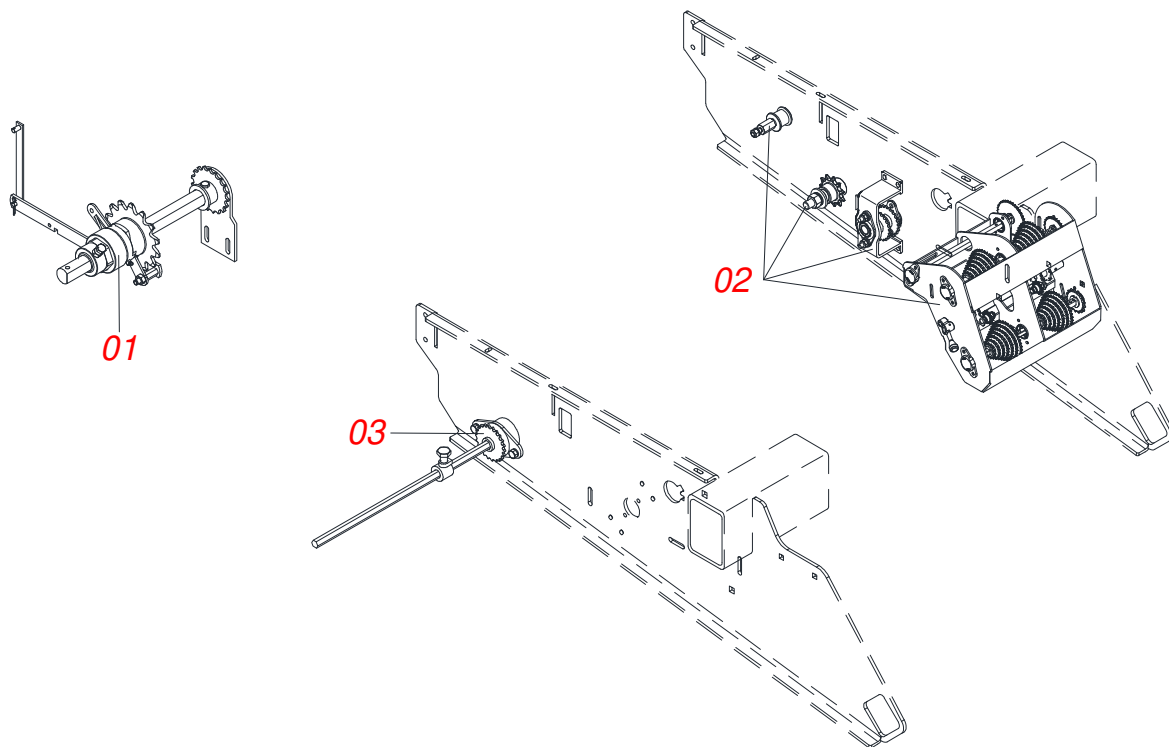

Item	Code	Description	See page	QT
01	0511053898	SET OF INTERNAL TRANSMISSION	10	01
02	0511053897	TRANSMISSION ASSEMBLY	11	01
03	0511053915	HEXAGONAL SHAFT ASSEMBLY	21	01

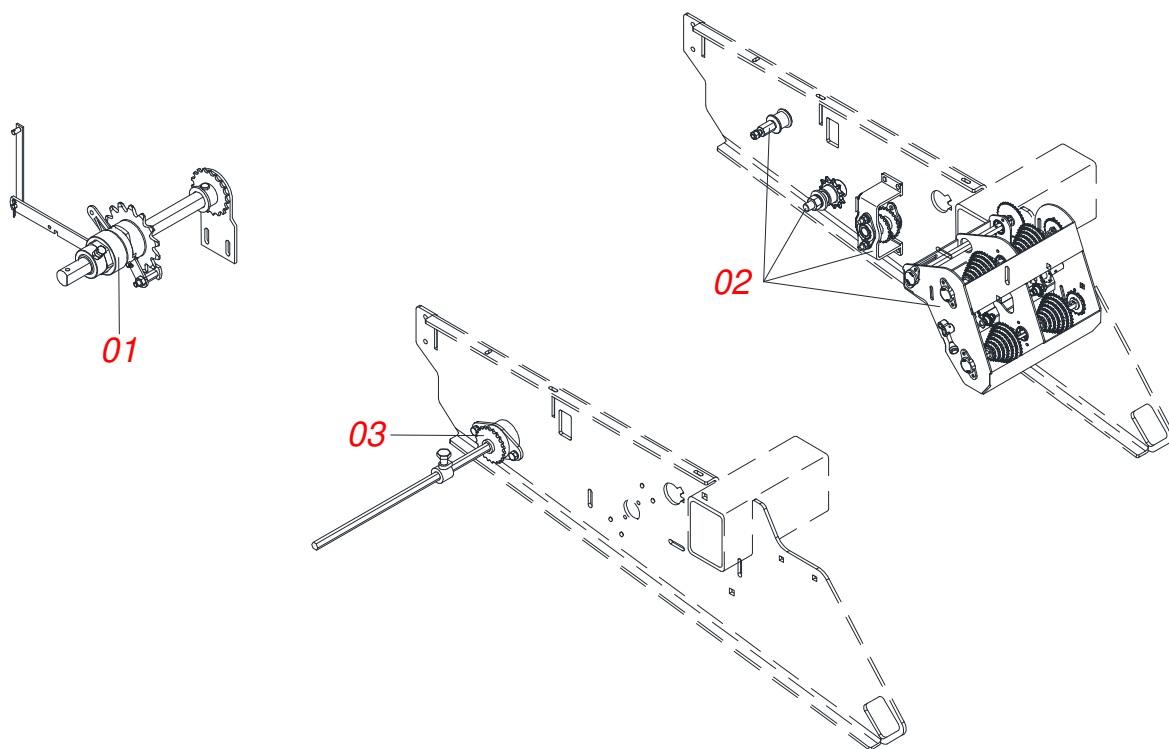

Item	Code	Description	See page	QT
01	0511053898	SET OF INTERNAL TRANSMISSION	10	01
02	0511053897	TRANSMISSION ASSEMBLY	11	01
03	0511053886	HEXAGONAL AXLE ASSEMBLY	22	01

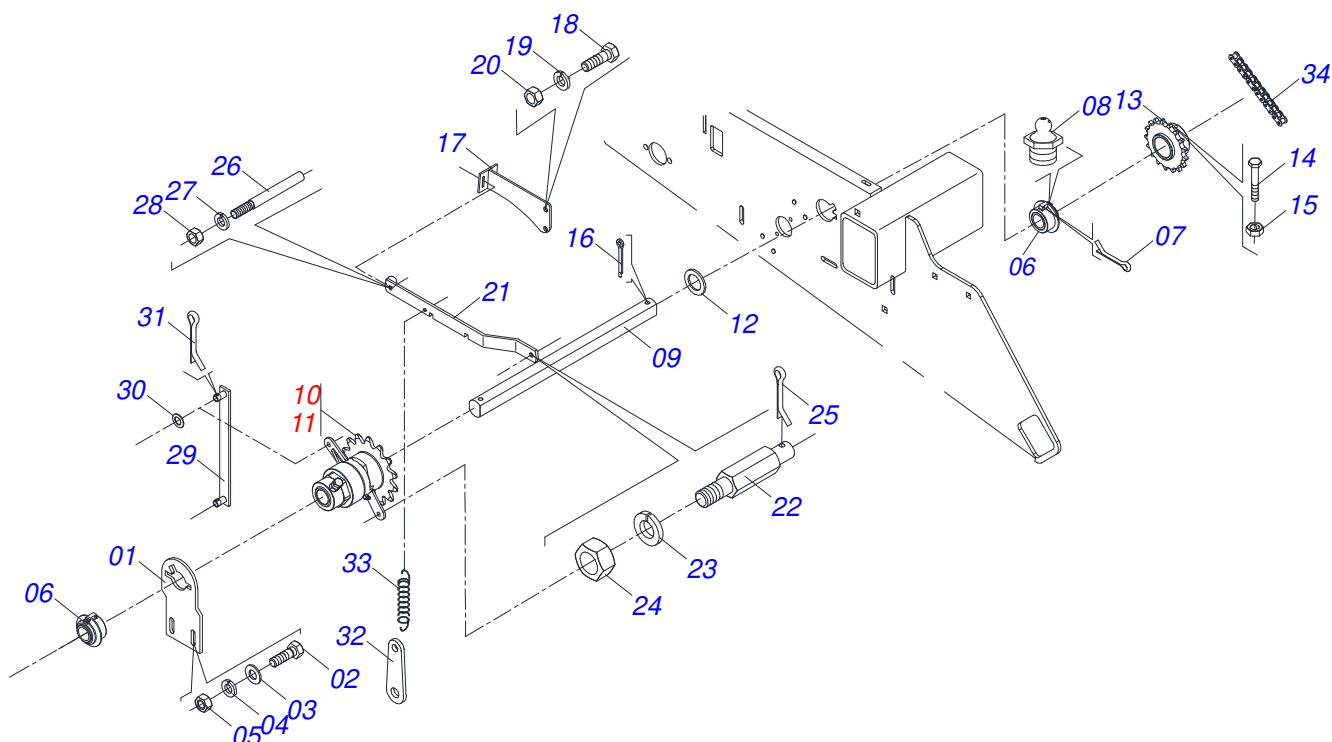


Item	Code	Description	See page	QT
01	0531019365	PLATE FIXER BEARING AXIS	02	
02	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN	04	
03	0511017302	FLAT WASHER	04	
04	0503010019	1/2" SPRING WASHER	04	
05	0503010060	1/2" NUT	04	
06	0501110639	BEARING	04	
07	0503010257	1/8" X 1" COTTERPIN	04	
08	0503010002	1800 GREASE FITTING	04	
09	0561015384	518 MOTOR SHAFT	02	
10	0511040424	RH TRANSMISSION DRIVING ASSY	01	
11	0501049265	LH TRANSMISSION DRIVING ASSY	01	
12	0501018466	FLAT WASHER	08	
13	0511064105	17Z P 5/8" RH 1.4" GEAR	02	
14	0503010937	5/16" X 3" BOLT	02	
15	0503010337	5/16" NUT	04	
16	0503010010	1/4" X 2.1/2" COTTERPIN	02	
17	0511061896	RATCHET DISMANTLE SUPPORT	02	
18	0503010395	1/2" X 1-1/4" BOLT	04	
19	0503010019	1/2" SPRING WASHER	04	
20	0503010060	1/2" NUT	04	
21	0521018428	ASSEMBLE AND DISASSEMBLE ARM	02	
22	0521015800	REAR LEVER FASTENER	02	
23	0503010025	3/8" SPRING WASHER	02	
24	0503010026	3/8" NUT	02	
25	0503010140	1/8" X 3/4" COTTERPIN	02	
26	0521018560	HANDLE LEVER	02	
27	0503010019	1/2" SPRING WASHER	02	
28	0503010060	1/2" NUT	02	
29	0511065949	ASSEMBLE AND DISASSEMBLE ARM	02	
30	0501010984	FLAT WASHER	04	
31	0503010140	1/8" X 3/4" COTTERPIN	04	


SET OF INTERNAL TRANSMISSION

0511053898

Item	Code	Description	See page	QT
32	0541014046	SPRING HITCH		02
33	0503030242	0.8" X 4.7" X 0.08" TRACTION SPRING		02
34	0503012708	2050 CHAIN X 34 LINKS + REDUCTION		02

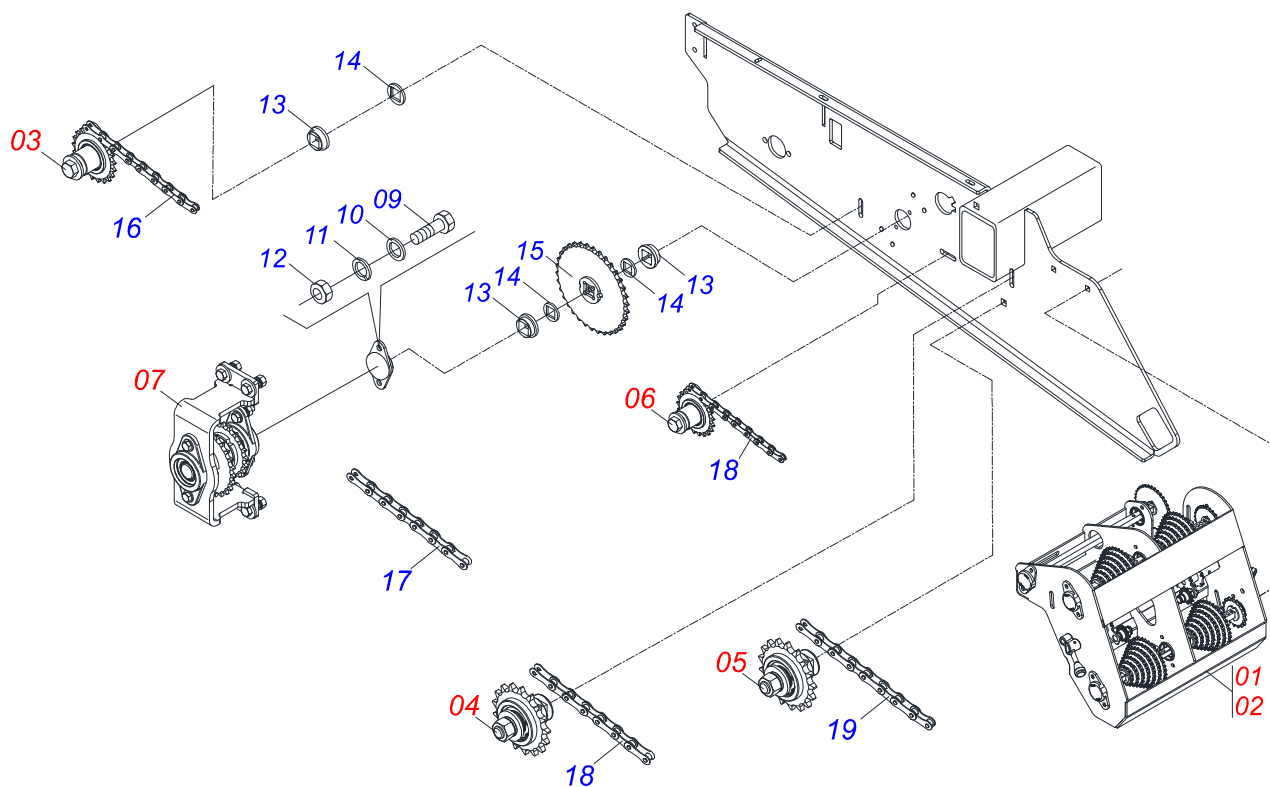


Item	Code	Description	See page	QT
01	0511048348	RIGHT GEAR BOX ASSY	12	01
02	0511048349	RIGHT GEAR BOX ASSY	14	01
03	0501054655	CHAIN TENSIONER ASSY	16	02
04	0501054686	GEAR BOX CHAIN TENSIONER	17	02
05	0501052788	CHAIN TENSIONER ASSY	18	02
06	0501052810	TRANSMISSION CHAIN TENSIONER ASSY	19	02
07	0501053846	MIDDLE BEARING OF THE TRANSMISSION	20	02
08	0561014215	BEARING COVER LOWER ROW FRAME		02
09	0503010365	NUT		04
10	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
11	0503010179	5/16" ZN SPRING WASHER		04
12	0503010337	5/16" NUT		04
13	0503030303	SUPPORT WASHER		04
14	0501010637	FLAT WASHER		04
15	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		02
16	0503016852	50-1 X 85 CHAIN LINK + MENDING		02
17	0503015364	40-1 X 51 CHAIN LINK + MENDING		02
18	0503012390	40-1 CHAIN X 93 LINK + MENDING		02
19	0503013214	40-1 CHAIN X 97 LINK + MENDING		02

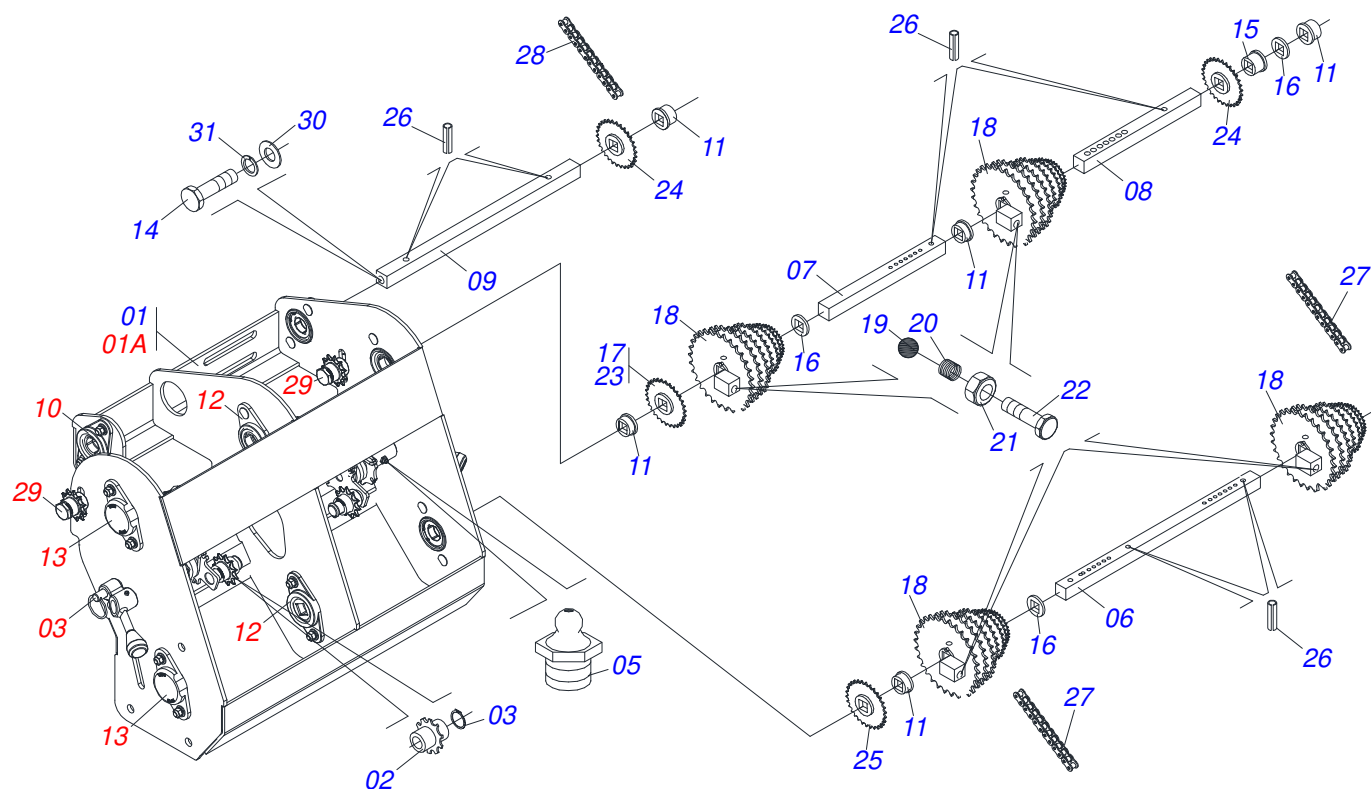


Item	Code	Description	See page	07 09
001	0511050639	RIGHT GEAR BOX ASSY		01
001A	0501058212	SEMI MOUNTED RIGHT CHANGE	13	01
002	0503031805	11Z 1/2" GEAR		04
003	0503010302	501019 SEAL RING		04
004	0501048790	AXLE WITH LINK ASSY		02
005	0503010002	1800 GREASE FITTING		02
006	0551018209	DRIVING AXLE		01
007	0521018259	DRIVEN AXLE		01
008	0551018210	DRIVEN AXLE		01
009	0551018211	INTERM SHAFT		01
010	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE		01
011	0503030303	SUPPORT WASHER		05
012	0501056443	BEARING ASSY GEAR BOX		02
013	0501056271	BEARING CLOSED		05
014	0503010256	3/8" X 3/4" BOLT		01
015	0503030275	AGRICULTURAL BEARING		01
016	0521018630	1.4" X SQUARE 0.8" WASHER		03
017	0511061822	25Z P0.5" GEAR SQUARE HOL		01
018	0502040868	GEAR CONE REPLACEMENT		04
019	0503012389	1/2 BALL		04
020	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
021	0503010060	1/2" NUT		04
022	0503010395	1/2" X 1-1/4" BOLT		04
023	0521062072	33Z GEAR		01
024	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
025	0511067501	26Z GEAR		01
026	0503010292	0.2" X 1.6" SPRING PIN		07
027	0503012204	40-1 CHAIN X 82 LINK + RED		02
028	0503012713	40-1 CHAIN X 45 LINK + MEN		01
029	0501054655	CHAIN TENSIONER ASSY	16	02
030	0501010984	FLAT WASHER		01



Item	Code	Description	See page	07 09
031	0503010025	3/8" SPRING WASHER		01

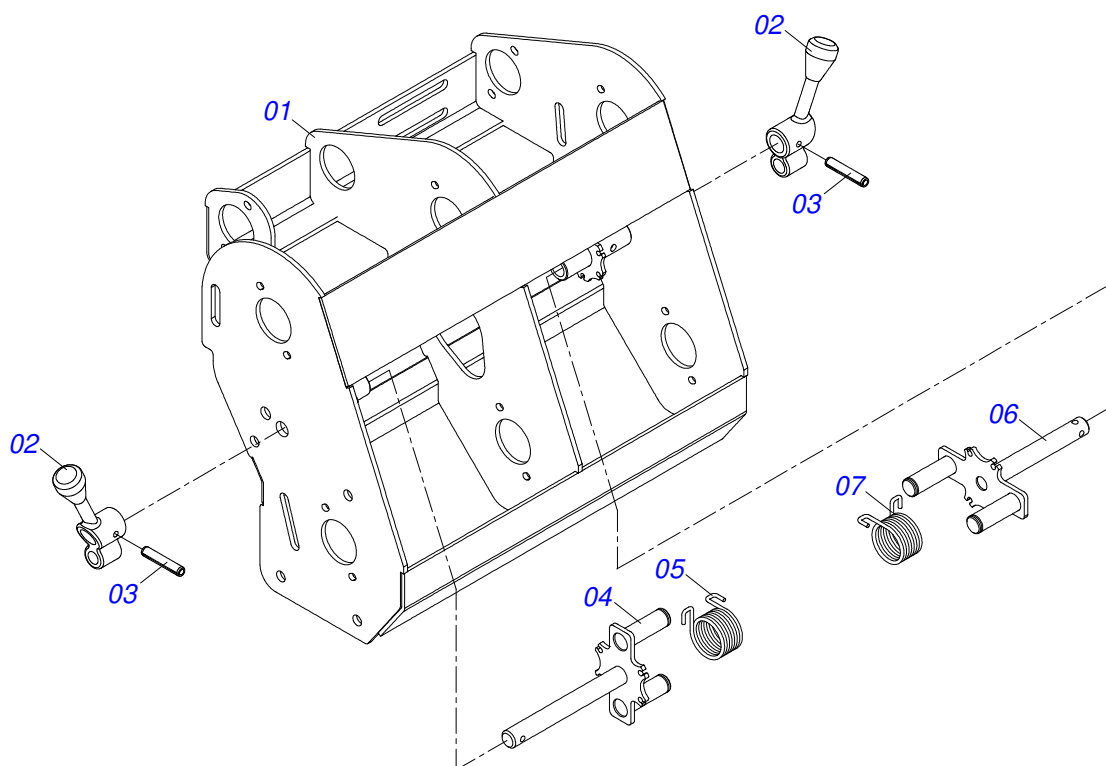

Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX	01	
02	0502011758	REAR TENSIONER LEVER	02	
03	0503010292	0.2" X 1.6" SPRING PIN	02	
04	0511061794	CHAIN TENSIONER	01	
05	0503031367	SPRING	01	
06	0511060392	CHAIN TENSIONER	01	
07	0503031366	RIGHT TWISTED SPRING RECAMBIO	01	

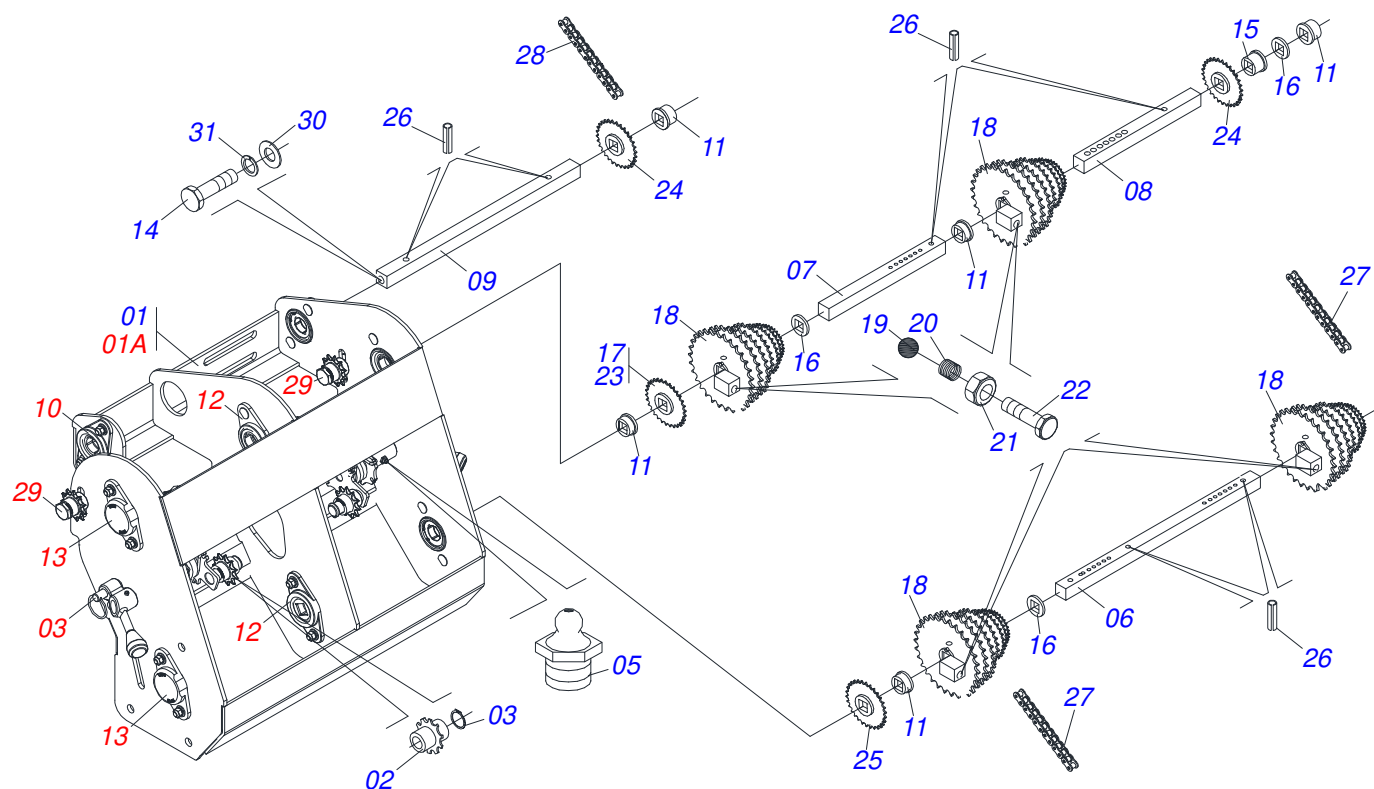


Item	Code	Description	See page	07	09
01	0501058213	LH GEAR BOX	15	01	01
01A	0501058213	LH GEAR BOX	15	01	01
02	0503031805	11Z 1/2" GEAR		12	12
03	0503010302	501019 SEAL RING		04	04
04	0501048790	AXLE WITH LINK ASSY		02	02
05	0503010002	1800 GREASE FITTING		02	02
06	0551018209	DRIVING AXLE		01	01
07	0521018259	DRIVEN AXLE		01	01
08	0551018210	DRIVEN AXLE		01	01
09	0551018211	INTERM SHAFT		01	01
10	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE		01	01
11	0503030303	SUPPORT WASHER		05	05
12	0501056443	BEARING ASSY GEAR BOX		02	02
13	0501056271	BEARING CLOSED		05	05
14	0503010256	3/8" X 3/4" BOLT		01	01
15	0503030275	AGRICULTURAL BEARING		01	01
16	0521018630	1.4" X SQUARE 0.8" WASHER		03	03
17	0511061822	25Z P0.5" GEAR SQUARE HOL		01	01
18	0511060396	DRIVE/DRIVEN AXLE CONE		08	08
19	0503012389	1/2 BALL		04	04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04	04
21	0503010060	1/2" NUT		04	04
22	0503010395	1/2" X 1-1/4" BOLT		04	04
23	0511061822	25Z P0.5" GEAR SQUARE HOL		01	01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02	02
25	0501069874	GEAR 17Z P 15,87 FQ 3/4		02	02
26	0503010292	0.2" X 1.6" SPRING PIN		07	07
27	0503012204	40-1 CHAIN X 82 LINK + RED		04	04
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01	01
29	0501054655	CHAIN TENSIONER ASSY	16	04	04
30	0501010984	FLAT WASHER		02	02




RIGHT GEAR BOX ASSY

0511048349


Item	Code	Description	See page	07 09
31	0503010025	3/8" SPRING WASHER		01 01

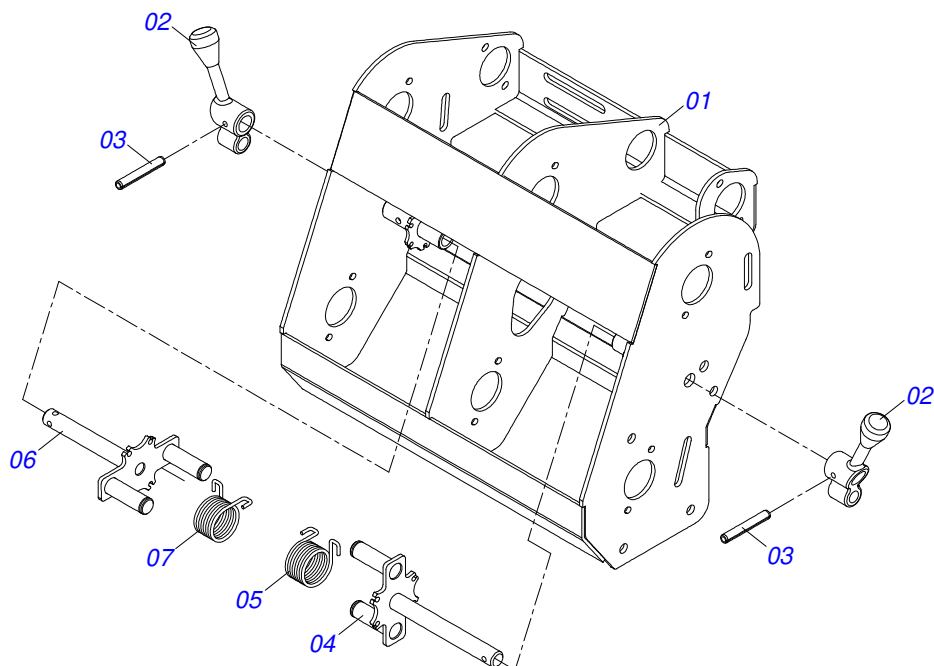


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

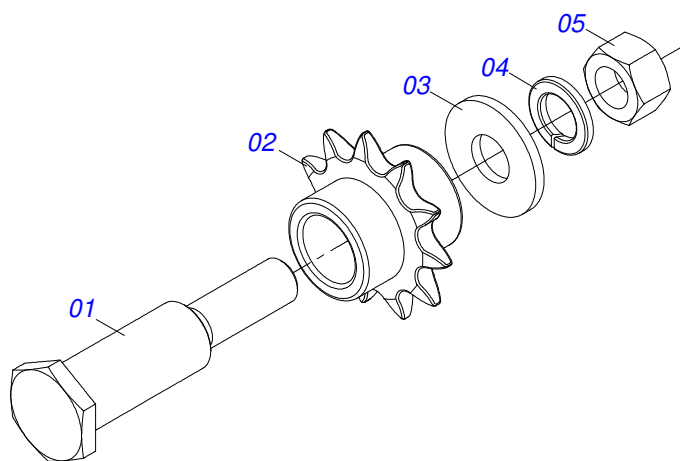


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

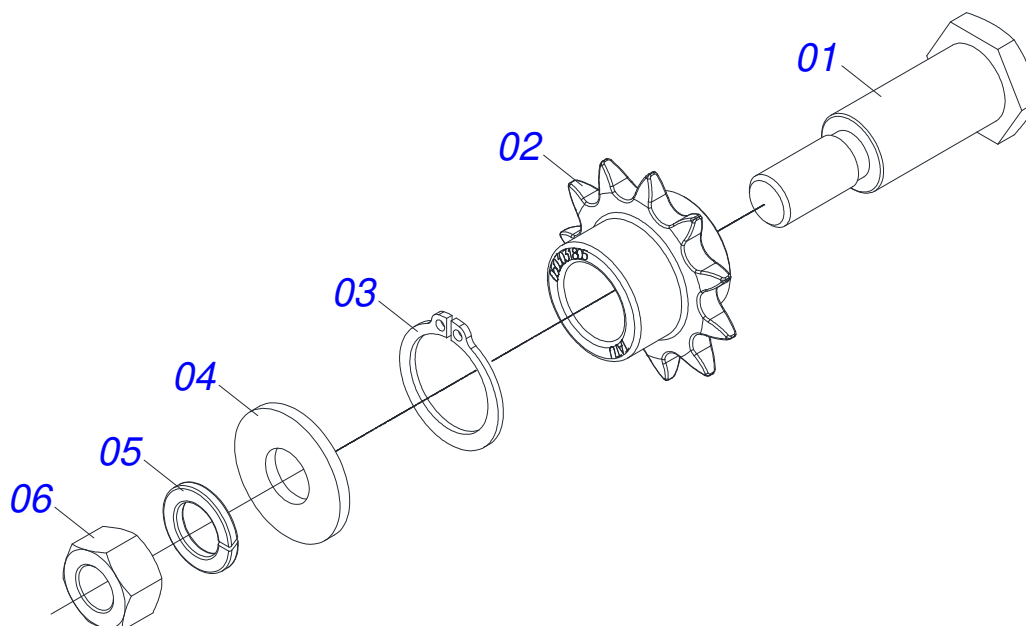


Item	Code	Description	See page	QT
001	0531017202	AXLE CHAIN TIGHTENER		01
002	0503031806	9Z X P 5/8" GEAR		01
003	0503010302	501019 SEAL RING		01
004	0511017302	FLAT WASHER		01
005	0503010019	1/2" SPRING WASHER		01
006	0503010060	1/2" NUT		01

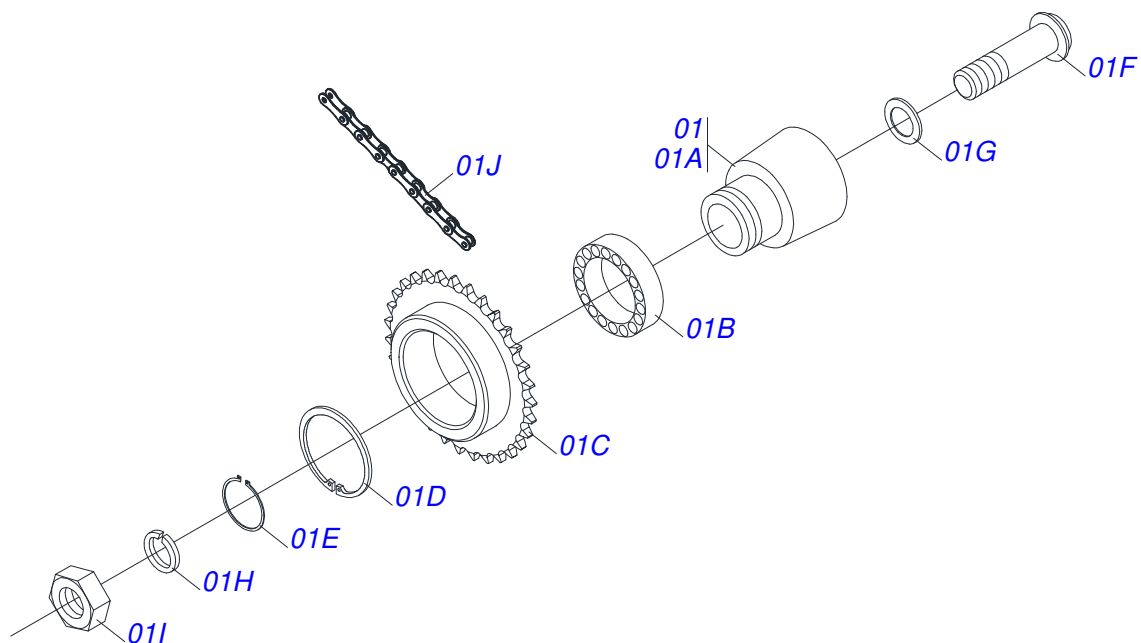


Item	Code	Description	See page
01	0501052788	CHAIN TENSIONER ASSY	18
01A	0521018415	TIGHTENER AXLE	01
01B	0503012861	6006 2RS BALL BEARING	01
01C	0511061836	17Z GEAR	01
01D	0503012858	502075 CLAMPING RING (FOR HOLE)	01
01E	0503010707	501030 CLAMPING RING (FOR AXLE)	01
01F	0501011234	5/8" X 3" BOLT	01
01G	0501012140	FLAT WASHER	01
01H	0503010027	5/8" SPRING WASHER	01
01I	0503010013	5/8" NUT	01
01J	0503012716	CHAIN 50-1 X 3.7" LINK + MENDING	01

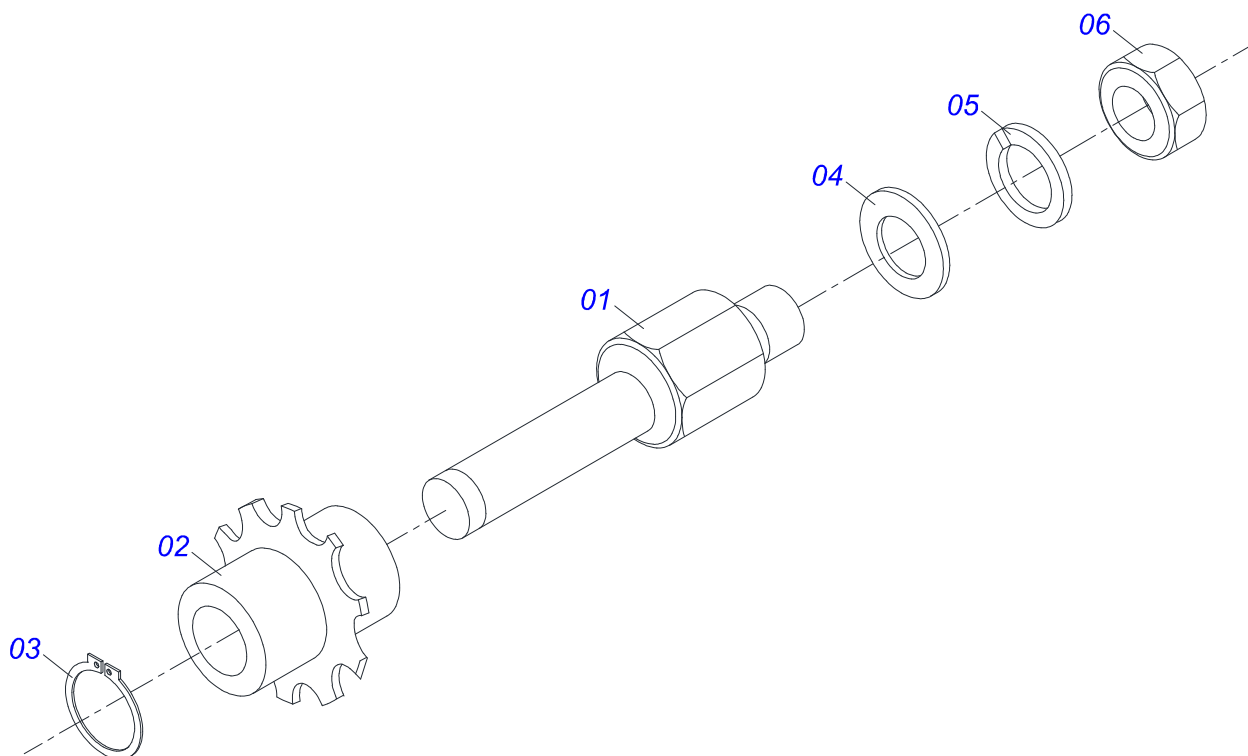


Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

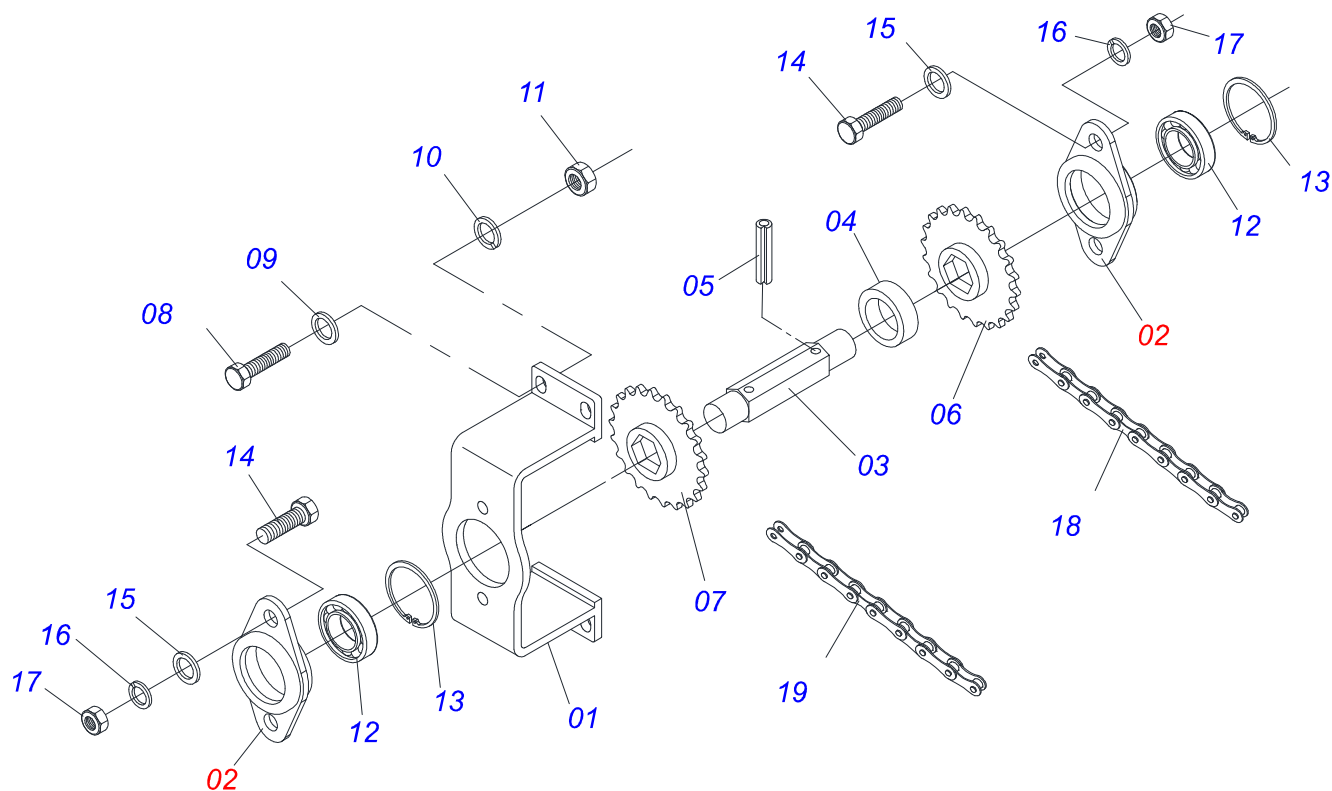


Item	Code	Description	See page
01	0511063266	INTERMEDIARY BEARING SUPPORT	01
02	0501052775	ROW SEED BEARING	02
03	0531013674	INTERMEDIATE AXLE	01
04	0541011184	1.1" X 2" X 0.7" SLEEVE	01
05	0503010292	0.2" X 1.6" SPRING PIN	02
06	0511063268	20Z P1/2" GEAR FOR HEX AXLE, 1"	01
07	0511063267	26Z P1/2" GEAR FOR HEX AXLE, 1"	01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	04
09	0501010984	FLAT WASHER	04
10	0503010025	3/8" SPRING WASHER	04
11	0503010026	3/8" NUT	04
12	0503011410	ROLLER BEARING	02
13	0503011105	SEAL RING	02
14	0503010371	5/16" X 1" BOLT	04
15	0501010694	8.5 X 18 X 1.5 FLAT WASHER	04
16	0503010179	5/16" ZN SPRING WASHER	04
17	0503010337	5/16" NUT	04
18	0503012717	40-1 CHAIN X 101 LINK + MENDING	01
19	0503012718	40-1 CHAIN X 111 LINK + MENDING	01

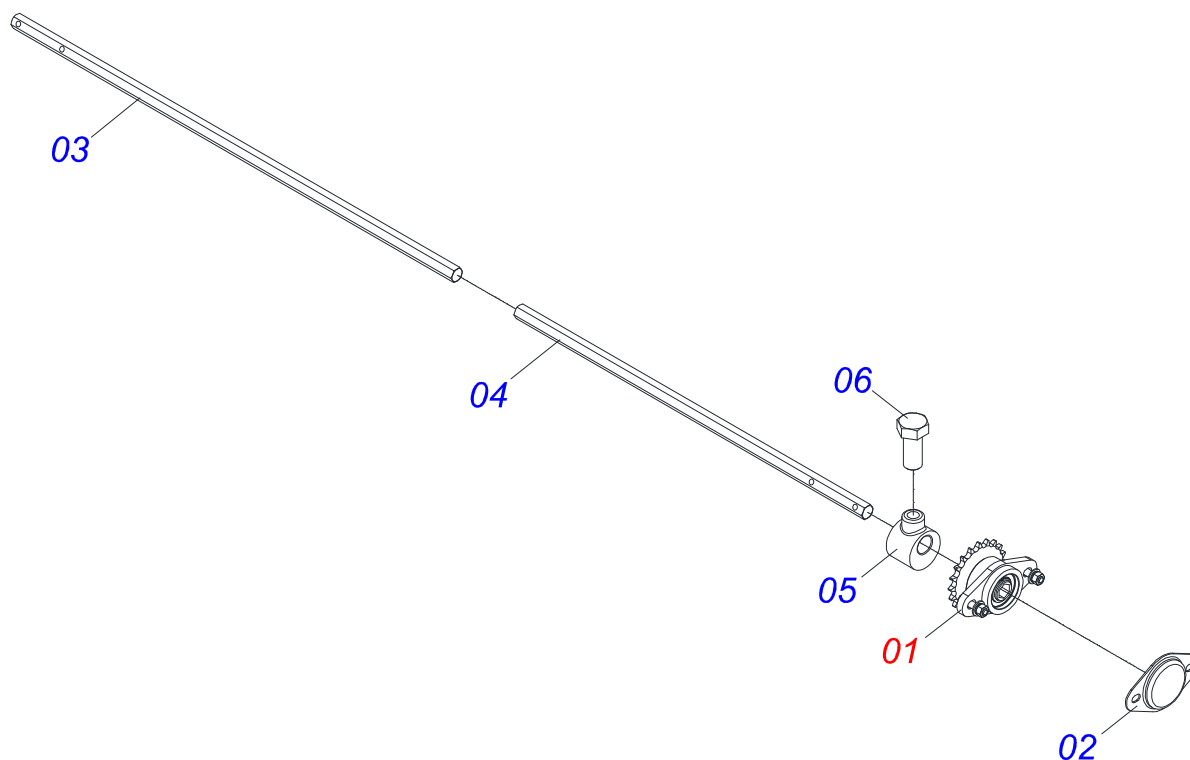


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	23	02
02	0561014215	BEARING COVER LOWER ROW FRAME		02
03	0531016940	5/8 X 1650 RIGHT HEX AXLE		01
04	0531016941	LEFT 5/8" X 59" AXLE HEX		01
05	0502040534	SPRING GUIDE BUSHING LOCK		04
06	0501018535	1/2 X 1 BOLT		04

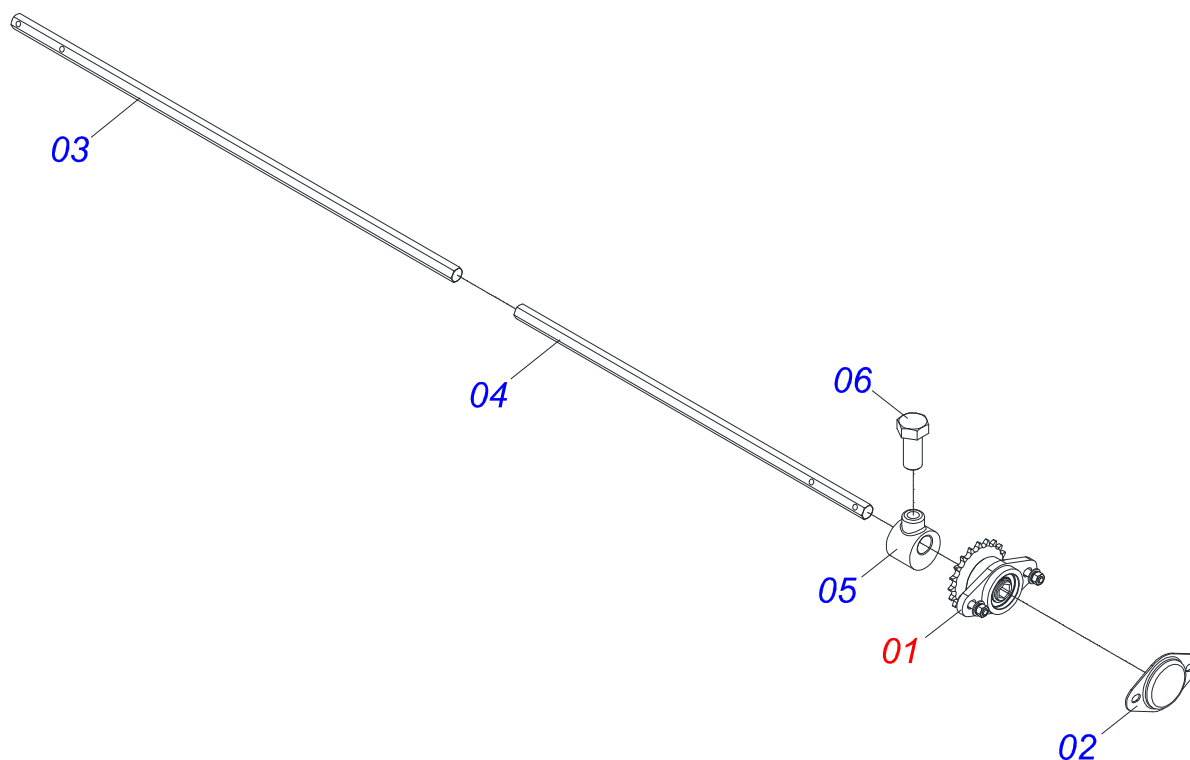

Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	23	02
02	0561014215	BEARING COVER LOWER ROW FRAME		02
03	0561018823	5/8" X 2250 MOTOR SHAFT		01
04	0531016942	RIGHT HEX AXLE 5/8 X 2050		01
05	0502040534	SPRING GUIDE BUSHING LOCK		04
06	0501018535	1/2 X 1 BOLT		04

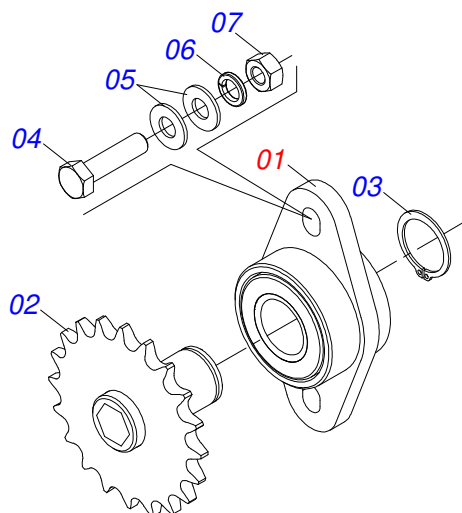


Item	Code	Description	See page	QT
01	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8		01
02	0511063106	20Z AXLE BEARING DOBLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0503010365	NUT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02

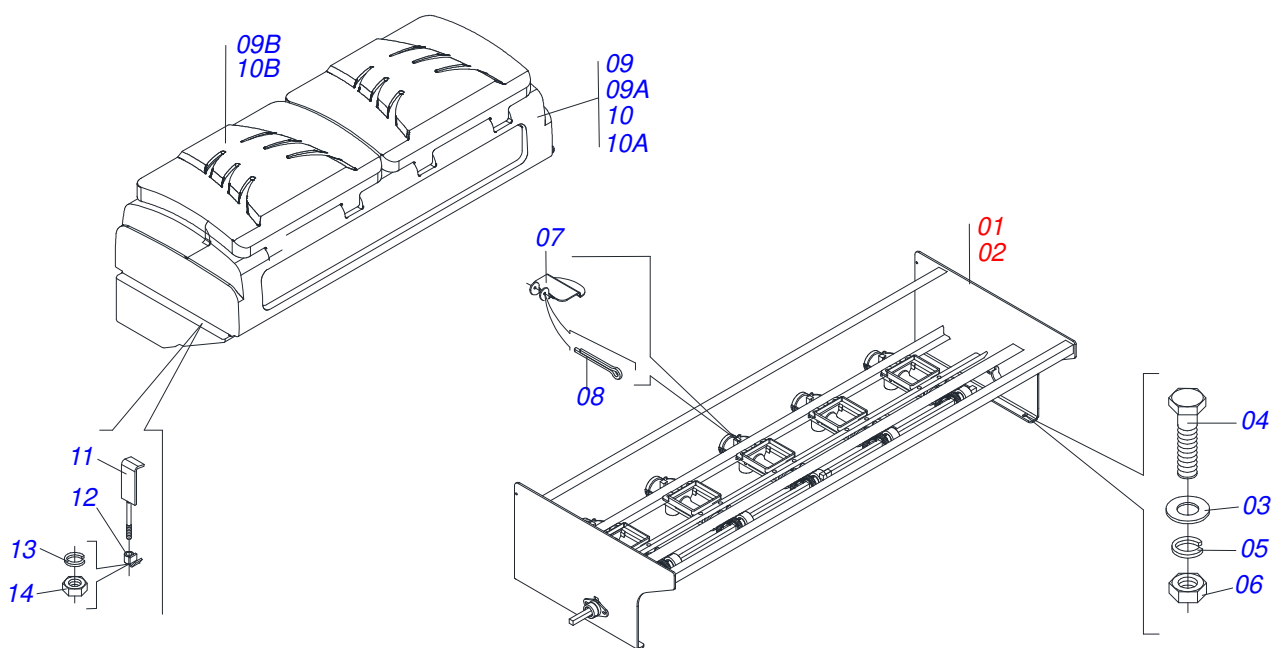


Item	Code	Description	See page	QT
001	0511051077	SUPPORT RIGHT BOX FERTILIZER WITH	26	01
002	0511051078	DISTRIBUTOR SUPPORT LEFT BOX FERTILIZER WITH	27	01
003	0501010984	DISTRIBUTOR FLAT WASHER		16
004	0503010849	3/8" X 1-1/2" BOLT		08
005	0503010025	3/8" SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0571010590	FERTILIZER SIDE COVER		08
008	0503010362	1/8" X 1.1/4" COTTERPIN		08
009	0503060636	COVER BOX RIGHT FERTILIZER		01
009A	0503031948	SILO RIGHT FERTILIZER		01
009B	0503031950	TUBE SILO FERTILIZER		02
010	0503060637	COVER BOX LEFT FERTILIZER		01
010A	0503031949	SILO LEFT FERTILIZER		01
010B	0503031950	TUBE SILO FERTILIZER		02
011	0511062099	FERTILIZER BEAM CLAMP		04
012	0511061886	FERTILIZER BEAM LOCK		04
013	0503010019	1/2" SPRING WASHER		04
014	0503010060	1/2" NUT		04

FERTILIZER BOX ASSEMBLY


0511053892

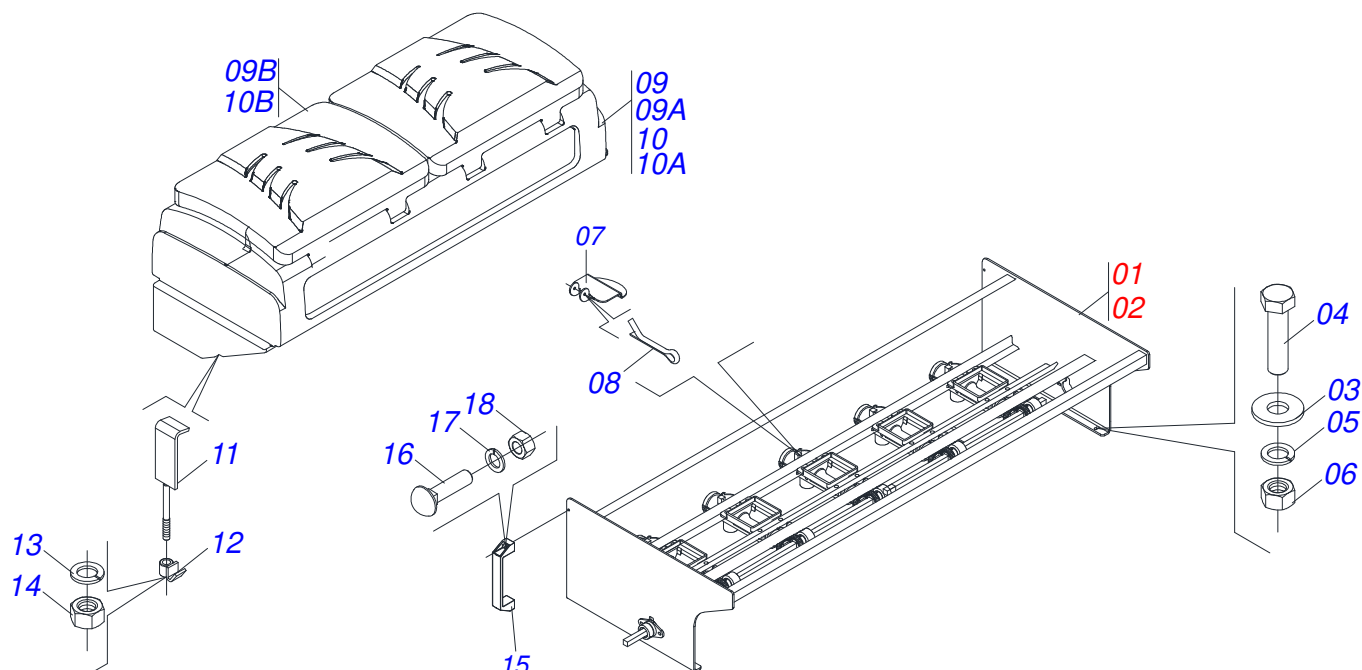


Item	Code	Description	See page	QT
001	0501059656	FERTILIZER SUPORT RIGHT BOX	28	01
002	0501059657	FERTILIZER SUPORT LEFT BOX	29	01
003	0501010984	FLAT WASHER		16
004	0503010849	3/8" X 1-1/2" BOLT		08
005	0503010025	3/8" SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0571010590	FERTILIZER SIDE COVER		10
008	0503010362	1/8" X 1.1/4" COTTERPIN		10
009	0503060640	COVER BOX RIGHT FERTILIZER		01
009A	0503031954	SILO RIGHT FERTILIZER		01
009B	0503031956	TUBE SILO FERTILIZER		02
010	0503060641	COVER BOX LEFT FERTILIZER		01
010A	0503031955	SILO LEFT FERTILIZER		01
010B	0503031956	TUBE SILO FERTILIZER		02
011	0511062099	FERTILIZER BEAM CLAMP		04
012	0511061886	FERTILIZER BEAM LOCK		04
013	0503010019	1/2" SPRING WASHER		04
014	0503010060	1/2" NUT		04
015	0503011957	NYLON LUG		02
016	0503010371	5/16" X 1" BOLT		04
017	0503010179	5/16" ZN SPRING WASHER		04
018	0503010337	5/16" NUT		04

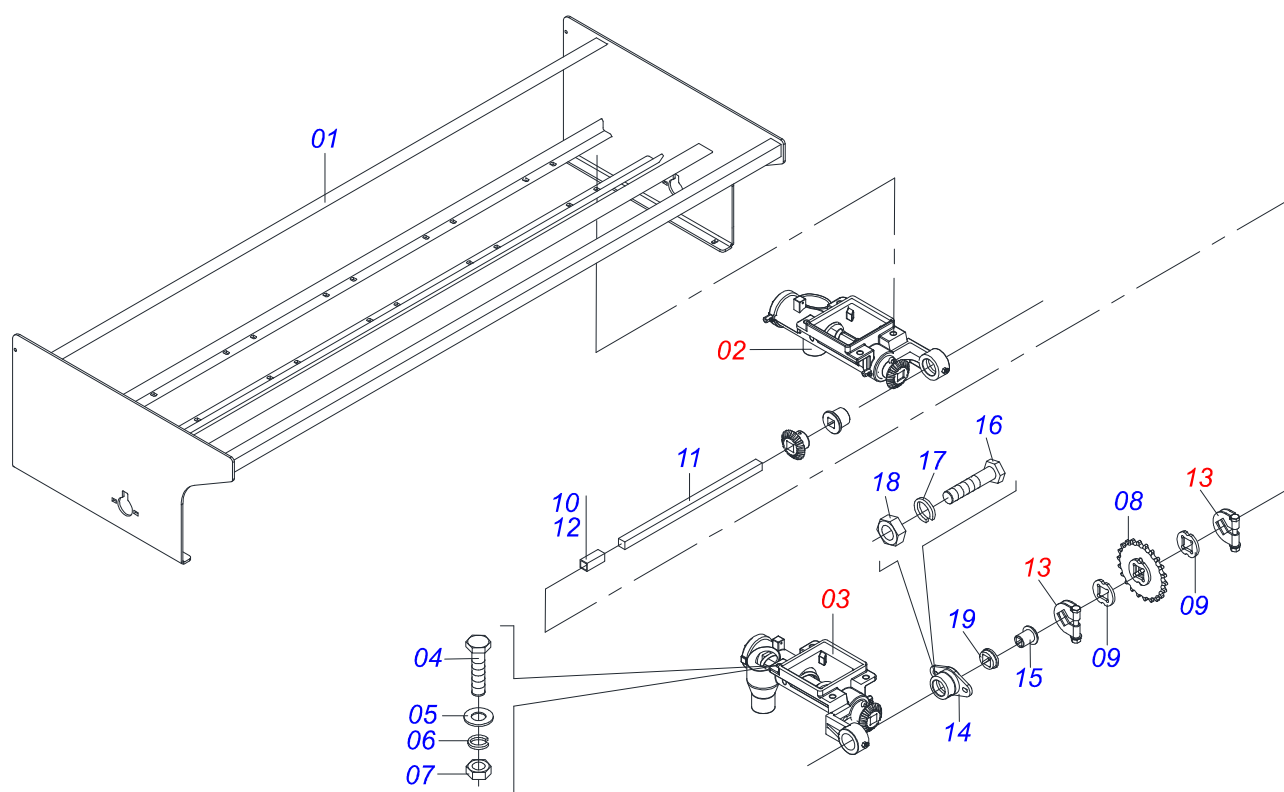


Item	Code	Description	See page	QT
01	0521062410	RH BEAM SUPPORT		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	30	02
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	31	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	FLAT WASHER		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0501018700	3/4" X 58"SQUARE SHAFT		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	Q3/4" FASTENER AXLE ASSY		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

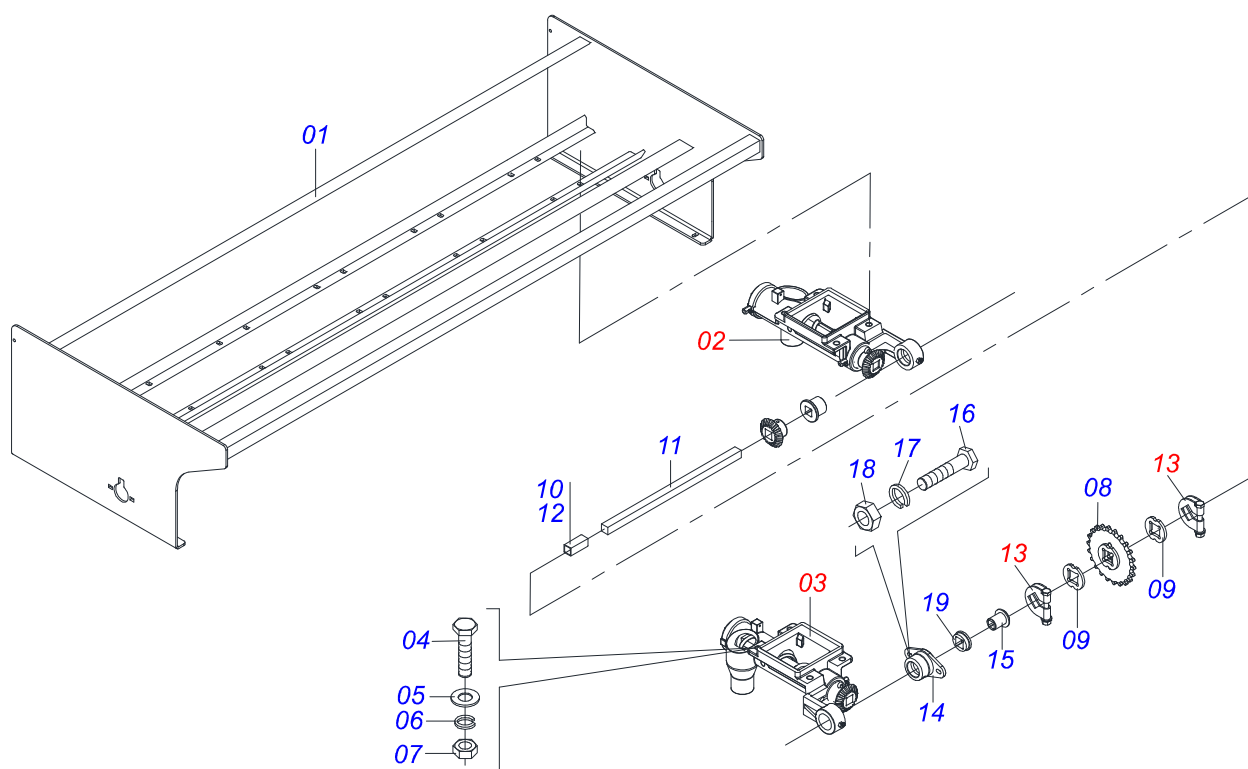


Item	Code	Description	See page	QT
01	0521062412	LH BEAM SUPPORT		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	30	02
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	31	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	FLAT WASHER		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		02
11	0501018700	3/4" X 58"SQUARE SHAFT		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	Q3/4" FASTENER AXLE ASSY		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

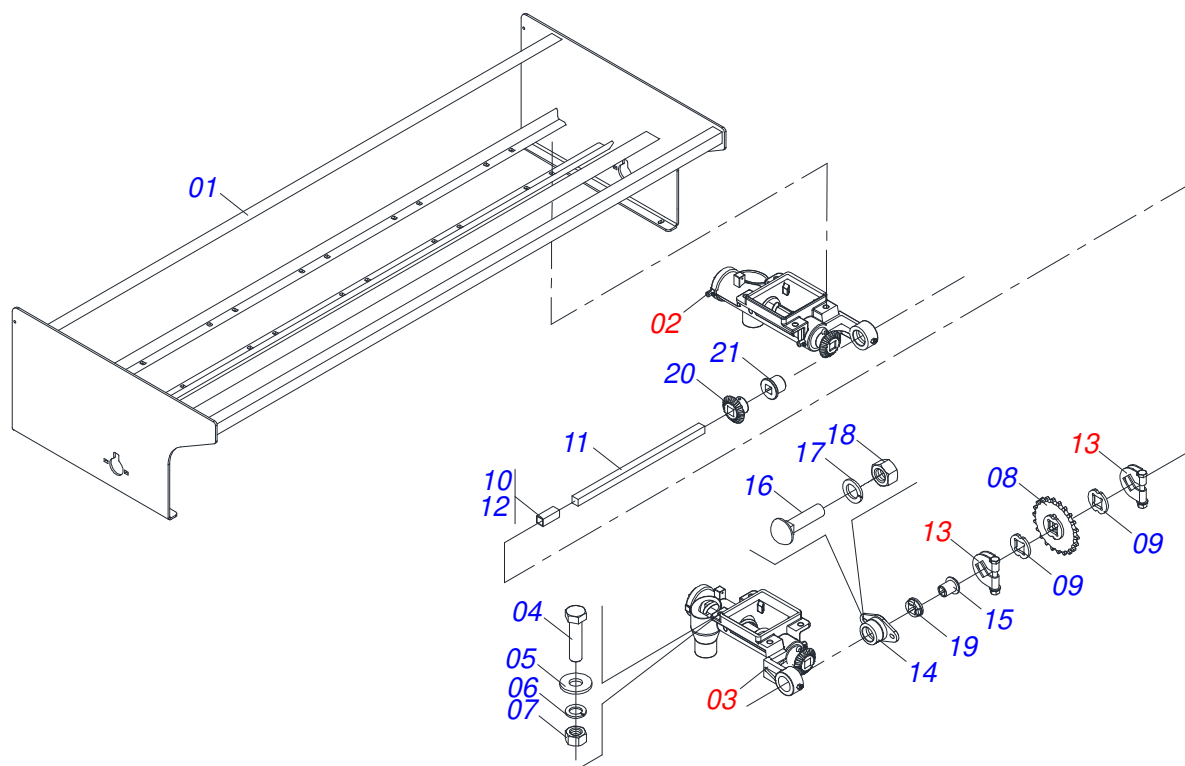


Item	Code	Description	See page	QT
01	0521061324	BOX FERTILIZER SUPPORT		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	30	02
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	31	03
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		20
05	0501010984	FLAT WASHER		20
06	0503011443	3/8" SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0511010866	RIGHT AXLE		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	Q3/4" FASTENER AXLE ASSY		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01
20	0502012990	CONICA 14Z SQUARE GEAR		05
21	0503030275	AGRICULTURAL BEARING		05

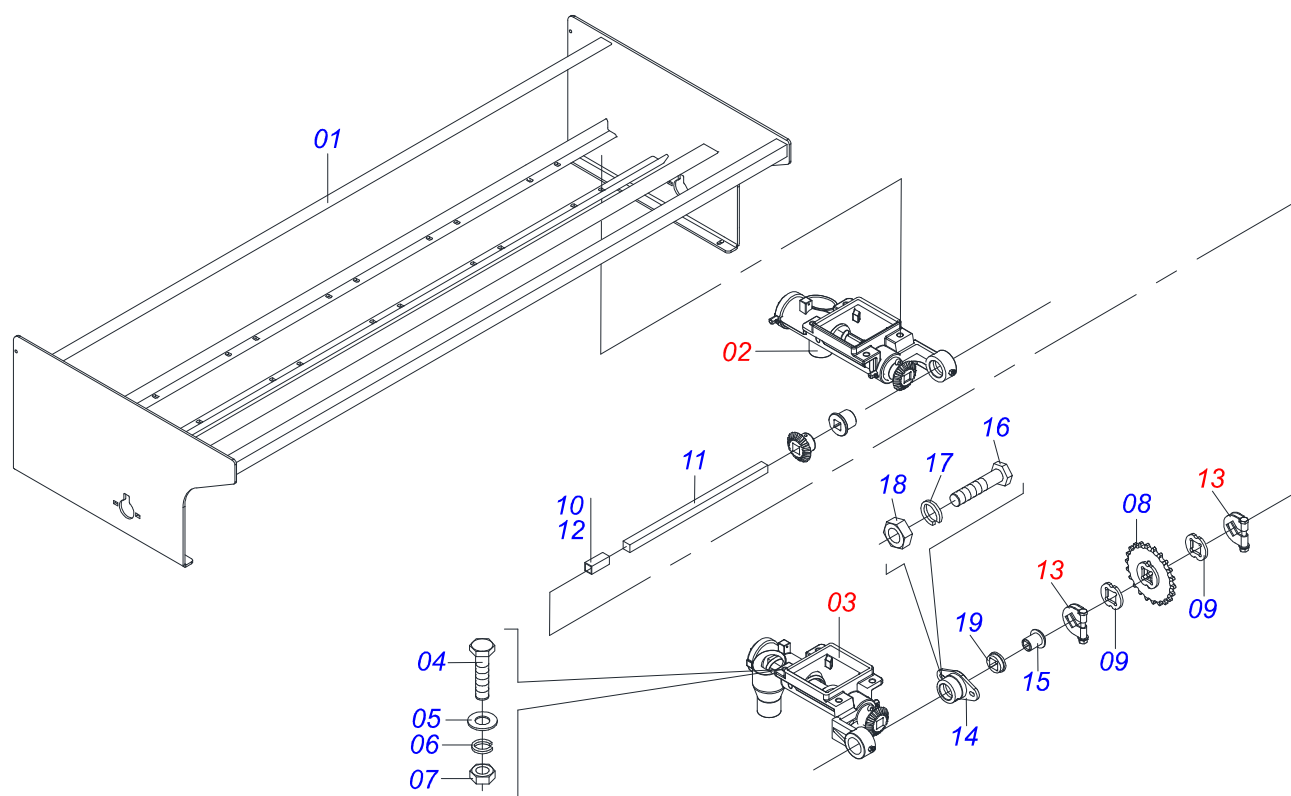







Item	Code	Description	See page	QT
01	0521061325	FERTILIZER SUPORT LEFT BOX		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	30	03
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	31	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		20
05	0501010984	FLAT WASHER		20
06	0503011443	3/8" SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0511010866	RIGHT AXLE		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	Q3/4" FASTENER AXLE ASSY		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

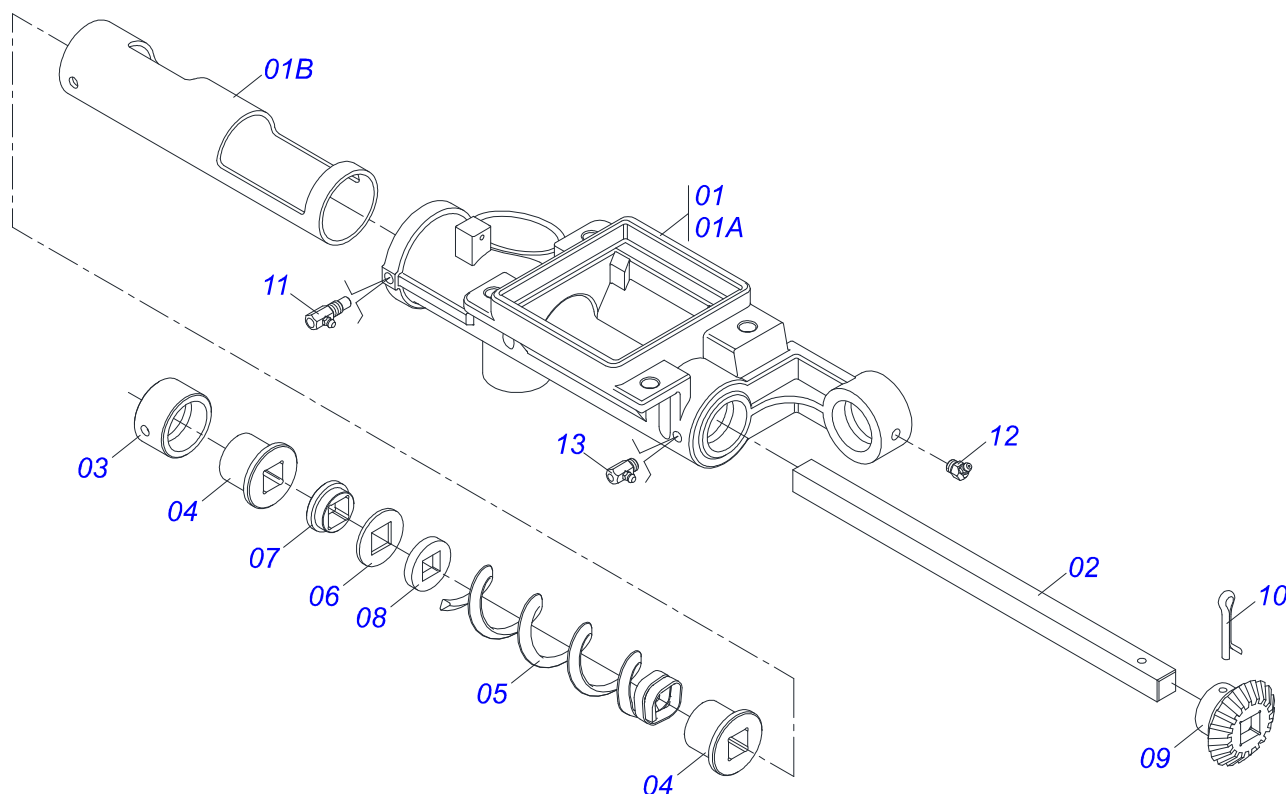







Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

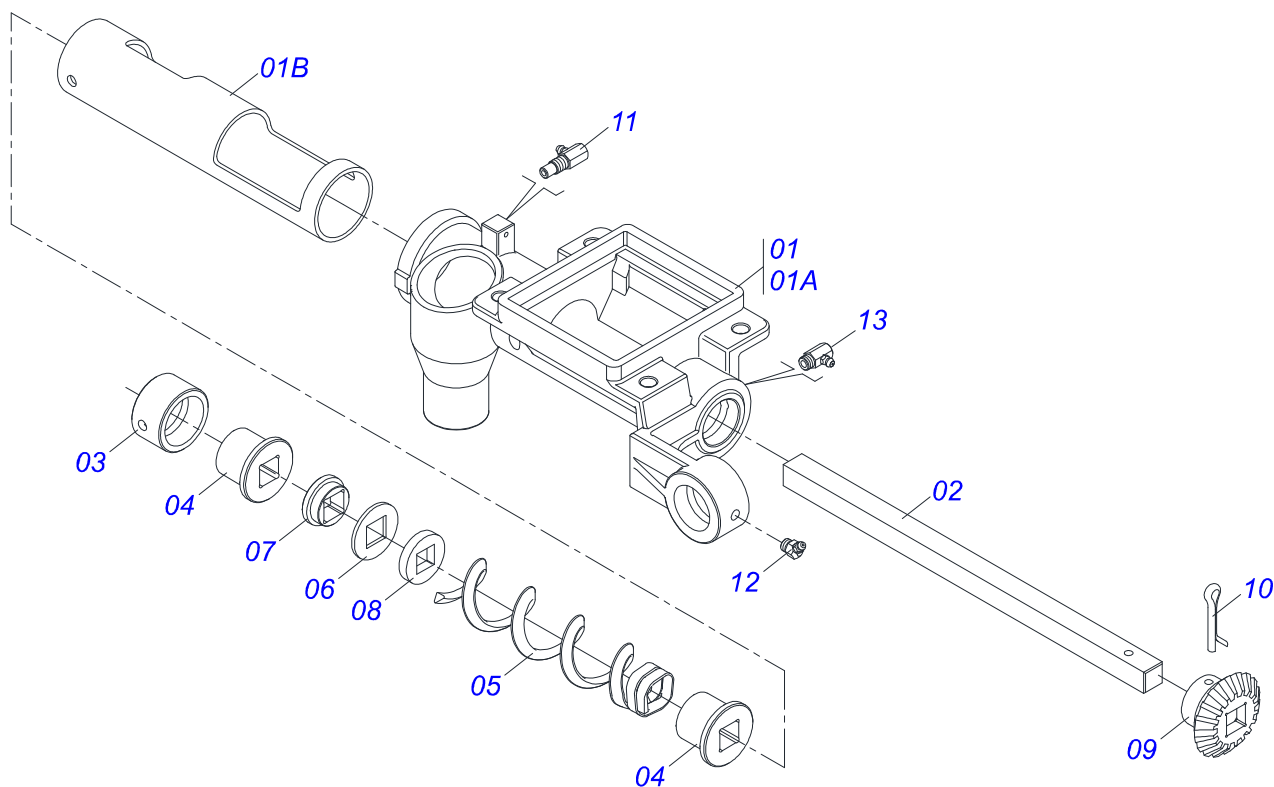


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

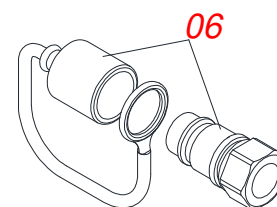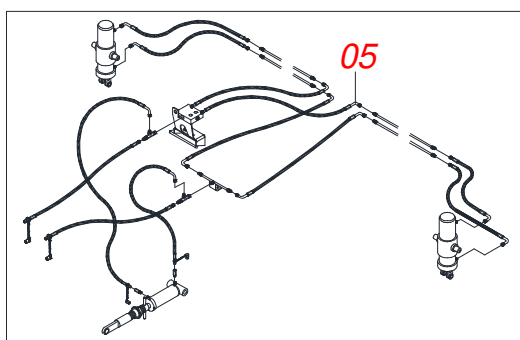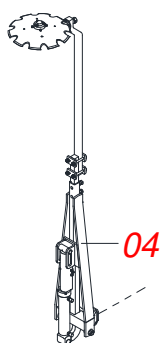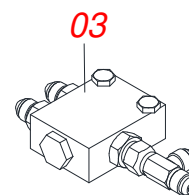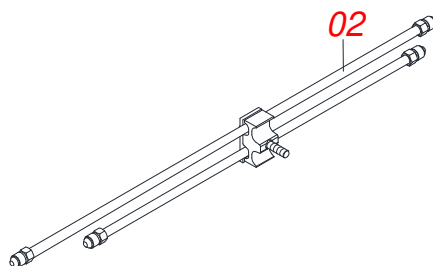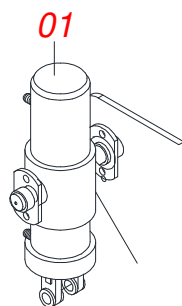

Item	Code	Description	See page	QT
01	0511053894	HYDRAULIC CYLINDER ASSEMBLY	34	01
02	0511053920	OIL PIPE ASSEMBLY	36	01
03	0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	37	01
04	0511052909	HYDRAULIC MARKER	38	01
05	0511052197	WHEELS HOSE ASSEMBLY	41	01
06	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	42	02

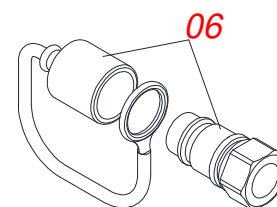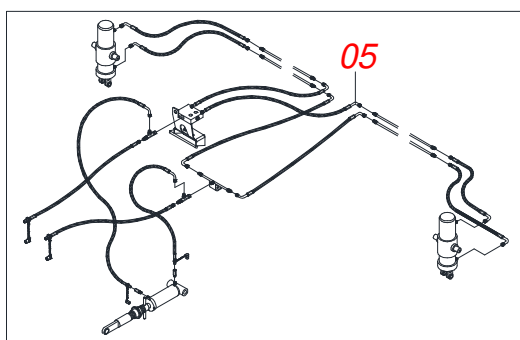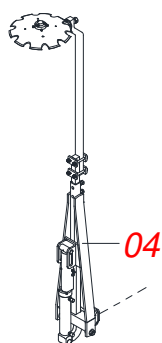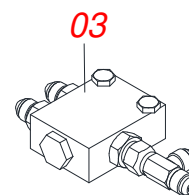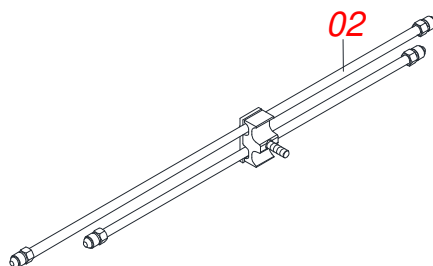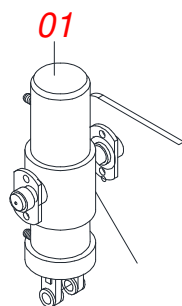


Item	Code	Description	See page	QT
01	0511053894	HYDRAULIC CYLINDER ASSEMBLY	34	01
02	0511053895	OIL DUCT ASSEMBLY	43	01
03	0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	37	01
04	0511052909	HYDRAULIC MARKER	38	01
05	0511052197	WHEELS HOSE ASSEMBLY	41	01
06	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	42	02

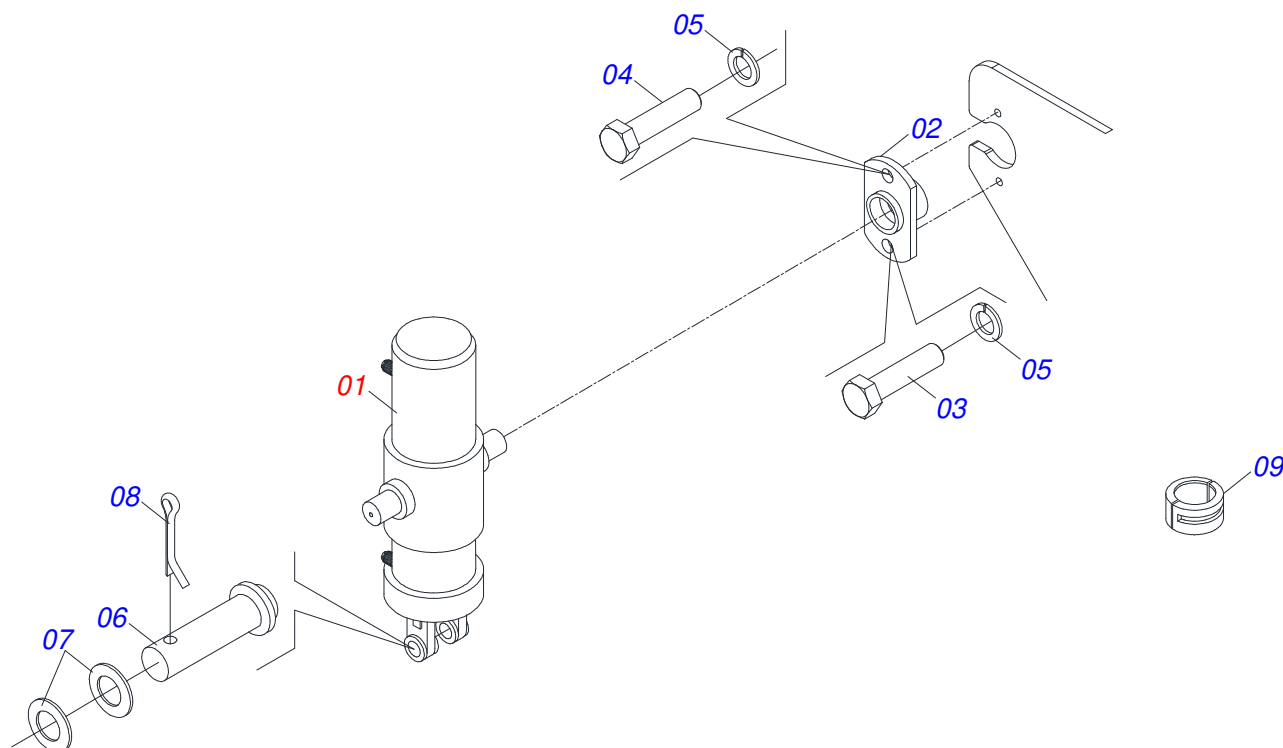


Item	Code	Description	See page	QT
001	0511058411	HYDRAULIC CYLINDER	35	02
002	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		04
003	0503010834	1/2 X 1 BOLT		06
004	0503010395	1/2" X 1-1/4" BOLT		02
005	0503010019	1/2" SPRING WASHER		08
006	0521010546	1.2" X 5.7" COUPLING SHAFT		02
007	0501017779	32 X 60 X 4.75 FLAT WASHER		04
008	0503010523	1/4" X 2" COTTERPIN		02
009	0501047887	ROD STOP		02

HYDRAULIC CYLINDER


0511058411

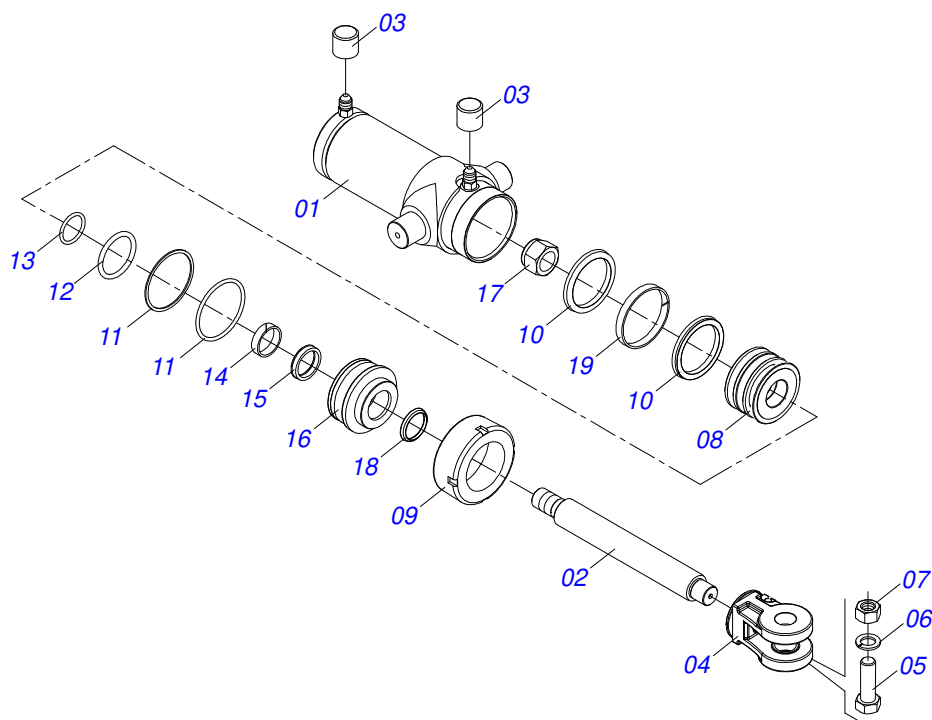


Item	Code	Description	See page	QT
01	0511066774	2.5" X 28" CYLINDER CASE		01
02	0541017674	TURNBUCLE BODY		01
03	0503030385	CYLINDER PLUG N-002		02
04	0511064408	FORK		01
05	0503011094	3/8" X 2" BOLT		01
06	0503010025	3/8" SPRING WASHER		01
07	0503010026	3/8" NUT		01
08	0581010302	RING OF SUPPORT		01
09	0502012822	101.60 END CAP		01
10	0503011061	8-342 BACK-UP RING		02
11	0503010338	2-342 N 3006-9B O'RING		02
12	0503017936	RING		01
13	0503017938	RING GUIDE		01
14	0503017937	GASKET		01
15	0503010761	D-1750 SCRAPER RING		01
16	0581010837	PISTON		01
17	0503010817	1.1/4" SELF LOCKING NUT		01
18	0503015633	SELEMASTER SEALING		01
19	0503018029	2-217 O'RING		01

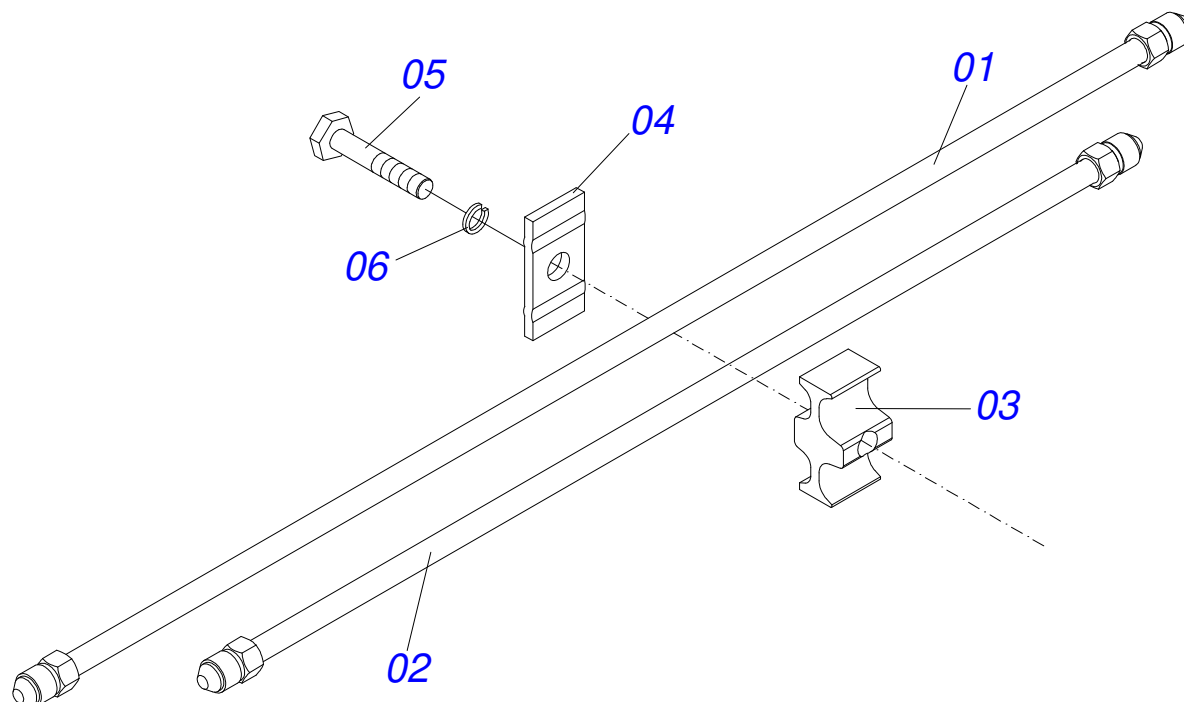

Item	Code	Description	See page	QT
001	0521062404	OIL TUBE		04
002	0521063408	OIL TUBE		04
003	0502012702	BODY SUPPORT CLAMP		04
004	0531011180	UPPER BODY CLIP		04
005	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
006	0503010180	7/16" SPRING WASHER		04

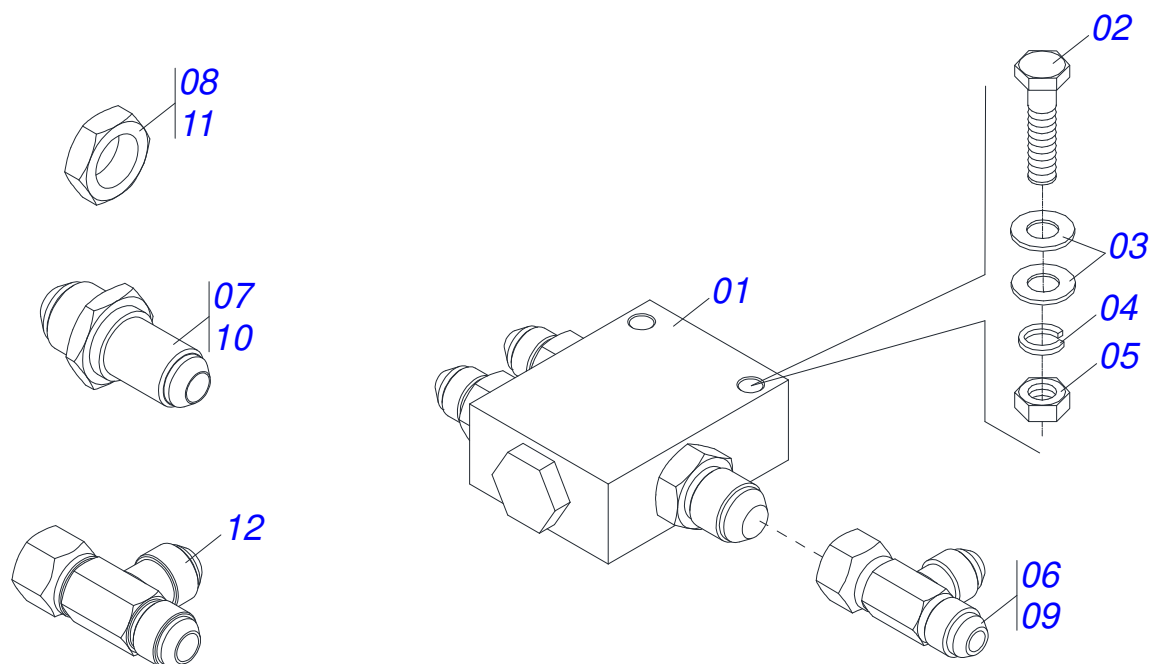


Item	Code	Description	See page	QT
001	0501054452	FLOW DIVIDING VALVE	01	
002	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN	02	
003	0501010694	8.5 X 18 X 1.5 FLAT WASHER	04	
004	0503010143	1/4" SPRING WASHER	02	
005	0503010144	1/4" NUT	02	
006	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT	01	
007	0541012166	NIPPLE 3/4" UNF X 7/8"	01	
008	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	01	
009	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT	01	
010	0541012166	NIPPLE 3/4" UNF X 7/8"	01	
011	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	01	
012	0503012341	T 7/8" ADAPOR GIRAT NUT	01	

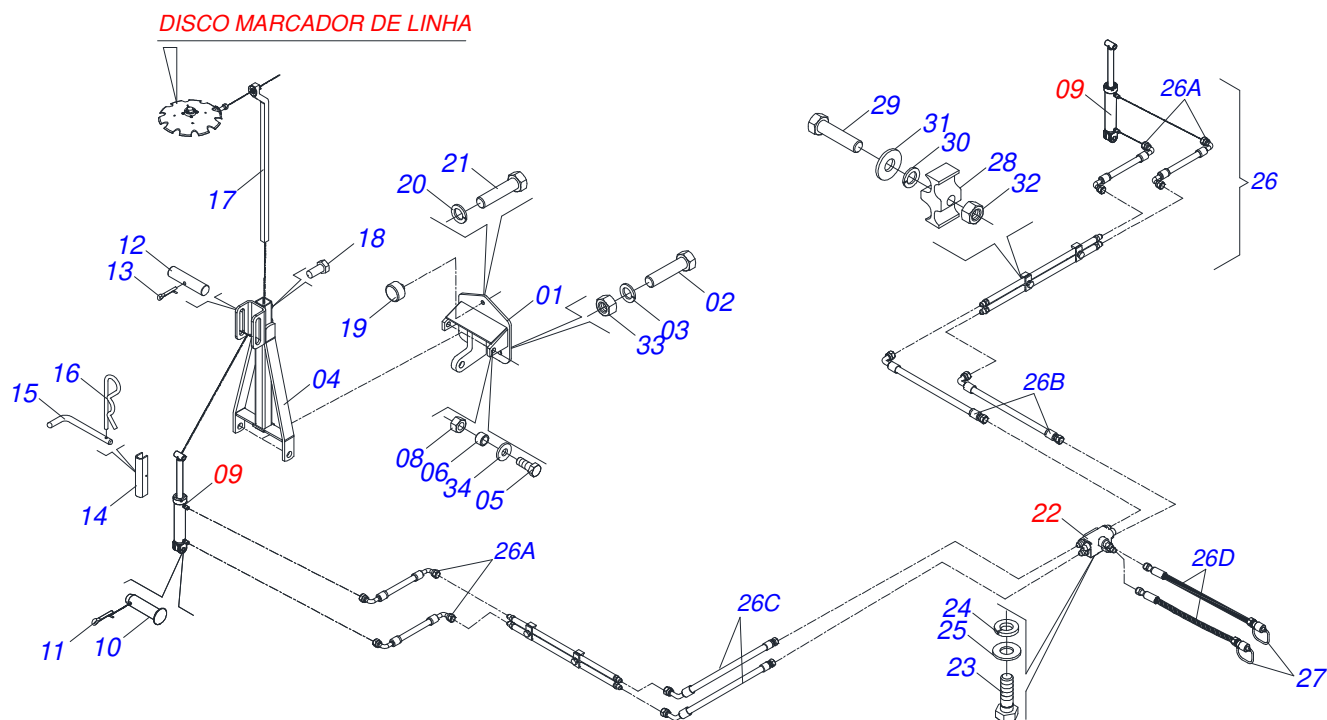


Item	Code	Description	See page	QT
001	0511065449	ROW MARKER ARM SUPPORT		02
002	0501018059	3/4" X 2-1/4" BOLT		08
003	0503010023	3/4" SPRING WASHER		08
004	0501069470	ROW MARKER ARM		02
005	0503011067	5/8" X 2-1/2" BOLT		04
006	0521010479	SLEEVE ARTICULATION		04
008	0503012795	5/8" HEX SELF ADJUSTING NUT		04
009	0511058449	HYDRAULIC CYLINDER	39	02
010	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
011	0503010571	1/4" X 1.1/2 COTTERPIN		02
012	0511015779	1" X 4.2" AXLE		02
013	0503010523	1/4" X 2" COTTERPIN		02
014	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
015	0501068994	0.3" X 3.1" LOCK PIN		02
016	0503030168	HAIR PIN		02
017	0501069643	890 TURNBUCKLE		02
018	0503010962	5/8" X 1-1/4" BOLT		04
019	0503011070	BEATER		02
020	0503010019	1/2" SPRING WASHER		02
021	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
022	0501054649	SEQUENTIAL VALVE ASSY		01
023	0503010371	5/16" X 1" BOLT		02
024	0503010179	5/16" ZN SPRING WASHER		02
025	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
026	0511051082	SET OF HYDRAULIC MARKER HOSES		01
026A	0501080687	3/8 X 1150 TC-TC HOSE ASSY		04
026B	0501080436	HOSE 3/8 X 1500 TR-TC		02
026C	0501080402	HOSE 3/8 X 1700 TR-TC		02
026D	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
027	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	42	02
028	0502012702	BODY SUPPORT CLAMP		02


Item	Code	Description	See page	QT
029	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
030	0503010180	7/16" SPRING WASHER		02
031	0501012803	FLAT WASHER		02
032	0503010244	7/16" NUT		04
033	0503011255	3/4" LOCK NUT		08
034	0501012140	FLAT WASHER		04

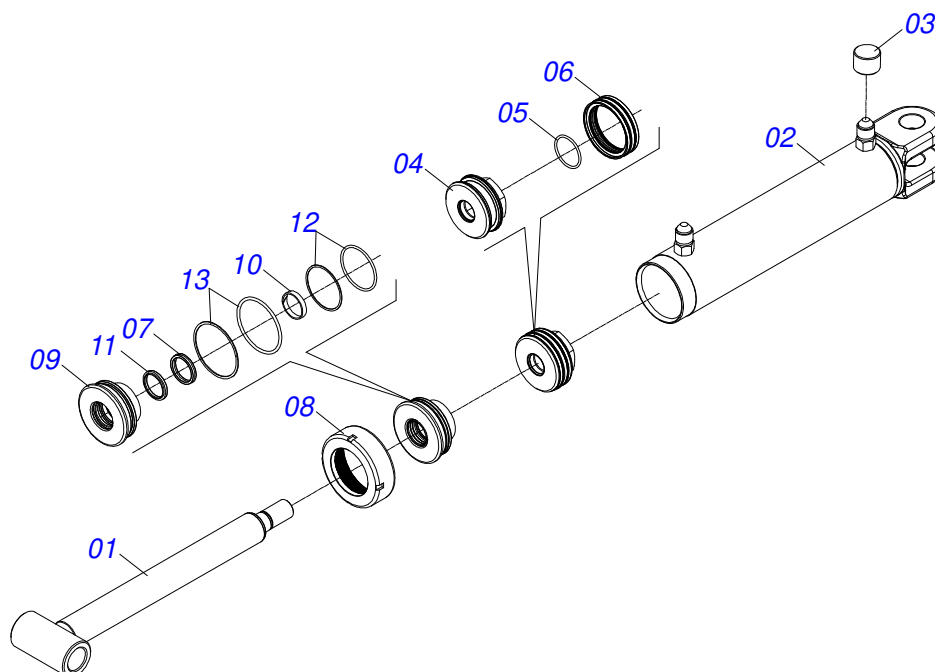


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02

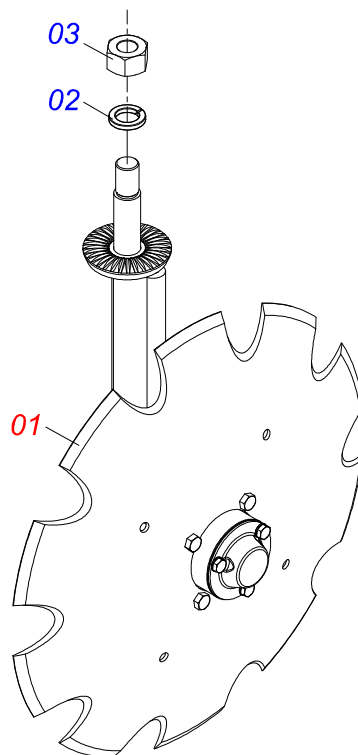


Item	Code	Description	See page	QT
01	0511053904	DISC LINE MARKER		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

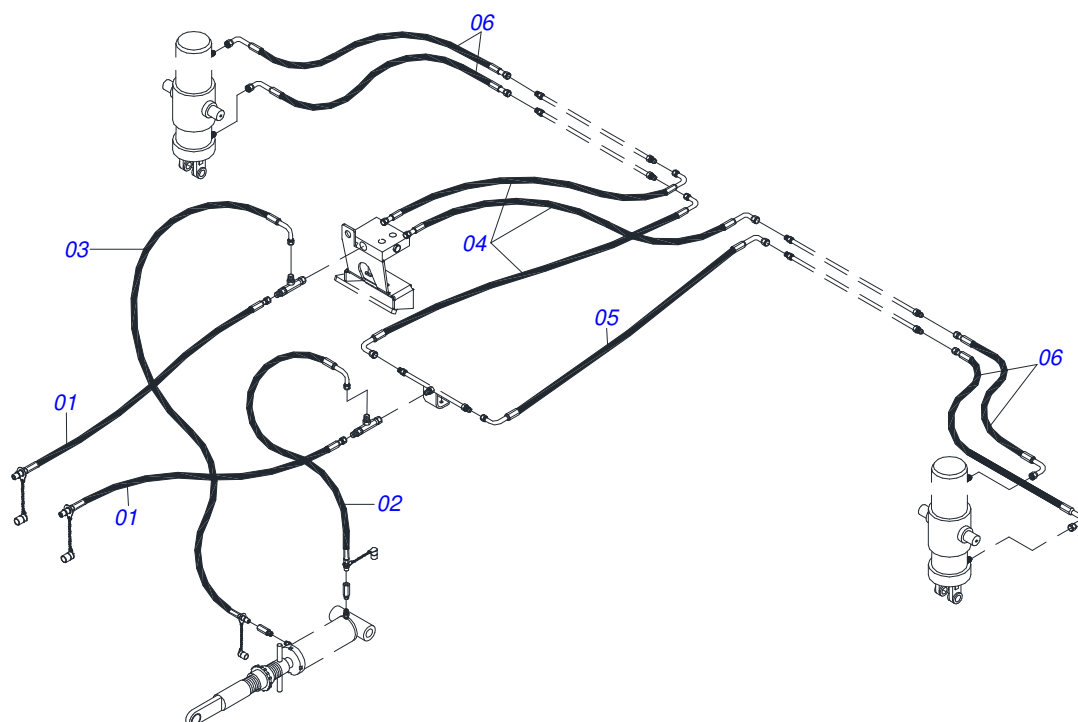


Item	Code	Description	See page	QT
01	0501080933	HOSE 1/2 X 4200 TR-TM		02
02	0501080116	TR-TM HOSE ASSY		01
03	0501080182	1/2" X 850 TR-TM HOSE ASSY		01
04	0501080396	3/8" X 45" HOSE		03
05	0501080687	3/8 X 1150 TC-TC HOSE ASSY		01
06	0501080054	3/8" X 17" TR-TC HOSE ASSY		04

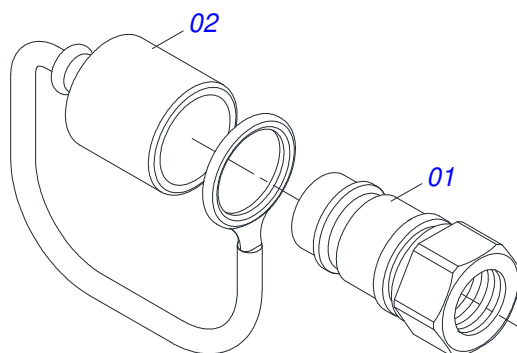


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

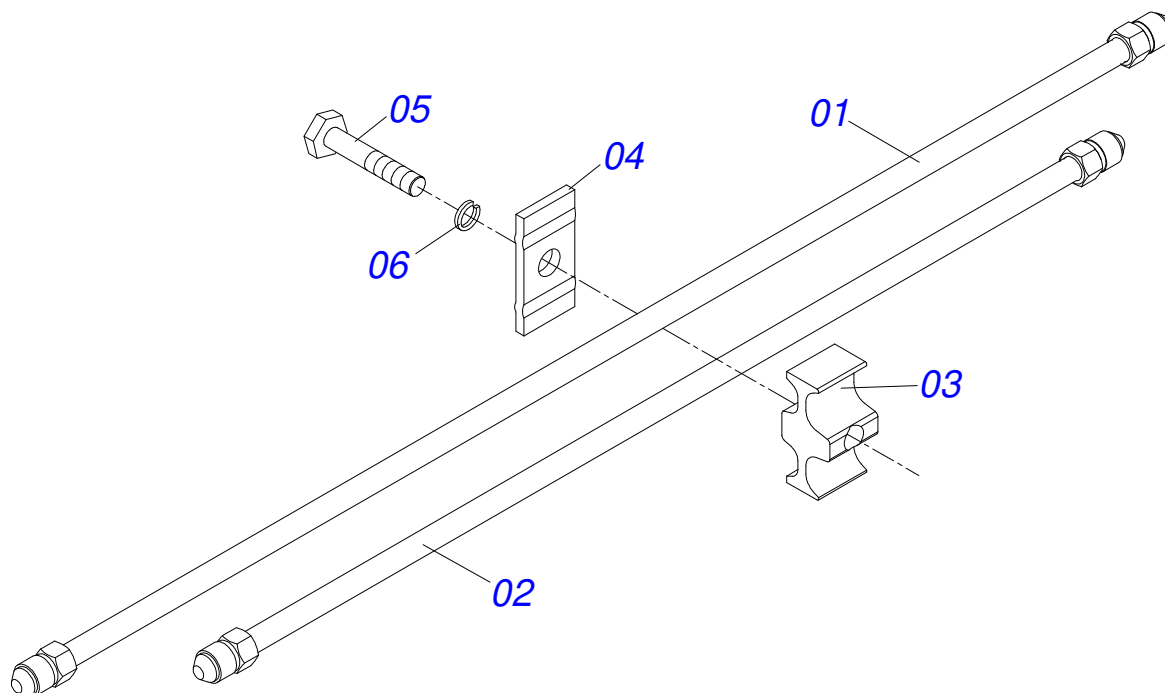

Item	Code	Description	See page	QT
001	0521061340	OIL TUBE		04
002	0521063409	2120 OIL TUBE		04
003	0502012702	BODY SUPPORT CLAMP		04
004	0531011180	UPPER BODY CLIP		04
005	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
006	0503010180	7/16" SPRING WASHER		04

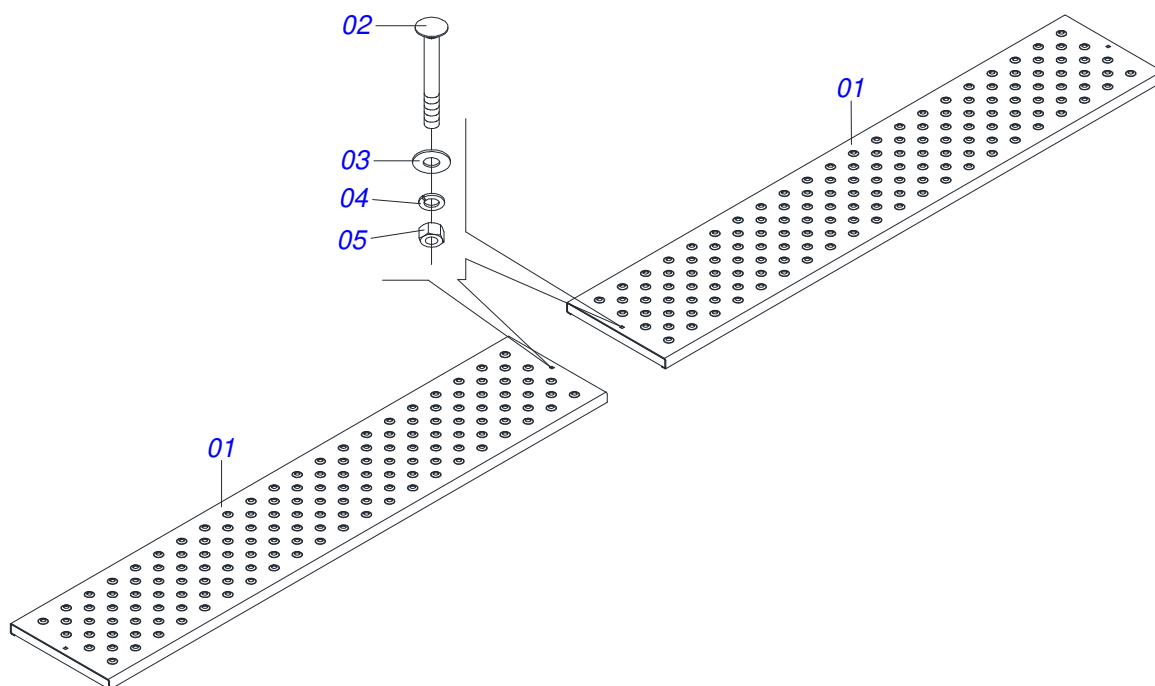


Item	Code	Description	See page	QT
01	0521062416	PLATFORM		02
02	0501011755	3/8" X 3" BOLT		04
03	0501010984	FLAT WASHER		04
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04

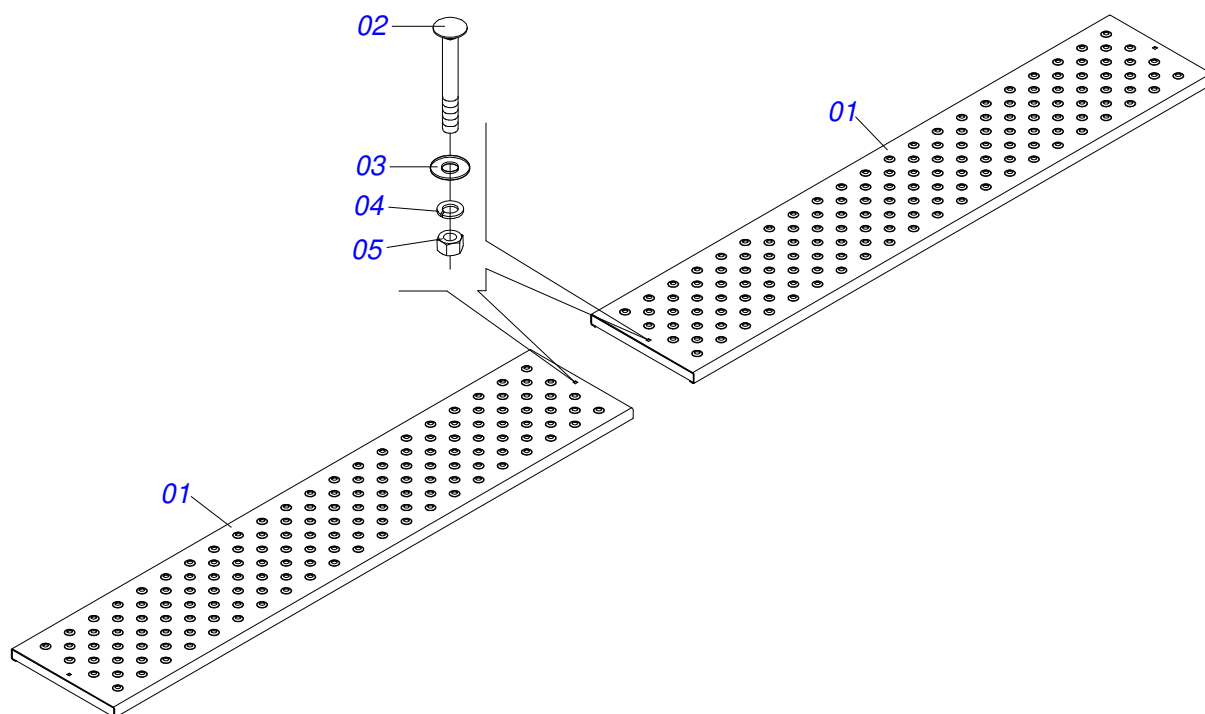

Item	Code	Description	See page	QT
01	0521061333	PLATFORM		02
02	0501011755	3/8" X 3" BOLT		04
03	0501010984	FLAT WASHER		04
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04

HANDRAIL ASSEMBLE


0511053916

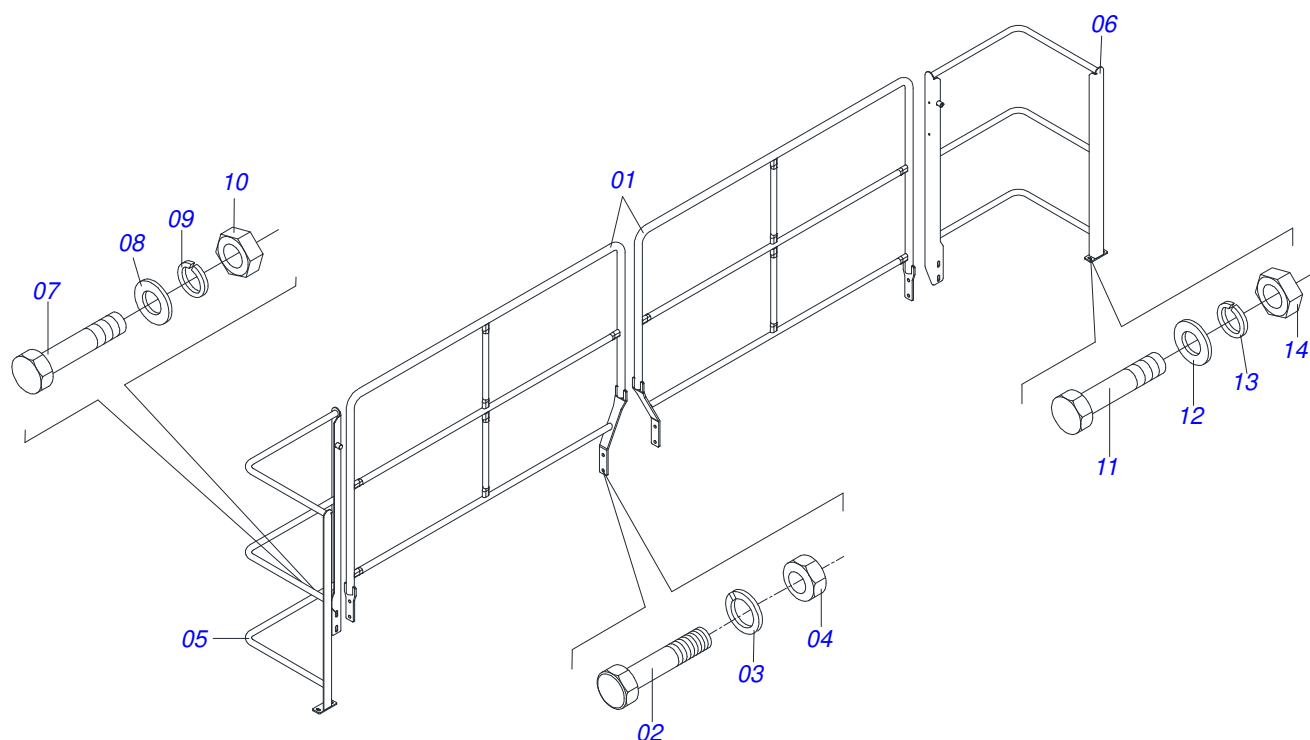

Item	Code	Description	See page	QT
01	0521062417	HANDRAIL	02	
02	0503010920	1/2" X 1.1/2" BOLT	08	
03	0503010019	1/2" SPRING WASHER	08	
04	0503010060	1/2" NUT	08	
05	0521061335	RIGHT SIDE HANDRAIL	01	
06	0521061336	LH SIDE HANDRAIL	01	
07	0503011088	3/8" X 1-1/4" BOLT	04	
08	0501010984	FLAT WASHER	08	
09	0503010025	3/8" SPRING WASHER	04	
10	0503010026	3/8" NUT	04	
11	0501010161	1/2" X 1.1/4" BOLT	04	
12	0511017302	FLAT WASHER	04	
13	0503010019	1/2" SPRING WASHER	04	
14	0503010060	1/2" NUT	04	

HANDRAIL ASSEMBLE


0511053889

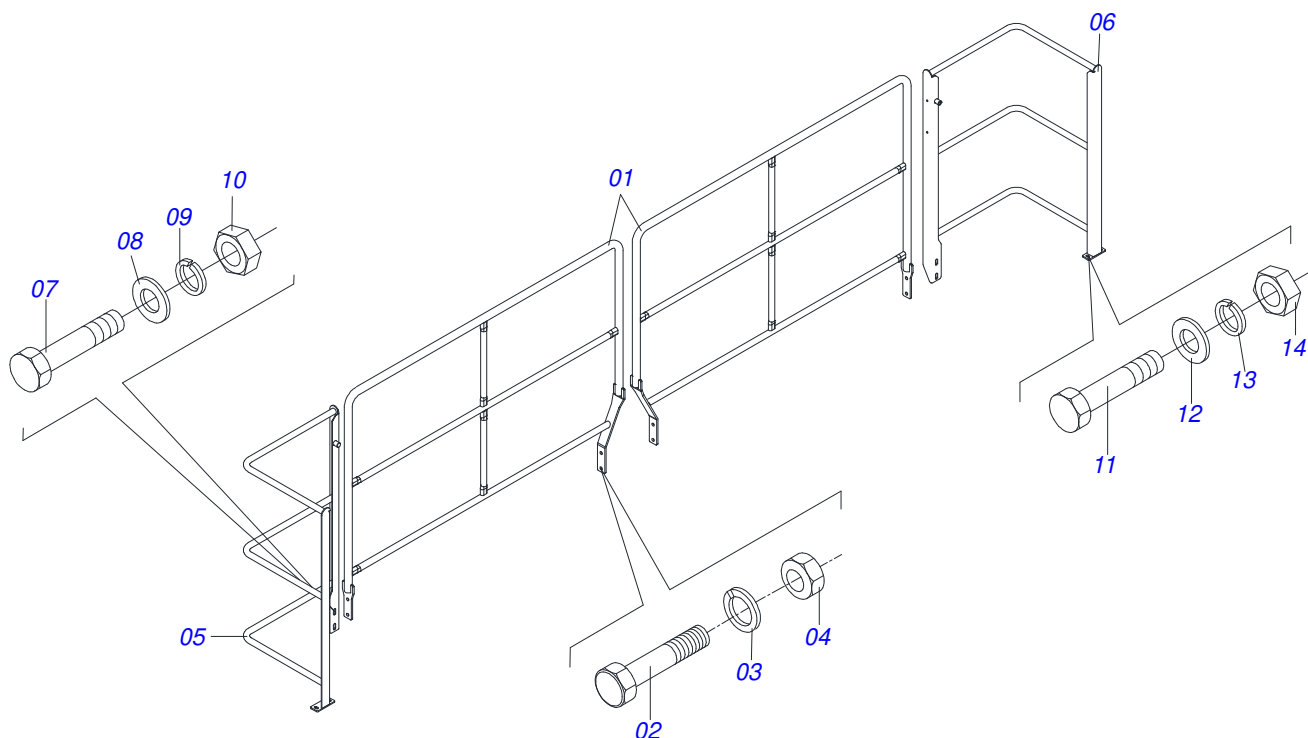

Item	Code	Description	See page	QT
01	0521061334	HANDRAIL	02	
02	0503010920	1/2" X 1.1/2" BOLT	08	
03	0503010019	1/2" SPRING WASHER	08	
04	0503010060	1/2" NUT	08	
05	0521061335	RIGHT SIDE HANDRAIL	01	
06	0521061336	LH SIDE HANDRAIL	01	
07	0503011088	3/8" X 1-1/4" BOLT	04	
08	0501010984	FLAT WASHER	08	
09	0503010025	3/8" SPRING WASHER	04	
10	0503010026	3/8" NUT	04	
11	0501010161	1/2" X 1.1/4" BOLT	04	
12	0511017302	FLAT WASHER	04	
13	0503010019	1/2" SPRING WASHER	04	
14	0503010060	1/2" NUT	04	

HANDRAIL ASSEMBLE


0511053890

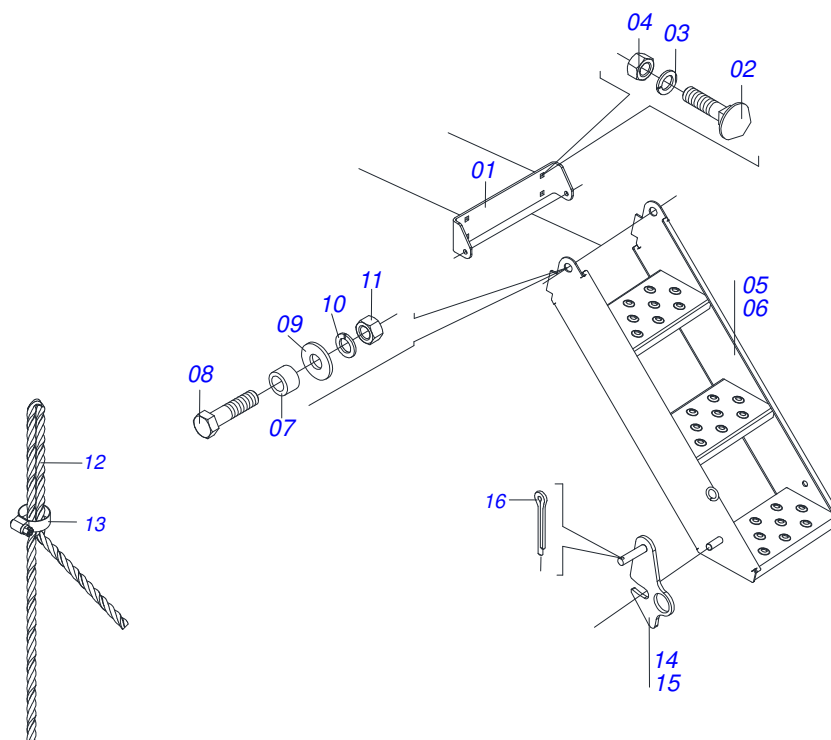

Item	Code	Description	See page	QT
001	0561015343	ARTICULACCION SUPPORT		02
002	0501010243	1/2" X 1-1/2" BOLT		08
003	0503010019	1/2" SPRING WASHER		08
004	0503010060	1/2" NUT		08
005	0521061331	RIGHT LADDER		01
006	0521061332	LEFT LADDER		01
007	0531018627	0.5" X 1" X 0.2" SLEEVE		04
008	0503010920	1/2" X 1.1/2" BOLT		04
009	0511017302	FLAT WASHER		04
010	0503010019	1/2" SPRING WASHER		04
011	0503010060	1/2" NUT		04
012	0511010369	3/8" X 74.80" LEVER ROPE		02
013	0503010296	CLAMP		04
014	0511065678	STAIR RIGHT LOCK		01
015	0511065679	STAIR RIGHT LOCK		01
016	0503010257	1/8" X 1" COTTERPIN		02

ASSY FIXER HEADER


0511053085

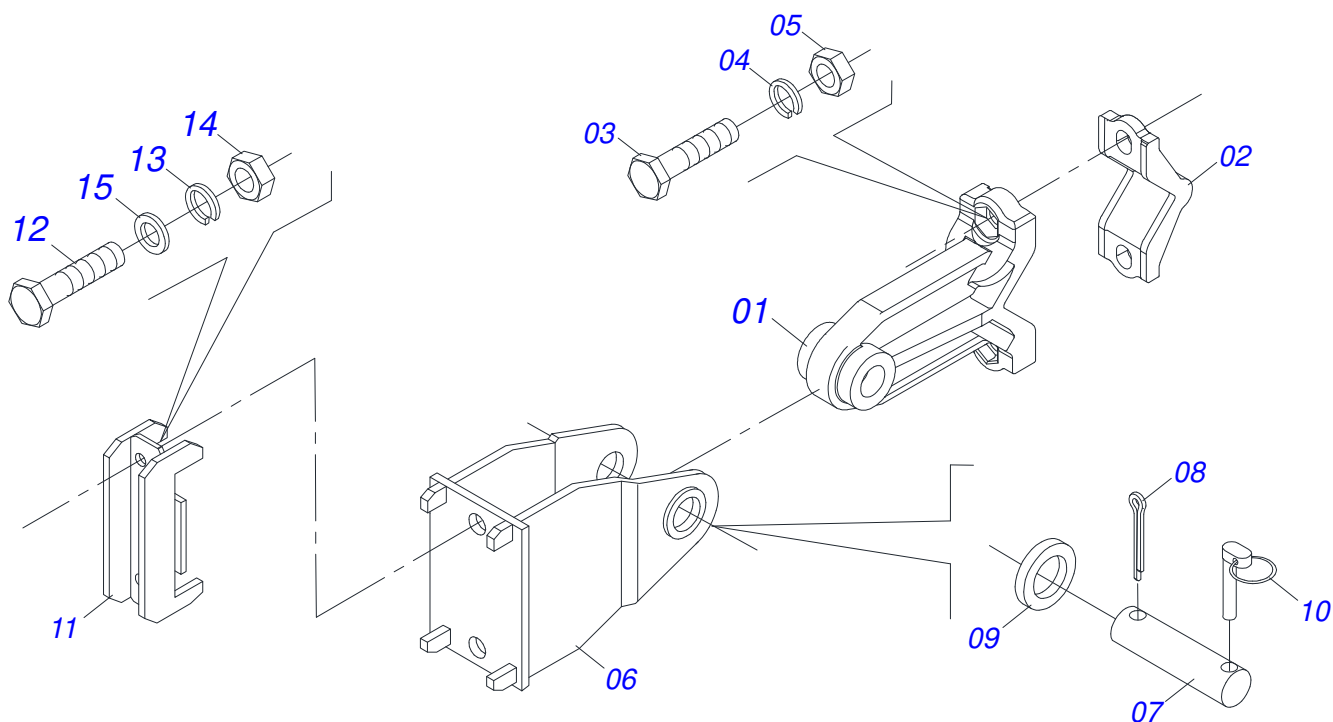


Item	Code	Description	See page	15
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	04	
02	0502012330	SUPPORT FIXER PIVOT	04	
03	0503011084	3/4" X 5" BOLT	08	
04	0503010023	3/4" SPRING WASHER	08	
05	0503010014	3/4" NUT	08	
06	0511065418	DRAWBAR SUPPORT FRONT FIXATION	04	
07	0561014393	COUPLING SHAFT	04	
08	0503010523	1/4" X 2" COTTERPIN	04	
09	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN	08	
10	0503030119	LOCK PIN	04	
11	0511065419	DRAWBAR FIXER CLAMP	04	
12	0521010066	3/4" X 8.12" BOLT	08	
13	0503010023	3/4" SPRING WASHER	08	
14	0503010014	3/4" NUT	08	
15	0501010322	FLAT WASHER	08	

DRAWBAR ASSY


0511043100

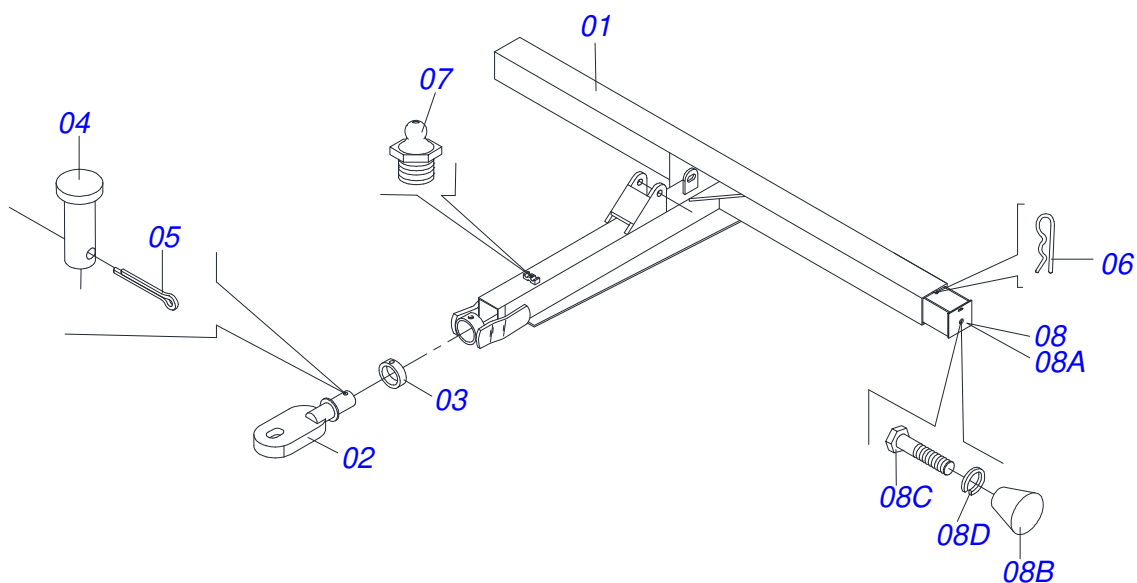


Item	Code	Description	See page	QT
001	0511065905	DRAWBAR COP-CE		01
002	0501069632	TRACTOR HITCH		01
003	0521010681	BUSHING COUPLING BODY		01
004	0521010639	COUPLING SHAFT		01
005	0503010571	1/4" X 1.1/2 COTTERPIN		01
006	0503030012	HAIR PIN		02
007	0503010002	1800 GREASE FITTING		01
008	0511043137	TOOLS BOX ASSY		02
008A	0511065471	BOX OF TOOLS		01
008B	0503010293	BAQUELITE MANIPULACION		01
008C	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
008D	0503011443	3/8" SPRING WASHER		01

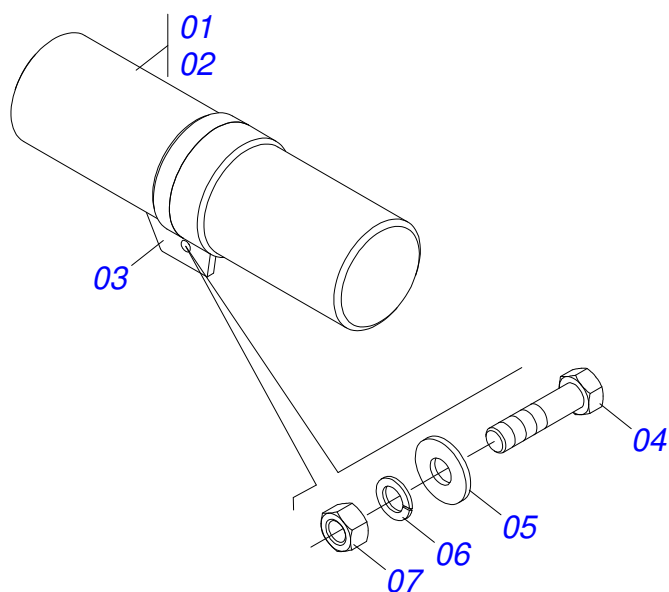


Item	Code	Description	See page	QT
001	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
002	0511031937	BAG WITH MANUAL CATALOG		01
003	0503010267	NYLON CLAMP		01
004	0503010363	5/16" X 1" BOLT		01
005	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
006	0503010179	5/16" ZN SPRING WASHER		01
007	0503010337	5/16" NUT		01

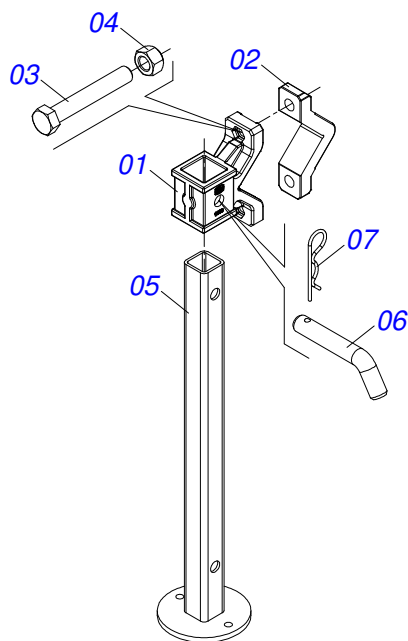

Item	Code	Description	See page	QT
01	0502011530	SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	5/8 UNC SELF LOCKING NUT		04
05	0501069951	PLOUGH SUPPORT		04
06	0501011075	PIN		02
07	0503030012	HAIR PIN		02

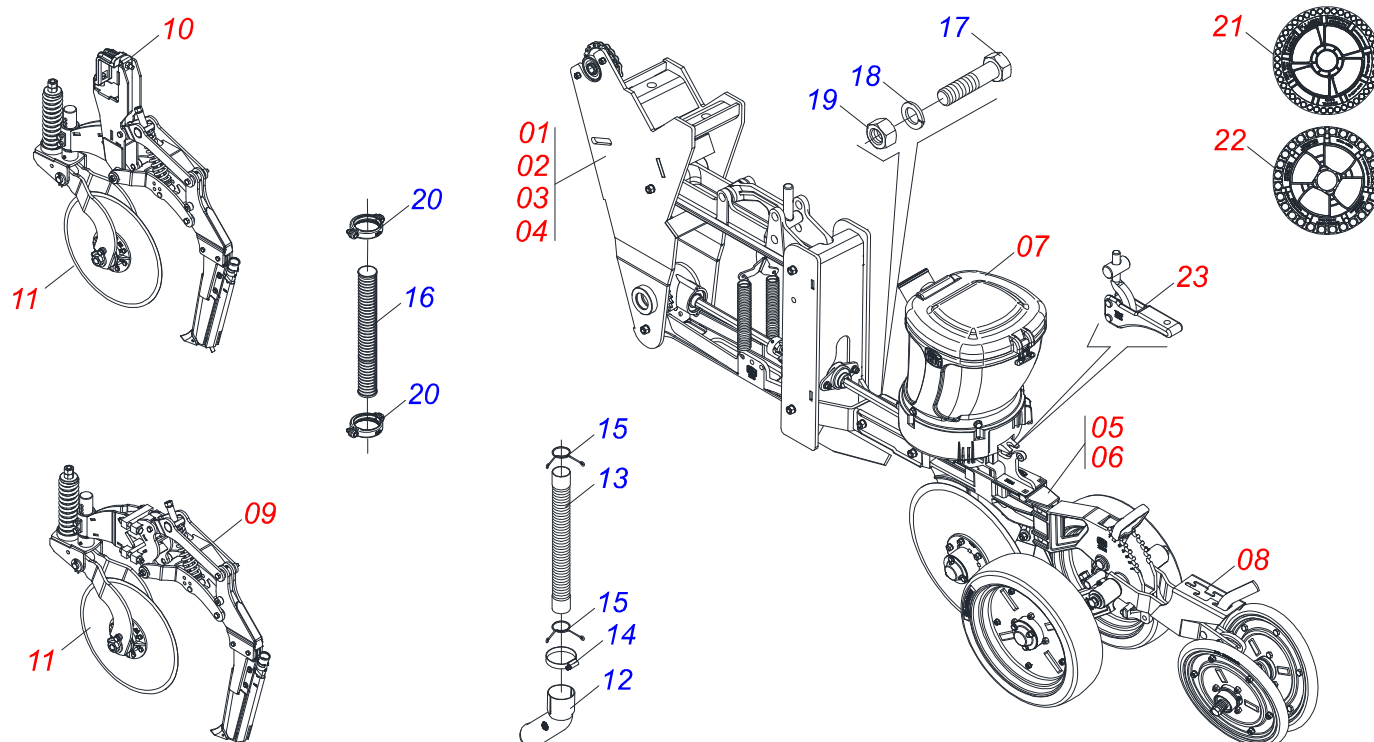


Item	Code	Description	See page	QT
01	0501059362	LONG SEED ROW FRONT	54	01
02	0501059350	LONG FRONT SEED ROW	55	01
03	0501059349	SHORT SEED ROW FRONT	56	01
04	0501059361	SHORT SEED ROW FRONT	57	01
05	0511052319	RIGHT REAR SEED ROW	60	01
06	0511052320	REAR LEFT ROW SEED TITANIUM	61	01
07	0521050096	SEED DEPOSIT SYSTEM (CSU)		01
08	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	65	09
08.	0521051424	WHEEL SYSTEM DEPTH / COMPACTOR QUICK ADJUSTMENT	75	01
09	0511053825	SEMI-ASSEMBLED SHORT FERTILIZER LINE	76	01
10	0511053826	SEMI-ASSEMBLED LONG FERTILIZER LINE	77	01
11	0511048339	24" BLADE DISC ASSY	78	01
12	0503031050	CURVED CONDUCTOR		07
13	0503031145	2" X 2" X 20" HOSE		07
14	0503010246	CLAMP		07
15	0503031076	2" HOSE CLAMP		14
16	0571011730	SEED CONDUCTOR 3X1500		07
17	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		14
18	0503010019	1/2" SPRING WASHER		14
19	0503010060	1/2" NUT		14
20	0521050525	FIXER FERTILIZER CONDUCTOR		14
21	0503062066	DISC SET WITH CORN RING	79	07
22	0503062067	DISC SET / RING SOY 90F TITANIUM	80	07
23	0511052024	FAST CLOSING SET	81	07

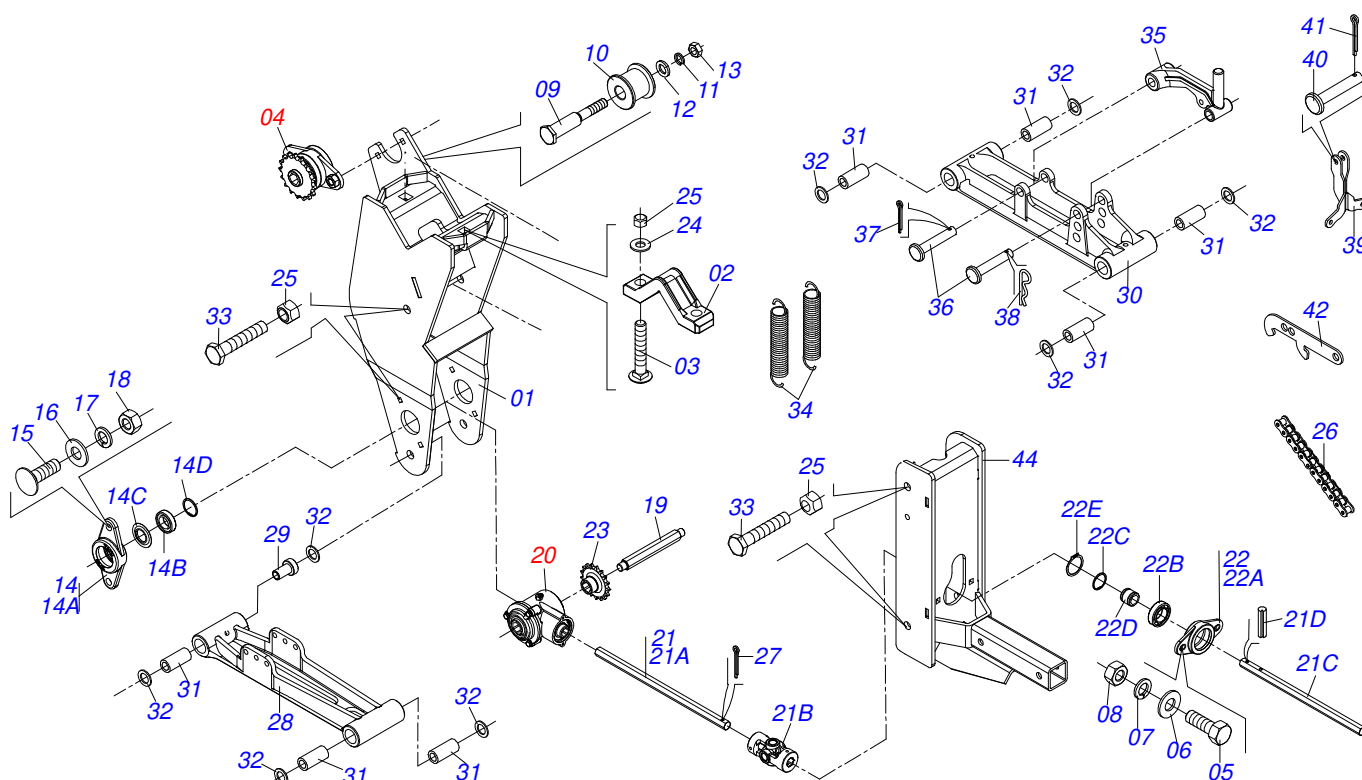

Item	Code	Description	See page	QT
001	0521064653	RIGH SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	58	01
005	0503010365	NUT		02
006	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
007	0503010179	5/16" ZN SPRING WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
014A	0502012718	BEARIN BODY		01
014B	0503012882	BEARING		01
014C	0503017011	SEAL RING		01
014D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
017	0503010179	5/16" ZN SPRING WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	59	01
021	0501059327	UNIVERSAL JOINT AXLE		01
021A	0561014794	350 AXLE HEX		01
021B	0501056296	UNIVERSAL JOINT		01
021C	0561016631	HEX AXLE		01
021D	0503011855	0.2" X 1.8" SPRING PIN		02
022	0501059363	5/8" HEX AXLE BEARING		01
022A	0502011697	BEARING OF THE GEAR BOX		01

Item	Code	Description	See page	QT
022B	0503011410	ROLLER BEARING		01
022C	0503011105	SEAL RING		01
022D	0561014911	AXLE SLEVE GUIDES HEX		01
022E	0503010406	501025 CLAMPING RING (FOR AXLE)		02
023	0502012782	17Z GEAR WITH HEX HOLE		01
024	0501012140	FLAT WASHER		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02
026	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEDD ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HAIR PIN		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0503010013	5/8" NUT		02
044	0521061428	CC TIRE ROW FRAME		01

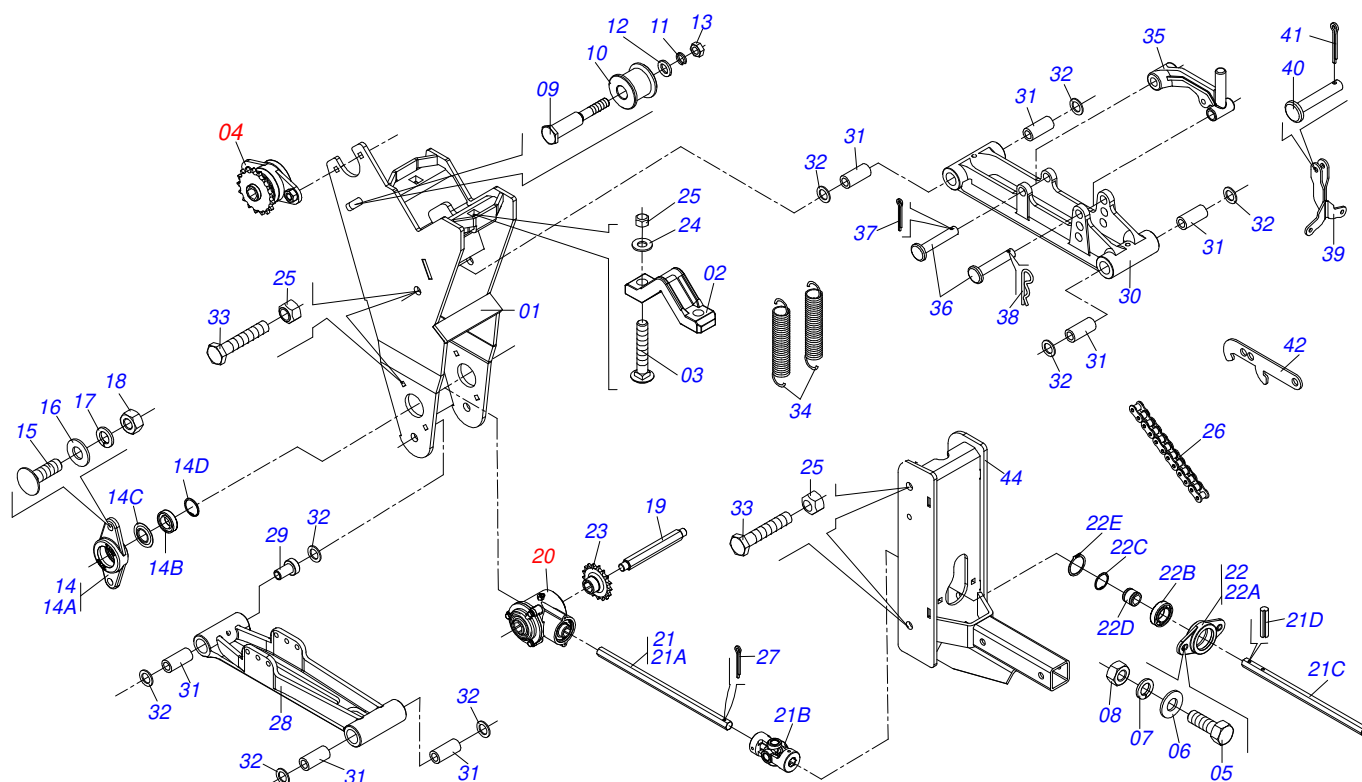


Item	Code	Description	See page	QT
001	0521064651	LEFT SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	58	01
005	0503010365	NUT		02
006	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
007	0503010179	5/16" ZN SPRING WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
017	0503010179	5/16" ZN SPRING WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	59	01
021	0501059327	UNIVERSAL JOINT AXLE		01
022	0501059363	5/8" HEX AXLE BEARING		01
022A	0502011697	BEARING OF THE GEAR BOX		01
022B	0503011410	ROLLER BEARING		01
022C	0503011105	SEAL RING		01
022D	0561014911	AXLE SLEVE GUIDES HEX		01
022E	0503010406	501025 CLAMPING RING (FOR AXLE)		02
023	0502012782	17Z GEAR WITH HEX HOLE		01
024	0501012140	FLAT WASHER		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02
026	0503013114	40-1 CHAIN X 89 LINK + MENDING		01

LONG FRONT SEED ROW

0501059350

Item	Code	Description	See page	QT
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEDD ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HAIR PIN		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0503010013	5/8" NUT		02
044	0521061428	CC TIRE ROW FRAME		01

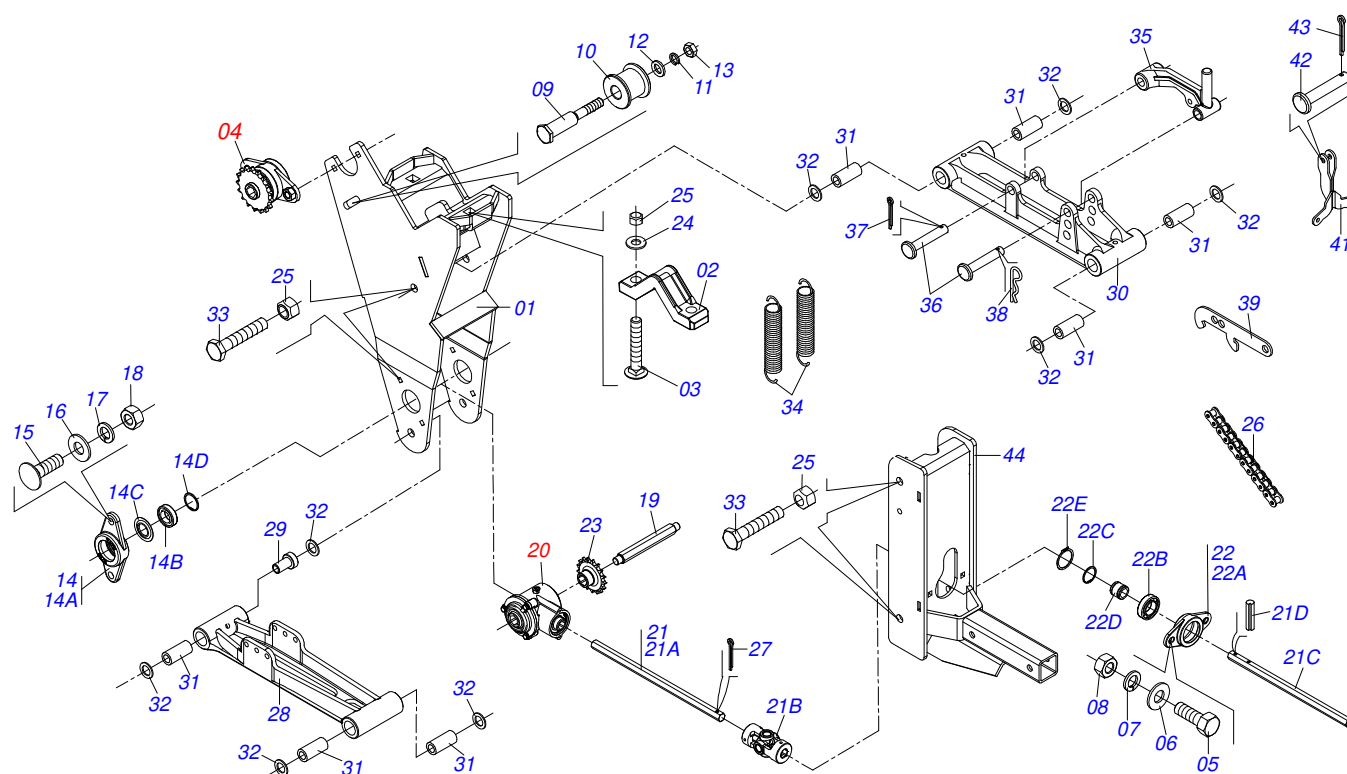


Item	Code	Description	See page	QT
001	0521064651	LEFT SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	58	01
005	0503010365	NUT		02
006	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
007	0503010179	5/16" ZN SPRING WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
014A	0502012718	BEARIN BODY		01
014B	0503012882	BEARING		01
014C	0503017011	SEAL RING		01
014D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
017	0503010179	5/16" ZN SPRING WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	59	01
021	0501059326	UNIVERSAL JOINT AXLE		01
021A	0561014794	350 AXLE HEX		01
021B	0501056296	UNIVERSAL JOINT		01
021C	0561016322	5/8" HEX AXLE		01
021D	0503011855	0.2" X 1.8" SPRING PIN		02
022	0501059363	5/8" HEX AXLE BEARING		01
023	0502012782	17Z GEAR WITH HEX HOLE		01

SHORT SEED ROW FRONT

0501059349

Item	Code	Description	See page	QT
024	0501012140	FLAT WASHER		02
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEDD ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HAIR PIN		01
039	0561019032	SEED FERTIL ROW LOCK		01
040	0503010013	5/8" NUT		02
041	0521061850	SPRING UPPER FIXER		01
042	0521010773	0.37" X 1.18" COUPLING SHAFT		01
043	0503010140	1/8" X 3/4" COTTERPIN		01
044	0521061427	SHORT SEED ROW FRAME		01
045	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
046	0503012412	5/8 UNC SELF LOCKING NUT		02
047	0503012412	5/8 UNC SELF LOCKING NUT		04

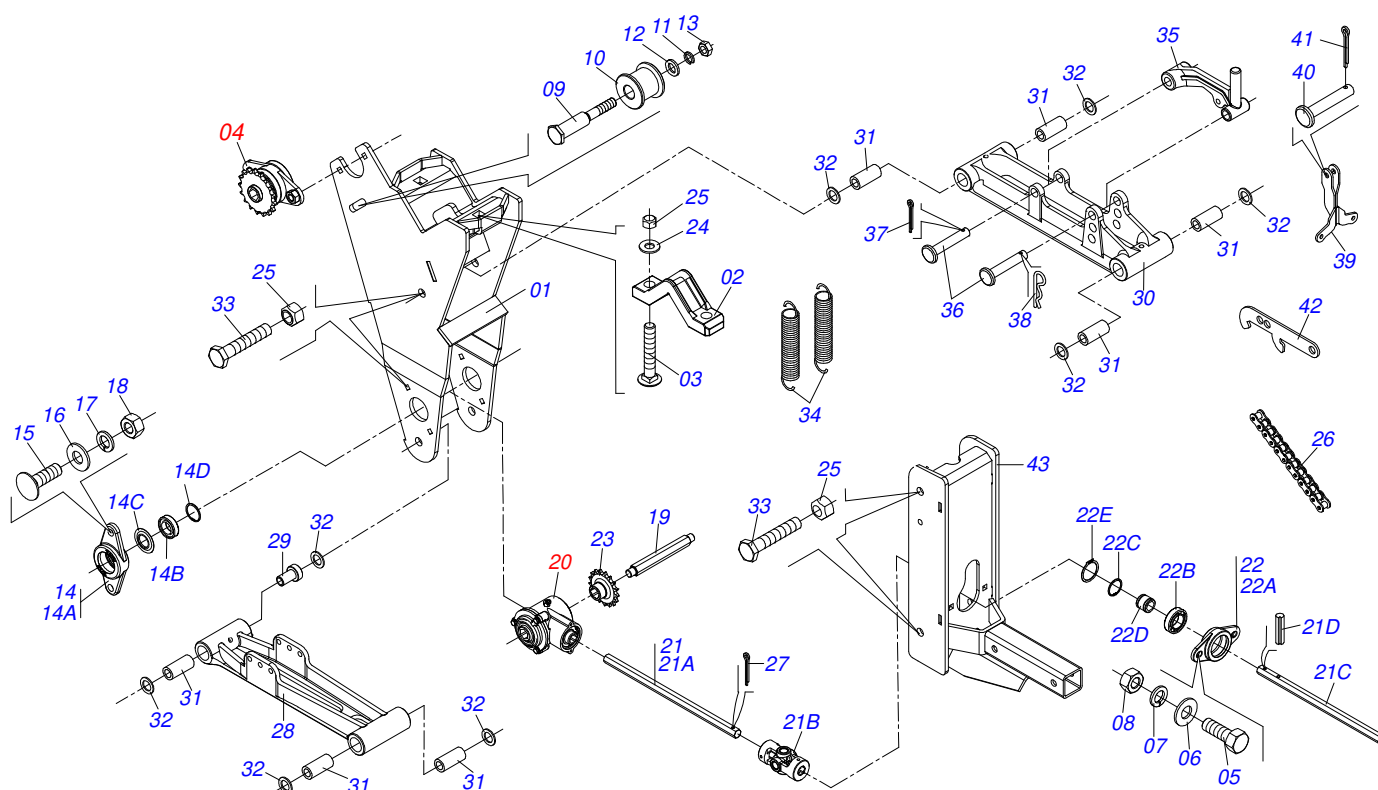


Item	Code	Description	See page	QT
001	0521064653	RIGH SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	58	01
005	0503010365	NUT		02
006	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
007	0503010179	5/16" ZN SPRING WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
017	0503010179	5/16" ZN SPRING WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	59	01
021	0501059326	UNIVERSAL JOINT AXLE		01
022	0501059363	5/8" HEX AXLE BEARING		01
023	0503010365	NUT		02
024	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
025	0503010179	5/16" ZN SPRING WASHER		02
026	0503010337	5/16" NUT		02
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEDD ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08

SHORT SEED ROW FRONT

0501059361


Item	Code	Description	See page	QT
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HAIR PIN		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0521061427	SHORT SEED ROW FRAME		01
044	0503010013	5/8" NUT		02
045	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
046	0503012412	5/8 UNC SELF LOCKING NUT		02
047	0503012412	5/8 UNC SELF LOCKING NUT		04
048	0501012140	FLAT WASHER		02
049	0502012782	17Z GEAR WITH HEX HOLE		01

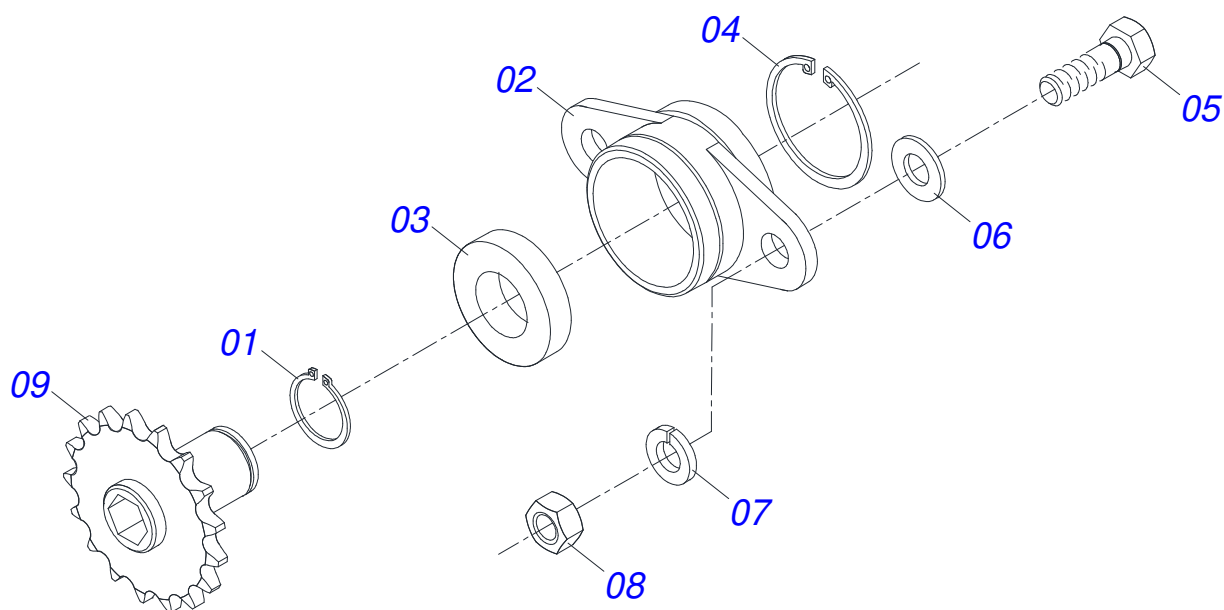


Item	Code	Description	See page	QT
01	0503010406	501025 CLAMPING RING (FOR AXLE)		01
02	0502011697	BEARING OF THE GEAR BOX		01
03	0503011410	ROLLER BEARING		01
04	0503011105	SEAL RING		01
05	0503011953	5/16" X 1" BOLT		02
06	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
07	0503010179	5/16" ZN SPRING WASHER		02
08	0503010337	5/16" NUT		02
09	0502012819	17Z GEAR WITH HEX HOLE		01

TRANSMISSION BOX


0511054884

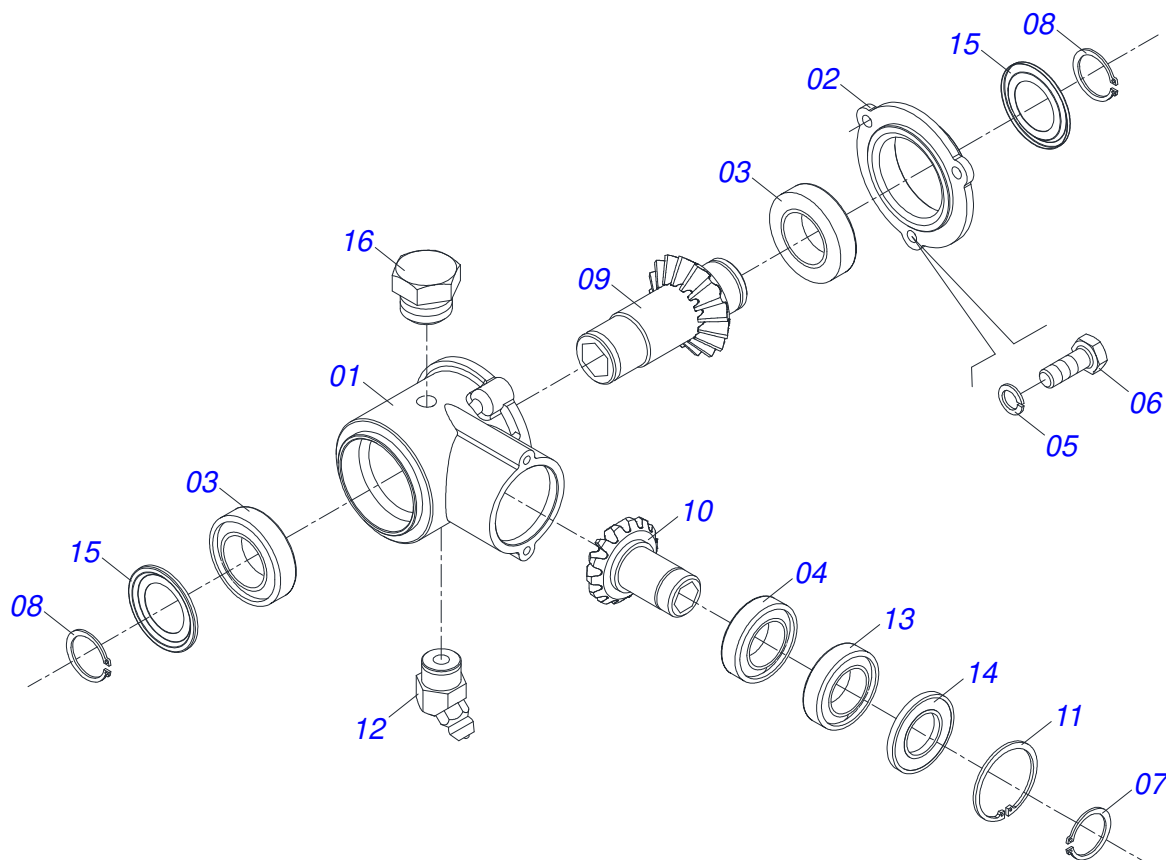


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0502040857	CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503010003	1845 GREASE FITTING		01
13	0503011409	6005 Z BALL BEARING		01
14	0503017008	SEAL RING		01
15	0503017007	SEAL RING		02
16	0511017907	1/8" BSPT X 6 PLUG		01

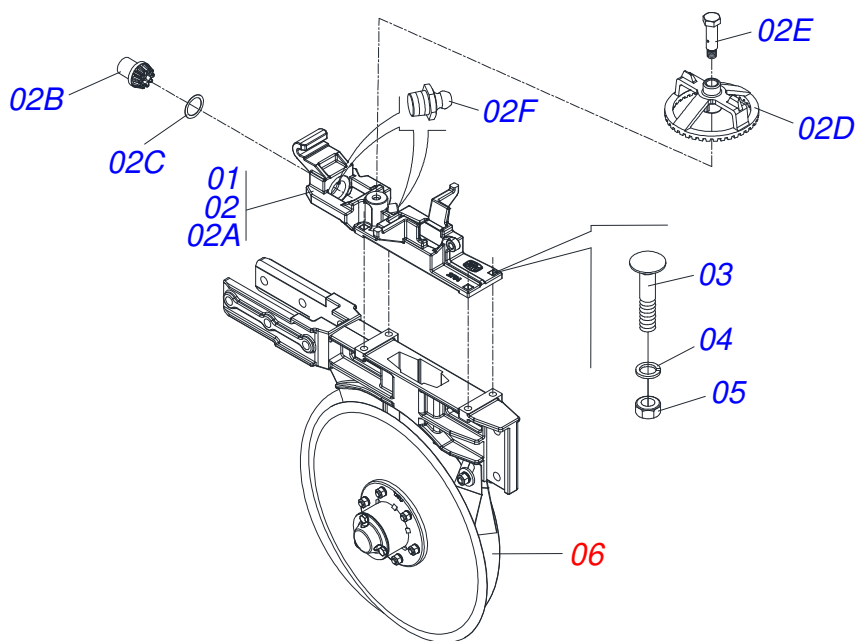


Item	Code	Description	See page	QT
01	0511052319	RIGHT REAR SEED ROW	60	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059631	DDD SEED 15" X 15" RIGHT	62	01

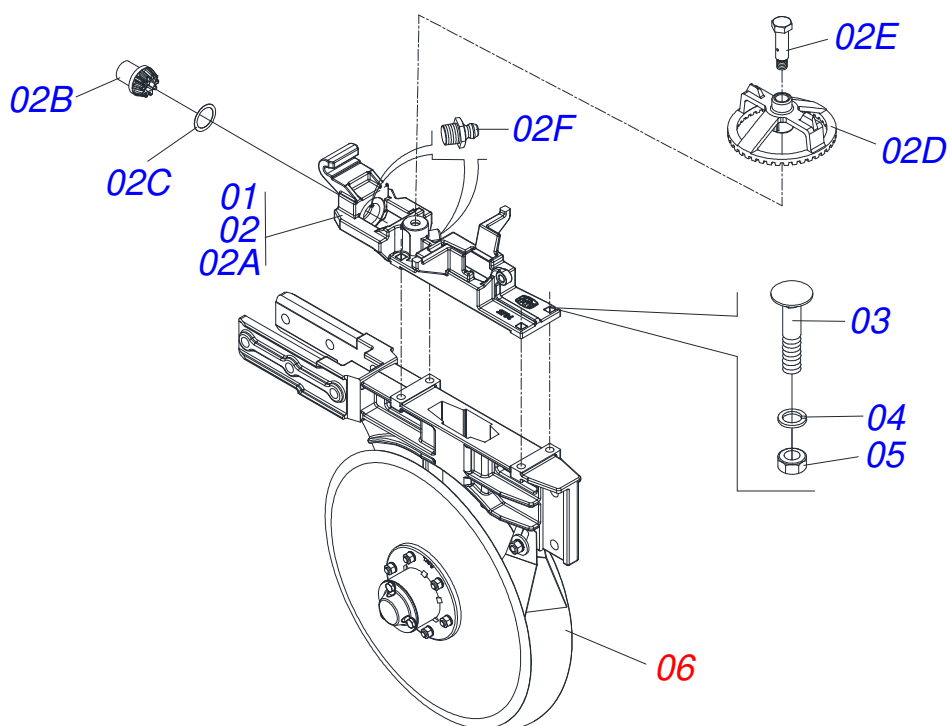


Item	Code	Description	See page	QT
01	0511052320	REAR LEFT ROW SEED TITANIUM	61	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0502012639	12Z LOWER CONICAL GEAR		01
02C	0501013354	FLAT WASHER		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059632	DDD SEED 15X15 LEFT		01

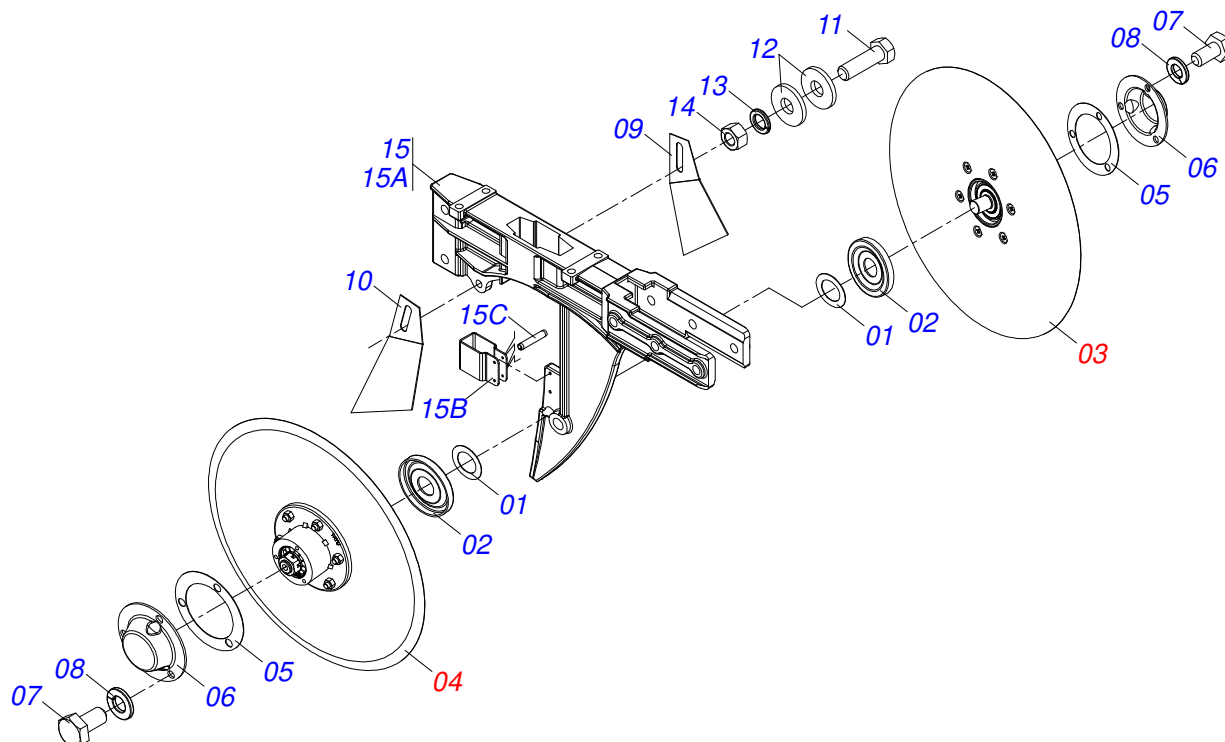


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	BOX DDD ASSY DPL 15 RIGHT	64	01
04	0501054168	BOX DDD ASSY DPL 15 LEFT	63	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052301	SUPPORT DDD 15 RIGHT		01
15A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

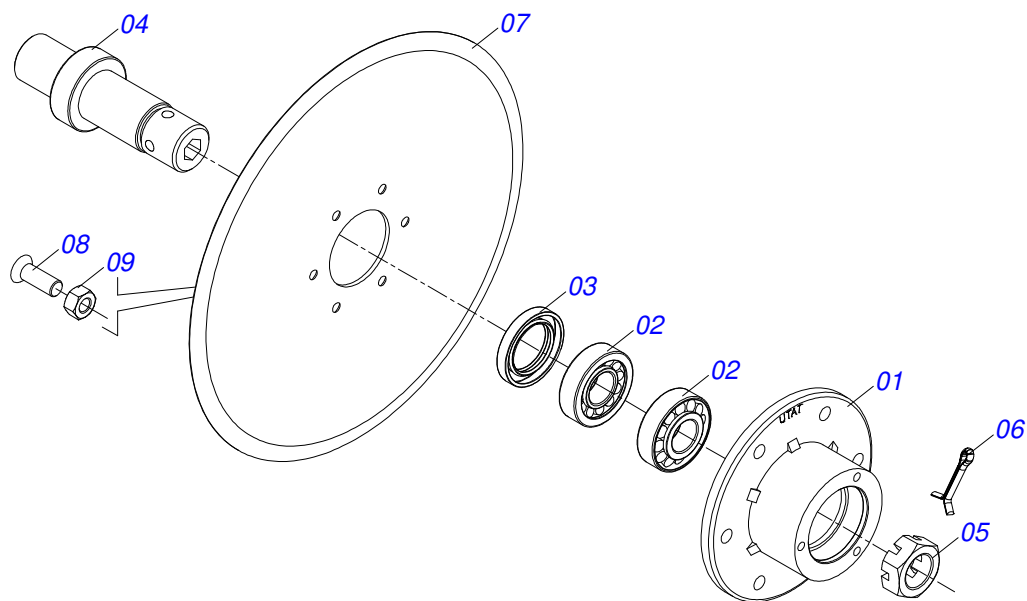


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

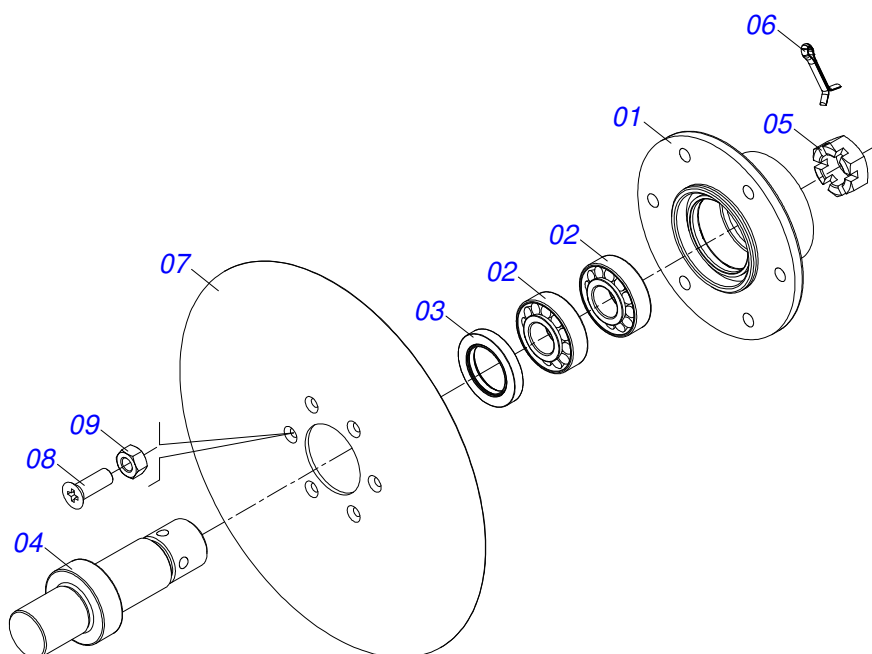


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT DOUB DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

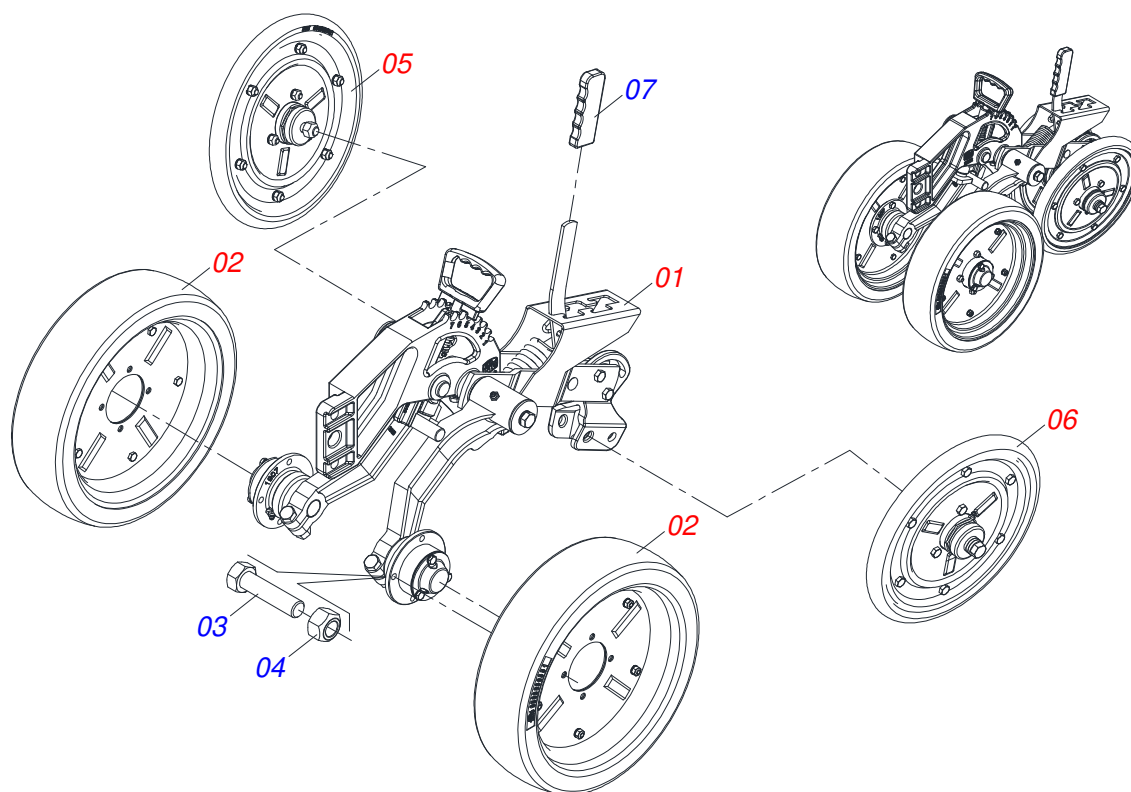


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	66	01
02	0501052538	DEPTH BAND WITH ARMS	71	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	72	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	73	01
07	0503033942	COVER REGULATORY WHEEL		01

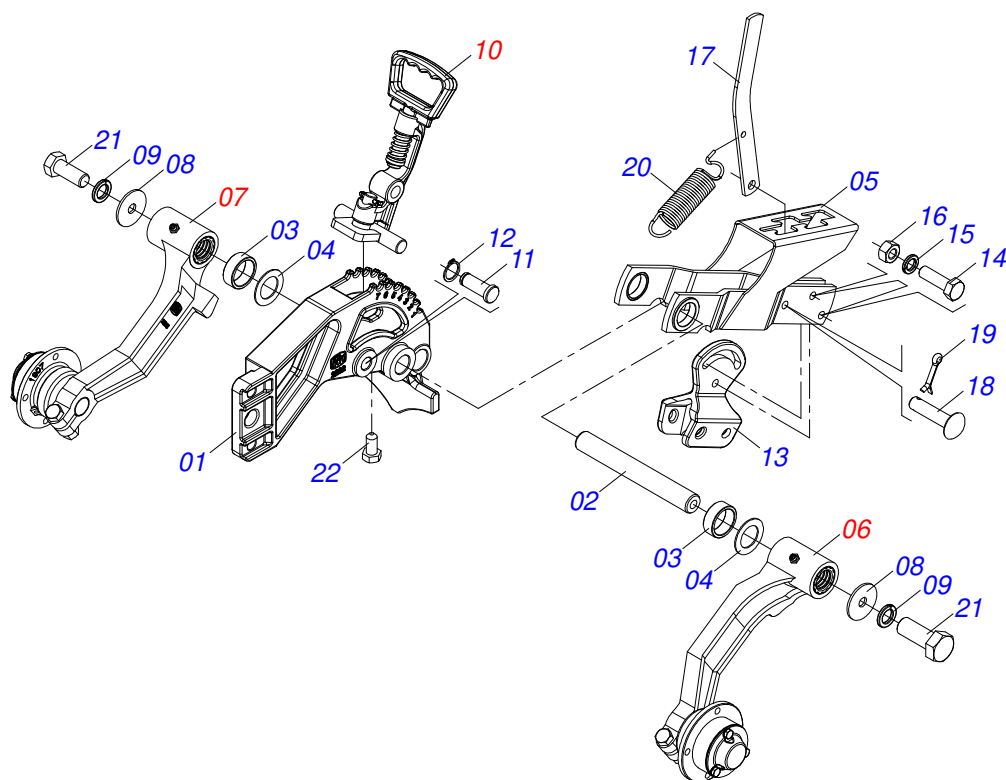


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	67	01
07	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	68	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	70	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	SCREWEW 3/8 UNC X 3/4		01

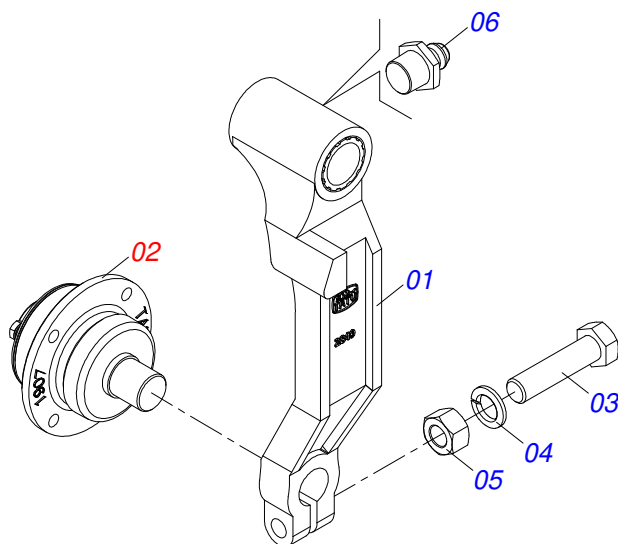


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL BOX	69	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01

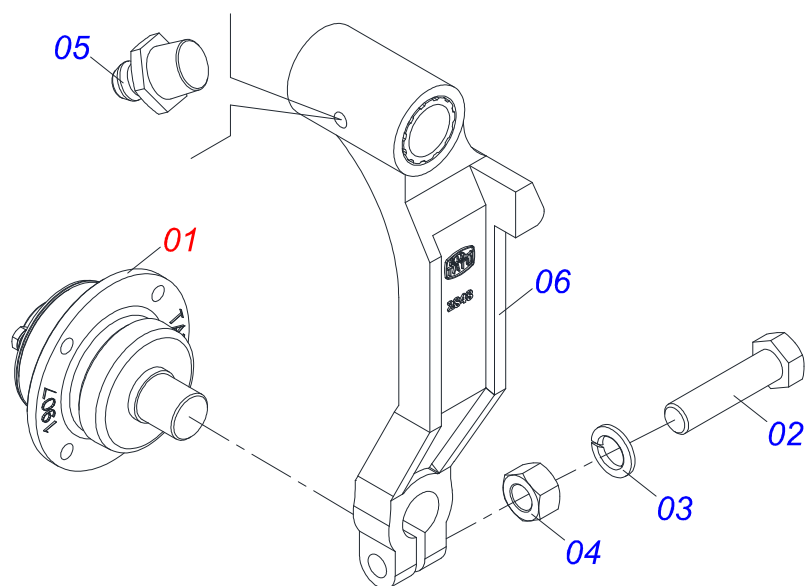


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL BOX	69	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

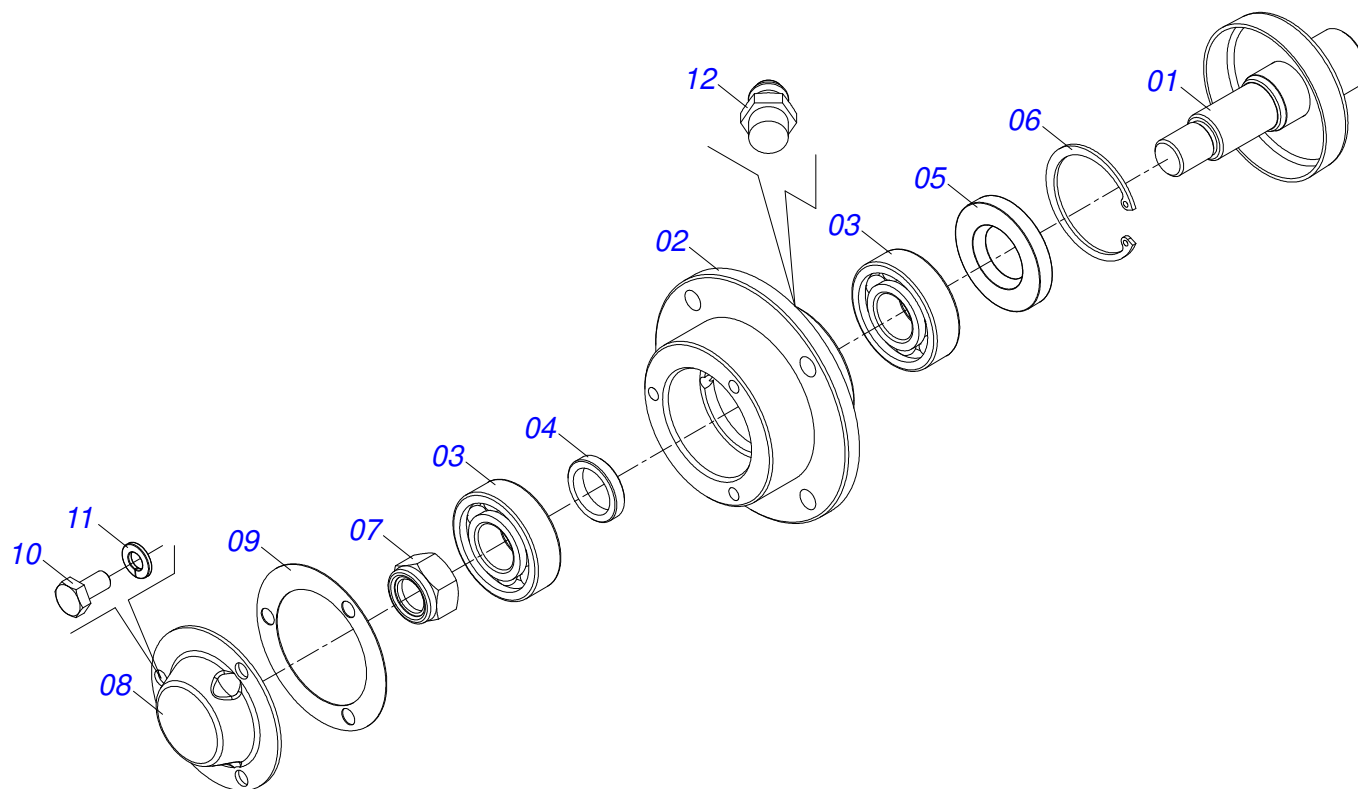


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	COVER DEPTH		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

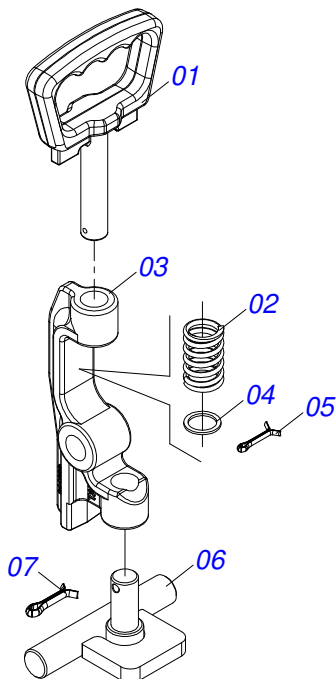


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	SEED SIST CONTROL DEPTH LEVER		01
04	0511015976	FLAT WASHER		01
05	0503010257	1/8" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503010071	3/16" X 1" COTTERPIN		01

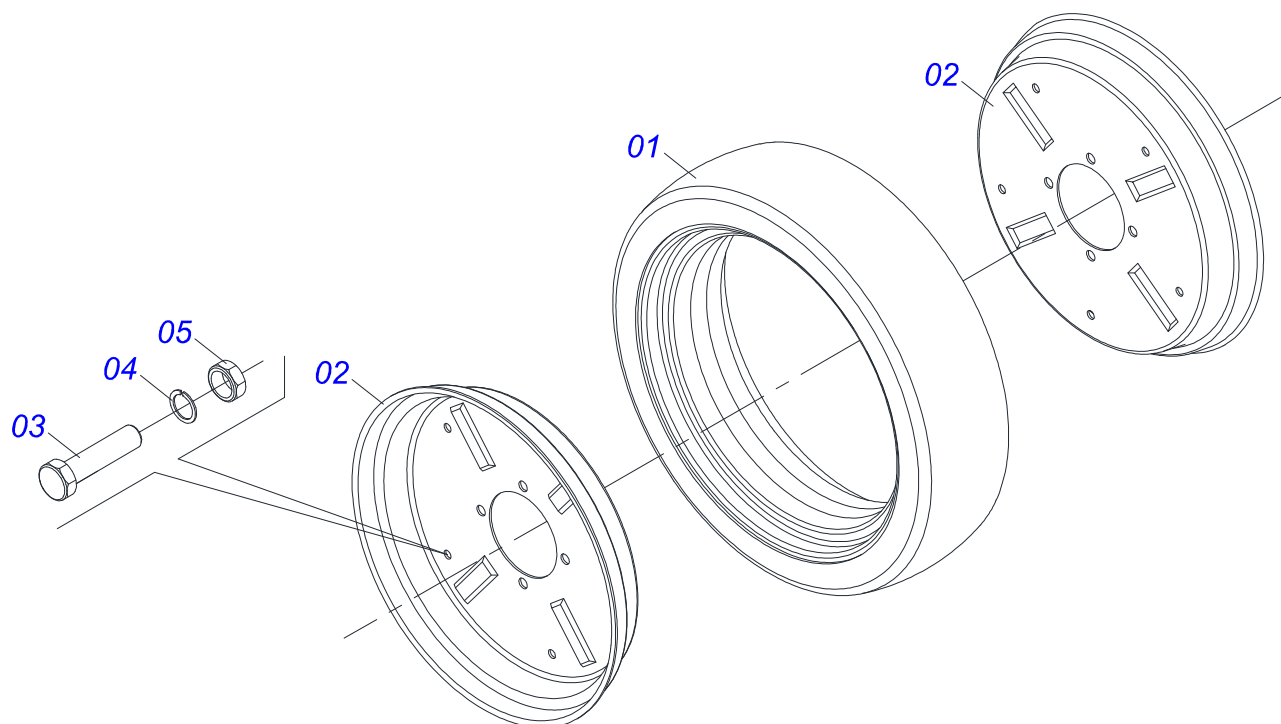


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

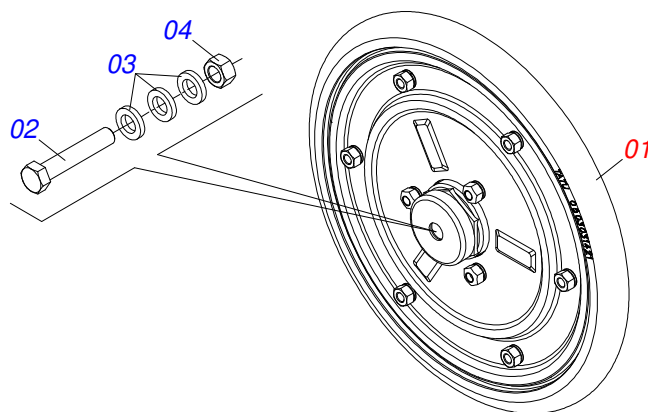


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	74	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

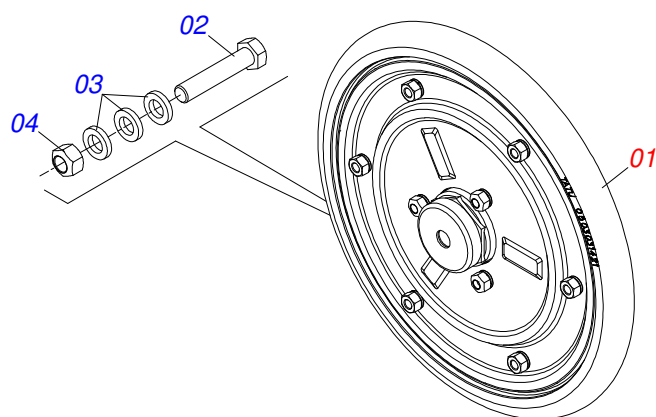


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	74	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

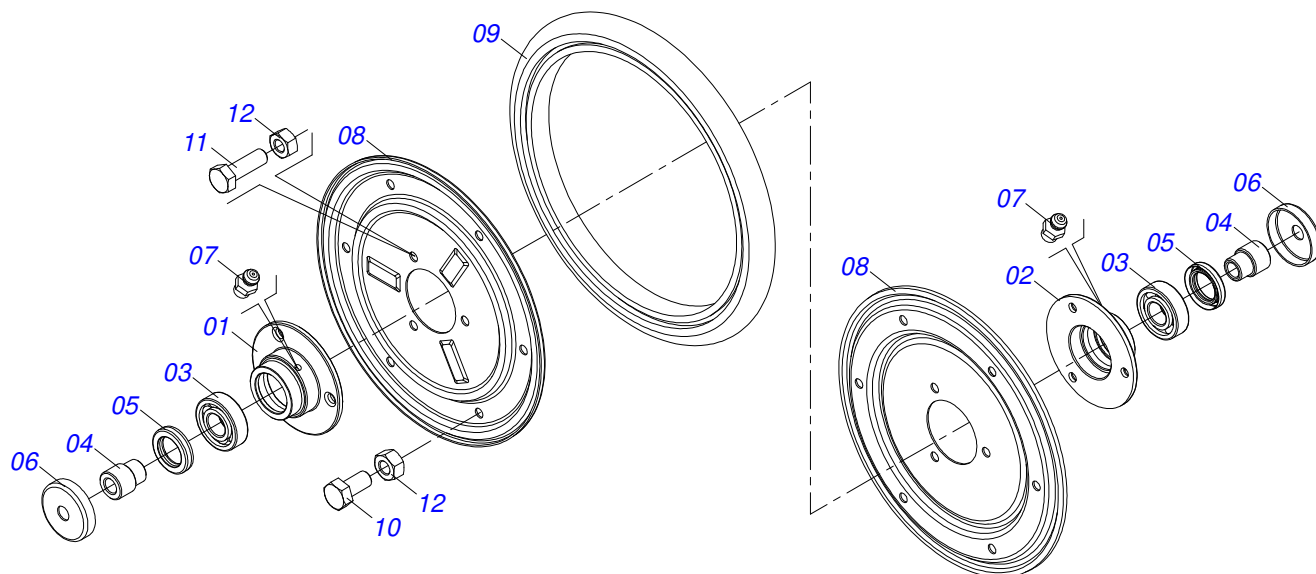

Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

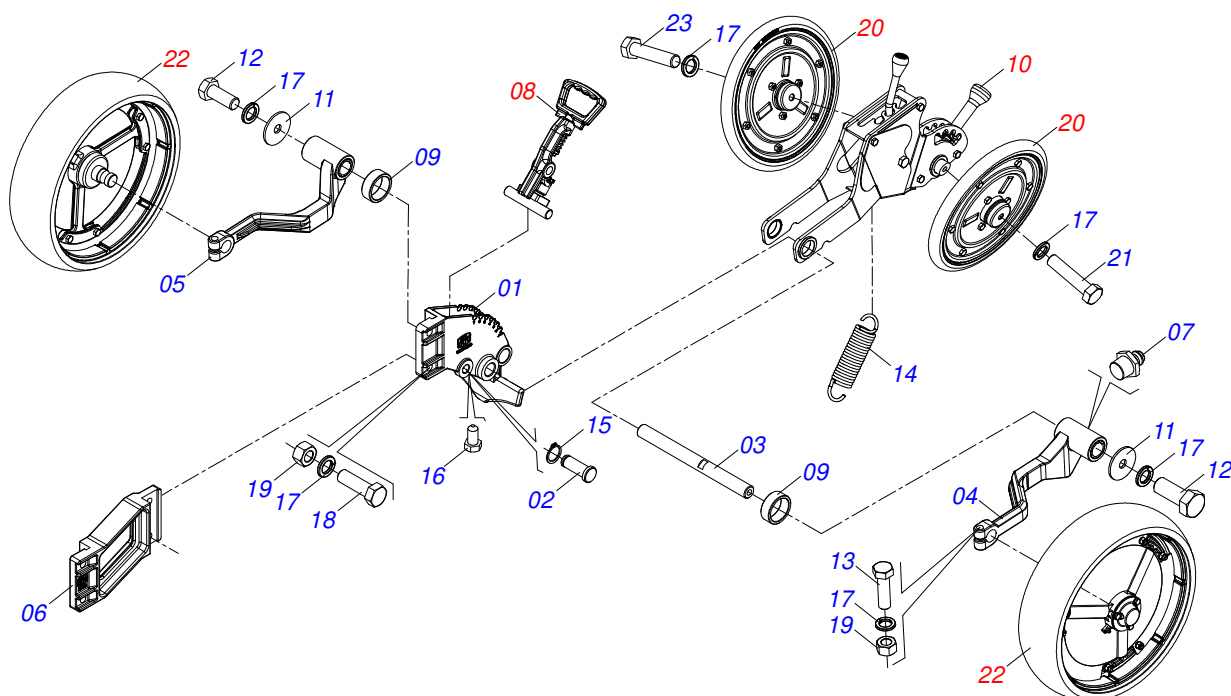


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0581014858	DEPTH WHEEL AXLE		01
04	0501110720	ARM LEFT		01
05	0501110719	DEPTH CONTROL RIGHT ARM		01
06	0502012663	EXTENSION		01
07	0503010002	1800 GREASE FITTING		02
08	0501056769	DEPTH WHEELS REGULATOR ASSY		01
09	0503034793	ARTICULATION SLEEVE		02
10	0521051423	COMPACTOR SUPPORT		01
11	0571017749	FLAT WASHER		02
12	0503010311	1/2" X 1-1/4" BOLT		02
13	0503016453	1/2" X 2.1/2 BOLT		02
14	0503034817	SPRING		01
15	0503010581	RING		01
16	0503034377	SCREWEW 3/8 UNC X 3/4		01
17	0503010019	1/2" SPRING WASHER		08
18	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
19	0503010060	1/2" NUT		04
20	0501052908	COMPACTOR WHEEL WITH BEARING	74	02
21	0503013739	1/2" X 1" BOLT		01
22	0511050077	WHEEL STRIPED		02
23	0503010752	1/2" X 3.1/2" BOLT		01

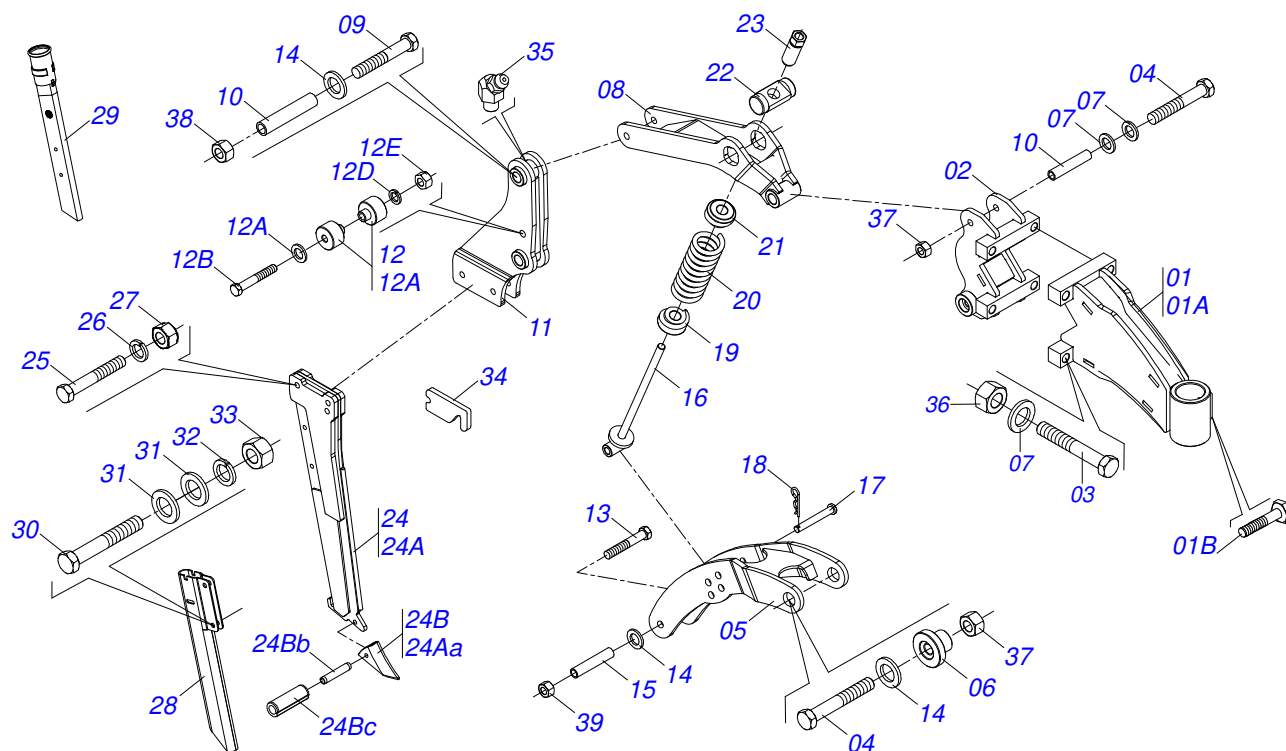

Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT		01
001A	0521061326	BLADE DISC AXLE SUPPORT		01
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
002	0521061407	ROW FERTILIZER SUPPORT		01
003	0503011084	3/4" X 5" BOLT		04
004	0501013233	5/8" X 2-3/4" BOLT		02
005	0521063504	FERTILIZER ROW LOWER SUPPORT		01
006	0531019990	BLADE D ARM ARTIC SLEEVE		02
007	0511015098	FLAT WASHER		06
008	0511063862	FERTILIZER ROW UPPER SUPPORT		01
009	0501010163	5/8" X 4-1/2" BOLT		01
010	0531016207	0.6" X 1" X 2.8" SLEEVE		01
011	0511065837	FERTILIZER ROW REAR SUPPORT		01
012	0501059640	BEATER LINE SET FERTILIZER		01
012A	0561015611	BEATER SLEEVE		02
012B	0503011123	BOLT		01
012C	0501010984	FLAT WASHER		02
012D	0503010025	3/8" SPRING WASHER		01
012E	0503010026	3/8" NUT		01
013	0501010452	5/8" X 5" BOLT		02
014	0531016031	1/2" SPRING WASHER		04
015	0531016207	0.6" X 1" X 2.8" SLEEVE		02
016	0521063505	GUIDE SPRING LINE FERTILIZER		01
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
018	0503030168	HAIR PIN		01
019	1902020393	SPRING UPPER SUPPORT		01
020	0503031450	2.7" X 9.2" X 0.03" SPRING		01
021	1902020393	SPRING UPPER SUPPORT		01
022	0521011158	SPRING LOCKNUT		01
023	0571012375	VARON REGULATOR SPINDLE		01
024	0501110640	SCARIFIER SPINDLE		01

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2" NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	FLAT WASHER		04
032	0503010025	3/8" SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8 UNC SELF LOCKING NUT		02

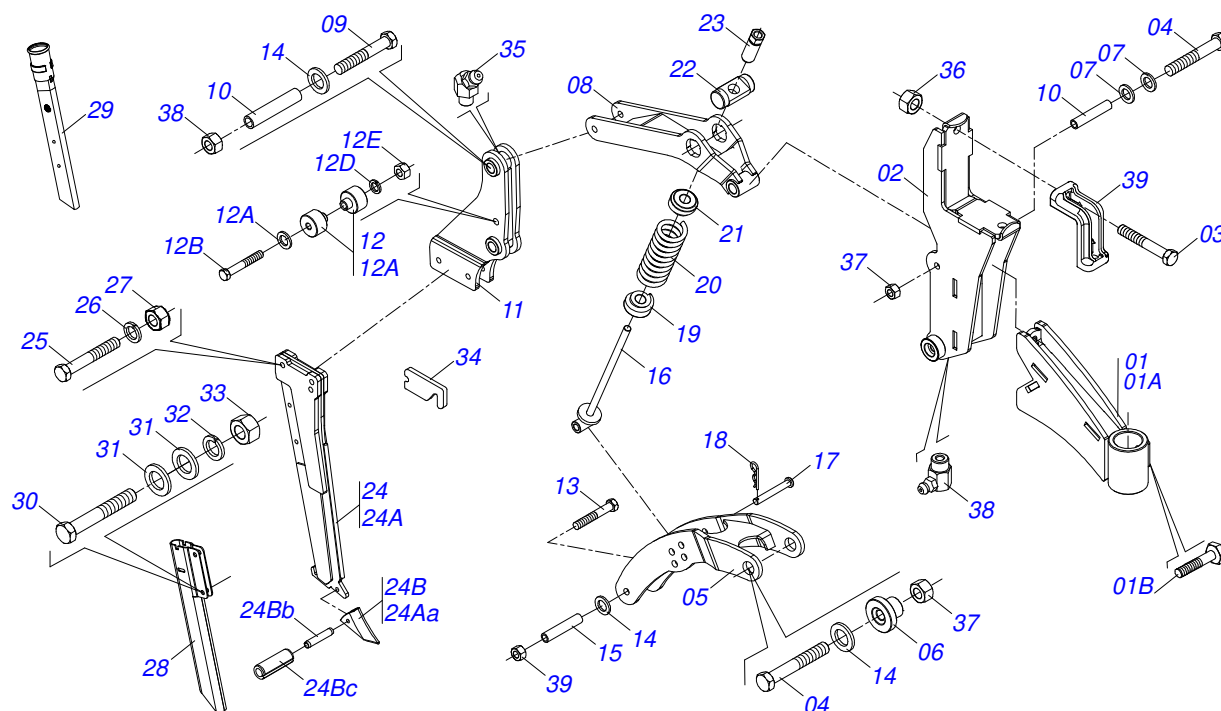


Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT		01
001A	0521061326	BLADE DISC AXLE SUPPORT		01
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
002	0521063521	ROW FERTILIZER SUPPORT		01
003	0501010125	3/4" X 2-1/2" BOLT		02
004	0501013233	5/8" X 2-3/4" BOLT		02
005	0521063504	FERTILIZER ROW LOWER SUPPORT		01
006	0531019990	BLADE D ARM ARTIC SLEEVE		02
007	0511015098	FLAT WASHER		06
008	0511063862	FERTILIZER ROW UPPER SUPPORT		01
009	0501010163	5/8" X 4-1/2" BOLT		01
010	0531016207	0.6" X 1" X 2.8" SLEEVE		01
011	0511065837	FERTILIZER ROW REAR SUPPORT		01
012	0501059640	BEATER LINE SET FERTILIZER		01
012A	0561015611	BEATER SLEEVE		02
012B	0503011123	BOLT		01
012C	0501010984	FLAT WASHER		02
012D	0503010025	3/8" SPRING WASHER		01
012E	0503010026	3/8" NUT		01
013	0501010452	5/8" X 5" BOLT		02
014	0531016031	1/2" SPRING WASHER		04
015	0531016207	0.6" X 1" X 2.8" SLEEVE		02
016	0521063505	GUIDE SPRING LINE FERTILIZER		01
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
018	0503030168	HAIR PIN		01
019	1902020393	SPRING UPPER SUPPORT		01
020	0503031450	2.7" X 9.2" X 0.03" SPRING		01
021	1902020393	SPRING UPPER SUPPORT		01
022	0521011158	SPRING LOCKNUT		01
023	0571012375	VARON REGULATOR SPINDLE		01
024	0501110640	SCARIFIER SPINDLE		01

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2" NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	FLAT WASHER		04
032	0503010025	3/8" SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8 UNC SELF LOCKING NUT		02
038	0503010004	1890 GREASE FITTING		01
039	0502012400	ROW FERTILIZER FIXER		01

24" BLADE DISC ASSY


0511048339

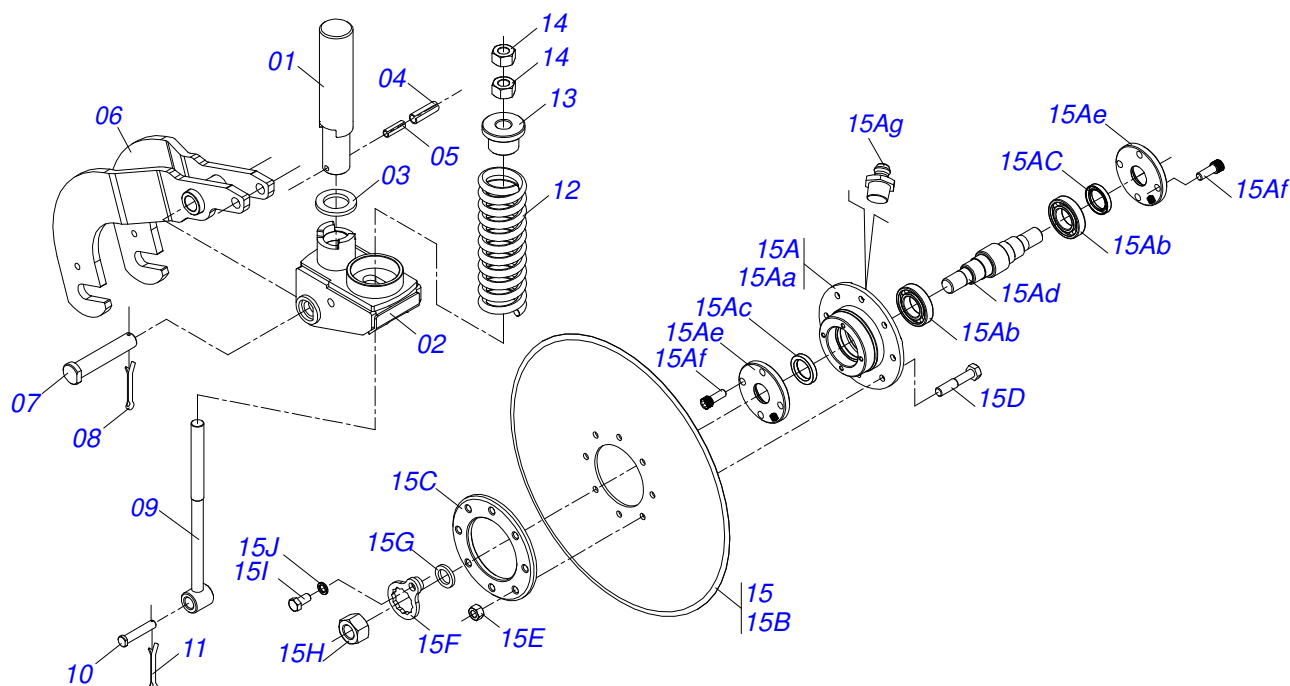


Item	Code	Description	See page	QT
01	0561015334	BLADE DISC AXLE ASSY	01	
02	0521061328	SWIVEL BASE	01	
03	0561015610	FLAT WASHER	01	
04	0503010361	SPRING PIN	01	
05	0503010756	0.2" X 2.4" SPRING PIN	01	
06	0521062418	BLADE DISC FORK	01	
07	0561015339	BLADE DISC AXLE ASSY	01	
08	0503010010	1/4" X 2.1/2" COTTERPIN	01	
09	0501069390	SPRING ROD	01	
10	0561019515	COUPLING SHAFT	01	
11	0503010571	1/4" X 1.1/2 COTTERPIN	01	
12	0503031346	COMPRESSION SPRING	01	
13	0561015400	BLADE DISC SPRING GUIDE	01	
14	0503014018	1" NUT	01	
15	0511050746	24" BLADE DISC ASSY	01	
15A	0501057526	DISC HUB	01	
15Aa	0502011478	DISC HUB	01	
15Ab	0503011291	6209 BALL BEARING	02	
15Ac	0503012106	00521-BR SEAL	02	
15Ad	0521012661	BLADE DISC AXLE HUB	01	
15Ae	0502011477	BLADE DISC HOUSIG CP	02	
15Af	0503010134	3/8" X 1" BOLT	08	
15Ag	0503010002	1800 GREASE FITTING	01	
15B	0603030044	24" X 0.2" FLAT PLAIN DISC	01	
15C	0521011824	BLADE DISC FLANGE OUTER	01	
15D	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	08	
15E	0503010060	1/2" NUT	16	
15F	0501069637	AXLE NUT LOCK	02	
15G	0521012664	FLAT WASHER	02	
15H	0501010087	1.1/4" NUT	02	
15I	0503010962	5/8" X 1-1/4" BOLT	02	




Item	Code	Description	See page	QT
15J	0503010027	5/8" SPRING WASHER		02

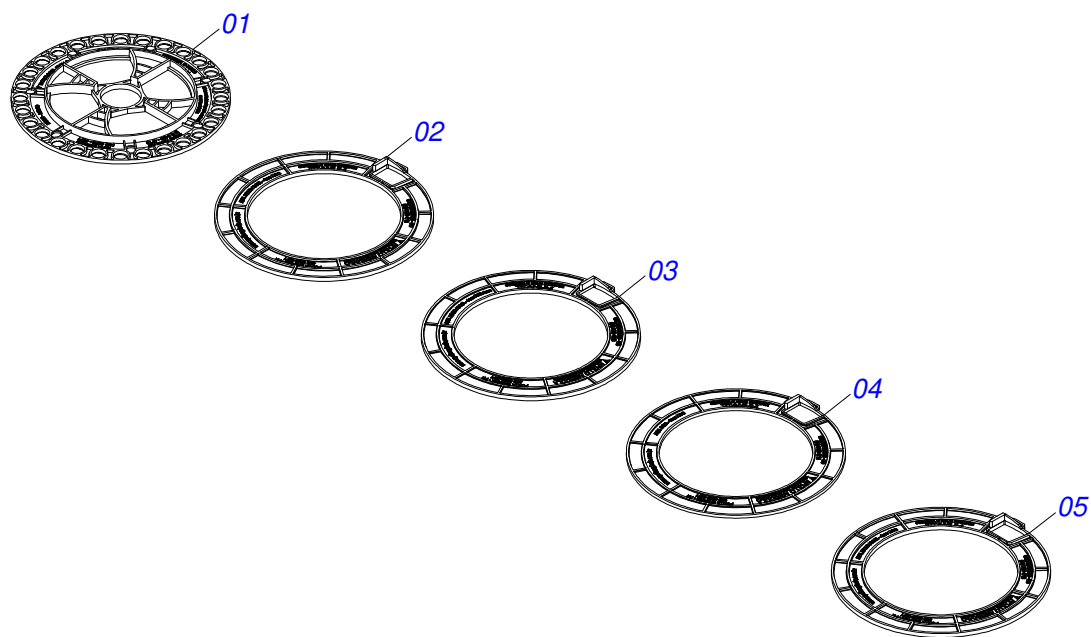


Item	Code	Description	See page	QT
01	0503016204	CORN DISK 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

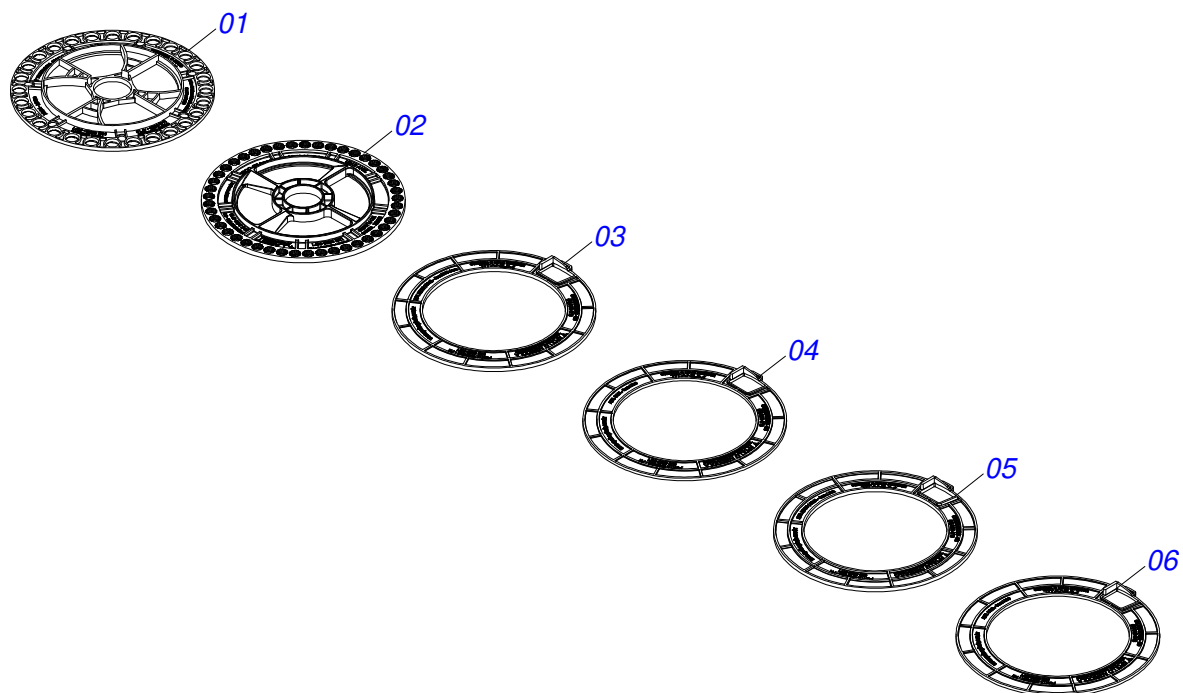


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

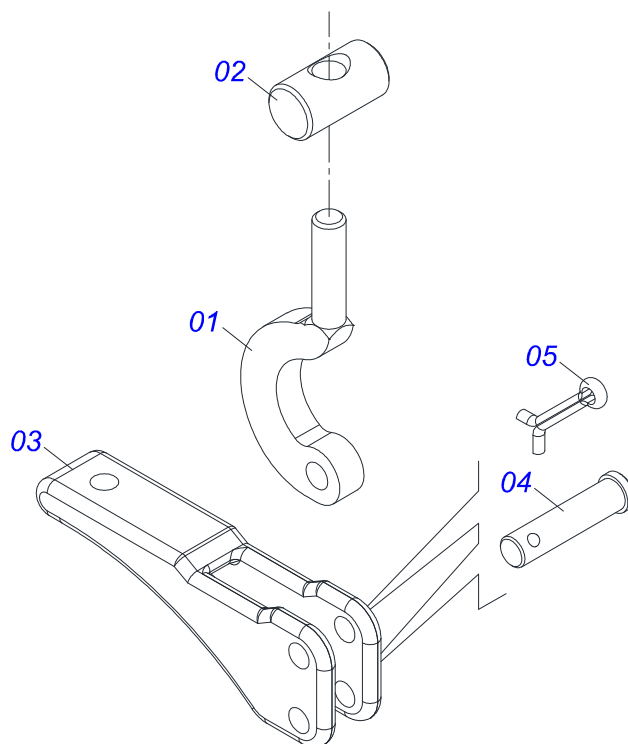


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

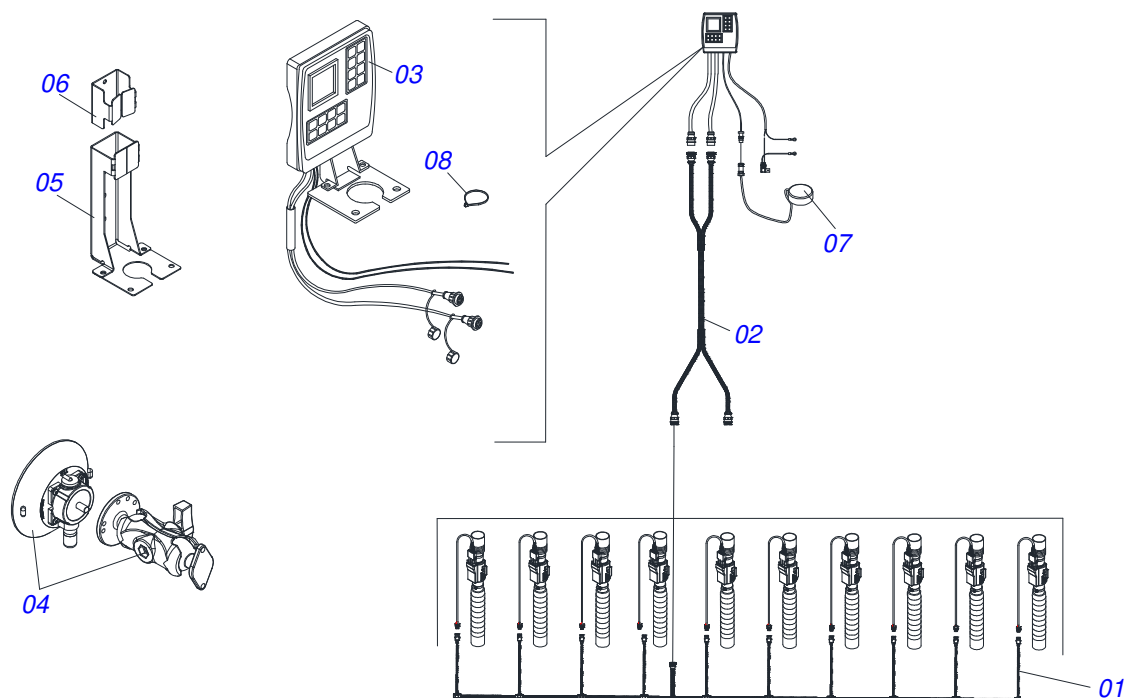


Item	Code	Description	See page	10 L
01	0503016556	10 ROW SIMPLE MONITOR CABLE	01	
02	0503017577	CAB UNIC PM400	01	
03	0503017602	MONITOR PLANT PM400	01	
04	0503016234	TRIMBLE FIXING WINDOW	01	
05	0503016452	FIXING SUPPORT AG500 TRIMBLE	01	
06	0571012196	MOUNTING BRACKET PM 400	01	
07	0503017443	ANTENNA GPS PM 400	01	
08	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP	150	

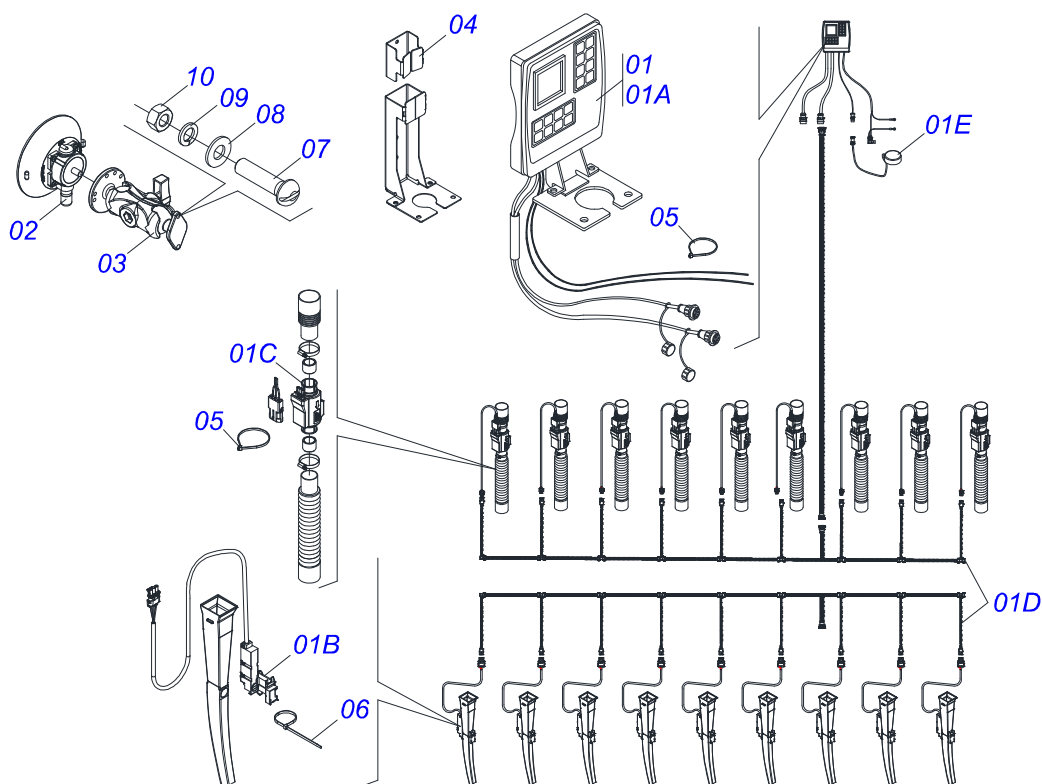


Item	Code	Description	See page	QT
01	0503062821			01
01A	0503017602	MONITOR PLANT PM400		01
01B	0503019100	SENSOR		09
01C	0503018932	FLOW FERTILIZER SENSOR		09
01D	0503016568	DOUBLE CABLE MONITORING 9 ROW		01
01E	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		45
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		**
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02

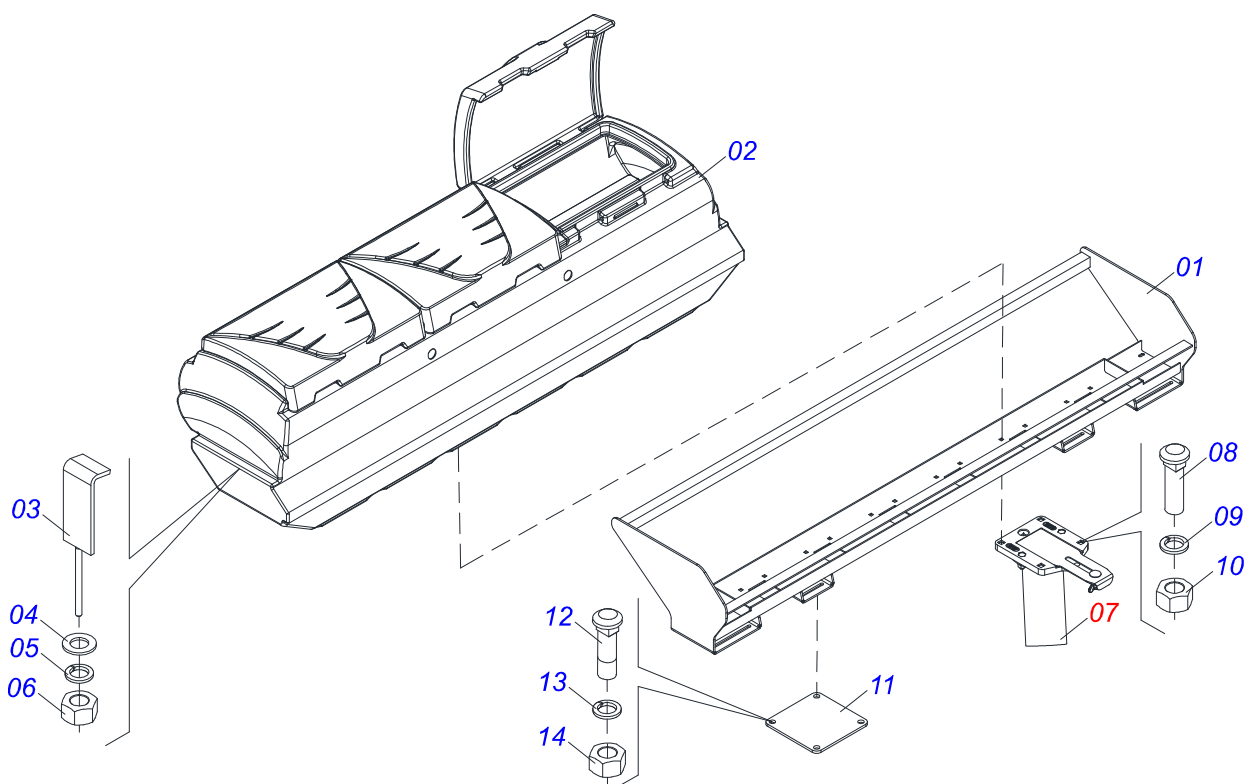


Item	Code	Description	See page	QT
01	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS	02	
02	0503061899	REAR BEAN FERTILIZER ASSY	02	
03	0521063401	SEED BOX ONLY FIXING LOCK	04	
04	0501010984	FLAT WASHER	04	
05	0503010025	3/8" SPRING WASHER	04	
06	0503010026	3/8" NUT	04	
07	0511057690	SEED CONDUCTOR 3 ARTICULATED ASSY CSU	09	
08	0501010942	3/8" X 1-1/4" BOLT	36	
09	0503010025	3/8" SPRING WASHER	36	
10	0503010026	3/8" NUT	36	
11	0571015773	SUPPORT SEED CSU	03	
12	0501011643	3/8 X 1"BOLT	12	
13	0503010025	3/8" SPRING WASHER	12	
14	0503010026	3/8" NUT	12	

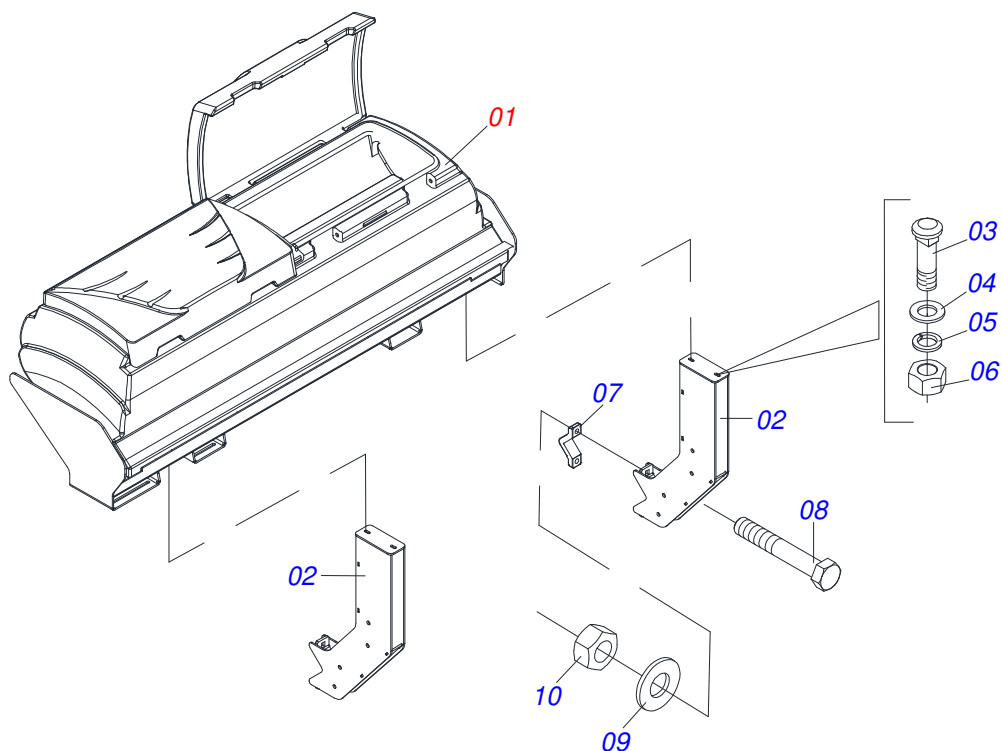

Item	Code	Description	See page	QT
001	0511058100	ENSEMBLE BOX UNIQUE SEED C3	84	01
002	0521066208	SUPPORT TOWER SILO		04
003	0501010942	3/8" X 1-1/4" BOLT		08
004	0501010984	FLAT WASHER		08
005	0503010025	3/8" SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0502010175	HITCH CLAMP		04
008	0501011543	5/8" X 4" BOLT		08
009	0501012140	FLAT WASHER		08
010	0503012412	5/8 UNC SELF LOCKING NUT		08

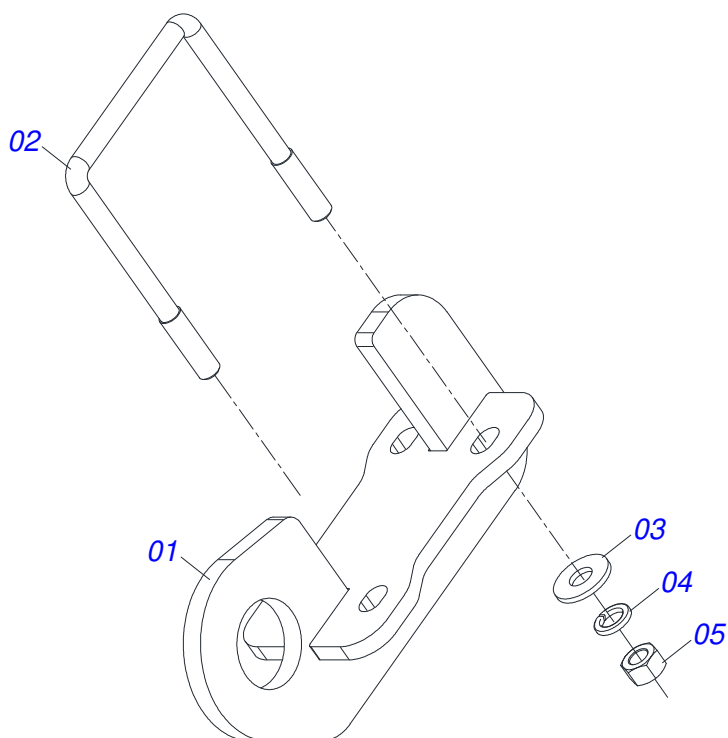

Item	Code	Description	See page	QT
001	0521066608	LIFTING HOOK		01
002	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
003	0511017302	FLAT WASHER		04
004	0503010019	1/2" SPRING WASHER		04
005	0503010060	1/2" NUT		04

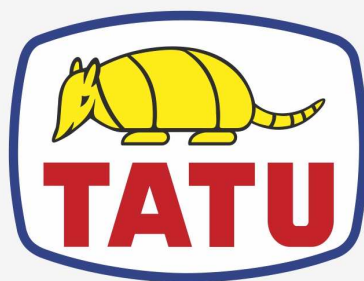

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

