

ROW CROP PLANTERS

COP CA - TITANIUM - 07 LINES - CSU/APT

Code: 0501092796
Series: S-0913
Revision: 00
Date Revision: AGOSTO/2020

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111300024	COP CA 7/7E450 MH CSU TIT C/RAD APT-ISO S-0913

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX

0909099182	FRAME ASSY	1
0511053887	WHEEL FIXING ASSY	2
0501059662	CONJUNTO RODADO DIREITO SEMI MONTADO	3
0501059663	SET WHEELED LEFT SEMI MOUNTED	4
0501059655	HUB CARRYING-WHEELS	5
0521050989	ASSEMBLY TRANSMISSION	6
0521050987	TRANSMISSION ASSY	7
0511053915	HEXAGONAL SHAFT ASSEMBLY	8
0521050988	TRANSMISSION ASSY	9
0511048348	RIGHT GEAR BOX ASSY	10
0511048349	RIGHT GEAR BOX ASSY	11
0501054655	CHAIN TENSIONER ASSY	12
0501054686	GEAR BOX CHAIN TENSIONER	13
0501052788	CHAIN TENSIONER ASSY	14
0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	15
0501053846	MIDDLE BEARING OF THE TRANSMISSION	16
0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	17
0511040424	RH TRANSMISSION DRIVING ASSY	18
0501049265	LH TRANSMISSION DRIVING ASSY	19
0511053918	FERTILIZER BOX ASSEMBLY	20
0511051077	SUPPORT RIGHT BOX FERTILIZER WITH DISTRIBUTOR	21
0511051078	SUPPORT LEFT BOX FERTILIZER WITH DISTRIBUTOR	22
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	23
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	24
0511053919	HYDRAULIC ASSEMBLY	25
0511053894	HYDRAULIC CYLINDER ASSEMBLY	26
0511058411	HYDRAULIC CYLINDER	27
0511053920	OIL PIPE ASSEMBLY	28
0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	29
0511052909	HYDRAULIC MARKER	30
0511058449	HYDRAULIC CYLINDER	31
0511052197	WHEELS HOSE ASSEMBLY	32
0501053834	MALE QUICK COUPLER	33
0501050633	ROW MARKER DISK ASSEMBLY	34
0511053904	ROW MARKER DISC	35
0511053917	PLATFORM ASSEMBLY	36
0511053916	HANDRAIL ASSEMBLE	37
0511053890	HANDRAIL ASSEMBLE	38
0511053085	ASSY FIXER HEADER	39
0511043100	DRAWBAR ASSY	40
0511058191	REST ASSY	41
0909099175	SEED/FERTILIZER ROW ASSEMBLE	42
0501059362	LONG SEED ROW FRONT	43
0511054884	TRANSMISSION BOX	44
0501059350	LONG FRONT SEED ROW	45
0501059349	SHORT SEED ROW FRONT	46
0501059361	SHORT SEED ROW FRONT	47
0511052319	RIGHT REAR SEED ROW	48
0501059631	DDD SEED 15 X 15 RIGHT	49
0501054168	15" LEFT OPENING DISC HUB	50
0501054167	15" RIGHT OPENING DISC HUB	51
0511051783	RIGHT REAR SEED ROW TITANIUM	52
0511052320	REAR LEFT ROW SEED TITANIUM	53
0501059632	DDD SEED 15X15 LEFT	54
0511051782	LEFT REAR SEED ROW	55




MARCHESAN

INDEX

0521050096	SEED HOPPER SYSTEM (CSU)	56
0511052058	SEED SYSTEM TITANIUM	57
0521045198	PRESS WHEELS	58
0501052297	DEPTH WHEELS REGULATOR ASSY	59
0511054333	COMPACT WHEEL RIGHT WITH BEARING	60
0511054334	COMPACT WHEEL LEFT WITH BEARING	61
0501052908	COMPACTOR WHEEL WITH BEARING	62
0501052538	DEPTH BAND WITH ARMS	63
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	64
0511058650	SEMI-MOUNTED DEPTH CONTROL	65
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	66
0501052627	ASSY DEPTH WHEEL HUB	67
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	68
0511053825	SEMI-ASSEMBLED SHORT FERTILIZER LINE	69
0511053826	SEMI-ASSEMBLED LONG FERTILIZER LINE	70
0511048339	24" BLADE DISC ASSY	71
0521050525	FIXER FERTILIZER CONDUCTOR	72
0503062066	DISC SET WITH CORN RING	73
0503062067	DISC SET / RING SOY 90F TITANIUM	74
0511052024	FAST CLOSING SET	75
0501055579	DRAWBAR ESTABILIZER	76
0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER	77
0511055158	ISOBUS USAP SET	78
0521050324	SET MOUNT BOX	79
0511059969	CHAIN TENSIONER	80
0521050273	MOTOR SUPPORT SEED	81
0501053788	3/4 SQUARE AXLE FASTENER	82
0511059348	APT ASSY MODULE BOX	83
0511055832	HYDRAULIC CIRCUIT	84
0521050323	DUTY ASSEMBLY	85
0511056294	CAIXA MODULO	86
0501058957	ISOBUS SET	87
0511055638	BLOCK FLOW LIMITER	88
0511056973	PARKER OMP 80 HYDRAULIC MOTOR WITH VALVE	89
0511056974	MOTOR	90
0511056972	FILTER HYDAC	91
0511059709	SUPPOT BASE	92
0521050112	ASSEMBLY CSU	93
0521050110	ASSEMBLY CSU	94
0521050109	ASSEMBLY CSU	95
0521051927	TOWER SUPPORT HOPPER	96
0521050287	SET LABEL ADHESIVE	97
0511058368	EAR MOVABLE	98
0511059323	PLATFORM TRANSPORT SUPPORT	99
0511053179	TRACTOR COUPLING SHAFT	100

FRAME ASSY

0909099182

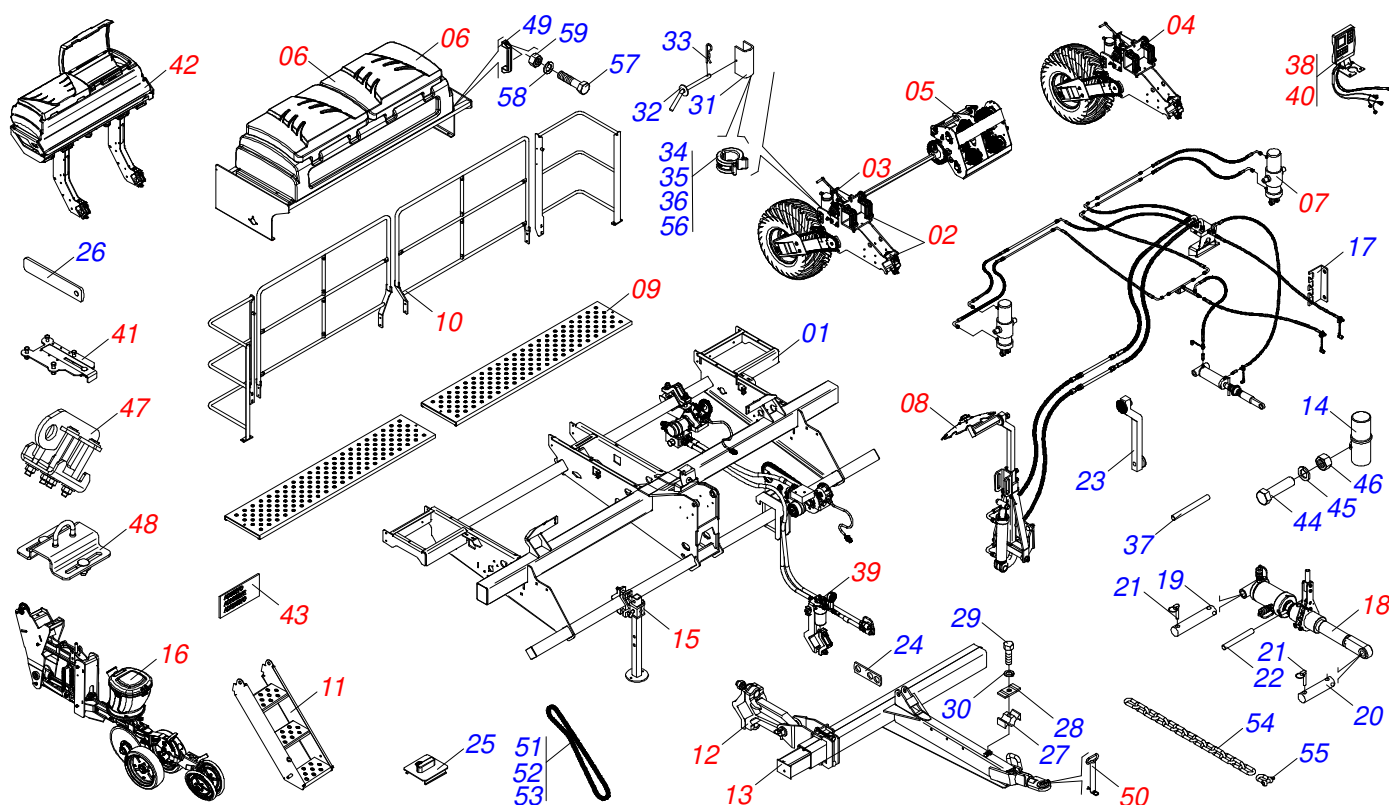


Item	Code	Description	See page	QT
01	0521062422	FRAME		01
02	0511053887	WHEEL FIXING ASSY	2	01
03	0501059662	CONJUNTO RODADO DIREITO SEMI MONTADO	3	01
04	0501059663	SET WHEELED LEFT SEMI MOUNTED	4	01
05	0521050989	ASSEMBLY TRANSMISSION	6	01
06	0511053918	FERTILIZER BOX ASSEMBLY	20	01
07	0511053919	HYDRAULIC ASSEMBLY	25	01
08	0501050633	ROW MARKER DISK ASSEMBLY	34	01
09	0511053917	PLATFORM ASSEMBLY	36	01
10	0511053916	HANDRAIL ASSEMBLE	37	01
11	0511053890	HANDRAIL ASSEMBLE	38	01
12	0511053085	ASSY FIXER HEADER	39	01
13	0511043100	DRAWBAR ASSY	40	01
14	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
15	0511058191	REST ASSY	41	02
16	0909099175	SEED/FERTILIZER ROW ASSEMBLE	42	07
17	0541014576	HOSE FIXER ASSY		01
18	0501055579	DRAWBAR ESTABILIZER	76	01
19	0521018532	1.4" X 12" COUPLING SHAFT		01
20	0521018531	1.4" X 4.5" COUPLING SHAFT		01
21	0503030085	LOCK PIN		02
22	0521018501	TURNBUCKLE LEVER		01
23	0511066652	400 TURNBUCKLE		02
24	0561019087	DRAWBAR TRANSPORT LOCK		01
25	0503032624	FERTILIZER HOPPER GUTTER		06
26	0511015627	SEED DISC LEVER		01
27	0502012702	BODY SUPPORT CLAMP		03
28	0531011180	UPPER BODY CLIP		01
29	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
30	0503010180	7/16" SPRING WASHER		04
31	0521013022	TRANSPORT LOCK		02


FRAME ASSY

0909099182

Item	Code	Description	See page	QT
32	0501068994	8,30 X 78 LOCK PIN		02
33	0503030168	HITCH PIN CLIP		02
34	0501047885	ROD STOP		03
35	0501047886	ROD STOP		03
36	0501047887	ROD STOP		03
37	0531013600	PRESS ADJUSTMENT LEVER		01
38	0511055158	ISOBUS USAP SET	78	01
39	0521050324	SET MOUNT BOX	79	01
40	0501058957	ISOBUS SET	87	01
41	0511059709	SUPPOT BASE	92	06
42	0521050112	ASSEMBLY CSU	93	01
43	0521050287	SET LABEL ADHESIVE	97	01
44	0503010358	5/16" X 5/8" BOLT		01
45	0503010179	LOCK WASHER		01
46	0503010337	5/16" NUT		01
47	0511058368	EAR MOVABLE	98	02
48	0511059323	PLATFORM TRANSPORT SUPPORT	99	04
49	0503011957	NYLON LUG		02
50	0511053179	TRACTOR COUPLING SHAFT	100	01
51	0503016852	50-1 X 85 CHAIN LINK + MENDING		02
52	0503015364	40-1 X 51 CHAIN LINK + MENDING		02
53	0503010578	2050 CHAIN X 39 LINK + MENDING		02
54	0503014120	CHAIN		01
55	0503014321	CABLE STEEL SHACKLE		02
56	0501047895	ROD STOP		03
57	0503010371	5/16" X 1" BOLT		04
58	0503010179	LOCK WASHER		04
59	0503010337	5/16" NUT		04

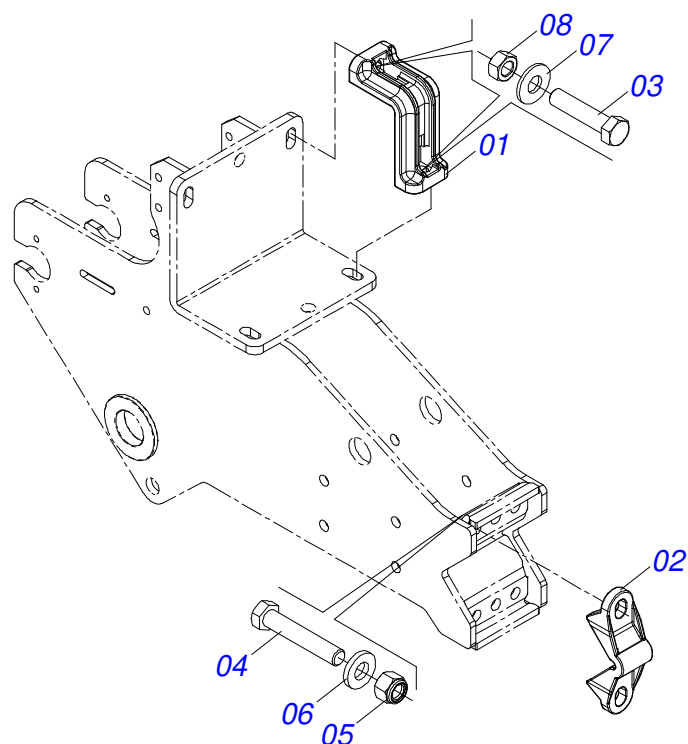


Item	Code	Description	See page	QT
01	0502012400	ROW FERTILIZER FIXER		04
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		04
03	0503010797	3/4" X 4" BOLT		08
04	0503016485	BOLT 3/4		08
05	0503010152	3/4" SELF LOCKING NUT		08
06	0541010763	FLAT WASHER		08
07	0501010322	FLAT WASHER		08
08	0503011255	3/4" LOCK NUT		08

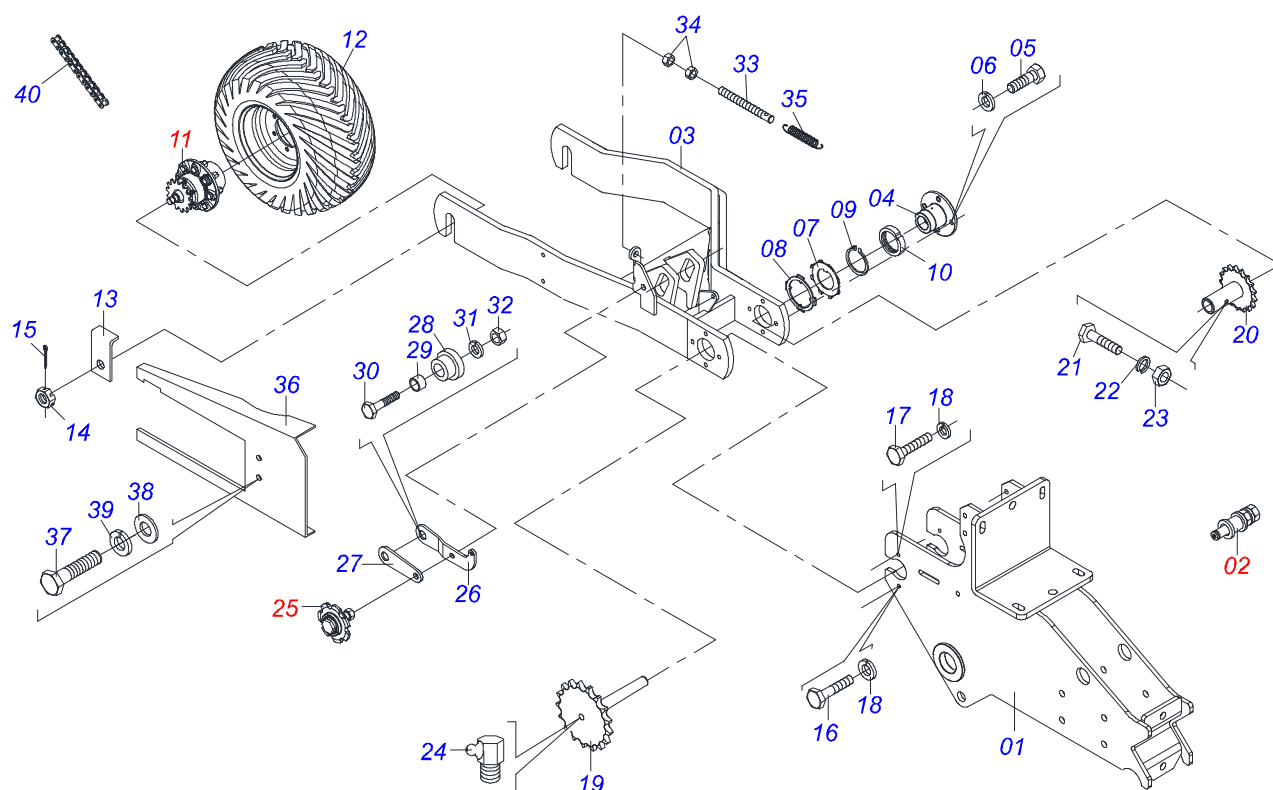

Item	Code	Description	See page	QT
01	0511065423	WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY		01
03	0521061337	RIGHT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0501059655	HUB CARRYING-WHEELS	5	01
12	0503060602	400/60 X 15,5-14L RODA		01
13	0531015109	WHEEL AXLE LOCK		02
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010523	1/4" X 2" COTTERPIN		02
16	0503010834	1/2 X 1 BOLT		03
17	0503010395	1/2" X 1-1/4" BOLT		01
18	0503010019	1/2" SPRING WASHER		04
19	0511064769	15Z GEAR WITH AXLE		01
20	0511061809	15Z GEAR WITH COUPLING		01
21	0503011103	7/16" X 2-1/2" BOLT		01
22	0503010180	7/16" SPRING WASHER		01
23	0503010244	7/16" NUT		01
24	0503010004	1890 GREASE FITTING		02
25	0501053522	WHEEL CHAIN TENSIONER		01
26	0531018654	CHAIN TIGHTENER SUPPORT		01
27	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
28	0531016916	SLEEVE BEARING SUPPORT		02
29	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE		01
30	0503010899	5/8" X 2-1/4" BOLT		01
31	0503010027	5/8" SPRING WASHER		01

Item	Code	Description	See page	QT
32	0503010013	5/8" NUT		01
33	0501013491	5/8" TENSIONER SPRING		01
34	0503010013	5/8" NUT		02
35	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
36	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
37	0501018535	1/2 X 1 BOLT		02
38	0511017302	FLAT WASHER		02
39	0503010019	1/2" SPRING WASHER		02
40	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01

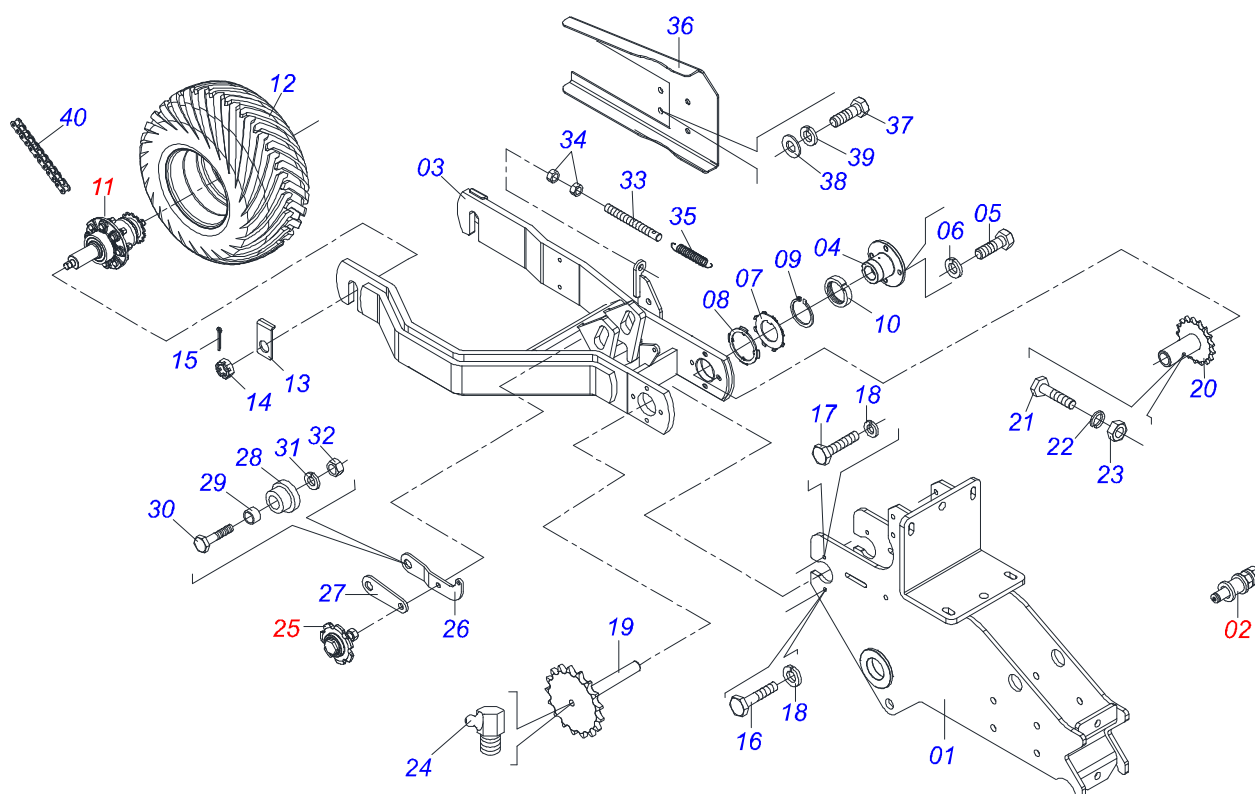


Item	Code	Description	See page	QT
01	0511065423	WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY		01
03	0521061338	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0501059655	HUB CARRYING-WHEELS	5	01
12	0503060602	400/60 X 15,5-14L RODA		01
13	0531015109	WHEEL AXLE LOCK		02
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010523	1/4" X 2" COTTERPIN		02
16	0503010834	1/2 X 1 BOLT		03
17	0503010395	1/2" X 1-1/4" BOLT		01
18	0503010019	1/2" SPRING WASHER		04
19	0511064769	15Z GEAR WITH AXLE		01
20	0511061809	15Z GEAR WITH COUPLING		01
21	0503011103	7/16" X 2-1/2" BOLT		01
22	0503010180	7/16" SPRING WASHER		01
23	0503010244	7/16" NUT		01
24	0503010004	1890 GREASE FITTING		02
25	0501053522	WHEEL CHAIN TENSIONER		01
26	0531018654	CHAIN TIGHTENER SUPPORT		01
27	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
28	0531016916	SLEEVE BEARING SUPPORT		02
29	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE		01
30	0503010899	5/8" X 2-1/4" BOLT		01
31	0503010027	5/8" SPRING WASHER		01




COP CA - TITANIUM - 07 LINES - CSU/APT
SET WHEELED LEFT SEMI MOUNTED

Page 4
0501059663


Item	Code	Description	See page	QT
32	0503010013	5/8" NUT		01
33	0501013491	5/8" TENSIONER SPRING		01
34	0503010013	5/8" NUT		02
35	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
36	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
37	0501018535	1/2 X 1 BOLT		02
38	0511017302	FLAT WASHER		02
39	0503010019	1/2" SPRING WASHER		02
40	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01

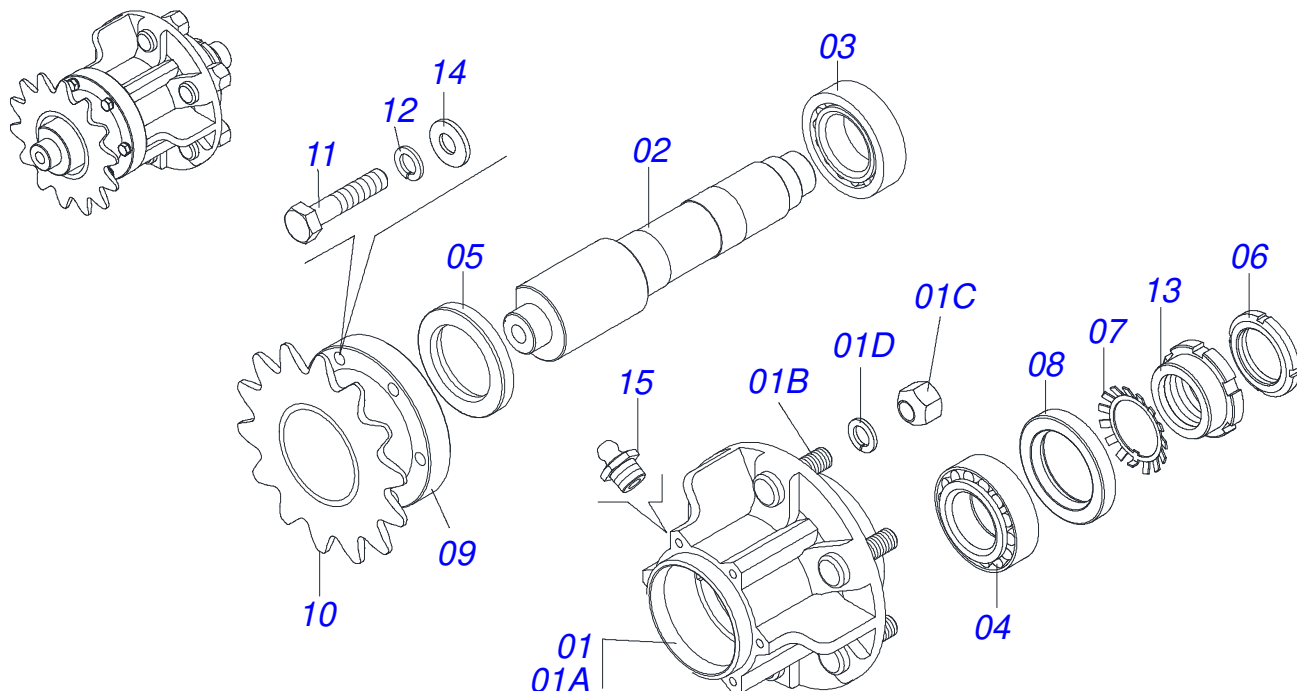


Item	Code	Description	See page	QT
01	0501110751	HUB AND SPINDLE WITH BOLT		01
01A	0502040522	HUB CARRYING-WHEELS		01
01B	0503011339	M22 X 1,5 X 72 BOLT		08
01C	0503011341	M22 X 0.6" NUT GR8		08
01D	0503011340	SPHERICAL SPRING WASHER		08
02	0561015609	WHEEL AXLE		01
03	0503010059	33287/33462 ROLLER BEARING		01
04	0503010007	3982/3920 ROLLER BEARING		01
05	0503010050	SEAL 00085-B		01
06	0503012702	KM-12 NUT		02
07	0503012703	LOCK WASHER		01
08	0503010528	SEAL # 00838-B		01
09	0551017794	PROTRACTOR GEAR		01
10	0502012177	14Z FLANG GEAR		01
11	0503010397	5/16" X 1-3/4" BOLT		06
12	0503011444	SPRING WASHER		06
13	0503011052	1.1/4" X 0.77" CASTLE NUT		02
14	0501010694	FLAT WASHER		06
15	0503010002	1800 GREASE FITTING		01

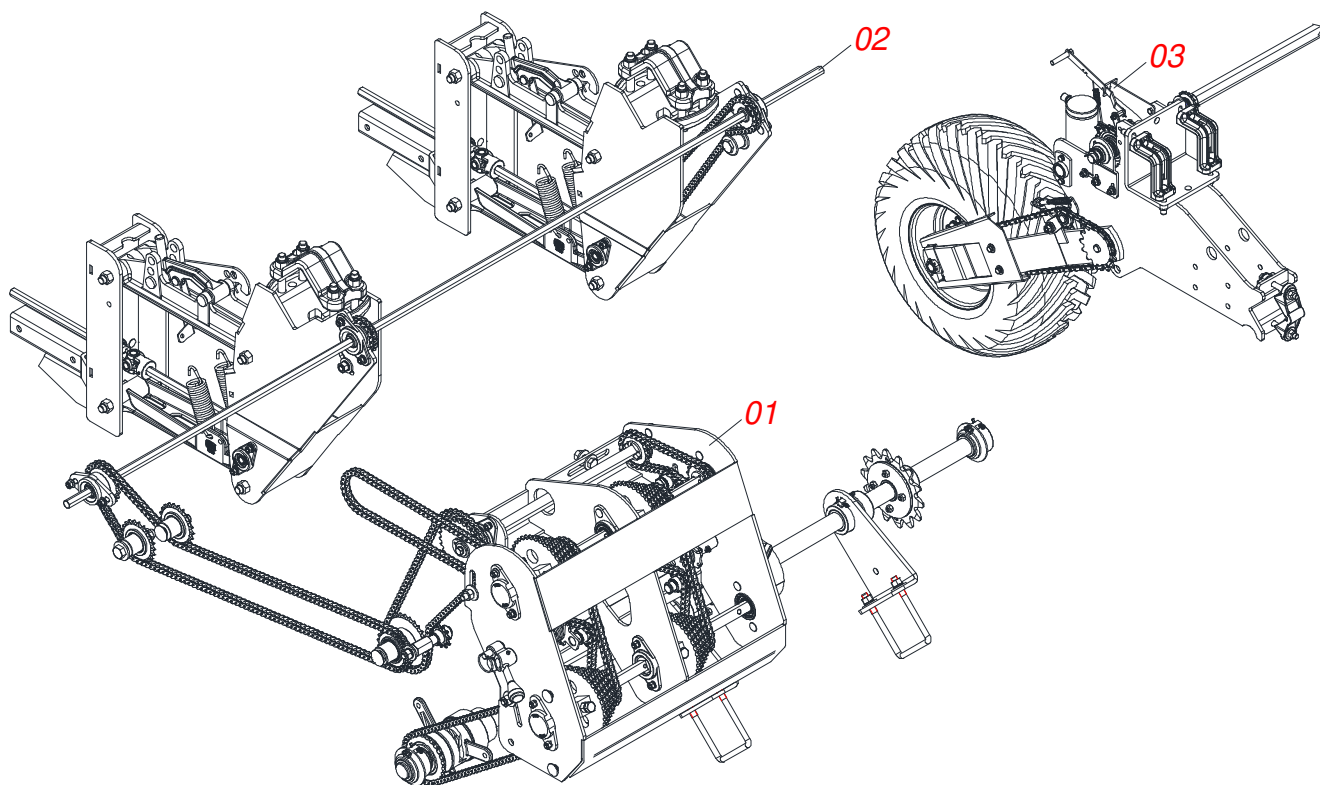


Item	Code	Description	See page	QT
001	0521050987	TRANSMISSION ASSY	7	01
002	0511053915	HEXAGONAL SHAFT ASSEMBLY	8	01
003	0521050988	TRANSMISSION ASSY	9	01

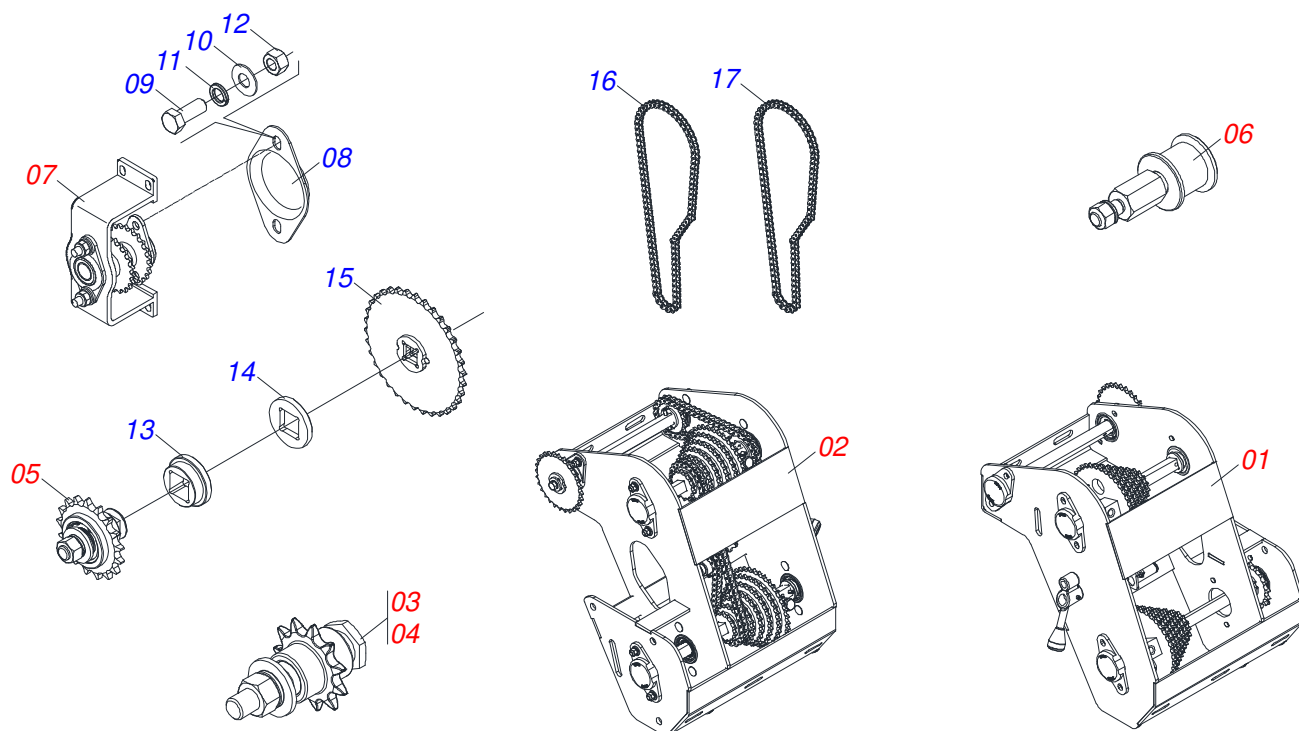

Item	Code	Description	See page	QT
001	0511048348	RIGHT GEAR BOX ASSY	10	01
002	0511048349	RIGHT GEAR BOX ASSY	11	01
003	0501054655	CHAIN TENSIONER ASSY	12	02
004	0501054686	GEAR BOX CHAIN TENSIONER	13	02
005	0501052788	CHAIN TENSIONER ASSY	14	02
006	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	15	02
007	0501053846	MIDDLE BEARING OF THE TRANSMISSION	16	02
008	0561014215	BEARING COVER LOWER ROW FRAME		02
009	0503010365	NUT		04
010	0501010694	FLAT WASHER		04
011	0503010179	LOCK WASHER		04
012	0503010337	5/16" NUT		04
013	0503030303	SUPPORT WASHER		04
014	0501010637	FLAT WASHER		04
015	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		02
016	0503012390	40-1 CHAIN X 93 LINK + MENDING		02
017	0503013214	40-1 CHAIN X 97 LINK + MENDING		02

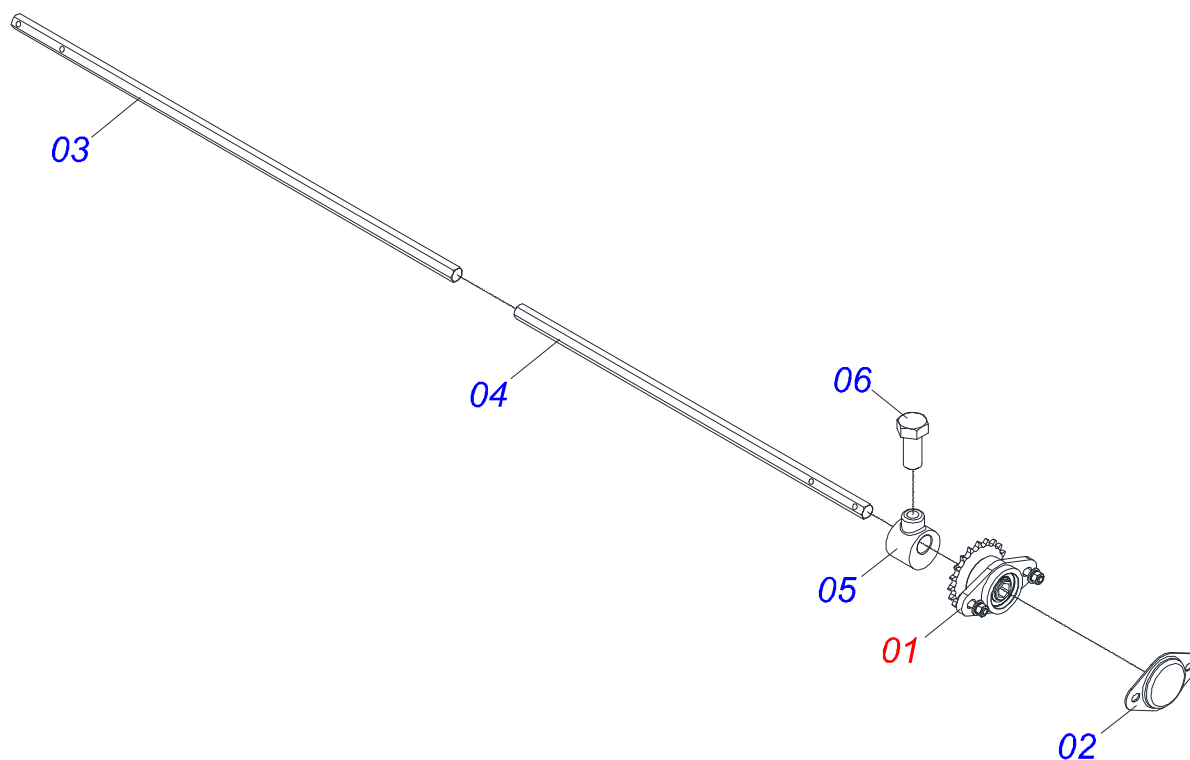

Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	17	02
02	0561014215	BEARING COVER LOWER ROW FRAME		02
03	0531016940	5/8 X 1650 RIGHT HEX AXLE		01
04	0531016941	LEFT 5/8" X 59" AXLE HEX		01
05	0502040534	SPRING GUIDE BUSHING LOCK		04
06	0501018535	1/2 X 1 BOLT		04

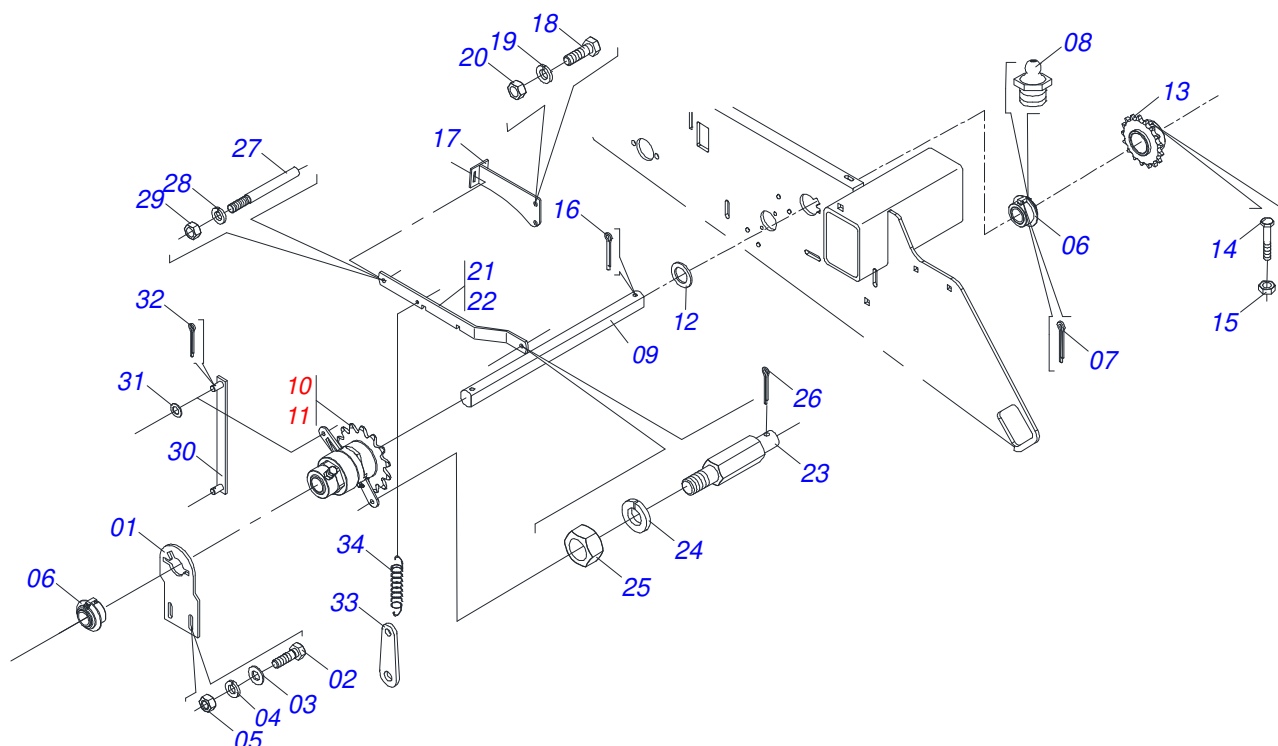


Item	Code	Description	See page	QT
001	0531019365	PLATE FIXER BEARING AXIS		02
002	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		04
003	0511017302	FLAT WASHER		04
004	0503010019	1/2" SPRING WASHER		04
005	0503010060	1/2" NUT		04
006	0501110639	BEARING		04
007	0503010257	1/8" X 1" COTTERPIN		04
008	0503010002	1800 GREASE FITTING		04
009	0561015384	518 MOTOR SHAFT		02
010	0511040424	RH TRANSMISSION DRIVING ASSY	18	01
011	0501049265	LH TRANSMISSION DRIVING ASSY	19	01
012	0501018466	FLAT WASHER		08
013	0511064105	17Z P 5/8" RH 1.4" GEAR		02
014	0503010937	5/16" X 3" BOLT		02
015	0503010337	5/16" NUT		04
016	0503010010	1/4" X 2.1/2" COTTERPIN		02
017	0511061896	RATCHET DISMANTLE SUPPORT		02
018	0503010395	1/2" X 1-1/4" BOLT		04
019	0503010019	1/2" SPRING WASHER		04
020	0503010060	1/2" NUT		04
021	0521018428	ASSEMBLE AND DISASSEMBLE ARM		01
022	0581012697	ROW MARKER ASSEMBLE DISASSEMBLE ARM		01
023	0521015800	REAR LEVER FASTENER		02
024	0503010025	3/8" SPRING WASHER		02
025	0503010026	3/8" NUT		02
026	0503010140	1/8" X 3/4" COTTERPIN		02
027	0521018560	HANDLE LEVER		02
028	0503010019	1/2" SPRING WASHER		02
029	0503010060	1/2" NUT		02
030	0511065949	ASSEMBLE AND DISASSEMBLE ARM		02
031	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04



COP CA - TITANIUM - 07 LINES - CSU/APT
TRANSMISSION ASSY

Page 9
0521050988


Item	Code	Description	See page	QT
032	0503010140	1/8" X 3/4" COTTERPIN		04
033	0541014046	SPRING HITCH		02
034	0503030242	0.8" X 4.7" X 0.08" TRACTION SPRING		02

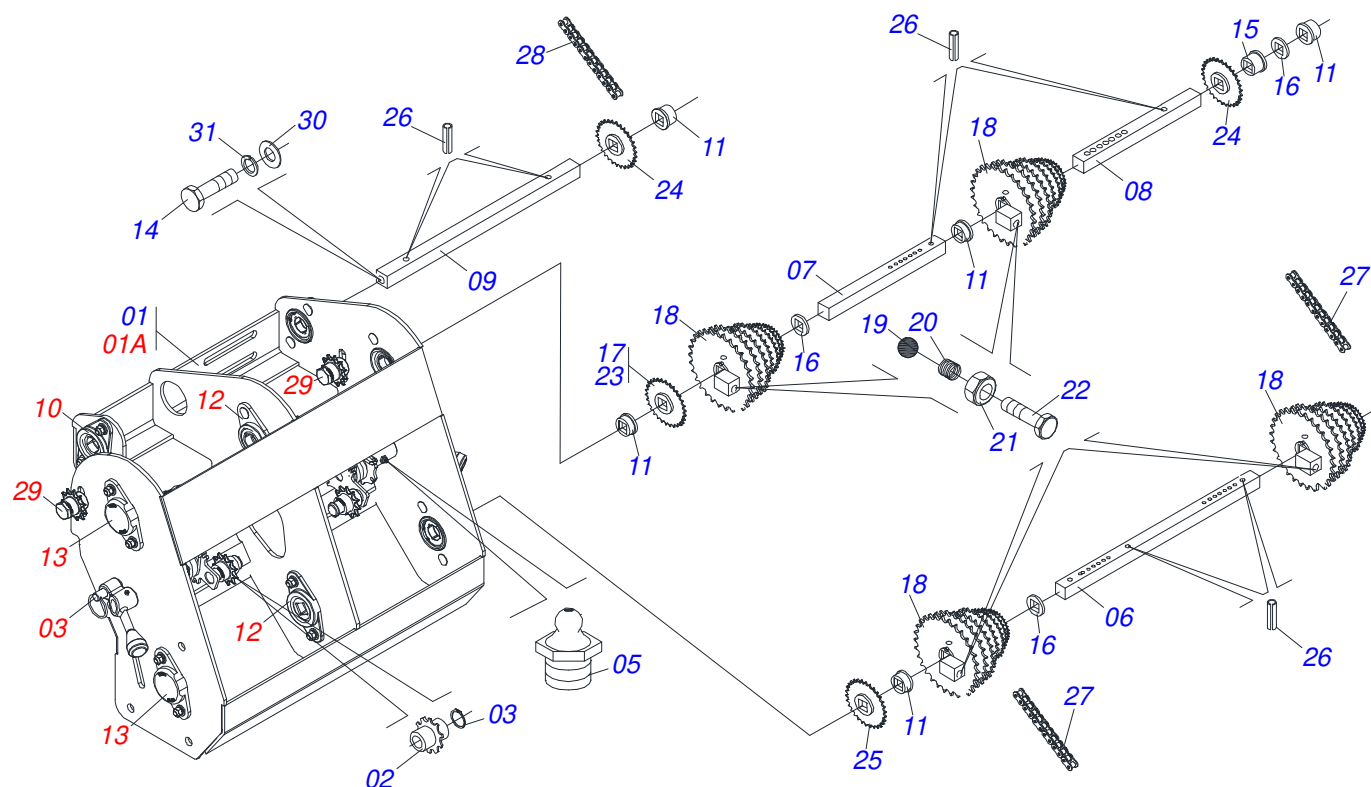

Item	Code	Description	See page	07 09
001	0511050639	RIGHT GEAR BOX ASSY		01
001A	0501058212	SEMI MOUNTED RIGHT CHANGE		01
002	0503031805	11Z 1/2" GEAR		04
003	0503010302	501019 SEAL RING		04
004	0501048790	AXLE WITH RING		02
005	0503010002	1800 GREASE FITTING		02
006	0551018209	DRIVING AXLE		01
007	0521018259	DRIVEN AXLE		01
008	0551018210	DRIVEN AXLE		01
009	0551018211	INTERM SHAFT		01
010	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING		01
011	0503030303	SUPPORT WASHER		05
012	0501056443	GEAR HOUSING BEARING		02
013	0501056271	GEARBOX CLOSED BEARING		05
014	0503010256	3/8" X 3/4" BOLT		01
015	0503030275	AGRICULTURAL BEARING		01
016	0521018630	1.4" X SQUARE 0.8" WASHER		03
017	0511061822	25Z P0.5" GEAR SQUARE HOL		01
018	0502040868	GEAR CONE REPLACEMENT		04
019	0503012389	1/2 BALL		04
020	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
021	0503010060	1/2" NUT		04
022	0503010395	1/2" X 1-1/4" BOLT		04
023	0521062072	33Z GEAR		01
024	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
025	0511067501	26Z GEAR		01
026	0503010292	0.2" X 1.6" SPRING PIN		07
027	0503012204	40-1 CHAIN X 82 LINK + RED		02
028	0503012713	40-1 CHAIN X 45 LINK + MEN		01
029	0501054655	CHAIN TENSIONER ASSY	12	02
030	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		01




Item	Code	Description	See page	07 09
031	0503010025	3/8" SPRING WASHER		01

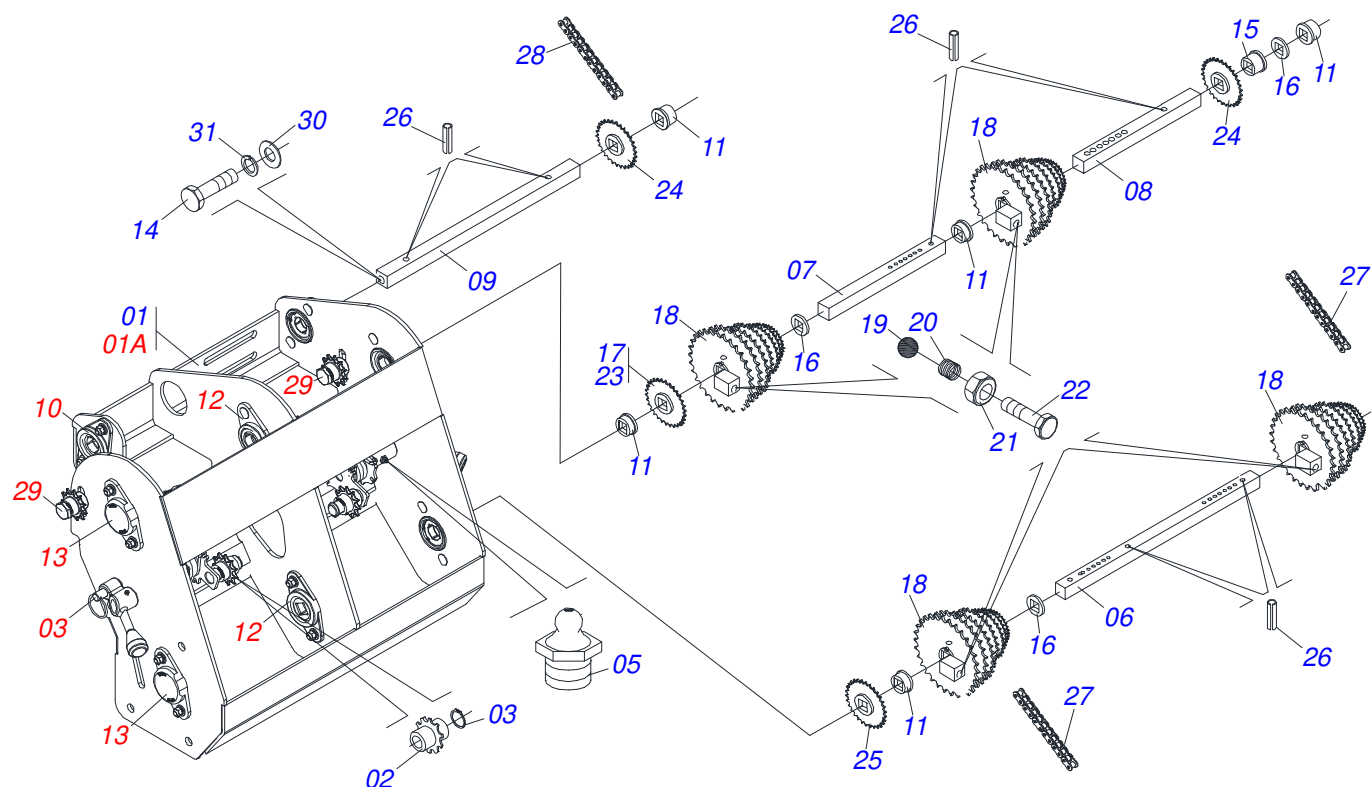


Item	Code	Description	See page	07 09
01	0501058213	LH GEAR BOX		01 01
01A	0501058213	LH GEAR BOX		01 01
02	0503031805	11Z 1/2" GEAR		12 12
03	0503010302	501019 SEAL RING		04 04
04	0501048790	AXLE WITH RING		02 02
05	0503010002	1800 GREASE FITTING		02 02
06	0551018209	DRIVING AXLE		01 01
07	0521018259	DRIVEN AXLE		01 01
08	0551018210	DRIVEN AXLE		01 01
09	0551018211	INTERM SHAFT		01 01
10	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING		01 01
11	0503030303	SUPPORT WASHER		05 05
12	0501056443	GEAR HOUSING BEARING		02 02
13	0501056271	GEARBOX CLOSED BEARING		05 05
14	0503010256	3/8" X 3/4" BOLT		01 01
15	0503030275	AGRICULTURAL BEARING		01 01
16	0521018630	1.4" X SQUARE 0.8" WASHER		03 03
17	0511061822	25Z P0.5" GEAR SQUARE HOL		01 01
18	0511060396	DRIVE/DRIVEN AXLE CONE		08 08
19	0503012389	1/2 BALL		04 04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04 04
21	0503010060	1/2" NUT		04 04
22	0503010395	1/2" X 1-1/4" BOLT		04 04
23	0511061822	25Z P0.5" GEAR SQUARE HOL		01 01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02 02
25	0501069874	GEAR 17Z P 15,87 FQ 3/4		02 02
26	0503010292	0.2" X 1.6" SPRING PIN		07 07
27	0503012204	40-1 CHAIN X 82 LINK + RED		04 04
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01 01
29	0501054655	CHAIN TENSIONER ASSY	12	04 04
30	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02 02




Item	Code	Description	See page	07 09
31	0503010025	3/8" SPRING WASHER		01 01

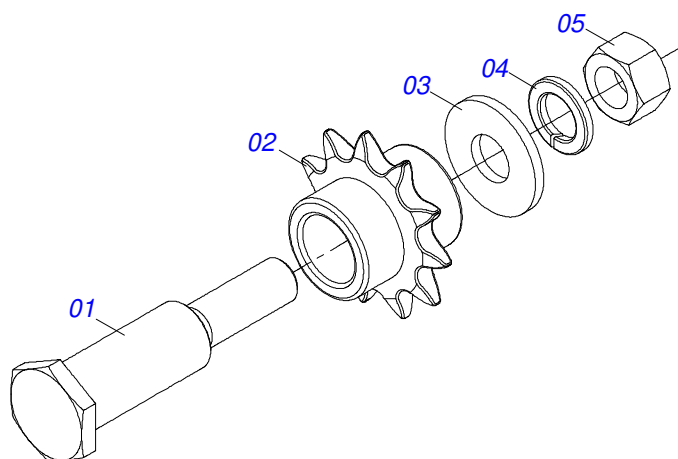


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

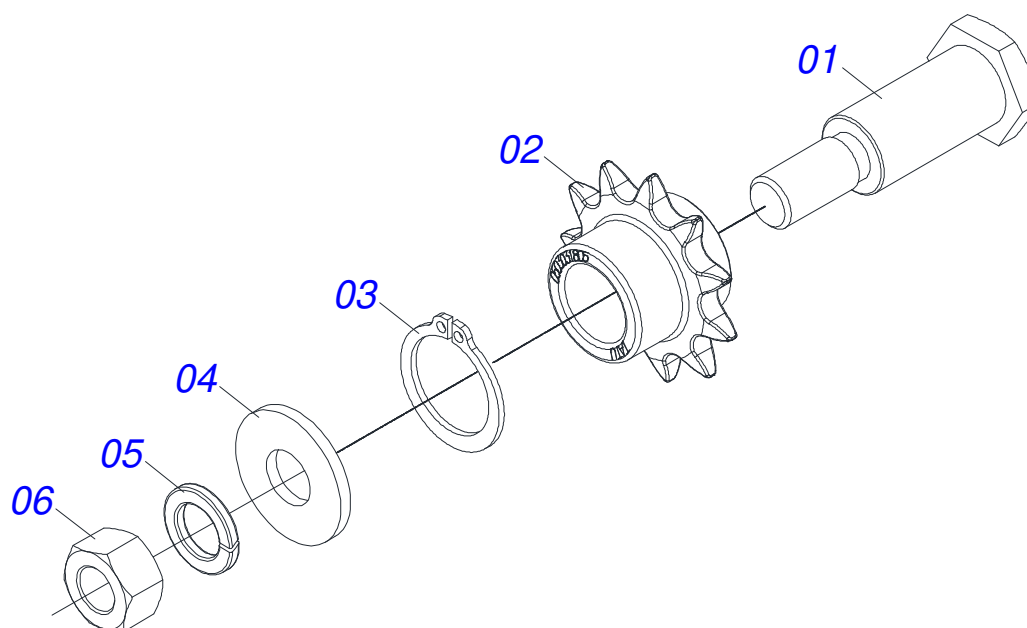


Item	Code	Description	See page	QT
01	0531017202	AXLE CHAIN TIGHTENER		01
02	0503031806	9Z X P 5/8" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

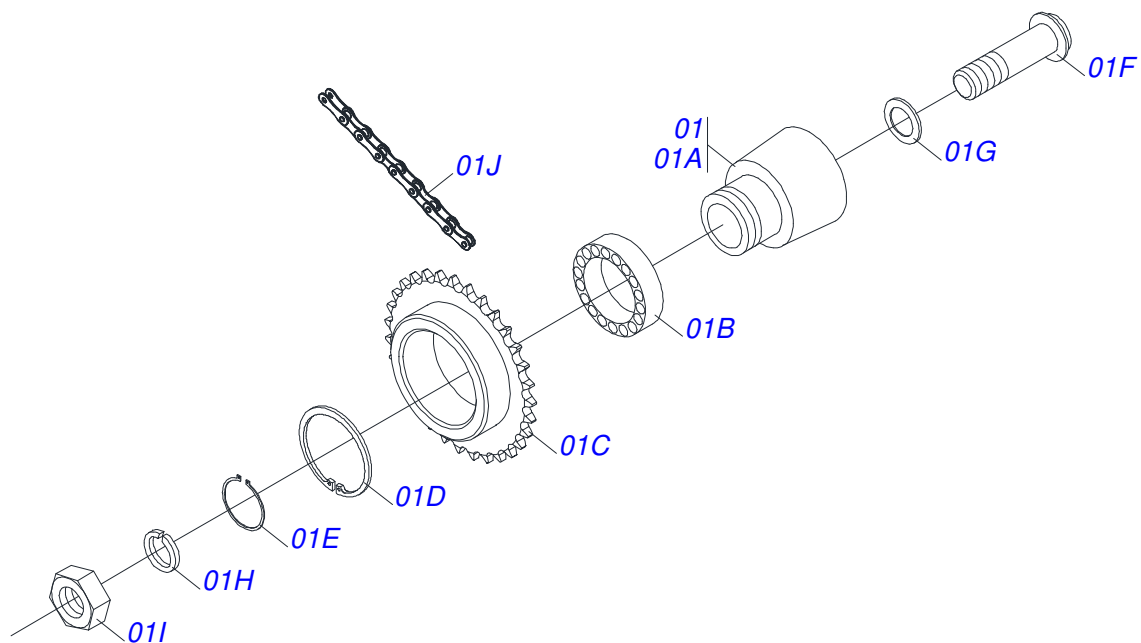


Item	Code	Description	See page
01	0501052788	CHAIN TENSIONER ASSY	14 001
01A	0521018415	TIGHTENER AXLE	01
01B	0503012861	6006 2RS BALL BEARING	01
01C	0511061836	17Z GEAR	01
01D	0503012858	502075 CLAMPING RING (FOR HOLE)	01
01E	0503010707	501030 CLAMPING RING (FOR AXLE)	01
01F	0501011234	5/8" X 3" BOLT	01
01G	0501012140	FLAT WASHER	01
01H	0503010027	5/8" SPRING WASHER	01
01I	0503010013	5/8" NUT	01
01J	0503012716	CHAIN 50-1 X 3.7" LINK + MENDING	01

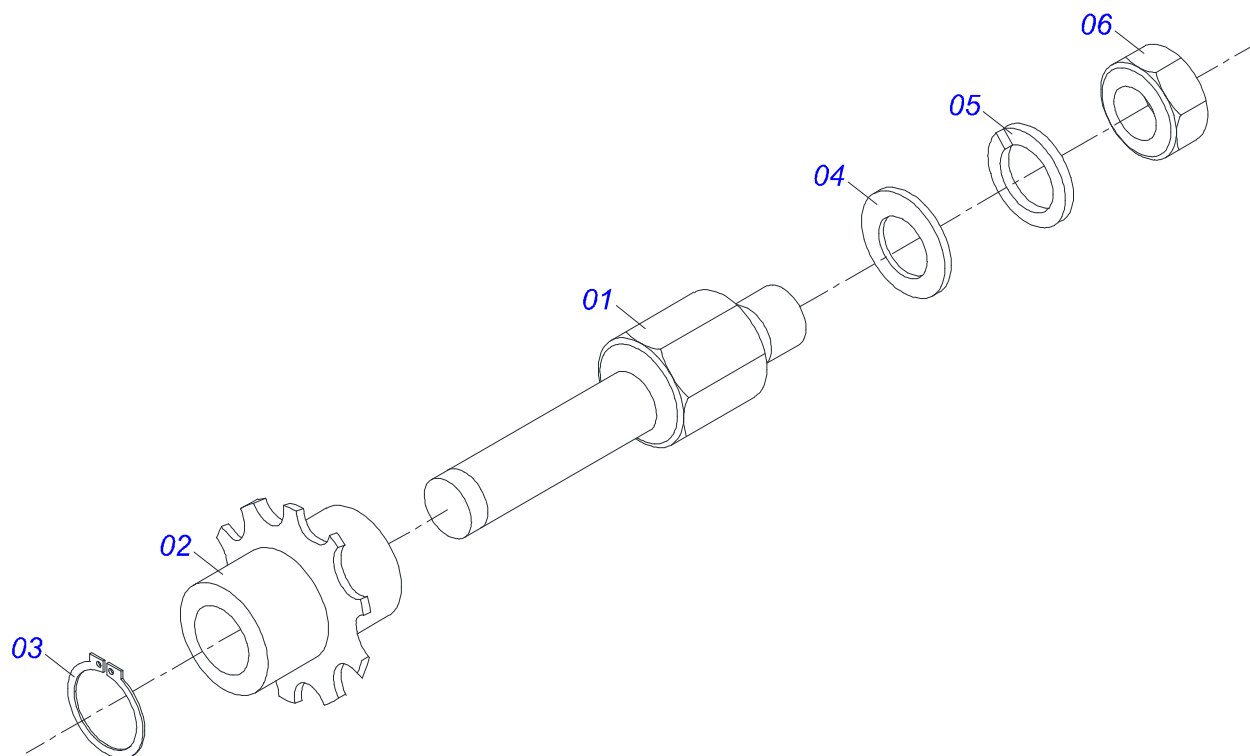


Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

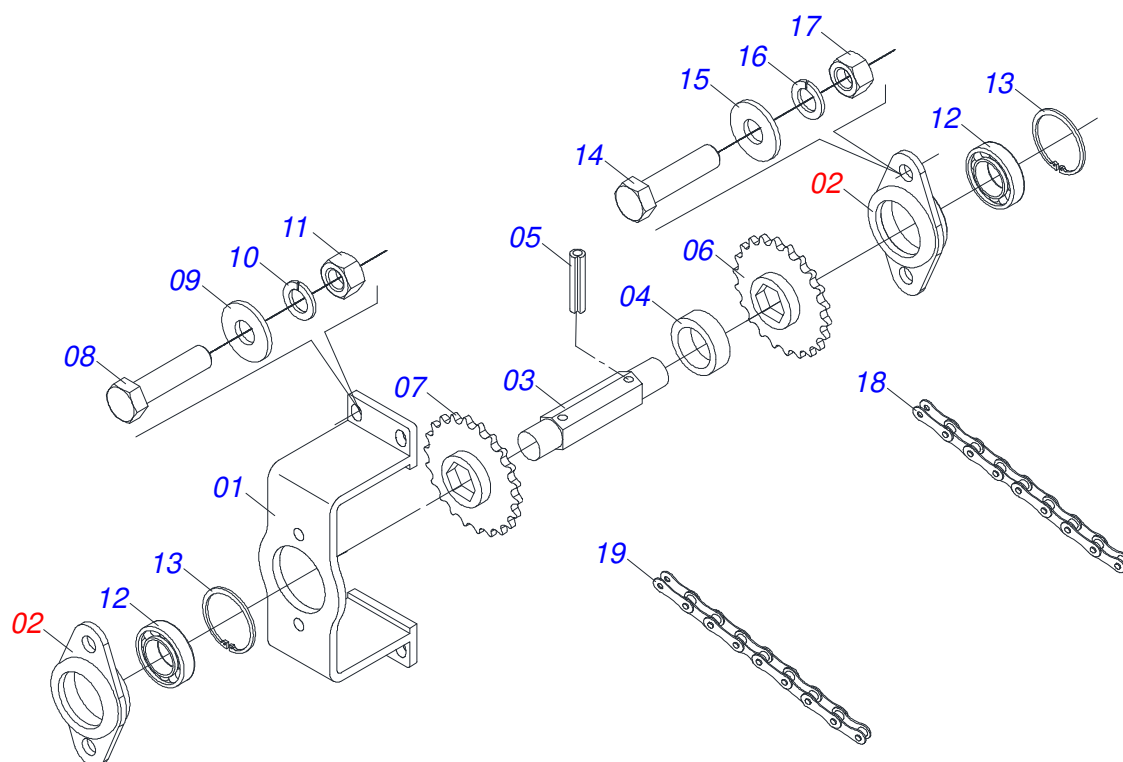


Item	Code	Description	See page
01	0511063266	INTERMEDIARY BEARING SUPPORT	01
02	0501052775	ROW SEED BEARING	02
03	0531013674	INTERMEDIATE AXLE	01
04	0541011184	1.1" X 2" X 0.7" SLEEVE	01
05	0503010292	0.2" X 1.6" SPRING PIN	02
06	0511063268	20Z P1/2" GEAR FOR HEX AXLE, 1"	01
07	0511063267	26Z P1/2" GEAR FOR HEX AXLE, 1"	01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	04
09	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN	04
10	0503010025	3/8" SPRING WASHER	04
11	0503010026	3/8" NUT	04
12	0503011410	ROLLER BEARING	02
13	0503011105	SEAL RING	02
14	0503010371	5/16" X 1" BOLT	04
15	0501010694	FLAT WASHER	04
16	0503010179	LOCK WASHER	04
17	0503010337	5/16" NUT	04
18	0503012717	40-1 CHAIN X 101 LINK + MENDING	01
19	0503012718	40-1 CHAIN X 111 LINK + MENDING	01

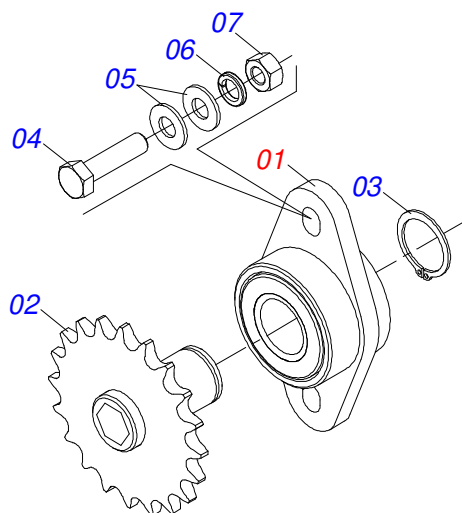


Item	Code	Description	See page	QT
01	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8		01
02	0511063106	20Z AXLE BEARING DOBLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0503010365	NUT		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

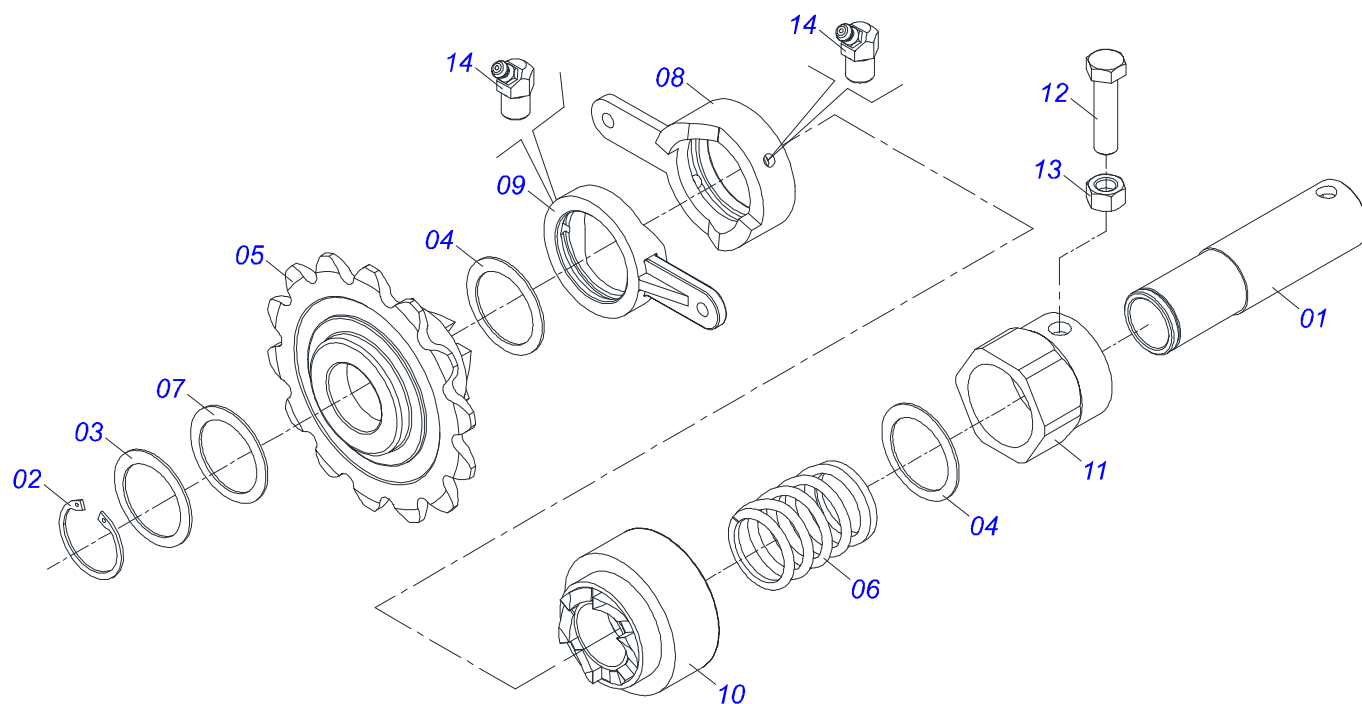


Item	Code	Description	See page	QT
01	0521017590	GUIDE AXLE		01
02	0503010542	501045 CLAMPING RING (FOR AXLE)		01
03	0521017593	FLAT WASHER		01
04	0501019734	FLAT WASHER		02
05	0502011329	14Z GEAR WITH RIGHT DRAGGER		01
06	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
07	0501019735	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		01
09	0502010711	RIGHT CAM,LARGER		01
10	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
11	0502011996	SLEEVE FIXER		01
12	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
13	0503010060	1/2" NUT		01
14	0503010003	1845 GREASE FITTING		02

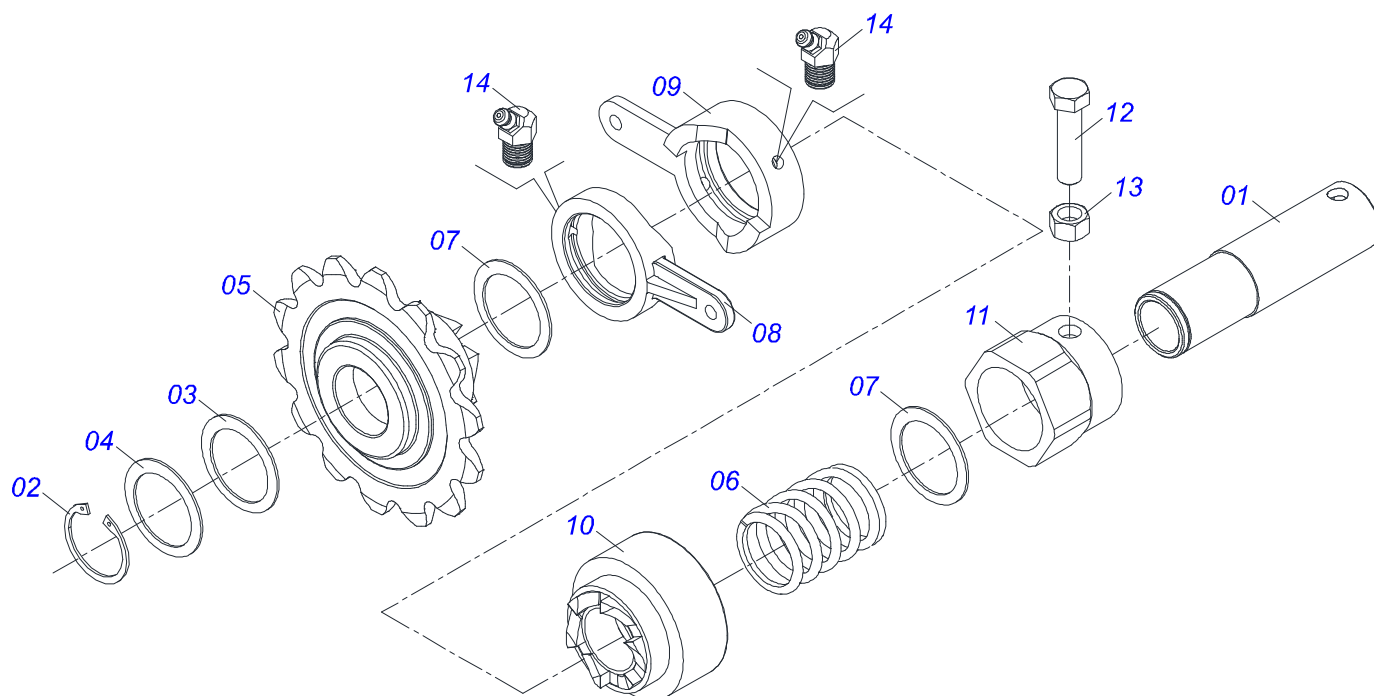


Item	Code	Description	See page	QT
01	0521017590	GUIDE AXLE		01
02	0503010542	501045 CLAMPING RING (FOR AXLE)		01
03	0521017593	FLAT WASHER		01
04	0501019735	FLAT WASHER		01
05	0502011331	LH 14Z P 1.25" GEAR WITH DRAGGER		01
06	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		01
09	0502010721	LEFT CAM,LARGER		01
10	0502011995	LH DRIVING AXLE FOLLOWER		01
11	0502011996	SLEEVE FIXER		01
12	0503010395	1/2" X 1-1/4" BOLT		01
13	0503010060	1/2" NUT		01
14	0503010003	1845 GREASE FITTING		02

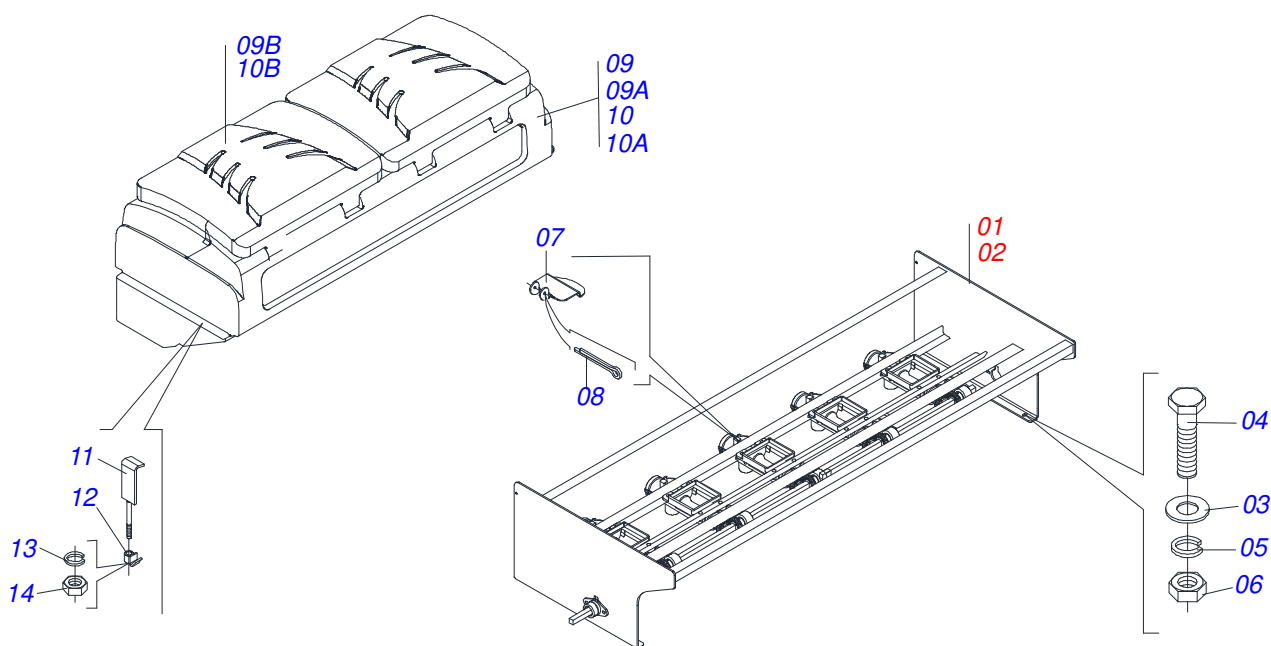


Item	Code	Description	See page	QT
001	0511051077	SUPPORT RIGHT BOX FERTILIZER WITH 21 DISTRIBUTOR	21	01
002	0511051078	SUPPORT LEFT BOX FERTILIZER WITH 22 DISTRIBUTOR	22	01
003	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		16
004	0503010849	3/8" X 1-1/2" BOLT		08
005	0503010025	3/8" SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0571010590	FERTILIZER SIDE COVER		08
008	0503010362	1/8 X 1.1/4 COTTERPIN		08
009	0503060636	COVER BOX RIGHT FERTILIZER		01
009A	0503031948	SILO RIGHT FERTILIZER		01
009B	0503031950	TUBE SILO FERTILIZER		02
010	0503060637	COVER BOX LEFT FERTILIZER		01
010A	0503031949	SILO LEFT FERTILIZER		01
010B	0503031950	TUBE SILO FERTILIZER		02
011	0511062099	FERTILIZER BEAM CLAMP		04
012	0511061886	FERTILIZER BEAM LOCK		04
013	0503010019	1/2" SPRING WASHER		04
014	0503010060	1/2" NUT		04

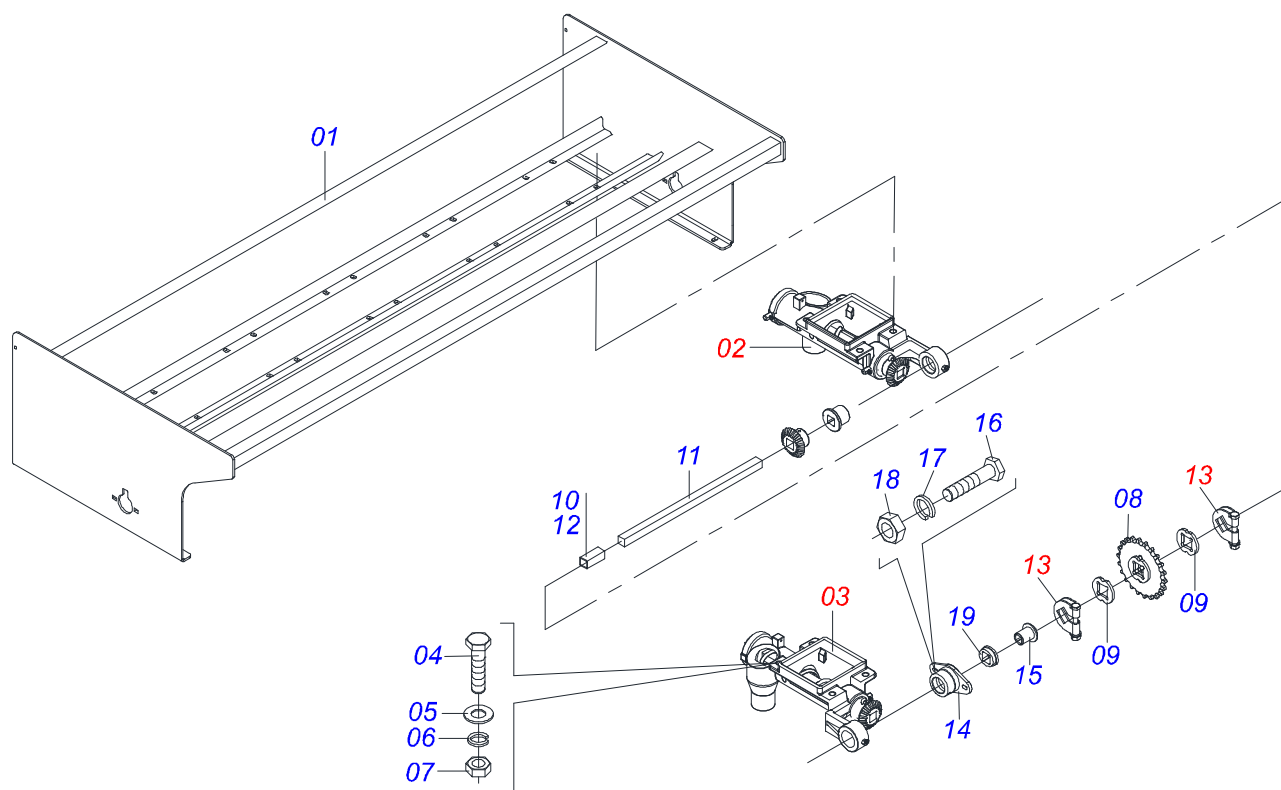


Item	Code	Description	See page	QT
01	0521062410	RH BEAM SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	23	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	24	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0501018700	3/4" X 58"SQUARE SHAFT		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER	82	02
14	0501110392	HOPPER SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

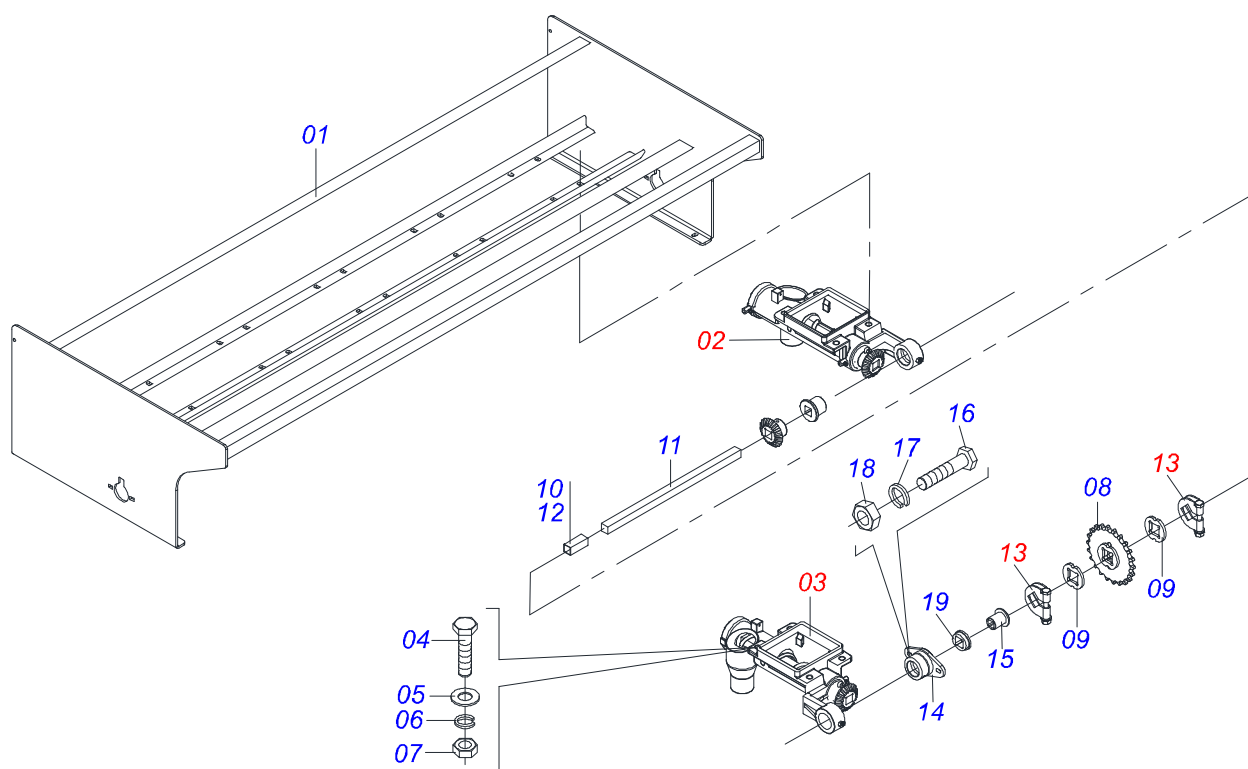







Item	Code	Description	See page	QT
01	0521062412	LH BEAM SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	23	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	24	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		02
11	0501018700	3/4" X 58"SQUARE SHAFT		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER	82	02
14	0501110392	HOPPER SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

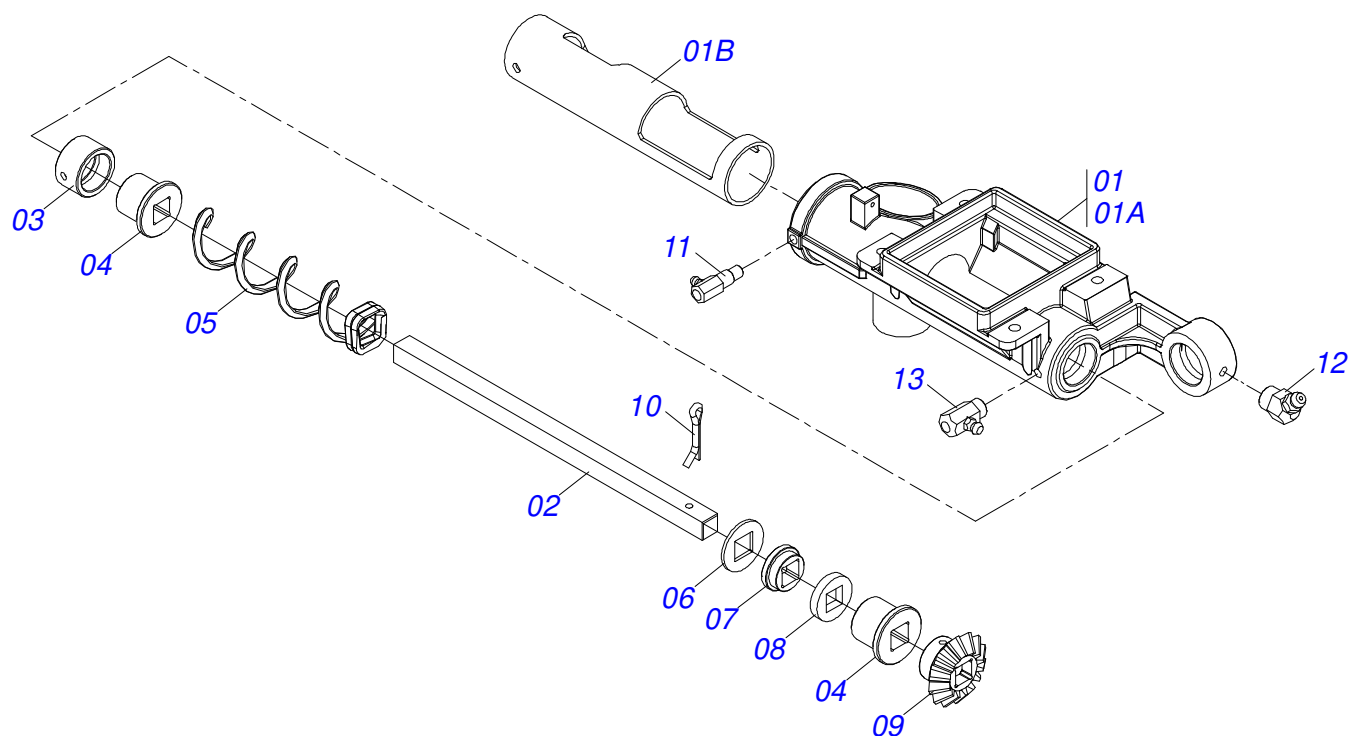


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

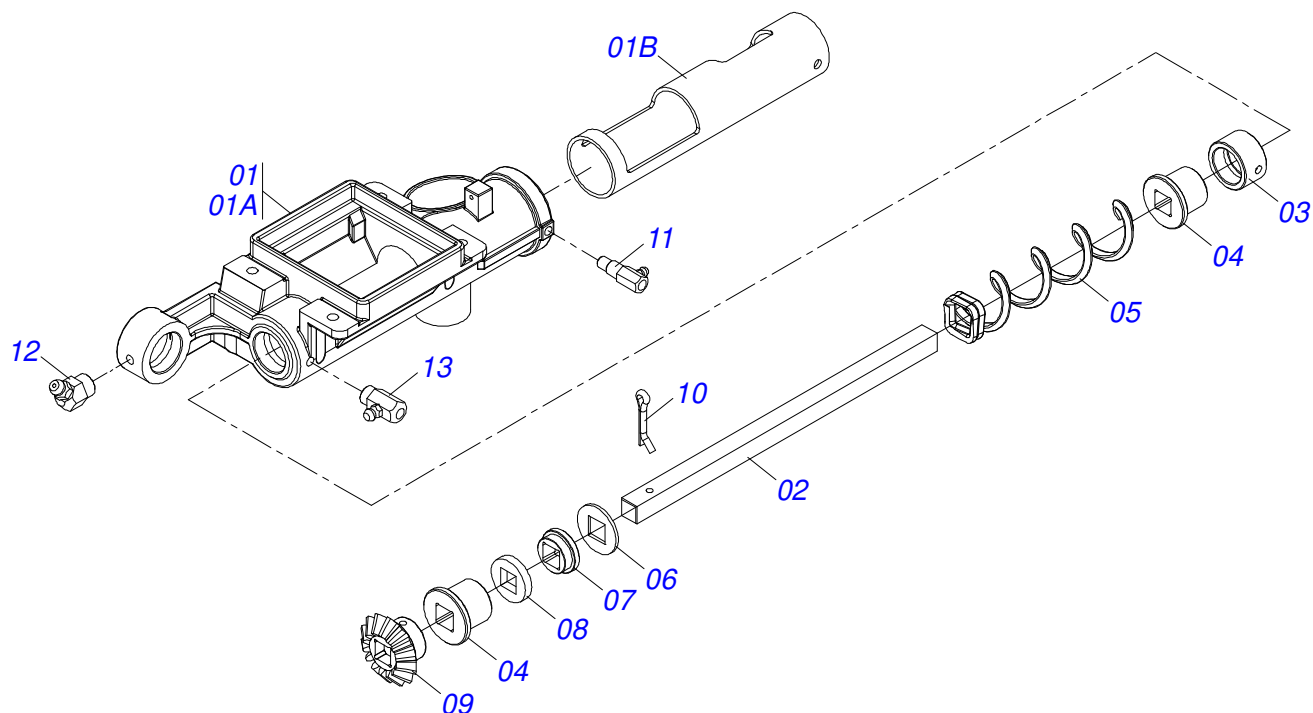


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

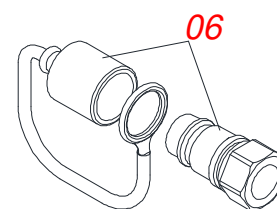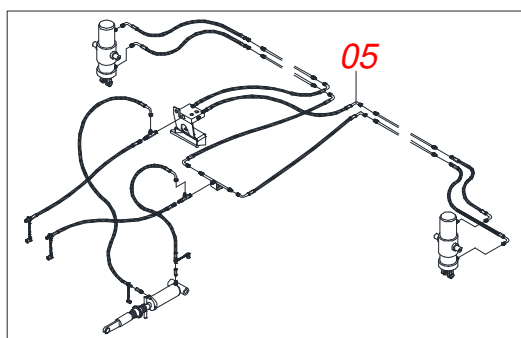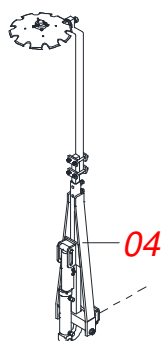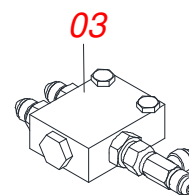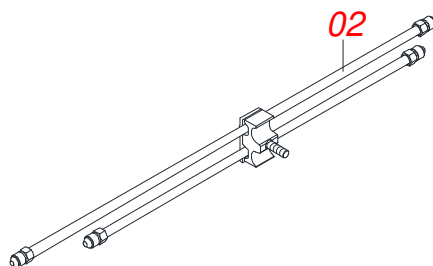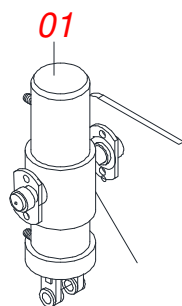


Item	Code	Description	See page	QT
01	0511053894	HYDRAULIC CYLINDER ASSEMBLY	26	01
02	0511053920	OIL PIPE ASSEMBLY	28	01
03	0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	29	01
04	0511052909	HYDRAULIC MARKER	30	01
05	0511052197	WHEELS HOSE ASSEMBLY	32	01
06	0501053834	MALE QUICK COUPLER	33	02

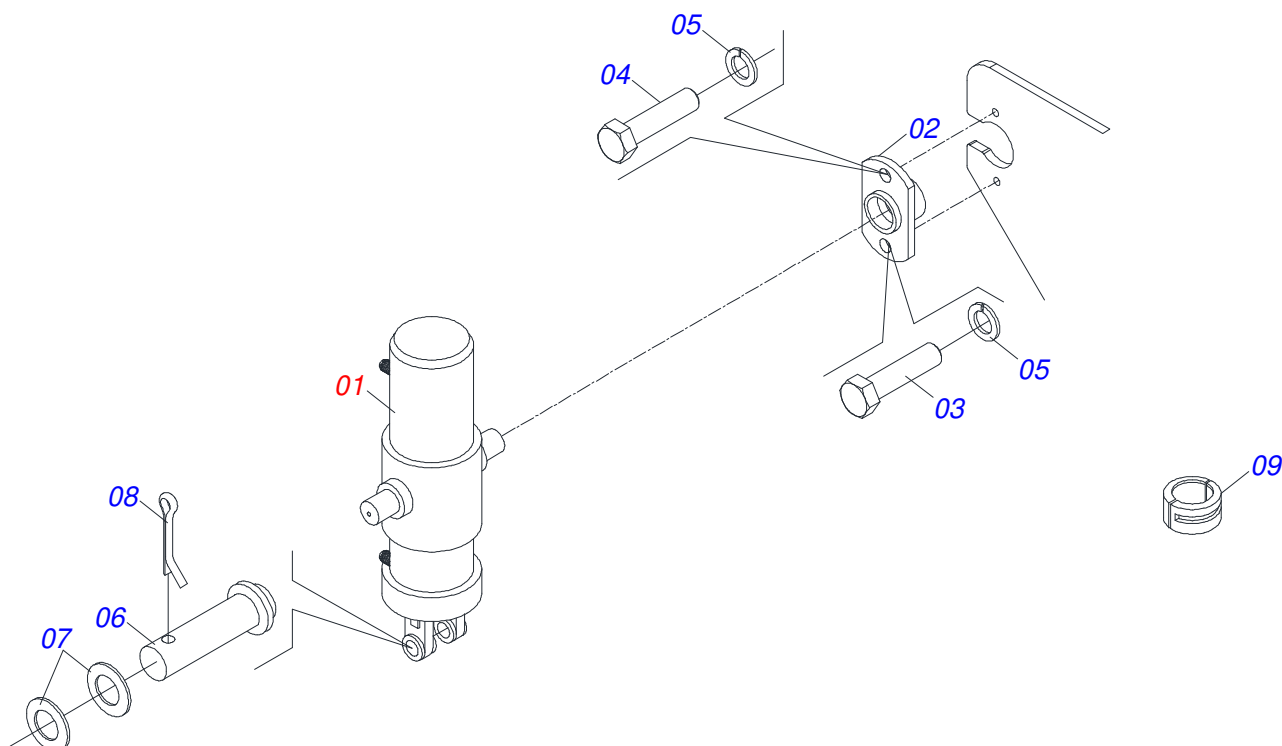


Item	Code	Description	See page	QT
001	0511058411	HYDRAULIC CYLINDER	27	02
002	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		04
003	0503010834	1/2 X 1 BOLT		06
004	0503010395	1/2" X 1-1/4" BOLT		02
005	0503010019	1/2" SPRING WASHER		08
006	0521010546	1.2" X 5.7" COUPLING SHAFT		02
007	0501017779	32 X 60 X 4.75 FLAT WASHER		04
008	0503010523	1/4" X 2" COTTERPIN		02
009	0501047887	ROD STOP		02

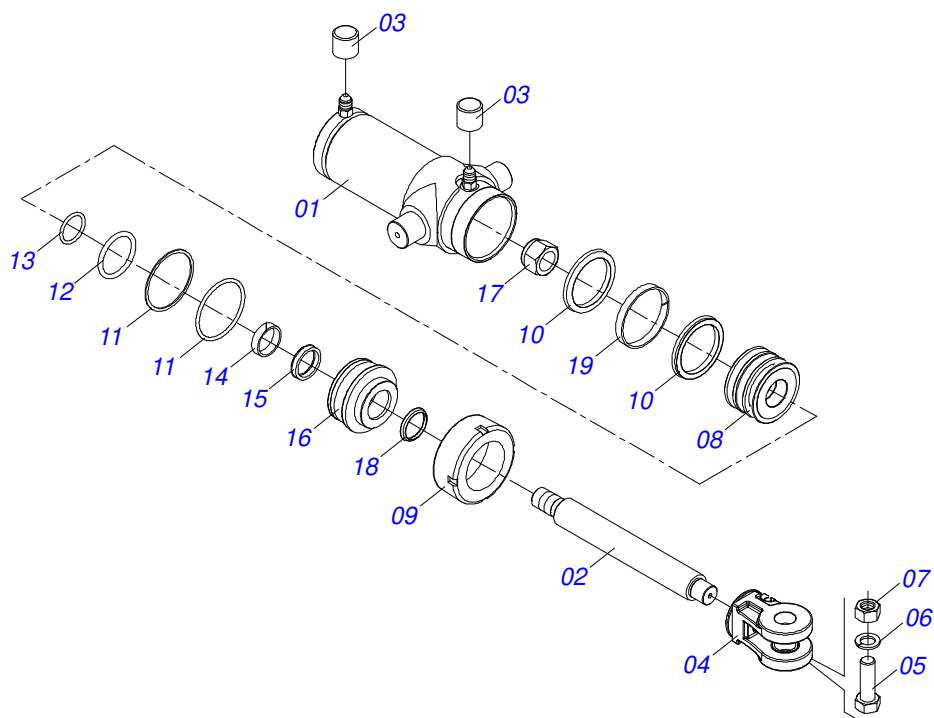


Item	Code	Description	See page	QT
01	0511066774	2.5" X 28" CYLINDER CASE		01
02	0541017674	TURNBUCLE BODY		01
03	0503030385	CYLINDER PLUG N-002		02
04	0511064408	FORK		01
05	0503011094	3/8" X 2" BOLT		01
06	0503010025	3/8" SPRING WASHER		01
07	0503010026	3/8" NUT		01
08	0581010302	RING OF SUPPORT		01
09	0502012822	101.60 END CAP		01
10	0503011061	8-342 BACK-UP RING		02
11	0503010338	2-342 N 3006-9B O'RING		02
12	0503017936	RING		01
13	0503017938	RING GUIDE		01
14	0503017937	GASKET		01
15	0503010761	D-1750 SCRAPER RING		01
16	0581010837	PISTON		01
17	0503010817	1.1/4" SELF LOCKING NUT		01
18	0503015633	SELEMASTER SEALING		01
19	0503018029	2-217 O'RING		01

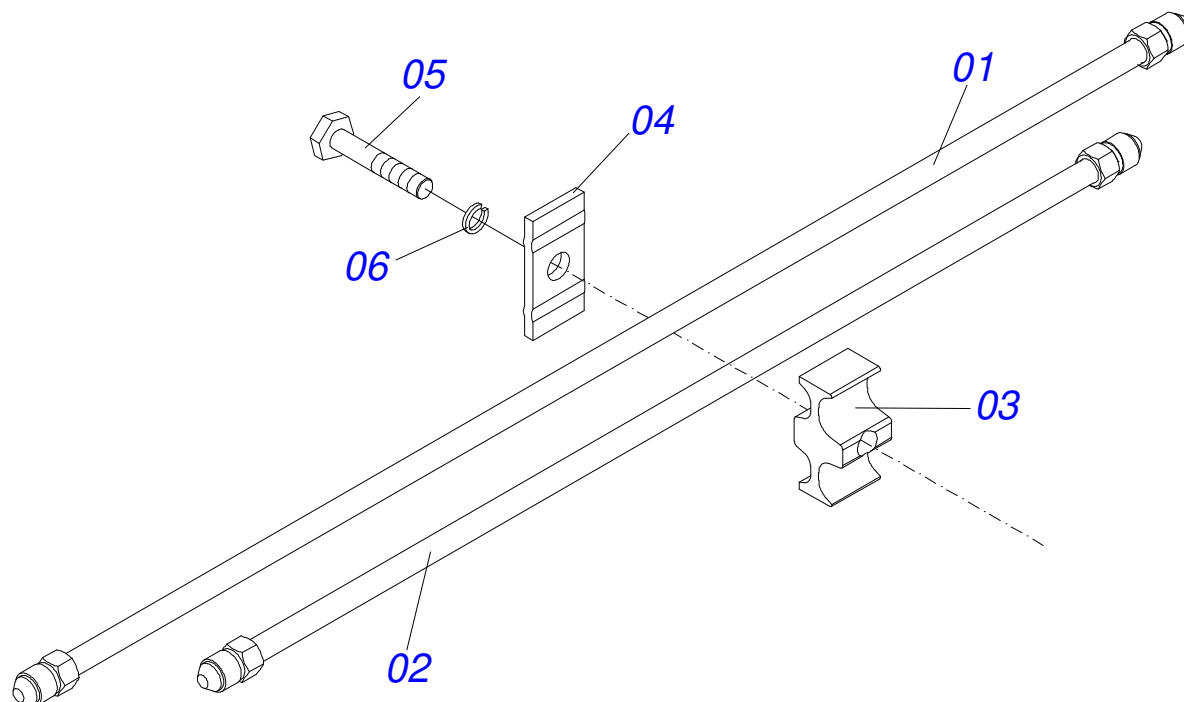

Item	Code	Description	See page	QT
001	0521062404	OIL TUBE		04
002	0521063408	OIL TUBE		04
003	0502012702	BODY SUPPORT CLAMP		04
004	0531011180	UPPER BODY CLIP		04
005	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
006	0503010180	7/16" SPRING WASHER		04

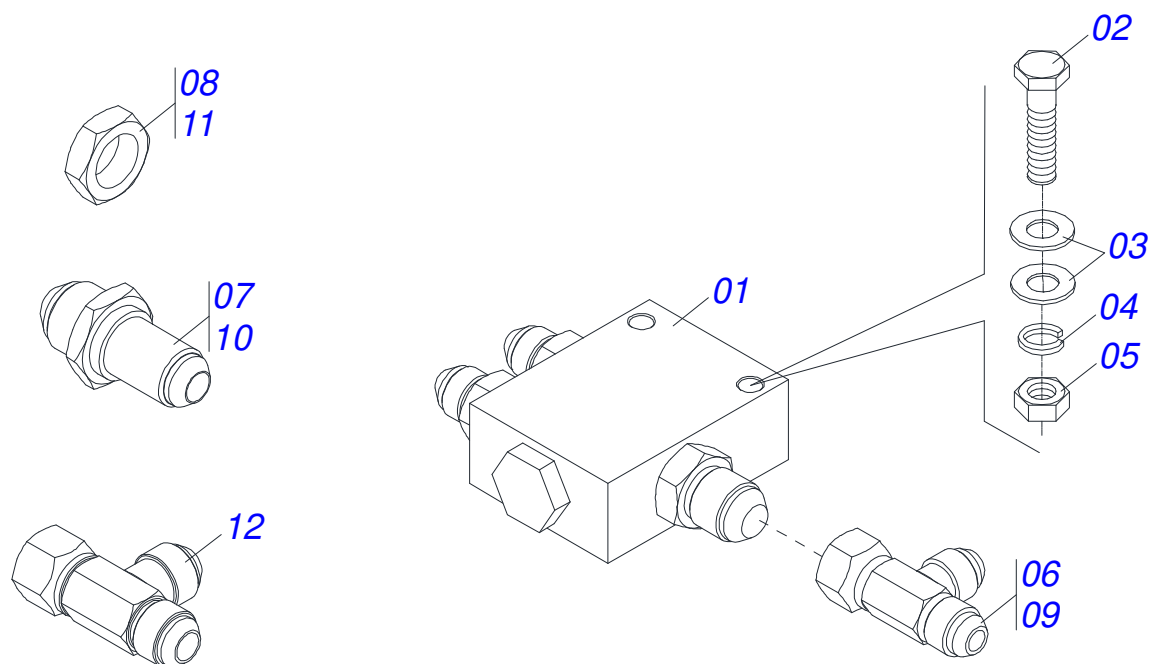

Item	Code	Description	See page	QT
001	0501054452	FLOW DIVIDING VALVE		01
002	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
003	0501010694	FLAT WASHER		04
004	0503010143	1/4" SPRING WASHER		02
005	0503010144	1/4" NUT		02
006	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
007	0541012166	NIPPLE 3/4" UNF X 7/8"		01
008	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01
009	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
010	0541012166	NIPPLE 3/4" UNF X 7/8"		01
011	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01
012	0503012341	T 7/8" ADAPOR GIRAT NUT		01

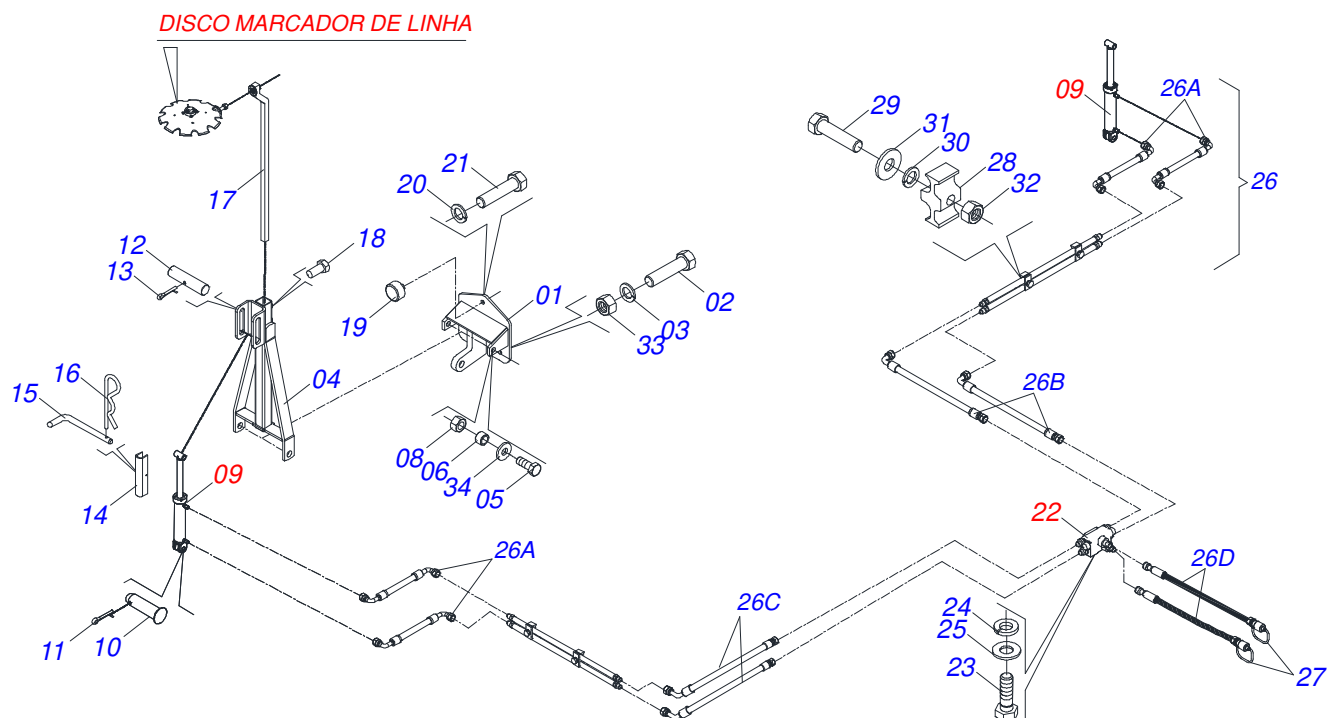


Item	Code	Description	See page	QT
001	0511065449	ROW MARKER ARM SUPPORT		02
002	0501018059	3/4" X 2-1/4" BOLT		08
003	0503010023	3/4" SPRING WASHER		08
004	0501069470	ROW MARKER ARM		02
005	0503011067	5/8" X 2-1/2" BOLT		04
006	0521010479	SLEEVE ARTICULATION		04
008	0503012795	5/8" HEX SELF ADJUSTING NUT		04
009	0511058449	HYDRAULIC CYLINDER	31	02
010	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
011	0503010571	1/4" X 1.1/2 COTTERPIN		02
012	0511015779	1" X 4.2" AXLE		02
013	0503010523	1/4" X 2" COTTERPIN		02
014	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
015	0501068994	8,30 X 78 LOCK PIN		02
016	0503030168	HITCH PIN CLIP		02
017	0501069643	890 TURNBUCKLE		02
018	0503010962	5/8" X 1-1/4" BOLT		04
019	0503011070	BEATER		02
020	0503010019	1/2" SPRING WASHER		02
021	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
022	0501054649	HBM SEQUENTIAL VALVE		01
023	0503010371	5/16" X 1" BOLT		02
024	0503010179	LOCK WASHER		02
025	0501010694	FLAT WASHER		02
026	0511051082	SET OF HYDRAULIC MARKER HOSES		01
026A	0501080687	3/8 X 1150 TC-TC HOSE ASSY		04
026B	0501080436	3/8 X 1600 TR-TC HOSE		02
026C	0501080402	HOSE 3/8 X 1700 TR-TC		02
026D	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
027	0501053834	MALE QUICK COUPLER	33	02
028	0502012702	BODY SUPPORT CLAMP		02




HYDRAULIC MARKER

0511052909


Item	Code	Description	See page	QT
029	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
030	0503010180	7/16" SPRING WASHER		02
031	0501012803	FLAT WASHER		02
032	0503010244	7/16" NUT		04
033	0503011255	3/4" LOCK NUT		08
034	0501012140	FLAT WASHER		04

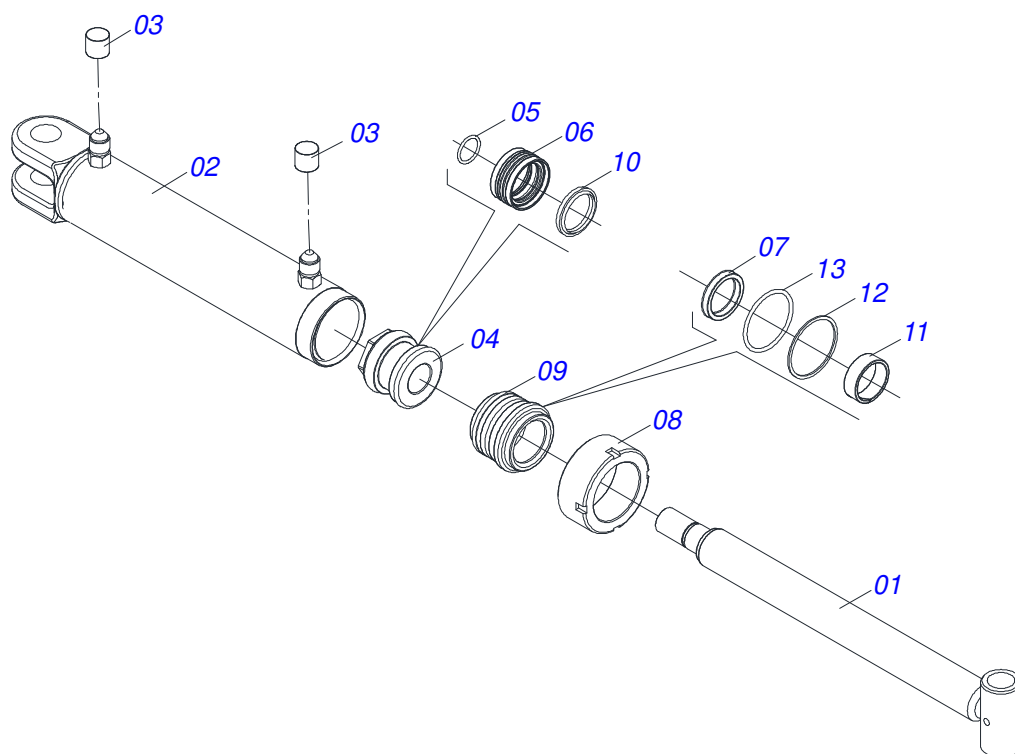


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

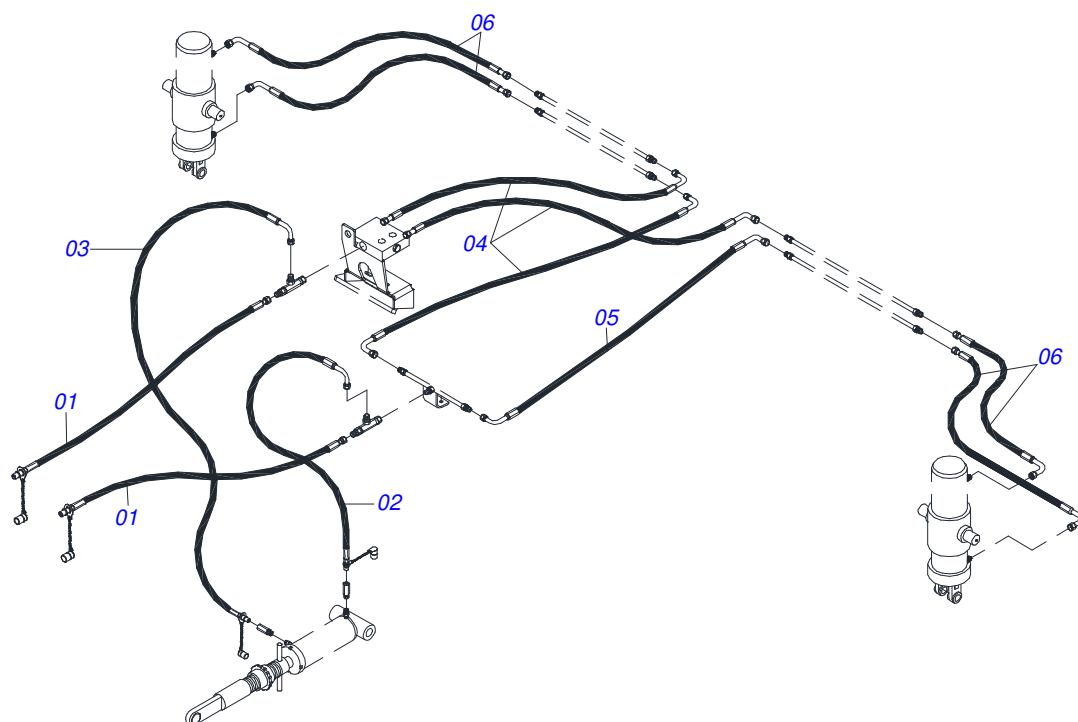


Item	Code	Description	See page	QT
01	0501080933	HOSE 1/2 X 4200 TR-TM		02
02	0501080116	TR-TM HOSE ASSY		01
03	0501080182	1/2" X 850 TR-TM HOSE ASSY		01
04	0501080396	3/8" X 45" HOSE		03
05	0501080687	3/8 X 1150 TC-TC HOSE ASSY		01
06	0501080054	3/8" X 17" TR-TC HOSE ASSY		04

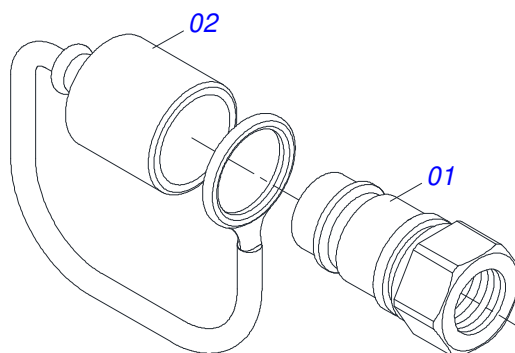


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

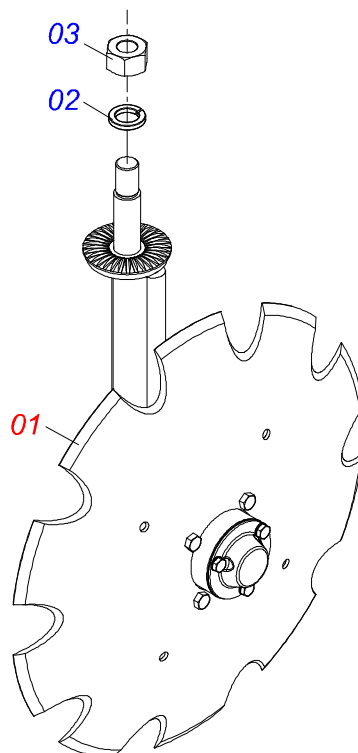


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC	35	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

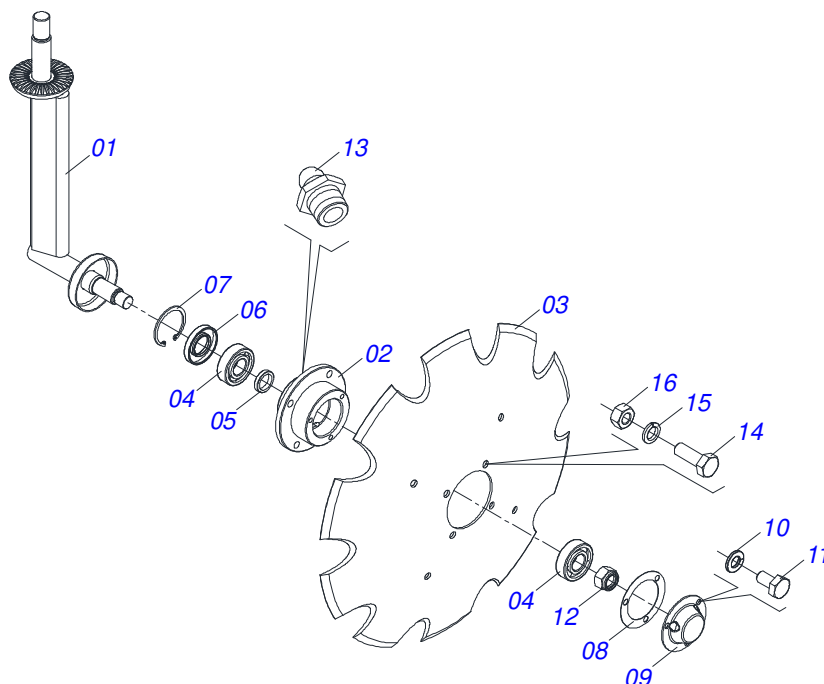


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

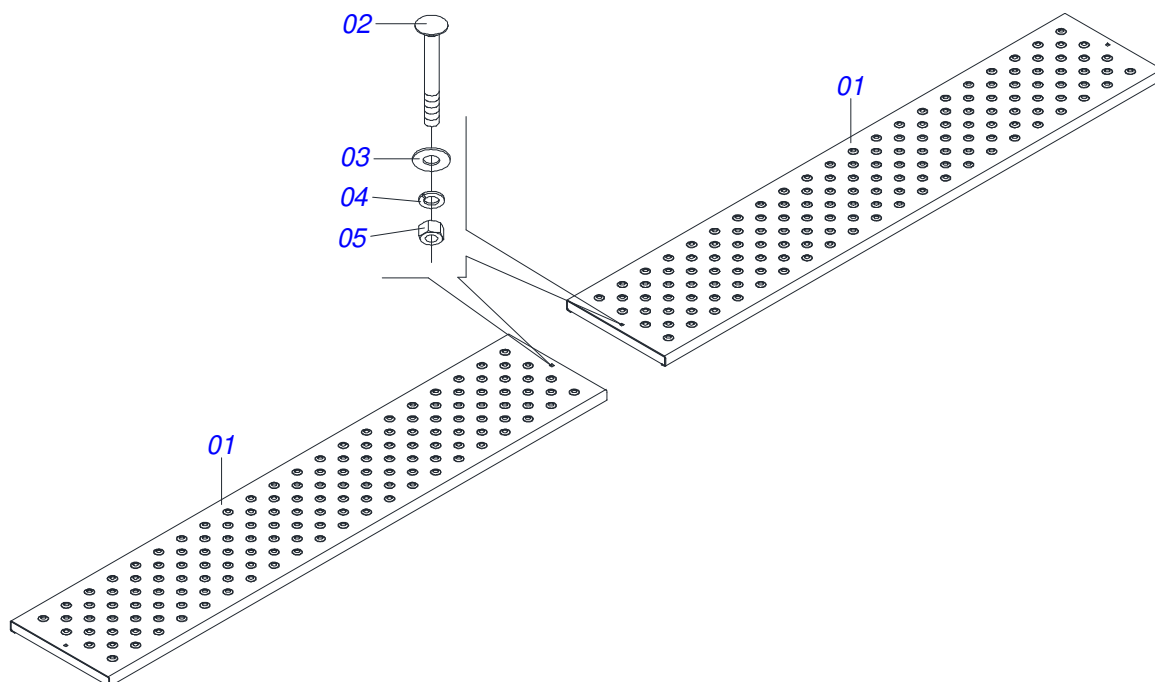


Item	Code	Description	See page	QT
01	0521062416	PLATFORM		02
02	0501011755	3/8" X 3" BOLT		04
03	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04

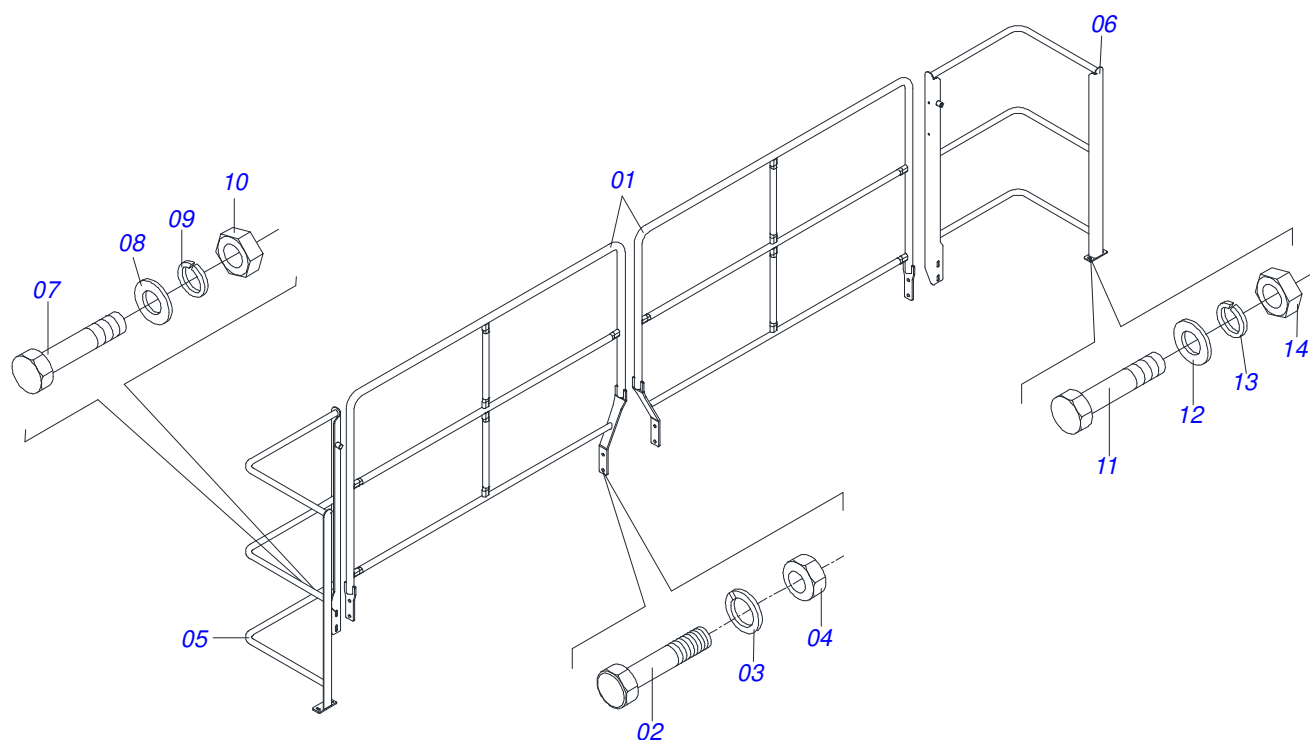

Item	Code	Description	See page	QT
01	0521062417	HANDRAIL	02	
02	0503010920	1/2" X 1.1/2" BOLT	08	
03	0503010019	1/2" SPRING WASHER	08	
04	0503010060	1/2" NUT	08	
05	0521061335	RIGHT SIDE HANDRAIL	01	
06	0521061336	LH SIDE HANDRAIL	01	
07	0503011088	3/8" X 1-1/4" BOLT	04	
08	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN	08	
09	0503010025	3/8" SPRING WASHER	04	
10	0503010026	3/8" NUT	04	
11	0501010161	1/2" X 1.1/4" BOLT	04	
12	0511017302	FLAT WASHER	04	
13	0503010019	1/2" SPRING WASHER	04	
14	0503010060	1/2" NUT	04	

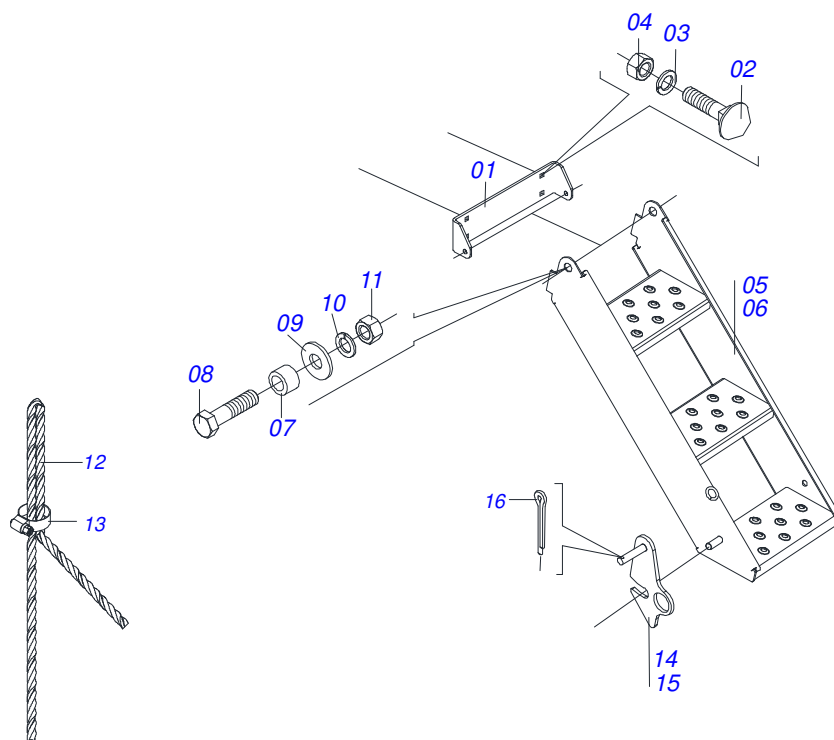


Item	Code	Description	See page	QT
001	0561015343	ARTICULACION SUPPORT		02
002	0501010243	1/2" X 1-1/2" BOLT		08
003	0503010019	1/2" SPRING WASHER		08
004	0503010060	1/2" NUT		08
005	0521061331	RIGHT LADDER		01
006	0521061332	LEFT LADDER		01
007	0531018627	0.5" X 1" X 0.2" SLEEVE		04
008	0503010920	1/2" X 1.1/2" BOLT		04
009	0511017302	FLAT WASHER		04
010	0503010019	1/2" SPRING WASHER		04
011	0503010060	1/2" NUT		04
012	0511010369	3/8" X 74.80" LEVER ROPE		02
013	0503010296	CLAMP		04
014	0511065678	STAIR RIGHT LOCK		01
015	0511065679	STAIR RIGHT LOCK		01
016	0503010257	1/8" X 1" COTTERPIN		02

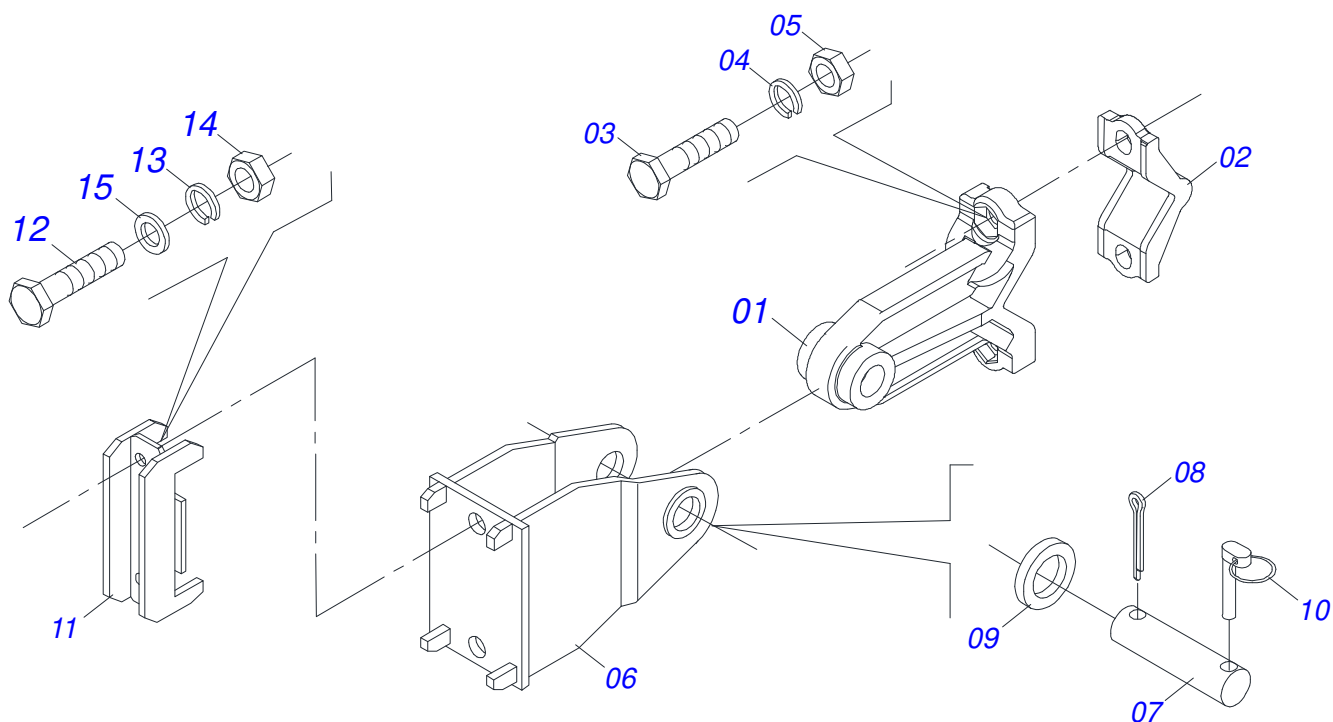


Item	Code	Description	See page	QT
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	04	
02	0502012330	SUPPORT FIXER PIVOT	04	
03	0503011084	3/4" X 5" BOLT	08	
04	0503010023	3/4" SPRING WASHER	08	
05	0503010014	3/4" NUT	08	
06	0511065418	DRAWBAR SUPPORT FRONT FIXATION	04	
07	0561014393	COUPLING SHAFT	04	
08	0503010523	1/4" X 2" COTTERPIN	04	
09	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN	08	
10	0503030119	LOCK PIN	04	
11	0511065419	DRAWBAR FIXER CLAMP	04	
12	0521010066	3/4" X 8.12" BOLT	08	
13	0503010023	3/4" SPRING WASHER	08	
14	0503010014	3/4" NUT	08	
15	0501010322	FLAT WASHER	08	

DRAWBAR ASSY


0511043100

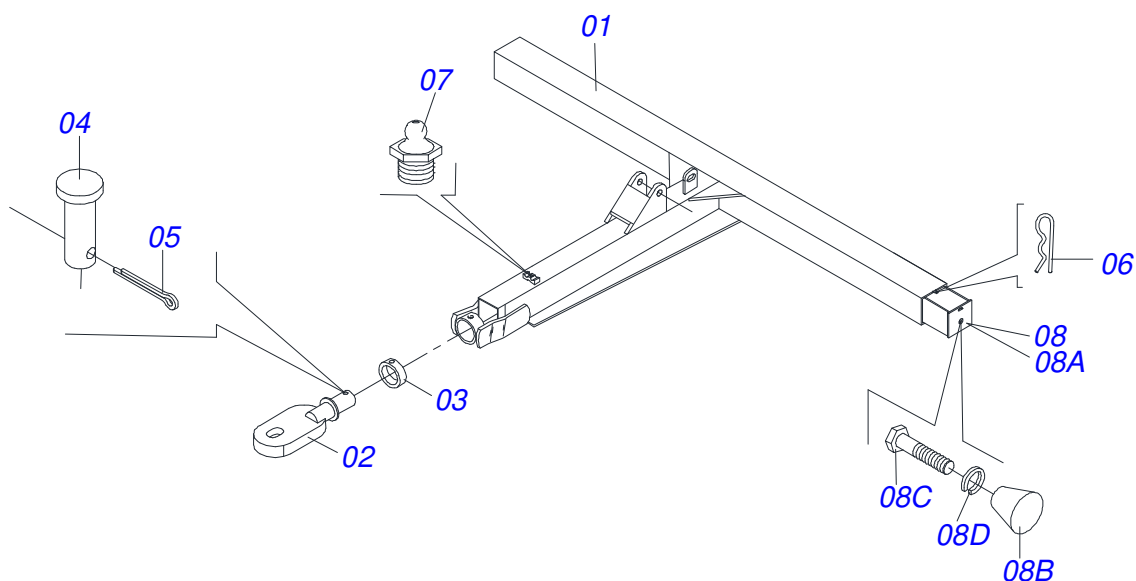


Item	Code	Description	See page	QT
001	0511065905	DRAWBAR COP-CE		01
002	0501069632	TRACTOR HITCH		01
003	0521010681	BUSHING COUPLING BODY		01
004	0521010639	COUPLING SHAFT		01
005	0503010571	1/4" X 1.1/2 COTTERPIN		01
006	0503030012	HITCH PIN CLIP		02
007	0503010002	1800 GREASE FITTING		01
008	0511043137	TOOLS BOX ASSY		02
008A	0511065471	BOX OF TOOLS		01
008B	0503010293	CLAMP KNOB		01
008C	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
008D	0503011443	3/8" SPRING WASHER		01

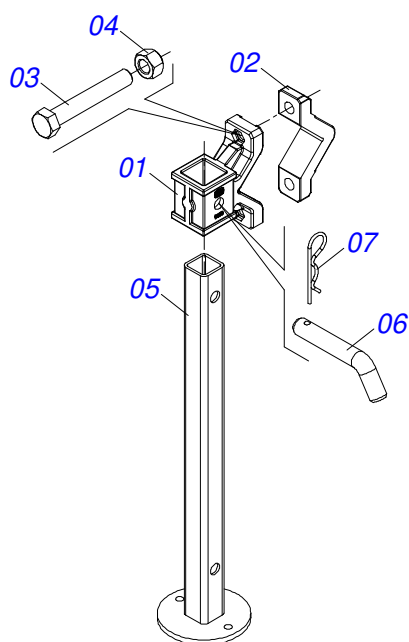

Item	Code	Description	See page	QT
01	0502011530	SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	5/8 UNC SELF LOCKING NUT		04
05	0501069951	PLOUGH SUPPORT		04
06	0501011075	PIN		02
07	0503030012	HITCH PIN CLIP		02

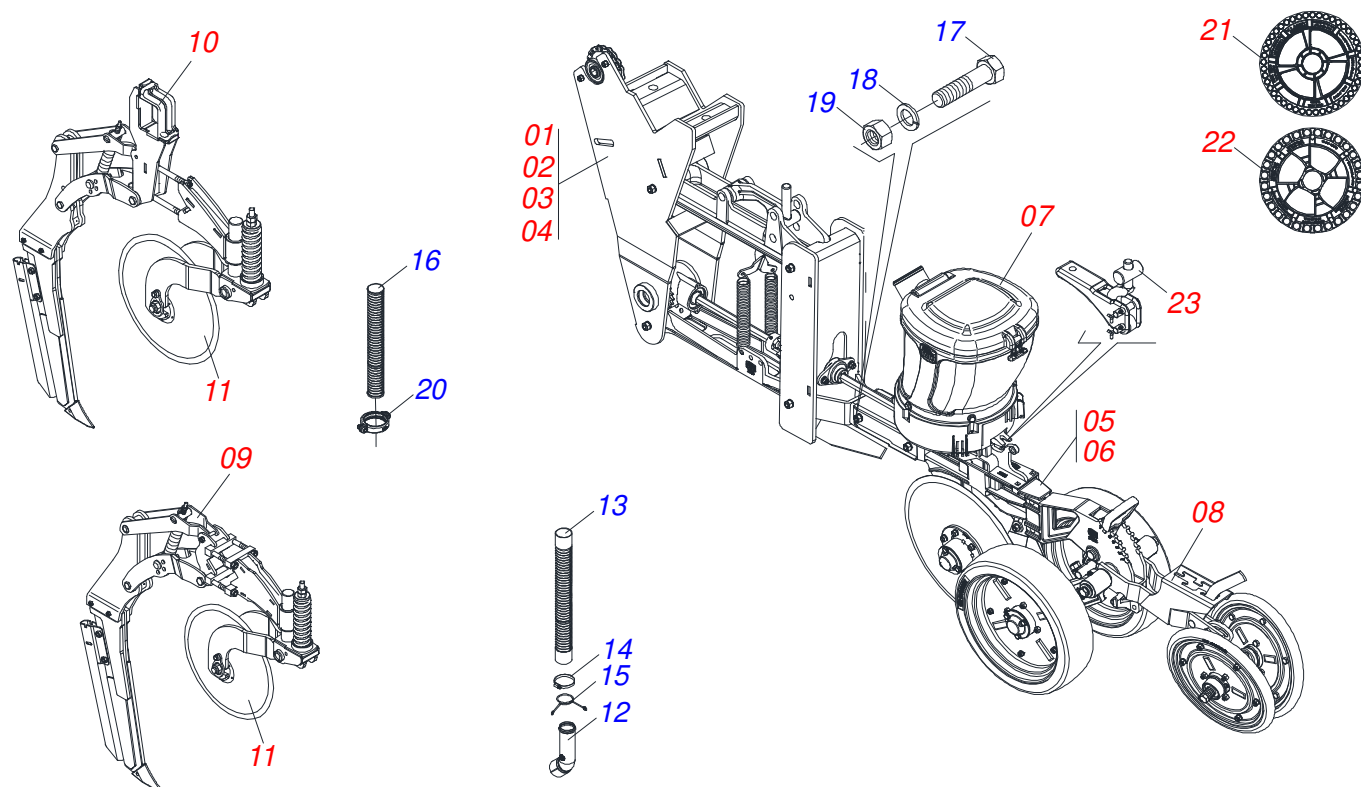


Item	Code	Description	See page	QT
01	0501059362	LONG SEED ROW FRONT	43	01
02	0501059350	LONG FRONT SEED ROW	45	01
03	0501059349	SHORT SEED ROW FRONT	46	01
04	0501059361	SHORT SEED ROW FRONT	47	01
05	0511052319	RIGHT REAR SEED ROW	48	01
05.	0511051783	RIGHT REAR SEED ROW TITANIUM	52	05
06	0511052320	REAR LEFT ROW SEED TITANIUM	53	01
06.	0511051782	LEFT REAR SEED ROW	55	04
07	0521050096	SEED HOPPER SYSTEM (CSU)	56	01
08	0521045198	PRESS WHEELS	58	01
08.	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	64	09
08..	0521051424	WHEEL SYSTEM DEPTH/COMPACTOR QUICK ADJUSTMENT		01
09	0511053825	SEMI-ASSEMBLED SHORT FERTILIZER LINE	69	01
10	0511053826	SEMI-ASSEMBLED LONG FERTILIZER LINE	70	01
11	0511048339	24" BLADE DISC ASSY	71	01
12	0503031050	CURVED CONDUCTOR		07
13	0503031145	2" X 2" X 20" HOSE		07
14	0503010246	CLAMP		07
15	0503031076	2" HOSE CLAMP		14
16	0571011730	SEED CONDUCTOR 3" X 1500		07
17	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		14
18	0503010019	1/2" SPRING WASHER		14
19	0503010060	1/2" NUT		14
20	0521050525	FIXER FERTILIZER CONDUCTOR	72	14
21	0503062066	DISC SET WITH CORN RING	73	07
22	0503062067	DISC SET / RING SOY 90F TITANIUM	74	07
23	0511052024	FAST CLOSING SET	75	07

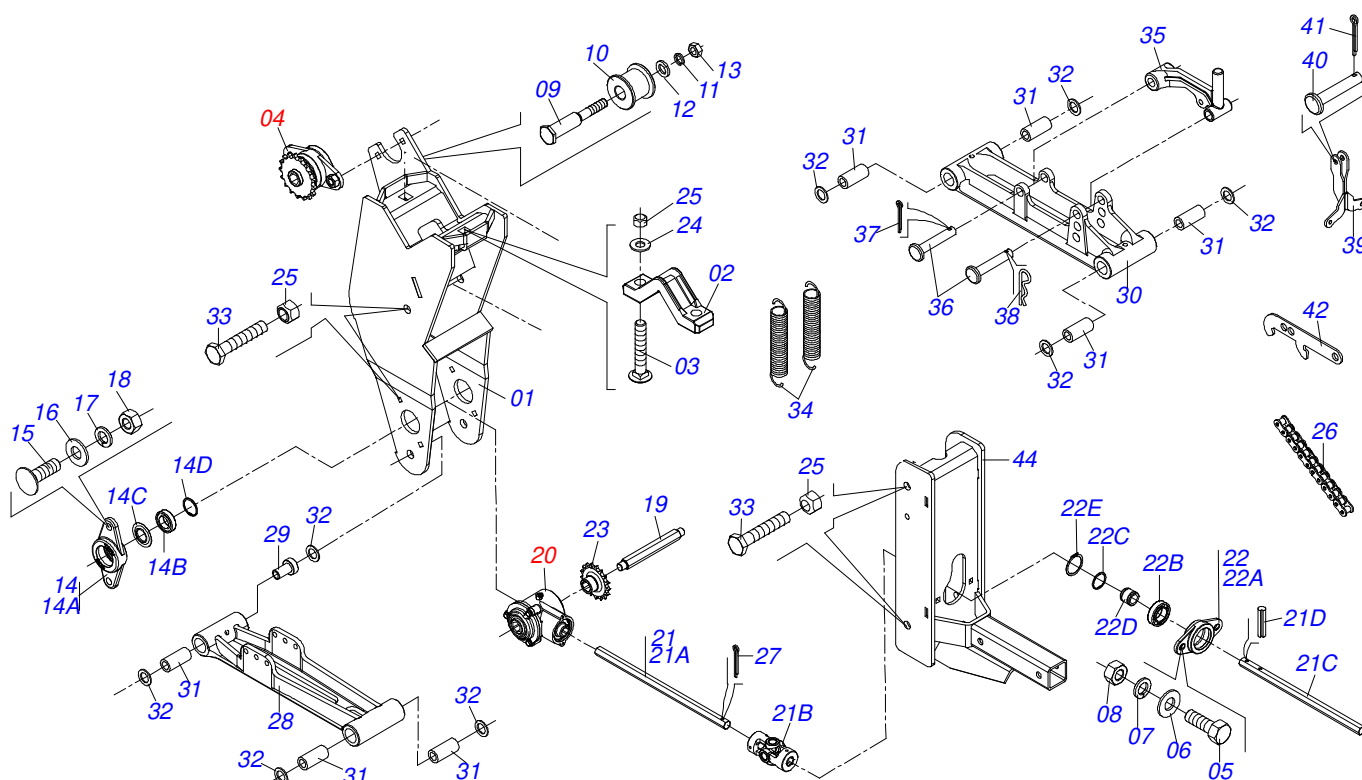


Item	Code	Description	See page	QT
001	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR		01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
014A	0502012718	BEARIN BODY		01
014B	0503012882	BEARING		01
014C	0503017011	SEAL RING		01
014D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	44	01
021	0501059327	UNIVERSAL JOINT AXLE		01
021A	0561014794	350 AXLE HEX		01
021B	0501056296	UNIVERSAL JOINT		01
021C	0561016631	HEX AXLE		01
021D	0503011855	0.2" X 1.8" SPRING PIN		02
022	0501059363	5/8" HEX AXLE BEARING		01
022A	0502011697	BEARING OF THE GEAR BOX		01

Item	Code	Description	See page	QT
022B	0503011410	ROLLER BEARING		01
022C	0503011105	SEAL RING		01
022D	0561014911	AXLE SLEVE GUIDES HEX		01
022E	0503010406	501025 CLAMPING RING (FOR AXLE)		02
023	0502012782	17Z GEAR WITH HEX HOLE		01
024	0501012140	FLAT WASHER		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02
026	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
027	0503010362	1/8 X 1.1/4 COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HITCH PIN CLIP		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0503010013	5/8" NUT		02
044	0521061428	CC TIRE ROW FRAME		01

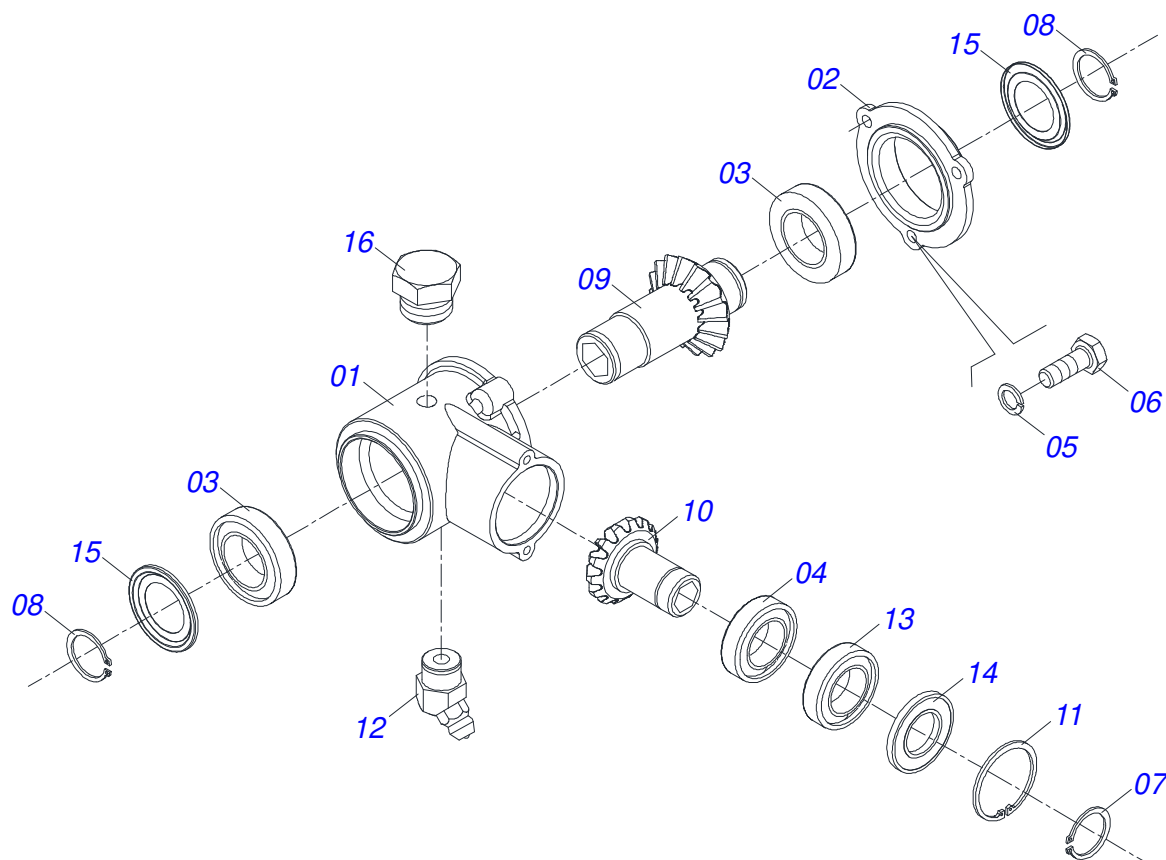

Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB	01	
02	0502012464	HOPPER TRANSMISSION COVER	01	
03	0503016995	6006 BALL BEARING	02	
04	0503015895	6005 Z BALL BEARING	01	
05	0503010143	1/4" SPRING WASHER	03	
06	0503011378	M6X1X16 C S 8.8 ZN BOLT	03	
07	0503010406	501025 CLAMPING RING (FOR AXLE)	01	
08	0503010707	501030 CLAMPING RING (FOR AXLE)	02	
09	0502040856	CONICAL GEAR	01	
10	0502040857	CONICAL GEAR	01	
11	0503011105	SEAL RING	01	
12	0503010003	1845 GREASE FITTING	01	
13	0503011409	6005 Z BALL BEARING	01	
14	0503017008	SEAL RING	01	
15	0503017007	SEAL RING	02	
16	0511017907	1/8" BSPT X 6 PLUG	01	

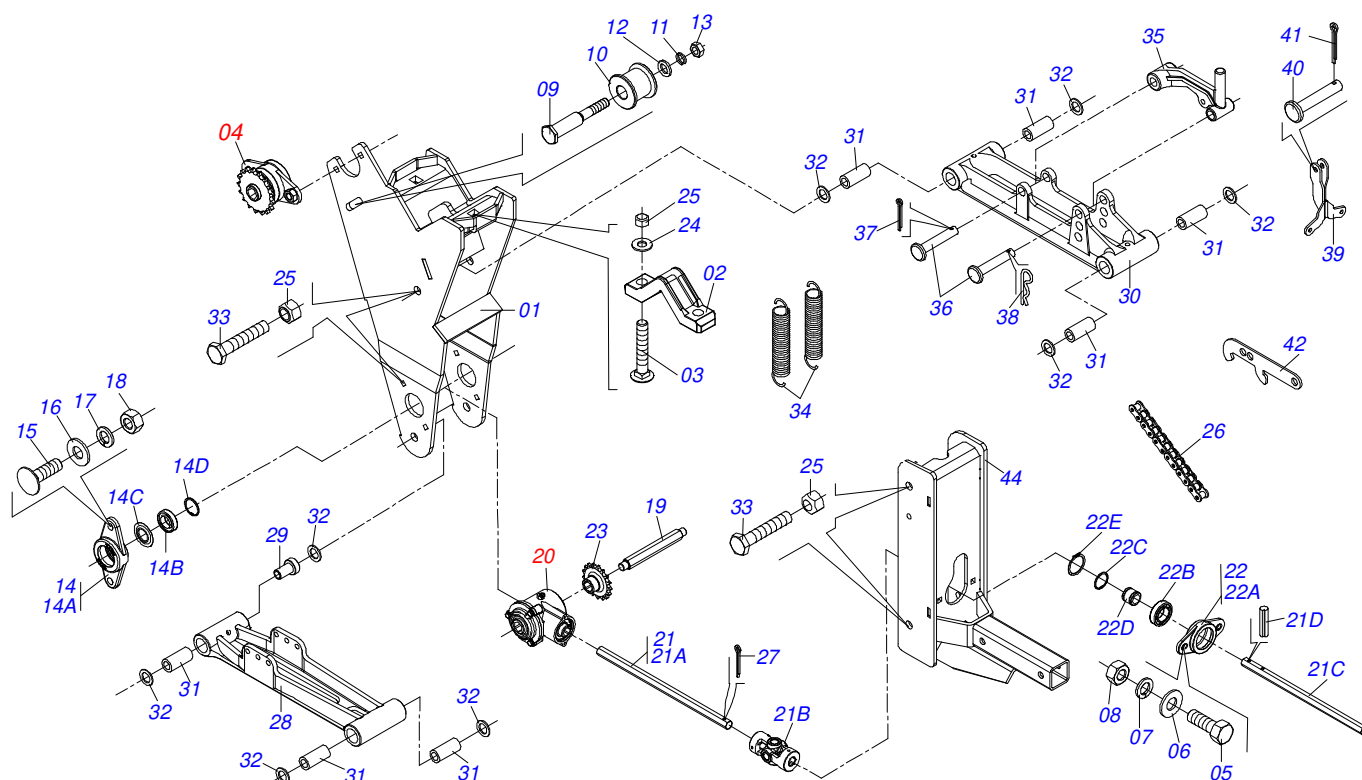


Item	Code	Description	See page	QT
001	0521064651	LEFT SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR		01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	44	01
021	0501059327	UNIVERSAL JOINT AXLE		01
022	0501059363	5/8" HEX AXLE BEARING		01
022A	0502011697	BEARING OF THE GEAR BOX		01
022B	0503011410	ROLLER BEARING		01
022C	0503011105	SEAL RING		01
022D	0561014911	AXLE SLEVE GUIDES HEX		01
022E	0503010406	501025 CLAMPING RING (FOR AXLE)		02
023	0502012782	17Z GEAR WITH HEX HOLE		01
024	0501012140	FLAT WASHER		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02
026	0503013114	40-1 CHAIN X 89 LINK + MENDING		01

LONG FRONT SEED ROW

0501059350

Item	Code	Description	See page	QT
027	0503010362	1/8 X 1.1/4 COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HITCH PIN CLIP		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0503010013	5/8" NUT		02
044	0521061428	CC TIRE ROW FRAME		01

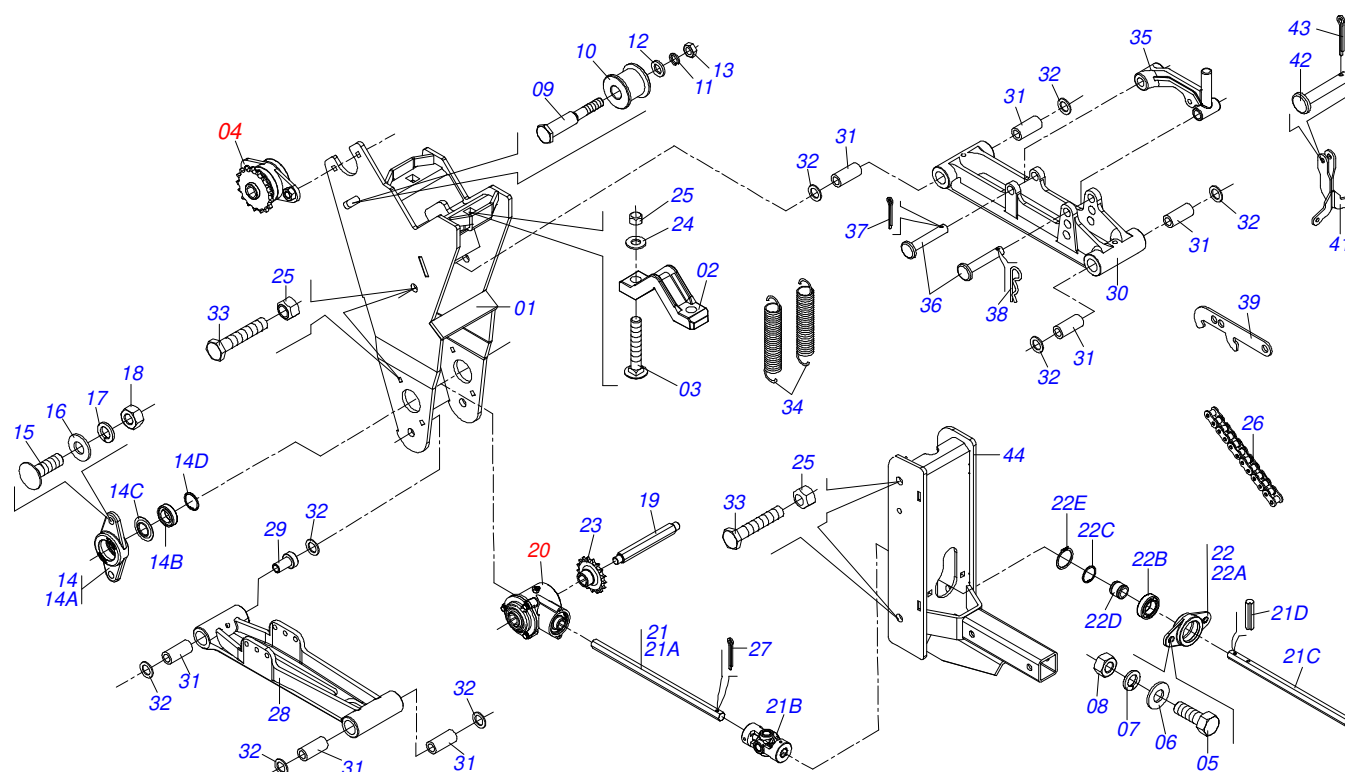


Item	Code	Description	See page	QT
001	0521064651	LEFT SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR		01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
014A	0502012718	BEARIN BODY		01
014B	0503012882	BEARING		01
014C	0503017011	SEAL RING		01
014D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	44	01
021	0501059326	UNIVERSAL JOINT AXLE		01
021A	0561014794	350 AXLE HEX		01
021B	0501056296	UNIVERSAL JOINT		01
021C	0561016322	5/8" HEX AXLE		01
021D	0503011855	0.2" X 1.8" SPRING PIN		02
022	0501059363	5/8" HEX AXLE BEARING		01
023	0502012782	17Z GEAR WITH HEX HOLE		01

SHORT SEED ROW FRONT


0501059349

Item	Code	Description	See page	QT
024	0501012140	FLAT WASHER		02
027	0503010362	1/8 X 1.1/4 COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HITCH PIN CLIP		01
039	0561019032	SEED FERTIL ROW LOCK		01
040	0503010013	5/8" NUT		02
041	0521061850	SPRING UPPER FIXER		01
042	0521010773	0.37" X 1.18" COUPLING SHAFT		01
043	0503010140	1/8" X 3/4" COTTERPIN		01
044	0521061427	SHORT SEED ROW FRAME		01
045	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
046	0503012412	5/8 UNC SELF LOCKING NUT		02
047	0503012412	5/8 UNC SELF LOCKING NUT		04

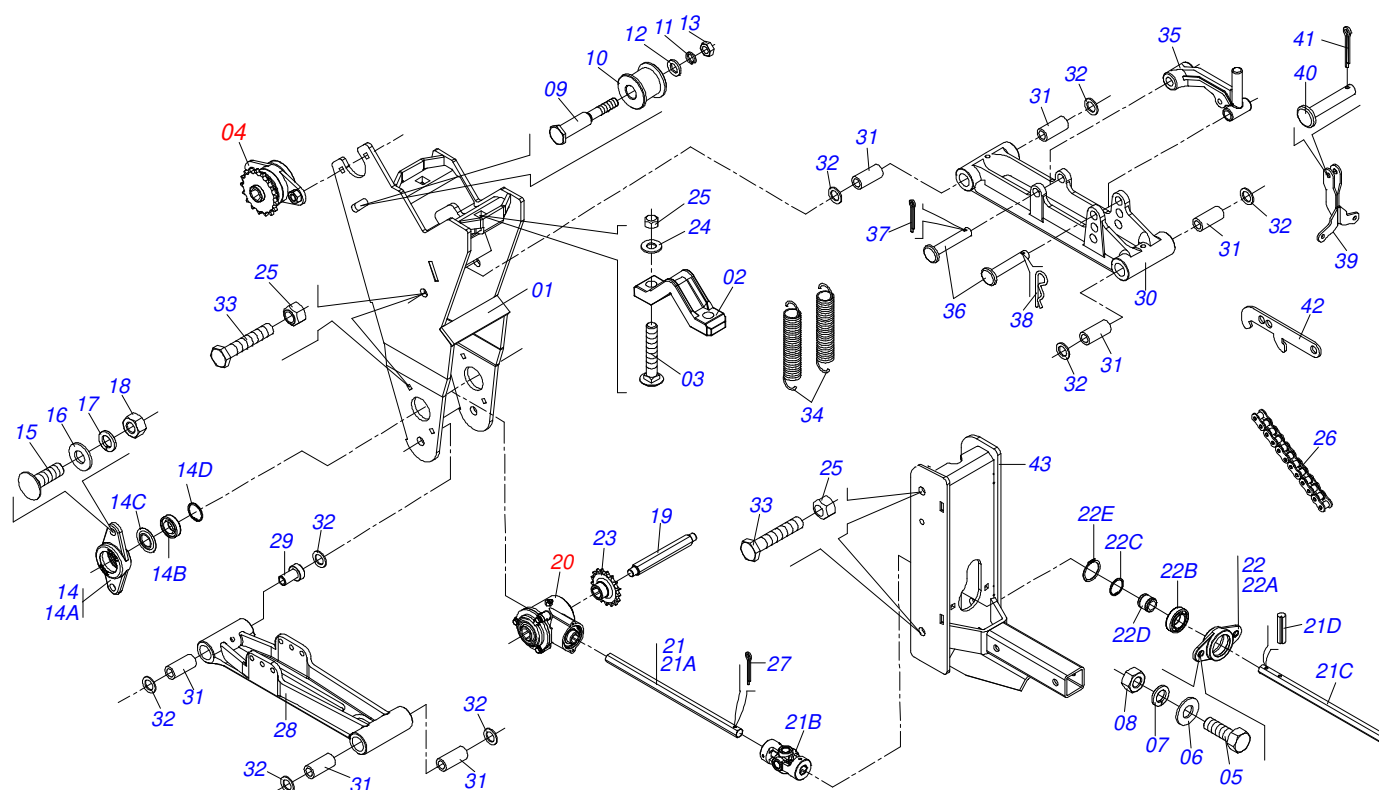


Item	Code	Description	See page	QT
001	0521064653	RIGH SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR		01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	44	01
021	0501059326	UNIVERSAL JOINT AXLE		01
022	0501059363	5/8" HEX AXLE BEARING		01
023	0503010365	NUT		02
024	0501010694	FLAT WASHER		02
025	0503010179	LOCK WASHER		02
026	0503010337	5/16" NUT		02
027	0503010362	1/8 X 1.1/4 COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08


Item	Code	Description	See page	QT
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HITCH PIN CLIP		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0521061427	SHORT SEED ROW FRAME		01
044	0503010013	5/8" NUT		02
045	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
046	0503012412	5/8 UNC SELF LOCKING NUT		02
047	0503012412	5/8 UNC SELF LOCKING NUT		04
048	0501012140	FLAT WASHER		02
049	0502012782	17Z GEAR WITH HEX HOLE		01

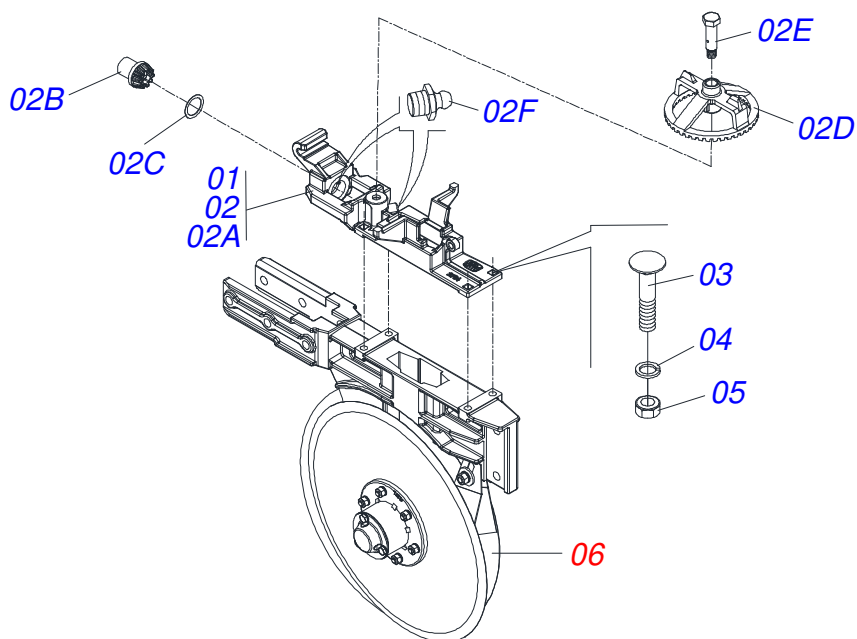


Item	Code	Description	See page	QT
01	0511052319	RIGHT REAR SEED ROW	48	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059631	DDD SEED 15 X 15 RIGHT	49	01

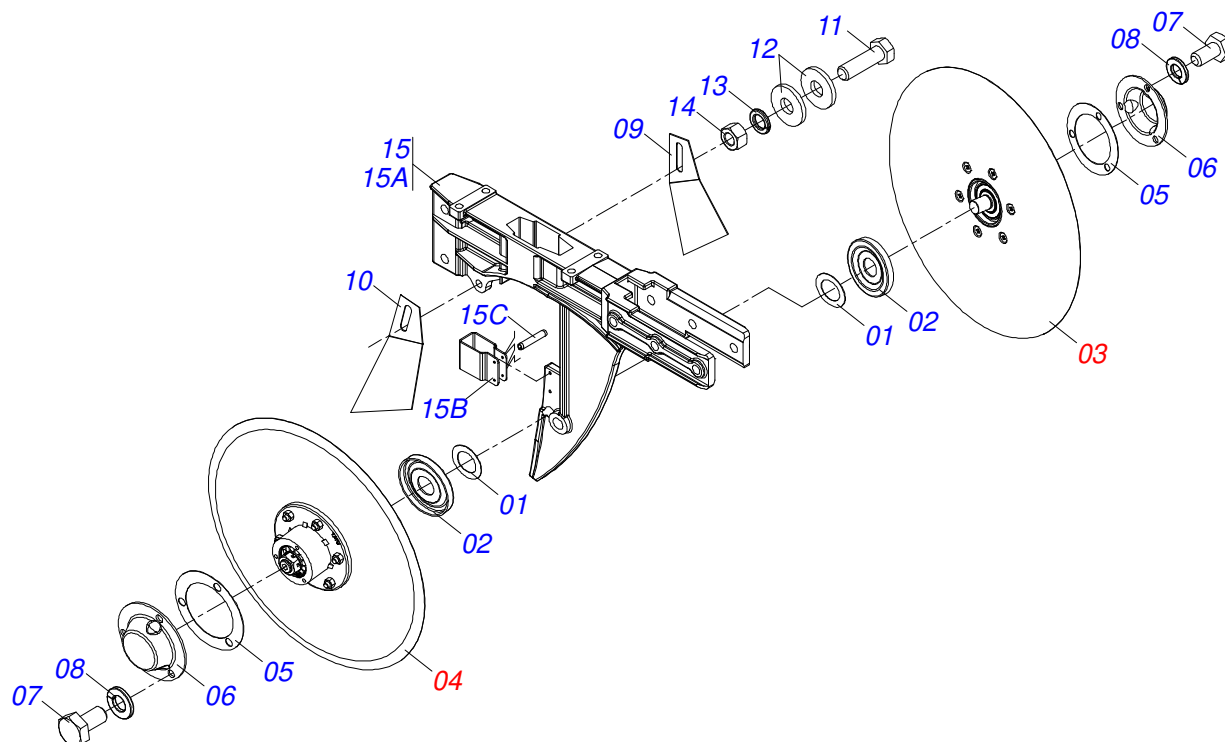


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	15" RIGHT OPENING DISC HUB	51	01
04	0501054168	15" LEFT OPENING DISC HUB	50	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052301	SUPPORT DDD 15 RIGHT		01
15A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

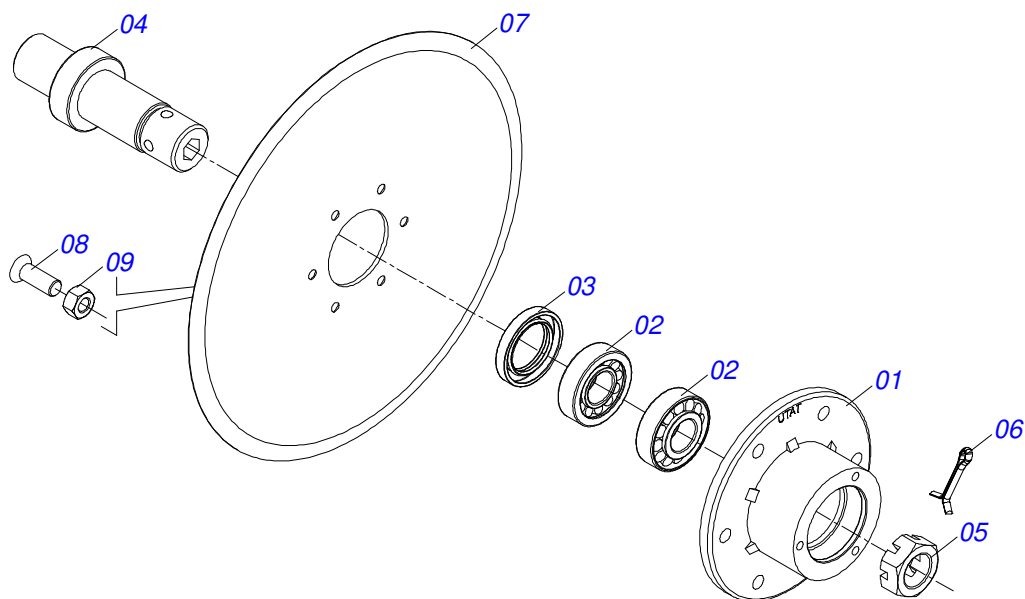


Item	Code	Description	See page	QT
01	0502011930	OPENING DISCS HUB		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

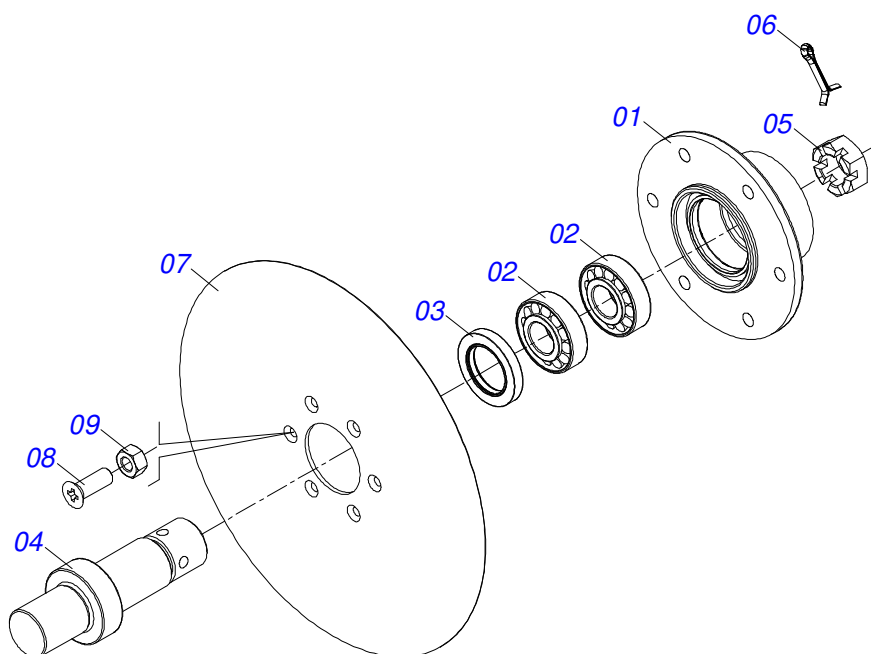


Item	Code	Description	See page	QT
01	0502011930	OPENING DISCS HUB		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT DOUB DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

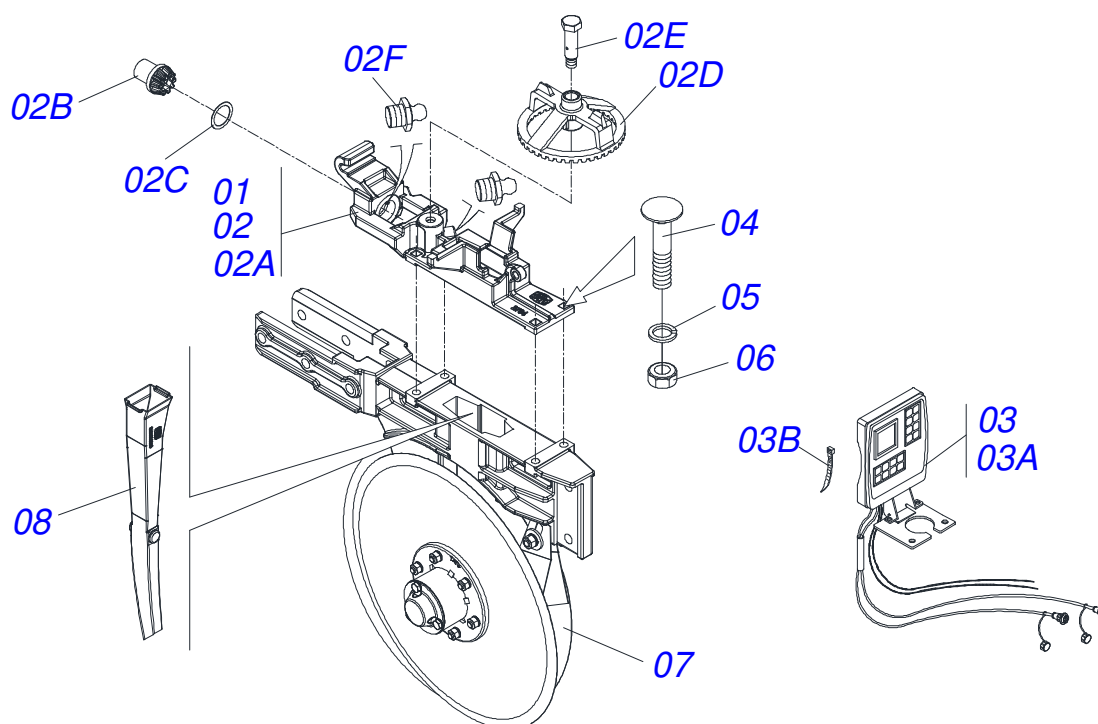


Item	Code	Description	See page	QT
01	0511051783	RIGHT REAR SEED ROW TITANIUM	52	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0501058972	ASSEMBLY SENSOR ELECTRONIC		01
03A	0503015218	SENSOR FOTOELE PM 400		01
03B	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03
04	0503015920	3/8" UNC X 1.3/4" BOLT		04
05	0503011443	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0501059631	DDD SEED 15 X 15 RIGHT	49	01
08	0503033672	NOZZLE WITHOUT TITANIUM		01

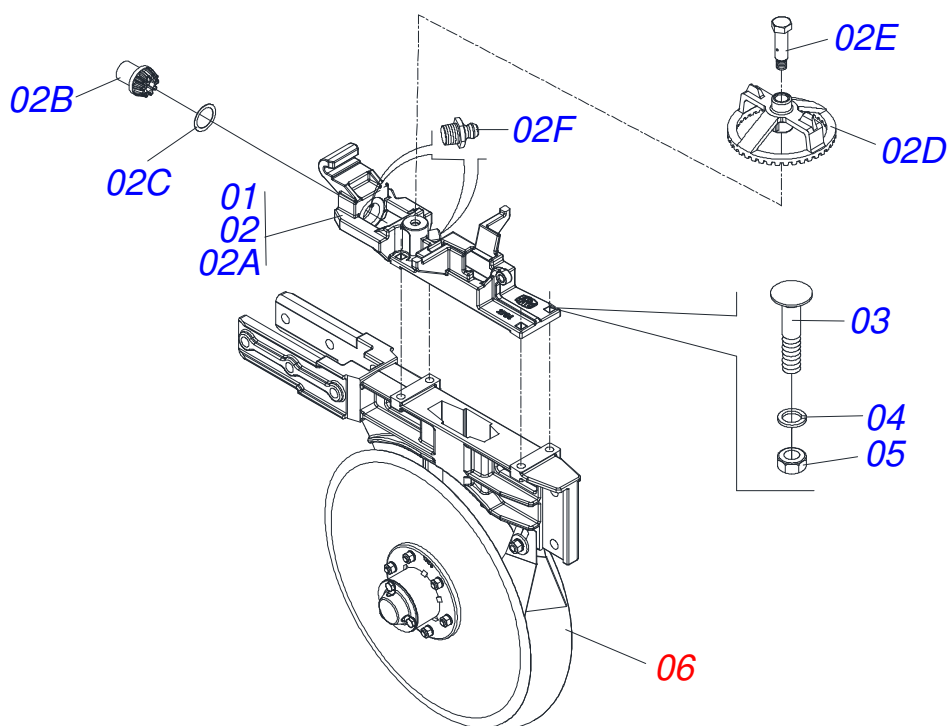


Item	Code	Description	See page	QT
01	0511052320	REAR LEFT ROW SEED TITANIUM	53	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0502012639	12Z LOWER CONICAL GEAR		01
02C	0501013354	FLAT WASHER		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059632	DDD SEED 15X15 LEFT	54	01

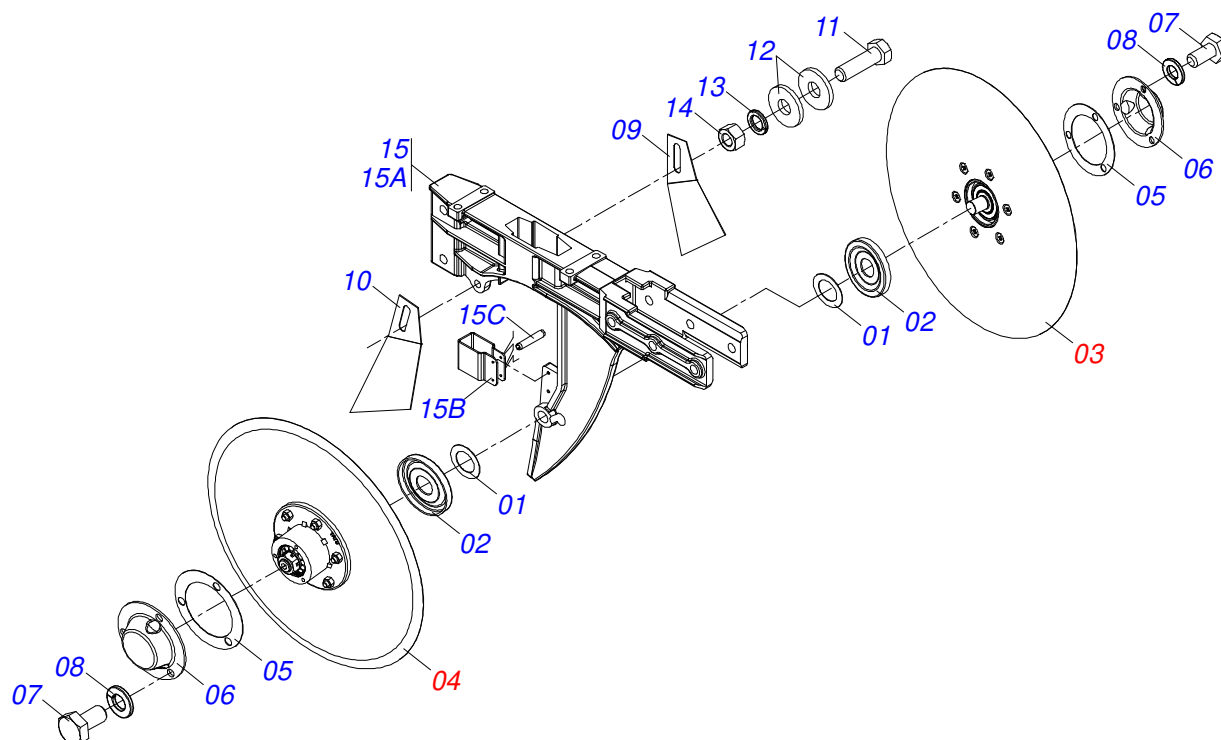


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	15" RIGHT OPENING DISC HUB	51	01
04	0501054168	15" LEFT OPENING DISC HUB	50	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052302	LH SUPPORT DDD GUIDE		01
15A	0561015592	LEFT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

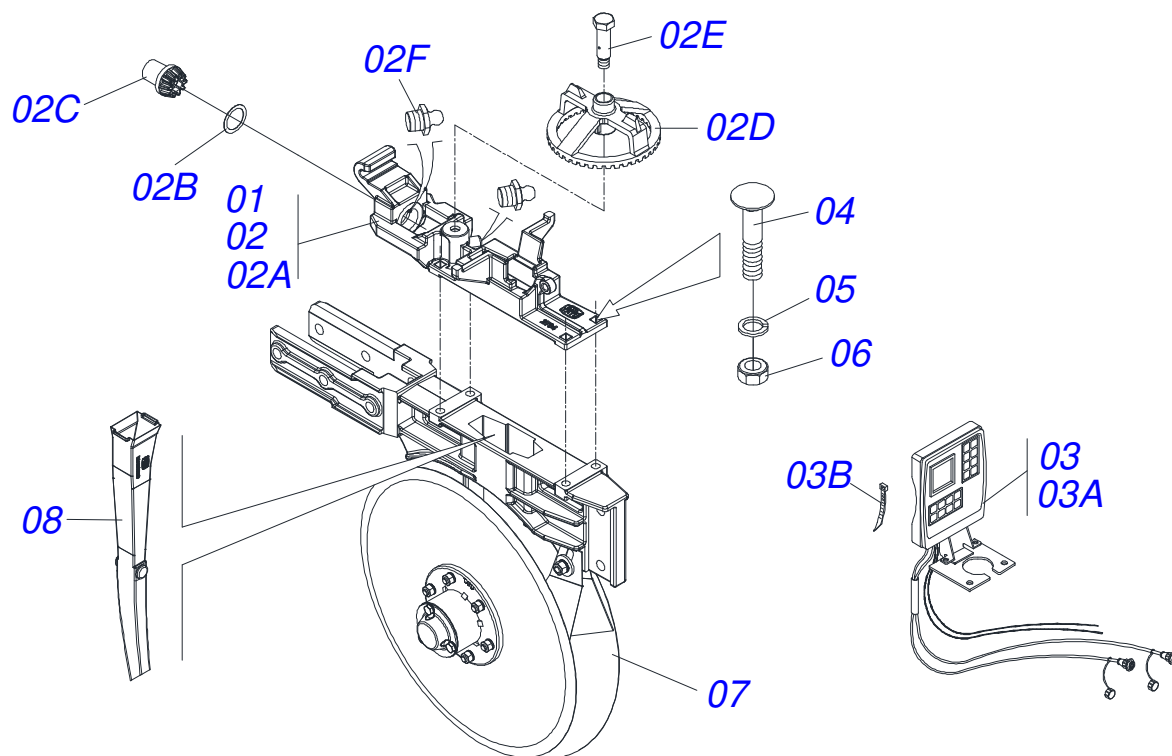


Item	Code	Description	See page	QT
01	0511051782	LEFT REAR SEED ROW	55	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0501058972	ASSEMBLY SENSOR ELECTRONIC		01
03A	0503015218	SENSOR FOTOELE PM 400		01
03B	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03
04	0503015920	3/8" UNC X 1.3/4" BOLT		04
05	0503011443	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0501059632	DDD SEED 15X15 LEFT	54	01
08	0503033672	NOZZLE WITHOUT TITANIUM		01

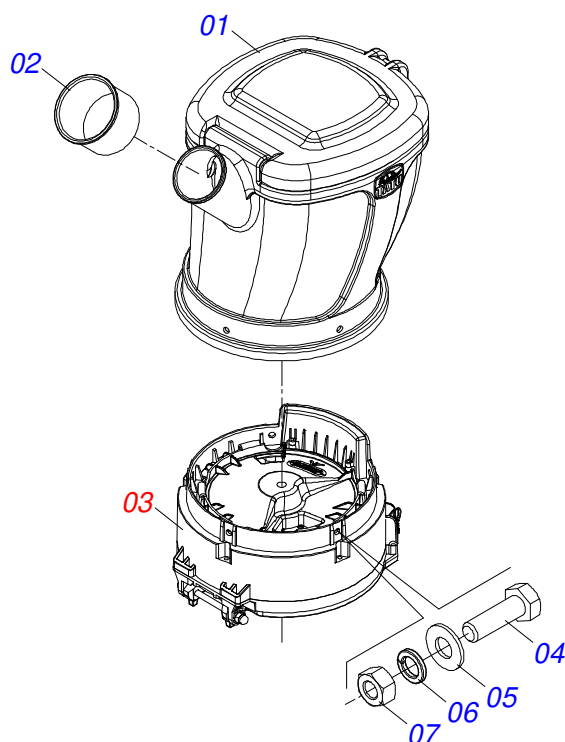

Item	Code	Description	See page	QT
01	0521050118	3" NOZZLE SEED HOPPER		01
02	0581014295	FIXING SLEEVE		01
03	0511052058	SEED SYSTEM TITANIUM	57	01
04	0503010358	5/16" X 5/8" BOLT		05
05	0501010694	FLAT WASHER		05
06	0503010179	LOCK WASHER		05
07	0503010337	5/16" NUT		05

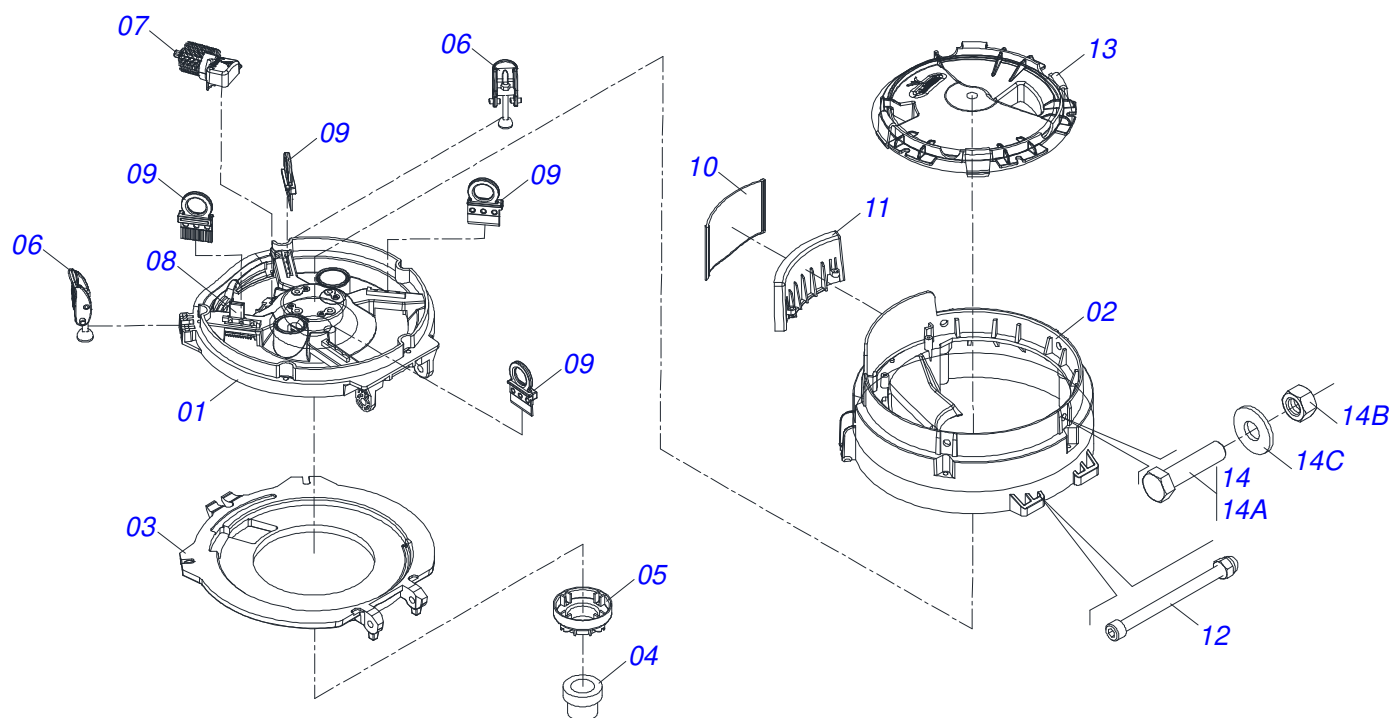

Item	Code	Description	See page	QT
01	0503062031	BASE SET		01
02	0503062032	NECK TITANIUM ASSY		01
03	0503062033	OPPOSITE BASE SET		01
04	0503062034	CENTRAL ADAPTER SET		01
05	0503062035	SET FALSE ADAPT CENTER		01
06	0503062036	SUBSET ASSY LOCK BASE		01
07	0503062037	SUBSET ESCOVAFLEX ASSY		01
08	0503062038	ASSY ANTI-LEAP		01
09	0503062039	POLIFLOW TITANIUM ASSY		01
09.	0503016279	POLIFLOW TITANIUM ASSY		01
10	0503062040	DISPLAY ASSY TITANIUM 1050010		01
11	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
12	0503062042	SET BOLT ARTICULADOR		01
13	0503062043	ASSY LIMIT WEIGHT		01
14	0503062044	ASSEMBLY SEED HOPPER SET		01
14A	0503016285	BOLT		05
14B	0503016286	HEX NUT		05
14C	0503016287	FLAT WASHER		05

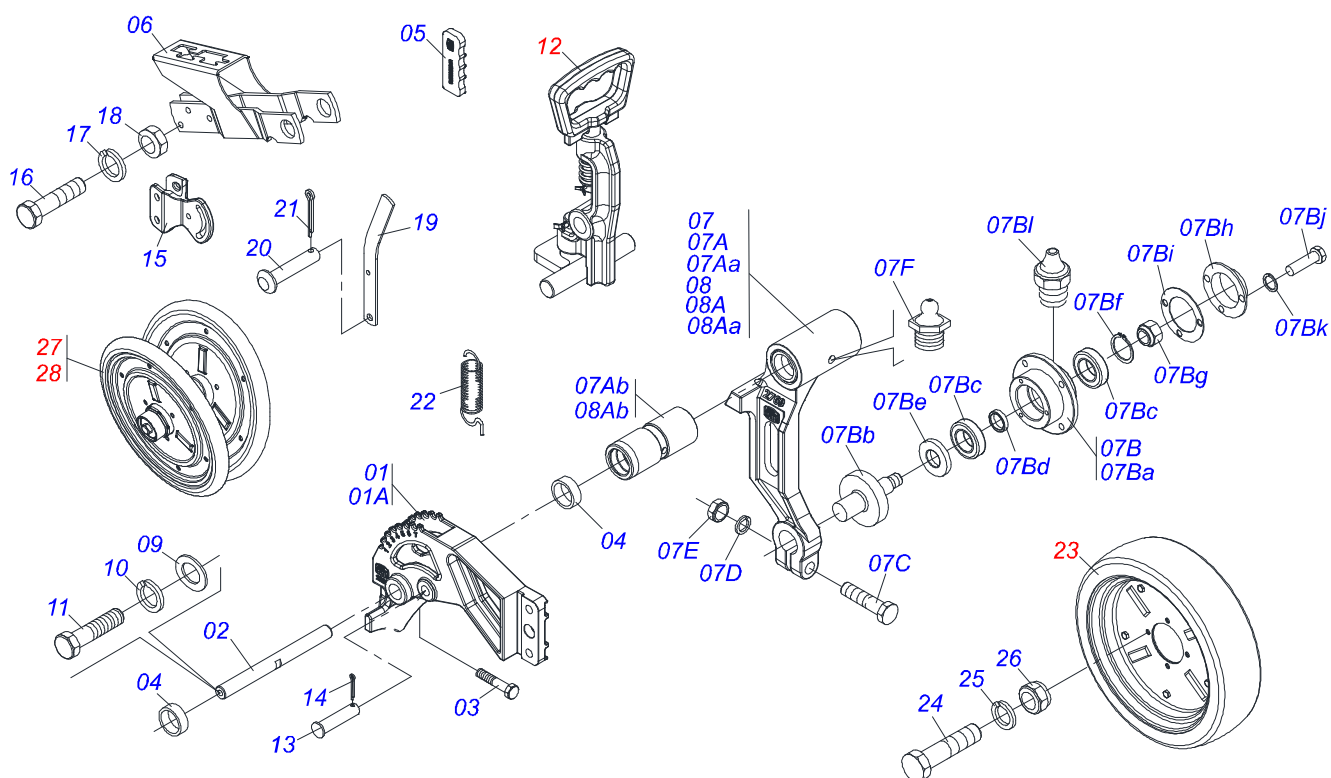


Item	Code	Description	See page	QT
01	0511056691	CONTROL DEPTH SUPPORT		01
01A	0502012282	DEPTH CONTROL SUPPORT		01
02	0571016886	DEPTH WHEEL AXLE		01
03	0503810256	SCREW		01
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
05	0503033942	COVER REGULATORY WHEEL		01
06	0521064073	REGULACION WHEEL COMPACTOR		01
07	0511056692	DEPTH WHEEL RIGHT ARM		01
07A	0501110796	DEPTH CONTROL RIGHT ARM		01
07Aa	0502012769	DEPTH WHEEL RIGHT ARM		01
07Ab	0571016883	36,04 X 25,62 X 85 NYLON SLEEVE		01
07B	0501052627	ASSY DEPTH WHEEL HUB	67	02
07Ba	0502011907	DEPTH CONTROL WHEEL HUB		02
07Bb	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		02
07Bc	0503010269	6204 BALL BEARING		04
07Bd	0501013636	SPACING SLEEVE		02
07Be	0503010689	SEAL 00763-BR		02
07Bf	0503011105	SEAL RING		02
07Bg	0503010878	5/8" SELF ALIGNING NUT		02
07Bh	0521019178	COVER DEPTH		02
07bi	0503030757	2.9" X 2" X 0.02" JOINT		02
07Bj	0503014729	1/4" UNF X 1/2" BOLT		06
07Bk	0503011441	SPRING WASHER		06
07Bl	0503010691	1/4" GREASE FITTING		02
07C	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07D	0503011440	SPRING WASHER		02
07E	0503010060	1/2" NUT		02
07F	0503010002	1800 GREASE FITTING		02
08	0511056693	LH ARM DEPTH CONTROL WHEEL		01
08A	0501110797	LEFT ARM WITH SLEEVE		01
08Aa	0502012770	DEPTH WHEEL LEFT ARM		01


PRESS WHEELS

0521045198


Item	Code	Description	See page	QT
08Ab	0571016883	36,04 X 25,62 X 85 NYLON SLEEVE		01
09	0571017749	FLAT WASHER		02
10	0503011440	SPRING WASHER		02
11	0503010311	1/2" X 1-1/4" BOLT		02
12	0501052297	DEPTH WHEELS REGULATOR ASSY	59	01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010257	1/8" X 1" COTTERPIN		01
15	0502012116	PRESS WHEEL ADJUSTER		01
16	0503010849	3/8" X 1-1/2" BOLT		02
17	0503011443	3/8" SPRING WASHER		02
18	0503010026	3/8" NUT		02
19	0541016906	PRESS WHEELS REGULATOR BODY		01
20	0521010539	0.3" X 1.2" COUPLING SHAFT		01
21	0503010140	1/8" X 3/4" COTTERPIN		01
22	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
23	0501052538	DEPTH BAND WITH ARMS	63	02
24	0503010358	5/16" X 5/8" BOLT		08
25	0503010179	LOCK WASHER		08
26	0503013816	5/16" LOCKNUT		08
27	0511054333	COMPACT WHEEL RIGHT WITH BEARING	60	01
28	0511054334	COMPACT WHEEL LEFT WITH BEARING	61	01

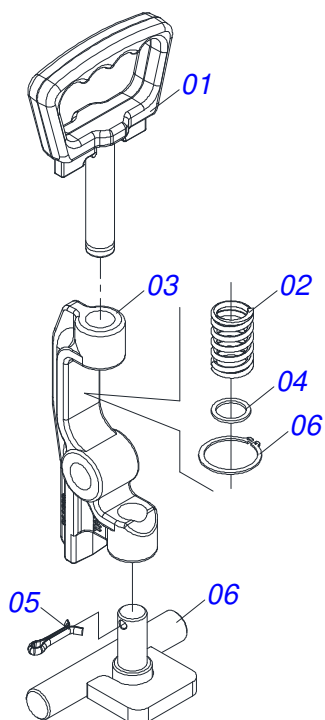


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	DEPTH CONTROL LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

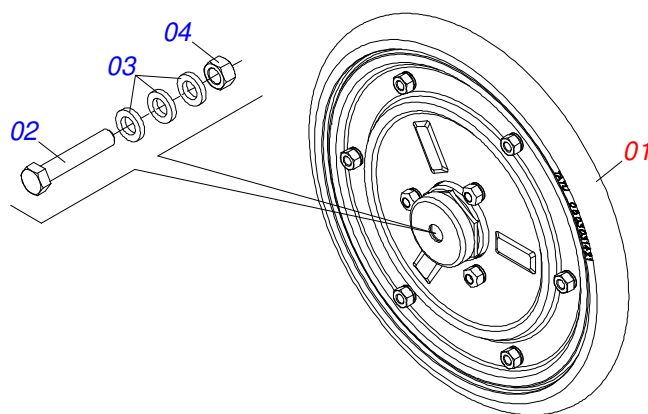


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	62	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

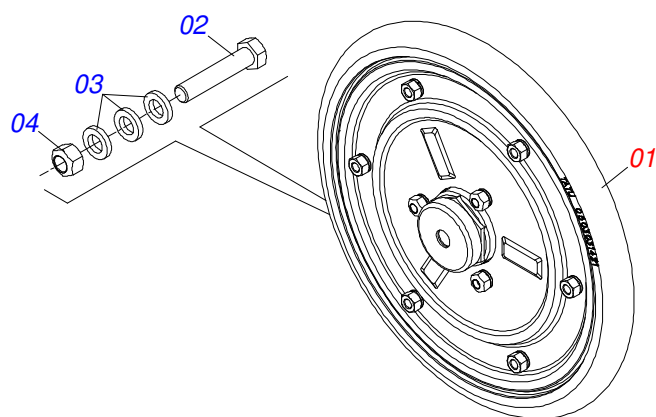


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	62	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

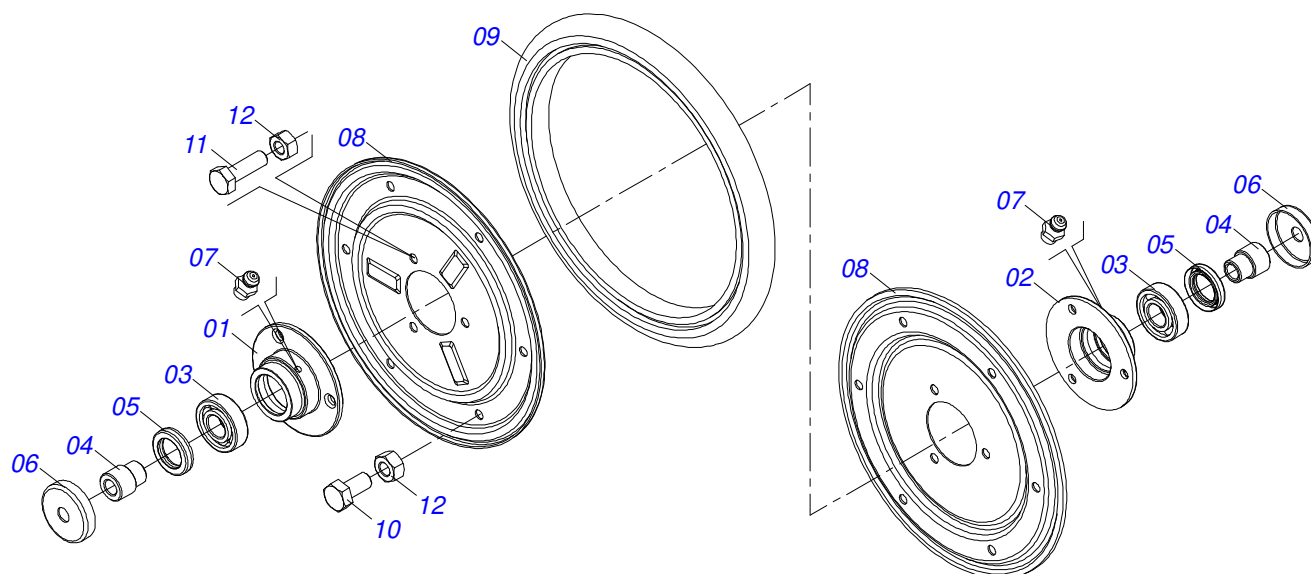


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

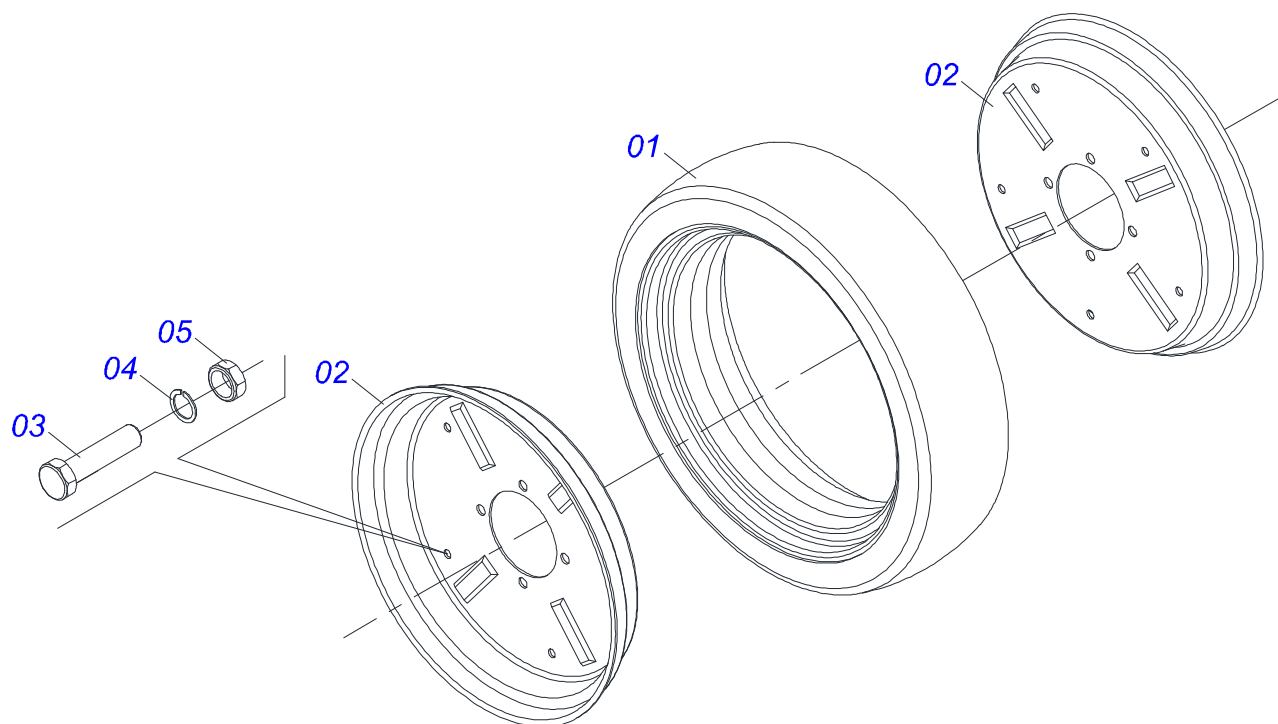


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

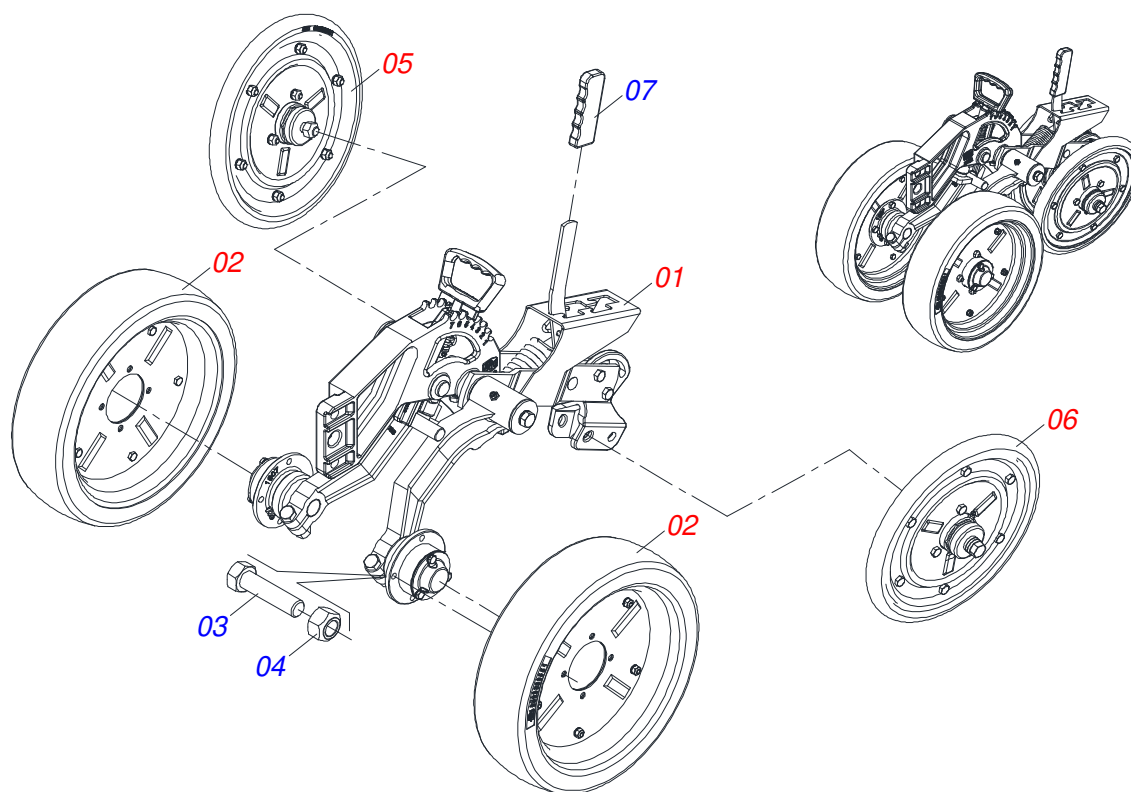


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	65	01
02	0501052538	DEPTH BAND WITH ARMS	63	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	60	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	61	01
07	0503033942	COVER REGULATORY WHEEL		01

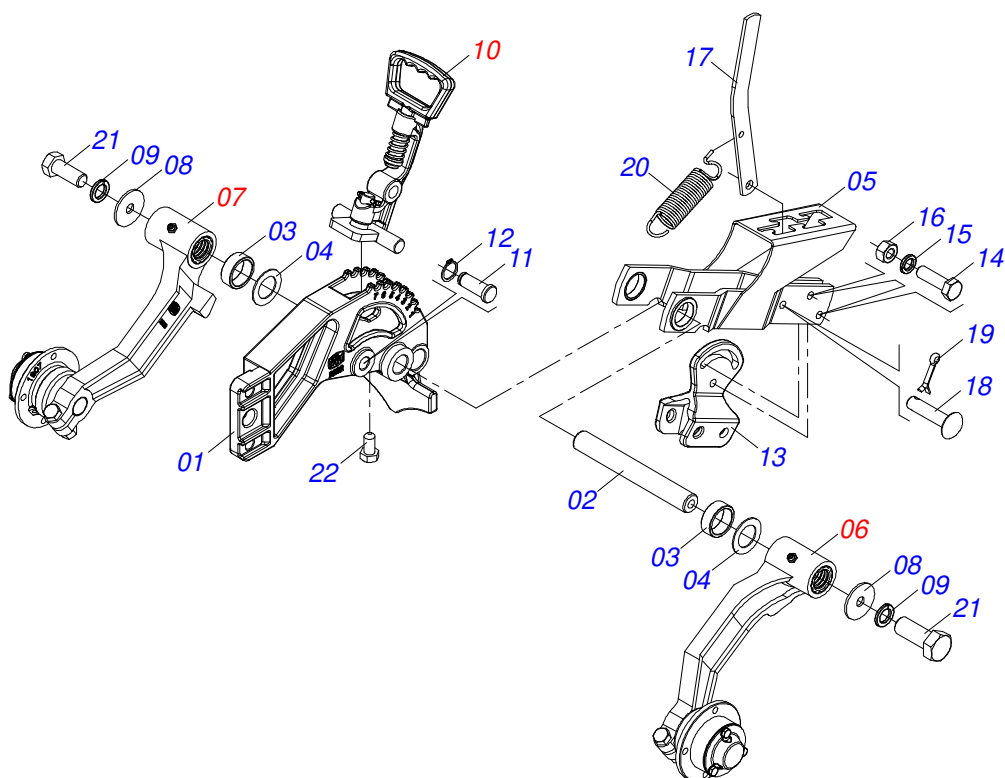


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	66	01
07	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	68	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	59	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	SCREWEW 3/8 UNC X 3/4		01

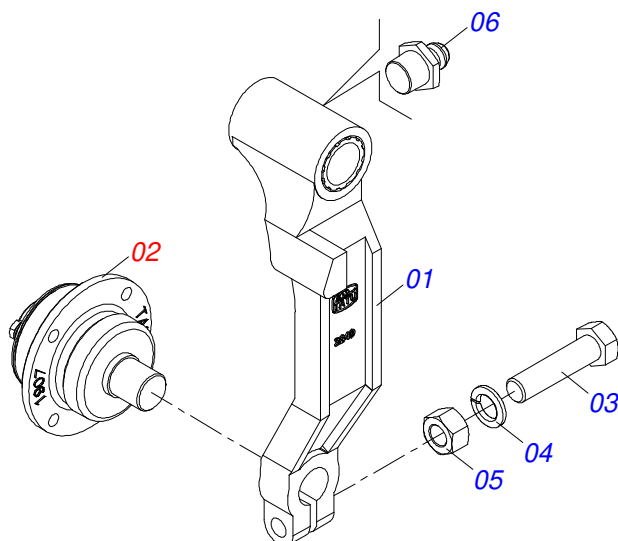


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL HUB	67	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01

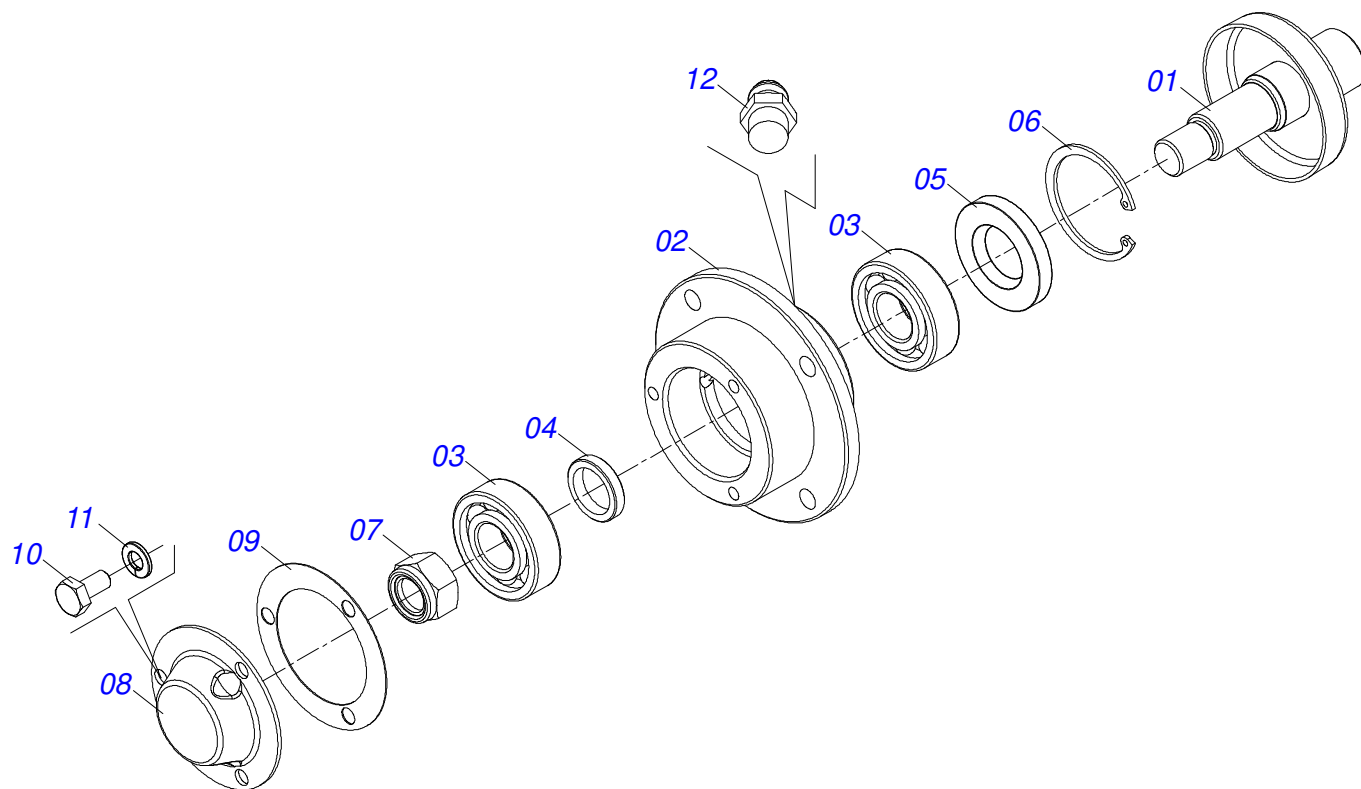

Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	COVER DEPTH		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

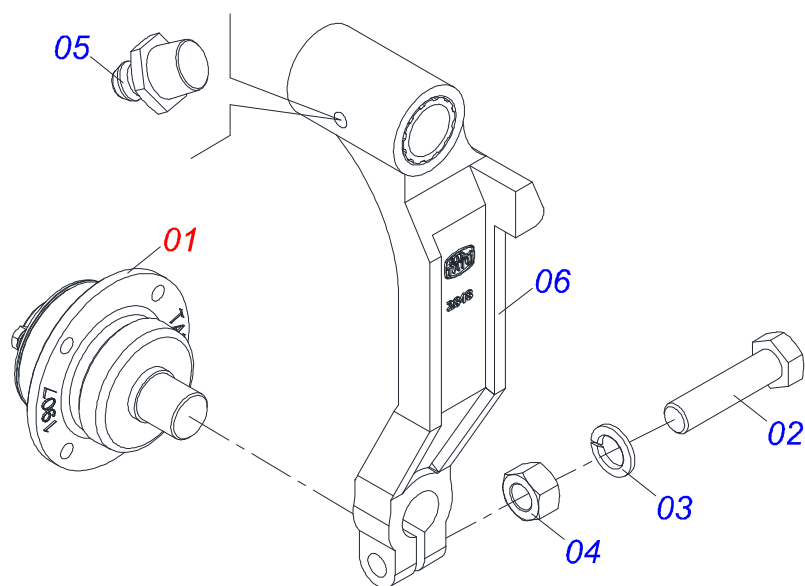


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL HUB	67	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

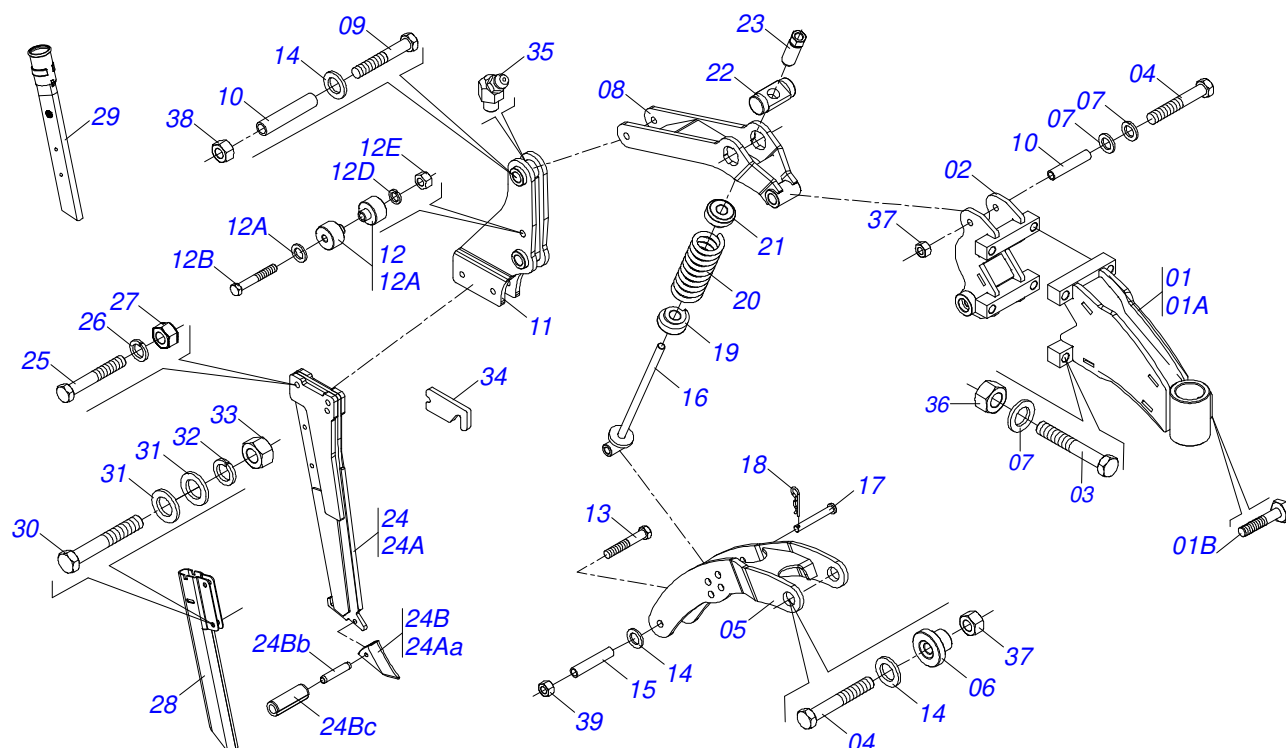

Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT	01	
001A	0521061326	BLADE DISC AXLE SUPPORT	01	
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN	02	
002	0521061407	ROW FERTILIZER SUPPORT	01	
003	0503011084	3/4" X 5" BOLT	04	
004	0501013233	5/8" X 2-3/4" BOLT	02	
005	0521063504	FERTILIZER ROW LOWER SUPPORT	01	
006	0531019990	BLADE D ARM ARTIC SLEEVE	02	
007	0511015098	FLAT WASHER	06	
008	0511063862	FERTILIZER ROW UPPER SUPPORT	01	
009	0501010163	5/8" X 4-1/2" BOLT	01	
010	0531016207	0.6" X 1" X 2.8" SLEEVE	01	
011	0511065837	FERTILIZER ROW REAR SUPPORT	01	
012	0501059640	BEATER LINE SET FERTILIZER	01	
012A	0561015611	BEATER SLEEVE	02	
012B	0503011123	BOLT	01	
012C	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN	02	
012D	0503010025	3/8" SPRING WASHER	01	
012E	0503010026	3/8" NUT	01	
013	0501010452	5/8" X 5" BOLT	02	
014	0531016031	1/2" SPRING WASHER	04	
015	0531016207	0.6" X 1" X 2.8" SLEEVE	02	
016	0521063505	GUIDE SPRING LINE FERTILIZER	01	
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI	01	
018	0503030168	HITCH PIN CLIP	01	
019	1902020393	SPRING UPPER SUPPORT	01	
020	0503031450	2.7" X 9.2" X 0.03" SPRING	01	
021	1902020393	SPRING UPPER SUPPORT	01	
022	0521011158	SPRING LOCKNUT	01	
023	0571012375	VARON REGULATOR SPINDLE	01	
024	0501110640	SCARIFIER SPINDLE	01	

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2" NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
032	0503010025	3/8" SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8 UNC SELF LOCKING NUT		02

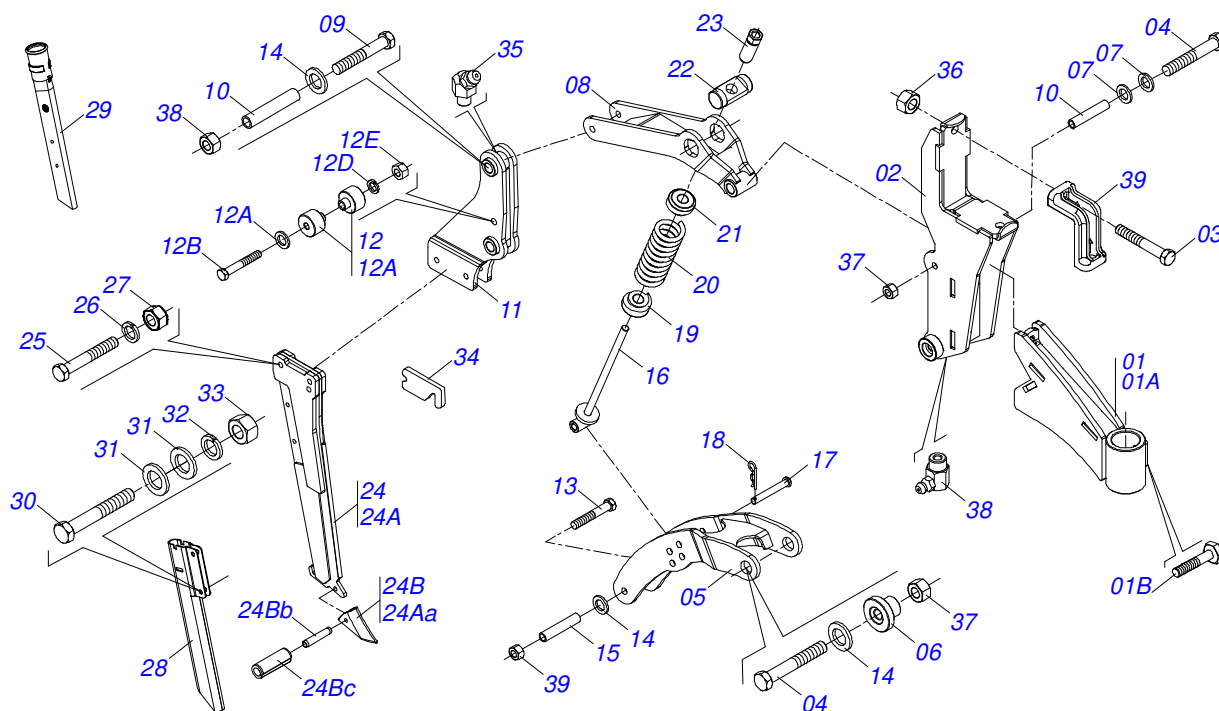


Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT		01
001A	0521061326	BLADE DISC AXLE SUPPORT		01
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
002	0521063521	ROW FERTILIZER SUPPORT		01
003	0501010125	3/4" X 2-1/2" BOLT		02
004	0501013233	5/8" X 2-3/4" BOLT		02
005	0521063504	FERTILIZER ROW LOWER SUPPORT		01
006	0531019990	BLADE D ARM ARTIC SLEEVE		02
007	0511015098	FLAT WASHER		06
008	0511063862	FERTILIZER ROW UPPER SUPPORT		01
009	0501010163	5/8" X 4-1/2" BOLT		01
010	0531016207	0.6" X 1" X 2.8" SLEEVE		01
011	0511065837	FERTILIZER ROW REAR SUPPORT		01
012	0501059640	BEATER LINE SET FERTILIZER		01
012A	0561015611	BEATER SLEEVE		02
012B	0503011123	BOLT		01
012C	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
012D	0503010025	3/8" SPRING WASHER		01
012E	0503010026	3/8" NUT		01
013	0501010452	5/8" X 5" BOLT		02
014	0531016031	1/2" SPRING WASHER		04
015	0531016207	0.6" X 1" X 2.8" SLEEVE		02
016	0521063505	GUIDE SPRING LINE FERTILIZER		01
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
018	0503030168	HITCH PIN CLIP		01
019	1902020393	SPRING UPPER SUPPORT		01
020	0503031450	2.7" X 9.2" X 0.03" SPRING		01
021	1902020393	SPRING UPPER SUPPORT		01
022	0521011158	SPRING LOCKNUT		01
023	0571012375	VARON REGULATOR SPINDLE		01
024	0501110640	SCARIFIER SPINDLE		01

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2" NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
032	0503010025	3/8" SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8 UNC SELF LOCKING NUT		02
038	0503010004	1890 GREASE FITTING		01
039	0502012400	ROW FERTILIZER FIXER		01

24" BLADE DISC ASSY


0511048339

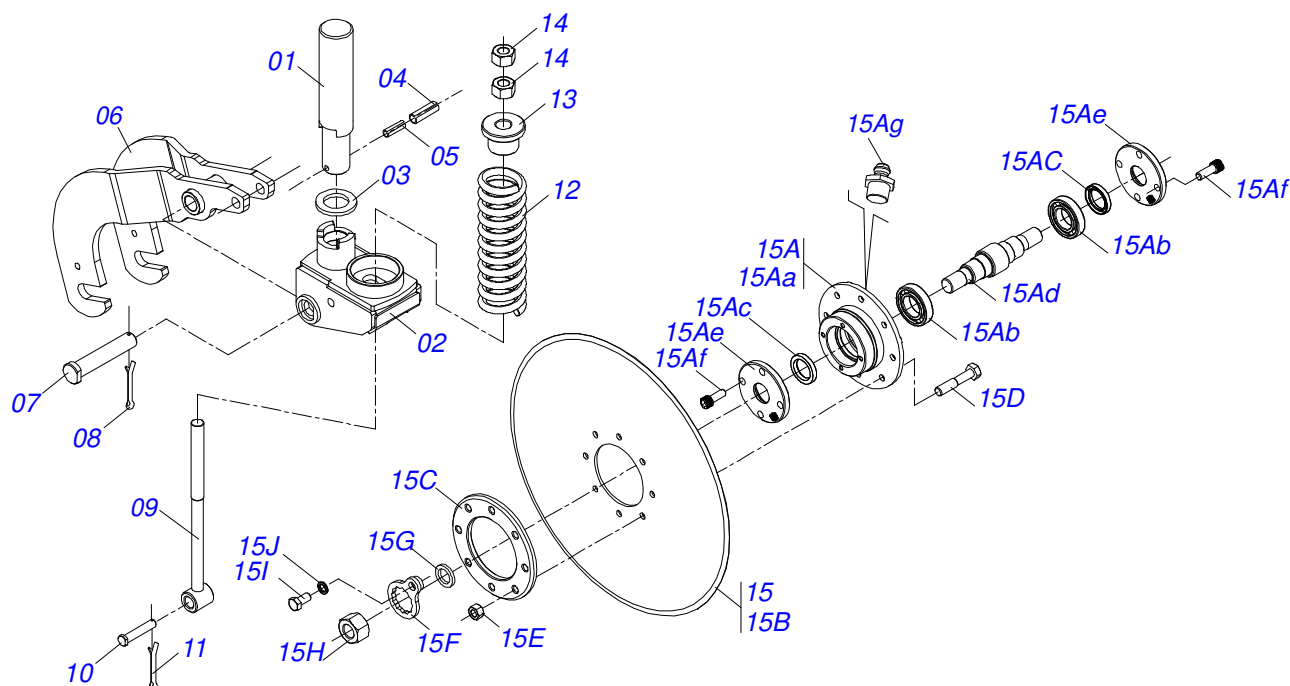


Item	Code	Description	See page	QT
01	0561015334	BLADE DISC AXLE ASSY		01
02	0521061328	SWIVEL BASE		01
03	0561015610	FLAT WASHER		01
04	0503010361	SPRING PIN		01
05	0503010756	0.2" X 2.4" SPRING PIN		01
06	0521062418	BLADE DISC FORK		01
07	0561015339	BLADE DISC AXLE ASSY		01
08	0503010010	1/4" X 2.1/2" COTTERPIN		01
09	0501069390	SPRING ROD		01
10	0561019515	COUPLING SHAFT		01
11	0503010571	1/4" X 1.1/2 COTTERPIN		01
12	0503031346	COMPRESSION SPRING		01
13	0561015400	BLADE DISC SPRING GUIDE		01
14	0503014018	1" NUT		01
15	0511050746	24" BLADE DISC ASSY		01
15A	0501057526	DISC HUB		01
15Aa	0502011478	DISC HUB		01
15Ab	0503011291	6209 BALL BEARING		02
15Ac	0503012106	00521-BR RETAINER		02
15Ad	0521012661	BLADE DISC AXLE HUB		01
15Ae	0502011477	BLADE DISC HOUSIG CP		02
15Af	0503010134	3/8" X 1" BOLT		08
15Ag	0503010002	1800 GREASE FITTING		01
15B	0603030044	24" X 0.2" FLAT PLAIN DISC		01
15C	0521011824	BLADE DISC FLANGE OUTER		01
15D	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
15E	0503010060	1/2" NUT		16
15F	0501069637	AXLE NUT LOCK		02
15G	0521012664	FLAT WASHER		02
15H	0501010087	1.1/4" NUT		02
15I	0503010962	5/8" X 1-1/4" BOLT		02




Item	Code	Description	See page	QT
15J	0503010027	5/8" SPRING WASHER		02

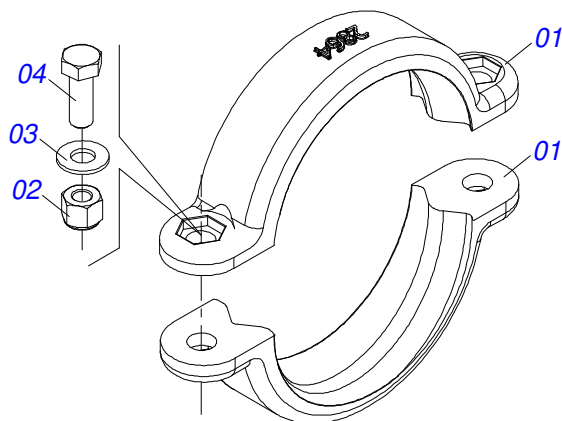


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER		02
04	0503010365	NUT		02

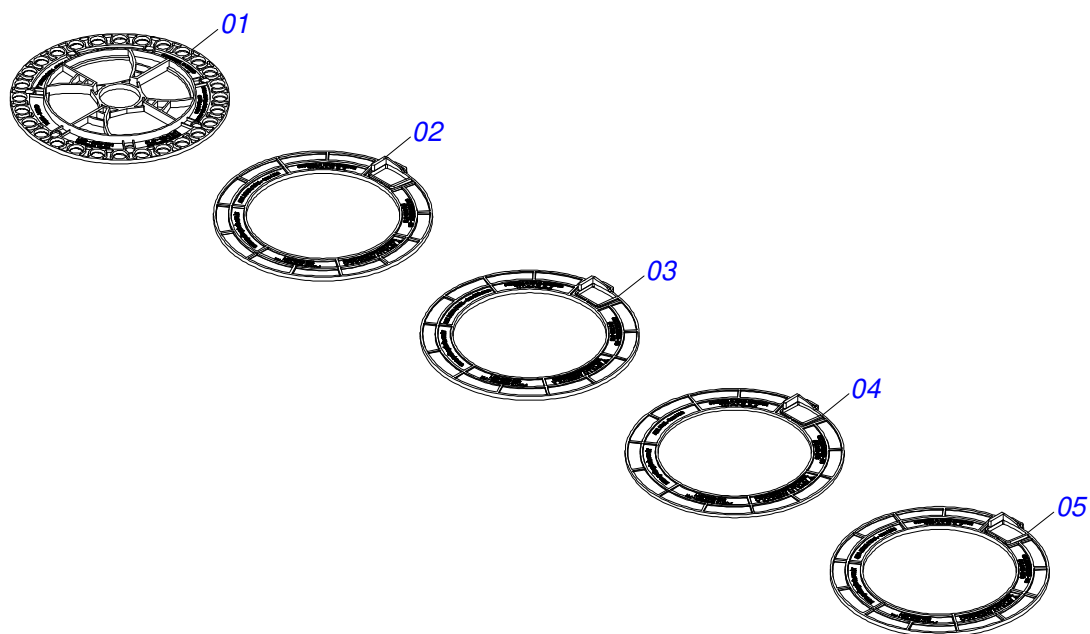


Item	Code	Description	See page	QT
01	0503016204	CORN DISK 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

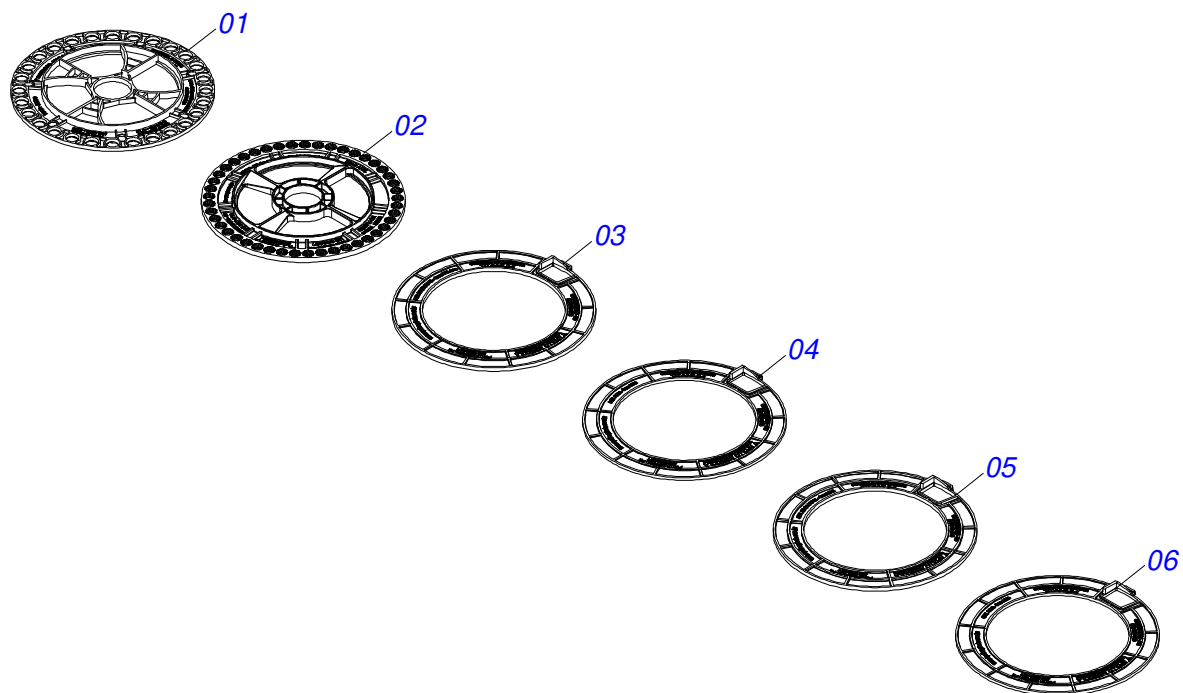


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

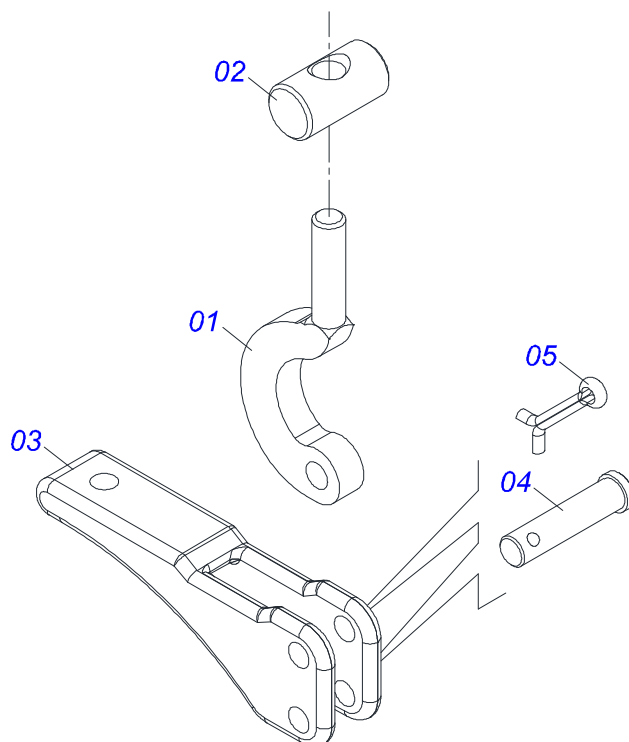


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

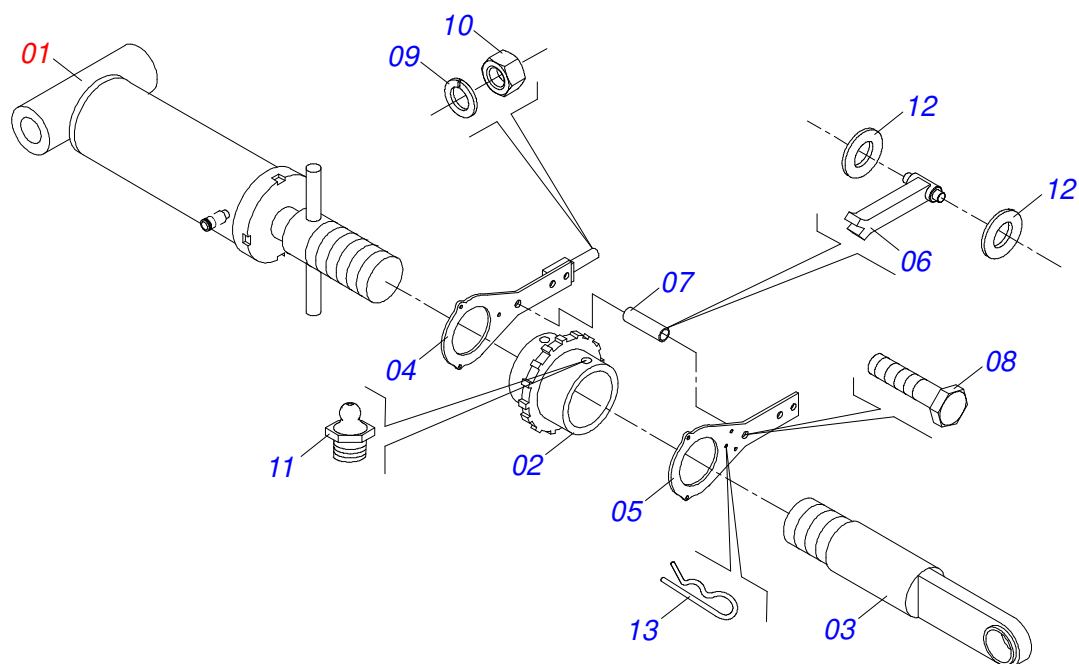

Item	Code	Description	See page	QT
001	0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER	77	01
002	0502011237	ESTABILIZER BODY		01
003	0511065467	LH SCREW ARBOR		01
004	0511061880	SIDE RIGHT RATCHET		01
005	0531010264	SIDE RATCHET		01
006	0511061881	RATCHET FOLLOWER		01
007	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
008	0503011179	3/8" X 2-1/4" BOLT		05
009	0503010025	3/8" SPRING WASHER		05
010	0503010026	3/8" NUT		05
011	0503010002	1800 GREASE FITTING		02
012	0521018517	FLAT WASHER		02
013	0503030012	HITCH PIN CLIP		01

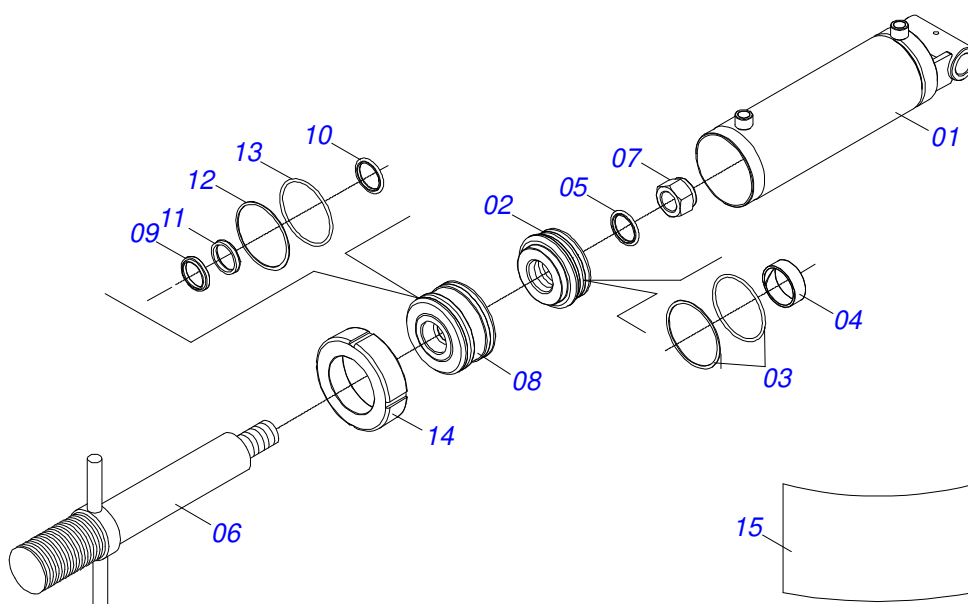


Item	Code	Description	See page	07
01	0511064908	4.5" X 25.4" CYLINDER CASE		01
02	0502011221	2.0" X 4.5" PISTON		01
03	0503011890	3750-3750 GASKET		02
04	0503011891	W2-4500-500 RING G.E		01
05	0503010345	2-218 N 3006-9B O'RING		01
06	0511064909	2" X 14.4" TURNBUCLE		01
07	0503010817	1.1/4" SELF LOCKING NUT		01
08	0502011220	2" X 4.5" RING SUPPORT		01
09	0503010952	W2-2250-500 RING		01
10	0503010991	1870-2000-375-B GASKET		01
11	0503010039	D-2000 SCRAPER RING		01
12	0503011892	O' RING, 2-346 N 3006-9B		01
13	0503011893	BACK-UP RING, 8-346		01
14	0502011222	0.56" END CAP		01
15	0501032513	HYDRAULIC CYLINDER REPAIR KIT		01

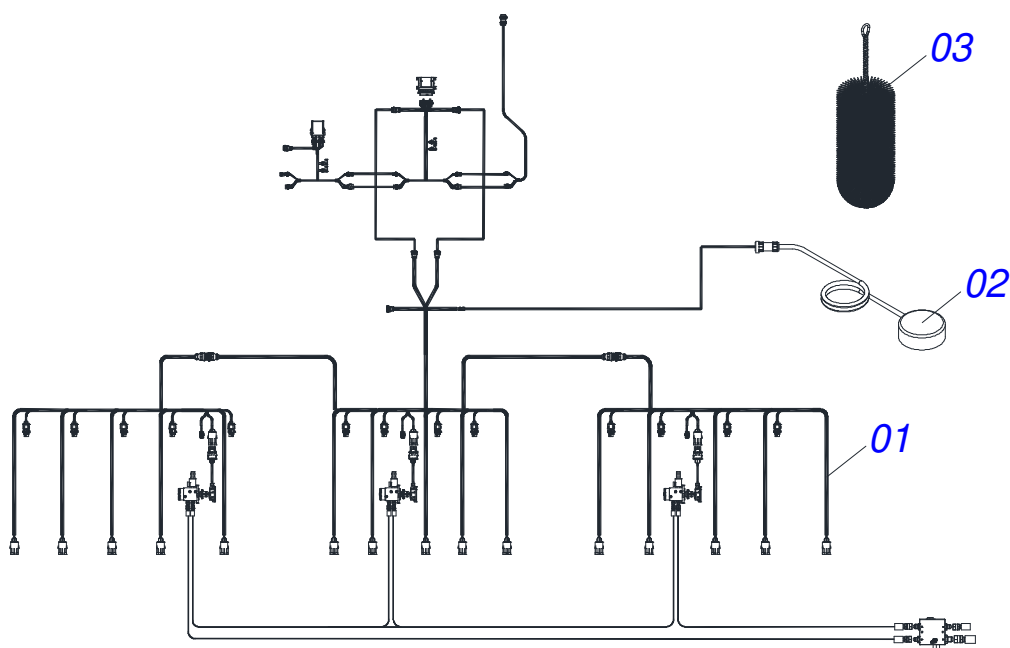

Item	Code	Description	See page	QT
001	0503018731	SIMPLE CABLE		01
002	0503017443	ANTENNA GPS PM 400		01
003	0503017031	CLEANING BRUSH		01

SET MOUNT BOX

0521050324

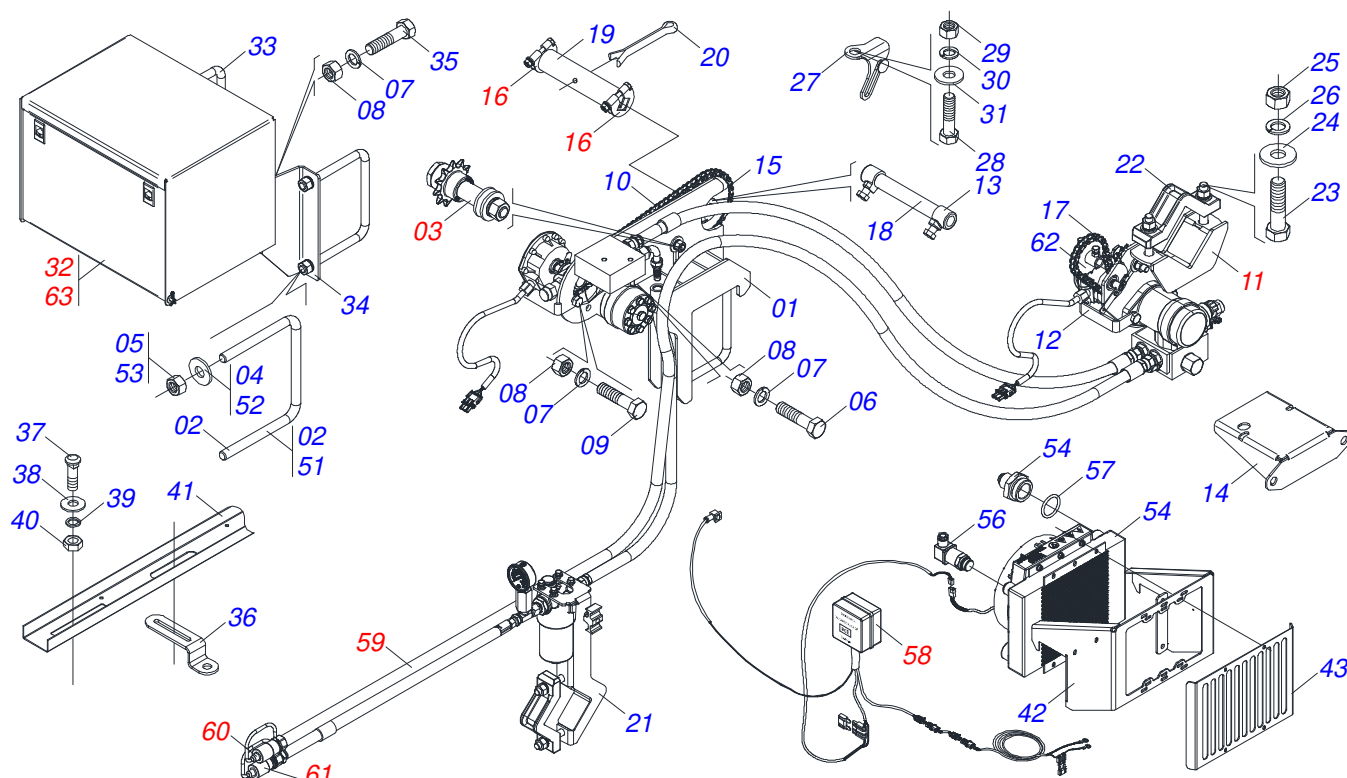


Item	Code	Description	See page	QT
001	0521067331	HIDRAULIC MOTOR SUPPORT BOX		01
002	0521010718	5/8" U BOLT		01
003	0511059969	CHAIN TENSIONER	80	01
004	0501012140	FLAT WASHER		02
005	0503012412	5/8 UNC SELF LOCKING NUT		02
006	0503010920	1/2" X 1.1/2" BOLT		01
007	0503010019	1/2" SPRING WASHER		06
008	0503010060	1/2" NUT		06
009	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
010	0503013058	40-1 X 119 CHAIN LINK + MENDING		01
011	0521050273	MOTOR SUPPORT SEED	81	01
012	0571012766	SUPPORT ENCODER		02
013	0501055489	SPRING GUIDE LOCK SLEEVE		04
014	0571011983	SUPPORT BODY		01
015	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		01
016	0501053788	3/4 SQUARE AXLE FASTENER	82	04
017	0503014626	40-1 CHAIN X 55 LINK + MENDING		01
018	0502012007	SQUARE SLEEVE		01
019	0571012016	SLEEVE		01
020	0503010010	1/4" X 2.1/2" COTTERPIN		01
021	0521063378	FILTER SUPPORT		01
022	0502010175	HITCH CLAMP		01
023	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		02
024	0501011299	FLAT WASHER		02
025	0503010013	5/8" NUT		02
026	0503010027	5/8" SPRING WASHER		02
027	0581013257	LIFT SENSOR SUPPORT		02
028	0501011643	3/8 X 1" BOLT		02
029	0503010026	3/8" NUT		02
030	0503010025	3/8" SPRING WASHER		02
031	0501013518	FLAT WASHER		02


SET MOUNT BOX

0521050324


Item	Code	Description	See page	QT
032	0511059348	APT ASSY MODULE BOX	83	01
033	0521065172	LH SUPPORT FIXER		01
034	0521065173	LH SUPPORT FIXER		01
035	0503010384	1/2" X 5" BOLT		04
036	0571017368	SUPPORT GUTTER		04
037	0501011643	3/8 X 1" BOLT		04
038	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
039	0503010025	3/8" SPRING WASHER		04
040	0503010026	3/8" NUT		04
041	0571018391	GUTTER 25 X 58 X 1200		02
042	0521064723	SUPPORT RADIATOR		01
043	0571016788	RADIATOR PROTECTION		01
044	0571016789	PRISONER 3/8 UNC X 5/16 UNC X 65		04
045	0501013518	FLAT WASHER		04
046	0503010025	3/8" SPRING WASHER		04
047	0503010026	3/8" NUT		04
048	0501010694	FLAT WASHER		04
049	0503010179	LOCK WASHER		04
050	0503010363	5/16" X 1" BOLT		04
051	0521010718	5/8" U BOLT		02
052	0501012140	FLAT WASHER		04
053	0503012412	5/8 UNC SELF LOCKING NUT		04
054	0503016377	HEAT EXCHANGER HYDRAULIC 3083370		01
055	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE		02
056	0503016512	THERMOSTAT FOR HEAT EXCHANGE		01
057	0503010046	2-216 N 3006-9B O'RING		02
058	0511055832	HYDRAULIC CIRCUIT	84	01
059	0521050325	HOSE KIT		01
060	0501053834	MALE QUICK COUPLER	33	01
061	0503015276	MALE QUICK COUPLER AGR 1/2 NPT		01
062	0521065328	20Z GEAR WITH HOLE SHAFT HEX 16.5		01
063	0511056294	CAIXA MODULO	86	01

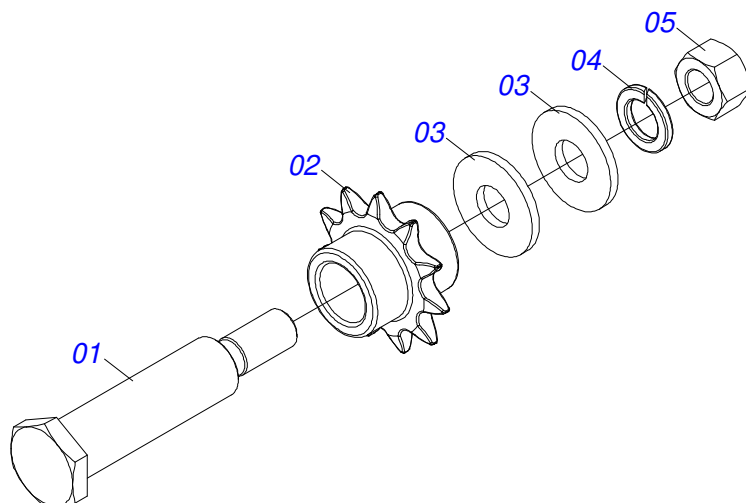


Item	Code	Description	See page	QT
01	0581012970	TIGHTENER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

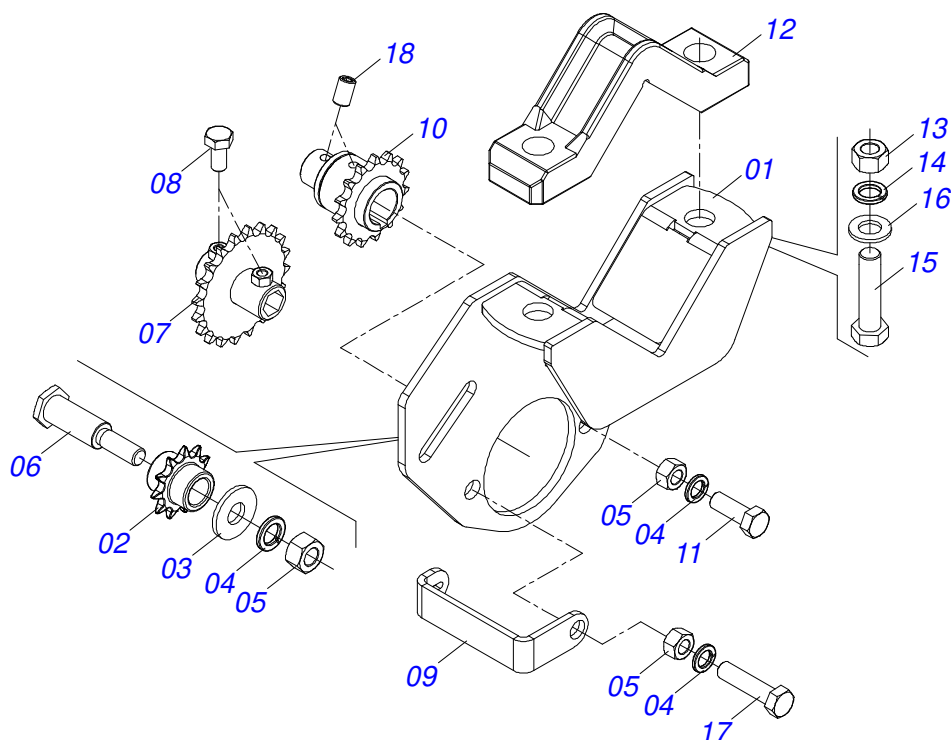


Item	Code	Description	See page	QT
01	0521067490	HYDRAULIC MOTOR SUPPORT APT		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		03
05	0503010060	1/2" NUT		03
06	0531019479	AXLE CHAIN GEAR		01
07	0521065328	20Z GEAR WITH HOLE SHAFT HEX 16.5		01
08	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		02
09	0571012766	SUPPORT ENCODER		01
10	0521064025	TRACTOR HITCH		01
11	0503011082	C1/2" X 1.3/4" SCREW		01
12	0502010175	HITCH CLAMP		01
13	0503010013	5/8" NUT		02
14	0503010027	5/8" SPRING WASHER		02
15	0501011027	5/8" X 3-3/4" BOLT		02
16	0501011299	FLAT WASHER		02
17	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
18	0503011807	SCREW M8 X 1,25X10		02

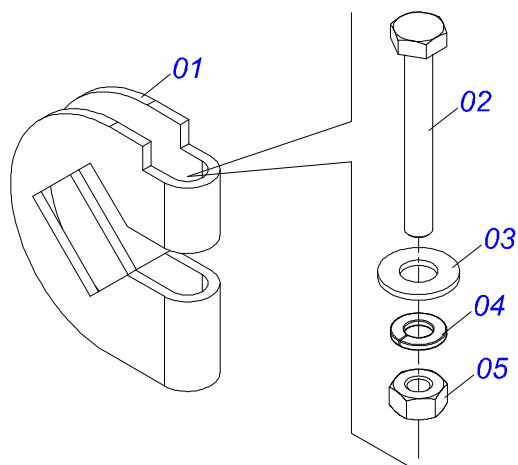


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

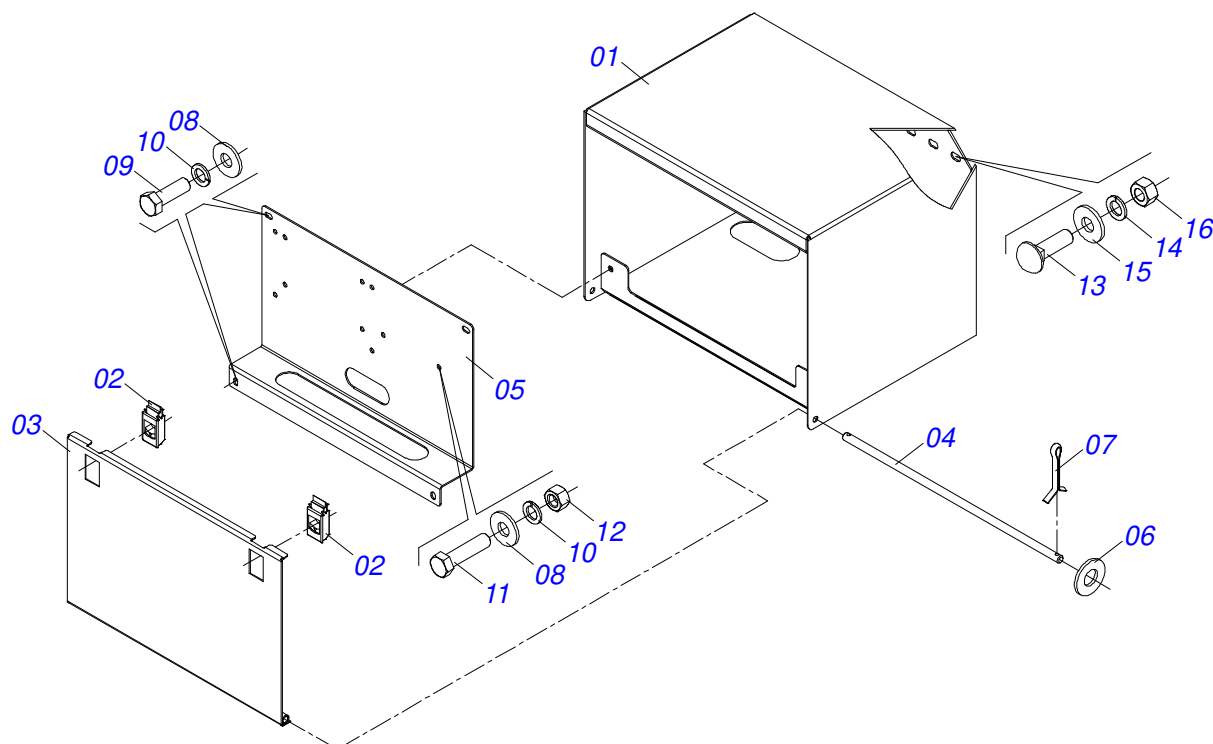


Item	Code	Description	See page	QT
01	0521066834	MODULE BOX	01	
02	0503018171	FAST LOCK ASSY	02	
03	0521066833	BOX COVER	01	
04	0571012006	COVER PIVOT SHAFT	01	
05	0571012005	SUPPORT GUIDE ASSY	01	
06	0501010694	FLAT WASHER	03	
07	0503010257	1/8" X 1" COTTERPIN	02	
08	0511017303	FLAT WASHER	10	
09	0503010298	1/4" X 1/2" BOLT	04	
10	0503010143	1/4" SPRING WASHER	10	
11	0503010294	1/4" X 7/8" BOLT	06	
12	0503010144	1/4" NUT	06	
13	0501011643	3/8 X 1" BOLT	04	
14	0503010025	3/8" SPRING WASHER	04	
15	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN	04	
16	0503010026	3/8" NUT	04	

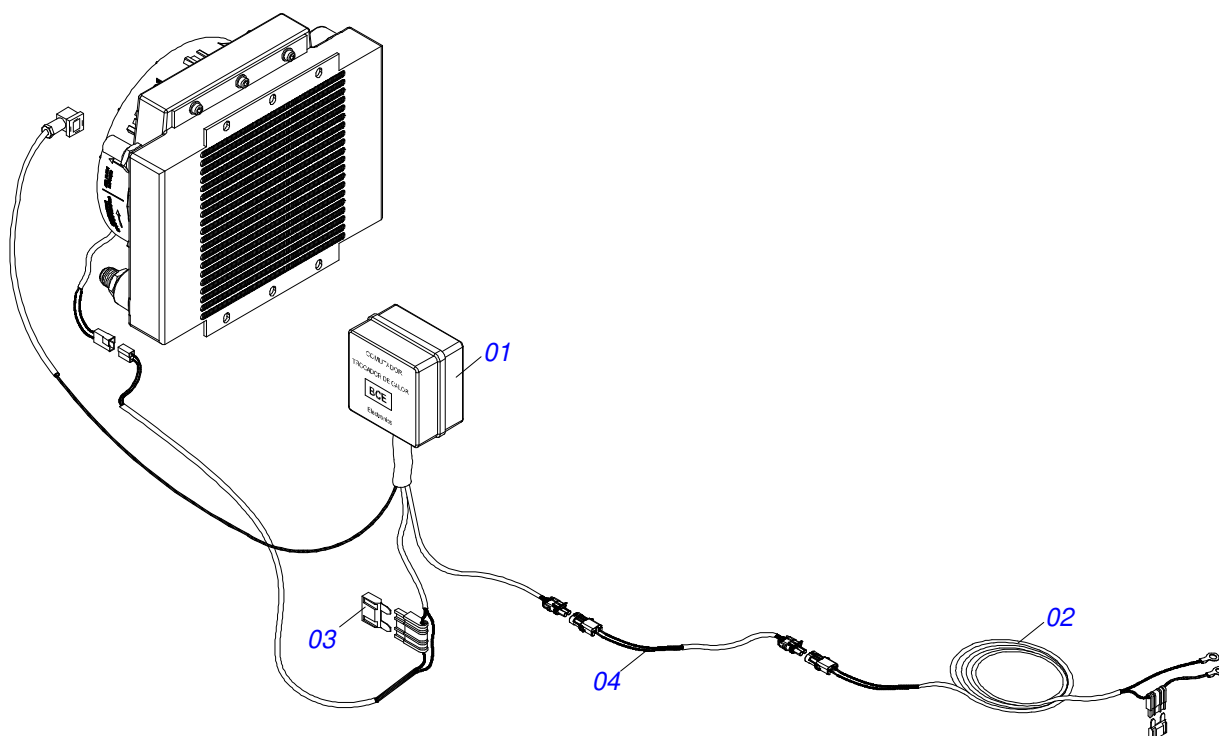


Item	Code	Description	See page	QT
01	0503016736	PANEL COMUTADOR		01
02	0503062593	SWITCH CABLE		01
03	0503018553	FUSE BLADE 20A		01
04	0503062594	IMPLEMENT SWITCH CABLE (EXTENSION)		01

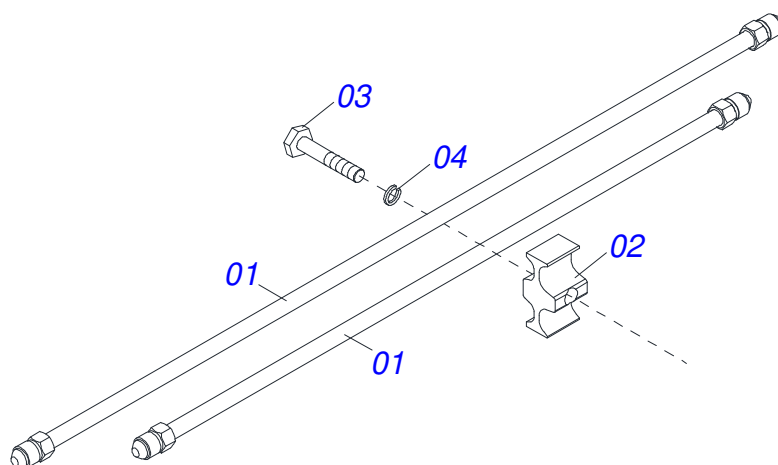


Item	Code	Description	See page	QT
001	0521062404	OIL TUBE		04
002	0502012702	BODY SUPPORT CLAMP		04
003	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
004	0503010180	7/16" SPRING WASHER		04

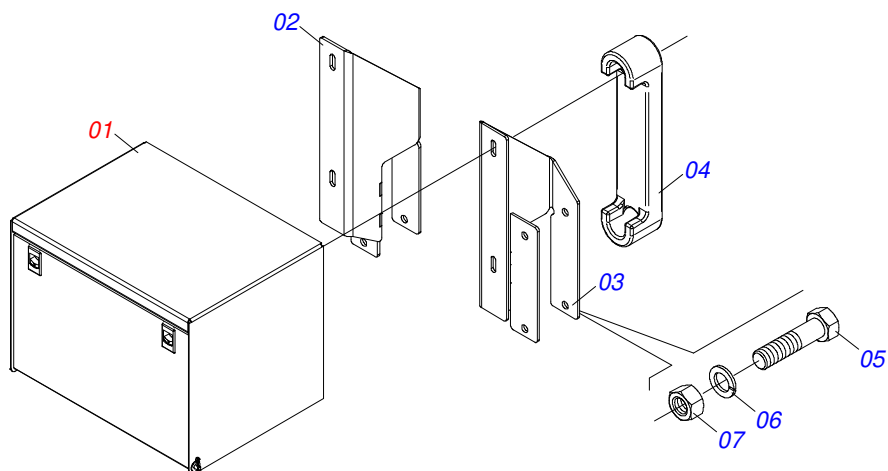


Item	Code	Description	See page	QT
001	0511059348	APT ASSY MODULE BOX	83	01
002	0581011428	SUPPORT RIGHT CAIXA MODULO		01
003	0581011429	SUPPORT LEFT BOX		01
004	0502011558	FASTENER		01
005	0503013185	3/4" X 5-1/2" BOLT		02
006	0503010023	3/4" SPRING WASHER		02
007	0503010014	3/4" NUT		02

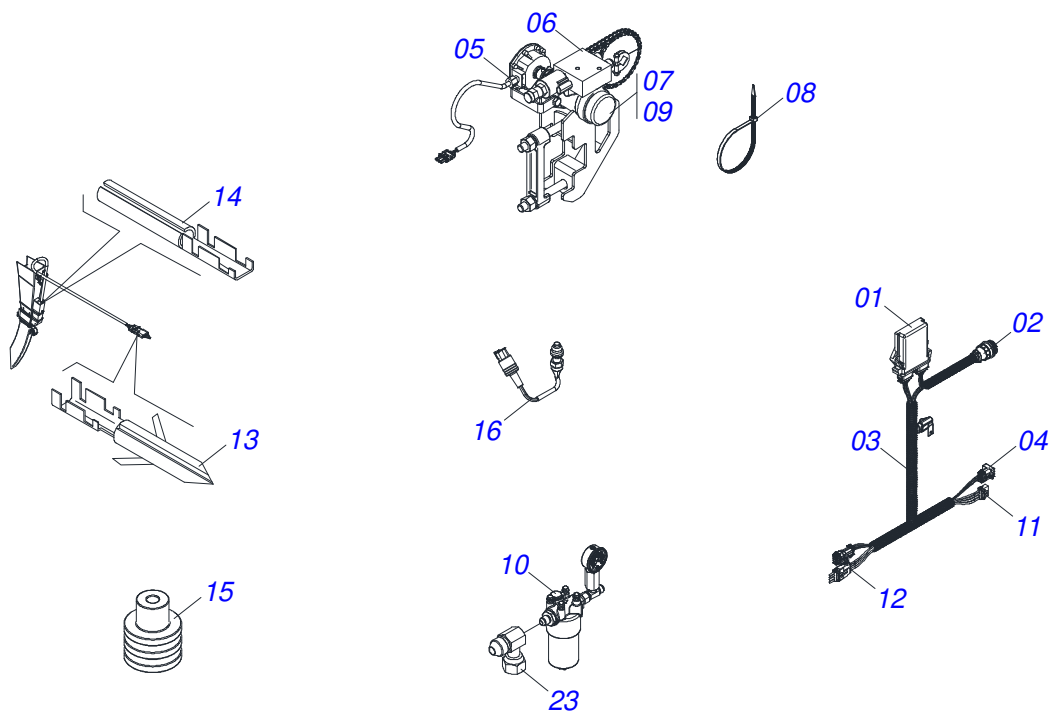


Item	Code	Description	See page	QT
001	0503015065	MASTER CONTROL MODULE		01
002	0503015066	CABLE CONTROL MASTER MODULE		01
003	0503015479	TRACTOR CONNECTION CABLE ISO		01
004	0503015071	CONCTOR		01
005	0503015220	ENCODER ISOB 4,5M 464360171S1		02
006	0511055638	BLOCK FLOW LIMITER	88	01
007	0511056973	PARKER OMP 80 HYDRAULIC MOTOR WITH VALVE	89	01
008	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		**
009	0511056974	MOTOR	90	01
010	0511056972	FILTER HYDAC	91	01
011	0503016369	THREE FEMALE CONNECTOR		02
012	0503016370	THREE FEMALE CONNECTOR		02
013	0503015907	MALE TERMINAL		06
014	0503015908	FEMALE TERMINAL		06
015	0503015911	CABLE SEAL		12
016	0503017984	LIFT SENSOR		02

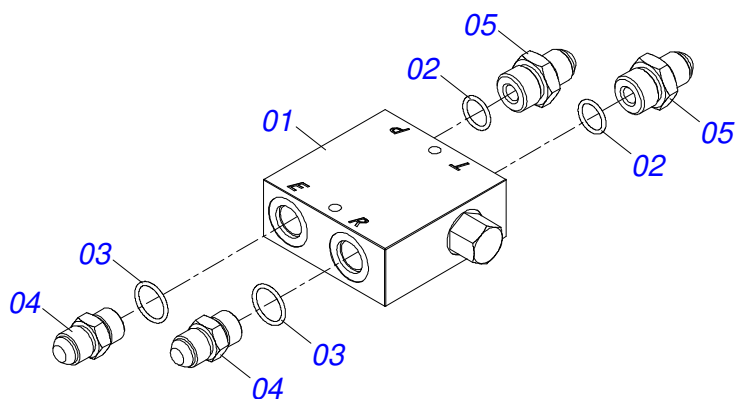


Item	Code	Description	See page	QT
01	0503014953	LIMITING FLOW PACK		01
02	0503010045	O'RING		02
03	0503011109	2-119 N 3006-9B O'RING		02
04	0501010590	NIPPLE		02
05	0571013917	7/8"NF X 1.1/16 UNF NIPPLE		02

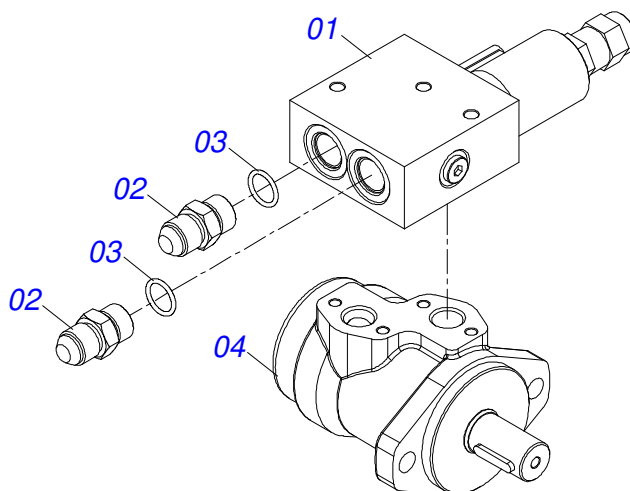


Item	Code	Description	See page	QT
01	0503016037	VALVE		01
02	0501010590	NIPPLE		02
03	0503010045	O'RING		02
04	0503016055	MOTOR HYDRAULIC PARKER OMP 80 ISOBUS		01

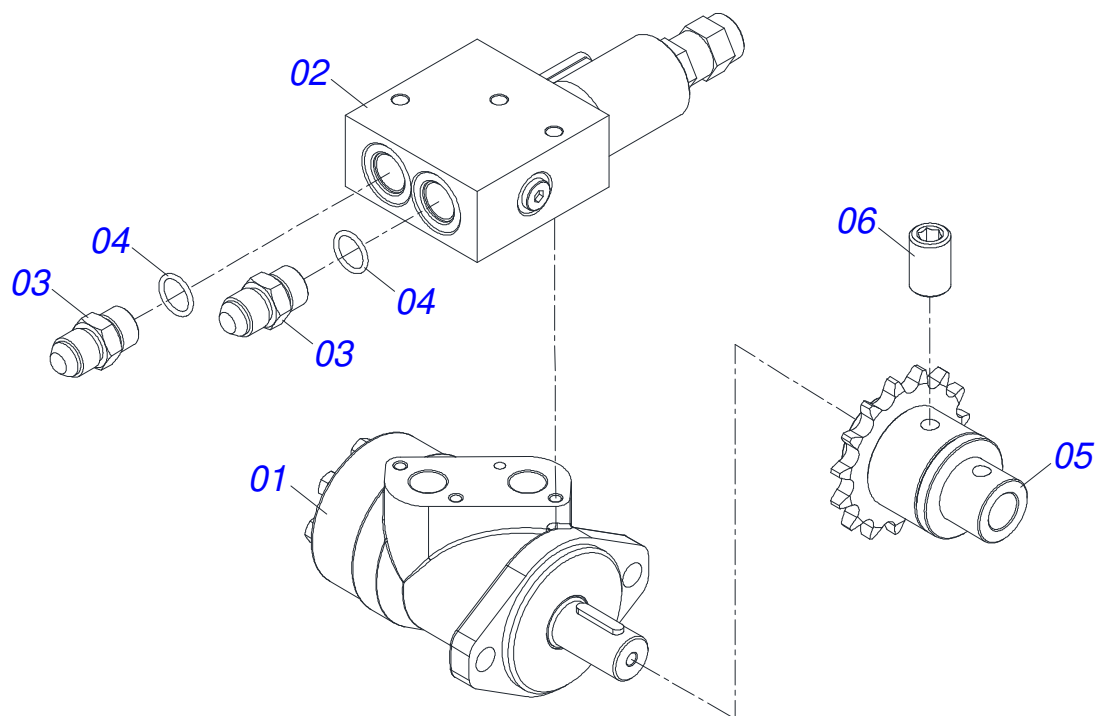


Item	Code	Description	See page	QT
01	0503014364	MOTOR W/ AXLE		01
02	0503016037	VALVE		01
03	0501010590	NIPPLE		02
04	0503010045	O'RING		02
05	0521064025	TRACTOR HITCH		01
06	0503011807	SCREW M8 X 1,25X10		02

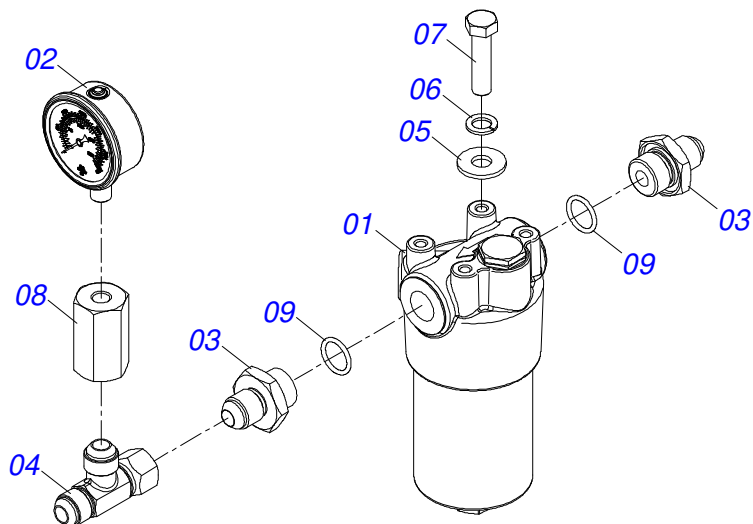


Item	Code	Description	See page	QT
01	0503016376	FILTER SPRING		01
02	0503016336	PRESSURE GAUGE		01
03	0581011416	7/8"NF UNF NIPPLE		02
04	0503012341	T 7/8" ADAPOR GIRAT NUT		01
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		04
07	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
08	0571016236	HIDRAULIC ADAPTER		01
09	0503014724	2-215 N 3006-9B O'RING		02

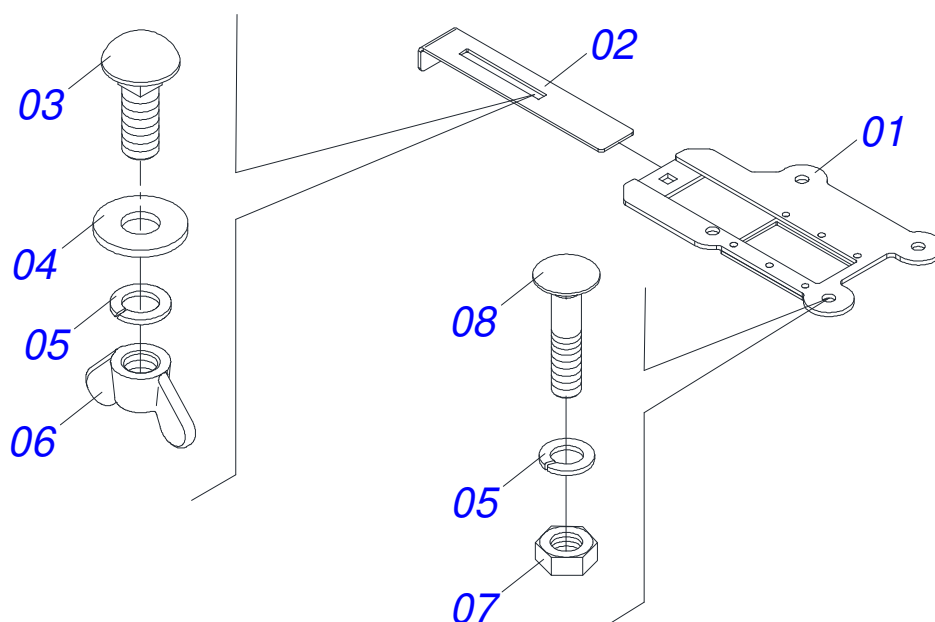


Item	Code	Description	See page	QT
001	0521067215	BASE SUPPORT PRECISION PLANTING		01
002	0581012522	SEED DISTRIBUTOR BOX SWITCH		01
003	0501011643	3/8 X 1"BOLT		01
004	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		01
005	0503010025	3/8" SPRING WASHER		05
006	0503010209	3/8" UNC BUTTERFLY NUT		01
007	0503010026	3/8" NUT		04
008	0503010849	3/8" X 1-1/2" BOLT		04

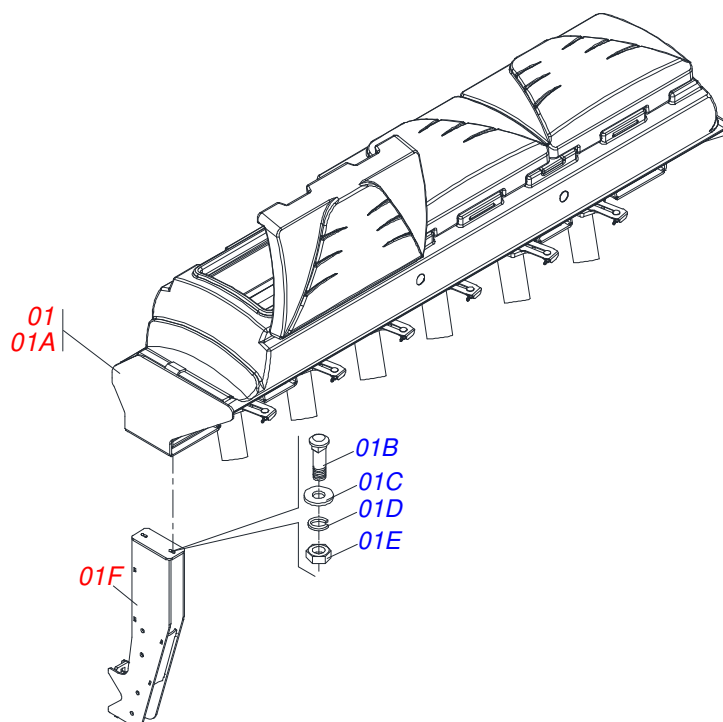


Item	Code	Description	See page	QT
001	0521050110	ASSEMBLY CSU	94	02
001A	0521050109	ASSEMBLY CSU	95	01
001B	0501010942	3/8" X 1-1/4" BOLT		04
001C	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
001D	0503010025	3/8" SPRING WASHER		04
001E	0503010026	3/8" NUT		04
001F	0521051927	TOWER SUPPORT HOPPER	96	02

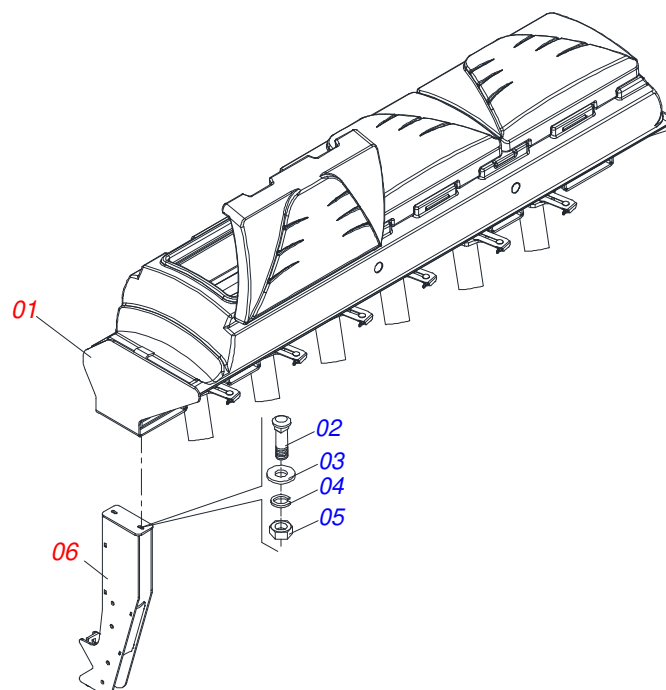


Item	Code	Description	See page	QT
001	0521050109	ASSEMBLY CSU	95	01
002	0501010942	3/8" X 1-1/4" BOLT		04
003	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
004	0503010025	3/8" SPRING WASHER		04
005	0503010026	3/8" NUT		04
006	0521051927	TOWER SUPPORT HOPPER	96	02

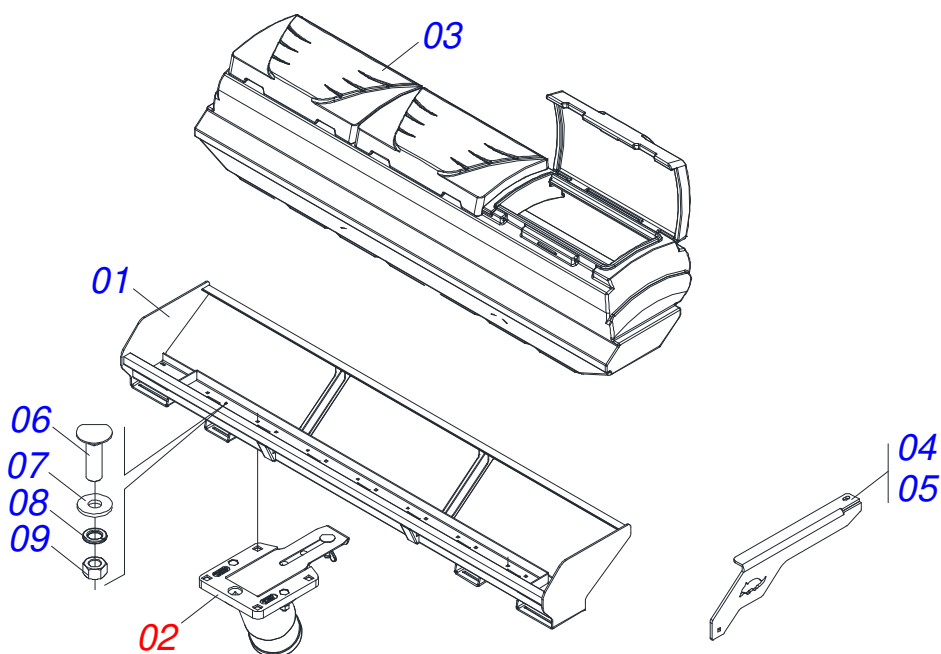


Item	Code	Description	See page	QT
001	0521067411	FERTILIZER BOX SUPPORT		01
002	0511057690	3" ARTICULATED SEED CONDUCTOR		05
003	0503061987	05 NOZZLES FERTILIZER HOPPER		01
004	0581013196	LEFT LOCK		01
005	0581013195	LOCK RIGHT		01
006	0501010942	3/8" X 1-1/4" BOLT		24
007	0501013518	FLAT WASHER		04
008	0503010025	3/8" SPRING WASHER		24
009	0503010026	3/8" NUT		24

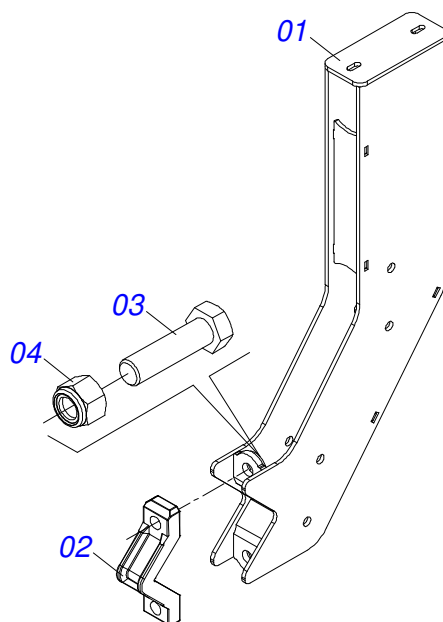


Item	Code	Description	See page	QT
01	0521066208	SUPPORT TOWER SILO		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

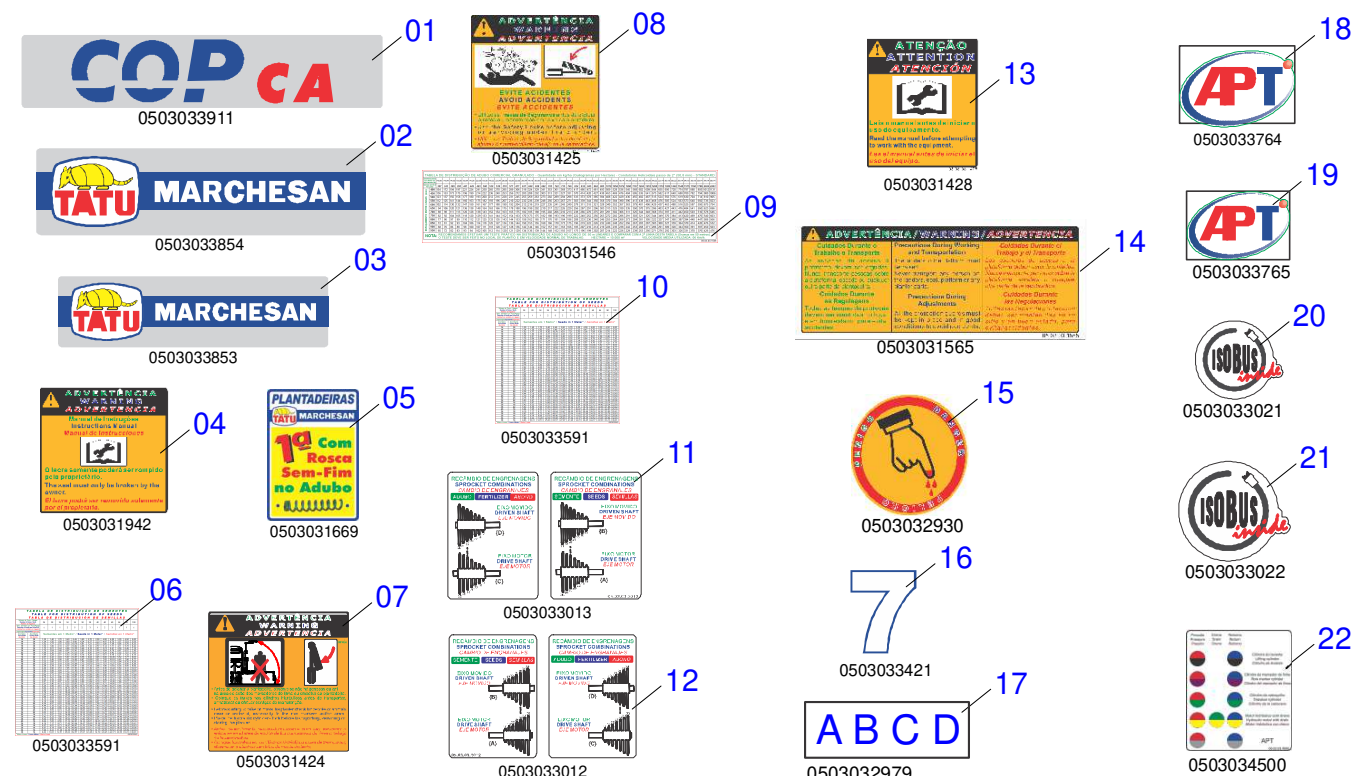


Item	Code	Description	See page	QT
001	0503033911	ADHESIVE LABEL		02
002	0503033854	ADHESIVE LABEL		02
003	0503033853	ADHESIVE LABEL		02
004	0503031942	ADHESIVE LABEL		01
005	0503031669	ADHESIVE LABEL		01
006	0503033591	ADHESIVE LABEL		02
007	0503031424	ADHESIVE LABEL ATTENTION ROW HYDRAULIC MARKER		02
008	0503031425	ADHESIVE LABEL ATTENTION		02
009	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
010	0503033591	ADHESIVE LABEL		02
011	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
012	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
013	0503031428	READ MANUAL DECAL		01
014	0503031565	ADHESIVE LABEL CARE		02
015	0503032930	ADHESIVE LABEL DANGER		04
016	0503033421	ADHESIVE LABEL 7 NUMBER FOR PLANTING		02
017	0503032979	ADHESIVE LABEL LETTERS A B C D		02
018	0503033764	ADHESIVE LABEL APT MARCHESAN LOWER		02
019	0503033765	ADHESIVE LABEL APT MARCHESAN LARGER		01
020	0503033021	ADHESIVE LABEL ISOBUS INSIDE 200MM		02
021	0503033022	ADHESIVE LABEL ISOBUS INSIDE 400MM		02
022	0503034500	ADHESIVE LABEL		01

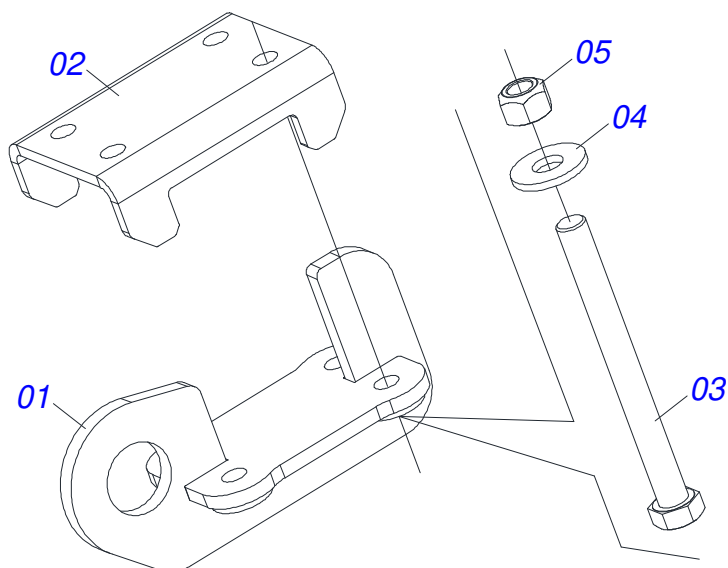


Item	Code	Description	See page	QT
01	0521066608	LIFTING HOOK		01
02	0581019707	FIXATION SUPPORT SUPPORT		01
03	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
04	0501012140	FLAT WASHER		04
05	0503012412	5/8 UNC SELF LOCKING NUT		04

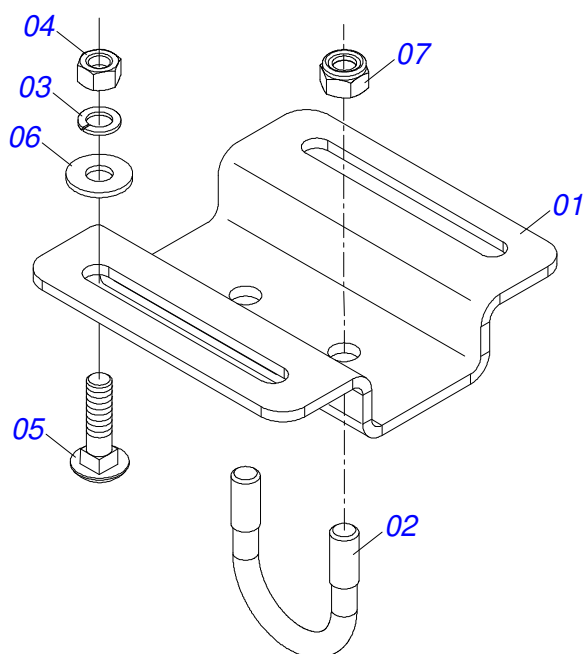

Item	Code	Description	See page	QT
01	0581011989	SIDE BODY FIXER PLATFORM		01
02	0551019884	45 X 50 X 3/8 FASTENER		01
03	0503010025	3/8" SPRING WASHER		02
04	0503010026	3/8" NUT		02
05	0501011643	3/8 X 1"BOLT		02
06	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
07	0503013357	3/8" SELF-ADJUSTING NUT		02

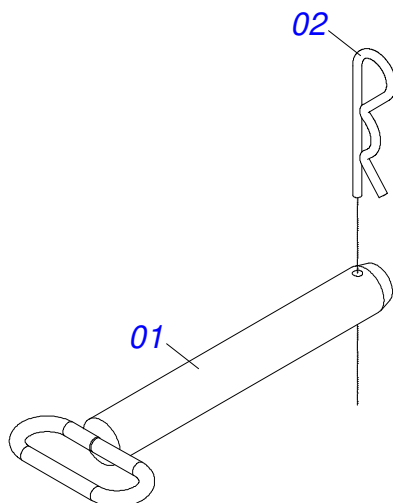

Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

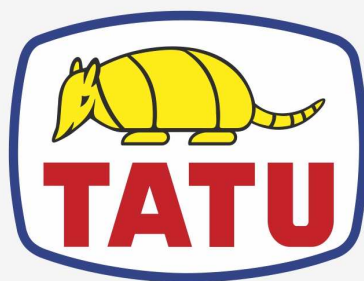

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

