

PARTS CATALOGUE



ROW CROP PLANTERS

Code:

0501092844

Product:

COP FLEX 600 SUPREMA P.P - FRAME 6645 APT



Series:

S-0115

Revision:

00

Date Revision:

OUTUBRO/2020



PRODUCTS

Code	Description
0111201137	COP FLEX 600 SUP PP 6645/15E450 MTH APT S-0115

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.



MARCHESAN

INDEX

0909095449	ASSY FRAME	1
0511050644	DRAWBAR ASSY	2
0511055096	TRACTOR HITCH	3
0511053085	SET FIXER HEADER	4
0511050444	WHITH LEFT WHEEL ASSY WITHOUT TRANSMISSION	5
0511050443	WHITH RIGHT WHEEL ASSY WITHOUT TRANSMISSION	6
0501110625	BEARING ARTICULATION WHEEL	7
0511052766	CARRYING WHEEL HUB ASSY	8
0503062158	EEE WHEEL WITH TIRE 700 X 16-10L ASSY	9
0511058870	SET HIDRAULICO	10
0511053358	VALVE FIXING ASSEMBLY	11
0511058871	FIXER HYDRAULIC HOSE ASSEMBLY	12
0511053368	HYDRAULIC CYLINDER ASSEMBLY	13
0511053449	HOSE KIT	14
0511058411	HYDRAULIC CYLINDER	15
0511053455	SET BOX FERTILIZER	16
0511053453	PLATFORM SET	17
0511053454	JOINT HANDRAILSET	18
0511054971	RESTING ASSEMBLY	19
0511056598	MANUAL STORAGE TUBE ASSY	20
0511057156	BEARING LINE SEMI MOUNTED	21
0909095408	LINEA ABONO SEMILLA COMPL	21
0511050609	BEARING WITH 17Z GEAR ASSY	22
0511057729	FRONT SEED SHORT	22
0511050617	FRONT SEED ROW BEARING	23
0521051622	FRONT SEED SHORT ROW	23
0511055260	SEED ROW CHAIN TENSIONER	24
0511057730	FRONT SEED LONG	24
0511057209	ROW RIGHT REAR SEED	25
0521051621	FRONT SEED LONG ROW	25
0511054884	TRANSMISSION BOX	26
0511057210	ROW LEFT REAR SEED	26
0511052393	BEARING FOLLOWER ROW ASSY	27
0511057495	RIGHT REAR ROW SEED SUP PP PM 400	27
0511054635	BEARING AXLE BODY	28
0511057496	LEFT REAR ROW SEED SUP PP PM 400	28
0511057159	TRANSMISSION BOX SEED LINE	29
0511057502	SET PRECISION PLANTING	29
0511057155	PRECISION PLANTING LEFT TRANSMISSION BOX	30
0511057625	ROW SEED BEARING	30
0511057491	PRECISION PLANTING SEED ASSY SEED DISTRIBUTOR WITH CORN DISC	31
0511057154	DDD RITGH SUPREMA PRECISION PLANTING	32
0511057153	DDD LEFT SUPREMA PRECISION PLANTING	33
0511053172	LEFT LOW CUBE WITH DISC 15	34
0511053173	CUBE LOW RIGHT WITH DISC 15	35
0511057509	SEED RESERVOIR PNEUMATIC ASSY	36
0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL	37
0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL	38
0501052538	DEPTH BAND WITH ARMS	39
0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	40
0501056435	LEFT CONTROL ARM DEPTH WITHOUT WHEEL	41
0511053023	LONG FERTILIZER LINE	42
0511053223	FERTILIZER ROW SUPPORT WITH SCREW	43
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	44



 
MARCHESAN

INDEX

0511053024	FERTILIZER SHORT LINE	45
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	46
0511051818	DISC CUT 18 SEMI MOUNTED	47
0511051819	DC 20 SEMI MOUNTED	48
0501052139	18 BLADE DISC WITH FLAT PLAN DISC	49
0501054887	20 BLADE DISC WITH FLAT PLAN DISC	50
0501110231	SCARIFIER HEAD WITH SPIKE 0061	51
0501110723	SCARIFIER SPINDLE	52
0521050525	FIXER FERTILIZER CONDUCTOR	53
0521044460	SYSTEM DEPTH / COMPACTOR	54
0511055690	WHEEL SISTEM	55
0511055327	COMPACTING WHEEL V ASSY RUBBER	56
0501059228	ADJUSTMENT LEVER	57
0511055628	DEPTH WHEEL SYSTEM	58
0511055629	DEPTH WHEEL SYSTEM	59
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	60
0511058650	SEMI-MOUNTED DEPTH CONTROL	61
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	62
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	63
0501052297	DEPTH WHEELS REGULATOR ASSY	64
0511054333	COMPACT WHEEL RIGHT WITH BEARING	65
0511054334	COMPACT WHEEL LEFT WITH BEARING	66
0501052908	COMPACTOR WHEEL WITH BEARING	67
0521044269	PRESS WHEELS/DEPTH ASSY	68
0511055326	DEPTH CONTROL PRESS WHEEL ASSY	69
0521042327	DEPTH CONTROL & PRESS WHEEL ASSY	70
0511050077	WHEEL STRIPED	71
0511052287	DEPTH WHEEL HUB ASSY	72
0511053456	HEX AXLE ASSEMBLY	73
0511058605	HYDRAULIC TURBINE ASSEMBLY	74
0511057700	HYDRAULIC TURBINE	75
0501054983	NIPPLE HIDRAULIC MOTOR	76
0521044613	FAN 480 X 50 S (HIDRAULIC)	77
0501054577	BLOCK COMMAND WITH NIPLES HYDRAULIC TURBINE	78
0501054428	ASSY HEADER EXTENSOR	79
0501058957	ISOBUS SET	80
0501058984	ISOBUS USAP SET	81
0511058861	SET LABEL ADHESIVE	82
0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	83

ASSY FRAME

0909095449

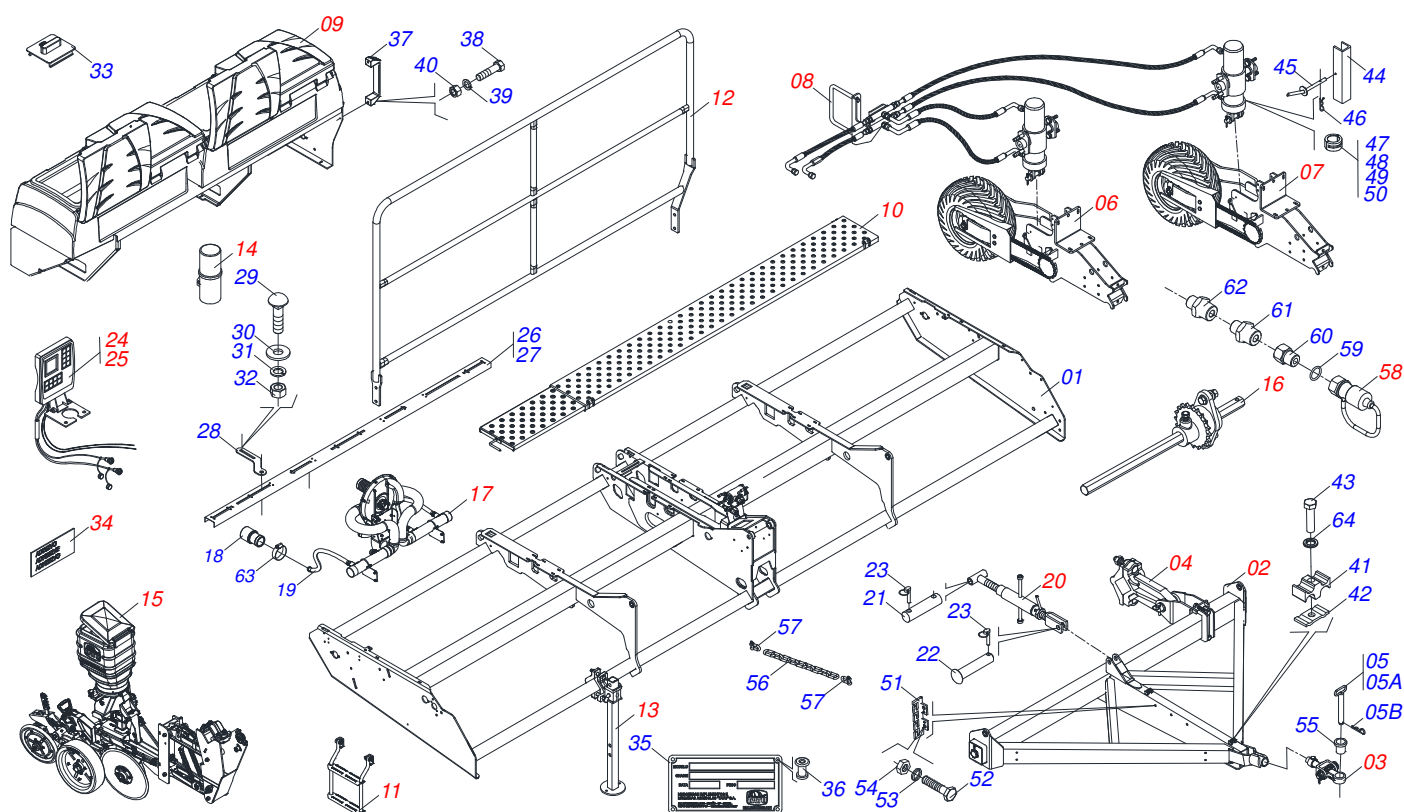

Item	Code	Description	See page	QT
01	0521061934	FRAME COP FLEX 15 (6645)		01
02	0511050644	DRAWBAR ASSY	2	01
03	0511055096	TRACTOR HITCH	3	01
04	0511053085	SET FIXER HEADER	4	01
05	0511053179	TRACTOR HITCH AXLE		01
05A	0521064036	TRACTOR HITCH AXLE		01
05B	0503030012	HAIR PIN		01
06	0511050444	WHITH LEFT WHEEL ASSY WITHOUT 5	5	03
07	0511050443	WHITH RIGHT WHEEL ASSY WITHOUT 6	6	03
08	0511058870	SET HIDRAULICO	10	01
09	0511053455	SET BOX FERTILIZER	16	01
10	0511053453	PLATFORM SET	17	01
11	0511053356	ASSY LADDER		01
12	0511053454	JOINT HANDRAILSET	18	01
13	0511054971	RESTING ASSEMBLY	19	02
14	0511056598	MANUAL STORAGE TUBE ASSY	20	01
15	0909095408	LINEA ABONO SEMILLA COMPL	21	15
16	0511053456	HEX AXLE ASSEMBLY	73	01
17	0511058605	HYDRAULIC TURBINE ASSEMBLY	74	01
18	0571019716	ADAPTER		15
19	0571019712	AIR CONDUCTOR		15
20	0501054428	ASSY HEADER EXTENSOR	79	02
21	0521018532	1.4" X 12" COUPLING SHAFT		01
22	0521010573	0.9" X 3.1" COUPLING SHAFT		04
23	0503030085	LOCK PIN		03
24	0501058957	ISOBUS SET	80	01
25	0501058984	ISOBUS USAP SET	81	01
26	0571013314	GUTTER 25 X 58 X 1500		02
27	0561019643	GUTTER 25 X 58 X 1000		02
28	0571017368	SUPPORT GUTTER		08


ASSY FRAME

0909095449

Item	Code	Description	See page	QT
29	0501011643	3/8 X 1"BOLT		08
30	0501010984	FLAT WASHER		08
31	0503010025	3/8" SPRING WASHER		08
32	0503010026	3/8" NUT		08
33	0503032624	SILO FERTILIZER GUTTER		07
34	0511058861	SET LABEL ADHESIVE	82	01
35	0503034003	SERIAL NUMBER TAG 61 X 118		01
36	0503010001	3.2 X 5.5 RIVET		04
37	0503011957	PMC 596-S NYLON LUG		02
38	0503010371	5/16" X 1" BOLT		04
39	0503010179	5/16" ZN SPRING WASHER		04
40	0503010337	5/16" NUT		04
41	0502012702	BODY SUPPORT CLAMP		02
42	0531011180	UPPER BODY CLIP		01
43	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		01
44	0521013022	TRANSPORT LOCK		06
45	0501068994	0.3" X 3.1"LOCK PIN		06
46	0503030168	HAIR PIN		06
47	0501047885	ROD STOP		06
48	0501047886	ROD STOP		06
49	0501047887	ROD STOP		06
50	0501047895	ROD STOP		06
51	0541011767	HOSE FIXATION		01
52	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
53	0503010025	3/8" SPRING WASHER		01
54	0503010026	3/8" NUT		01
55	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
56	0503014120	CHAIN		01
57	0503014321	CABLE STEEL SHACKLE		02
58	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	83	01
59	0503010045	2-116 N 3006-9B O'RING		01
60	0541010080	TERMINAL R.1 / 2 NPT		01
61	0571015343	NIPLE 1 / 2NPT X 3 / 4NPT		01
62	0581013729	NIPLE 1 / 2NPT		01
63	0503010246	CLAMP		22
64	0503010180	7/16" SPRING WASHER		01

DRAWBAR ASSY

 
0511050644

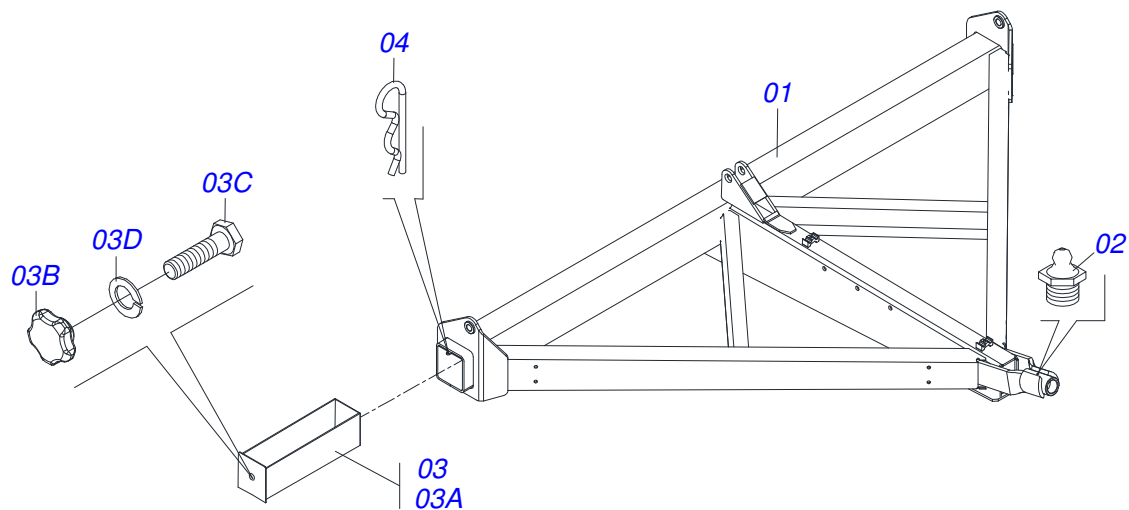

Item	Code	Description	See page	15-17-19 L
001	0521062074	DRAWBAR		01-01-01
002	0503010002	1800 GREASE FITTING		01-01-01
003	0511043137	TOOLS BOX ASSY		02-02-02
003A	0511065471	BOX OF TOOLS		01-01-01
003B	0503010293	BAQUELITE MANIPULACION		01-01-01
003C	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01-01-01
003D	0503011443	3/8" SPRING WASHER		01-01-01
004	0503030012	HAIR PIN		02-02-02

TRACTOR HITCH

 
0511055096

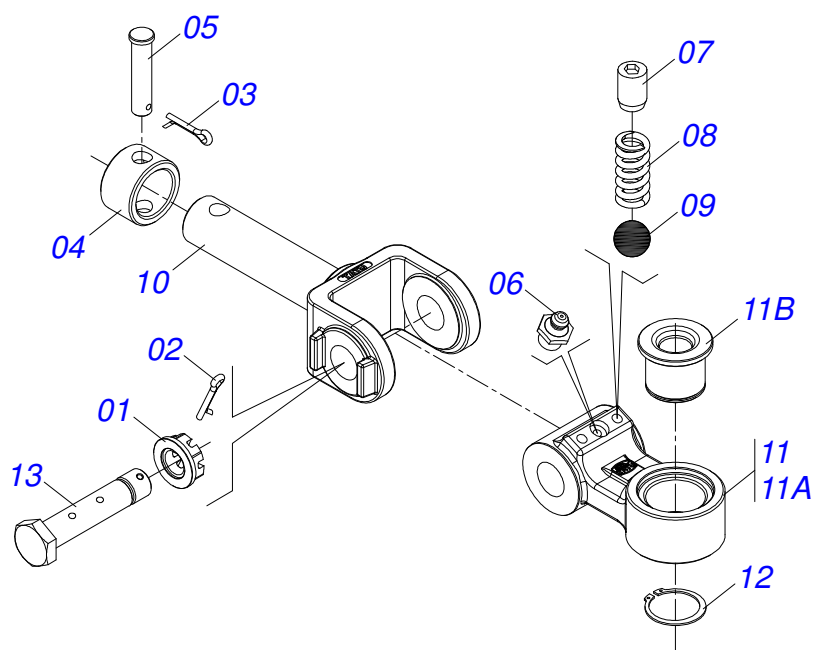


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	COMPRESSION SPRING LEFT		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

SET FIXER HEADER

 
0511053085

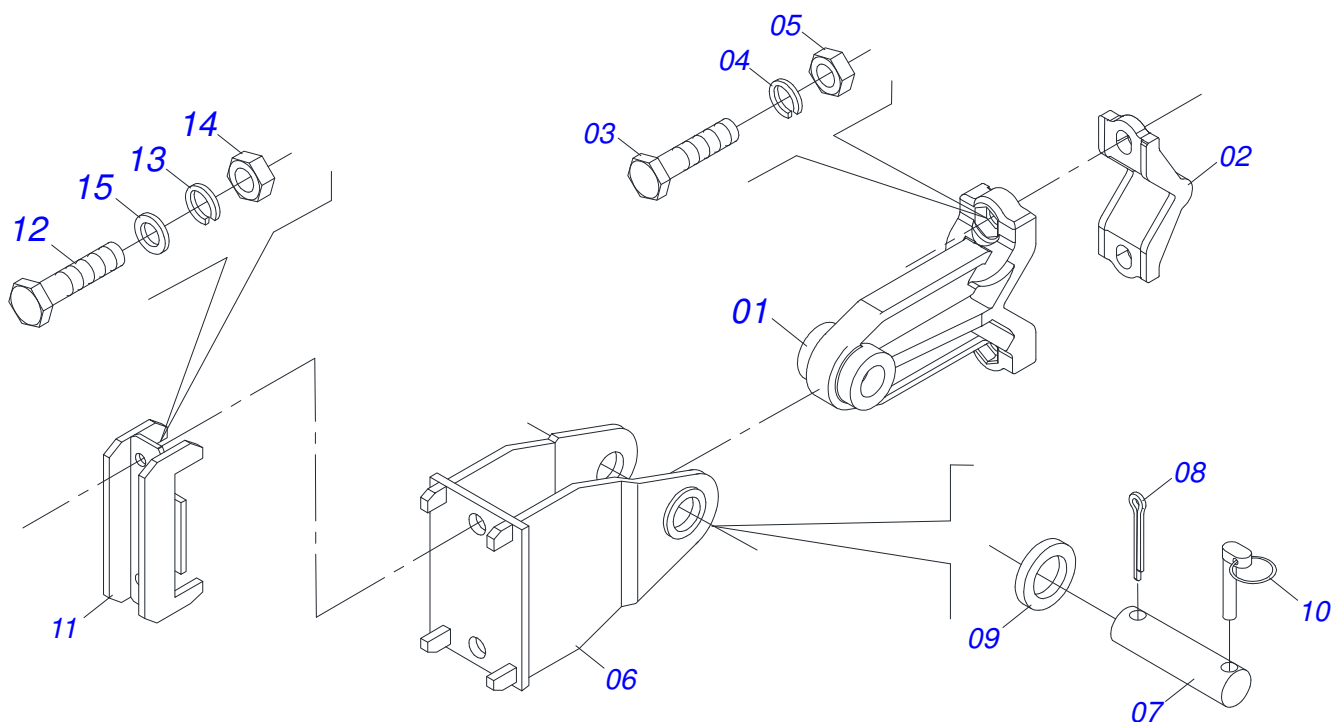


Item	Code	Description	See page	15
001	0502012329	DRAWBAR FIXATION REAR SUPPORT	04	
002	0502012330	SUPPORT FIXER PIVOT	04	
003	0503011084	3/4" X 5" BOLT	08	
004	0503010023	3/4" SPRING WASHER	08	
005	0503010014	3/4" NUT	08	
006	0511065418	DRAWBAR SUPPORT FRONT FIXATION	04	
007	0561014393	COUPLING SHAFT	04	
008	0503010523	1/4" X 2" COTTERPIN	04	
009	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN	08	
010	0503030119	LOCK PIN	04	
011	0511065419	DRAWBAR FIXER CLAMP	04	
012	0521010066	3/4" X 8.12" BOLT	08	
013	0503010023	3/4" SPRING WASHER	08	
014	0503010014	3/4" NUT	08	
015	0501010322	FLAT WASHER	08	

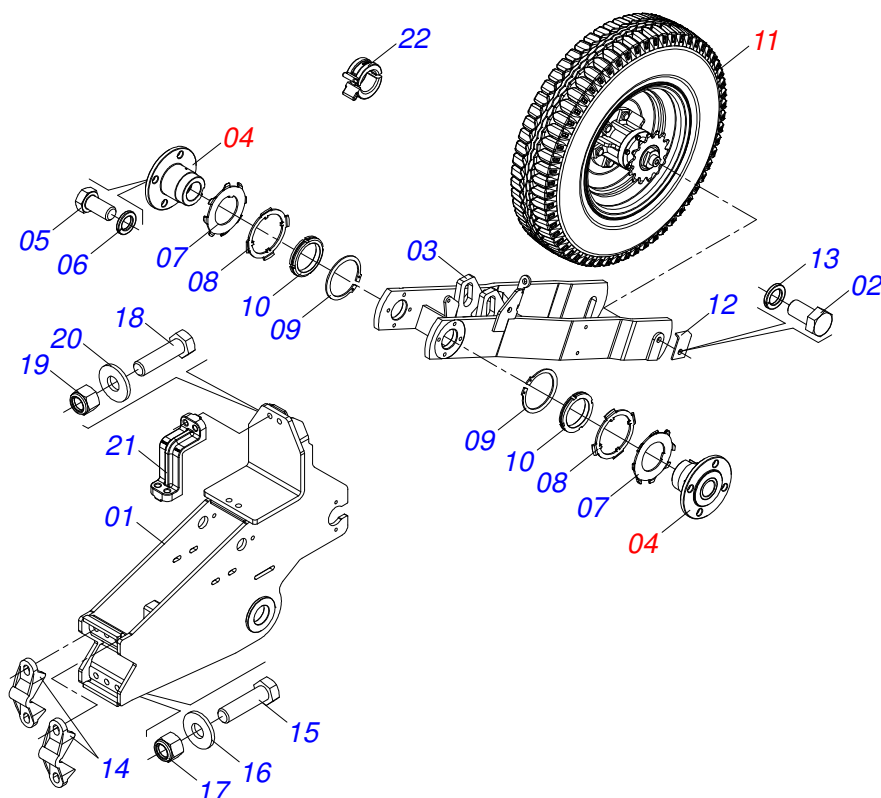 


Item	Code	Description	See page	5750/6850
01	0521063678	WHEEL SUPPORT		01
02	0503011167	M16 X 2 X 30 BOLT		02
03	0511065842	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	7	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED BOX		01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
15	0511010736	5/8" X 5-1/4" BOLT		04
16	0501013753	FLAT WASHER		04
17	0503010811	5/8" UNF SELF ADJUSTING NUT		04
18	0503017857	BOLT 5/8 UNF 4		04
19	0503010811	5/8" UNF SELF ADJUSTING NUT		04
20	0501012140	FLAT WASHER		04
21	0502012720	WHEEL SUPPORT FIXER		01
22	0501047888	ROD STOP		01

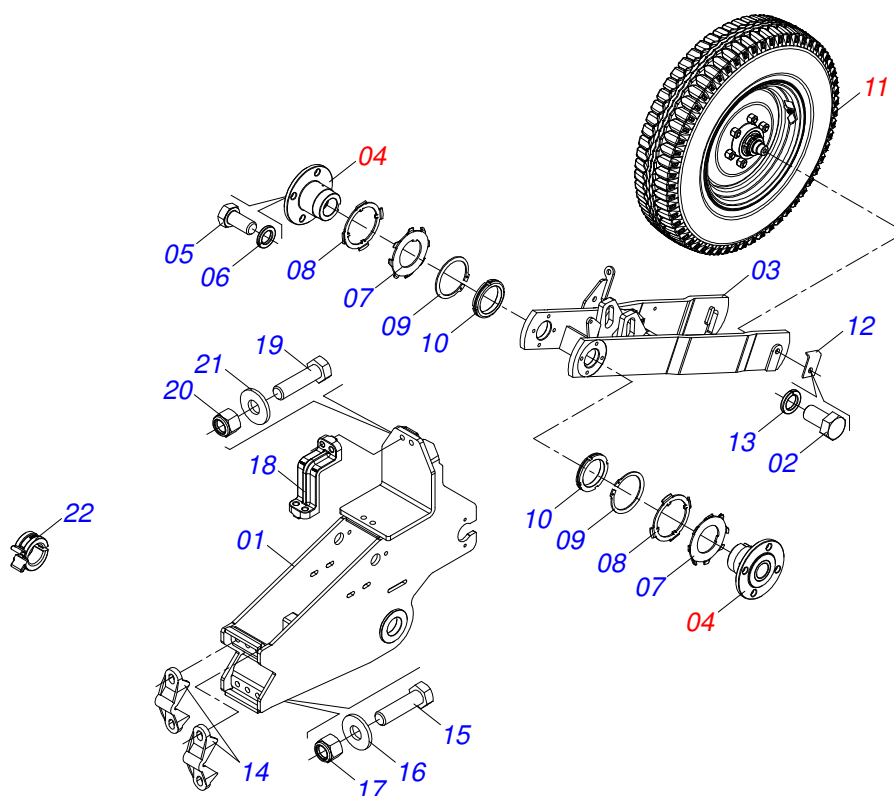 


Item	Code	Description	See page	5750/6850
01	0521063678	WHEEL SUPPORT		01
02	0503011167	M16 X 2 X 30 BOLT		02
03	0511064744	WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	7	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED BOX		01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
15	0511010736	5/8" X 5-1/4" BOLT		04
16	0501013753	FLAT WASHER		04
17	0503010811	5/8" UNF SELF ADJUSTING NUT		04
18	0502012720	WHEEL SUPPORT FIXER		01
19	0503017857	BOLT 5/8 UNF 4		04
20	0503010811	5/8" UNF SELF ADJUSTING NUT		04
21	0501012140	FLAT WASHER		04
22	0501047888	ROD STOP		01

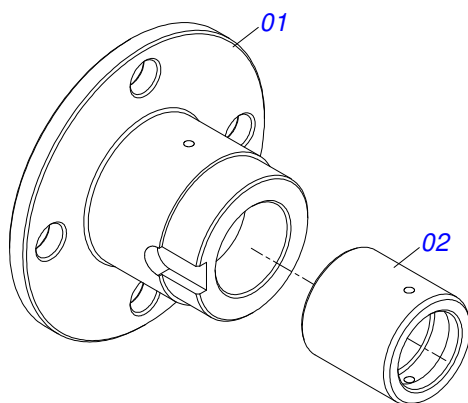 


Item	Code	Description	See page	QT
01	0561015879	WHEELED JOINT BEARING		01
02	0561012895	GLOVE 30,16 X 45,32/45,28 X 47		01

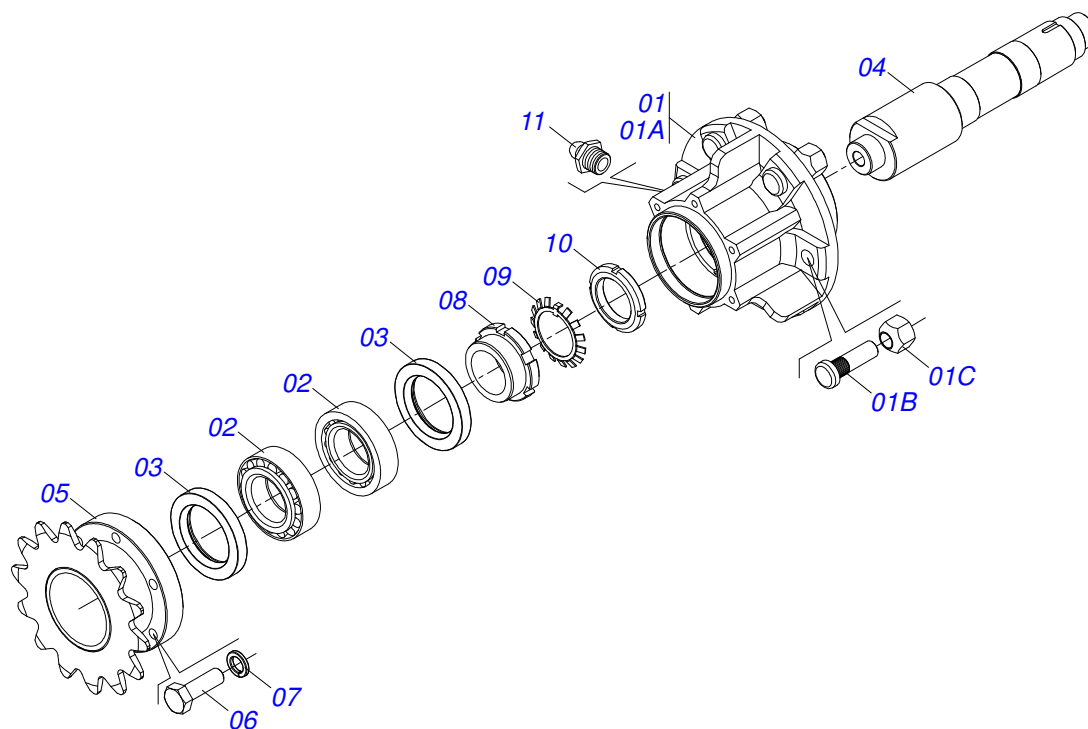 

Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503010328	25590/25523 ROLLER BEARING		02
03	0503010804	00547-B SEAL		02
04	0521018363	00547-B SEAL		01
05	0511062015	14Z GEAR WITH FLANGE		01
06	0503010421	5/16" X 1-1/2" BOLT		06
07	0503011444	SPRING WASHER		06
08	0511015949	LOCK NUT		01
09	0503010329	LOCK WASHER		01
10	0503010330	KM 9 LOCKNUT		01
11	0503010002	1800 GREASE FITTING		01

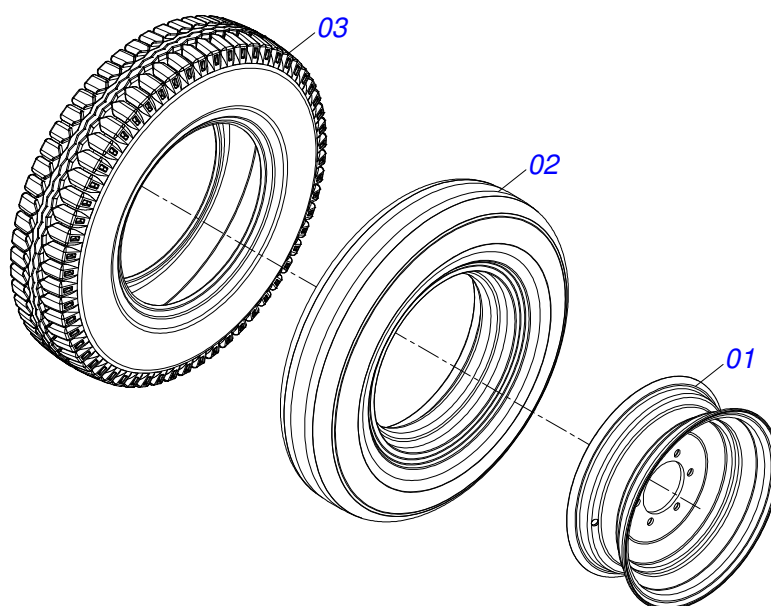 


Item	Code	Description	See page	QT
01	0503016518	RUEDA		01
02	0503012114	7.00 X 16 INNER TIRE		01
03	0503012113	PLY TIRE		01

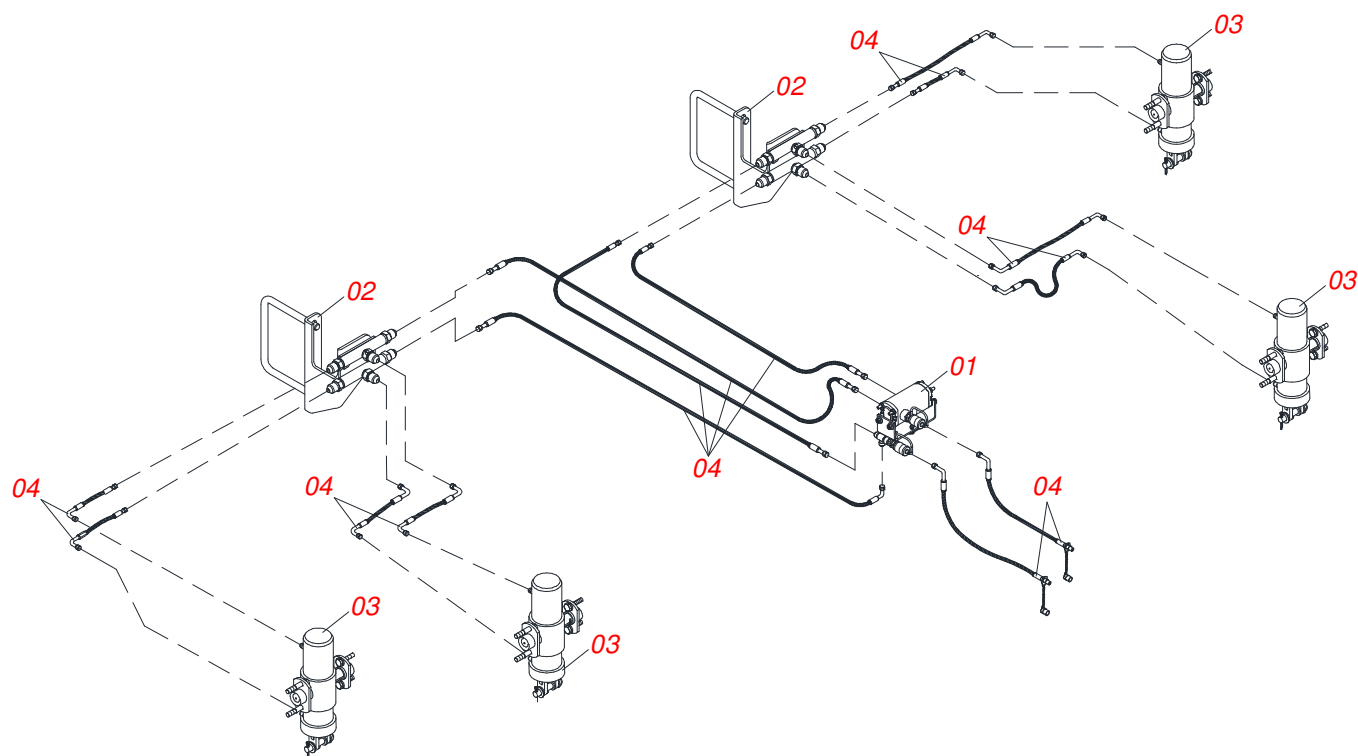 


Item	Code	Description	See page	QT
001	0511053358	VALVE FIXING ASSEMBLY	11	01
002	0511058871	FIXER HYDRAULIC HOSE ASSEMBLY	12	01
003	0511053368	HYDRAULIC CYLINDER ASSEMBLY	13	01
004	0511053449	HOSE KIT	14	01

VALVE FIXING ASSEMBLY

 
0511053358

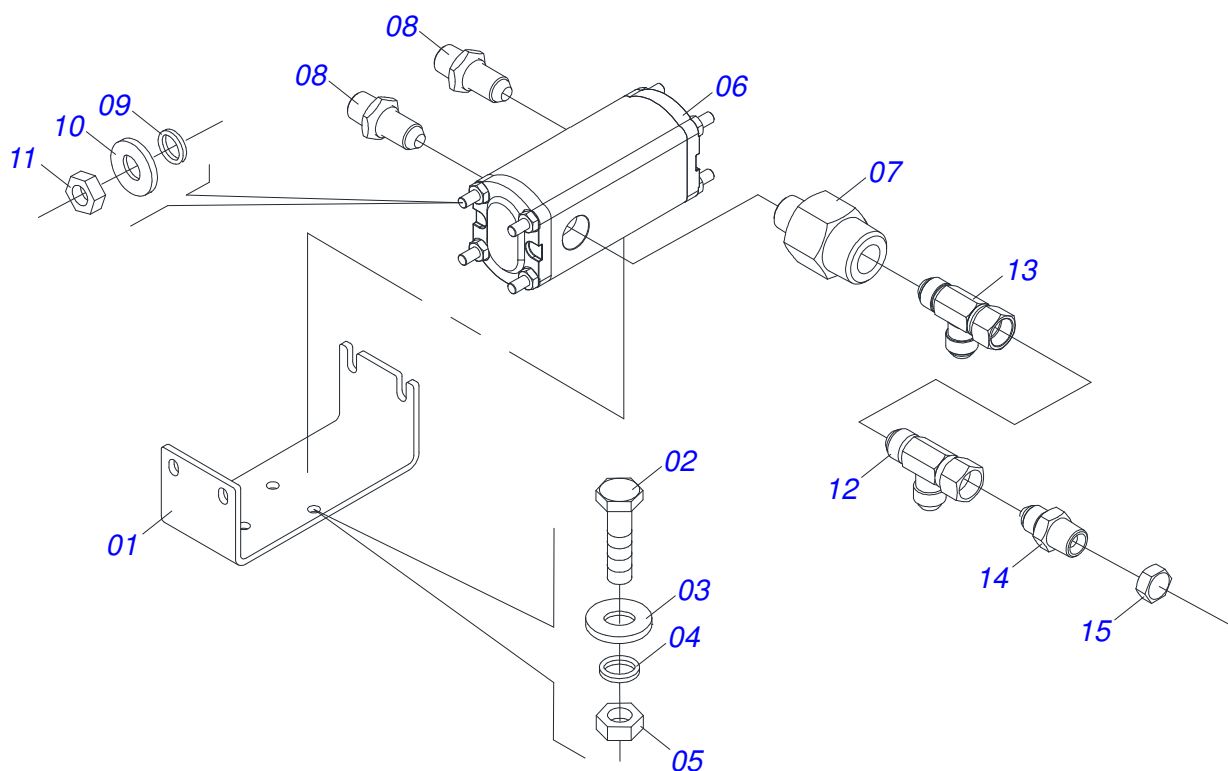


Item	Code	Description	See page	QT
001	0571010596	SUPPORT VALVE 50/50		01
002	0503010371	5/16" X 1" BOLT		02
003	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
004	0503010179	5/16" ZN SPRING WASHER		02
005	0503010337	5/16" NUT		02
006	0503013791	DOUBLE MOTOR		01
007	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE		01
008	0551012463	1/2" BSPT X 3/4" UNF X 51 NIPPLE		02
009	0503015075	M10 SPRING WASHER		04
010	0501010984	FLAT WASHER		04
011	0503011051	M10 X 0.6" NUT		04
012	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
013	0503012341	T 7/8" ADAPOR GIRAT NUT		02
014	0541012166	NIPPLE 3/4" UNF X 7/8"		01
015	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01

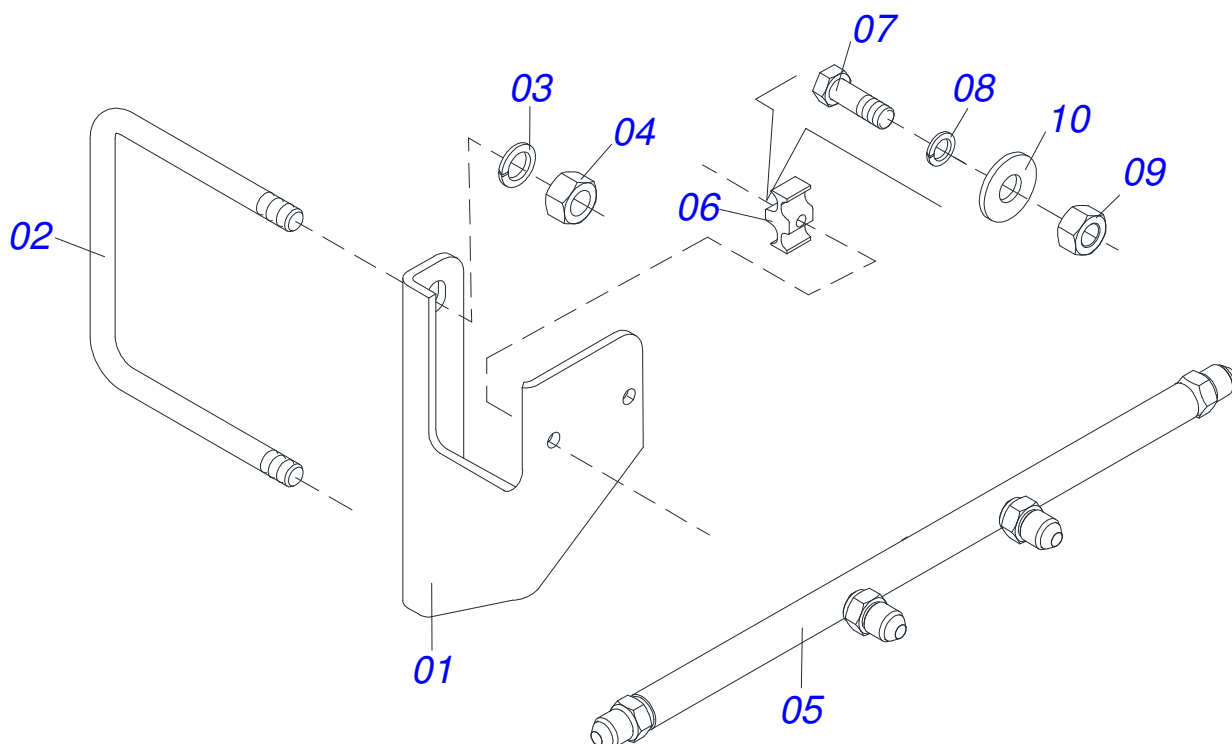 

Item	Code	Description	See page	QT
001	0561017277	OIL CONDUCTOR FIXER PLATE		04
002	0521010718	5/8" U BOLT		04
003	0503010027	5/8" SPRING WASHER		08
004	0503010013	5/8" NUT		08
005	0521064749	OIL CONDUCTOR		04
006	0502012702	BODY SUPPORT CLAMP		06
007	0503011268	3/8" X 2-1/2" BOLT		06
008	0503010025	3/8" SPRING WASHER		06
009	0503010026	3/8" NUT		06
010	0501012140	FLAT WASHER		04

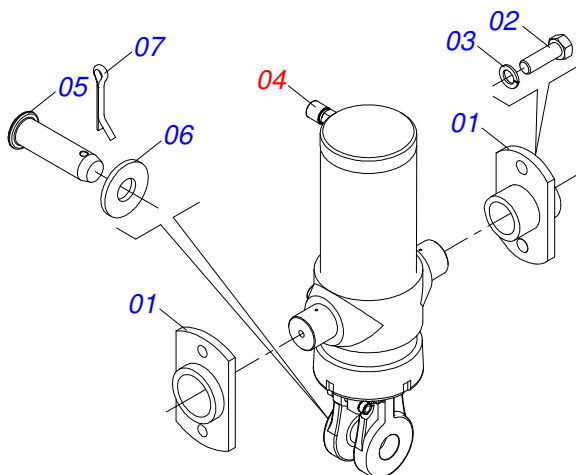 


Item	Code	Description	See page	QT
01	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		12
02	0503010834	1/2 X 1 BOLT		24
03	0503010019	1/2" SPRING WASHER		24
04	0511058411	HYDRAULIC CYLINDER	15	06
05	0521010546	1.2" X 5.7" COUPLING SHAFT		06
06	0501017779	32 X 60 X 4.75 FLAT WASHER		12
07	0503010523	1/4" X 2" COTTERPIN		06

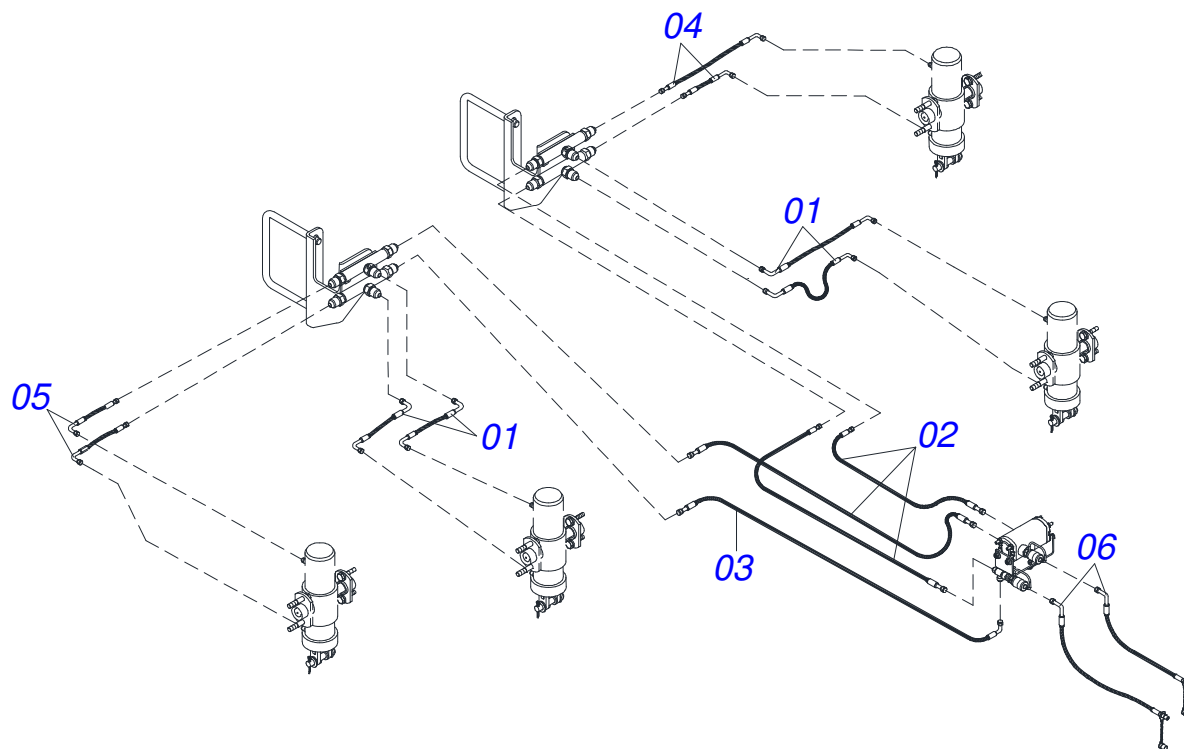 


Item	Code	Description	See page	QT
001	0501080760	3/8" X 500 TC-TC HOSE	08	
002	0501080599	3/8 X 650 TC-TR HOSE	02	
003	0501080328	3/8" X 29" TR-TC HOSE	02	
004	0501080352	3/8" X 1400 TR-TR HOSE ASSY	03	
005	0501080025	TR-TC HOSE ASSY	01	
006	0501081073	HOSE 1/2 X 4200 TC-TM	02	

HYDRAULIC CYLINDER

 0511058411

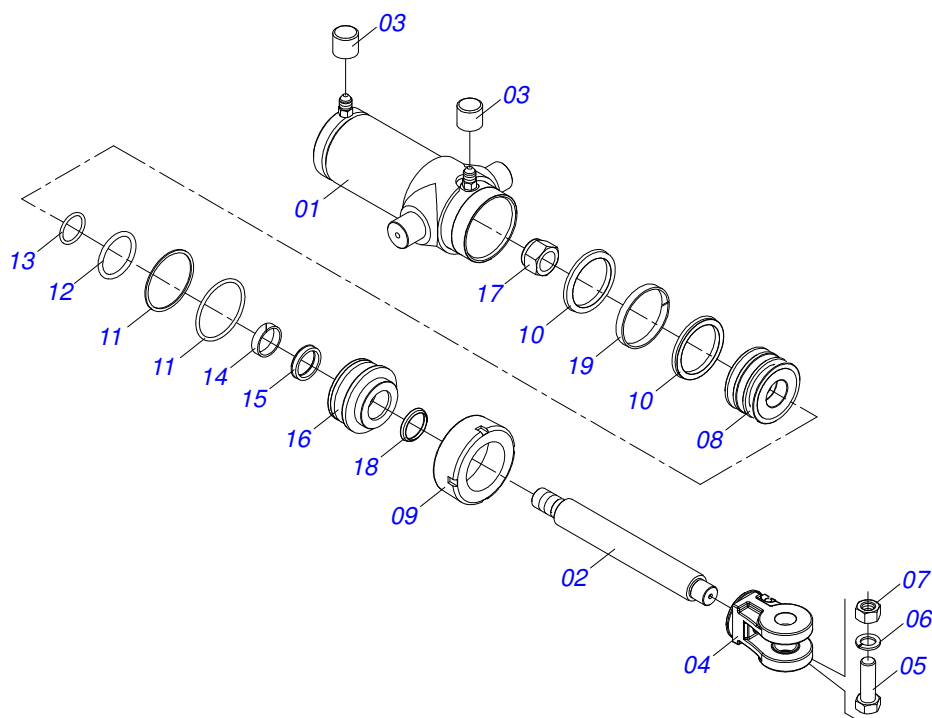

Item	Code	Description	See page	QT
01	0511066774	2.5" X 28" CYLINDER CASE		01
02	0541017674	TURNBUCLE BODY		01
03	0503030385	CYLINDER PLUG N-002		02
04	0511064408	FORK COP		01
05	0503011094	3/8" X 2" BOLT		01
06	0503010025	3/8" SPRING WASHER		01
07	0503010026	3/8" NUT		01
08	0581010302	RING OF SUPPORT		01
09	0502012822	101.60 END CAP		01
10	0503011061	8-342 BACK-UP RING		02
11	0503010338	2-342 N 3006-9B O'RING		02
12	0503017936	RING		01
13	0503017938	RING GUIDE		01
14	0503017937	GASKET		01
15	0503010761	D-1750 SCRAPER RING		01
16	0581010837	PISTON		01
17	0503010817	1.1/4" SELF LOCKING NUT		01
18	0503015633	SELEMASTER SEALING		01
19	0503018029	2-217 O'RING		01

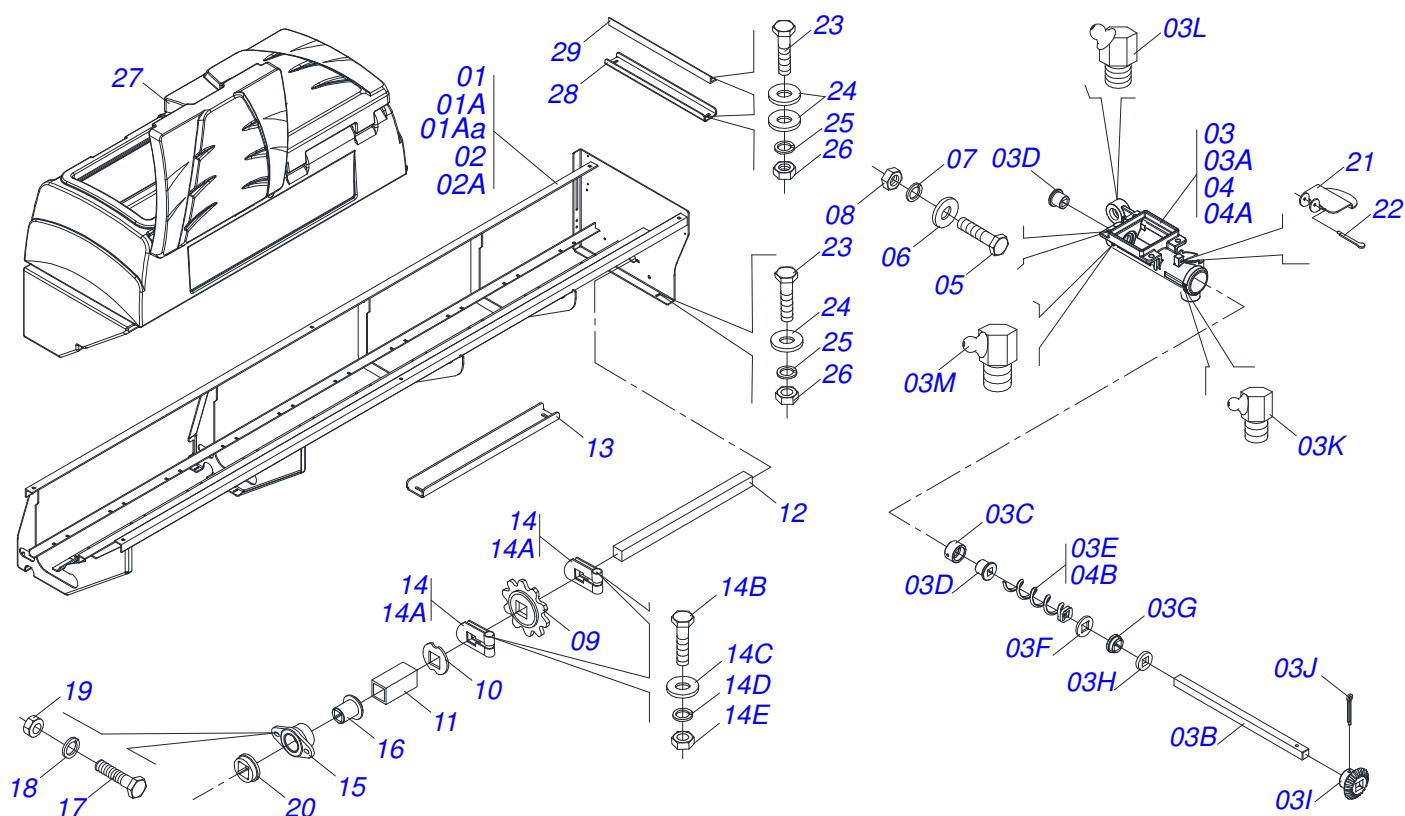 

Item	Code	Description	See page	15 L
01	0511053455	SET BOX FERTILIZER	16	01
01A	0511050641	RH FERTILIZER BOX SUPPORT		01
01Aa	0521062052	RH FERTILIZER SILO SUPORT ASSY		01
02	0511050642	LEFT FERTILIZER BOX SUPPORT		01
02A	0521062051	LH FERTILIZER SILO SUPORT ASSY		01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2		08
03A	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		08
03B	0501019851	DISTRIBUTOR FERTILIZER AXLE		16
03C	0521010309	SLEEVE INTER		16
03D	0503030275	AGRICULTURAL BEARING		32
03E	0503031164	RIGHT HELICAL CONDUTOR		08
03F	0501010637	FLAT WASHER		16
03G	0503030303	SUPPORT WASHER		16
03H	0501013774	GREASE SEAL		16
03I	0502011412	18Z CONICAL GEAR		16
03J	0503010523	1/4" X 2" COTTERPIN		16
03K	0503011962	GREASE FITTING		16
03L	0503010003	1845 GREASE FITTING		16
03M	0503012826	CREASE FITTING		16
04	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2		08
04A	0501110676	SIDE FERTILIZER DISTRIBUTOR		08
04B	0503031165	LEFT HELICAL CONDUTOR		08
05	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		64
06	0501010984	FLAT WASHER		64
07	0503011443	3/8" SPRING WASHER		64
08	0503010026	3/8" NUT		64
09	0511061759	22Z P12,70 FQ 3/4" GEAR		02
10	0521014167	CONE LOCK		04
11	0551018055	22,65 X 60 SLEEVE		04
12	0561018585	SQUARE SHAFT		02
13	0571013224	STRINGER FIXING CASH FERTILIZER		04


SET BOX FERTILIZER

0511053455


Item	Code	Description	See page	15 L
14	0501053788	Q3/4" FASTENER AXLE ASSY		04
14A	0521010691	AXLE FASTENER		04
14B	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		04
14C	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
14D	0503010143	1/4" SPRING WASHER		04
14E	0503010144	1/4" NUT		04
15	0501110392	SILO SUPPORT BEARING		02
16	0521012485	GEAR BOX BEARING AGRICUTURAL		02
17	0503010363	5/16" X 1" BOLT		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04
20	0503030303	SUPPORT WASHER		02
21	0571010590	FERTILIZER SIDE COVER		15
22	0503010257	1/8" X 1" COTTERPIN		15
23	0503010849	3/8" X 1-1/2" BOLT		24
24	0501010984	FLAT WASHER		36
25	0503010025	3/8" SPRING WASHER		24
26	0503010026	3/8" NUT		24
27	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		04
28	0571016020	STRINGER FIXING CASH FERTILIZER		02
29	0571013223	ANGLE BAR		02

PLATFORM SET

 0511053453

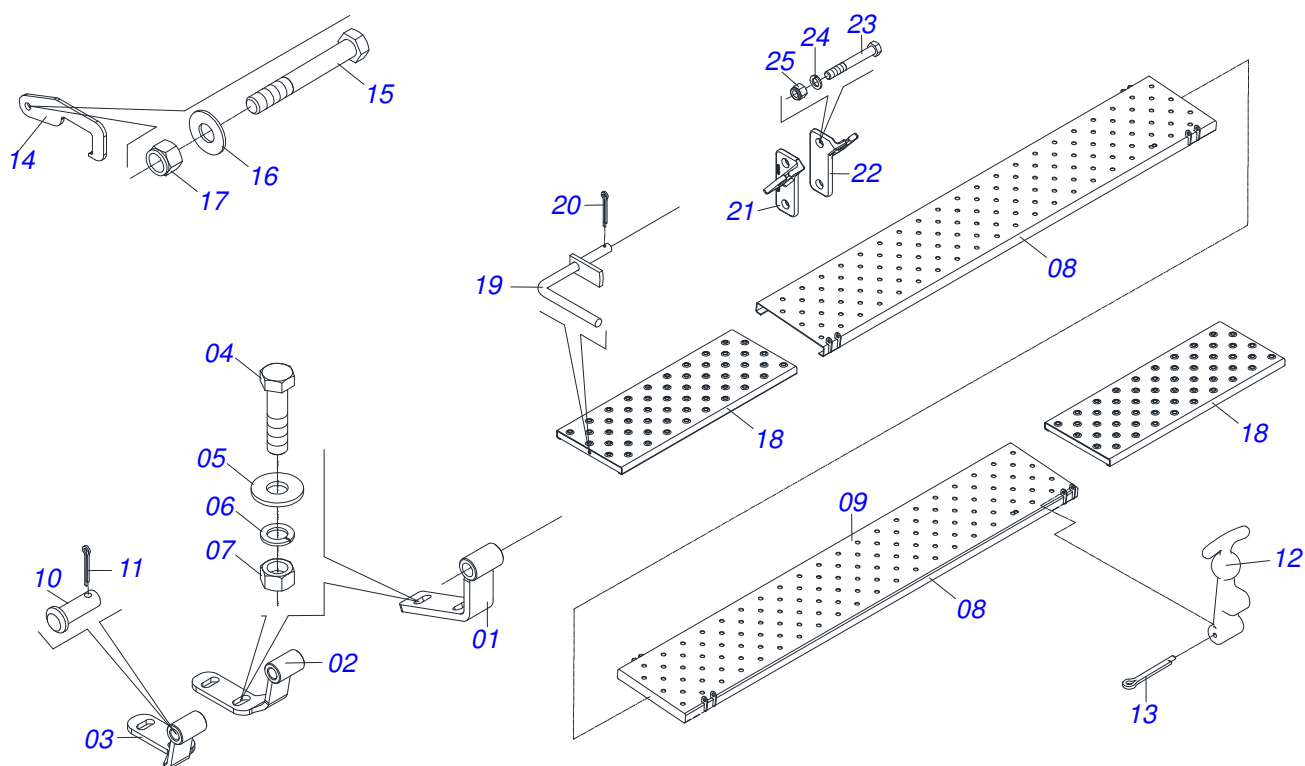


Item	Code	Description	See page	15 L
001	0521061861	PLATFORM FIXER	02	
002	0521062061	CENTRAL ARTICULACION	01	
003	0521062062	CENTRAL ARTICULACION	01	
004	0503010849	3/8" X 1-1/2" BOLT	08	
005	0501010984	FLAT WASHER	16	
006	0503010025	3/8" SPRING WASHER	08	
007	0503010026	3/8" NUT	08	
008	0521062059	LEFT PLATFORM COP FLEX 15	01	
009	0521062058	RIGHT PLATFORM COP FLEX 15	01	
010	0521010549	COUPLING SHAFT	04	
011	0503010300	5/32" X 1" COTTERPIN	04	
012	0503011333	COVER FIXER	02	
013	0503010274	5/32"X 2" COTTERPIN	02	
014	0551019115	LOCKING PLATFORM FIXATION	02	
015	0501010096	3/8" X 2" BOLT	02	
016	0501010984	FLAT WASHER	02	
017	0503013357	3/8" SELF-ADJUSTING NUT	02	
018	0521061676	PLATFORM PROLONG	02	
019	0511069664	PLATFORM EXTENSION LOCK	02	
020	0503010257	1/8" X 1" COTTERPIN	02	
021	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
022	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
023	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
024	0503010019	1/2" SPRING WASHER	04	
025	0503010060	1/2" NUT	04	

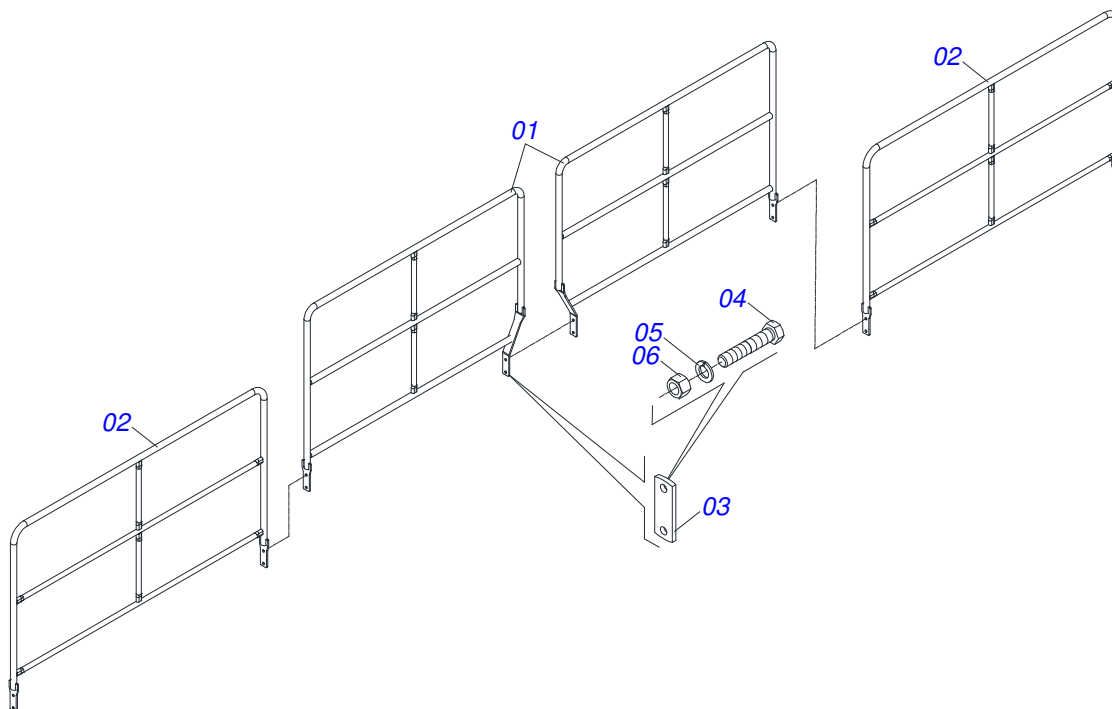 


Item	Code	Description	See page	15 L
001	0521064080	CENTRAL CHAIN		02
002	0521064101	SIDE CHAIN (1850)		02
003	0521018290	RANDRAIL HOLDER		06
004	0503010395	1/2" X 1-1/4" BOLT		08
005	0503010019	1/2" SPRING WASHER		08
006	0503010060	1/2" NUT		08

RESTING ASSEMBLY

 
0511054971

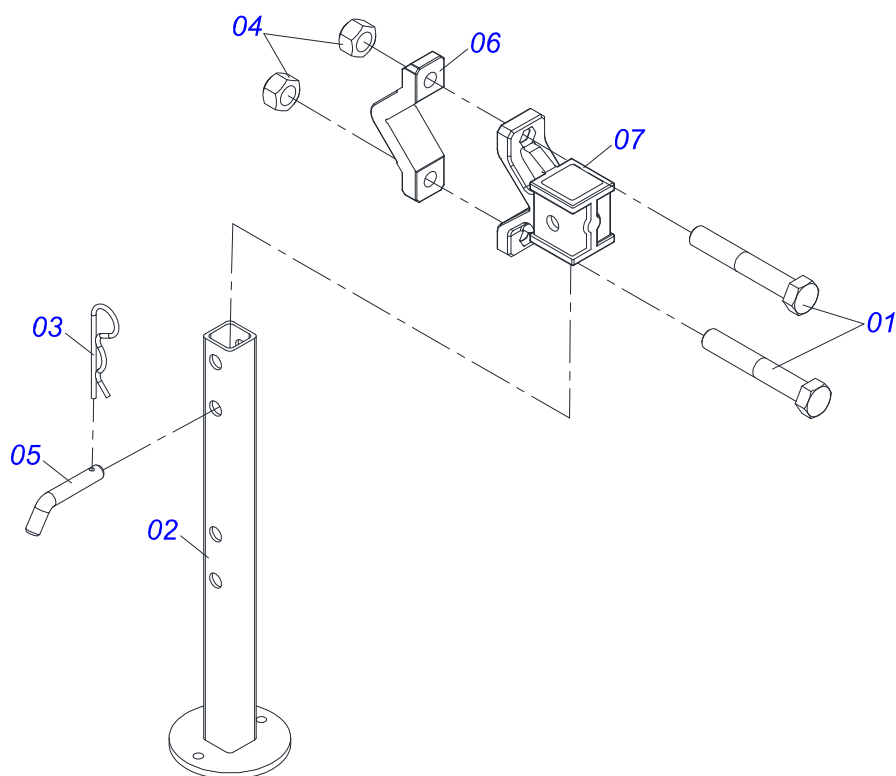


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

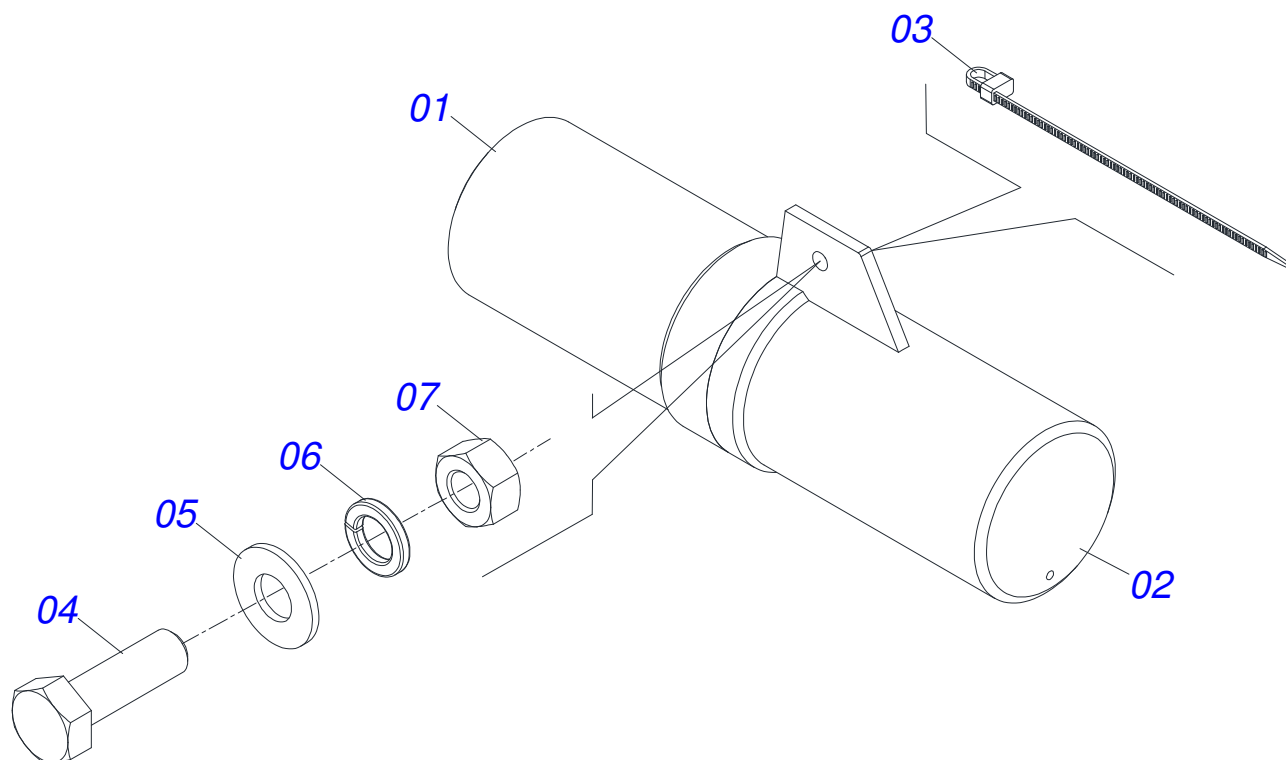 

Item	Code	Description	See page	QT
001	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
002	0511031563	BAG WITH MANUAL		01
003	0503010267	NYLON CLAMP		01
004	0503010363	5/16" X 1" BOLT		01
005	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
006	0503010179	5/16" ZN SPRING WASHER		01
007	0503010337	5/16" NUT		01

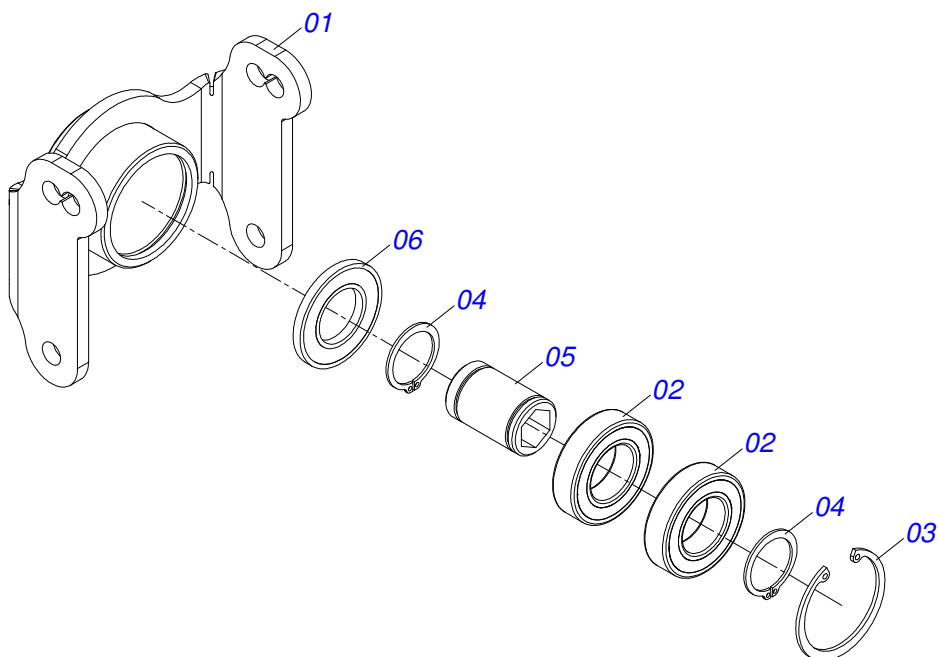 


Item	Code	Description	See page	QT
01	0521065913	ROW SEED BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		02
05	0571017815	BEARING AXLE BODY		01
06	0503017008	SEAL RING		01

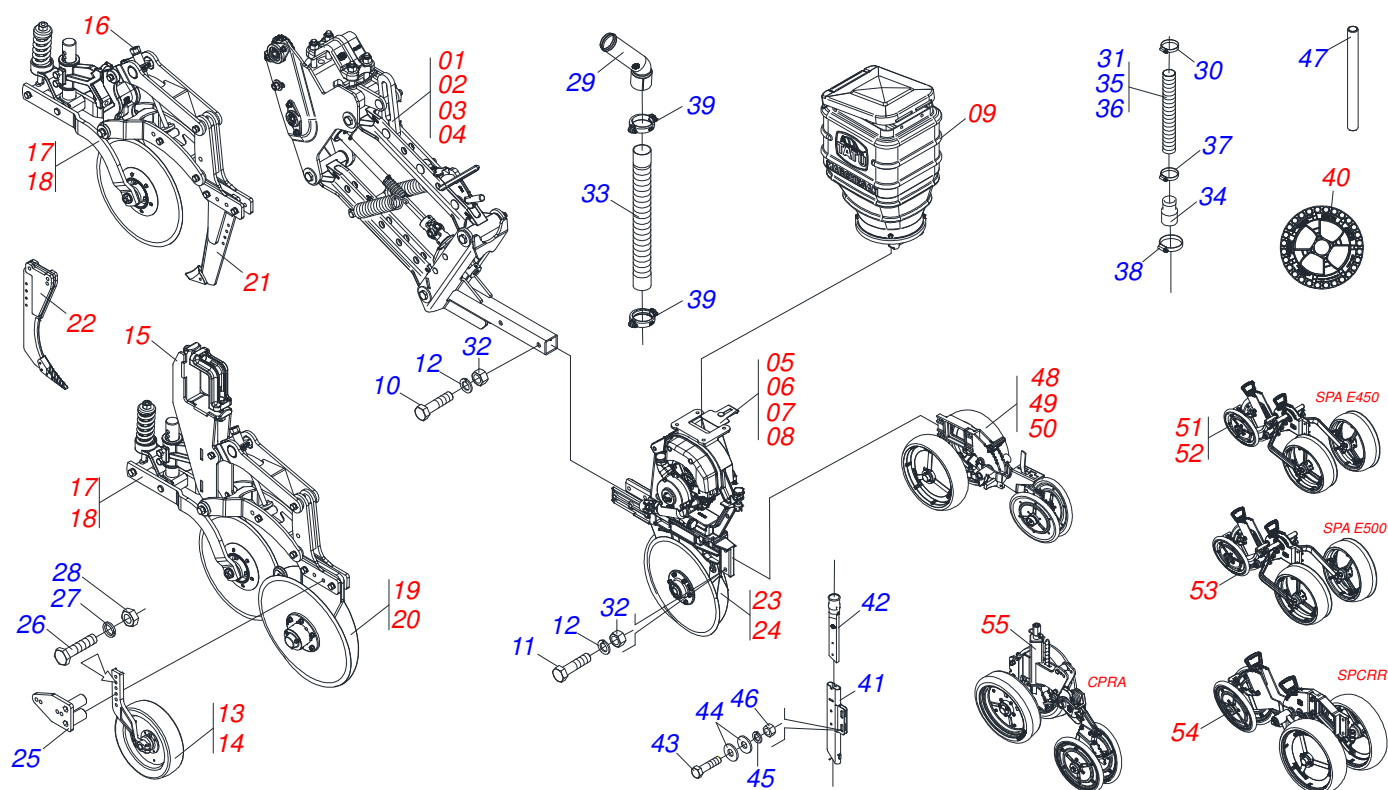 


Item	Code	Description	See page	QT
01	0511057729	FRONT SEED SHORT	22	01
02	0521051622	FRONT SEED SHORT ROW	23	01
03	0511057730	FRONT SEED LONG	24	01
04	0521051621	FRONT SEED LONG ROW	25	01
05	0511057209	ROW RIGHT REAR SEED	25	01
06	0511057210	ROW LEFT REAR SEED	26	01
07	0511057495	RIGHT REAR ROW SEED SUP PP PM 400	27	01
08	0511057496	LEFT REAR ROW SEED SUP PP PM 400	28	01
09	0511057509	SEED RESERVOIR PNEUMATIC ASSY	36	01
10	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02
11	0503010905	1/2" X 2-1/4" BOLT		02
12	0503010019	1/2" SPRING WASHER		04
13	0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL	37	01
14	0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	40	01
15	0511053023	LONG FERTILIZER LINE	42	01
16	0511053024	FERTILIZER SHORT LINE	45	01
17	0511051818	DISC CUT 18 SEMI MOUNTED	47	01
18	0511051819	DC 20 SEMI MOUNTED	48	01
19	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	44	01
20	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	46	01
21	0501110231	SCARIFIER HEAD WITH SPIKE 0061	51	01
22	0501110723	SCARIFIER SPINDLE	52	01
23	0511057153	DDD LEFT SUPREMA PRECISION PLANTING	33	01
24	0511057154	DDD RITGH SUPREMA PRECISION PLANTING	32	01
25	0511065909	DEPTH FIXER BASE		01
26	0503010547	1/2" X 4" BOLT		02
27	0503010019	1/2" SPRING WASHER		02
28	0503010060	1/2" NUT		02
29	0503031050	CURVED CONDUCTOR		01
30	0503010246	CLAMP		02
31	0571019714	AIR CONDUCTOR		01

Item	Code	Description	See page	QT
32	0503010060	1/2" NUT		04
33	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		01
34	0571019716	ADAPTER		02
35	0531016195	4" X 94" AIR CONDUCTOR		01
36	0521019552	5" X 188" AIR CONDUCTOR		01
37	0503011372	102 TO 121 CLAMP		01
38	0503012724	121 TO 140 CLAMP		01
39	0521050525	FIXER FERTILIZER CONDUCTOR	53	02
40	0503062417	KIT CORN DISTRIBUTION		01
41	0501110714	INNER SOCKET FASTENER		01
42	0503030483	FERTILIZER SOCKET		01
43	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
44	0501010984	FLAT WASHER		04
45	0503010025	3/8" SPRING WASHER		02
46	0503010026	3/8" NUT		02
47	0531013600	PRESS ADJUSTMENT LEVER		01
48	0521044460	SYSTEM DEPTH / COMPACTOR	54	01
49	0521051424	WHEEL SYSTEM DEPTH / COMPACTOR QUICK ADJUSTMENT		01
50	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	60	01
51	0521044269	PRESS WHEELS/DEPTH ASSY	68	01
52	0521042327	DEPTH CONTROL & PRESS WHEEL ASSY	70	01
53	0521045198	PRESS WHEELS		01
54	0521046501	DEPTH CONTROL AND PRESS WHEEL WITH FAST ADJUSTING		01
55	0521044538	DEPHT WHIT REGULACION ANGLE COMPACT CONTROL		01

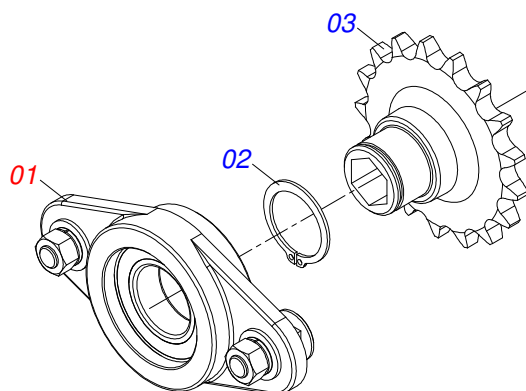 

Item	Code	Description	See page	QT
01	0511050617	FRONT SEED ROW BEARING	23	01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0502012819	17Z GEAR WITH HEX HOLE		01

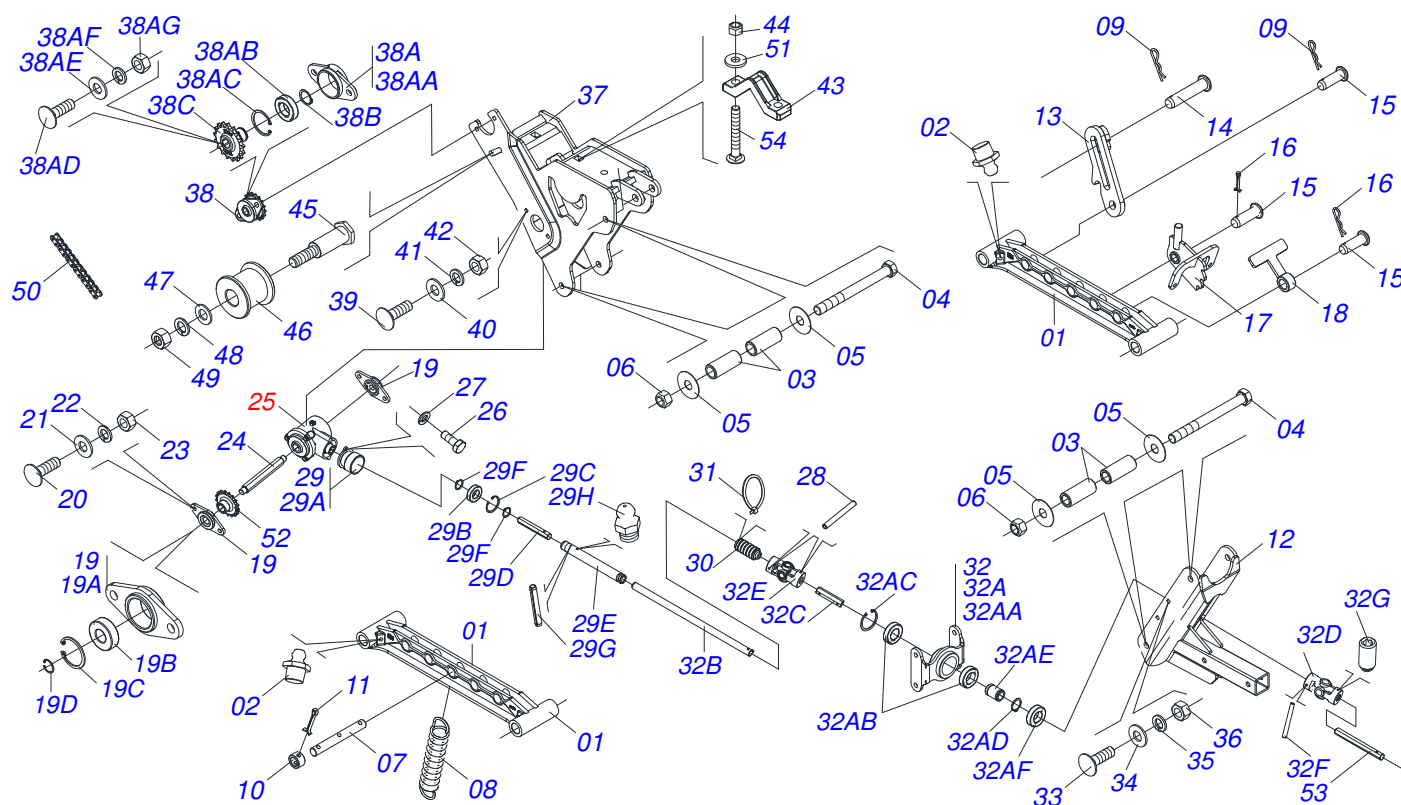 

Item	Code	Description	See page	QT
001	0502012784	DRIVER PIVOT		02
002	0503010002	1800 GREASE FITTING		04
003	0531015151	0.6" X 1" X 2.4" SLEEVE		08
004	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
005	0531015184	FLAT WASHER		08
006	0503012412	5/8 UNC SELF LOCKING NUT		04
007	0571012449	CONTROL AXLE		01
008	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING		02
009	0503030168	HAIR PIN		02
010	0571012448	LOCK SLEEVE AXLE REGULATION		01
011	0503010131	3/16" X 1-1/2" COTTERPIN		01
012	0521065914	FRAME ASSY		01
013	0521065677	LIMITER		01
014	0571012443	COUPLING SHAFT		01
015	0571012442	COUPLING SHAFT		03
016	0503010131	3/16" X 1-1/2" COTTERPIN		02
017	0502012785	SEED ROW ADJUSTMENT LEVER ASSY		01
018	0502012814	BOX LEVER LOCK		01
019	0511054635	BEARING AXLE BODY	28	02
019A	0502012718	BEARIN BODY		01
019B	0503012882	BEARING		01
019C	0503017011	SEAL RING		01
019D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
020	0503011953	5/16" X 1" BOLT		04
021	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
022	0503010179	5/16" ZN SPRING WASHER		04
023	0503010337	5/16" NUT		04
024	0571012441	TRANSMISSION AXLE		01
025	0511054884	TRANSMISSION BOX	26	01
026	0503011378	M6X1X16 C S 8.8 ZN BOLT		02
027	0503015110	M06 SPRING WASHER		02


FRONT SEED SHORT

0511057729


Item	Code	Description	See page	QT
028	0503011855	0.2" X 1.8" SPRING PIN		01
029	0511052393	BEARING FOLLOWER ROW ASSY	27	01
029A	0521063532	BEARING FOLLOWER ROW ASSY		01
029B	0503011410	ROLLER BEARING		01
029C	0503011105	SEAL RING		01
029D	0571012450	COP FLEX AXLE		01
029E	0571012459	COP FLEX AXLE		01
029F	0503010406	501025 CLAMPING RING (FOR AXLE)		02
029G	0503015356	SPRING PIN		01
029H	0503010691	1/4" GREASE FITTING		01
030	0503032984	HOOD HEX AXLE ROW		01
031	0503013100	NYLON CLAMP		01
032	0511057625	ROW SEED BEARING	30	01
032A	0511057156	BEARING LINE SEMI MOUNTED	21	01
032AA	0521065913	ROW SEED BEARING		01
032AB	0503011410	ROLLER BEARING		02
032AC	0503011105	SEAL RING		01
032AD	0503010406	501025 CLAMPING RING (FOR AXLE)		02
032AE	0571017815	BEARING AXLE BODY		01
032AF	0503017008	SEAL RING		01
032B	0571018731	HEX AXLE		01
032C	0571017900	5/8" X 77" HEX AXLE		01
032D	0561014778	HEX UNIVERSAL JOINT		01
032E	0501056296	UNIVERSAL JOINT		01
032F	0503011855	0.2" X 1.8" SPRING PIN		03
032G	0503013958	1/4" X 1" BOLT		02
033	0503011953	5/16" X 1" BOLT		04
034	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
035	0503010179	5/16" ZN SPRING WASHER		04
036	0503010337	5/16" NUT		04
037	0521063525	SHORT SEED ROW FRONT		01
038	0511050609	BEARING WITH 17Z GEAR ASSY	22	01
038A	0511050617	FRONT SEED ROW BEARING	23	01
038AA	0502011697	BEARING OF THE GEAR BOX		01
038AB	0503011410	ROLLER BEARING		01
038AC	0503011105	SEAL RING		01
038AD	0503011953	5/16" X 1" BOLT		02
038AE	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
038AF	0503010179	5/16" ZN SPRING WASHER		02
038AG	0503010337	5/16" NUT		02
038B	0503010406	501025 CLAMPING RING (FOR AXLE)		01
038C	0502012819	17Z GEAR WITH HEX HOLE		01
039	0503011953	5/16" X 1" BOLT		02
040	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
041	0503010179	5/16" ZN SPRING WASHER		02
042	0503010337	5/16" NUT		02
043	1902010175	HITCH CLAMP		01
044	0503010811	5/8" UNF SELF ADJUSTING NUT		02
045	0531019479	AXLE CHAIN GEAR		01
046	0541016454	PULLEY		01
047	0503011828	FLAT WASHER		01
048	0503010019	1/2" SPRING WASHER		01
049	0503010060	1/2" NUT		01
050	0503016501	40-1 X 49 CHAIN LINK + MENDING		01
051	0501012140	FLAT WASHER		02
052	0502012782	17Z GEAR WITH HEX HOLE		01
053	0571019706	HEX AXLE		01
054	0503016460	5/8" X 4.1/2" BOLT		02

FRONT SEED ROW BEARING

 0511050617

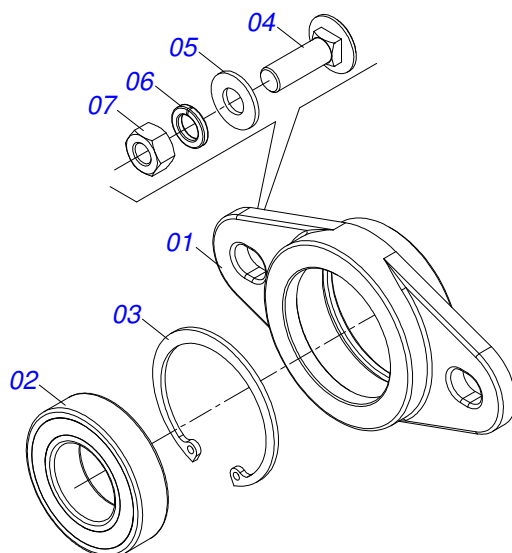

Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02

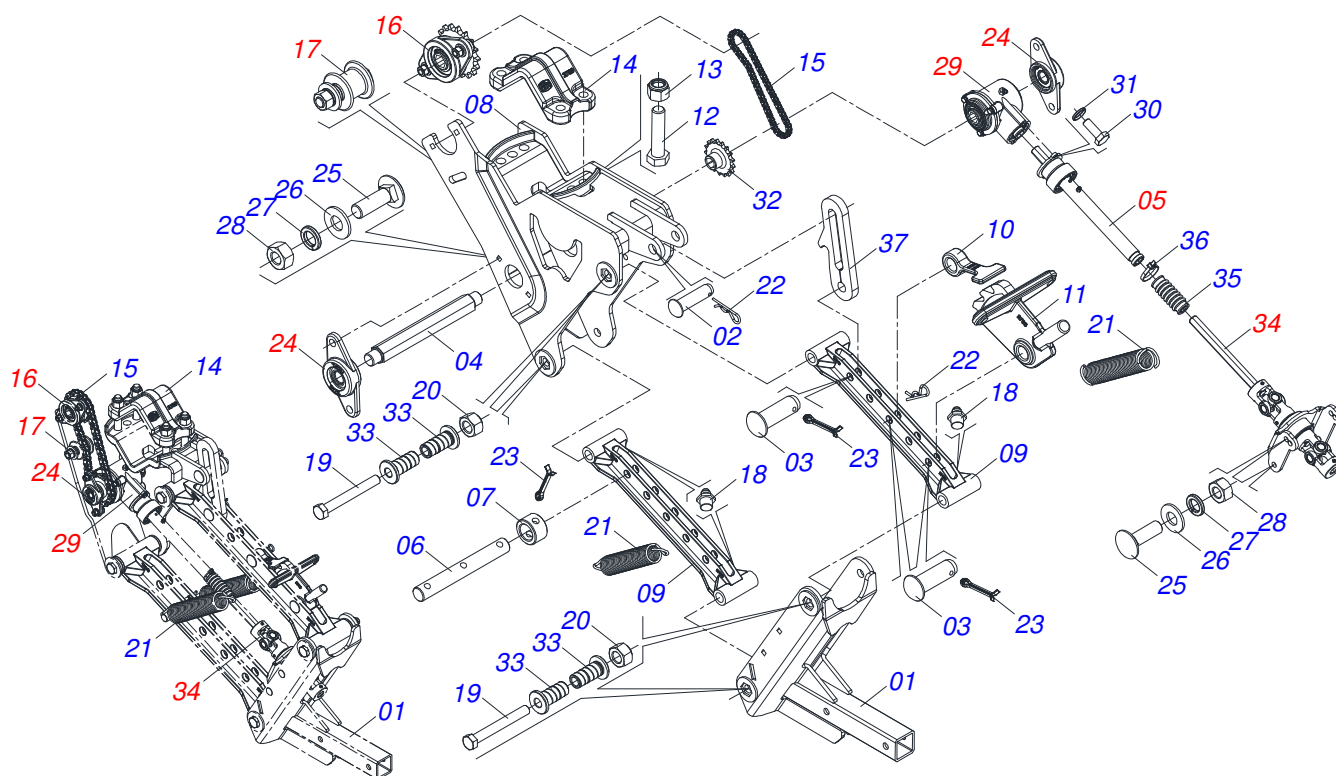 


Item	Code	Description	See page	QT
001	0521065914	FRAME ASSY		01
002	0571012443	COUPLING SHAFT		01
003	0571012442	COUPLING SHAFT		03
004	0571012441	TRANSMISSION AXLE		01
005	0511052393	BEARING FOLLOWER ROW ASSY	27	01
006	0571012449	CONTROL AXLE		01
007	0571012448	LOCK SLEEVE AXLE REGULATION		01
008	0521068100	SUPPORT FRONT LINE SHORT SEED		01
009	0502012784	DRIVER PIVOT		02
010	1902012814	BODY LOCK REGULATOR LEVER REGULATOR SEED		01
011	0502012785	SEED ROW ADJUSTMENT LEVER ASSY		01
012	0503017857	BOLT 5/8 UNF 4		04
013	0503010811	5/8" UNF SELF ADJUSTING NUT		04
014	0502012789	FIXER SUPPORT FERTILIZER ROW		01
015	0503016501	40-1 X 49 CHAIN LINK + MENDING		01
016	0511050609	BEARING WITH 17Z GEAR ASSY	22	01
017	0511055260	SEED ROW CHAIN TENSIONER	24	01
018	0503010002	1800 GREASE FITTING		04
019	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
020	0503012412	5/8 UNC SELF LOCKING NUT		04
021	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING		02
022	0503030168	HAIR PIN		02
023	0503010131	3/16" X 1-1/2" COTTERPIN		03
024	0511054635	BEARING AXLE BODY	28	02
025	0503011953	5/16" X 1" BOLT		08
026	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
027	0503010179	5/16" ZN SPRING WASHER		08
028	0503010337	5/16" NUT		08
029	0511057159	TRANSMISSION BOX SEED LINE	29	01
030	0503011378	M6X1X16 C S 8.8 ZN BOLT		02
031	0503015110	M06 SPRING WASHER		02


**FRONT SEED SHORT ROW**

 0521051622

Item	Code	Description	See page	QT
032	0502012782	17Z GEAR WITH HEX HOLE		01
033	0581014435	SLEEVE ARM LINE SEED		08
034	0511057625	ROW SEED BEARING	30	01
035	0503032984	HOOD HEX AXLE ROW		01
036	0503013100	NYLON CLAMP		01
037	0581015124	LIMITER COURSE		01

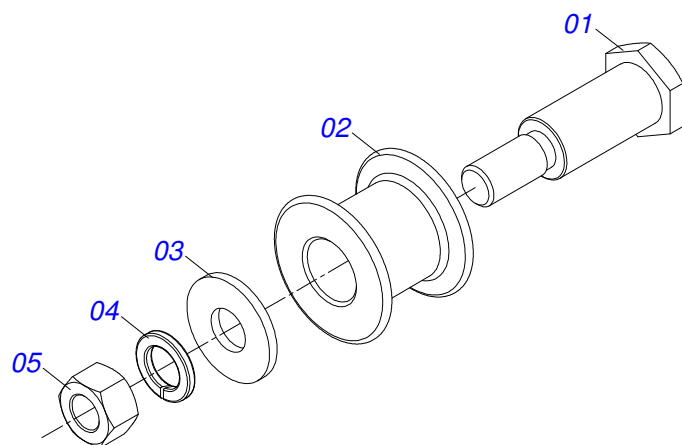

Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

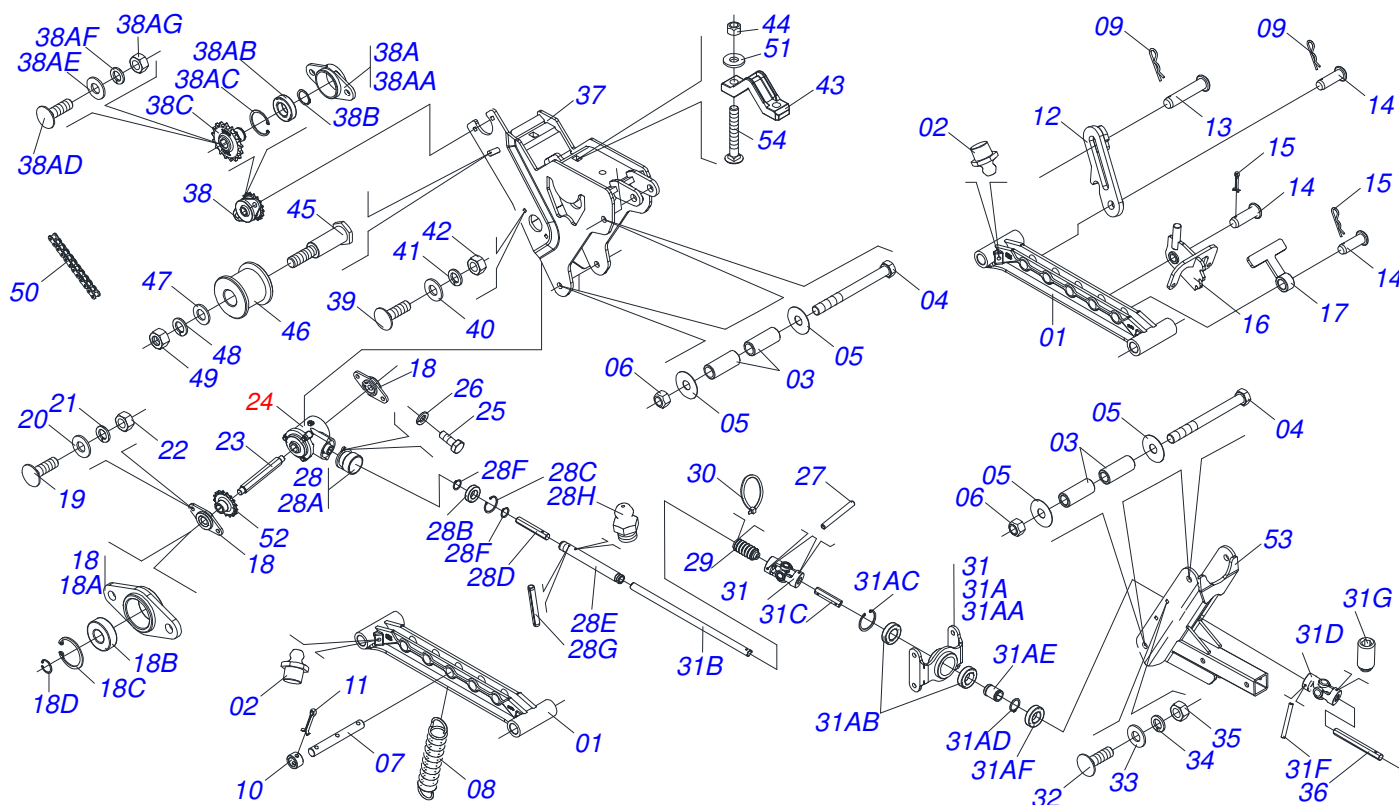 


Item	Code	Description	See page	QT
001	0502012784	DRIVER PIVOT		02
002	0503010002	1800 GREASE FITTING		04
003	0531015151	0.6" X 1" X 2.4" SLEEVE		08
004	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
005	0531015184	FLAT WASHER		08
006	0503012412	5/8 UNC SELF LOCKING NUT		04
007	0571012449	CONTROL AXLE		01
008	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING		02
009	0503030168	HAIR PIN		02
010	0571012448	LOCK SLEEVE AXLE REGULATION		01
011	0503010131	3/16" X 1-1/2" COTTERPIN		01
012	0521065677	LIMITER		01
013	0571012443	COUPLING SHAFT		01
014	0571012442	COUPLING SHAFT		03
015	0503010131	3/16" X 1-1/2" COTTERPIN		02
016	0502012785	SEED ROW ADJUSTMENT LEVER ASSY		01
017	0502012814	BOX LEVER LOCK		01
018	0511054635	BEARING AXLE BODY	28	02
018A	0502012718	BEARIN BODY		01
018B	0503012882	BEARING		01
018C	0503017011	SEAL RING		01
018D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
019	0503011953	5/16" X 1" BOLT		04
020	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
021	0503010179	5/16" ZN SPRING WASHER		04
022	0503010337	5/16" NUT		04
023	0571012441	TRANSMISSION AXLE		01
024	0511054884	TRANSMISSION BOX	26	01
025	0503011378	M6X1X16 C S 8.8 ZN BOLT		02
026	0503015110	M06 SPRING WASHER		02
027	0503011855	0.2" X 1.8" SPRING PIN		01


FRONT SEED LONG

0511057730

Item	Code	Description	See page	QT
028	0511052393	BEARING FOLLOWER ROW ASSY	27	01
028A	0521063532	BEARING FOLLOWER ROW ASSY		01
028B	0503011410	ROLLER BEARING		01
028C	0503011105	SEAL RING		01
028D	0571012450	COP FLEX AXLE		01
028E	0571012459	COP FLEX AXLE		01
028F	0503010406	501025 CLAMPING RING (FOR AXLE)		02
028G	0503015356	SPRING PIN		01
028H	0503010691	1/4" GREASE FITTING		01
029	0503032984	HOOD HEX AXLE ROW		01
030	0503013100	NYLON CLAMP		01
031	0511057625	ROW SEED BEARING	30	01
031A	0511057156	BEARING LINE SEMI MOUNTED	21	01
031AA	0521065913	ROW SEED BEARING		01
031AB	0503011410	ROLLER BEARING		02
031AC	0503011105	SEAL RING		01
031AD	0503010406	501025 CLAMPING RING (FOR AXLE)		02
031AE	0571017815	BEARING AXLE BODY		01
031AF	0503017008	SEAL RING		01
031B	0571018731	HEX AXLE		01
031C	0571017900	5/8" X 77" HEX AXLE		01
031D	0561014778	HEX UNIVERSAL JOINT		01
031E	0501056296	UNIVERSAL JOINT		01
031F	0503011855	0.2" X 1.8" SPRING PIN		03
031G	0503013958	1/4" X 1" BOLT		02
032	0503011953	5/16" X 1" BOLT		04
033	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
034	0503010179	5/16" ZN SPRING WASHER		04
035	0503010337	5/16" NUT		04
036	0571019706	HEX AXLE		01
037	0521063524	FRAME FRONT LINE SEED		01
038	0511050609	BEARING WITH 17Z GEAR ASSY	22	01
038A	0511050617	FRONT SEED ROW BEARING	23	01
038AA	0502011697	BEARING OF THE GEAR BOX		01
038AB	0503011410	ROLLER BEARING		01
038AC	0503011105	SEAL RING		01
038AD	0503011953	5/16" X 1" BOLT		02
038AE	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
038AF	0503010179	5/16" ZN SPRING WASHER		02
038AG	0503010337	5/16" NUT		02
038B	0503010406	501025 CLAMPING RING (FOR AXLE)		01
038C	0502012819	17Z GEAR WITH HEX HOLE		01
039	0503011953	5/16" X 1" BOLT		02
040	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
041	0503010179	5/16" ZN SPRING WASHER		02
042	0503010337	5/16" NUT		02
043	1902010175	HITCH CLAMP		01
044	0503010811	5/8" UNF SELF ADJUSTING NUT		02
045	0531019479	AXLE CHAIN GEAR		01
046	0541016454	PULLEY		01
047	0503011828	FLAT WASHER		01
048	0503010019	1/2" SPRING WASHER		01
049	0503010060	1/2" NUT		01
050	0503012142	40-1 CHAIN X 61 LINK + MENDING		01
051	0501012140	FLAT WASHER		02
052	0502012782	17Z GEAR WITH HEX HOLE		01
053	0521065914	FRAME ASSY		01
054	0503817859	5/8" X 4.3/4" BOLT		02

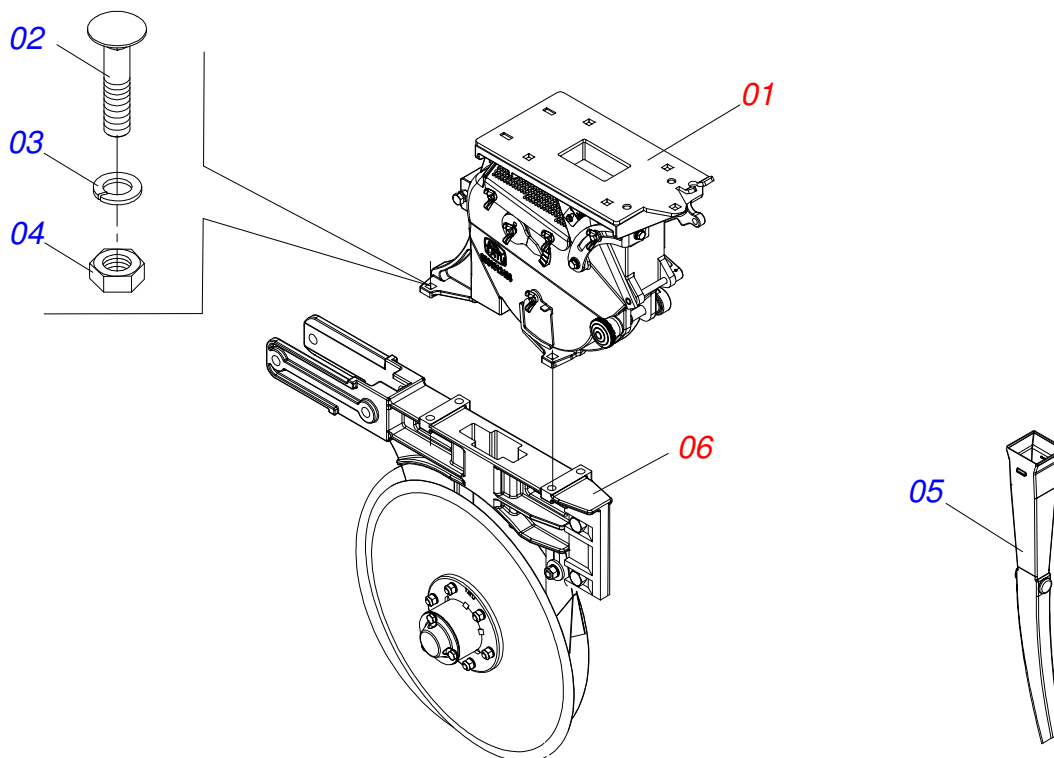 

Item	Code	Description	See page	QT
01	0511057502	SET PRECISION PLANTING	29	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057154	DDD RITGH SUPREMA PRECISION PLANTING	32	01

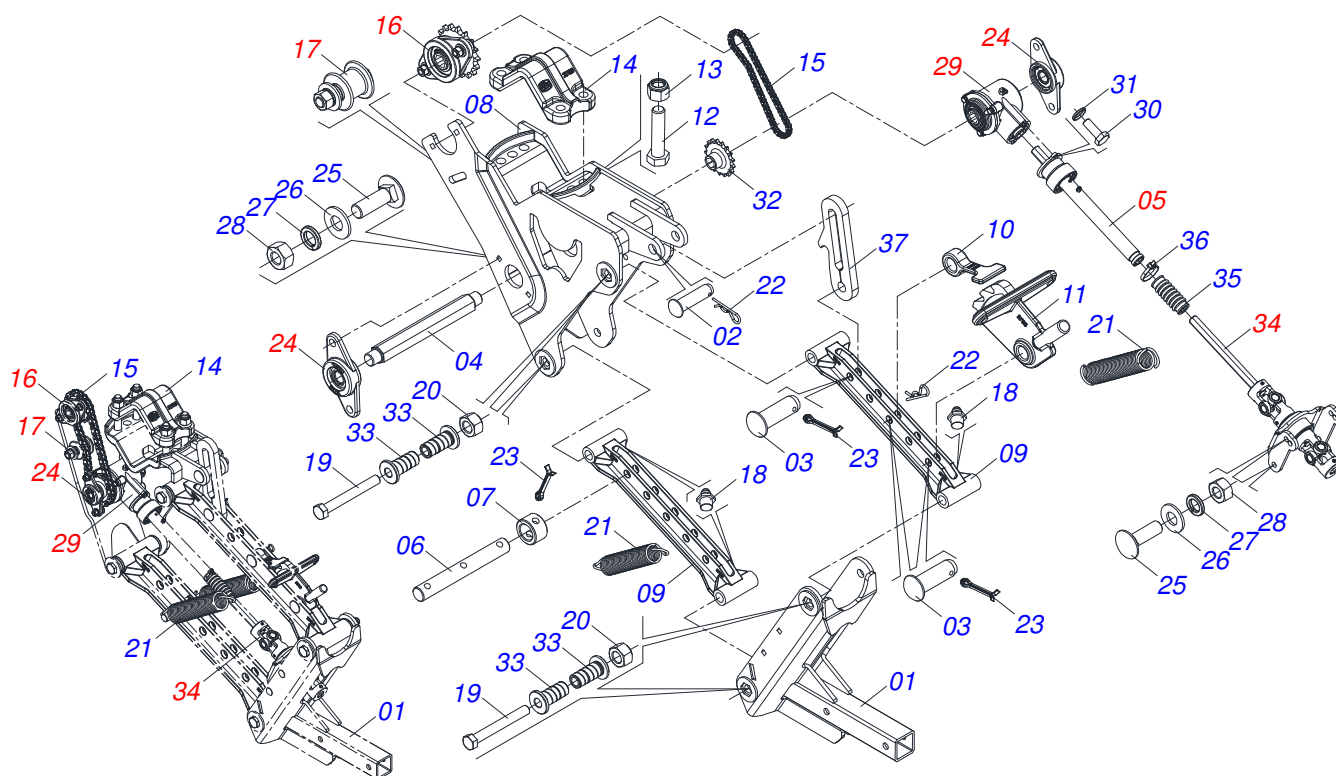 


Item	Code	Description	See page	QT
01	0521065914	FRAME ASSY		01
02	0571012443	COUPLING SHAFT		01
03	0571012442	COUPLING SHAFT		03
04	0571012441	TRANSMISSION AXLE		01
05	0511052393	BEARING FOLLOWER ROW ASSY	27	01
06	0571012449	CONTROL AXLE		01
07	0571012448	LOCK SLEEVE AXLE REGULATION		01
08	0521068102	LONG SEED LINE FRONT SUPPORT		01
09	0502012784	DRIVER PIVOT		02
10	1902012814	BODY LOCK REGULATOR LEVER REGULATOR SEED		01
11	0502012785	SEED ROW ADJUSTMENT LEVER ASSY		01
12	0503017857	BOLT 5/8 UNF 4		04
13	0503010811	5/8" UNF SELF ADJUSTING NUT		04
14	0502012789	FIXER SUPPORT FERTILIZER ROW		01
15	0503012142	40-1 CHAIN X 61 LINK + MENDING		01
16	0511050609	BEARING WITH 17Z GEAR ASSY	22	01
17	0511055260	SEED ROW CHAIN TENSIONER	24	01
18	0503010002	1800 GREASE FITTING		04
19	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
20	0503012412	5/8 UNC SELF LOCKING NUT		04
21	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING		02
22	0503030168	HAIR PIN		02
23	0503010131	3/16" X 1-1/2" COTTERPIN		03
24	0511054635	BEARING AXLE BODY	28	02
25	0503011953	5/16" X 1" BOLT		08
26	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
27	0503010179	5/16" ZN SPRING WASHER		08
28	0503010337	5/16" NUT		08
29	0511057159	TRANSMISSION BOX SEED LINE	29	01
30	0503011378	M6X1X16 C S 8.8 ZN BOLT		02
31	0503015110	M06 SPRING WASHER		02


Item	Code	Description	See page	QT
32	0502012782	17Z GEAR WITH HEX HOLE		01
33	0581014435	SLEEVE ARM LINE SEED		08
34	0511057625	ROW SEED BEARING	30	01
35	0503032984	HOOD HEX AXLE ROW		01
36	0503013100	NYLON CLAMP		01
37	0581015124	LIMITER COURSE		01

TRANSMISSION BOX

 
0511054884

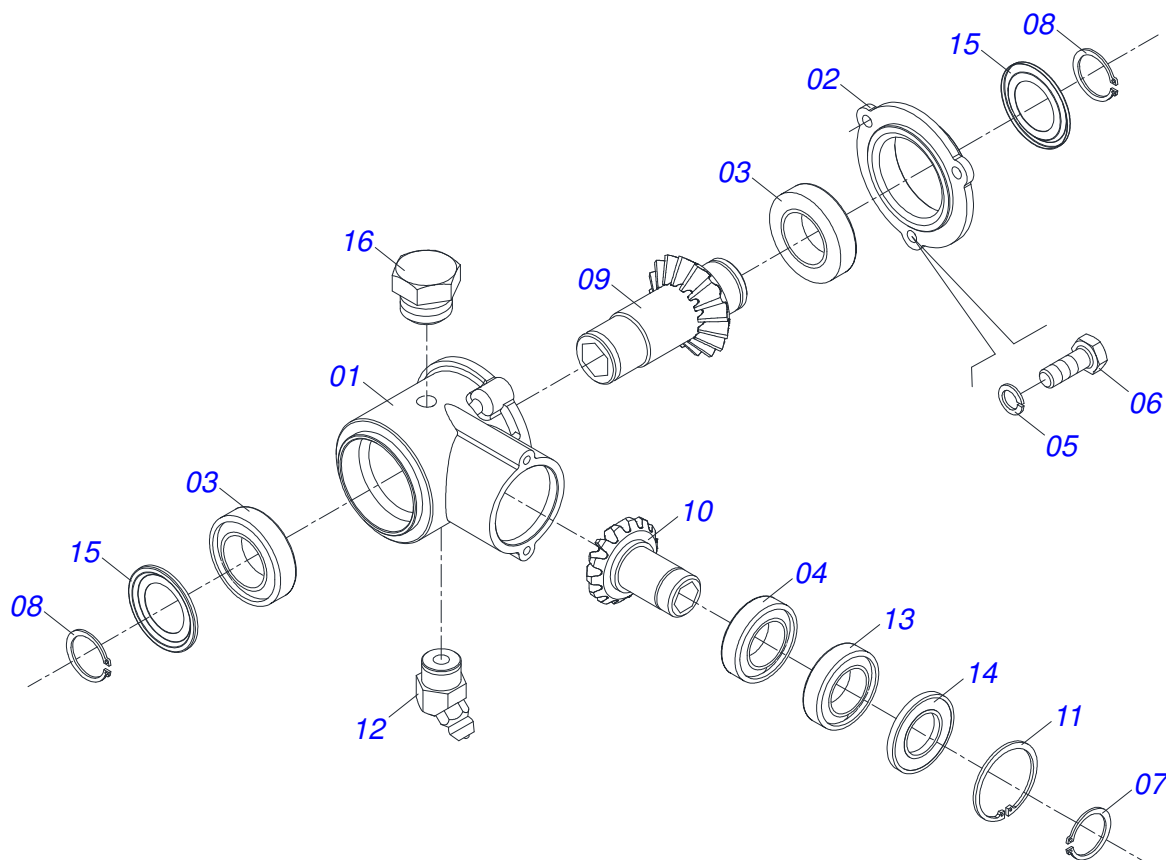


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0502040857	CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503010003	1845 GREASE FITTING		01
13	0503011409	6005 Z BALL BEARING		01
14	0503017008	SEAL RING		01
15	0503017007	SEAL RING		02
16	0511017907	1/8" BSPT X 6 PLUG		01

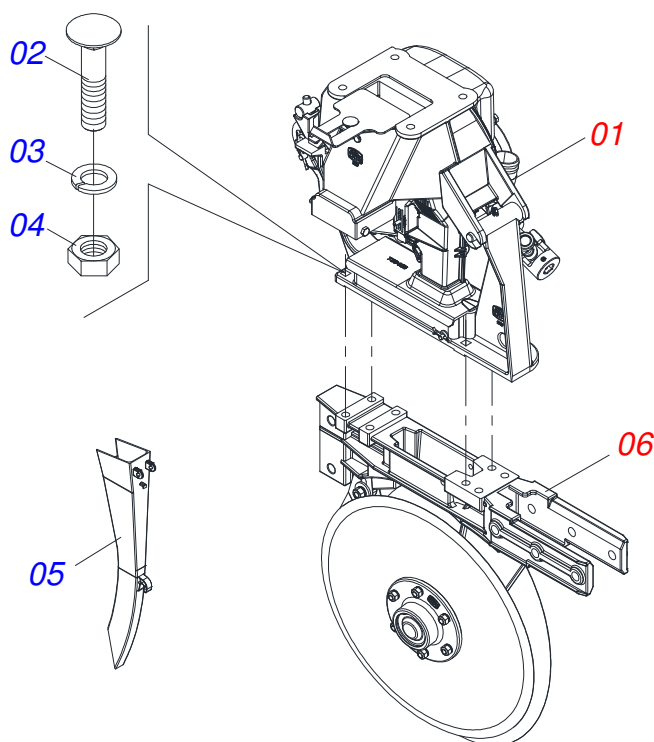 


Item	Code	Description	See page	QT
01	0511057502	SET PRECISION PLANTING	29	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057153	DDD LEFT SUPREMA PRECISION PLANTING	33	01

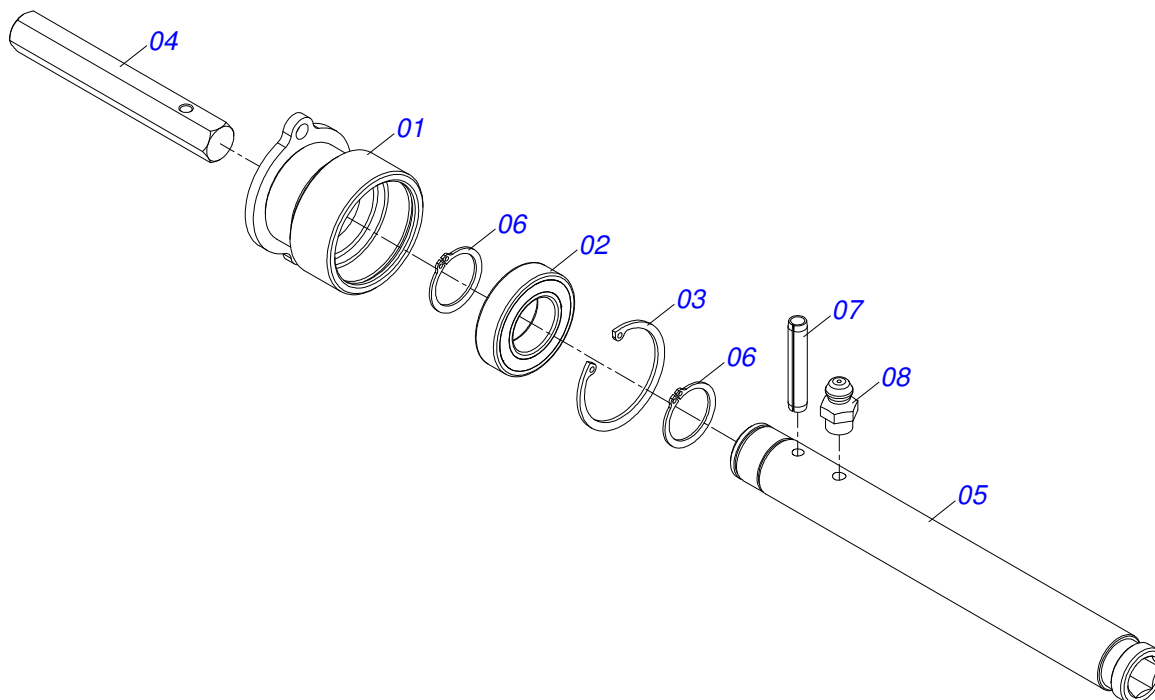 


Item	Code	Description	See page	QT
01	0521063532	BEARING FOLLOWER ROW ASSY		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0571012450	COP FLEX AXLE		01
05	0571012459	COP FLEX AXLE		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		02
07	0503015356	SPRING PIN		01
08	0503010691	1/4" GREASE FITTING		01

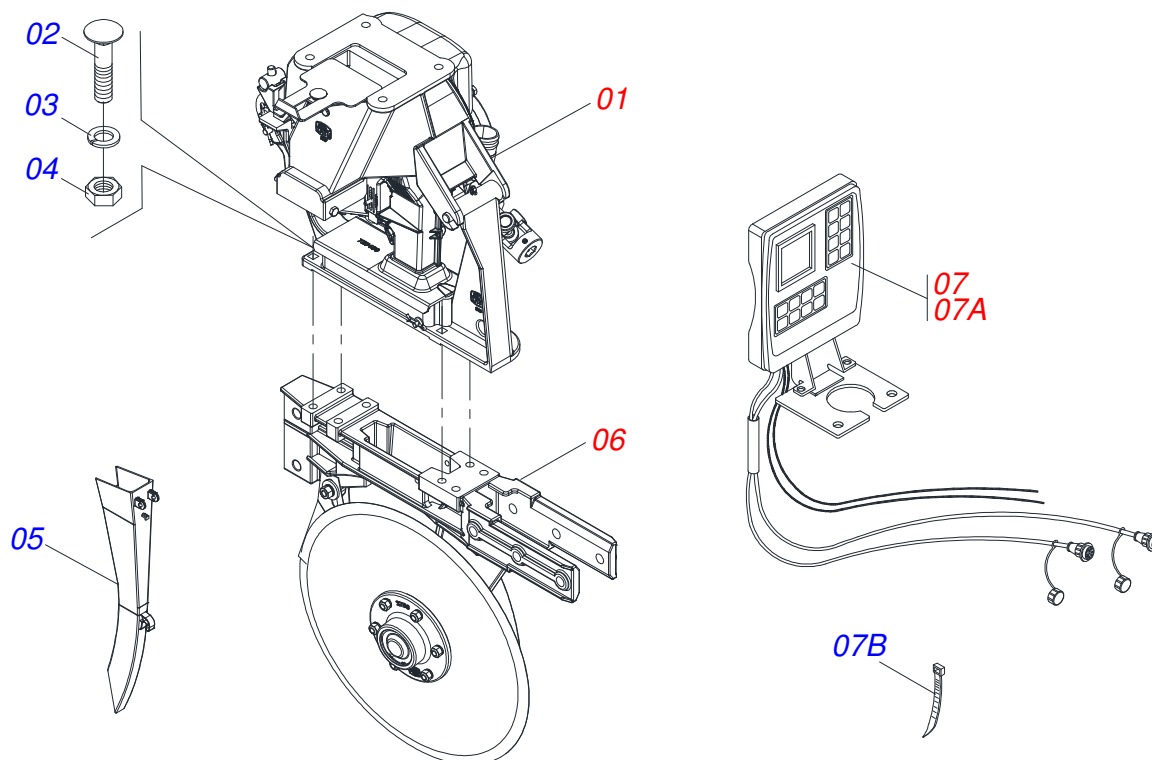 


Item	Code	Description	See page	QT
01	0511057502	SET PRECISION PLANTING	29	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057154	DDD RITGH SUPREMA PRECISION PLANTING	32	01
07	0501058972	ASSEMBLY SENSOR ELECTRONIC		01
07A	0503015218	SENSOR FOTOELE PM 400		01
07B	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03

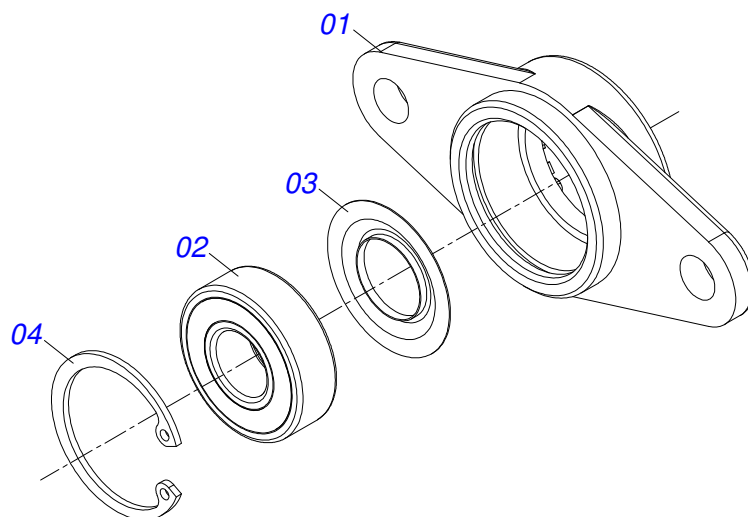 


Item	Code	Description	See page	QT
01	0502012718	BEARIN BODY		01
02	0503012882	BEARING		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

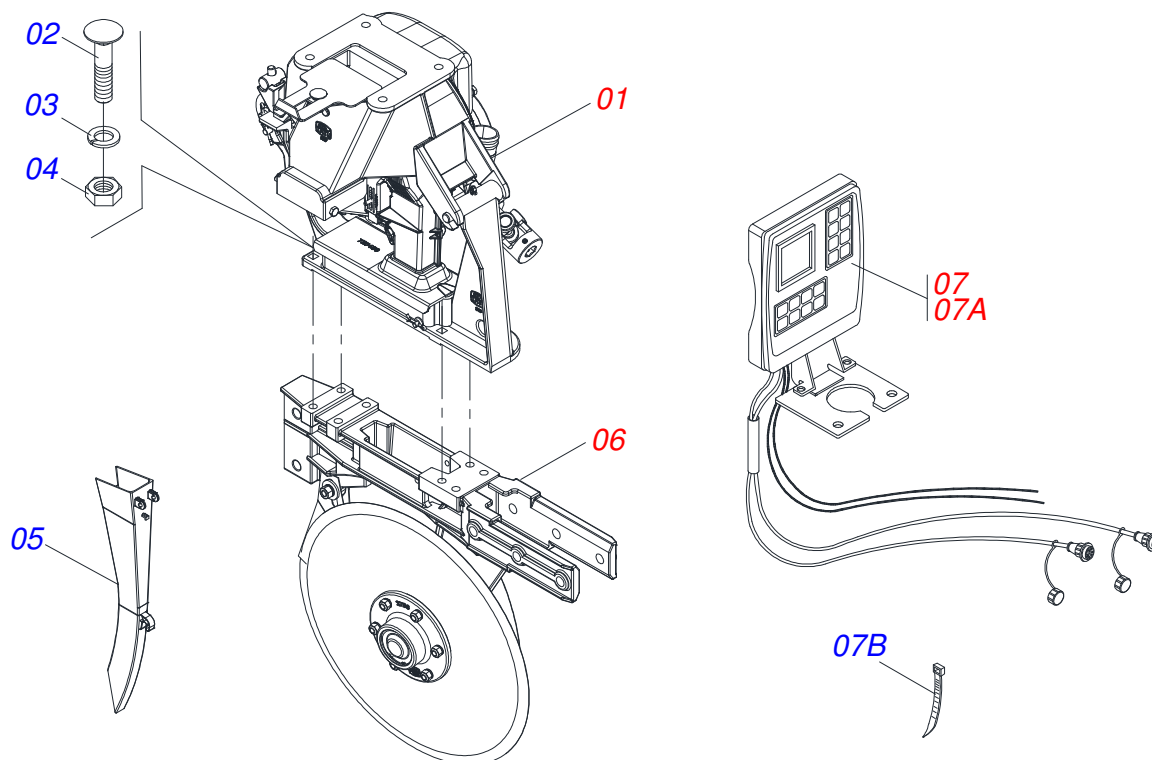 

Item	Code	Description	See page	QT
01	0511057502	SET PRECISION PLANTING	29	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057153	DDD LEFT SUPREMA PRECISION PLANTING	33	01
07	0501058972	ASSEMBLY SENSOR ELECTRONIC		01
07A	0503015218	SENSOR FOTOELE PM 400		01
07B	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03

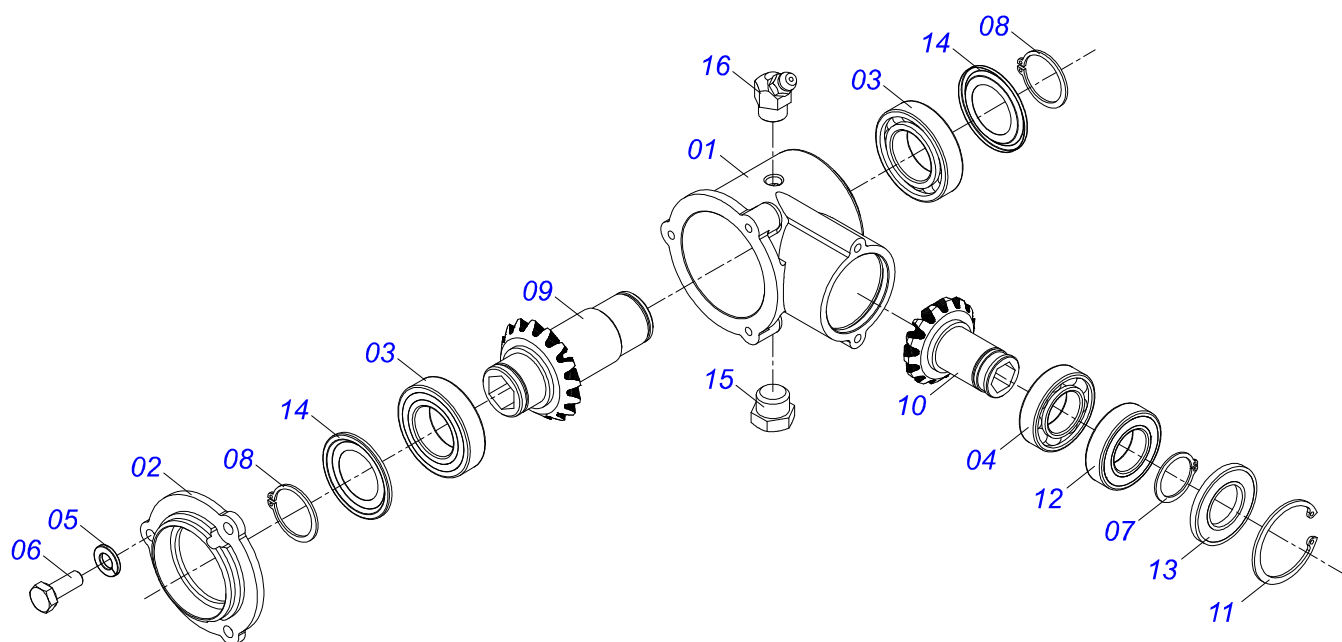 

Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01

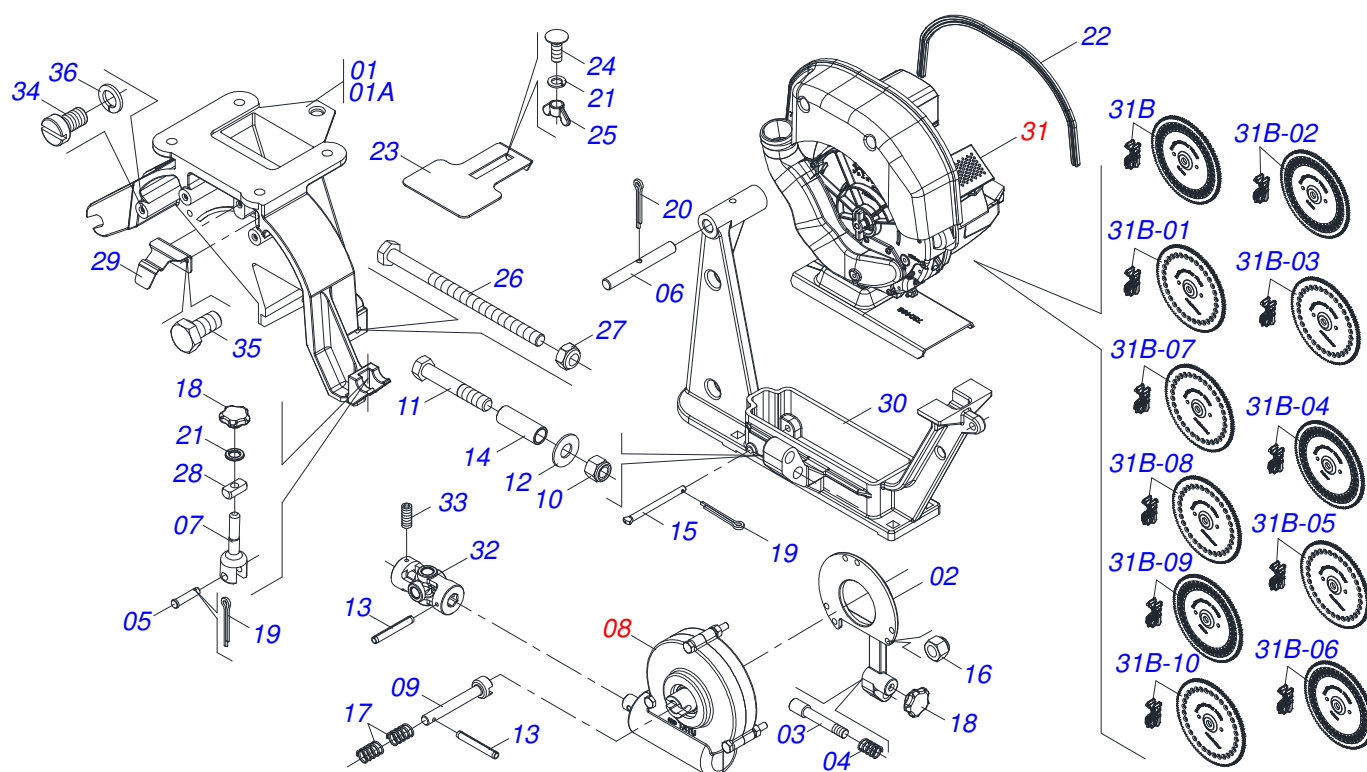 


Item	Code	Description	See page	QT
01	0502012807	SUPPORT BOX PRECISION PLANTING		01
01A	1902012807	SEED BOX SUPPORT		01
02	0502012776	SUPPORT ARTICULATION PNEUMATIC PP		01
03	0571017899	PIN LOCK PP		01
04	0503030190	0.5" X 1.6" X 0.05" SPRING		01
05	0571014024	FAST BOLT GUIDE AXLE		02
06	0571017897	AXLE ARTICULATION PRECISION PLANTING		01
07	0581011225	FIXER P PLANTING CONTR CPRA		01
08	0511057155	PRECISION PLANTING LEFT TRANSMISSION BOX	30	01
09	0571017894	PIN DRAG PRECISION PLANTING		01
10	0503013357	3/8" SELF-ADJUSTING NUT		01
11	0503015752	3/8" X 2" BOLT		01
12	0501013518	FLAT WASHER		02
13	0503015356	SPRING PIN		01
14	0571017896	SLEEVE ARTICULATION PRECISION PLANTING		01
15	0571017895	PIN FIXER CONDUCTOR P.P		01
16	0503011776	M6 SELF ADJUSTINGNUT		03
17	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		02
18	0503010293	BAQUELITE MANIPULACION		01
19	0503010140	1/8" X 3/4" COTTERPIN		03
20	0503010131	3/16" X 1-1/2" COTTERPIN		01
21	0503010025	3/8" SPRING WASHER		01
22	0503037390	PACKING FOR PLANTING		01
23	0571019491	SLUICE PNEUMATIC PRECISION PLANTING		01
24	0501011643	3/8 X 1"BOLT		01
25	0503010209	3/8" UNC BUTTERFLY NUT		01
26	0503012721	1/4" X 4" BOLT		01
27	0503012880	1/4" UNC SELF ADJUSTING NUT		01
28	0581011226	FIXER CLOSING P PLANTING CONTR CPRA		01
29	0571019489	CLAMP PRECISION PLANTING		01
30	0502012799	UPPER SUPPORT BASE PNEUMATIC PRECISION PLANTING		01


SET PRECISION PLANTING

0511057502


Item	Code	Description	See page	QT
31	0511057491	PRECISION PLANTING SEED ASSY SEED 31 DISTRIBUTOR WITH CORN DISC		01
31A	0503062405	SEED DISTRIBUTOR		01
31B	0503062407	SET SOYBEAN DISTRIBUTION		01
31B-01	0503062417	KIT CORN DISTRIBUTION		01
31B-02	0503062471	DISTRIBUTION ASSY (SORGHUM / MILLET)		01
31B-03	0503062577	DISTRIBUTION ASSY (LARGE CORN / SUNFLOWER)		01
31B-04	0503062578	DISTRIBUTION ASSY (LARGE CORN)		01
31B-05	0503062579	DISTRIBUTION ASSY (CORN / SUNFLOWER)		01
31B-06	0503062580	DISTRIBUTION ASSY (POPCORN / COTTON)		01
31B-07	0503062581	DISTRIBUTION ASSY (SMALL CORN / POP CORN)		01
31B-08	0503062573	CONVERSATION SET FOR DISTRIBUTION (LARGE BEAN)		01
31B-09	0503062574	CONVERSATION SET FOR DISTRIBUTION (SMALL BEET)		01
31B-10	0503062564	CONVERSATION SET FOR DISTRIBUTION (SOYBEAN / BEAN)		01
32	0561014778	HEX UNIVERSAL JOINT		01
33	0503013958	1/4" X 1" BOLT		02
34	0503818139	BOLT		03
35	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		02
36	0503015110	M06 SPRING WASHER		02

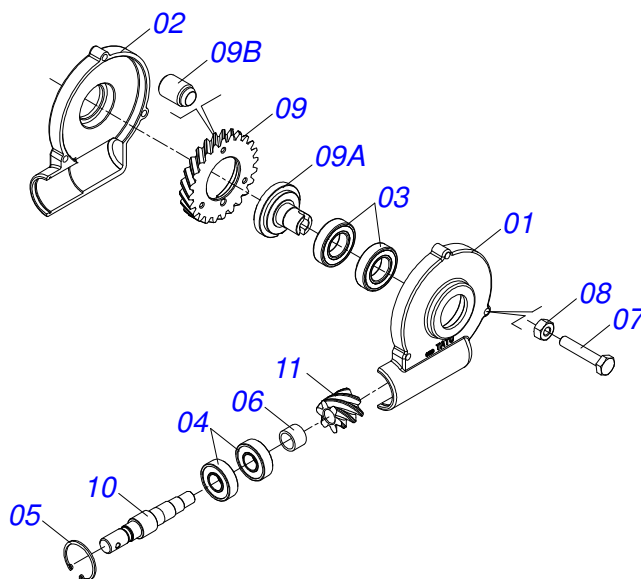 

Item	Code	Description	See page	QT
01	0502050052	LEFT SIDE TRANSMISSION BOX PP		01
02	0502050053	RIGHT SIDE TRANSMISSION BOX PP		01
03	0503011410	ROLLER BEARING		02
04	0503011182	6203 ROLLER BEARING		02
05	0503011184	502040 CLAMPING RING (FOR AXLE)		01
06	0571017655	SLEEVE FIXER HITCH PNEUMATIC		01
07	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		03
08	0503010144	1/4" NUT		03
09	0511057504	JOIN GEAR		01
09A	0571017898	BODY GEAR TRANSMISSION		01
09B	0503011769	M8 X 0.5" BOLT		01
10	0581011222	PINION AXLE 6Z PNEUMATIC		01
11	0503034340	PINION AXLE 6Z PNEUMATIC		01

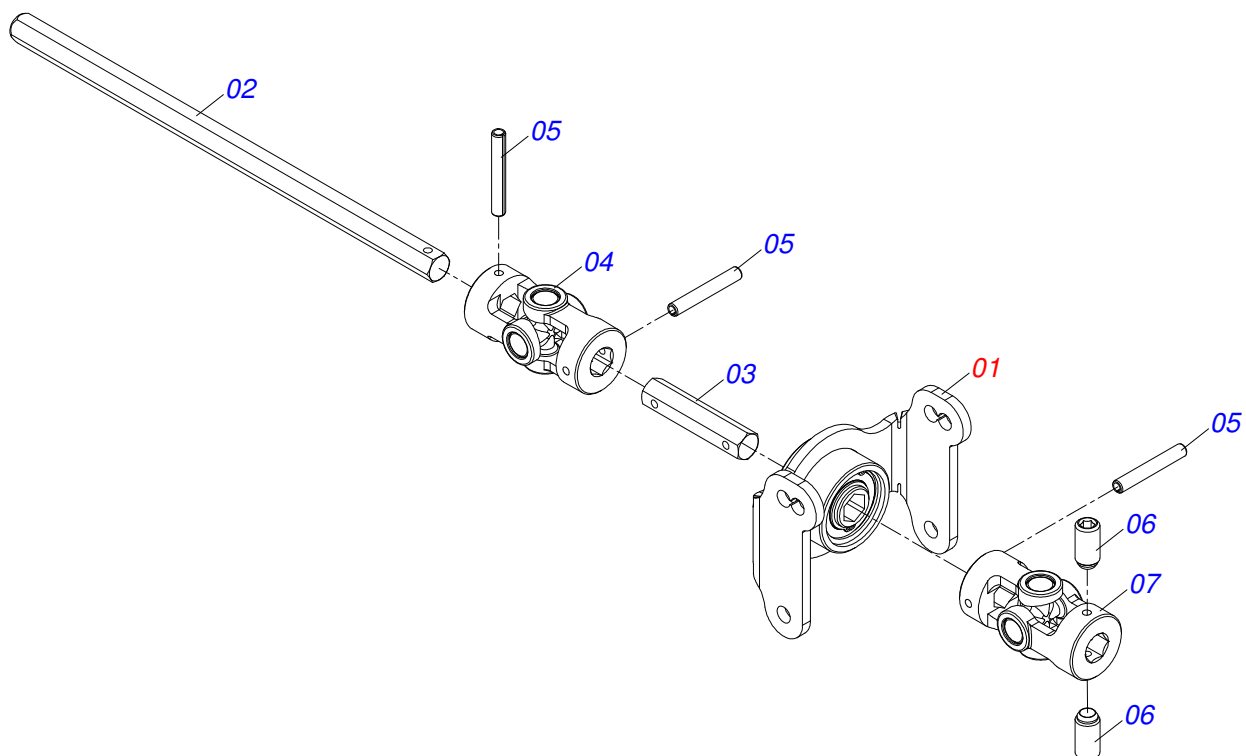 


Item	Code	Description	See page	QT
01	0511057156	BEARING LINE SEMI MOUNTED	21	01
02	0571018731	HEX AXLE		01
03	0571017900	5/8" X 77" HEX AXLE		01
04	0501056296	UNIVERSAL JOINT		01
05	0503011855	0.2" X 1.8" SPRING PIN		03
06	0503013958	1/4" X 1" BOLT		02
07	0561014778	HEX UNIVERSAL JOINT		01

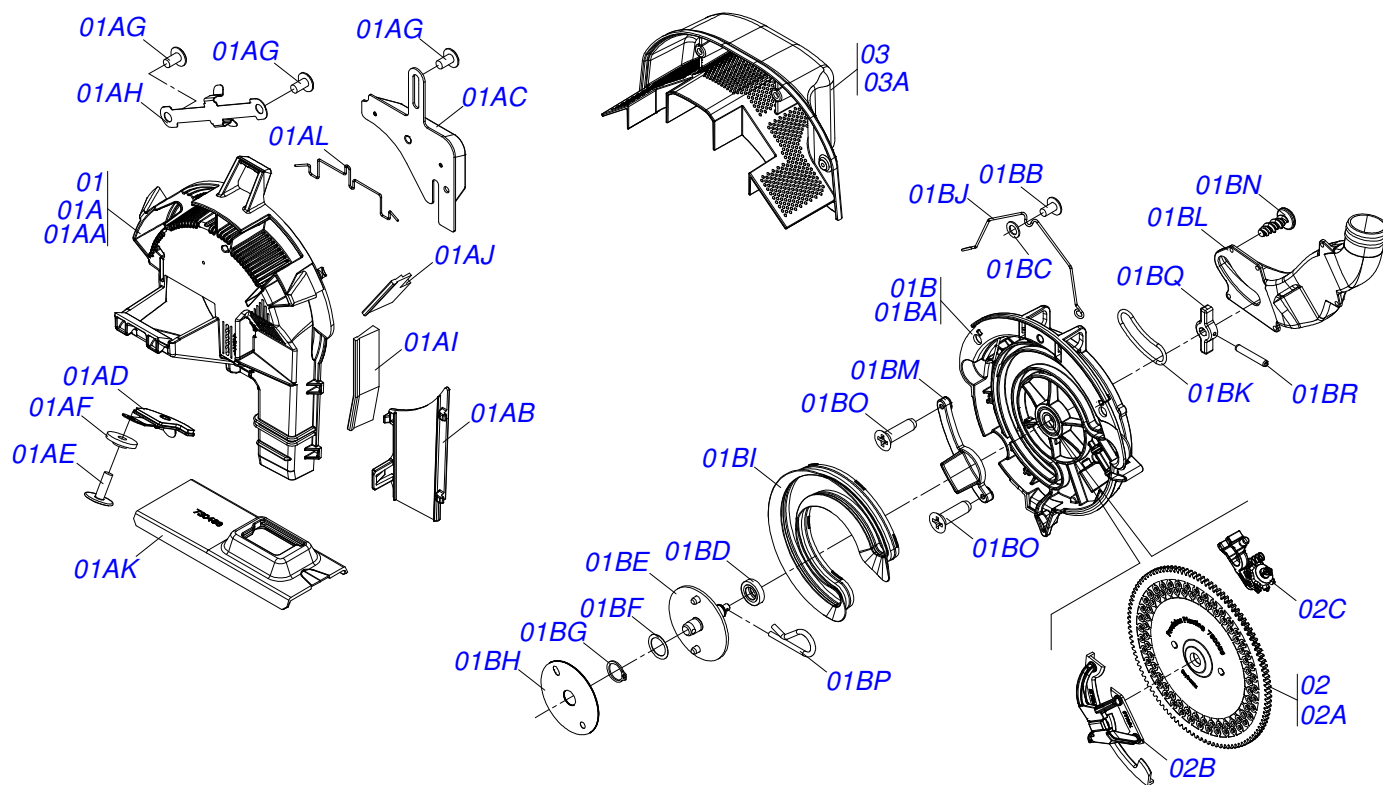 


Item	Code	Description	See page	QT
01	0503062405	SEED DISTRIBUTOR		01
01A	0503062567	FIXED BASE SEEDS DISTRIBUTOR		01
01AA	0503018908	BODY FIXED BASE DISTRIBUTOR SEED		01
01AB	0503018909	COVER CONDUCTOR DISTRIBUTOR SEED		01
01AC	0503062652	SEED INPUT DEFLECTOR		01
01AD	0503062653	FULL COVER		01
01AE	0503018910	RIVETS LARGEST		01
01AF	0503018911	SPACING BUSHING		01
01AG	0503018912	BOLT		03
01AH	0503018476	SPRING		01
01AI	0503018474	LOWER BRUSH		01
01AJ	0503018475	TOP BRUSH		01
01AK	0503018157	RUBBER		01
01AL	0503018477	LOCK SPRING		01
01B	0503062568	FIXER MOBILE		01
01BA	0503018919	BASE		01
01BB	0503018913	RIVET		01
01BC	0503018914	WASHER		01
01BD	0503018915	BEARING		02
01BE	0503062654	BEARING		01
01BF	0503018916	ADJUSTMENT CHOCK		03
01BG	0503018917	RING		01
01BH	0503018918	CHOCK		02
01BI	0503019288	RUBBER SEAL PP 730518		01
01BJ	0503018478	SPRING		01
01BK	0503018920	SEALING		01
01BL	0503018479	TUBE		01
01BM	0503018735	PROTECTIVE COVER		01
01BN	0503018921	BOLT		06
01BO	0503018922	BOLT		02
01BP	0503018480	REGULATOR PIN		01


Item	Code	Description	See page	QT
01BQ	0503018923	ADAPTER		01
01BR	0503018924	SPRING PIN		01
02	0503062417	KIT CORN DISTRIBUTION		01
02A	0503018160	CORN PLASTIC DISC		01
02B	0503062472	SELECTOR SEED CORN		01
02C	0503062474	EJECTOR CORN SEED SET		01
03	0571019613	STRAW PRECISION PLANTING SHIELD		01
03A	0503017957	PROTECTIVE COVER AIR INPUT		01

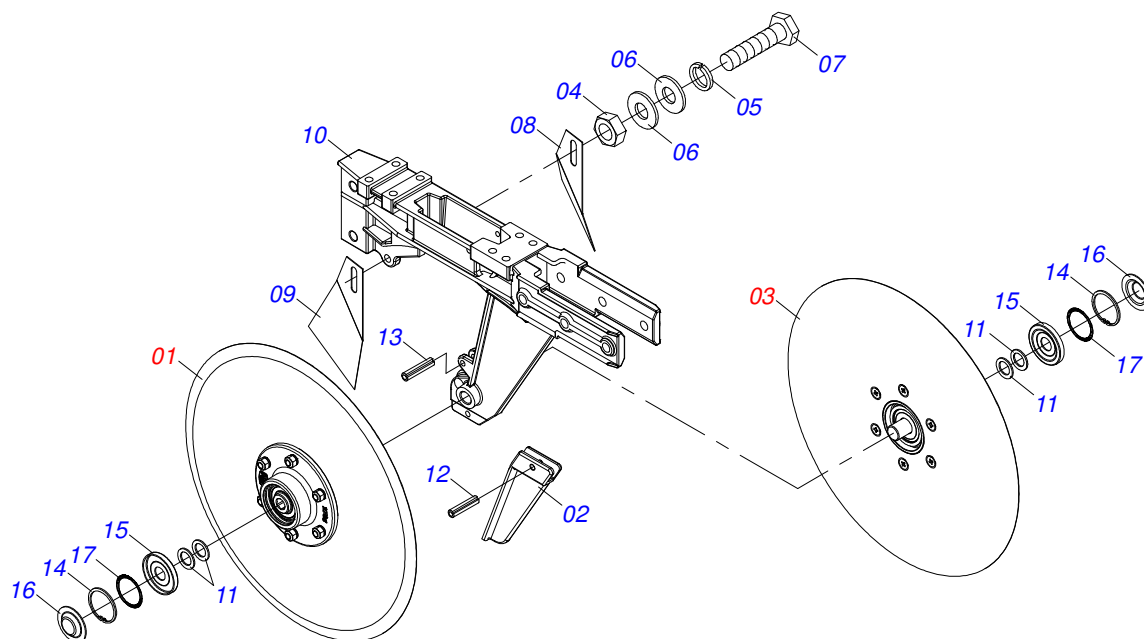 


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	34	01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	CUBE LOW RIGHT WITH DISC 15	35	01
04	0503010026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501010984	FLAT WASHER		02
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012780	SUPPORT DDD RIGHT		01
11	0511015098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O'RING		02

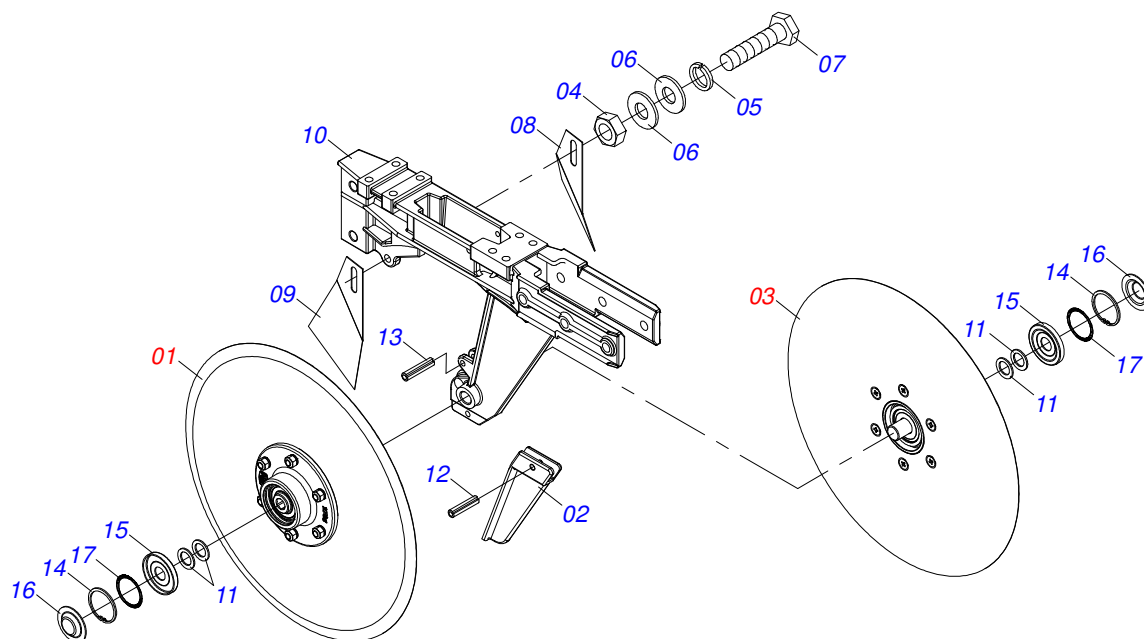 


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	34	01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	CUBE LOW RIGHT WITH DISC 15	35	01
04	0503010026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501010984	FLAT WASHER		02
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012781	SUPPORT DDD LEFT		01
11	0511015098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O'RING		02

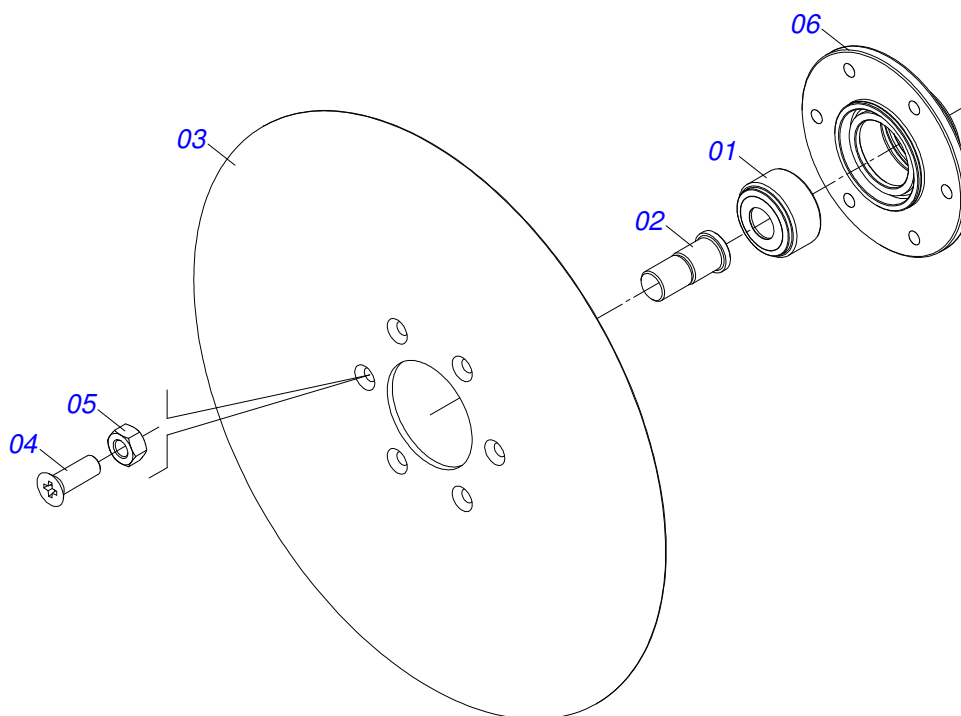 


Item	Code	Description	See page	QT
01	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

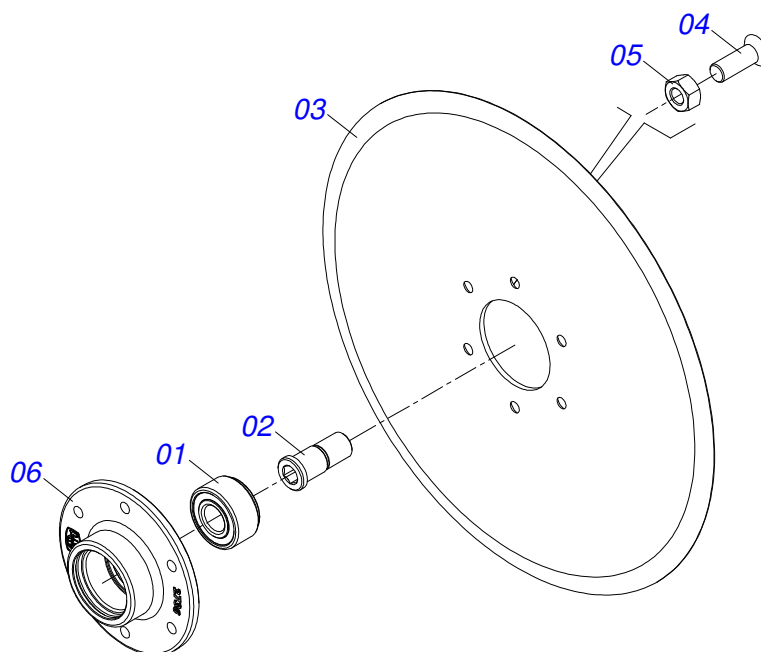 


Item	Code	Description	See page	QT
01	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

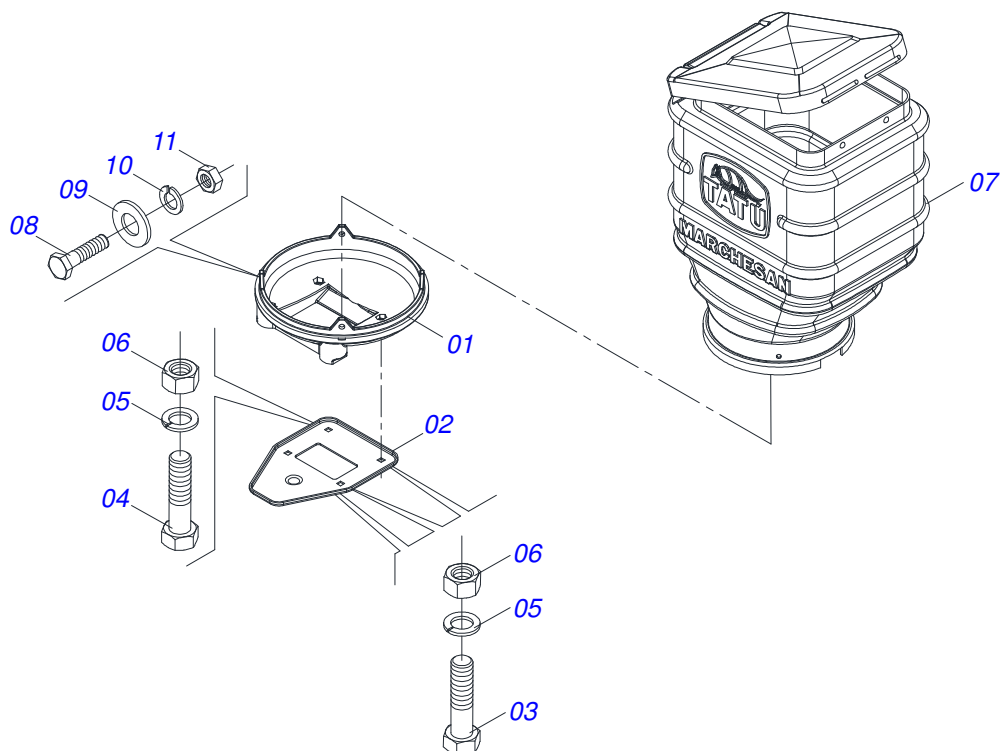 


Item	Code	Description	See page	QT
01	0502012798	SUPPORT BOX SEED		01
02	0581012694	COMPACT PROTECTION		01
03	0503010849	3/8" X 1-1/2" BOLT		03
04	0501010096	3/8" X 2" BOLT		01
05	0503010025	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0503031508	COVER GREEN BEAM SEED YELLOW		01
08	0503010358	5/16" X 5/8" BOLT		04
09	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
10	0503010179	5/16" ZN SPRING WASHER		04
11	0503010337	5/16" NUT		04

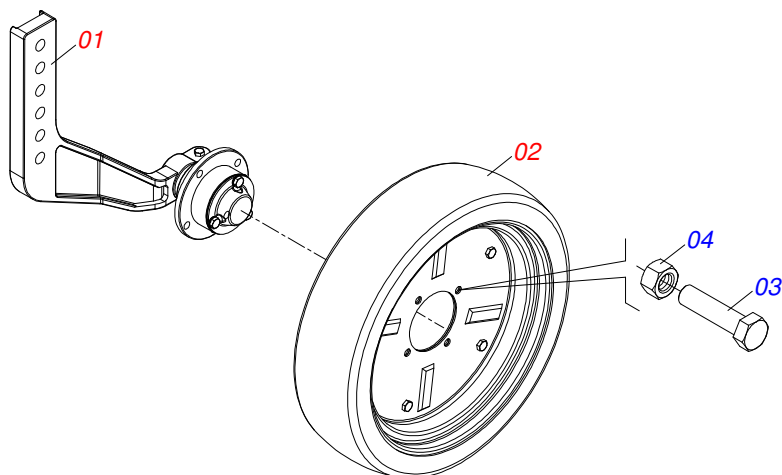 


Item	Code	Description	See page	QT
01	0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL	38	01
02	0501052538	DEPTH BAND WITH ARMS	39	01
03	0503010358	5/16" X 5/8" BOLT		04
04	0503013816	5/16" LOCKNUT		04

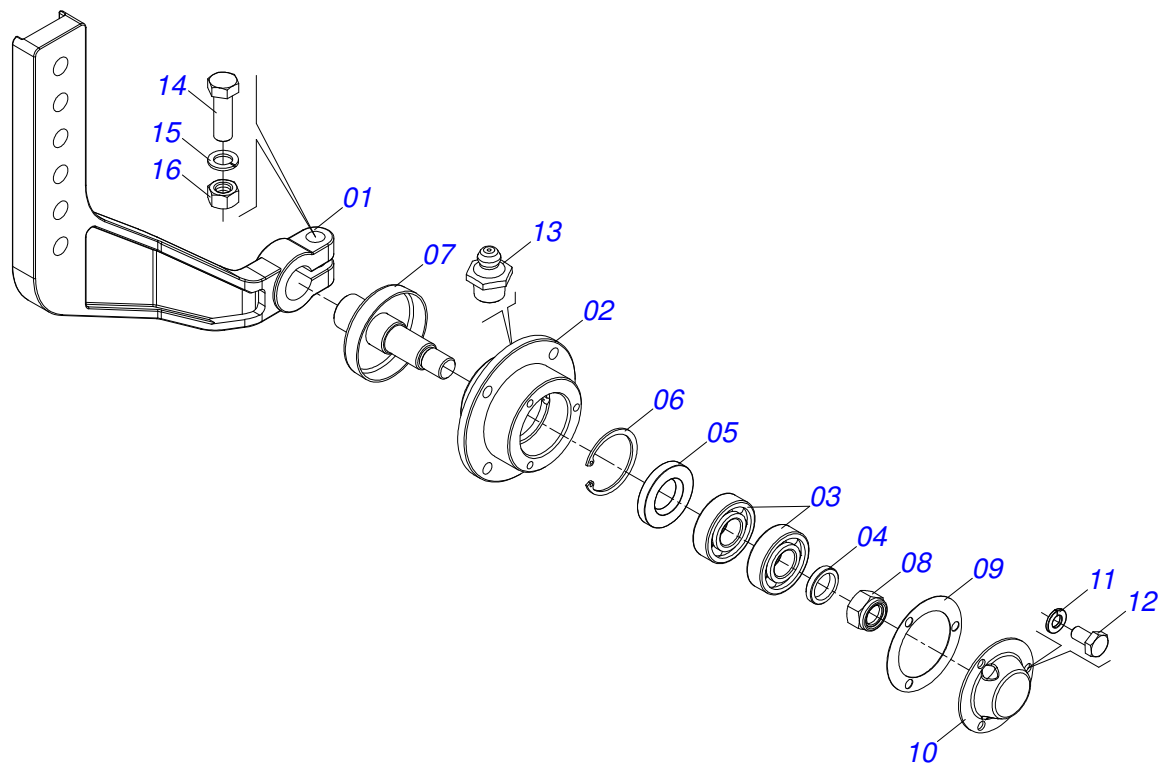 


Item	Code	Description	See page	QT
01	0502012090	DEPTH CONTROL RIGHT ARM		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
08	0503010878	5/8" SELF ALIGNING NUT		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0521019178	COVER DEPTH		01
11	0503011441	SPRING WASHER		03
12	0503014729	1/4" UNF X 1/2" BOLT		03
13	0503010691	1/4" GREASE FITTING		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01

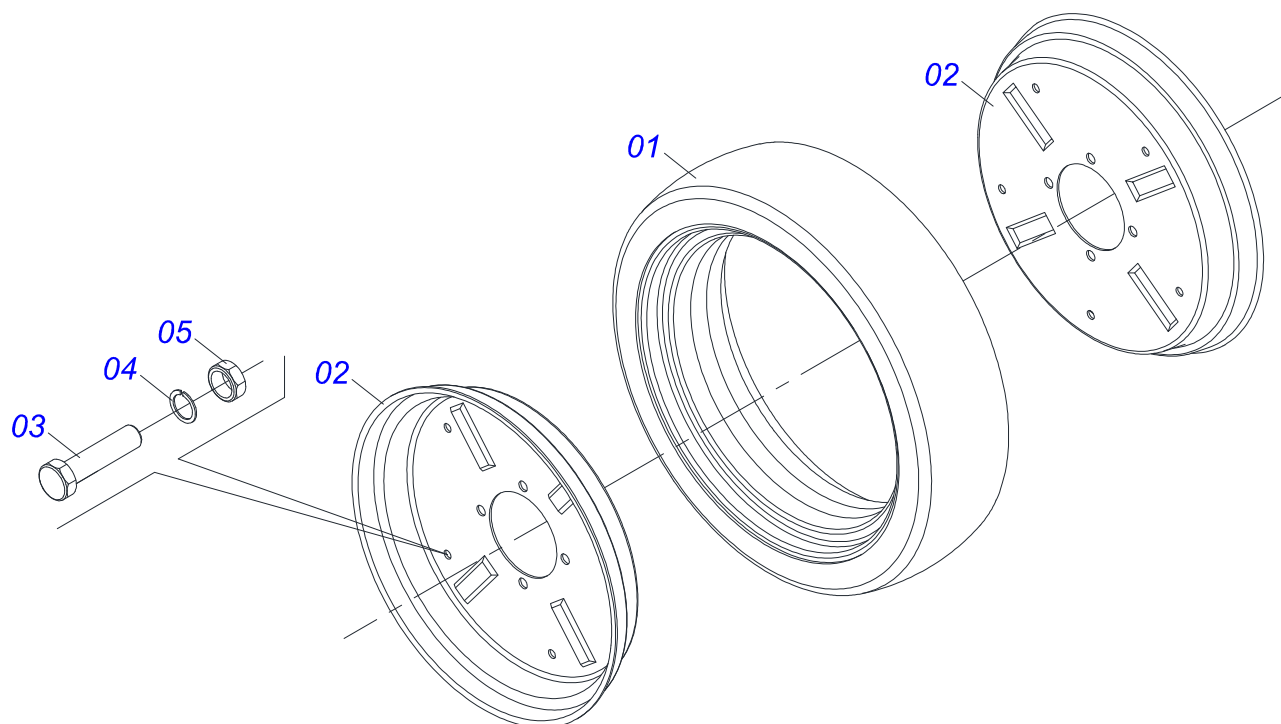 


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

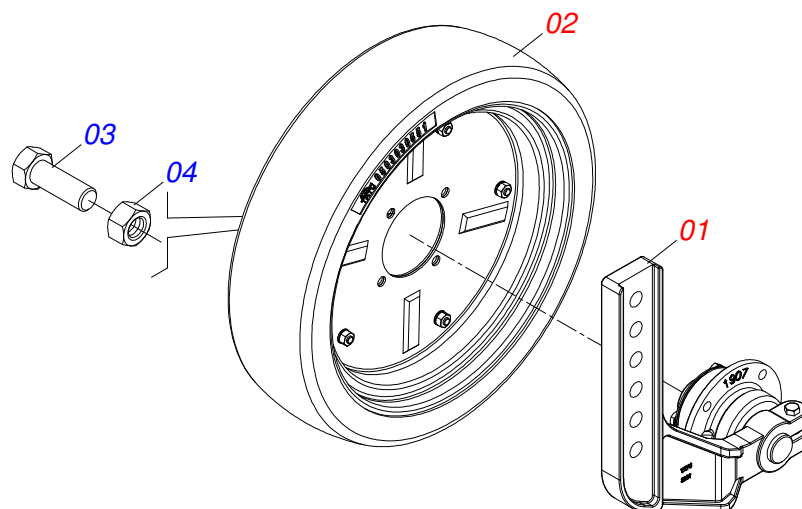 

Item	Code	Description	See page	QT
01	0501056435	LEFT CONTROL ARM DEPTH WITHOUT WHEEL	41	01
02	0501052538	DEPTH BAND WITH ARMS	39	01
03	0503010358	5/16" X 5/8" BOLT		04
04	0503013816	5/16" LOCKNUT		04

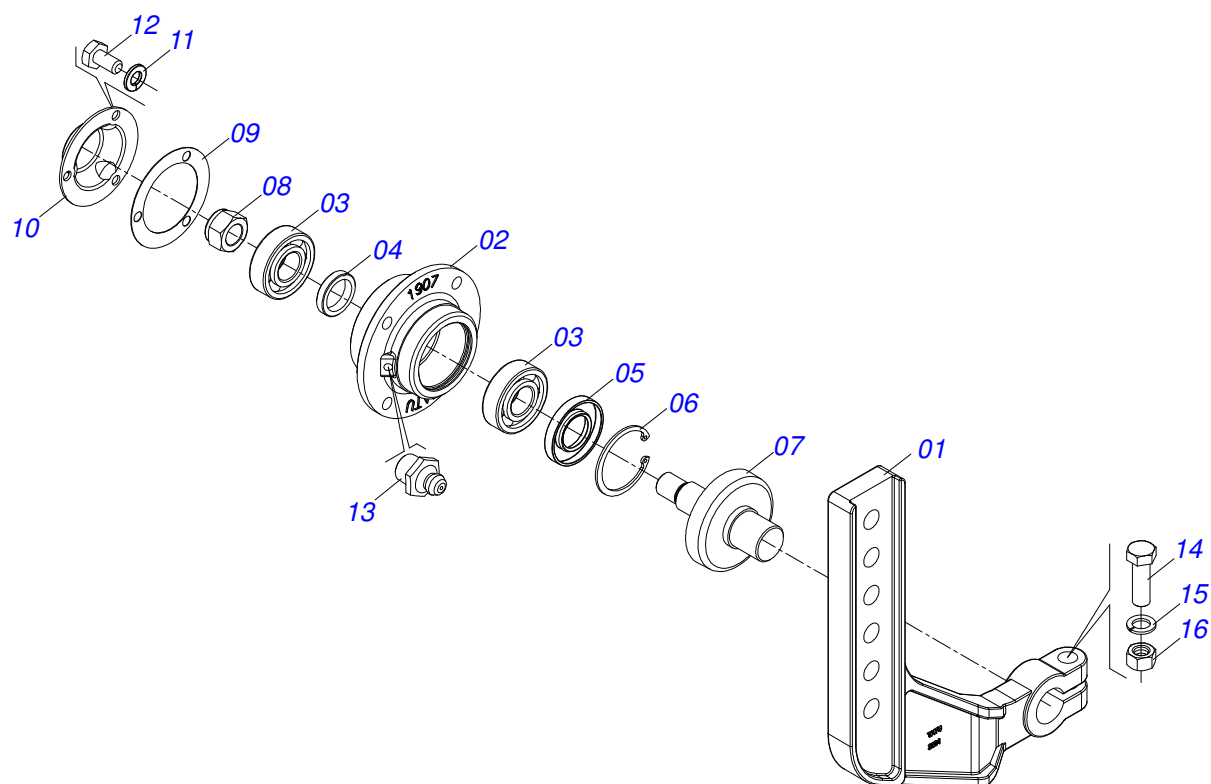 


Item	Code	Description	See page	QT
01	0502012091	DEPTH CONTROL LEFT ARM		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
08	0503010878	5/8" SELF ALIGNING NUT		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0521019178	COVER DEPTH		01
11	0503011441	SPRING WASHER		03
12	0503014729	1/4" UNF X 1/2" BOLT		03
13	0503010691	1/4" GREASE FITTING		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01

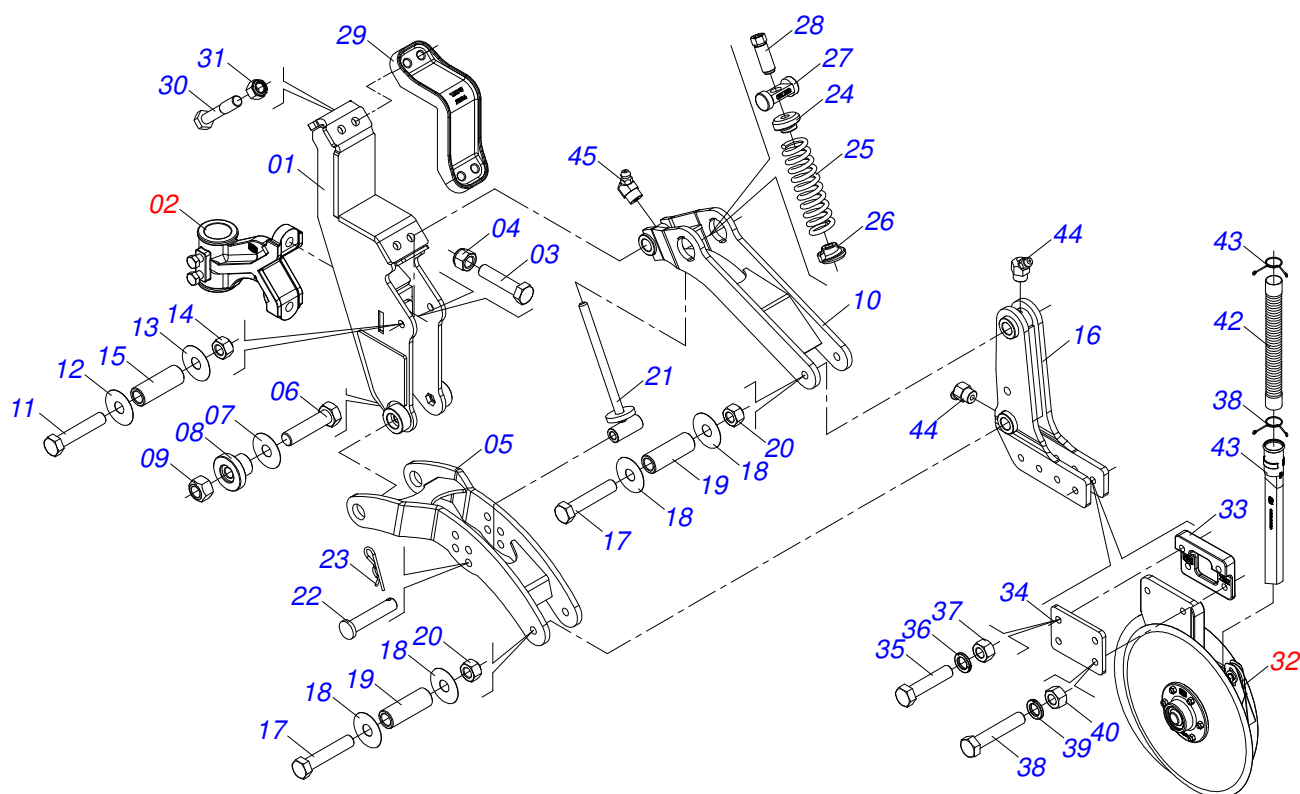 


Item	Code	Description	See page	QT
01	0521063759	ROW FERTILIZER SUPPORT		01
02	0511053223	FERTILIZER ROW SUPPORT WITH SCREW	43	01
03	0503017855	3/4" BOLT		02
04	0503010152	3/4" SELF LOCKING NUT		02
05	0521063504	FERTILIZER ROW LOWER SUPPORT		01
06	0503010233	5/8" X 2-1/2" BOLT		02
07	0511015098	FLAT WASHER		06
08	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
09	0503012412	5/8 UNC SELF LOCKING NUT		02
10	0511063862	FERTILIZER ROW UPPER SUPPORT		01
11	0501010163	5/8" X 4-1/2" BOLT		01
12	0531015184	FLAT WASHER		01
13	0531016031	1/2" SPRING WASHER		01
14	0503012412	5/8 UNC SELF LOCKING NUT		01
15	0531016207	0.6" X 1" X 2.8" SLEEVE		01
16	0521061855	FERTILIZER ROW REAR SUPPORT		01
17	0501010452	5/8" X 5" BOLT		02
18	0531016031	1/2" SPRING WASHER		04
19	0531016207	0.6" X 1" X 2.8" SLEEVE		02
20	0503012412	5/8 UNC SELF LOCKING NUT		02
21	0521062073	SPRING GUIDE		01
22	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
23	0503030168	HAIR PIN		01
24	1902020393	SPRING UPPER SUPPORT		01
25	0503031450	2.7" X 9.2" X 0.03" SPRING		01
26	1902020393	SPRING UPPER SUPPORT		01
27	0521011158	SPRING LOCKNUT		01
28	0521018575	REGULATOR SPINDLE 100		01
29	0502012724	FERTILIZER ROW FIXER		01
30	0503017960	5/8" X 3-12" BOLT		04
31	0503010811	5/8" UNF SELF ADJUSTING NUT		04


Item	Code	Description	See page	QT
32	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	44	01
33	0502012352	DOUBLE-DISC SPACING PLATE		01
34	0541013035	5.55" X 4.0" X 0.38" PLATE		01
35	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
36	0503010019	1/2" SPRING WASHER		02
37	0503010060	1/2" NUT		02
38	0503010752	1/2" X 3.1/2" BOLT		02
39	0503010019	1/2" SPRING WASHER		02
40	0503010060	1/2" NUT		02
41	0503030520	SEED SOCKET		01
42	0503031145	2" X 2" X 20" HOSE		01
43	0503031076	2" HOSE CLAMP		02
44	0503010003	1845 GREASE FITTING		02
45	0503010004	1890 GREASE FITTING		01

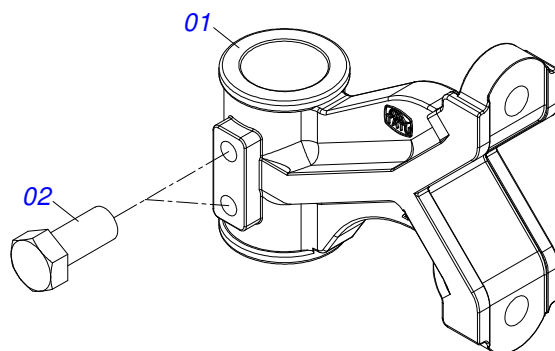 

Item	Code	Description	See page	QT
01	0502012727	BLADE DISC SUPPORT		01
02	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02

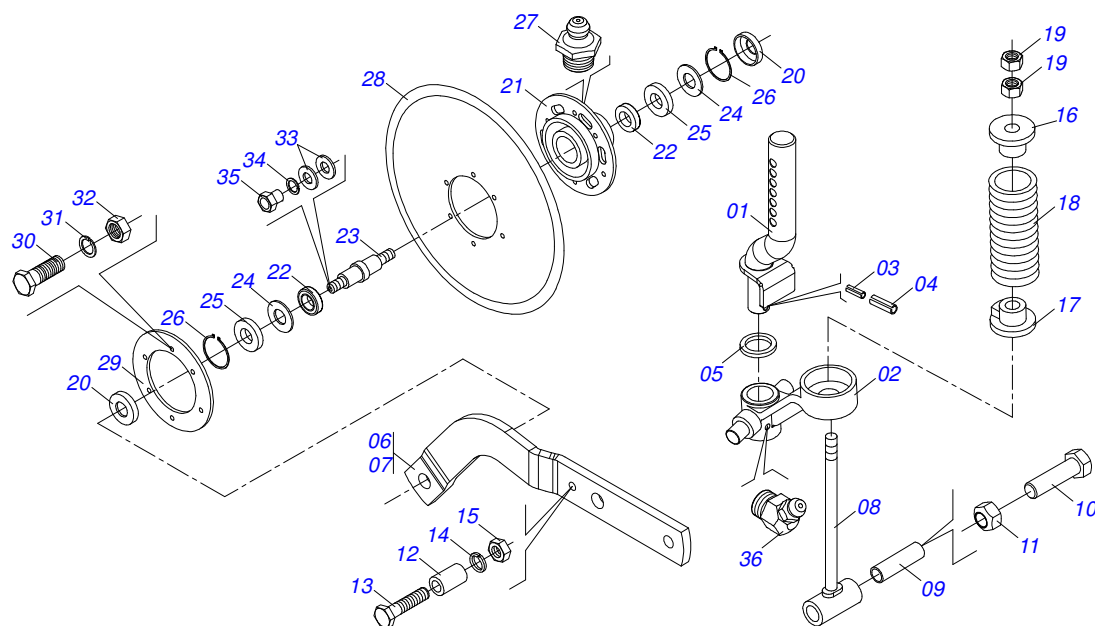 

Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15	35	01
02	0511053172	LEFT LOW CUBE WITH DISC 15	34	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RH DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010025	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

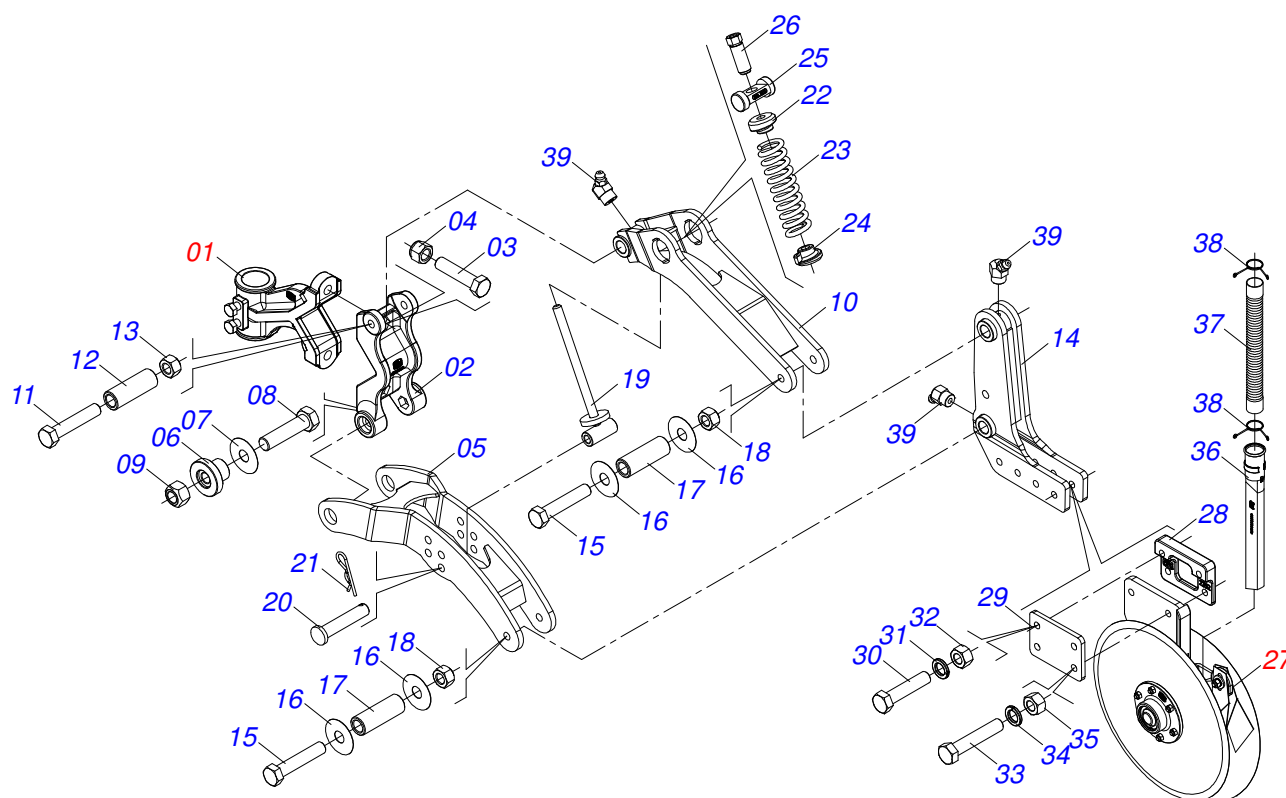 


Item	Code	Description	See page	QT
01	0511053223	FERTILIZER ROW SUPPORT WITH SCREW	43	01
02	0502012728	ROW FERTILIZER SUPPORT		01
03	0503017856	BOLT 3/4		02
04	0503010152	3/4" SELF LOCKING NUT		02
05	0521063504	FERTILIZER ROW LOWER SUPPORT		01
06	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
07	0511015098	FLAT WASHER		06
08	0503010233	5/8" X 2-1/2" BOLT		02
09	0503012412	5/8 UNC SELF LOCKING NUT		02
10	0511063862	FERTILIZER ROW UPPER SUPPORT		01
11	0501010452	5/8" X 5" BOLT		01
12	0531016207	0.6" X 1" X 2.8" SLEEVE		01
13	0503012412	5/8 UNC SELF LOCKING NUT		01
14	0521061855	FERTILIZER ROW REAR SUPPORT		01
15	0501010452	5/8" X 5" BOLT		02
16	0531016031	1/2" SPRING WASHER		04
17	0531016207	0.6" X 1" X 2.8" SLEEVE		02
18	0503012412	5/8 UNC SELF LOCKING NUT		02
19	0521062073	SPRING GUIDE		01
20	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
21	0503030168	HAIR PIN		01
22	1902020393	SPRING UPPER SUPPORT		01
23	0503031450	2.7" X 9.2" X 0.03" SPRING		01
24	1902020393	SPRING UPPER SUPPORT		01
25	0521011158	SPRING LOCKNUT		01
26	0521018575	REGULATOR SPINDLE 100		01
27	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	46	01
28	0502012352	DOUBLE-DISC SPACING PLATE		01
29	0541013035	5.55" X 4.0" X 0.38" PLATE		01
30	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
31	0503010019	1/2" SPRING WASHER		02


**FERTILIZER SHORT LINE**

 0511053024


Item	Code	Description	See page	QT
32	0503010060	1/2" NUT		02
33	0503010752	1/2" X 3.1/2" BOLT		02
34	0503010019	1/2" SPRING WASHER		02
35	0503010060	1/2" NUT		02
36	0503030520	SEED SOCKET		01
37	0503031145	2" X 2" X 20" HOSE		01
38	0503031076	2" HOSE CLAMP		02
39	0503010003	1845 GREASE FITTING		03

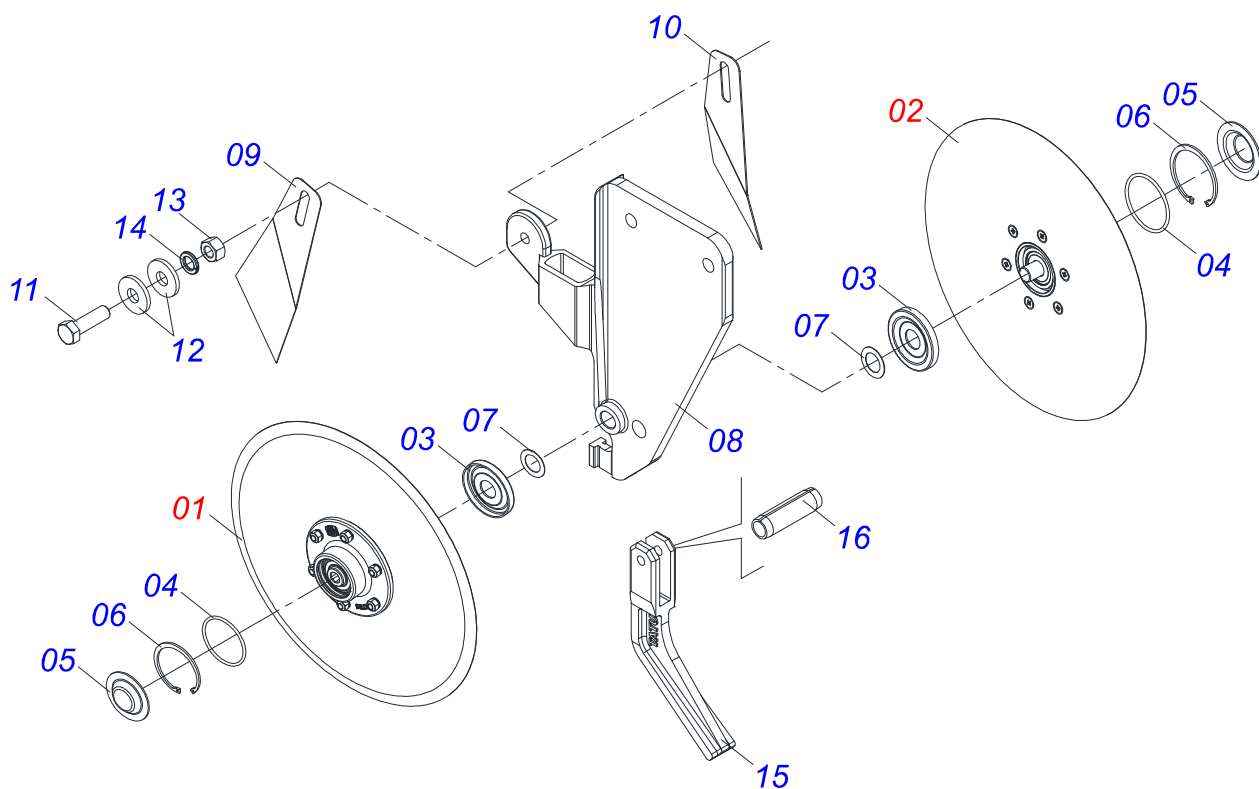


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	34	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	35	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RH DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503011443	3/8" SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

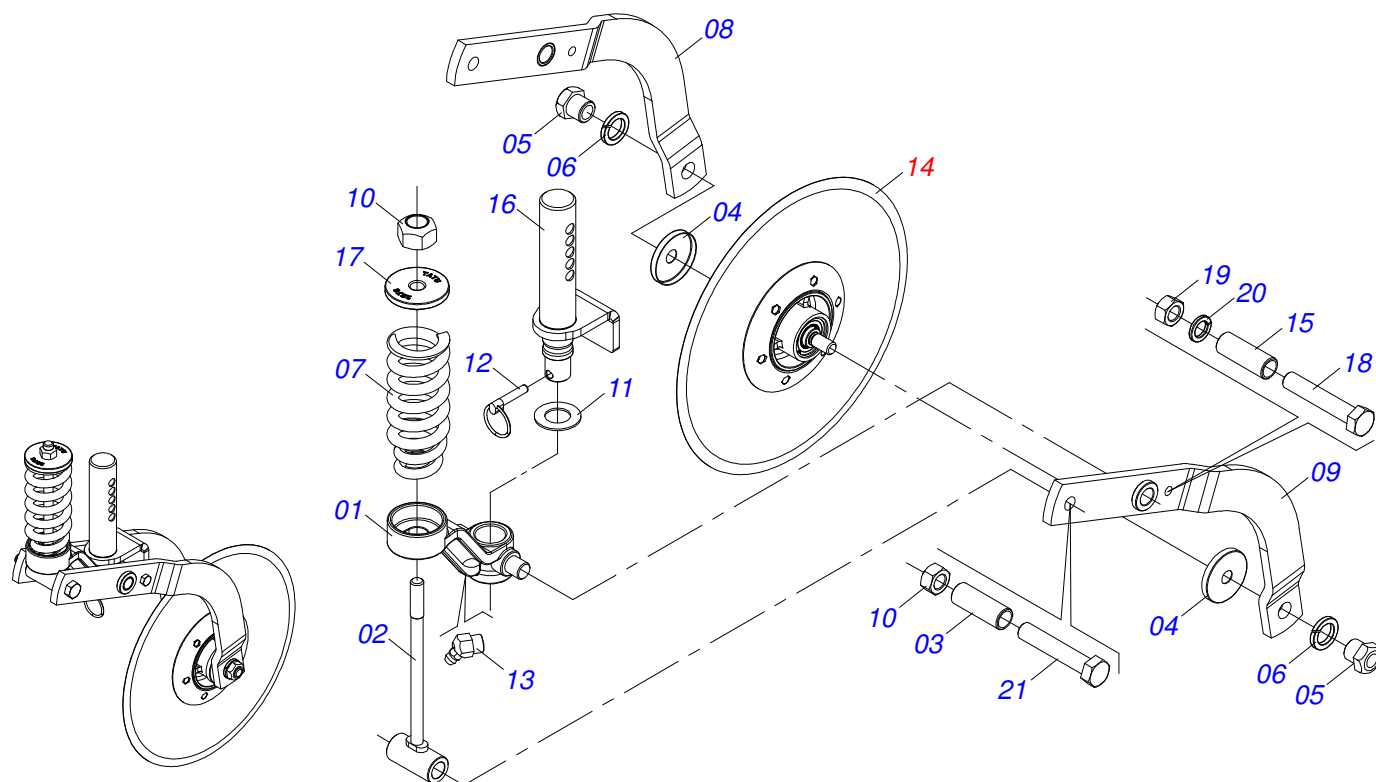 


Item	Code	Description	See page	QT
01	0502012369	BLADE DISC SUPPORT		01
02	0501067323	SPRING REGULATOR		01
03	0521010452	SLEEVE		01
04	0521015376	DUST CLOAK		02
05	0521013510	3/4" NUT		02
06	0503011438	SPRING WASHER		02
07	0503034498	SPRING		01
08	0521067844	RIGHT ARM		01
09	0521067843	LEFT ARM		01
10	0503011255	3/4" LOCK NUT		02
11	0581014407	FLAT WASHER 36.5 X 65.00 X 3.00		01
12	0503030430	7/16 X 2" PIN LOCK		01
13	0503010003	1845 GREASE FITTING		01
14	0501052139	18 BLADE DISC WITH FLAT PLAN DISC	49	01
15	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
16	0521062962	BLADE DISC AXLE		01
17	0581014524	SPRING SUPPORT WASHER		01
18	0503011411	1/2" X 5-1/2" BOLT		01
19	0503010060	1/2" NUT		01
20	0503011440	SPRING WASHER		01
21	0503013185	3/4" X 5-1/2" BOLT		01

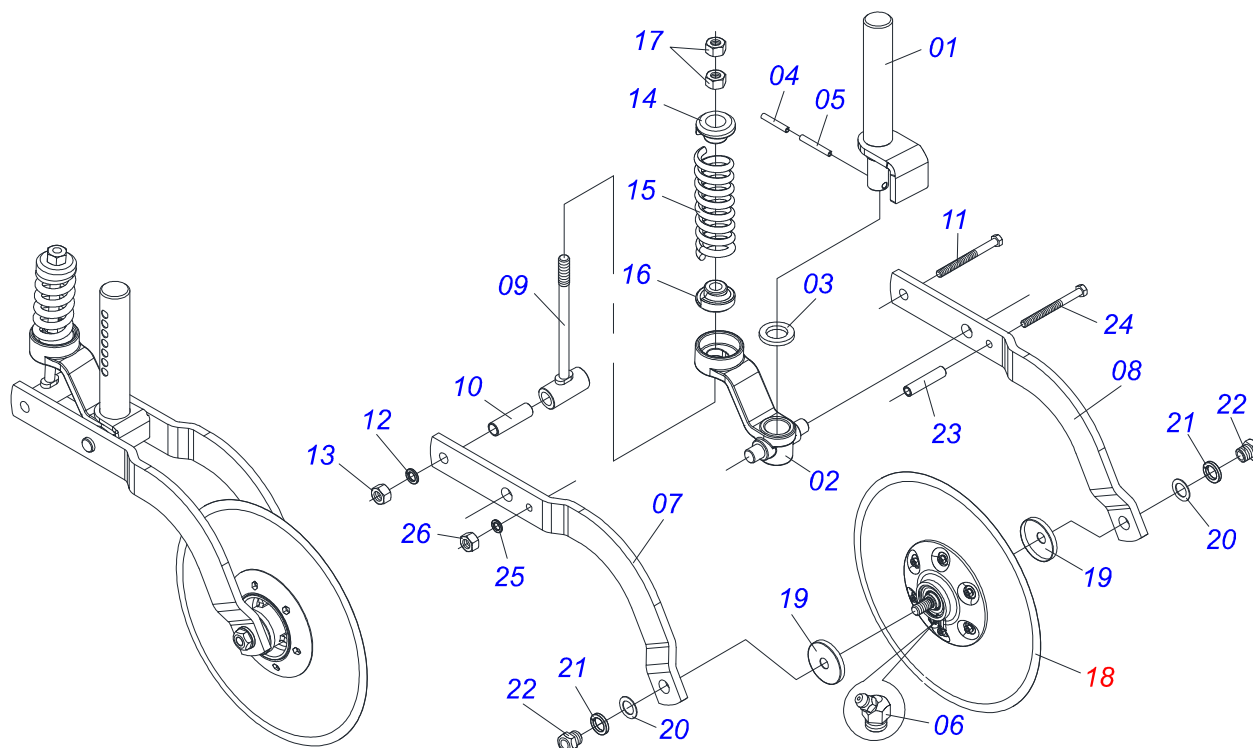 


Item	Code	Description	See page	QT
01	0521062962	BLADE DISC AXLE		01
02	0502012369	BLADE DISC SUPPORT		01
03	0541018684	FLAT WASHER		01
04	0503010361	SPRING PIN		01
05	0503010756	0.2" X 2.4" SPRING PIN		01
06	0503010003	1845 GREASE FITTING		01
07	0521018935	RIGHT ARM OF THE BLADE DISC		01
08	0521018936	LEFT ARM OF THE BLADE DISC		01
09	0501067323	SPRING REGULATOR		01
10	0521010452	SLEEVE		01
11	0503016525	3/4" X 6" BOLT		01
12	0503011442	3/4" SPRING WASHER		01
13	0503010014	3/4" NUT		01
14	0502020393	SPRING UPPER SUPPORT		01
15	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
16	0502020394	SPRING SUPPORT		01
17	0503010014	3/4" NUT		02
18	0501054887	20 BLADE DISC WITH FLAT PLAN DISC	50	01
19	0521015376	DUST CLOAK		02
20	0511015346	FLAT WASHER		02
21	0503011438	SPRING WASHER		02
22	0521013510	3/4" NUT		02
23	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
24	0503011411	1/2" X 5-1/2" BOLT		01
25	0503011440	SPRING WASHER		01
26	0503010060	1/2" NUT		01

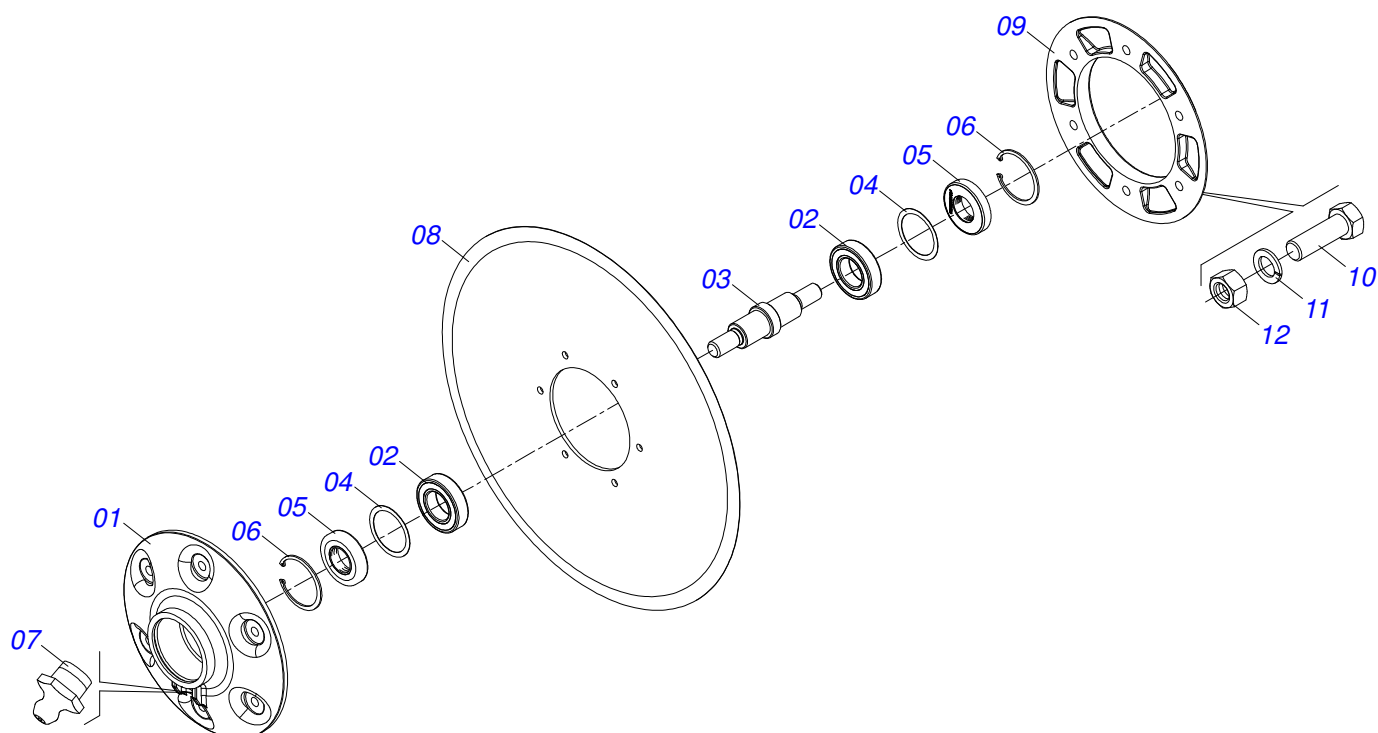 


Item	Code	Description	See page	QT
01	0502011562	DC PST ACT/ULTR BOX		01
02	0503010276	6206 BALL BEARING		02
03	0521013610	BLADE DISC HUB AXLE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0603026013	PLAIN COULTER BLADE		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

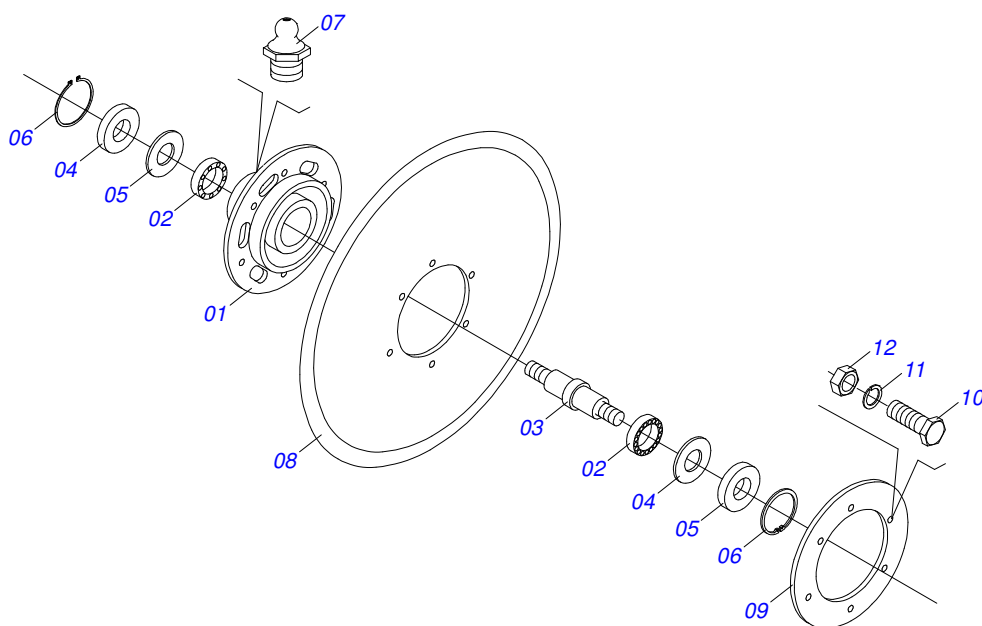 


Item	Code	Description	See page	QT
01	0502011562	DC PST ACT/ULTR BOX		01
02	0503010276	6206 BALL BEARING		02
03	0521013610	BLADE DISC HUB AXLE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0603027851	20" X 0.2" FLAT PLAIN DISC		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

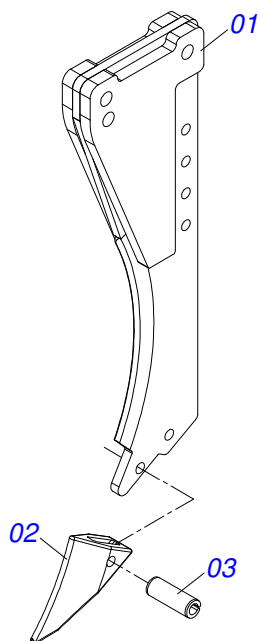 


Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER SPINDLE		01
02	1902070061	POINT SUBSOILER		01
03	0503011373	0.4" X 1.1" SPRING PIN		01

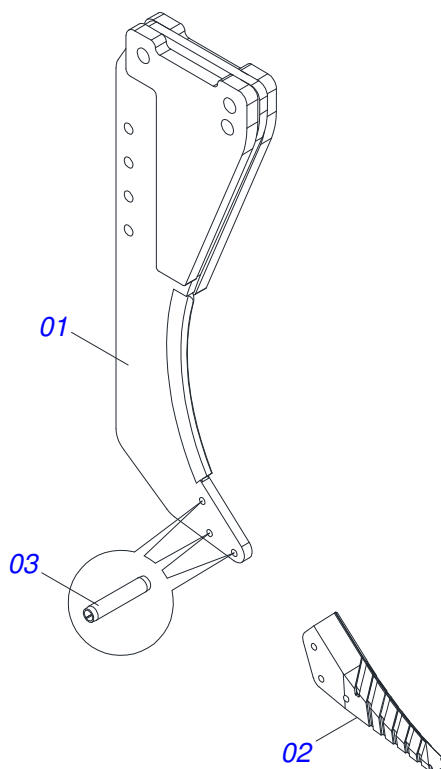 

Item	Code	Description	See page	QT
01	0521063867	SCARIFIER SPINDLE		01
02	0502070082	POINT SUBSOILER		01
03	0503010585	0,24" X 1.18" SPRING PIN		03

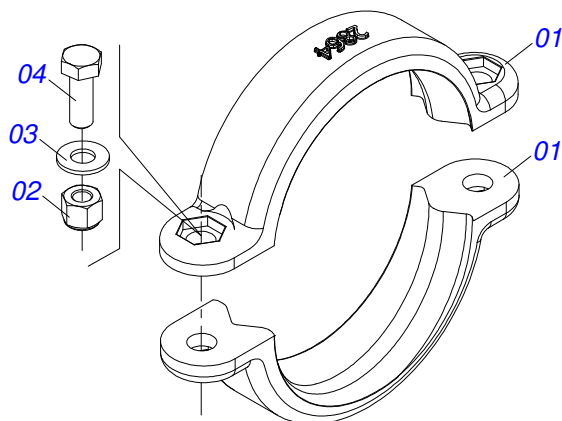 


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010365	NUT		02

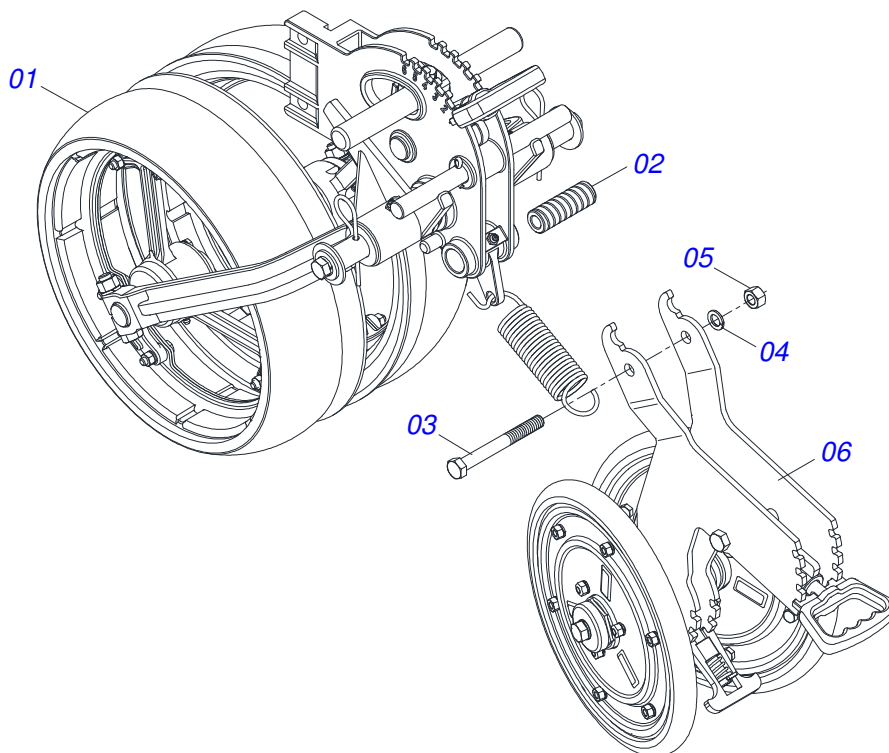 

Item	Code	Description	See page	QT
01	0511055690	WHEEL SISTEM	55	01
02	0551019650	SLEEVE 13,20 X 25 X 74		01
03	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0511055327	COMPACTING WHEEL V ASSY RUBBER	56	01

WHEEL SISTEM

 
0511055690

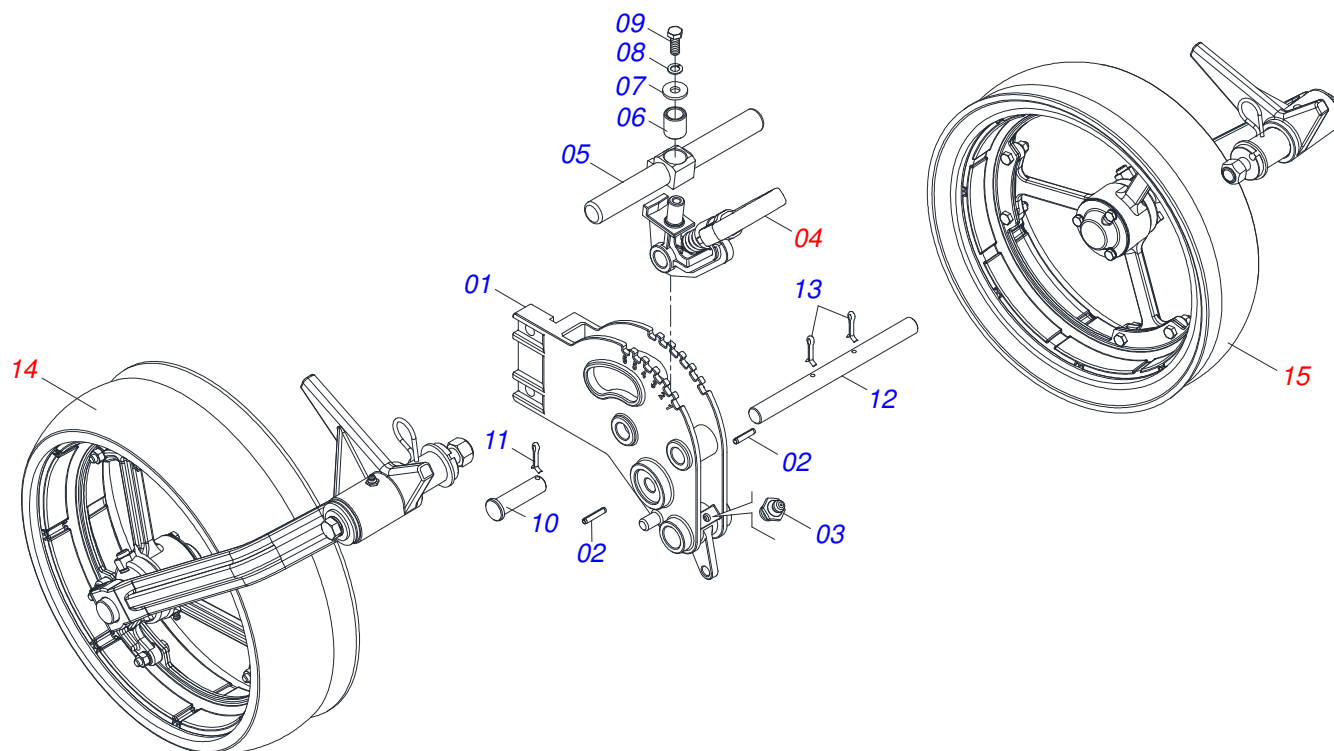

Item	Code	Description	See page	QT
01	0502012758	DEPTH CONTROL SUPPORT		01
02	0503010585	0,24" X 1.18" SPRING PIN		02
03	0503010002	1800 GREASE FITTING		01
04	0501059228	ADJUSTMENT LEVER	57	01
05	0502012611	DEPTH CONTROL AXLE		01
06	0571015326	ARTICULATION SLEEVE HANDLE		01
07	0501010984	FLAT WASHER		01
08	0503011443	3/8" SPRING WASHER		01
09	0503010237	3/8" X 1" BOLT		01
10	0571016132	PIVOT SHAFT		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0561014336	PIVOT SHAFT		01
13	0503010071	3/16" X 1" COTTERPIN		02
14	0511055628	DEPTH WHEEL SYSTEM	58	01
15	0511055629	DEPTH WHEEL SYSTEM	59	01

COMPACTING WHEEL V ASSY RUBBER

 
0511055327

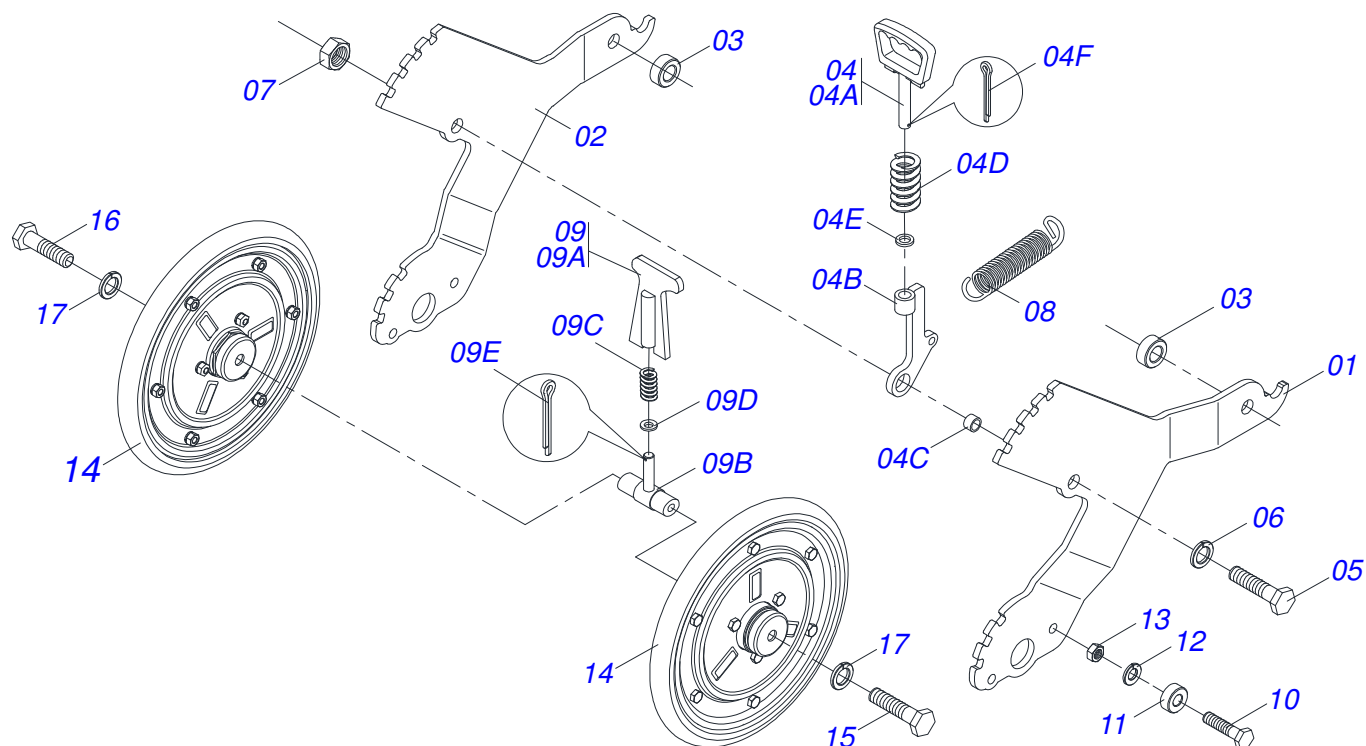

Item	Code	Description	See page	QT
01	0571015324	COMPACT WHEEL RIGHT ARM		01
02	0571015325	LH ARM PRESS WHEELS		01
03	0541012145	SLEEV 13,5 X 25 X 18		02
04	0501058362	LARGER HANDLE ASSY		01
04A	0502011689	1/8" DEPTH CONTROL LEVER		01
04B	0521064892	REGULACION SPRING COMPACTOR		01
04C	0541012146	0.53" X 0.74" X 0.33" SLEEVE		01
04D	0503030174	COMPRESSION SPRING		01
04E	0541012143	FLAT WASHER		01
04F	0503010257	1/8" X 1" COTTERPIN		01
05	0503010479	1/2" X 3" BOLT		01
06	0503010019	1/2" SPRING WASHER		01
07	0503010060	1/2" NUT		01
08	0503031393	1.57" X 5.98" X 0.2" TRACTION SPRING		01
09	0501055289	HANDLE SMALLER ASSY		01
09A	0511065451	PRESS WHEEL ADJUSTER		01
09B	0511065496	PRESS WHEEL FIXER		01
09C	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
09D	0541012143	FLAT WASHER		01
09E	0503010257	1/8" X 1" COTTERPIN		01
10	0503010397	5/16" X 1-3/4" BOLT		02
11	0541012144	8,50 X 16 X 21 SLEEVE		02
12	0503011444	SPRING WASHER		02
13	0503010337	5/16" NUT		02
14	0501052908	COMPACTOR WHEEL WITH BEARING	67	02
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503013739	1/2" X 1" BOLT		01
17	0503011440	SPRING WASHER		02

ADJUSTMENT LEVER

 
0501059228

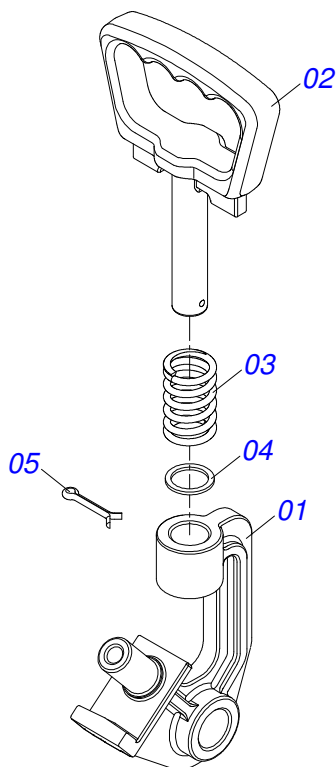

Item	Code	Description	See page	QT
01	0502012603	ADJUSTMENT LEVER		01
02	0502011689	1/8" DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0511015976	FLAT WASHER		01
05	0503010140	1/8" X 3/4" COTTERPIN		01

DEPTH WHEEL SYSTEM

 
0511055628

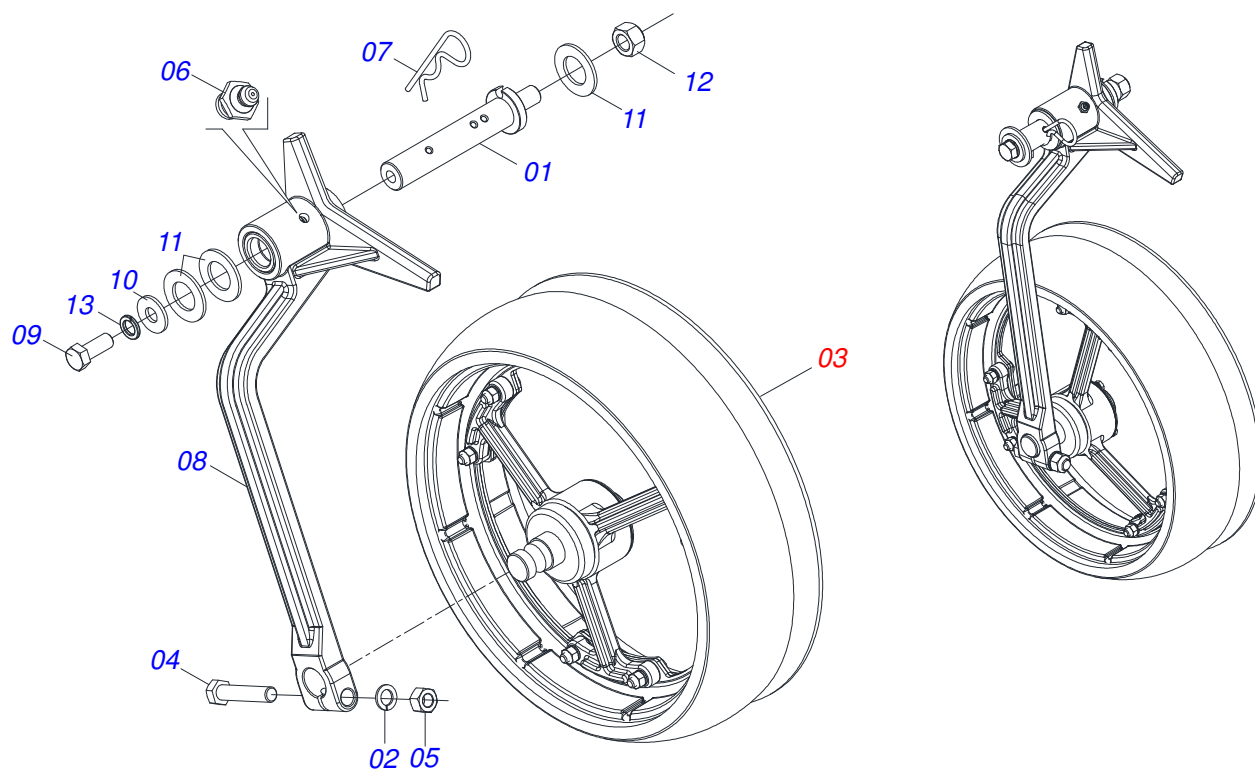


Item	Code	Description	See page	QT
01	0561014385	CARRYING-WHEELS PIVOT SHAFT		01
02	0503010019	1/2" SPRING WASHER		01
03	0511055627	WHEEL ASSY RAYED		01
04	0503016453	1/2" X 2.1/2 BOLT		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01
07	0503030012	HAIR PIN		01
08	0501110777	RIGHT WHEEL ARM		01
09	0503014007	1/2" X 1-1/4" BOLT		01
10	0511017302	FLAT WASHER		01
11	0501011445	FLAT WASHER		03
12	0503012412	5/8 UNC SELF LOCKING NUT		01
13	0503011440	SPRING WASHER		01

DEPTH WHEEL SYSTEM

 
0511055629

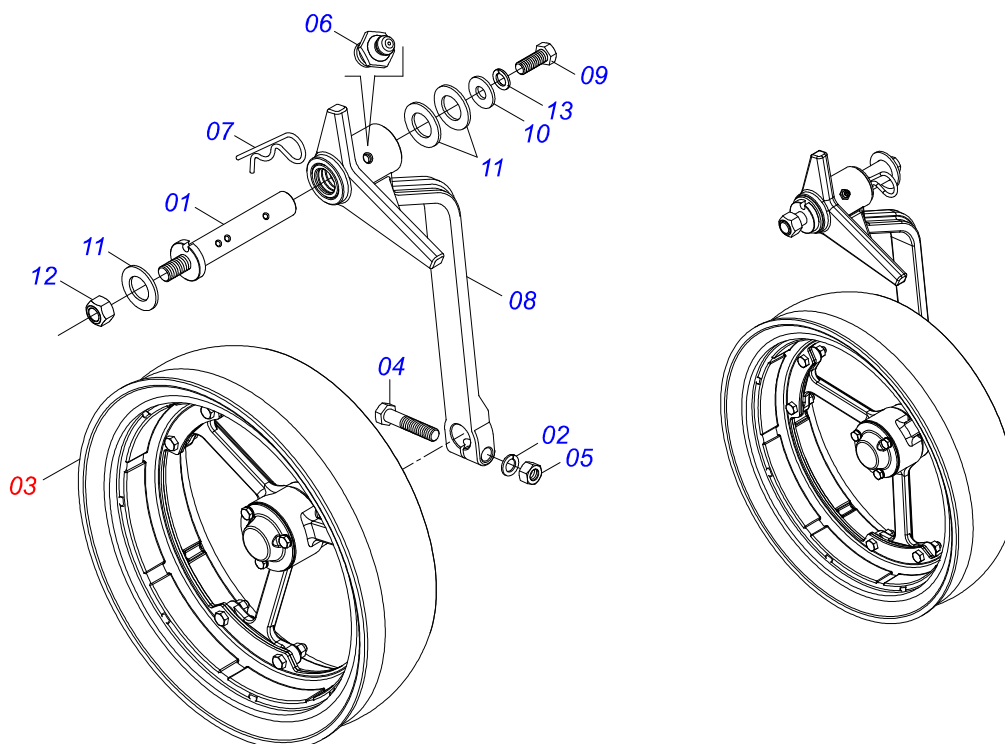


Item	Code	Description	See page	QT
01	0571015973	CARRYING-WHEELS PIVOT SHAFT		01
02	0503010019	1/2" SPRING WASHER		01
03	0511055627	WHEEL ASSY RAYED		01
04	0503016453	1/2" X 2.1/2 BOLT		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01
07	0503030012	HAIR PIN		01
08	0501110776	ARM,LEFT		01
09	0503014007	1/2" X 1-1/4" BOLT		01
10	0511017302	FLAT WASHER		01
11	0501011445	FLAT WASHER		03
12	0503012412	5/8 UNC SELF LOCKING NUT		01
13	0503011440	SPRING WASHER		01

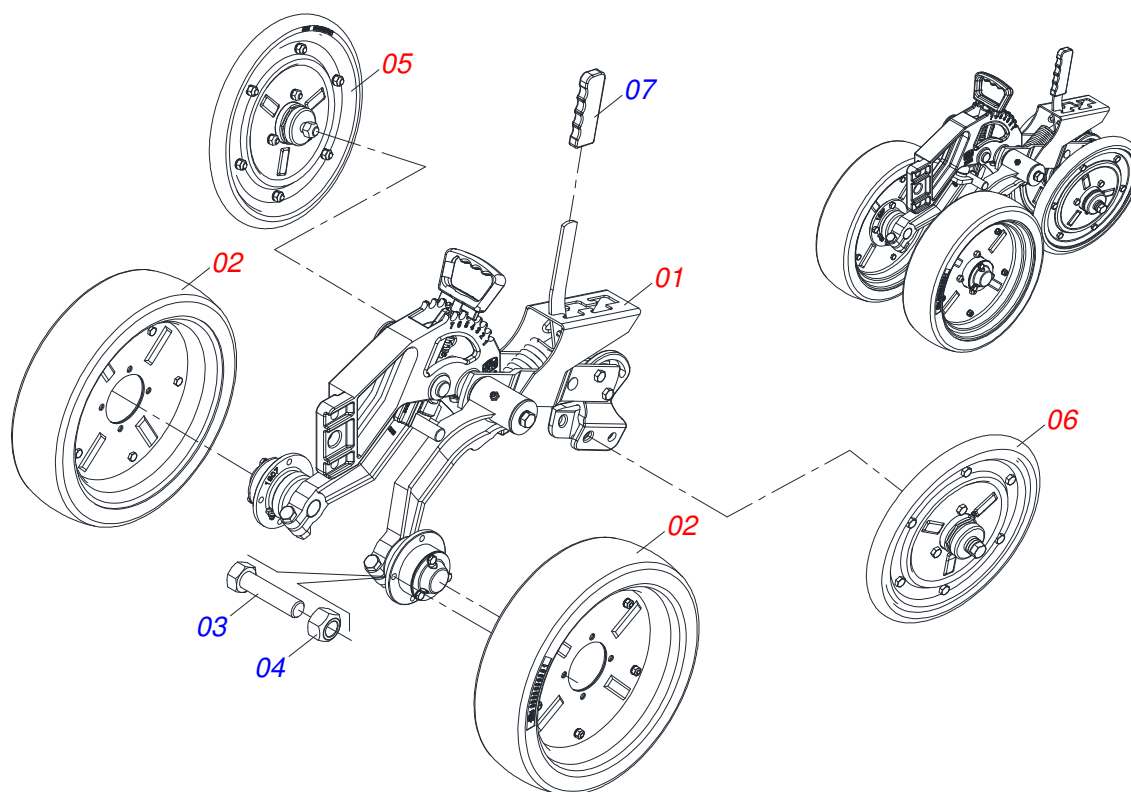 


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	61	01
02	0501052538	DEPTH BAND WITH ARMS	39	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	65	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	66	01
07	0503033942	COVER REGULATORY WHEEL		01

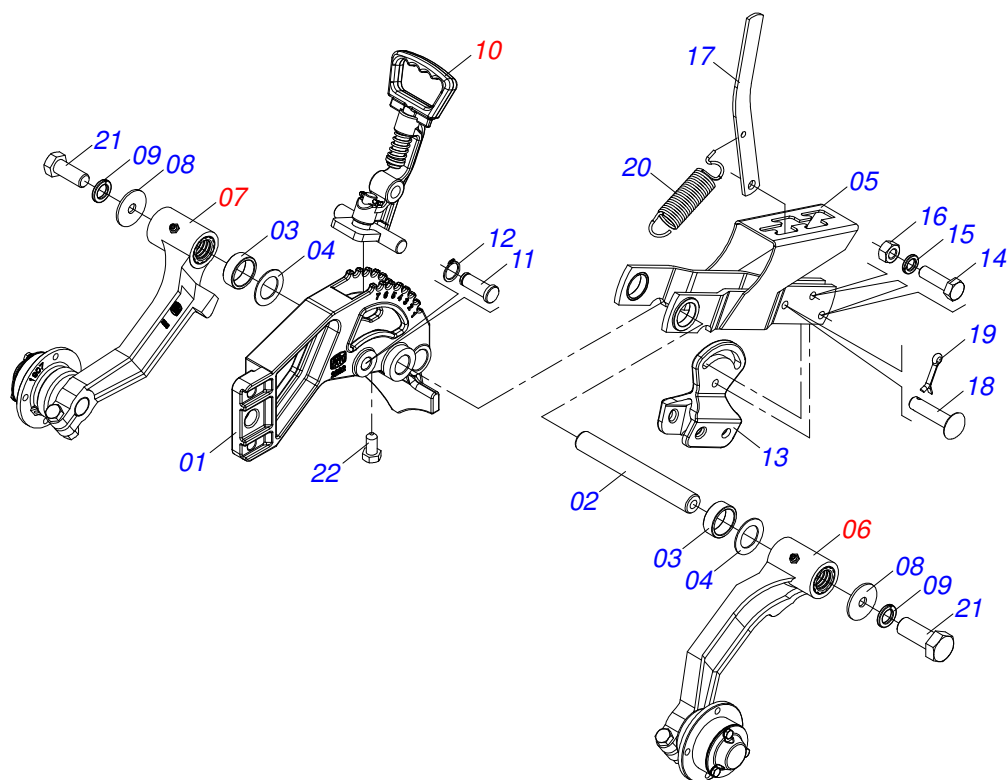 


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	62	01
07	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	63	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	64	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2" TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	SCREWEW 3/8 UNC X 3/4		01

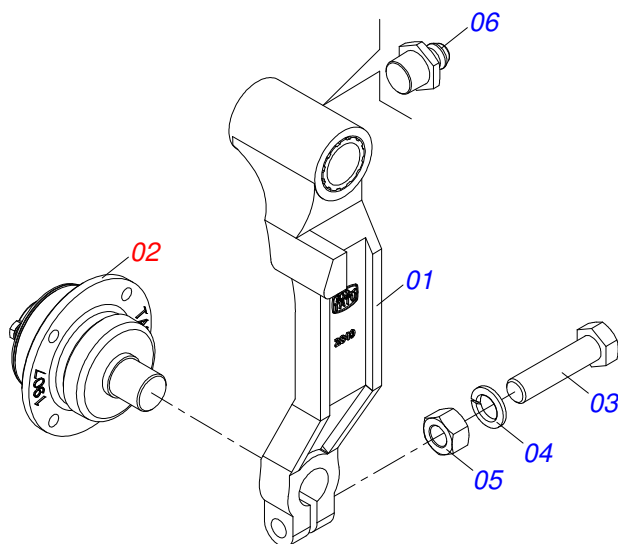 


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL BOX		01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01

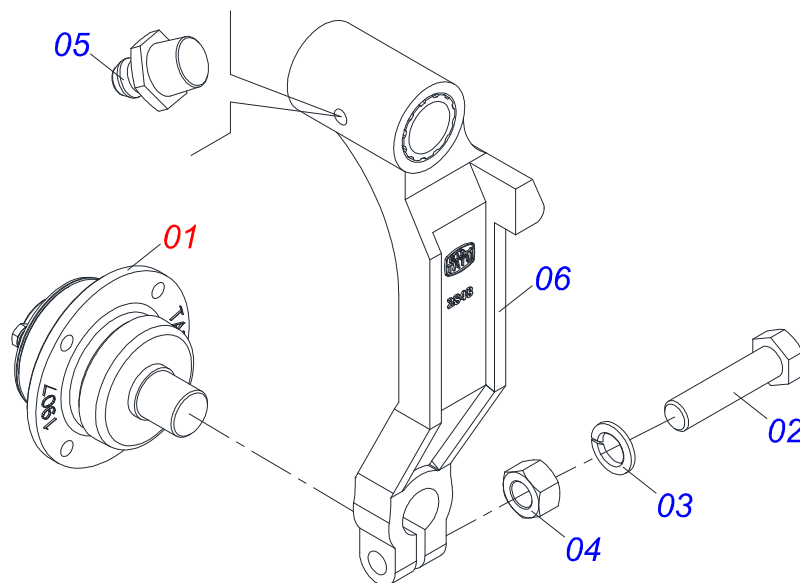 


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL BOX		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

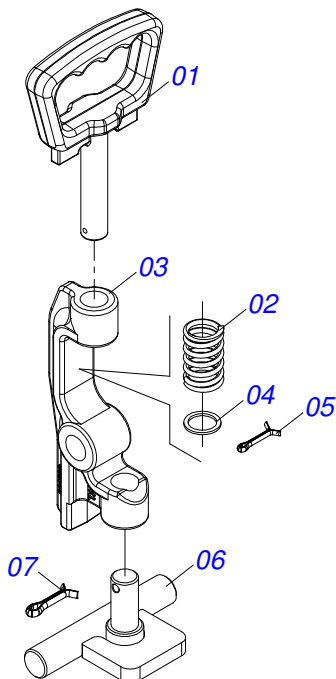 


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	SEED SIST CONTROL DEPTH LEVER		01
04	0511015976	FLAT WASHER		01
05	0503010257	1/8" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503010071	3/16" X 1" COTTERPIN		01

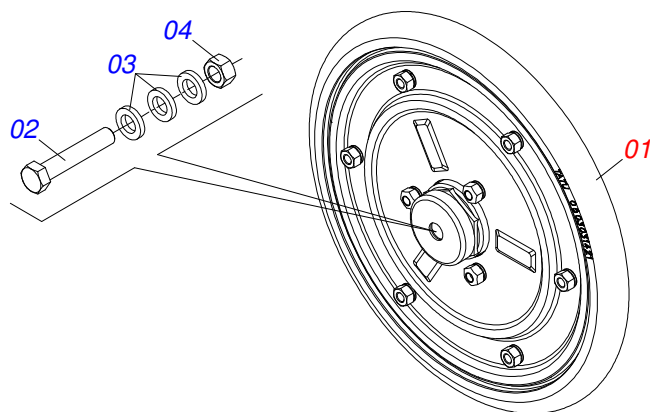 


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	67	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

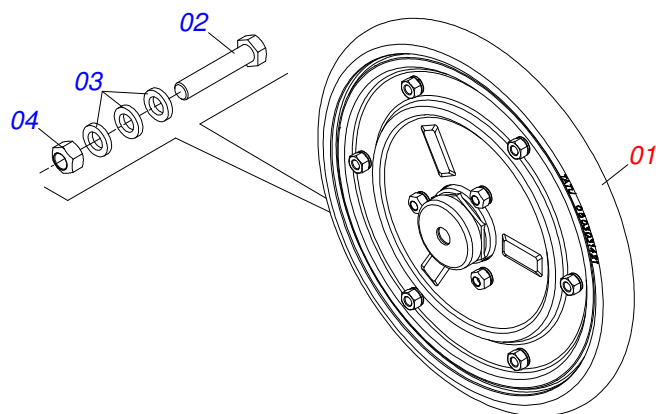 


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	67	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

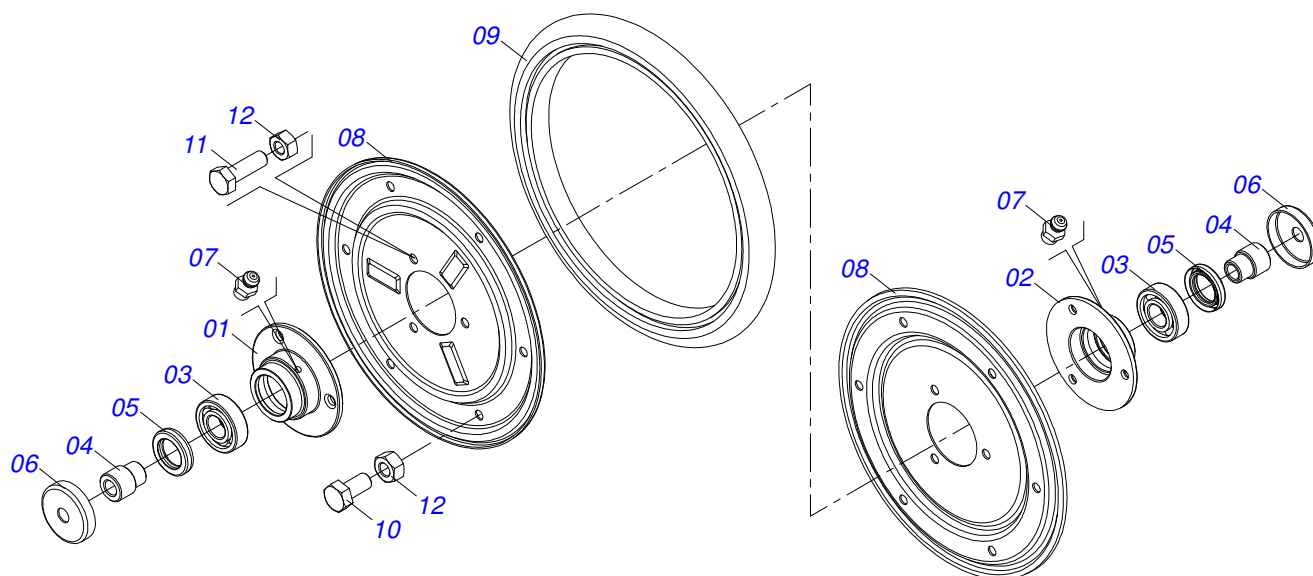 


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

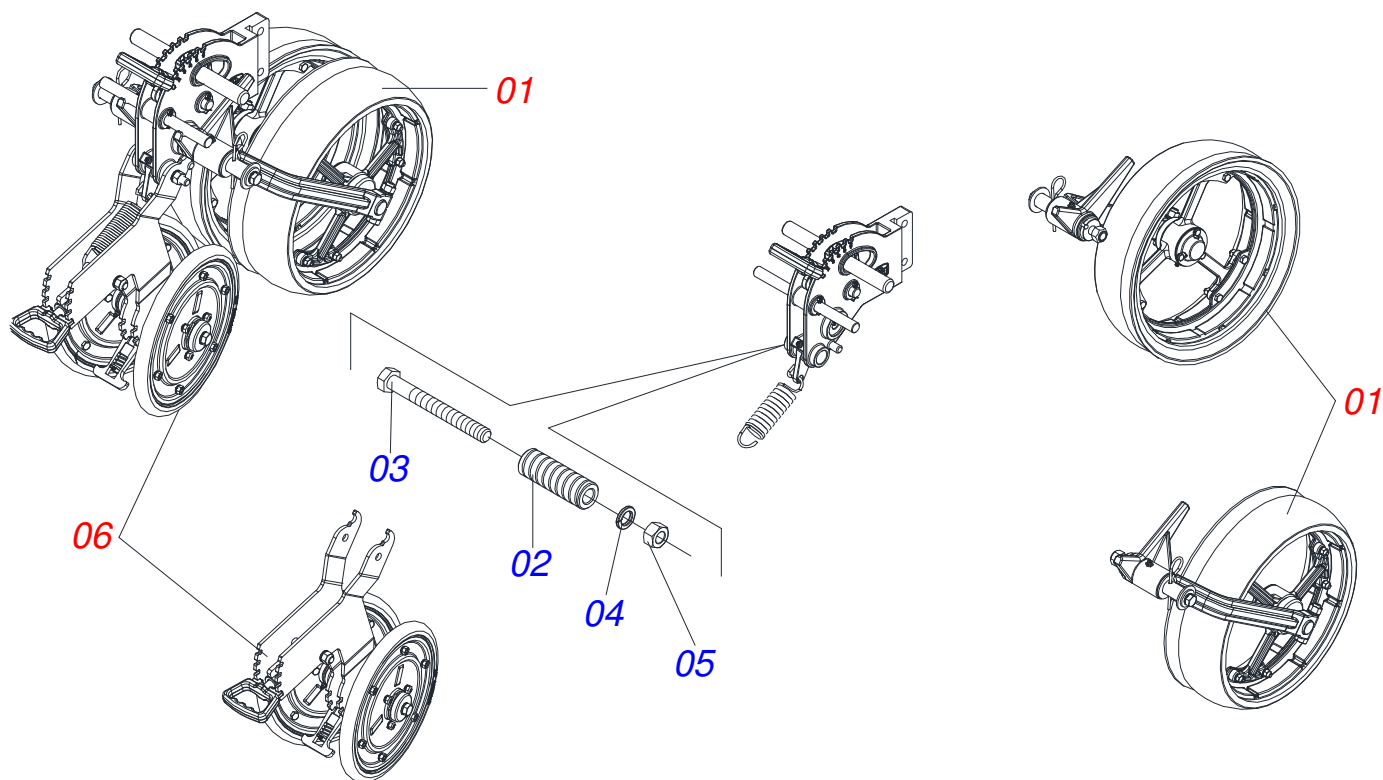 


Item	Code	Description	See page	QT
001	0511055326	DEPTH CONTROL PRESS WHEEL ASSY	69	01
002	0551019650	SLEEVE 13,20 X 25 X 74		01
003	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		01
004	0503010019	1/2" SPRING WASHER		01
005	0503010060	1/2" NUT		01
006	0511055327	COMPACTING WHEEL V ASSY RUBBER	56	01

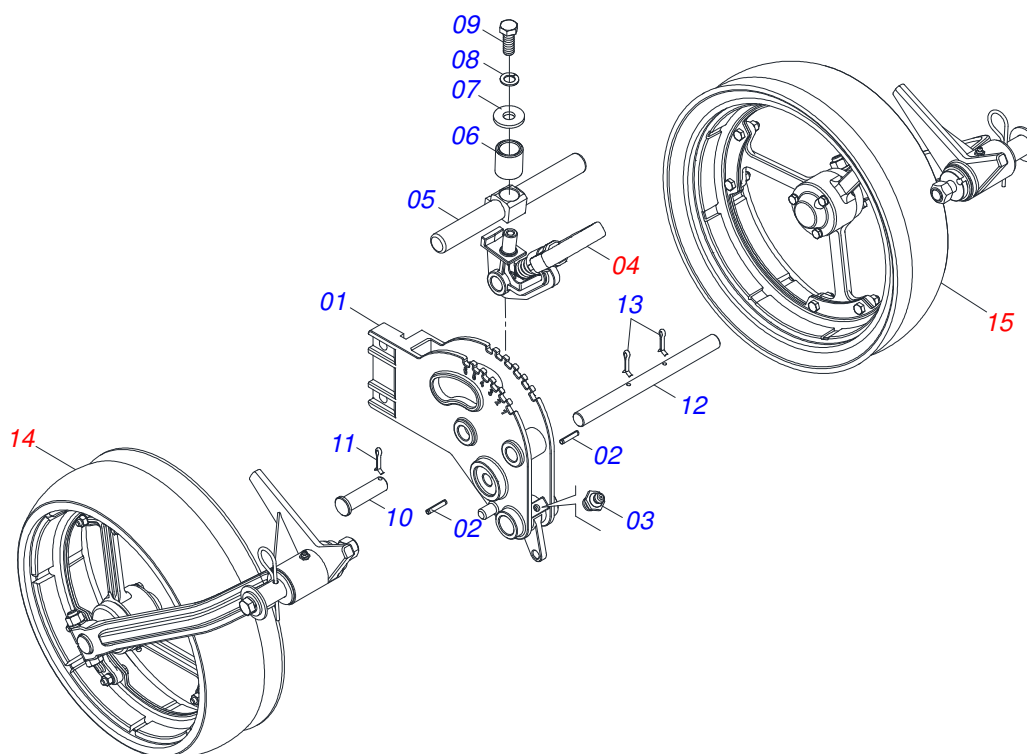 


Item	Code	Description	See page	QT
001	0502012758	DEPTH CONTROL SUPPORT		01
002	0503010585	0,24" X 1.18" SPRING PIN		02
003	0503010002	1800 GREASE FITTING		01
004	0501059228	ADJUSTMENT LEVER	57	01
005	0502012611	DEPTH CONTROL AXLE		01
006	0571015326	ARTICULATION SLEEVE HANDLE		01
007	0501010984	FLAT WASHER		01
008	0503011443	3/8" SPRING WASHER		01
009	0503010237	3/8" X 1" BOLT		01
010	0571016132	PIVOT SHAFT		01
011	0503010071	3/16" X 1" COTTERPIN		01
012	0561014336	PIVOT SHAFT		01
013	0503010071	3/16" X 1" COTTERPIN		02
014	0511055328	DEPTH WHEEL SYSTEM		01
015	0511055329	LEFT DEPTH WHEEL		01

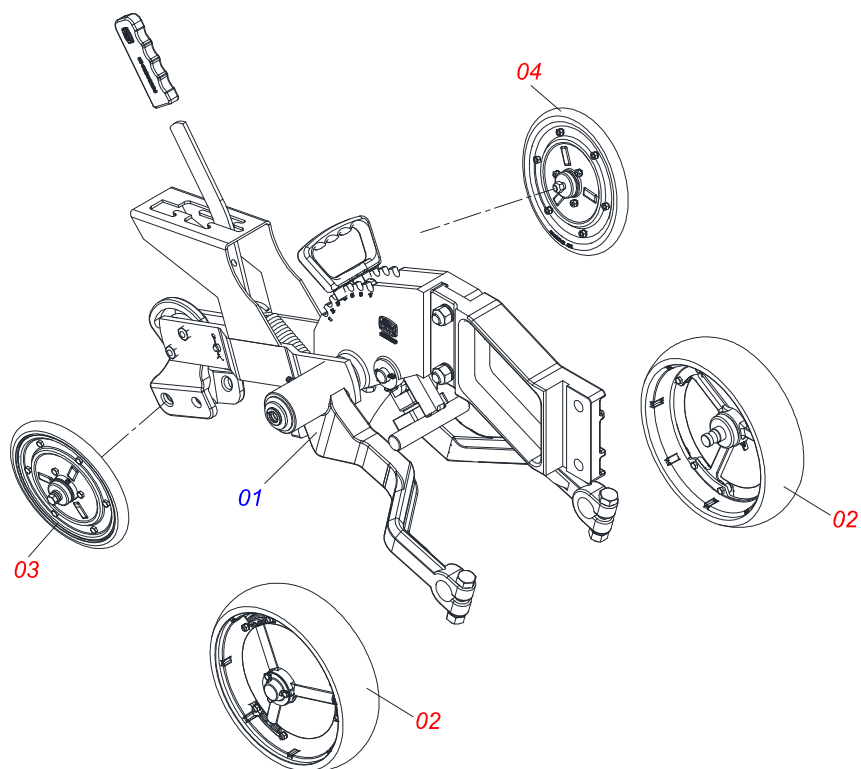 

Item	Code	Description	See page	QT
01	0511053550	DEPTH CONTROL ASSY		01
02	0511050077	WHEEL STRIPED	71	02
03	0511054333	COMPACT WHEEL RIGHT WITH BEARING	65	01
04	0511054334	COMPACT WHEEL LEFT WITH BEARING	66	01
05	0503033942	COVER REGULATORY WHEEL		01

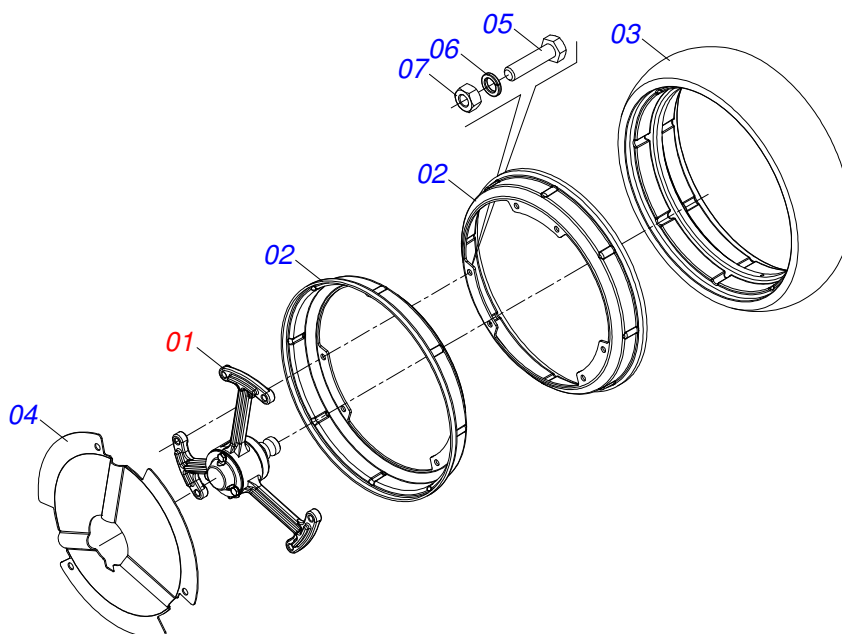 


Item	Code	Description	See page	QT
01	0511052287	DEPTH WHEEL HUB ASSY	72	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	NUT		06
06	0503010179	5/16" ZN SPRING WASHER		06
07	0503010337	5/16" NUT		06

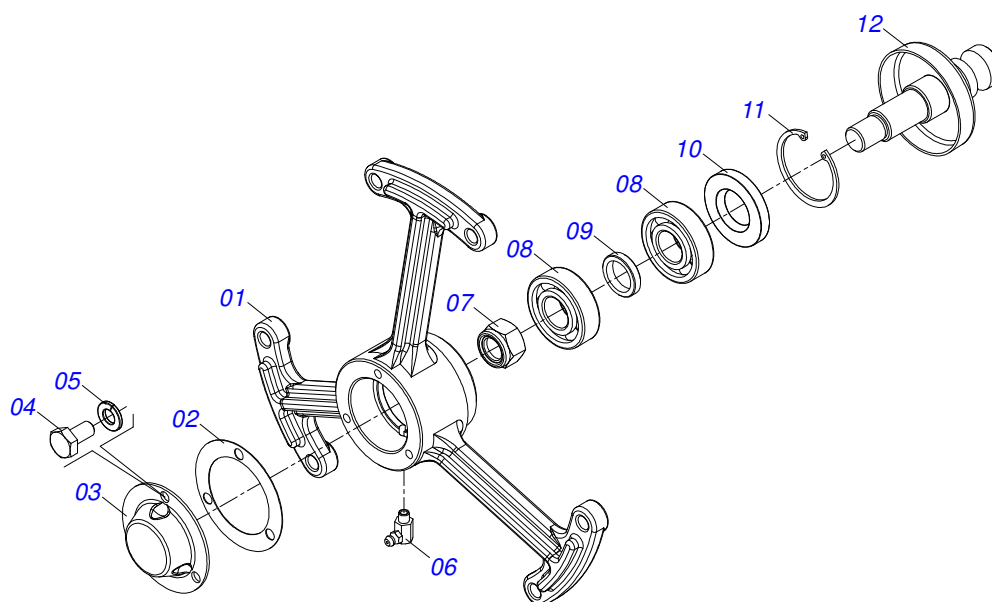 

Item	Code	Description	See page	QT
01	0502011918	DEPHT WHEELS BOX		01
02	0503030757	2.9" X 2" X 0.02" JOINT		01
03	0521019178	COVER DEPTH		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503011098	1/4" GREASE FITTING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503010269	6204 BALL BEARING		02
09	0501013636	SPACING SLEEVE		01
10	0503010689	SEAL 00763-BR		01
11	0503011105	SEAL RING		01
12	0521063443	DEPTH CONTROL AXLE		01

HEX AXLE ASSEMBLY

 
0511053456

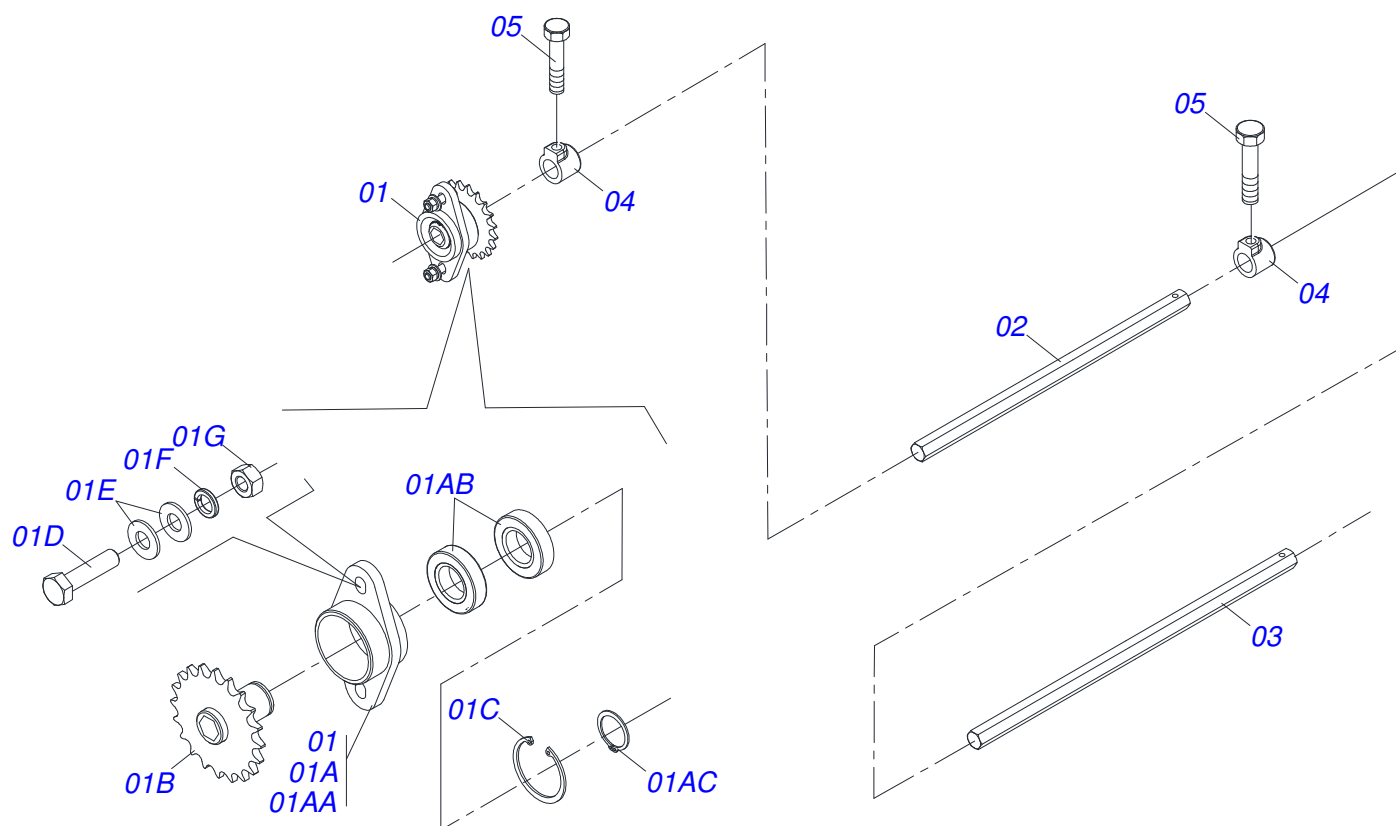

Item	Code	Description	See page	15 L
001	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	02	
001A	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	01	
001AA	0502011987	DOUBLE HOUSING BEARING	01	
001AB	0503011410	ROLLER BEARING	02	
001AC	0503011105	SEAL RING	01	
001B	0511063106	20Z AXLE BEARING DOBLE	01	
001C	0503010406	501025 CLAMPING RING (FOR AXLE)	02	
001D	0503010365	NUT	02	
001E	0501010694	8.5 X 18 X 1.5 FLAT WASHER	04	
001F	0503010179	5/16" ZN SPRING WASHER	02	
001G	0503010337	5/16" NUT	02	
002	0531016948	RIGHT 5/8" X 131" AXLE HEX	01	
003	0531016949	LEFT 5/8" X 125" AXLE HEX	01	
004	0511063123	BUSHING WITH NUT	04	
005	0503010834	1/2 X 1 BOLT	04	


HYDRAULIC TURBINE ASSEMBLY

 0511058605

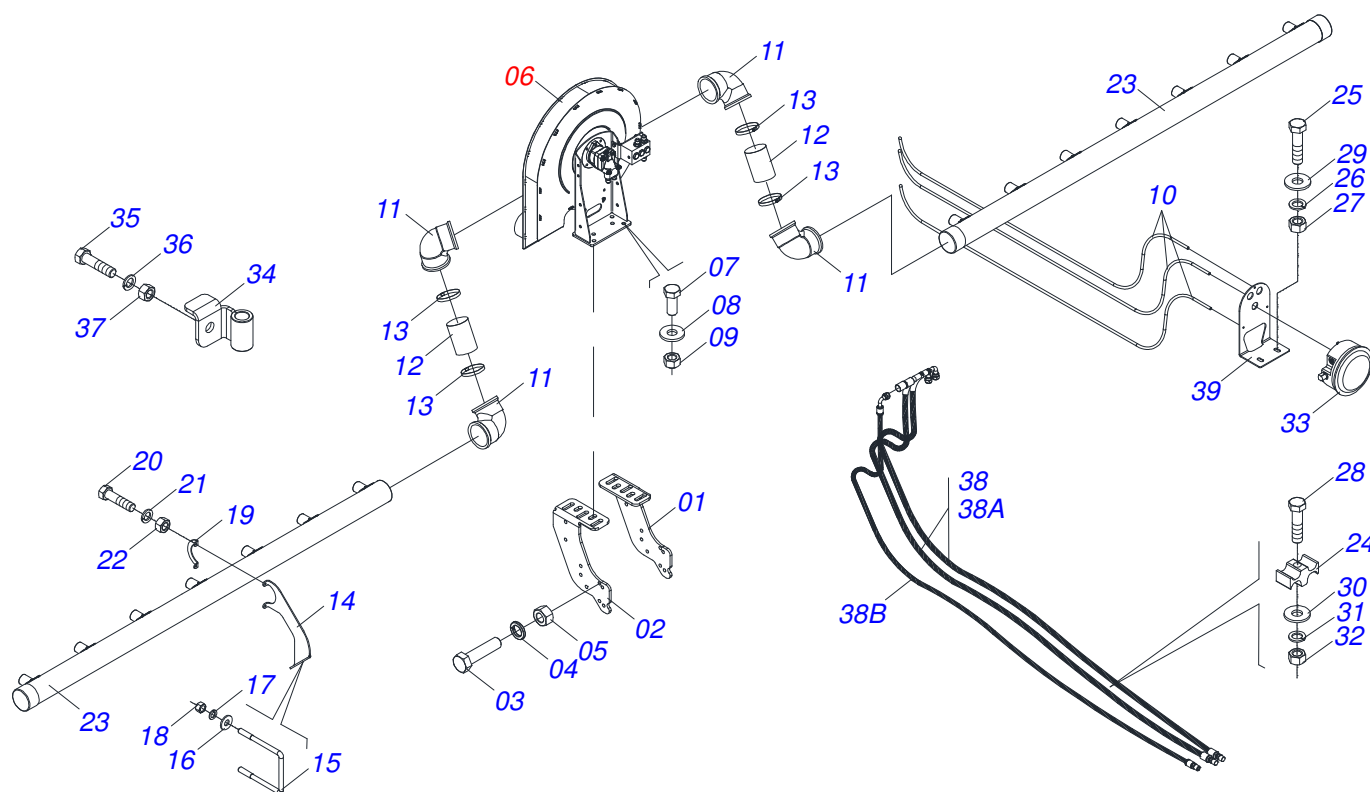


Item	Code	Description	See page	QT
001	0571019979	SHAFT FIXER BODY		01
002	0571019978	SHAFT FIXER BODY		01
003	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
004	0503010019	1/2" SPRING WASHER		04
005	0503010060	1/2" NUT		04
006	0511057700	HYDRAULIC TURBINE	75	01
007	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		02
008	0501012140	FLAT WASHER		02
009	0503012412	5/8 UNC SELF LOCKING NUT		02
010	0503015062	TUBE		03
011	0503031576	ELBOW		04
012	0531016195	4" X 94" AIR CONDUCTOR		02
013	0503011372	102 TO 121 CLAMP		04
014	0571019963	AIR DISTRIBUTOR SUPPORT		04
015	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
016	0501013519	FLAT WASHER		08
017	0503010019	1/2" SPRING WASHER		08
018	0503010060	1/2" NUT		08
019	0521014442	LOWER AIR DISTRIBUTOR SUPPORT		04
020	0503010371	5/16" X 1" BOLT		08
021	0503010179	5/16" ZN SPRING WASHER		08
022	0503010337	5/16" NUT		08
023	0511057784	DISTRIBUTOR PNEUMATIC		02
024	0502012702	BODY SUPPORT CLAMP		02
025	0503010481	BOLT		01
026	0503010025	3/8" SPRING WASHER		01
027	0503010026	3/8" NUT		01
028	0503010371	5/16" X 1" BOLT		02
029	0501010984	FLAT WASHER		02
030	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
031	0503010179	5/16" ZN SPRING WASHER		02


Item	Code	Description	See page	QT
032	0503010337	5/16" NUT		02
033	0503013584	VACUUM GAUGE		01
034	0521063404	SUPPORT FIXER HOSE		01
035	0501010452	5/8" X 5" BOLT		01
036	0503010027	5/8" SPRING WASHER		01
037	0503010013	5/8" NUT		01
038	0511057840	ASSY TURBINE HOSE REAR		02
038A	0501081247	HOSE 1/2 X 7012 TC-TM		02
038B	0501080477	HOSE 3/8 X 7012 TC-TM		01
039	0571019552	SUPPORT VACUUM		01

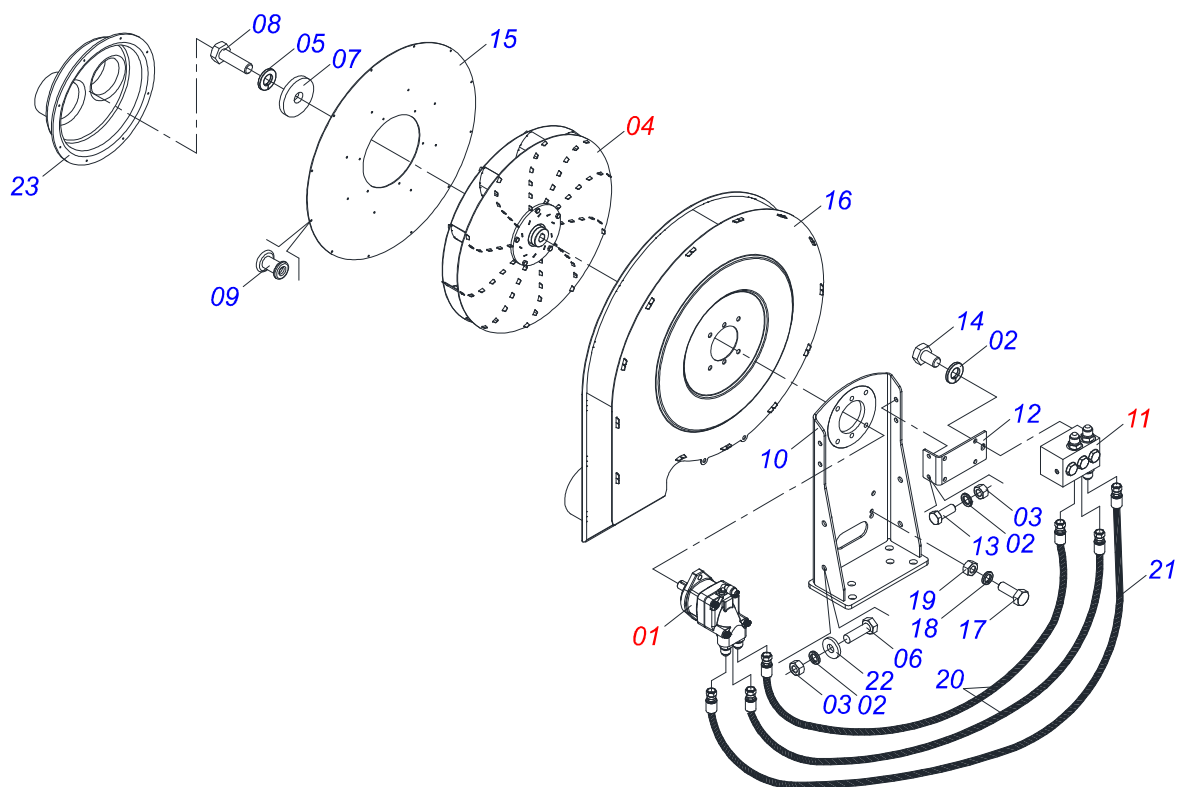 


Item	Code	Description	See page	QT
01	0501054983	NIPPLE HIDRAULIC MOTOR	76	01
02	0503010025	3/8" SPRING WASHER		10
03	0503010026	3/8" NUT		08
04	0521044613	FAN 480 X 50 S (HIDRAULIC)	77	01
05	0503010143	1/4" SPRING WASHER		01
06	0503010849	3/8" X 1-1/2" BOLT		02
07	0531018764	FLAT WASHER		01
08	0503011104	M6 X 1" BOLT		01
09	0503012722	0.16" X 0.4" BLIND RIVET		20
10	0521065858	TURBIN SUPPORT		01
11	0501054577	BLOCK COMMAND WITH NIPLES HYDRAULIC 78 TURBINE		01
12	0561010634	VALVE SUPPORT ASSY		01
13	0503010237	3/8" X 1" BOLT		06
14	0503010206	3/8" X 1/2" BOLT		02
15	0571018577	COVER SNAIL TURBINE		01
16	0521066237	SNAIL MECHANICAL TURBINE HIDRAULIC		01
17	0503010358	5/16" X 5/8" BOLT		02
18	0503010179	5/16" ZN SPRING WASHER		02
19	0503010337	5/16" NUT		02
20	0501080125	HOSE 1/2 X 500 TR TR		02
21	0501080635	3/8" X 19" TR-TR HOSE		01
22	0521018517	FLAT WASHER		02
23	0503031649	CONECTOR CENTER		01

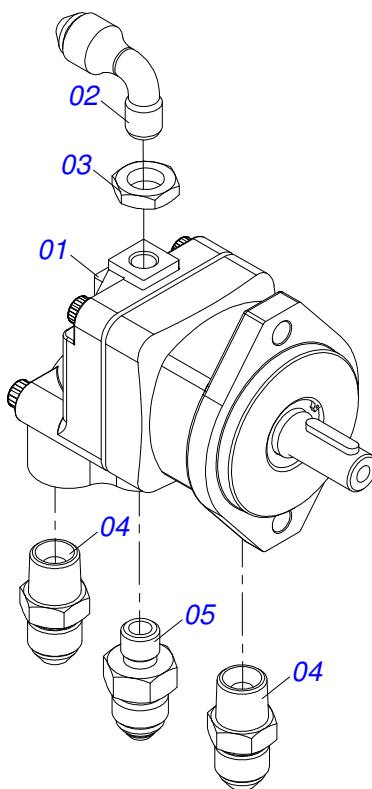 


Item	Code	Description	See page	QT
01	0503012871	HYDRAULIC MOTOR		01
02	0531018770	R 3/4"UNF X R 1/4"BSP ELBOW		01
03	0561016941	3/4" NUT		01
04	0511014065	7/8" NF X R1/2NPT X 52 NIPPLE		02
05	0541011065	3/4"UNF X R1/4BSP19FPP X43.5 NIPPLE		01

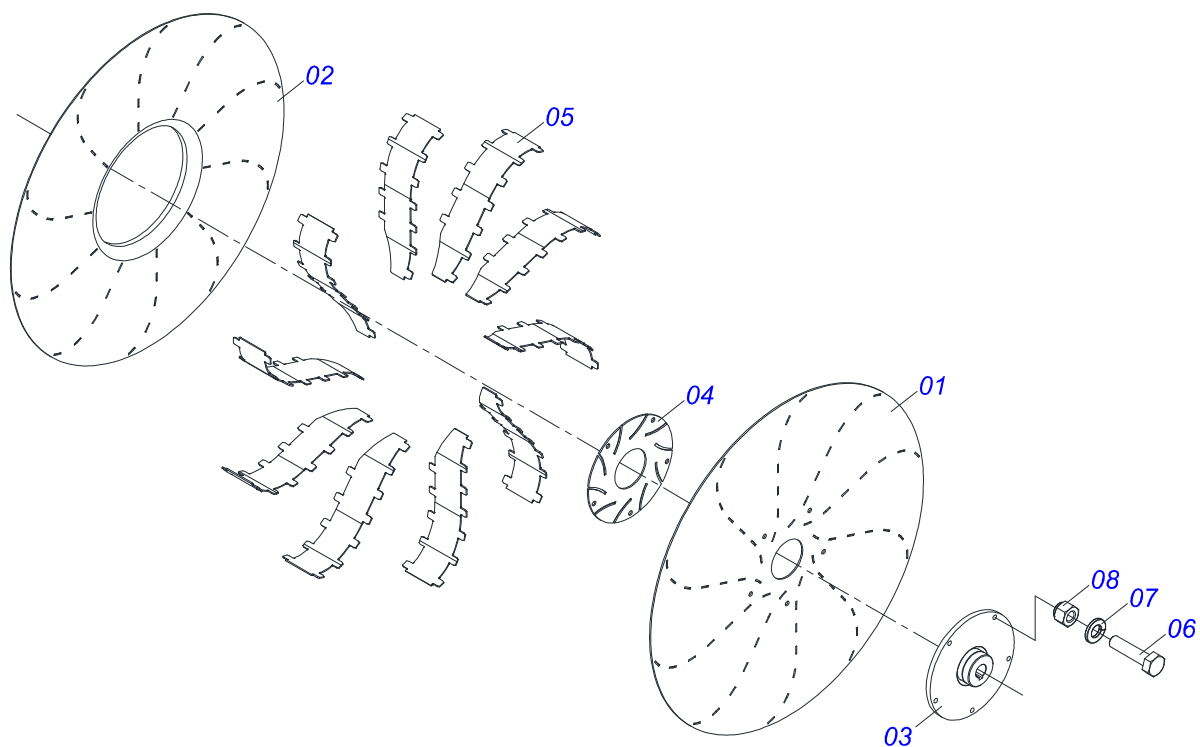 


Item	Code	Description	See page	QT
001	0571016947	DISC FRONT TURBINE		01
002	0571016949	DISC REAR TURBINE		01
003	0521065171	HUB FLANGE		01
004	0571016950	DISC STRENGTHENING TURBINE		01
005	0571016951	FLIP TURBINE		10
006	0503012651	M6 X 1" BOLT		05
007	0503010143	1/4" SPRING WASHER		05
008	0503011776	M6 SELF ADJUSTINGNUT		05

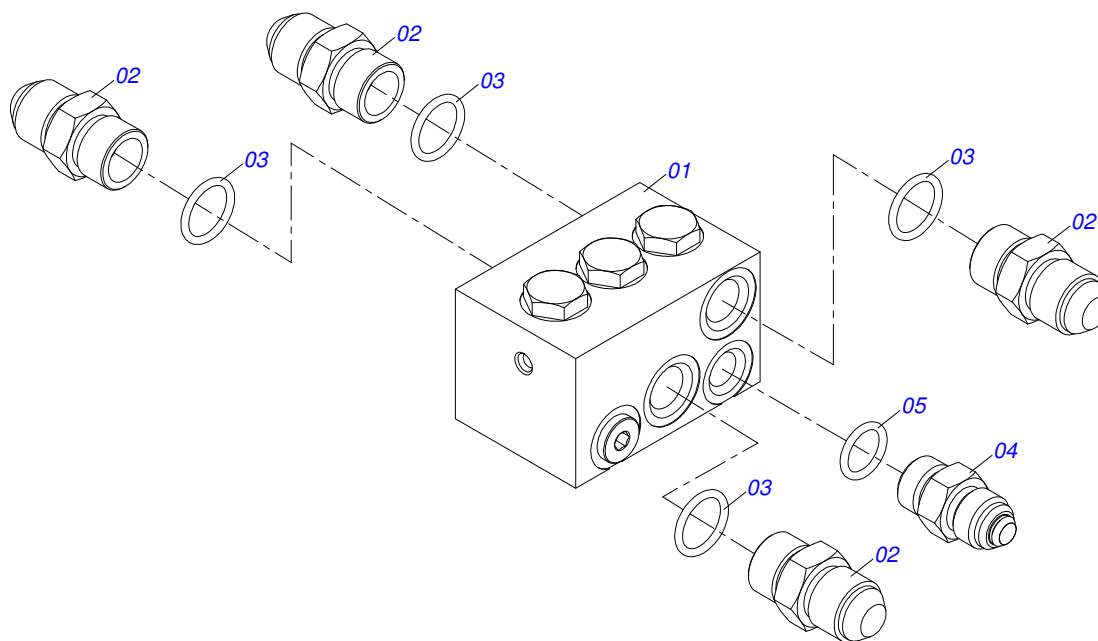 


Item	Code	Description	See page	QT
01	0503012291	BLOCK COMMAND		01
02	0501010590	7/8" REDUCTION NIPPLE		04
03	0503010045	2-116 N 3006-9B O'RING		04
04	0541011066	3/4" UNF X 43.5 NIPPLE		01
05	0503010190	2-114 N 3006-9B O'RING		01

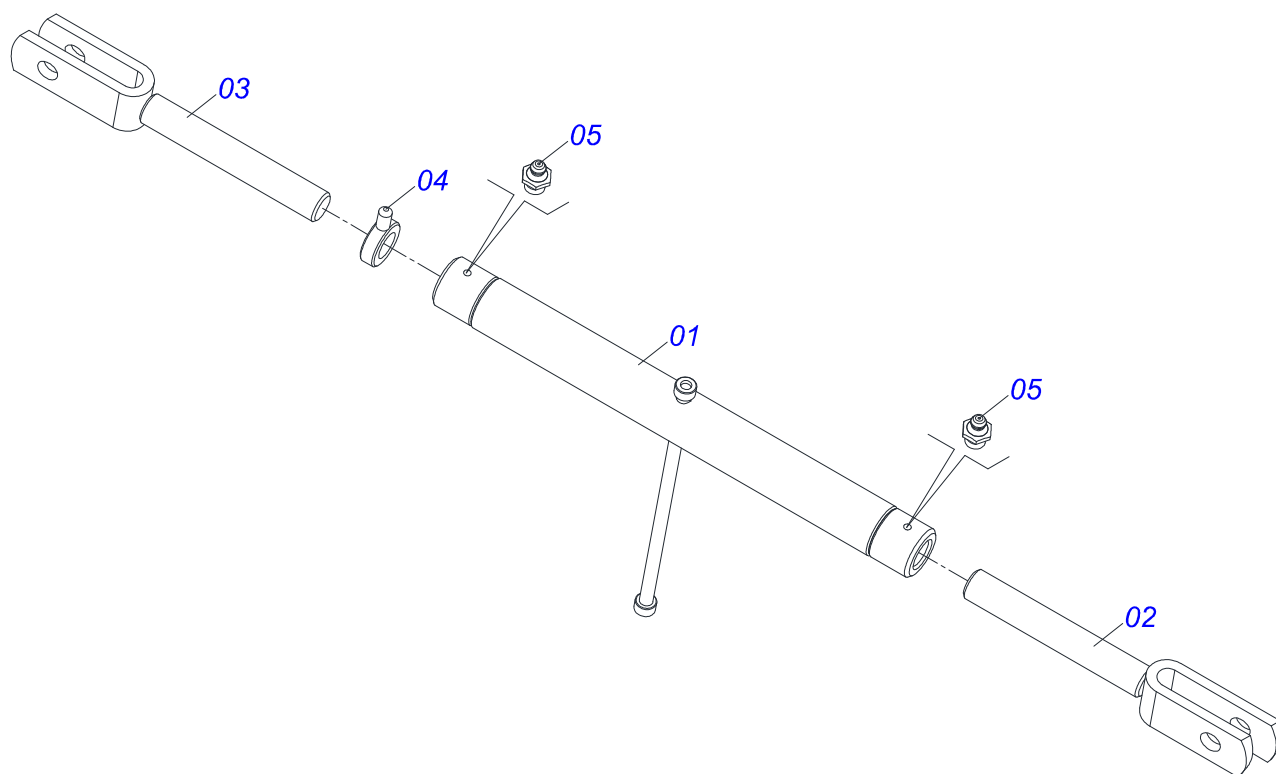 

Item	Code	Description	See page	QT
01	0501067353	508 PST3 TURNBUCKLE		01
02	0511062887	RIGHT TURNBUCKLE		01
03	0511062888	LH TURNBUCKLE		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

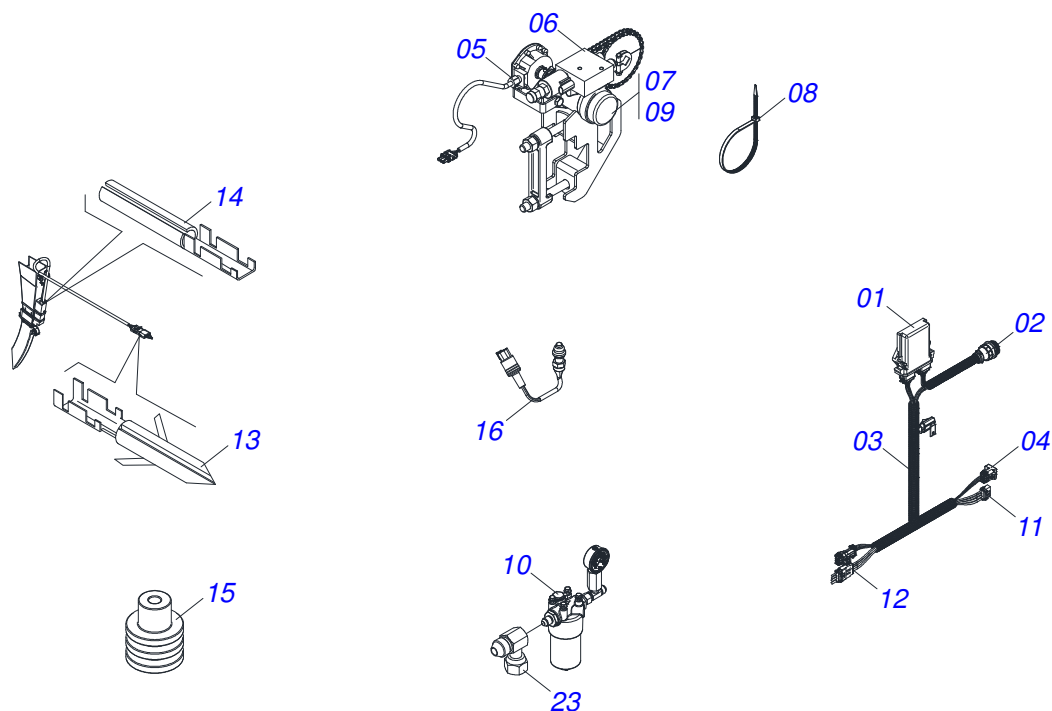 


Item	Code	Description	See page	QT
001	0503015065	MASTER CONTROL MODULE		01
002	0503015066	CABLE CONTROL MASTER MODULE		01
003	0503015479	TRACTOR CONNECTION CABLE ISO		01
004	0503015071	CONCTOR		01
005	0503015220	ENCODER ISOB 4,5M 464360171S1		02
006	0511055638	BLOCK FLOW LIMITER		01
007	0511056973	PARKER OMP 80 HYDRAULIC MOTOR WITH VALVE		01
008	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		**
009	0511056974	MOTOR		01
010	0511056972	FILTER HYDAC		01
011	0503016369	THREE FEMALE CONNECTOR		02
012	0503016370	THREE FEMALE CONNECTOR		02
013	0503015907	MALE TERMINAL		06
014	0503015908	FEMALE TERMINAL		06
015	0503015911	CABLE SEAL		12
016	0503017984	LIFT SENSOR		02

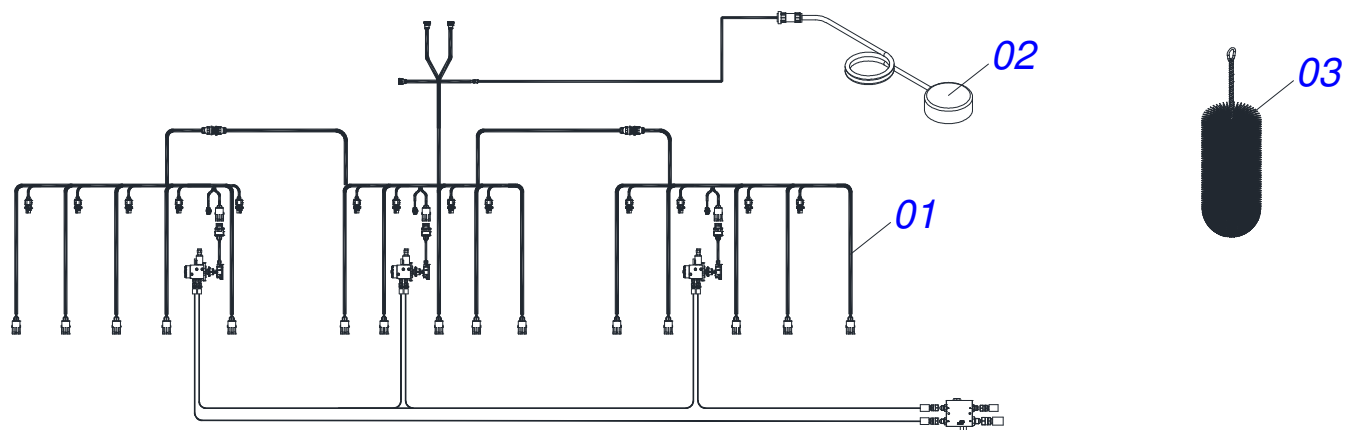 

Item	Code	Description	See page	QT
001	0503018750	SIMPLE CABLE MONITORING		01
002	0503017443	ANTENNA GPS PM 400		01
003	0503017031	CLEANING BRUSH		01



Item	Code	Description	See page	QT
001	0503033889	SET LABEL ADHESIVE		04
002	0503033854	ADHESIVE LABEL		04
003	0503033853	ADHESIVE LABEL		02
004	0503031565	ADHESIVE LABEL CARE		02
005	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
006	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
007	0503032930	ADHESIVE LABEL DANGER		04
008	0503031425	ADHESIVE LABEL ATTENTION		02
009	0503031087	ADHESIVE LABEL		01
010	0503031942	ADHESIVE LABEL		01
011	0503031669	ADHESIVE LABEL		01
012	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
013	0503034249	ADHESIVE LABEL TABLE PLANTS		02
014	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
015	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
016	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
017	0503033420	ADHESIVE LABEL 6 NUMBER FOR PLANTING		04
018	0503032979	ADHESIVE LABEL LETTERS A B C D		02
019	0503032949	ADHESIVE LABEL		01
020	0503031428	READ MANUAL DECAL		01
021	0503034500	ADHESIVE LABEL		01

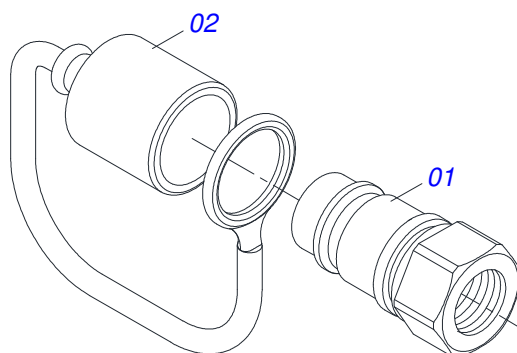 

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01



www.marchesan.com.br



Technical Publications | Elaboration and Revision
LUIZ CANDIDO