

PARTS CATALOGUE



ROW CROP PLANTERS

Code:

0501092880

Product:

COP FLEX 600 TITANIUM - FRAME 4395



Series:

S-0115

Revision:

00

Date Revision:

DEZEMBRO/2020

PRODUCTS



Code	Description
0111111279	COP FLEX 600 4395/9E500 ESPECIAL S-0115

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.



MARCHESAN

INDEX

 
0909095521	FRAME ASSY	1
0511050439	RIGHT WHEEL ASSY	2
0511050440	WHITH LEFT WHEEL ASSY	3
0501054284	STRETCHER CURRENT TRANSMISSION SIDE	4
0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED BOX	5
0511052766	CARRYING WHEEL HUB ASSY	6
0501053522	WHEEL CHAIN TENSIONER	7
0511053375	CURRENT DEVIATION ASSY WHEEL	8
0501058239	CHAIN TENSIONER BEARING	9
0511054292	MOTOR SHAFT ASSEMBLY	10
0511047069	SIDE TRANSMISSION DRIVING	11
0511047070	LH SIDE TRANSMISSION DRIVING	12
0511051434	TRANSMISSION DRIVING ASSY	13
0511054291	HEX AXLE ASSEMBLY	14
0501053610	BEARING WITH 17Z GEAR INNER AXLE	15
0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	16
0511054293	SET HIDRAULICO	17
0511053358	VALVE FIXING ASSEMBLY	18
0511053382	FIXER HYDRAULIC HOSE ASSEMBLY	19
0511053384	HYDRAULIC CYLINDER ASSEMBLY	20
0511058411	HYDRAULIC CYLINDER	21
0511054290	HOSE KIT	22
0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	23
0511052332	ASSY SUPPORT RIGHT FIXER CHANGE	24
0511048939	ASSY RIGHT EXCHANGE	25
0501058212	SEMI MOUNTED RIGHT CHANGE	26
0501048790	AXLE WITH LINK ASSY	27
0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	28
0501056443	BEARING ASSY GEAR BOX	29
0501056444	BEARING WITH BALL BEARING	30
0501056271	BEARING CLOSED	31
0501054655	CHAIN TENSIONER ASSY	32
0511052333	ASSY SUPPORT LEFT FIXER CHANGE	33
0511048940	LEFT ASSY EXCHANGE	34
0501058213	LH GEAR BOX	35
0511053364	SET TRANSMISSION LEFT ASSY	36
0511053357	SET TRANSMISSION RIGHT ASSY	37
0511053366	CHAIN TENSIONER EXCHANGE	38
0511050385	BEARING DOUBLE GEAR	39
0501058265	STRETCHER LOWER CURRENT 21Z SEED	40
0511056387	INTERMEDIATE BEARING SEED WITH GEAR 21Z	41
0511050127	CHAIN TENSIONER SUPPORT	42
0501053126	FERTILIZER CHAIN TENSIONER ASSY	43
0511054296	ASSEMBLY FERTILIZER BOX RIGHT / LEFT	44
0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	45
0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	46
0501053788	Q3/4" FASTENER AXLE ASSY	47
0511054297	PLATFORM ASSEMBLY	48
0511053356	ASSY LADDER	49
0511054298	HANDRAIL ASSY	50
0511059796	SET LABEL ADHESIVE	51
0511054295	MARKER HIDRAULICO	52
0511058449	HYDRAULIC CYLINDER	53
0501054649	SEQUENTIAL VALVE ASSY	54
0511054971	RESTING ASSEMBLY	55



MARCHESAN

INDEX

0511056597	ASSY PORT MANUAL INSTRUCCION	56
0511050906	DRAWBAR TURNBUCKLE	57
0501050633	MARKER DISC ASSY LINE	58
0511053904	DISC LINE MARKER	59
0511056736	HOSE SUPPORT	60
0511054601	FULL ARTICULATED TRACTOR HITCH	61
0511053179	TRACTOR HITCH AXLE	62
0511053393	DRAWBAR	63
0511053342	SQUARE AXLE ASSEMBLY (730)	64
0909095522	SEED LINE/FERTILIZER ASSEMBLY	65
0521051619	FRONT LINE SHORT MECHANICAL SEED	66
0521051620	FRONT LINE MECHANICAL SEED LINE	67
0511052393	BEARING FOLLOWER ROW ASSY	68
0511050609	BEARING WITH 17Z GEAR ASSY	69
0511050617	FRONT SEED ROW BEARING	70
0511055260	SEED ROW CHAIN TENSIONER	71
0511054635	BEARING AXLE BODY	72
0511057159	TRANSMISSION BOX SEED LINE	73
0511057625	ROW SEED BEARING	74
0511057156	BEARING LINE SEMI MOUNTED	75
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	76
0511057136	REAR RIGHT SEED LINE	77
0511057137	REAR LEFT LINE SEED	78
0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8	79
0511053284	UNIVERSAL JOINT WITH HEX AXLE	80
0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	81
0511056586	15 X 15 SEED DDD LEFT	82
0511052301	SUPPORT DDD 15 RIGHT	83
0511052302	LH SUPPORT DDD GUIDE	84
0511053173	CUBE LOW RIGHT WITH DISC 15	85
0511053172	LEFT LOW CUBE WITH DISC 15	86
0511056608	TITANIUM SEED SYSTEM	87
0511053023	LONG FERTILIZER LINE	88
0511053024	FERTILIZER SHORT LINE	89
0511053223	FERTILIZER ROW SUPPORT WITH SCREW	90
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	91
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	92
0511051819	DC 20 SEMI MOUNTED	93
0501054887	20 BLADE DISC WITH FLAT PLAN DISC	94
0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL	95
0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	96
0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL	97
0501056435	LEFT CONTROL ARM DEPTH WITHOUT WHEEL	98
0501052538	DEPTH BAND WITH ARMS	99
0511053067	"V" WHEEL ASSY COBRIDORA FERTILIZER	100
0511054333	COMPACT WHEEL RIGHT WITH BEARING	101
0511054334	COMPACT WHEEL LEFT WITH BEARING	102
0501052908	COMPACTOR WHEEL WITH BEARING	103
0503062066	DISC SET WITH CORN RING	104
0503062067	DISC SET / RING SOY 90F TITANIUM	105
0511052024	FAST CLOSING SET	106
0501110231	SCARIFIER HEAD WITH SPIKE 0061	107

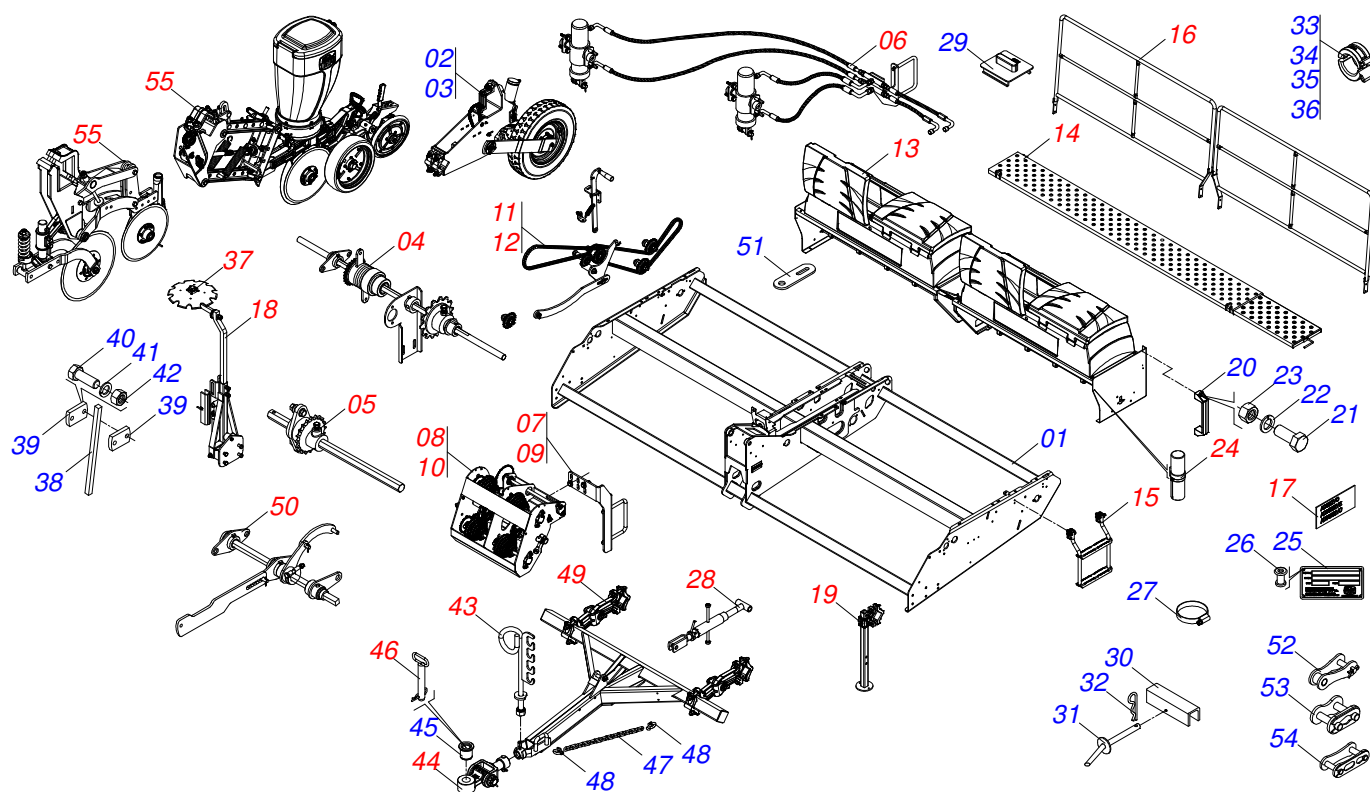

Item	Code	Description	See page	QT
01	0521063941	FREME		01
02	0511050439	RIGHT WHEEL ASSY	2	02
03	0511050440	WHITH LEFT WHEEL ASSY	3	02
04	0511054292	MOTOR SHAFT ASSEMBLY	10	01
05	0511054291	HEX AXLE ASSEMBLY	14	01
06	0511054293	SET HIDRAULICO	17	01
07	0511052332	ASSY SUPPORT RIGHT FIXER CHANGE	24	01
08	0511048939	ASSY RIGHT EXCHANGE	25	01
09	0511052333	ASSY SUPPORT LEFT FIXER CHANGE	33	01
10	0511048940	LEFT ASSY EXCHANGE	34	01
11	0511053364	SET TRANSMISSION LEFT ASSY	36	01
12	0511053357	SET TRANSMISSION RIGHT ASSY	37	01
13	0511054296	ASSEMBLY FERTILIZER BOX RIGHT / LEFT	44	01
14	0511054297	PLATFORM ASSEMBLY	48	01
15	0511053356	ASSY LADDER	49	01
16	0511054298	HANDRAIL ASSY	50	01
17	0511059796	SET LABEL ADHESIVE	51	01
18	0511054295	MARKER HIDRAULICO	52	01
19	0511054971	RESTING ASSEMBLY	55	02
20	0503011957	NYLON LUG		02
21	0503010371	5/16" X 1" BOLT		04
22	0503010179	5/16" ZN SPRING WASHER		04
23	0503010337	5/16" NUT		04
24	0511056597	ASSY PORT MANUAL INSTRUCCION	56	01
25	0503034003	SERIAL NUMBER TAG 61 X 118		01
26	0503010001	3.2 X 5.5 RIVET		04
27	0503010246	CLAMP		01
28	0511050906	DRAWBAR TURNBUCKLE	57	01
29	0503032624	SILO FERTILIZER GUTTER		07
30	0521013022	TRANSPORT LOCK		04
31	0501068994	0.3" X 3.1" LOCK PIN		04


FRAME ASSY

0909095521

Item	Code	Description	See page	QT
32	0503030168	HAIR PIN		04
33	0501047895	ROD STOP		04
34	0501047885	ROD STOP		04
35	0501047886	ROD STOP		04
36	0501047887	ROD STOP		04
37	0501050633	MARKER DISC ASSY LINE	58	02
38	0521013164	EXTENSOR		02
39	0501011310	FIXER LOCK		08
40	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		08
41	0503010019	1/2" SPRING WASHER		08
42	0503010060	1/2" NUT		08
43	0511056736	HOSE SUPPORT	60	01
44	0511054601	FULL ARTICULATED TRACTOR HITCH	61	01
45	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
46	0511053179	TRACTOR HITCH AXLE	62	01
47	0503014120	CHAIN		01
48	0503014321	CABLE STEEL SHACKLE		02
49	0511053393	DRAWBAR	63	01
50	0511053342	SQUARE AXLE ASSEMBLY (730)	64	01
51	0571018663	SUPPORT GUTTER		01
52	0503011750	AMENDMENT WITH LOCK		06
53	0503011751	REDUCTION		06
54	0503010780	N-2050 AMENDMENT		06
55	0909095522	SEED LINE/FERTILIZER ASSEMBLY	65	09

RIGHT WHEEL ASSY

 0511050439

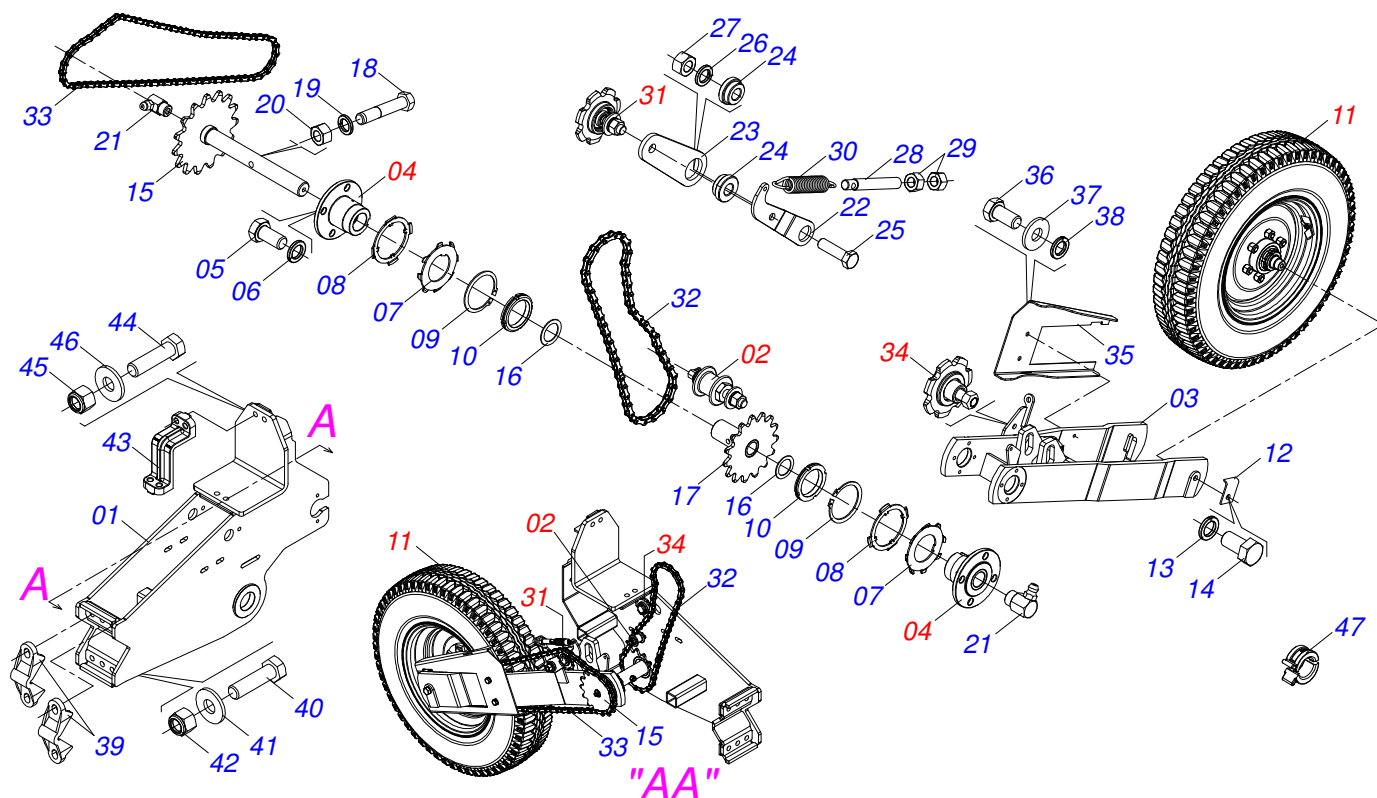


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0501054284	STRETCHER CURRENT TRANSMISSION SIDE	4	01
03	0511064744	WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 5 BOX		01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011167	M16 X 2 X 30 BOLT		02
15	0511061808	15Z GEAR WITH AXLE,		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0531016916	SLEEVE BEARING SUPPORT		02
25	0503010899	5/8" X 2-1/4" BOLT		01
26	0503010027	5/8" SPRING WASHER		01
27	0503010013	5/8" NUT		01
28	0501013491	5/8" TENSIONER SPRING		01
29	0503010013	5/8" NUT		02
30	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
31	0501053522	WHEEL CHAIN TENSIONER	7	01

RIGHT WHEEL ASSY

0511050439

Item	Code	Description	See page	QT
32	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
33	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
34	0511053375	CURRENT DEVIATION ASSY WHEEL	8	01
35	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
36	0503010834	1/2 X 1 BOLT		02
37	0511017302	FLAT WASHER		02
38	0503010019	1/2" SPRING WASHER		02
39	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
40	0511010736	5/8" X 5-1/4" BOLT		04
41	0501013753	FLAT WASHER		04
42	0503010811	5/8" UNF SELF ADJUSTING NUT		04
43	0502012720	WHEEL SUPPORT FIXER		01
44	0503017857	BOLT 5/8 UNF 4		04
45	0503010811	5/8" UNF SELF ADJUSTING NUT		04
46	0501012140	FLAT WASHER		04
47	0501047888	ROD STOP		01

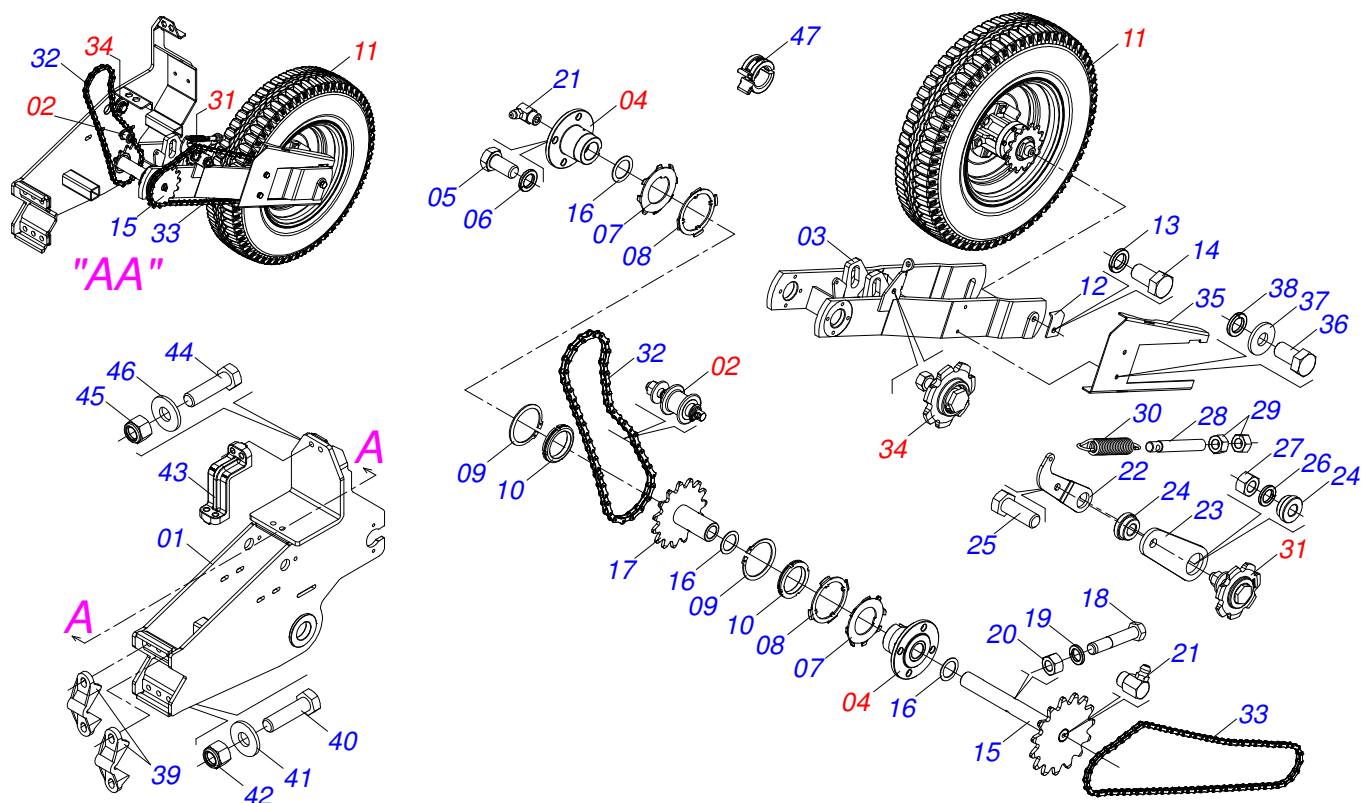 


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0501054284	STRETCHER CURRENT TRANSMISSION SIDE	4	01
03	0511065842	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 5 BOX		01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011167	M16 X 2 X 30 BOLT		02
15	0511061808	15Z GEAR WITH AXLE,		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0531018654	CHAIN TIGHTENER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0531016916	SLEEVE BEARING SUPPORT		02
25	0503010899	5/8" X 2-1/4" BOLT		01
26	0503010027	5/8" SPRING WASHER		01
27	0503010013	5/8" NUT		01
28	0501013491	5/8" TENSIONER SPRING		01
29	0503010013	5/8" NUT		02
30	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
31	0501053522	WHEEL CHAIN TENSIONER	7	01


WHITH LEFT WHEEL ASSY

0511050440


Item	Code	Description	See page	QT
32	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
33	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
34	0511053375	CURRENT DEVIATION ASSY WHEEL	8	01
35	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
36	0503010834	1/2 X 1 BOLT		02
37	0511017302	FLAT WASHER		02
38	0503010019	1/2" SPRING WASHER		02
39	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
40	0511010736	5/8" X 5-1/4" BOLT		04
41	0501013753	FLAT WASHER		04
42	0503010811	5/8" UNF SELF ADJUSTING NUT		04
43	0502012720	WHEEL SUPPORT FIXER		01
44	0503017857	BOLT 5/8 UNF 4		04
45	0503010811	5/8" UNF SELF ADJUSTING NUT		04
46	0501012140	FLAT WASHER		04
47	0501047888	ROD STOP		01

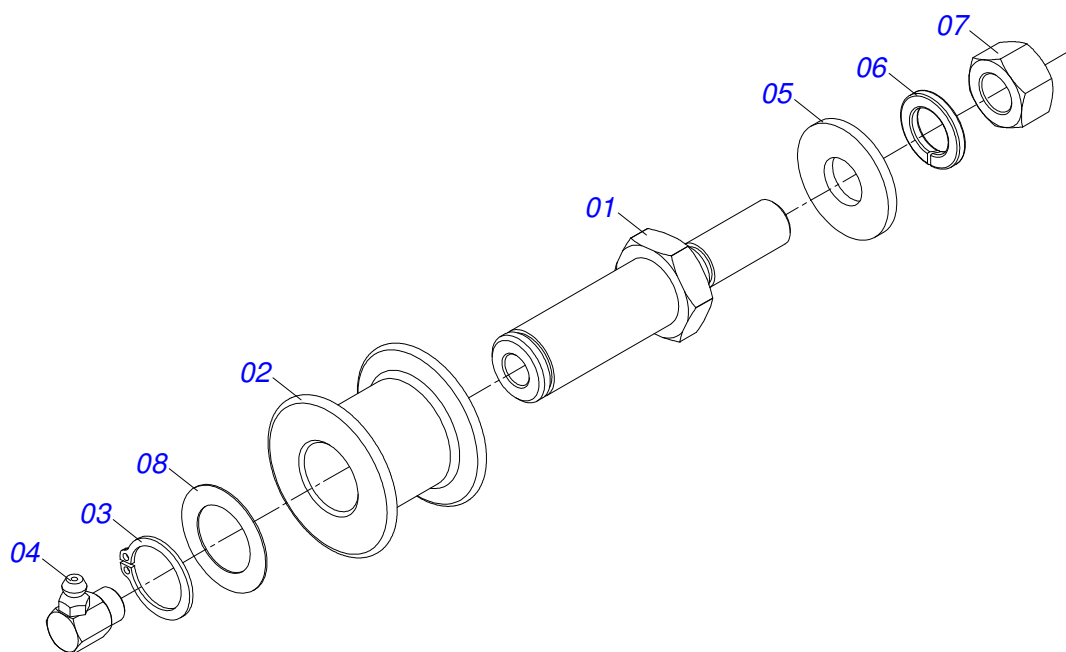 


Item	Code	Description	See page	QT
01	0531017202	AXLE CHAIN TIGHTENER		01
02	0503030402	PULLEY		01
03	0503010302	501019 SEAL RING		01
04	0503010004	1890 GREASE FITTING		01
05	0511017302	FLAT WASHER		01
06	0503010019	1/2" SPRING WASHER		01
07	0503010060	1/2" NUT		01
08	0511015098	FLAT WASHER		01

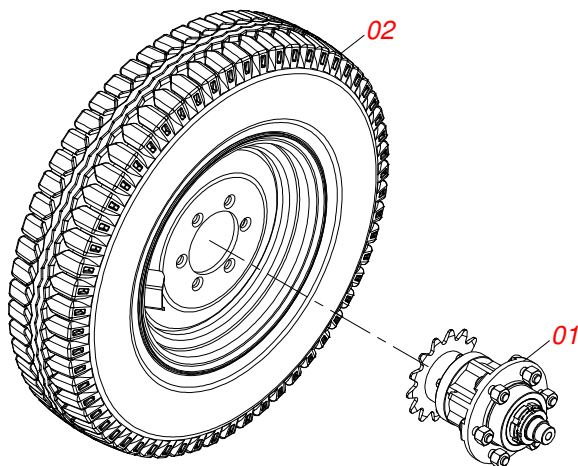 


Item	Code	Description	See page	QT
01	0511052766	CARRYING WHEEL HUB ASSY	6	01
02	0503062158	EEE WHEEL WITH TIRE 700 X 16-10L ASSY		01

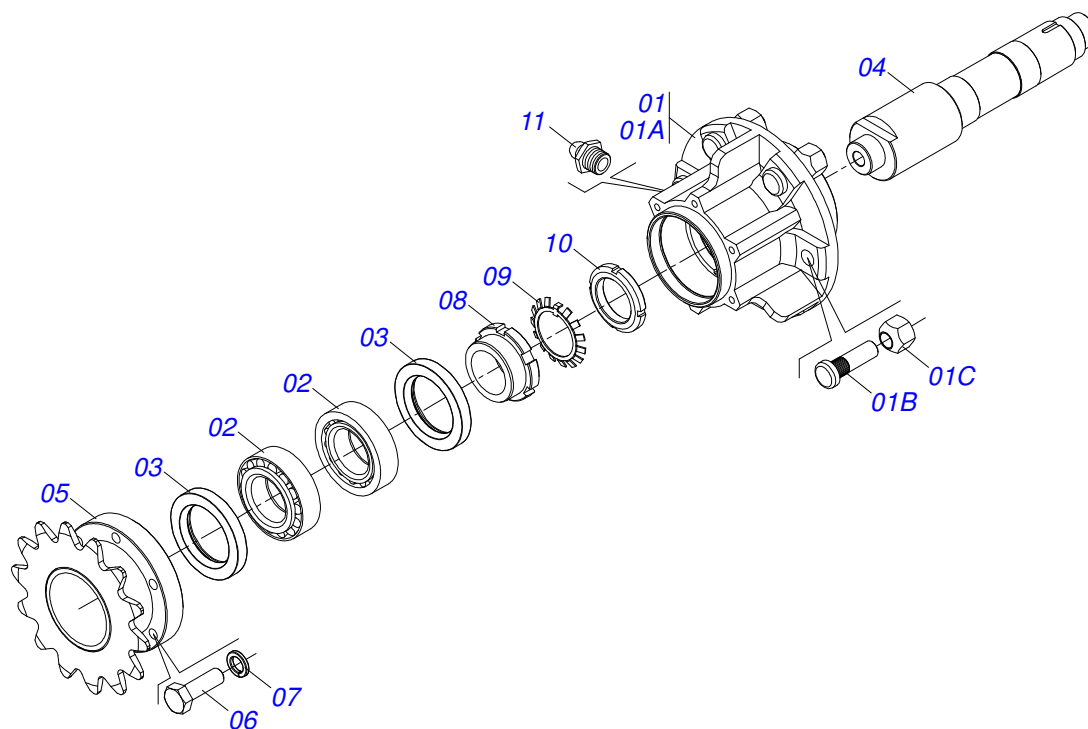 


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503010328	25590/25523 ROLLER BEARING		02
03	0503010804	00547-B SEAL		02
04	0521018363	00547-B SEAL		01
05	0511062015	14Z GEAR WITH FLANGE		01
06	0503010421	5/16" X 1-1/2" BOLT		06
07	0503011444	SPRING WASHER		06
08	0511015949	LOCK NUT		01
09	0503010329	LOCK WASHER		01
10	0503010330	KM 9 LOCKNUT		01
11	0503010002	1800 GREASE FITTING		01

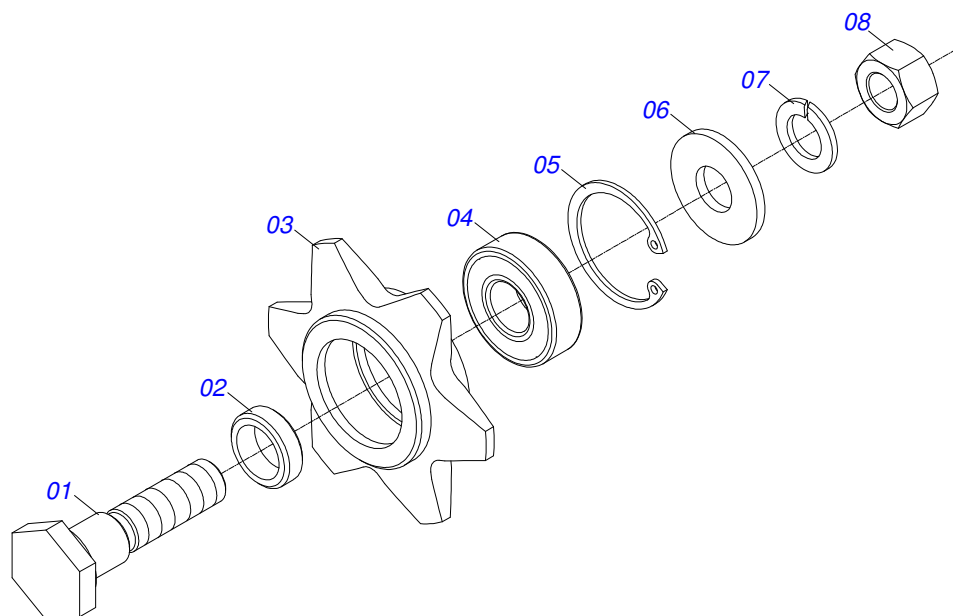 

Item	Code	Description	See page	QT
01	0531012640	AXLE CHAIN TIGHTENER		01
02	0531012678	4.5" X 0.9" X 0.2" SLEEVE		01
03	0502012853	GEAR		01
04	0503012882	BEARING		01
05	0503011945	503050 CLAMPING RING (FOR AXLE)		01
06	0511017302	FLAT WASHER		01
07	0503010019	1/2" SPRING WASHER		01
08	0503010060	1/2" NUT		01

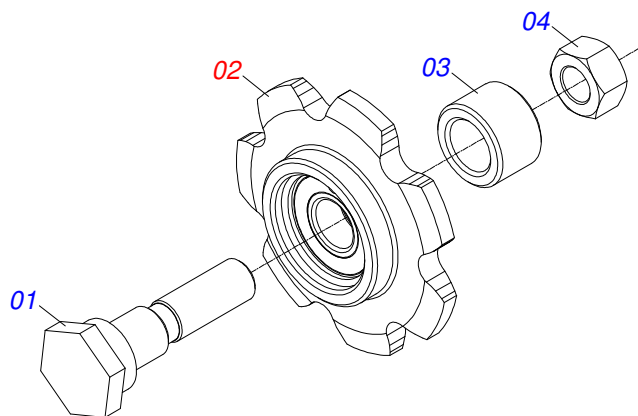 


Item	Code	Description	See page	QT
01	0551018252	CHAIN TIGHTENER AXLE		01
02	0501058239	CHAIN TENSIONER BEARING	9	01
03	0521010479	SLEEVE ARTICULATION		01
04	0503011336	1/2" HEX SELF ADJUSTING NUT		01

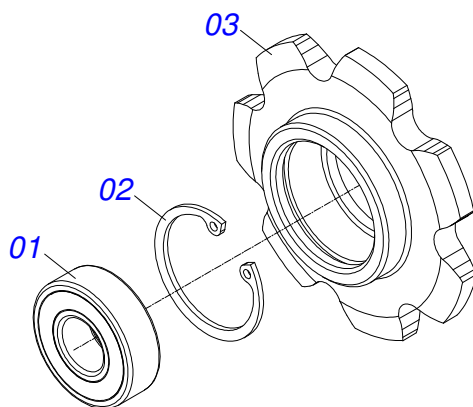 


Item	Code	Description	See page	QT
01	0503012882	BEARING		01
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012853	GEAR		01

MOTOR SHAFT ASSEMBLY

 
0511054292

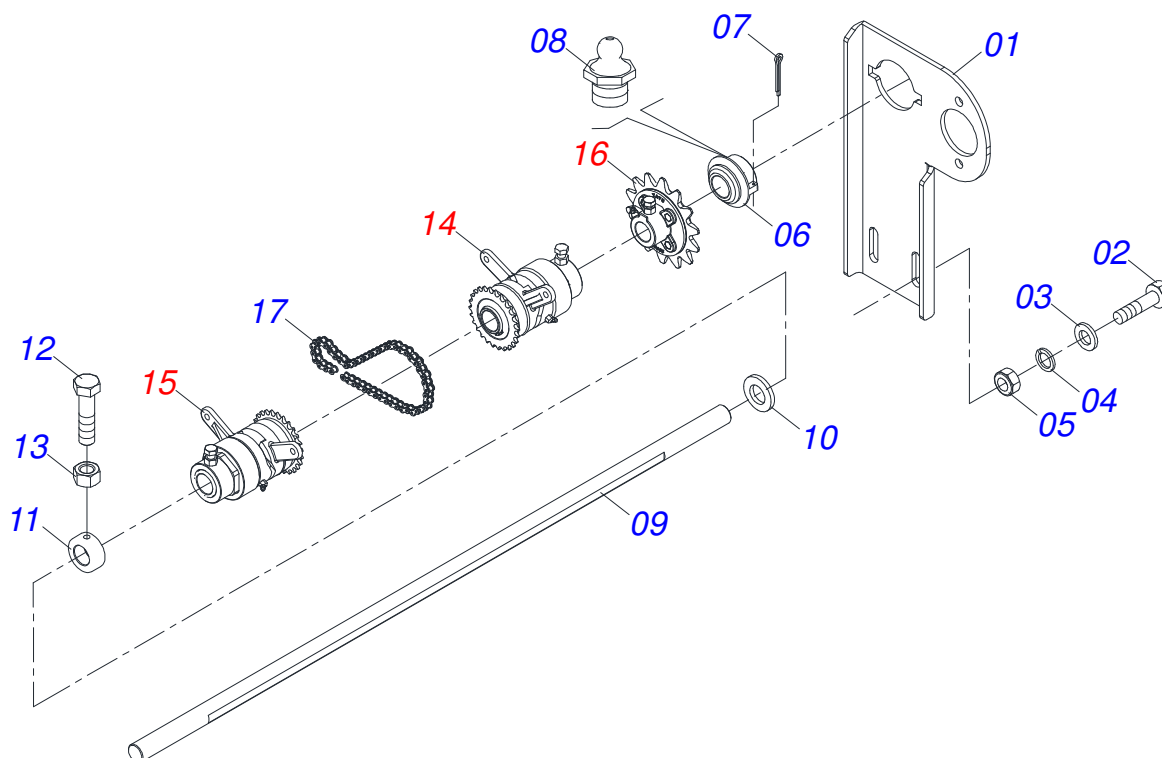


Item	Code	Description	See page	QT
001	0561017269	MOTOR AXLE BEARING SUPPORT		04
002	0503011082	C1/2" X 1.3/4" SCREW		08
003	0511017302	FLAT WASHER		16
004	0503010019	1/2" SPRING WASHER		08
005	0503010060	1/2" NUT		08
006	0501110639	BEARING		08
007	0503010300	5/32" X 1" COTTERPIN		08
008	0503011099	GREASE FITTING		08
009	0571013539	MOTOR SHAFT		02
010	0501018466	FLAT WASHER		04
011	0511015961	LOCK BUSHING		04
012	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
013	0503010060	1/2" NUT		04
014	0511047069	SIDE TRANSMISSION DRIVING	11	01
015	0511047070	LH SIDE TRANSMISSION DRIVING	12	01
016	0511051434	TRANSMISSION DRIVING ASSY	13	04
017	0503012958	2050 CHAIN X 42 LINK + REDUCTION		04

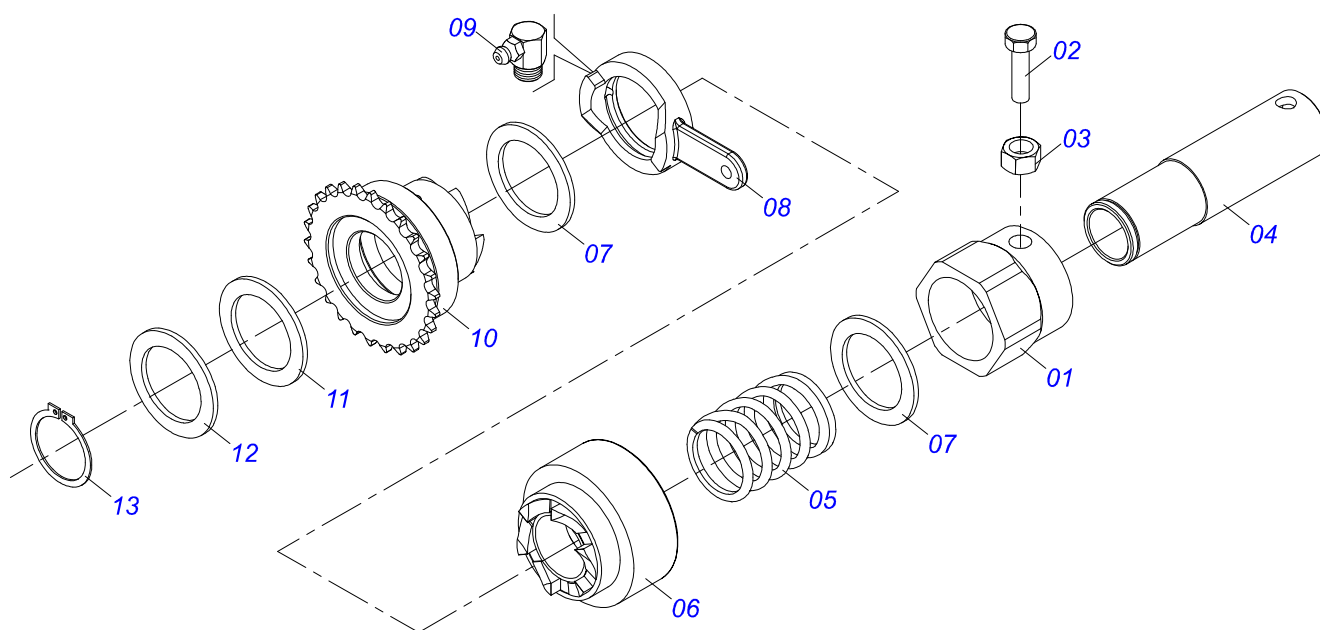 

Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

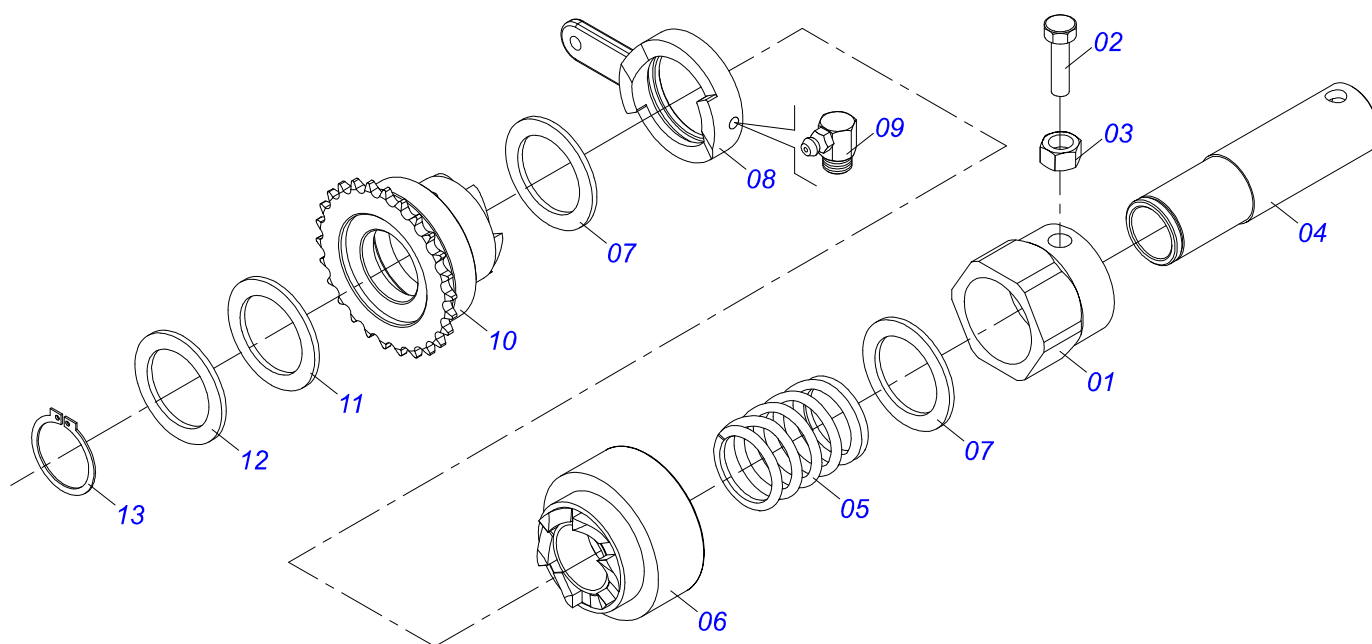 


Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

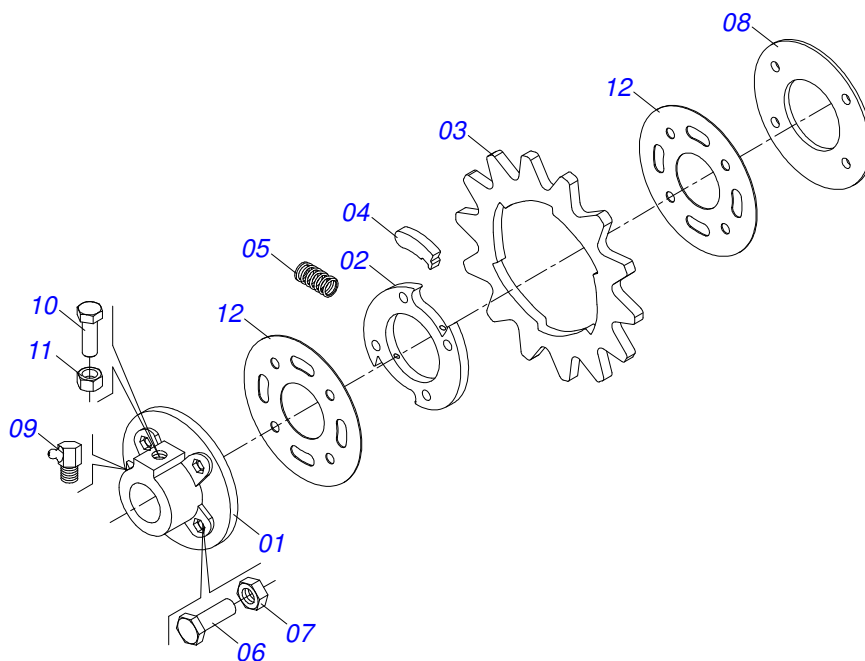 


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

HEX AXLE ASSEMBLY

 
0511054291

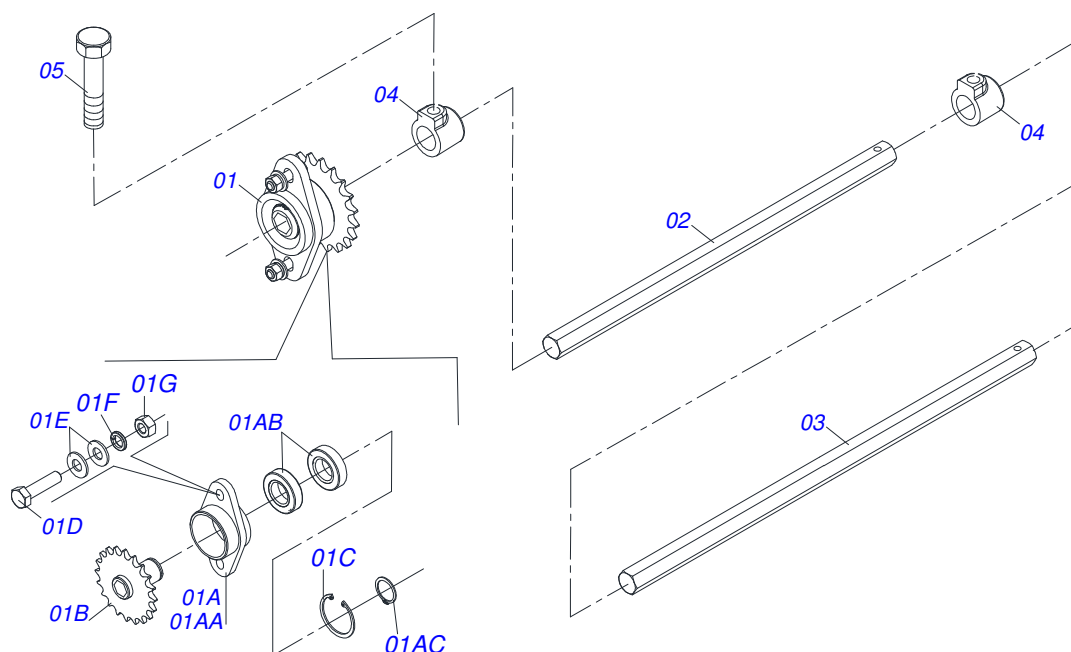


Item	Code	Description	See page	QT
001	0501053610	BEARING WITH 17Z GEAR INNER AXLE	15	02
001A	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	16	01
001AA	0502011987	DOUBLE HOUSING BEARING		01
001AB	0503011410	ROLLER BEARING		02
001AC	0503011105	SEAL RING		01
001B	0511062626	MIDDLE BEARING AXLE		01
001C	0503010406	501025 CLAMPING RING (FOR AXLE)		01
001D	0503010371	5/16" X 1" BOLT		02
001E	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
001F	0503010179	5/16" ZN SPRING WASHER		02
001G	0503010337	5/16" NUT		02
002	0571013540	5/8" X 85" HEX AXLE		01
003	0571013538	5/8" X 2075 AXLE BODY		01
004	0511063123	BUSHING WITH NUT		04
005	0503010834	1/2 X 1 BOLT		04

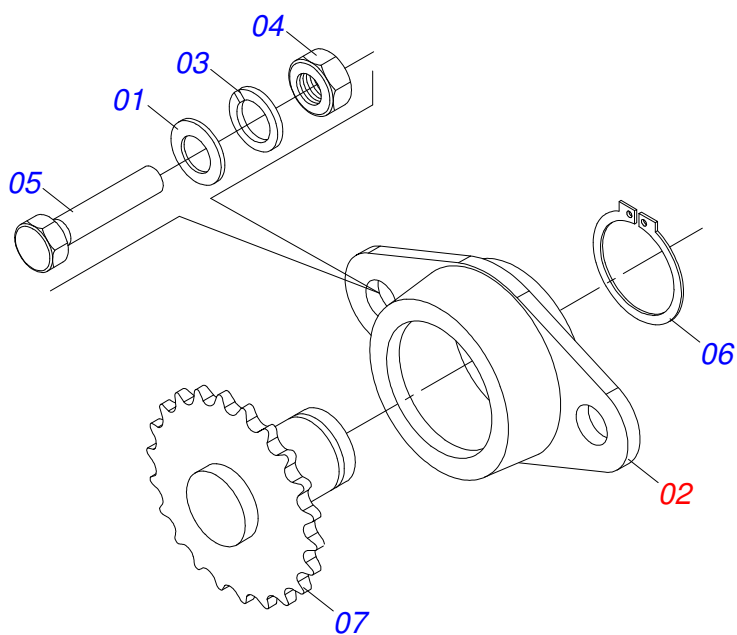 

Item	Code	Description	See page
01	0501010694	8.5 X 18 X 1.5 FLAT WASHER	02
02	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	16 01
03	0503010179	5/16" ZN SPRING WASHER	02
04	0503010337	5/16" NUT	02
05	0503010371	5/16" X 1" BOLT	02
06	0503010406	501025 CLAMPING RING (FOR AXLE)	01
07	0511062626	MIDDLE BEARING AXLE	01

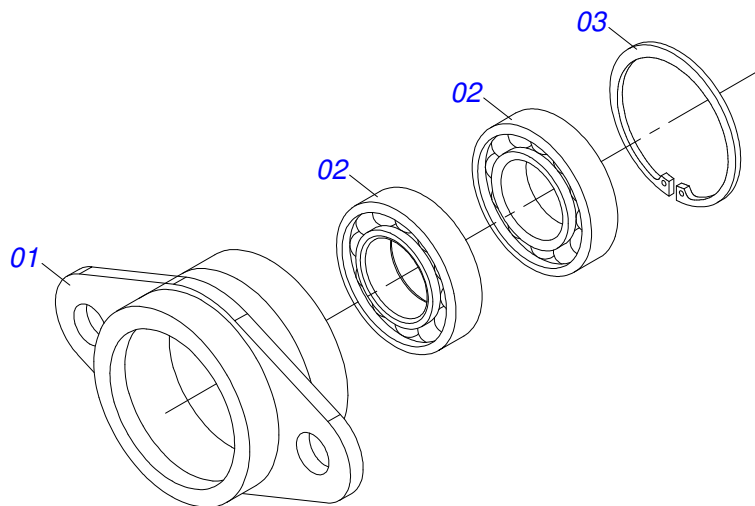 


Item	Code	Description	See page	QT
01	0502011987	DOUBLE HOUSING BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01

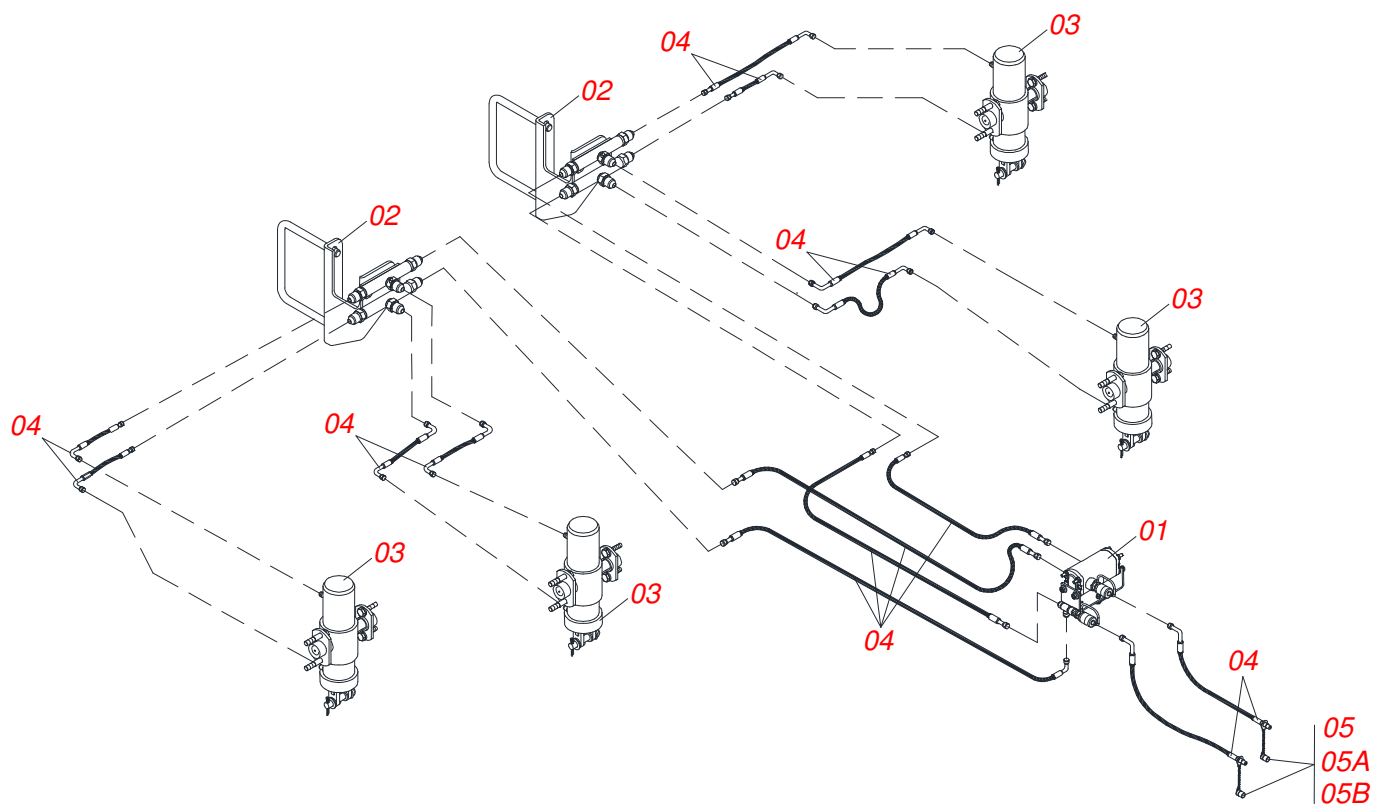 


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	18	01
02	0511053382	FIXER HYDRAULIC HOSE ASSEMBLY	19	01
03	0511053384	HYDRAULIC CYLINDER ASSEMBLY	20	01
04	0511054290	HOSE KIT	22	01
05	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	23	01
05A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
05B	0503011882	MALE QUICK COUPLER CAP		01

VALVE FIXING ASSEMBLY

 
0511053358

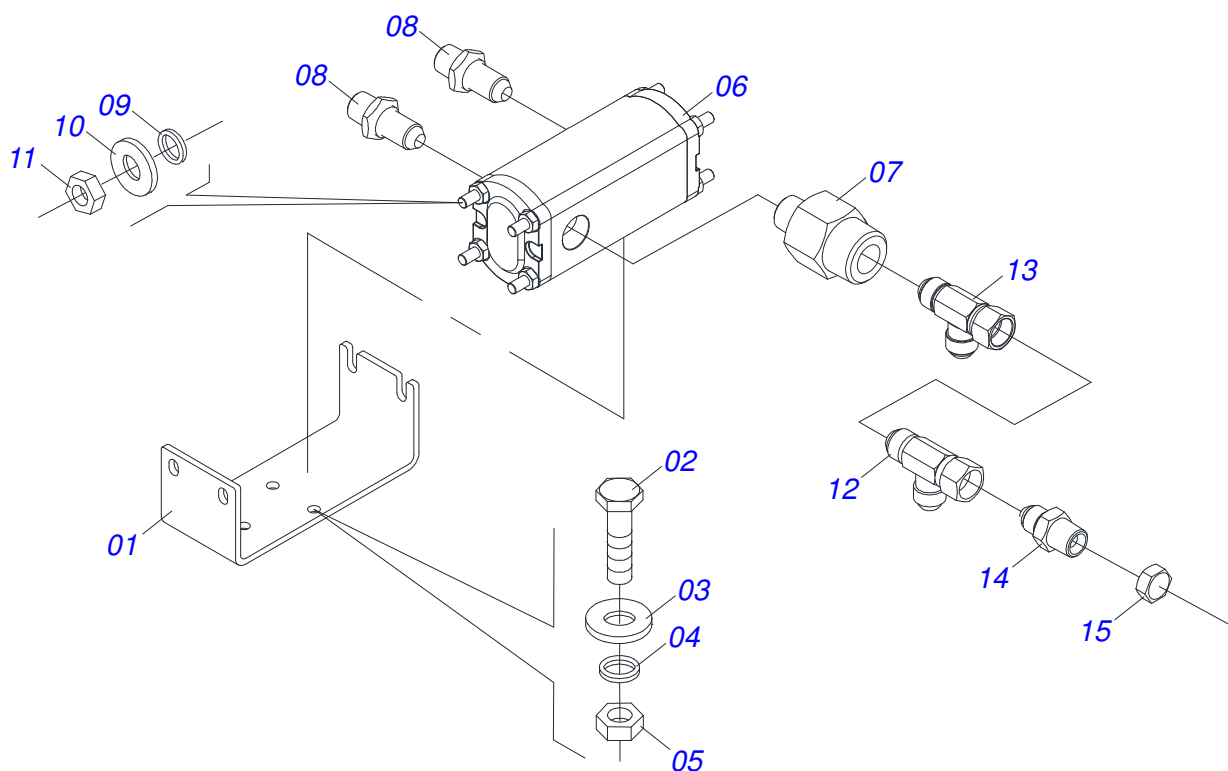


Item	Code	Description	See page	QT
001	0571010596	SUPPORT VALVE 50/50		01
002	0503010371	5/16" X 1" BOLT		02
003	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
004	0503010179	5/16" ZN SPRING WASHER		02
005	0503010337	5/16" NUT		02
006	0503013791	DOUBLE MOTOR		01
007	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE		01
008	0551012463	1/2" BSPT X 3/4" UNF X 51 NIPPLE		02
009	0503015075	M10 SPRING WASHER		04
010	0501010984	FLAT WASHER		04
011	0503011051	M10 X 0.6" NUT		04
012	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
013	0503012341	T 7/8" ADAPOR GIRAT NUT		02
014	0541012166	NIPPLE 3/4" UNF X 7/8"		01
015	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01

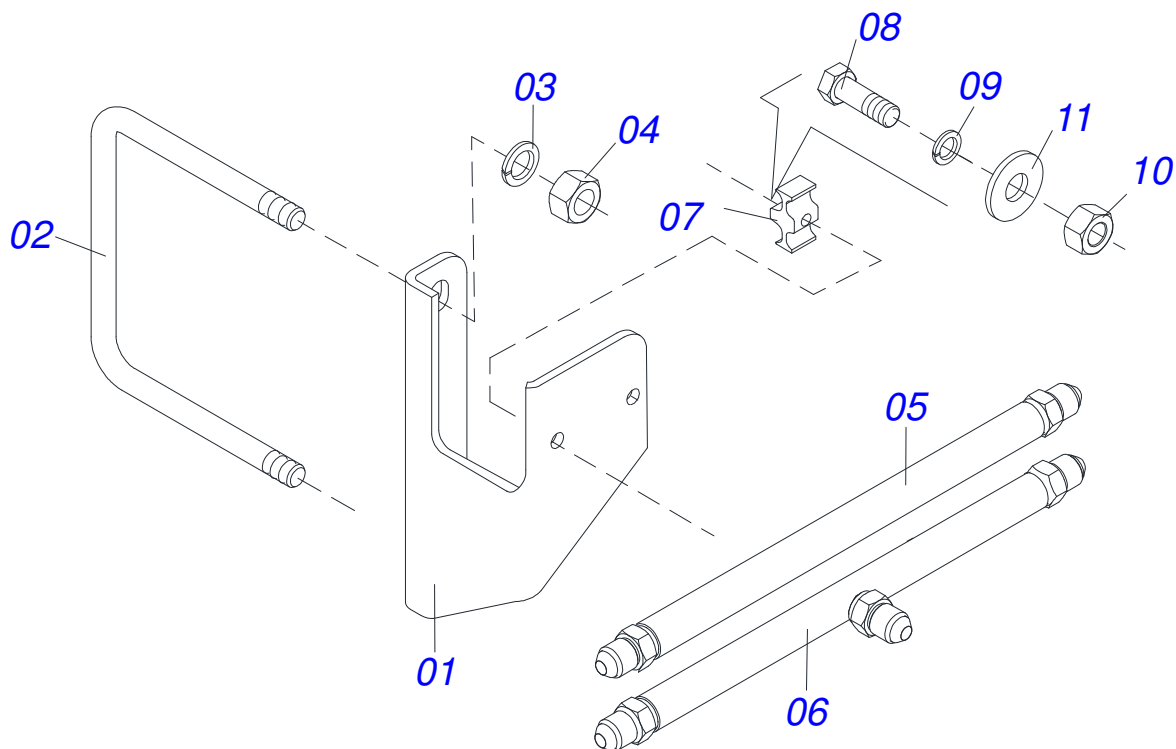 


Item	Code	Description	See page	QT
001	0561017277	OIL CONDUCTOR FIXER PLATE		04
002	0521010718	5/8" U BOLT		04
003	0503010027	5/8" SPRING WASHER		08
004	0503010013	5/8" NUT		08
005	0521065260	MH 11/450 OIL CONDUCTOR		04
006	0521065265	OIL CONDUCTOR		04
007	0502012702	BODY SUPPORT CLAMP		10
008	0503011268	3/8" X 2-1/2" BOLT		10
009	0503010025	3/8" SPRING WASHER		10
010	0503010026	3/8" NUT		10
011	0501012140	FLAT WASHER		08

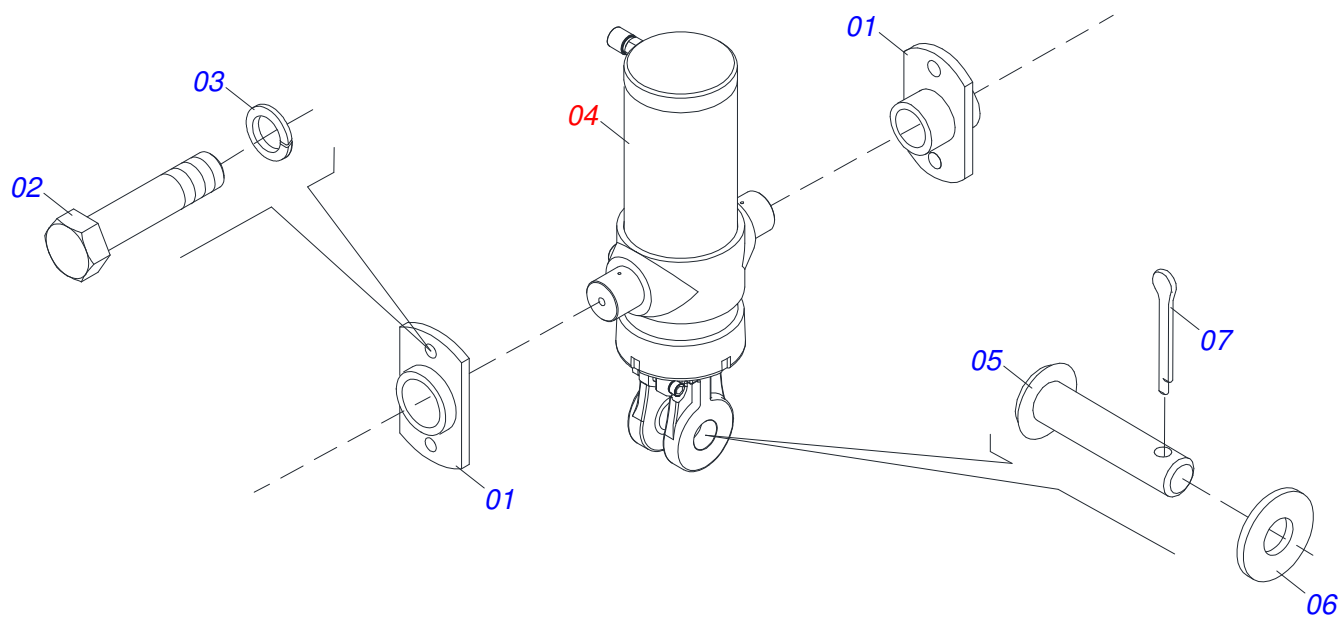 


Item	Code	Description	See page	QT
001	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		08
002	0503010834	1/2 X 1 BOLT		16
003	0503010019	1/2" SPRING WASHER		16
004	0511058411	HYDRAULIC CYLINDER	21	04
005	0521010546	1.2" X 5.7" COUPLING SHAFT		04
006	0501017779	32 X 60 X 4.75 FLAT WASHER		08
007	0503010523	1/4" X 2" COTTERPIN		04

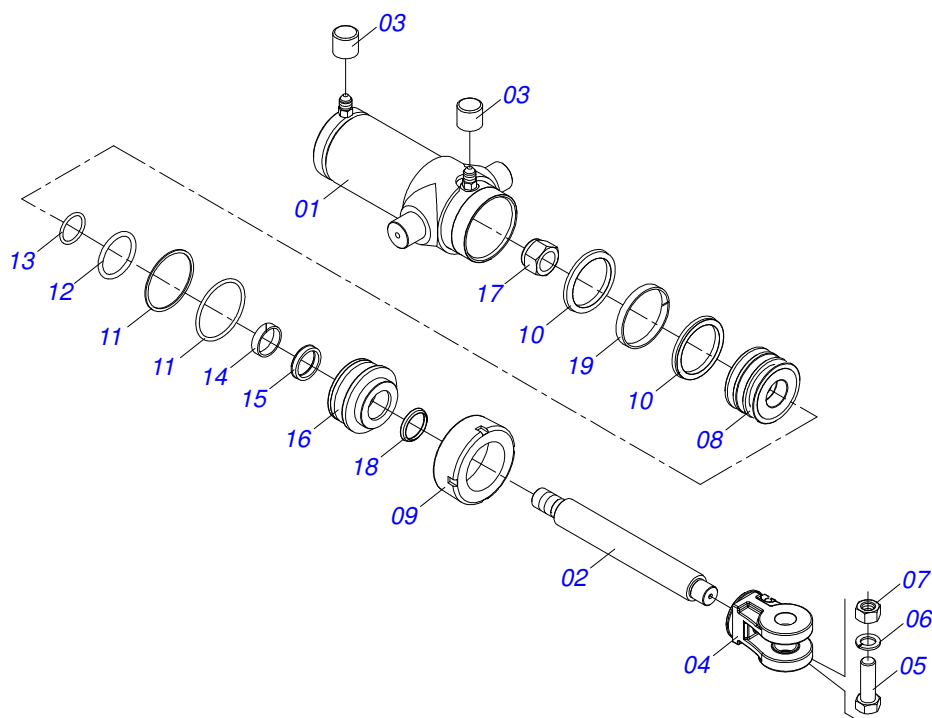 


Item	Code	Description	See page	QT
01	0511066774	2.5" X 28" CYLINDER CASE		01
02	0541017674	TURNBUCLE BODY		01
03	0503030385	CYLINDER PLUG N-002		02
04	0511064408	FORK COP		01
05	0503011094	3/8" X 2" BOLT		01
06	0503010025	3/8" SPRING WASHER		01
07	0503010026	3/8" NUT		01
08	0581010302	RING OF SUPPORT		01
09	0502012822	101.60 END CAP		01
10	0503011061	8-342 BACK-UP RING		02
11	0503010338	2-342 N 3006-9B O'RING		02
12	0503017936	RING		01
13	0503017938	RING GUIDE		01
14	0503017937	GASKET		01
15	0503010761	D-1750 SCRAPER RING		01
16	0581010837	PISTON		01
17	0503010817	1.1/4" SELF LOCKING NUT		01
18	0503015633	SELEMASTER SEALING		01
19	0503018029	2-217 O'RING		01

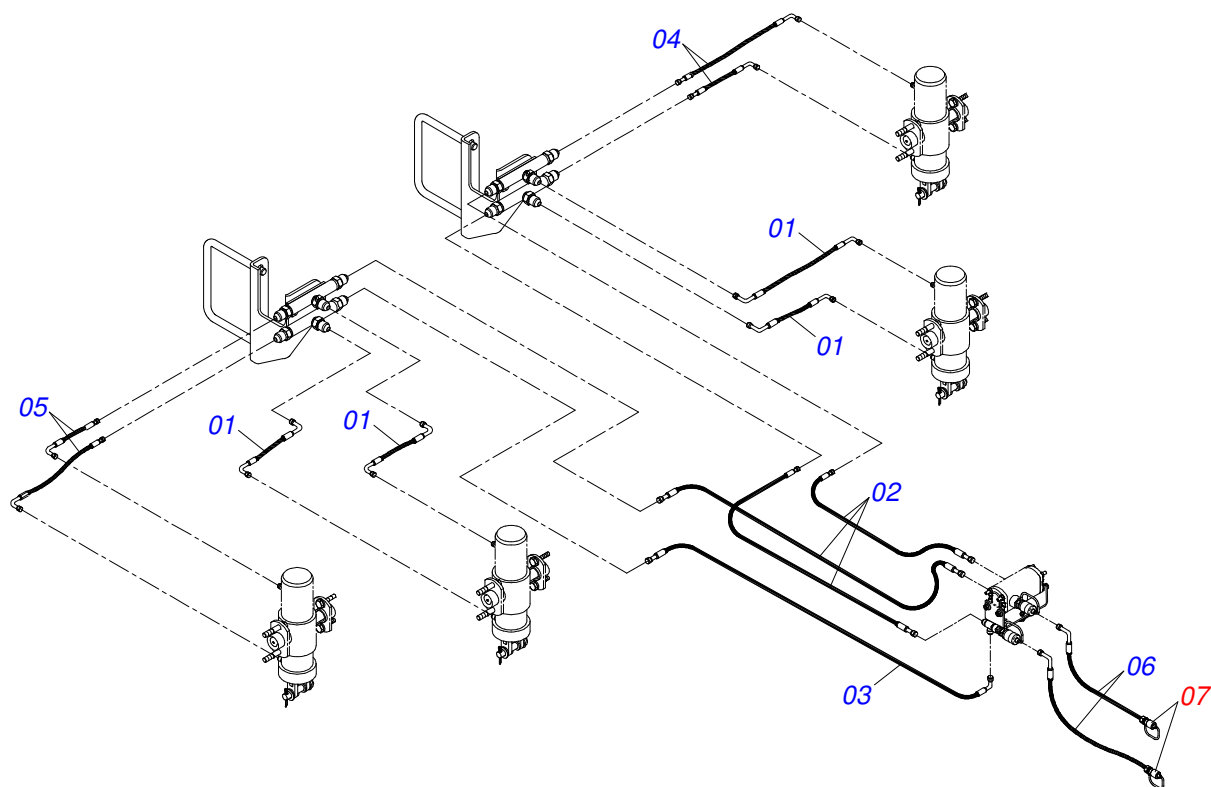 


Item	Code	Description	See page	QT
01	0501080760	3/8" X 500 TC-TC HOSE		04
02	0501080321	3/8" X 47" TR-TR HOSE ASSY		03
03	0501080348	TR-TC HOSE ASSY		01
04	0501080436	HOSE 3/8 X 1500 TR-TC		02
05	0501080714	HOSE 3/8 X 1600 TR-TC		02
06	0501081073	HOSE 1/2 X 4200 TC-TM		02
07	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	23	02

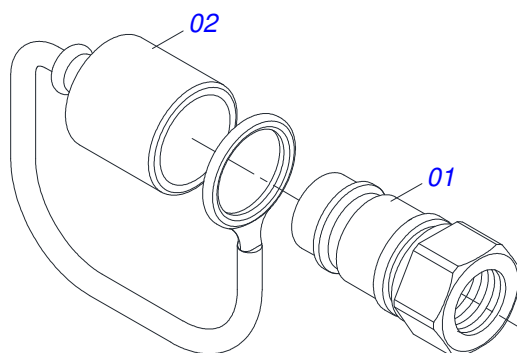 

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

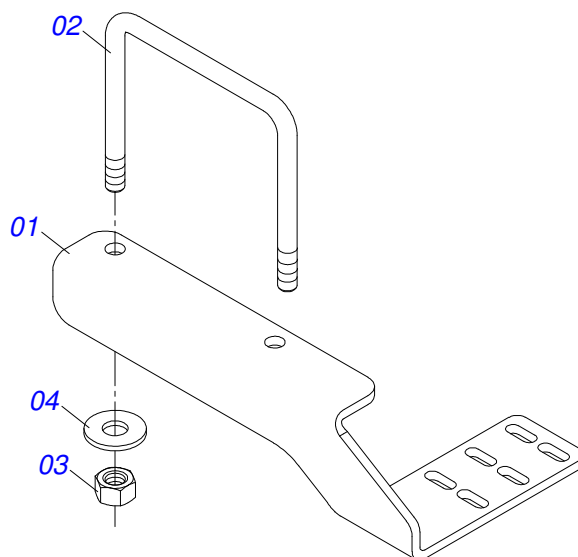 


Item	Code	Description	See page	QT
01	0561019899	RIGHT SUPPORT FIXER RECAMBIO		01
02	0521010718	5/8" U BOLT		01
03	0503012412	5/8 UNC SELF LOCKING NUT		02
04	0501012140	FLAT WASHER		02

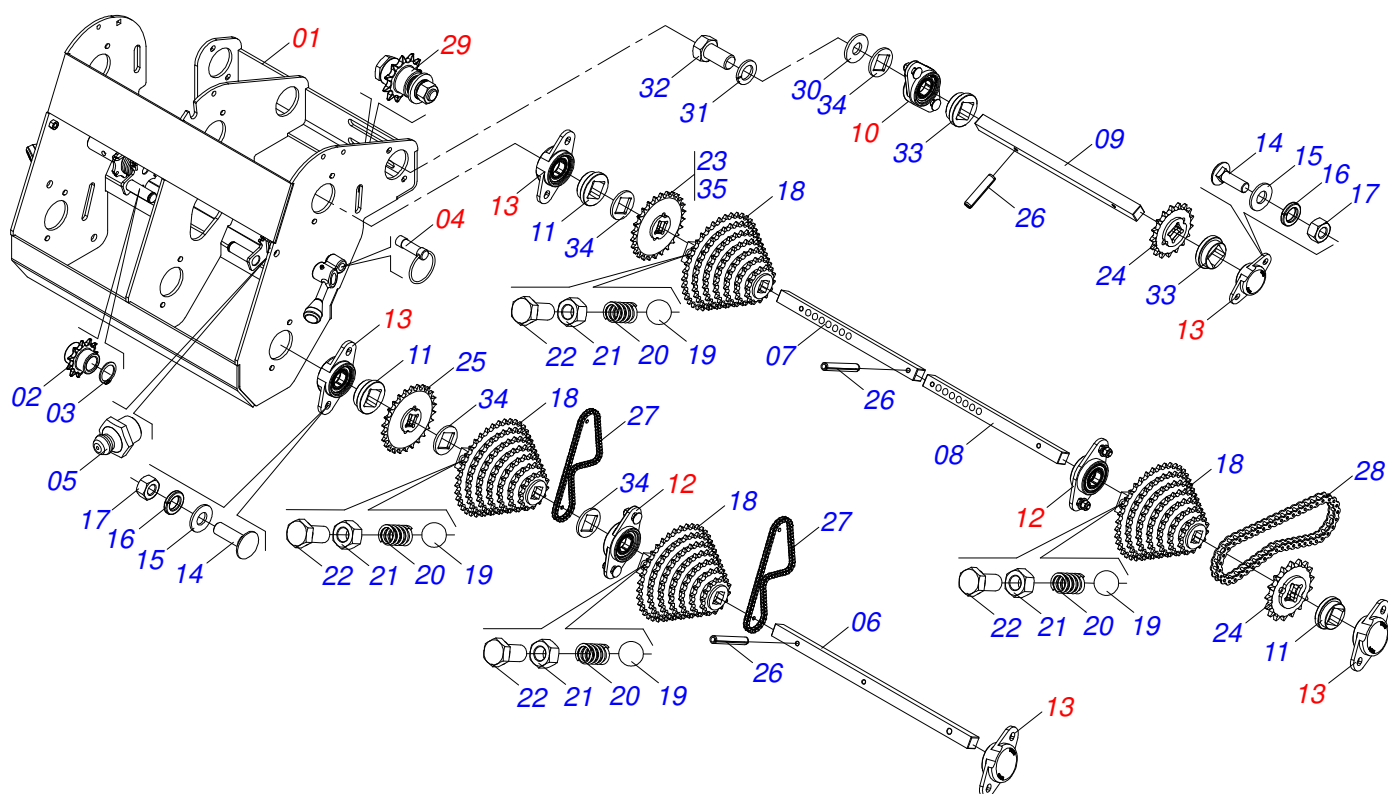 


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	26	01
02	0503031805	11Z 1/2" GEAR		04
03	0503010302	501019 SEAL RING		04
04	0501048790	AXLE WITH LINK ASSY	27	02
05	0503010002	1800 GREASE FITTING		02
06	0551018209	DRIVING AXLE		01
07	0521018259	DRIVEN AXLE		01
08	0551018210	DRIVEN AXLE		01
09	0551018211	INTERM SHAFT		01
10	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	28	01
11	0503030303	SUPPORT WASHER		05
12	0501056443	BEARING ASSY GEAR BOX	29	02
13	0501056271	BEARING CLOSED	31	05
14	0503011953	5/16" X 1" BOLT		10
15	0501010694	8.5 X 18 X 1.5 FLAT WASHER		10
16	0503010179	5/16" ZN SPRING WASHER		10
17	0503010337	5/16" NUT		10
18	0511060396	DRIVE/DRIVEN AXLE CONE		04
19	0503012389	1/2 BALL		04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
21	0503010060	1/2" NUT		04
22	0503010395	1/2" X 1-1/4" BOLT		04
23	0511061759	22Z P12,70 FQ 3/4" GEAR		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0511067501	26Z GEAR		01
26	0503010292	0.2" X 1.6" SPRING PIN		07
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0501054655	CHAIN TENSIONER ASSY	32	02
30	0501010984	FLAT WASHER		01
31	0503010025	3/8" SPRING WASHER		01




Item	Code	Description	See page	QT
32	0503010256	3/8" X 3/4" BOLT		01
33	0503030303	SUPPORT WASHER		03
34	0521018630	1.4" X SQUARE 0.8" WASHER		06
35	0511061822	25Z P0.5" GEAR SQUARE HOL		01

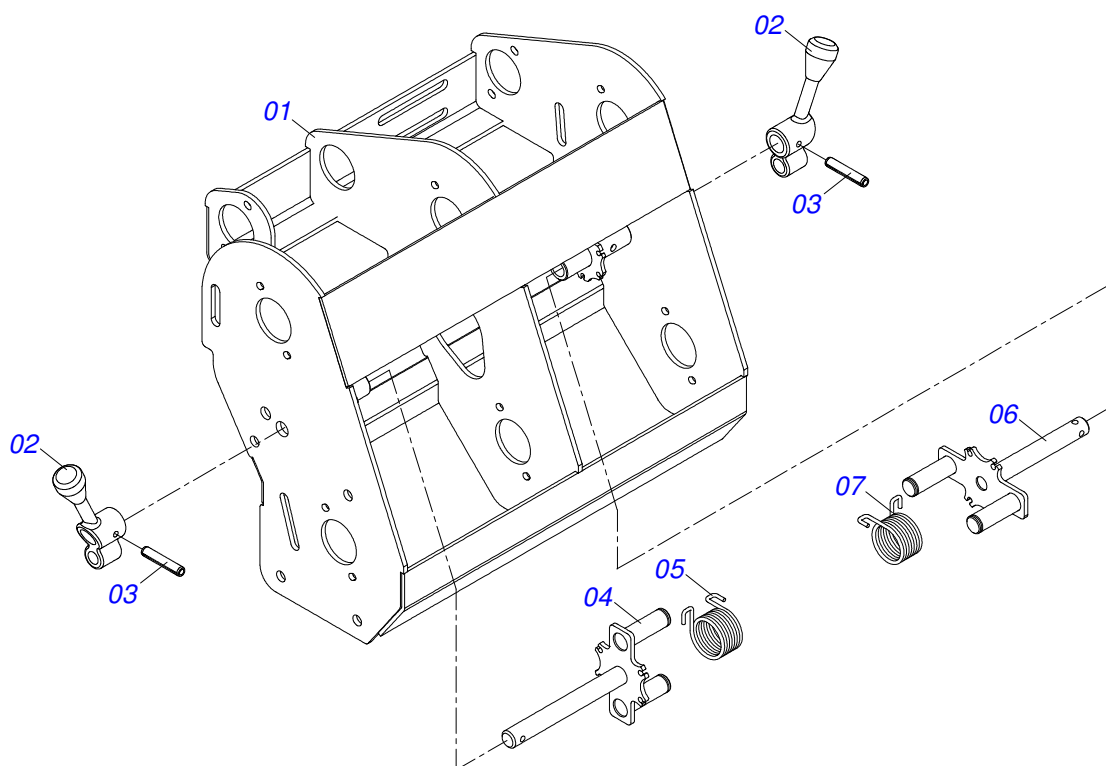 


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX	01	
02	0502011758	REAR TENSIONER LEVER	02	
03	0503010292	0.2" X 1.6" SPRING PIN	02	
04	0511061794	CHAIN TENSIONER	01	
05	0503031367	SPRING	01	
06	0511060392	CHAIN TENSIONER	01	
07	0503031366	RIGHT TWISTED SPRING RECAMBIO	01	

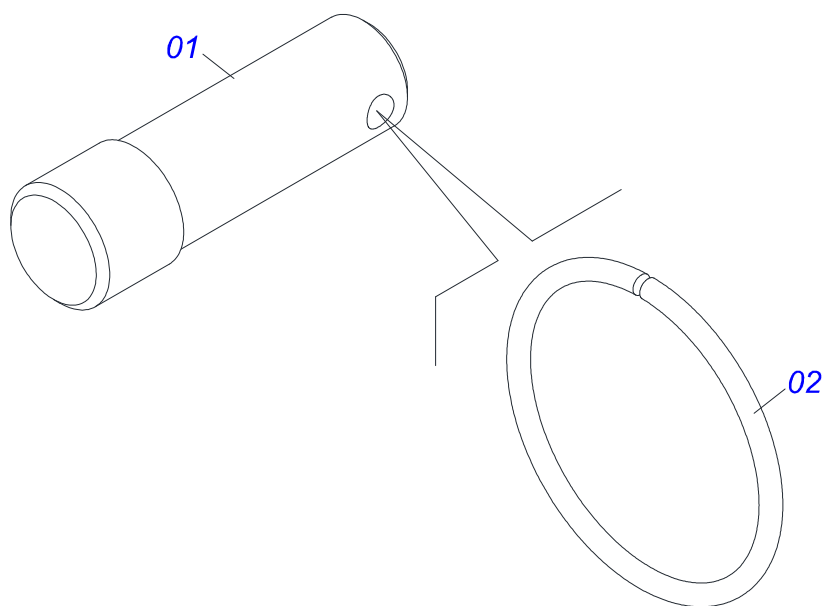 


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

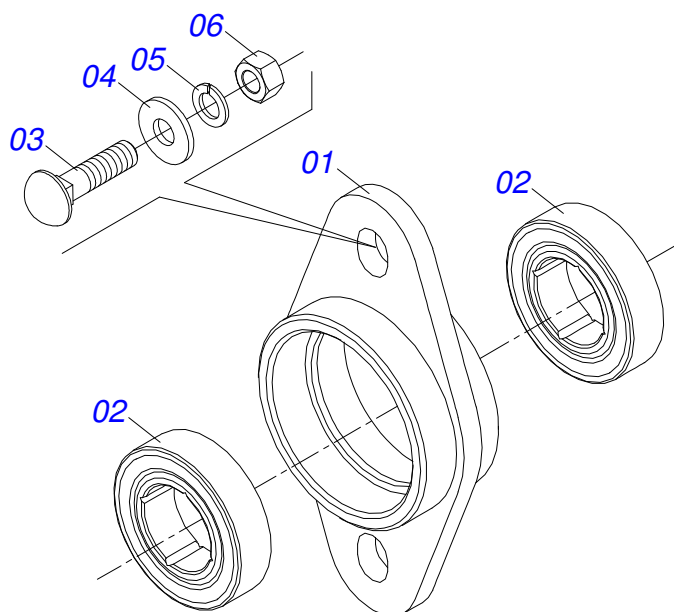 


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
05	0503010179	5/16" ZN SPRING WASHER		02
06	0503010337	5/16" NUT		02

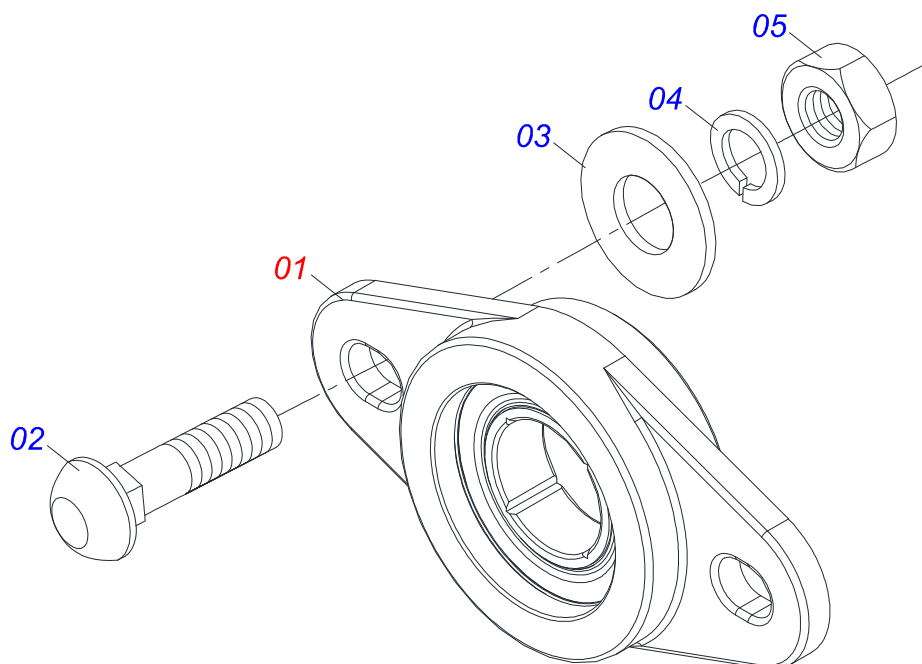 


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH BALL BEARING	30	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

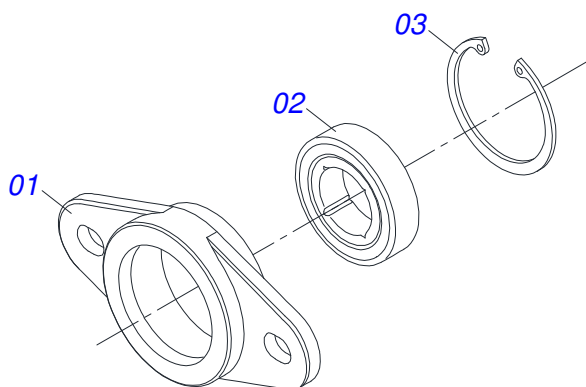 


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

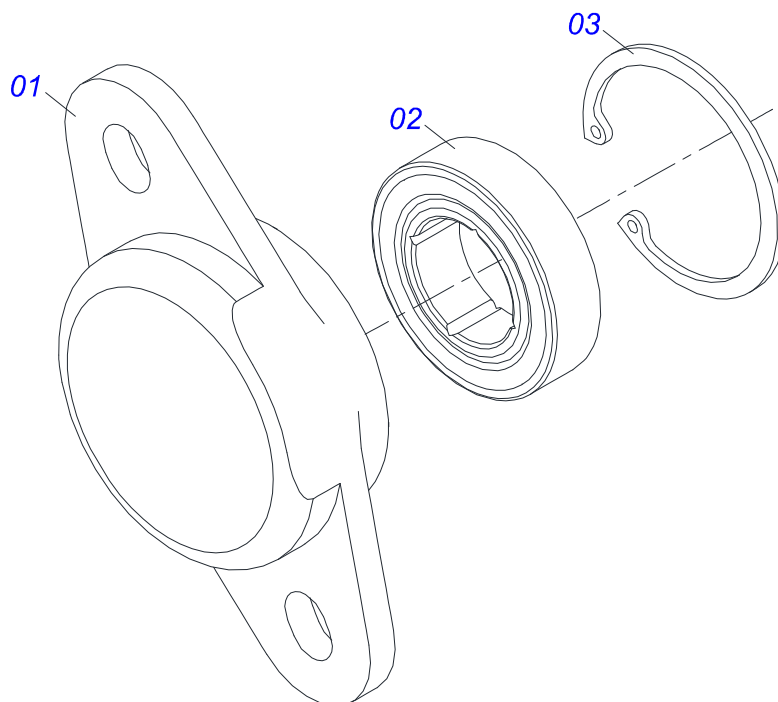 


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

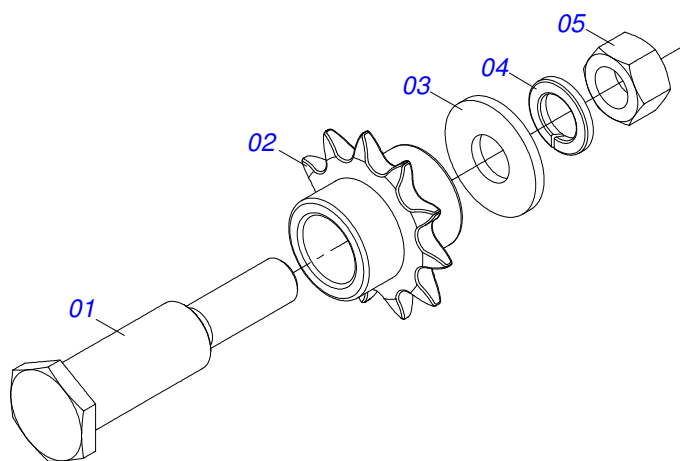 

Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

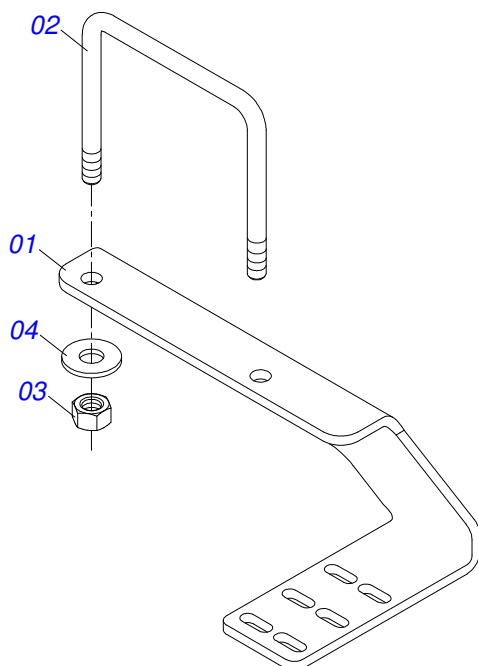 


Item	Code	Description	See page	QT
01	0561019898	LEFT SUPPORT FIXER RECAMBIO		01
02	0521010718	5/8" U BOLT		01
03	0503012412	5/8 UNC SELF LOCKING NUT		02
04	0501012140	FLAT WASHER		02

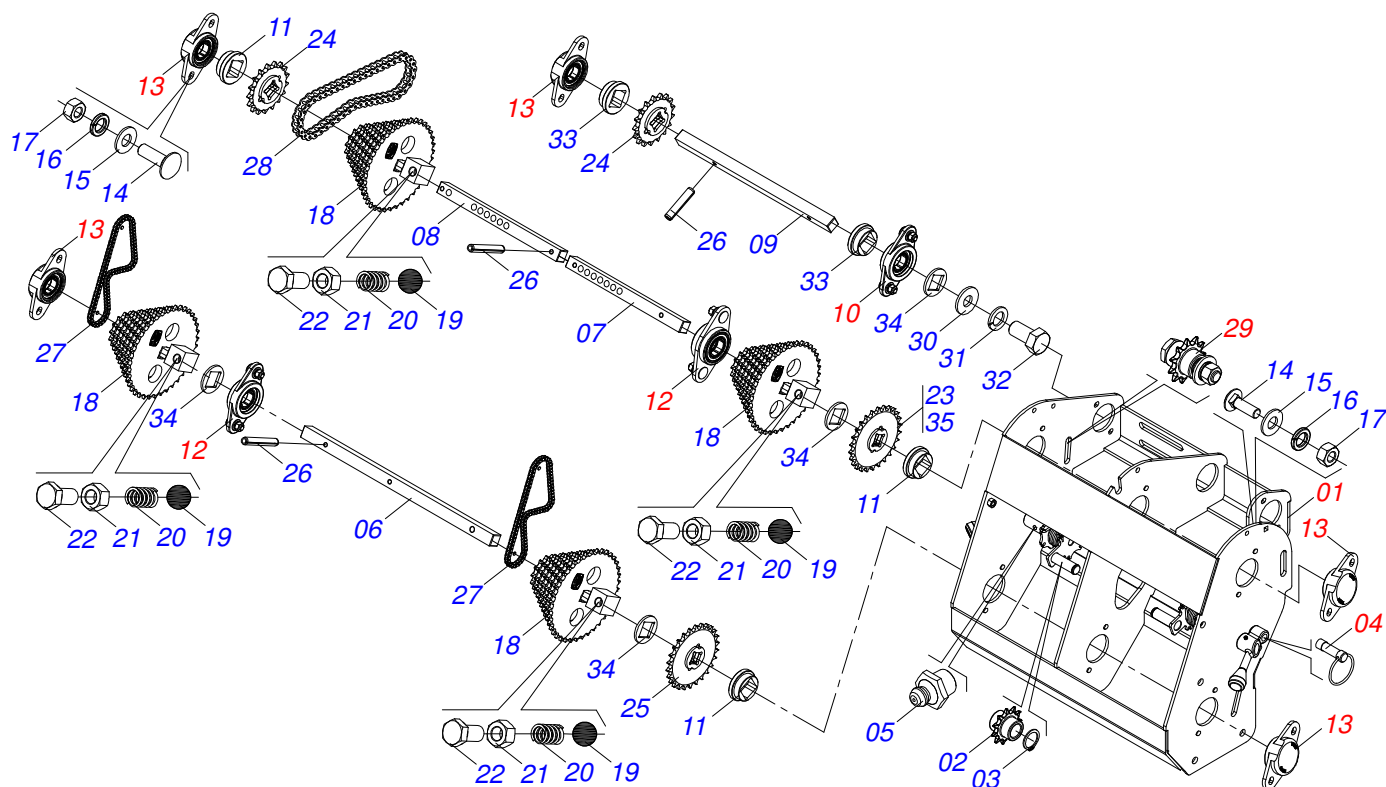 


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	35	01
02	0503031805	11Z 1/2" GEAR		04
03	0503010302	501019 SEAL RING		04
04	0501048790	AXLE WITH LINK ASSY	27	02
05	0503010002	1800 GREASE FITTING		02
06	0551018209	DRIVING AXLE		01
07	0521018259	DRIVEN AXLE		01
08	0551018210	DRIVEN AXLE		01
09	0551018211	INTERM SHAFT		01
10	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	28	01
11	0503030303	SUPPORT WASHER		05
12	0501056443	BEARING ASSY GEAR BOX	29	02
13	0501056271	BEARING CLOSED	31	05
14	0503011953	5/16" X 1" BOLT		10
15	0501010694	8.5 X 18 X 1.5 FLAT WASHER		10
16	0503010179	5/16" ZN SPRING WASHER		10
17	0503010337	5/16" NUT		10
18	0511060396	DRIVE/DRIVEN AXLE CONE		04
19	0503012389	1/2 BALL		04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
21	0503010060	1/2" NUT		04
22	0503010395	1/2" X 1-1/4" BOLT		04
23	0511061759	22Z P12,70 FQ 3/4" GEAR		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0511067501	26Z GEAR		01
26	0503010292	0.2" X 1.6" SPRING PIN		07
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0501054655	CHAIN TENSIONER ASSY	32	02
30	0501010984	FLAT WASHER		01
31	0503010025	3/8" SPRING WASHER		01



Item	Code	Description	See page	QT
32	0503010256	3/8" X 3/4" BOLT		01
33	0503030303	SUPPORT WASHER		03
34	0521018630	1.4" X SQUARE 0.8" WASHER		06
35	0511061822	25Z P0.5" GEAR SQUARE HOL		01

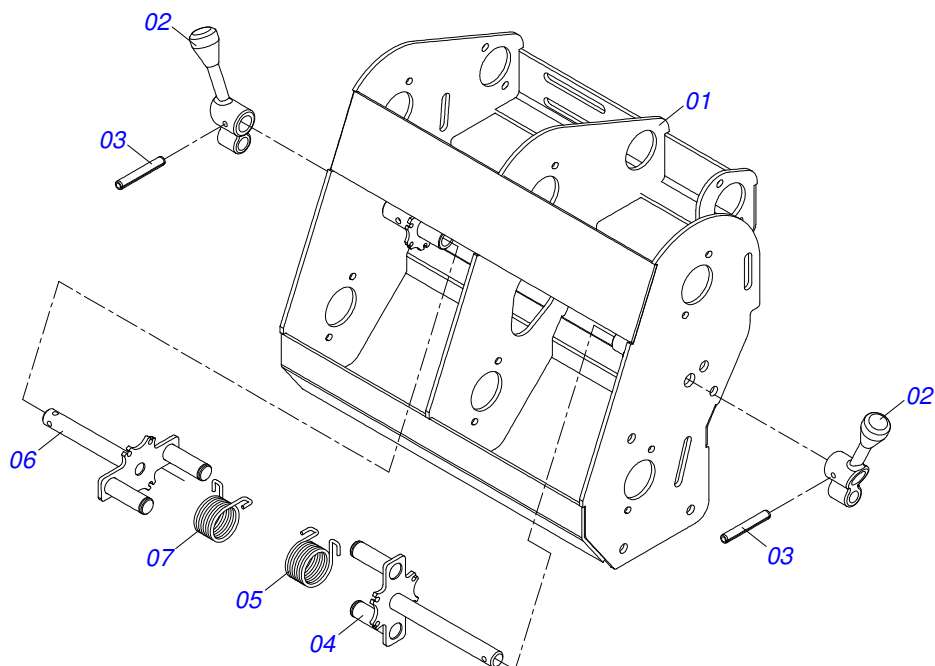 

Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

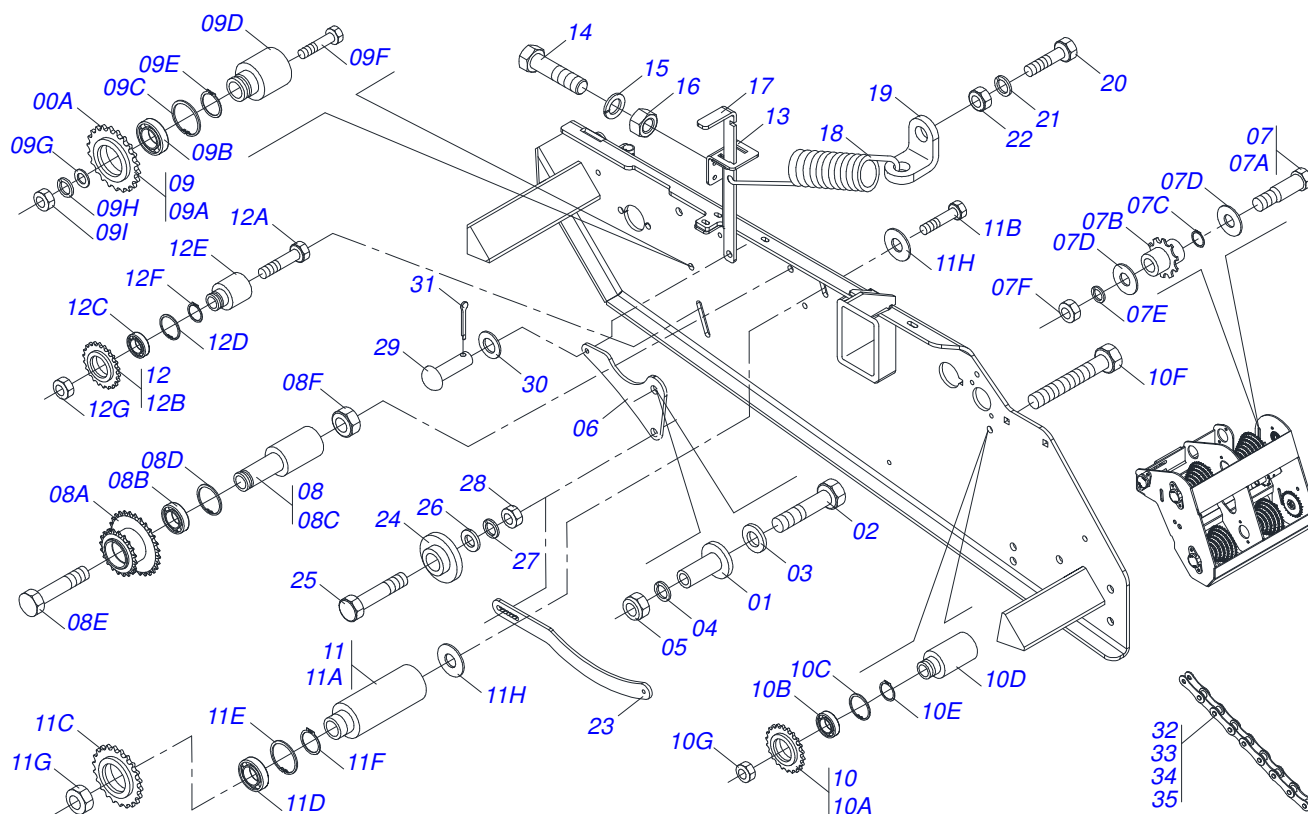 


Item	Code	Description	See page	QT
001	0561018212	ARTICULAT SLEEVE		01
002	0503010547	1/2" X 4" BOLT		01
003	0511017302	FLAT WASHER		01
004	0503010019	1/2" SPRING WASHER		01
005	0503010060	1/2" NUT		01
006	0561017281	ARTICULACION ARM		01
007	0511053366	CHAIN TENSIONER EXCHANGE	38	01
007A	0531019479	AXLE CHAIN GEAR		01
007B	0503031805	11Z 1/2" GEAR		01
007C	0503010302	501019 SEAL RING		01
007D	0511017302	FLAT WASHER		02
007E	0503010019	1/2" SPRING WASHER		01
007F	0503010060	1/2" NUT		01
008	0511050385	BEARING DOUBLE GEAR	39	01
008A	0521061843	20Z DOBLE GEAR		01
008B	0503011410	ROLLER BEARING		02
008C	0551019175	DOUBLE GEAR AXLE		01
008D	0503010406	501025 CLAMPING RING (FOR AXLE)		01
008E	0501010163	5/8" X 4-1/2" BOLT		01
008F	0503012412	5/8 UNC SELF LOCKING NUT		01
009	0501058265	STRETCHER LOWER CURRENT 21Z SEED	40	01
009A	0511062169	21Z P 1/2" GEAR		01
009B	0503011410	ROLLER BEARING		01
009C	0503011105	SEAL RING		01
009D	0531017086	50 AXLETIGHTENER		01
009E	0503010406	501025 CLAMPING RING (FOR AXLE)		01
009F	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
009G	0501012140	FLAT WASHER		01
009H	0503010027	5/8" SPRING WASHER		01
009I	0503010013	5/8" NUT		01
010	0511056387	INTERMEDIATE BEARING SEED WITH GEAR 21Z	41	01

SET TRANSMISSION LEFT ASSY


0511053364

Item	Code	Description	See page	QT
010A	0511062169	21Z P 1/2" GEAR		01
010B	0503011410	ROLLER BEARING		01
010C	0503011105	SEAL RING		01
010D	0531017086	50 AXLETIGHTENER		01
010E	0503010406	501025 CLAMPING RING (FOR AXLE)		01
010F	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
010G	0503012412	5/8 UNC SELF LOCKING NUT		01
011	0511050127	CHAIN TENSIONER SUPPORT	42	01
011A	0561015677	CHAIN TIGHTENER AXLE		01
011B	0501010452	5/8" X 5" BOLT		01
011C	0511062169	21Z P 1/2" GEAR		01
011D	0503011410	ROLLER BEARING		01
011E	0503011105	SEAL RING		01
011F	0503010406	501025 CLAMPING RING (FOR AXLE)		01
011G	0503012412	5/8 UNC SELF LOCKING NUT		01
011H	0501012140	FLAT WASHER		02
012	0501053126	FERTILIZER CHAIN TENSIONER ASSY	43	01
012A	0501011541	5/8" X 3" BOLT		01
012B	0511062169	21Z P 1/2" GEAR		01
012C	0503011410	ROLLER BEARING		01
012D	0503011105	SEAL RING		01
012E	0521018415	TIGHTENER AXLE		01
012F	0503010406	501025 CLAMPING RING (FOR AXLE)		01
012G	0503012412	5/8 UNC SELF LOCKING NUT		01
013	0561017275	LEVER FIXER		01
014	0503010237	3/8" X 1" BOLT		02
015	0503010025	3/8" SPRING WASHER		02
016	0503010026	3/8" NUT		02
017	0561017280	LH LEVER DISASSEMBLE (COP 11)		01
018	0503030093	TRACTION SPRING		01
019	0561017273	FIXER SPRING		01
020	0503010237	3/8" X 1" BOLT		01
021	0503010025	3/8" SPRING WASHER		01
022	0503010026	3/8" NUT		01
023	0561017282	LOWER LEVER		01
024	0561016797	SLEEVE UNION LEVER ARM/DESARM		01
025	0503011082	C1/2" X 1.3/4" SCREW		01
026	0511017302	FLAT WASHER		02
027	0503010019	1/2" SPRING WASHER		01
028	0503010060	1/2" NUT		01
029	0521010773	0.37" X 1.18" COUPLING SHAFT		02
030	0501010984	FLAT WASHER		01
031	0503010140	1/8" X 3/4" COTTERPIN		02
032	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
033	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
034	0503016737	40-1 X 114 CHAIN LINK + REDUCION		01
035	0503011721	40-1 CHAIN X 122 LINK + REDUCTION		01

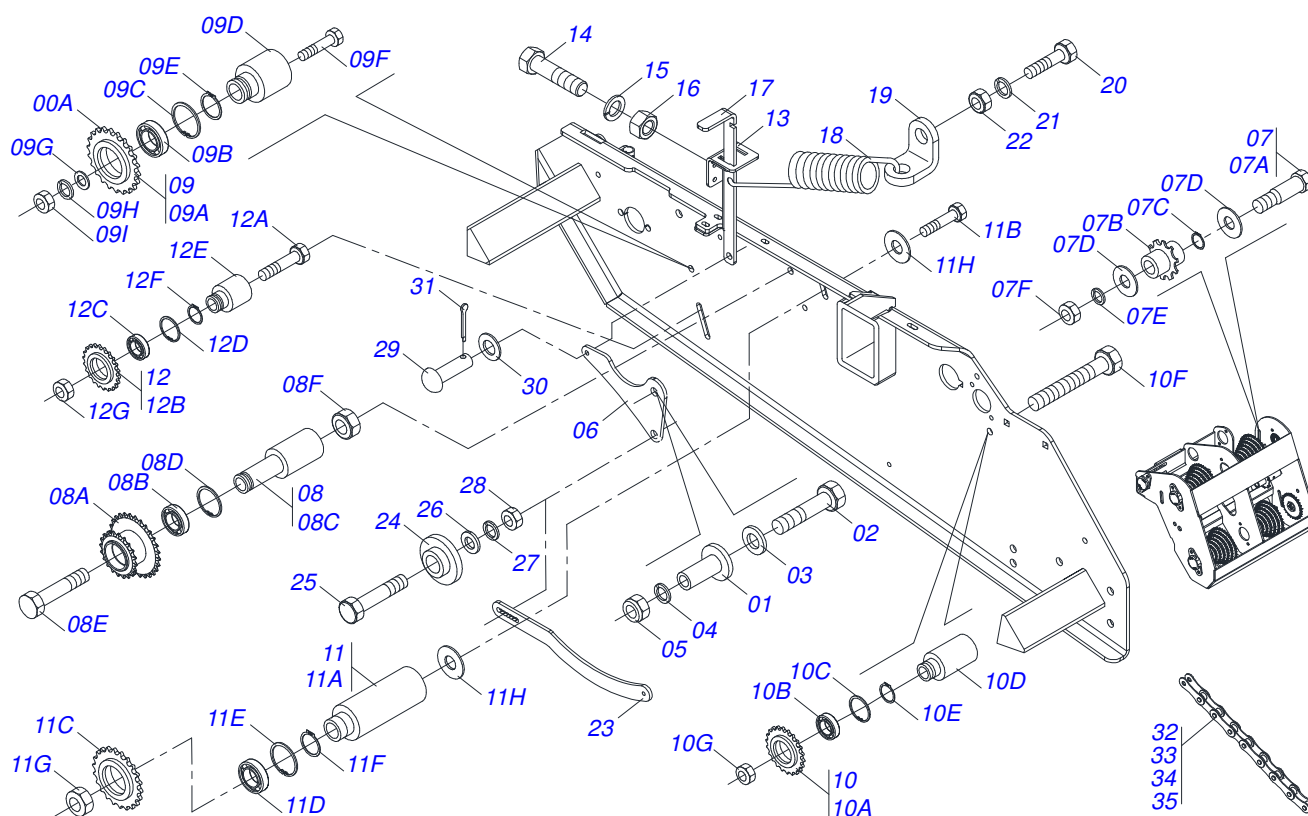 


Item	Code	Description	See page	QT
001	0561018212	ARTICULAT SLEEVE		01
002	0503010547	1/2" X 4" BOLT		01
003	0511017302	FLAT WASHER		01
004	0503010019	1/2" SPRING WASHER		01
005	0503010060	1/2" NUT		01
006	0561017281	ARTICULACION ARM		01
007	0511053366	CHAIN TENSIONER EXCHANGE	38	01
007A	0531019479	AXLE CHAIN GEAR		01
007B	0503031805	11Z 1/2" GEAR		01
007C	0503010302	501019 SEAL RING		01
007D	0511017302	FLAT WASHER		02
007E	0503010019	1/2" SPRING WASHER		01
007F	0503010060	1/2" NUT		01
008	0511050385	BEARING DOUBLE GEAR	39	01
008A	0521061843	20Z DOBLE GEAR		01
008B	0503011410	ROLLER BEARING		02
008C	0551019175	DOUBLE GEAR AXLE		01
008D	0503010406	501025 CLAMPING RING (FOR AXLE)		01
008E	0501010163	5/8" X 4-1/2" BOLT		01
008F	0503012412	5/8 UNC SELF LOCKING NUT		01
009	0501058265	STRETCHER LOWER CURRENT 21Z SEED	40	01
009A	0511062169	21Z P 1/2" GEAR		01
009B	0503011410	ROLLER BEARING		01
009C	0503011105	SEAL RING		01
009D	0531017086	50 AXLETIGHTENER		01
009E	0503010406	501025 CLAMPING RING (FOR AXLE)		01
009F	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
009G	0501012140	FLAT WASHER		01
009H	0503010027	5/8" SPRING WASHER		01
009I	0503010013	5/8" NUT		01
010	0511056387	INTERMEDIATE BEARING SEED WITH GEAR 21Z	41	01


Item	Code	Description	See page	QT
010A	0511062169	21Z P 1/2" GEAR		01
010B	0503011410	ROLLER BEARING		01
010C	0503011105	SEAL RING		01
010D	0531017086	50 AXLETIGHTENER		01
010E	0503010406	501025 CLAMPING RING (FOR AXLE)		01
010F	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
010G	0503012412	5/8 UNC SELF LOCKING NUT		01
011	0511050127	CHAIN TENSIONER SUPPORT	42	01
011A	0561015677	CHAIN TIGHTENER AXLE		01
011B	0501010452	5/8" X 5" BOLT		01
011C	0511062169	21Z P 1/2" GEAR		01
011D	0503011410	ROLLER BEARING		01
011E	0503011105	SEAL RING		01
011F	0503010406	501025 CLAMPING RING (FOR AXLE)		01
011G	0503012412	5/8 UNC SELF LOCKING NUT		01
011H	0501012140	FLAT WASHER		02
012	0501053126	FERTILIZER CHAIN TENSIONER ASSY	43	01
012A	0501011541	5/8" X 3" BOLT		01
012B	0511062169	21Z P 1/2" GEAR		01
012C	0503011410	ROLLER BEARING		01
012D	0503011105	SEAL RING		01
012E	0521018415	TIGHTENER AXLE		01
012F	0503010406	501025 CLAMPING RING (FOR AXLE)		01
012G	0503012412	5/8 UNC SELF LOCKING NUT		01
013	0561017275	LEVER FIXER		01
014	0503010237	3/8" X 1" BOLT		02
015	0503010025	3/8" SPRING WASHER		02
016	0503010026	3/8" NUT		02
017	0561017279	RH LEVER DISASSEMBLE (COP 11)		01
018	0503030093	TRACTION SPRING		01
019	0561017273	FIXER SPRING		01
020	0503010237	3/8" X 1" BOLT		01
021	0503010025	3/8" SPRING WASHER		01
022	0503010026	3/8" NUT		01
023	0561017282	LOWER LEVER		01
024	0561016797	SLEEVE UNION LEVER ARM/DESARM		01
025	0503011082	C1/2" X 1.3/4" SCREW		01
026	0511017302	FLAT WASHER		02
027	0503010019	1/2" SPRING WASHER		01
028	0503010060	1/2" NUT		01
029	0521010773	0.37" X 1.18" COUPLING SHAFT		02
030	0501010984	FLAT WASHER		01
031	0503010140	1/8" X 3/4" COTTERPIN		02
032	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
033	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
034	0503016737	40-1 X 114 CHAIN LINK + REDUCION		01
035	0503011721	40-1 CHAIN X 122 LINK + REDUCTION		01

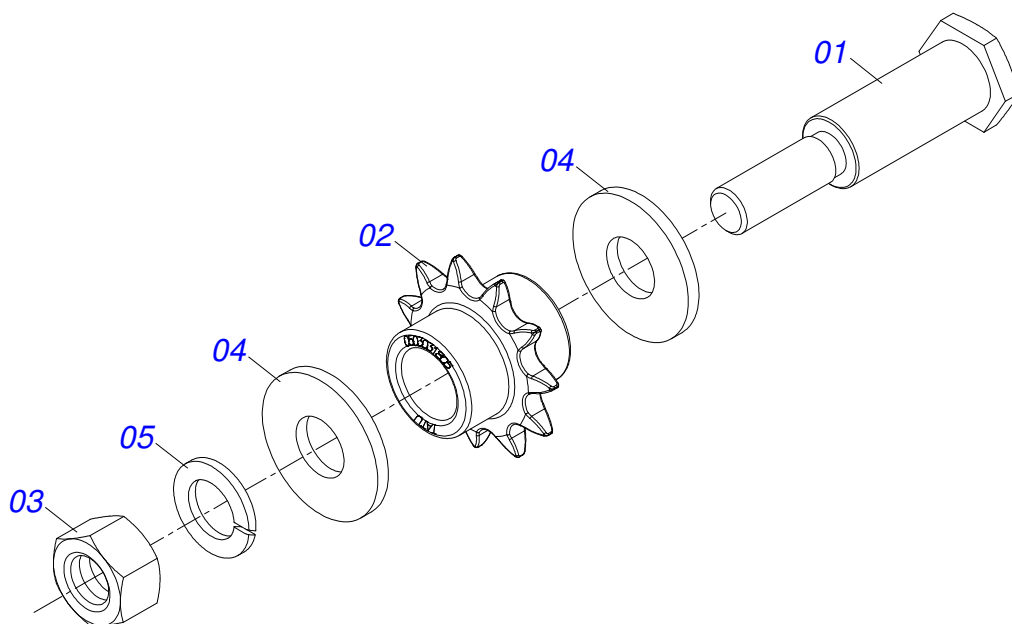 


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010060	1/2" NUT		01
04	0511017302	FLAT WASHER		02
05	0503010019	1/2" SPRING WASHER		01

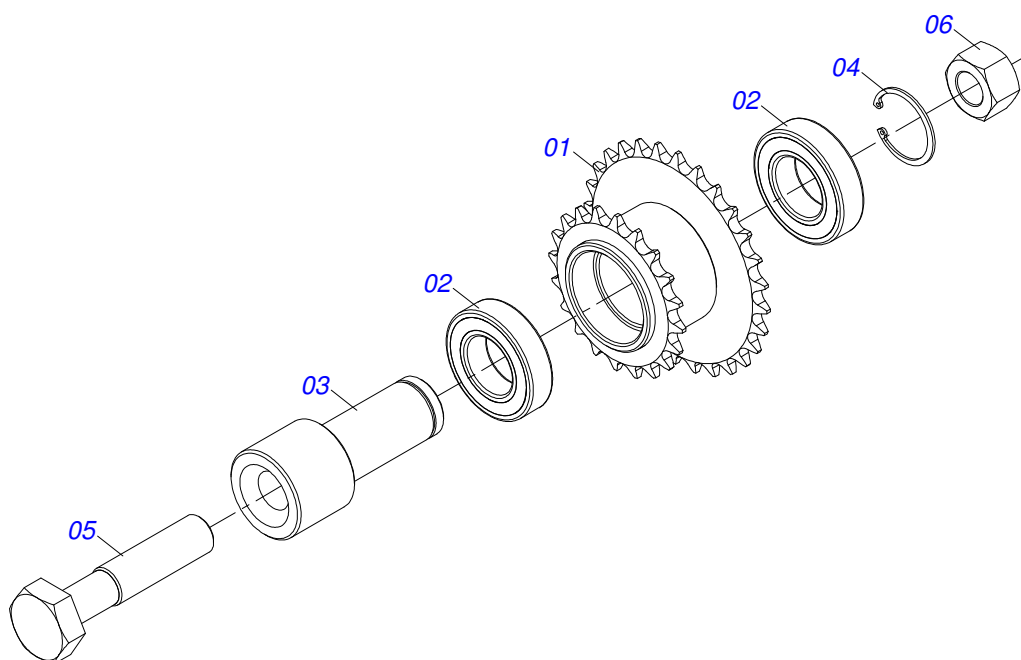 


Item	Code	Description	See page	QT
01	0521061843	20Z DOBLE GEAR		01
02	0503011410	ROLLER BEARING		02
03	0551019175	DOUBLE GEAR AXLE		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0501010163	5/8" X 4-1/2" BOLT		01
06	0503012412	5/8 UNC SELF LOCKING NUT		01

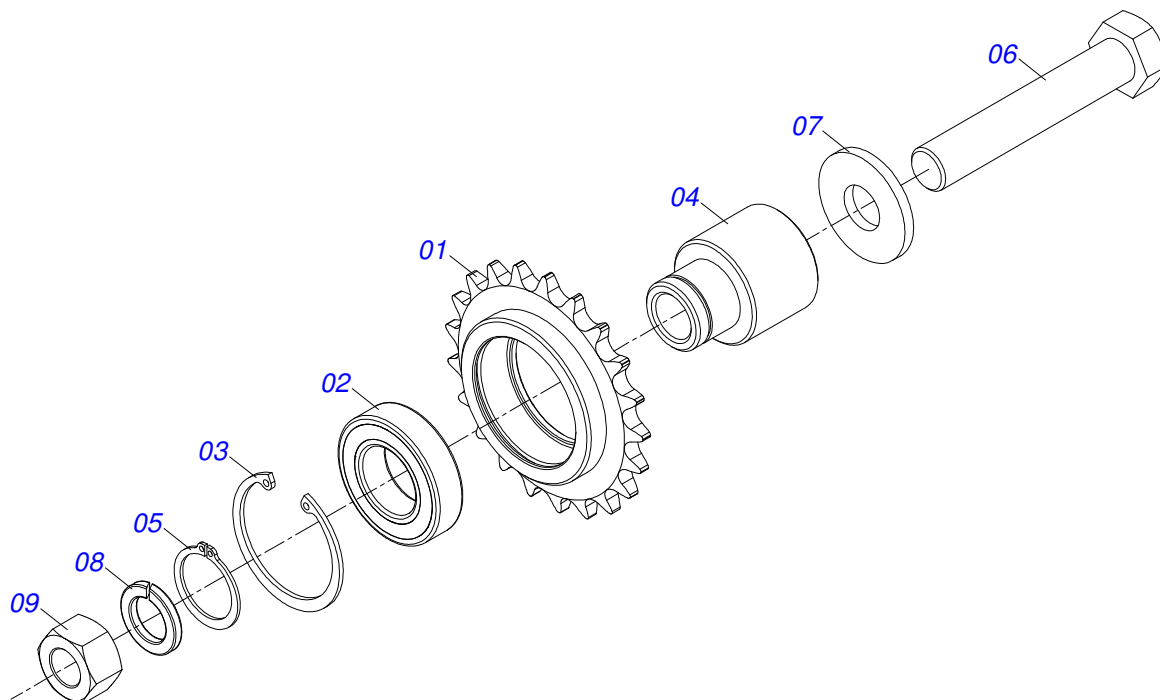 


Item	Code	Description	See page	QT
01	0521069698	GEAR 21Z P 1/2		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
07	0501012140	FLAT WASHER		01
08	0503010027	5/8" SPRING WASHER		01
09	0503010013	5/8" NUT		01

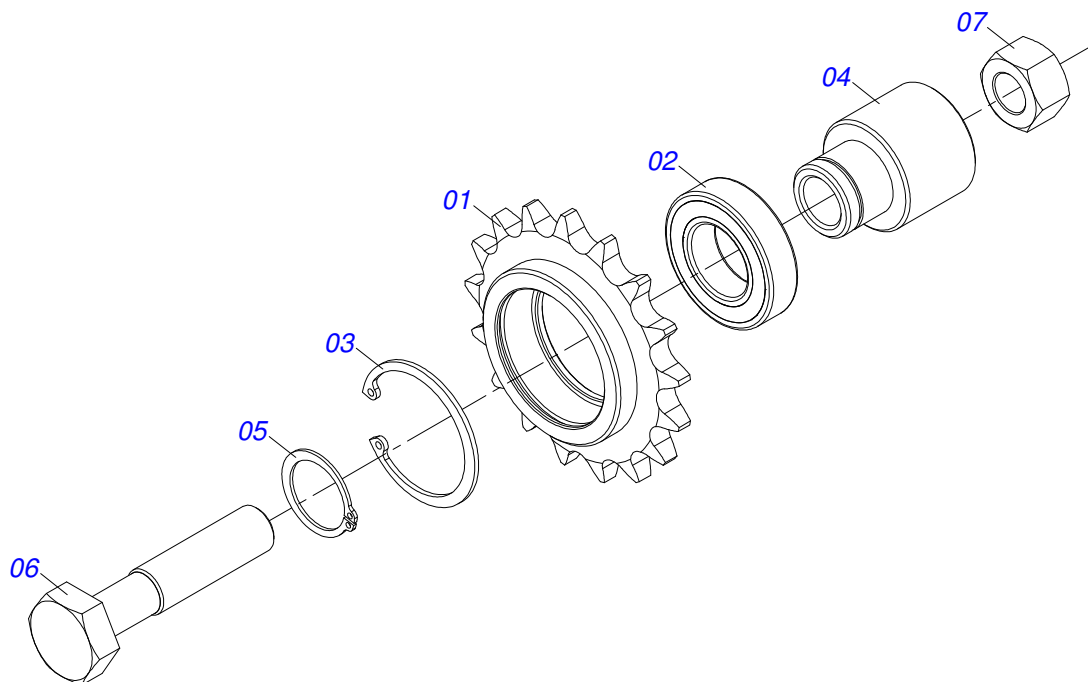 


Item	Code	Description	See page	QT
01	0511062169	21Z P 1/2" GEAR		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01

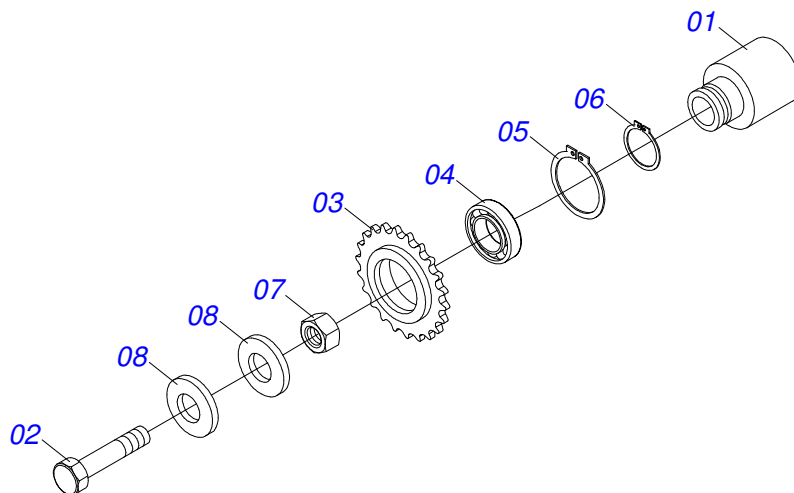 

Item	Code	Description	See page	QT
001	0561015677	CHAIN TIGHTENER AXLE		01
002	0501010452	5/8" X 5" BOLT		01
003	0511062169	21Z P 1/2" GEAR		01
004	0503011410	ROLLER BEARING		01
005	0503011105	SEAL RING		01
006	0503010406	501025 CLAMPING RING (FOR AXLE)		01
007	0503012412	5/8 UNC SELF LOCKING NUT		01
008	0501012140	FLAT WASHER		02

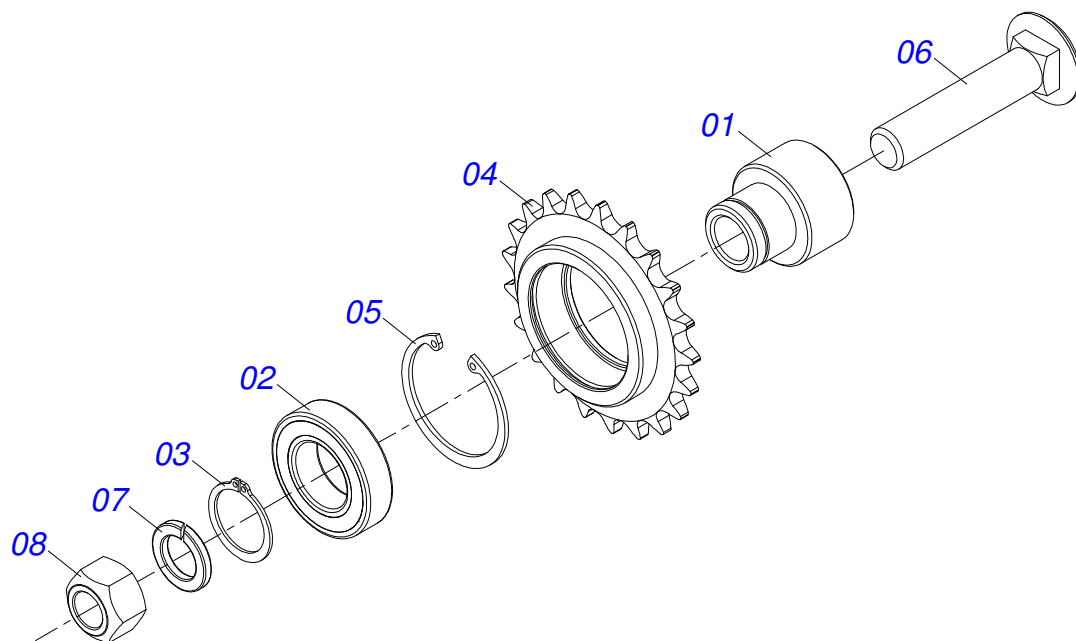 


Item	Code	Description	See page	QT
01	0521018415	TIGHTENER AXLE		01
02	0503011410	ROLLER BEARING		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0521069698	GEAR 21Z P 1/2		01
05	0503011105	SEAL RING		01
06	0501011234	5/8" X 3" BOLT		01
07	0503010027	5/8" SPRING WASHER		01
08	0503012412	5/8 UNC SELF LOCKING NUT		01

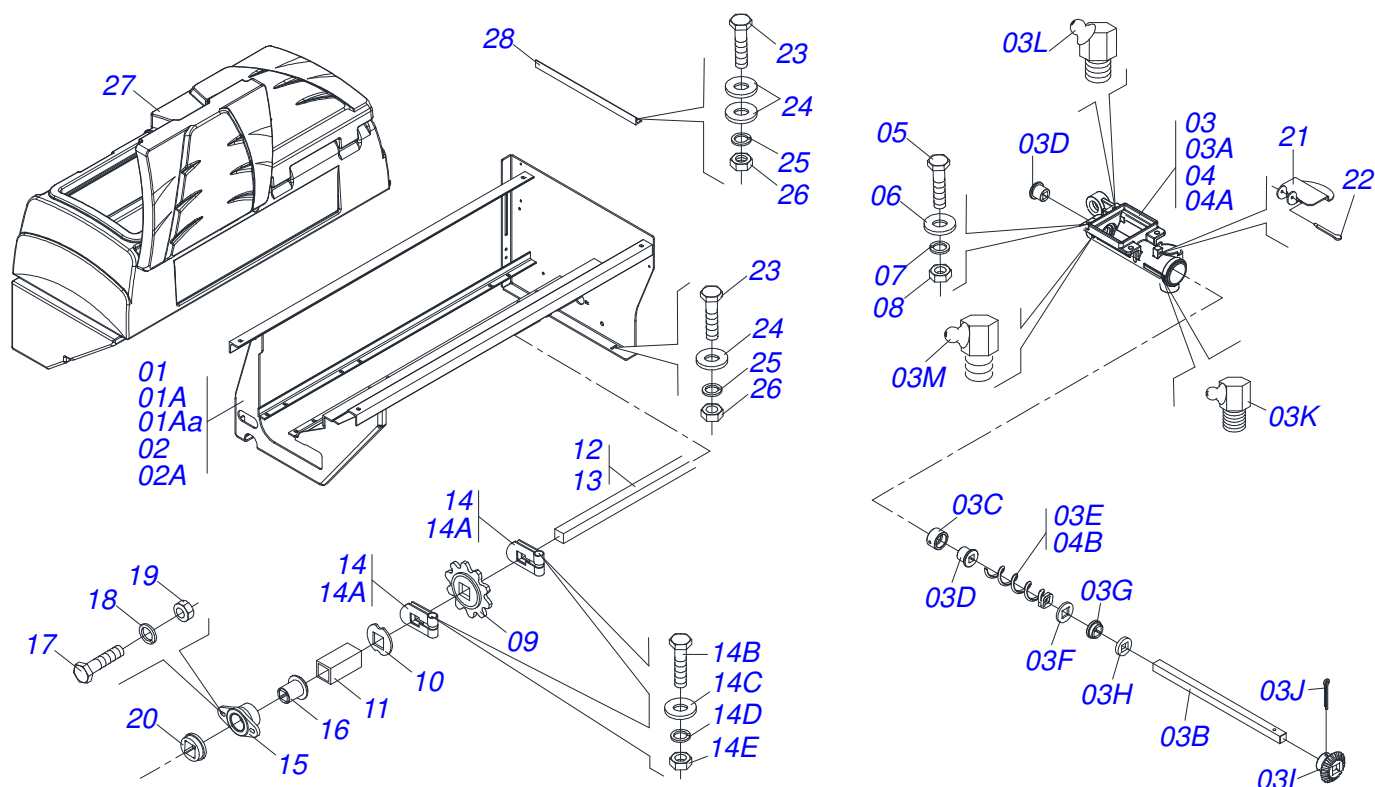 


Item	Code	Description	See page	QT
01	0511054296	ASSEMBLY FERTILIZER BOX RIGHT / LEFT	44	01
01A	0511053111	LH FERTILIZER BOX SUPPORT		01
01Aa	0521063955	FERTILIZER BEAM SUPPORT		01
02	0511053112	LEFT FERTILIZER BOX SUPPORT		01
02A	0521063956	LFT FERTILIZER BEAM SUPPORT		01
03	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	45	05
03A	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
03B	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03C	0521010309	SLEEVE INTER		01
03D	0503030275	AGRICULTURAL BEARING		02
03E	0503031164	RIGHT HELICAL CONDUTOR		01
03F	0501010637	FLAT WASHER		01
03G	0503030303	SUPPORT WASHER		01
03H	0501013774	GREASE SEAL		01
03I	0502011412	18Z CONICAL GEAR		01
03J	0503010523	1/4\" X 2\" COTTERPIN		01
03K	0503011962	GREASE FITTING		01
03L	0503010003	1845 GREASE FITTING		01
03M	0503012826	CREASE FITTING		01
04	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	46	05
04A	0501110676	SIDE FERTILIZER DISTRIBUTOR		05
04B	0503031165	LEFT HELICAL CONDUTOR		05
05	0503010751	C3/8\" X 1.1/4\" HEX BOLT G.5		40
06	0501010984	FLAT WASHER		40
07	0503011443	3/8\" SPRING WASHER		40
08	0503010026	3/8\" NUT		40
09	0511061759	22Z P12,70 FQ 3/4\" GEAR		02
10	0521014167	CONE LOCK		04
11	0551018055	22,65 X 60 SLEEVE		04
12	0551018213	3/4\" X 1830 SQUARE SHAFT		01
13	0561018365	SQUARE SHAFT		01


Item	Code	Description	See page	QT
14	0501053788	Q3/4" FASTENER AXLE ASSY	47	04
14A	0521010691	AXLE FASTENER		01
14B	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
14C	0511017303	FLAT WASHER		02
14D	0503010143	1/4" SPRING WASHER		01
14E	0503010144	1/4" NUT		01
15	0501110392	SILO SUPPORT BEARING		02
16	0521012485	GEAR BOX BEARING AGRICUTURAL		02
17	0503010363	5/16" X 1" BOLT		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04
20	0503030303	SUPPORT WASHER		02
21	0571010590	FERTILIZER SIDE COVER		10
22	0503010257	1/8" X 1" COTTERPIN		10
23	0503010849	3/8" X 1-1/2" BOLT		16
24	0501010984	FLAT WASHER		24
25	0503010025	3/8" SPRING WASHER		16
26	0503010026	3/8" NUT		16
27	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		02
28	0571013223	ANGLE BAR		04

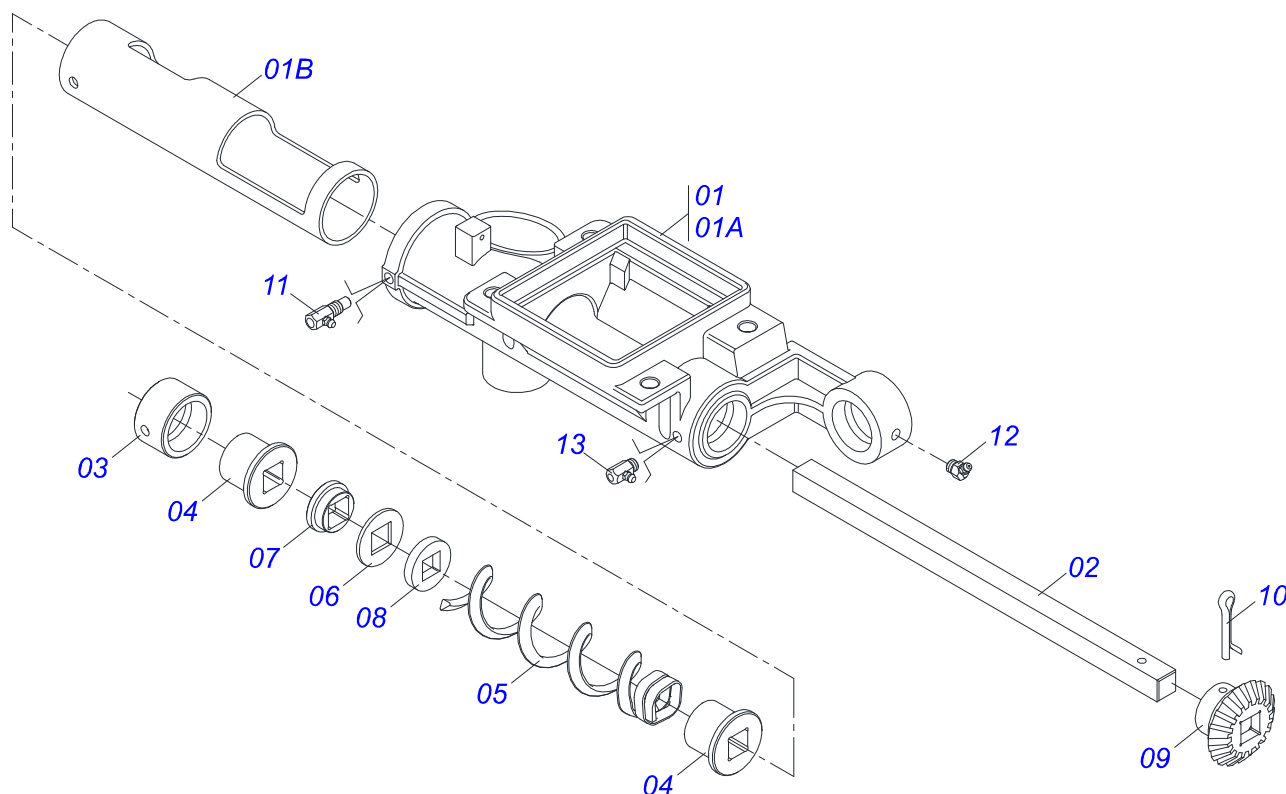 


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

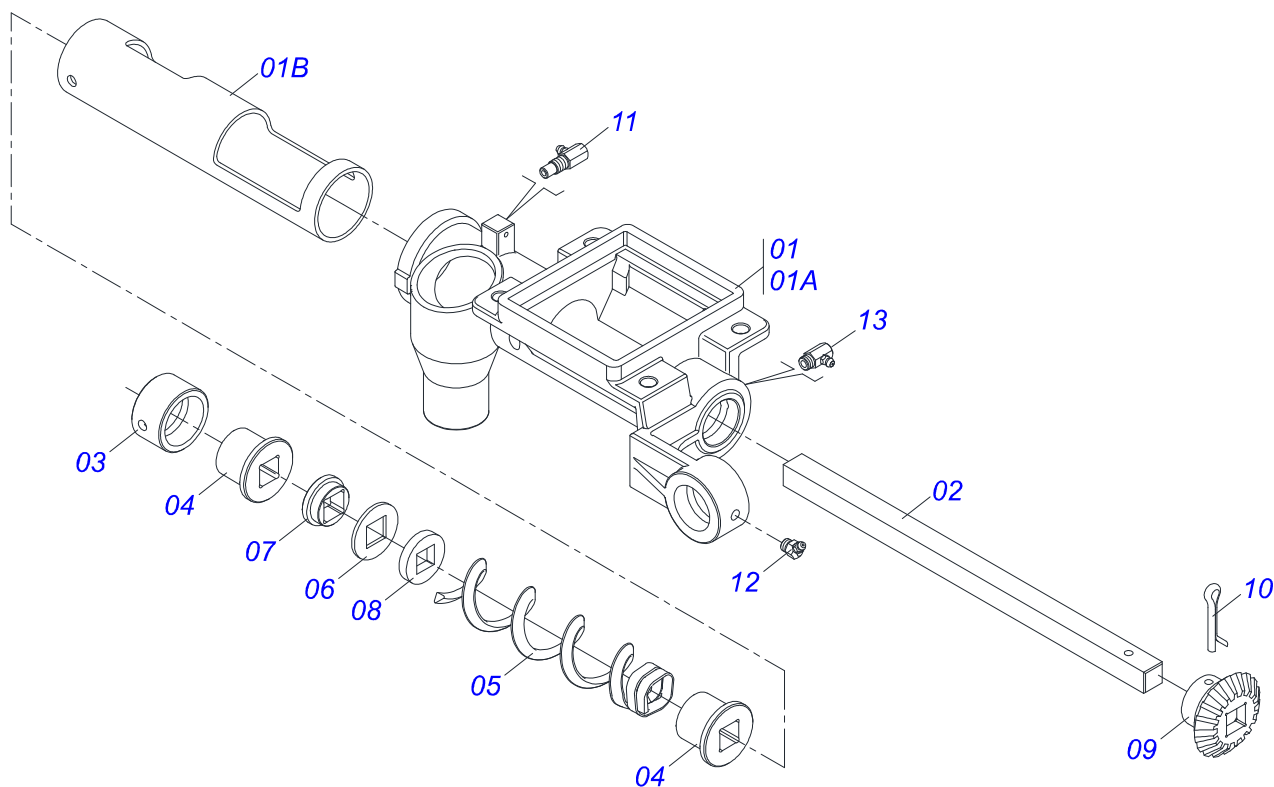 


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

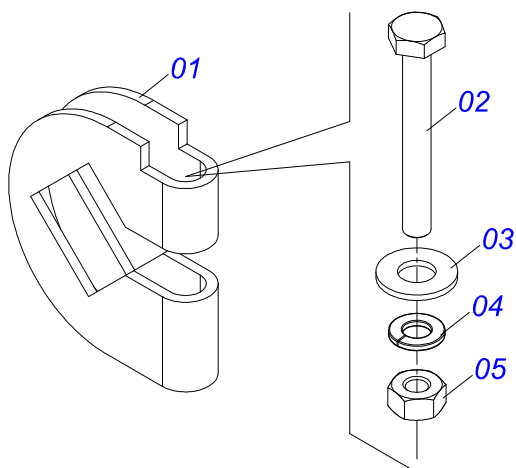 


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511817303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

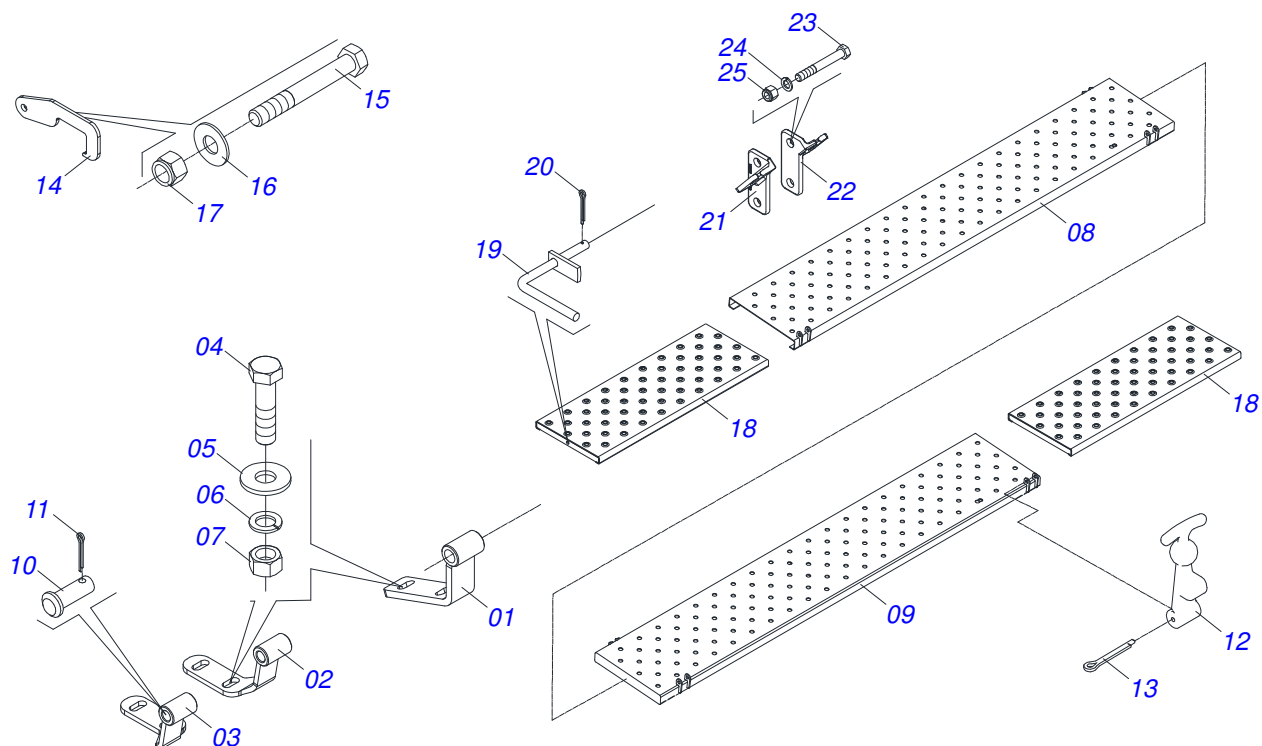 


Item	Code	Description	See page	QT
001	0521061861	PLATFORM FIXER	02	
002	0521062061	CENTRAL ARTICULACION	01	
003	0521062062	CENTRAL ARTICULACION	01	
004	0503010849	3/8" X 1-1/2" BOLT	08	
005	0501010984	FLAT WASHER	16	
006	0503010025	3/8" SPRING WASHER	08	
007	0503010026	3/8" NUT	08	
008	0521063947	PLATFORM RIGHT	01	
009	0521063944	LEFT PLATFORM	01	
010	0521010549	COUPLING SHAFT	04	
011	0503010300	5/32" X 1" COTTERPIN	04	
012	0503011333	COVER FIXER	02	
013	0503010274	5/32"X 2" COTTERPIN	02	
014	0551019115	LOCKING PLATFORM FIXATION	02	
015	0501010096	3/8" X 2" BOLT	02	
016	0501010984	FLAT WASHER	02	
017	0503013357	3/8" SELF-ADJUSTING NUT	02	
018	0521061676	PLATFORM PROLONG	02	
019	0511069664	PLATFORM EXTENSION LOCK	02	
020	0503010257	1/8" X 1" COTTERPIN	02	
021	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
022	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
023	0503014007	1/2" X 1-1/4" BOLT	04	
024	0503010019	1/2" SPRING WASHER	04	
025	0503010060	1/2" NUT	04	

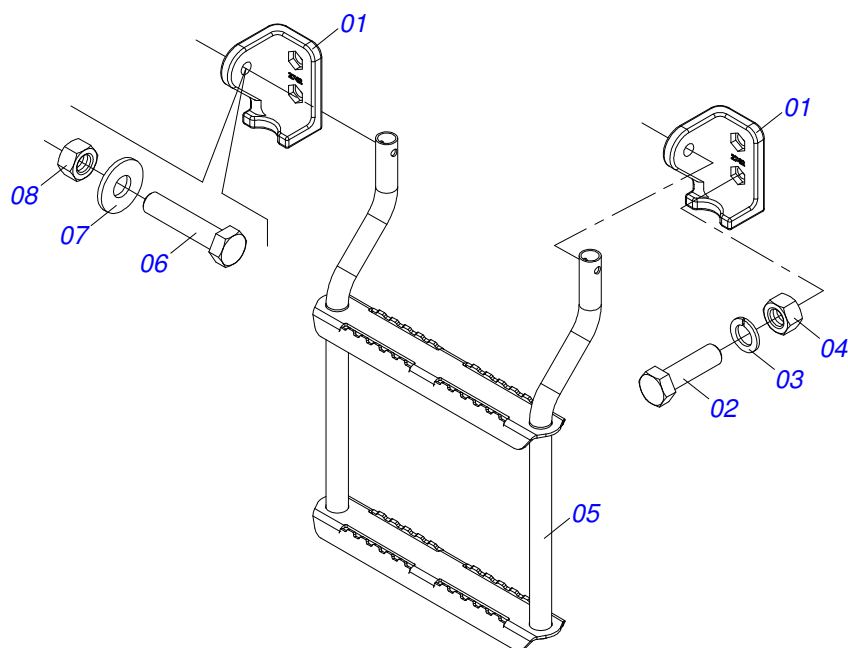 


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER		04
02	0503010237	3/8" X 1" BOLT		08
03	0503010025	3/8" SPRING WASHER		08
04	0503010026	3/8" NUT		08
05	0511069636	LADDER		02
06	0503011179	3/8" X 2-1/4" BOLT		04
07	0501010984	FLAT WASHER		04
08	0503013357	3/8" SELF-ADJUSTING NUT		04

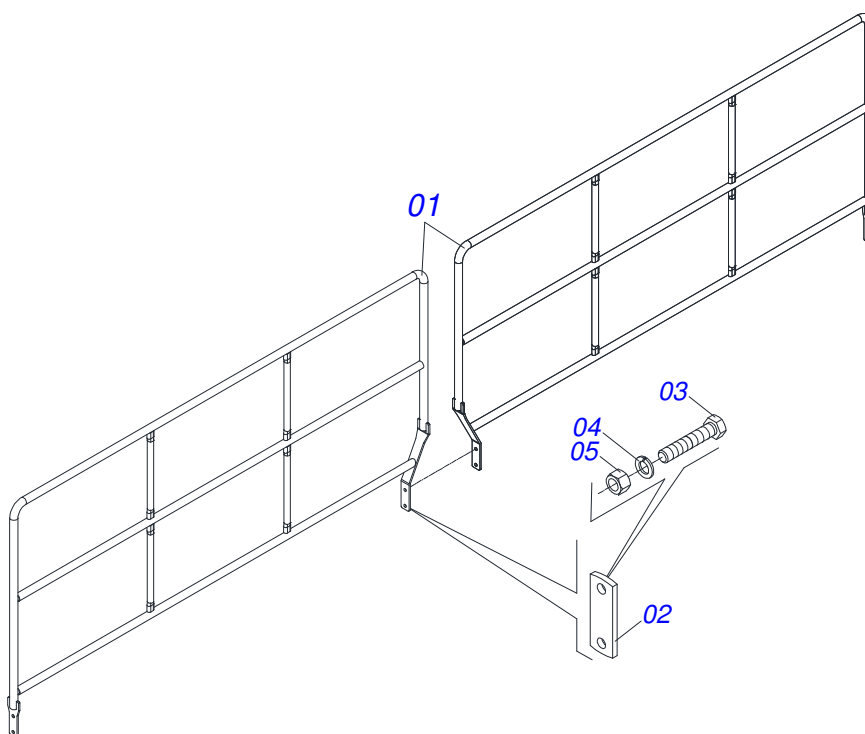 

Item	Code	Description	See page	QT
001	0521063948	JOINT HANDRAIL SET		02
002	0521018290	RANDRAIL HOLDER		02
003	0503010395	1/2" X 1-1/4" BOLT		04
004	0503010019	1/2" SPRING WASHER		04
005	0503010060	1/2" NUT		04

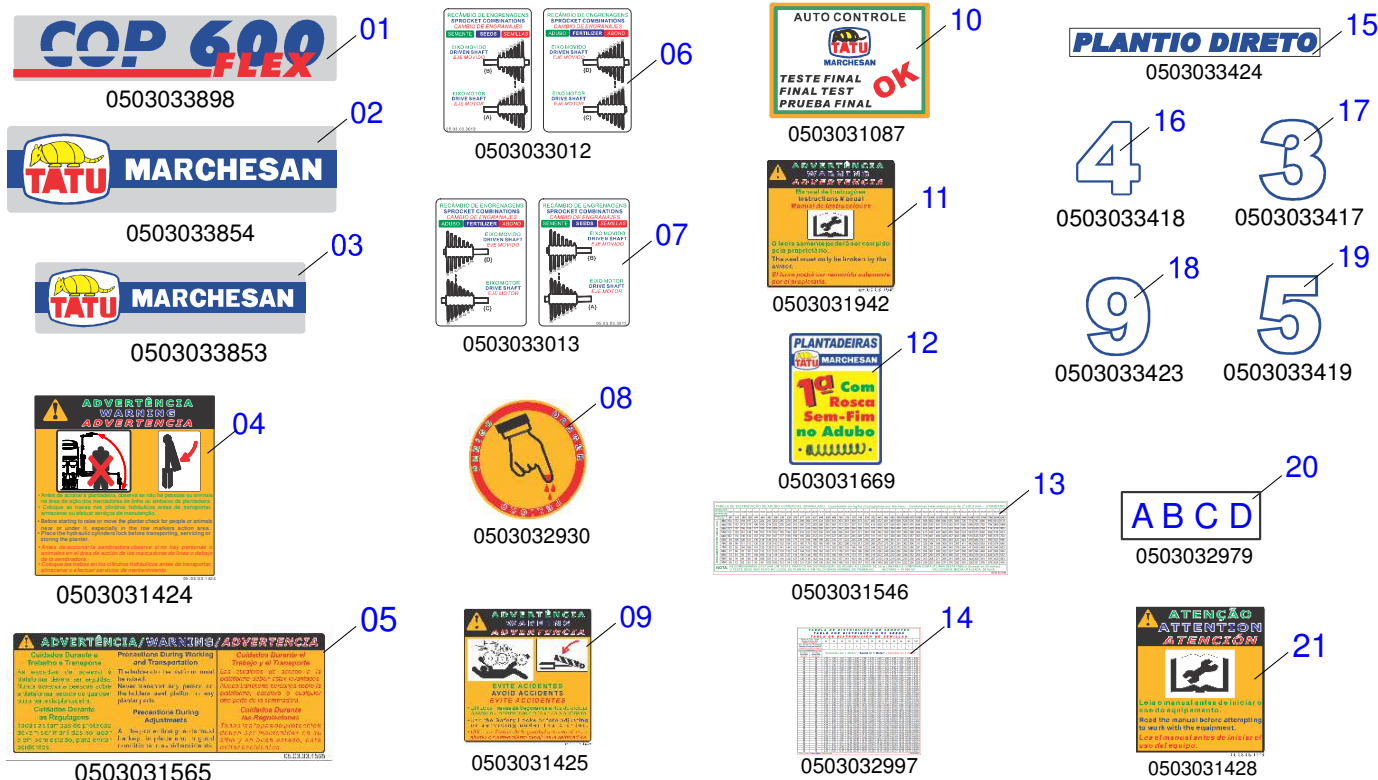 


Item	Code	Description	See page	QT
001	0503033898	ADHESIVE LABEL		02
002	0503033854	ADHESIVE LABEL		02
003	0503033853	ADHESIVE LABEL		02
004	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
005	0503031565	ADHESIVE LABEL CARE		02
006	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
007	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
008	0503032930	ADHESIVE LABEL DANGER		04
009	0503031425	ADHESIVE LABEL ATTENTION		02
010	0503031087	ADHESIVE LABEL		01
011	0503031942	ADHESIVE LABEL		01
012	0503031669	ADHESIVE LABEL		01
013	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
014	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
015	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
016	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
017	0503033417	ADHESIVE LABEL		02
018	0503033423	LABEL ADHESIVE NUMBER 9		02
019	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
020	0503032979	ADHESIVE LABEL LETTERS A B C D		02
021	0503031428	READ MANUAL DECAL		01

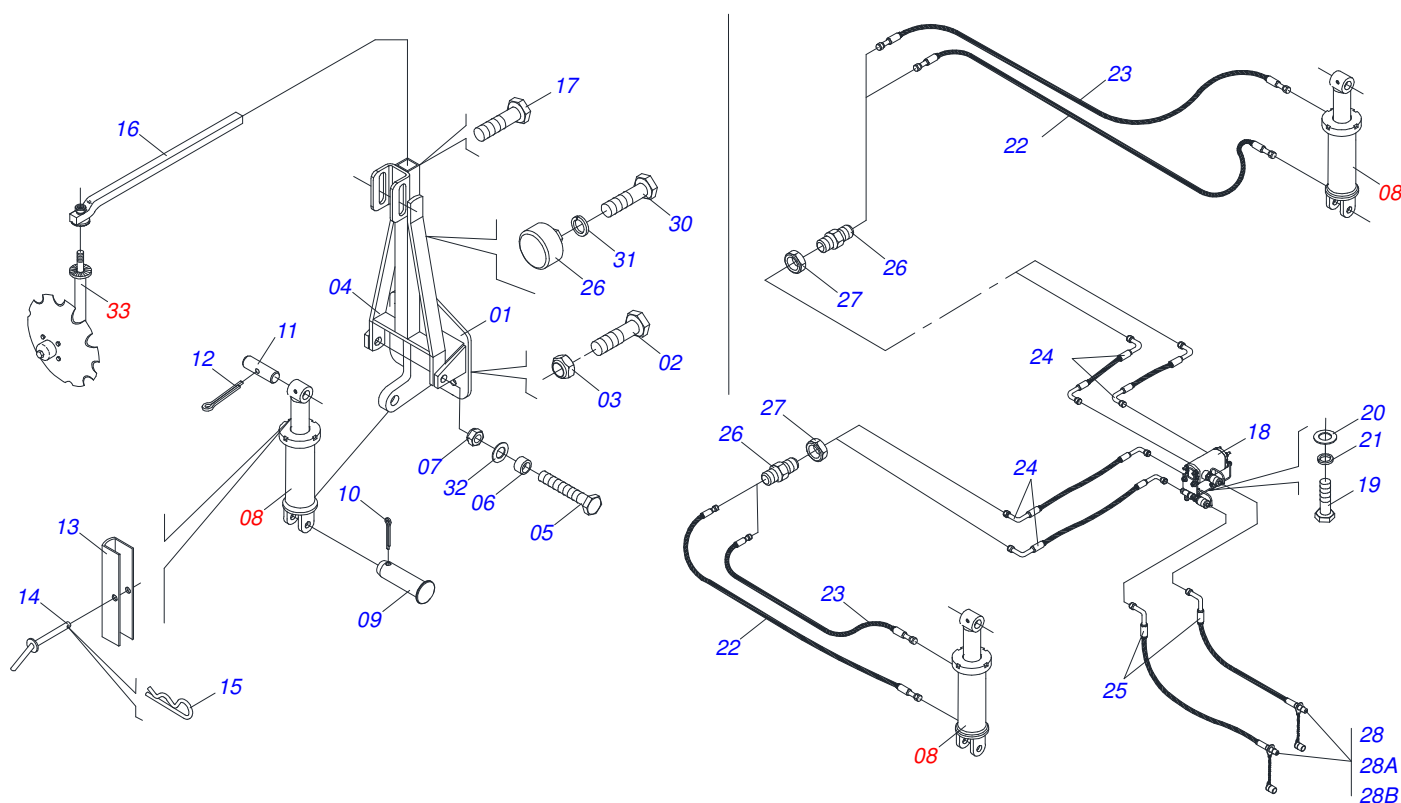 


Item	Code	Description	See page	QT
001	0511065449	ROW MARKER ARM SUPPORT		02
002	0501018059	3/4" X 2-1/4" BOLT		08
003	0503011255	3/4" LOCK NUT		08
004	0501069470	ROW MARKER ARM		02
005	0503011067	5/8" X 2-1/2" BOLT		04
006	0521010479	SLEEVE ARTICULATION		04
007	0503012795	5/8" HEX SELF ADJUSTING NUT		04
008	0511058449	HYDRAULIC CYLINDER	53	02
009	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
010	0503010571	1/4" X 1.1/2 COTTERPIN		02
011	0511015779	1" X 4.2" AXLE		02
012	0503010523	1/4" X 2" COTTERPIN		02
013	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
014	0501068994	0.3" X 3.1" LOCK PIN		02
015	0503030168	HAIR PIN		02
016	0501069643	890 TURNBUCKLE		02
017	0503010962	5/8" X 1-1/4" BOLT		04
018	0501054649	SEQUENTIAL VALVE ASSY	54	01
019	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
020	0501010984	FLAT WASHER		02
021	0503010025	3/8" SPRING WASHER		02
022	0501080635	3/8" X 19" TR-TR HOSE		02
023	0501080105	TR-TR HOSE ASSY		02
024	0501080750	3/8" X 149" TC-TC HOSE ASSY		04
025	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
026	0541012165	3/4" NIPPLE		04
027	0511018387	3/4" X 0.3 ADJUSTMENT VALVE NUT		04
028	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	23	02
028A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
028B	0503011882	MALE QUICK COUPLER CAP		01
029	0503011070	BEATER		02

Item	Code	Description	See page	QT
030	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
031	0503010019	1/2" SPRING WASHER		02
032	0501012140	FLAT WASHER		04
033	0501050633	MARKER DISC ASSY LINE	58	01

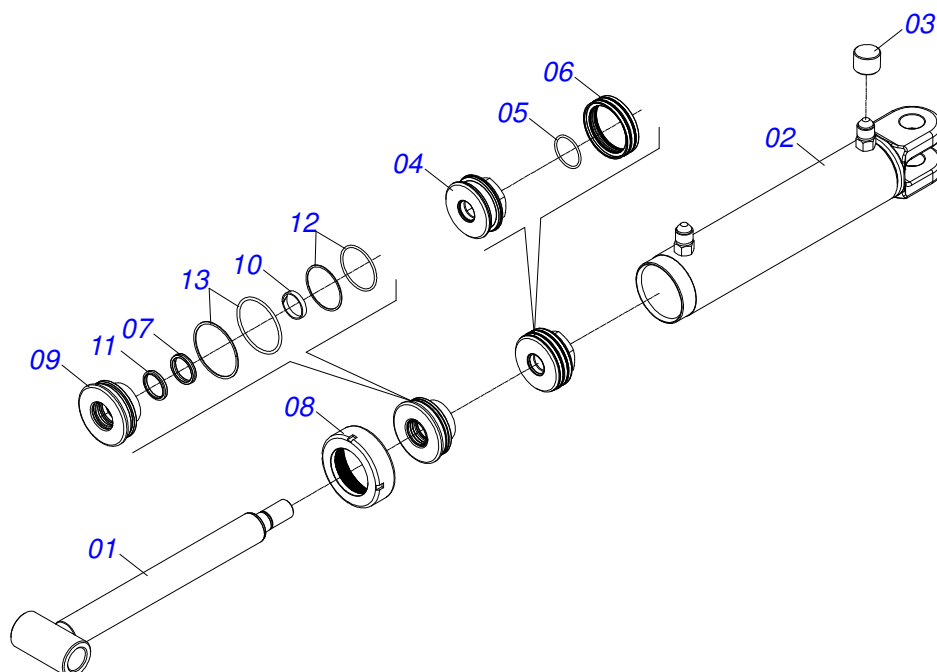 


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02

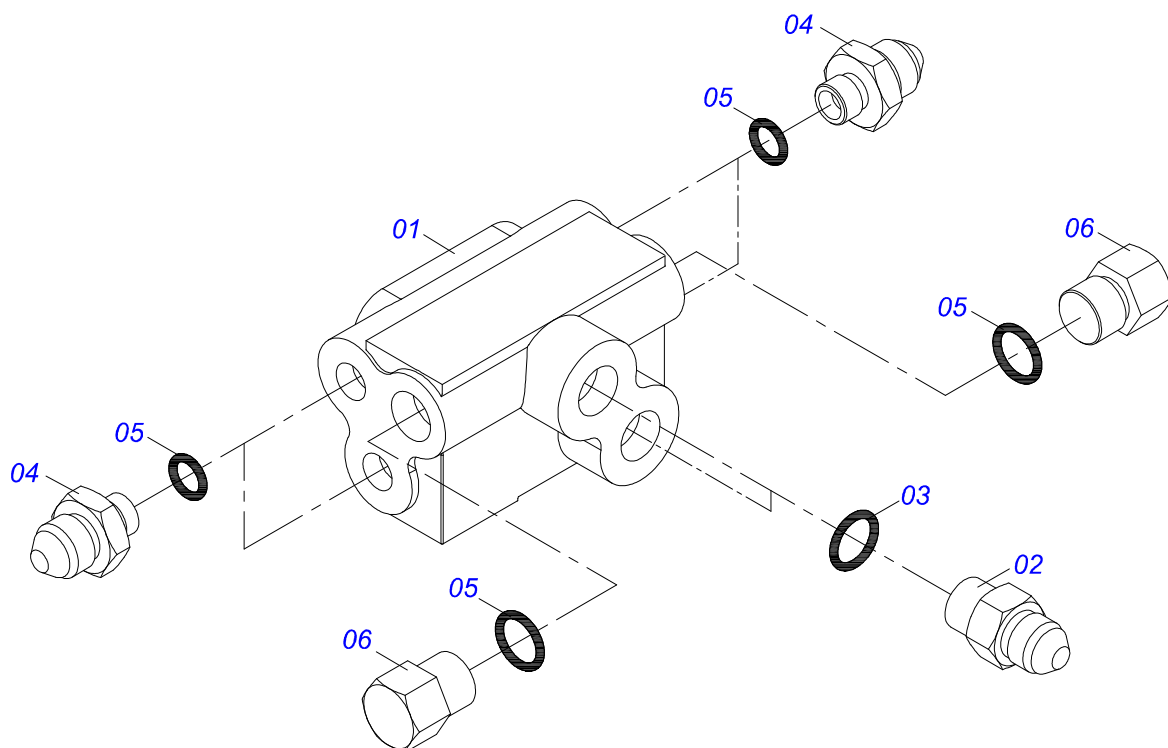 


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENTIAL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

RESTING ASSEMBLY

 
0511054971

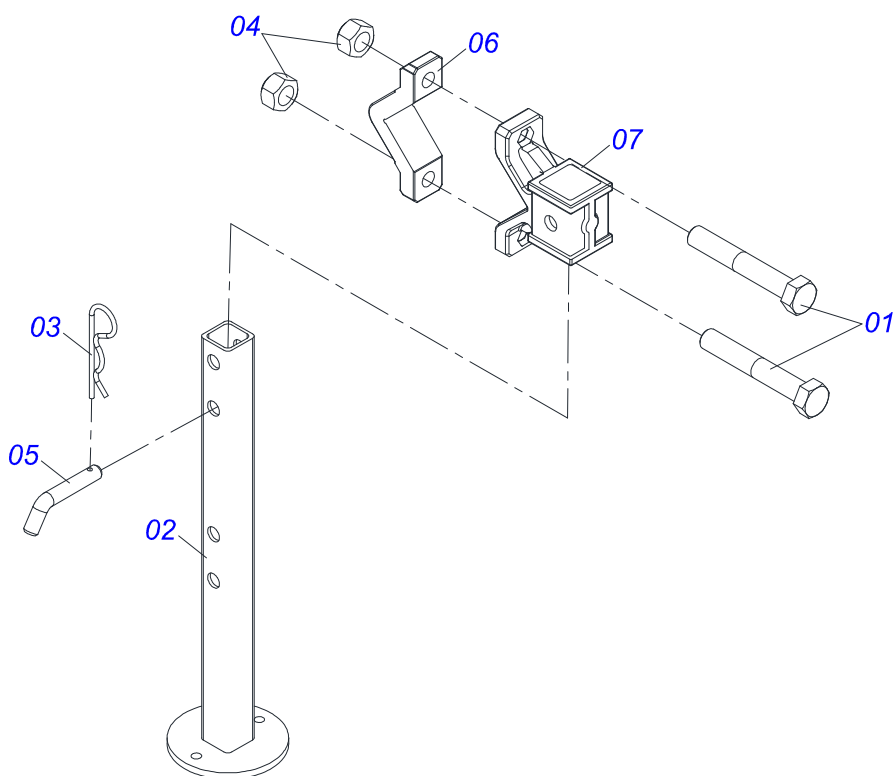


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

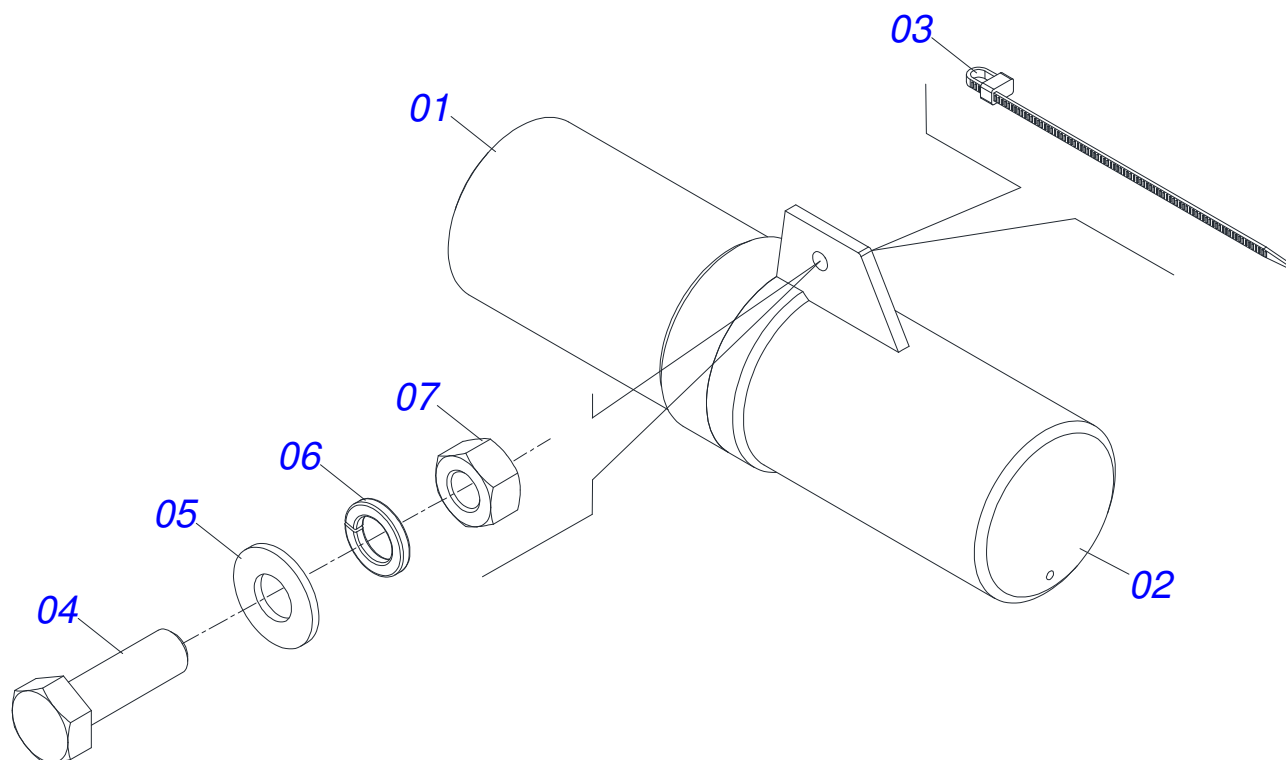 

Item	Code	Description	See page	QT
001	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
002	0511031562	BAG WITH MANUAL		01
003	0503010267	NYLON CLAMP		01
004	0503010363	5/16" X 1" BOLT		01
005	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
006	0503010179	5/16" ZN SPRING WASHER		01
007	0503010337	5/16" NUT		01

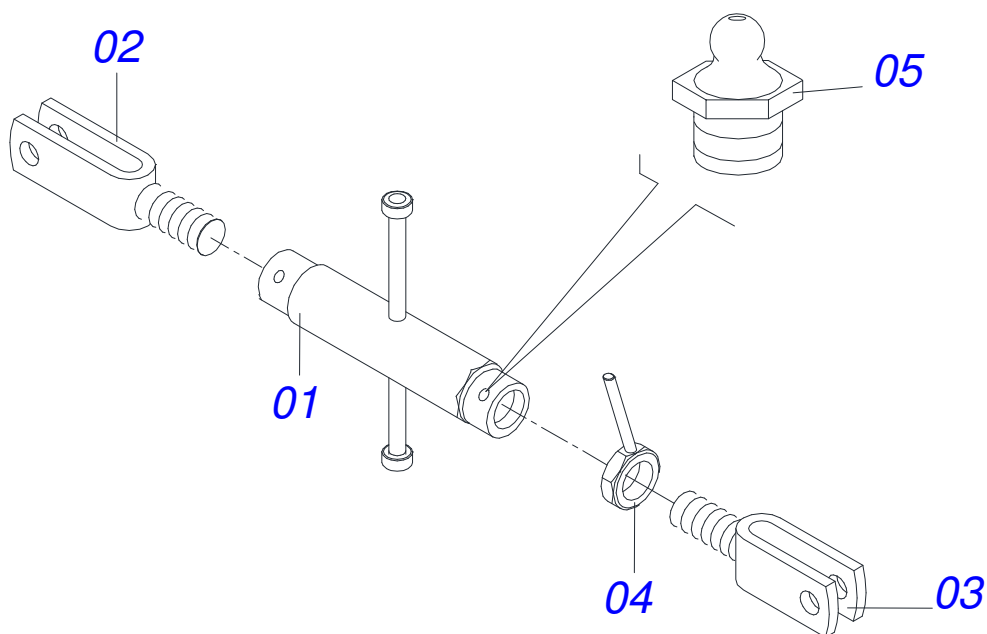 


Item	Code	Description	See page	QT
001	0501069529	653 TURNBUCKLE		01
002	0521062278	RIGHT TURNBUCKLE		01
003	0511062888	LH TURNBUCKLE		01
004	0501061056	RH LOCKNUT WITH HANDLER		01
005	0503010002	1800 GREASE FITTING		02

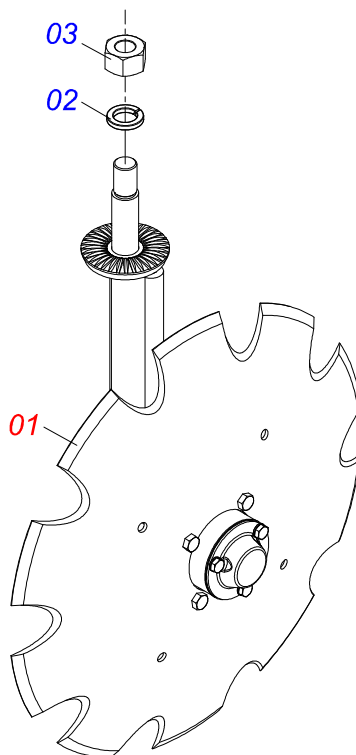 


Item	Code	Description	See page	QT
01	0511053904	DISC LINE MARKER	59	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

DISC LINE MARKER

 
0511053904

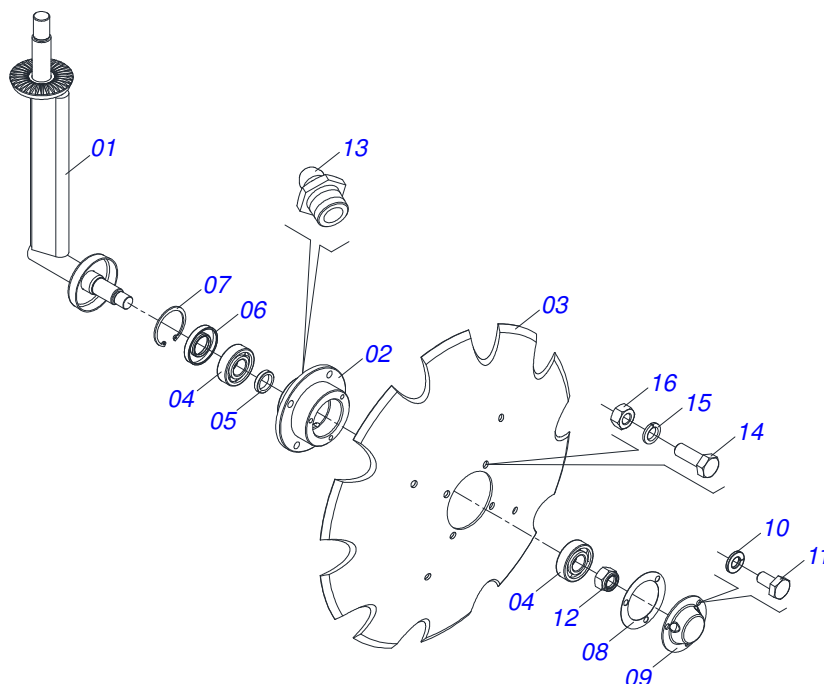


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

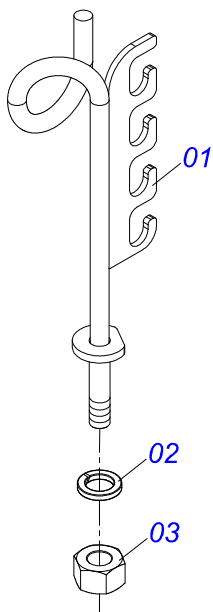 

Item	Code	Description	See page	QT
01	0521065611	HOSE SUPPORT		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

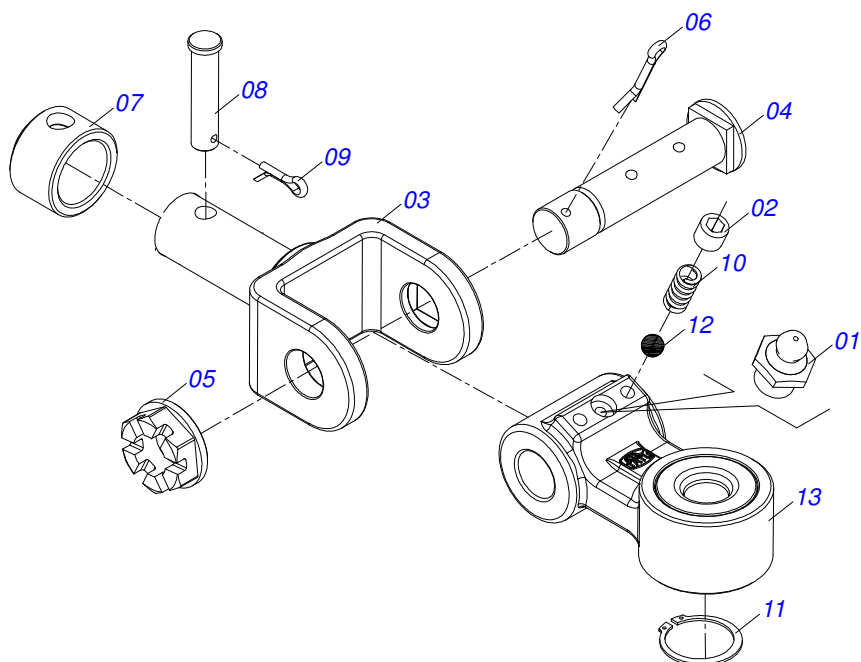 


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0571012612	PIVOT SHAFT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2 COTTERPIN		01
10	0503033731	COMPRESSION SPRING LEFT		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

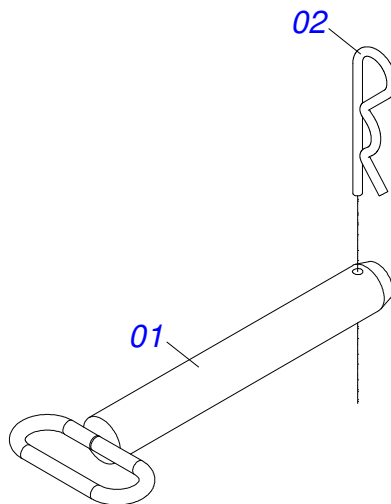 

Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HAIR PIN		01

DRAWBAR

 
0511053393

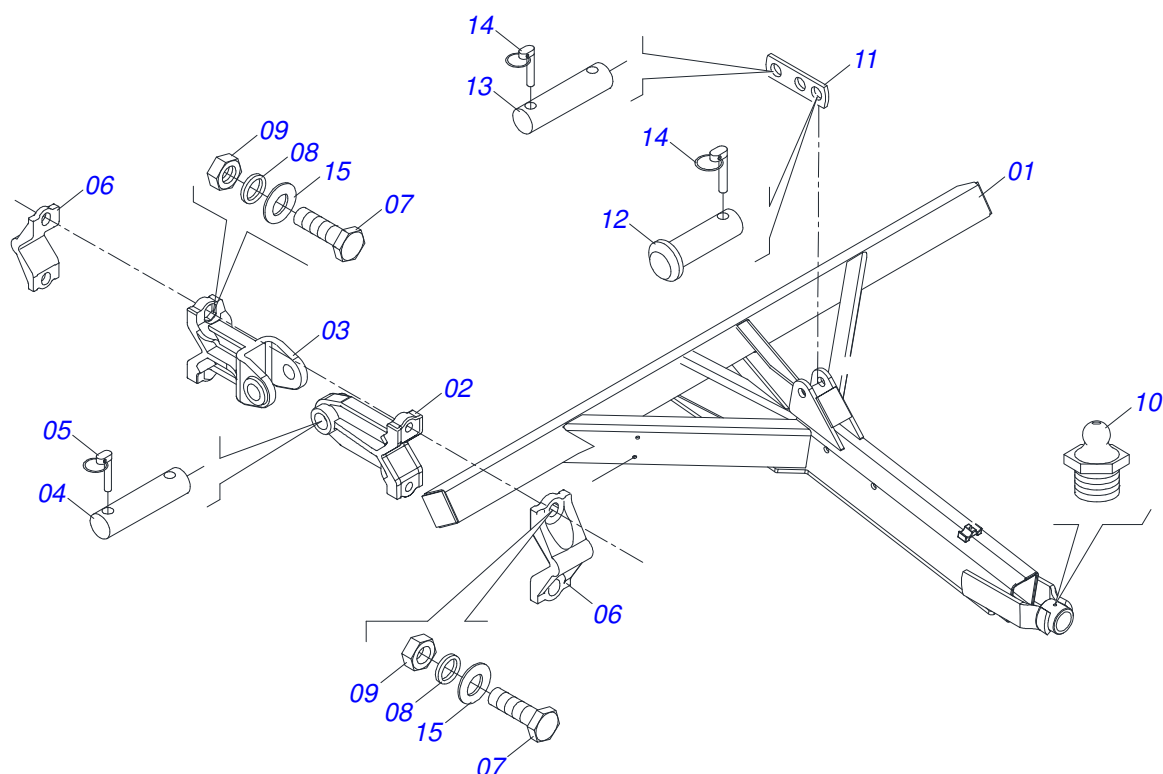


Item	Code	Description	See page	11 L
001	0511064808	DRAWBAR		01
002	0502012328	DRAWBAR SUPPORT FRONT FIXATION		04
003	0502012329	DRAWBAR FIXATION REAR SUPPORT		04
004	0561014393	COUPLING SHAFT		04
005	0503030119	LOCK PIN		04
006	0502012330	SUPPORT FIXER PIVOT		08
007	0503011084	3/4" X 5" BOLT		16
008	0503010023	3/4" SPRING WASHER		08
009	0503010014	3/4" NUT		08
010	0503010002	1800 GREASE FITTING		01
011	0561019087	DRAWBAR TRANSPORT LOCK		01
012	0521018532	1.4" X 12" COUPLING SHAFT		01
013	0521010578	COUPLING SHAFT		01
014	0503030085	LOCK PIN		03
015	0501010322	FLAT WASHER		08

SQUARE AXLE ASSEMBLY (730)

 0511053342

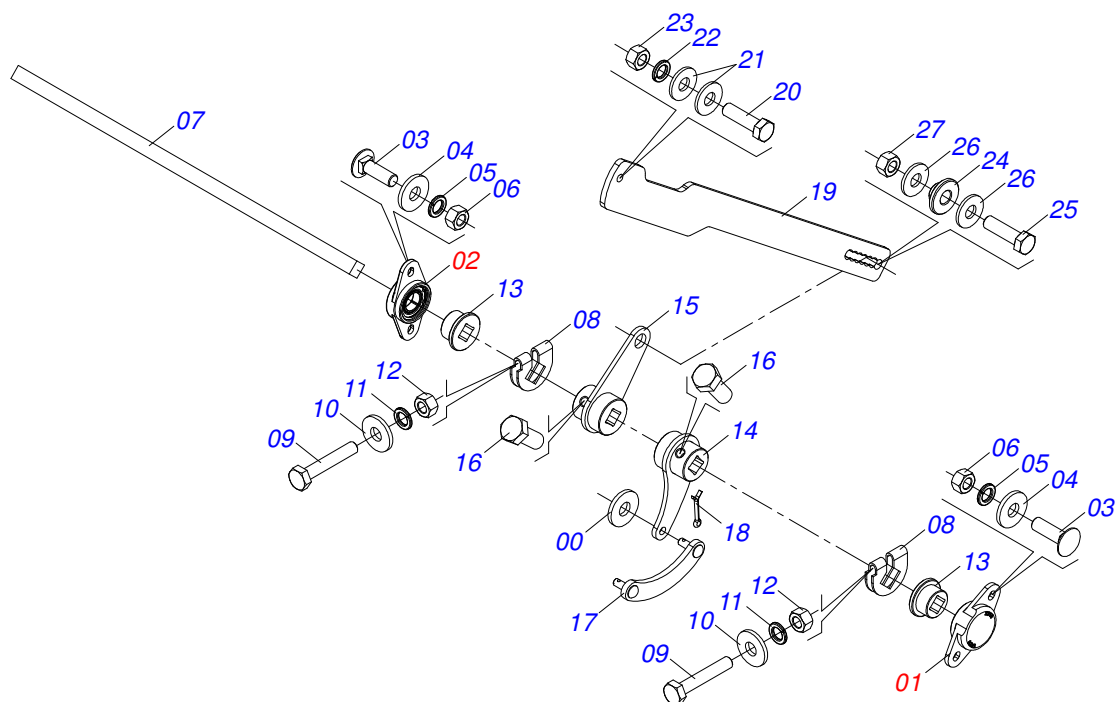


Item	Code	Description	See page	QT
01	0501056271	BEARING CLOSED	31	02
02	0501056444	BEARING WITH BALL BEARING	30	02
03	0503011953	5/16" X 1" BOLT		08
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
05	0503010179	5/16" ZN SPRING WASHER		08
06	0503010337	5/16" NUT		08
07	0511014218	3/4" X 28.7"SQUARE SHAFT		02
08	0521010691	AXLE FASTENER		04
09	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		04
10	0511017303	FLAT WASHER		04
11	0503010143	1/4" SPRING WASHER		04
12	0503010144	1/4" NUT		04
13	0503030303	SUPPORT WASHER		04
14	0521061852	LEVER RATCHET		02
15	0521061847	AXLE ADRIVING ASSY		02
16	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
17	0521061849	DISASSEMBLE LEVER		02
18	0503010140	1/8" X 3/4" COTTERPIN		04
19	0571012792	LOWER LEVER		02
20	0503011082	C1/2" X 1.3/4" SCREW		02
21	0511017302	FLAT WASHER		04
22	0503010019	1/2" SPRING WASHER		02
23	0503010060	1/2" NUT		02
24	0561016797	SLEEVE UNION LEVER ARM/DESARM		02
25	0501010096	3/8" X 2" BOLT		02
26	0501010984	FLAT WASHER		04
27	0503010026	3/8" NUT		04

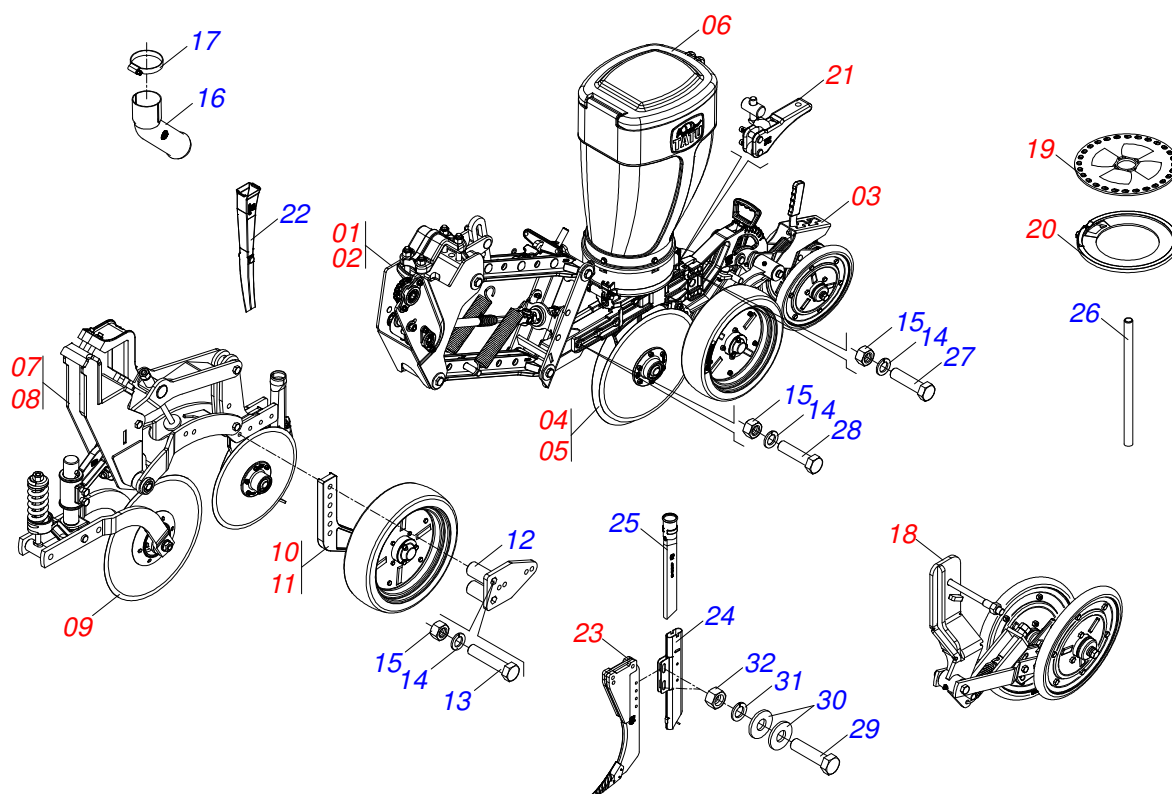 

Item	Code	Description	See page	QT
01	0521051619	FRONT LINE SHORT MECHANICAL SEED	66	01
02	0521051620	FRONT LINE MECHANICAL SEED LINE	67	01
03	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	76	01
04	0511057136	REAR RIGHT SEED LINE	77	01
05	0511057137	REAR LEFT LINE SEED	78	01
06	0511056608	TITANIUM SEED SYSTEM	87	01
07	0511053023	LONG FERTILIZER LINE	88	01
08	0511053024	FERTILIZER SHORT LINE	89	01
09	0511051819	DC 20 SEMI MOUNTED	93	01
10	0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL	95	01
11	0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	96	01
12	0511065909	DEPTH FIXER BASE		01
13	0503010547	1/2" X 4" BOLT		01
14	0503010019	1/2" SPRING WASHER		01
15	0503010060	1/2" NUT		01
16	0503031050	CURVED CONDUCTOR		01
17	0503010246	CLAMP		01
18	0511053067	"V" WHEEL ASSY COBRIDORA FERTILIZER	100	01
19	0503062066	DISC SET WITH CORN RING	104	01
20	0503062067	DISC SET / RING SOY 90F TITANIUM	105	01
21	0511052024	FAST CLOSING SET	106	01
22	0503033672	NOZZLE WITHOUT TITANIUM		01
23	0501110231	SCARIFIER HEAD WITH SPIKE 0061	107	01
24	0521069127	BOTTOM NOZZLE FERTILIZER		01
25	0503030483	FERTILIZER SOCKET		01
26	0531013600	PRESS ADJUSTMENT LEVER		01
27	0503010905	1/2" X 2-1/4" BOLT		01
28	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		01
29	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
30	0501010984	FLAT WASHER		01
31	0503010025	3/8" SPRING WASHER		01




Item	Code	Description	See page	QT
32	0503010026	3/8" NUT		01

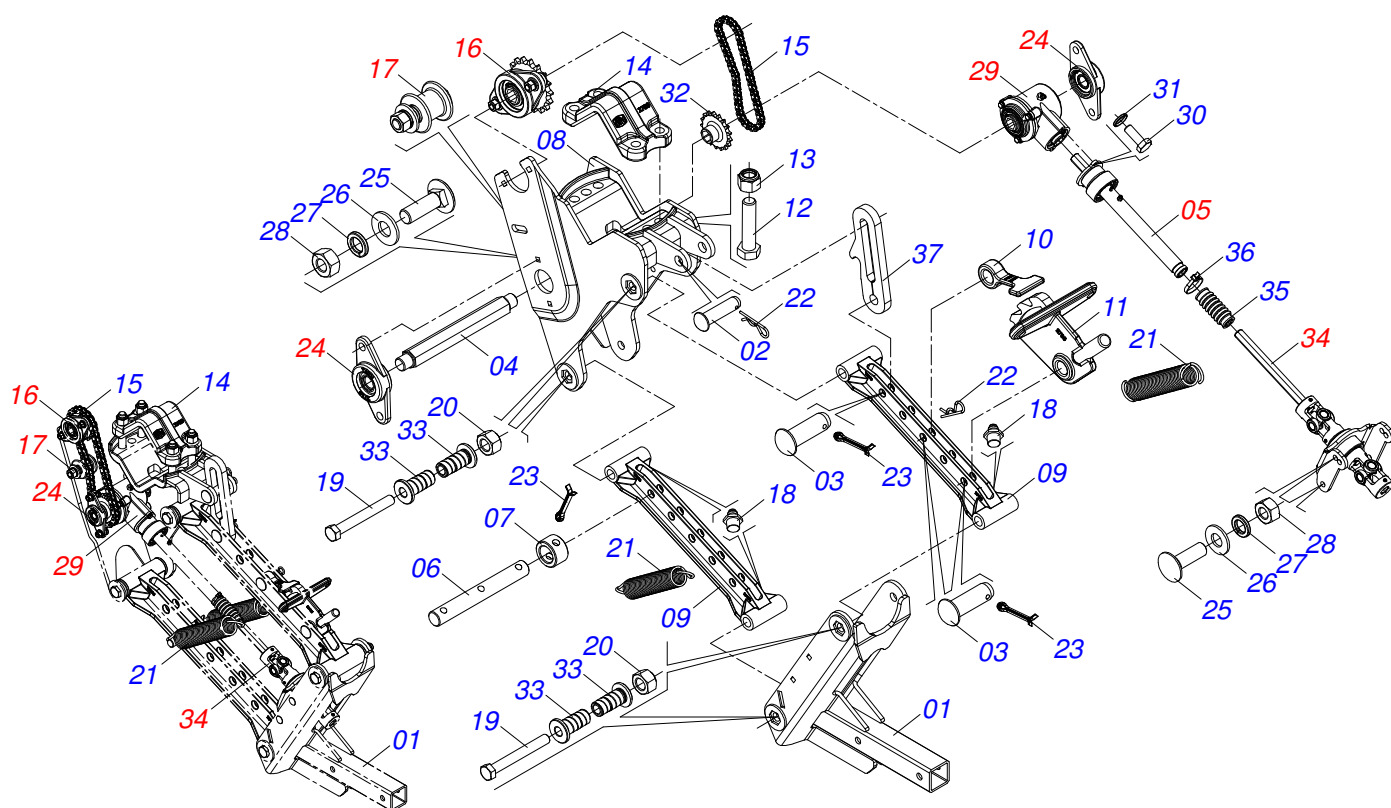 


Item	Code	Description	See page	QT
01	0521063526	SEED LINE REAR FRAME		01
02	0571012443	COUPLING SHAFT		01
03	0571012442	COUPLING SHAFT		03
04	0571012441	TRANSMISSION AXLE		01
05	0511052393	BEARING FOLLOWER ROW ASSY	68	01
06	0571012449	CONTROL AXLE		01
07	0571012448	LOCK SLEEVE AXLE REGULATION		01
08	0521068100	SUPPORT FRONT LINE SHORT SEED		01
09	0502012784	DRIVER PIVOT		02
10	1902012814	BODY LOCK REGULATOR LEVER REGULATOR SEED		01
11	0502012785	SEED ROW ADJUSTMENT LEVER ASSY		01
12	0503017857	BOLT 5/8 UNF 4		04
13	0503010811	5/8" UNF SELF ADJUSTING NUT		04
14	0502012789	FIXER SUPPORT FERTILIZER ROW		01
15	0503016501	40-1 X 49 CHAIN LINK + MENDING		01
16	0511050609	BEARING WITH 17Z GEAR ASSY	69	01
17	0511055260	SEED ROW CHAIN TENSIONER	71	01
18	0503010002	1800 GREASE FITTING		04
19	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
20	0503012412	5/8 UNC SELF LOCKING NUT		04
21	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING		02
22	0503030168	HAIR PIN		02
23	0503010131	3/16" X 1-1/2" COTTERPIN		03
24	0511054635	BEARING AXLE BODY	72	02
25	0503011953	5/16" X 1" BOLT		08
26	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
27	0503010179	5/16" ZN SPRING WASHER		08
28	0503010337	5/16" NUT		08
29	0511057159	TRANSMISSION BOX SEED LINE	73	01
30	0503011378	M6X1X16 C S 8.8 ZN BOLT		02
31	0503015110	M06 SPRING WASHER		02

Item	Code	Description	See page	QT
32	0502012782	17Z GEAR WITH HEX HOLE		01
33	0581014435	SLEEVE ARM LINE SEED		08
34	0511057625	ROW SEED BEARING	74	01
35	0503032984	HOOD HEX AXLE ROW		01
36	0503013100	NYLON CLAMP		01
37	0581015124	LIMITER COURSE		01

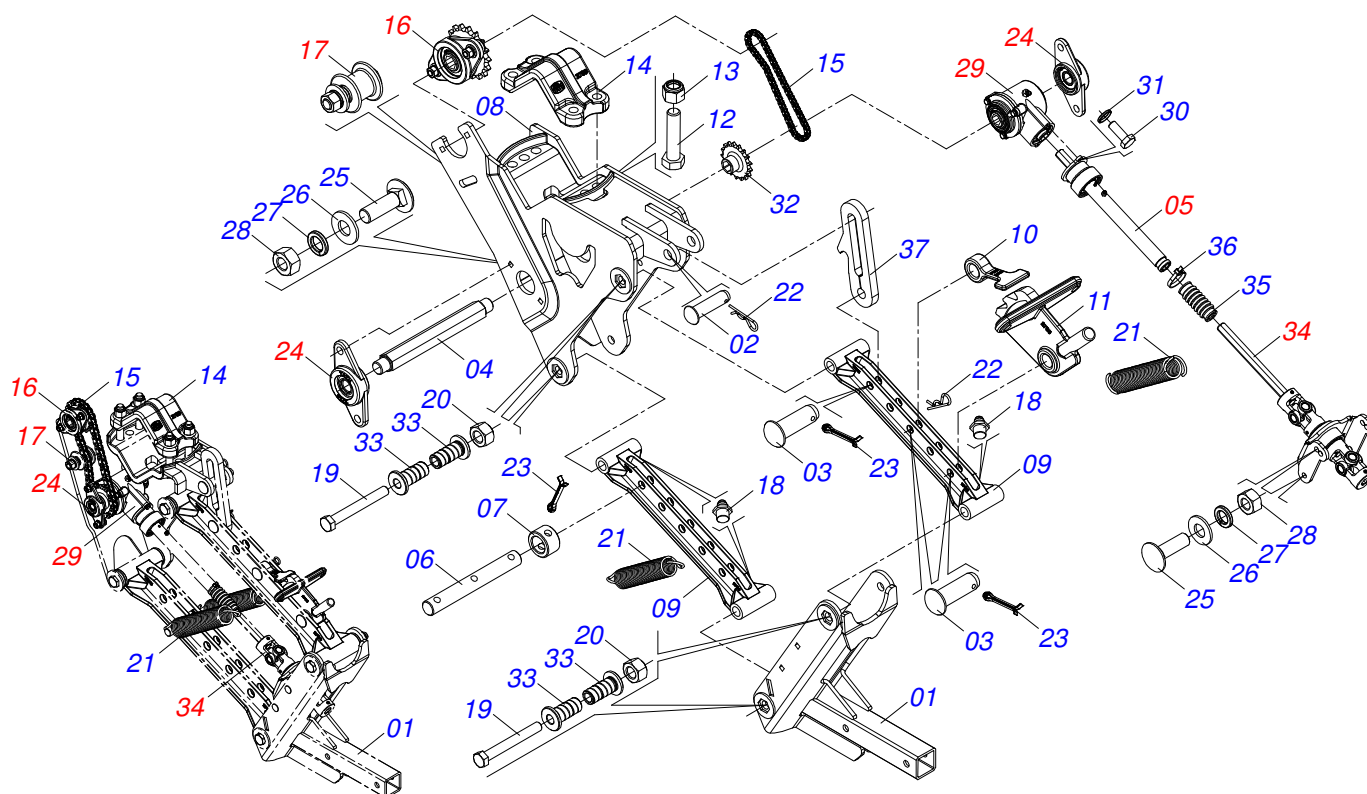 


Item	Code	Description	See page	QT
01	0521063526	SEED LINE REAR FRAME		01
02	0571012443	COUPLING SHAFT		01
03	0571012442	COUPLING SHAFT		03
04	0571012441	TRANSMISSION AXLE		01
05	0511052393	BEARING FOLLOWER ROW ASSY	68	01
06	0571012449	CONTROL AXLE		01
07	0571012448	LOCK SLEEVE AXLE REGULATION		01
08	0521068102	LONG SEED LINE FRONT SUPPORT		01
09	0502012784	DRIVER PIVOT		02
10	1902012814	BODY LOCK REGULATOR LEVER REGULATOR SEED		01
11	0502012785	SEED ROW ADJUSTMENT LEVER ASSY		01
12	0503017857	BOLT 5/8 UNF 4		04
13	0503010811	5/8" UNF SELF ADJUSTING NUT		04
14	0502012789	FIXER SUPPORT FERTILIZER ROW		01
15	0503012142	40-1 CHAIN X 61 LINK + MENDING		01
16	0511050609	BEARING WITH 17Z GEAR ASSY	69	01
17	0511055260	SEED ROW CHAIN TENSIONER	71	01
18	0503010002	1800 GREASE FITTING		04
19	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
20	0503012412	5/8 UNC SELF LOCKING NUT		04
21	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING		02
22	0503030168	HAIR PIN		02
23	0503010131	3/16" X 1-1/2" COTTERPIN		03
24	0511054635	BEARING AXLE BODY	72	02
25	0503011953	5/16" X 1" BOLT		08
26	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
27	0503010179	5/16" ZN SPRING WASHER		08
28	0503010337	5/16" NUT		08
29	0511057159	TRANSMISSION BOX SEED LINE	73	01
30	0503011378	M6X1X16 C S 8.8 ZN BOLT		02
31	0503015110	M06 SPRING WASHER		02


Item	Code	Description	See page	QT
32	0502012782	17Z GEAR WITH HEX HOLE		01
33	0581014435	SLEEVE ARM LINE SEED		08
34	0511057625	ROW SEED BEARING	74	01
35	0503032984	HOOD HEX AXLE ROW		01
36	0503013100	NYLON CLAMP		01
37	0581015124	LIMITER COURSE		01

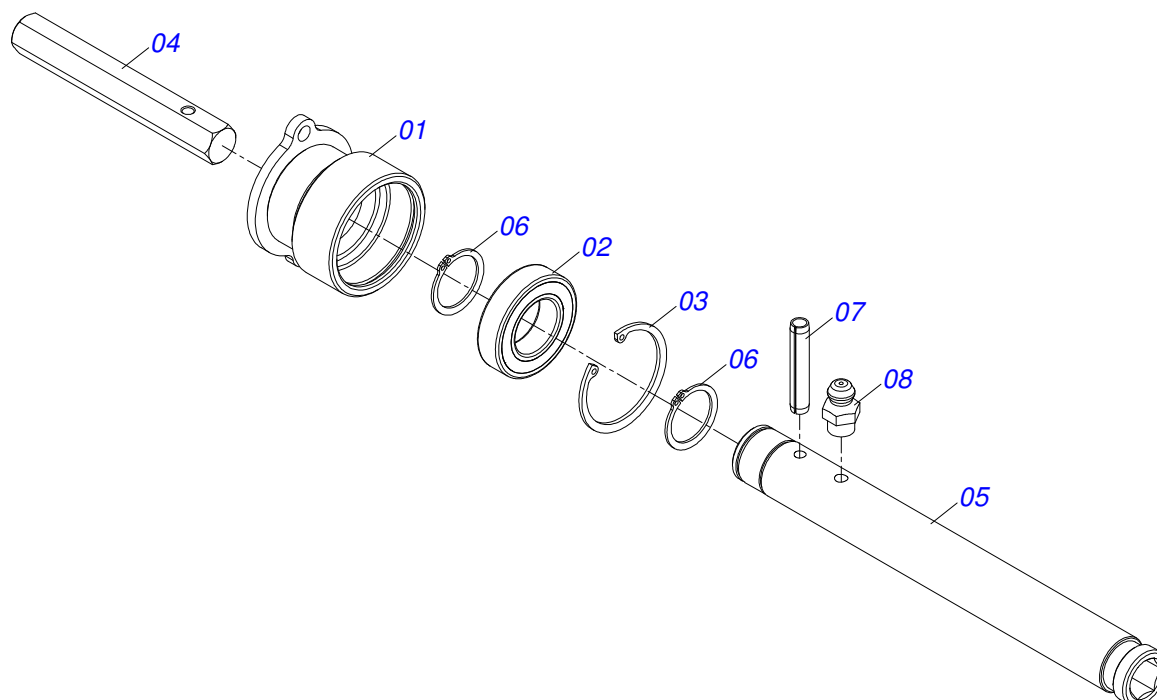 


Item	Code	Description	See page	QT
01	0521063532	BEARING FOLLOWER ROW ASSY		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0571012450	COP FLEX AXLE		01
05	0571012459	COP FLEX AXLE		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		02
07	0503015356	SPRING PIN		01
08	0503010691	1/4" GREASE FITTING		01

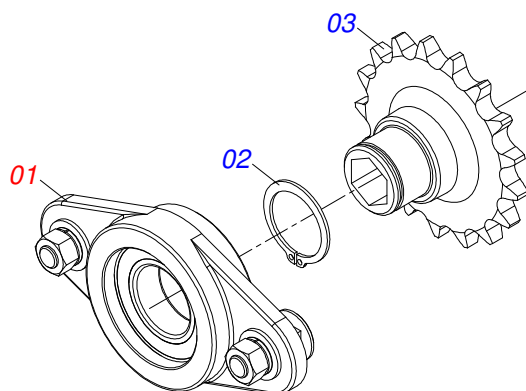 


Item	Code	Description	See page	QT
01	0511050617	FRONT SEED ROW BEARING	70	01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0502012819	17Z GEAR WITH HEX HOLE		01

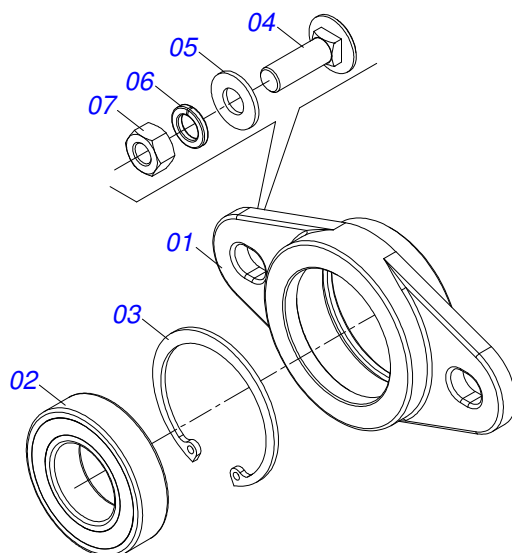 


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02

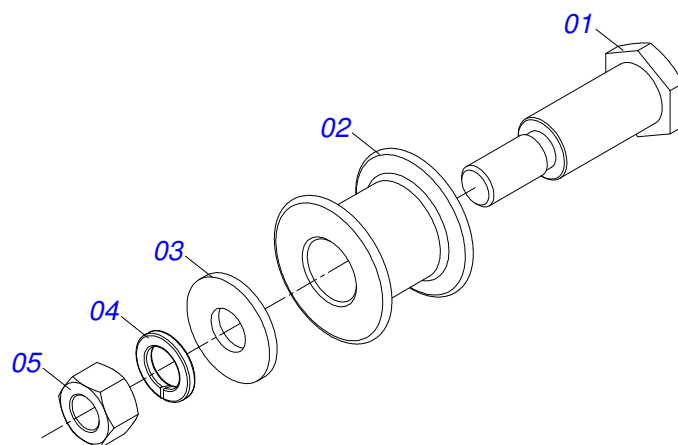 


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

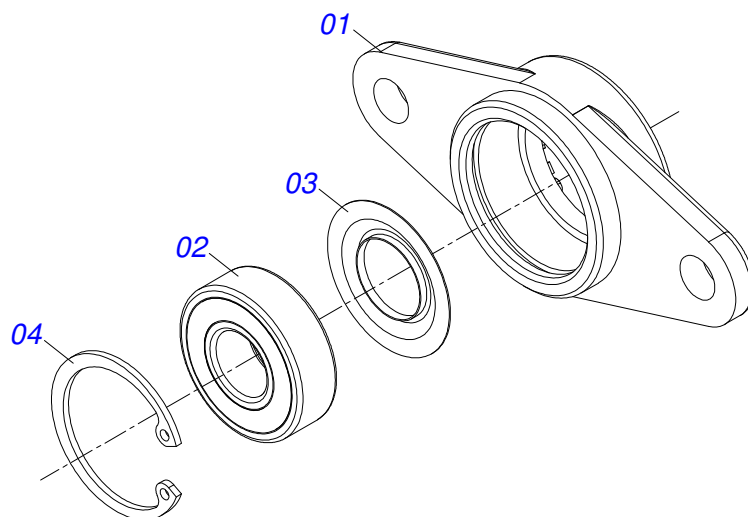 


Item	Code	Description	See page	QT
01	0502012718	BEARIN BODY		01
02	0503012882	BEARING		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

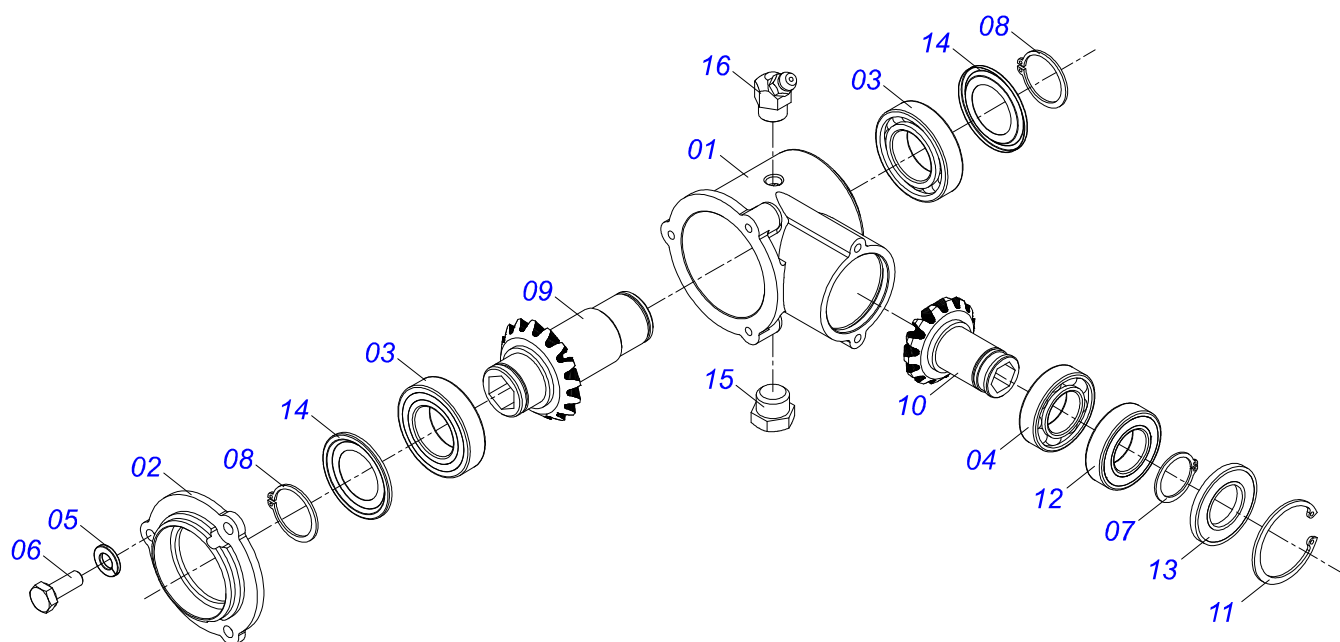 


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01

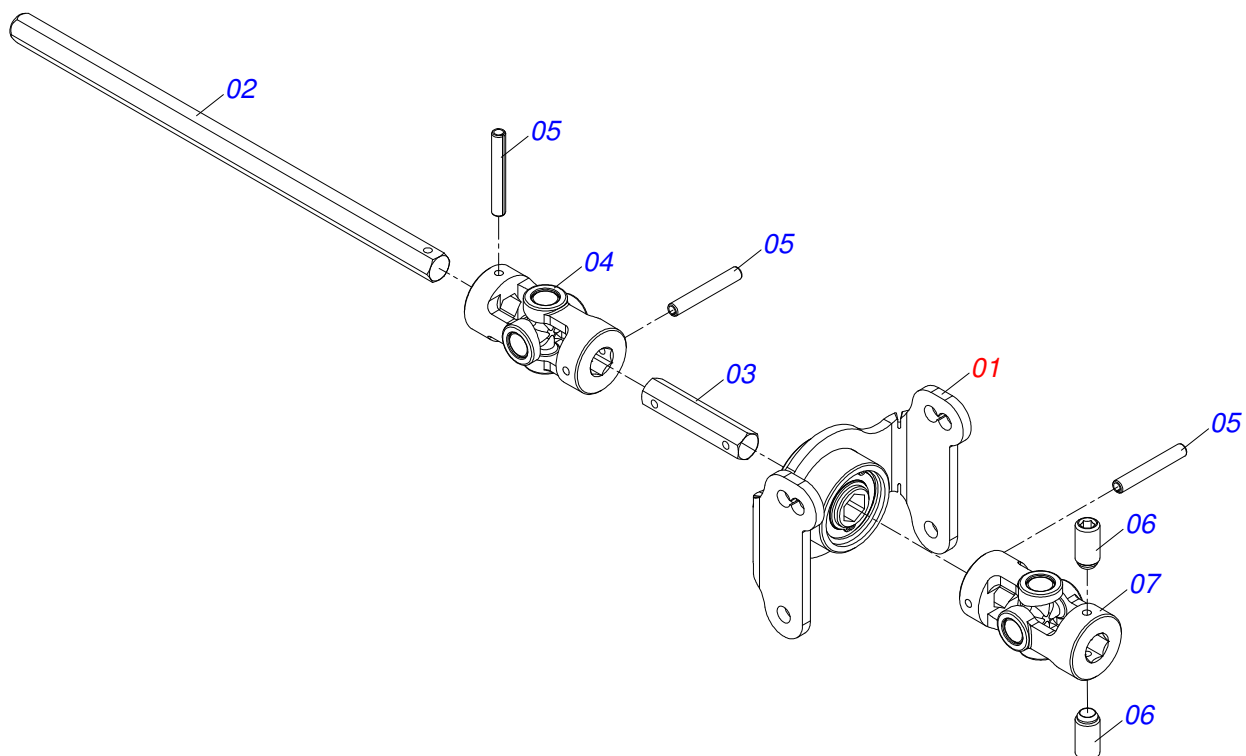 


Item	Code	Description	See page	QT
01	0511057156	BEARING LINE SEMI MOUNTED	75	01
02	0571018731	HEX AXLE		01
03	0571017900	5/8" X 77" HEX AXLE		01
04	0501056296	UNIVERSAL JOINT		01
05	0503011855	0.2" X 1.8" SPRING PIN		03
06	0503013958	1/4" X 1" BOLT		02
07	0561014778	HEX UNIVERSAL JOINT		01

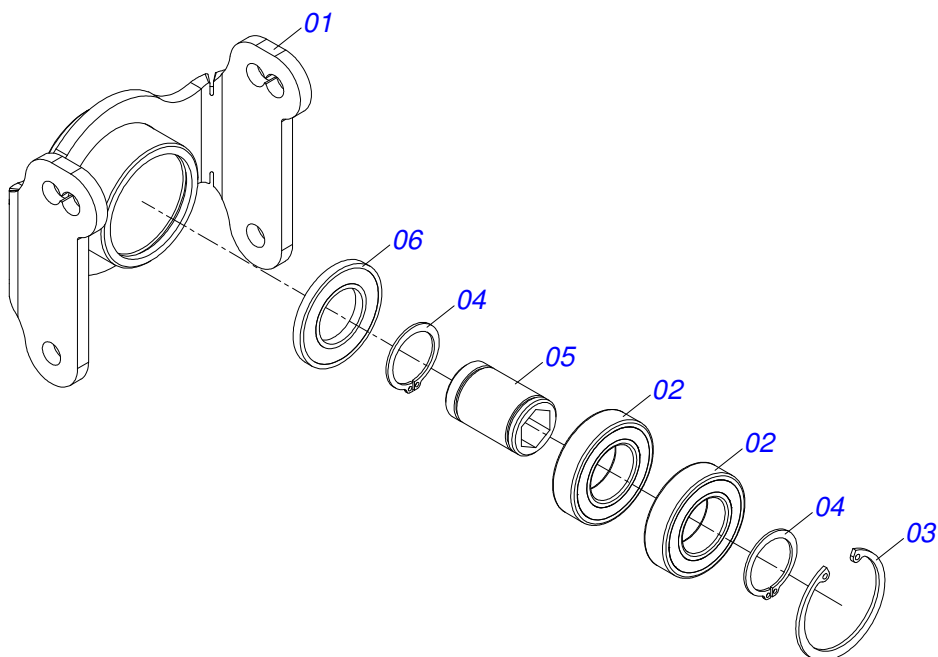 


Item	Code	Description	See page	QT
01	0521065913	ROW SEED BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		02
05	0571017815	BEARING AXLE BODY		01
06	0503017008	SEAL RING		01

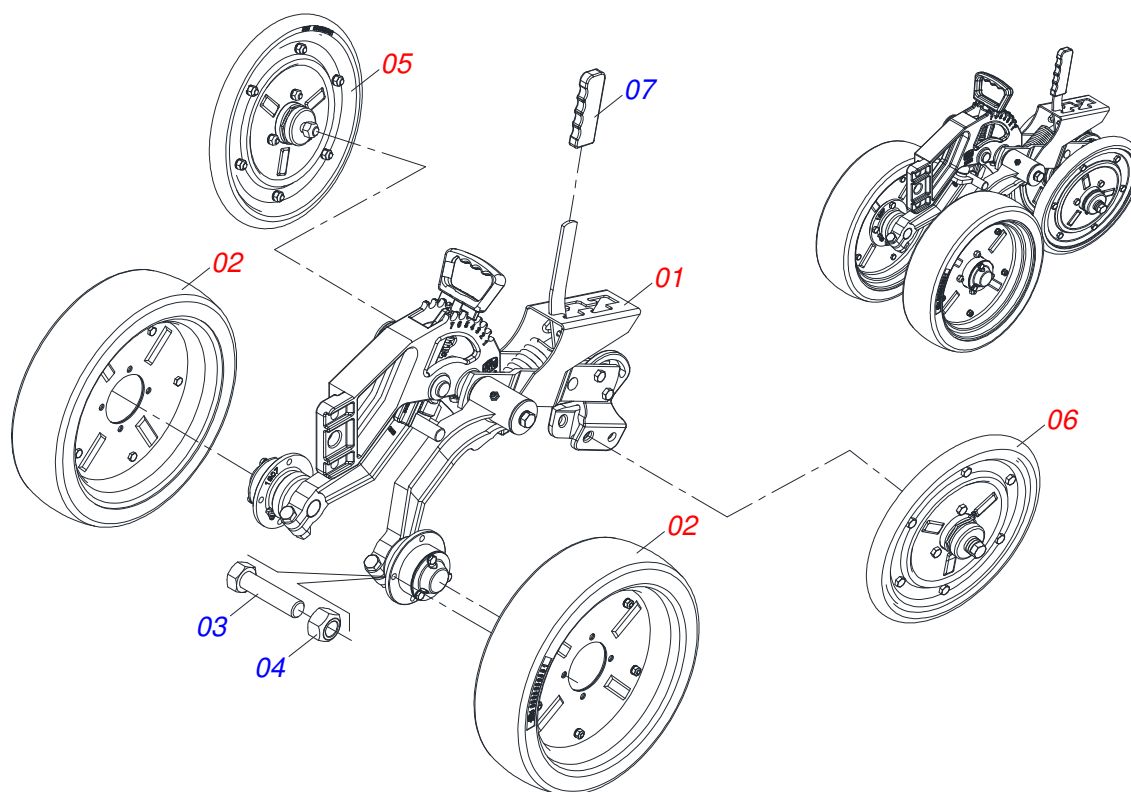 


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL		01
02	0501052538	DEPTH BAND WITH ARMS	99	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	101	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	102	01
07	0503033942	COVER REGULATORY WHEEL		01

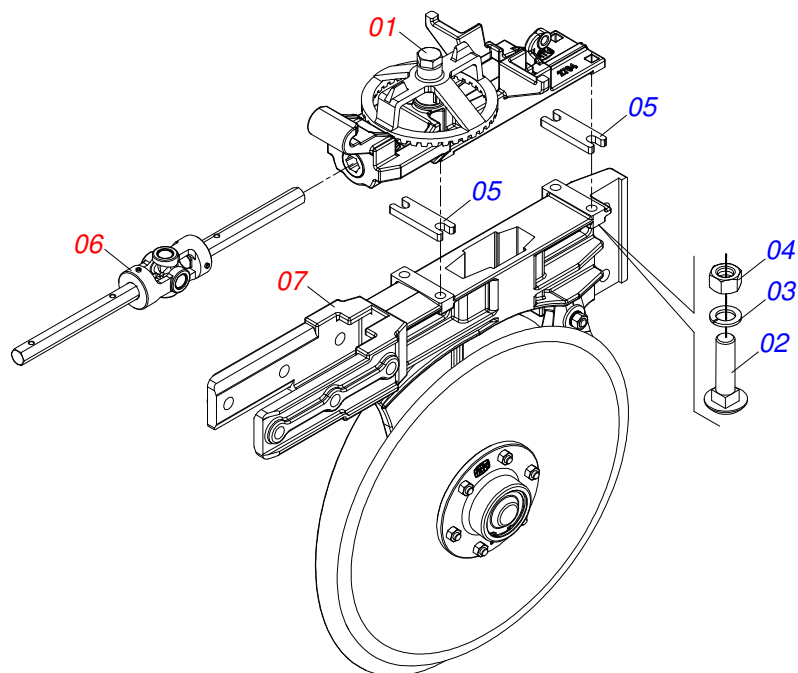 


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8	79	01
02	0503017813	3/8" X 2" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0571012451	CHOCK		02
06	0511053284	UNIVERSAL JOINT WITH HEX AXLE	80	01
07	0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	81	01

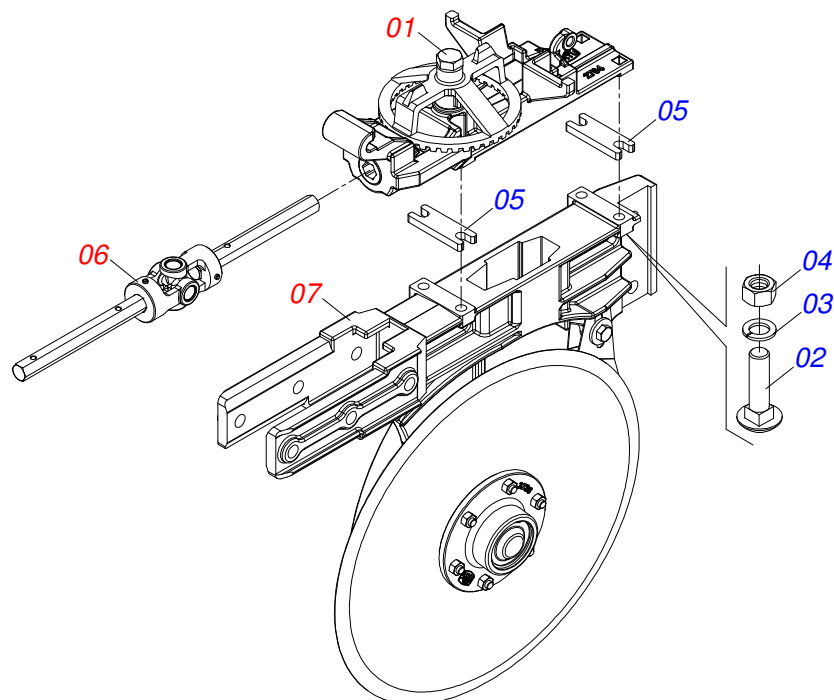 


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8	79	01
02	0503017813	3/8" X 2" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0571012451	CHOCK		02
06	0511053284	UNIVERSAL JOINT WITH HEX AXLE	80	01
07	0511056586	15 X 15 SEED DDD LEFT	82	01

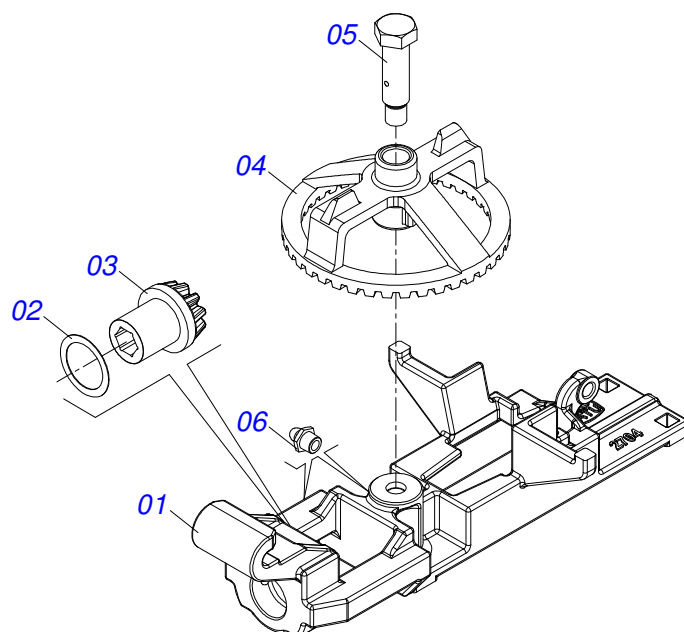 


Item	Code	Description	See page	QT
01	0502012704	BASE FIXING SYSTEM		01
02	0501013354	FLAT WASHER		01
03	0502012639	12Z LOWER CONICAL GEAR		01
04	0502011418	40Z CONICAL GEAR		01
05	0511018700	AXLE		01
06	0503010002	1800 GREASE FITTING		02

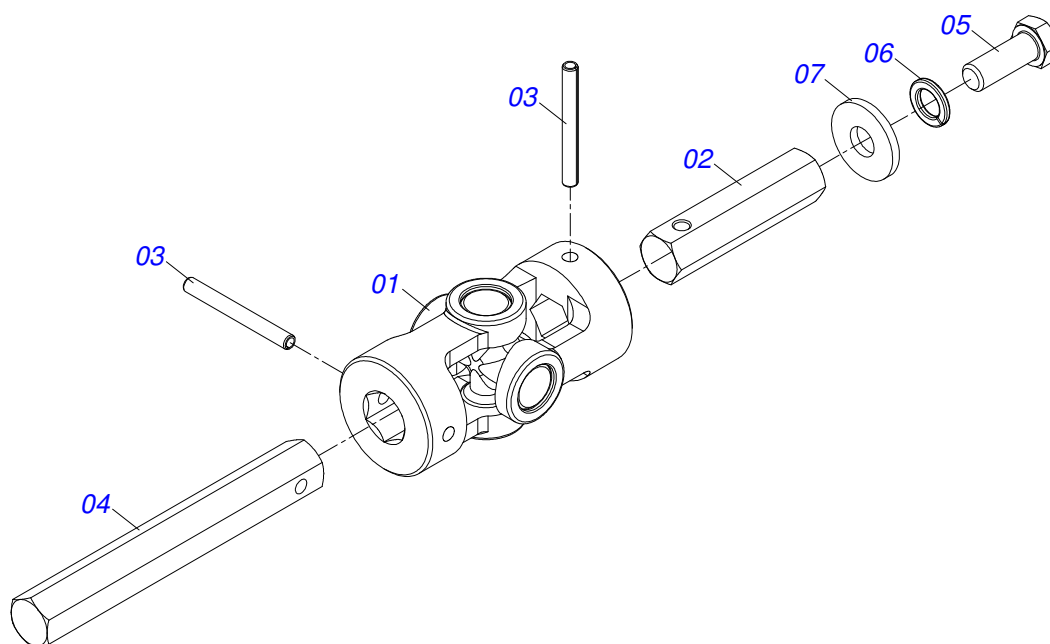 


Item	Code	Description	See page	QT
01	0501056296	UNIVERSAL JOINT		01
02	0551017540	5/8" X 73 AXLE HEX		01
03	0503011855	0.2" X 1.8" SPRING PIN		02
04	0571012447	TRANSMISSION AXLE		01
05	0503010237	3/8" X 1" BOLT		01
06	0501010984	FLAT WASHER		01
07	0503010025	3/8" SPRING WASHER		01

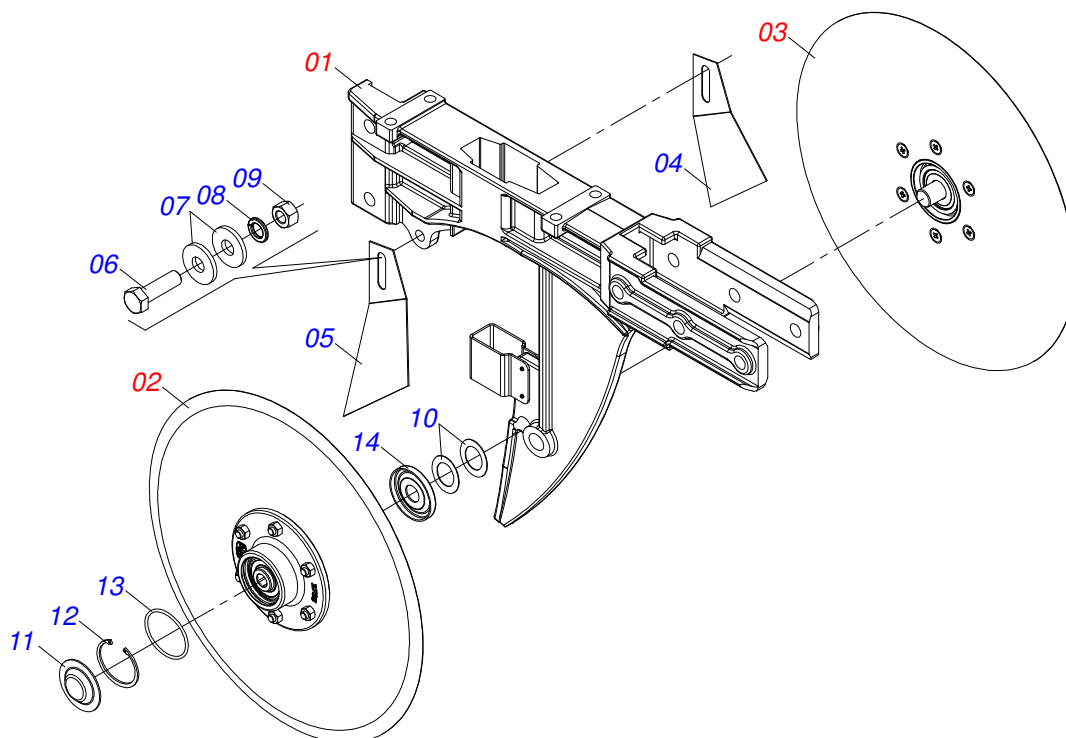 


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT	83	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	85	01
03	0511053172	LEFT LOW CUBE WITH DISC 15	86	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511015098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O-RING		02
14	0511011927	DUST CLOAK		02

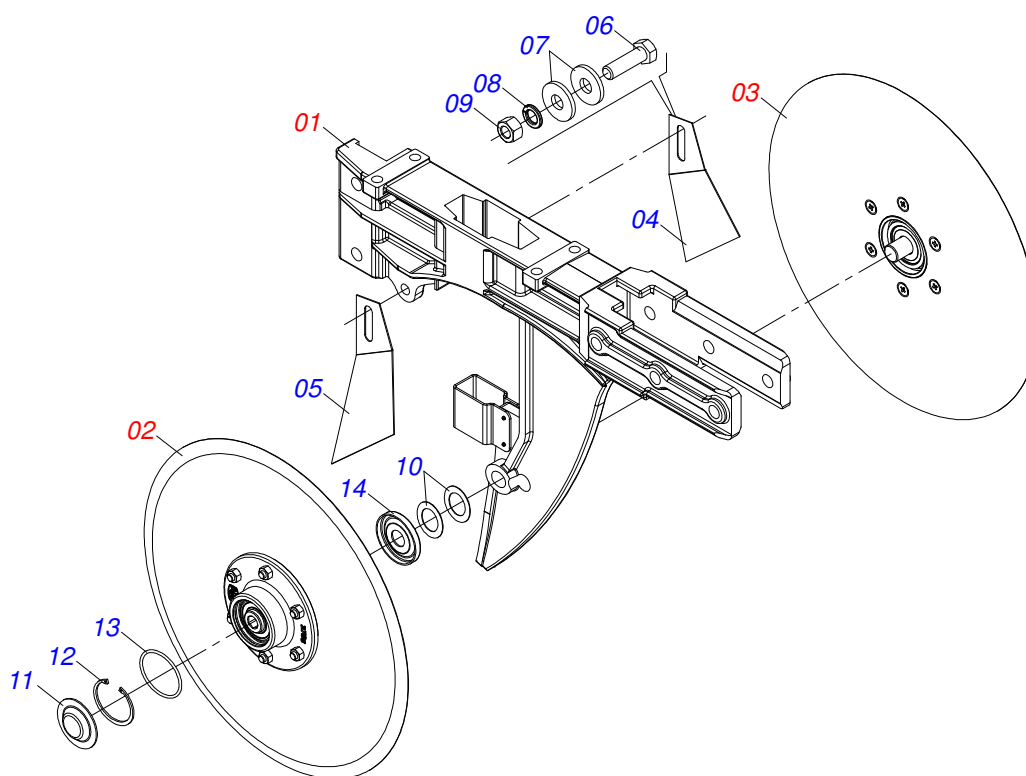 


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE	84	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	85	01
03	0511053172	LEFT LOW CUBE WITH DISC 15	86	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503011443	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511015098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O-RING		02
14	0511011927	DUST CLOAK		02

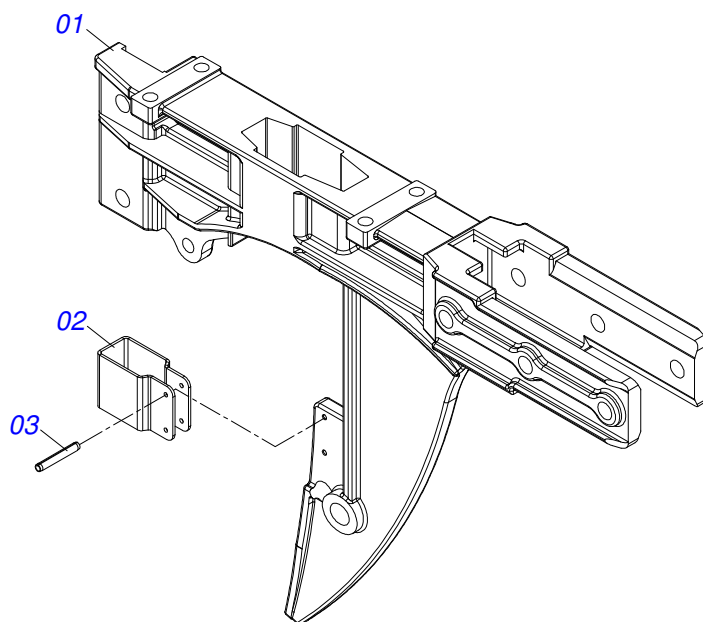 


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

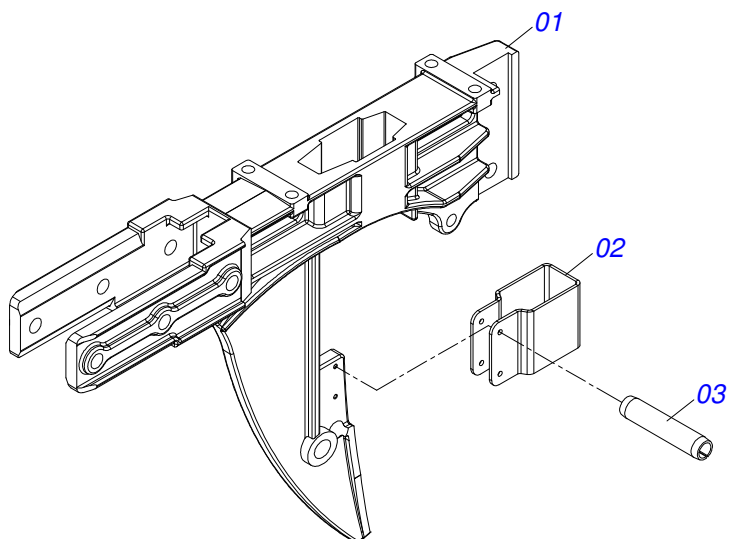 


Item	Code	Description	See page	QT
01	0561015592	LEFT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

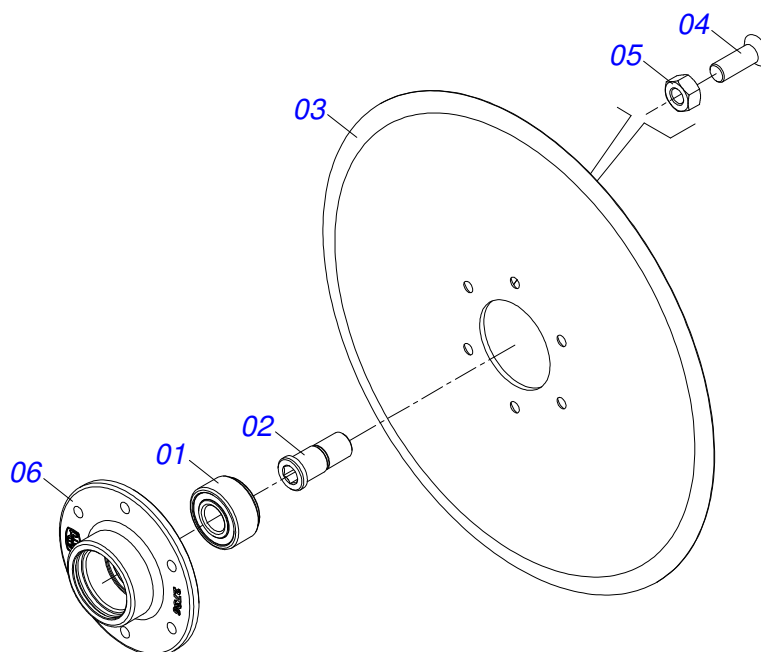 


Item	Code	Description	See page	QT
01	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

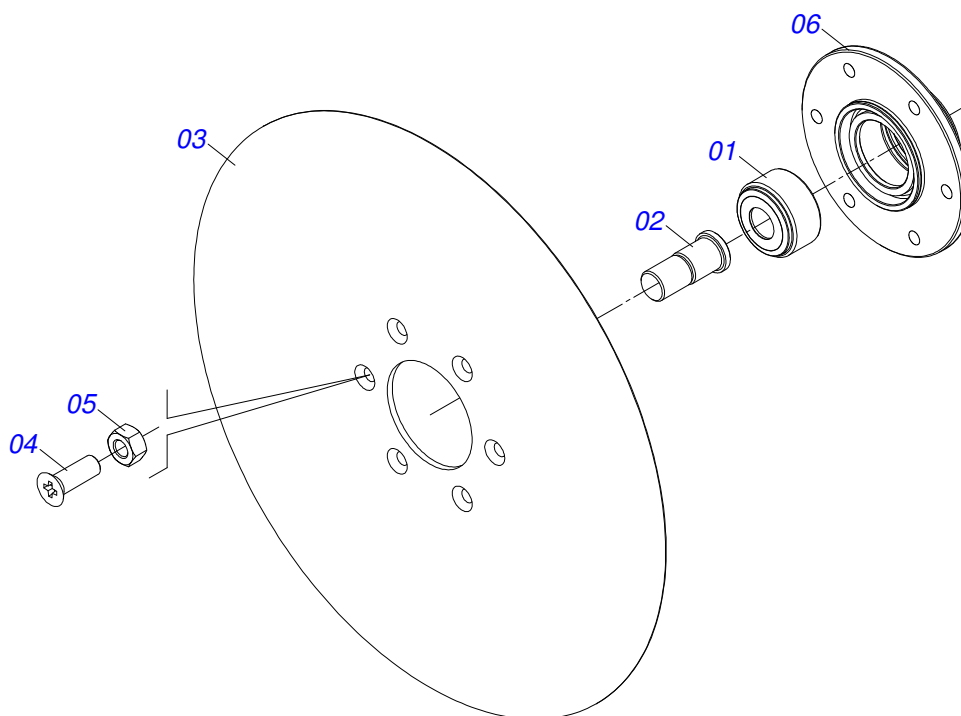 

Item	Code	Description	See page	QT
01	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

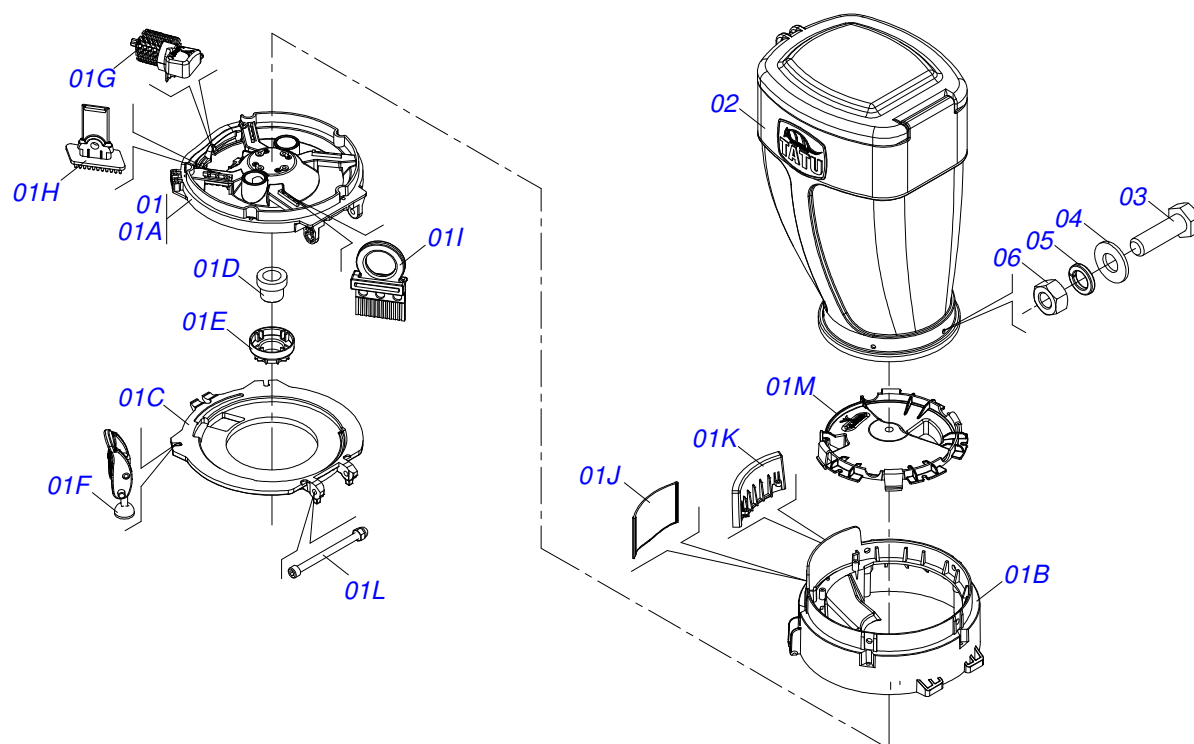 


Item	Code	Description	See page	QT
01	0511052058	SEED SYSTEM TITANIUM		01
01A	0503062031	BASE SET		01
01B	0503062032	NECK TITANIUM ASSY		01
01C	0503062033	OPPOSITE BASE SET		01
01D	0503062034	CENTRAL ADAPTER SET		01
01E	0503062035	SET FALSE ADAPT CENTER		01
01F	0503062036	SUBSET ASSY LOCK BASE		01
01G	0503062037	SUBSET ESCOVAFLEX ASSY		01
01H	0503062038	ASSY ANTI-LEAP		01
01I	0503062039	POLIFLOW TITANIUM ASSY		01
01J	0503062040	DISPLAY ASSY TITANIUM 1050010		01
01K	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
01L	0503062042	SET BOLT ARTICULADOR		01
01M	0503062043	ASSY LIMIT WEIGHT		01
02	0503062276	SEED BOX		01
03	0503010371	5/16" X 1" BOLT		05
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		05
05	0503010179	5/16" ZN SPRING WASHER		05
06	0503010337	5/16" NUT		05

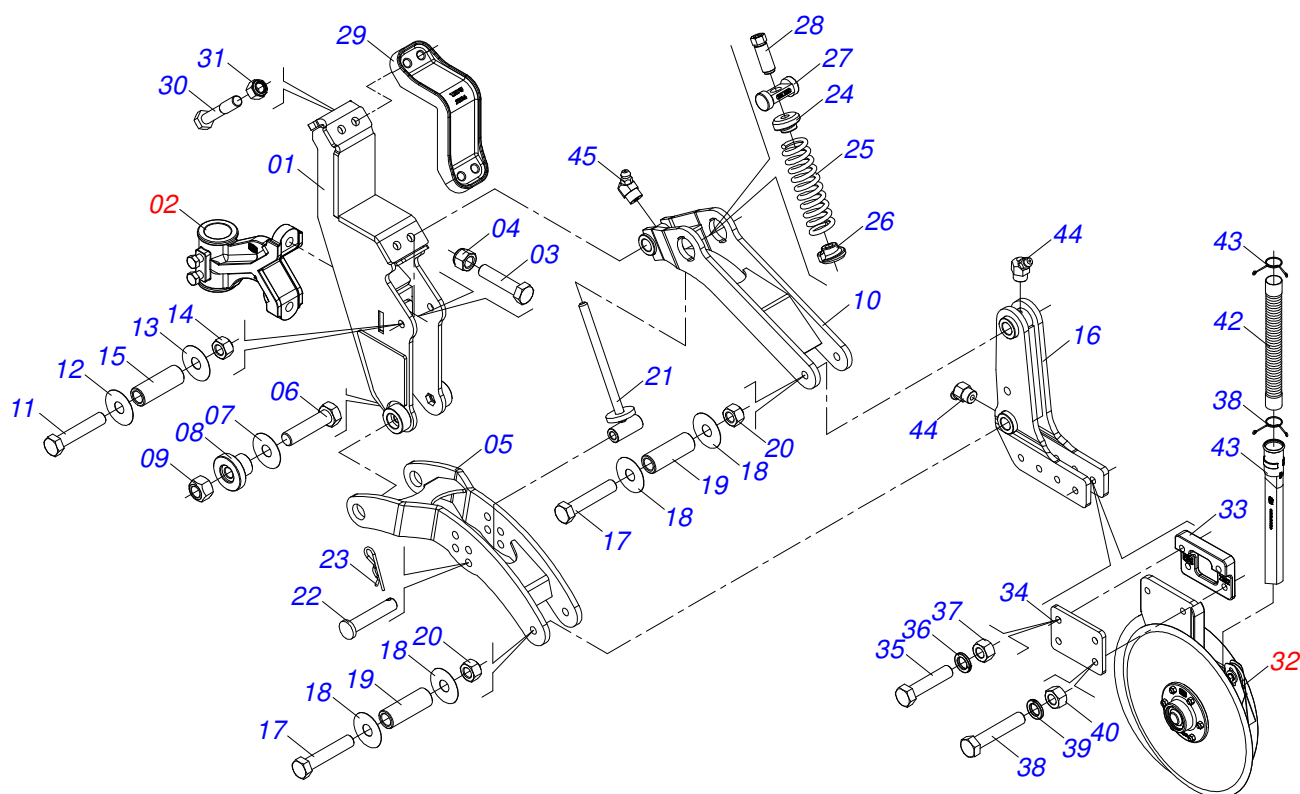 

Item	Code	Description	See page	QT
01	0521063759	ROW FERTILIZER SUPPORT		01
02	0511053223	FERTILIZER ROW SUPPORT WITH SCREW	90	01
03	0503017855	3/4" BOLT		02
04	0503010152	3/4" SELF LOCKING NUT		02
05	0521063504	FERTILIZER ROW LOWER SUPPORT		01
06	0503010233	5/8" X 2-1/2" BOLT		02
07	0511015098	FLAT WASHER		06
08	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
09	0503012412	5/8 UNC SELF LOCKING NUT		02
10	0511063862	FERTILIZER ROW UPPER SUPPORT		01
11	0501010163	5/8" X 4-1/2" BOLT		01
12	0531015184	FLAT WASHER		01
13	0531016031	1/2" SPRING WASHER		01
14	0503012412	5/8 UNC SELF LOCKING NUT		01
15	0531016207	0.6" X 1" X 2.8" SLEEVE		01
16	0521061855	FERTILIZER ROW REAR SUPPORT		01
17	0501010452	5/8" X 5" BOLT		02
18	0531016031	1/2" SPRING WASHER		04
19	0531016207	0.6" X 1" X 2.8" SLEEVE		02
20	0503012412	5/8 UNC SELF LOCKING NUT		02
21	0521062073	SPRING GUIDE		01
22	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
23	0503030168	HAIR PIN		01
24	1902020393	SPRING UPPER SUPPORT		01
25	0503031450	2.7" X 9.2" X 0.03" SPRING		01
26	1902020393	SPRING UPPER SUPPORT		01
27	0521011158	SPRING LOCKNUT		01
28	0521018575	REGULATOR SPINDLE 100		01
29	0502012724	FERTILIZER ROW FIXER		01
30	0503017960	5/8" X 3-12" BOLT		04
31	0503010811	5/8" UNF SELF ADJUSTING NUT		04

Item	Code	Description	See page	QT
32	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	91	01
33	0502012352	DOUBLE-DISC SPACING PLATE		01
34	0541013035	5.55" X 4.0" X 0.38" PLATE		01
35	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
36	0503010019	1/2" SPRING WASHER		02
37	0503010060	1/2" NUT		02
38	0503010752	1/2" X 3.1/2" BOLT		02
39	0503010019	1/2" SPRING WASHER		02
40	0503010060	1/2" NUT		02
41	0503030520	SEED SOCKET		01
42	0503031145	2" X 2" X 20" HOSE		01
43	0503031076	2" HOSE CLAMP		02
44	0503010003	1845 GREASE FITTING		02
45	0503010004	1890 GREASE FITTING		01

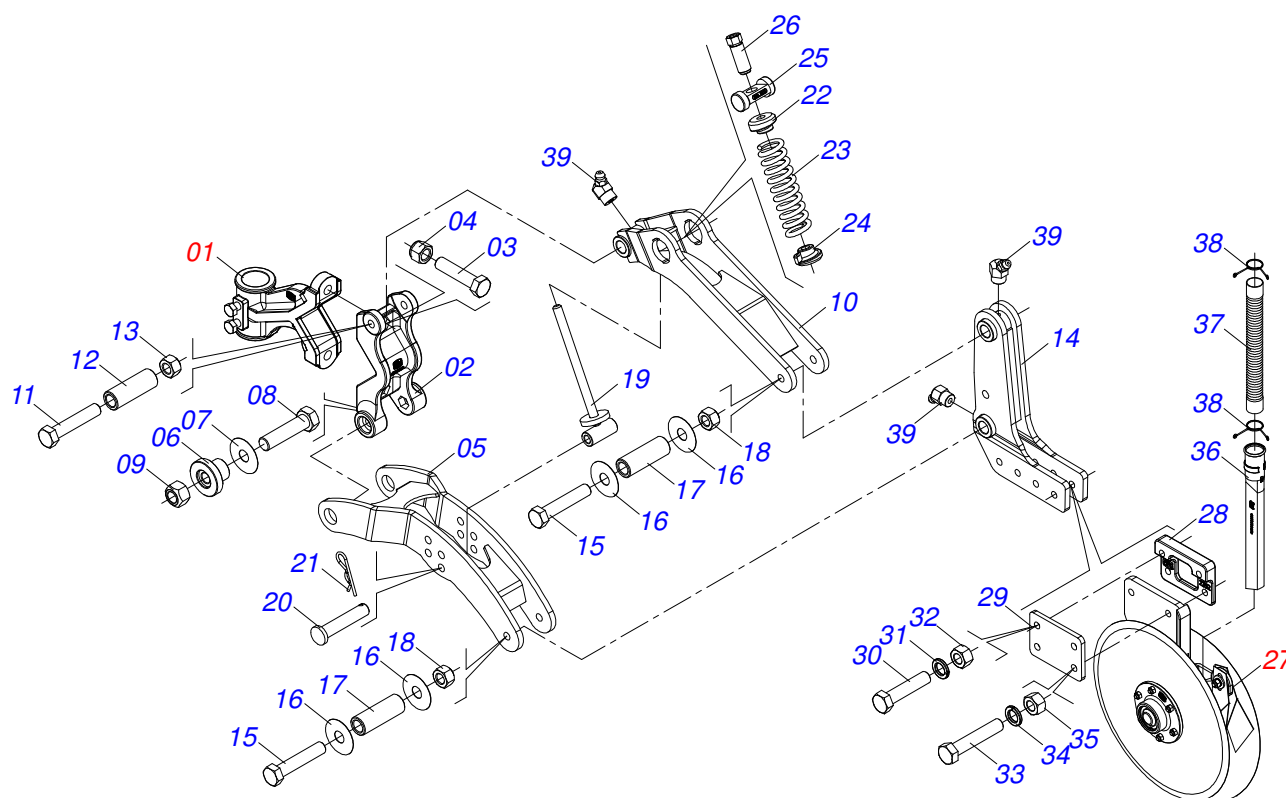 


Item	Code	Description	See page	QT
01	0511053223	FERTILIZER ROW SUPPORT WITH SCREW	90	01
02	0502012728	ROW FERTILIZER SUPPORT		01
03	0503017856	BOLT 3/4		02
04	0503010152	3/4" SELF LOCKING NUT		02
05	0521063504	FERTILIZER ROW LOWER SUPPORT		01
06	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
07	0511015098	FLAT WASHER		06
08	0503010233	5/8" X 2-1/2" BOLT		02
09	0503012412	5/8 UNC SELF LOCKING NUT		02
10	0511063862	FERTILIZER ROW UPPER SUPPORT		01
11	0501010452	5/8" X 5" BOLT		01
12	0531016207	0.6" X 1" X 2.8" SLEEVE		01
13	0503012412	5/8 UNC SELF LOCKING NUT		01
14	0521061855	FERTILIZER ROW REAR SUPPORT		01
15	0501010452	5/8" X 5" BOLT		02
16	0531016031	1/2" SPRING WASHER		04
17	0531016207	0.6" X 1" X 2.8" SLEEVE		02
18	0503012412	5/8 UNC SELF LOCKING NUT		02
19	0521062073	SPRING GUIDE		01
20	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
21	0503030168	HAIR PIN		01
22	1902020393	SPRING UPPER SUPPORT		01
23	0503031450	2.7" X 9.2" X 0.03" SPRING		01
24	1902020393	SPRING UPPER SUPPORT		01
25	0521011158	SPRING LOCKNUT		01
26	0521018575	REGULATOR SPINDLE 100		01
27	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	92	01
28	0502012352	DOUBLE-DISC SPACING PLATE		01
29	0541013035	5.55" X 4.0" X 0.38" PLATE		01
30	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
31	0503010019	1/2" SPRING WASHER		02


**FERTILIZER SHORT LINE**

 0511053024


Item	Code	Description	See page	QT
32	0503010060	1/2" NUT		02
33	0503010752	1/2" X 3.1/2" BOLT		02
34	0503010019	1/2" SPRING WASHER		02
35	0503010060	1/2" NUT		02
36	0503030520	SEED SOCKET		01
37	0503031145	2" X 2" X 20" HOSE		01
38	0503031076	2" HOSE CLAMP		02
39	0503010003	1845 GREASE FITTING		03

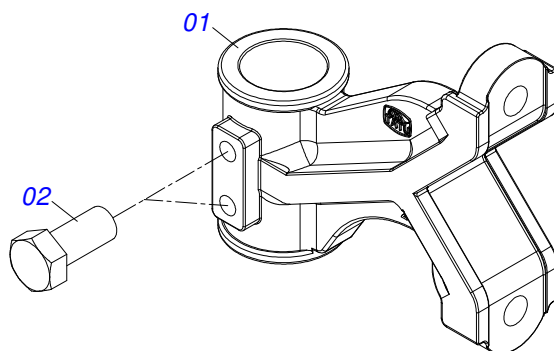


Item	Code	Description	See page	QT
01	0502012727	BLADE DISC SUPPORT		01
02	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02

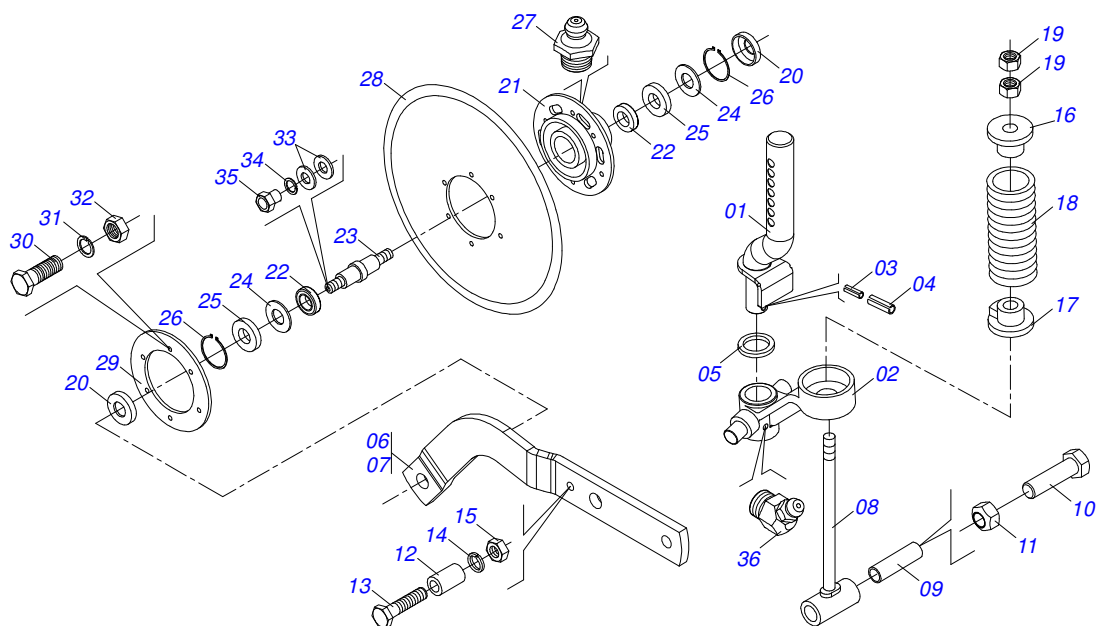 


Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15	85	01
02	0511053172	LEFT LOW CUBE WITH DISC 15	86	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O-RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010025	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

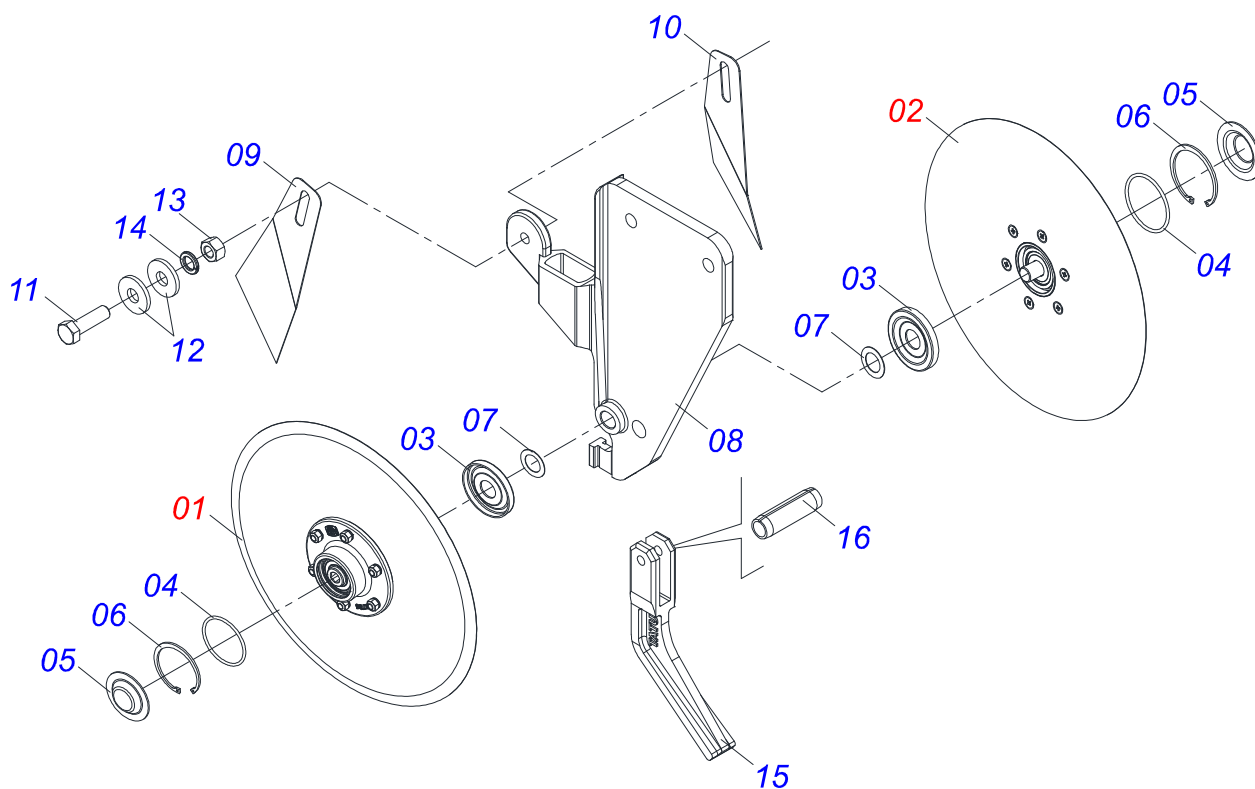 


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	86	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	85	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503011443	3/8" SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

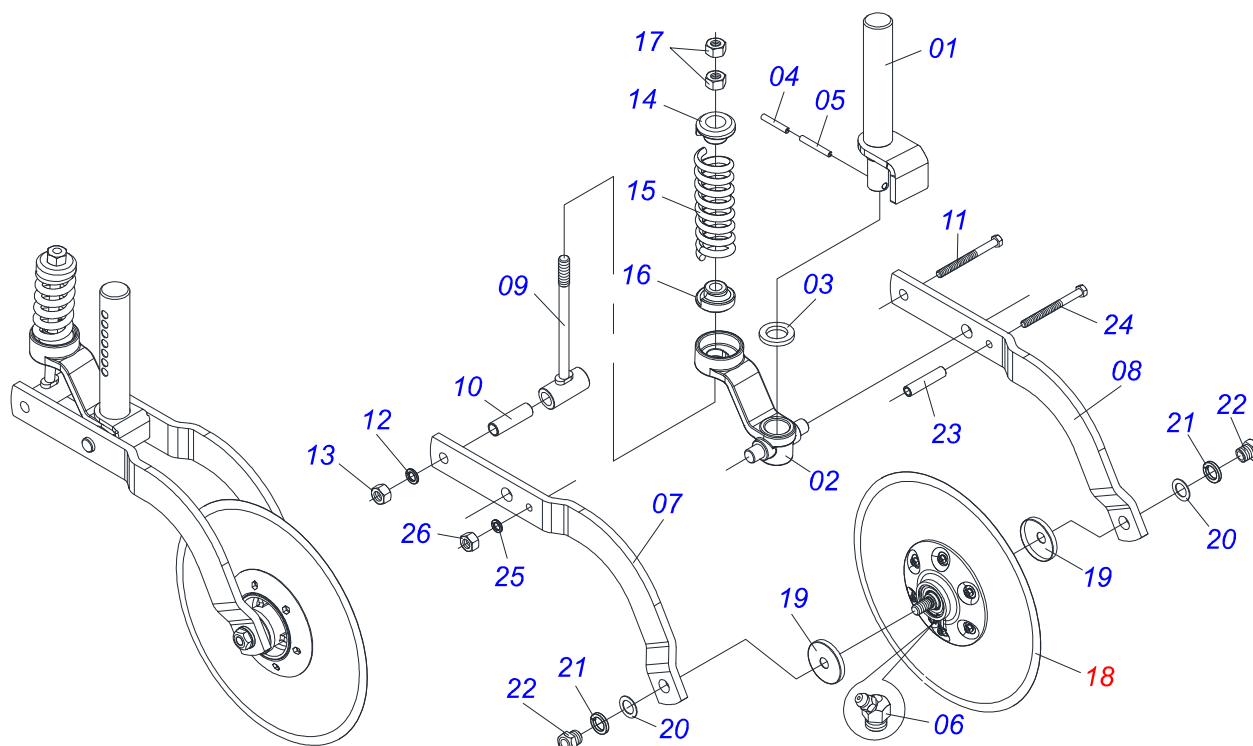 


Item	Code	Description	See page	QT
01	0521062962	BLADE DISC AXLE		01
02	0502012369	BLADE DISC SUPPORT		01
03	0541018684	FLAT WASHER		01
04	0503010361	SPRING PIN		01
05	0503010756	0.2" X 2.4" SPRING PIN		01
06	0503010003	1845 GREASE FITTING		01
07	0521018935	RIGHT ARM OF THE BLADE DISC		01
08	0521018936	LEFT ARM OF THE BLADE DISC		01
09	0501067323	SPRING REGULATOR		01
10	0521010452	SLEEVE		01
11	0503016525	3/4" X 6" BOLT		01
12	0503011442	3/4" SPRING WASHER		01
13	0503010014	3/4" NUT		01
14	0502020393	SPRING UPPER SUPPORT		01
15	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
16	0502020394	SPRING SUPPORT		01
17	0503010014	3/4" NUT		02
18	0501054887	20 BLADE DISC WITH FLAT PLAN DISC	94	01
19	0521015376	DUST CLOAK		02
20	0511015346	FLAT WASHER		02
21	0503011438	SPRING WASHER		02
22	0521013510	3/4" NUT		02
23	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
24	0503011411	1/2" X 5-1/2" BOLT		01
25	0503011440	SPRING WASHER		01
26	0503010060	1/2" NUT		01

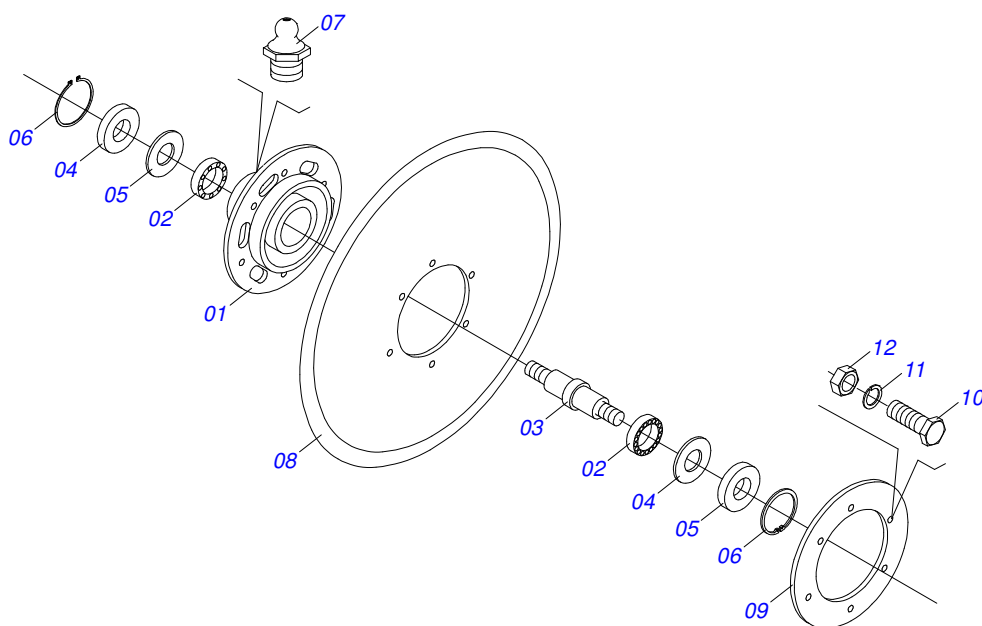 


Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503010276	6206 BALL BEARING		02
03	0521013610	BLADE DISC HUB AXLE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0603027851	20" X 0.2" FLAT PLAIN DISC		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

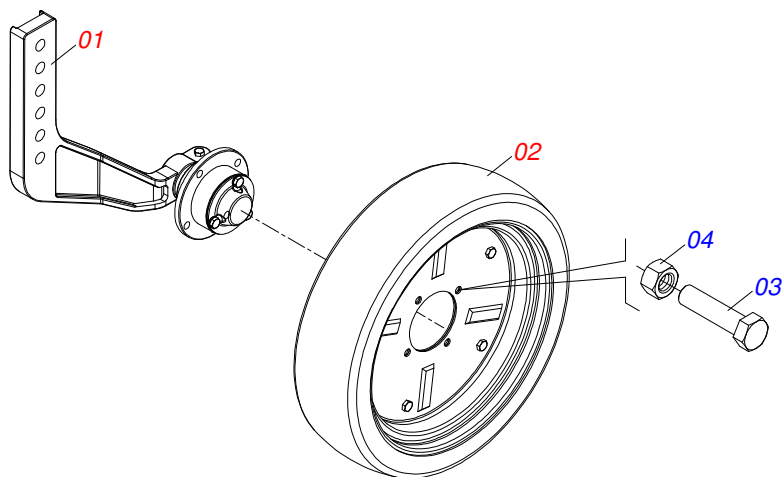 


Item	Code	Description	See page	QT
01	0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL	97	01
02	0501052538	DEPTH BAND WITH ARMS	99	01
03	0503010358	5/16" X 5/8" BOLT		04
04	0503013816	5/16" LOCKNUT		04

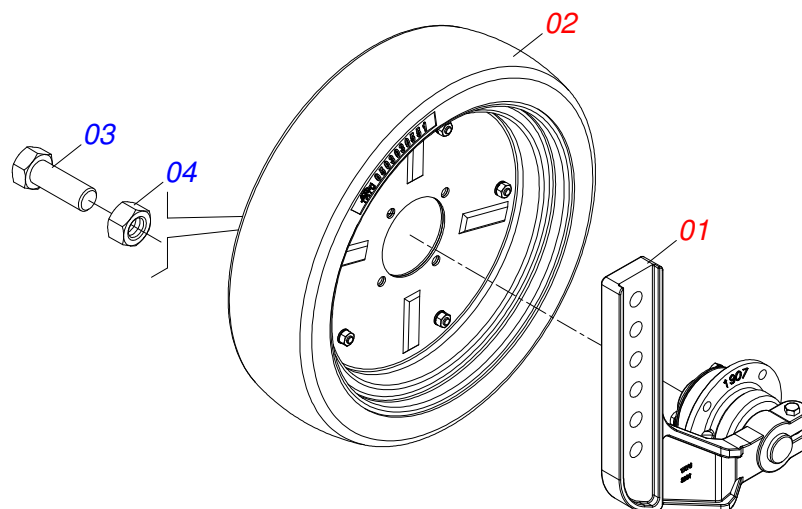 


Item	Code	Description	See page	QT
01	0501056435	LEFT CONTROL ARM DEPTH WITHOUT WHEEL	98	01
02	0501052538	DEPTH BAND WITH ARMS	99	01
03	0503010358	5/16" X 5/8" BOLT		04
04	0503013816	5/16" LOCKNUT		04

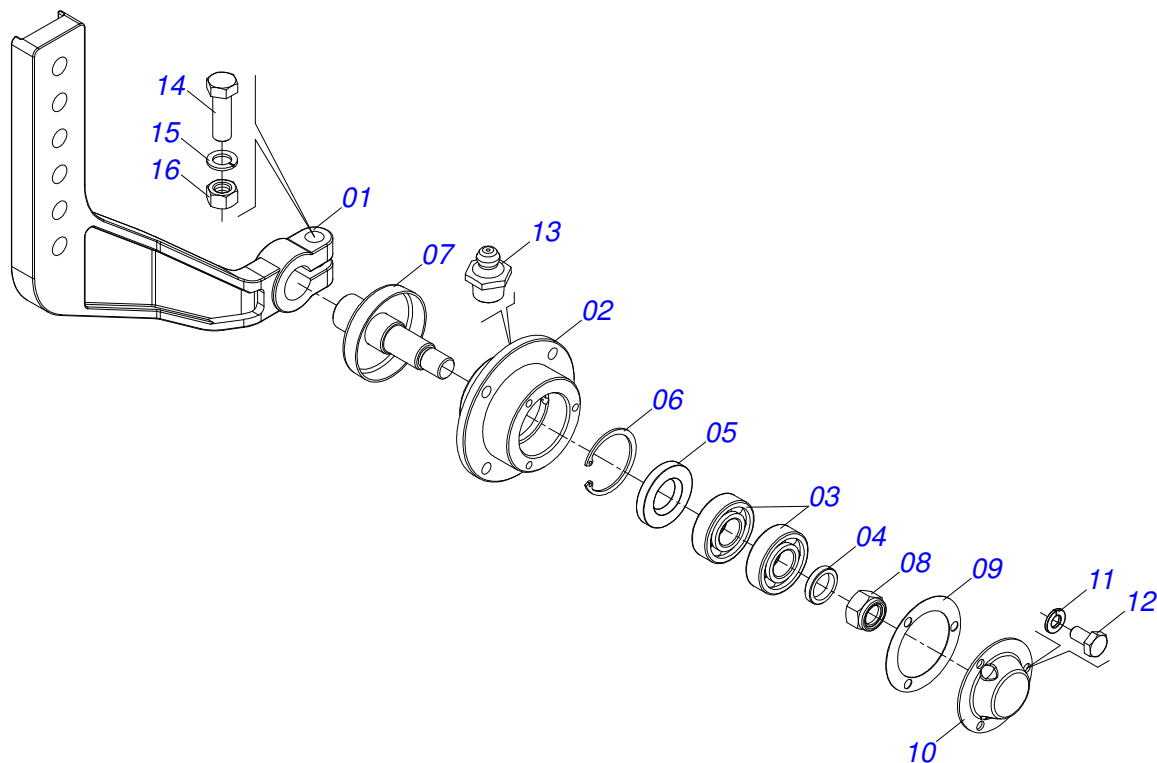 


Item	Code	Description	See page	QT
01	0502012090	DEPTH CONTROL RIGHT ARM		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
08	0503010878	5/8" SELF ALIGNING NUT		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0521019178	COVER DEPTH		01
11	0503011441	SPRING WASHER		03
12	0503014729	1/4" UNF X 1/2" BOLT		03
13	0503010691	1/4" GREASE FITTING		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01

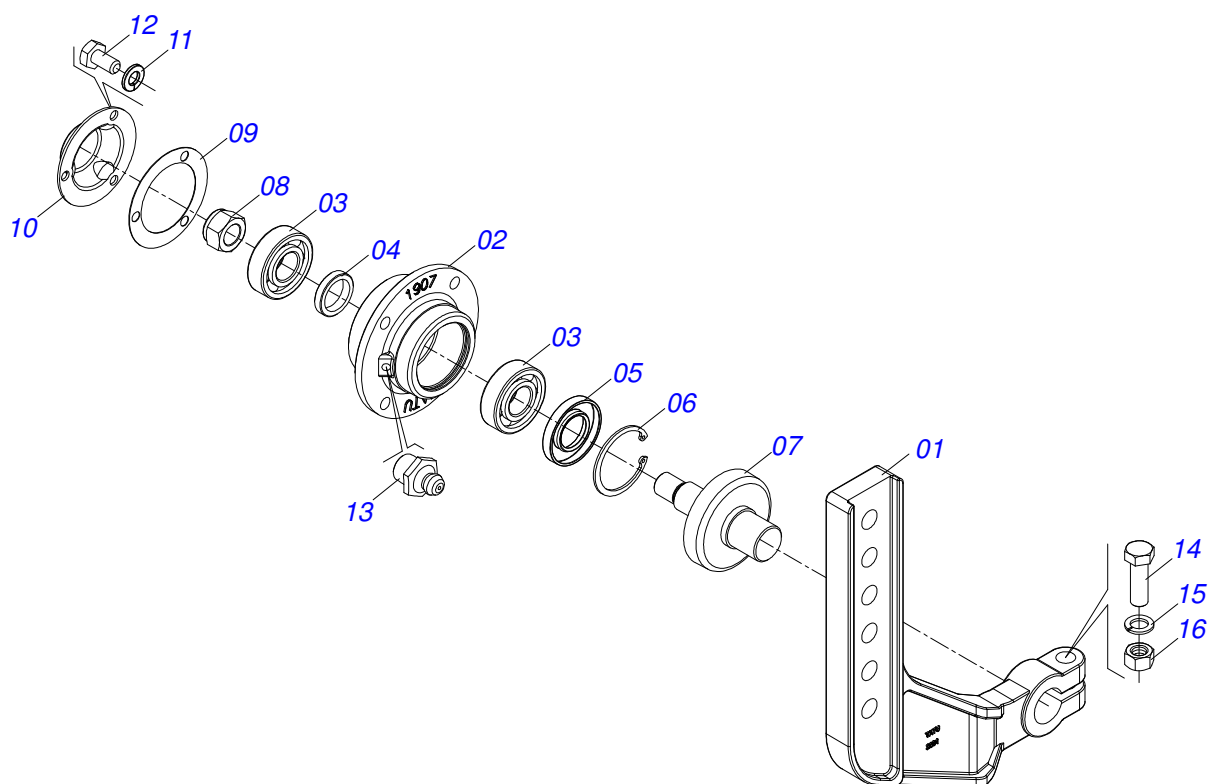 


Item	Code	Description	See page	QT
01	0502012091	DEPTH CONTROL LEFT ARM		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
08	0503010878	5/8" SELF ALIGNING NUT		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0521019178	COVER DEPTH		01
11	0503011441	SPRING WASHER		03
12	0503014729	1/4" UNF X 1/2" BOLT		03
13	0503010691	1/4" GREASE FITTING		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01

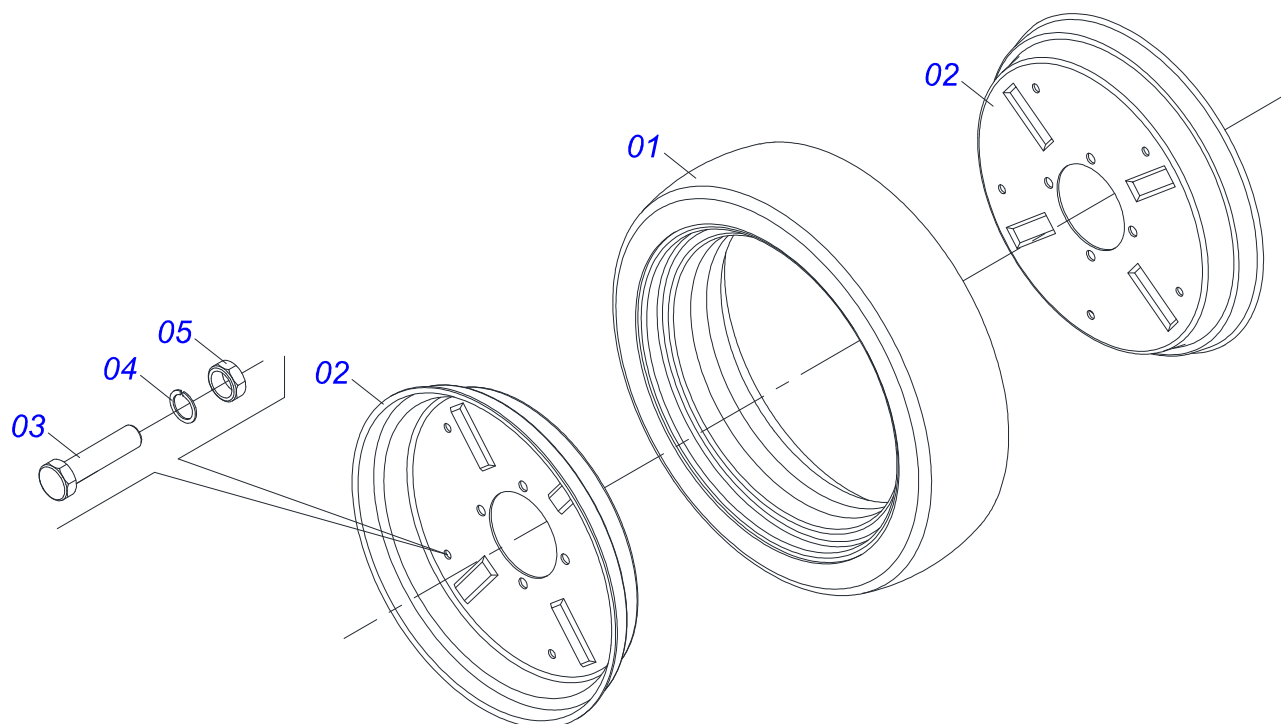 


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

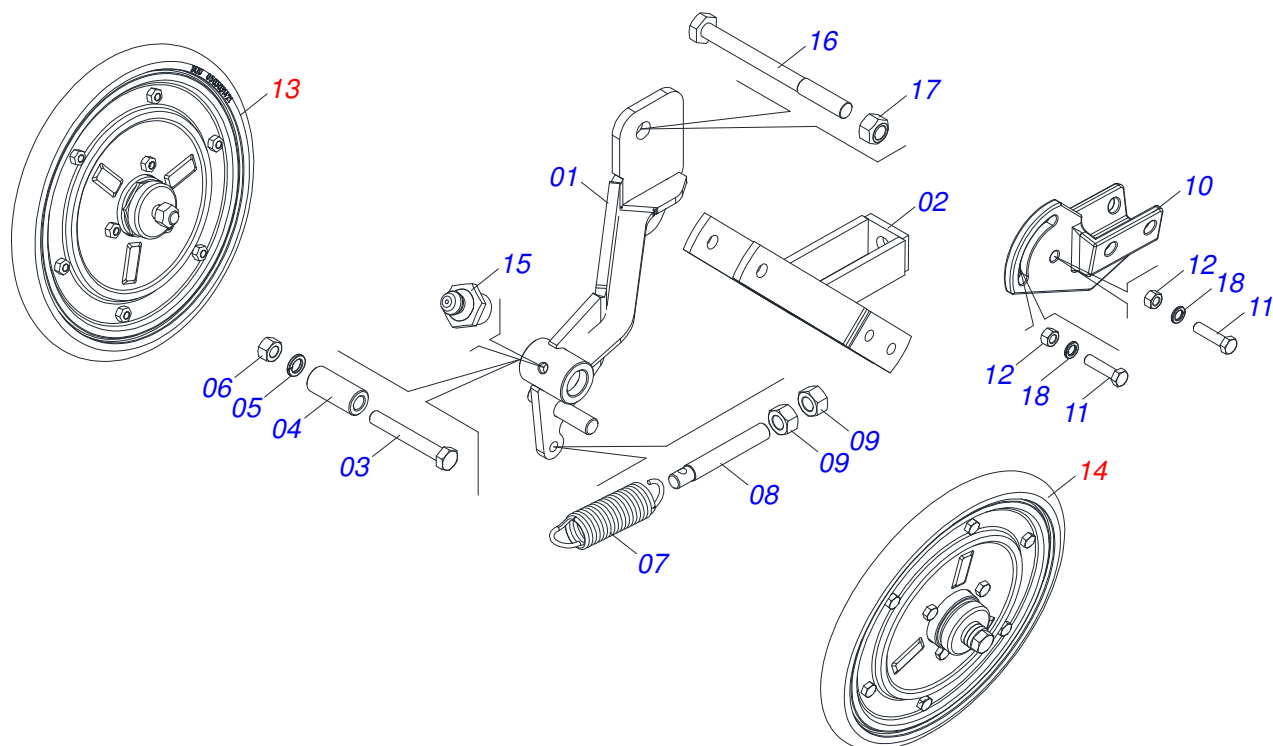 


Item	Code	Description	See page	QT
001	0521063771	WHEEL SUPPORT		01
002	0511064128	PRESS SUPPORT LOWWER WHEEL		01
003	0503010752	1/2" X 3.1/2" BOLT		01
004	0531013272	0.5" X 1" X 2.2" SLEEVE		01
005	0503010019	1/2" SPRING WASHER		01
006	0503010060	1/2" NUT		01
007	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
008	0501013491	5/8" TENSIONER SPRING		01
009	0503010013	5/8" NUT		02
010	0502011757	PRESS REGULATOR		01
011	0503010849	3/8" X 1-1/2" BOLT		02
012	0503010026	3/8" NUT		02
013	0511054333	COMPACT WHEEL RIGHT WITH BEARING	101	01
014	0511054334	COMPACT WHEEL LEFT WITH BEARING	102	01
015	0503010002	1800 GREASE FITTING		01
016	0503010795	5/8" X 7" BOLT		01
017	0503012412	5/8 UNC SELF LOCKING NUT		01
018	0503010025	3/8" SPRING WASHER		02

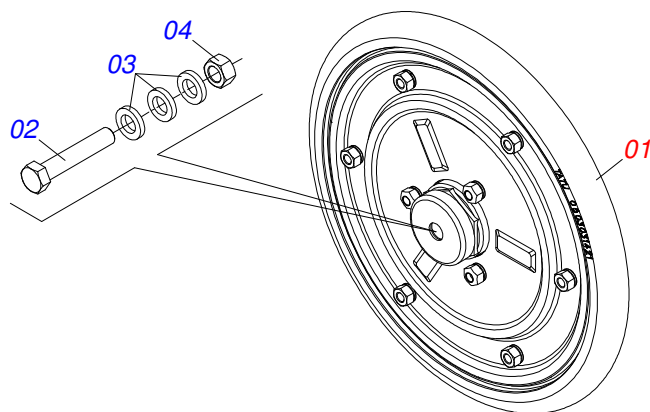 


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	103	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

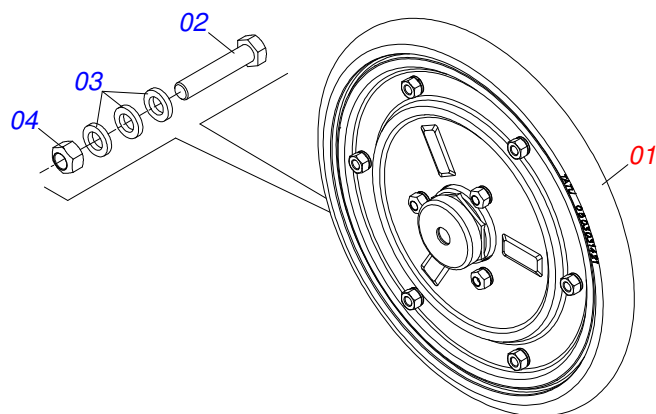 


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	103	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

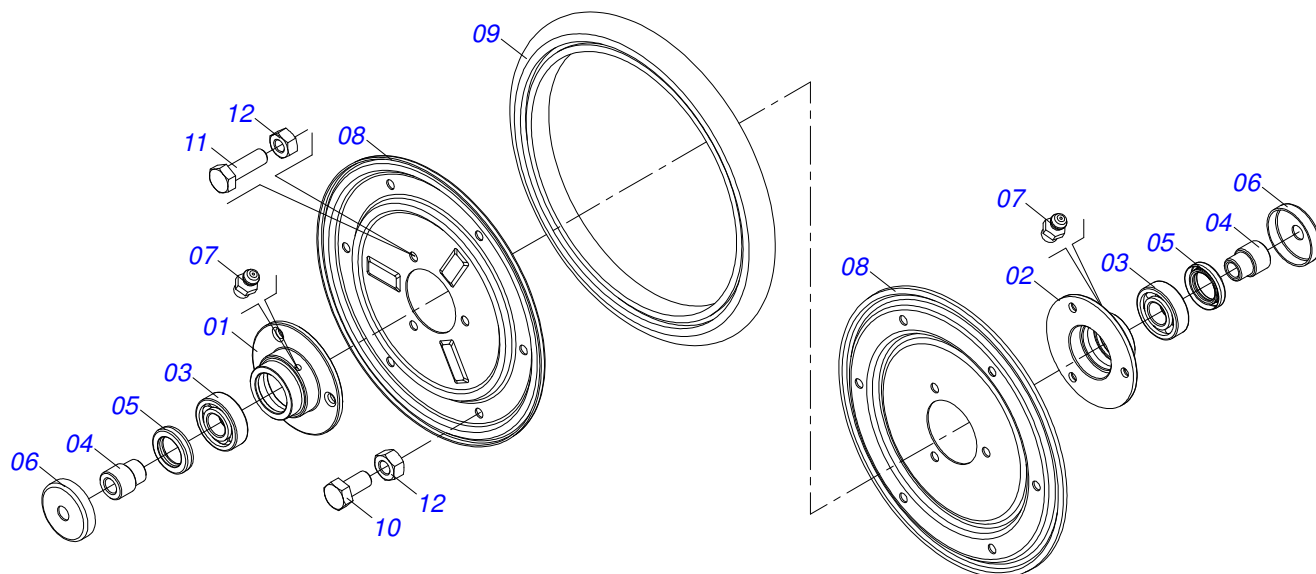 


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

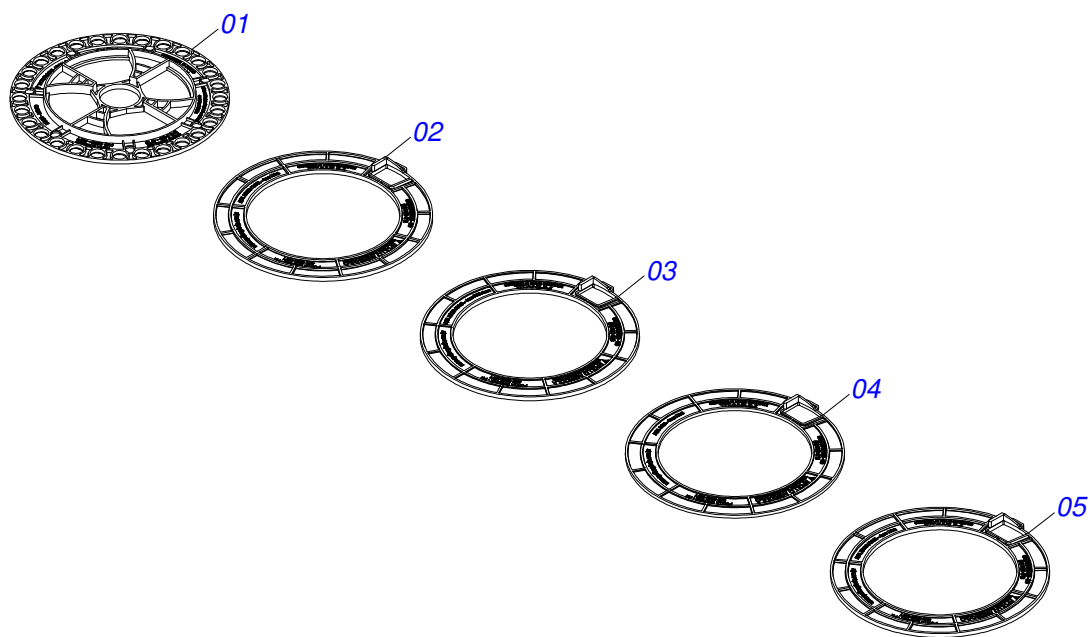 


Item	Code	Description	See page	QT
01	0503016204	CORN DISK 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

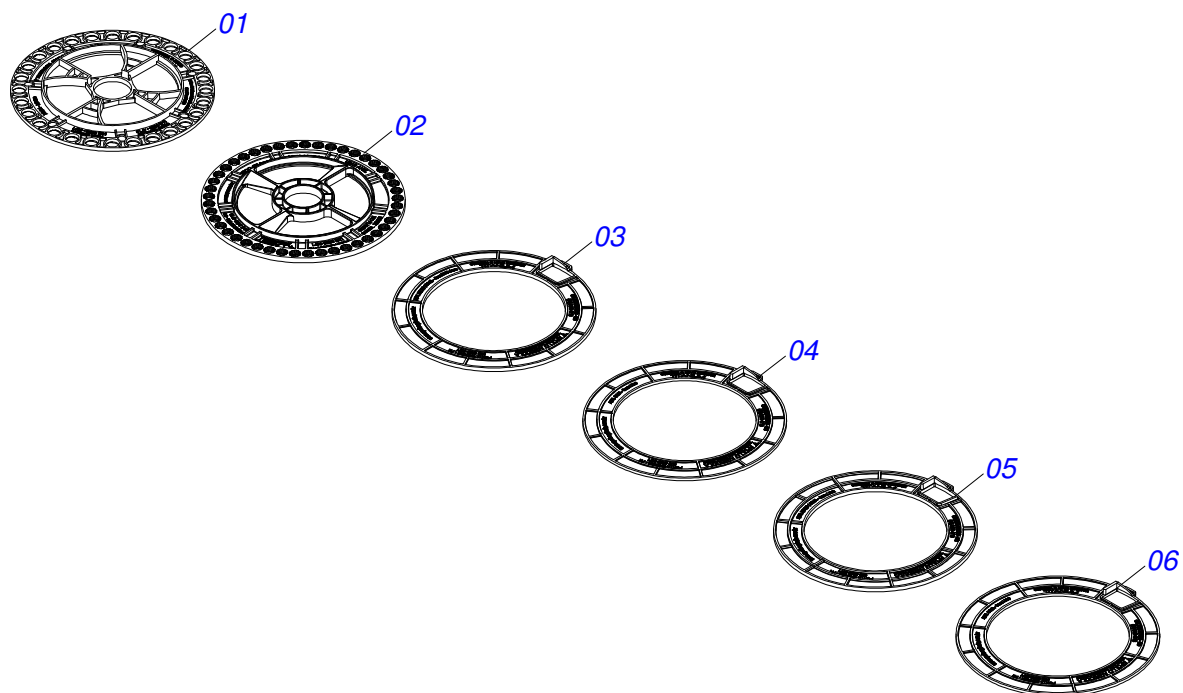 

Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

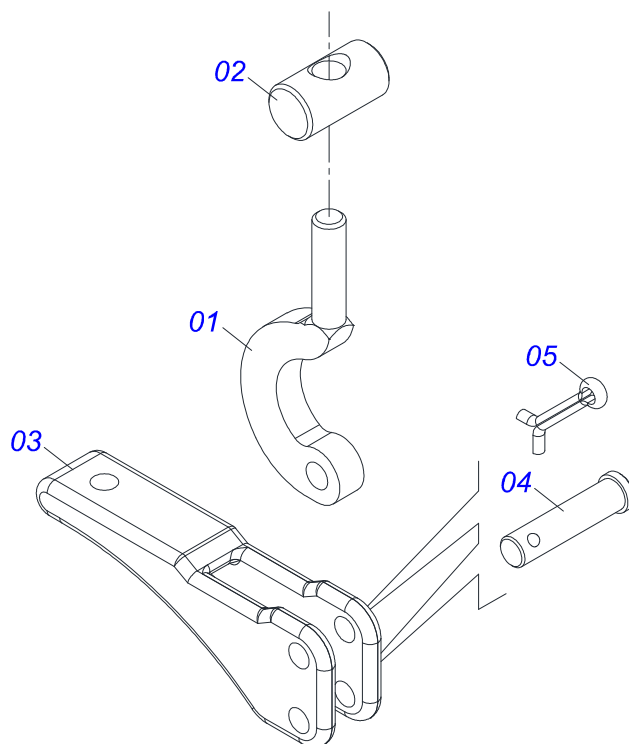 

Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

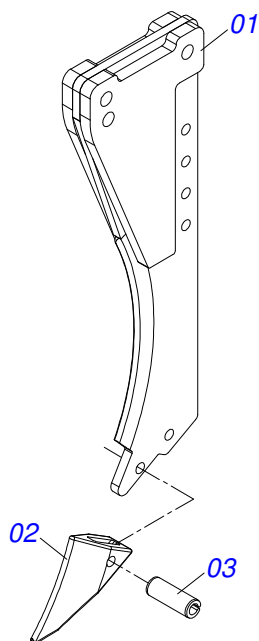 

Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER SPINDLE		01
02	1902070061	POINT SUBSOILER		01
03	0503011373	0.4" X 1.1" SPRING PIN		01



www.marchesan.com.br



Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI