

ROW CROP PLANTERS

COP FLEX 600 TITANIUM - FRAME 3495-4045-5345-7545 - CSU

Code: 0501092904
Series: S-0115
Revision: 00
Date Revision: NOVEMBRO/2021

PARTS CATALOGUE



MARCHESAN



PRODUCTS

Code	Description
0111111203	COP FLEX 600 3495/6E500 MH CSU TIT S-0115
0111111303	COP FLEX 600 4045/8E500 ESPECIAL S-0115
0111111253	COP FLEX 600 4045/8E500 ESPECIAL S-0115
0111111233	COP FLEX 600 4045/8E500 ESPECIAL S-0115
0111111263	COP FLEX 600 4045/8E500 ESPECIAL S-0115
0111111175	COP FLEX 600 4045/9E450 CSU TIT IAPAR S-0115
0111111242	COP FLEX 600 4045/9E450 ESPECIAL S-0115
0111111141	COP FLEX 600 4045/9E450 MH CSU TIT S-0115
0111111195	COP FLEX 600 5345/11E500 ESPECIAL S-0115
0111111296	COP FLEX 600 5345/11E500 ESPECIAL S-0115
0111111280	COP FLEX 600 5345/11E500 ESPECIAL S-0115
0111111272	COP FLEX 600 7545/15E500 ESPECIAL S-0115
0111111276	COP FLEX 600 7545/15E500 ESPECIAL S-0115

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.



MARCHESAN

INDEX

0909095557	FRAME ASSY	1
0511053675	MOTOR SHAFT ASSEMBLY	2
0511054304	MOTOR SHAFT ASSEMBLY	3
0511053423	MOTOR SHAFT ASSEMBLY	4
0511047069	SIDE TRANSMISSION DRIVING	5
0511047070	LH SIDE TRANSMISSION DRIVING	6
0511051434	TRANSMISSION DRIVING ASSY	7
0511053676	HEX AXLE ASSEMBLY	8
0511053424	HEX AXLE ASSEMBLY	9
0511054303	HEX AXLE ASSEMBLY	10
0511053480	HEX AXLE ASSEMBLY	11
0511053681	HYDRAULIC ASSEMBLY FOR MARKER	12
0511053427	SET HIDRAULICO	13
0511054305	SET HIDRAULICO	14
0511053479	SET HIDRAULICO	15
0511053358	VALVE FIXING ASSEMBLY	16
0511058430	HYDRAULIC CYLINDER	17
0511058431	HYDRAULIC CYLINDER	18
0511053948	FIXER HYDRAULIC HOSE ASSEMBLY	19
0511053475	HYDRAULIC CYLINDER ASSEMBLY 8 WHEEL	20
0511053384	HYDRAULIC CYLINDER ASSEMBLY	21
0511058411	HYDRAULIC CYLINDER	22
0511053316	HOSE KIT	23
0511053678	HOSE KIT	24
0511052332	ASSY SUPPORT RIGHT FIXER CHANGE	25
0511048939	ASSY RIGHT EXCHANGE	26
0511052333	ASSY SUPPORT LEFT FIXER CHANGE	27
0511048940	LEFT ASSY EXCHANGE	28
0511053364	SET TRANSMISSION LEFT ASSY	29
0501058212	SEMI MOUNTED RIGHT CHANGE	30
0501058213	LH GEAR BOX	31
0501048790	AXLE WITH LINK ASSY	32
0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	33
0501056443	BEARING ASSY GEAR BOX	34
0501056444	BEARING WITH ROLLING	35
0501056271	BEARING CLOSED	36
0501054655	CHAIN TENSIONER ASSY	37
0511053357	SET TRANSMISSION RIGHT ASSY	38
0511053682	SET BOX FERTILIZER	39
0511053429	COMPLETE RIGHT/LEFT FERTILIZER BOX ASSY	40
0511054307	SET BOX FERTILIZER	41
0511053478	SET BOX FERTILIZER RIGHT LEFT ASSY	42
0511050949	RIGHT FERTILIZER BOX SUPPORT	43
0511050948	LEFT FERTILIZER BOX SUPPORT	44
0511050936	BOX SUPPORT RIGHT FERTILIZER	45
0511050935	FERTILIZER LEFT BOX SUPPORT	46
0511053115	LH FERTILIZER BOX SUPPORT	47
0511053116	LEFT FERTILIZER BOX SUPPORT	48
0511050896	LEFT FERTILIZER BEAM SUPPORT	49
0511050897	FERTILIZER BEAM SUPPORT	50
0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51
0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	52
0511053683	PLATFORM SET COP FLEX 600 8	53
0511053430	PLATFORM ASSY	54
0511054308	PLATFORM SET	55



MARCHESAN

INDEX

0511053477	PLATFORM SET	56
0511053356	ASSY LADDER	57
0511053684	JOINT HANDRAIL SET	58
0511053431	HANDRAIL ASSY	59
0511054309	JOINT HANDRAIL SET	60
0511053476	JOINT HANDRAIL SET	61
0511053482	SET FIXER HEADER	62
0511054971	RESTING ASSEMBLY	63
0511056598	MANUAL STORAGE TUBE ASSY	64
0511050443	WHITH RIGHT WHEEL ASSY WITHOUT TRANSMISSION	65
0511050444	WHITH LEFT WHEEL ASSY WITHOUT TRANSMISSION	66
0501110625	BEARING ARTICULATION WHEEL	67
0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED BOX	68
0511052766	CARRYING WHEEL HUB ASSY	69
0503062158	EEE WHEEL WITH TIRE 700 X 16-10L ASSY	70
0511050439	RIGHT WHEEL ASSY	71
0511050440	WHITH LEFT WHEEL ASSY	72
0501054284	STRETCHER CURRENT TRANSMISSION SIDE	73
0501053522	WHEEL CHAIN TENSIONER	74
0511053375	CURRENT DEVIATION ASSY WHEEL	75
0511053685	HYDRAULIC MARKER LABEL ASSY 8	76
0511053432	SET LABEL ADHESIVE	77
0511054858	ASSY STICKER	78
0511053483	SET LABEL ADHESIVE	79
0511059524	ASSEMBLY CSU	80
0521050783	ASSEMBLY CSU	81
0521050884	ASSEMBLY CSU	82
0511058434	ASSEMBLY CSU	83
0511057780	ASSEMBLY CSU	84
0511050644	DRAWBAR ASSY	85
0511053436	DRAWBAR ASSY	86
0511053393	DRAWBAR	87
0511053342	SQUARE AXLE ASSEMBLY (730)	88
0511053179	TRACTOR HITCH AXLE	89
0511055096	TRACTOR HITCH	90
0501054428	ASSY HEADER EXTENSOR	91
0501054605	DRAWBAR TURNBUCKLE	92
0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	93
0511025997	BOX WITH HYDRAULIC MARKER COMPONENTS	94
0501050633	MARKER DISC ASSY LINE	95
0511053904	DISC LINE MARKER	96
0521053426	MONITORING ASSEMBLY PLANTING SEEDS 15L PM400	97
0521053444	PLANTING MONITORING ASSY 8L SEED PM400	98
0511053680	HIDRAULIC ROW MARKER	99
0511054306	MARKER CYLINDER	100
0511053426	MARKER HIDRAULICO	101
0511053474	HYDRAULIC ASSEMBLY FOR MARKER	102
0909095559	ASSY SEED/FERTILIZER LINE	103
0521051619	FRONT LINE SHORT MECHANICAL SEED	104
0521051620	FRONT LINE MECHANICAL SEED LINE	105
0511052393	BEARING FOLLOWER ROW ASSY	106
0511050609	BEARING WITH 17Z GEAR ASSY	107
0511050617	FRONT SEED ROW BEARING	108
0511055260	SEED ROW CHAIN TENSIONER	109
0511054635	BEARING AXLE BODY	110



 
MARCHESAN

INDEX

0511057159	TRANSMISSION BOX SEED LINE	111
0511057625	ROW SEED BEARING	112
0511057156	BEARING LINE SEMI MOUNTED	113
0521051424	WHEEL SYSTEM DEPTH / COMPACTOR QUICK ADJUSTMENT	114
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	115
0501056769	DEPTH WHEELS REGULATOR ASSY	116
0521051423	COMPACTOR SUPPORT	117
0501052908	COMPACTOR WHEEL WITH BEARING	118
0511050077	WHEEL STRIPED	119
0511052287	DEPTH WHEEL HUB ASSY	120
0511058650	SEMI-MOUNTED DEPTH CONTROL	121
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	122
0501052627	ASSY DEPTH WHEEL BOX	123
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	124
0501052297	DEPTH WHEELS REGULATOR ASSY	125
0521050096	SEED DEPOSIT SYSTEM (CSU)	126
0511052058	SEED SYSTEM TITANIUM	127
0511053023	LONG FERTILIZER LINE	128
0511053024	FERTILIZER SHORT LINE	129
0511053223	FERTILIZER ROW SUPPORT WITH SCREW	130
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	131
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	132
0511053172	LEFT LOW CUBE WITH DISC 15	133
0511053173	CUBE LOW RIGHT WITH DISC 15	134
0511057136	REAR RIGHT SEED LINE	135
0511057137	REAR LEFT LINE SEED	136
0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8	137
0511053284	UNIVERSAL JOINT WITH HEX AXLE	138
0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	139
0511056586	15 X 15 SEED DDD LEFT	140
0511052302	LH SUPPORT DDD GUIDE	141
0511052301	SUPPORT DDD 15 RIGHT	142
0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL	143
0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL	144
0501052538	DEPTH BAND WITH ARMS	145
0501056435	LEFT CONTROL ARM DEPTH WITHOUT WHEEL	146
0521056455	DISC CUT DOC20 ASSY	147
0511054673	DPLO20	148
0511051818	DISC CUT 18 SEMI MOUNTED	149
0501052139	ASSY CUTTING DISK DPL18	150
0511059569	20" PLAIN COULTER BLADE	151
0501055997	20" BLADE DISC ASSY	152
0501110231	SCARIFIER HEAD WITH SPIKE 0061	153
0511052024	FAST CLOSING SET	154
0503062066	DISC SET WITH CORN RING	155
0503062067	DISC SET / RING SOY 90F TITANIUM	156
0521050525	FIXER FERTILIZER CONDUCTOR	157
0511053067	"V" WHEEL ASSY COBRIDORA FERTILIZER	158
0511054333	COMPACT WHEEL RIGHT WITH BEARING	159
0511054334	COMPACT WHEEL LEFT WITH BEARING	160

FRAME ASSY

0909095557

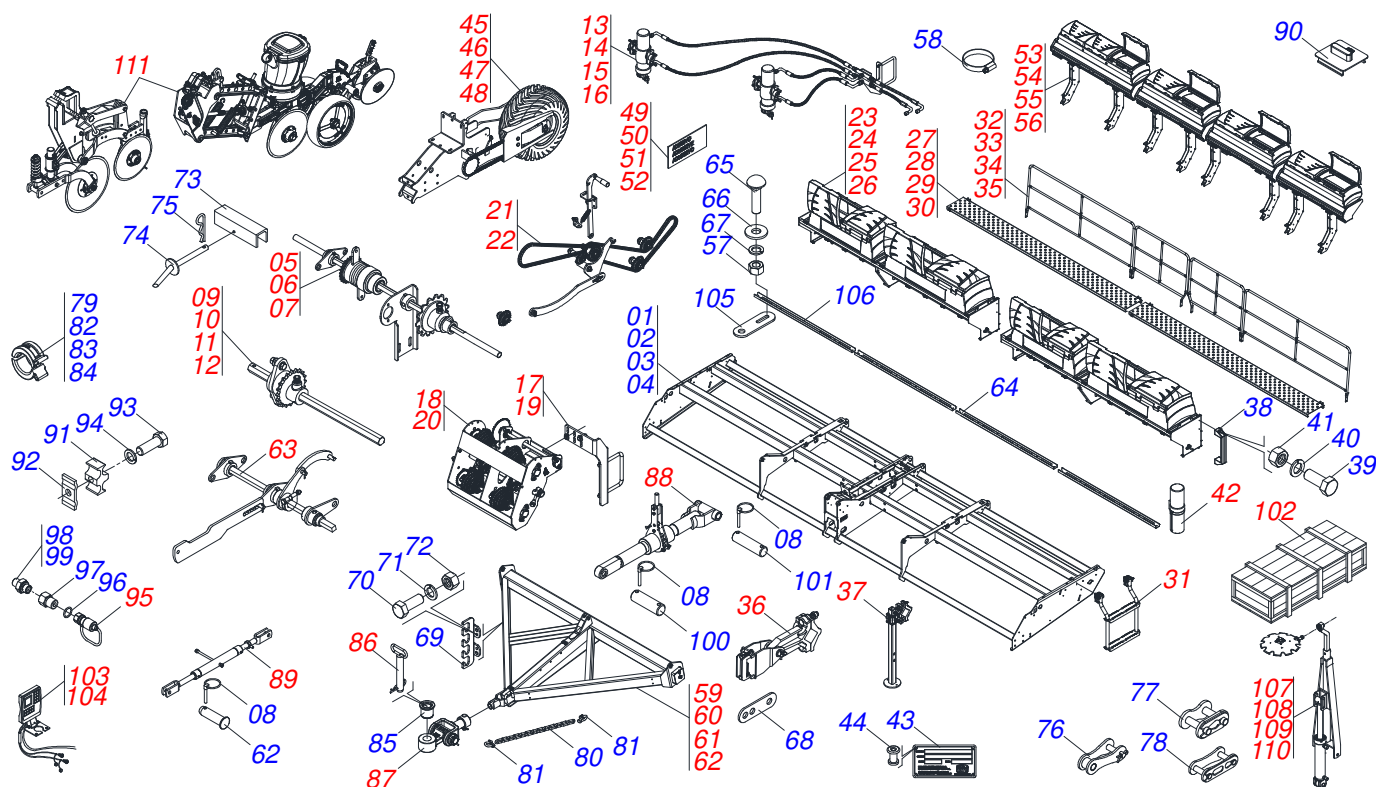

Item	Code	Description	See page	3495	4045	5345	7545
001	0521062302	FRAME 8		001	000	000	000
002	0521061932	FRAME (4045)		000	001	000	000
003	0521063953	FRAME (5345)		000	000	001	000
004	0521061935	FRAME (7545)		000	000	000	001
005	0511053675	MOTOR SHAFT ASSEMBLY	2	001	000	000	000
006	0511053423	MOTOR SHAFT ASSEMBLY	4	000	001	000	001
007	0511054304	MOTOR SHAFT ASSEMBLY	3	000	000	001	000
008	0503030085	LOCK PIN		000	000	000	001
009	0511053676	HEX AXLE ASSEMBLY	8	001	000	000	000
010	0511053424	HEX AXLE ASSEMBLY	9	000	001	000	000
011	0511054303	HEX AXLE ASSEMBLY	10	000	000	001	000
012	0511053480	HEX AXLE ASSEMBLY	11	000	000	000	001
013	0511053681	HYDRAULIC ASSEMBLY FOR MARKER	12	001	000	000	000
014	0511053427	SET HIDRAULICO	13	000	001	000	000
015	0511054305	SET HIDRAULICO	14	000	000	001	000
016	0511053479	SET HIDRAULICO	15	000	000	000	001
017	0511052332	ASSY SUPPORT RIGHT FIXER CHANGE	25	001	001	001	001
018	0511048939	ASSY RIGHT EXCHANGE	26	001	001	001	001
019	0511052333	ASSY SUPPORT LEFT FIXER CHANGE	27	001	001	001	001
020	0511048940	LEFT ASSY EXCHANGE	28	001	001	001	001
021	0511053364	SET TRANSMISSION LEFT ASSY	29	001	001	001	001
022	0511053357	SET TRANSMISSION RIGHT ASSY	38	001	001	001	001
023	0511053682	SET BOX FERTILIZER	39	001	000	000	000
024	0511053429	COMPLETE RIGHT/LEFT FERTILIZER BOX ASSY	40	000	001	000	000
025	0511054307	SET BOX FERTILIZER	41	000	000	001	000
026	0511053478	SET BOX FERTILIZER RIGHT LEFT ASSY	42	000	000	000	001
027	0511053683	PLATFORM SET COP FLEX 600 8	53	001	000	000	000
028	0511053430	PLATFORM ASSY	54	000	001	000	000
029	0511054308	PLATFORM SET	55	000	000	001	000
030	0511053477	PLATFORM SET	56	000	000	000	001
031	0511053356	ASSY LADDER	57	001	000	000	000

FRAME ASSY

0909095557

Item	Code	Description	See page	3495	4045	5345	7545
032	0511053684	JOINT HANDRAIL SET	58	001	000	000	000
033	0511053431	HANDRAIL ASSY	59	000	001	000	000
034	0511054309	JOINT HANDRAIL SET	60	000	000	001	000
035	0511053476	JOINT HANDRAIL SET	61	000	000	000	001
036	0511053482	SET FIXER HEADER	62	001	001	001	001
037	0511054971	RESTING ASSEMBLY	63	002	002	002	002
038	0503011957	NYLON LUG		002	002	002	002
039	0503010371	5/16" X 1" BOLT		004	004	004	004
040	0503010179	5/16" ZN SPRING WASHER		004	004	004	004
041	0503010337	5/16" NUT		004	004	004	004
042	0511056598	MANUAL STORAGE TUBE ASSY	64	001	001	001	001
043	0503034003	SERIAL NUMBER TAG 61 X 118		001	001	001	001
044	0503010001	3.2 X 5.5 RIVET		004	004	004	004
045	0511050443	WHITH RIGHT WHEEL ASSY WITHOUT TRANSMISSION	65	002	002	002	002
046	0511050444	WHITH LEFT WHEEL ASSY WITHOUT TRANSMISSION	66	002	002	002	002
047	0511050439	RIGHT WHEEL ASSY	71	001	001	001	001
048	0511050440	WHITH LEFT WHEEL ASSY	72	001	001	001	001
049	0511053685	HYDRAULIC MARKER LABEL ASSY 8	76	001	000	000	000
050	0511053432	SET LABEL ADHESIVE	77	000	001	000	000
051	0511054858	ASSY STICKER	78	000	000	001	000
052	0511053483	SET LABEL ADHESIVE	79	000	000	000	001
053	0511059524	ASSEMBLY CSU	80	001	000	000	000
054	0521052906	ASSEMBLY CSU		000	001	000	000
054.	0521050783	ASSEMBLY CSU	81	000	001	000	000
055	0521050884	ASSEMBLY CSU	82	000	000	001	000
056	0511058434	ASSEMBLY CSU	83	000	000	000	001
057	0503010026	3/8" NUT		010	010	010	010
058	0503010246	CLAMP		015	015	015	015
059	0511050644	DRAWBAR ASSY	85	001	000	000	001
060	0511053436	DRAWBAR ASSY	86	000	001	000	000
061	0511053393	DRAWBAR	87	000	000	001	000
062	0521010573	0.9" X 3.1" COUPLING SHAFT		004	004	004	004
063	0511053342	SQUARE AXLE ASSEMBLY (730)	88	001	001	001	001
064	0571013314	GUTTER 25 X 58 X 1500		002	002	002	002
065	0501011643	3/8 X 1" BOLT		010	010	010	010
066	0501010984	FLAT WASHER		010	010	010	010
067	0503010025	3/8" SPRING WASHER		010	010	010	010
068	0561019087	DRAWBAR TRANSPORT LOCK		001	001	001	001
069	0541011767	HOSE FIXATION		001	001	001	001
070	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		002	002	002	002
071	0503010025	3/8" SPRING WASHER		002	002	002	002
072	0503010026	3/8" NUT		002	002	002	002
073	0521013022	TRANSPORT LOCK		008	008	008	008
074	0501068994	0.3" X 3.1" LOCK PIN		008	008	008	008
075	0503030168	HAIR PIN		008	008	008	008
076	0503011750	AMENDMENT WITH LOCK		006	006	006	006
077	0503011751	REDUCTION		006	006	006	006
078	0503010780	N-2050 AMENDMENT		006	006	006	006
079	0501047895	ROD STOP		008	008	008	008
080	0503014120	CHAIN		001	001	001	001
081	0503014321	CABLE STEEL SHACKLE		002	002	002	002
082	0501047885	ROD STOP		008	008	008	008
083	0501047886	ROD STOP		008	008	008	008
084	0501047887	ROD STOP		008	008	008	008
085	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		001	001	001	001
086	0511053179	TRACTOR HITCH AXLE	89	001	001	001	001
087	0511055096	TRACTOR HITCH	90	001	001	001	001


FRAME ASSY

0909095557

Item	Code	Description	See page	3495	4045	5345	7545
088	0501054605	DRAWBAR TURNBUCKLE	92	001	001	001	001
089	0501054428	ASSY HEADER EXTENSOR	91	002	002	002	002
090	0503032624	SILO FERTILIZER GUTTER		007	007	007	007
091	0502012702	BODY SUPPORT CLAMP		001	001	001	001
092	0531011180	UPPER BODY CLIP		001	001	001	001
093	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		001	001	001	001
094	0503010180	7/16" SPRING WASHER		001	001	001	001
095	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	93	001	001	001	001
096	0503010045	O'RING		001	001	001	001
097	0541010080	TERMINAL R.1 / 2 NPT		001	001	001	001
098	0571015343	NIPLE 1 / 2NPT X 3 / 4NPT		001	001	001	001
099	0581013729	NIPLE 1/2 NPT		001	001	001	001
100	0521018531	1.4" X 4.5" COUPLING SHAFT		001	001	001	001
101	0521018532	1.4" X 12" COUPLING SHAFT		001	001	001	001
102	0511025997	BOX WITH HYDRAULIC MARKER COMPONENTS	94	001	001	001	001
103	0521053426	MONITORING ASSEMBLY PLANTING SEEDS 15L PM400	97	000	000	000	001
104	0521053444	PLANTING MONITORING ASSY 8L SEED PM400	98	000	001	000	000
105	0571018663	SUPPORT GUTTER		010	010	010	010
106	0571013313	GUTTER 25 X 58 X 2150		002	002	002	002
107	0511053680	HIDRAULIC ROW MARKER	99	001	000	000	000
108	0511054306	MARKER CYLINDER	100	000	000	001	000
109	0511053426	MARKER HIDRAULICO	101	000	001	000	000
110	0511053474	HYDRAULIC ASSEMBLY FOR MARKER	102	000	000	000	001
111	0909095559	ASSY SEED/FERTILIZER LINE	103	006	008	011	015

MOTOR SHAFT ASSEMBLY

 
0511053675

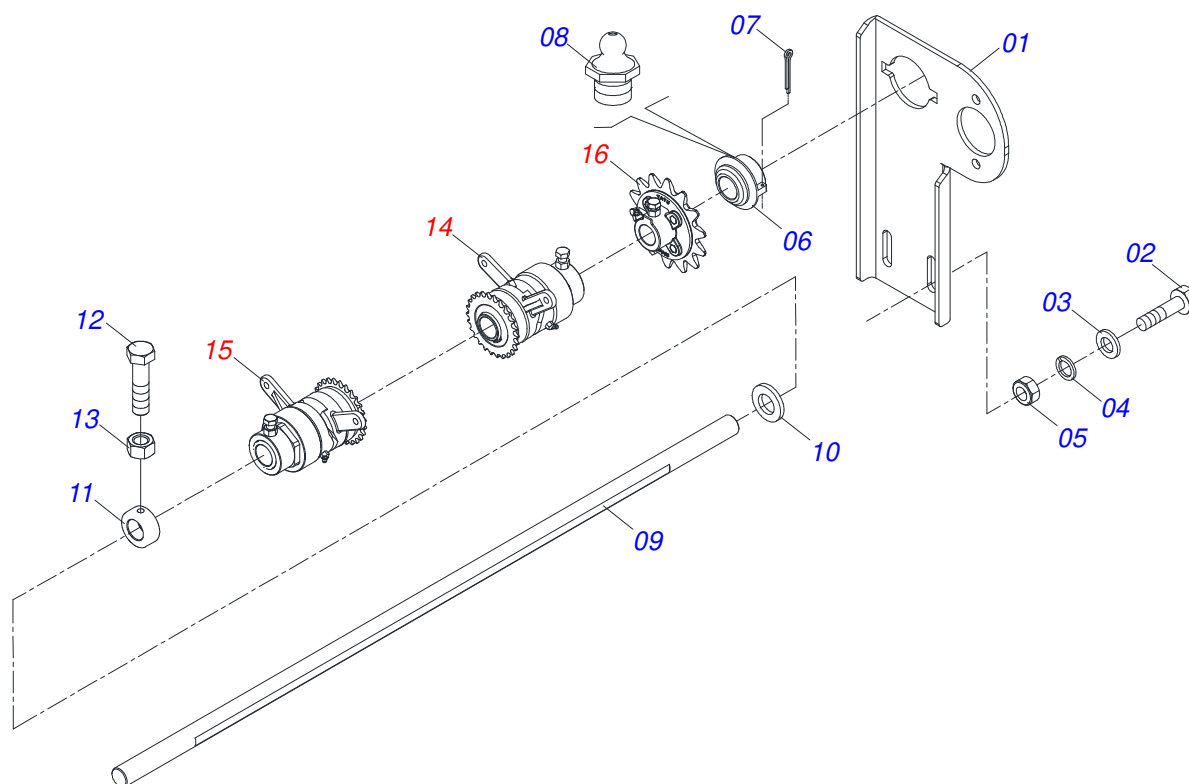

Item	Code	Description	See page	QT
01	0561017269	MOTOR AXLE BEARING SUPPORT		04
02	0503011082	C1/2" X 1.3/4" SCREW		08
03	0511017302	FLAT WASHER		16
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0501110639	BEARING		08
07	0503010300	5/32" X 1" COTTERPIN		08
08	0503011099	GREASE FITTING		08
09	0571013829	MOTOR AXLE		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0511047069	SIDE TRANSMISSION DRIVING	5	01
15	0511047070	LH SIDE TRANSMISSION DRIVING	6	01
16	0511051434	TRANSMISSION DRIVING ASSY	7	04

MOTOR SHAFT ASSEMBLY

 
0511054304

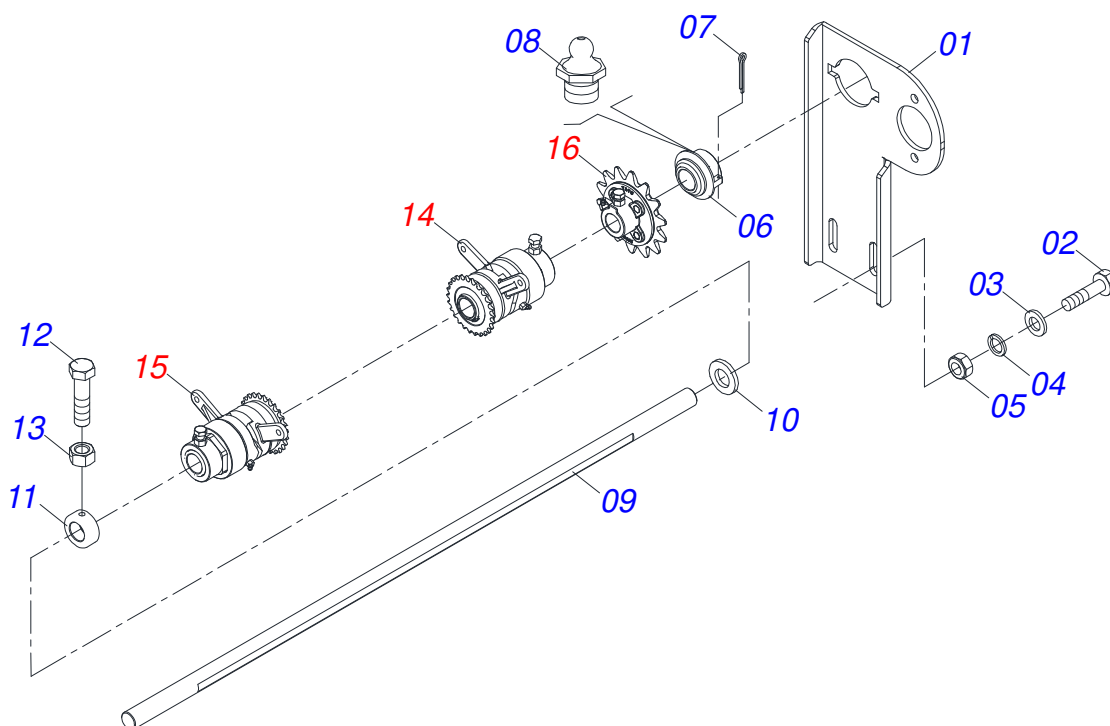


Item	Code	Description	See page	QT
001	0561017269	MOTOR AXLE BEARING SUPPORT		04
002	0503011082	C1/2" X 1.3/4" SCREW		08
003	0511017302	FLAT WASHER		16
004	0503010019	1/2" SPRING WASHER		08
005	0503010060	1/2" NUT		08
006	0501110639	BEARING		08
007	0503010300	5/32" X 1" COTTERPIN		08
008	0503011099	GREASE FITTING		08
009	0561019204	MOTOR SHAFT		02
010	0501018466	FLAT WASHER		04
011	0511015961	LOCK BUSHING		04
012	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
013	0503010060	1/2" NUT		04
014	0511047069	SIDE TRANSMISSION DRIVING	5	01
015	0511047070	LH SIDE TRANSMISSION DRIVING	6	01
016	0511051434	TRANSMISSION DRIVING ASSY	7	04

MOTOR SHAFT ASSEMBLY

 
0511053423

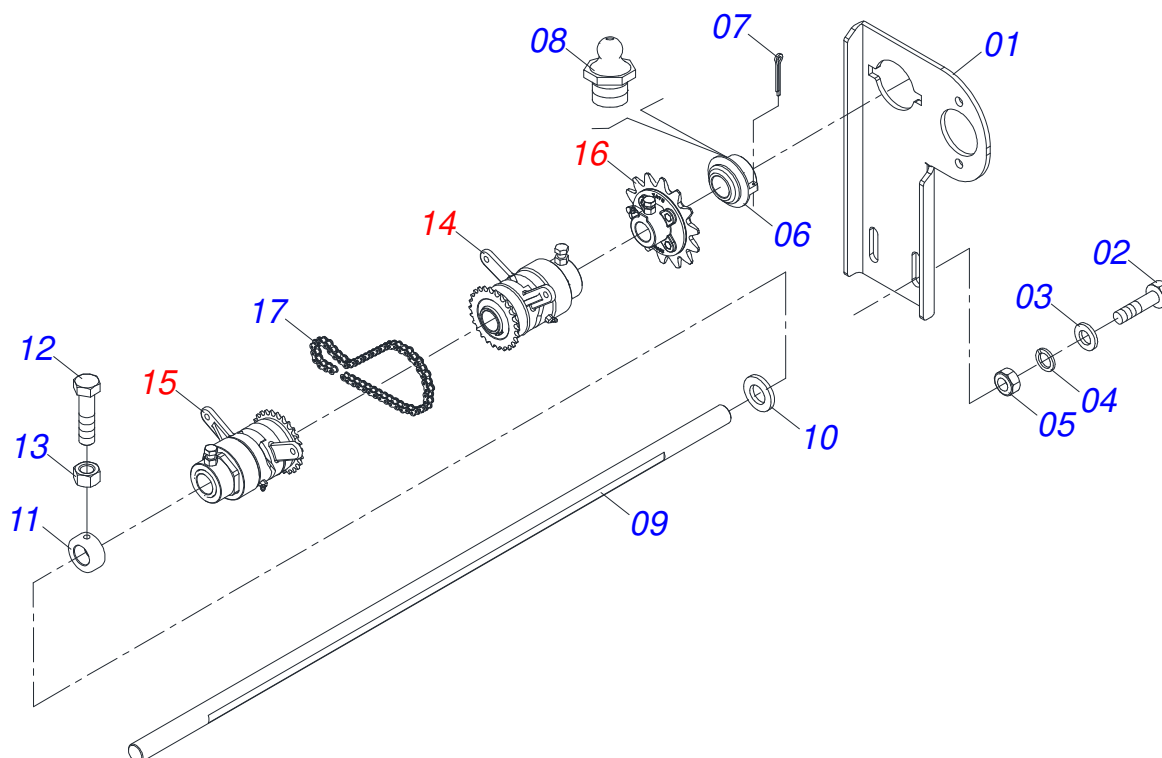


Item	Code	Description	See page	QT
01	0561017269	MOTOR AXLE BEARING SUPPORT		04
02	0503011082	C1/2" X 1.3/4" SCREW		08
03	0511017302	FLAT WASHER		16
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0501110639	BEARING		08
07	0503010300	5/32" X 1" COTTERPIN		08
08	0503011099	GREASE FITTING		08
09	0561016881	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0511047069	SIDE TRANSMISSION DRIVING	5	01
15	0511047070	LH SIDE TRANSMISSION DRIVING	6	01
16	0511051434	TRANSMISSION DRIVING ASSY	7	04
17	0503012958	2050 CHAIN X 42 LINK + REDUCTION		04

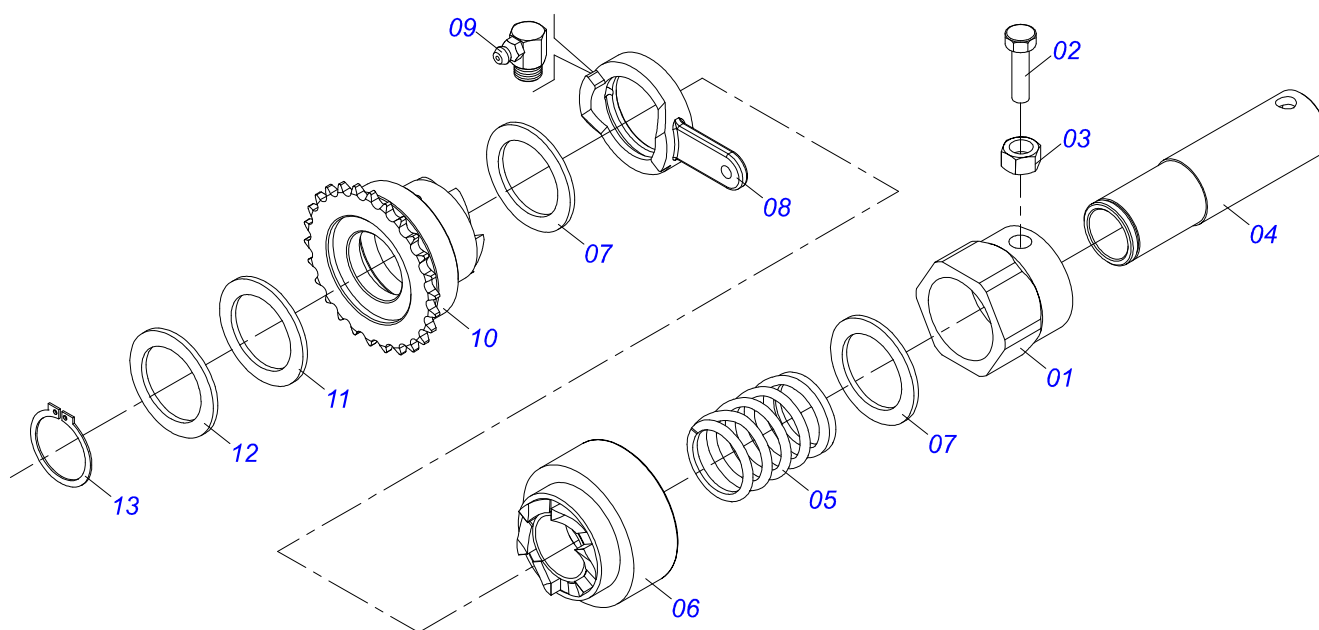 

Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

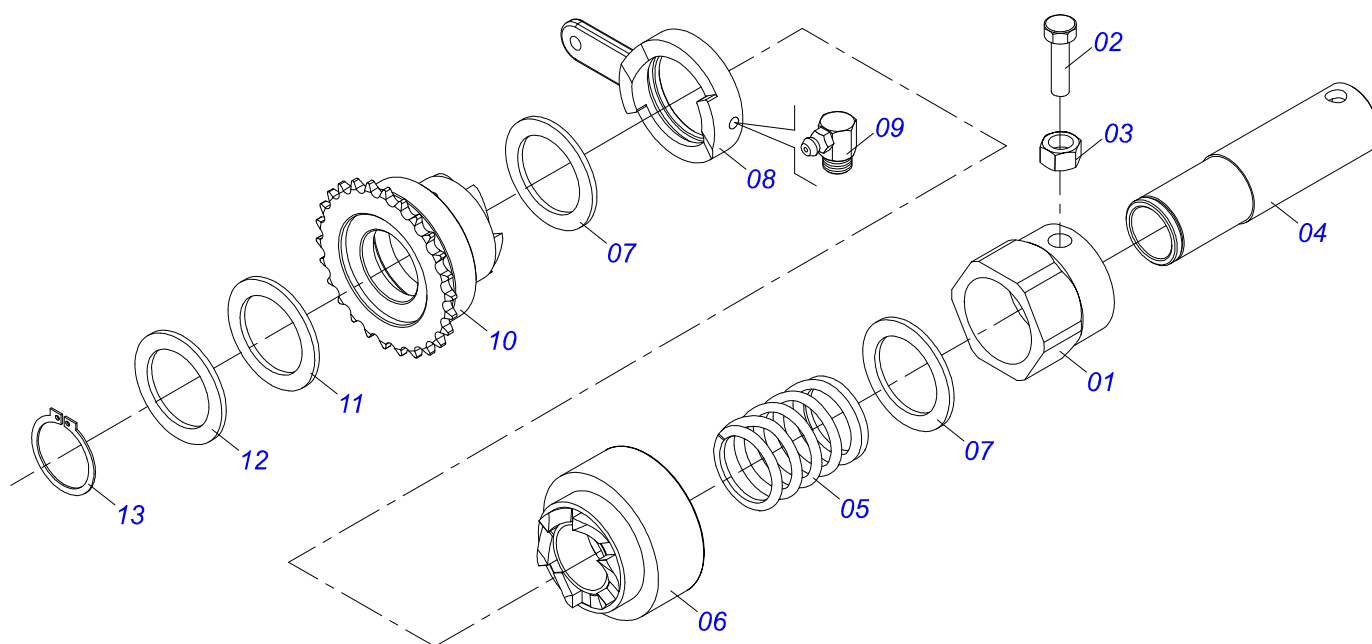 


Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

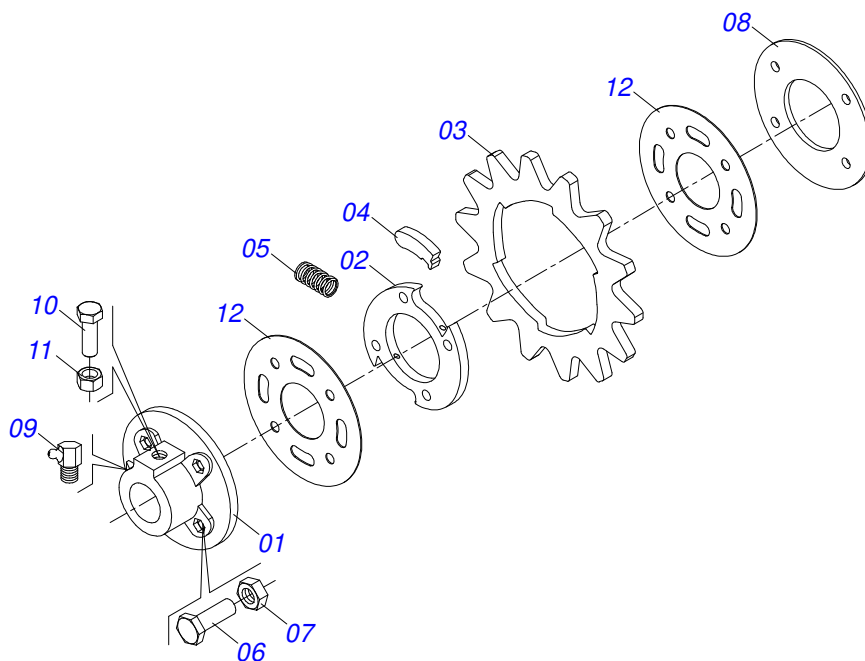 

Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

HEX AXLE ASSEMBLY

 
0511053676

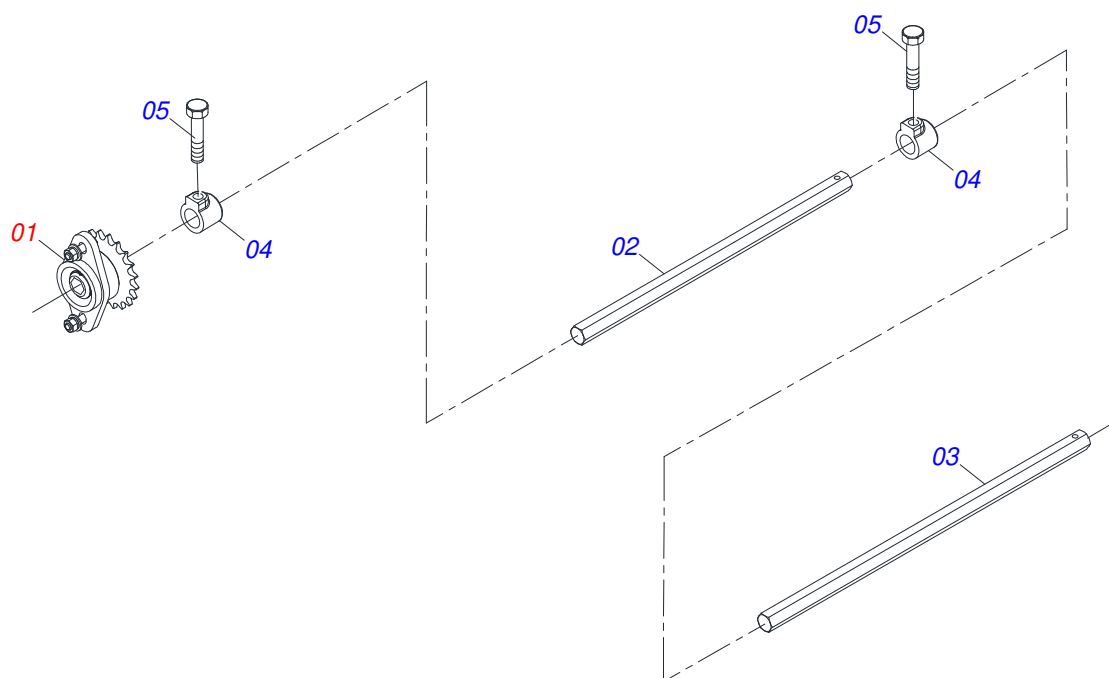

Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		02
02	0561018688	HEX SHAFT 5/8" X 1775		01
03	0561018687	HEX AXLE		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

HEX AXLE ASSEMBLY

 
0511053424

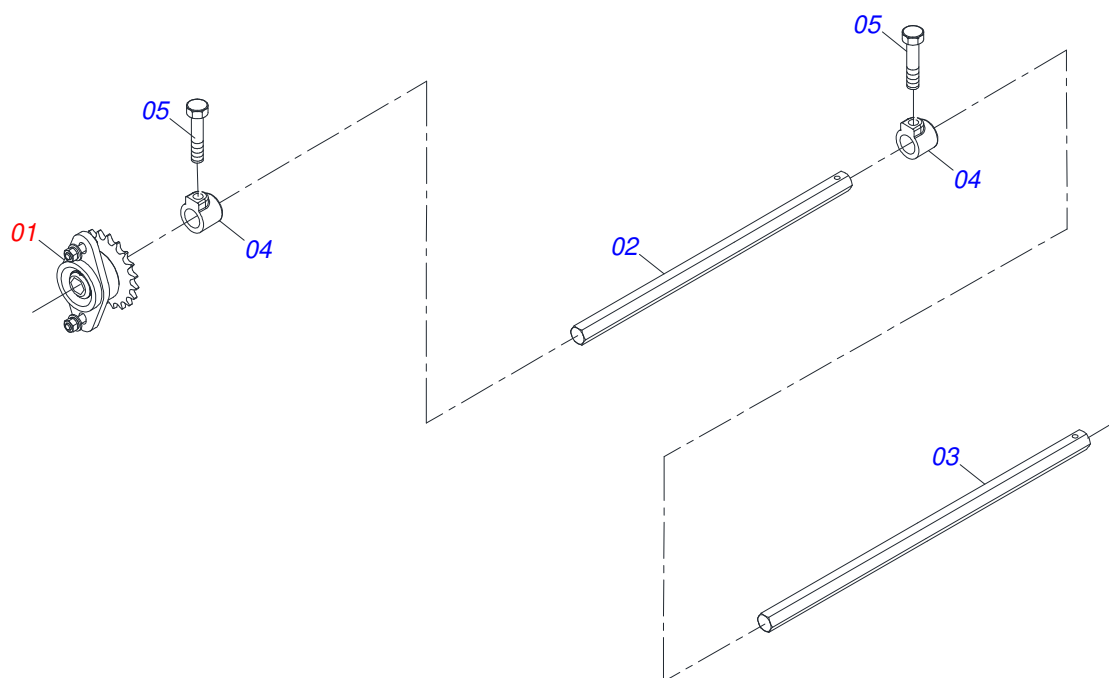

Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	02	
02	0531016942	RIGHT HEX AXLE 5/8 X 2050	01	
03	0531016943	LEFT HEX AXLE 5/8 X 1900	01	
04	0511063123	BUSHING WITH NUT	04	
05	0503010834	1/2 X 1 BOLT	04	

HEX AXLE ASSEMBLY

 
0511054303

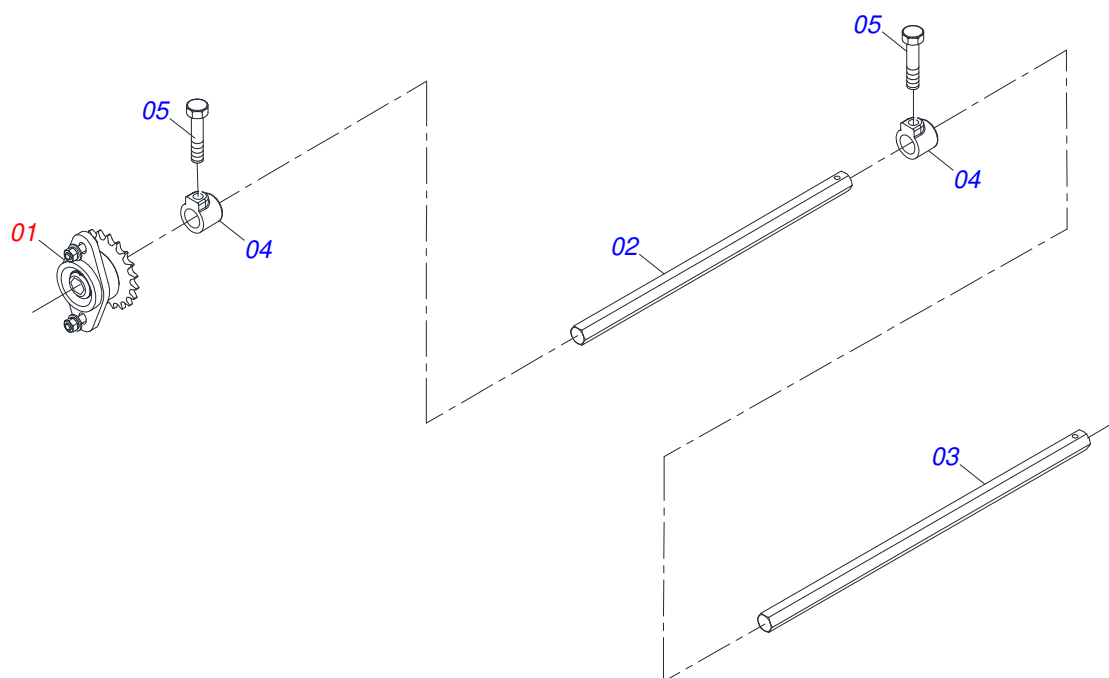


Item	Code	Description	See page	QT
01	0501053610	BEARING WITH 17Z GEAR INNER AXLE		02
02	0561019203	HEX AXLE 5/8 X 2525 LEFT		01
03	0561019202	HEX AXLE RIGHT		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

HEX AXLE ASSEMBLY

 
0511053480

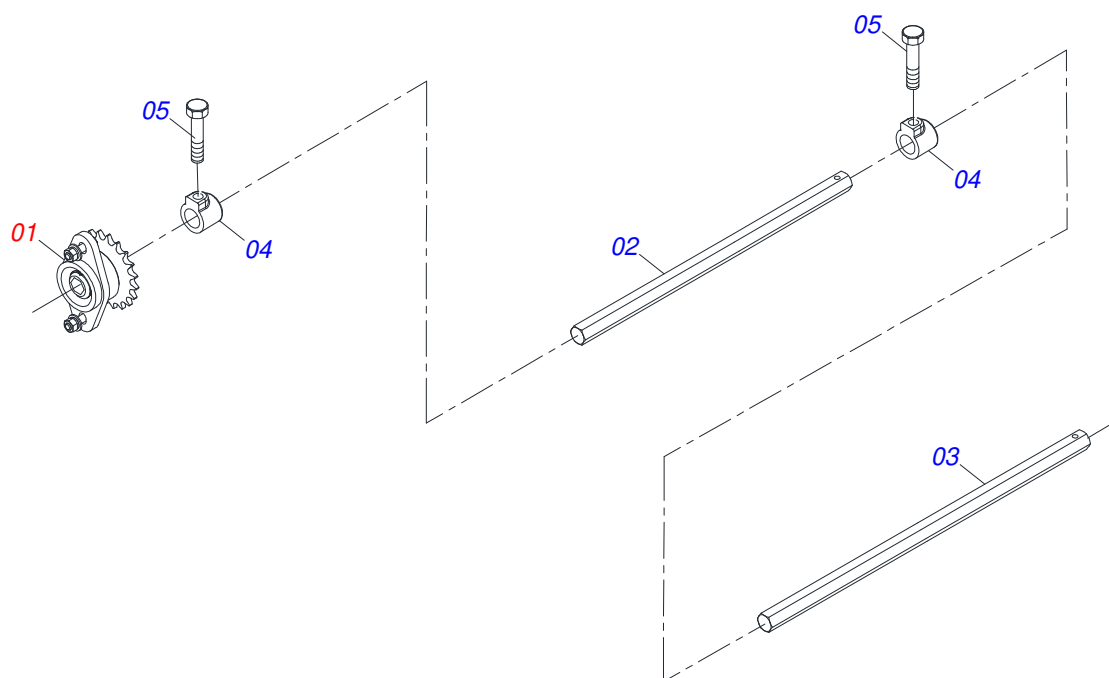


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	02	
02	0541012845	5/8" X 3800 AXLE HEX	01	
03	0541012846	5/8" X 3650 AXLE HEX	01	
04	0511063123	BUSHING WITH NUT	04	
05	0503010834	1/2 X 1 BOLT	04	

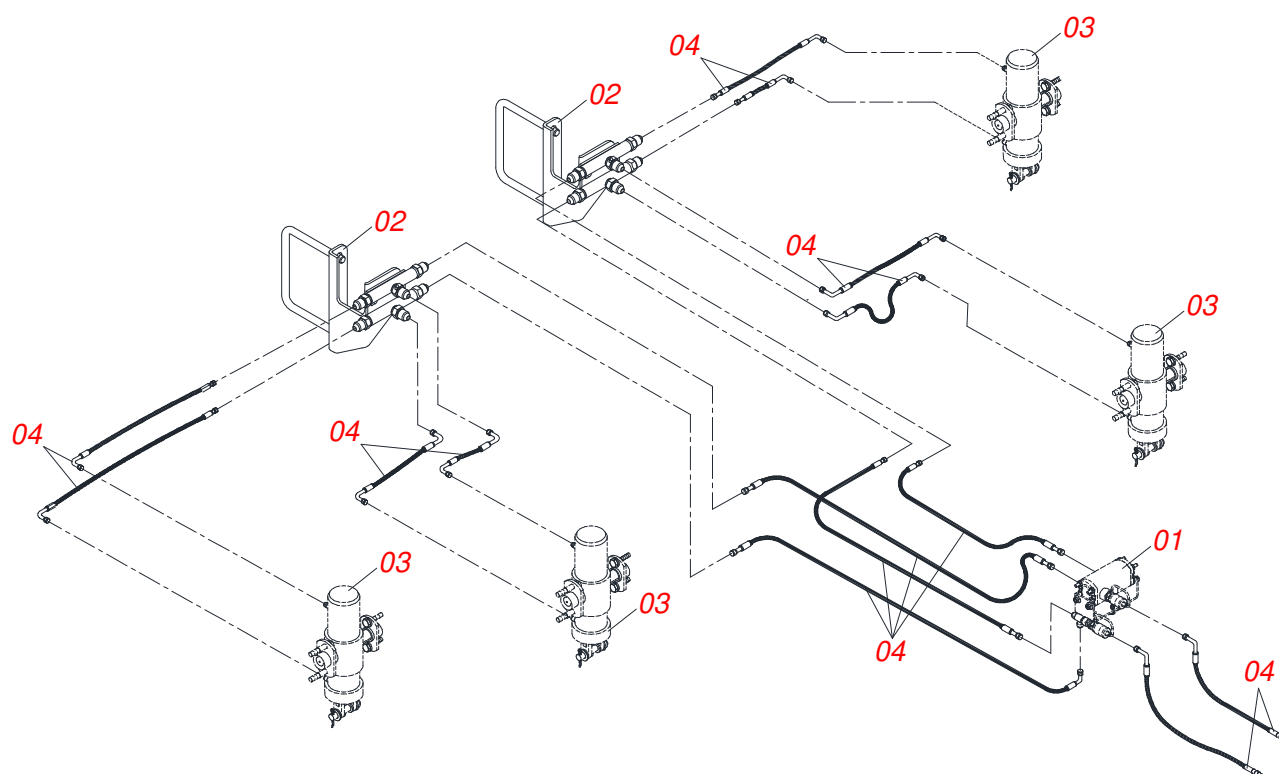 


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	16	01
02	0511053592	FIXADOR SET OF HYDRAULIC MANGUEIRA		01
03	0511053384	HYDRAULIC CYLINDER ASSEMBLY	21	01
04	0511053678	HOSE KIT	24	01

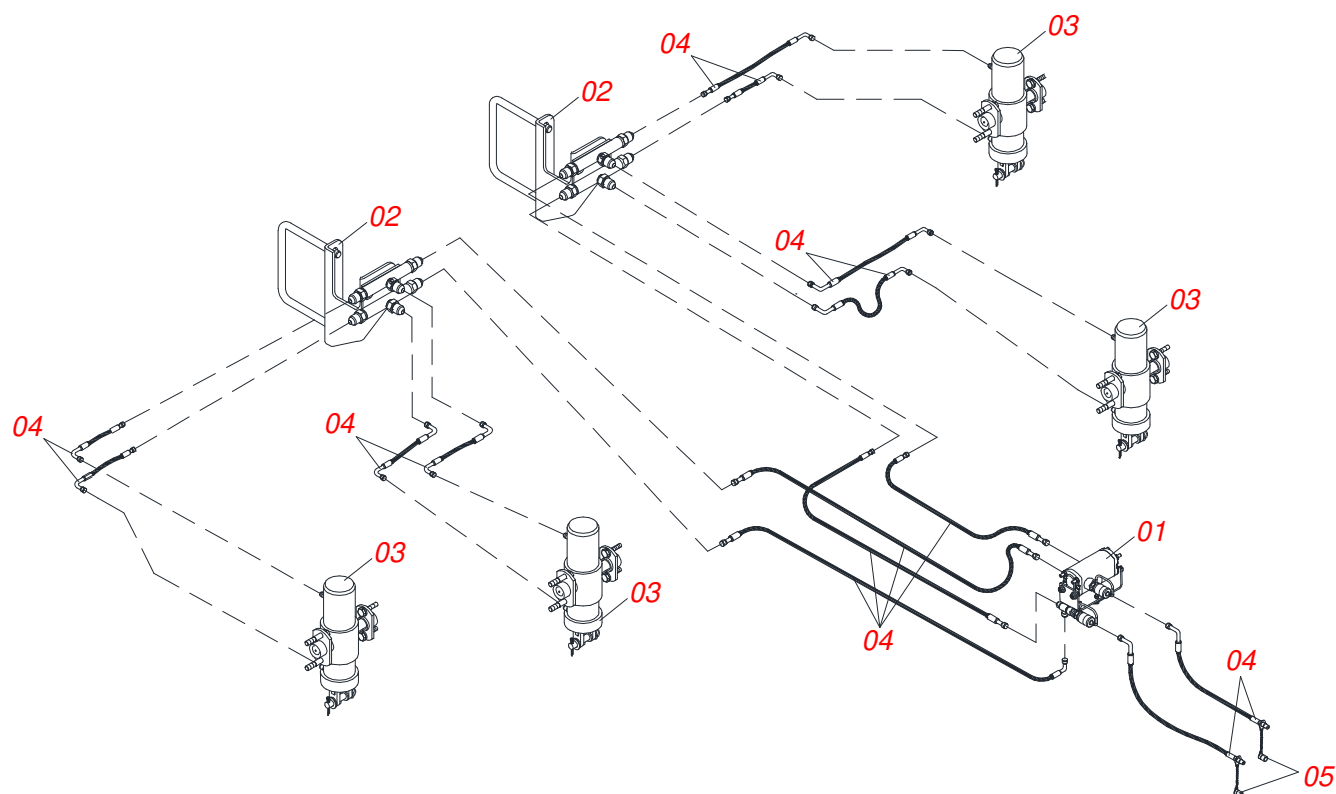 

Item	Code	Description	See page	09 L
001	0511053358	VALVE FIXING ASSEMBLY	16	01
002	0511056292	FIXER HYDRAULIC HOSE ASSEMBLY		01
003	0511053384	HYDRAULIC CYLINDER ASSEMBLY	21	01
004	0511053425	HOSE KIT		01
005	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	93	02

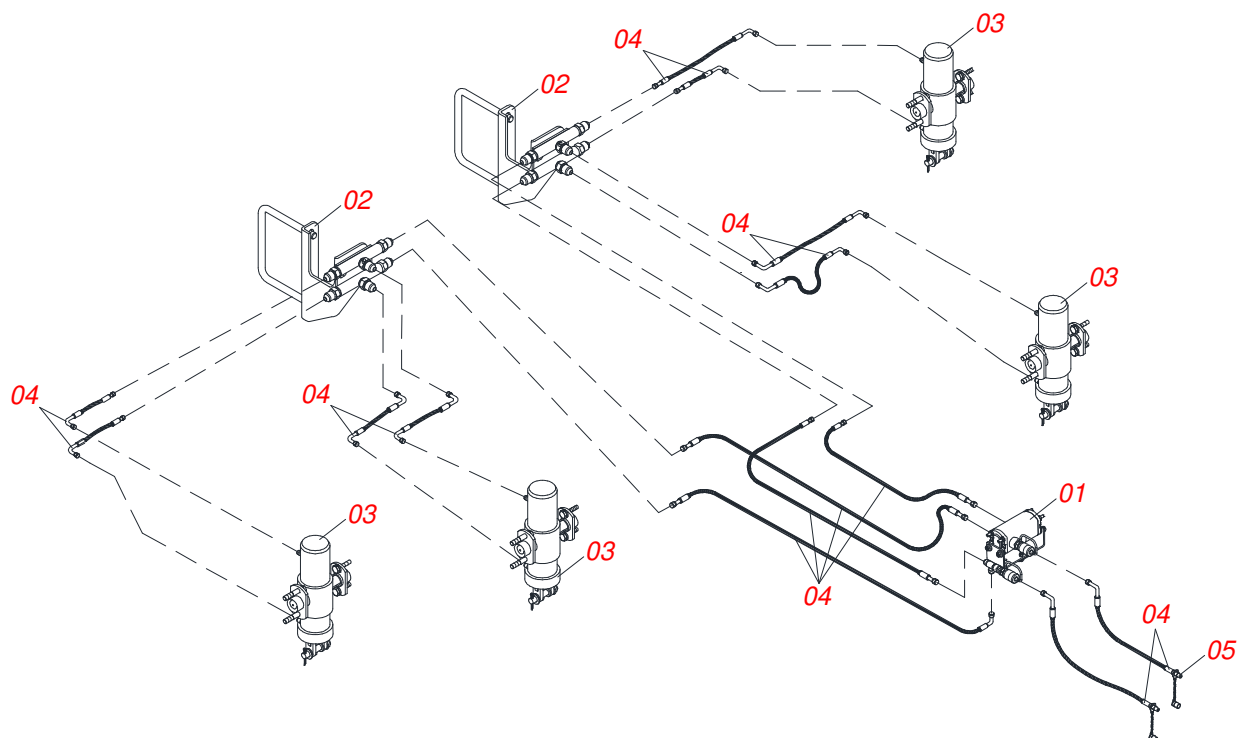 


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	16	01
02	0511056278	FIXER HYDRAULIC HOSE ASSEMBLY		01
03	0511053384	HYDRAULIC CYLINDER ASSEMBLY	21	01
04	0511054302	HOSE KIT		01
05	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	93	02

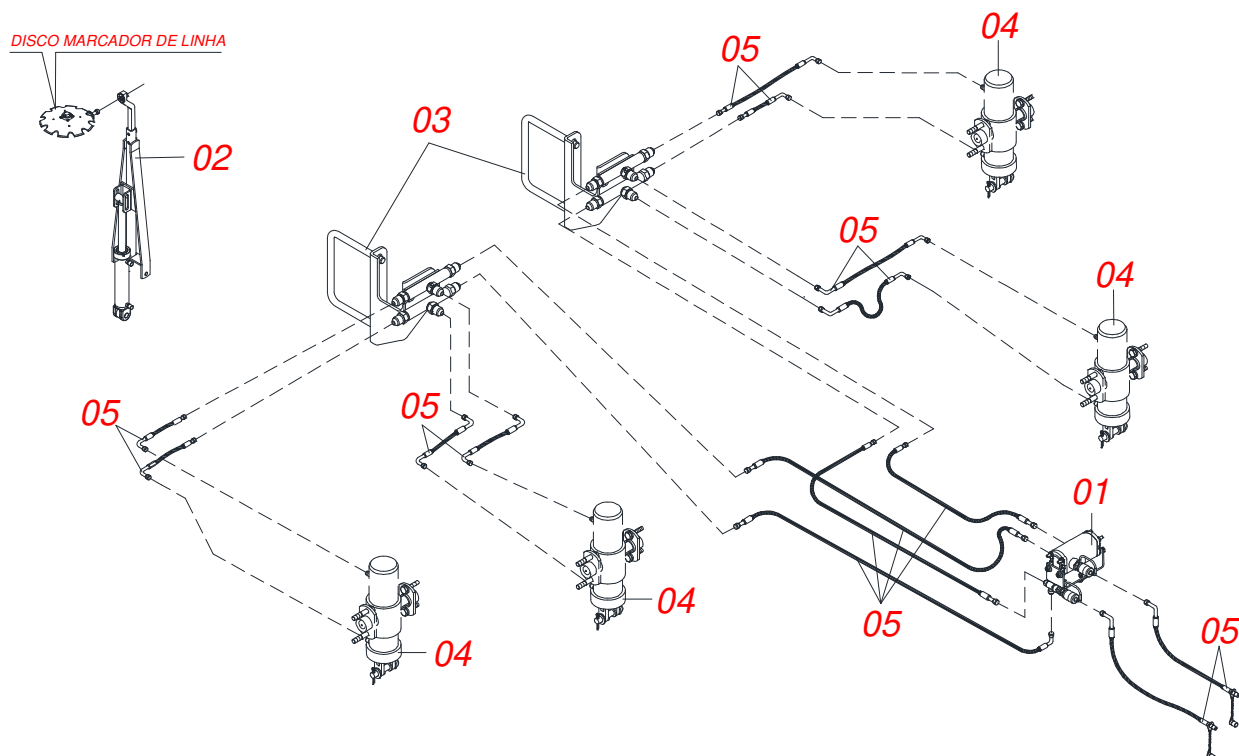 


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	16	01
02	0511053474	HYDRAULIC ASSEMBLY FOR MARKER	102	01
03	0511053948	FIXER HYDRAULIC HOSE ASSEMBLY	19	01
04	0511053475	HYDRAULIC CYLINDER ASSEMBLY 8 WHEEL	20	01
05	0511053316	HOSE KIT	23	01

VALVE FIXING ASSEMBLY

 0511053358

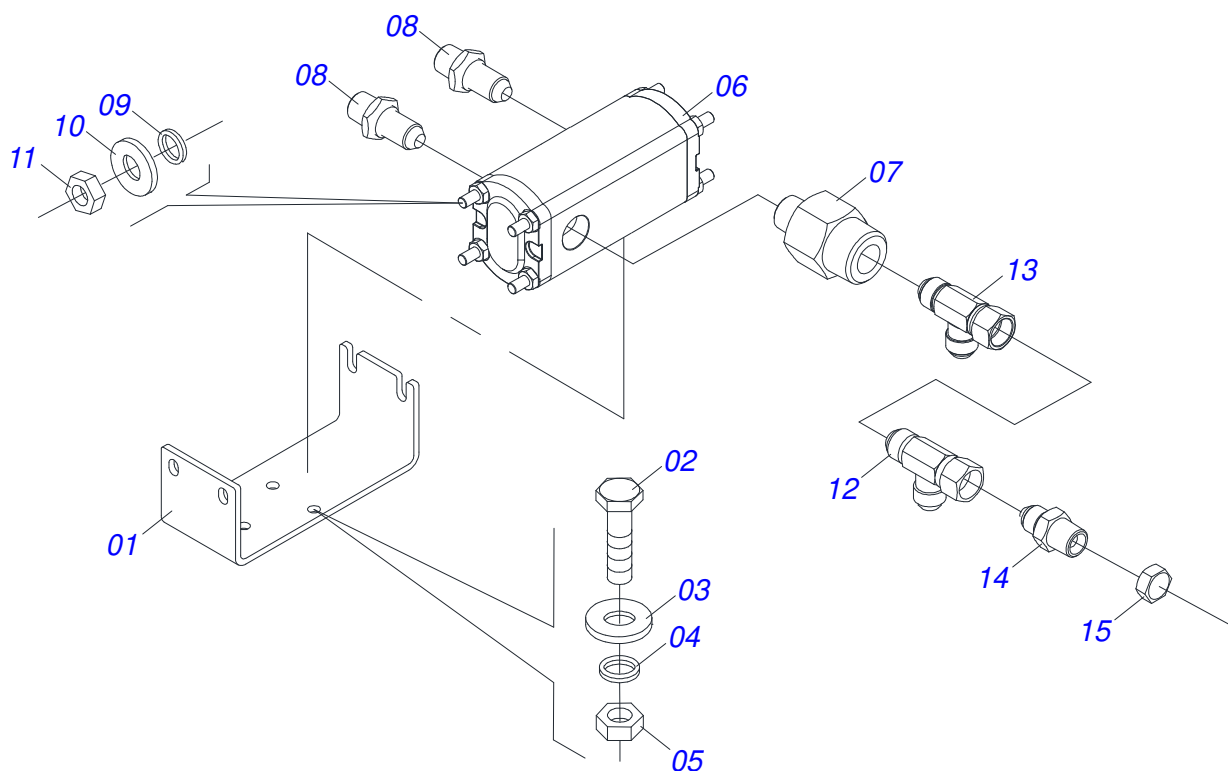


Item	Code	Description	See page	QT
01	0571010596	SUPPORT VALVE 50/50		01
02	0503010371	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02
06	0503013791	DOUBLE MOTOR		01
07	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE		01
08	0551012463	1/2" BSPT X 3/4" UNF X 51 NIPPLE		02
09	0503015075	M10 SPRING WASHER		04
10	0501010984	FLAT WASHER		04
11	0503011051	M10 X 0.6" NUT		04
12	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
13	0503012341	T 7/8" ADAPOR GIRAT NUT		02
14	0541012166	NIPPLE 3/4" UNF X 7/8"		01
15	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01

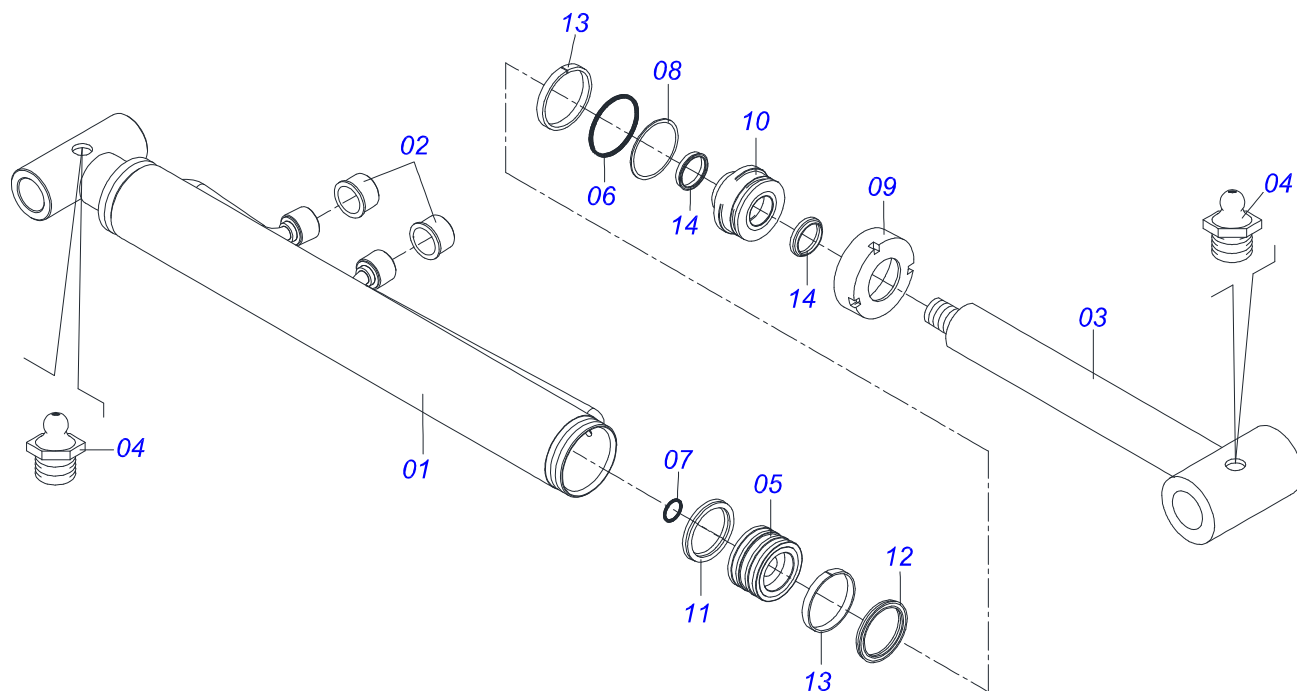 


Item	Code	Description	See page	QT
01	0501067104	2.5" X 25" CYLINDER CASE	01	
02	0503030384	CON PLUG N-001	02	
03	0521066632	EXTENDER	01	
04	0503010002	1800 GREASE FITTING	02	
05	0502012837	PISTON	01	
06	0503018005	RING	01	
07	0503011109	2-119 N 3006-9B O'RING	01	
08	0503010163	D-1500 SCRAPER RING	01	
09	0502010471	MOBILE COVER	01	
10	0581010668	RING SUPPORT	01	
11	0503018004	RING	01	
12	0503018003	GASKET	01	
13	0503018163	BACK-UP RING	02	
14	0503018162	O'RING	02	

HYDRAULIC CYLINDER

 
0511058431

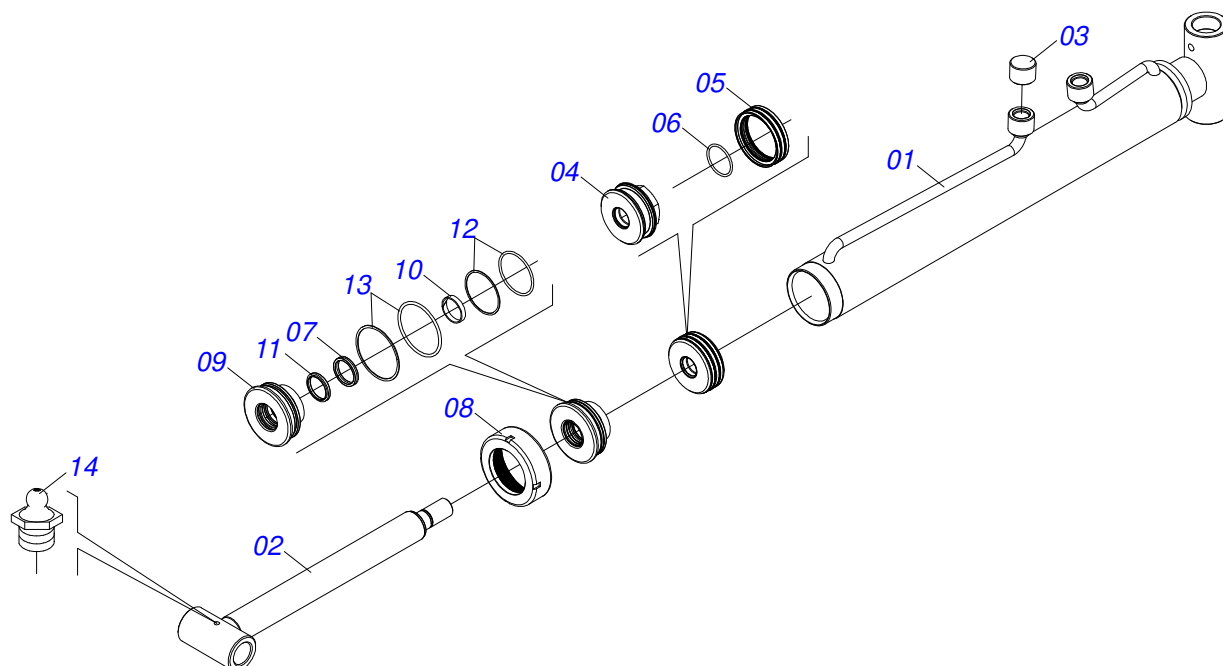


Item	Code	Description	See page	QT
01	0501067700	2.5" X 25" CYLINDER CASE		01
02	0521066632	EXTENDER		01
03	0503030384	CON PLUG N-001		02
04	0502012837	PISTON		01
05	0503018005	RING		01
06	0503011109	2-119 N 3006-9B O'RING		01
07	0503010163	D-1500 SCRAPER RING		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503018004	RING		01
11	0503018003	GASKET		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0503010002	1800 GREASE FITTING		02

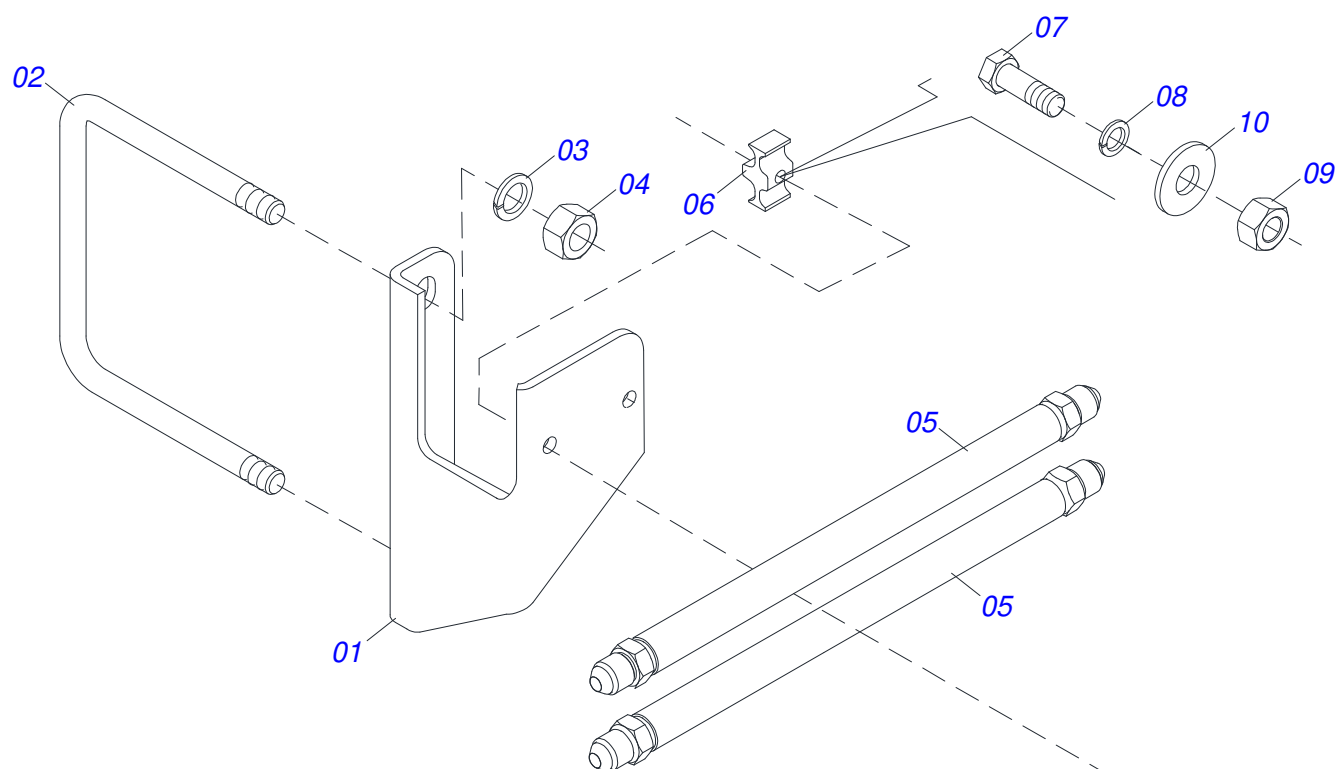 

Item	Code	Description	See page	QT
01	0561017277	OIL CONDUCTOR FIXER PLATE		04
02	0521010718	5/8" U BOLT		04
03	0503010027	5/8" SPRING WASHER		08
04	0503010013	5/8" NUT		08
05	0521065263	MH OIL CONDUCTOR		04
06	0502012702	BODY SUPPORT CLAMP		04
07	0503011268	3/8" X 2-1/2" BOLT		04
08	0503010025	3/8" SPRING WASHER		04
09	0503010026	3/8" NUT		04
10	0501012140	FLAT WASHER		08

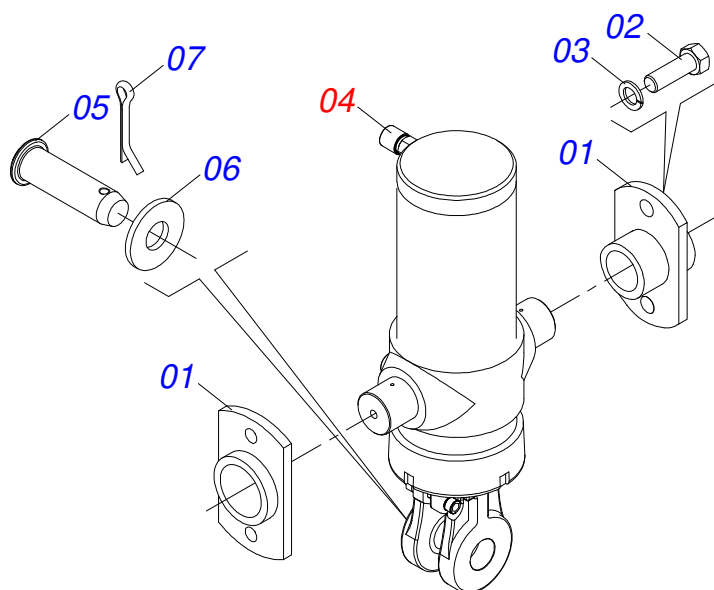 


Item	Code	Description	See page	QT
01	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		16
02	0503010834	1/2 X 1 BOLT		32
03	0503010019	1/2" SPRING WASHER		32
04	0511058411	HYDRAULIC CYLINDER	22	08
05	0521010546	1.2" X 5.7" COUPLING SHAFT		08
06	0501017779	32 X 60 X 4.75 FLAT WASHER		16
07	0503010523	1/4" X 2" COTTERPIN		08

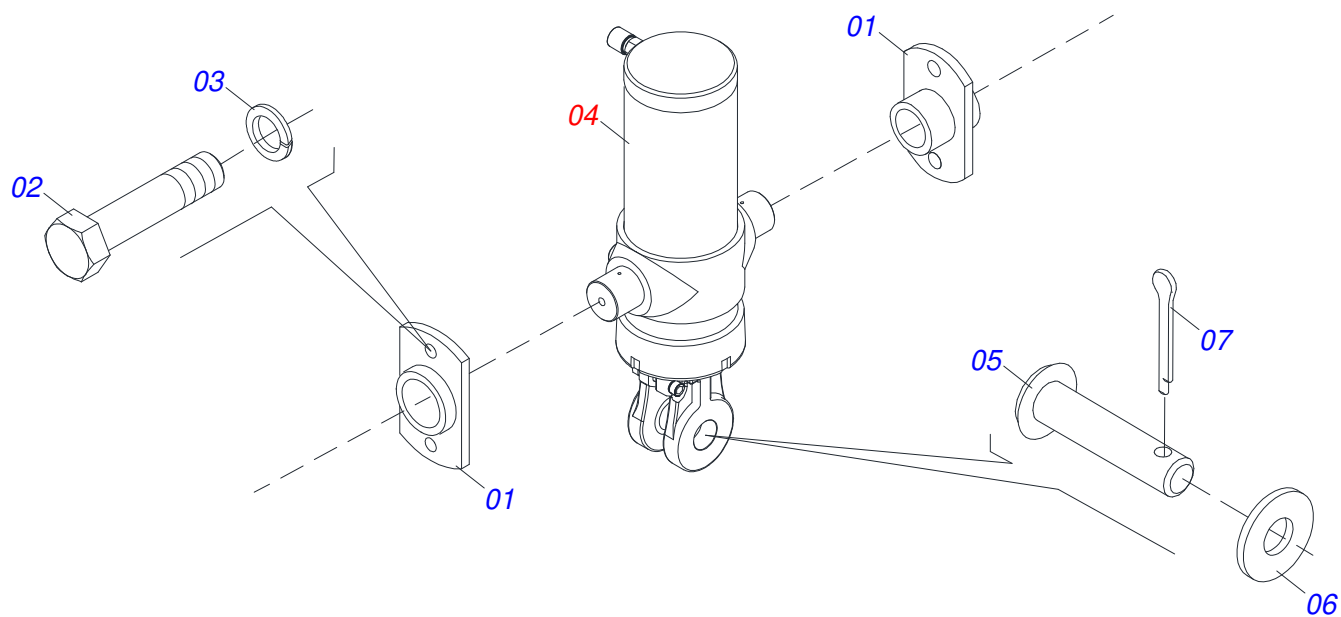 


Item	Code	Description	See page	QT
01	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		08
02	0503010834	1/2 X 1 BOLT		16
03	0503010019	1/2" SPRING WASHER		16
04	0511058411	HYDRAULIC CYLINDER	22	04
05	0521010546	1.2" X 5.7" COUPLING SHAFT		04
06	0501017779	32 X 60 X 4.75 FLAT WASHER		08
07	0503010523	1/4" X 2" COTTERPIN		04

HYDRAULIC CYLINDER

 0511058411

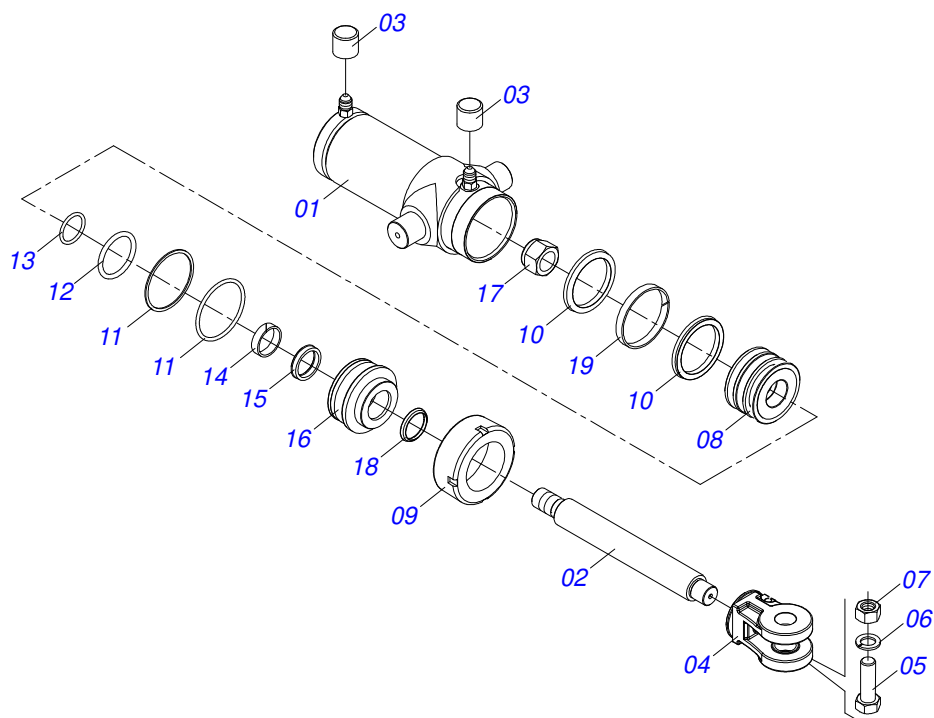


Item	Code	Description	See page	QT
01	0511066774	2.5" X 28" CYLINDER CASE		01
02	0541017674	TURNBUCLE BODY		01
03	0503030385	CYLINDER PLUG N-002		02
04	0511064408	FORK		01
05	0503011094	3/8" X 2" BOLT		01
06	0503010025	3/8" SPRING WASHER		01
07	0503010026	3/8" NUT		01
08	0581010302	RING OF SUPPORT		01
09	0502012822	101.60 END CAP		01
10	0503011061	8-342 BACK-UP RING		02
11	0503010338	2-342 N 3006-9B O'RING		02
12	0503017936	RING		01
13	0503017938	RING GUIDE		01
14	0503017937	GASKET		01
15	0503010761	D-1750 SCRAPER RING		01
16	0581010837	PISTON		01
17	0503010817	1.1/4" SELF LOCKING NUT		01
18	0503015633	SELEMASTER SEALING		01
19	0503018029	2-217 O'RING		01

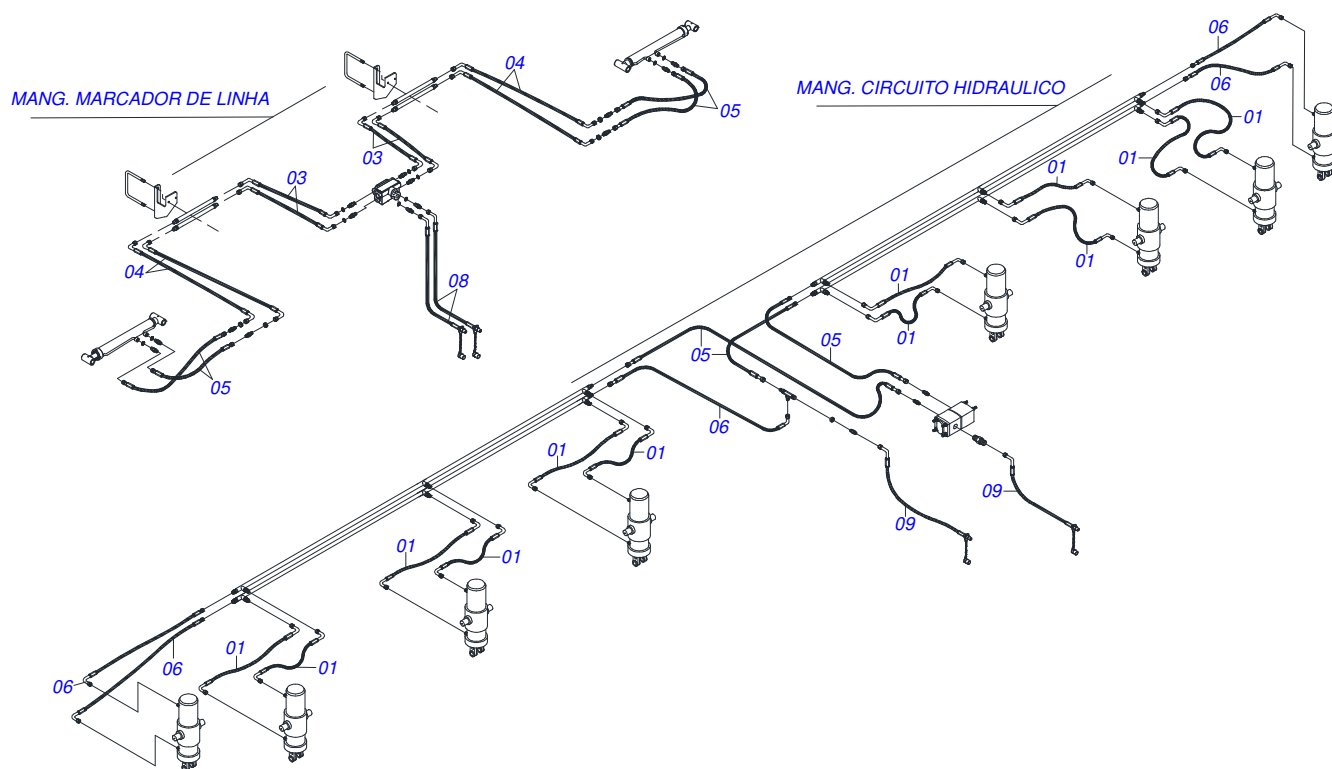 


Item	Code	Description	See page	QT
01	0501080760	3/8" X 500 TC-TC HOSE		12
02	0501080193	HOSE		02
03	0501080124	HOSE 3/8 X 900 TR-TC		04
04	0501080675	HOSE 3/8 X 1000 TC-TC 180G		04
05	0501080352	3/8" X 1400 TR-TR HOSE ASSY		03
06	0501080025	TR-TC HOSE ASSY		05
07	0501080714	HOSE 3/8 X 1600 TR-TC		04
08	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
09	0501081073	HOSE 1/2 X 4200 TC-TM		02

HOSE KIT

 0511053678

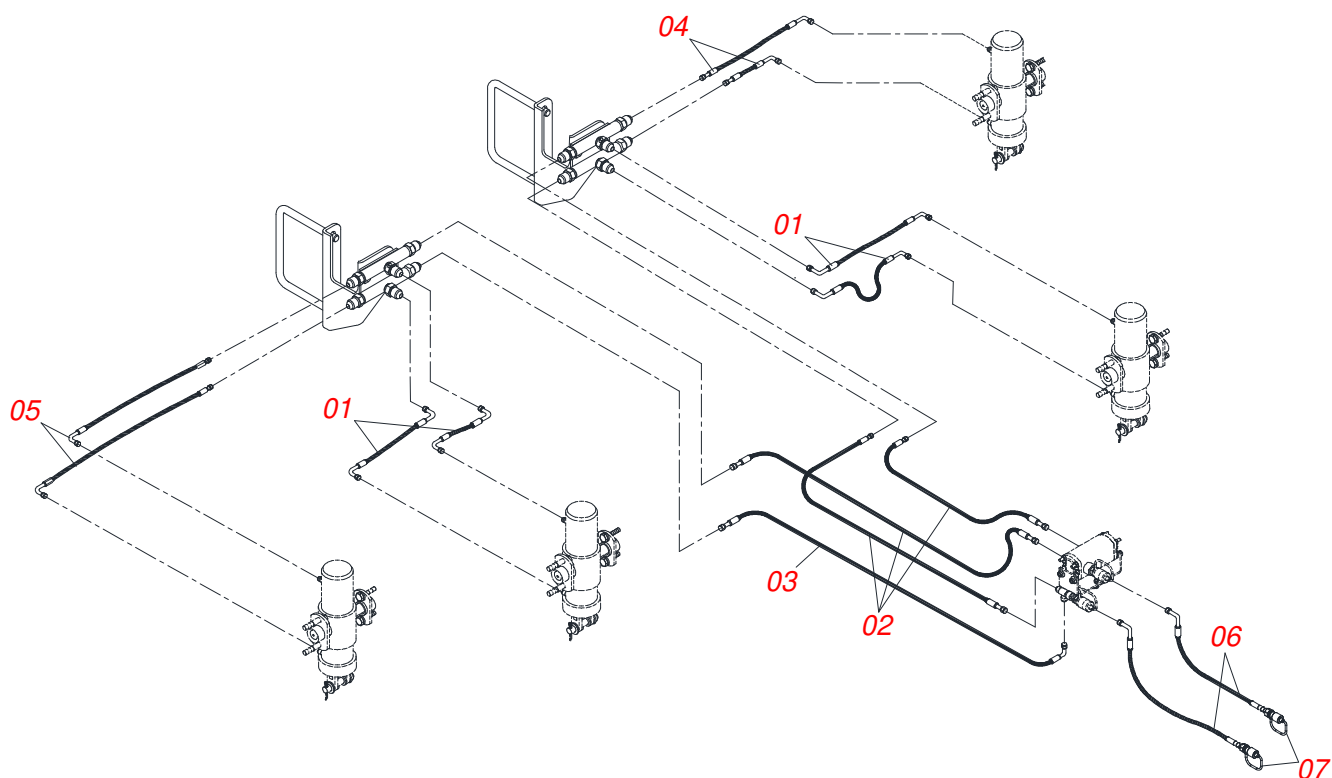


Item	Code	Description	See page	QT
01	0501080760	3/8" X 500 TC-TC HOSE		04
02	0501080027	3/8" X 39,3" TR-TR HOSE ASSY		03
03	0501080055	3/8" X 1000 TR-TC HOSE		01
04	0501080302	TR-TC HOSE ASSY		02
05	0501080714	HOSE 3/8 X 1600 TR-TC		02
06	0501081073	HOSE 1/2 X 4200 TC-TM		02
07	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	93	02

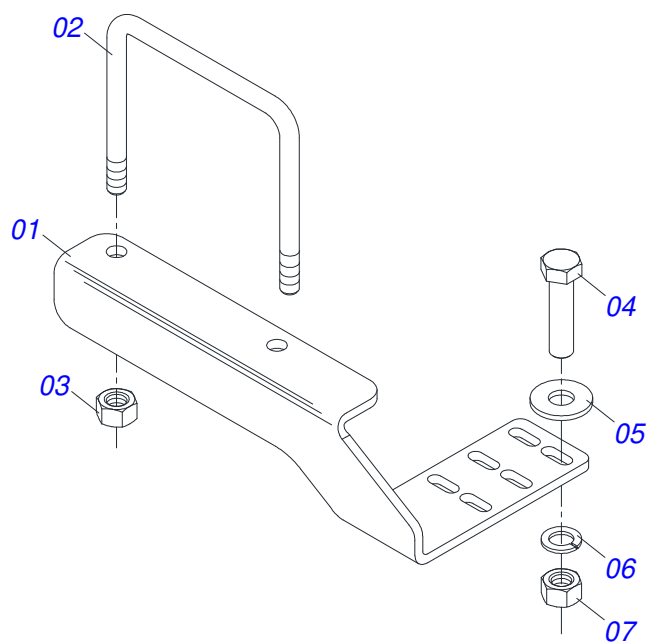 

Item	Code	Description	See page	QT
01	0561019899	RIGHT SUPPORT FIXER RECAMBIO		01
02	0521010718	5/8" U BOLT		01
03	0503012412	5/8 UNC SELF LOCKING NUT		02
04	0503011082	C1/2" X 1.3/4" SCREW		02
05	0511017302	FLAT WASHER		04
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2" NUT		02

ASSY RIGHT EXCHANGE

 0511048939

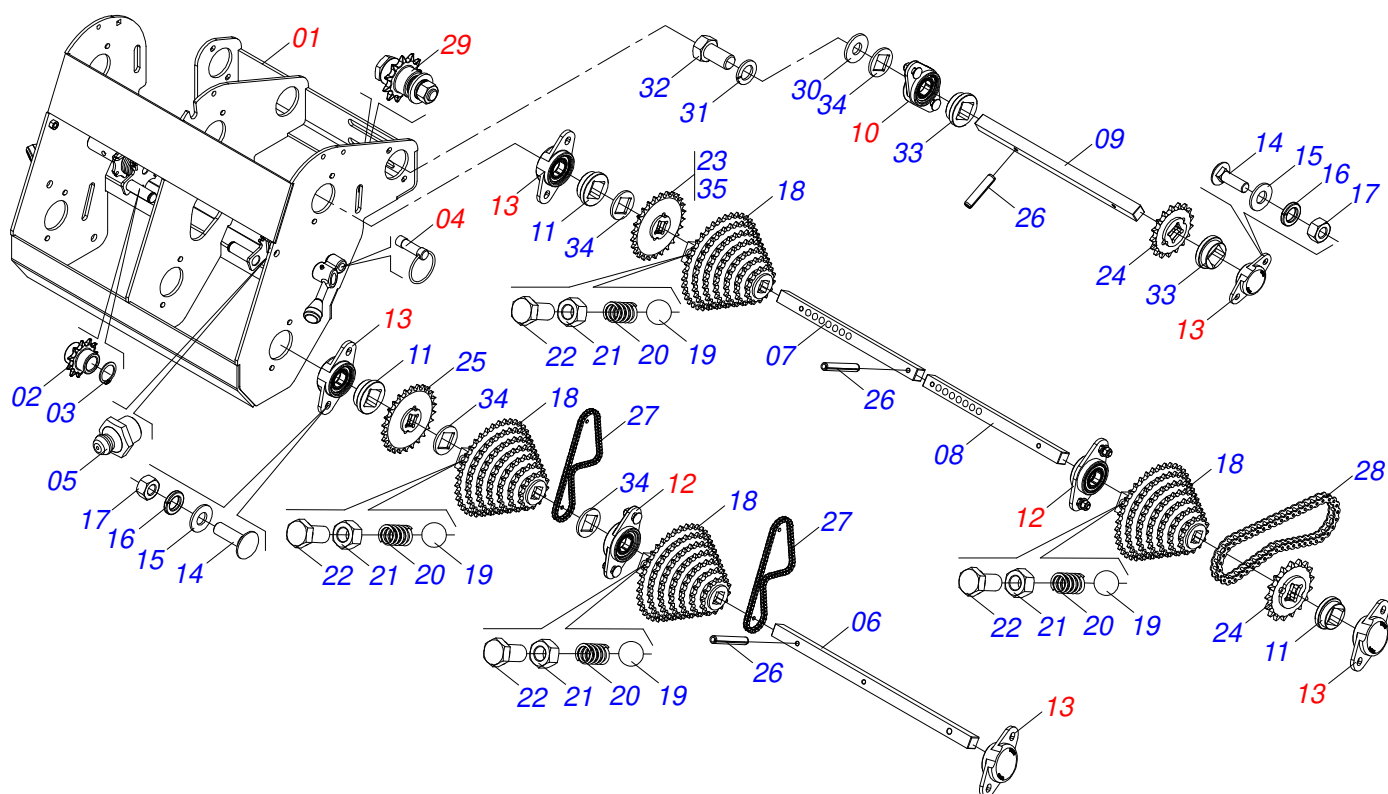


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	30	01
02	0503031805	11Z 1/2" GEAR		04
03	0503010302	501019 SEAL RING		04
04	0501048790	AXLE WITH LINK ASSY	32	02
05	0503010002	1800 GREASE FITTING		02
06	0551018209	DRIVING AXLE		01
07	0521018259	DRIVEN AXLE		01
08	0551018210	DRIVEN AXLE		01
09	0551018211	INTERM SHAFT		01
10	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	33	01
11	0503030303	SUPPORT WASHER		05
12	0501056443	BEARING ASSY GEAR BOX	34	02
13	0501056271	BEARING CLOSED	36	05
14	0503011953	5/16" X 1" BOLT		10
15	0501010694	8.5 X 18 X 1.5 FLAT WASHER		10
16	0503010179	5/16" ZN SPRING WASHER		10
17	0503010337	5/16" NUT		10
18	0511060396	DRIVE/DRIVEN AXLE CONE		04
19	0503012389	1/2 BALL		04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
21	0503010060	1/2" NUT		04
22	0503010395	1/2" X 1-1/4" BOLT		04
23	0511061759	22Z P12,70 FQ 3/4" GEAR		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0511067501	26Z GEAR		01
26	0503010292	0.2" X 1.6" SPRING PIN		07
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0501054655	CHAIN TENSIONER ASSY	37	02
30	0501010984	FLAT WASHER		01
31	0503010025	3/8" SPRING WASHER		01

**ASSY RIGHT EXCHANGE**

 0511048939


Item	Code	Description	See page	QT
32	0503010256	3/8" X 3/4" BOLT		01
33	0503030303	SUPPORT WASHER		03
34	0521018630	1.4" X SQUARE 0.8" WASHER		06
35	0511061822	25Z P0.5" GEAR SQUARE HOL		01

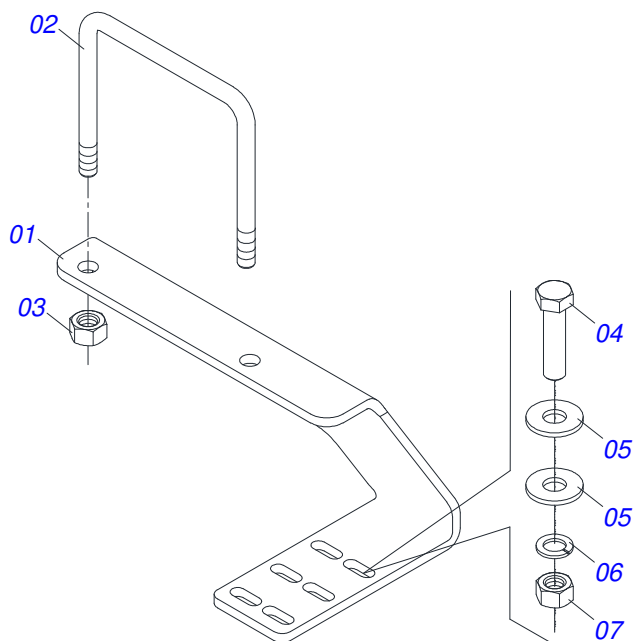

Item	Code	Description	See page	QT
01	0561019898	LEFT SUPPORT FIXER RECAMBIO		01
02	0521010718	5/8" U BOLT		01
03	0503012412	5/8 UNC SELF LOCKING NUT		02
04	0503011082	C1/2" X 1.3/4" SCREW		02
05	0511017302	FLAT WASHER		04
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2" NUT		02

LEFT ASSY EXCHANGE

 0511048940

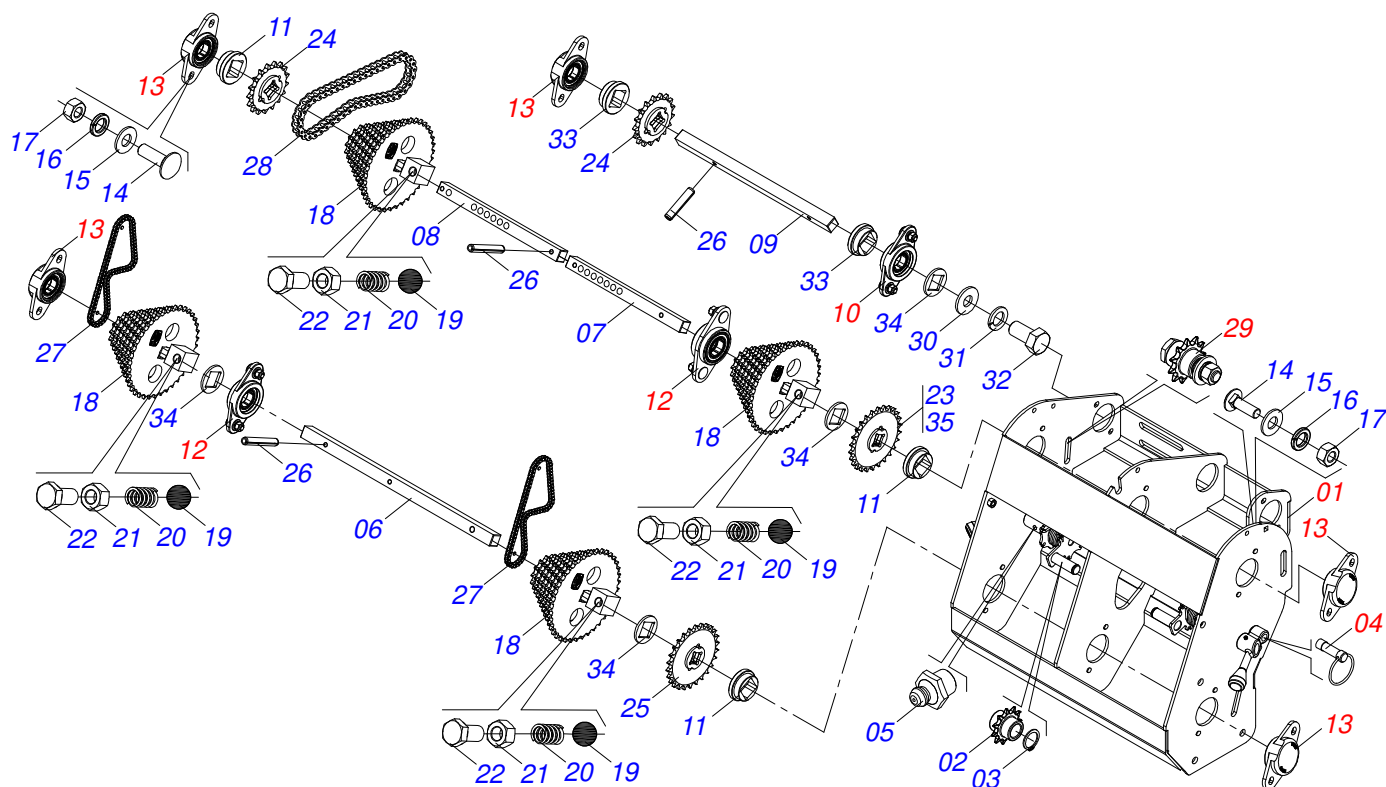

Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	31	01
02	0503031805	11Z 1/2" GEAR		04
03	0503010302	501019 SEAL RING		04
04	0501048790	AXLE WITH LINK ASSY	32	02
05	0503010002	1800 GREASE FITTING		02
06	0551018209	DRIVING AXLE		01
07	0521018259	DRIVEN AXLE		01
08	0551018210	DRIVEN AXLE		01
09	0551018211	INTERM SHAFT		01
10	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	33	01
11	0503030303	SUPPORT WASHER		05
12	0501056443	BEARING ASSY GEAR BOX	34	02
13	0501056271	BEARING CLOSED	36	05
14	0503011953	5/16" X 1" BOLT		10
15	0501010694	8.5 X 18 X 1.5 FLAT WASHER		10
16	0503010179	5/16" ZN SPRING WASHER		10
17	0503010337	5/16" NUT		10
18	0511060396	DRIVE/DRIVEN AXLE CONE		04
19	0503012389	1/2 BALL		04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
21	0503010060	1/2" NUT		04
22	0503010395	1/2" X 1-1/4" BOLT		04
23	0511061759	22Z P12,70 FQ 3/4" GEAR		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0511067501	26Z GEAR		01
26	0503010292	0.2" X 1.6" SPRING PIN		07
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0501054655	CHAIN TENSIONER ASSY	37	02
30	0501010984	FLAT WASHER		01
31	0503010025	3/8" SPRING WASHER		01


**LEFT ASSY EXCHANGE**

 0511048940

Item	Code	Description	See page	QT
32	0503010256	3/8" X 3/4" BOLT		01
33	0503030303	SUPPORT WASHER		03
34	0521018630	1.4" X SQUARE 0.8" WASHER		06
35	0511061822	25Z P0.5" GEAR SQUARE HOL		01

SET TRANSMISSION LEFT ASSY

0511053364

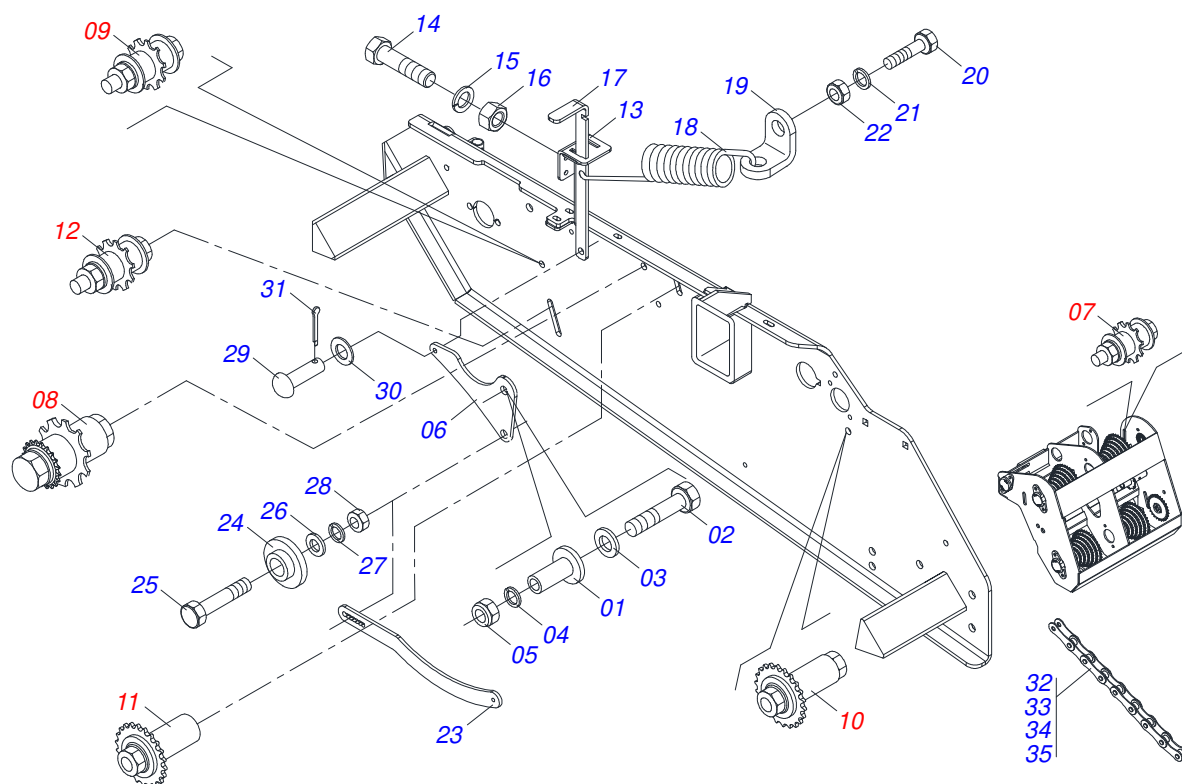


Item	Code	Description	See page	QT
001	0561018212	ARTICULAT SLEEVE	01	
002	0503010547	1/2" X 4" BOLT	01	
003	0511017302	FLAT WASHER	01	
004	0503010019	1/2" SPRING WASHER	01	
005	0503010060	1/2" NUT	01	
006	0561017281	ARTICULACION ARM	01	
007	0511053366	CHAIN TENSIONER EXCHANGE	01	
008	0511050385	BEARING DOUBLE GEAR	01	
009	0501058265	STRETCHER LOWER CURRENT 21Z SEED	01	
010	0511056387	INTERMEDIATE BEARING SEED WITH GEAR 21Z	01	
011	0511050127	CHAIN TENSIONER SUPPORT	01	
012	0501053126	FERTILIZER CHAIN TENSIONER ASSY	01	
013	0561017275	LEVER FIXER	01	
014	0503010237	3/8" X 1" BOLT	02	
015	0503010025	3/8" SPRING WASHER	02	
016	0503010026	3/8" NUT	02	
017	0561017280	LH LEVER DISASSEMBLE (COP 11)	01	
018	0503030093	TRACTION SPRING	01	
019	0561017273	FIXER SPRING	01	
020	0503010237	3/8" X 1" BOLT	01	
021	0503010025	3/8" SPRING WASHER	01	
022	0503010026	3/8" NUT	01	
023	0561017282	LOWER LEVER	01	
024	0561016797	SLEEVE UNION LEVER	01	
025	0503011082	C1/2" X 1.3/4" SCREW	01	
026	0511017302	FLAT WASHER	02	
027	0503010019	1/2" SPRING WASHER	01	
028	0503010060	1/2" NUT	01	
029	0521010773	0.37" X 1.18" COUPLING SHAFT	02	
030	0501010984	FLAT WASHER	01	
031	0503010140	1/8" X 3/4" COTTERPIN	02	


**SET TRANSMISSION LEFT ASSY**

 0511053364


Item	Code	Description	See page	QT
032	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
033	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
034	0503016737	40-1 X 114 CHAIN LINK + REDUCION		01
035	0503011721	40-1 CHAIN X 122 LINK + REDUCTION		01

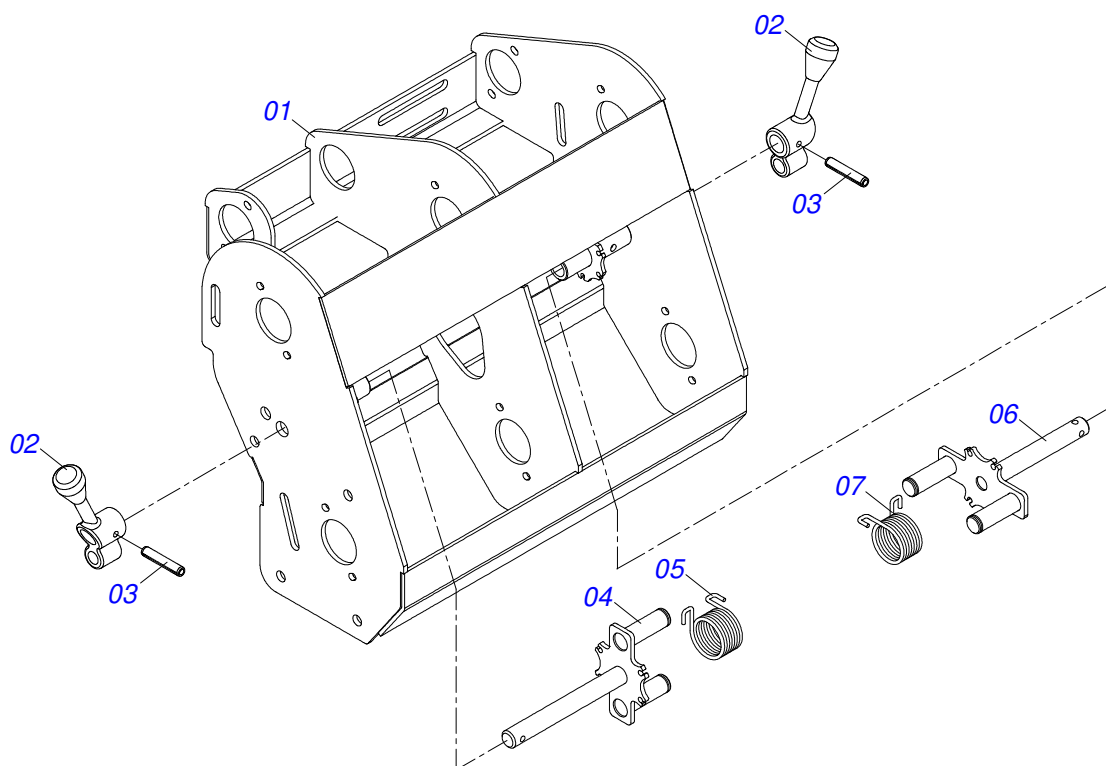


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

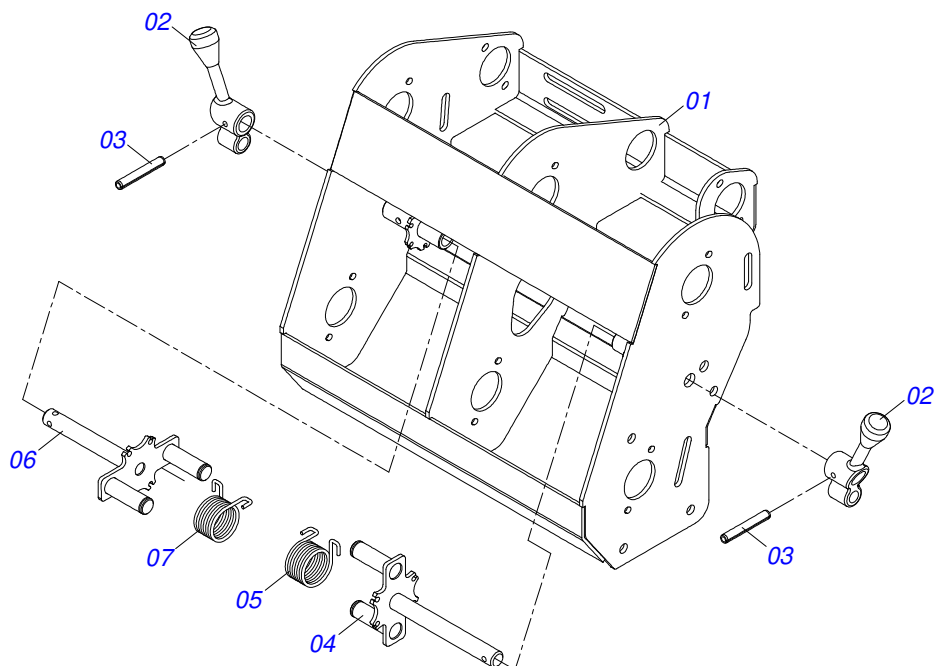 


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

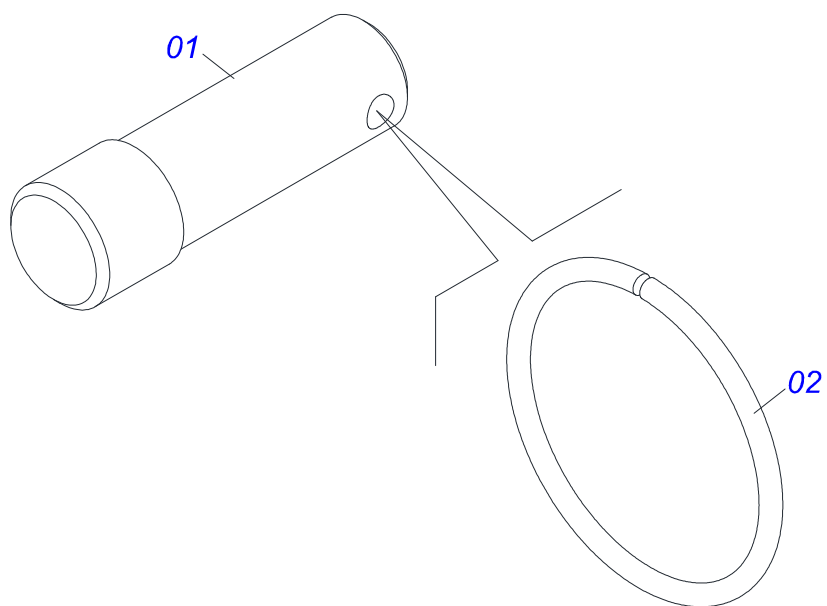 


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

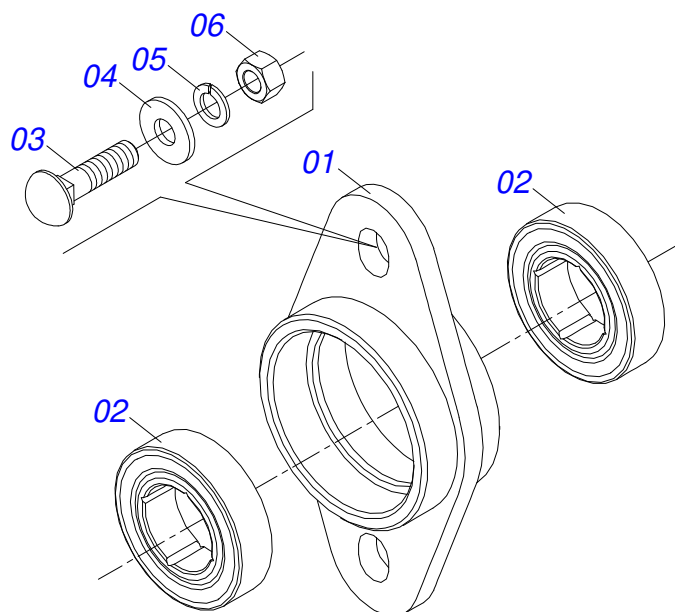 


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
05	0503010179	5/16" ZN SPRING WASHER		02
06	0503010337	5/16" NUT		02

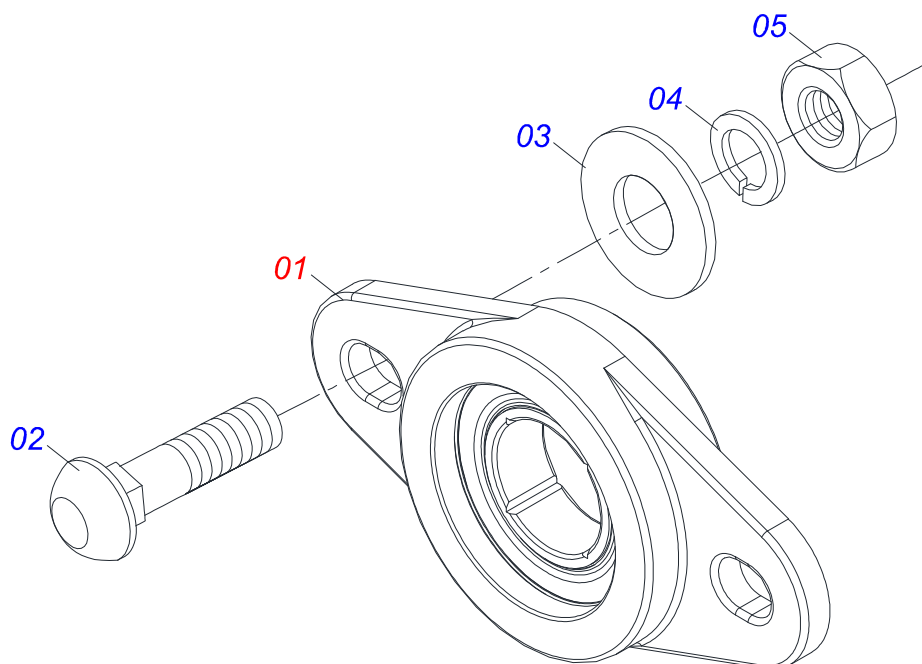 

Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	35	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

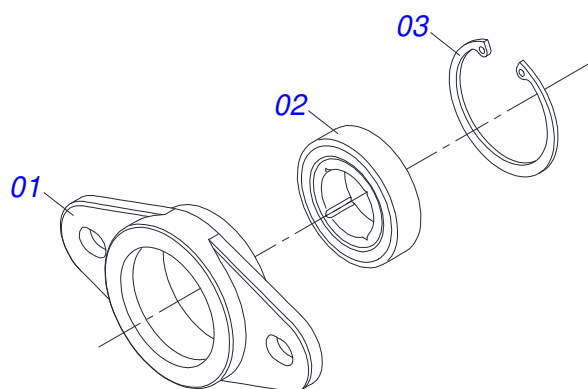 


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

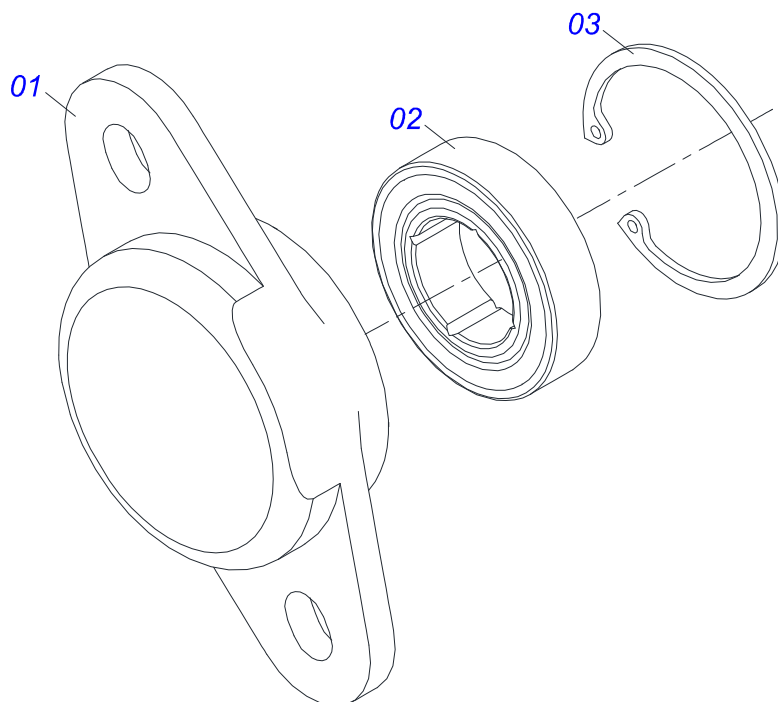 

Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

CHAIN TENSIONER ASSY

 
0501054655

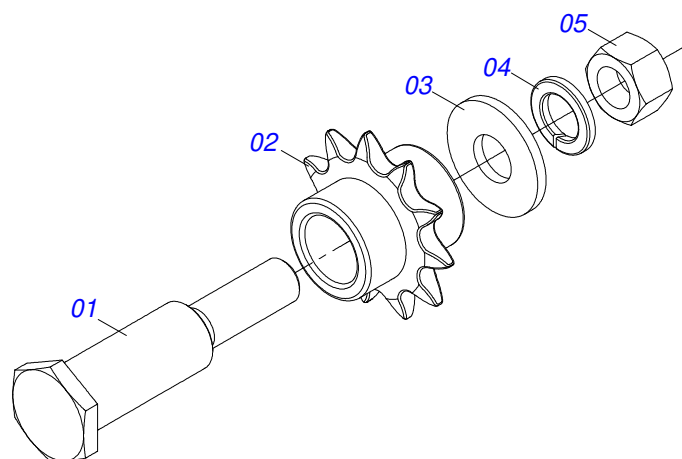

Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

SET TRANSMISSION RIGHT ASSY

 0511053357

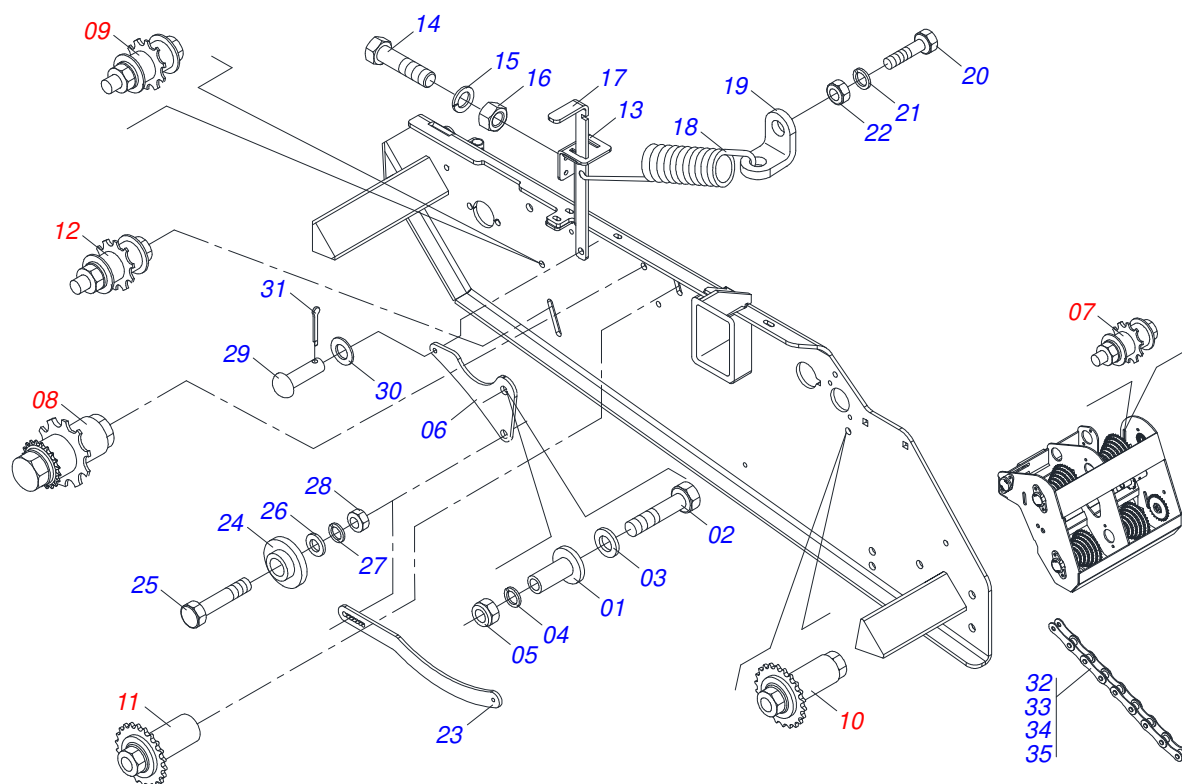


Item	Code	Description	See page	QT
001	0561018212	ARTICULAT SLEEVE	01	
002	0503010547	1/2" X 4" BOLT	01	
003	0511017302	FLAT WASHER	01	
004	0503010019	1/2" SPRING WASHER	01	
005	0503010060	1/2" NUT	01	
006	0561017281	ARTICULACION ARM	01	
007	0511053366	CHAIN TENSIONER EXCHANGE	01	
008	0511050385	BEARING DOUBLE GEAR	01	
009	0501058265	STRETCHER LOWER CURRENT 21Z SEED	01	
010	0511056387	INTERMEDIATE BEARING SEED WITH GEAR 21Z	01	
011	0511050127	CHAIN TENSIONER SUPPORT	01	
012	0501053126	FERTILIZER CHAIN TENSIONER ASSY	01	
013	0561017275	LEVER FIXER	01	
014	0503010237	3/8" X 1" BOLT	02	
015	0503010025	3/8" SPRING WASHER	02	
016	0503010026	3/8" NUT	02	
017	0561017279	RH LEVER DISASSEMBLE (COP 11)	01	
018	0503030093	TRACTION SPRING	01	
019	0561017273	FIXER SPRING	01	
020	0503010237	3/8" X 1" BOLT	01	
021	0503010025	3/8" SPRING WASHER	01	
022	0503010026	3/8" NUT	01	
023	0561017282	LOWER LEVER	01	
024	0561016797	SLEEVE UNION LEVER	01	
025	0503011082	C1/2" X 1.3/4" SCREW	01	
026	0511017302	FLAT WASHER	02	
027	0503010019	1/2" SPRING WASHER	01	
028	0503010060	1/2" NUT	01	
029	0521010773	0.37" X 1.18" COUPLING SHAFT	02	
030	0501010984	FLAT WASHER	01	
031	0503010140	1/8" X 3/4" COTTERPIN	02	


**SET TRANSMISSION RIGHT ASSY**

 0511053357


Item	Code	Description	See page	QT
032	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
033	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
034	0503016737	40-1 X 114 CHAIN LINK + REDUCION		01
035	0503011721	40-1 CHAIN X 122 LINK + REDUCTION		01

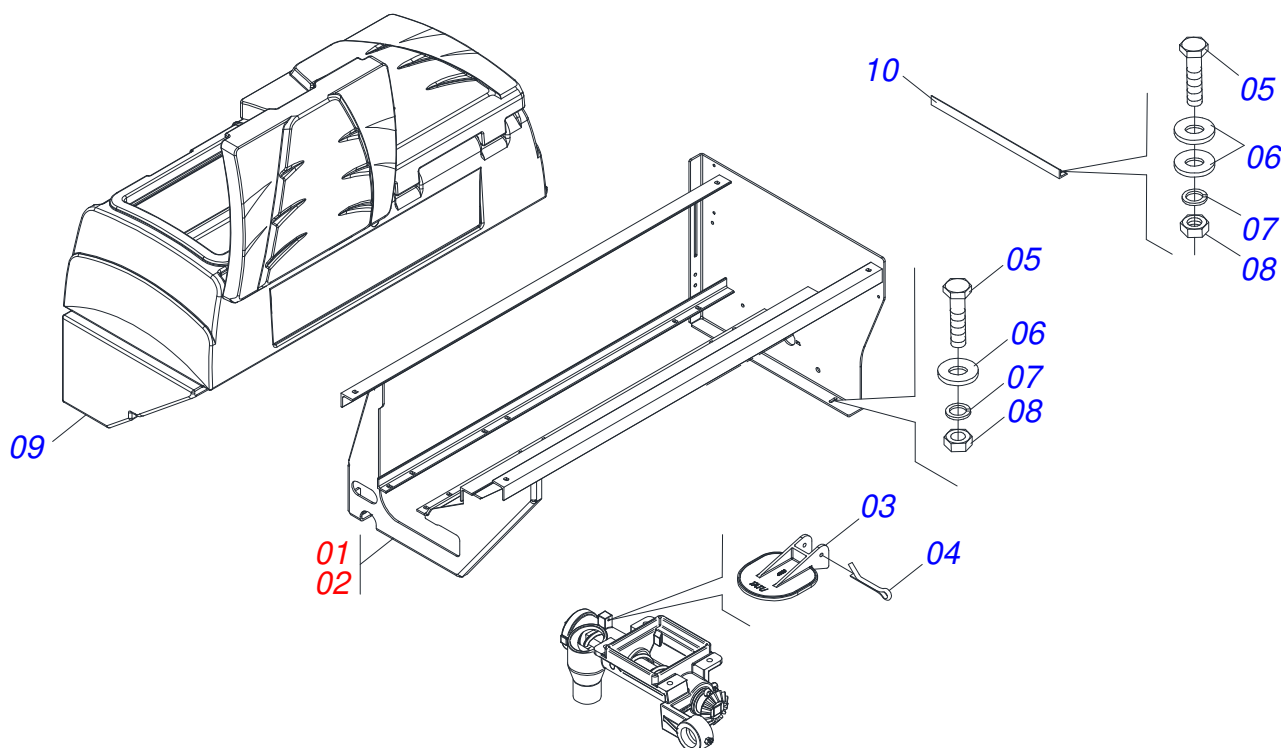


Item	Code	Description	See page	QT
01	0511050949	RIGHT FERTILIZER BOX SUPPORT	43	01
02	0511050948	LEFT FERTILIZER BOX SUPPORT	44	01
03	0503034396	FERTILIZER SIDE COVER		08
04	0503010362	1/8" X 1.1/4" COTTERPIN		08
05	0503010849	3/8" X 1-1/2" BOLT		16
06	0501010984	FLAT WASHER		24
07	0503010025	3/8" SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		02
10	0581013399	STRINGER FIXING CASH FERTILIZER		04

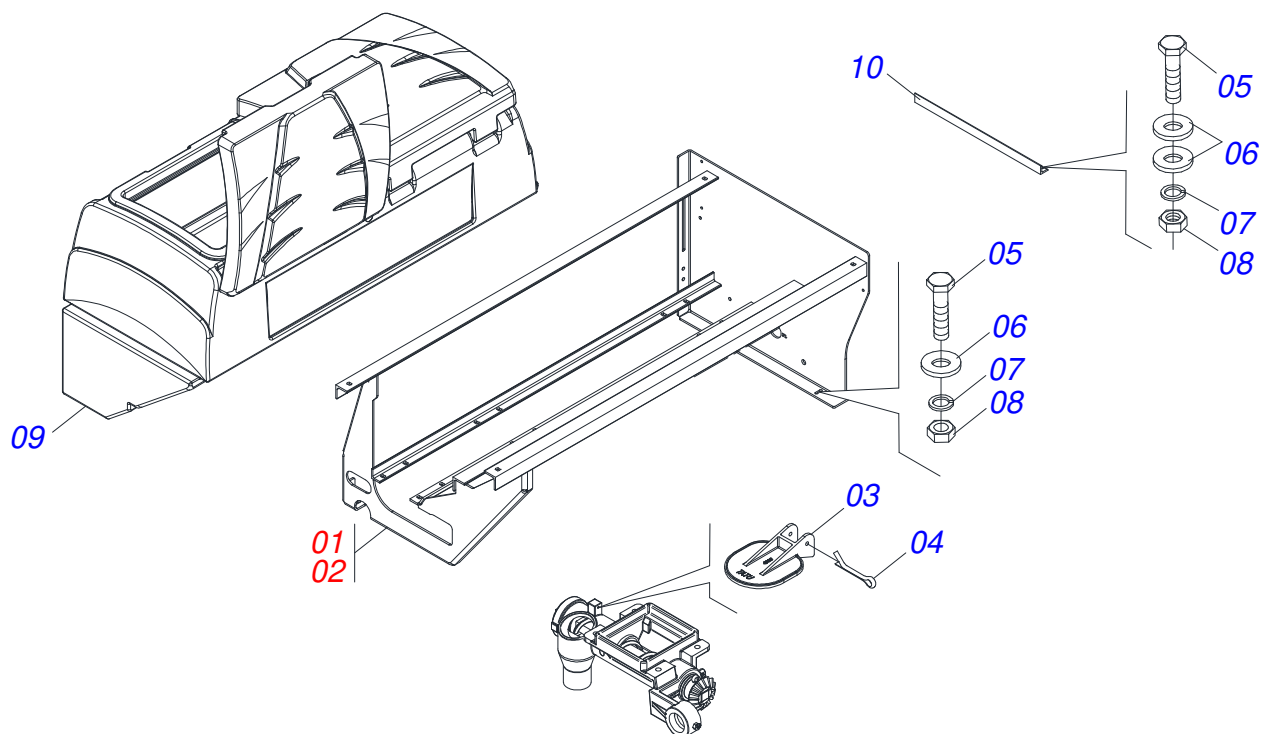 

Item	Code	Description	See page	QT
01	0511050936	BOX SUPPORT RIGHT FERTILIZER	45	01
02	0511050935	FERTILIZER LEFT BOX SUPPORT	46	01
03	0503034396	FERTILIZER SIDE COVER		10
04	0503010362	1/8" X 1.1/4" COTTERPIN		10
05	0503010849	3/8" X 1-1/2" BOLT		16
06	0501010984	FLAT WASHER		24
07	0503010025	3/8" SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		02
10	0571013223	ANGLE BAR		04

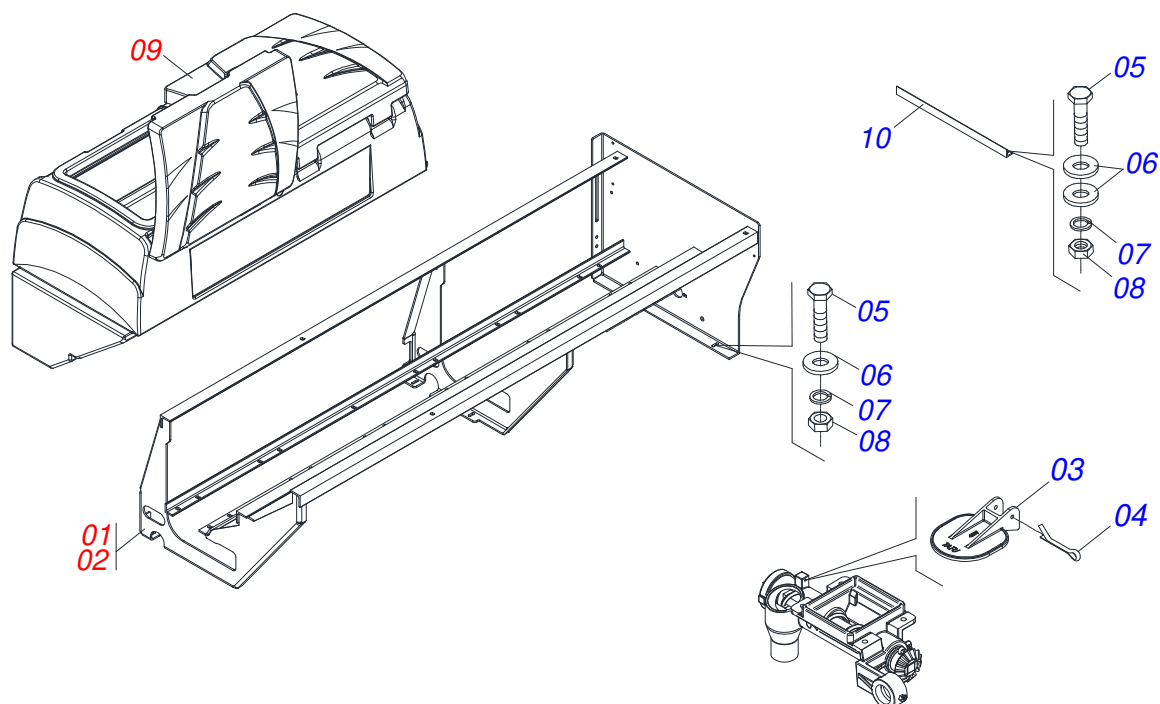 


Item	Code	Description	See page	QT
01	0511053115	LH FERTILIZER BOX SUPPORT	47	01
02	0511053116	LEFT FERTILIZER BOX SUPPORT	48	01
03	0503034396	FERTILIZER SIDE COVER		10
04	0503010362	1/8" X 1.1/4" COTTERPIN		08
05	0503010849	3/8" X 1-1/2" BOLT		16
06	0501010984	FLAT WASHER		24
07	0503010025	3/8" SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		03
10	0571013223	ANGLE BAR		04

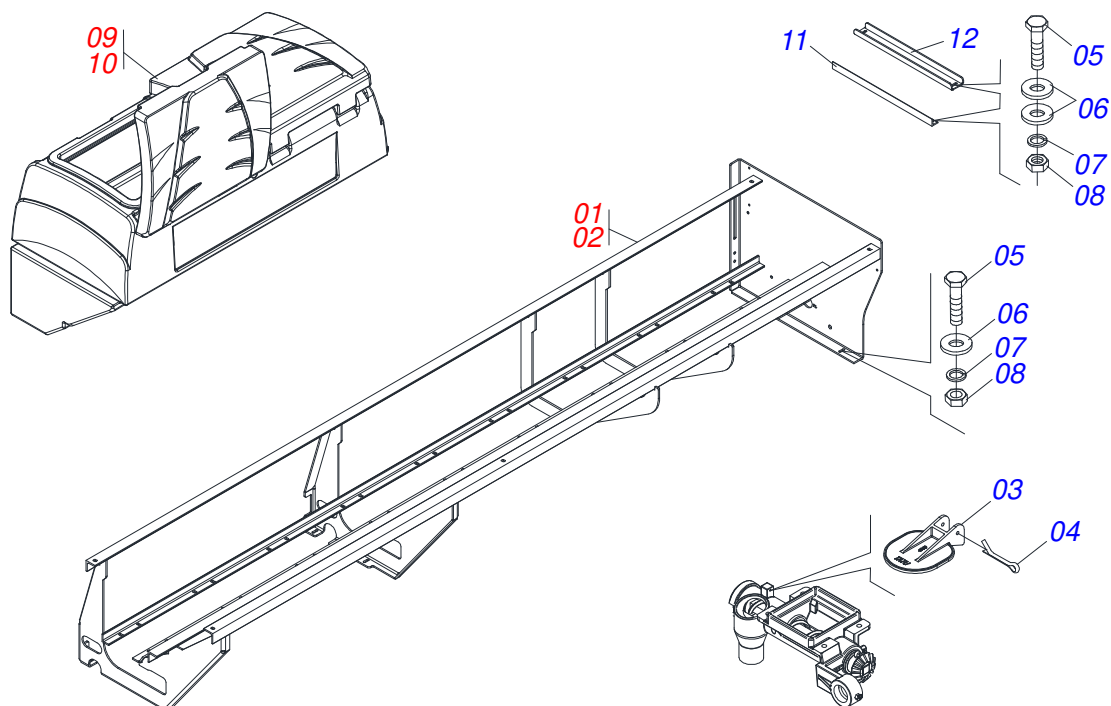 

Item	Code	Description	See page	QT
01	0511050896	LEFT FERTILIZER BEAM SUPPORT	49	01
02	0511050897	FERTILIZER BEAM SUPPORT	50	01
03	0503034396	FERTILIZER SIDE COVER		18
04	0503010362	1/8" X 1.1/4" COTTERPIN		18
05	0503010849	3/8" X 1-1/2" BOLT		24
06	0501010984	FLAT WASHER		48
07	0503010025	3/8" SPRING WASHER		24
08	0503010026	3/8" NUT		24
09	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		02
10	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		02
11	0571013223	ANGLE BAR		04
12	0571013225	STRINGER FIXING CASH FERTILIZER		02

RIGHT FERTILIZER BOX SUPPORT

 
0511050949

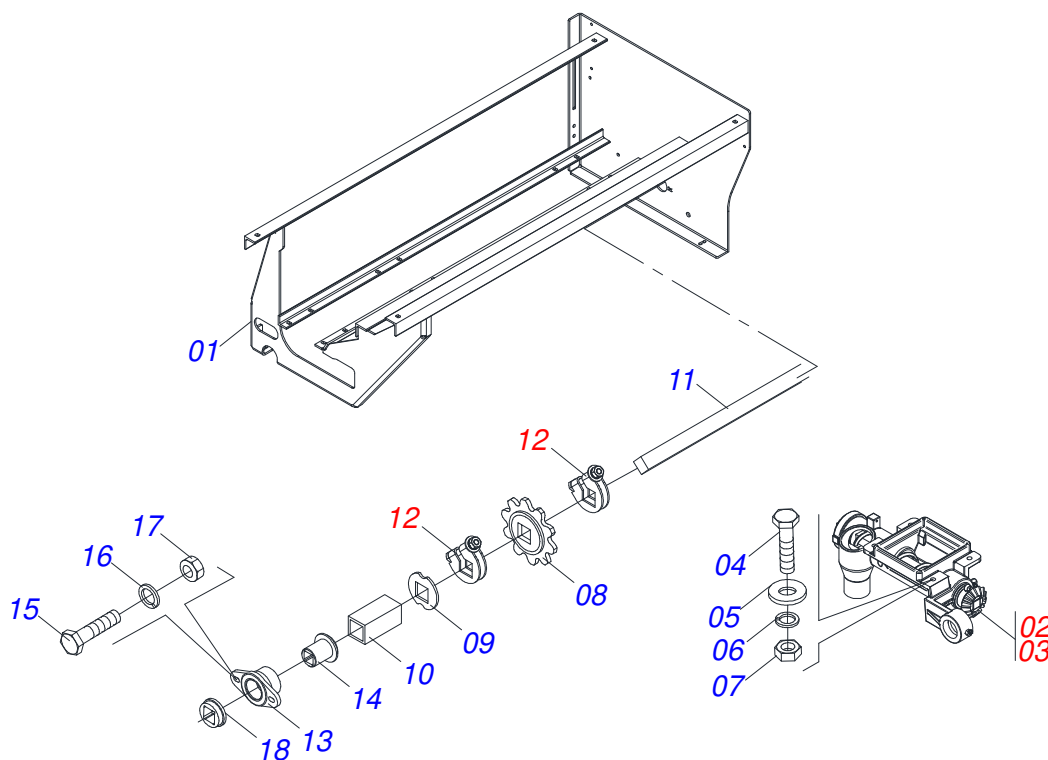


Item	Code	Description	See page	QT
01	0521062299	FERTILIZER BEAM SUPPORT RIGHT		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51	02
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	52	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	FLAT WASHER		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		02
11	0501018700	3/4" X 58"SQUARE SHAFT		01
12	0501053788	Q3/4" FASTENER AXLE ASSY		02
13	0501110392	SILO SUPPORT BEARING		01
14	0521012485	GEAR BOX BEARING AGRICUTURAL		01
15	0503010363	5/16" X 1" BOLT		02
16	0503011444	SPRING WASHER		02
17	0503010337	5/16" NUT		02
18	0503030303	SUPPORT WASHER		01

LEFT FERTILIZER BOX SUPPORT

 0511050948

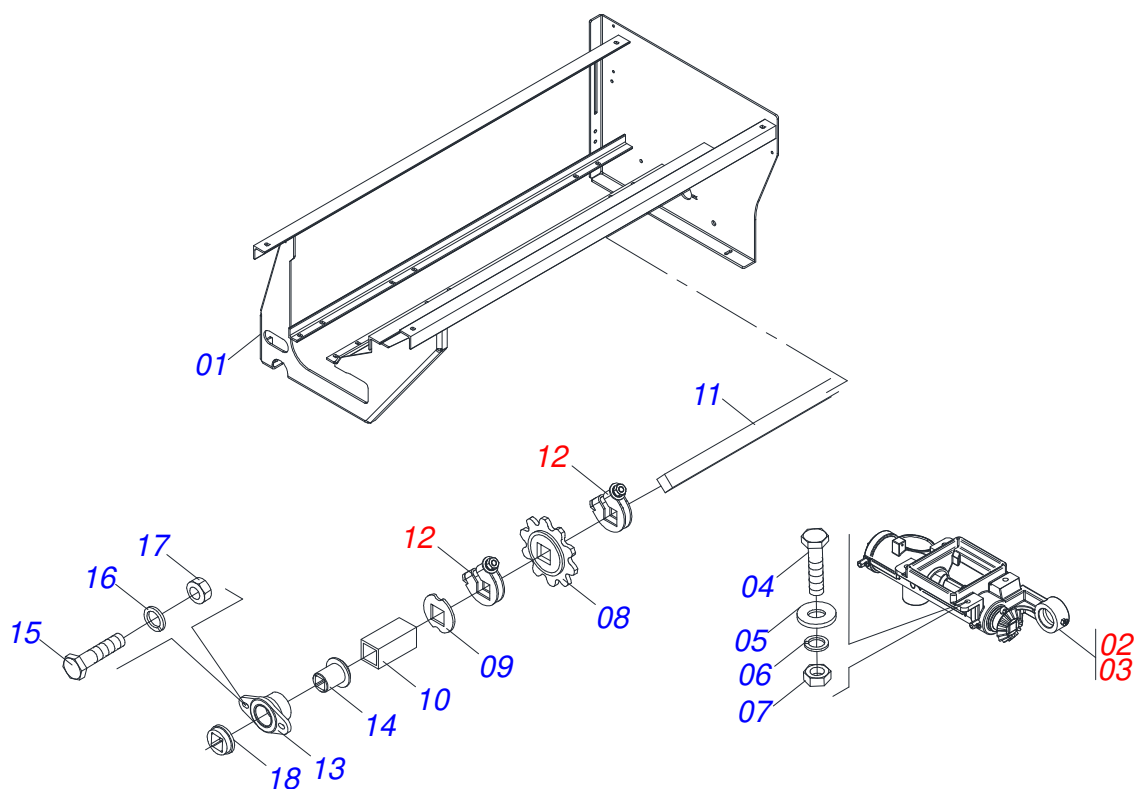


Item	Code	Description	See page	QT
01	0521062301	FERTILIZER BEAM SUPPORT LEFT		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51	02
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	52	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	FLAT WASHER		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		02
11	0521013278	3/4" X 62" SQUARE SHAFT		01
12	0501053788	Q3/4" FASTENER AXLE ASSY		02
13	0501110392	SILO SUPPORT BEARING		01
14	0521012485	GEAR BOX BEARING AGRICUTURAL		01
15	0503010363	5/16" X 1" BOLT		02
16	0503011444	SPRING WASHER		02
17	0503010337	5/16" NUT		02
18	0503030303	SUPPORT WASHER		01

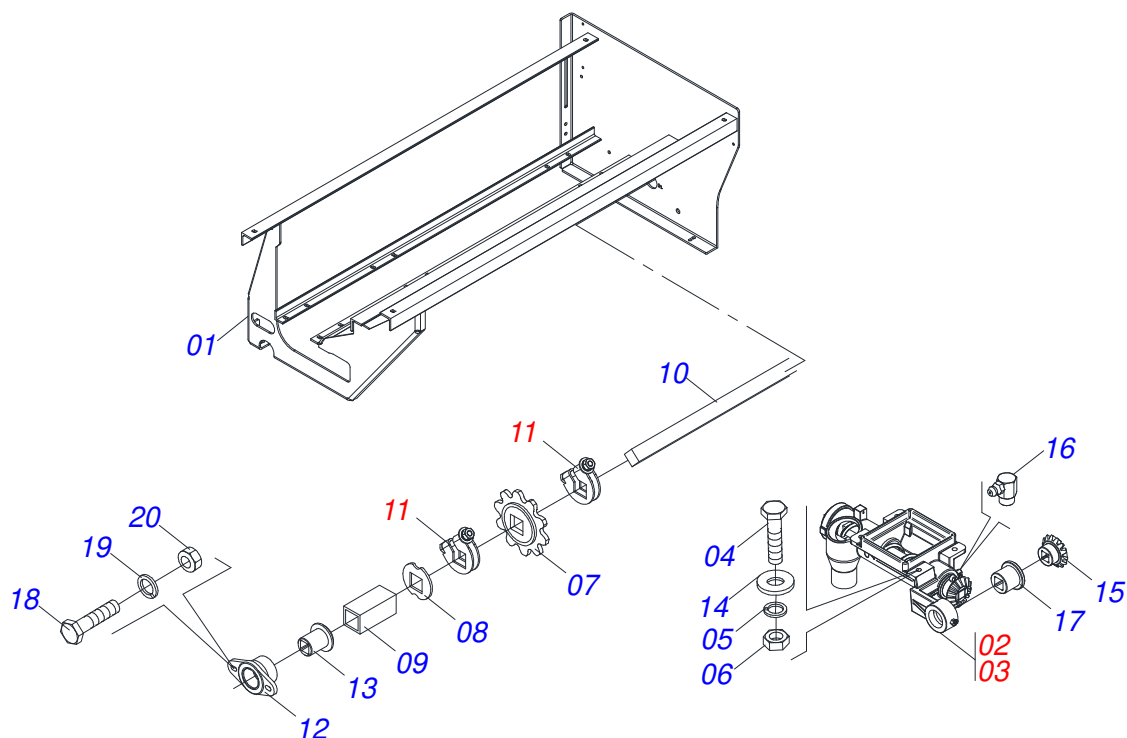 


Item	Code	Description	See page	QT
01	0521062290	RH FERTILIZER SILO SUPORT ASSY		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51	02
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	52	03
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0521014167	CONE LOCK		02
09	0551018055	22,65 X 60 SLEEVE		01
10	0561018365	SQUARE SHAFT		01
11	0501053788	Q3/4" FASTENER AXLE ASSY		02
12	0501110392	SILO SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0521011039	FLAT WASHER		02
15	0502012990	CONICA 14Z SQUARE GEAR		05
16	0503010003	1845 GREASE FITTING		01
17	0503030275	AGRICULTURAL BEARING		05
18	0503010363	5/16" X 1" BOLT		02
19	0503011444	SPRING WASHER		02
20	0503010337	5/16" NUT		02

FERTILIZER LEFT BOX SUPPORT

 0511050935

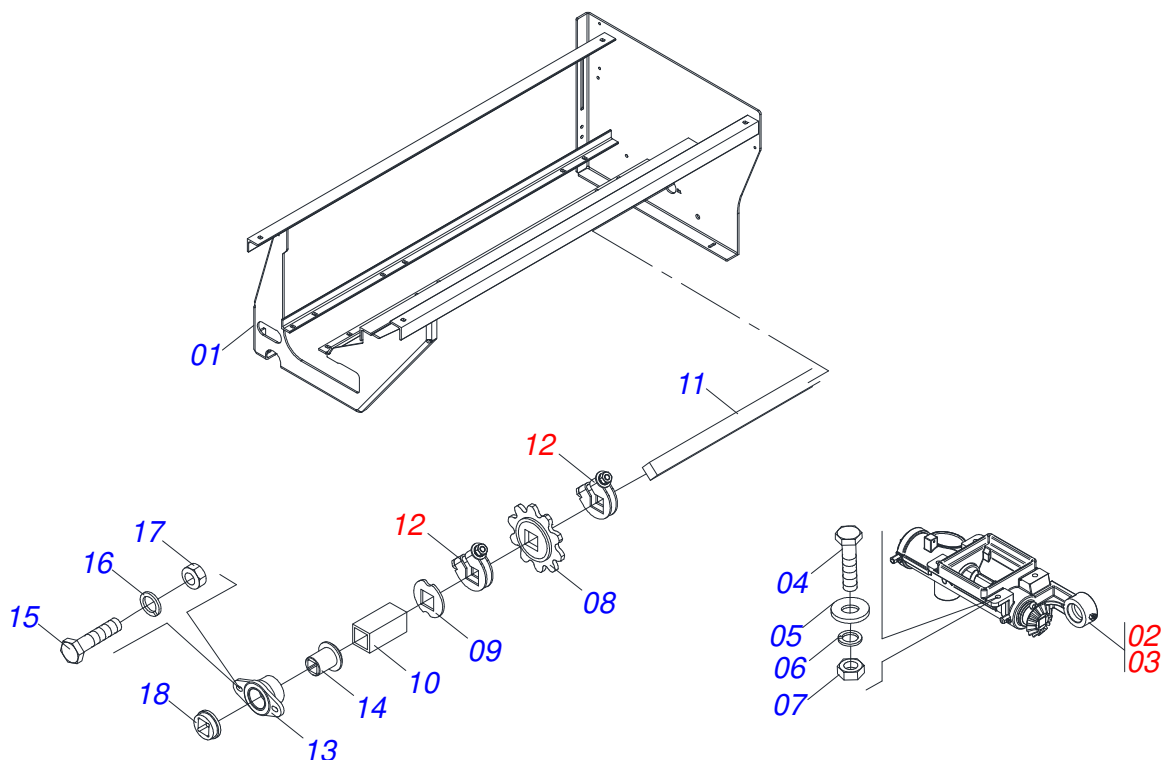


Item	Code	Description	See page	QT
01	0521062291	LH FERTILIZER SILO SUPORT ASSY		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51	03
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	52	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		20
05	0501010984	FLAT WASHER		20
06	0503011443	3/8" SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		02
11	0561018365	SQUARE SHAFT		01
12	0501053788	Q3/4" FASTENER AXLE ASSY		02
13	0501110392	SILO SUPPORT BEARING		01
14	0521012485	GEAR BOX BEARING AGRICUTURAL		01
15	0503010363	5/16" X 1" BOLT		02
16	0503011444	SPRING WASHER		02
17	0503010337	5/16" NUT		02
18	0503030303	SUPPORT WASHER		01

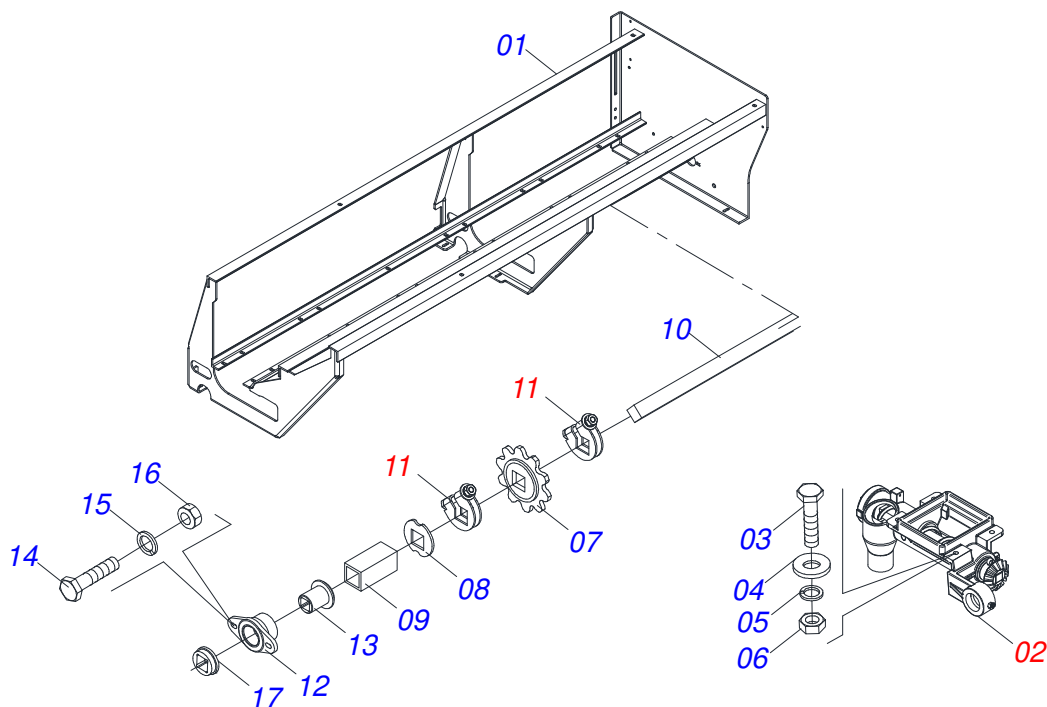 

Item	Code	Description	See page	QT
01	0521063954	FERTILIZER BEAM SUPPORT		01
02	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	52	06
03	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		24
04	0501010984	FLAT WASHER		24
05	0503011443	3/8" SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0521014167	CONE LOCK		02
09	0551018055	22,65 X 60 SLEEVE		02
10	0561019206	SQUARE SHAFT		01
11	0501053788	Q3/4" FASTENER AXLE ASSY		02
12	0501110392	SILO SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503010363	5/16" X 1" BOLT		02
15	0503011444	SPRING WASHER		02
16	0503010337	5/16" NUT		02
17	0503030303	SUPPORT WASHER		01

LEFT FERTILIZER BOX SUPPORT

 
0511053116

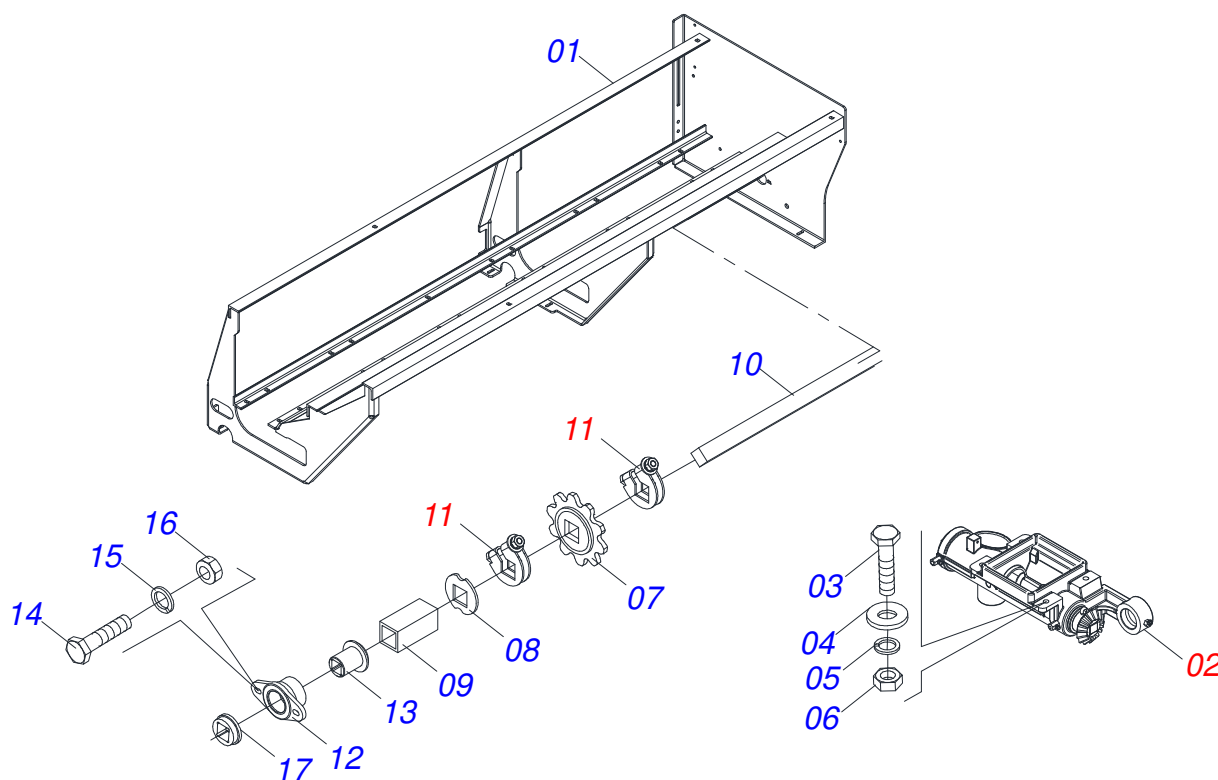

Item	Code	Description	See page	QT
01	0521063957	SOPORTE SILO ABONO		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51	06
03	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		24
04	0501010984	FLAT WASHER		24
05	0503011443	3/8" SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0521014167	CONE LOCK		02
09	0551018055	22,65 X 60 SLEEVE		02
10	0561019206	SQUARE SHAFT		01
11	0501053788	Q3/4" FASTENER AXLE ASSY		02
12	0501110392	SILO SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503010363	5/16" X 1" BOLT		02
15	0503011444	SPRING WASHER		02
16	0503010337	5/16" NUT		02
17	0503030303	SUPPORT WASHER		01

LEFT FERTILIZER BEAM SUPPORT

 
0511050896

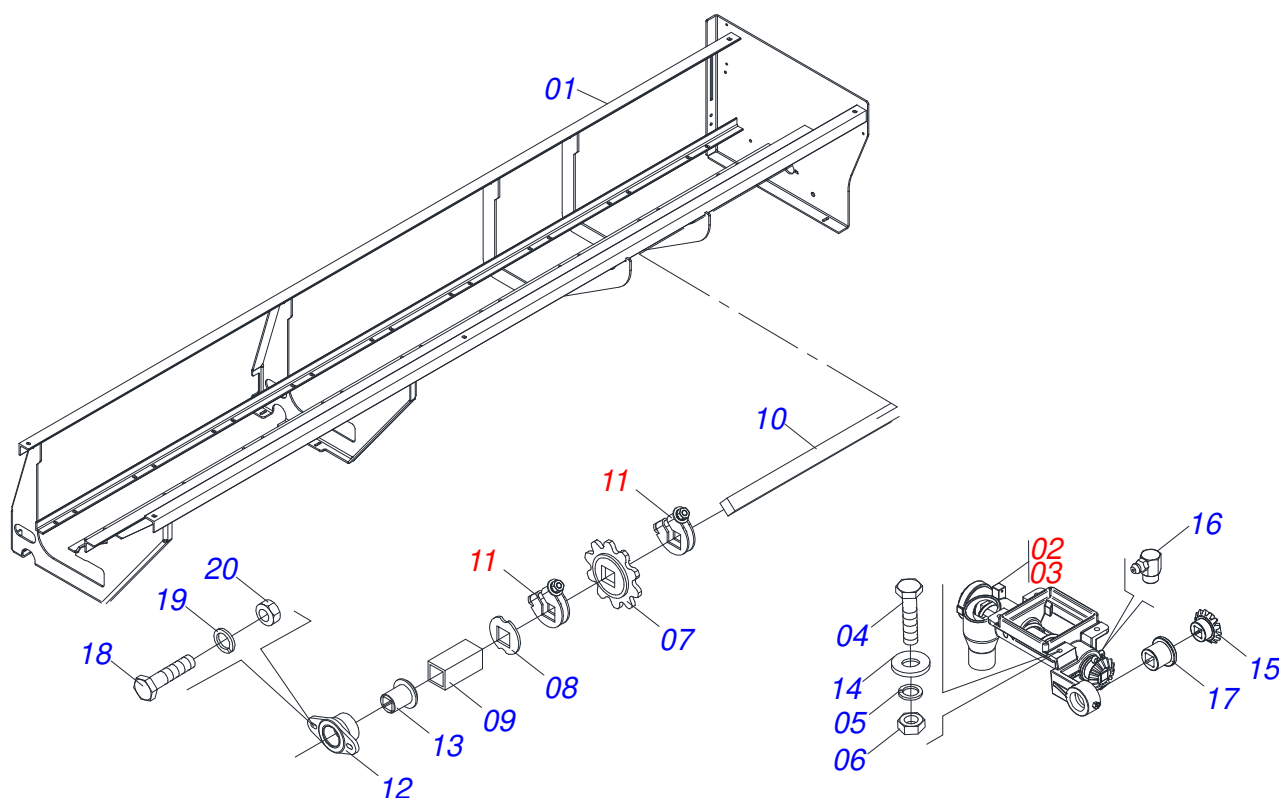


Item	Code	Description	See page	QT
01	0521062102	RH FERTILIZER SILO SUPORT ASSY		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51	04
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	52	05
04	0501010942	3/8" X 1-1/4" BOLT		36
05	0503011443	3/8" SPRING WASHER		36
06	0503010026	3/8" NUT		36
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0521014167	CONE LOCK		02
09	0551018055	22,65 X 60 SLEEVE		01
10	0551014132	SQUARE SHAFT		01
11	0501053788	Q3/4" FASTENER AXLE ASSY		02
12	0501110392	SILO SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
15	0502012990	CONICA 14Z SQUARE GEAR		09
16	0503010003	1845 GREASE FITTING		01
17	0503030275	AGRICULTURAL BEARING		05
18	0503011953	5/16" X 1" BOLT		02
19	0503011444	SPRING WASHER		02
20	0503010337	5/16" NUT		02

FERTILIZER BEAM SUPPORT

 
0511050897

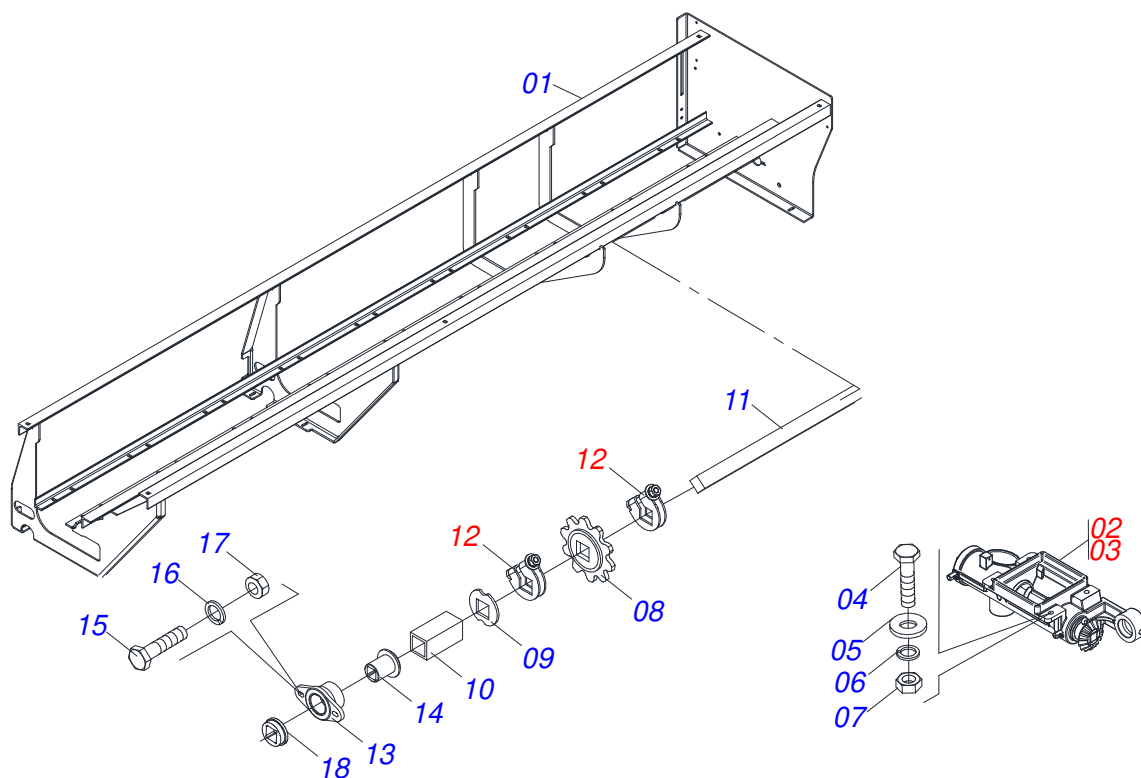


Item	Code	Description	See page	QT
01	0521062104	LH FERTILIZER SILO SUPORT ASSY		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	51	05
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	52	04
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		36
05	0501010984	FLAT WASHER		36
06	0503011443	3/8" SPRING WASHER		36
07	0503010026	3/8" NUT		36
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		02
11	0551014132	SQUARE SHAFT		01
12	0501053788	Q3/4" FASTENER AXLE ASSY		02
13	0501110392	SILO SUPPORT BEARING		01
14	0521012485	GEAR BOX BEARING AGRICUTURAL		01
15	0503010363	5/16" X 1" BOLT		02
16	0503011444	SPRING WASHER		02
17	0503010337	5/16" NUT		02
18	0503030303	SUPPORT WASHER		01

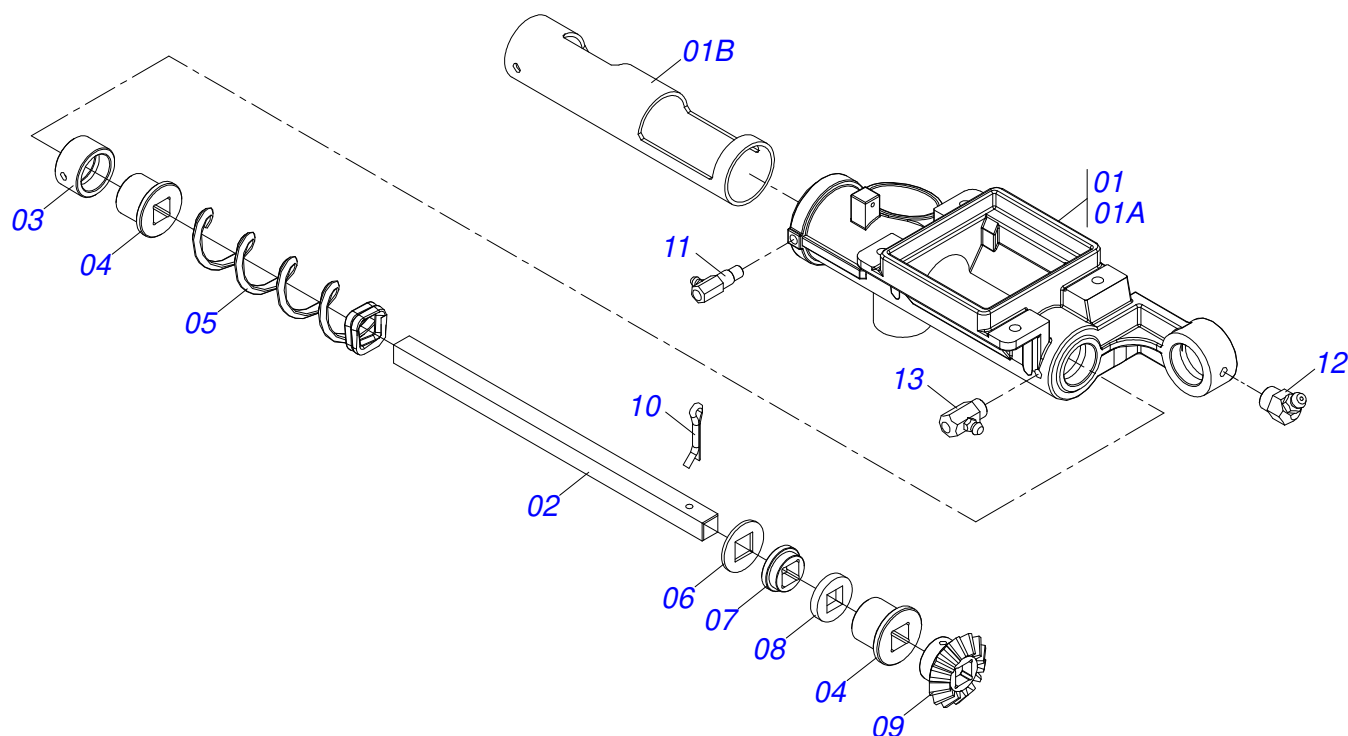 


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

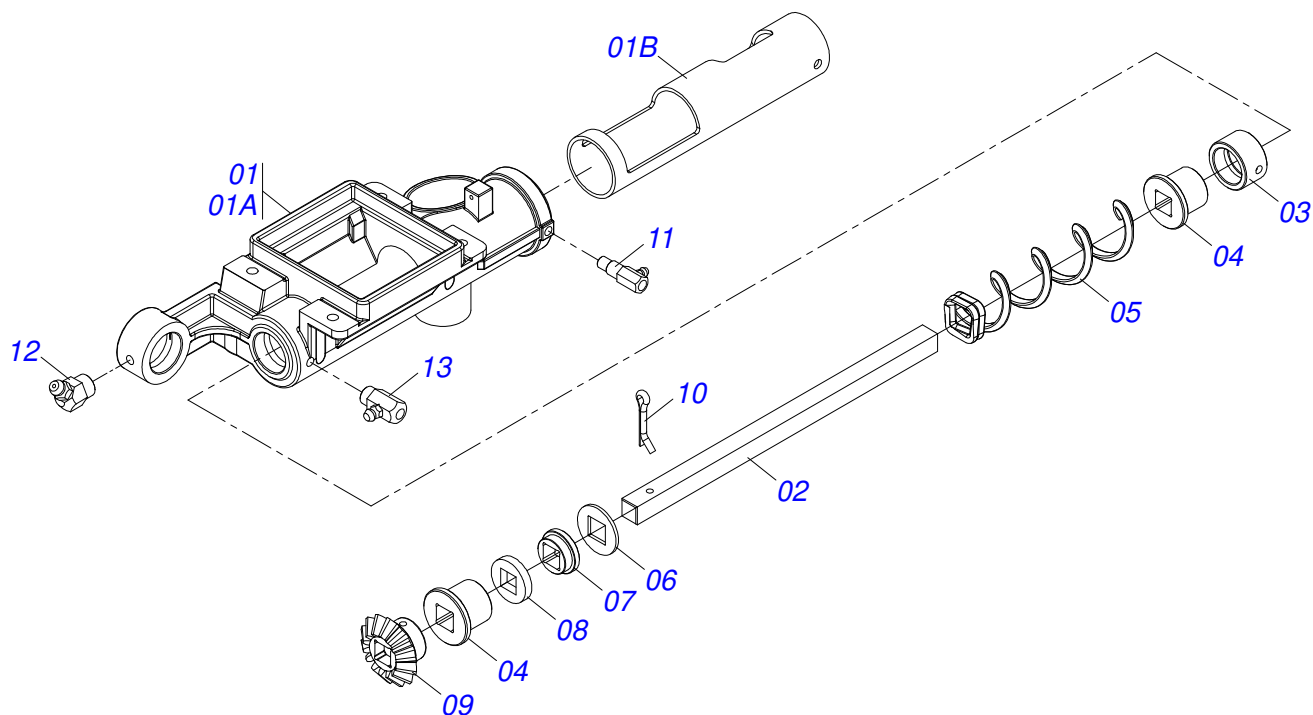 

Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

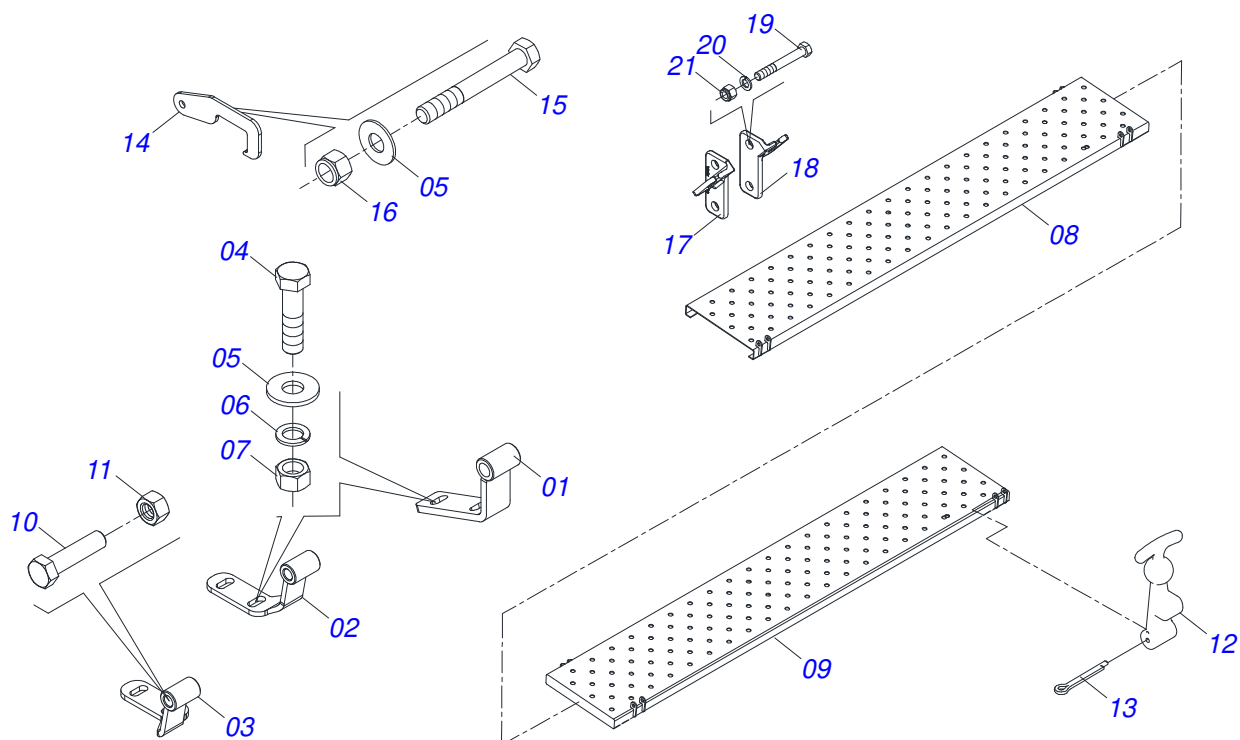 


Item	Code	Description	See page	QT
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	18	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0521062297	PLATFORM RIGHT COP FLEX 600 8	01	
09	0521062298	PLATFORM LEFT COP FLEX 600 8	01	
10	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	04	
11	0503011336	1/2" HEX SELF ADJUSTING NUT	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0503013357	3/8" SELF-ADJUSTING NUT	02	
17	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
18	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
19	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
20	0503010019	1/2" SPRING WASHER	04	
21	0503010060	1/2" NUT	04	

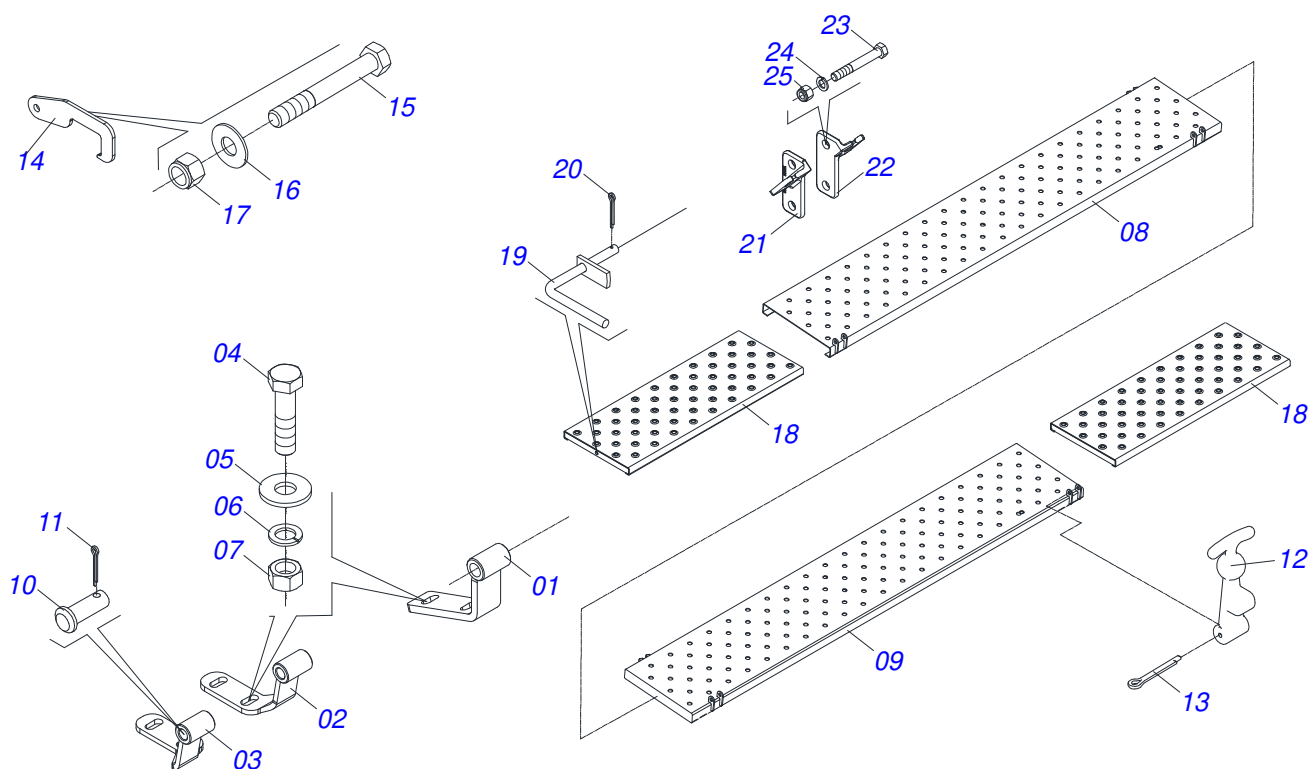 

Item	Code	Description	See page	QT
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0511069665	PLATFORM RIGHT PST4 9	01	
09	0521062323	PLATFORM LEFT PST4 9	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

PLATFORM SET

 
0511054308

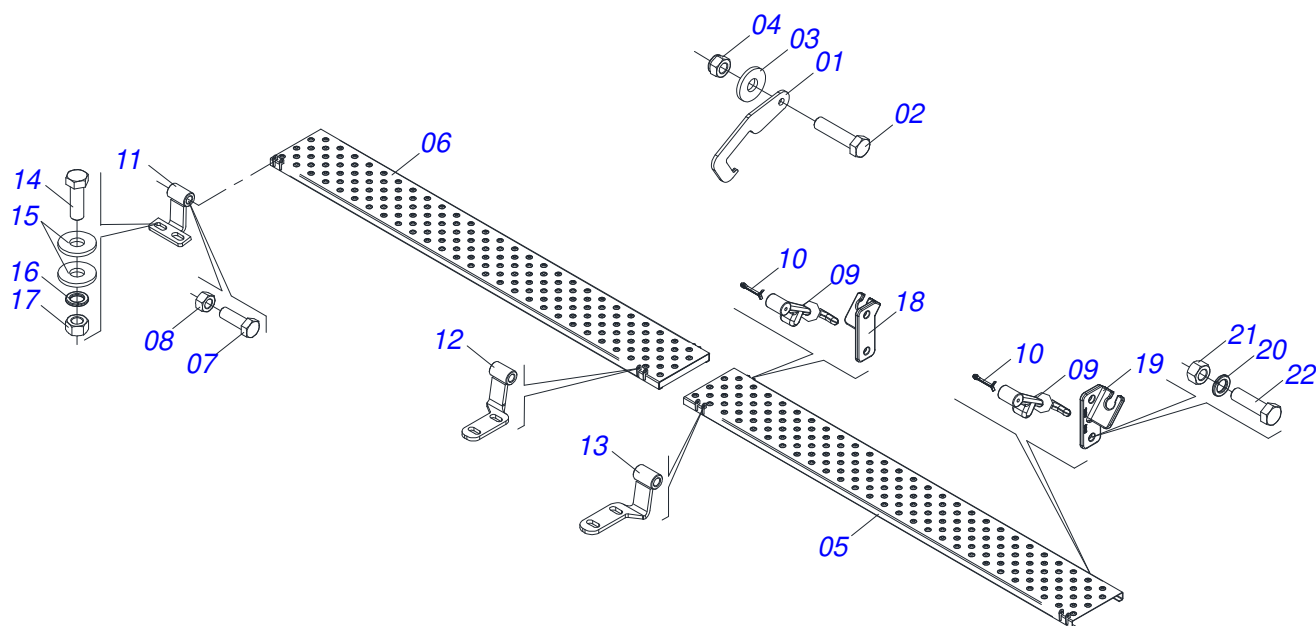

Item	Code	Description	See page	QT
01	0551019115	LOCKING PLATFORM FIXATION	02	
02	0501010096	3/8" X 2" BOLT	02	
03	0501010984	FLAT WASHER	02	
04	0503013357	3/8" SELF-ADJUSTING NUT	02	
05	0521062451	LEFT PLATFORM	01	
06	0521062450	RIGHT PLATFORM	01	
07	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	04	
08	0503011336	1/2" HEX SELF ADJUSTING NUT	04	
09	0503011333	COVER FIXER	02	
10	0503010274	5/32"X 2" COTTERPIN	02	
11	0521061861	PLATFORM FIXER	02	
12	0521062061	CENTRAL ARTICULACION	01	
13	0521062062	CENTRAL ARTICULACION	01	
14	0503010849	3/8" X 1-1/2" BOLT	08	
15	0501010984	FLAT WASHER	16	
16	0503010025	3/8" SPRING WASHER	08	
17	0503010026	3/8" NUT	08	
18	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
19	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
20	0503010019	1/2" SPRING WASHER	04	
21	0503010060	1/2" NUT	04	
22	0503010395	1/2" X 1-1/4" BOLT	04	

PLATFORM SET

 
0511053477

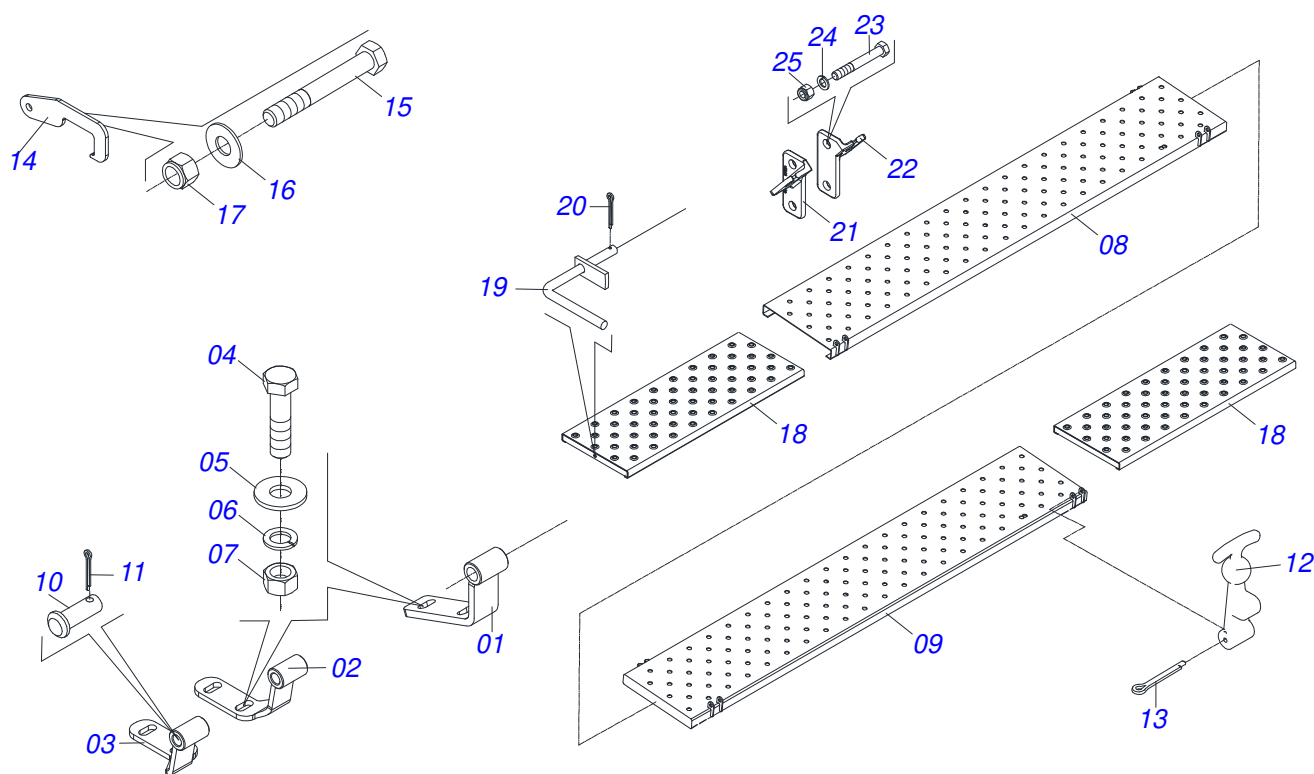


Item	Code	Description	See page	QT
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0521062089	LEFT PLATFORM	01	
09	0521062087	RIGHT PLATFORM	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

ASSY LADDER

 
0511053356

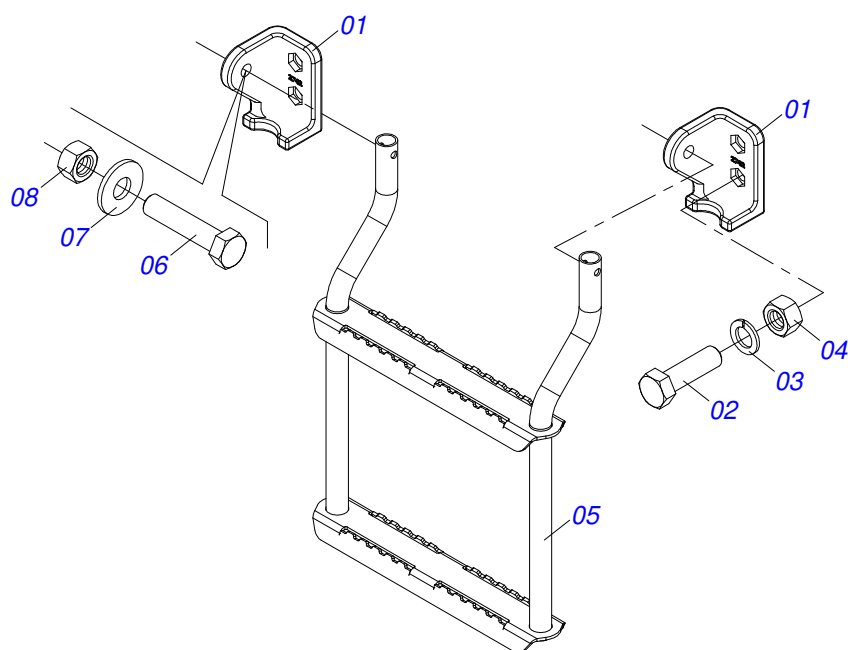


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER		04
02	0503010237	3/8" X 1" BOLT		08
03	0503010025	3/8" SPRING WASHER		08
04	0503010026	3/8" NUT		08
05	0511069636	LADDER		02
06	0503011179	3/8" X 2-1/4" BOLT		04
07	0501010984	FLAT WASHER		04
08	0503013357	3/8" SELF-ADJUSTING NUT		04

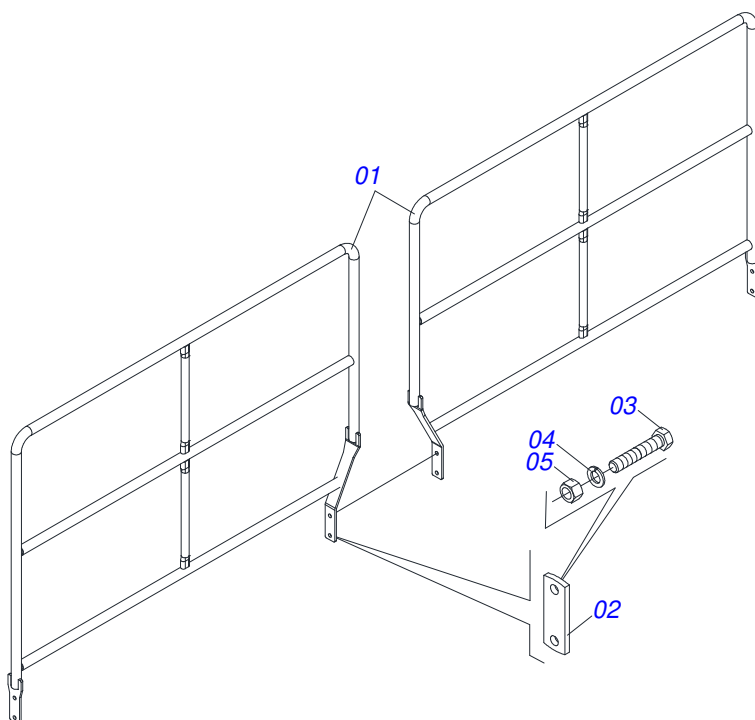 


Item	Code	Description	See page	QT
01	0521062303	HANDRAIL COP FLEX 8		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

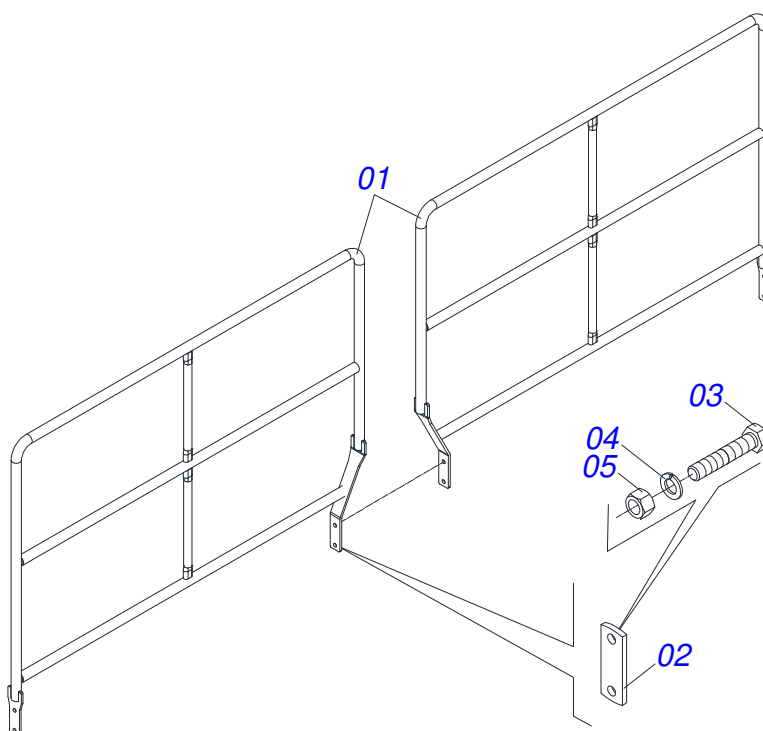 

Item	Code	Description	See page	QT
01	0511069656	HANDRAIL		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

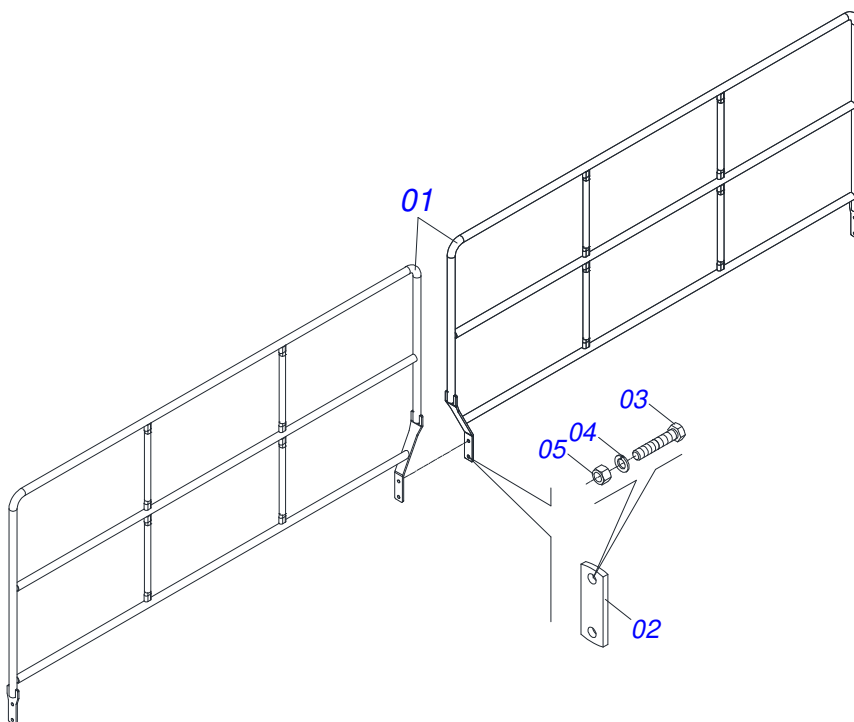 


Item	Code	Description	See page	QT
01	0521062449	HANDRAIL		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

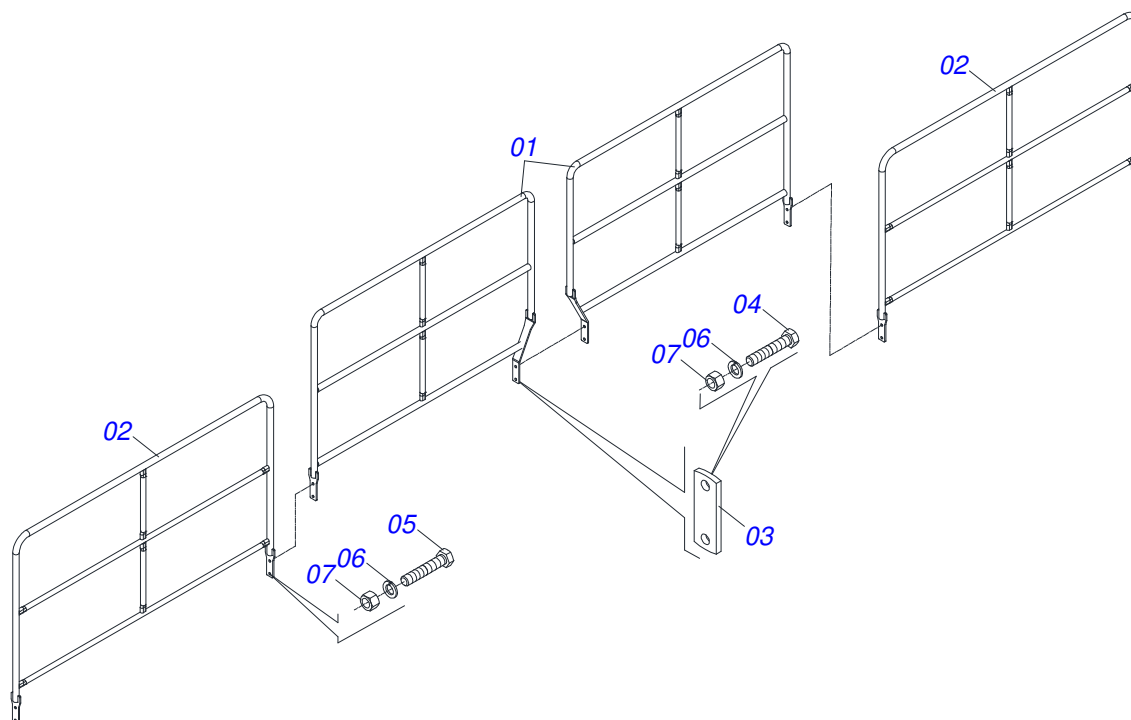 

Item	Code	Description	See page	QT
01	0521064080	CENTRAL CHAIN		02
02	0521064079	SIDE HANDRAIL		02
03	0521018290	RANDRAIL HOLDER		06
04	0503010395	1/2" X 1-1/4" BOLT		04
05	0503010734	1/2" X 2-1/2" BOLT		04
06	0503010019	1/2" SPRING WASHER		08
07	0503010060	1/2" NUT		08

SET FIXER HEADER

 
0511053482

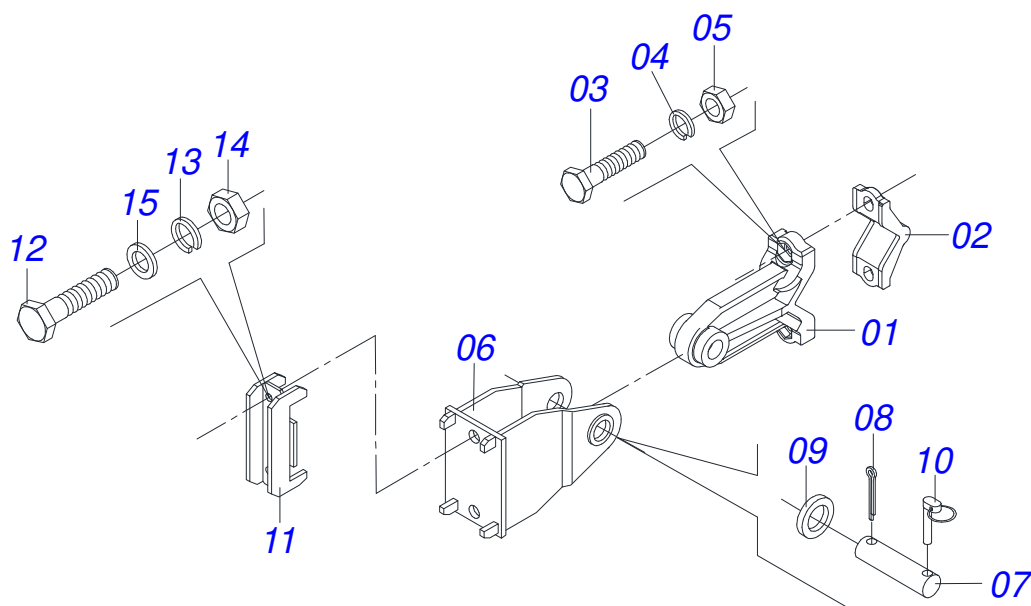


Item	Code	Description	See page	QT
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	06	
02	0502012330	SUPPORT FIXER PIVOT	06	
03	0503011084	3/4" X 5" BOLT	12	
04	0503010023	3/4" SPRING WASHER	12	
05	0503010014	3/4" NUT	12	
06	0511065418	DRAWBAR SUPPORT FRONT FIXATION	06	
07	0561014393	COUPLING SHAFT	06	
08	0503010523	1/4" X 2" COTTERPIN	06	
09	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN	12	
10	0503030119	LOCK PIN	12	
11	0511065419	DRAWBAR FIXER CLAMP	06	
12	0521010066	3/4" X 8.12" BOLT	12	
13	0503010023	3/4" SPRING WASHER	12	
14	0503010014	3/4" NUT	12	
15	0501010322	FLAT WASHER	12	

RESTING ASSEMBLY

 
0511054971

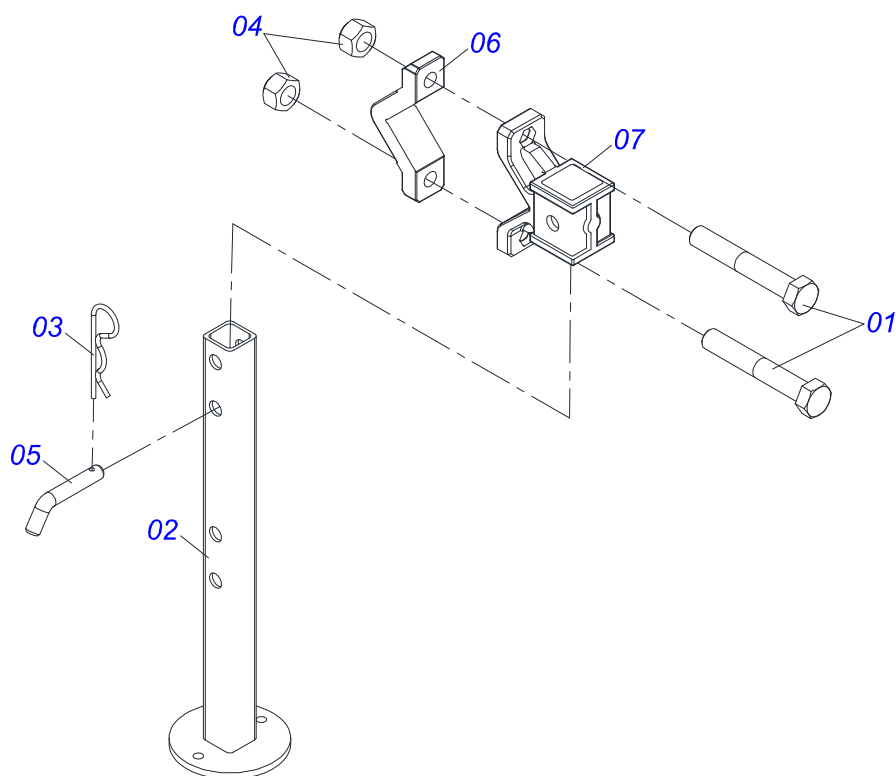


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

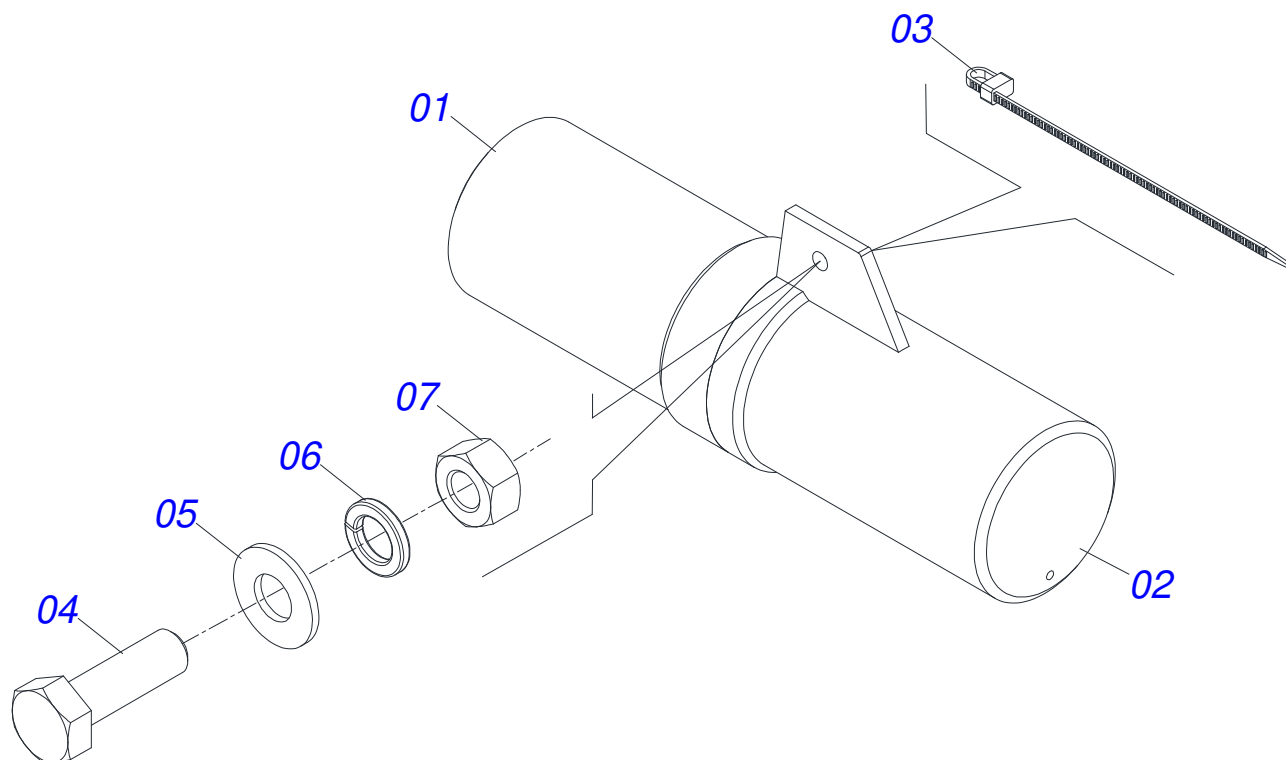 


Item	Code	Description	See page	QT
01	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
02	0511031563	BAG WITH MANUAL		01
03	0503010267	NYLON CLAMP		01
04	0503010363	5/16" X 1" BOLT		01
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
06	0503010179	5/16" ZN SPRING WASHER		01
07	0503010337	5/16" NUT		01

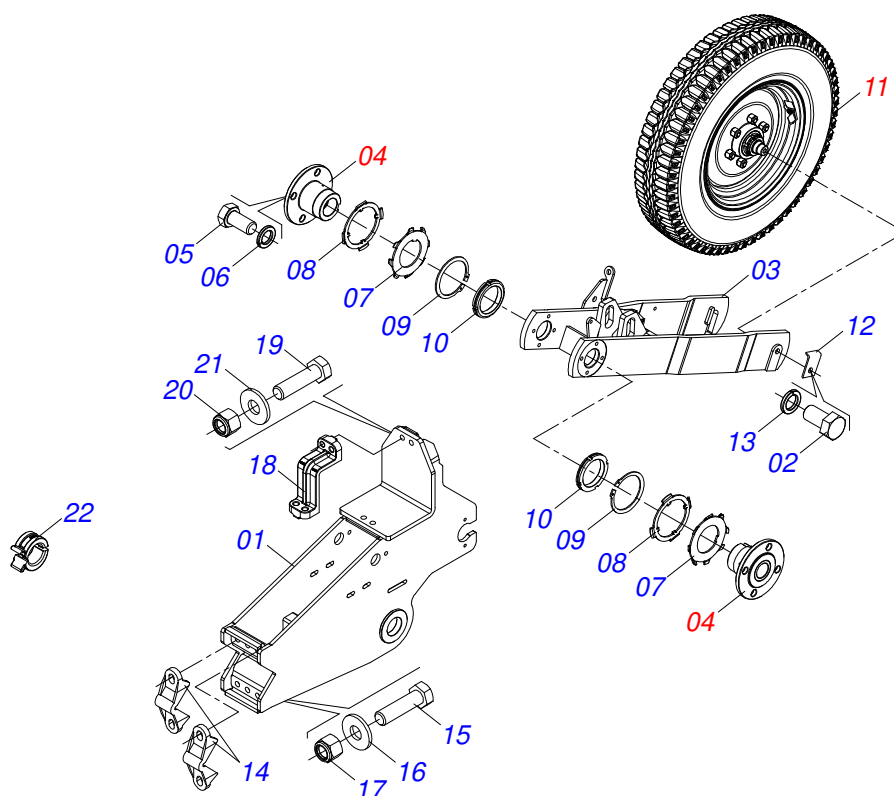 


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0503011167	M16 X 2 X 30 BOLT		02
03	0511064744	WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	67	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 68 BOX		01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
15	0511010736	5/8" X 5-1/4" BOLT		04
16	0501013753	FLAT WASHER		04
17	0503010811	5/8" UNF SELF ADJUSTING NUT		04
18	0502012720	WHEEL SUPPORT FIXER		01
19	0503017857	BOLT 5/8 UNF 4		04
20	0503010811	5/8" UNF SELF ADJUSTING NUT		04
21	0501012140	FLAT WASHER		04
22	0501047888	ROD STOP		01

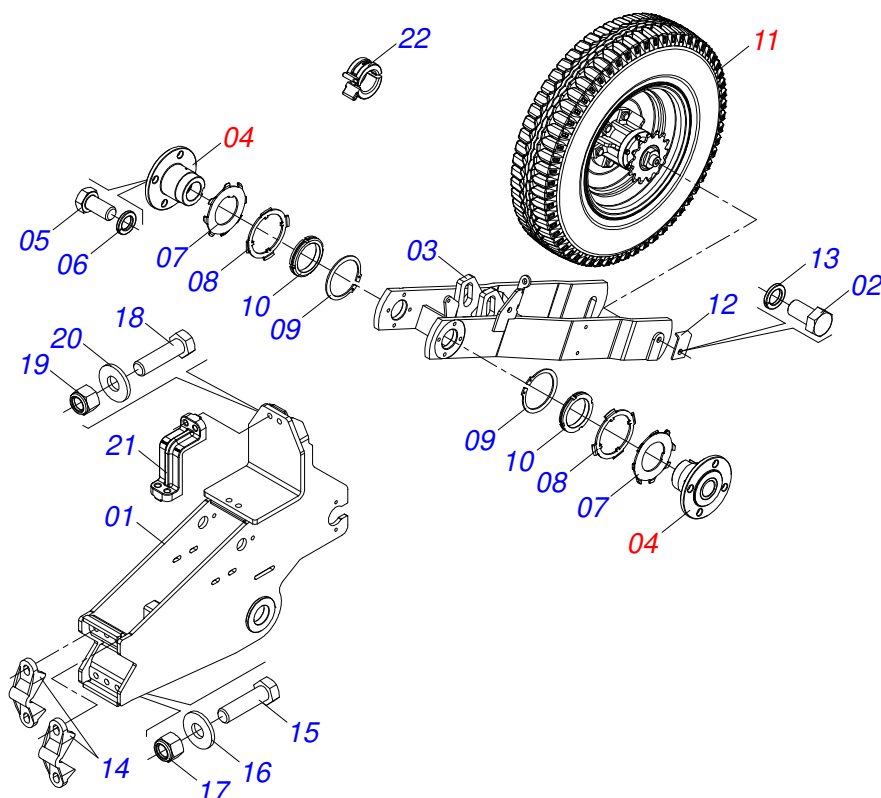 

Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0503011167	M16 X 2 X 30 BOLT		02
03	0511065842	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	67	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED BOX	68	01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
15	0511010736	5/8" X 5-1/4" BOLT		04
16	0501013753	FLAT WASHER		04
17	0503010811	5/8" UNF SELF ADJUSTING NUT		04
18	0503017857	BOLT 5/8 UNF 4		04
19	0503010811	5/8" UNF SELF ADJUSTING NUT		04
20	0501012140	FLAT WASHER		04
21	0502012720	WHEEL SUPPORT FIXER		01
22	0501047888	ROD STOP		01

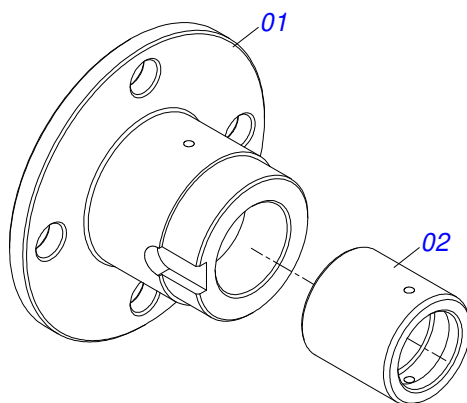 


Item	Code	Description	See page	QT
01	0561015879	WHEELED JOINT BEARING		01
02	0561012895	GLOVE 30,16 X 45,32/45,28 X 47		01

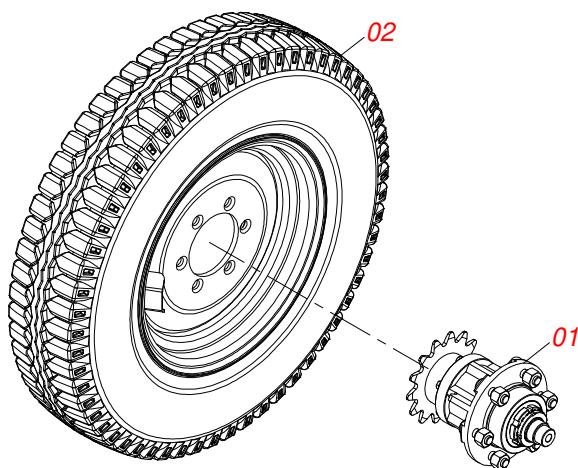 


Item	Code	Description	See page	QT
01	0511052766	CARRYING WHEEL HUB ASSY	69	01
02	0503062158	EEE WHEEL WITH TIRE 700 X 16-10L ASSY	70	01

CARRYING WHEEL HUB ASSY

 0511052766

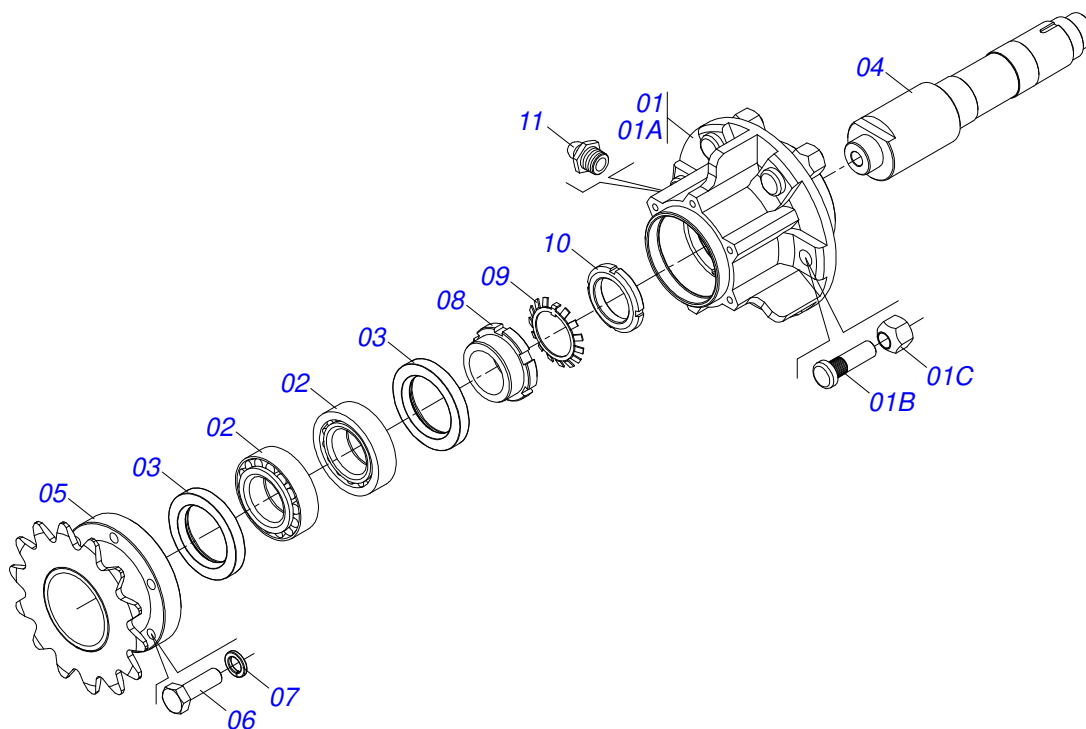


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503010328	25590/25523 ROLLER BEARING		02
03	0503010804	00547-B SEAL		02
04	0521018363	00547-B SEAL		01
05	0511062015	14Z GEAR WITH FLANGE		01
06	0503010421	5/16" X 1-1/2" BOLT		06
07	0503011444	SPRING WASHER		06
08	0511015949	LOCK NUT		01
09	0503010329	LOCK WASHER		01
10	0503010330	KM 9 LOCKNUT		01
11	0503010002	1800 GREASE FITTING		01

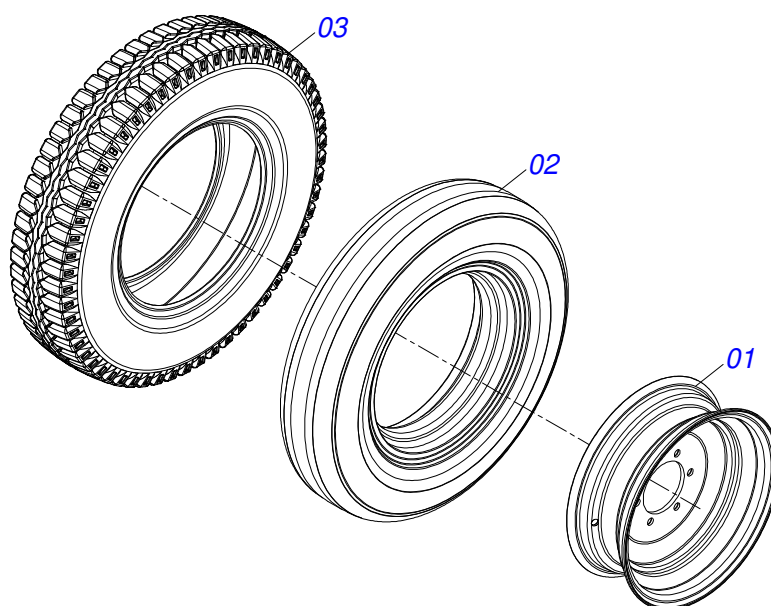 

Item	Code	Description	See page	QT
01	0503016518	RUEDA		01
02	0503012114	7.00 X 16 INNER TIRE		01
03	0503012113	PLY TIRE		01

RIGHT WHEEL ASSY

 0511050439

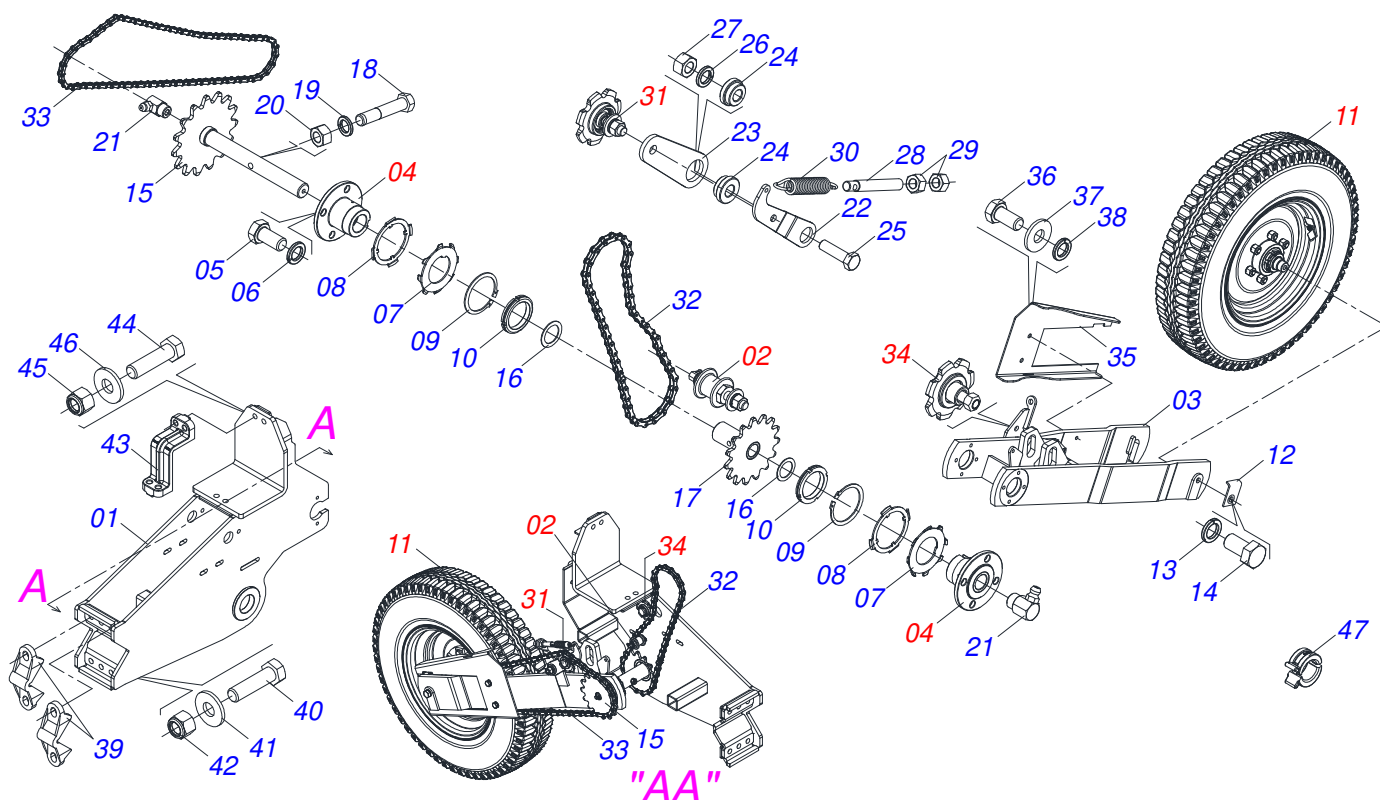

Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0501054284	STRETCHER CURRENT TRANSMISSION SIDE	73	01
03	0511064744	WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	67	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 68 BOX		01
12	0591010589	BODY LOCK WHEEL		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011167	M16 X 2 X 30 BOLT		02
15	0511061808	15Z GEAR WITH AXLE,		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0531016916	SLEEVE BEARING SUPPORT		02
25	0503010899	5/8" X 2-1/4" BOLT		01
26	0503010027	5/8" SPRING WASHER		01
27	0503010013	5/8" NUT		01
28	0501013491	5/8" TENSIONER SPRING		01
29	0503010013	5/8" NUT		02
30	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
31	0501053522	WHEEL CHAIN TENSIONER	74	01


RIGHT WHEEL ASSY

0511050439

Item	Code	Description	See page	QT
32	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
33	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
34	0511053375	CURRENT DEVIATION ASSY WHEEL	75	01
35	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
36	0503010834	1/2 X 1 BOLT		02
37	0511017302	FLAT WASHER		02
38	0503010019	1/2" SPRING WASHER		02
39	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
40	0503016485	BOLT 3/4		04
41	0501010322	FLAT WASHER		04
42	0503010152	3/4" SELF LOCKING NUT		04
43	0502012720	WHEEL SUPPORT FIXER		01
44	0503017857	BOLT 5/8 UNF 4		04
45	0503010811	5/8" UNF SELF ADJUSTING NUT		04
46	0501012140	FLAT WASHER		04
47	0501047888	ROD STOP		01

WHITH LEFT WHEEL ASSY

 0511050440

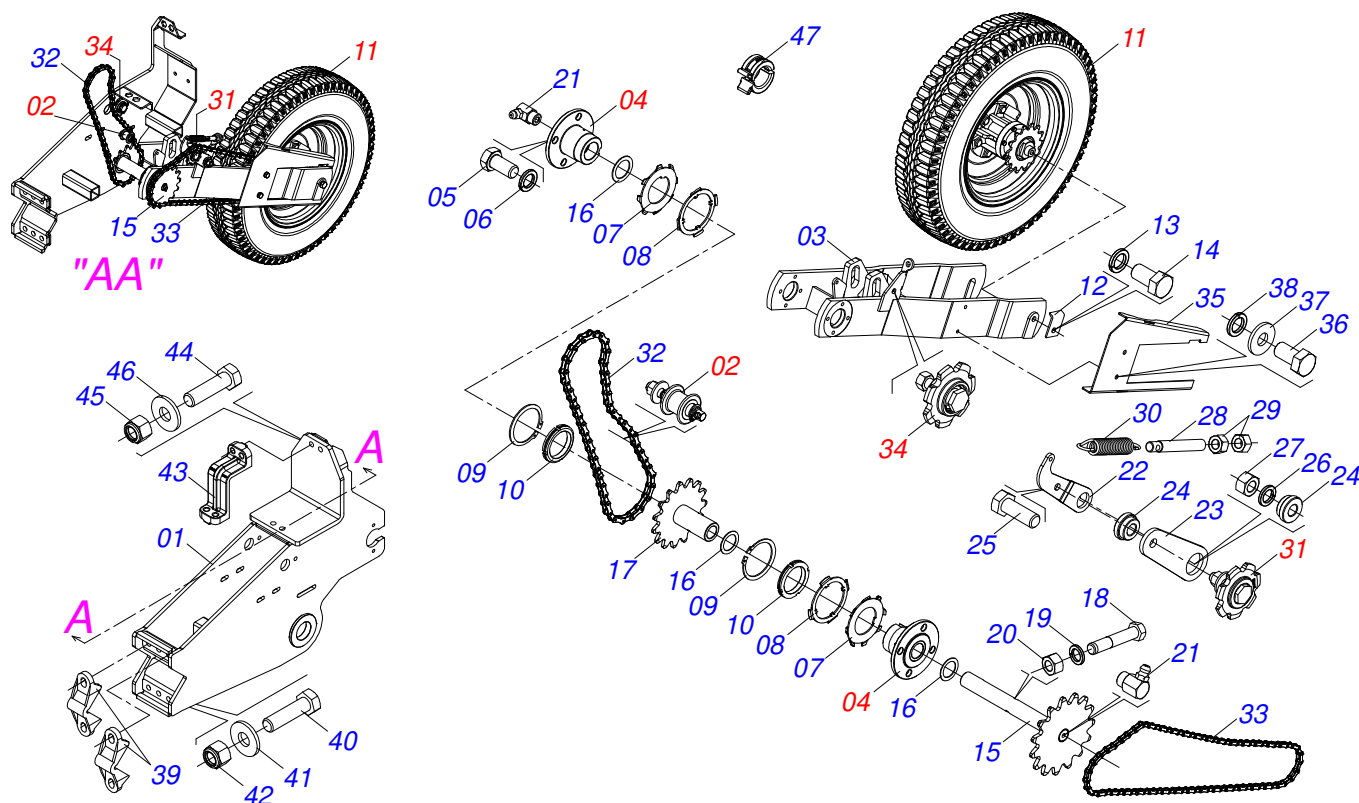


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0501054284	STRETCHER CURRENT TRANSMISSION SIDE	73	01
03	0511065842	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	67	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 68 BOX		01
12	0591010589	BODY LOCK WHEEL		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011167	M16 X 2 X 30 BOLT		02
15	0511061808	15Z GEAR WITH AXLE,		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0531018654	CHAIN TIGHTENER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0531016916	SLEEVE BEARING SUPPORT		02
25	0503010899	5/8" X 2-1/4" BOLT		01
26	0503010027	5/8" SPRING WASHER		01
27	0503010013	5/8" NUT		01
28	0501013491	5/8" TENSIONER SPRING		01
29	0503010013	5/8" NUT		02
30	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
31	0501053522	WHEEL CHAIN TENSIONER	74	01


WHITH LEFT WHEEL ASSY

0511050440


Item	Code	Description	See page	QT
32	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
33	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
34	0511053375	CURRENT DEVIATION ASSY WHEEL	75	01
35	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
36	0503010834	1/2 X 1 BOLT		02
37	0511017302	FLAT WASHER		02
38	0503010019	1/2" SPRING WASHER		02
39	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
40	0503016485	BOLT 3/4		04
41	0501010322	FLAT WASHER		04
42	0503010152	3/4" SELF LOCKING NUT		04
43	0502012720	WHEEL SUPPORT FIXER		01
44	0503017857	BOLT 5/8 UNF 4		04
45	0503010811	5/8" UNF SELF ADJUSTING NUT		04
46	0501012140	FLAT WASHER		04
47	0501047888	ROD STOP		01

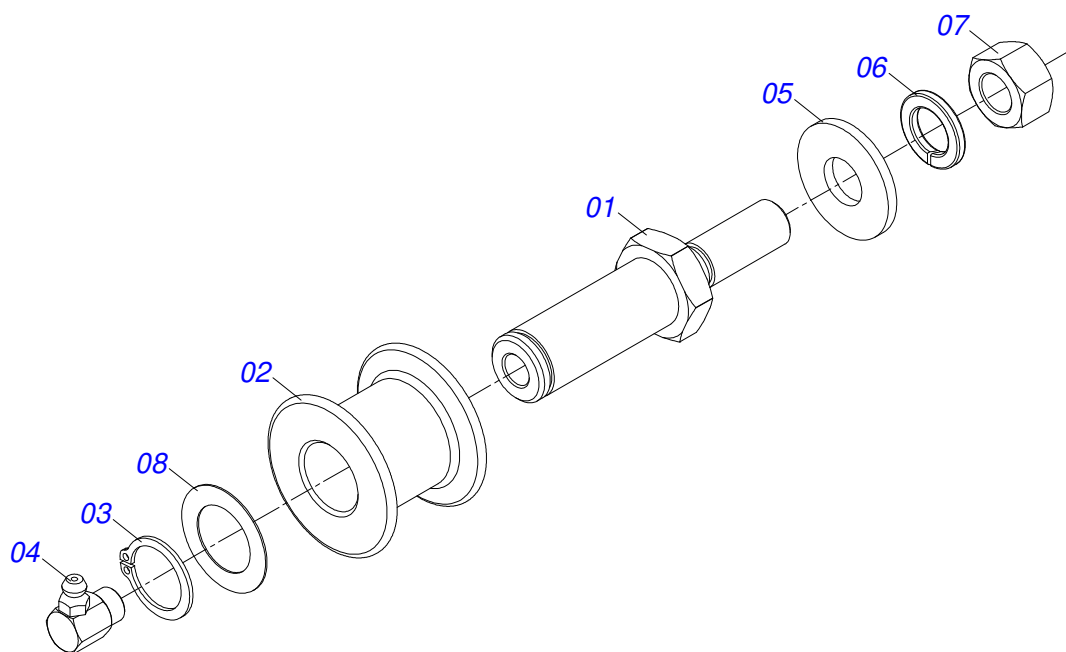 


Item	Code	Description	See page	QT
01	0531017202	AXLE CHAIN TIGHTENER		01
02	0503030402	PULLEY		01
03	0503010302	501019 SEAL RING		01
04	0503010004	1890 GREASE FITTING		01
05	0511017302	FLAT WASHER		01
06	0503010019	1/2" SPRING WASHER		01
07	0503010060	1/2" NUT		01
08	0511015098	FLAT WASHER		01

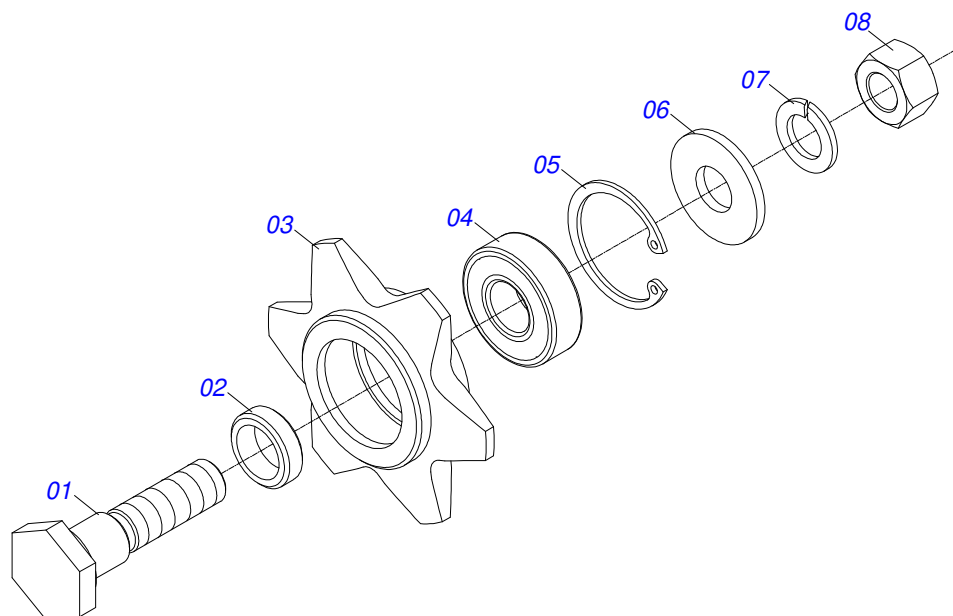 


Item	Code	Description	See page	QT
01	0531012640	AXLE CHAIN TIGHTENER		01
02	0531012678	4.5" X 0.9" X 0.2" SLEEVE		01
03	0502012853	GEAR		01
04	0503012882	BEARING		01
05	0503011945	503050 CLAMPING RING (FOR AXLE)		01
06	0511017302	FLAT WASHER		01
07	0503010019	1/2" SPRING WASHER		01
08	0503010060	1/2" NUT		01

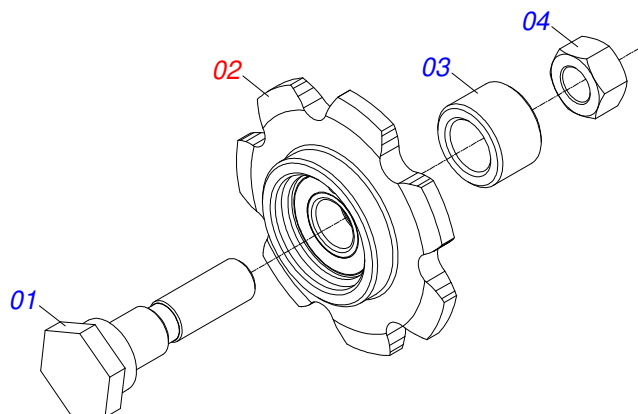 


Item	Code	Description	See page	QT
01	0551018252	CHAIN TIGHTENER AXLE		01
02	0501058239	CHAIN TENSIONER BEARING		01
03	0521010479	SLEEVE ARTICULATION		01
04	0503011336	1/2" HEX SELF ADJUSTING NUT		01

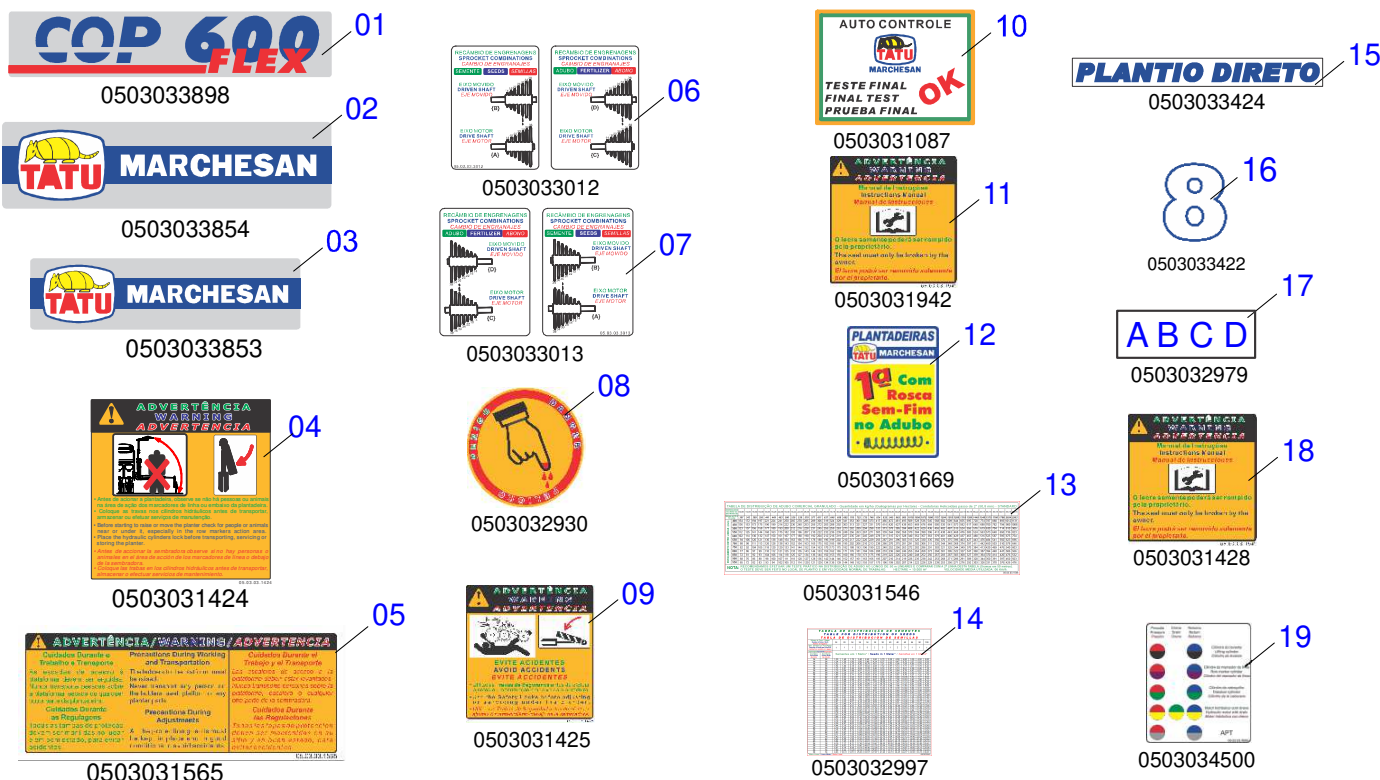 


Item	Code	Description	See page	QT
001	0503033898	ADHESIVE LABEL		02
002	0503033854	ADHESIVE LABEL		02
003	0503033853	ADHESIVE LABEL		02
004	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
005	0503031565	ADHESIVE LABEL CARE		02
006	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
007	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
008	0503032930	ADHESIVE LABEL DANGER		04
009	0503031425	ADHESIVE LABEL ATTENTION		02
010	0503031087	ADHESIVE LABEL		01
011	0503031942	ADHESIVE LABEL		01
012	0503031669	ADHESIVE LABEL		01
013	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
014	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
015	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
016	0503033422	ADHESIVE LABEL		02
017	0503032979	ADHESIVE LABEL LETTERS A B C D		02
018	0503031428	READ MANUAL DECAL		01
019	0503034500	ADHESIVE LABEL		01

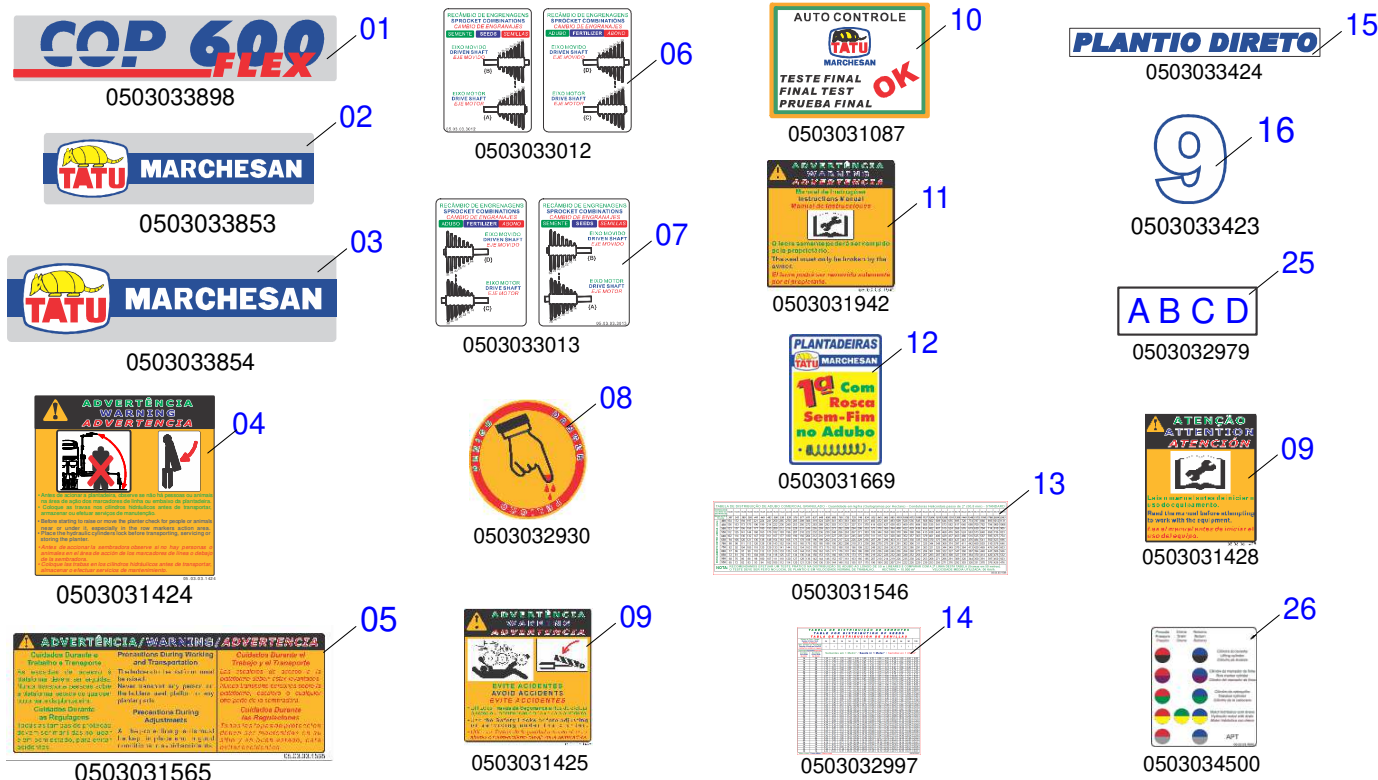 


Item	Code	Description	See page	QT
01	0503033898	ADHESIVE LABEL		02
02	0503033853	ADHESIVE LABEL		02
03	0503033854	ADHESIVE LABEL		02
04	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
05	0503031565	ADHESIVE LABEL CARE		02
06	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
07	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
08	0503032930	ADHESIVE LABEL DANGER		04
09	0503031425	ADHESIVE LABEL ATTENTION		02
10	0503031087	ADHESIVE LABEL		01
11	0503031942	ADHESIVE LABEL		01
12	0503031669	ADHESIVE LABEL		01
13	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
15	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
16	0503033423	LABEL ADHESIVE NUMBER 9		02
17	0503032979	ADHESIVE LABEL LETTERS A B C D		02
18	0503031428	READ MANUAL DECAL		01
19	0503034500	ADHESIVE LABEL		01

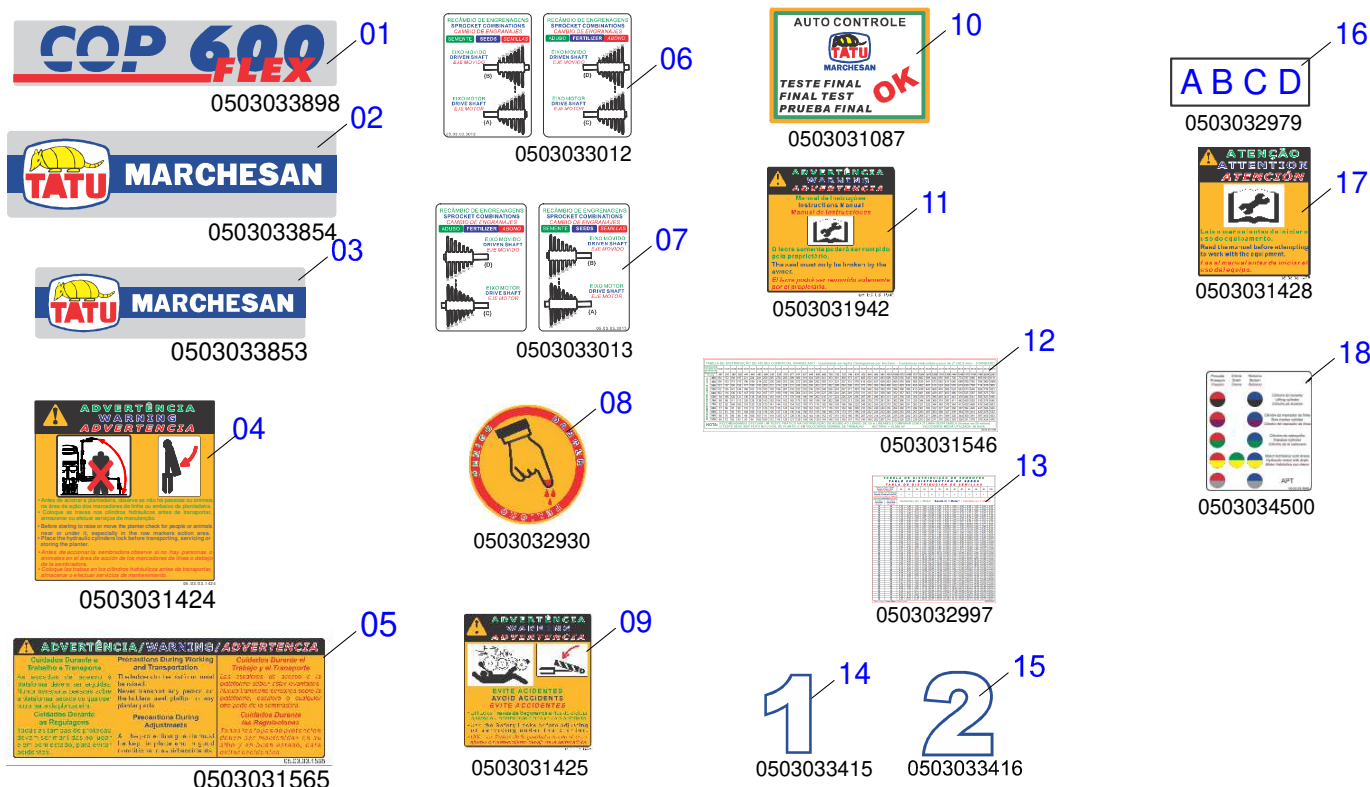 


Item	Code	Description	See page	QT
01	0503033898	ADHESIVE LABEL		03
02	0503033854	ADHESIVE LABEL		03
03	0503033853	ADHESIVE LABEL		02
04	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
05	0503031565	ADHESIVE LABEL CARE		02
06	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
07	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
08	0503032930	ADHESIVE LABEL DANGER		04
09	0503031425	ADHESIVE LABEL ATTENTION		02
10	0503031087	ADHESIVE LABEL		01
11	0503031942	ADHESIVE LABEL		01
12	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
13	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
14	0503033415	ADHESIVE LABEL		02
15	0503033416	ADHESIVE LABEL		02
16	0503032979	ADHESIVE LABEL LETTERS A B C D		02
17	0503031428	READ MANUAL DECAL		01
18	0503034500	ADHESIVE LABEL		01

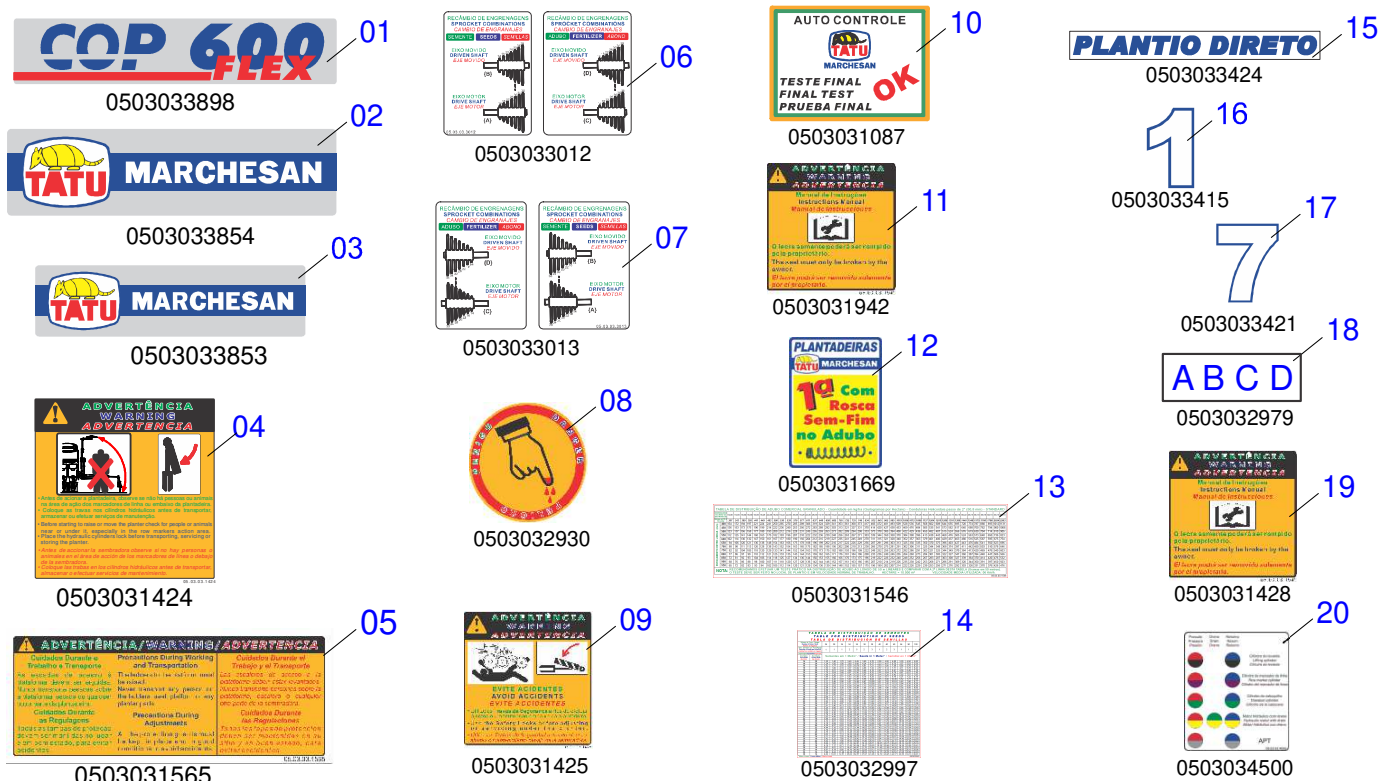 


Item	Code	Description	See page	QT
01	0503033898	ADHESIVE LABEL		04
02	0503033854	ADHESIVE LABEL		04
03	0503033853	ADHESIVE LABEL		02
04	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
05	0503031565	ADHESIVE LABEL CARE		02
06	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
07	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
08	0503032930	ADHESIVE LABEL DANGER		04
09	0503031425	ADHESIVE LABEL ATTENTION		02
10	0503031087	ADHESIVE LABEL		01
11	0503031942	ADHESIVE LABEL		01
12	0503031669	ADHESIVE LABEL		01
13	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
15	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
16	0503033415	ADHESIVE LABEL		02
17	0503033421	ADHESIVE LABEL 7 NUMBER FOR PLANTING		02
18	0503032979	ADHESIVE LABEL LETTERS A B C D		02
19	0503031428	READ MANUAL DECAL		01
20	0503034500	ADHESIVE LABEL		01

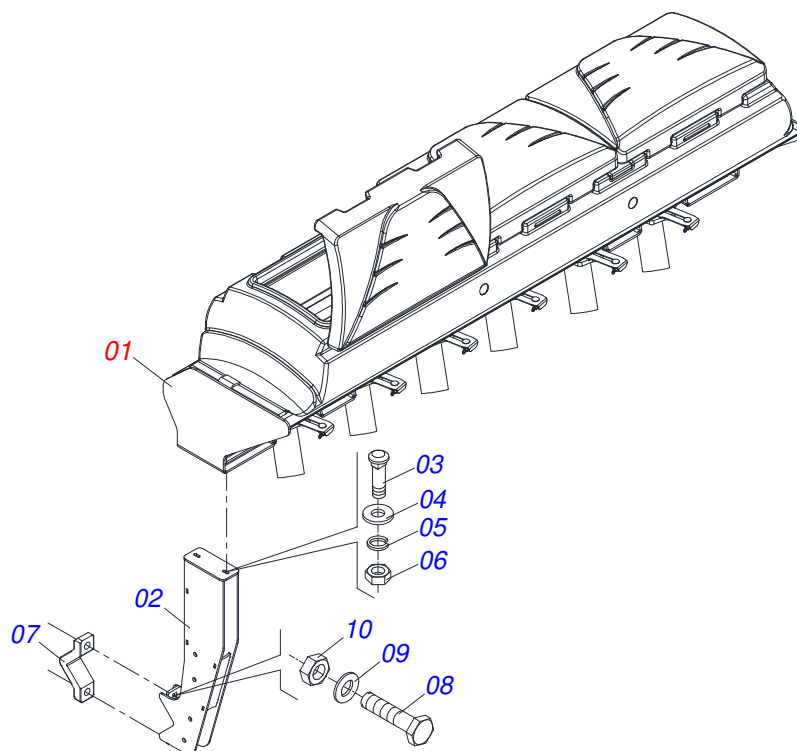 


Item	Code	Description	See page	QT
001	0511059523	ASSEMBLY CSU		01
002	0521063064	SUPPORT TOWER SILO SEED CSU		04
003	0501010942	3/8" X 1-1/4" BOLT		08
004	0501010984	FLAT WASHER		08
005	0503010025	3/8" SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0502010175	HITCH CLAMP		04
008	0501011543	5/8" X 4" BOLT		08
009	0501010453	FLAT WASHER		08
010	0503012412	5/8 UNC SELF LOCKING NUT		08

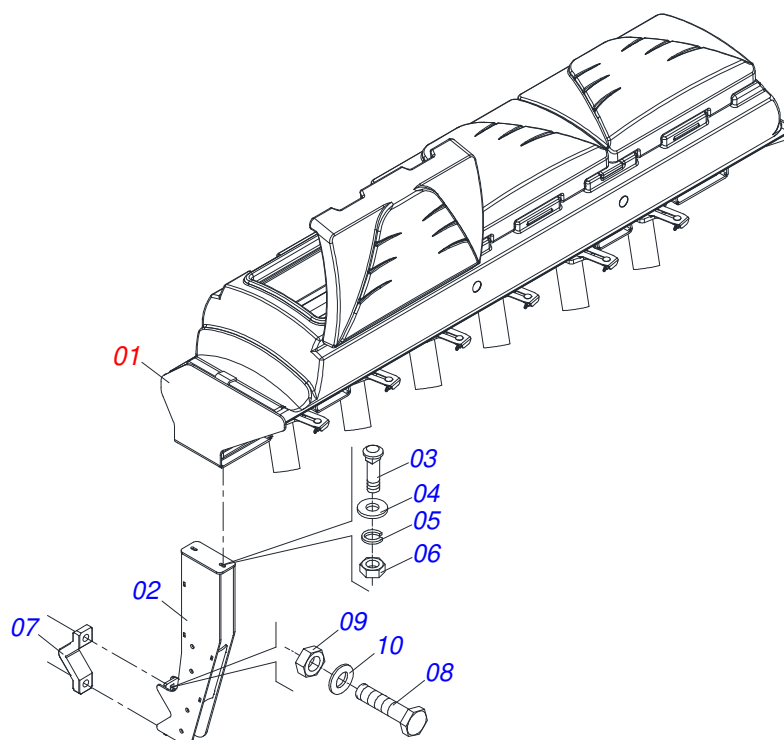 


Item	Code	Description	See page	QT
01	0511058100	ENSEMBLE BOX UNIQUE SEED C3		01
02	0521063064	SUPPORT TOWER SILO SEED CSU		04
03	0501010942	3/8" X 1-1/4" BOLT		08
04	0501010984	FLAT WASHER		08
05	0503010025	3/8" SPRING WASHER		08
06	0503010026	3/8" NUT		08
07	0502010175	HITCH CLAMP		04
08	0501011543	5/8" X 4" BOLT		08
09	0503012412	5/8 UNC SELF LOCKING NUT		08
10	0501012140	FLAT WASHER		08

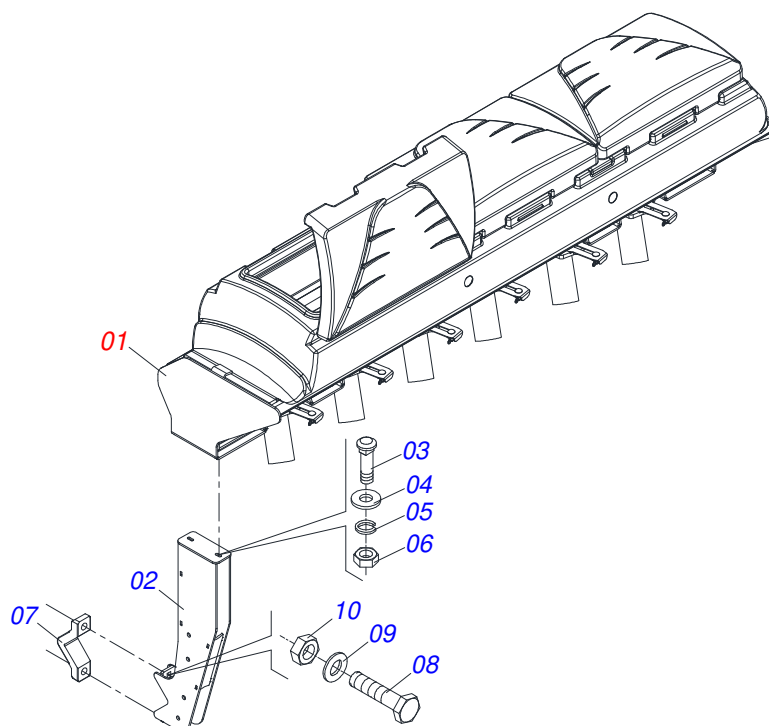 

Item	Code	Description	See page	QT
01	0521050886	ASSEMBLY CSU		01
02	0521063064	SUPPORT TOWER SILO SEED CSU		06
03	0501010942	3/8" X 1-1/4" BOLT		12
04	0501010984	FLAT WASHER		12
05	0503010025	3/8" SPRING WASHER		12
06	0503010026	3/8" NUT		12
07	0502010175	HITCH CLAMP		06
08	0501011543	5/8" X 4" BOLT		12
09	0501010453	FLAT WASHER		12
10	0503012412	5/8 UNC SELF LOCKING NUT		12

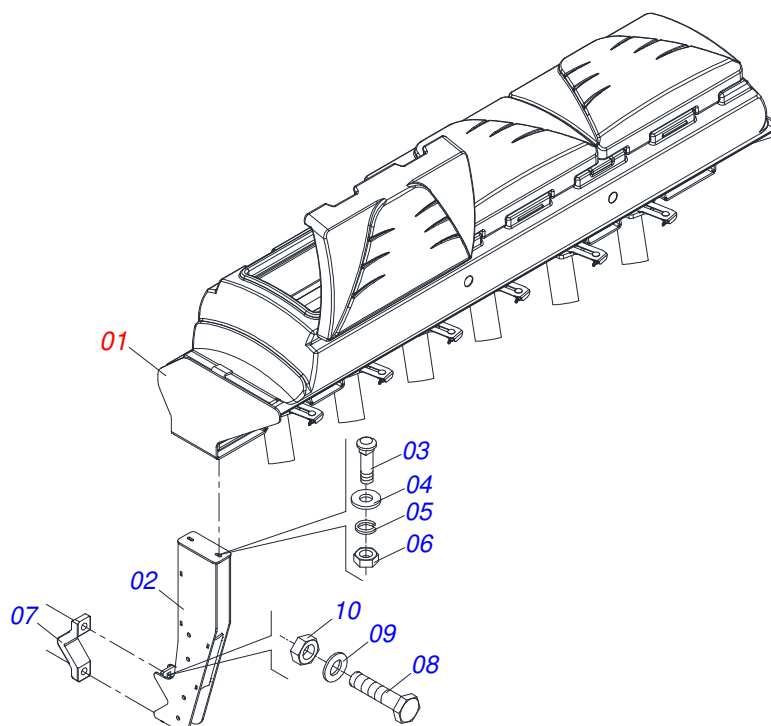 


Item	Code	Description	See page	QT
01	0511057780	ASSEMBLY CSU	84	01
02	0521063064	SUPPORT TOWER SILO SEED CSU		08
03	0501010942	3/8" X 1-1/4" BOLT		16
04	0501010984	FLAT WASHER		16
05	0503010025	3/8" SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0502010175	HITCH CLAMP		08
08	0501011543	5/8" X 4" BOLT		16
09	0503012412	5/8 UNC SELF LOCKING NUT		16
10	0501010453	FLAT WASHER		16

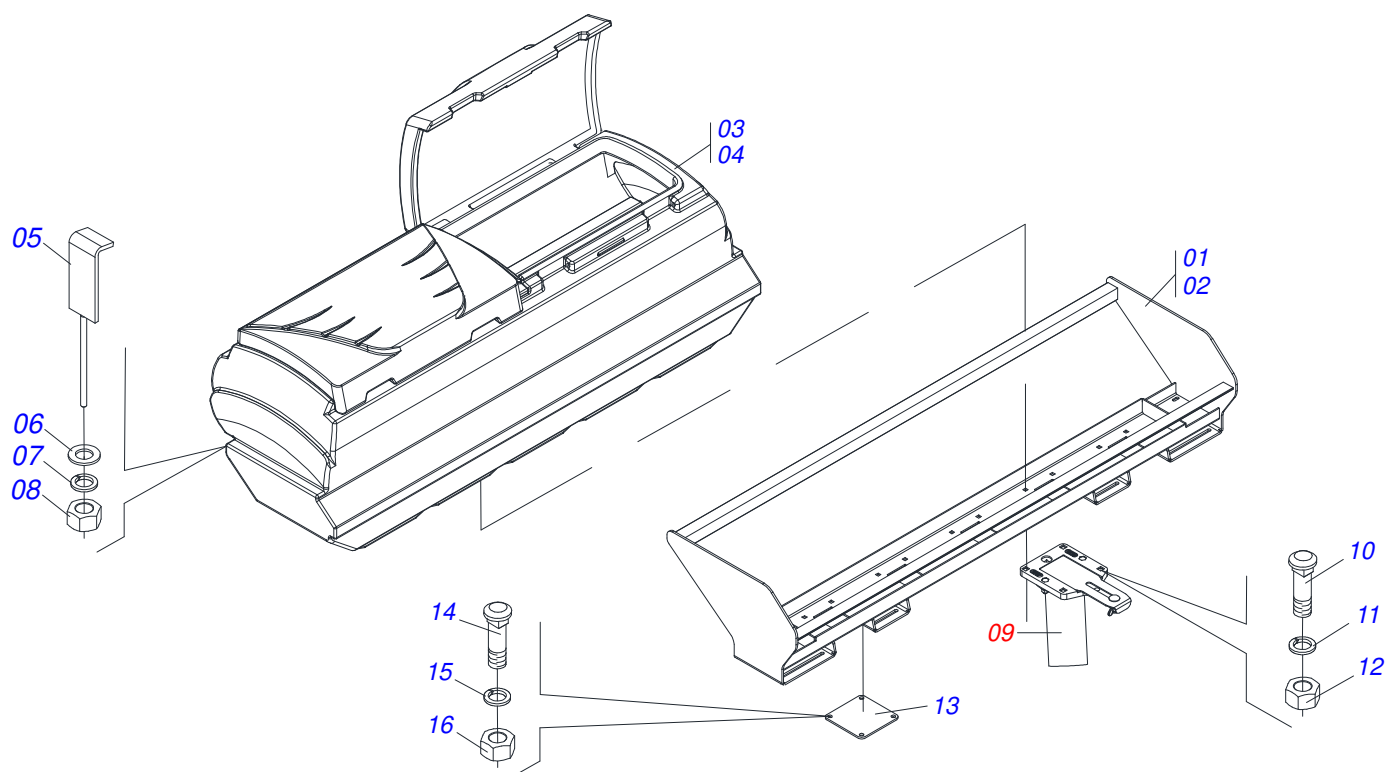 

Item	Code	Description	See page	QT
001	0521064748	05 MOUTHS CSU SUPPORT	02	
002	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS	02	
003	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED	02	
004	0503061899	REAR BEAN FERTILIZER ASSY	02	
005	0521063401	SEED BOX ONLY FIXING LOCK	08	
006	0501010984	FLAT WASHER	08	
007	0503010025	3/8" SPRING WASHER	08	
008	0503010026	3/8" NUT	08	
009	0511057690	SEED CONDUCTOR 3 ARTICULATED ASSY CSU	15	
010	0501010942	3/8" X 1-1/4" BOLT	60	
011	0503010025	3/8" SPRING WASHER	60	
012	0503010026	3/8" NUT	60	
013	0571015773	SUPPORT SEED CSU	07	
014	0501011643	3/8 X 1"BOLT	28	
015	0503010025	3/8" SPRING WASHER	28	
016	0503010026	3/8" NUT	28	

DRAWBAR ASSY

 
0511050644

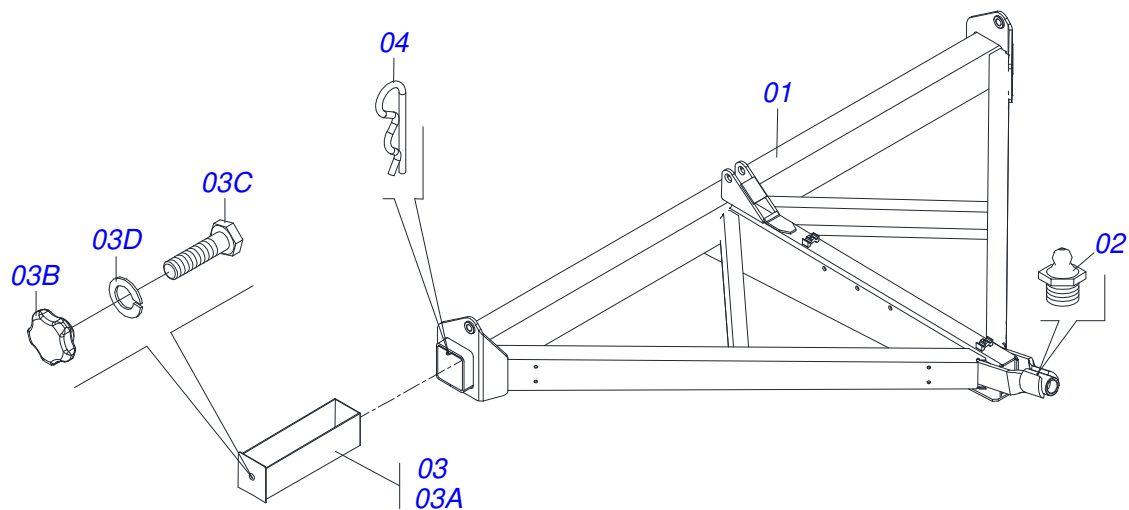

Item	Code	Description	See page	QT
01	0521062074	DRAWBAR		01
02	0503010002	1800 GREASE FITTING		01
03	0511043137	TOOLS BOX ASSY		02
03A	0511065471	BOX OF TOOLS		01
03B	0503010293	BAQUELITE MANIPULACION		01
03C	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
03D	0503011443	3/8" SPRING WASHER		01
04	0503030012	HAIR PIN		02

DRAWBAR ASSY

 
0511053436

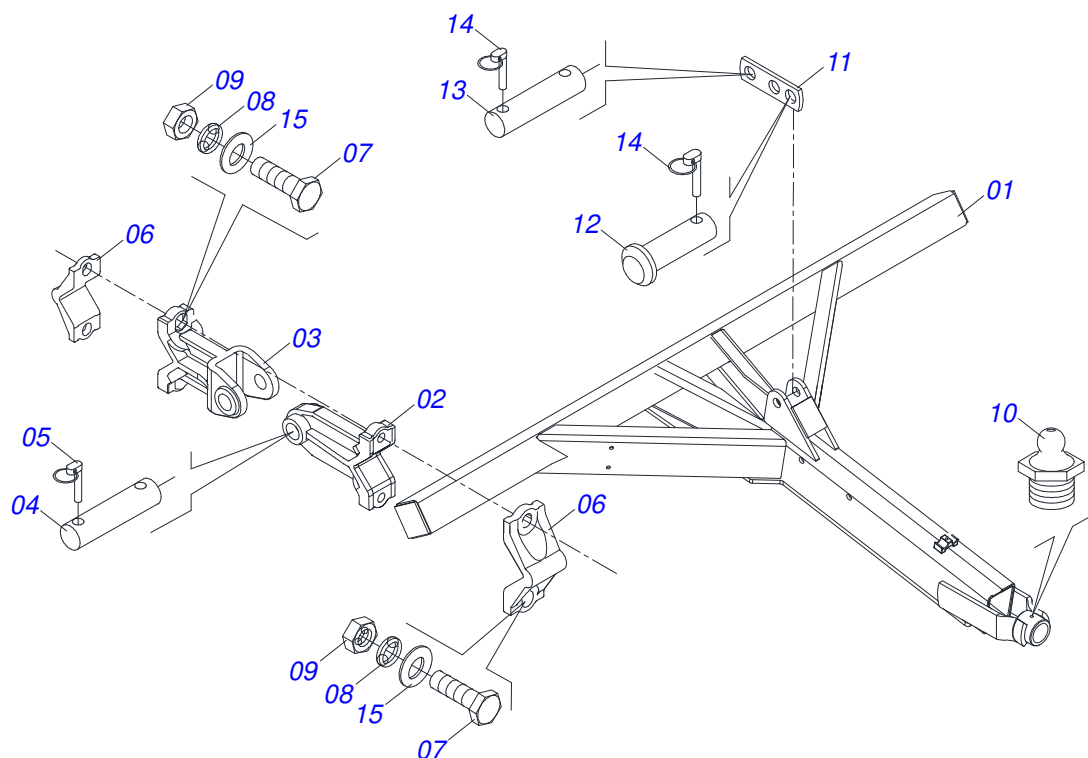

Item	Code	Description	See page	QT
01	0511064808	DRAWBAR		01
02	0502012328	DRAWBAR SUPPORT FRONT FIXATION		02
03	0502012329	DRAWBAR FIXATION REAR SUPPORT		02
04	0561014393	COUPLING SHAFT		02
05	0503030119	LOCK PIN		02
06	0502012330	SUPPORT FIXER PIVOT		04
07	0503011084	3/4" X 5" BOLT		08
08	0503010023	3/4" SPRING WASHER		04
09	0503010014	3/4" NUT		04
10	0503010002	1800 GREASE FITTING		01
11	0561019087	DRAWBAR TRANSPORT LOCK		01
12	0521018532	1.4" X 12" COUPLING SHAFT		01
13	0521010578	COUPLING SHAFT		01
14	0503030085	LOCK PIN		03
15	0501010322	FLAT WASHER		04

DRAWBAR

 
0511053393

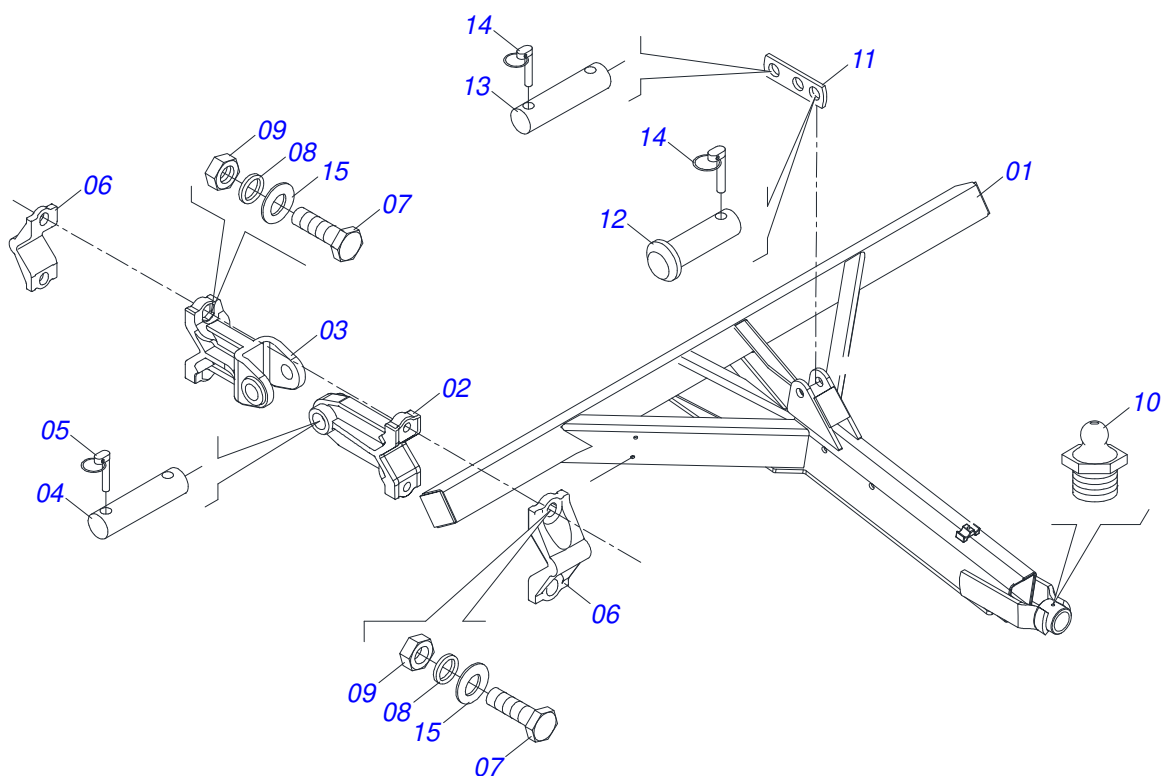


Item	Code	Description	See page	QT
01	0511064808	DRAWBAR		01
02	0502012328	DRAWBAR SUPPORT FRONT FIXATION		04
03	0502012329	DRAWBAR FIXATION REAR SUPPORT		04
04	0561014393	COUPLING SHAFT		04
05	0503030119	LOCK PIN		04
06	0502012330	SUPPORT FIXER PIVOT		08
07	0503011084	3/4" X 5" BOLT		16
08	0503010023	3/4" SPRING WASHER		08
09	0503010014	3/4" NUT		08
10	0503010002	1800 GREASE FITTING		01
11	0561019087	DRAWBAR TRANSPORT LOCK		01
12	0521018532	1.4" X 12" COUPLING SHAFT		01
13	0521010578	COUPLING SHAFT		01
14	0503030085	LOCK PIN		03
15	0501010322	FLAT WASHER		08

SQUARE AXLE ASSEMBLY (730)

 0511053342

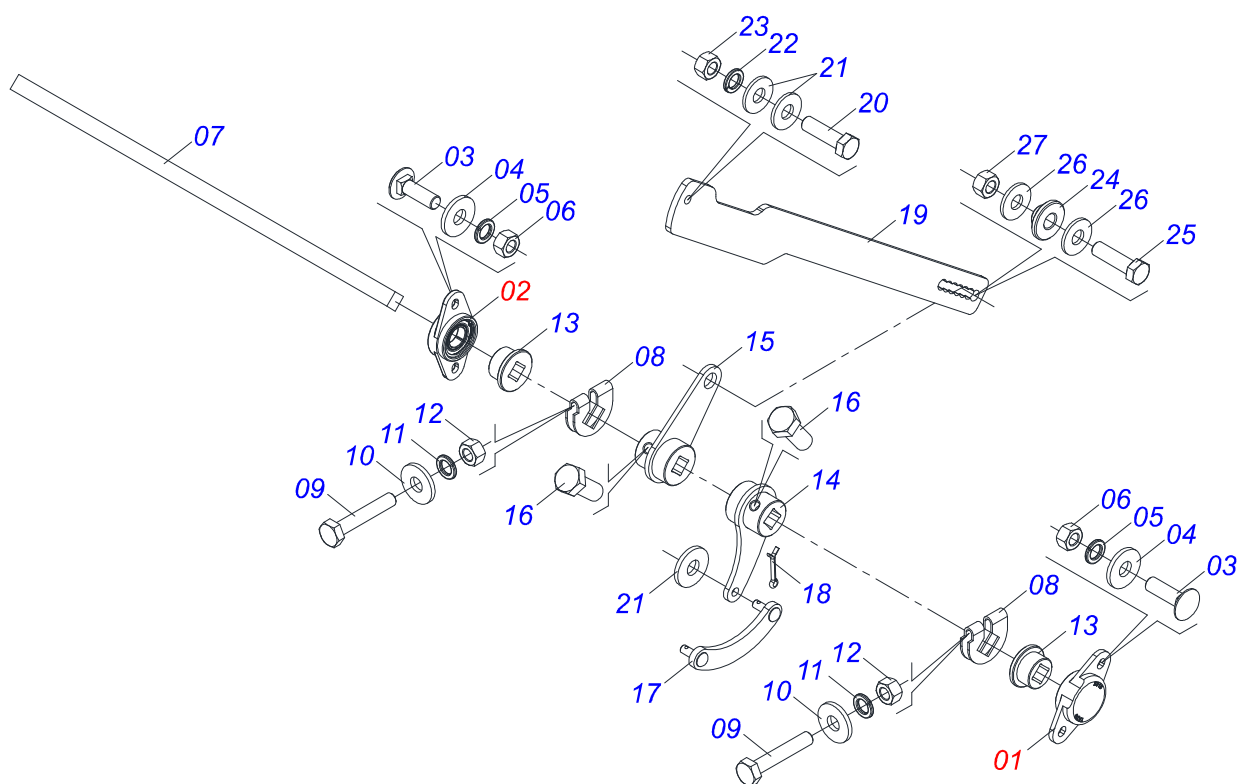


Item	Code	Description	See page	QT
01	0501056271	BEARING CLOSED	36	02
02	0501056444	BEARING WITH ROLLING	35	02
03	0503011953	5/16" X 1" BOLT		08
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
05	0503010179	5/16" ZN SPRING WASHER		08
06	0503010337	5/16" NUT		08
07	0511014218	3/4" X 28.7" SQUARE SHAFT		02
08	0521010691	AXLE FASTENER		04
09	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		04
10	0511017303	FLAT WASHER		04
11	0503010143	1/4" SPRING WASHER		04
12	0503010144	1/4" NUT		04
13	0503030303	SUPPORT WASHER		04
14	0521061852	LEVER RATCHET		02
15	0521061847	AXLE ADRIVING ASSY		02
16	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
17	0521061849	DISASSEMBLE LEVER		02
18	0503010140	1/8" X 3/4" COTTERPIN		04
19	0571012792	LOWER LEVER		02
20	0503011082	C1/2" X 1.3/4" SCREW		02
21	0511017302	FLAT WASHER		04
22	0503010019	1/2" SPRING WASHER		02
23	0503010060	1/2" NUT		02
24	0561016797	SLEEVE UNION LEVER		02
25	0501010096	3/8" X 2" BOLT		02
26	0501010984	FLAT WASHER		04
27	0503010026	3/8" NUT		04

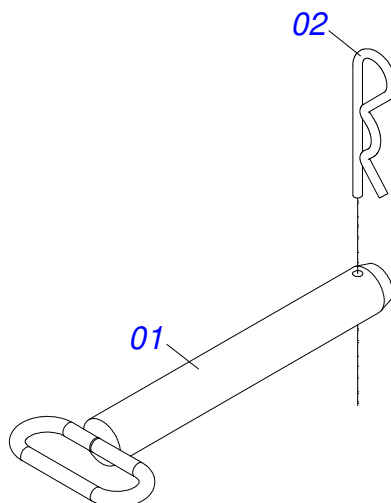 


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HAIR PIN		01

TRACTOR HITCH

 0511055096

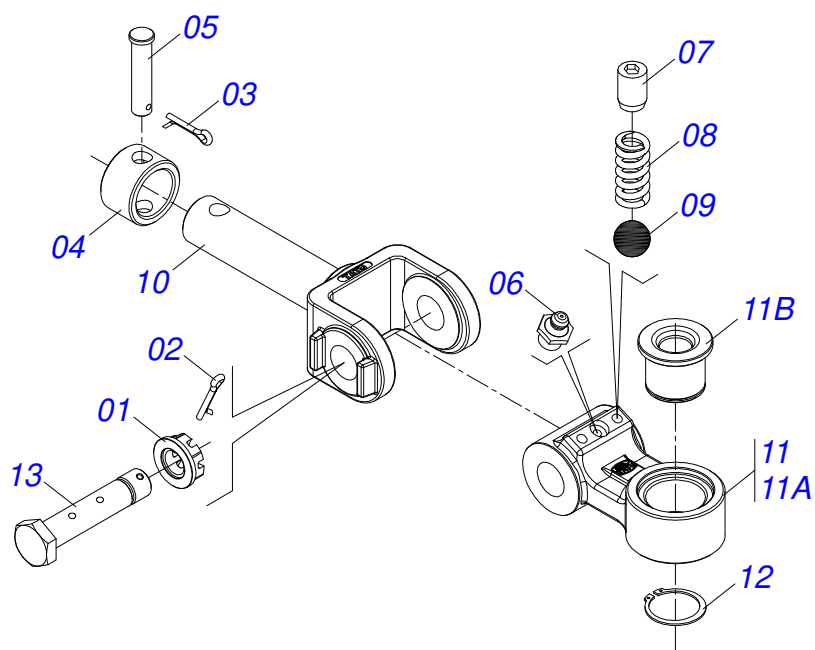


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	COMPRESSION SPRING LEFT		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

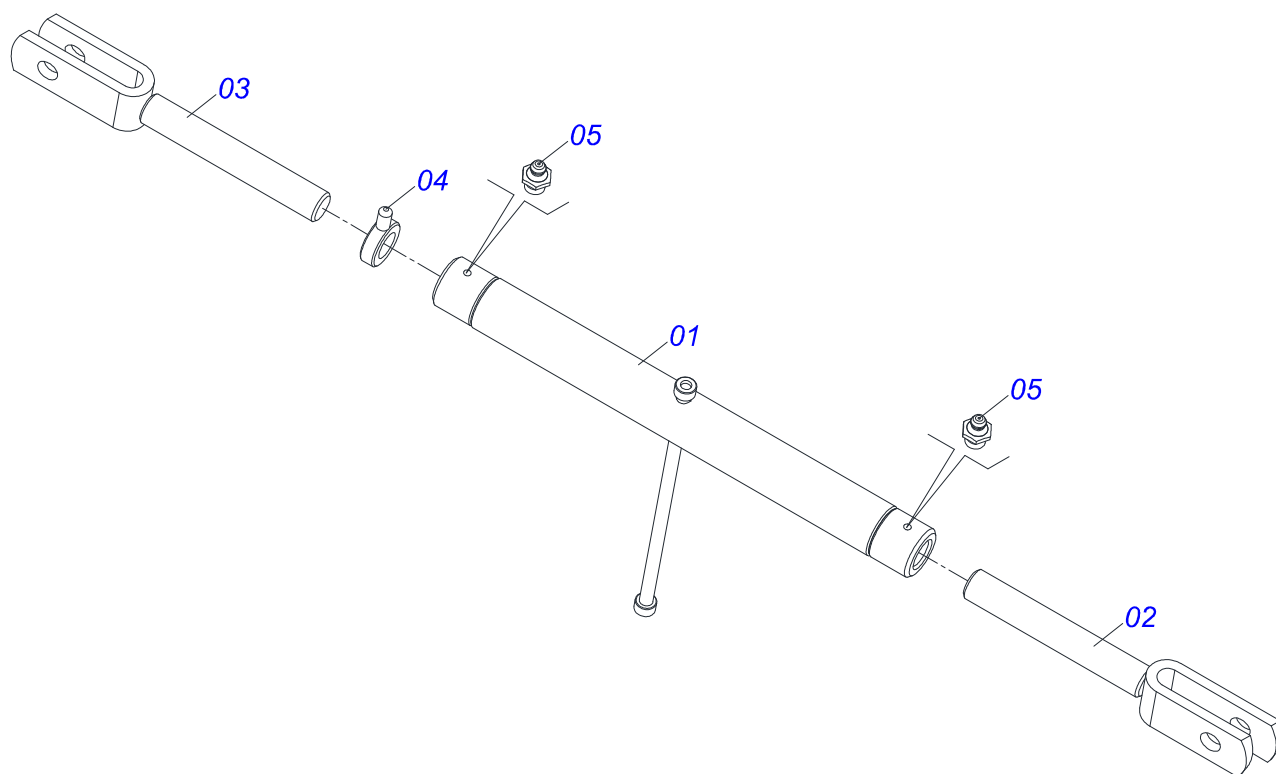 


Item	Code	Description	See page	QT
01	0501067353	508 PST3 TURNBUCKLE		01
02	0511062887	RIGHT TURNBUCKLE		01
03	0511062888	LH TURNBUCKLE		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

DRAWBAR TURNBUCKLE

 
0501054605

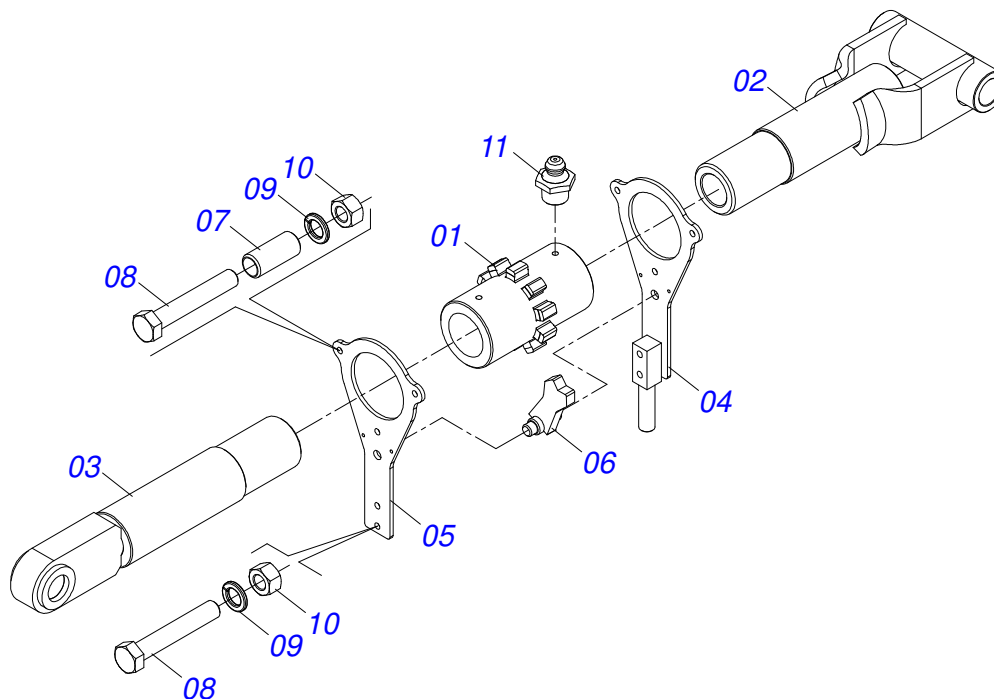


Item	Code	Description	See page	QT
01	0502011237	ESTABILIZER BODY		01
02	0511061878	RH SCREW ARBOR		01
03	0511064650	LH SCREW ARBOR		01
04	0511061880	SIDE RIGHT RATCHET		01
05	0531010264	SIDE RATCHET		01
06	0511061881	RATCHET FOLLOWER		01
07	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
08	0503011179	3/8" X 2-1/4" BOLT		05
09	0503010025	3/8" SPRING WASHER		05
10	0503010026	3/8" NUT		05
11	0503010002	1800 GREASE FITTING		02

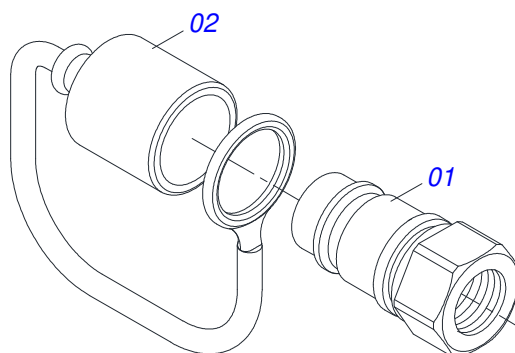 

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

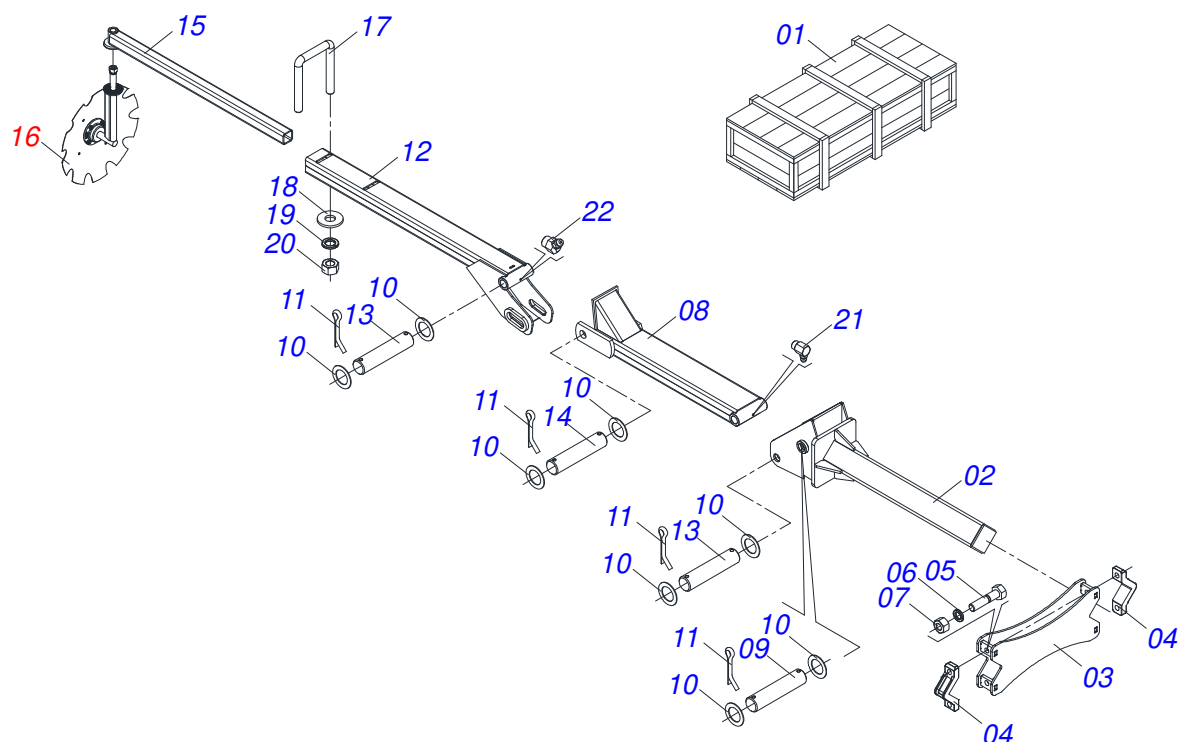 


Item	Code	Description	See page	QT
001	0501100045	WOODEN BOX		01
002	0511061022	ROW MARKER SUPPORT		02
003	0511066119	MARKER SUPP FIXER FASTENER		04
004	0502010175	HITCH CLAMP		08
005	0501010216	3/4" X 4-1/2" BOLT		16
006	0503010023	3/4" SPRING WASHER		16
007	0503010014	3/4" NUT		16
008	0511060013	ROW MARKER ARM		02
009	0521013347	1.1/4" X 8.4" AXLE		02
010	0501019435	32 X 50 X 1.5 FLAT WASHER		16
011	0503010523	1/4" X 2" COTTERPIN		16
012	0511060014	ROW MARKER ARM		02
013	0521011142	1.1/4" X 7.5" AXLE		04
014	0521011141	1.1/4" X 6.5" AXLE		02
015	0511060010	1400 TURNBUCKLE		02
016	0501050633	MARKER DISC ASSY LINE	95	02
017	0521012324	1/2" X 3.2"X 2.54" FASTENER		04
018	0511017302	FLAT WASHER		08
019	0503010019	1/2" SPRING WASHER		08
020	0503010060	1/2" NUT		08
021	0503010004	1890 GREASE FITTING		02
022	0503010003	1845 GREASE FITTING		02

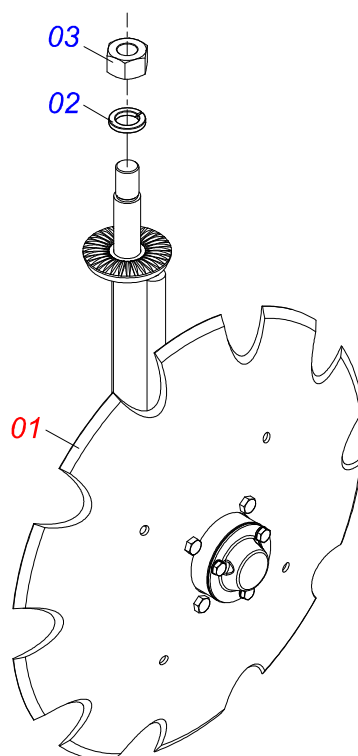 


Item	Code	Description	See page	QT
01	0511053904	DISC LINE MARKER	96	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

DISC LINE MARKER

 
0511053904

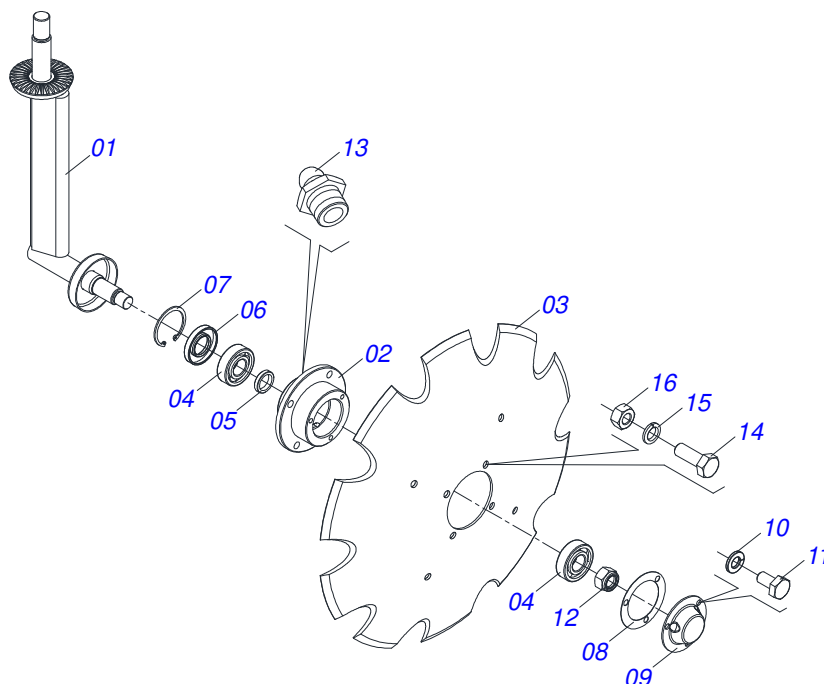

Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9\" X 2\" X 0.02\" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4\" UNF X 1/2\" BOLT		03
12	0503010878	5/8\" SELF ALIGNING NUT		01
13	0503010691	1/4\" GREASE FITTING		01
14	0503010358	5/16\" X 5/8\" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16\" NUT		04

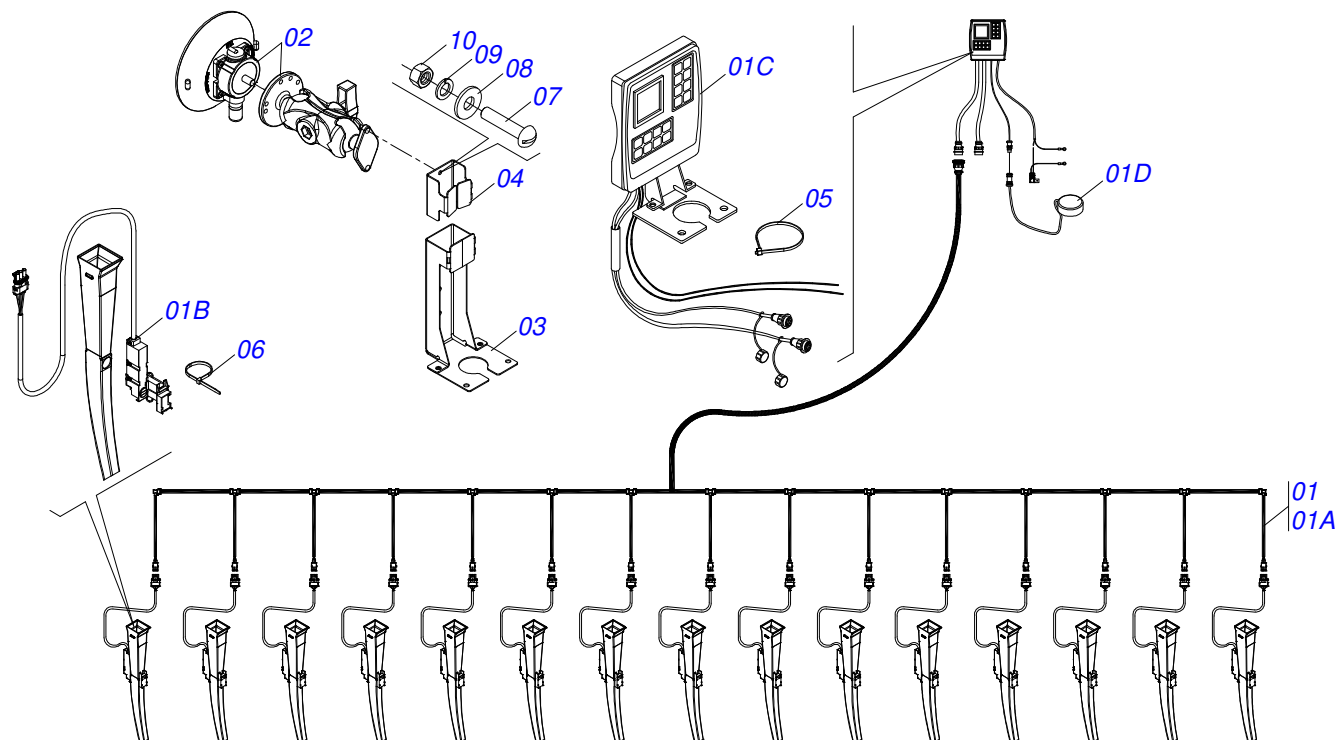 


Item	Code	Description	See page	QT
01	0503062808	KIT MONITOR SEED 15L 45/50 PM400		01
01A	0503016561	15 ROW SIMPLE MONITOR CABLE		01
01B	0503019100	SENSOR		15
01C	0503017602	MONITOR PLANT PM400		01
01D	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		75
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		225
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02

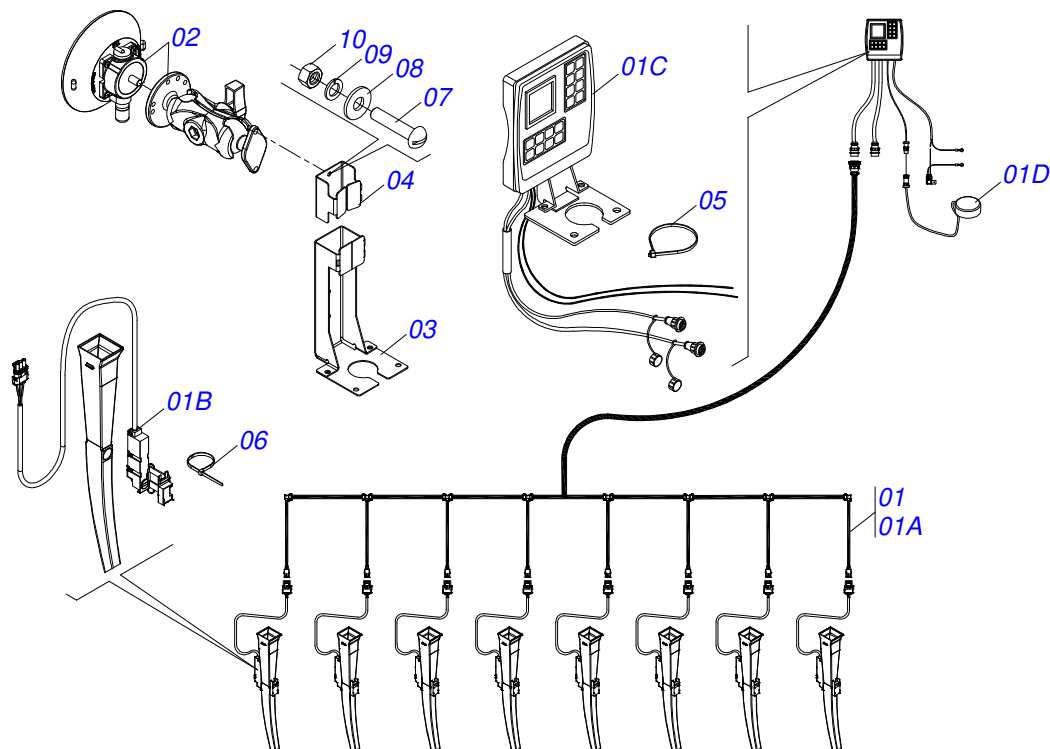 

Item	Code	Description	See page	QT
01	0503062793	SEED MONITORING KIT		01
01A	0503016554	8 ROW SIMPLE MONITOR CABLE		01
01B	0503019100	SENSOR		08
01C	0503017602	MONITOR PLANT PM400		01
01D	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		40
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		120
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02

HIDRAULIC ROW MARKER

 0511053680

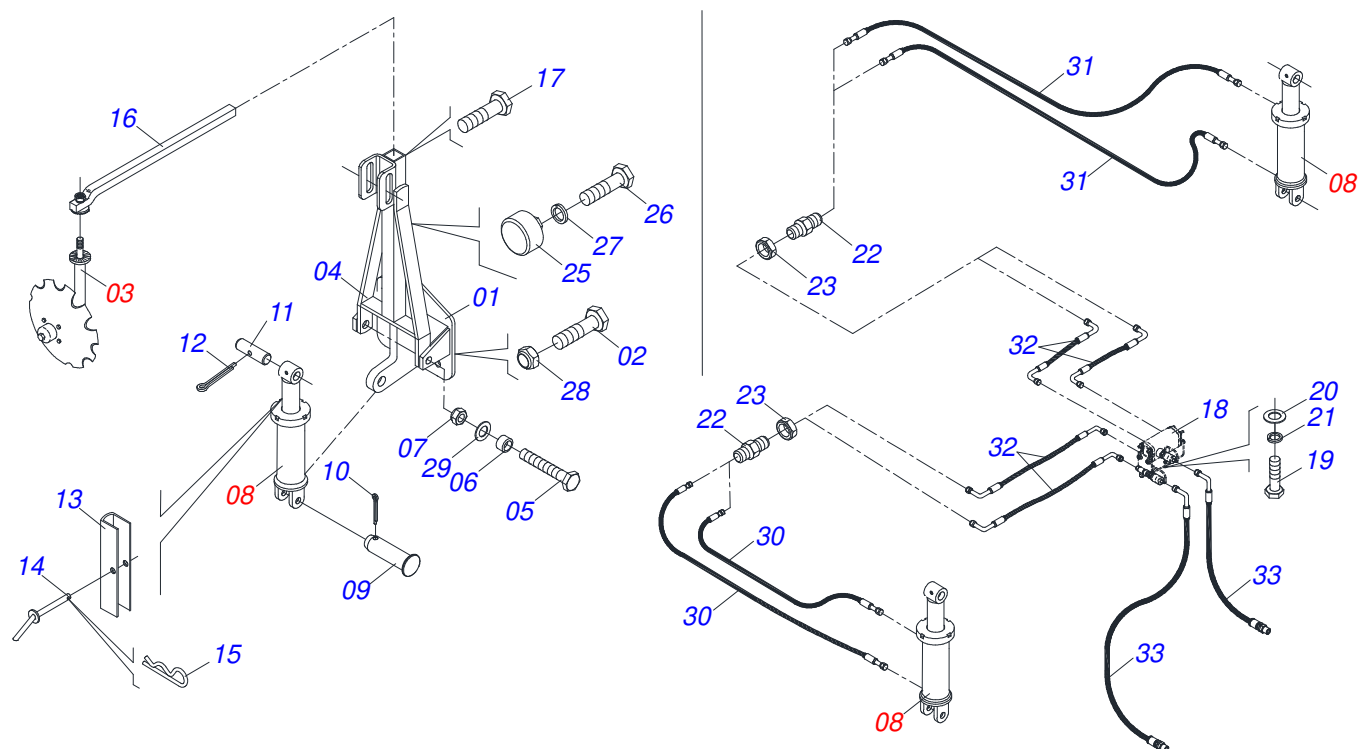

Item	Code	Description	See page	QT
01	0511065449	ROW MARKER ARM SUPPORT		02
02	0501018059	3/4" X 2-1/4" BOLT		08
03	0501050633	MARKER DISC ASSY LINE	95	08
04	0501069470	ROW MARKER ARM		02
05	0503011067	5/8" X 2-1/2" BOLT		04
06	0521010479	SLEEVE ARTICULATION		04
07	0503012795	5/8" HEX SELF ADJUSTING NUT		04
08	0511058449	HYDRAULIC CYLINDER		02
09	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
10	0503010571	1/4" X 1.1/2 COTTERPIN		02
11	0511015779	1" X 4.2" AXLE		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
14	0501068994	0.3" X 3.1" LOCK PIN		02
15	0503030168	HAIR PIN		02
16	0501069643	890 TURNBUCKLE		02
17	0503010962	5/8" X 1-1/4" BOLT		04
18	0501054649	SEQUENTIAL VALVE ASSY		01
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0501010984	FLAT WASHER		02
21	0503010025	3/8" SPRING WASHER		02
22	0541012165	3/4" NIPPLE		04
23	0511018387	3/4" X 0.3 ADJUSTMENT VALVE NUT		04
24	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	93	02
25	0503011070	BEATER		02
26	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
27	0503010019	1/2" SPRING WASHER		02
28	0503011255	3/4" LOCK NUT		08
29	0501012140	FLAT WASHER		04
30	0501080635	3/8" X 19" TR-TR HOSE		02
31	0501080105	TR-TR HOSE ASSY		02




HIDRAULIC ROW MARKER

0511053680

Item	Code	Description	See page	QT
32	0501080748	3/8" X 122" TC-TC HOSE ASSY		04
33	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02

MARKER CYLINDER

 0511054306

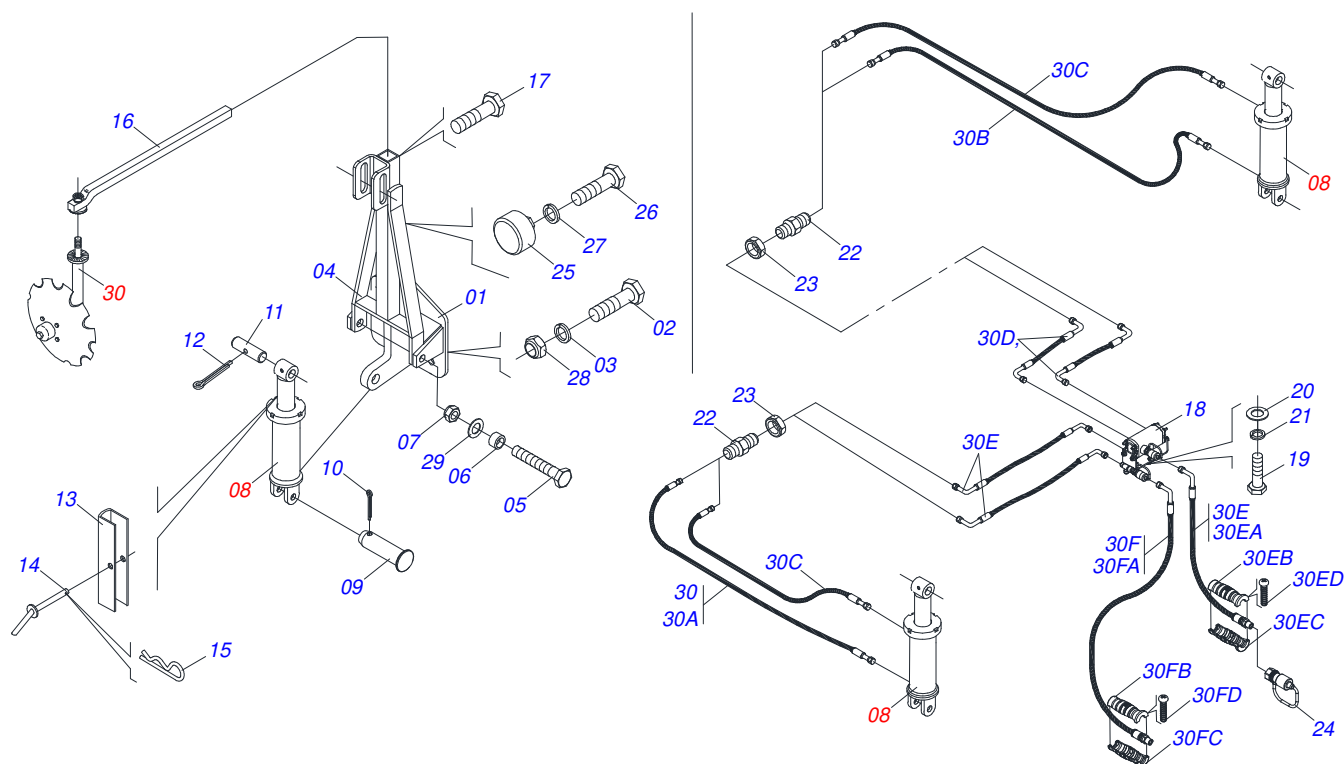


Item	Code	Description	See page	QT
001	0511065449	ROW MARKER ARM SUPPORT		02
002	0501018059	3/4" X 2-1/4" BOLT		08
003	0503010023	3/4" SPRING WASHER		08
004	0511061811	ROW MARKER ARM		02
005	0503011067	5/8" X 2-1/2" BOLT		04
006	0521010479	SLEEVE ARTICULATION		04
007	0503012795	5/8" HEX SELF ADJUSTING NUT		04
008	0511058449	HYDRAULIC CYLINDER		02
009	0521010574	C0.9" X 3.3" COUPLING SHAFT		02
010	0503010571	1/4" X 1.1/2 COTTERPIN		02
011	0511015779	1" X 4.2" AXLE		02
012	0503010523	1/4" X 2" COTTERPIN		02
013	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
014	0501068994	0.3" X 3.1" LOCK PIN		02
015	0503030168	HAIR PIN		02
016	0501066949	1235 TURNBUCKLE		02
017	0503010962	5/8" X 1-1/4" BOLT		04
018	0501054649	SEQUENTIAL VALVE ASSY		01
019	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
020	0501010984	FLAT WASHER		02
021	0503010025	3/8" SPRING WASHER		02
022	0541012165	3/4" NIPPLE		04
023	0511018387	3/4" X 0.3 ADJUSTMENT VALVE NUT		04
024	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	93	02
025	0503011070	BEATER		02
026	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
027	0503010019	1/2" SPRING WASHER		02
028	0503011255	3/4" LOCK NUT		08
029	0501012140	FLAT WASHER		04
030	0511058479			01
030A	0501080635	3/8" X 19" TR-TR HOSE		02

MARKER CYLINDER

0511054306

Item	Code	Description	See page	QT
030B	0501080105	TR-TR HOSE ASSY		02
030C	0501080124	HOSE 3/8 X 900 TR-TC		04
030D	0501080675	HOSE 3/8 X 1000 TC-TC 180G		04
030E	0521052277	HOSE 3/8 X 4212 TC-TM PURPLE / RED		01
030EA	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
030EB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
030EC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
030ED	0503018952	PLASTIC BOLT		06
030F	0521052278	HOSE 3/8 X 4212 TC-TM PURPLE / BLUE		01
030FA	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
030FB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
030FC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
030FD	0503018952	PLASTIC BOLT		06
031	0501050633	MARKER DISC ASSY LINE	95	02

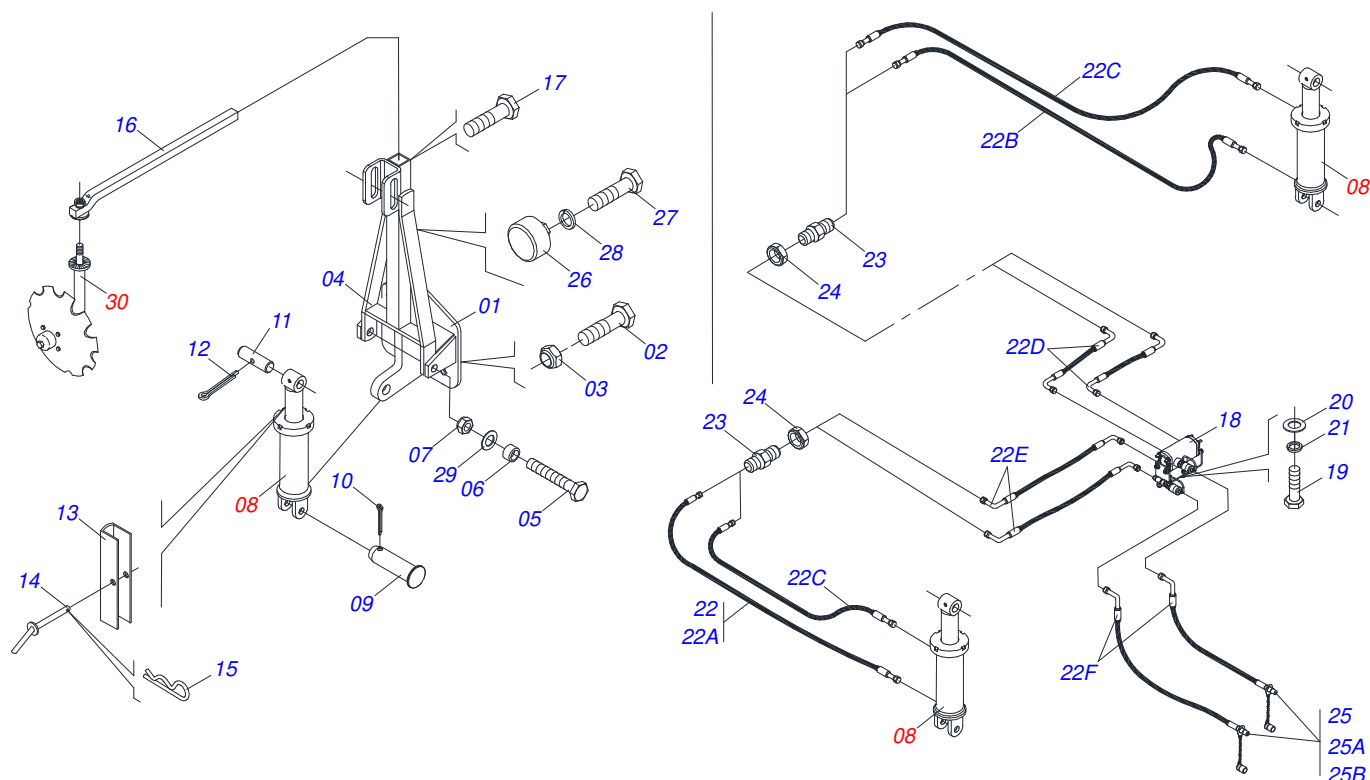 


Item	Code	Description	See page	QT
01	0511065449	ROW MARKER ARM SUPPORT	02	
02	0501018059	3/4" X 2-1/4" BOLT	08	
03	0503011255	3/4" LOCK NUT	08	
04	0501069470	ROW MARKER ARM	02	
05	0503011067	5/8" X 2-1/2" BOLT	04	
06	0521010479	SLEEVE ARTICULATION	04	
07	0503012795	5/8" HEX SELF ADJUSTING NUT	04	
08	0511058449	HYDRAULIC CYLINDER	02	
09	0521010575	C0.9" X 3.3" COUPLING SHAFT	02	
10	0503010571	1/4" X 1.1/2 COTTERPIN	02	
11	0511015779	1" X 4.2" AXLE	02	
12	0503010523	1/4" X 2" COTTERPIN	02	
13	0511017592	11.8" X 1.6" TRANSPORT LOCK	02	
14	0501068994	0.3" X 3.1" LOCK PIN	02	
15	0503030168	HAIR PIN	02	
16	0501069643	890 TURNBUCKLE	02	
17	0503010962	5/8" X 1-1/4" BOLT	04	
18	0501054649	SEQUENTIAL VALVE ASSY	01	
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02	
20	0501010984	FLAT WASHER	02	
21	0503010025	3/8" SPRING WASHER	02	
22	0511057082	HOSE KIT SYSTEM HYDRAULIC	01	
22A	0501080635	3/8" X 19" TR-TR HOSE	02	
22B	0501080124	HOSE 3/8 X 900 TR-TC	04	
22C	0501080105	TR-TR HOSE ASSY	02	
22D	0501080675	HOSE 3/8 X 1000 TC-TC 180G	02	
22E	0501080301	HOSE 3/8 X 1300 TC-TC	02	
22F	0501080878	3/8 X 4200 TC-TM HOSE ASSY	02	
23	0541012165	3/4" NIPPLE	04	
24	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	04	
25	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	93	02


**MARKER HIDRAULICO**

 0511053426

Item	Code	Description	See page	QT
25A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
25B	0503011882	MALE QUICK COUPLER CAP		01
26	0503011070	BEATER		02
27	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
28	0503010019	1/2" SPRING WASHER		02
29	0501012140	FLAT WASHER		04
30	0501050633	MARKER DISC ASSY LINE	95	01

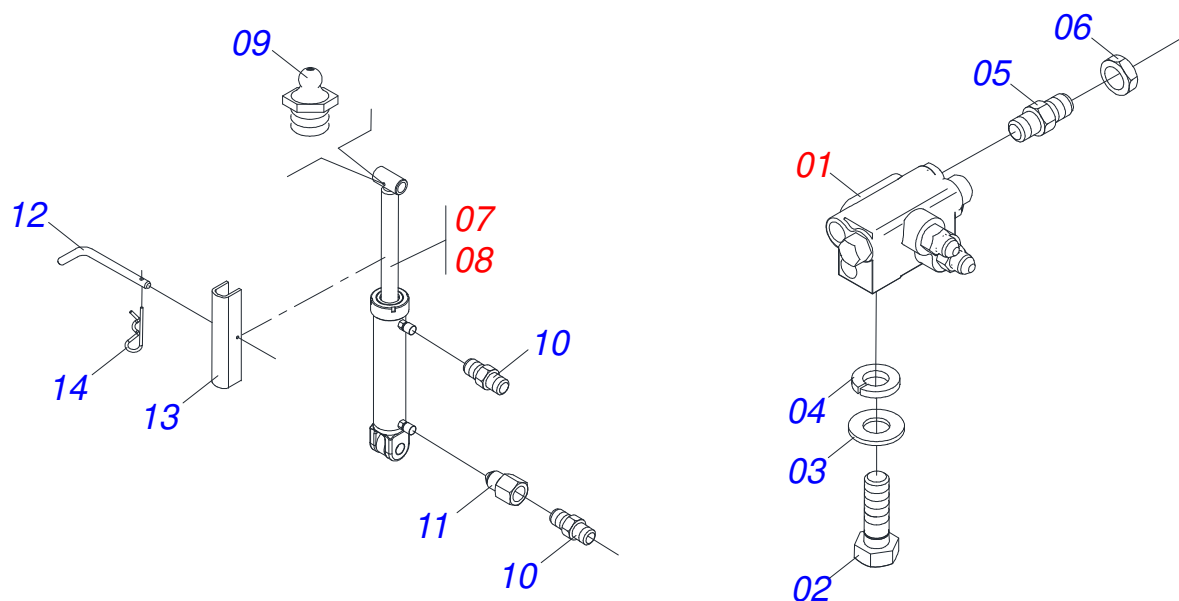

Item	Code	Description	See page	QT
01	0501054649	SEQUENTIAL VALVE ASSY		01
02	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
03	0501010984	FLAT WASHER		02
04	0503010025	3/8" SPRING WASHER		02
05	0541012165	3/4" NIPPLE		04
06	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		04
07	0511058430	HYDRAULIC CYLINDER	17	01
08	0511058431	HYDRAULIC CYLINDER	18	01
09	0503010002	1800 GREASE FITTING		04
10	0501010617	3/4" NIPPLE		04
11	0551016274	HYDRAULIC CYLINDER ADAPTER		02
12	0501068994	0.3" X 3.1" LOCK PIN		02
13	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
14	0503030168	HAIR PIN		02

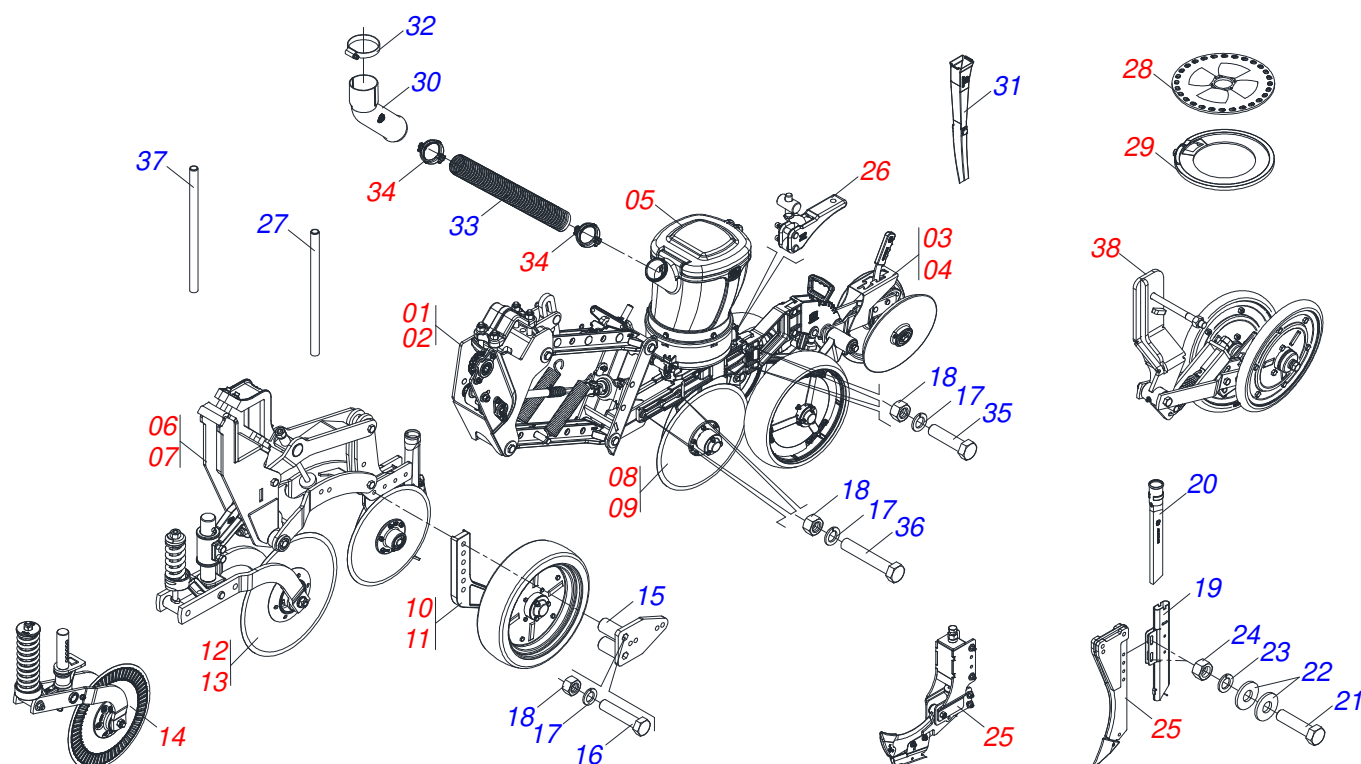 


Item	Code	Description	See page	QT
01	0521051619	FRONT LINE SHORT MECHANICAL SEED	104	01
02	0521051620	FRONT LINE MECHANICAL SEED LINE	105	01
03	0521051424	WHEEL SYSTEM DEPTH / COMPACTOR QUICK ADJUSTMENT	114	01
04	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	115	01
04.	0521042327	DEPTH CONTROL & PRESS WHEEL ASSY		01
05	0521050096	SEED DEPOSIT SYSTEM (CSU)	126	01
06	0511053023	LONG FERTILIZER LINE	128	01
07	0511053024	FERTILIZER SHORT LINE	129	01
08	0511057136	REAR RIGHT SEED LINE	135	01
09	0511057137	REAR LEFT LINE SEED	136	01
10	0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL	143	01
11	0501054482	DEPTH CONTROL LEFT ARM WITH TIRE		01
12	0521056455	DISC CUT DOC20 ASSY	147	15
13	0511051818	DISC CUT 18 SEMI MOUNTED	149	01
14	0511059569	20" PLAIN COULTER BLADE	151	01
15	0511065909	DEPTH FIXER BASE		01
16	0503010547	1/2" X 4" BOLT		01
17	0503010019	1/2" SPRING WASHER		01
18	0503010060	1/2" NUT		01
19	0521069127	BOTTOM NOZZLE FERTILIZER		01
20	0503030483	FERTILIZER SOCKET		01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
22	0501010984	FLAT WASHER		01
23	0503010025	3/8" SPRING WASHER		01
24	0503010026	3/8" NUT		01
25	0501110231	SCARIFIER HEAD WITH SPIKE 0061	153	01
25.	0501110723	SCARIFIER SPINDLE		01
25..	0521053957	ROD WITH ARM/DISARMMENT		01
26	0511052024	FAST CLOSING SET	154	01
27	0531013600	PRESS ADJUSTMENT LEVER		01
28	0503062066	DISC SET WITH CORN RING	155	01

**ASSY SEED/FERTILIZER LINE**

 0909095559

Item	Code	Description	See page	QT
29	0503062067	DISC SET / RING SOY 90F TITANIUM	156	01
30	0503031050	CURVED CONDUCTOR		01
31	0503033672	NOZZLE WITHOUT TITANIUM		01
32	0503010246	CLAMP		01
33	0571011730	SEED CONDUCTOR 3X1500		01
34	0521050525	FIXER FERTILIZER CONDUCTOR	157	01
35	0503010905	1/2" X 2-1/4" BOLT		01
36	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		01
37	0521018501	TURNBUCKLE LEVER		01
38	0511053067	"V" WHEEL ASSY COBRIDORA FERTILIZER	158	01

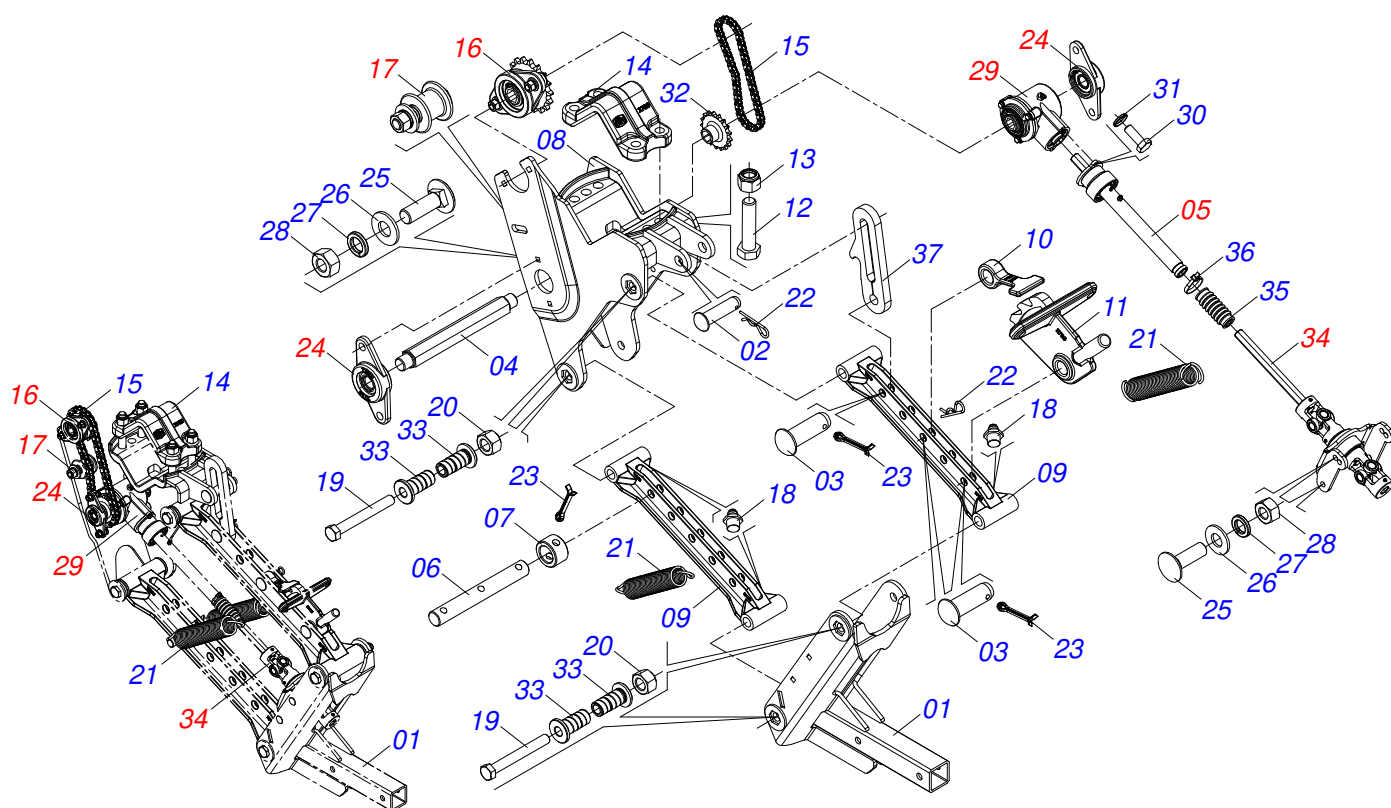


Item	Code	Description	See page	QT
01	0521063526	SEED LINE REAR FRAME		01
02	0571012443	COUPLING SHAFT		01
03	0571012442	COUPLING SHAFT		03
04	0571012441	TRANSMISSION AXLE		01
05	0511052393	BEARING FOLLOWER ROW ASSY	106	01
06	0571012449	CONTROL AXLE		01
07	0571012448	LOCK SLEEVE AXLE REGULATION		01
08	0521068100	SUPPORT FRONT LINE SHORT SEED		01
09	0502012784	DRIVER PIVOT		02
10	1902012814	BODY LOCK REGULATOR LEVER REGULATOR SEED		01
11	0502012785	SEED ROW ADJUSTMENT LEVER ASSY		01
12	0503017857	BOLT 5/8 UNF 4		04
13	0503010811	5/8" UNF SELF ADJUSTING NUT		04
14	0502012789	FIXER SUPPORT FERTILIZER ROW		01
15	0503016501	40-1 X 49 CHAIN LINK + MENDING		01
16	0511050609	BEARING WITH 17Z GEAR ASSY	107	01
17	0511055260	SEED ROW CHAIN TENSIONER	109	01
18	0503010002	1800 GREASE FITTING		04
19	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
20	0503012412	5/8 UNC SELF LOCKING NUT		04
21	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING		02
22	0503030168	HAIR PIN		02
23	0503010131	3/16" X 1-1/2" COTTERPIN		03
24	0511054635	BEARING AXLE BODY	110	02
25	0503011953	5/16" X 1" BOLT		08
26	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
27	0503010179	5/16" ZN SPRING WASHER		08
28	0503010337	5/16" NUT		08
29	0511057159	TRANSMISSION BOX SEED LINE	111	01
30	0503011378	M6X1X16 C S 8.8 ZN BOLT		02
31	0503015110	M06 SPRING WASHER		02

**FRONT LINE SHORT MECHANICAL SEED**

 0521051619

Item	Code	Description	See page	QT
32	0502012782	17Z GEAR WITH HEX HOLE		01
33	0581014435	SLEEVE ARM LINE SEED		08
34	0511057625	ROW SEED BEARING	112	01
35	0503032984	HOOD HEX AXLE ROW		01
36	0503013100	NYLON CLAMP		01
37	0581015124	LIMITER COURSE		01

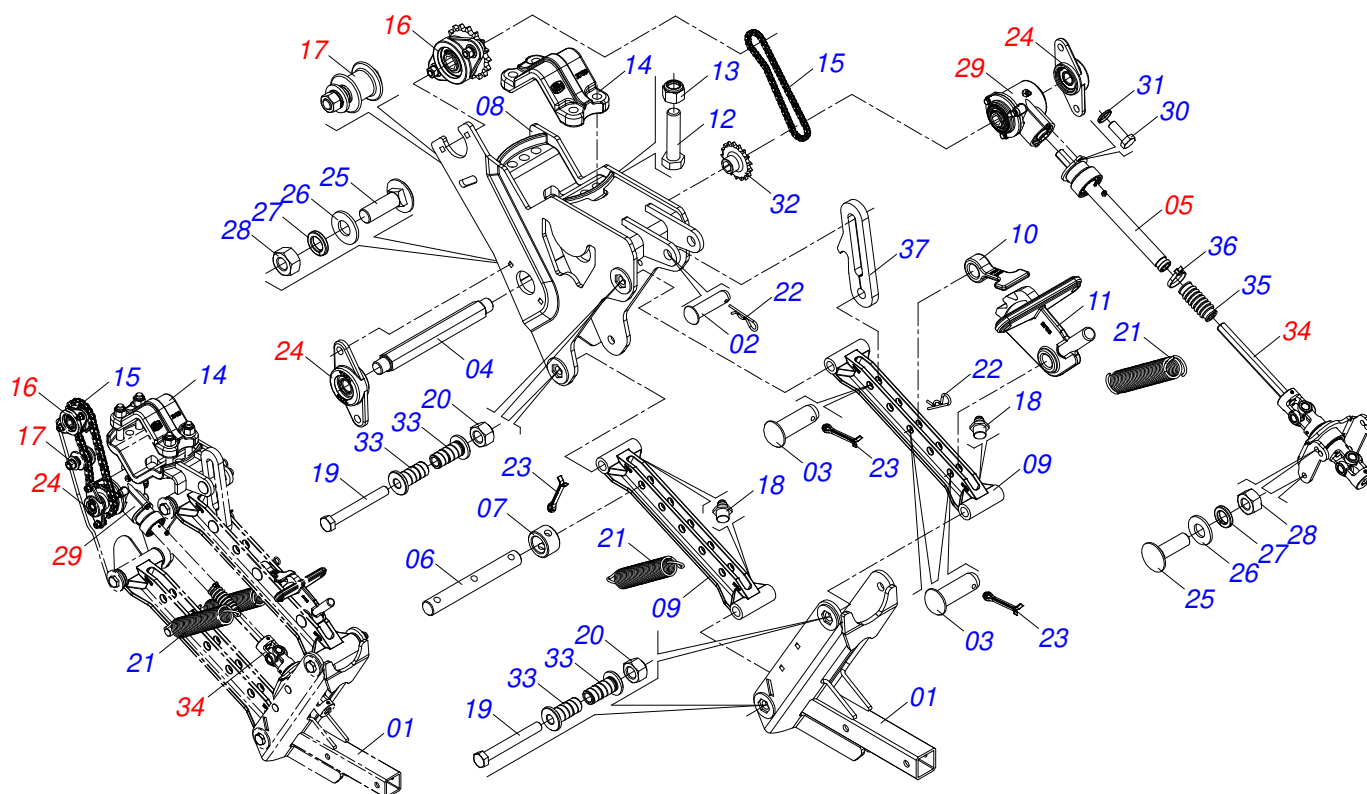


Item	Code	Description	See page	QT
01	0521063526	SEED LINE REAR FRAME		01
02	0571012443	COUPLING SHAFT		01
03	0571012442	COUPLING SHAFT		03
04	0571012441	TRANSMISSION AXLE		01
05	0511052393	BEARING FOLLOWER ROW ASSY	106	01
06	0571012449	CONTROL AXLE		01
07	0571012448	LOCK SLEEVE AXLE REGULATION		01
08	0521068102	LONG SEED LINE FRONT SUPPORT		01
09	0502012784	DRIVER PIVOT		02
10	1902012814	BODY LOCK REGULATOR LEVER REGULATOR SEED		01
11	0502012785	SEED ROW ADJUSTMENT LEVER ASSY		01
12	0503017857	BOLT 5/8 UNF 4		04
13	0503010811	5/8" UNF SELF ADJUSTING NUT		04
14	0502012789	FIXER SUPPORT FERTILIZER ROW		01
15	0503012142	40-1 CHAIN X 61 LINK + MENDING		01
16	0511050609	BEARING WITH 17Z GEAR ASSY	107	01
17	0511055260	SEED ROW CHAIN TENSIONER	109	01
18	0503010002	1800 GREASE FITTING		04
19	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
20	0503012412	5/8 UNC SELF LOCKING NUT		04
21	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING		02
22	0503030168	HAIR PIN		02
23	0503010131	3/16" X 1-1/2" COTTERPIN		03
24	0511054635	BEARING AXLE BODY	110	02
25	0503011953	5/16" X 1" BOLT		08
26	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
27	0503010179	5/16" ZN SPRING WASHER		08
28	0503010337	5/16" NUT		08
29	0511057159	TRANSMISSION BOX SEED LINE	111	01
30	0503011378	M6X1X16 C S 8.8 ZN BOLT		02
31	0503015110	M06 SPRING WASHER		02


**FRONT LINE MECHANICAL SEED LINE**

 0521051620

Item	Code	Description	See page	QT
32	0502012782	17Z GEAR WITH HEX HOLE		01
33	0581014435	SLEEVE ARM LINE SEED		08
34	0511057625	ROW SEED BEARING	112	01
35	0503032984	HOOD HEX AXLE ROW		01
36	0503013100	NYLON CLAMP		01
37	0581015124	LIMITER COURSE		01

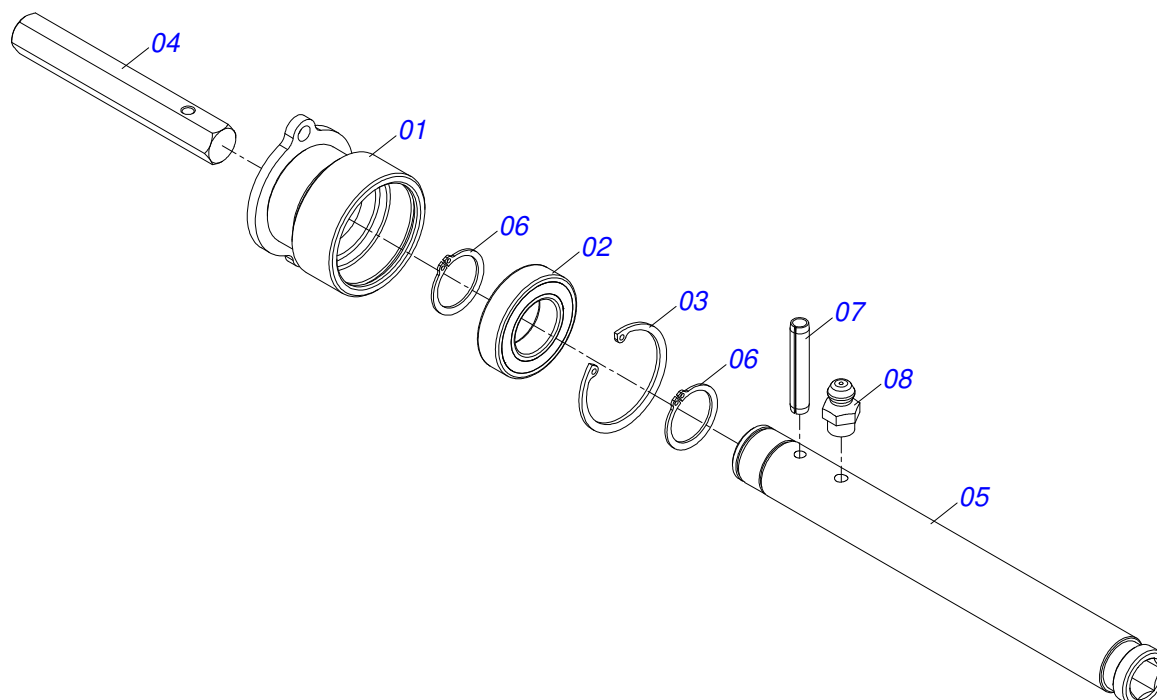


Item	Code	Description	See page	QT
01	0521063532	BEARING FOLLOWER ROW ASSY		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0571012450	COP FLEX AXLE		01
05	0571012459	COP FLEX AXLE		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		02
07	0503015356	SPRING PIN		01
08	0503010691	1/4" GREASE FITTING		01

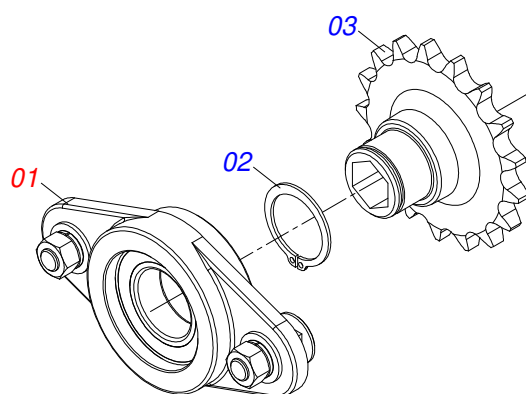 


Item	Code	Description	See page	QT
01	0511050617	FRONT SEED ROW BEARING	108	01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0502012819	17Z GEAR WITH HEX HOLE		01

FRONT SEED ROW BEARING

 
0511050617

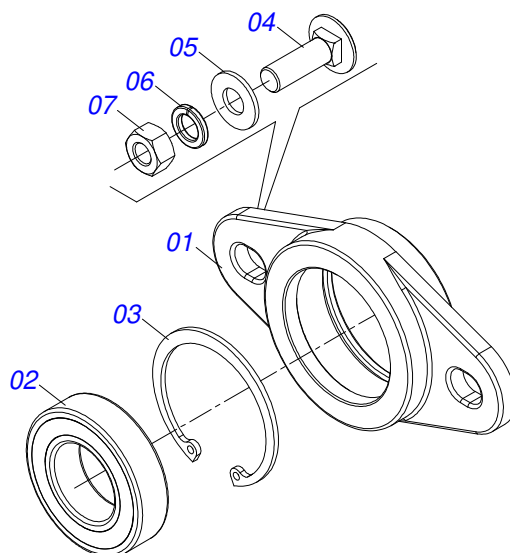


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02

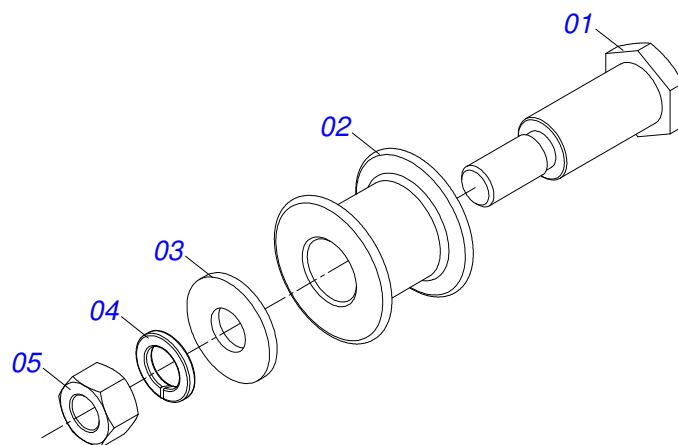 


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

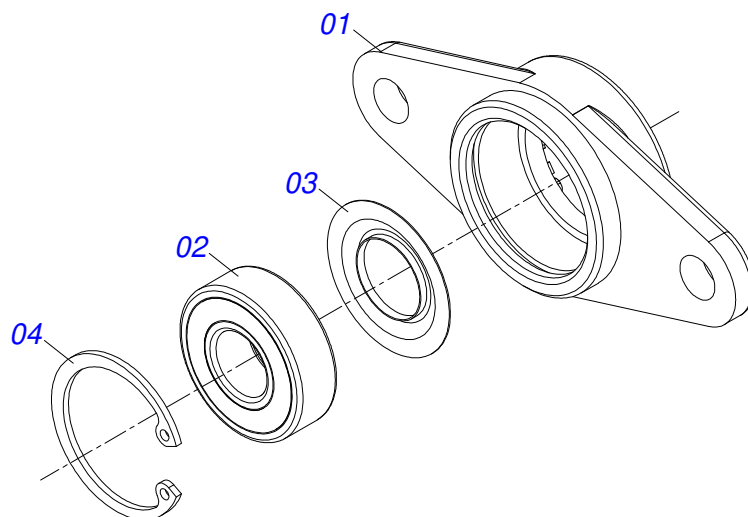 


Item	Code	Description	See page	QT
01	0502012718	BEARIN BODY		01
02	0503012882	BEARING		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

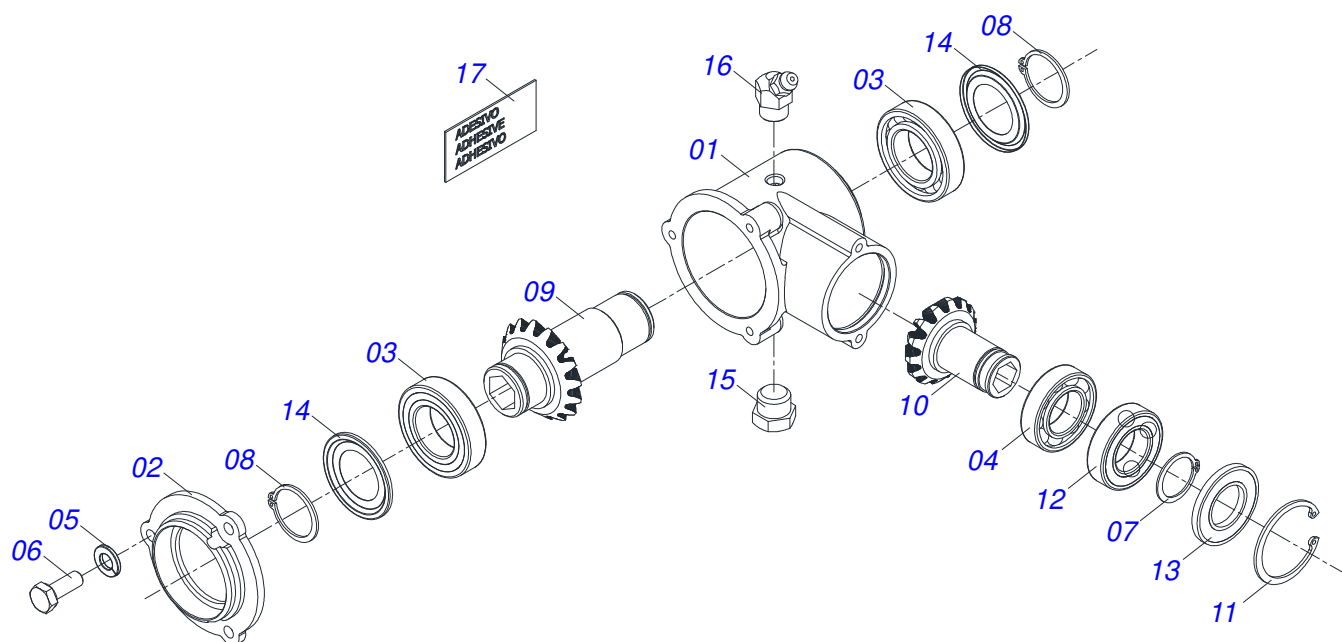 


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB	01	
02	0502012464	BOX TRANSMISSION COVER	01	
03	0503016995	6006 BALL BEARING	02	
04	0503015895	6005 Z BALL BEARING	01	
05	0503010143	1/4" SPRING WASHER	03	
06	0503011378	M6X1X16 C S 8.8 ZN BOLT	03	
07	0503010406	501025 CLAMPING RING (FOR AXLE)	01	
08	0503010707	501030 CLAMPING RING (FOR AXLE)	02	
09	0502040856	CONICAL GEAR	01	
10	0571018870	14Z CONICAL GEAR	01	
11	0503011105	SEAL RING	01	
12	0503011409	6005 Z BALL BEARING	01	
13	0503017008	SEAL RING	01	
14	0503017007	SEAL RING	02	
15	0511017907	1/8" BSPT X 6 PLUG	01	
16	0503010003	1845 GREASE FITTING	01	
17	0503035316	LUBRICATED POINTS ADHESIVE LABEL	01	

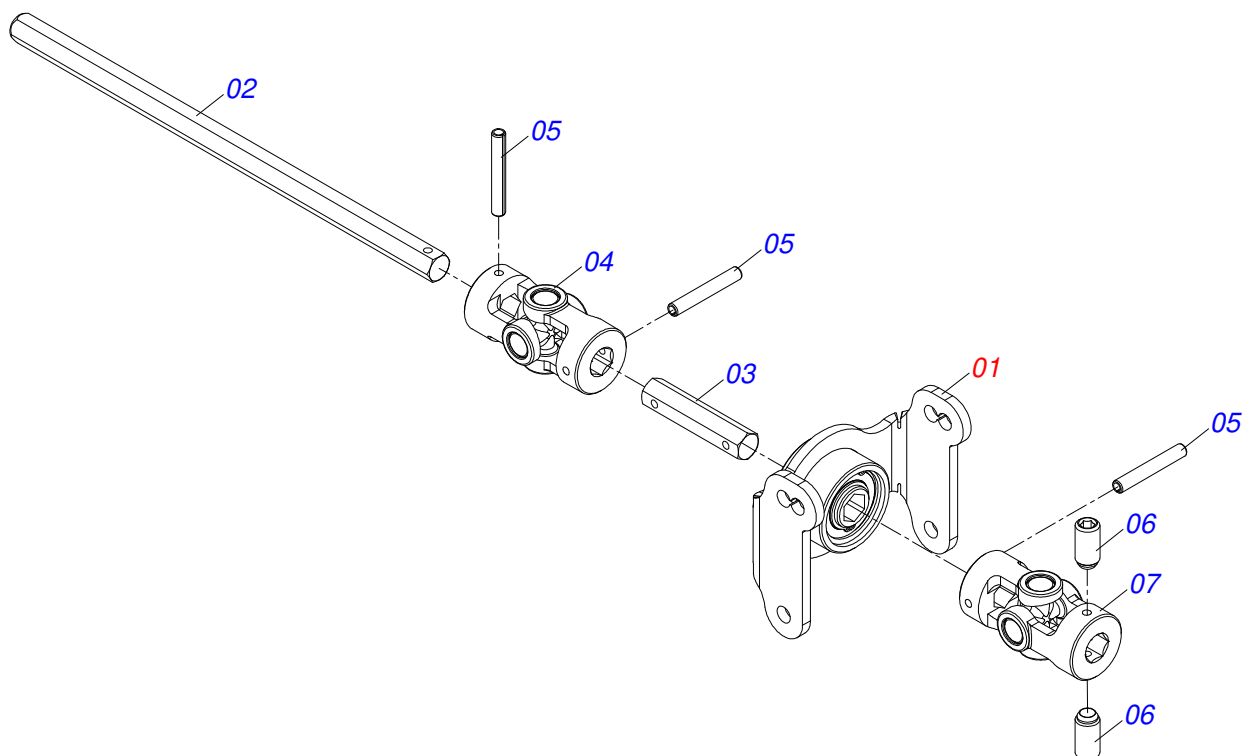 


Item	Code	Description	See page	QT
01	0511057156	BEARING LINE SEMI MOUNTED	113	01
02	0571018731	HEX AXLE		01
03	0571017900	5/8" X 77" HEX AXLE		01
04	0501056296	UNIVERSAL JOINT		01
05	0503011855	0.2" X 1.8" SPRING PIN		03
06	0503013958	1/4" X 1" BOLT		02
07	0561014778	HEX UNIVERSAL JOINT		01

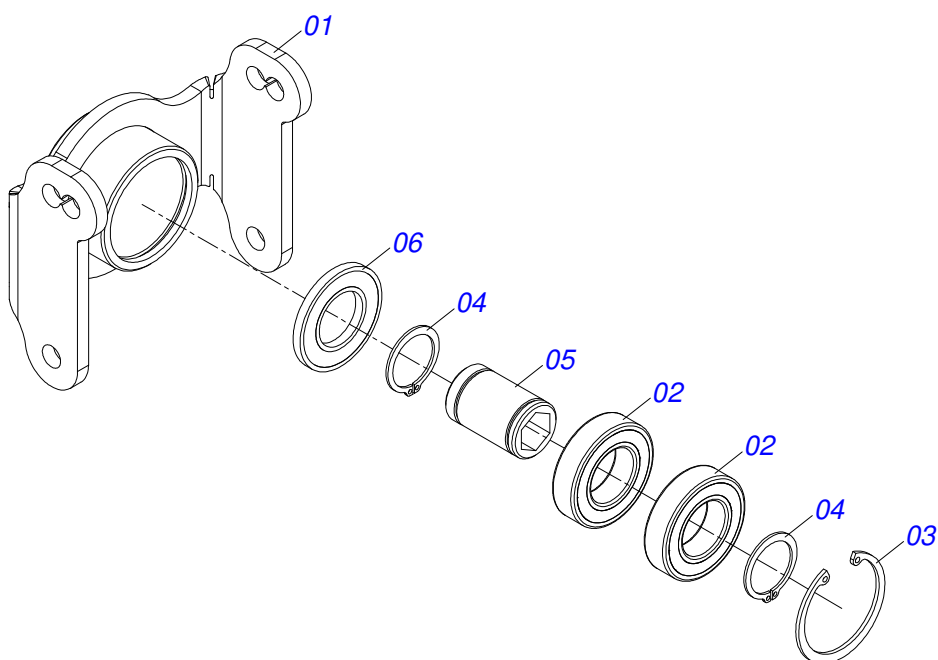 

Item	Code	Description	See page	QT
01	0521065913	ROW SEED BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		02
05	0571017815	BEARING AXLE BODY		01
06	0503017008	SEAL RING		01

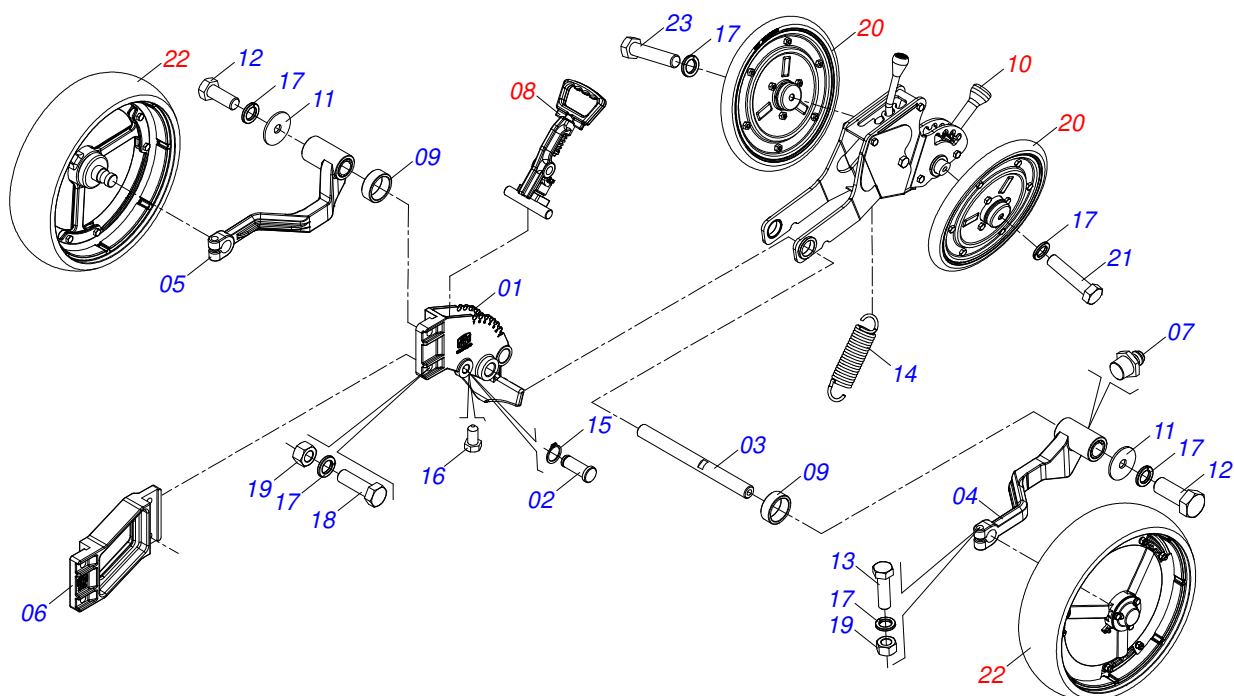 


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0581014858	DEPTH WHEEL AXLE		01
04	0501110720	ARM LEFT		01
05	0501110719	DEPTH CONTROL RIGHT ARM		01
06	0502012663	EXTENSION		01
07	0503010002	1800 GREASE FITTING		02
08	0501056769	DEPTH WHEELS REGULATOR ASSY	116	01
09	0503034793	ARTICULATION SLEEVE		02
10	0521051423	COMPACTOR SUPPORT	117	01
11	0571017749	FLAT WASHER		02
12	0503010311	1/2" X 1-1/4" BOLT		02
13	0503016453	1/2" X 2.1/2 BOLT		02
14	0503034817	SPRING		01
15	0503010581	RING		01
16	0503034377	SCREWEW 3/8 UNC X 3/4		01
17	0503010019	1/2" SPRING WASHER		08
18	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
19	0503010060	1/2" NUT		04
20	0501052908	COMPACTOR WHEEL WITH BEARING	118	02
21	0503013739	1/2" X 1" BOLT		01
22	0511050077	WHEEL STRIPED	119	02
23	0503010752	1/2" X 3.1/2" BOLT		01

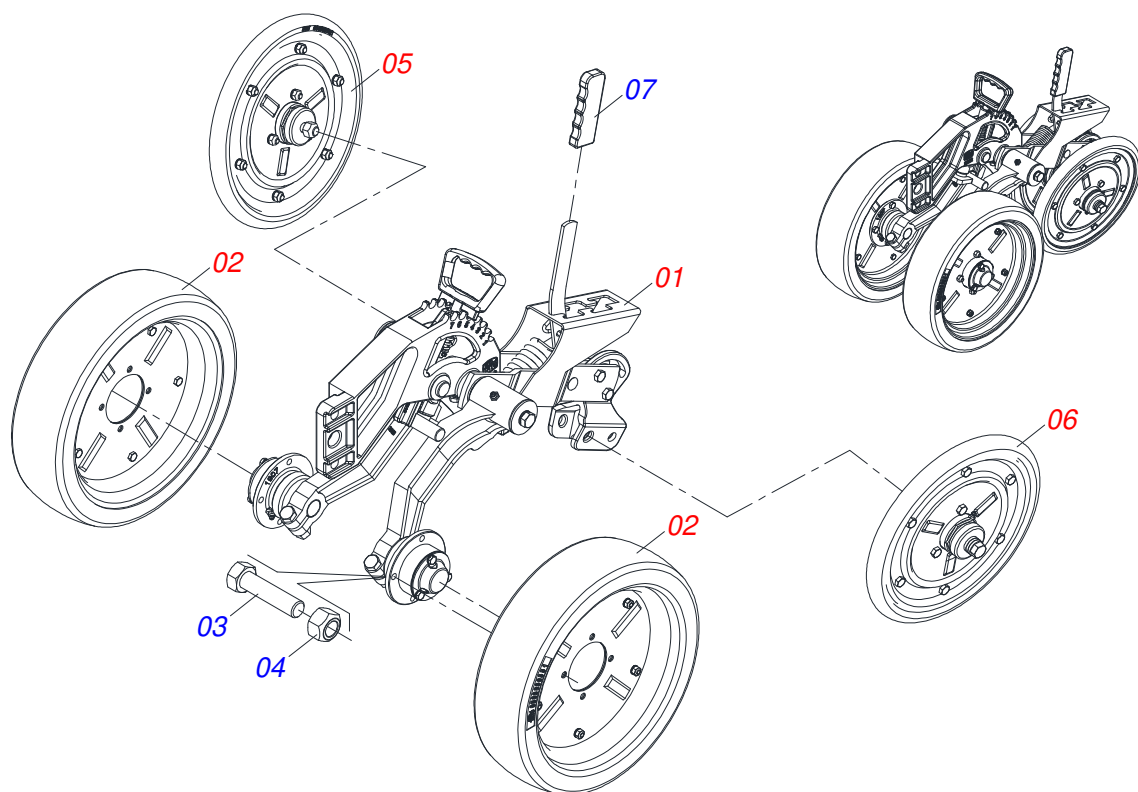 

Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	121	01
02	0501052538	DEPTH BAND WITH ARMS	145	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	159	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	160	01
07	0503033942	COVER REGULATORY WHEEL		01

DEPTH WHEELS REGULATOR ASSY

 
0501056769

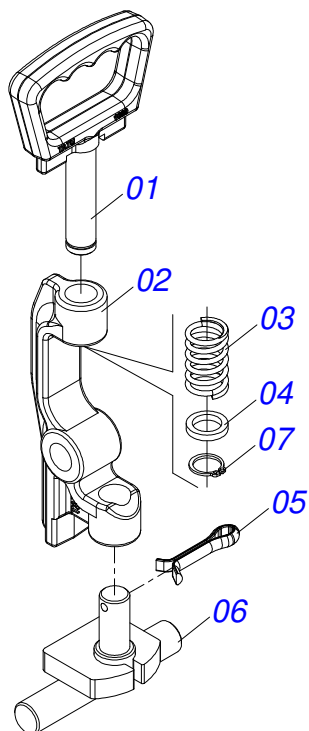


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	SEED SIST CONTROL DEPTH LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

COMPACTOR SUPPORT

 
0521051423

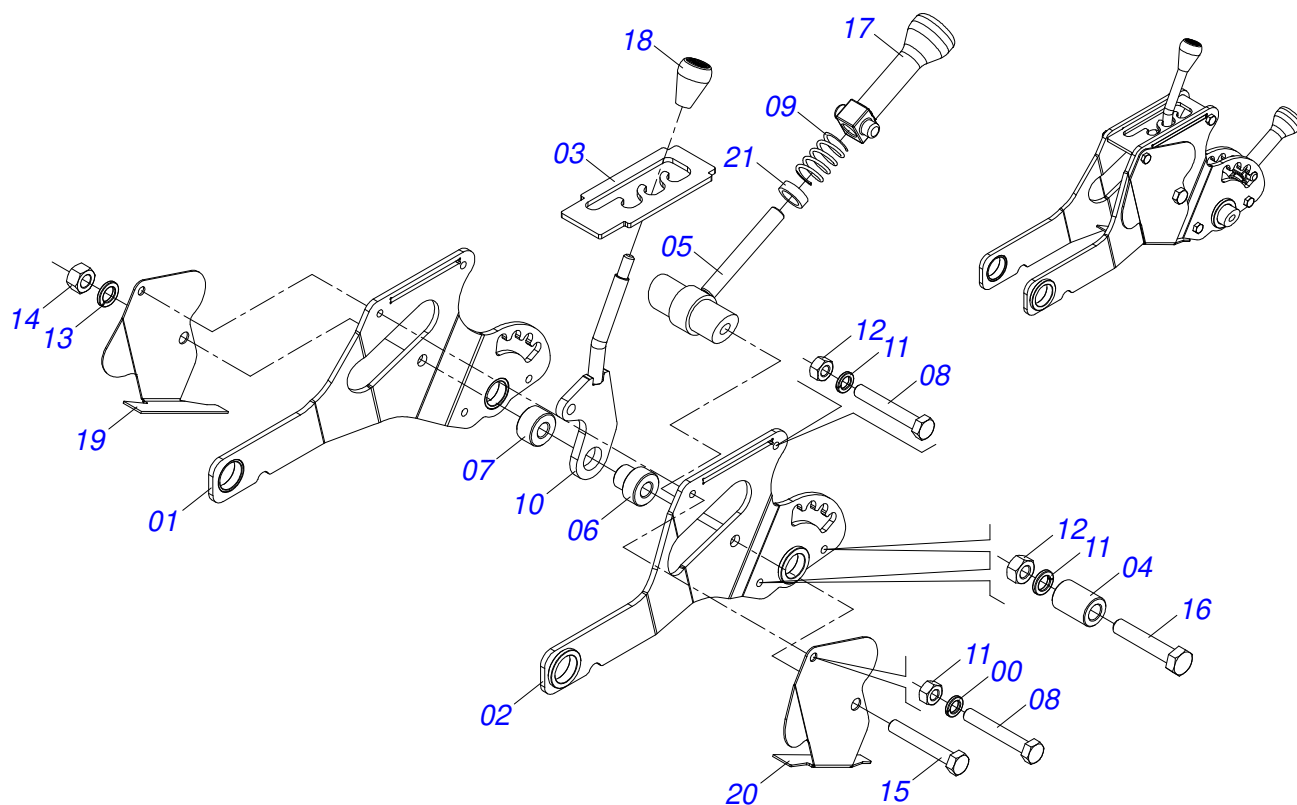

Item	Code	Description	See page	QT
01	0521068003	RIGHT SIDE		01
02	0521068002	LEFT SIDE		01
03	0581014847	PLATE UPPER		01
04	0581015855	SLEEVE		02
05	0521068004	HANDLE BODY		01
06	0581014969	SLEEVE GUIDE		01
07	0581014968	SLEEVE FLANGE		01
08	0503010937	5/16" X 3" BOLT		02
09	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
10	0521068005	LEVER		01
11	0503010179	5/16" ZN SPRING WASHER		04
12	0503010337	5/16" NUT		04
13	0503010019	1/2" SPRING WASHER		01
14	0503010060	1/2" NUT		01
15	0503010847	1/2" X 3.1/4" BOLT		01
16	0503010882	BOLT		02
17	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
18	0503030878	LEVER CRANK		01
19	0581015854	RIGHT PROTECTION COVER		01
20	0581015853	LEFT PROTECTION COVER		01
21	0581015903	SPACER WASHER		01

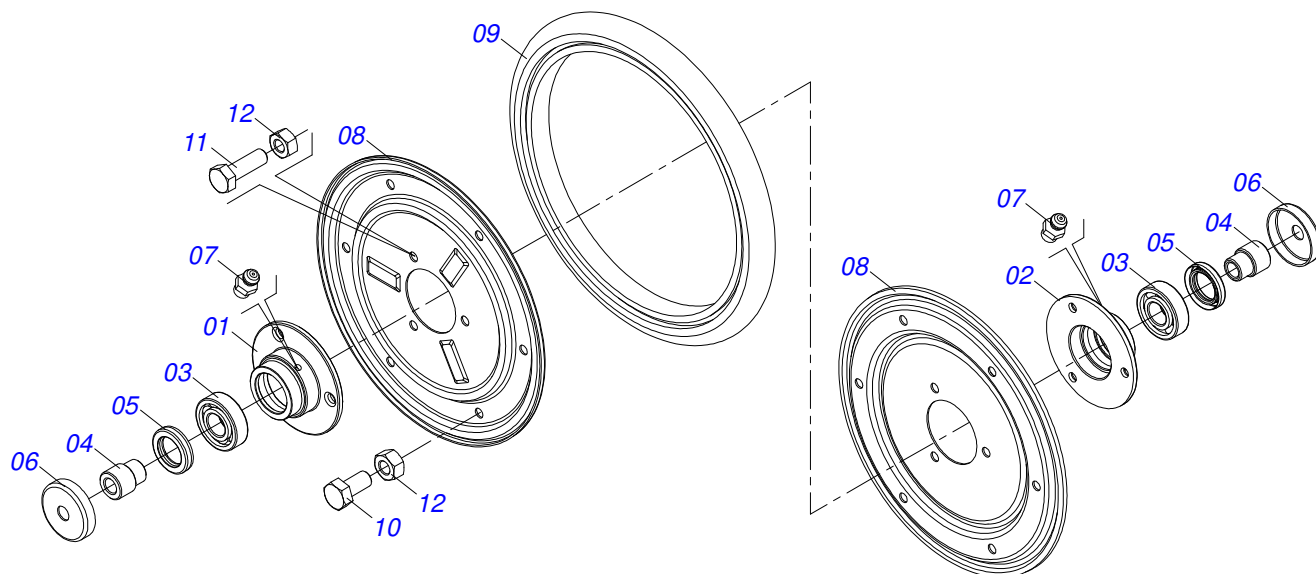 


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

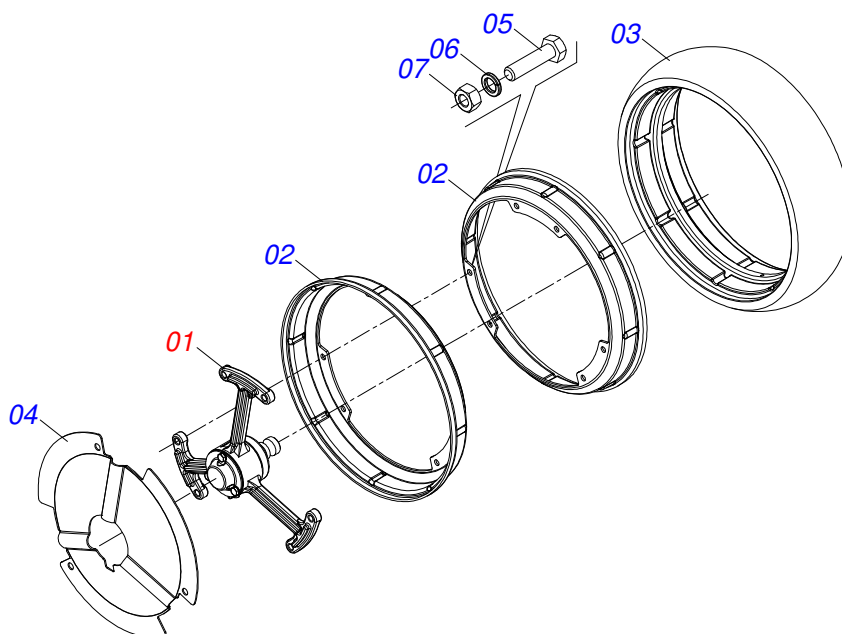 


Item	Code	Description	See page	QT
01	0511052287	DEPTH WHEEL HUB ASSY	120	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	NUT		06
06	0503010179	5/16" ZN SPRING WASHER		06
07	0503010337	5/16" NUT		06

DEPTH WHEEL HUB ASSY

 0511052287

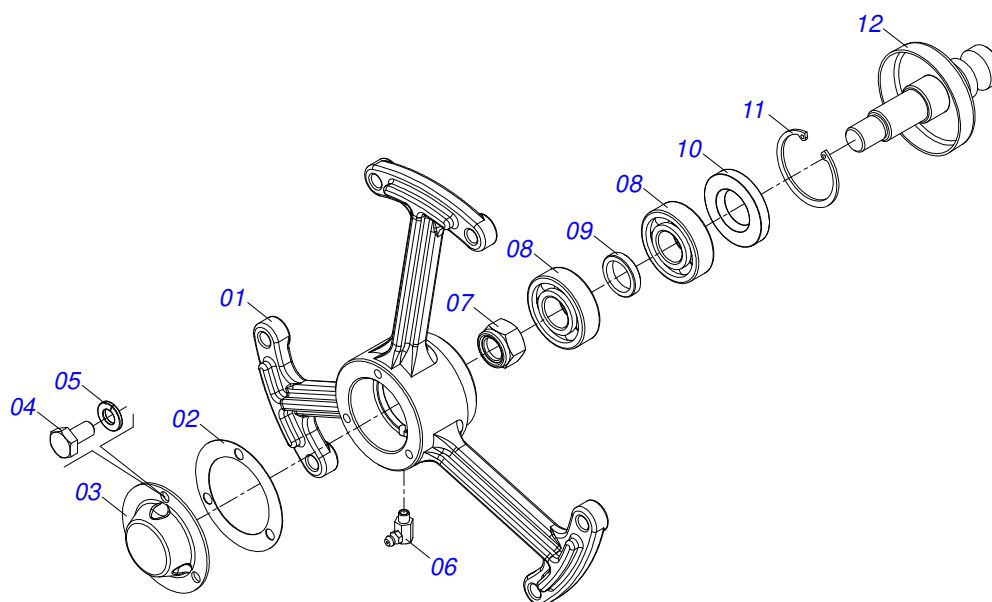


Item	Code	Description	See page	QT
01	0502011918	DEPHT WHEELS BOX		01
02	0503030757	2.9" X 2" X 0.02" JOINT		01
03	0521019178	COVER DEPTH		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503011098	1/4" GREASE FITTING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503010269	6204 BALL BEARING		02
09	0501013636	SPACING SLEEVE		01
10	0503010689	SEAL 00763-BR		01
11	0503011105	SEAL RING		01
12	0521063443	DEPTH CONTROL AXLE		01

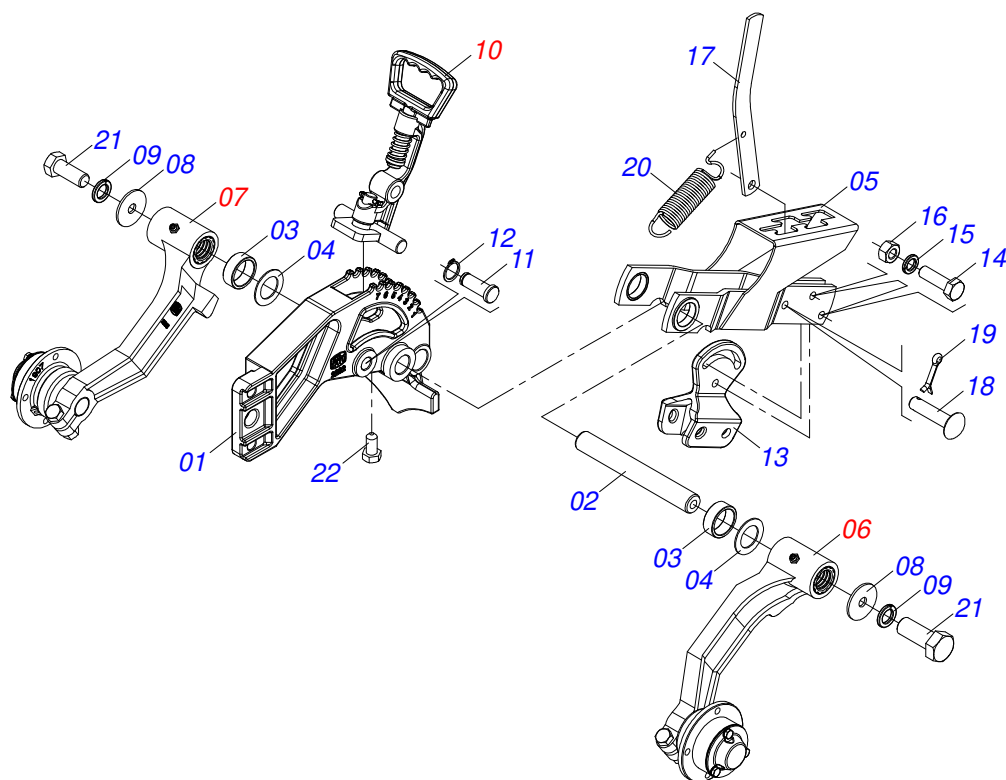 


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	122	01
07	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	124	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	125	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	SCREWEW 3/8 UNC X 3/4		01

LEFT ARM WHEEL DEPTH WITH CUBE

 
0511058652

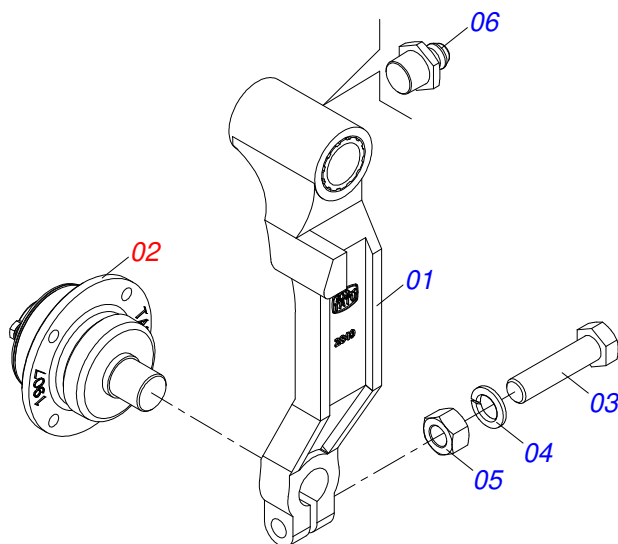


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL BOX	123	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01

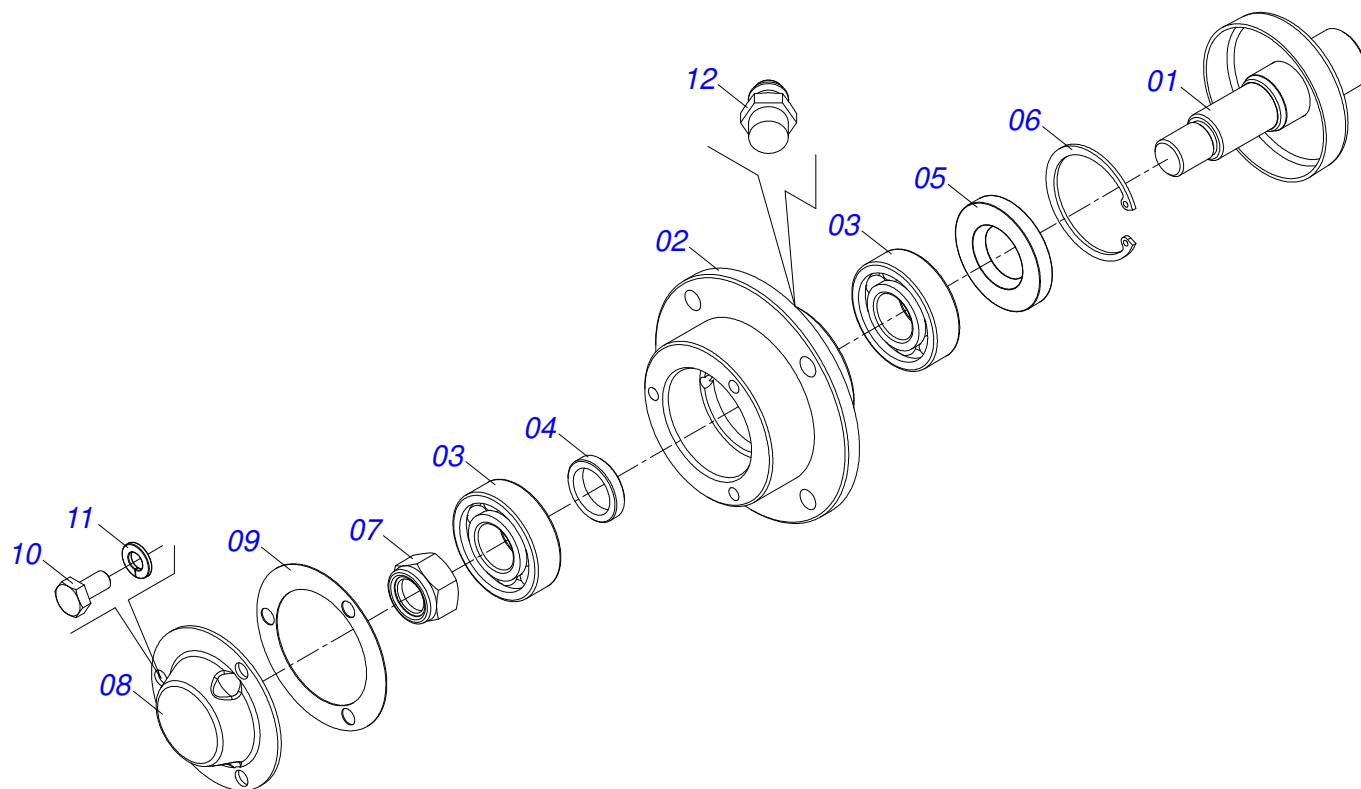 


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	COVER DEPTH		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

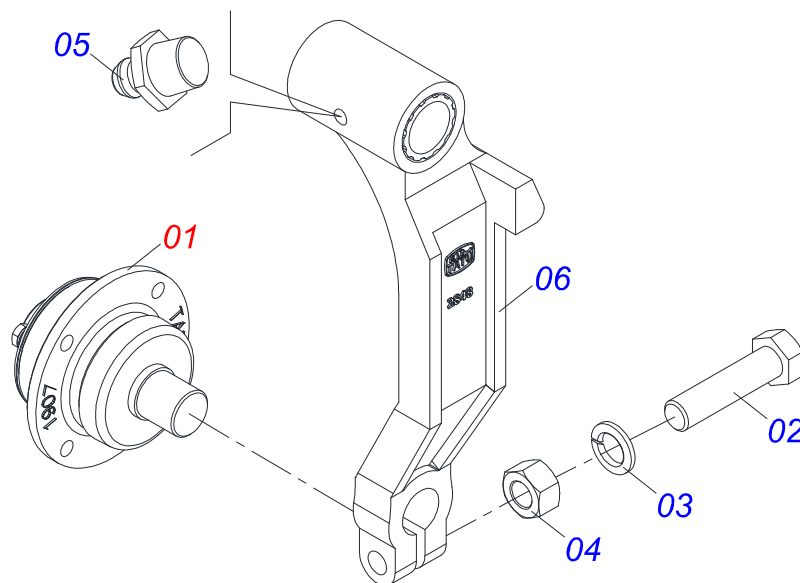 


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL BOX	123	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

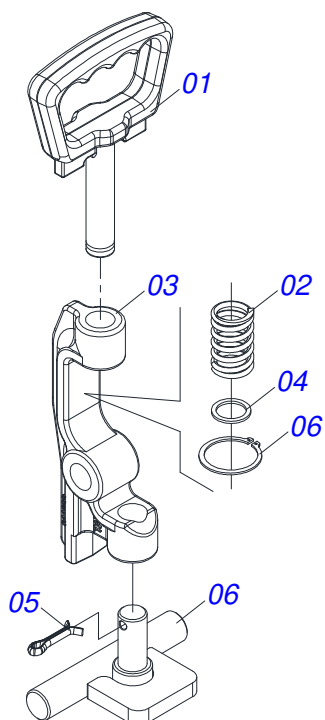 


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	SEED SIST CONTROL DEPTH LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

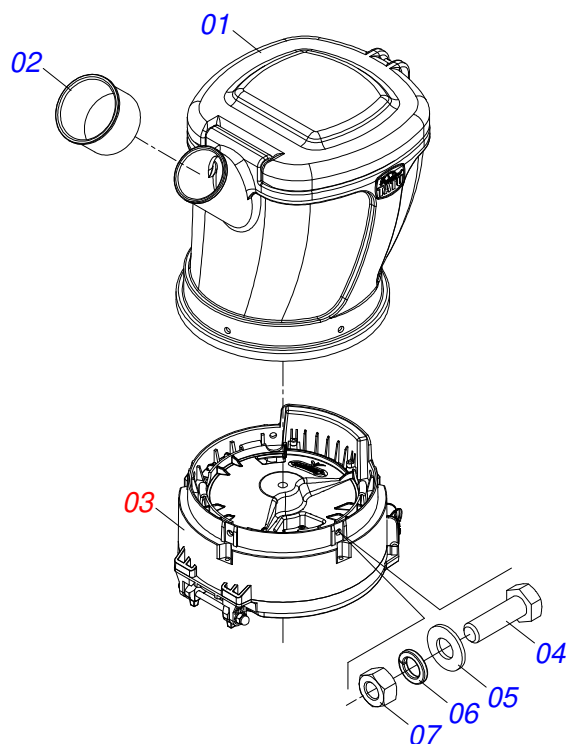 

Item	Code	Description	See page	QT
01	0521050118	DEPOSIT SEED BOCAL		01
02	0581014295	FIXING GLOVE		01
03	0511052058	SEED SYSTEM TITANIUM	127	01
04	0503010358	5/16" X 5/8" BOLT		05
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		05
06	0503010179	5/16" ZN SPRING WASHER		05
07	0503010337	5/16" NUT		05

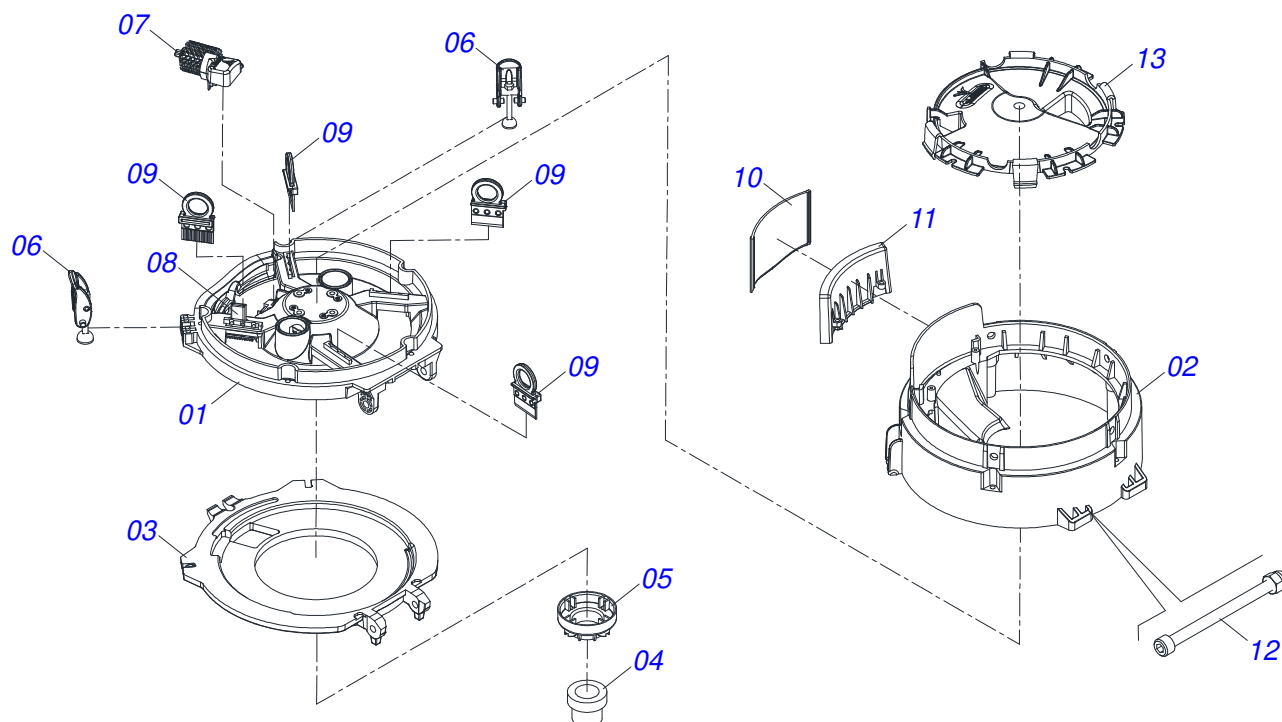 

Item	Code	Description	See page	QT
01	0503062031	BASE SET		01
02	0503062032	NECK TITANIUM ASSY		01
03	0503062033	OPPOSITE BASE SET		01
04	0503062034	CENTRAL ADAPTER SET		01
05	0503062035	SET FALSE ADAPT CENTER		01
06	0503062036	SUBSET ASSY LOCK BASE		01
07	0503062037	SUBSET ESCOVAFLEX ASSY		01
08	0503062038	ASSY ANTI-LEAP		01
09	0503062039	POLIFLOW TITANIUM ASSY		01
10	0503062040	DISPLAY ASSY TITANIUM 1050010		01
11	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
12	0503062042	SET BOLT ARTICULADOR		01
13	0503062043	ASSY LIMIT WEIGHT		01

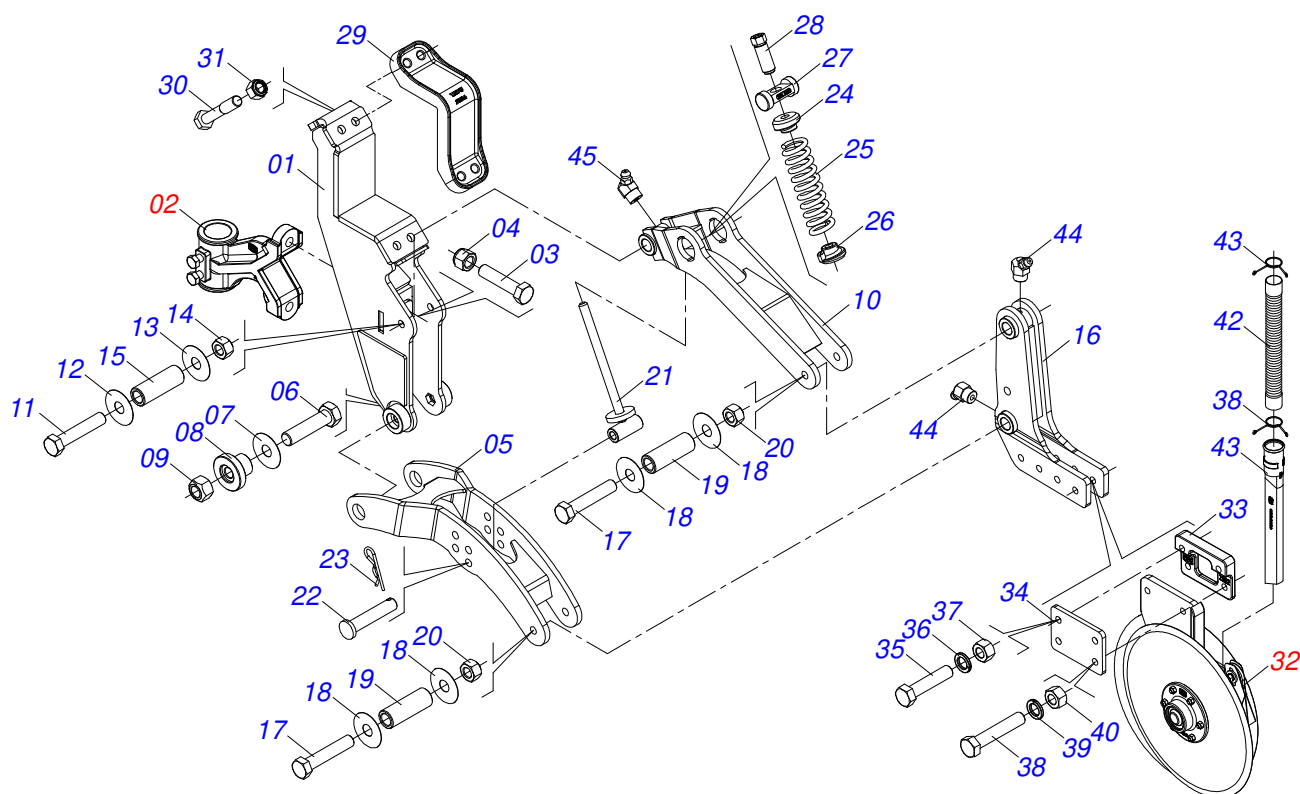 


Item	Code	Description	See page	QT
01	0521063759	ROW FERTILIZER SUPPORT		01
02	0511053223	FERTILIZER ROW SUPPORT WITH SCREW	130	01
03	0503017855	3/4" BOLT		02
04	0503010152	3/4" SELF LOCKING NUT		02
05	0521063504	FERTILIZER ROW LOWER SUPPORT		01
06	0503010233	5/8" X 2-1/2" BOLT		02
07	0511015098	FLAT WASHER		06
08	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
09	0503012412	5/8 UNC SELF LOCKING NUT		02
10	0511063862	FERTILIZER ROW UPPER SUPPORT		01
11	0501010163	5/8" X 4-1/2" BOLT		01
12	0531015184	FLAT WASHER		01
13	0531016031	1/2" SPRING WASHER		01
14	0503012412	5/8 UNC SELF LOCKING NUT		01
15	0531016207	0.6" X 1" X 2.8" SLEEVE		01
16	0521061855	FERTILIZER ROW REAR SUPPORT		01
17	0501010452	5/8" X 5" BOLT		02
18	0531016031	1/2" SPRING WASHER		04
19	0531016207	0.6" X 1" X 2.8" SLEEVE		02
20	0503012412	5/8 UNC SELF LOCKING NUT		02
21	0521062073	SPRING GUIDE		01
22	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
23	0503030168	HAIR PIN		01
24	1902020393	SPRING UPPER SUPPORT		01
25	0503031450	2.7" X 9.2" X 0.03" SPRING		01
26	1902020393	SPRING UPPER SUPPORT		01
27	0521011158	SPRING LOCKNUT		01
28	0521018575	REGULATOR SPINDLE 100		01
29	0502012724	FERTILIZER ROW FIXER		01
30	0503017960	5/8" X 3-12" BOLT		04
31	0503010811	5/8" UNF SELF ADJUSTING NUT		04

LONG FERTILIZER LINE

0511053023

Item	Code	Description	See page	QT
32	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	131	01
33	0502012352	DOUBLE-DISC SPACING PLATE		01
34	0541013035	5.55" X 4.0" X 0.38" PLATE		01
35	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
36	0503010019	1/2" SPRING WASHER		02
37	0503010060	1/2" NUT		02
38	0503010752	1/2" X 3.1/2" BOLT		02
39	0503010019	1/2" SPRING WASHER		02
40	0503010060	1/2" NUT		02
41	0503030520	SEED SOCKET		01
42	0503031145	2" X 2" X 20" HOSE		01
43	0503031076	2" HOSE CLAMP		02
44	0503010003	1845 GREASE FITTING		02
45	0503010004	1890 GREASE FITTING		01

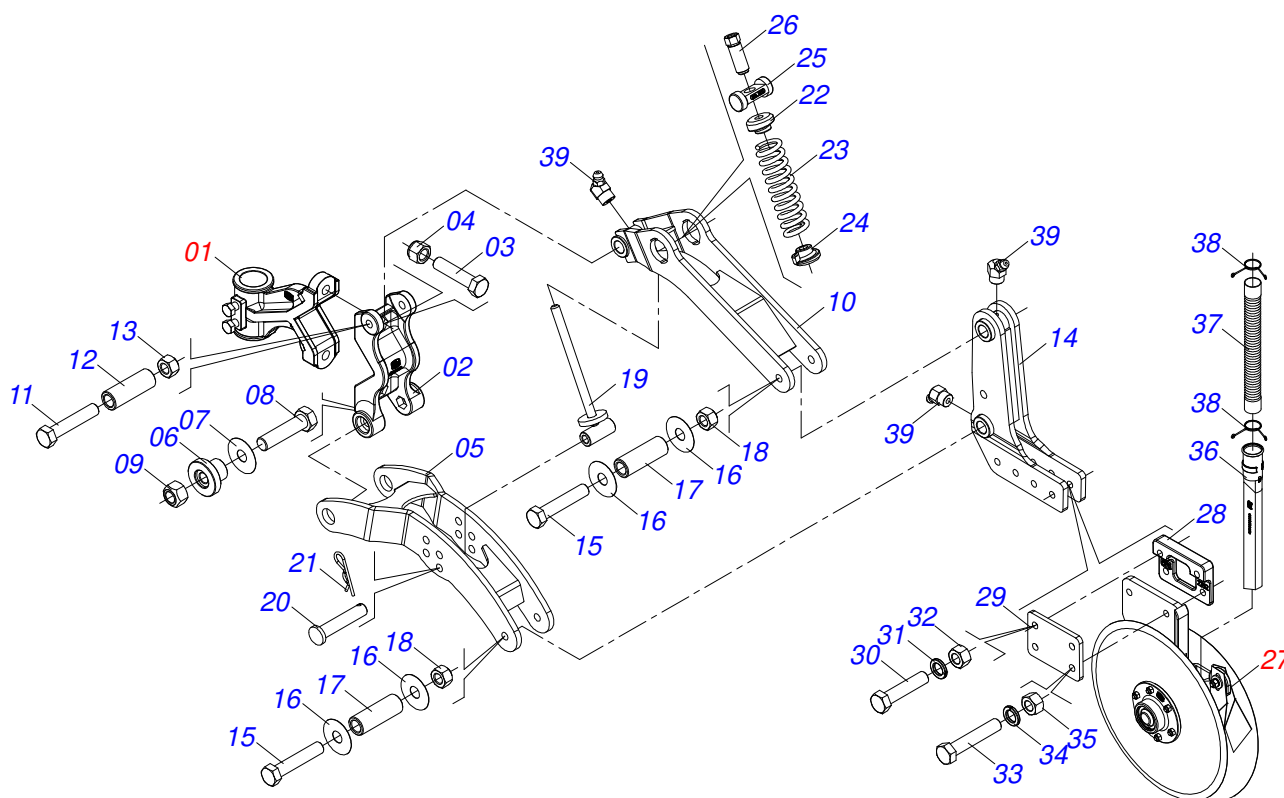 


Item	Code	Description	See page	QT
01	0511053223	FERTILIZER ROW SUPPORT WITH SCREW	130	01
02	0502012728	ROW FERTILIZER SUPPORT		01
03	0503017856	BOLT 3/4		02
04	0503010152	3/4" SELF LOCKING NUT		02
05	0521063504	FERTILIZER ROW LOWER SUPPORT		01
06	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
07	0511015098	FLAT WASHER		06
08	0503010233	5/8" X 2-1/2" BOLT		02
09	0503012412	5/8 UNC SELF LOCKING NUT		02
10	0511063862	FERTILIZER ROW UPPER SUPPORT		01
11	0501010452	5/8" X 5" BOLT		01
12	0531016207	0.6" X 1" X 2.8" SLEEVE		01
13	0503012412	5/8 UNC SELF LOCKING NUT		01
14	0521061855	FERTILIZER ROW REAR SUPPORT		01
15	0501010452	5/8" X 5" BOLT		02
16	0531016031	1/2" SPRING WASHER		04
17	0531016207	0.6" X 1" X 2.8" SLEEVE		02
18	0503012412	5/8 UNC SELF LOCKING NUT		02
19	0521062073	SPRING GUIDE		01
20	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
21	0503030168	HAIR PIN		01
22	1902020393	SPRING UPPER SUPPORT		01
23	0503031450	2.7" X 9.2" X 0.03" SPRING		01
24	1902020393	SPRING UPPER SUPPORT		01
25	0521011158	SPRING LOCKNUT		01
26	0521018575	REGULATOR SPINDLE 100		01
27	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	132	01
28	0502012352	DOUBLE-DISC SPACING PLATE		01
29	0541013035	5.55" X 4.0" X 0.38" PLATE		01
30	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
31	0503010019	1/2" SPRING WASHER		02


**FERTILIZER SHORT LINE**

 0511053024


Item	Code	Description	See page	QT
32	0503010060	1/2" NUT		02
33	0503010752	1/2" X 3.1/2" BOLT		02
34	0503010019	1/2" SPRING WASHER		02
35	0503010060	1/2" NUT		02
36	0503030520	SEED SOCKET		01
37	0503031145	2" X 2" X 20" HOSE		01
38	0503031076	2" HOSE CLAMP		02
39	0503010003	1845 GREASE FITTING		03

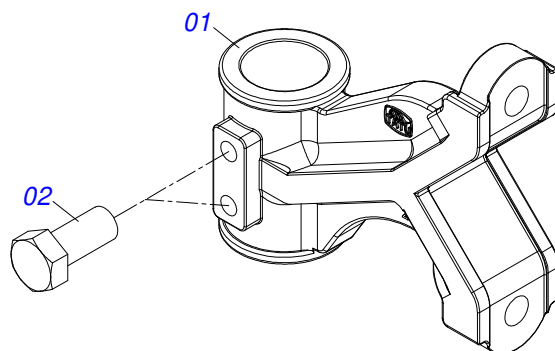


Item	Code	Description	See page	QT
01	0502012727	BLADE DISC SUPPORT		01
02	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02

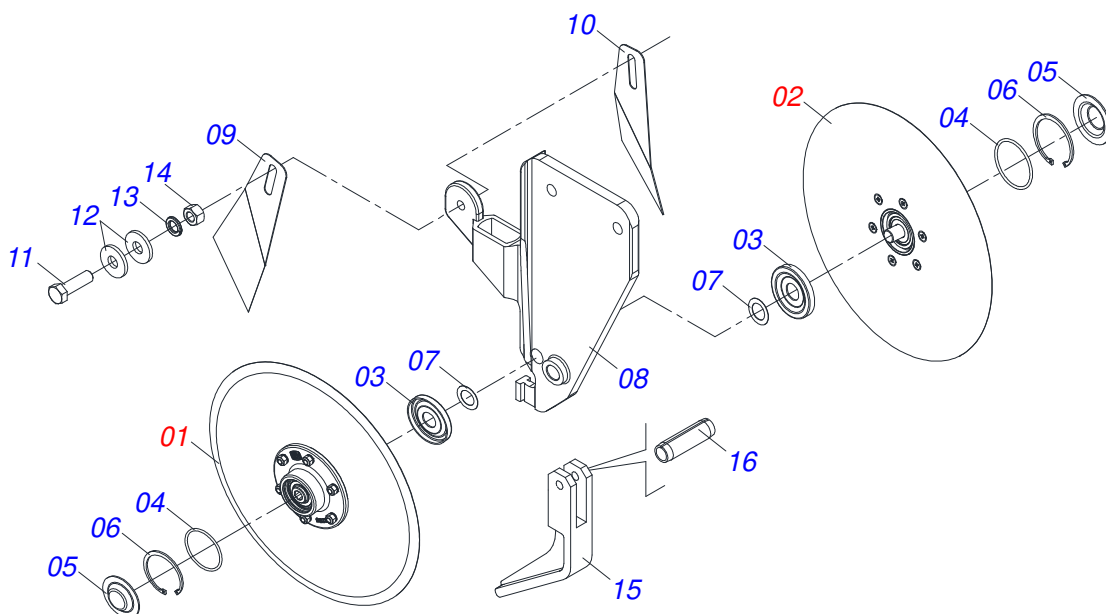 


Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15	134	01
02	0511053172	LEFT LOW CUBE WITH DISC 15	133	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010025	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

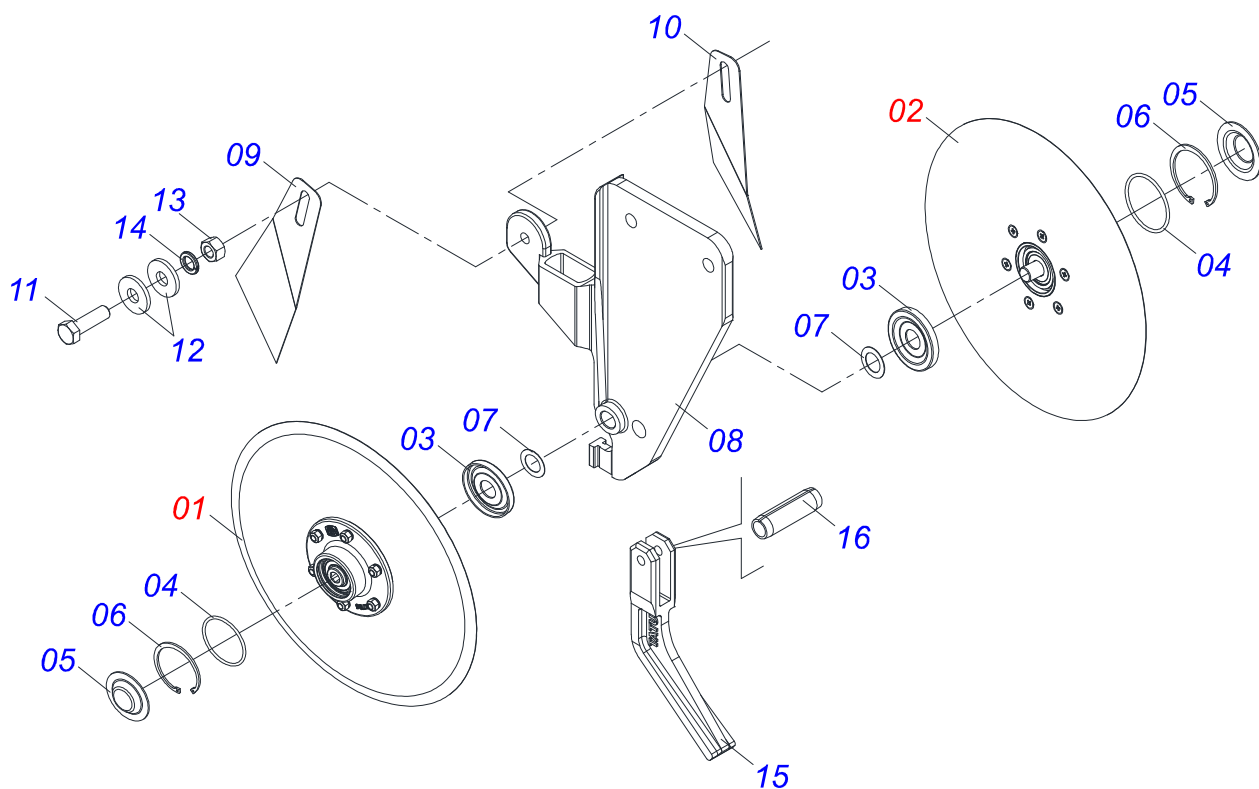 


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	133	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	134	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503011443	3/8" SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

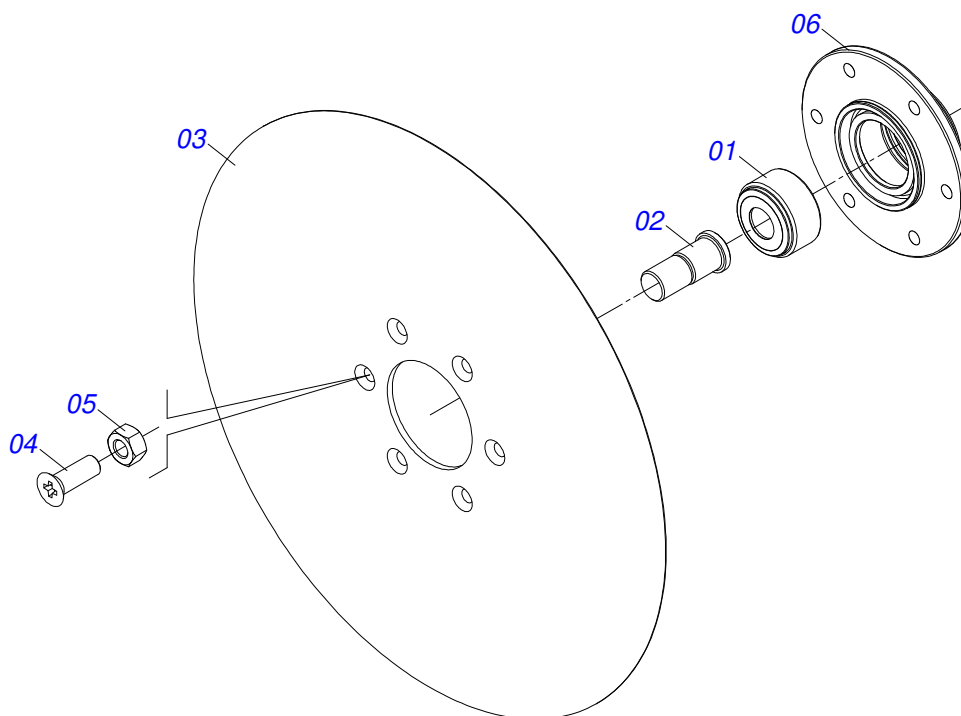 


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

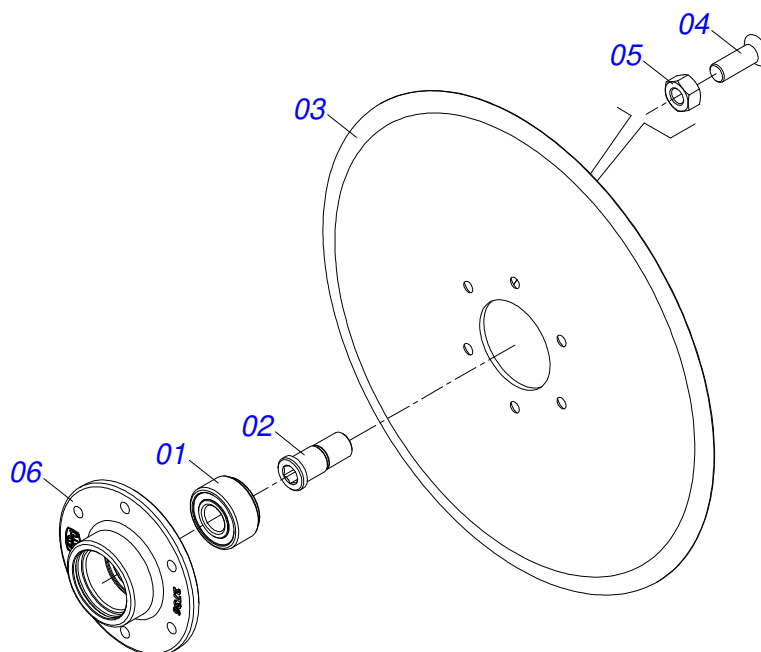 


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

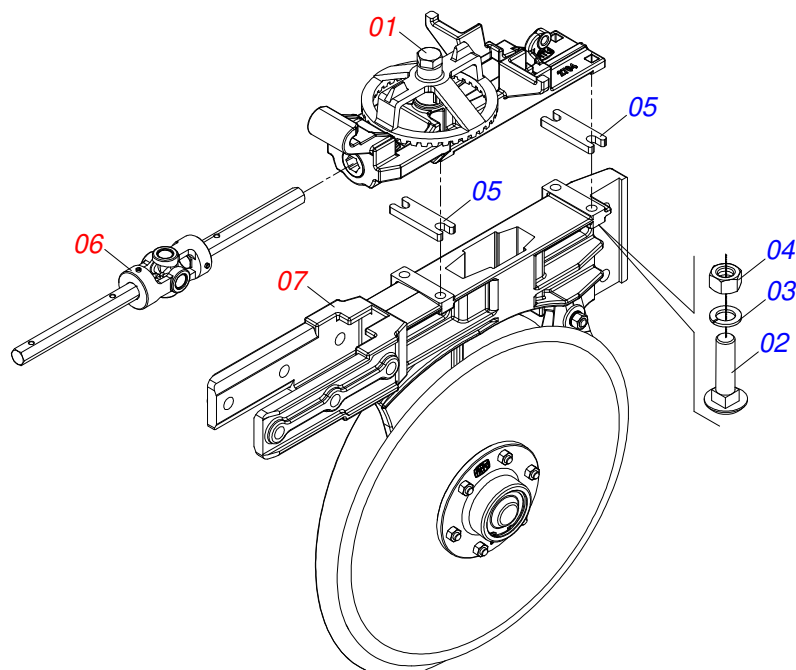 


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8	137	01
02	0503017813	3/8" X 2" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0571012451	CHOCK		02
06	0511053284	UNIVERSAL JOINT WITH HEX AXLE	138	01
07	0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	139	01

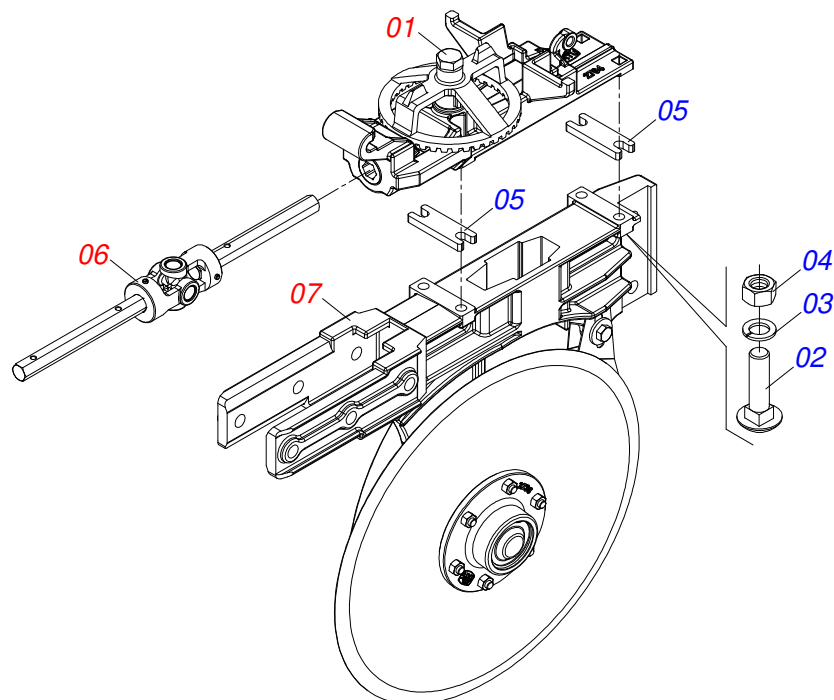 


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8	137	01
02	0503017813	3/8" X 2" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0571012451	CHOCK		02
06	0511053284	UNIVERSAL JOINT WITH HEX AXLE	138	01
07	0511056586	15 X 15 SEED DDD LEFT	140	01

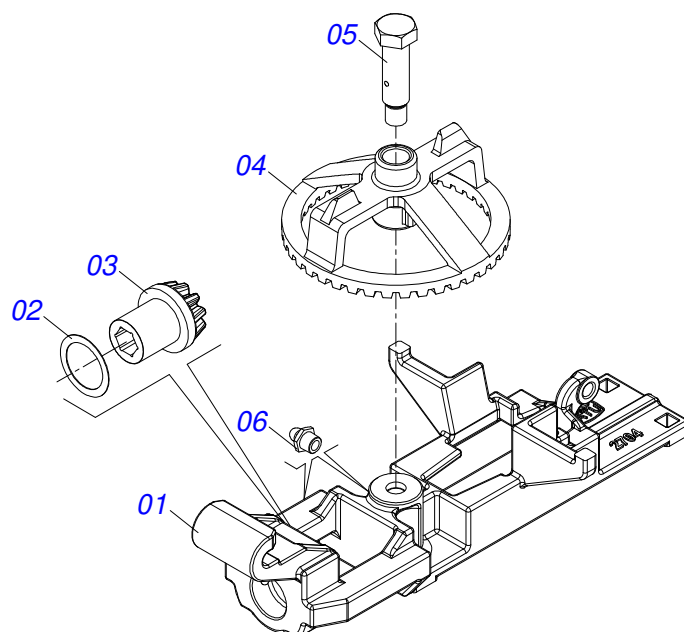 


Item	Code	Description	See page	QT
01	0502012704	BASE FIXING SYSTEM		01
02	0501013354	FLAT WASHER		01
03	0502012639	12Z LOWER CONICAL GEAR		01
04	0502011418	40Z CONICAL GEAR		01
05	0511018700	AXLE		01
06	0503010002	1800 GREASE FITTING		02

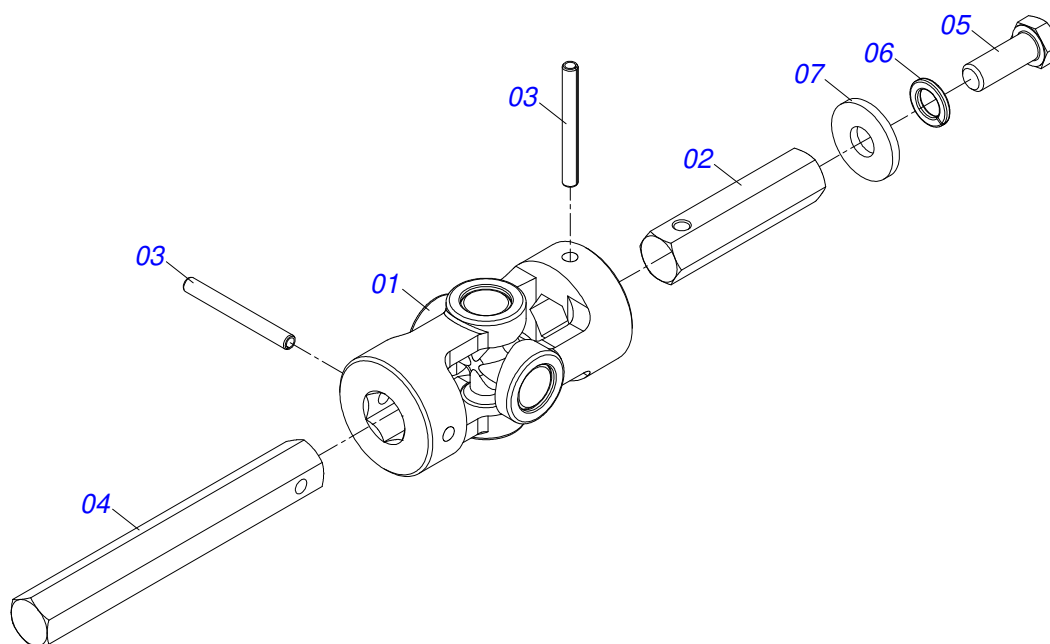 


Item	Code	Description	See page	QT
01	0501056296	UNIVERSAL JOINT		01
02	0551017540	5/8" X 73 AXLE HEX		01
03	0503011855	0.2" X 1.8" SPRING PIN		02
04	0571012447	TRANSMISSION AXLE		01
05	0503010237	3/8" X 1" BOLT		01
06	0501010984	FLAT WASHER		01
07	0503010025	3/8" SPRING WASHER		01

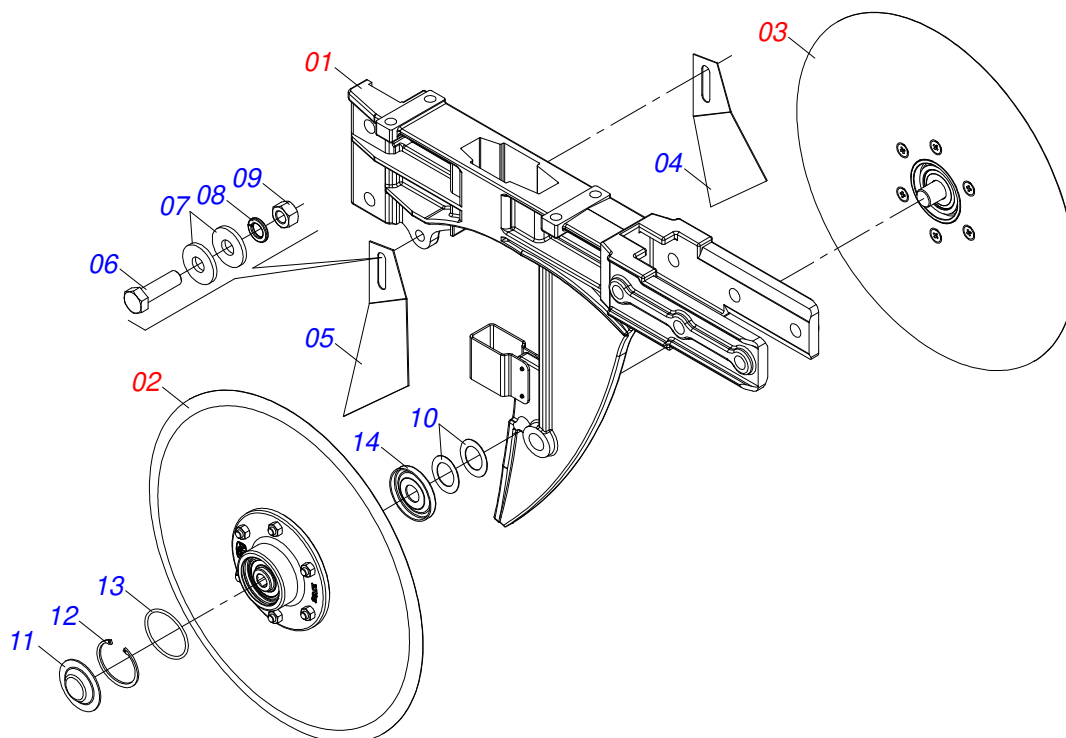 


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT	142	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	134	01
03	0511053172	LEFT LOW CUBE WITH DISC 15	133	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511015098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O-RING		02
14	0511011927	DUST CLOAK		02

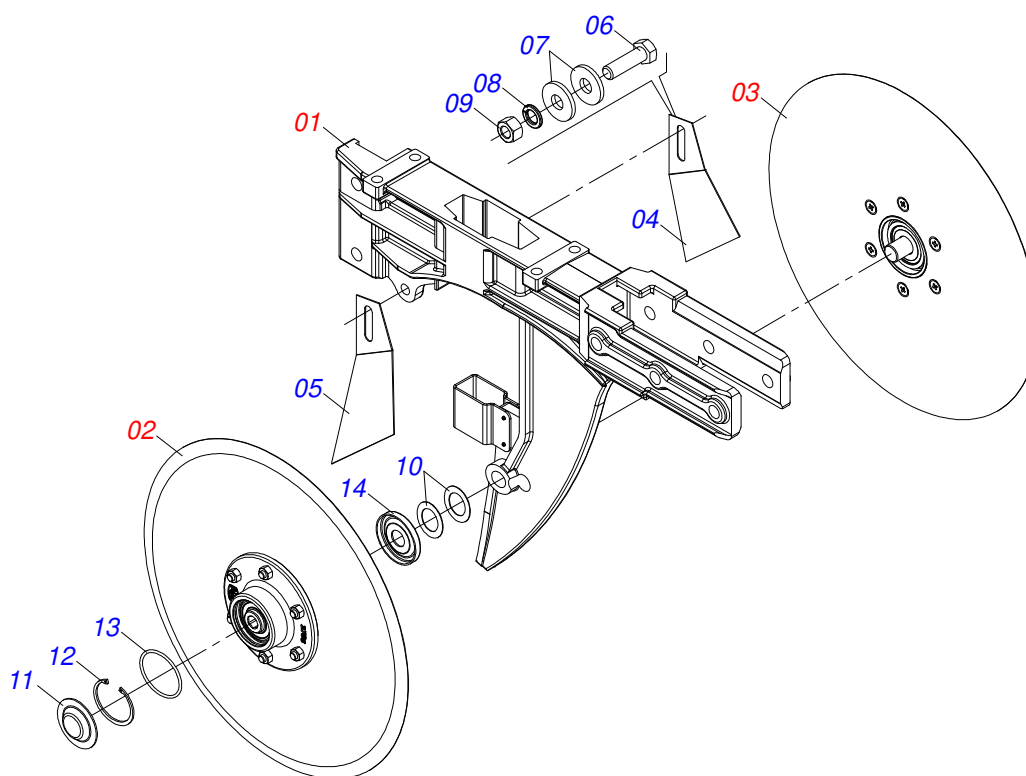 


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE	141	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	134	01
03	0511053172	LEFT LOW CUBE WITH DISC 15	133	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503011443	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511015098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O'RING		02
14	0511011927	DUST CLOAK		02

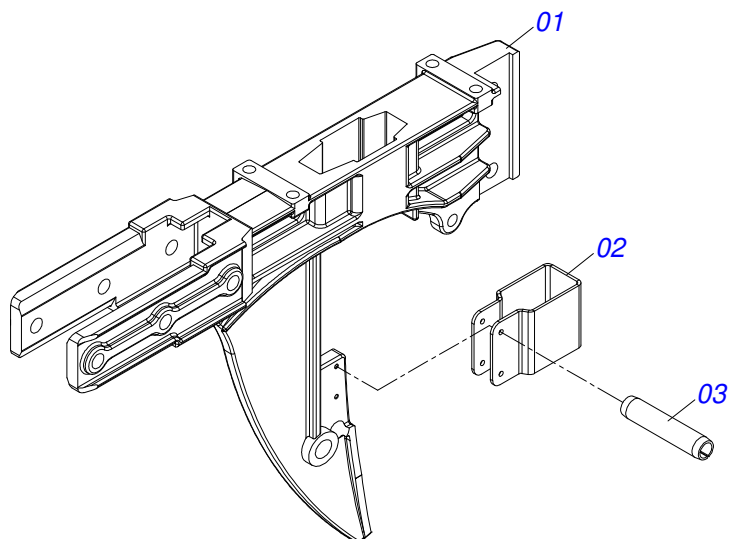 


Item	Code	Description	See page	QT
01	0561015592	LEFT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

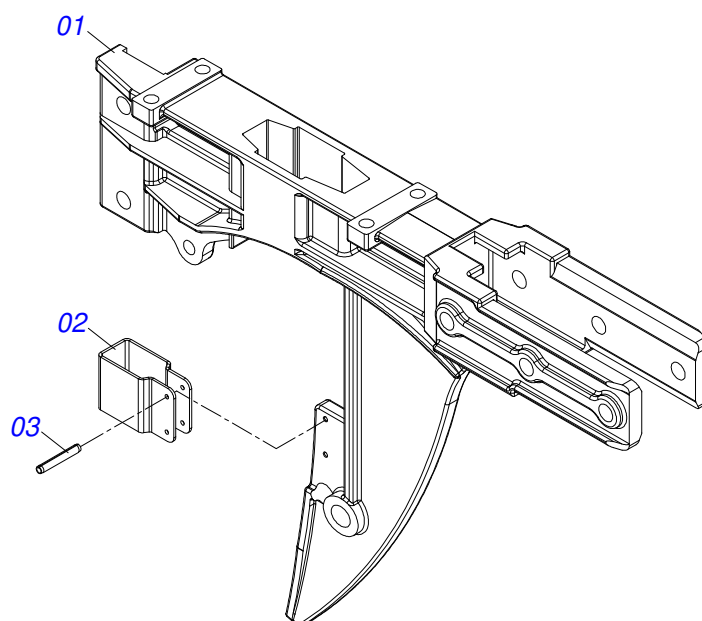 


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

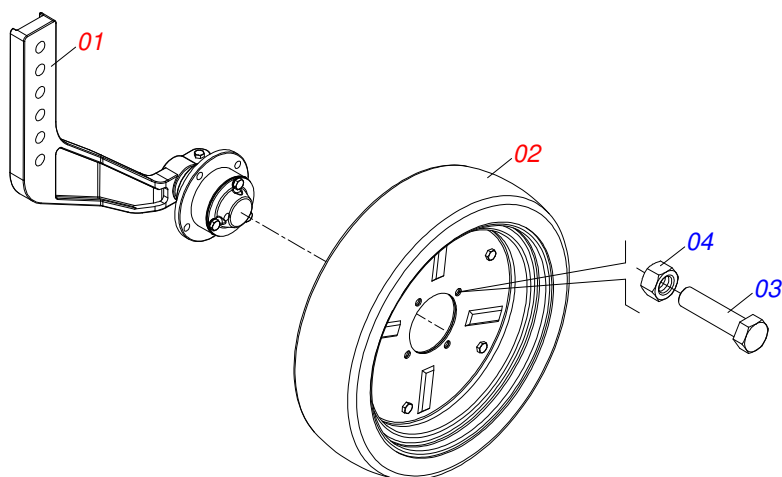 

Item	Code	Description	See page	QT
01	0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL	144	01
02	0501052538	DEPTH BAND WITH ARMS	145	01
03	0503010358	5/16" X 5/8" BOLT		04
04	0503013816	5/16" LOCKNUT		04

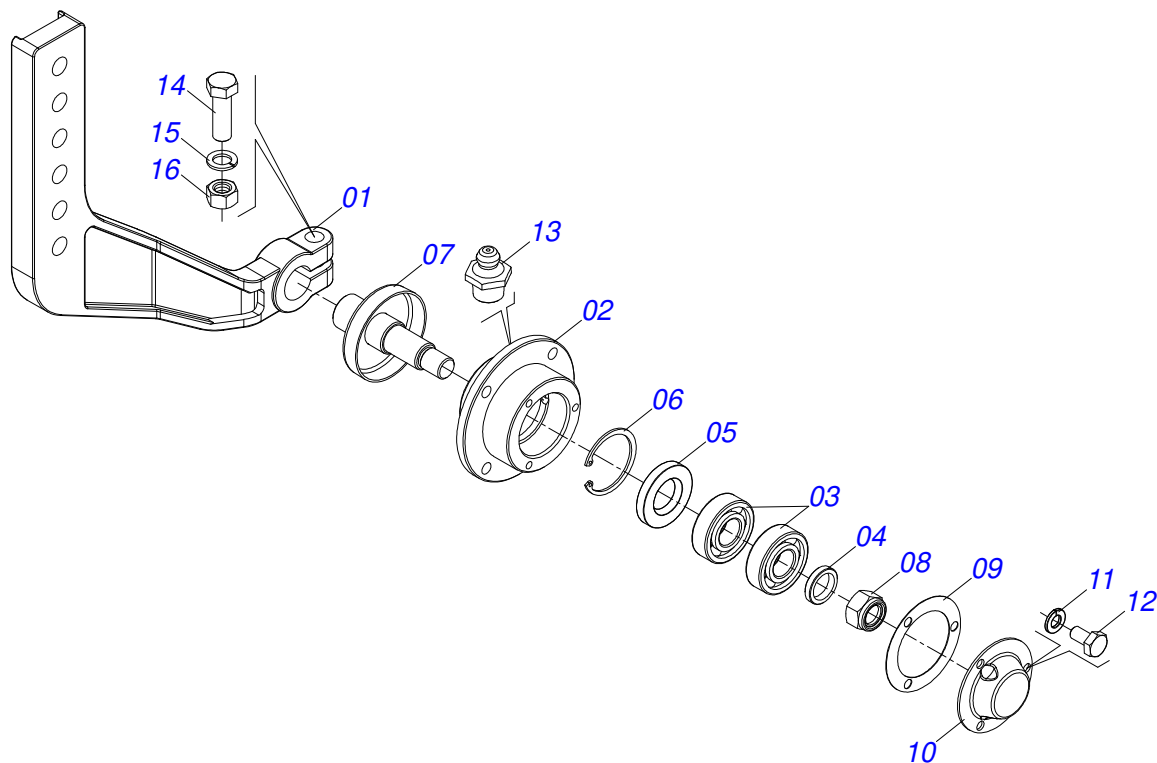 


Item	Code	Description	See page	QT
01	0502012090	DEPTH CONTROL RIGHT ARM		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
08	0503010878	5/8" SELF ALIGNING NUT		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0521019178	COVER DEPTH		01
11	0503011441	SPRING WASHER		03
12	0503014729	1/4" UNF X 1/2" BOLT		03
13	0503010691	1/4" GREASE FITTING		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01

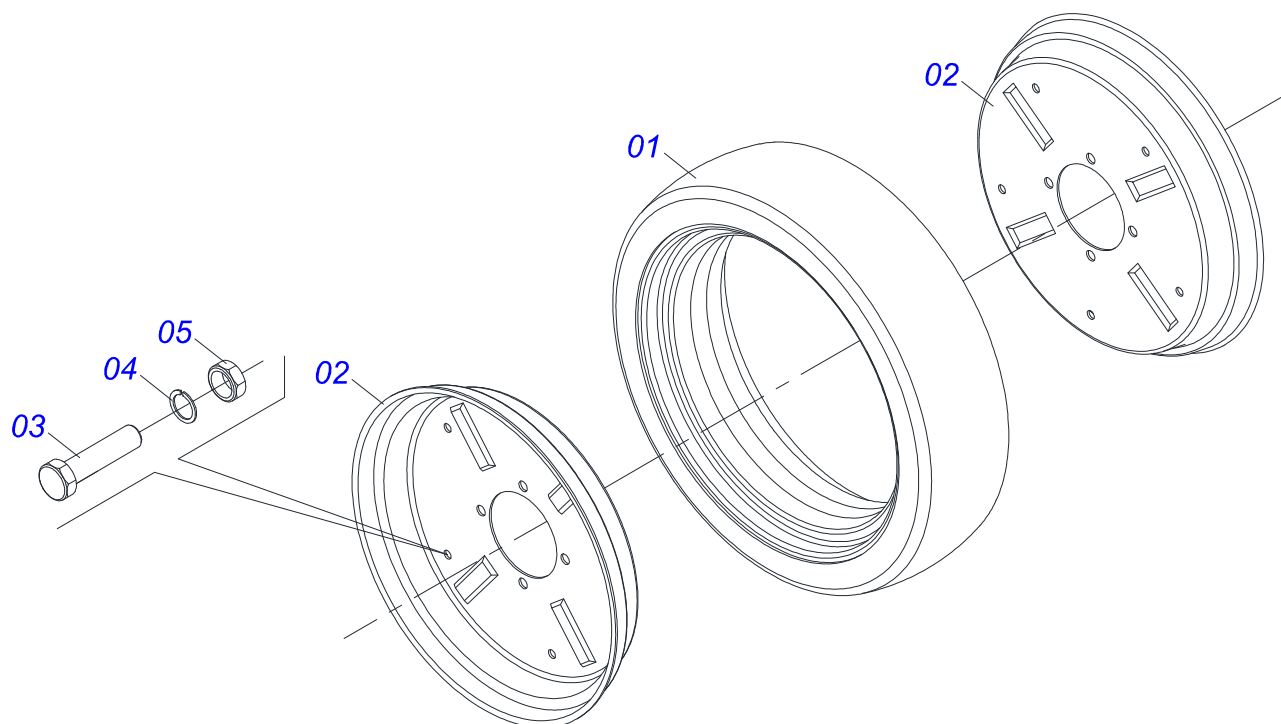 


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

LEFT CONTROL ARM DEPTH WITHOUT WHEEL

 
0501056435

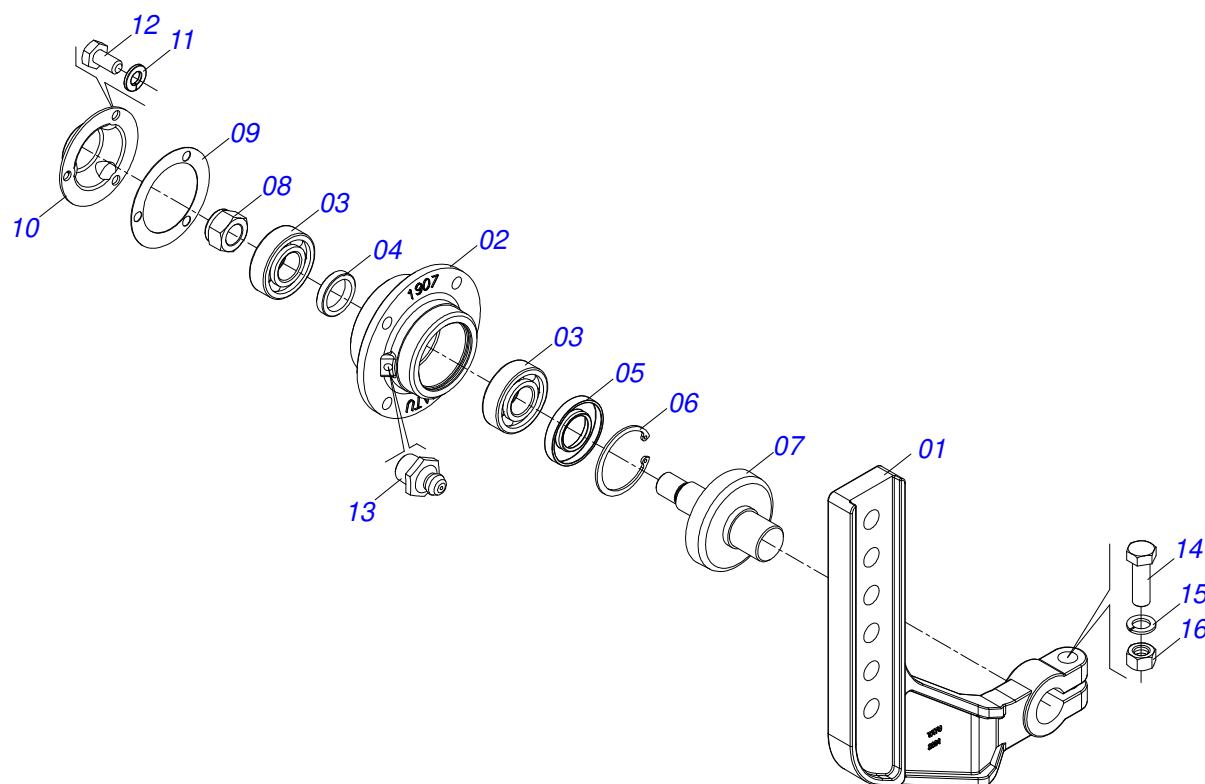


Item	Code	Description	See page	QT
01	0502012091	DEPTH CONTROL LEFT ARM		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
08	0503010878	5/8" SELF ALIGNING NUT		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0521019178	COVER DEPTH		01
11	0503011441	SPRING WASHER		03
12	0503014729	1/4" UNF X 1/2" BOLT		03
13	0503010691	1/4" GREASE FITTING		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01

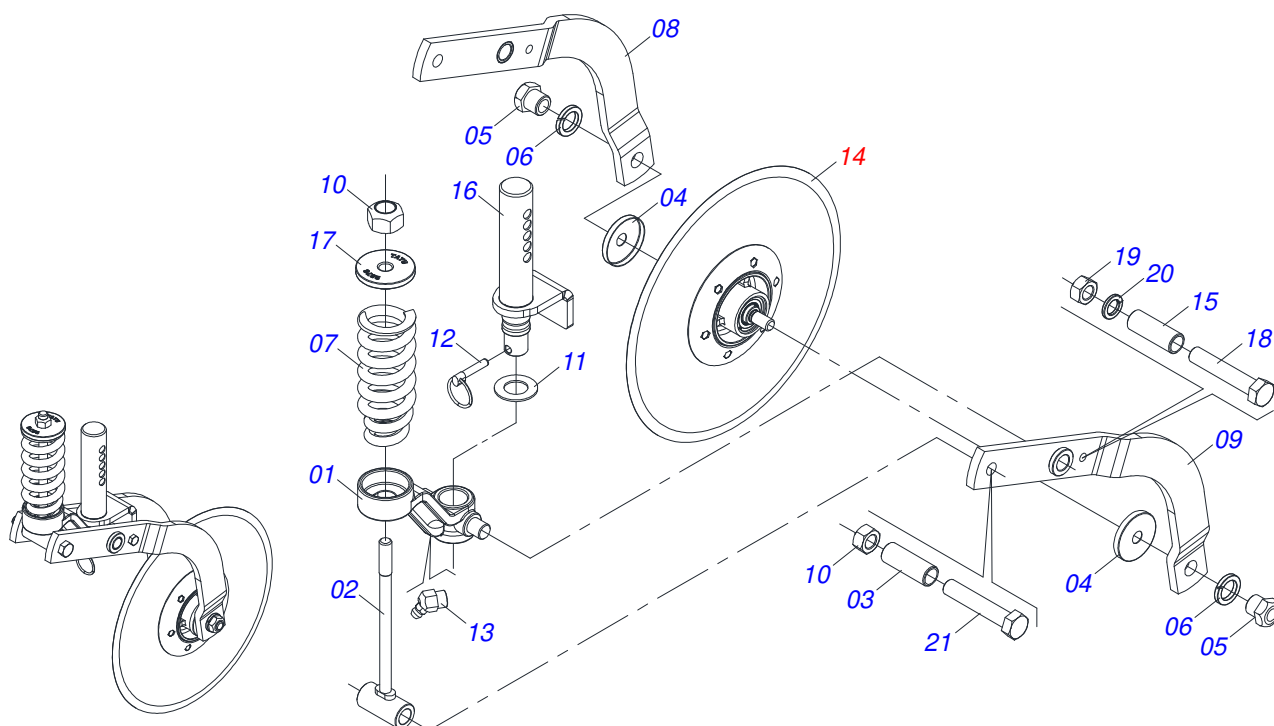 


Item	Code	Description	See page	QT
001	0502012369	BLADE DISC SUPPORT		01
002	0501067323	SPRING REGULATOR		01
003	0521010452	SLEEVE		01
004	0521015376	DUST CLOAK		02
005	0521013510	3/4" NUT		02
006	0503011438	SPRING WASHER		02
007	0503034498	SPRING		01
008	0521067844	RIGHT ARM		01
009	0521067843	LEFT ARM		01
010	0503011255	3/4" LOCK NUT		02
011	0581014407	FLAT WASHER 36.5 X 65.00 X 3.00		01
012	0503030430	7/16 X 2" PIN LOCK		01
013	0503010003	1845 GREASE FITTING		01
014	0511054673	DPLO20	148	01
015	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
016	0521062962	BLADE DISC AXLE		01
017	0581014524	SPRING SUPPORT WASHER		01
018	0503011411	1/2" X 5-1/2" BOLT		01
019	0503010060	1/2" NUT		01
020	0503011440	SPRING WASHER		01
021	0503013185	3/4" X 5-1/2" BOLT		01

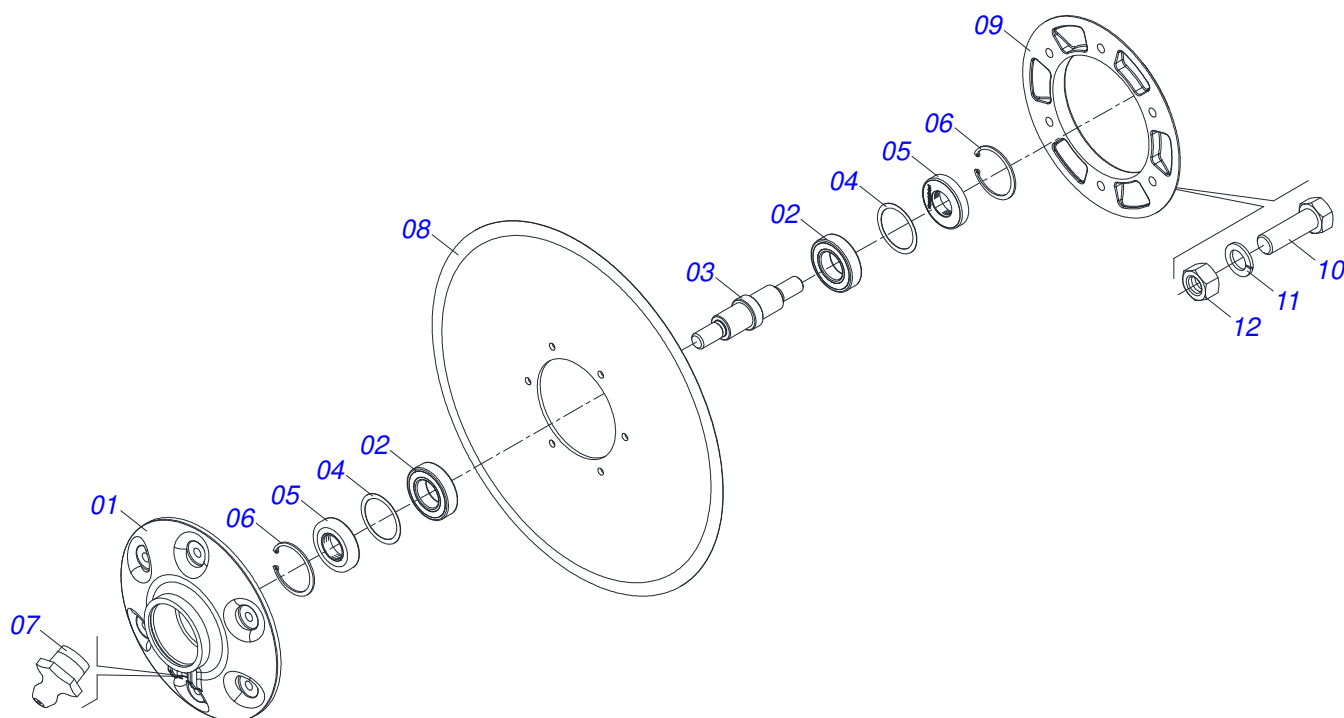 

Item	Code	Description	See page	QT
001	0502011562	DC BOX		01
002	0503010276	6206 BALL BEARING		02
003	0521013610	BLADE DISC HUB AXLE		01
004	0503030832	FLAT WASHER		02
005	0503012417	SEAL		02
006	0503011800	SEAL RING		02
007	0503010691	1/4" GREASE FITTING		01
008	0607026025	DPLO20X4,5		01
009	0502020641	BLADE DISC FLANGE		01
010	0503010371	5/16" X 1" BOLT		06
011	0503011444	SPRING WASHER		06
012	0503010337	5/16" NUT		06
013	1882970002	GREASE SOAP		00

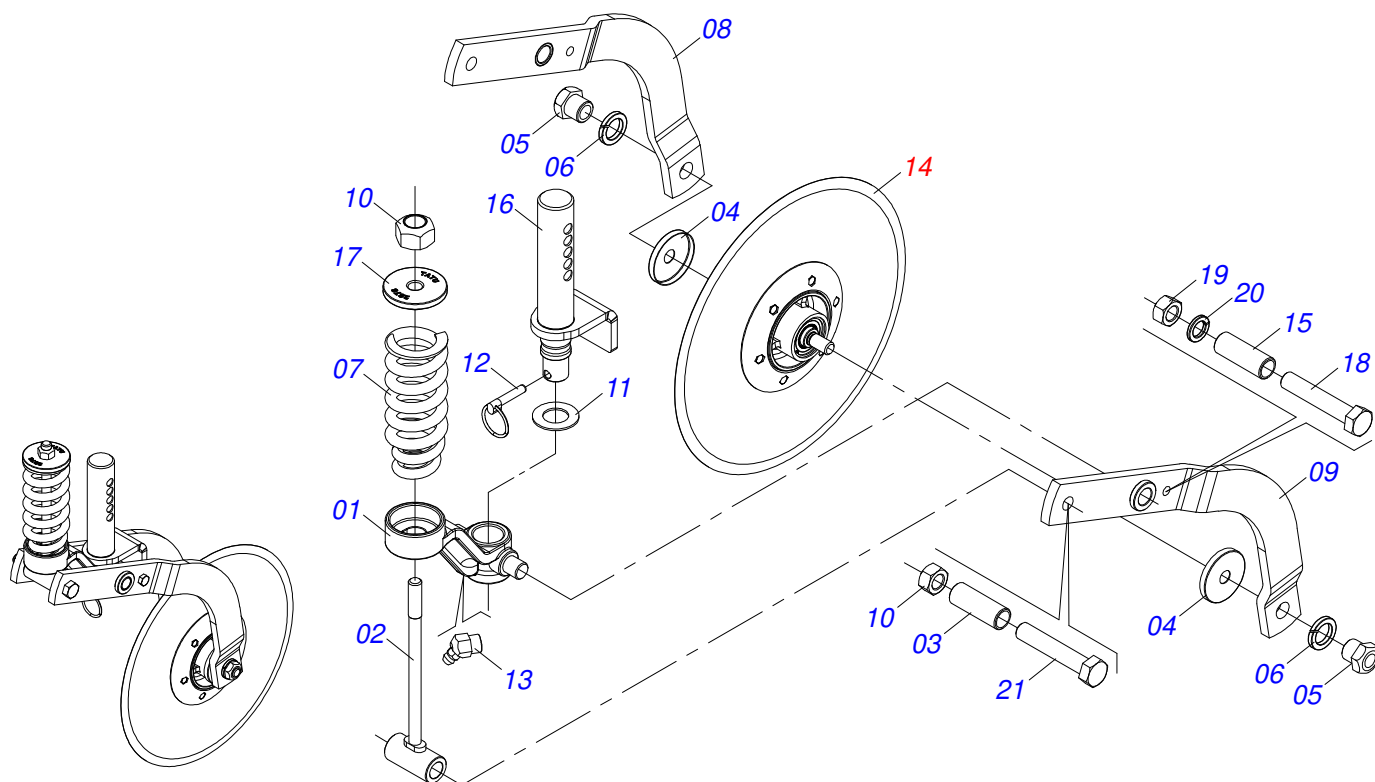 


Item	Code	Description	See page	QT
01	0502012369	BLADE DISC SUPPORT		01
02	0501067323	SPRING REGULATOR		01
03	0521010452	SLEEVE		01
04	0521015376	DUST CLOAK		02
05	0521013510	3/4" NUT		02
06	0503011438	SPRING WASHER		02
07	0503034498	SPRING		01
08	0521067844	RIGHT ARM		01
09	0521067843	LEFT ARM		01
10	0503011255	3/4" LOCK NUT		02
11	0581014407	FLAT WASHER 36.5 X 65.00 X 3.00		01
12	0503030430	7/16 X 2" PIN LOCK		01
13	0503010003	1845 GREASE FITTING		01
14	0501052139	ASSY CUTTING DISK DPL18	150	01
15	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
16	0521062962	BLADE DISC AXLE		01
17	0581014524	SPRING SUPPORT WASHER		01
18	0503011411	1/2" X 5-1/2" BOLT		01
19	0503010060	1/2" NUT		01
20	0503011440	SPRING WASHER		01
21	0503013185	3/4" X 5-1/2" BOLT		01

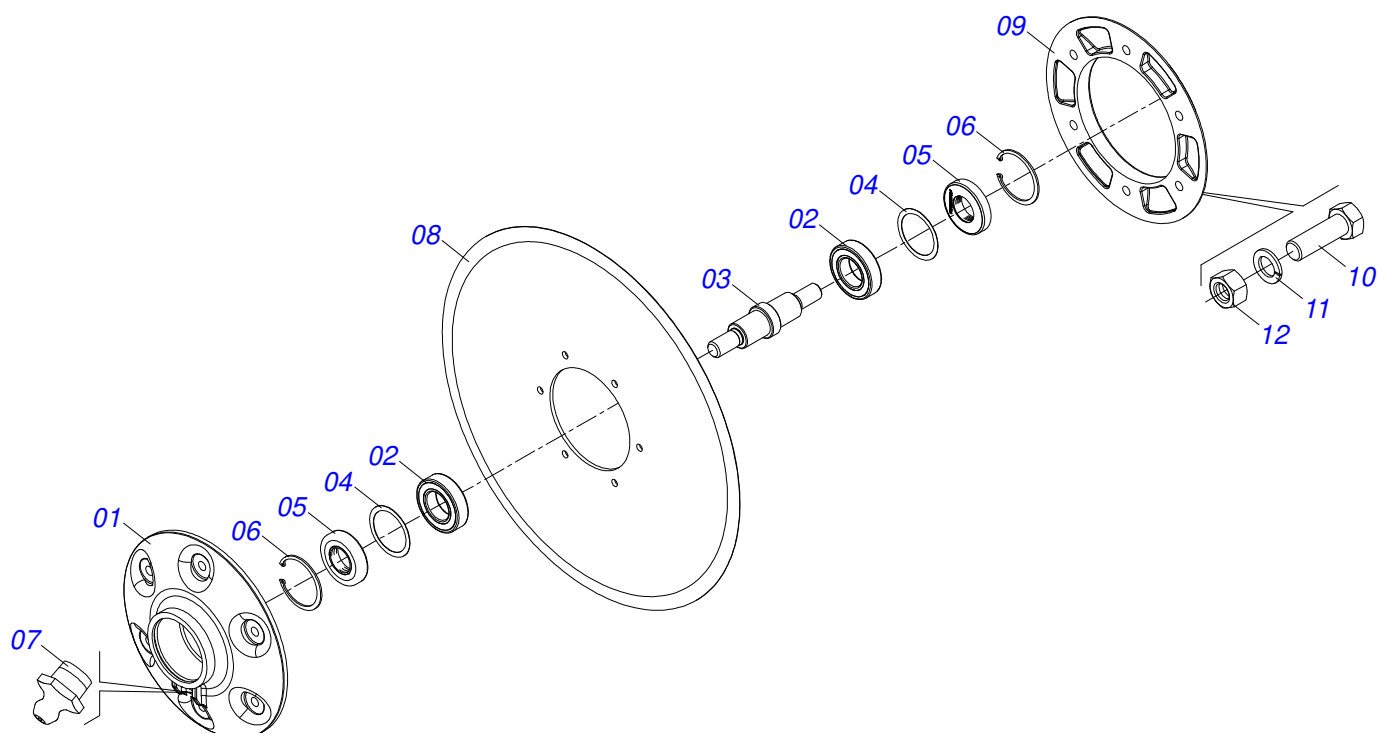 

Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503010276	6206 BALL BEARING		02
03	0521013610	BLADE DISC HUB AXLE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0603026013	PLAIN COULTER BLADE		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

20" PLAIN COULTER BLADE

 
0511059569

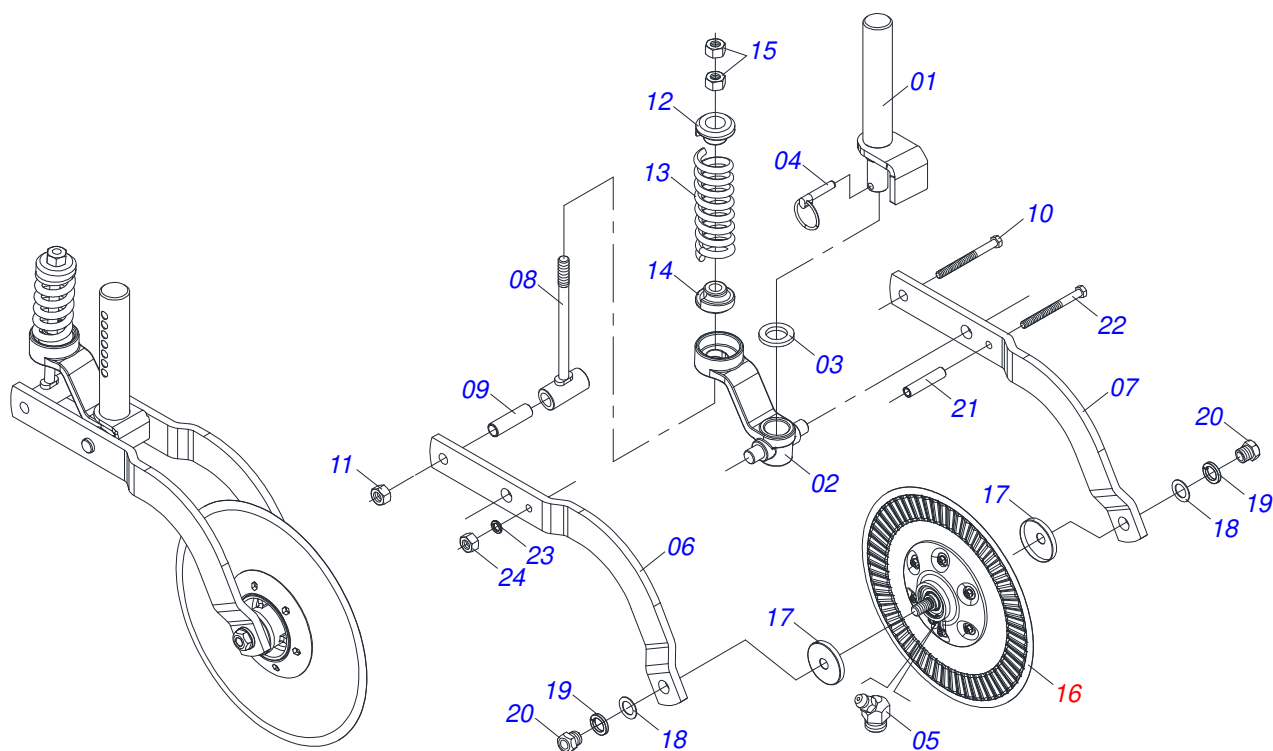


Item	Code	Description	See page	QT
001	0521062962	BLADE DISC AXLE		01
002	0502012369	BLADE DISC SUPPORT		01
003	0581014407	FLAT WASHER 36.5 X 65.00 X 3.00		01
004	0503030430	7/16 X 2" PIN LOCK		01
005	0503010003	1845 GREASE FITTING		01
006	0521067844	RIGHT ARM		01
007	0521067843	LEFT ARM		01
008	0501067323	SPRING REGULATOR		01
009	0521010452	SLEEVE		01
010	0503013185	3/4" X 5-1/2" BOLT		01
011	0503011255	3/4" LOCK NUT		01
012	1902020393	SPRING UPPER SUPPORT		01
013	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
014	1902020394	SPRING SUPPORT		01
015	0503010014	3/4" NUT		02
016	0501055997	20" BLADE DISC ASSY	152	01
017	0521015376	DUST CLOAK		02
018	0511015346	FLAT WASHER		02
019	0503011438	SPRING WASHER		02
020	0521013510	3/4" NUT		02
021	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
022	0503011411	1/2" X 5-1/2" BOLT		01
023	0503011440	SPRING WASHER		01
024	0503010060	1/2" NUT		01

20" BLADE DISC ASSY

 
0501055997

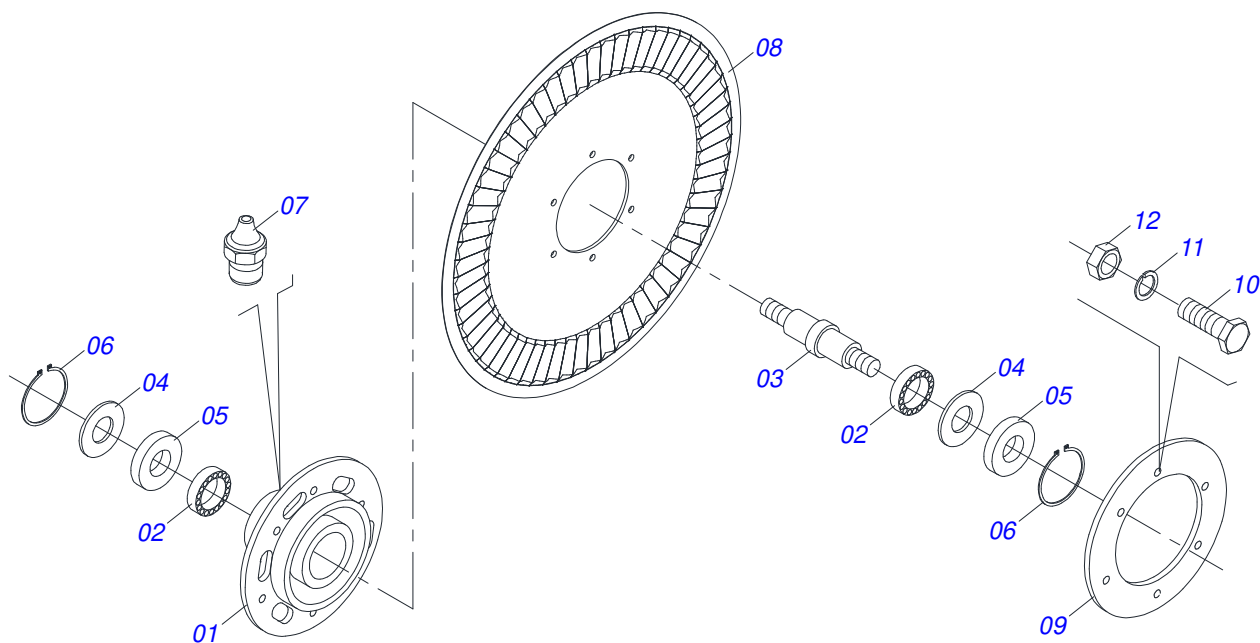


Item	Code	Description	See page	QT
00	0501055997	20" BLADE DISC ASSY	152	01
01	0502011562	DC BOX		01
02	0503010276	6206 BALL BEARING		02
03	0521013610	BLADE DISC HUB AXLE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0605027058	20" X 0.1771" PLAIN COULTER BLADE		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

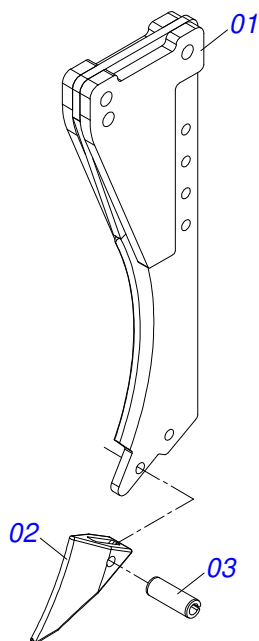 


Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER SPINDLE		01
02	1902070061	POINT SUBSOILER		01
03	0503011373	0.4" X 1.1" SPRING PIN		01

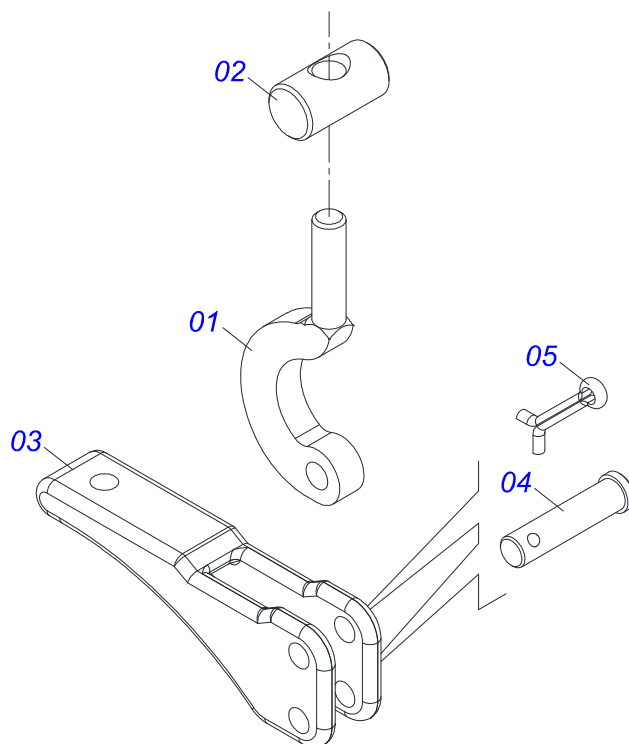 


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

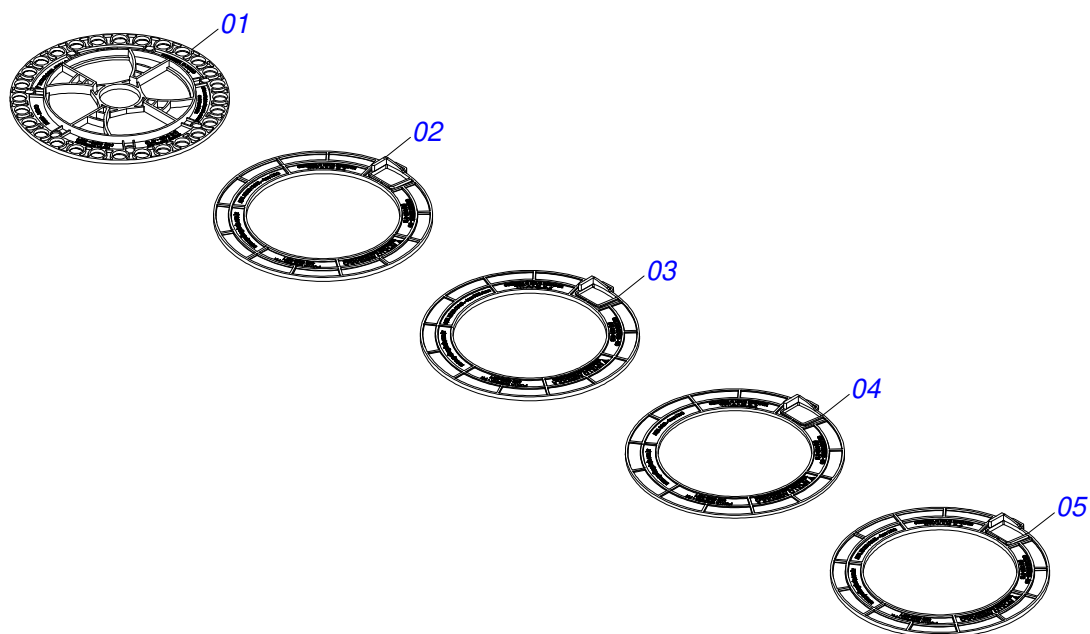 


Item	Code	Description	See page	QT
01	0503016204	CORN DISK 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

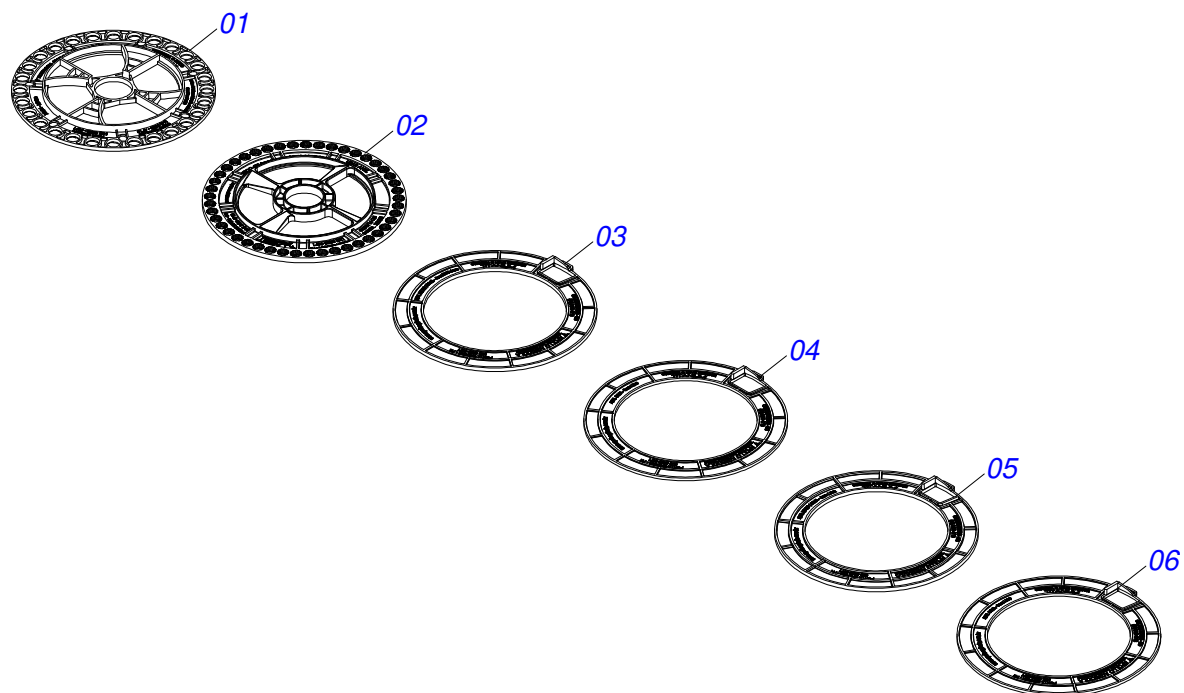 


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

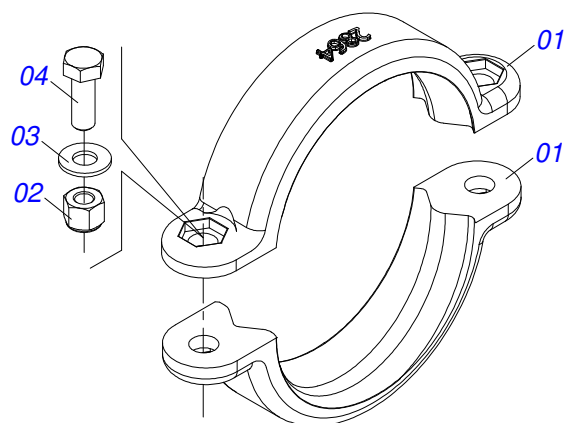 


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010365	NUT		02

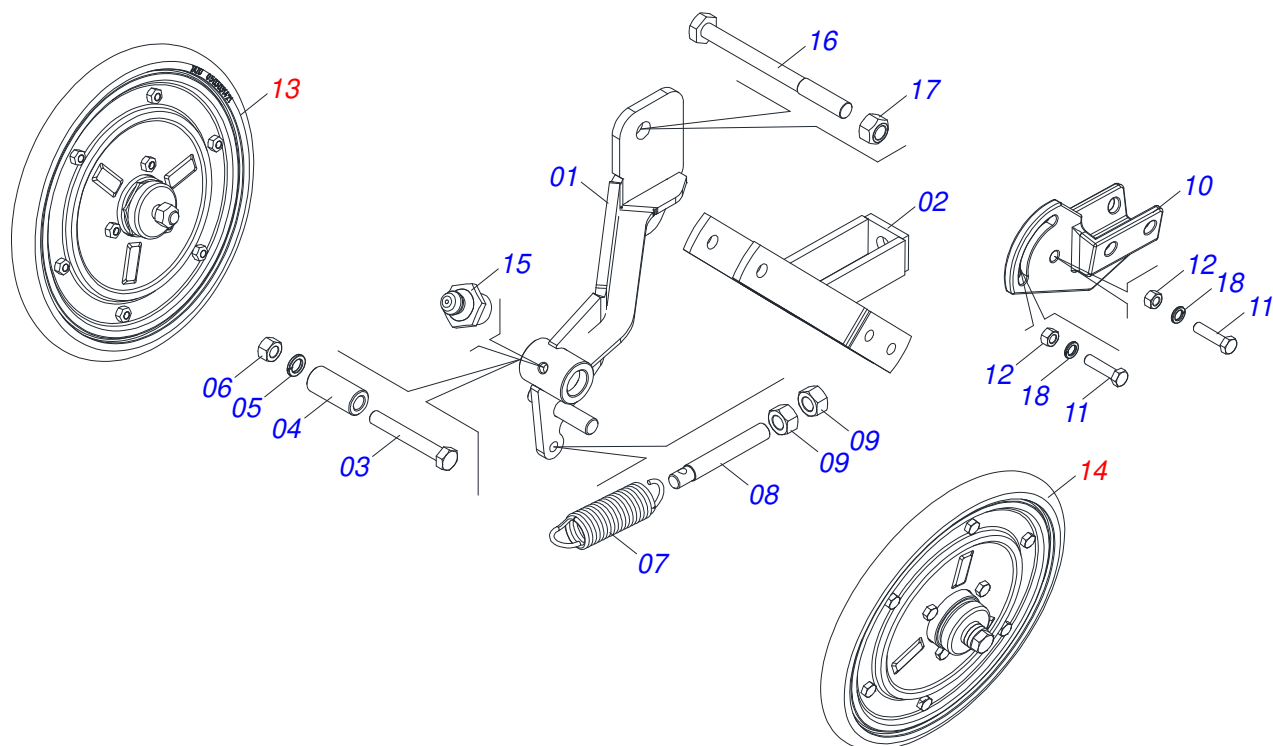 


Item	Code	Description	See page	QT
001	0521063771	WHEEL SUPPORT		01
002	0511064128	PRESS SUPPORT LOWWER WHEEL		01
003	0503010752	1/2" X 3.1/2" BOLT		01
004	0531013272	0.5" X 1" X 2.2" SLEEVE		01
005	0503010019	1/2" SPRING WASHER		01
006	0503010060	1/2" NUT		01
007	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
008	0501013491	5/8" TENSIONER SPRING		01
009	0503010013	5/8" NUT		02
010	0502011757	PRESS REGULATOR		01
011	0503010849	3/8" X 1-1/2" BOLT		02
012	0503010026	3/8" NUT		02
013	0511054333	COMPACT WHEEL RIGHT WITH BEARING	159	01
014	0511054334	COMPACT WHEEL LEFT WITH BEARING	160	01
015	0503010002	1800 GREASE FITTING		01
016	0503010795	5/8" X 7" BOLT		01
017	0503012412	5/8 UNC SELF LOCKING NUT		01
018	0503010025	3/8" SPRING WASHER		02

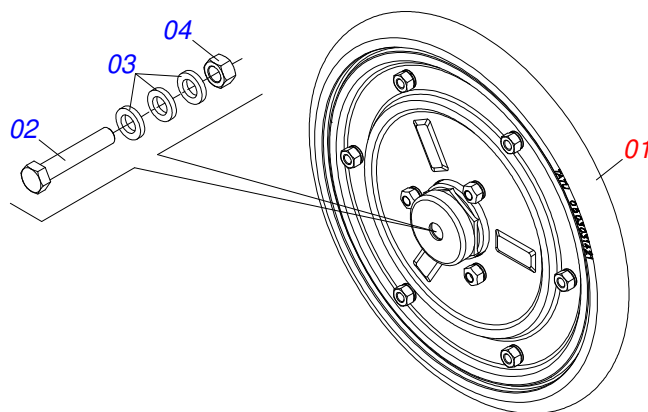 

Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	118	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

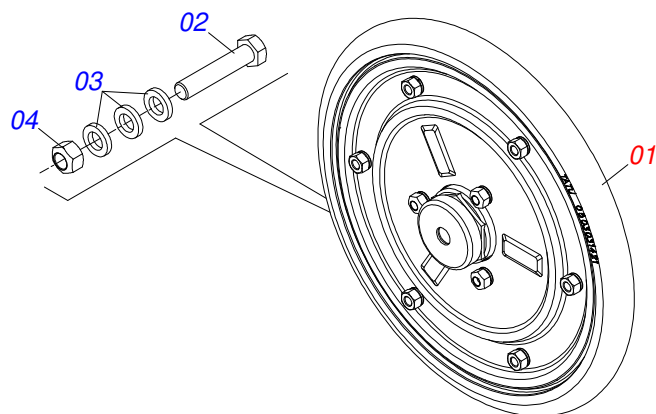 

Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	118	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

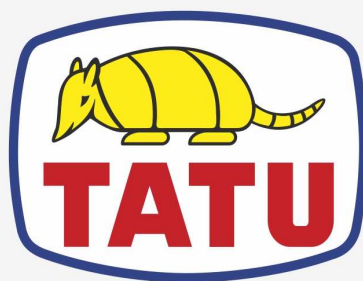 

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

