

ROW CROP PLANTERS

ULTRA FLEX SUPREMA P.P - FRAME 4845 - CSU - MH

Code: 0501093155
Series: S-0116
Revision: 00
Date Revision: OUTUBRO/2021

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111190448	ULTRA FLEX SUP PP 4845/10E500 ESPECIAL S-0116

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.



MARCHESAN

INDEX

0909096050	ASSY FRAME	1
0501058630	FRAME WITH WHEEL	2
0511048530	CARRYING WITH WHEELS SPRING	3
0501059909	CARRYING WHEELS SUPPORT	4
0501058241	TENSIONER CHAIN SUPPORT	5
0501058240	WHELL FASTENER WITH STRETCHER	6
0501058243	STRETCHER INTERMEDIATE RODE CURRENT	7
0501058244	STRETCHER FIXED CURRENT	8
0501058242	MOVIL CHAIN TENSIONER	9
0511054344	HYDRAULIC CYLINDER ASSEMBLY WITH 2	10
0511054655	MOTOR SHAFT ASSEMBLY	11
0501052560	AXLE MOTOR SLOW-MOVING ASSY	12
0511051434	TRANSMISSION DRIVING ASSY	13
0511047069	SIDE TRANSMISSION DRIVING	14
0511047070	LH SIDE TRANSMISSION DRIVING	15
0511054654	HEX AXLE ASSEMBLY	16
0511058572	PLATFORM ASSY - 4845	17
0511051208	HYDRAULIC ROW MARKER ASSEMBLY 11L	18
0511058449	HYDRAULIC CYLINDER	19
0501054649	SEQUENTIAL VALVE ASSY	20
0511054346	OIL CONDUCTOR ASSY - 5745	21
0511054657	HANDRAIL ASSY	22
0511053356	ASSY LADDER	23
0521050585	TRANSMISSION ASSEMBLY	24
0521050183	RIGHT GEAR BOX ASSY	25
0501058212	SEMI MOUNTED RIGHT CHANGE	26
0511059266	CLOSED BEARING	27
0501056271	BEARING CLOSED	28
0501056443	BEARING ASSY GEAR BOX	29
0501056444	BEARING WITH ROLLING	30
0501048790	AXLE WITH LINK ASSY	31
0501054655	CHAIN TENSIONER ASSY	32
0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	33
0521050184	EXCHANGE LEFT ASSY	34
0501058213	LH GEAR BOX	35
0501052810	TRANSMISSION CHAIN TENSIONER ASSY	36
0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	37
0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	38
0511050125	BEARING WITH 17Z GEAR	39
0511050126	MIDDLE BEARING TRANSMISSION	40
0511050127	CHAIN TENSIONER SUPPORT	41
0501055112	MICRO GRANULATED CHAIN TENSIONER	42
0511058574	ASSY FERTILIZER SILO - 4845	43
0511058575	BEAM RIGHT SUPPORT WITH FERTILIZER DISTRIBUTOR	44
0511058576	SILO LEFT SUPPORT WITH FERTILIZER DISTRIBUTOR	45
0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	46
0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	47
0511054660	DRAWBAR	48
0511058095	LABEL ASSY FOR HYDRAULIC MARKER 4845	49
0511056696	ASSY PORT MANUAL INSTRUCCION	50
0511054971	RESTING ASSEMBLY	51
0501054258	DRAWBAR ESTABILIZER ASSY	52
0501050633	MARKER DISC ASSY LINE	53
0511053904	DISC LINE MARKER	54
0511054601	FULL ARTICULATED TRACTOR HITCH	55



 
MARCHESAN

INDEX

0511053179	TRACTOR HITCH AXLE	56
0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	57
0511057736	CSU C3 SEMI-ASSEMBLED ASSY 4845/10	58
0511057737	ASSEMBLY CSU C3 2BOXES 7B C/10 C	59
0511057690	SEED CONDUCTOR 3 ARTICULATED ASSY CSU	60
0521051927	TOWER SUPPORT HOPPER	61
0521053446	MONITORING ASSEMBLY PLANTING SEEDS 10L PM400	62
0511059400	HYDRAULIC TURBINE ASSEMBLY	63
0511059406	TURBINE P.P MOUNTED	64
0521050154	TURBINE P.P WITH HOLE	65
0909096051	SEED/FERTILIZER LINE ASSY	66
0511057243	LEFT SHORT SEED ROW FRONT	67
0511057246	RIGHT LONG SEED ROW FRONT	68
0511054635	BEARING AXLE BODY	69
0511057159	TRANSMISSION BOX SEED LINE	70
0511050609	BEARING WITH 17Z GEAR ASSY	71
0511050617	FRONT SEED ROW BEARING	72
0511055260	SEED ROW CHAIN TENSIONER	73
0511052426	TRANSMISSION CARDAN ASSY	74
0511052389	BEARING DOUBLE FRONT ROW SEED	75
0511058747	RIGHT REAR SUPREME SEED LINE P.P CSU	76
0521050737	PNEUMATIC SEED DISTRIBUTOR	77
0511057212	ASSY PRECISION PLANTING V-SET2 SUPREMA CSU 3	78
0511057155	PRECISION PLANTING LEFT TRANSMISSION BOX	79
0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN DISC	80
0511057154	DDD RITGH SUPREMA PRECISION PLANTING	81
0511058748	LEFT REAR SUPREME SEED LINE P.P CSU	82
0511057153	DDD LEFT SUPREMA PRECISION PLANTING	83
0511053172	LEFT LOW CUBE WITH DISC 15	84
0511053173	CUBE LOW RIGHT WITH DISC 15	85
0521051424	WHEEL SYSTEM DEPTH / COMPACTOR QUICK ADJUSTMENT	86
0501056769	DEPTH WHEELS REGULATOR ASSY	87
0521051423	COMPACTOR SUPPORT	88
0501052908	COMPACTOR WHEEL WITH BEARING	89
0511053250	SHORT ARM FERTILIZER LINE WITH DDD LEFT	90
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	91
0511053251	ARM LONG FERTILIZER LINE WITH DDD RIGHT	92
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	93
0511044563	20" COULTER BLADE ASSY FOR SHORT ROW	94
0511044585	20" COULTER BLADE ASSY FOR LONG ROW	95
0501054887	20 BLADE DISC WITH FLAT PLAN DISC	96
0521050525	FIXER FERTILIZER CONDUCTOR	97
0521052549	CLAMP	98
0511058212	ASSY LINE SUPPORT FERTILIZER	99
0501058423	FERTILIZER ROD SPRING ROW	100

ASSY FRAME

0909096050

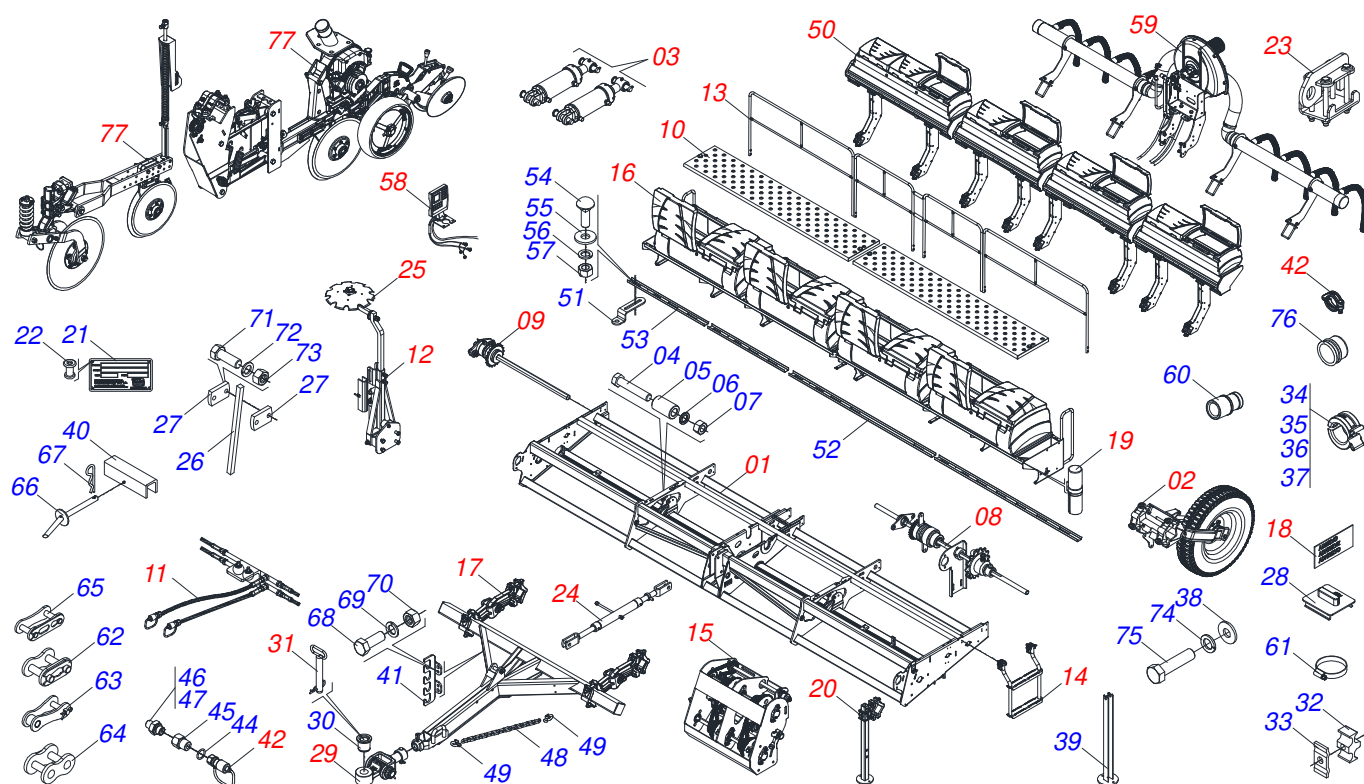


Item	Code	Description	See page	QT
01	0501058630	FRAME WITH WHEEL	2	01
02	0511048530	CARRYING WITH WHEELS SPRING	3	04
03	0511054344	HYDRAULIC CYLINDER ASSEMBLY WITH 2	10	01
04	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02
05	0531012565	SLEEVE 16,3X 30 X 88		02
06	0503010027	5/8" SPRING WASHER		02
07	0503010013	5/8" NUT		02
08	0511054655	MOTOR SHAFT ASSEMBLY	11	01
09	0511054654	HEX AXLE ASSEMBLY	16	01
10	0511058572	PLATFORM ASSY - 4845	17	01
11	0511054346	OIL CONDUCTOR ASSY - 5745	21	01
12	0511051208	HYDRAULIC ROW MARKER ASSEMBLY 11L	18	01
13	0511054657	HANDRAIL ASSY	22	01
14	0511053356	ASSY LADDER	23	01
15	0521050585	TRANSMISSION ASSEMBLY	24	01
16	0511058574	ASSY FERTILIZER SILO - 4845	43	01
17	0511054660	DRAWBAR	48	01
18	0511058095	LABEL ASSY FOR HYDRAULIC MARKER 4845	49	01
19	0511056696	ASSY PORT MANUAL INSTRUCCION	50	01
20	0511054971	RESTING ASSEMBLY	51	02
21	0503034003	SERIAL NUMBER TAG 61 X 118		01
22	0503010001	3.2 X 5.5 RIVET		04
23	0511058368	EAR MOVABLE		02
24	0501054258	DRAWBAR ESTABILIZER ASSY	52	01
25	0501050633	MARKER DISC ASSY LINE	53	02
26	0521013164	EXTENSOR		02
27	0501011310	FIXER LOCK		08
28	0503032624	SILO FERTILIZER GUTTER		06
29	0511054601	FULL ARTICULATED TRACTOR HITCH	55	01
30	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
31	0511053179	TRACTOR HITCH AXLE	56	01


ASSY FRAME

0909096050


Item	Code	Description	See page	QT
32	0502012702	BODY SUPPORT CLAMP		01
33	0531011180	UPPER BODY CLIP		01
34	0501047895	ROD STOP		02
35	0501047885	ROD STOP		02
36	0501047886	ROD STOP		02
37	0501047887	ROD STOP		02
38	0501012803	FLAT WASHER		01
39	0501065677	STRUT		02
40	0521013022	TRANSPORT LOCK		02
41	0541011767	HOSE FIXATION		01
42	0521052549	CLAMP	98	20
43	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	57	01
44	0503010045	O'RING		01
45	0541010080	TERMINAL R.1 / 2 NPT		01
46	0571015343	NIPLE 1 / 2NPT X 3 / 4NPT		01
47	0581013729	NIPLE 1/2 NPT		01
48	0503014120	CHAIN		01
49	0503014321	CABLE STEEL SHACKLE		01
50	0511057736	CSU C3 SEMI-ASSEMBLED ASSY 4845/10	58	01
51	0571017368	SUPPORT GUTTER		08
52	0571017237	GUTTER 25 X 58 X 900		02
53	0571017237	GUTTER 25 X 58 X 900		02
54	0501011643	3/8 X 1"BOLT		08
55	0501010984	FLAT WASHER		08
56	0503010025	3/8" SPRING WASHER		08
57	0503010026	3/8" NUT		08
58	0521053446	MONITORING ASSEMBLY PLANTING SEEDS 10L PM400	62	01
59	0511059400	HYDRAULIC TURBINE ASSEMBLY	63	01
60	0571019716	ADAPTER		10
61	0503010246	CLAMP		17
62	0503011750	AMENDMENT WITH LOCK		06
63	0503011751	REDUCTION		06
64	0503010543	AMENDMENT WITH LOCK		02
65	0503010780	N-2050 AMENDMENT		04
66	0501068994	0.3" X 3.1"LOCK PIN		02
67	0503030168	HAIR PIN		02
68	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
69	0503010025	3/8" SPRING WASHER		02
70	0503010026	3/8" NUT		02
71	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		08
72	0503010019	1/2" SPRING WASHER		08
73	0503010060	1/2" NUT		08
74	0503010180	7/16" SPRING WASHER		01
75	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		01
76	0503031436	AIR DITRIBUTOR PUMP		07
77	0909096051	SEED/FERTILIZER LINE ASSY	66	10

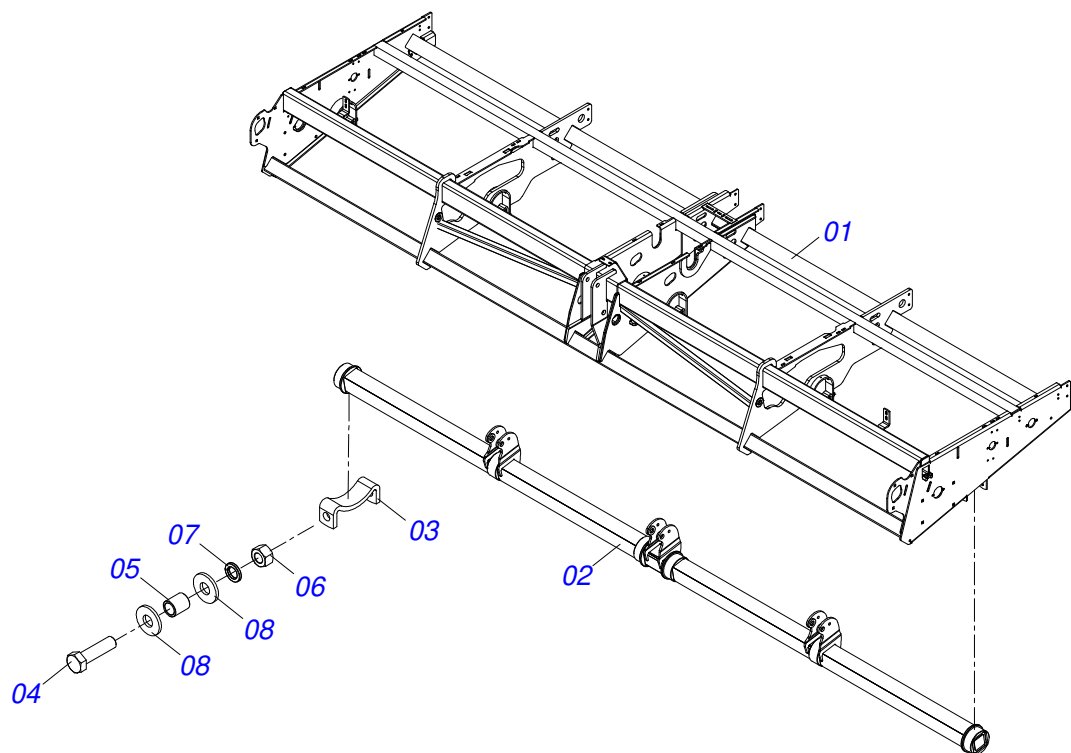 


Item	Code	Description	See page	QT
01	0511069353	FRAME - 4845		01
02	0511063996	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		06
04	0503010899	5/8" X 2-1/4" BOLT		12
05	0531013922	0.6" X 0.8" X 1" SLEEVE		12
06	0503010013	5/8" NUT		12
07	0503011445	SPRING WASHER		12
08	0501012140	FLAT WASHER		24

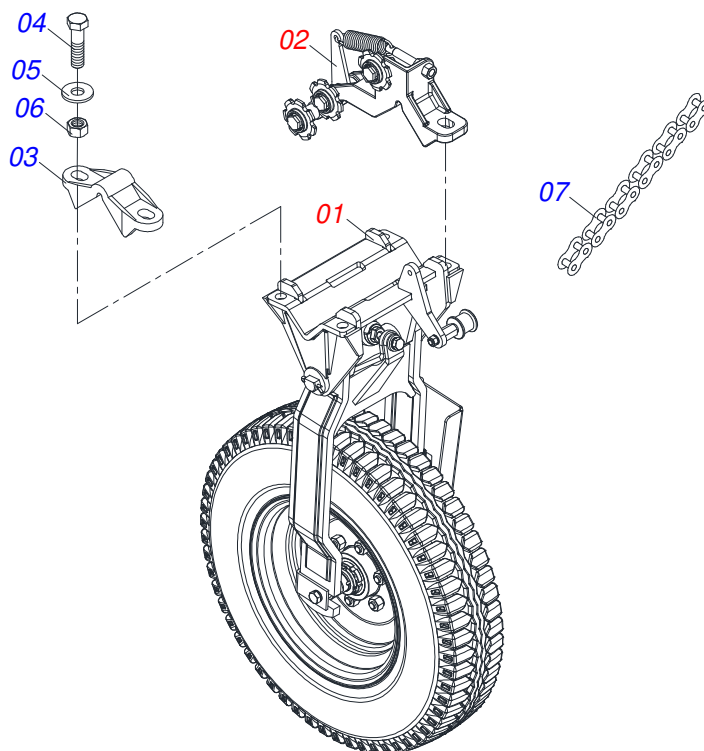 


Item	Code	Description	See page	QT
01	0501059909	CARRYING WHEELS SUPPORT	4	01
02	0501058240	WHELL FASTENER WITH STRETCHER	6	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503013257	2050 CHAIN X 89 LINK + MENDING		01

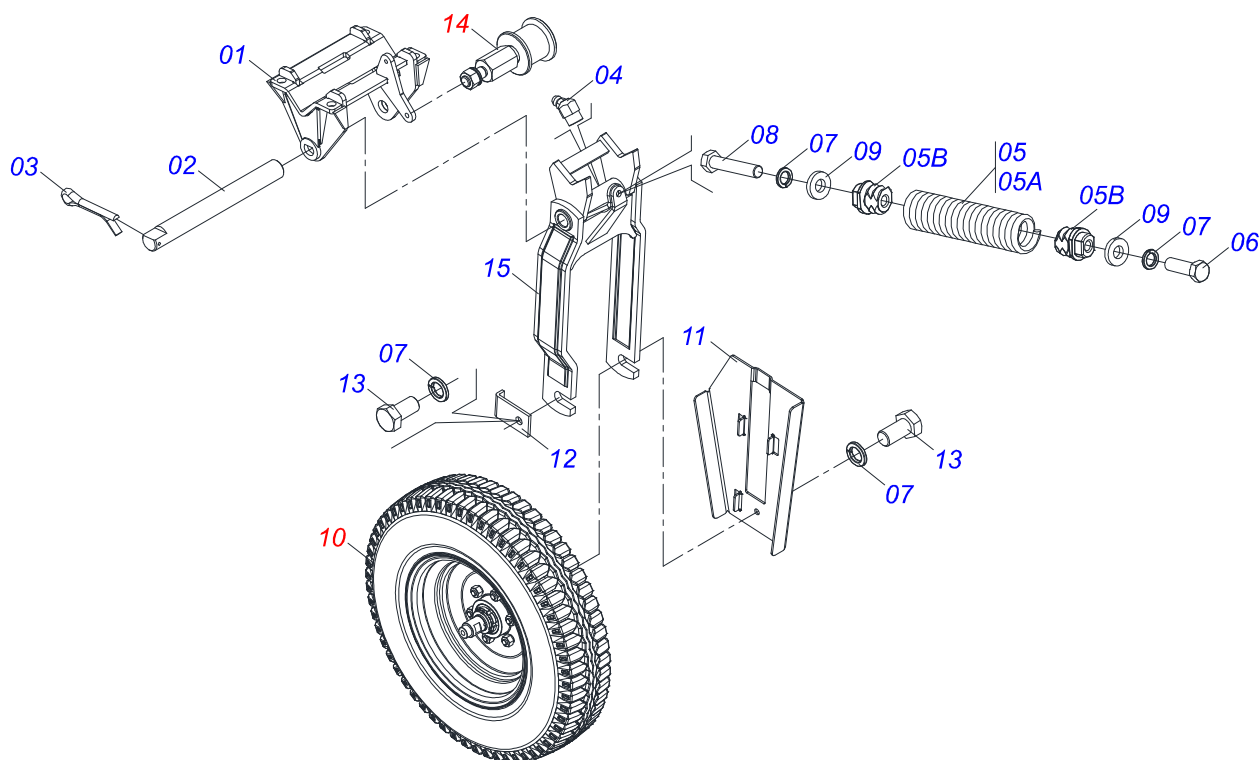 


Item	Code	Description	See page	QT
01	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
02	0531016887	CARRYING WHEEL AXLE ARM		01
03	0503010523	1/4" X 2" COTTERPIN		01
04	0503010003	1845 GREASE FITTING		01
05	0511050681	TRACTION SPRING		01
05A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
05B	0561016062	SPRING HITCH		02
06	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
07	0503010027	5/8" SPRING WASHER		04
08	0503013030	5/8" X 3.1/4" BOLT		01
09	0551017715	FLAT WASHER		02
10	0511052770	WHEEL WITH TIRE 7.00X16 ASSY WHEELED BOX		01
11	0581011124	WHEELED COVER		01
12	0521012190	AXLE LOCK		01
13	0503011167	M16 X 2 X 30 BOLT		02
14	0501058241	TENSIONER CHAIN SUPPORT	5	01
15	0521061565	WHEEL SUPPORT ARM		01

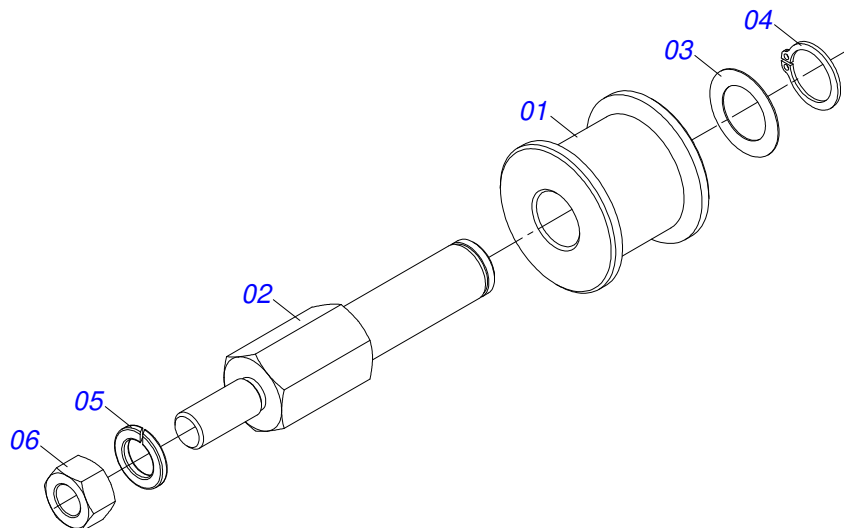 


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	FERT CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

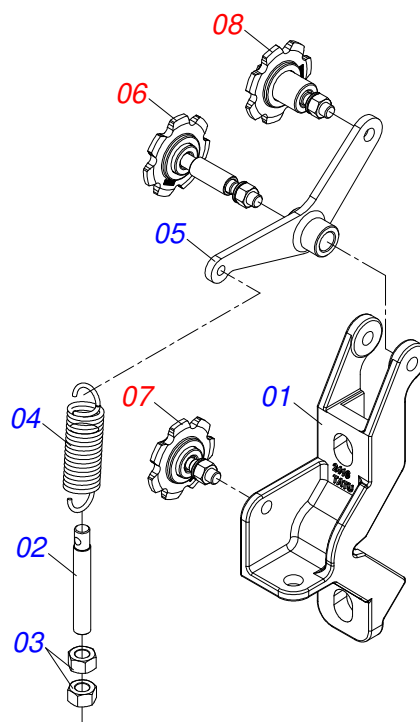 


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8" NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	STRETCHER INTERMEDIATE RODE CURRENT	7	01
07	0501058244	STRETCHER FIXED CURRENT	8	01
08	0501058242	MOVIL CHAIN TENSIONER	9	01

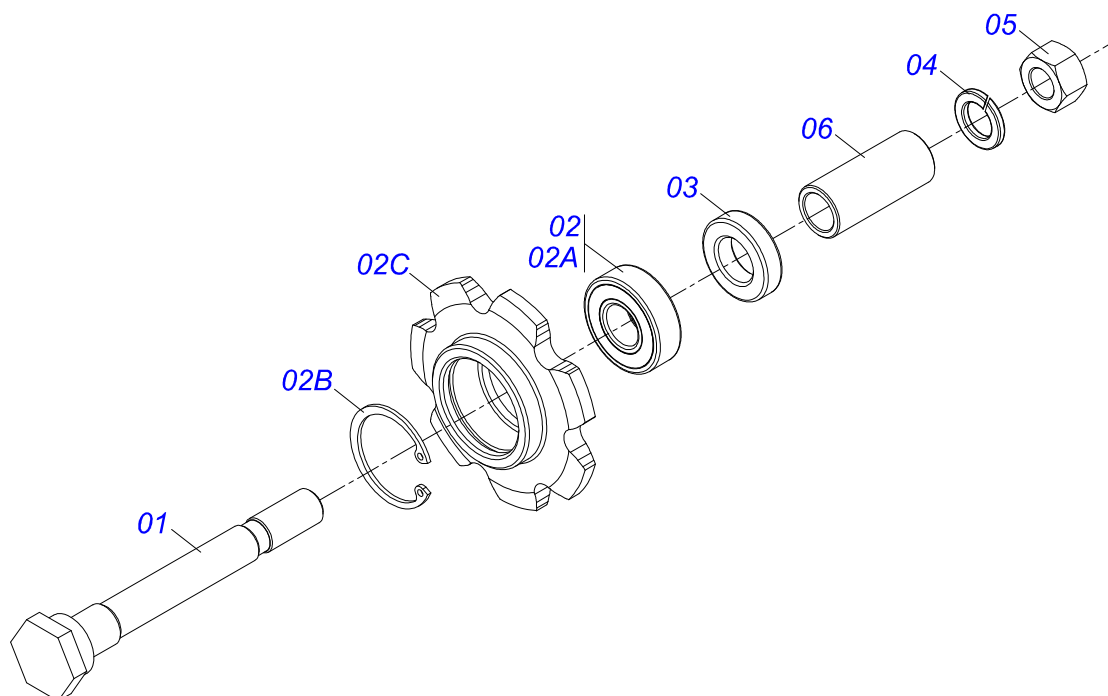 


Item	Code	Description	See page	QT
01	0551018245	CHAIN TENSIONER AXLE		01
02	0501058239	CHAIN TENSIONER BEARING		01
02A	0503012882	BEARING		01
02B	0503011945	503050 CLAMPING RING (FOR AXLE)		01
02C	0502012853	GEAR		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0551018239	SLEEVE 19 X 13,50 X 45		01

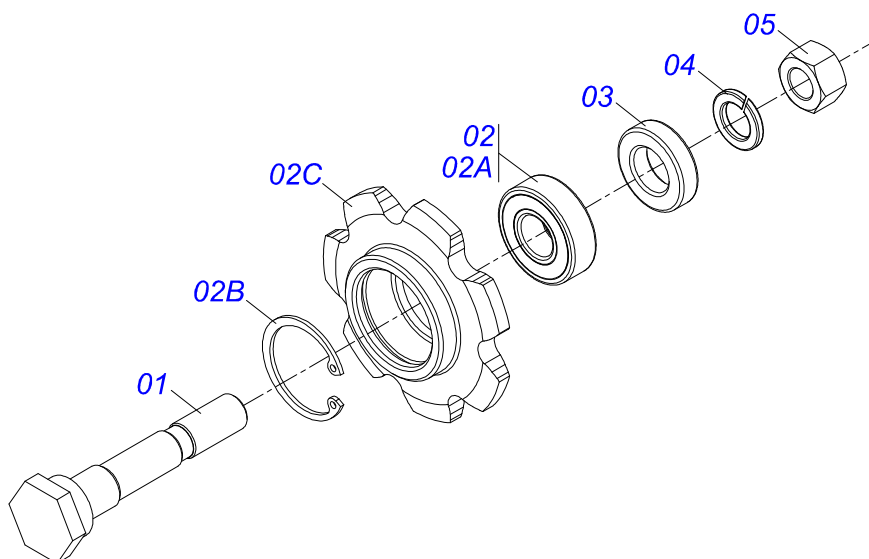 


Item	Code	Description	See page	QT
01	0551018252	CHAIN TIGHTENER AXLE		01
02	0501058239	CHAIN TENSIONER BEARING		01
02A	0503012882	BEARING		01
02B	0503011945	503050 CLAMPING RING (FOR AXLE)		01
02C	0502012853	GEAR		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

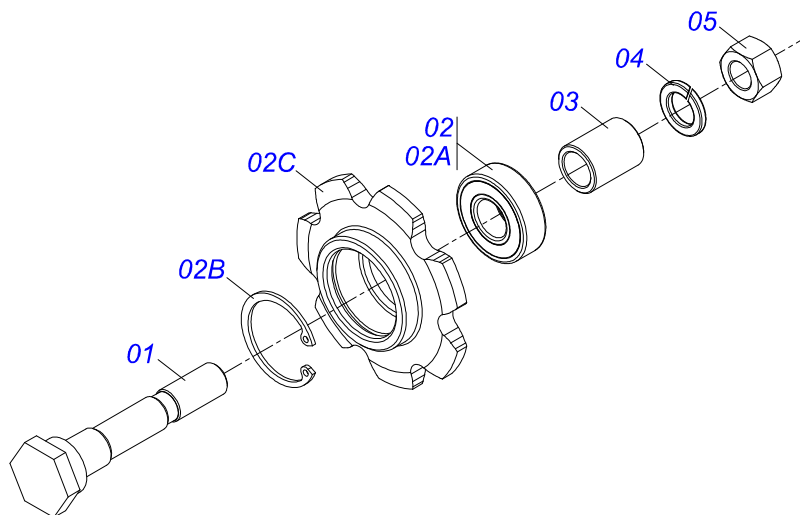 


Item	Code	Description	See page	QT
01	0551018244	CHAIN UPPER AXLE		01
02	0501058239	CHAIN TENSIONER BEARING		01
02A	0503012882	BEARING		01
02B	0503011945	503050 CLAMPING RING (FOR AXLE)		01
02C	0502012853	GEAR		01
03	0551018240	SLEEVE		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

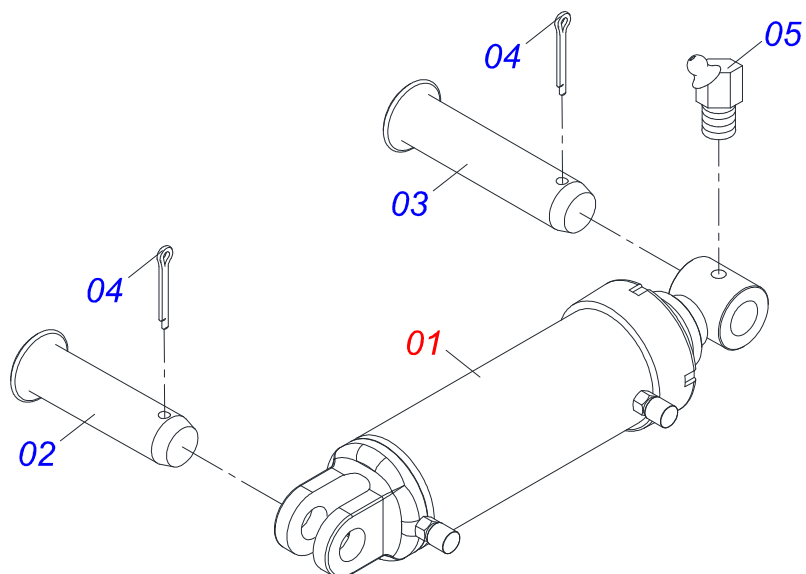 


Item	Code	Description	See page	QT
01	0511058406	HYDRAULIC CYLINDER		02
02	0521012538	1.2" X 3.5" COUPLING SHAFT		02
03	0521012536	COUPLING SHAFT		02
04	0503010523	1/4" X 2" COTTERPIN		04
05	0503010003	1845 GREASE FITTING		08

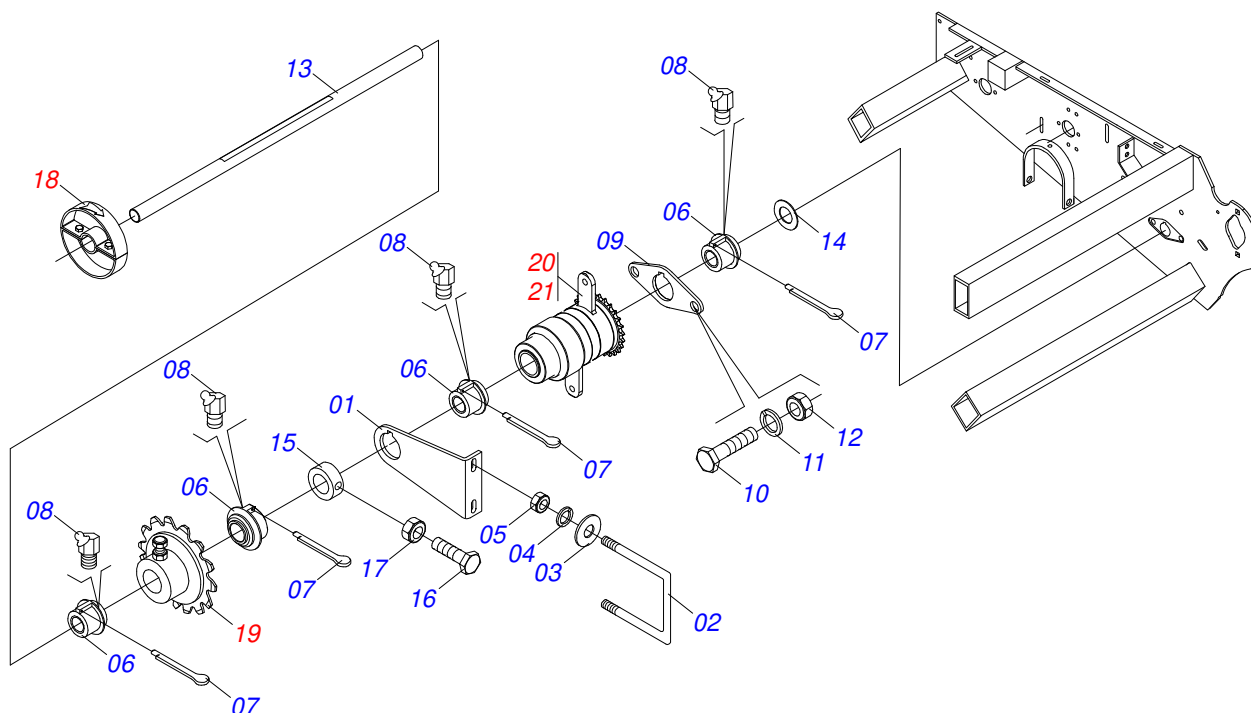 


Item	Code	Description	See page	QT
01	0511064914	MOTOR CHOCK BEARING SUPPORT		04
02	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
03	0511017302	FLAT WASHER		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0501110639	BEARING		08
07	0503010300	5/32" X 1" COTTERPIN		08
08	0503011099	GREASE FITTING		08
09	0531017204	CHOCK BEARING		04
10	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		08
11	0503010025	3/8" SPRING WASHER		08
12	0503010026	3/8" NUT		08
13	0561016876	MOTOR SHAFT		02
14	0501018466	FLAT WASHER		04
15	0511015961	LOCK BUSHING		04
16	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
17	0503010060	1/2" NUT		04
18	0501052560	AXLE MOTOR SLOW-MOVING ASSY	12	02
19	0511051434	TRANSMISSION DRIVING ASSY	13	04
20	0511047069	SIDE TRANSMISSION DRIVING	14	01
21	0511047070	LH SIDE TRANSMISSION DRIVING	15	01

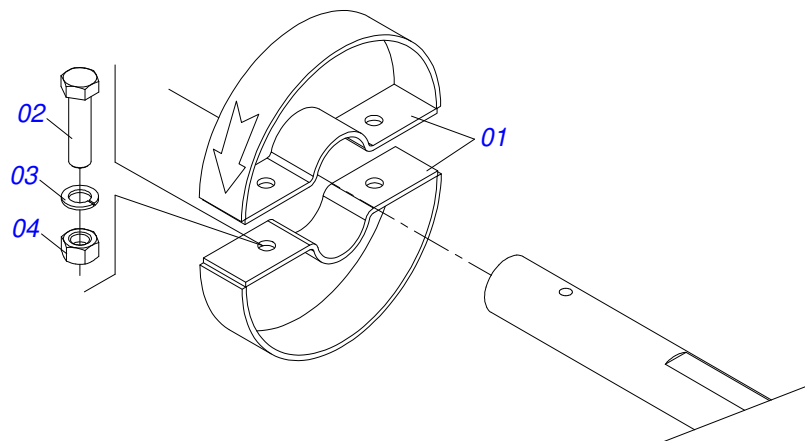 


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	5/16" X 3/4" BOLT		02
03	0503010179	5/16" ZN SPRING WASHER		02
04	0503010337	5/16" NUT		02

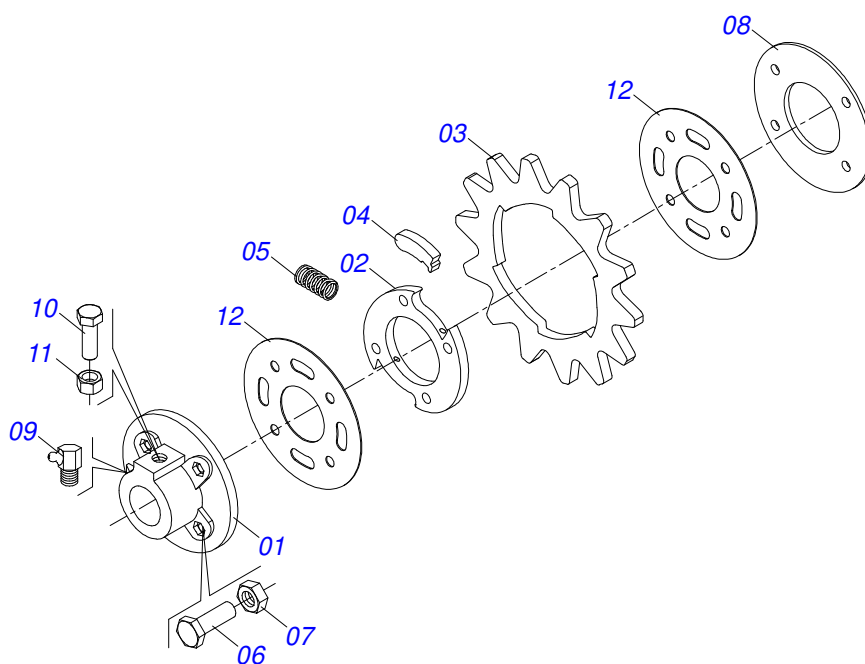 

Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

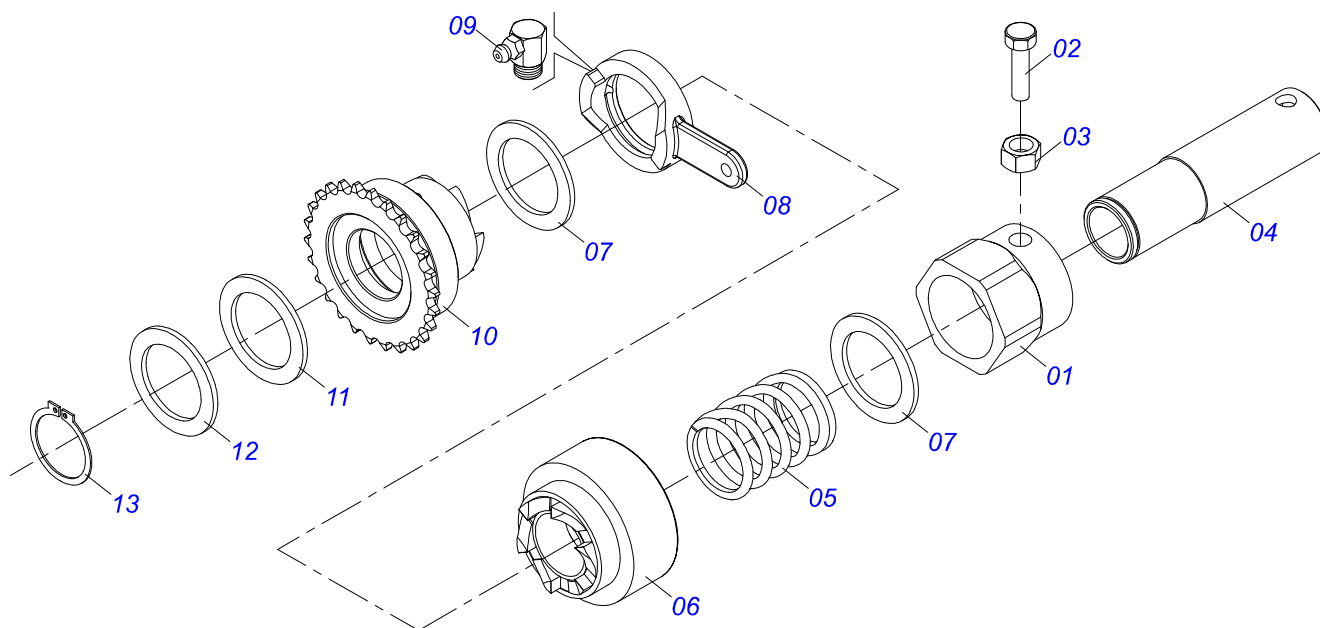 


Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

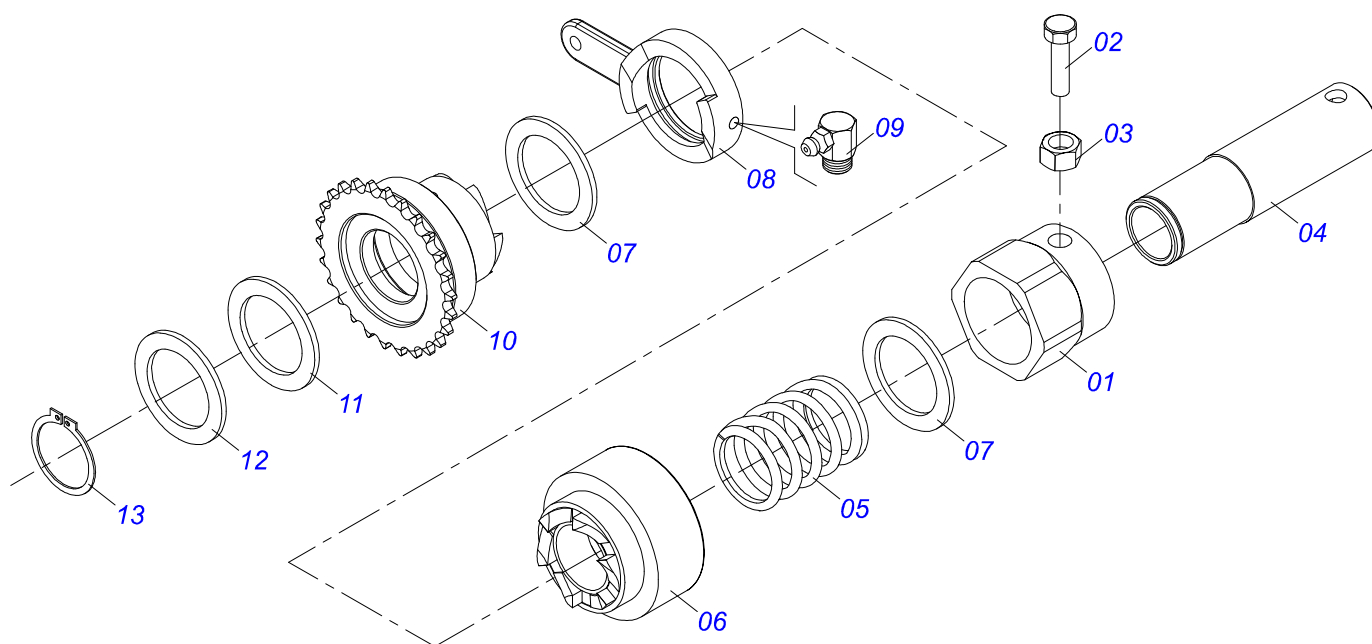 


Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

HEX AXLE ASSEMBLY

 
0511054654

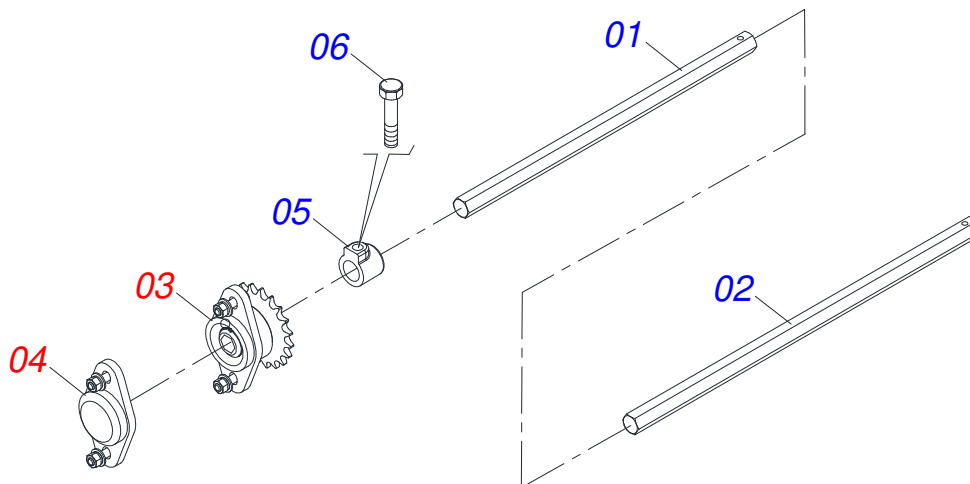

Item	Code	Description	See page	QT
01	0531016944	RIGHT 5/8" X 96" HEX AXLE		01
02	0531016945	LEFT 5/8" X 90" HEX AXLE		01
03	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	37	02
04	0561014215	BEARING COVER LOWER ROW FRAME		02
05	0502040534	SPRING GUIDE BUSHING LOCK		02
06	0503010237	3/8" X 1" BOLT		02

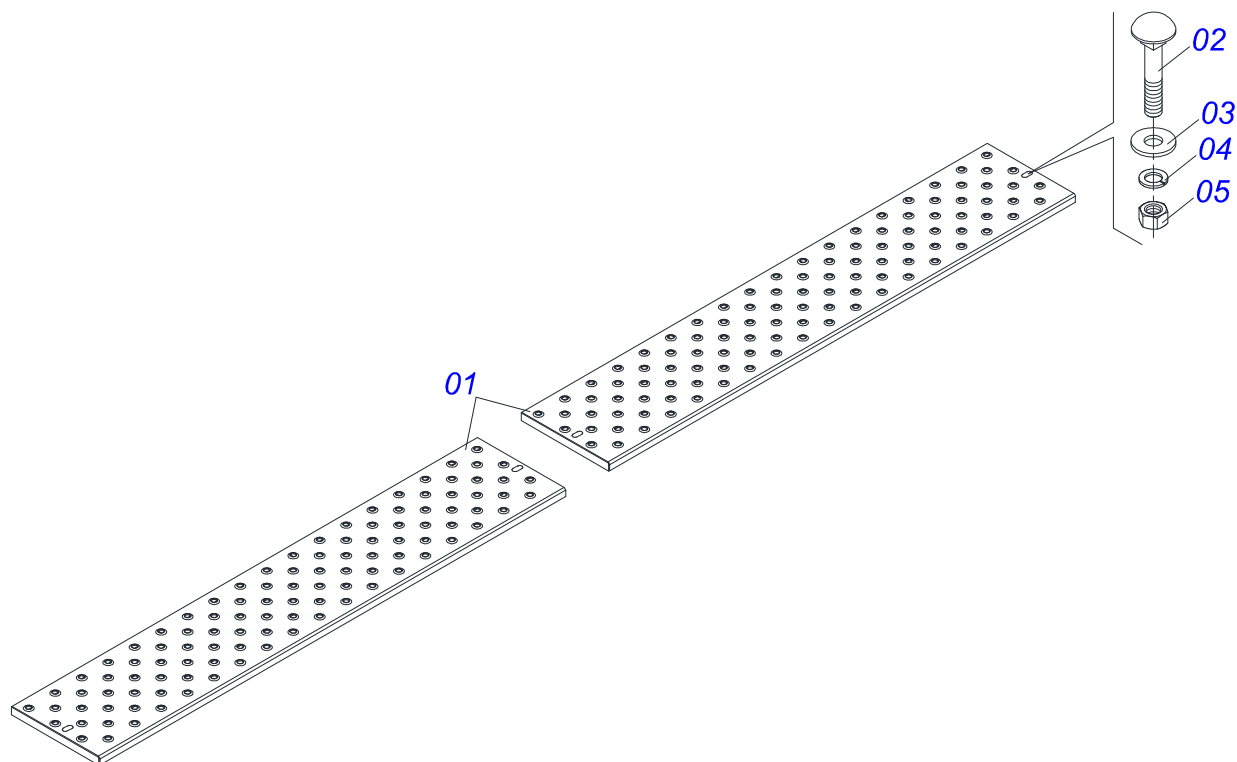 


Item	Code	Description	See page	QT
01	0581012452	PLATFORM - 4845		02
02	0501010942	3/8" X 1-1/4" BOLT		04
03	0501010984	FLAT WASHER		04
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04

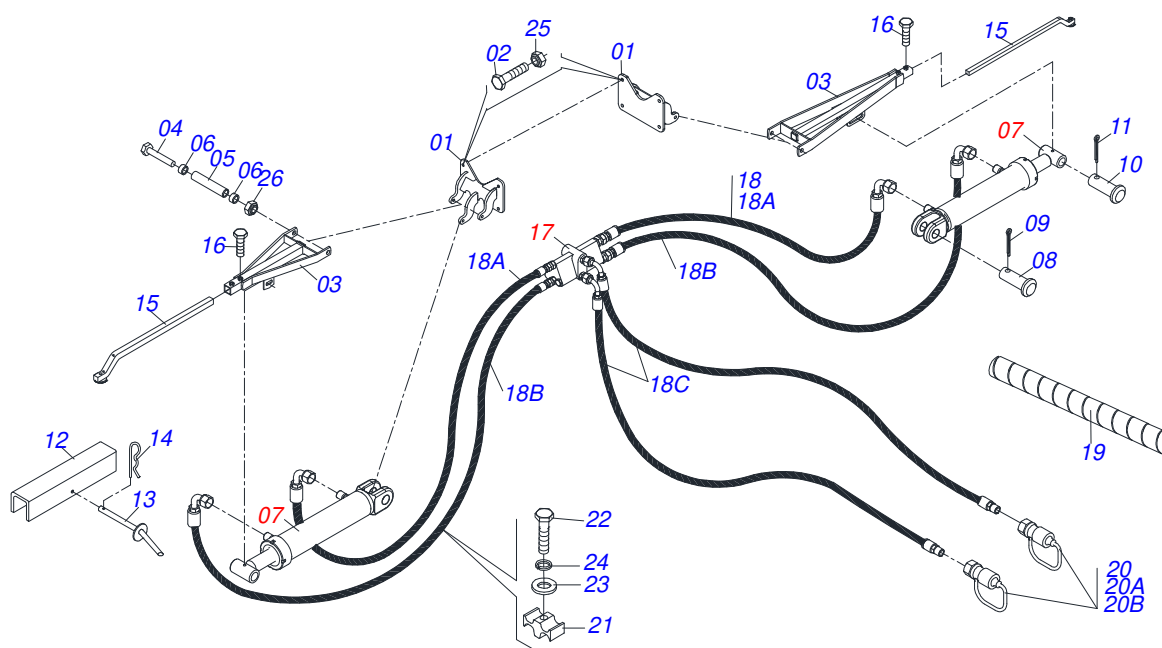 


Item	Code	Description	See page	QT
01	0511064067	HYDR SUPPORT MARKER ROW		02
02	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		08
03	0501069470	ROW MARKER ARM		02
04	0521061655	BOLT 5/8 UNC X 320 MM		02
05	0521017687	SPACING SLEEVE		02
06	0521010479	SLEEVE ARTICULATION		04
07	0511058449	HYDRAULIC CYLINDER	19	02
08	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
09	0503010523	1/4" X 2" COTTERPIN		02
10	0511015779	1" X 4.2" AXLE		02
11	0503010523	1/4" X 2" COTTERPIN		02
12	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
13	0501068994	0.3" X 3.1" LOCK PIN		02
14	0503030168	HAIR PIN		02
15	0501066949	1235 TURNBUCKLE		02
16	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
17	0501054649	SEQUENTIAL VALVE ASSY	20	01
18	0511057157	HYDRAULIC MARKER HANDLE ASSY		01
18A	0501080390	3/8" X 150" TR-TC HOSE ASSY		02
18B	0501080605	3/8" X 160" TR-TC HOSE ASSY		02
18C	0501080422	HOSE 3/8 X 4000 TC-TM		02
19	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		01
20	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	57	02
20A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
20B	0503011882	MALE QUICK COUPLER CAP		01
21	0502012702	BODY SUPPORT CLAMP		02
22	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
23	0501012803	FLAT WASHER		02
24	0503010180	7/16" SPRING WASHER		02
25	0503012412	5/8 UNC SELF LOCKING NUT		08
26	0503012412	5/8 UNC SELF LOCKING NUT		02




Item	Code	Description	See page	QT
27	0501012140	FLAT WASHER		04

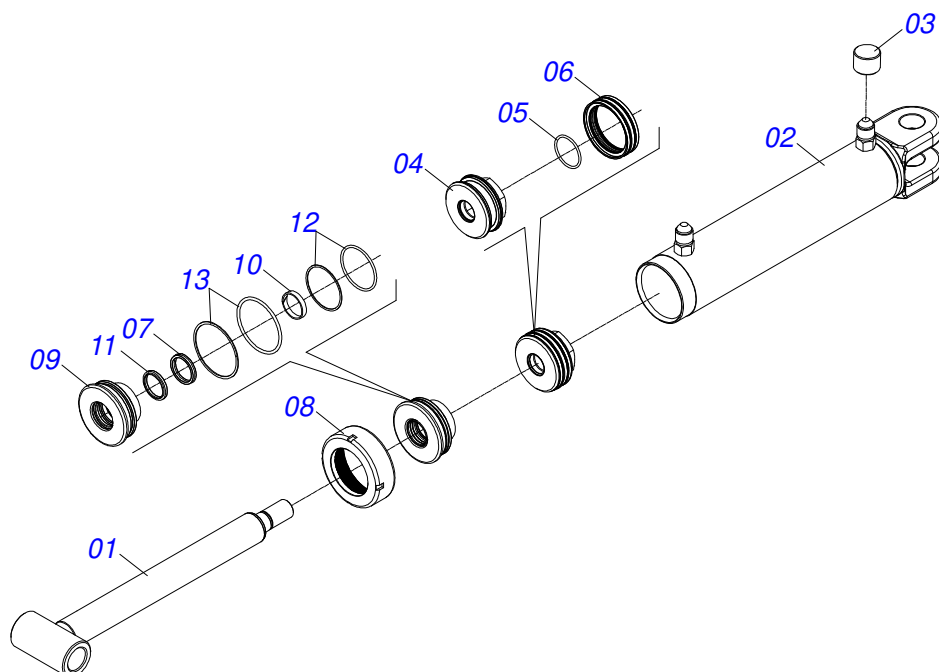 

Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02

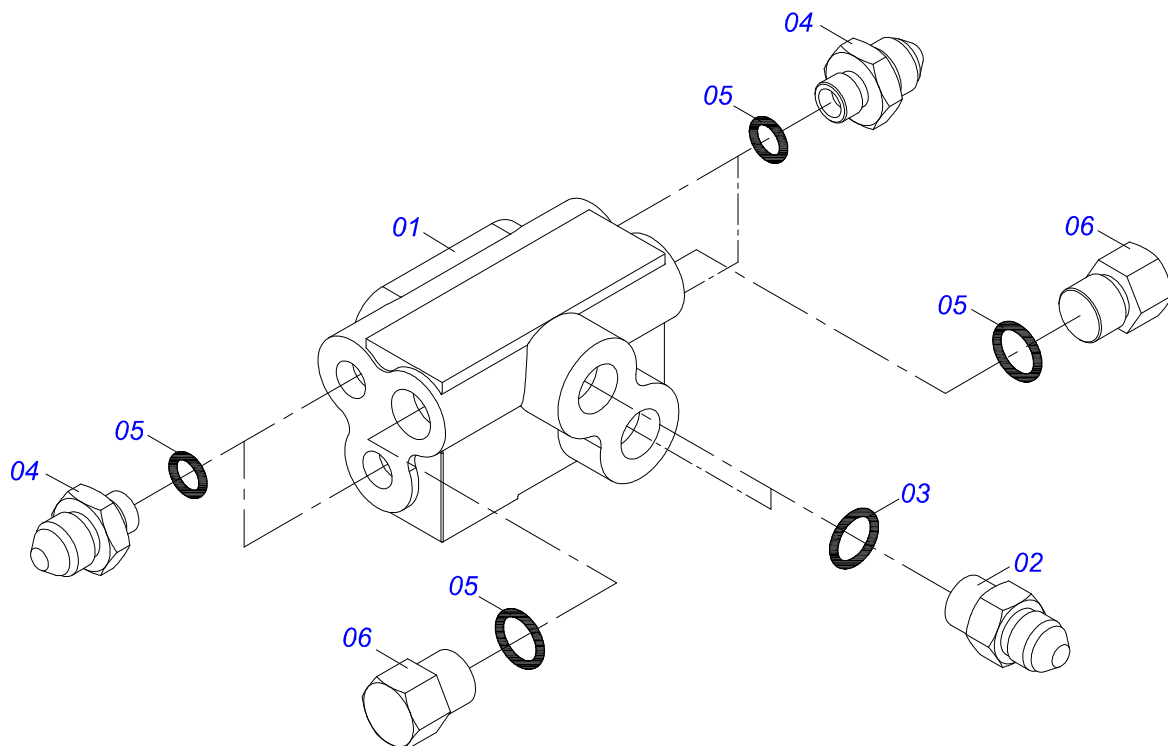 


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

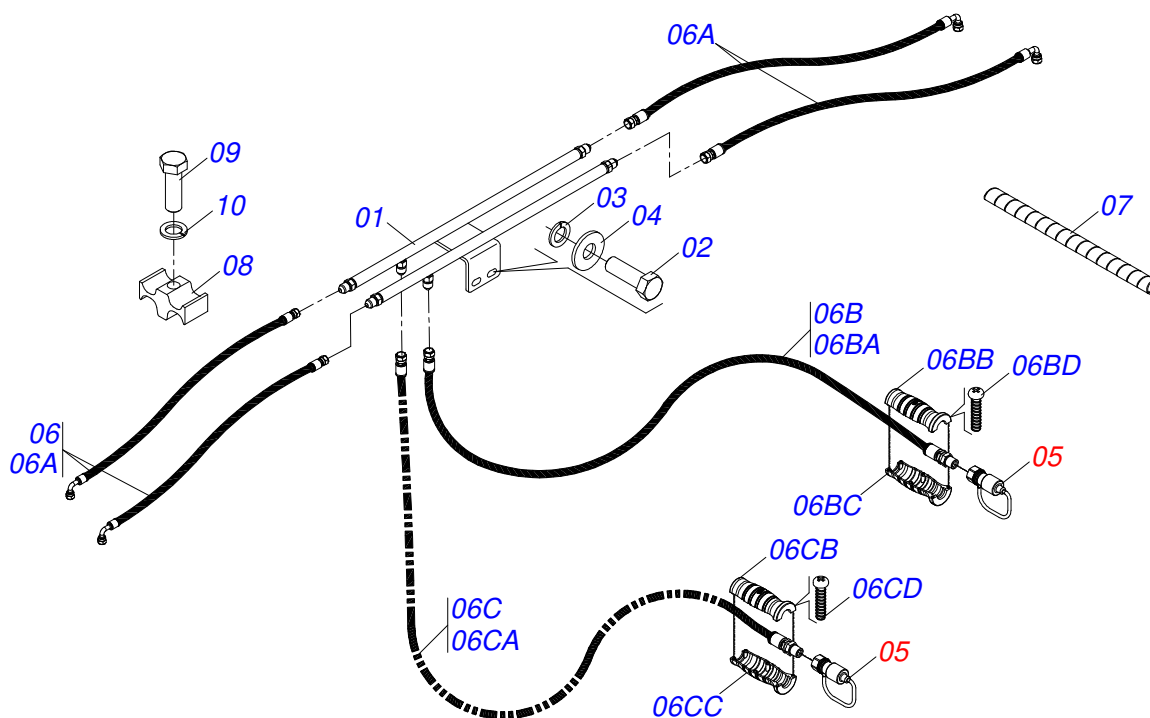 

Item	Code	Description	See page	QT
01	0511064465	OIL CONDUCTOR		01
02	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
03	0503010025	3/8" SPRING WASHER		02
04	0501010984	FLAT WASHER		02
05	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	57	02
06	0511057064	HOSE KIT SYSTEM HYDRAULIC		01
06A	0501080402	HOSE 3/8 X 1700 TR-TC		04
06B	0521052299	HOSE 1/2 X 4000 TR-TM BLACK / RED		01
06BA	0501080185	HOSE 1/2 X 4000 TR-TM		01
06BB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
06BC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
06BD	0503018952	PLASTIC BOLT		06
06C	0521052300	HOSE 1/2 X 4000 TR-TM BLACK / BLUE		01
06CA	0501080185	HOSE 1/2 X 4000 TR-TM		01
06CB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
06CC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
06CD	0503018952	PLASTIC BOLT		06
07	0581010729	SPRING PROTECTION PLASTIC HOSE 3/4 X 3800MM		01
08	0502012702	BODY SUPPORT CLAMP		04
09	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
10	0503010180	7/16" SPRING WASHER		04

HANDRAIL ASSY

 
0511054657

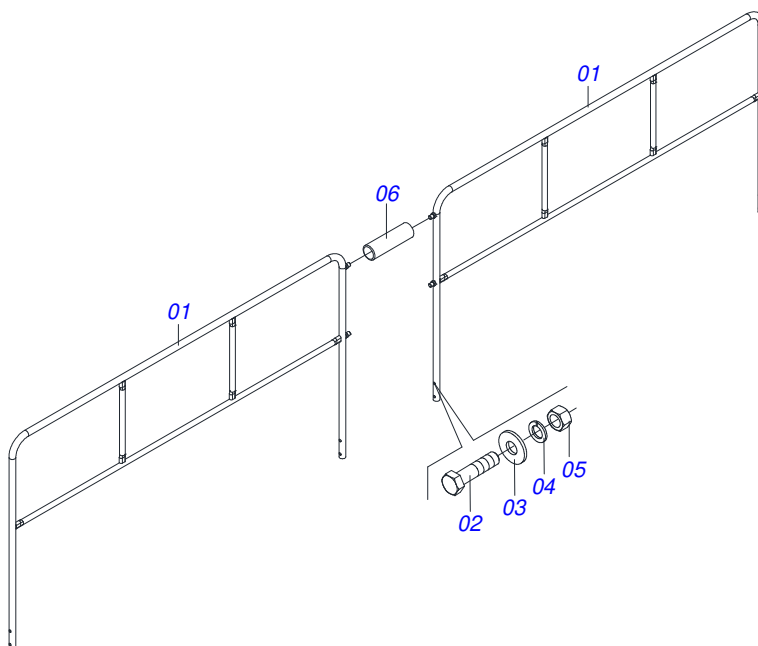


Item	Code	Description	See page	QT
01	0521067214	HANDRAIL - 4845		02
02	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
03	0511017302	FLAT WASHER		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0581012447	TUBE		02

ASSY LADDER

 0511053356

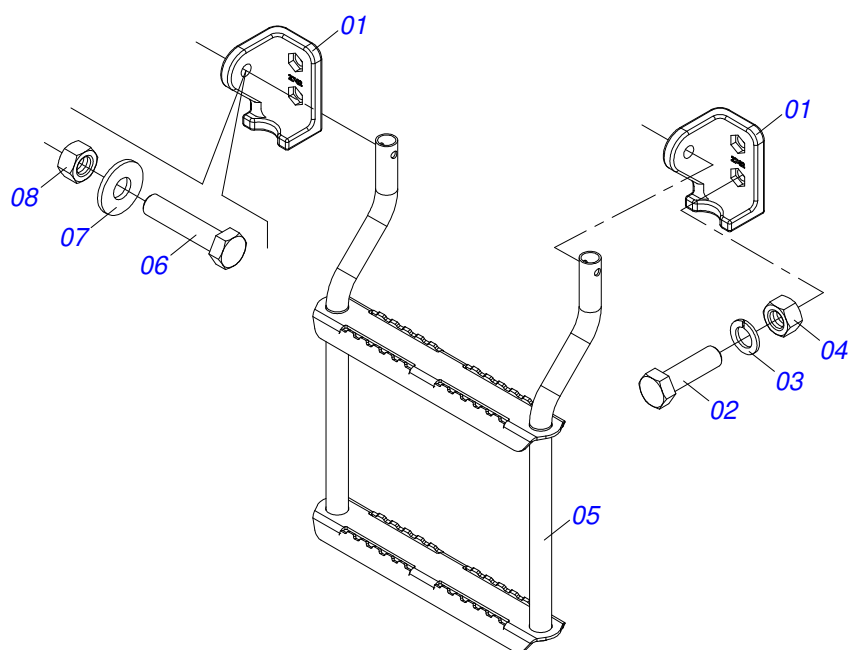


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER		04
02	0503010237	3/8" X 1" BOLT		08
03	0503010025	3/8" SPRING WASHER		08
04	0503010026	3/8" NUT		08
05	0511069636	LADDER		02
06	0503011179	3/8" X 2-1/4" BOLT		04
07	0501010984	FLAT WASHER		04
08	0503013357	3/8" SELF-ADJUSTING NUT		04

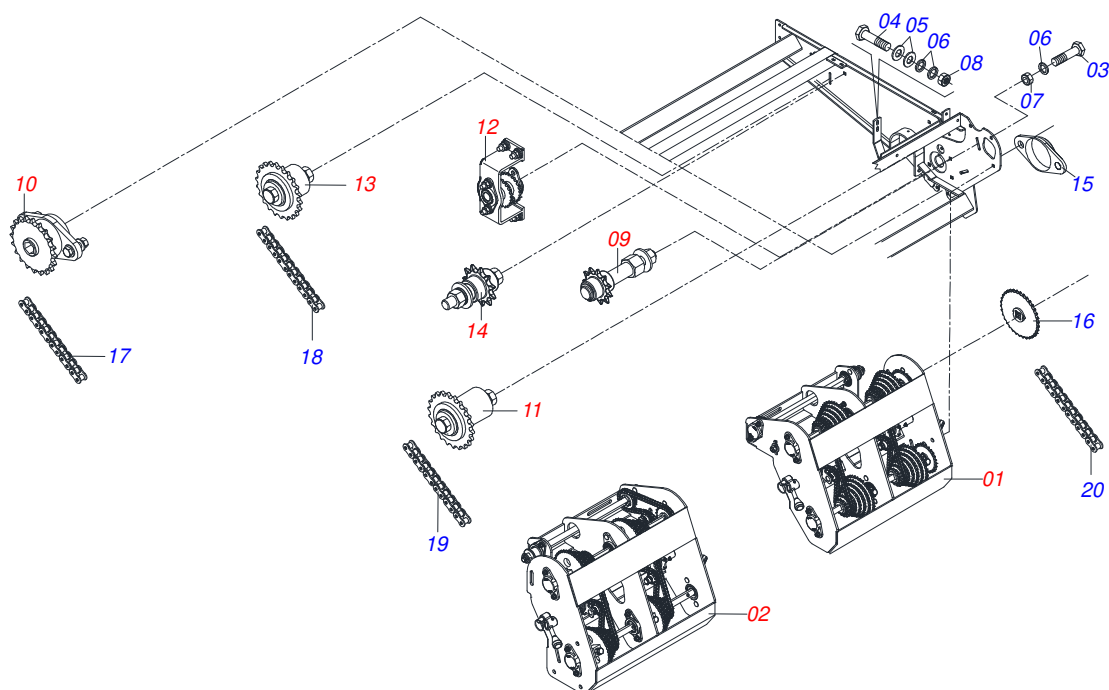 


Item	Code	Description	See page	QT
01	0521050183	RIGHT GEAR BOX ASSY	25	01
02	0521050184	EXCHANGE LEFT ASSY	34	01
03	0501010243	1/2" X 1-1/2" BOLT		06
04	0503010920	1/2" X 1.1/2" BOLT		04
05	0511017302	FLAT WASHER		08
06	0503010019	1/2" SPRING WASHER		10
07	0503012682	1/2" BSW NUT		06
08	0503010060	1/2" NUT		04
09	0501052810	TRANSMISSION CHAIN TENSIONER ASSY	36	02
10	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	37	02
11	0511050125	BEARING WITH 17Z GEAR	39	02
12	0511050126	MIDDLE BEARING TRANSMISSION	40	02
13	0511050127	CHAIN TENSIONER SUPPORT	41	02
14	0501055112	MICRO GRANULATED CHAIN TENSIONER	42	02
15	0561014215	BEARING COVER LOWER ROW FRAME		02
16	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		02
17	0503013073	40-1 CHAIN X 75 LINK + MENDING		02
18	0503013114	40-1 CHAIN X 89 LINK + MENDING		02
19	0503012390	40-1 CHAIN X 93 LINK + MENDING		02
20	0503013074	40-1 CHAIN X 130 LINK + REDUCION		02

RIGHT GEAR BOX ASSY

 
0521050183

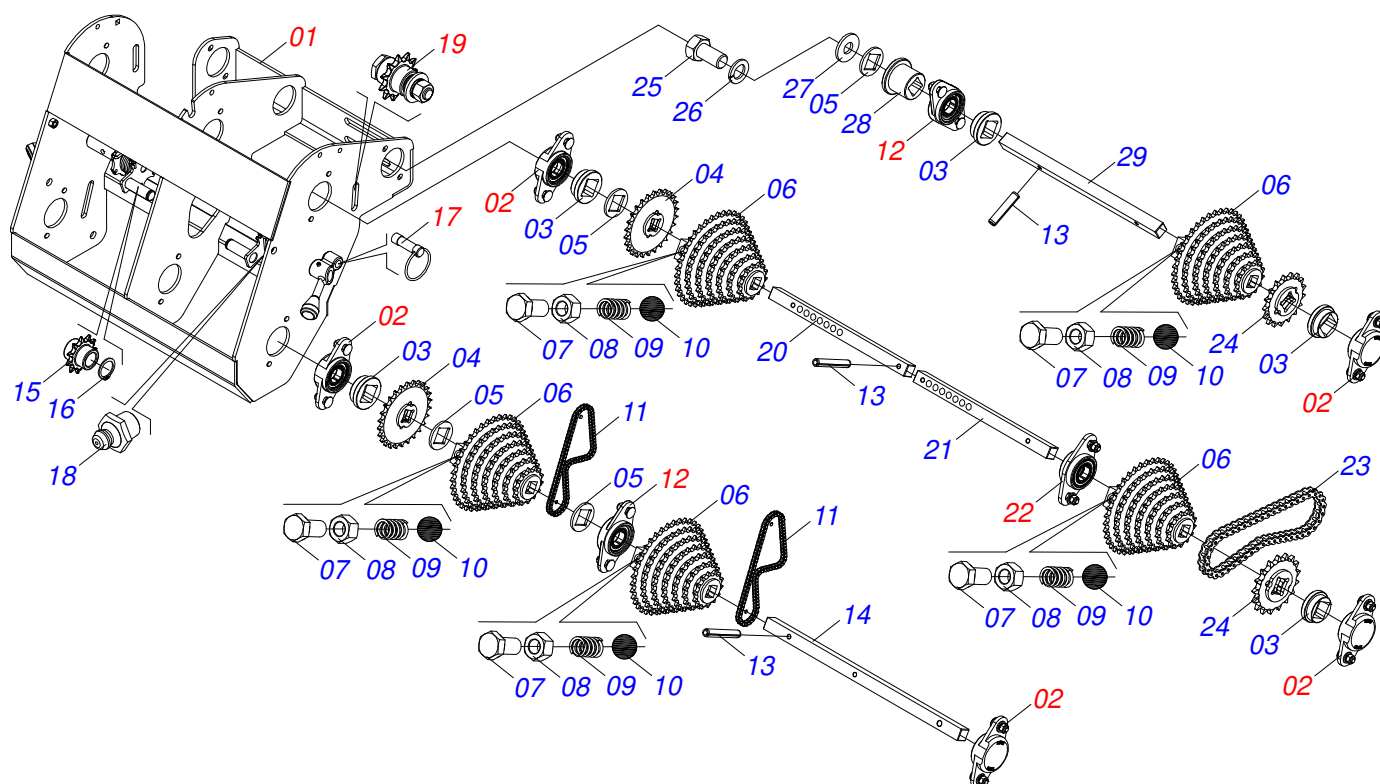


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	26	01
02	0511059266	CLOSED BEARING	27	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN AXLE CONE		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2" NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	BEARING ASSY GEAR BOX	29	02
13	0503010292	0.2" X 1.6" SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH LINK ASSY	31	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	32	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	33	01
23	0503012706	40-1 CHAIN X 47 LINK + MENDING		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8" SPRING WASHER		01
27	0501010984	FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

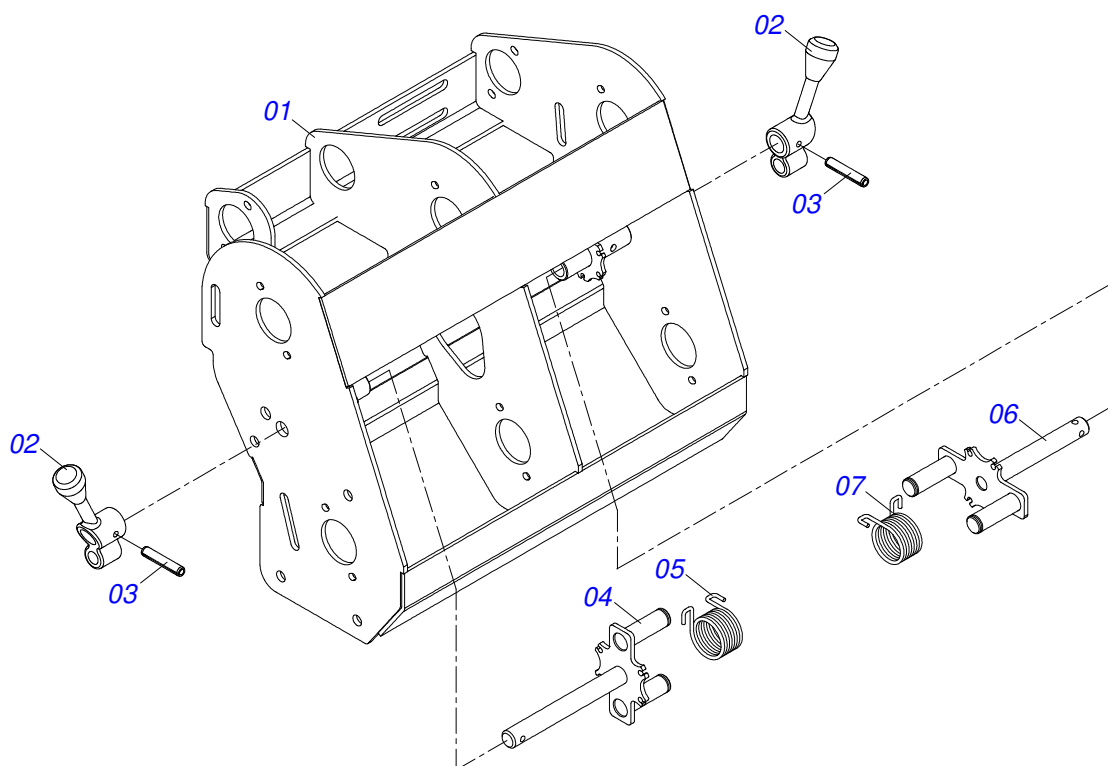 


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX	01	
02	0502011758	REAR TENSIONER LEVER	02	
03	0503010292	0.2" X 1.6" SPRING PIN	02	
04	0511061794	CHAIN TENSIONER	01	
05	0503031367	SPRING	01	
06	0511060392	CHAIN TENSIONER	01	
07	0503031366	RIGHT TWISTED SPRING RECAMBIO	01	

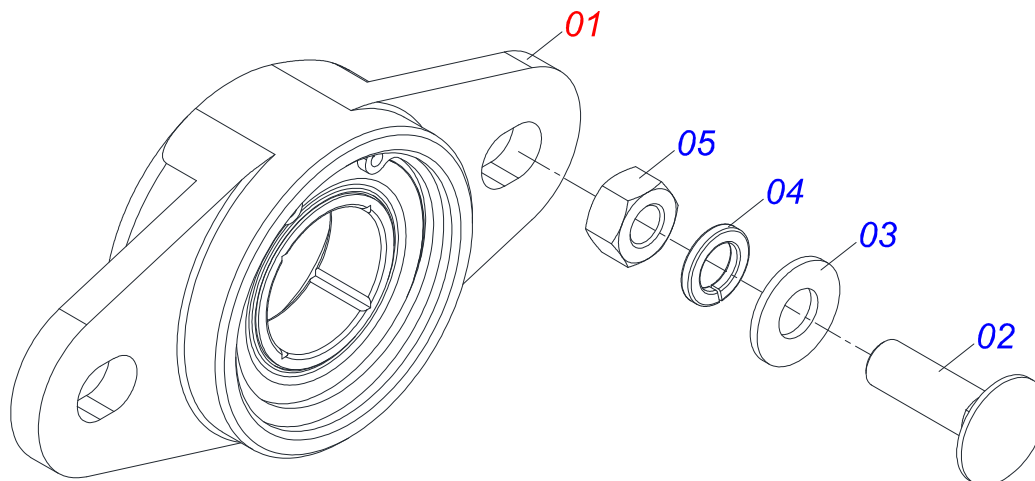 


Item	Code	Description	See page	QT
01	0501056271	BEARING CLOSED	28	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

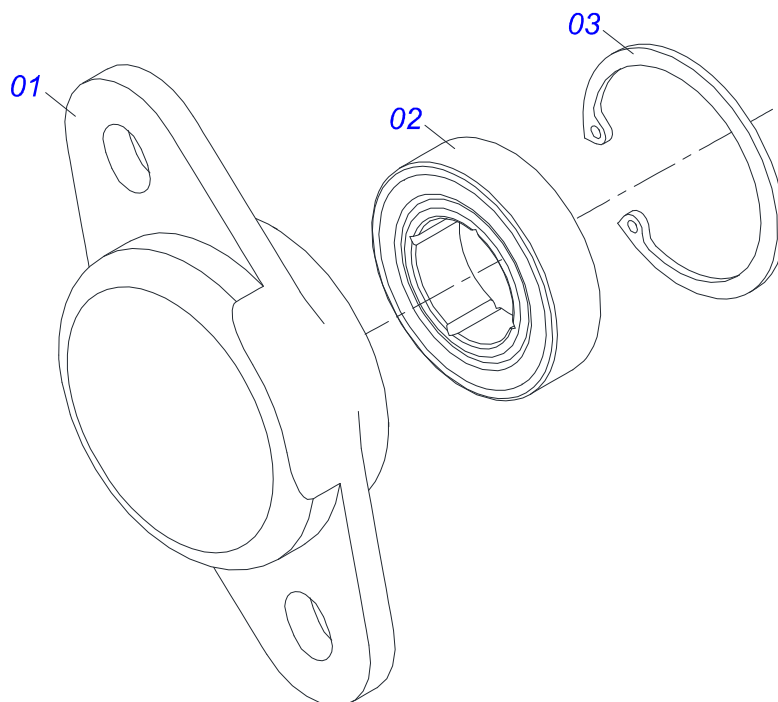 


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

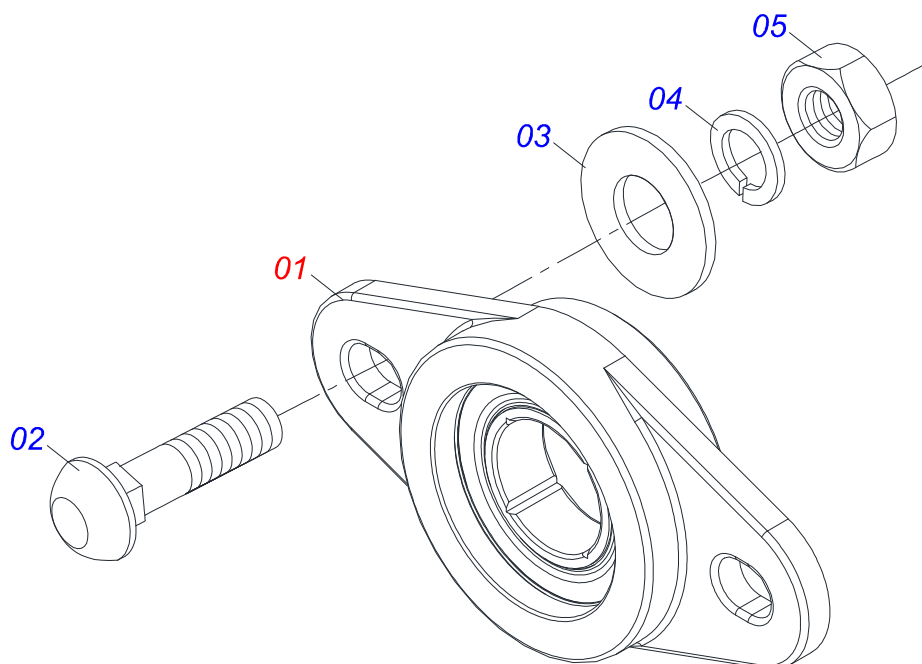 


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	30	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

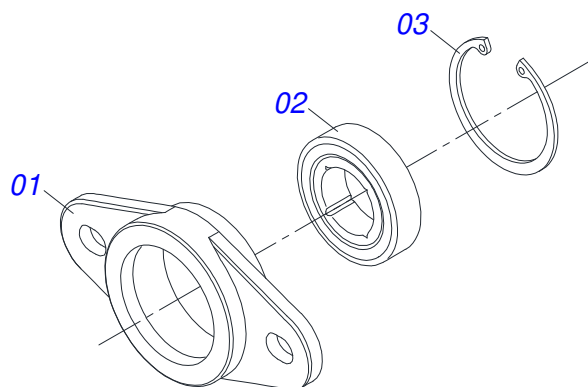 


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

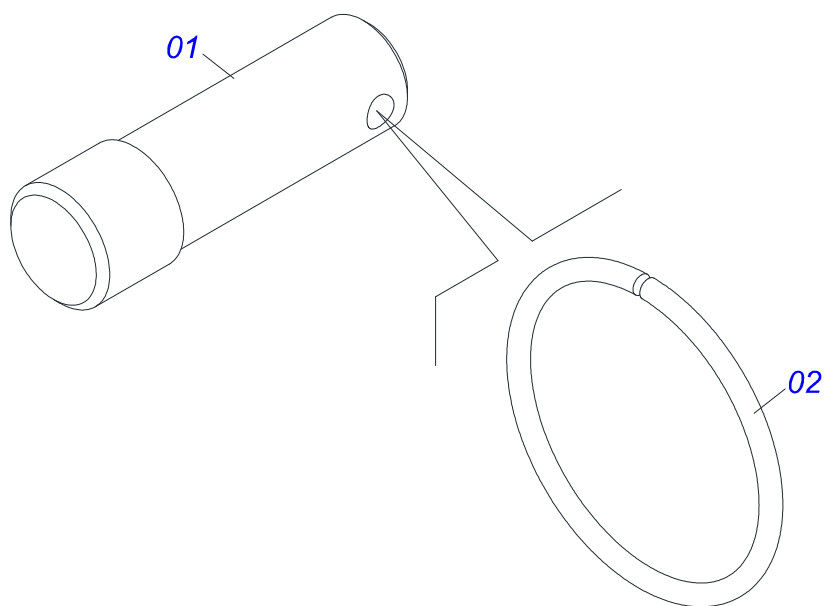 

Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

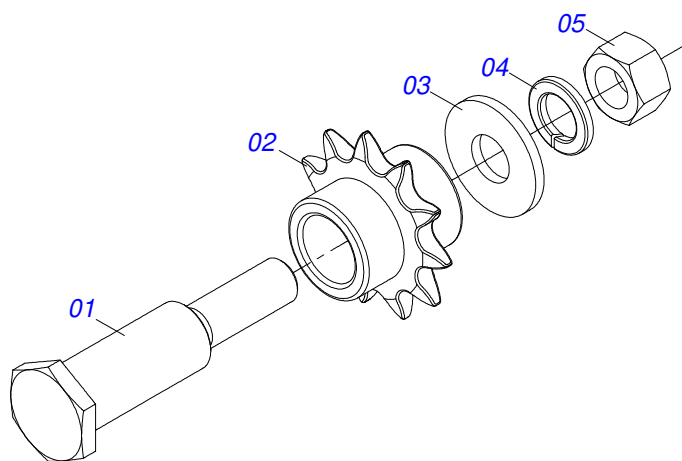 


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	1 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

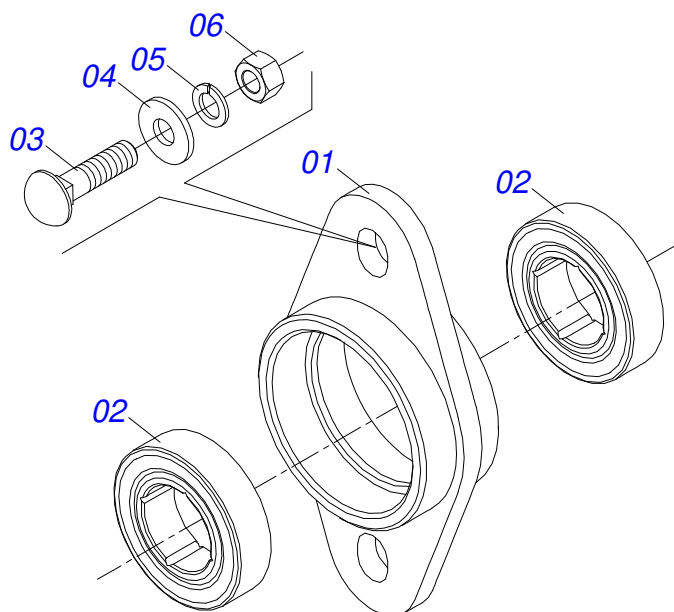 

Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
05	0503010179	5/16" ZN SPRING WASHER		02
06	0503010337	5/16" NUT		02

EXCHANGE LEFT ASSY

 
0521050184

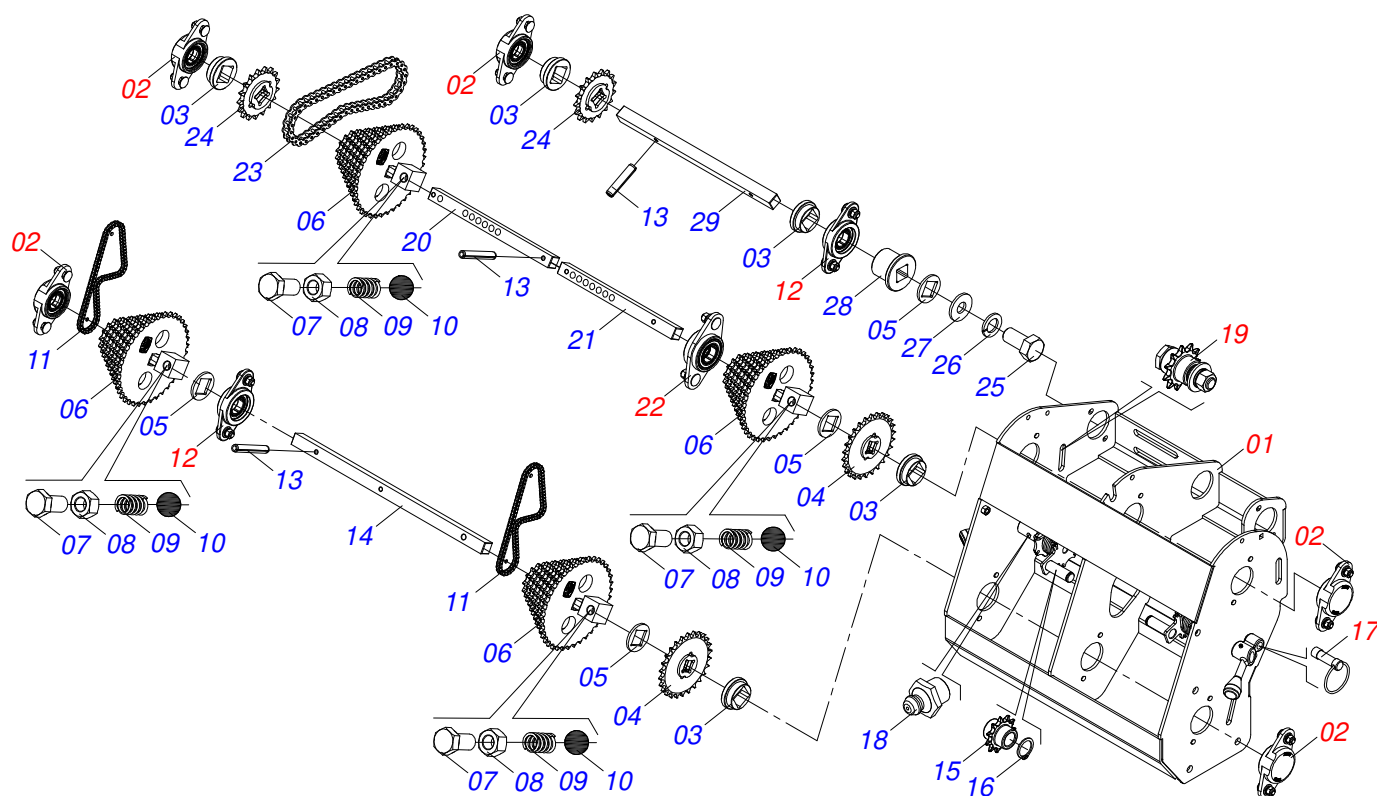


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	35	01
02	0511059266	CLOSED BEARING	27	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN AXLE CONE		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2" NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	BEARING ASSY GEAR BOX	29	02
13	0503010292	0.2" X 1.6" SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH LINK ASSY	31	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	32	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	33	01
23	0503012706	40-1 CHAIN X 47 LINK + MENDING		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8" SPRING WASHER		01
27	0501010984	FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

LH GEAR BOX

 
0501058213

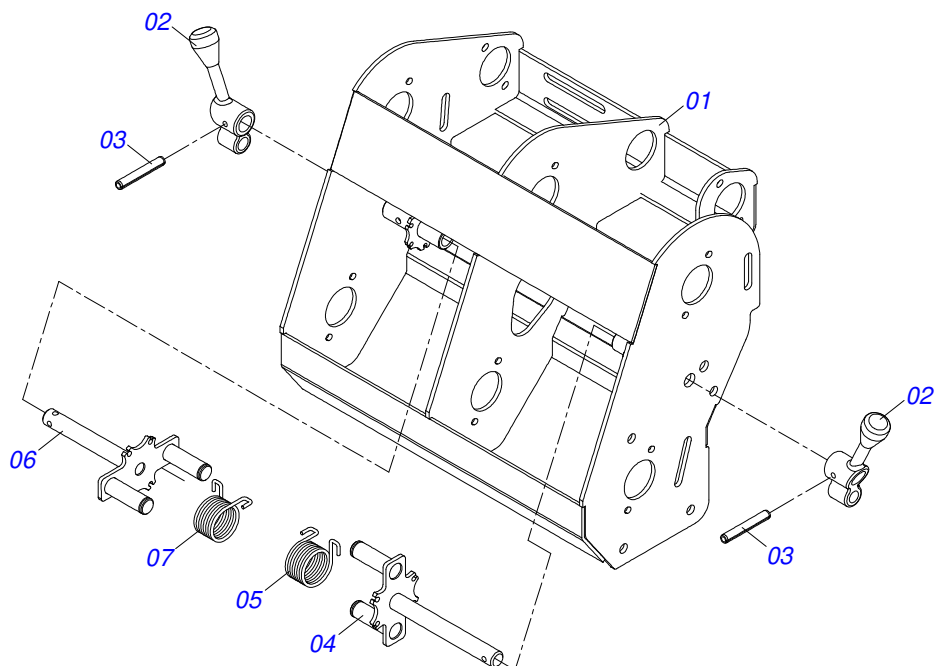


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

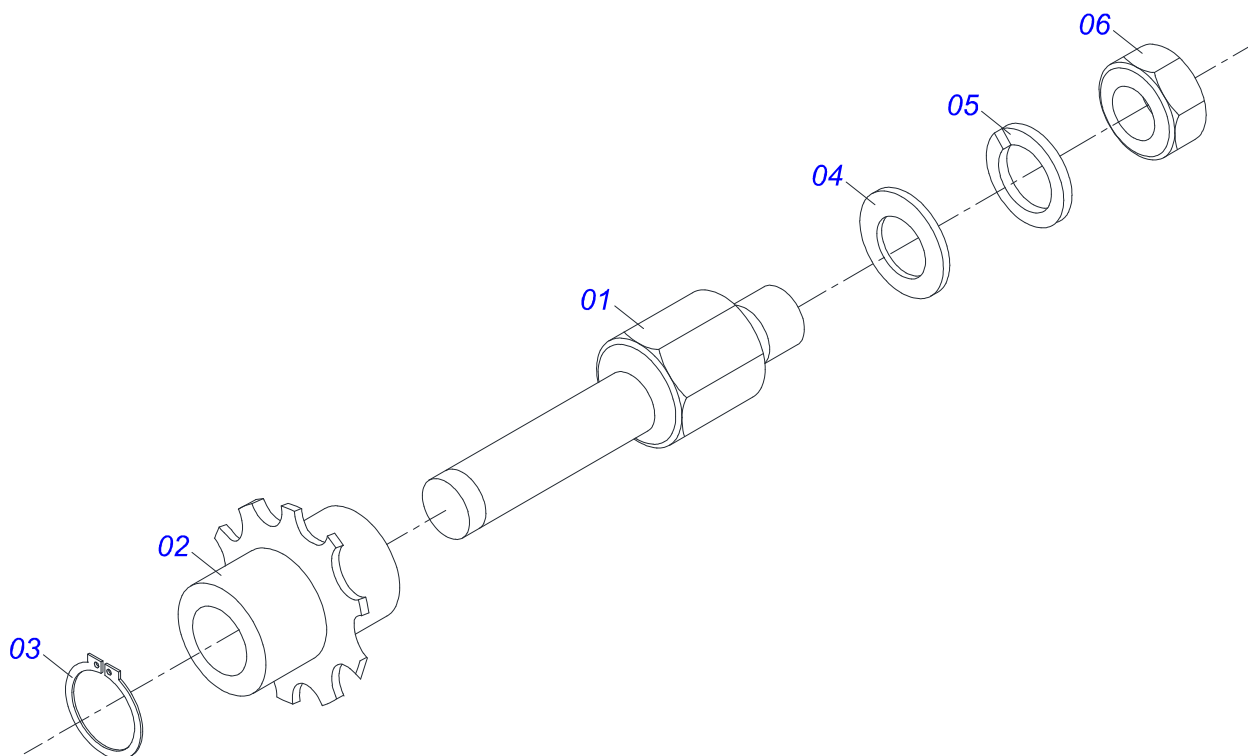 


Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

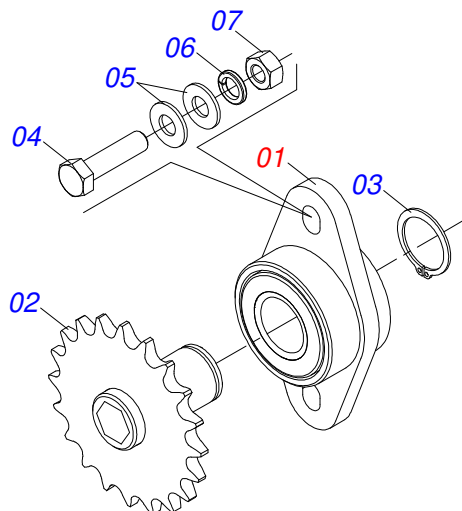 


Item	Code	Description	See page	QT
01	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	38	01
02	0511063106	20Z AXLE BEARING DOBLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0503010365	NUT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02

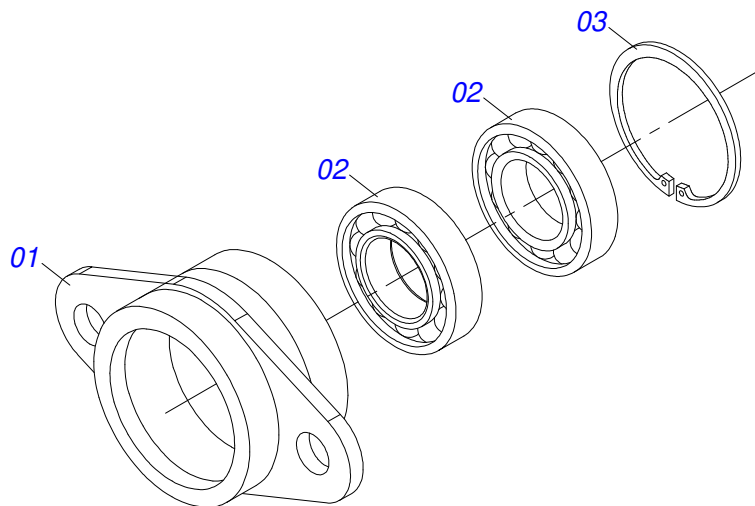 


Item	Code	Description	See page	QT
01	0502011987	DOUBLE HOUSING BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01

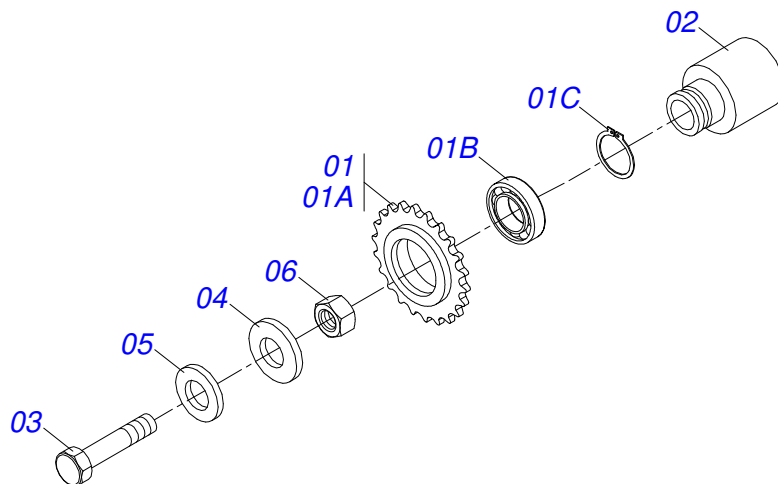 


Item	Code	Description	See page	QT
01	0501056573	17Z GEAR ASSY		01
01A	0502012367	17Z X P 1/2" GEAR INTERM		01
01B	0503012882	BEARING		01
01C	0503011945	503050 CLAMPING RING (FOR AXLE)		01
02	0521010454	0.83" X 1.25" X 0.79" SLEEVE		01
03	0503010741	1/2" X 2-3/4" BOLT		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

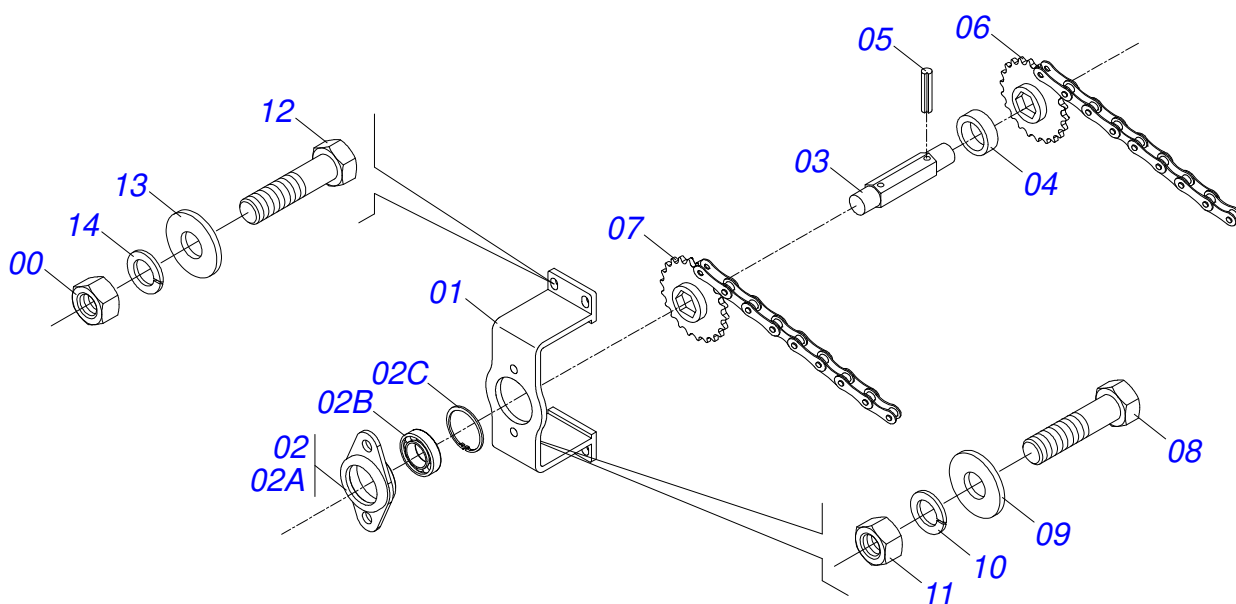 


Item	Code	Description	See page	QT
01	0511063266	INTERMEDIARY BEARING SUPPORT		01
02	0501052759	BEARING OF THE GEAR BOX ASSY		02
02A	0502011697	BEARING OF THE GEAR BOX		01
02B	0503011410	ROLLER BEARING		01
02C	0503011105	SEAL RING		01
03	0531013674	INTERMEDIATE AXLE		01
04	0541011184	1.1" X 2" X 0.7" SLEEVE		01
05	0503010292	0.2" X 1.6" SPRING PIN		02
06	0511063268	20Z P1/2" GEAR FOR HEX AXLE, 1"		01
07	0511063267	26Z P1/2" GEAR FOR HEX AXLE, 1"		01
08	0503010371	5/16" X 1" BOLT		02
09	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
10	0503010179	5/16" ZN SPRING WASHER		02
11	0503010337	5/16" NUT		02
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		06
13	0501010984	FLAT WASHER		06
14	0503010025	3/8" SPRING WASHER		06
15	0503010026	3/8" NUT		06

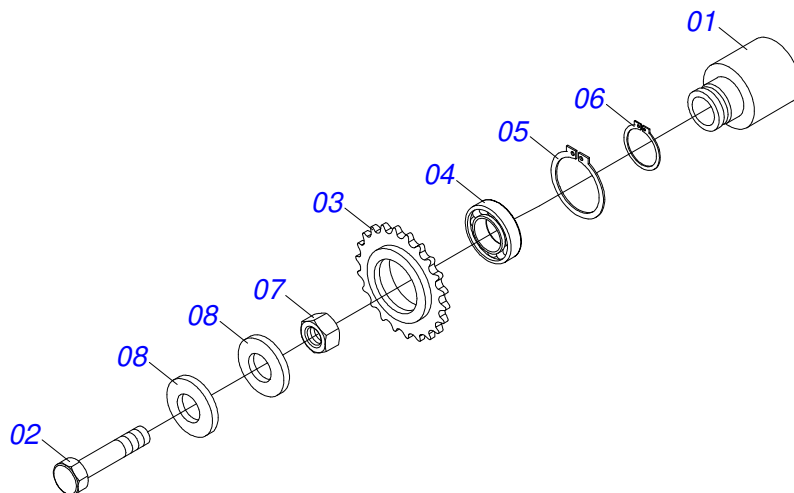 

Item	Code	Description	See page	QT
01	0561015677	CHAIN TIGHTENER AXLE		01
02	0501010452	5/8" X 5" BOLT		01
03	0511062169	21Z P 1/2" GEAR		01
04	0503011410	ROLLER BEARING		01
05	0503011105	SEAL RING		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01
08	0501012140	FLAT WASHER		02

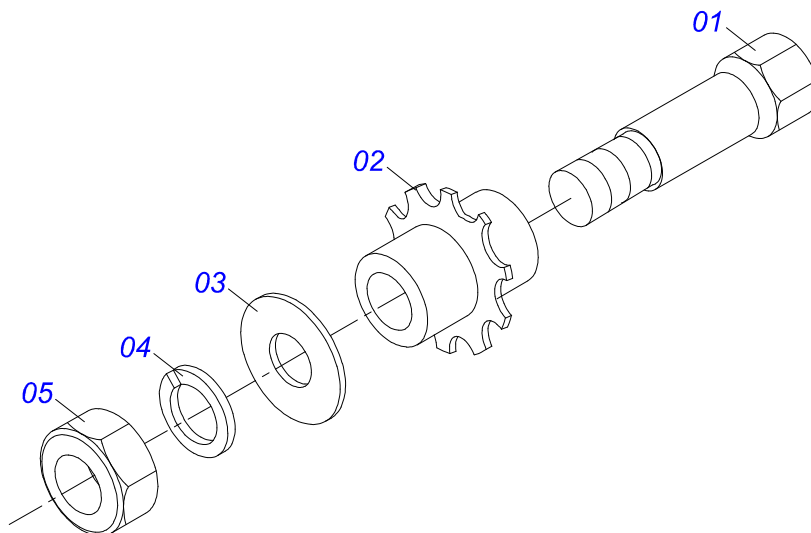 


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

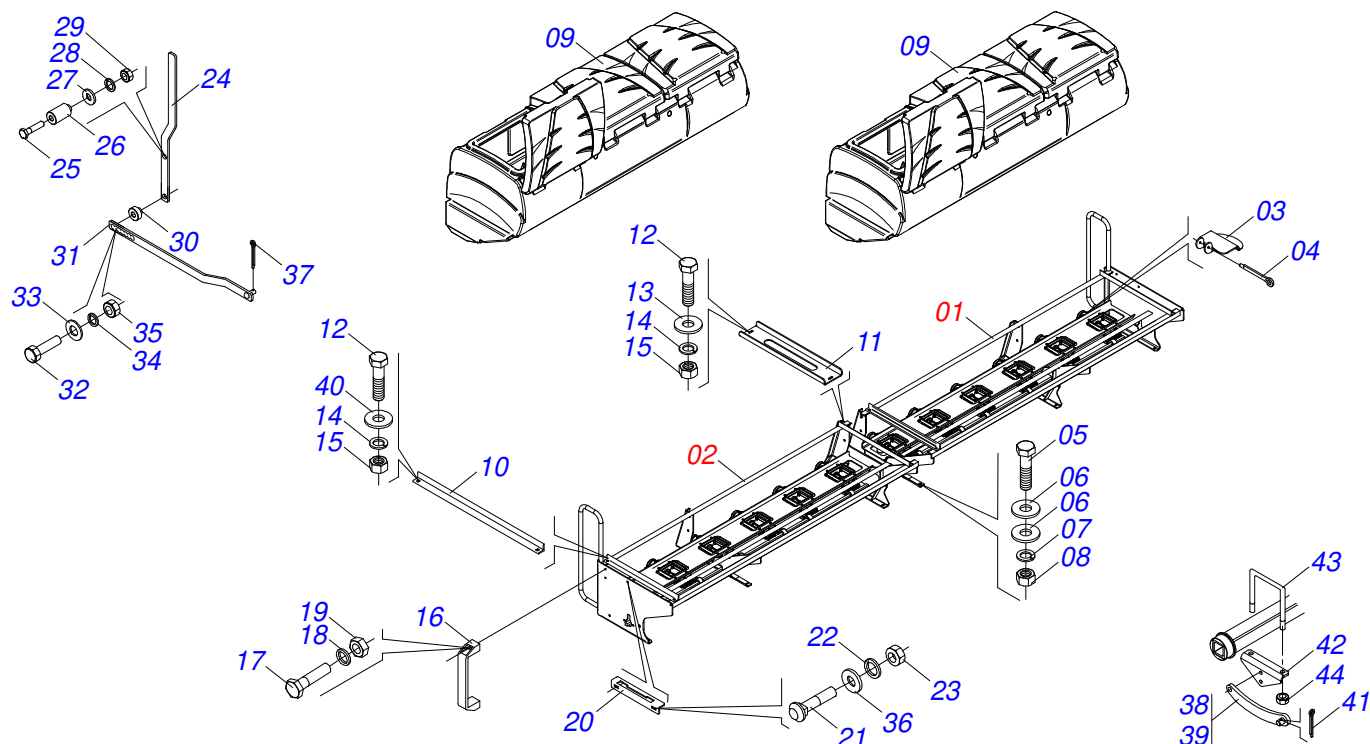 


Item	Code	Description	See page	QT
01	0511058575	BEAM RIGHT SUPPORT WITH FERTILIZER 44 DISTRIBUTOR	01	01
02	0511058576	SILO LEFT SUPPORT WITH FERTILIZER 45 DISTRIBUTOR	01	01
03	0571010590	FERTILIZER SIDE COVER	12	12
04	0503010362	1/8" X 1.1/4" COTTERPIN	12	12
05	0503010849	3/8" X 1-1/2" BOLT	12	12
06	0501010984	FLAT WASHER	24	24
07	0503010025	3/8" SPRING WASHER	12	12
08	0503010026	3/8" NUT	12	12
09	0503062169	SILO FERTILIZER 6 MOUTHS MOUNTED	02	02
10	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE	04	04
11	0581010029	FERTILIZER BEAM CLAMP	01	01
12	0503010849	3/8" X 1-1/2" BOLT	06	06
13	0501010984	FLAT WASHER	12	12
14	0503010025	3/8" SPRING WASHER	06	06
15	0503010026	3/8" NUT	06	06
16	0503011957	NYLON LUG	02	02
17	0503010371	5/16" X 1" BOLT	04	04
18	0503010179	5/16" ZN SPRING WASHER	04	04
19	0503010337	5/16" NUT	04	04
20	0551019156	GEAR BOX LEVER LOCK	02	02
21	0503011953	5/16" X 1" BOLT	04	04
22	0503010179	5/16" ZN SPRING WASHER	04	04
23	0503010337	5/16" NUT	04	04
24	0561016800	ARM/DISARMMENT LEVER	02	02
25	0503010479	BOLT	02	02
26	0561016798	ASSEMBLE AND DISASSEMBLE LEVER SLEEVE	02	02
27	0511017302	FLAT WASHER	02	02
28	0503010019	1/2" SPRING WASHER	02	02
29	0503010060	1/2" NUT	02	02
30	0561016797	SLEEVE UNION LEVER	02	02


Item	Code	Description	See page	QT
31	0521061741	INNTER LEVER		02
32	0503011082	C1/2" X 1.3/4" SCREW		02
33	0511017302	FLAT WASHER		04
34	0503010019	1/2" SPRING WASHER		02
35	0503010060	1/2" NUT		02
36	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
37	0503010140	1/8" X 3/4" COTTERPIN		02
38	0521061742	RH LOWER LEVER		01
39	0521061743	LH LOWER LEVER		01
40	0501010984	FLAT WASHER		04
41	0503010140	1/8" X 3/4" COTTERPIN		04
42	0551019159	LEVER FIXER BODY		02
43	0561016468	FASTENER		02
44	0503011336	1/2" HEX SELF ADJUSTING NUT		04

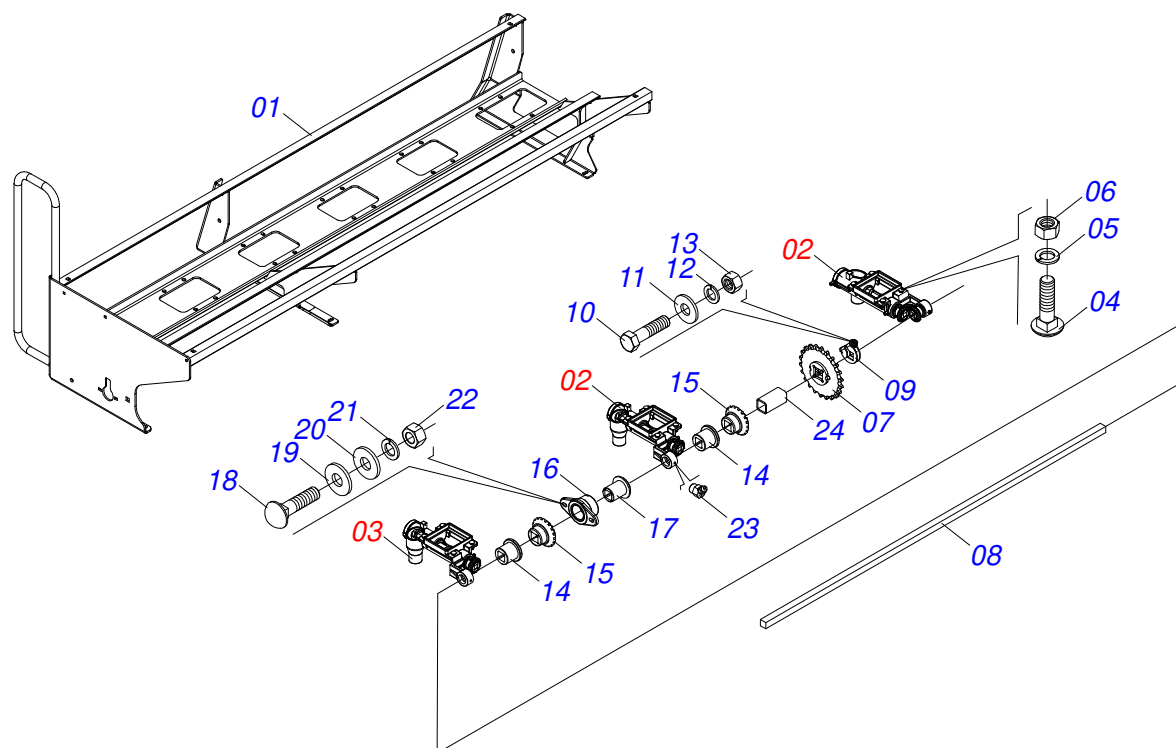 


Item	Code	Description	See page	QT
01	0521066510	FERTILIZER BEAM SUPPORT		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	46	04
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	47	02
04	0501010942	3/8" X 1-1/4" BOLT		24
05	0503011443	3/8" SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0551013506	AXLE Q 3/4 X 2290 11L CPD		01
09	0521010691	AXLE FASTENER		02
10	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
11	0511017303	FLAT WASHER		02
12	0503011441	SPRING WASHER		02
13	0503010144	1/4" NUT		02
14	0503030275	AGRICULTURAL BEARING		06
15	1902010685	18Z CONICAL GEAR		06
16	0501110392	SILO SUPPORT BEARING		01
17	0521012485	GEAR BOX BEARING AGRICUTURAL		01
18	0503011953	5/16" X 1" BOLT		02
19	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
20	0521011039	FLAT WASHER		02
21	0503011444	SPRING WASHER		02
22	0503010337	5/16" NUT		02
23	0503010003	1845 GREASE FITTING		01
24	0551018055	22,65 X 60 SLEEVE		02

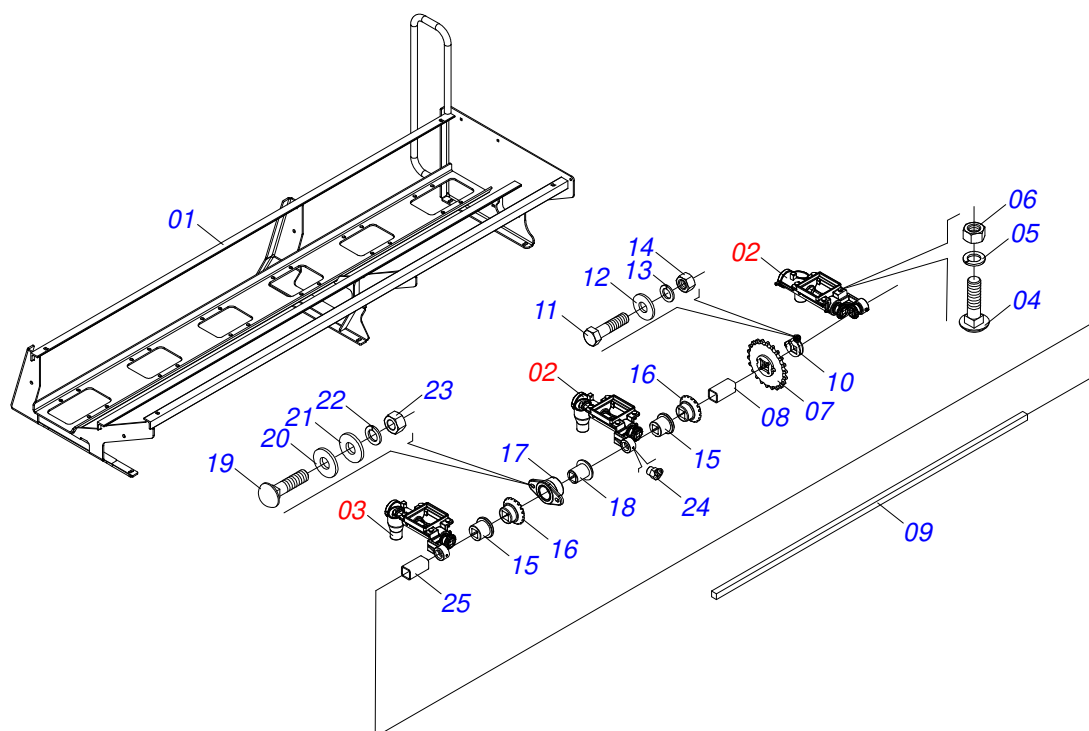 

Item	Code	Description	See page	QT
01	0521066509	FERTILIZER BEAM SUPPORT		01
02	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	46	02
03	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	47	04
04	0501010942	3/8" X 1-1/4" BOLT		24
05	0503011443	3/8" SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0551018055	22,65 X 60 SLEEVE		02
09	0551013506	AXLE Q 3/4 X 2290 11L CPD		01
10	0521010691	AXLE FASTENER		02
11	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
12	0511017303	FLAT WASHER		02
13	0503011441	SPRING WASHER		02
14	0503010144	1/4" NUT		02
15	0503030275	AGRICULTURAL BEARING		06
16	1902010685	18Z CONICAL GEAR		06
17	0501110392	SILO SUPPORT BEARING		01
18	0521012485	GEAR BOX BEARING AGRICUTURAL		01
19	0503011953	5/16" X 1" BOLT		02
20	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
21	0521011039	FLAT WASHER		02
22	0503011444	SPRING WASHER		02
23	0503010337	5/16" NUT		02
24	0503010003	1845 GREASE FITTING		01
25	0551018055	22,65 X 60 SLEEVE		02

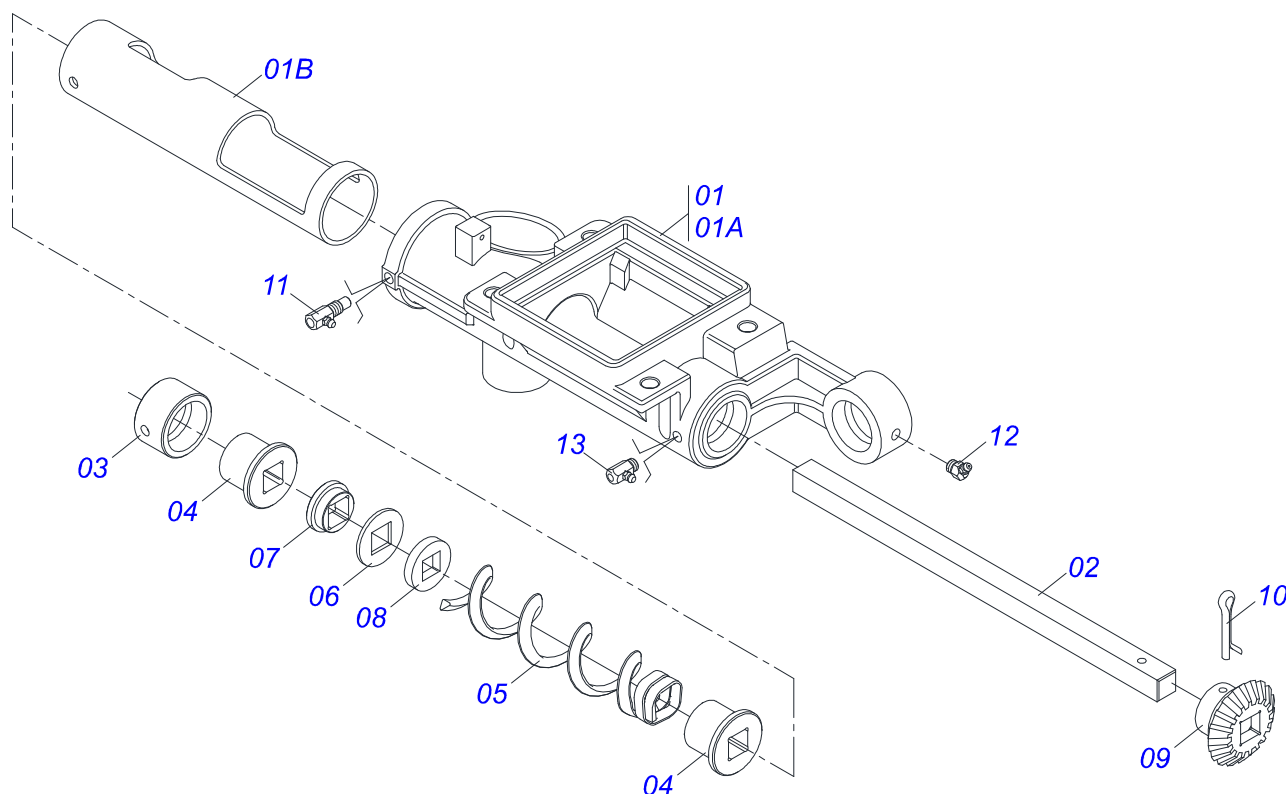 


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

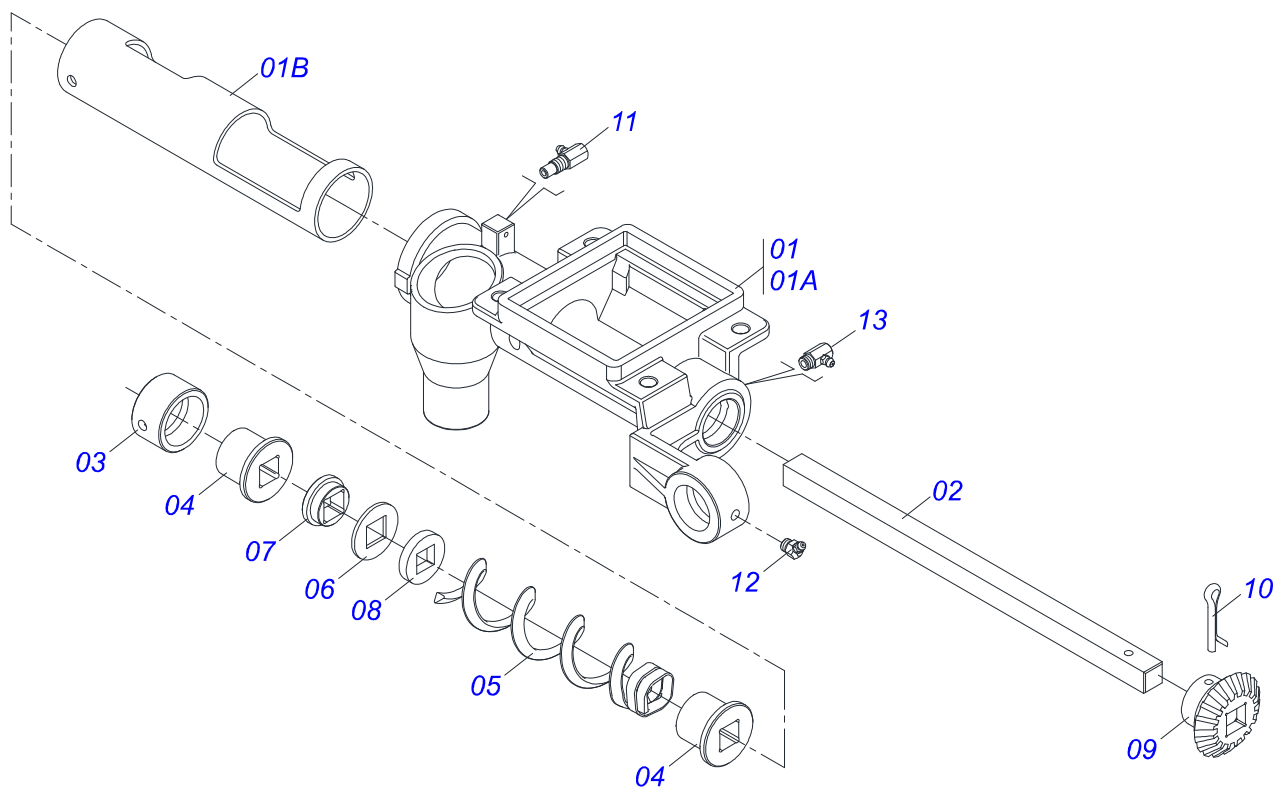 


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

DRAWBAR

 
0511054660

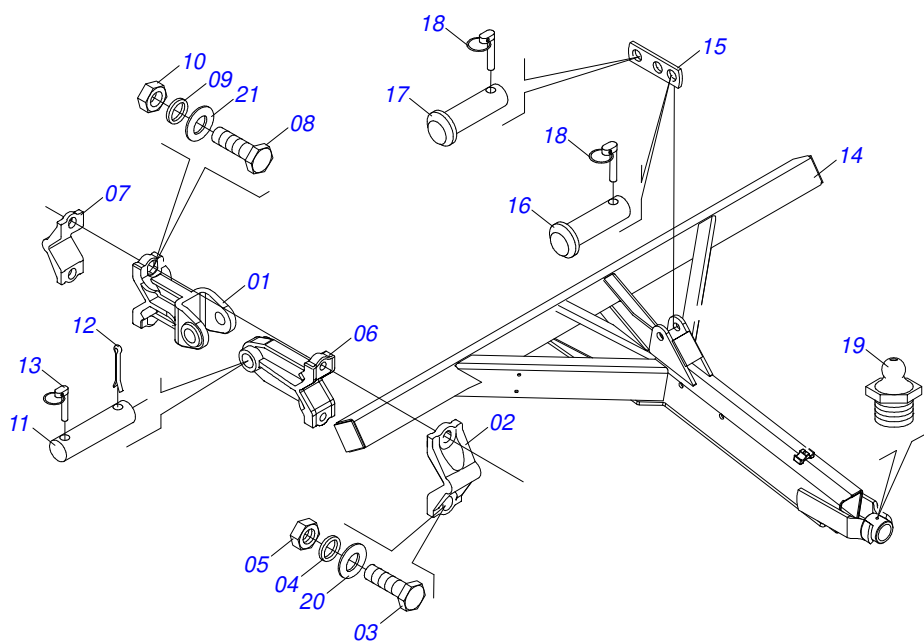

Item	Code	Description	See page	QT
01	0502012328	DRAWBAR SUPPORT FRONT FIXATION		04
02	0502012330	SUPPORT FIXER PIVOT		04
03	0503011084	3/4" X 5" BOLT		08
04	0503010023	3/4" SPRING WASHER		08
05	0503010014	3/4" NUT		08
06	0502012329	DRAWBAR FIXATION REAR SUPPORT		04
07	0502012330	SUPPORT FIXER PIVOT		04
08	0503011084	3/4" X 5" BOLT		08
09	0503010023	3/4" SPRING WASHER		08
10	0503010014	3/4" NUT		08
11	0561014393	COUPLING SHAFT		04
12	0503010523	1/4" X 2" COTTERPIN		04
13	0503030119	LOCK PIN		04
14	0511064808	DRAWBAR		01
15	0561019087	DRAWBAR TRANSPORT LOCK		01
16	0521010578	COUPLING SHAFT		01
17	0521010582	COUPLING SHAFT		01
18	0503030085	LOCK PIN		02
19	0503010002	1800 GREASE FITTING		01
20	0501010322	FLAT WASHER		08
21	0501010322	FLAT WASHER		08

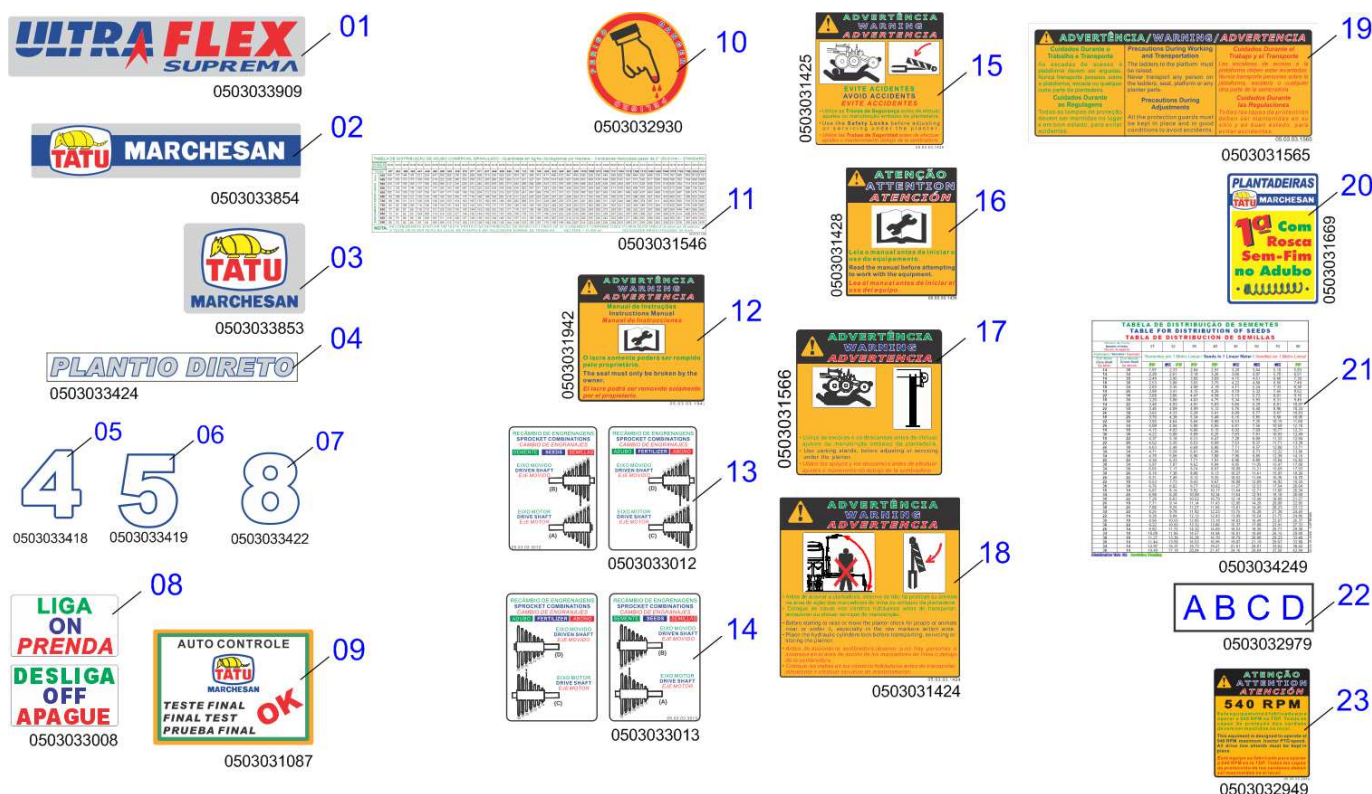 


Item	Code	Description	See page	QT
01	0503033909	ADHESIVE LABEL		03
02	0503033854	ADHESIVE LABEL		03
03	0503033853	ADHESIVE LABEL		02
04	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
05	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		04
06	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
07	0503033422	ADHESIVE LABEL		02
08	0503033008	ADHESIVE LABEL		02
09	0503031087	ADHESIVE LABEL		01
10	0503032930	ADHESIVE LABEL DANGER		06
11	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
12	0503031942	ADHESIVE LABEL		01
13	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
14	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
15	0503031425	ADHESIVE LABEL ATTENTION		02
16	0503031428	READ MANUAL DECAL		01
17	0503031566	ADHESIVE LABEL		02
18	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
19	0503031565	ADHESIVE LABEL CARE		02
20	0503031669	ADHESIVE LABEL		01
21	0503034249	ADHESIVE LABEL TABLE PLANTS		02
22	0503032979	ADHESIVE LABEL LETTERS A B C D		02
23	0503032949	ADHESIVE LABEL		01

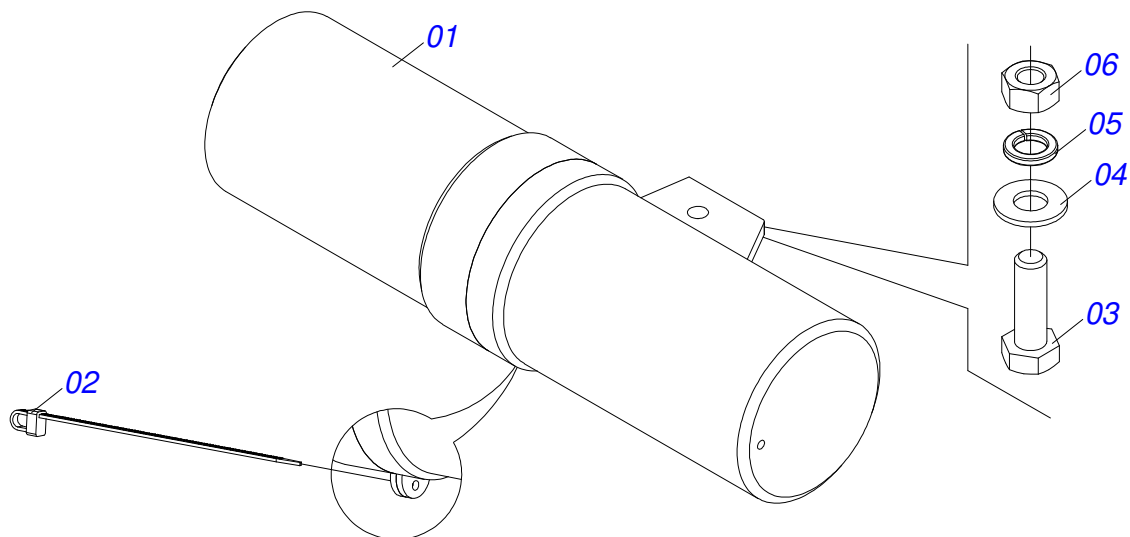 


Item	Code	Description	See page	QT
01	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
02	0503010267	NYLON CLAMP		01
03	0503010363	5/16" X 1" BOLT		01
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
05	0503010179	5/16" ZN SPRING WASHER		01
06	0503010337	5/16" NUT		01

RESTING ASSEMBLY

 
0511054971

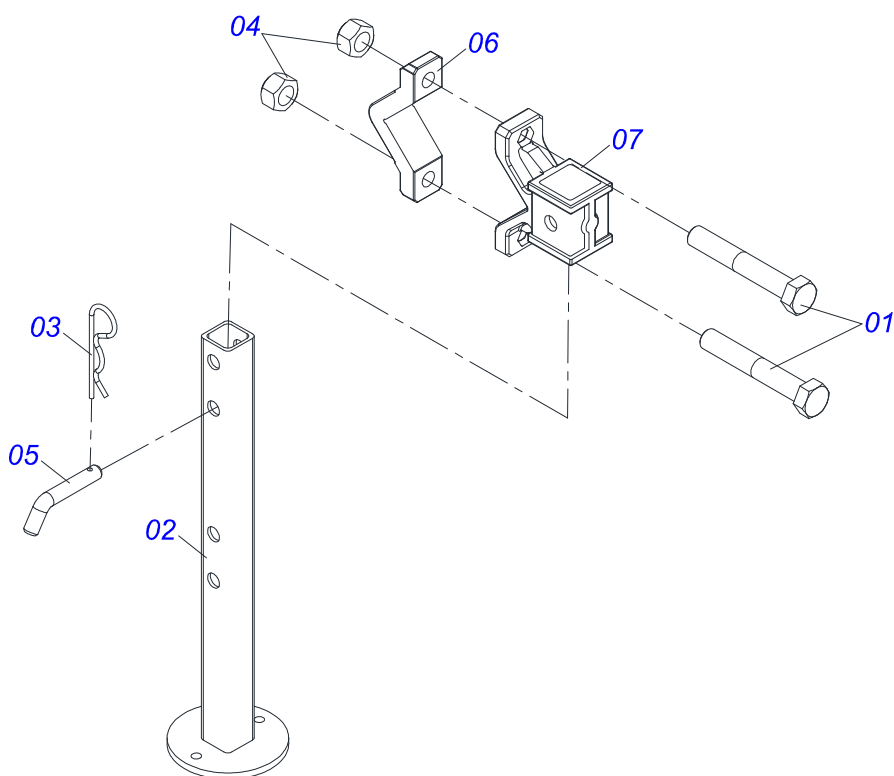


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

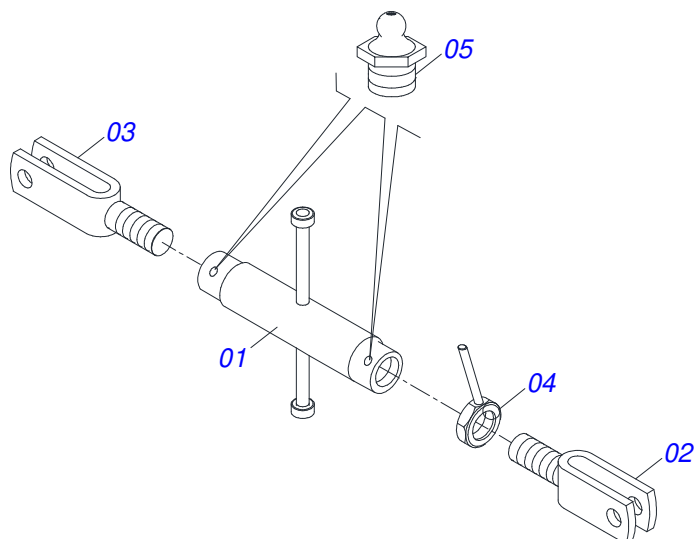 


Item	Code	Description	See page	QT
01	0501069529	653 TURNBUCKLE		01
02	0511062887	RIGHT TURNBUCKLE		01
03	0511062888	LH TURNBUCKLE		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

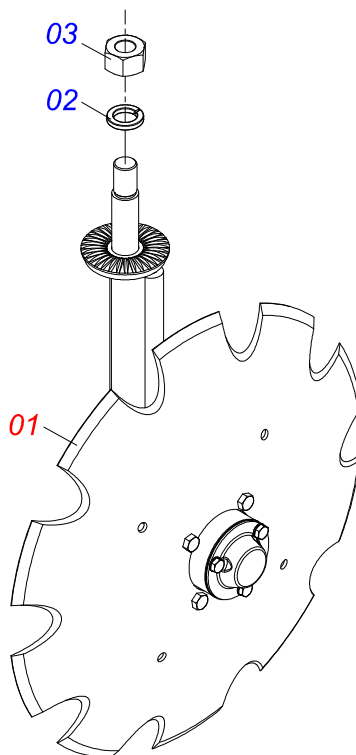 


Item	Code	Description	See page	QT
01	0511053904	DISC LINE MARKER	54	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

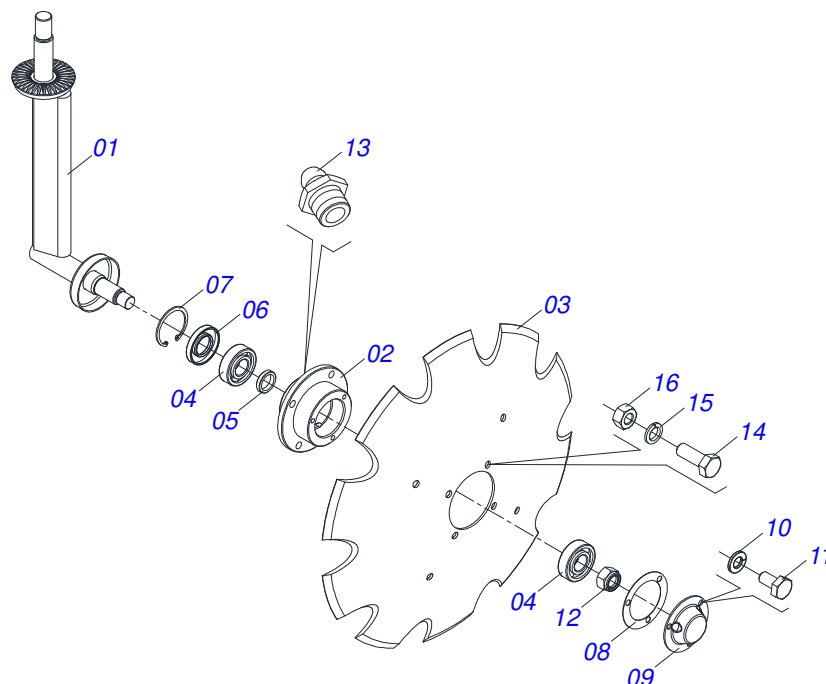 


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

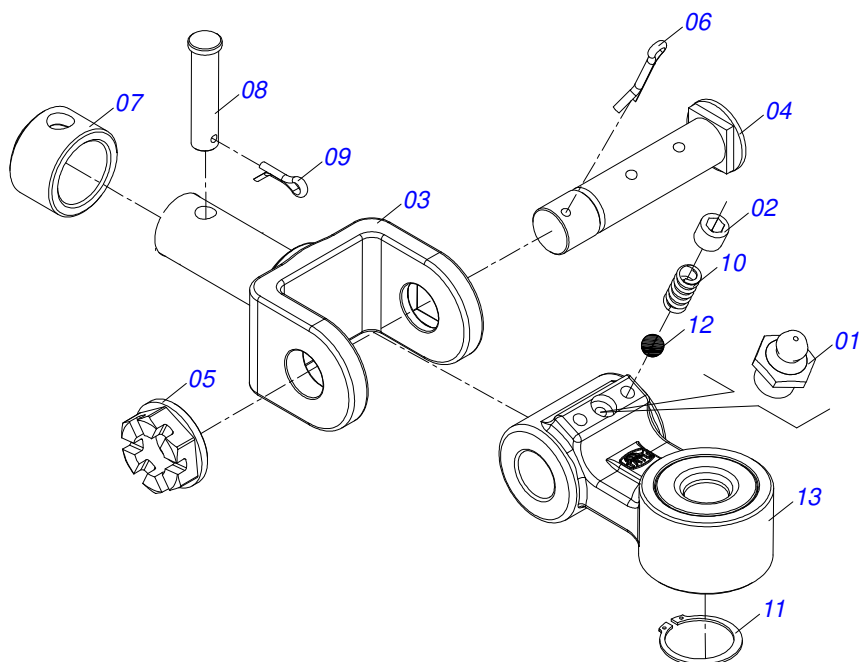 


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0571012612	PIVOT SHAFT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2 COTTERPIN		01
10	0503033731	COMPRESSION SPRING LEFT		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

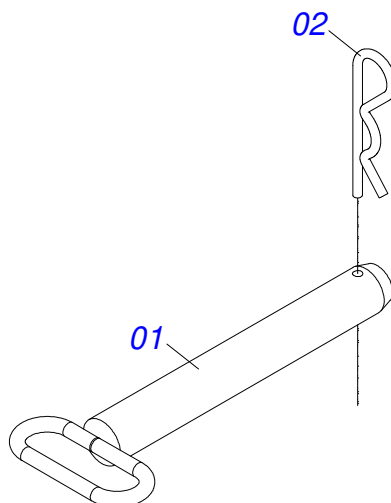 


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HAIR PIN		01

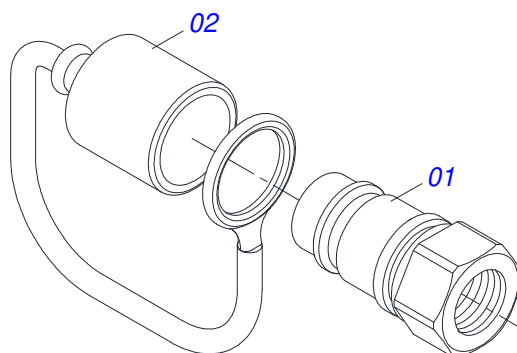 


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

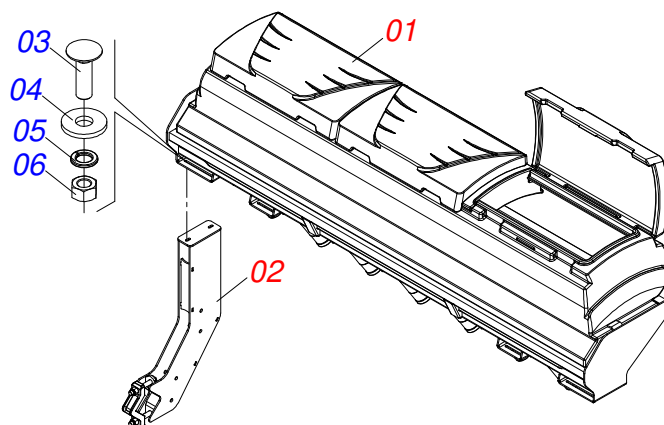 


Item	Code	Description	See page	QT
01	0511057737	ASSEMBLY CSU C3 2BOXES 7B C/10 C	59	01
02	0521051927	TOWER SUPPORT HOPPER	61	04
03	0501010942	3/8" X 1-1/4" BOLT		08
04	0501010984	FLAT WASHER		08
05	0503010025	3/8" SPRING WASHER		08
06	0503010026	3/8" NUT		08

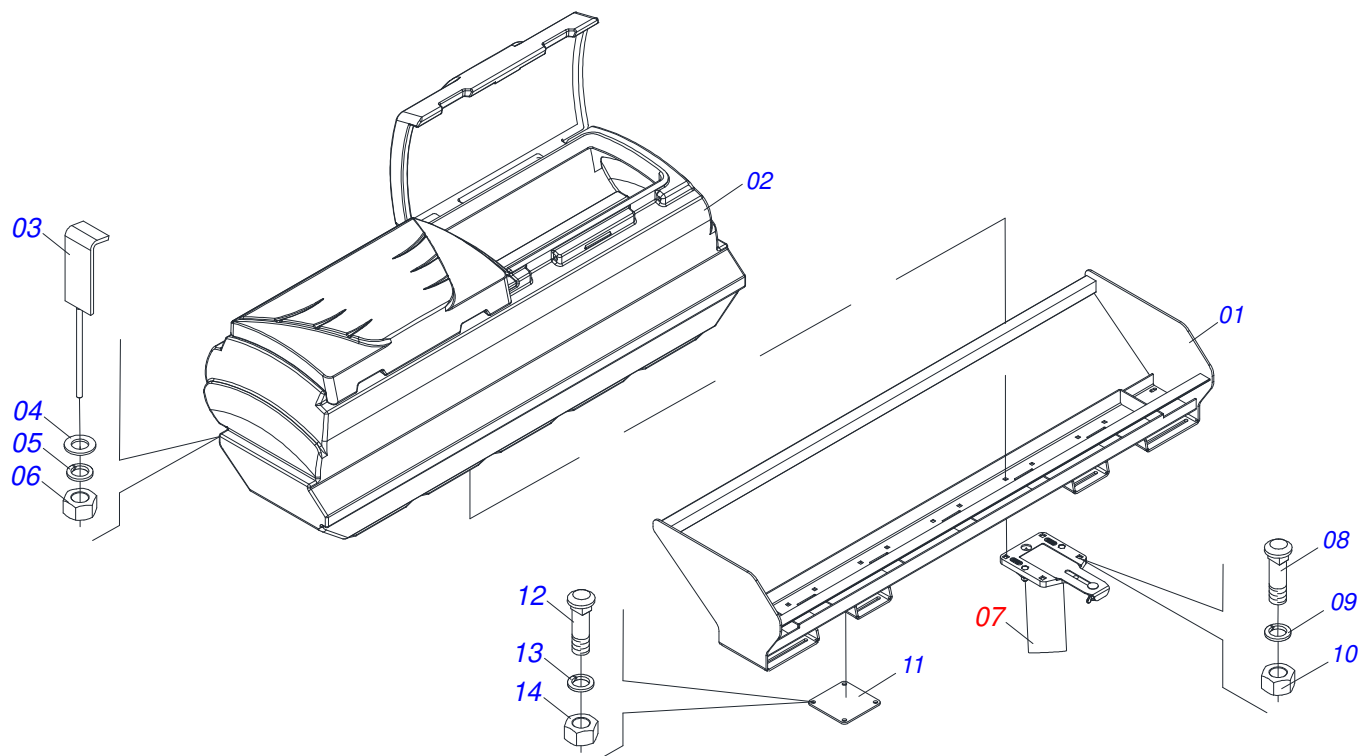 


Item	Code	Description	See page	QT
01	0521064874	07 MOUTHS SUPPORT BOX SEED ONLY		02
02	0503062165	HOPPER FERTILIZER 07 MOUTHS FRONT		02
03	0521063401	SEED BOX ONLY FIXING LOCK		04
04	0501010984	FLAT WASHER		04
05	0503010025	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0511057690	SEED CONDUCTOR 3 ARTICULATED ASSY CSU	60	10
08	0501010942	3/8" X 1-1/4" BOLT		40
09	0503010025	3/8" SPRING WASHER		40
10	0503010026	3/8" NUT		40
11	0571015773	SUPPORT SEED CSU		04
12	0501011643	3/8 X 1"BOLT		16
13	0503010025	3/8" SPRING WASHER		16
14	0503010026	3/8" NUT		16

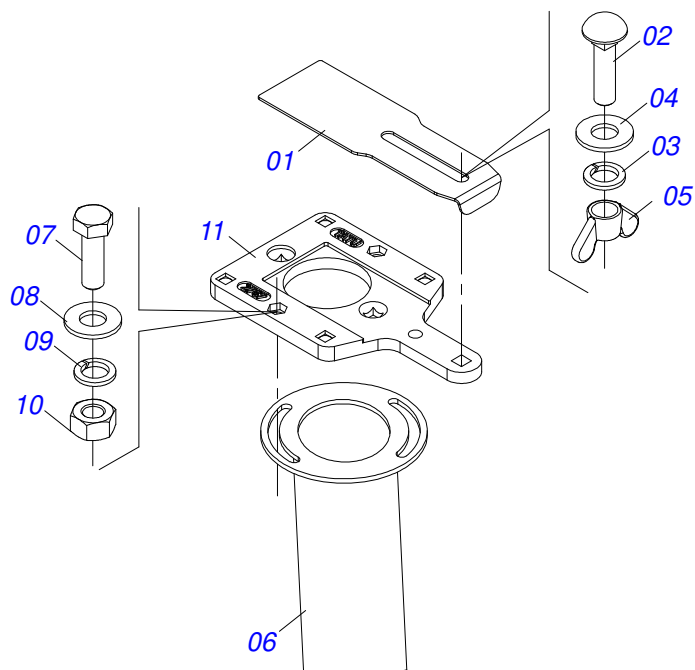 


Item	Code	Description	See page	QT
01	0571015779	COVER SUPPORT CONDUCTOR ARTICULATION		01
02	0501010942	3/8" X 1-1/4" BOLT		01
03	0503010025	3/8" SPRING WASHER		01
04	0501010984	FLAT WASHER		01
05	0503010209	3/8" UNC BUTTERFLY NUT		01
06	0521066332	CONDUCTOR WITH FLANGE		01
07	0503010371	5/16" X 1" BOLT		02
08	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
09	0503010179	5/16" ZN SPRING WASHER		02
10	0503010337	5/16" NUT		02
11	0502012767	FIXER CONDUCTOR SEED CSU SUPPORT		01

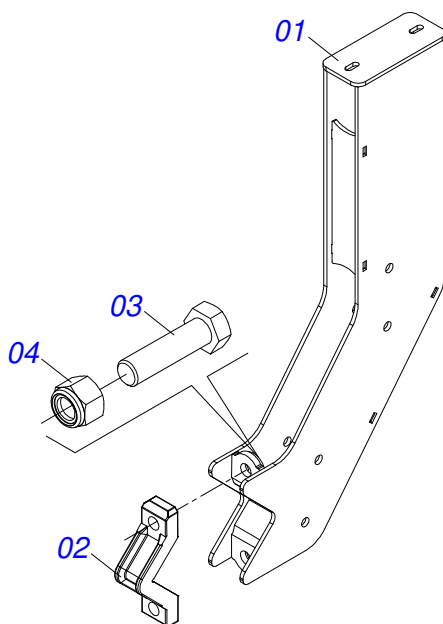 

Item	Code	Description	See page	QT
01	0521066208	SUPPORT TOWER SILO		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

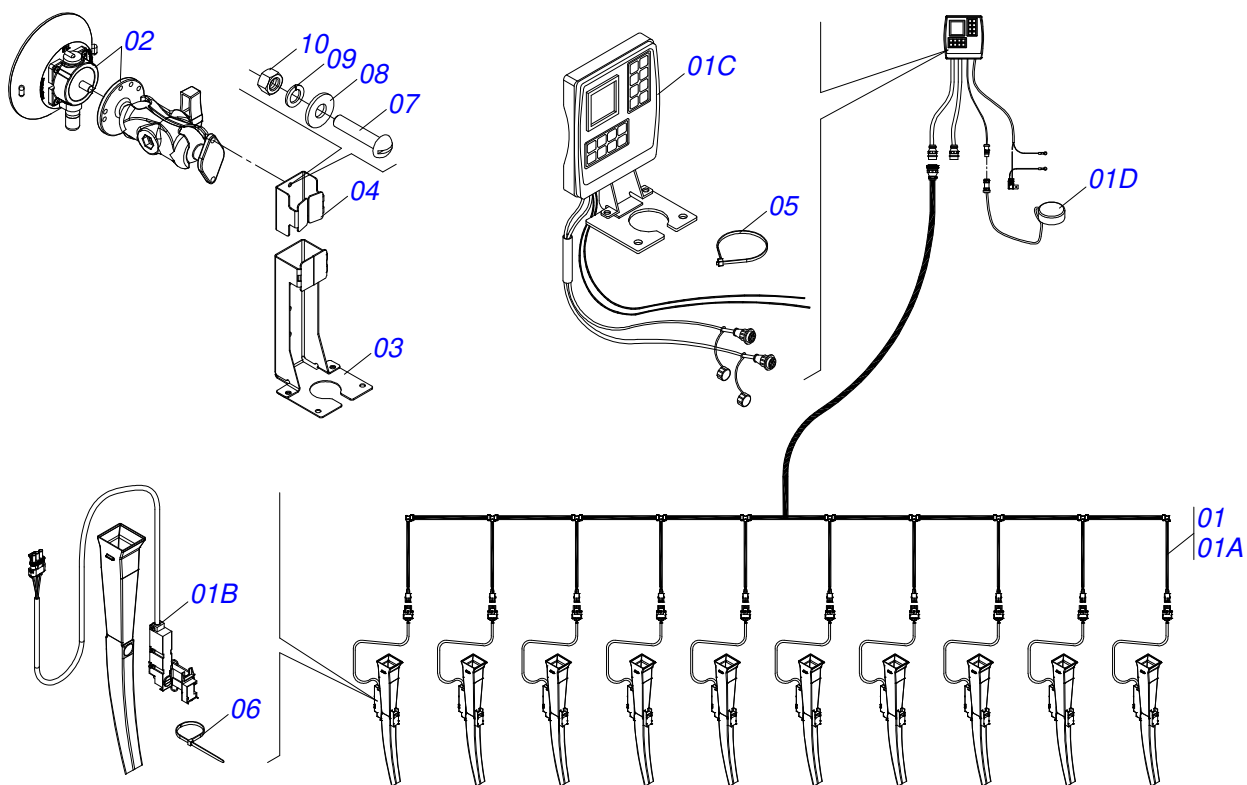 


Item	Code	Description	See page	QT
01	0503062795	KIT MONITORING SEED 10L 45/50 PM400 PM410SSM		01
01A	0503016556	10 ROW SIMPLE MONITOR CABLE		01
01B	0503019100	SENSOR		10
01C	0503017602	MONITOR PLANT PM400		01
01D	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		50
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		150
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02

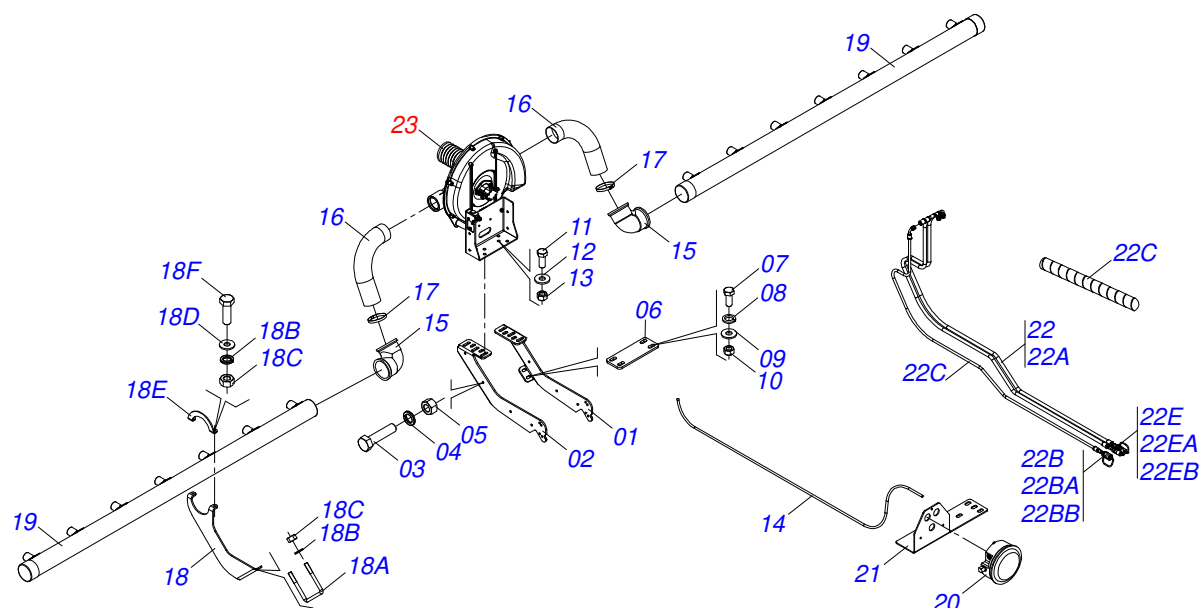 


Item	Code	Description	See page	QT
01	0581011414	BODY RIGHT SUPPORT TURBINE		01
02	0581011413	SOPORTE IZQUIERDO CUERPO DE LA TURBINA		01
03	0503011239	1/2" X 2" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04
06	0581011415	SUPPORTER FIXING BAR		01
07	0503011082	C1/2" X 1.3/4" SCREW		04
08	0511017302	FLAT WASHER		08
09	0503010019	1/2" SPRING WASHER		04
10	0503010060	1/2" NUT		04
11	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		02
12	0501012140	FLAT WASHER		02
13	0503012412	5/8 UNC SELF LOCKING NUT		02
14	0503015062	TUBE		03
15	0503031576	ELBOW		02
16	0561011377	HOSE 4 X 2200		02
17	0503011372	102 TO 121 CLAMP		02
18	0511059319	AIR FIXING SUPPORT		04
18A	0571019403	STAPLE FIXER		01
18B	0503010025	3/8" SPRING WASHER		04
18C	0503010026	3/8" NUT		04
18D	0501013518	FLAT WASHER		02
18E	0571019921	AIR SUPPORT FIXATION		01
18F	0503010237	3/8" X 1" BOLT		02
19	0511057347	DISTRIBUTOR VACUUM 4845/5345		02
20	0503013584	VACUUM GAUGE		01
21	0571013731	VACUUM GAUGE SUPPORT		01
22	0511057906	HOSE ASSY		01
22A	0511057840	ASSY TURBINE HOSE REAR		01
22B	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	57	02
22BA	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01


Item	Code	Description	See page	QT
22BB	0503011882	MALE QUICK COUPLER CAP		01
22C	0581010092	SPRING PROTECTION PLASTIC HOSE 3/4		01
22D	0503033981	ADHESIVE LABEL		01
22E	0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN		01
22EA	0503018799	QUICK COUPLING		01
22EB	0503011883	QUICK CONNECTION COVER		01
23	0511059406	TURBINE P.P MOUNTED	64	01

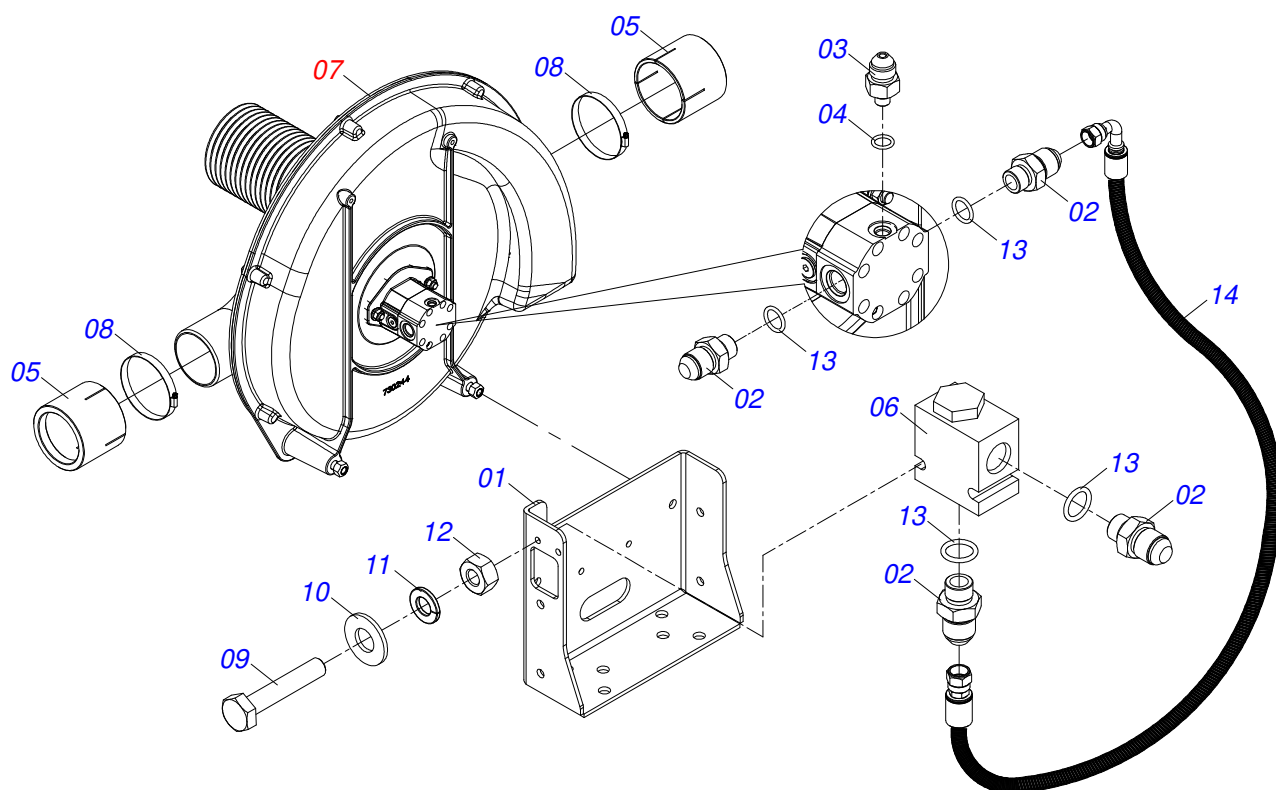 

Item	Code	Description	See page	QT
01	0581012099	BODY SUPPORT TURBINE		01
02	0501011460	7/8 NF REDUCTION NIPPLE		04
03	0503034385	NIPPLE 7/16 UNF X UNF JIC		01
04	0503010392	2-046 N 3006 9B O'RING		01
05	0581012096	ROUND SLEEVE		02
06	0503015420	VALVE ANTI-CAVITACAO CV10208TN5		01
07	0521050154	TURBINE P.P WITH HOLE	65	01
08	0503011372	102 TO 121 CLAMP		02
09	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
10	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
11	0503010143	1/4" SPRING WASHER		02
12	0503010144	1/4" NUT		02
13	0503010190	2-114 N 3006-9B O'RING		04
14	0501081235	1/2 X 650 TR- TC HOSE		01

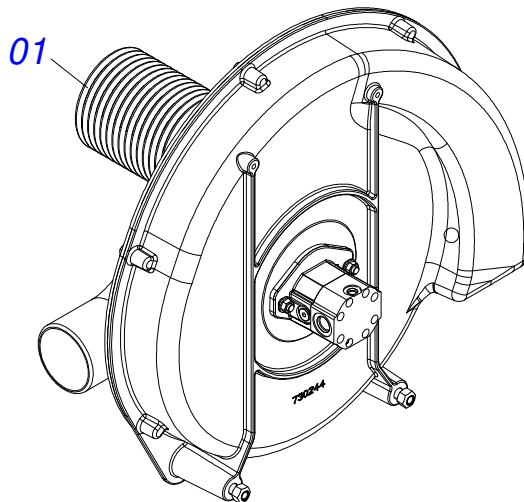 


Item	Code	Description	See page	QT
01	0503062627	HYDRAULIC TURBINE ASSY		01

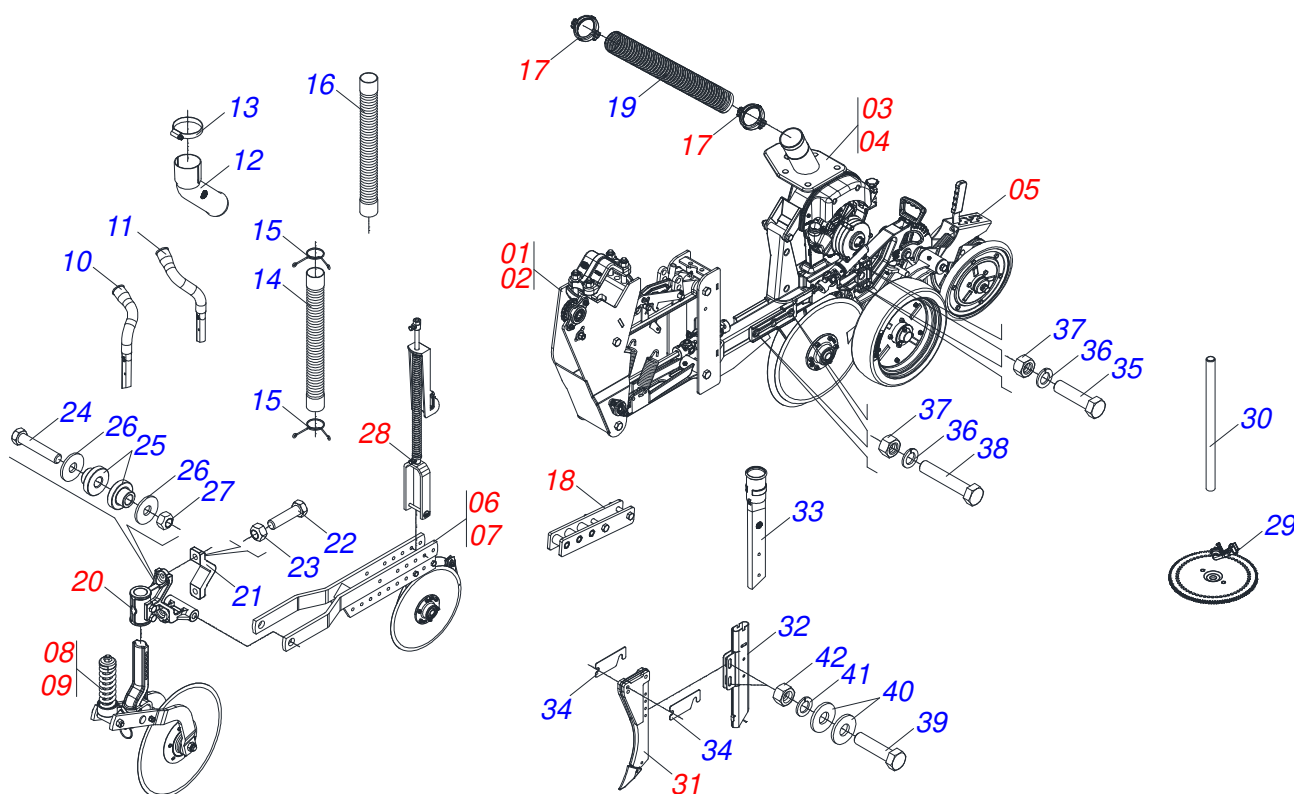 

Item	Code	Description	See page	QT
01	0511057243	LEFT SHORT SEED ROW FRONT	67	01
02	0511057246	RIGHT LONG SEED ROW FRONT	68	01
03	0511058747	RIGHT REAR SUPREME SEED LINE P.P CSU	76	01
04	0511058748	LEFT REAR SUPREME SEED LINE P.P CSU	82	01
05	0521051424	WHEEL SYSTEM DEPTH / COMPACTOR QUICK ADJUSTMENT	86	01
06	0511053250	SHORT ARM FERTILIZER LINE WITH DDD LEFT	90	01
07	0511053251	ARM LONG FERTILIZER LINE WITH DDD RIGHT	92	01
08	0511044563	20" COULTER BLADE ASSY FOR SHORT ROW	94	01
09	0511044585	20" COULTER BLADE ASSY FOR LONG ROW	95	01
10	0503030391	RIGHT FERTILIZER NOZZLE		01
11	0503030392	LEFT FERTILIZER NOZZLE		01
12	0503031050	CURVED CONDUCTOR		01
13	0503010246	CLAMP		01
14	0503031145	2" X 2" X 20" HOSE		01
15	0503031076	2" HOSE CLAMP		01
16	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		01
17	0521050525	FIXER FERTILIZER CONDUCTOR	97	01
18	0521057957	FIXED ROD EXTENSION WITH FIXATION		01
19	0571011730	SEED CONDUCTOR 3X1500		01
20	0511058212	ASSY LINE SUPPORT FERTILIZER	99	01
21	0502010175	HITCH CLAMP		01
22	0501011543	5/8" X 4" BOLT		01
23	0503012412	5/8 UNC SELF LOCKING NUT		01
24	0501010066	3/4" X 9" BOLT		01
25	0521017831	SUPPORT SLEEVE SPACER		01
26	0511017232	FLAT WASHER		01
27	0503011255	3/4" LOCK NUT		01
28	0501058423	FERTILIZER ROD SPRING ROW	100	01
29	0503062763	CONVERSION ASSY FOR DISTRIBUTOR SOY / BEANS		01
30	0531013600	PRESS ADJUSTMENT LEVER		01


Item	Code	Description	See page	QT
31	0501110231	SCARIFIER HEAD WITH SPIKE 0061		01
32	0521069127	BOTTOM NOZZLE FERTILIZER		01
33	0503030483	FERTILIZER SOCKET		01
34	0511017969	0.1" SPACING PLATE		01
35	0503010905	1/2" X 2-1/4" BOLT		01
36	0503010019	1/2" SPRING WASHER		01
37	0503010060	1/2" NUT		01
38	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		01
39	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
40	0501010984	FLAT WASHER		01
41	0503010025	3/8" SPRING WASHER		01
42	0503010026	3/8" NUT		01

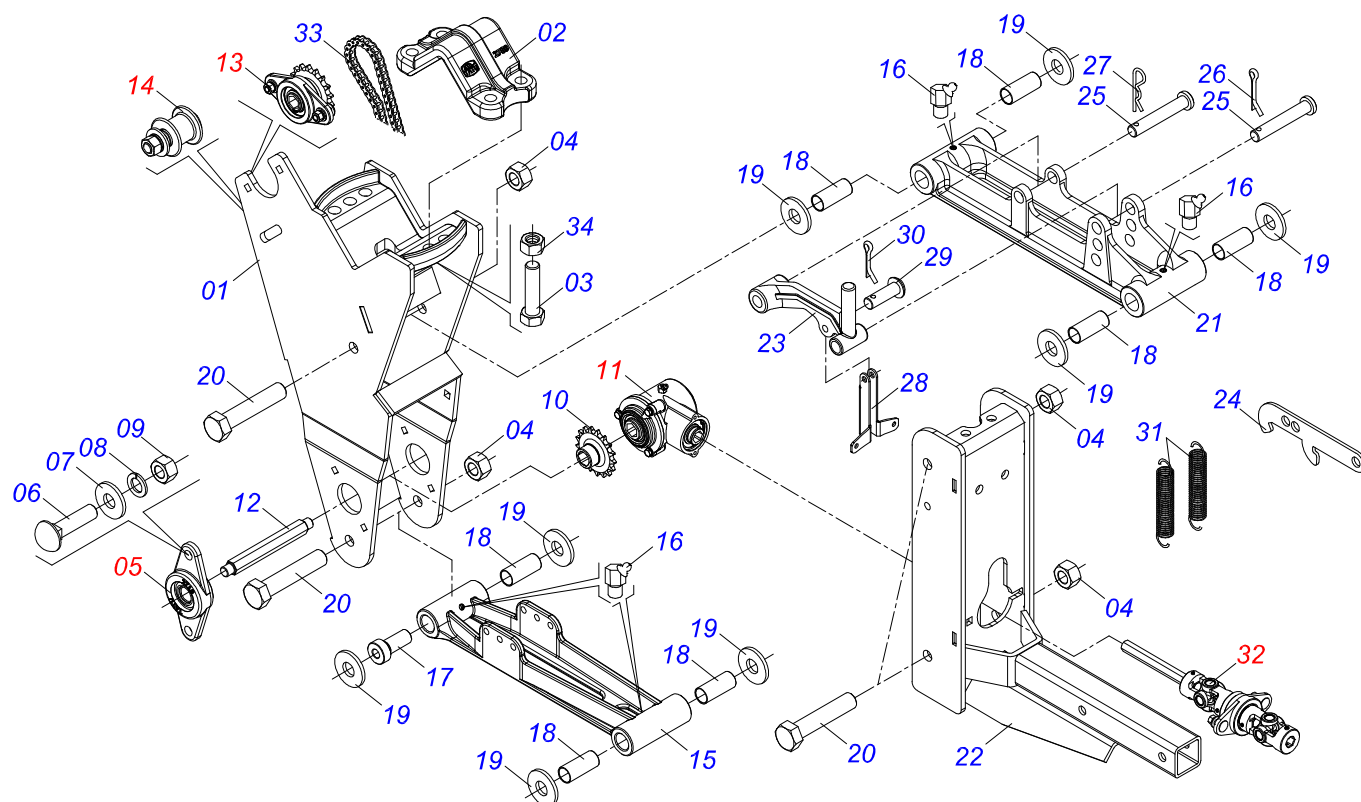 

Item	Code	Description	See page	QT
01	0521064651	LEFT SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8 UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	69	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
08	0503010179	5/16" ZN SPRING WASHER		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION BOX SEED LINE	70	01
12	0561014904	TRANSMISSION AXLE FRAME LINE		01
13	0511050609	BEARING WITH 17Z GEAR ASSY	71	01
14	0511055260	SEED ROW CHAIN TENSIONER	73	01
15	0502012666	SEDD ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521065847	SHORT TIRE SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HAIR PIN		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02




Item	Code	Description	See page	QT
32	0511052426	TRANSMISSION CARDAN ASSY	74	01
33	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

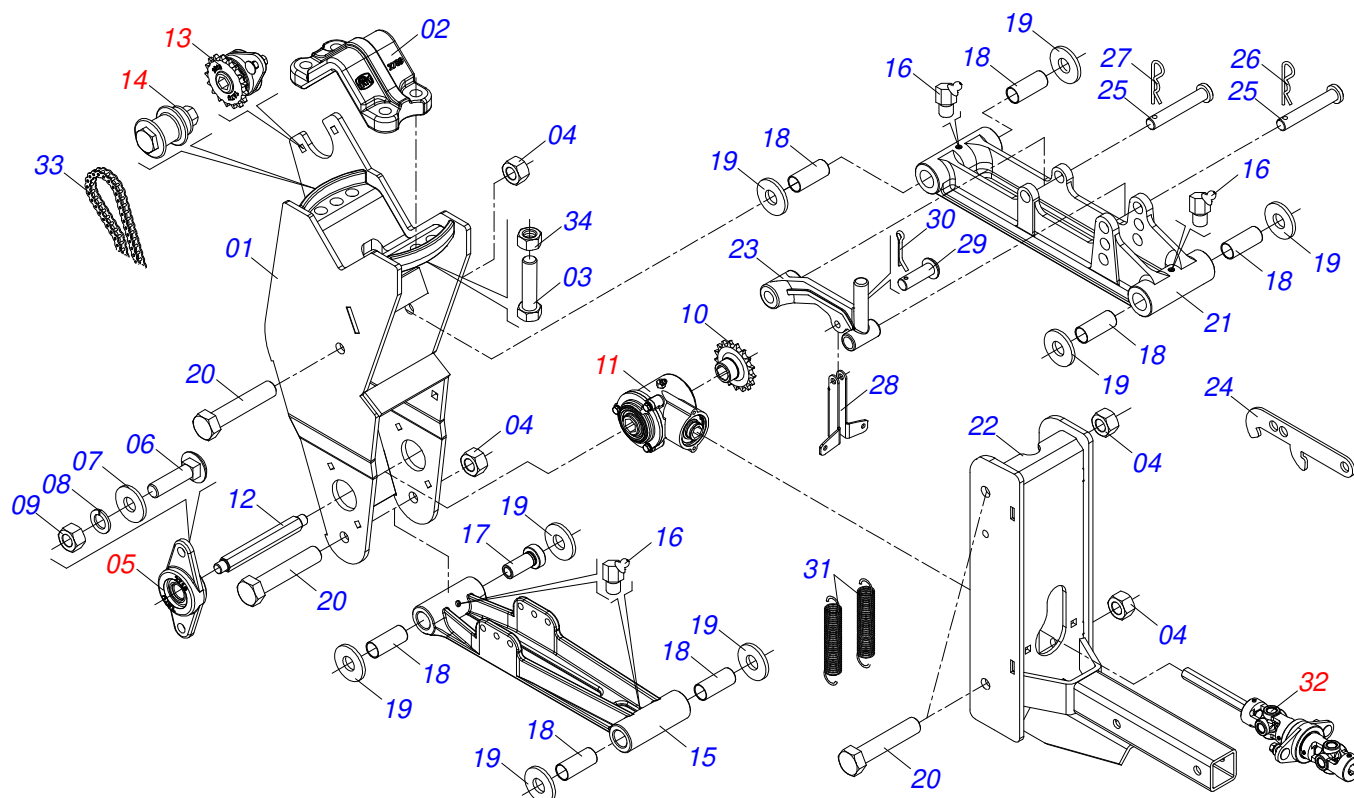 


Item	Code	Description	See page	QT
01	0521064652	RH SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8 UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	69	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
08	0503010179	5/16" ZN SPRING WASHER		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION BOX SEED LINE	70	01
12	0561014904	TRANSMISSION AXLE FRAME LINE		01
13	0501052769	BEARING WITH 17Z GEAR		01
14	0511055260	SEED ROW CHAIN TENSIONER	73	01
15	0502012666	SEDD ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521065847	SHORT TIRE SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HAIR PIN		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02




Item	Code	Description	See page	QT
32	0511052426	TRANSMISSION CARDAN ASSY	74	01
33	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

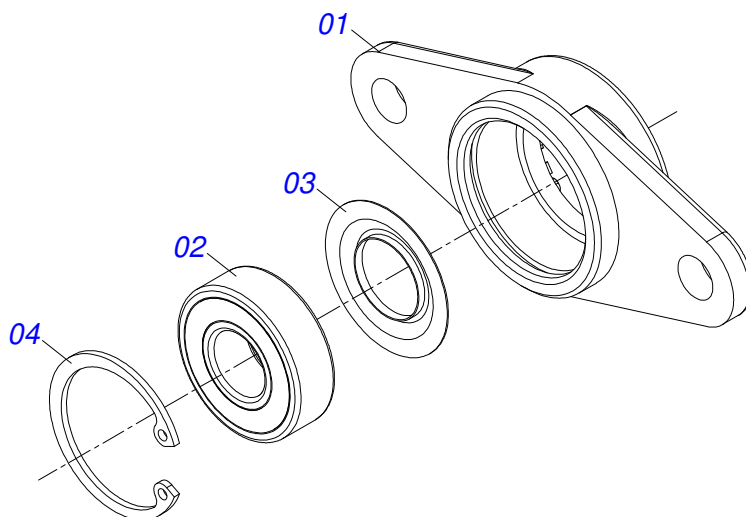 

Item	Code	Description	See page	QT
01	0502012718	BEARIN BODY		01
02	0503012882	BEARING		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

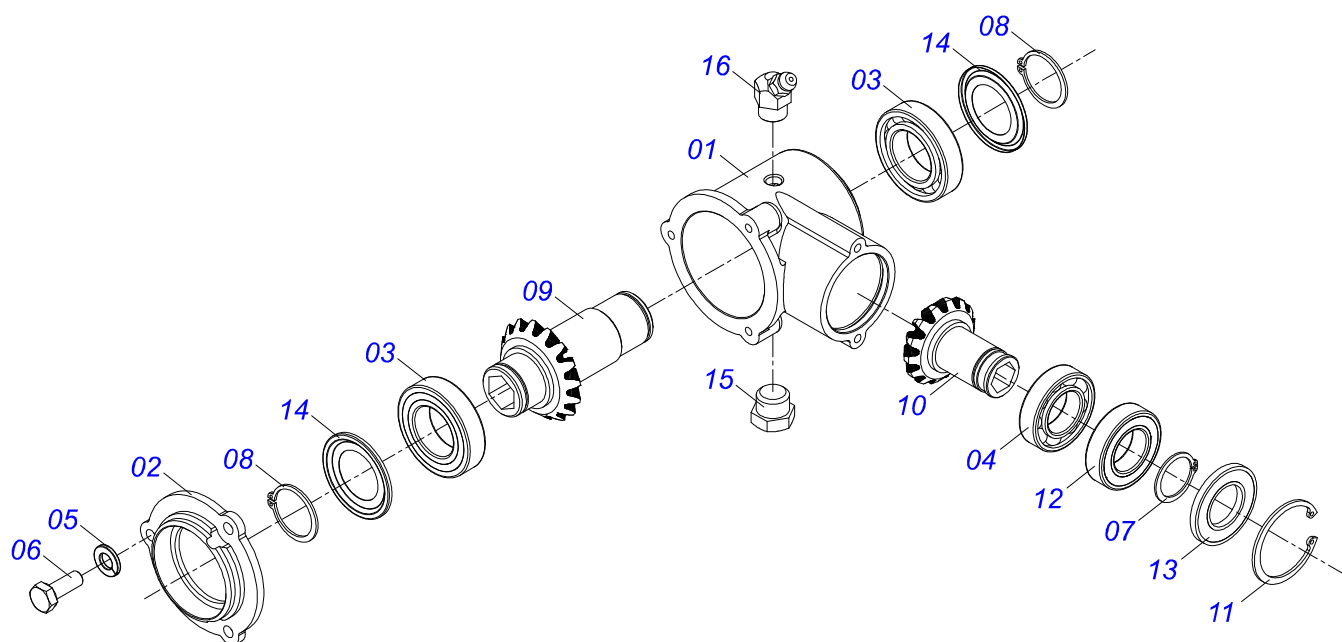 


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01

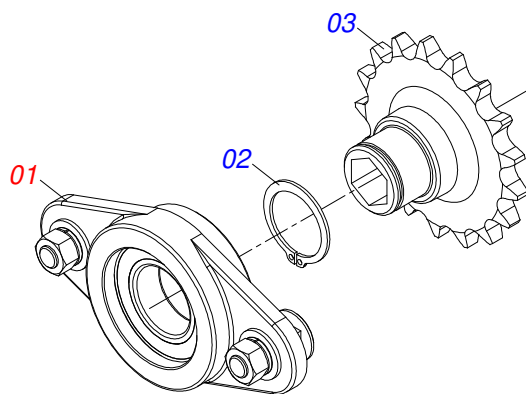 


Item	Code	Description	See page	QT
01	0511050617	FRONT SEED ROW BEARING	72	01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0502012819	17Z GEAR WITH HEX HOLE		01

FRONT SEED ROW BEARING

 
0511050617

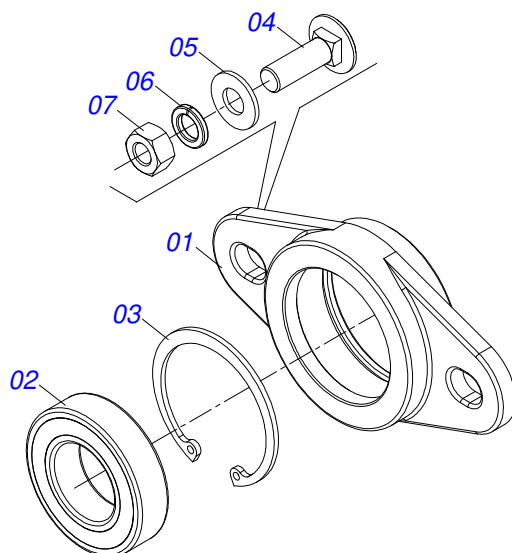


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02

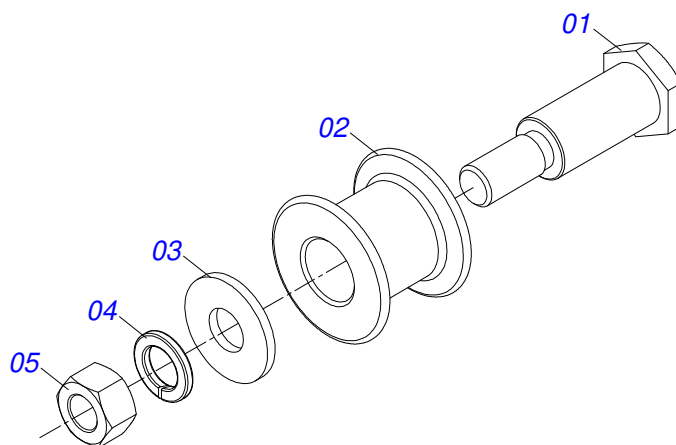 


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

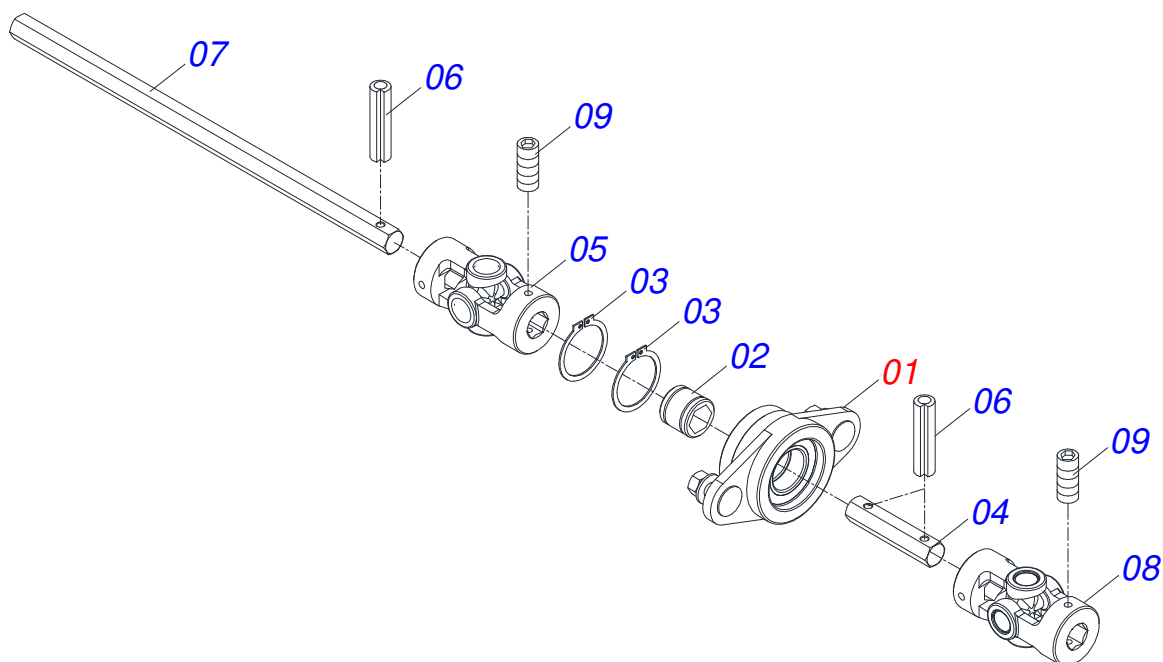 


Item	Code	Description	See page	QT
01	0511052389	BEARING DOUBLE FRONT ROW SEED	75	01
02	0551017559	BEARING AXLE BODY		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0551017540	5/8" X 73 AXLE HEX		01
05	0501056296	UNIVERSAL JOINT		01
06	0503011855	0.2" X 1.8" SPRING PIN		03
07	0571012412	HEX AXLE		01
08	0561014778	HEX UNIVERSAL JOINT		01
09	0503013958	1/4" X 1" BOLT		02

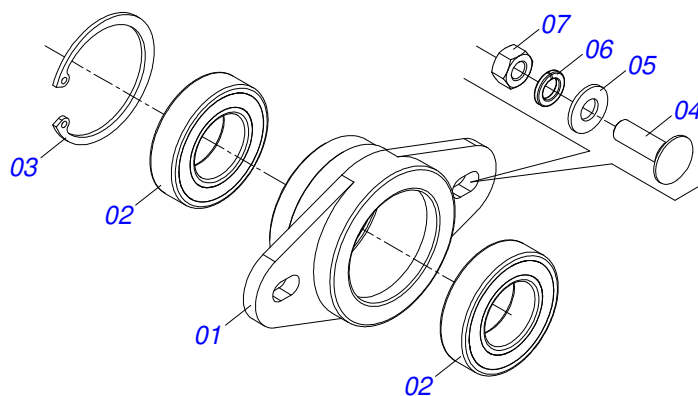 


Item	Code	Description	See page	QT
01	0502011971	HOUSING WITH DOUBLE BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02

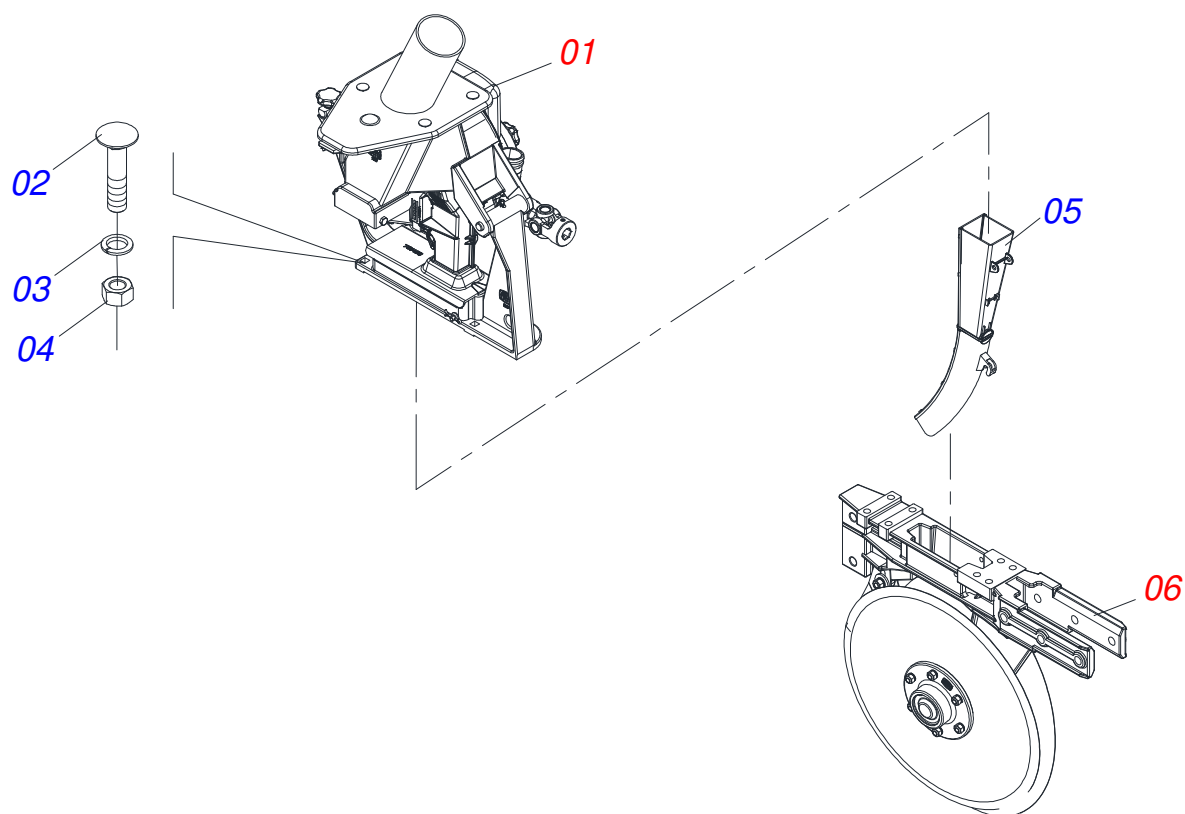 

Item	Code	Description	See page	QT
01	0521050737	PNEUMATIC SEED DISTRIBUTOR	77	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057154	DDD RITGH SUPREMA PRECISION PLANTING	81	01

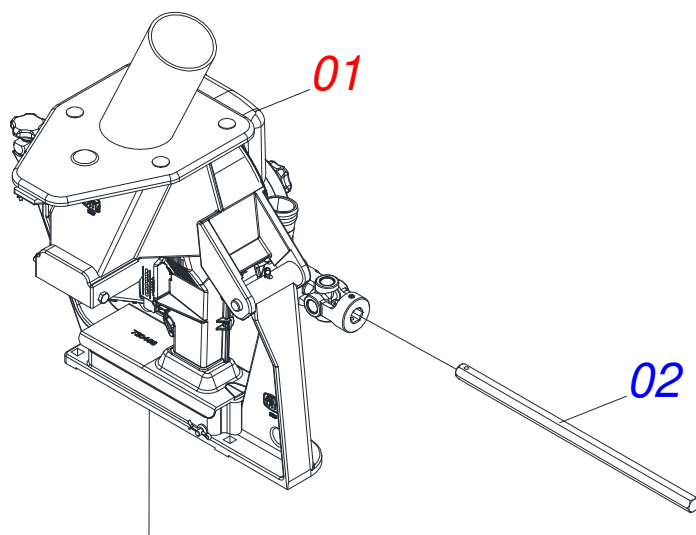 


Item	Code	Description	See page	QT
01	0511057212	ASSY PRECISION PLANTING V-SET2 SUPREMA 78 CSU 3	78	01
02	0581012756	HEX AXLE 5/8 X 360		01

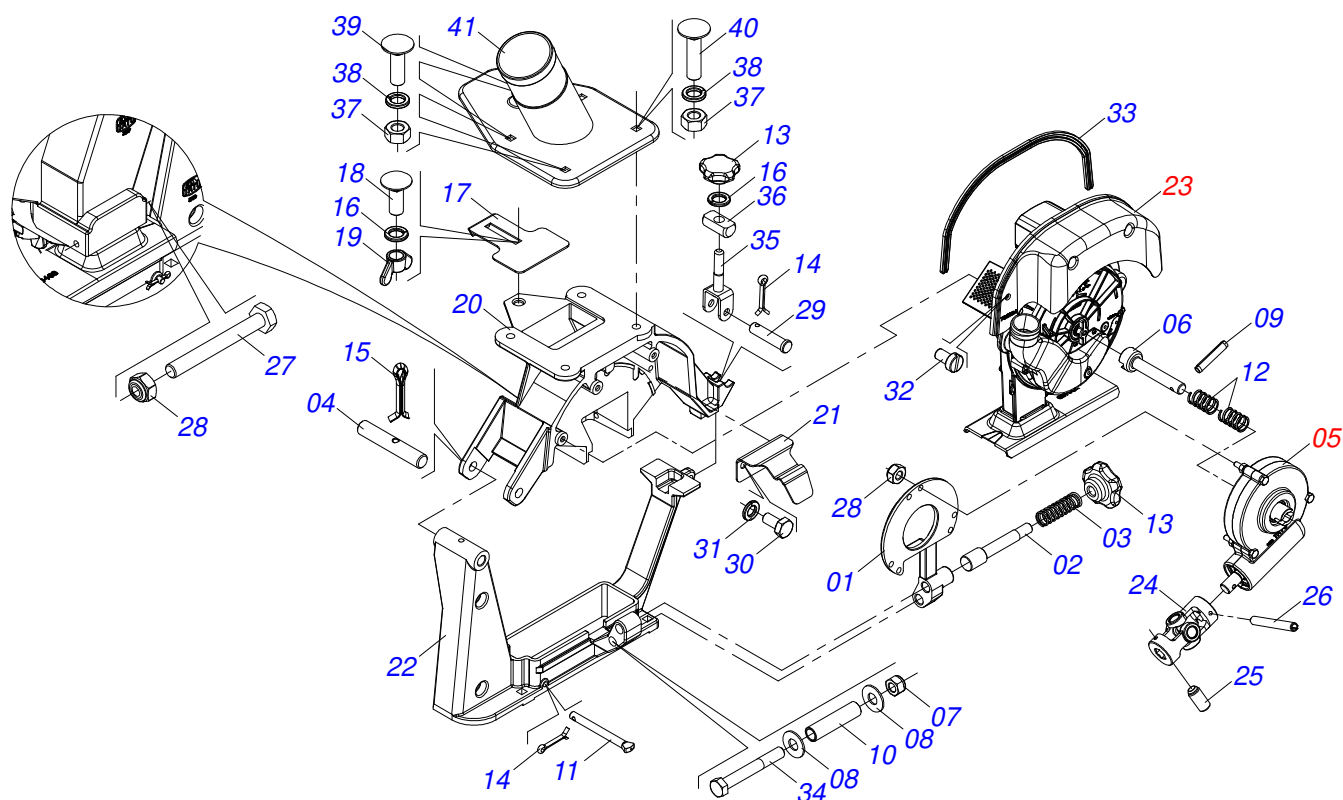 


Item	Code	Description	See page	QT
01	0502012776	SUPPORT ARTICULATION PNEUMATIC PP		01
02	0571017899	PIN LOCK PP		01
03	0503030190	0.5" X 1.6" X 0.05" SPRING		01
04	0571017897	AXLE ARTICULATION PRECISION PLANTING		01
05	0511057155	PRECISION PLANTING LEFT TRANSMISSION BOX	79	01
06	0571017894	PIN DRAG PRECISION PLANTING		01
07	0503013357	3/8" SELF-ADJUSTING NUT		01
08	0501013518	FLAT WASHER		02
09	0503015356	SPRING PIN		01
10	0571017896	SLEEVE ARTICULATION PRECISION PLANTING		01
11	0571017895	PIN FIXER CONDUCTOR P.P		01
12	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		02
13	0503010293	BAQUELITE MANIPULACION		02
14	0503010140	1/8" X 3/4" COTTERPIN		02
15	0503010131	3/16" X 1-1/2" COTTERPIN		01
16	0503010025	3/8" SPRING WASHER		02
17	0571019491	SLUICE PNEUMATIC PRECISION PLANTING		01
18	0501011643	3/8 X 1" BOLT		01
19	0503010209	3/8" UNC BUTTERFLY NUT		01
20	0502012807	SUPPORT BOX PRECISION PLANTING		01
21	0571019489	CLAMP PRECISION PLANTING		01
22	0502012799	UPPER SUPPORT BASE PNEUMATIC PRECISION PLANTING		01
23	0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN DISC	80	01
24	0561014778	HEX UNIVERSAL JOINT		01
25	0503013958	1/4" X 1" BOLT		02
26	0503011855	0.2" X 1.8" SPRING PIN		01
27	0503012721	1/4" X 4" BOLT		01
28	0503012880	1/4" UNC SELF ADJUSTING NUT		04
29	0571014024	FAST BOLT GUIDE AXLE		01
30	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		02

Item	Code	Description	See page	QT
31	0503015110	M06 SPRING WASHER		02
32	0503818139	BOLT		03
33	0503037390	PACKING FOR PLANTING		01
34	0503015752	3/8" X 2" BOLT		01
35	0503034824	FIXATIVE		01
36	0581011226	FIXER CLOSING P PLANTING CONTR CPRA		01
37	0503010337	5/16" NUT		04
38	0503010179	5/16" ZN SPRING WASHER		04
39	0503011953	5/16" X 1" BOLT		03
40	0503012163	5/16" X 1-1/2" BOLT		01
41	0521066707	FEEDER		01

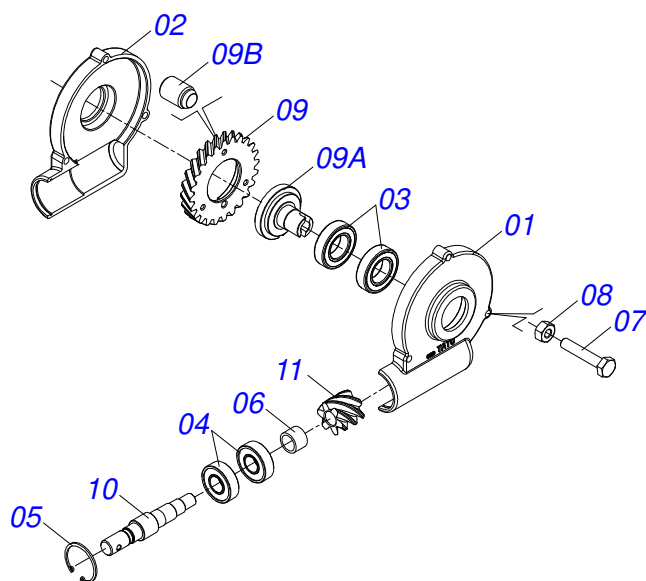 


Item	Code	Description	See page	QT
01	0502050052	LEFT SIDE TRANSMISSION BOX PP		01
02	0502050053	RIGHT SIDE TRANSMISSION BOX PP		01
03	0503011410	ROLLER BEARING		02
04	0503011182	6203 ROLLER BEARING		02
05	0503011184	502040 CLAMPING RING (FOR AXLE)		01
06	0571017655	SLEEVE FIXER HITCH PNEUMATIC		01
07	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		03
08	0503010144	1/4" NUT		03
09	0511057504	JOIN GEAR		01
09A	0571017898	BODY GEAR TRANSMISSION		01
09B	0503011769	M8 X 0.5" BOLT		01
10	0581011222	PINION AXLE 6Z PNEUMATIC		01
11	0503034340	PINION AXLE 6Z PNEUMATIC		01

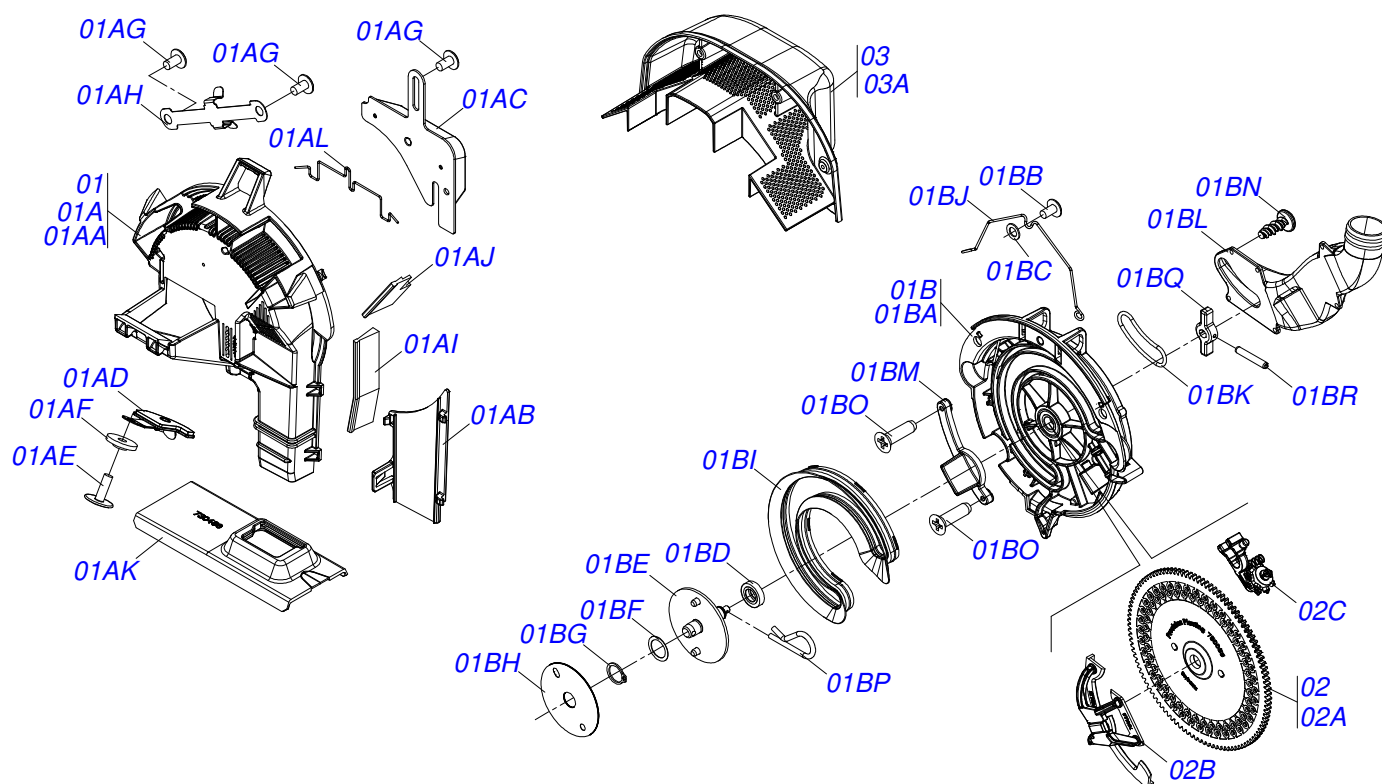 


Item	Code	Description	See page	QT
01	0503062405	SEED DISTRIBUTOR	01	
01A	0503062567	FIXED BASE SEEDS DISTRIBUTOR	01	
01AA	0503018908	BODY FIXED BASE DISTRIBUTOR SEED	01	
01AB	0503018909	COVER CONDUCTOR DISTRIBUTOR SEED	01	
01AC	0503062652	SEED INPUT DEFLECTOR	01	
01AD	0503062653	FULL COVER	01	
01AE	0503018910	RIVETS LARGEST	01	
01AF	0503018911	SPACING BUSHING	01	
01AG	0503018912	BOLT	03	
01AH	0503018476	SPRING	01	
01AI	0503018474	LOWER BRUSH	01	
01AJ	0503018475	TOP BRUSH	01	
01AK	0503018157	RUBBER	01	
01AL	0503018477	LOCK SPRING	01	
01B	0503062568	FIXER MOBILE	01	
01BA	0503018919	BASE	01	
01BB	0503018913	RIVET	01	
01BC	0503018914	WASHER	01	
01BD	0503018915	BEARING	02	
01BE	0503062654	BEARING	01	
01BF	0503018916	ADJUSTMENT CHOCK	03	
01BG	0503018917	RING	01	
01BH	0503018918	CHOCK	02	
01BI	0503019288	RUBBER SEAL PP 730518	01	
01BJ	0503018478	SPRING	01	
01BK	0503018920	SEALING	01	
01BL	0503018479	TUBE	01	
01BM	0503018735	PROTECTIVE COVER	01	
01BN	0503018921	BOLT	06	
01BO	0503018922	BOLT	02	
01BP	0503018480	REGULATOR PIN	01	


Item	Code	Description	See page	QT
01BQ	0503018923	ADAPTER		01
01BR	0503018924	SPRING PIN		01
02	0503062417	KIT CORN DISTRIBUTION		01
02A	0503018160	CORN PLASTIC DISC		01
02B	0503062472	SELECTOR SEED CORN		01
02C	0503062474	EJECTOR CORN SEED SET		01
03	0571019613	STRAW PRECISION PLANTING SHIELD		01
03A	0503017957	PROTECTIVE COVER AIR INPUT		01

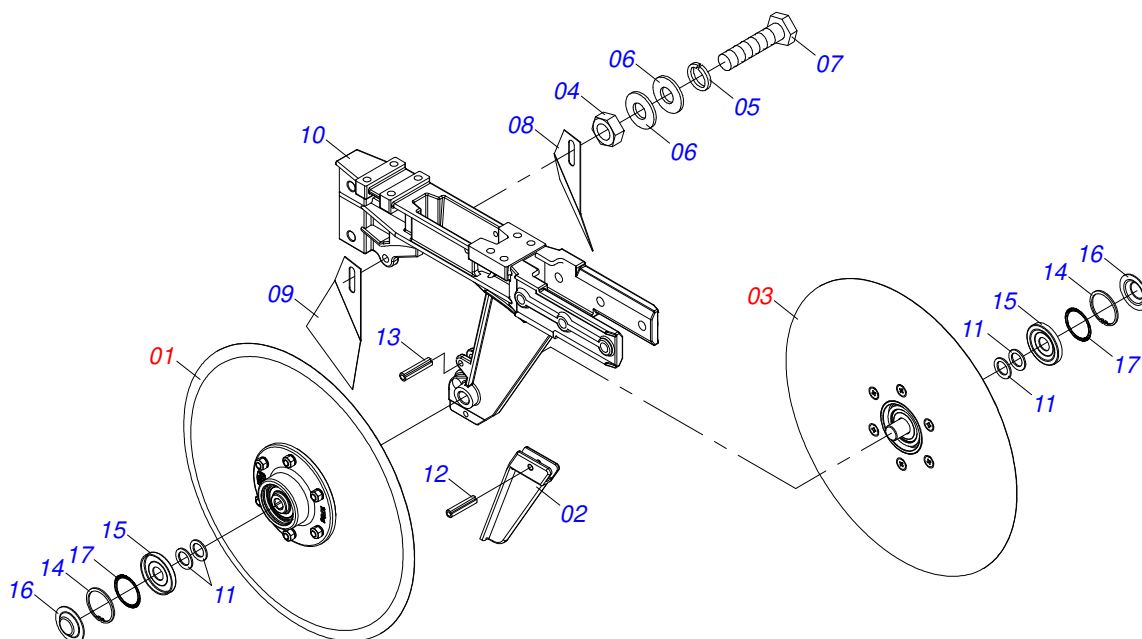 


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	84	01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	CUBE LOW RIGHT WITH DISC 15	85	01
04	0503010026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501010984	FLAT WASHER		02
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012780	SUPPORT DDD RIGHT		01
11	0511015098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O'RING		02

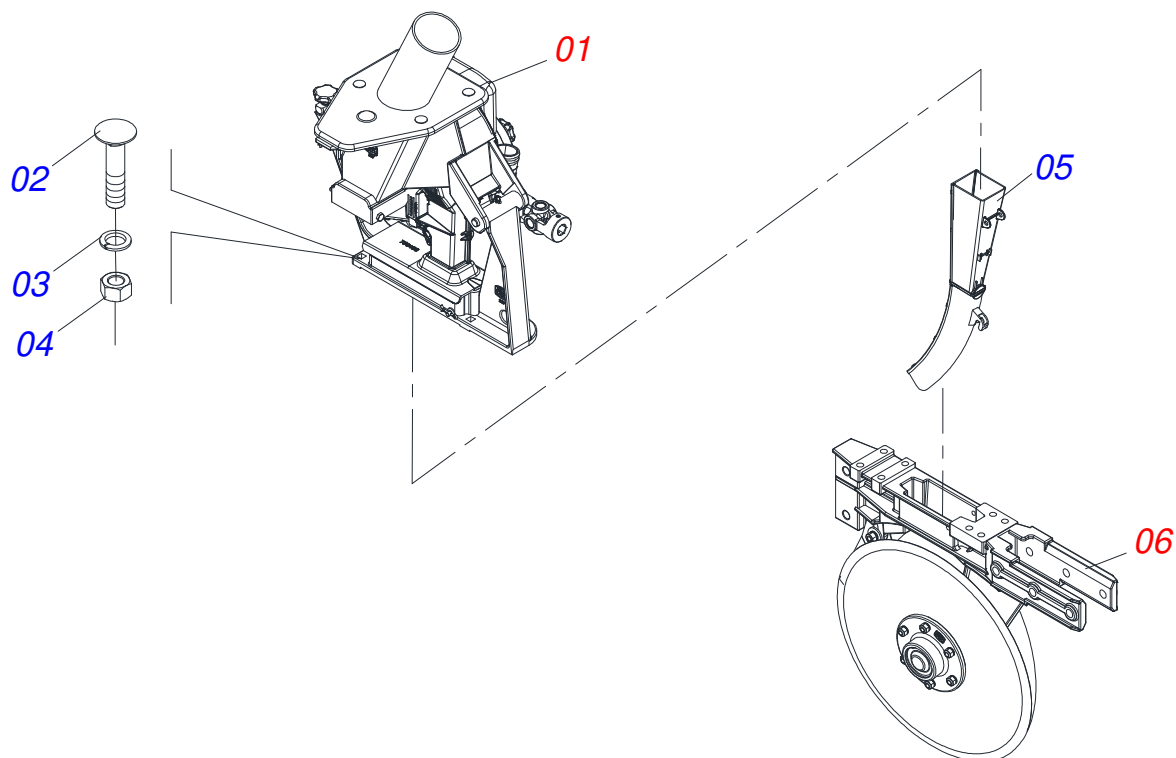 


Item	Code	Description	See page	QT
01	0521050737	PNEUMATIC SEED DISTRIBUTOR	77	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057153	DDD LEFT SUPREMA PRECISION PLANTING	83	01

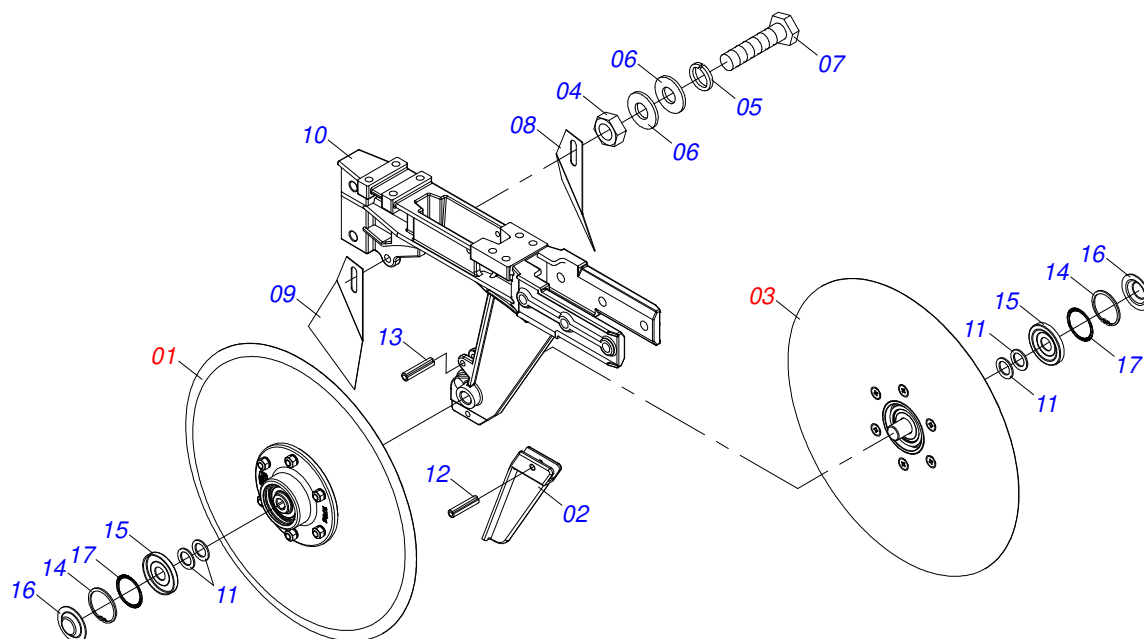 


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	84	01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	CUBE LOW RIGHT WITH DISC 15	85	01
04	0503010026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501010984	FLAT WASHER		02
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012781	SUPPORT DDD LEFT		01
11	0511015098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O'RING		02

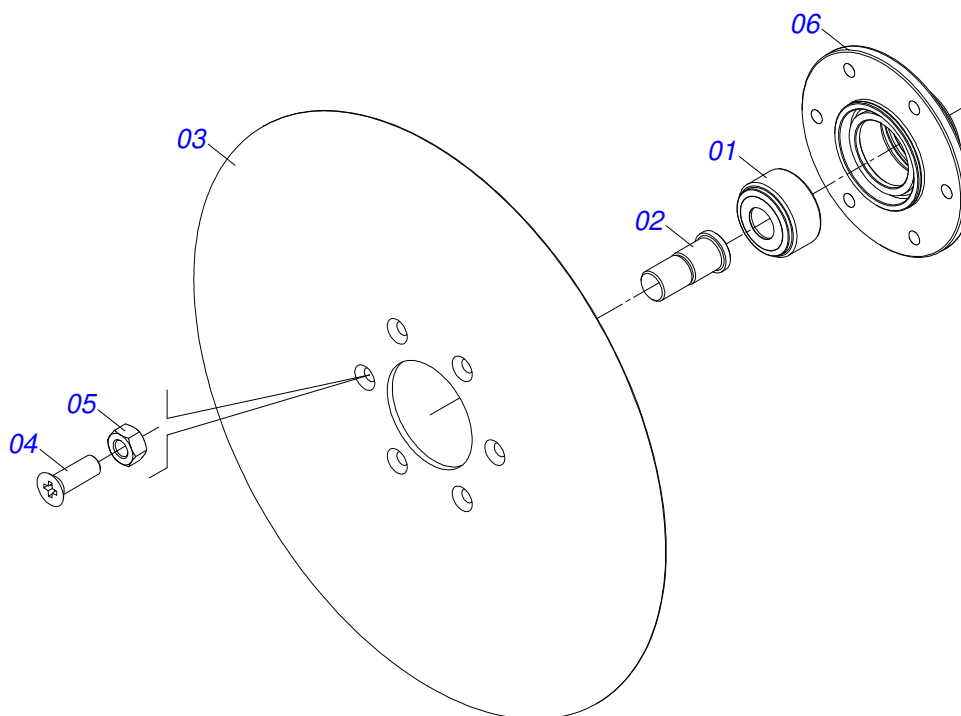 


Item	Code	Description	See page	QT
01	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

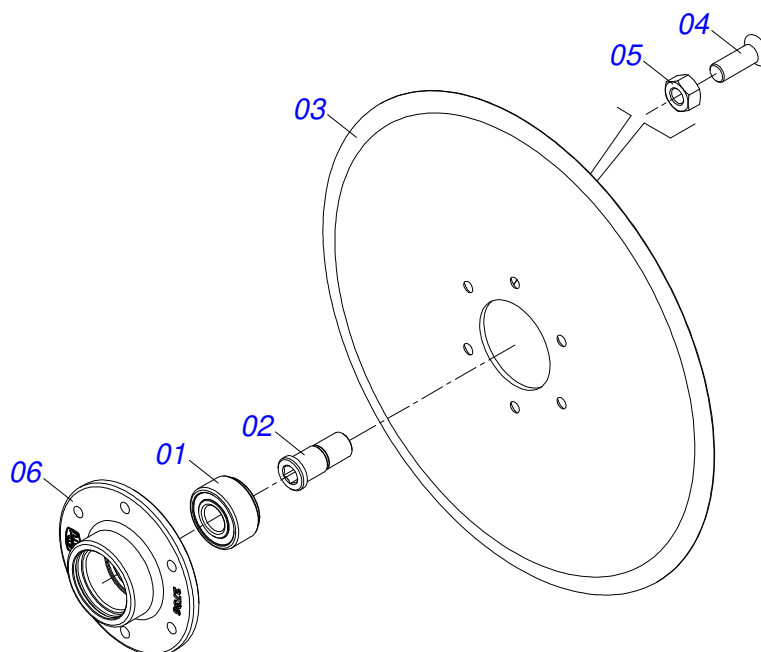 


Item	Code	Description	See page	QT
01	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

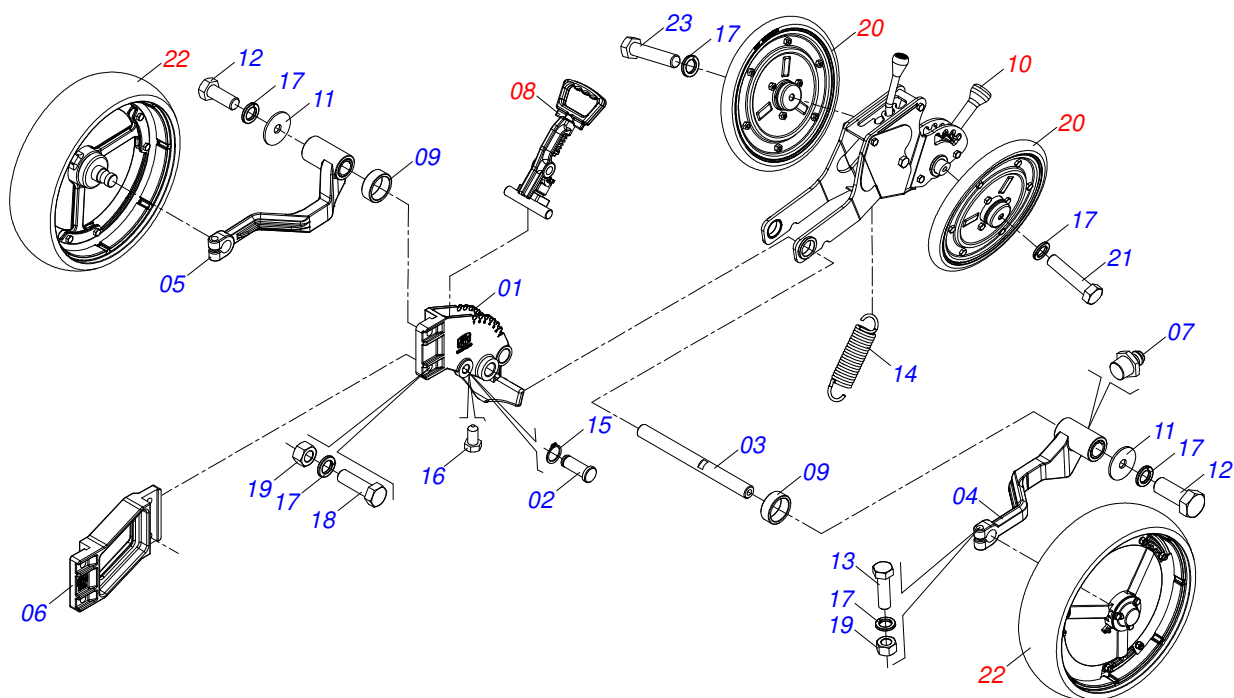 


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0581014858	DEPTH WHEEL AXLE		01
04	0501110720	ARM LEFT		01
05	0501110719	DEPTH CONTROL RIGHT ARM		01
06	0502012663	EXTENSION		01
07	0503010002	1800 GREASE FITTING		02
08	0501056769	DEPTH WHEELS REGULATOR ASSY	87	01
09	0503034793	ARTICULATION SLEEVE		02
10	0521051423	COMPACTOR SUPPORT	88	01
11	0571017749	FLAT WASHER		02
12	0503010311	1/2" X 1-1/4" BOLT		02
13	0503016453	1/2" X 2.1/2 BOLT		02
14	0503034817	SPRING		01
15	0503010581	RING		01
16	0503034377	SCREEW 3/8 UNC X 3/4		01
17	0503010019	1/2" SPRING WASHER		08
18	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
19	0503010060	1/2" NUT		04
20	0501052908	COMPACTOR WHEEL WITH BEARING	89	02
21	0503013739	1/2" X 1" BOLT		01
22	0511050077	WHEEL STRIPED		02
23	0503010752	1/2" X 3.1/2" BOLT		01

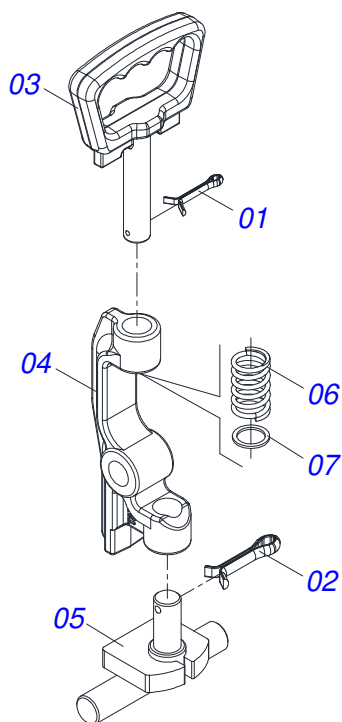 


Item	Code	Description	See page	QT
01	0503010257	1/8" X 1" COTTERPIN		01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0502011689	1/8" DEPTH CONTROL LEVER		01
04	0502011688	SEED SIST CONTROL DEPTH LEVER		01
05	0511065582	DEPTH WHEEL STOP		01
06	0503030975	0.9" X 1.5" X 0.1" SPRING		01
07	0511015976	FLAT WASHER		01

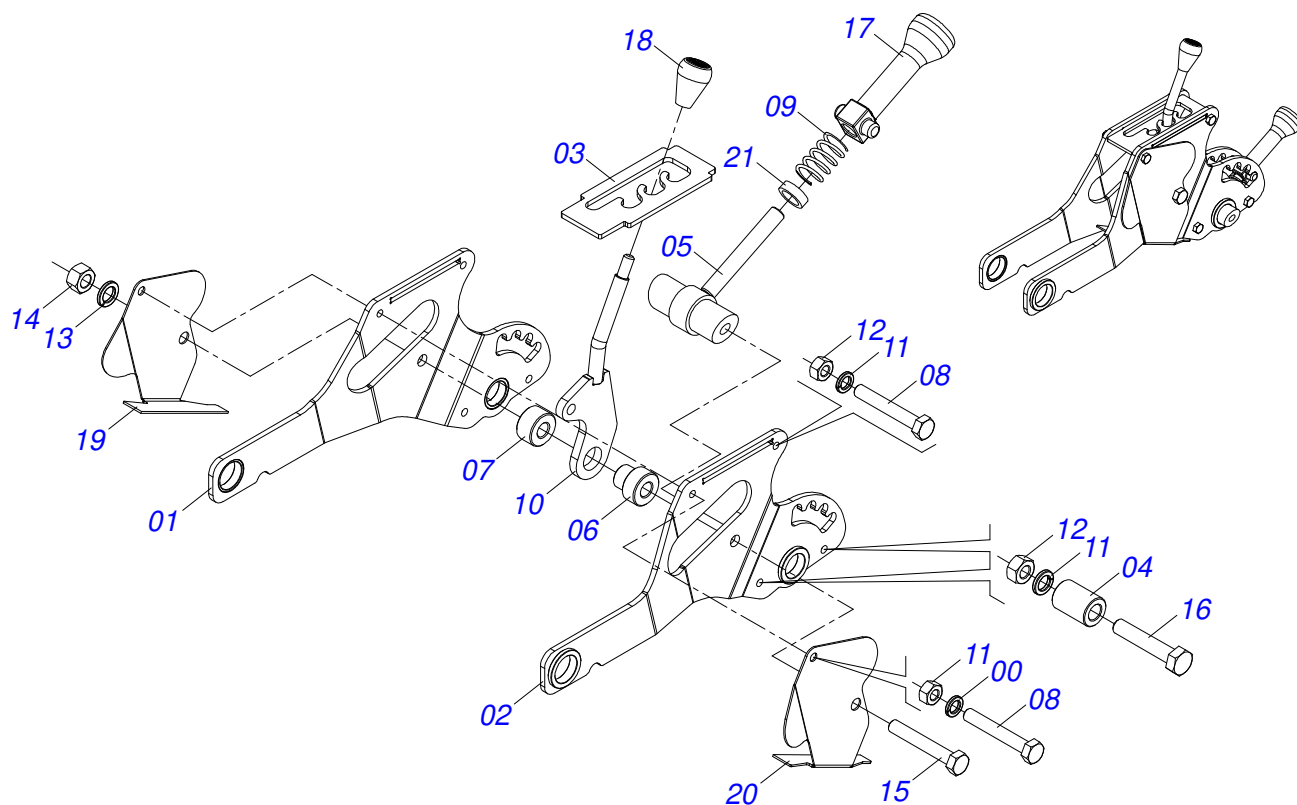 


Item	Code	Description	See page	QT
01	0521068003	RIGHT SIDE		01
02	0521068002	LEFT SIDE		01
03	0581014847	PLATE UPPER		01
04	0581015855	SLEEVE		02
05	0521068004	HANDLE BODY		01
06	0581014969	SLEEVE GUIDE		01
07	0581014968	SLEEVE FLANGE		01
08	0503010937	5/16" X 3" BOLT		02
09	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
10	0521068005	LEVER		01
11	0503010179	5/16" ZN SPRING WASHER		04
12	0503010337	5/16" NUT		04
13	0503010019	1/2" SPRING WASHER		01
14	0503010060	1/2" NUT		01
15	0503010847	1/2" X 3.1/4" BOLT		01
16	0503010882	BOLT		02
17	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
18	0503030878	LEVER CRANK		01
19	0581015854	RIGHT PROTECTION COVER		01
20	0581015853	LEFT PROTECTION COVER		01
21	0581015903	SPACER WASHER		01

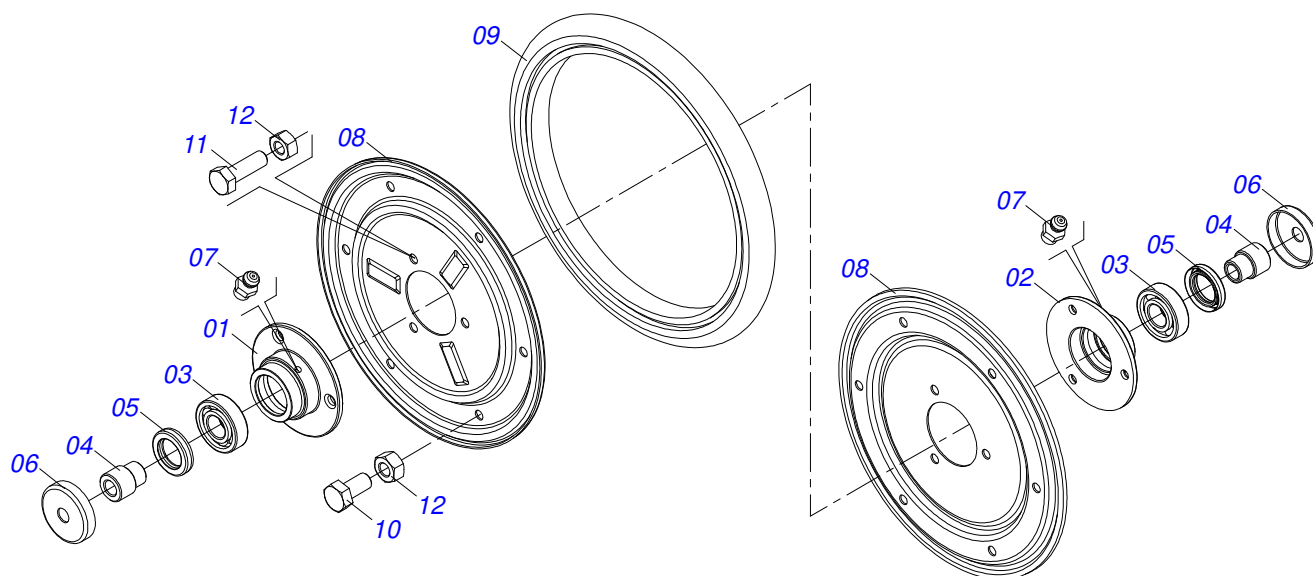 


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

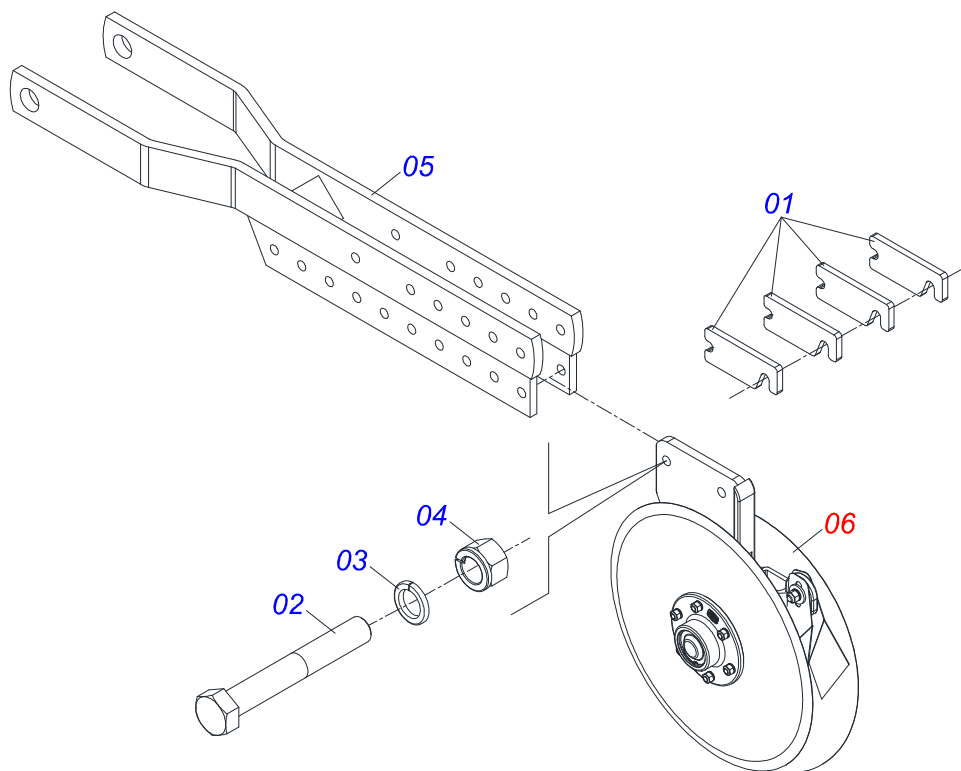 


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503011440	SPRING WASHER		02
04	0503010060	1/2" NUT		02
05	0521061121	SHORT FERTILIZER ROW ARM		01
06	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	91	01

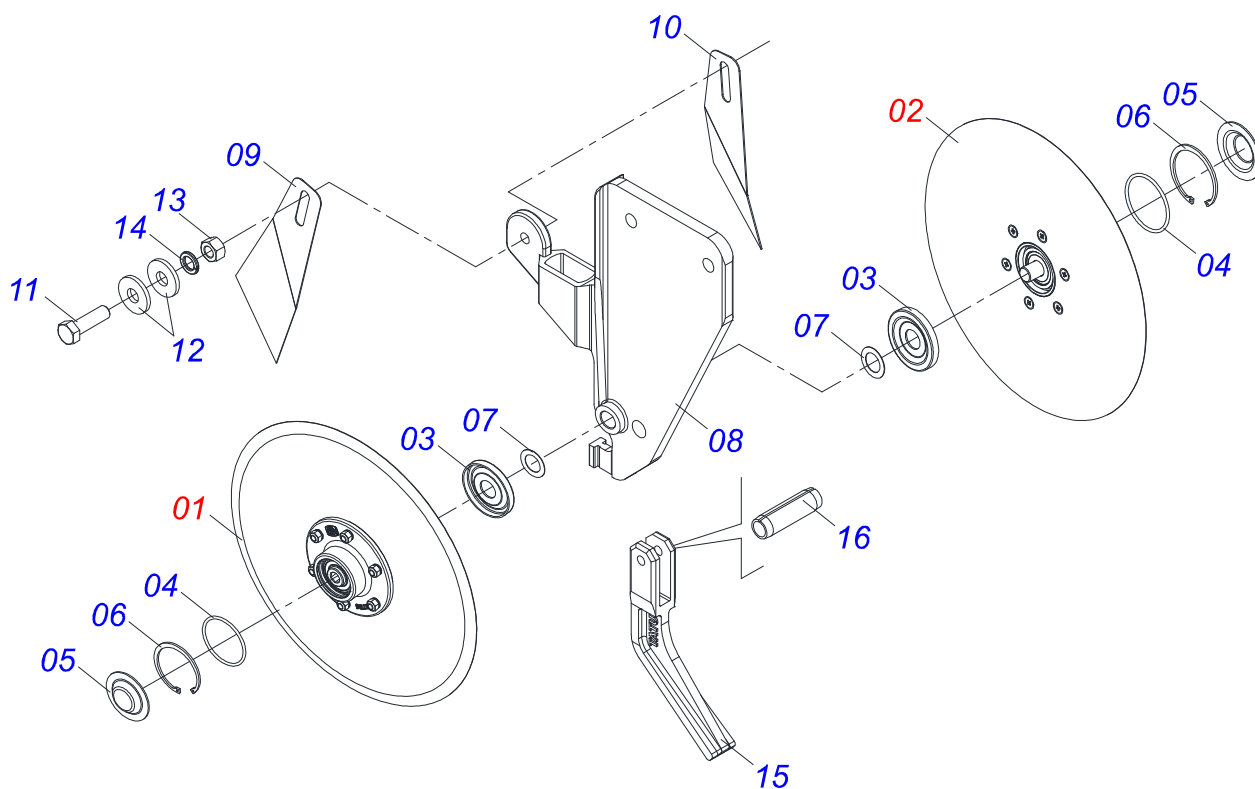 


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	84	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	85	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503011443	3/8" SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

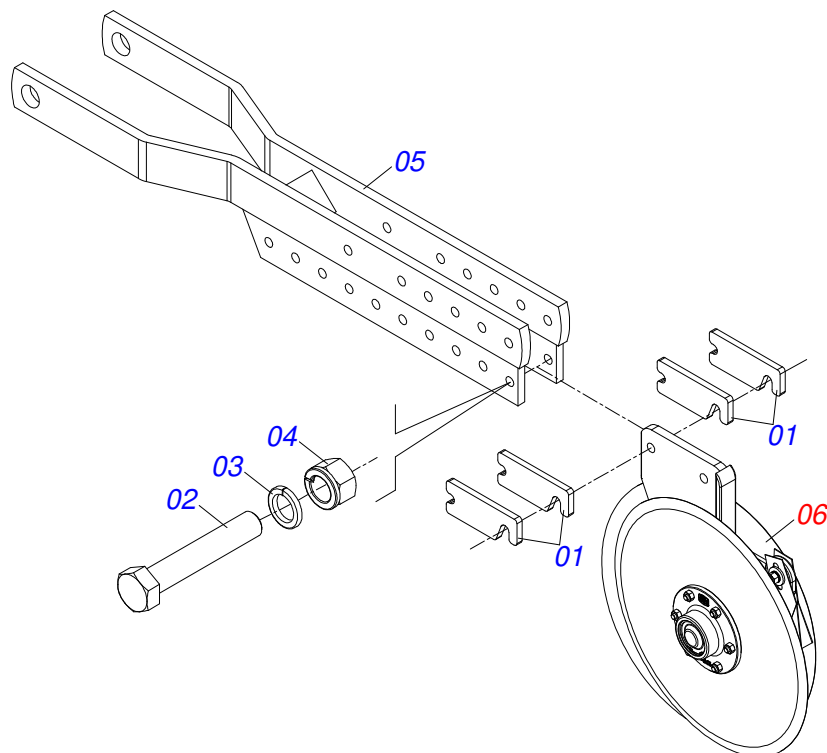 


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503011440	SPRING WASHER		02
04	0503010060	1/2" NUT		02
05	0521061153	LONG ARM FERTILIZER LINE		01
06	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	93	01

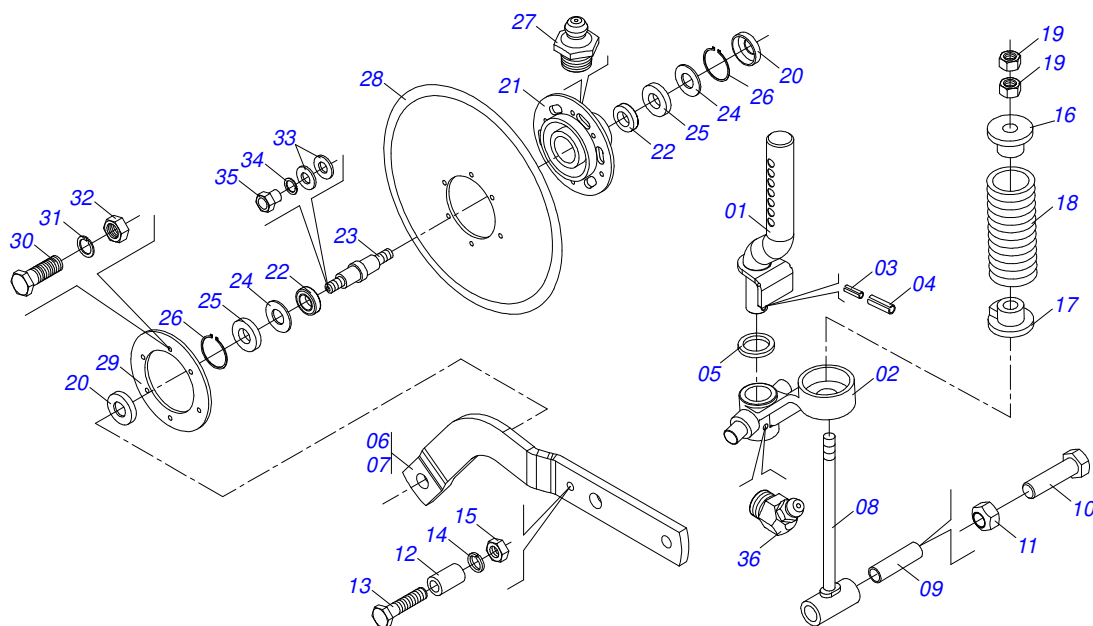 


Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15	85	01
02	0511053172	LEFT LOW CUBE WITH DISC 15	84	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010025	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

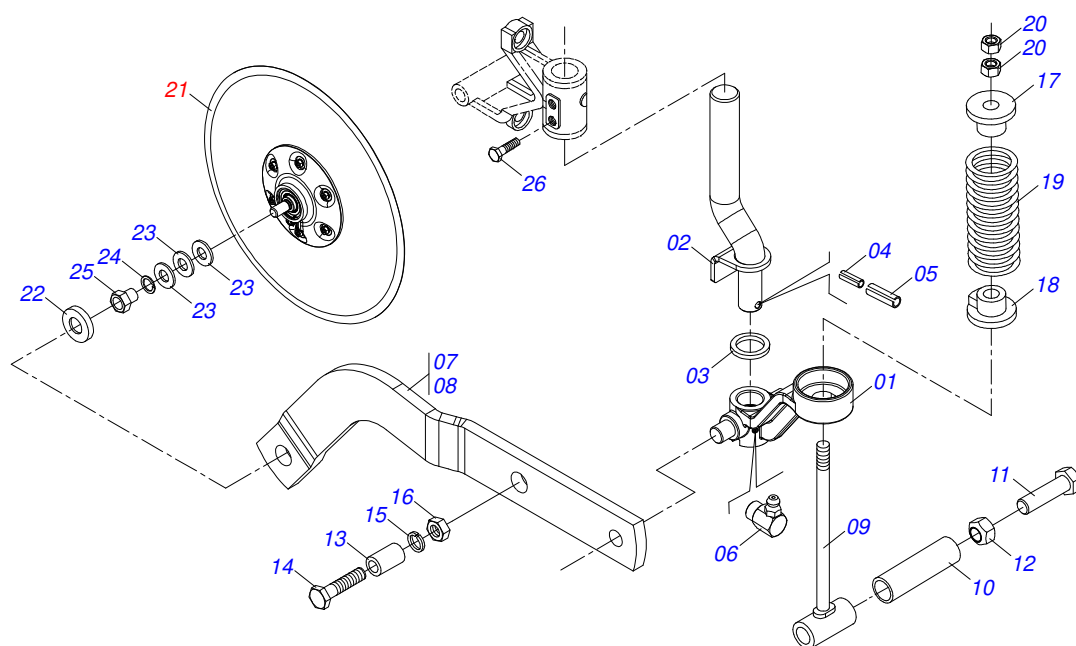 


Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE		01
02	0511067045	SHORT WHIT BEATER BLADE DISC FIX AXLE		01
03	0541018684	FLAT WASHER		01
04	0503010756	0.2" X 2.4" SPRING PIN		01
05	0503010361	SPRING PIN		01
06	0503010003	1845 GREASE FITTING		01
07	0521014137	RIGHT ARM OF THE BLADE DISC		01
08	0521014138	SUPPORT ARM LEFT BALDE DISC		01
09	0501067323	SPRING REGULATOR		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0503011255	3/4" LOCK NUT		01
13	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
14	0503011411	1/2" X 5-1/2" BOLT		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01
17	0502020393	SPRING UPPER SUPPORT		01
18	0502020394	SPRING SUPPORT		01
19	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
20	0503010014	3/4" NUT		02
21	0501054887	20 BLADE DISC WITH FLAT PLAN DISC	96	01
22	0521015376	DUST CLOAK		02
23	0511015346	FLAT WASHER		06
24	0503011442	3/4" SPRING WASHER		02
25	0521013510	3/4" NUT		02
26	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02

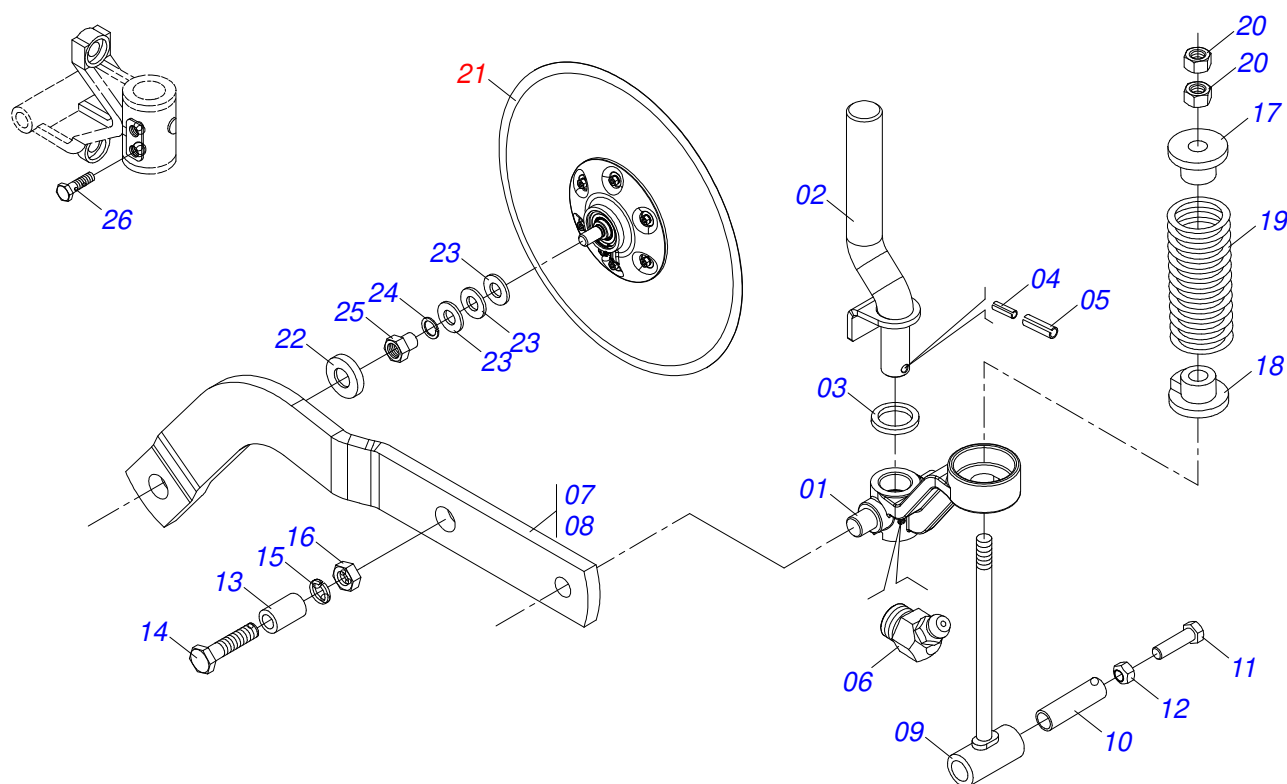 


Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE		01
02	0511067044	LONG WHIT BEATER BLADE DISC FIX AXLE		01
03	0541018684	FLAT WASHER		01
04	0503010756	0.2" X 2.4" SPRING PIN		01
05	0503010361	SPRING PIN		01
06	0503010003	1845 GREASE FITTING		01
07	0521014137	RIGHT ARM OF THE BLADE DISC		01
08	0521014138	SUPPORT ARM LEFT BALDE DISC		01
09	0501067323	SPRING REGULATOR		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0503011255	3/4" LOCK NUT		01
13	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
14	0503011411	1/2" X 5-1/2" BOLT		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01
17	0502020393	SPRING UPPER SUPPORT		02
18	0502020394	SPRING SUPPORT		01
19	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
20	0503010014	3/4" NUT		02
21	0501054887	20 BLADE DISC WITH FLAT PLAN DISC	96	01
22	0521015376	DUST CLOAK		02
23	0511015346	FLAT WASHER		06
24	0503011442	3/4" SPRING WASHER		02
25	0521013510	3/4" NUT		02
26	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02

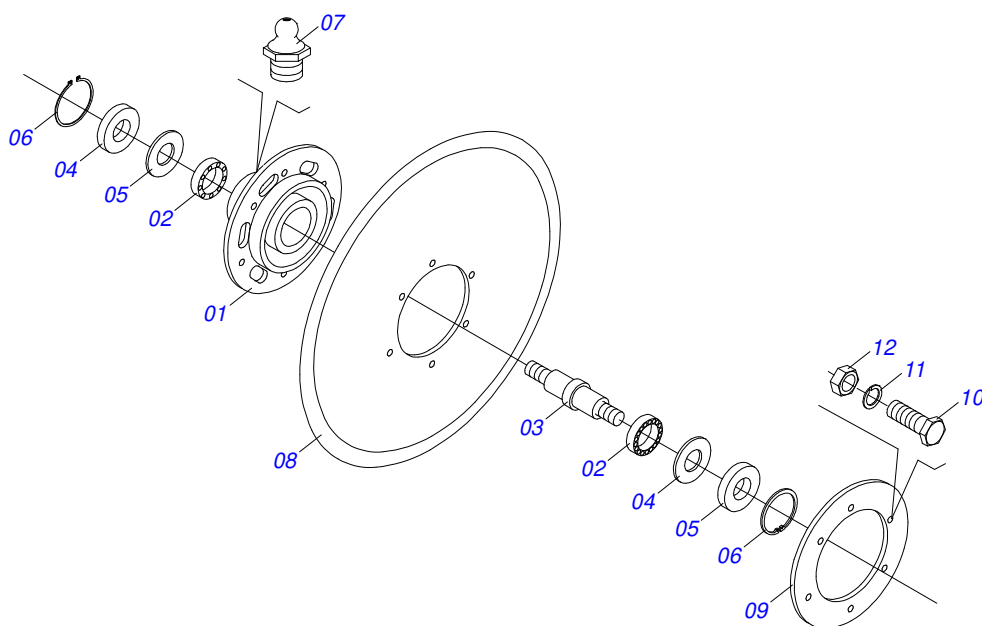 


Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503010276	6206 BALL BEARING		02
03	0521013610	BLADE DISC HUB AXLE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0603027851	20" X 0.2" FLAT PLAIN DISC		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

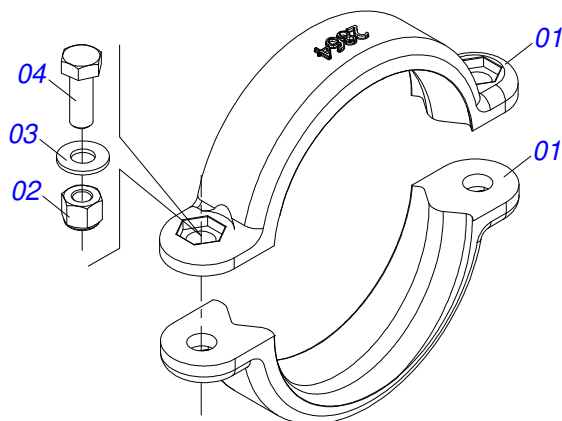 


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010365	NUT		02

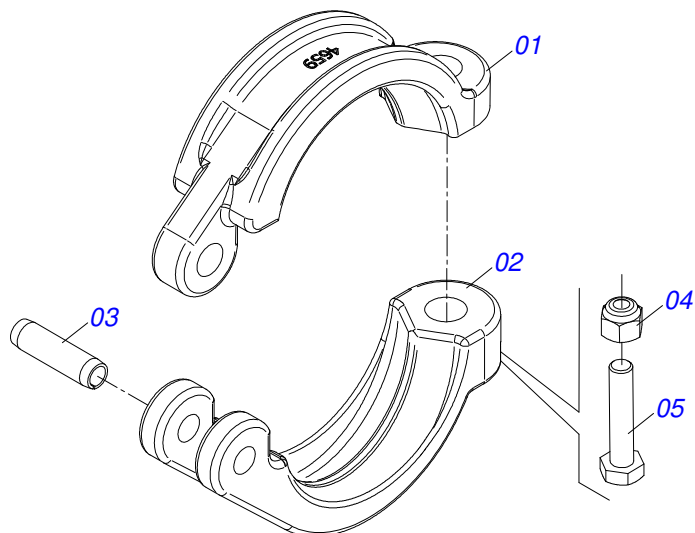 


Item	Code	Description	See page	QT
01	0503034660	CLAMP LOWER		01
02	0503034659	CLAMP UPPER		01
03	0503010686	0.2" X 0.7" SPRING PIN		01
04	0503011776	M6 SELF ADJUSTINGNUT		01
05	0503011813	M6 X 1.2" BOLT		01

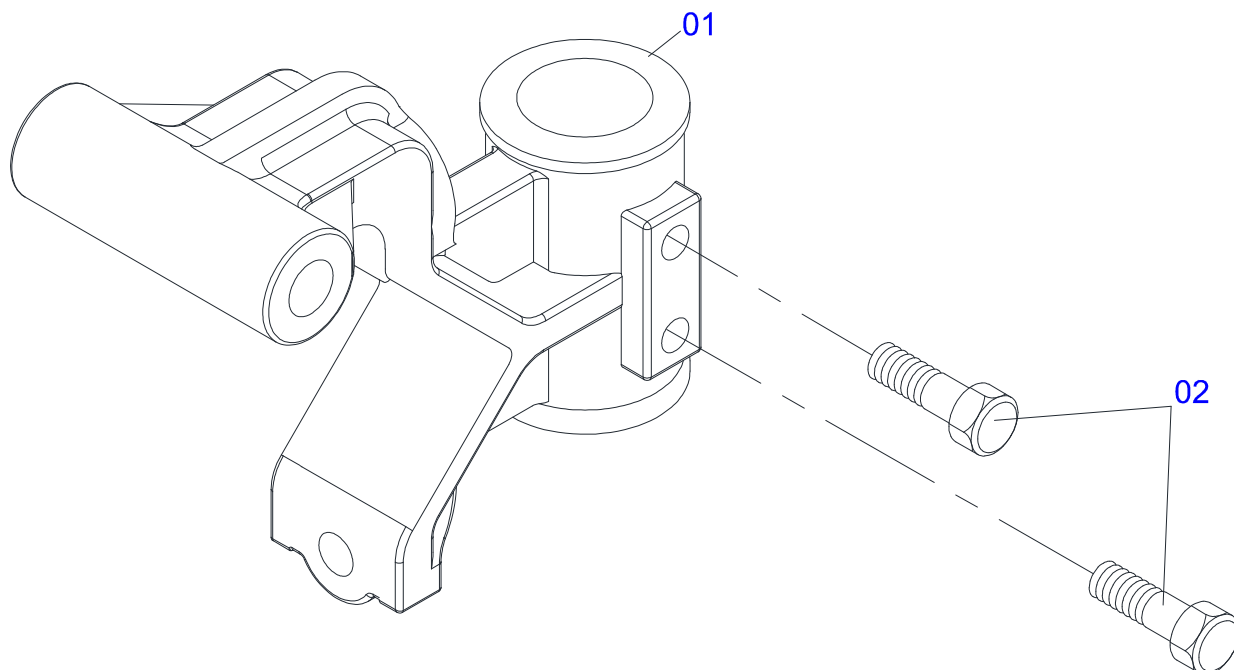 

Item	Code	Description	See page	QT
01	0502011567	FERTILIZER ROW SUPPORT		01
02	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02

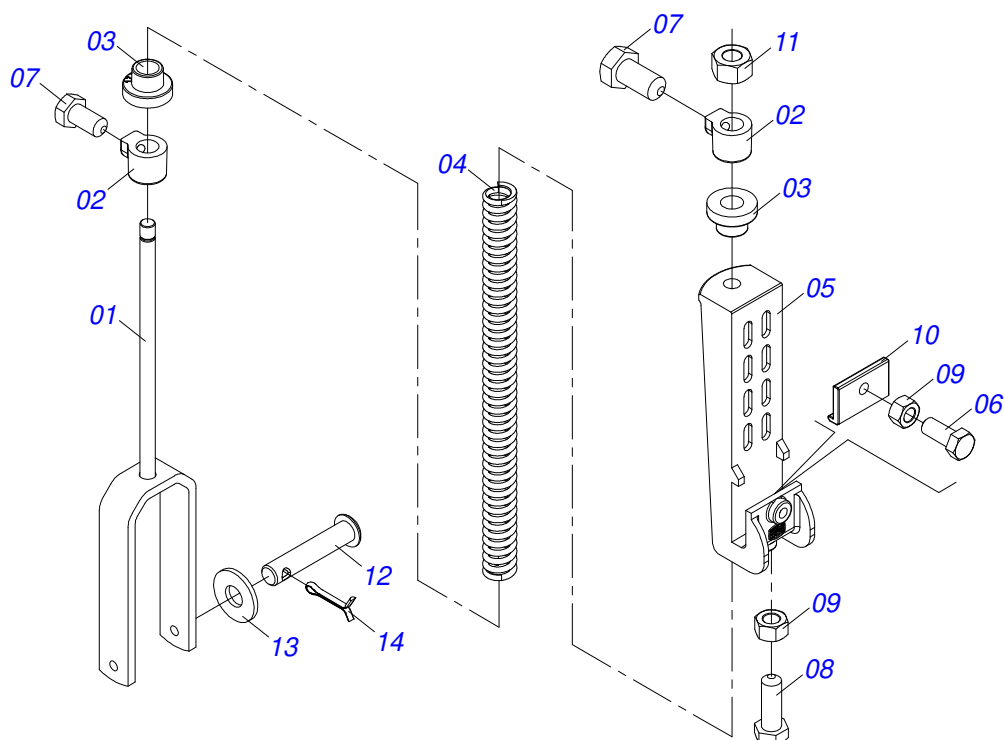 

Item	Code	Description	See page	QT
01	0511069645	FERTILIZER SPRING ROD		01
02	0502040534	SPRING GUIDE BUSHING LOCK		02
03	0502012184	FERTILIZER SPRING GUIDE		02
04	0503031910	1.7" X 22.8" X 0.3" SPRING		01
05	0502012510	SPRING ROD SUPPORT		01
06	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		01
07	0501018535	1/2 X 1 BOLT		02
08	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
09	0503010060	1/2" NUT		02
10	1902010891	SPRING CHOCK SUPPORT VARON		01
11	0503010014	3/4" NUT		01
12	0561014471	COUPLING SHAFT		01
13	0511017302	FLAT WASHER		01
14	0503010257	1/8" X 1" COTTERPIN		01

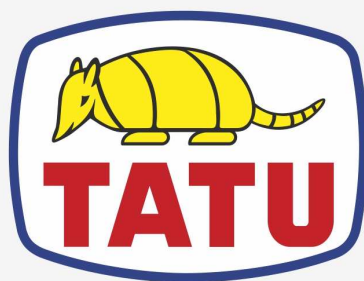 

MARCHESAN

Technical Publications | Elaboration and Revision

LORENA ROCHA ALVES

www.marchesan.com.br

