

ROW CROP PLANTERS

PST DUO FLEX SUPREMA P.P - FRAME 4790 - CSU - DOUBLE HEADER

Code: 0501093238
Series: S-0119
Revision: 00
Date Revision: ABRIL/2022

PARTS CATALOGUE



MARCHESAN



PRODUCTS

Code	Description
0521047900	CABEÇALHO DUPLO COMPLETO SUPREMA
0111250116	PST DUO FLEX SUP PP 4790/11E450 DIR ESP S-0119
0111250115	PST DUO FLEX SUP PP 4790/11E450 ESQ ESP S-0119

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.

INDEX

0909094704	PST DUO FLEX SUPREMA P.P - FRAME 4790 - DOUBLE HEAD	1
0521047900	SUPREME COMPLETE DOUBLE HEADER	2
0909094705	PST DUO FLEX SUPREMA P.P - FRAME 4790 - RIGHT	3
0909090094	PST DUO FLEX SUPREMA P.P - FRAME 4790 - LEFT	4
0511059398	SEMI-ASSEMBLED DOUBLE HEADER	5
0909093876	FIXER SUPPORT BOLT HOSE	6
0909093873	HYDRAULIC CIRCUIT	7
0909093877	HYDRAULIC CIRCUIT TURBINE	8
0511052464	FLOW DIVIDING VALVE	9
0501053834	MALE QUICK COUPLER	10
0501053835	FEMALE QUICK COUPLER	11
0909093878	LIFTING HYDRAULIC CIRCUIT	12
0501054694	FLOW DIVIDING VALVE ASSY	13
0909093879	HYDRAULIC CIRCUIT ROW MARKER	14
0501054061	SEQUENCE VALVE WITH NIPPLES	15
0501054863	WELL AND TIRE ASSY	16
0503060414	WHEEL AND TIRE	17
0501051799	STUB SHAFT & HUB ASSY	18
0521024266	BOX WITH PP DOUBLE HEADING COMPONENTS	19
0521050156	DOUBLE HEAD ARTICULATION ASSEMBLY	20
0501051160	TRACTOR HITCH PIN	21
0501054862	AXIS LOCK RODE ASSY	22
0511053179	TRACTOR COUPLING SHAFT	23
0511056409	TRACTOR HITCH	24
0511056736	HOSE SUPPORT	25
0511033090	PACKED PIECES DOUBLE HEAD PACKAGE	26
0531053951	CHASSIS WITH RIGHT HINGING	27
0531053952	RIGHT CHASSIS WITH RIGHT WHEEL AXLE 4790	28
0531053950	LEFT CHASSIS WITH LEFT ROUNDED AXLE 4790	29
0501110791	FRONT ARTICULATOR HUB WITH GLOVES	30
0501110683	REAR HUB OF ARTICULATOR WITH GLOVES	31
0511058667	SPRING FLOW ENSEMBLY	32
0521058402	WHEELED WITH 655 DRIFT SPRING WITH TRANSMISSION	33
0521058401	655 WHEELED SUPPORT WITH TRANSMISSION	34
0501058241	WHEEL SUPPORT CHAIN TENSIONER	35
0521058241	PLANTING MONITORING ASSY 13 LINES LEFT SEED HEAD DOUBLE PM400	36
0503063172	WHEEL	37
0521055233	WHEELED TRANSMISSION WITHOUT TIRE	38
0521055234	WHEELED FASTENER	39
0521055236	INTERMEDIARY CURRENT STRETCHER	40
0521055238	BEARING TENSIONER CHAIN	41
0521055237	WHEEL FIXED CURRENT STRETCHER	42
0521055235	WHEEL MOBILE CURRENT STRETCHER	43
0521054561	CYLINDER ASSEMBLY	44
0511058406	HYDRAULIC CYLINDER	45
0511056742	ASSY SYSTEM HYDRAULIC 4880/5720/5950	46
0501054452	FLOW DIVIDING VALVE	47
0909095907	HEADER COMPLETE ASSY	48
0511055096	TRACTOR HITCH	49
0521053310	LEFT EXTENSION HEADER 36.00 - 4880/5720/5950	50
0521053311	RIGHT EXTENSOR HEAD 36,00 - 4880/5720/5950	51
0511052311	3 POINT TURNBUCKLE	52
0521056834	SILLO FERTILIZER ASSY 4790 RIGHT MACHINE	53

INDEX

0521056837	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 4790 RIGHT MACHINE	54
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	55
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	56
0501053788	3/4 SQUARE AXLE FASTENER	57
0521056836	SILO SUPPORT FERTILIZER RIGHT WITH DISTRIBUTOR 4790 RIGHT MACHINE	58
0531054311	TCE TRANSMISSION RIGHT SET	59
0531054312	RIGHT SET TRANSMISSION HEXAGONAL AXLE 3/4 TCE SEED	60
0521055372	ROW SEED BEARING	61
0531052183	BEARING SHAFT TRANSMISSION LINE PEANUT SEED	62
0511050617	FRONT SEED ROW BEARING	63
0531052164	STRETCH 17Z CHAIN 40-1 PEANUTS	64
0511051434	TRANSMISSION ACTUATOR	65
0501052560	MOTOR AXLE SIGNAL	66
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	67
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	68
0531054313	SUPREME TCE FULL RIGHT EXCHANGE	69
0531054314	COMPLETE LEFT GEAR SUPREME TCE	70
0501058212	SEMI MOUNTED RIGHT CHANGE	71
0501058213	LH GEAR BOX	72
0501048790	AXLE WITH RING	73
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	74
0501056443	GEAR HOUSING BEARING	75
0501056444	BEARING WITH ROLLING	76
0511059266	CLOSED BEARING	77
0501056271	GEARBOX CLOSED BEARING	78
0501054655	CHAIN TENSIONER ASSY	79
0521055216	BEARING WITH GEAR	80
0521055217	LOWER CURRENT STRETCH	81
0501058254	UPPER SEED CHAIN TENSIONER	82
0521055218	BEARING GEAR WITH DOUBLE	83
0521055214	BEARING GEAR WITH	84
0521055215	DOUBLE TRANSMISSION BEARING	85
0511059261	CHAIN TENSIONER	86
0521056841	PLATFORMS 4790 RIGHT MACHINE ASSY	87
0521056843	HANDRAIL ASSEMBLY 4790	88
0511054971	JACK ASSEMBLY	89
0511056536	LADDER ASSEMBLY	90
0531054383	SET LABELS FOR CSU	91
0521054580	REAR LIGHTING ASSEMBLY 4880	92
0521052792	MOUNTED REAR LIGHT	93
0531054315	RIGHT SET TURBINE MTH P.P CSU TCE	94
0531054316	AIR CONDUCTOR 06 MOUTH 2330 RIGHT	95
0531054317	AIR CONDUCTOR 05 MOUTH 2130 LEFT	96
0511059527	TURBINE P.P ASSEMBLY CSC	97
0511059887	TURBINE PRECISION PLANTING	98
0521050154	TURBINE P.P WITH HOLE	99
0521052549	CLAMP	100
0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	101
0521054586	ASSY MANUAL DOOR	102
0531054327	CONDUCTOR CSU ASSEMBLY 3 SM TCE	103
0511058996	ASSEMBLY CSU	104
0511057690	3" ARTICULATED SEED CONDUCTOR	105
0531054328	TOWER WITH TCE SCREW FIXING	106



MARCHESAN

INDEX


0521050525	FIXER FERTILIZER CONDUCTOR	107
0511057817	SUPPORT HOSE	108
0521054181	TOOL BOX ASSEMBLY	109
0521054525	CONTAINER WATER TANK	110
0909090119	SEED/FERTILIZER ROW ASSY	111
0531054329	FRONT SEED LINE WITH TCE SHAFT SUPPORT	112
0521058524	SEED ROW FRONT	113
0531054330	RIGHT SPICER REAR TO. PLANTING CSU TCE	114
0531054331	REAR SPICRR LEFT P. PLANTING CSU TCE	115
0521058084	REAR WITH RIGHT DDD SPICRR	116
0521056635	RIGHT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	117
0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	118
0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	119
0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	120
0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	121
0521056632	DEPTH CONTROL	122
0521056633	MOUNTED RIGHT ARM	123
0521055059	WHEEL RAYED ASSY SPA WITHOUT LUBRICATION	124
0521055073	ASSEMBLY DEPTH WHEEL BOX	125
0521056631	MOUNTED LEFT ARM	126
0521055093	BODY COMPACTOR	127
0521054990	LEFT COMPACTOR WHEEL	128
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	129
0521055017	RIGHT COMPACTOR WHEEL	130
0521056956	PRECISION PLANTING CSU CABLE/TRANSMISSION ASSY	131
0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN DISC	132
0521052131	DISTRIBUTOR VSET2 WITH CORN DISK WITHOUT PROTECTION	133
0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION	134
0521056634	LEFT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	135
0531052192	PEANUT CHAIN GUIDE SET	136
0521054811	FERTILIZER SHORT LINE	137
0521054812	LONG FERTILIZER LINE	138
0521054906	SPRING ASSY FERTILIZER	139
0521053231	DPL 20 SHORT LINE WITHOUT LUBRICATION CONICAL BEARING	140
0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	141
0521053697	CUTTING DISK BOX	142
0521053232	DPL 20 LONG LINE WITHOUT LUBRICATION CONICAL BEARING	143
0521054768	DDD RIGHT FERTILIZER WITH SUPPORT	144
0521054769	LEFT FERTILIZER WITH SUPPORT	145
0521055868	RIGHT DUAL FERTILIZER DISC	149
0521055869	LEFT DUAL FERTILIZER DISC	150
0521053947	HDA ELEVATION 0869	151
0521053951	STEM	152
0521053932	ROD WITH BEAK 0869	153
0521056829	JOINT FRAME 4790 LEFT MACHINE	154
0521056832	RIGHT FRAME WITH ROUND AXLE 4790 LEFT MACHINE	155
0521056833	LEFT FRAME WITH ROUND AXLE 4790 LEFT MACHINE	156
0521056835	SILO FERTILIZER ASSY 4790 LEFT MACHINE	157
0521056838	SILO SUPPORT FERTILIZER RIGHT WITH DISTRIBUTOR 4790 LEFT MACHINE	158
0521056840	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 4790 LEFT MACHINE	159
0531054309	LEFT SET TRANSMISSION TCE	160




MARCHESAN

INDEX


0531054310	3/4 HEX AXLE LEFT TRANSMISSION ASSEMBLY		161
0521056842	PLATFORMS 4790 LEFT MACHINE ASSY		162
0531054318	LEFT SET TURBINE MTH PP CSU TCE		163
0531054323	AIR CONDUCTOR 06 MOUTH LEFT		164
0531054325	AIR CONDUCTOR 05 RIGHT BUTTONS		165

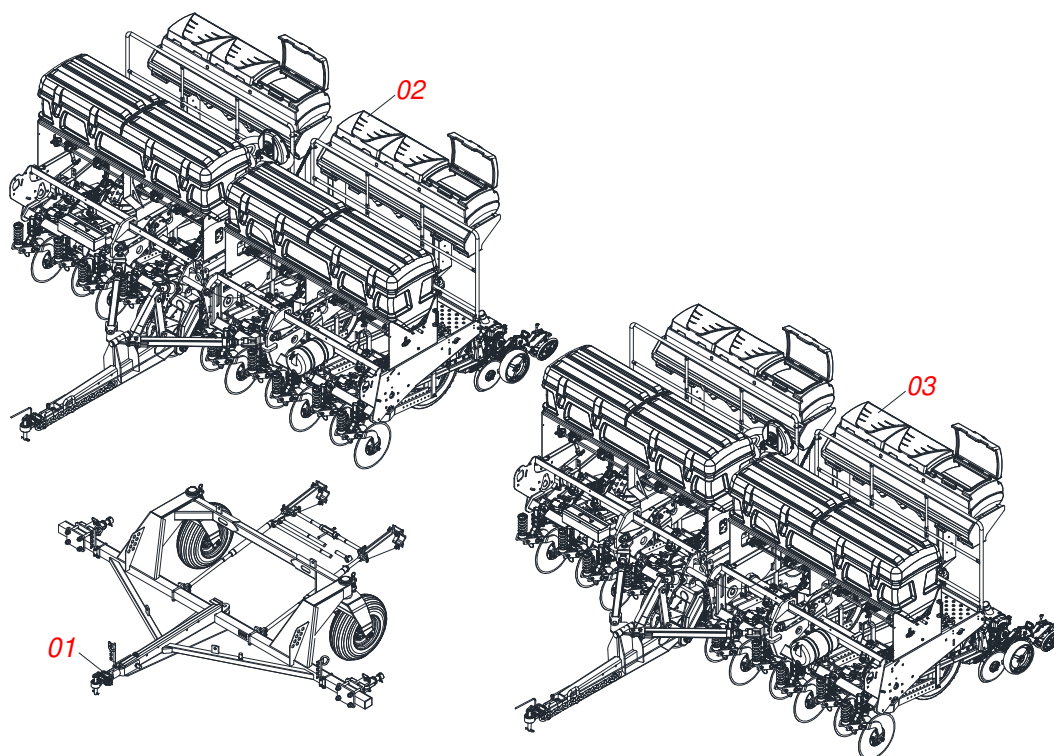

Item	Code	Description	See page	QT
01	0521047900	SUPREME COMPLETE DOUBLE HEADER	2	01
02	0909094705	PST DUO FLEX SUPREMA P.P - FRAME 4790 - 3 RIGHT		01
03	0909090094	PST DUO FLEX SUPREMA P.P - FRAME 4790 - 4 LEFT		01

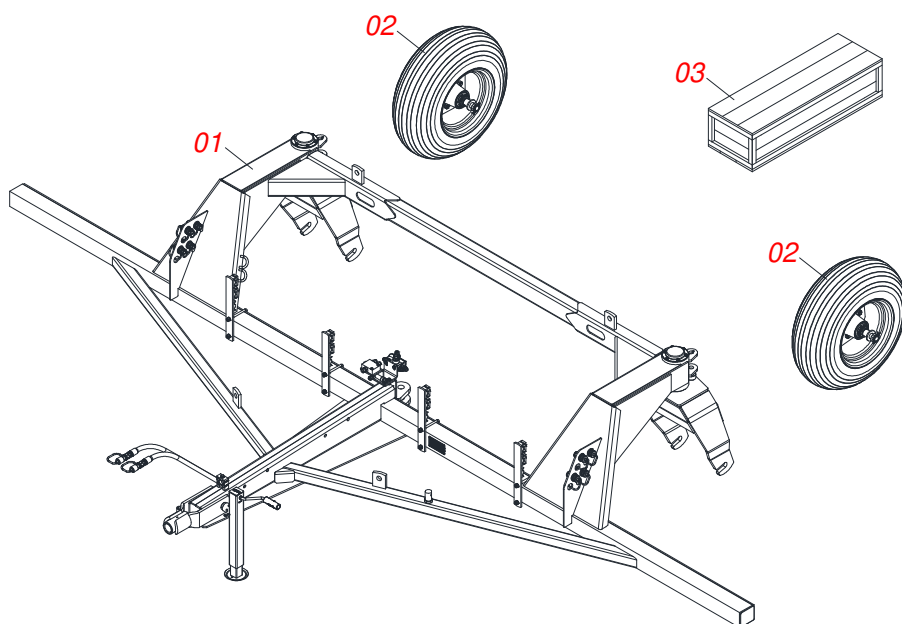


Item	Code	Description	See page	QT
01	0511059398	SEMI-ASSEMBLED DOUBLE HEADER	5	01
02	0501054863	WELL AND TIRE ASSY	16	02
03	0521024266	BOX WITH PP DOUBLE HEADING COMPONENTS	19	01

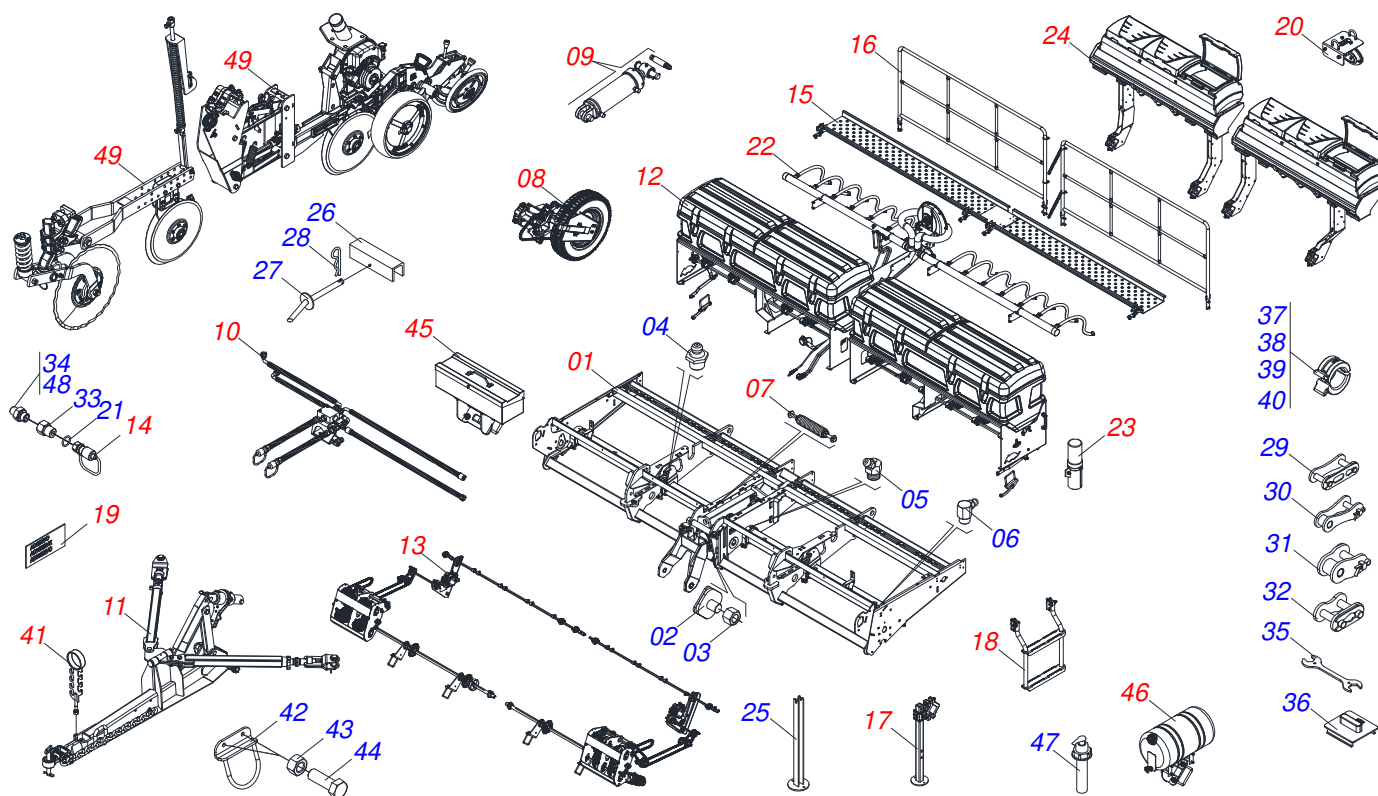


Item	Code	Description	See page	QT
01	0531053951	CHASSIS WITH RIGHT HINGING	27	01
02	0521064285	LOCK LOWER FRAME		01
03	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		01
04	0503010002	1800 GREASE FITTING		01
05	0503010003	1845 GREASE FITTING		05
06	0503010004	1890 GREASE FITTING		02
07	0511058667	SPRING FLOW ENSEMBLY	32	01
08	0521058402	WHEELED WITH 655 DRIFT SPRING WITH TRANSMISSION	33	04
09	0521054561	CYLINDER ASSEMBLY	44	01
10	0511056742	ASSY SYSTEM HYDRAULIC 4880/5720/5950	46	01
11	0909095907	HEADER COMPLETE ASSY	48	01
12	0521056834	SILO FERTILIZER ASSY 4790 RIGHT MACHINE	53	01
13	0531054311	TCE TRANSMISSION RIGHT SET	59	01
14	0501053834	MALE QUICK COUPLER	10	01
15	0521056841	PLATFORMS 4790 RIGHT MACHINE ASSY	87	01
16	0521056843	HANDRAIL ASSEMBLY 4790	88	01
17	0511054971	JACK ASSEMBLY	89	04
18	0511056536	LADDER ASSEMBLY	90	02
19	0531054383	SET LABELS FOR CSU	91	01
20	0521054580	REAR LIGHTING ASSEMBLY 4880	92	01
21	0503010045	O'RING		01
22	0531054315	RIGHT SET TURBINE MTH P.P CSU TCE	94	01
23	0521054586	ASSY MANUAL DOOR	102	01
24	0531054327	CONDUCTOR CSU ASSEMBLY 3 SM TCE	103	01
25	0501065677	STRUT		02
26	0521013022	TRANSPORT LOCK		02
27	0501068994	0.3" X 3.1" LOCK PIN		02
28	0503030168	HAIR PIN		02
29	0503010780	N-2050 AMENDMENT		02
30	0503010951	REDUCTION		04
31	0503011750	AMENDMENT WITH LOCK		06

Item	Code	Description	See page	QT
32	0503011751	REDUCTION		06
33	0541010080	TERMINAL R.1 / 2 NPT		01
34	0571015343	NIPLE 1 / 2NPT X 3 / 4NPT		01
35	0541015451	FIXED KEY 2.3/8 X 2.3/4		01
36	0503032624	SILO FERTILIZER GUTTER		06
37	0501047895	ROD STOP		02
38	0501047885	ROD STOP		02
39	0501047886	ROD STOP		02
40	0501047887	ROD STOP		02
41	0511057817	SUPPORT HOSE	108	01
42	0521065613	HOSE HOLDER		01
43	0503013816	5/16" LOCKNUT		02
44	0503011953	5/16" X 1" BOLT		02
45	0521054181	TOOL BOX ASSEMBLY	109	01
46	0521054525	CONTAINER WATER TANK	110	01
47	0503019262	SOAP DISH VACUUM		01
48	0581013729	NIPLE 1/2 NPT		01
49	0909090119	SEED/FERTILIZER ROW ASSY	111	11

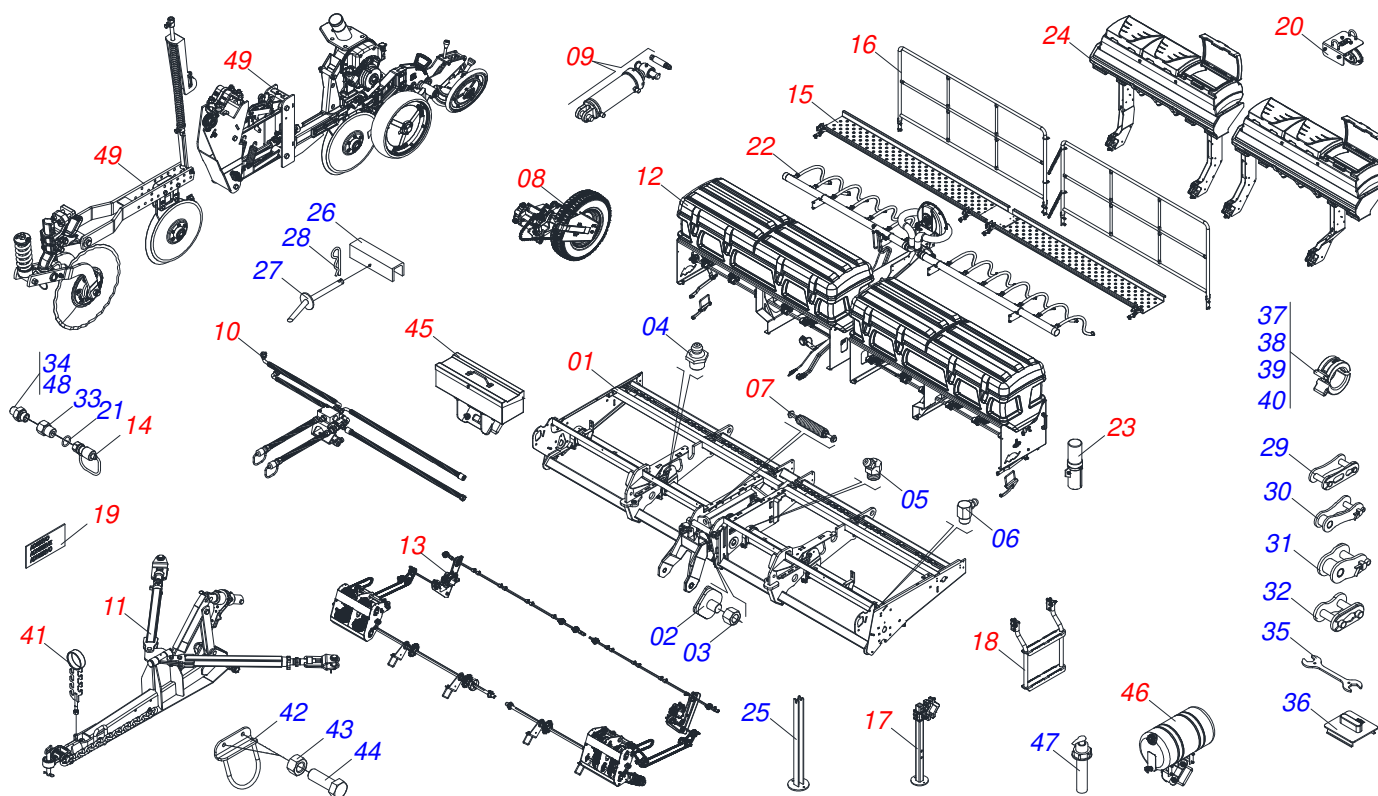

Item	Code	Description	See page	QT
01	0521056829	JOINT FRAME 4790 LEFT MACHINE	154	01
02	0521064285	LOCK LOWER FRAME		01
03	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		01
04	0503010002	1800 GREASE FITTING		01
05	0503010003	1845 GREASE FITTING		05
06	0503010004	1890 GREASE FITTING		02
07	0511058667	SPRING FLOW ENSEMBLY	32	01
08	0521058402	WHEELED WITH 655 DRIFT SPRING WITH TRANSMISSION	33	04
09	0521054561	CYLINDER ASSEMBLY	44	01
10	0511056742	ASSY SYSTEM HYDRAULIC 4880/5720/5950	46	01
11	0909095907	HEADER COMPLETE ASSY	48	01
12	0521056835	SILO FERTILIZER ASSY 4790 LEFT MACHINE	157	01
13	0531054309	LEFT SET TRANSMISSION TCE	160	01
14	0501053834	MALE QUICK COUPLER	10	01
15	0521056842	PLATFORMS 4790 LEFT MACHINE ASSY	162	01
16	0521056843	HANDRAIL ASSEMBLY 4790	88	01
17	0511054971	JACK ASSEMBLY	89	04
18	0511056536	LADDER ASSEMBLY	90	02
19	0531054383	SET LABELS FOR CSU	91	01
20	0521054580	REAR LIGHTING ASSEMBLY 4880	92	01
21	0503010045	O'RING		01
22	0531054318	LEFT SET TURBINE MTH PP CSU TCE	163	01
23	0521054586	ASSY MANUAL DOOR	102	01
24	0531054327	CONDUCTOR CSU ASSEMBLY 3 SM TCE	103	01
25	0501065677	STRUT		02
26	0521013022	TRANSPORT LOCK		02
27	0501068994	0.3" X 3.1" LOCK PIN		02
28	0503030168	HAIR PIN		02
29	0503010780	N-2050 AMENDMENT		02
30	0503010951	REDUCTION		04
31	0503011750	AMENDMENT WITH LOCK		06

Item	Code	Description	See page	QT
32	0503011751	REDUCTION		06
33	0541010080	TERMINAL R.1 / 2 NPT		01
34	0571015343	NIPLE 1 / 2NPT X 3 / 4NPT		01
35	0541015451	FIXED KEY 2.3/8 X 2.3/4		01
36	0503032624	SILO FERTILIZER GUTTER		06
37	0501047895	ROD STOP		02
38	0501047885	ROD STOP		02
39	0501047886	ROD STOP		02
40	0501047887	ROD STOP		02
41	0511057817	SUPPORT HOSE	108	01
42	0521065613	HOSE HOLDER		01
43	0503013816	5/16" LOCKNUT		02
44	0503011953	5/16" X 1" BOLT		02
45	0521054181	TOOL BOX ASSEMBLY	109	01
46	0521054525	CONTAINER WATER TANK	110	01
47	0503019262	SOAP DISH VACUUM		01
48	0581013729	NIPLE 1/2 NPT		01
49	0909090119	SEED/FERTILIZER ROW ASSY	111	11

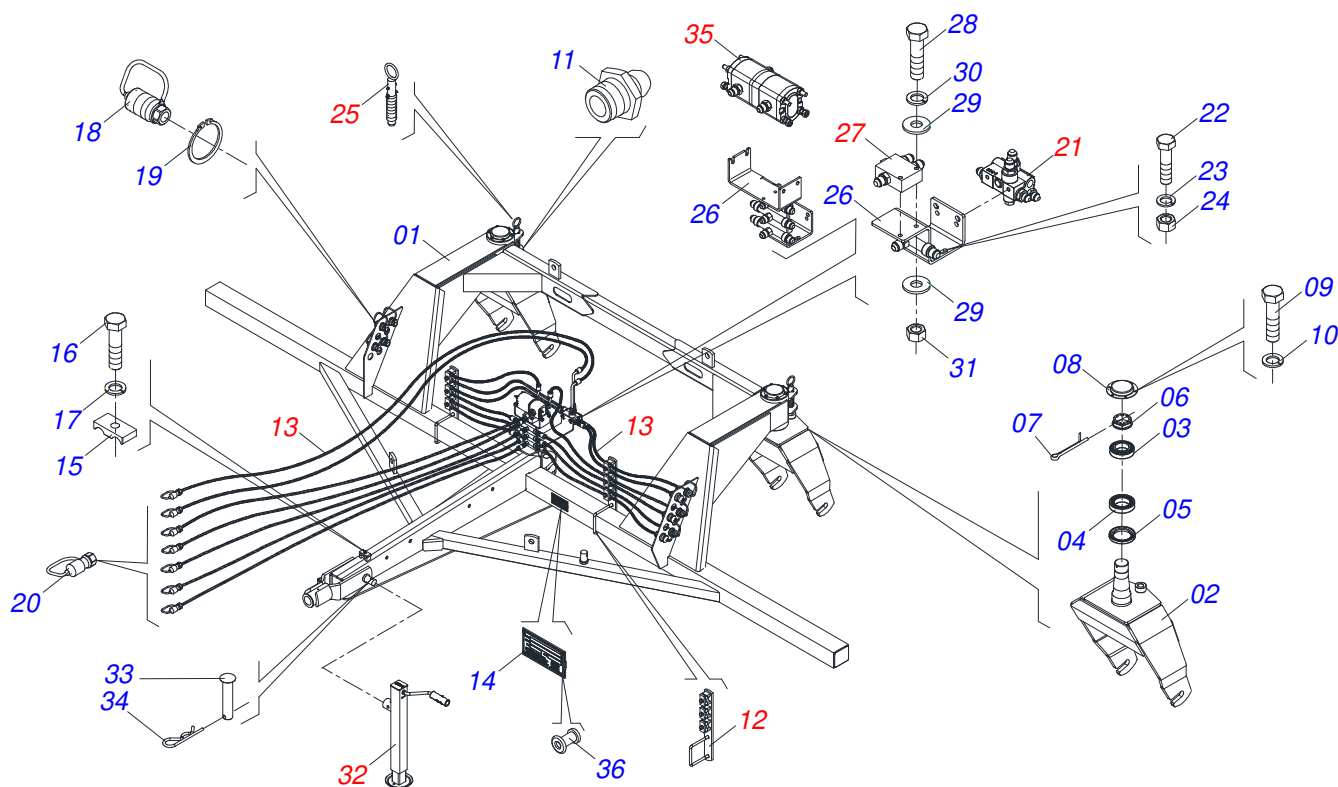


Item	Code	Description	See page	QT
01	0511064305	FRAME HEADER DOUBLE		01
02	0511064219	FORK WHEEL DRAWBAR DOUBLE		02
03	0503010007	3982/3920 ROLLER BEARING		02
04	0503010059	33287/33462 ROLLER BEARING		02
05	0503013106	SEAL 00085-B		02
06	0502040080	FLANGE NUT R.2.1/2 UN		02
07	0503011345	1/4" X 3-1/2" COTTERPIN		02
08	0541013225	WHEEL BOX COVER		02
09	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		12
10	0503011444	SPRING WASHER		12
11	0503010002	1800 GREASE FITTING		03
12	0909093876	FIXER SUPPORT BOLT HOSE	6	04
13	0909093873	HYDRAULIC CIRCUIT	7	01
14	0531017560	DISPLAYED IDENTIFICATION		08
15	0502012702	BODY SUPPORT CLAMP		09
16	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		09
17	0503010180	7/16" SPRING WASHER		09
18	0501053835	FEMALE QUICK COUPLER	11	08
19	0503010217	501040 CLAMPING RING (FOR AXLE)		16
20	0501053834	MALE QUICK COUPLER	10	04
21	0501054061	SEQUENCE VALVE WITH NIPPLES	15	01
22	0503010237	3/8" X 1" BOLT		02
23	0503010025	3/8" SPRING WASHER		02
24	0503010026	3/8" NUT		02
25	0501054862	AXIS LOCK RODE ASSY	22	02
26	0511066114	CONDUCTOR VALVE SUPPORT DOUBLE HEADER		01
26.	0521063568	SUPPORT VALVE		01
27	0501054694	FLOW DIVIDING VALVE ASSY	13	01
28	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
29	0501010694	FLAT WASHER		04
30	0503010143	1/4" SPRING WASHER		02




PST DUO FLEX SUPREMA P.P - FRAME 4790 - CSU - DOUBLE
SEMI-ASSEMBLED DOUBLE HEADER

Page 5
0511059398


Item	Code	Description	See page	QT
31	0503010144	1/4" NUT		02
32	0503062157	HEADER JACK		01
33	0521010549	COUPLING SHAFT		01
34	0503030168	HAIR PIN		01
35	0511052464	FLOW DIVIDING VALVE	9	01
36	0503010001	3.2 X 5.5 RIVET		04

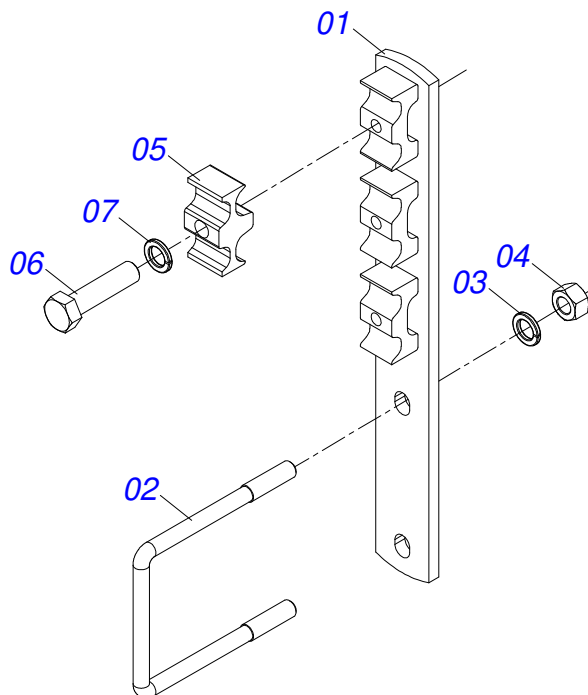


Item	Code	Description	See page	QT
01	0511064222	FIXER SUPPORT BOLT HOSE		02
02	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2" NUT		04
05	0502012702	BODY SUPPORT CLAMP		06
06	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
07	0503010180	7/16" SPRING WASHER		04

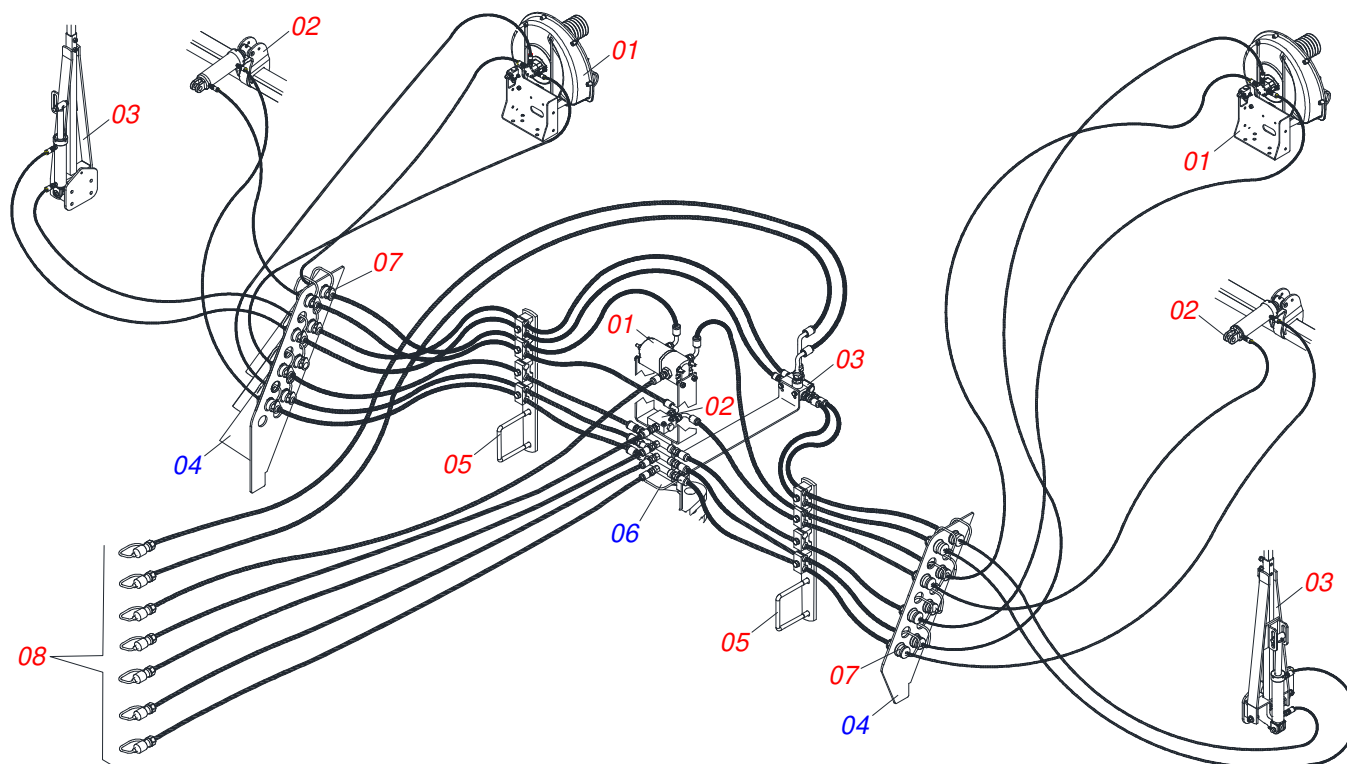


Item	Code	Description	See page	QT
01	0909093877	HYDRAULIC CIRCUIT TURBINE	8	01
02	0909093878	LIFTING HYDRAULIC CIRCUIT	12	01
03	0909093879	HYDRAULIC CIRCUIT ROW MARKER	14	01
04	0521065376	HEADER DOUBLE		01
05	0909093876	FIXER SUPPORT BOLT HOSE	6	02
06	0511066114	CONDUCTOR VALVE SUPPORT DOUBLE HEADER		01
07	0501053835	FEMALE QUICK COUPLER	11	08
08	0501053834	MALE QUICK COUPLER	10	04

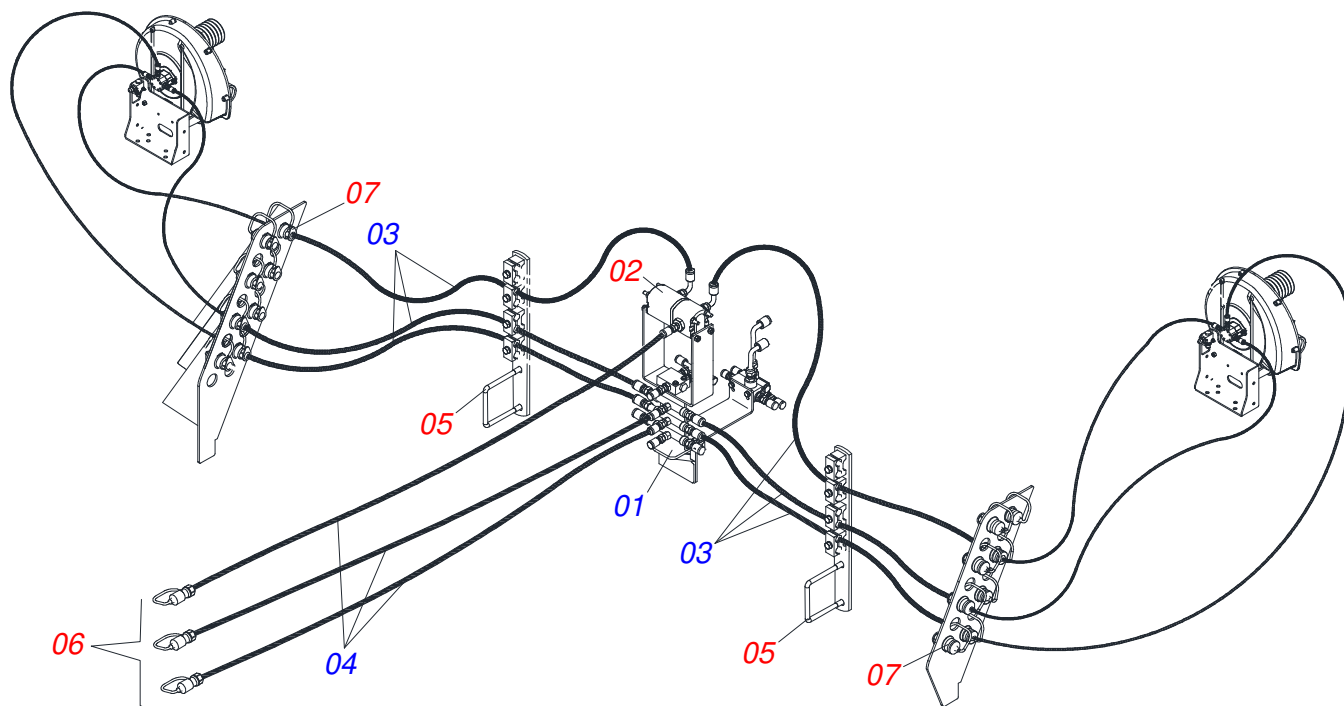


Item	Code	Description	See page	QT
01	0521063568	SUPPORT VALVE		01
02	0511052464	FLOW DIVIDING VALVE	9	01
03	0501080512	1/2" X 1400 TR-TM HOSE		06
03.	0501080072	1/2" X 63" TR-TM HOSE ASSY		06
04	0501080185	HOSE 1/2 X 4000 TR-TM		03
05	0909093876	FIXER SUPPORT BOLT HOSE	6	02
06	0501053834	MALE QUICK COUPLER	10	03
07	0501053835	FEMALE QUICK COUPLER	11	06

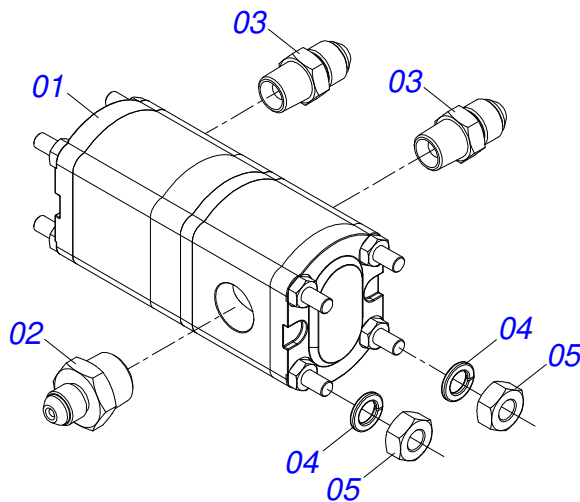


Item	Code	Description	See page	QT
01	0503013791	DOUBLE MOTOR		01
02	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE		01
03	0511014065	7/8" NF X R1/2NPT X 52 NIPPLE		02
04	0503010025	3/8" SPRING WASHER		04
05	0503011051	M10 X 0.6" NUT		04

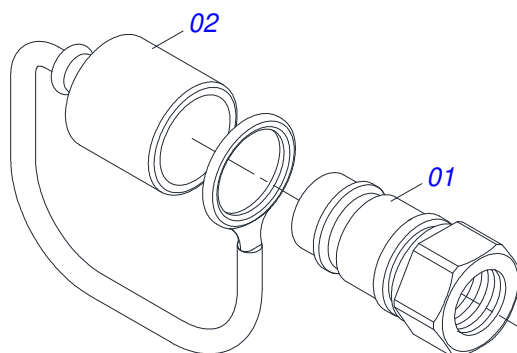


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

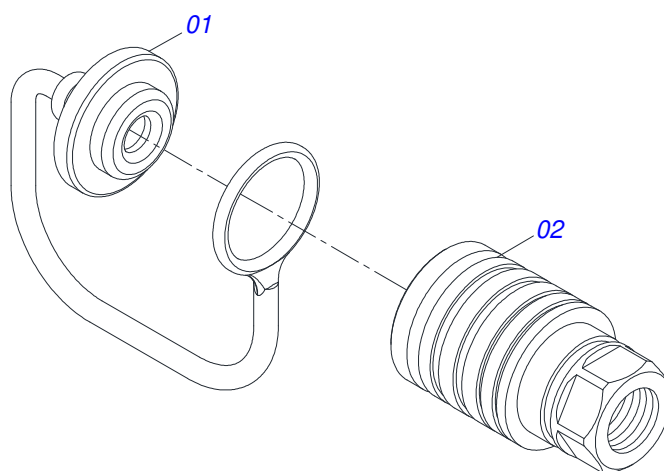


Item	Code	Description	See page	QT
01	0503011883	QUICK CONNECTION COVER		01
02	0503011628	FEMALE QUICK COUPLER		01

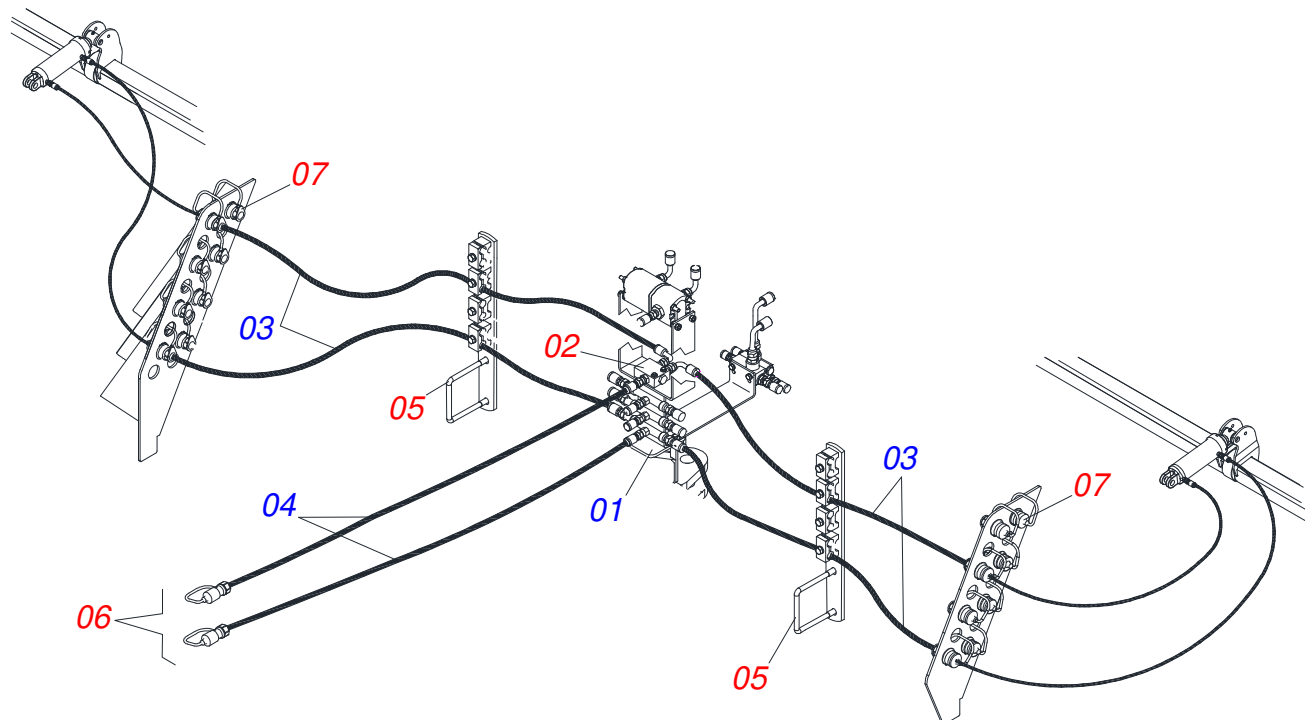


Item	Code	Description	See page	QT
01	0521063568	SUPPORT VALVE		01
02	0501054694	FLOW DIVIDING VALVE ASSY	13	01
03	0501080796	1/2" X 1400 TC-TM HOSE		04
03.	0501080335	1/2" X 63" TC-TM HOSE ASSY		04
04	0501080185	HOSE 1/2 X 4000 TR-TM		02
05	0909093876	FIXER SUPPORT BOLT HOSE	6	02
06	0501053834	MALE QUICK COUPLER	10	02
07	0501053835	FEMALE QUICK COUPLER	11	04

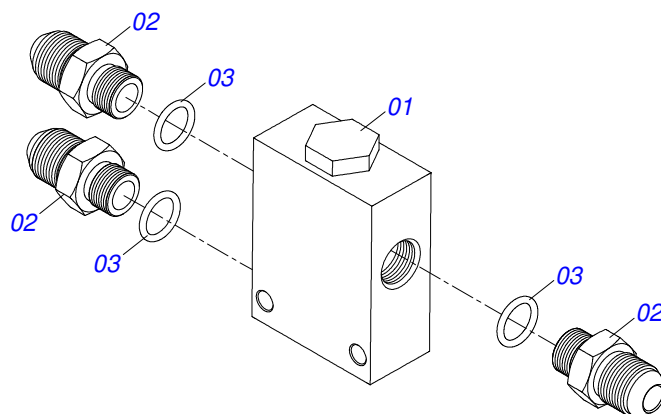


Item	Code	Description	See page	QT
01	0503012481	FLOW DIVIDING VALVE		01
02	0503030923	3/4" UNF X 13/16UN OFS X 40 NIPPLE		03
03	0503010190	2-114 N 3006-9B O'RING		03

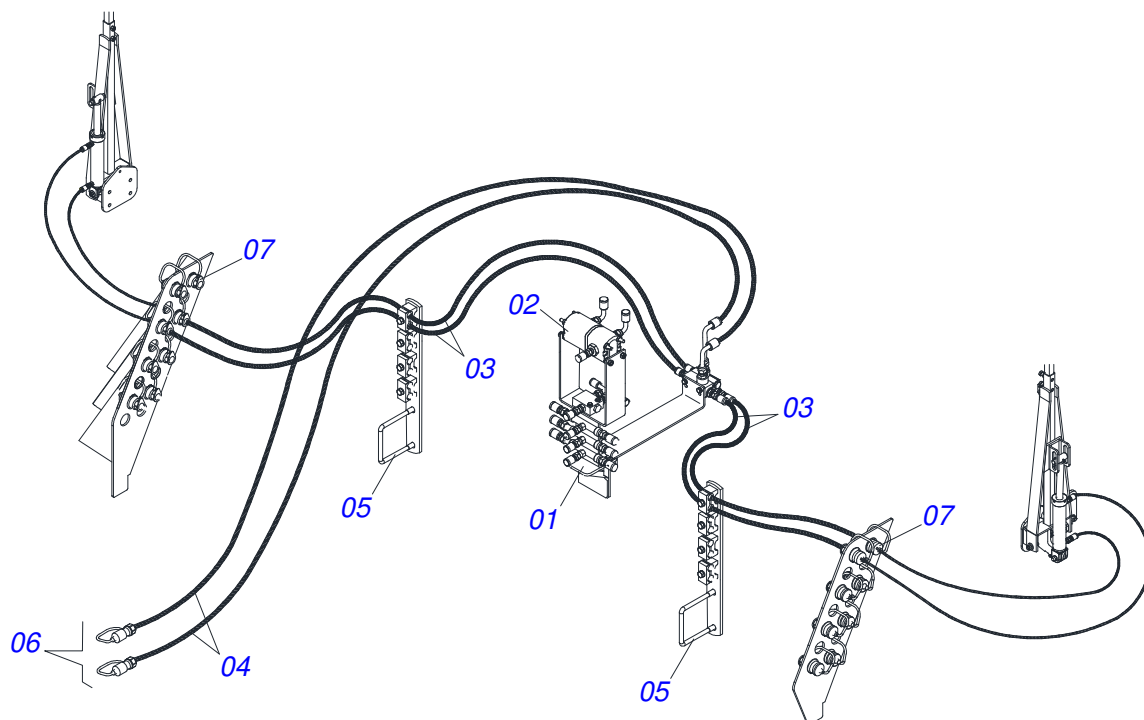


Item	Code	Description	See page	QT
01	0521063568	SUPPORT VALVE		01
02	0501054061	SEQUENCE VALVE WITH NIPPLES	15	01
03	0501080440	HOSE 3/8 X 1350 TR-TM		04
04	0501080678	HOSE 1/2 X 3800 TC-TM		02
05	0909093876	FIXER SUPPORT BOLT HOSE	6	02
06	0501053834	MALE QUICK COUPLER	10	02
07	0501053835	FEMALE QUICK COUPLER	11	04

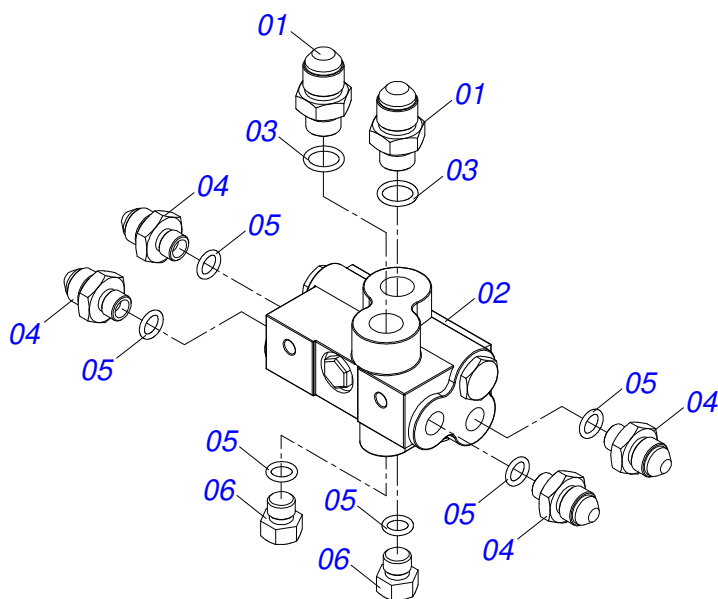


Item	Code	Description	See page	QT
01	0501011460	7/8 NF REDUCTION NIPPLE		02
02	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

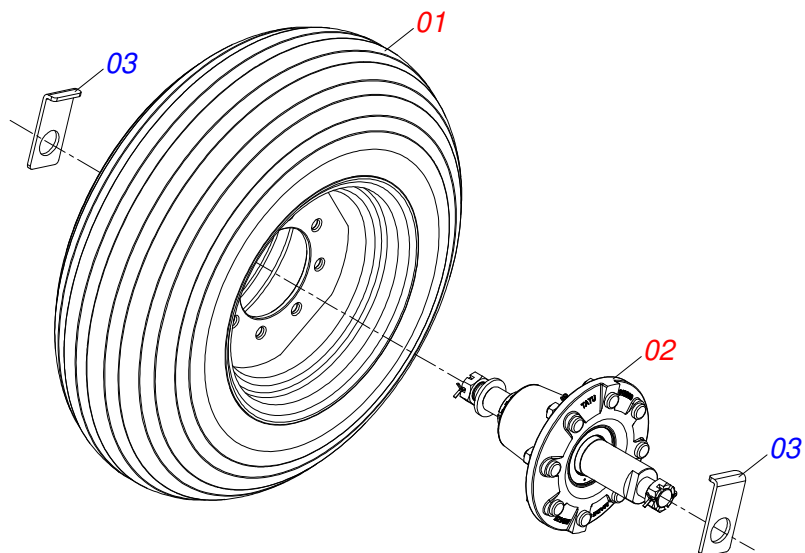


Item	Code	Description	See page	QT
01	0503060414	WHEEL AND TIRE	17	01
02	0501051799	STUB SHAFT & HUB ASSY	18	01
03	0531015109	WHEEL AXLE LOCK		02

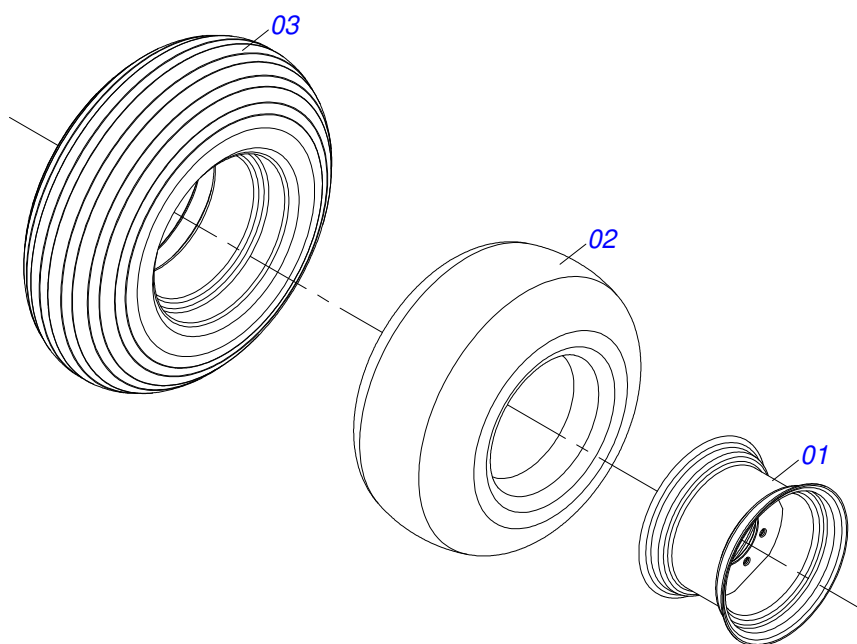

Item	Code	Description	See page	QT
01	0503012108	WHEEL 10 LB X 15 X 8F X 203		01
02	0503010860	AIR CHAMBER 11L 15		01
03	0503011469	RIB TIRE BL - 12L		01

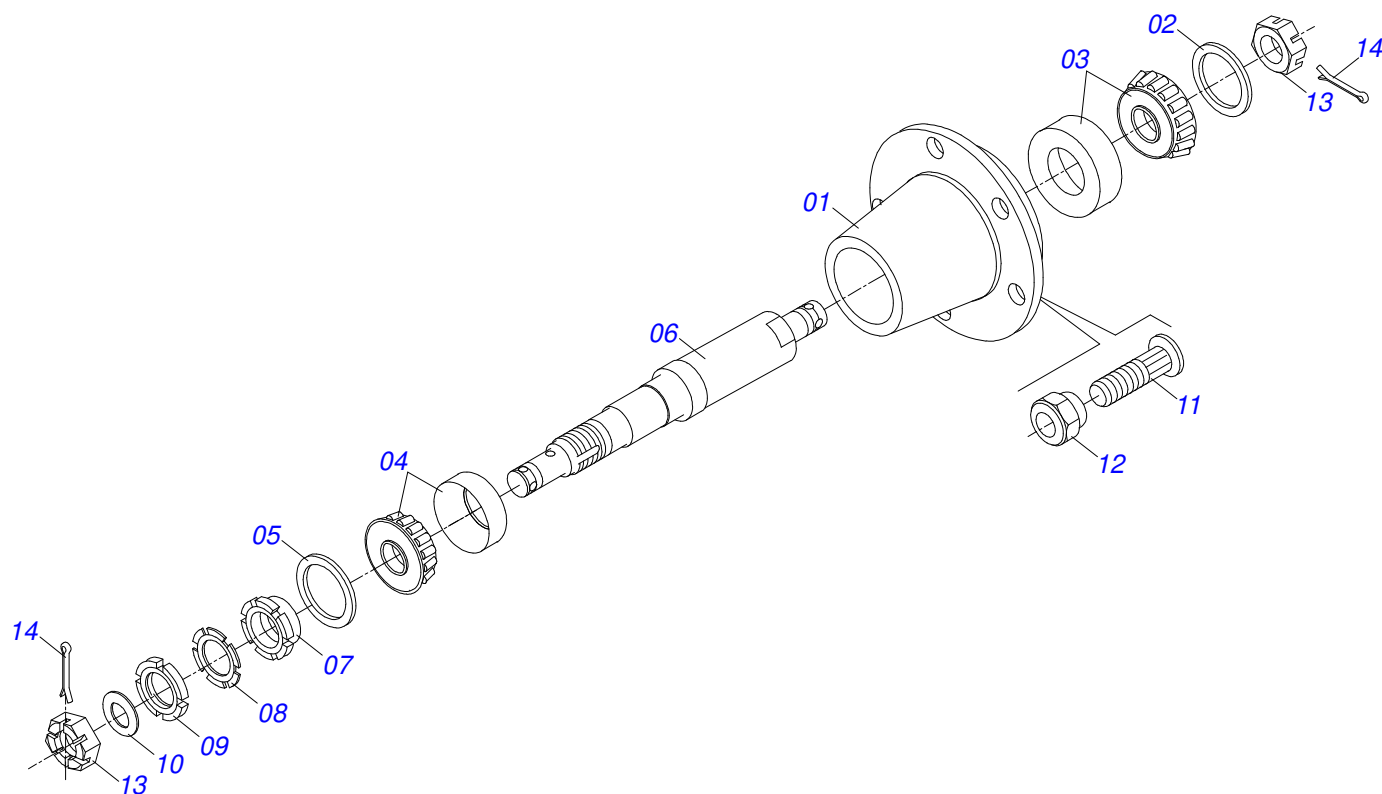


Item	Code	Description	See page	QT
01	0502010908	CARRYING WHEEL HUB	01	
02	0503012159	4.0" X 2.5" X 0.5" SEAL 5144	01	
03	0503010008	3780/3720 ROLLER BEARING	01	
04	0503010328	25590/25523 ROLLER BEARING	01	
05	0503012162	5046 BAG SEAL RING	01	
06	0521011209	425 TRANSP WHEEL AXLE	01	
07	0511015949	LOCK NUT	01	
08	0503010329	LOCK WASHER	01	
09	0503010330	KM 9 LOCKNUT	01	
10	0501010086	FLAT WASHER	01	
11	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR	08	
12	0503010064	5/8 UNF CONIC NUT	08	
13	0503011052	1.1/4" X 0.77" CASTLE NUT	02	
14	0503010067	3/16" X 2.1/2" COTTER PIN	02	

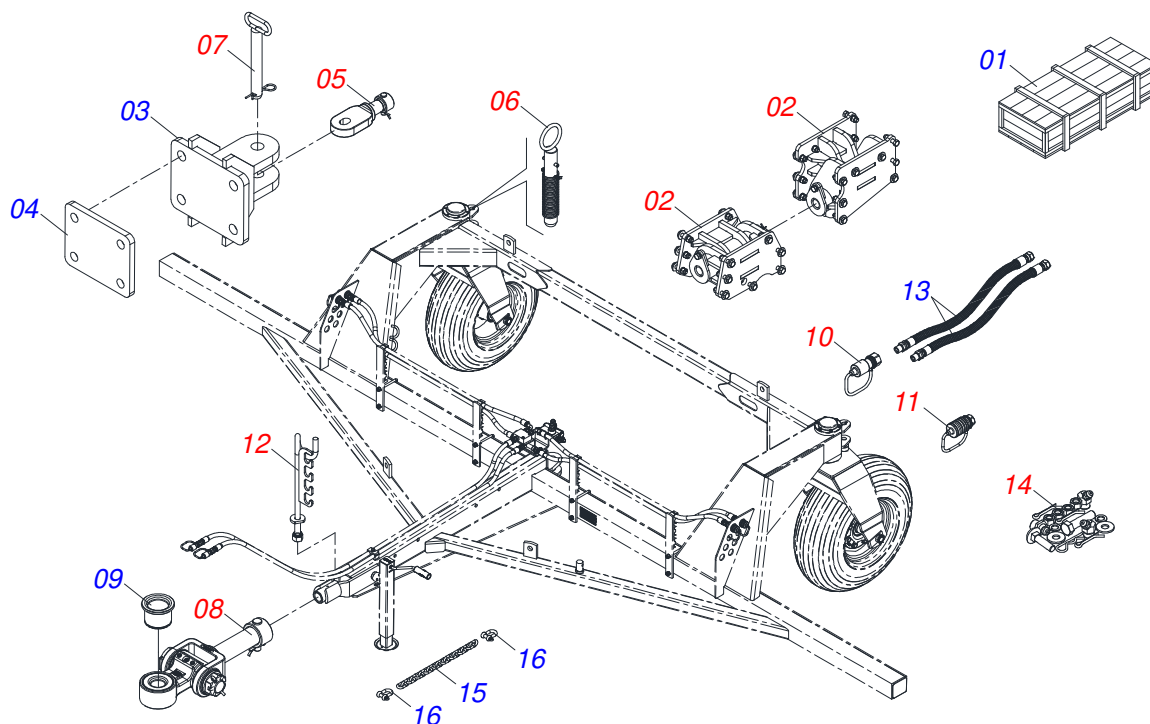


Item	Code	Description	See page	QT
01	0501100017	WOODEN BOX		01
02	0521050156	DOUBLE HEAD ARTICULATION ASSEMBLY	20	01
03	0511064220	COUPLING SUPPORT DOUBLE DRAWBAR		02
04	0531017551	COUPLING SUPPORT FIXING BASE		02
05	0501051160	TRACTOR HITCH PIN	21	02
06	0501054862	AXIS LOCK RODE ASSY	22	02
07	0511053179	TRACTOR COUPLING SHAFT	23	01
08	0511056409	TRACTOR HITCH	24	01
09	0571017510	GLOVE ARTICULATED HITCH		01
10	0501053834	MALE QUICK COUPLER	10	05
11	0501053835	FEMALE QUICK COUPLER	11	02
12	0511056736	HOSE SUPPORT	25	01
13	0501080779	1/2 X 1500 TM-TM HOSE		02
14	0511033090	PACKED PIECES DOUBLE HEAD PACKAGE	26	01
15	0503014120	CHAIN		01
16	0503014321	CABLE STEEL SHACKLE		02

DOUBLE HEAD ARTICULATION ASSEMBLY


0521050156

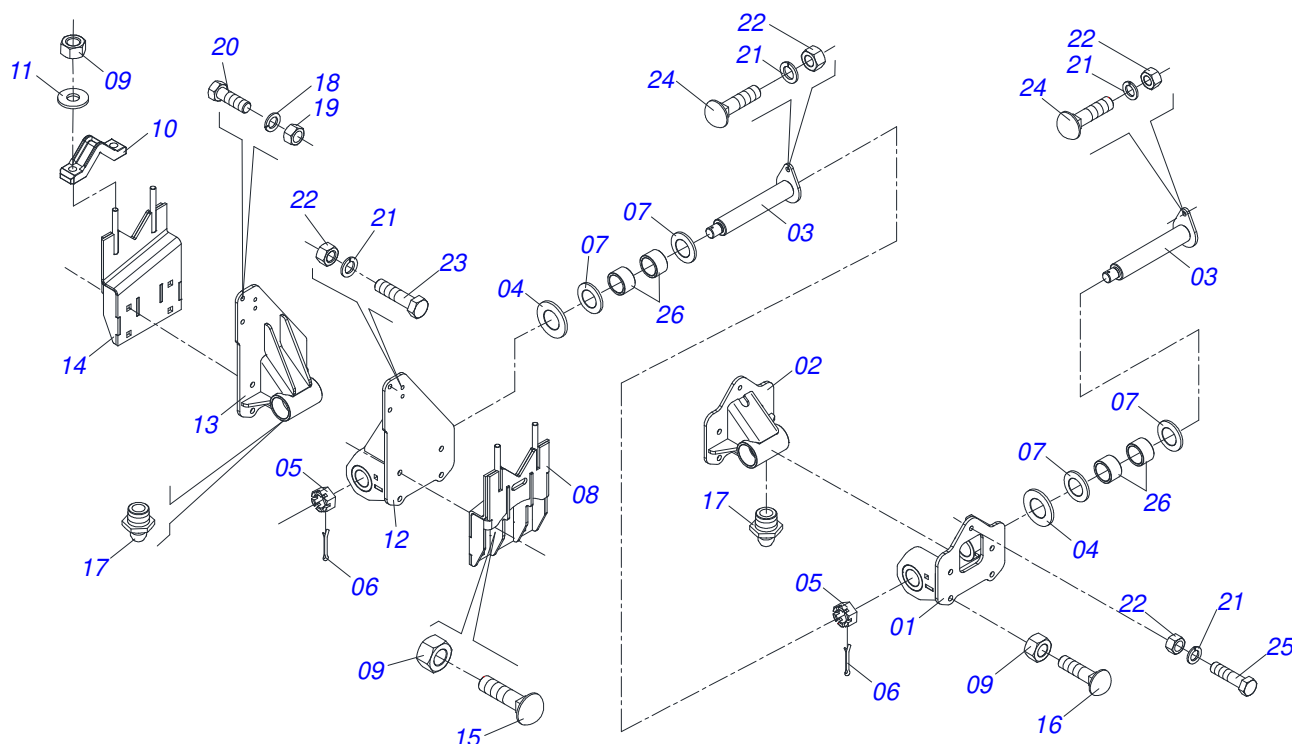


Item	Code	Description	See page	QT
01	0521067423	RH FRONT/LH REAR ARTICULACION	01	
02	0521067425	LH FRONT/RH REAR ARTICULACION	01	
03	0521067428	ARTICULATED HEAD AXIS	02	
04	0581013265	SUPPORT WASHER	02	
05	0503013026	1.1/4" CASTLE NUT	02	
06	0503010067	3/16" X 2.1/2" COTTER PIN	02	
07	0501015875	FLAT WASHER	04	
08	0521067629	DRAWBAR FIXATION REAR SUPPORT	01	
09	0503012412	5/8 UNC SELF LOCKING NUT	20	
10	0502010175	HITCH CLAMP	02	
11	0501012140	FLAT WASHER	04	
12	0521067422	ARM ARTICULATION	01	
13	0521067424	ARM ARTICULATION	01	
14	0521067630	DRAWBAR FIXATION REAR SUPPORT	01	
15	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548	08	
16	0503012407	5/8" X 1-1/2" BOLT	08	
17	0503010002	1800 GREASE FITTING	02	
18	0503010025	3/8" SPRING WASHER	04	
19	0503010026	3/8" NUT	04	
20	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	04	
21	0503010019	1/2" SPRING WASHER	08	
22	0503010060	1/2" NUT	08	
23	0503011082	C1/2" X 1.3/4" SCREW	04	
24	0503014378	1/2" X 1-1/2" BOLT	02	
25	0503010920	1/2" X 1.1/2" BOLT	02	
26	0581013263	SLEEVE	04	

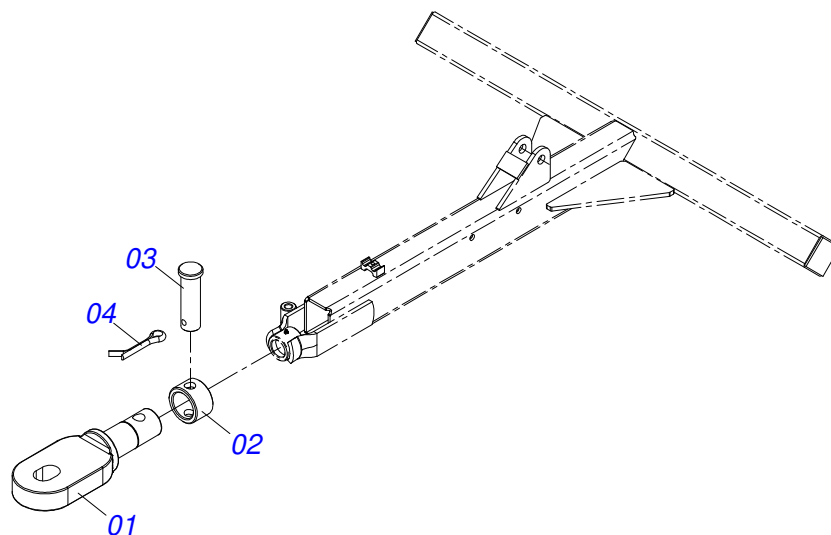

Item	Code	Description	See page	QT
01	0521010681	BUSHING COUPLING BODY		01
02	0502040556	HITCH TURNER		01
03	0521010639	COUPLING SHAFT		01
04	0503010571	1/4" X 1.1/2 COTTERPIN		01

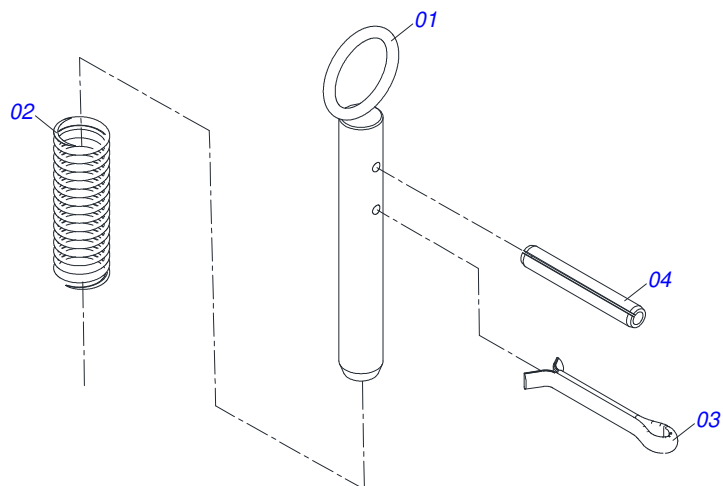


Item	Code	Description	See page	QT
01	0511064229	LOCK PIN		01
02	0503030978	COMPRES SPRING		01
03	0503010131	3/16" X 1-1/2" COTTERPIN		01
04	0503010292	0.2" X 1.6" SPRING PIN		01

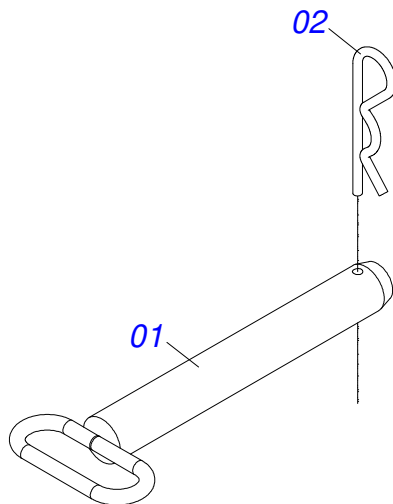


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HAIR PIN		01

TRACTOR HITCH


0511056409

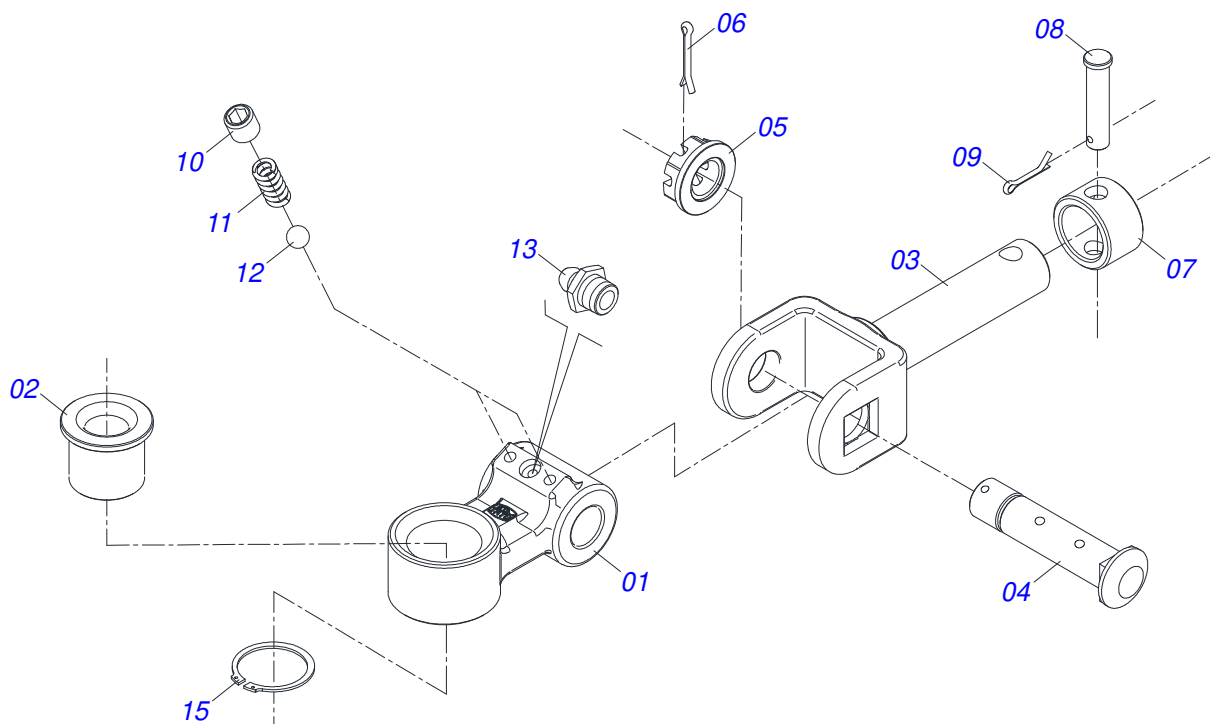


Item	Code	Description	See page	QT
01	0571017512	HITCH JOINT		01
02	0571017511	SLEEVE HITCH ARTICULATION		01
03	0502040850	U TRACTOR COUPLING		01
04	0571012612	PIVOT SHAFT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2 COTTERPIN		01
10	0503016482	BOLT		02
11	0503033731	COMPRESSION SPRING LEFT		02
12	0503011331	3/8 BALL		02
13	0503010002	1800 GREASE FITTING		01
14	1882970002	GREASE SOAP		01
15	0503010378	CLAMPING RING (FOR AXLE)		01

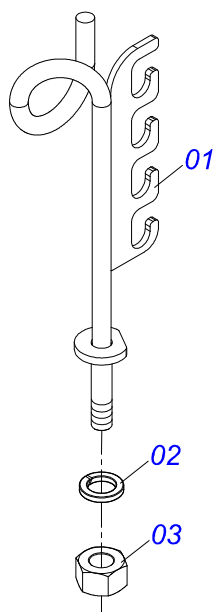


Item	Code	Description	See page	QT
01	0521065611	HOSE SUPPORT		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

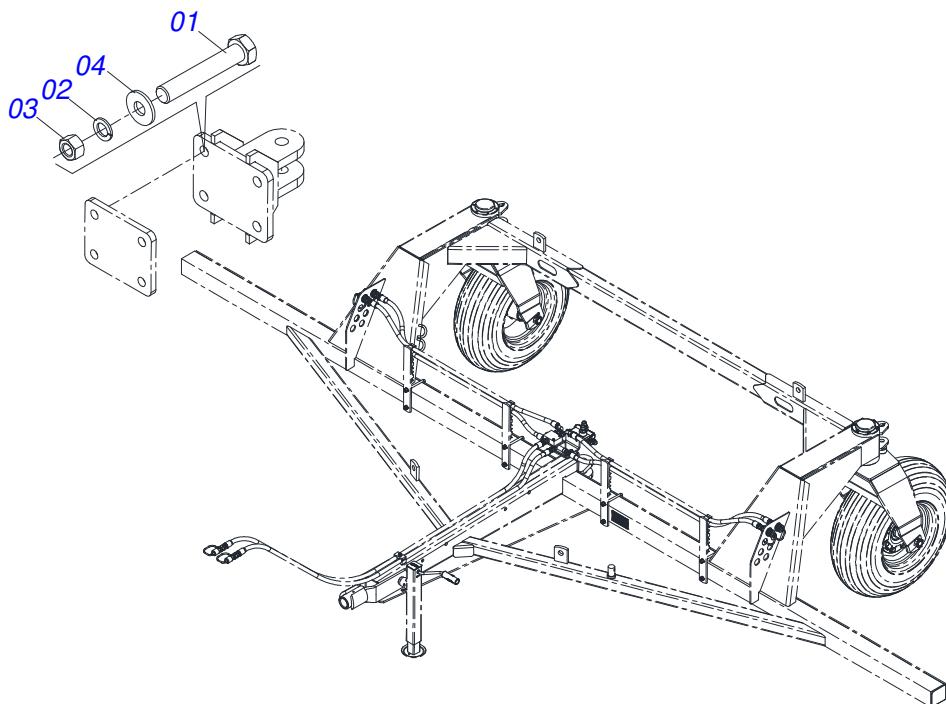


Item	Code	Description	See page	QT
01	0501014172	1" X 8" BOLT		08
02	0503010012	1" SPRING WASHER		08
03	0501010059	1.5/8 NUT		08
04	0501019435	32 X 50 X 1.5 FLAT WASHER		08

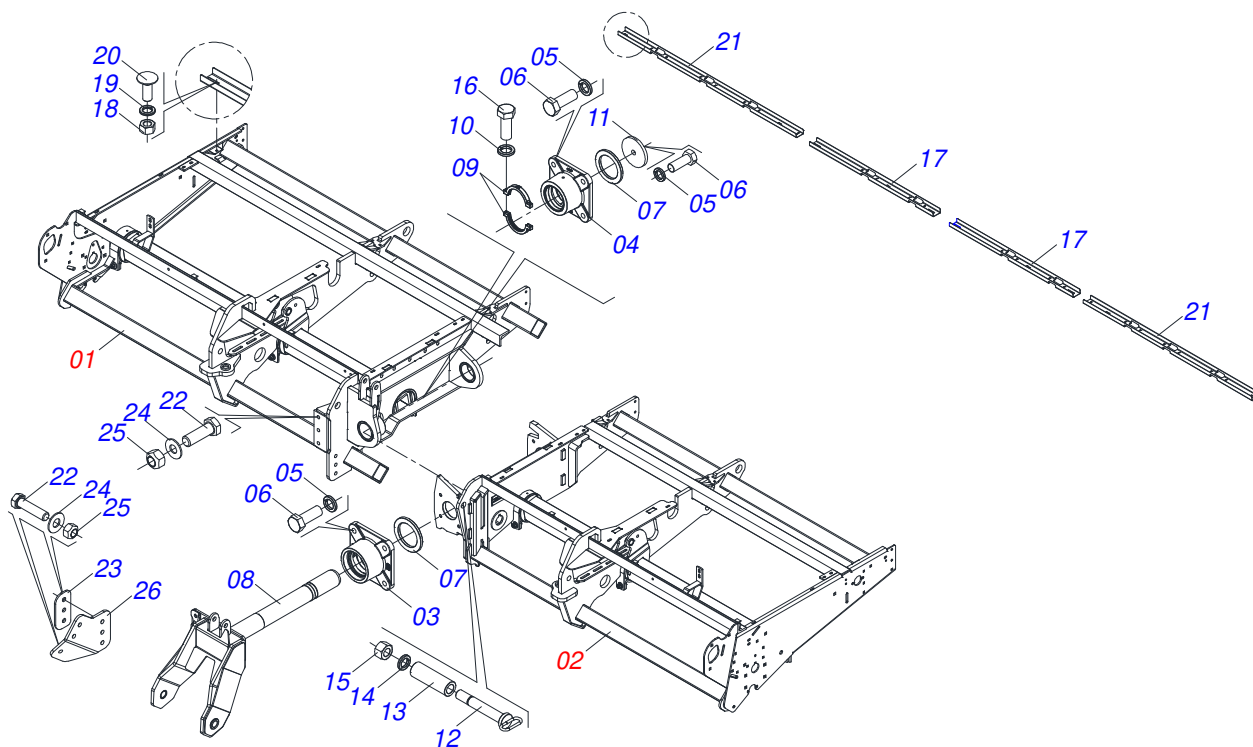


Item	Code	Description	See page	QT
01	0531053952	RIGHT CHASSIS WITH RIGHT WHEEL AXLE 4790	28	01
02	0531053950	LEFT CHASSIS WITH LEFT ROUNDED AXLE 4790	29	01
03	0501110791	FRONT ARTICULATOR HUB WITH GLOVES	30	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES	31	01
05	0503011442	3/4" SPRING WASHER		09
06	0501010098	3/4" UNC BOLT		09
07	0571010094	SLEEVE FLANGE		02
08	0531061890	LEFT ARTICULATOR		01
09	0502012698	CLAMP		02
10	0503011444	SPRING WASHER		02
11	0591019176	FLAT WASHER 20.50 X 125 X 12.50		01
12	0521063003	LOCK PIN		01
13	0571010969	LOCK SLEEVE FRAME		01
14	0503013627	1.1/2 SPRING WASHER		01
15	0501010110	1.1/2" NUT		01
16	0503010365	NUT		02
17	0581018965	TROUGH 24 X 50 X 940		02
18	0503010026	3/8" NUT		08
19	0503010025	3/8" SPRING WASHER		08
20	0501011643	3/8 X 1"BOLT		08
21	0591011622	24 X 50 X 1275 GUTTER		02
22	0503019521	SCREW 3/4 UNF 3 CSRP G.8 ZN		09
23	0591011661	LATCH SUPPORT		01
24	0501017065	FLAT WASHER		09
25	0503019522	HEX NUT		09
26	0591016901	LEFT LOCK ARTICULATED SHAFT REINFORCEMENT		01

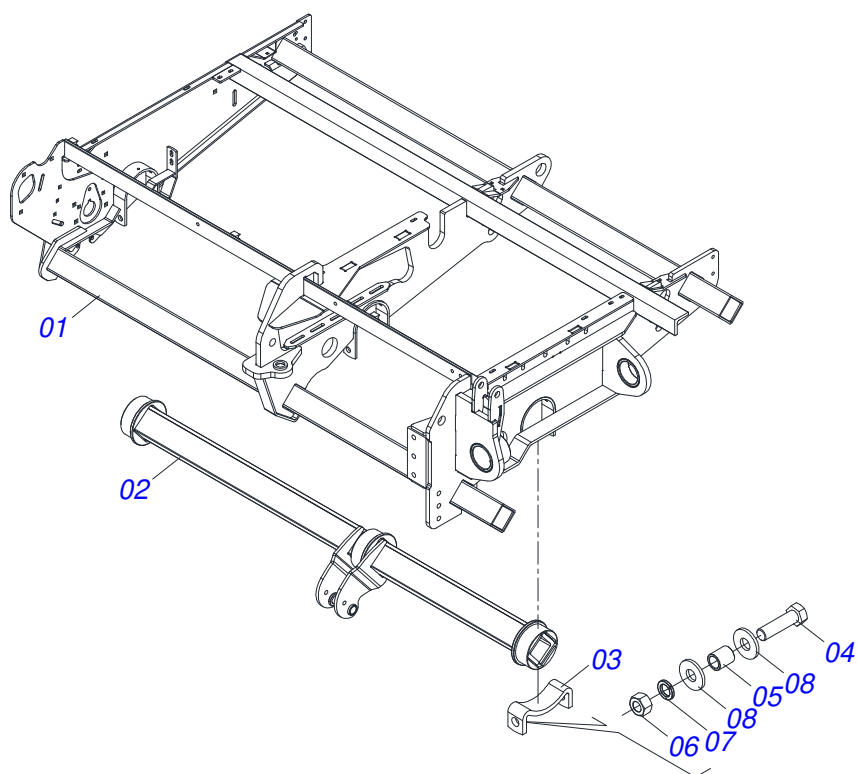


Item	Code	Description	See page	QT
01	0531063473	RIGHT CHASSIS RIGHT MOUNT 4790		01
02	0531060342	ARTICULATED AXIS ROTATE RIGHT SIDE 4790		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0531013922	0.6" X 0.8" X 1" SLEEVE		06
06	0503010013	5/8" NUT		06
07	0503011445	SPRING WASHER		06
08	0501012140	FLAT WASHER		12

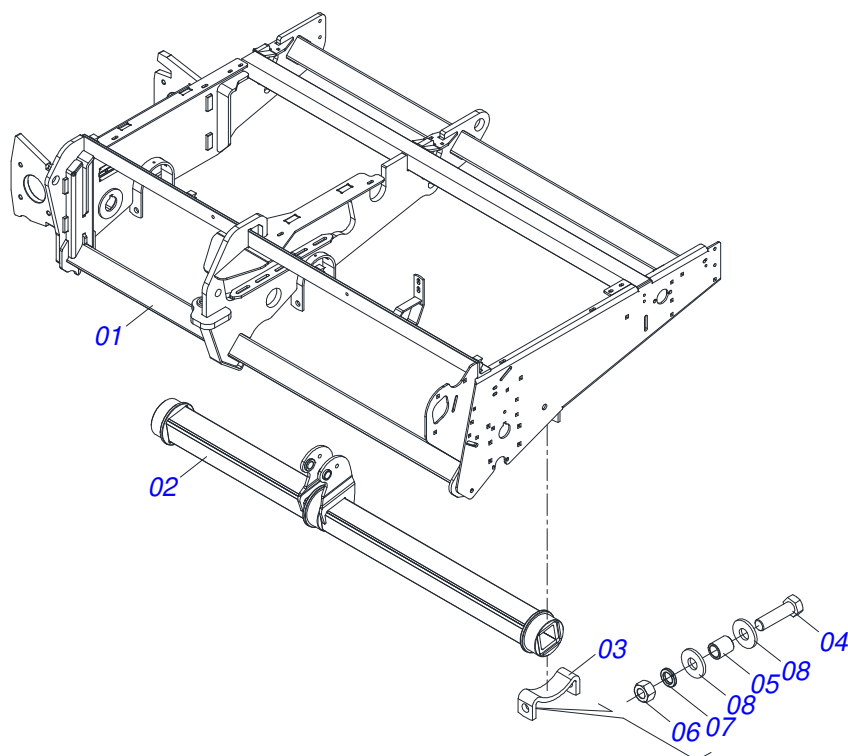


Item	Code	Description	See page	QT
01	0531063472	LEFT CHASSIS RIGHT ASSEMBLY 4790		01
02	0531060343	LEFT SKEWING ARTICULATED SHAFT 4790		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0531013922	0.6" X 0.8" X 1" SLEEVE		06
06	0503010013	5/8" NUT		06
07	0503011445	SPRING WASHER		06
08	0501012140	FLAT WASHER		12

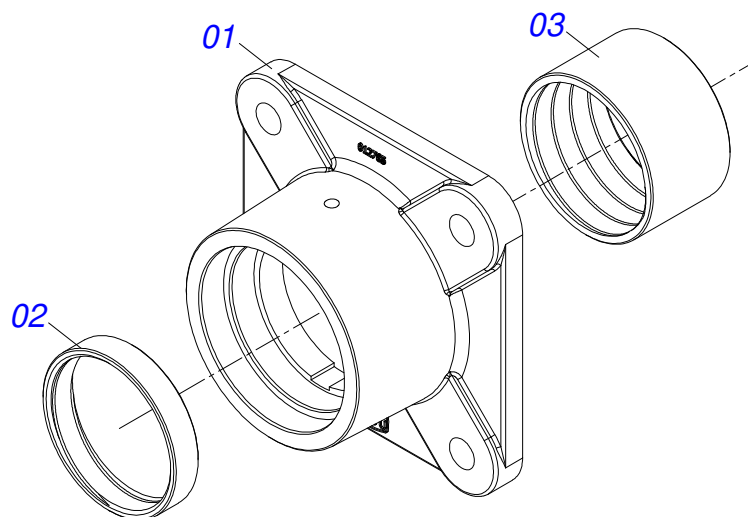


Item	Code	Description	See page	QT
01	0502012765	FRONT OF THE ARTICULATOR CUBE		01
02	0571016530	NYLON GLOVE 109.15X97X20		01
03	0561019896	SLEEVE NYLON 109,15 X 93 X 65		01

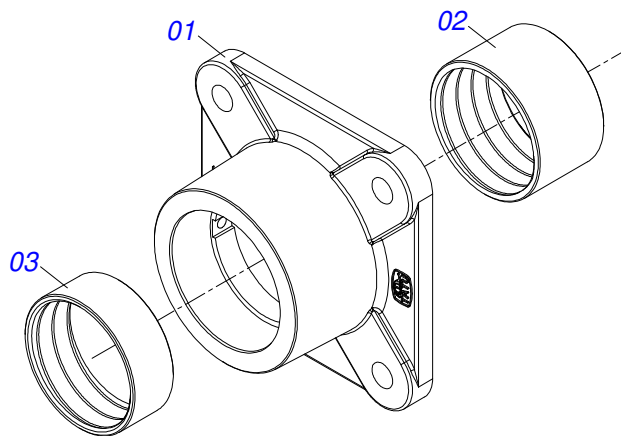


Item	Code	Description	See page	QT
01	0561019884	ARTICULACION HUB		01
02	0561019896	SLEEVE NYLON 109,15 X 93 X 65		01
03	0561019895	SLEEVE NYLON 109,15 X 93 X 40		01

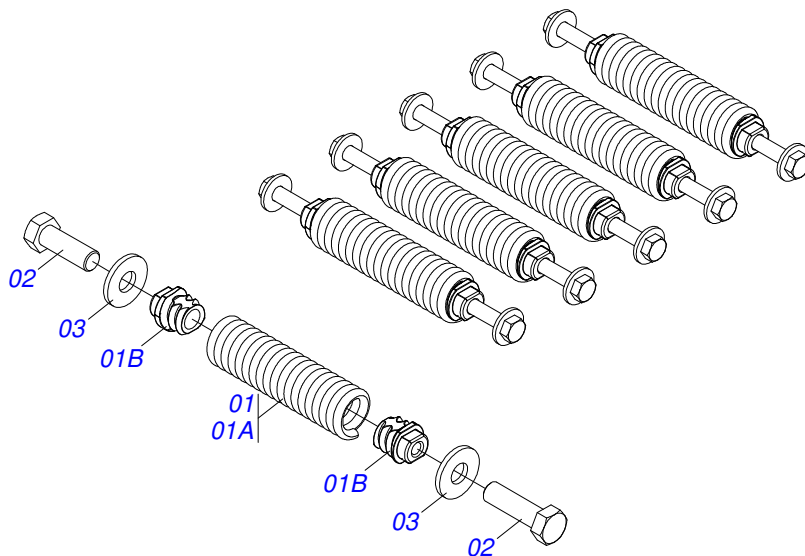


Item	Code	Description	See page	QT
01	0511050681	TRACTION SPRING		06
01A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
01B	0561016062	SPRING HITCH		02
02	0503013030	5/8" X 3.1/4" BOLT		12
03	0501012140	FLAT WASHER		24

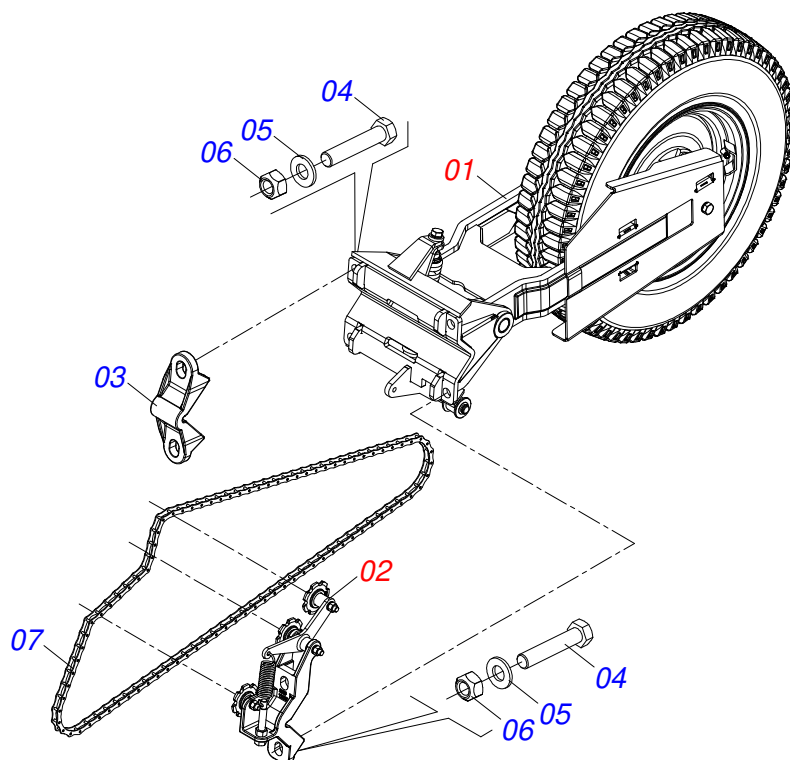


Item	Code	Description	See page	QT
01	0521058401	655 WHEELED SUPPORT WITH TRANSMISSION	34	01
02	0521055234	WHEELED FASTENER	39	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

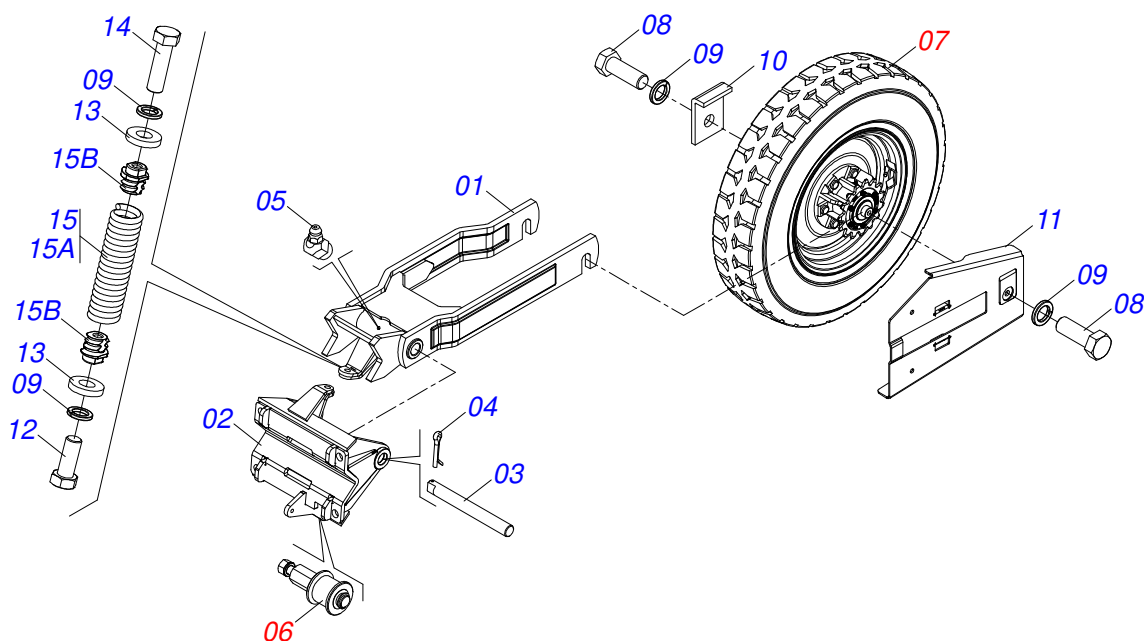


Item	Code	Description	See page	QT
01	0531062422	WHEEL ARM		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" COTTERPIN		01
05	0503010003	1845 GREASE FITTING		01
06	0501058241	WHEEL SUPPORT CHAIN TENSIONER	35	01
07	0521058393	WHEEL WITH PNEU 7.00X16 14L PR TT WITH TRANSMISSION		01
08	0503018981	BOLT		02
09	0503010027	5/8" SPRING WASHER		04
10	0591010589	BODY LOCK WHEEL		01
11	0521069983	WHEEL COVER		01
12	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
13	0551017715	FLAT WASHER		02
14	0503013030	5/8" X 3.1/4" BOLT		01
15	0511050681	TRACTION SPRING		01
15A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
15B	0561016062	SPRING HITCH		02

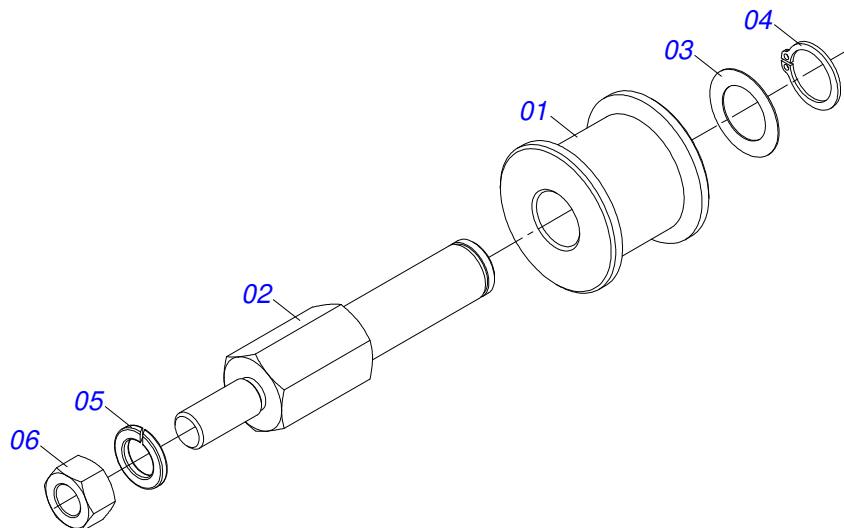


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	FERT CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

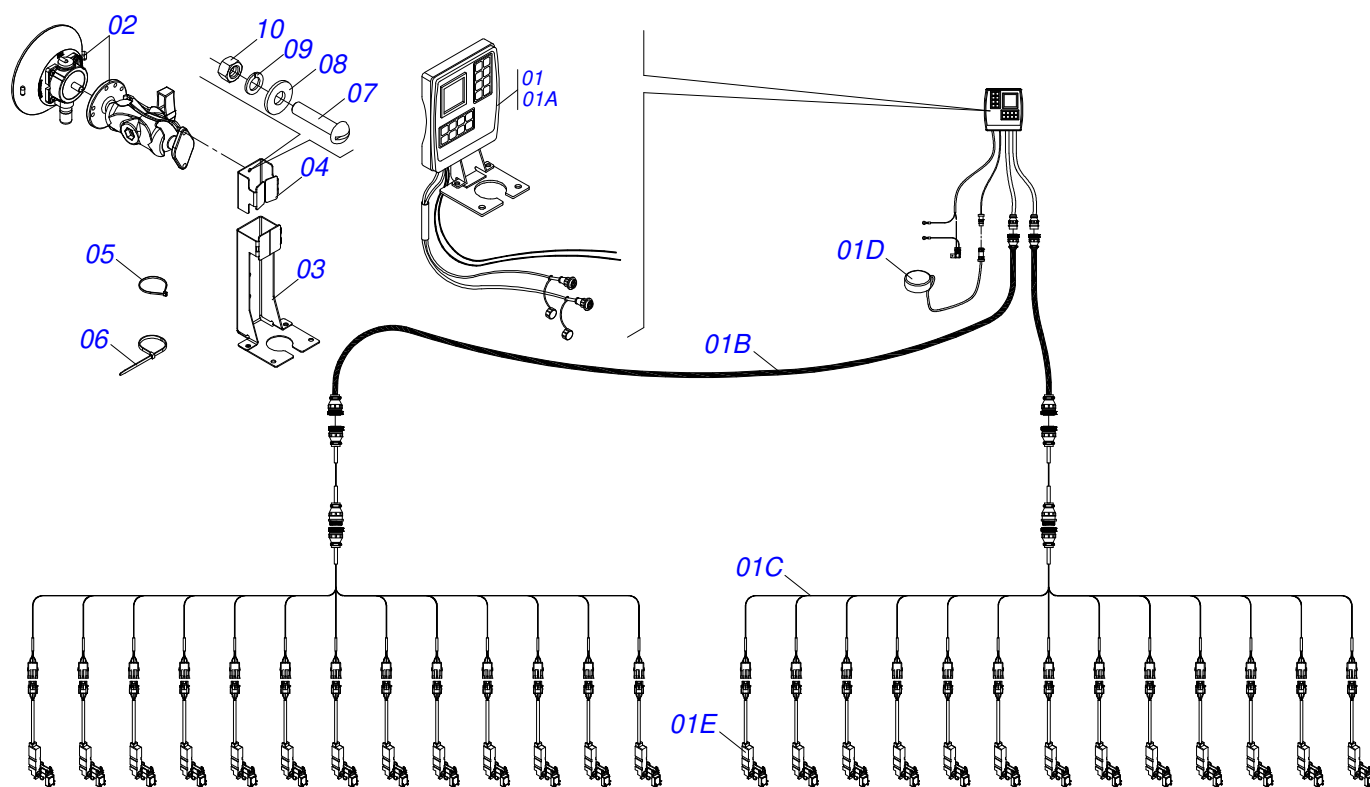


Item	Code	Description	See page	QT
01	0503063167	MONITORING KIT CD13 MASTER SEED LINES	01	
01A	0503017602	MONITOR PLANT PM400	01	
01B	0503017607	EXTENSOR CABLE PM400 6.0M 18X18 020010557	01	
01C	0503019728	SINGLE 13LINE MONITORING CABLE	01	
01D	0503017443	ANTENNA GPS PM 400	01	
01E	0503019100	SENSOR	13	
02	0503016234	TRIMBLE FIXING WINDOW	01	
03	0503016452	FIXING SUPPORT AG500 TRIMBLE	01	
04	0571012196	MOUNTING BRACKET PM 400	01	
05	0503013100	NYLON CLAMP	39	
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP	195	
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN	02	
08	0503010669	FLAT WASHER	02	
09	0503010668	3/16" SPRING WASHER	02	
10	0503010667	3/16" NUT	02	

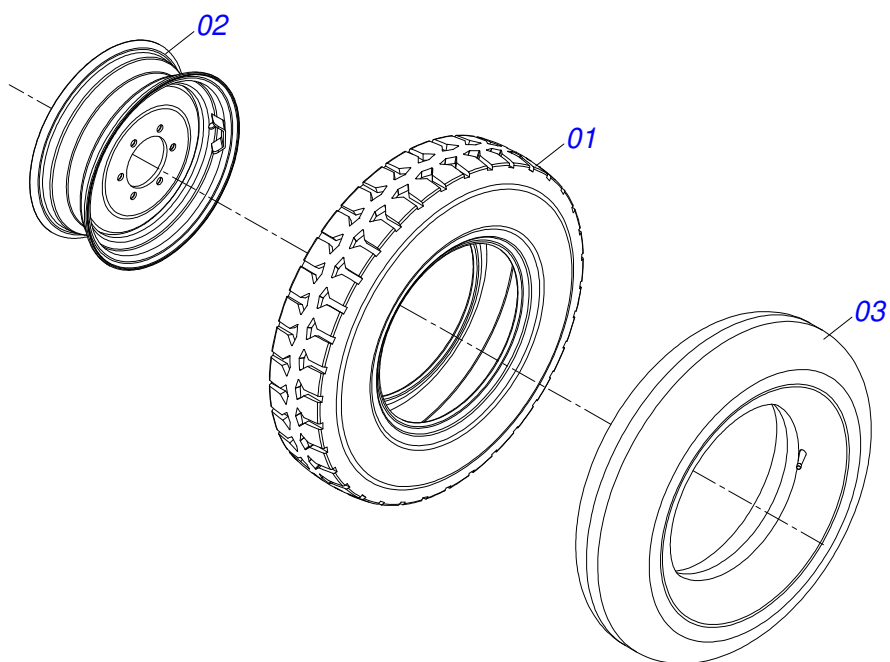


Item	Code	Description	See page	QT
01	0503019458	TIRE 7.00X16 14PR		01
02	0503016517	WHEEL EI		01
03	0503010033	7.50 X 16 INNER TIRE		01

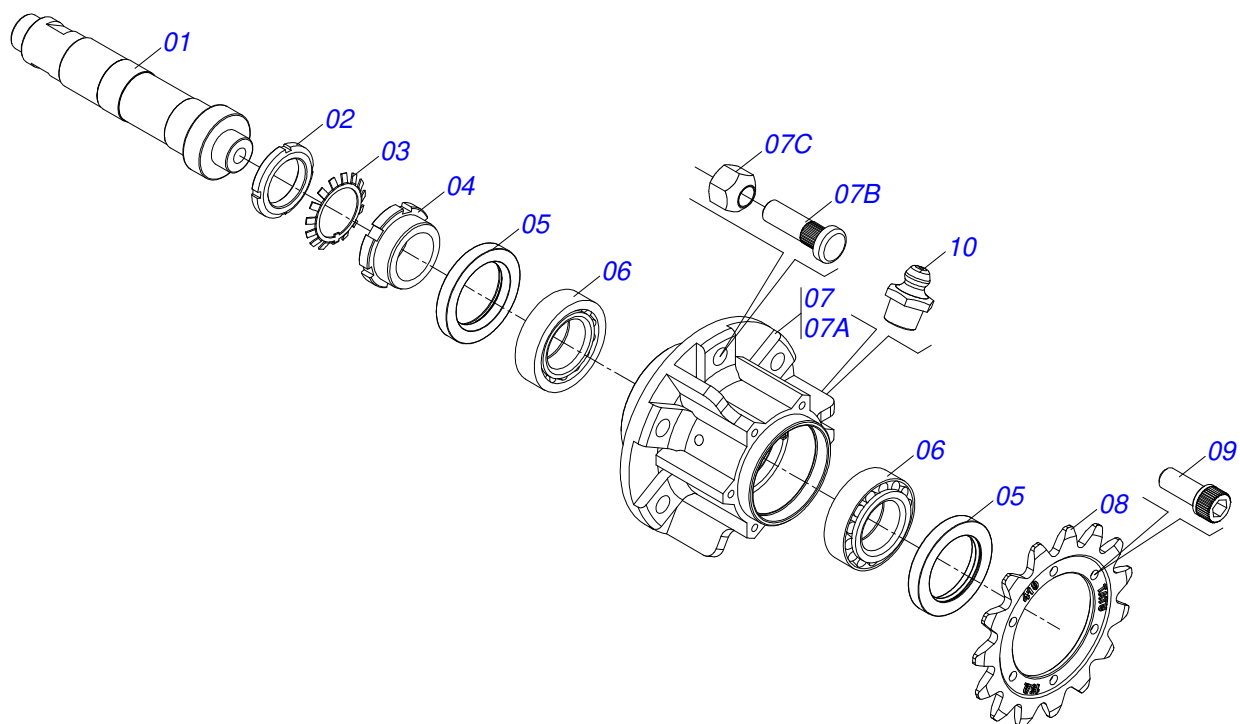


Item	Code	Description	See page	QT
01	0521012185	TRANSM AXLE CARRYING-WHEEL	01	
02	0503010330	KM 9 LOCKNUT	01	
03	0503010329	LOCK WASHER	01	
04	0511015949	LOCK NUT	01	
05	0503010804	00547-B SEAL	02	
06	0503019364	BEARING 25590/25523	02	
07	0501110721	WHEEL HUB WITH SCREW / NUTS	01	
07A	0571012990	CARRYING WHEEL HUB TRANSMISSION	01	
07B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR	06	
07C	0503016516	5/8 UNF CONIC NUT	06	
08	0502011339	15Z GEAR P 1.25"	01	
09	0503012550	5/16" X 3/4" BOLT	06	
10	0503010002	1800 GREASE FITTING	01	

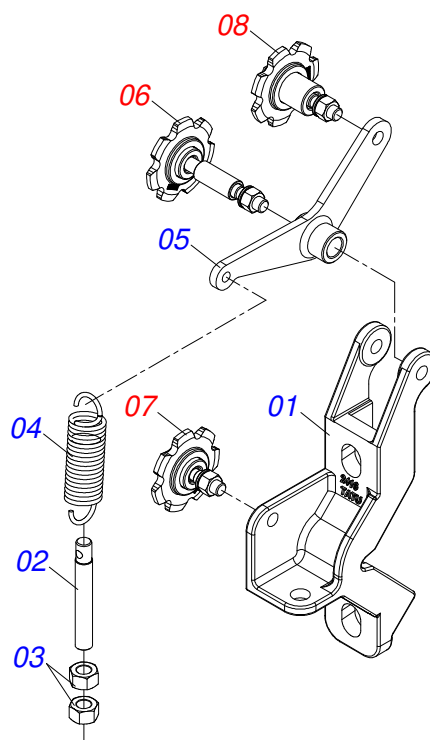


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8" NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0521055236	INTERMEDIARY CURRENT STRETCHER	40	01
07	0521055237	WHEEL FIXED CURRENT STRETCHER	42	01
08	0521055235	WHEEL MOBILE CURRENT STRETCHER	43	01

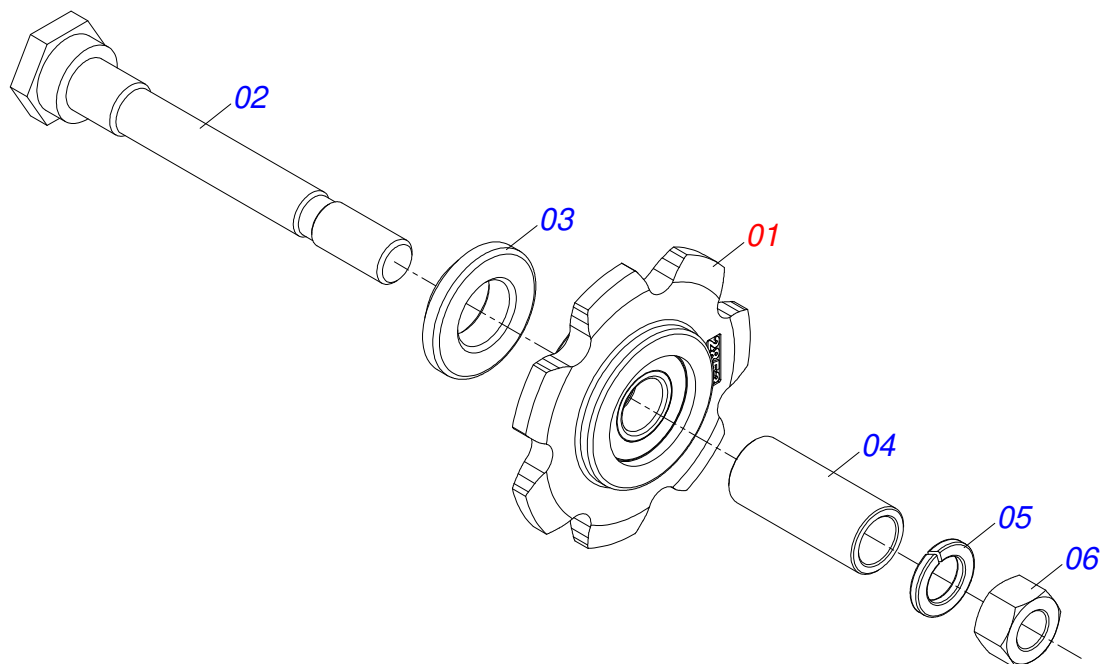


Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN	41	01
02	0551018245	CHAIN TENSIONER AXLE		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0551018239	SLEEVE 19 X 13,50 X 45		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

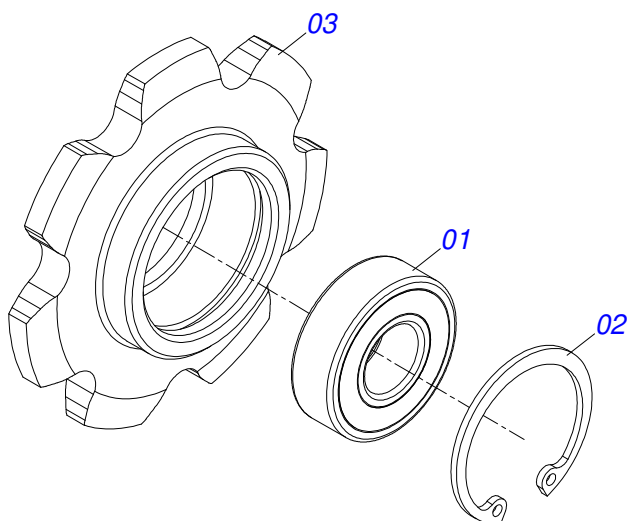


Item	Code	Description	See page	QT
01	0503019355	BEARING 6202 2RS1		01
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012853	GEAR		01

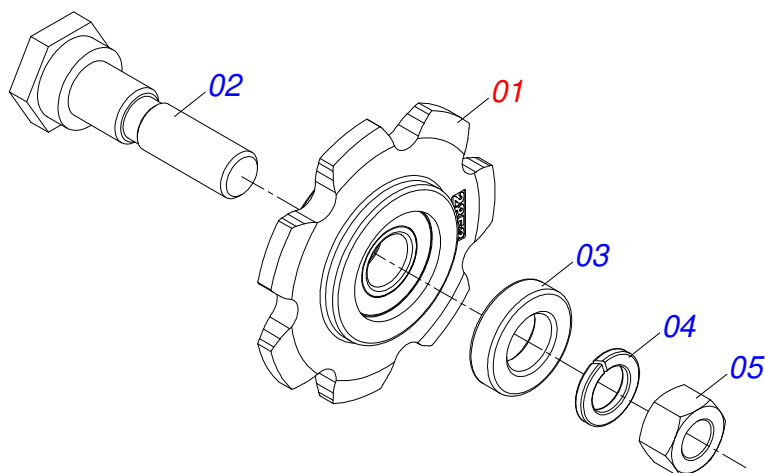


Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN	41	01
02	0551018252	CHAIN TIGHTENER AXLE		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

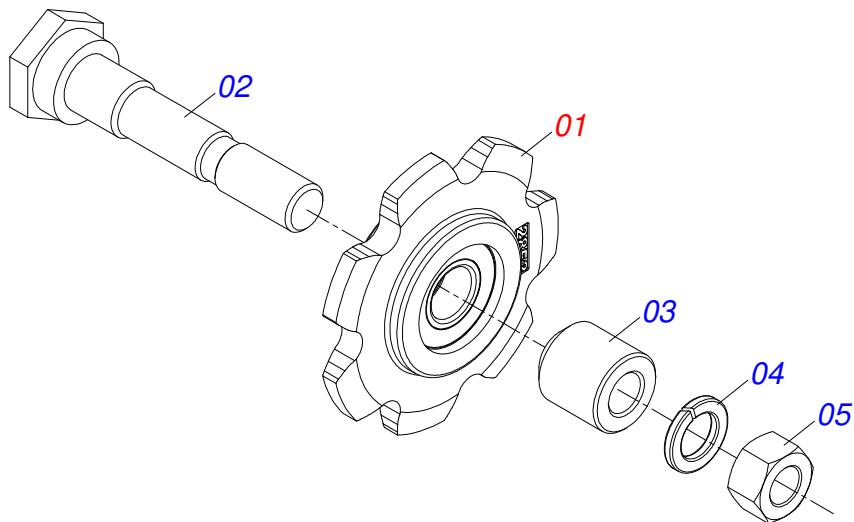


Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN	41	01
02	0551018244	CHAIN UPPER AXLE		01
03	0591017923	GLOVE 15.30 X 30 X 32		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

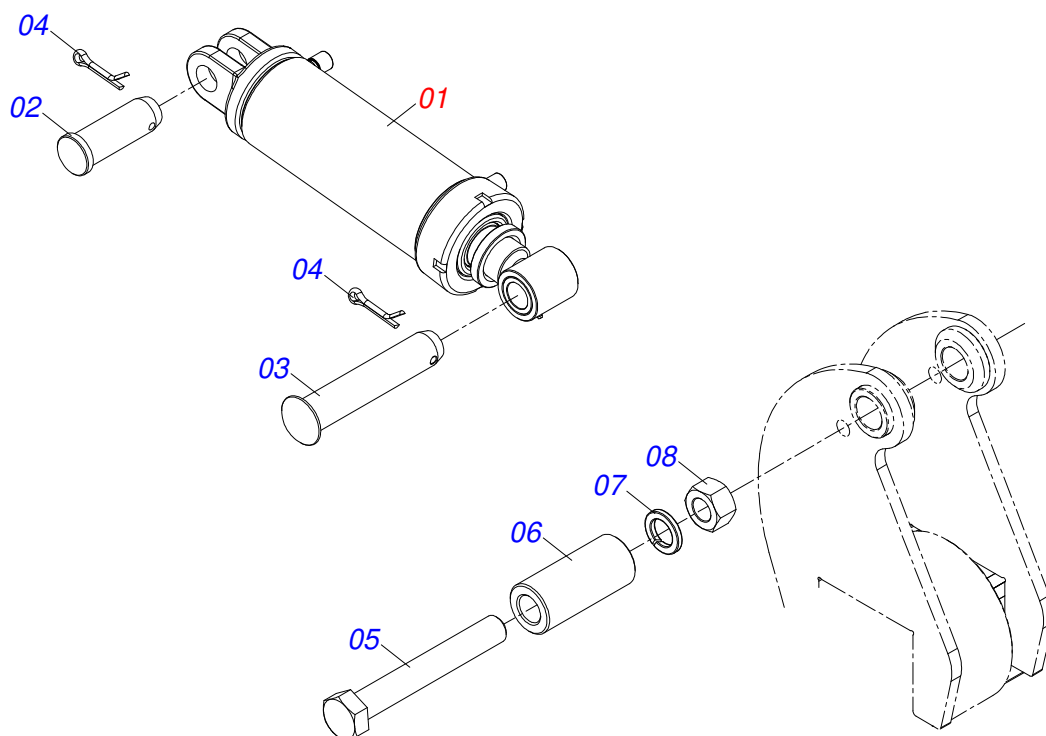

Item	Code	Description	See page	QT
01	0511058406	HYDRAULIC CYLINDER	45	02
02	0521012538	1.2" X 3.5" COUPLING SHAFT		02
03	0521015501	COUPLING SHAFT		02
04	0503010523	1/4" X 2" COTTERPIN		04
05	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02
06	0531012565	SLEEVE 16,3X 30 X 88		02
07	0503010027	5/8" SPRING WASHER		02
08	0503010013	5/8" NUT		02

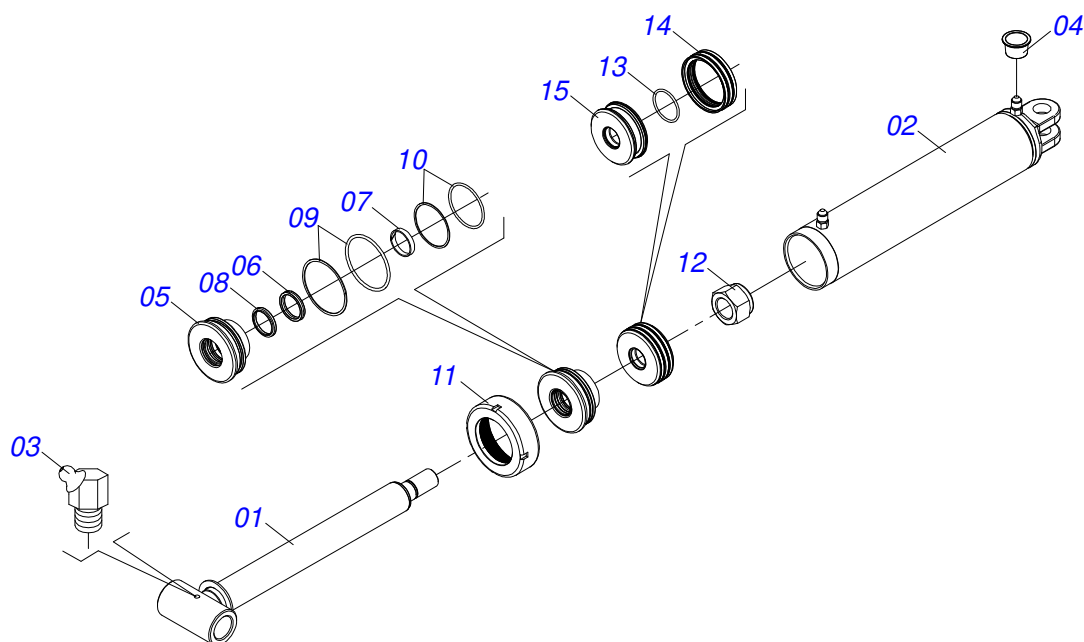


Item	Code	Description	See page	QT
01	0511064053	SLEEVE 2" X 14" TURNBUCLE		01
02	0511064052	4" X 12.1" CYLINDER CASE		01
03	0503010003	1845 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010678	50,80 X 101 RING SUPPORT		01
06	0503015636	SCRAPER SEAL		01
07	0503018025	RING GUIDE		01
08	0503018026	1870-2000-375 B GASKET		01
09	0503010338	2-342 N 3006-9B O-RING		02
10	0503011061	8-342 BACK-UP RING		02
11	0502012822	101.60 END CAP		01
12	0503010817	1.1/4" SELF LOCKING NUT		01
13	0503010345	2-218 N 3006-9B O-RING		01
14	0503015633	SELEMASTER SEALING		01
15	0502012842	50,80 X 101,60 PISTON		01
16	0511032511	ASSY CYLINDER REPAIR KIT 50.8X101.6		01

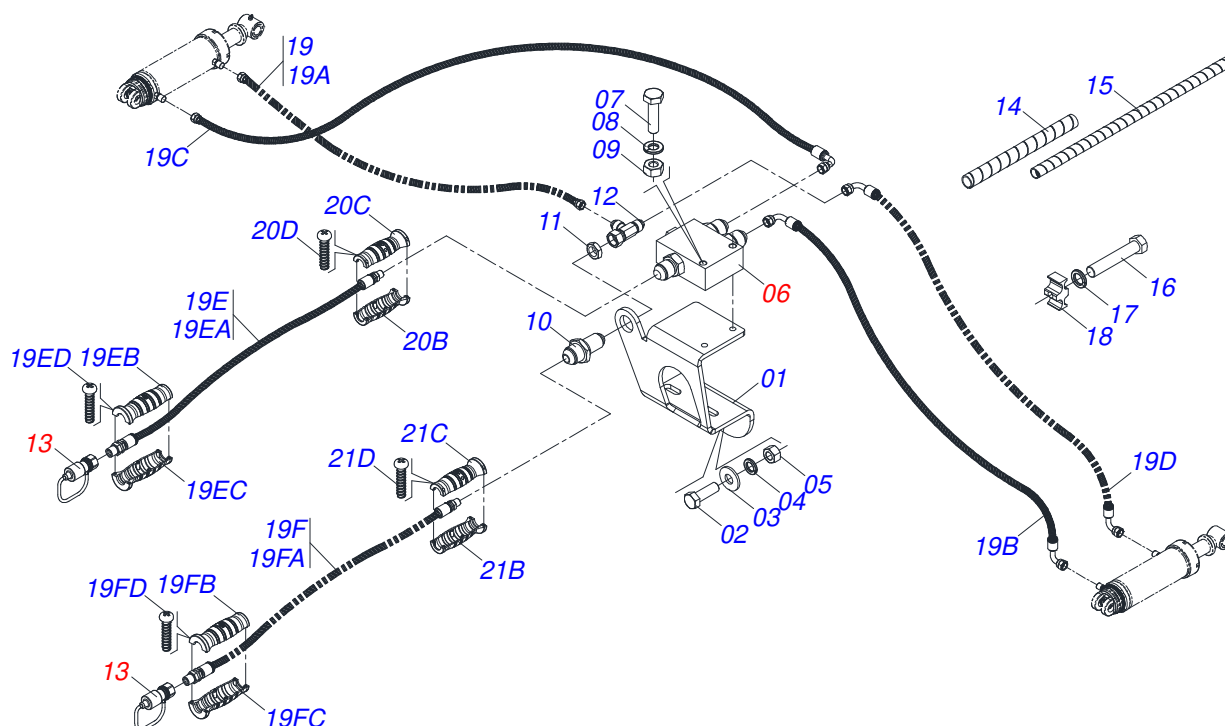


Item	Code	Description	See page	QT
01	0571017027	SOPORTE VALV		01
02	0503010920	1/2" X 1.1/2" BOLT		02
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		02
05	0503010060	1/2" NUT		02
06	0501054452	FLOW DIVIDING VALVE	47	01
07	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
08	0503010143	1/4" SPRING WASHER		02
09	0503010144	1/4" NUT		02
10	0541012166	NIPPLE 3/4" UNF X 7/8"		01
11	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01
12	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
13	0501053834	MALE QUICK COUPLER	10	02
14	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
15	0571017774	SPRING PROTECTION QUICK HOSE		02
16	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		03
17	0503010180	7/16" SPRING WASHER		03
18	0502012702	BODY SUPPORT CLAMP		03
19	0511057089	HOSE KIT SYSTEM HYDRAULIC		01
19A	0501080045	3/8" X 850 TR-TR HOSE		01
19B	0501080999	3/8" X 39" TC-TC HOSE		01
19C	0501081987	HOSE 3/8 X 1550 TR-TC		01
19D	0501081986	HOSE 3/8 X 1550 TC-TC		01
19E	0521052299	HOSE 1/2 X 4000 TR-TM BLACK / RED		01
19EA	0501080185	HOSE 1/2 X 4000 TR-TM		01
19EB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
19EC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
19ED	0503018952	PLASTIC BOLT		06
19F	0521052300	HOSE 1/2 X 4000 TR-TM BLACK / BLUE		01
19FA	0501080185	HOSE 1/2 X 4000 TR-TM		01
19FB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01




Item	Code	Description	See page	QT
19FC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
19FD	0503018952	PLASTIC BOLT		06

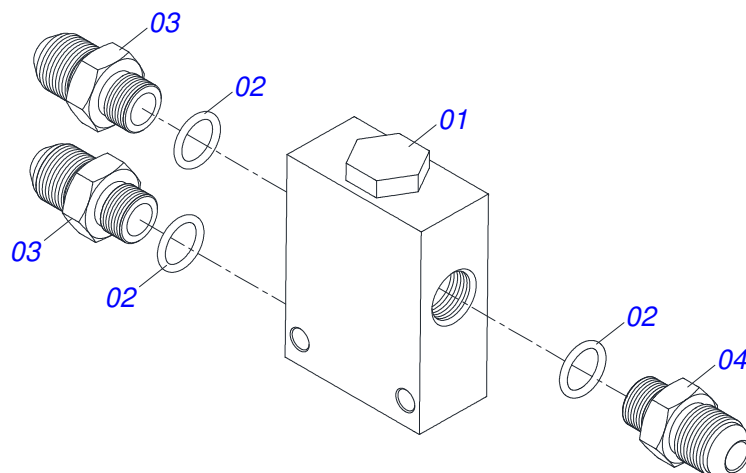


Item	Code	Description	See page	QT
01	0503012481	FLOW DIVIDING VALVE		01
02	0503010190	2-114 N 3006-9B O'RING		03
03	0501010617	3/4" NIPPLE		02
04	0501011460	7/8 NF REDUCTION NIPPLE		01

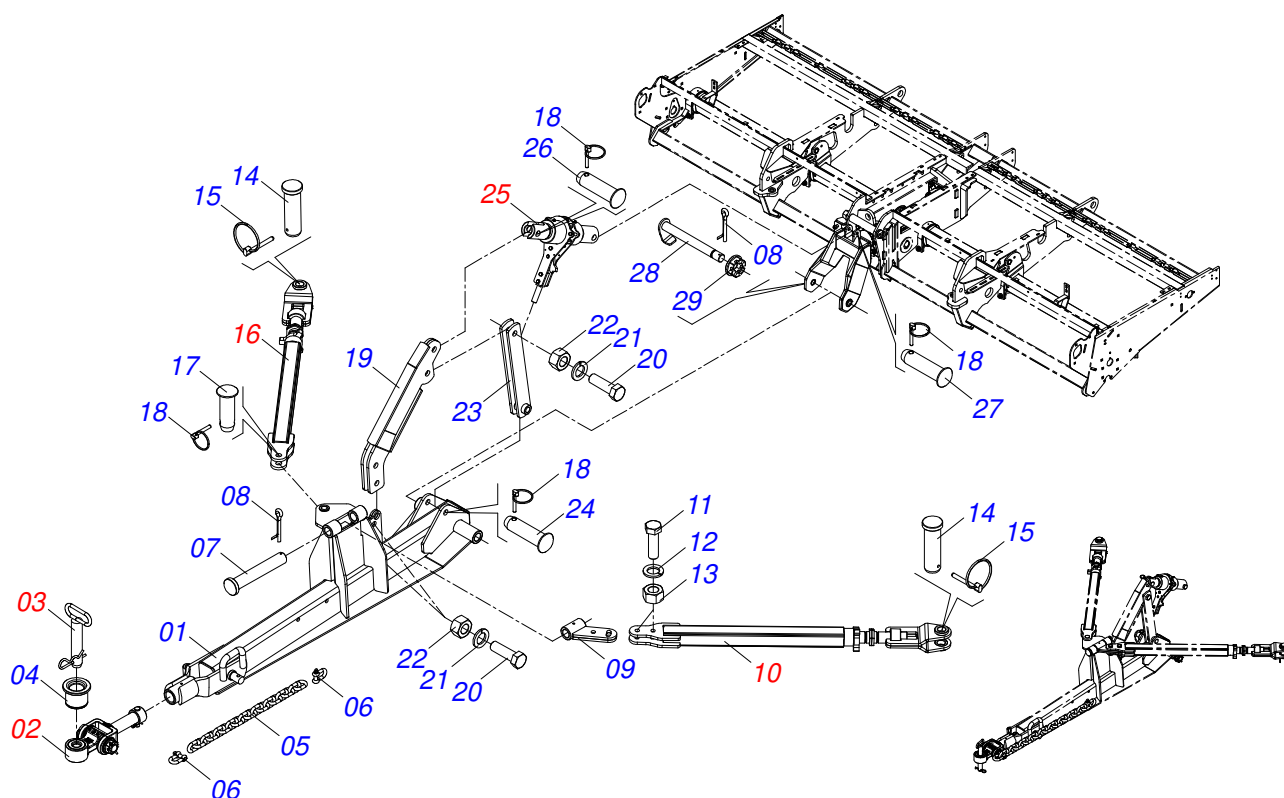


Item	Code	Description	See page	QT
01	0521068561	LONG COUPLING HEADER		01
01.	0531061891	LONG HITCH RIGHT HEAD		01
02	0511055096	TRACTOR HITCH	49	01
03	0511053179	TRACTOR COUPLING SHAFT	23	01
04	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
05	0503014120	CHAIN		01
06	0503014321	CABLE STEEL SHACKLE		02
07	0571010661	PIVOT SHAFT		01
08	0503010010	1/4" X 2.1/2" COTTERPIN		02
09	0521064203	EAR PIVOT DRAWBAR		01
10	0521053310	LEFT EXTENSION HEADER 36.00 - 4880/5720/5950	50	01
11	0501010500	3/4"X3"BOLT		02
12	0503010023	3/4" SPRING WASHER		02
13	0503010014	3/4" NUT		02
14	0571019949	JUNCTION SHAFT		02
15	0503030119	LOCK PIN		02
16	0521053311	RIGHT EXTENSOR HEAD 36,00 - 4880/5720/5950	51	01
17	0521010572	0.9" X 2.9" COUPLING SHAFT		01
18	0503030085	LOCK PIN		04
19	0521063528	EXTENDING FIXER		01
20	0501010171	BOLT 1 UNC X 3.1/2 C S G.5		03
21	0503010012	1" SPRING WASHER		03
22	0501010059	1.5/8 NUT		03
23	0521062916	LEFT FRENCH HAND		01
24	0521010585	0.9" X 5.9" COUPLING SHAFT		01
25	0511052311	3 POINT TURNBUCKLE	52	01
26	0521012532	0.9" X 3.9" COUPLING SHAFT		01
27	0521010582	COUPLING SHAFT		01
28	0521063529	LOCK AXLE		01
29	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01

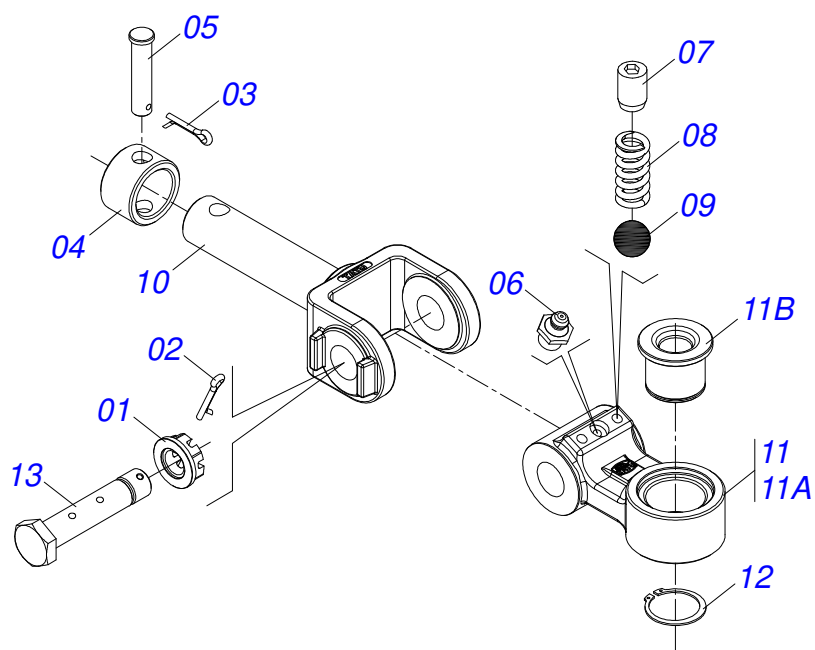


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	COMPRESSION SPRING LEFT		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

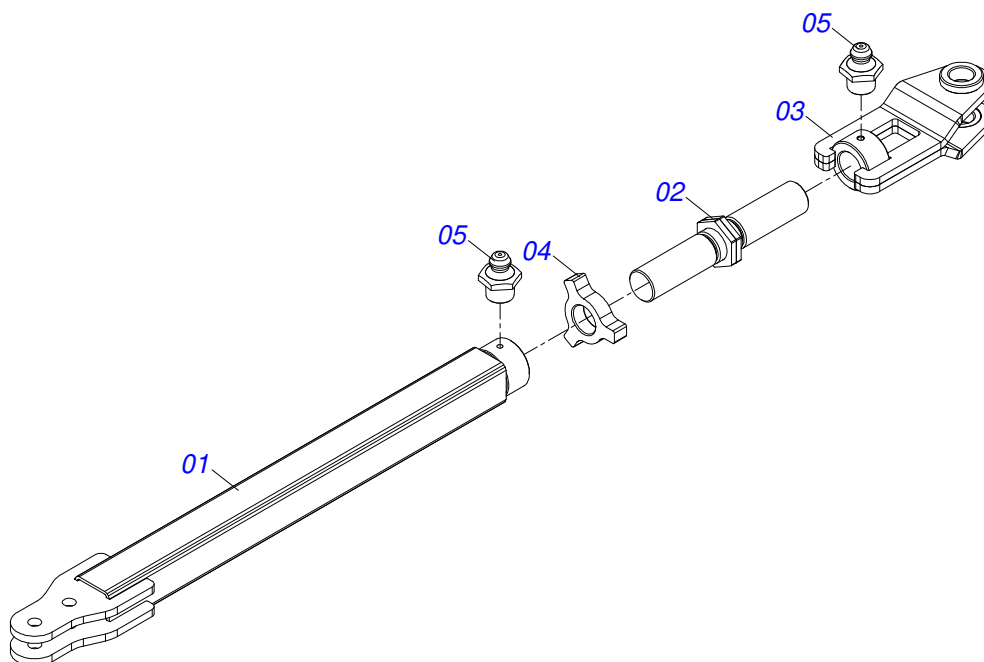


Item	Code	Description	See page	QT
01	0521064426	POINT FIXER EXTENDING LEFT		01
02	0501078990	TURNBUCLE AXLE		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0503010002	1800 GREASE FITTING		02

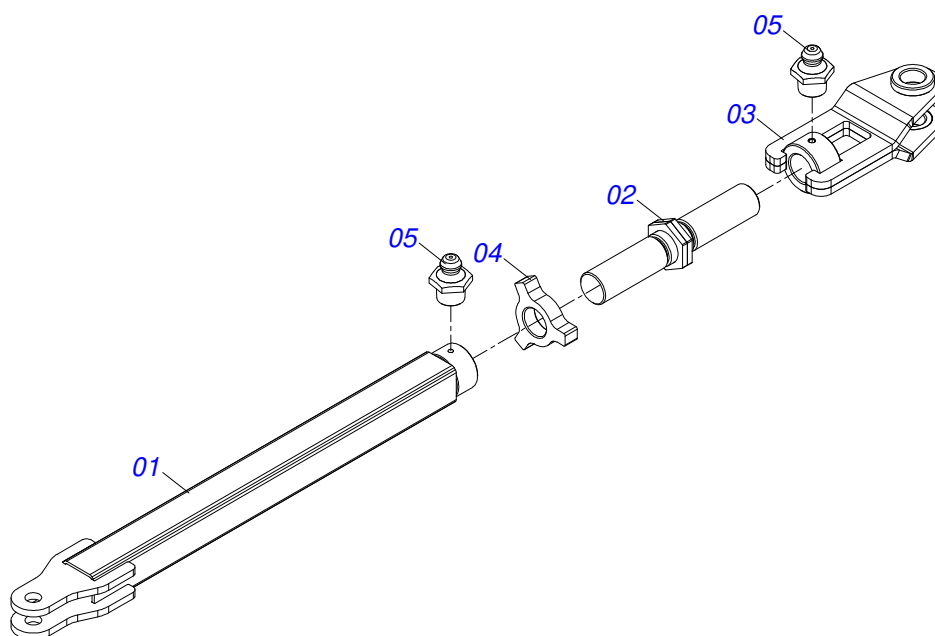

Item	Code	Description	See page	QT
01	0521064425	POINT FIXER EXTENDING RIGHT		01
02	0501078990	TURNBUCLE AXLE		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0503010002	1800 GREASE FITTING		02

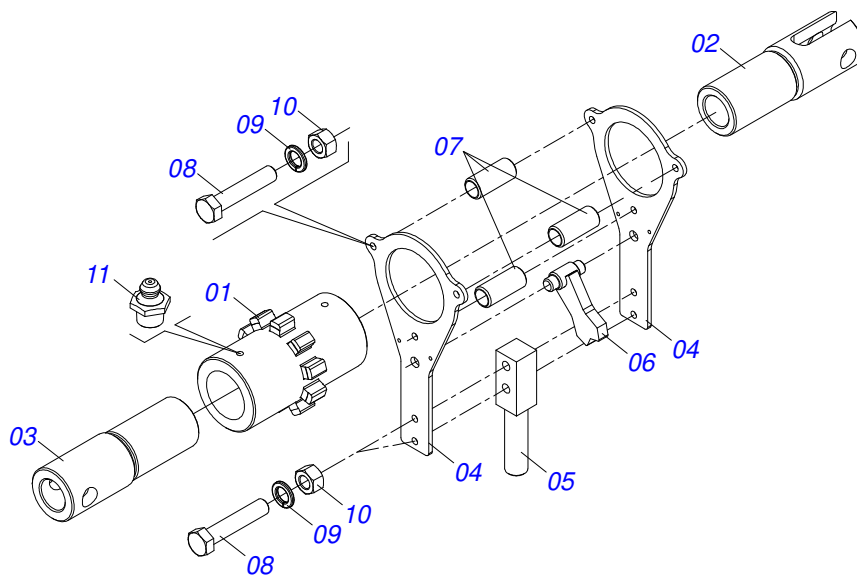


Item	Code	Description	See page	QT
01	0502012783	STABILIZER BODY GREATER		01
02	0571012279	JACK RIGHT		01
03	0571012280	JACK LEFT		01
04	0531010264	SIDE RATCHET		02
05	0521018500	SHAFT LEVER EXTENSOR		01
06	0511061881	RATCHET FOLLOWER		01
07	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
08	0503011179	3/8" X 2-1/4" BOLT		05
09	0503010025	3/8" SPRING WASHER		05
10	0503010026	3/8" NUT		05
11	0503010002	1800 GREASE FITTING		02

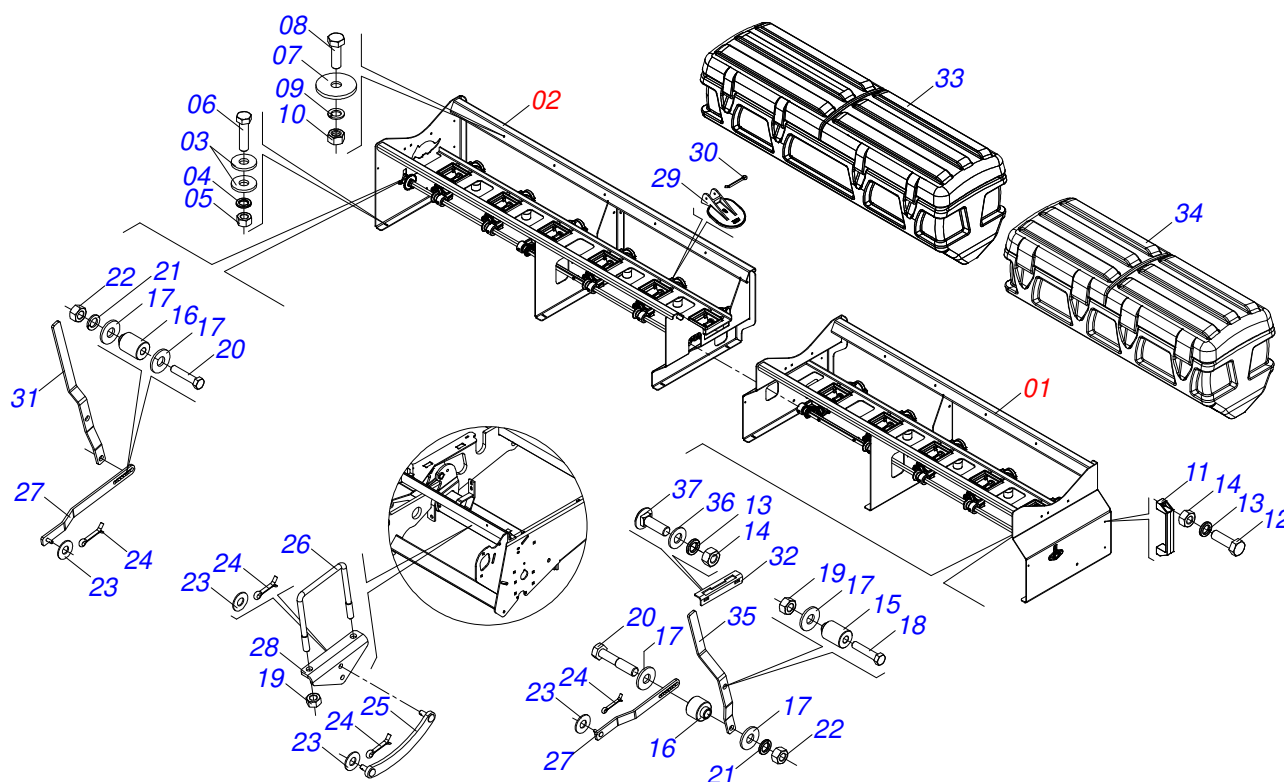


Item	Code	Description	See page	QT
01	0521056837	SILO SUPPORT LEFT FERTILIZER WITH 54 DISTRIBUTOR 4790 RIGHT MACHINE	01	01
02	0521056836	SILO SUPPORT FERTILIZER RIGHT WITH 58 DISTRIBUTOR 4790 RIGHT MACHINE	01	01
03	0501010984	FLAT WASHER		24
04	0503010025	3/8" SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0503010849	3/8" X 1-1/2" BOLT		12
07	0571019051	FIXER BOX WASHER		18
08	0503013751	3/8 UNC X 1.1/4 BOLT		18
09	0503012535	3/8" SPRING WASHER		18
10	0503012531	3/8" INOX NUT		18
11	0503011957	NYLON LUG		01
12	0503010371	5/16" X 1" BOLT		02
13	0503010179	LOCK WASHER		06
14	0503010337	5/16" NUT		06
15	0551019168	SLEEVE		02
16	0551019167	SLEEVE UNION		02
17	0511017302	FLAT WASHER		06
18	0503010479	BOLT		02
19	0503011336	1/2" HEX SELF ADJUSTING NUT		06
20	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
21	0503010019	1/2" SPRING WASHER		02
22	0503010060	1/2" NUT		02
23	0501013518	FLAT WASHER		06
24	0503010140	1/8" X 3/4" COTTERPIN		06
25	0511069678	LH LOWER LEVER		02
26	0561016468	FASTENER		02
27	0521061741	INNTER LEVER		02
28	0551019159	LEVER FIXER BODY		02
29	0503034396	FERTILIZER SIDE COVER		11
30	0503010362	1/8" X 1.1/4" COTTERPIN		11



Item	Code	Description	See page	QT
31	0551019160	LEVER		01
32	0581012605	GEAR BOX LEVER LOCK		02
33	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED		01
34	0503062391	FERTILIZER BOX		01
35	0591011630	ARM / DISARM LEVER 4790		01
36	0501010694	FLAT WASHER		04
37	0503011953	5/16" X 1" BOLT		04

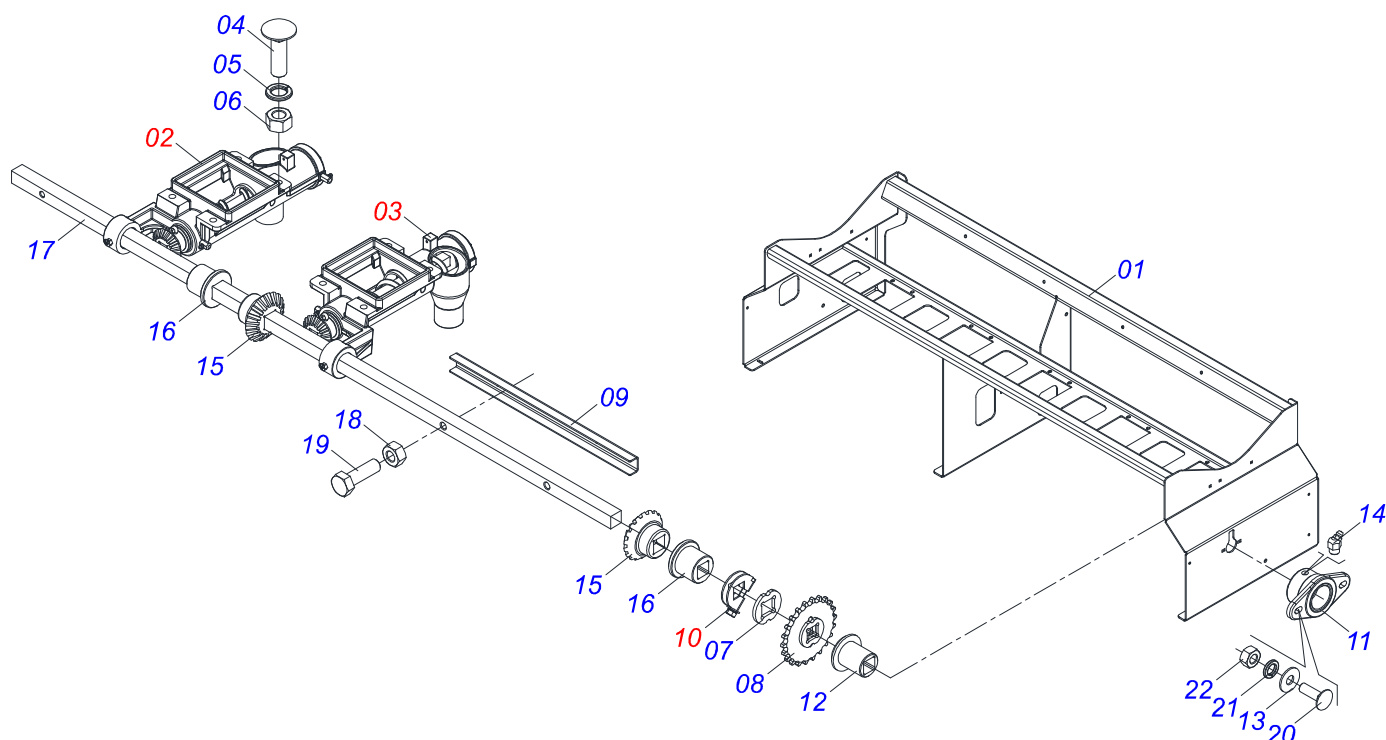


Item	Code	Description	See page	QT
01	0531060345	LEFT SUPPORT SILO FERTILIZER 4790 RIGHT MACHINE		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	55	01
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	56	04
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503010025	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0501053788	3/4 SQUARE AXLE FASTENER	57	01
11	0501110392	SILO SUPPORT BEARING		01
12	0521012485	GEAR BOX BEARING AGRICUTURAL		01
13	0521011039	FLAT WASHER		02
14	0503010003	1845 GREASE FITTING		01
15	1902010685	18Z CONICAL GEAR		05
16	0503030275	AGRICULTURAL BEARING		05
17	0591011639	3/4 X 2046 SQUARE SHAFT		01
18	0503013816	5/16" LOCKNUT		02
19	0503010365	NUT		02
20	0503011953	5/16" X 1" BOLT		02
21	0503010179	LOCK WASHER		02
22	0503010337	5/16" NUT		02

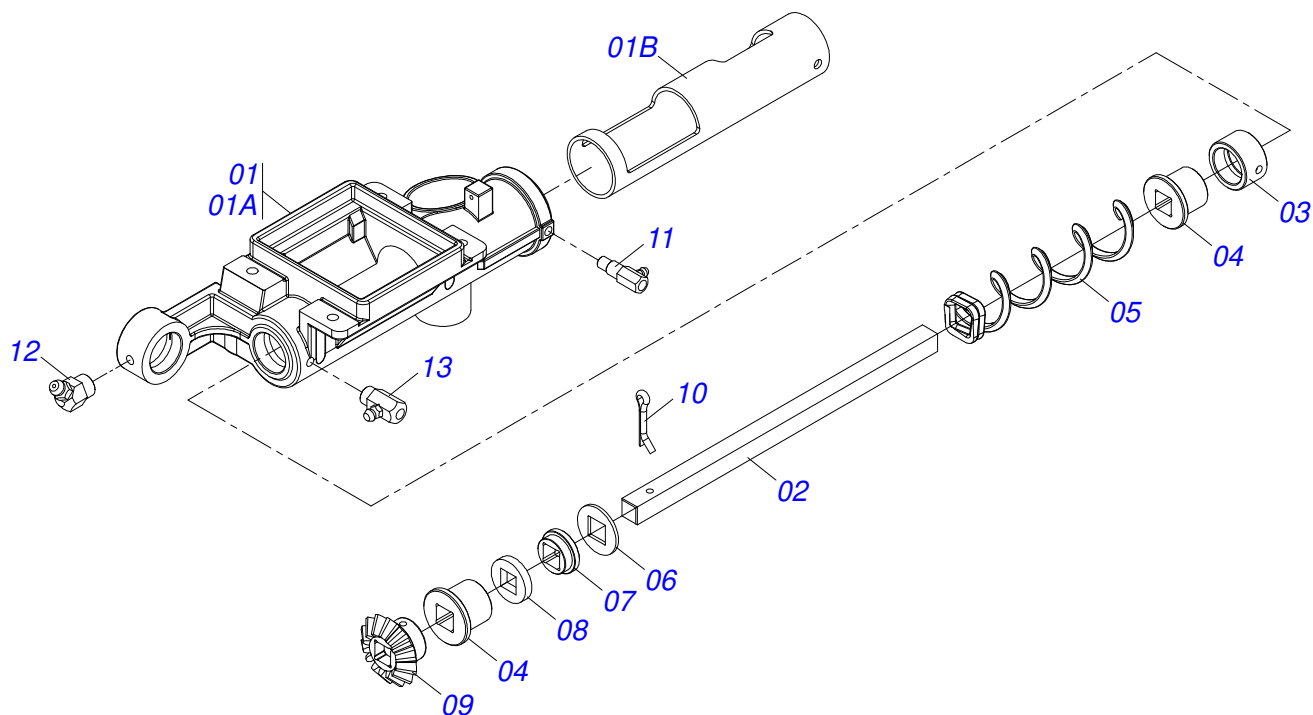


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

LEFT SIDE FERTILIZER DISTRIBUTOR


0511051558

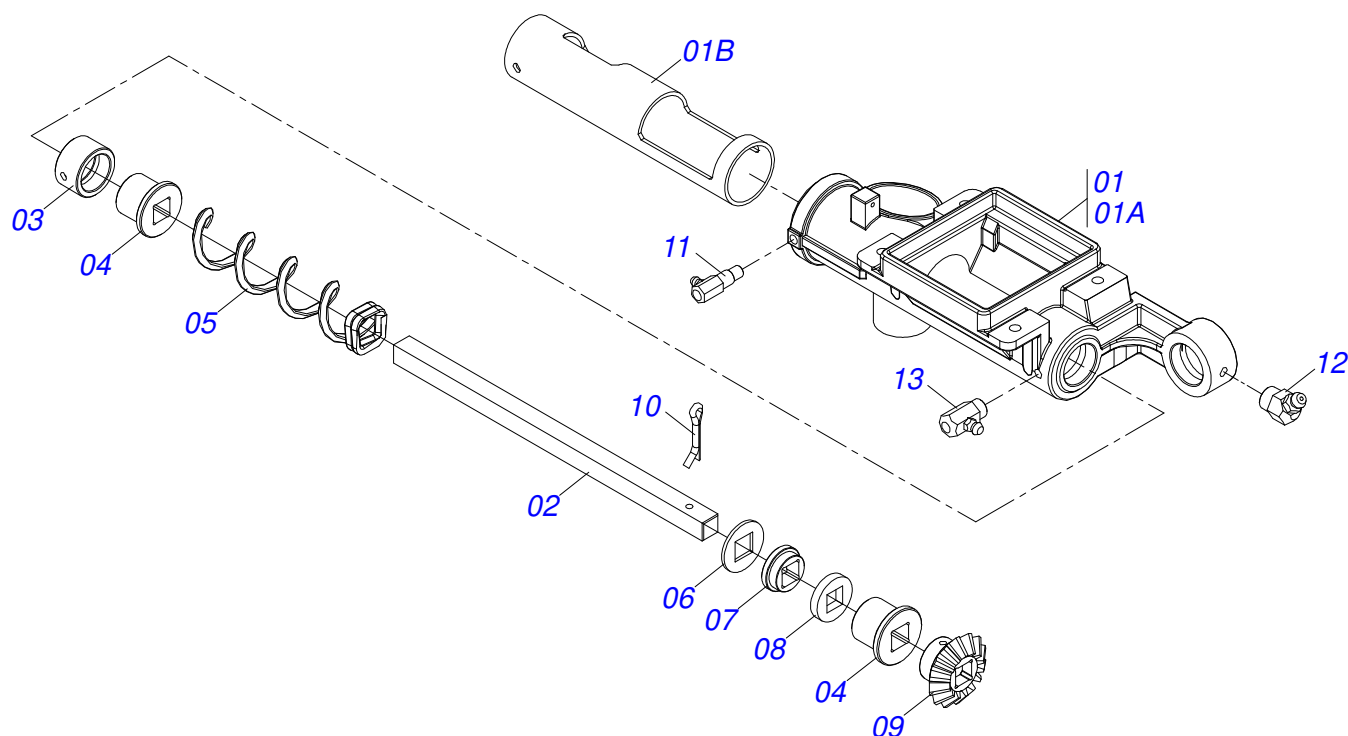


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

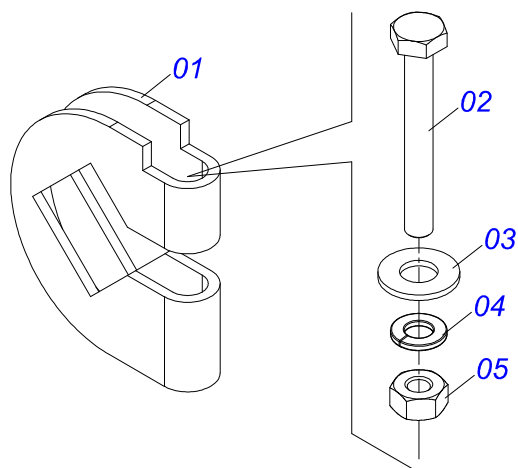


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

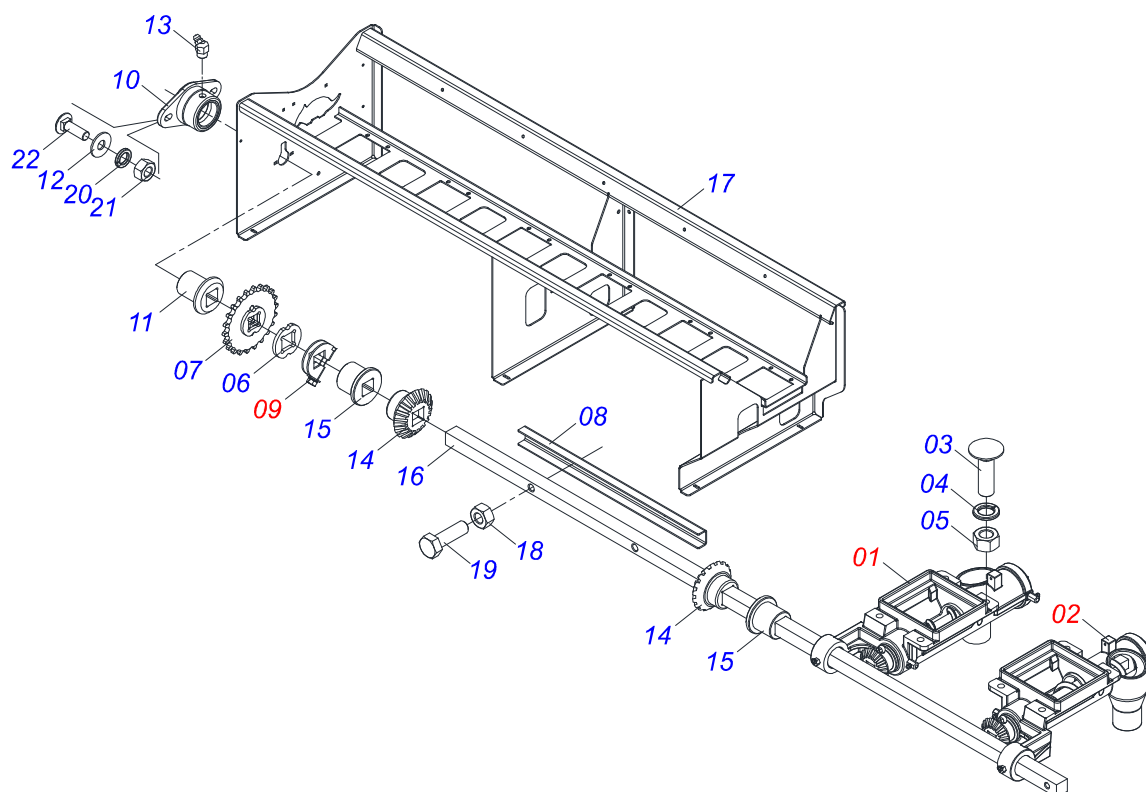


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	55	02
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	56	04
03	0501010942	3/8" X 1-1/4" BOLT		24
04	0503010025	3/8" SPRING WASHER		24
05	0503010026	3/8" NUT		24
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0501053788	3/4 SQUARE AXLE FASTENER	57	01
10	0501110392	SILO SUPPORT BEARING		01
11	0521012485	GEAR BOX BEARING AGRICUTURAL		01
12	0521011039	FLAT WASHER		02
13	0503010003	1845 GREASE FITTING		01
14	1902010685	18Z CONICAL GEAR		06
15	0503030275	AGRICULTURAL BEARING		06
16	0591011631	3/4 X 2280 SQUARE SHAFT		01
17	0531060344	RIGHT SUPPORT SILO FERTILIZER 4790 RIGHT MACHINE		01
18	0503013816	5/16" LOCKNUT		02
19	0503011953	5/16" X 1" BOLT		02
20	0503010337	5/16" NUT		02
21	0503010179	LOCK WASHER		02
22	0503010365	NUT		02

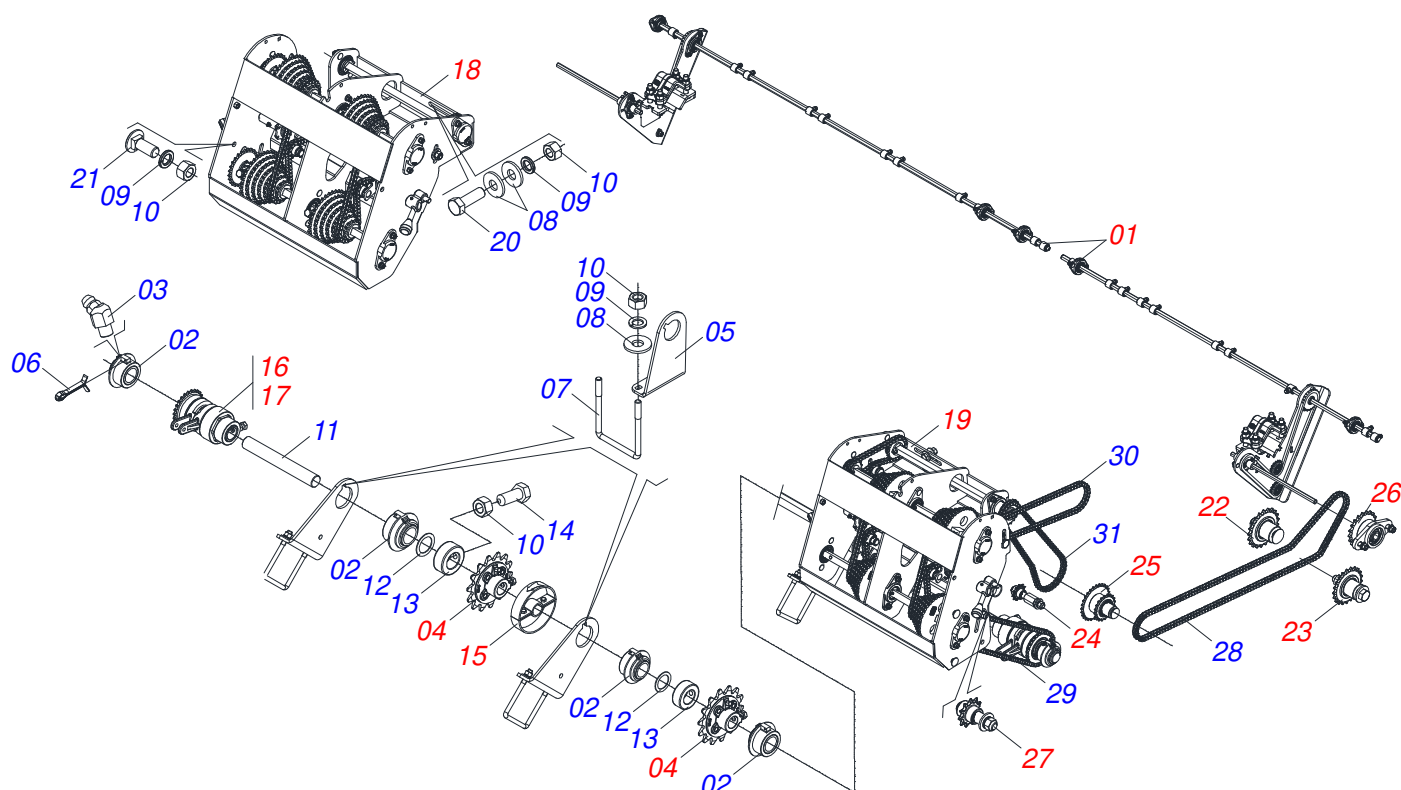


Item	Code	Description	See page	QT
01	0531054312	RIGHT SET TRANSMISSION HEXAGONAL AXLE 3/4 TCE SEED	60	01
02	0501110639	BEARING		08
03	0503011099	GREASE FITTING		08
04	0511051434	TRANSMISSION ACTUATOR	65	04
05	0551019114	MOTOR BEARING AXLE SUPPORT		04
06	0503010300	5/32" X 1" COTTERPIN		08
07	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
08	0511017302	FLAT WASHER		16
09	0503010019	1/2" SPRING WASHER		18
10	0503010060	1/2" NUT		22
11	0561016876	MOTOR SHAFT		02
12	0501018466	FLAT WASHER		04
13	0511015961	LOCK BUSHING		04
14	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
15	0501052560	MOTOR AXLE SIGNAL	66	02
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	67	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	68	01
18	0531054313	SUPREME TCE FULL RIGHT EXCHANGE	69	01
19	0531054314	COMPLETE LEFT GEAR SUPREME TCE	70	01
20	0503010920	1/2" X 1.1/2" BOLT		04
21	0501011600	1/2" X 1-1/4" BOLT		06
22	0521055216	BEARING WITH GEAR	80	02
23	0521055217	LOWER CURRENT STRETCH	81	02
24	0501058254	UPPER SEED CHAIN TENSIONER	82	02
25	0521055218	BEARING GEAR WITH DOUBLE	83	02
26	0521055214	BEARING GEAR WITH	84	02
27	0511059261	CHAIN TENSIONER	86	04
28	0503014907	40-1 X 151 CHAIN LINK + MENDING		02
29	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
30	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
31	0503012204	40-1 CHAIN X 82 LINK + RED		02

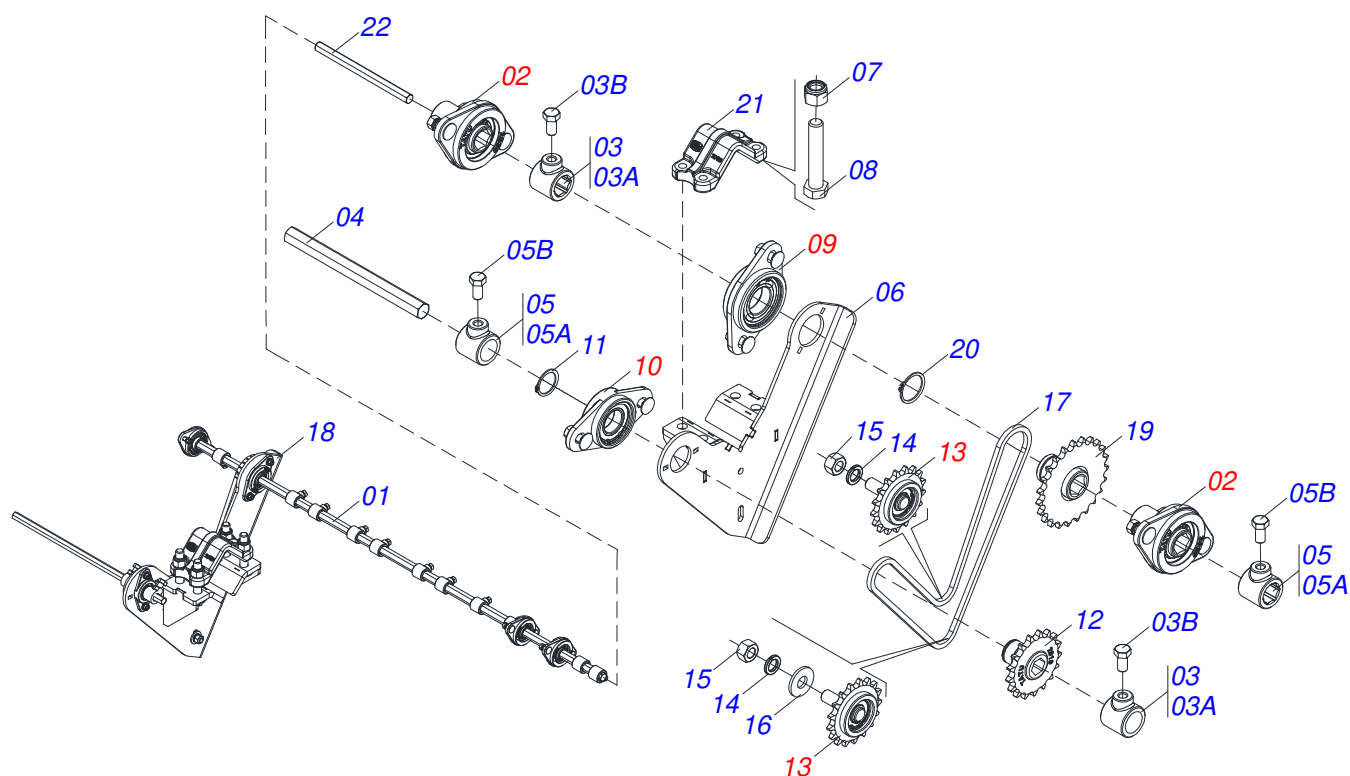


Item	Code	Description	See page	QT
01	0581019589	3/4 X 2360 HEX AXLE		01
02	0521055372	ROW SEED BEARING	61	05
03	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		21
03A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
03B	0503010256	3/8" X 3/4" BOLT		01
04	0591019807	HEX AXLE 5/8 X 500 PEANUTS		02
05	0501055489	SPRING GUIDE LOCK SLEEVE		04
05A	0502040534	SPRING GUIDE BUSHING LOCK		01
05B	0501018535	1/2 X 1 BOLT		01
06	0531062679	LEFT TRANSMISSION SUPPORT PEANUTS		01
07	0503011075	3/4" UNC NUT		08
08	0503010797	3/4" X 4" BOLT		08
09	0531052183	BEARING SHAFT TRANSMISSION LINE PEANUT SEED	62	02
10	0511050617	FRONT SEED ROW BEARING	63	02
11	0503010406	501025 CLAMPING RING (FOR AXLE)		02
12	0502012819	17Z GEAR WITH HEX HOLE		02
13	0531052164	STRETCH 17Z CHAIN 40-1 PEANUTS	64	04
14	0503010019	1/2" SPRING WASHER		04
15	0503010060	1/2" NUT		04
16	0511017302	FLAT WASHER		02
17	0503014854	40-1 CHAIN X 135 LINK + MENDING		02
18	0531062680	PEANUTS RIGHT TRANSMISSION SUPPORT		01
19	0531063629	GEAR 23Z X 45 X FLEX HEX		02
20	0503010707	501030 CLAMPING RING (FOR AXLE)		02
21	0502012789	FIXER SUPPORT FERTILIZER ROW		02
22	0571013341	HEX AXLE		01

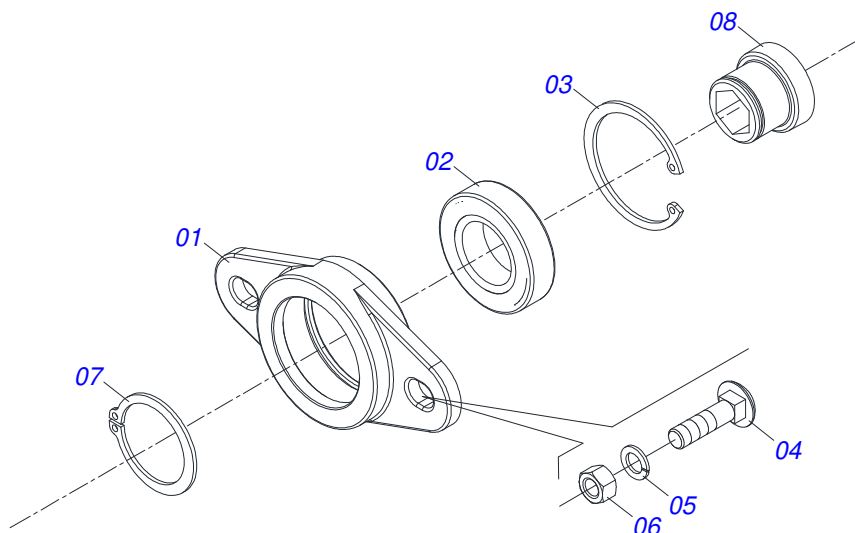


Item	Code	Description	See page	QT
01	0581017857	HOUSING BEARING		01
02	0503019361	BEARING 6006 RS1		01
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01
04	0503011953	5/16" X 1" BOLT		02
05	0503010179	LOCK WASHER		02
06	0503010337	5/16" NUT		02
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01
08	0581019823	BEARING AXLE BODY WITHOUT LUBRICATION		01

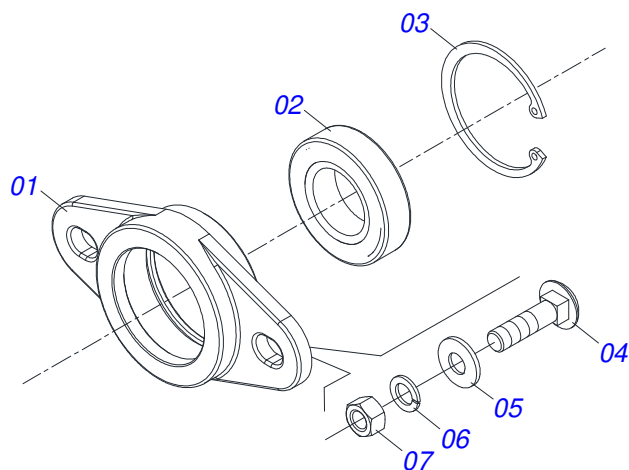


Item	Code	Description	See page	QT
01	0581017857	HOUSING BEARING		01
02	0503019373	6006 2RS1 NATIONAL BEARING		01
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER		02
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

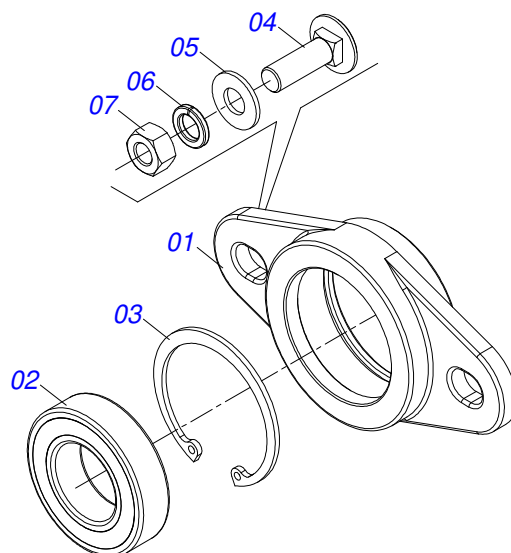


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER		02
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

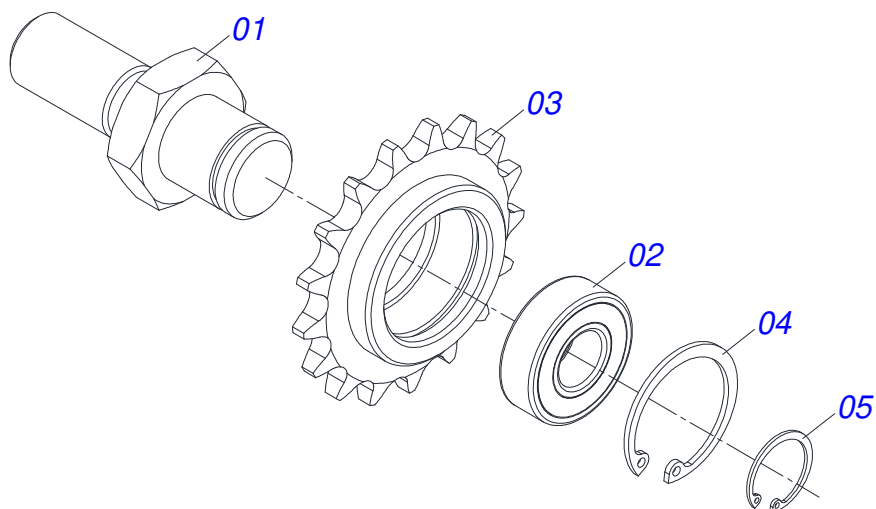


Item	Code	Description	See page	QT
01	0591019804	PEANUT SEED CHAIN STRETCH		01
02	0503012882	BEARING		01
03	0511068760	CHAIN TIGHTENER BODY		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01
05	0503012104	501015 CLAMPING RING (FOR AXLE)		01

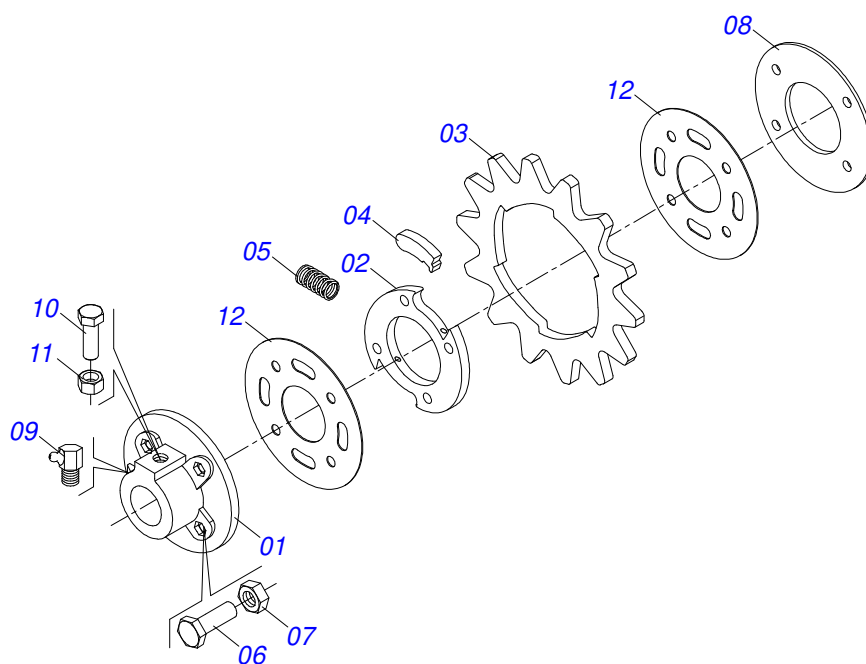

Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

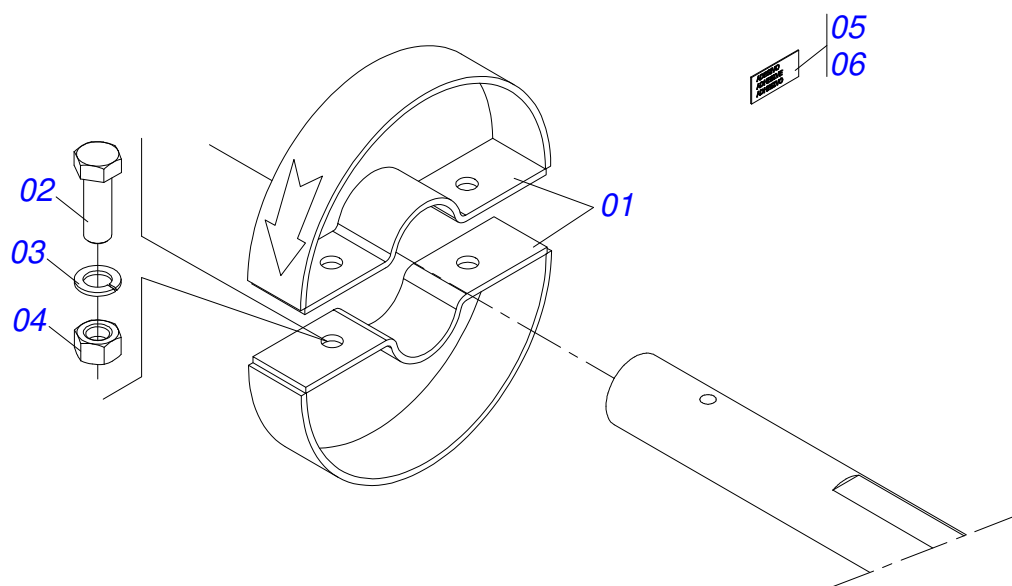


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ETIQUETA ADHESIVA		01

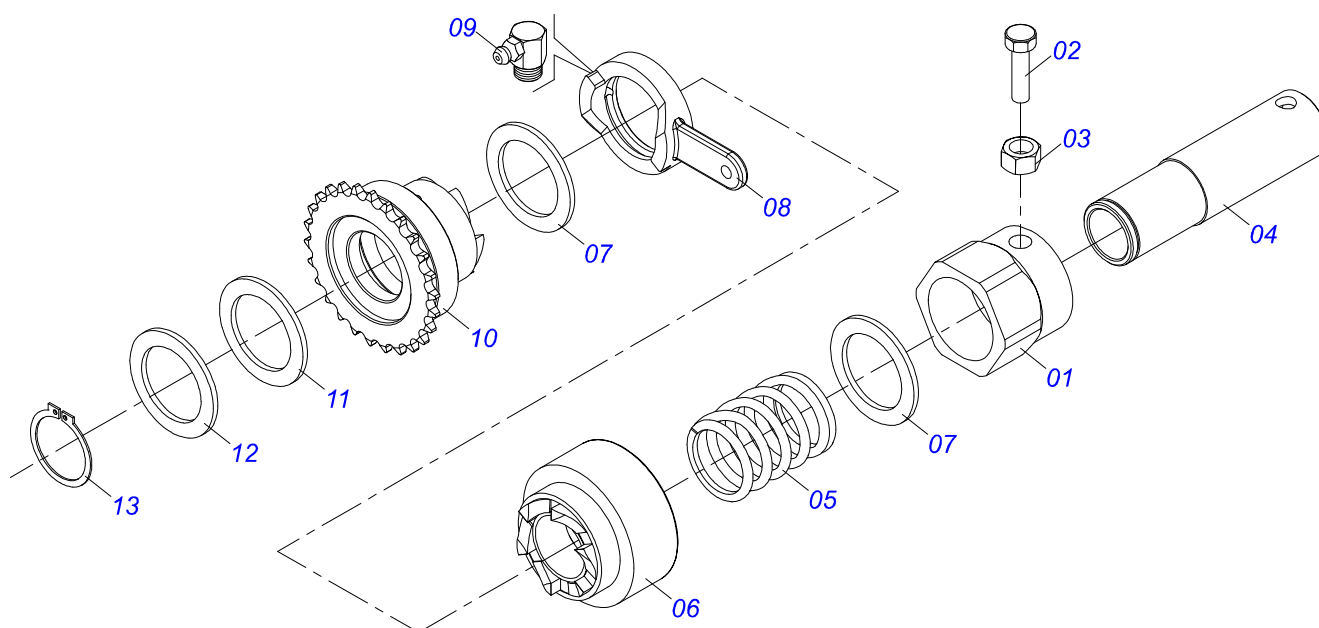


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

LEFT SIDE TRANSMISSION ACTUATOR


0511047070

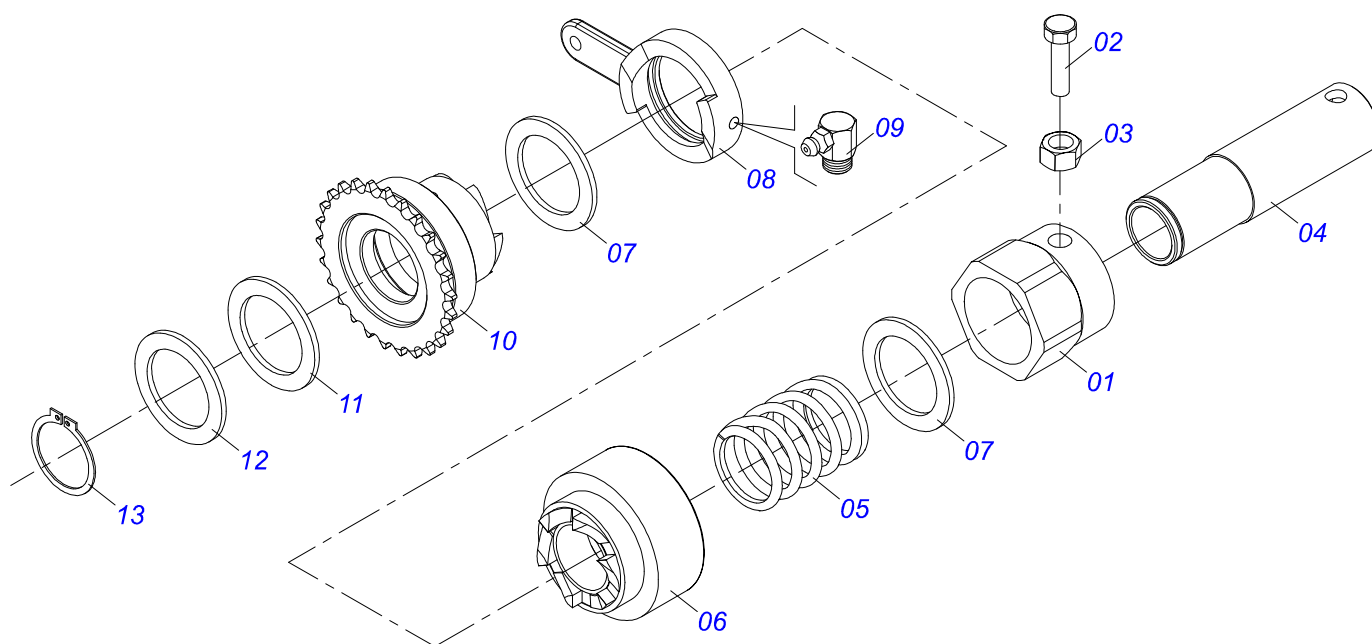


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

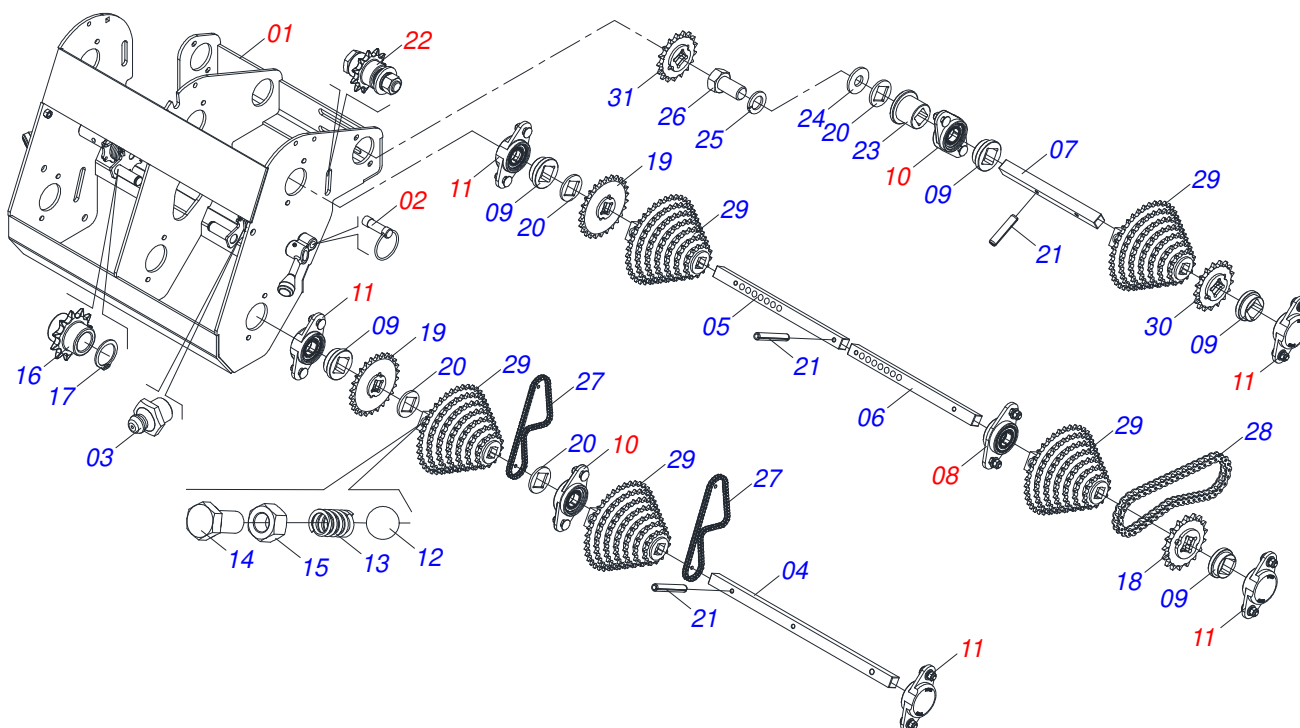


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	71	01
02	0501048790	AXLE WITH RING	73	02
03	0503010002	1800 GREASE FITTING		02
04	0551018209	DRIVING AXLE		01
05	0521018259	DRIVEN AXLE		01
06	0551018210	DRIVEN AXLE		01
07	0551018211	INTERM SHAFT		01
08	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	74	01
09	0503030303	SUPPORT WASHER		05
10	0501056443	GEAR HOUSING BEARING	75	02
11	0511059266	CLOSED BEARING	77	05
12	0503012389	1/2 BALL		04
13	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
14	0503010834	1/2 X 1 BOLT		04
15	0503010060	1/2" NUT		04
16	0503031805	11Z 1/2" GEAR		04
17	0503010302	501019 SEAL RING		04
18	0511061830	17Z P 0.5" GEAR SQUARE HOL		01
19	0511067501	26Z GEAR		02
20	0521018630	1.4" X SQUARE 0.8" WASHER		04
21	0503010292	0.2" X 1.6" SPRING PIN		08
22	0501054655	CHAIN TENSIONER ASSY	79	01
23	0503030275	AGRICULTURAL BEARING		01
24	0501010984	FLAT WASHER		01
25	0503010025	3/8" SPRING WASHER		01
26	0503010256	3/8" X 3/4" BOLT		01
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0511060396	DRIVE/DRIVEN AXLE CONE		04
30	0511061757	18Z GEAR		01
31	0511065209	20Z GEAR		01

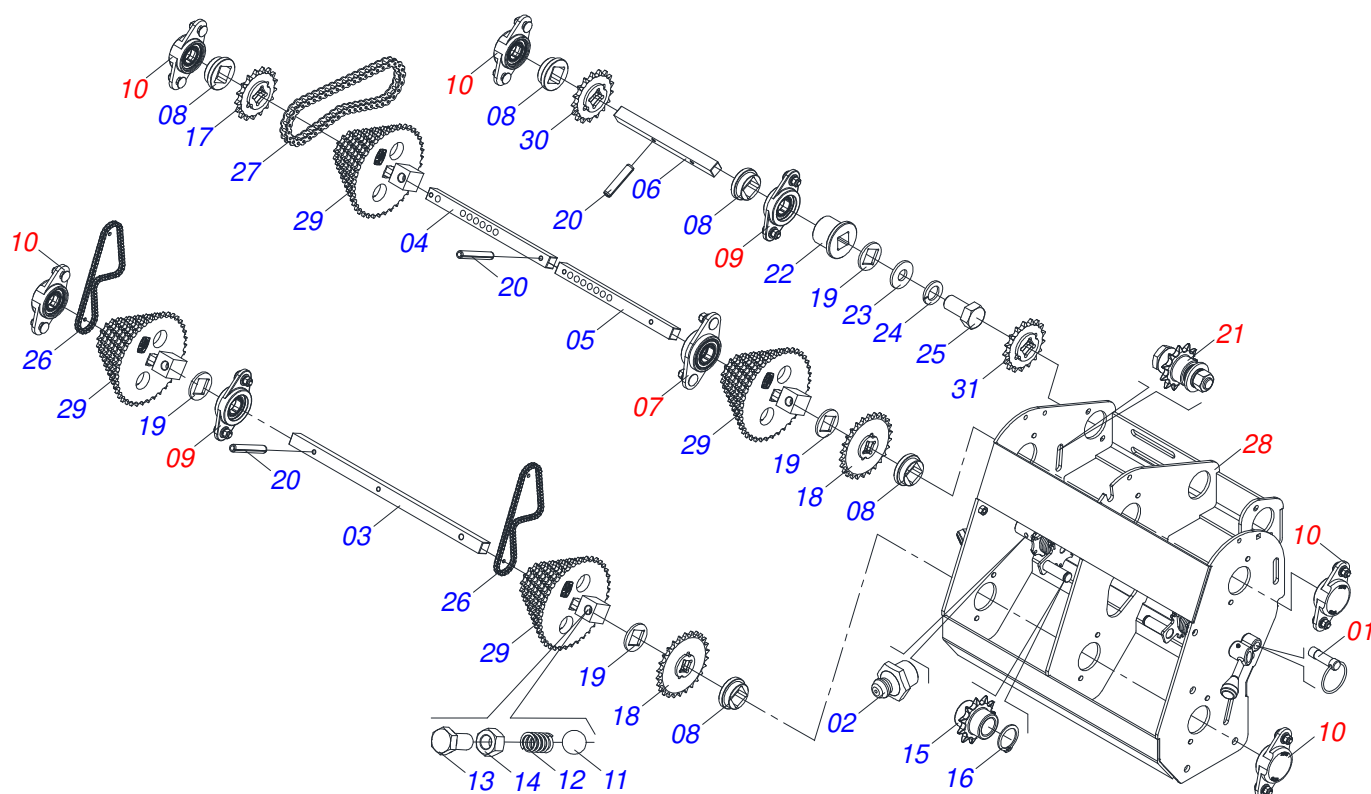


Item	Code	Description	See page	QT
01	0501048790	AXLE WITH RING	73	02
02	0503010002	1800 GREASE FITTING		02
03	0551018209	DRIVING AXLE		01
04	0521018259	DRIVEN AXLE		01
05	0551018210	DRIVEN AXLE		01
06	0551018211	INTERM SHAFT		01
07	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	74	01
08	0503030303	SUPPORT WASHER		05
09	0501056443	GEAR HOUSING BEARING	75	02
10	0511059266	CLOSED BEARING	77	05
11	0503012389	1/2 BALL		04
12	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
13	0503010834	1/2 X 1 BOLT		04
14	0503010060	1/2" NUT		04
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0511061830	17Z P 0.5" GEAR SQUARE HOL		01
18	0511067501	26Z GEAR		02
19	0521018630	1.4" X SQUARE 0.8" WASHER		04
20	0503010292	0.2" X 1.6" SPRING PIN		08
21	0501054655	CHAIN TENSIONER ASSY	79	01
22	0503030275	AGRICULTURAL BEARING		01
23	0501010984	FLAT WASHER		01
24	0503010025	3/8" SPRING WASHER		01
25	0503010256	3/8" X 3/4" BOLT		01
26	0503012204	40-1 CHAIN X 82 LINK + RED		02
27	0503012713	40-1 CHAIN X 45 LINK + MEN		01
28	0501058213	LH GEAR BOX	72	01
29	0511060396	DRIVE/DRIVEN AXLE CONE		04
30	0511065209	20Z GEAR		01
31	0511061757	18Z GEAR		01

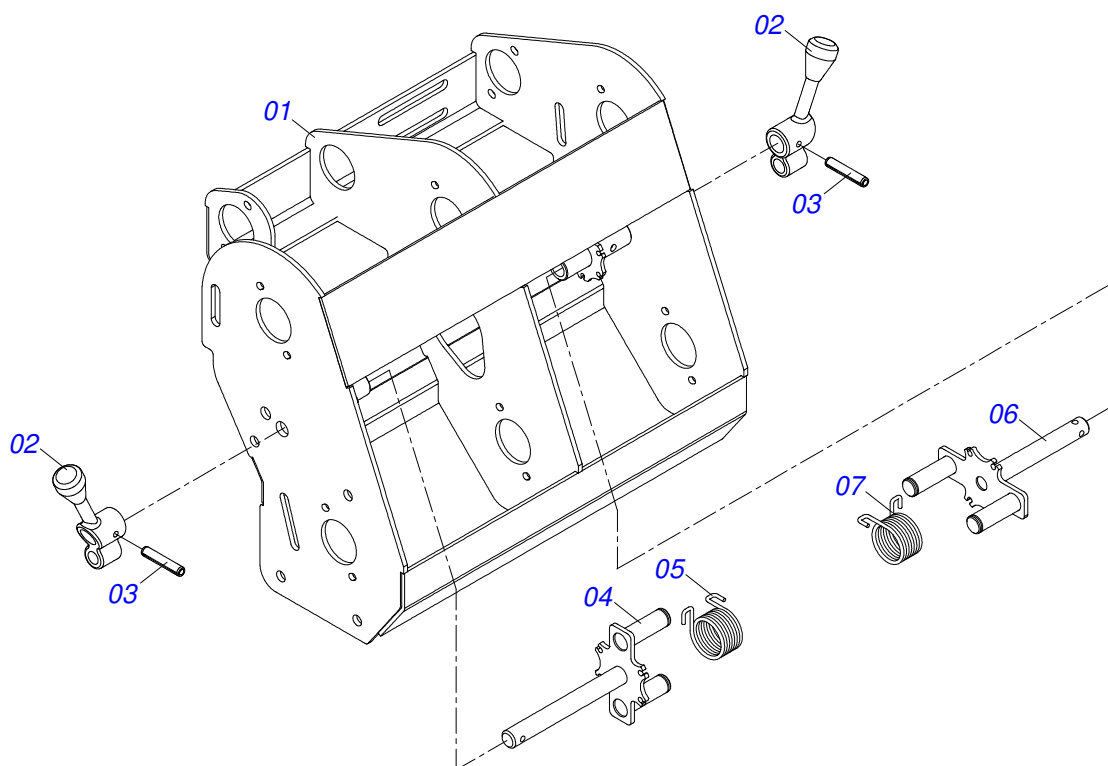


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

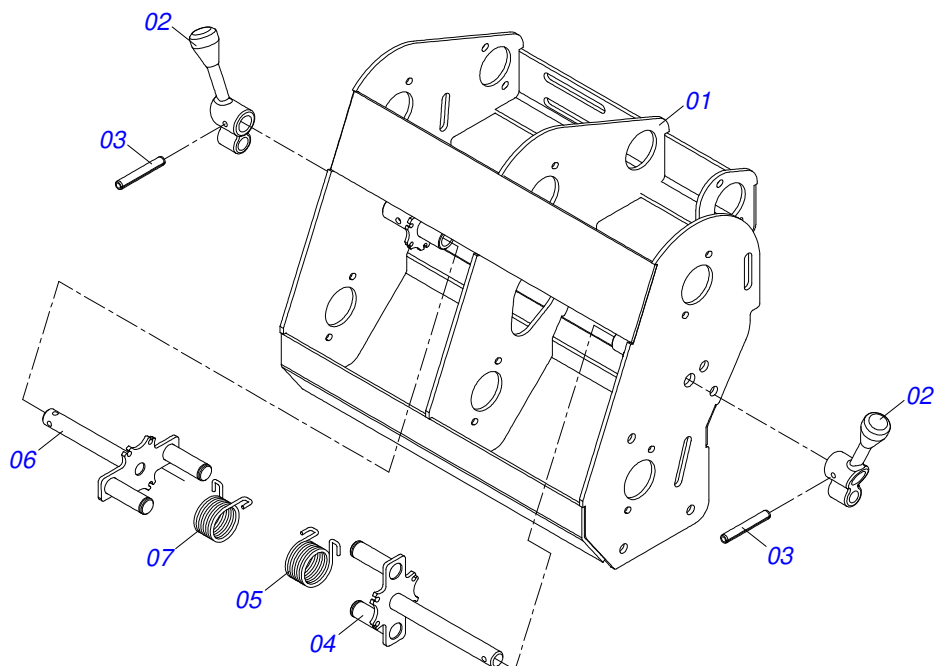


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

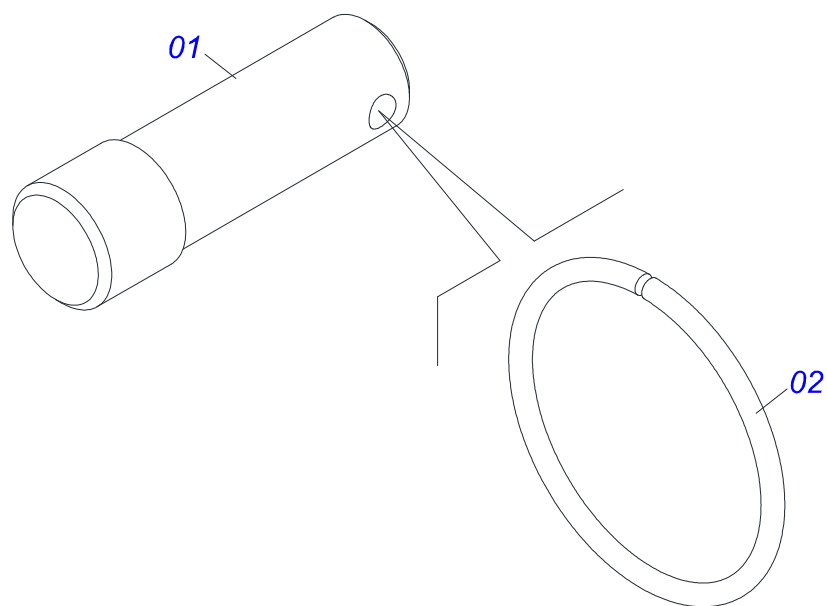


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

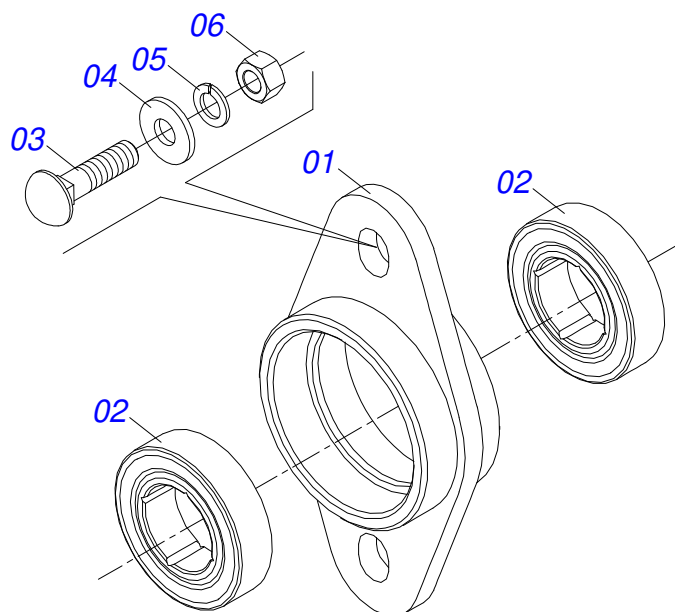


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER		02
06	0503010337	5/16" NUT		02

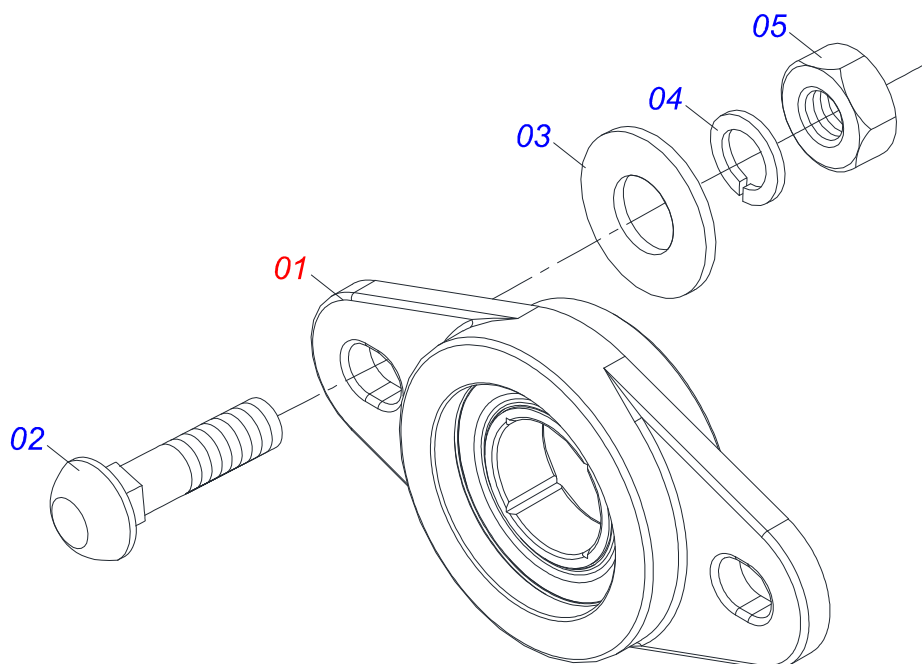


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	76	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

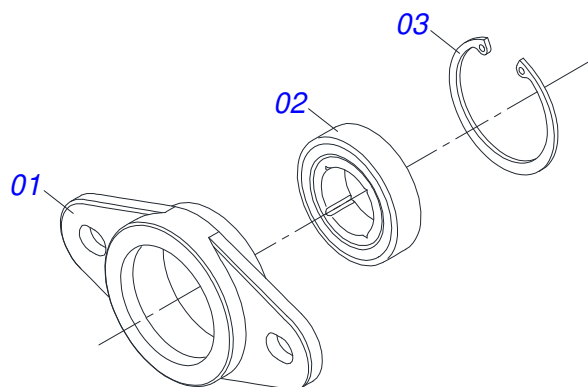


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

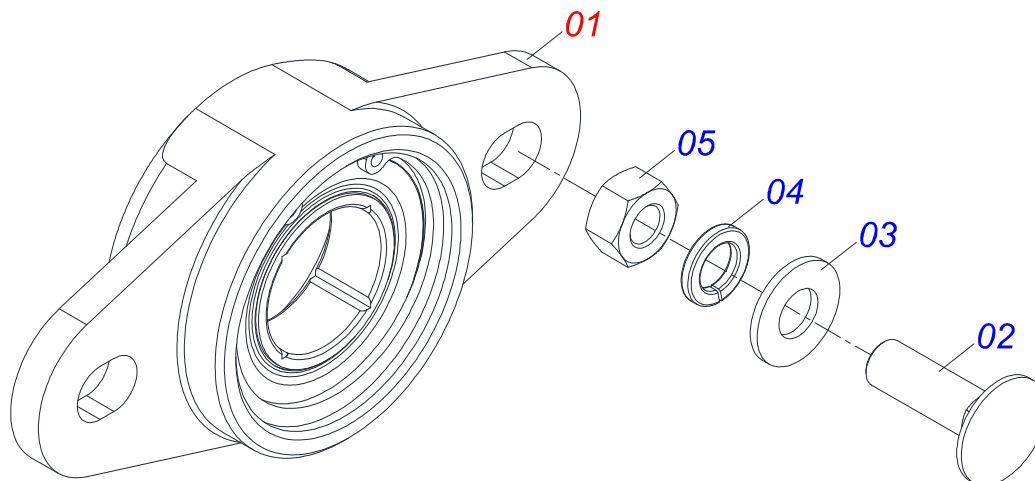


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	78	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

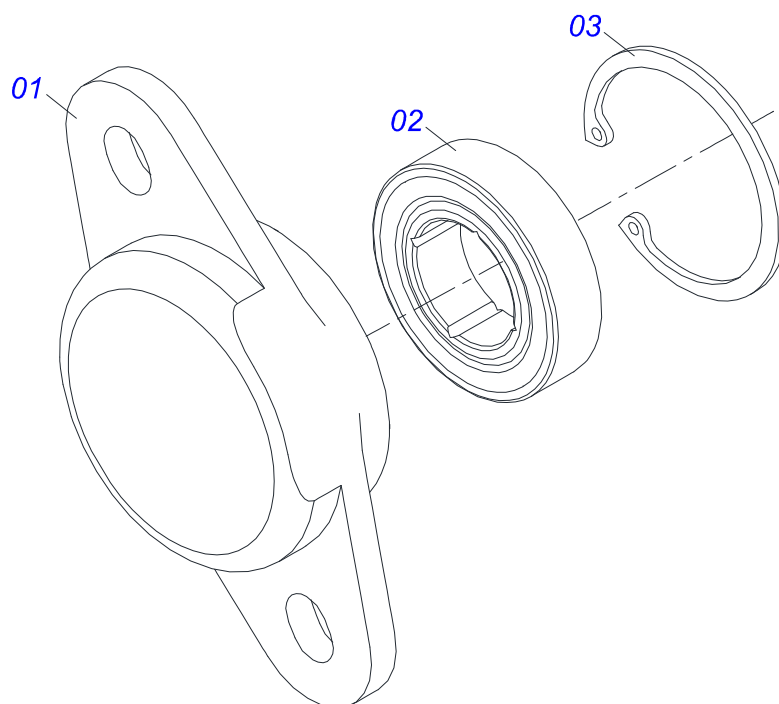


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

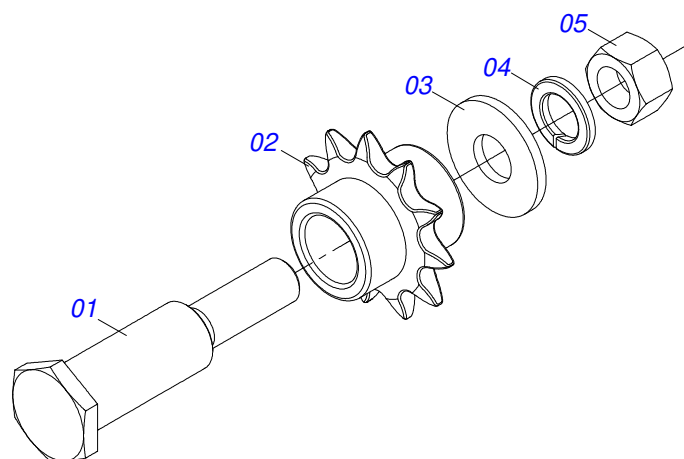


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

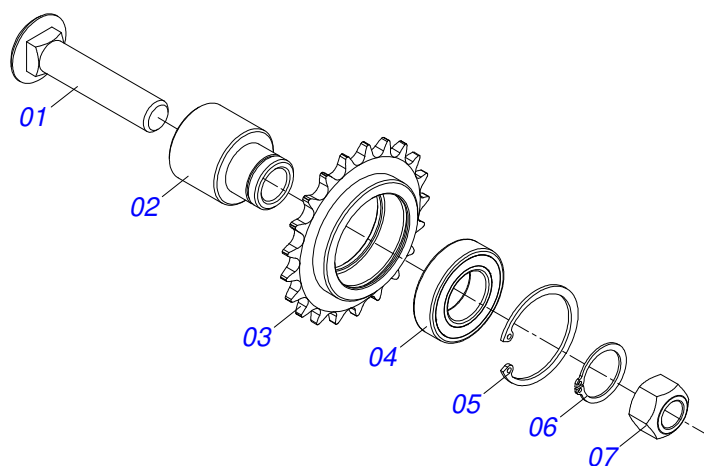


Item	Code	Description	See page	QT
01	0501011234	5/8" X 3" BOLT		01
02	0531017086	50 AXLETIGHTENER		01
03	0521069698	GEAR 21Z P 1/2		01
04	0503019356	BEARING 6005 2RS1		01
05	0503011105	SEAL RING		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01

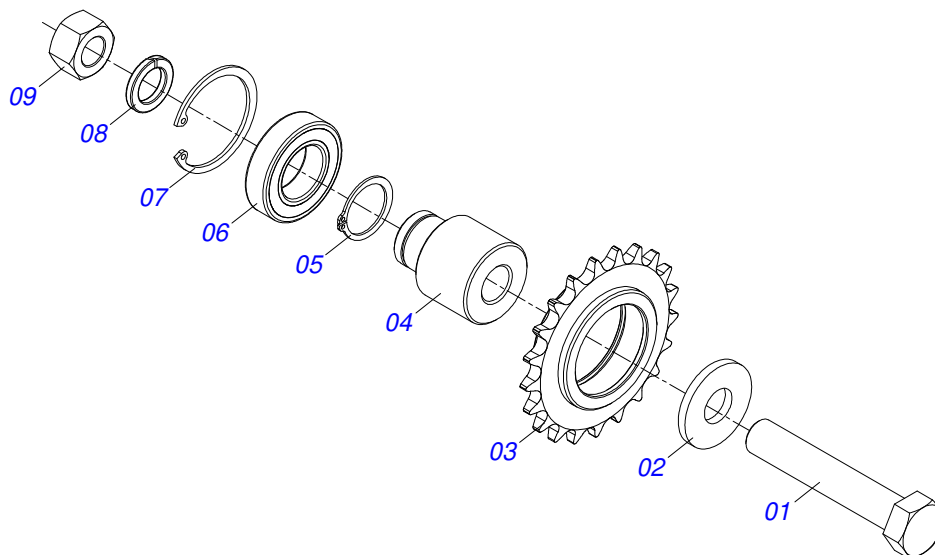


Item	Code	Description	See page	QT
01	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
02	0501012140	FLAT WASHER		01
03	0521069698	GEAR 21Z P 1/2		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503019356	BEARING 6005 2RS1		01
07	0503011105	SEAL RING		01
08	0503010027	5/8" SPRING WASHER		01
09	0503010013	5/8" NUT		01

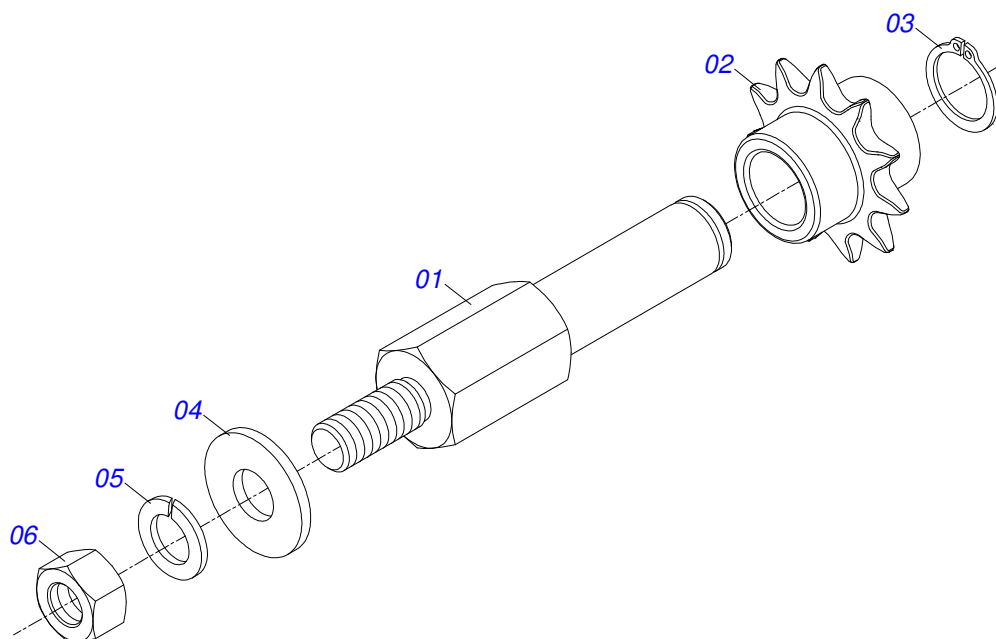


Item	Code	Description	See page	QT
01	0521018933	FERT CHAIN TENSIONER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

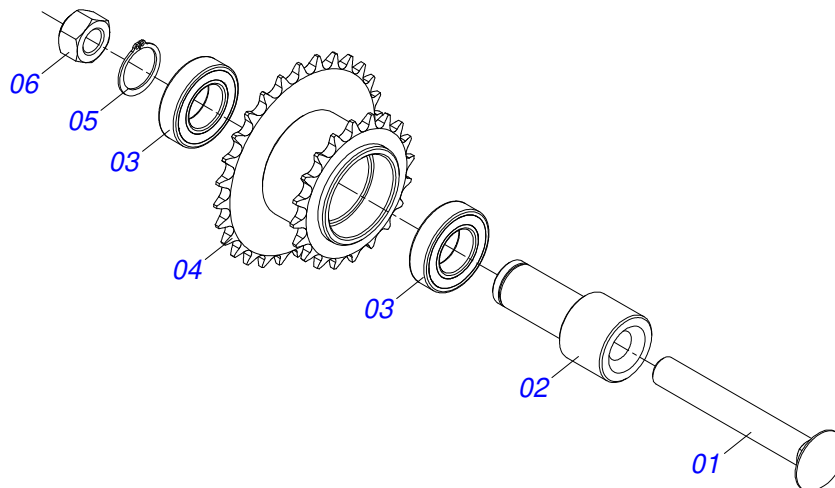


Item	Code	Description	See page	QT
01	0503016460	5/8" X 4.1/2" BOLT		01
02	0551019175	DOUBLE GEAR AXLE		01
03	0503019356	BEARING 6005 2RS1		02
04	0511069680	20Z X 28Z DOBLE GEAR		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503012412	5/8 UNC SELF LOCKING NUT		01

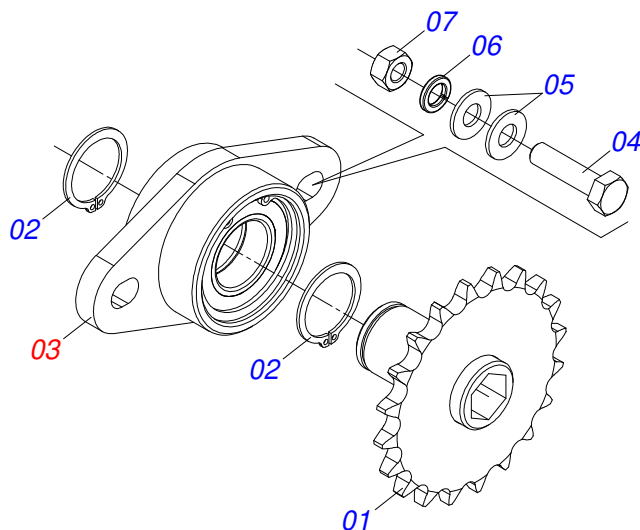


Item	Code	Description	See page	QT
01	0511063106	20Z AXLE BEARING DOBLE		01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		02
03	0521055215	DOUBLE TRANSMISSION BEARING	85	01
04	0503010365	NUT		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

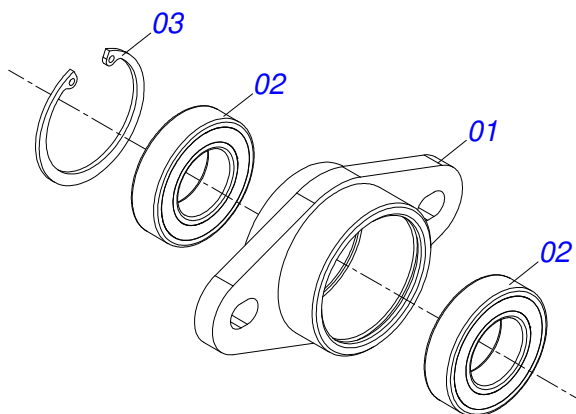


Item	Code	Description	See page	QT
01	0502011987	DOUBLE HOUSING BEARING		01
02	0503019356	BEARING 6005 2RS1		02
03	0503011105	SEAL RING		01

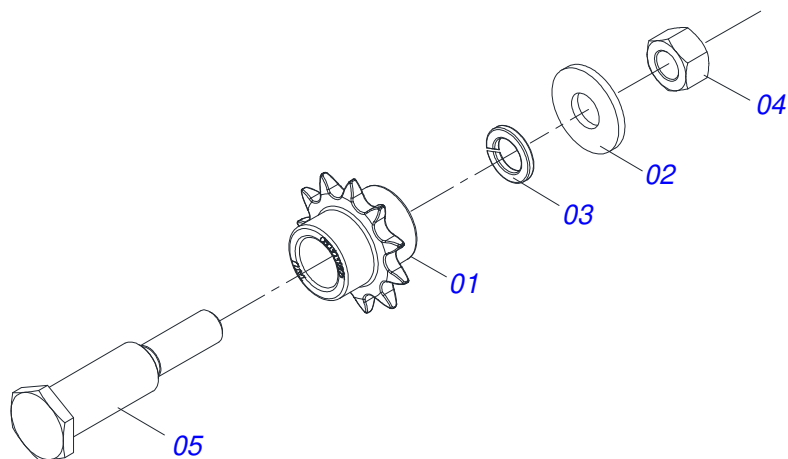


Item	Code	Description	See page	QT
01	0503031805	11Z 1/2" GEAR		01
02	0511017302	FLAT WASHER		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0531019479	AXLE CHAIN GEAR		01

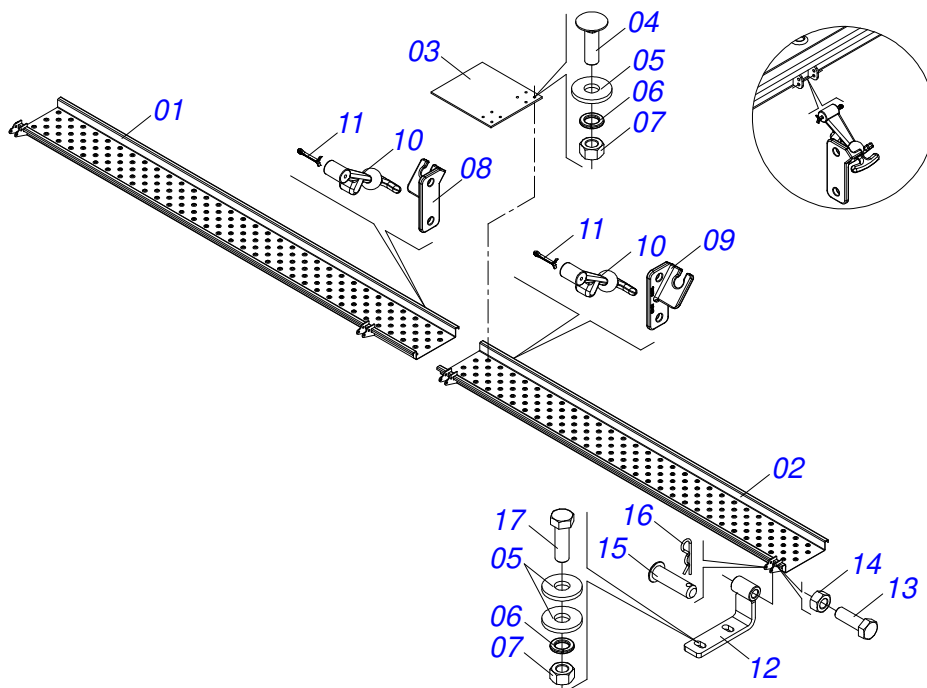


Item	Code	Description	See page	QT
01	0531060348	PLATFORMS RIGHT 4790 RIGHT MACHINE		01
02	0531060349	PLATFORMS LEFT 4790 RIGHT MACHINE		01
03	0581015863	PLATFORM ENHANCEMENT PROTECTION		01
04	0501010942	3/8" X 1-1/4" BOLT		02
05	0501010984	FLAT WASHER		18
06	0503010025	3/8" SPRING WASHER		10
07	0503010026	3/8" NUT		10
08	0502012739	PLATFORM LEFT FIXER SUPPORT		01
09	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
10	0503011333	COVER FIXER		02
11	0503010274	5/32"X 2" COTTERPIN		02
12	0521068316	JOINT SUPPORT		04
13	0503010741	1/2" X 2-3/4" BOLT		04
14	0503011336	1/2" HEX SELF ADJUSTING NUT		04
15	0521010549	COUPLING SHAFT		04
16	0503030168	HAIR PIN		04
17	0503010849	3/8" X 1-1/2" BOLT		08

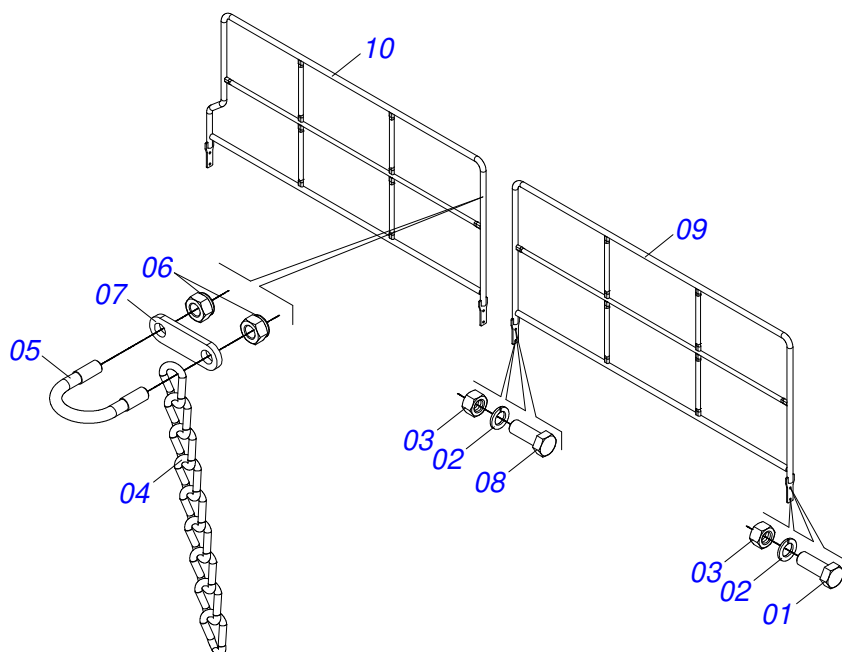


Item	Code	Description	See page	QT
01	0503010395	1/2" X 1-1/4" BOLT	02	
02	0503010019	1/2" SPRING WASHER	06	
03	0503010060	1/2" NUT	06	
04	0503034094	22 TWISTED CHAIN	02	
05	0551019884	45 X 50 X 3/8 FASTENER	04	
06	0503013357	3/8" SELF-ADJUSTING NUT	08	
07	0571017991	CHAIN FIXER HANDRAIL	04	
08	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
09	0531060353	SIDE HANDRAIL	01	
10	0531060352	CENTRAL HANDRAIL	01	

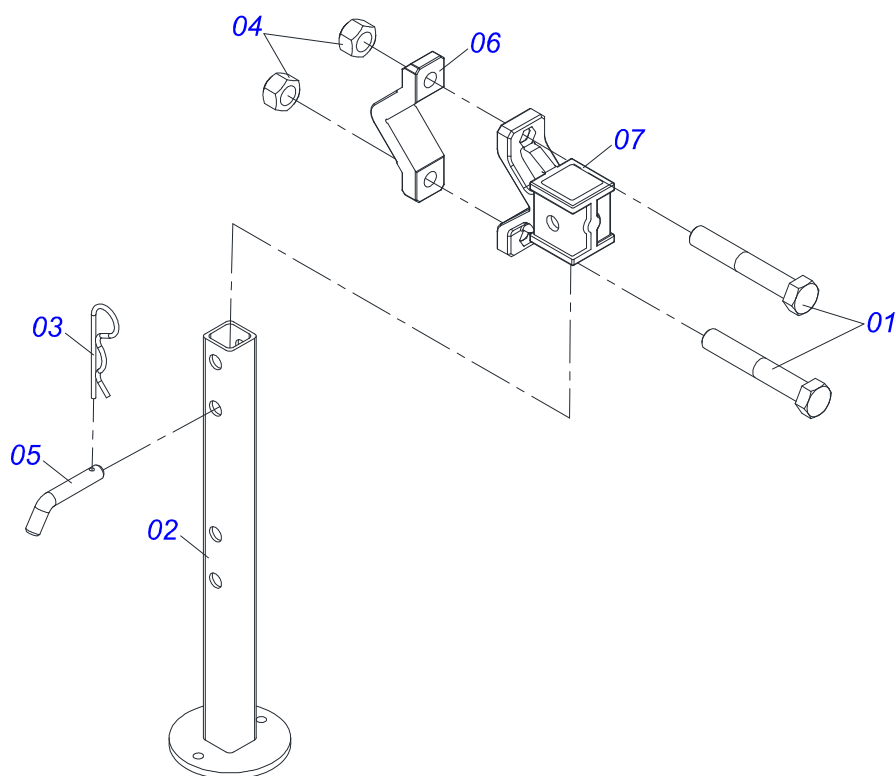


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

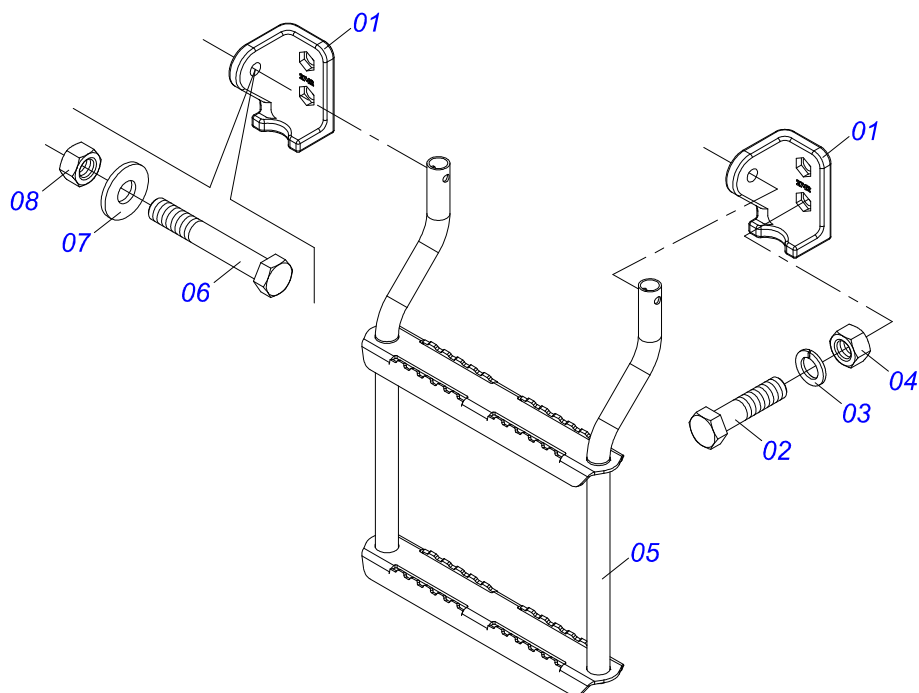


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8" SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	FLAT WASHER	02	
08	0503013357	3/8" SELF-ADJUSTING NUT	02	

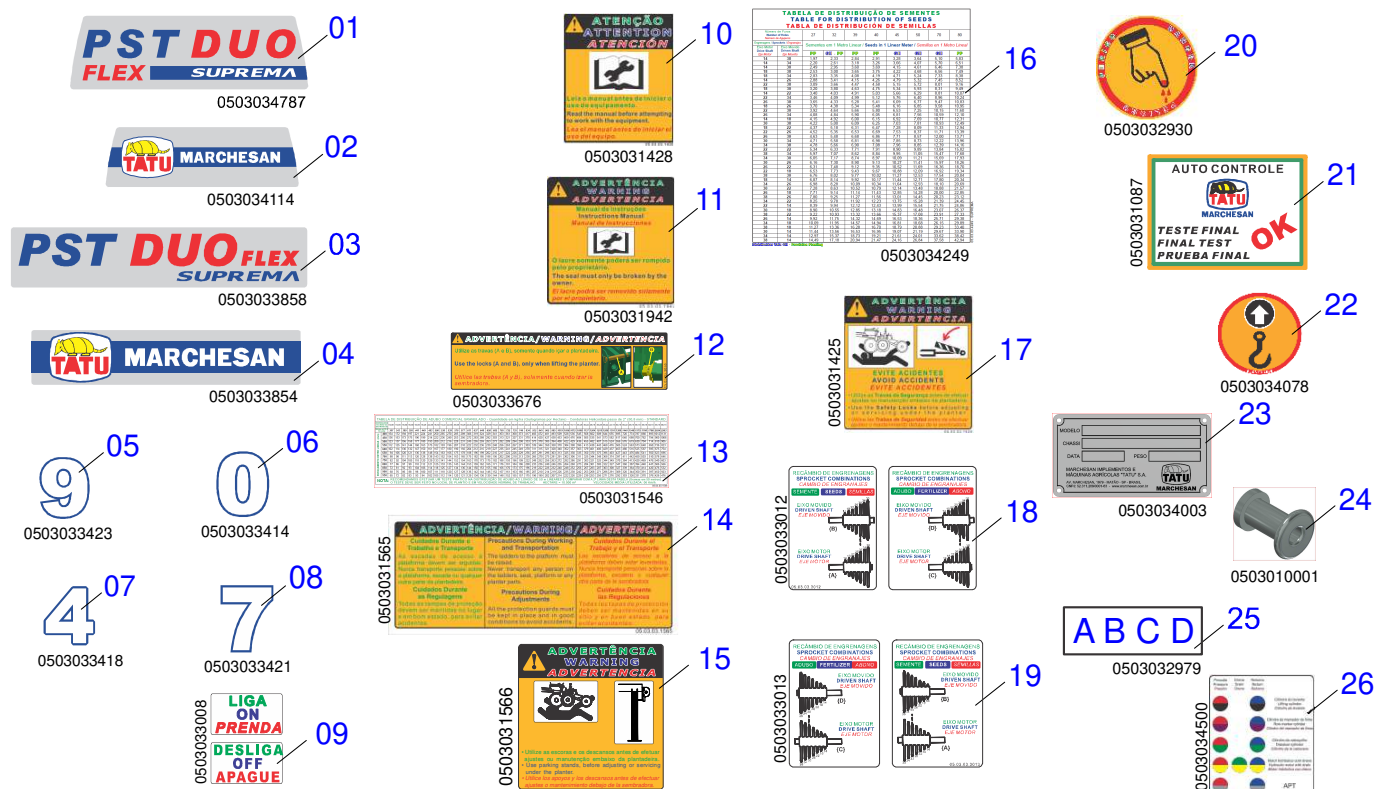


Item	Code	Description	See page	QT
01	0503034787	ADHESIVE LABEL		01
02	0503034114	ADHESIVE LABEL LOGO TATU BOX 190 X 530		01
03	0503033858	ADHESIVE LABEL		01
04	0503033854	ADHESIVE LABEL		01
05	0503033423	LABEL ADHESIVE NUMBER 9		02
06	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING		02
07	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
08	0503033421	ADHESIVE LABEL 7 NUMBER FOR PLANTING		02
09	0503033008	ADHESIVE LABEL		02
10	0503031428	READ MANUAL DECAL		01
11	0503031942	ADHESIVE LABEL		01
12	0503033676	WARNING LABEL ADHESIVE SEAL LOCK AXIS		01
13	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
14	0503031565	ADHESIVE LABEL CARE		02
15	0503031566	ADHESIVE LABEL		02
16	0503034249	ADHESIVE LABEL TABLE PLANTS		02
17	0503031425	ADHESIVE LABEL ATTENTION		02
18	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
19	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
20	0503032930	ADHESIVE LABEL DANGER		06
21	0503031087	ADHESIVE LABEL		01
22	0503034078	LIFTING POINTS DECAL		03
23	0503034003	SERIAL NUMBER TAG 61 X 118		01
24	0503010001	3.2 X 5.5 RIVET		04
25	0503032979	ADHESIVE LABEL LETTERS A B C D		02
26	0503034500	ADHESIVE LABEL		01

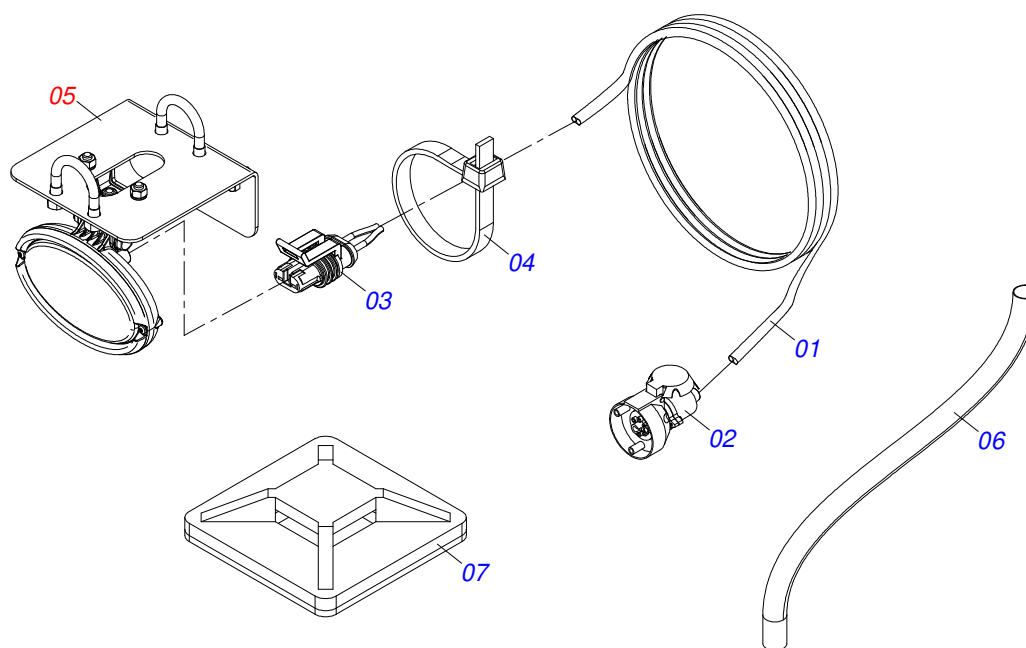

Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		15mt
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		02
04	0503012903	T-80M CRAMP NYLON		50
05	0521052792	MOUNTED REAR LIGHT	93	02
06	3505151602	TUBE		0,3mt
07	0503017702	FIXER		14

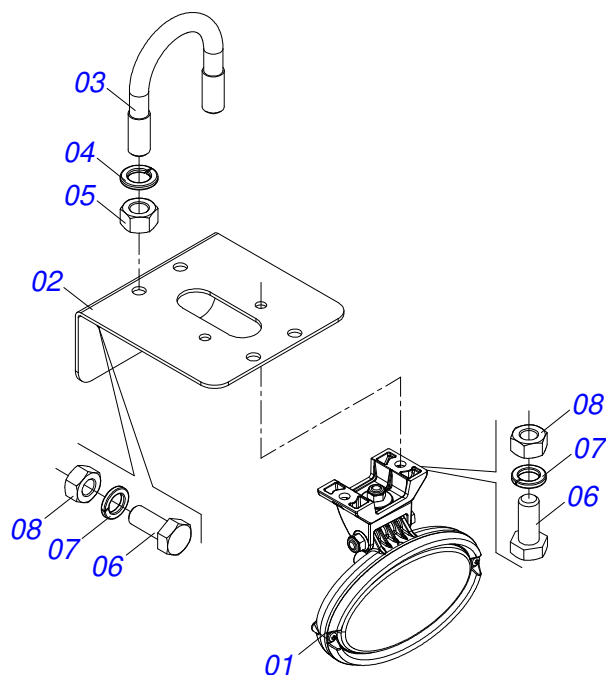


Item	Code	Description	See page	QT
01	0503018738	LIGHTHOUSE		01
02	0581016999	REAR LIGHT SUPPORT		01
03	0551019884	45 X 50 X 3/8 FASTENER		02
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
07	0503010179	LOCK WASHER		04
08	0503010337	5/16" NUT		04

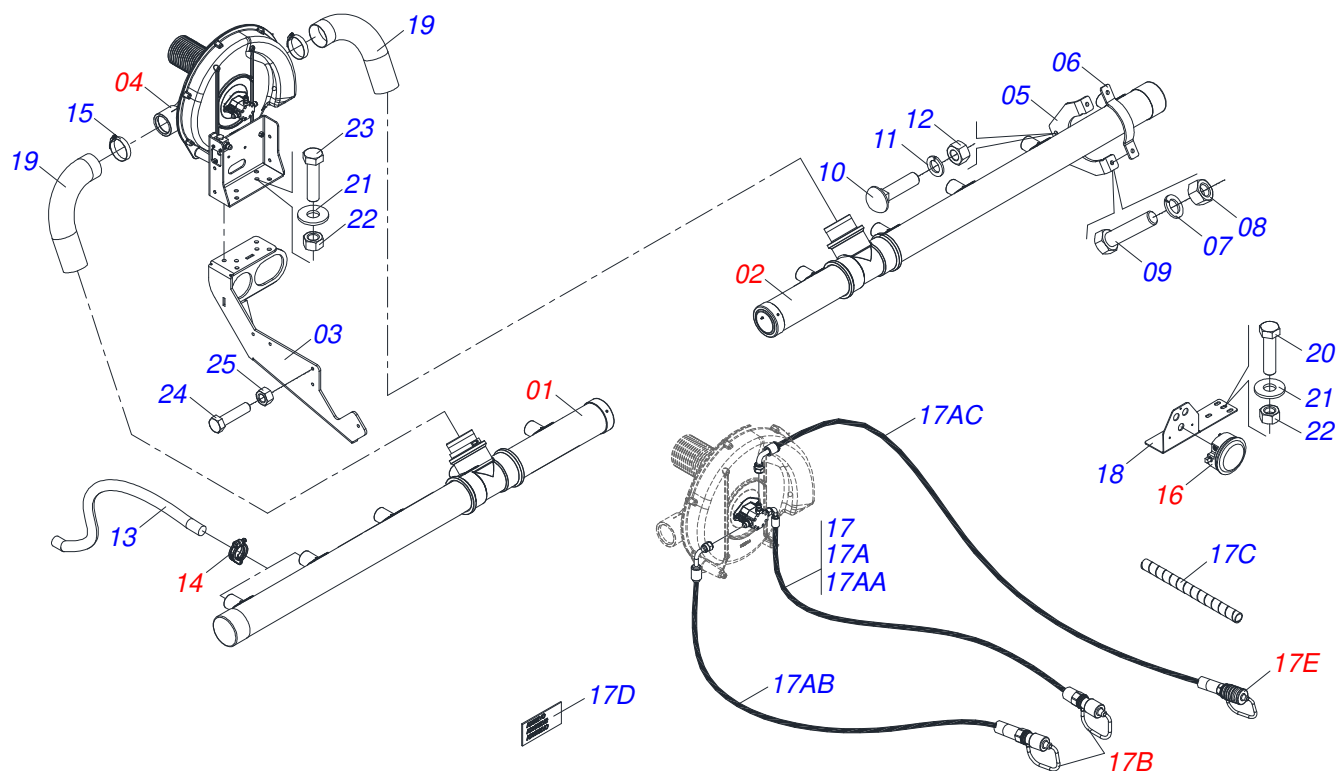


Item	Code	Description	See page	QT
01	0531054316	AIR CONDUCTOR 06 MOUTH 2330 RIGHT	95	01
02	0531054317	AIR CONDUCTOR 05 MOUTH 2130 LEFT	96	01
03	0521066426	TURBINE SUPPORT		01
04	0511059527	TURBINE P.P ASSEMBLY CSC	97	01
05	0571019755	FIXER LOWER REAR DRIVER AIR		04
06	0521018402	AIR CONDUCTOR CLAMP		04
07	0503010179	LOCK WASHER		08
08	0503010337	5/16" NUT		08
09	0503010371	5/16" X 1" BOLT		08
10	0501010942	3/8" X 1-1/4" BOLT		08
11	0503010025	3/8" SPRING WASHER		08
12	0503010026	3/8" NUT		08
13	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		11
14	0521052549	CLAMP	100	22
15	0503011372	102 TO 121 CLAMP		04
16	0503013584	VACUUM GAUGE		01
17	0511057906	HOSE ASSY		01
17A	0511057840	ASSY TURBINE HOSE REAR		01
17AA	0521052534	HOSE 1/2 X 7012 TC-TM YELLOW / RED		01
17AB	0521052535	HOSE 1/2 X 7012 TC-TM YELLOW / BLUE		01
17AC	0521052536	HOSE 3/8 X 7012 TC-TM YELLOW / GREEN		01
17B	0501053834	MALE QUICK COUPLER	10	02
17C	0581010092	SPRING PROTECTION PLASTIC HOSE 3/4		01
17D	0503033981	ADHESIVE LABEL		01
17E	0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	101	01
18	0571013731	VACUUM GAUGE SUPPORT		01
19	0561011377	HOSE 4 X 2200		02
20	0503011082	C1/2" X 1.3/4" SCREW		01
21	0503010019	1/2" SPRING WASHER		03
22	0503010060	1/2" NUT		03
23	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02




Item	Code	Description	See page	QT
24	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		04
25	0503012412	5/8 UNC SELF LOCKING NUT		04

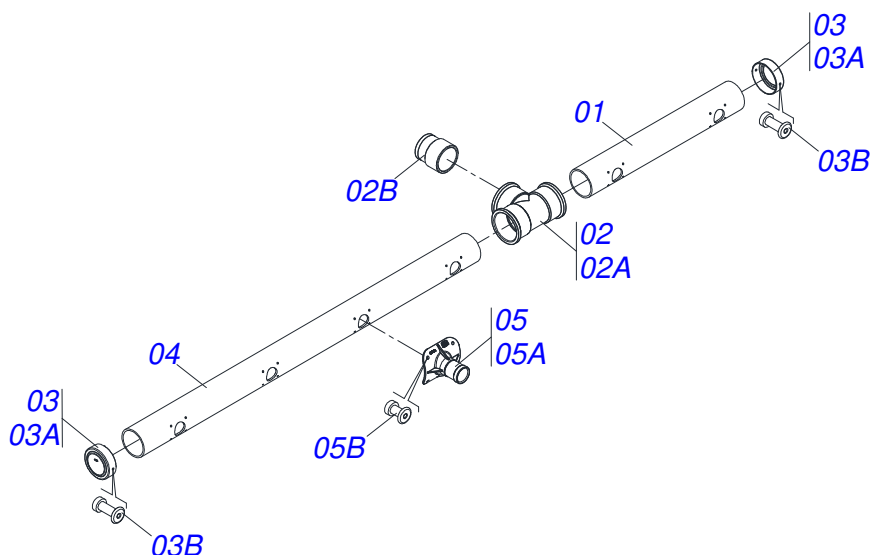


Item	Code	Description	See page	QT
01	0501212223	AIR CONDUCTOR BODY 2 MOUTH 4 HOLES		01
02	0511057036	AIR DISTRIBUTOR BOARD		01
02A	0503012567	T-JOIN FOR TUBE 110		01
02B	0581013890	SOCKET DISTRIBUTOR AR		01
03	0521056049	AIR DISTRIBUTOR CAP WITH RIVET		02
03A	0503034763	AIR DITRIBUTOR PUMP		01
03B	0503015341	POP RIVET		02
04	0591014985	AIR CONDUCTOR BODY 4 SPECIAL OUTLETS		01
05	0521056048	AIR DISTRIBUTOR NOZZLE 1.1 / 2 WITH RIVET		06
05A	0503034812	SOCKET DISTRIBUTOR AR		01
05B	0503012856	POP RIVET		04

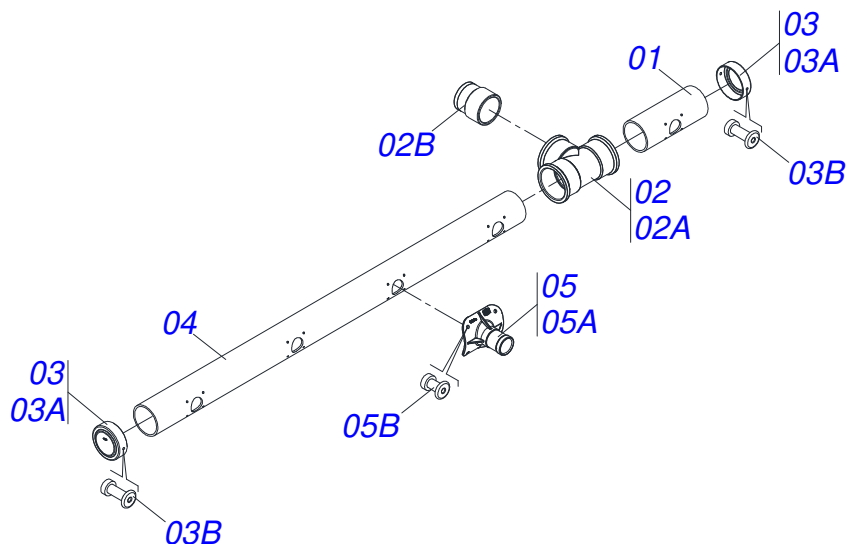


Item	Code	Description	See page	QT
01	0591014348	CONDUCTIVE BODY AIR 1 MOUTH		01
02	0511057036	AIR DISTRIBUTOR BOARD		01
02A	0503012567	T-JOIN FOR TUBE 110		01
02B	0581013890	SOCKET DISTRIBUTOR AR		01
03	0521056049	AIR DISTRIBUTOR CAP WITH RIVET		02
03A	0503034763	AIR DITRIBUTOR PUMP		01
03B	0503015341	POP RIVET		02
04	0591014985	AIR CONDUCTOR BODY 4 SPECIAL OUTLETS		01
05	0521056048	AIR DISTRIBUTOR NOZZLE 1.1 / 2 WITH RIVET		05
05A	0503034812	SOCKET DISTRIBUTOR AR		01
05B	0503012856	POP RIVET		04

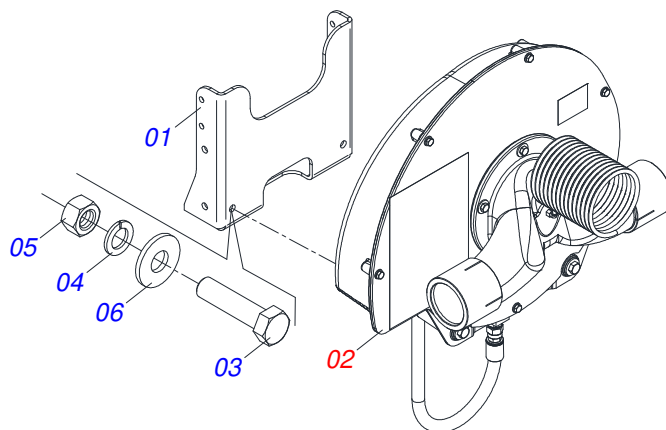


Item	Code	Description	See page	QT
01	0581012211	TURBINE SUPPORT BODY		01
02	0511059887	TURBINE PRECISION PLANTING	98	01
03	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
04	0503010143	1/4" SPRING WASHER		02
05	0503010144	1/4" NUT		02
06	0503010305	FLAT WASHER		02

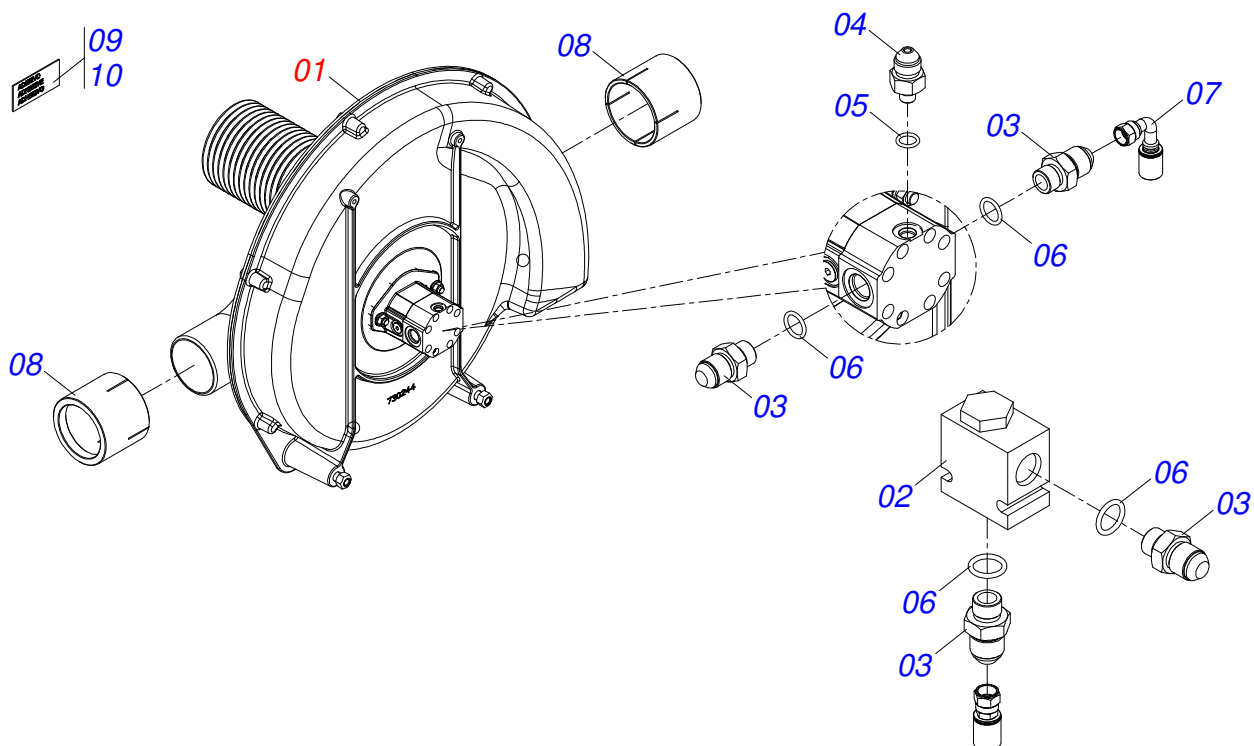


Item	Code	Description	See page	QT
01	0521050154	TURBINE P.P WITH HOLE	99	01
02	0503015420	VALVE ANTI-CAVITACAO CV10208TN5		01
03	0501011460	7/8 NF REDUCTION NIPPLE		04
04	0503034385	NIPPLE 7/16 UNF X UNF JIC		01
05	0503010392	2-046 N 3006 9B O'RING		01
06	0503010190	2-114 N 3006-9B O'RING		04
07	0501080218	1/2 X 750 HOSE		01
08	0581012096	ROUND SLEEVE		02
09	0503031087	ADHESIVE LABEL		01
10	0503031426	ADHESIVE LABEL ATTENTION TURBINE		01

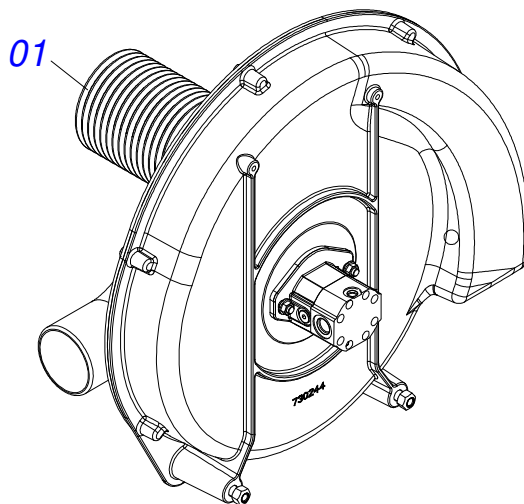


Item	Code	Description	See page	QT
01	0503062627	HYDRAULIC TURBINE ASSY		01

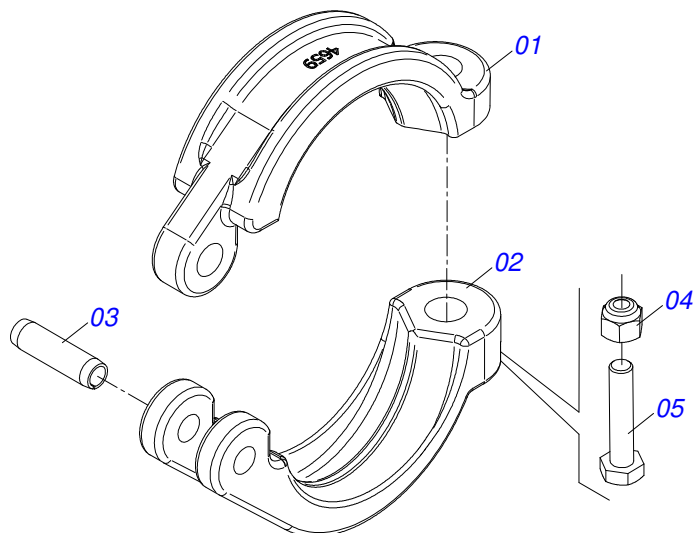


Item	Code	Description	See page	QT
01	0503034660	CLAMP LOWER		01
02	0503034659	CLAMP UPPER		01
03	0503010686	0.2" X 0.7" SPRING PIN		01
04	0503011776	M6 SELF ADJUSTINGNUT		01
05	0503011813	M6 X 1.2" BOLT		01

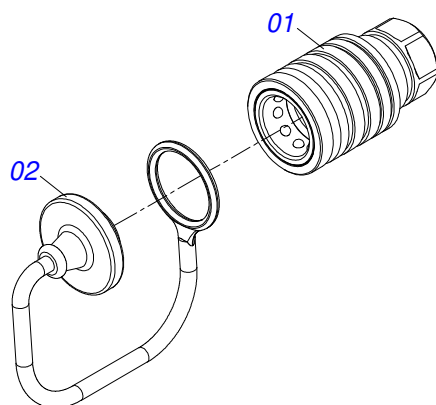


Item	Code	Description	See page	QT
01	0503018799	QUICK COUPLING		01
02	0503011883	QUICK CONNECTION COVER		01

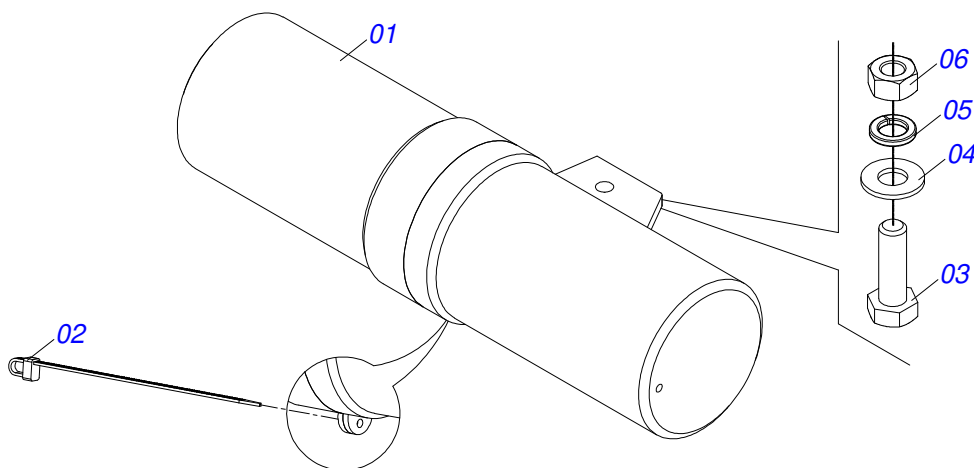


Item	Code	Description	See page	QT
01	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
02	0503010267	NYLON CLAMP		01
03	0503010363	5/16" X 1" BOLT		01
04	0501010694	FLAT WASHER		01
05	0503010179	LOCK WASHER		01
06	0503010337	5/16" NUT		01

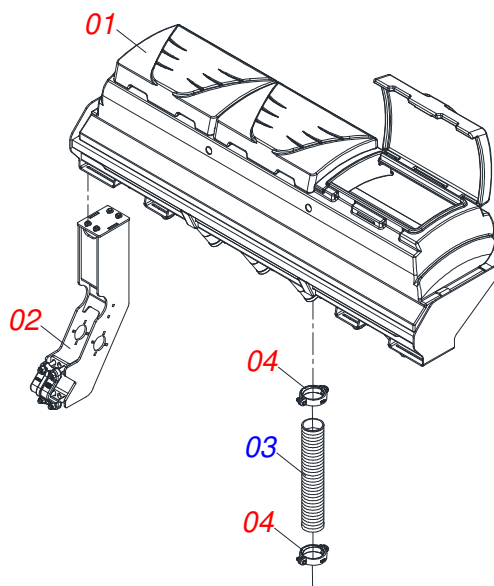


Item	Code	Description	See page	QT
01	0511058996	ASSEMBLY CSU	104	01
02	0531054328	TOWER WITH TCE SCREW FIXING	106	04
03	0571011730	SEED CONDUCTOR 3X1500		11
04	0521050525	FIXER FERTILIZER CONDUCTOR	107	22

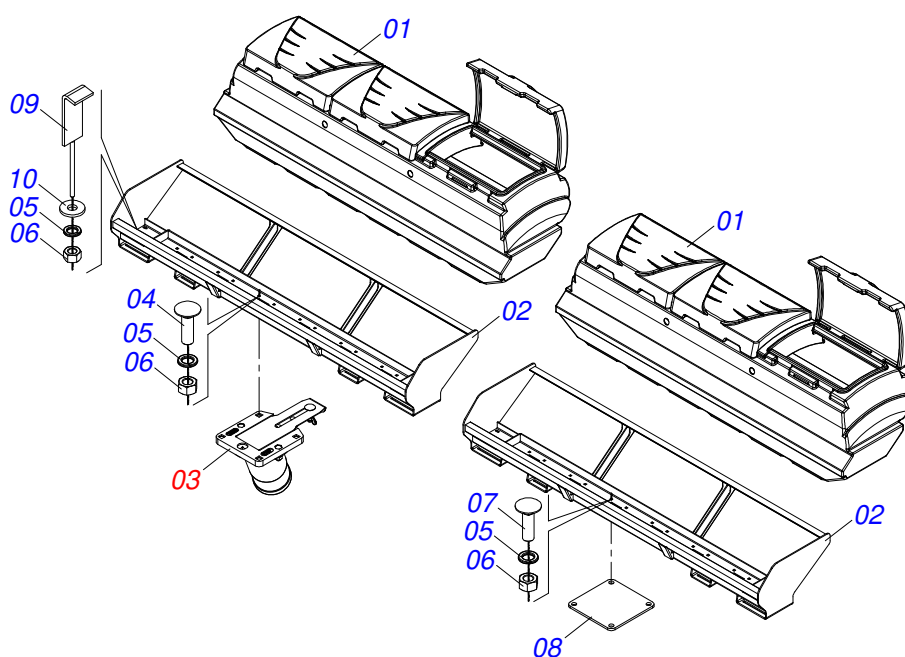


Item	Code	Description	See page	QT
01	0503061899	REAR BEAN FERTILIZER ASSY		02
02	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS		02
03	0511057690	3" ARTICULATED SEED CONDUCTOR	105	11
04	0501010942	3/8" X 1-1/4" BOLT		44
05	0503010025	3/8" SPRING WASHER		52
06	0503010026	3/8" NUT		52
07	0501011643	3/8 X 1"BOLT		04
08	0571015773	SUPPORT SEED		01
09	0521063401	SEED BOX ONLY FIXING LOCK		04
10	0501010984	FLAT WASHER		04

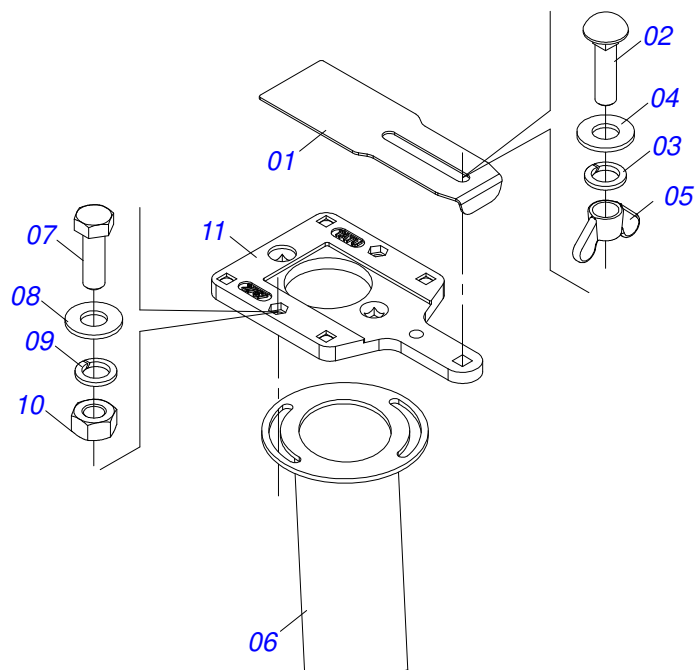


Item	Code	Description	See page	QT
01	0571015779	COVER SUPPORT CONDUCTOR ARTICULATION	01	
02	0501010942	3/8" X 1-1/4" BOLT	01	
03	0503010025	3/8" SPRING WASHER	01	
04	0501010984	FLAT WASHER	01	
05	0503010209	3/8" UNC BUTTERFLY NUT	01	
06	0521066332	CONDUCTOR WITH FLANGE	01	
07	0503010371	5/16" X 1" BOLT	02	
08	0501010694	FLAT WASHER	02	
09	0503010179	LOCK WASHER	02	
10	0503010337	5/16" NUT	02	
11	0502012767	FIXER CONDUCTOR SEED CSU SUPPORT	01	

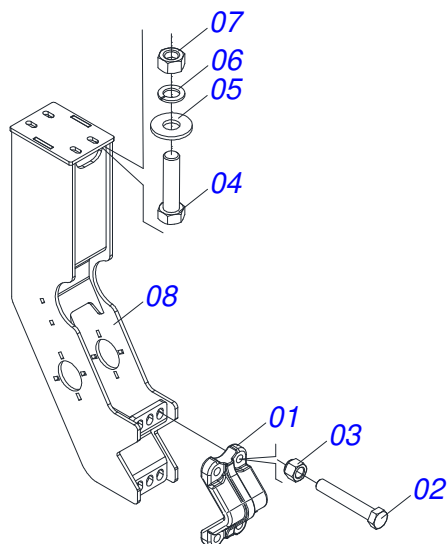


Item	Code	Description	See page	QT
01	0502012789	FIXER SUPPORT FERTILIZER ROW		01
02	0503017857	BOLT 5/8 UNF 4		04
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
05	0501010984	FLAT WASHER		08
06	0503010025	3/8" SPRING WASHER		04
07	0503010026	3/8" NUT		04
08	0531063630	SUPPORT TOWER CSU SUPPORT		01

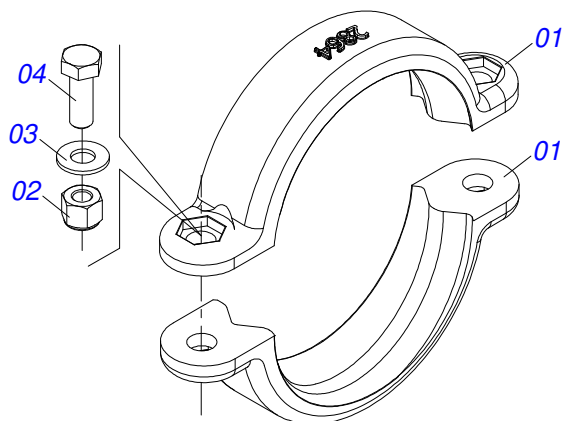


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER		02
04	0503010365	NUT		02

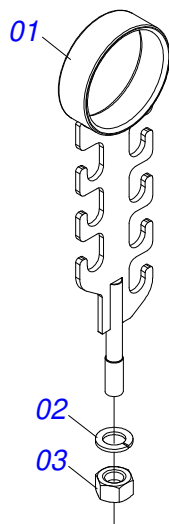


Item	Code	Description	See page	QT
01	0521066302	HOSE HOLDER		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

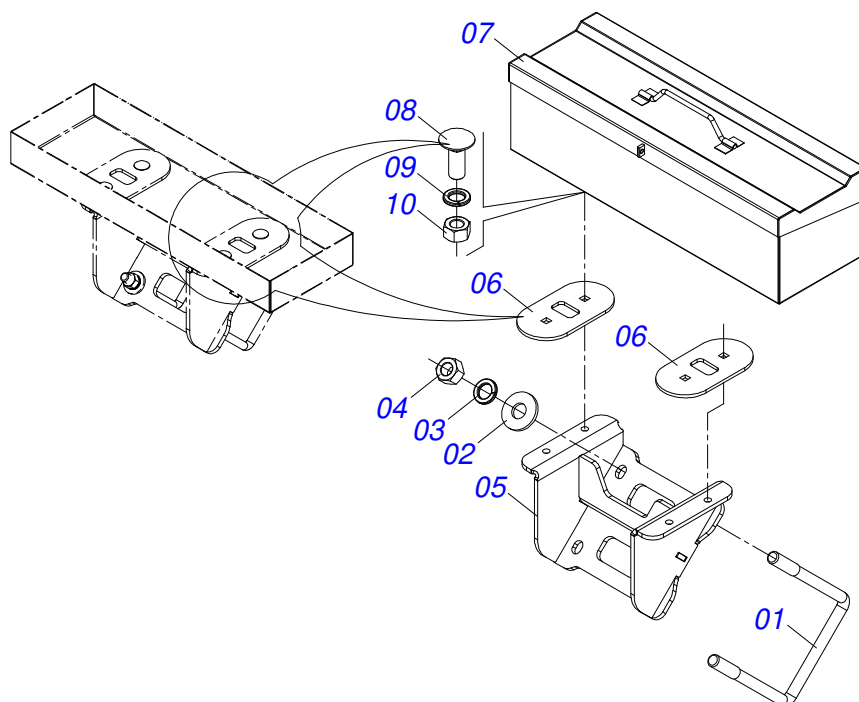

Item	Code	Description	See page	QT
01	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
02	0511017302	FLAT WASHER		04
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2" NUT		04
05	0521069295	SUPPORT TOOL CHEST		01
06	0581017000	PLATE INTERMEDIARY		02
07	0503034772	BOX		01
08	0501011643	3/8 X 1" BOLT		04
09	0503010025	3/8" SPRING WASHER		04
10	0503010026	3/8" NUT		04

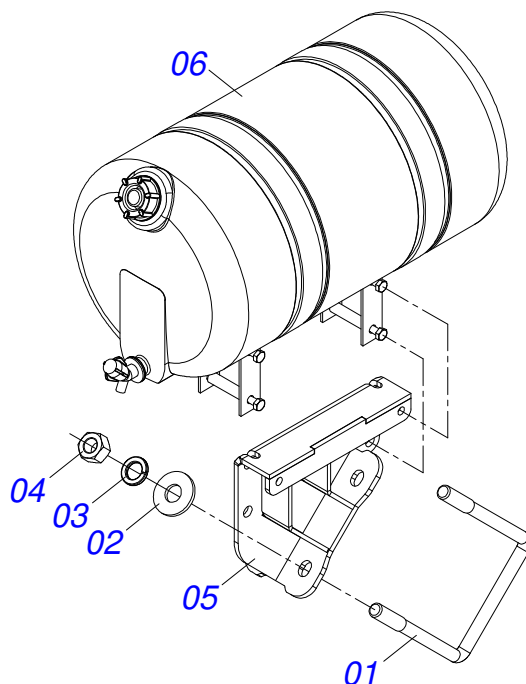

Item	Code	Description	See page	QT
01	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
02	0511017302	FLAT WASHER		04
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2" NUT		04
05	0521069405	WATER TANK SUPPORT		01
06	0503014820	BLACK WATER RESERVOIR		01

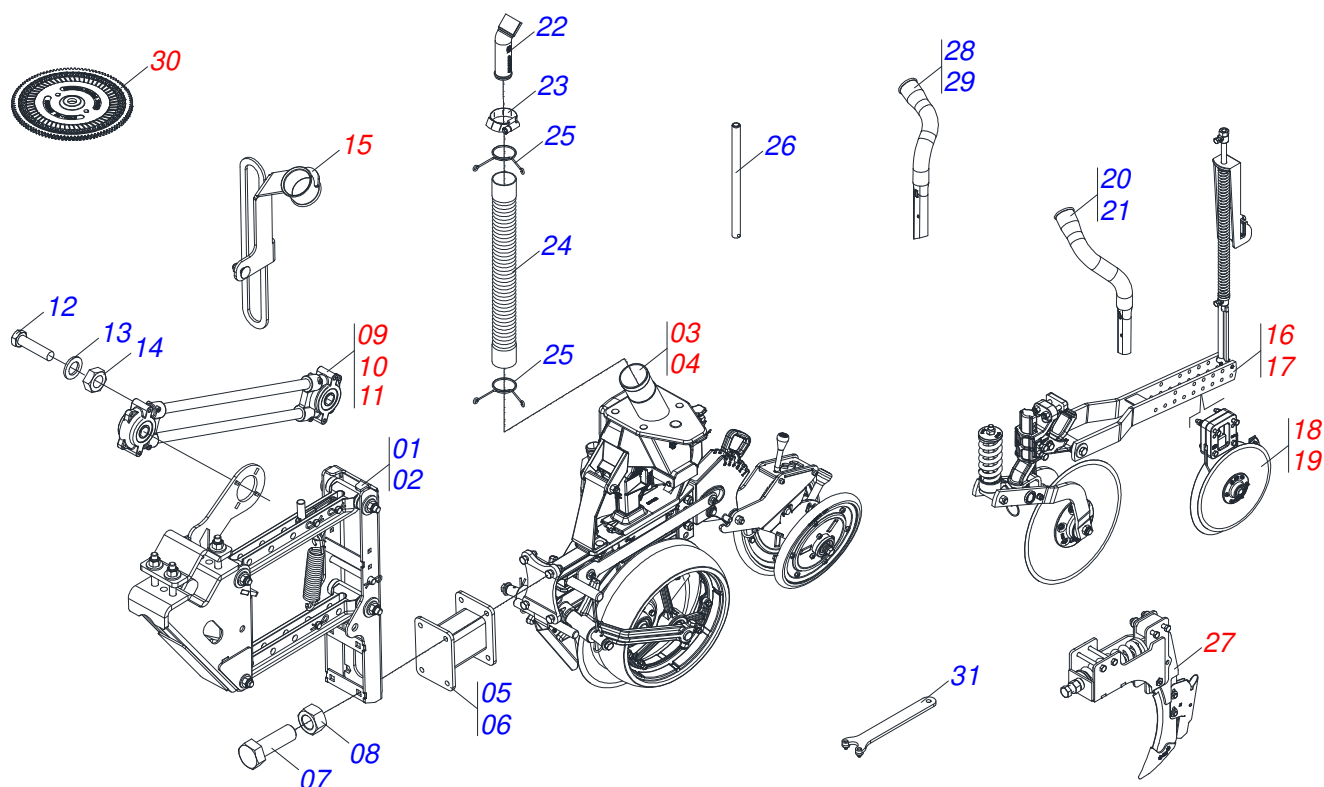


Item	Code	Description	See page	QT
01	0531054329	FRONT SEED LINE WITH TCE SHAFT SUPPORT	112	01
02	0521058524	SEED ROW FRONT	113	01
03	0531054330	RIGHT SPICER REAR TO. PLANTING CSU TCE	114	01
04	0531054331	REAR SPICRR LEFT P. PLANTING CSU TCE	115	01
05	0531061136	EXTENSION		01
06	0531060405	EXTENSION		01
07	0503010311	1/2" X 1-1/4" BOLT		04
08	0503012136	NUT 1/2 NF		04
09	0503063399	SHORT ENCAPSULATED CHAIN		01
10	0503063400	LONG ENCAPSULATED CHAIN		01
11	0503063398	SUPREME LONG SUPREME ENCAPSULATED CHAIN		01
12	0503011194	BOLT 1/4 UNC X 2.1/2 CS G.2 ZN		02
13	0511017303	FLAT WASHER		02
14	0503012880	1/4" UNC SELF ADJUSTING NUT		02
15	0531052192	PEANUT CHAIN GUIDE SET	136	01
16	0521054811	FERTILIZER SHORT LINE	137	01
17	0521054812	LONG FERTILIZER LINE	138	01
18	0521054768	DDD RIGHT FERTILIZER WITH SUPPORT	144	01
19	0521054769	LEFT FERTILIZER WITH SUPPORT	145	01
20	0503030391	RIGHT FERTILIZER NOZZLE		01
21	0503030392	LEFT FERTILIZER NOZZLE		01
22	0503031050	CURVED CONDUCTOR		01
23	0503010246	CLAMP		01
24	0503031145	2" X 2" X 20" HOSE		01
25	0503031076	2" HOSE CLAMP		01
26	0531013600	PRESS ADJUSTMENT LEVER		01
27	0521053947	HDA ELEVATION 0869	151	01
28	0581010082	FERTILIZER SOCKET RIGHT		01
29	0581010083	FERTILIZER SOCKET LEFT		01
30	0503062763	CONVERSION ASSY FOR DISTRIBUTOR SOY / BEANS		01



PST DUO FLEX SUPREMA P.P - FRAME 4790 - CSU - DOUBLE
SEED/FERTILIZER ROW ASSY

Page 111
0909090119


Item	Code	Description	See page	QT
31	0521068982	KEY CASH DISC CUTTING		01

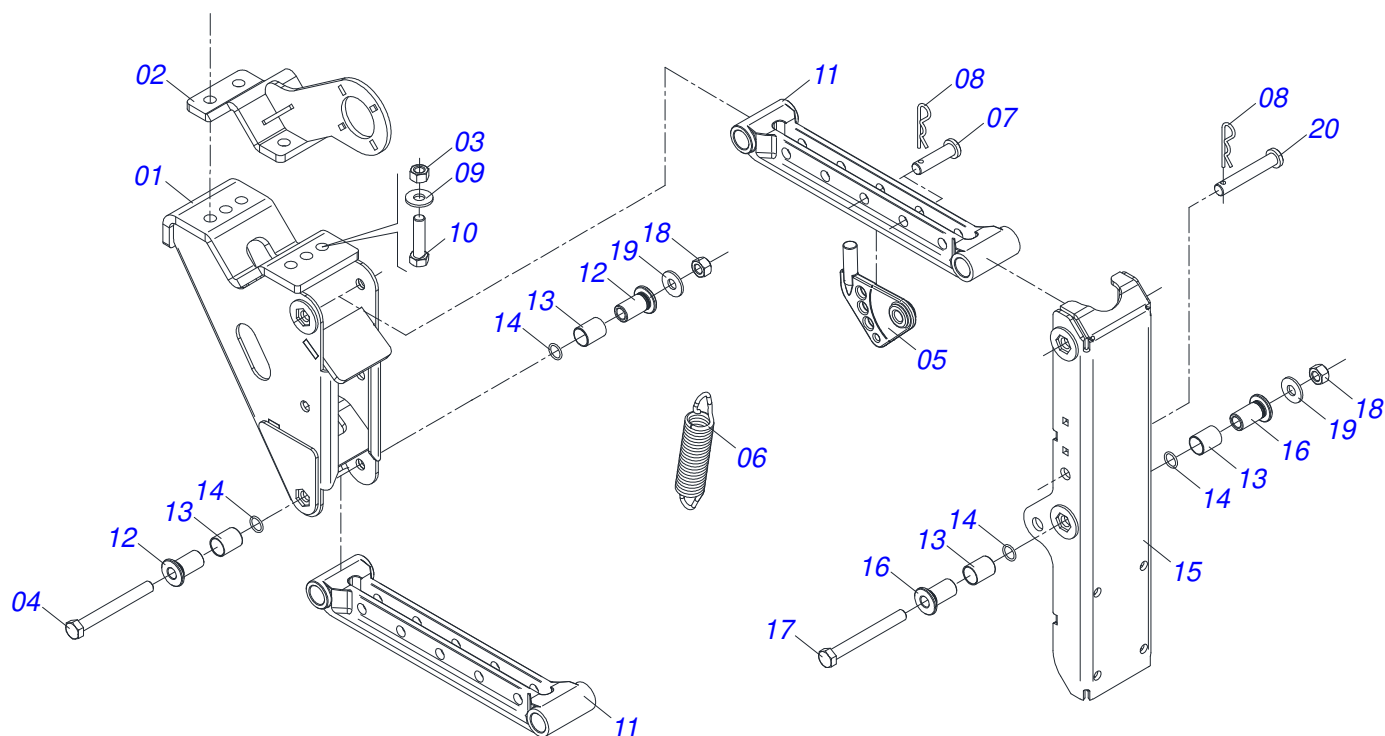


Item	Code	Description	See page	QT
01	0521065941	FRAME SEED ROW FRONT		01
02	0531063631	HEX AXLE SUPPORT		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02
05	0502012812	SEED ROW ADJUSTMENT LEVER ASSY		01
06	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
07	0571018883	PIN FIXER SPRING		03
08	0503030168	HAIR PIN		04
09	0501012140	FLAT WASHER		04
10	0503017857	BOLT 5/8 UNF 4		04
11	0591011156	PIVOT ARM SEED ROW		02
12	0591011157	SPACER LOWER SLEEVE		04
13	0503019273	SLEEVE		08
14	0503010045	O-RING		08
15	0531061528	REAR LINE SUPPORT		01
16	0591012829	SPACER LOWER SLEEVE		04
17	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		02
18	0503013389	5/8" SELF LOCKING NUT		04
19	0591011409	FLAT WASHER 16,5 X 35 X 3,00		04
20	0591012828	LOCK PIN ROW ARTICULAT		01

SEED ROW FRONT


0521058524

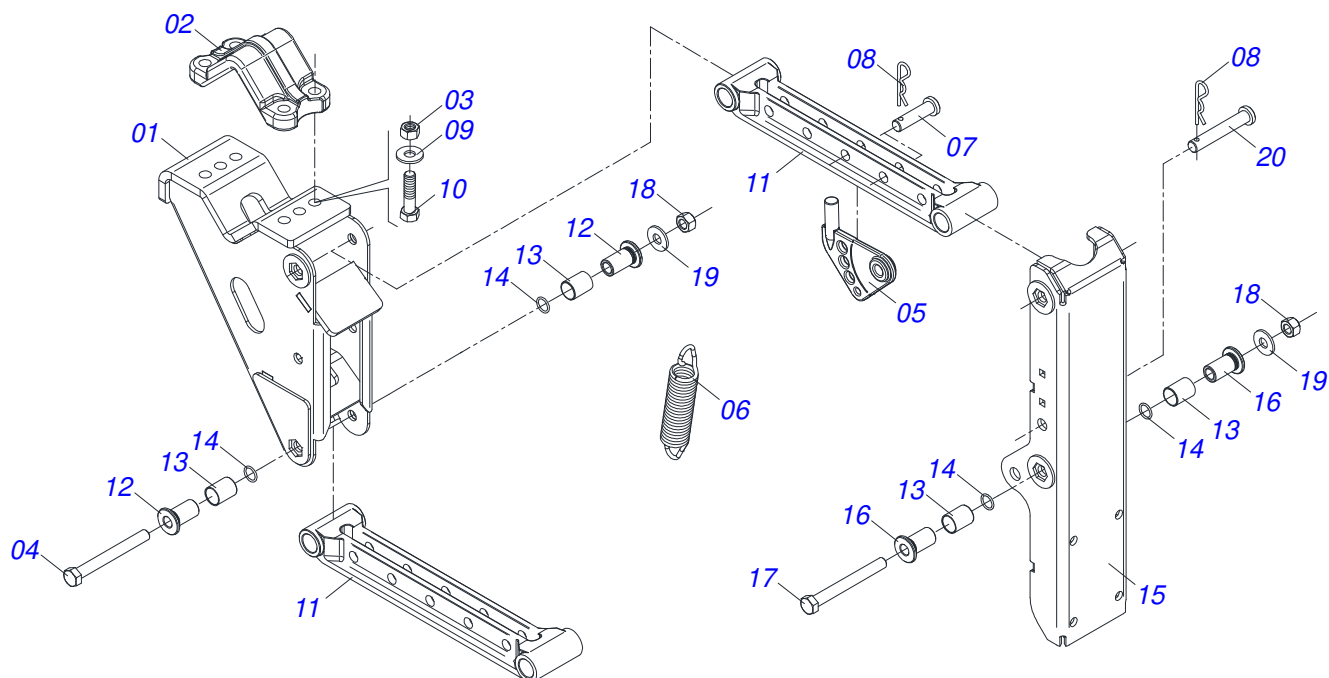


Item	Code	Description	See page	QT
01	0521065941	FRAME SEED ROW FRONT	01	
02	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
03	0503010811	5/8" UNF SELF ADJUSTING NUT	04	
04	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN	02	
05	0502012812	SEED ROW ADJUSTMENT LEVER ASSY	01	
06	0503034198	SPRING TRACTION 40 X 198 X 5,5	01	
07	0571018883	PIN FIXER SPRING	03	
08	0503030168	HAIR PIN	04	
09	0501012140	FLAT WASHER	04	
10	0503017857	BOLT 5/8 UNF 4	04	
11	0591011156	PIVOT ARM SEED ROW	02	
12	0591011157	SPACER LOWER SLEEVE	04	
13	0503019273	SLEEVE	08	
14	0503010045	O'RING	08	
15	0531061528	REAR LINE SUPPORT	01	
16	0591012829	SPACER LOWER SLEEVE	04	
17	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN	02	
18	0503013389	5/8" SELF LOCKING NUT	04	
19	0591011409	FLAT WASHER 16,5 X 35 X 3,00	04	
20	0591012828	LOCK PIN ROW ARTICULAT	01	

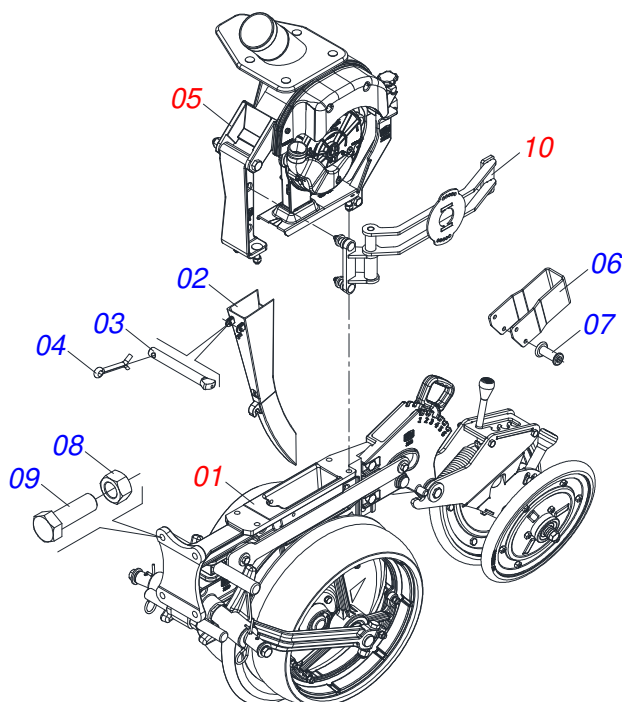


Item	Code	Description	See page	QT
01	0521058084	REAR WITH RIGHT DDD SPICRR	116	01
02	0503062403	TUBE SEED P.P		01
03	0571017895	PIN FIXER CONDUCTOR P.P		01
04	0503010140	1/8" X 3/4" COTTERPIN		01
05	0521056956	PRECISION PLANTING CABLE/TRANSMISSION ASSY	CSU 131	01
06	0591017565	SEED CONDUCTOR GUIDE		01
07	0503015341	POP RIVET		02
08	0503012136	NUT 1/2 NF		04
09	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
10	0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION	134	01

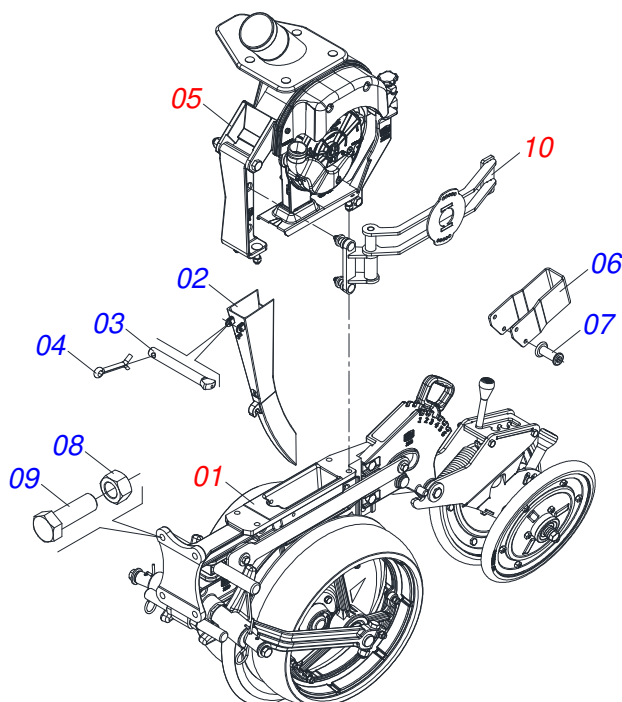


Item	Code	Description	See page	QT
01	0521058085	REAR WITH DDD LEFT SPICRR		01
02	0503062403	TUBE SEED P.P		01
03	0571017895	PIN FIXER CONDUCTOR P.P		01
04	0503010140	1/8" X 3/4" COTTERPIN		01
05	0521056956	PRECISION PLANTING CABLE/TRANSMISSION ASSY	CSU 131	01
06	0591017565	SEED CONDUCTOR GUIDE		01
07	0503015341	POP RIVET		02
08	0503012136	NUT 1/2 NF		04
09	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
10	0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION	134	01

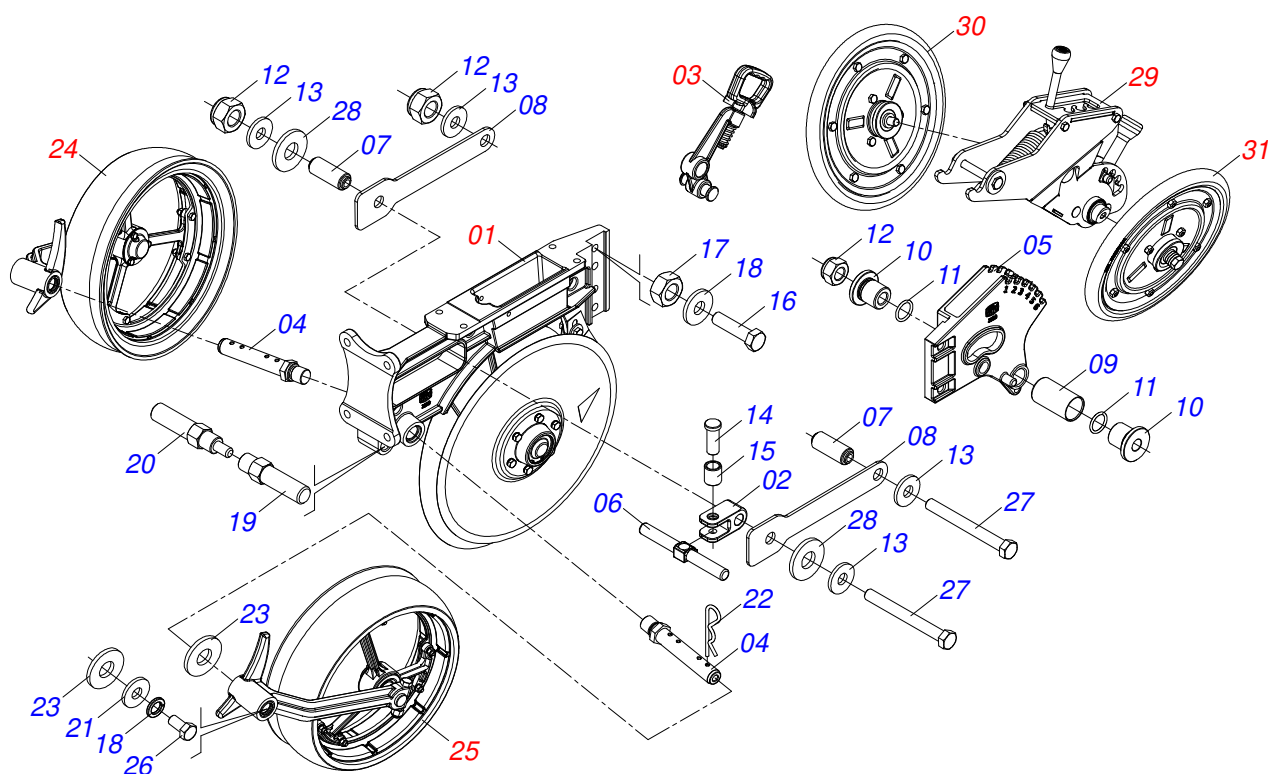


Item	Code	Description	See page	QT
01	0521056635	RIGHT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	117	01
02	0502012923	BEATER		01
03	0521056632	DEPTH CONTROL	122	01
04	0591011323	AXLE ARTICULATION WHEEL DEPTH		02
05	0502012920	SUPPORT ADJUSTING		01
06	0502012611	DEPTH CONTROL AXLE		01
07	0591011309	ADJUSTMENT BUSHING		02
08	0591011310	ADJUSTMENT BAR		02
09	0503019275	SLEEVE LUBRICATION SYSTEM		01
10	0581019473	ARTICULATED GLOVE		02
11	0503010045	O'RING		02
12	0503013357	3/8" SELF-ADJUSTING NUT		02
13	0501010984	FLAT WASHER		04
14	0591011326	LOCK PIN		01
15	0571015326	ARTICULATION SLEEVE HANDLE		01
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2" NUT		02
18	0503010019	1/2" SPRING WASHER		04
19	0591011324	SMALLER AXLE		01
20	0591011325	LARGER AXLE		01
21	0511017302	FLAT WASHER		02
22	0503030012	HAIR PIN		02
23	0501011445	FLAT WASHER		04
24	0521056633	MOUNTED RIGHT ARM	123	01
25	0521056631	MOUNTED LEFT ARM	126	01
26	0503012556	1/2" X 1" BOLT		02
27	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		02
28	0591011306	ADJUSTMENT LOCK		02
29	0521055093	BODY COMPACTOR	127	01
30	0521054990	LEFT COMPACTOR WHEEL	128	01
31	0521055017	RIGHT COMPACTOR WHEEL	130	01

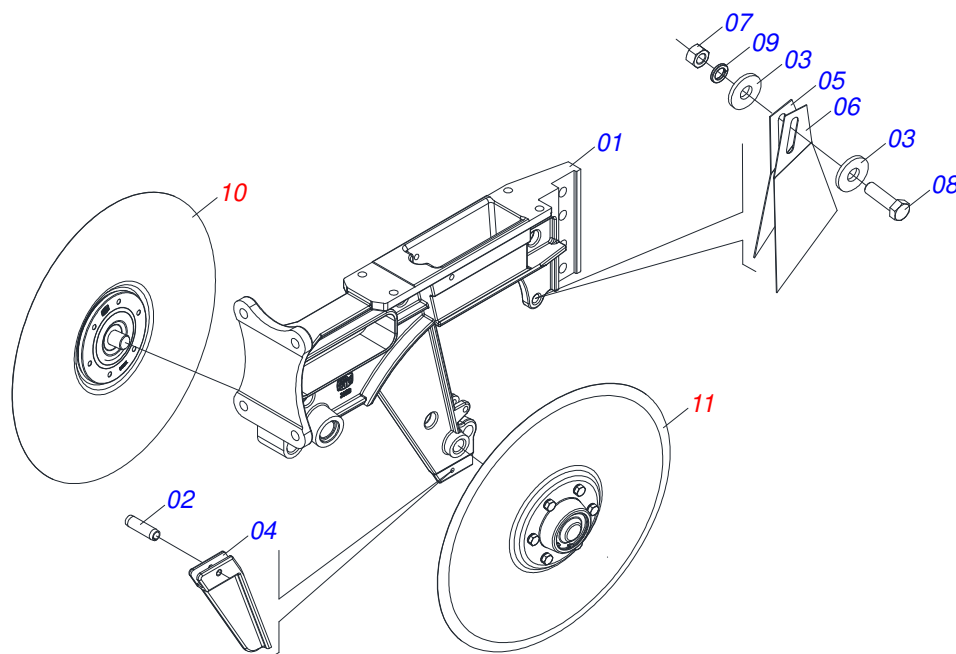


Item	Code	Description	See page	QT
01	0502012929	BODY RIGHT		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0501010984	FLAT WASHER		02
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8" SPRING WASHER		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 118 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 120 FERTILIZER / SEED		01

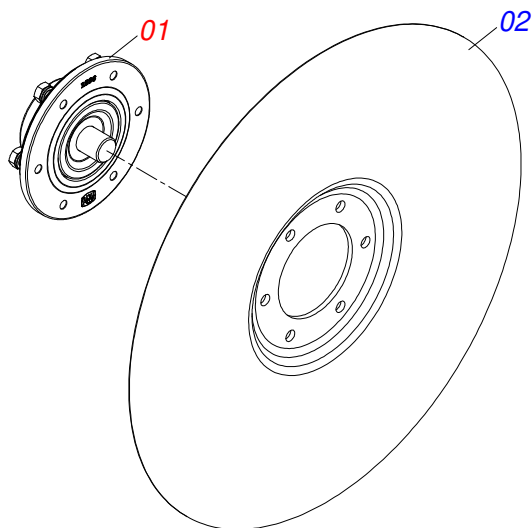


Item	Code	Description	See page	QT
01	0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	119	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

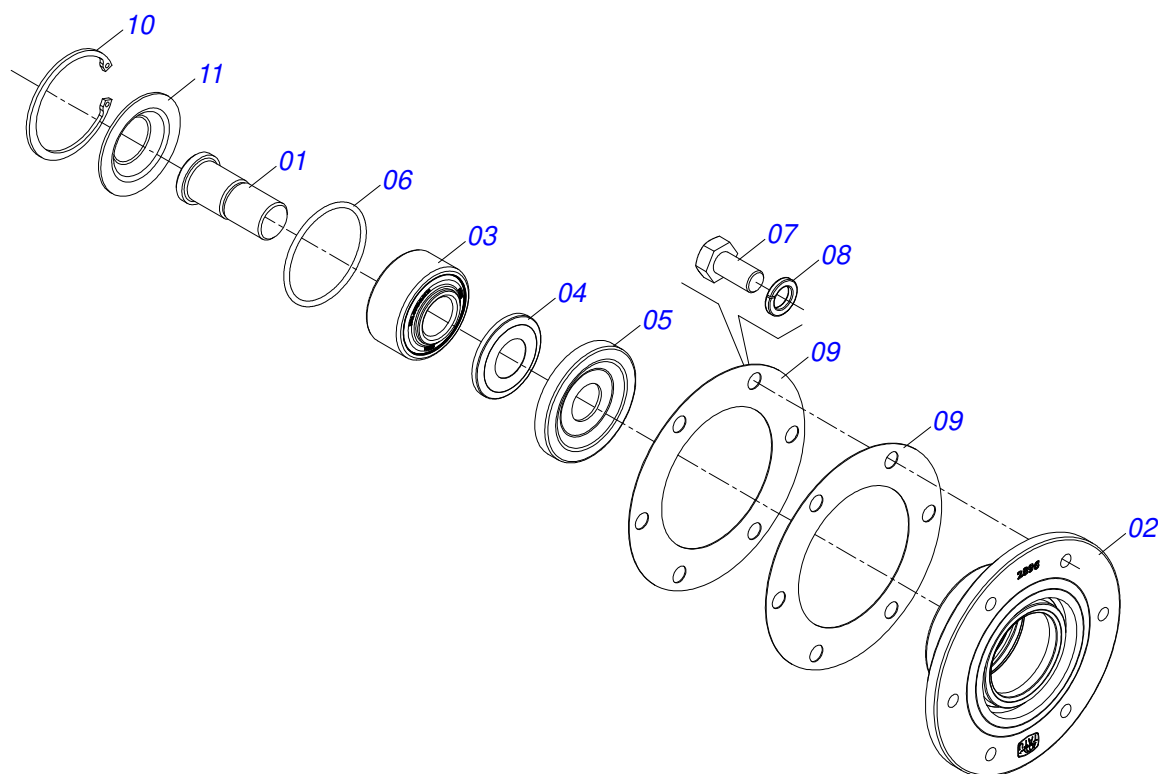


Item	Code	Description	See page	QT
01	0571011150	RIGHT DOUB DISC - HUB		01
02	0502012896	LOW CUBE FERTILIZER / SEED BOX		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

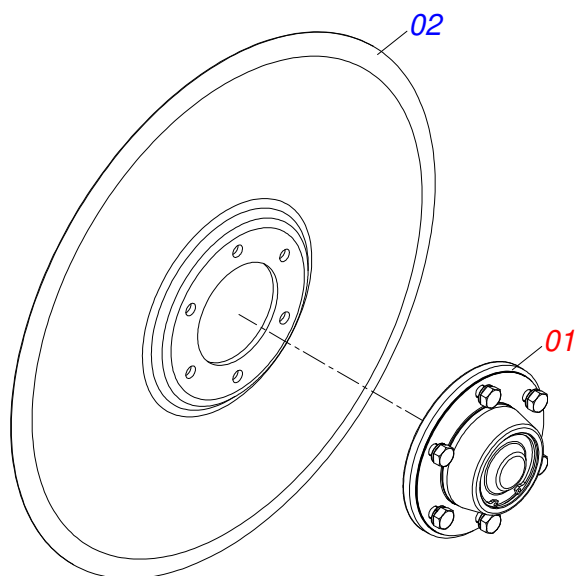


Item	Code	Description	See page	QT
01	0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	121	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

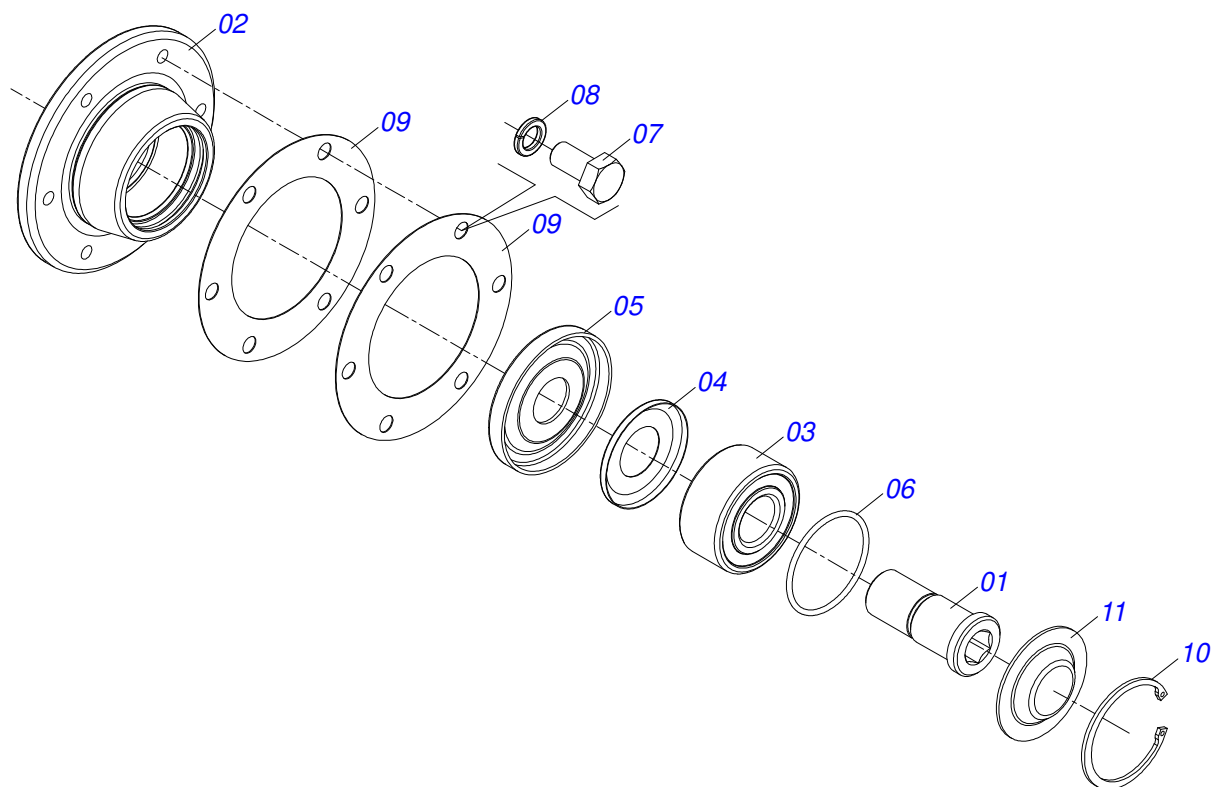


Item	Code	Description	See page	QT
01	0571011151	LEFT DOUBLE DISC HUB		01
02	0502012896	LOW CUBE FERTILIZER / SEED BOX		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

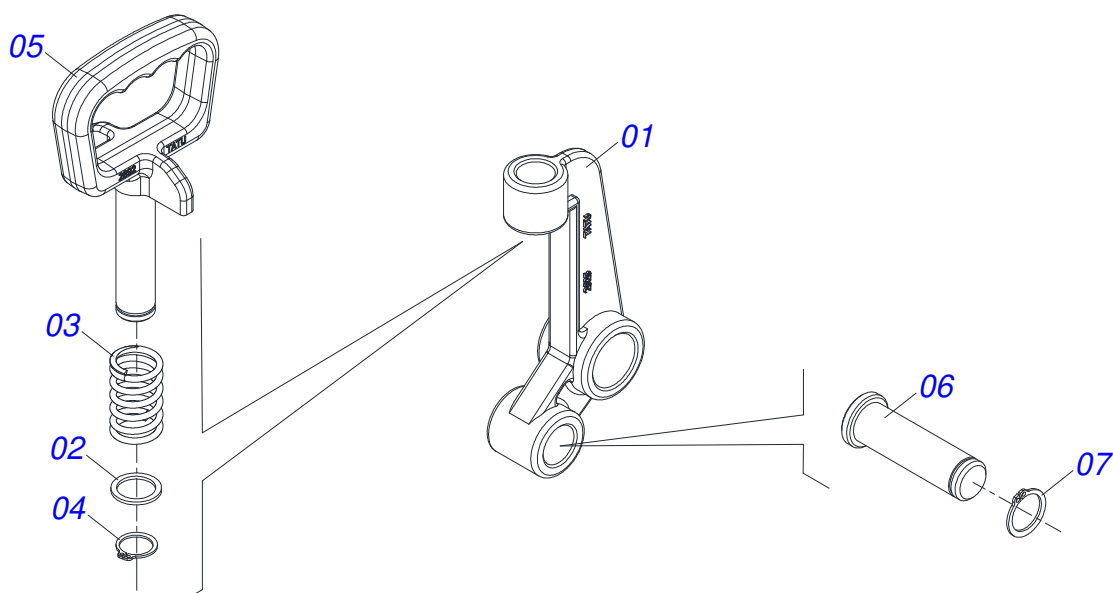


Item	Code	Description	See page	QT
01	0502012925	ADJUSTMENT BODY		01
02	0511015976	FLAT WASHER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0503010581	RING		01
05	0502012892	DEPTH CONTROL HANDLE		01
06	0581019526	ARTICULATED AXLE LEVER DEPTH		01
07	0503010302	501019 SEAL RING		01

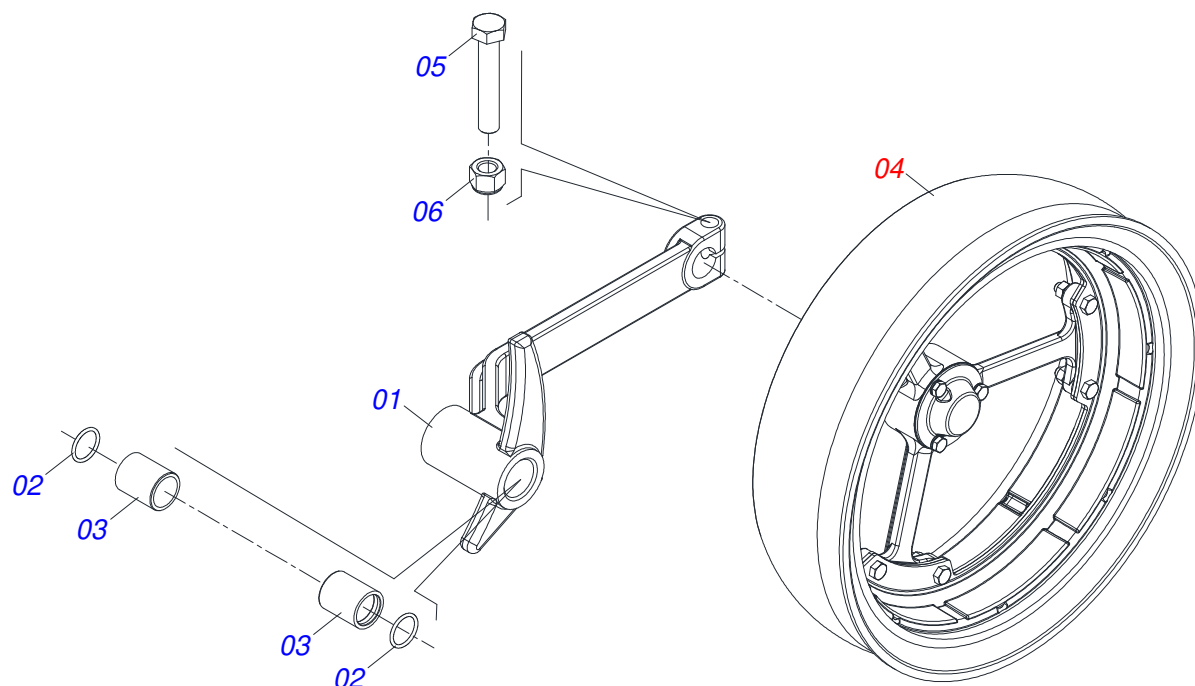


Item	Code	Description	See page	QT
01	0502012926	RIGHT ARM		01
02	0503011109	2-119 N 3006-9B O'RING		02
03	0581019514	LUBRICANT GLOVE		02
04	0521055059	WHEEL RAYED ASSY SPA WITHOUT 124 LUBRICATION		01
05	0503010741	1/2" X 2-3/4" BOLT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01

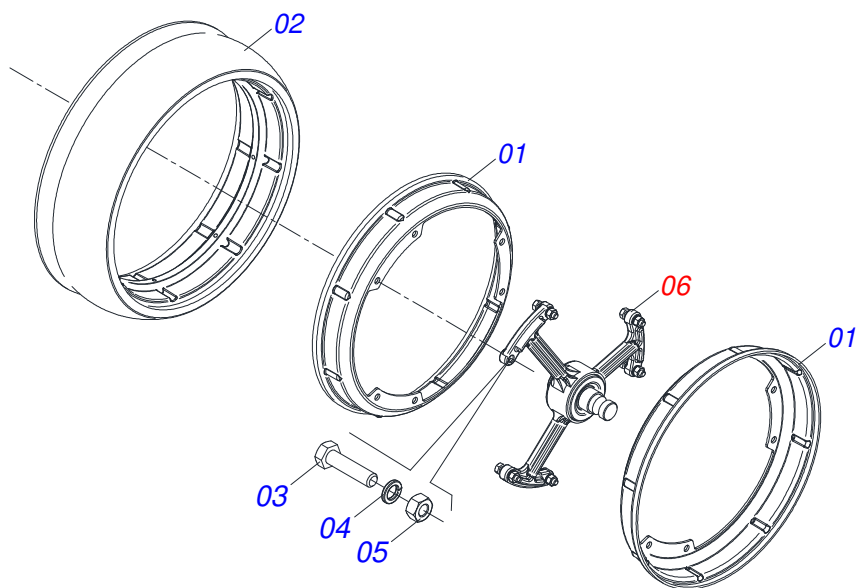


Item	Code	Description	See page	QT
01	0551019904	PRESS WHEEL RIM		02
02	0503030891	RUBBER BAND		01
03	0503010365	NUT		06
04	0503010179	LOCK WASHER		06
05	0503010337	5/16" NUT		06
06	0521055073	ASSEMBLY DEPTH WHEEL BOX	125	01

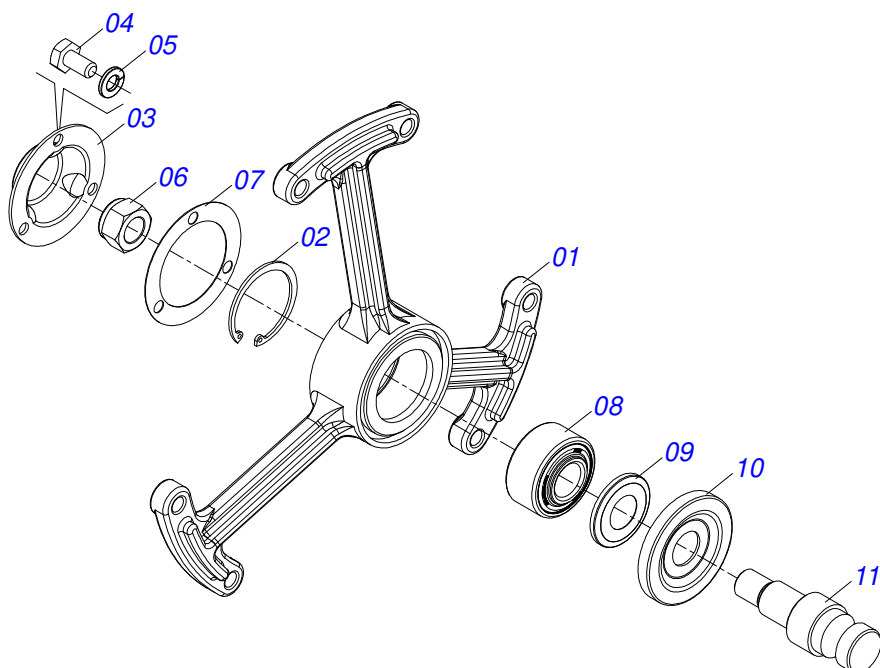


Item	Code	Description	See page	QT
01	0581019528	BOX WHEEL DEPTH SPA WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	COVER DEPTH		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503010878	5/8" SELF ALIGNING NUT		01
07	0503030757	2.9" X 2" X 0.02" JOINT		01
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01
11	0581019529	DEPTH REGULATOR SHAFT		01

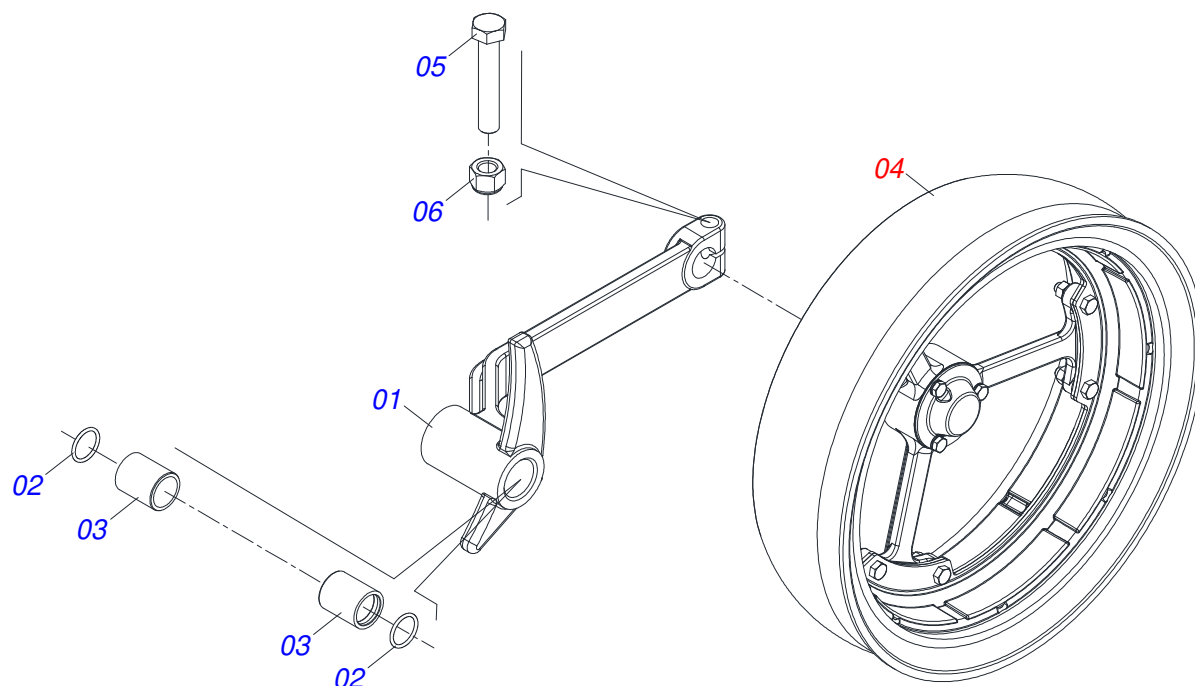


Item	Code	Description	See page	QT
01	0502012927	LEFT ARM		01
02	0503011109	2-119 N 3006-9B O'RING		02
03	0581019514	LUBRICANT GLOVE		02
04	0521055059	WHEEL RAYED ASSY SPA WITHOUT 124 LUBRICATION		01
05	0503010741	1/2" X 2-3/4" BOLT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01

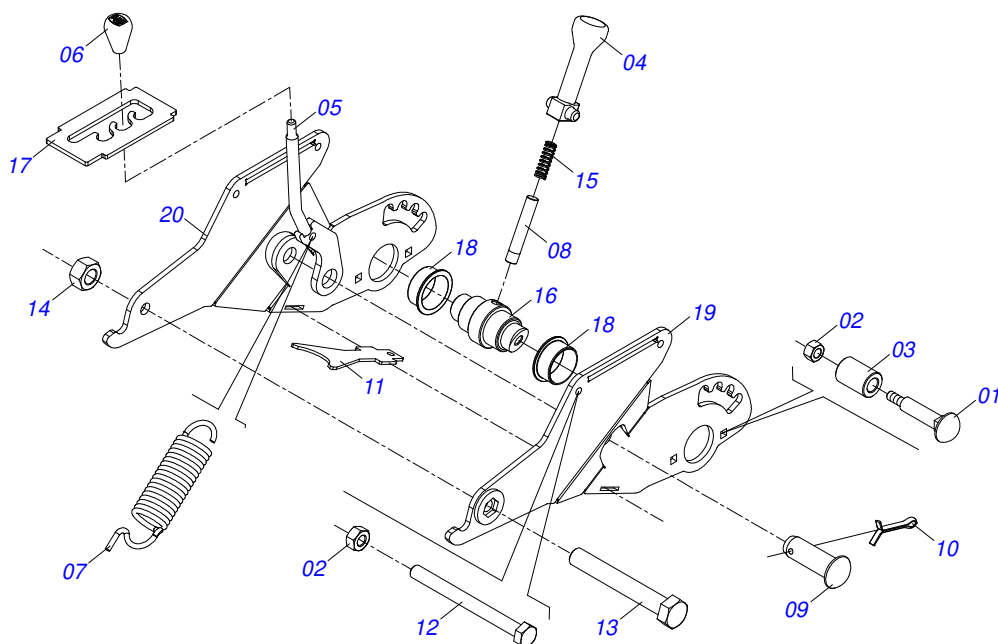


Item	Code	Description	See page	QT
01	0501011753	5/16" X 1-3/4" BOLT	02	
02	0503013816	5/16" LOCKNUT	04	
03	0581015855	SLEEVE	02	
04	0502012877	PRESS WHEEL ADJUSTMENT LEVER	01	
05	0521068661	LEVER	01	
06	0503030878	LEVER CRANK	01	
07	0503031393	1.57" X 5.98" X 0.2"TRACTION SPRING	01	
08	0581019520	AXIS	01	
09	0571812442	COUPLING SHAFT	01	
10	0503010257	1/8" X 1" COTTERPIN	01	
11	0581019511	COVER	01	
12	0503010848	5/16" X 3.1/2" BOLT	02	
13	0503010752	1/2" X 3.1/2" BOLT	01	
14	0503011336	1/2" HEX SELF ADJUSTING NUT	01	
15	0503030190	0.5" X 1.6" X 0.05" SPRING	01	
16	0581019510	AXIS	01	
17	0581019512	PLATE TOP	01	
18	0503019351	LUBRICANT GLOVE	02	
19	0521069591	LEFT SIDE	01	
20	0581019548	RIGHT SIDE BODY	01	

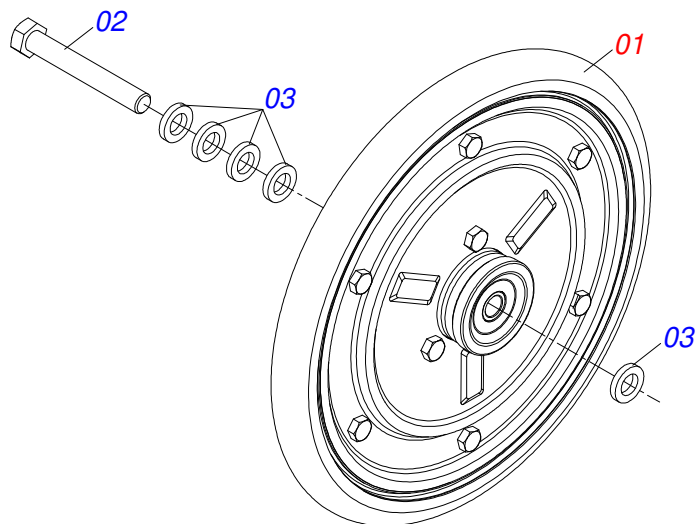


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	129	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

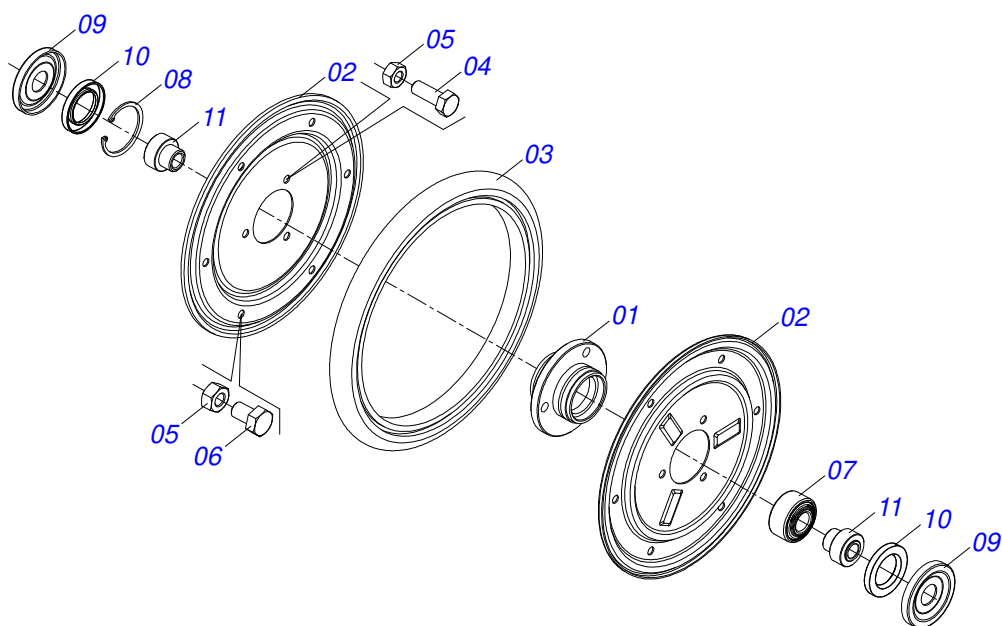


Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

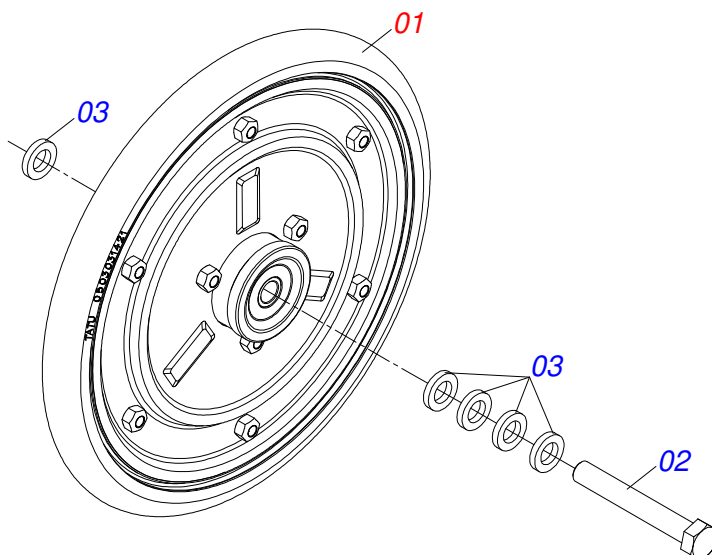


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	129	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

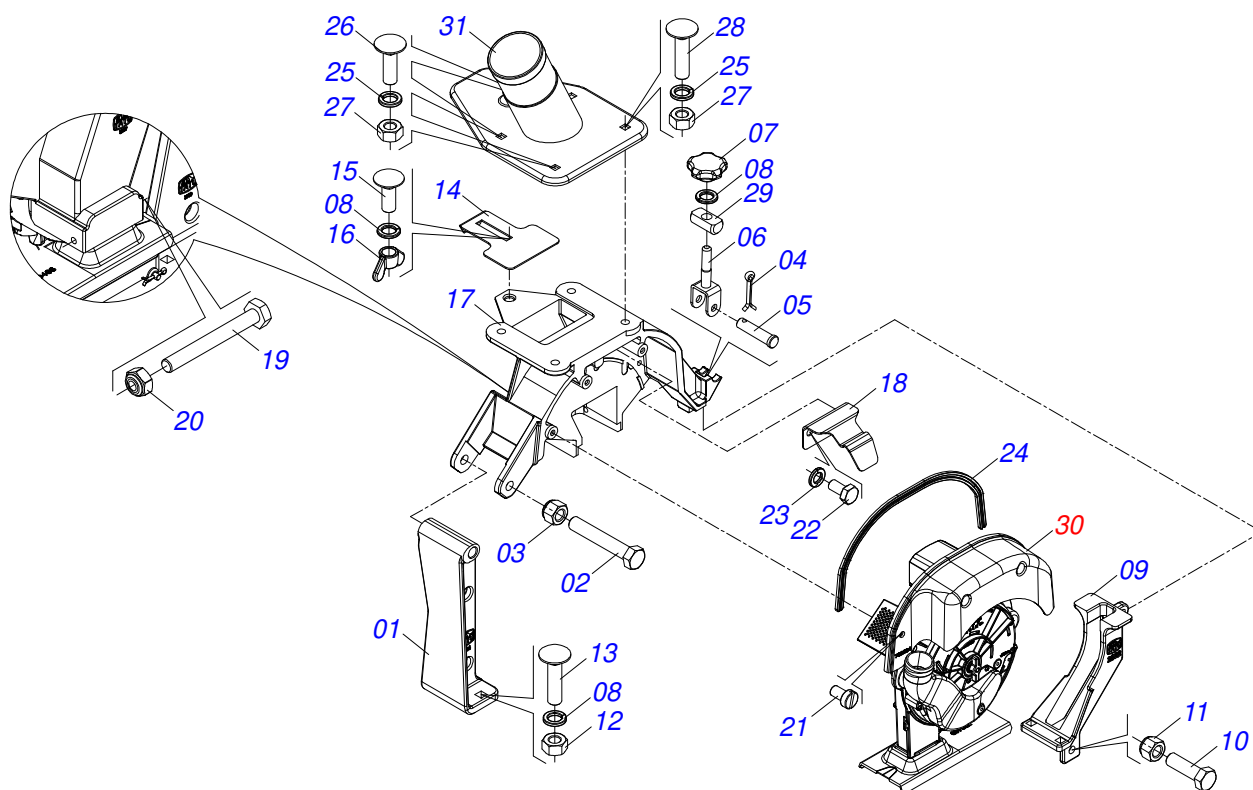


Item	Code	Description	See page	QT
01	0502012924	PRECISION PLANTING SUPPORT		01
02	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		01
03	0503010589	1/2" UNC SELF ADJUSTING NUT		01
04	0503010140	1/8" X 3/4" COTTERPIN		01
05	0571014024	FAST BOLT GUIDE AXLE		01
06	0503034824	FIXATIVE		01
07	0503010293	BAQUELITE MANIPULACION		01
08	0503010025	3/8" SPRING WASHER		06
09	0502012922	FIXING SUPPORT		01
10	0503011404	BOLT		01
11	0503013357	3/8" SELF-ADJUSTING NUT		01
12	0503010026	3/8" NUT		04
13	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04
14	0571019491	SLUICE PNEUMATIC PRECISION PLANTING		01
15	0501011643	3/8 X 1" BOLT		01
16	0503010209	3/8" UNC BUTTERFLY NUT		01
17	0502012807	SUPPORT BOX PRECISION PLANTING		01
18	0571019489	CLAMP PRECISION PLANTING		01
19	0503012721	1/4" X 4" BOLT		01
20	0503012880	1/4" UNC SELF ADJUSTING NUT		01
21	0503818139	BOLT		03
22	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		02
23	0503015110	M06 SPRING WASHER		02
24	0503037390	PACKING FOR PLANTING		01
25	0503010179	LOCK WASHER		04
26	0503011953	5/16" X 1" BOLT		03
27	0503010337	5/16" NUT		04
28	0503012163	5/16" X 1-1/2" BOLT		01
29	0581011226	FIXER CLOSING P PLANTING CONTR CPRA		01
30	0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN 132 DISC		01
31	0521066707	FEEDER		01

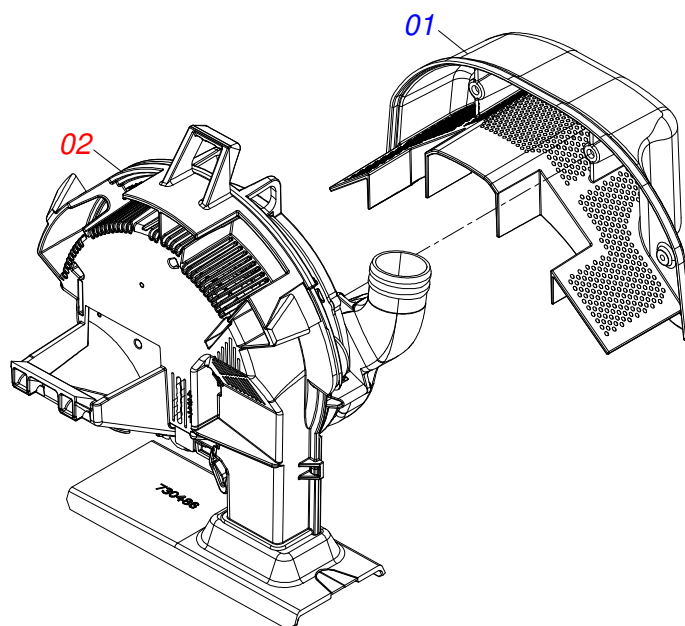


Item	Code	Description	See page	QT
01	0571019613	STRAW PRECISION PLANTING SHIELD		01
02	0521052131	DISTRIBUTOR VSET2 WITH CORN DISK WITHOUT PROTECTION	133	01

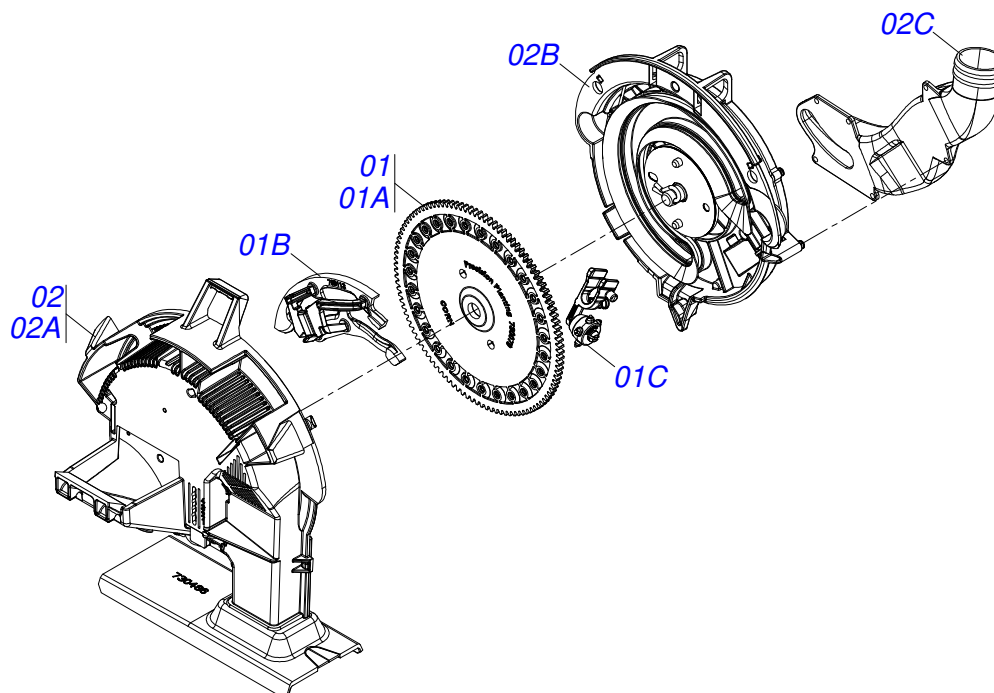


Item	Code	Description	See page	QT
01	0503062417	KIT CORN DISTRIBUTION		01
01A	0503018160	CORN PLASTIC DISC		01
01B	0503062472	SELECTOR SEED CORN		01
01C	0503062474	EJECTOR CORN SEED SET		01
02	0503062405	SEED DISTRIBUTOR		01
02A	0503062567	FIXED BASE SEEDS DISTRIBUTOR		01
02B	0503062974	MOBILE BASE WITHOUT SNORKEL		01
02C	0503062973	SNORKEL ASSY PP768718		01

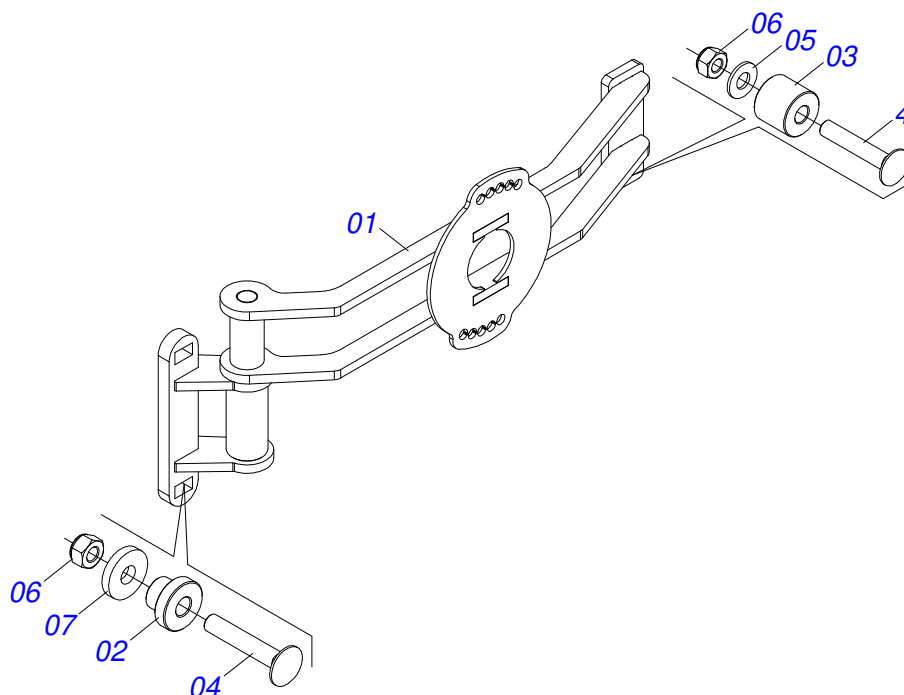


Item	Code	Description	See page	QT
01	0521068129	ENCAPSULATED CHAIN FIXATION SUPPORT		01
02	0591015755	SUPPORT GLOVE CHAIN SUPPORT		02
03	0591016332	SUPPORT REAR GLOVE		01
04	0501011753	5/16" X 1-3/4" BOLT		03
05	0501010694	FLAT WASHER		01
06	0503019657	HEX LOCK NUT WITH NYLON 5/16		03
07	0591016334	FLAT WASHER 8,50 X 23 X 4,00		02

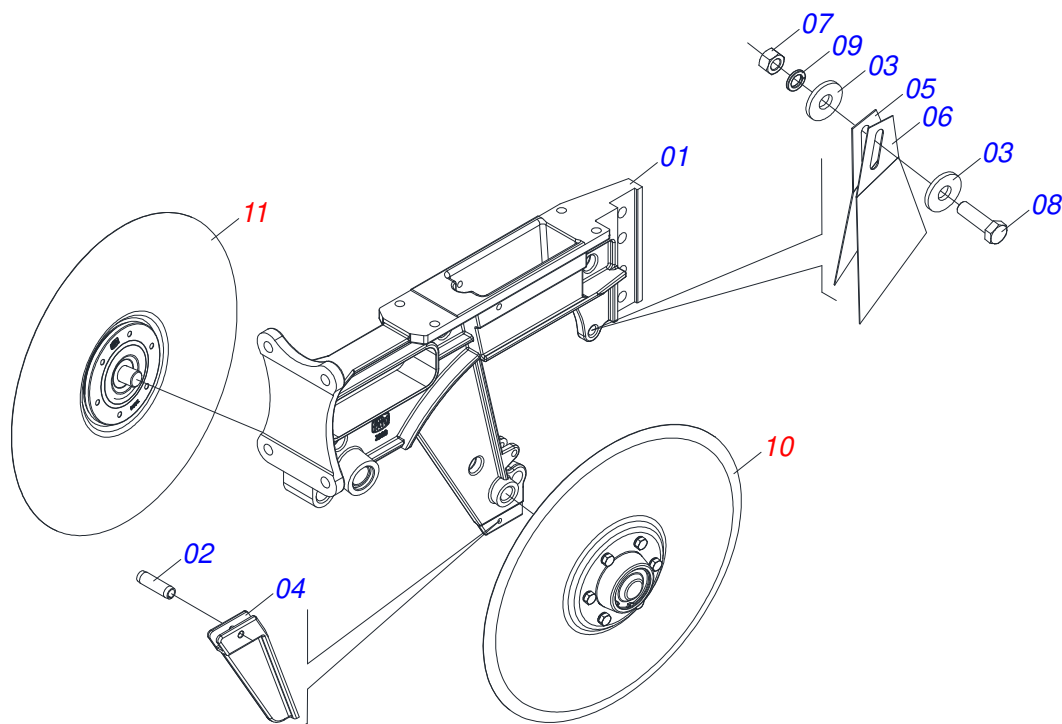


Item	Code	Description	See page	QT
01	0502012928	LEFT EXTENSOR		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0501010984	FLAT WASHER		02
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8" SPRING WASHER		01
10	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 120 FERTILIZER / SEED		01
11	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 118 FERTILIZER / SEED		01

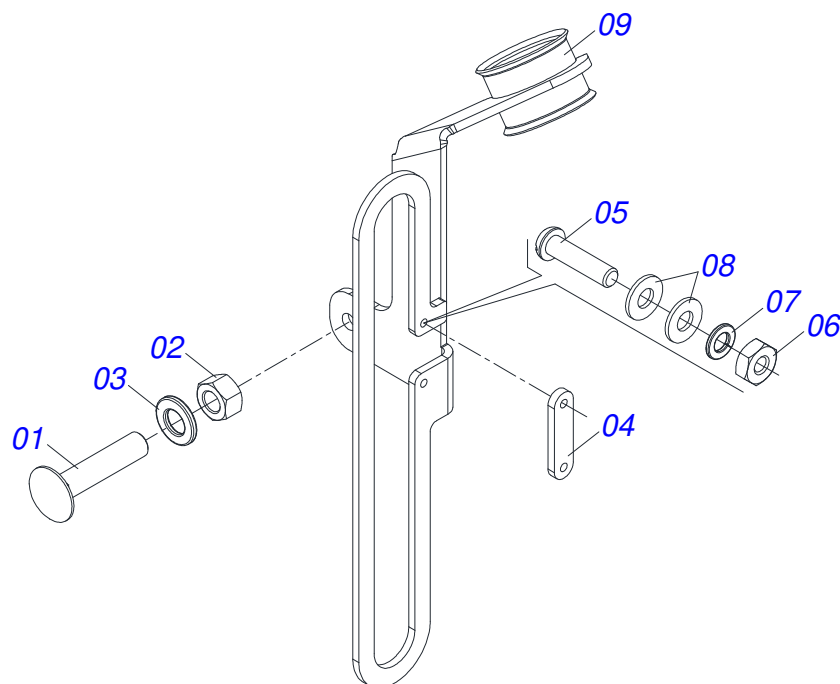


Item	Code	Description	See page	QT
01	0501011643	3/8 X 1"BOLT		01
02	0503010026	3/8" NUT		01
03	0503015135	FLAT WASHER 10 X 18 X 2		01
04	0591016329	ENCAPSULATED CHAIN CLOSING		01
05	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
06	0503010667	3/16" NUT		02
07	0503010668	3/16" SPRING WASHER		02
08	0503010669	FLAT WASHER		02
09	0531062693	PEANUTS CURRENT GUIDE		01

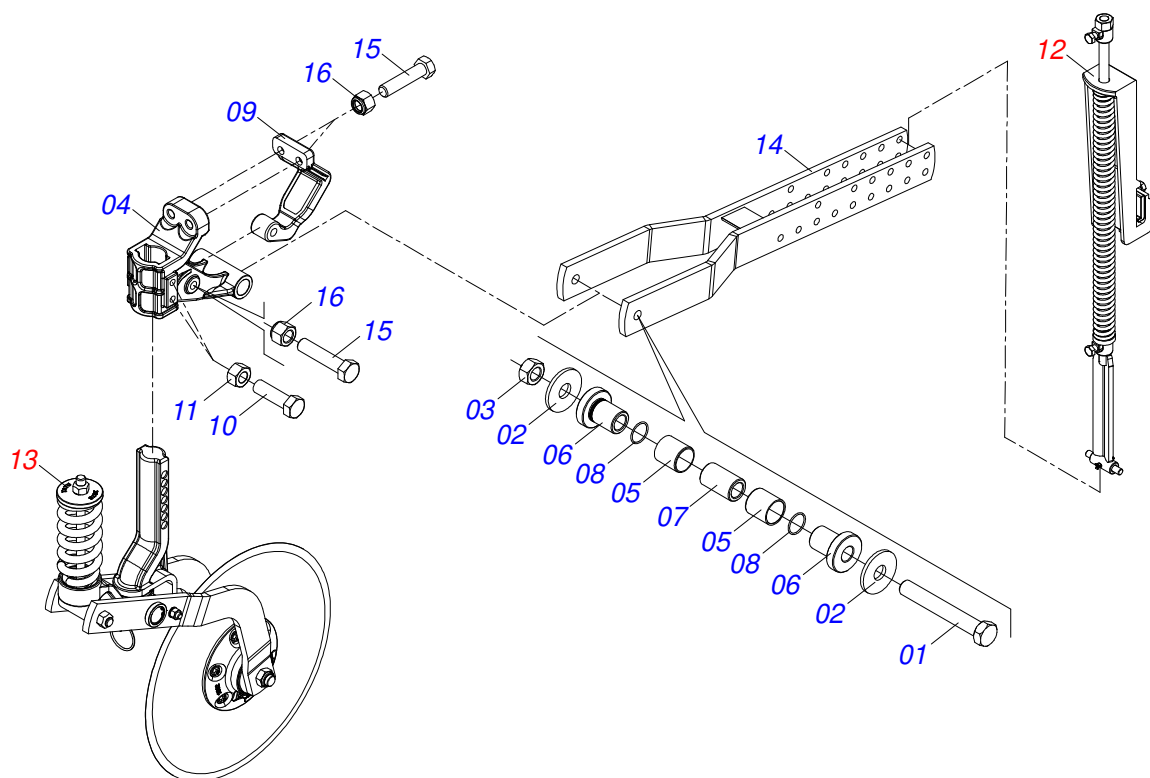


Item	Code	Description	See page	QT
01	0501010066	3/4" X 9" BOLT		01
02	0511017232	FLAT WASHER		02
03	0503011255	3/4" LOCK NUT		01
04	0502012873	SUPPORT DC LINE FERTILIZER		01
05	0503019278	LUBRICANT GLOVE		02
06	0581019195	SIDE GUIDE GLOVE		02
07	0581019196	CENTRAL GUIDE GLOVE		01
08	0503010410	RING		02
09	0502012876	CLAMP		01
10	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
11	0503010013	5/8" NUT		02
12	0521054906	SPRING ASSY FERTILIZER	139	01
13	0521053231	DPL 20 SHORT LINE WITHOUT LUBRICATION CONICAL BEARING	140	01
14	0521066231	SHORT FERTILIZER LINE ARM		01
15	0503017857	BOLT 5/8 UNF 4		03
16	0503010811	5/8" UNF SELF ADJUSTING NUT		03

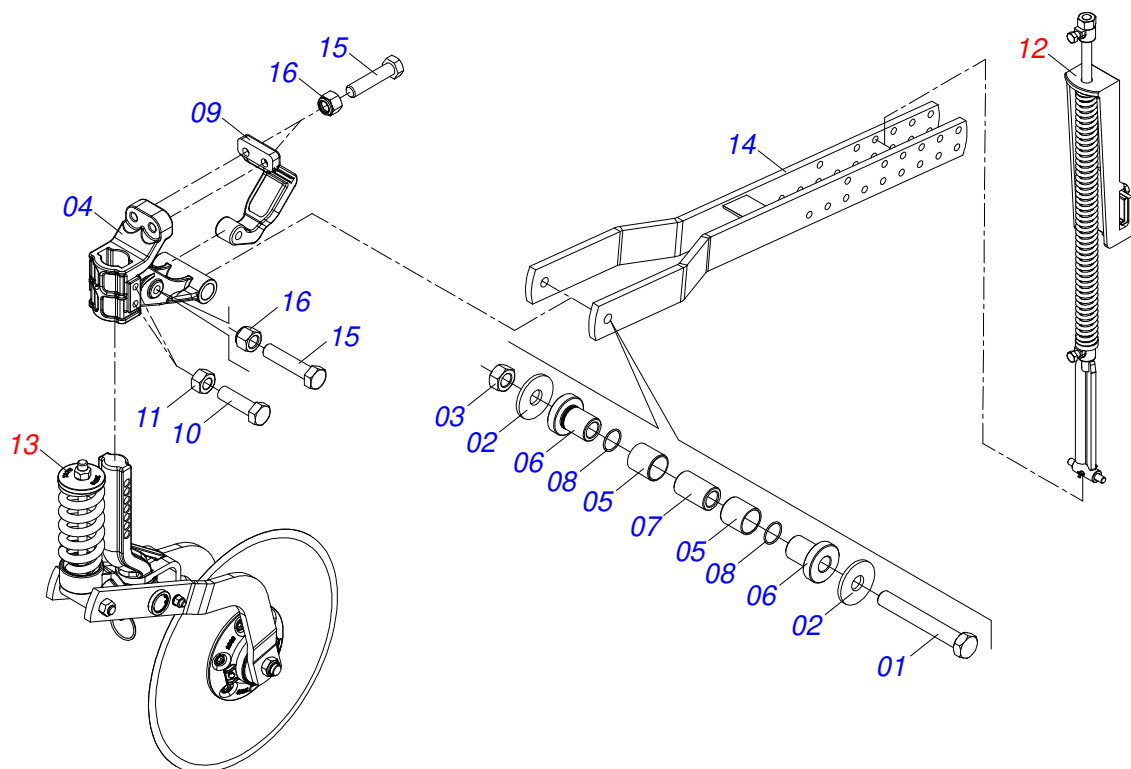


Item	Code	Description	See page	QT
01	0501010066	3/4" X 9" BOLT		01
02	0511017232	FLAT WASHER		02
03	0503011255	3/4" LOCK NUT		01
04	0502012873	SUPPORT DC LINE FERTILIZER		01
05	0503019278	LUBRICANT GLOVE		02
06	0581019195	SIDE GUIDE GLOVE		02
07	0581019196	CENTRAL GUIDE GLOVE		01
08	0503010410	RING		02
09	0502012876	CLAMP		01
10	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
11	0503010013	5/8" NUT		02
12	0521054906	SPRING ASSY FERTILIZER	139	01
13	0521053232	DPL 20 LONG LINE WITHOUT LUBRICATION CONICAL BEARING	143	01
14	0521066230	LONG FERTILIZER LINE ARM		01
15	0503017857	BOLT 5/8 UNF 4		03
16	0503010811	5/8" UNF SELF ADJUSTING NUT		03

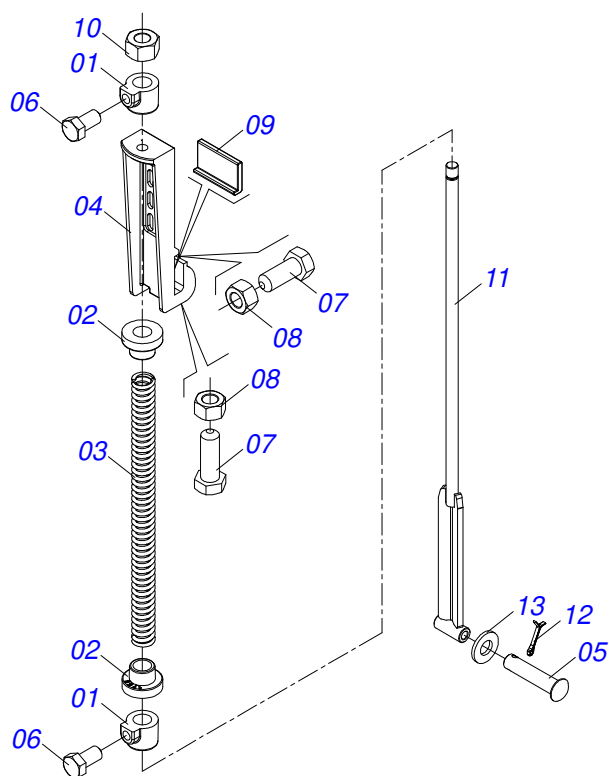


Item	Code	Description	See page	QT
01	0502040534	SPRING GUIDE BUSHING LOCK	02	
02	0502012184	FERTILIZER SPRING GUIDE	02	
03	0503031910	1.7" X 22.8" X 0.3" SPRING	01	
04	0502012510	SPRING ROD SUPPORT	01	
05	0591018219	JUNCTION SHAFT 12.70 X 109 ZN	01	
06	0501018535	1/2 X 1 BOLT	02	
07	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN	02	
08	0503010060	1/2" NUT	02	
09	0502010891	SPRING CHOCK SUPPORT VARON	01	
10	0503010014	3/4" NUT	01	
11	0521067619	TUBE LINE FERTILIZER	01	
12	0503010257	1/8" X 1" COTTERPIN	01	
13	0501010937	13.5 X 28 X 3 FLAT WASHER	01	

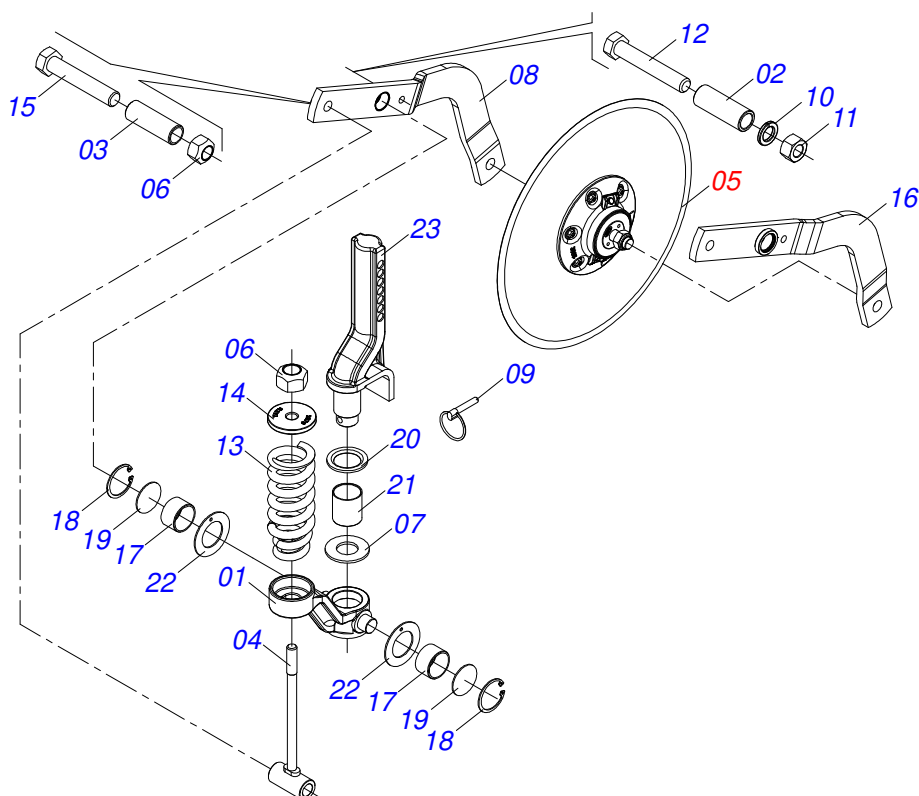


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT WITHOUT LUBRICATION		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	141	01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	WASHER BRACKET AXIS DC PST		01
08	0521068887	DC RIGHT ARM WITH GLOVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2" NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH GLOVE		01
17	0503019272	LUBRICANT GLOVE		02
18	0503010390	SEAL RING		02
19	0581017628	COVER		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012825	SHAFT FIXING SHAFT CUT LINE SHORT		01

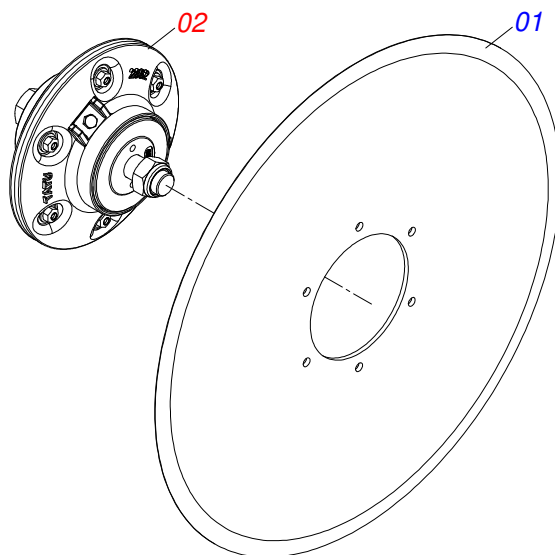


Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521053697	CUTTING DISK BOX	142	01

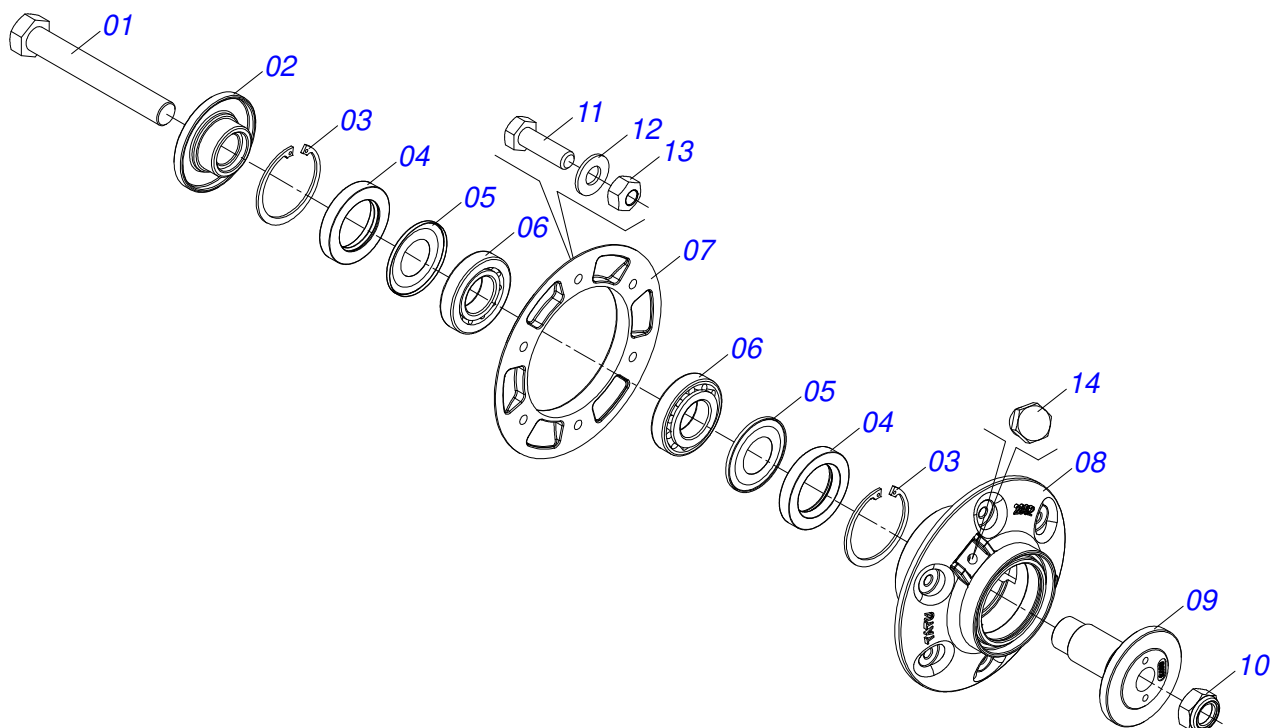


Item	Code	Description	See page	QT
01	0503019283	SCREW 7/8 UNF X 6.1/4	01	
02	0502040872	REGULATORY NUT	01	
03	0503010370	502072 CLAMPING RING (FOR AXLE)	02	
04	0503010590	00674-B SEAL	02	
05	0503019285	RING	02	
06	0503012170	30207 ROLLER BEARING	02	
07	0502020641	BLADE DISC FLANGE	01	
08	0502012862	CUTTING DISK BOX	01	
09	0502040873	CUTTING DISC AXLE	01	
10	0503017755	NUT	01	
11	0503018825	5/16 UNC UNC BOLT	06	
12	0501010694	FLAT WASHER	06	
13	0503013816	5/16" LOCKNUT	06	
14	0511017907	1/8" BSPT X 6 PLUG	02	

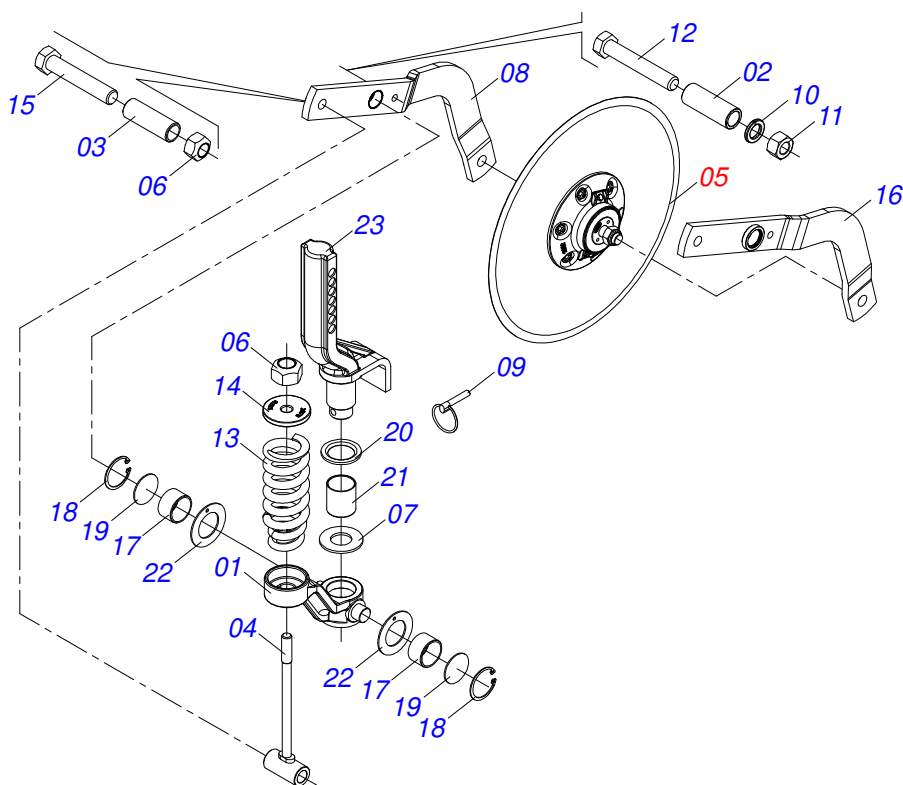


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT WITHOUT LUBRICATION		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	141	01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	WASHER BRACKET AXIS DC PST		01
08	0521068887	DC RIGHT ARM WITH GLOVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2" NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH GLOVE		01
17	0503019272	LUBRICANT GLOVE		02
18	0503010390	SEAL RING		02
19	0581017628	COVER		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012824	FIXING SHAFT DISC CUT LINE		01

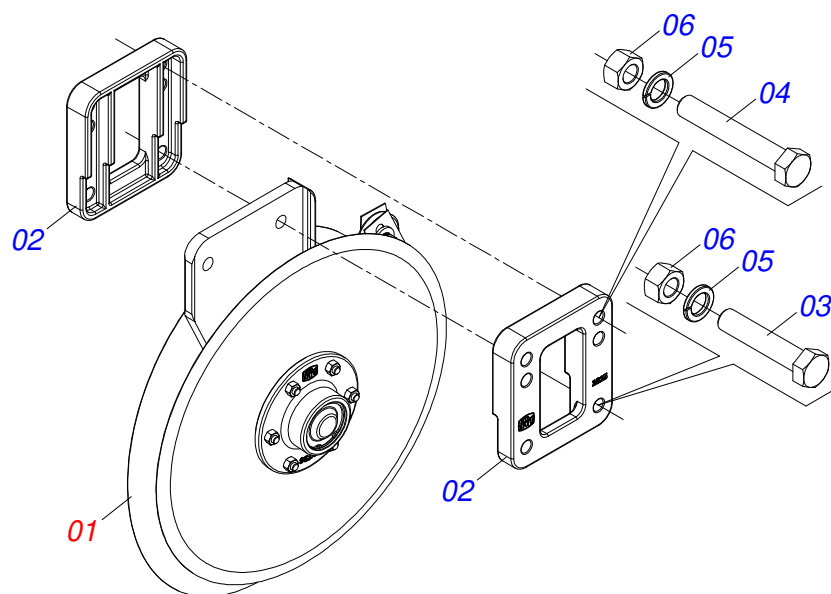

Item	Code	Description	See page	QT
01	0521055868	RIGHT DUAL FERTILIZER DISC	149	01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2" NUT		04

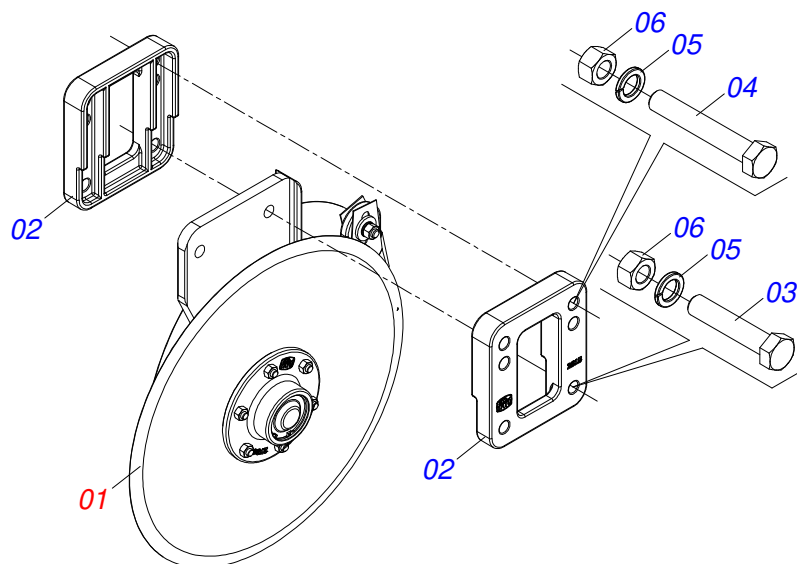


Item	Code	Description	See page	QT
01	0521055869	LEFT DUAL FERTILIZER DISC	150	01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2" NUT		04

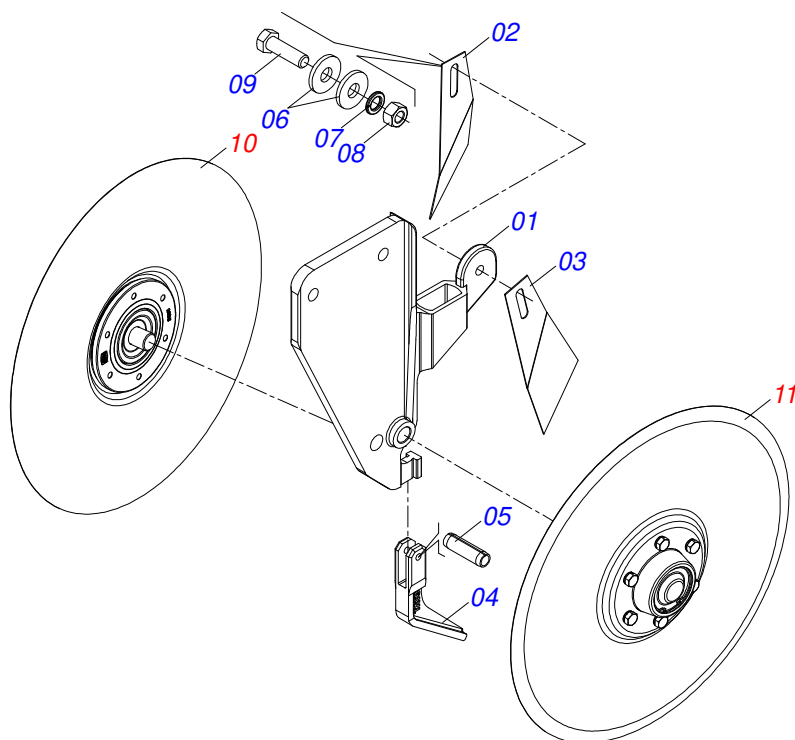


Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	FLAT WASHER		02
07	0503010025	3/8" SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 118 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 120 FERTILIZER / SEED		01

LEFT DUAL FERTILIZER DISC


0521055869

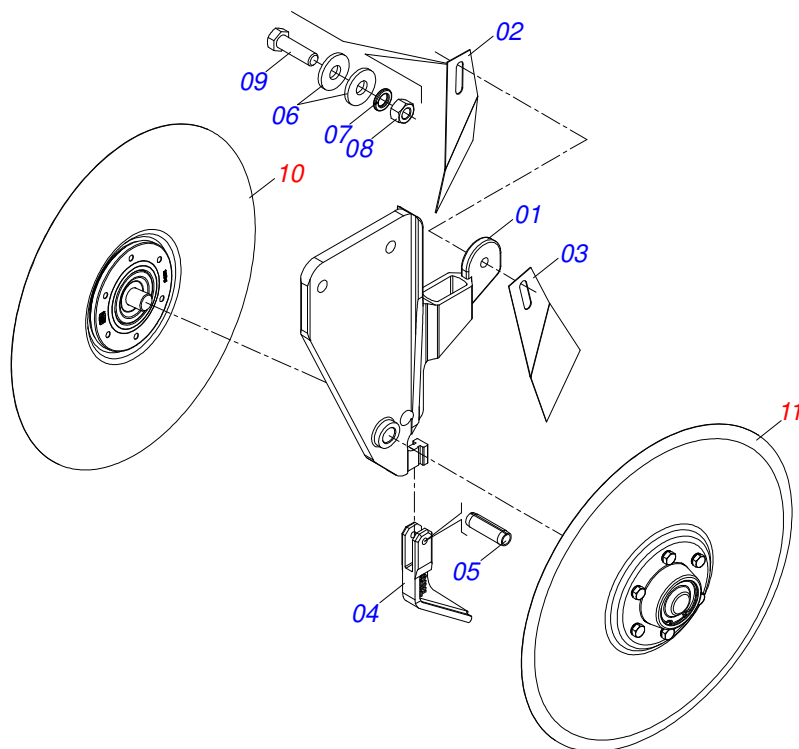


Item	Code	Description	See page	QT
01	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	FLAT WASHER		02
07	0503010025	3/8" SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 118 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 120 FERTILIZER / SEED		01

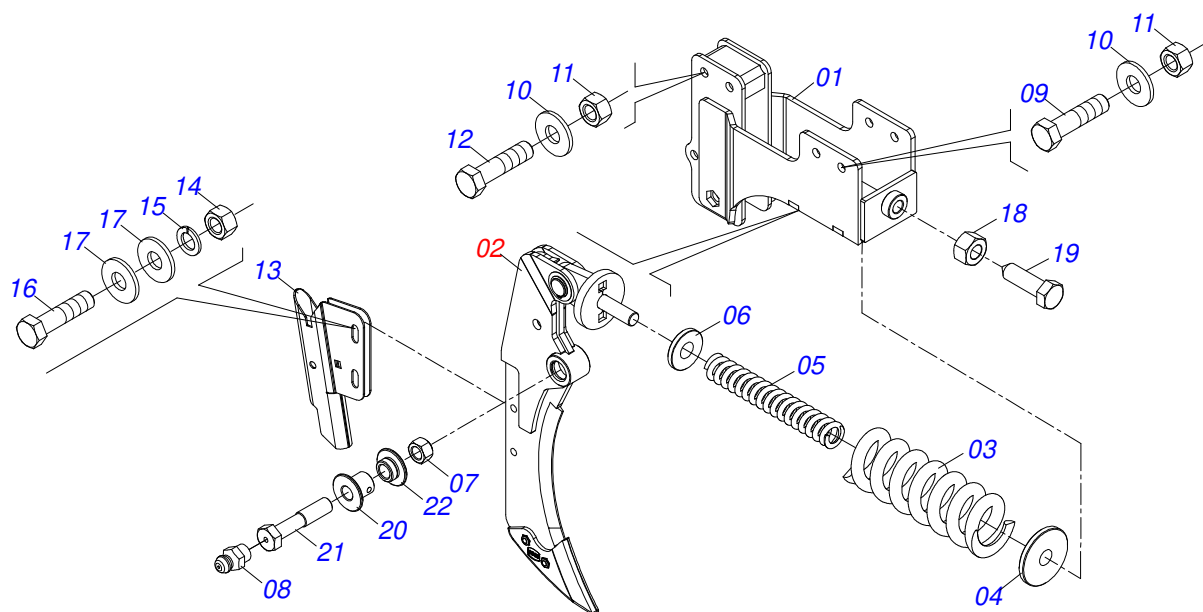


Item	Code	Description	See page	QT
01	0521068567	BOX SPRING		01
02	0521053951	STEM	152	01
03	0503034106	80 X 230 X 16,50 HDA COMPRESSION SPRING		01
04	0581012094	SUPPORT WASHER		01
05	0503033624	35 X 215 X 7,14 COMPRES SPRING		01
06	0571019462	SUPPORT GUIDE PRING		01
07	0503012795	5/8" HEX SELF ADJUSTING NUT		01
08	0503010691	1/4" GREASE FITTING		01
09	0503010384	1/2" X 5" BOLT		02
10	0511017302	FLAT WASHER		04
11	0503011336	1/2" HEX SELF ADJUSTING NUT		04
12	0503017874	BOLT 1/2 UNC		02
13	0571018541	BODY SOCKET FERTILIZER		01
14	0503010026	3/8" NUT		02
15	0503010025	3/8" SPRING WASHER		02
16	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
17	0501010984	FLAT WASHER		04
18	0503010417	7/8" NUT		01
19	0503017058	HEX 7/8 UNC X 3 CSRT PC G.5 ZN		01
20	0581012084	ARTICULATED GLOVE		01
21	0581012082	SCREW		01
22	0581012081	GLOVE		01

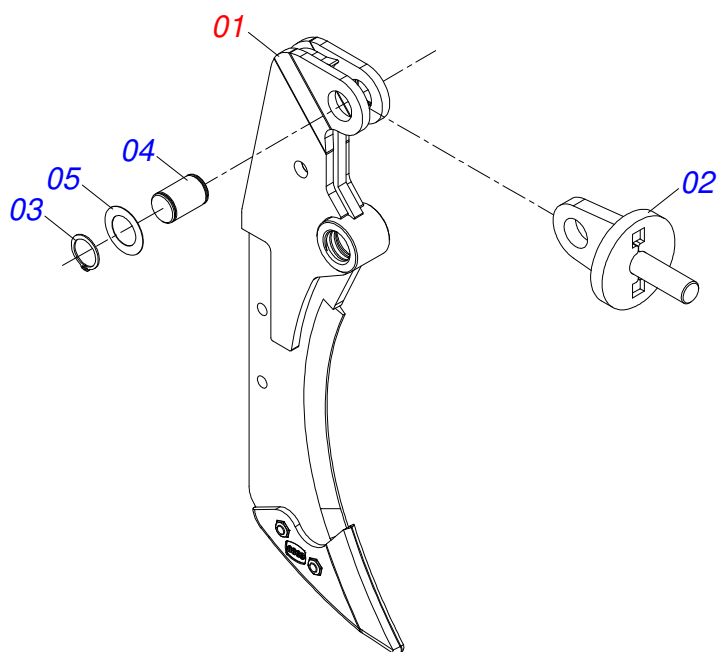


Item	Code	Description	See page	QT
01	0521053932	ROD WITH BEAK 0869	153	01
02	0521067065	FLANGE WASHER SPRING		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0581012092	AXLE FIXER		01
05	0521015818	FLAT WASHER		02

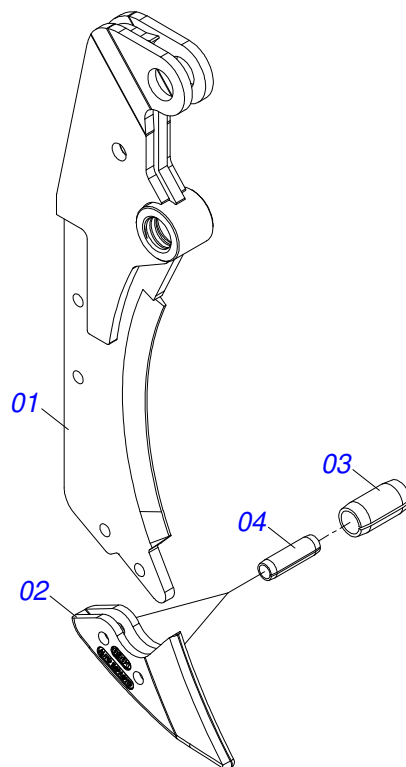


Item	Code	Description	See page	QT
01	0521067523	STEM WITHOUT BEAK DISARM		01
02	0502040901	FIXED ROD NOZZLE		01
03	0503016853	SPRING PIN		02
04	0503011402	0.2" X 0.8" SPRING PIN		02

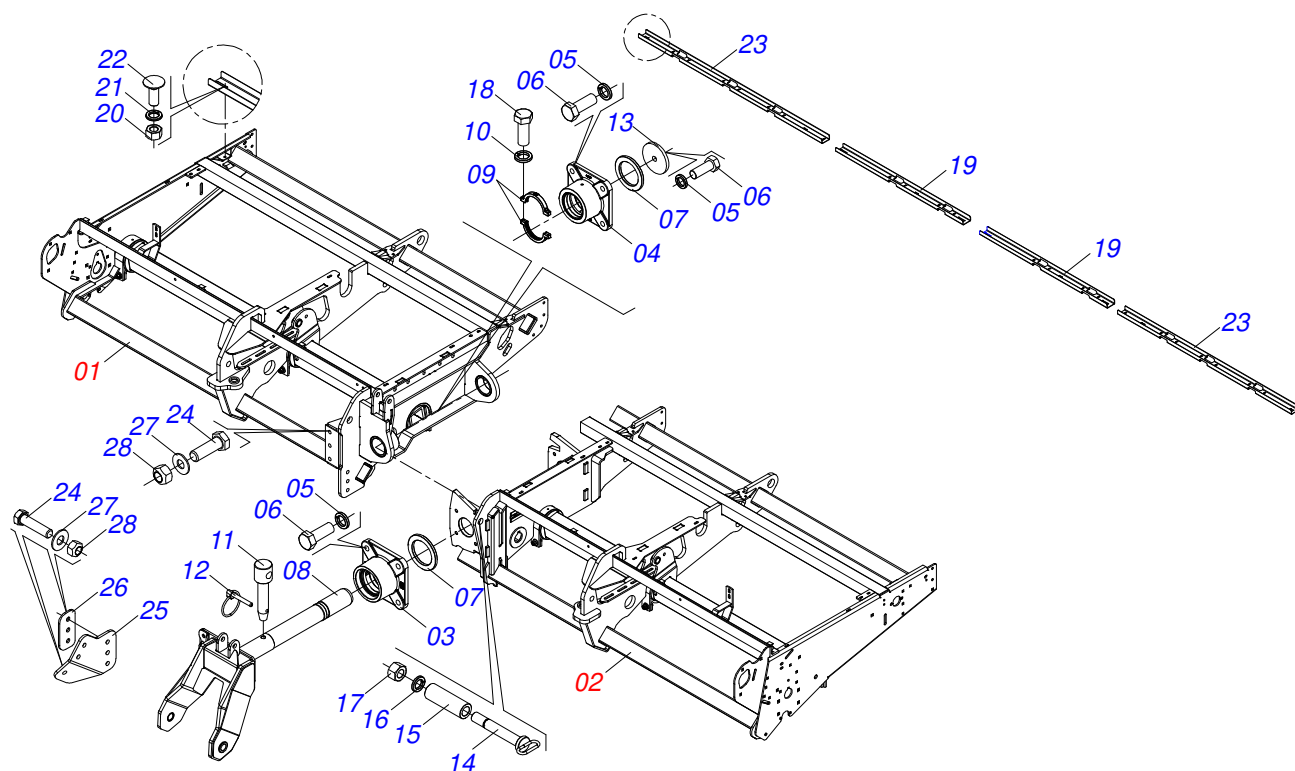


Item	Code	Description	See page	QT
01	0521056832	RIGHT FRAME WITH ROUND AXLE 4790 LEFT MACHINE	155	01
02	0521056833	LEFT FRAME WITH ROUND AXLE 4790 LEFT MACHINE	156	01
03	0501110791	FRONT ARTICULATOR HUB WITH GLOVES	30	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES	31	01
05	0503011442	3/4" SPRING WASHER		09
06	0501010098	3/4" UNC BOLT		09
07	0571010094	SLEEVE FLANGE		02
08	0521065616	ARTICULATION		01
09	0502012698	CLAMP		02
10	0503011444	SPRING WASHER		02
11	0571013510	LOCK AXLE		01
12	0503030085	LOCK PIN		01
13	0571010095	FLAT WASHER		01
14	0521063003	LOCK PIN		01
15	0571010969	LOCK SLEEVE FRAME		01
16	0503013627	1.1/2 SPRING WASHER		01
17	0501010110	1.1/2" NUT		01
18	0503010365	NUT		02
19	0581018965	TROUGH 24 X 50 X 940		02
20	0503010026	3/8" NUT		08
21	0503010025	3/8" SPRING WASHER		08
22	0501011643	3/8 X 1" BOLT		08
23	0591011622	24 X 50 X 1275 GUTTER		02
24	0503019521	SCREW 3/4 UNF 3 CSRP G.8 ZN		09
25	0591011660	ARTICULATED AXLE REINFORCEMENT LOCK		01
26	0591011661	LATCH SUPPORT		01
27	0501017065	FLAT WASHER		09
28	0503019522	HEX NUT		09

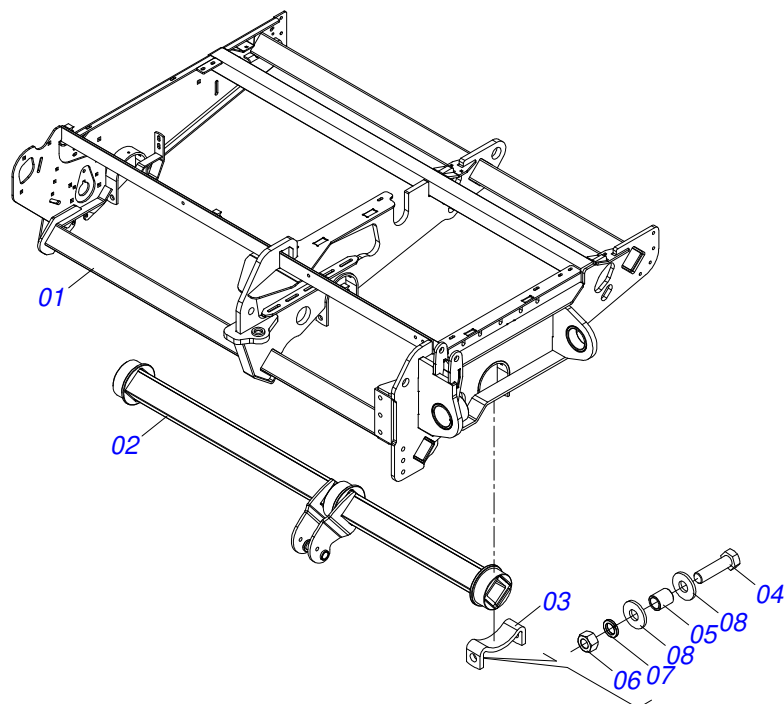

Item	Code	Description	See page	QT
01	0531060340	RIGHT FRAME LEFT ASSY 4790		01
02	0531060342	ARTICULATED AXIS ROTATE RIGHT SIDE 4790		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0531013922	0.6" X 0.8" X 1" SLEEVE		06
06	0503010013	5/8" NUT		06
07	0503011445	SPRING WASHER		06
08	0501012140	FLAT WASHER		12

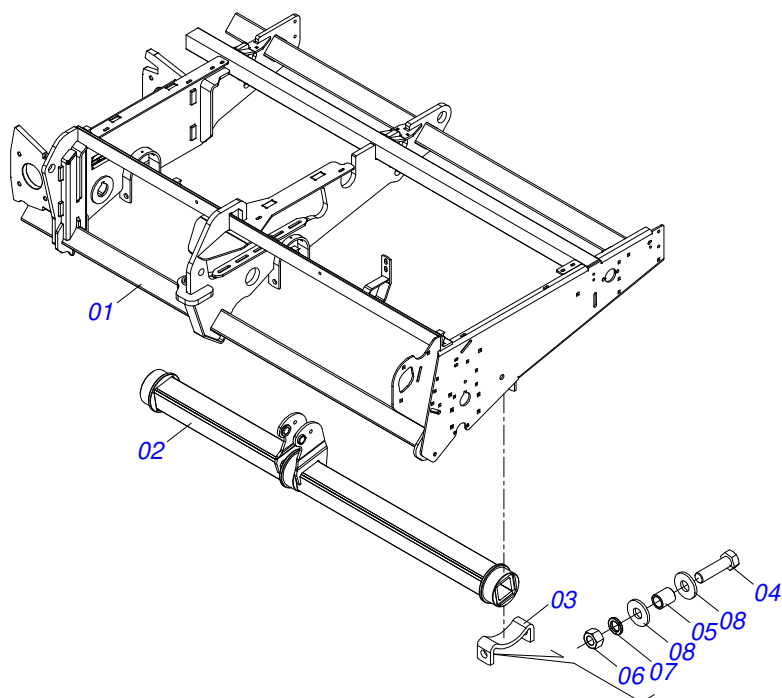

Item	Code	Description	See page	QT
01	0531060341	LEFT FRAME LEFT ASSY 4790		01
02	0531060343	LEFT SKEWING ARTICULATED SHAFT 4790		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0531013922	0.6" X 0.8" X 1" SLEEVE		06
06	0503010013	5/8" NUT		06
07	0503011445	SPRING WASHER		06
08	0501012140	FLAT WASHER		12

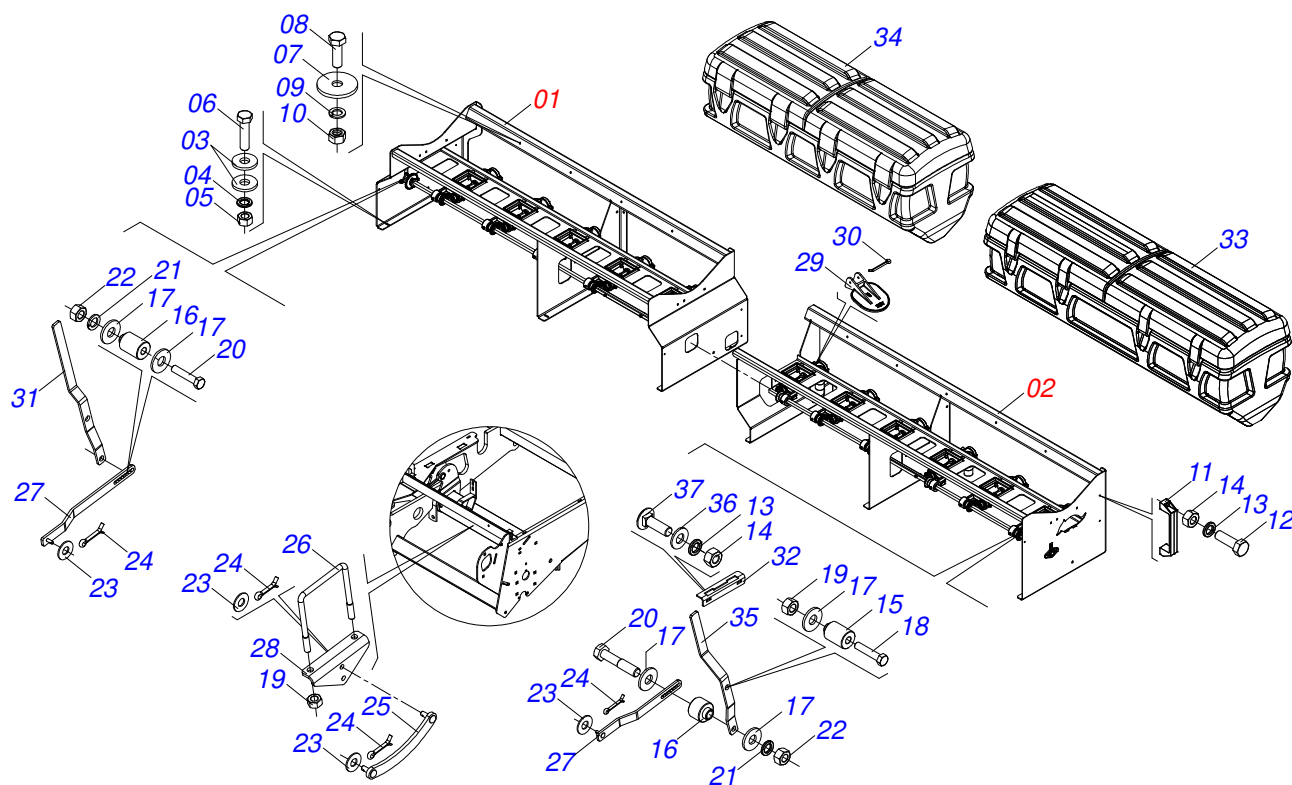


Item	Code	Description	See page	QT
01	0521056838	SILO SUPPORT FERTILIZER RIGHT WITH 158 DISTRIBUTOR 4790 LEFT MACHINE	158	01
02	0521056840	SILO SUPPORT LEFT FERTILIZER DISTRIBUTOR 4790 LEFT MACHINE	159	01
03	0501010984	FLAT WASHER		24
04	0503010025	3/8" SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0503010849	3/8" X 1-1/2" BOLT		12
07	0571019051	FIXER BOX WASHER		18
08	0503013751	3/8 UNC X 1.1/4 BOLT		18
09	0503012535	3/8" SPRING WASHER		18
10	0503012531	3/8" INOX NUT		18
11	0503011957	NYLON LUG		01
12	0503010371	5/16" X 1" BOLT		02
13	0503010179	LOCK WASHER		06
14	0503010337	5/16" NUT		06
15	0551019168	SLEEVE		02
16	0551019167	SLEEVE UNION		02
17	0511017302	FLAT WASHER		06
18	0503010479	BOLT		02
19	0503011336	1/2" HEX SELF ADJUSTING NUT		06
20	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
21	0503010019	1/2" SPRING WASHER		02
22	0503010060	1/2" NUT		02
23	0501013518	FLAT WASHER		06
24	0503010140	1/8" X 3/4" COTTERPIN		06
25	0511069678	LH LOWER LEVER		02
26	0561016468	FASTENER		02
27	0521061741	INNTER LEVER		02
28	0551019159	LEVER FIXER BODY		02
29	0503034396	FERTILIZER SIDE COVER		11
30	0503010362	1/8" X 1.1/4" COTTERPIN		11


**SILO FERTILIZER ASSY 4790 LEFT MACHINE**

0521056835


Item	Code	Description	See page	QT
31	0551019160	LEVER		01
32	0581012605	GEAR BOX LEVER LOCK		02
33	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED		01
34	0503062391	FERTILIZER BOX		01
35	0591011630	ARM / DISARM LEVER 4790		01
36	0501010694	FLAT WASHER		04
37	0503011953	5/16" X 1" BOLT		04

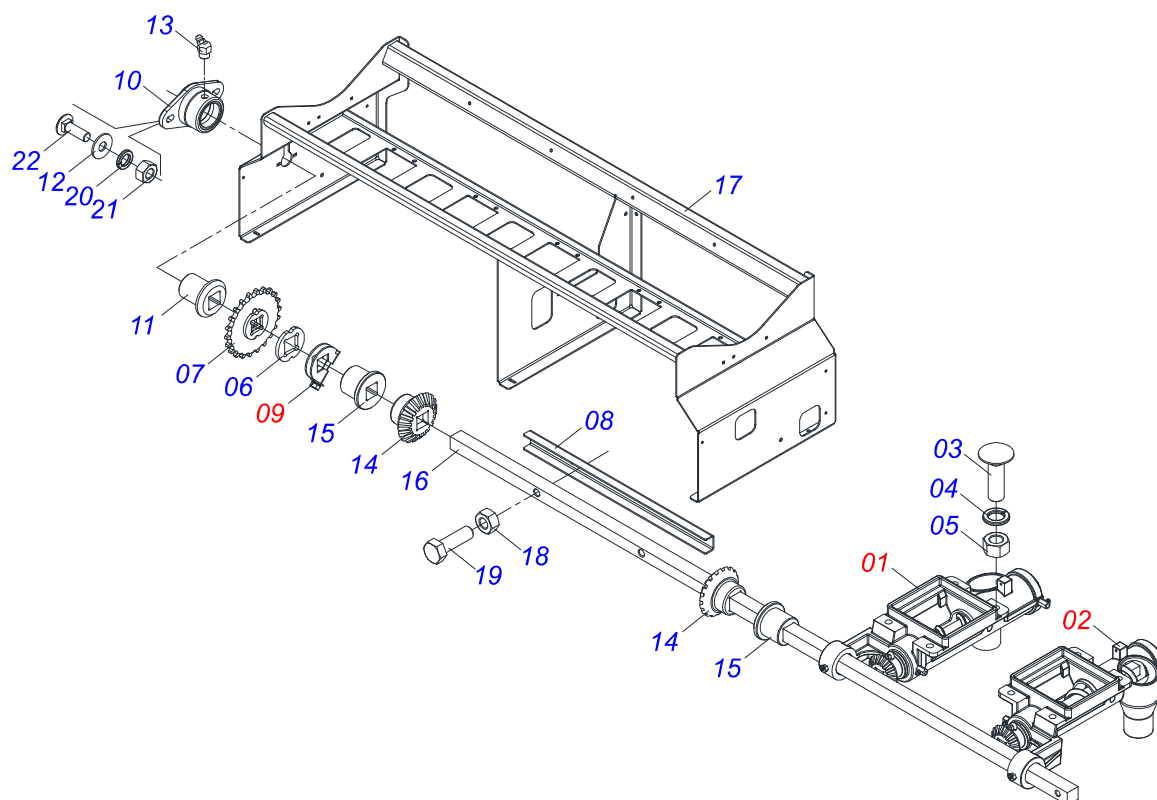

Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	55	02
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	56	04
03	0501010942	3/8" X 1-1/4" BOLT		24
04	0503010025	3/8" SPRING WASHER		24
05	0503010026	3/8" NUT		24
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0501053788	3/4 SQUARE AXLE FASTENER	57	01
10	0501110392	SILO SUPPORT BEARING		01
11	0521012485	GEAR BOX BEARING AGRICUTURAL		01
12	0521011039	FLAT WASHER		02
13	0503010003	1845 GREASE FITTING		01
14	1902010685	18Z CONICAL GEAR		06
15	0503030275	AGRICULTURAL BEARING		06
16	0591011631	3/4 X 2280 SQUARE SHAFT		01
17	0531060346	RIGHT SUPPORT SILO FERTILIZER 4790 LEFT MACHINE		01
18	0503013816	5/16" LOCKNUT		02
19	0503011953	5/16" X 1" BOLT		02
20	0503010337	5/16" NUT		02
21	0503010179	LOCK WASHER		02
22	0503010365	NUT		02

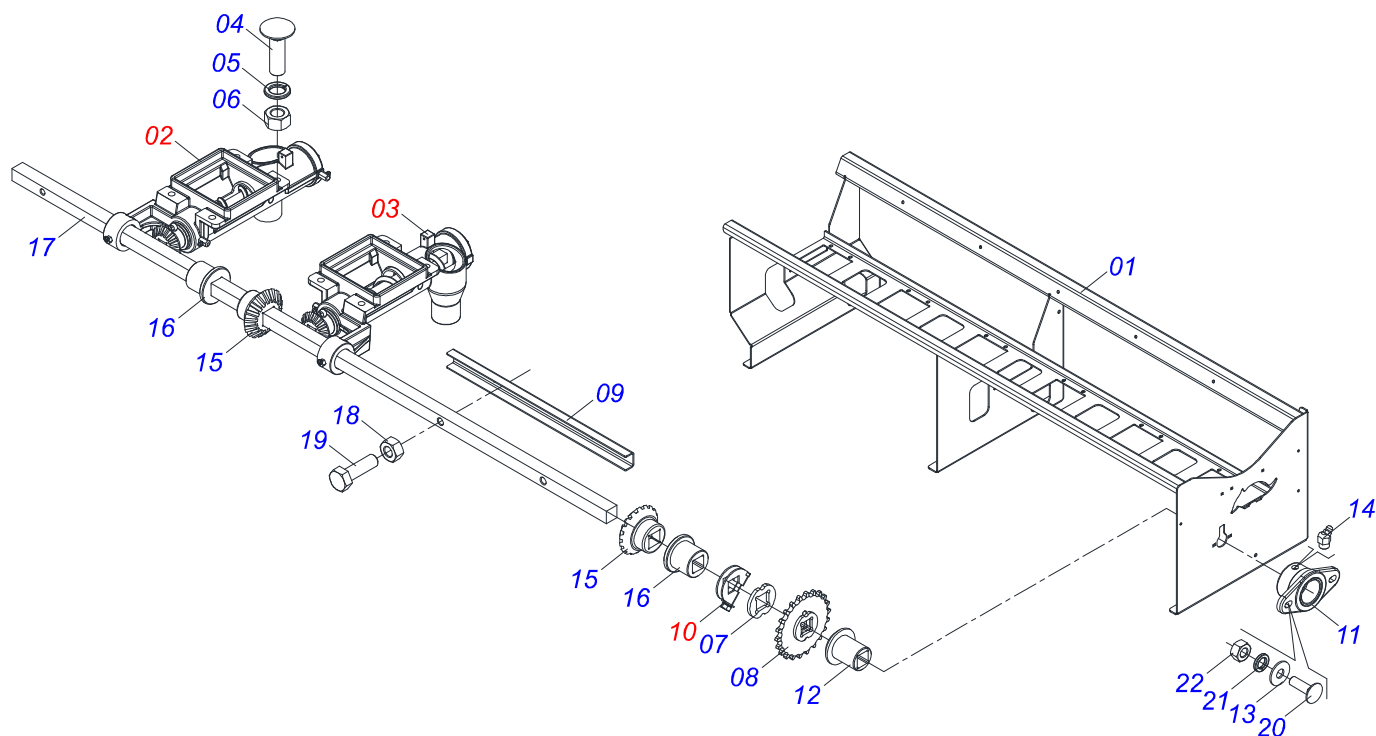


Item	Code	Description	See page	QT
01	0531060347	LEFT SUPPORT SILO FERTILIZER 4790 LEFT MACHINE		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	55	01
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	56	04
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503010025	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0501053788	3/4 SQUARE AXLE FASTENER	57	01
11	0501110392	SILO SUPPORT BEARING		01
12	0521012485	GEAR BOX BEARING AGRICUTURAL		01
13	0521011039	FLAT WASHER		02
14	0503010003	1845 GREASE FITTING		01
15	1902010685	18Z CONICAL GEAR		05
16	0503030275	AGRICULTURAL BEARING		05
17	0591011639	3/4 X 2046 SQUARE SHAFT		01
18	0503013816	5/16" LOCKNUT		02
19	0503010365	NUT		02
20	0503011953	5/16" X 1" BOLT		02
21	0503010179	LOCK WASHER		02
22	0503010337	5/16" NUT		02

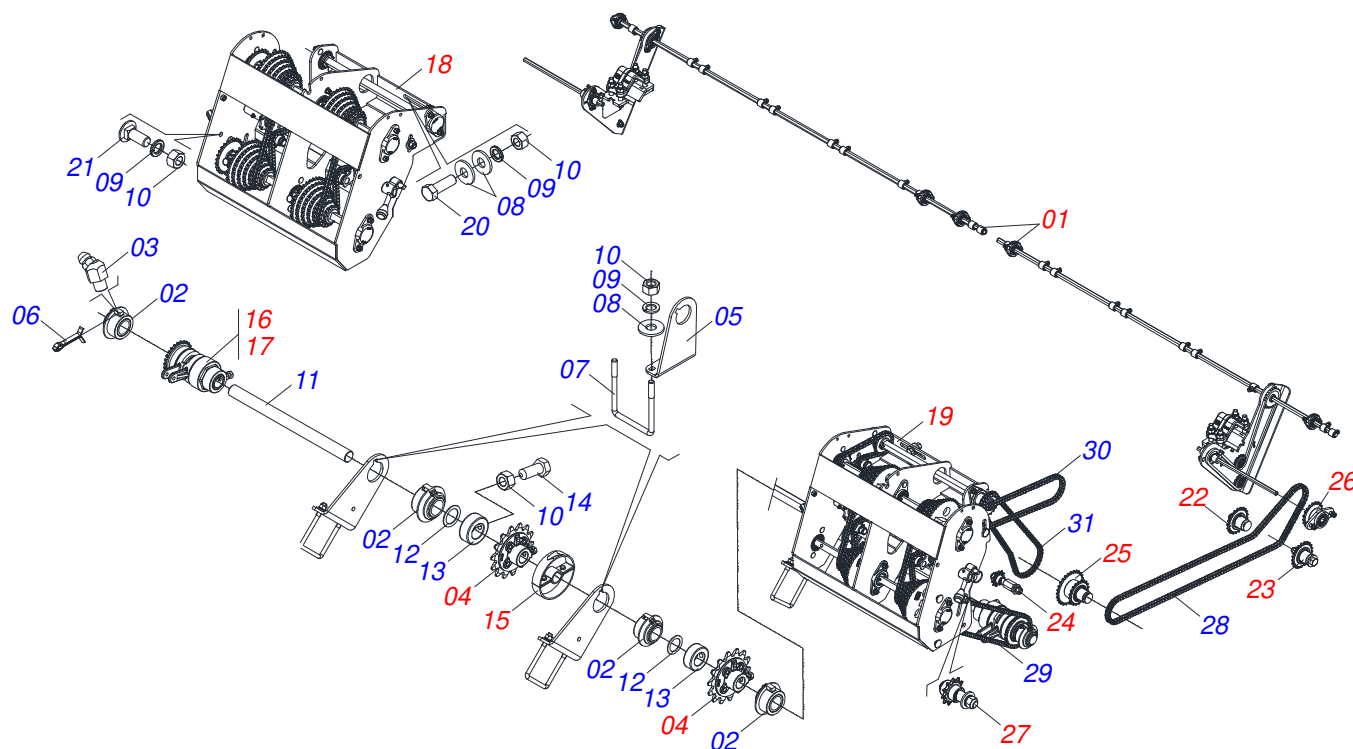


Item	Code	Description	See page	QT
01	0531054310	3/4 HEX AXLE LEFT TRANSMISSION ASSEMBLY	161	01
02	0501110639	BEARING		08
03	0503011099	GREASE FITTING		08
04	0511051434	TRANSMISSION ACTUATOR	65	04
05	0551019114	MOTOR BEARING AXLE SUPPORT		04
06	0503010300	5/32" X 1" COTTERPIN		08
07	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
08	0511017302	FLAT WASHER		16
09	0503010019	1/2" SPRING WASHER		18
10	0503010060	1/2" NUT		22
11	0561016876	MOTOR SHAFT		02
12	0501018466	FLAT WASHER		04
13	0511015961	LOCK BUSHING		04
14	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
15	0501052560	MOTOR AXLE SIGNAL	66	02
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	67	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	68	01
18	0531054313	SUPREME TCE FULL RIGHT EXCHANGE	69	01
19	0531054314	COMPLETE LEFT GEAR SUPREME TCE	70	01
20	0503010920	1/2" X 1.1/2" BOLT		04
21	0501011600	1/2" X 1-1/4" BOLT		06
22	0521055216	BEARING WITH GEAR	80	02
23	0521055217	LOWER CURRENT STRETCH	81	02
24	0501058254	UPPER SEED CHAIN TENSIONER	82	02
25	0521055218	BEARING GEAR WITH DOUBLE	83	02
26	0521055214	BEARING GEAR WITH	84	02
27	0511059261	CHAIN TENSIONER	86	04
28	0503014907	40-1 X 151 CHAIN LINK + MENDING		02
29	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
30	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
31	0503012204	40-1 CHAIN X 82 LINK + RED		02

3/4 HEX AXLE LEFT TRANSMISSION ASSEMBLY


0531054310

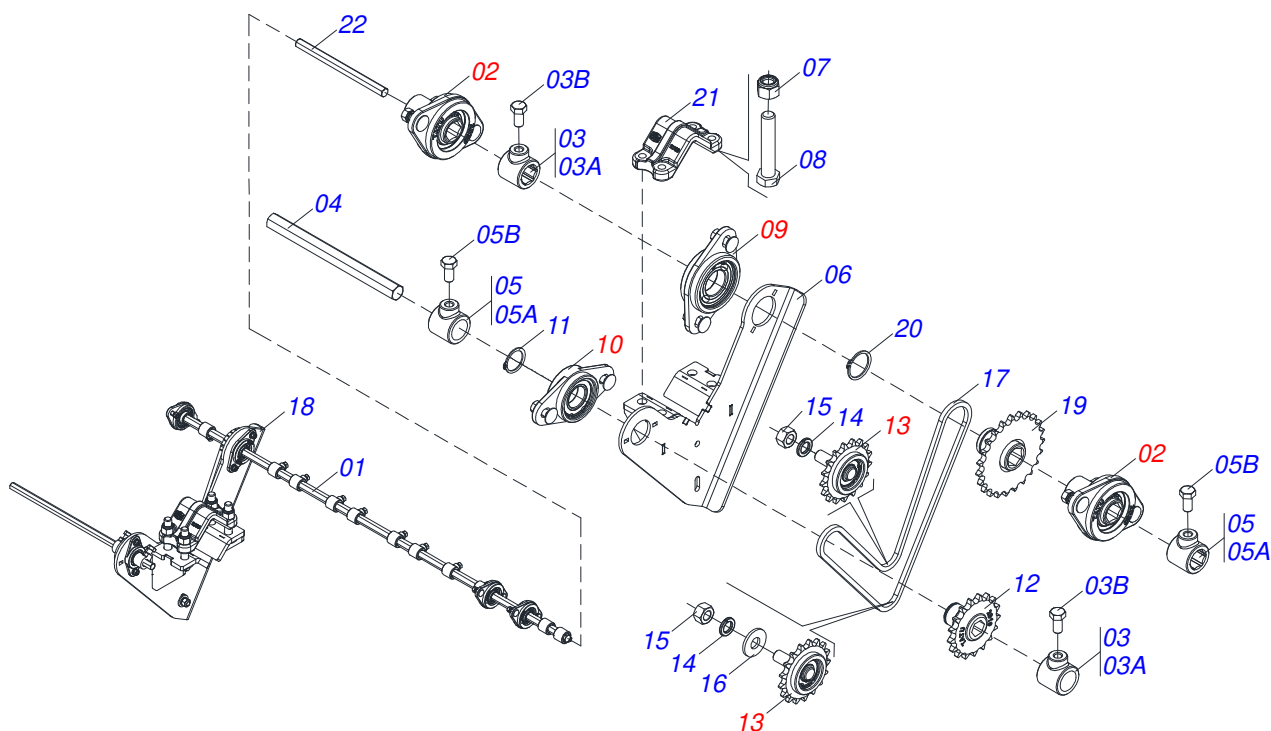

Item	Code	Description	See page	QT
01	0591016455	HEX AXLE 3/4 X 2420		01
02	0521055372	ROW SEED BEARING	61	05
03	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		21
03A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
03B	0503010256	3/8" X 3/4" BOLT		01
04	0591019807	HEX AXLE 5/8 X 500 PEANUTS		02
05	0501055489	SPRING GUIDE LOCK SLEEVE		04
05A	0502040534	SPRING GUIDE BUSHING LOCK		01
05B	0501018535	1/2 X 1 BOLT		01
06	0531062679	LEFT TRANSMISSION SUPPORT PEANUTS		01
07	0503011075	3/4" UNC NUT		08
08	0503010797	3/4" X 4" BOLT		08
09	0531052183	BEARING SHAFT TRANSMISSION LINE PEANUT SEED	62	02
10	0511050617	FRONT SEED ROW BEARING	63	02
11	0503010406	501025 CLAMPING RING (FOR AXLE)		02
12	0502012819	17Z GEAR WITH HEX HOLE		02
13	0531052164	STRETCH 17Z CHAIN 40-1 PEANUTS	64	04
14	0503010019	1/2" SPRING WASHER		04
15	0503010060	1/2" NUT		04
16	0511017302	FLAT WASHER		02
17	0503014854	40-1 CHAIN X 135 LINK + MENDING		02
18	0531062680	PEANUTS RIGHT TRANSMISSION SUPPORT		01
19	0531063629	GEAR 23Z X 45 X FLEX HEX		02
20	0503010707	501030 CLAMPING RING (FOR AXLE)		02
21	0502012789	FIXER SUPPORT FERTILIZER ROW		02
22	0561015843	3/4 X 2070 HEX AXLE		01

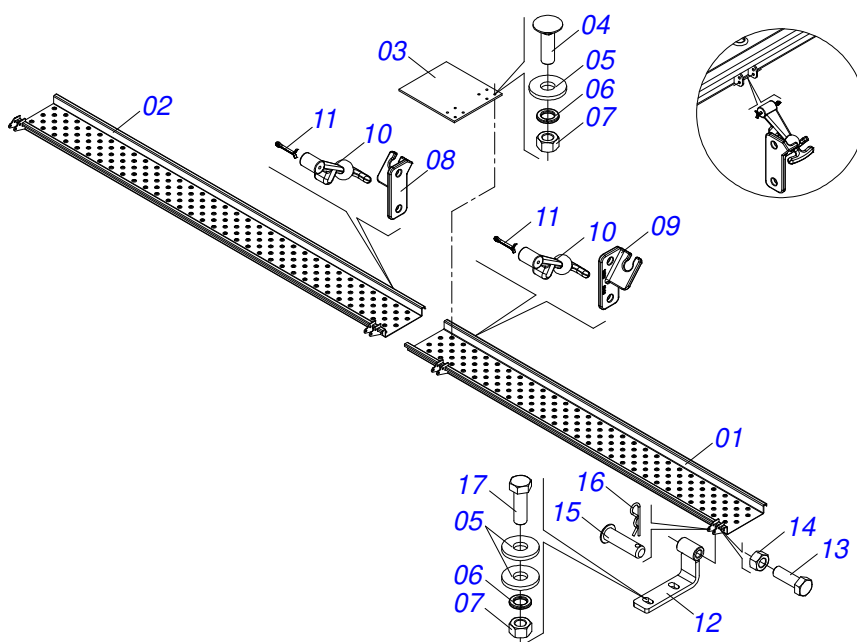


Item	Code	Description	See page	QT
01	0531060350	RIGHT PLATFORM 4790 LEFT MACHINE	01	
02	0531060351	LEFT PLATFORM 4790 LEFT MACHINE	01	
03	0581015863	PLATFORM ENHANCEMENT PROTECTION	01	
04	0501010942	3/8" X 1-1/4" BOLT	02	
05	0501010984	FLAT WASHER	18	
06	0503010025	3/8" SPRING WASHER	10	
07	0503010026	3/8" NUT	10	
08	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
09	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
10	0503011333	COVER FIXER	02	
11	0503010274	5/32"X 2" COTTERPIN	02	
12	0521068316	JOINT SUPPORT	04	
13	0503010741	1/2" X 2-3/4" BOLT	04	
14	0503011336	1/2" HEX SELF ADJUSTING NUT	04	
15	0521010549	COUPLING SHAFT	04	
16	0503030168	HAIR PIN	04	
17	0503010849	3/8" X 1-1/2" BOLT	08	

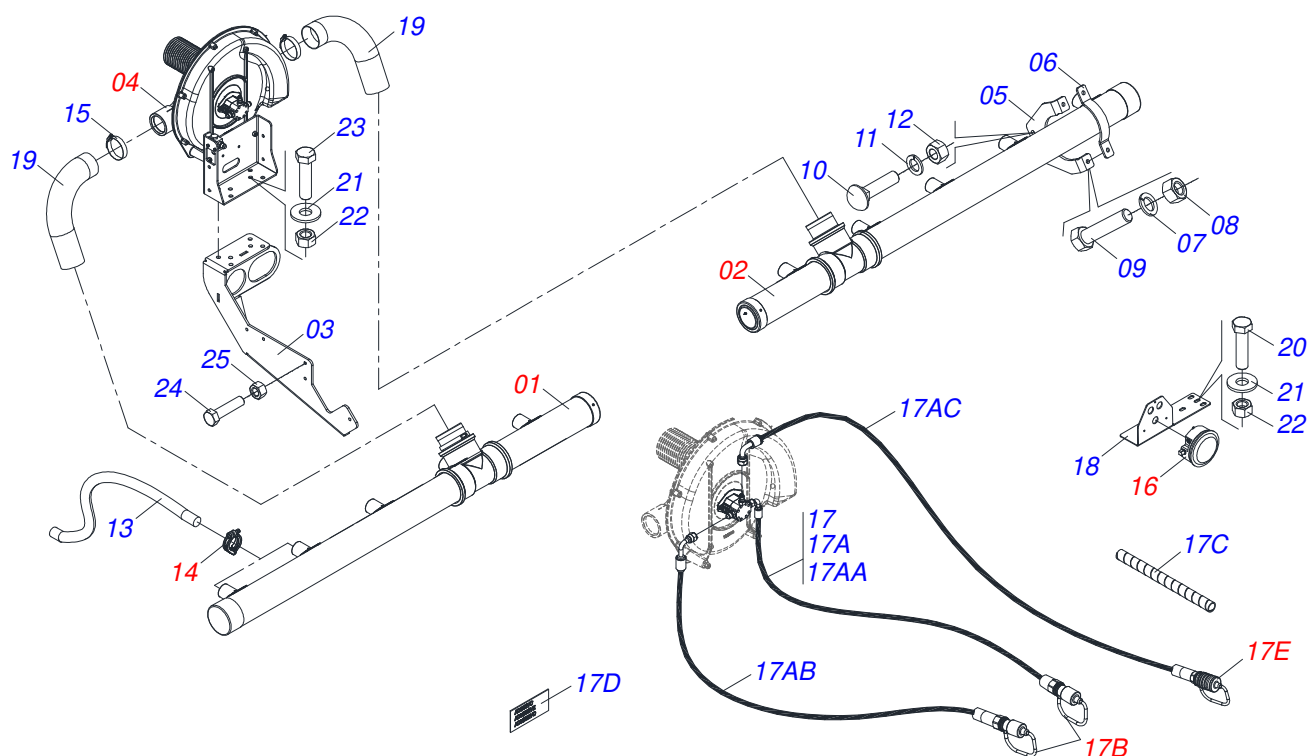


Item	Code	Description	See page	QT
01	0531054323	AIR CONDUCTOR 06 MOUTH LEFT	164	01
02	0531054325	AIR CONDUCTOR 05 RIGHT BUTTONS	165	01
03	0521066426	TURBINE SUPPORT		01
04	0511059527	TURBINE P.P ASSEMBLY CSC	97	01
05	0571019755	FIXER LOWER REAR DRIVER AIR		04
06	0521018402	AIR CONDUCTOR CLAMP		04
07	0503010179	LOCK WASHER		08
08	0503010337	5/16" NUT		08
09	0503010371	5/16" X 1" BOLT		08
10	0501010942	3/8" X 1-1/4" BOLT		08
11	0503010025	3/8" SPRING WASHER		08
12	0503010026	3/8" NUT		08
13	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		11
14	0521052549	CLAMP	100	22
15	0503011372	102 TO 121 CLAMP		04
16	0503013584	VACUUM GAUGE		01
17	0511057906	HOSE ASSY		01
17A	0511057840	ASSY TURBINE HOSE REAR		01
17AA	0521052534	HOSE 1/2 X 7012 TC-TM YELLOW / RED		01
17AB	0521052535	HOSE 1/2 X 7012 TC-TM YELLOW / BLUE		01
17AC	0521052536	HOSE 3/8 X 7012 TC-TM YELLOW / GREEN		01
17B	0501053834	MALE QUICK COUPLER	10	02
17C	0581010092	SPRING PROTECTION PLASTIC HOSE 3/4		01
17D	0503033981	ADHESIVE LABEL		01
17E	0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	101	01
18	0571013731	VACUUM GAUGE SUPPORT		01
19	0561011377	HOSE 4 X 2200		02
20	0503011082	C1/2" X 1.3/4" SCREW		01
21	0503010019	1/2" SPRING WASHER		03
22	0503010060	1/2" NUT		03
23	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02




Item	Code	Description	See page	QT
24	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		04
25	0503012412	5/8 UNC SELF LOCKING NUT		04

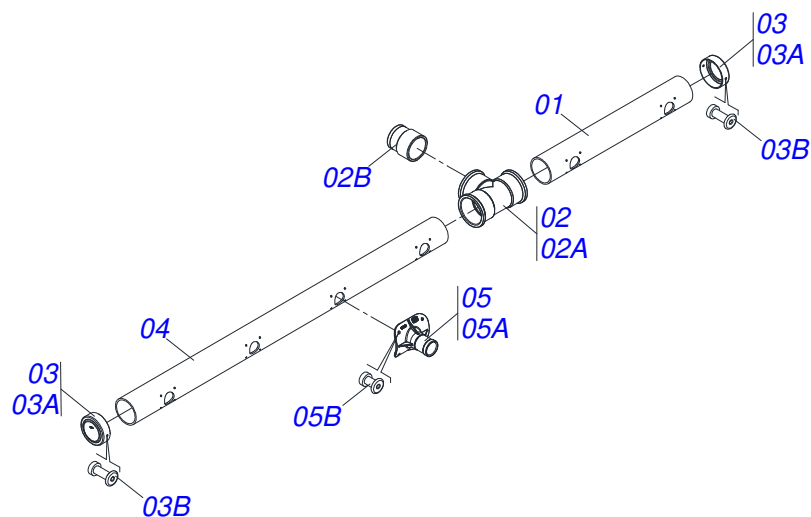

Item	Code	Description	See page	QT
01	0501212223	AIR CONDUCTOR BODY 2 MOUTH 4 HOLES		01
02	0511057036	AIR DISTRIBUTOR BOARD		01
02A	0503012567	T-JOIN FOR TUBE 110		01
02B	0581013890	SOCKET DISTRIBUTOR AR		01
03	0521056049	AIR DISTRIBUTOR CAP WITH RIVET		02
03A	0503034763	AIR DITRIBUTOR PUMP		01
03B	0503015341	POP RIVET		02
04	0591014985	AIR CONDUCTOR BODY 4 SPECIAL OUTLETS		01
05	0521056048	AIR DISTRIBUTOR NOZZLE 1.1 / 2 WITH RIVET		06
05A	0503034812	SOCKET DISTRIBUTOR AR		01
05B	0503012856	POP RIVET		04

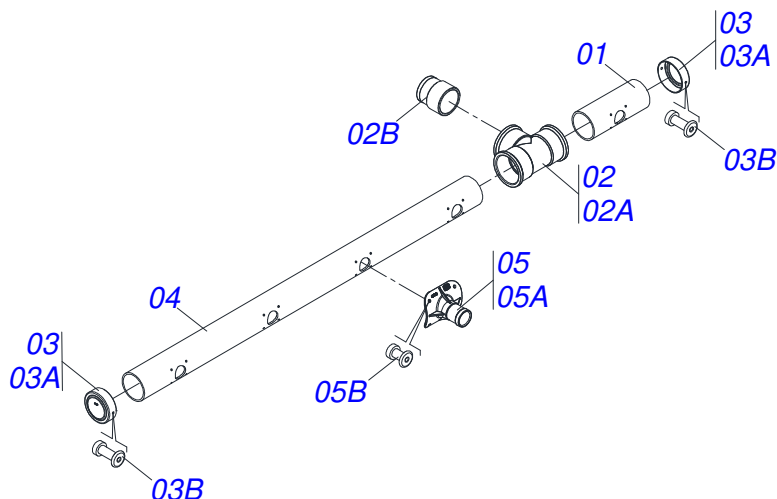

Item	Code	Description	See page	QT
01	0591014348	CONDUCTIVE BODY AIR 1 MOUTH		01
02	0511057036	AIR DISTRIBUTOR BOARD		01
02A	0503012567	T-JOIN FOR TUBE 110		01
02B	0581013890	SOCKET DISTRIBUTOR AR		01
03	0521056049	AIR DISTRIBUTOR CAP WITH RIVET		02
03A	0503034763	AIR DITRIBUTOR PUMP		01
03B	0503015341	POP RIVET		02
04	0591014985	AIR CONDUCTOR BODY 4 SPECIAL OUTLETS		01
05	0521056048	AIR DISTRIBUTOR NOZZLE 1.1 / 2 WITH RIVET		05
05A	0503034812	SOCKET DISTRIBUTOR AR		01
05B	0503012856	POP RIVET		04

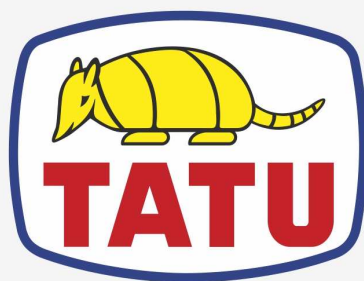

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

