

ROW CROP PLANTERS

**COP CA - 07/09 LINES - CSU
(FROM 04/2022)**

Code: 0501093257
Series: S-0913
Revision: 00
Date Revision: ABRIL/2022

PARTS CATALOGUE



MARCHESAN



PRODUCTS

Code	Description
0111300040	COP CA 7/7 MH CSU S-0913
0111300039	COP CA 9/8 CSU S-0913
0111300018	COP CA 9/9 MH CSU S-0913
0111300032	COP CA 9/9 MH CSU PM400 S-0913

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX

0909096195	ASSY FRAME	1
0501059662	CONJUNTO RODADO DIREITO SEMI MONTADO	2
0501059663	SET WHEELED LEFT SEMI MOUNTED	3
0501059655	HUB CARRYING-WHEELS	4
0511053887	WHEEL FIXING ASSY	5
0511055725	TRANSMISSION ASSEMBLY	6
0511053898	SET OF INTERNAL TRANSMISSION	7
0511040424	RH TRANSMISSION DRIVING ASSY	8
0501049265	LH TRANSMISSION DRIVING ASSY	9
0511053897	TRANSMISSION ASSEMBLY	10
0511048348	RIGHT GEAR BOX ASSY	11
0501048790	AXLE WITH RING	12
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	13
0501056443	GEAR HOUSING BEARING	14
0501056444	BEARING WITH ROLLING	15
0501056271	GEARBOX CLOSED BEARING	16
0511048349	RIGHT GEAR BOX ASSY	17
0501054655	CHAIN TENSIONER ASSY	18
0501054686	GEAR BOX CHAIN TENSIONER	19
0501052788	CHAIN TENSIONER ASSY	20
0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	21
0501053846	MIDDLE BEARING OF THE TRANSMISSION	22
0501052775	ROW SEED BEARING	23
0511053915	HEXAGONAL SHAFT ASSEMBLY	24
0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	25
0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	26
0511053899	TRANSMISSION ASSEMBLY	27
0511053886	HEXAGONAL AXLE ASSEMBLY	28
0511053918	FERTILIZER BOX ASSEMBLY	29
0511053892	FERTILIZER BOX ASSEMBLY	30
0511051077	SUPPORT RIGHT BOX FERTILIZER WITH DISTRIBUTOR	31
0511051078	SUPPORT LEFT BOX FERTILIZER WITH DISTRIBUTOR	32
0501059656	FERTILIZER SUPORT RIGHT BOX	33
0501059657	FERTILIZER SUPORT LEFT BOX	34
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	35
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	36
0511053919	HYDRAULIC ASSEMBLY	37
0511053893	HYDRAULIC ASSEMBLY	38
0511053894	HYDRAULIC CYLINDER ASSEMBLY	39
0511058411	HYDRAULIC CYLINDER	40
0511053920	OIL PIPE ASSEMBLY	41
0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	42
0511052909	HYDRAULIC MARKER	43
0511058449	HYDRAULIC CYLINDER	44
0501050633	ROW MARKER DISK ASSEMBLY	45
0511052197	WHEELS HOSE ASSEMBLY	46
0501053834	MALE QUICK COUPLER	47
0511053895	OIL DUCT ASSEMBLY	48
0511053917	PLATFORM ASSEMBLY	49
0511053891	PLATFORM ASSEMBLY	50
0511053916	HANDRAIL ASSEMBLE	51
0511053889	HANDRAIL ASSEMBLE	52
0511053890	HANDRAIL ASSEMBLE	53
0511053085	ASSY FIXER HEADER	54
0511043100	DRAWBAR ASSY	55



MARCHESAN

INDEX

0511058192	ASSY PORT MANUAL INSTRUCCION	56
0501055579	DRAW BAR ESTABILIZER	57
0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER	58
0511056393	PLANTING OF MONITORING ASSEMBLY	59
0511059709	SUPPOT BASE	60
0521050112	ASSEMBLY CSU	61
0521050110	ASSEMBLY CSU	62
0521050109	ASSEMBLY CSU	63
0511057690	3" ARTICULATED SEED CONDUCTOR	64
0521051927	TOWER SUPPORT HOPPER	65
0511058101	ASSEMBLY CSU C3 SEMI MOUNTED 4045/4495	66
0511058100	2 BOXES WITH 9 CONDUCTORS ASSEMBLY	67
0511058368	EAR MOVABLE	68
0909096196	SEED/FERTILIZER ROW ASSEMBLE	69
0501059362	LONG SEED ROW FRONT	70
0501052769	BEARING WITH 17Z GEAR	71
0511054635	BEARING AXLE BODY	72
0511054884	TRANSMISSION BOX	73
0501059363	5/8" HEX AXLE BEARING	74
0501059350	LONG FRONT SEED ROW	75
0501059349	SHORT SEED ROW FRONT	76
0501059361	SHORT SEED ROW FRONT	77
0501059326	UNIVERSAL JOINT AXLE	78
0511052317	RH SEED ROW REAR	79
0501059631	DDD SEED 15 X 15 RIGHT	80
0501054167	BOX DDD ASSY DPL 15 RIGHT	81
0501054168	BOX DDD ASSY DPL 15 LEFT	82
0511052319	RIGHT REAR SEED ROW	83
0511051783	RIGHT REAR SEED ROW TITANIUM	84
0511052318	LH SEED ROW REAR	85
0501059632	DDD SEED 15X15 LEFT	86
0511051782	LEFT REAR SEED ROW	87
0511052320	REAR LEFT ROW SEED TITANIUM	88
0511059023	SEED SYSTEM ASSY	89
0501051094	ASSY SEED DISTRIBUTOR	90
0501051119	DOUBLE PULLEY ROCKER'S	91
0521059094	SIGMA SOY SINGLE SEED SYSTEM	92
0531051514	SIGMA SOY SEED SYSTEM	93
0511057289	ASSY SEED DEFLECTOR	94
0511053825	SEMI-ASSEMBLED SHORT FERTILIZER LINE	95
0511053826	SEMI-ASSEMBLED LONG FERTILIZER LINE	96
0521045198	PRESS WHEELS	97
0501052297	DEPTH WHEELS REGULATOR ASSY	98
0501052538	DEPTH BAND WITH ARMS	99
0511054333	COMPACT WHEEL RIGHT WITH BEARING	100
0511054334	COMPACT WHEEL LEFT WITH BEARING	101
0501052908	COMPACTOR WHEEL WITH BEARING	102
0521051424	WHEEL SYSTEM DEPTH/COMPACTOR QUICK ADJUSTMENT	103
0501056769	DEPTH WHEELS REGULATOR ASSY	104
0521051423	COMPACTOR SUPPORT	105
0511050077	WHEEL STRIPED	106
0511052287	DEPTH WHEEL HUB ASSY	107
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	108
0511058650	SEMI-MOUNTED DEPTH CONTROL	109
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	110



 
MARCHESAN

INDEX

0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE		111
0501052627	ASSY DEPTH WHEEL BOX		112
0511048339	24" BLADE DISC ASSY		113
0511052024	FAST CLOSING SET		114
0521050525	FIXER FERTILIZER CONDUCTOR		115

ASSY FRAME

0909096195

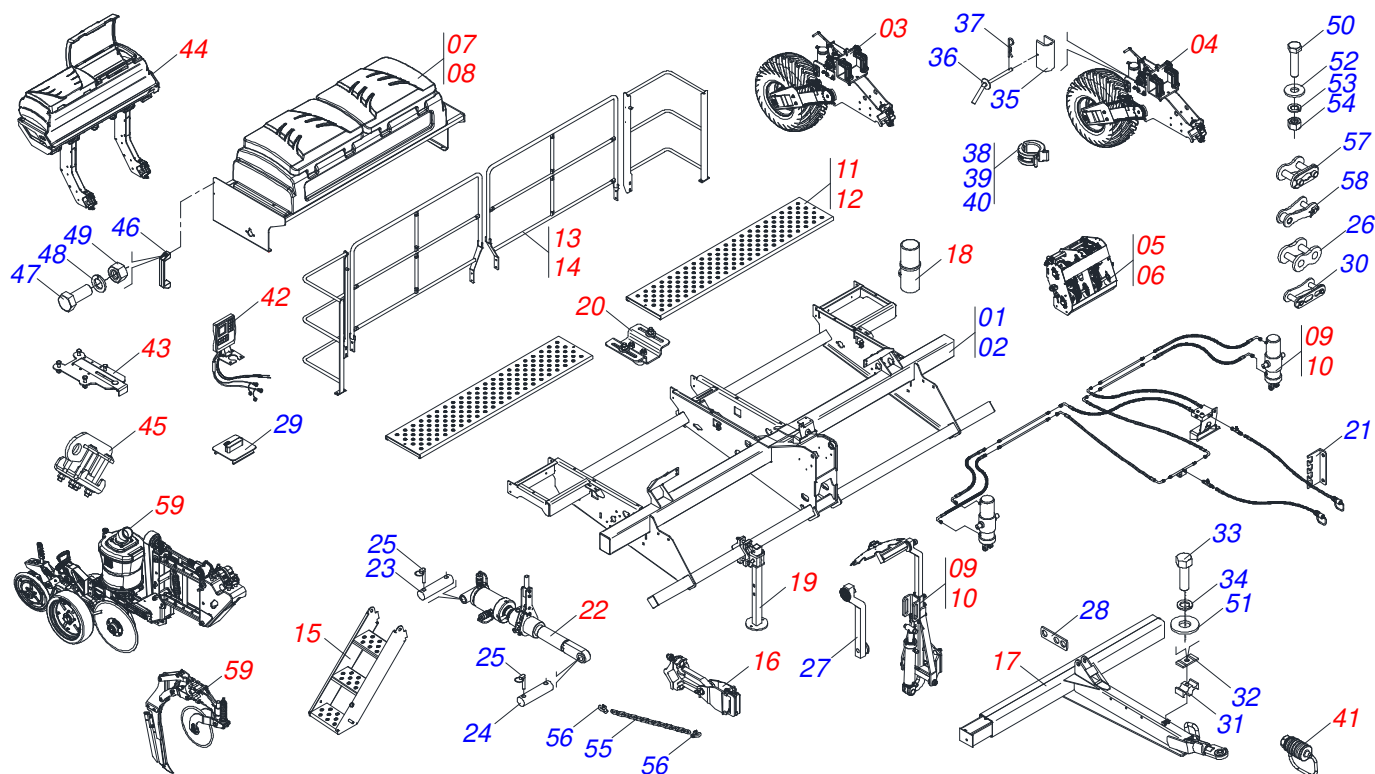


Item	Code	Description	See page	07 09
01	0521062422	FRAME		01 00
02	0521061323	FRAME		00 01
03	0501059662	CONJUNTO RODADO DIREITO SEMI MONTADO	2	01 01
04	0501059663	SET WHEELED LEFT SEMI MOUNTED	3	01 01
05	0511055725	TRANSMISSION ASSEMBLY	6	01 00
06	0511053899	TRANSMISSION ASSEMBLY	27	00 01
07	0511053918	FERTILIZER BOX ASSEMBLY	29	02 00
08	0511053892	FERTILIZER BOX ASSEMBLY	30	00 02
09	0511053919	HYDRAULIC ASSEMBLY	37	01 00
10	0511053893	HYDRAULIC ASSEMBLY	38	00 01
11	0511053917	PLATFORM ASSEMBLY	49	01 00
12	0511053891	PLATFORM ASSEMBLY	50	00 01
13	0511053916	HANDRAIL ASSEMBLE	51	01 00
14	0511053889	HANDRAIL ASSEMBLE	52	00 01
15	0511053890	HANDRAIL ASSEMBLE	53	02 02
16	0511053085	ASSY FIXER HEADER	54	02 02
17	0511043100	DRAWBAR ASSY	55	01 01
18	0511058192	ASSY PORT MANUAL INSTRUCCION	56	01 01
19	0511058191	REST ASSY		01 01
20	0511059323	PLATFORM TRANSPORT SUPPORT		04 04
21	0541014576	HOSE FIXER ASSY		01 01
22	0501055579	DRAWBAR ESTABILIZER	57	01 01
23	0521018532	1.4" X 12" COUPLING SHAFT		01 01
24	0521018531	1.4" X 4.5" COUPLING SHAFT		01 01
25	0503030119	LOCK PIN		02 02
26	0503010543	AMENDMENT WITH LOCK		04 04
27	0511066652	400 TURNBUCKLE		02 02
28	0561019087	DRAWBAR TRANSPORT LOCK		01 01
29	0503032624	SILO FERTILIZER GUTTER		06 06
30	0503010780	N-2050 AMENDMENT		06 06
31	0502012702	BODY SUPPORT CLAMP		03 03

ASSY FRAME

0909096195

Item	Code	Description	See page	07 09
32	0531011180	UPPER BODY CLIP		01 01
33	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04 04
34	0503010180	7/16" SPRING WASHER		04 04
35	0521013022	TRANSPORT LOCK		02 02
36	0501068994	0.3" X 3.1" LOCK PIN		02 02
37	0503030168	CUPILLA		02 02
38	0501047885	ROD STOP		03 03
39	0501047886	ROD STOP		03 03
40	0501047887	ROD STOP		03 03
41	0501053835	FEMALE QUICK COUPLER		02 02
42	0511056393	PLANTING OF MONITORING ASSEMBLY	59	01 01
43	0511059709	SUPPOT BASE	60	07 09
44	0521050112	ASSEMBLY CSU	61	01 00
44.	0511058101	ASSEMBLY CSU C3 SEMI MOUNTED 4045/4495	66	00 01
45	0511058368	EAR MOVABLE	68	02 02
46	0503011957	NYLON LUG		02 02
47	0503010371	5/16" X 1" BOLT		04 04
48	0503010179	LOCK WASHER		04 04
49	0503010337	5/16" NUT		04 04
50	0503013185	3/4" X 5-1/2" BOLT		02 02
51	0501012803	FLAT WASHER		01 01
52	0511017305	FLAT WASHER		02 02
53	0503010023	3/4" SPRING WASHER		02 02
54	0503010014	3/4" NUT		02 02
55	0503014120	CHAIN		01 01
56	0503014321	CABLE STEEL SHACKLE		02 02
57	0503011750	AMENDMENT WITH LOCK		06 06
58	0503011751	REDUCTION		06 06
59	0909096196	SEED/FERTILIZER ROW ASSEMBLE	69	07 09

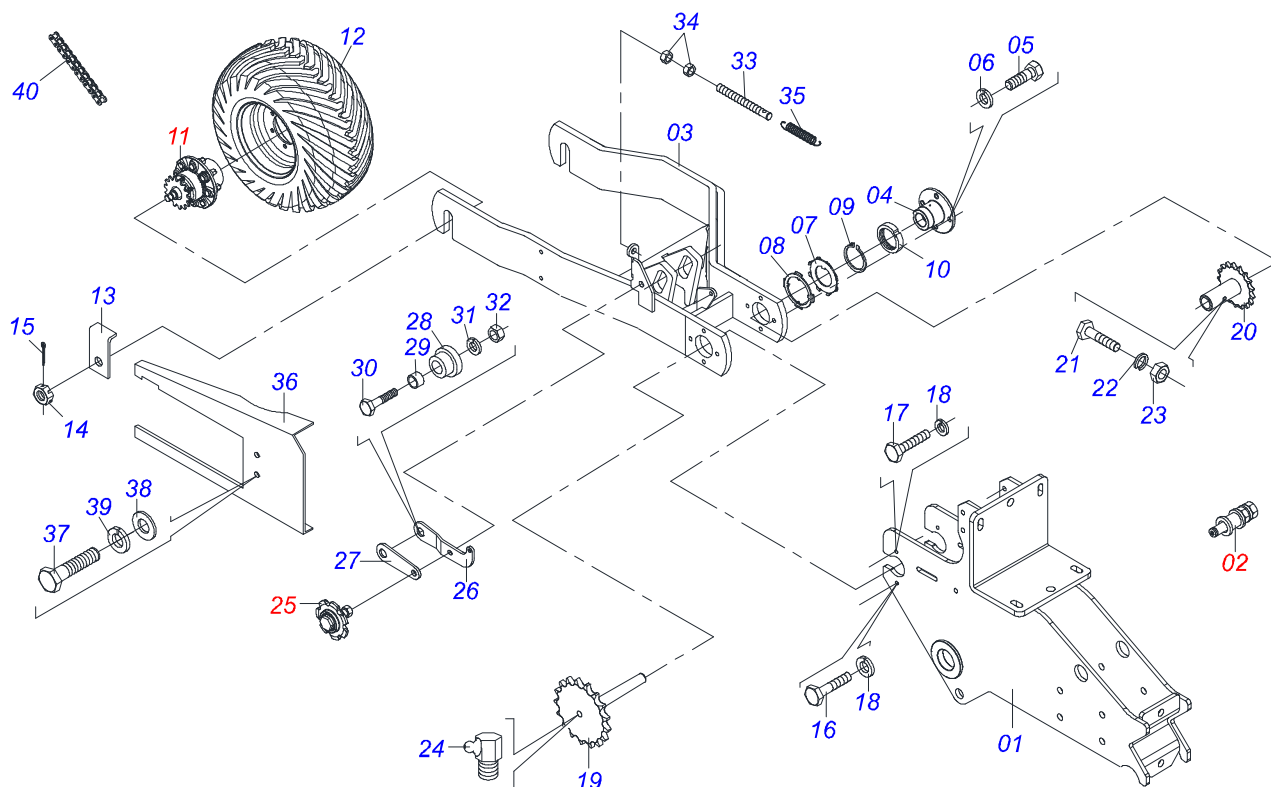 


Item	Code	Description	See page	QT
01	0511065423	WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY		01
03	0521061337	RIGHT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0501059655	HUB CARRYING-WHEELS	4	01
12	0503060602	400/60 X 15,5-14L RODA		01
13	0531015109	WHEEL AXLE LOCK		02
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010523	1/4" X 2" COTTERPIN		02
16	0503010834	1/2 X 1 BOLT		03
17	0503010395	1/2" X 1-1/4" BOLT		01
18	0503010019	1/2" SPRING WASHER		04
19	0511064769	15Z GEAR WITH AXLE		01
20	0511061809	15Z GEAR WITH COUPLING		01
21	0503011103	7/16" X 2-1/2" BOLT		01
22	0503010180	7/16" SPRING WASHER		01
23	0503010244	7/16" NUT		01
24	0503010004	1890 GREASE FITTING		02
25	0501053522	WHEEL CHAIN TENSIONER		01
26	0531018654	CHAIN TIGHTENER SUPPORT		01
27	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
28	0531016916	SLEEVE BEARING SUPPORT		02
29	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE		01
30	0503010899	5/8" X 2-1/4" BOLT		01
31	0503010027	5/8" SPRING WASHER		01



CONJUNTO RODADO DIREITO SEMI MONTADO

0501059662

Item	Code	Description	See page	QT
32	0503010013	5/8" NUT		01
33	0501013491	5/8" TENSIONER SPRING		01
34	0503010013	5/8" NUT		02
35	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
36	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
37	0501018535	1/2 X 1 BOLT		02
38	0511017302	FLAT WASHER		02
39	0503010019	1/2" SPRING WASHER		02
40	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01

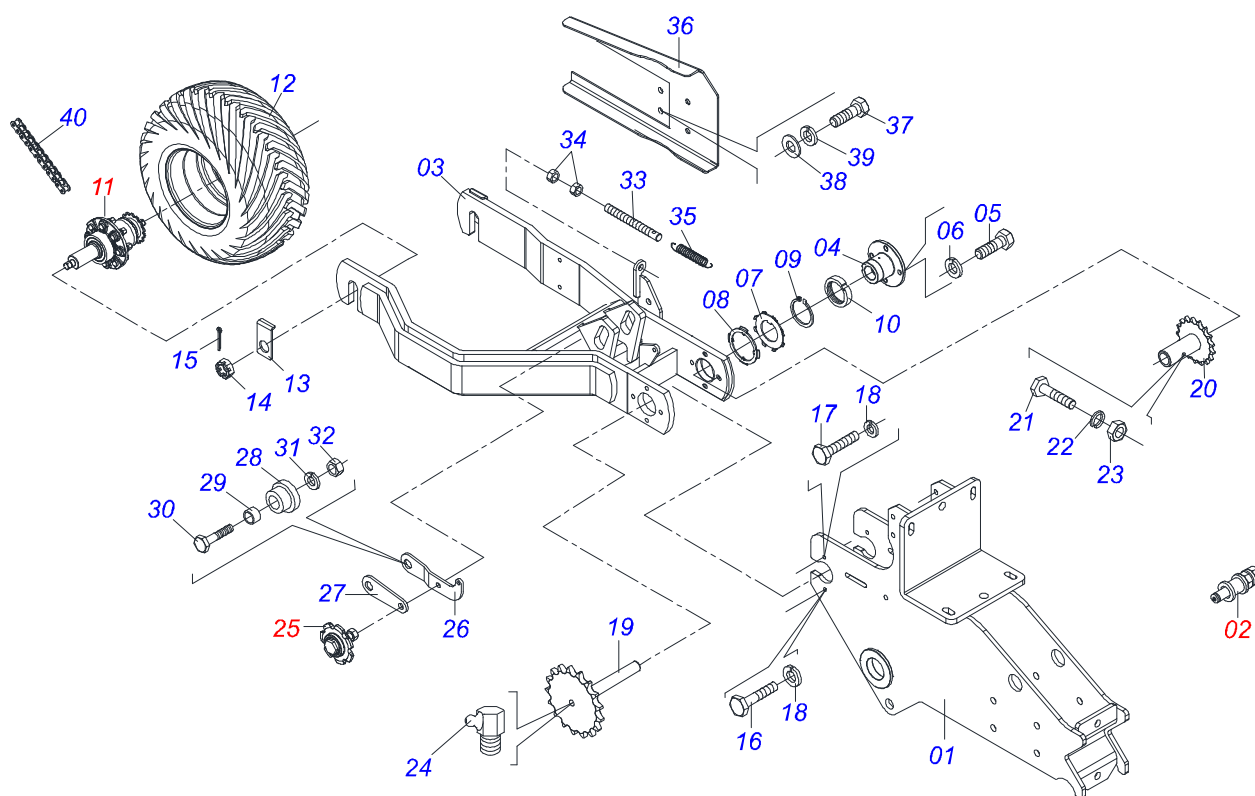 

Item	Code	Description	See page	QT
01	0511065423	WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY		01
03	0521061338	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0501059655	HUB CARRYING-WHEELS	4	01
12	0503060602	400/60 X 15,5-14L RODA		01
13	0531015109	WHEEL AXLE LOCK		02
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010523	1/4" X 2" COTTERPIN		02
16	0503010834	1/2 X 1 BOLT		03
17	0503010395	1/2" X 1-1/4" BOLT		01
18	0503010019	1/2" SPRING WASHER		04
19	0511064769	15Z GEAR WITH AXLE		01
20	0511061809	15Z GEAR WITH COUPLING		01
21	0503011103	7/16" X 2-1/2" BOLT		01
22	0503010180	7/16" SPRING WASHER		01
23	0503010244	7/16" NUT		01
24	0503010004	1890 GREASE FITTING		02
25	0501053522	WHEEL CHAIN TENSIONER		01
26	0531018654	CHAIN TIGHTENER SUPPORT		01
27	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
28	0531016916	SLEEVE BEARING SUPPORT		02
29	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE		01
30	0503010899	5/8" X 2-1/4" BOLT		01
31	0503010027	5/8" SPRING WASHER		01




SET WHEELED LEFT SEMI MOUNTED

0501059663


Item	Code	Description	See page	QT
32	0503010013	5/8" NUT		01
33	0501013491	5/8" TENSIONER SPRING		01
34	0503010013	5/8" NUT		02
35	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
36	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
37	0501018535	1/2 X 1 BOLT		02
38	0511017302	FLAT WASHER		02
39	0503010019	1/2" SPRING WASHER		02
40	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01

HUB CARRYING-WHEELS

 
0501059655

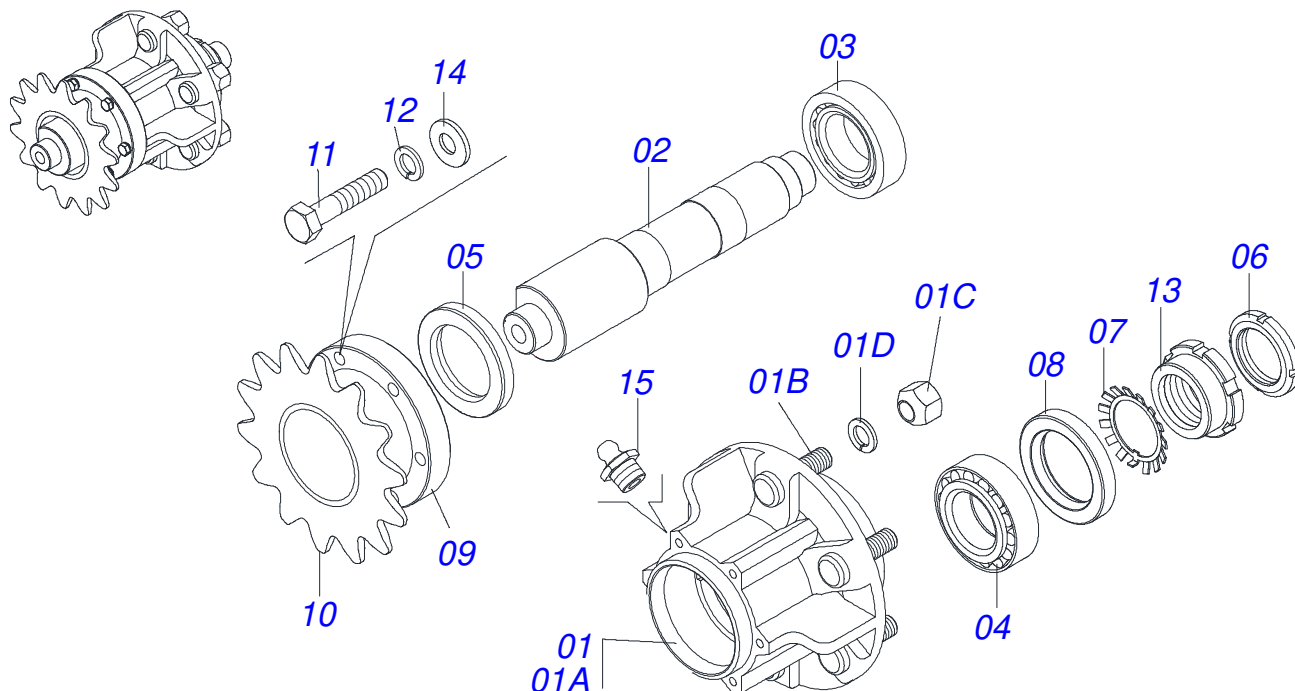


Item	Code	Description	See page	QT
01	0501110751	HUB AND SPINDLE WITH BOLT		01
01A	0502040522	HUB CARRYING-WHEELS		01
01B	0503011339	M22 X 1,5 X 72 BOLT		08
01C	0503011341	M22 X 0.6" NUT GR8 NUT		08
01D	0503011340	SPHERICAL SPRING WASHER		08
02	0561015609	WHEEL AXLE		01
03	0503010059	33287/33462 ROLLER BEARING		01
04	0503010007	3982/3920 ROLLER BEARING		01
05	0503010050	SEAL 00085-B		01
06	0503012702	KM-12 NUT		02
07	0503012703	LOCK WASHER		01
08	0503010528	SEAL # 00838-B		01
09	0551017794	PROTRACTOR GEAR		01
10	0502012177	14Z FLANG GEAR		01
11	0503010397	5/16" X 1-3/4" BOLT		06
12	0503011444	SPRING WASHER		06
13	0503011052	1.1/4" X 0.77" CASTLE NUT		02
14	0501010694	FLAT WASHER		06
15	0503010002	1800 GREASE FITTING		01

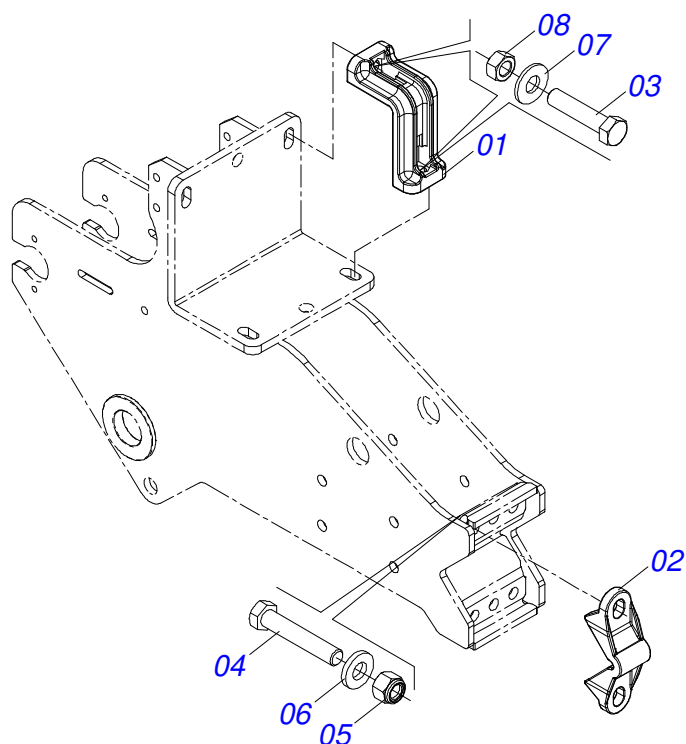 

Item	Code	Description	See page	QT
01	0502012400	ROW FERTILIZER FIXER		04
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		04
03	0503010797	3/4" X 4" BOLT		08
04	0503016485	BOLT 3/4		08
05	0503010152	3/4" SELF LOCKING NUT		08
06	0541010763	FLAT WASHER		08
07	0501010322	FLAT WASHER		08
08	0503011255	3/4" LOCK NUT		08

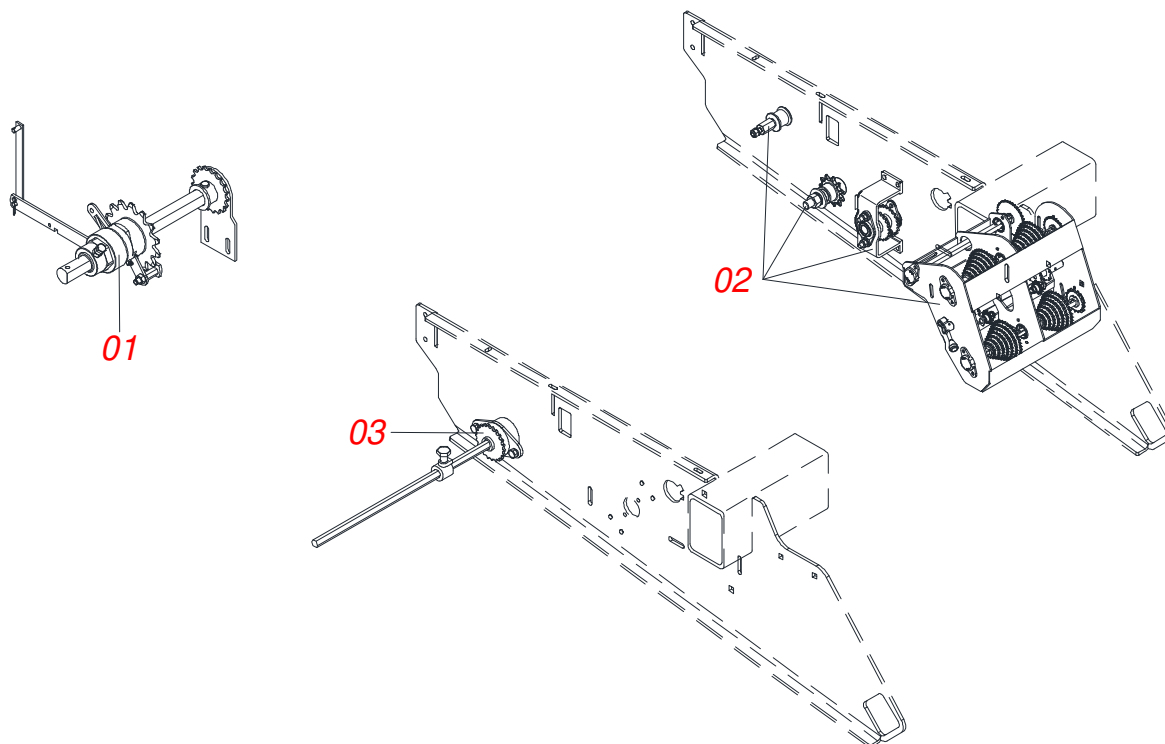 

Item	Code	Description	See page	QT
01	0511053898	SET OF INTERNAL TRANSMISSION	7	01
02	0511053897	TRANSMISSION ASSEMBLY	10	01
03	0511053915	HEXAGONAL SHAFT ASSEMBLY	24	01

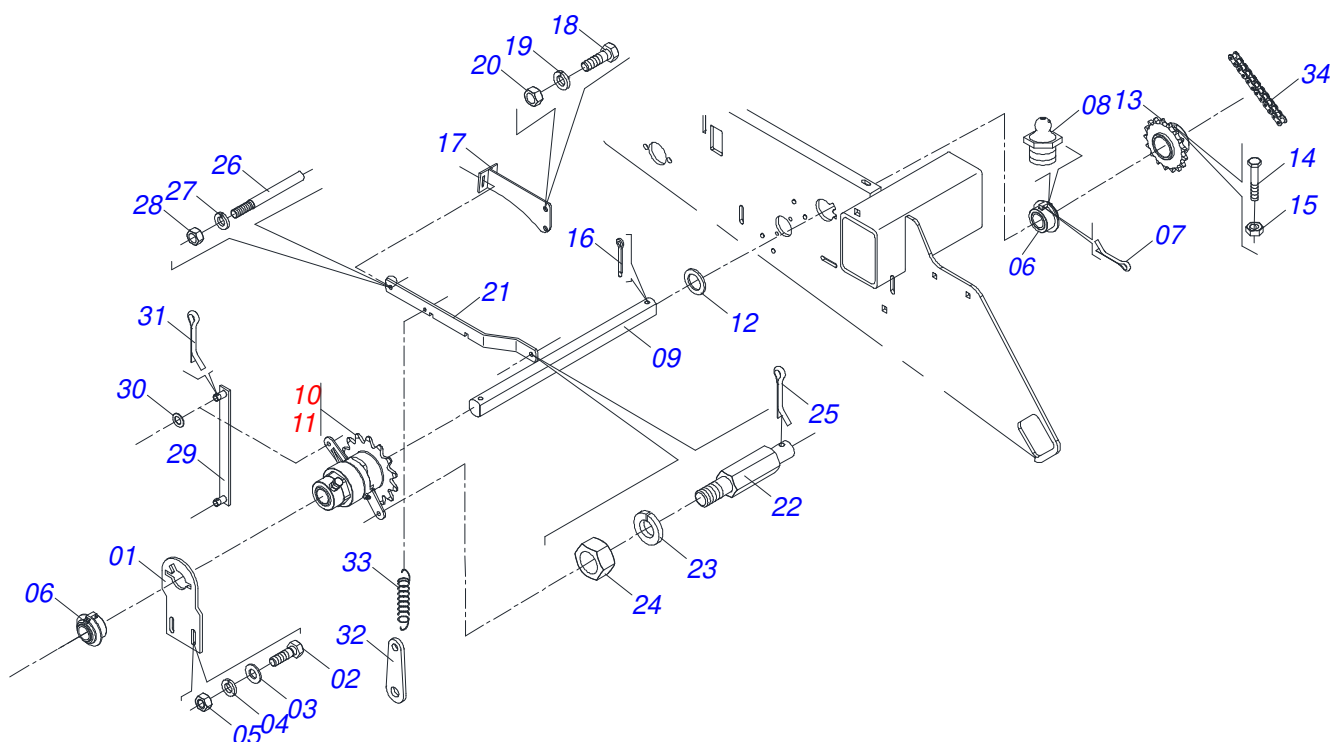 


Item	Code	Description	See page	QT
01	0531019365	PLATE FIXER BEARING AXIS		02
02	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		04
03	0511017302	FLAT WASHER		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04
06	0501110639	BEARING		04
07	0503010257	1/8" X 1" COTTERPIN		04
08	0503010002	1800 GREASE FITTING		04
09	0561015384	518 MOTOR SHAFT		02
10	0511040424	RH TRANSMISSION DRIVING ASSY	8	01
11	0501049265	LH TRANSMISSION DRIVING ASSY	9	01
12	0501018466	FLAT WASHER		08
13	0511064105	17Z P 5/8" RH 1.4" GEAR		02
14	0503010937	5/16" X 3" BOLT		02
15	0503010337	5/16" NUT		04
16	0503010010	1/4" X 2.1/2" COTTERPIN		02
17	0511061896	RATCHET DISMANTLE SUPPORT		02
18	0503010395	1/2" X 1-1/4" BOLT		04
19	0503010019	1/2" SPRING WASHER		04
20	0503010060	1/2" NUT		04
21	0521018428	ASSEMBLE AND DISASSEMBLE ARM		02
22	0521015800	REAR LEVER FASTENER		02
23	0503010025	3/8" SPRING WASHER		02
24	0503010026	3/8" NUT		02
25	0503010140	1/8" X 3/4" COTTERPIN		02
26	0521018560	HANDLE LEVER		02
27	0503010019	1/2" SPRING WASHER		02
28	0503010060	1/2" NUT		02
29	0511065949	ASSEMBLE AND DISASSEMBLE ARM		02
30	0501010984	FLAT WASHER		04
31	0503010140	1/8" X 3/4" COTTERPIN		04


**SET OF INTERNAL TRANSMISSION**

 0511053898


Item	Code	Description	See page	QT
32	0541014046	SPRING HITCH		02
33	0503030242	0.8" X 4.7" X 0.08" TRACTION SPRING		02
34	0503012708	2050 CHAIN X 34 LINKS + REDUCTION		02

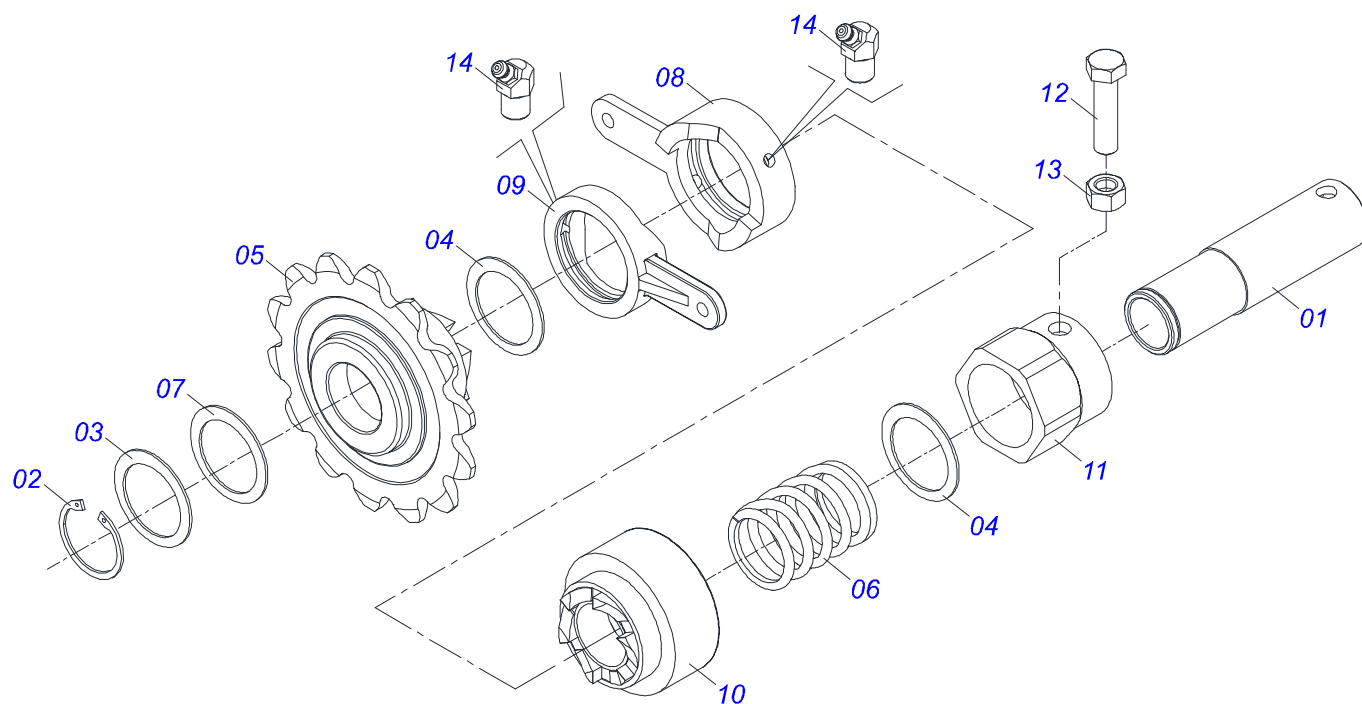

Item	Code	Description	See page	QT
01	0521017590	GUIDE AXLE		01
02	0503010542	501045 CLAMPING RING (FOR AXLE)		01
03	0521017593	FLAT WASHER		01
04	0501019734	FLAT WASHER		02
05	0502011329	14Z GEAR WITH RIGHT DRAGGER		01
06	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
07	0501019735	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		01
09	0502010711	RIGHT CAM,LARGER		01
10	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
11	0502011996	SLEEVE FIXER		01
12	0503030678	BOLT 1/2 UNC X 1.1/2 C50P G.5 ZN		01
13	0503010060	1/2" NUT		01
14	0503010003	1845 GREASE FITTING		02

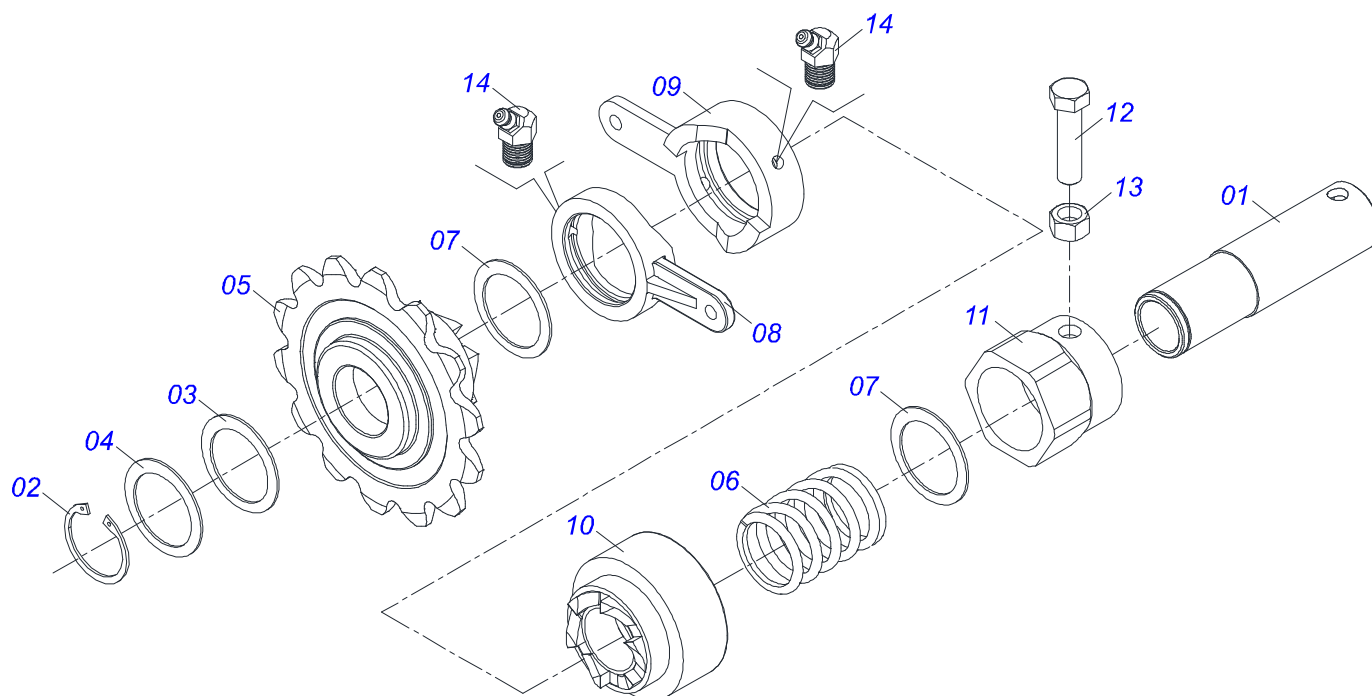 


Item	Code	Description	See page	QT
01	0521017590	GUIDE AXLE		01
02	0503010542	501045 CLAMPING RING (FOR AXLE)		01
03	0521017593	FLAT WASHER		01
04	0501019735	FLAT WASHER		01
05	0502011331	LH 14Z P 1.25" GEAR WITH DRAGGER		01
06	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		01
09	0502010721	LEFT CAM,LARGER		01
10	0502011995	LH DRIVING AXLE FOLLOWER		01
11	0502011996	SLEEVE FIXER		01
12	0503010395	1/2" X 1-1/4" BOLT		01
13	0503010060	1/2" NUT		01
14	0503010003	1845 GREASE FITTING		02

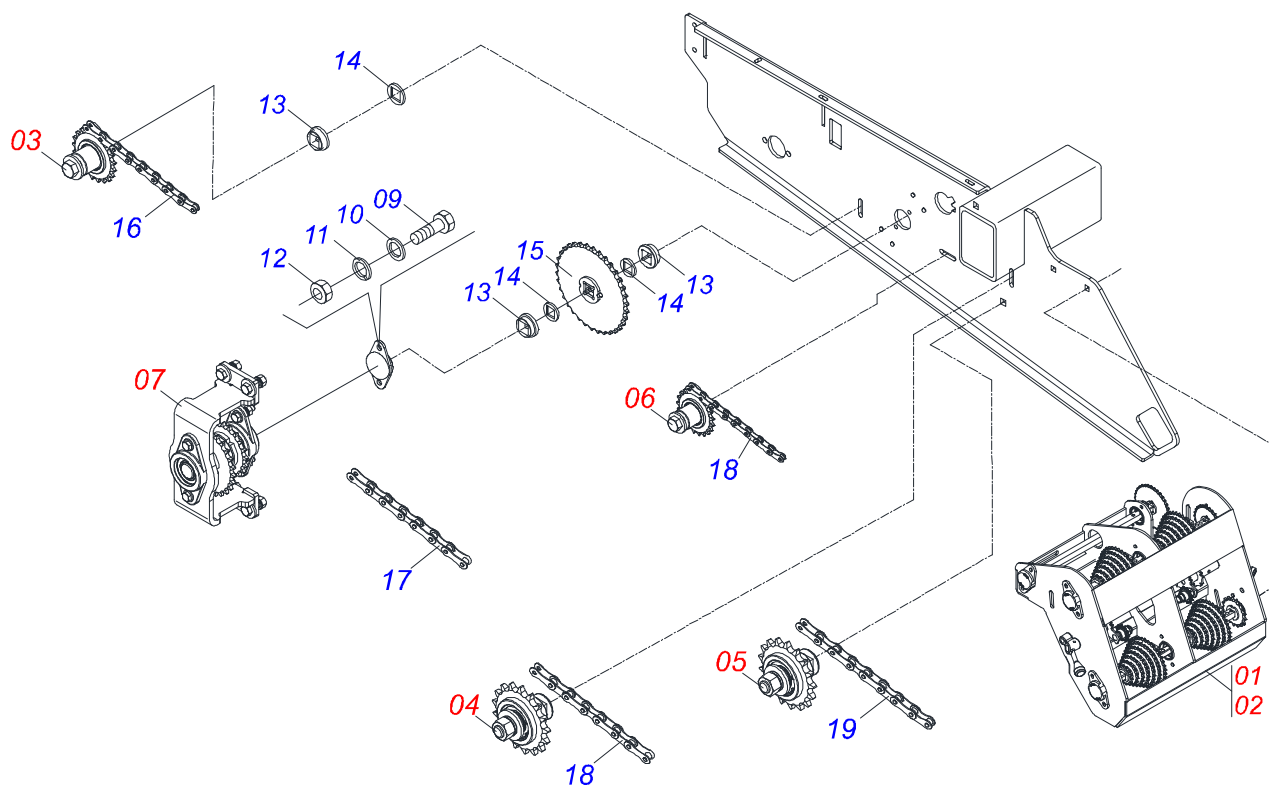 

Item	Code	Description	See page	QT
01	0511048348	RIGHT GEAR BOX ASSY	11	01
02	0511048349	RIGHT GEAR BOX ASSY	17	01
03	0501054655	CHAIN TENSIONER ASSY	18	02
04	0501054686	GEAR BOX CHAIN TENSIONER	19	02
05	0501052788	CHAIN TENSIONER ASSY	20	02
06	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	21	02
07	0501053846	MIDDLE BEARING OF THE TRANSMISSION	22	02
08	0561014215	BEARING COVER LOWER ROW FRAME		02
09	0503010365	NUT		04
10	0501010694	FLAT WASHER		04
11	0503010179	LOCK WASHER		04
12	0503010337	5/16" NUT		04
13	0503030303	SUPPORT WASHER		04
14	0501010637	FLAT WASHER		04
15	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		02
16	0503016852	50-1 X 85 CHAIN LINK + MENDING		02
17	0503015364	40-1 X 51 CHAIN LINK + MENDING		02
18	0503012390	40-1 CHAIN X 93 LINK + MENDING		02
19	0503013214	40-1 CHAIN X 97 LINK + MENDING		02

RIGHT GEAR BOX ASSY

 0511048348

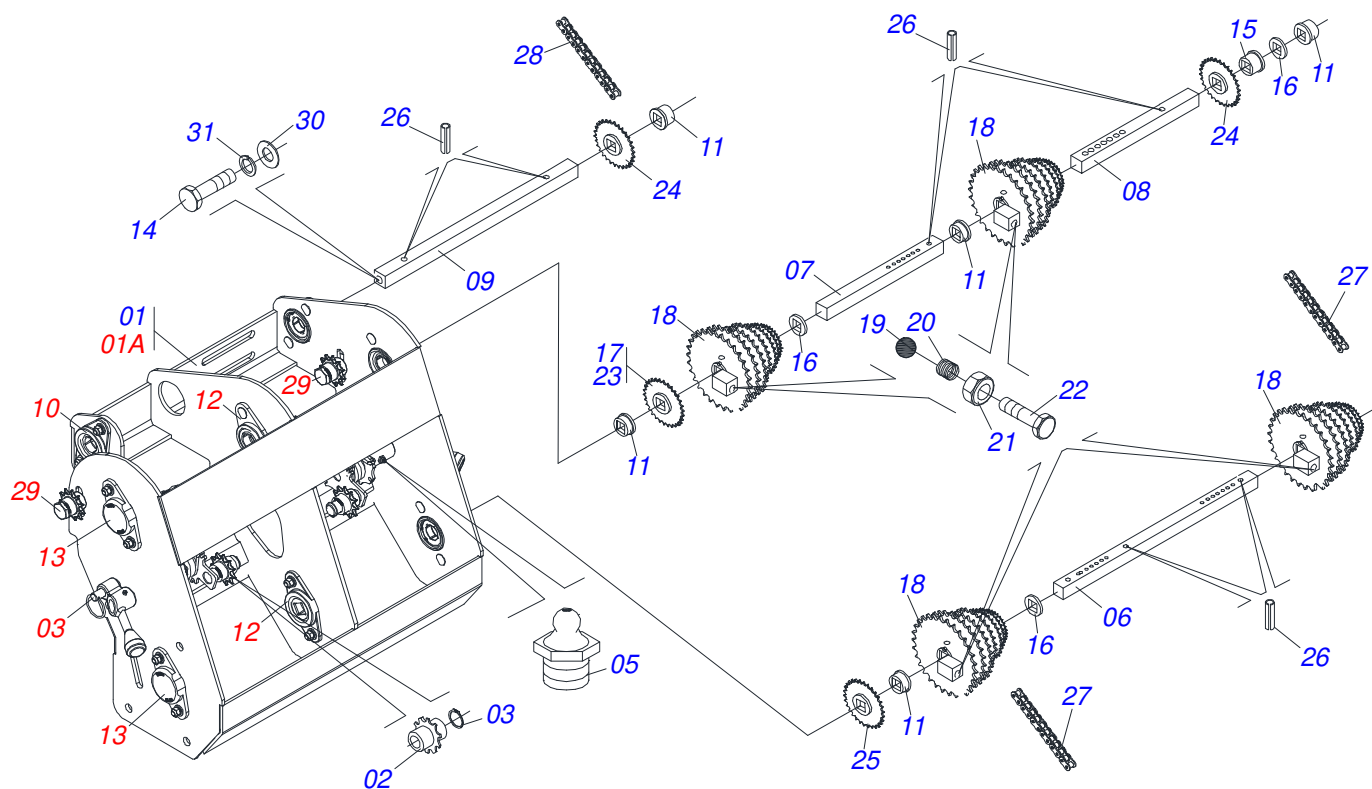

Item	Code	Description	See page	07 09
001	0511050639	RIGHT GEAR BOX ASSY		01
001A	0501058212	SEMI MOUNTED RIGHT CHANGE		01
002	0503031805	11Z 1/2" GEAR		04
003	0503010302	501019 SEAL RING		04
004	0501048790	AXLE WITH RING	12	02
005	0503010002	1800 GREASE FITTING		02
006	0551018209	DRIVING AXLE		01
007	0521018259	DRIVEN AXLE		01
008	0551018210	DRIVEN AXLE		01
009	0551018211	INTERM SHAFT		01
010	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	13	01
011	0503030303	SUPPORT WASHER		05
012	0501056443	GEAR HOUSING BEARING	14	02
013	0501056271	GEARBOX CLOSED BEARING	16	05
014	0503010256	3/8" X 3/4" BOLT		01
015	0503030275	AGRICULTURAL BEARING		01
016	0521018630	1.4" X SQUARE 0.8" WASHER		03
017	0511061822	25Z P0.5" GEAR SQUARE HOL		01
018	0502040868	GEAR CONE REPLACEMENT		04
019	0503012389	1/2 BALL		04
020	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
021	0503010060	1/2" NUT		04
022	0503010395	1/2" X 1-1/4" BOLT		04
023	0521062072	33Z GEAR		01
024	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
025	0511067501	26Z GEAR		01
026	0503010292	0.2" X 1.6" SPRING PIN		07
027	0503012204	40-1 CHAIN X 82 LINK + RED		02
028	0503012713	40-1 CHAIN X 45 LINK + MEN		01
029	0501054655	CHAIN TENSIONER ASSY	18	02
030	0501010984	FLAT WASHER		01



COP CA - 07/09 LINES - CSU


(FROM 04/2022)

Page 11


RIGHT GEAR BOX ASSY

0511048348


Item	Code	Description	See page	07 09
031	0503010025	3/8" SPRING WASHER		01

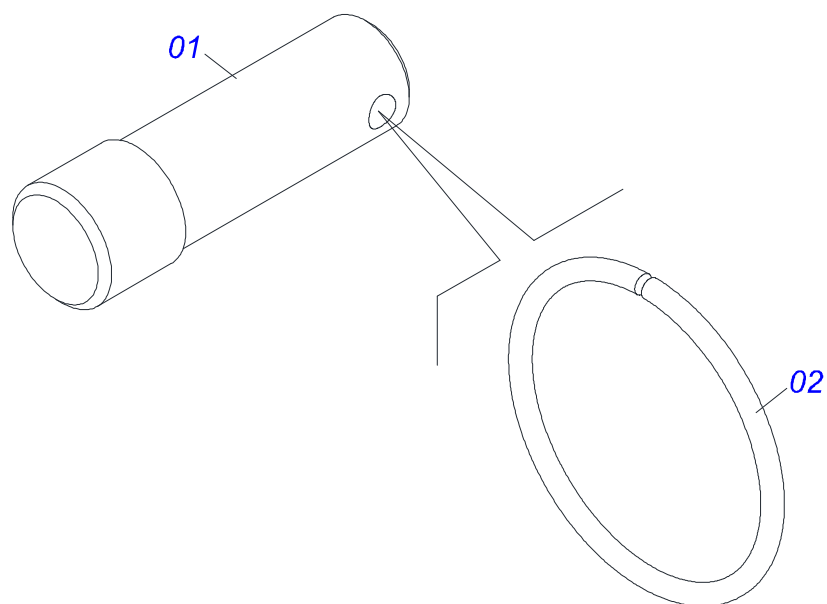 


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

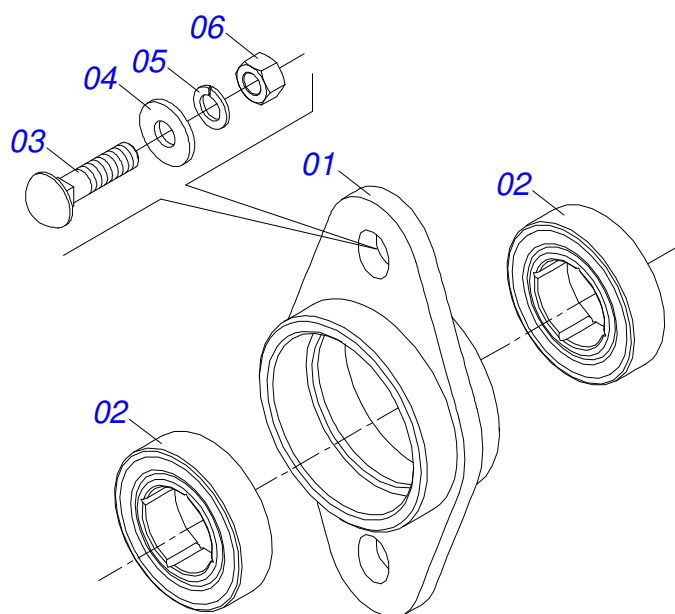 


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER		02
06	0503010337	5/16" NUT		02

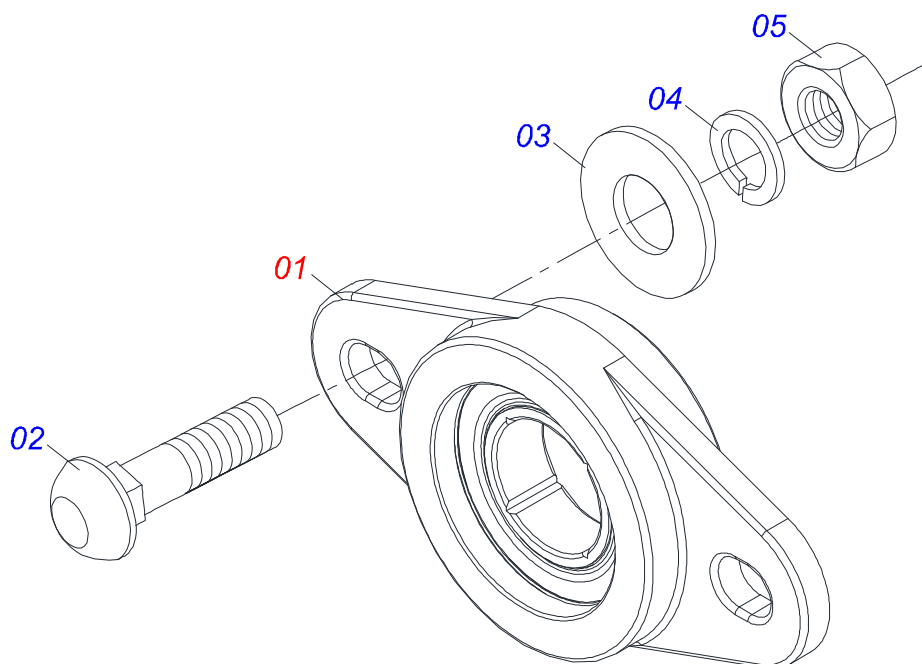 

Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	15	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

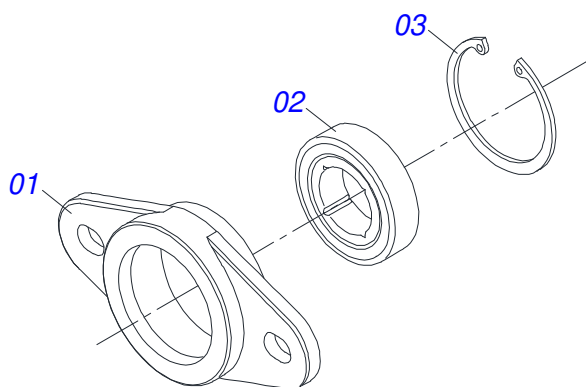 


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

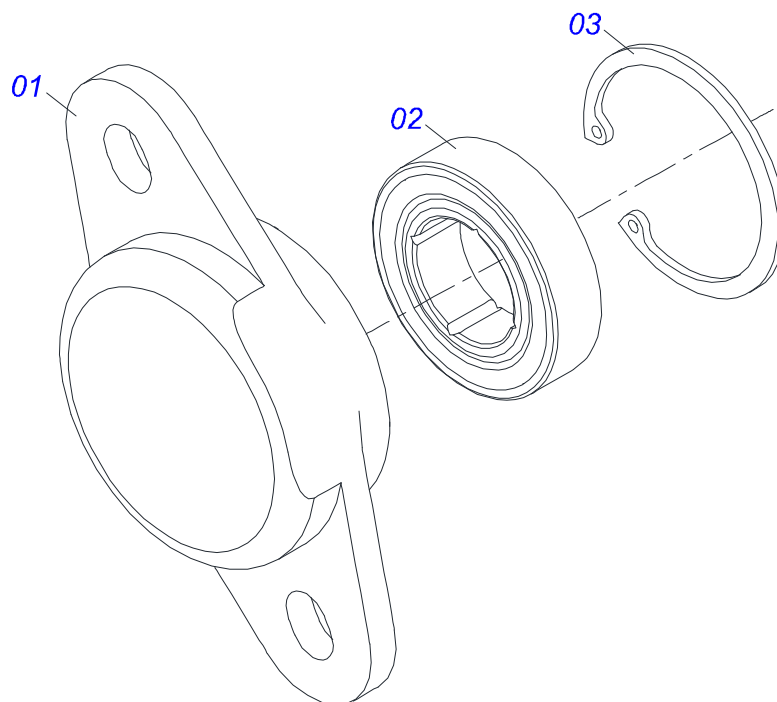 

Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

RIGHT GEAR BOX ASSY

 0511048349

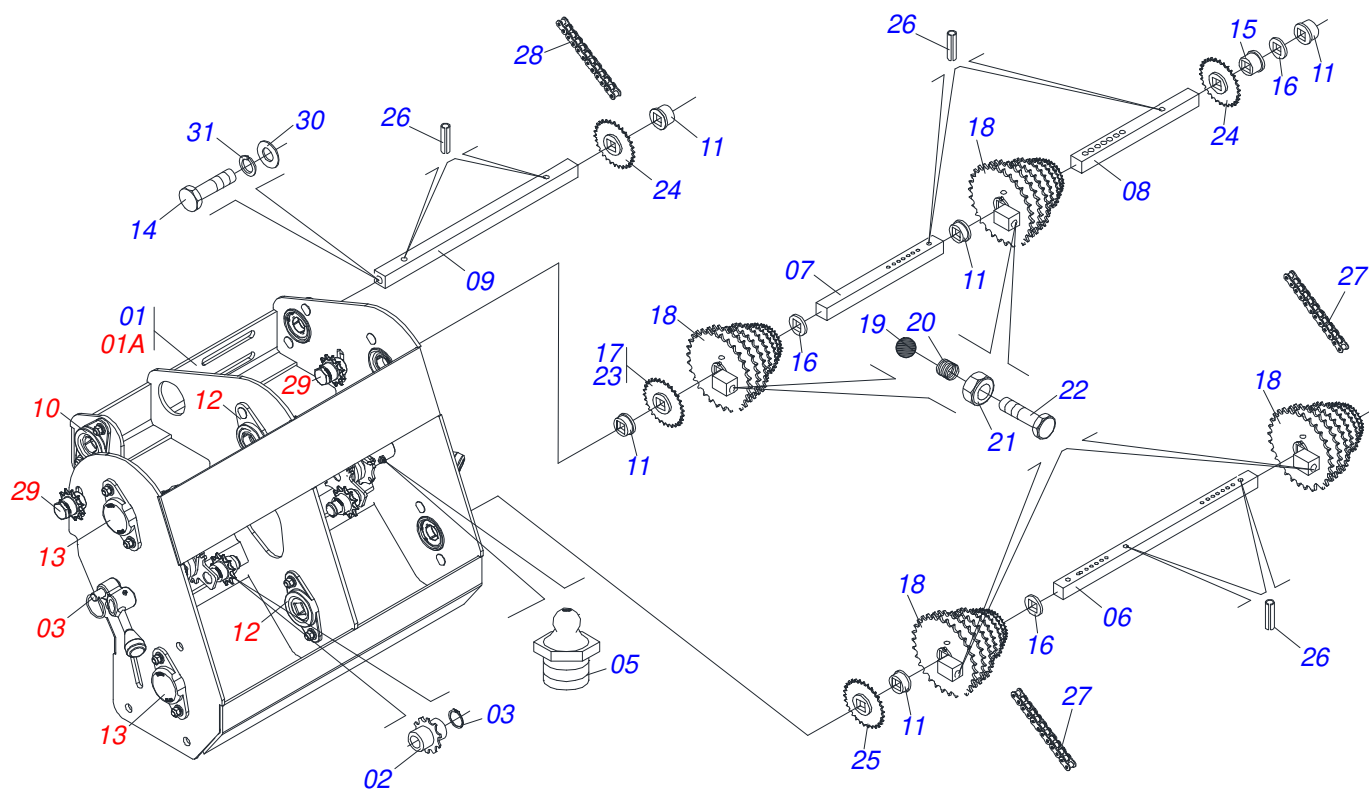

Item	Code	Description	See page	07 09
01	0501058213	LH GEAR BOX		01 01
01A	0501058213	LH GEAR BOX		01 01
02	0503031805	11Z 1/2" GEAR		12 12
03	0503010302	501019 SEAL RING		04 04
04	0501048790	AXLE WITH RING	12	02 02
05	0503010002	1800 GREASE FITTING		02 02
06	0551018209	DRIVING AXLE		01 01
07	0521018259	DRIVEN AXLE		01 01
08	0551018210	DRIVEN AXLE		01 01
09	0551018211	INTERM SHAFT		01 01
10	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	13	01 01
11	0503030303	SUPPORT WASHER		05 05
12	0501056443	GEAR HOUSING BEARING	14	02 02
13	0501056271	GEARBOX CLOSED BEARING	16	05 05
14	0503010256	3/8" X 3/4" BOLT		01 01
15	0503030275	AGRICULTURAL BEARING		01 01
16	0521018630	1.4" X SQUARE 0.8" WASHER		03 03
17	0511061822	25Z P0.5" GEAR SQUARE HOL		01 01
18	0511060396	DRIVE/DRIVEN AXLE CONE		08 08
19	0503012389	1/2 BALL		04 04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04 04
21	0503010060	1/2" NUT		04 04
22	0503010395	1/2" X 1-1/4" BOLT		04 04
23	0511061822	25Z P0.5" GEAR SQUARE HOL		01 01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02 02
25	0501069874	GEAR 17Z P 15,87 FQ 3/4		02 02
26	0503010292	0.2" X 1.6" SPRING PIN		07 07
27	0503012204	40-1 CHAIN X 82 LINK + RED		04 04
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01 01
29	0501054655	CHAIN TENSIONER ASSY	18	04 04
30	0501010984	FLAT WASHER		02 02



COP CA - 07/09 LINES - CSU


(FROM 04/2022)

Page 17


RIGHT GEAR BOX ASSY

0511048349


Item	Code	Description	See page	07 09
31	0503010025	3/8" SPRING WASHER		01 01

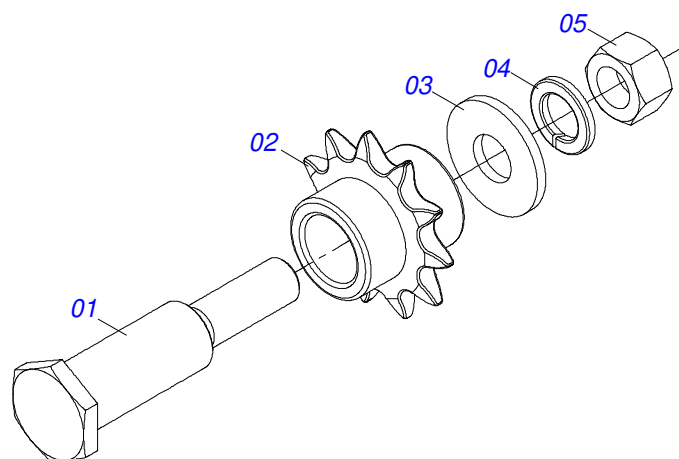 


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

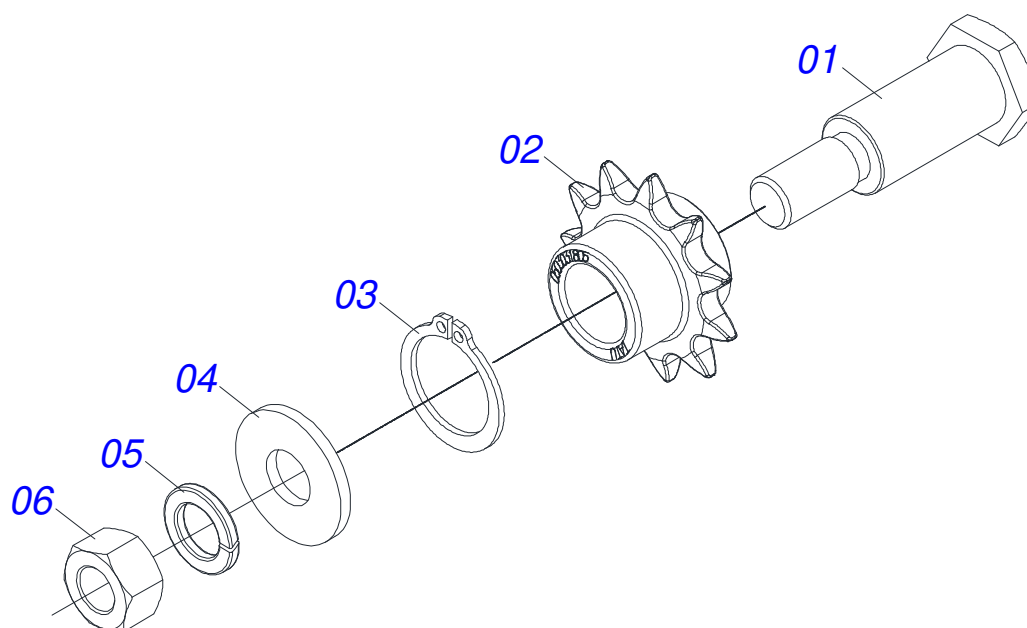 

Item	Code	Description	See page	QT
001	0531017202	AXLE CHAIN TIGHTENER		01
002	0503031806	9Z X P 5/8" GEAR		01
003	0503010302	501019 SEAL RING		01
004	0511017302	FLAT WASHER		01
005	0503010019	1/2" SPRING WASHER		01
006	0503010060	1/2" NUT		01

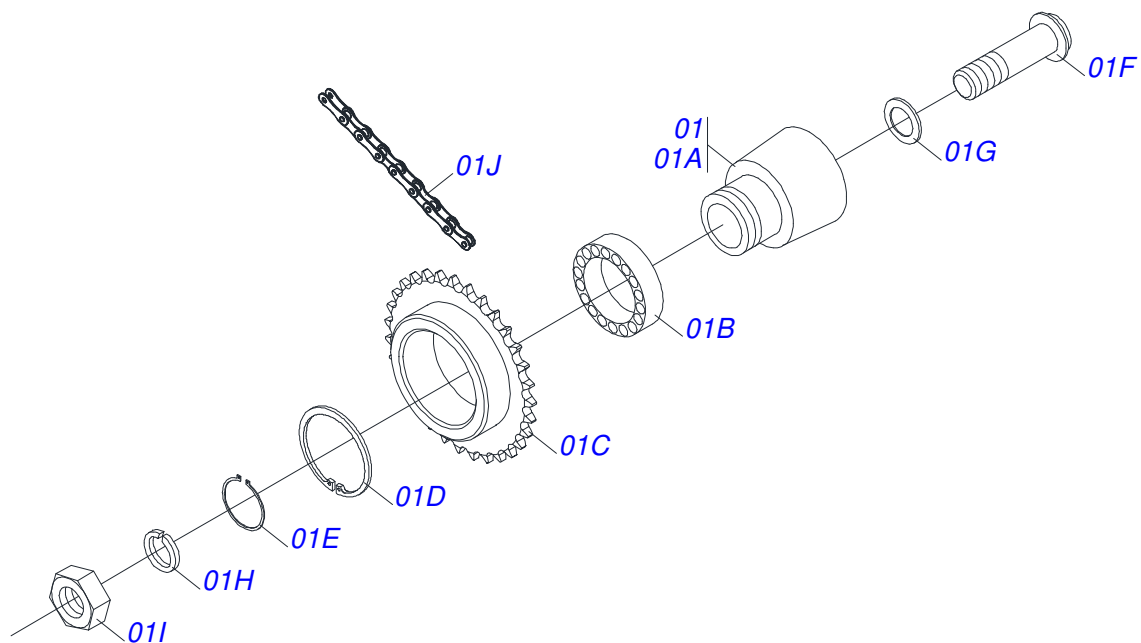 


Item	Code	Description	See page
01	0501052788	CHAIN TENSIONER ASSY	20
01A	0521018415	TIGHTENER AXLE	01
01B	0503012861	6006 2RS BALL BEARING	01
01C	0511061836	17Z GEAR	01
01D	0503012858	502075 CLAMPING RING (FOR HOLE)	01
01E	0503010707	501030 CLAMPING RING (FOR AXLE)	01
01F	0501011234	5/8" X 3" BOLT	01
01G	0501012140	FLAT WASHER	01
01H	0503010027	5/8" SPRING WASHER	01
01I	0503010013	5/8" NUT	01
01J	0503012716	CHAIN 50-1 X 3.7" LINK + MENDING	01

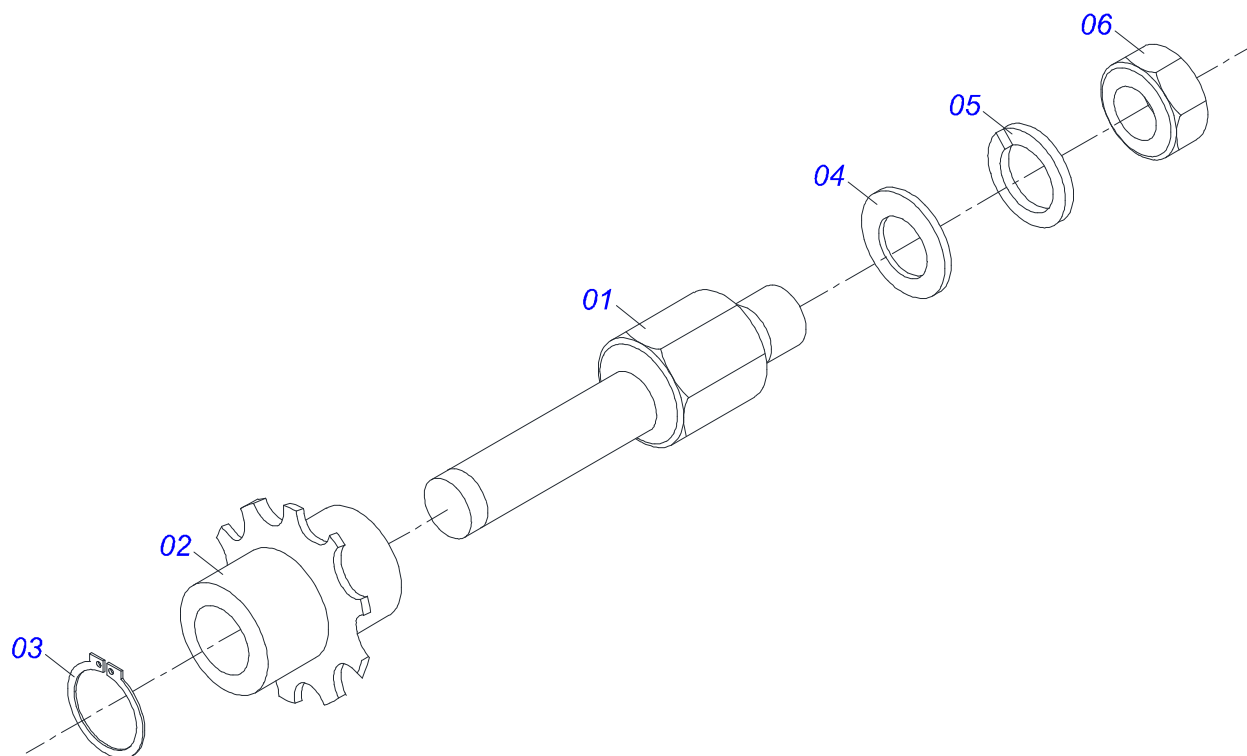 


Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

MIDDLE BEARING OF THE TRANSMISSION

 
0501053846

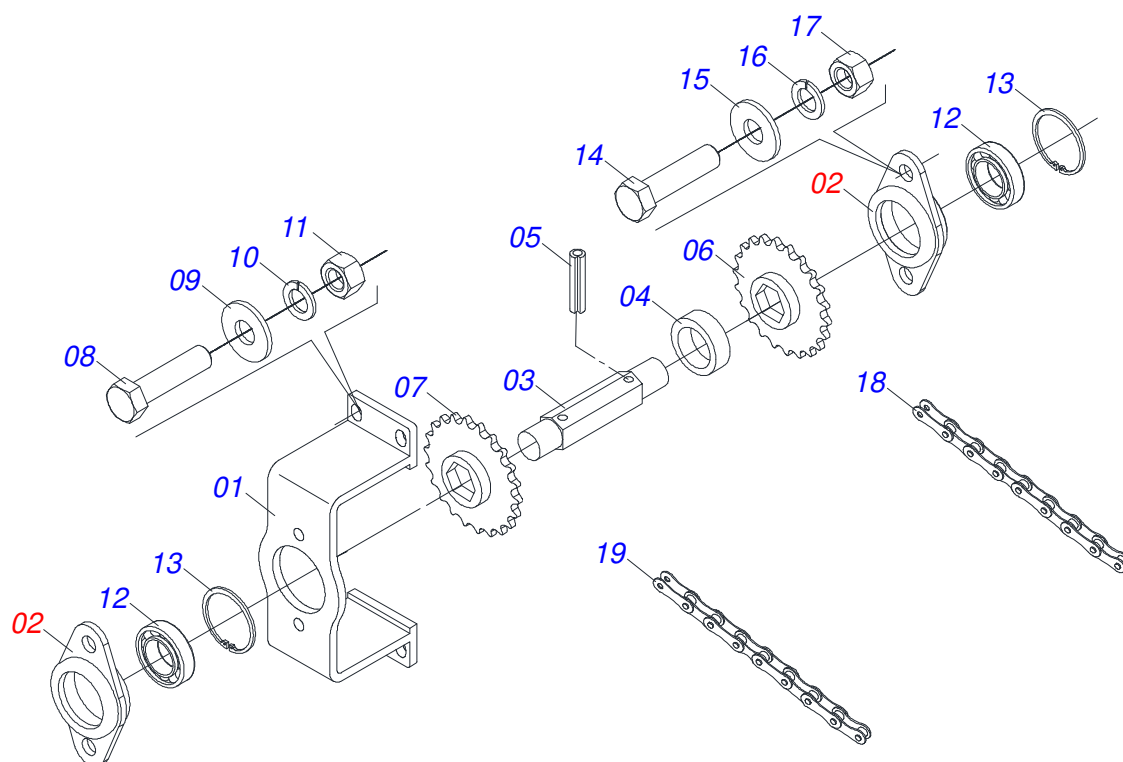


Item	Code	Description	See page
01	0511063266	INTERMEDIARY BEARING SUPPORT	01
02	0501052775	ROW SEED BEARING	23 02
03	0531013674	INTERMEDIATE AXLE	01
04	0541011184	1.1" X 2" X 0.7" SLEEVE	01
05	0503010292	0.2" X 1.6" SPRING PIN	02
06	0511063268	20Z P1/2" GEAR FOR HEX AXLE, 1"	01
07	0511063267	26Z P1/2" GEAR FOR HEX AXLE, 1"	01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	04
09	0501010984	FLAT WASHER	04
10	0503010025	3/8" SPRING WASHER	04
11	0503010026	3/8" NUT	04
12	0503011410	ROLLER BEARING	02
13	0503011105	SEAL RING	02
14	0503010371	5/16" X 1" BOLT	04
15	0501010694	FLAT WASHER	04
16	0503010179	LOCK WASHER	04
17	0503010337	5/16" NUT	04
18	0503012717	40-1 CHAIN X 101 LINK + MENDING	01
19	0503012718	40-1 CHAIN X 111 LINK + MENDING	01

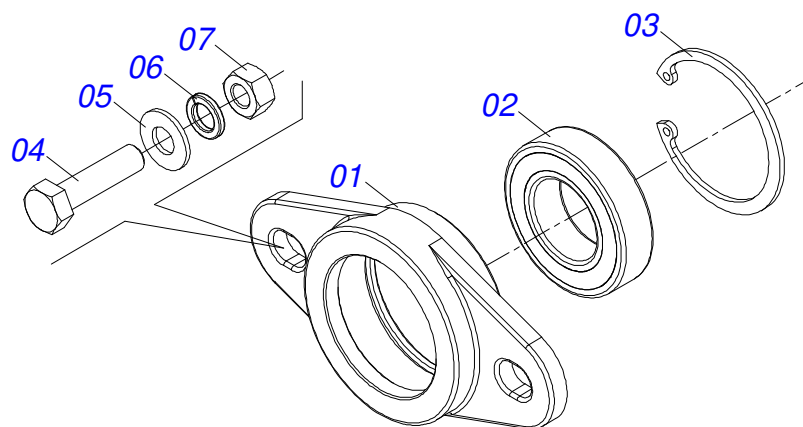 


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503010371	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER		02
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

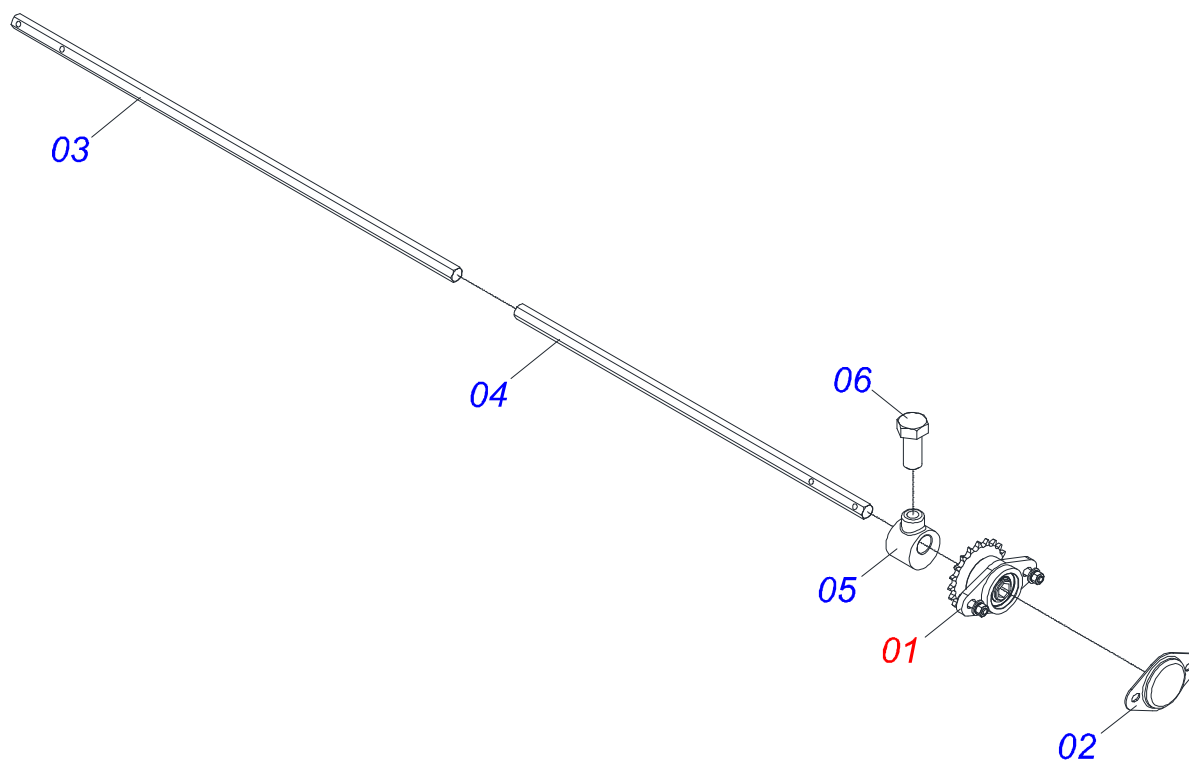 


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	25	02
02	0561014215	BEARING COVER LOWER ROW FRAME		02
03	0531016940	5/8 X 1650 RIGHT HEX AXLE		01
04	0531016941	LEFT 5/8" X 59" AXLE HEX		01
05	0502040534	SPRING GUIDE BUSHING LOCK		04
06	0501018535	1/2 X 1 BOLT		04

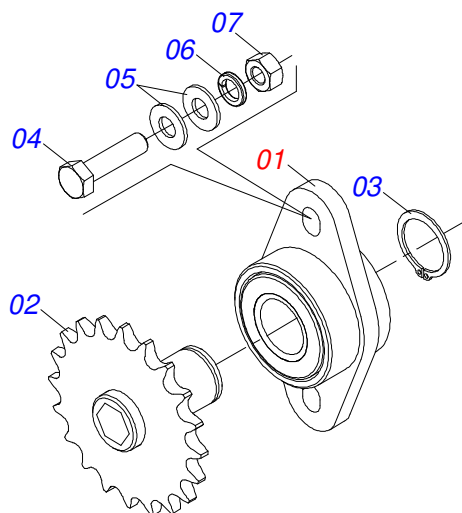 

Item	Code	Description	See page	QT
01	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	26	01
02	0511063106	20Z AXLE BEARING DOBLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0503010365	NUT		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

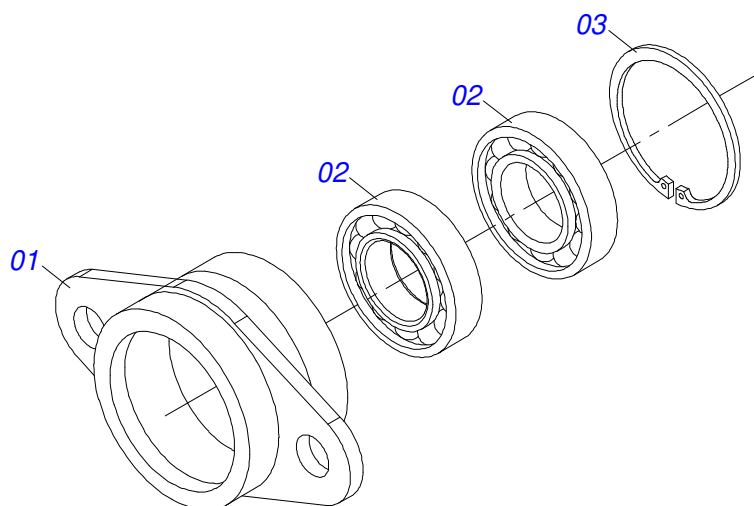 


Item	Code	Description	See page	QT
01	0502011987	DOUBLE HOUSING BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01

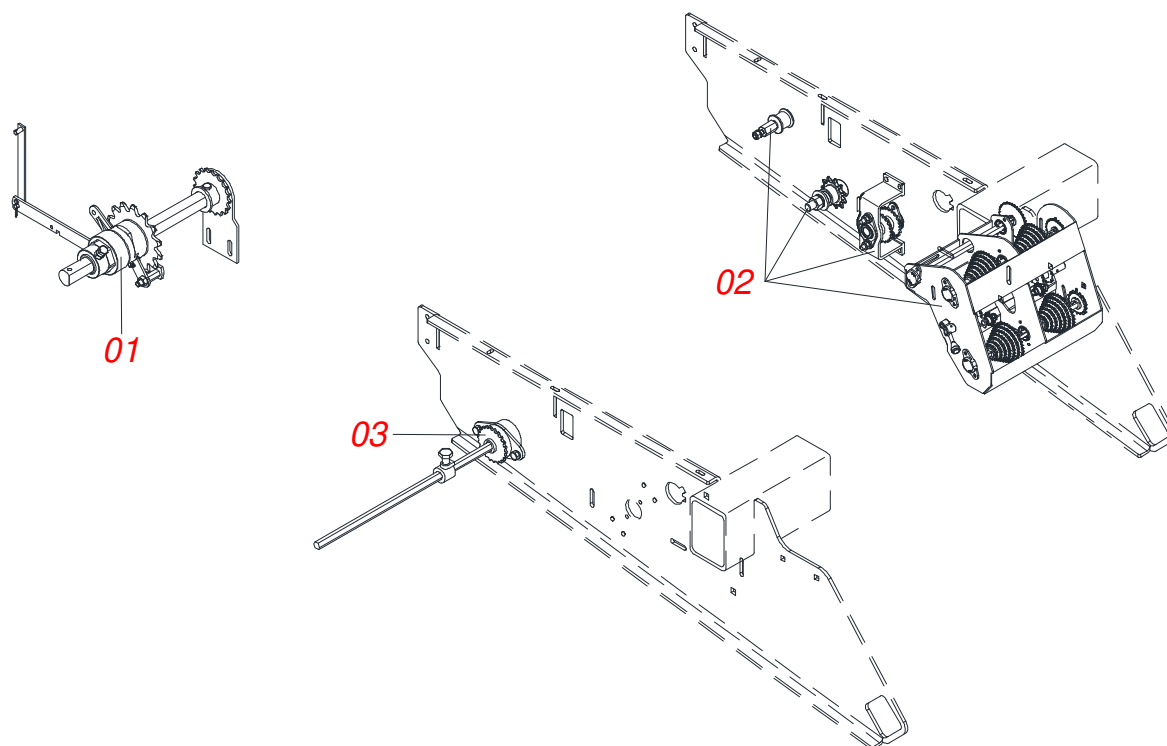 

Item	Code	Description	See page	QT
01	0511053898	SET OF INTERNAL TRANSMISSION	7	01
02	0511053897	TRANSMISSION ASSEMBLY	10	01
03	0511053886	HEXAGONAL AXLE ASSEMBLY	28	01

HEXAGONAL AXLE ASSEMBLY

 
0511053886

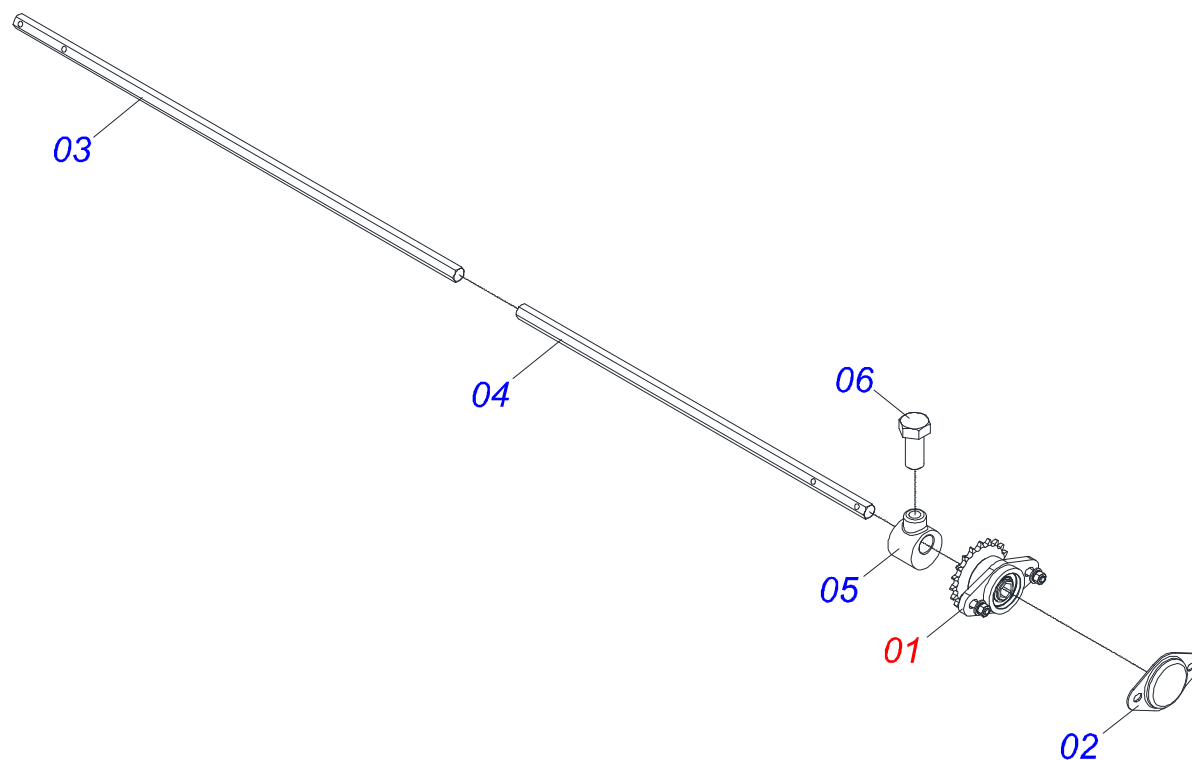


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	25	02
02	0561014215	BEARING COVER LOWER ROW FRAME		02
03	0561018823	5/8" X 2250 MOTOR SHAFT		01
04	0531016942	RIGHT HEX AXLE 5/8 X 2050		01
05	0502040534	SPRING GUIDE BUSHING LOCK		04
06	0501018535	1/2 X 1 BOLT		04

FERTILIZER BOX ASSEMBLY

 
0511053918

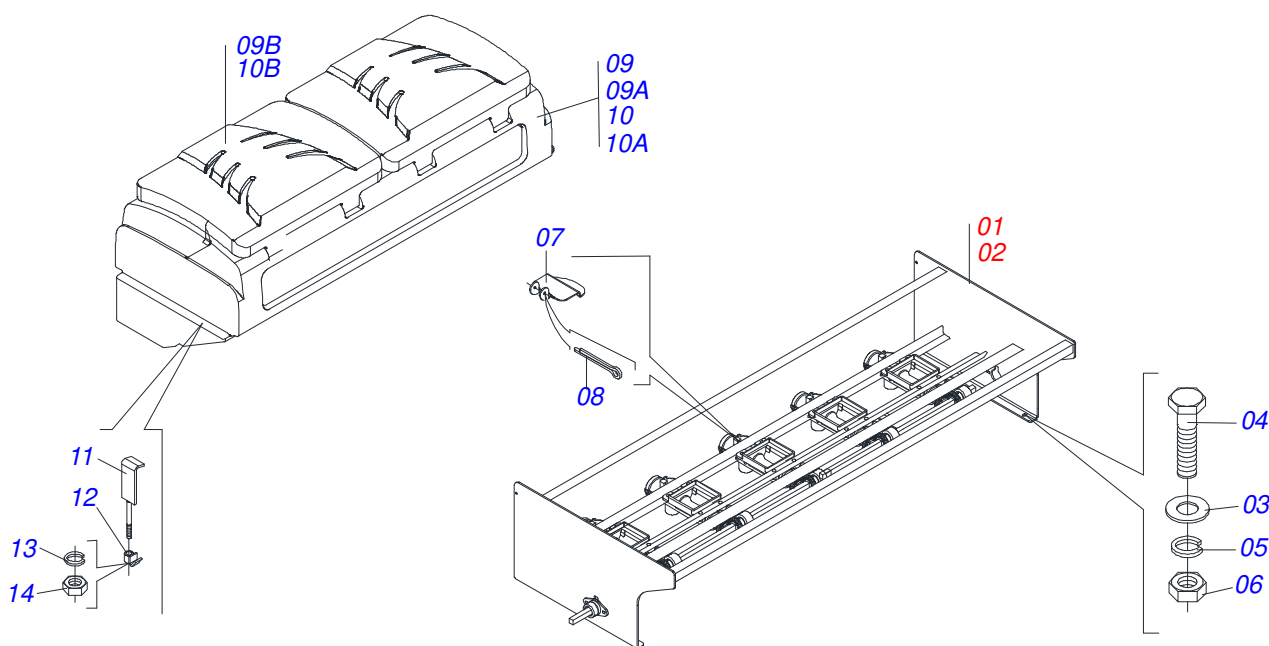


Item	Code	Description	See page	QT
001	0511051077	SUPPORT RIGHT BOX FERTILIZER WITH 31 DISTRIBUTOR	01	01
002	0511051078	SUPPORT LEFT BOX FERTILIZER WITH 32 DISTRIBUTOR	01	01
003	0501010984	FLAT WASHER		16
004	0503010849	3/8" X 1-1/2" BOLT		08
005	0503010025	3/8" SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0571010590	FERTILIZER SIDE COVER		08
008	0503010362	1/8" X 1.1/4" COTTERPIN		08
009	0503060636	COVER BOX RIGHT FERTILIZER		01
009A	0503031948	SILO RIGHT FERTILIZER		01
009B	0503031950	TUBE SILO FERTILIZER		02
010	0503060637	COVER BOX LEFT FERTILIZER		01
010A	0503031949	SILO LEFT FERTILIZER		01
010B	0503031950	TUBE SILO FERTILIZER		02
011	0511062099	FERTILIZER BEAM CLAMP		04
012	0511061886	FERTILIZER BEAM LOCK		04
013	0503010019	1/2" SPRING WASHER		04
014	0503010060	1/2" NUT		04

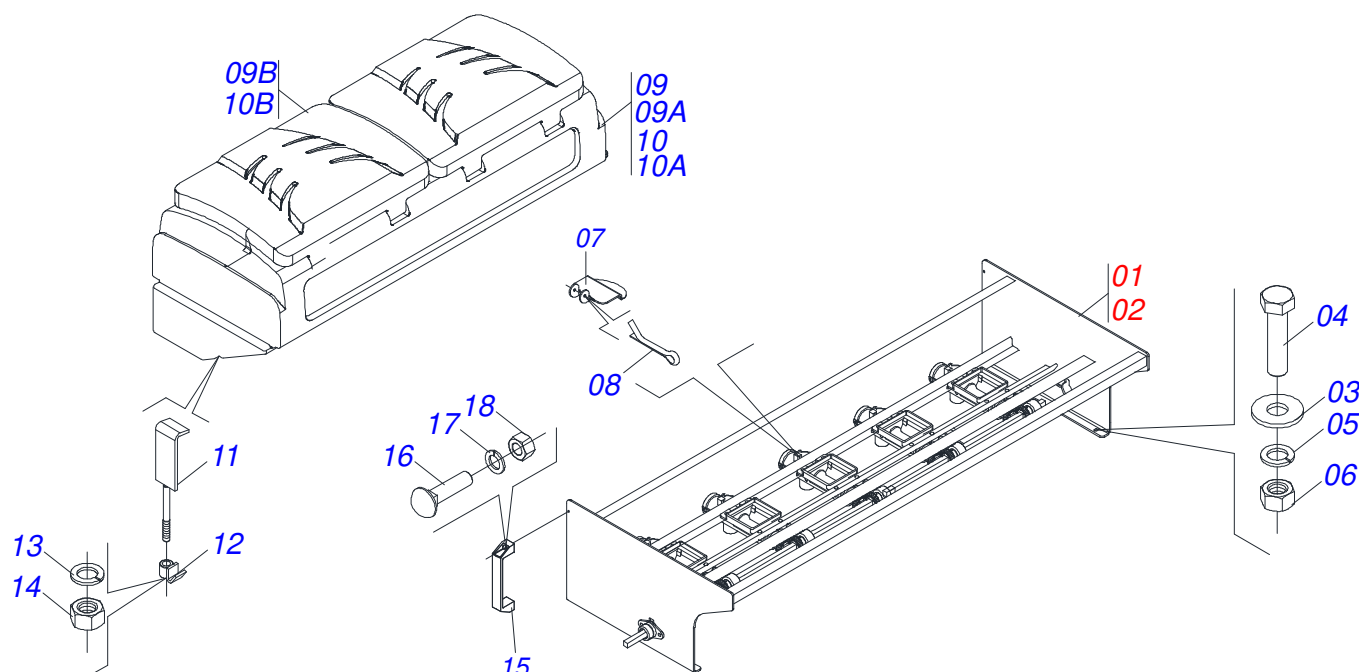 


Item	Code	Description	See page	QT
001	0501059656	FERTILIZER SUPORT RIGHT BOX	33	01
002	0501059657	FERTILIZER SUPORT LEFT BOX	34	01
003	0501010984	FLAT WASHER		16
004	0503010849	3/8" X 1-1/2" BOLT		08
005	0503010025	3/8" SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0571010590	FERTILIZER SIDE COVER		10
008	0503010362	1/8" X 1.1/4" COTTERPIN		10
009	0503060640	COVER BOX RIGHT FERTILIZER		01
009A	0503031954	SILO RIGHT FERTILIZER		01
009B	0503031956	TUBE SILO FERTILIZER		02
010	0503060641	COVER BOX LEFT FERTILIZER		01
010A	0503031955	SILO LEFT FERTILIZER		01
010B	0503031956	TUBE SILO FERTILIZER		02
011	0511062099	FERTILIZER BEAM CLAMP		04
012	0511061886	FERTILIZER BEAM LOCK		04
013	0503010019	1/2" SPRING WASHER		04
014	0503010060	1/2" NUT		04
015	0503011957	NYLON LUG		02
016	0503010371	5/16" X 1" BOLT		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04

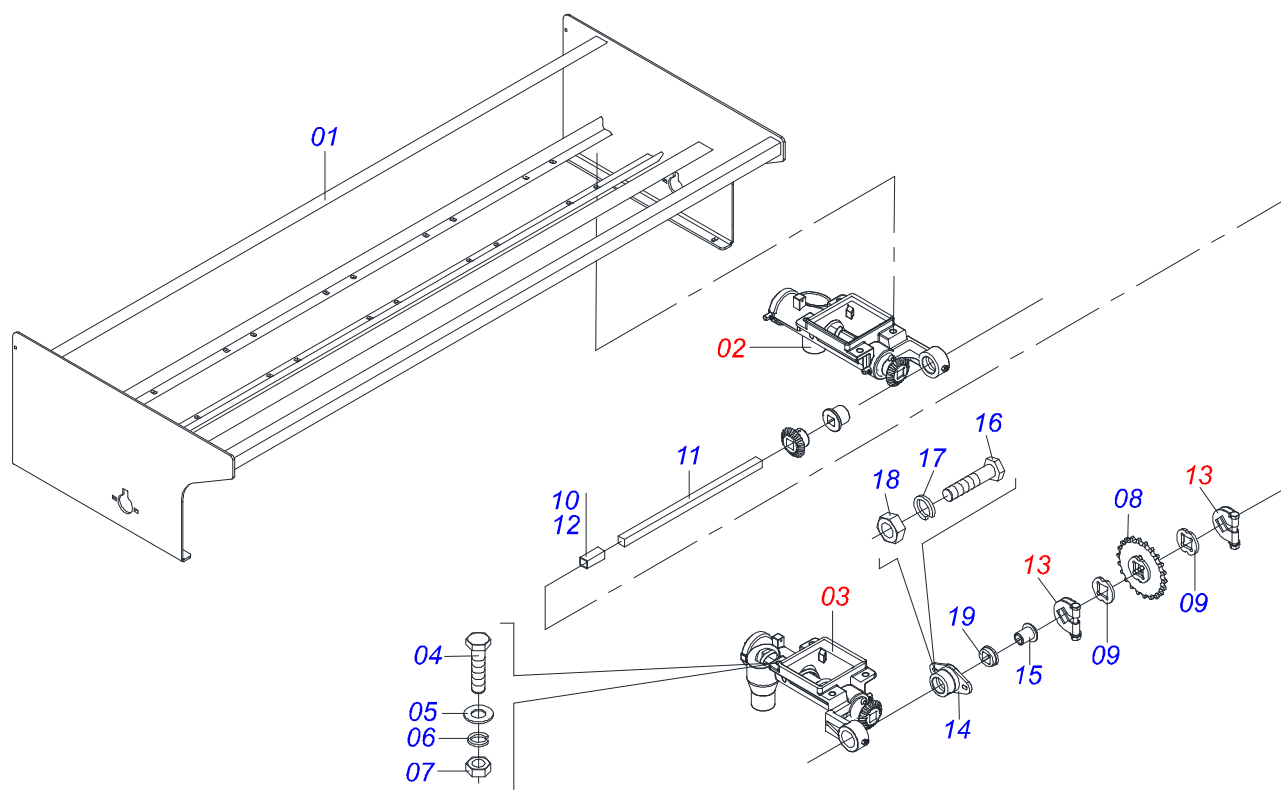 


Item	Code	Description	See page	QT
01	0521062410	RH BEAM SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	35	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	36	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	FLAT WASHER		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0501018700	3/4" X 58"SQUARE SHAFT		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

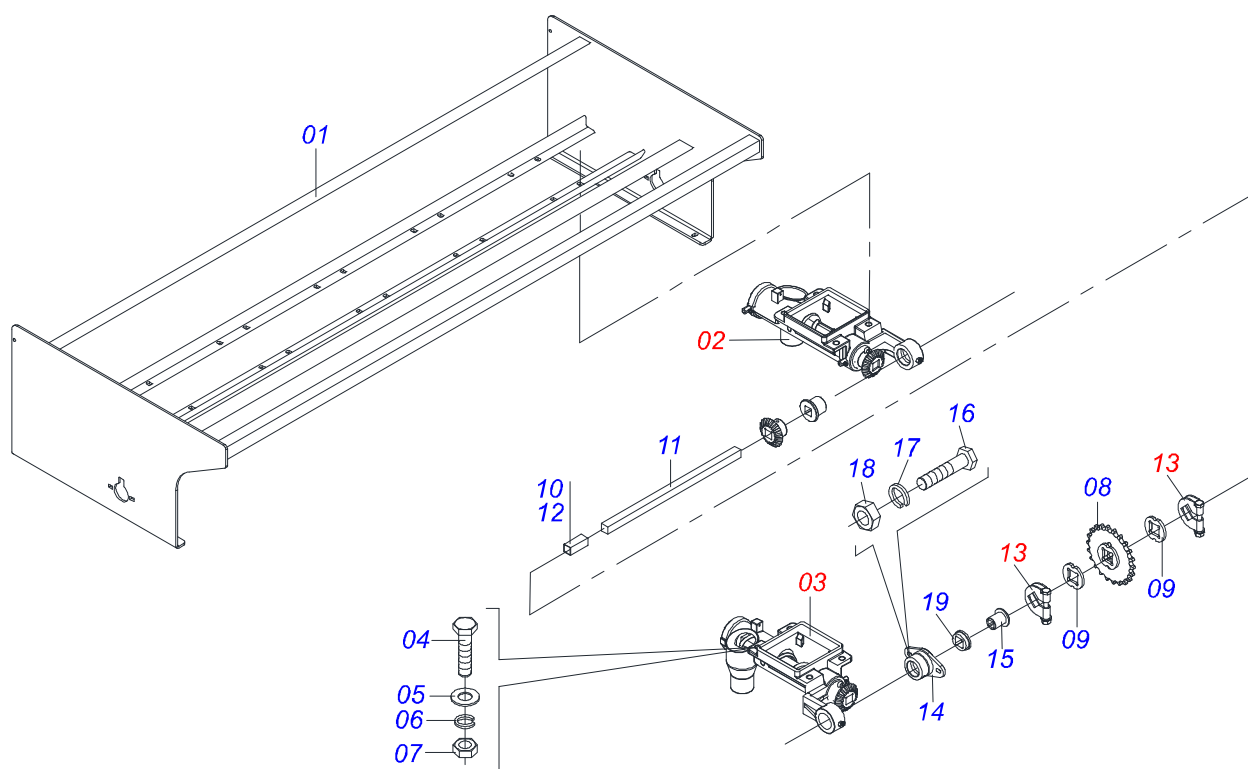 

Item	Code	Description	See page	QT
01	0521062412	LH BEAM SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	35	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	36	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	FLAT WASHER		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		02
11	0501018700	3/4" X 58"SQUARE SHAFT		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

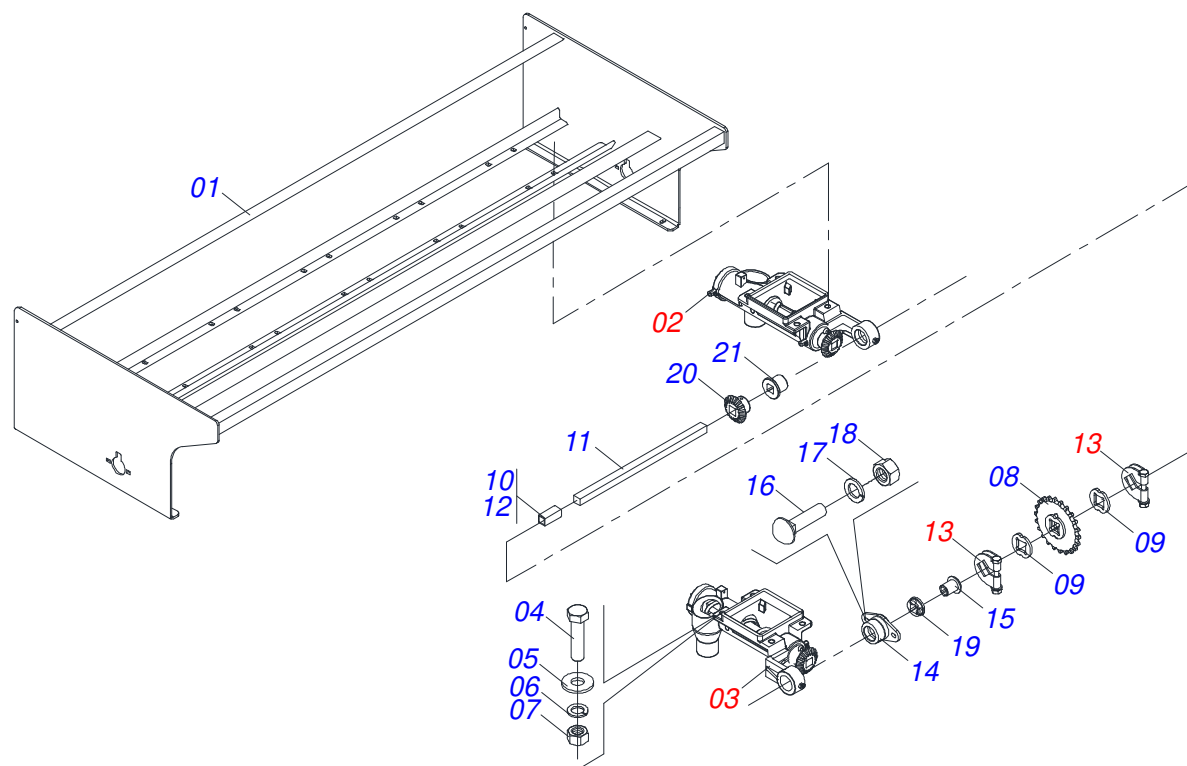 


Item	Code	Description	See page	QT
01	0521061324	BOX FERTILIZER SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	35	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	36	03
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		20
05	0501010984	FLAT WASHER		20
06	0503011443	3/8" SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0511010866	RIGHT AXLE		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01
20	0502012990	CONICA 14Z SQUARE GEAR		05
21	0503030275	AGRICULTURAL BEARING		05

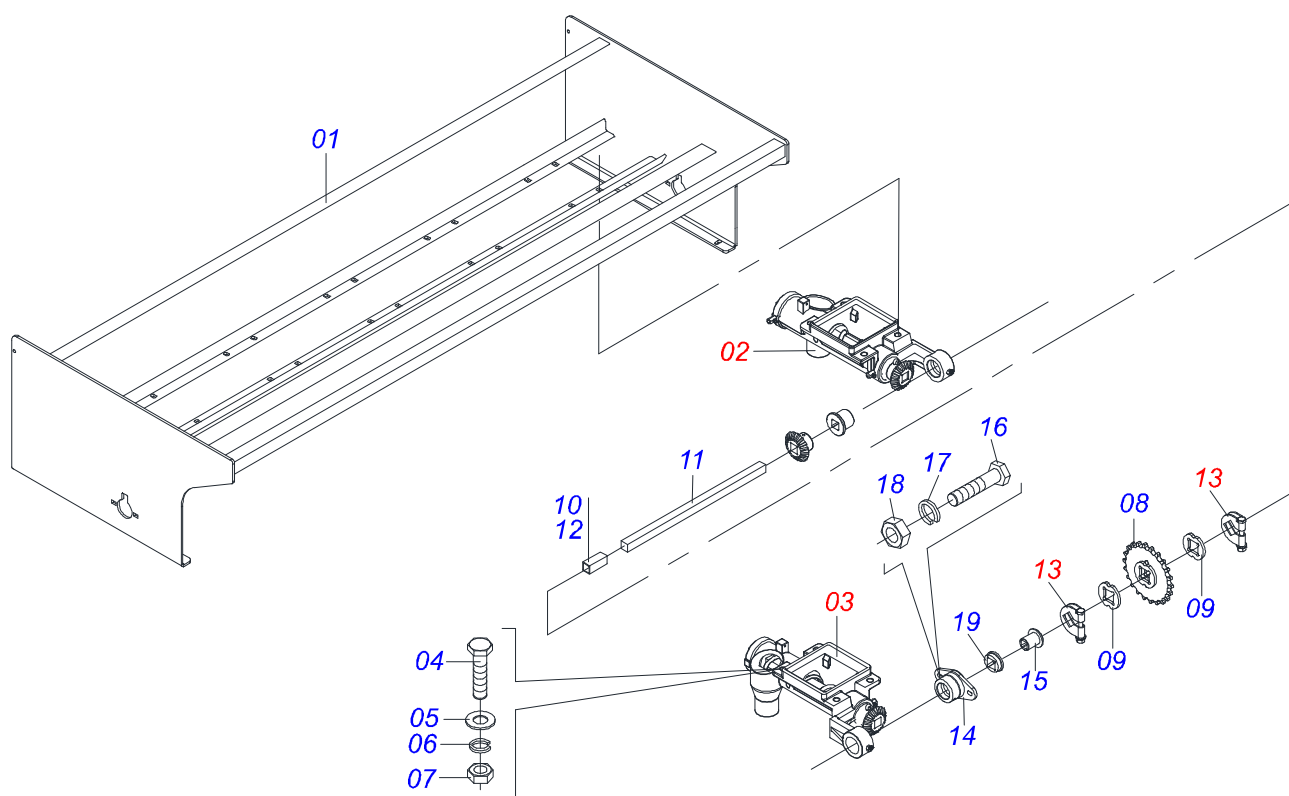 


Item	Code	Description	See page	QT
01	0521061325	FERTILIZER SUPORT LEFT BOX		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	35	03
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	36	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		20
05	0501010984	FLAT WASHER		20
06	0503011443	3/8" SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0511010866	RIGHT AXLE		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER		02
14	0501110392	SILO SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

LEFT SIDE FERTILIZER DISTRIBUTOR






 
0511051558

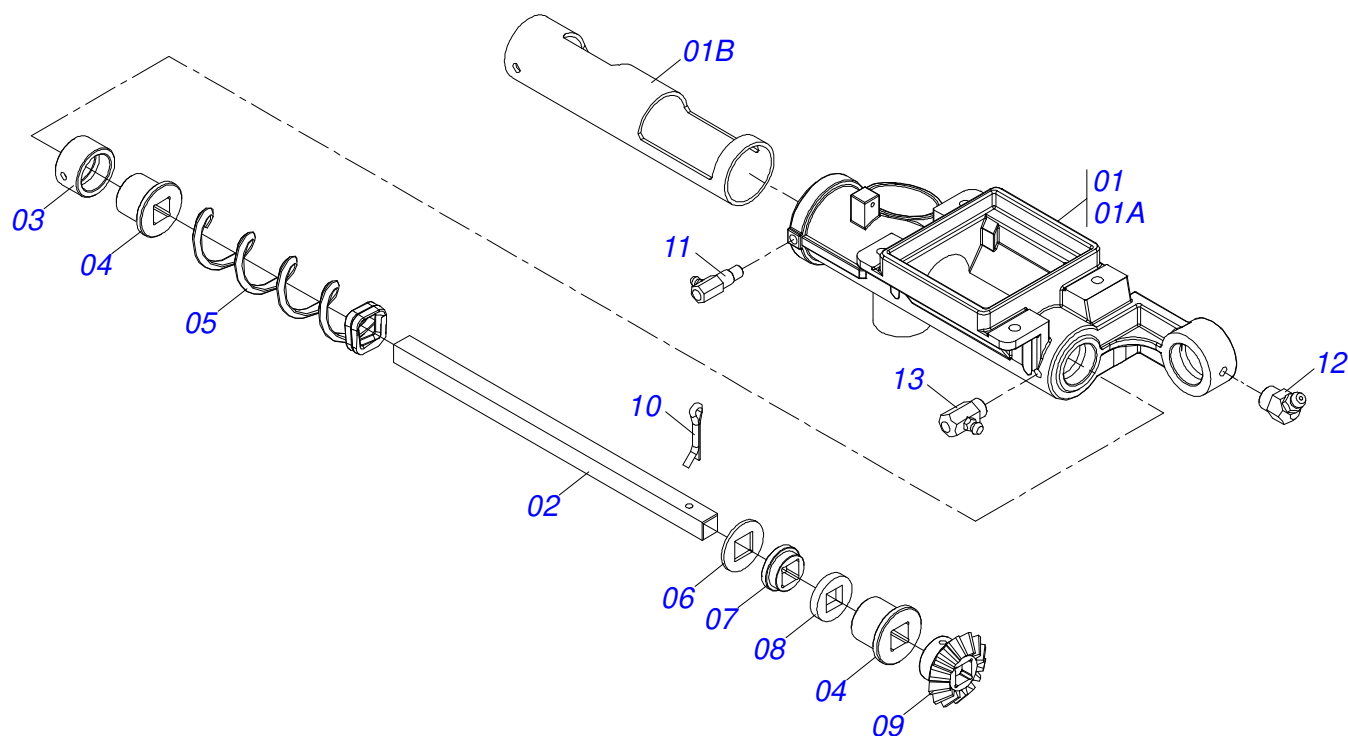







Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

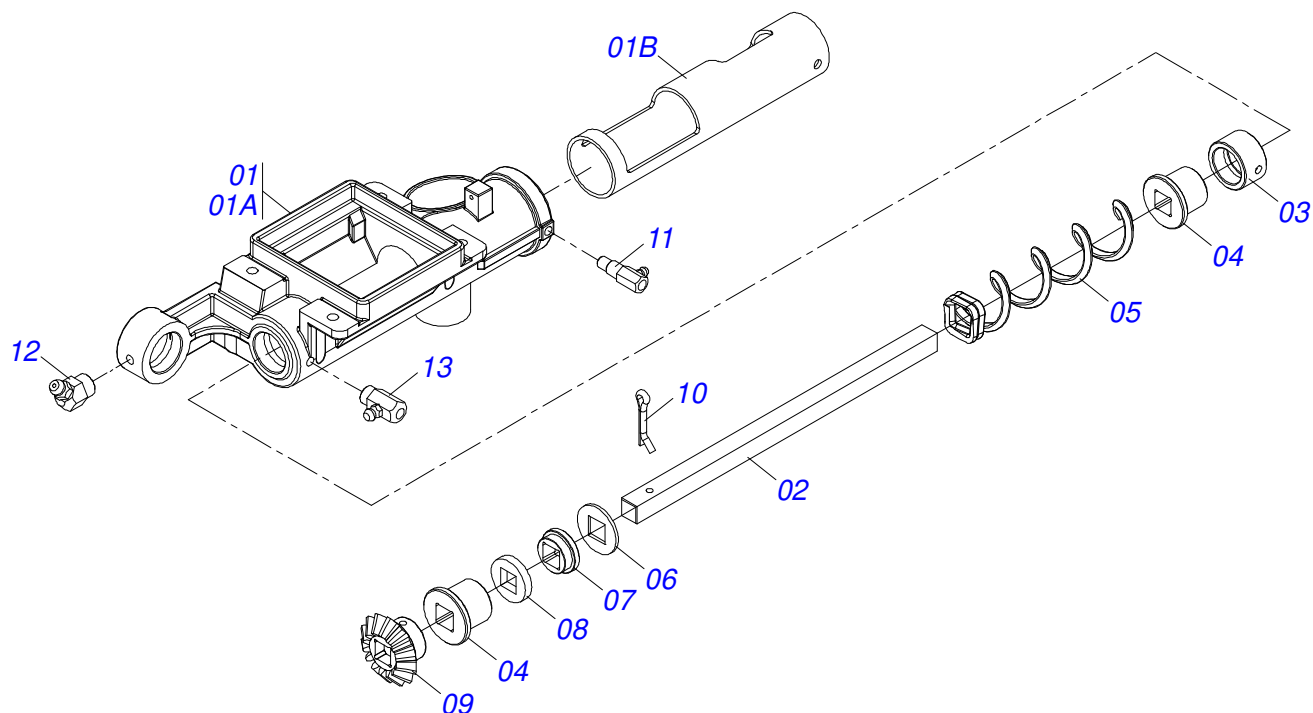 


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

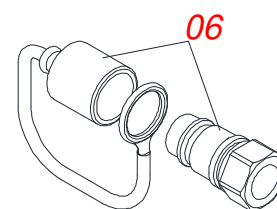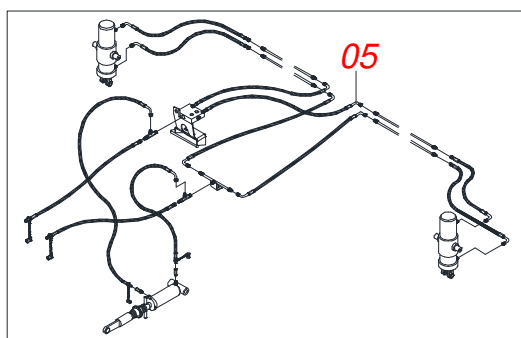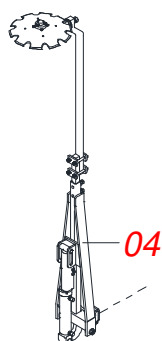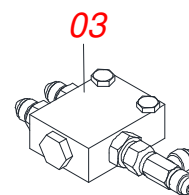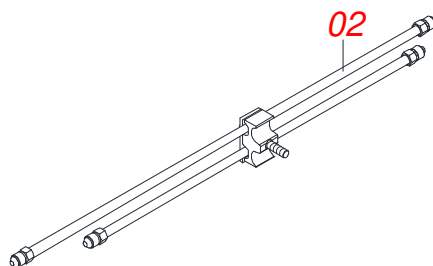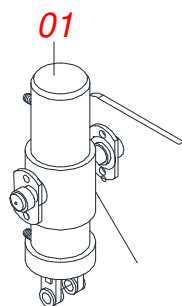      

Item	Code	Description	See page	QT
01	0511053894	HYDRAULIC CYLINDER ASSEMBLY	39	01
02	0511053920	OIL PIPE ASSEMBLY	41	01
03	0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	42	01
04	0511052909	HYDRAULIC MARKER	43	01
05	0511052197	WHEELS HOSE ASSEMBLY	46	01
06	0501053834	MALE QUICK COUPLER	47	02

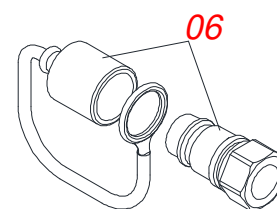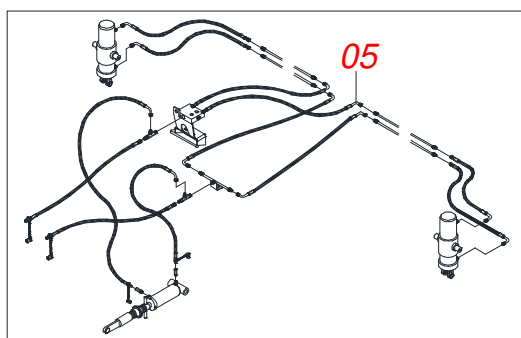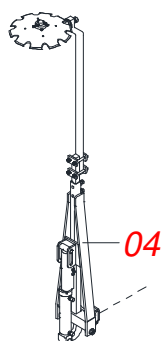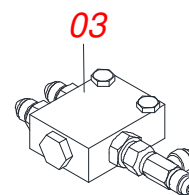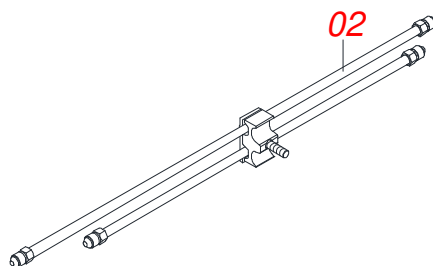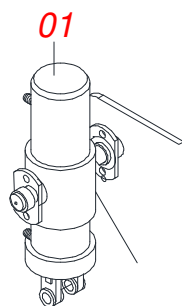      


Item	Code	Description	See page	QT
01	0511053894	HYDRAULIC CYLINDER ASSEMBLY	39	01
02	0511053895	OIL DUCT ASSEMBLY	48	01
03	0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	42	01
04	0511052909	HYDRAULIC MARKER	43	01
05	0511052197	WHEELS HOSE ASSEMBLY	46	01
06	0501053834	MALE QUICK COUPLER	47	02

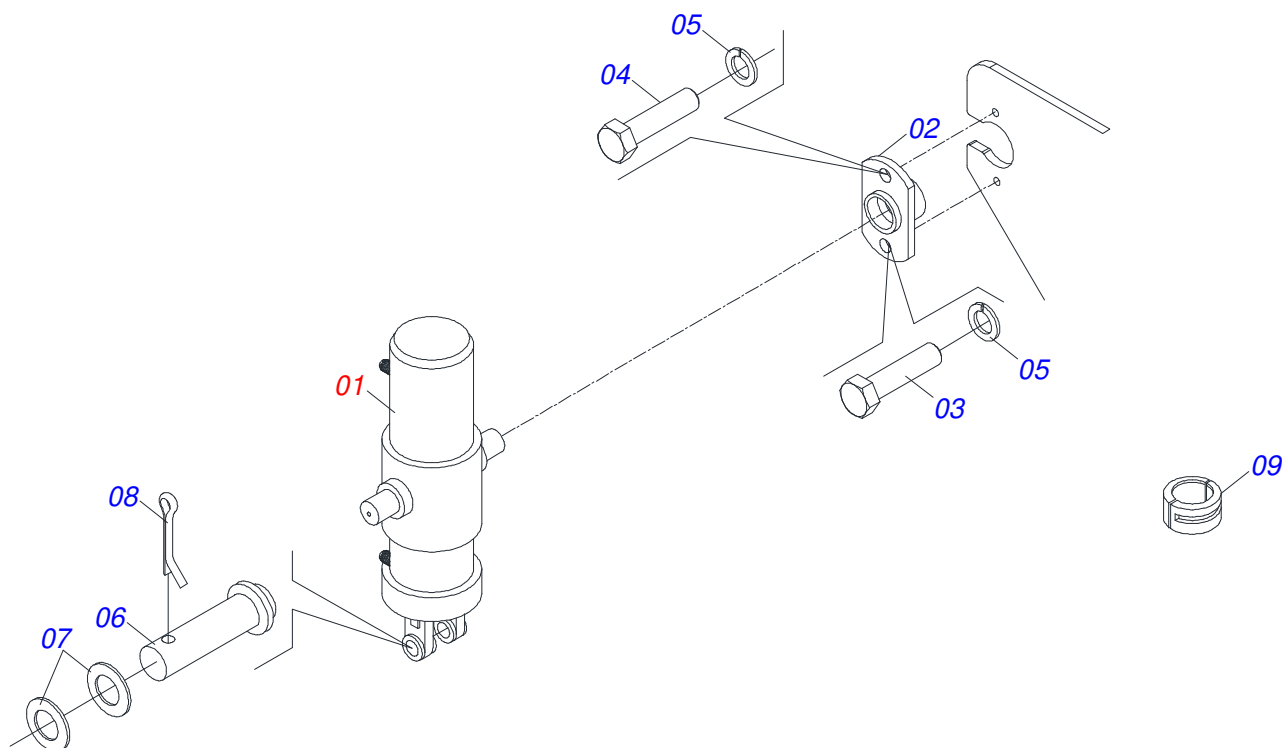 


Item	Code	Description	See page	QT
001	0511058411	HYDRAULIC CYLINDER	40	02
002	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		04
003	0503010834	1/2 X 1 BOLT		06
004	0503010395	1/2" X 1-1/4" BOLT		02
005	0503010019	1/2" SPRING WASHER		08
006	0521010546	1.2" X 5.7" COUPLING SHAFT		02
007	0501017779	32 X 60 X 4.75 FLAT WASHER		04
008	0503010523	1/4" X 2" COTTERPIN		02
009	0501047887	ROD STOP		02

HYDRAULIC CYLINDER

 
0511058411

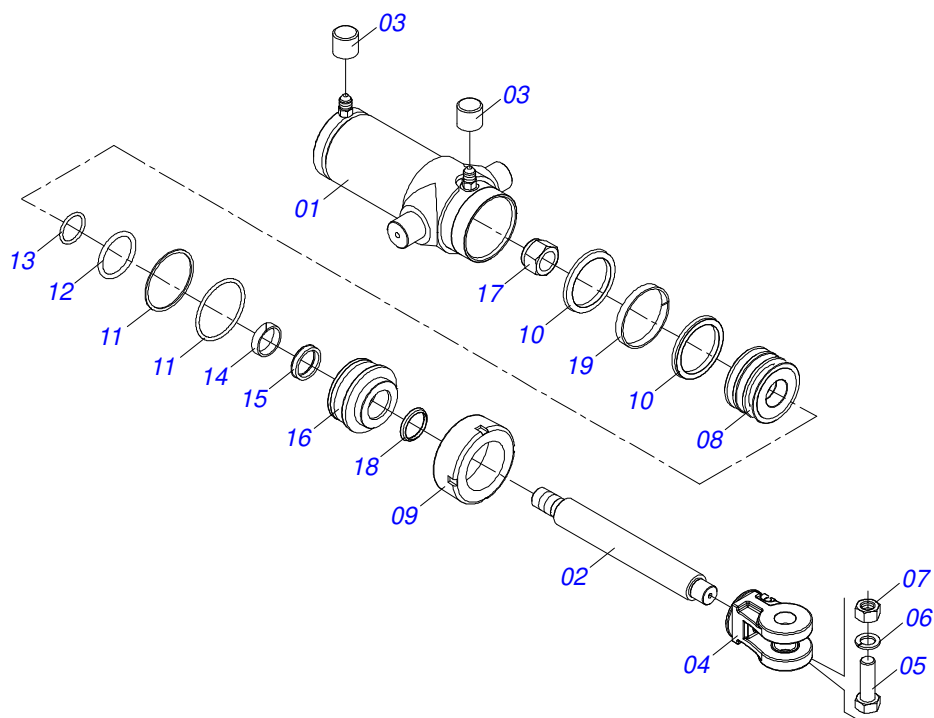


Item	Code	Description	See page	QT
01	0511066774	2.5" X 28" CYLINDER CASE		01
02	0541017674	TURNBUCLE BODY		01
03	0503030385	CYLINDER PLUG N-002		02
04	0511064408	FORK		01
05	0503011094	3/8" X 2" BOLT		01
06	0503010025	3/8" SPRING WASHER		01
07	0503010026	3/8" NUT		01
08	0581010302	RING OF SUPPORT		01
09	0502012822	101.60 END CAP		01
10	0503011061	8-342 BACK-UP RING		02
11	0503010338	2-342 N 3006-9B O'RING		02
12	0503017936	RING		01
13	0503017938	RING GUIDE		01
14	0503017937	GASKET		01
15	0503010761	D-1750 SCRAPER RING		01
16	0581010837	PISTON		01
17	0503010817	1.1/4" SELF LOCKING NUT		01
18	0503015633	SELEMASTER SEALING		01
19	0503018029	2-217 O'RING		01

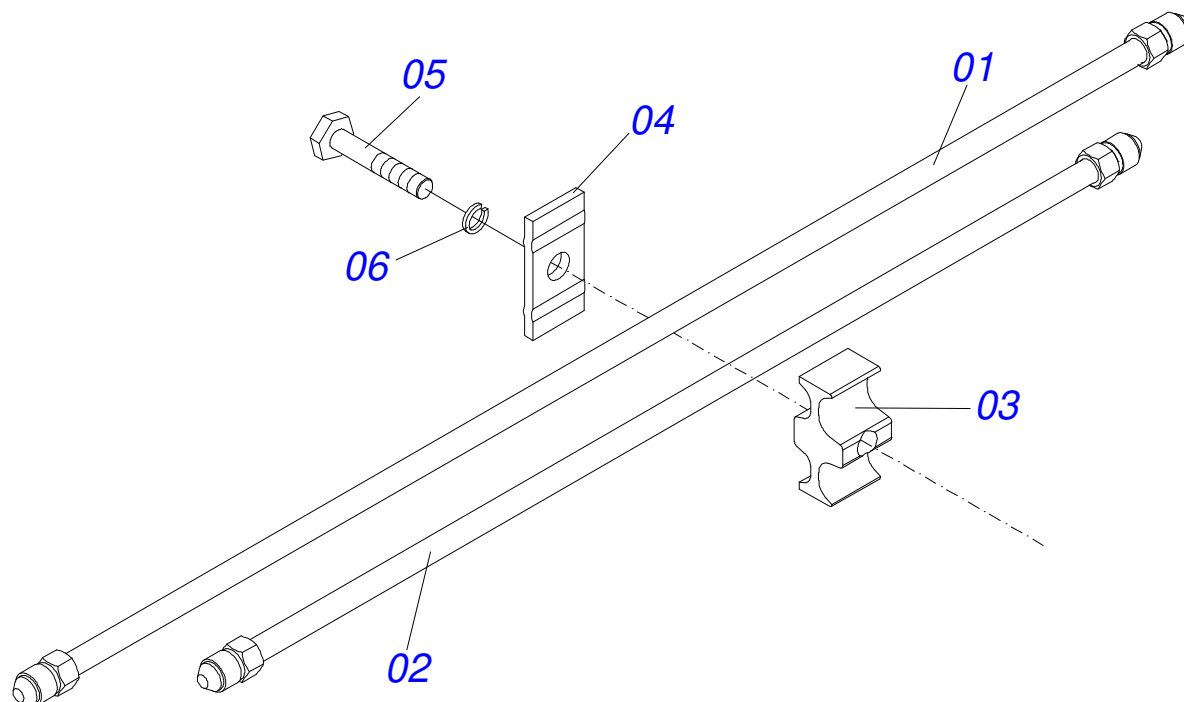 

Item	Code	Description	See page	QT
001	0521062404	OIL TUBE		04
002	0521063408	OIL TUBE		04
003	0502012702	BODY SUPPORT CLAMP		04
004	0531011180	UPPER BODY CLIP		04
005	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
006	0503010180	7/16" SPRING WASHER		04

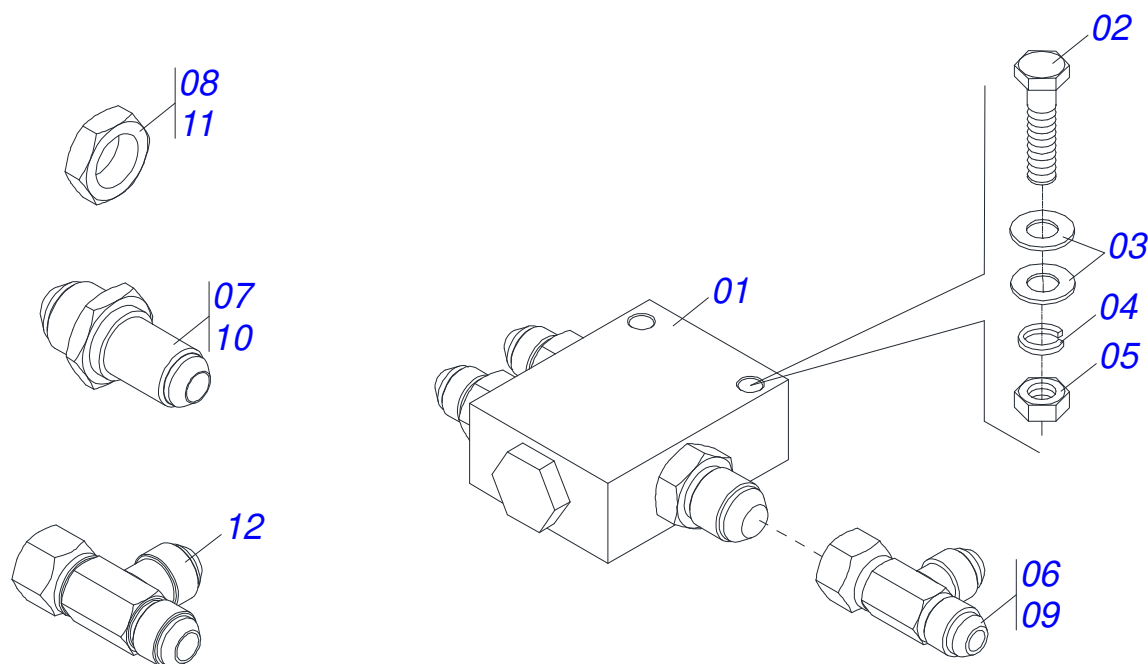 

Item	Code	Description	See page	QT
001	0501054452	FLOW DIVIDING VALVE	01	
002	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN	02	
003	0501010694	FLAT WASHER	04	
004	0503010143	1/4" SPRING WASHER	02	
005	0503010144	1/4" NUT	02	
006	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT	01	
007	0541012166	NIPPLE 3/4" UNF X 7/8"	01	
008	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	01	
009	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT	01	
010	0541012166	NIPPLE 3/4" UNF X 7/8"	01	
011	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	01	
012	0503012341	T 7/8" ADAPOR GIRAT NUT	01	

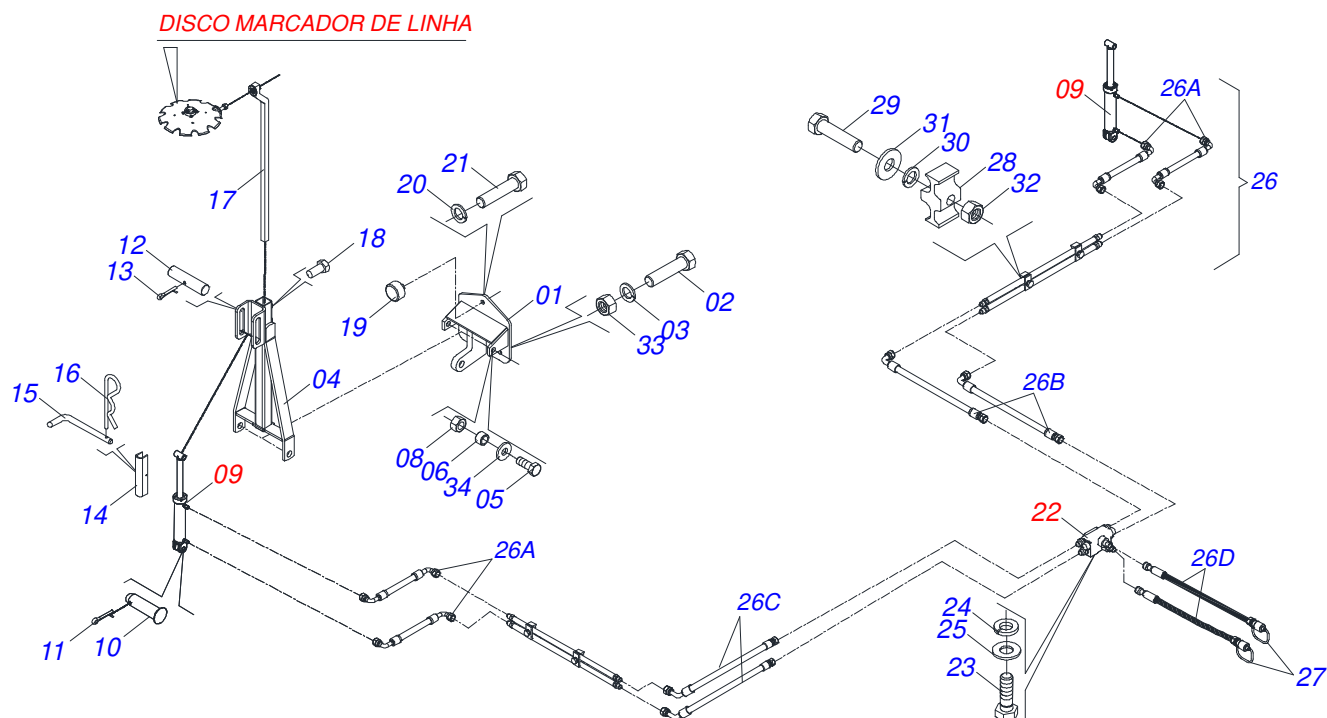 

Item	Code	Description	See page	QT
001	0511065449	ROW MARKER ARM SUPPORT		02
002	0501018059	3/4" X 2-1/4" BOLT		08
003	0503010023	3/4" SPRING WASHER		08
004	0501069470	ROW MARKER ARM		02
005	0503011067	5/8" X 2-1/2" BOLT		04
006	0521010479	SLEEVE ARTICULATION		04
008	0503012795	5/8" HEX SELF ADJUSTING NUT		04
009	0511058449	HYDRAULIC CYLINDER	44	02
010	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
011	0503010571	1/4" X 1.1/2 COTTERPIN		02
012	0511015779	1" X 4.2" AXLE		02
013	0503010523	1/4" X 2" COTTERPIN		02
014	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
015	0501068994	0.3" X 3.1" LOCK PIN		02
016	0503030168	CUPILLA		02
017	0501069643	890 TURNBUCKLE		02
018	0503010962	5/8" X 1-1/4" BOLT		04
019	0503011070	BEATER		02
020	0503010019	1/2" SPRING WASHER		02
021	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
022	0501054649	HBM SEQUENTIAL VALVE		01
023	0503010371	5/16" X 1" BOLT		02
024	0503010179	LOCK WASHER		02
025	0501010694	FLAT WASHER		02
026	0511051082	SET OF HYDRAULIC MARKER HOSES		01
026A	0501080687	3/8 X 1150 TC-TC HOSE ASSY		04
026B	0501080436	3/8 X 1500 TR-TC HOSE		02
026C	0501080402	HOSE 3/8 X 1700 TR-TC		02
026D	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
027	0501053834	MALE QUICK COUPLER	47	02
028	0502012702	BODY SUPPORT CLAMP		02




HYDRAULIC MARKER

0511052909


Item	Code	Description	See page	QT
029	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
030	0503010180	7/16" SPRING WASHER		02
031	0501012803	FLAT WASHER		02
032	0503010244	7/16" NUT		04
033	0503011255	3/4" LOCK NUT		08
034	0501012140	FLAT WASHER		04

HYDRAULIC CYLINDER

 0511058449

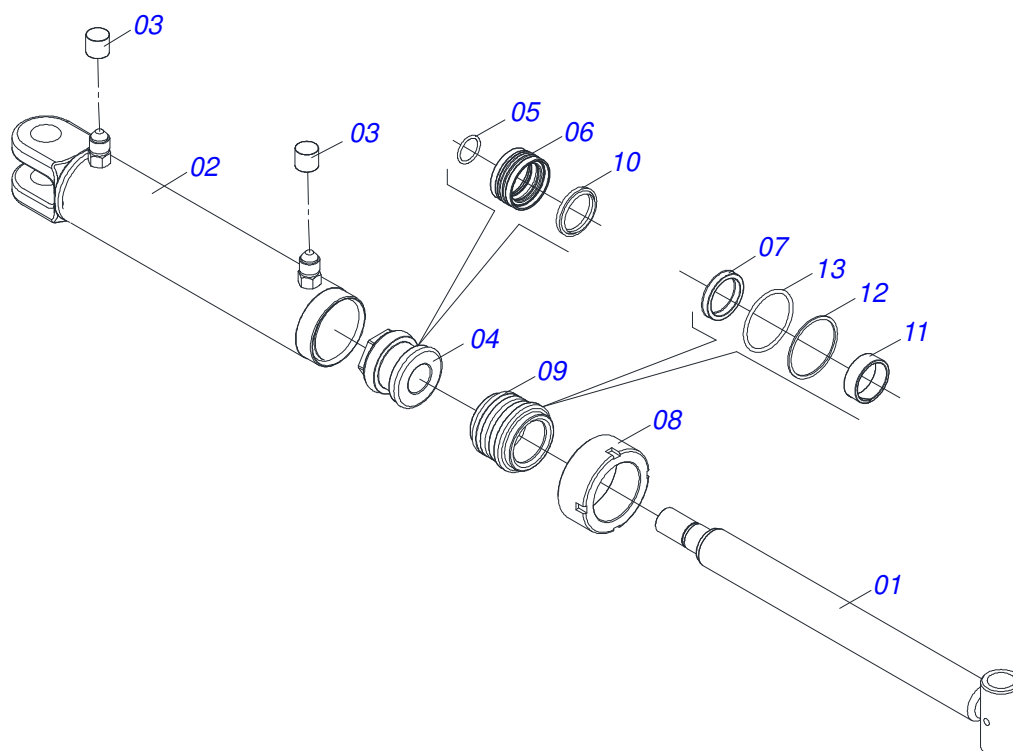


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

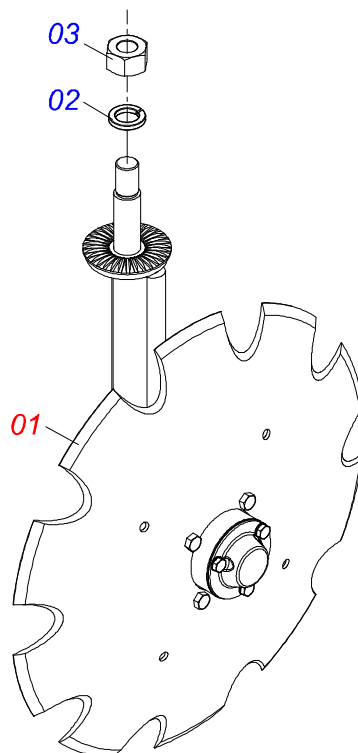 


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

WHEELS HOSE ASSEMBLY

 
0511052197

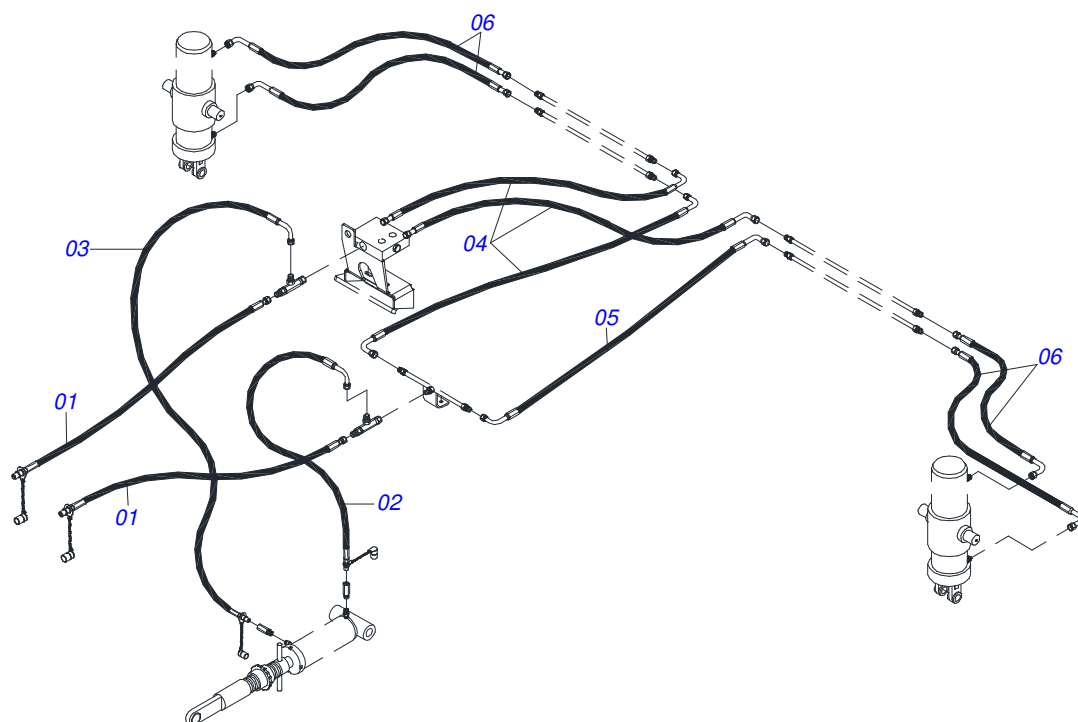


Item	Code	Description	See page	QT
01	0501080933	HOSE 1/2 X 4200 TR-TM		02
02	0501080116	TR-TM HOSE ASSY		01
03	0501080182	1/2" X 850 TR-TM HOSE ASSY		01
04	0501080396	3/8" X 45" HOSE		03
05	0501080687	3/8 X 1150 TC-TC HOSE ASSY		01
06	0501080054	3/8" X 17" TR-TC HOSE ASSY		04

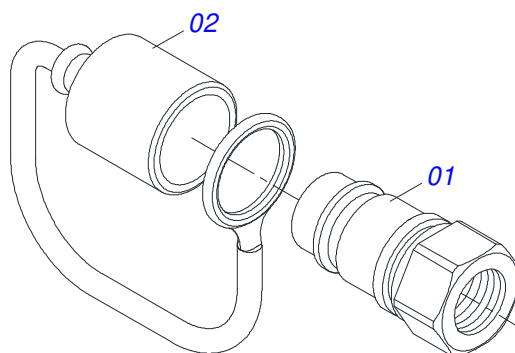 


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

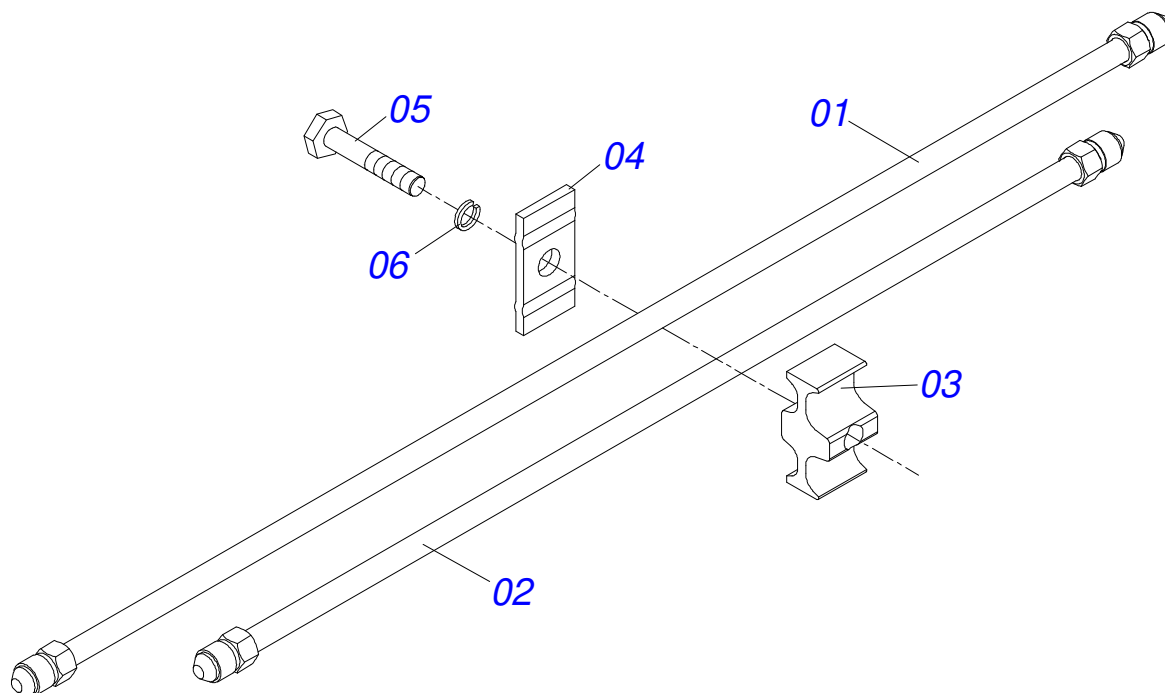 

Item	Code	Description	See page	QT
001	0521061340	OIL TUBE		04
002	0521063409	2120 OIL TUBE		04
003	0502012702	BODY SUPPORT CLAMP		04
004	0531011180	UPPER BODY CLIP		04
005	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
006	0503010180	7/16" SPRING WASHER		04

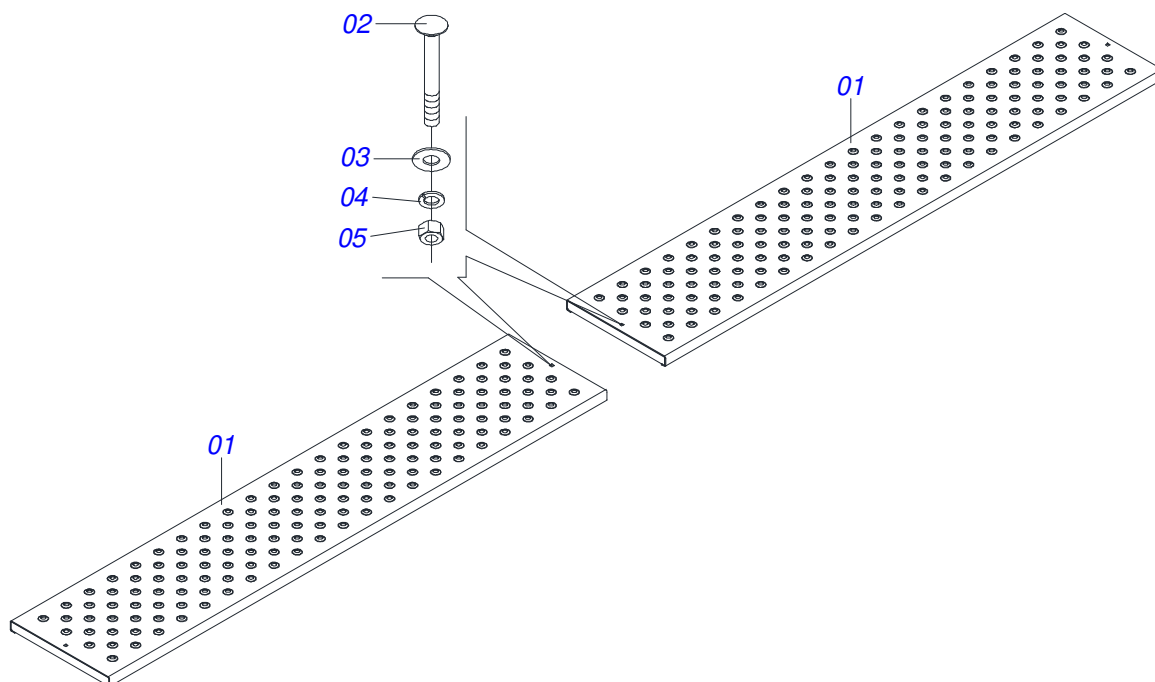 


Item	Code	Description	See page	QT
01	0521062416	PLATFORM		02
02	0501011755	3/8" X 3" BOLT		04
03	0501010984	FLAT WASHER		04
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04

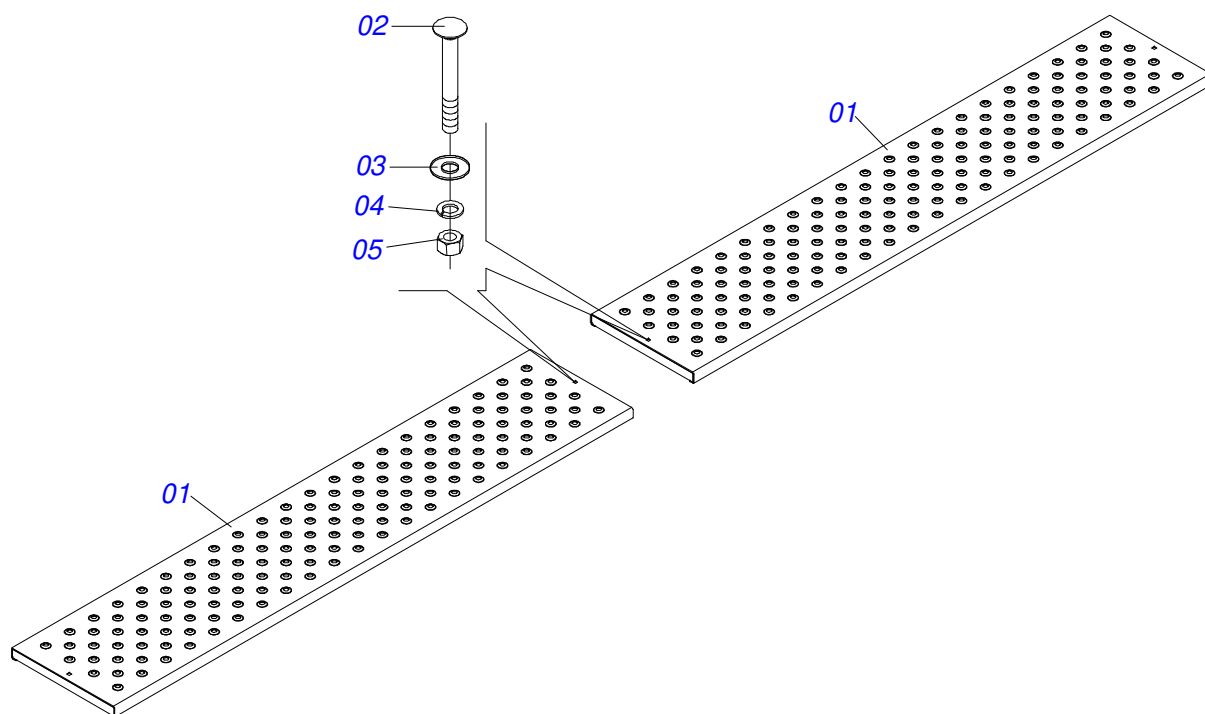 

Item	Code	Description	See page	QT
01	0521061333	PLATFORM		02
02	0501011755	3/8" X 3" BOLT		04
03	0501010984	FLAT WASHER		04
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04

HANDRAIL ASSEMBLE

 
0511053916

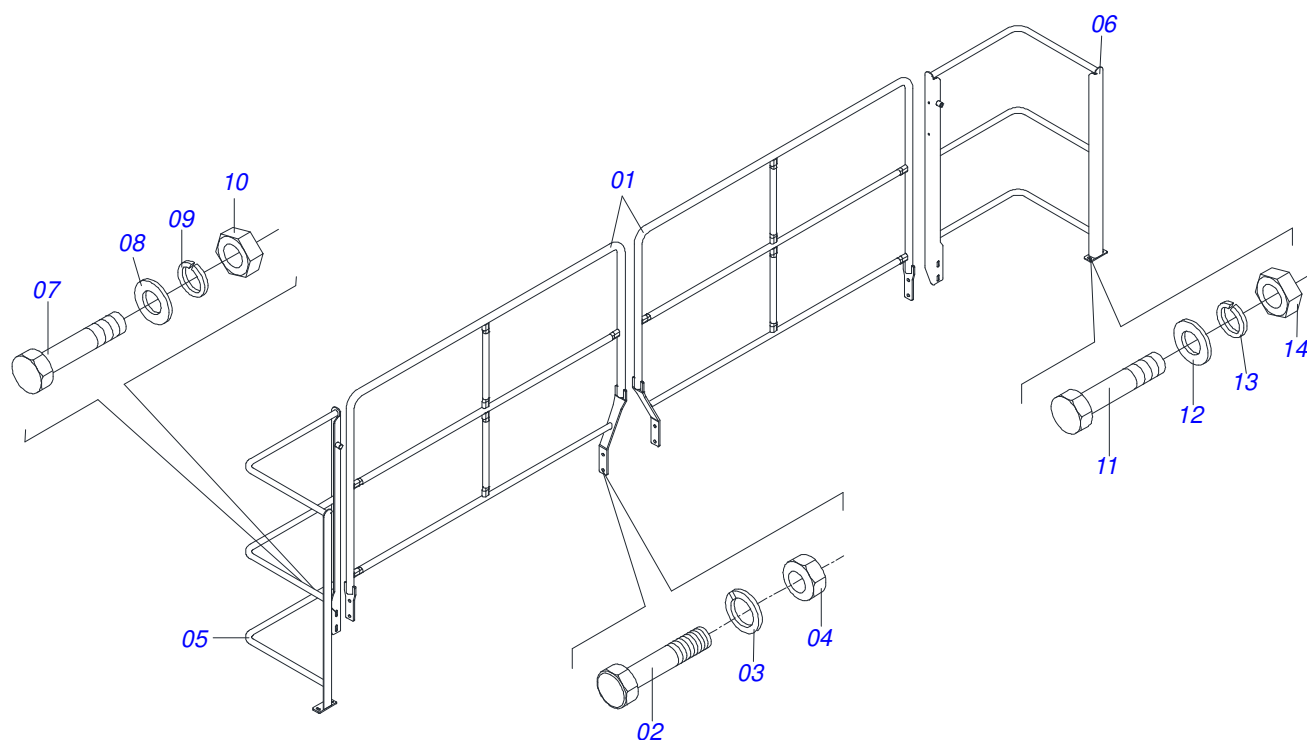


Item	Code	Description	See page	QT
01	0521062417	HANDRAIL	02	
02	0503010920	1/2" X 1.1/2" BOLT	08	
03	0503010019	1/2" SPRING WASHER	08	
04	0503010060	1/2" NUT	08	
05	0521061335	RIGHT SIDE HANDRAIL	01	
06	0521061336	LH SIDE HANDRAIL	01	
07	0503011088	3/8" X 1-1/4" BOLT	04	
08	0501010984	FLAT WASHER	08	
09	0503010025	3/8" SPRING WASHER	04	
10	0503010026	3/8" NUT	04	
11	0501010161	1/2" X 1.1/4" BOLT	04	
12	0511017302	FLAT WASHER	04	
13	0503010019	1/2" SPRING WASHER	04	
14	0503010060	1/2" NUT	04	

HANDRAIL ASSEMBLE

 0511053889

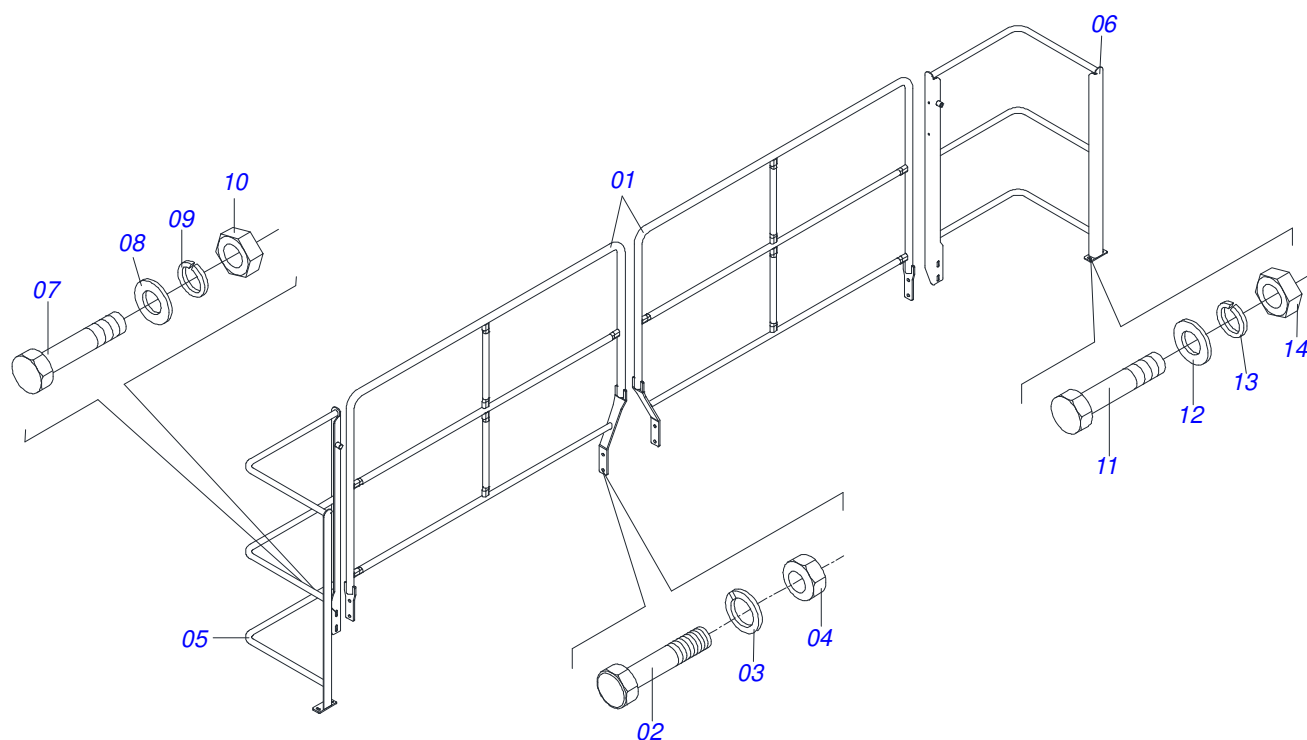


Item	Code	Description	See page	QT
01	0521061334	HANDRAIL	02	
02	0503010920	1/2" X 1.1/2" BOLT	08	
03	0503010019	1/2" SPRING WASHER	08	
04	0503010060	1/2" NUT	08	
05	0521061335	RIGHT SIDE HANDRAIL	01	
06	0521061336	LH SIDE HANDRAIL	01	
07	0503011088	3/8" X 1-1/4" BOLT	04	
08	0501010984	FLAT WASHER	08	
09	0503010025	3/8" SPRING WASHER	04	
10	0503010026	3/8" NUT	04	
11	0501010161	1/2" X 1.1/4" BOLT	04	
12	0511017302	FLAT WASHER	04	
13	0503010019	1/2" SPRING WASHER	04	
14	0503010060	1/2" NUT	04	

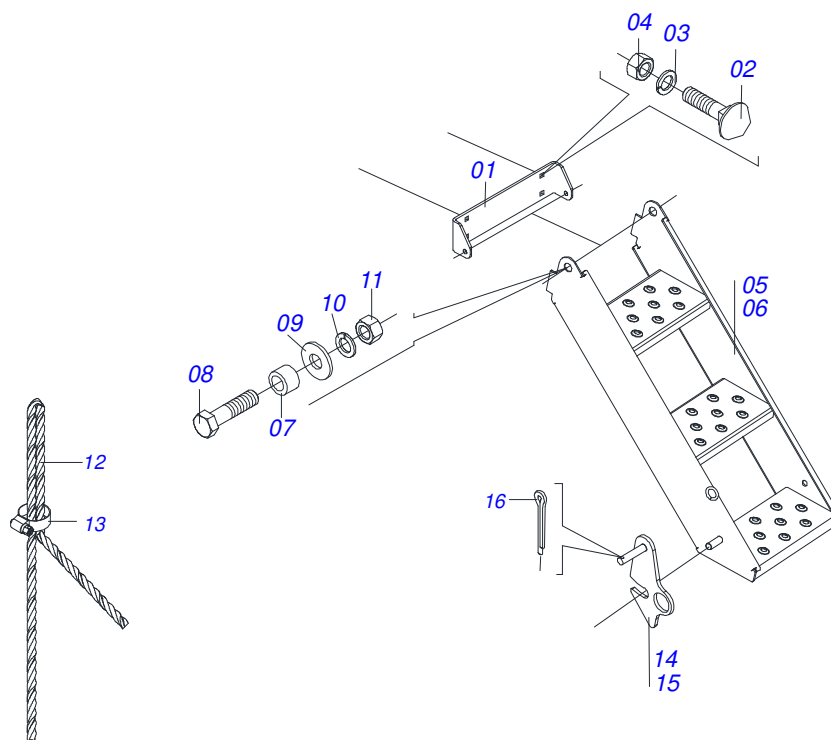 

Item	Code	Description	See page	QT
001	0561015343	ARTICULACION SUPPORT		02
002	0501010243	1/2" X 1-1/2" BOLT		08
003	0503010019	1/2" SPRING WASHER		08
004	0503010060	1/2" NUT		08
005	0521061331	RIGHT LADDER		01
006	0521061332	LEFT LADDER		01
007	0531018627	0.5" X 1" X 0.2" SLEEVE		04
008	0503010920	1/2" X 1.1/2" BOLT		04
009	0511017302	FLAT WASHER		04
010	0503010019	1/2" SPRING WASHER		04
011	0503010060	1/2" NUT		04
012	0511010369	3/8" X 74.80" LEVER ROPE		02
013	0503010296	CLAMP		04
014	0511065678	STAIR RIGHT LOCK		01
015	0511065679	STAIR RIGHT LOCK		01
016	0503010257	1/8" X 1" COTTERPIN		02

ASSY FIXER HEADER

 
0511053085

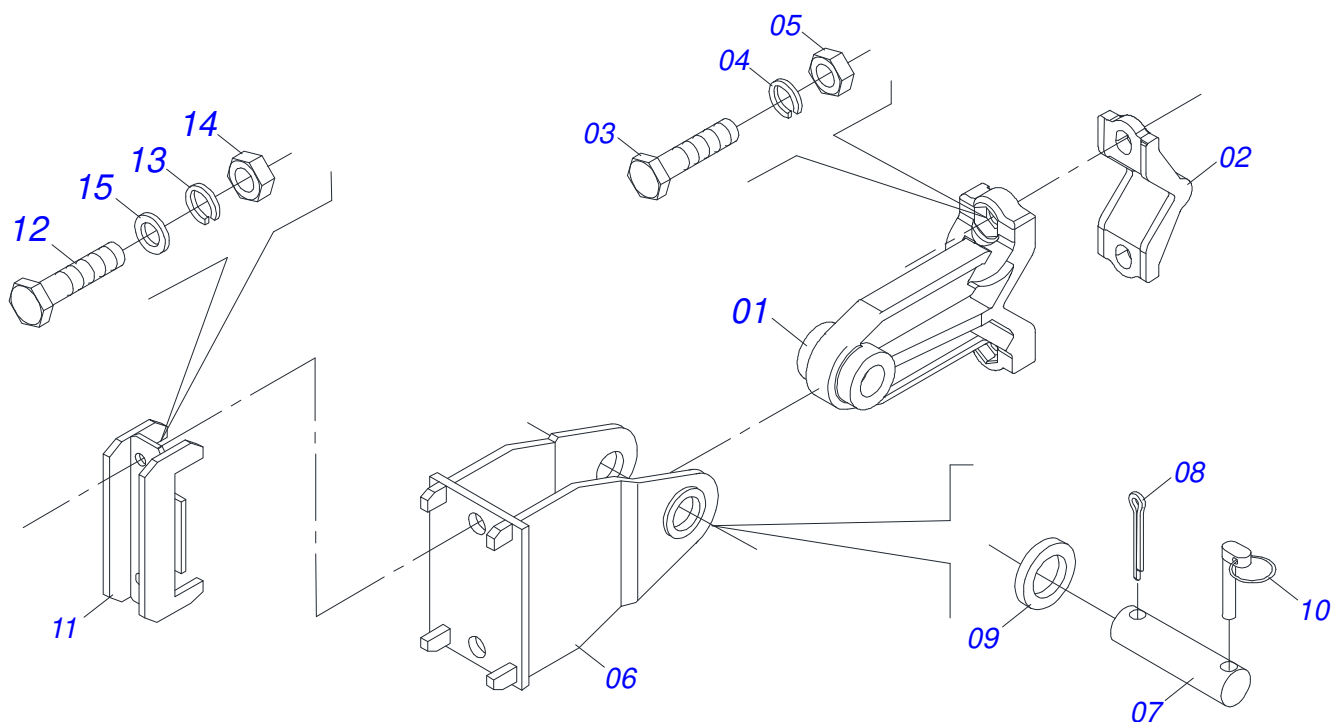


Item	Code	Description	See page	QT
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	04	
02	0502012330	SUPPORT FIXER PIVOT	04	
03	0503011084	3/4" X 5" BOLT	08	
04	0503010023	3/4" SPRING WASHER	08	
05	0503010014	3/4" NUT	08	
06	0511065418	DRAWBAR SUPPORT FRONT FIXATION	04	
07	0561014393	COUPLING SHAFT	04	
08	0503010523	1/4" X 2" COTTERPIN	04	
09	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN	08	
10	0503030119	LOCK PIN	04	
11	0511065419	DRAWBAR FIXER CLAMP	04	
12	0521010066	3/4" X 8.12" BOLT	08	
13	0503010023	3/4" SPRING WASHER	08	
14	0503010014	3/4" NUT	08	
15	0501010322	FLAT WASHER	08	

DRAWBAR ASSY

 
0511043100

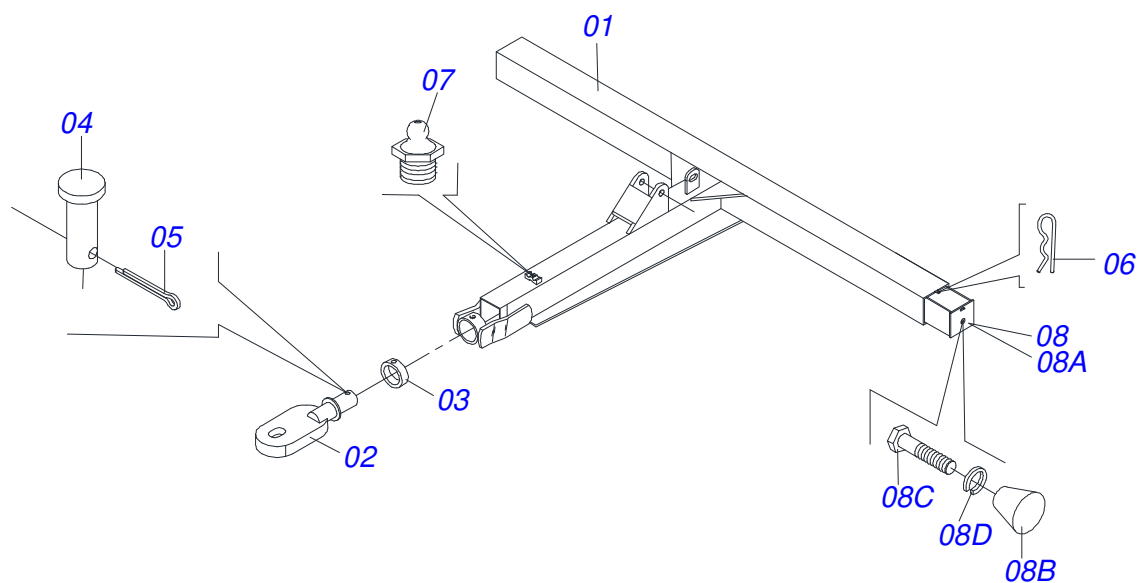


Item	Code	Description	See page	QT
001	0511065905	DRAWBAR COP-CE		01
002	0501069632	TRACTOR HITCH		01
003	0521010681	BUSHING COUPLING BODY		01
004	0521010639	COUPLING SHAFT		01
005	0503010571	1/4" X 1.1/2 COTTERPIN		01
006	0503030012	HAIR PIN		02
007	0503010002	1800 GREASE FITTING		01
008	0511043137	TOOLS BOX ASSY		02
008A	0511065471	BOX OF TOOLS		01
008B	0503010293	BAQUELITE MANIPULACION		01
008C	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
008D	0503011443	3/8" SPRING WASHER		01

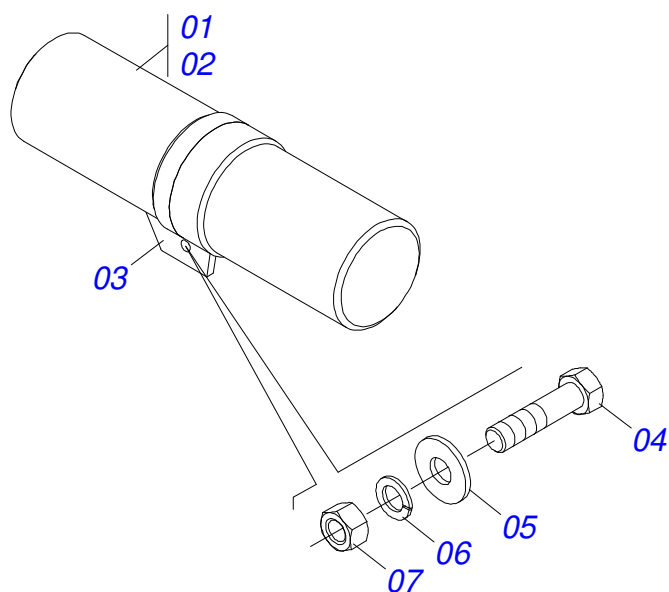 


Item	Code	Description	See page	QT
001	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
002	0511031937	BAG WITH MANUAL CATALOG		01
003	0503010267	NYLON CLAMP		01
004	0503010363	5/16" X 1" BOLT		01
005	0501010694	FLAT WASHER		01
006	0503010179	LOCK WASHER		01
007	0503010337	5/16" NUT		01

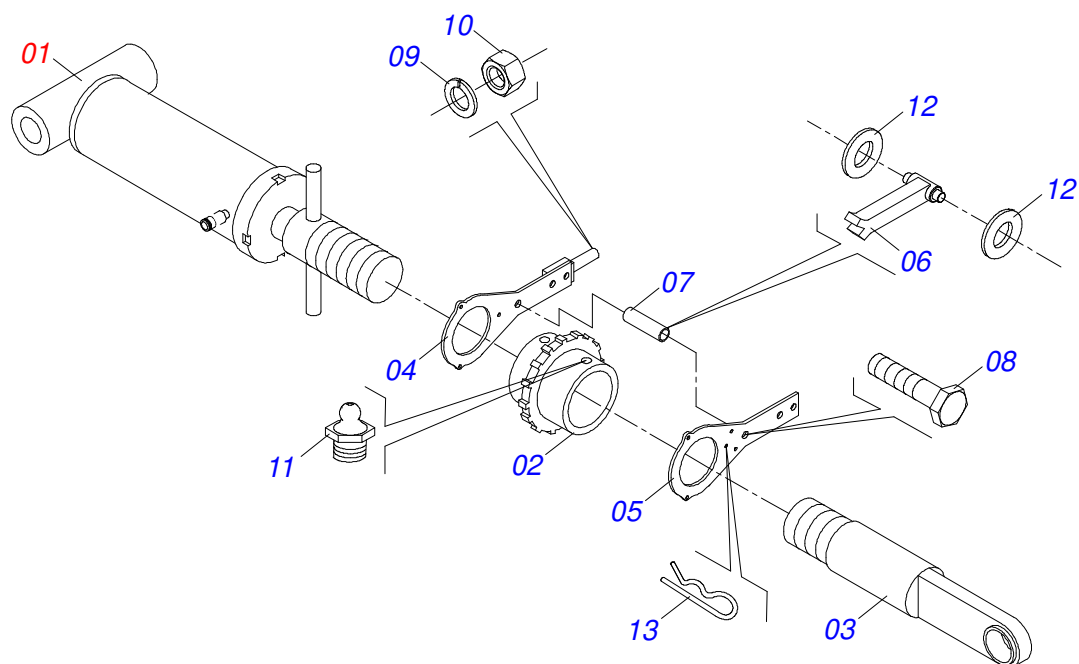 


Item	Code	Description	See page	QT
001	0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER	58	01
002	0502011237	ESTABILIZER BODY		01
003	0511065467	LH SCREW ARBOR		01
004	0511061880	SIDE RIGHT RATCHET		01
005	0531010264	SIDE RATCHET		01
006	0511061881	RATCHET FOLLOWER		01
007	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
008	0503011179	3/8" X 2-1/4" BOLT		05
009	0503010025	3/8" SPRING WASHER		05
010	0503010026	3/8" NUT		05
011	0503010002	1800 GREASE FITTING		02
012	0521018517	FLAT WASHER		02
013	0503030012	HAIR PIN		01

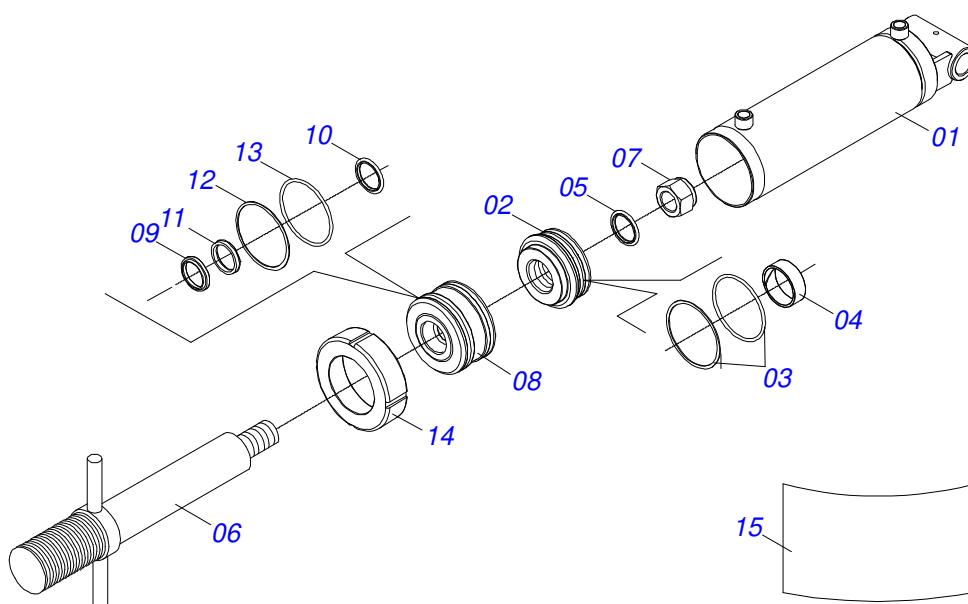 


Item	Code	Description	See page	07
01	0511064908	4.5" X 25.4" CYLINDER CASE		01
02	0502011221	2.0" X 4.5" PISTON		01
03	0503011890	3750-3750 GASKET		02
04	0503011891	W2-4500-500 RING G.E		01
05	0503010345	2-218 N 3006-9B O'RING		01
06	0511064909	2" X 14.4" TURNBUCLE		01
07	0503010817	1.1/4" SELF LOCKING NUT		01
08	0502011220	2" X 4.5" RING SUPPORT		01
09	0503010952	W2-2250-500 RING		01
10	0503010991	1870-2000-375-B GASKET		01
11	0503010039	D-2000 SCRAPER RING		01
12	0503011892	O' RING, 2-346 N 3006-9B		01
13	0503011893	BACK-UP RING, 8-346		01
14	0502011222	0.56" END CAP		01
15	0501032513	HYDRAULIC CYLINDER REPAIR KIT		01

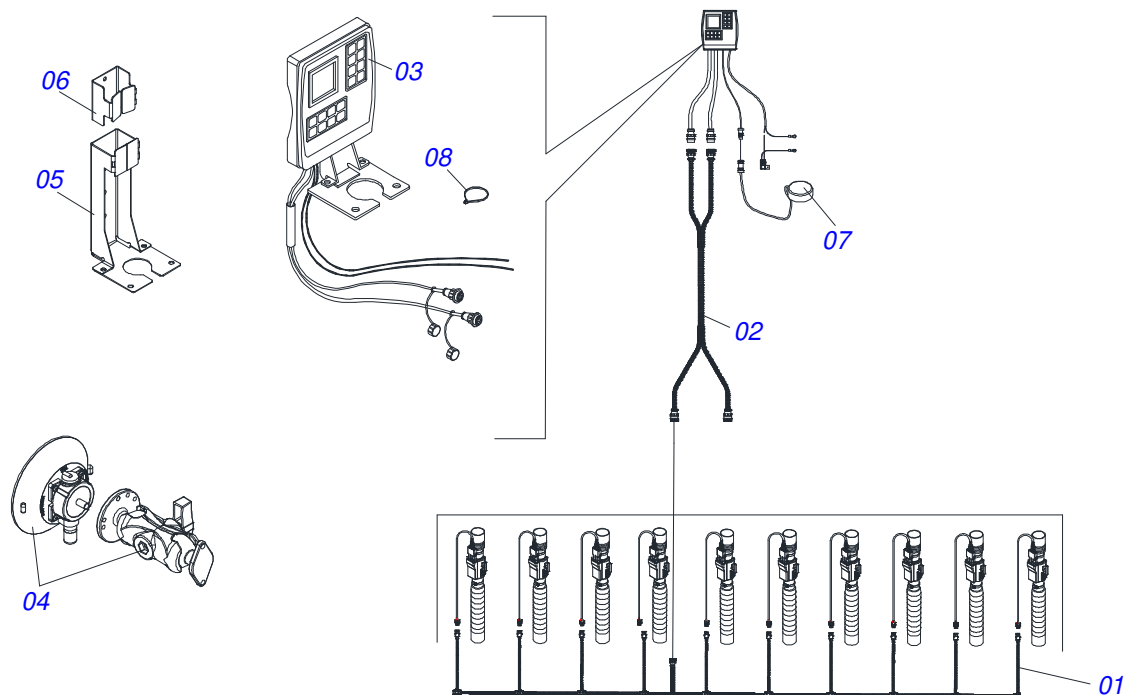 


Item	Code	Description	See page	10 L
01	0503016556	10 ROW SIMPLE MONITOR CABLE	01	
02	0503017577	CAB UNIC PM400	01	
03	0503017602	MONITOR PLANT PM400	01	
04	0503016234	TRIMBLE FIXING WINDOW	01	
05	0503016452	FIXING SUPPORT AG500 TRIMBLE	01	
06	0571012196	MOUNTING BRACKET PM 400	01	
07	0503017443	ANTENNA GPS PM 400	01	
08	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP	150	

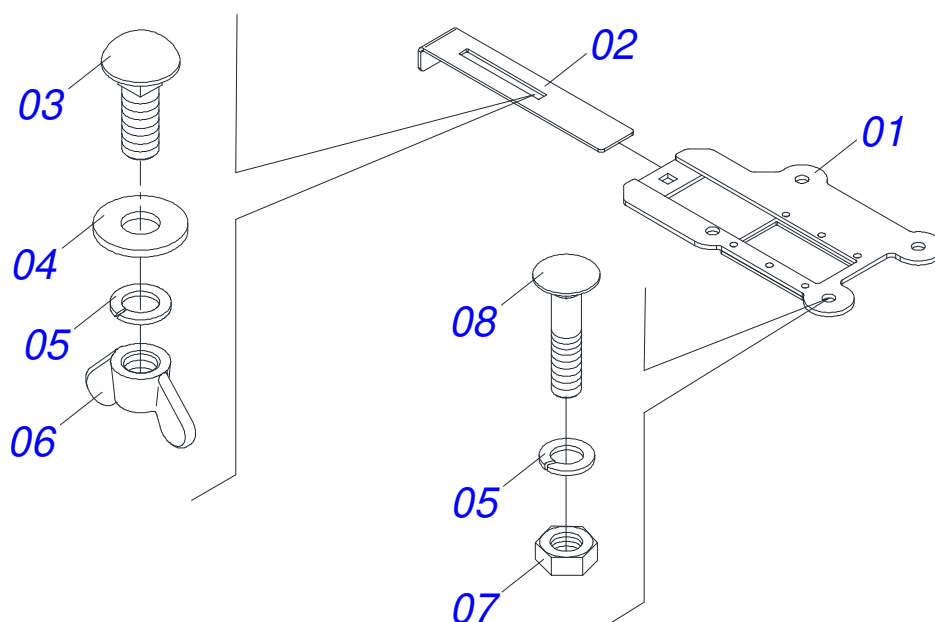 


Item	Code	Description	See page	QT
001	0521067215	BASE SUPPORT PRECISION PLANTING		01
002	0581012522	SEED DISTRIBUTOR BOX SWITCH		01
003	0501011643	3/8 X 1"BOLT		01
004	0501010984	FLAT WASHER		01
005	0503010025	3/8" SPRING WASHER		05
006	0503010209	3/8" UNC BUTTERFLY NUT		01
007	0503010026	3/8" NUT		04
008	0503010849	3/8" X 1-1/2" BOLT		04

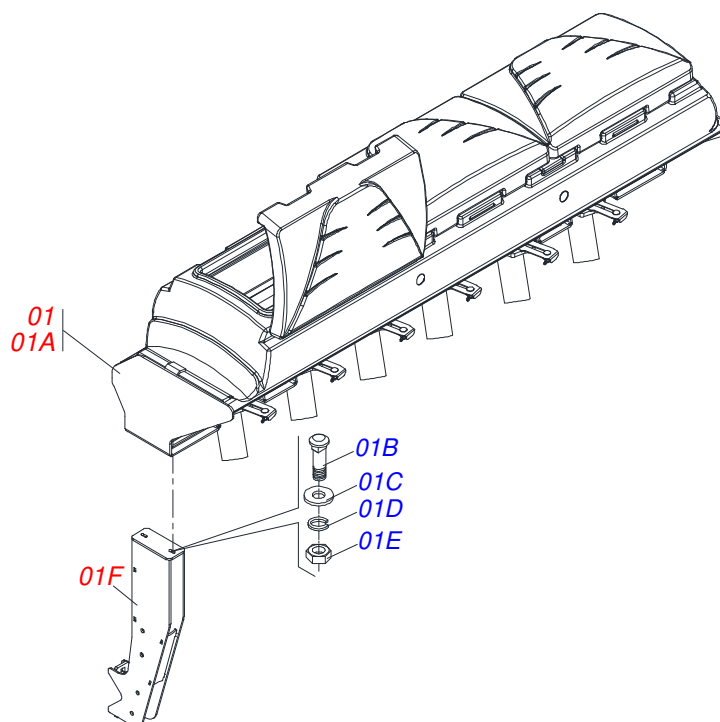 


Item	Code	Description	See page	QT
001	0521050110	ASSEMBLY CSU	62	02
001A	0521050109	ASSEMBLY CSU	63	01
001B	0501010942	3/8" X 1-1/4" BOLT		04
001C	0501010984	FLAT WASHER		04
001D	0503010025	3/8" SPRING WASHER		04
001E	0503010026	3/8" NUT		04
001F	0521051927	TOWER SUPPORT HOPPER	65	02

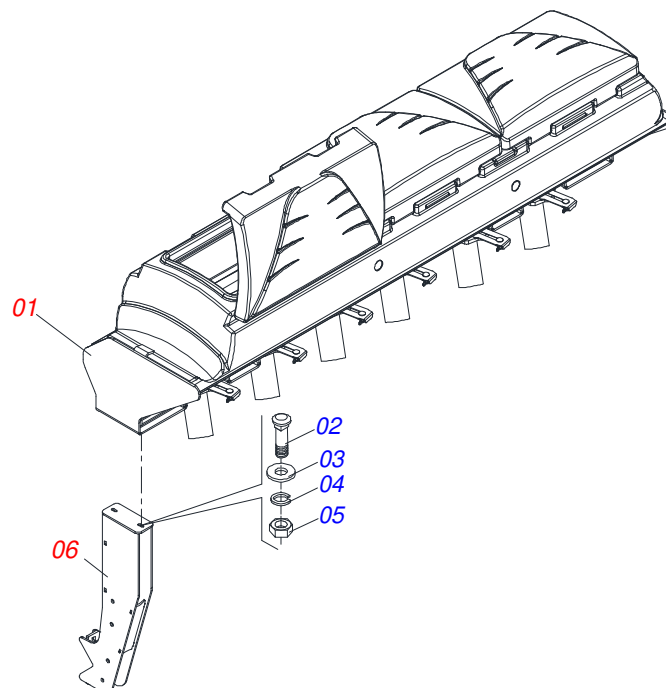 


Item	Code	Description	See page	QT
001	0521050109	ASSEMBLY CSU	63	01
002	0501010942	3/8" X 1-1/4" BOLT		04
003	0501010984	FLAT WASHER		04
004	0503010025	3/8" SPRING WASHER		04
005	0503010026	3/8" NUT		04
006	0521051927	TOWER SUPPORT HOPPER	65	02

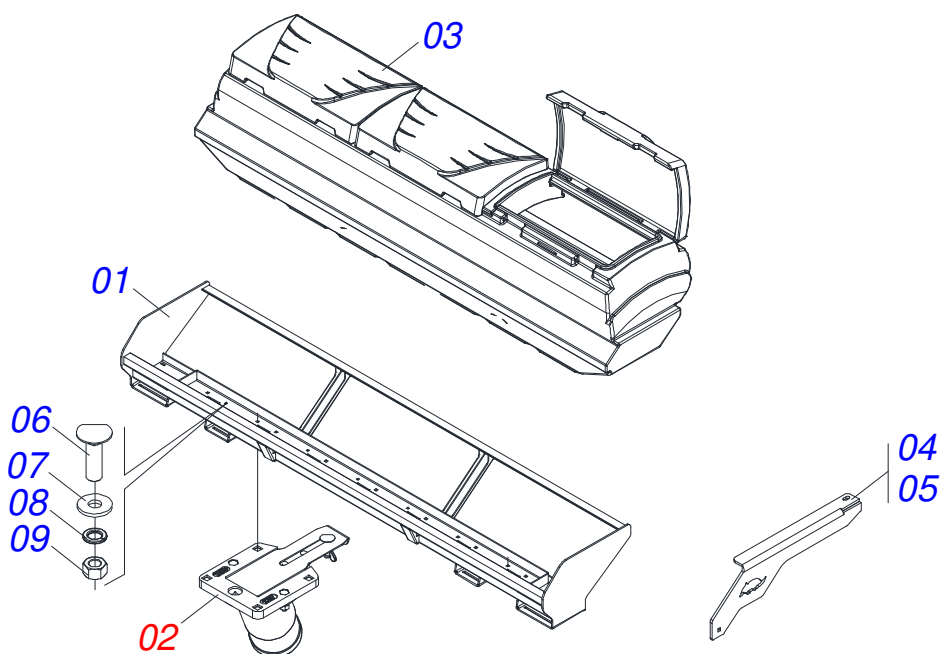 


Item	Code	Description	See page	QT
001	0521067411	FERTILIZER BOX SUPPORT		01
002	0511057690	3" ARTICULATED SEED CONDUCTOR	64	05
003	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED		01
004	0581013196	LEFT LOCK		01
005	0581013195	LOCK RIGHT		01
006	0501010942	3/8" X 1-1/4" BOLT		24
007	0501013518	FLAT WASHER		04
008	0503010025	3/8" SPRING WASHER		24
009	0503010026	3/8" NUT		24

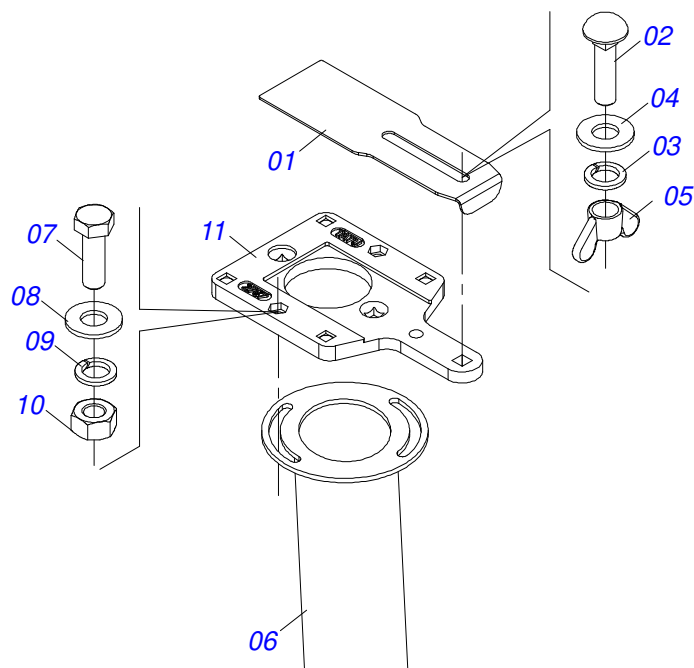 


Item	Code	Description	See page	QT
01	0571015779	COVER SUPPORT CONDUCTOR ARTICULATION		01
02	0501010942	3/8" X 1-1/4" BOLT		01
03	0503010025	3/8" SPRING WASHER		01
04	0501010984	FLAT WASHER		01
05	0503010209	3/8" UNC BUTTERFLY NUT		01
06	0521066332	CONDUCTOR WITH FLANGE		01
07	0503010371	5/16" X 1" BOLT		02
08	0501010694	FLAT WASHER		02
09	0503010179	LOCK WASHER		02
10	0503010337	5/16" NUT		02
11	0502012767	FIXER CONDUCTOR SEED CSU SUPPORT		01

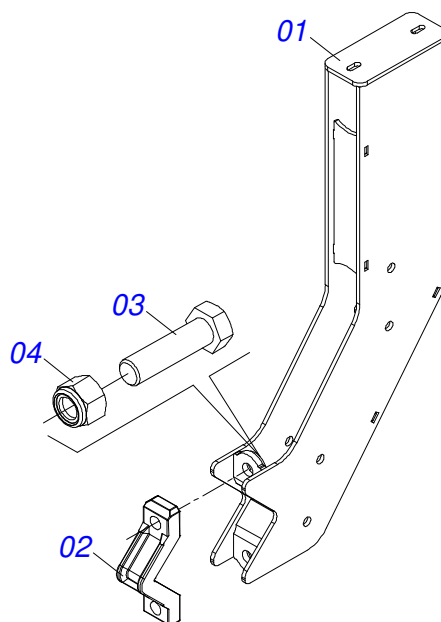 


Item	Code	Description	See page	QT
01	0521066208	SUPPORT TOWER SILO		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

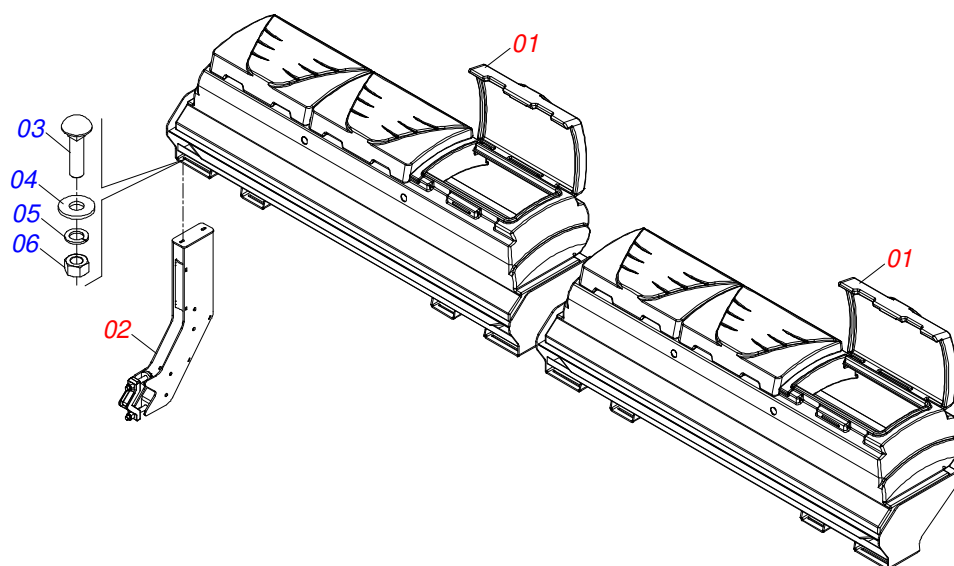 


Item	Code	Description	See page	QT
01	0511058100	2 BOXES WITH 9 CONDUCTORS ASSEMBLY	67	01
02	0521051927	TOWER SUPPORT HOPPER	65	04
03	0501010942	3/8" X 1-1/4" BOLT		08
04	0501010984	FLAT WASHER		08
05	0503010025	3/8" SPRING WASHER		08
06	0503010026	3/8" NUT		08

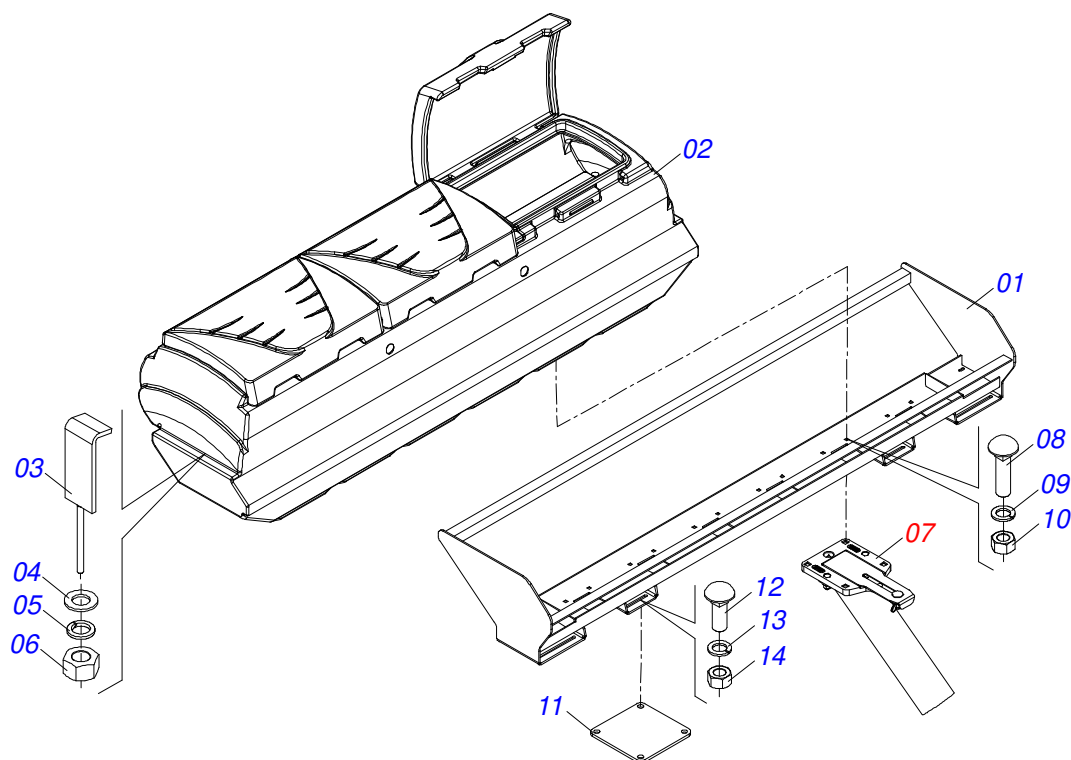 

Item	Code	Description	See page	QT
01	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS		02
02	0503061899	REAR BEAN FERTILIZER ASSY		02
03	0521063401	SEED BOX ONLY FIXING LOCK		04
04	0501010984	FLAT WASHER		04
05	0503010025	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0511057690	3" ARTICULATED SEED CONDUCTOR	64	09
08	0501010942	3/8" X 1-1/4" BOLT		36
09	0503010025	3/8" SPRING WASHER		36
10	0503010026	3/8" NUT		36
11	0571015773	SUPPORT SEED		03
12	0501011643	3/8 X 1" BOLT		12
13	0503010025	3/8" SPRING WASHER		12
14	0503010026	3/8" NUT		12

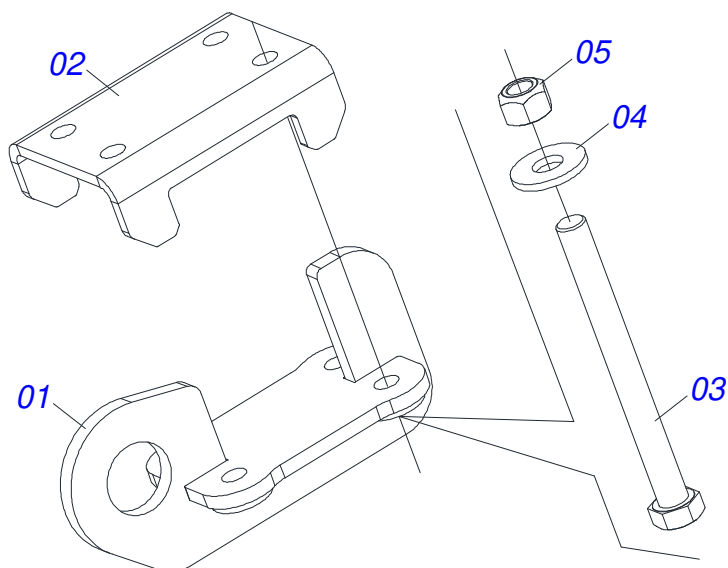 

Item	Code	Description	See page	QT
01	0521066608	LIFTING HOOK		01
02	0581019707	FIXATION SUPPORT SUPPORT		01
03	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
04	0501012140	FLAT WASHER		04
05	0503012412	5/8 UNC SELF LOCKING NUT		04

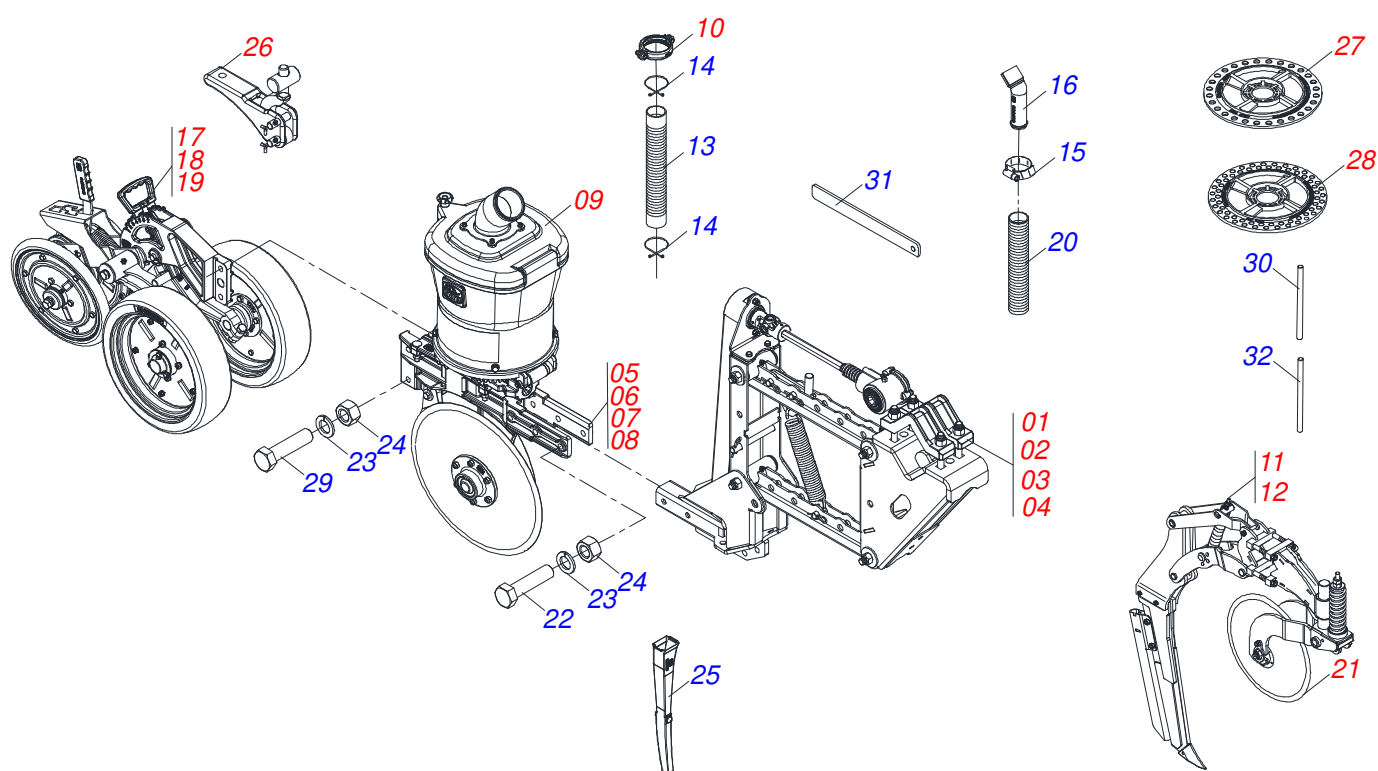 


Item	Code	Description	See page	QT
01	0501059362	LONG SEED ROW FRONT	70	01
02	0501059350	LONG FRONT SEED ROW	75	01
03	0501059349	SHORT SEED ROW FRONT	76	01
04	0501059361	SHORT SEED ROW FRONT	77	01
05	0511052317	RH SEED ROW REAR	79	01
06	0511052319	RIGHT REAR SEED ROW	83	01
06.	0511051783	RIGHT REAR SEED ROW TITANIUM	84	01
07	0511052318	LH SEED ROW REAR	85	01
08	0511051782	LEFT REAR SEED ROW	87	01
08.	0511052320	REAR LEFT ROW SEED TITANIUM	88	01
09	0521059094	SIGMA SOY SINGLE SEED SYSTEM	92	01
10	0521050525	FIXER FERTILIZER CONDUCTOR	115	01
11	0511053825	SEMI-ASSEMBLED SHORT FERTILIZER LINE	95	01
12	0511053826	SEMI-ASSEMBLED LONG FERTILIZER LINE	96	01
13	0503031145	2" X 2" X 20" HOSE		01
14	0503031076	2" HOSE CLAMP		01
15	0503010246	CLAMP		01
16	0503031050	CURVED CONDUCTOR		01
17	0521045198	PRESS WHEELS	97	01
18	0521051424	WHEEL SYSTEM DEPTH/COMPACTOR QUICK ADJUSTMENT	103	01
19	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	108	01
20	0571011730	SEED CONDUCTOR 3" X 1500		01
21	0511048339	24" BLADE DISC ASSY	113	01
22	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
23	0503010019	1/2" SPRING WASHER		01
24	0503010060	1/2" NUT		01
25	0503033672	NOZZLE WITHOUT TITANIUM		01
26	0511052024	FAST CLOSING SET	114	01
27	0503063647	SIGMA CORN DISC SET		01
28	0503063648	SIGMA SOY DISC SET		01
29	0503010905	1/2" X 2-1/4" BOLT		01

**SEED/FERTILIZER ROW ASSEMBLE**

 0909096196

Item	Code	Description	See page	QT
30	0521018501	TURNBUCKLE LEVER		01
31	0511015627	SEED DISC LEVER		01
32	0531013600	PRESS ADJUSTMENT LEVER		01

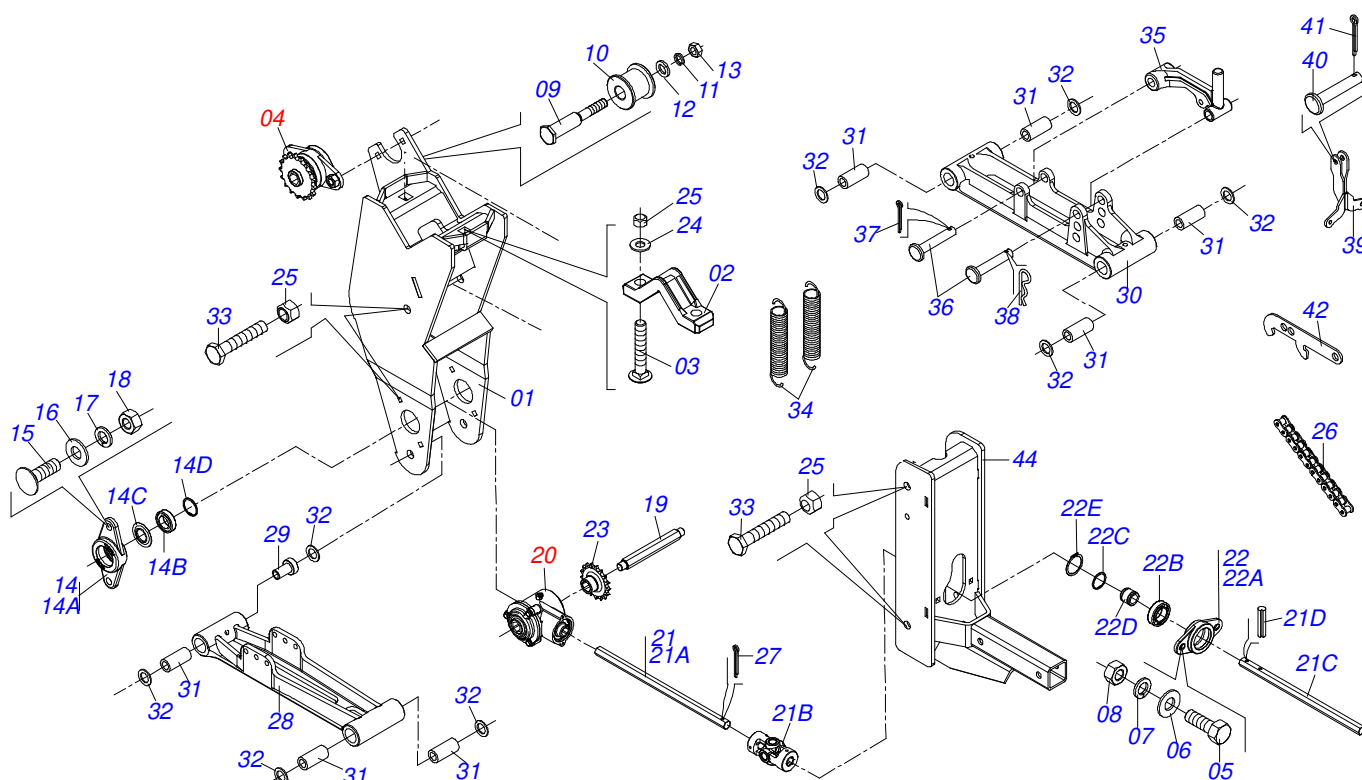


Item	Code	Description	See page	QT
001	0521064653	RIGH SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	71	01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY	72	02
014A	0502012718	BEARIN BODY		01
014B	0503012882	BEARING		01
014C	0503017011	SEAL RING		01
014D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	73	01
021	0501059327	UNIVERSAL JOINT AXLE		01
021A	0561014794	350 AXLE HEX		01
021B	0501056296	UNIVERSAL JOINT		01
021C	0561016631	HEX AXLE		01
021D	0503011855	0.2" X 1.8" SPRING PIN		02
022	0501059363	5/8" HEX AXLE BEARING	74	01
022A	0502011697	BEARING OF THE GEAR BOX		01


LONG SEED ROW FRONT

0501059362

Item	Code	Description	See page	QT
022B	0503011410	ROLLER BEARING		01
022C	0503011105	SEAL RING		01
022D	0561014911	AXLE SLEVE GUIDES HEX		01
022E	0503010406	501025 CLAMPING RING (FOR AXLE)		02
023	0502012782	17Z GEAR WITH HEX HOLE		01
024	0501012140	FLAT WASHER		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02
026	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	CUPILLA		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0503010013	5/8" NUT		02
044	0521061428	CC TIRE ROW FRAME		01

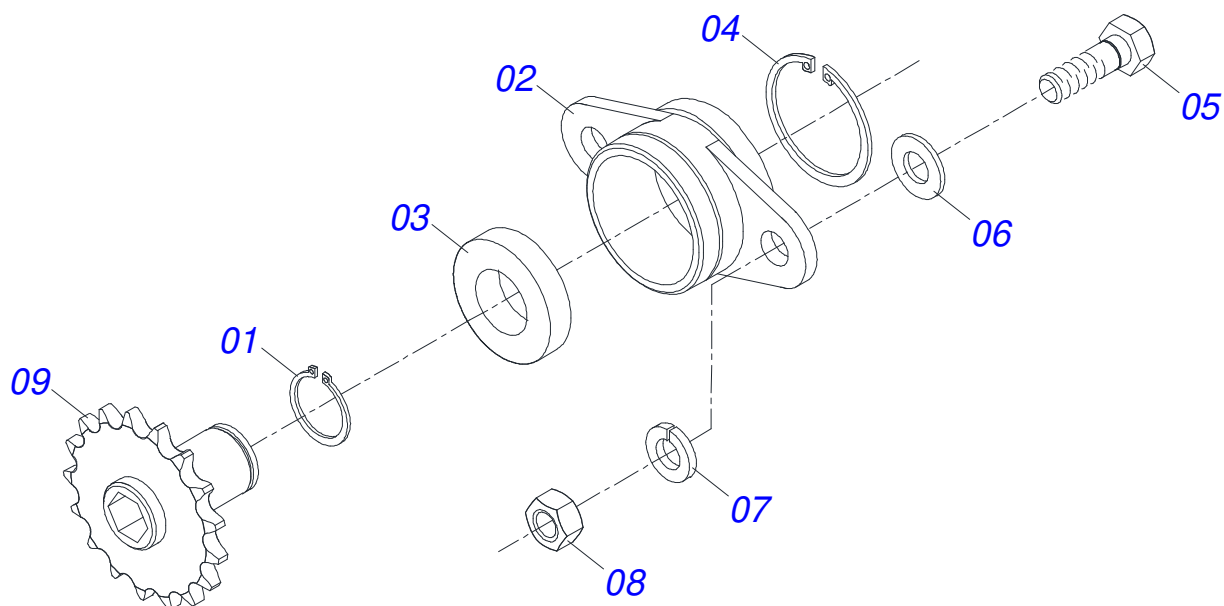 


Item	Code	Description	See page	QT
01	0503010406	501025 CLAMPING RING (FOR AXLE)		01
02	0502011697	BEARING OF THE GEAR BOX		01
03	0503011410	ROLLER BEARING		01
04	0503011105	SEAL RING		01
05	0503011953	5/16" X 1" BOLT		02
06	0501010694	FLAT WASHER		02
07	0503010179	LOCK WASHER		02
08	0503010337	5/16" NUT		02
09	0502012819	17Z GEAR WITH HEX HOLE		01

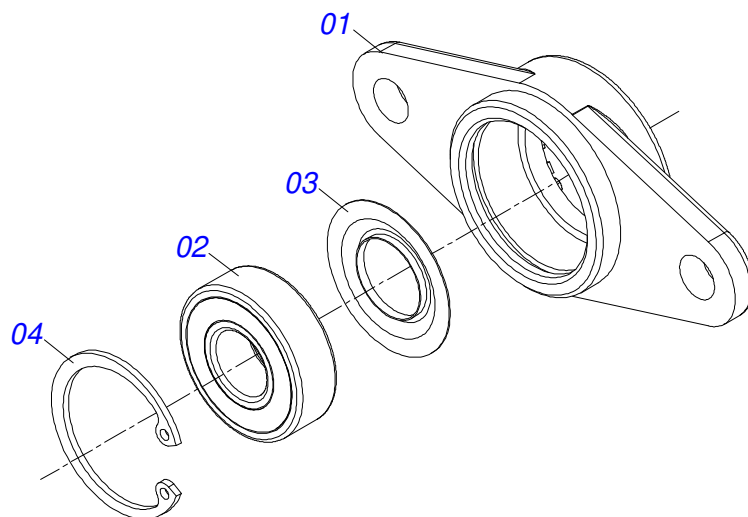 


Item	Code	Description	See page	QT
01	0502012718	BEARIN BODY		01
02	0503012882	BEARING		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

TRANSMISSION BOX

 
0511054884

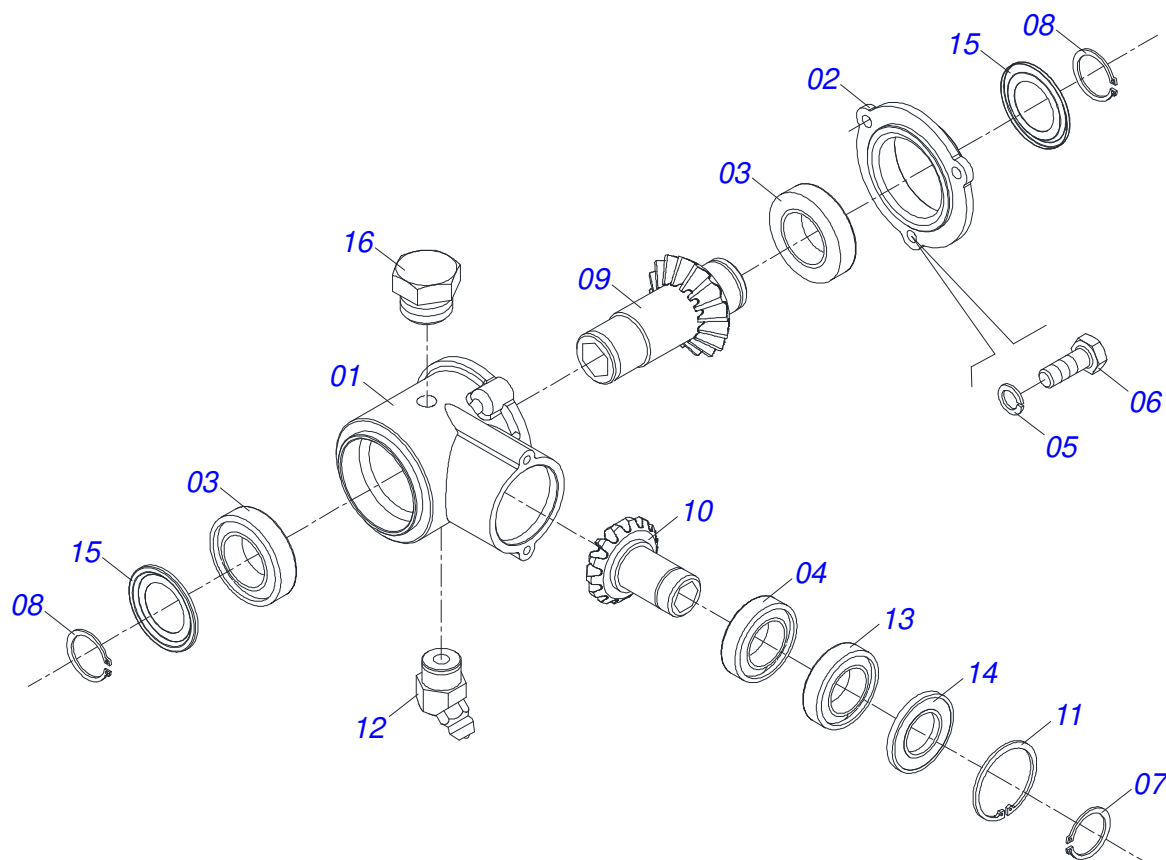

Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0502040857	CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503010003	1845 GREASE FITTING		01
13	0503011409	6005 Z BALL BEARING		01
14	0503017008	SEAL RING		01
15	0503017007	SEAL RING		02
16	0511017907	1/8" BSPT X 6 PLUG		01

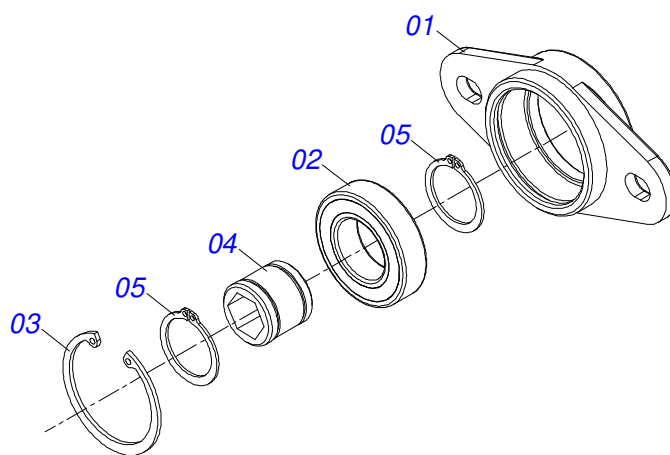 

Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0561014911	AXLE SLEEVE GUIDES HEX		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		02

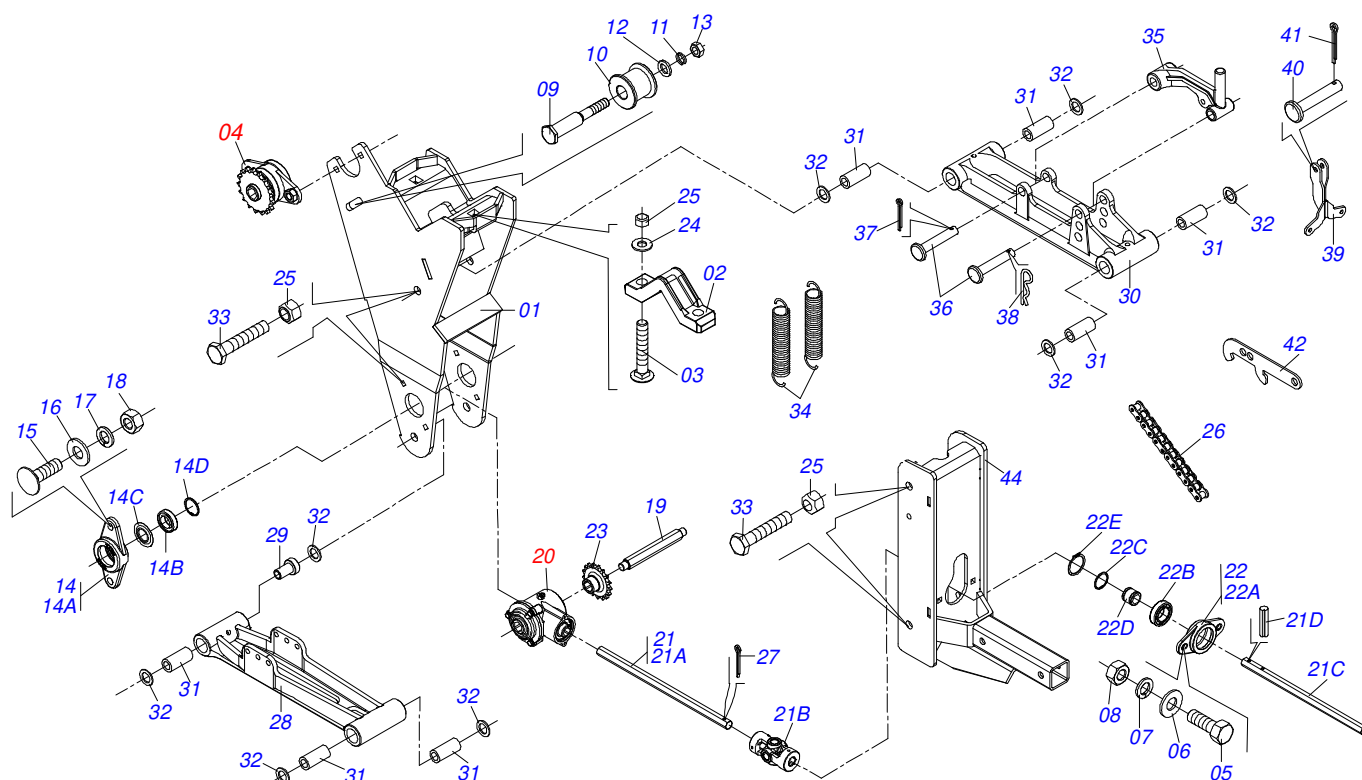 


Item	Code	Description	See page	QT
001	0521064651	LEFT SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	71	01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY	72	02
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	73	01
021	0501059327	UNIVERSAL JOINT AXLE		01
022	0501059363	5/8" HEX AXLE BEARING	74	01
022A	0502011697	BEARING OF THE GEAR BOX		01
022B	0503011410	ROLLER BEARING		01
022C	0503011105	SEAL RING		01
022D	0561014911	AXLE SLEVE GUIDES HEX		01
022E	0503010406	501025 CLAMPING RING (FOR AXLE)		02
023	0502012782	17Z GEAR WITH HEX HOLE		01
024	0501012140	FLAT WASHER		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02
026	0503013114	40-1 CHAIN X 89 LINK + MENDING		01

LONG FRONT SEED ROW

0501059350

Item	Code	Description	See page	QT
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	CUPILLA		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0503010013	5/8" NUT		02
044	0521061428	CC TIRE ROW FRAME		01

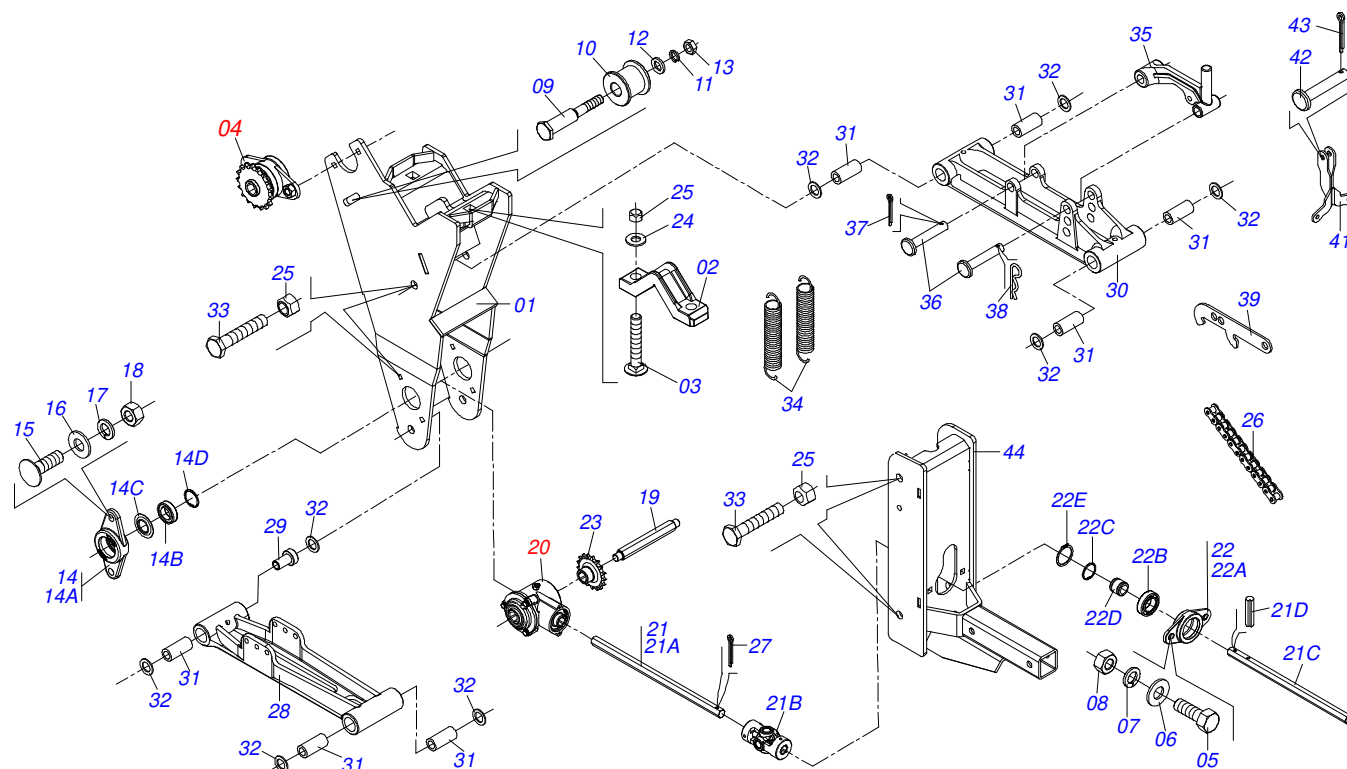 


Item	Code	Description	See page	QT
001	0521064651	LEFT SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	71	01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY	72	02
014A	0502012718	BEARIN BODY		01
014B	0503012882	BEARING		01
014C	0503017011	SEAL RING		01
014D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	73	01
021	0501059326	UNIVERSAL JOINT AXLE	78	01
021A	0561014794	350 AXLE HEX		01
021B	0501056296	UNIVERSAL JOINT		01
021C	0561016322	5/8" HEX AXLE		01
021D	0503011855	0.2" X 1.8" SPRING PIN		02
022	0501059363	5/8" HEX AXLE BEARING	74	01
023	0502012782	17Z GEAR WITH HEX HOLE		01

SHORT SEED ROW FRONT

0501059349

Item	Code	Description	See page	QT
024	0501012140	FLAT WASHER		02
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	CUPILLA		01
039	0561019032	SEED FERTIL ROW LOCK		01
040	0503010013	5/8" NUT		02
041	0521061850	SPRING UPPER FIXER		01
042	0521010773	0.37" X 1.18" COUPLING SHAFT		01
043	0503010140	1/8" X 3/4" COTTERPIN		01
044	0521061427	SHORT SEED ROW FRAME		01
045	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
046	0503012412	5/8 UNC SELF LOCKING NUT		02
047	0503012412	5/8 UNC SELF LOCKING NUT		04

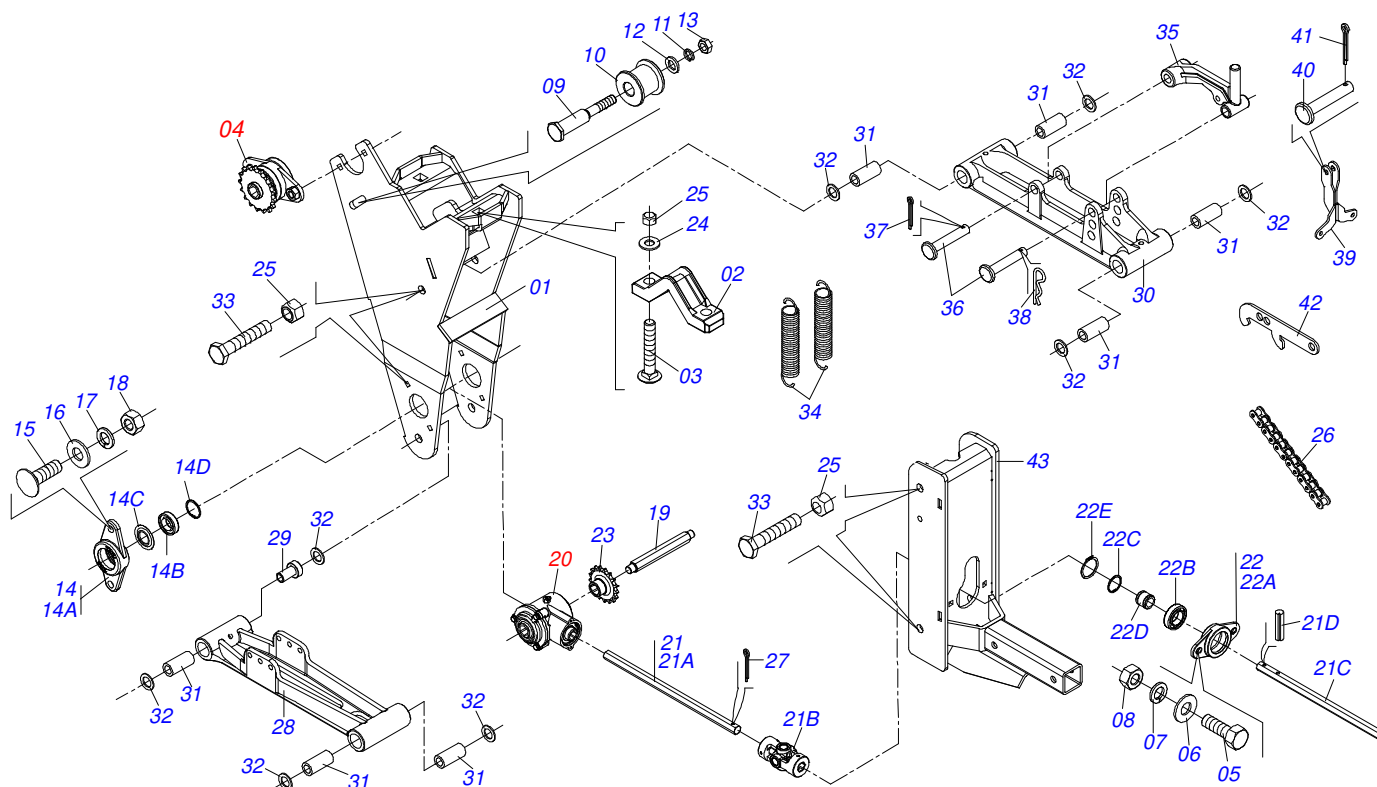 


Item	Code	Description	See page	QT
001	0521064653	RIGH SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	71	01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY	72	02
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	73	01
021	0501059326	UNIVERSAL JOINT AXLE	78	01
022	0501059363	5/8" HEX AXLE BEARING	74	01
023	0503010365	NUT		02
024	0501010694	FLAT WASHER		02
025	0503010179	LOCK WASHER		02
026	0503010337	5/16" NUT		02
027	0503010362	1/8" X 1.1/4" COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08


SHORT SEED ROW FRONT

0501059361


Item	Code	Description	See page	QT
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	CUPILLA		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0521061427	SHORT SEED ROW FRAME		01
044	0503010013	5/8" NUT		02
045	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
046	0503012412	5/8 UNC SELF LOCKING NUT		02
047	0503012412	5/8 UNC SELF LOCKING NUT		04
048	0501012140	FLAT WASHER		02
049	0502012782	17Z GEAR WITH HEX HOLE		01

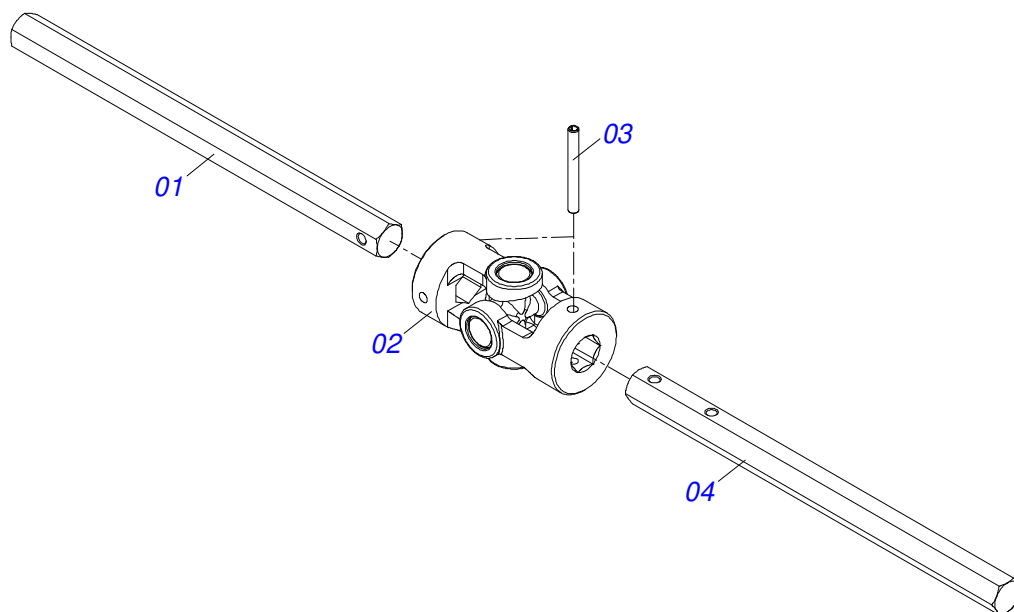 


Item	Code	Description	See page	QT
01	0561016322	5/8" HEX AXLE		01
02	0501056296	UNIVERSAL JOINT		01
03	0503011855	0.2" X 1.8" SPRING PIN		02
04	0561014794	350 AXLE HEX		01

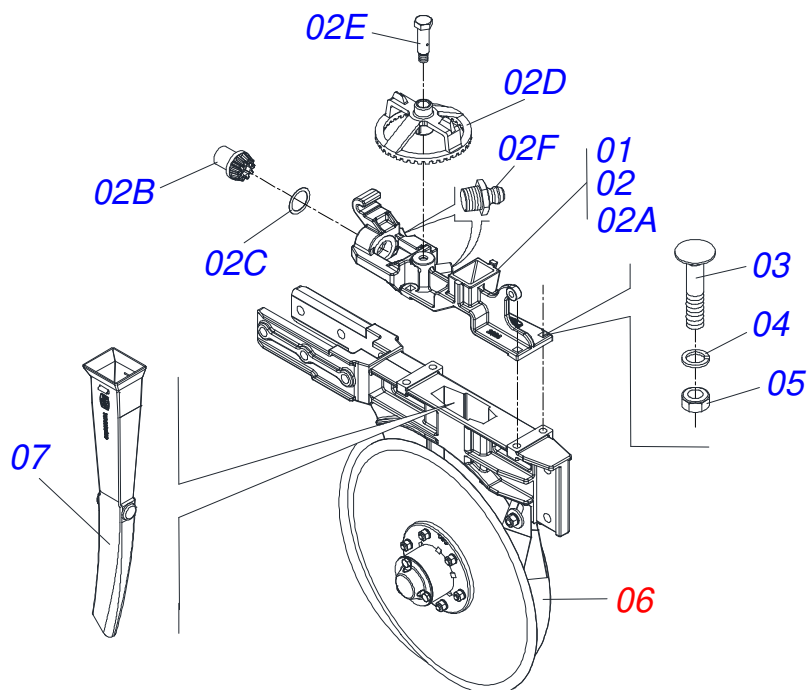 


Item	Code	Description	See page	QT
01	0511052317	RH SEED ROW REAR	79	01
02	0501059648	SEED BOX FIXING BASE		01
02A	0502012624	SEED BOX FIXING BASE		01
02B	0502012639	12Z LOWER CONICAL GEAR		01
02C	0501013354	FLAT WASHER		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059631	DDD SEED 15 X 15 RIGHT	80	01
07	0503033124	SOCKET SEED		01

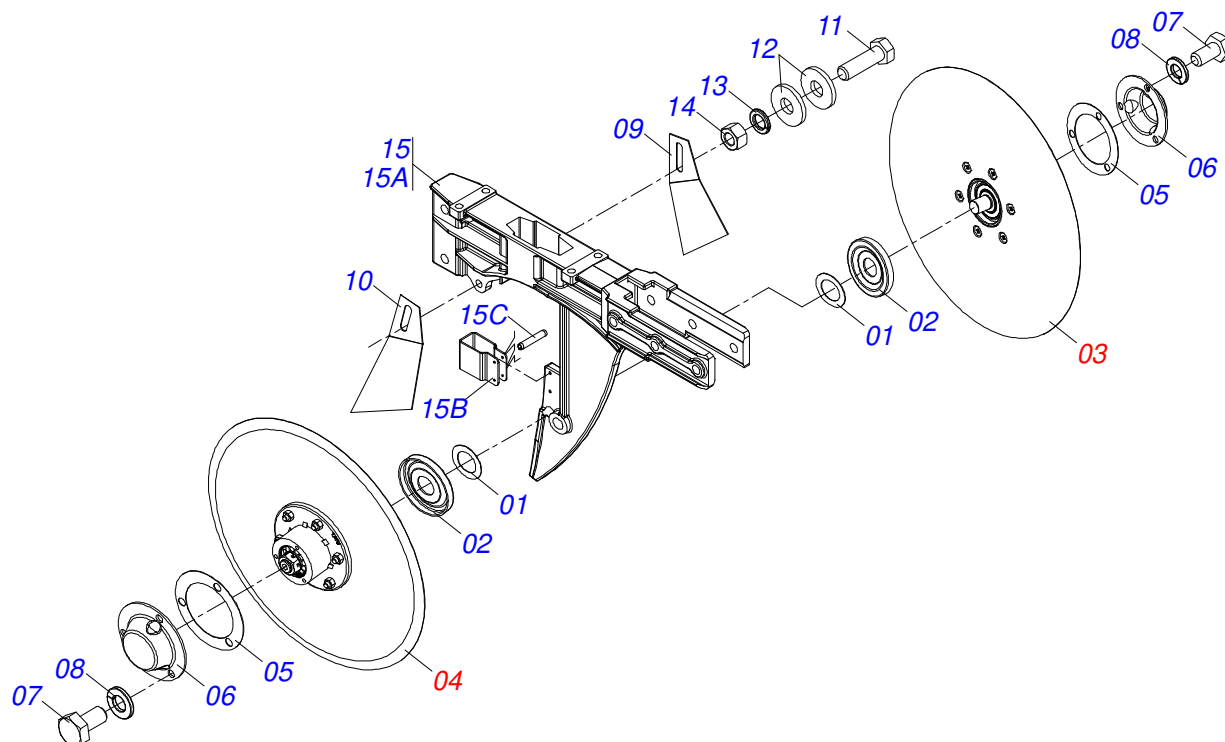 


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	BOX DDD ASSY DPL 15 RIGHT	81	01
04	0501054168	BOX DDD ASSY DPL 15 LEFT	82	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052301	SUPPORT DDD 15 RIGHT		01
15A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

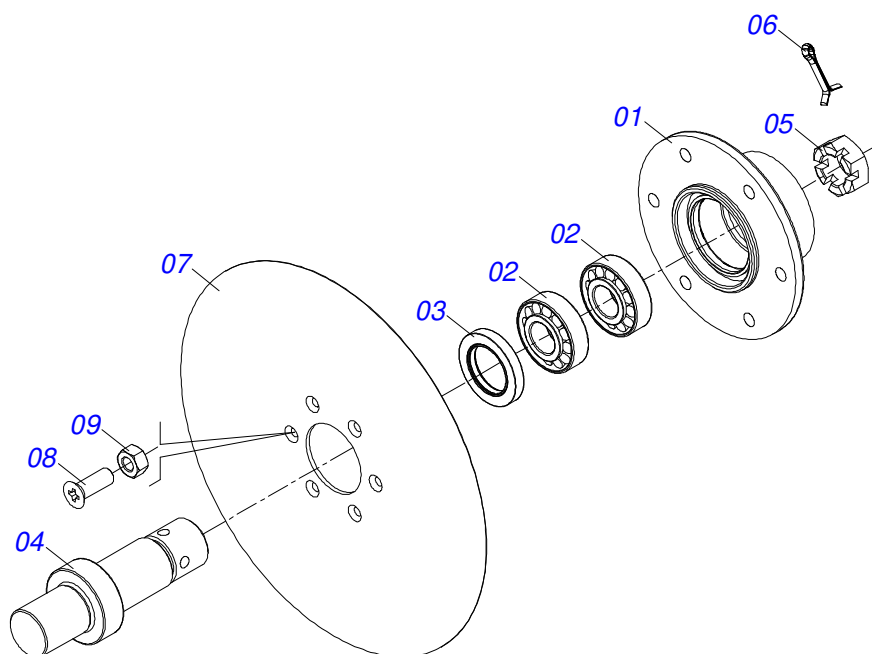 


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT DOUB DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

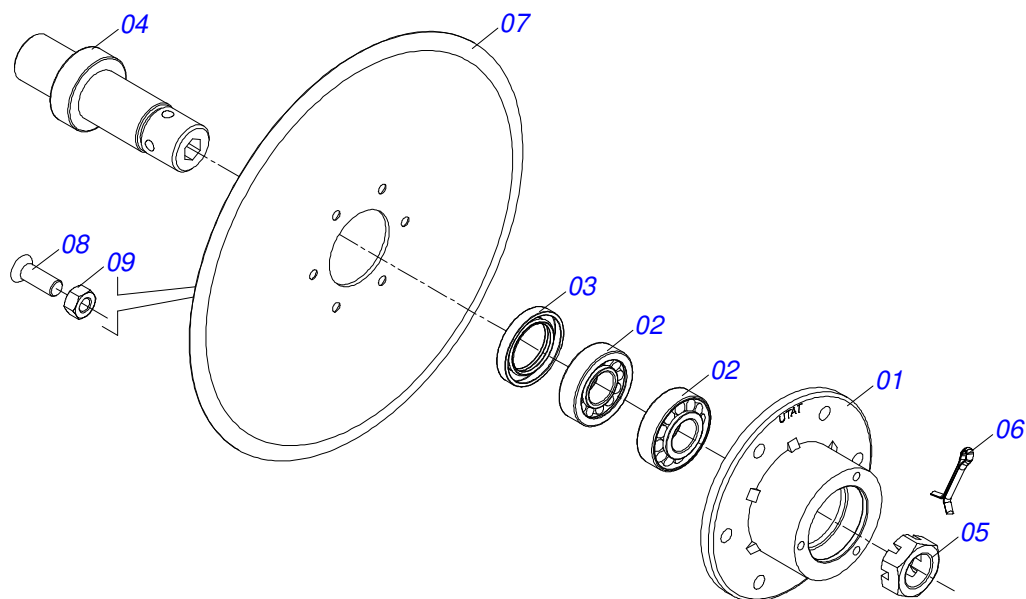 


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

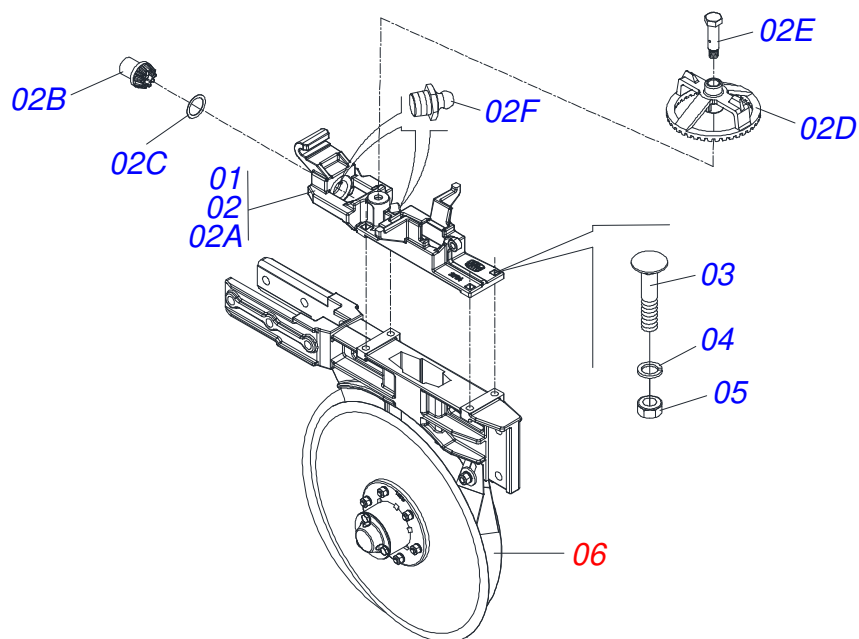 


Item	Code	Description	See page	QT
01	0511052319	RIGHT REAR SEED ROW	83	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059631	DDD SEED 15 X 15 RIGHT	80	01

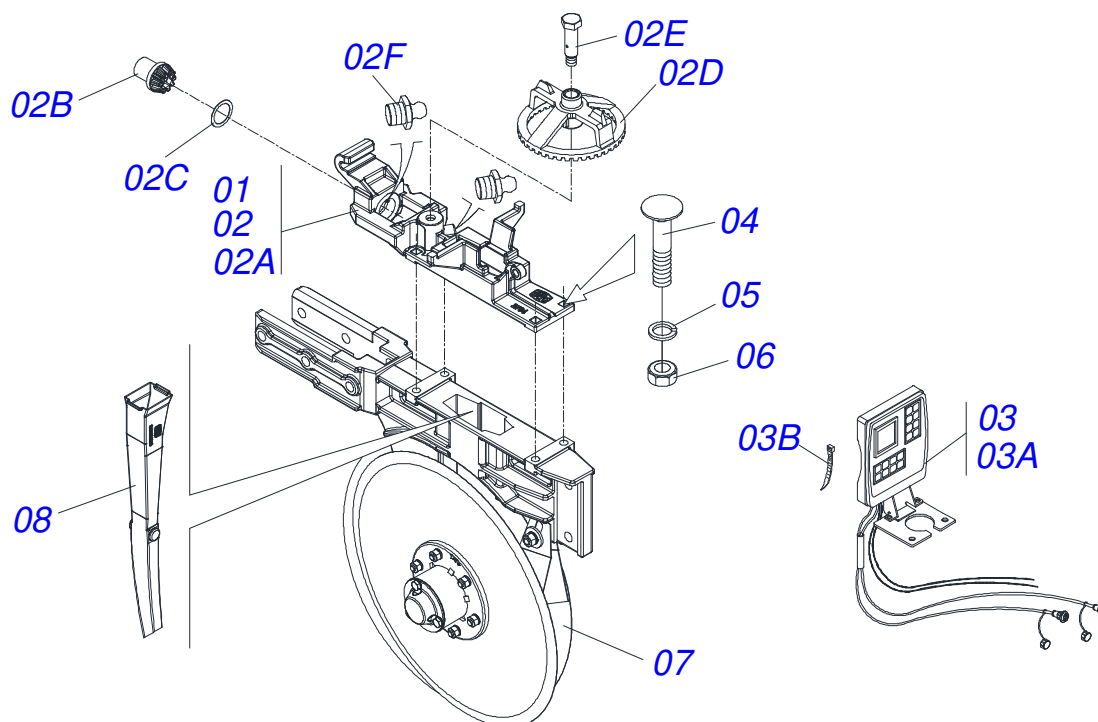 


Item	Code	Description	See page	QT
01	0511051783	RIGHT REAR SEED ROW TITANIUM	84	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0501058972	ASSEMBLY SENSOR ELECTRONIC		01
03A	0503015218	SENSOR FOTOELE PM 400		01
03B	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03
04	0503015920	3/8" UNC X 1.3/4" BOLT		04
05	0503011443	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0501059631	DDD SEED 15 X 15 RIGHT	80	01
08	0503033672	NOZZLE WITHOUT TITANIUM		01

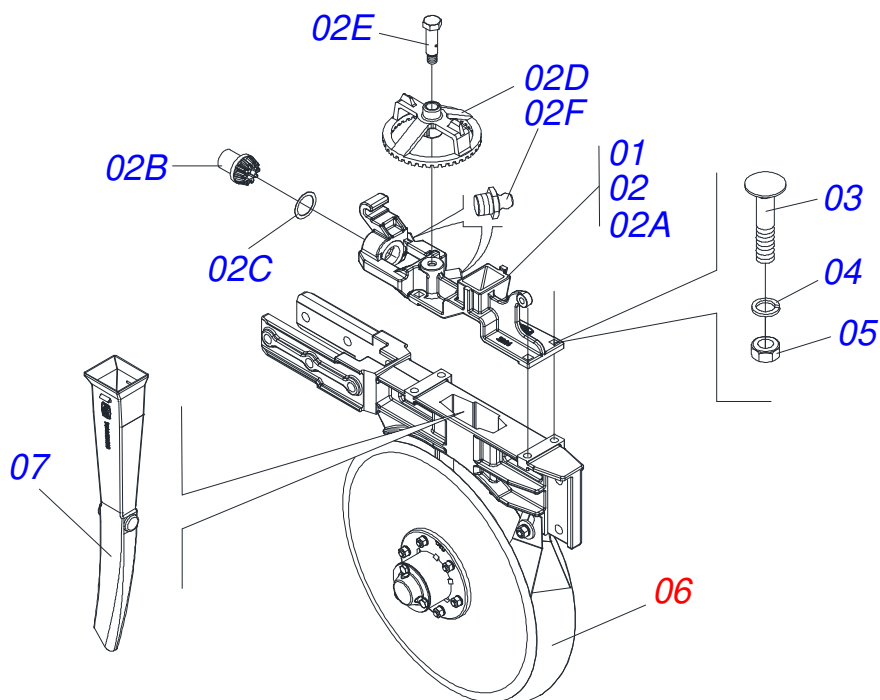 


Item	Code	Description	See page	QT
01	0511052318	LH SEED ROW REAR	85	01
02	0501059648	SEED BOX FIXING BASE		01
02A	0502012624	SEED BOX FIXING BASE		01
02B	0502012639	12Z LOWER CONICAL GEAR		01
02C	0501013354	FLAT WASHER		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059632	DDD SEED 15X15 LEFT	86	01
07	0503033124	SOCKET SEED		01

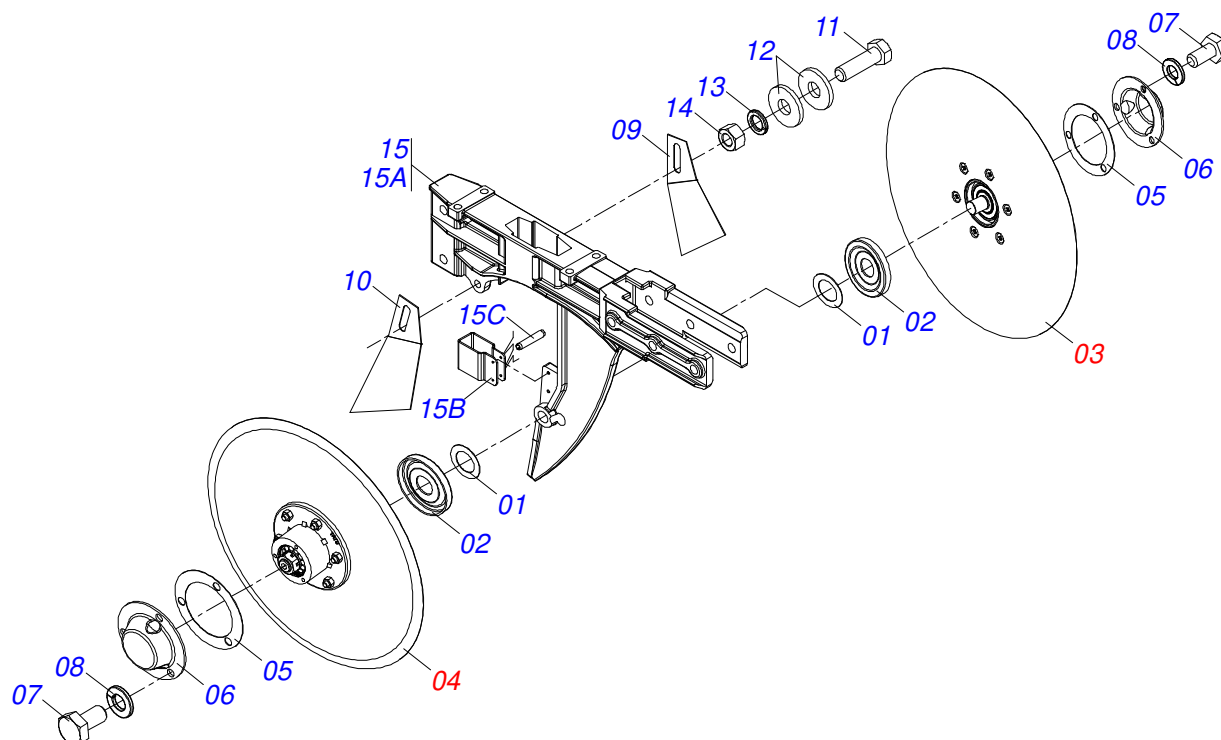 


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	BOX DDD ASSY DPL 15 RIGHT	81	01
04	0501054168	BOX DDD ASSY DPL 15 LEFT	82	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052302	LH SUPPORT DDD GUIDE		01
15A	0561015592	LEFT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

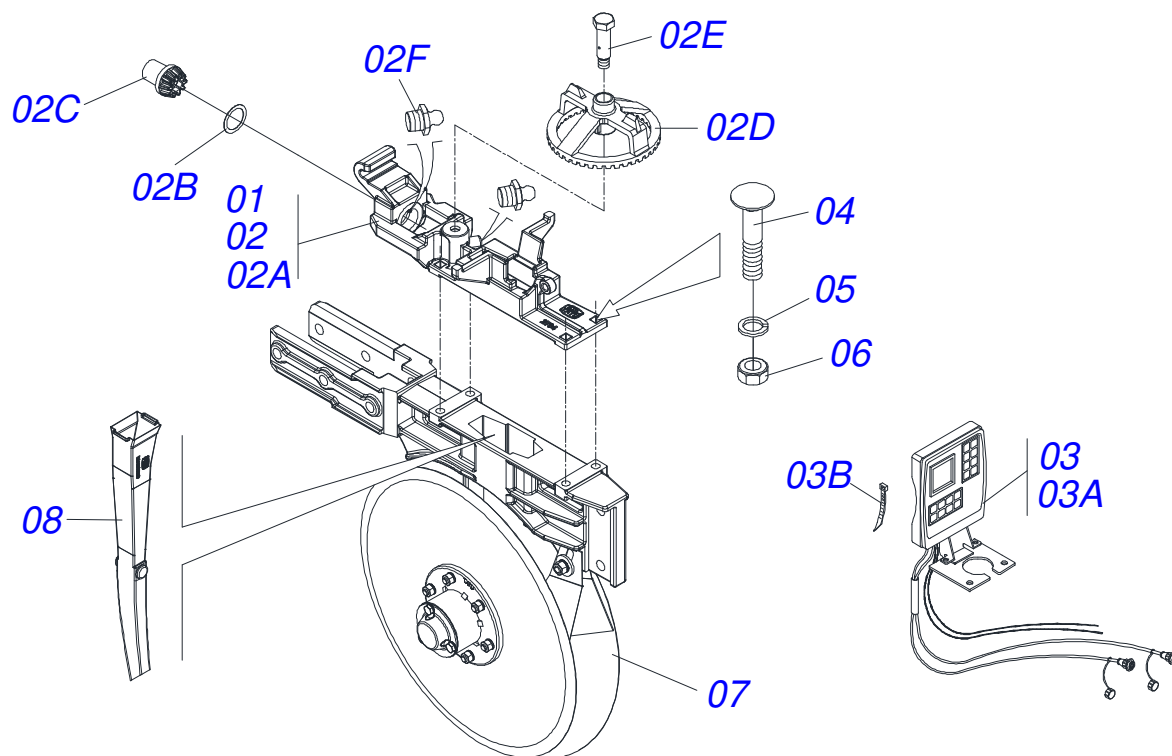 


Item	Code	Description	See page	QT
01	0511051782	LEFT REAR SEED ROW	87	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0501058972	ASSEMBLY SENSOR ELECTRONIC		01
03A	0503015218	SENSOR FOTOELE PM 400		01
03B	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03
04	0503015920	3/8" UNC X 1.3/4" BOLT		04
05	0503011443	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0501059632	DDD SEED 15X15 LEFT	86	01
08	0503033672	NOZZLE WITHOUT TITANIUM		01

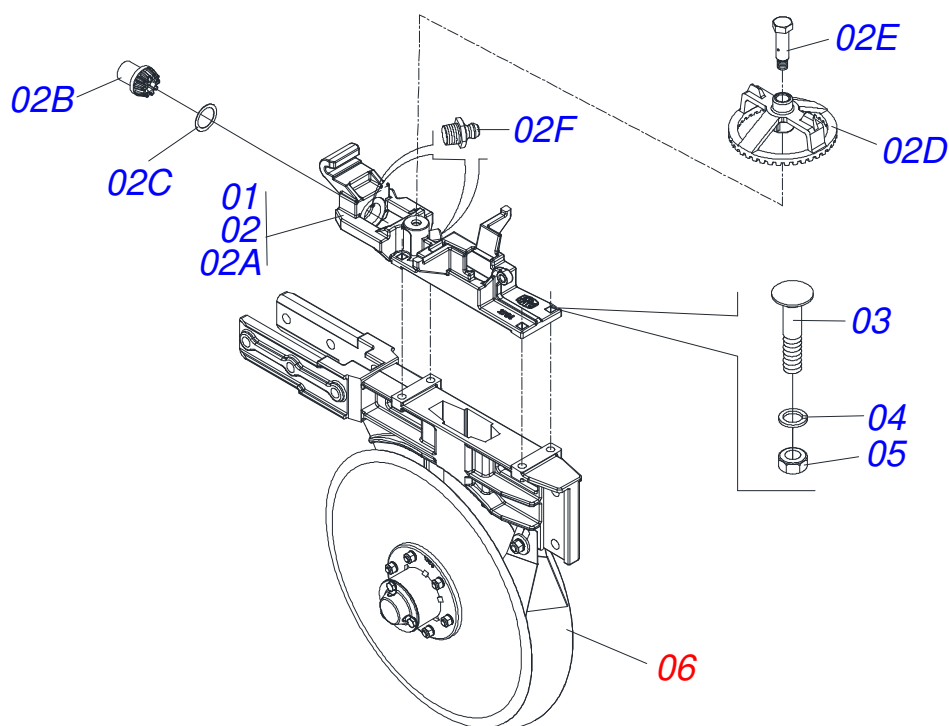 


Item	Code	Description	See page	QT
01	0511052320	REAR LEFT ROW SEED TITANIUM	88	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0502012639	12Z LOWER CONICAL GEAR		01
02C	0501013354	FLAT WASHER		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059632	DDD SEED 15X15 LEFT	86	01

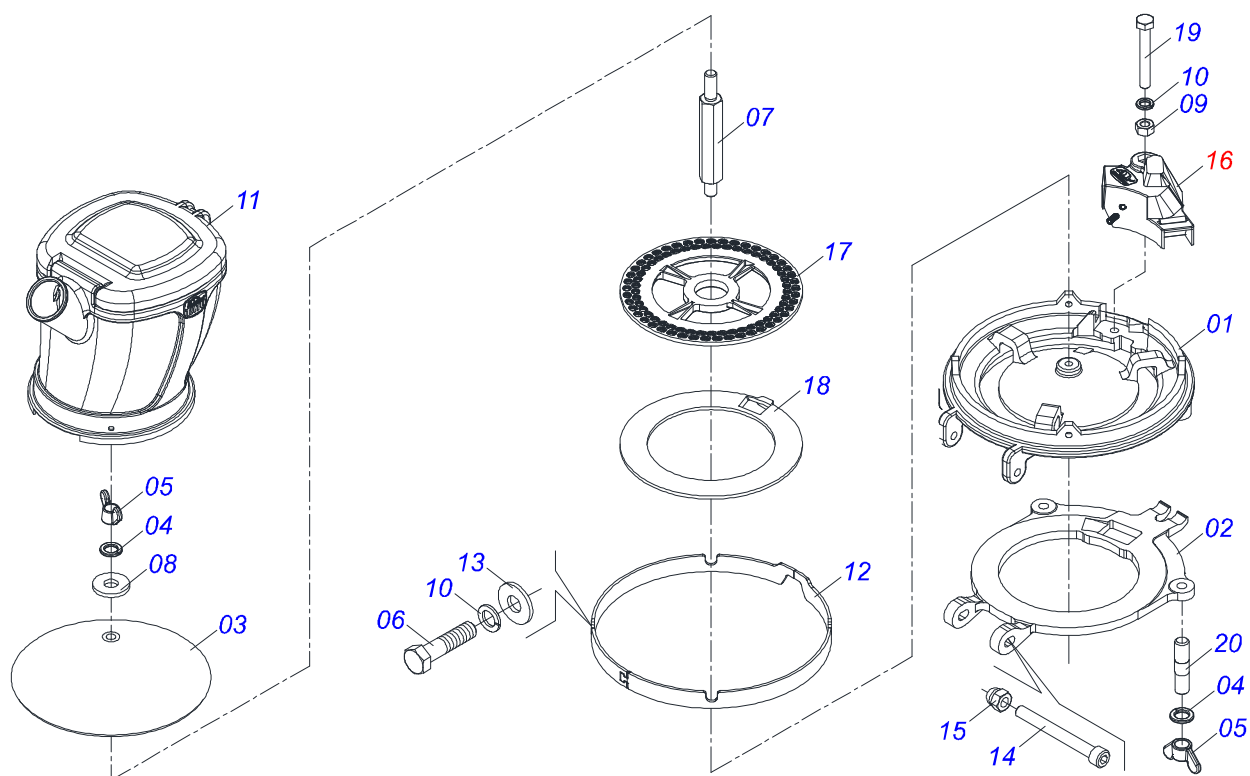 


Item	Code	Description	See page	QT
01	0502020693	SUPPORT SEED BOX		01
02	0502012721	SEED DISC LOWER TRAIL		01
03	0503034131	DEFLECTOR		01
04	0503010025	3/8" SPRING WASHER		03
05	0503010209	3/8" UNC BUTTERFLY NUT		03
06	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		04
07	0571018536	HEX PRISONER		01
08	0501010984	FLAT WASHER		01
09	0503010337	5/16" NUT		01
10	0503010179	LOCK WASHER		05
11	0503062582	DEPOSIT SEED		01
12	0581011346	ADAPTER DEPOSIT		01
13	0501010694	FLAT WASHER		04
14	0503016282	ALLEN BOLT		01
15	0503016283	M8 NUT HEX		01
16	0501051094	ASSY SEED DISTRIBUTOR	90	01
17	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
18	0503016219	RING TO SOYBEANS		01
19	0503010675	5/16" X 2.1/4" BOLT		01
20	0503030083	3/8" X 3/8" X 1.6" STUD		02

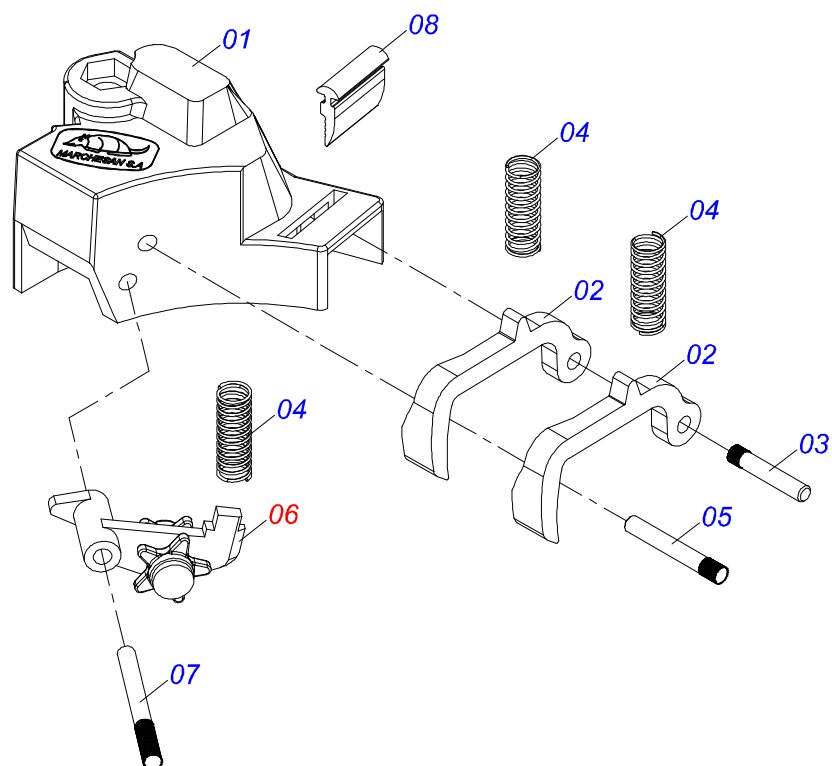 


Item	Code	Description	See page	QT
01	0503030381	SEED DISTRIBUTOR BOX		01
02	0502010447	TRIGGER		02
03	0501013467	KEY AXLE		01
04	0503030378	0.4" X 1.1" X 0.03" SPRING		03
05	0501013466	KEY LIMITER AXLE		01
06	0501051119	DOUBLE PULLEY ROCKER'S	91	01
07	0501013468	ROCKER ARM AXLE, OF THE PULLEY		01
08	0503030377	SCRAPER		01

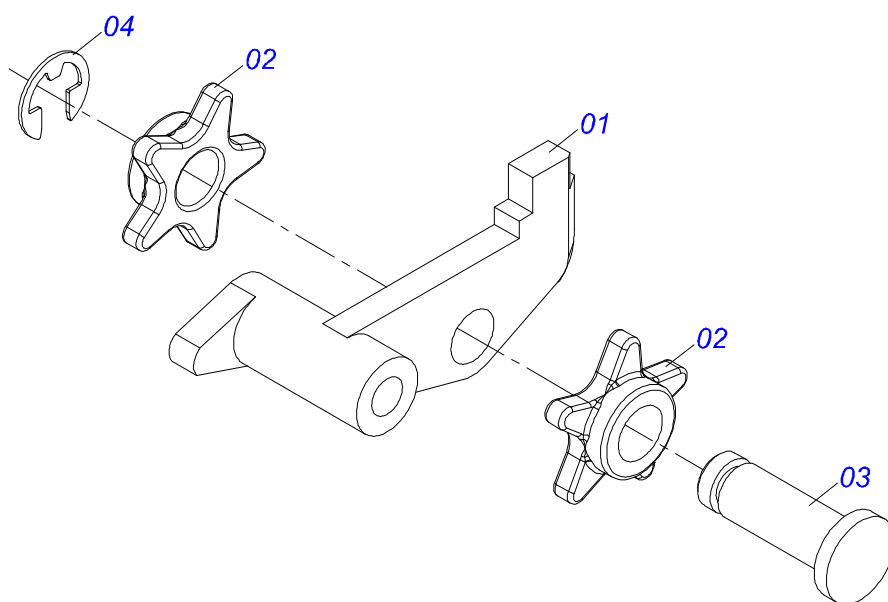 

Item	Code	Description	See page	QT
01	0503031129	DOUBLE PULLEY ROCKER ARM		01
02	0503031128	5Z PLASTIC DOUB PULLEY FOR SOYBEAN		02
03	0521010649	TOOTH PULLEY COUPLING SHAFT		01
04	0503011853	503050 CLAMPING RING (FOR HOLE)		01

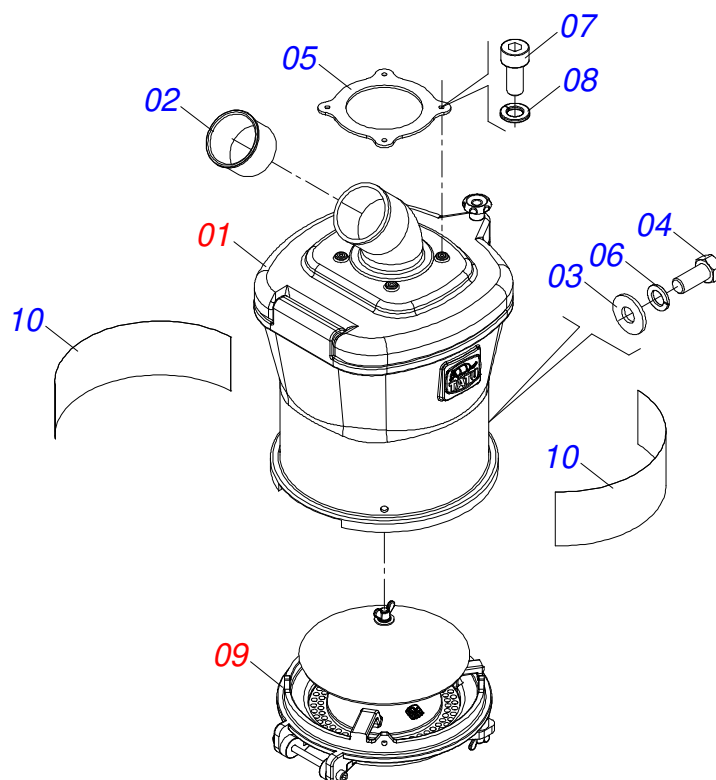 


Item	Code	Description	See page	QT
01	0503063223	SEMI-ASSEMBLED SINGLE SIGMA SEED BOX		01
02	0581014295	FIXING GLOVE		01
03	0503012545	FLAT WASHER		04
04	0503014442	BOLT		04
05	0591015106	SEED NOZZLE FIXING FLANGE		01
06	0513010192	LOCK WASHER		04
07	0513010191	BOLT		04
08	0503012534	LOCK WASHER		04
09	0531051514	SIGMA SOY SEED SYSTEM	93	01
10	0503035691	ADHESIVE LABEL		02

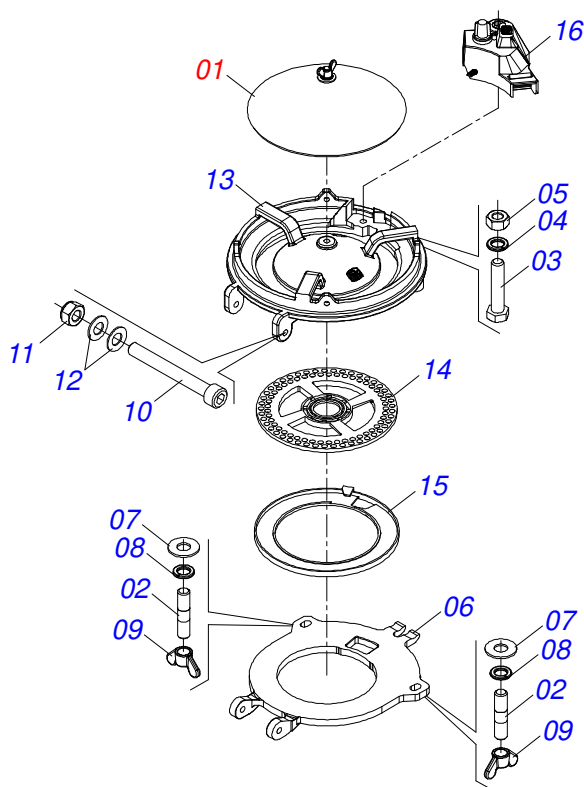 


Item	Code	Description	See page	QT
01	0511057289	ASSY SEED DEFLECTOR	94	01
02	0503030083	3/8" X 3/8" X 1.6" STUD		02
03	0503010675	5/16" X 2.1/4" BOLT		01
04	0503010179	LOCK WASHER		01
05	0503010337	5/16" NUT		01
06	0502012974	LOWER SEED DISK TRACK		01
07	0501013518	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		02
09	0503010209	3/8" UNC BUTTERFLY NUT		02
10	0503016282	ALLEN BOLT		01
11	0503019913	SELF-LOCKING NUT W/ NYLON M8 X 1.25 C.8 ZN		01
12	0503035299	PLATE SPRING 16 X 8.2 X 0.90		02
13	0591018706	SEED BOX SUPPORT		01
14	0513010140	SOYA DISK SOCIDISC 90 HOLES		01
15	0513010161	SOCIDISCO RING FOR SOY 0,8MM AZCSOJAR08-002461		01
16	0503063405	SOY SEED DISTRIBUTOR BOX		01

ASSY SEED DEFLECTOR

 0511057289

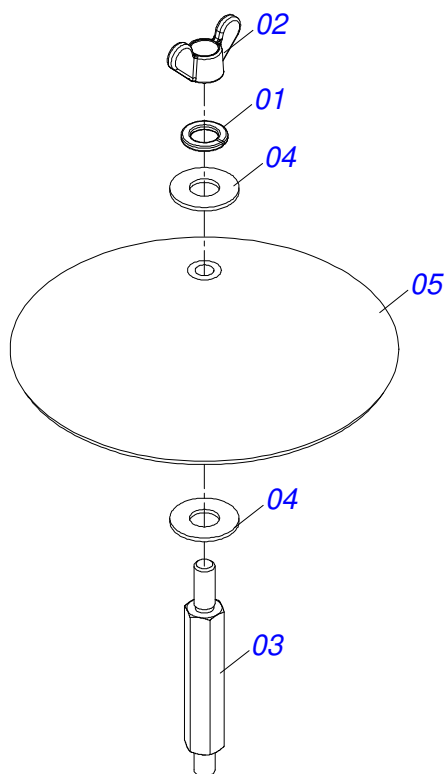

Item	Code	Description	See page	QT
01	0503010025	3/8" SPRING WASHER		01
02	0503010209	3/8" UNC BUTTERFLY NUT		01
03	0571018536	HEX PRISONER		01
04	0501013518	FLAT WASHER		02
05	0503034131	DEFLECTOR		01

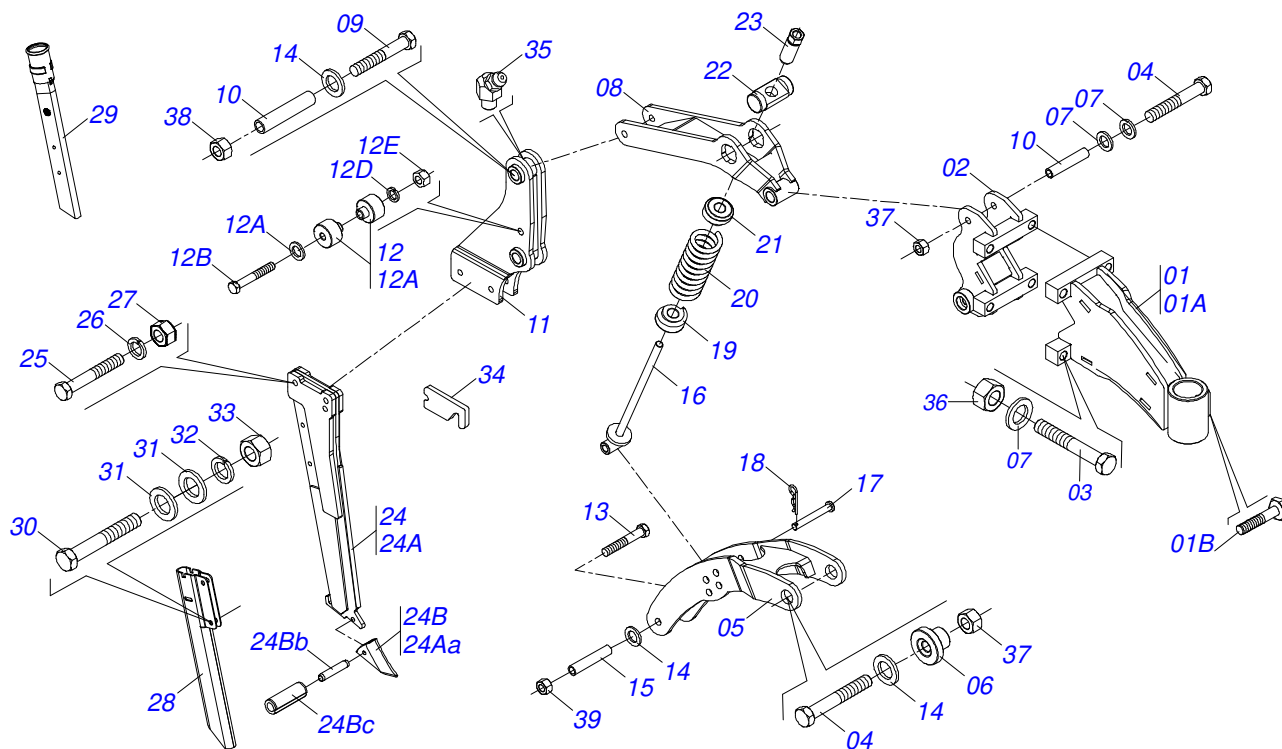 


Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT		01
001A	0521061326	BLADE DISC AXLE SUPPORT		01
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
002	0521061407	ROW FERTILIZER SUPPORT		01
003	0503011084	3/4" X 5" BOLT		04
004	0501013233	5/8" X 2-3/4" BOLT		02
005	0521063504	FERTILIZER ROW LOWER SUPPORT		01
006	0531019990	BLADE D ARM ARTIC SLEEVE		02
007	0511015098	FLAT WASHER		06
008	0511063862	FERTILIZER ROW UPPER SUPPORT		01
009	0501010163	5/8" X 4-1/2" BOLT		01
010	0531016207	0.6" X 1" X 2.8" SLEEVE		01
011	0511065837	FERTILIZER ROW REAR SUPPORT		01
012	0501059640	BEATER LINE SET FERTILIZER		01
012A	0561015611	BEATER SLEEVE		02
012B	0503011123	BOLT		01
012C	0501010984	FLAT WASHER		02
012D	0503010025	3/8" SPRING WASHER		01
012E	0503010026	3/8" NUT		01
013	0501010452	5/8" X 5" BOLT		02
014	0531016031	1/2" SPRING WASHER		04
015	0531016207	0.6" X 1" X 2.8" SLEEVE		02
016	0521063505	GUIDE SPRING LINE FERTILIZER		01
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
018	0503030168	CUPILLA		01
019	1902020393	SPRING UPPER SUPPORT		01
020	0503031450	2.7" X 9.2" X 0.03" SPRING		01
021	1902020393	SPRING UPPER SUPPORT		01
022	0521011158	SPRING LOCKNUT		01
023	0571012375	VARON REGULATOR SPINDLE		01
024	0501110640	SCARIFIER SPINDLE		01

SEMI-ASSEMBLED SHORT FERTILIZER LINE

0511053825

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2" NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	FLAT WASHER		04
032	0503010025	3/8" SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8 UNC SELF LOCKING NUT		02

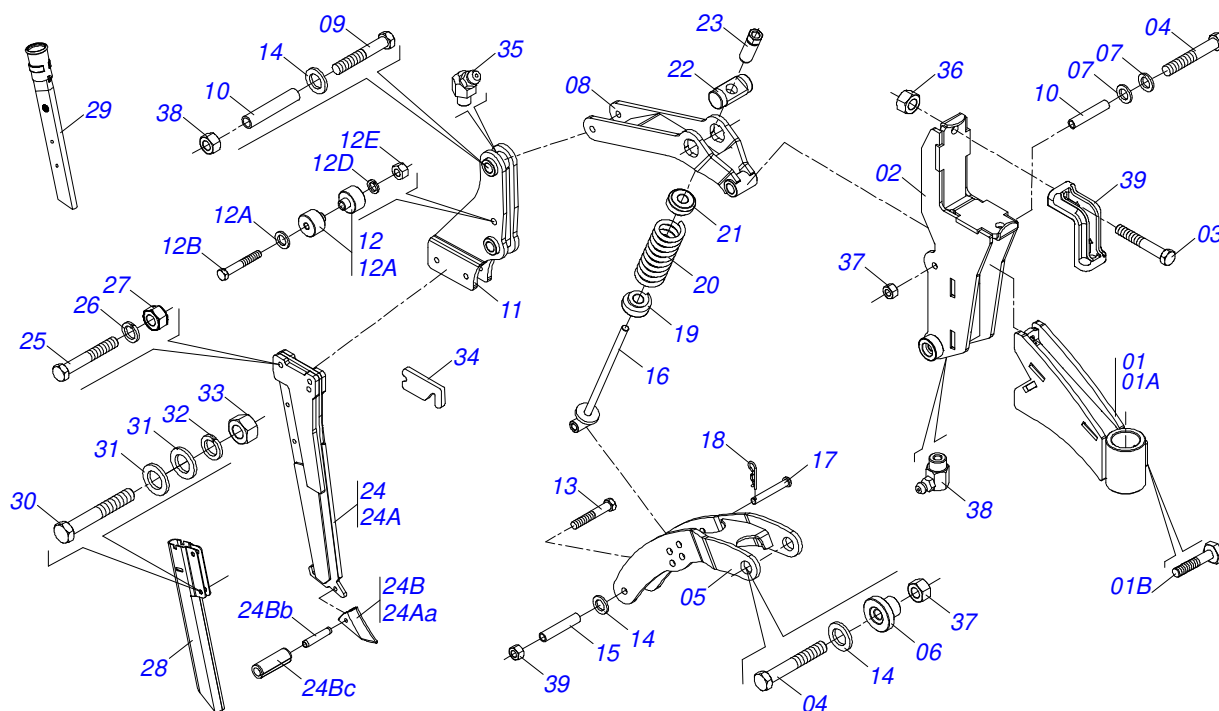 


Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT		01
001A	0521061326	BLADE DISC AXLE SUPPORT		01
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
002	0521063521	ROW FERTILIZER SUPPORT		01
003	0501010125	3/4" X 2-1/2" BOLT		02
004	0501013233	5/8" X 2-3/4" BOLT		02
005	0521063504	FERTILIZER ROW LOWER SUPPORT		01
006	0531019990	BLADE D ARM ARTIC SLEEVE		02
007	0511015098	FLAT WASHER		06
008	0511063862	FERTILIZER ROW UPPER SUPPORT		01
009	0501010163	5/8" X 4-1/2" BOLT		01
010	0531016207	0.6" X 1" X 2.8" SLEEVE		01
011	0511065837	FERTILIZER ROW REAR SUPPORT		01
012	0501059640	BEATER LINE SET FERTILIZER		01
012A	0561015611	BEATER SLEEVE		02
012B	0503011123	BOLT		01
012C	0501010984	FLAT WASHER		02
012D	0503010025	3/8" SPRING WASHER		01
012E	0503010026	3/8" NUT		01
013	0501010452	5/8" X 5" BOLT		02
014	0531016031	1/2" SPRING WASHER		04
015	0531016207	0.6" X 1" X 2.8" SLEEVE		02
016	0521063505	GUIDE SPRING LINE FERTILIZER		01
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
018	0503030168	CUPILLA		01
019	1902020393	SPRING UPPER SUPPORT		01
020	0503031450	2.7" X 9.2" X 0.03" SPRING		01
021	1902020393	SPRING UPPER SUPPORT		01
022	0521011158	SPRING LOCKNUT		01
023	0571012375	VARON REGULATOR SPINDLE		01
024	0501110640	SCARIFIER SPINDLE		01

SEMI-ASSEMBLED LONG FERTILIZER LINE

0511053826

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2" NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	FLAT WASHER		04
032	0503010025	3/8" SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8 UNC SELF LOCKING NUT		02
038	0503010004	1890 GREASE FITTING		01
039	0502012400	ROW FERTILIZER FIXER		01

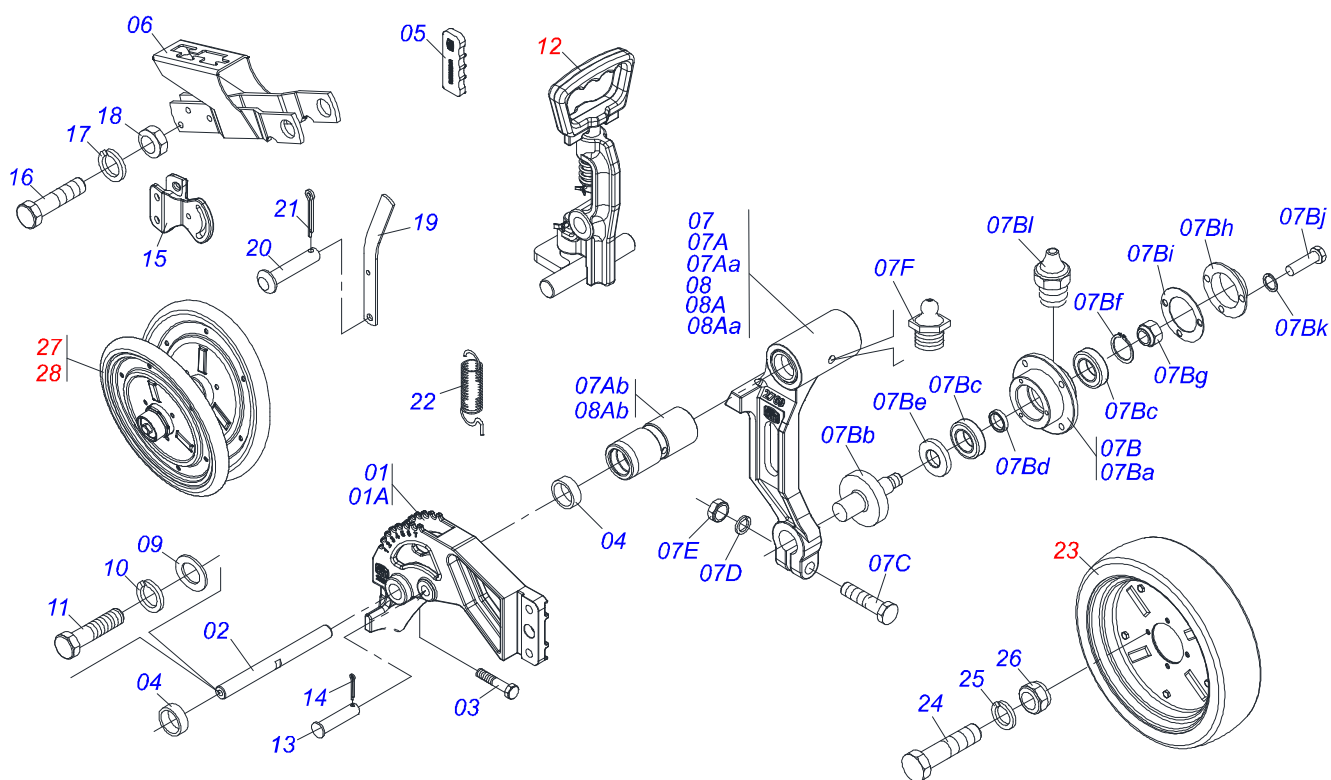 


Item	Code	Description	See page	QT
01	0511056691	CONTROL DEPTH SUPPORT		01
01A	0502012282	DEPTH CONTROL SUPPORT		01
02	0571016886	DEPTH WHEEL AXLE		01
03	0503810256	SCREW		01
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
05	0503033942	COVER REGULATORY WHEEL		01
06	0521064073	REGULACION WHEEL COMPACTOR		01
07	0511056692	DEPTH WHEEL RIGHT ARM		01
07A	0501110796	DEPTH CONTROL RIGHT ARM		01
07Aa	0502012769	BRACO DIR RODA PROF		01
07Ab	0571016883	GLOVE NYLON		01
07B	0501052627	ASSY DEPTH WHEEL BOX	112	02
07Ba	0502011907	DEPTH CONTROL WHEEL HUB		02
07Bb	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		02
07Bc	0503010269	6204 BALL BEARING		04
07Bd	0501013636	SPACING SLEEVE		02
07Be	0503010689	SEAL 00763-BR		02
07Bf	0503011105	SEAL RING		02
07Bg	0503010878	5/8" SELF ALIGNING NUT		02
07Bh	0521019178	COVER DEPTH		02
07bi	0503030757	2.9" X 2" X 0.02" JOINT		02
07Bj	0503014729	1/4" UNF X 1/2" BOLT		06
07Bk	0503011441	SPRING WASHER		06
07Bl	0503010691	1/4" GREASE FITTING		02
07C	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07D	0503011440	SPRING WASHER		02
07E	0503010060	1/2" NUT		02
07F	0503010002	1800 GREASE FITTING		02
08	0511056693	LH ARM DEPTH CONTROL WHEEL		01
08A	0501110797	ARM LEFT GLOVE WITH DEPTH CONTROL		01
08Aa	0502012770	LEFT ARM WHEEL DEPTH		01


PRESS WHEELS

0521045198


Item	Code	Description	See page	QT
08Ab	0571016883	GLOVE NYLON		01
09	0571017749	FLAT WASHER		02
10	0503011440	SPRING WASHER		02
11	0503010311	1/2" X 1-1/4" BOLT		02
12	0501052297	DEPTH WHEELS REGULATOR ASSY	98	01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010257	1/8" X 1" COTTERPIN		01
15	0502012116	PRESS WHEEL ADJUSTER		01
16	0503010849	3/8" X 1-1/2" BOLT		02
17	0503011443	3/8" SPRING WASHER		02
18	0503010026	3/8" NUT		02
19	0541016906	PRESS WHEELS REGULATOR BODY		01
20	0521010539	0.3" X 1.2" COUPLING SHAFT		01
21	0503010140	1/8" X 3/4" COTTERPIN		01
22	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
23	0501052538	DEPTH BAND WITH ARMS	99	02
24	0503010358	5/16" X 5/8" BOLT		08
25	0503010179	LOCK WASHER		08
26	0503013816	5/16" LOCKNUT		08
27	0511054333	COMPACT WHEEL RIGHT WITH BEARING	100	01
28	0511054334	COMPACT WHEEL LEFT WITH BEARING	101	01

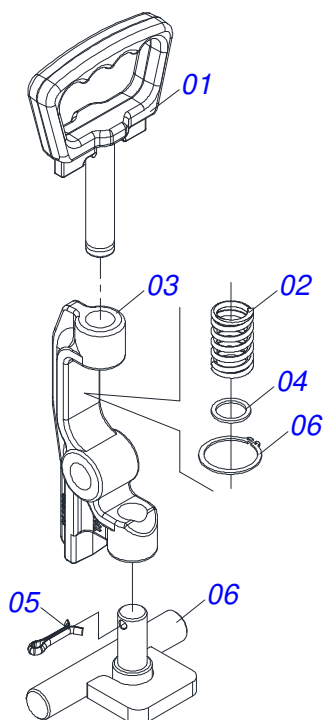 


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	SEED SIST CONTROL DEPTH LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

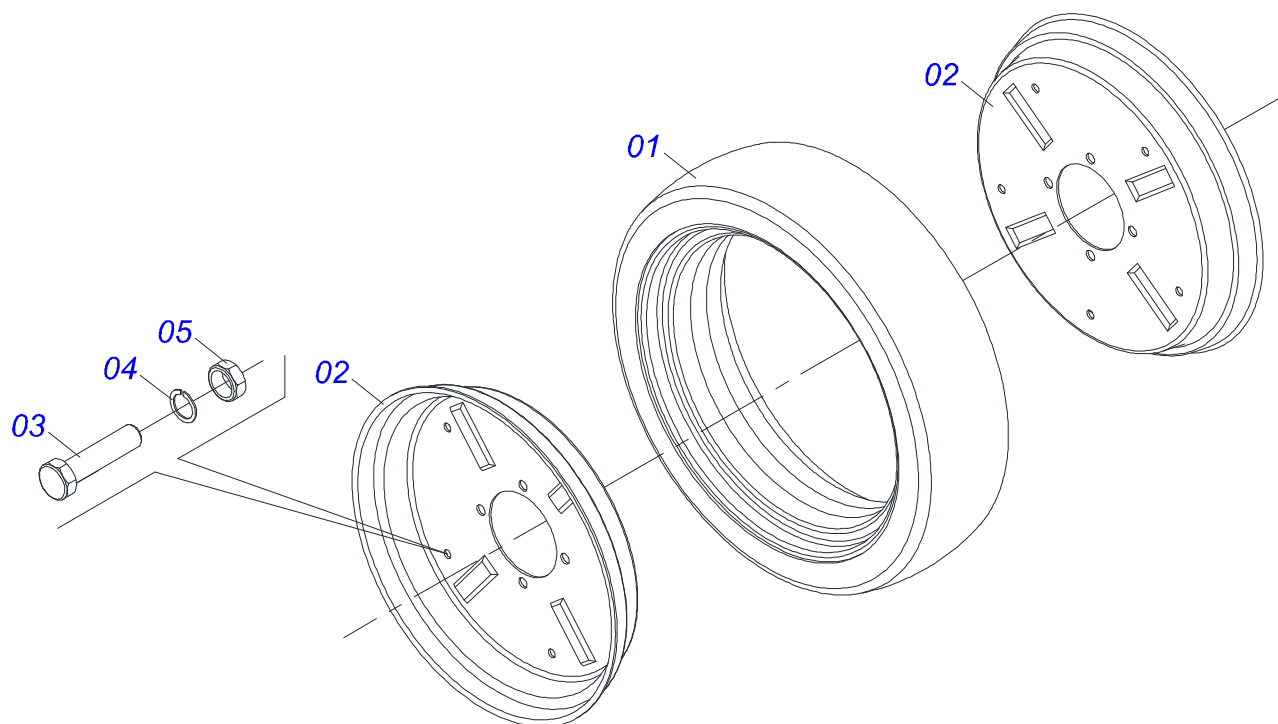 


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

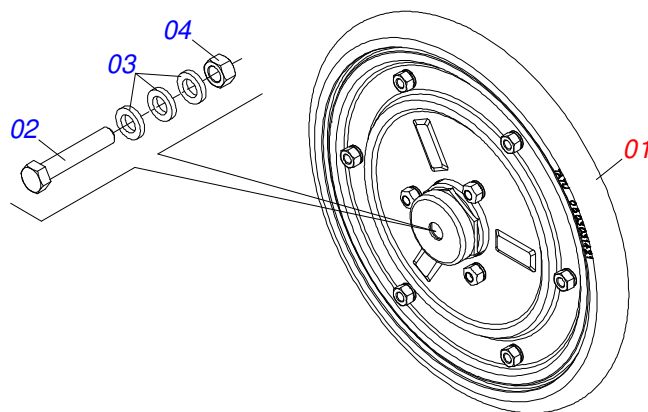 


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	102	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

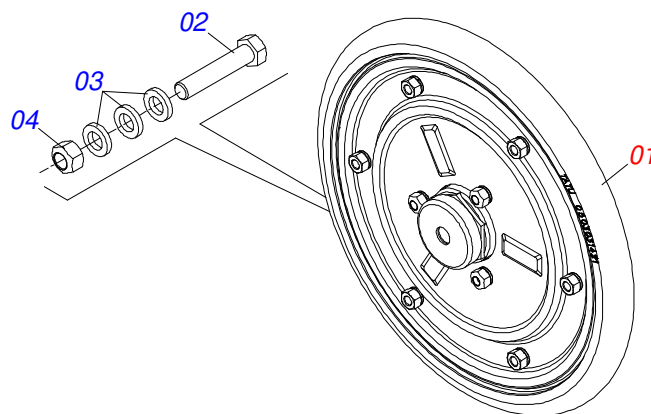 


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	102	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

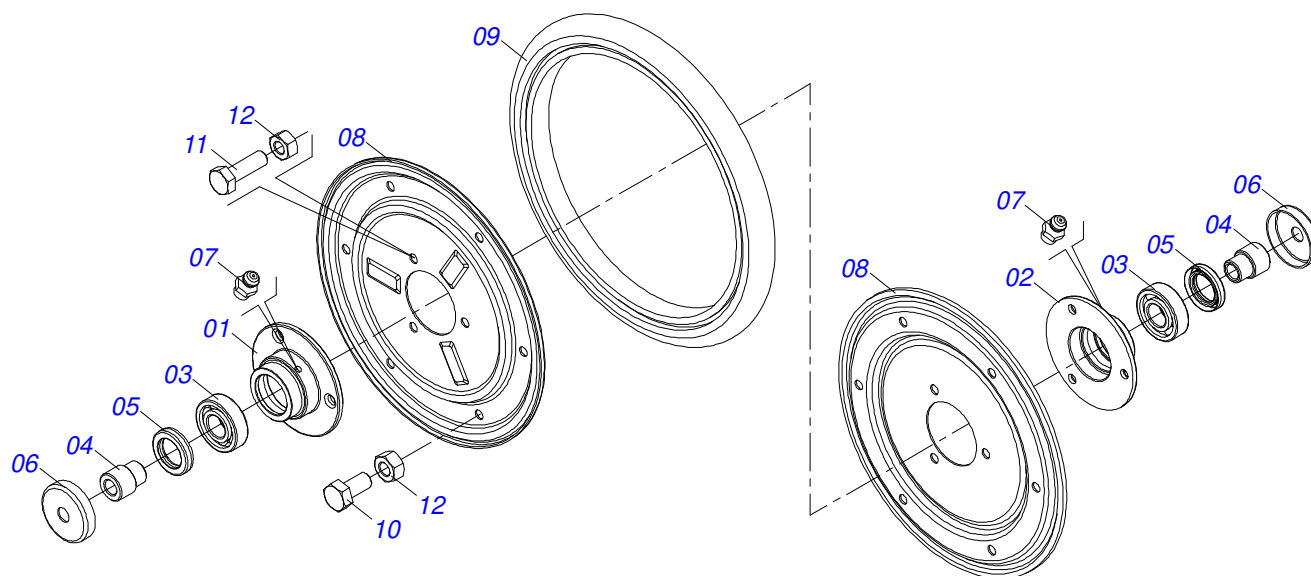 


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

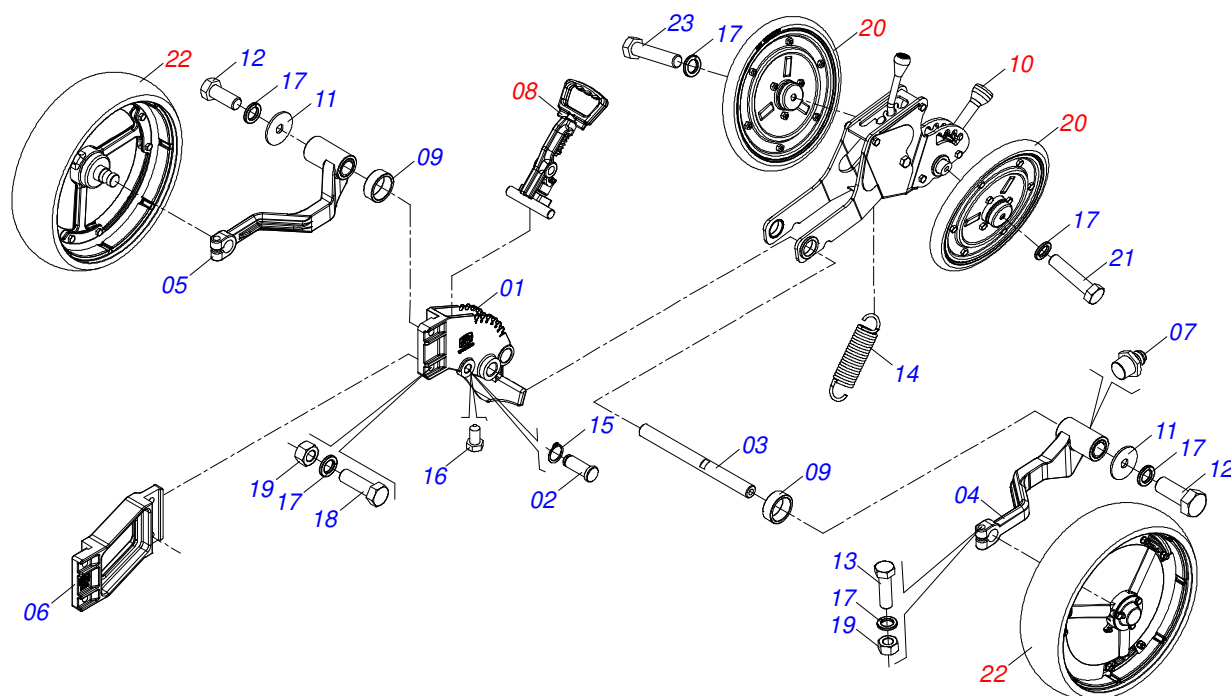 


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0581014858	DEPTH WHEEL AXLE		01
04	0501110720	ARM LEFT		01
05	0501110719	DEPTH CONTROL RIGHT ARM		01
06	0502012663	EXTENSION		01
07	0503010002	1800 GREASE FITTING		02
08	0501056769	DEPTH WHEELS REGULATOR ASSY	104	01
09	0503034793	ARTICULATION SLEEVE		02
10	0521051423	COMPACTOR SUPPORT	105	01
11	0571017749	FLAT WASHER		02
12	0503010311	1/2" X 1-1/4" BOLT		02
13	0503016453	1/2" X 2.1/2 BOLT		02
14	0503034817	SPRING		01
15	0503010581	RING		01
16	0503034377	SCREWEW 3/8 UNC X 3/4		01
17	0503010019	1/2" SPRING WASHER		08
18	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
19	0503010060	1/2" NUT		04
20	0501052908	COMPACTOR WHEEL WITH BEARING	102	02
21	0503013739	1/2" X 1" BOLT		01
22	0511050077	WHEEL STRIPED	106	02
23	0503010752	1/2" X 3.1/2" BOLT		01

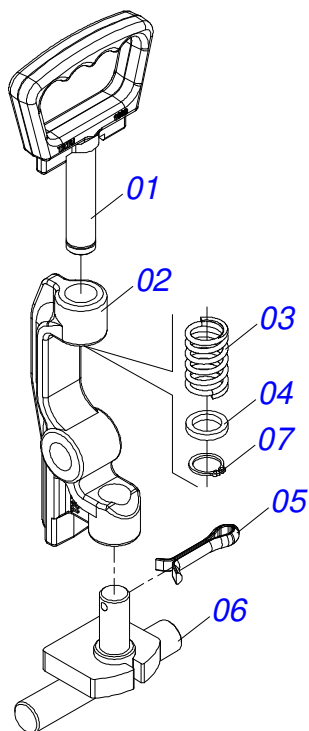 


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	SEED SIST CONTROL DEPTH LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

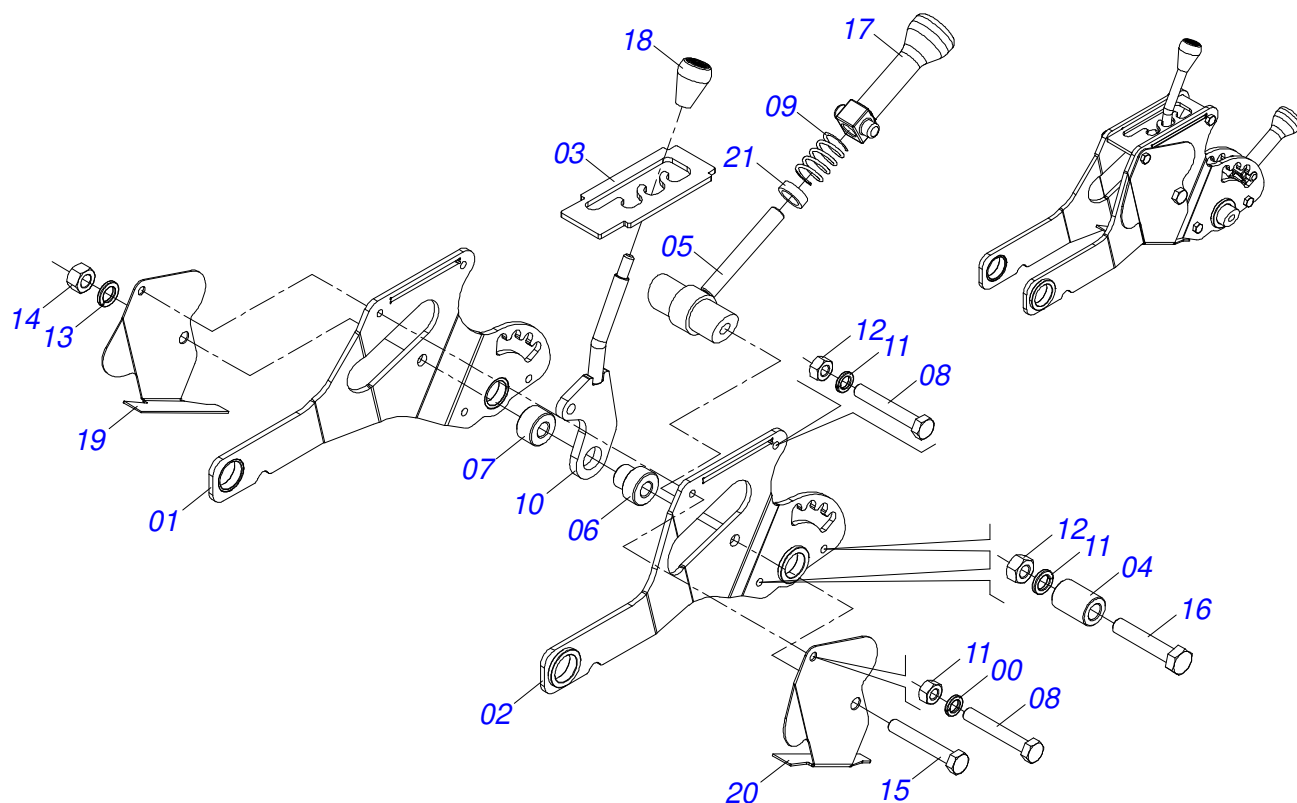 


Item	Code	Description	See page	QT
01	0521068003	RIGHT SIDE		01
02	0521068002	LEFT SIDE		01
03	0581014847	PLATE UPPER		01
04	0581015855	SLEEVE		02
05	0521068004	HANDLE BODY		01
06	0581014969	SLEEVE GUIDE		01
07	0581014968	SLEEVE FLANGE		01
08	0503010937	5/16" X 3" BOLT		02
09	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
10	0521068005	LEVER		01
11	0503010179	LOCK WASHER		04
12	0503010337	5/16" NUT		04
13	0503010019	1/2" SPRING WASHER		01
14	0503010060	1/2" NUT		01
15	0503010847	1/2" X 3.1/4" BOLT		01
16	0503010882	BOLT		02
17	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
18	0503030878	LEVER CRANK		01
19	0581015854	RIGHT PROTECTION COVER		01
20	0581015853	LEFT PROTECTION COVER		01
21	0581015903	SPACER WASHER		01

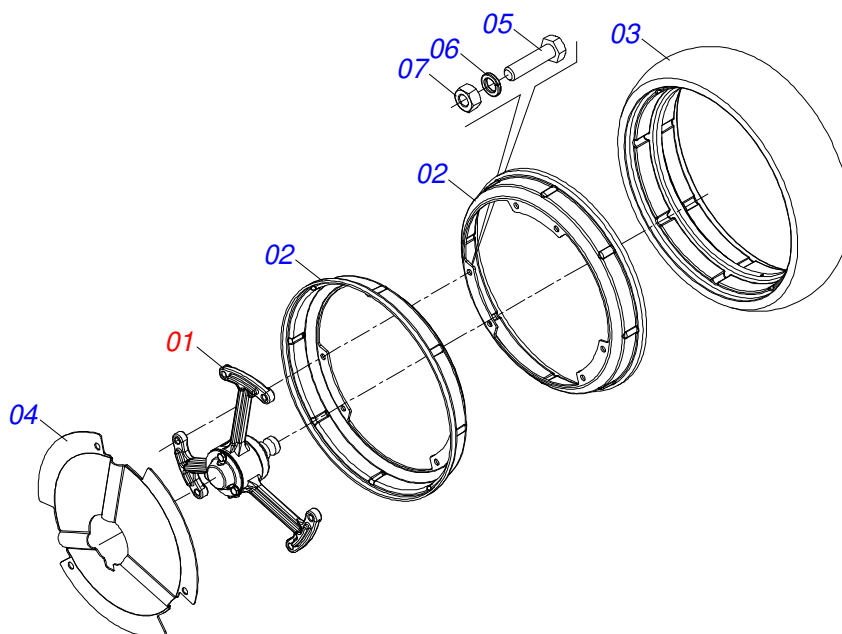 


Item	Code	Description	See page	QT
01	0511052287	DEPTH WHEEL HUB ASSY	107	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	NUT		06
06	0503010179	LOCK WASHER		06
07	0503010337	5/16" NUT		06

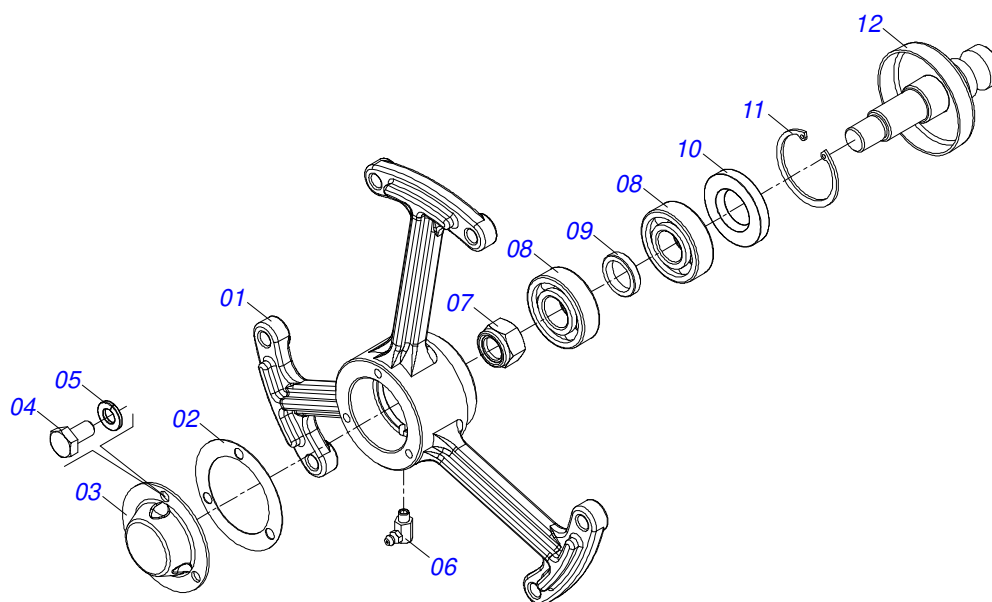 


Item	Code	Description	See page	QT
01	0502011918	DEPHT WHEELS BOX		01
02	0503030757	2.9" X 2" X 0.02" JOINT		01
03	0521019178	COVER DEPTH		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503011098	1/4" GREASE FITTING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503010269	6204 BALL BEARING		02
09	0501013636	SPACING SLEEVE		01
10	0503010689	SEAL 00763-BR		01
11	0503011105	SEAL RING		01
12	0521063443	DEPTH CONTROL AXLE		01

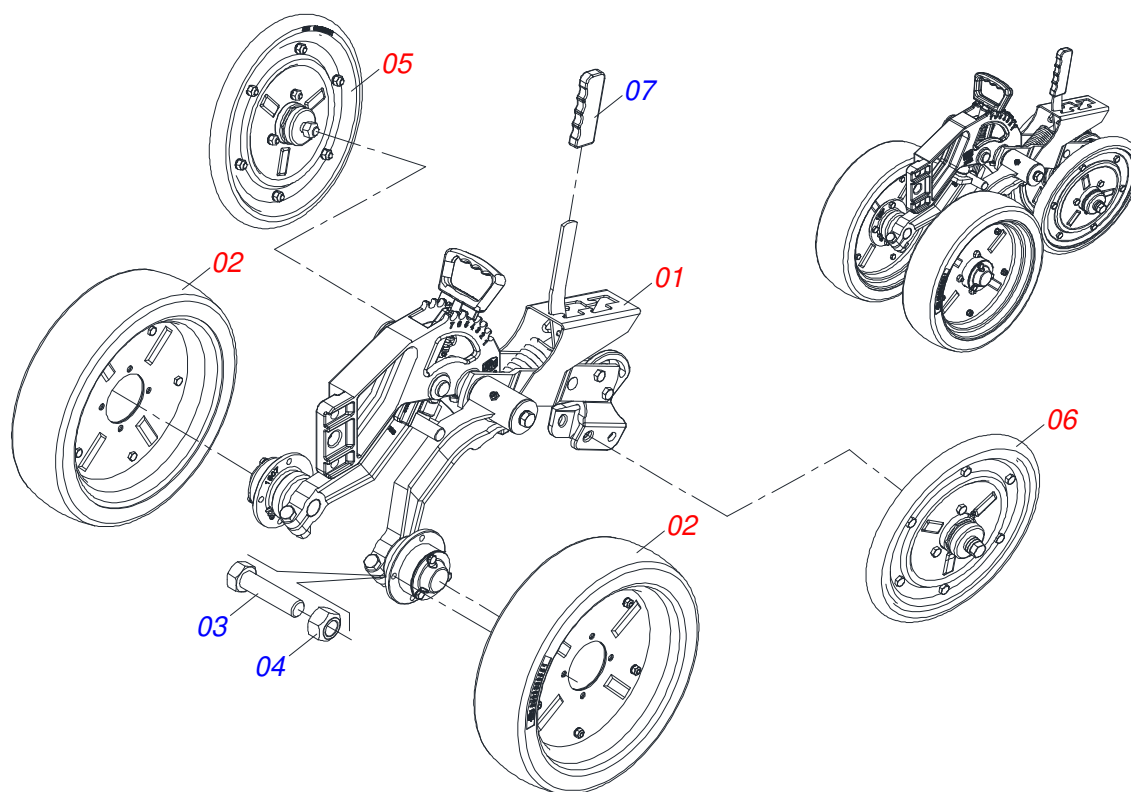 


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	109	01
02	0501052538	DEPTH BAND WITH ARMS	99	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	100	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	101	01
07	0503033942	COVER REGULATORY WHEEL		01

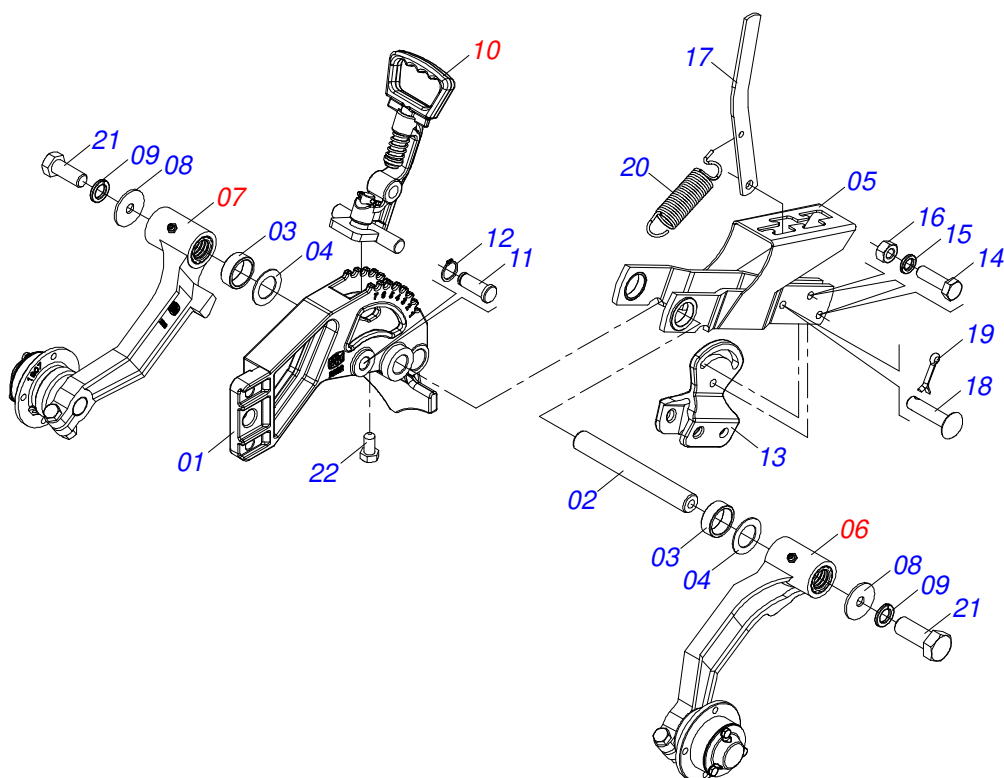 


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	110	01
07	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	111	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	98	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	SCREWEW 3/8 UNC X 3/4		01

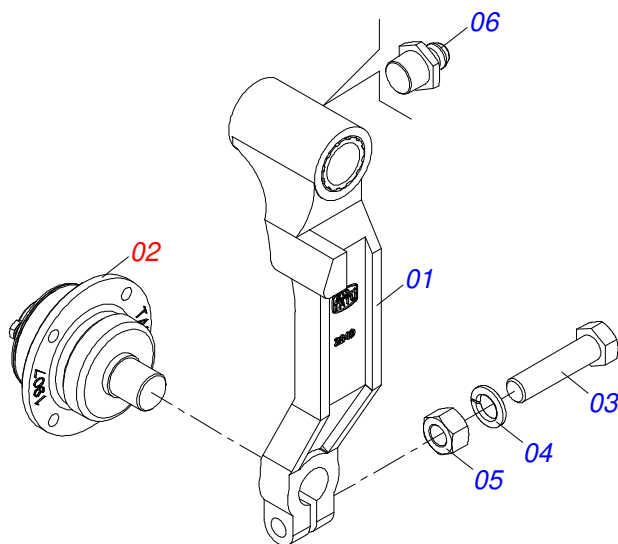 

Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL BOX	112	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01

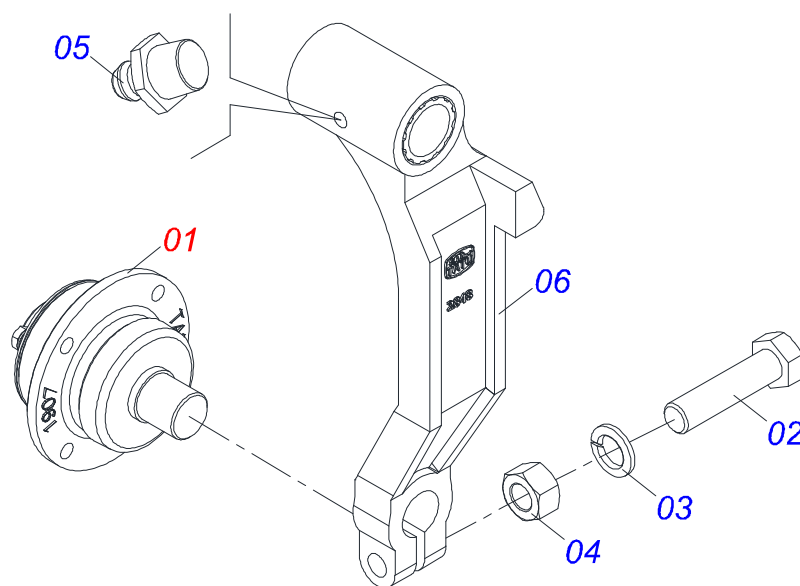 


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL BOX	112	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

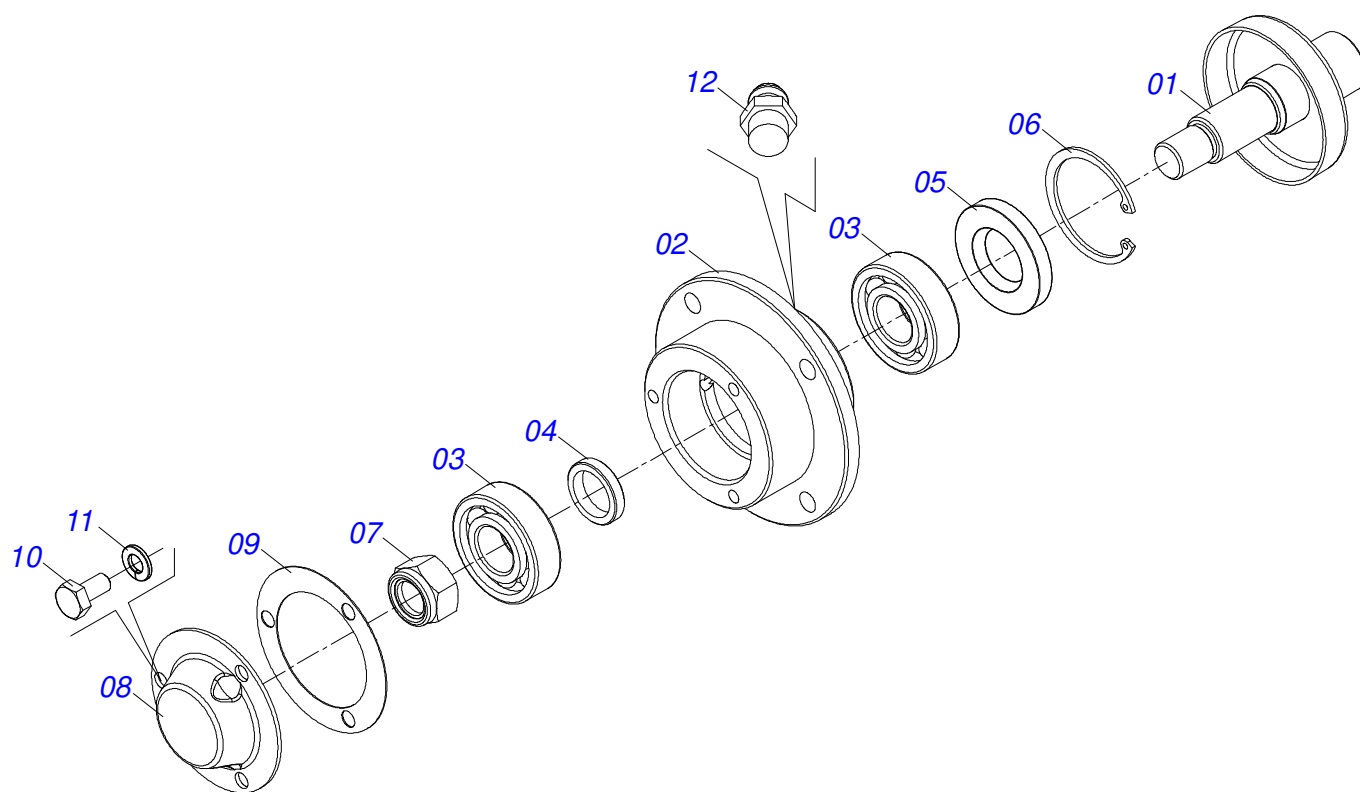 

Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	COVER DEPTH		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

24" BLADE DISC ASSY

 0511048339

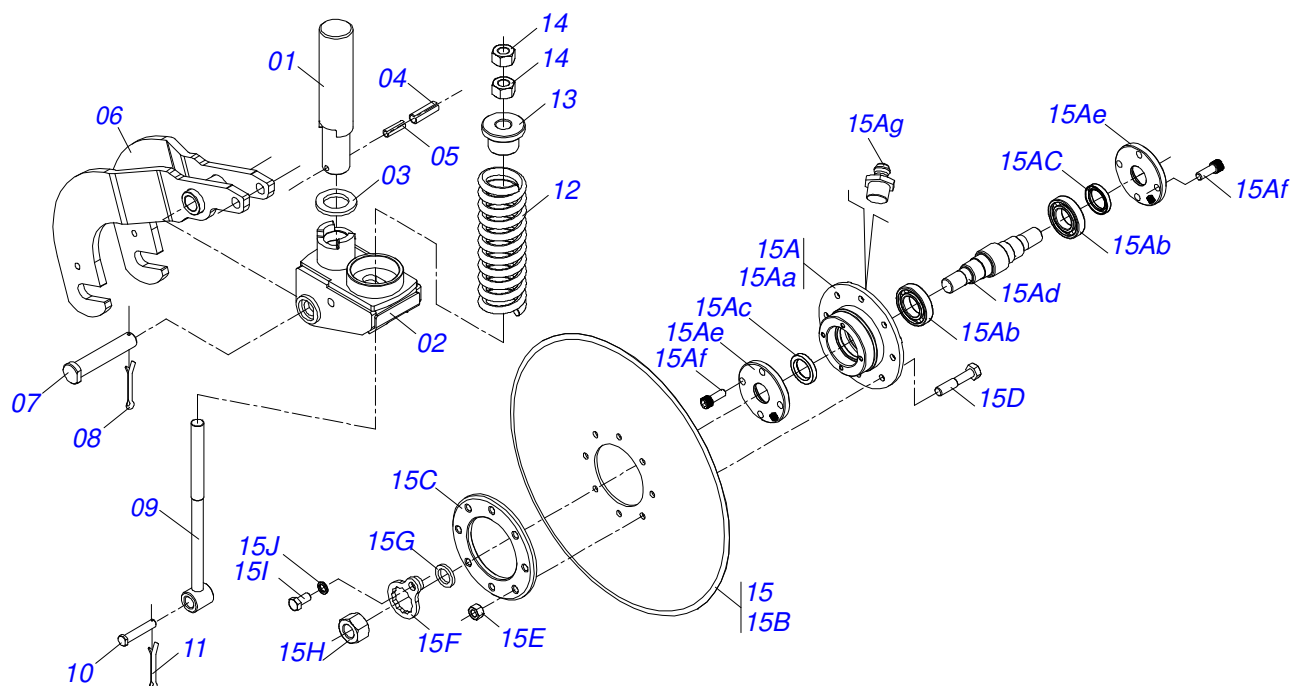

Item	Code	Description	See page	QT
01	0561015334	BLADE DISC AXLE ASSY		01
02	0521061328	SWIVEL BASE		01
03	0561015610	FLAT WASHER		01
04	0503010361	SPRING PIN		01
05	0503010756	0.2" X 2.4" SPRING PIN		01
06	0521062418	BLADE DISC FORK		01
07	0561015339	BLADE DISC AXLE ASSY		01
08	0503010010	1/4" X 2.1/2" COTTERPIN		01
09	0501069390	SPRING ROD		01
10	0561019515	COUPLING SHAFT		01
11	0503010571	1/4" X 1.1/2 COTTERPIN		01
12	0503031346	COMPRESSION SPRING		01
13	0561015400	BLADE DISC SPRING GUIDE		01
14	0503014018	1" NUT		01
15	0511050746	24" BLADE DISC ASSY		01
15A	0501057526	DISC HUB		01
15Aa	0502011478	DISC HUB		01
15Ab	0503011291	6209 BALL BEARING		02
15Ac	0503012106	00521-BR RETAINER		02
15Ad	0521012661	BLADE DISC AXLE HUB		01
15Ae	0502011477	BLADE DISC HOUSIG CP		02
15Af	0503010134	3/8" X 1" BOLT		08
15Ag	0503010002	1800 GREASE FITTING		01
15B	0603030044	24" X 0.2" FLAT PLAIN DISC		01
15C	0521011824	BLADE DISC FLANGE OUTER		01
15D	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
15E	0503010060	1/2" NUT		16
15F	0501069637	AXLE NUT LOCK		02
15G	0521012664	FLAT WASHER		02
15H	0501010087	1.1/4" NUT		02
15I	0503010962	5/8" X 1-1/4" BOLT		02



COP CA - 07/09 LINES - CSU


(FROM 04/2022)

Page 113


24" BLADE DISC ASSY

0511048339


Item	Code	Description	See page	QT
15J	0503010027	5/8" SPRING WASHER		02

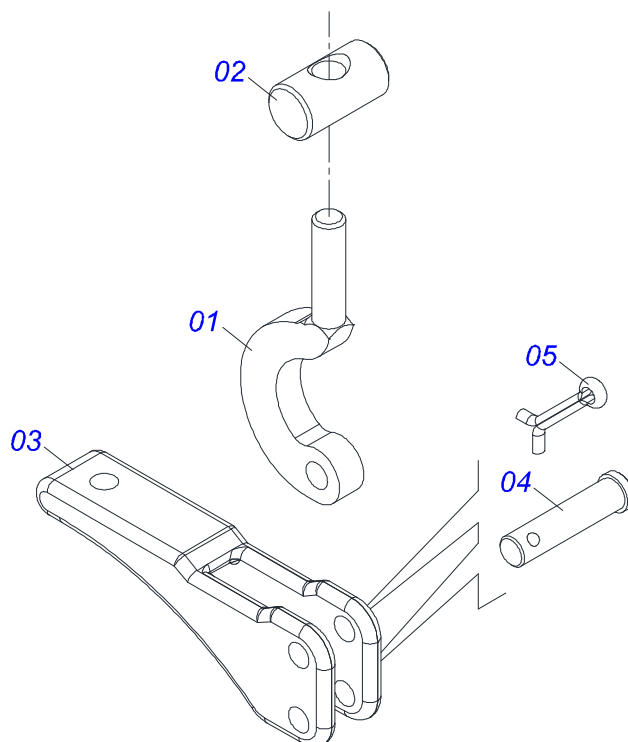 

Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

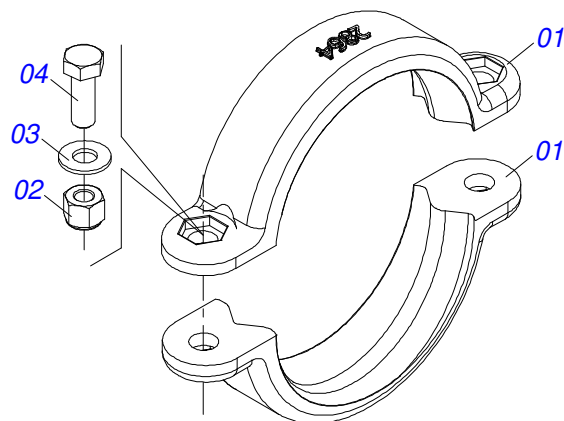 

Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER		02
04	0503010365	NUT		02

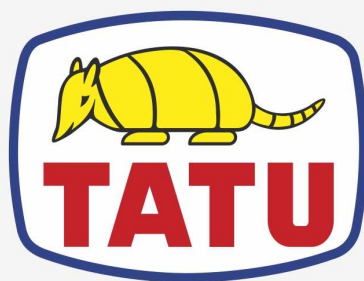 

MARCHESAN

Technical Publications | Elaboration and Revision

LORENA ROCHA ALVES

www.marchesan.com.br

