

# PARTS CATALOGUE



## SEEDERS

**Code:**

0501090754

**Product:**

SDT 5000 2420



**Series:**

S-0105

**Revision:**

00


**Date Revision:**

JANEIRO/2005




# INDEX


0501053987	TRANSMISSION HUB CARRYING-WHEELS	.....
0501053997	SEED DOUBLE-DISC OPENER ASSY	.....
0501054157	DEPTH WHEEL ASSY	.....
0501055280	STUB SHAFT & HUB ASSY	.....
0511040952	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER	.....
0511040972	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER	.....
0511041259	DRAWBAR JACK ASSY	.....
0511043568	21.12" X 4" X 26.57" HIDRAULI CYLINDER	.....
0511043573	1.7" X 3.4" X 8.858" HIDRAULI CYLINDER	.....
0909090971	TRANSMISSION WHEELS ASSY	.....
0909090972	HYDRAULIC CIRCUIT SDT 5000	.....
0909091257	FRAME SDT 5000 2420 S-0405	.....
0909091258	HIDRAULIC ROW MARKER ASSY	.....
0909091260	FERTILIZER/SEED BOX ASSY	.....
0909091301	FINE SEED BOX	.....
0909091302	BLADE DISC ASSY	.....
0909091303	DEPTH CONTROL PRESS WHEELS	.....
0909091305	SEED FERTIL ROW ASSY	.....

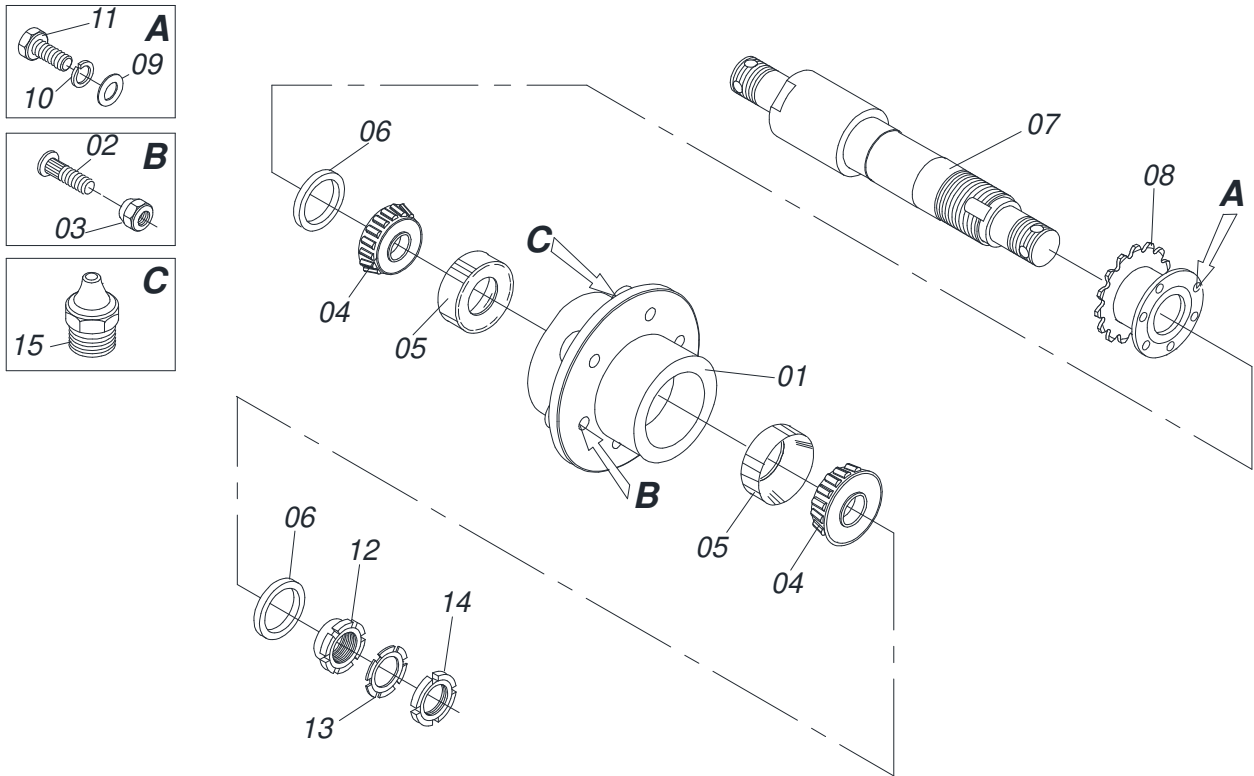


Item	Code	Description	See page	QT
01	0502011109	HUB SPDLE ASSY		01
02	0503010328	25590/25523 ROLLER BEARING		02
03	0503010804	00547-B SEAL		02
04	0531015334	WHEEL AXLE		01
05	0511063646	28Z GEAR WITH FLANGE		01
06	0501010694	8.5 X 18 X 1.5 FLAT WASHER		06
07	0503011444	SPRING WASHER		06
08	0503010365	NUT		06
09	0511015949	LOCK NUT		01
10	0503010329	LOCK WASHER		01
11	0503010330	KM 9 LOCKNUT		01
12	0503010002	1800 GREASE FITTING		01
13	0501010127	9/16" X 1-7/8" LUG BOLT		06
14	0503010035	9/16" CONIC NUT		06

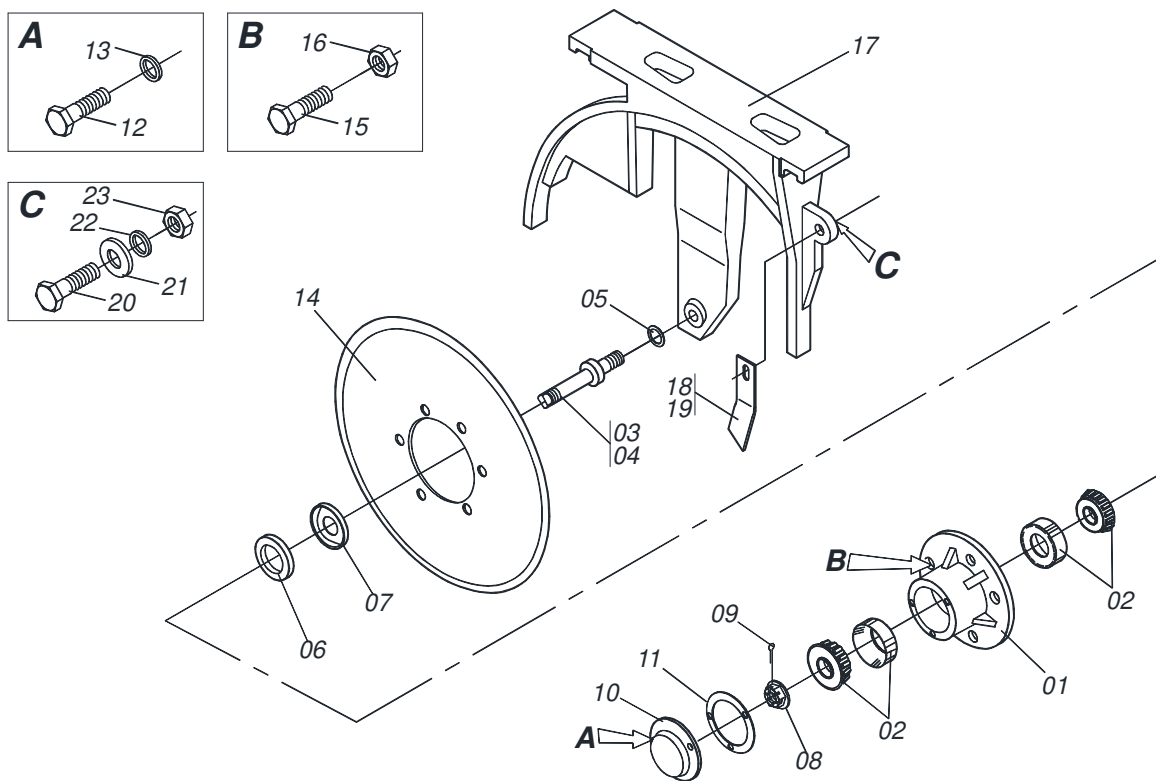


Item	Code	Description	See page
00	0501053997	SEED DOUBLE-DISC OPENER ASSY	
01	0502011930	DOUBLE DISC COULTER BOX	02
02	0503010598	30204 BALL BEARING	04
03	0531013736	LEFT DOUBLE DISC HUB AXLE	01
04	0531013735	RIGHT DOUBLE DISC HUB	01
05	0511015098	FLAT WASHER	02
06	0503011112	SEAL 02376-BRG	02
07	0511011927	DUST CLOAK	02
08	0503030282	3/4" CASTLE NUT	02
09	0503010257	1/8" X 1" COTTERPIN	02
10	0521019178	COVER DEPTH	02
11	0503030757	2.9" X 2" X 0.02" JOINT	02
12	0503010298	1/4" X 1/2" BOLT	06
13	0503010143	1/4" SPRING WASHER	06
14	0603023068	PLAIN COULTER BLADE	02
15	0503010546	5/16" X 7/8" BOLT	12
16	0503010337	5/16" NUT	12
17	0502012047	SUPPORT DOUBLE DISC	01
18	0531013568	RIGHT DOUBLE DISC SCRAPER	01
19	0531013569	LEFT DOUBLE-DISC SCRAPER	01
20	0503010451	5/8" X 1-1/4" BOLT	01
21	0501010984	FLAT WASHER	02
22	0503010025	3/8" SPRING WASHER	01
23	0503010026	3/8" NUT	01

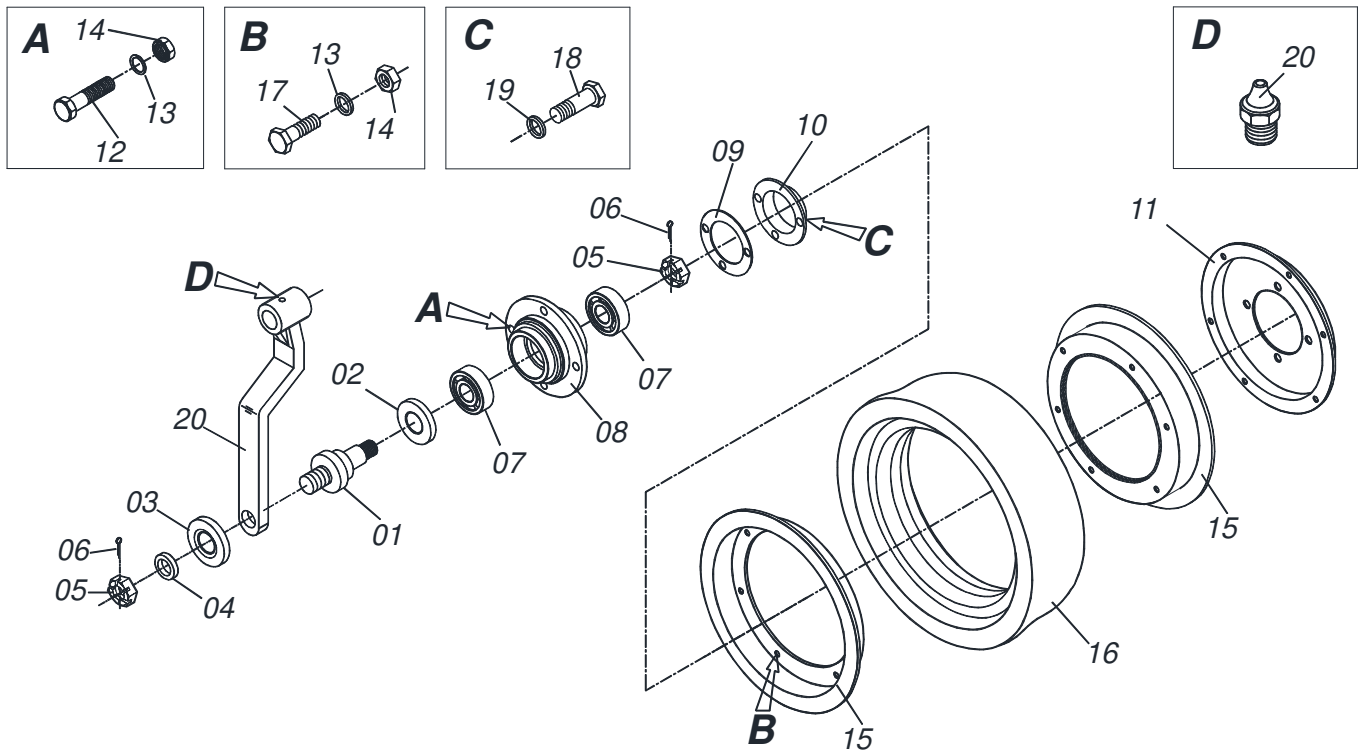

Item	Code	Description	See page
00	0501054157	DEPTH WHEEL ASSY	
01	0531014605	DEPTH CONTROL AXLE	01
02	0503011112	SEAL 02376-BRG	01
03	0511011927	DUST CLOAK	01
04	0531015265	FLAT WASHER	01
05	0503030282	3/4" CASTLE NUT	02
06	0503010297	5/32" X 1.1/4" COTTER PIN	02
07	0503010598	30204 BALL BEARING	02
08	0502012050	DEPHT WHEELS BOX	01
09	0503030757	2.9" X 2" X 0.02" JOINT	01
10	0521019178	COVER DEPTH	01
11	0531015295	DEPTH WHEEL FLANGE	01
12	0503010371	5/16" X 1" BOLT	04
13	0503010179	5/16" ZN SPRING WASHER	10
14	0503010337	5/16" NUT	10
15	0521018930	RIM SEMI	02
16	0503030891	RUBBER BAND	01
17	0503010358	5/16" X 5/8" BOLT	06
18	0503010298	1/4" X 1/2" BOLT	04
19	0503010143	1/4" SPRING WASHER	04
20	0502012074	DEPTH WHEEL ARM	01
21	0503010002	1800 GREASE FITTING	01

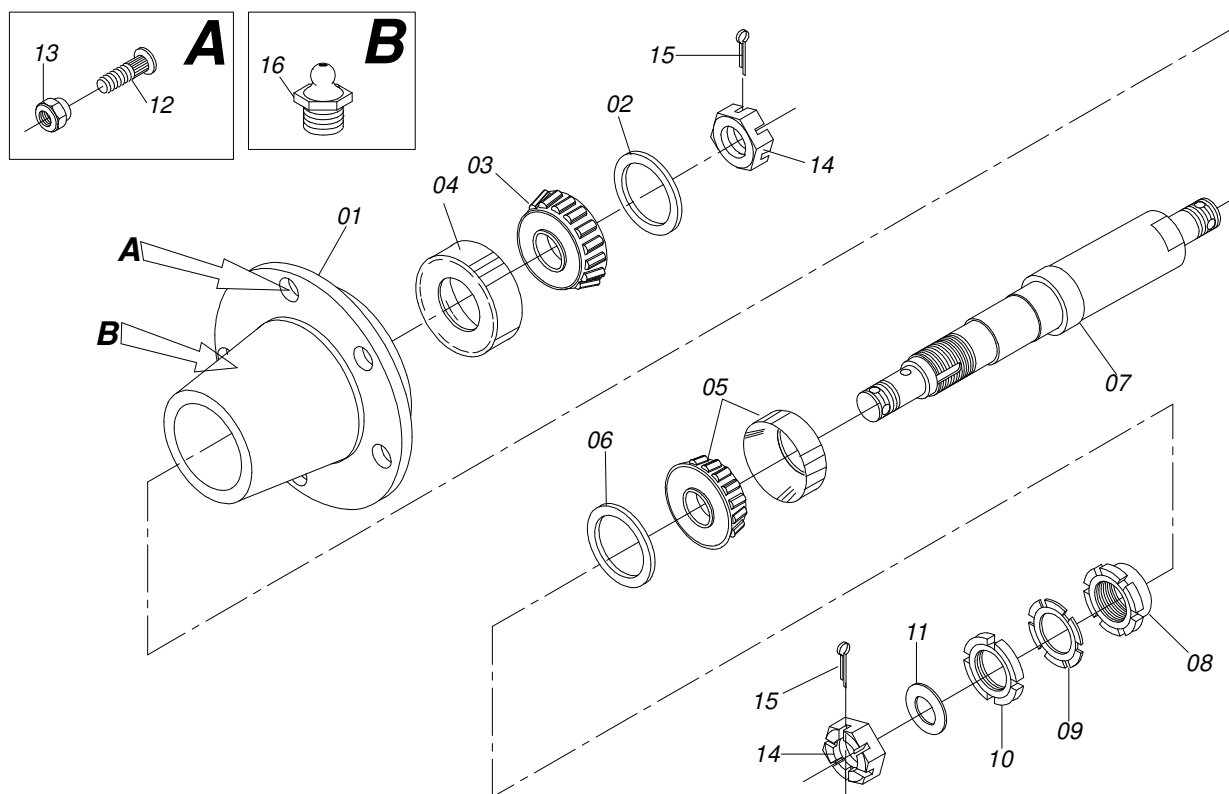

Item	Code	Description	See page	QT
01	0502010908	CARRYING WHEEL HUB		01
02	0503012747	SEAL 5144		01
03	0503010613	3780 CONE		01
04	0503010614	3720 CAP		01
05	0503010328	25590/25523 ROLLER BEARING		01
06	0503012162	5046 BAG SEAL RING		01
07	0541012124	TRANSP WHEELS AXLE		01
08	0511015949	LOCK NUT		01
09	0503010329	LOCK WASHER		01
10	0503010330	KM 9 LOCKNUT		01
11	0521011100	FLAT WASHER		01
12	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		08
13	0503010064	5/8 UNF CONIC NUT		08
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010067	3/16" X 2.1/2" COTTER PIN		02
16	0503010002	1800 GREASE FITTING		02

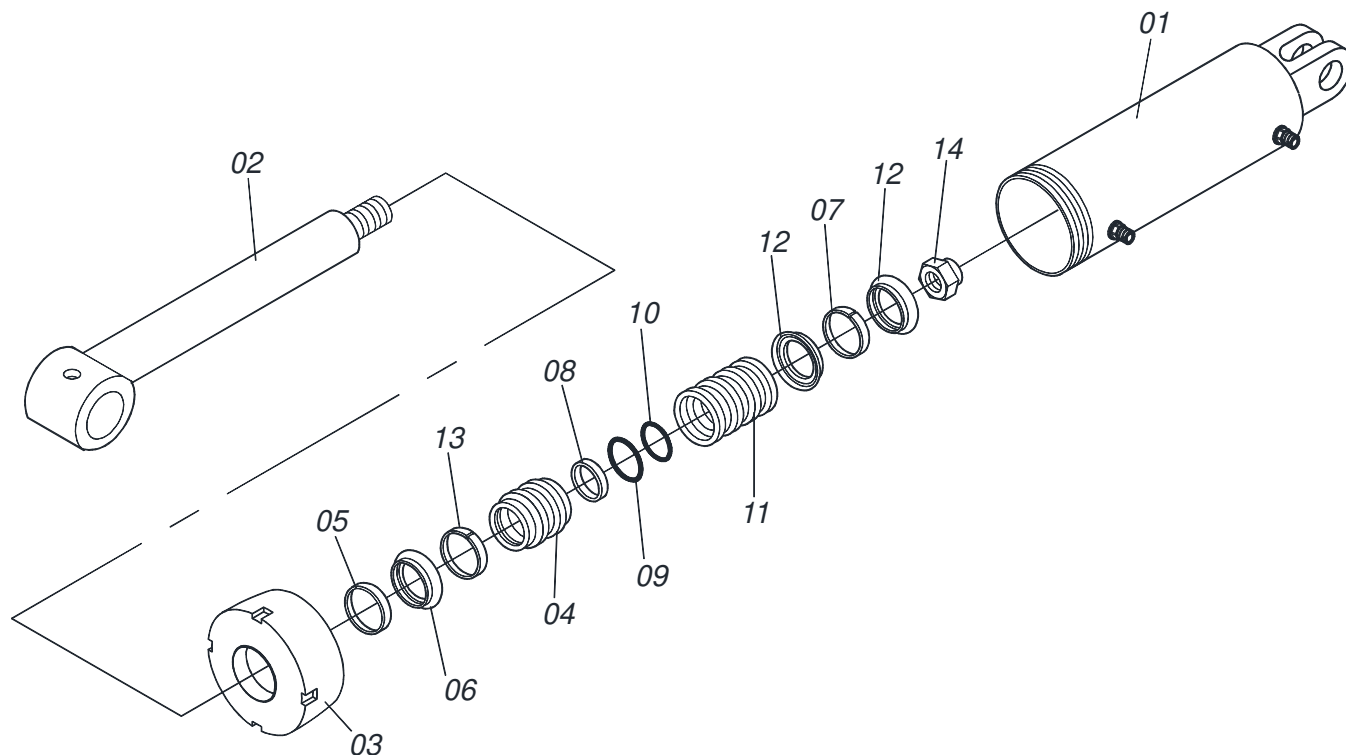

Item	Code	Description	See page
00	0511040952	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER	01
01	0511063676	2.5" X 16.1" CYLINDER CASE	01
02	0511063675	1.5" X 18.46" TURNBUCLE	01
03	0502010471	MOBILE COVER	01
04	0502010780	RING SUPPORT	01
05	0503010163	D-1500 SCRAPER RING	01
06	0503010989	1870-1500-375-B GASKET	01
07	0503010970	W1-1650-500 PK O-RING G.E	01
08	0503011058	8-330 BACK-UP RING	01
09	0503010161	2-330 N 3006 9B O-RING	01
10	0503010285	2-222 N 3006-9B O-RING	01
11	0502010783	1.5" X 2.5" PISTON	01
12	0503010160	2500 2000 GASKET	02
13	0503010973	W2-2500-500 PK O-RING G.E	01
14	0503010063	1" SELF-ALIGNING NUT	01




1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER


0511040972

Item	Code	Description	See page	QT
00	0511040972	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER		01
01	0511063691	2.5" X 15.08"CYLINDER CASE		01
02	0501065662	HYDRAULIC CYLINDER TURNBUCKLE		01
03	0502010471	MOBILE COVER		01
04	0502010780	RING SUPPORT		01
05	0503010163	D-1500 SCRAPER RING		01
06	0503010989	1870-1500-375-B GASKET		01
07	0503010970	W1-1650-500 PK O'RING G.E		01
08	0503011058	8-330 BACK-UP RING		01
09	0503010161	2-330 N 3006 9B O'RING		01
10	0503010285	2-222 N 3006-9B O'RING		01
11	0502010783	1.5" X 2.5" PISTON		01
12	0503010160	2500 2000 GASKET		02
13	0503010973	W2-2500-500 PK O'RING G.E		01
14	0503010063	1" SELF-ALIGNING NUT		01




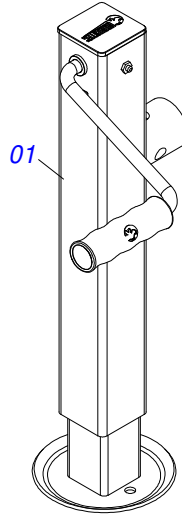

Item	Code	Description	See page	QT
01	0503062157	HEADER JACK		01

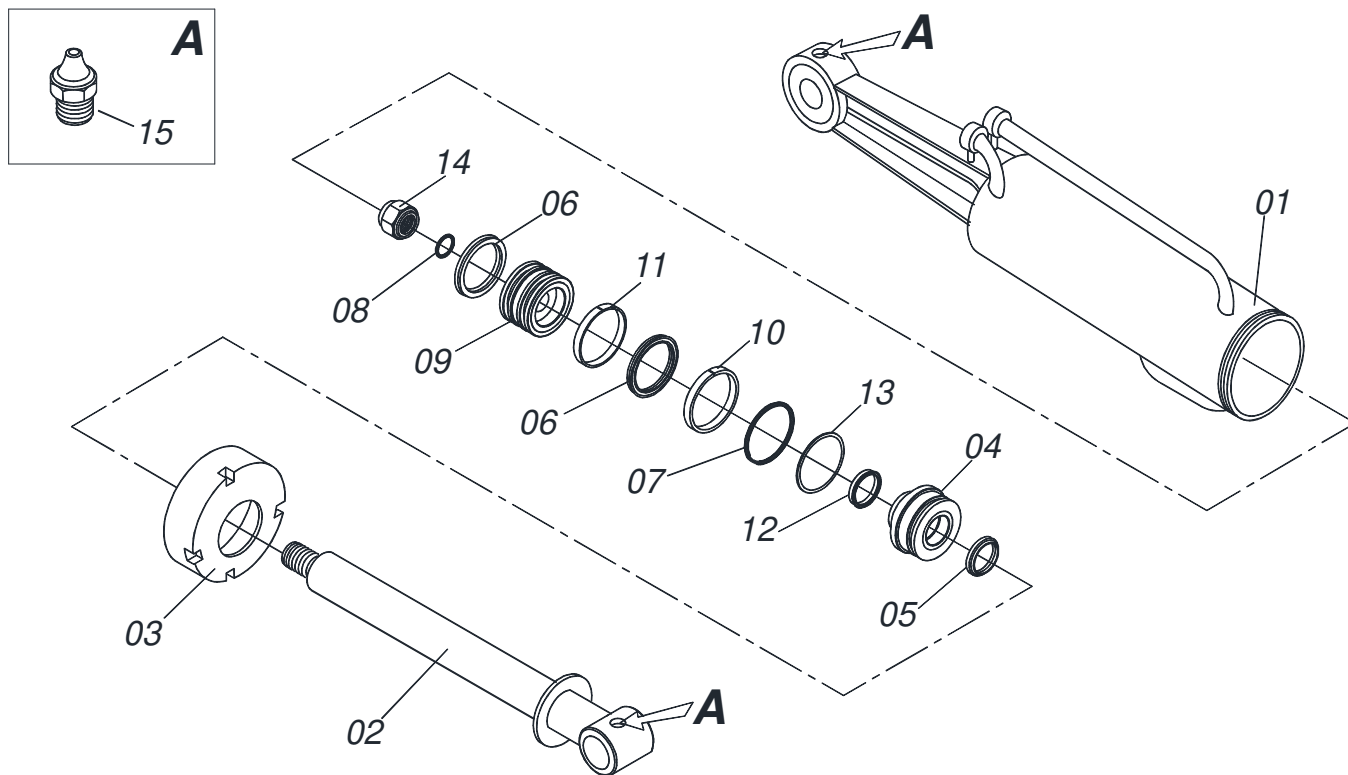


Item	Code	Description	See page
00	0511043568	21.12" X 4" X 26.57" HIDRAULI CYLINDER	01
01	0511066398	4" X 13.5" BP CYLINDER CASE	01
02	0511066396	2.125" X 19.01" TURNBUCLE	01
03	0502010017	4" HEAD	01
04	0502011250	RING OF SUPPORT	01
05	0503010319	D-2125 SCRAPER	01
06	0503010043	PACKING 3750-3250	01
07	0503010338	2-342 N 3006-9B O'RING	01
08	0503010345	2-218 N 3006-9B O'RING	01
09	0502011249	PISTON	01
10	0503010973	W2-2500-500 PK O'RING G.E	01
11	0503010994	W2-4000-500 PK RING G.E	01
12	0503010314	GASKET	01
13	0503011061	8-342 BACK-UP RING	01
14	0503010817	1.1/4" SELF LOCKING NUT	01
15	0503012725	GASKET	01
16	0503010002	1800 GREASE FITTING	02

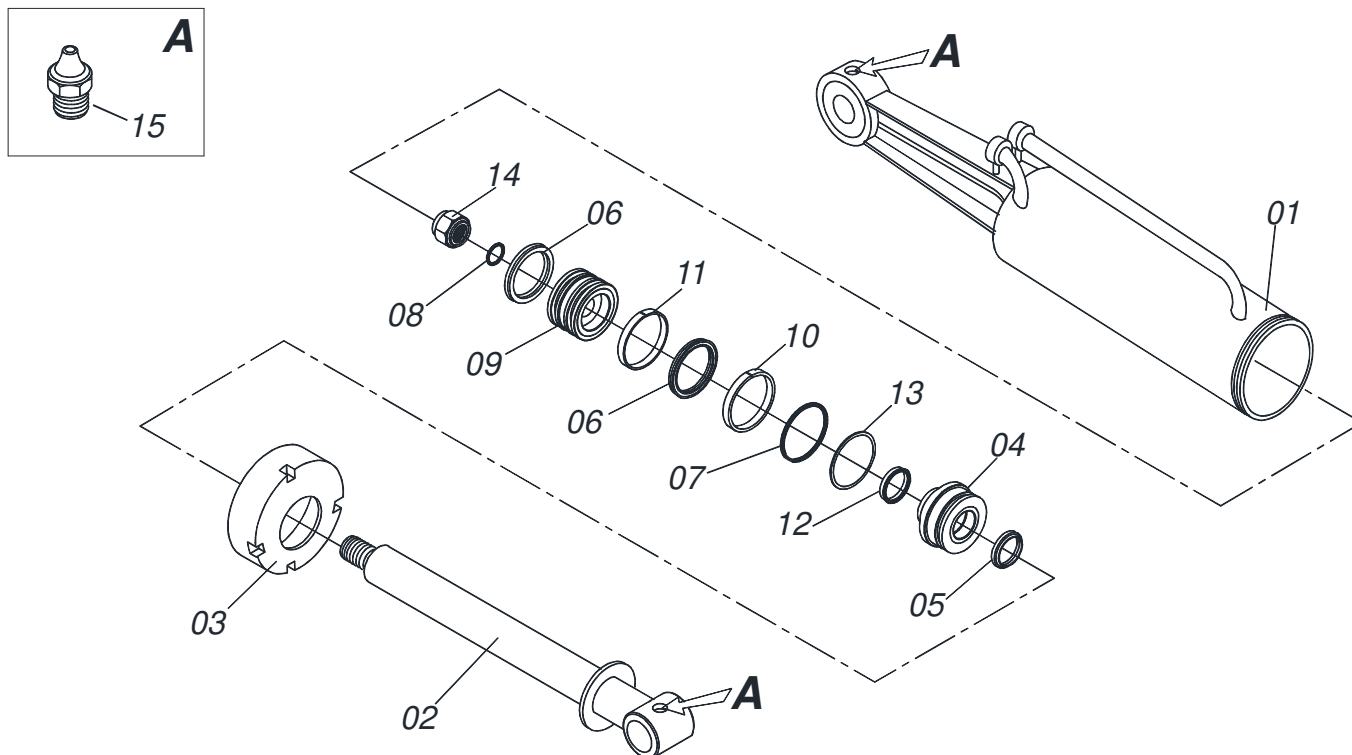

Item	Code	Description	See page
00	0511043573	1.7" X 3.4" X 8.858" HIDRAULI CYLINDER	
01	0511066404	3,374" X 13.110" CYLINDER CASE	01
02	0511066403	1.75" X 16.929" TURNBUCKLE	01
03	0502010993	DETACHABLE COVER	01
04	0502010781	RING SUPPORT	01
05	0503010761	D-1750 SCRAPER RING	01
06	0503010170	PACKING 3120 2750	02
07	0503010976	2-336 N 3006-9B O'RING	01
08	0503010042	2-214 N 3006-9B O'RING	01
09	0502010843	1.8" X 3.4" PISTON	01
10	0503010949	W2-2000-500 PK RING G.E	01
11	0503010948	W4-3346-590 PK RING G.E	01
12	0503010990	GASKET	01
13	0503011060	8-336 BACK-UP RING	01
14	0503010063	1" SELF-ALIGNING NUT	01
15	0503010002	1800 GREASE FITTING	02

TRANSMISSION WHEELS ASSY

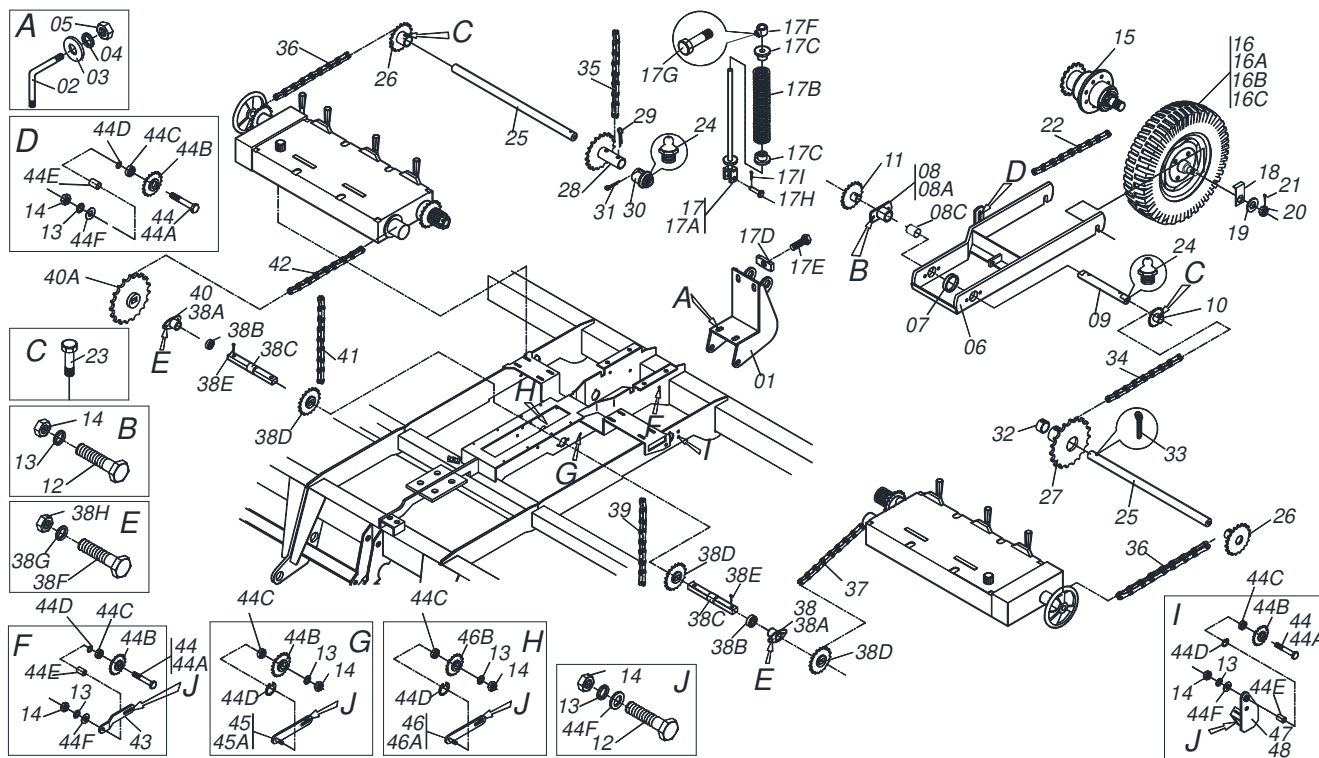


Item	Code	Description	See page
01	0511063603	CARRYING WHEELS ARM SUPPORT	01
02	0531018874	WHELL FASTENER ROTATE DRAW	02
03	0501012140	FLAT WASHER	04
04	0503010027	5/8" SPRING WASHER	04
05	0503010013	5/8" NUT	04
06	0511063602	CARRYING WHEELS ARM	01
07	0521011173	SLEEVE 75 X 63,30 X 15	02
08	0501110358	CARRYNG-WHEELS BEARING AXLE	02
08A	0501072818	CARRYNG-WHEELS RATCHET	02
08C	0521011184	1.2" X 1.8" 2.1" SLEEVE	02
09	0531015271	CARRYNG-WHEELS AXLE WORK	01
10	0511063635	17Z GEAR WITH SLEEVE	01
11	0511063637	28Z GEAR WITH SLEEVE	01
12	0503010920	1/2" X 1.1/2" BOLT	09
13	0503010019	1/2" SPRING WASHER	15
14	0503010060	1/2" NUT	15
15	0501054194	CARRYING WHEEL HUB TRANSMISSION	01
16	0503060141	WHEEL AND TIRE ASSY	01
16A	0503011101	CANVAS TIRE	01
16B	0503010894	0.2"X0.6"X4.6"X6F0.6"X6" WHEEL	01
16C	0503010694	INNER TIRE	01
17	0501054582	CARRYING WHEELS SPRING GUIDE	01
17A	0511063552	SPRING GUIDE	01
17B	0503031379	COMPRESSION SPRING	01
17C	0502020635	SPRING UPPER SUPPORT	01
17D	0521011158	SPRING LOCKNUT	01
17E	0521011157	REGULATOR SPINDLE	01
17F	0502040725	SPRING BUSHING LOCK GUIDE	01
17G	0503010834	1/2 X 1 BOLT	01
17H	0521010549	COUPLING SHAFT	01
17I	0503010257	1/8" X 1" COTTERPIN	01



## TRANSMISSION WHEELS ASSY

0909090971

Item	Code	Description	See page
18	0503013056	50-1 CHAIN X 138 LINK + REDUCTION	01
19	0503010395	1/2" X 1-1/4" BOLT	02
20	0503010002	1800 GREASE FITTING	02
21	0531015270	CARRYNG-WHEELS AXLE TRANSMISSION	02
22	0511063582	17Z GEAR WITH SLEEVE	02
23	0511063636	36Z GEAR WHIT SLEEVE	01
24	0511063678	DRIVER TRANSMISSION	01
25	0503010010	1/4" X 2.1/2" COTTERPIN	02
26	0501110025	AGRICULTURAL BEARING	04
27	0503010140	1/8" X 3/4" COTTERPIN	04
28	0511015961	LOCK BUSHING	02
29	0503010523	1/4" X 2" COTTERPIN	04
30	0503013058	40-1 X 119 CHAIN LINK + MENDING	01
31	0503013059	40-1 X 197 CHAIN LINK-MENDING	01
32	0503013060	50-1 CHAIN X 47 LINK + MENDING	02
33	0503013061	50-1 CHAIN X 64 LINK + REDUCTION	02
34	0501054095	BERARING TRANSMISSION	01
34A	0511063679	BEARING TRANSMISSION	02
34B	0503011410	ROLLER BEARING	14
34C	0531015304	TRANSMISSION AXLE	02
34D	0511063630	17Z GEAR	03
34E	0503010577	3/16" X 1-1/4" COTTERPIN	04
34F	0503010421	5/16" X 1-1/2" BOLT	04
34G	0503010179	5/16" ZN SPRING WASHER	04
34H	0503010337	5/16" NUT	04
35	0503011718	50-1 X 67 CHAIN LINK + MENDING	04
36	0501054096	BEARING SEED TRANSMISSION	01
36A	0511063632	30Z GEAR	01
37	0503013057	50-1 CHAIN X 58 LINK + REDUCTION	01
38	0531015056	REAR CHAIN TENSIONER BODY	02
39	0501054092	CHAIN TENSIONER	05
39A	0531012640	AXLE CHAIN TIGHTENER	05
39B	0511063645	CHAIN TENSIONER BODY	05
39C	0503012882	BEARING	08
39D	0503011945	503050 CLAMPING RING (FOR AXLE)	08
39E	0531012678	4.5" X 0.9" X 0.2" SLEEVE	05
39F	0511017302	FLAT WASHER	05
40	0501054202	CHAIN TENSIONER CENTRAL	02
40A	0511063738	CNETER CHAIN TENSIONER	02
40B	0511063645	CHAIN TENSIONER BODY	02
41	0501054094	CHAIN TENSIONER SEED ASSY	01
41A	0511063854	FINE SPEED CHAIN TENSIONER	01
41B	0511063655	16Z CHAIN TENSIONER BODY	01
42	0511063706	RIGHT CHAIN TENSIONER SUPPORT	01
43	0511063705	CHAIN TENSIONER SUPPORT LEFT	01

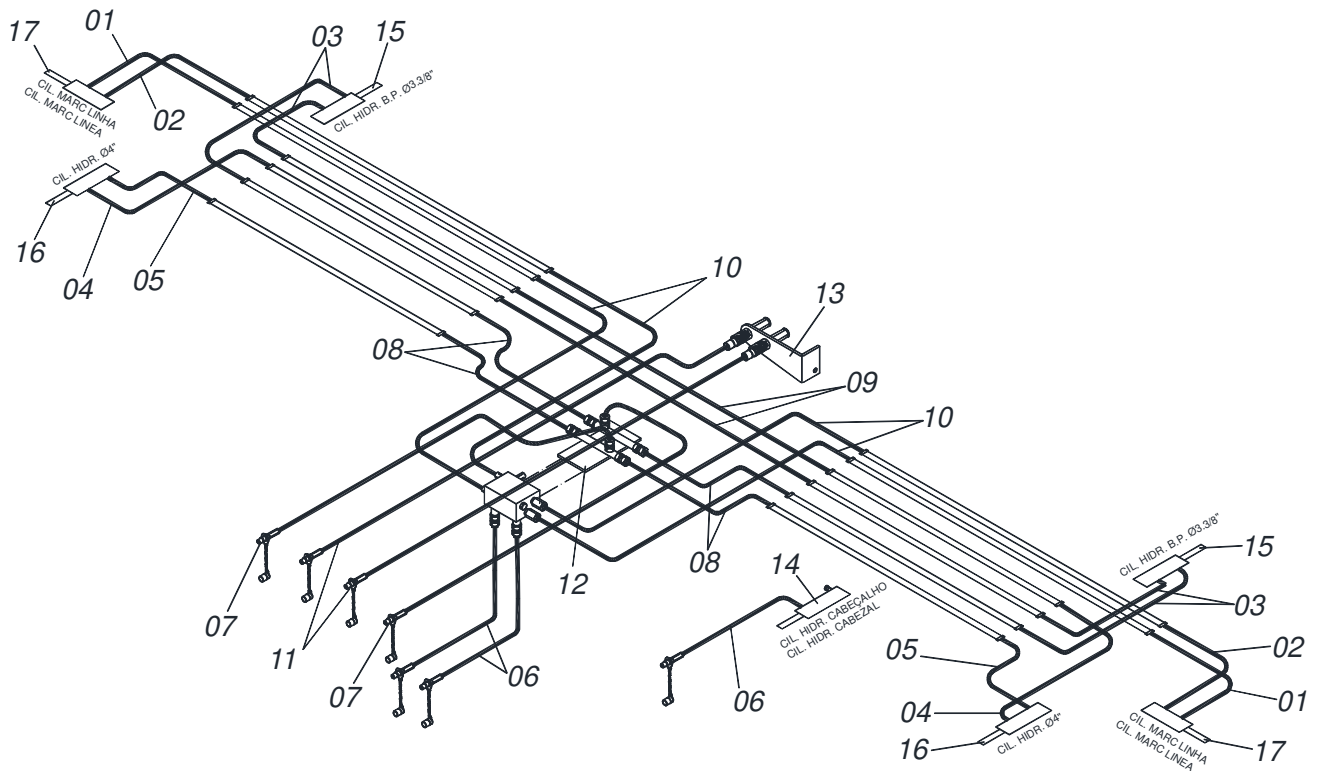

Item	Code	Description	See page
01	0501080541	3/8" X 51.18" TR-TC HOSE ASSY	02
02	0501080582	3/8" X 45.28" TR-TR HOSE ASSY	02
03	0501080867	3/8" X 114.17" TR-TR HOSE ASSY	04
04	0501080609	3/8" X 39.37" TR-TR HOSE ASSY	02
05	0501080922	3/8" X 33.46" TR-TC HOSE ASSY	02
06	0501080820	3/8" X 117.17" TC-TM HOSE ASSY	03
07	0501080664	3/8" X 188.98" TC-TM HOSE ASSY	02
08	0501080817	3/8" X 17.72" TR-TC HOSE ASSY	04
09	0501080606	3/8" X 21.65" TR-TR HOSE ASSY	02
10	0501080818	3/8" X 27.56" TR-TC HOSE ASSY	04
11	0501080703	3/8" X 263.78" TR-TC HOSE ASSY	02
12	0511064618	DOUBLE CONNECTION	01
13	0531018876	QUICK COUPLING SUPPORT	01
14	0511040952	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER	01
15	0511043573	1.7" X 3.4" X 8.858" HIDRAULI CYLINDER	02
16	0511043568	21.12" X 4" X 26.57" HIDRAULI CYLINDER	02
17	0511040972	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER	02

Item	Code	Description	See page	QT
01	0511066645	FRAME SDT 5000 S-0405		01
02	0502011530	SUPPORT		02
03	0502010175	HITCH CLAMP		02
04	0501011543	5/8" X 4" BOLT		04
05	0501012140	FLAT WASHER		04
06	0503010027	5/8" SPRING WASHER		08
07	0503010013	5/8" NUT		11
08	0511063624	PLOUGH SUPPORT		02
09	0531015160	PLOUGH FIXER		02
10	0503010795	5/8" X 7" BOLT		04
11	0531015274	SQUARE TUBE		04
12	0501069636	PLOUGH SUPPORT		04
13	0521010790	COUPLING SHAFT		04
14	0501011075	PIN		04
15	0503030085	LOCK PIN		07
16	0503010010	1/4" X 2.1/2" COTTERPIN		08
17	0503030168	HAIR PIN		08
18	0501069217	CARRYNG-WHEELS PIVOT ARM		08
19	0511066349	COUPLING SHAFT		16
20	0503010805	1/2" X 2" BOLT		12
21	0503010002	1800 GREASE FITTING		28
22	0511043573	1.7" X 3.4" X 8.858" HIDRAULI CYLINDER		02
23	0511043568	21.12" X 4" X 26.57" HIDRAULI CYLINDER		02
24	0501056317	RH CARRRYING-WHEELS PIVOT		01
24A	0511066631	RH CARRYING-WHEELS PIVOT		01
24B	0503010623	33287 CONE		08
24C	0503010624	33462 CAP		08
24D	0503010050	SEAL 00085-B		02
24E	0511066634	LH CARRYING-WHEELS FORK		04
24F	0541016926	HUB COVER		04
24G	0502040080	2.1/2" SLOTTED NUT		04




Item	Code	Description	See page	QT
24H	0503010073	3/8 X 3-1/2 COTTERPIN		02
24I	0503012314	2-248 1G05195 O'RING		04
24J	0503010028	1/2" NUT		02
24K	0501046478	LOCK CARRYNG-WHEELS ASSAY		02
24Ka	0501067328	LOK PIVOT		01
24Kb	0501067329	LOK PIVOT W/ GUIDE		02
24Kc	0511016229	PULLEY		02
24Kd	0511016227	COUPLING SHAFT		02
24Ke	0503010071	3/16" X 1" COTTERPIN		01
24Kf	0511016244	BOLT		04
24Kg	0503031006	COMPRESSION SPRING		01
24Kh	0511016228	SPRING SUPPORT		01
24Ki	0501019274	5/8" X 2" BOLT		01
25	0501056316	CARRYING-WHEELS PIVOT		01
25A	0511066632	RH CARRYING-WHEELS PIVOT		02
25B	0511066633	CARRYING-WHEELS FORK FRONT REAR		02
25C	0511066628	CARRYING WHEELS LOCK		04
25D	0511015346	FLAT WASHER		04
25E	0503030978	COMPRES SPRING		04
25F	0503010018	5/32 X 1-1/2 COTTERPIN		04
25G	0503030012	HAIR PIN		04
26	0501056315	RH REAR CARRYING-WHEELS PIVOT		01
26A	0511066630	RH REAR CARRYING-WHEELS PIVOT		01
27	0501056314	LH REAR CARRYING-WHEELS PIVOT		01
27A	0511066629	LH REAR CARRYING-WHEELS PIVOT		01
28	0501055280	STUB SHAFT & HUB ASSY		04
29	0511065454	0.5" X 0.6" WHEEL CENTER		04
30	0511014788	CARRYING WHEELS AXLE LOCK		08
31	0511063756	FRONT LADDER		01
32	0511063694	REAR LADDER		01
33	0503010395	1/2" X 1-1/4" BOLT		12
34	0531018627	0.5" X 1" X 0.2" SLEEVE		04
35	0511017302	FLAT WASHER		36
36	0503010019	1/2" SPRING WASHER		44
37	0503010060	1/2" NUT		40
38	0511063613	STAIR RIGHT LOCK		01
39	0511063614	STAIR LEFT LOCK		01
40	0503010257	1/8" X 1" COTTERPIN		02
41	0531019368	1.5" X 4.33" AXLE		04
42	0531015098	FRONT PLATFORM		01
43	0531015096	RIGHT FRONT PLATFORM		01
44	0531015065	RIGHT REAR PLATAFORM		01
45	0531015097	LEFT FRONT PLATFORM		01
46	0531015035	LEFT RAER PLATAFORM		01
47	0503010237	3/8" X 1" BOLT		20
48	0501010694	8.5 X 18 X 1.5 FLAT WASHER		20
49	0503010025	3/8" SPRING WASHER		24
50	0503010026	3/8" NUT		20
51	0511063606	FRONT HANDRAIL		01
52	0511063753	REAR HANDRAIL		01
53	0531015063	1/2" X 5.73" X 8.15" FASTENER		06
54	0511063656	FRONT SIDE HANDRAIL		01
55	0511063657	REAR SIDE HANDRAIL		01
56	0511042106	DRAWBAR		01
56A	0511063576	DRAWBAR		01
56B	0501053494	TRACTOR HITCH ASSY		01
56Ba	0511062245	TRACTOR HITCH ASSY		01
56Bb	0521010681	BUSHING COUPLING BODY		01
56Bc	0511013007	DRAWBOLT		01





Item	Code	Description	See page	QT
57	0521010574	C0.9" X 3.3" COUPLING SHAFT		02
58	0511040952	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER		01
59	0521010586	0.9" X 6.1" COUPLING SHAFT WITH 2 H		03
60	0531015557	DRAWBAR CYL LOCK		01
61	0503010571	1/4" X 1.1/2 COTTERPIN		04
62	0511063574	TRANSPORT DRAWBAR		01
63	0501047881	AXIS JOINT ASSY		02
63A	0501068989	COUPLING SHAFT		02
63B	0503031035	HAIR PIN		02
64	0541016028	TRANSPORT LOCK		02
65	0541016022	TRANSPORT LOCK		02
66	0501068994	0.3" X 3.1" LOCK PIN		04
67	0511041259	DRAWBAR JACK ASSY		01
68	0521010549	COUPLING SHAFT		01
69	0501040364	HOSE SUPPORT 3/4X640 ASSY		01
69A	0501060409	HOSE SOPPORT ASSY		01
69B	0503010023	3/4" SPRING WASHER		01
69C	0503010014	3/4" NUT		01
70	0502040291	LOWER BODY CLIP		04
71	0502010477	HOSE CLAMP		04
72	0503011268	3/8" X 2-1/2" BOLT		04

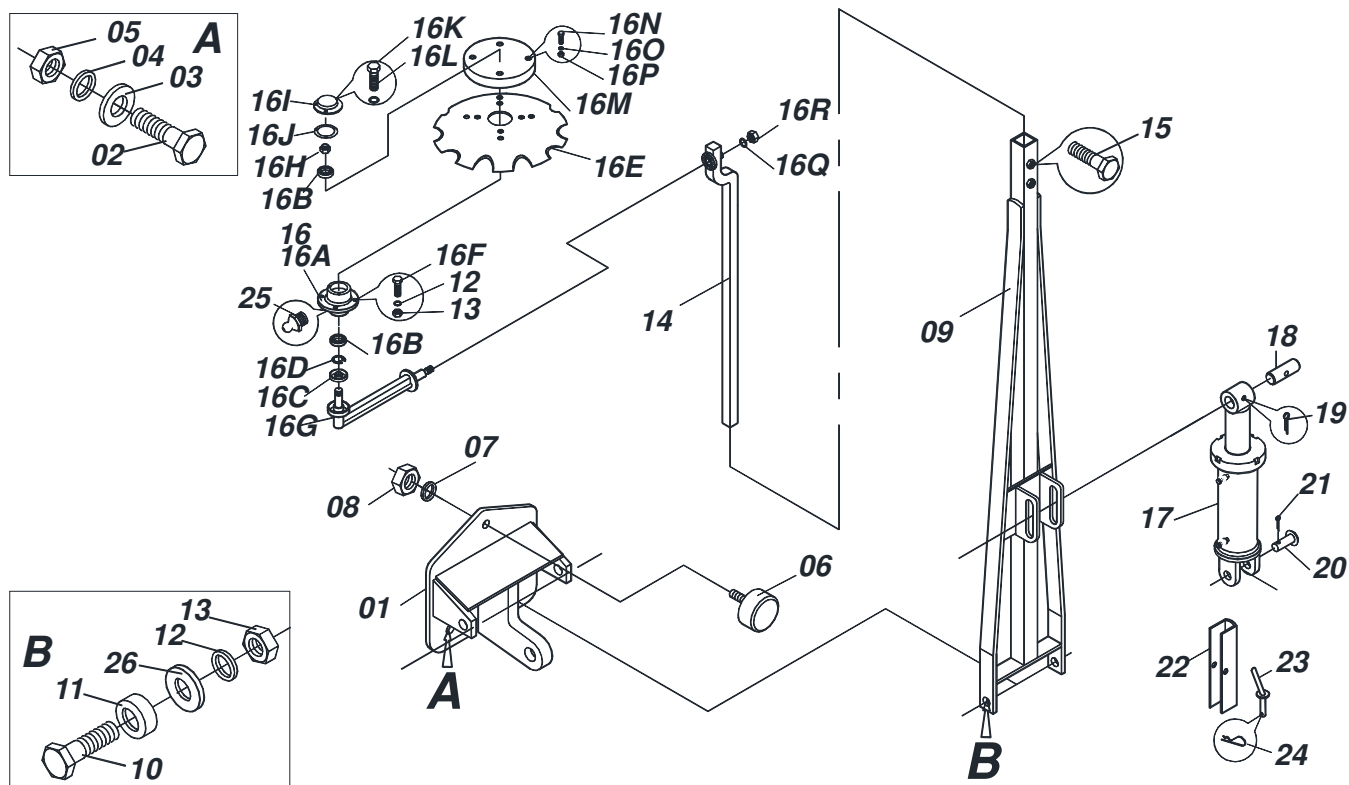

Item	Code	Description	See page
01	0511065449	ROW MARKER ARM SUPPORT	02
02	0501010098	3/4" UNC BOLT	08
03	0501012140	FLAT WASHER	08
04	0503010023	3/4" SPRING WASHER	08
05	0503010014	3/4" NUT	08
06	0503011070	BEATER	02
07	0503010019	1/2" SPRING WASHER	02
08	0503010060	1/2" NUT	02
09	0511063760	ROW MARKER ARM	02
10	0503011067	5/8" X 2-1/2" BOLT	04
11	0521010479	SLEEVE ARTICULATION	04
12	0503010027	5/8" SPRING WASHER	04
13	0503010013	5/8" NUT	04
14	0501066949	1235 TURNBUCKLE	02
15	0503010962	5/8" X 1-1/4" BOLT	04
16	0501053840	ROW MARKER DISC	02
16A	0502012077	MARKER ARM DISC HUB	01
16B	0503010598	30204 BALL BEARING	02
16C	0503011112	SEAL 02376-BRG	01
16D	0503011105	SEAL RING	01
16E	0602023094	DR16X3 C36AFPAFR73+4FR+4FR D474 10R	01
16F	0503010358	5/16" X 5/8" BOLT	04
16G	0511063375	ROW MARKER DISC AXLE	01
16H	0503010878	5/8" SELF ALIGNING NUT	01
16I	0521019178	COVER DEPTH	01
16J	0503030757	2.9" X 2" X 0.02" JOINT	01
16K	0503010298	1/4" X 1/2" BOLT	03
16L	0503011441	SPRING WASHER	03
16M	0501069226	ROW MARKER ROD STOP	01
16N	0501011778	3/8" X 2-1/2" BOLT	04
16O	0503010025	3/8" SPRING WASHER	04



## HIDRAULIC ROW MARKER ASSY

0909091258

Item	Code	Description	See page
16P	0503010026	3/8" NUT	04
16Q	0503010023	3/4" SPRING WASHER	01
16R	0503010014	3/4" NUT	01
17	0511040972	1.5 X 2.5 X 20.9" HYDRAULIC CYLINDER	02
18	0511015779	1" X 4.2" AXLE	02
19	0503010523	1/4" X 2" COTTERPIN	02
20	0521010574	C0.9" X 3.3" COUPLING SHAFT	02
21	0503010571	1/4" X 1.1/2 COTTERPIN	02
22	0511017592	11.8" X 1.6" TRANSPORT LOCK	02
23	0501068994	0.3" X 3.1" LOCK PIN	02
24	0503030168	HAIR PIN	02
25	0503010002	1800 GREASE FITTING	01
26	0501012140	FLAT WASHER	08



## FERTILIZER/SEED BOX ASSY

0909091260

Item	Code	Description	See page	QT
01	0511066668	BOX FERTILIZER SEED		01
02	0511066669	LH BOX FERTILIZER SEED		01
03	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		08
04	0501010984	FLAT WASHER		16
05	0503010025	3/8" SPRING WASHER		08
06	0503010026	3/8" NUT		08
07	0531014555	FIXER FERTILIZER CONDUCTOR		01
08	0511019234	3.93 FERTILIZER CONDUCTOR FIXER		11
09	0531014556	FIXER FERTILIZER CONDUCTOR		01
10	0503011953	5/16" X 1" BOLT		04
11	0503011952	5/16" X 3/4" BOLT		44
12	0521011039	FLAT WASHER		48
13	0503011444	SPRING WASHER		46
14	0503010337	5/16" NUT		46
15	0531014550	FERTILIZER TUBE		01
16	0531014549	FERTILIZER TUBE		10
17	0531014551	FERTILIZER TUBE		01
18	0511063519	RIGHT INNER FERTILIZER CONDUCTOR		01
19	0511063520	LEFT INNER FERTILIZER CONDUCTOR		01
20	0511063523	RIGHT FERTILIZER CONDUCTOR		10
21	0511063522	LEFT FERTILIZER CONDUCTOR		10
22	0511063521	RIGHT FERTILIZER OUTER CONDUCTOR		01
23	0511063524	LEFT OUTER CONDUCTOR FERTILIZER		01
24	0501054008	RIGHT FERTIL SYSTEM AXLE		01
24A	0531014365	RIGHT FERTILIZER BOX AXLE		01
24B	0503031734	LEFT HELICAL SPRING		12
24C	0511019256	LOCK WASHER		13
24D	0503010577	3/16" X 1-1/4" COTTERPIN		13
24E	0502012075	FERTILIZER SPRING LOCK SLEEVE		01
25	0501054009	LH FERTIL SYSTEM AXLE		01
25A	0531015353	LEFT FERTILIZER BOX AXLE		01



## FERTILIZER/SEED BOX ASSY

0909091260

Item	Code	Description	See page	QT
25B	0503031733	RIGHT HELICAL SPRING		12
26	0501051798	AGRICULTURAL BEARING ASSY		01
26A	0501110250	BEARING BOX		01
26B	0521011127	AGRICULTURAL BEARING REEL		01
26C	0503010372	501050 CLAMPING RING (FOR AXLE)		01
27	0501054010	OUTER BEARING ASSY		01
27A	0501110359	OUTER BEARING ASSY		01
27B	0502040540	FERTILIZER BOX EXT BEARING REEL		01
27C	0503010002	1800 GREASE FITTING		01
28	0503010237	3/8" X 1" BOLT		04
29	0503010025	3/8" SPRING WASHER		04
30	0503010026	3/8" NUT		04
31	0531015355	RIGHT SEED BOX AXLE		01
32	0531015354	LH SEED BOX AXLE		01
33	0501054011	OUTER BEARING SEED BOX		01
33A	0511066028	OUTER BEARING REEL SEED BOX		01
34	0501054012	OUTER BEARING SEED BOX ASSY		01
34A	0511066027	INNER BEARING REEL SEED BOX		01
35	0511063708	SUPPORT TUBE		06
36	0531015396	HOLDER		06
37	0511063670	OIL TUBE		04
38	0511063671	OIL TUBE		02
39	0531018513	SLEEVE NYLON 51 X 41 X 33		24
40	0521011021	OUTER FIXER TUBE LARGER		04
41	0521011019	SMALLER CLAMP		02
42	0503010420	BOLT		10
43	0503010143	1/4" SPRING WASHER		10
44	0503010144	1/4" NUT		10
45	0511064617	FERTILIZER DEFLECTOR		12
46	0503031145	2" X 2" X 20" HOSE		96
47	0503031076	2" HOSE CLAMP		96
48	0503010246	CLAMP		48
49	0503031826	CURVED CONDUCTOR		48
50	0531015049	COVER FIXER L		06
51	0503010461	1/4" X 1" BOLT		04
52	0531015054	BEARING WITH 21Z GEAR INNER		01
53	0531015050	CHAIN CAP		01
54	0503030878	LEVER CRANK		06
55	0511066594	25Z P5/8" GEAR SQUARE HOLE 19,6		01
56	0511066419	25Z P5/8" GEAR SQUARE HOLE 16,5		01
57	0511064870	LH FALSE BOTTON		02
58	0511064869	LH FALSE BOTTON		02
59	0511064868	CENTRAL FALSE BOTTON		04
60	0541016073	SEED BOX DEFLECTOR		22
61	0541015957	AXLE FASTENER 5/8		04
62	0531015355	RIGHT SEED BOX AXLE		01
63	0531015354	LH SEED BOX AXLE		12
64	0531018949	COVER DIVIDING COVER		12
65	0503010282	1/4" X 3/4" BOLT		48
66	0501010694	8.5 X 18 X 1.5 FLAT WASHER		48
67	0541015961	DOUBLE COVER SEED BOX		12
68	0511065448	FERTILIZER BOX COVER		02
69	0511065285	FINE SEED BOX CAP		02
70	0503010421	5/16" X 1-1/2" BOLT		08
71	0521011116	COVER PIVOT BUSHING		08
72	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
73	0503010179	5/16" ZN SPRING WASHER		24
74	0503010337	5/16" NUT		08
75	0501051927	COVER PIVOT SHAFT ASSY		08



## FERTILIZER/SEED BOX ASSY

0909091260

Item	Code	Description	See page	QT
75A	0521011120	COVER PIVOT SHAFT		04
75B	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
75C	0503010140	1/8" X 3/4" COTTERPIN		08
75D	0503031329	COMPRES SPRING		04
75E	0521011117	PIVOT SPRING AXLE		04
76	0501010984	FLAT WASHER		16
77	0503010025	3/8" SPRING WASHER		16
78	0503010026	3/8" NUT		16
79	0503011907	PMC 594-S NYLON LUG		04
80	0503010363	5/16" X 1" BOLT		08
81	0511066621	LARGER SEED FOLLOWER		01
82	0503010365	NUT		02
83	0511066618	SMALLER SEED FOLLOWER		01
84	0503010397	5/16" X 1-3/4" BOLT		02
85	0541015962	SIMPLE OUTPUT COVER SEED BOX		24
86	0501055873	FINE SPEED CHAIN TENSIONER ASSAY		01
86A	0511066135	FINE SPEED CHAIN TENSIONER		01
86B	0503031805	11Z 1/2" GEAR		01
86C	0503010302	501019 SEAL RING		01
87	0503010256	3/8" X 3/4" BOLT		01



SDT 5000 2420  
FINE SEED BOX

Page 0  
0909091301

Item	Code	Description	See page	QT
01	0511066670	RIGHT REAR FINE SEED BOX ASSY		01
02	0511066671	LH REAR FINE SEED BOX ASSY		01
03	0511066672	RIGHT FRONT FINE SEED BOX ASSY		01
04	0511066673	LEFT REAR FINE SEED BOX ASSY		01
05	0531014839	FINE SEED BOX AXLE		01
06	0503060150	FINE SEED DISTRIBUTOR		06
07	0503010144	1/4" NUT		26
08	0503010140	1/8" X 3/4" COTTERPIN		12
09	0531015344	RIGHT SEED FINE ADJUSTMENT		01
10	0531015345	LEFT SEED FINE ADJUSTMENT		01
11	0531015346	RIGHT SEED FINE REGULACION		01
12	0531015347	RIGHT SEED FINE REGULACION		01
13	0531014838	RIGHT SEED FINE BEARING REEL		01
14	0531014837	RIGHT SEED FINE BEARING REEL		01
15	0503011335	502024 CLAMPING RING (FOR AXLE)		04
16	0502010901	FINE SEED BOX AGRICULTURAL BEARING		02
17	0503010237	3/8" X 1" BOLT		04
18	0503010025	3/8" SPRING WASHER		04
19	0503010026	3/8" NUT		04
20	0503010002	1800 GREASE FITTING		02
21	0511063686	SEED FINE BOX BEARING INNER DOUBLE		01
22	0511063684	SEED FINE BOX BEARING INNER		02
23	0511063685	SEED FINE BOX BEARING INNER SIMPLE		01
24	0502020552	SMALLER DOSADOR		01
25	0503010838	0.1" X 0.8" SPRING PIN		01
26	0531018937	SEED FINE SUPPORT LADDER		01
27	0503010282	1/4" X 3/4" BOLT		02
28	0503030885	SEED DOSADOR SCALE		01
29	0503010001	3.2 X 5.5 RIVET		02
30	0511063716	SEED FINE FOLLOWER AXLE		04
31	0503010421	5/16" X 1-1/2" BOLT		08



SDT 5000 2420  
FINE SEED BOX

Page 0  
0909091301

Item	Code	Description	See page	QT
32	0521011116	COVER PIVOT BUSHING		08
33	0503010179	5/16" ZN SPRING WASHER		08
34	0503010337	5/16" NUT		08
35	0511066622	SEED FINE FOLLOWER LARGER		02
36	0503010461	1/4" X 1" BOLT		05
37	0503030616	17" X 17" X 15.7"HOSE		01
38	0503010296	CLAMP		24
39	0503011342	3/4" TO 1 CLAMP		24
40	0511063921	HOSE SOCKET FINE SEED		12
41	0503011952	5/16" X 3/4" BOLT		12
42	0501010694	8.5 X 18 X 1.5 FLAT WASHER		12
43	0503010179	5/16" ZN SPRING WASHER		08
44	0503010337	5/16" NUT		08
45	0531018615	FINE SEED BOX DEFLECTOR		20
46	0503050042	FINE SEED DISTR BOX INTER		12
47	0531015004	FINE SEED REGULATOR WRENCH		02
48	0531016760	5/8" X 19.69" HOSE		12
49	0503011907	PMC 594-S NYLON LUG		04
50	0503010363	5/16" X 1" BOLT		08
51	0501010984	FLAT WASHER		16
52	0503013059	40-1 X 197 CHAIN LINK-MENDING		01
53	0531015026	FINE SPEED SOCKET BODY		24
54	0531015091	SLEEVE		01
55	0541014816	SEED FLOW SWITCH BASE		12
56	0541014818	SEED FLOW SWITCH GUIDE		12
57	0511066617	SEED FINE FOLLOWER SMALLER		02





SDT 5000 2420  
BLADE DISC ASSY

Page 0  
0909091302

Item	Code	Description	See page	QT
01	0511066354	ARM BLADE DISC		01
02	0531015029	BLADE DISC REEL		01
03	0503010046	2-216 N 3006-9B O'RING		02
04	0511017907	1/8" BSPT X 6 PLUG		02
05	0503012649	3/4" X 6-1/4" BOLT		01
06	0503010023	3/4" SPRING WASHER		01
07	0503010014	3/4" NUT		01
08	0501054169	DISC BLADE HUB ASSY		01
08A	0502012097	BLADE DISC HUB		01
08B	0503010215	30205 BEARING		02
08C	0503010213	SEAL 30205		02
08D	0511061647	BLADE DISC AXLE ASSY		01
08E	0501068582	7/8" UNF WITH DUST CLOAK NUT		01
09	0501013839	WASHER		01
10	0511015346	FLAT WASHER		02
11	0503010023	3/4" SPRING WASHER		02
12	0531017617	3/4" X 0.63" D BLADE NUT		02
13	0511066352	BLADE DISC SPRING GUIDE		01
14	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		02
15	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE		02
16	0501012140	FLAT WASHER		02
17	0503012412	5/8 UNC SELF LOCKING NUT		02
18	0502020635	SPRING UPPER SUPPORT		02
19	0503031379	COMPRESSION SPRING		01
20	0502012043	SPRING LOCKNUT		01
21	0521012736	REGULATOR SPINDLE		01
22	0502040534	SPRING GUIDE BUSHING LOCK		01
23	0503010834	1/2 X 1 BOLT		01
24	0503010002	1800 GREASE FITTING		01
25	0503010365	NUT		06
26	0503010179	5/16" ZN SPRING WASHER		06



**SDT 5000 2420**  
**BLADE DISC ASSY**

Page 0  
0909091302


Item	Code	Description	See page	QT
27	0503010337	5/16" NUT		06



## DEPTH CONTROL PRESS WHEELS

0909091303

Item	Code	Description	See page	QT
01	0511063710	DEPTH CONTROL SUPPORT WITH AXLE		01
02	0502012046	PRESS WHEELS FORK		01
03	0501010452	5/8" X 5" BOLT		01
04	0503031742	LEFT TORSION SPRING		01
05	0531015043	0.65" X 1.81" X 2.03" SLEEVE		01
06	0501012140	FLAT WASHER		01
07	0503010027	5/8" SPRING WASHER		01
08	0503010013	5/8" NUT		01
09	0511066665	"V" PRESS WHEEL FIXER		01
10	0503010849	3/8" X 1-1/2" BOLT		01
11	0503010025	3/8" SPRING WASHER		02
12	0503010026	3/8" NUT		02
13	0503011404	BOLT		01
14	0501010984	FLAT WASHER		02
15	0502012074	DEPTH WHEEL ARM		02
16	0511015346	FLAT WASHER		14
17	0503010834	1/2 X 1 BOLT		02
18	0503010019	1/2" SPRING WASHER		02
19	0511017302	FLAT WASHER		02
20	0501053999	DEPTH WHEELS REGULATOR		01
20A	0502011689	1/8" DEPTH CONTROL LEVER		01
20B	0502012045	SEED SIST CONTROL DEPTH LEVER		01
20C	0503030975	0.9" X 1.5" X 0.1" SPRING		01
20D	0511015976	FLAT WASHER		01
20E	0503010257	1/8" X 1" COTTERPIN		02
21	0531019373	PIVOT SHAFT		01
22	0503010002	1800 GREASE FITTING		02
23	0521016316	DUST CLOAK		02

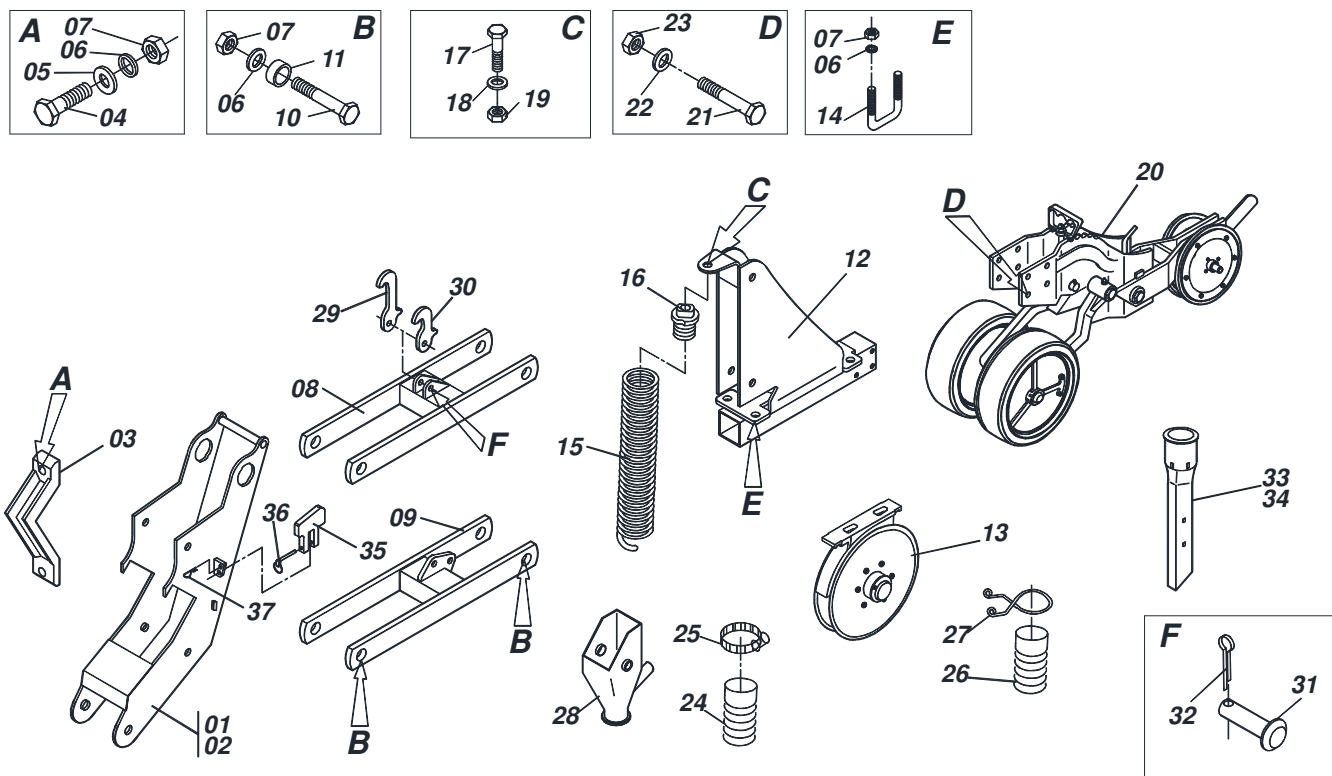

Item	Code	Description	See page
01	0511063696	FRONT ROW SUPPORT	01
02	0511063695	REAR ROW SUPPORT	01
03	0502010175	HITCH CLAMP	01
04	0501010163	5/8" X 4-1/2" BOLT	02
05	0501012140	FLAT WASHER	10
06	0503010027	5/8" SPRING WASHER	14
07	0503010013	5/8" NUT	14
08	0511063702	UPPER ROW PARALELOGRAMO	01
09	0511063703	ROW LOWER PARALELOGRAMO	01
10	0503012410	5/8" X 7.1/2" BOLT	04
11	0521010482	ARTICULAT SLEEVE	08
12	0511063697	ROW FRAME	01
13	0501053997	SEED DOUBLE-DISC OPENER ASSY	01
14	0531013805	5/8" UNC X 105 X 78 FASTENER	02
15	0503031389	2.11" X 8.83 X 0.39"TRACTION SPRING	01
16	0502011031	SPRING UPPER HITCH	01
17	0503013329	1/2" UNC X 4-3/4" BOLT	01
18	0511017302	FLAT WASHER	01
19	0503010060	1/2" NUT	01
20	0501054156	SEED FERTILIZER ROW REAR ASSY	01
21	0503010718	3/8" X 3-1/2" BOLT	04
22	0503010025	3/8" SPRING WASHER	04
23	0503010026	3/8" NUT	04
24	0503030616	17" X 17" X 15.7"HOSE	01
25	0503011342	3/4" TO 1 CLAMP	02
26	0503031145	2" X 2" X 20" HOSE	02
27	0503031076	2" HOSE CLAMP	04
28	0503031760	SOCKET SEED	01
29	0531015039	LOCK LARGE SEED ROW SUPPORT	01
30	0531015040	LOCK SMALLER SEED ROW SUPPORT	01
31	0531015268	0.44" X 1.81" COUPLING SHAFT	01



SDT 5000 2420  
SEED FERTIL ROW ASSY

Page 0  
0909091305

Item	Code	Description	See page
32	0503010140	1/8" X 3/4" COTTERPIN	01
33	0503030520	SEED SOCKET	01
34	0503030483	FERTILIZER SOCKET	01
35	0541016903	PARALELOGRAMO LOCK STOP	01
36	0503010683	0,2" X 1,2" SPRING PIN	01
37	0503030012	HAIR PIN	01





[www.marchesan.com.br](http://www.marchesan.com.br)



**Technical Publications | Elaboration and Revision**  
ALESSANDRA PATRICIA KAWAHARA CARRILI