

PARTS CATALOGUE



ROW CROP PLANTERS

Code:

0501090862

Product:

PST4 SUPREMA



Series:

S-1207

Revision:

00

Date Revision:

MAIO/2008

PRODUCTS




Code	Description
0111160551	PST4 SUP 10/9 MH MTH S-1207
0111160277	PST4 SUP 11/10 MH DC20 CBR S-1207
0111160096	PST4 SUP 11/10 MM S-1207
0111160208	PST4 SUP 11/11 MH S-1207
0111160501	PST4 SUP 11/7 H MH S-1207
0111160518	PST4 SUP 11/8 D MH S-1207
0111160218	PST4 SUP 7/4 MH CBR S-1207
0111160006	PST4 SUP 7/4 MM S-1207
0111160012	PST4 SUP 7/5 MM S-1207
0111160524	PST4 SUP 7/6 MH S-1207
0111160018	PST4 SUP 7/6 MM S-1207
0111160209	PST4 SUP 7/7 MH S-1207
0111160274	PST4 SUP 9/6 D MH S-1207
0111160529	PST4 SUP 9/8 MH S-1207

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.

INDEX


0909093102	PST4 SUPREMA 07-09 FRAME	1
0909093103	7-9 HYDRAULIC CIRCUIT	2
0511041188	2" X 5" X 19.5" X 7.5" HYDRAULIC CYLINDER	3
0909093326	15" X 15" DOUBLE DISC ASSY	4
0909093053	PST4 SUPREMA 11 FRAME	5
0909093055	11 HYDRAULIC CIRCUIT	6
0511041187	HYDRAULIC CYLINDER	7
0909093033	07/09/11 TRANSMISSION	8
0909093035	GEAR BOX ASSY	9
0511046744	TRANSMISSION DRIVING ASSY	10
0909093036	SIDE TRANSMISSION DRIVING ASSY	11
0909093037	WHEELS ASSY	12
0501053110	WHEEL TRANSMISSION WITHOUT TIRE	13
0909093058	FERTILIZER BEAM	14
0909093056	SEED/FERTILIZER ROW ASSY	15
0909093057	SEED ROW ASSY	16
0909090004	15" X 15" SEED UNAL DOUB-DISC ASSY	17
0501052710	SEED DISTRIBUTOR WITH DISC	18
0909093041	DEPTH CONTROL WHEEL ASSY	19
0909093042	"V" PRESS WHEEL	20
0909093323	FERTILIZER ROW ASSY	21
0909090102	FERTILIZER UNAL DOUB-DISC ASSY	22
0909092926	BLADE DISC ASSY	23
0909093324	FERTILIZER ROW SCARIFIER SPINDLE	24
0909093049	ROD RIGHT SCARIFIER SPINDLE ASSY	25
0909093080	MECANIC ROW MARKER	26
0501050633	MARKER DISC ASSY LINE	27
0909093081	HYDRAULIC ROW MARKER ASSY	28
0909093054	MARKER HYDRAULIC CIRCUIT	29
0511040203	1.5" X 2.5" X 19" X 9" HYDRAULIC CYLINDER	30
0501054649	SEQUENTIAL VALVE ASSY	31
0909092761	TURBINE ASSY FOR CARDAN	32
0511041364	DRIVE SHAFT	33
0909093047	ROD FERTILIZER SCARIFIER SPINDLE	34

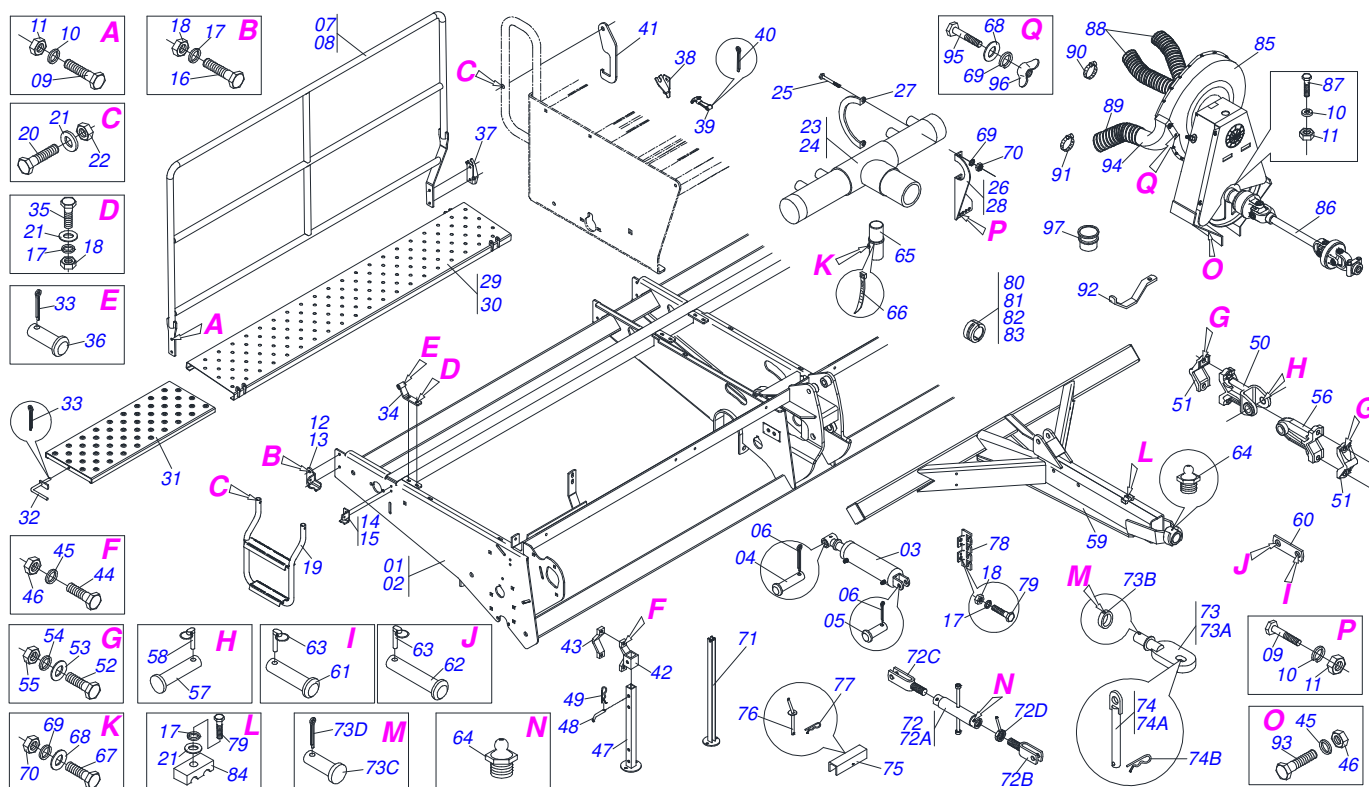


Item	Code	Description	See page	07 09
01	0511069615	PST4 7 S-1207 FRAME		01 00
02	0511069529	FRAME PST4 9 S-1207		00 01
03	0511041188	2" X 5" X 19.5" X 7.5" HYDRAULIC CYLINDER	3	01 01
04	0531019171	1.25" X 7" COUPLING SHAFT		01 01
05	0521012536	COUPLING SHAFT		01 01
06	0503010523	1/4" X 2" COTTERPIN		02 02
07	0511069635	HANDRAIL		02 02
08	0511069656	HANDRAIL COP FLEX 600 9		00 02
09	0503010920	1/2" X 1.1/2" BOLT		12 12
10	0503010019	1/2" SPRING WASHER		13 13
11	0503010060	1/2" NUT		13 13
12	0551019110	LADDER RIGHT FIXER		01 01
13	0551017438	LADDER RIGHT FIXER		01 01
14	0551019109	LADDER LEFT FIXER		01 01
15	0551017437	LADDER RIGHT FIXER		01 01
16	0503010237	3/8" X 1" BOLT		04 04
17	0503010025	3/8" SPRING WASHER		15 15
18	0503010026	3/8" NUT		14 14
19	0511069636	LADDER		02 02
20	0501010096	3/8" X 2" BOLT		06 06
21	0501010984	FLAT WASHER		23 23
22	0503013357	3/8" SELF-ADJUSTING NUT		06 06
23	0503031608	AIR DISTRIBUTOR		02 00
24	0503031609	AIR DISTRIBUTOR		00 02
25	0503010365	NUT		08 08
26	0521014441	HOSE HOLDER RIGHT SUPPORT		02 02
27	0521014442	LOWER AIR DISTRIBUTOR SUPPORT		04 04
28	0521018535	HOSE HOLDER LEFT SUPPORT		02 02
29	0511069725	RIGHT PLATFORM		02 00
30	0511069665	PLATFORM RIGHT PST4 9		00 02
31	0511069666	PLATFORM EXTENSION		02 02

Item	Code	Description	See page	07 09
32	0511069664	PLATFORM EXTENSION LOCK		02 02
33	0503010257	1/8" X 1" COTTERPIN		06 06
34	0511069661	PLATFORM SUPPORT PIVOT		04 02
35	0503010849	3/8" X 1-1/2" BOLT		08 08
36	0521010549	COUPLING SHAFT		04 04
37	0551019127	PLATFORM RIGHT FIXER SUPPORT		01 01
38	0551019128	PLATFORM LEFT FIXER SUPPORT		01 01
39	0503011333	COVER FIXER		02 02
40	0503010274	5/32"X 2" COTTERPIN		02 02
41	0551019115	LOCKING PLATFORM FIXATION		02 02
42	0502011530	SUPPORT		02 02
43	0502010175	HITCH CLAMP		02 02
44	0501011543	5/8" X 4" BOLT		04 04
45	0503010027	5/8" SPRING WASHER		06 06
46	0503010013	5/8" NUT		06 06
47	0511061835	PLOUGH SUPPORT		02 02
48	0501011075	PIN		02 02
49	0503030012	HAIR PIN		02 02
50	0502012328	DRAWBAR SUPPORT FRONT FIXATION		02 02
51	0502012330	SUPPORT FIXER PIVOT		04 04
52	0503011084	3/4" X 5" BOLT		08 08
53	0501010322	FLAT WASHER		08 08
54	0503010023	3/4" SPRING WASHER		08 08
55	0503010014	3/4" NUT		08 08
56	0502012329	DRAWBAR FIXATION REAR SUPPORT		02 02
57	0531012336	1.4" X 5.35" COUPLING SHAFT		02 02
58	0503030119	LOCK PIN		02 02
59	0511064808	DRAWBAR		01 01
60	0521013867	DRAWBAR TRANSPORT LOCK		01 01
61	0521010578	COUPLING SHAFT		01 01
62	0521010588	0.9" X 7.0" COUPLING SHAFT		01 01
63	0503030085	LOCK PIN		02 02
64	0503010002	1800 GREASE FITTING		03 03
65	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01 01
66	0503010267	NYLON CLAMP		01 01
67	0503010365	NUT		01 01
68	0501010694	8.5 X 18 X 1.5 FLAT WASHER		05 05
69	0503010179	5/16" ZN SPRING WASHER		11 11
70	0503010337	5/16" NUT		09 09
71	0501065677	STRUT		02 02
72	0501054258	DRAWBAR ESTABILIZER ASSY		01 01
72A	0501069529	653 TURNBUCKLE		01 01
72B	0511060558	RIGHT TURNBUCKLE		01 01
72C	0511060559	LEFT TURNBUCKLE		01 01
72D	0501061056	RH LOCKNUT WITH HANDLER		01 01
73	0501051160	TRACTOR HITCH PIN		01 01
73A	0502040556	HITCH TURNER		01 01
73B	0521010681	BUSHING COUPLING BODY		01 01
73C	0521010639	COUPLING SHAFT		01 01
73D	0503010571	1/4" X 1.1/2 COTTERPIN		01 01
74	0501047881	AXIS JOINT ASSY		01 01
74A	0501068989	COUPLING SHAFT		01 01
74B	0503031035	HAIR PIN		01 01
75	0521013022	TRANSPORT LOCK		01 01
76	0501068994	0.3" X 3.1" LOCK PIN		01 01
77	0503030168	HAIR PIN		01 01
78	0541011767	HOSE FIXATION		01 01
79	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		03 03
80	0501047895	ROD STOP		01 02


Item	Code	Description	See page	07 09
81	0501047896	1.18" ROD STOP		01 02
82	0501047897	1.38" ROD STOP		01 02
83	0501047898	1.57" ROD STOP		01 02
84	0502010477	HOSE CLAMP		01 01
85	0511044704	TURBINE ASSY FOR CARDAN		01 01
86	0511041364	DRIVE SHAFT	33	01 01
87	0503010479	1/2" X 3" BOLT		01 01
88	0531016195	4" X 94" AIR CONDUCTOR		02 02
89	0521018618	5" X 70" AIR CONDUCTOR		01 01
90	0503011372	102 TO 121 CLAMP		04 04
91	0503012724	121 TO 140 CLAMP		01 01
92	0531015603	HOSE FIXATION SUPPORT		01 01
93	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02 02
94	0501056495	TURBINE OUTPUT SOCKET		01 01
95	0503013096	5/16" X 4" BOLT		02 02
96	0503010499	5/16" UNC BUTTERFLY NUT		02 02
97	0503031436	AIR DITRIBUTOR PUMP		06 06

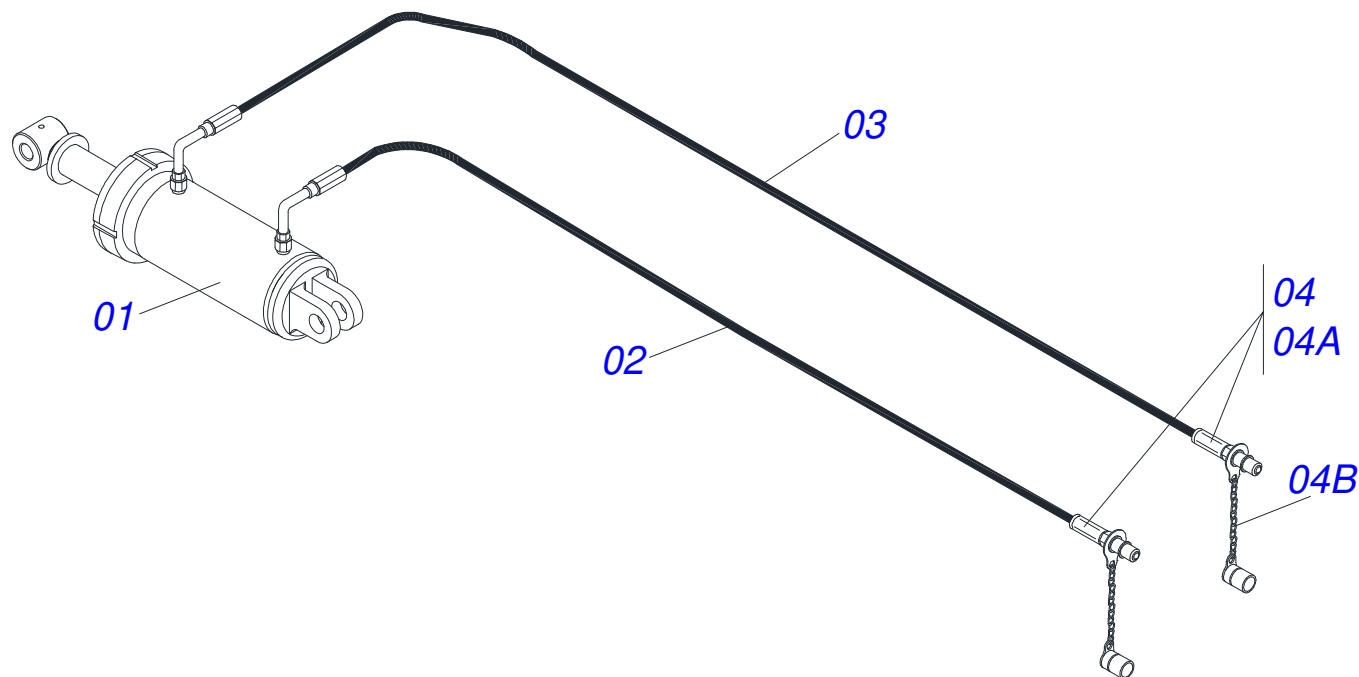


Item	Code	Description	See page	07 09
01	0511041188	2" X 5" X 19.5" X 7.5" HYDRAULIC CYLINDER	3	07 09
02	0501080422	HOSE 3/8 X 4000 TC-TM		01 01
03	0501080446	3/8 X" 169" TC-TM HOSE ASSY		01 01
04	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02 02
04A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		02 02
04B	0503011882	MALE QUICK COUPLER CAP		02 02

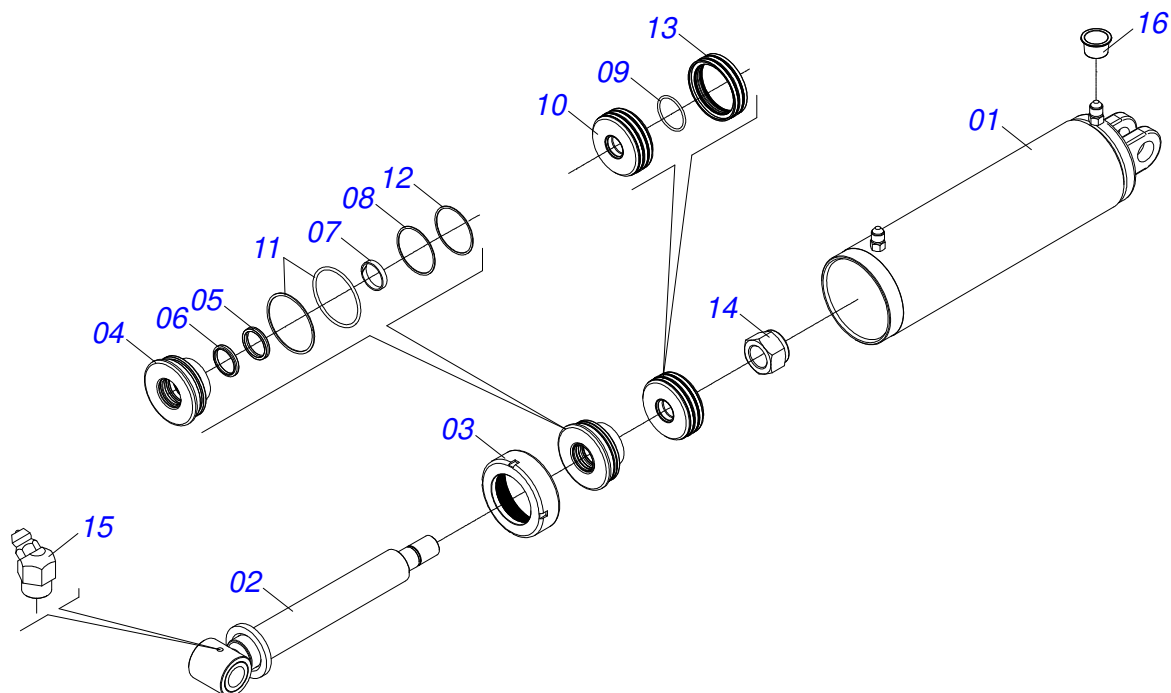

Item	Code	Description	See page	QT
01	0511064055	5" X 15" CYLINDER CASE		01
02	0511064056	BUSHING 2" X 14" TURNBUCLE		01
03	0502010382	5" END CAP		01
04	0502012227	50.80 X 127 RING SUPPORT		01
05	0503010039	D-2000 SCRAPER RING		01
06	0503010991	1870-2000-375-B GASKET		01
07	0503010952	W2-2250-500 RING		01
08	0503010351	2-425 N 3006-9B O'RING		01
09	0503011062	8-425 BACK-UP RING		01
10	0502010963	2.0" X 5.0" PISTON		01
11	0503010552	PACKING 3750-4250-625-B		02
12	0503010345	2-218 N 3006-9B O'RING		01
13	0503010974	W2-5000-500 RING		01
14	0503010817	1.1/4" SELF LOCKING NUT		01
15	0503010003	1845 GREASE FITTING		01
16	0503030385	CYLINDER PLUG N-002		02

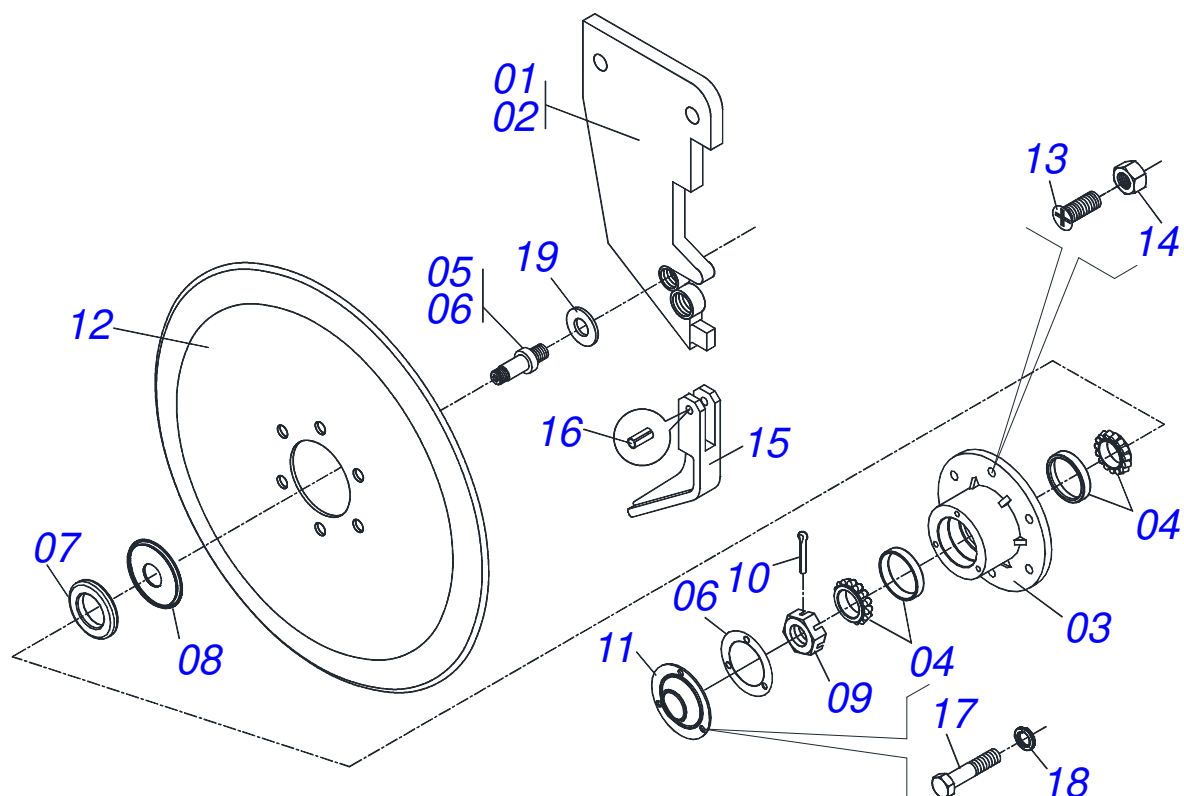


Item	Code	Description	See page	QT
00	0501052988	RIGHT 15" X 15" DOUBLE DISC		01
00A	0501052989	LH 15" X 15" DOUBLE DISC		01
01	0501068318	15"X15" RW SEED UNAL DOUB-DISC SUPP		01
02	0501068319	15"X15" LW SEED UNAL DOUB-DISC SUPP		01
03	0502011930	DOUBLE DISC COULTER BOX		01
04	0503010598	30204 BALL BEARING		04
05	0521019154	RIGHT DOUB DISC HUB		01
06	0521019154	RIGHT DOUB DISC HUB		01
07	0503011112	SEAL 02376-BRG		02
08	0511011927	DUST CLOAK		02
09	0503030282	3/4" CASTLE NUT		02
10	0503010257	1/8" X 1" COTTERPIN		02
11	0521019178	COVER DEPTH		02
12	0603022042	13" X 0.12" PLAIN COULTER BLADE		02
13	0503010546	5/16" X 7/8" BOLT		12
14	0503010337	5/16" NUT		12
15	0501067170	UNALIGNED DISC SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0503014729	1/4" UNF X 1/2" BOLT		06
18	0503011441	SPRING WASHER		06
19	0511015098	FLAT WASHER		02

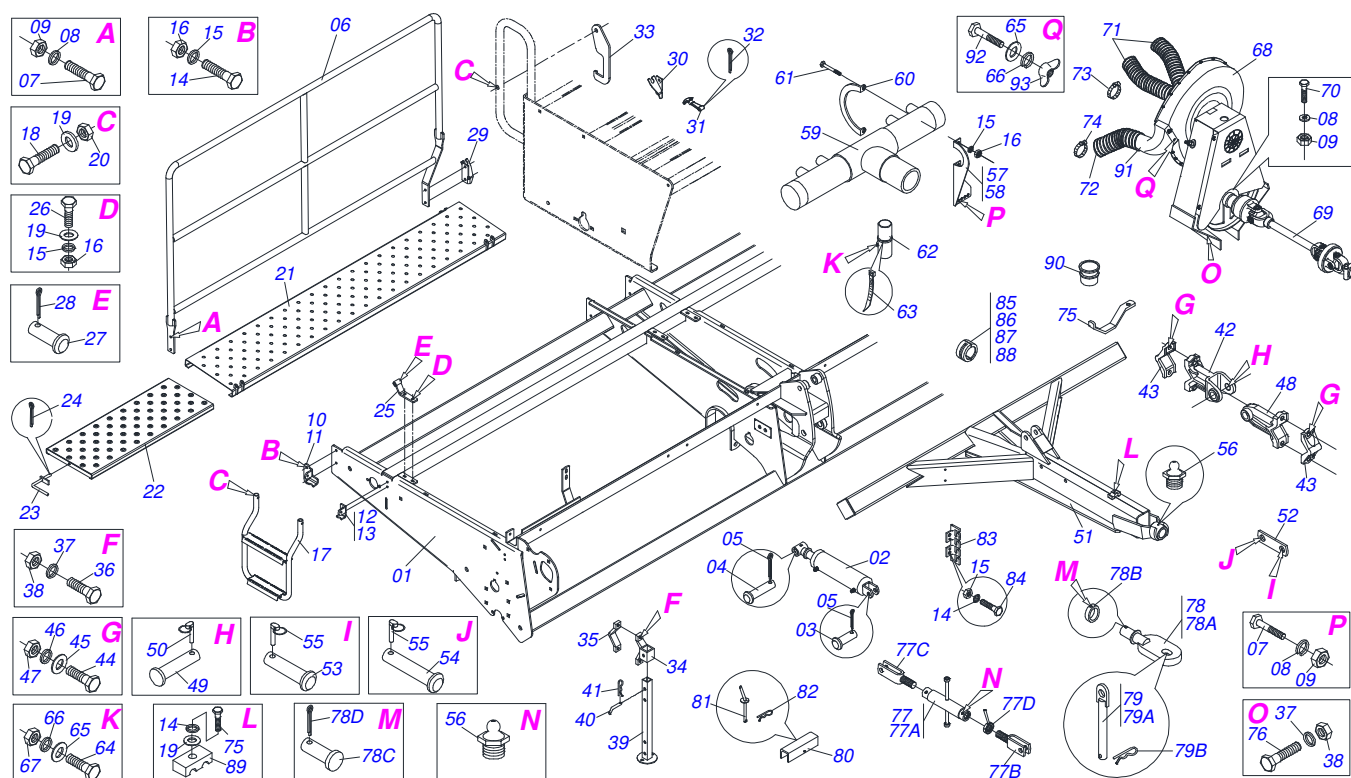


Item	Code	Description	See page	QT
01	0511069616	PST4 SUPREMA FRAME		01
02	0511041187	HYDRAULIC CYLINDER	7	02
03	0521012538	1.2" X 3.5" COUPLING SHAFT		02
04	0521012536	COUPLING SHAFT		02
05	0503010523	1/4" X 2" COTTERPIN		04
06	0511069660	HANDRAIL COP FLEX 600 11		02
07	0503010920	1/2" X 1.1/2" BOLT		12
08	0503010019	1/2" SPRING WASHER		13
09	0503010060	1/2" NUT		13
10	0551019110	LADDER RIGHT FIXER		01
11	0551017438	LADDER RIGHT FIXER		01
12	0551019109	LADDER LEFT FIXER		01
13	0551017437	LADDER RIGHT FIXER		01
14	0503010237	3/8" X 1" BOLT		07
15	0503010025	3/8" SPRING WASHER		14
16	0503010026	3/8" NUT		12
17	0511069636	LADDER		02
18	0501010096	3/8" X 2" BOLT		06
19	0501010984	FLAT WASHER		06
20	0503013357	3/8" SELF-ADJUSTING NUT		06
21	0511069718	PLATFORM RIGHT PST4 11		02
22	0511069666	PLATFORM EXTENSION		02
23	0511069664	PLATFORM EXTENSION LOCK		02
24	0503010257	1/8" X 1" COTTERPIN		02
25	0511069661	PLATFORM SUPPORT PIVOT		04
26	0503010849	3/8" X 1-1/2" BOLT		08
27	0521010549	COUPLING SHAFT		04
28	0503010257	1/8" X 1" COTTERPIN		04
29	0551019127	PLATFORM RIGHT FIXER SUPPORT		01
30	0551019128	PLATFORM LEFT FIXER SUPPORT		01
31	0503011333	COVER FIXER		02

Item	Code	Description	See page	QT
32	0503010274	5/32"X 2" COTTERPIN		02
33	0551019115	LOCKING PLATFORM FIXATION		02
34	0502011530	SUPPORT		02
35	0502010175	HITCH CLAMP		02
36	0501011543	5/8" X 4" BOLT		04
37	0503010027	5/8" SPRING WASHER		06
38	0503010013	5/8" NUT		06
39	0511061835	PLOUGH SUPPORT		02
40	0501011075	PIN		02
41	0503030012	HAIR PIN		02
42	0502012328	DRAWBAR SUPPORT FRONT FIXATION		04
43	0502012330	SUPPORT FIXER PIVOT		08
44	0503011084	3/4" X 5" BOLT		16
45	0501010322	FLAT WASHER		16
46	0503010023	3/4" SPRING WASHER		16
47	0503010014	3/4" NUT		16
48	0502012329	DRAWBAR FIXATION REAR SUPPORT		04
49	0531012336	1.4" X 5.35" COUPLING SHAFT		04
50	0503030119	LOCK PIN		04
51	0511064808	DRAWBAR		01
52	0521013867	DRAWBAR TRANSPORT LOCK		01
53	0521010578	COUPLING SHAFT		01
54	0521010588	0.9" X 7.0" COUPLING SHAFT		01
55	0503030085	LOCK PIN		02
56	0503010002	1800 GREASE FITTING		03
57	0521014441	HOSE HOLDER RIGHT SUPPORT		02
58	0521018535	HOSE HOLDER LEFT SUPPORT		02
59	0503031610	AIR DISTRIBUTOR		02
60	0521014442	LOWER AIR DISTRIBUTOR SUPPORT		04
61	0503010365	NUT		08
62	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
63	0503010267	NYLON CLAMP		01
64	0503010365	NUT		01
65	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
66	0503010179	5/16" ZN SPRING WASHER		01
67	0503010337	5/16" NUT		01
68	0511044704	TURBINE ASSY FOR CARDAN		01
69	0511041364	DRIVE SHAFT	33	01
70	0503010479	1/2" X 3" BOLT		01
71	0531016195	4" X 94" AIR CONDUCTOR		02
72	0521018618	5" X 70" AIR CONDUCTOR		01
73	0503011372	102 TO 121 CLAMP		04
74	0503012724	121 TO 140 CLAMP		01
75	0531015603	HOSE FIXATION SUPPORT		01
76	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02
77	0501054258	DRAWBAR ESTABILIZER ASSY		01
77A	0501069529	653 TURNBUCKLE		01
77B	0511060558	RIGHT TURNBUCKLE		01
77C	0511060559	LEFT TURNBUCKLE		01
77D	0501061056	RH LOCKNUT WITH HANDLER		01
78	0501051160	TRACTOR HITCH PIN		01
78A	0502040556	HITCH TURNER		01
78B	0521010681	BUSHING COUPLING BODY		01
78C	0521010639	COUPLING SHAFT		01
78D	0503010571	1/4" X 1.1/2 COTTERPIN		01
79	0501047881	AXIS JOINT ASSY		01
79A	0501068989	COUPLING SHAFT		01
79B	0503031035	HAIR PIN		01
80	0521013022	TRANSPORT LOCK		02


Item	Code	Description	See page	QT
81	0501068994	0.3" X 3.1" LOCK PIN		02
82	0503030168	HAIR PIN		02
83	0541011767	HOSE FIXATION		01
84	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		03
85	0501047895	ROD STOP		02
86	0501047896	1.18" ROD STOP		02
87	0501047897	1.38" ROD STOP		02
88	0501047898	1.57" ROD STOP		02
89	0502010477	HOSE CLAMP		01
90	0503031436	AIR DITRIBUTOR PUMP		06
91	0501056495	TURBINE OUTPUT SOCKET		01
92	0503013096	5/16" X 4" BOLT		02
93	0503010499	5/16" UNC BUTTERFLY NUT		02

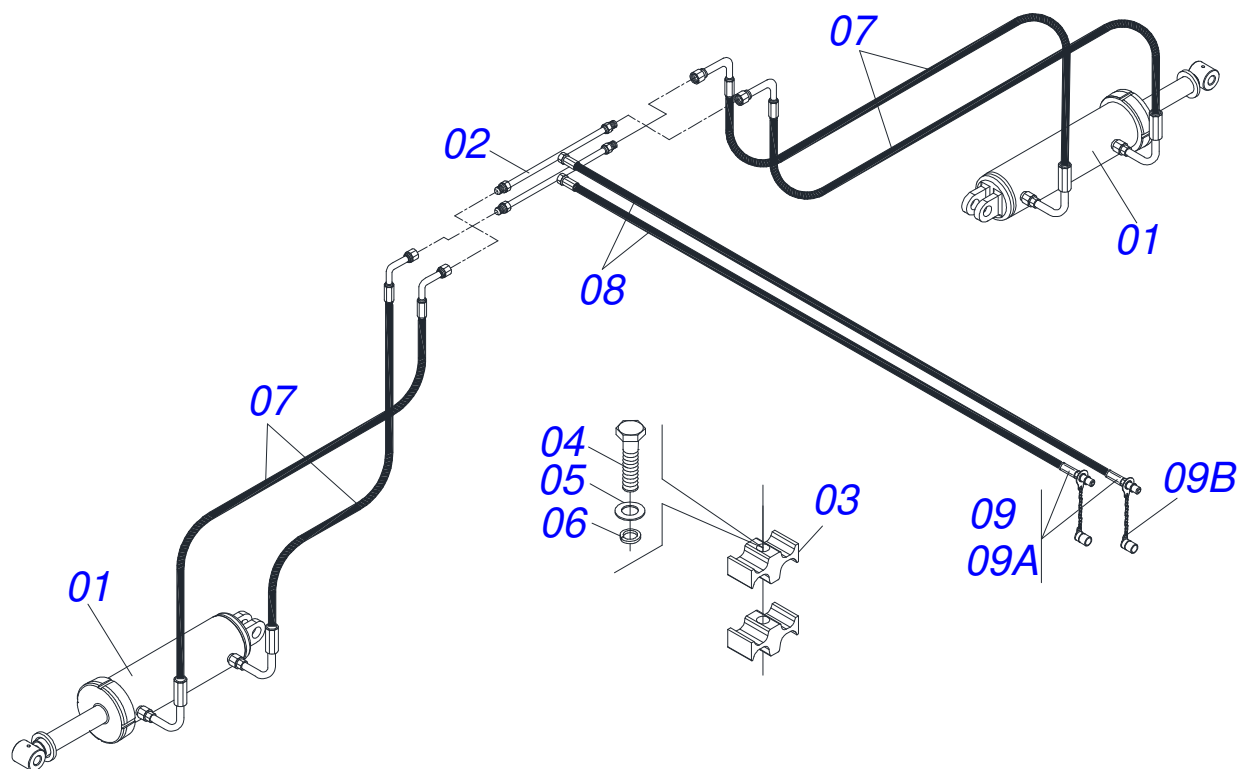

Item	Code	Description	See page	QT
01	0511041187	HYDRAULIC CYLINDER	7	02
02	0511063404	"T" OIL CONDUCTOR		02
03	0502012702	BODY SUPPORT CLAMP		06
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		06
05	0501010984	FLAT WASHER		06
06	0503010025	3/8" SPRING WASHER		06
07	0501080449	3/8" X 1500 TC-TC HOSE		04
08	0501080361	3/8" X 157" TR-TM HOSE		02
09	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
09A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		02
09B	0503011882	MALE QUICK COUPLER CAP		02

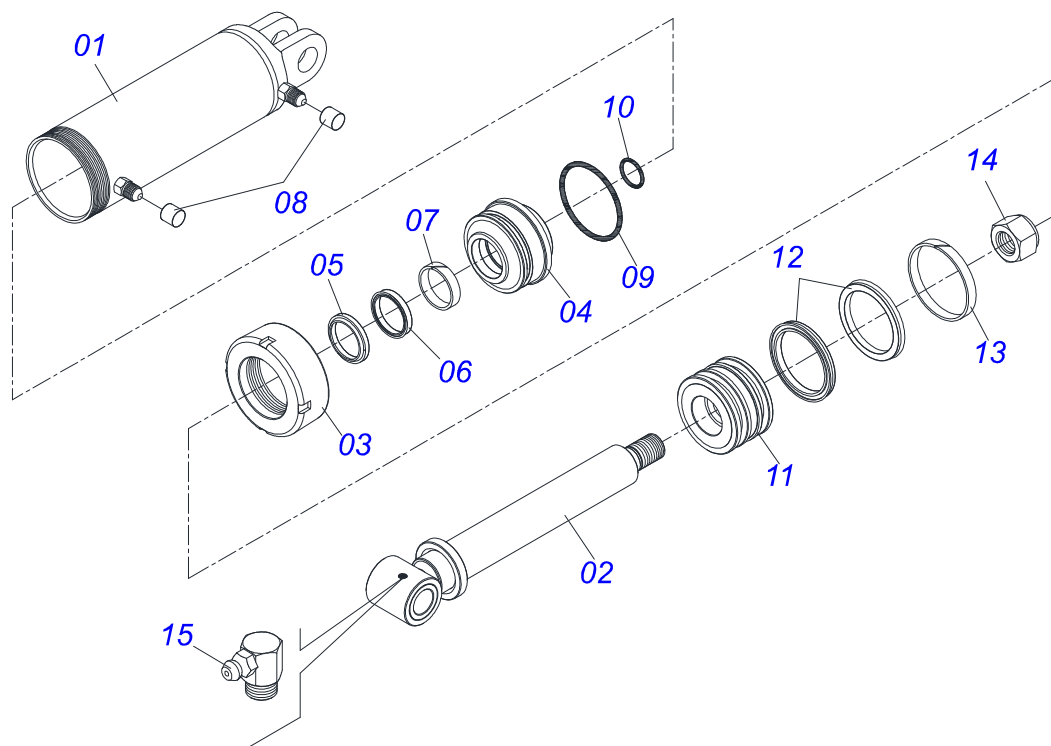


Item	Code	Description	See page	QT
01	0511064052	4" X 12.1" CYLINDER CASE		01
02	0511064053	SLEEVE 2" X 14" TURNBUCLE		01
03	0502010017	4" HEAD		01
04	0502010778	2" X 4.2" RING SUPPORT		01
05	0503010039	D-2000 SCRAPER RING		01
06	0503010991	1870-2000-375-B GASKET		01
07	0503010952	W2-2250-500 RING		01
08	0503030385	CYLINDER PLUG N-002		01
09	0503010338	2-342 N 3006-9B O'RING		01
10	0503010345	2-218 N 3006-9B O'RING		01
11	0502010992	2.0" X 4.0" PISTON		01
12	0503010043	PACKING 3750-3250		02
13	0503010994	W2-4000-500 PK RING G.E		01
14	0503010817	1.1/4" SELF LOCKING NUT		01
15	0503010003	1845 GREASE FITTING		01

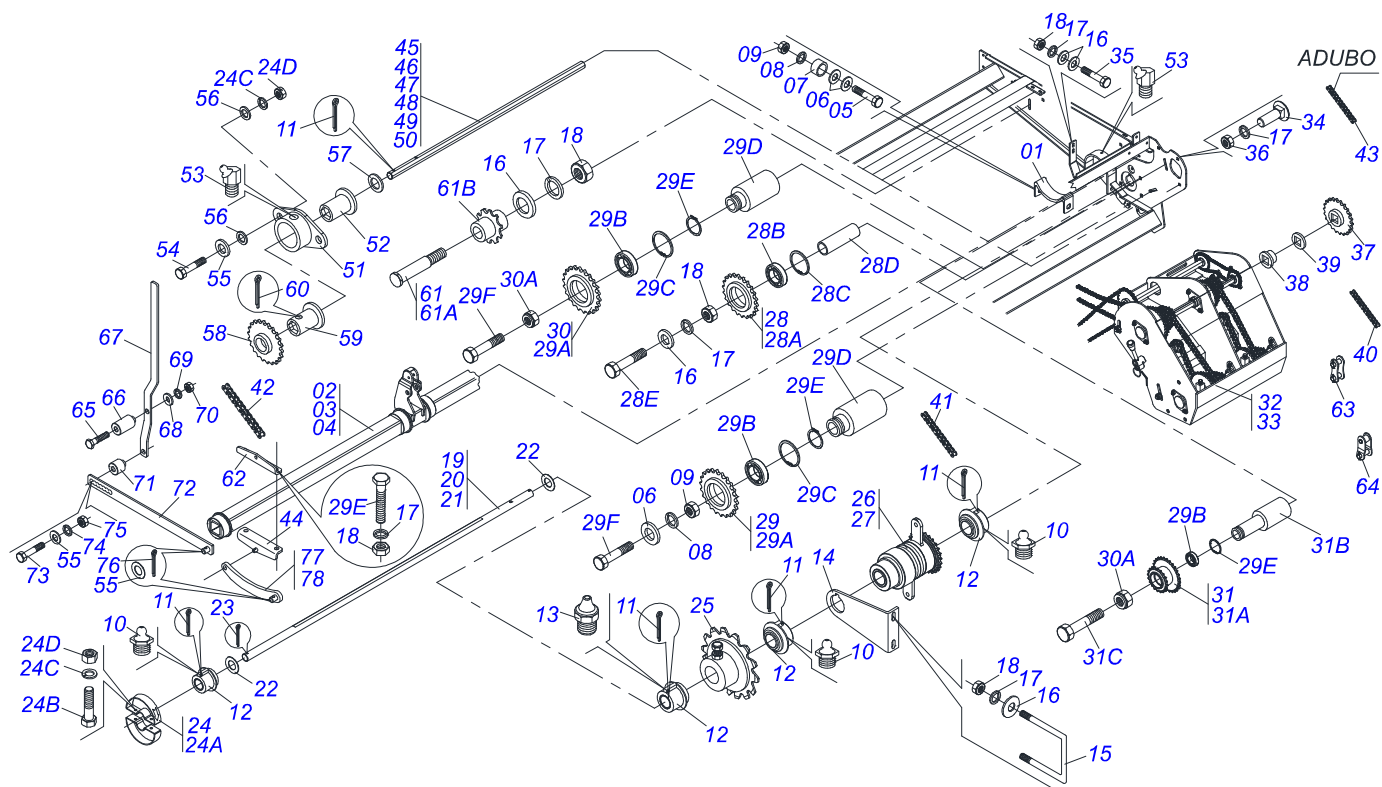

Item	Code	Description	See page	07	09	11
01	0521013199	LOWER BEARING SEMI		04	04	06
02	0511069724	CARRYING-WHEELS PIVOT SHAFT		01	00	00
03	0511069682	CARRYING-WHEELS PIVOT SHAFT		00	01	01
04	0511069717	CARRYING-WHEELS PIVOT SHAFT		00	00	01
05	0503010899	5/8" X 2-1/4" BOLT		08	08	12
06	0501012140	FLAT WASHER		18	18	26
07	0531013922	0.6" X 0.8" X 1" SLEEVE		08	08	12
08	0503011445	SPRING WASHER		10	10	14
09	0503010013	5/8" NUT		10	10	14
10	0503010002	1800 GREASE FITTING		04	06	04
11	0503010257	1/8" X 1" COTTERPIN		06	08	08
12	0501110639	BEARING		02	02	02
13	0503010691	1/4" GREASE FITTING		02	02	02
14	0551019114	MOTOR BEARING AXLE SUPPORT		02	04	04
15	0521014021	1/2" X 4.5" X 5.4" FASTENER		02	04	04
16	0511017302	FLAT WASHER		12	20	20
17	0503010019	1/2" SPRING WASHER		22	26	26
18	0503010060	1/2" NUT		16	22	22
19	0561016882	1535 MOTOR SHAFT		02	00	00
20	0561016881	MOTOR SHAFT		00	02	00
21	0561016876	MOTOR SHAFT		00	00	02
22	0501018466	FLAT WASHER		04	04	04
23	0503010523	1/4" X 2" COTTERPIN		02	02	02
24	0501052560	AXLE MOTOR SLOW-MOVING ASSY		02	02	02
24A	0503031825	AXLE MOTOR SLOW-MOVING		02	02	02
24B	0503010240	5/16" X 3/4" BOLT		02	02	02
24C	0503010179	5/16" ZN SPRING WASHER		10	10	10
24D	0503010337	5/16" NUT		10	10	10
25	0511051434	TRANSMISSION DRIVING ASSY		02	04	04
26	0511047069	SIDE TRANSMISSION DRIVING		01	01	01
27	0511047070	LH SIDE TRANSMISSION DRIVING		01	01	01


Item	Code	Description	See page	07	09	11
28	0501058235	STRETCHER CURRENT TOP SEED 17Z		02	02	02
28A	0502012367	17Z X P 1/2" GEAR INTERM		02	02	02
28B	0503012882	BEARING		02	02	02
28C	0503011945	503050 CLAMPING RING (FOR AXLE)		02	02	02
28D	0551019173	CHAIN SLEEVE TENSIONER		02	02	02
28E	0503011411	1/2" X 5-1/2" BOLT		06	06	06
29	0501058234	LOWER CHAIN TENSIONER		02	02	02
29A	0511062169	21Z P 1/2" GEAR		04	04	04
29B	0503011410	ROLLER BEARING		06	06	06
29C	0503011105	SEAL RING		04	04	04
29D	0551019171	CHAIN TIGHTENER AXLE		04	04	04
29E	0503010406	501025 CLAMPING RING (FOR AXLE)		06	06	06
29F	0501010163	5/8" X 4-1/2" BOLT		04	04	04
30	0501058236	BEARING WITH 21Z GEAR		02	02	02
30A	0503012412	5/8 UNC SELF LOCKING NUT		04	04	04
31	0501058237	16Z GEAR BEARING		02	02	02
31A	0511069680	20Z X 28Z DOBLE GEAR		02	02	02
31B	0551019174	DOBLE GEAR AXLE		02	02	02
31C	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02	02	02
32	0511047058	RIGHT GEAR BOX ASSY		01	01	01
33	0511047059	LH GEAR BOX ASSY		01	01	01
34	0501010243	1/2" X 1-1/2" BOLT		06	06	06
35	0503010920	1/2" X 1.1/2" BOLT		04	04	04
36	0503010020	1/2"NUT		06	06	06
37	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		02	02	02
38	0503030303	SUPPORT WASHER		04	04	04
39	0501010637	FLAT WASHER		08	08	08
40	0503012522	40-1 CHAIN X 85 LINK + MENDING		02	02	02
41	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02	02	02
42	0503012718	40-1 CHAIN X 111 LINK + MENDING		02	02	02
43	0503016111	40-1 CHAIN X 109 LINK + MENDING		02	02	02
44	0511069679	RH UPPER LEVER		02	02	02
45	0521013432	5/8" X 59" AXLE HEX		01	00	00
46	0521013428	HEX AXLE		01	00	00
47	0521013433	5/8" X 75" AXLE HEX		00	01	00
48	0521013429	AXLE HEX 5/8 X 2180		00	01	00
49	0521013434	HEX AXLE 5/8 X 2300		00	00	01
50	0521013430	HEX AXLE 5/8 X 2580		00	00	01
51	0501110037	AGRICULTURAL BEARING HEX SHAFT 5/8"		02	02	02
52	0502040723	5/8 HEX AXLE BEARING SLEEVE 5/8		02	02	03
53	0503010003	1845 GREASE FITTING		06	06	06
54	0503010365	NUT		04	04	04
55	0501010984	FLAT WASHER		14	14	14
56	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08	08	08
57	0511017305	FLAT WASHER		04	04	04
58	0511065562	20Z GEAR		02	02	02
59	0502011299	BUSHING GEAR		02	02	02
60	0503010010	1/4" X 2.1/2" COTTERPIN		02	02	02
61	0501055112	MICRO GRANULATED CHAIN TENSIONER		02	02	02
61A	0531019479	AXLE CHAIN GEAR		02	02	02
61B	0503031805	11Z 1/2" GEAR		02	02	02
62	0551019159	LEVER FIXER BODY		02	02	02
63	0503011751	REDUCTION		06	06	06
64	0503011750	AMENDMENT WITH LOCK		06	06	06
65	0503010547	1/2" X 4" BOLT		02	02	02
66	0551019168	SLEEVE		02	02	02
67	0551019160	LEVER		02	02	02
68	0511017302	FLAT WASHER		02	02	02
69	0503010019	1/2" SPRING WASHER		02	02	02

Item	Code	Description	See page	07	09	11
70	0503010060	1/2" NUT		02	02	02
71	0551019167	SLEEVE UNION		02	02	02
72	0511069676	INNER LEVER		02	02	02
73	0503011268	3/8" X 2-1/2" BOLT		02	02	02
74	0503010025	3/8" SPRING WASHER		02	02	02
75	0503010026	3/8" NUT		02	02	02
76	0503010140	1/8" X 3/4" COTTERPIN		06	06	06
77	0511069677	RH LOWER LEVER		01	01	01
78	0511069678	LH LOWER LEVER		01	01	01

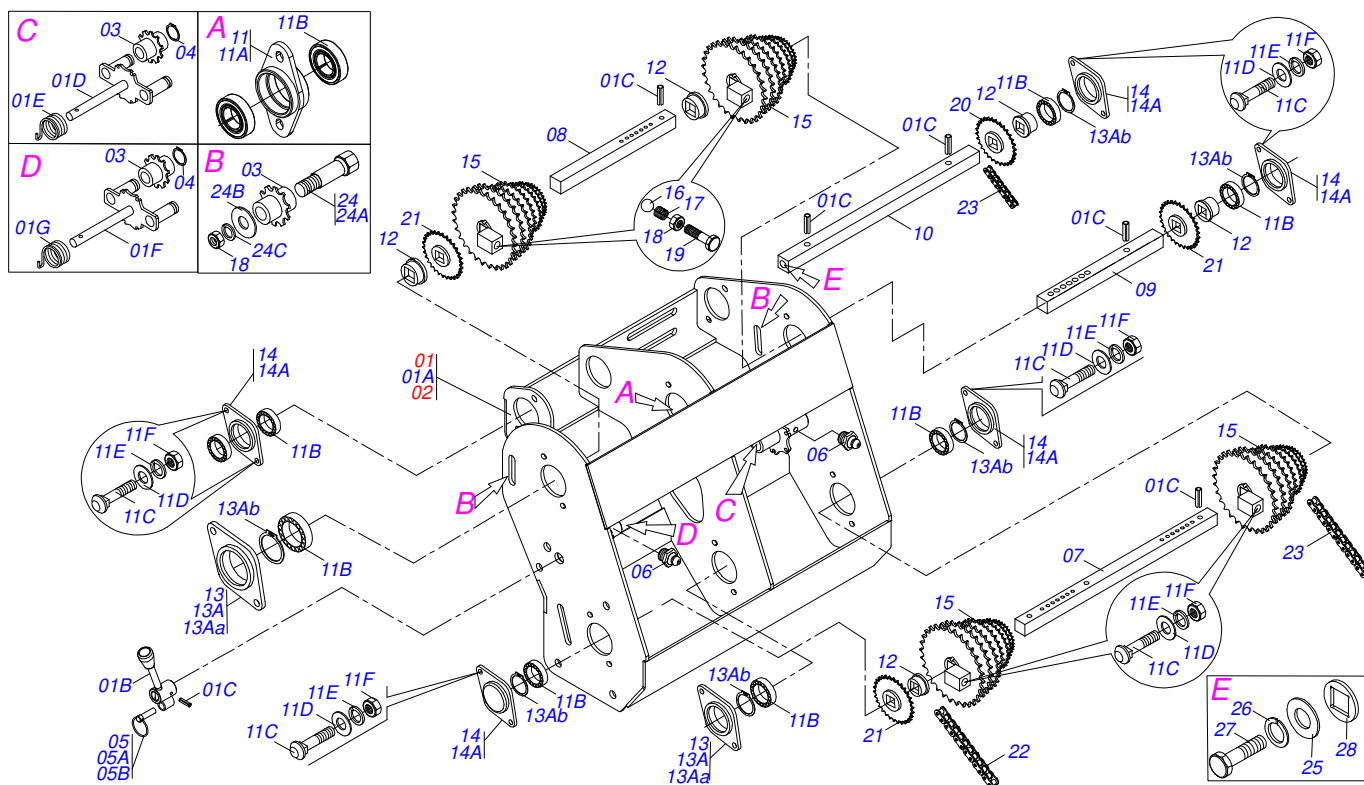


Item	Code	Description	See page	DIR ESQ
00	0511047058	RIGHT GEAR BOX ASSY	01	00
00A	0511047059	LH GEAR BOX ASSY	00	01
01	0501058212	SEMI MOUNTED RIGHT CHANGE	01	00
01A	0511069565	LEFT GEAR BOX	01	00
01B	0502011758	REAR TENSIONER LEVER	02	02
01C	0503010292	0.2" X 1.6" SPRING PIN	07	07
01D	0511061794	CHAIN TENSIONER	01	01
01E	0503031367	SPRING	01	01
01F	0511061795	CHAIN TENSIONER	01	01
01G	0503031367	SPRING	01	01
02	0501058213	LH GEAR BOX	00	01
03	0503031805	11Z 1/2" GEAR	06	06
04	0503010302	501019 SEAL RING	04	04
05	0501048790	AXLE WITH LINK ASSY	02	02
05A	0521012476	GEAR BOX LEVER AXLE	02	02
05B	0503031369	LINK	02	02
06	0503010002	1800 GREASE FITTING	02	02
07	0551018209	DRIVING AXLE	01	01
08	0521018259	DRIVEN AXLE	01	01
09	0551018210	DRIVEN AXLE	01	01
10	0551018211	INTERM SHAFT	01	01
11	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	01	01
11A	0502011978	HOUSING CENTRAL BEARING	01	01
11B	0503013462	BEARING WITH BALL BEARING	07	07
11C	0503011953	5/16" X 1" BOLT	16	16
11D	0501010694	8.5 X 18 X 1.5 FLAT WASHER	16	16
11E	0503010179	5/16" ZN SPRING WASHER	16	16
11F	0503010337	5/16" NUT	16	16
12	0503030303	SUPPORT WASHER	05	05
13	0501056443	BEARING ASSY GEAR BOX	02	02
13A	0501056444	BEARING WITH BALL BEARING	02	02


Item	Code	Description	See page	DIR ESQ
13Aa	0502011697	BEARING OF THE GEAR BOX		02 02
13Ab	0503011105	SEAL RING		07 07
14	0501056271	BEARING CLOSED		05 05
14A	0502012310	GEAR BOX CLOSE BEARING		05 05
15	0511060396	DRIVE/DRIVEN AXLE CONE		04 04
16	0503012389	1/2 BALL		04 04
17	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04 04
18	0503010060	1/2" NUT		06 06
19	0503010395	1/2" X 1-1/4" BOLT		04 04
20	0511061830	17Z P 0.5" GEAR SQUARE HOL		02 02
21	0511067501	26Z GEAR		01 01
22	0503012204	40-1 CHAIN X 82 LINK + RED		02 02
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01 01
24	0501054655	CHAIN TENSIONER ASSY		02 02
24A	0531019479	AXLE CHAIN GEAR		02 02
24B	0511017302	FLAT WASHER		02 02
24C	0503010019	1/2" SPRING WASHER		02 02
25	0501010984	FLAT WASHER		01 01
26	0503010025	3/8" SPRING WASHER		01 01
27	0503010256	3/8" X 3/4" BOLT		01 01
28	0521018630	1.4" X SQUARE 0.8" WASHER		01 01

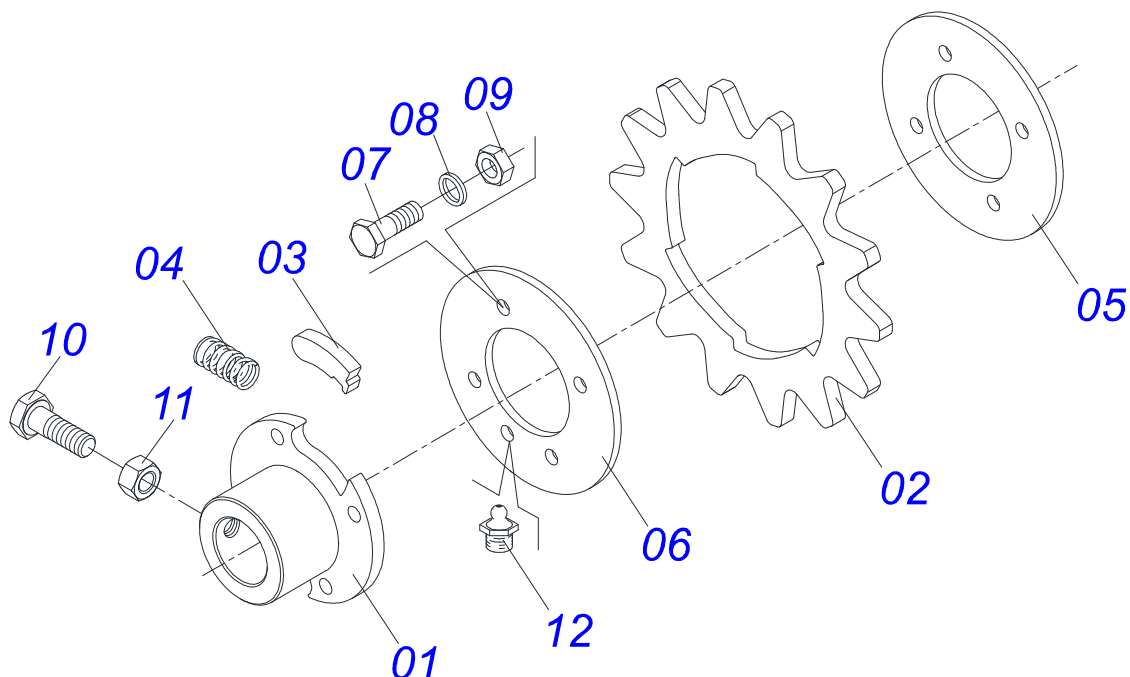

Item	Code	Description	See page	QT
01	0511069659	RATCHET BODY		01
02	0551019044	14Z RATCHET GEAR		01
03	0551019100	LOCK RATCHET		02
04	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
05	0551019098	RATCHET SIDE SUPPORT		01
06	0551019099	RATCHET SIDE SUPPORT		01
07	0503010365	NUT		04
08	0503010179	5/16" ZN SPRING WASHER		04
09	0503010337	5/16" NUT		04
10	0503010920	1/2" X 1.1/2" BOLT		01
11	0503010060	1/2" NUT		01
12	0503010002	1800 GREASE FITTING		01

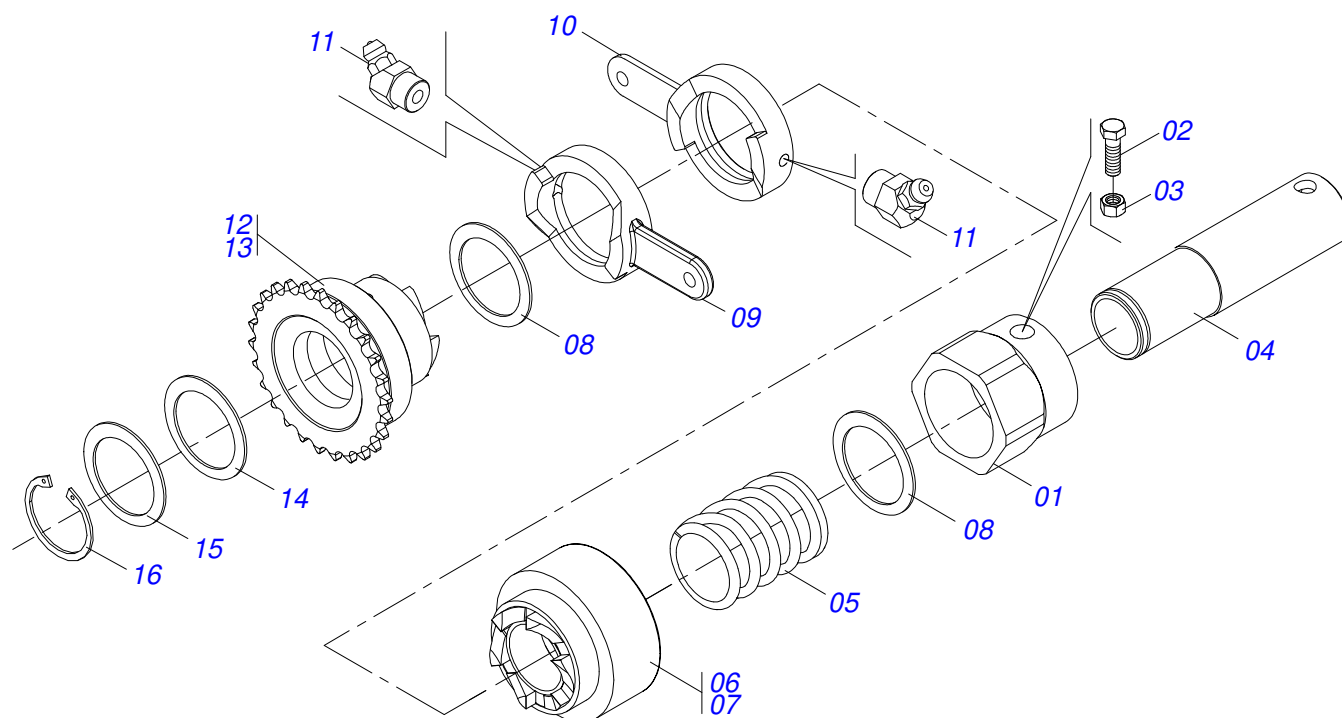


Item	Code	Description	See page	DR	ES
00	0511047069	SIDE TRANSMISSION DRIVING		01	00
00A	0511047070	LH SIDE TRANSMISSION DRIVING		00	01
01	0502011996	SLLEVE FIXER		01	01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01	01
03	0503010060	1/2" NUT		01	01
04	0521017590	GUIDE AXLE		01	01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01	01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01	00
07	0502011995	LH DRIVING AXLE FOLLOWER		00	01
08	0501019734	FLAT WASHER		02	02
09	0502010710	RIGHT CAM, SMALLER		02	00
10	0502010720	RIGHT CAM, SMALLER		00	02
11	0503010003	1845 GREASE FITTING		02	02
12	0502012539	26Z P12,7 GEAR		01	00
13	0502012540	26Z P12,7 GEAR		00	01
14	0501019735	FLAT WASHER		01	01
15	0521017593	FLAT WASHER		01	01
16	0503010542	501045 CLAMPING RING (FOR AXLE)		01	01

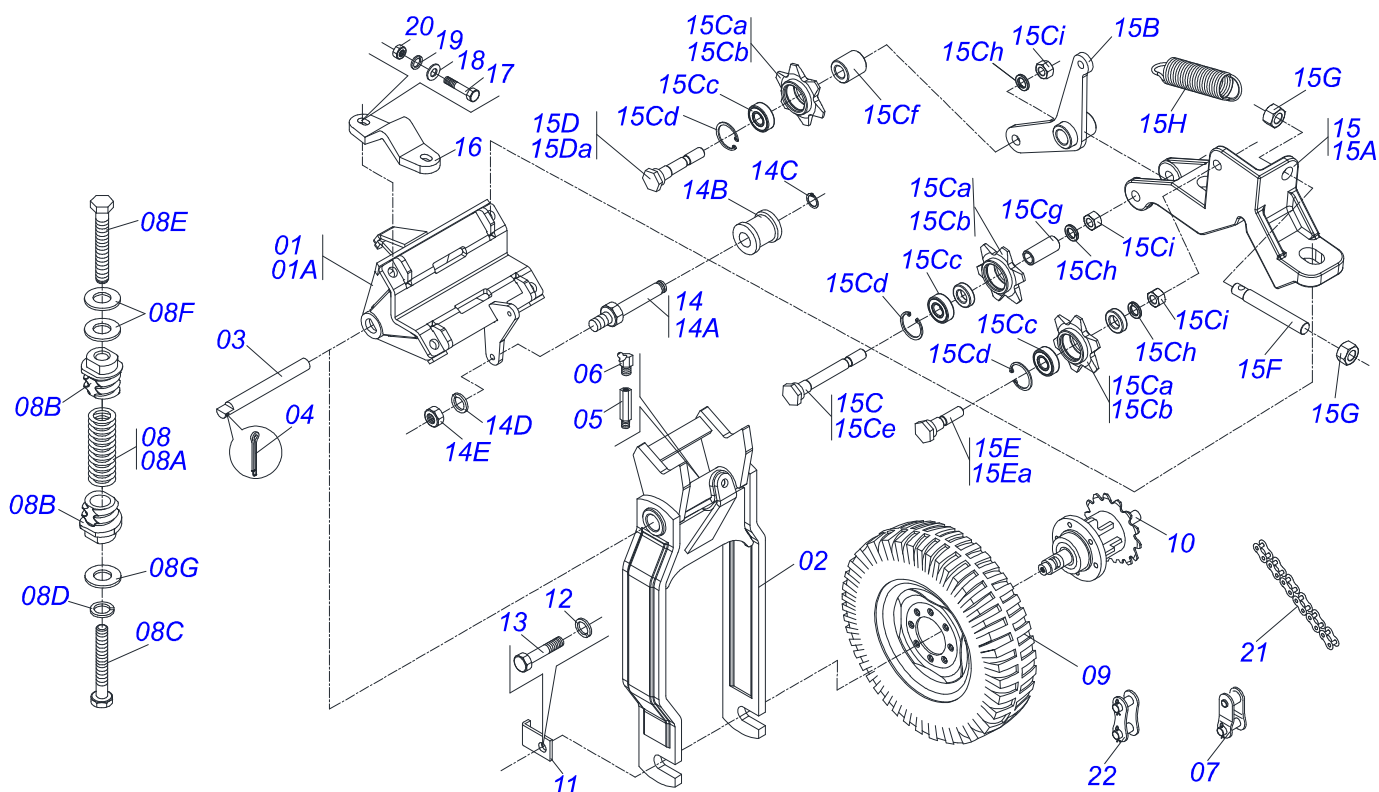


Item	Code	Description	See page	QT
01	0501059908	CARRYING WHEEL SUPPORT	01	
01A	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT	01	
02	0521061565	WHEEL SUPPORT ARM	01	
03	0531016887	CARRYING WHEEL AXLE ARM	01	
04	0503010523	1/4" X 2" COTTERPIN	01	
05	0501019757	EXTENSION GREASE FITTING	01	
06	0503010003	1845 GREASE FITTING	01	
07	0503010951	REDUCTION	04	
08	0511050681	TRACTION SPRING	01	
08A	0503031681	2.1" X 7.78" EXTENSION SPRING	01	
08B	0561016062	SPRING HITCH	02	
08C	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN	01	
08D	0503010027	5/8" SPRING WASHER	01	
08E	0503013030	5/8" X 3.1/4" BOLT	01	
08F	0551017715	FLAT WASHER	02	
08G	0501012140	FLAT WASHER	01	
09	0511052772	650X16 WHEEL AND TIRE ASSY	01	
10	0511052769	WHEEL TRANSMISSION WITHOUT TIRE	01	
11	0521012190	AXLE LOCK	02	
12	0503010027	5/8" SPRING WASHER	02	
13	0503011167	M16 X 2 X 30 BOLT	02	
14	0501058241	TENSIONER CHAIN SUPPORT	01	
14A	0541011713	TENSIONER CHAIN LOWER AXLE	01	
14B	0541016454	PULLEY	01	
14C	0503010302	501019 SEAL RING	01	
14D	0503010019	1/2" SPRING WASHER	01	
14E	0503010060	1/2" NUT	01	
15	0501058240	WHELL FASTENER WITH STRETCHER	01	
15A	0502012416	CARRYING-WHEELS SUPPORT FIXER	01	
15B	0511069417	REAR TENSIONER	01	
15C	0501058243	STRETCHER INTERMEDIATE RODE CURRENT	01	

Item	Code	Description	See page	QT
15Ca	0501058239	CHAIN TENSIONER BEARING		03
15Cb	0502012018	CHAIN TIGHTENER BEARING		03
15Cc	0503012882	BEARING		03
15Cd	0503011945	503050 CLAMPING RING (FOR AXLE)		03
15Ce	0551018245	CHAIN TENSIONER AXLE		01
15Cf	0551018241	SLEEVE 16,30 X 30 X 8		03
15Cg	0551018239	SLEEVE 19 X 13,50 X 45		01
15Ch	0503010019	1/2" SPRING WASHER		03
15Ci	0503010060	1/2" NUT		03
15D	0501058244	STRETCHER FIXED CURRENT		01
15Da	0551018252	CHAIN TIGHTENER AXLE		01
15E	0501058242	MOVIL CHAIN TENSIONER		01
15Ea	0551018244	CHAIN UPPER AXLE		01
15F	0501013491	5/8" TENSIONER SPRING		01
15G	0503010060	1/2" NUT		02
15H	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
16	0502011308	WHELL FASTENER		01
17	0503011118	7/8" X 5-1/2" BOLT		04
18	0501014251	FLAT WASHER		04
19	0503010408	7/8" SPRING WASHER		04
20	0503010417	7/8" NUT		04
21	0503014887	2050 CHAIN X 80 LINK + REDUCTION		01
22	0503010780	N-2050 AMENDMENT		02

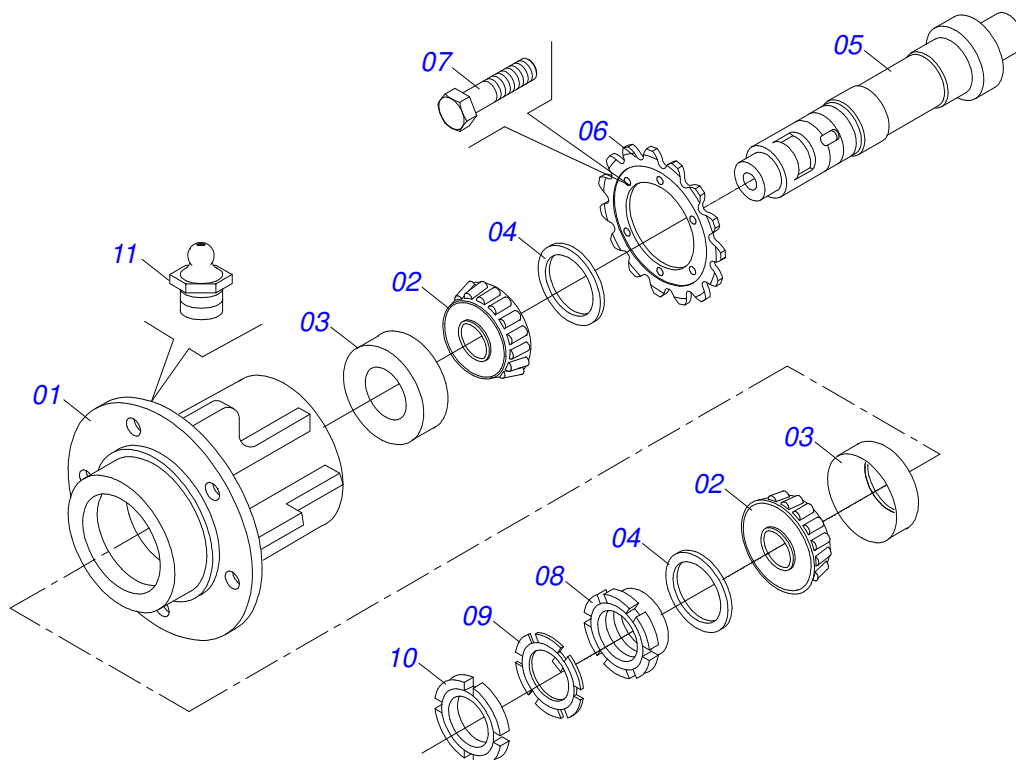


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
02	0503010660	25590 CONE		02
03	0503010637	25523 CAP		02
04	0503010804	00547-B SEAL		02
05	0521012185	TRANSM AXLE CARRYING-WHEEL		01
06	0502011339	15Z GEAR P 1.25"		01
07	0503012550	5/16" X 3/4" BOLT		06
08	0511015949	LOCK NUT		01
09	0503010329	LOCK WASHER		01
10	0503010330	KM 9 LOCKNUT		01
13	0503010002	1800 GREASE FITTING		01

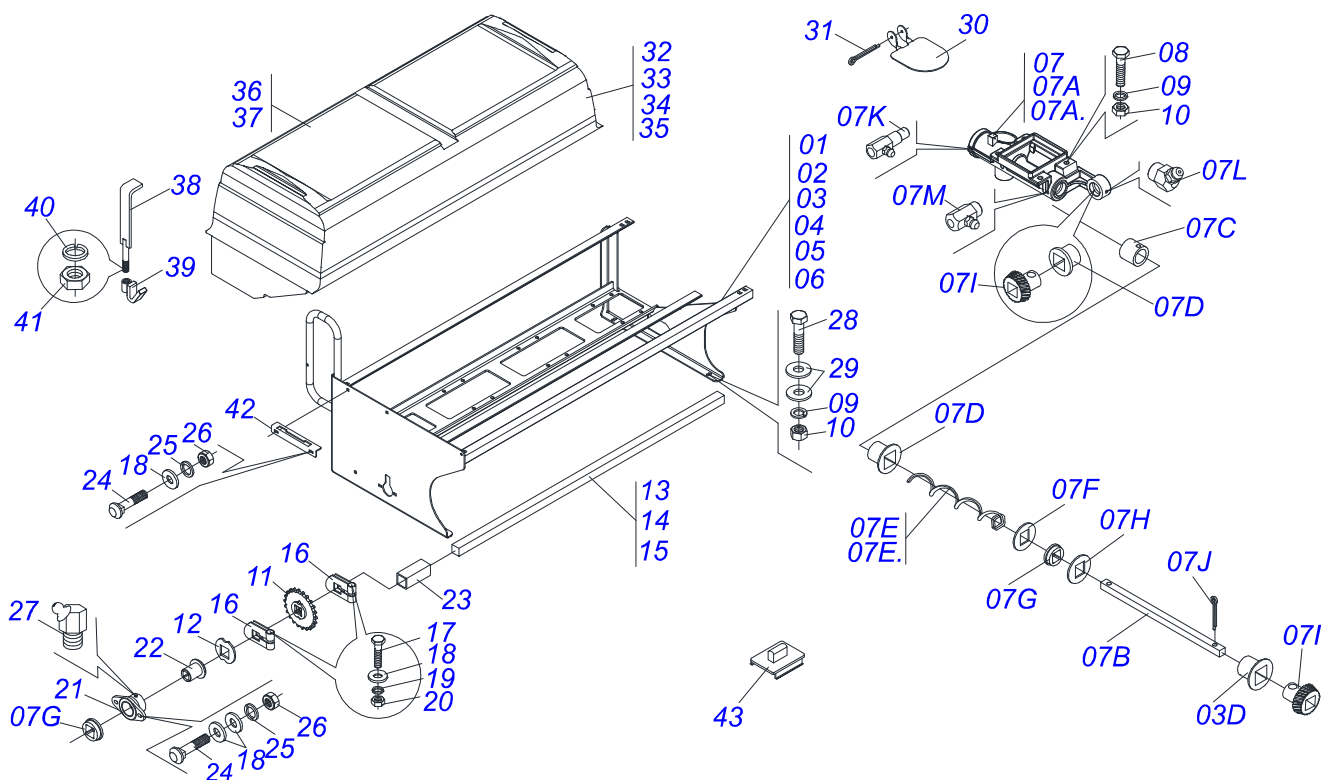


Item	Code	Description	See page	07D	07E	09D	09E	11D	11E
00	0511052419	RH BEAM SUPPORT	01	00	00	00	00	00	00
00A	0511052420	LH BEAM SUPPORT & METERING	00	01	00	00	00	00	00
00B	0511052253	RH BEAM SUPPORT & METERING	00	00	01	00	00	00	00
00C	0511052254	LH BEAM SUPPORT & METERING	00	00	00	01	00	00	00
00D	0501058206	RIGHT SILO SUPPORT WITH DISTRIBUTOR - 11	00	00	00	00	01	00	00
00E	0501058207	LEFT SILO SUPPORT WITH DISTRIBUTOR	00	00	00	00	00	01	00
01	0521063542	FERTILIZER BEAN RIGHT SUPPORT	01	00	00	00	00	00	00
02	0521063543	FERTILIZER BEAN LEFT SUPPORT	00	01	00	00	00	00	00
03	0521063436	FERTILIZER BEAN RIGHT SUPPORT	00	00	01	00	00	00	00
04	0521063437	FERTILIZER BEAN LEFT SUPPORT	00	00	00	01	00	00	00
05	0521066242	FERTILIZER BEAN RIGHT SUPPORT	00	00	00	00	01	00	00
06	0521066241	FERTILIZER BEAN LEFT SUPPORT	00	00	00	00	00	01	00
07	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	02	02	02	03	03	03	03
07A	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET	02	02	03	03	03	03	03
07A.	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	02	02	03	03	03	03	03
07B	0501019851	DISTRIBUTOR FERTILIZER AXLE	04	04	05	05	06	06	06
07C	0521010309	SLEEVE INTER	04	04	04	04	04	04	04
07D	0503030275	AGRICULTURAL BEARING	08	08	10	10	12	12	12
07E	0503031164	RIGHT HELICAL CONDUTOR	02	02	03	03	06	06	06
07E.	0503031164	RIGHT HELICAL CONDUTOR	02	02	02	02	06	06	06
07F	0501010637	FLAT WASHER	04	04	05	05	12	12	12
07G	0503030303	SUPPORT WASHER	05	05	06	06	13	13	13
07H	0501013774	GREASE SEAL	04	04	05	05	12	12	12
07I	0502011412	18Z CONICAL GEAR	08	08	10	10	12	12	12
07J	0503010523	1/4" X 2" COTTERPIN	04	04	05	05	06	06	06
07K	0503011962	GREASE FITTING	04	04	05	05	06	06	06
07L	0503010003	1845 GREASE FITTING	04	04	05	05	06	06	06
07M	0503012826	CREASE FITTING	04	04	05	05	06	06	06
08	0501010942	3/8" X 1-1/4" BOLT	16	16	20	20	24	24	24
09	0503011443	3/8" SPRING WASHER	20	20	24	24	30	30	30
10	0503010026	3/8" NUT	20	20	24	24	28	28	28

Item	Code	Description	See page	07D	07E	09D	09E	11D	11E
11	0511061759	22Z P12,70 FQ 3/4" GEAR		01	01	01	01	01	01
12	0521014167	CONE LOCK		04	04	04	04	04	04
13	0561018362	SQUARE SHAFT		01	01	00	00	00	00
14	0551018213	3/4" X 1830 SQUARE SHAFT		00	00	01	01	00	00
15	0511014265	3/4" X 86" SQUARE SHAFT		00	00	00	00	01	01
16	0521010691	AXLE FASTENER		02	02	02	02	02	02
17	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02	02	02	02	02	02
18	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08	08	08	08	08	08
19	0503011441	SPRING WASHER		02	02	02	02	02	02
20	0503010144	1/4" NUT		02	02	02	02	02	02
21	0501110392	SILO SUPPORT BEARING		01	01	01	01	01	01
22	0521012485	GEAR BOX BEARING AGRICUTURAL		01	01	01	01	01	01
23	0551018055	22,65 X 60 SLEEVE		00	01	00	01	00	01
24	0503011953	5/16" X 1" BOLT		04	04	04	04	04	04
25	0503011444	SPRING WASHER		04	04	04	04	04	04
26	0503010337	5/16" NUT		04	04	04	04	04	04
27	0503010003	1845 GREASE FITTING		01	01	01	01	01	01
28	0503010849	3/8" X 1-1/2" BOLT		04	04	04	04	04	04
29	0501010984	FLAT WASHER		08	08	08	08	08	08
30	0551019117	FERTILIZER DISTRIBUTOR COVER		04	04	05	05	06	06
31	0503010257	1/8" X 1" COTTERPIN		04	04	05	05	06	06
32	0503060636	COVER BOX RIGHT FERTILIZER		01	00	00	00	00	00
33	0503060637	COVER BOX LEFT FERTILIZER		00	00	00	00	00	00
34	0503060640	COVER BOX RIGHT FERTILIZER		00	00	01	00	00	00
35	0503060641	COVER BOX LEFT FERTILIZER		00	00	00	01	00	00
36	0503060642	COVER BOX RIGHT FERTILIZER		00	00	00	00	01	00
37	0503060643	COVER BOX LEFT FERTILIZER		00	00	00	00	00	01
38	0511062099	FERTILIZER BEAM CLAMP		02	02	02	02	02	02
39	0511061886	FERTILIZER BEAM LOCK		02	02	02	02	02	02
40	0503010019	1/2" SPRING WASHER		02	02	02	02	02	02
41	0503010060	1/2" NUT		02	02	02	02	02	02
42	0551019156	GEAR BOX LEVER LOCK		01	01	01	01	01	01
43	0503032624	SILO FERTILIZER GUTTER		04	04	05	05	06	06

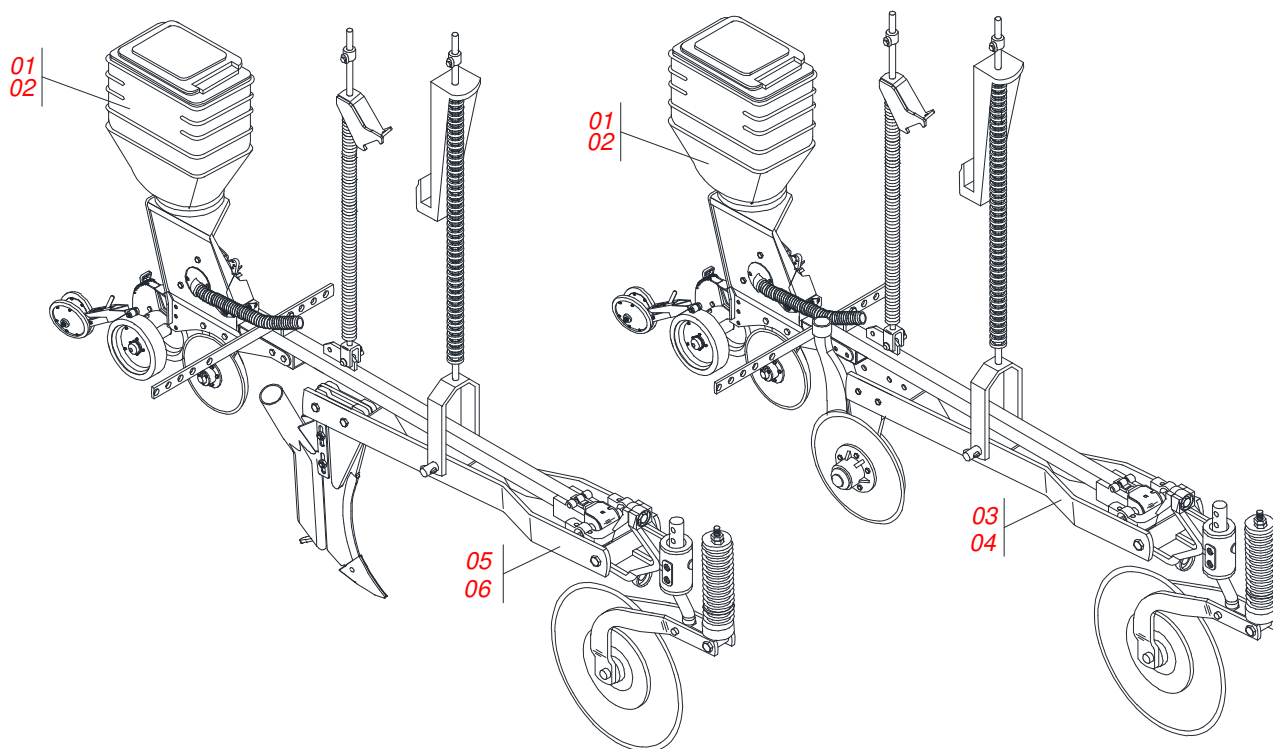

Item	Code	Description	See page	07 09 11
00	0511047230	SHORT FERTILIZER SEED ROW ASSY	04 05 06	
00A	0511047231	LONG FERTILIZER SEED ROW ASSY	03 04 05	
00B	0511047244	SHORT FERTILIZER SEED ROW ASSY	05 05 06	
00C	0511047245	LONG FERTILIZER SEED ROW ASSY	03 04 05	
01	0501058406	RH SHORT SEED ROW	04 05 06	
02	0501058409	LH LONG SEED ROW ASSY	03 04 05	
03	0501058190	LH SHORT FERT. ROW W/DDD ASSY	04 05 06	
04	0501058191	RH LONG FERT. ROW W/DDD ASSY	03 04 05	
05	0511047242	LH SHORT FERT. ROW W/SPINDLE ASSY	04 05 06	
06	0511047243	LH LONG FERT. ROW W/SPINDLE ASSY	03 04 05	

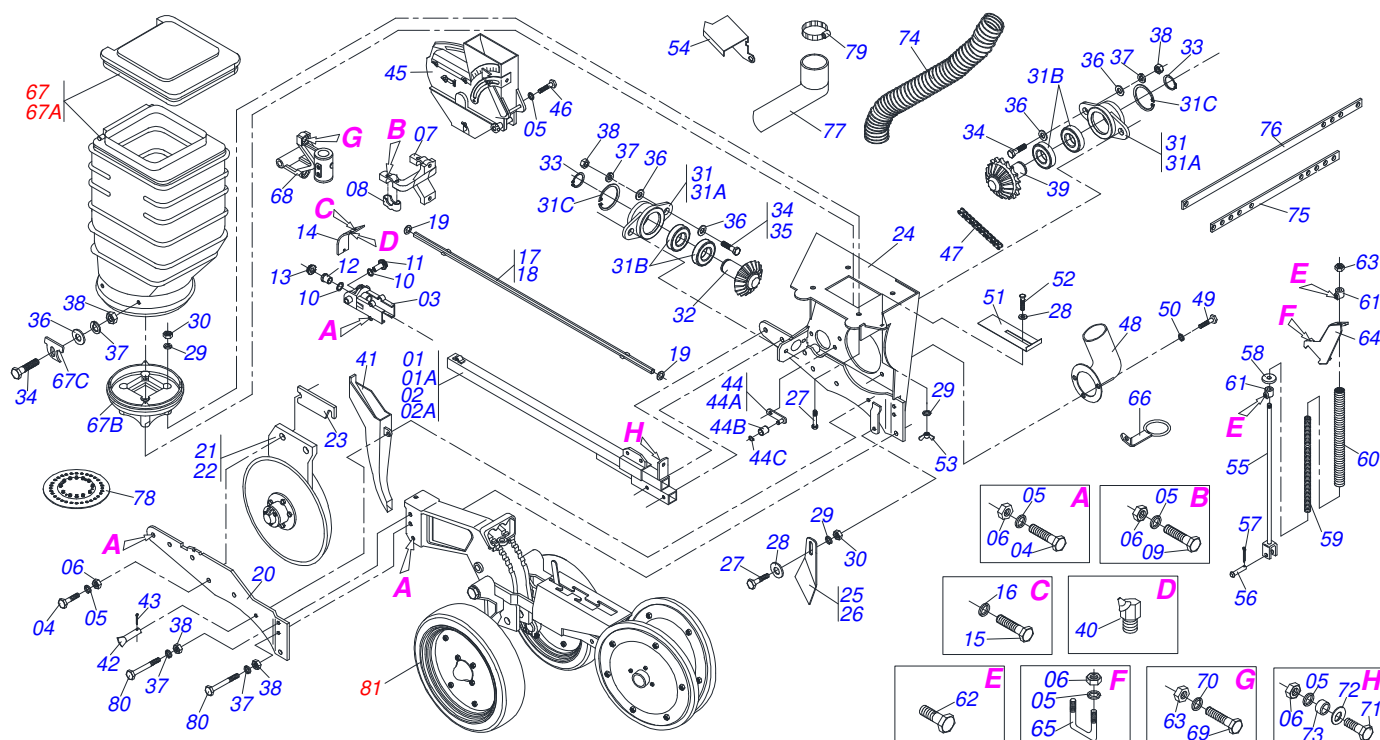

Item	Code	Description	See page	CT LG
00	0501058406	RH SHORT SEED ROW	01	00
00A	0501058409	LH LONG SEED ROW ASSY	00	01
01	0501058408	SHORT SEEP ROW ARM	01	00
01A	0511069641	SHORT SEED ROW ASSY	01	00
02	0501058410	LONG SEED ROW ARM	00	01
02A	0511069642	LONG SEED ROW ASSY	00	01
03	0502011830	ARTICULACCION SUPPORT	01	01
04	0503010752	1/2" X 3.1/2" BOLT	06	06
05	0503010019	1/2" SPRING WASHER	16	16
06	0503010060	1/2" NUT	14	14
07	0502011561	BEARING SEMI	01	01
08	0502010426	UPPER BEARING SEMI	02	02
09	0503010479	1/2" X 3" BOLT	04	04
10	0501013354	FLAT WASHER	02	02
11	0502011400	18Z CONICAL GEAR	01	01
12	0502011296	1/2 HEX AXLE BEARING SLEEVE	01	01
13	0502011505	18Z CONICAL GEAR	01	01
14	0521018079	SEEP ROW DRAWBAR COVER	01	01
15	0503013758	1/4" X 1-1/2" BOLT	02	02
16	0503011441	SPRING WASHER	02	02
17	0521014382	1/2" X 1445 AXLE HEX	01	00
18	0521014383	1/2" X 1645 AXLE HEX	00	01
19	0501013352	FLAT WASHER	02	02
20	0521018289	LEFT SIDE OF THE SEED DISTRIB SUPP	01	01
21	0501052988	RIGHT 15" X 15" DOUBLE DISC	01	00
22	0501052989	LH 15" X 15" DOUBLE DISC	00	01
23	0511018662	SPACING PLATE	04	04
24	0511061876	SEED DISTRIBUTOR SUPPORT	01	01
25	0501017541	RH DOUBLE DISC SCRAPER	01	01
26	0501017542	LH DOUBLE DISC SCRAPER	01	01
27	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	05	05


Item	Code	Description	See page	CT LG
28	0501010984	FLAT WASHER		03 03
29	0503010025	3/8" SPRING WASHER		06 06
30	0503010026	3/8" NUT		05 05
31	0501053297	BEARING WITH DOUBLE BALL BEARING		02 02
31A	0502011971	HOUSING WITH DOUBLE BEARING		02 02
31B	0503011410	ROLLER BEARING		04 04
31C	0503011105	SEAL RING		02 02
32	0511067149	DOUBLE BERING AXLE		01 01
33	0503010406	501025 CLAMPING RING (FOR AXLE)		02 02
34	0503010371	5/16" X 1" BOLT		07 07
35	0503010365	NUT		01 01
36	0501010694	8.5 X 18 X 1.5 FLAT WASHER		12 12
37	0503010179	5/16" ZN SPRING WASHER		08 08
38	0503010337	5/16" NUT		08 08
39	0502012254	18Z CONICAL GEAR HEX 1/2		01 01
40	0503011099	GREASE FITTING		02 02
41	0503030150	BEND SOCKET		01 01
42	0521011744	0.3" X 3.1" COUPLING SHAFT		01 01
43	0503010140	1/8" X 3/4" COTTERPIN		01 01
44	0501054144	SEED DISTRIBUTOR CHAIN TENSIONER		01 01
44A	0511063899	SEED DISTRIBUTOR CHAIN TENSIONER		01 01
44B	0531016202	PULLEY SEED DISTRIB CHAIN TENSIONER		01 01
44C	0503010302	501019 SEAL RING		01 01
45	0501052710	SEED DISTRIBUTOR WITH DISC	18	01 01
46	0503010428	M12 X 1,75 X30 BOLT		03 03
47	0503011371	CHAIN TR-081 X 1.8" LINK + MENDING		01 01
48	0503031650	TUBE COP SUPREMA		01 01
49	0503011378	M6X1X16 C S 8.8 ZN BOLT		03 03
50	0503010143	1/4" SPRING WASHER		03 03
51	0531018349	SEED FLOW SWITCH PNEUMATIC SYSTEM		01 01
52	0501011643	3/8 X 1"BOLT		01 01
53	0503010209	3/8" UNC BUTTERFLY NUT		01 01
54	0521018468	PROTECTION COVER		01 01
55	0511060376	SEEP SPRING GUIDE		01 01
56	0521010542	COUPLING SHAFT		01 01
57	0503010257	1/8" X 1" COTTERPIN		01 01
58	0501013753	FLAT WASHER		01 01
59	0503031339	1" X 19" X 0.1" COMPRESSION SPRING		01 01
60	0503031340	1.7"X 19" X 0.3" COMPRESSION SPRING		01 01
61	0502040534	SPRING GUIDE BUSHING LOCK		(Substituido)02 02
61.	0502012196	SPRING GUIDE BEARING LOCK		(Atual)02 02
62	0503010834	1/2 X 1 BOLT		02 02
63	0503010013	5/8" NUT		03 03
64	0511069658	SPRING ROD SUPPORT		(Substituido)01 01
64.	0502012538	SPRING VARON SUPPORT		(Atual)01 01
65	0521014021	1/2" X 4.5" X 5.4" FASTENER		(Substituido)01 01
65-1	0503011336	1/2" HEX SELF ADJUSTING NUT		(Atual)01 01
66	0511069907	HOSE HOLDER		01 01
67	0501056143	SEED SYSTEM ASSY		01 01
67A	0503031508	COVER GREEN BEAM SEED YELLOW		01 01
67B	0502011760	SEED SILO SUPPORT		01 01
67C	0531010631	SEED BEAM CLAMP		04 04
68	0502011567	FERTILIZER ROW SUPPORT		01 01
69	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		02 02
70	0503012412	5/8 UNC SELF LOCKING NUT		02 02
71	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01 01
72	0511017302	FLAT WASHER		01 01
73	0521010505	13,50 X 19,00 X 21,50 SLEEVE		01 01
74	0541010235	2" X 98" HOSE ASSY		01 01




PST4 SUPREMA
SEED ROW ASSY

Page 16
0909093057

Item	Code	Description	See page	CT	LG
75	0501013714	STABILIZER BAR		00	02
76	0501018652	CORN STABILIZER BAR		00	01
77	0503031050	CURVED CONDUCTOR		01	01
78	0503011369	DISC 3250 MIDDLE CORN		01	01
79	0503010246	CLAMP		01	01
80	0503010848	5/16" X 3.1/2" BOLT		02	02
81	0501058177	DEPTH CONTROL PRESS WHEEL		01	01

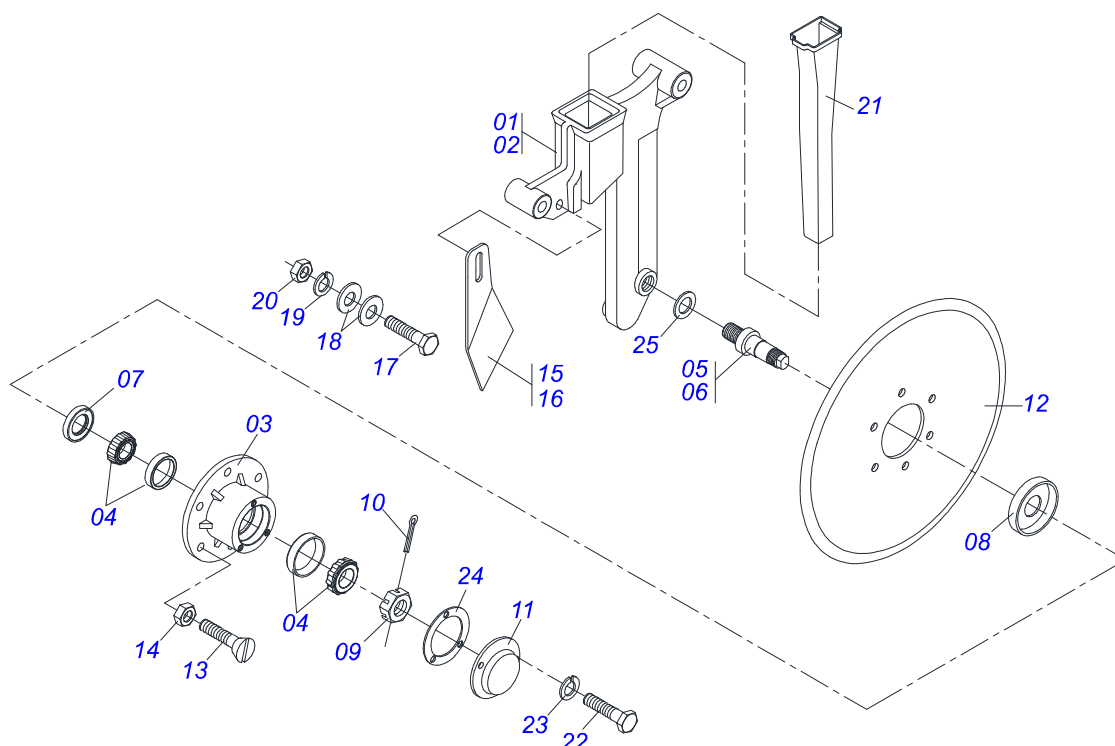


Item	Code	Description	See page	QT
00	0501052978	RIGHT 15" X 15" DOUBLE DISC		01
00.	0501052979	LEFT 15" X 15" DOUBLE DISC		01
01	0502011184	15" X 15" DOUBLE DISC SUPPORT		01
02	0502011183	15"X15" LW SEED UNAL DOUB-DISC SUPP		01
03	0502011930	DOUBLE DISC COULTER BOX		02
04	0503010598	30204 BALL BEARING		04
05	0521019154	RIGHT DOUB DISC HUB		01
06	0521019148	LEFT DOUBLE DISC HUB		01
07	0503011112	SEAL 02376-BRG		02
08	0511011927	DUST CLOAK		02
09	0503030282	3/4" CASTLE NUT		02
10	0503010257	1/8" X 1" COTTERPIN		02
11	0521019178	COVER DEPTH		02
12	0603022042	13" X 0.12" PLAIN COULTER BLADE		02
13	0503010546	5/16" X 7/8" BOLT		12
14	0503010337	5/16" NUT		12
15	0501017541	RH DOUBLE DISC SCRAPER		01
16	0501017542	LH DOUBLE DISC SCRAPER		01
17	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
18	0501010984	FLAT WASHER		02
19	0503010025	3/8" SPRING WASHER		01
20	0503010026	3/8" NUT		01
21	0503030482	SEED SOCKET		01
22	0503013758	1/4" X 1-1/2" BOLT		06
23	0503010143	1/4" SPRING WASHER		06
24	0503030757	2.9" X 2" X 0.02" JOINT		02
25	0511015098	FLAT WASHER		02

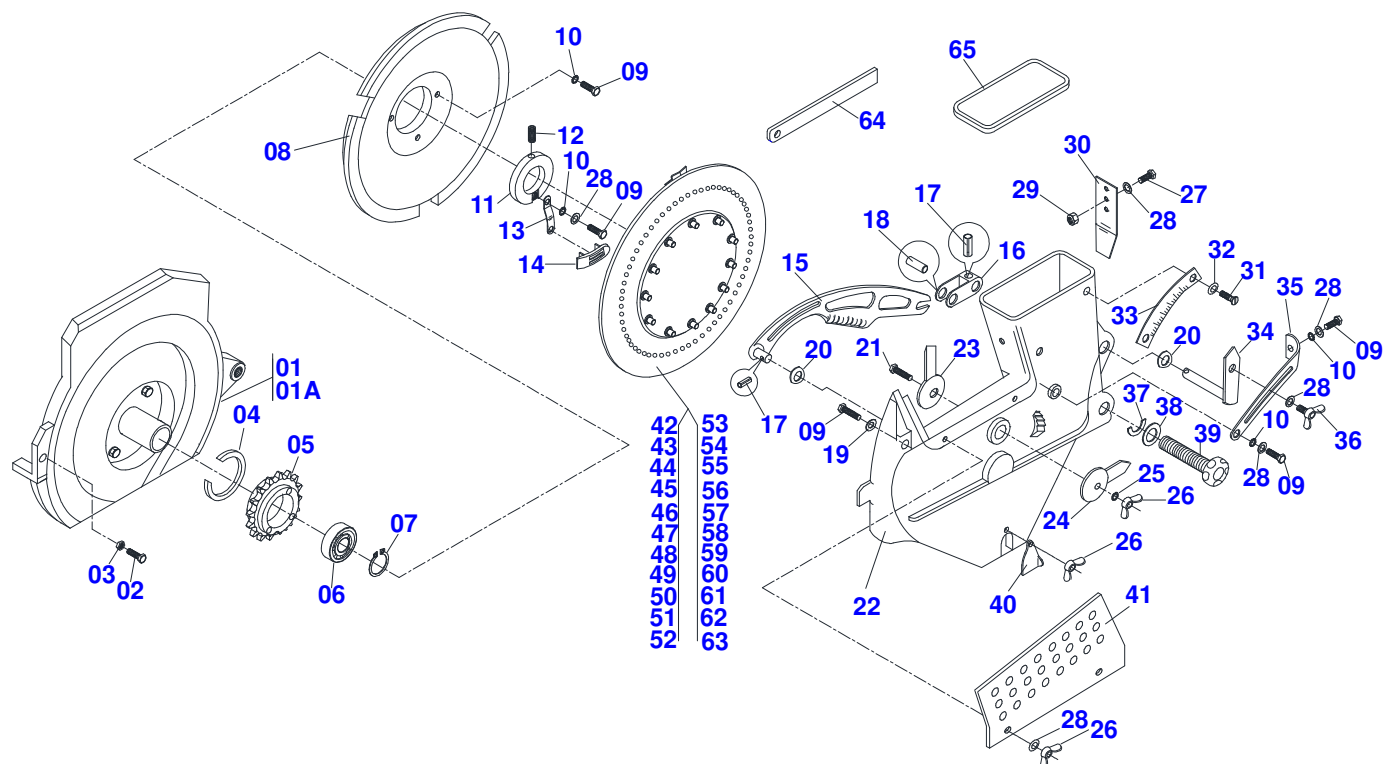


Item	Code	Description	See page	QT
00	0511042211	PNEUMATIC SEED DISTRIBUTOR		01
00.	0501052710	SEED DISTRIBUTOR WITH DISC	18	
01	0501110393	DISTRIBUTOR MINOR SIDE ASSY		01
01A	0502012217	MINOR SIDE		01
02	0503011295	M 8 X 1,25 X 25 BOLT		01
03	0503010427	METRIC M8 X P.0.5" NUT		01
04	0503011770	SEAL # V-75 A		01
05	0501067722	26Z GEAR WITH BUSHING		01
06	0503011771	6008 2RS BALL BEARING		01
07	0503010217	501040 CLAMPING RING (FOR AXLE)		01
08	0502050028	DISC SUPPORT		01
09	0503011378	M6X1X16 C S 8.8 ZN BOLT		06
10	0503010143	1/4" SPRING WASHER		06
11	0511017229	1.6" X 2.5" X 0.7" BUSHING		01
12	0503011769	M8 X 0.5" BOLT		01
13	0501110309	PNEUMATIC SWITCH W/ SUPPORT		01
14	0503031060	PNEUMATIC SWITCH		01
15	0503011817	UPPER SELECTOR		01
16	0502020559	UPPER SELECTOR ACTUATOR		01
17	0503011823	0.1" X 0.6" SPRING PIN		02
18	0531014481	0.2" X 0.6" AXLE		01
19	0503011821	CRINKLE WASHER		01
20	0503011820	CRINKLE WASHER		02
21	0503011813	M6 X 1.2" BOLT		01
22	0502012228	LARGE SIDE		01
23	0501110311	LOWER SELECTOR ASSY		01
24	0511016220	LOWER SELECTOR INDICATOR		01
25	0503011815	TOOTHED WASHER		01
26	0503012445	M6 C/ABA 1.20" BUTTERFLY NUT		04
27	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		01
28	0511017303	FLAT WASHER		04

Item	Code	Description	See page	QT
29	0503011776	M6 SELF ADJUSTINGNUT		01
30	0511017186	SEED LEVEL REGULATOR		01
31	0503011825	M4 X 8" BOLT		02
32	0503011828	FLAT WASHER		02
33	0503031058	UPPER SELECTOR SCALE		01
34	0501067818	SCALE INDICATOR WITH PIN		01
35	0511017219	SCALE INDICATOR GUIDE		01
36	0503011810	M6 X 1" BUTTERFLY BOLT		01
37	0503011827	504.100 CLAMPING RING (FOR HOLE)		01
38	0503011828	FLAT WASHER		01
39	0503011809	M12 KNOB		01
40	0503013020	SEED DRAINER COVER		01
41	0503013179	PNEUMATIC SEED DISTRIBUTOR VISOR		01
42	0503011511	DISC 3245 OF THE SMALL CORN		01
43	0503011512	DISC 3255 LARGE CORN		01
44	0503011454	DISC 6445 LARGE SOYBEAN		01
45	0503011455	DISC 6450 LARGE SOYBEAN		01
46	0503011513	DISC 6430 SMALL SOYBEAN/COTTON		01
47	0503011437	DISC 6420 SORGHUM		01
48	0503011456	DISC 4820 SORGHUM		01
49	0503011391	DISC 3230 SUNFLOWER		01
50	0503011436	DISC 4845 MIDDLE BEAN		01
51	0503011392	DISC 4855 GREAT BEAN		01
52	0503011717	DISC 4835 DELINTED COTTON / BEAN		01
53	0503012574	DISC 6460 PEANUT P18 A 26		01
54	0503011889	DISC 7512 TOMATO		01
55	0503012576	DISC 3660 CORN		01
56	0503012577	DISC 3650 MIDDLE CORN		01
57	0503012578	DISC 3645 CORN		01
58	0503012579	DISC 3630 SUNFLOWER		01
59	0503012580	DISC 8440 MIDDLE SOYBEAN		01
60	0503012581	DISC 8045 LARGE SOYBEAN		01
61	0503012582	DISC 18016 RICE		01
62	0503012860	DISC 3240 POPCORN		01
63	0503012728	DISC WITHOUT HOLE		01
64	0511015627	SEED DISC LEVER		01
65	0503031660	SEED DISTRIBUTOR RUBBER BACKING		01

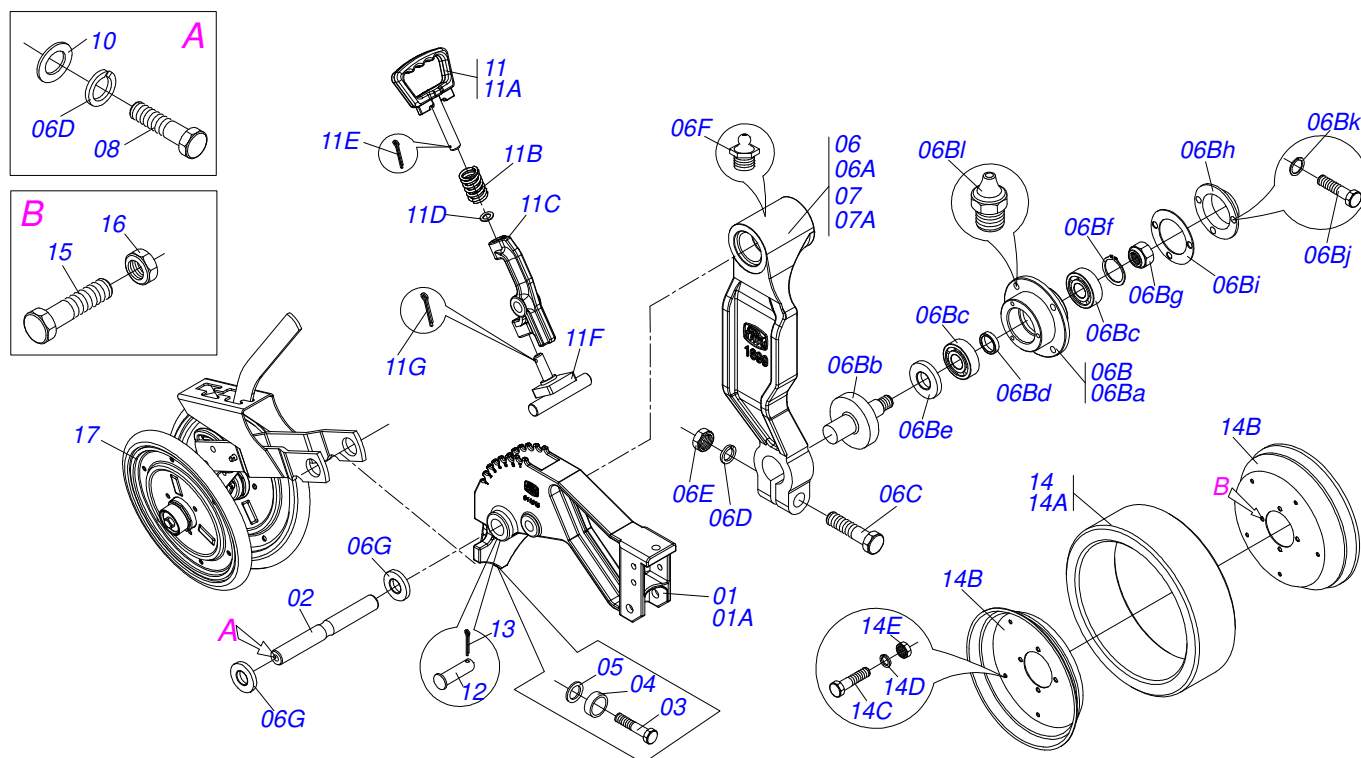


Item	Code	Description	See page	QT
00	0501058177	DEPTH CONTROL PRESS WHEEL	01	
01	0501058176	DEPTH CONTROL PRESS WHEELS	01	
01A	0502012086	DEPTH CONTROL SUPPORT	01	
02	0531010765	DEPTH WHEEL AXLE	01	
03	0503010256	3/8" X 3/4" BOLT	01	
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE	02	
05	0521015818	FLAT WASHER	04	
06	0501058576	RIGHT WHEEL ARM	01	
06A	0502012553	DEPTH WHEEL RIGHT ARM	01	
06B	0501052627	ASSY DEPTH WHEEL BOX	02	
06Ba	0502011907	DEPTH CONTROL WHEEL HUB	02	
06Bb	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK	02	
06Bc	0503010269	6204 BALL BEARING	04	
06Bd	0501013636	SPACING SLEEVE	02	
06Be	0503010689	SEAL 00763-BR	02	
06Bf	0503011105	SEAL RING	02	
06Bg	0503010878	5/8" SELF ALIGNING NUT	02	
06Bh	0521019178	COVER DEPTH	02	
06Bi	0503030757	2.9" X 2" X 0.02" JOINT	02	
06Bj	0503014729	1/4" UNF X 1/2" BOLT	03	
06Bk	0503011441	SPRING WASHER	06	
06Bl	0503010691	1/4" GREASE FITTING	02	
06C	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	01	
06D	0503011440	SPRING WASHER	03	
06E	0503010060	1/2" NUT	01	
06F	0503010002	1800 GREASE FITTING	01	
07	0501058577	RIGHT ARM DEPTH CONTROL WHEEL	01	
07A	0502012552	LH ARM DEPTH CONTROL WHEEL	01	
08	0503010834	1/2 X 1 BOLT	02	
09	0503010019	1/2" SPRING WASHER	02	
10	0511017302	FLAT WASHER	02	

Item	Code	Description	See page	QT
11	0501052297	DEPTH WHEELS REGULATOR ASSY		01
11A	0502011689	1/8" DEPTH CONTROL LEVER		01
11B	0503030975	0.9" X 1.5" X 0.1" SPRING		01
11C	0502011688	SEED SIST CONTROL DEPTH LEVER		01
11D	0511015976	FLAT WASHER		01
11E	0503010257	1/8" X 1" COTTERPIN		01
11F	0511060699	DEPTH WHEEL STOP		01
11G	0503010071	3/16" X 1" COTTERPIN		01
12	0521019093	0.6" X 2.7" PIVOT SHAFT		01
13	0503010778	1/8" X 1.1/2" COTTERPIN		01
14	0501052538	DEPTH BAND WITH ARMS		02
14A	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		02
14B	0521010832	RIM FLANGE		04
14C	0503010298	1/4" X 1/2" BOLT		10
14D	0503010143	1/4" SPRING WASHER		10
14E	0503010144	1/4" NUT		10
15	0503010358	5/16" X 5/8" BOLT		08
16	0503013816	5/16" LOCKNUT		08
17	0909093042	"V" PRESS WHEEL	20	01

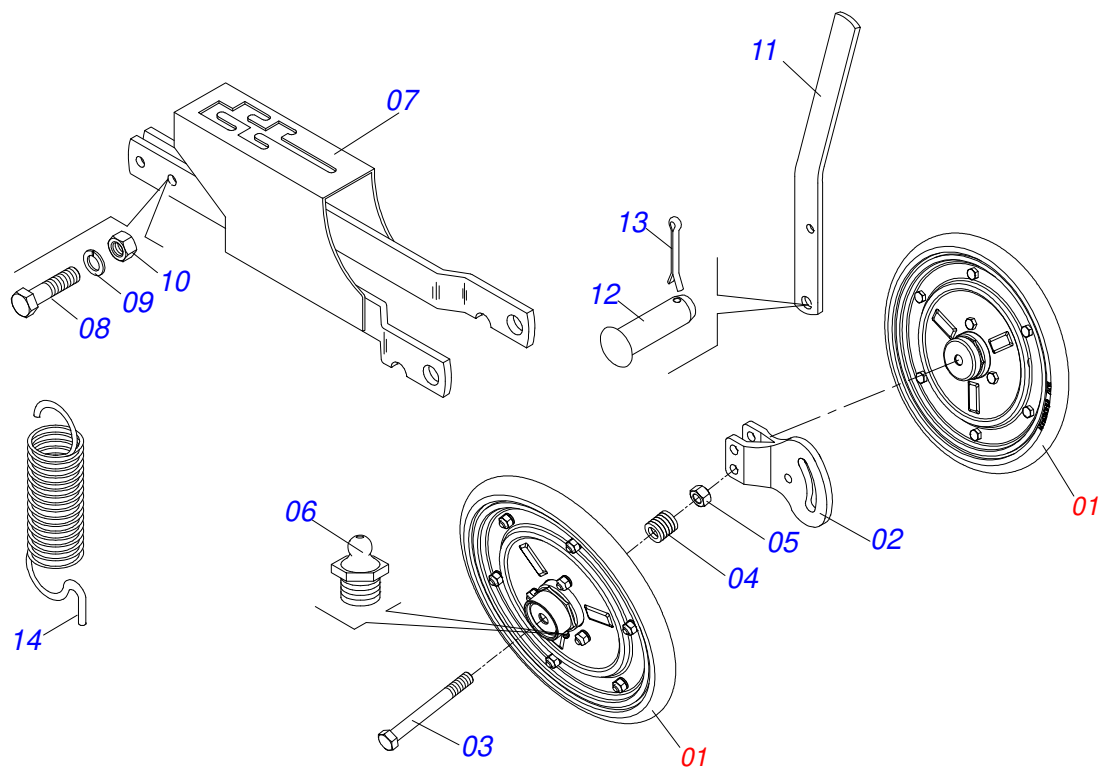


Item	Code	Description	See page
01	0501052908	COMPACTOR WHEEL WITH BEARING	02
02	0502012116	PRESS WHEEL ADJUSTER	01
03	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN	02
04	0521014508	FLAT WASHER	02
05	0503011336	1/2" HEX SELF ADJUSTING NUT	02
06	0503010691	1/4" GREASE FITTING	02
07	0511069633	PRESS WHEELS COMPACTOR	01
08	0503010849	3/8" X 1-1/2" BOLT	02
09	0503011443	3/8" SPRING WASHER	02
10	0503010026	3/8" NUT	02
11	0541016906	PRESS WHEELS REGULATOR BODY	01
12	0521010539	0.3" X 1.2" COUPLING SHAFT	01
13	0503010257	1/8" X 1" COTTERPIN	01
14	0503030805	1.6" X 6" X 0.2" TRACTION SPRING	01

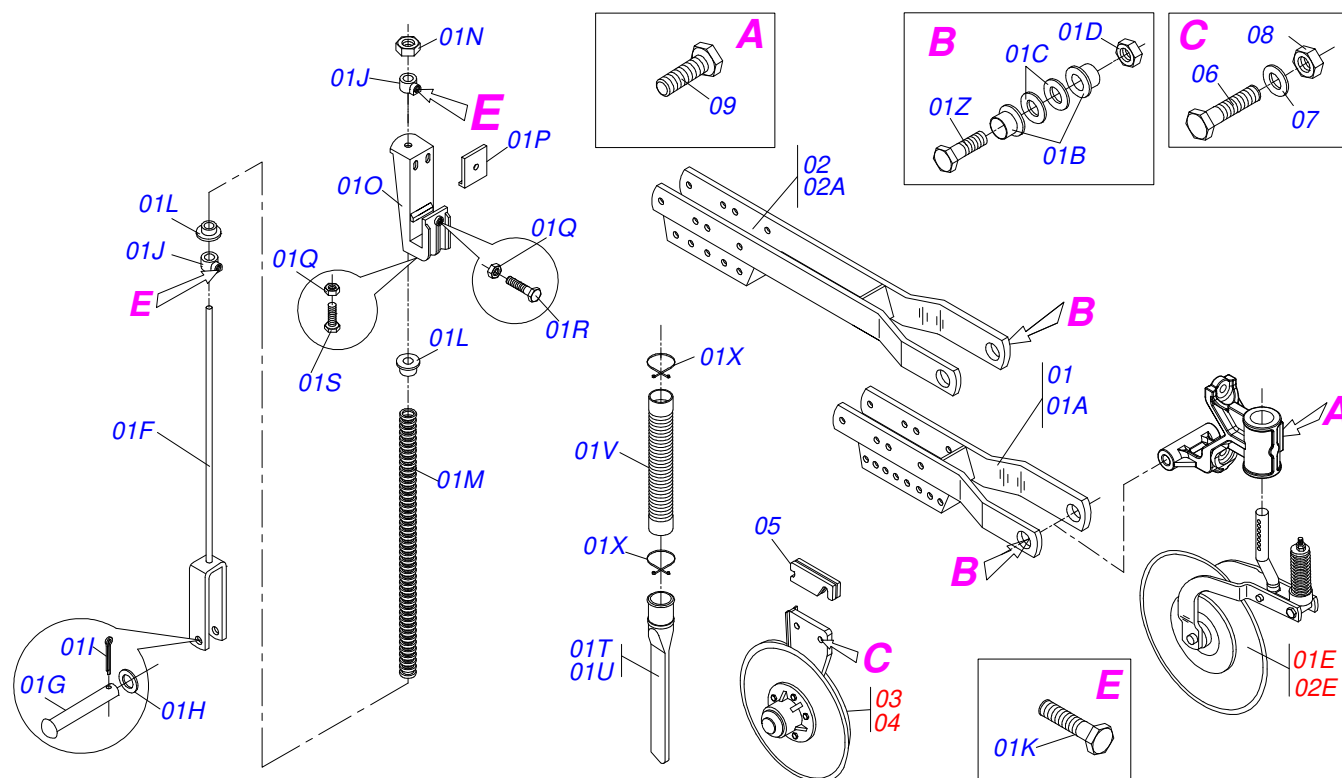


Item	Code	Description	See page	DIR	ESQ
00	0501058191	RH LONG FERT. ROW W/DDD ASSY		01	
00A	0501058190	LH SHORT FERT. ROW W/DDD ASSY		01	
01	0501058185	LH FERTILIZER W/DDD ROW ARM		01	
01A	0521061121	SHORT FERTILIZER ROW ARM		01	01
01B	0521017831	SUPPORT SLEEVE SPACER		02	02
01C	0511017232	FLAT WASHER		02	02
01D	0503011255	3/4" LOCK NUT		01	01
01E	0511044549	18" COULTER BLADE ASSY FOR SHORT ROW		01	01
01F	0511069645	FERTILIZER SPRING ROD		01	01
01G	0561014471	COUPLING SHAFT		01	01
01H	0511017302	FLAT WASHER		01	01
01I	0503010257	1/8" X 1" COTTERPIN		01	01
01J	0502012196	SPRING GUIDE BEARING LOCK		02	02
01K	0501018535	1/2 X 1 BOLT		02	02
01L	0502012184	FERTILIZER SPRING GUIDE		02	02
01M	0503031910	1.7" X 22.8" X 0.3" SPRING		01	01
01N	0503010014	3/4" NUT		01	01
01O	0502012510	SPRING ROD SUPPORT		01	01
01P	0502010891	SPRING CHOCK SUPPORT VARON		01	01
01Q	0503010060	1/2" NUT		02	02
01R	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		01	01
01S	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01	01
01T	0503030391	RIGHT FERTILIZER NOZZLE		01	01
01U	0503030392	LEFT FERTILIZER NOZZLE			
01V	0503031145	2" X 2" X 20" HOSE		01	01
01X	0503031076	2" HOSE CLAMP		02	02
01Z	0501010066	3/4" X 9" BOLT		01	01
02	0501058186	RH FERTILIZER W/DDD LONG ROW ARM		01	
02A	0521061153	LONG FERTILIZER ROW ARM		01	
02E	0511044573	18" COULTER BLADE ASSY FOR LONG ROW		01	
02E.	0511044549	18" COULTER BLADE ASSY FOR SHORT ROW		01	

Item	Code	Description	See page	DIR	ESQ
03	0501052977	DDD LEFT FERTILIZER 15 X 15 ASSY		01	
04	0501052976	15 X 15 RIGHT FERT UNAL DOUB-DISC ASSY		01	
05	0511018662	SPACING PLATE		04	04
06	0503010547	1/2" X 4" BOLT		02	02
07	0503011440	SPRING WASHER		02	02
08	0503010060	1/2" NUT		02	02
09	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02	02

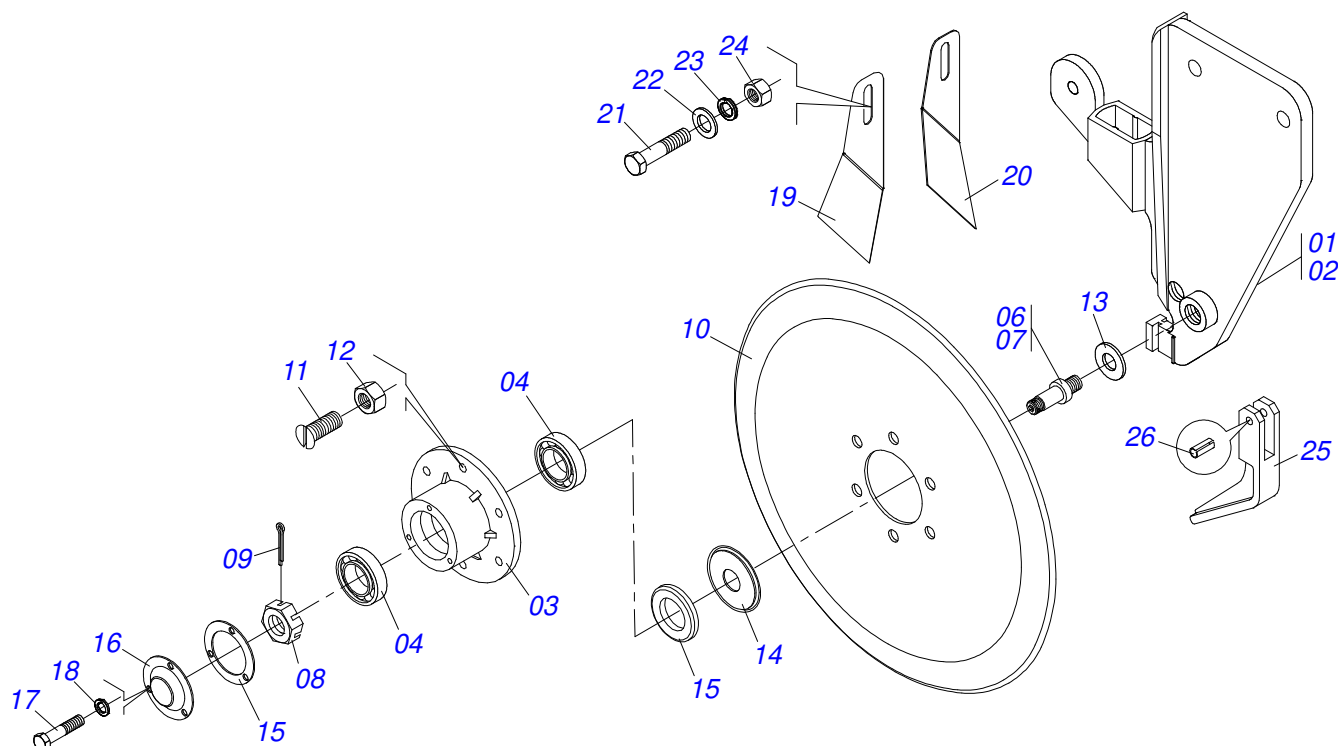


Item	Code	Description	See page	DIR	ESQ
00	0501052976	15 X 15 RIGHT FERT UNAL DOUB-DISC ASSY		01	00
00A	0501052977	DDD LEFT FERTILIZER 15 X 15 ASSY		00	01
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01	00
02	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		00	01
03	0502011930	DOUBLE DISC COULTER BOX		02	02
04	0503010598	30204 BALL BEARING		04	04
05	0503011112	SEAL 02376-BRG		02	02
06	0521019154	RIGHT DOUB DISC HUB		01	01
07	0521019148	LEFT DOUBLE DISC HUB		01	01
08	0503030282	3/4" CASTLE NUT		02	02
09	0503010257	1/8" X 1" COTTERPIN		02	02
10	0603022042	13" X 0.12" PLAIN COULTER BLADE		02	02
11	0503010546	5/16" X 7/8" BOLT		12	12
12	0503010337	5/16" NUT		02	02
13	0511015098	FLAT WASHER		06	06
14	0511011927	DUST CLOAK		02	02
15	0503030757	2.9" X 2" X 0.02" JOINT		02	02
16	0521019178	COVER DEPTH		02	02
17	0503014729	1/4" UNF X 1/2" BOLT		06	06
18	0503011441	SPRING WASHER		06	06
19	0501017541	RH DOUBLE DISC SCRAPER		01	01
20	0501017542	LH DOUBLE DISC SCRAPER		01	01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01	01
22	0501010984	FLAT WASHER		02	02
23	0503011443	3/8" SPRING WASHER		01	01
24	0503010026	3/8" NUT		01	01
25	0502070062	SCRAPER		01	01
26	0503011402	0.2" X 0.8" SPRING PIN		01	01

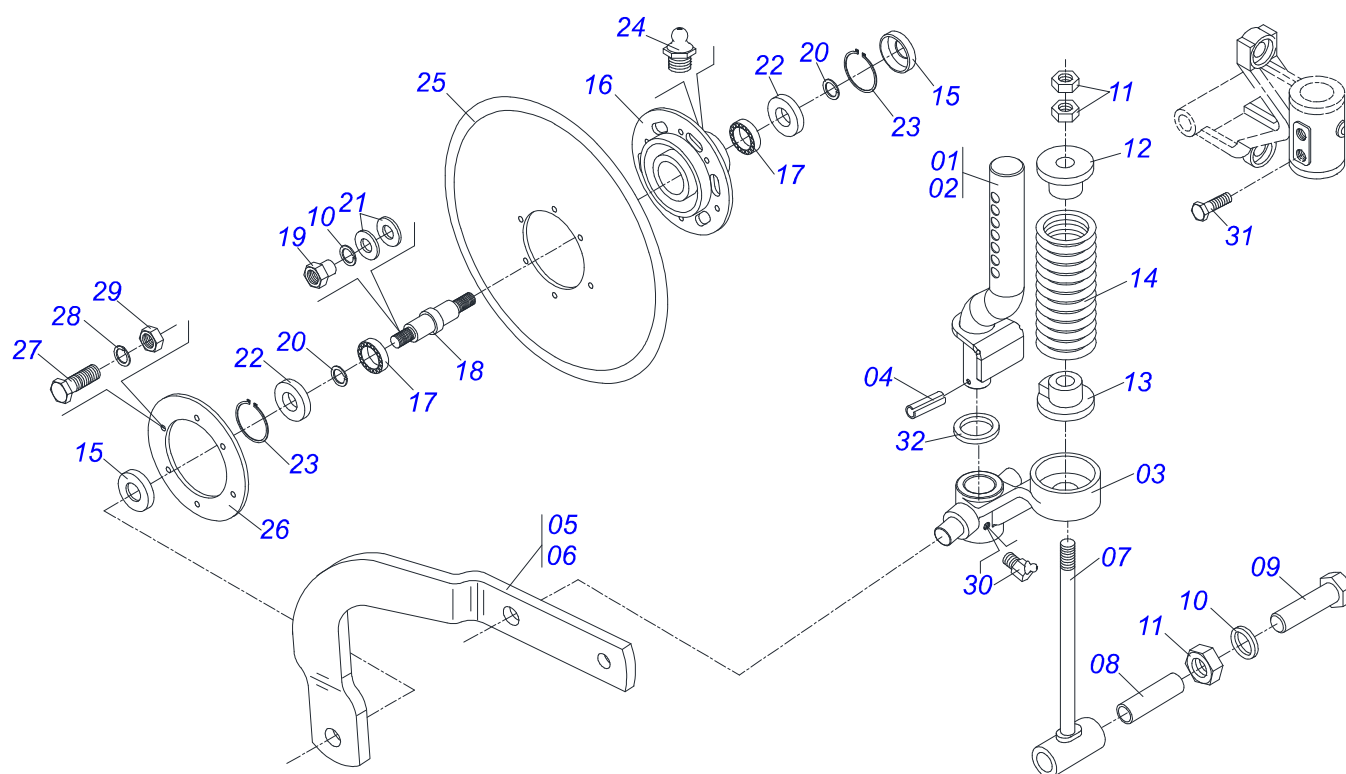


Item	Code	Description	See page	CT LG
00	0511044549	18" COULTER BLADE ASSY FOR SHORT ROW		01 00
00.	0511044573	18" COULTER BLADE ASSY FOR LONG ROW		00 01
01	0511067045	SHORT WHIT BEATER BLADE DISC FIX AXLE		01 00
02	0511067044	LONG WHIT BEATER BLADE DISC FIX AXLE		00 01
03	0502012368	BLADE DISC SUPPORT AXLE		01 01
04	0503010361	SPRING PIN		01 01
05	0521014137	RIGHT ARM OF THE BLADE DISC		01 01
06	0521014138	SUPPORT ARM LEFT BALDE DISC		01 01
07	0501067323	SPRING REGULATOR		01 01
08	0521010452	SLEEVE		01 01
09	0503013185	3/4" X 5-1/2" BOLT		01 01
10	0503011442	3/4" SPRING WASHER		01 01
11	0503010014	3/4" NUT		03 03
12	0502020393	SPRING UPPER SUPPORT		01 01
13	0502020394	SPRING SUPPORT		01 01
14	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01 01
15	0521015376	DUST CLOAK		02 02
16	0502011562	DC PST ACT/ULTR BOX		01 01
17	0503010276	6206 BALL BEARING		02 02
18	0521013610	BLADE DISC HUB AXLE		01 01
19	0521013510	3/4" NUT		02 02
20	0503011438	SPRING WASHER		02 02
21	0511015346	FLAT WASHER		02 02
22	0503012417	SEAL		02 02
23	0503011800	SEAL RING		02 02
24	0503010691	1/4" GREASE FITTING		01 01
25	0603026013	PLAIN COULTER BLADE		01 01
26	0502020641	BLADE DISC FLANGE		01 01
27	0503010371	5/16" X 1" BOLT		06 06
28	0503011444	SPRING WASHER		06 06
29	0503010337	5/16" NUT		06 06

Item	Code	Description	See page	CT LG
30	0503010003	1845 GREASE FITTING		01 01
31	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02 02
32	0541018684	FLAT WASHER		01 01

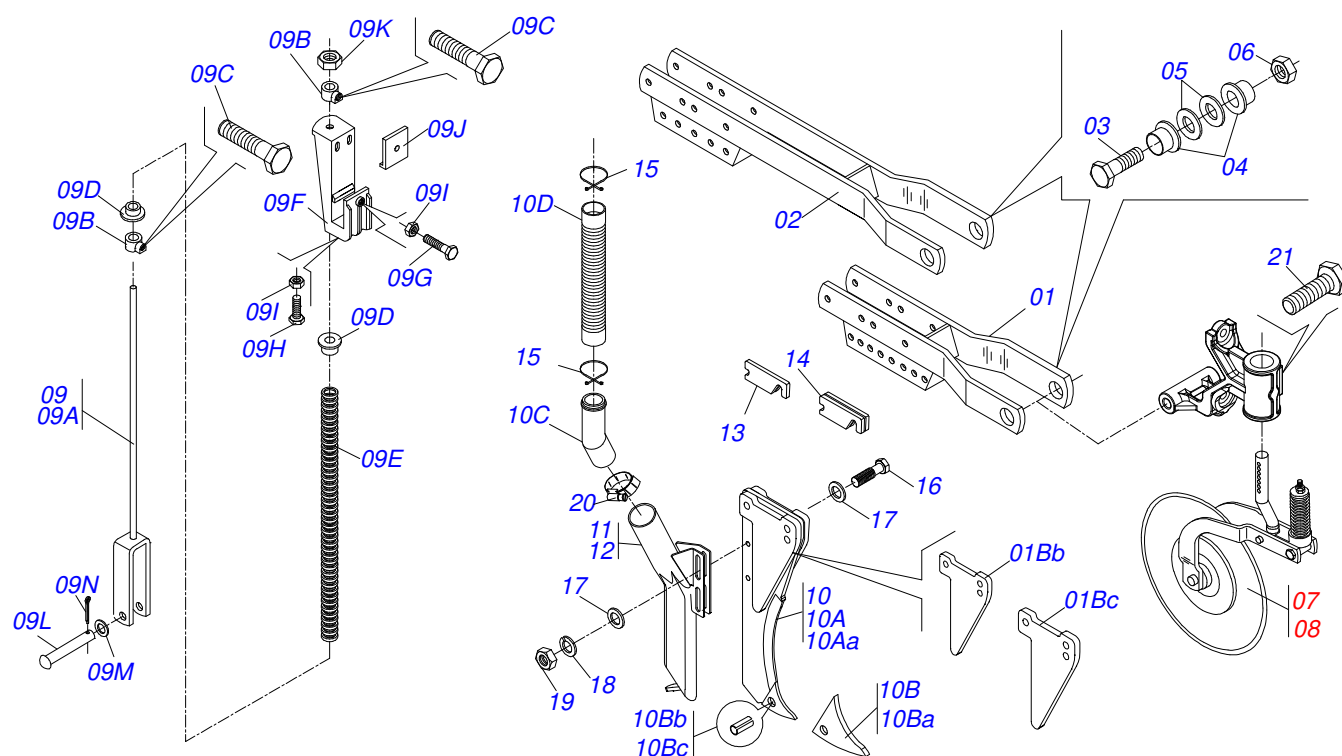


Item	Code	Description	See page	CT	LG
00	0501058271	SHORT FERTILIZER ROW ASSY		01	
00A	0501058272	SHORT FERTILIZER ROW ASSY		01	
01	0521061121	SHORT FERTILIZER ROW ARM		01	
02	0521061153	LONG FERTILIZER ROW ARM		01	
03	0501010066	3/4" X 9" BOLT		01	01
04	0521017831	SUPPORT SLEEVE SPACER		02	
05	0511017232	FLAT WASHER		02	
06	0503011255	3/4" LOCK NUT		01	01
07	0511044549	18" COULTER BLADE ASSY FOR SHORT ROW		01	
08	0511044573	18" COULTER BLADE ASSY FOR LONG ROW		01	
09	0501058423	FERTILIZER ROD SPRING ROW		01	01
09A	0511069645	FERTILIZER SPRING ROD		01	01
09B	0502040534	SPRING GUIDE BUSHING LOCK		02	02
09C	0503010834	1/2 X 1 BOLT		02	02
09D	0502012184	FERTILIZER SPRING GUIDE		02	02
09E	0503031910	1.7" X 22.8" X 0.3" SPRING		01	01
09F	0502012510	SPRING ROD SUPPORT		01	01
09G	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		01	01
09H	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01	01
09I	0503010060	1/2" NUT		02	02
09J	0502010891	SPRING CHOCK SUPPORT VARON		01	01
09K	0503010014	3/4" NUT		01	01
09L	0561014471	COUPLING SHAFT		01	01
09M	0511017302	FLAT WASHER		01	01
09N	0503010257	1/8" X 1" COTTERPIN		01	01
10	0501110231	SCARIFIER HEAD WITH SPIKE 0061		01	01
10A	0511061768	FERTILIZER SCARIFIER SPINDLE		01	01
10Aa	0521013577	TURNBUCLE BODY		01	01
10Ab	0521017616	SMALLER SPACER		01	01
10Ac	0531016252	LARGER SPACER		01	01
10B	0501056132	POINT SUBSOILER		01	01

Item	Code	Description	See page	CT	LG
10Ba	0502070061	POINT SUBSOILER		01	01
10Bb	0503010585	0,24" X 1.18" SPRING PIN		01	01
10Bc	0503011373	0.4" X 1.1" SPRING PIN		01	01
10C	0503031050	CURVED CONDUCTOR		01	01
10D	0503031145	2" X 2" X 20" HOSE		01	01
11	0511061769	RIGHT FERTILIZER CONDUCTOR WITH REGULATOR		01	
12	0511061770	LEFT CONDUCTOR FERTILIZER WITH REGULATOR		01	
13	0511017969	0.1" SPACING PLATE		01	01
14	0511018662	SPACING PLATE		01	01
15	0503031076	2" HOSE CLAMP		01	01
16	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01	01
17	0503010025	3/8" SPRING WASHER		01	01
18	0501010984	FLAT WASHER		01	01
19	0503010026	3/8" NUT		01	01
20	0503010246	CLAMP		01	01
21	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		01	01
22	0501018535	1/2 X 1 BOLT		02	02

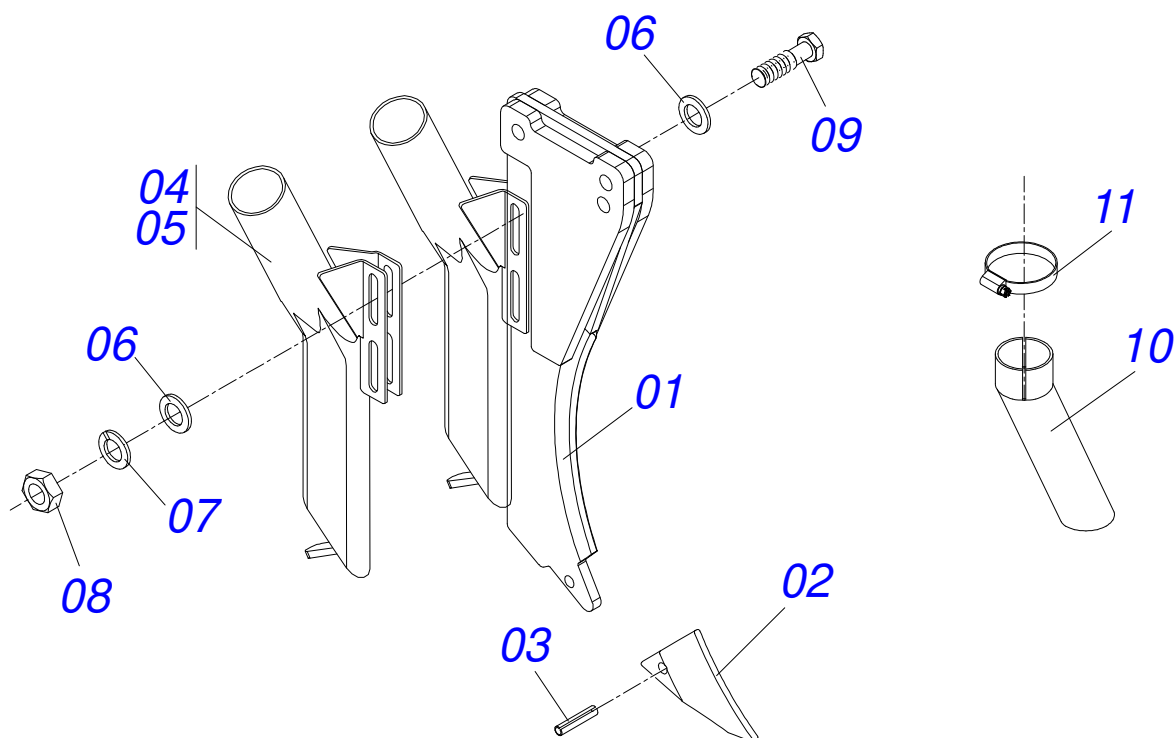


Item	Code	Description	See page	QT
00	0501058442	RH FERTILIZER SCARIFIER SPINDLE		01
00A	0501058443	LH FERTILIZER SCARIFIER SPINDLE		01
01	0501110231	SCARIFIER HEAD WITH SPIKE 0061		01
02	0502070061	POINT SUBSOILER		01
03	0503011373	0.4" X 1.1" SPRING PIN		01
04	0511061769	RIGHT FERTILIZER CONDUCTOR WITH REGULATOR		01
05	0511061770	LEFT CONDUCTOR FERTILIZER WITH REGULATOR		01
06	0501010984	FLAT WASHER		04
07	0503010025	3/8" SPRING WASHER		02
08	0503010026	3/8" NUT		02
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
10	0503031050	CURVED CONDUCTOR		01
11	0503010246	CLAMP		01

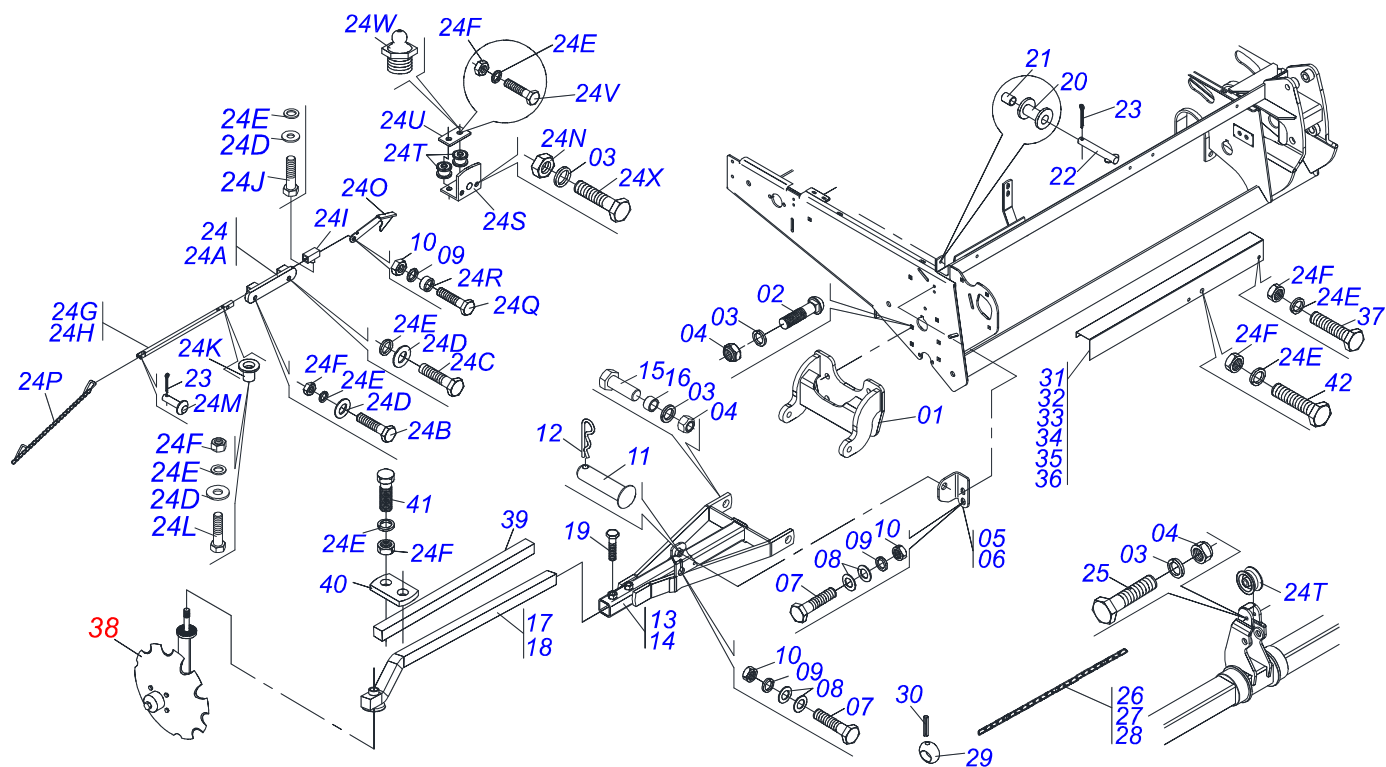


Item	Code	Description	See page	07 09 11
00	0501058164	MECANIC ROW MARK		01 00 00
00A	0501058169	SEMI-ASSEMBLED MECHANICAL MARKER		00 01 00
00B	0501058171	MECANIC ROW MARK		00 00 01
01	0511069621	MECANIC ROW MARK SUPPORT		02 02 02
02	0503012407	5/8" X 1-1/2" BOLT		08 08 08
03	0503010027	5/8" SPRING WASHER		15 15 15
04	0503012412	5/8 UNC SELF LOCKING NUT		13 13 13
05	0551018204	RIGHT ROW MARKER FIXER		01 01 01
06	0551018205	LH ROW MARKER FIXER		01 01 01
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		06 06 06
08	0501010984	FLAT WASHER		12 12 12
09	0503010025	3/8" SPRING WASHER		08 08 08
10	0503010026	3/8" NUT		08 08 08
11	0521010549	COUPLING SHAFT		02 02 02
12	0503030168	HAIR PIN		02 02 02
13	0511060475	ROW MARKER ARM		01 01 01
14	0511060576	LH ROW MARKER ARM		01 01 01
15	0503010769	5/8" X 2-1/4" BOLT		04 04 04
16	0521010479	SLEEVE ARTICULATION		04 04 04
17	0501069643	890 TURNBUCKLE		02 02 02
18	0501066949	1235 TURNBUCKLE		00 00 02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04 04 04
20	0502010421	SIDE PULLEY		02 02 02
21	0521010445	0.53" X 0.75" X 0.45" SLEEVE		02 02 02
22	0521010641	COUPLING SHAFT		02 02 02
23	0503010140	1/8" X 3/4" COTTERPIN		04 04 04
24	0501058197	ROW MARKER PIVOT		01 01 01
24A	0501065640	ROW MARKER ROD GUIDE		02 02 02
24B	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		02 02 02
24C	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02 02 02
24D	0511017302	FLAT WASHER		06 06 06

Item	Code	Description	See page	07 09 11
24E	0503010019	1/2" SPRING WASHER		11 13 21
24F	0503010060	1/2" NUT		10 12 20
24G	0501065644	ROW MARKER ARM/DISARMENT ROD		01 01 01
24H	0501064229	REGULATOR ARM/DISARMENT ROD		01 01 01
24I	0501062547	ROW MARKER BAR REGULATOR		01 01 01
24J	0503010395	1/2" X 1-1/4" BOLT		01 01 01
24K	0521010454	0.83" X 1.25" X 0.79" SLEEVE		01 01 01
24L	0503010734	1/2" X 2-1/2" BOLT		01 01 01
24M	0521010539	0.3" X 1.2" COUPLING SHAFT		02 02 02
24N	0503010013	5/8" NUT		02 02 02
24O	0521062281	ROW MARK ARM LOCK		02 02 02
24P	0503032995	STEEL CABLE		02 02 02
24Q	0501010096	3/8" X 2" BOLT		02 02 02
24R	0531010415	ROW MARKER ARM/DISARM GUIDE SLLEVE		04 04 04
24S	0501065642	ROW MARKER SUPPORT		01 01 01
24T	0502011231	CENTRAL PULLEY		03 03 03
24U	0521010693	PULLEY FIXER PLATE		01 01 01
24V	0511011308	BOLT		02 02 02
24W	0503010691	1/4" GREASE FITTING		02 02 02
24X	0503010232	5/8" X 1.3/4" BOLT		02 02 02
25	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01 01 01
26	0503011126	6,4 X 1000 CHAIN		02 00 00
27	0503011128	6,4 X 1400 CHAIN		00 02 00
28	0503011129	6,4 X 1900 CHAIN		00 00 02
29	0502011291	CHAIN SLEEVE		02 02 02
30	0503010683	0,2" X 1,2" SPRING PIN		02 02 02
31	0551019268	RIGHT COVER PROTECTION		01 00 00
32	0551019269	LEFT COVER PROTECTION		01 00 00
33	0551018206	LEFT COVER ARM/DISARMENT		00 01 00
34	0551018207	LEFT COVER PROTECTION		00 01 00
35	0551019266	RIGHT PROTECTION COVER		00 00 01
36	0551019267	LEFT PROTECTION COVER		00 00 01
37	0503010920	1/2" X 1.1/2" BOLT		04 04 04
38	0501050633	MARKER DISC ASSY LINE	27	02 02 02
39	0521013164	EXTENSOR		00 00 02
40	0501011310	FIXER LOCK		00 00 08
41	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		00 00 08
42	0551018955	1/2" X 1-1/2" BOLT		02 04 04

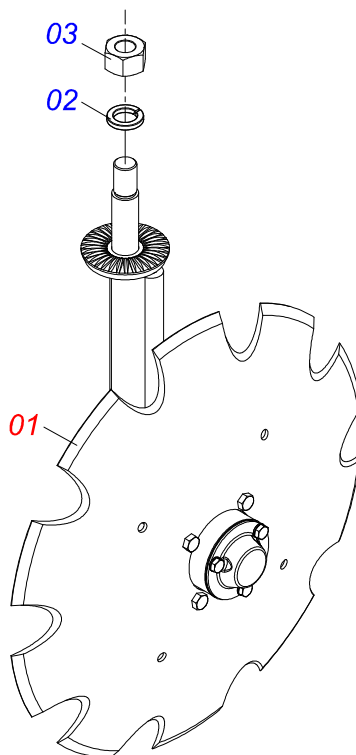


Item	Code	Description	See page	QT
01	0511053904	DISC LINE MARKER		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

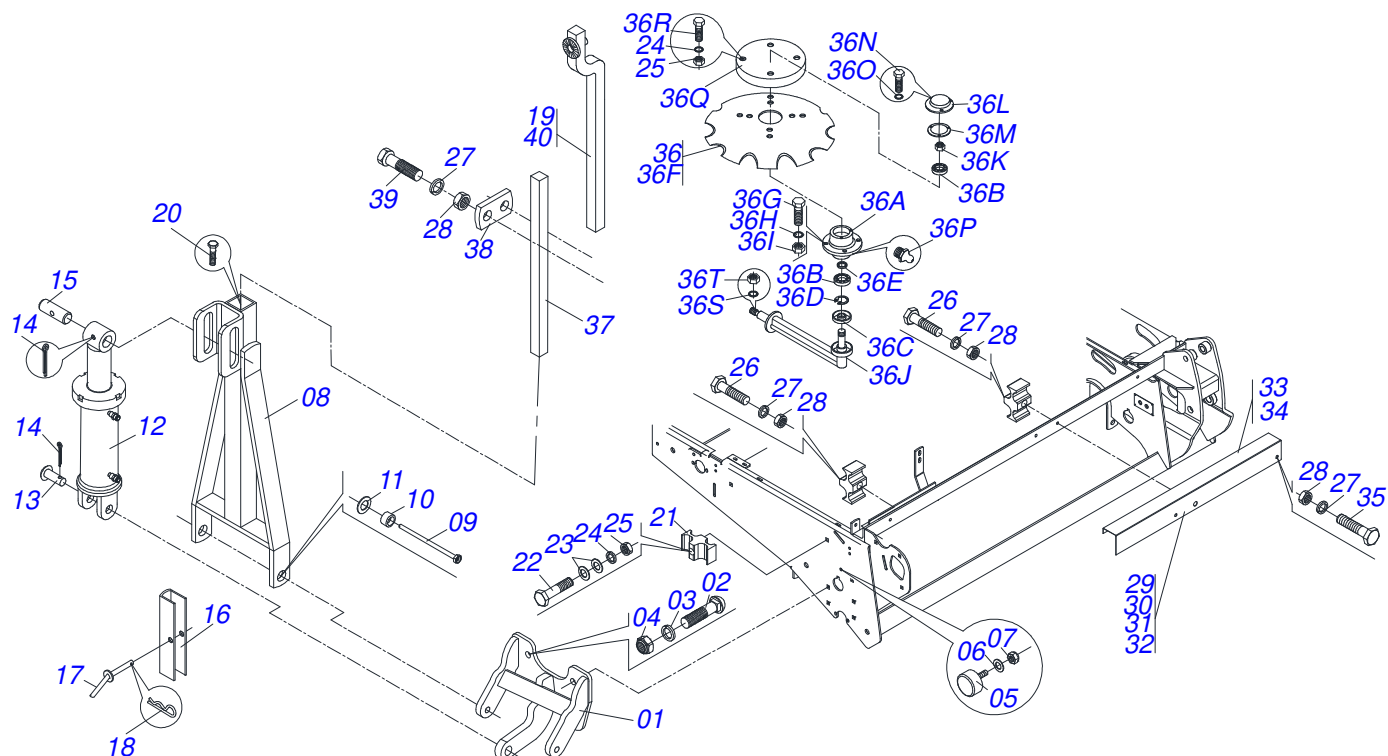


Item	Code	Description	See page	07 09 11
01	0511069622	ROW MARKER ARM SUPPORT		02 02 02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08 08 08
03	0503010027	5/8" SPRING WASHER		12 12 12
04	0503012412	5/8 UNC SELF LOCKING NUT		08 08 08
05	0503011070	BEATER		02 02 02
06	0551019213	FLAT WASHER		02 02 02
07	0503011336	1/2" HEX SELF ADJUSTING NUT		02 02 02
08	0501069470	ROW MARKER ARM		02 02 02
09	0521061655	BOLT 5/8 UNC X 320 MM		02 02 02
10	0521010479	SLEEVE ARTICULATION		04 04 04
11	0501012140	FLAT WASHER		04 04 04
12	0511058449	HYDRAULIC CYLINDER		02 02 02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02 02 02
14	0503010523	1/4" X 2" COTTERPIN		04 04 04
15	0511015779	1" X 4.2" AXLE		02 02 02
16	0511017592	11.8" X 1.6" TRANSPORT LOCK		02 02 02
17	0501068994	0.3" X 3.1" LOCK PIN		02 02 02
18	0503030168	HAIR PIN		02 02 02
19	0501069643	890 TURNBUCKLE		02 02 00
20	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04 04 04
21	0502012702	BODY SUPPORT CLAMP		06 06 06
22	0501010096	3/8" X 2" BOLT		02 02 02
23	0501010984	FLAT WASHER		04 04 04
24	0503010025	3/8" SPRING WASHER		10 10 10
25	0503010026	3/8" NUT		10 10 10
26	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04 04 04
27	0503010180	7/16" SPRING WASHER		08 08 16
28	0503010244	7/16" NUT		08 08 16
29	0551019268	RIGHT COVER PROTECTION		01 00 00
30	0551019269	LEFT COVER PROTECTION		01 00 00
31	0551018206	LEFT COVER ARM/DISARMENT		00 01 00


Item	Code	Description	See page	07 09 11
32	0551018207	LEFT COVER PROTECTION		00 01 00
33	0551019266	RIGHT PROTECTION COVER		00 00 01
34	0551019267	LEFT PROTECTION COVER		00 00 01
35	0503010395	1/2" X 1-1/4" BOLT		04 04 04
36	0501050633	MARKER DISC ASSY LINE	27	02 02 02
36A	0502011907	DEPTH CONTROL WHEEL HUB		02 02 02
36B	0503010269	6204 BALL BEARING		04 04 04
36C	0503010689	SEAL 00763-BR		02 02 02
36D	0503011105	SEAL RING		02 02 02
36E	0501013636	SPACING SLEEVE		02 02 02
36F	0602023110	DR16X3 NOTCHED DISC BLADE		02 02 02
36G	0503010358	5/16" X 5/8" BOLT		08 08 08
36H	0503011444	SPRING WASHER		08 08 08
36I	0503010337	5/16" NUT		08 08 08
36J	0501066800	ROW MARKER DISC AXLE ASSY		02 02 02
36K	0503010878	5/8" SELF ALIGNING NUT		02 02 02
36L	0521019178	COVER DEPTH		02 02 02
36M	0503030757	2.9" X 2" X 0.02" JOINT		02 02 02
36N	0503814729	BOLT		06 06 06
36O	0503011441	SPRING WASHER		06 06 06
36P	0503010691	1/4" GREASE FITTING		02 02 02
36Q	0501069226	ROW MARKER ROD STOP		02 02 02
36R	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		08 08 08
36S	0503010023	3/4" SPRING WASHER		02 02 02
36T	0503010014	3/4" NUT		02 02 02
37	0521013164	EXTENSOR		00 00 02
38	0501011310	FIXER LOCK		00 00 08
39	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		00 00 08
40	0501066949	1235 TURNBUCKLE		00 00 02

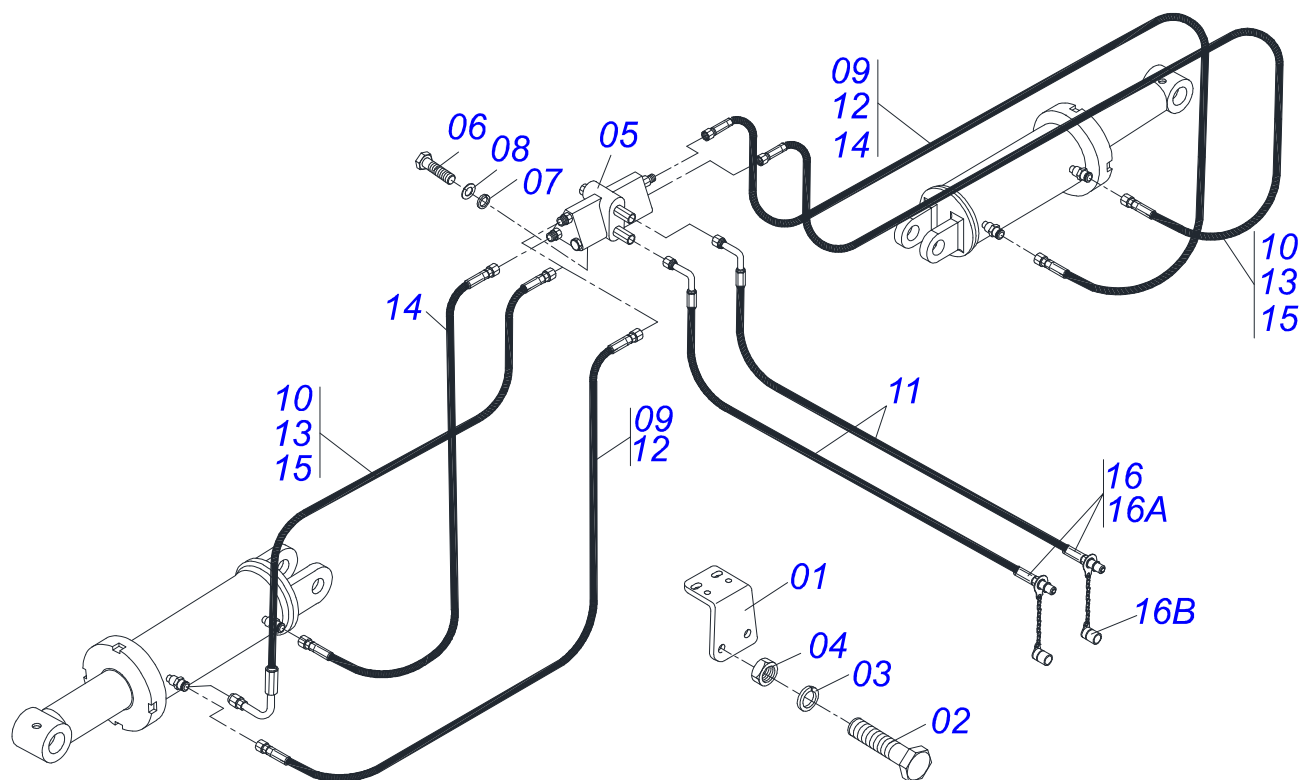


Item	Code	Description	See page	07 09 11
01	0511011311	VALVE SUPPORT		01 01 01
02	0503010232	5/8" X 1.3/4" BOLT		02 02 02
03	0503010027	5/8" SPRING WASHER		02 02 02
04	0503010013	5/8" NUT		02 02 02
05	0501054649	SEQUENTIAL VALVE ASSY	31	01 01 01
06	0503010365	NUT		02 02 02
07	0503010179	5/16" ZN SPRING WASHER		02 02 02
08	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02 02 02
09	0501080452	3/8" X 98" TR-TR HOSE ASSY		02 00 00
10	0501080401	3/8" X 106" TR-TC HOSE ASSY		02 00 00
11	0501080422	HOSE 3/8 X 4000 TC-TM		02 02 02
12	0501081727	TR-TR HOSE ASSY		00 02 00
13	0501080447	3/8" X 122" TR-TC HOSE ASSY		00 02 00
14	0501080343	TR-TR HOSE ASSY		00 00 02
15	0501080720	HOSE 3/8 X 3500 TR-TC		00 00 02
16	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02 02 02
16A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		02 02 02
16B	0503011882	MALE QUICK COUPLER CAP		02 02 02

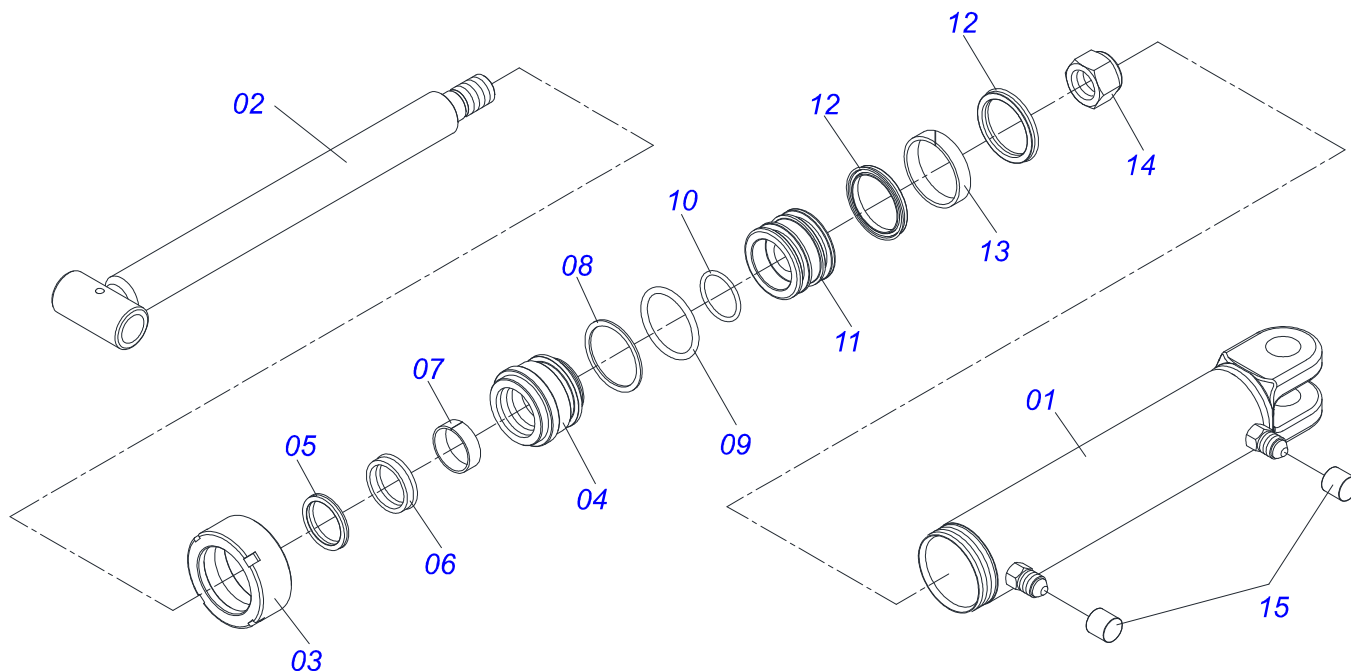

Item	Code	Description	See page	QT
01	0511062810	2.5" X 15" CYLINDER CASE		01
02	0501065662	HYDRAULIC CYLINDER TURNBUCKLE		01
03	0502010471	MOBILE COVER		01
04	0502010780	RING SUPPORT		01
05	0503010163	D-1500 SCRAPER RING		01
06	0503010989	1870-1500-375-B GASKET		01
07	0503010970	W1-1650-500 PK O'RING G.E		01
08	0503011058	8-330 BACK-UP RING		01
09	0503010161	2-330 N 3006 9B O'RING		01
10	0503010285	2-222 N 3006-9B O'RING		01
11	0502010783	1.5" X 2.5" PISTON		01
12	0503010160	2500 2000 GASKET		02
13	0503010973	W2-2500-500 PK O'RING G.E		01
14	0503010063	1" SELF-ALIGNING NUT		01
15	0503030384	CON PLUG N-001		02
16	0501032666	HYDRAULIC CYLINDER REPAIR KIT		01

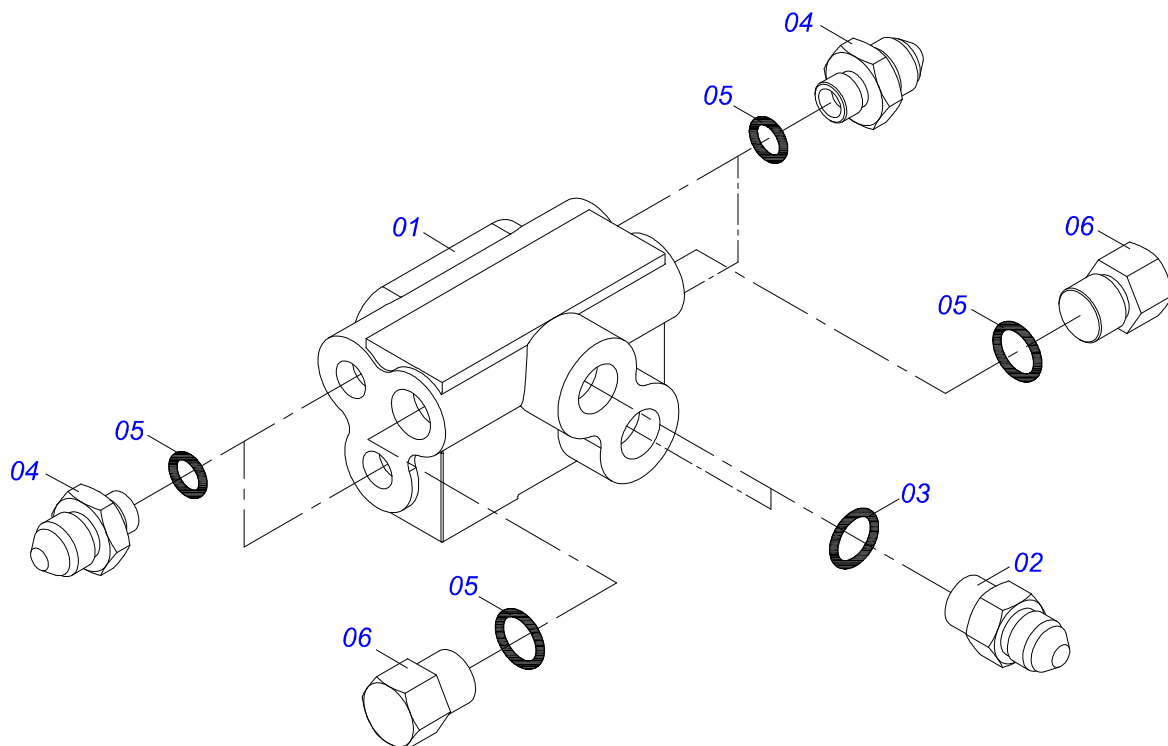


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

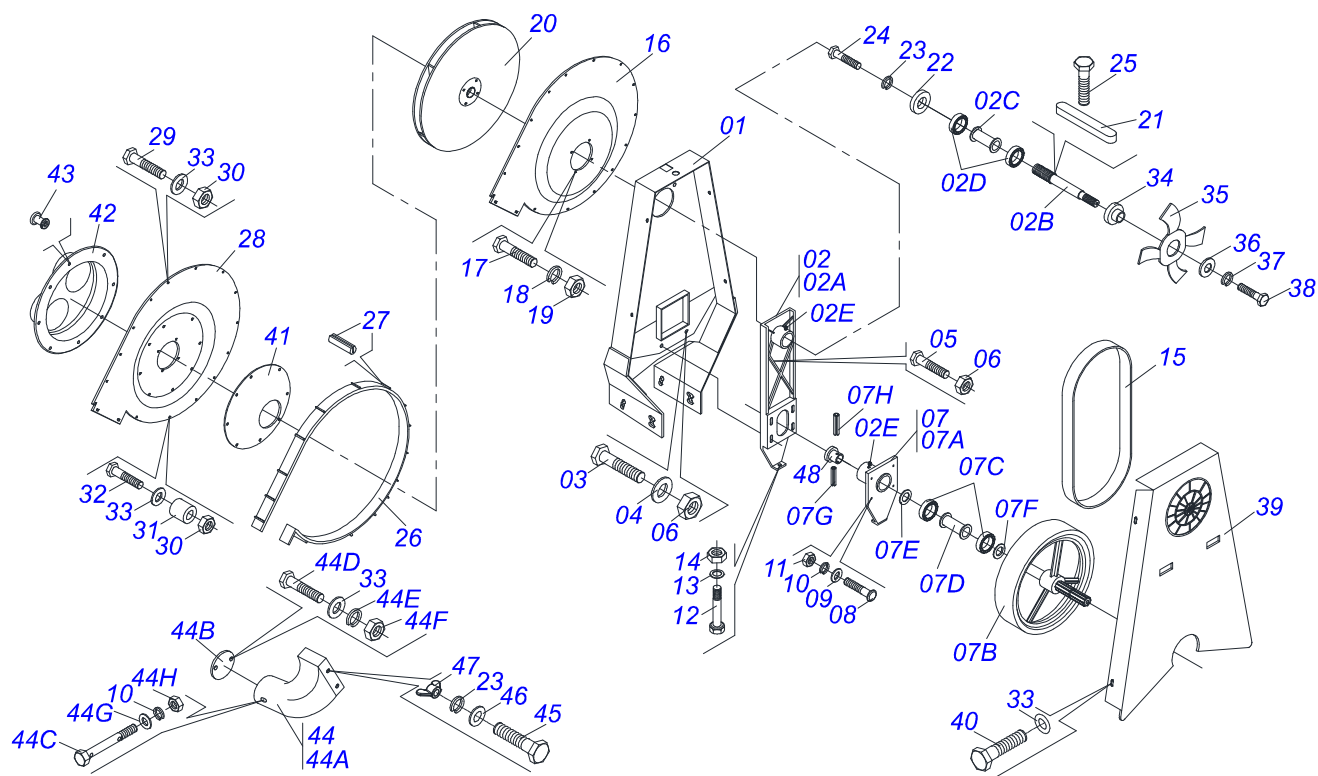


Item	Code	Description	See page	QT
01	0511061094	TURBINE SUPPORT	01	
02	0501053716	BEARING ASSY OF THE LARGER FAN	01	
02A	0502012016	CHAIN TENSIONER SUPPOT	01	
02B	0503012778	MIDDLE LARGER AXLE	01	
02C	0531010881	INTERMEDIARY UPPER SLEEVE	01	
02D	0503012689	6306 DDU BEARING	02	
02E	0503010325	VCA-118 VALVE	03	
03	0503010920	1/2" X 1.1/2" BOLT	02	
04	0511017302	FLAT WASHER	02	
05	0503010395	1/2" X 1-1/4" BOLT	02	
06	0503011336	1/2" HEX SELF ADJUSTING NUT	04	
07	0501053886	PULLEY ASSY WITH FREE ROT	01	
07A	0502012020	PULLEY HOUSING BEARING	01	
07B	0501053888	TURBINE PULLEY ASSY	01	
07C	0503011081	6207 2RS BEARING	02	
07D	0531014518	INTERMEDIARY LOWER BUSHING BEARING	01	
07E	0531014519	FLAT WASHER	01	
07F	0531014527	FLAT WASHER	01	
07G	0503010301	0.3" X 1.8" SPRING PIN	01	
07H	0503011855	0.2" X 1.8" SPRING PIN	01	
08	0501011194	1/2" X 1-3/4" BOLT	04	
09	0521018517	FLAT WASHER	04	
10	0503010019	1/2" SPRING WASHER	05	
11	0503010020	1/2"NUT	04	
12	0503013030	5/8" X 3.1/4" BOLT	01	
13	0501012140	FLAT WASHER	01	
14	0503010013	5/8" NUT	01	
15	0503012780	LARGER TURBINE BELT	01	
16	0531017194	FRONT COVER	01	
17	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	04	
18	0503010025	3/8" SPRING WASHER	04	

Item	Code	Description	See page	QT
19	0503010026	3/8" NUT		04
20	0511040440	17.3" MIDDLE FAN		01
21	0503011775	6 X 6 X 35 KEYWAY		01
22	0503011774	PULLEY		01
23	0503010179	5/16" ZN SPRING WASHER		03
24	0503011257	M 8 X 1,25 X 30 BOLT		01
25	0503011807	SCREW M8 X 1,25X10		01
26	0501054272	RIBBON FOR COVER CLOSING ASSY		01
27	0503031776	TURBINE RIBBON SEAL		02
28	0531017195	REAR COVER		01
29	0503013031	1/4" X 3.1/4" BOLT		15
30	0503012880	1/4" UNC SELF ADJUSTING NUT		17
31	0511014024	10 X 13 X 15,5 SLEEVE		02
32	0503012721	1/4" X 4" BOLT		02
33	0511017303	FLAT WASHER		40
34	0531010771	WASHER GUIDE		01
35	0531010757	TURBINE FAN		01
36	0531010770	FLAT WASHER		01
37	0503010179	5/16" ZN SPRING WASHER		01
38	0503011429	M 8 X 1,25 X 40 BOLT		01
39	0531012760	TURBINE REAR COVER		01
40	0503013758	1/4" X 1-1/2" BOLT		04
41	0521018267	LARGER TURBINE FRONTAL COVER CENTER		01
42	0503031649	CONECTOR CENTER		01
43	0503012722	0.16" X 0.4" BLIND RIVET		16
44	0501056495	TURBINE OUTPUT SOCKET		01
44A	0503031812	TURBINE OUTPUT SOCKET		01
44B	0541017539	BUTTERFLY VALVE		01
44C	0511066760	VALVE FIXATION SUPPORT		01
44D	0503013813	1/4" UNC X 7/8" BOLT		02
44E	0503010143	1/4" SPRING WASHER		02
44F	0503010144	1/4" NUT		02
44G	0501013519	FLAT WASHER		01
44H	0503010060	1/2" NUT		01
45	0503013096	5/16" X 4" BOLT		02
46	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
47	0503010499	5/16" UNC BUTTERFLY NUT		02
48	0531015571	CARDAN SLEEVE HITCH		01

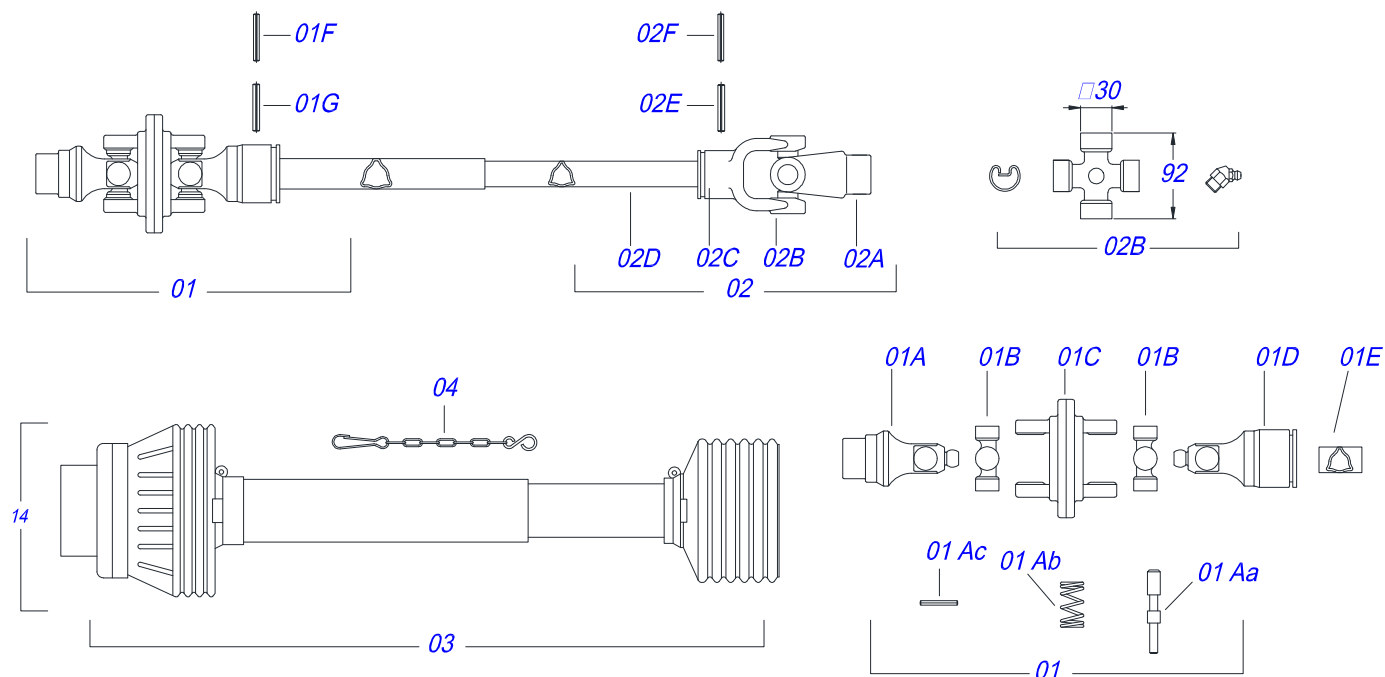

Item	Code	Description	See page	QT
01	0501055638	HOMO JOINT WITH FEMALE BUSHING		01
01A	0503012607	TRACTOR HOMOCINETIC TERMINAL		01
01Aa	0521010638	0.5" X 3.3" QUIC HITCH COUPL SHAFT		01
01Ab	0503030518	0.5"X1.0"X 0.1" COMPRESSION SPRING		01
01Ac	0503010140	1/8" X 3/4" COTTERPIN		01
01B	0503012605	CROSSPIECE		02
01C	0503012606	CENTER BODY		01
01D	0503012604	HOMO TERMINAL W/ FEMALE BUSHING		01
01E	0503012618	2.1" X 2.0" X 31" TRIAN FEMALE TUB		01
01F	0503010843	0.4" X 3.3" SPRING PIN		01
01G	0503011878	0.2" X 3.3" SPRING PIN		01
02	0501055639	UNIVERSAL JOINT		01
02A	0503013132	CC292 TERMINAL		01
02B	0503012096	CROSSPIECE		01
02C	0503013187	TERMINAL		01
02D	0503012619	1.8" X 1.7" X 31" TRIAN MALE TUB		01
02E	0503011069	0.4" X 2.8" SPRING PIN		01
02F	0503011805	0.2" X 2.8" SPRING PIN		01
03	0503013189	PROTECTION ASSY		01
04	0503012023	CHAIN FOR PROTECTION		01

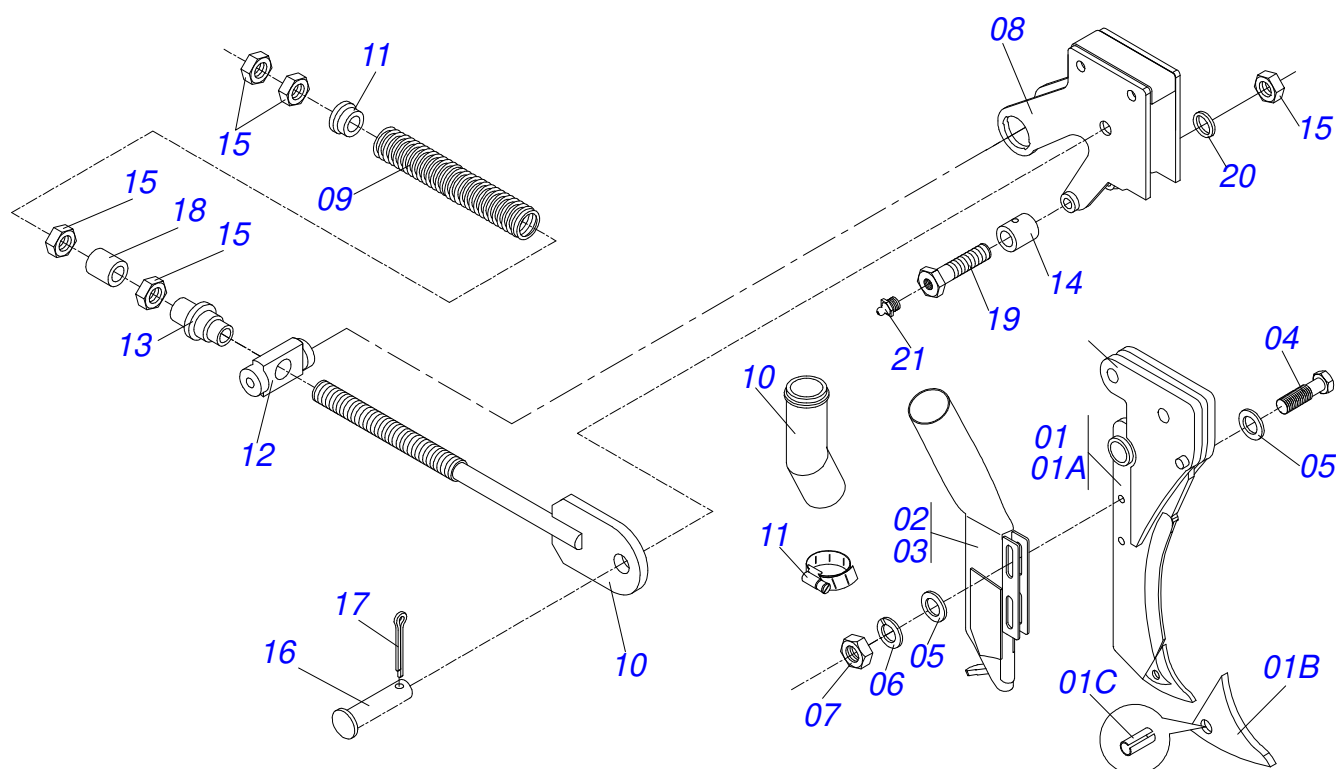

Item	Code	Description	See page	DIR ESQ
00	0511046337	RH FERTILIZER SCARIFIER SPINDLE	01	00
00A	0511046339	FERTILIZER SCARIFIER SPINDLE	00	01
01	0501110558	SCARIFIER SPINDLE W/POINT ASSY	01	01
01A	0511069240	ROD SCARIFIER SPINDLE	01	01
01B	0502070061	POINT SUBSOILER	01	01
01C	0503011373	0.4" X 1.1" SPRING PIN	01	01
02	0511069242	RIGHT ADJUSTMENT CONDUCTOR FERTILIZER	01	00
03	0511069243	LEFT ADJUSTMENT CONDUCTOR FERTILIZER	00	01
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	02	02
05	0501010984	FLAT WASHER	04	04
06	0503010025	3/8" SPRING WASHER	02	02
07	0503010026	3/8" NUT	02	02
08	0511069239	SPIDLE DESASSEMBLE	01	01
09	0503031593	SPRING	01	01
10	0511069241	SPRING GUIDE ROD	01	01
11	0521017831	SUPPORT SLEEVE SPACER	01	01
12	0502012496	SPRING ROD ROCKER ARM	01	01
13	0502012500	SPRING ROD LARGER BUSHING	01	01
14	0551017716	SLEEVE 16,5 X 28,58 X 40,0/39,9	01	01
15	0503010013	5/8" NUT	05	05
16	0551017724	PIN 12,7 X 38 PST3	01	01
17	0503010362	1/8" X 1.1/4" COTTERPIN	01	01
18	0551018814	SLEEVE 31,75 X 17 X 40	01	01
19	0551017811	5/8" UNC X 3.1/2" BOLT	01	01
20	0503010027	5/8" SPRING WASHER	01	01
21	0503010002	1800 GREASE FITTING	01	01



www.marchesan.com.br



Technical Publications | Elaboration and Revision
JOSÉ DOMINGOS GASPARI