

ROW CROP PLANTERS

COP FLEX - CHASSIS 5745 - CPA - 06 WHEEL

Code: 0501090970
Series: S-0611
Revision: 00
Date Revision: MAIO/2022

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111110690	COP FLEX 13/13 C CPA 6 ROD S-0611

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX


0909091068	ASSY FRAME	1
0521041738	FULL HEADER	2
0511052492	TRACTOR HITCH ASSY	3
0511053179	TRACTOR COUPLING SHAFT	4
0511050379	RIGHT HUB AND SPINDLE 11L15	5
0511050380	WHEELED LEFT SET	6
0511050636	RIGHT WHEEL ASSEMBLY WITHOUT TRANSMISSION	7
0511050647	LEFT WHEEL ASSEMBLY WITHOUT TRANSMISSION	8
0501048672	CHAIN TENSIONER ASSY	9
0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED BOX	10
0511052766	CARRYING WHEEL HUB ASSY	11
0503062158	EEE WHEEL WITH TIRE 700 X 16-10L ASSY	12
0501053522	WHEEL CHAIN TENSIONER	13
0511051434	TRANSMISSION ACTUATOR	14
0909096322	ASSY TRANSMISSION	15
0501054686	GEAR BOX CHAIN TENSIONER	16
0511050385	BEARING DOUBLE GEAR	17
0501058265	STRETCHER LOWER CURRENT 21Z SEED	18
0501053846	MIDDLE BEARING OF THE TRANSMISSION	19
0501052775	ROW SEED BEARING	20
0501053126	FERTILIZER CHAIN TENSIONER ASSY	21
0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	22
0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	23
0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	24
0501053610	BEARING WITH 17Z GEAR INNER AXLE	25
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	26
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	27
0501058236	BEARING WITH 21Z GEAR	28
0511048939	ASSY RIGHT EXCHANGE	29
0511048940	LEFT ASSY EXCHANGE	30
0501058212	SEMI MOUNTED RIGHT CHANGE	31
0501048790	AXLE WITH RING	32
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	33
0501056443	GEAR HOUSING BEARING	34
0501056444	BEARING WITH ROLLING	35
0501056271	GEARBOX CLOSED BEARING	36
0501054655	CHAIN TENSIONER ASSY	37
0501058213	LH GEAR BOX	38
0511050127	CHAIN TENSIONER SUPPORT	39
0511050891	BOX SUPPORT RIGHT FERTILIZER	40
0511050892	FERTILIZER LEFT BOX SUPPORT	41
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	42
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	43
0501053788	3/4 SQUARE AXLE FASTENER	44
0511052332	ASSY SUPPORT RIGHT FIXER CHANGE	45
0511052333	ASSEMBLY SUPPORT LEFT FIXER CHANGE	46
0909091138	ROW MARKER ASSY	47
0511040203	1.5" X 2.5" X 19" X 9" HYDRAULIC CYLINDER	48
0501050633	ROW MARKER DISK ASSEMBLY	49
0511053904	ROW MARKER DISC	50
0909090188	HYDRAULIC CIRCUIT	51
0501054649	HBM SEQUENTIAL VALVE	52
0511043969	44,45 X 101,6 HYDRAULIC CYLINDER	53
0909092083	ASSY SEED/FERTILIZER LINE	54
0511051131	SHORT SEED ROW FRONT LEFT	55

INDEX

0511051132	FRONT SHORT RIGHT SEED LINE	56
0511051133	FRONT LONG RIGHT SEED LINE	57
0511051134	FRONT LEFT LONG SEED LINE	58
0511054884	TRANSMISSION BOX	59
0511050377	SEMI MOUNTED SHORT FERTILIZER LINE	60
0511050378	SEMI-ASSEMBLED LONG FERTILIZER LINE	61
0501052977	LEFT FERTILIZER DOUBLE DISC	62
0501052976	RIGHT FERTILIZER DOUBLE DISC	63
0511051818	DISC CUT 18 SEMI MOUNTED	64
0501052139	ASSY CUTTING DISK DPL18	65
0521040111	ASSY DEPTH WHEEL/COMPACTOR SYSTEM	66
0511051447	CONTROL DEPTH ASSY	67
0501058576	RIGHT WHEEL ARM	68
0501052627	ASSY DEPTH WHEEL BOX	69
0501052538	DEPTH BAND WITH ARMS	70
0511054333	COMPACT WHEEL RIGHT WITH BEARING	71
0501052908	COMPACTOR WHEEL WITH BEARING	72
0511054334	COMPACT WHEEL LEFT WITH BEARING	74
0501052820	SEED SYSTEM ASSY	75
0511052317	RH SEED ROW REAR	76
0501059631	DDD SEED 15 X 15 RIGHT	77
0501054167	BOX DDD ASSY DPL 15 RIGHT	78
0501054168	BOX DDD ASSY DPL 15 LEFT	79
0511052318	LH SEED ROW REAR	80
0501059632	DDD SEED 15X15 LEFT	81
0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL	82
0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL	83
0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	84
0501056435	LEFT CONTROL ARM DEPTH WITHOUT WHEEL	85
0501050120	LARGER WALKING BEAM ASSY	86
0501110231	SCARIFIER HEAD WITH SPIKE 0061	87
0511053857	FAST CLOSING SET	88

ASSY FRAME

0909091068

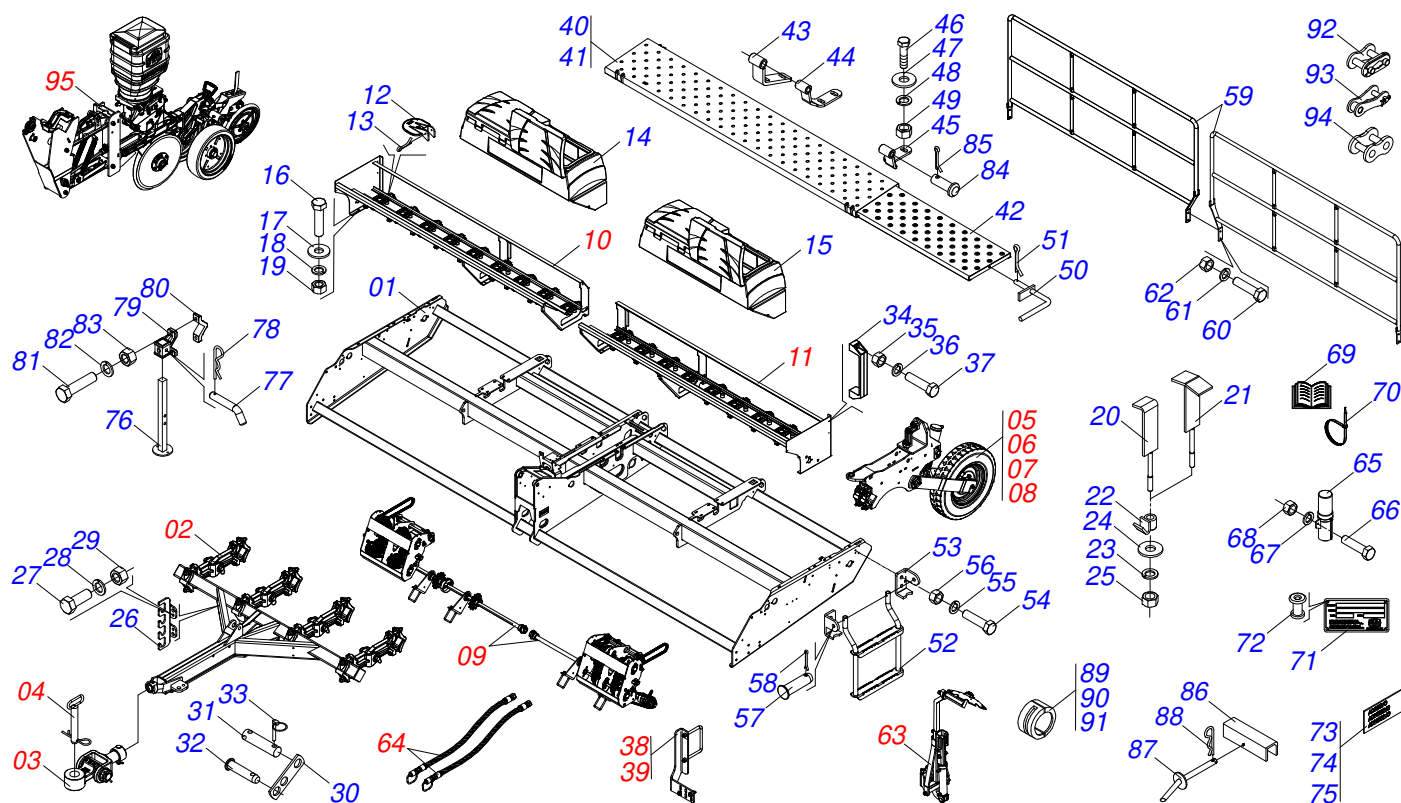

Item	Code	Description	See page	QT
01	0521061933	FRAME (5745)		01
02	0521041738	FULL HEADER	2	01
03	0511052492	TRACTOR HITCH ASSY	3	01
04	0511053179	TRACTOR COUPLING SHAFT	4	01
05	0511050379	RIGHT HUB AND SPINDLE 11L15	5	02
06	0511050380	WHEELED LEFT SET	6	02
07	0511050636	RIGHT WHEEL ASSEMBLY WITHOUT	7	01
08	0511050647	LEFT WHEEL ASSEMBLY WITHOUT	8	01
09	0909096322	ASSY TRANSMISSION	15	01
10	0511050891	BOX SUPPORT RIGHT FERTILIZER	40	01
11	0511050892	FERTILIZER LEFT BOX SUPPORT	41	01
12	0503034396	FERTILIZER SIDE COVER		01
13	0503010257	1/8" X 1" COTTERPIN		01
14	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		02
15	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		01
16	0503010849	3/8" X 1-1/2" BOLT		16
17	0501010984	FLAT WASHER		16
18	0503010025	3/8" SPRING WASHER		16
19	0503010026	3/8" NUT		16
20	0511061884	FERTILIZER BEAM CLAMP		02
21	0511061885	FERTILIZER BEAM DOBLE CLAMP		01
22	0511061886	FERTILIZER BEAM LOCK		03
23	0503010019	1/2" SPRING WASHER		03
24	0511017302	FLAT WASHER		03
25	0503010060	1/2" NUT		03
26	0541011767	HOSE FIXATION		01
27	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
28	0503010025	3/8" SPRING WASHER		02
29	0503010026	3/8" NUT		02
30	0561019087	DRAWBAR TRANSPORT LOCK		01

ASSY FRAME

0909091068

Item	Code	Description	See page	QT
31	0521018532	1.4" X 12" COUPLING SHAFT		01
32	0521010578	COUPLING SHAFT		01
33	0503030085	LOCK PIN		03
34	0503011957	NYLON LUG		02
35	0503010371	5/16" X 1" BOLT		04
36	0503010179	LOCK WASHER		04
37	0503010337	5/16" NUT		04
38	0511052332	ASSY SUPPORT RIGHT FIXER CHANGE	45	01
39	0511052333	ASSEMBLY SUPPORT LEFT FIXER CHANGE	46	01
40	0521062091	PLATFORM LEFT COP FLEX 13		01
41	0521062092	PLATFORM RIGHT		01
42	0521061676	PLATFORM PROLONG		02
43	0511069661	PLATFORM SUPPORT PIVOT		02
44	0521062061	CENTRAL ARTICULACION		01
45	0521062062	CENTRAL ARTICULACION		01
46	0503010849	3/8" X 1-1/2" BOLT		08
47	0501010984	FLAT WASHER		08
48	0503010025	3/8" SPRING WASHER		08
49	0503010026	3/8" NUT		08
50	0511069664	PLATFORM EXTENSION LOCK		02
51	0503010257	1/8" X 1" COTTERPIN		02
52	0511069636	LADDER		02
53	0551017437	LADDER RIGHT FIXER		04
54	0503010237	3/8" X 1" BOLT		08
55	0503010025	3/8" SPRING WASHER		08
56	0503010026	3/8" NUT		08
57	0521017623	0.5" X 1.5" COUPLING SHAFT		04
58	0503010257	1/8" X 1" COTTERPIN		04
59	0521061171	HANDRAIL		02
60	0503010395	1/2" X 1-1/4" BOLT		08
61	0503010019	1/2" SPRING WASHER		08
62	0503010060	1/2" NUT		08
63	0909091138	ROW MARKER ASSY	47	01
64	0909090188	HYDRAULIC CIRCUIT	51	01
65	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
66	0503010358	5/16" X 5/8" BOLT		01
67	0503010179	LOCK WASHER		01
68	0503010337	5/16" NUT		01
69	0501090624	INSTRUCTION MANUAL		01
70	0503010267	NYLON CLAMP		01
71	0503030310	ADHESIVE		01
72	0503010001	3.2 X 5.5 RIVET		04
73	0503031942	ADHESIVE LABEL		01
74	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
75	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
76	0511061835	PLOUGH SUPPORT		02
77	0501011075	PIN		02
78	0503030012	HITCH PIN CLIP		02
79	0502011530	SUPPORT		02
80	0502010175	HITCH CLAMP		02
81	0501011543	5/8" X 4" BOLT		04
82	0503010027	5/8" SPRING WASHER		04
83	0503010013	5/8" NUT		04
84	0521010549	COUPLING SHAFT		04
85	0503010300	5/32" X 1" COTTERPIN		04
86	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
87	0501068994	0.3" X 3.1" LOCK PIN		02
88	0503030168	CUPILLA		02
89	0501047885	ROD STOP		04


**ASSY FRAME**

0909091068


Item	Code	Description	See page	QT
90	0501047886	ROD STOP		04
91	0501047887	ROD STOP		04
92	0503011750	AMENDMENT WITH LOCK		06
93	0503011751	REDUCTION		06
94	0503010780	N-2050 AMENDMENT		06
95	0909092083	ASSY SEED/FERTILIZER LINE	54	13

FULL HEADER


0521041738

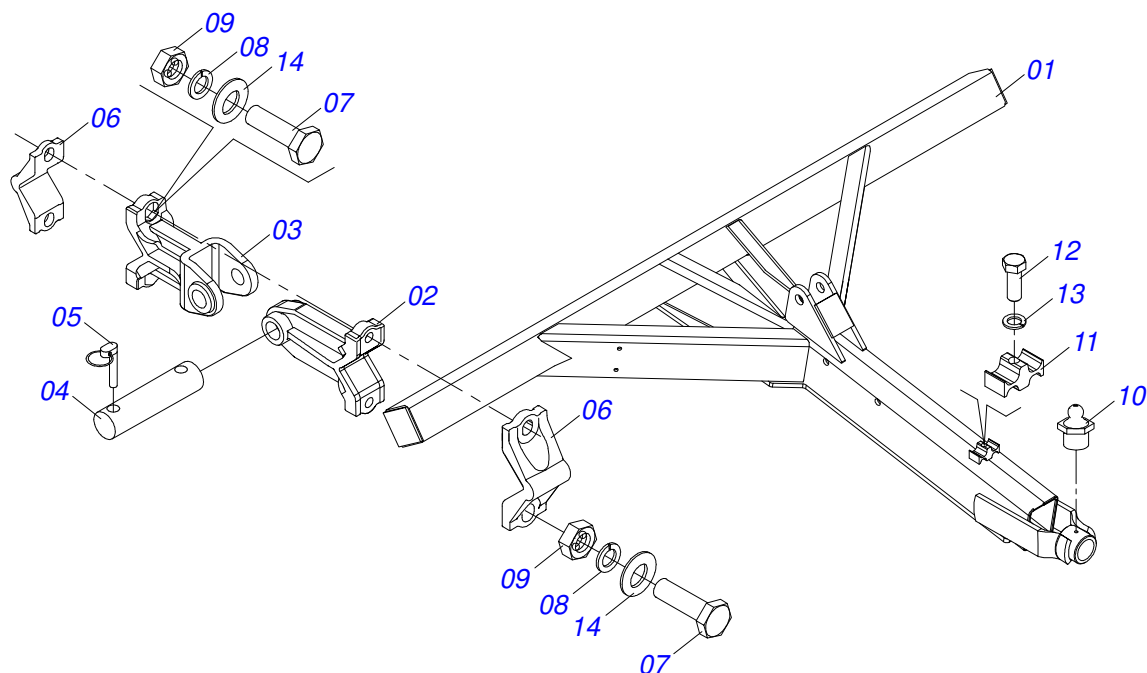


Item	Code	Description	See page	QT
01	0531063130	HEADER	01	
02	0502012328	DRAWBAR SUPPORT FRONT FIXATION	02	
03	0502012329	DRAWBAR FIXATION REAR SUPPORT	02	
04	0561014393	COUPLING SHAFT	02	
05	0503030119	LOCK PIN	04	
06	0502012330	SUPPORT FIXER PIVOT	04	
07	0503011084	3/4" X 5" BOLT	08	
08	0503010023	3/4" SPRING WASHER	08	
09	0503010014	3/4" NUT	08	
10	0503010002	1800 GREASE FITTING	04	
11	0502012702	BODY SUPPORT CLAMP	01	
12	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN	01	
13	0503010180	7/16" SPRING WASHER	01	
14	0501010322	FLAT WASHER	08	

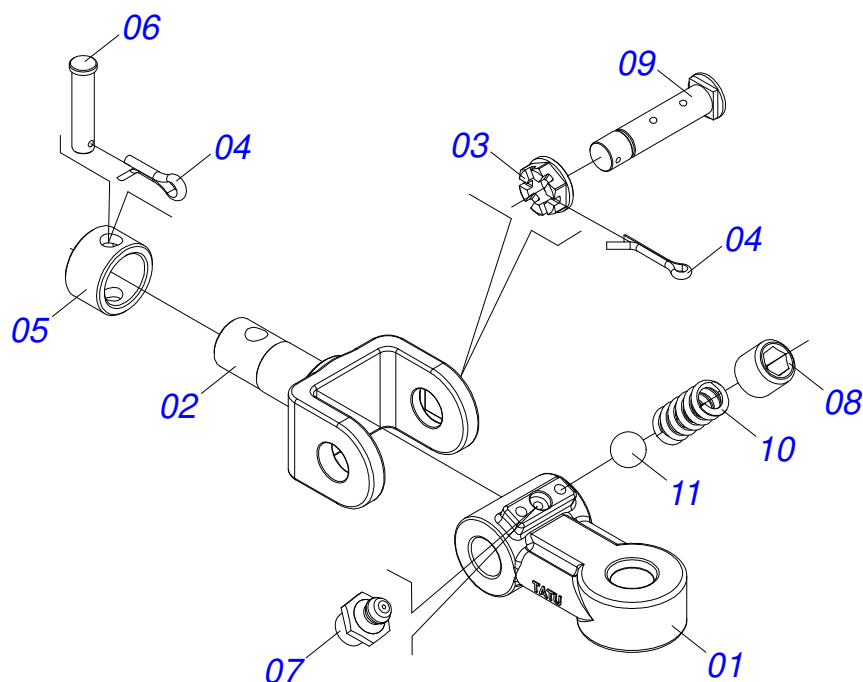

Item	Code	Description	See page	QT
01	0571012608	TRACTOR HITCH		01
02	0502040846	U TRACTOR HITCH		01
03	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
04	0503010010	1/4" X 2.1/2" COTTERPIN		02
05	0521010681	BUSHING COUPLING BODY		01
06	0521010639	COUPLING SHAFT		01
07	0503010002	1800 GREASE FITTING		01
08	0503016482	BOLT		02
09	0571012612	PIVOT SHAFT		01
10	0503033731	COMPRESSION SPRING LEFT		02
11	0503011331	3/8 BALL		02

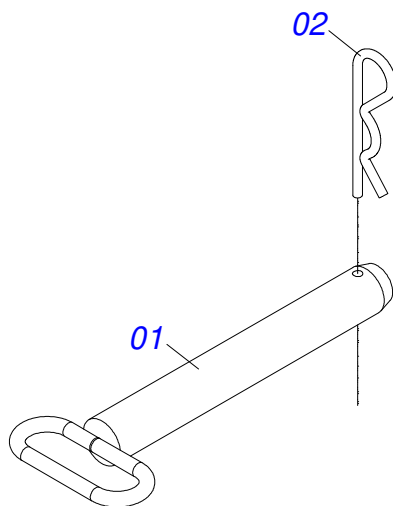


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

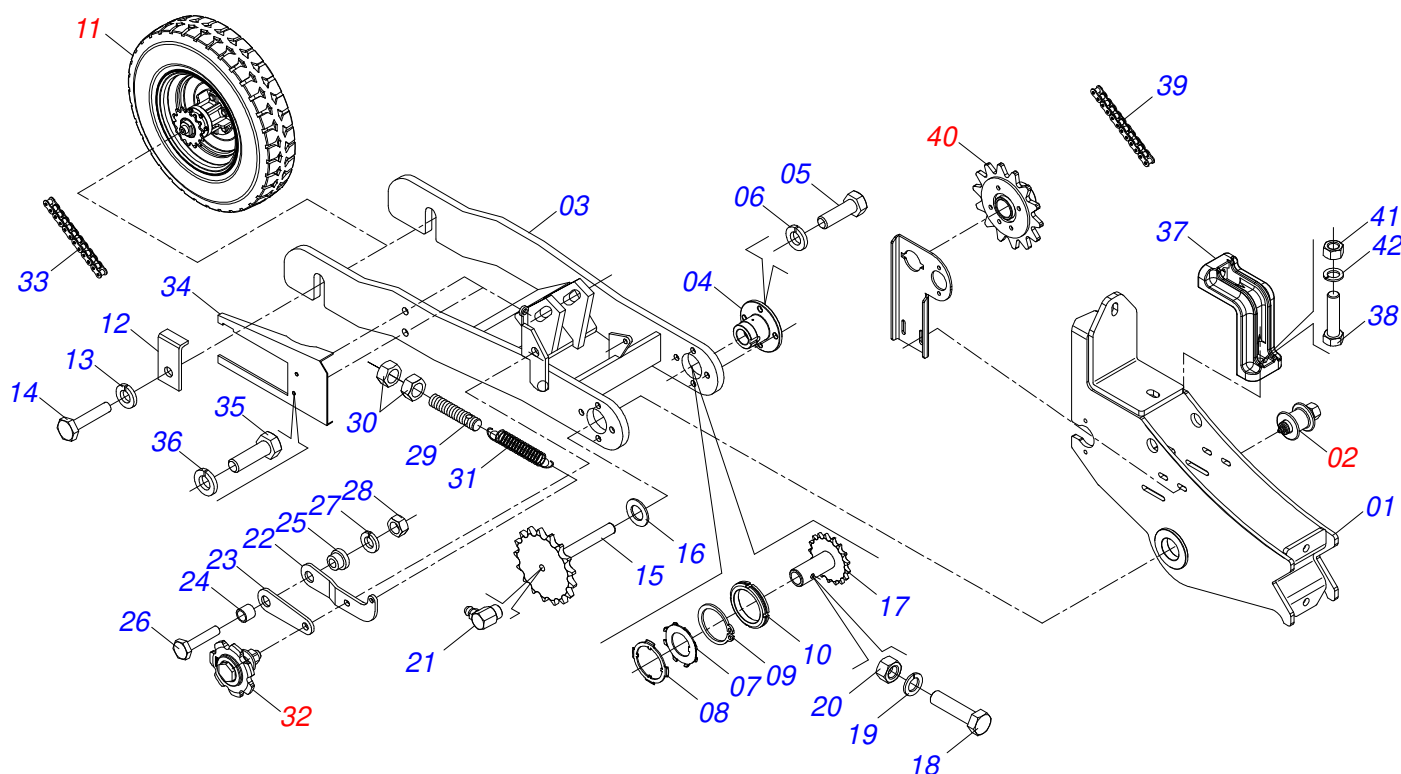

Item	Code	Description	See page	QT
01	0521062629	SPECIAL WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY	9	01
03	0511064744	WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 10 BOX		01
12	0591010589	BODY LOCK WHEEL		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011188	M16 X 2 X 50 BOLT		02
15	0511061808	15Z GEAR WITH AXLE		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0531018654	CHAIN TIGHTENER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE		01
25	0531016916	SLEEVE BEARING SUPPORT		02
26	0503010899	5/8" X 2-1/4" BOLT		01
27	0503010027	5/8" SPRING WASHER		01
28	0503010013	5/8" NUT		01
29	0501013491	5/8" TENSIONER SPRING		01
30	0503010013	5/8" NUT		02
31	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01

Item	Code	Description	See page	QT
32	0501053522	WHEEL CHAIN TENSIONER	13	01
33	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
34	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
35	0503010847	1/2" X 3.1/4" BOLT		02
36	0503010019	1/2" SPRING WASHER		02
37	0502012400	ROW FERTILIZER FIXER		01
38	0503010797	3/4" X 4" BOLT		02
39	0503012958	2050 CHAIN X 42 LINK + REDUCTION		01
40	0511051434	TRANSMISSION ACTUATOR	14	01
41	0503011255	3/4" LOCK NUT		04
42	0501010322	FLAT WASHER		02

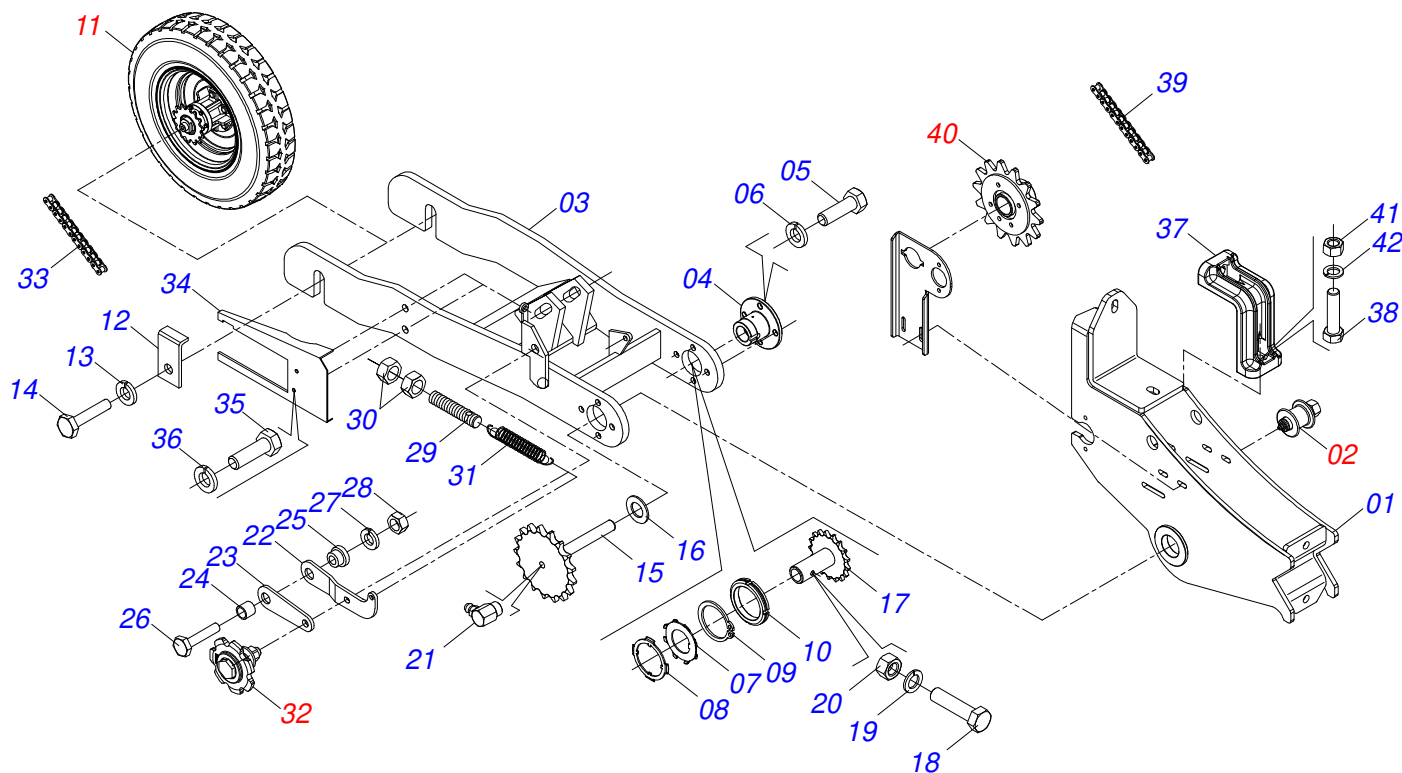


Item	Code	Description	See page	QT
01	0521062629	SPECIAL WHEEL SUPPORT		01
02	0501048672	CHAIN TENSIONER ASSY	9	01
03	0511065842	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2' BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 10 BOX		01
12	0591010589	BODY LOCK WHEEL		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011188	M16 X 2 X 50 BOLT		02
15	0511061808	15Z GEAR WITH AXLE		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0511014513	1" X 0.6" X 0.4" ARTUCULAT SLEEVE		01
25	0531016916	SLEEVE BEARING SUPPORT		02
26	0503010899	5/8" X 2-1/4" BOLT		01
27	0503010027	5/8" SPRING WASHER		01
28	0503010013	5/8" NUT		01
29	0501013491	5/8" TENSIONER SPRING		01
30	0503010013	5/8" NUT		02
31	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01


WHEELED LEFT SET

0511050380

Item	Code	Description	See page	QT
32	0501053522	WHEEL CHAIN TENSIONER	13	01
33	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
34	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
35	0503010847	1/2" X 3.1/4" BOLT		02
36	0503010019	1/2" SPRING WASHER		02
37	0502012400	ROW FERTILIZER FIXER		01
38	0503010797	3/4" X 4" BOLT		02
39	0503012958	2050 CHAIN X 42 LINK + REDUCTION		01
40	0511051434	TRANSMISSION ACTUATOR	14	01
41	0503011255	3/4" LOCK NUT		04
42	0501010322	FLAT WASHER		02

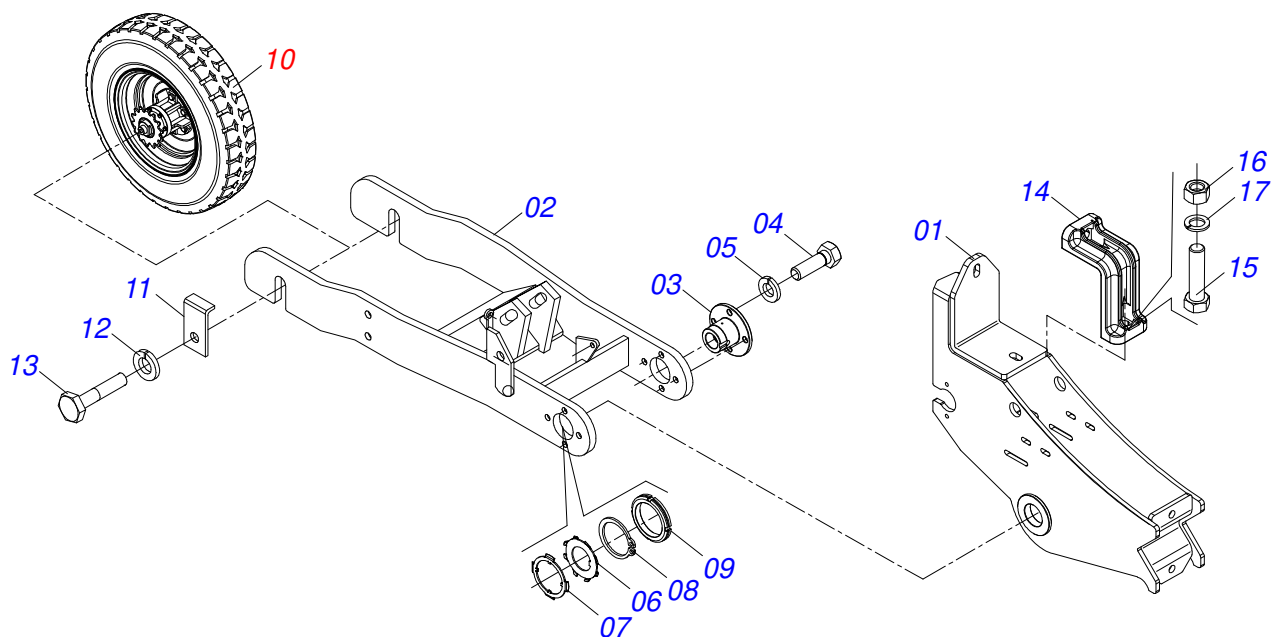


Item	Code	Description	See page	QT
01	0521062629	SPECIAL WHEEL SUPPORT	01	
02	0511064744	WHEEL FORK	01	
03	0501110625	BEARING ARTICULATION WHEEL	02	
04	0503013232	1/2" BOLT	08	
05	0503010019	1/2" SPRING WASHER	08	
06	0561013021	BEARING INNER LOK	02	
07	0561013022	BEARING EXTERNAL LOCK	02	
08	0503010398	501082 CLAMPING RING (FOR AXLE)	02	
09	0561013020	KM 12 NUT	02	
10	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 10 BOX	01	
11	0591010589	BODY LOCK WHEEL	02	
12	0503010027	5/8" SPRING WASHER	02	
13	0503011188	M16 X 2 X 50 BOLT	02	
14	0502012400	ROW FERTILIZER FIXER	01	
15	0503010797	3/4" X 4" BOLT	02	
16	0503011255	3/4" LOCK NUT	02	
17	0501010322	FLAT WASHER	02	

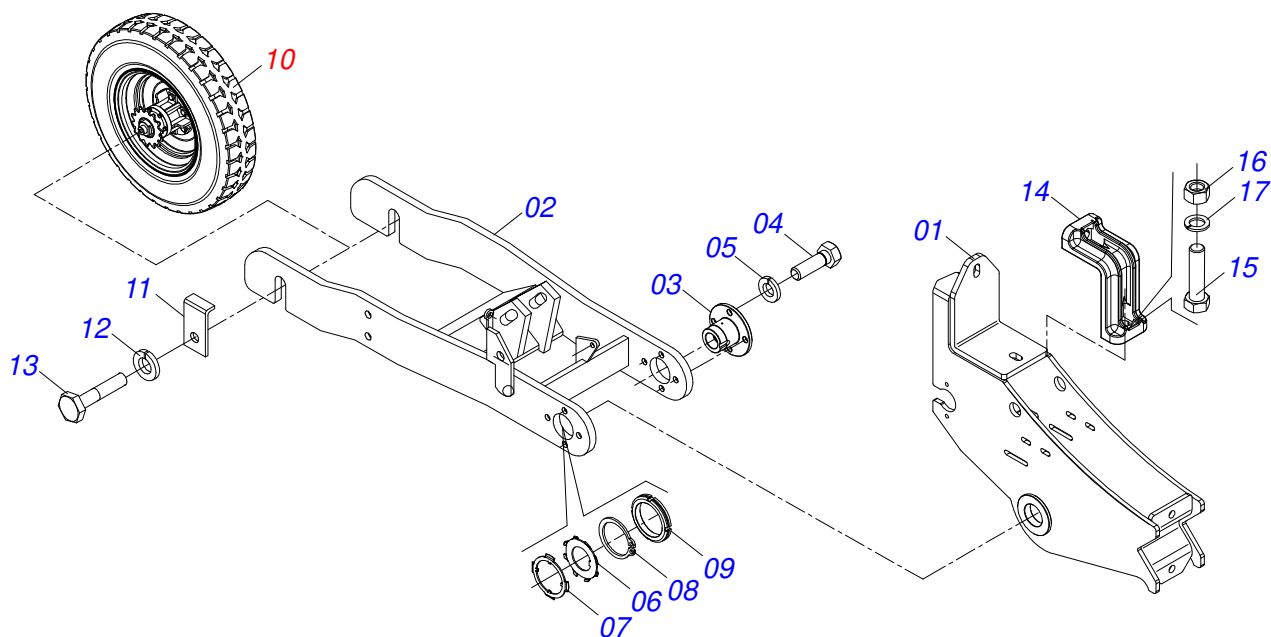


Item	Code	Description	See page	QT
01	0521062629	SPECIAL WHEEL SUPPORT	01	
02	0511065842	LEFT WHEEL FORK	01	
03	0501110625	BEARING ARTICULATION WHEEL	02	
04	0503013232	1/2" BOLT	08	
05	0503010019	1/2" SPRING WASHER	08	
06	0561013021	BEARING INNER LOK	02	
07	0561013022	BEARING EXTERNAL LOCK	02	
08	0503010398	501082 CLAMPING RING (FOR AXLE)	02	
09	0561013020	KM 12 NUT	02	
10	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 10 BOX	01	
11	0591010589	BODY LOCK WHEEL	02	
12	0503010027	5/8" SPRING WASHER	02	
13	0503011188	M16 X 2 X 50 BOLT	02	
14	0502012400	ROW FERTILIZER FIXER	01	
15	0503010797	3/4" X 4" BOLT	02	
16	0503011255	3/4" LOCK NUT	02	
17	0501010322	FLAT WASHER	02	

CHAIN TENSIONER ASSY


0501048672

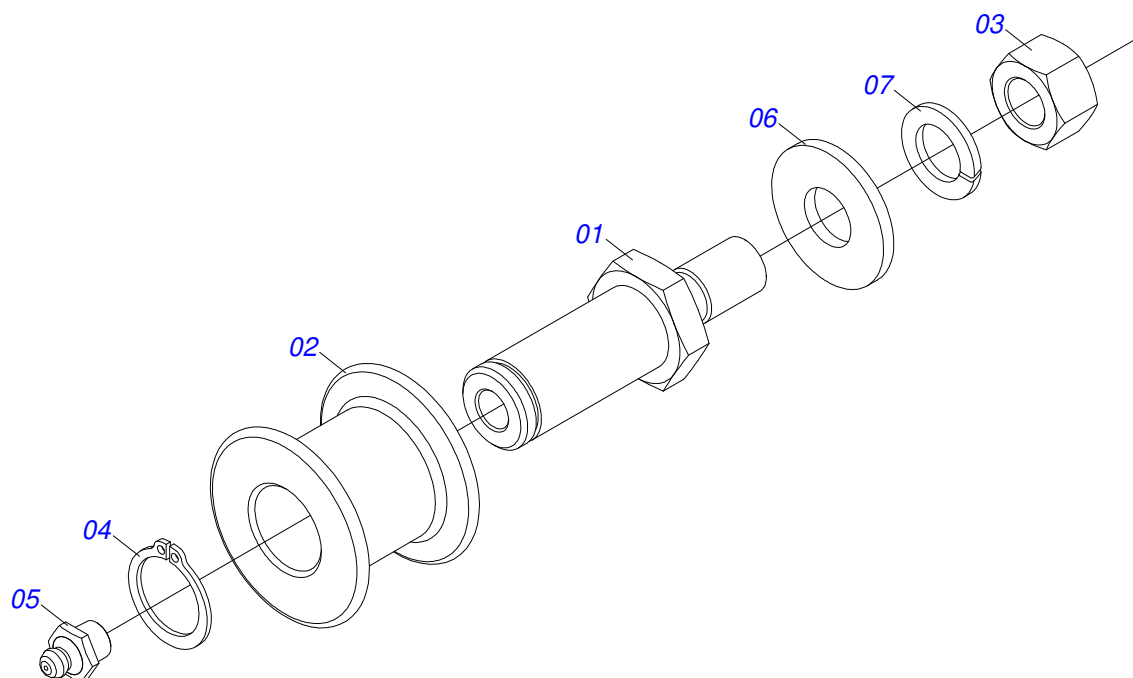


Item	Code	Description	See page	QT
01	0521012529	CHAIN TIGHTENER AXLE		01
02	0503030402	PULLEY		01
03	0503010060	1/2" NUT		01
04	0503010302	501019 SEAL RING		01
05	0503010002	1800 GREASE FITTING		01
06	0511017302	FLAT WASHER		02
07	0503010019	1/2" SPRING WASHER		01

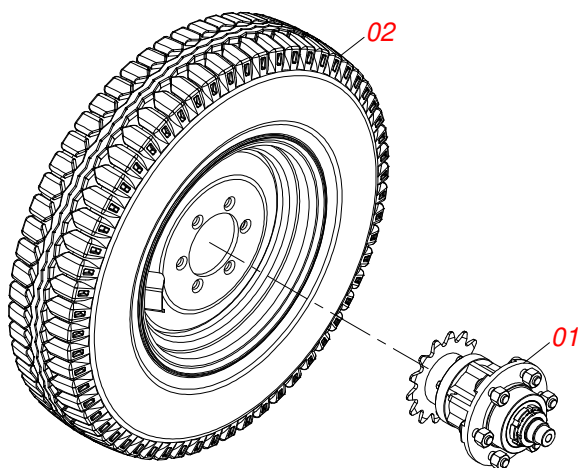


Item	Code	Description	See page	QT
01	0511052766	CARRYING WHEEL HUB ASSY	11	01
02	0503062158	EEE WHEEL WITH TIRE 700 X 16-10L ASSY	12	01

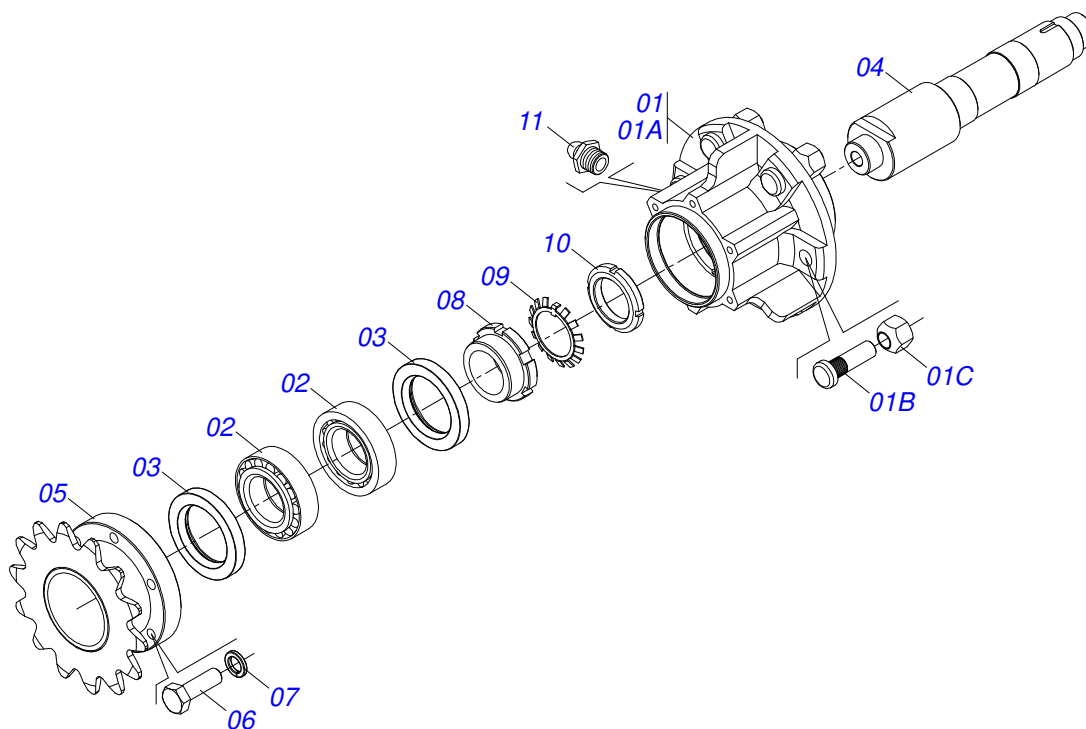


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503010328	25590/25523 ROLLER BEARING		02
03	0503010804	00547-B SEAL		02
04	0521018363	00547-B SEAL		01
05	0511062015	14Z GEAR WITH FLANGE		01
06	0503010421	5/16" X 1-1/2" BOLT		06
07	0503011444	SPRING WASHER		06
08	0511015949	LOCK NUT		01
09	0503010329	LOCK WASHER		01
10	0503010330	KM 9 LOCKNUT		01
11	0503010002	1800 GREASE FITTING		01

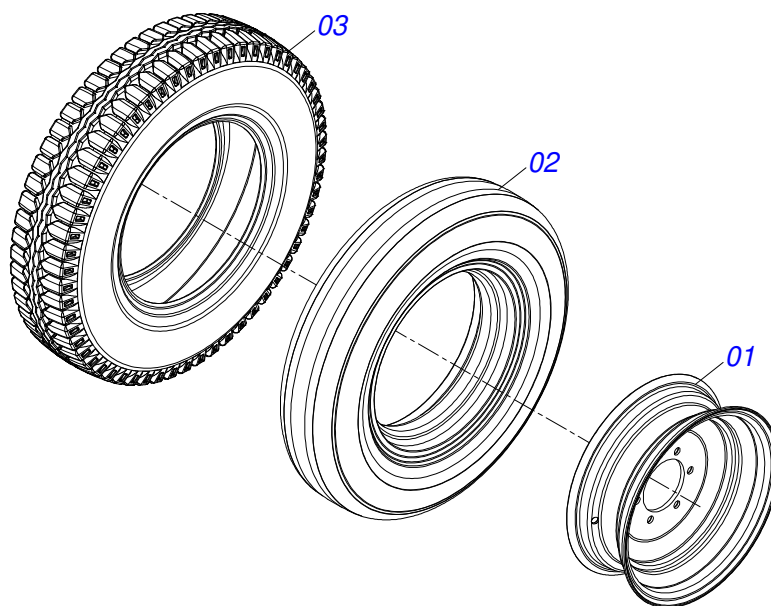

Item	Code	Description	See page	QT
01	0503016518	RUEDA		01
02	0503012114	7.00 X 16 INNER TIRE		01
03	0503012113	PLY TIRE		01

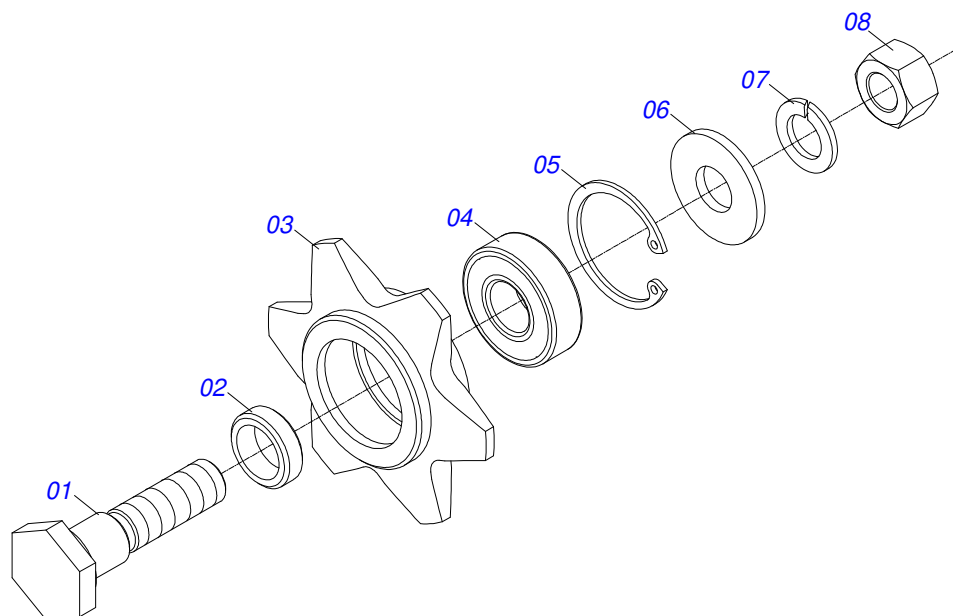


Item	Code	Description	See page	QT
01	0531012640	AXLE CHAIN TIGHTENER		01
02	0531012678	4.5" X 0.9" X 0.2" SLEEVE		01
03	0502012853	GEAR		01
04	0503012882	BEARING		01
05	0503011945	503050 CLAMPING RING (FOR AXLE)		01
06	0511017302	FLAT WASHER		01
07	0503010019	1/2" SPRING WASHER		01
08	0503010060	1/2" NUT		01

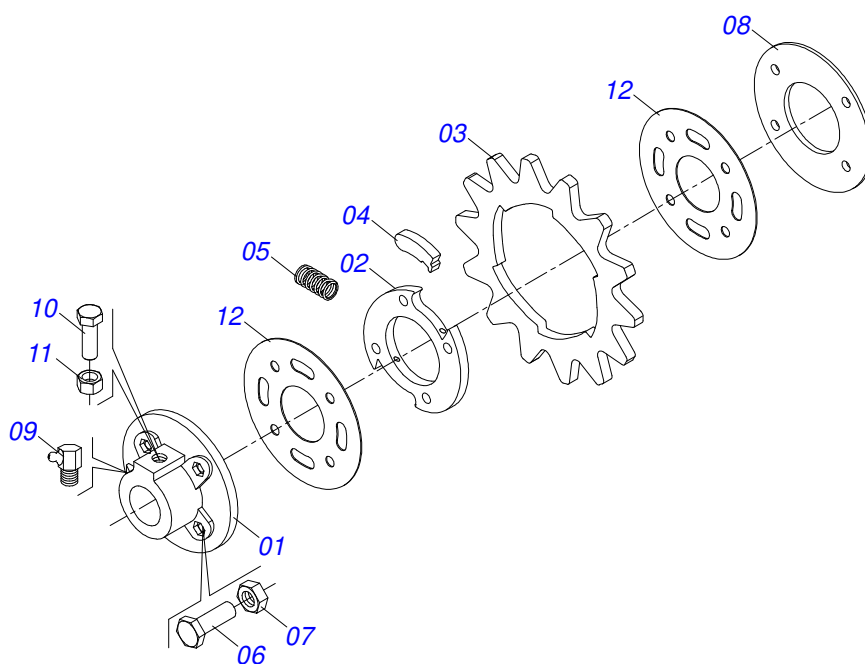

Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

ASSY TRANSMISSION

0909096322

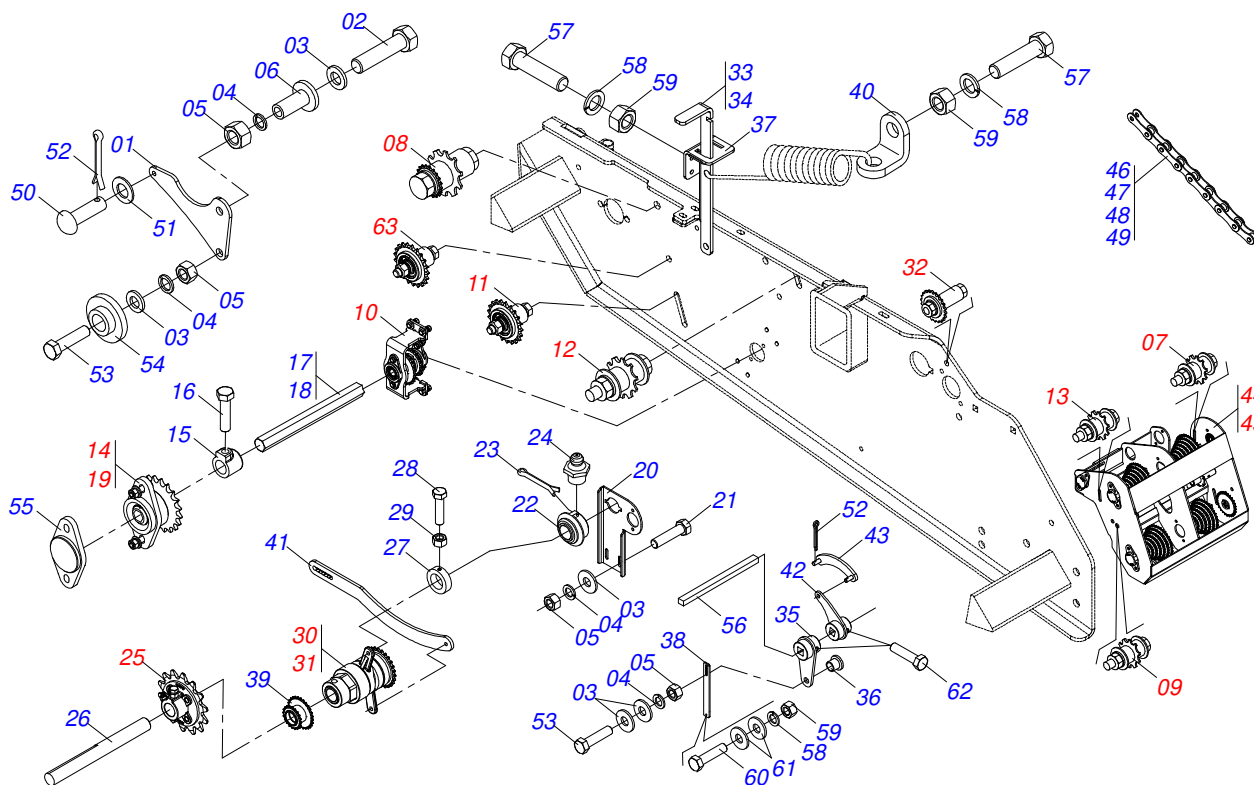


Item	Code	Description	See page	QT
01	0561017281	ARTICULACION ARM		01
02	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
03	0511017302	FLAT WASHER		10
04	0503010019	1/2" SPRING WASHER		10
05	0503010060	1/2" NUT		10
06	0561018212	ARTICULAT SLEEVE		02
07	0501054686	GEAR BOX CHAIN TENSIONER	16	02
08	0511050385	BEARING DOUBLE GEAR	17	02
09	0501058265	STRETCHER LOWER CURRENT 21Z SEED	18	02
10	0501053846	MIDDLE BEARING OF THE TRANSMISSION	19	02
11	0501053126	FERTILIZER CHAIN TENSIONER ASSY	21	02
12	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	22	02
13	0501048672	CHAIN TENSIONER ASSY	9	02
14	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	23	02
15	0511063123	BUSHING WITH NUT		02
16	0503010834	1/2 X 1 BOLT		02
17	0531016946	5/8" X 114" AXLE HEX		01
18	0531016947	LEFT 5/8" X 108" AXLE HEX		01
19	0501053610	BEARING WITH 17Z GEAR INNER AXLE	25	02
20	0561017269	MOTOR AXLE BEARING SUPPORT		04
21	0503010920	1/2" X 1.1/2" BOLT		08
22	0501110639	BEARING		08
23	0503010257	1/8" X 1" COTTERPIN		08
24	0503010002	1800 GREASE FITTING		08
25	0511051434	TRANSMISSION ACTUATOR	14	04
26	0561016881	MOTOR SHAFT		02
27	0511015961	LOCK BUSHING		04
28	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
29	0503010060	1/2" NUT		04
30	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	26	01
31	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	27	01


ASSY TRANSMISSION

0909096322


Item	Code	Description	See page	QT
32	0501058236	BEARING WITH 21Z GEAR	28	04
33	0521061866	RH LEVER DISASSEMBLE (COP)		01
34	0521061867	LH LEVER DISASSEMBLE (COP)		01
35	0521061847	AXLE ADIVING ASSY		02
36	0561016797	SLEEVE UNION LEVER		02
37	0561017275	LEVER FIXER		02
38	0561017270	DISASSEMBLE LEVER		02
39	0521061843	20Z DOBLE GEAR		01
40	0561017273	FIXER SPRING		02
41	0561017282	LOWER LEVER		02
42	0521061852	LEVER RATCHET		02
43	0521061849	DISASSEMBLE LEVER		02
44	0511048939	ASSY RIGHT EXCHANGE	29	01
45	0511048940	LEFT ASSY EXCHANGE	30	01
46	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		02
47	0503013253	40-1 X CHAIN X 116 LINK+REDECTION		02
48	0503011721	40-1 CHAIN X 122 LINK + REDUCTION		02
49	0503015960	CHAIN 40-1 X 102 LINKS + REDUCTION		02
50	0521010773	0.37" X 1.18" COUPLING SHAFT		02
51	0501010984	FLAT WASHER		02
52	0503010140	1/8" X 3/4" COTTERPIN		04
53	0503011082	C1/2" X 1.3/4" SCREW		06
54	0561016797	SLEEVE UNION LEVER		02
55	0561014215	BEARING COVER LOWER ROW FRAME		02
56	0511014218	3/4" X 28.7"SQUARE SHAFT		02
57	0503010237	3/8" X 1" BOLT		04
58	0503010025	3/8" SPRING WASHER		04
59	0503010026	3/8" NUT		04
60	0501010096	3/8" X 2" BOLT		02
61	0501010984	FLAT WASHER		04
62	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
63	0511050127	CHAIN TENSIONER SUPPORT	39	04

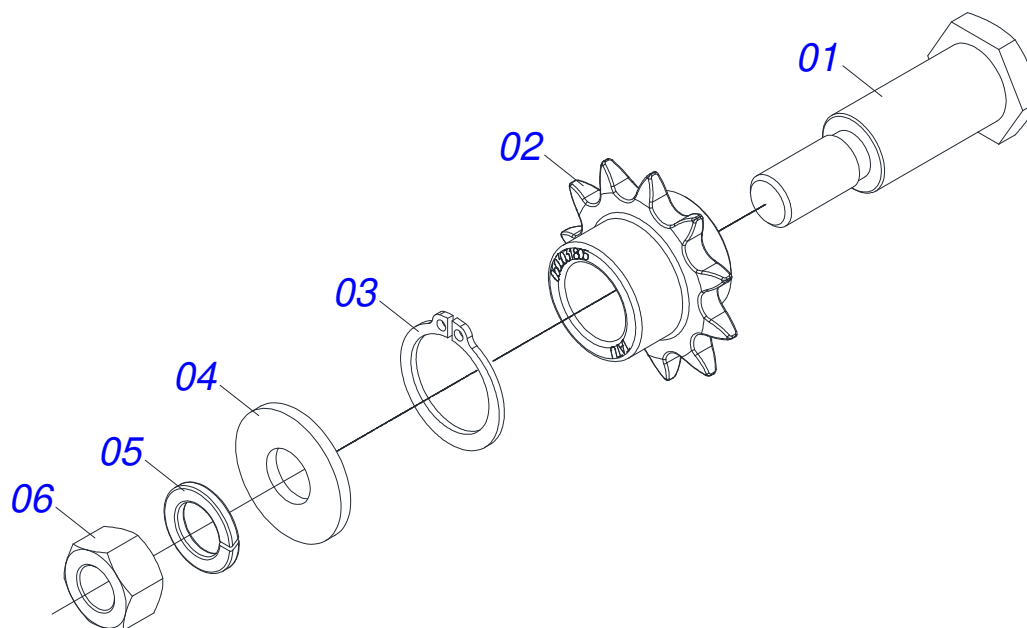


Item	Code	Description	See page	QT
001	0531017202	AXLE CHAIN TIGHTENER		01
002	0503031806	9Z X P 5/8" GEAR		01
003	0503010302	501019 SEAL RING		01
004	0511017302	FLAT WASHER		01
005	0503010019	1/2" SPRING WASHER		01
006	0503010060	1/2" NUT		01

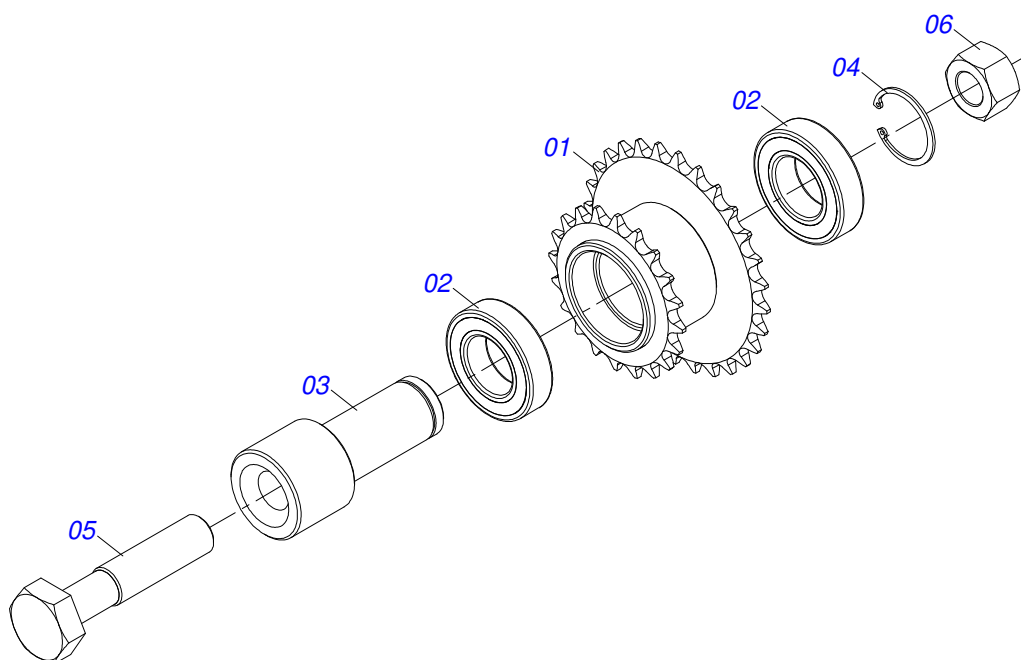


Item	Code	Description	See page	QT
01	0521061843	20Z DOBLE GEAR		01
02	0503011410	ROLLER BEARING		02
03	0551019175	DOUBLE GEAR AXLE		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0501010163	5/8" X 4-1/2" BOLT		01
06	0503012412	5/8 UNC SELF LOCKING NUT		01

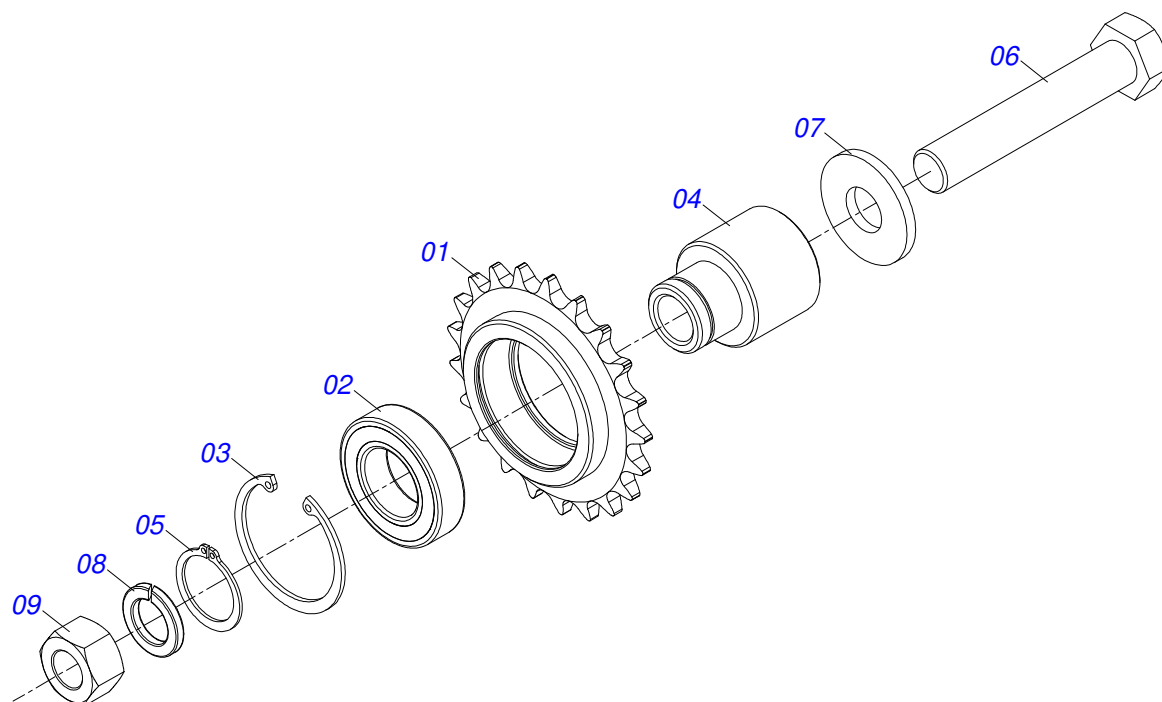


Item	Code	Description	See page	QT
01	0521069698	GEAR 21Z P 1/2		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
07	0501012140	FLAT WASHER		01
08	0503010027	5/8" SPRING WASHER		01
09	0503010013	5/8" NUT		01

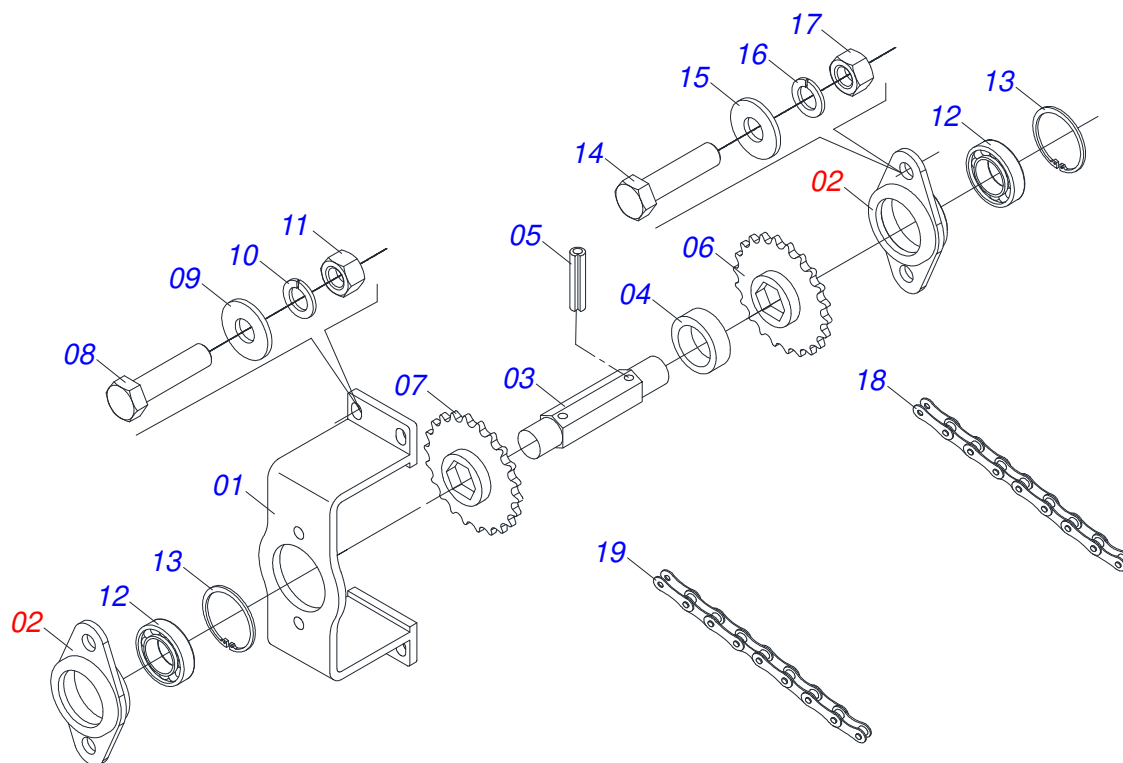


Item	Code	Description	See page
01	0511063266	INTERMEDIARY BEARING SUPPORT	01
02	0501052775	ROW SEED BEARING	20 02
03	0531013674	INTERMEDIATE AXLE	01
04	0541011184	1.1" X 2" X 0.7" SLEEVE	01
05	0503010292	0.2" X 1.6" SPRING PIN	02
06	0511063268	20Z P1/2" GEAR FOR HEX AXLE, 1"	01
07	0511063267	26Z P1/2" GEAR FOR HEX AXLE, 1"	01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	04
09	0501010984	FLAT WASHER	04
10	0503010025	3/8" SPRING WASHER	04
11	0503010026	3/8" NUT	04
12	0503011410	ROLLER BEARING	02
13	0503011105	SEAL RING	02
14	0503010371	5/16" X 1" BOLT	04
15	0501010694	FLAT WASHER	04
16	0503010179	LOCK WASHER	04
17	0503010337	5/16" NUT	04
18	0503012717	40-1 CHAIN X 101 LINK + MENDING	01
19	0503012718	40-1 CHAIN X 111 LINK + MENDING	01

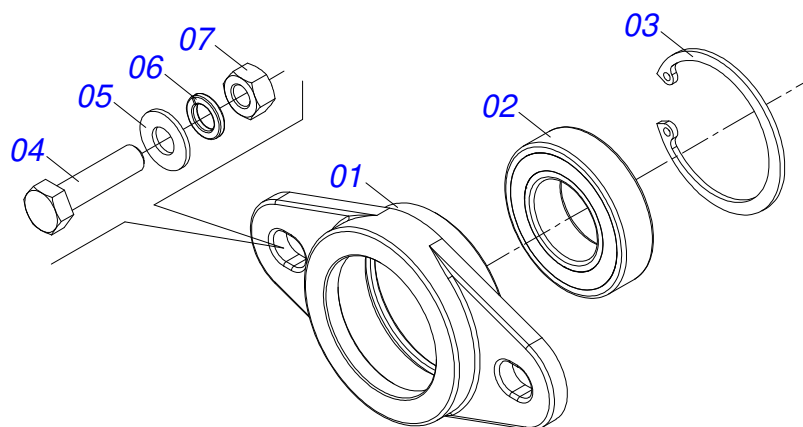


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503010371	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER		02
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

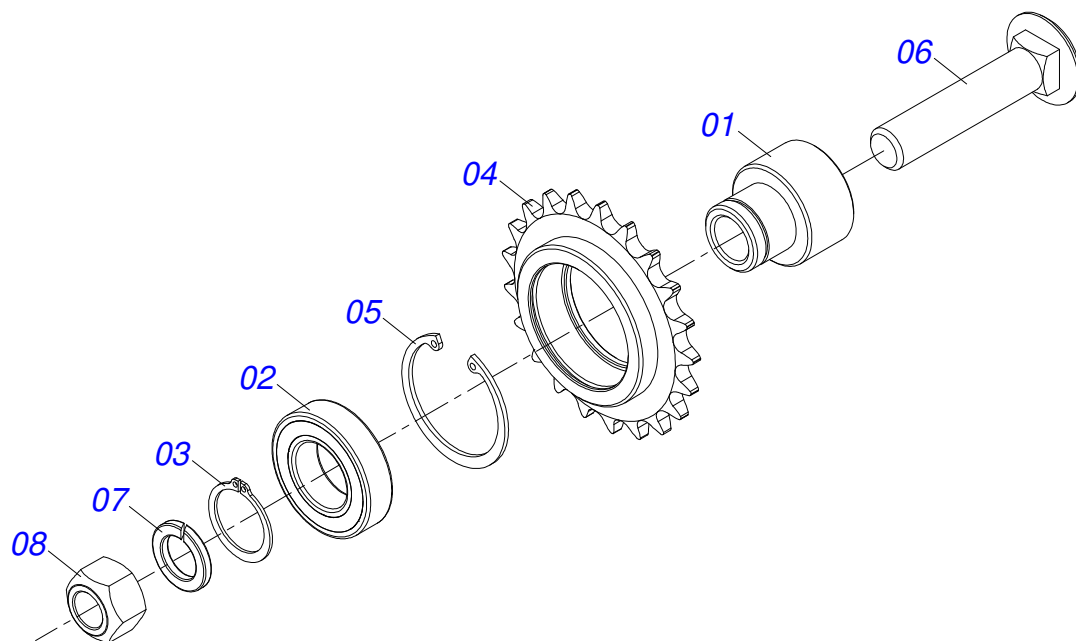


Item	Code	Description	See page	QT
01	0521018415	TIGHTENER AXLE		01
02	0503011410	ROLLER BEARING		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0521069698	GEAR 21Z P 1/2		01
05	0503011105	SEAL RING		01
06	0501011234	5/8" X 3" BOLT		01
07	0503010027	5/8" SPRING WASHER		01
08	0503012412	5/8 UNC SELF LOCKING NUT		01

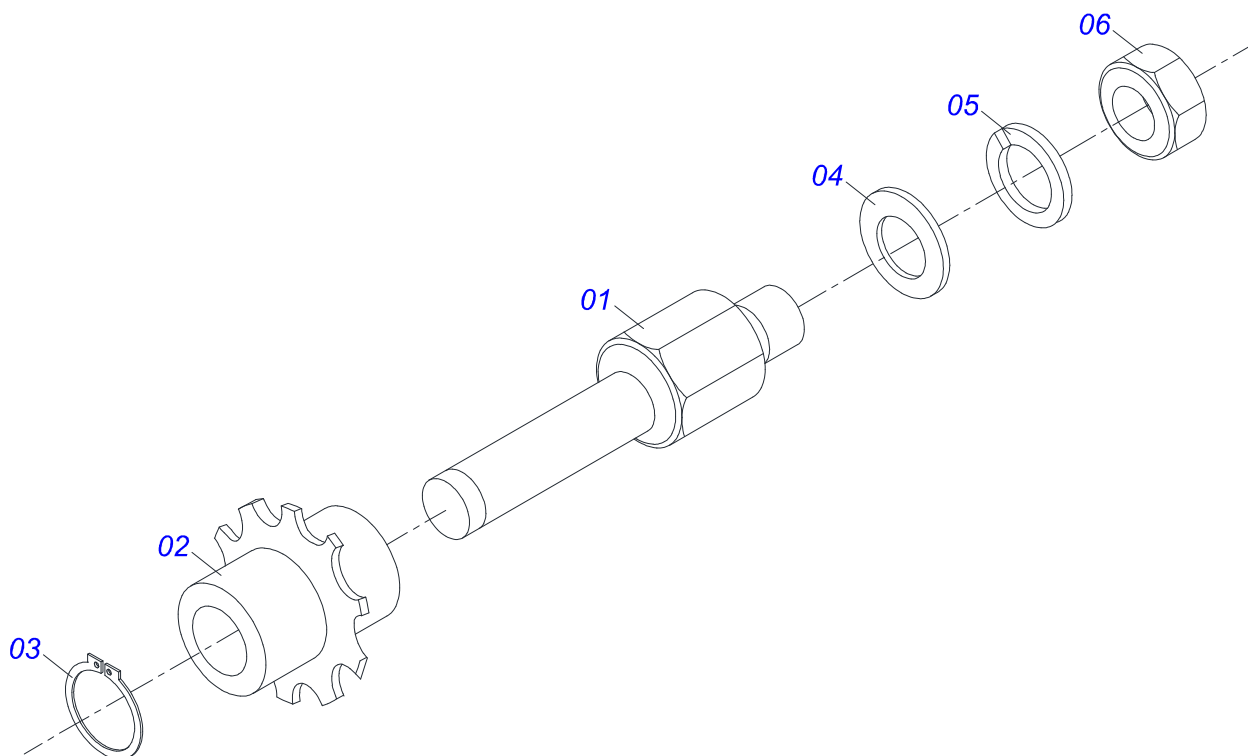


Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

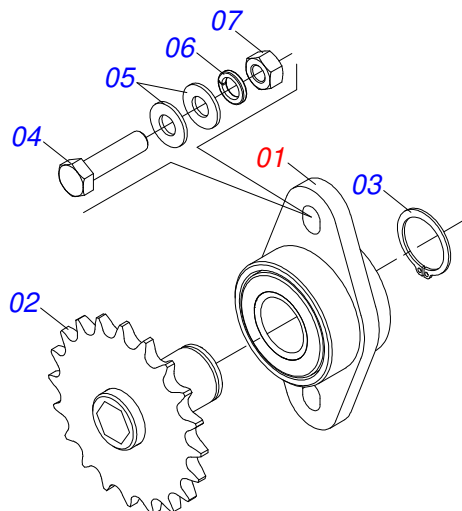

Item	Code	Description	See page	QT
01	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	24	01
02	0511063106	20Z AXLE BEARING DOBLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0503010365	NUT		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

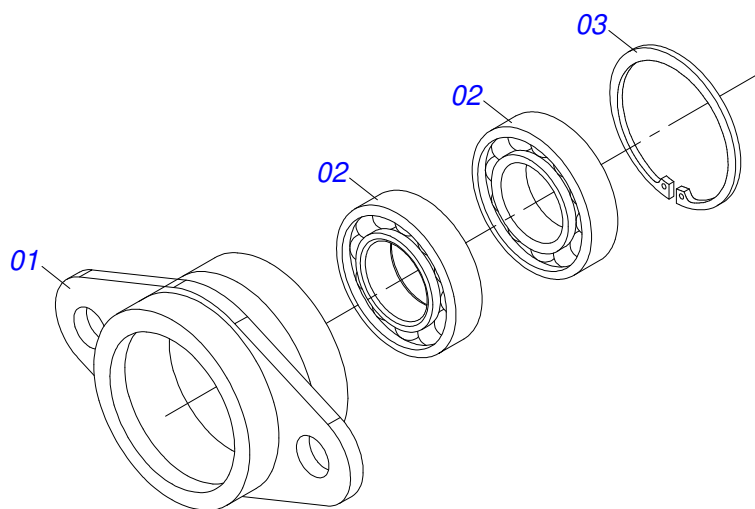


Item	Code	Description	See page	QT
01	0502011987	DOUBLE HOUSING BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01

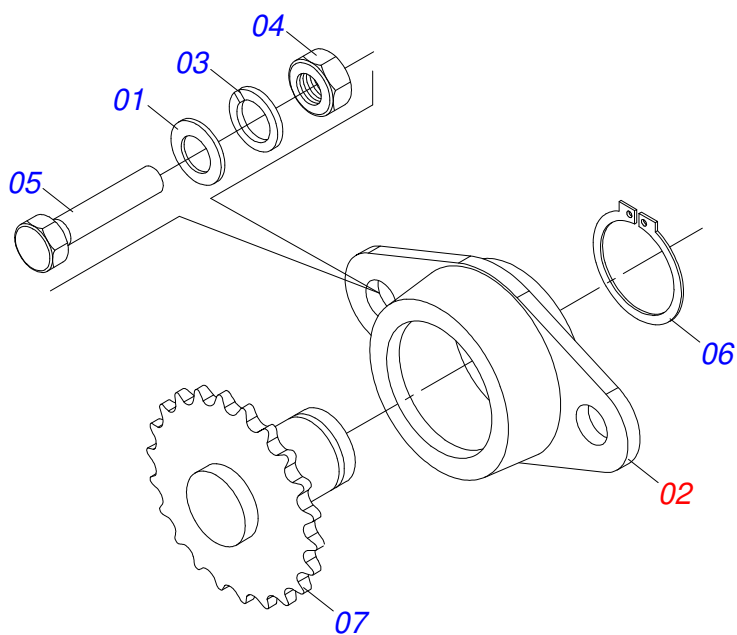


Item	Code	Description	See page
01	0501010694	FLAT WASHER	02
02	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	24 01
03	0503010179	LOCK WASHER	02
04	0503010337	5/16" NUT	02
05	0503010371	5/16" X 1" BOLT	02
06	0503010406	501025 CLAMPING RING (FOR AXLE)	01
07	0511062626	MIDDLE BEARING AXLE	01

RIGHT SIDE TRANSMISSION ACTUATOR


0511047069

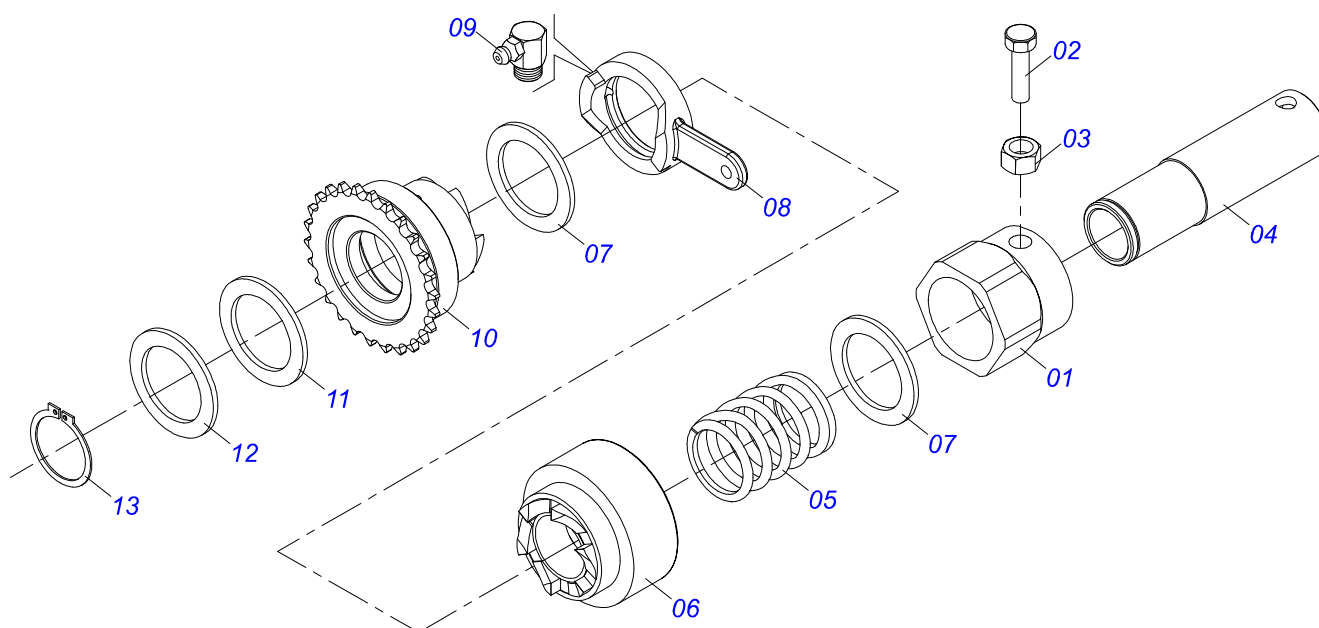


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

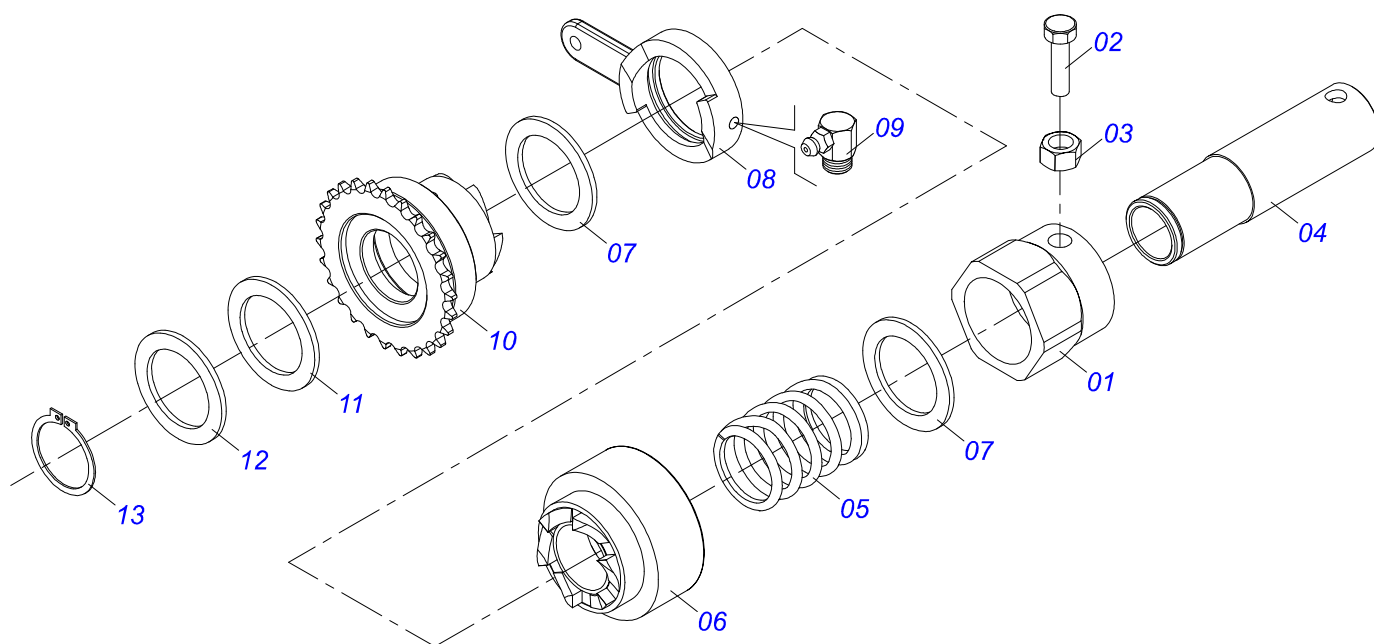

Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

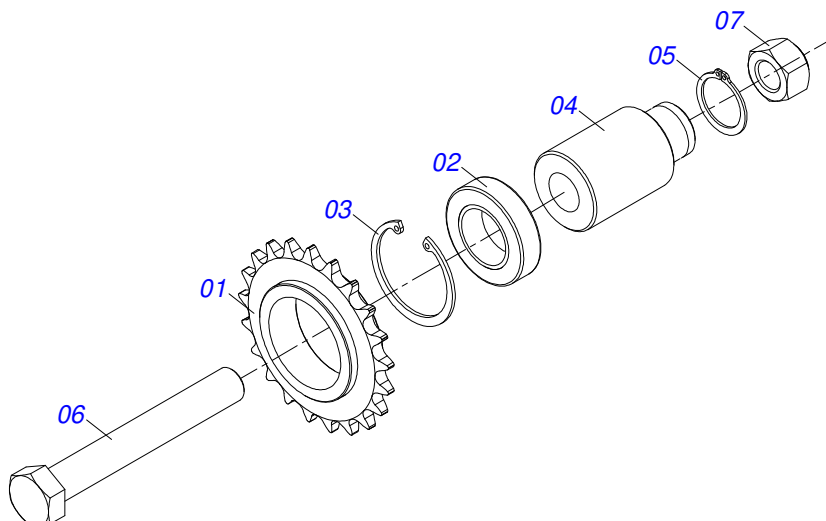

Item	Code	Description	See page	QT
01	0511062169	21Z P 1/2" GEAR		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0551019171	CHAIN TIGHTENER AXLE		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0501010163	5/8" X 4-1/2" BOLT		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01

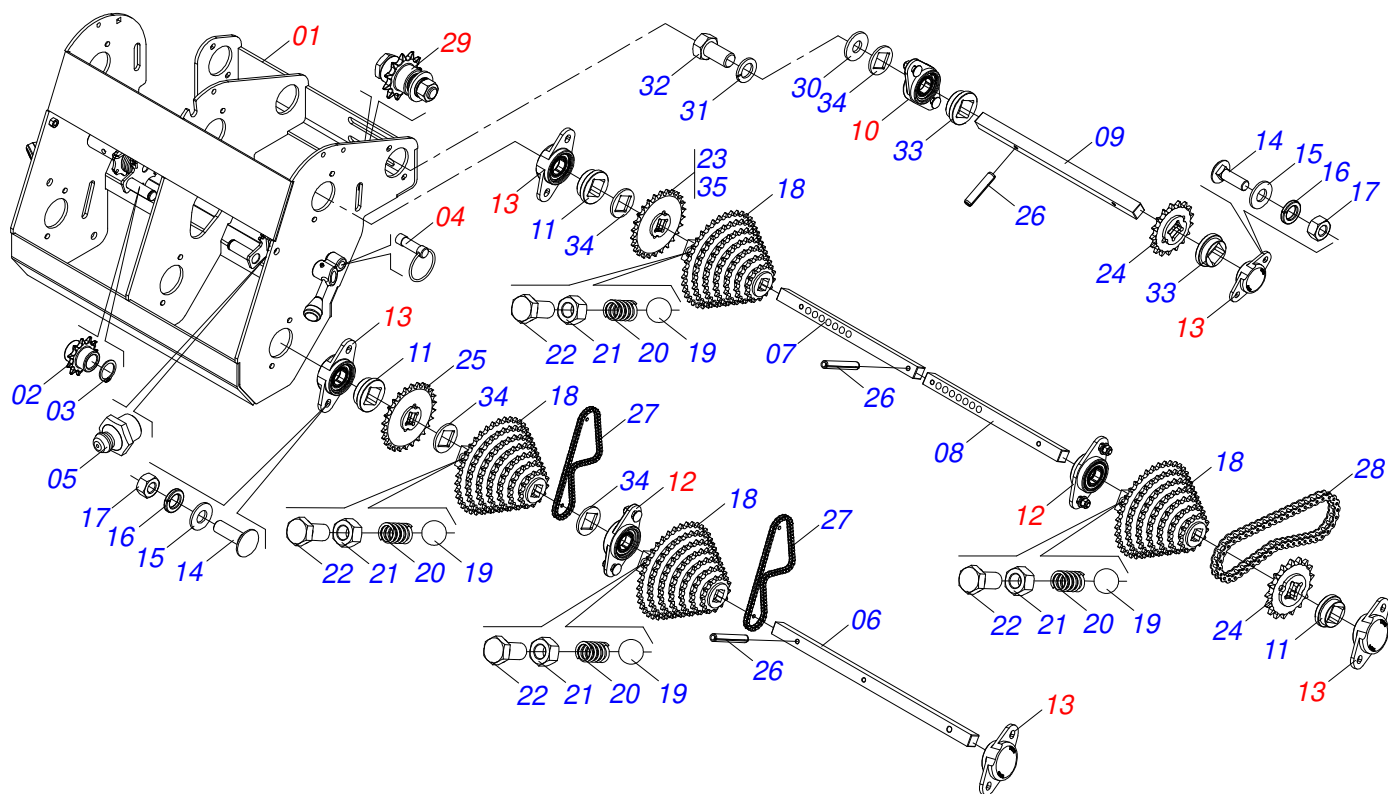


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	31	01
02	0503031805	11Z 1/2" GEAR		04
03	0503010302	501019 SEAL RING		04
04	0501048790	AXLE WITH RING	32	02
05	0503010002	1800 GREASE FITTING		02
06	0551018209	DRIVING AXLE		01
07	0521018259	DRIVEN AXLE		01
08	0551018210	DRIVEN AXLE		01
09	0551018211	INTERM SHAFT		01
10	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	33	01
11	0503030303	SUPPORT WASHER		05
12	0501056443	GEAR HOUSING BEARING	34	02
13	0501056271	GEARBOX CLOSED BEARING	36	05
14	0503011953	5/16" X 1" BOLT		10
15	0501010694	FLAT WASHER		10
16	0503010179	LOCK WASHER		10
17	0503010337	5/16" NUT		10
18	0511060396	DRIVE/DRIVEN AXLE CONE		04
19	0503012389	1/2 BALL		04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
21	0503010060	1/2" NUT		04
22	0503010395	1/2" X 1-1/4" BOLT		04
23	0511061759	22Z P12,70 FQ 3/4" GEAR		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0511067501	26Z GEAR		01
26	0503010292	0.2" X 1.6" SPRING PIN		07
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0501054655	CHAIN TENSIONER ASSY	37	02
30	0501010984	FLAT WASHER		01
31	0503010025	3/8" SPRING WASHER		01

**ASSY RIGHT EXCHANGE**

0511048939

Item	Code	Description	See page	QT
32	0503010256	3/8" X 3/4" BOLT		01
33	0503030303	SUPPORT WASHER		03
34	0521018630	1.4" X SQUARE 0.8" WASHER		06
35	0511061822	25Z P0.5" GEAR SQUARE HOL		01

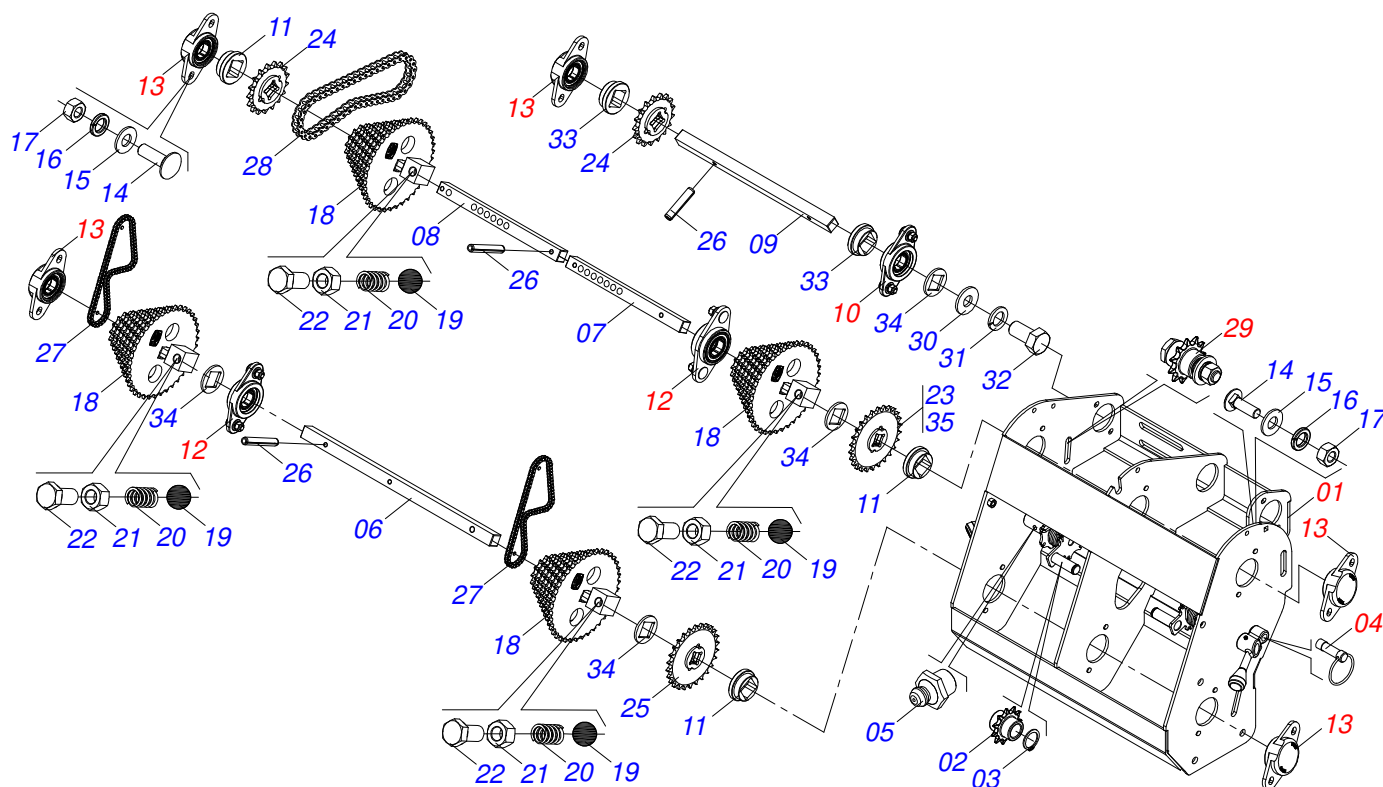


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	38	01
02	0503031805	11Z 1/2" GEAR		04
03	0503010302	501019 SEAL RING		04
04	0501048790	AXLE WITH RING	32	02
05	0503010002	1800 GREASE FITTING		02
06	0551018209	DRIVING AXLE		01
07	0521018259	DRIVEN AXLE		01
08	0551018210	DRIVEN AXLE		01
09	0551018211	INTERM SHAFT		01
10	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	33	01
11	0503030303	SUPPORT WASHER		05
12	0501056443	GEAR HOUSING BEARING	34	02
13	0501056271	GEARBOX CLOSED BEARING	36	05
14	0503011953	5/16" X 1" BOLT		10
15	0501010694	FLAT WASHER		10
16	0503010179	LOCK WASHER		10
17	0503010337	5/16" NUT		10
18	0511060396	DRIVE/DRIVEN AXLE CONE		04
19	0503012389	1/2 BALL		04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
21	0503010060	1/2" NUT		04
22	0503010395	1/2" X 1-1/4" BOLT		04
23	0511061759	22Z P12,70 FQ 3/4" GEAR		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0511067501	26Z GEAR		01
26	0503010292	0.2" X 1.6" SPRING PIN		07
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0501054655	CHAIN TENSIONER ASSY	37	02
30	0501010984	FLAT WASHER		01
31	0503010025	3/8" SPRING WASHER		01


**LEFT ASSY EXCHANGE**

0511048940


Item	Code	Description	See page	QT
32	0503010256	3/8" X 3/4" BOLT		01
33	0503030303	SUPPORT WASHER		03
34	0521018630	1.4" X SQUARE 0.8" WASHER		06
35	0511061822	25Z P0.5" GEAR SQUARE HOL		01

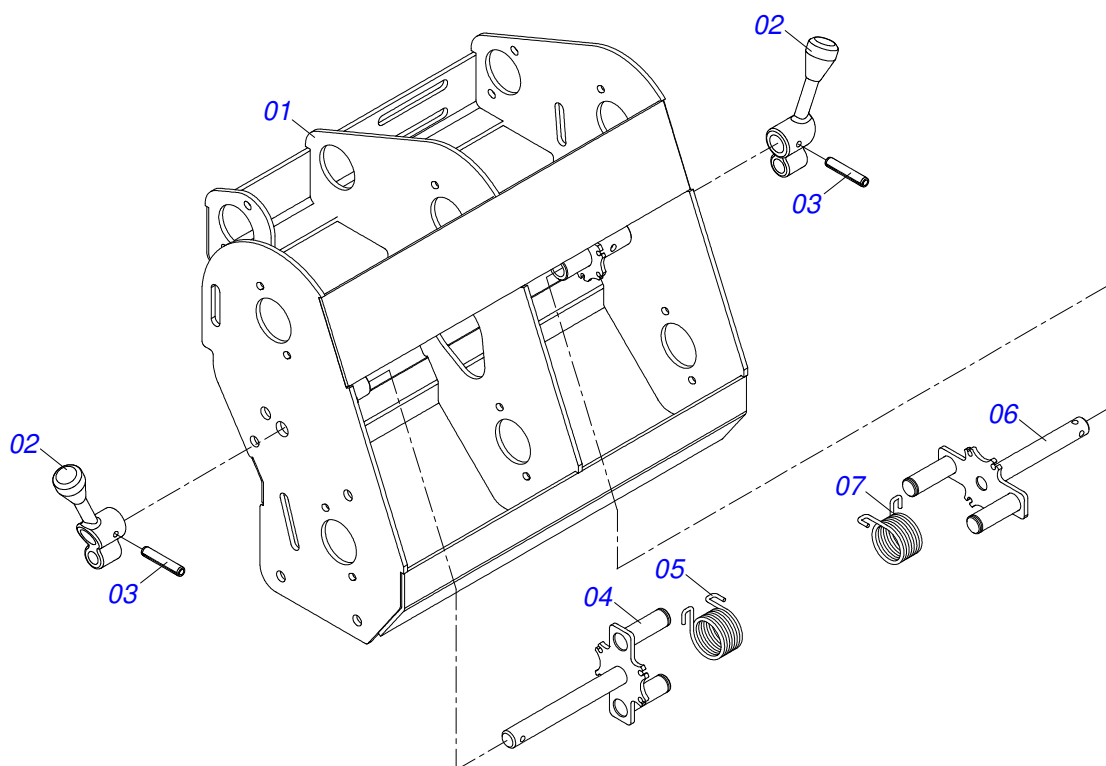


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX	01	
02	0502011758	REAR TENSIONER LEVER	02	
03	0503010292	0.2" X 1.6" SPRING PIN	02	
04	0511061794	CHAIN TENSIONER	01	
05	0503031367	SPRING	01	
06	0511060392	CHAIN TENSIONER	01	
07	0503031366	RIGHT TWISTED SPRING RECAMBIO	01	

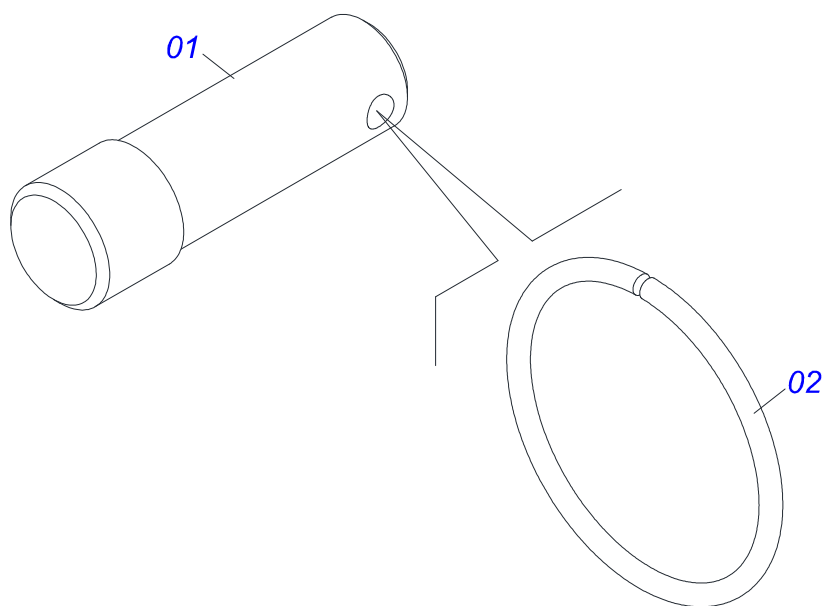


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

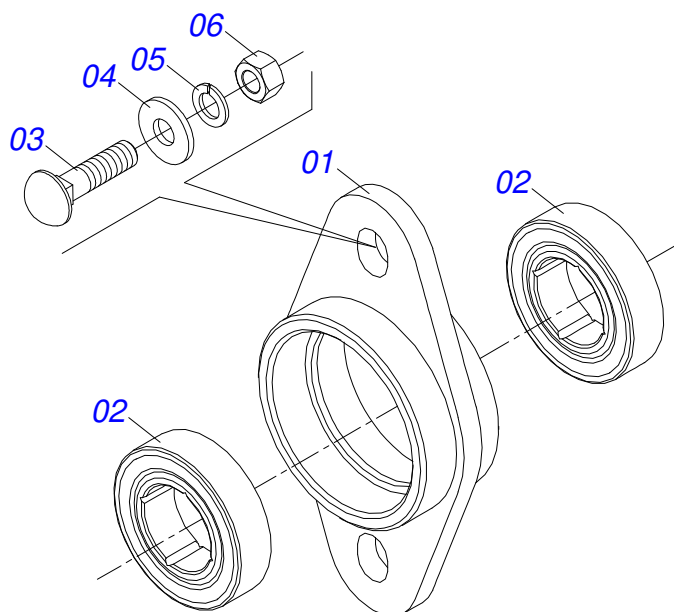


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER		02
06	0503010337	5/16" NUT		02

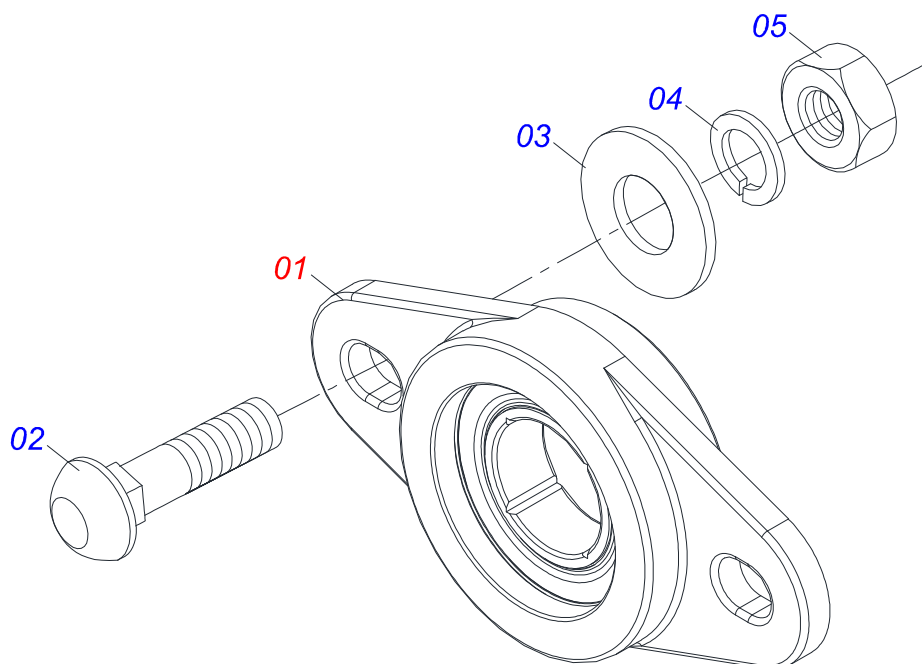


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	35	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

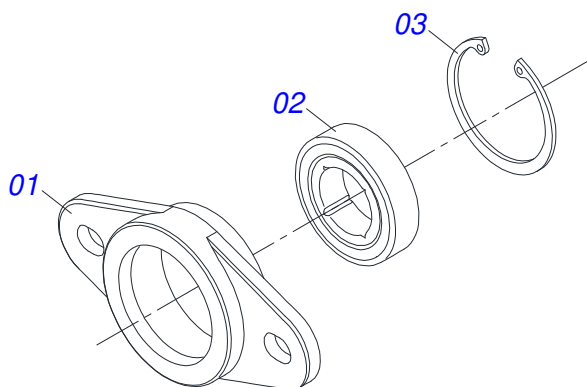

Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

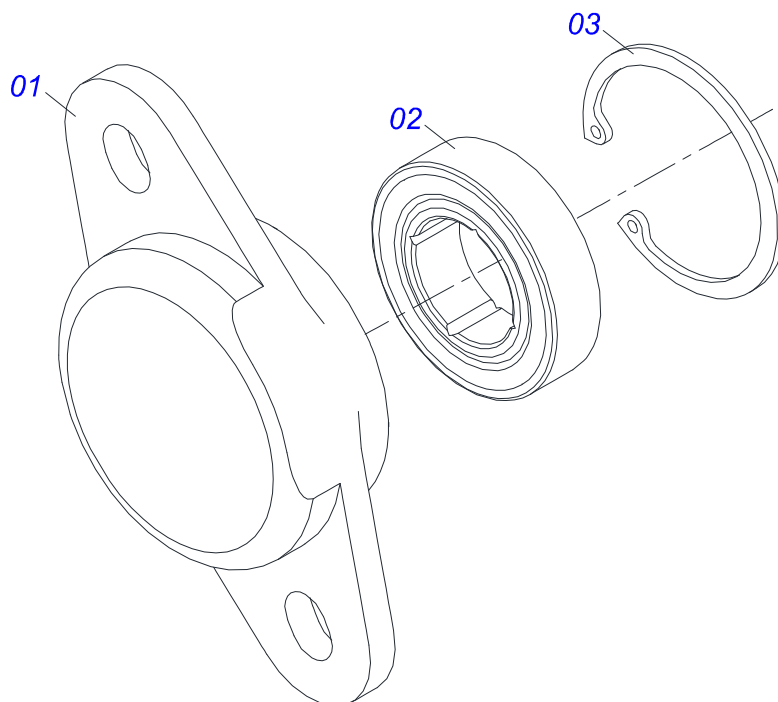


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

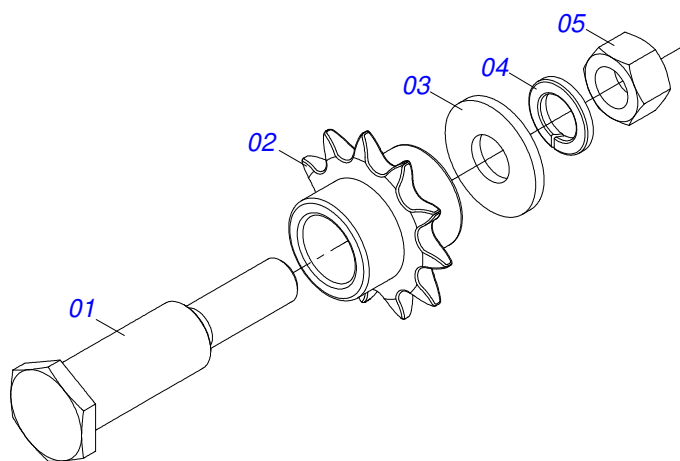


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

LH GEAR BOX


0501058213

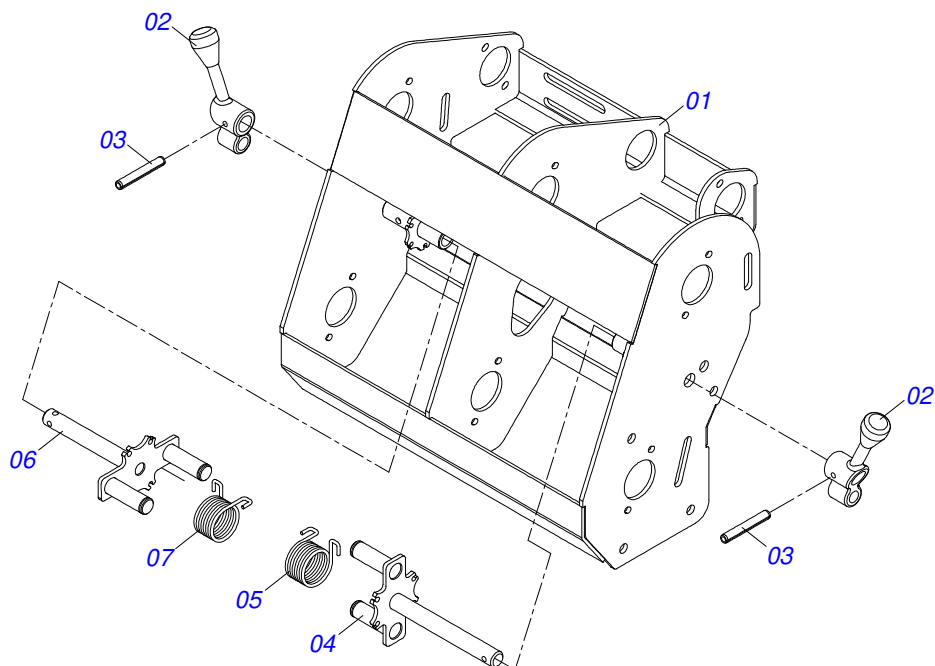


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

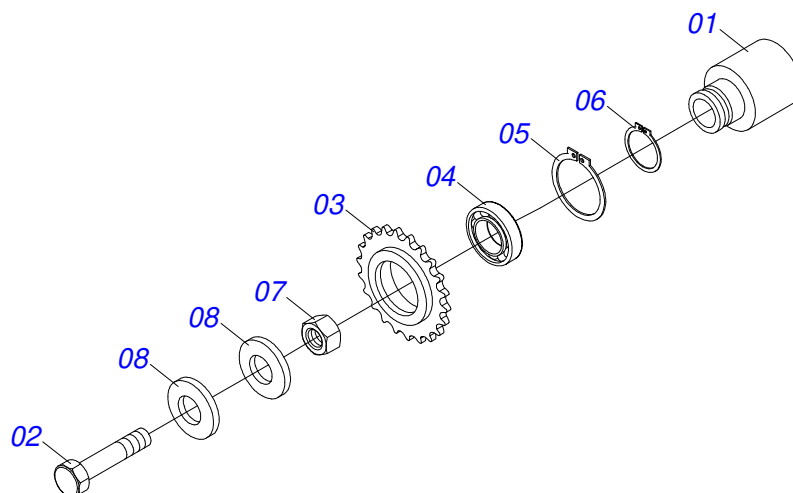


Item	Code	Description	See page	QT
01	0561015677	CHAIN TIGHTENER AXLE		01
02	0501010452	5/8" X 5" BOLT		01
03	0521069698	GEAR 21Z P 1/2		01
04	0503011410	ROLLER BEARING		01
05	0503011105	SEAL RING		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01
08	0501012140	FLAT WASHER		02

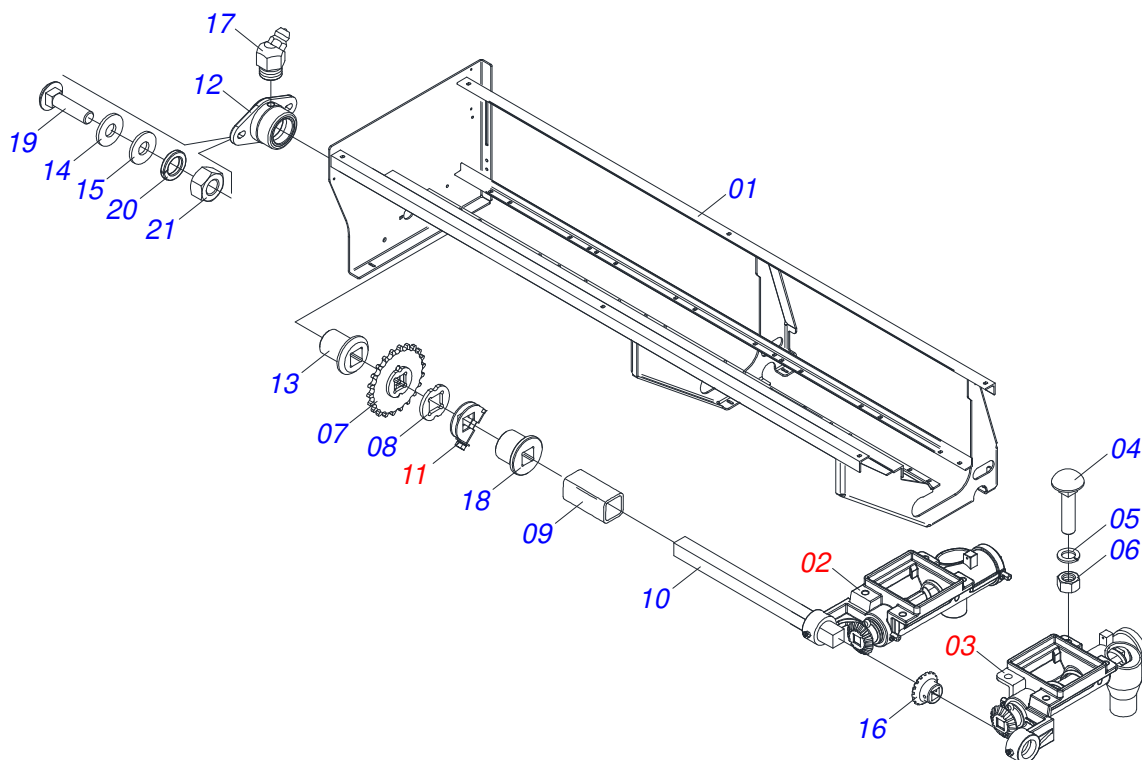


Item	Code	Description	See page	QT
01	0521062274	RH FERTILIZER SILO SUPORT ASSY		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	42	03
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	43	04
04	0501010942	3/8" X 1-1/4" BOLT		28
05	0503011443	3/8" SPRING WASHER		28
06	0503010026	3/8" NUT		28
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0521014167	CONE LOCK		02
09	0551018055	22,65 X 60 SLEEVE		01
10	0561018585	SQUARE SHAFT		01
11	0501053788	3/4 SQUARE AXLE FASTENER	44	02
12	0501110392	SILO SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0501010694	FLAT WASHER		02
15	0521011039	FLAT WASHER		02
16	0502012990	CONICA 14Z SQUARE GEAR		05
17	0503010003	1845 GREASE FITTING		01
18	0503030275	AGRICULTURAL BEARING		05
19	0503011953	5/16" X 1" BOLT		02
20	0503011444	SPRING WASHER		02
21	0503010337	5/16" NUT		02

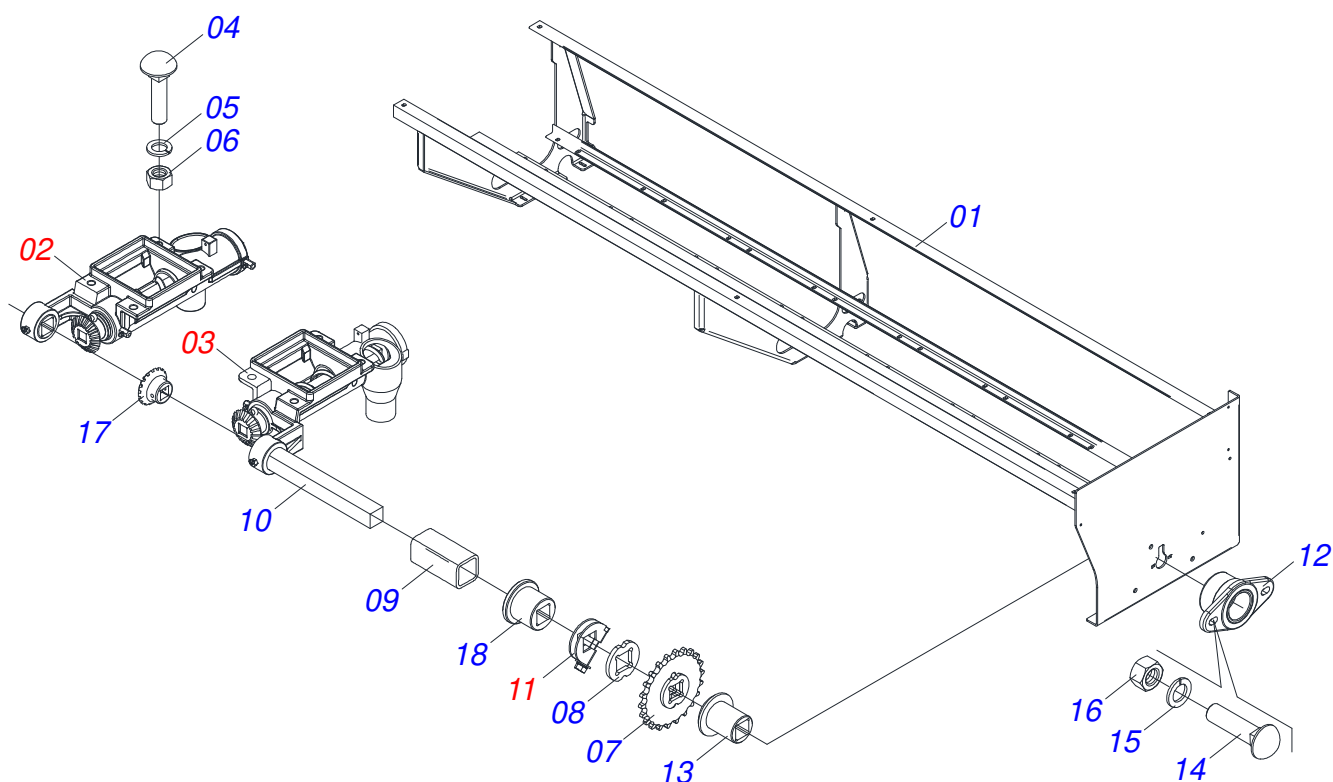


Item	Code	Description	See page	QT
01	0521062273	LH FERTILIZER SILO SUPORT ASSY		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	42	04
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	43	03
04	0501010942	3/8" X 1-1/4" BOLT		28
05	0503011443	3/8" SPRING WASHER		28
06	0503010026	3/8" NUT		28
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0521014167	CONE LOCK		02
09	0551018055	22,65 X 60 SLEEVE		02
10	0561018585	SQUARE SHAFT		01
11	0501053788	3/4 SQUARE AXLE FASTENER	44	02
12	0501110392	SILO SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0503011444	SPRING WASHER		02
16	0503010337	5/16" NUT		02
17	0502012990	CONICA 14Z SQUARE GEAR		07
18	0503030275	AGRICULTURAL BEARING		07

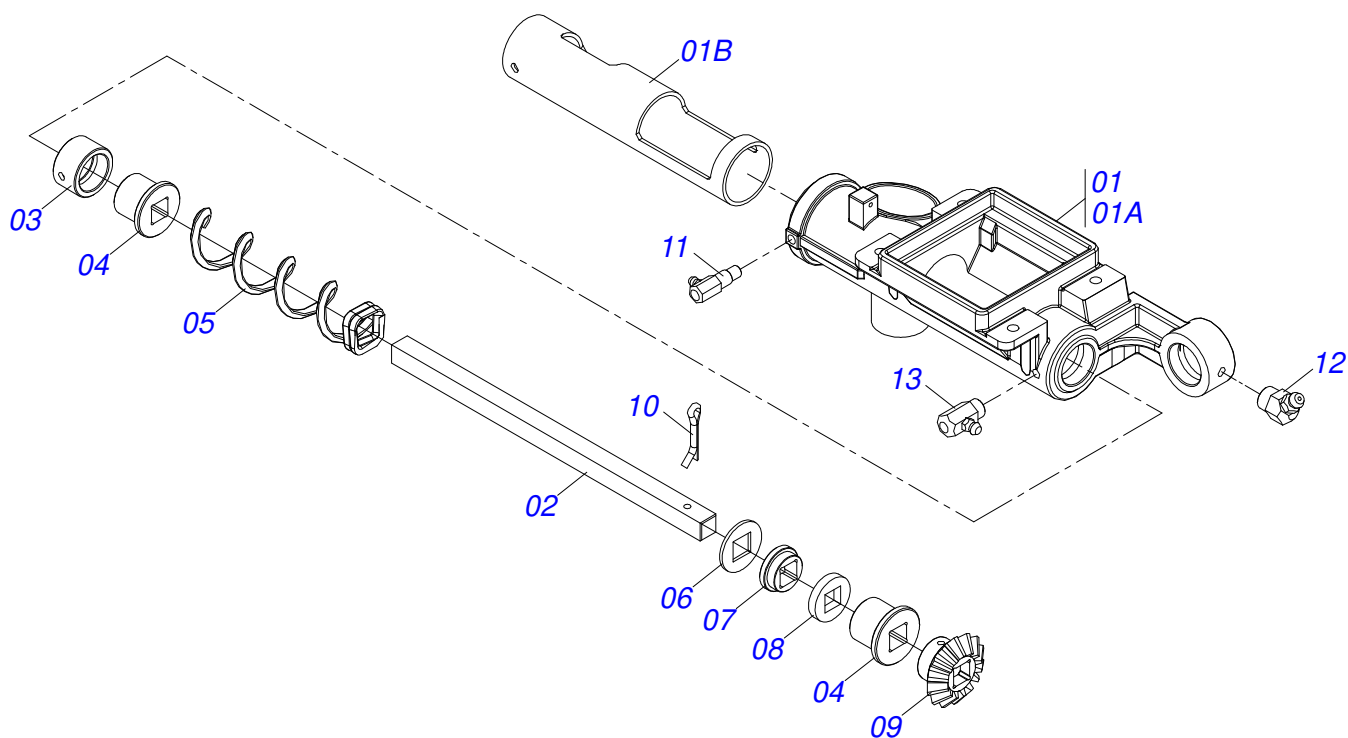


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

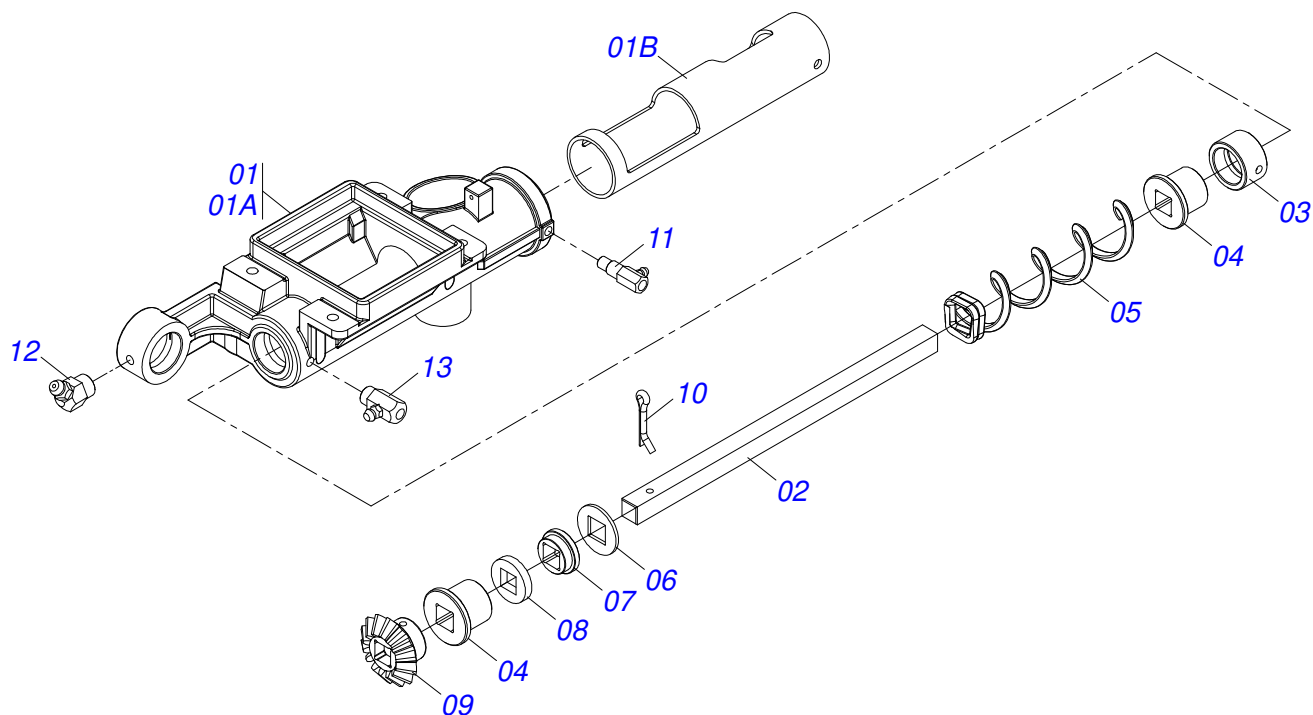


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

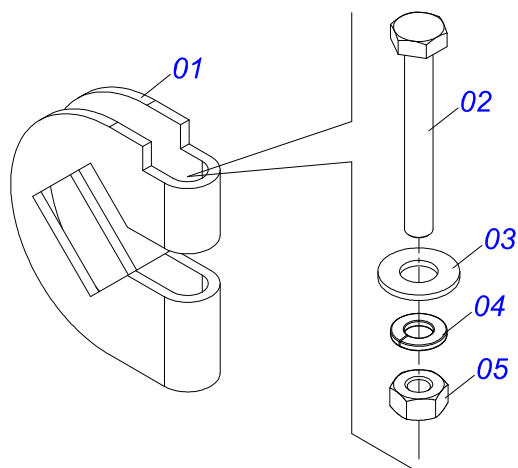

Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

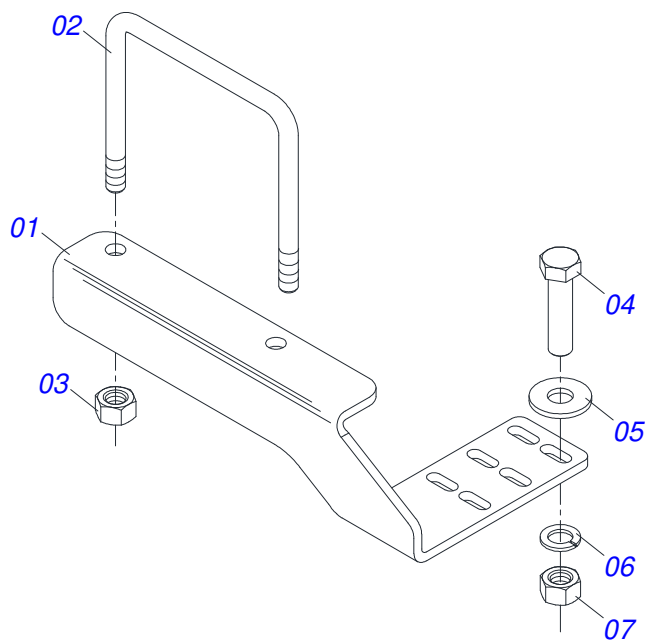


Item	Code	Description	See page	QT
01	0561019899	RIGHT SUPPORT FIXER RECAMBIO		01
02	0521010718	5/8" U BOLT		01
03	0503012412	5/8 UNC SELF LOCKING NUT		02
04	0503011082	C1/2" X 1.3/4" SCREW		02
05	0511017302	FLAT WASHER		04
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2" NUT		02

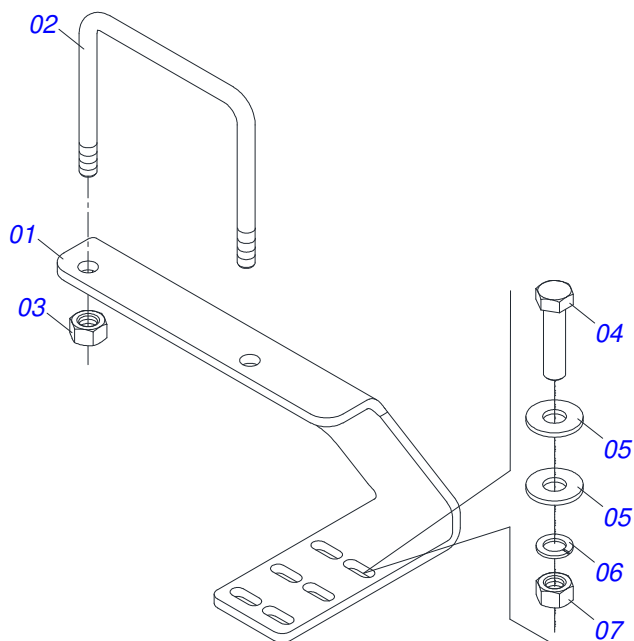


Item	Code	Description	See page	QT
01	0561019898	LEFT SUPPORT FIXER RECAMBIO		01
02	0521010718	5/8" U BOLT		01
03	0503012412	5/8 UNC SELF LOCKING NUT		02
04	0503011082	C1/2" X 1.3/4" SCREW		02
05	0511017302	FLAT WASHER		04
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2" NUT		02

ROW MARKER ASSY

0909091138

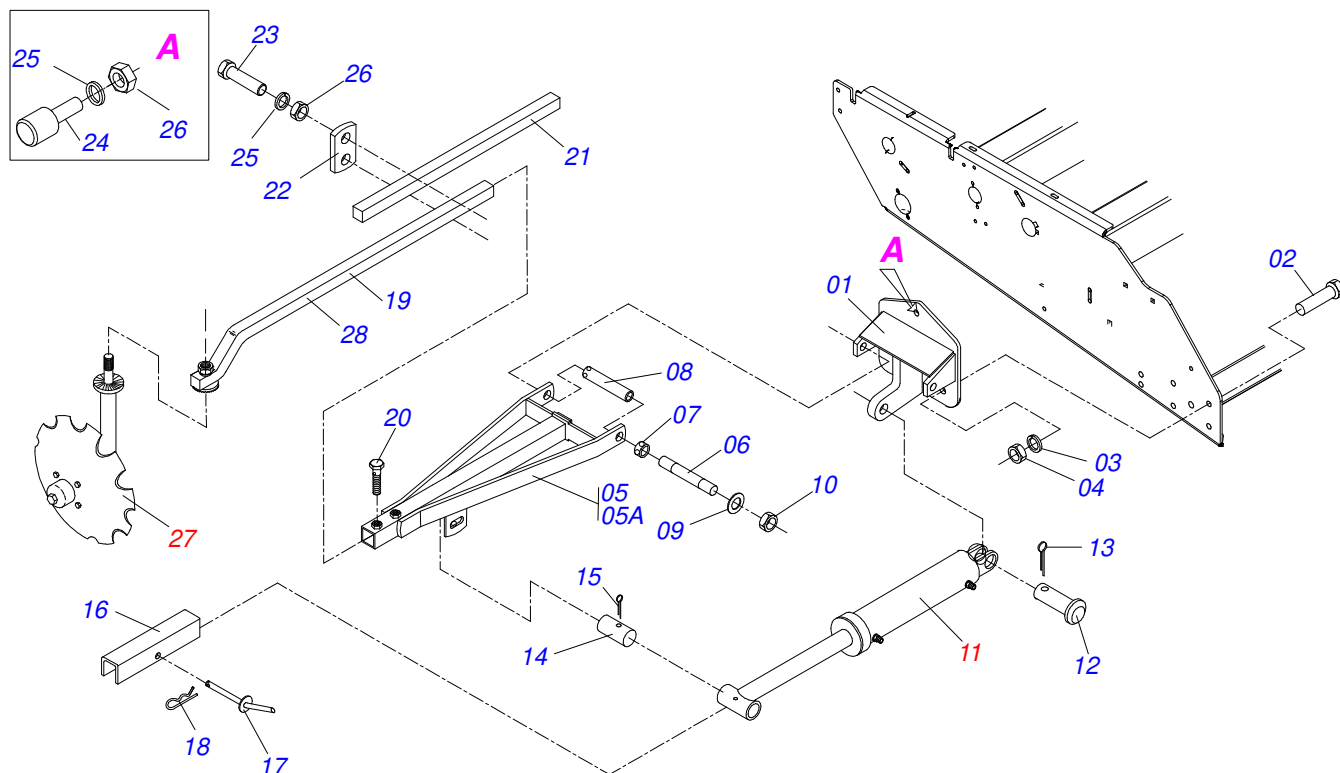


Item	Code	Description	See page	07	09	11	13	15	17
01	0511065449	ROW MARKER ARM SUPPORT		02	02	02	02	02	02
02	0501018059	3/4" X 2-1/4" BOLT		08	08	08	08	08	08
03	0503010023	3/4" SPRING WASHER		08	08	08	08	08	08
04	0503011255	3/4" LOCK NUT		08	08	08	08	08	08
05	0511061811	ROW MARKER ARM			02	02	02	02	
05A	0501069470	ROW MARKER ARM			02	02			
06	0521017686	5/8 UNF X 5/8 UNF X 335 PRISONER		02	02	02	02	02	02
07	0521010479	SLEEVE ARTICULATION		04	04	04	04	04	04
08	0521017687	SPACING SLEEVE		02	02	02	02	02	02
09	0501012140	FLAT WASHER		04	04	04	04	04	04
10	0503012795	5/8" HEX SELF ADJUSTING NUT		04	04	04	04	04	04
11	0511040203	1.5" X 2.5" X 19" X 9" HYDRAULIC CYLINDER	48	02	02	02	02	02	02
12	0521010574	C0.9" X 3.3" COUPLING SHAFT		02	02	02	02	02	02
13	0503010571	1/4" X 1.1/2 COTTERPIN		02	02	02	02	02	02
14	0511015779	1" X 4.2" AXLE		02	02	02	02	02	02
15	0503010523	1/4" X 2" COTTERPIN		02	02	02	02	02	02
16	0511017592	11.8" X 1.6" TRANSPORT LOCK		02	02	02	02	02	02
17	0501068994	0.3" X 3.1" LOCK PIN		02	02	02	02	02	02
18	0503030168	CUPILLA		02	02	02	02	02	02
19	0501066949	1235 TURNBUCKLE			02	02	02	02	
20	0503010962	5/8" X 1-1/4" BOLT		04	04	04	04	04	04
21	0521013164	EXTENSOR		02	02	02	02	02	02
22	0501011310	FIXER LOCK		02	02	02	02	02	02
23	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		04	04	04	04	04	04
24	0503011070	BEATER		02	02	02	02	02	02
25	0503010019	1/2" SPRING WASHER		02	02	02	02	02	02
26	0503010060	1/2" NUT		02	02	02	02	02	02
27	0501050633	ROW MARKER DISK ASSEMBLY	49	02	02	02	02	02	02
28	0501069643	890 TURNBUCKLE			02	02			

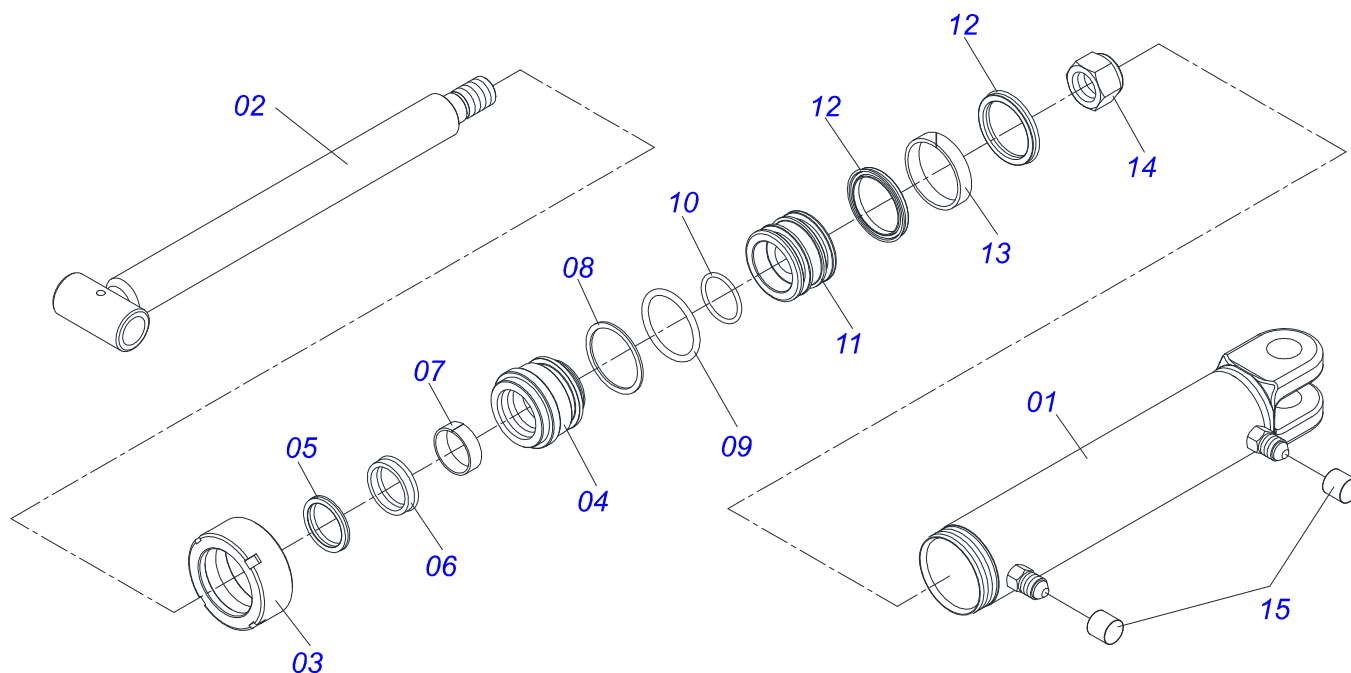

Item	Code	Description	See page	QT
01	0511062810	2.5" X 15" CYLINDER CASE		01
02	0501065662	HYDRAULIC CYLINDER TURNBUCKLE		01
03	0502010471	MOBILE COVER		01
04	0502010780	RING SUPPORT		01
05	0503010163	D-1500 SCRAPER RING		01
06	0503010989	1870-1500-375-B GASKET		01
07	0503010970	W1-1650-500 PK O'RING G.E		01
08	0503011058	8-330 BACK-UP RING		01
09	0503010161	2-330 N 3006 9B O'RING		01
10	0503010285	2-222 N 3006-9B O'RING		01
11	0502010783	1.5" X 2.5" PISTON		01
12	0503010160	2500 2000 GASKET		02
13	0503010973	W2-2500-500 PK O'RING G.E		01
14	0503010063	1" SELF-ALIGNING NUT		01
15	0503030384	CON PLUG N-001		02
16	0501032666	HYDRAULIC CYLINDER REPAIR KIT		01

ROW MARKER DISK ASSEMBLY


0501050633

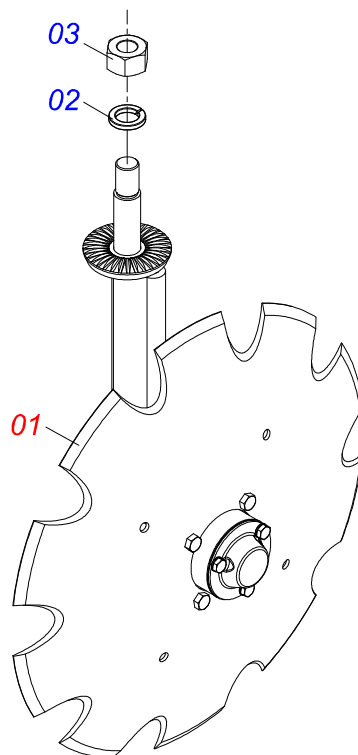

Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC	50	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

ROW MARKER DISC


0511053904

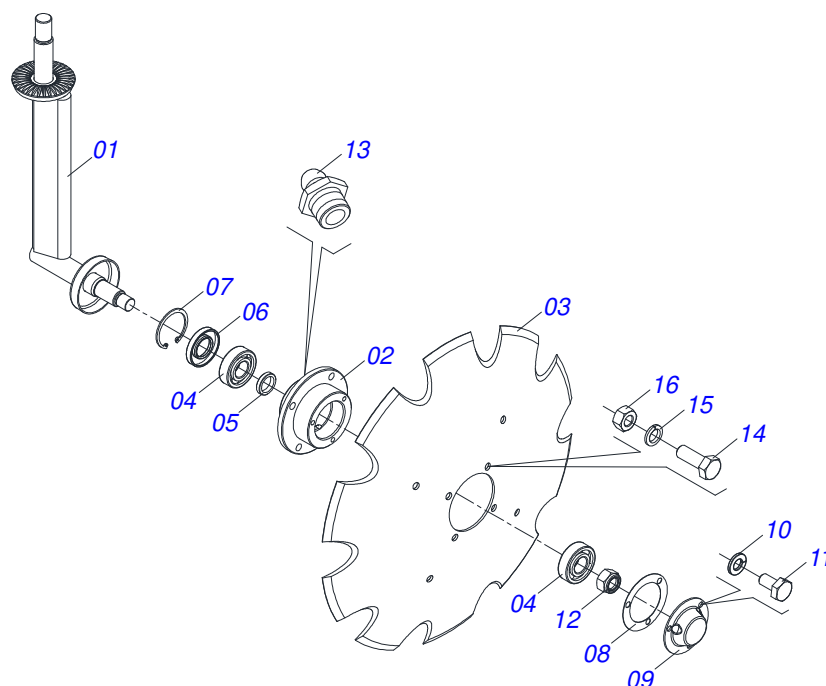

Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

HYDRAULIC CIRCUIT

0909090188

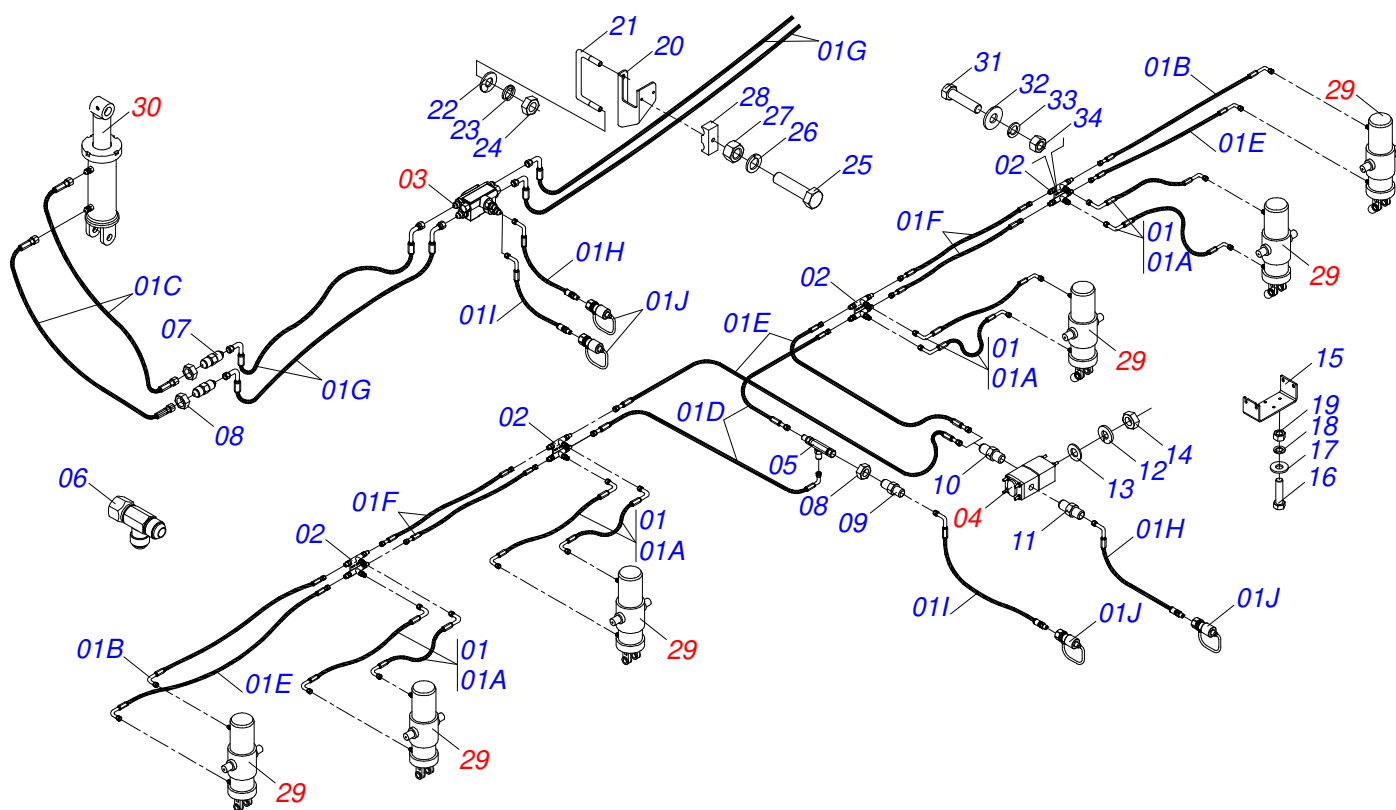


Item	Code	Description	See page	QT
01	0511051397	HOSE SET 06 WHEEL		01
01A	0501080760	3/8" X 500 TC-TC HOSE		08
01B	0501080635	3/8" X 19" TR-TR HOSE		02
01C	0501080413	3/8" X 27" TR-TC HOSE		04
01D	0501080105	3/8 X 700 TR-TR HOSE		02
01E	0501080348	3/8 X 1200 TR-TC HOSE		04
01F	0501080352	3/8 X 1400 TR-TR HOSE		04
01G	0501081639	HOSE		04
01H	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
01I	0501081073	HOSE 1/2 X 4200 TC-TM		02
01J	0501053834	MALE QUICK COUPLER		04
02	0501068706	DOUBLE CONNECTION		04
03	0501054649	HBM SEQUENTIAL VALVE	52	01
04	0503013791	DOUBLE MOTOR		01
05	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
06	0503012341	T 7/8" ADAPOR GIRAT NUT		02
07	0541012165	3/4" NIPPLE		04
08	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		05
09	0541012166	NIPPLE 3/4" UNF X 7/8"		01
10	0551012463	1/2" BSPT X 3/4" UNF X 51 NIPPLE		02
11	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE		01
12	0503015075	M10 SPRING WASHER		04
13	0501010984	FLAT WASHER		04
14	0503011051	M10 X 0.6" NUT		04
15	0571010596	SUPPORT VALVE 50/50		01
16	0503010371	5/16" X 1" BOLT		02
17	0501010694	FLAT WASHER		02
18	0503010179	LOCK WASHER		02
19	0503010337	5/16" NUT		02
20	0561017277	OIL CONDUCTOR FIXER PLATE		06
21	0521010718	5/8" U BOLT		06


HYDRAULIC CIRCUIT

0909090188


Item	Code	Description	See page	QT
22	0501012140	FLAT WASHER		12
23	0503010027	5/8" SPRING WASHER		12
24	0503010013	5/8" NUT		12
25	0503011103	7/16" X 2-1/2" BOLT		06
26	0503010180	7/16" SPRING WASHER		06
27	0503010244	7/16" NUT		06
28	0502012702	BODY SUPPORT CLAMP		06
29	0511043969	44,45 X 101,6 HYDRAULIC CYLINDER	53	06
30	0511040203	1.5" X 2.5" X 19" X 9" HYDRAULIC CYLINDER	48	02
31	0503010237	3/8" X 1" BOLT		06
32	0501010984	FLAT WASHER		06
33	0503010025	3/8" SPRING WASHER		06
34	0503010026	3/8" NUT		06

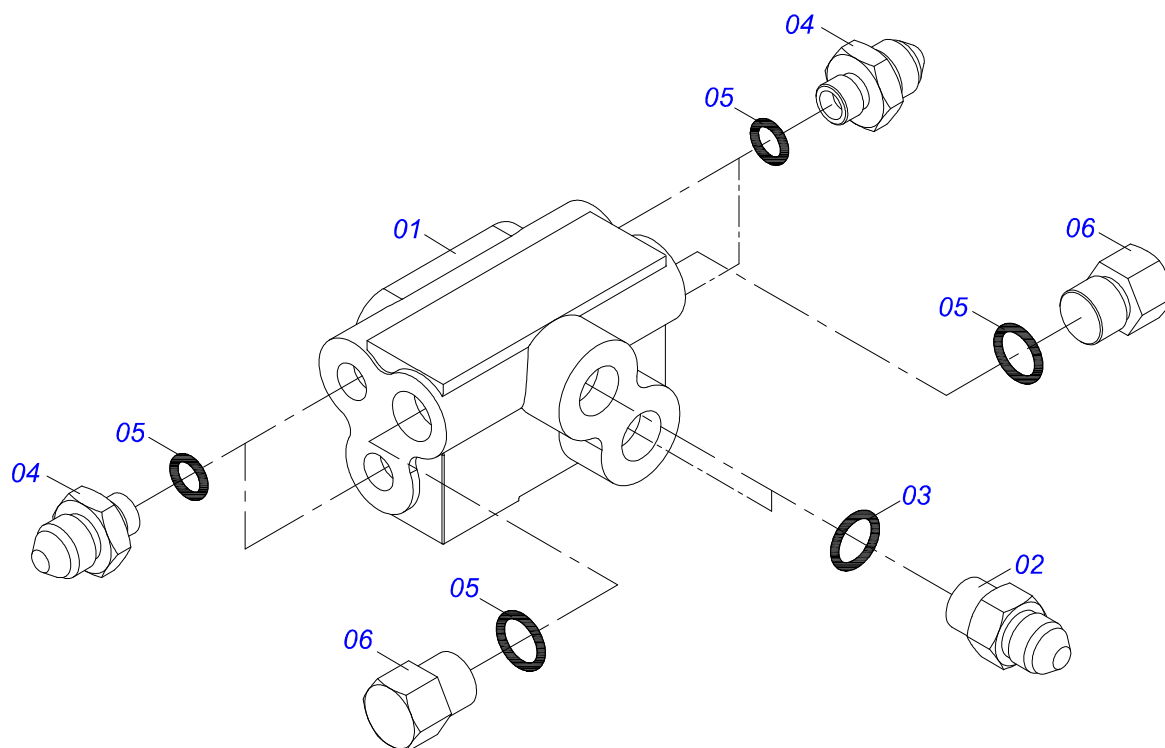

Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

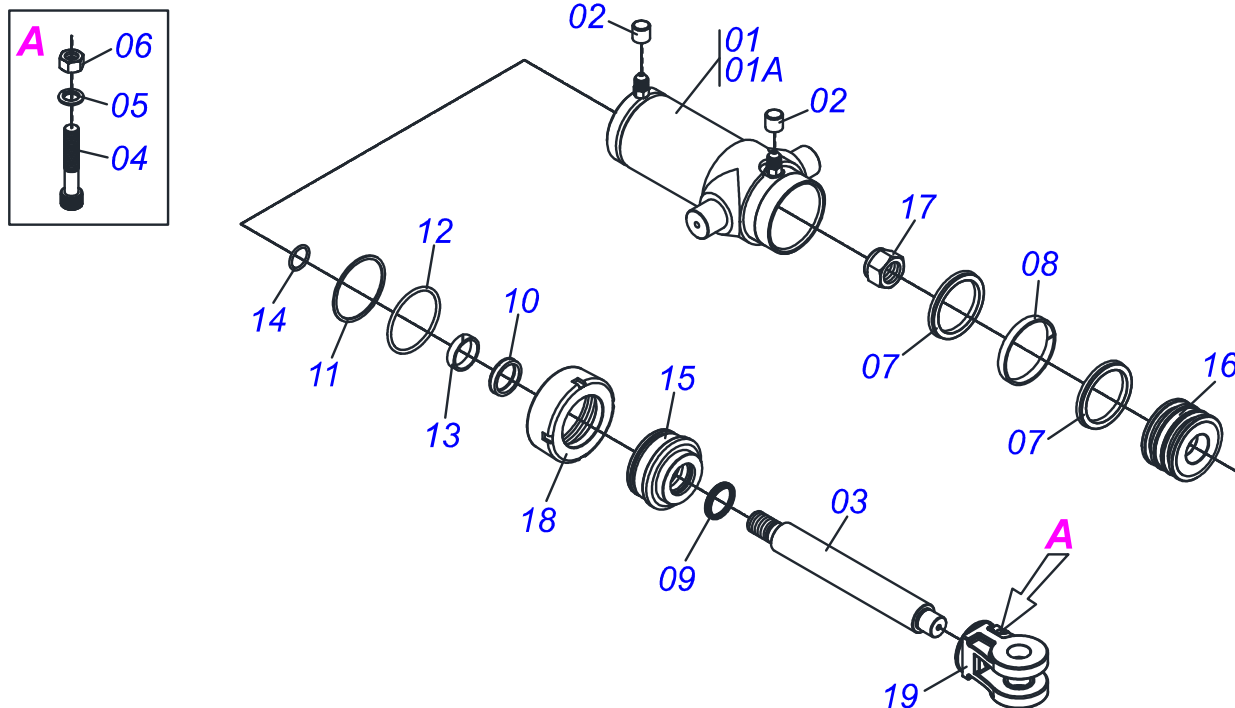


Item	Code	Description	See page
01	0511043969	44,45 X 101,6 HYDRAULIC CYLINDER	53
01A	0511066774	2.5" X 28" CYLINDER CASE	
02	0503030385	CYLINDER PLUG N-002	
03	0541017674	TURNBUCLE BODY	
04	0503011094	3/8" X 2" BOLT	
05	0503010025	3/8" SPRING WASHER	
06	0503010026	3/8" NUT	
07	0503010043	PACKING 3750-3250	
08	0503010994	W2-4000-500 PK RING G.E	
09	0503010761	D-1750 SCRAPER RING	
10	0503010990	GASKET	
11	0503011061	8-342 BACK-UP RING	
12	0503010338	2-342 N 3006-9B O'RING	
13	0503010949	W2-2000-500 PK RING G.E	
14	0503010345	2-218 N 3006-9B O'RING	
15	0502010841	RING OF SUPPORT	
16	0502010793	1.7" X 4" PISTON	
17	0503010817	1.1/4" SELF LOCKING NUT	
18	0502010017	4" HEAD	
19	0511064408	FORK	

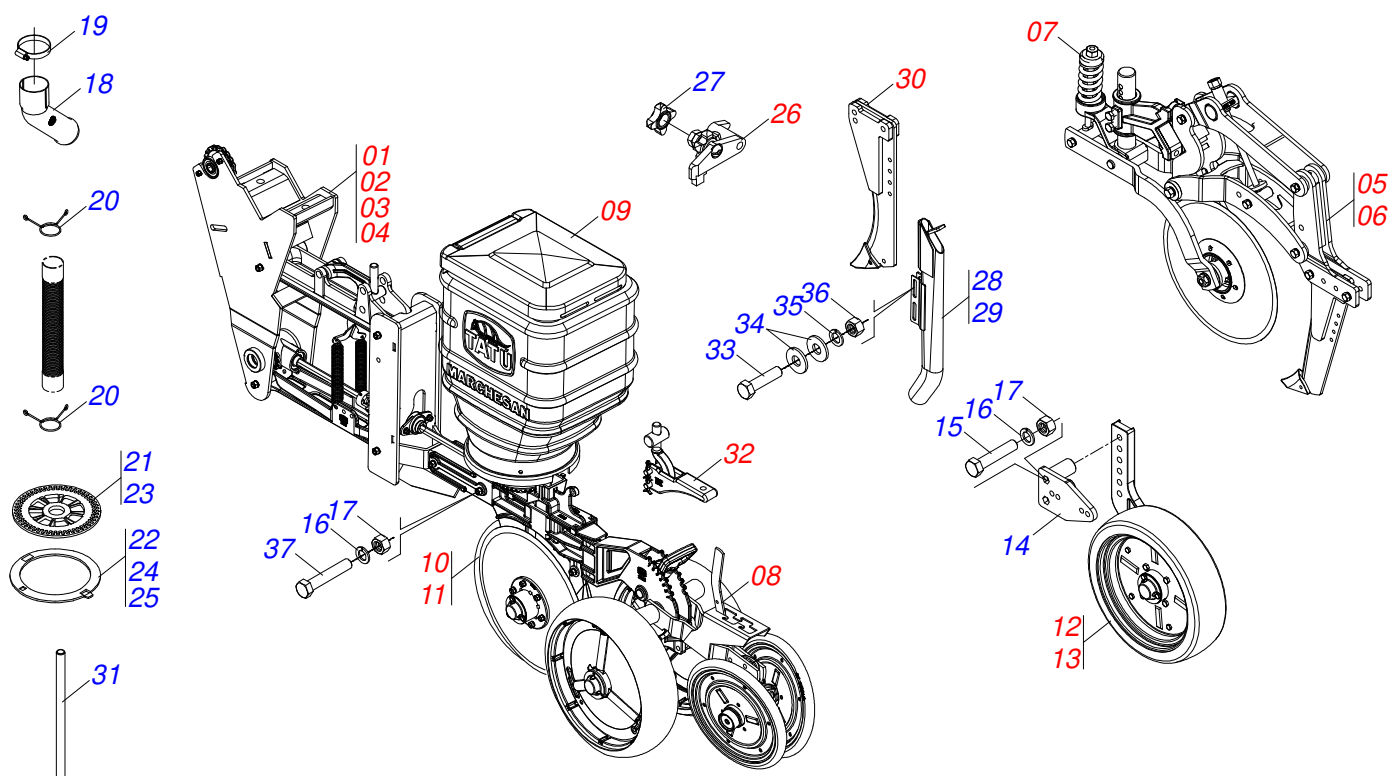

Item	Code	Description	See page	QT
01	0511051131	SHORT SEED ROW FRONT LEFT	55	01
02	0511051132	FRONT SHORT RIGHT SEED LINE	56	01
03	0511051133	FRONT LONG RIGHT SEED LINE	57	01
04	0511051134	FRONT LEFT LONG SEED LINE	58	01
05	0511050377	SEMI MOUNTED SHORT FERTILIZER LINE	60	01
06	0511050378	SEMI-ASSEMBLED LONG FERTILIZER LINE	61	01
07	0511051818	DISC CUT 18 SEMI MOUNTED	64	01
08	0521040111	ASSY DEPTH WHEEL/COMPACTOR SYSTEM	66	01
09	0501052820	SEED SYSTEM ASSY	75	01
10	0511052317	RH SEED ROW REAR	76	01
11	0511052318	LH SEED ROW REAR	80	01
12	0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL	82	01
13	0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	84	01
14	0511065909	DEPTH FIXER BASE		01
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503010019	1/2" SPRING WASHER		01
17	0503010060	1/2" NUT		01
18	0503031050	CURVED CONDUCTOR		01
19	0503010246	CLAMP		01
20	0503031076	2" HOSE CLAMP		01
21	0503016204	CORN DISK 12 ORANGE		01
22	0503016214	RING CORN (APOLLO740)		01
23	0503016218	DISC OF SOYBEAN		01
24	0503016220	RING TO SOYBEANS (APOLLO 745)		01
25	0503016221	RING TO SOYBEANS (APOLLO 571)		01
26	0501050120	LARGER WALKING BEAM ASSY	86	01
27	0503030558	PULLEY 4Z CORN PLASTIC		01
28	0511063823	FERT CONDUCTOR WITH REGULATOR		01
29	0511065843	FERT CONDUCTOR WITH REGULATOR		01
30	0501110231	SCARIFIER HEAD WITH SPIKE 0061	87	01
31	0531013600	PRESS ADJUSTMENT LEVER		01



Item	Code	Description	See page	QT
32	0511053857	FAST CLOSING SET	88	01
33	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
34	0501010984	FLAT WASHER		01
35	0503010025	3/8" SPRING WASHER		01
36	0503010026	3/8" NUT		01
37	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01

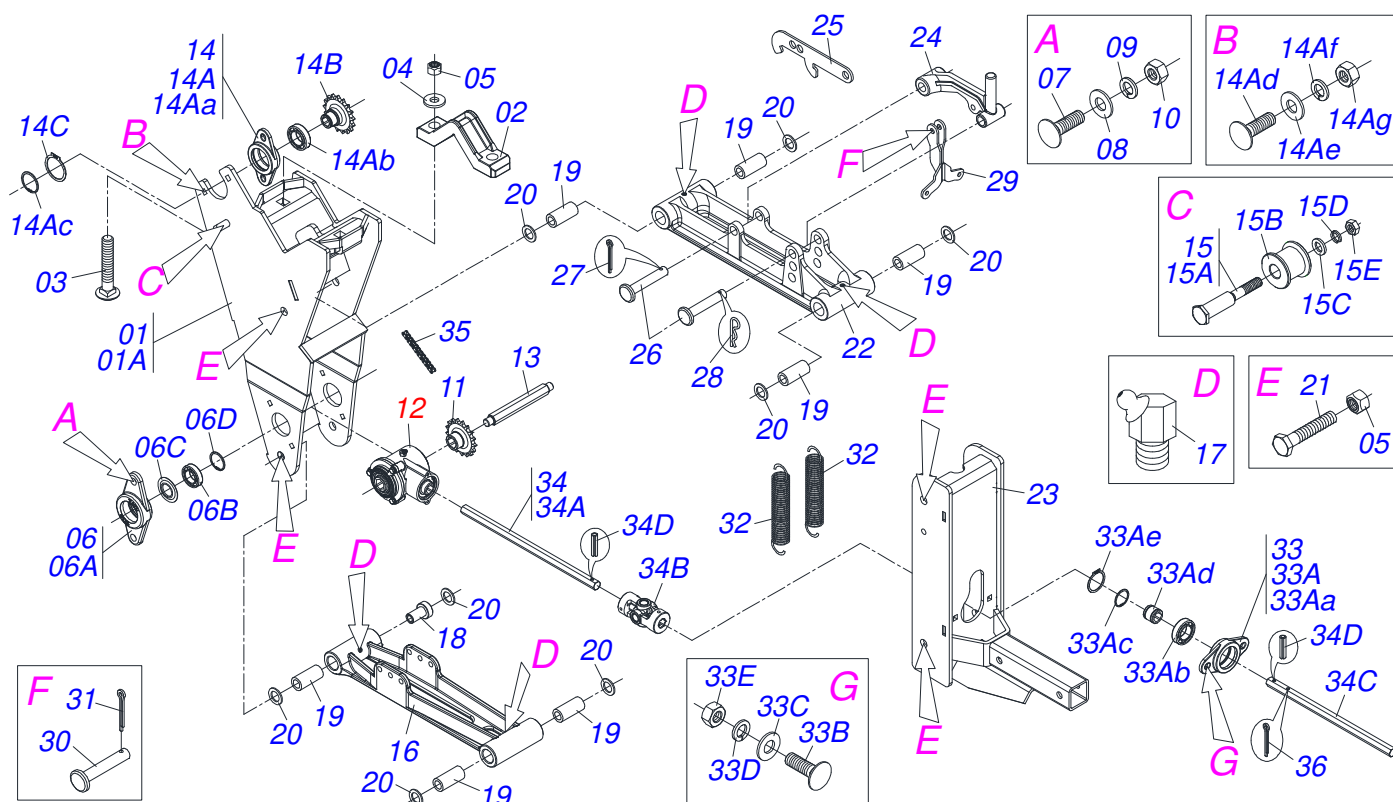


Item	Code	Description	See page	QT
01	0511051131	SHORT SEED ROW FRONT LEFT	55	01
01A	0521064651	LEFT SEED ROW SUPPORT FRONT		01
02	0502010175	HITCH CLAMP		01
03	0503016460	5/8" X 4.1/2" BOLT		02
04	0501012140	FLAT WASHER		02
05	0503012412	5/8 UNC SELF LOCKING NUT		06
06	0511054635	BEARING AXLE BODY		02
06A	0502012718	BEARIN BODY		02
06B	0503012882	BEARING		02
06C	0503017011	SEAL RING		02
06D	0503011945	503050 CLAMPING RING (FOR AXLE)		02
07	0503011953	5/16" X 1" BOLT		04
08	0501010694	FLAT WASHER		04
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0561017947	17Z GEAR WITH HEX HOLE		01
12	0511054884	TRANSMISSION BOX	59	01
13	0561014904	TRANSMISSION AXLE FRAME LINE		01
14	0511050609	BEARING WITH 17Z GEAR ASSY		01
14A	0511050617	FRONT SEED ROW BEARING		01
14Aa	0502011697	BEARING OF THE GEAR BOX		01
14Ab	0503011410	ROLLER BEARING		01
14Ac	0503011105	SEAL RING		01
14Ad	0503011953	5/16" X 1" BOLT		02
14Ae	0501010694	FLAT WASHER		02
14Af	0503010179	LOCK WASHER		02
14Ag	0503010337	5/16" NUT		02
14B	0561017909	17Z GEAR WITH HEX HOLE		01
14C	0503010406	501025 CLAMPING RING (FOR AXLE)		01
15	0511050610	SEED ROW CHAIN TENSIONER ASSY		01
15A	0531019479	AXLE CHAIN GEAR		01

SHORT SEED ROW FRONT LEFT

0511051131

Item	Code	Description	See page	QT
15B	0541016454	PULLEY		01
15C	0521014188	FLAT WASHER		01
15D	0503010019	1/2" SPRING WASHER		01
15E	0503010060	1/2" NUT		01
16	0502012666	SEED ROW LOWER ARM		01
17	0503010003	1845 GREASE FITTING		04
18	0561015858	SPACER LOWER SLEEVE		01
19	0531015151	0.6" X 1" X 2.4" SLEEVE		07
20	0531015184	FLAT WASHER		08
21	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
22	0502012350	SEED ROW UPPER ARM		01
23	0521061427	SHORT SEED ROW FRAME		01
24	0502012568	UPPER ROCKER ARM		01
25	0561019032	SEED FERTIL ROW LOCK		01
26	0501011388	COUPLING SHAFT		02
27	0503010071	3/16" X 1" COTTERPIN		01
28	0503030168	CUPILLA		01
29	0521061850	SPRING UPPER FIXER		01
30	0521010773	0.37" X 1.18" COUPLING SHAFT		01
31	0503010140	1/8" X 3/4" COTTERPIN		01
32	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
33	0511050611	5/8" HEX AXLE BEARING		01
33A	0501059363	5/8" HEX AXLE BEARING		01
33Aa	0502011697	BEARING OF THE GEAR BOX		01
33Ab	0503011410	ROLLER BEARING		01
33Ac	0503011105	SEAL RING		02
33Ad	0561014911	AXLE SLEVE GUIDES HEX		01
33Ae	0503010406	501025 CLAMPING RING (FOR AXLE)		02
33B	0503011953	5/16" X 1" BOLT		02
33C	0501010694	FLAT WASHER		02
33D	0503010179	LOCK WASHER		02
33E	0503010337	5/16" NUT		02
34	0501059326	UNIVERSAL JOINT AXLE		01
34A	0561014794	350 AXLE HEX		01
34B	0501056296	UNIVERSAL JOINT		01
34C	0561016322	5/8" HEX AXLE		01
34D	0503011855	0.2" X 1.8" SPRING PIN		02
35	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
36	0503010300	5/32" X 1" COTTERPIN		01

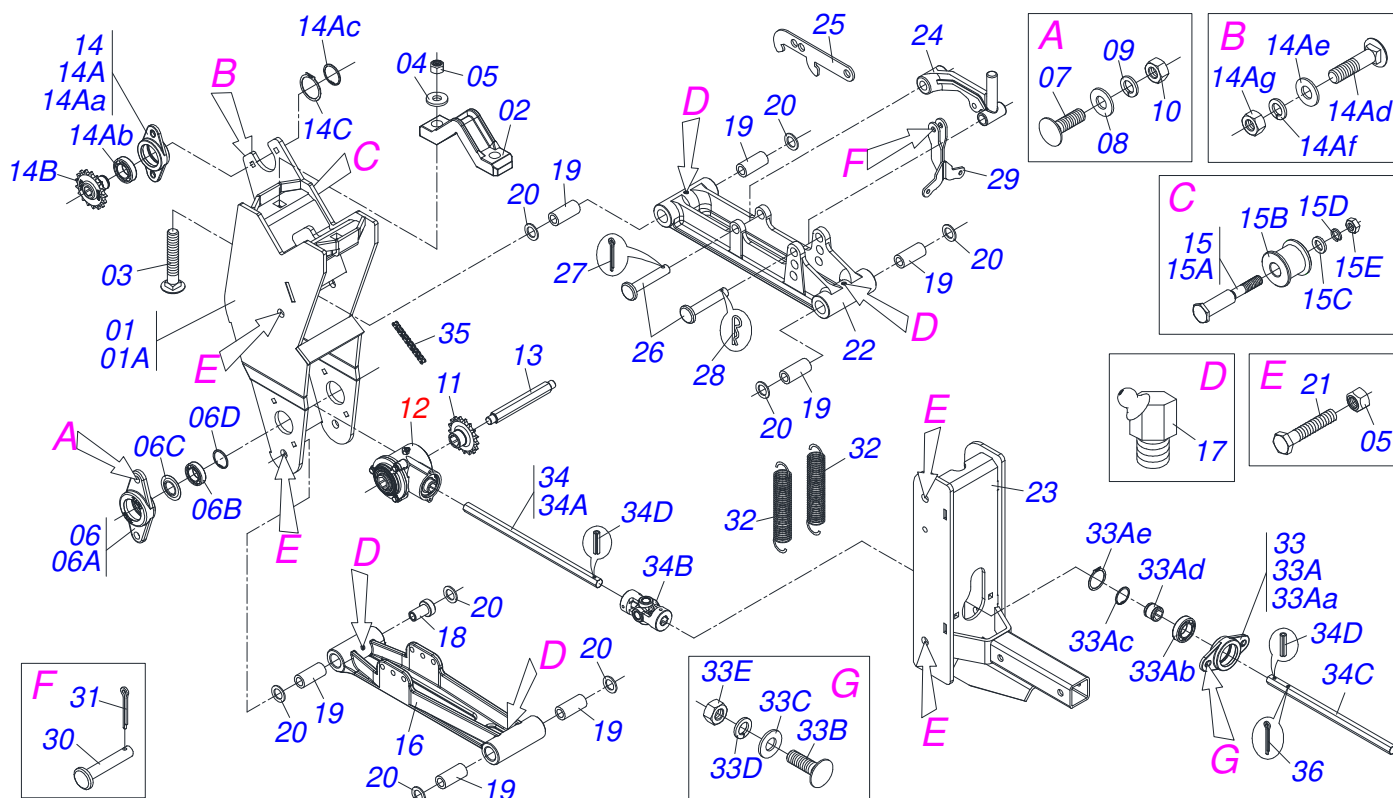


Item	Code	Description	See page	QT
01	0511051132	FRONT SHORT RIGHT SEED LINE	56	01
01A	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
02	0502010175	HITCH CLAMP		01
03	0503016460	5/8" X 4.1/2" BOLT		02
04	0501012140	FLAT WASHER		02
05	0503012412	5/8 UNC SELF LOCKING NUT		06
06	0511054635	BEARING AXLE BODY		02
06A	0502012718	BEARIN BODY		02
06B	0503012882	BEARING		02
06C	0503017011	SEAL RING		02
06D	0503011945	503050 CLAMPING RING (FOR AXLE)		02
07	0503011953	5/16" X 1" BOLT		04
08	0501010694	FLAT WASHER		04
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0561017947	17Z GEAR WITH HEX HOLE		01
12	0511054884	TRANSMISSION BOX	59	01
13	0561014904	TRANSMISSION AXLE FRAME LINE		01
14	0511050609	BEARING WITH 17Z GEAR ASSY		01
14A	0511050617	FRONT SEED ROW BEARING		01
14Aa	0502011697	BEARING OF THE GEAR BOX		01
14Ab	0503011410	ROLLER BEARING		01
14Ac	0503011105	SEAL RING		01
14Ad	0503011953	5/16" X 1" BOLT		02
14Ae	0501010694	FLAT WASHER		02
14Af	0503010179	LOCK WASHER		02
14Ag	0503010337	5/16" NUT		02
14B	0561017909	17Z GEAR WITH HEX HOLE		01
14C	0503010406	501025 CLAMPING RING (FOR AXLE)		01
15	0511050610	SEED ROW CHAIN TENSIONER ASSY		01
15A	0531019479	AXLE CHAIN GEAR		01

FRONT SHORT RIGHT SEED LINE


0511051132

Item	Code	Description	See page	QT
15B	0541016454	PULLEY		01
15C	0521014188	FLAT WASHER		01
15D	0503010019	1/2" SPRING WASHER		01
15E	0503010060	1/2" NUT		01
16	0502012666	SEED ROW LOWER ARM		01
17	0503010003	1845 GREASE FITTING		04
18	0561015858	SPACER LOWER SLEEVE		01
19	0531015151	0.6" X 1" X 2.4" SLEEVE		07
20	0531015184	FLAT WASHER		08
21	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
22	0502012350	SEED ROW UPPER ARM		01
23	0521061427	SHORT SEED ROW FRAME		01
24	0502012568	UPPER ROCKER ARM		01
25	0561019032	SEED FERTIL ROW LOCK		01
26	0501011388	COUPLING SHAFT		02
27	0503010071	3/16" X 1" COTTERPIN		01
28	0503030168	CUPILLA		01
29	0521061850	SPRING UPPER FIXER		01
30	0521010773	0.37" X 1.18" COUPLING SHAFT		01
31	0503010140	1/8" X 3/4" COTTERPIN		01
32	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
33	0511050611	5/8" HEX AXLE BEARING		01
33A	0501059363	5/8" HEX AXLE BEARING		01
33Aa	0502011697	BEARING OF THE GEAR BOX		01
33Ab	0503011410	ROLLER BEARING		01
33Ac	0503011105	SEAL RING		02
33Ad	0561014911	AXLE SLEVE GUIDES HEX		01
33Ae	0503010406	501025 CLAMPING RING (FOR AXLE)		02
33B	0503011953	5/16" X 1" BOLT		02
33C	0501010694	FLAT WASHER		02
33D	0503010179	LOCK WASHER		02
33E	0503010337	5/16" NUT		02
34	0501059326	UNIVERSAL JOINT AXLE		01
34A	0561014794	350 AXLE HEX		01
34B	0501056296	UNIVERSAL JOINT		01
34C	0561016322	5/8" HEX AXLE		01
34D	0503011855	0.2" X 1.8" SPRING PIN		02
35	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
36	0503010300	5/32" X 1" COTTERPIN		01

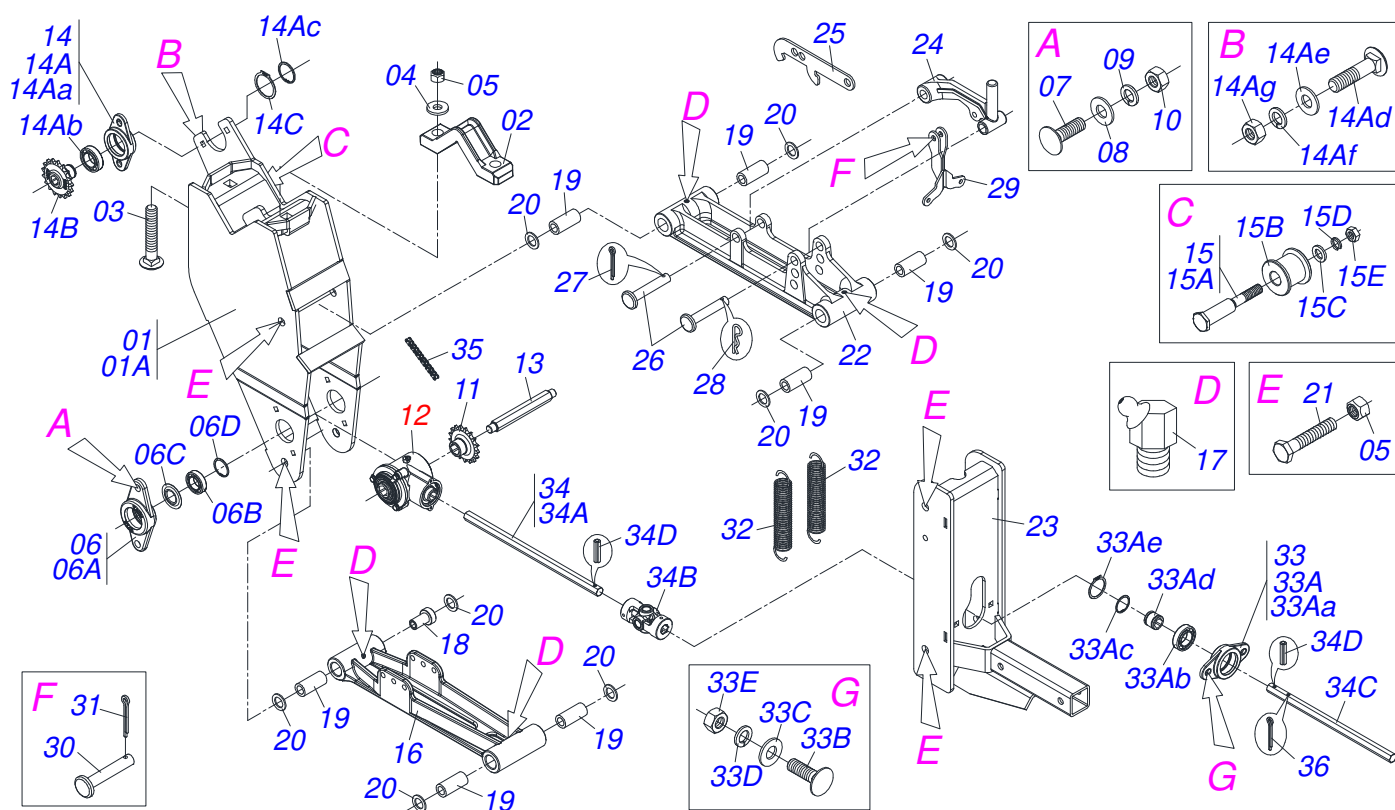

Item	Code	Description	See page	QT
01	0511051133	FRONT LONG RIGHT SEED LINE	57	01
01A	0521064652	RH SEED ROW SUPPORT FRONT		01
02	0502010175	HITCH CLAMP		01
03	0503016460	5/8" X 4.1/2" BOLT		02
04	0501012140	FLAT WASHER		02
05	0503012412	5/8 UNC SELF LOCKING NUT		06
06	0511054635	BEARING AXLE BODY		02
06A	0502012718	BEARIN BODY		02
06B	0503012882	BEARING		02
06C	0503017011	SEAL RING		02
06D	0503011945	503050 CLAMPING RING (FOR AXLE)		02
07	0503011953	5/16" X 1" BOLT		04
08	0501010694	FLAT WASHER		04
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0561017947	17Z GEAR WITH HEX HOLE		01
12	0511054884	TRANSMISSION BOX	59	01
13	0561014904	TRANSMISSION AXLE FRAME LINE		01
14	0511050609	BEARING WITH 17Z GEAR ASSY		01
14A	0511050617	FRONT SEED ROW BEARING		01
14Aa	0502011697	BEARING OF THE GEAR BOX		01
14Ab	0503011410	ROLLER BEARING		01
14Ac	0503011105	SEAL RING		01
14Ad	0503011953	5/16" X 1" BOLT		02
14Ae	0501010694	FLAT WASHER		02
14Af	0503010179	LOCK WASHER		02
14Ag	0503010337	5/16" NUT		02
14B	0561017909	17Z GEAR WITH HEX HOLE		01
14C	0503010406	501025 CLAMPING RING (FOR AXLE)		01
15	0511050610	SEED ROW CHAIN TENSIONER ASSY		01
15A	0531019479	AXLE CHAIN GEAR		01

Item	Code	Description	See page	QT
15B	0541016454	PULLEY		01
15C	0521014188	FLAT WASHER		01
15D	0503010019	1/2" SPRING WASHER		01
15E	0503010060	1/2" NUT		01
16	0502012666	SEED ROW LOWER ARM		01
17	0503010003	1845 GREASE FITTING		04
18	0561015858	SPACER LOWER SLEEVE		01
19	0531015151	0.6" X 1" X 2.4" SLEEVE		07
20	0531015184	FLAT WASHER		08
21	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
22	0502012350	SEED ROW UPPER ARM		01
23	0521061427	SHORT SEED ROW FRAME		01
24	0502012568	UPPER ROCKER ARM		01
25	0561019032	SEED FERTIL ROW LOCK		01
26	0501011388	COUPLING SHAFT		02
27	0503010071	3/16" X 1" COTTERPIN		01
28	0503030168	CUPILLA		01
29	0521061850	SPRING UPPER FIXER		01
30	0521010773	0.37" X 1.18" COUPLING SHAFT		01
31	0503010140	1/8" X 3/4" COTTERPIN		01
32	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
33	0511050611	5/8" HEX AXLE BEARING		01
33A	0501059363	5/8" HEX AXLE BEARING		01
33Aa	0502011697	BEARING OF THE GEAR BOX		01
33Ab	0503011410	ROLLER BEARING		01
33Ac	0503011105	SEAL RING		02
33Ad	0561014911	AXLE SLEVE GUIDES HEX		01
33Ae	0503010406	501025 CLAMPING RING (FOR AXLE)		02
33B	0503011953	5/16" X 1" BOLT		02
33C	0501010694	FLAT WASHER		02
33D	0503010179	LOCK WASHER		02
33E	0503010337	5/16" NUT		02
34	0501059326	UNIVERSAL JOINT AXLE		01
34A	0561014794	350 AXLE HEX		01
34B	0501056296	UNIVERSAL JOINT		01
34C	0561016322	5/8" HEX AXLE		01
34D	0503011855	0.2" X 1.8" SPRING PIN		02
35	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
36	0503010300	5/32" X 1" COTTERPIN		01

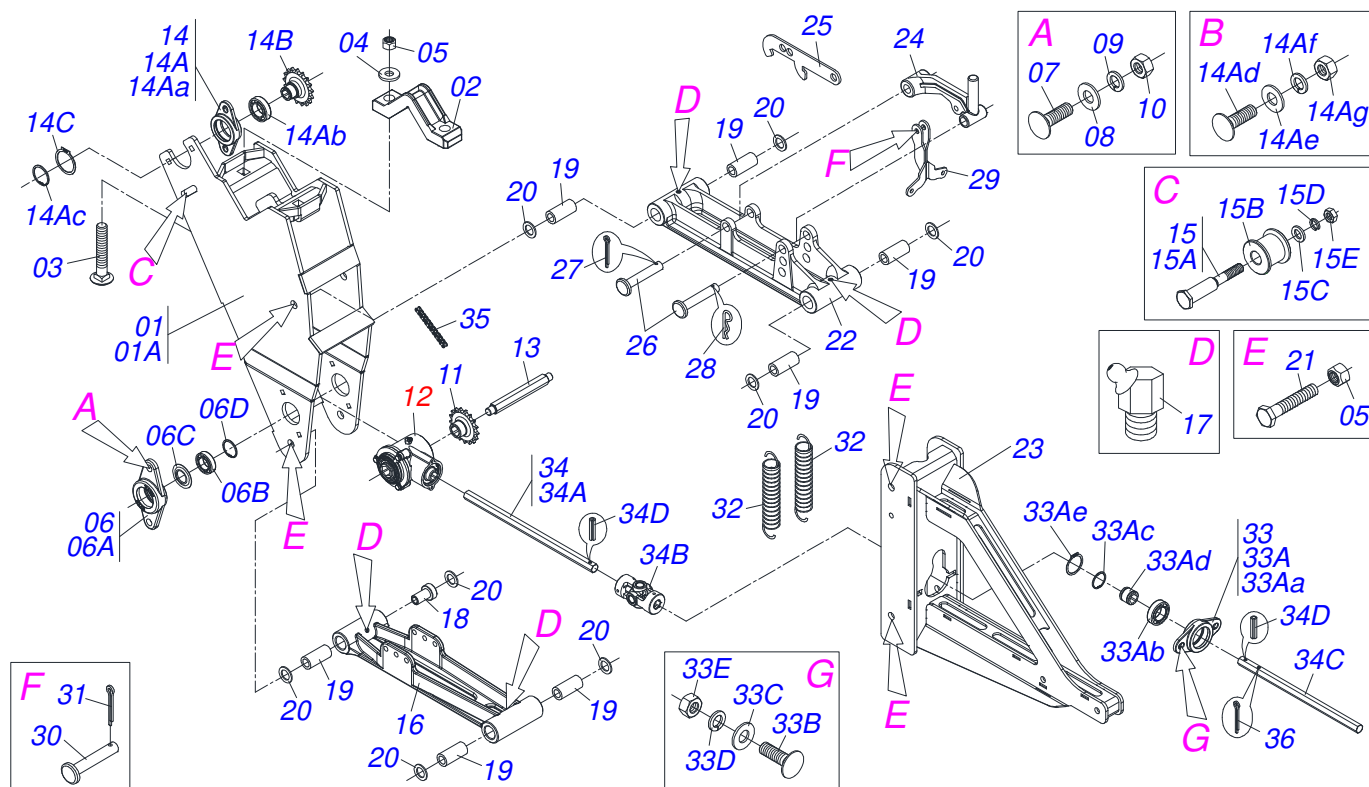

Item	Code	Description	See page	QT
01	0511051134	FRONT LEFT LONG SEED LINE	58	01
01A	0521064650	LEFT SEED ROW SUPPORT FRONT		01
02	0502010175	HITCH CLAMP		01
03	0503016460	5/8" X 4.1/2" BOLT		02
04	0501012140	FLAT WASHER		02
05	0503012412	5/8 UNC SELF LOCKING NUT		06
06	0511054635	BEARING AXLE BODY		02
06A	0502012718	BEARIN BODY		02
06B	0503012882	BEARING		02
06C	0503017011	SEAL RING		02
06D	0503011945	503050 CLAMPING RING (FOR AXLE)		02
07	0503011953	5/16" X 1" BOLT		04
08	0501010694	FLAT WASHER		04
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0561017947	17Z GEAR WITH HEX HOLE		01
12	0511054884	TRANSMISSION BOX	59	01
13	0561014904	TRANSMISSION AXLE FRAME LINE		01
14	0511050609	BEARING WITH 17Z GEAR ASSY		01
14A	0511050617	FRONT SEED ROW BEARING		01
14Aa	0502011697	BEARING OF THE GEAR BOX		01
14Ab	0503011410	ROLLER BEARING		01
14Ac	0503011105	SEAL RING		01
14Ad	0503011953	5/16" X 1" BOLT		02
14Ae	0501010694	FLAT WASHER		02
14Af	0503010179	LOCK WASHER		02
14Ag	0503010337	5/16" NUT		02
14B	0561017909	17Z GEAR WITH HEX HOLE		01
14C	0503010406	501025 CLAMPING RING (FOR AXLE)		01
15	0511050610	SEED ROW CHAIN TENSIONER ASSY		01
15A	0531019479	AXLE CHAIN GEAR		01


FRONT LEFT LONG SEED LINE

0511051134


Item	Code	Description	See page	QT
15B	0541016454	PULLEY		01
15C	0521014188	FLAT WASHER		01
15D	0503010019	1/2" SPRING WASHER		01
15E	0503010060	1/2" NUT		01
16	0502012666	SEED ROW LOWER ARM		01
17	0503010003	1845 GREASE FITTING		04
18	0561015858	SPACER LOWER SLEEVE		01
19	0531015151	0.6" X 1" X 2.4" SLEEVE		07
20	0531015184	FLAT WASHER		08
21	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
22	0502012350	SEED ROW UPPER ARM		01
23	0521061427	SHORT SEED ROW FRAME		01
24	0502012568	UPPER ROCKER ARM		01
25	0561019032	SEED FERTIL ROW LOCK		01
26	0501011388	COUPLING SHAFT		02
27	0503010071	3/16" X 1" COTTERPIN		01
28	0503030168	CUPILLA		01
29	0521061850	SPRING UPPER FIXER		01
30	0521010773	0.37" X 1.18" COUPLING SHAFT		01
31	0503010140	1/8" X 3/4" COTTERPIN		01
32	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
33	0511050611	5/8" HEX AXLE BEARING		01
33A	0501059363	5/8" HEX AXLE BEARING		01
33Aa	0502011697	BEARING OF THE GEAR BOX		01
33Ab	0503011410	ROLLER BEARING		01
33Ac	0503011105	SEAL RING		02
33Ad	0561014911	AXLE SLEVE GUIDES HEX		01
33Ae	0503010406	501025 CLAMPING RING (FOR AXLE)		02
33B	0503011953	5/16" X 1" BOLT		02
33C	0501010694	FLAT WASHER		02
33D	0503010179	LOCK WASHER		02
33E	0503010337	5/16" NUT		02
34	0501059326	UNIVERSAL JOINT AXLE		01
34A	0561014794	350 AXLE HEX		01
34B	0501056296	UNIVERSAL JOINT		01
34C	0561016322	5/8" HEX AXLE		01
34D	0503011855	0.2" X 1.8" SPRING PIN		02
35	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
36	0503010300	5/32" X 1" COTTERPIN		01

TRANSMISSION BOX

0511054884

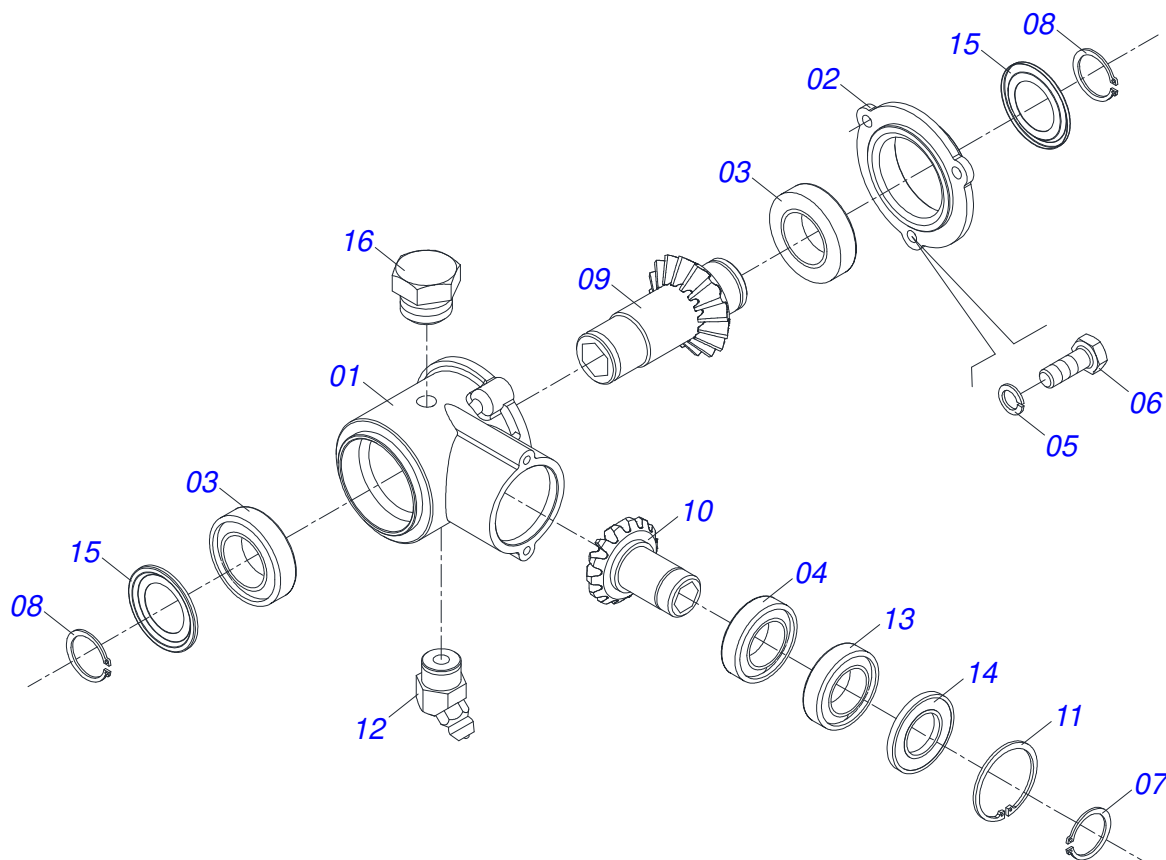

Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0502040857	CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503010003	1845 GREASE FITTING		01
13	0503011409	6005 Z BALL BEARING		01
14	0503017008	SEAL RING		01
15	0503017007	SEAL RING		02
16	0511017907	1/8" BSPT X 6 PLUG		01

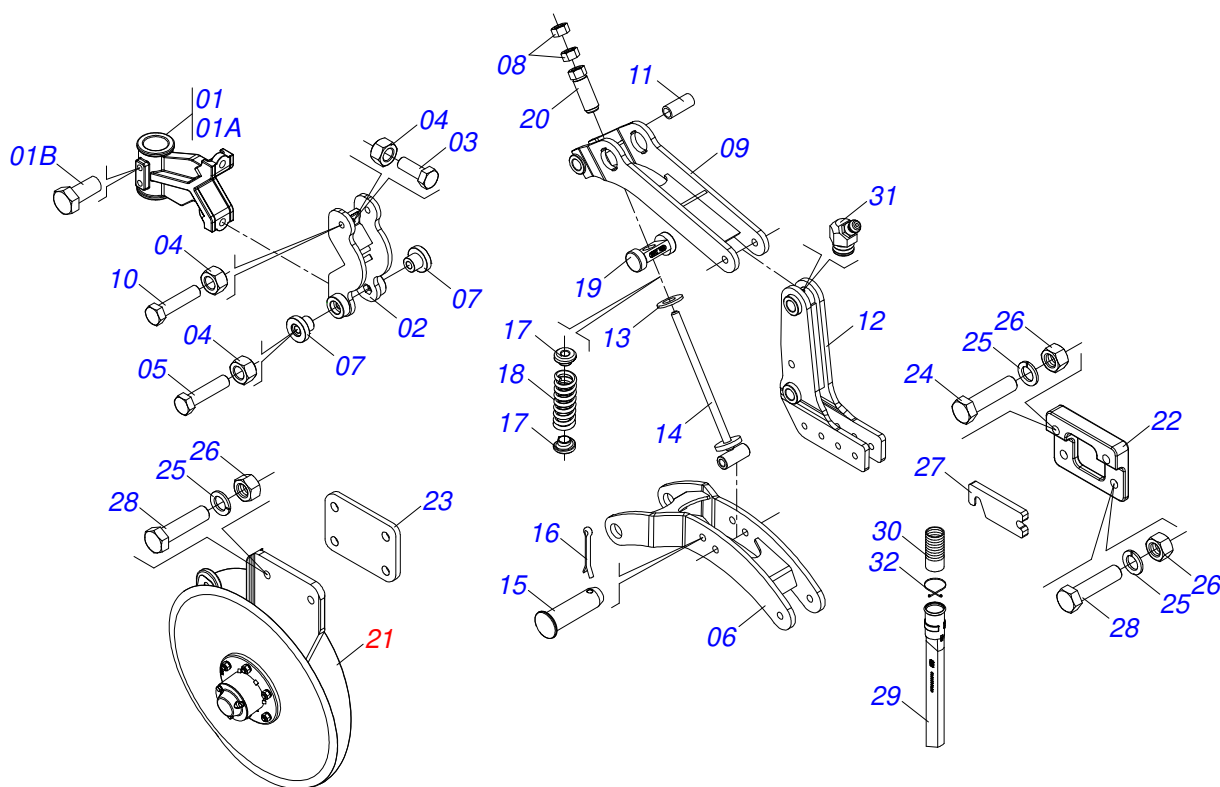


Item	Code	Description	See page	QT
01	0501056463	FERTILIZER LINE SUPPORT WITH BOLT		01
01A	0502012306	FERTILIZER ROW SUPPORT		01
01B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
02	0511064893	BLADE DISC SUPPORT		01
03	0503010233	5/8" X 2-1/2" BOLT		02
04	0503012412	5/8 UNC SELF LOCKING NUT		07
05	0503016110	BOLT 5/8 UNC X 4 C S G.7 ZN		02
06	0511065857	FERTILIZER ROW LOWER SUPPORT		01
07	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
08	0503010013	5/8" NUT		02
09	0511063862	FERTILIZER ROW UPPER SUPPORT		01
10	0501010452	5/8" X 5" BOLT		03
11	0531016207	0.6" X 1" X 2.8" SLEEVE		02
12	0521061855	FERTILIZER ROW REAR SUPPORT		01
13	0531016031	1/2" SPRING WASHER		04
14	0521062073	SPRING GUIDE		01
15	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
16	0503010257	1/8" X 1" COTTERPIN		01
17	1902020393	SPRING UPPER SUPPORT		02
18	0503031450	2.7" X 9.2" X 0.03" SPRING		01
19	0521011158	SPRING LOCKNUT		01
20	0521018575	REGULATOR SPINDLE 100		01
21	0501052977	LEFT FERTILIZER DOUBLE DISC	62	01
22	0502012352	DOUBLE-DISC SPACING PLATE		01
23	0541013035	5.55" X 4.0" X 0.38" PLATE		01
24	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		06
26	0503010060	1/2" NUT		06
27	0511018662	SPACING PLATE		02
28	0503010752	1/2" X 3.1/2" BOLT		04
29	0503030520	SEED SOCKET		01



COP FLEX - CHASSIS 5745 - CPA - 06 WHEEL
SEMI MOUNTED SHORT FERTILIZER LINE

Page 60
0511050377

Item	Code	Description	See page	QT
30	0503030408	2X2X390 HOSE		01
31	0503010003	1845 GREASE FITTING		03
32	0503031076	2" HOSE CLAMP		01

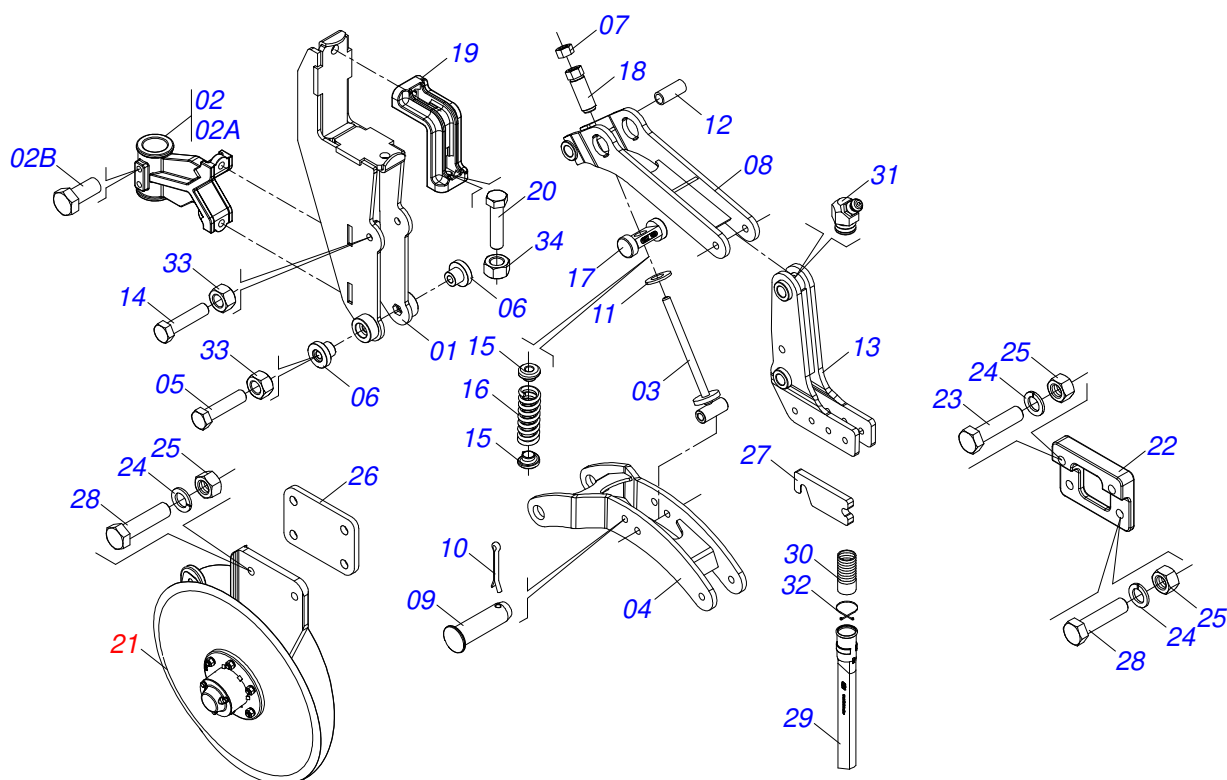


Item	Code	Description	See page	QT
01	0521061854	LONG FEERTILIZER ROW SUPPORT		01
02	0501056463	FERTILIZER LINE SUPPORT WITH BOLT		01
02A	0502012306	FERTILIZER ROW SUPPORT		01
02B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
03	0521062073	SPRING GUIDE		01
04	0511065857	FERTILIZER ROW LOWER SUPPORT		01
05	0503010233	5/8" X 2-1/2" BOLT		02
06	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
07	0503010013	5/8" NUT		01
08	0511063862	FERTILIZER ROW UPPER SUPPORT		01
09	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
10	0503010257	1/8" X 1" COTTERPIN		01
11	0531016031	1/2" SPRING WASHER		01
12	0531016207	0.6" X 1" X 2.8" SLEEVE		02
13	0521061855	FERTILIZER ROW REAR SUPPORT		01
14	0501010452	5/8" X 5" BOLT		02
15	1902020393	SPRING UPPER SUPPORT		02
16	0503031450	2.7" X 9.2" X 0.03" SPRING		01
17	0521011158	SPRING LOCKNUT		01
18	0521018575	REGULATOR SPINDLE 100		01
19	0502012400	ROW FERTILIZER FIXER		01
20	0503010797	3/4" X 4" BOLT		02
21	0501052976	RIGHT FERTILIZER DOUBLE DISC	63	01
22	0502012352	DOUBLE-DISC SPACING PLATE		01
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
24	0503010019	1/2" SPRING WASHER		06
25	0503010060	1/2" NUT		06
26	0541013035	5.55" X 4.0" X 0.38" PLATE		01
27	0511018662	SPACING PLATE		02
28	0503010752	1/2" X 3.1/2" BOLT		04
29	0503030520	SEED SOCKET		01




COP FLEX - CHASSIS 5745 - CPA - 06 WHEEL
SEMI-ASSEMBLED LONG FERTILIZER LINE

Page 61
0511050378


Item	Code	Description	See page	QT
30	0503030408	2X2X390 HOSE		01
31	0503010003	1845 GREASE FITTING		03
32	0503031076	2" HOSE CLAMP		01
33	0503012412	5/8 UNC SELF LOCKING NUT		04
34	0503011255	3/4" LOCK NUT		02

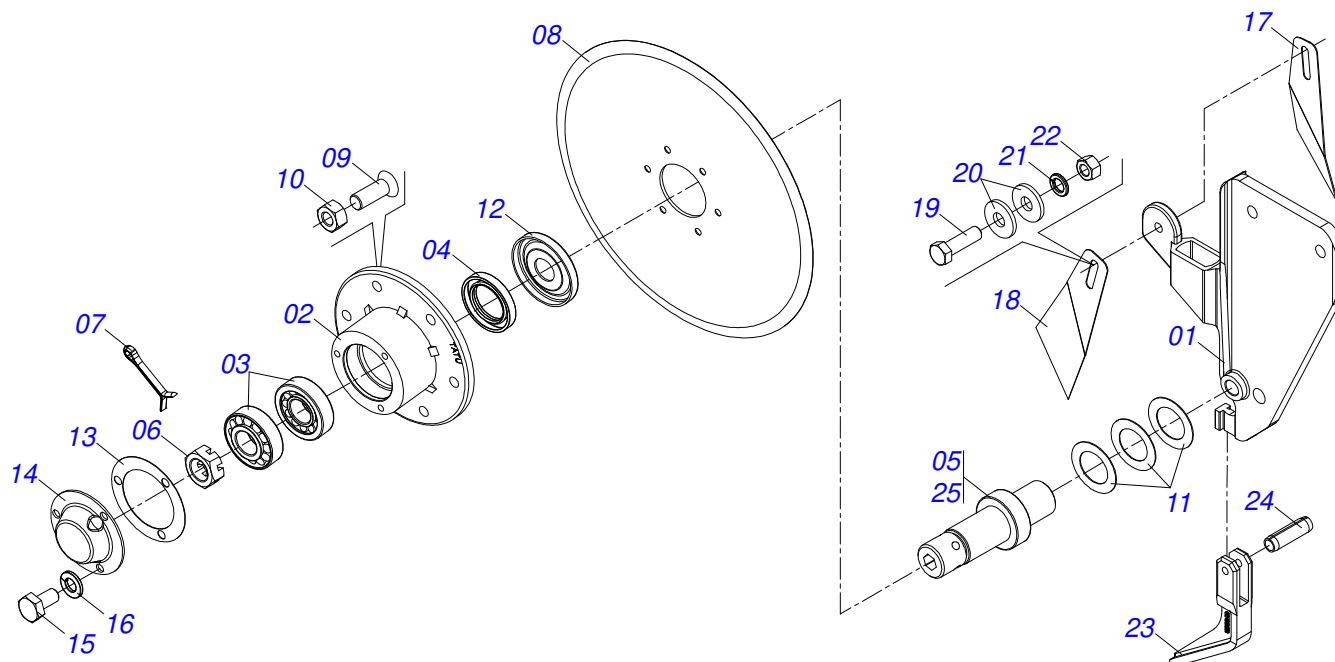


Item	Code	Description	See page	QT
01	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT	01	
02	0502011930	DOUBLE DISC COULTER BOX	02	
03	0503010598	30204 BALL BEARING	04	
04	0503011112	SEAL 02376-BRG	02	
05	0521019148	LEFT DOUBLE DISC HUB	01	
06	0503030282	3/4" CASTLE NUT	02	
07	0503010257	1/8" X 1" COTTERPIN	02	
08	0603022042	13" X 0.12" PLAIN COULTER BLADE	02	
09	0503010546	5/16" X 7/8" BOLT	12	
10	0503010337	5/16" NUT	12	
11	0511015098	FLAT WASHER	06	
12	0511011927	DUST CLOAK	02	
13	0503030757	2.9" X 2" X 0.02" JOINT	02	
14	0521019178	COVER DEPTH	02	
15	0503014729	1/4" UNF X 1/2" BOLT	06	
16	0503011441	SPRING WASHER	06	
17	0501017542	LH DOUBLE DISC SCRAPER	01	
18	0501017541	RIGHT DOUBLE DISC SCRAPER	01	
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
20	0501010984	FLAT WASHER	02	
21	0503011443	3/8" SPRING WASHER	01	
22	0503010026	3/8" NUT	01	
23	0502070062	SCRAPER	01	
24	0503011402	0.2" X 0.8" SPRING PIN	01	
25	0521019154	RIGHT DOUB DISC HUB	01	

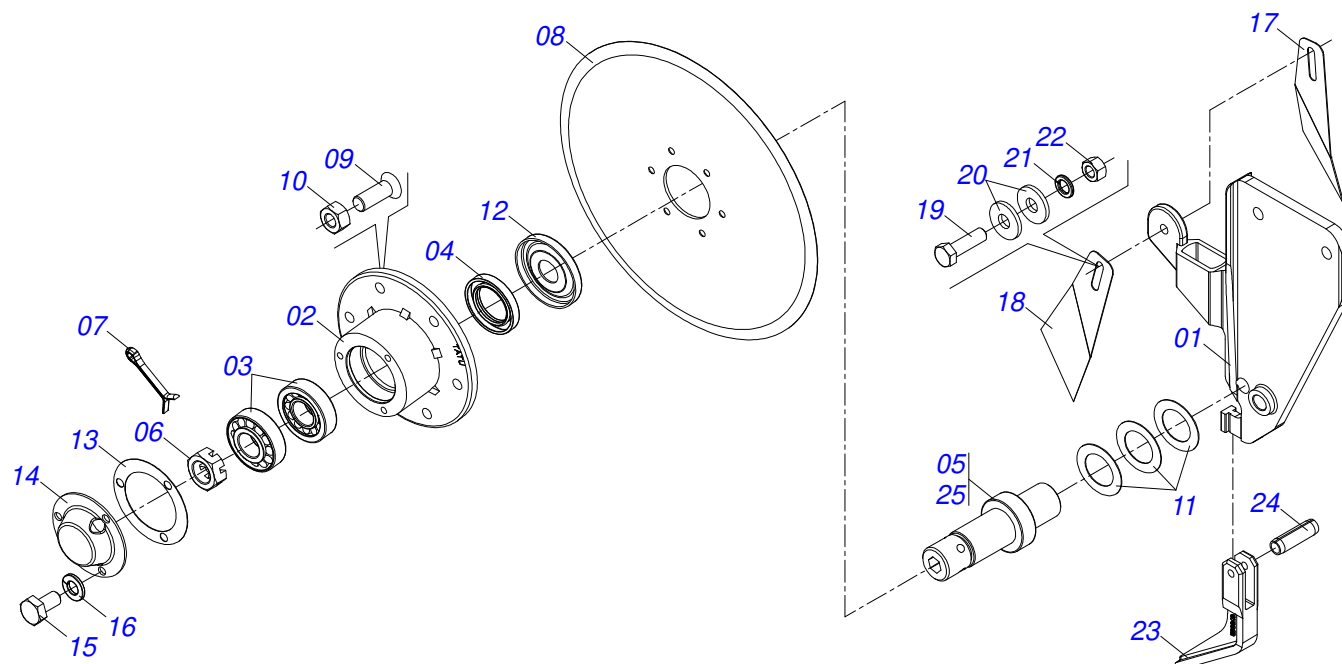


Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT	01	
02	0502011930	DOUBLE DISC COULTER BOX	02	
03	0503010598	30204 BALL BEARING	04	
04	0503011112	SEAL 02376-BRG	02	
05	0521019148	LEFT DOUBLE DISC HUB	01	
06	0503030282	3/4" CASTLE NUT	02	
07	0503010257	1/8" X 1" COTTERPIN	02	
08	0603022042	13" X 0.12" PLAIN COULTER BLADE	02	
09	0503010546	5/16" X 7/8" BOLT	12	
10	0503010337	5/16" NUT	12	
11	0511015098	FLAT WASHER	06	
12	0511011927	DUST CLOAK	02	
13	0503030757	2.9" X 2" X 0.02" JOINT	02	
14	0521019178	COVER DEPTH	02	
15	0503014729	1/4" UNF X 1/2" BOLT	06	
16	0503011441	SPRING WASHER	06	
17	0501017542	LH DOUBLE DISC SCRAPER	01	
18	0501017541	RIGHT DOUBLE DISC SCRAPER	01	
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
20	0501010984	FLAT WASHER	02	
21	0503011443	3/8" SPRING WASHER	01	
22	0503010026	3/8" NUT	01	
23	0502070062	SCRAPER	01	
24	0503011402	0.2" X 0.8" SPRING PIN	01	
25	0521019154	RIGHT DOUB DISC HUB	01	

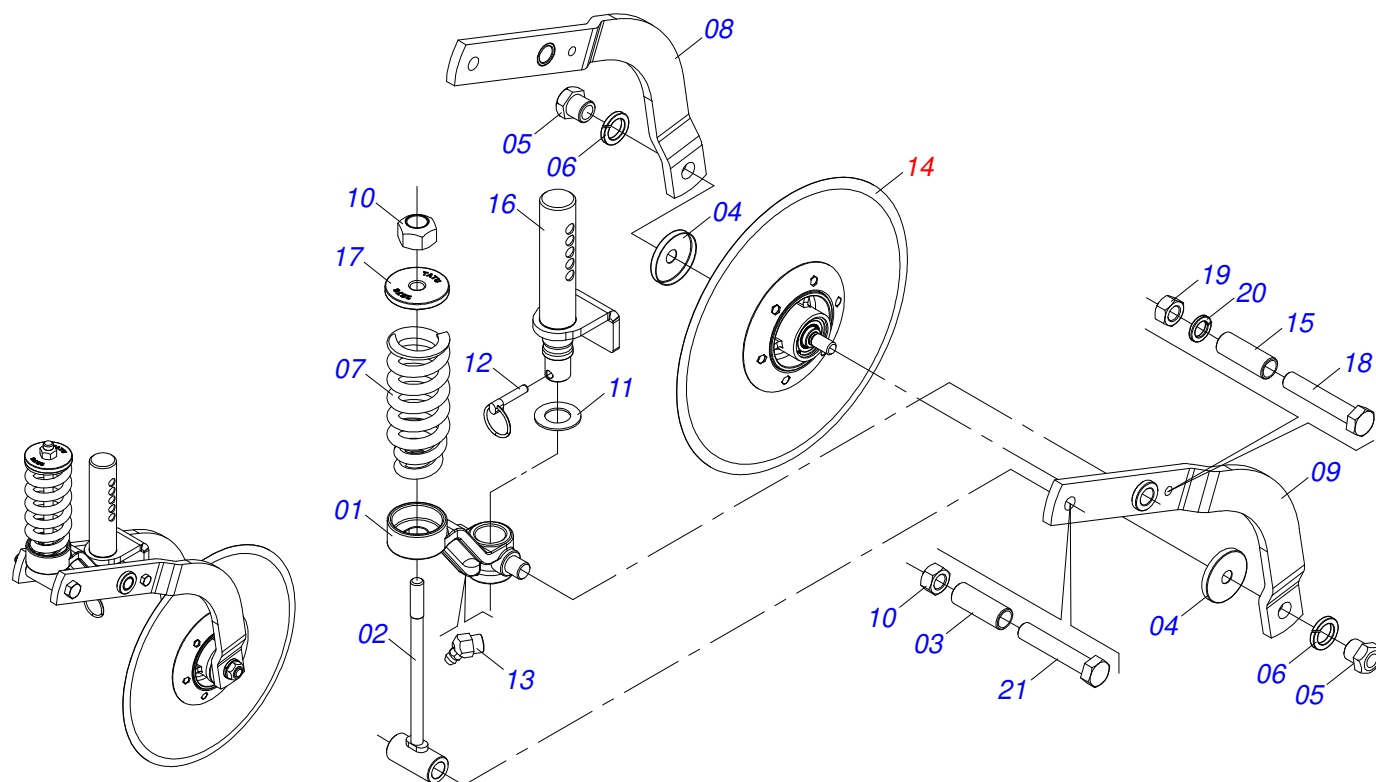

Item	Code	Description	See page	QT
01	0502012369	BLADE DISC SUPPORT		01
02	0501067323	SPRING REGULATOR		01
03	0521010452	SLEEVE		01
04	0521015376	DUST CLOAK		02
05	0521013510	3/4" NUT		02
06	0503011438	SPRING WASHER		02
07	0503034498	SPRING		01
08	0521067844	RIGHT ARM		01
09	0521067843	LEFT ARM		01
10	0503011255	3/4" LOCK NUT		02
11	0581014407	FLAT WASHER 36.5 X 65.00 X 3.00		01
12	0503030430	7/16 X 2" PIN LOCK		01
13	0503010003	1845 GREASE FITTING		01
14	0501052139	ASSY CUTTING DISK DPL18	65	01
15	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
16	0521062962	BLADE DISC AXLE		01
17	0581014524	SPRING SUPPORT WASHER		01
18	0503011411	1/2" X 5-1/2" BOLT		01
19	0503010060	1/2" NUT		01
20	0503011440	SPRING WASHER		01
21	0503013185	3/4" X 5-1/2" BOLT		01

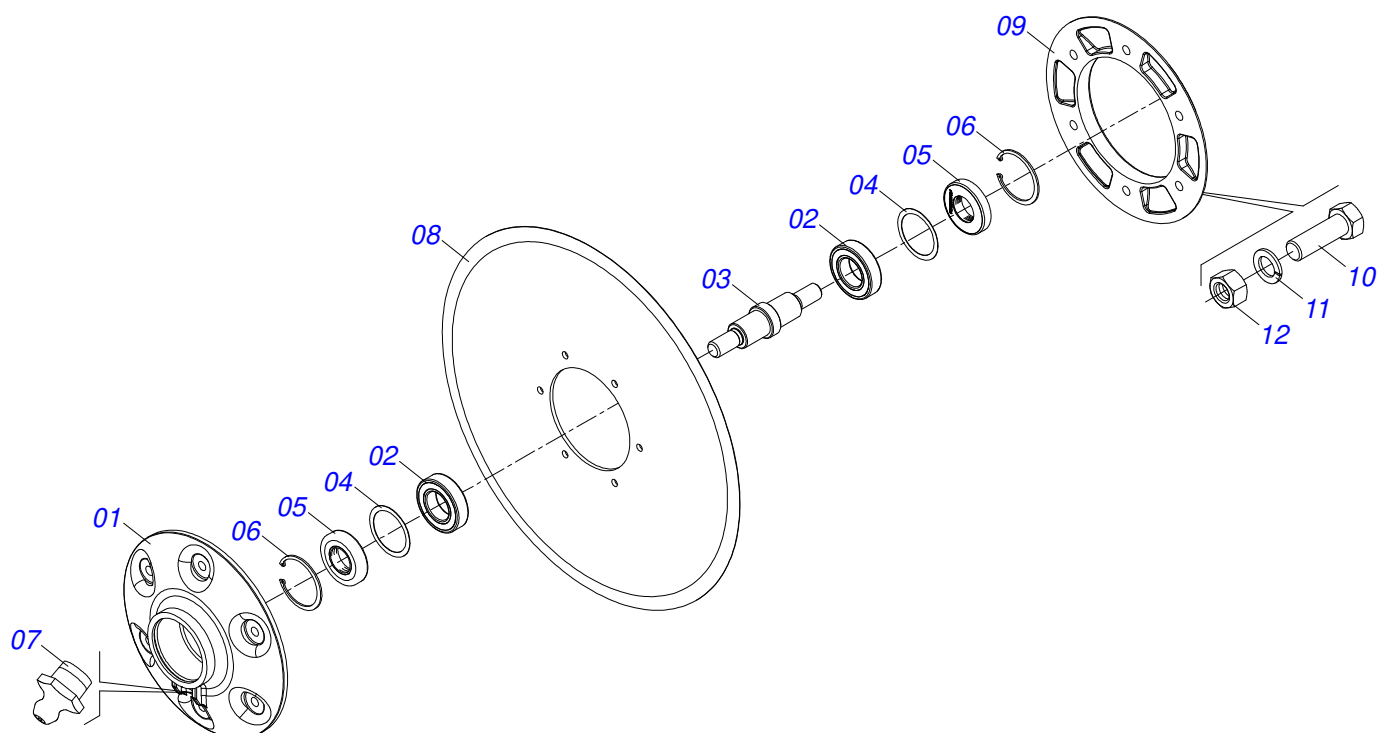


Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503010276	6206 BALL BEARING		02
03	0521013610	BLADE DISC HUB AXLE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0603026013	PLAIN COULTER BLADE		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

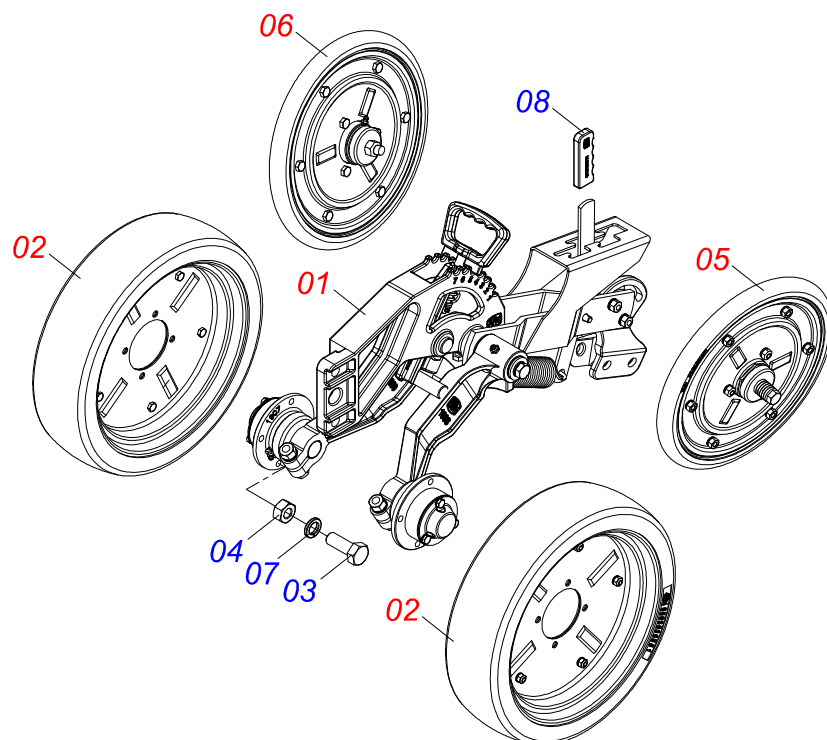


Item	Code	Description	See page	QT
01	0511051447	CONTROL DEPTH ASSY	67	01
02	0501052538	DEPTH BAND WITH ARMS	70	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	71	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	74	01
07	0503010179	LOCK WASHER		08
08	0503033942	COVER REGULATORY WHEEL		01

CONTROL DEPTH ASSY


0511051447

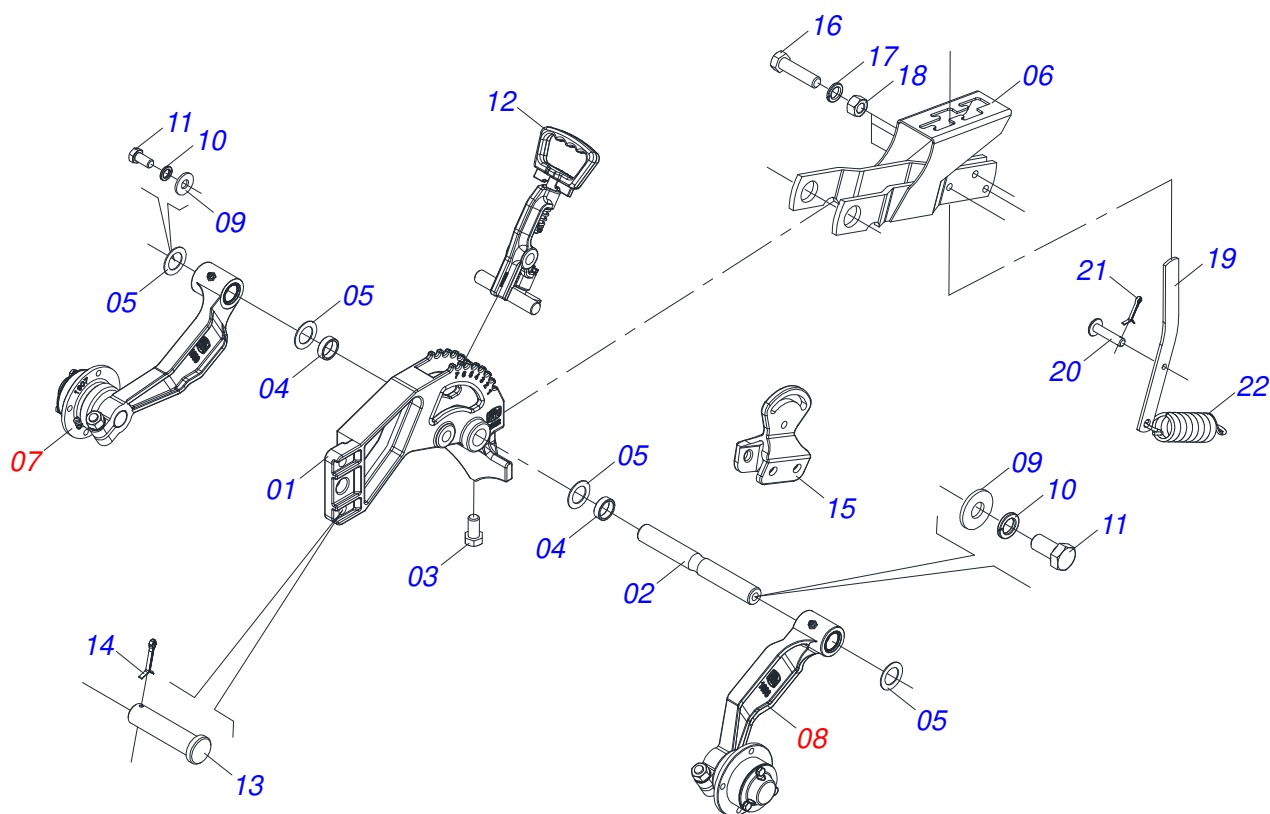


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0531010765	DEPTH WHEEL AXLE		01
03	0503010256	3/8" X 3/4" BOLT		01
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
05	0511015346	FLAT WASHER		04
06	0521064073	REGULACION WHEEL COMPACTOR		01
07	0501058576	RIGHT WHEEL ARM	68	01
08	0501058577	RIGHT ARM DEPTH CONTROL WHEEL		01
09	0511017302	FLAT WASHER		02
10	0503011440	SPRING WASHER		02
11	0503010311	1/2" X 1-1/4" BOLT		02
12	0501052297	DEPTH WHEELS REGULATOR ASSY		01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010257	1/8" X 1" COTTERPIN		01
15	0502012116	PRESS WHEEL ADJUSTER		01
16	0503010849	3/8" X 1-1/2" BOLT		02
17	0503011443	3/8" SPRING WASHER		02
18	0503010026	3/8" NUT		02
19	0541016906	PRESS WHEELS REGULATOR BODY		01
20	0521010539	0.3" X 1.2" COUPLING SHAFT		01
21	0503010140	1/8" X 3/4" COTTERPIN		01
22	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01

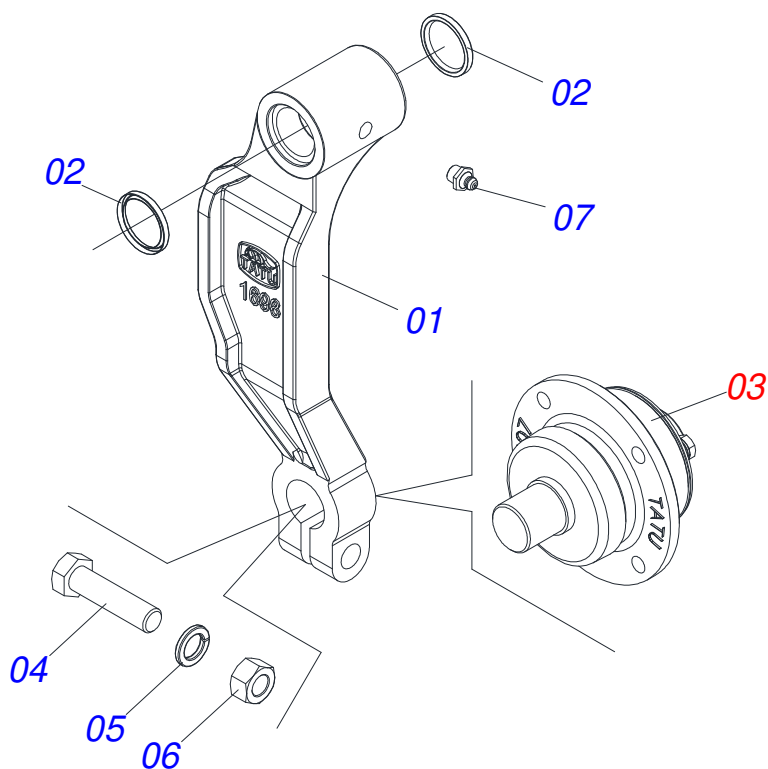


Item	Code	Description	See page	QT
01	0502012553	DEPTH WHEEL RIGHT ARM		01
02	0503015021	6871-GA SEAL RING		02
03	0501052627	ASSY DEPTH WHEEL BOX	69	01
04	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
05	0503011440	SPRING WASHER		01
06	0503010060	1/2" NUT		01
07	0503010002	1800 GREASE FITTING		01

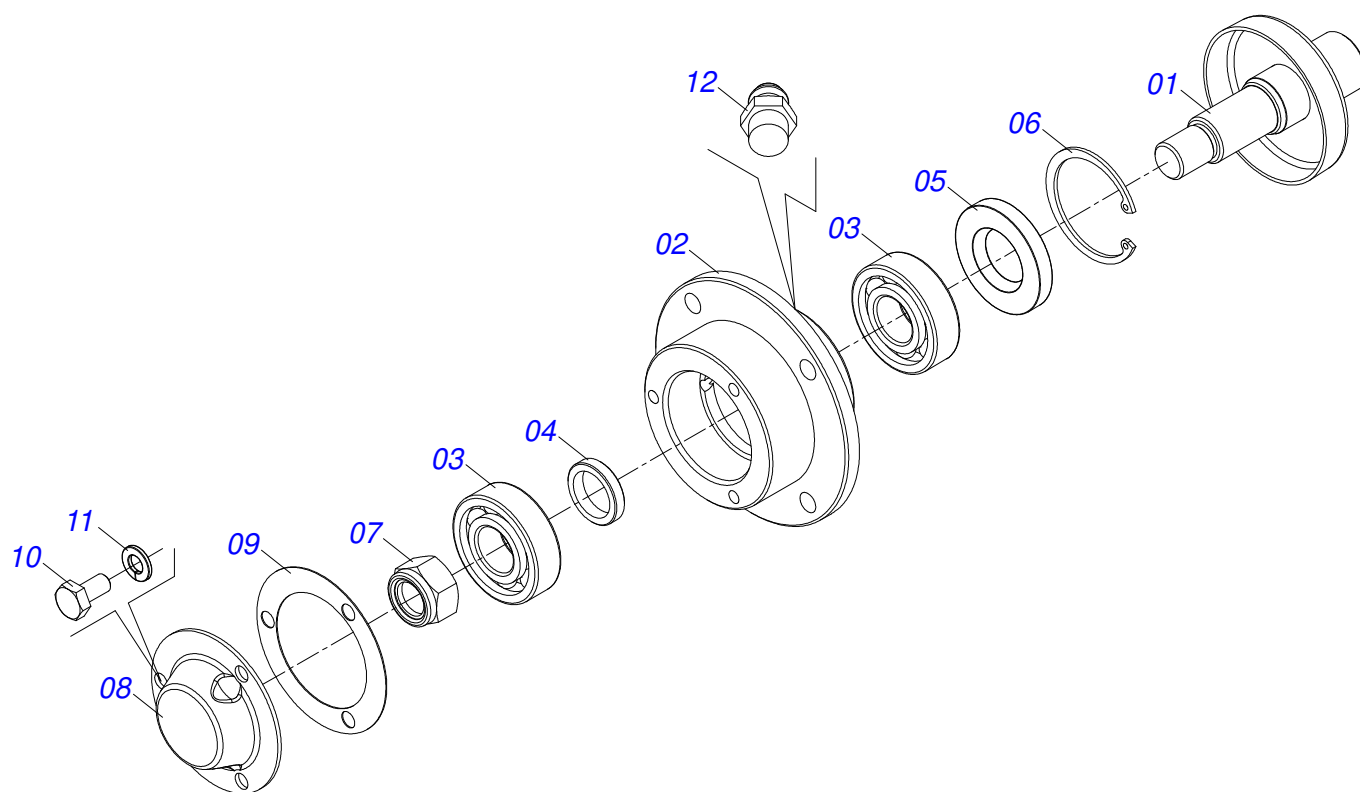


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	COVER DEPTH		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

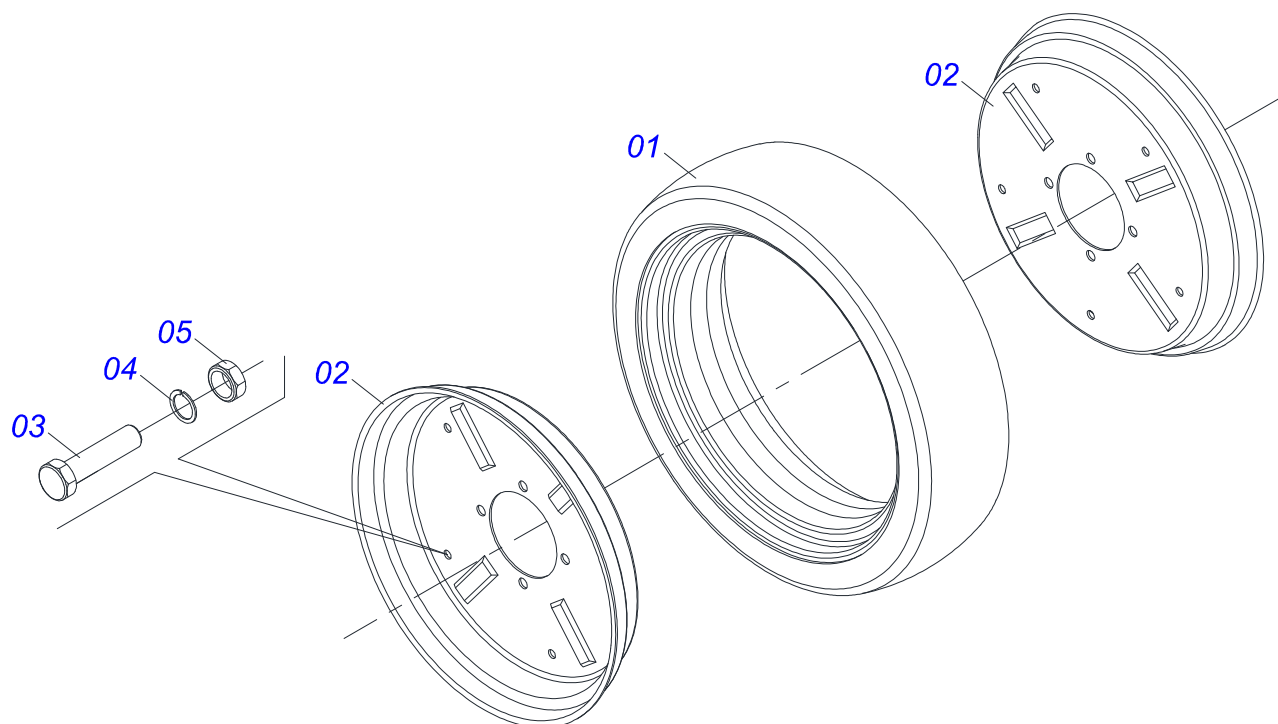


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

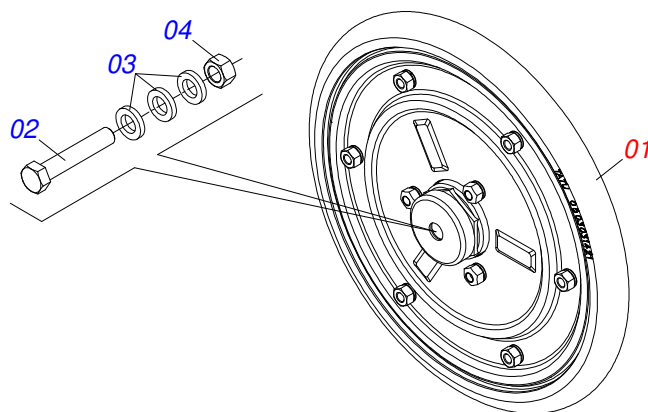

Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	72	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

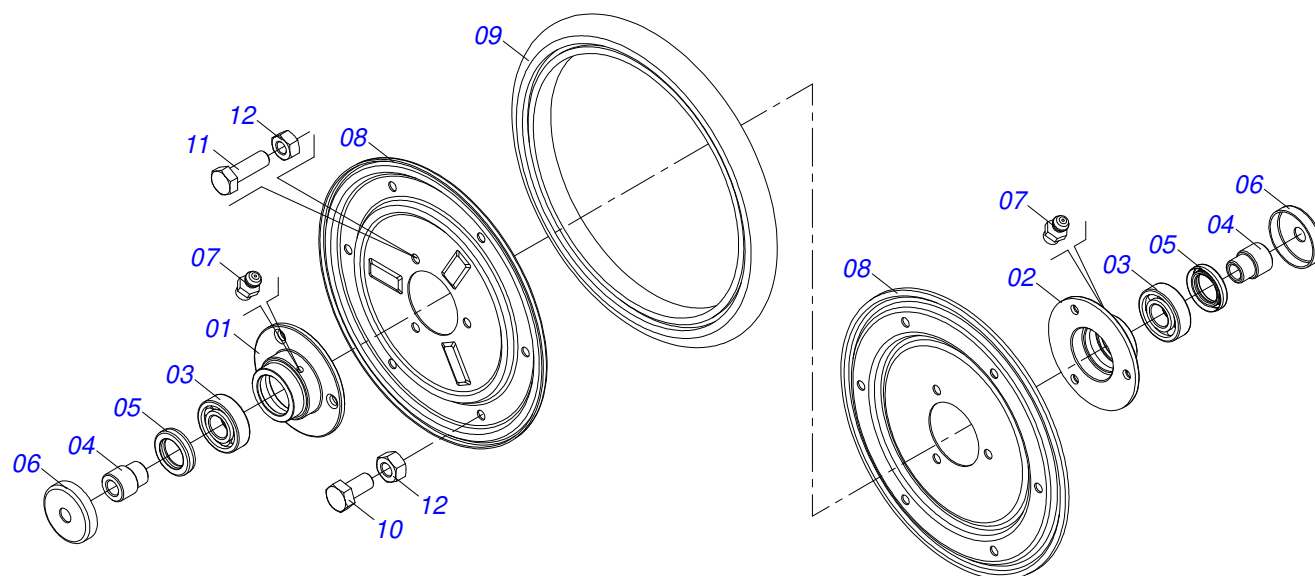


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

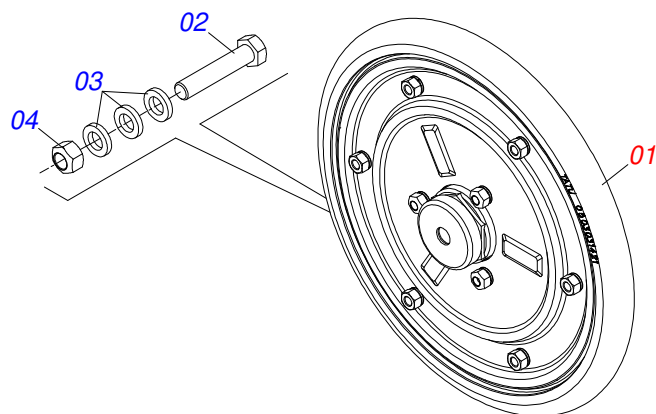


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	72	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

SEED SYSTEM ASSY


0501052820

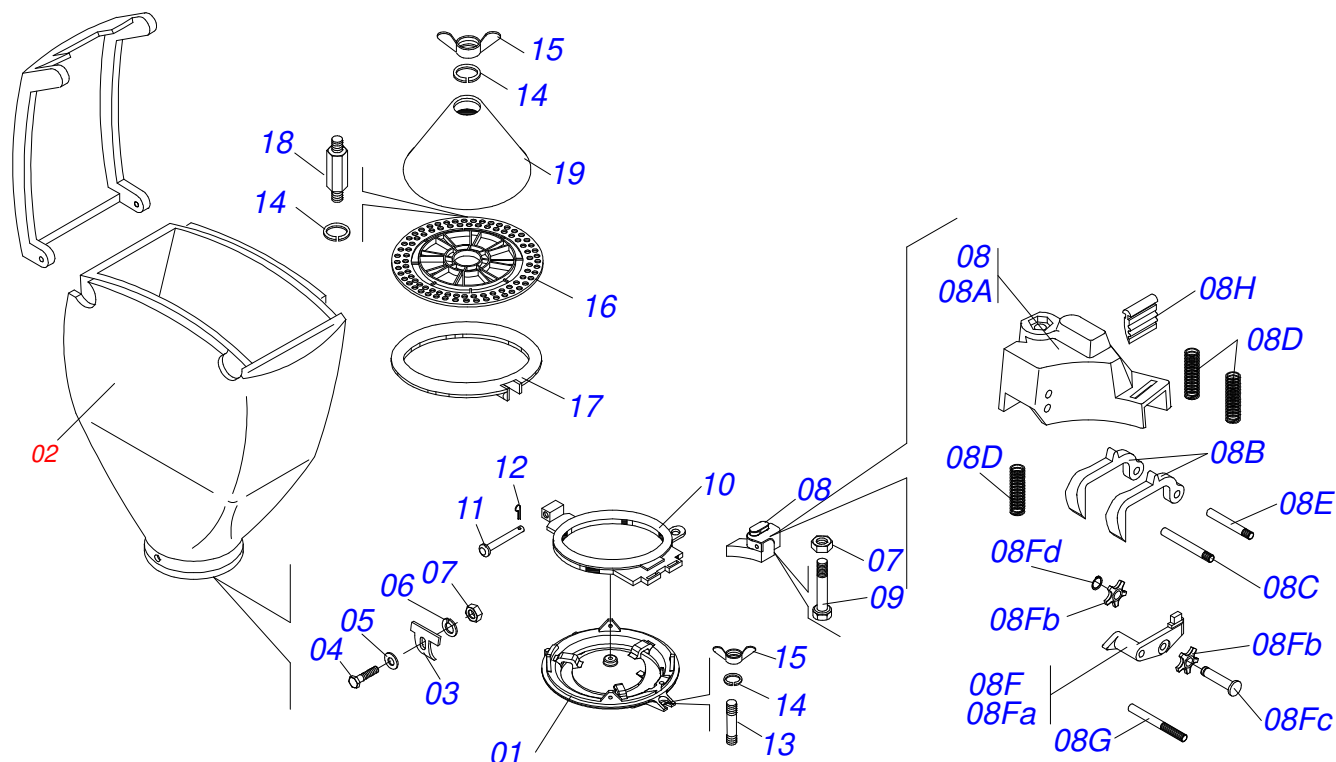


Item	Code	Description	See page	QT
01	0502020324	SEED BOX SUPPORT	01	
02	0503060516	SEED BOX WITH SMALLER CAP	01	
03	0531010631	SEED BEAM CLAMP	04	
04	0503010371	5/16" X 1" BOLT	04	
05	0501010694	FLAT WASHER	04	
06	0503010179	LOCK WASHER	04	
07	0503010337	5/16" NUT	05	
08	0501051094	ASSY SEED DISTRIBUTOR	01	
08A	0503030381	SEED DISTRIBUTOR BOX	01	
08B	0502010447	TRIGGER	02	
08C	0501013467	KEY AXLE	01	
08D	0503030378	0.4" X 1.1" X 0.03" SPRING	03	
08E	0501013466	KEY LIMITER AXLE	01	
08F	0501051119	DOUBLE PULLEY ROCKER'S	01	
08Fa	0503031129	DOUBLE PULLEY ROCKER ARM	01	
08Fb	0503031128	5Z PLASTIC DOUB PULLEY FOR SOYBEAN	02	
08Fc	0503031130	PIN OF THE PULLEY	01	
08Fd	0503011853	503050 CLAMPING RING (FOR HOLE)	01	
08G	0501013468	ROCKER ARM AXLE, OF THE PULLEY	01	
08H	0503030377	SCRAPER	01	
09	0503010675	5/16" X 2.1/4" BOLT	01	
10	0502010408	SEED DISC LOWER TRAIL	01	
11	0521010536	0.3" X 3.8" COUPLING SHAFT	01	
12	0503010140	1/8" X 3/4" COTTERPIN	01	
13	0503030083	3/8" X 3/8" X 1.6" STUD	01	
14	0503010025	3/8" SPRING WASHER	03	
15	0503010209	3/8" UNC BUTTERFLY NUT	02	
16	0502020564	SOYBEAN DISC WITH 100 HOLES	01	
17	0501013355	DISC SEAT	01	
18	0511013590	HEX STUD 3/8" X 3/8"	01	
19	0511013494	DEFLECTOR	01	

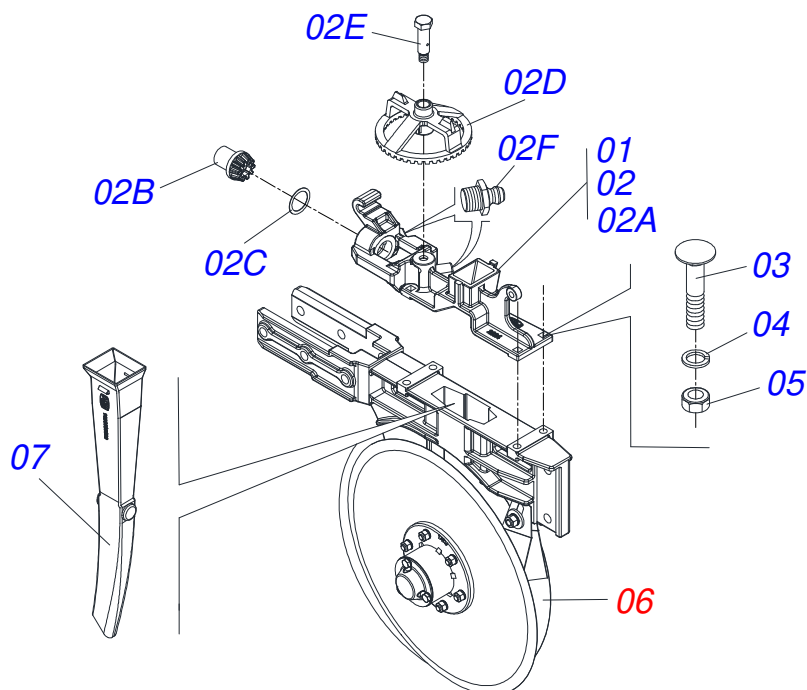


Item	Code	Description	See page	QT
01	0511052317	RH SEED ROW REAR	76	01
02	0501059648	SEED BOX FIXING BASE		01
02A	0502012624	SEED BOX FIXING BASE		01
02B	0502012639	12Z LOWER CONICAL GEAR		01
02C	0501013354	FLAT WASHER		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059631	DDD SEED 15 X 15 RIGHT	77	01
07	0503033124	SOCKET SEED		01

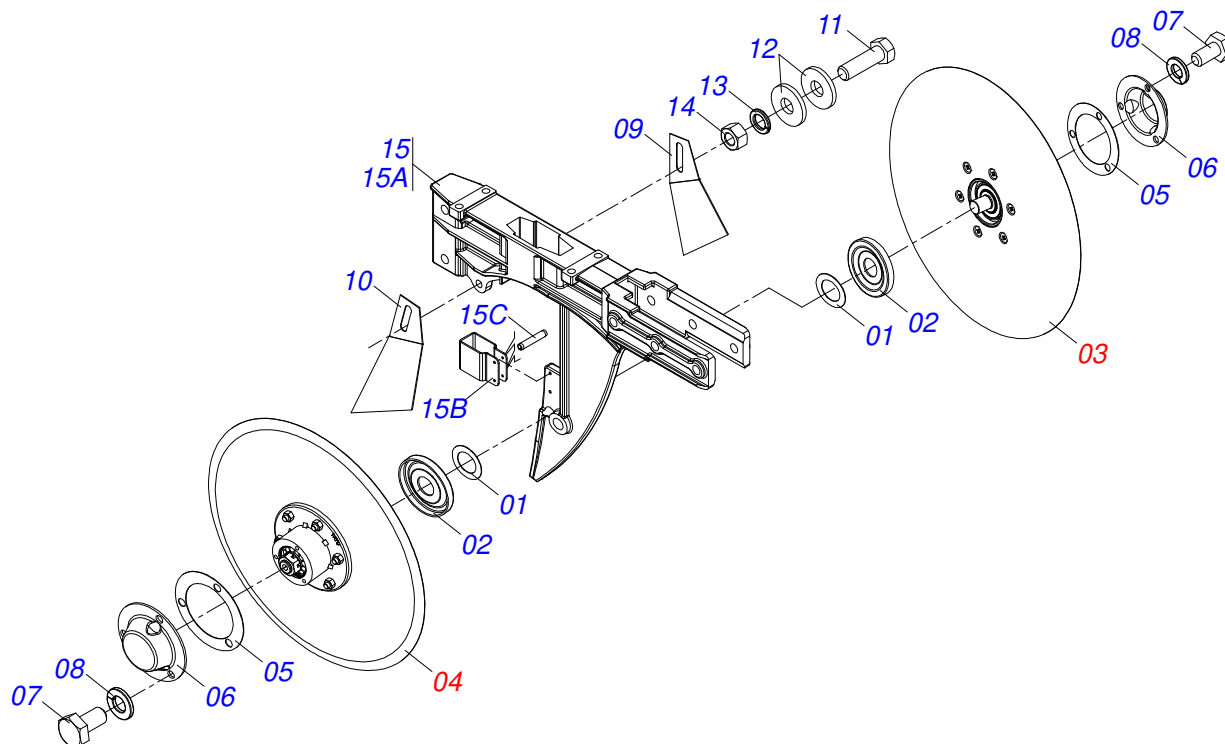


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	BOX DDD ASSY DPL 15 RIGHT	78	01
04	0501054168	BOX DDD ASSY DPL 15 LEFT	79	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052301	SUPPORT DDD 15 RIGHT		01
15A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

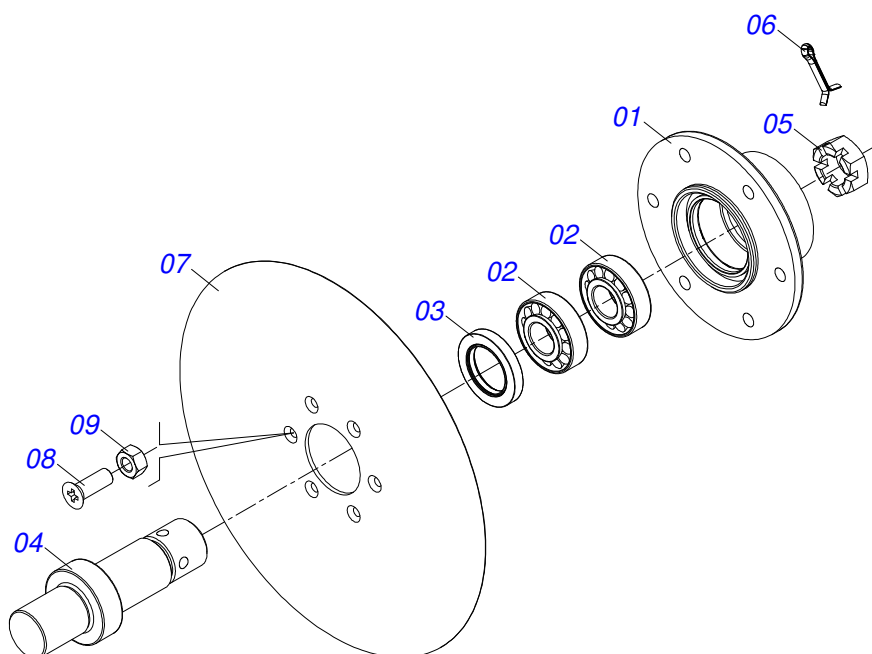


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT DOUB DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

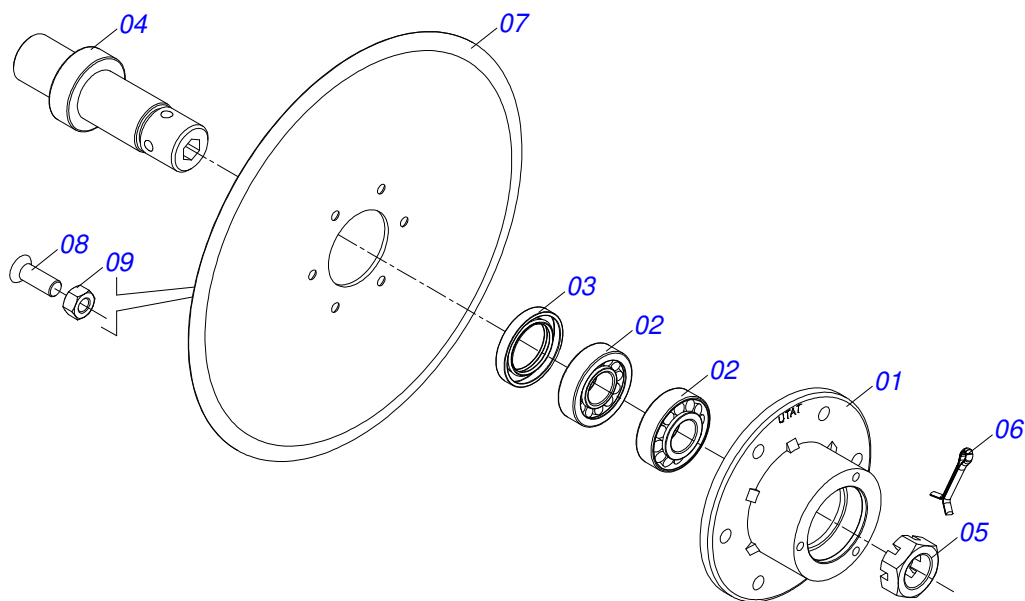


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

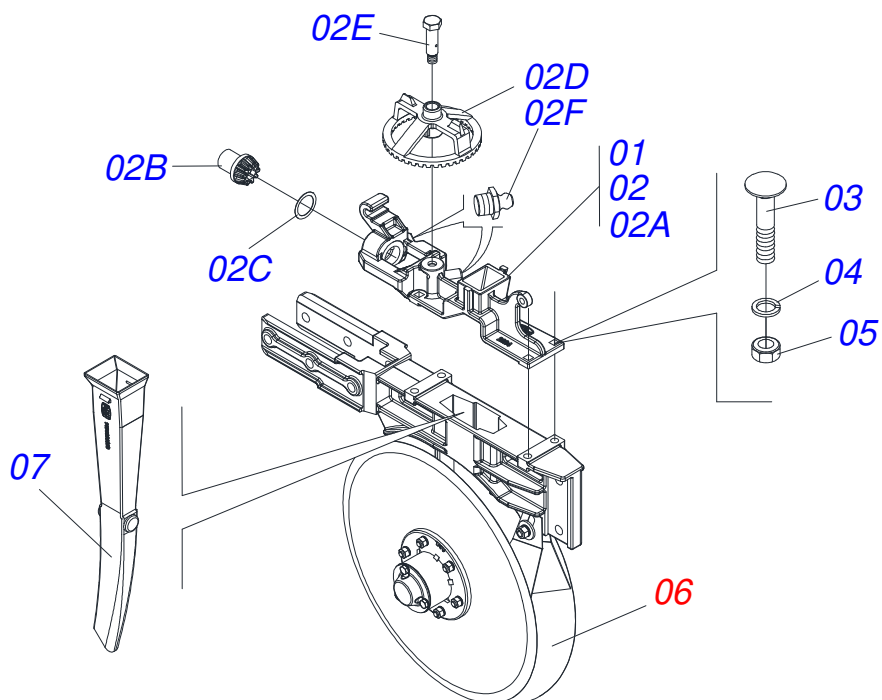


Item	Code	Description	See page	QT
01	0511052318	LH SEED ROW REAR	80	01
02	0501059648	SEED BOX FIXING BASE		01
02A	0502012624	SEED BOX FIXING BASE		01
02B	0502012639	12Z LOWER CONICAL GEAR		01
02C	0501013354	FLAT WASHER		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059632	DDD SEED 15X15 LEFT	81	01
07	0503033124	SOCKET SEED		01

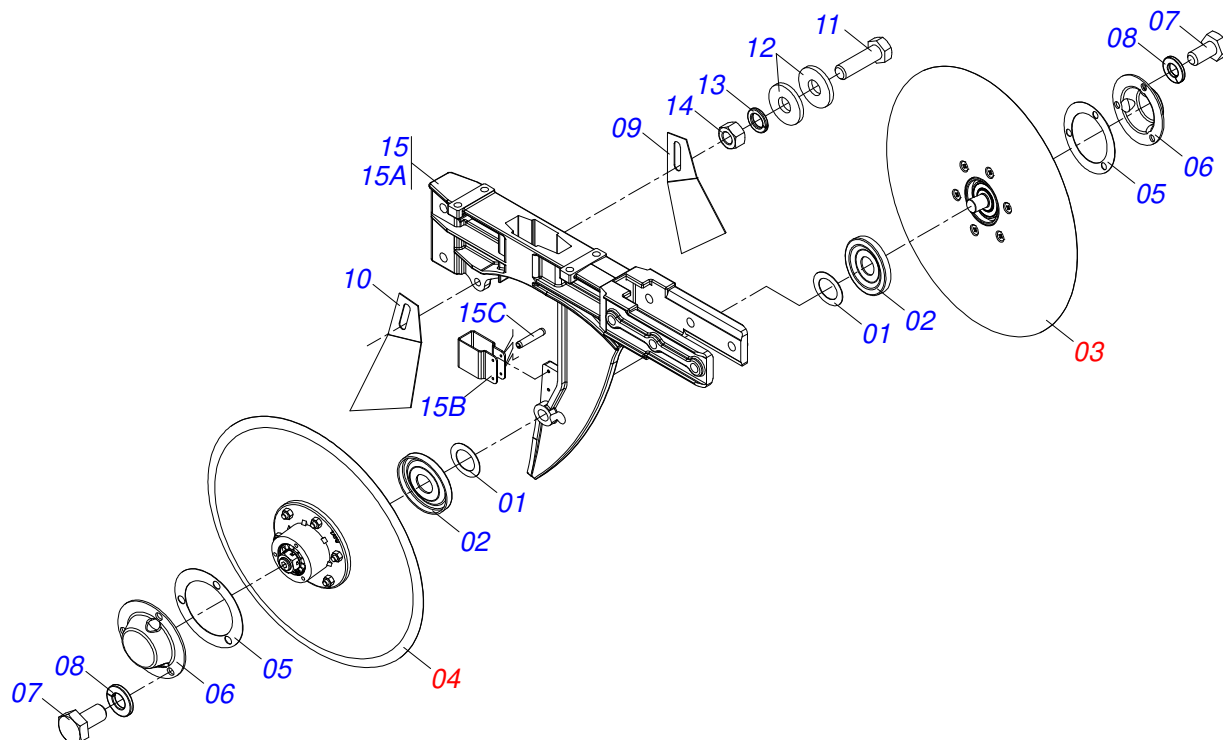


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	BOX DDD ASSY DPL 15 RIGHT	78	01
04	0501054168	BOX DDD ASSY DPL 15 LEFT	79	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052302	LH SUPPORT DDD GUIDE		01
15A	0561015592	LEFT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

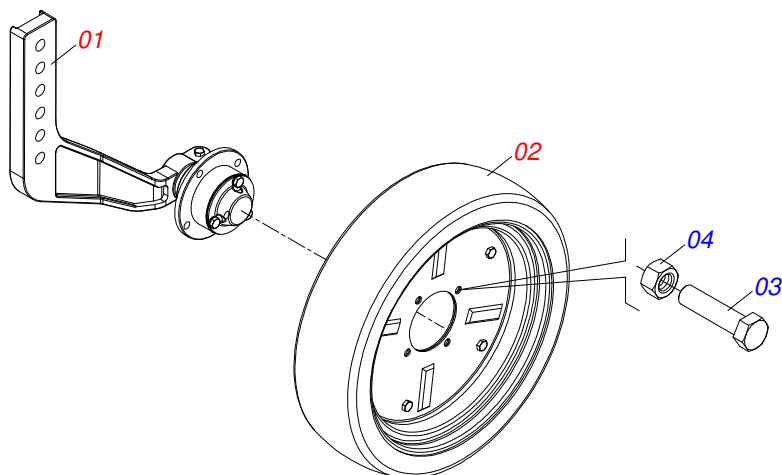


Item	Code	Description	See page	QT
01	0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL	83	01
02	0501052538	DEPTH BAND WITH ARMS	70	01
03	0503010358	5/16" X 5/8" BOLT		04
04	0503013816	5/16" LOCKNUT		04

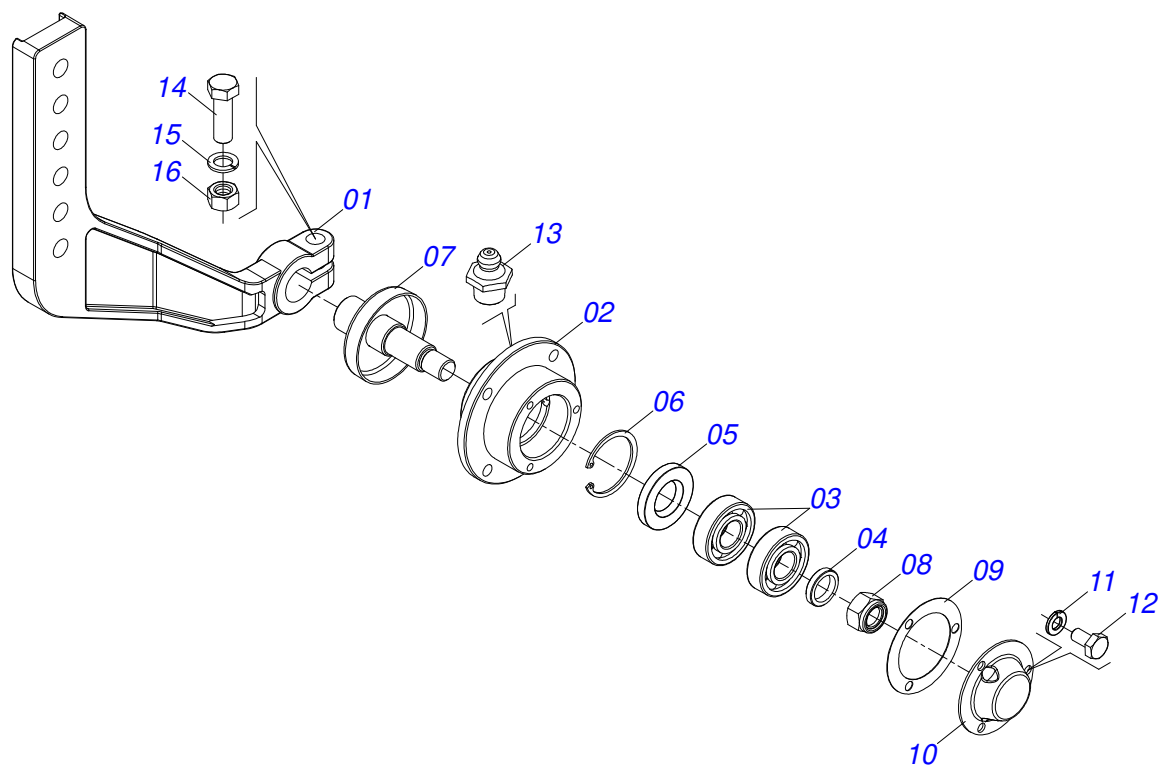


Item	Code	Description	See page	QT
01	0502012090	DEPTH CONTROL RIGHT ARM		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
08	0503010878	5/8" SELF ALIGNING NUT		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0521019178	COVER DEPTH		01
11	0503011441	SPRING WASHER		03
12	0503014729	1/4" UNF X 1/2" BOLT		03
13	0503010691	1/4" GREASE FITTING		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01

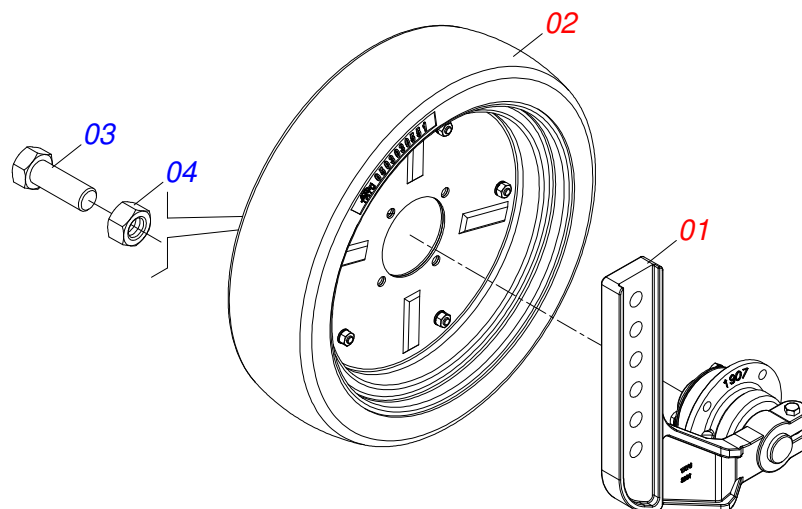


Item	Code	Description	See page	QT
01	0501056435	LEFT CONTROL ARM DEPTH WITHOUT WHEEL	85	01
02	0501052538	DEPTH BAND WITH ARMS	70	01
03	0503010358	5/16" X 5/8" BOLT		04
04	0503013816	5/16" LOCKNUT		04

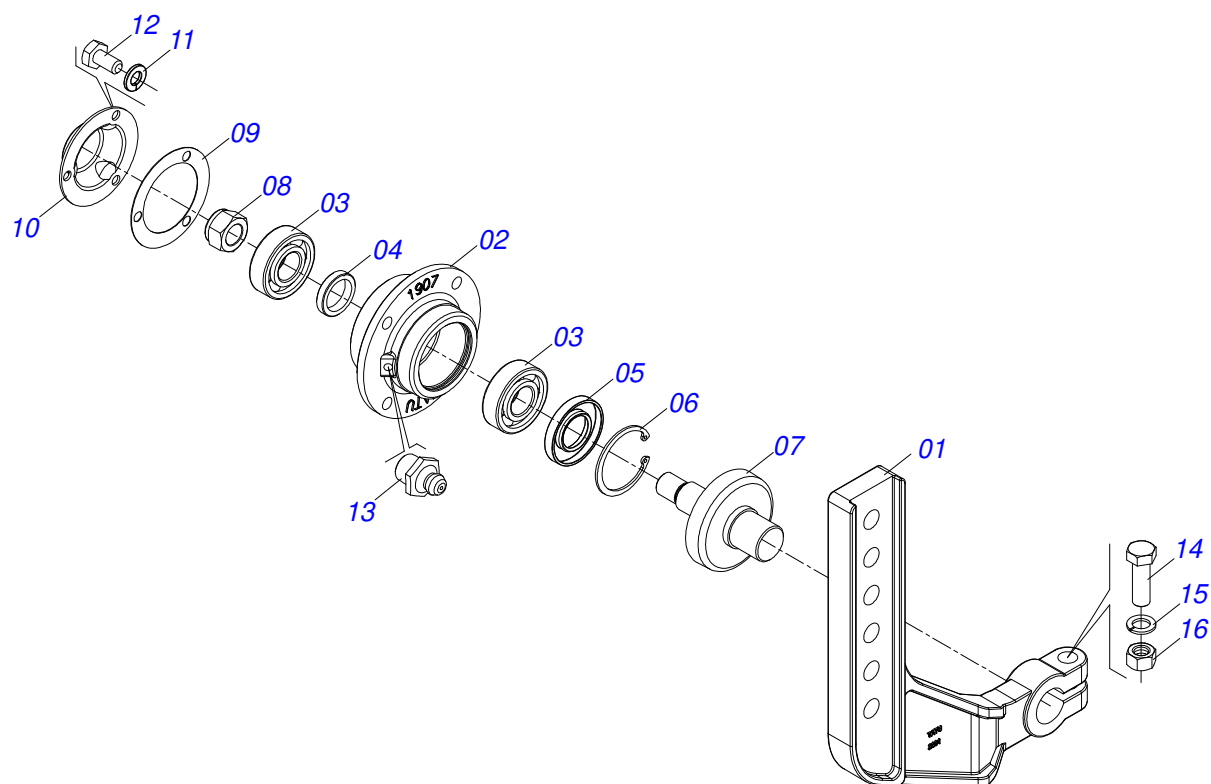


Item	Code	Description	See page	QT
01	0502012091	DEPTH CONTROL LEFT ARM		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
08	0503010878	5/8" SELF ALIGNING NUT		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0521019178	COVER DEPTH		01
11	0503011441	SPRING WASHER		03
12	0503014729	1/4" UNF X 1/2" BOLT		03
13	0503010691	1/4" GREASE FITTING		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01

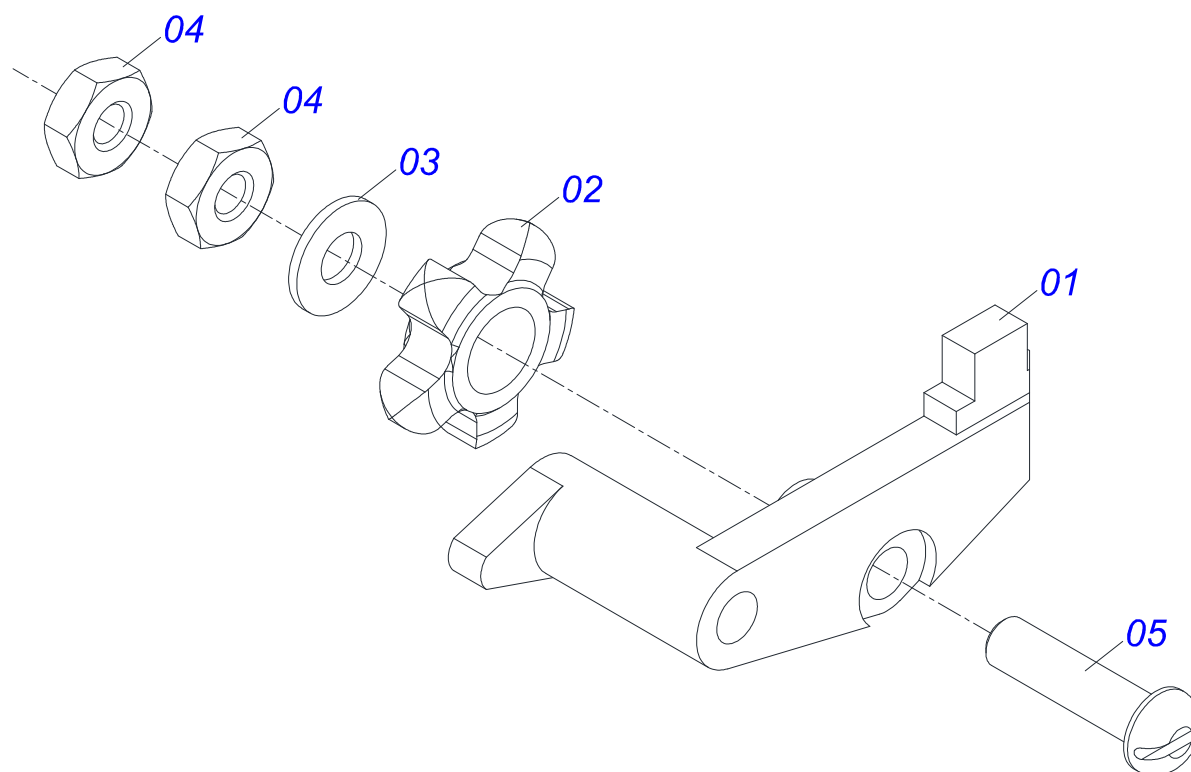


Item	Code	Description	See page	QT
01	0503030379	LARGER ROCKER ARM		01
02	0502060001	PLASTIC PULLEY FOR MAIZE		01
03	0503010669	FLAT WASHER		01
04	0503010667	3/16" NUT		02
05	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		01

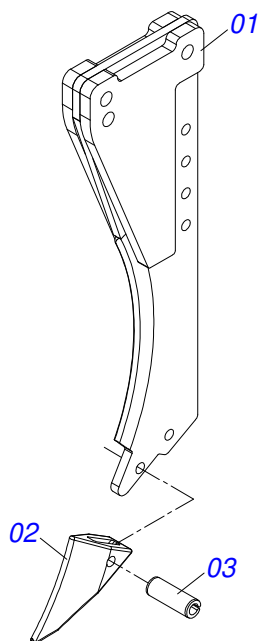

Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER ROD		01
02	1902070061	POINT SUBSOILER		01
03	0503011373	0.4" X 1.1" SPRING PIN		01

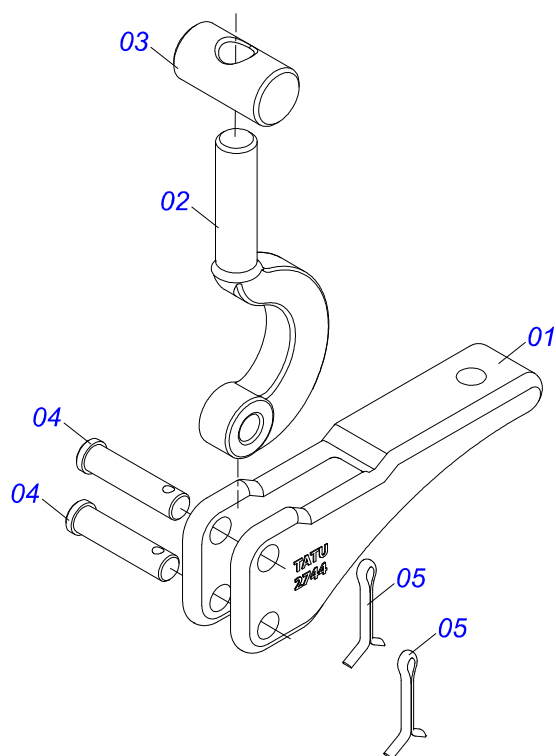

Item	Code	Description	See page	QT
01	0502012744	SPEED LOCK LEVER ASSY		01
02	0502012743	FAST BOLT ASSY		01
03	0571014534	FAST BOLT ADJUSTMENT		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010257	1/8" X 1" COTTERPIN		02

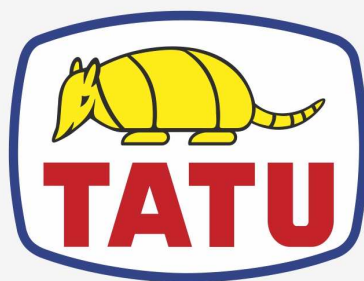

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

