

ROW CROP PLANTERS

PST TRIO

Code: 0501091007
Series: S-0413
Revision: 00
Date Revision: JULHO/2021

PARTS CATALOGUE



MARCHESAN



PRODUCTS

Code	Description
0111270003	PST TRIO 15 E450 CSU CEAC S-0413
0111270001	PST TRIO 15 E450 MH S-0413
0111270004	PST TRIO 15 E450 MH CPRA S-0413
0111270002	PST TRIO 15 E500 MH TIT CSU S-0413

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.



MARCHESAN

INDEX

0909094555	FRAME	1
0909094403	CHASSIS PST TRIO	2
0511059285	5750 ARTICULATION FRAME	3
0511059420	FRAME WITH ARTICULATION 6850	4
0511053196	PST JOINT FRAME	5
0511053769	FRAME WITH ARTICULATION 7960	6
0511059983	7860 ARTICULATION FRAME WITH	7
0511056249	FRAME SHAFT	8
0511054410	FRAME SHAFT	9
0511056155	CHASSIS AVEC JOINT PST	10
0511056059	FRAME SHAFT	11
0511055264	CHASSIS ARTICULATION	12
0511059286	RIGHT FRAME WITH AXLE WHEEL 5750	13
0511059287	LEFT FRAME WITH AXLE WHEEL 5750	14
0511059288	CENTRAL FRAME WITH WHEELED AXLE 5750/6850/7860/8160	15
0511053046	RIGHT FRAME WITH AXLE WHEELED 6850	16
0511053047	LEFT FRAME WITH WHEELED AXLE 6850	17
0511053188	RIGHT FRAME WITH WHEELED AXLE 7450	18
0511053189	LEFT FRAME WITH WHEELED AXLE 7450	19
0511053190	CENTRAL FRAME WITH WHEELED AXLE 6450/7285/7450/8460	20
0511053766	RIGHT FRAME WITH WHEELED AXLE 7960/8160	21
0511053767	LEFT FRAME WITH WHEELED AXLE 7960/8160	22
0511053768	CENTRAL FRAME WITH WHEELED AXLE 5850/7960	23
0511053135	RIGHT FRAME WITH WHEELED AXLE 7860	24
0511053136	LEFT FRAME WITH WHEELED AXLE 7860	25
0511056312	RIGHT FRAME WITH WHEELED AXLE 8460	26
0511056313	LEFT FRAME WITH WHEELED AXLE 8460	27
0511056156	CHASSI RIGHT WITH ER	28
0511056157	LEFT CHASSIS WITH ER	29
0511056064	CENTRAL CHASSIS	30
0511054411	CHASSIS WITH AXLE	31
0511055270	CHASSIS WITH AXLE	32
0511055268	RH FRAME	33
0511055269	LEFT FRAME	34
0511059237	3 POINT TURNBUCKLE	35
0511053075	3 POINT TURNBUCKLE	36
0511053076	TURNBUCKLE SIDE UPPER	37
0511055277	TURNBUCKLE SIDE UPPER	38
0511059236	TURNBUCKLE SIDE	39
0521050133	TURNBUCKLE SIDE 755/480	40
0511053073	TURNBUCKLE SIDE RIGHT	41
0511059971	TURNBUCKLE SIDE	42
0511055275	TURNBUCKLE SIDE	43
0521045756	HYDRAULIC CYLINDER	44
0511058229	CYLINDER ASSEMBLY	45
0511059274	HYDRAULIC CYLINDER ASSEMBLY	46
0511059273	HYDRAULIC CYLINDER ASSEMBLY	47
0511054601	FULL ARTICULATED TRACTOR HITCH	48
0511055096	TRACTOR HITCH	49
0909094574	SEED ROW ASSY	50
0909093321	SEED ROW	51
0909093298	15X15 SEED UNAL DOUB-DISC ASSY	52
0909094454	SEED ASSY	53
0909094084	TITANIUM SEED SYSTEM P.5/8"	54
0909093322	REAR SEED ROW	55



MARCHESAN

INDEX


0909093297	PRESS WHEELS ASSY	56
0909094577	SEED FERTILIZER ROW ASSY,TITANIUM CSU	57
0909094576	SEED ROW FRONT	58
0909094082	TITANIUM SEED SYSTEM ASSY	59
0909094575	FERTILIZER ROW DDD/SPINDLE ASSY	60
0909090102	FERTILIZER UNAL DOUB-DISC ASSY	61
0909093309	BLADE DISC ASSY 18"	62
0511059289	SEMI MOUNTED HYDRAULIC MARKER 5750/5850	63
0511053194	HYDRAULIC MARKER	64
0511053056	MARKER CYLINDER	65
0511053771	MARKER CYLINDER	66
0511058449	HYDRAULIC CYLINDER	67
0501054649	SEQUENTIAL VALVE ASSY	68
0511057889	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8460	69
0511056250	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8960	70
0511056158	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 9460	71
0511055786	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 10460	72
0511058431	HYDRAULIC CYLINDER	73
0501050633	MARKER DISC ASSY LINE	74
0511053904	DISC LINE MARKER	75
0511056536	ASSEMBLY LADDER	76
0511059291	HYDRAULIC SYSTEM ASSEMBLY 5750/5850	77
0511058231	HYDRAULIC SYSTEM ASSEMBLY	78
0511058284	HYDRAULIC SYSTEM ASSEMBLY	79
0511058901	HYDRAULIC SYSTEM ASSEMBLY	80
0511059290	VALVE ASSEMBLY	81
0511053065	FIXER VALVE	82
0511059232	ASSEMBLY SPRING TRACTION	83
0511054971	RESTING ASSEMBLY	84
0511056736	HOSE SUPPORT	85
0511059281	PLATFORM SET	86
0511058233	PLATFORM SET	87
0511058956	PLATFORM SET	88
0511058281	PLATFORM SET	89
0511058888	PLATFORM SET	90
0521050214	PLATFORM SET	91
0511058899	PLATFORM SET	92
0511059282	HANDLE ASSEMBLY 5750	93
0511058234	HANDLE ASSEMBLY 6850	94
0511058955	HANDLE ASSEMBLY 7960	95
0511058276	HANDLE ASSEMBLY 7860	96
0511058282	HANDLE ASSEMBLY 8460	97
0511058898	HANDLE ASSEMBLY 10460	98
0511059276	ASSEMBLY TRANSMISSION 5750	99
0511051434	TRANSMISSION DRIVING ASSY	100
0511047069	SIDE TRANSMISSION DRIVING	101
0511047070	LH SIDE TRANSMISSION DRIVING	102
0521043317	LEFT GEAR BOX ASSY	103
0501048790	AXLE WITH LINK ASSY	104
0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	105
0501056443	BEARING ASSY GEAR BOX	106
0511059266	CLOSED BEARING	107
0501054655	CHAIN TENSIONER ASSY	108
0511058263	TRANSMISSION ASSEMBLY 6850	109
0511058271	TRANSMISSION ASSEMBLY 7450	110



MARCHESAN

INDEX


0511058836	ASSEMBLY TRANSMISSION 7960/8160/8460	111
0521050216	TRANSMISSION ASSEMBLY 9460	112
0511058850	TRANSMISSION ASSEMBLY 9960/10460	113
0511059280	ASSY SILO FERTILIZER 5750	114
0511058232	SET FERTILIZER SILO	115
0511058250	SET FERTILIZER SILO	116
0511058186	SET FERTILIZER SILO	117
0511058953	SET FERTILIZER SILO	118
0511058274	SET FERTILIZER SILO	119
0511058280	SET FERTILIZER SILO	120
0511058887	SET FERTILIZER SILO	121
0521050215	SET FERTILIZER SILO	122
0511058847	SET FERTILIZER SILO	123
0511058900	SET FERTILIZER SILO	124
0909092541	SEED/FERTILIZER BOX SUPPORT	125
0909092536	FERTILIZER BOX SUPPORT	126
0909092540	LEFT FERTILIZER BOX SUPPORT	127
0909092539	LEFT FERTILIZER BOX SUPPORT	128
0909092542	LH FERTILIZER BOX SUPPORT	129
0909092538	BOX SUPPORT RIGHT FERTILIZER	130
0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	131
0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	132
0511059275	ASSY PORT MANUAL INSTRUCCION	133
0503061984	FERTILIZER HOPPER WITH 4 TRUNNELS	134
0503061985	FERTILIZER HOPPER WITH 5 TRUNNELS	135
0503062169	SILO FERTILIZER 6 MOUTHS MOUNTED	136
0503062391	SILO FERTILIZER 05 MOUTHS	137
0503062362	SILO FERTILIZER 04 MOUTH	138
0511059265	WHEELED WITH SPRING TRACTION WITH TRANSMISSION	139
0511059262	WHEEL SUPPORT ASSY	140
0511052770	WHEEL WITH TIRE 7.00X16 ASSY WHEELED BOX	141
0503062159	WHEEL	142
0511052769	WHEEL TRANSMISSION WITHOUT TIRE	143
0521043313	WHEELED WITH SPRING TRACTION WITHOUT TRANSMISSION	144
0511059233	INTERMEDIATE TRANSMISSION	145
0503062206	CARDAN TERMINAL	146
0511057287	TRANSMISSION	147

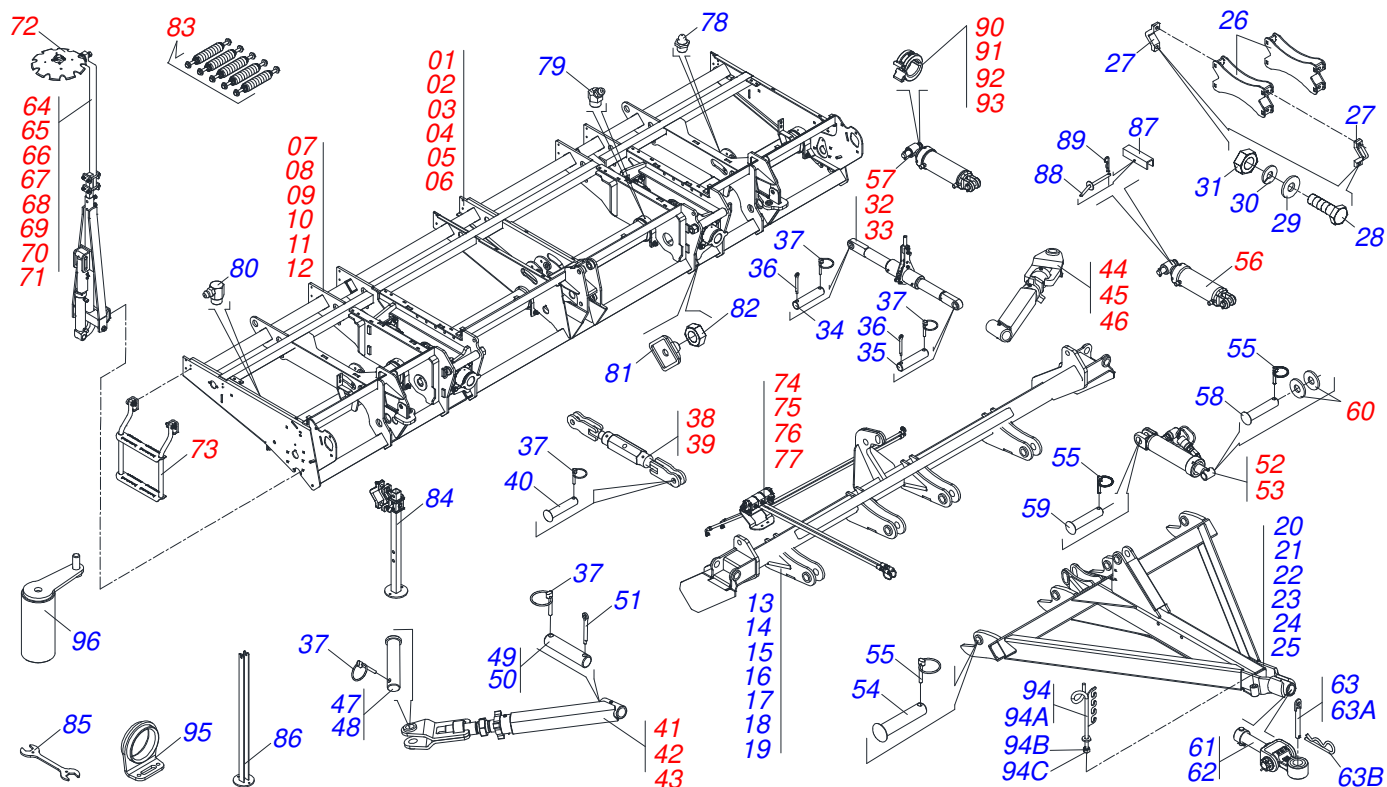

Item	Code	Description	See page	13	15	16	17	18	19	21
001	0511059285	5750 ARTICULATION FRAME	3	01	00	00	00	00	00	00
002	0511059420	FRAME WITH ARTICULATION 6850	4	00	01	00	00	00	00	00
003	0511053196	PST JOINT FRAME	5	00	01	01	00	00	00	00
004	0511053769	FRAME WITH ARTICULATION 7960	6	00	00	01	00	00	00	00
005	0511059983	7860 ARTICULATION FRAME WITH	7	00	00	00	01	00	00	00
006	0511056311	ARTICULATION FRAME 8460		00	00	00	01	01	00	00
007	0511056311	ARTICULATION FRAME 8460		00	00	00	00	01	00	00
008	0511056249	FRAME SHAFT	8	00	00	00	00	01	00	00
009	0511054410	FRAME SHAFT	9	00	00	00	00	00	01	00
010	0511056155	CHASSIS AVEC JOINT PST	10	00	00	00	00	00	01	00
011	0511056059	FRAME SHAFT	11	00	00	00	00	00	00	01
012	0511055264	CHASSIS ARTICULATION	12	00	00	00	00	00	00	01
013	0521066290	INTERMEDIATE HEAD 5750/6850/7860/8160		01	01	00	01	00	00	00
014	0521065283	INTERMEDIATE HEAD		00	00	01	00	01	00	00
015	0521067151	INTERMEDIATE HEAD 5850/7960		00	00	01	00	00	00	00
016	0521064024	DRAWBAR INTERMEDIARY		00	00	00	01	00	00	00
017	0521065203	INTERMEDIATE HEAD		00	00	00	00	01	00	01
018	0521064465	TELESCOPIC HEADER		00	00	00	00	00	01	00
019	0521064822	INTERMEDIATE HEAD		00	00	00	00	00	01	01
020	0521066289	FRONT HEADER 5750/6350/6850		01	01	01	01	00	00	00
021	0521065283	INTERMEDIATE HEAD		00	01	00	00	00	00	00
022	0521065284	IDRAULIC HEAD		00	00	01	00	01	00	00
023	0521063882	DRAWBAR		00	00	00	01	00	01	00
024	0521065202	TELESCOPIC		00	00	00	00	01	00	01
025	0521064835	HEADER		00	00	00	00	00	01	01
026	0511061021	SUPPORT FASTENER		04	04	04	04	04	04	04
027	0502010175	HITCH CLAMP		06	06	06	06	06	06	06
028	0501010163	5/8" X 4-1/2" BOLT		16	16	16	16	16	16	16
029	0501012140	FLAT WASHER		16	16	16	16	16	16	16
030	0503010027	5/8" SPRING WASHER		16	16	16	16	16	16	16
031	0503010013	5/8" NUT		16	16	16	16	16	16	16


Item	Code	Description	See page	13	15	16	17	18	19	21
032	0511059237	3 POINT TURNBUCKLE	35	01	01	00	01	00	00	00
033	0511053075	3 POINT TURNBUCKLE	36	00	01	01	01	01	01	01
034	0571019951	JUNCTION SHAFT		01	01	01	01	01	01	01
035	0571019950	COUPLING SHAFT		01	01	01	01	01	01	01
036	0503010523	1/4" X 2" COTTERPIN		04	04	04	04	04	04	04
037	0503030119	LOCK PIN		06	06	06	06	06	06	06
038	0511053076	TURNBUCKLE SIDE UPPER	37	02	00	00	00	00	01	00
039	0511055277	TURNBUCKLE SIDE UPPER	38	00	00	00	00	00	00	02
040	0521010571	COUPLING SHAFT		04	04	04	04	04	04	04
041	0511059236	TURNBUCKLE SIDE	39	02	00	00	00	00	00	00
042	0521050133	TURNBUCKLE SIDE 755/480	40	00	02	02	00	00	00	00
043	0511053073	TURNBUCKLE SIDE RIGHT	41	00	02	00	00	00	02	00
044	0511059971	TURNBUCKLE SIDE	42	00	00	02	00	00	00	00
045	0511059980	TURNBUCKLE SIDE		00	00	00	02	00	00	00
046	0511055275	TURNBUCKLE SIDE	43	00	00	00	02	02	02	02
047	0521010780	1.2" X 4.5" COUPLING SHAFT		04	00	00	00	00	00	00
048	0571019949	JUNCTION SHAFT		00	04	04	04	04	04	04
049	0521010588	0.9" X 7.0" COUPLING SHAFT		02	00	00	00	00	00	00
050	0571019951	JUNCTION SHAFT		00	02	02	02	02	02	02
051	0503010523	1/4" X 2" COTTERPIN		04	04	04	04	04	04	04
052	0521045756	HYDRAULIC CYLINDER	44	01	00	00	00	00	00	00
053	0511058229	CYLINDER ASSEMBLY	45	00	01	01	01	01	01	01
054	0571019949	JUNCTION SHAFT		04	04	04	04	04	04	04
055	0503030085	LOCK PIN		04	04	04	04	04	04	04
056	0511059274	HYDRAULIC CYLINDER ASSEMBLY	46	02	02	02	02	02	02	02
057	0511059273	HYDRAULIC CYLINDER ASSEMBLY	47	01	01	01	01	01	01	01
058	0521010582	COUPLING SHAFT		01	01	01	01	01	01	01
059	0521010580	COUPLING SHAFT		01	01	01	01	01	01	01
060	0531016049	FLAT WASHER		02	02	02	02	02	02	02
061	0511054601	FULL ARTICULATED TRACTOR HITCH	48	00	01	00	01	01	01	00
062	0511055096	TRACTOR HITCH	49	01	00	01	00	00	00	01
063	0511053179	TRACTOR HITCH AXLE		01	01	01	01	01	01	01
063A	0521064036	TRACTOR HITCH AXLE		01	01	01	01	01	01	01
063B	0503030012	HAIR PIN		01	01	01	01	01	01	01
064	0511059289	SEMI MOUNTED HYDRAULIC MARKER 5750/5850	63	01	00	00	00	00	00	00
065	0511053194	HYDRAULIC MARKER	64	00	01	00	00	00	00	00
066	0511053056	MARKER CYLINDER	65	00	01	00	00	00	00	00
067	0511053771	MARKER CYLINDER	66	00	00	01	00	00	00	00
068	0511057889	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8460	69	00	00	00	01	00	00	00
069	0511056250	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8960	70	00	00	00	00	01	00	00
070	0511056158	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 9460	71	00	00	00	00	00	01	00
071	0511055786	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 10460	72	00	00	00	00	00	00	01
072	0501050633	MARKER DISC ASSY LINE	74	02	02	02	02	02	02	02
073	0511056536	ASSEMBLY LADDER	76	02	02	02	02	02	02	02
074	0511059291	HYDRAULIC SYSTEM ASSEMBLY 5750/5850	77	01	00	00	00	00	00	00
075	0511058231	HYDRAULIC SYSTEM ASSEMBLY	78	00	01	01	01	00	00	00
076	0511058284	HYDRAULIC SYSTEM ASSEMBLY	79	00	00	00	01	01	00	00
077	0511058901	HYDRAULIC SYSTEM ASSEMBLY	80	00	00	00	00	00	01	01
078	0503010002	1800 GREASE FITTING		02	02	02	02	02	02	02
079	0503010003	1845 GREASE FITTING		08	08	08	08	08	08	08
080	0503010004	1890 GREASE FITTING		02	02	02	02	02	02	02
081	0521064285	LOCK LOWER FRAME		02	02	02	02	02	02	02
082	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		02	02	02	02	02	02	02
083	0511059232	ASSEMBLY SPRING TRACTION	83	02	02	02	02	02	02	02
084	0511054971	RESTING ASSEMBLY	84	02	02	02	02	02	02	02
085	0541015451	FIXED KEY 2.3/8 X 2.3/4		01	01	01	01	01	01	01

Item	Code	Description	See page	13	15	16	17	18	19	21
086	0501065677	STRUT		02	02	02	02	02	02	02
087	0521013022	TRANSPORT LOCK		03	03	03	03	03	03	03
088	0501068994	0.3" X 3.1"LOCK PIN		03	03	03	03	03	03	03
089	0503030168	HAIR PIN		03	03	03	03	03	03	03
090	0501047895	ROD STOP		03	03	03	03	03	03	03
091	0501047885	ROD STOP		03	03	03	03	03	03	03
092	0501047886	ROD STOP		03	03	03	03	03	03	03
093	0501047887	ROD STOP		03	03	03	03	03	03	03
94	0511056736	HOSE SUPPORT	85	01	01	01	01	01	01	01
94A	0521065611	HOSE SUPPORT		01	01	01	01	01	01	01
94B	0503010023	3/4" SPRING WASHER		01	01	01	01	01	01	01
94C	0503010014	3/4" NUT		01	01	01	01	01	01	01
95	0521066304	HOSE GUIDE		01	01	01	01	01	01	01
96	0521066800	BODY REGULATORY KEY		01	01	01	01	01	01	01

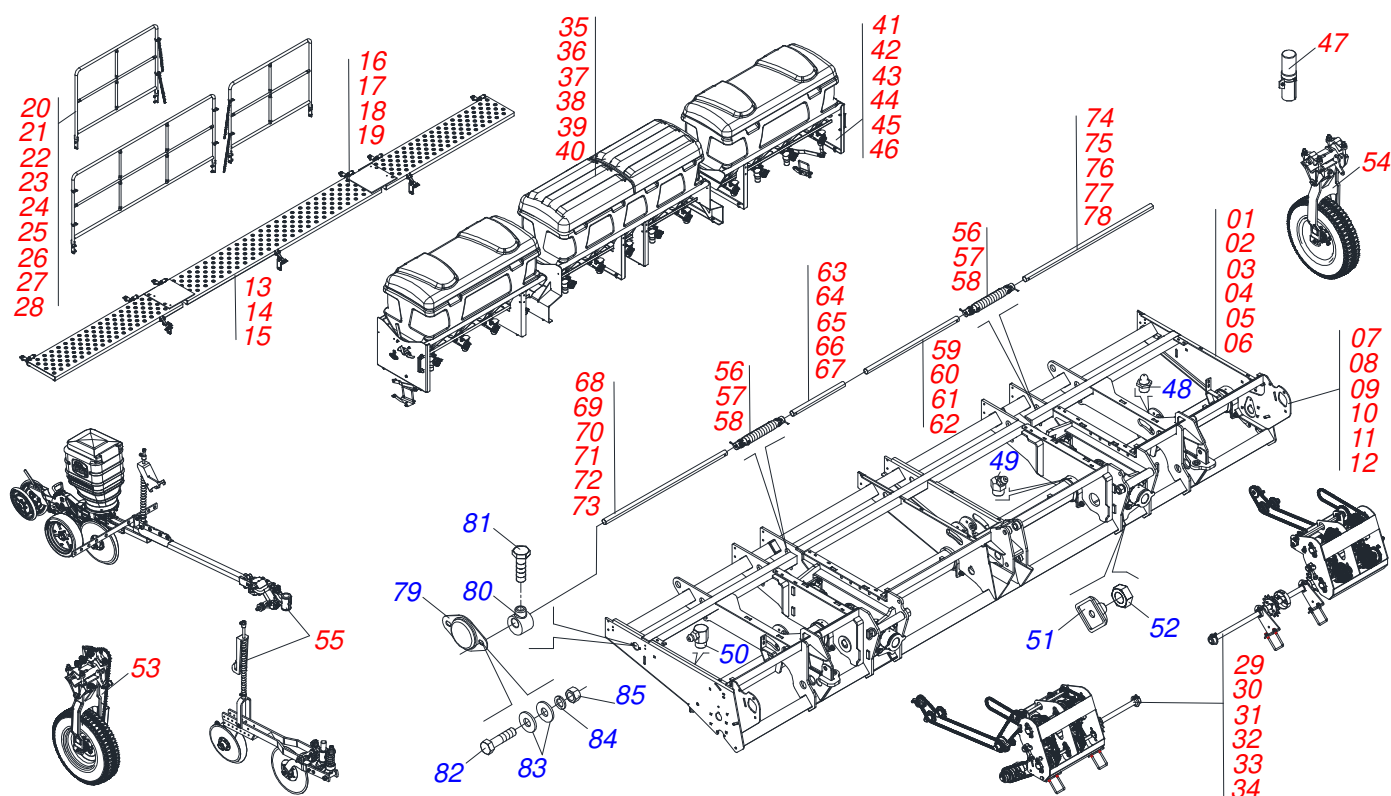


Item	Code	Description	See page	13	15	16	17	18	19	21	L
01	0511059285	5750 ARTICULATION FRAME	3	01	00	00	00	00	00	00	
02	0511059420	FRAME WITH ARTICULATION 6850	4	00	01	00	00	00	00	00	
03	0511053196	PST JOINT FRAME	5	00	01	01	00	00	00	00	
04	0511053769	FRAME WITH ARTICULATION 7960	6	00	00	01	00	00	00	00	
05	0511059983	7860 ARTICULATION FRAME WITH	7	00	00	00	01	00	00	00	
06	0511056311	ARTICULATION FRAME 8460		00	00	00	01	00	00	00	
07	0511056311	ARTICULATION FRAME 8460		00	00	00	00	01	00	00	
08	0511056249	FRAME SHAFT	8	00	00	00	00	01	00	00	
09	0511054410	FRAME SHAFT	9	00	00	00	00	00	01	00	
10	0511056155	CHASSIS AVEC JOINT PST	10	00	00	00	00	00	01	00	
11	0511056059	FRAME SHAFT	11	00	00	00	00	00	00	01	
12	0511055264	CHASSIS ARTICULATION	12	00	00	00	00	00	00	01	
13	0511059281	PLATFORM SET	86	01	00	00	00	00	00	00	
14	0511058233	PLATFORM SET	87	00	01	00	00	00	00	00	
15	0511058956	PLATFORM SET	88	00	00	01	00	00	00	00	
16	0511058281	PLATFORM SET	89	00	00	00	01	00	00	00	
17	0511058888	PLATFORM SET	90	00	00	00	00	01	00	00	
18	0521050214	PLATFORM SET	91	00	00	00	00	00	01	00	
19	0511058899	PLATFORM SET	92	00	00	00	00	00	00	01	
20	0511059282	HANDLE ASSEMBLY 5750	93	01	00	00	00	00	00	00	
21	0511058234	HANDLE ASSEMBLY 6850	94	00	01	00	00	00	00	00	
22	0511058252	HANDLE ASSEMBLY 7450		00	01	00	00	00	00	00	
23	0511058955	HANDLE ASSEMBLY 7960	95	00	00	01	00	00	00	00	
24	0511058276	HANDLE ASSEMBLY 7860	96	00	00	00	01	00	00	00	
25	0511058282	HANDLE ASSEMBLY 8460	97	00	00	00	01	00	00	00	
26	0511058889	HANDLE ASSEMBLY 8960		00	00	00	00	01	00	00	
27	0521050213	HANDLE ASSEMBLY 9460		00	00	00	00	00	01	00	
28	0511058898	HANDLE ASSEMBLY 10460	98	00	00	00	00	00	00	01	
29	0511059276	ASSEMBLY TRANSMISSION 5750	99	01	00	00	00	00	00	00	
30	0511058263	TRANSMISSION ASSEMBLY 6850	109	00	01	00	00	00	00	00	
31	0511058271	TRANSMISSION ASSEMBLY 7450	110	00	01	00	00	00	00	00	


Item	Code	Description	See page	13	15	16	17	18	19	21	L
32	0511058836	ASSEMBLY TRANSMISSION 7960/8160/8460	111	00	00	01	01	01	00	00	
33	0521050216	TRANSMISSION ASSEMBLY 9460	112	00	00	00	00	00	01	00	
34	0511058850	TRANSMISSION ASSEMBLY 9960/10460	113	00	00	00	00	00	00	01	
35	0511059280	ASSY SILO FERTILIZER 5750	114	01	00	00	00	00	00	00	
36	0511058232	SET FERTILIZER SILO	115	00	01	00	00	00	00	00	
37	0511058250	SET FERTILIZER SILO	116	00	01	00	00	00	00	00	
38	0511058186	SET FERTILIZER SILO	117	00	00	01	00	00	00	00	
39	0511058953	SET FERTILIZER SILO	118	00	00	01	00	00	00	00	
40	0511058274	SET FERTILIZER SILO	119	00	00	00	01	00	00	00	
41	0511058280	SET FERTILIZER SILO	120	00	00	00	01	00	00	00	
42	0521050250	SET FERTILIZER SILO		00	00	00	00	01	00	00	
43	0511058887	SET FERTILIZER SILO	121	00	00	00	00	01	00	00	
44	0521050215	SET FERTILIZER SILO	122	00	00	00	00	00	01	00	
45	0511058847	SET FERTILIZER SILO	123	00	00	00	00	00	00	01	
46	0511058900	SET FERTILIZER SILO	124	00	00	00	00	00	00	01	
47	0511059275	ASSY PORT MANUAL INSTRUCCION	133	01	01	01	01	01	01	01	
48	0503010002	1800 GREASE FITTING		02	02	02	02	02	02	02	
49	0503010003	1845 GREASE FITTING		08	08	08	08	08	08	08	
50	0503010004	1890 GREASE FITTING		02	02	02	02	02	02	02	
51	0521064285	LOCK LOWER FRAME		02	02	02	02	02	02	02	
52	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		02	02	02	02	02	02	02	
53	0511059265	WHEELED WITH SPRING TRACTION WITH TRANSMISSION	139	04	04	04	04	04	04	04	
54	0521043313	WHEELED WITH SPRING TRACTION WITHOUT TRANSMISSION	144	02	02	02	02	02	02	02	
55	0909094574	SEED ROW ASSY	50	13	15	16	17	18	19	21	
56	0511059233	INTERMEDIATE TRANSMISSION	145	02	00	00	00	00	00	00	
57	0503062206	CARDAN TERMINAL	146	00	02	02	02	02	02	02	
58	0511057287	TRANSMISSION	147	00	00	02	00	02	00	00	
59	0571013470	5/8 X 1100 HEX AXLE		01	01	02	01	02	02	00	
60	0571013724	5/8 X 1250 HEX AXLE		00	01	00	01	02	02	01	
61	0571013726	5/8 X 800 HEX AXLE		00	00	02	00	00	00	00	
62	0571015984	HEX AXLE		00	00	00	00	00	00	01	
63	0571013469	5/8 X 700 HEX AXLE		01	01	00	01	00	00	00	
64	0571013726	5/8 X 800 HEX AXLE		00	01	00	01	00	00	00	
65	0571014898	HEX AXLE		00	00	00	00	00	01	00	
66	0541017650	HEX AXLE		00	00	00	00	00	00	01	
67	0571015983	HEX AXLE		00	00	00	00	00	00	01	
68	0581010472	HEX AXLE		02	00	00	00	00	00	00	
69	0571013468	5/8 X 2040 HEX AXLE		00	02	00	00	00	00	00	
70	0571013725	5/8 X 2190 HEX AXLE		00	02	00	00	00	00	00	
71	0581012787	HEX AXLE		00	00	02	00	00	00	00	
72	0571014914	SHAFT AXLE		00	00	02	00	02	00	00	
73	0581013887	HEX AXLE		00	00	00	02	00	00	00	
74	0551016265	HEX AXLE		00	00	00	02	00	00	00	
75	0581013362	HEX AXLE		00	00	00	00	02	00	00	
76	0571013614	HEX AXLE		00	00	00	00	00	02	00	
77	0531012714	HEX AXLE		00	00	00	00	00	02	00	
78	0571015982	HEX AXLE		00	00	00	00	00	00	02	
79	0561014215	BEARING COVER LOWER ROW FRAME		02	02	02	02	02	02	02	
80	0502040534	SPRING GUIDE BUSHING LOCK		08	08	08	08	08	08	08	
81	0501018535	1/2 X 1 BOLT		08	08	08	08	08	08	08	
82	0503010365	NUT		02	02	02	02	02	02	02	
83	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04	04	04	04	04	04	04	
84	0503010179	5/16" ZN SPRING WASHER		02	02	02	02	02	02	02	
85	0503010337	5/16" NUT		02	02	02	02	02	02	02	

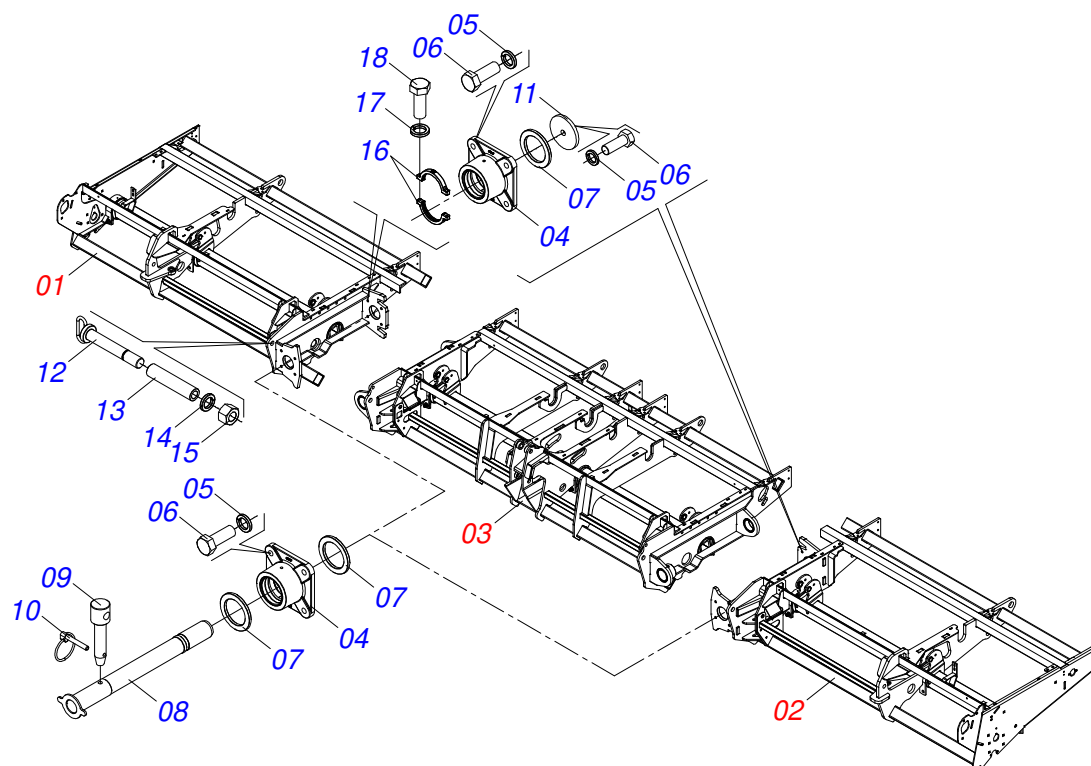


Item	Code	Description	See page	QT
01	0511059286	RIGHT FRAME WITH AXLE WHEEL 5750	13	01
02	0511059287	LEFT FRAME WITH AXLE WHEEL 5750	14	01
03	0511059288	CENTRAL FRAME WITH WHEELED AXLE 5750/6850/7860/8160	15	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0521063003	LOCK PIN		02
13	0571010969	LOCK SLEEVE FRAME		02
14	0503013627	1.1/2 SPRING WASHER		02
15	0501010110	1.1/2" NUT		02
16	0502012698	CLAMP		04
17	0503011444	SPRING WASHER		04
18	0503010363	5/16" X 1" BOLT		04

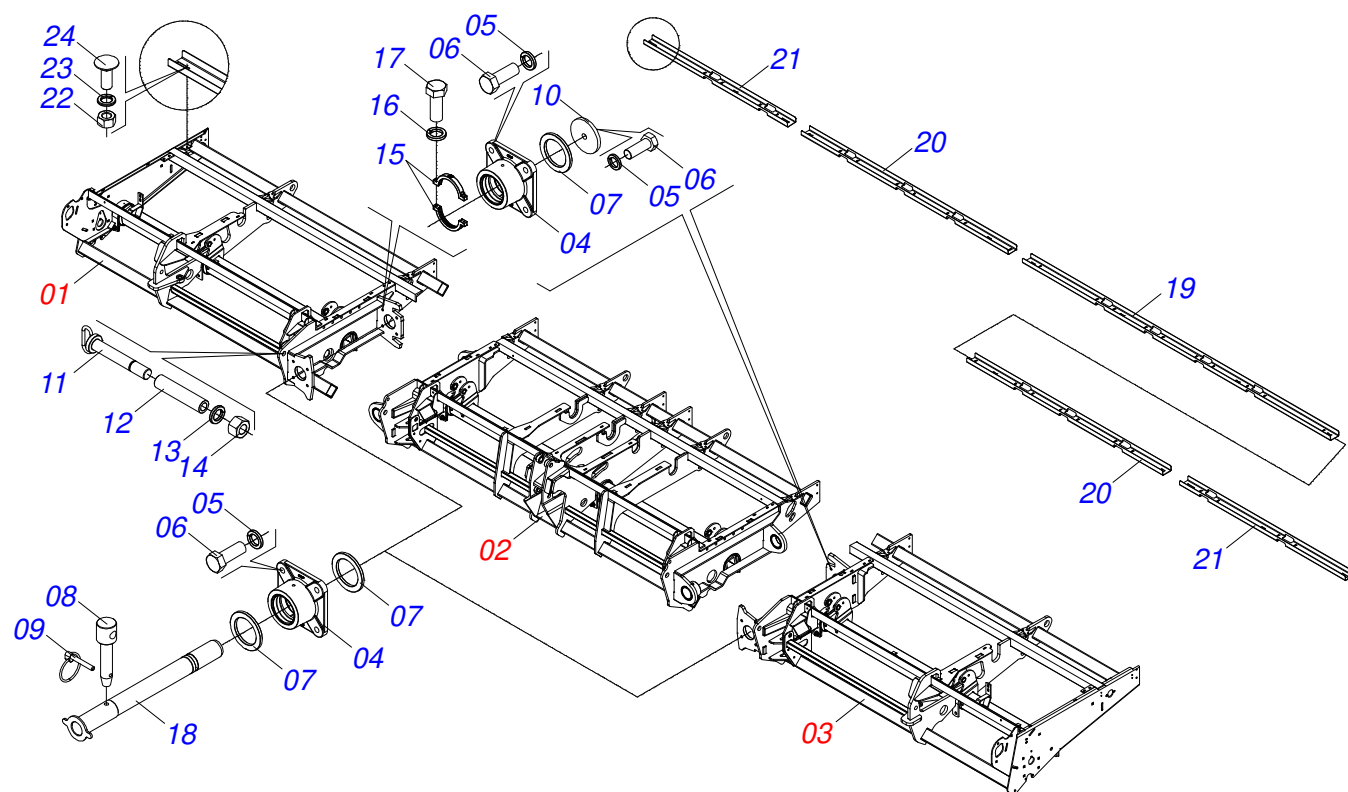


Item	Code	Description	See page	QT
01	0511053046	RIGHT FRAME WITH AXLE WHEELED 6850	16	01
02	0511059288	CENTRAL FRAME WITH WHEELED AXLE 5750/6850/7860/8160	15	01
03	0511053047	LEFT FRAME WITH WHEELED AXLE 6850	17	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0571013510	LOCK AXLE		02
09	0503030085	LOCK PIN		02
10	0571010095	FLAT WASHER		02
11	0521063003	LOCK PIN		02
12	0571010969	LOCK SLEEVE FRAME		02
13	0503013627	1.1/2 SPRING WASHER		02
14	0501010110	1.1/2" NUT		02
15	0502012698	CLAMP		04
16	0503011444	SPRING WASHER		04
17	0503010365	NUT		04
18	0521063912	PIVOT SHAFT		02
19	0581015857	GUTTER 24 X 50 X 1080		01
20	0581018001	GUTTER 24 X 50 X 980		02
21	0581017747	GUTTER 25 X 50 X 1200		02
22	0503010026	3/8" NUT		12
23	0503010025	3/8" SPRING WASHER		12
24	0501011643	3/8 X 1" BOLT		12

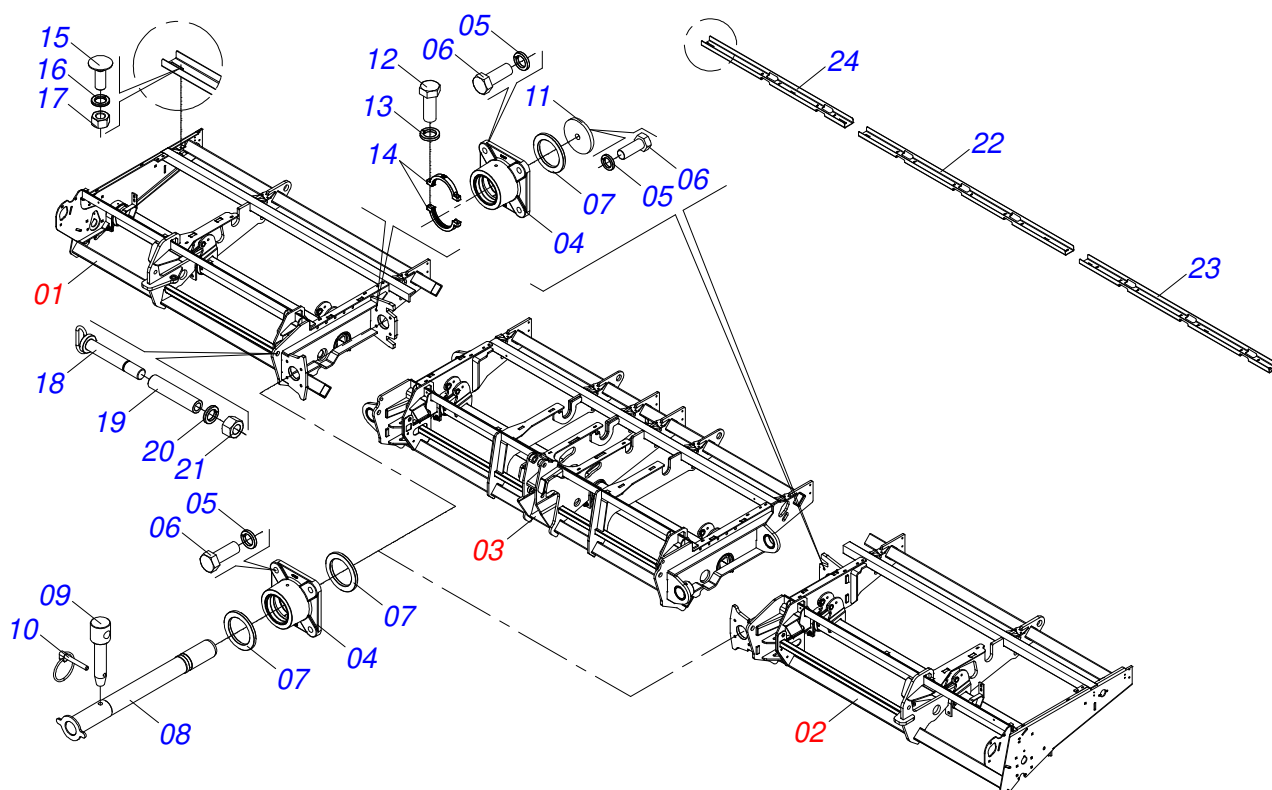


Item	Code	Description	See page	QT
01	0511053188	RIGHT FRAME WITH WHEELED AXLE 7450	18	01
02	0511053189	LEFT FRAME WITH WHEELED AXLE 7450	19	01
03	0511053190	CENTRAL FRAME WITH WHEELED AXLE 20 6450/7285/7450/8460	20	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503010365	NUT		04
13	0503011444	SPRING WASHER		04
14	0502012698	CLAMP		04
15	0501011643	3/8 X 1" BOLT		14
16	0503010025	3/8" SPRING WASHER		14
17	0503010026	3/8" NUT		14
18	0521063003	LOCK PIN		02
19	0571010969	LOCK SLEEVE FRAME		02
20	0503013627	1.1/2 SPRING WASHER		02
21	0501010110	1.1/2" NUT		02
22	0581018018	TROUGH 24 X 50 X 1255		02
23	0581018019	TROUGH 24 X 50 X 1070		02
24	0581015857	GUTTER 24 X 50 X 1080		02

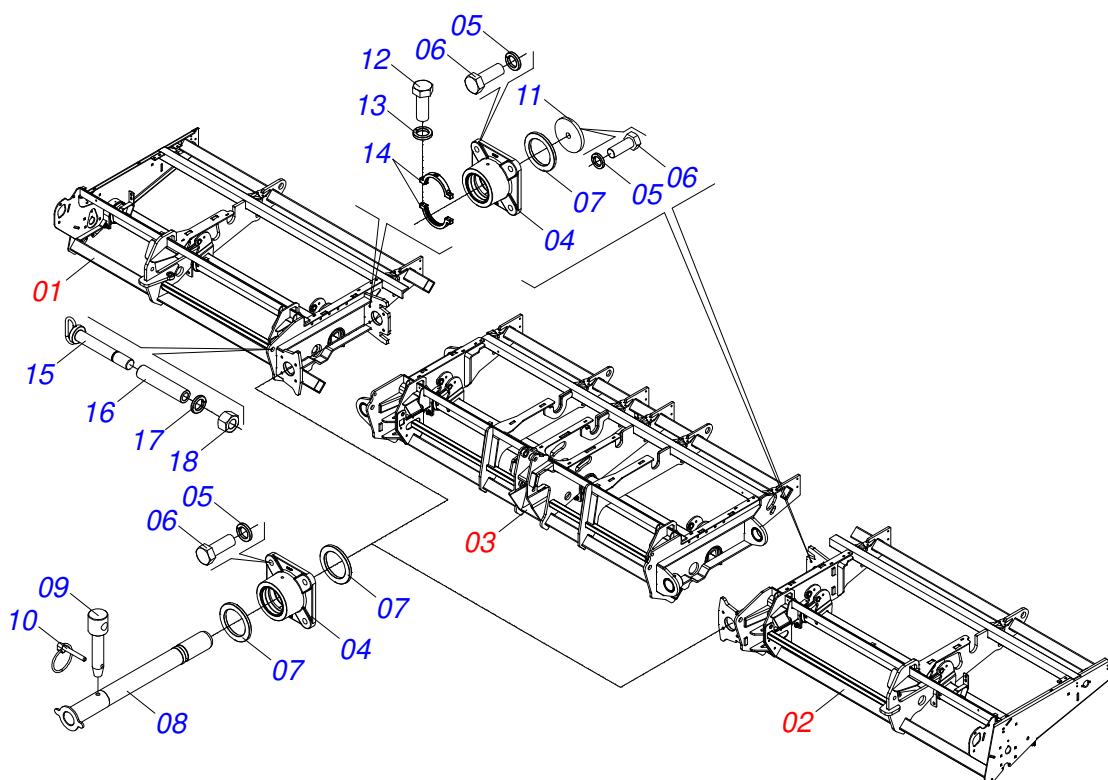


Item	Code	Description	See page	QT
01	0511053766	RIGHT FRAME WITH WHEELED AXLE 7960/8160	21	01
02	0511053767	LEFT FRAME WITH WHEELED AXLE 7960/8160	22	01
03	0511053768	CENTRAL FRAME WITH WHEELED AXLE 5850/7960	23	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503010365	NUT		04
13	0503011444	SPRING WASHER		04
14	0502012698	CLAMP		04
15	0521063003	LOCK PIN		02
16	0571010969	LOCK SLEEVE FRAME		02
17	0503013627	1.1/2 SPRING WASHER		02
18	0501010110	1.1/2" NUT		02

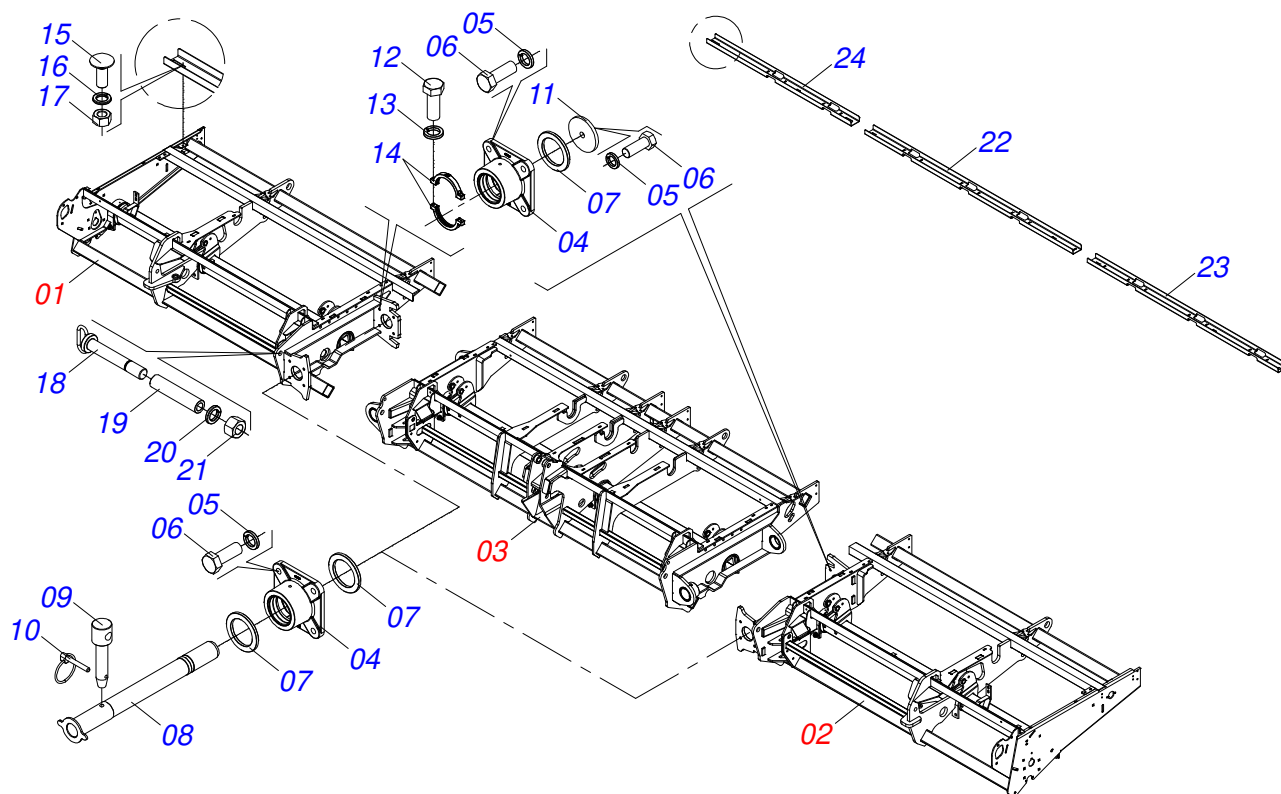


Item	Code	Description	See page	QT
01	0511053135	RIGHT FRAME WITH WHEELED AXLE 7860	24	01
02	0511053136	LEFT FRAME WITH WHEELED AXLE 7860	25	01
03	0511059288	CENTRAL FRAME WITH WHEELED AXLE 15	15	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503010365	NUT		04
13	0503011444	SPRING WASHER		04
14	0502012698	CLAMP		04
15	0501011643	3/8 X 1" BOLT		14
16	0503010025	3/8" SPRING WASHER		14
17	0503010026	3/8" NUT		14
18	0521063003	LOCK PIN		02
19	0571010969	LOCK SLEEVE FRAME		02
20	0503013627	1.1/2 SPRING WASHER		02
21	0501010110	1.1/2" NUT		02
22	0581016293	TROUGH 24 X 50 X 1420		02
23	0581017747	GUTTER 25 X 50 X 1200		02
24	0581015857	GUTTER 24 X 50 X 1080		02

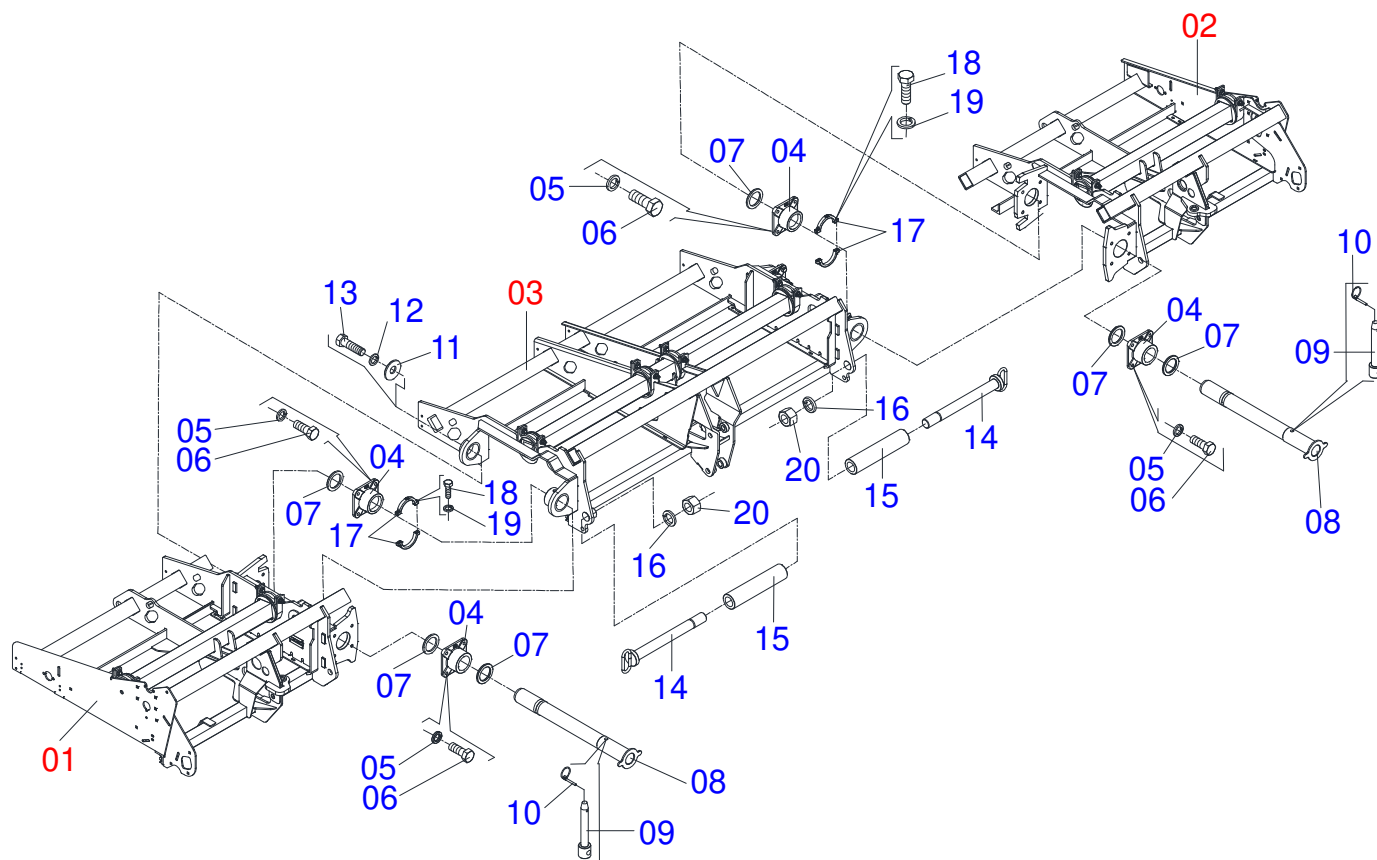


Item	Code	Description	See page	QT
001	0511056156	CHASSI RIGHT WITH ER	28	01
002	0511056157	LEFT CHASSIS WITH ER	29	01
003	0511056064	CENTRAL CHASSIS	30	01
004	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
005	0503011442	3/4" SPRING WASHER		16
006	0501010098	3/4" UNC BOLT		16
007	0571010094	SLEEVE FLANGE		06
008	0521064842	PIVOT SHAFT		02
009	0571013510	LOCK AXLE		02
010	0503030085	LOCK PIN		02
011	0571010095	FLAT WASHER		02
012	0503011442	3/4" SPRING WASHER		02
013	0501010098	3/4" UNC BOLT		02
014	0521063003	LOCK PIN		02
015	0571010969	LOCK SLEEVE FRAME		02
016	0503013627	1.1/2 SPRING WASHER		02
017	0502012698	CLAMP		04
018	0503010365	NUT		04
019	0503011444	SPRING WASHER		04
020	0501010110	1.1/2" NUT		02

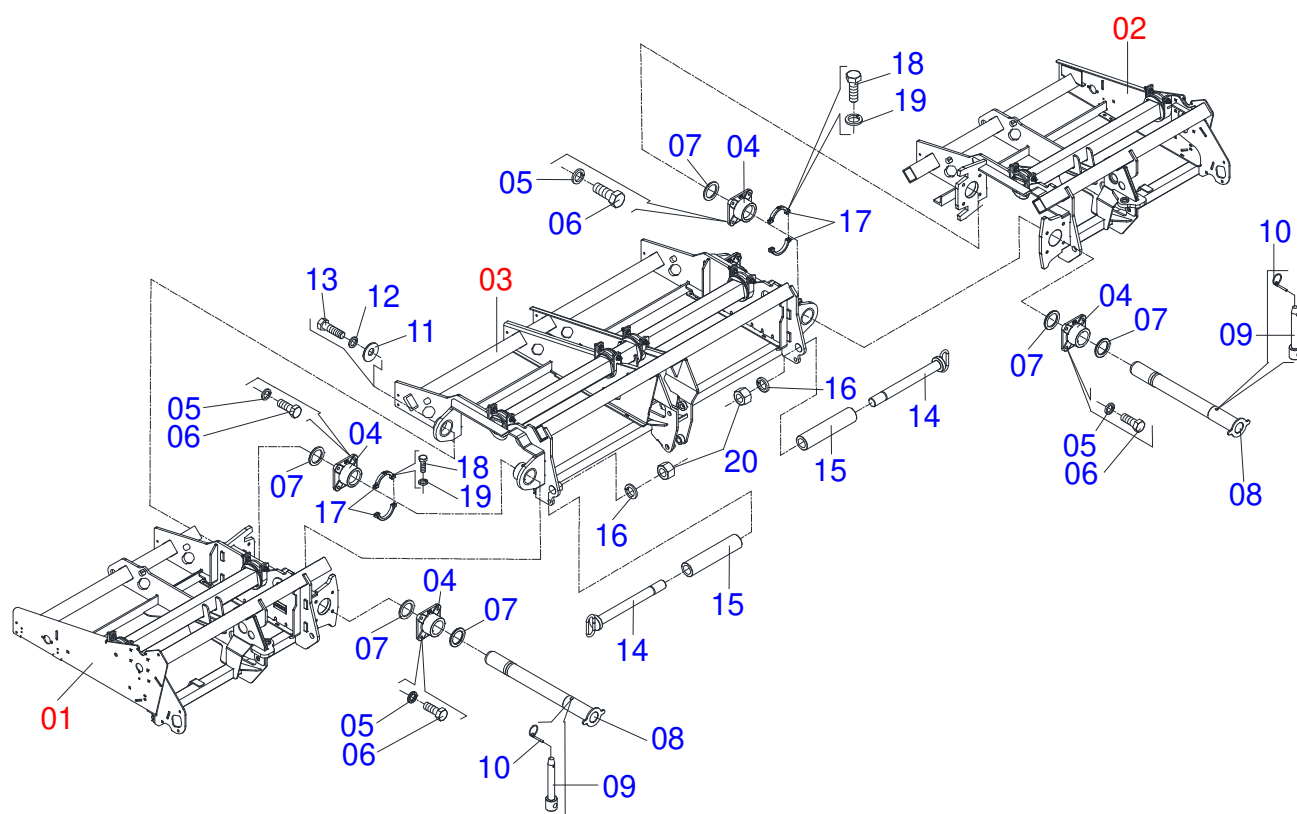


Item	Code	Description	See page	QT
001	0511053135	RIGHT FRAME WITH WHEELED AXLE 7860	24	01
002	0511053136	LEFT FRAME WITH WHEELED AXLE 7860	25	01
003	0511054411	CHASSIS WITH AXLE	31	01
004	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
005	0503011442	3/4" SPRING WASHER		16
006	0501010098	3/4" UNC BOLT		16
007	0571010094	SLEEVE FLANGE		06
008	0521063912	PIVOT SHAFT		02
009	0571013510	LOCK AXLE		02
010	0503030085	LOCK PIN		02
011	0571010095	FLAT WASHER		02
012	0503011442	3/4" SPRING WASHER		02
013	0501010098	3/4" UNC BOLT		02
014	0521063003	LOCK PIN		02
015	0571010969	LOCK SLEEVE FRAME		02
016	0503013627	1.1/2 SPRING WASHER		02
017	0502012698	CLAMP		04
018	0503010365	NUT		04
019	0503011444	SPRING WASHER		04
020	0501010110	1.1/2" NUT		02

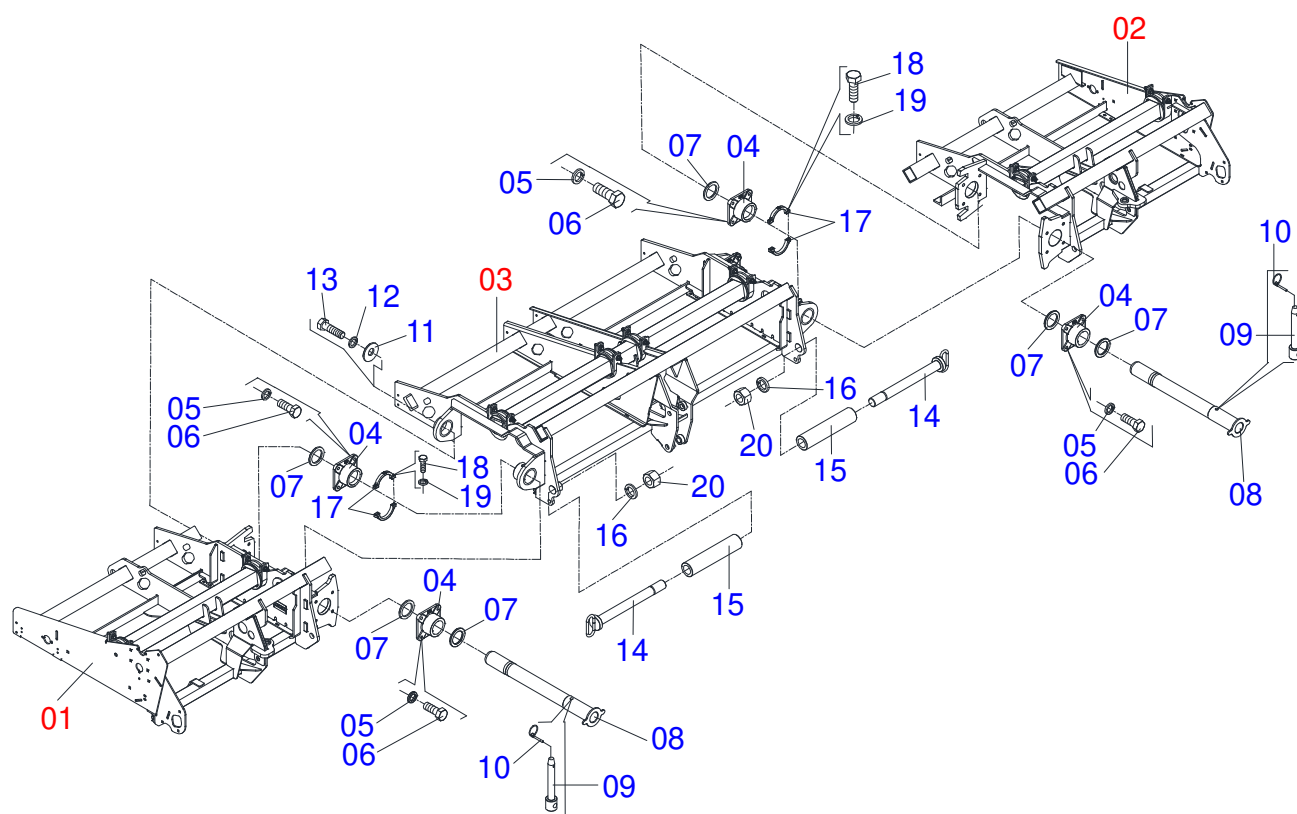


Item	Code	Description	See page	QT
001	0511056156	CHASSI RIGHT WITH ER	28	01
002	0511056157	LEFT CHASSIS WITH ER	29	01
003	0511055270	CHASSIS WITH AXLE	32	01
004	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
005	0503011442	3/4" SPRING WASHER		16
006	0501010098	3/4" UNC BOLT		16
007	0571010094	SLEEVE FLANGE		06
008	0521064842	PIVOT SHAFT		02
009	0571013510	LOCK AXLE		02
010	0503030085	LOCK PIN		02
011	0571010095	FLAT WASHER		02
012	0503011442	3/4" SPRING WASHER		02
013	0501010098	3/4" UNC BOLT		02
014	0521063003	LOCK PIN		02
015	0571010969	LOCK SLEEVE FRAME		02
016	0503013627	1.1/2 SPRING WASHER		02
017	0502012698	CLAMP		04
018	0503010365	NUT		04
019	0503011444	SPRING WASHER		04
020	0501010110	1.1/2" NUT		02

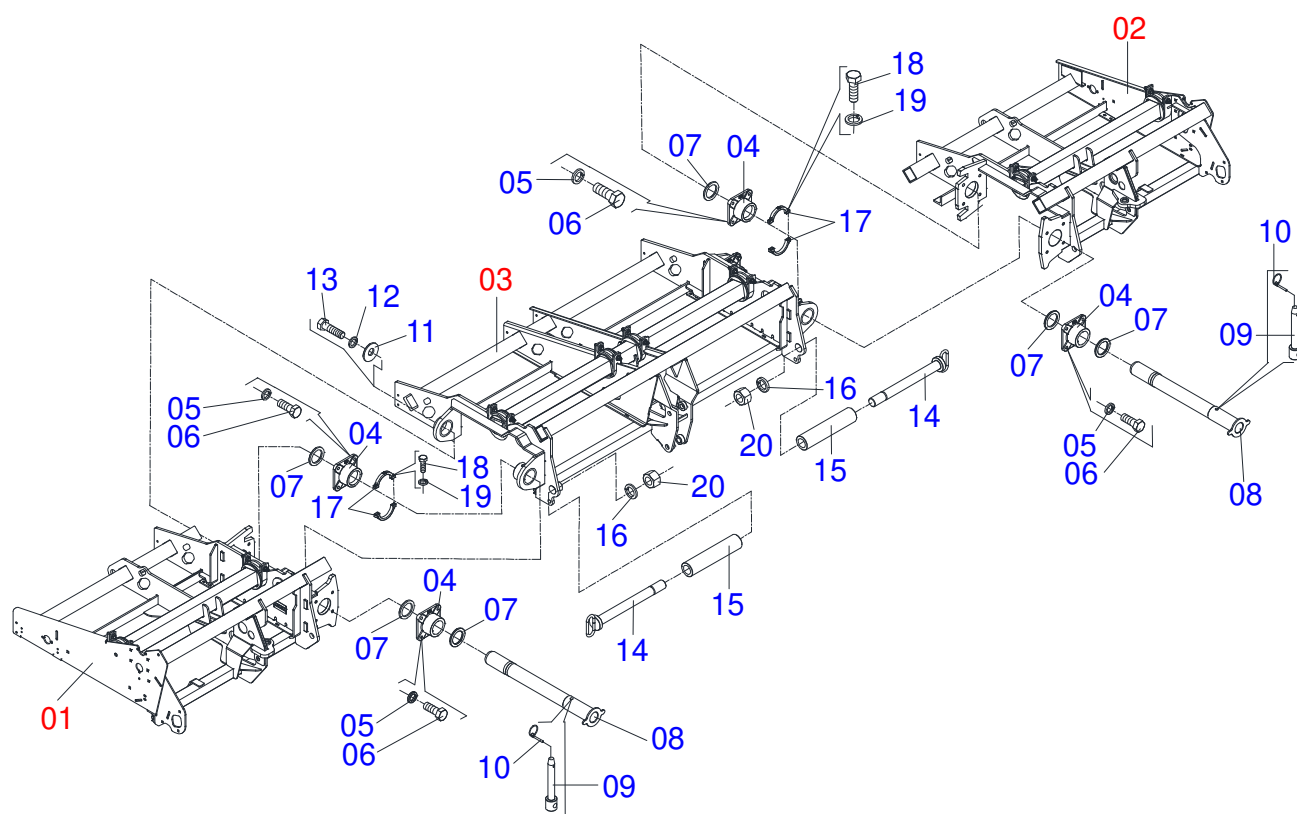


Item	Code	Description	See page	QT
001	0511055268	RH FRAME	33	01
002	0511055269	LEFT FRAME	34	01
003	0511056064	CENTRAL CHASSIS	30	01
004	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
005	0503011442	3/4" SPRING WASHER		16
006	0501010098	3/4" UNC BOLT		16
007	0571010094	SLEEVE FLANGE		06
008	0521064842	PIVOT SHAFT		02
009	0571013510	LOCK AXLE		02
010	0503030085	LOCK PIN		02
011	0571010095	FLAT WASHER		02
012	0503011442	3/4" SPRING WASHER		02
013	0501010098	3/4" UNC BOLT		02
014	0521063003	LOCK PIN		02
015	0571010969	LOCK SLEEVE FRAME		02
016	0503013627	1.1/2 SPRING WASHER		02
017	0502012698	CLAMP		04
018	0503010365	NUT		04
019	0503011444	SPRING WASHER		04
020	0501010110	1.1/2" NUT		02

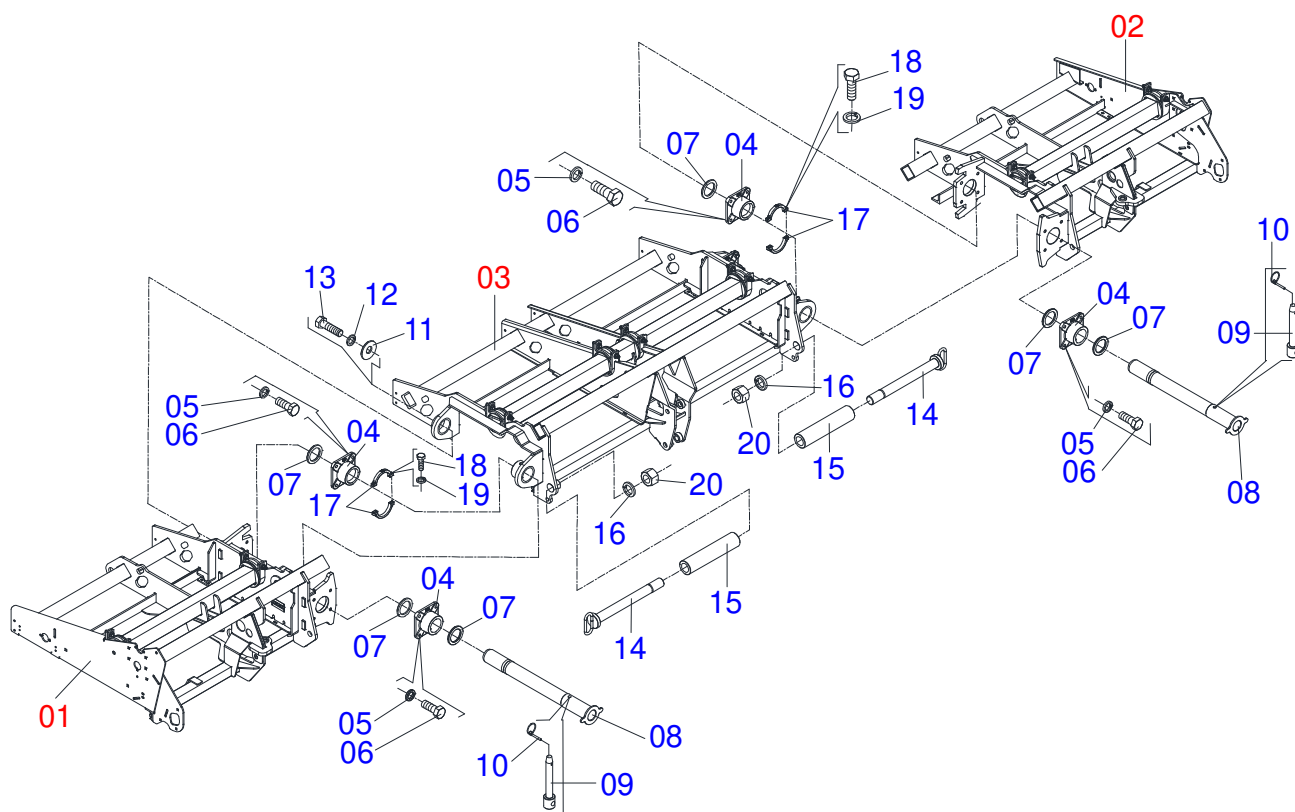


Item	Code	Description	See page	QT
001	0511055268	RH FRAME	33	01
002	0511055269	LEFT FRAME	34	01
003	0511055270	CHASSIS WITH AXLE	32	01
004	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
005	0503011442	3/4" SPRING WASHER		16
006	0501010098	3/4" UNC BOLT		16
007	0571010094	SLEEVE FLANGE		06
008	0521064842	PIVOT SHAFT		02
009	0571013510	LOCK AXLE		02
010	0503030085	LOCK PIN		02
011	0571010095	FLAT WASHER		02
012	0503011442	3/4" SPRING WASHER		02
013	0501010098	3/4" UNC BOLT		02
014	0521063003	LOCK PIN		02
015	0571010969	LOCK SLEEVE FRAME		02
016	0503013627	1.1/2 SPRING WASHER		02
017	0502012698	CLAMP		04
018	0503010365	NUT		04
019	0503011444	SPRING WASHER		04
020	0501010110	1.1/2" NUT		02

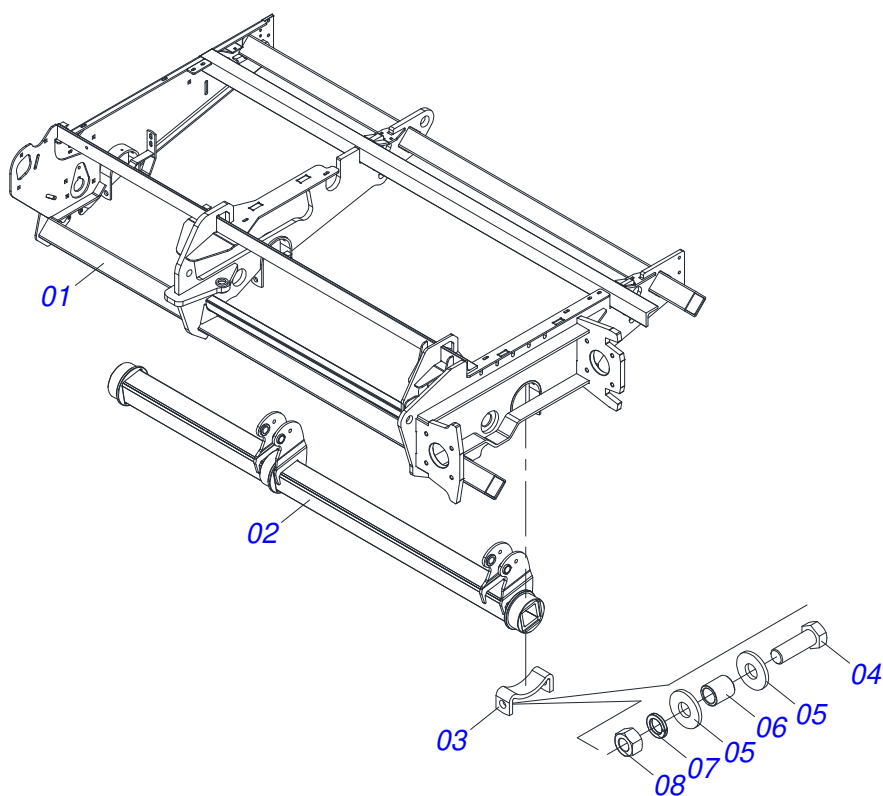


Item	Code	Description	See page	QT
01	0521066917	CH RIGHT		01
02	0521063872	ARTICLES AXLE RIGHT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8" X 2-1/4" BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8" NUT		04

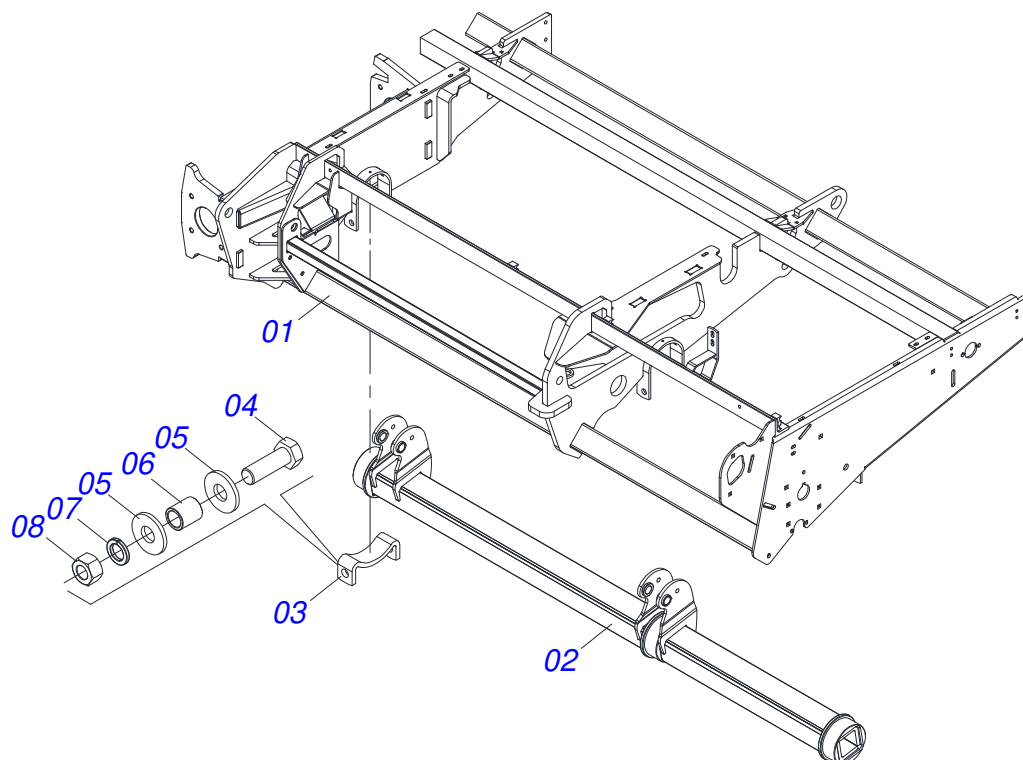


Item	Code	Description	See page	QT
01	0521066918	CH LEFT		01
02	0521063873	ARTICLES AXLE LEFT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8" X 2-1/4" BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8" NUT		04

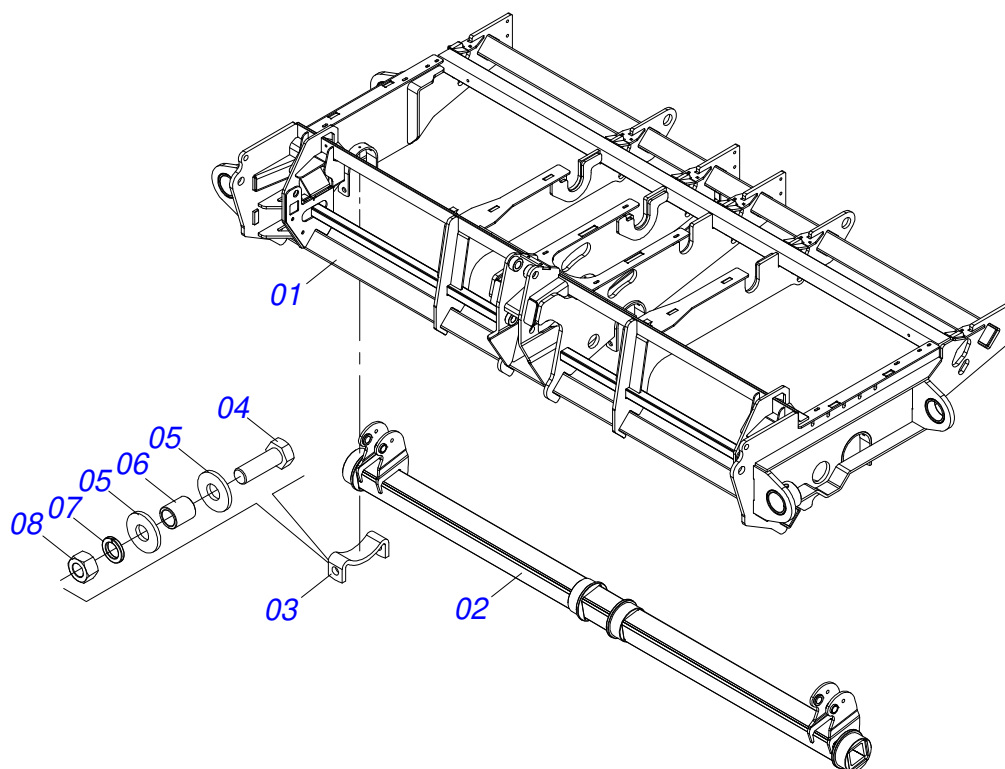


Item	Code	Description	See page	QT
01	0521066916	CENTRAL CHASSIS		01
02	0521013199	LOWER BEARING SEMI		04
03	0503010899	5/8" X 2-1/4" BOLT		08
04	0501012140	FLAT WASHER		16
05	0531013922	0.6" X 0.8" X 1" SLEEVE		08
06	0503011445	SPRING WASHER		08
07	0503010013	5/8" NUT		08
08	0521063878	ARTICLE AXLE ROLLED		01

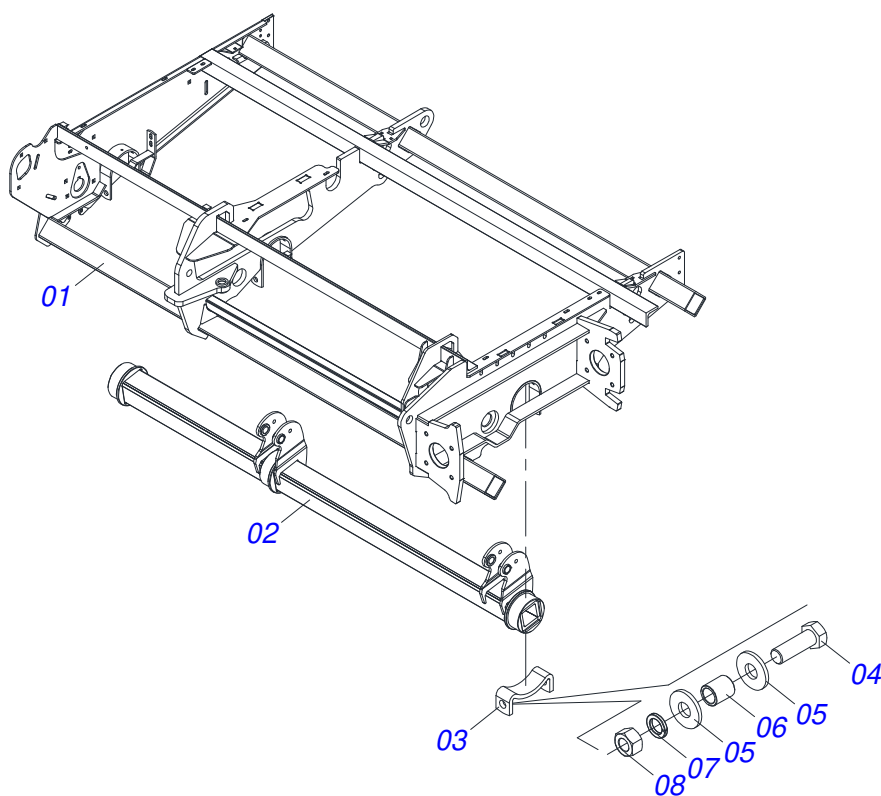


Item	Code	Description	See page	QT
01	0521063886	RIGHT FRAME		01
02	0521063872	ARTICLES AXLE RIGHT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8" X 2-1/4" BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8" NUT		04

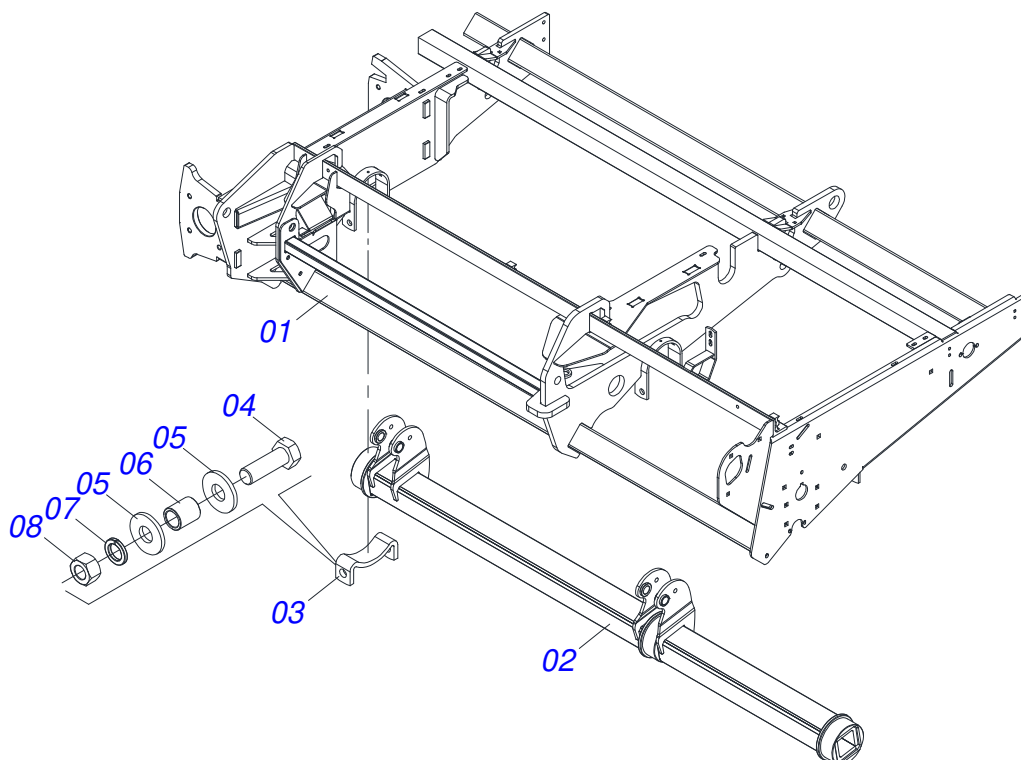


Item	Code	Description	See page	QT
01	0521063885	LEFT FRAME		01
02	0521063873	ARTICLES AXLE LEFT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8" X 2-1/4" BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8" NUT		04

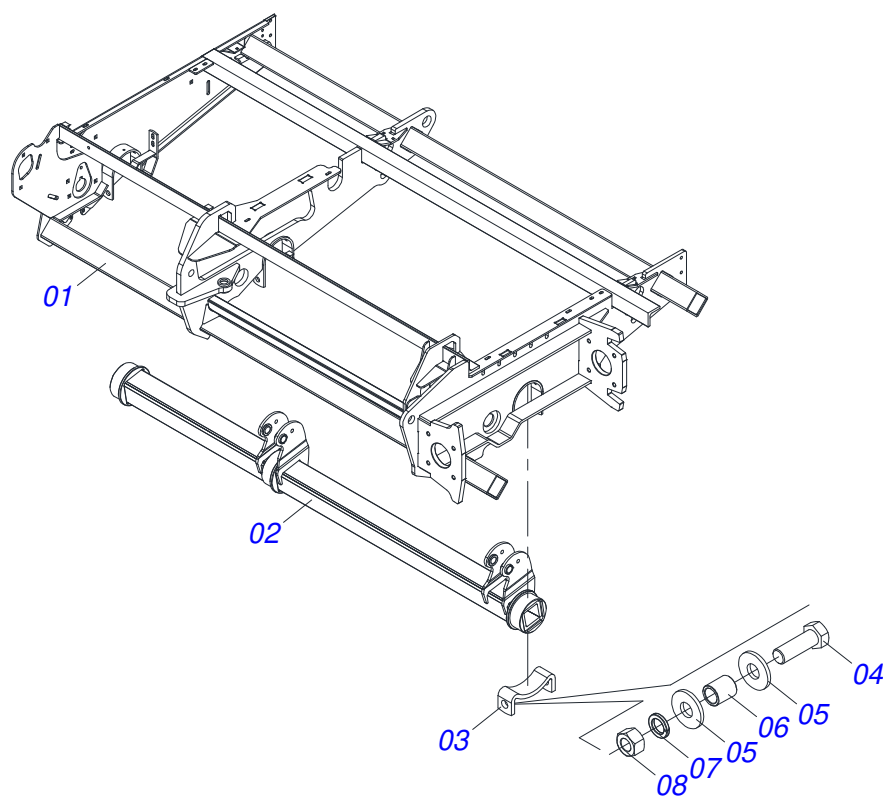


Item	Code	Description	See page	QT
01	0521064009	RIGHT FRAME PST TRIO 15		01
02	0521064023	ARTICLES AXLE RIGHT ROLLED		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

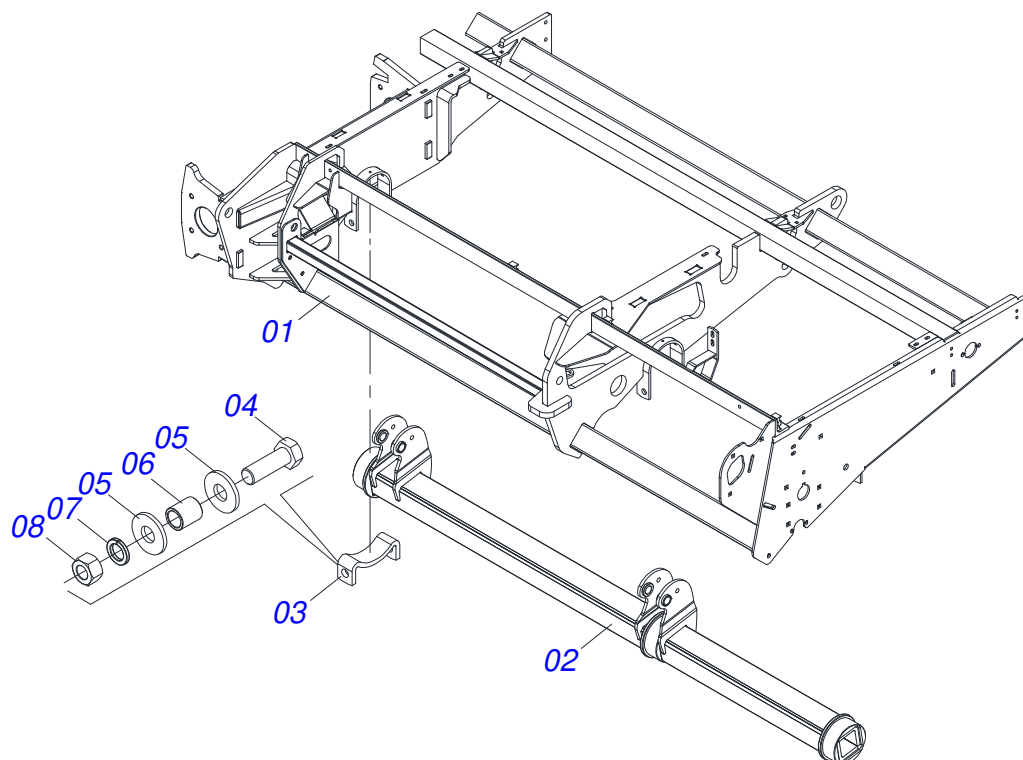


Item	Code	Description	See page	QT
01	0521064010	LEFT FRAME PST TRIO 15		01
02	0521064021	ARTICLES AXLE LEFT ROLLED		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

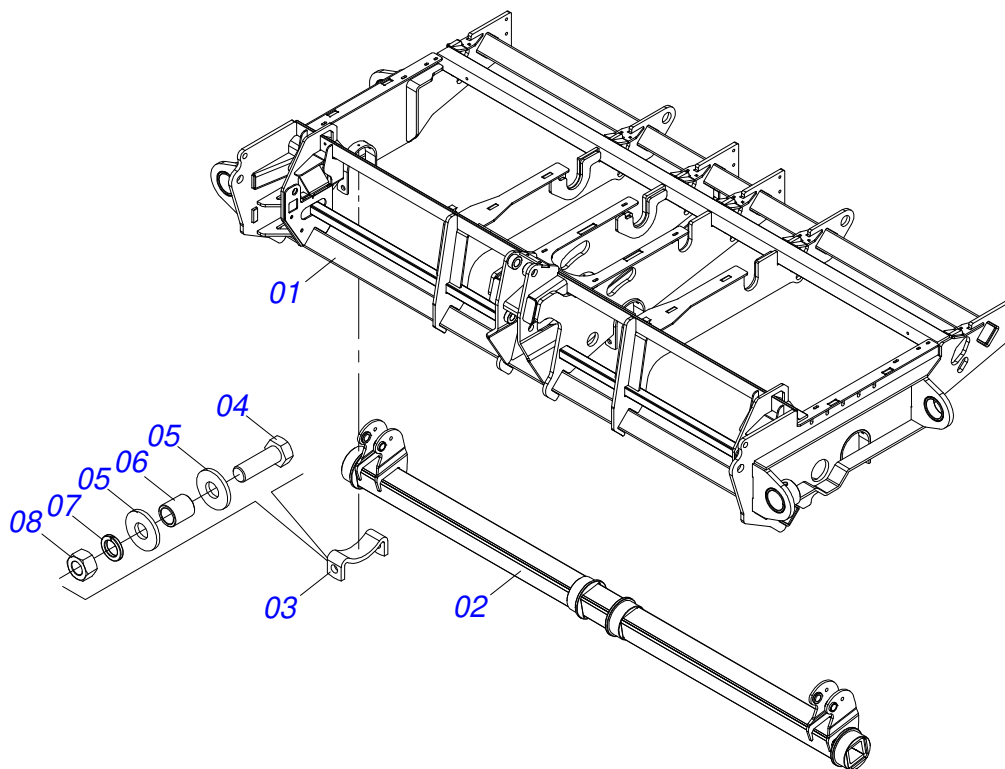


Item	Code	Description	See page	QT
01	0521064011	CENTRAL FRAME PST TRIO 15		01
02	0521064022	CENTRAL ARTICLES AXLE ROLLED		01
03	0521013199	LOWER BEARING SEMI		04
04	0503010899	5/8" X 2-1/4" BOLT		08
05	0501012140	FLAT WASHER		16
06	0531013922	0.6" X 0.8" X 1" SLEEVE		08
07	0503011445	SPRING WASHER		08
08	0503010013	5/8" NUT		08

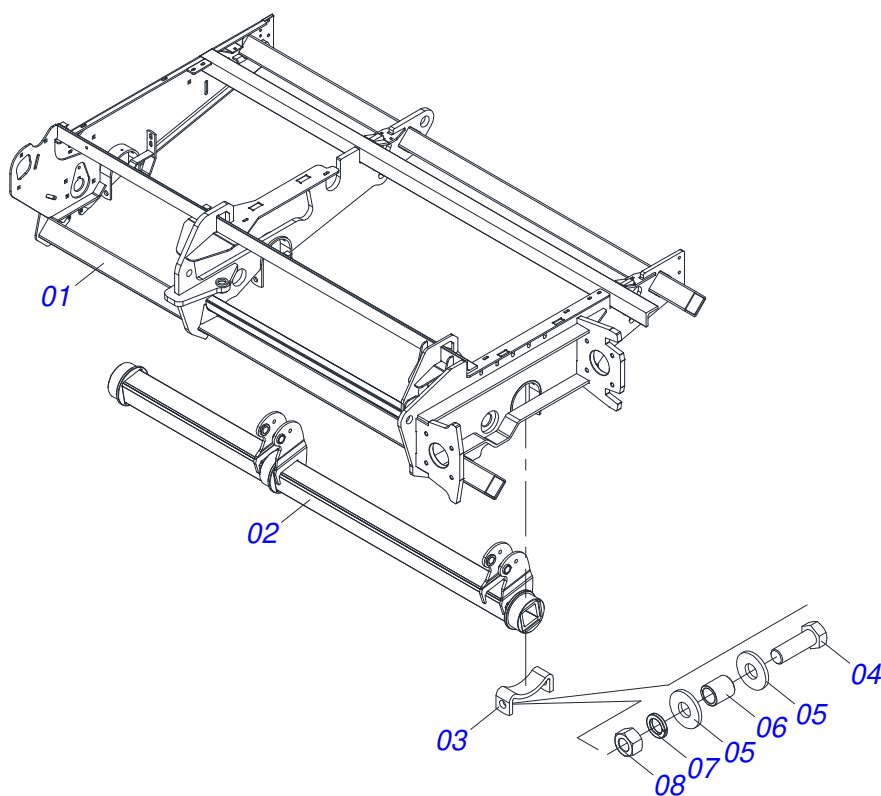


Item	Code	Description	See page	QT
01	0521064287	FRAME BRACKET		01
02	0521064284	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

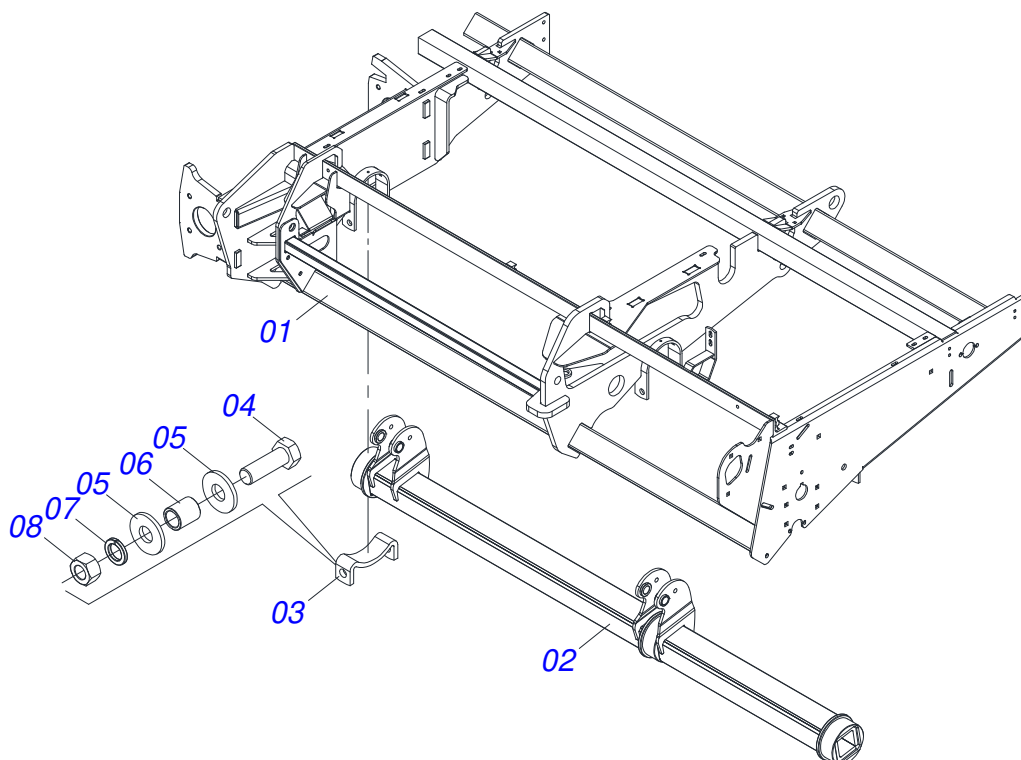


Item	Code	Description	See page	QT
01	0521064286	FRAME BRACKET		01
02	0521064283	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

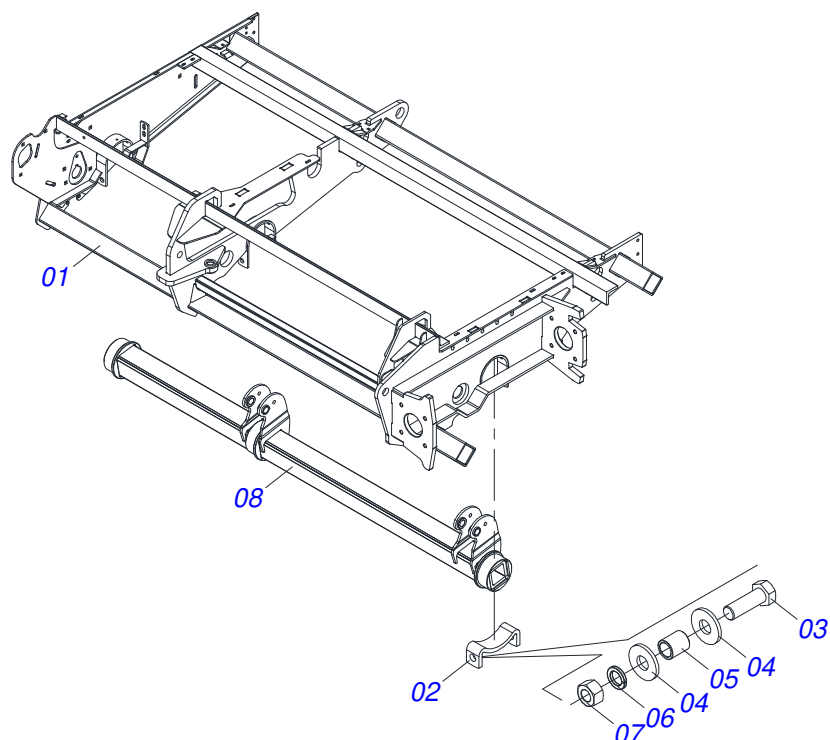


Item	Code	Description	See page	QT
01	0521064281	CENTRAL FRONT FRAME		01
02	0521013199	LOWER BEARING SEMI		04
03	0503010899	5/8" X 2-1/4" BOLT		08
04	0501012140	FLAT WASHER		16
05	0531013922	0.6" X 0.8" X 1" SLEEVE		08
06	0503011445	SPRING WASHER		08
07	0503010013	5/8" NUT		08
08	0521064282	CARRYING-WHEELS PIVOT SHAFT		01

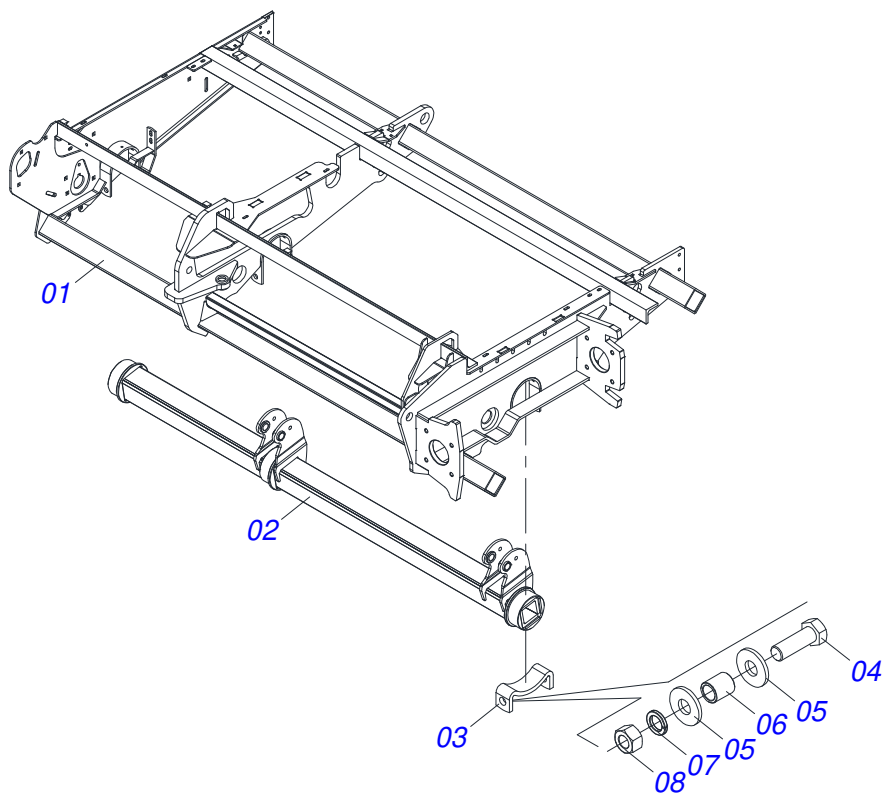


Item	Code	Description	See page	QT
01	0521063971	FRAME BRACKET		01
02	0521063975	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

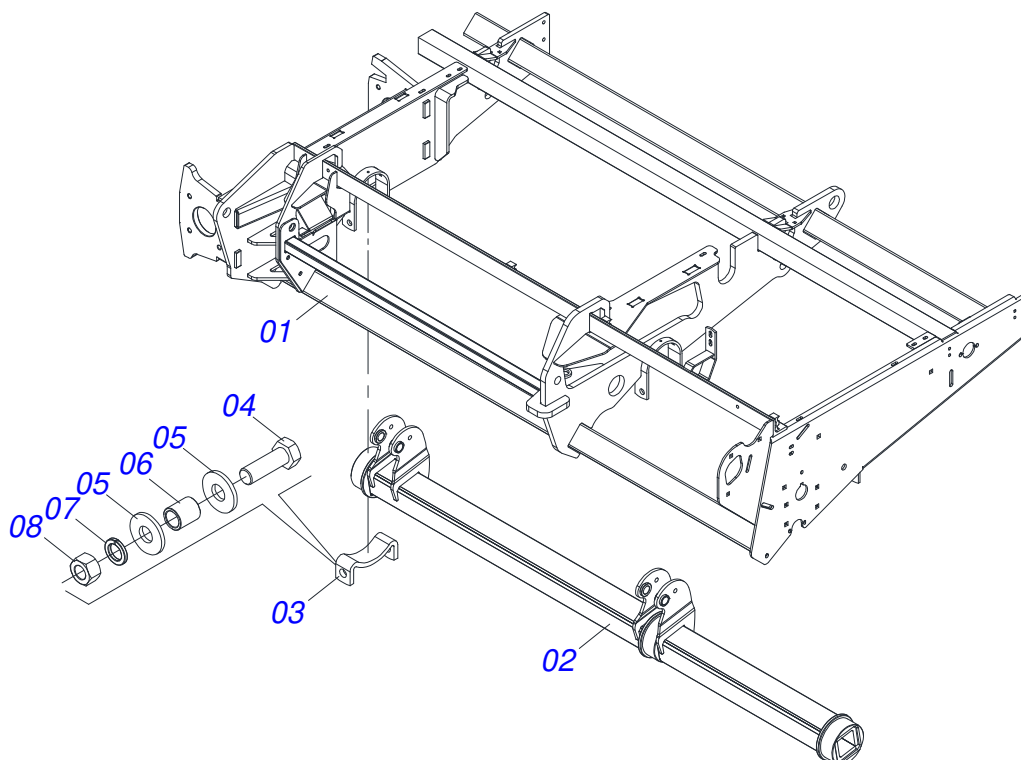


Item	Code	Description	See page	QT
01	0521063972	FRAME BRACKET		01
02	0521063981	SIDE CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

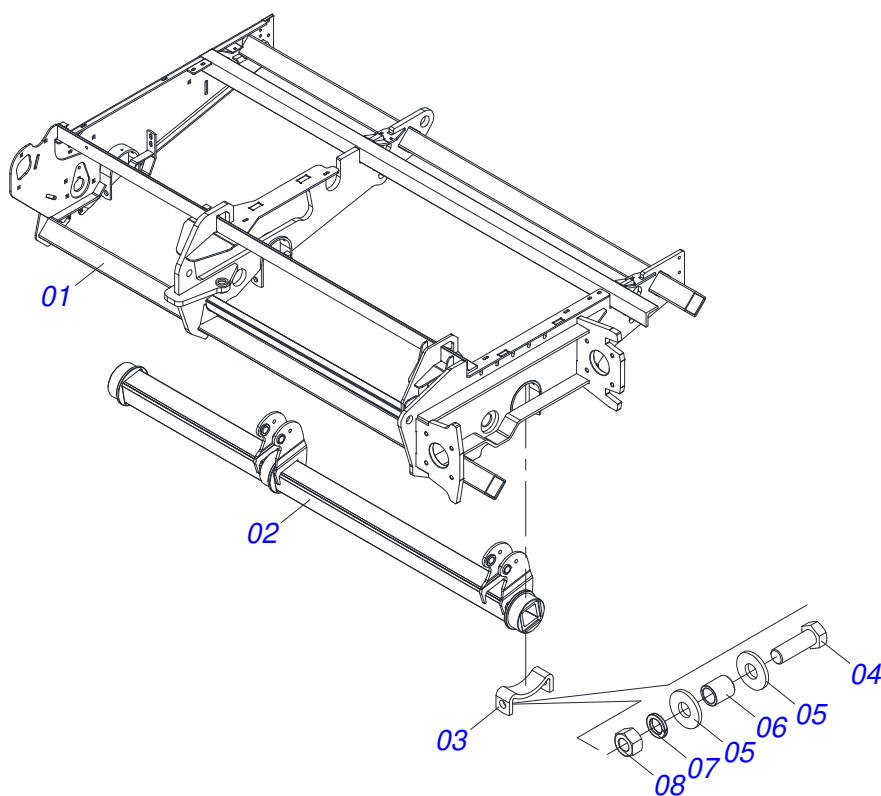


Item	Code	Description	See page	QT
01	0521065394	RIGHT CHASSIS		01
02	0521065222	SIDE ROD JOINT AXLE		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

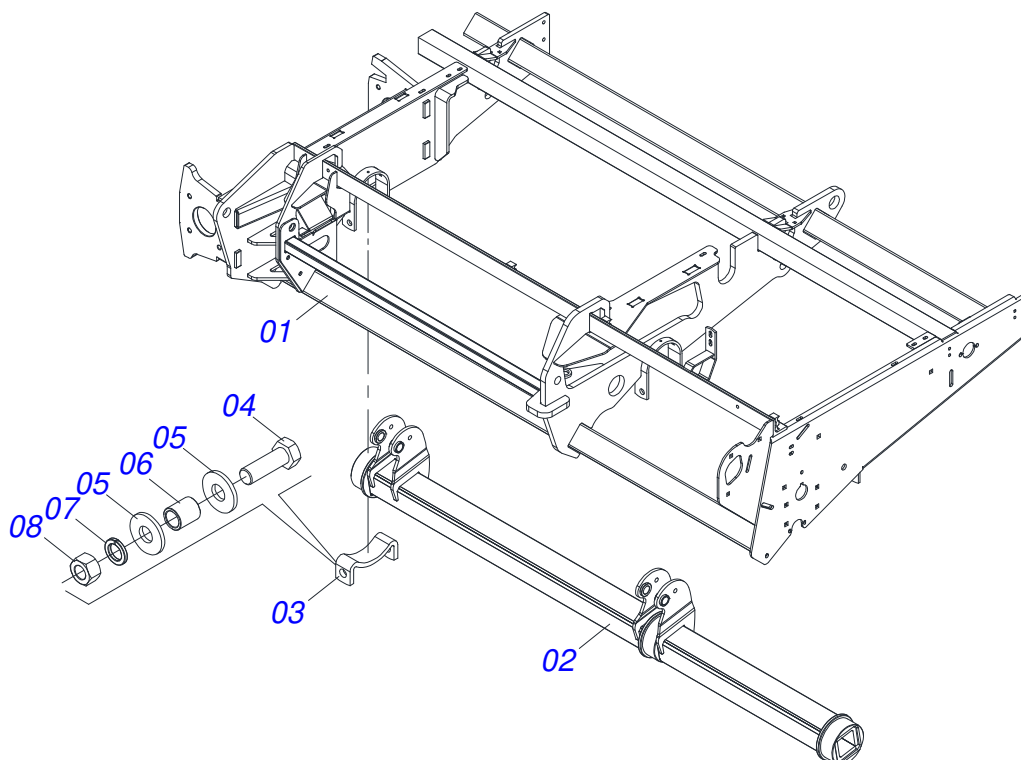


Item	Code	Description	See page	QT
01	0521065395	LEFT CHASSIS		01
02	0521065223	SHAFT SHAFT SHAFT SIDE SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

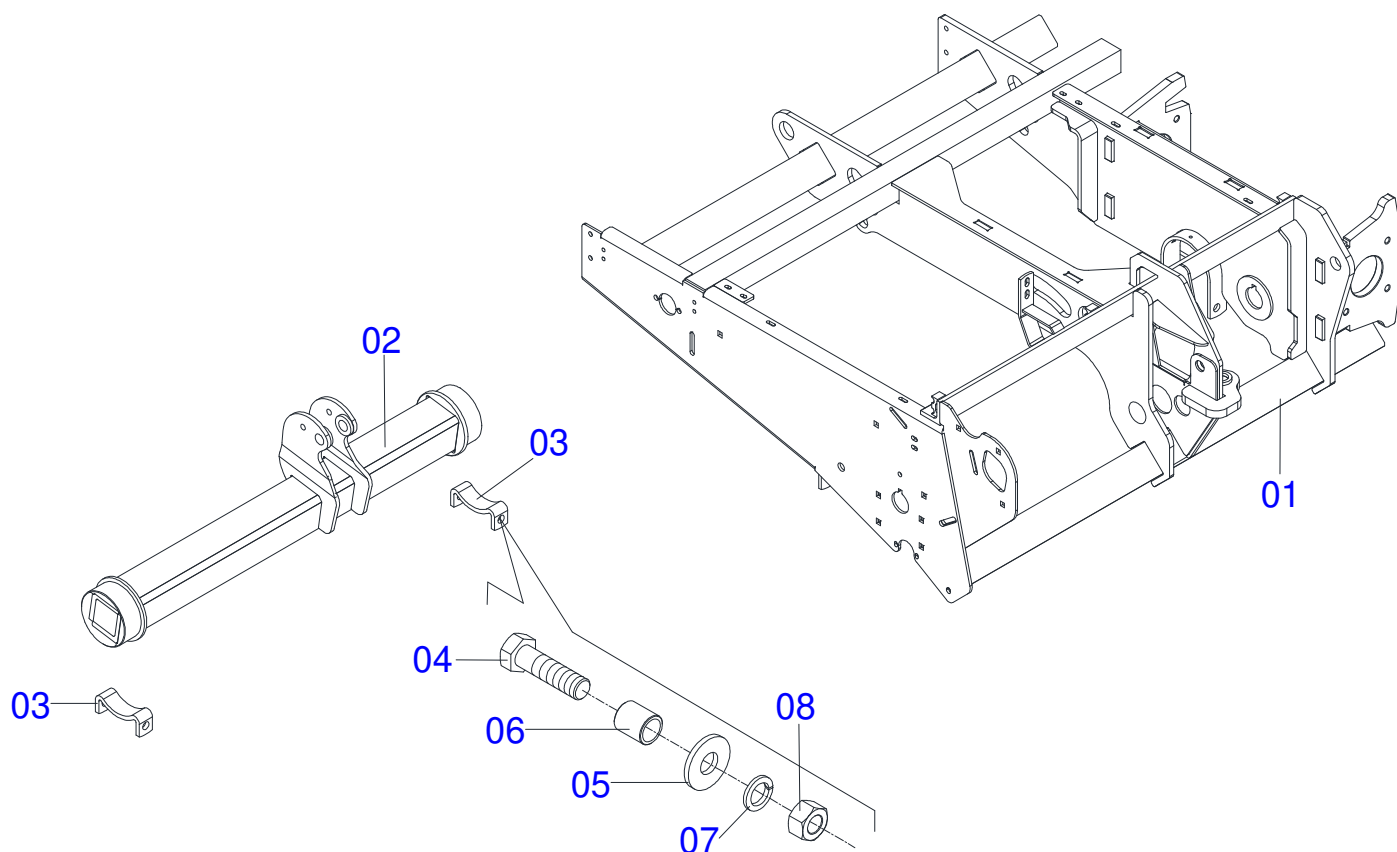


Item	Code	Description	See page	QT
001	0521065220	RIGHT CHASSIS		01
002	0521065222	SIDE ROD JOINT AXLE		01
003	0521013199	LOWER BEARING SEMI		03
004	0503010899	5/8" X 2-1/4" BOLT		06
005	0501012140	FLAT WASHER		12
006	0531013922	0.6" X 0.8" X 1" SLEEVE		06
007	0503011445	SPRING WASHER		06
008	0503010013	5/8" NUT		06

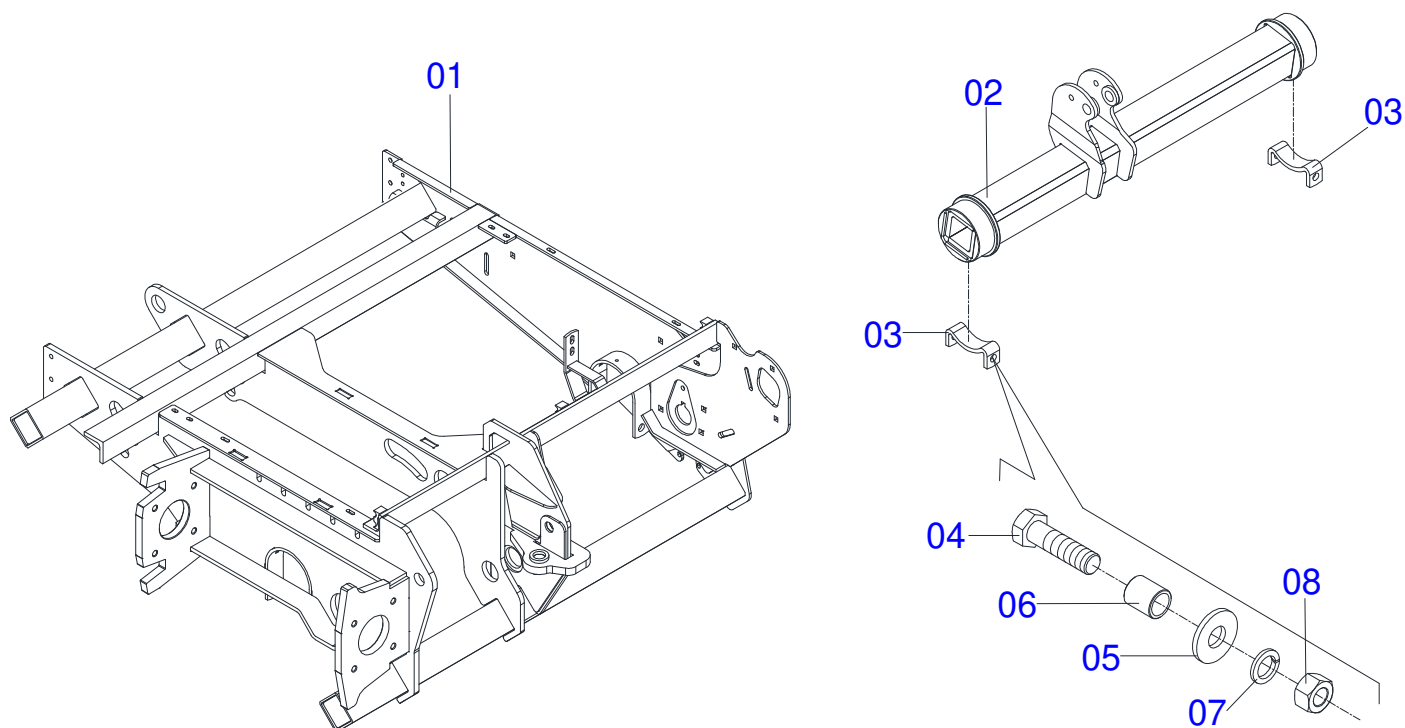


Item	Code	Description	See page	QT
001	0521065221	LEFT CHASSIS		01
002	0521065223	SHAFT SHAFT SHAFT SIDE SHAFT		01
003	0521013199	LOWER BEARING SEMI		03
004	0503010899	5/8" X 2-1/4" BOLT		06
005	0501012140	FLAT WASHER		12
006	0531013922	0.6" X 0.8" X 1" SLEEVE		06
007	0503011445	SPRING WASHER		06
008	0503010013	5/8" NUT		06

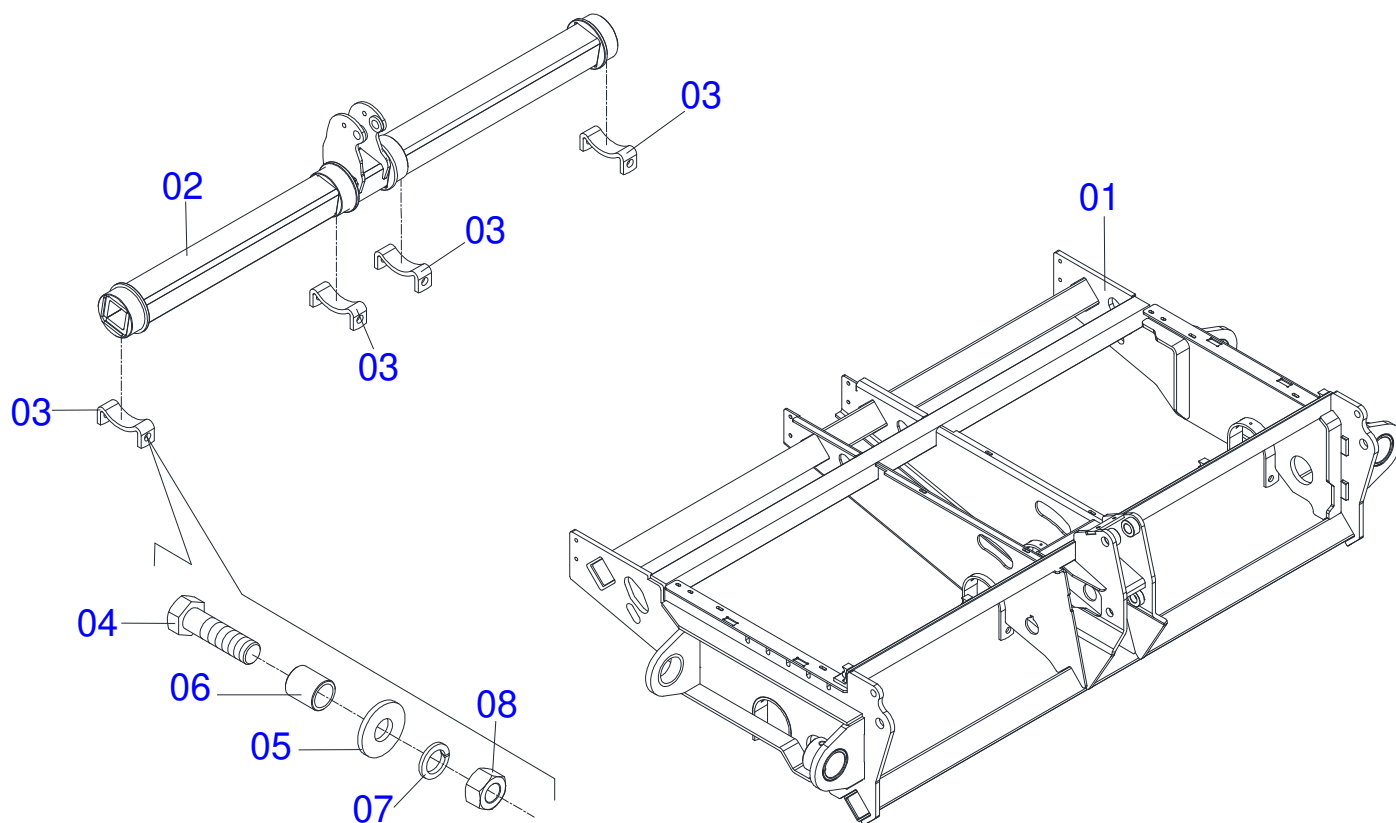


Item	Code	Description	See page	QT
001	0521065207	CENTRAL CHASSIS		01
002	0521065208	ARTICLE AXLE ROLLED		01
003	0521013199	LOWER BEARING SEMI		04
004	0503010899	5/8" X 2-1/4" BOLT		08
005	0501012140	FLAT WASHER		16
006	0531013922	0.6" X 0.8" X 1" SLEEVE		08
007	0503011445	SPRING WASHER		08
008	0503010013	5/8" NUT		08

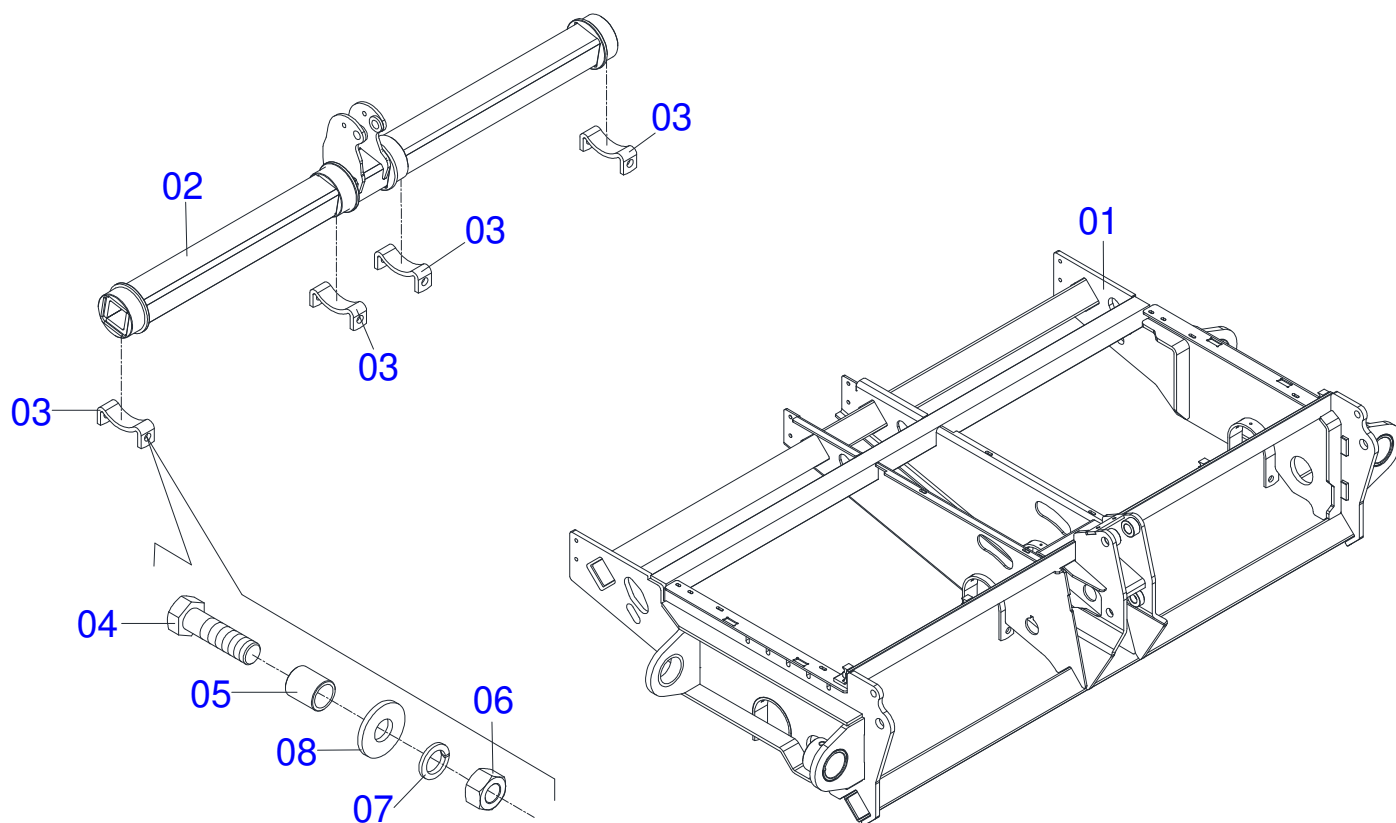



Item	Code	Description	See page	QT
001	0521064464	CENTRAL CHASSIS		01
002	0521064461	ARTICLE AXLE ROLLED		01
003	0521013199	LOWER BEARING SEMI		04
004	0503010899	5/8" X 2-1/4" BOLT		08
005	0531013922	0.6" X 0.8" X 1" SLEEVE		08
006	0503010013	5/8" NUT		08
007	0503011445	SPRING WASHER		08
008	0501012140	FLAT WASHER		16

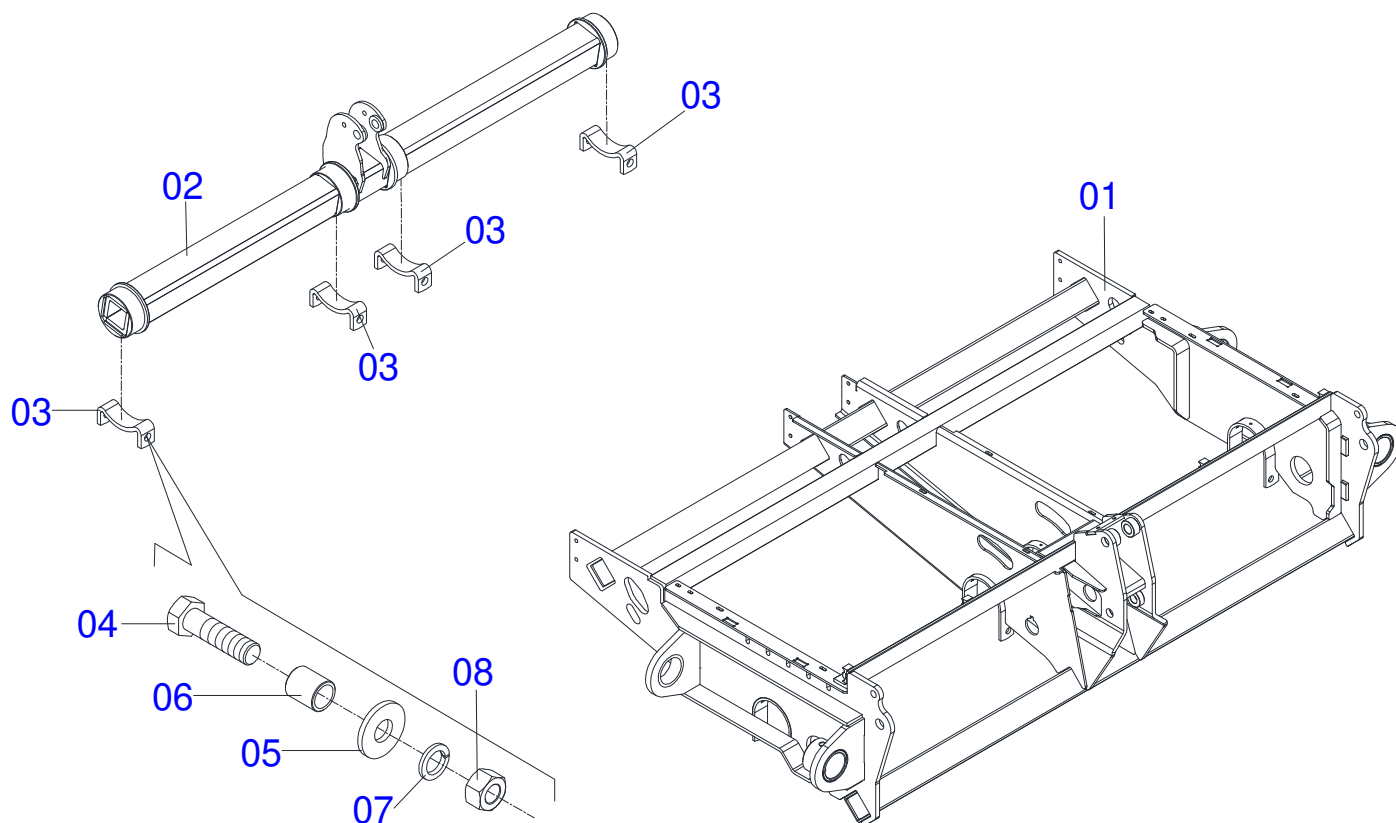


Item	Code	Description	See page	QT
001	0521064839	CENTRAL CHASSIS		01
002	0521064836	CENTRAL RODE JOINT SHAFT		01
003	0521013199	LOWER BEARING SEMI		04
004	0503010899	5/8" X 2-1/4" BOLT		08
005	0501012140	FLAT WASHER		16
006	0531013922	0.6" X 0.8" X 1" SLEEVE		08
007	0503011445	SPRING WASHER		08
008	0503010013	5/8" NUT		08

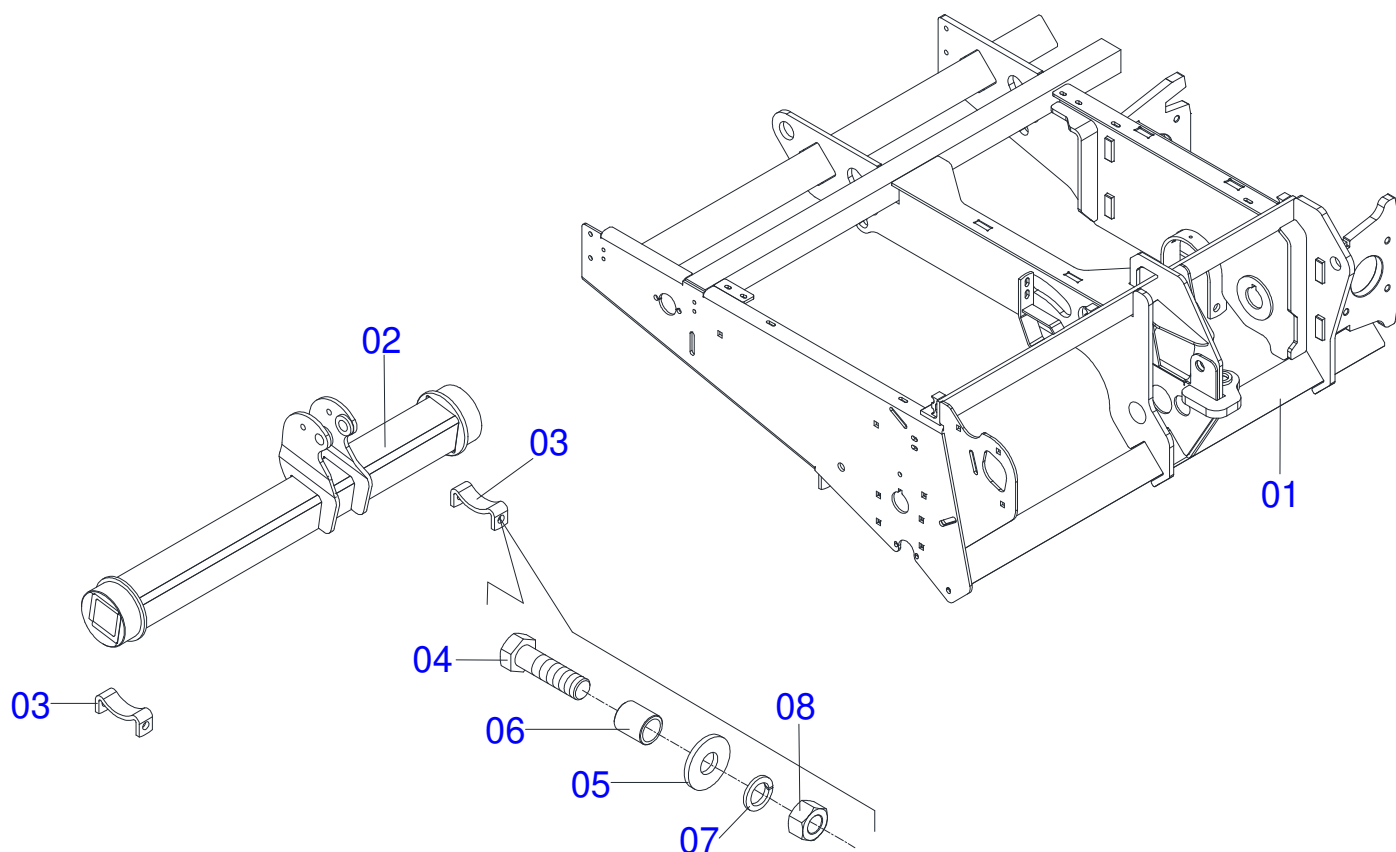


Item	Code	Description	See page	QT
001	0521064840	RIGHT FRAME		01
002	0521064838	ARTICLES AXLE RIGHT ROLLED		01
003	0521013199	LOWER BEARING SEMI		03
004	0503010899	5/8" X 2-1/4" BOLT		06
005	0501012140	FLAT WASHER		12
006	0531013922	0.6" X 0.8" X 1" SLEEVE		06
007	0503011445	SPRING WASHER		06
008	0503010013	5/8" NUT		06

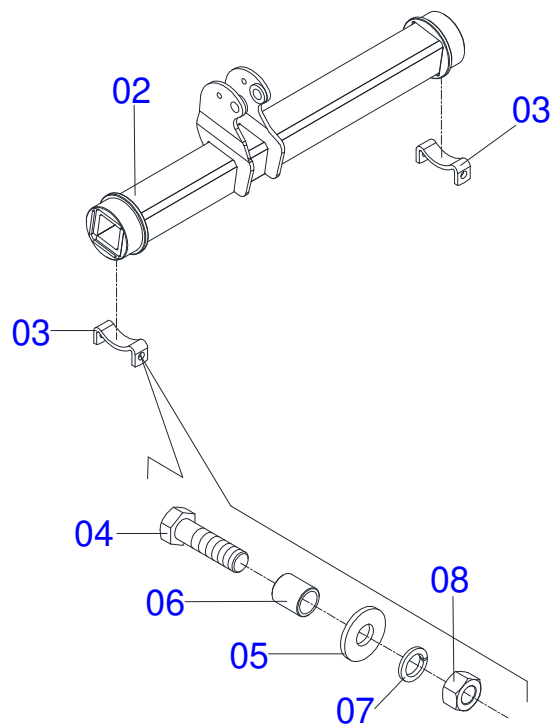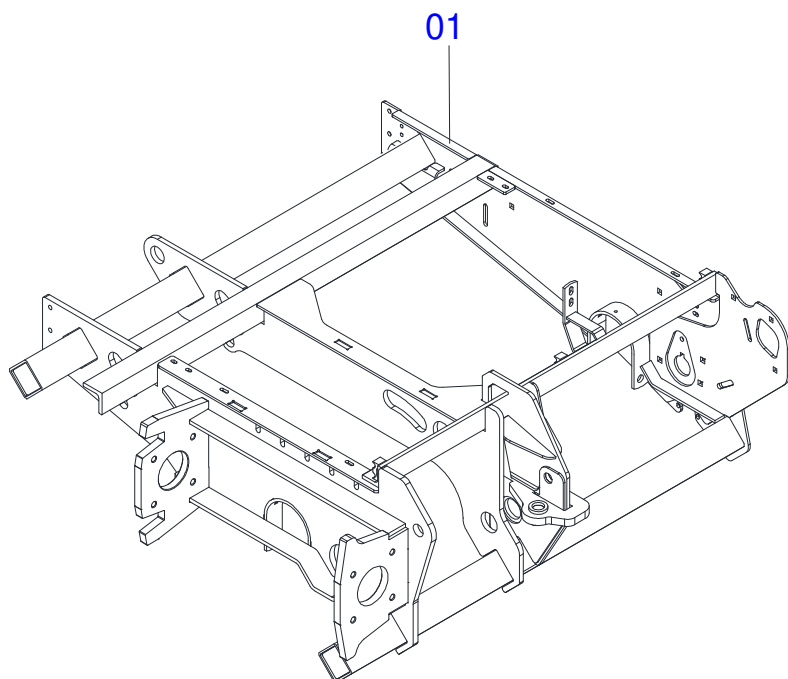


Item	Code	Description	See page	QT
001	0521064841	LEFT FRAME		01
002	0521064837	ARTICLES AXLE LEFT ROLLED		01
003	0521013199	LOWER BEARING SEMI		03
004	0503010899	5/8" X 2-1/4" BOLT		06
005	0501012140	FLAT WASHER		12
006	0531013922	0.6" X 0.8" X 1" SLEEVE		06
007	0503011445	SPRING WASHER		06
008	0503010013	5/8" NUT		06

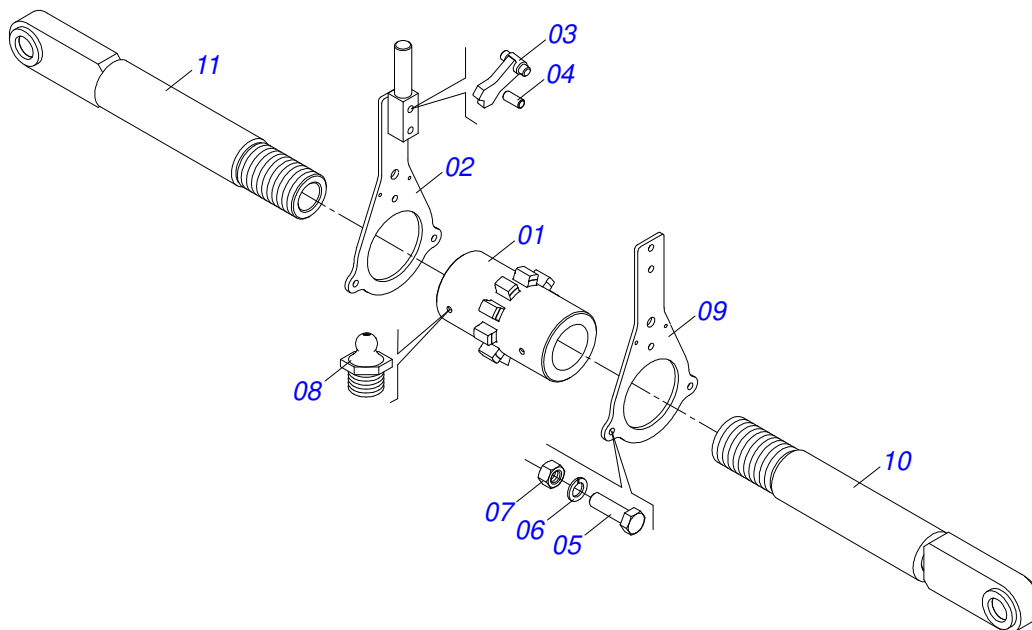


Item	Code	Description	See page	QT
01	0502012783	STABILIZER BODY GREATER		01
02	0511061880	SIDE RIGHT RATCHET		01
03	0511061881	RATCHET FOLLOWER		01
04	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
05	0503011179	3/8" X 2-1/4" BOLT		05
06	0503010025	3/8" SPRING WASHER		05
07	0503010026	3/8" NUT		05
08	0503010002	1800 GREASE FITTING		02
09	0531010264	SIDE RATCHET		01
10	0521066919	3-POINT EXTENSOR RIGHT FUSE		01
11	0521066337	LEFT EXTENSOR 3 SPIKE		01

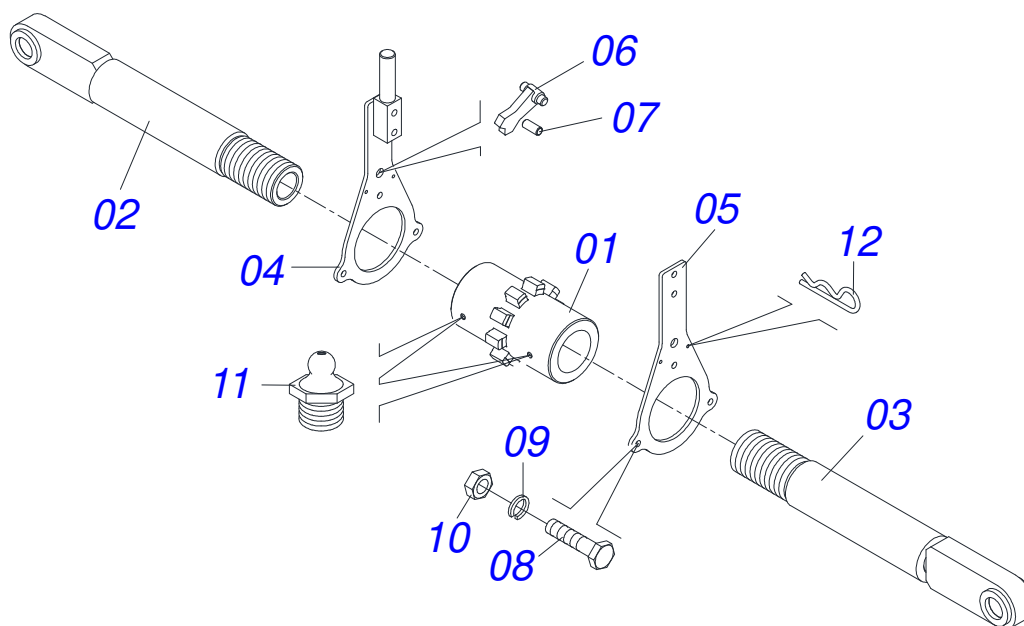


Item	Code	Description	See page	QT
01	0502011237	ESTABILIZER BODY		01
02	0521063913	JACKET LEFT		01
03	0521063914	JACKET RIGHT		01
04	0511061880	SIDE RIGHT RATCHET		01
05	0531010264	SIDE RATCHET		01
06	0511061881	RATCHET FOLLOWER		01
07	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
08	0503011179	3/8" X 2-1/4" BOLT		05
09	0503011443	3/8" SPRING WASHER		05
10	0503010026	3/8" NUT		05
11	0503010002	1800 GREASE FITTING		05
12	0503030012	HAIR PIN		01

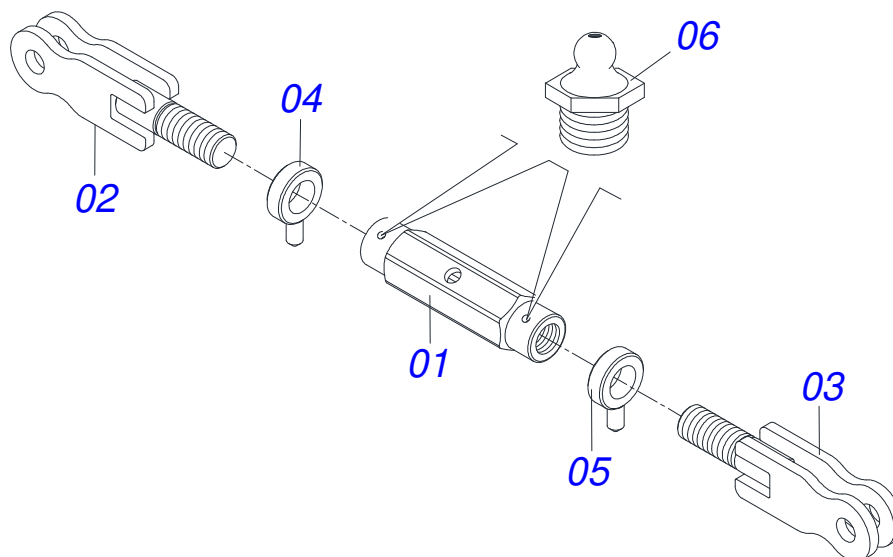


Item	Code	Description	See page	QT
01	0502011195	ADJUSTMENT NUT BODY		02
02	0521063884	LEFT TURNBUCKLE		02
03	0521063883	RIGHT TURNBUCKLE		02
04	0541018673	COUNTERNUT		02
05	0541018672	COUNTERNUT		02
06	0503010002	1800 GREASE FITTING		04

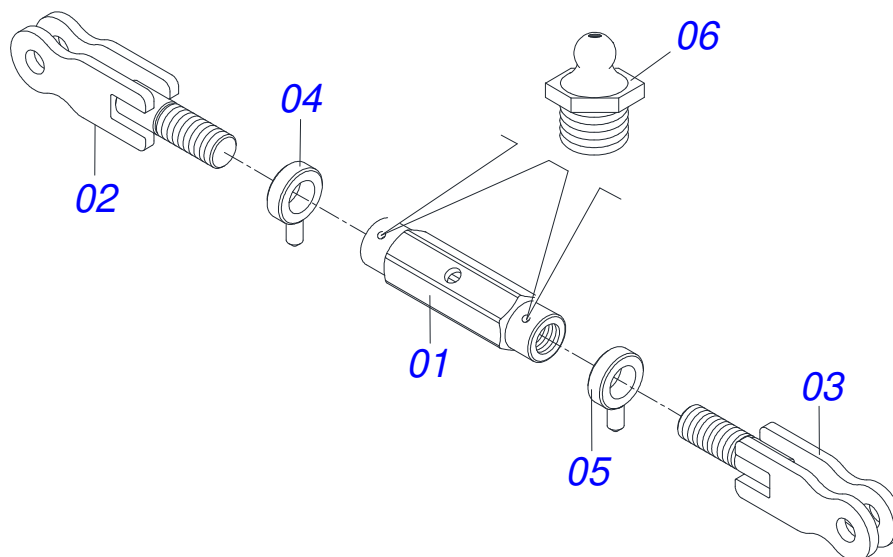


Item	Code	Description	See page	QT
001	0502011197	170 ADJUSTMENT NUT BODY		01
002	0521064845	EXTENSOR		01
003	0521064846	EXTENSOR		01
004	0541018673	COUNTERNUT		01
005	0541018672	COUNTERNUT		01
006	0503010002	1800 GREASE FITTING		02

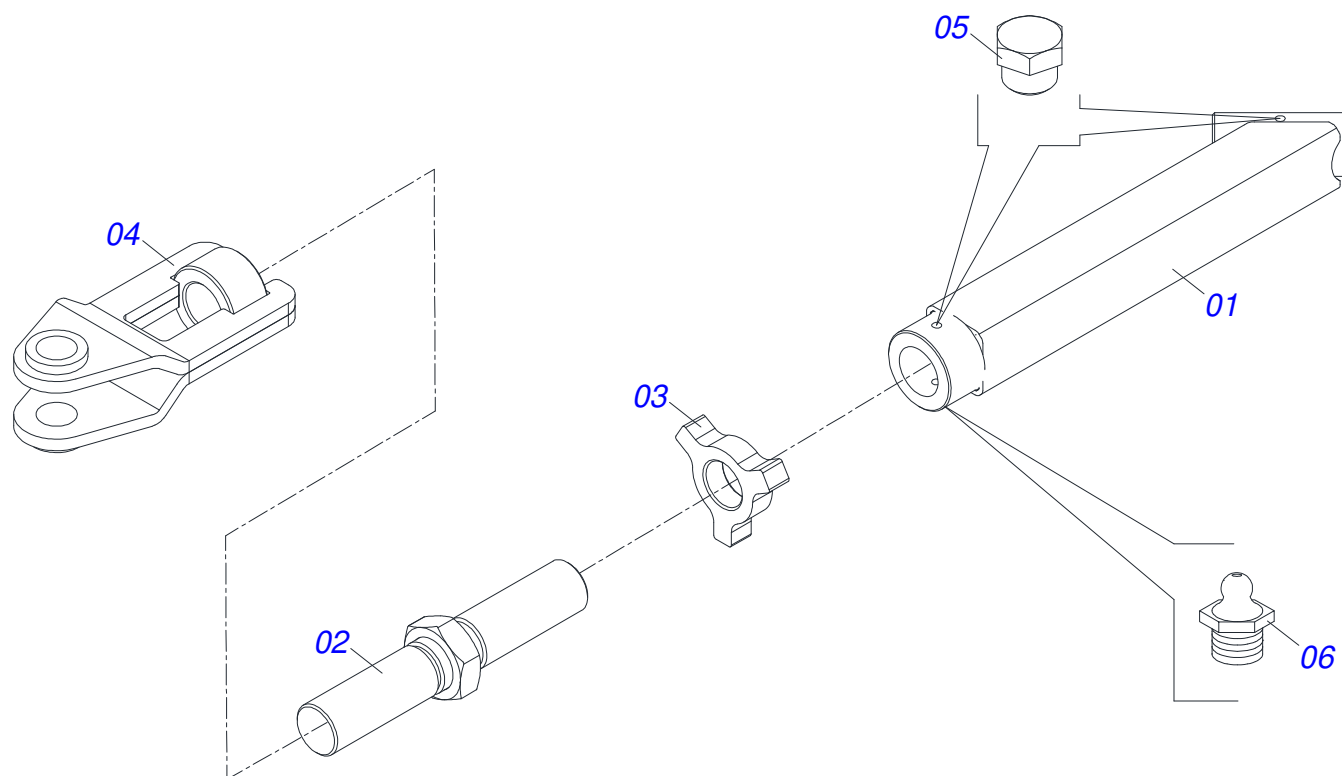


Item	Code	Description	See page	QT
001	0521067014	TURNBUCKLE SIDE		01
002	0501078990	TURNBUCLE AXLE		01
003	0561019879	LOCK ATTACHMENT BAR		01
004	0521066338	EXTERNAL ROTATING BRIDGE		01
005	0511017907	1/8" BSPT X 6 PLUG		02
006	0503010002	1800 GREASE FITTING		03

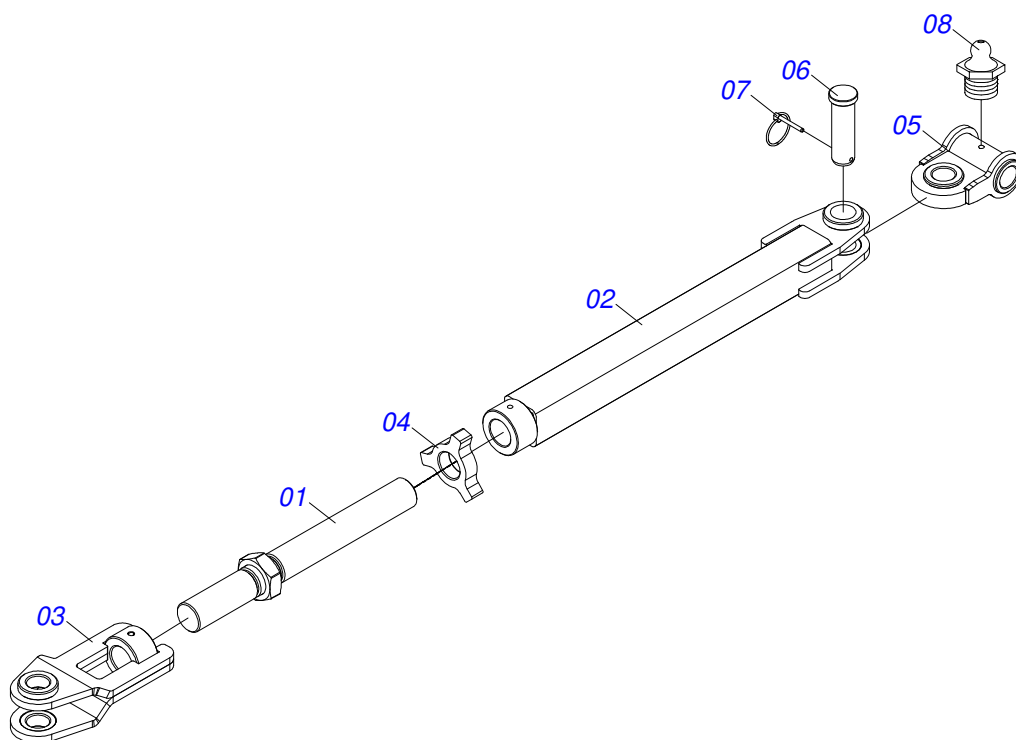


Item	Code	Description	See page	QT
01	0521065193	TURNBUCKLE AXLE		01
02	0521067392	FIXED BRACKET		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0521067393	EXTERNAL SIDE EAR		01
06	0571019949	JUNCTION SHAFT		01
07	0503030119	LOCK PIN		01
08	0503010002	1800 GREASE FITTING		03

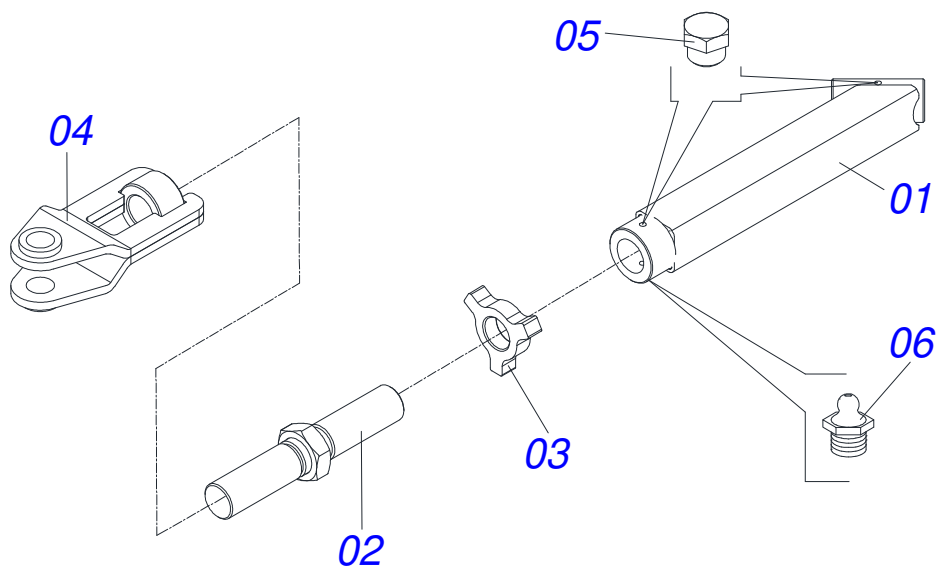


Item	Code	Description	See page	QT
001	0521063911	TURNBUCKLE RIGHT SIDE		01
002	0501078990	TURNBUCLE AXLE		01
003	0561019879	LOCK ATTACHMENT BAR		01
004	0521063917	POINT REVOLVING EXTENDING		01
005	0511017907	1/8" BSPT X 6 PLUG		02
006	0503010002	1800 GREASE FITTING		02

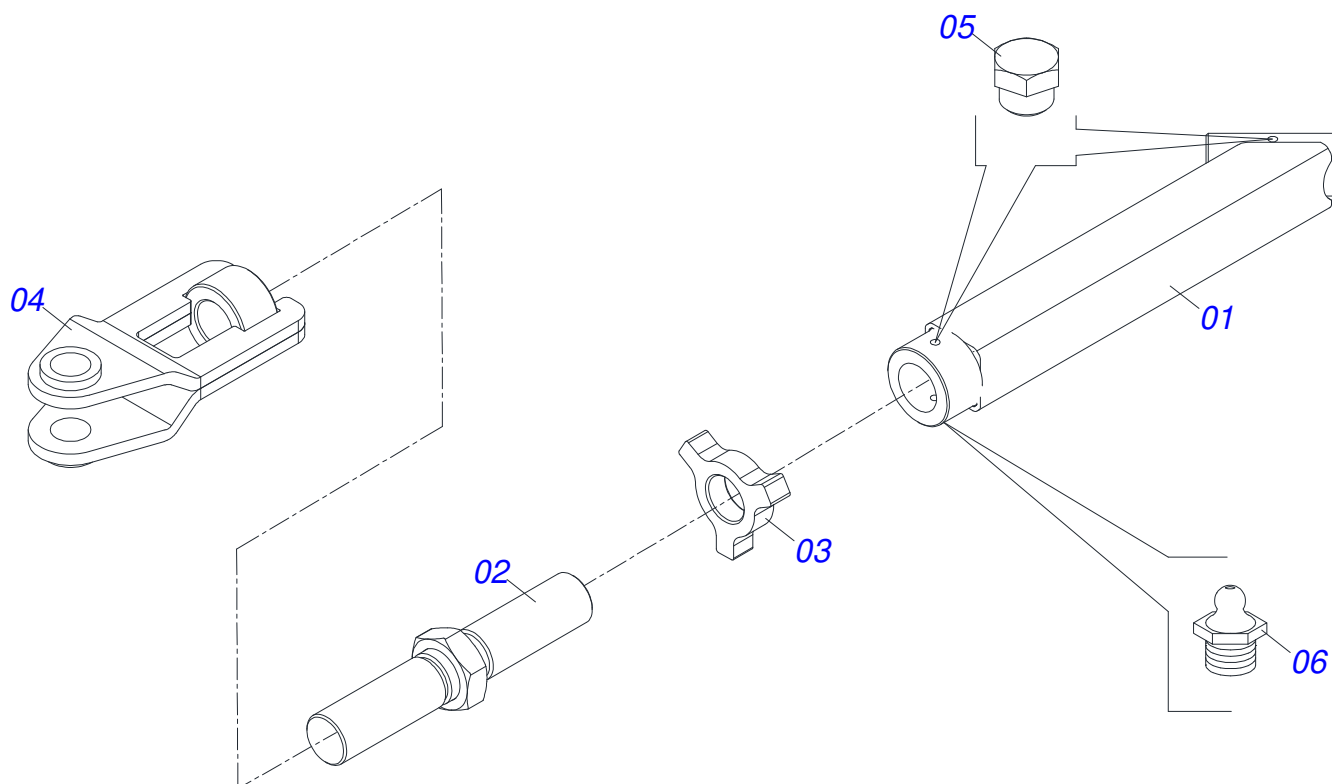


Item	Code	Description	See page	QT
001	0521063911	TURNBUCKLE RIGHT SIDE		01
002	0501078990	TURNBUCKLE AXLE		01
003	0561019879	LOCK ATTACHMENT BAR		01
004	0521066338	EXTERNAL ROTATING BRIDGE		01
005	0511017907	1/8" BSPT X 6 PLUG		02
006	0503010002	1800 GREASE FITTING		02

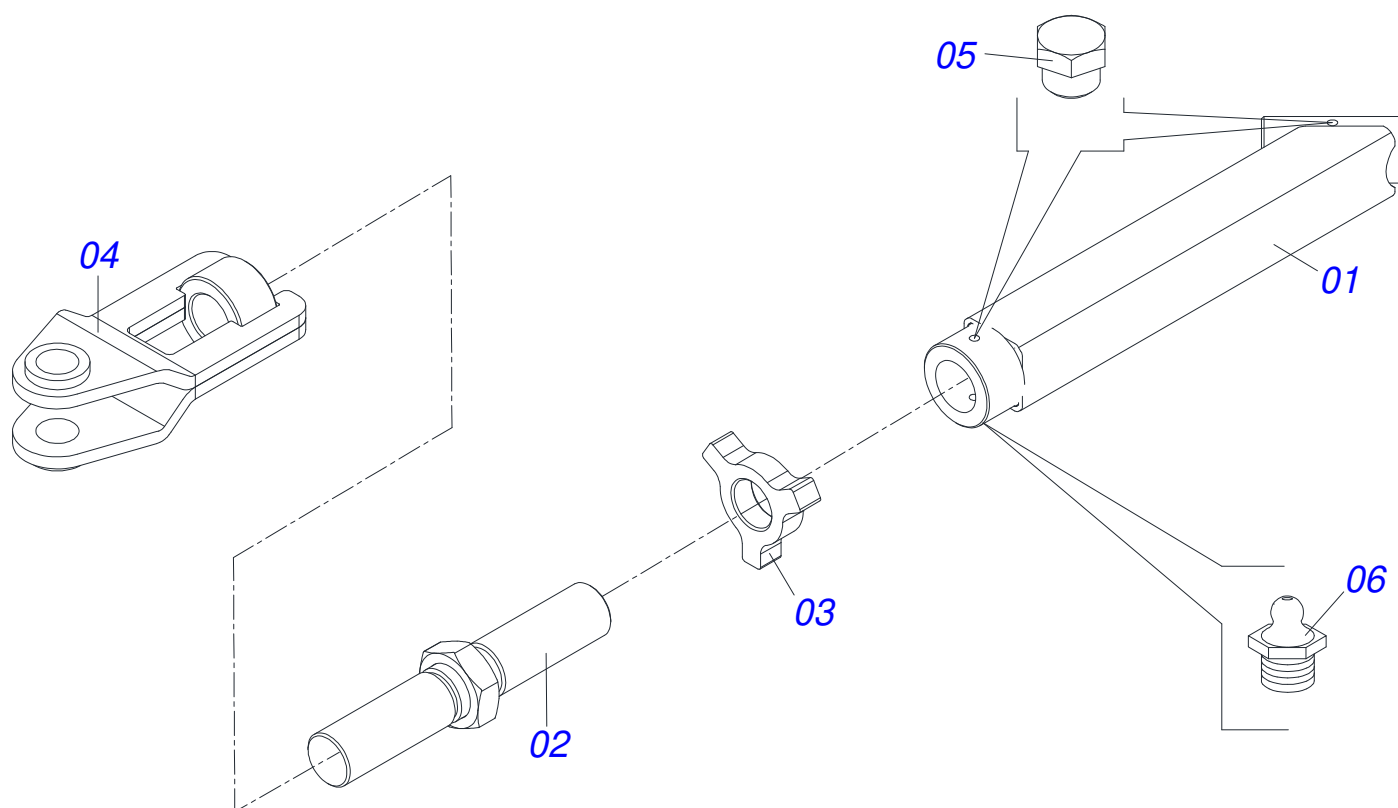


Item	Code	Description	See page	QT
001	0521064834	LATERAL EXTENSOR		01
002	0501078990	TURNBUCKLE AXLE		01
003	0561019879	LOCK ATTACHMENT BAR		01
004	0521063917	POINT REVOLVING EXTENDING		01
005	0511017907	1/8" BSPT X 6 PLUG		02
006	0503010002	1800 GREASE FITTING		02

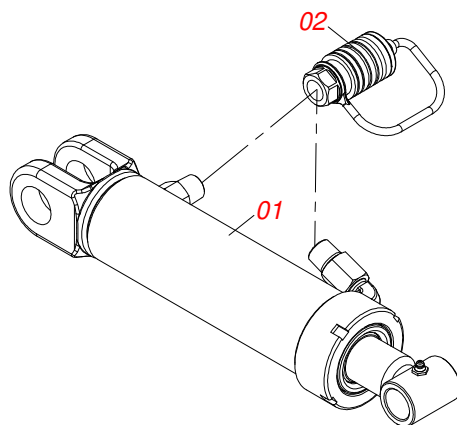


Item	Code	Description	See page	QT
01	0511057653	HYDRAULIC CYLINDER		01
02	0501053835	FEMALE QUICK COUPLER		02

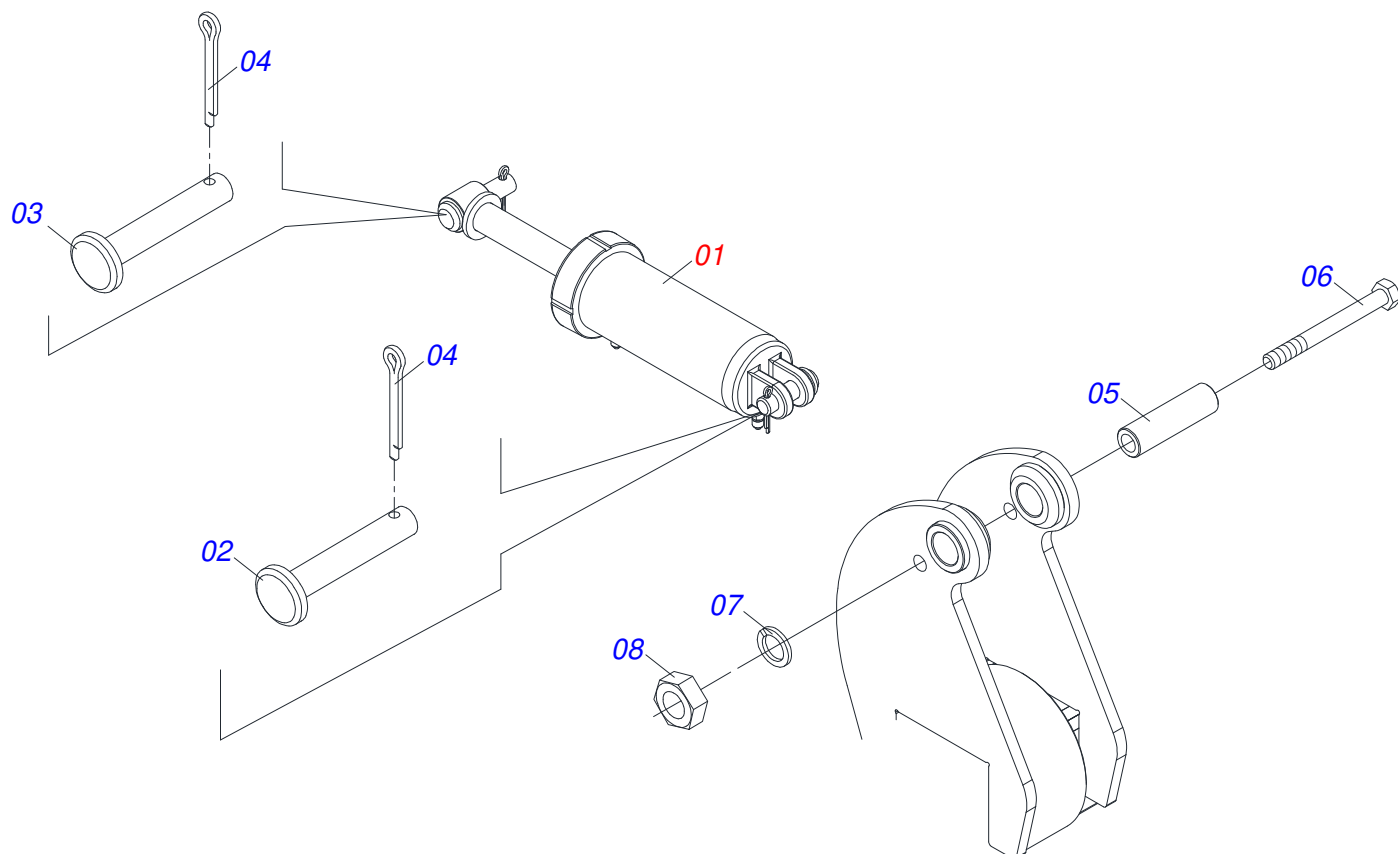


Item	Code	Description	See page	QT
001	0511058406	HYDRAULIC CYLINDER	03	
002	0521012538	1.2" X 3.5" COUPLING SHAFT	03	
003	0521012536	COUPLING SHAFT	03	
004	0503010523	1/4" X 2" COTTERPIN	06	
005	0531012565	SLEEVE 16,3X 30 X 88	03	
006	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN	03	
007	0503010027	5/8" SPRING WASHER	03	
008	0503010013	5/8" NUT	03	

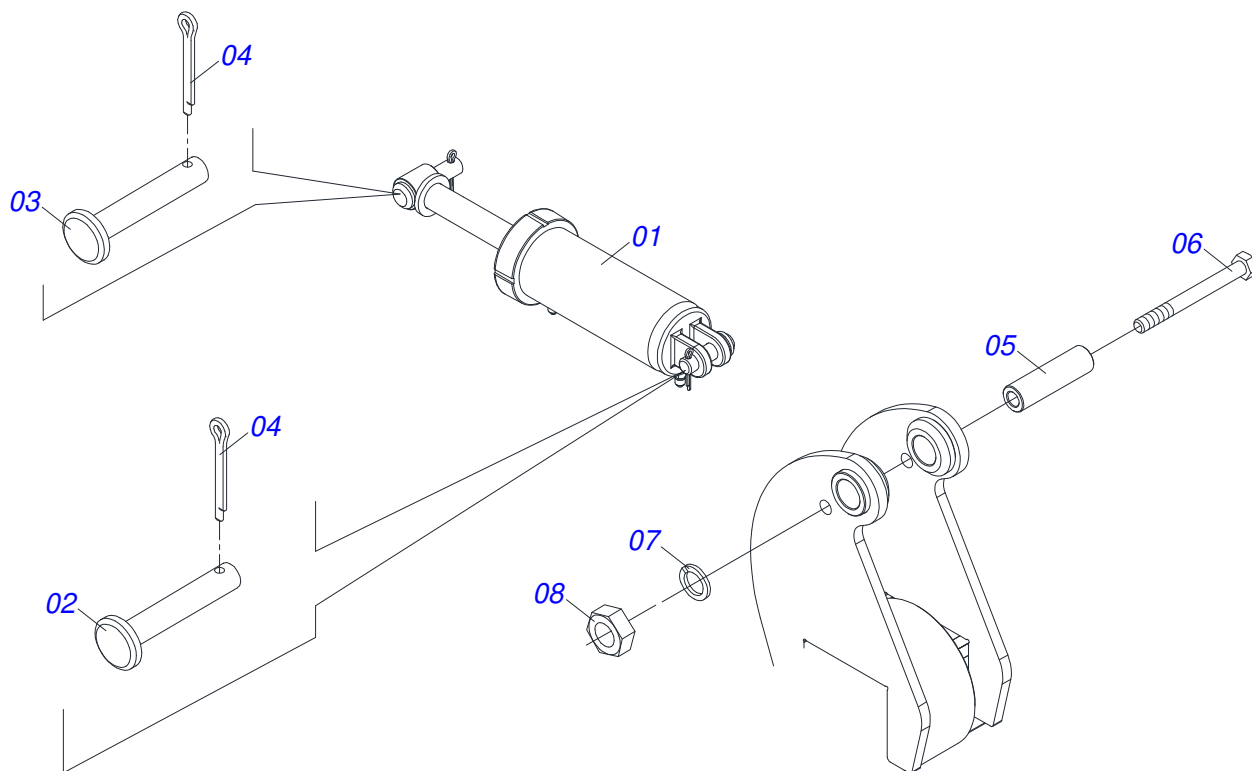


Item	Code	Description	See page	QT
001	0511058406	HYDRAULIC CYLINDER		01
002	0521012538	1.2" X 3.5" COUPLING SHAFT		01
003	0521012536	COUPLING SHAFT		01
004	0503010523	1/4" X 2" COTTERPIN		02
005	0531012565	SLEEVE 16,3X 30 X 88		01
006	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		01
007	0503010027	5/8" SPRING WASHER		01
008	0503010013	5/8" NUT		01

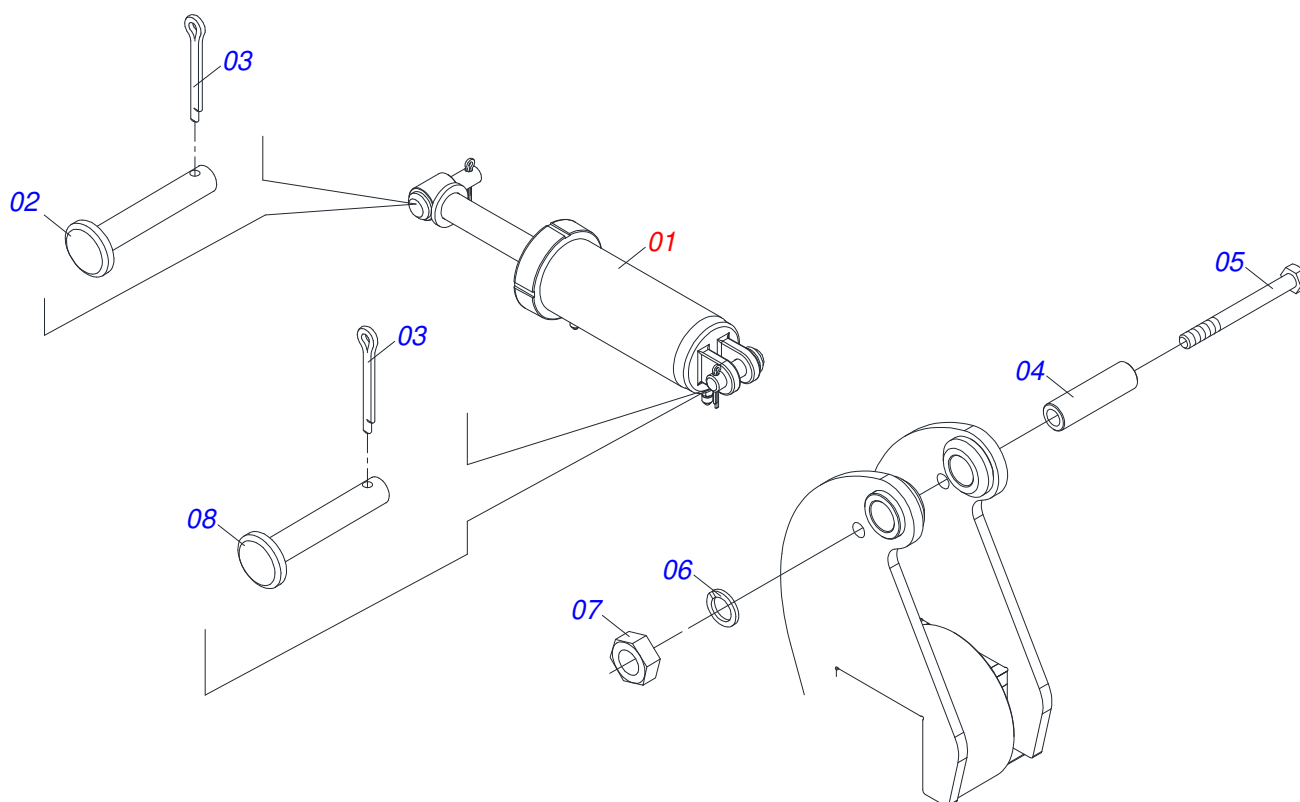


Item	Code	Description	See page	QT
001	0511058406	HYDRAULIC CYLINDER		01
002	0521012536	COUPLING SHAFT		01
003	0503010523	1/4" X 2" COTTERPIN		02
004	0531012565	SLEEVE 16,3X 30 X 88		01
005	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		01
006	0503010027	5/8" SPRING WASHER		01
007	0503010013	5/8" NUT		01
008	0531019171	1.25" X 7" COUPLING SHAFT		01

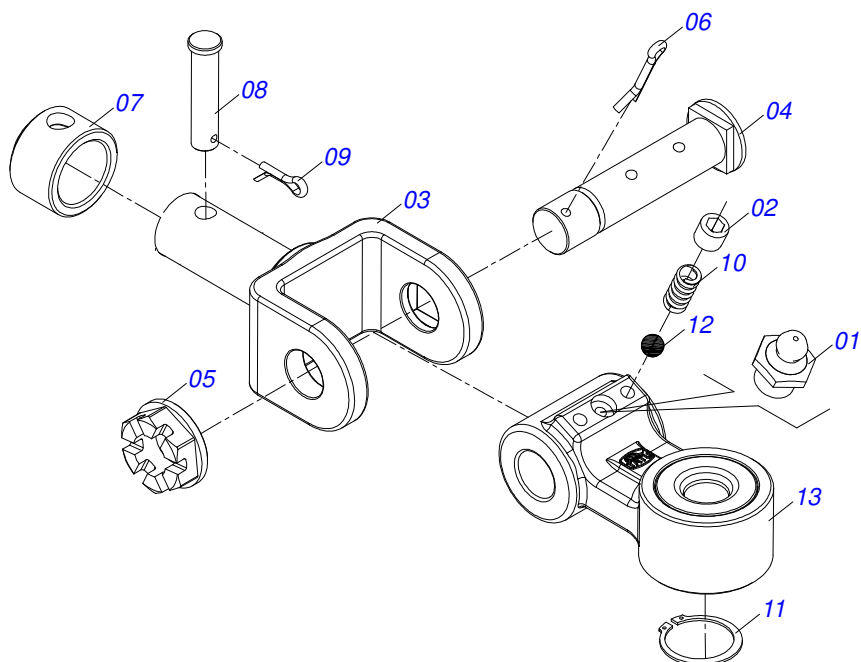


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0571012612	PIVOT SHAFT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2 COTTERPIN		01
10	0503033731	COMPRESSION SPRING LEFT		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

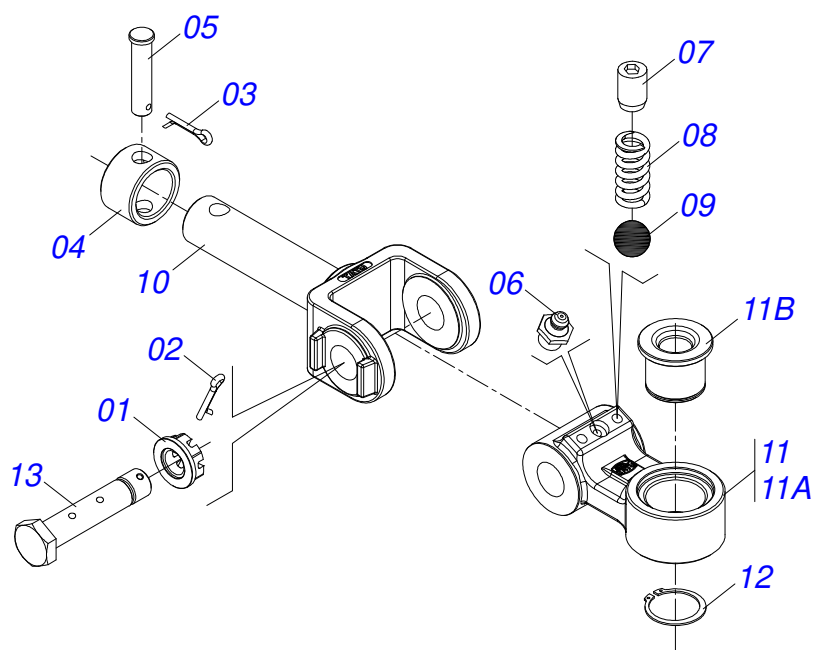

Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	COMPRESSION SPRING LEFT		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

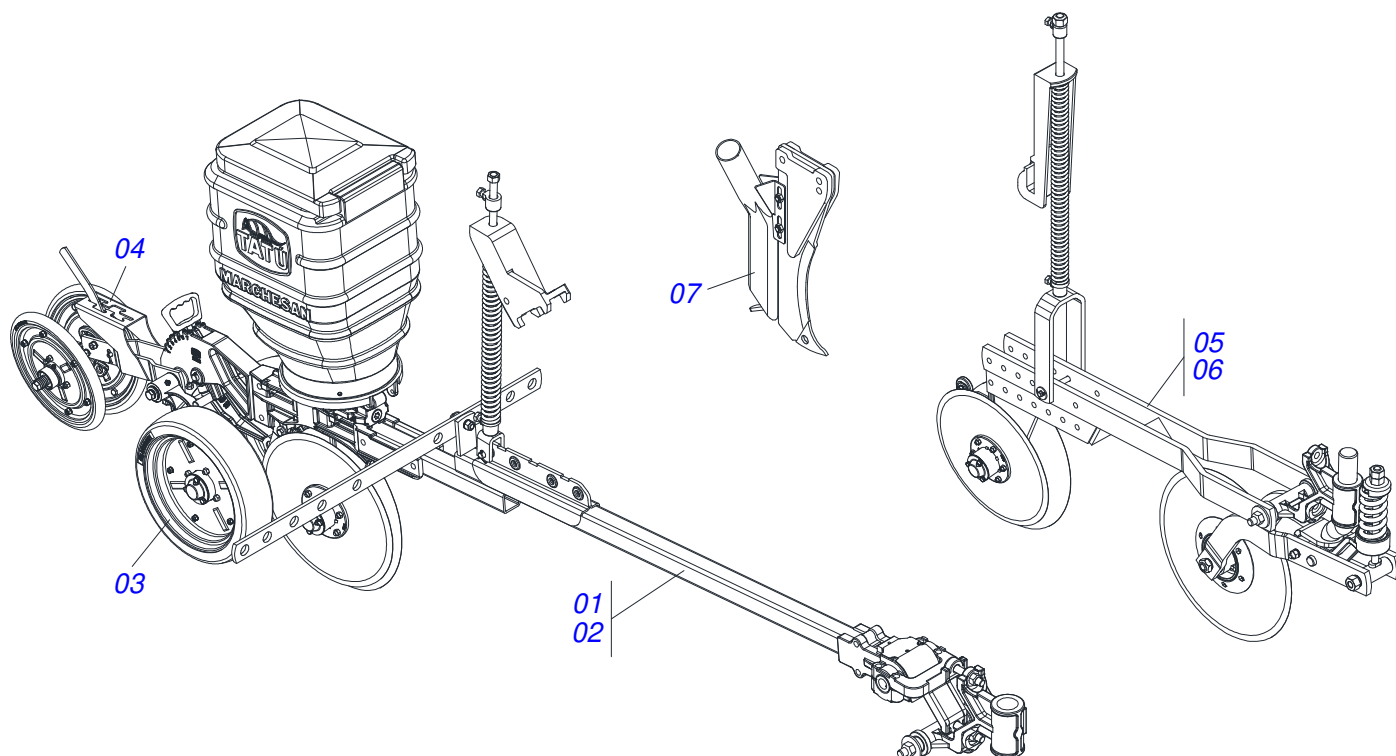

Item	Code	Description	See page	QT
1	0511051243	SHORT SEED ROW FRONT		08
2	0511051244	LONG FRONT SEED ROW		07
3	0521040 111	DEPTH CONTROL WHEELS ASSY		15
4	0501052908	COMPACTOR WHEEL WITH BEARING		15
5	050 1058190	LH DOUB-DISC FERTILIZER ROW ASSY		08
6	0501058191	RH LONG FERT. ROW W/DDD ASSY		07
7	0501110231	SCARIFIER HEAD WITH SPIKE 0061		15

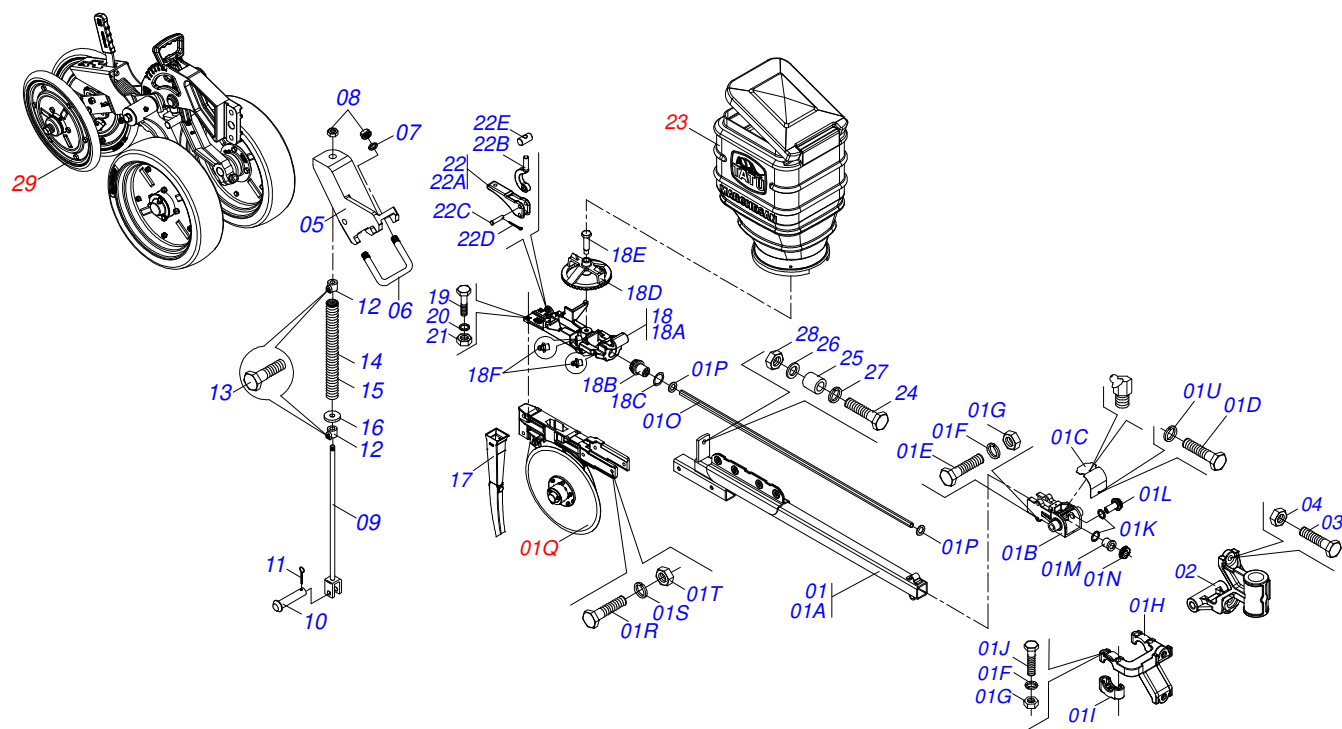


Item	Code	Description	See page
00	0511056600	FRONT LINE SEED SHORT DDD RIGHT	01 00
00A	0511056601	LONG SEED ROW FRONT DDD LEFT	00 01
01	0511056554	SHORT SEED ROW FRONT	01 00
01.	0511056555	LONG SEED ROW FRONT	00 01
01A	0521062183	SHORT SEED ROW ARM	01 00
01A.	0521062184	LONG SEED ROW ARM	00 01
01B	0502011830	ARTICULACION SUPPORT	01 01
01C	0521018079	SEEP ROW DRAWBAR COVER	01 01
01D	0503014729	1/4" UNF X 1/2" BOLT	02 02
01E	0503010752	1/2" X 3.1/2" BOLT	02 02
01F	0503011440	SPRING WASHER	06 06
01G	0503010060	1/2" NUT	06 06
01H	0502011561	BEARING SEMI	01 01
01I	0502010426	UPPER BEARING SEMI	02 02
01J	0503010479	BOLT	04 04
01K	0501013354	FLAT WASHER	01 01
01L	0502011400	18Z CONICAL GEAR	01 01
01M	0502011296	1/2 HEX AXLE BEARING SLEEVE	01 01
01N	0502011505	18Z CONICAL GEAR	01 01
01O	0521018077	1/2" X 58.6" HEX AXLE	01 01
01O.	0521018078	1/2" X 66.5" HEX AXLE	01 01
01P	0501013352	FLAT WASHER	04 04
01Q	0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	01 00
01Q.	0511056586	15 X 15 SEED DDD LEFT	00 01
01R	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN	02 02
01S	0503010019	1/2" SPRING WASHER	02 02
01T	0503010060	1/2" NUT	02 02
02	0502011567	FERTILIZER ROW SUPPORT	01 01
03	0511816156	BOLT	02 02
04	0503012412	5/8 UNC SELF LOCKING NUT	02 02
05	0502012538	SPRING VARON SUPPORT	01 01

Item	Code	Description	See page
06	0521014021	1/2" X 4.5" X 5.4" FASTENER	01 01
07	0511017302	FLAT WASHER	02 02
08	0503011336	1/2" HEX SELF ADJUSTING NUT	02 02
09	0511060376	SEEP SPRING GUIDE	01 01
10	0521010542	COUPLING SHAFT	01 01
11	0503010257	1/8" X 1" COTTERPIN	01 01
12	0502040534	SPRING GUIDE BUSHING LOCK	01 01
13	0503010834	1/2 X 1 BOLT	02 02
14	0503031340	1.7"X 19" X 0.3" COMPRESSION SPRING	01 01
15	0503031339	1" X 19" X 0.1" COMPRESSION SPRING	01 01
16	0501013753	FLAT WASHER	01 01
17	0503033672	NOZZLE WITHOUT TITANIUM	01 01
18	0511051693	BASE FIXING SYSTEM	01 01
18A	0502012704	BASE FIXING SYSTEM	01 01
18B	0502011411	10Z CONICAL GEAR	01 01
18C	0501013354	FLAT WASHER	01 01
18D	0502011418	40Z CONICAL GEAR	01 01
18E	0511018700	AXLE	01 01
18F	0503010002	1800 GREASE FITTING	02 02
19	0503015920	3/8" UNC X 1.3/4" BOLT	04 04
20	0503010025	3/8" SPRING WASHER	04 04
21	0503010026	3/8" NUT	04 04
22	0511052024	FAST CLOSING SET	01 01
22A	0502012744	SPEED LOCK LEVER ASSY	01 01
22B	0571011803	PRISONER CLOSE FAST	01 01
22C	0571014024	FAST BOLT GUIDE AXLE	02 02
22D	0503010257	1/8" X 1" COTTERPIN	02 02
22E	0571011804	FAST BOLT ADJUSTMENT	01 01
23	0511057017	SEED SYSTEM ASSY	01 01
24	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	02 02
25	0521010505	13,50 X 19,00 X 21,50 SLEEVE	02 02
26	0511017302	FLAT WASHER	02 02
27	0503011440	SPRING WASHER	02 02
28	0503010060	1/2" NUT	02 02
29	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	07 07

15X15 SEED UNAL DOUB-DISC ASSY


0909093298

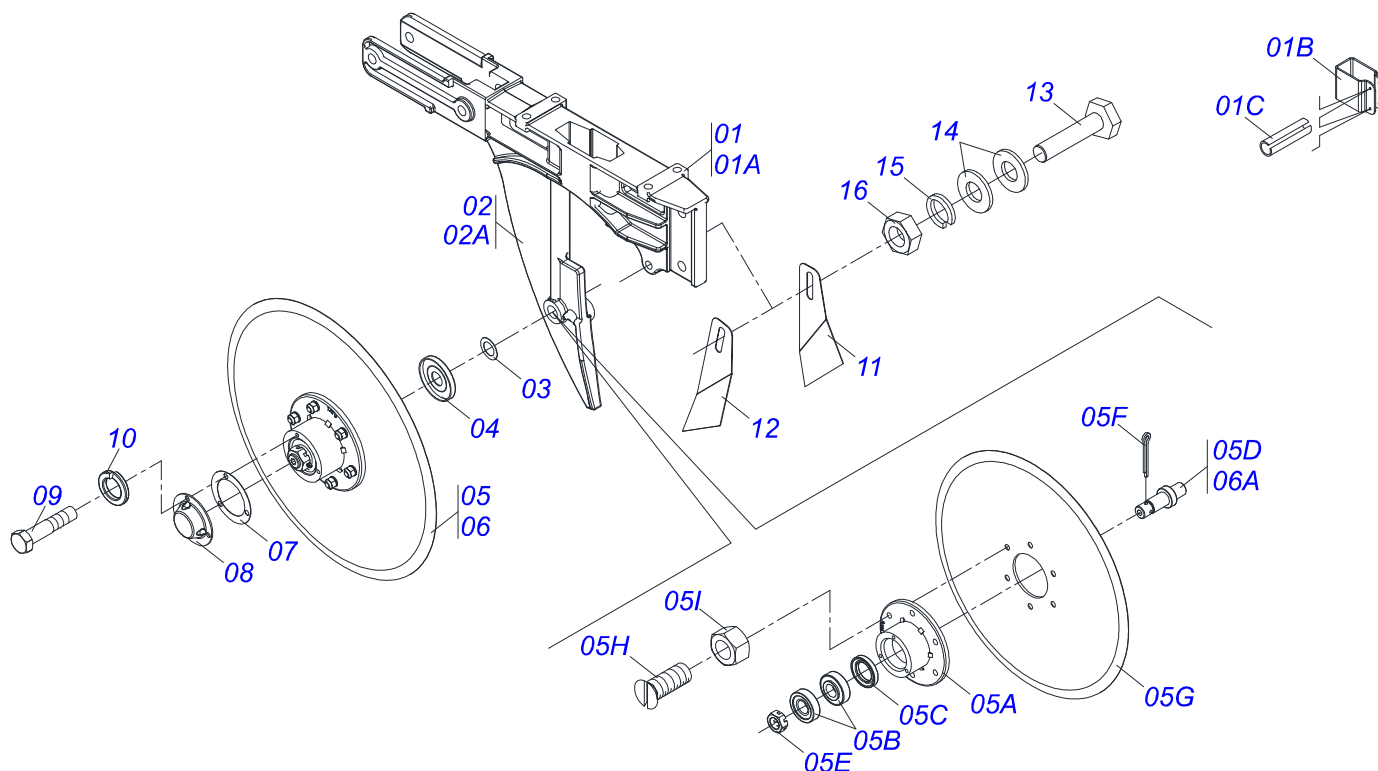

Item	Code	Description	See page	DIR	ESQ
00	0501059631	DDD SEED 15" X 15" RIGHT		01	00
00A	0501059632	DDD SEED 15X15 LEFT		00	01
01	0511052301	SUPPORT DDD 15 RIGHT		01	00
01A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01	00
01B	0571012491	SOCKET SEED GUIDE		01	01
01C	0503010838	0.1" X 0.8" SPRING PIN		02	02
02	0511052302	LH SUPPORT DDD GUIDE		00	01
02A	0561015592	LEFT DOUBLE DISC SUPPORT		00	01
03	0511015098	FLAT WASHER		06	06
04	0511011927	DUST CLOAK		02	02
05	0501054167	BOX DDD ASSY DPL 15 RIGHT		01	00
05A	0502011930	DOUBLE DISC COULTER BOX		02	02
05B	0503010598	30204 BALL BEARING		04	04
05C	0503011112	SEAL 02376-BRG		02	02
05D	0521019154	RIGHT DOUB DISC HUB		01	00
05E	0503030282	3/4" CASTLE NUT		02	02
05F	0503010257	1/8" X 1" COTTERPIN		02	02
05G	0603022042	13" X 0.12" PLAIN COULTER BLADE		02	02
05H	0503010546	5/16" X 7/8" BOLT		12	12
05I	0503010337	5/16" NUT		12	12
06	0501054168	BOX DDD ASSY DPL 15 LEFT		00	01
06A	0521019148	LEFT DOUBLE DISC HUB		00	01
07	0503030757	2.9" X 2" X 0.02" JOINT		02	02
08	0521019178	COVER DEPTH		02	02
09	0503014729	1/4" UNF X 1/2" BOLT		06	06
10	0503011441	SPRING WASHER		06	06
11	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01	01
12	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01	01
13	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01	01
14	0501010984	FLAT WASHER		02	02
15	0503011443	3/8" SPRING WASHER		01	01




Item	Code	Description	See page	DIR	ESQ
16	0503010026	3/8" NUT		01	01

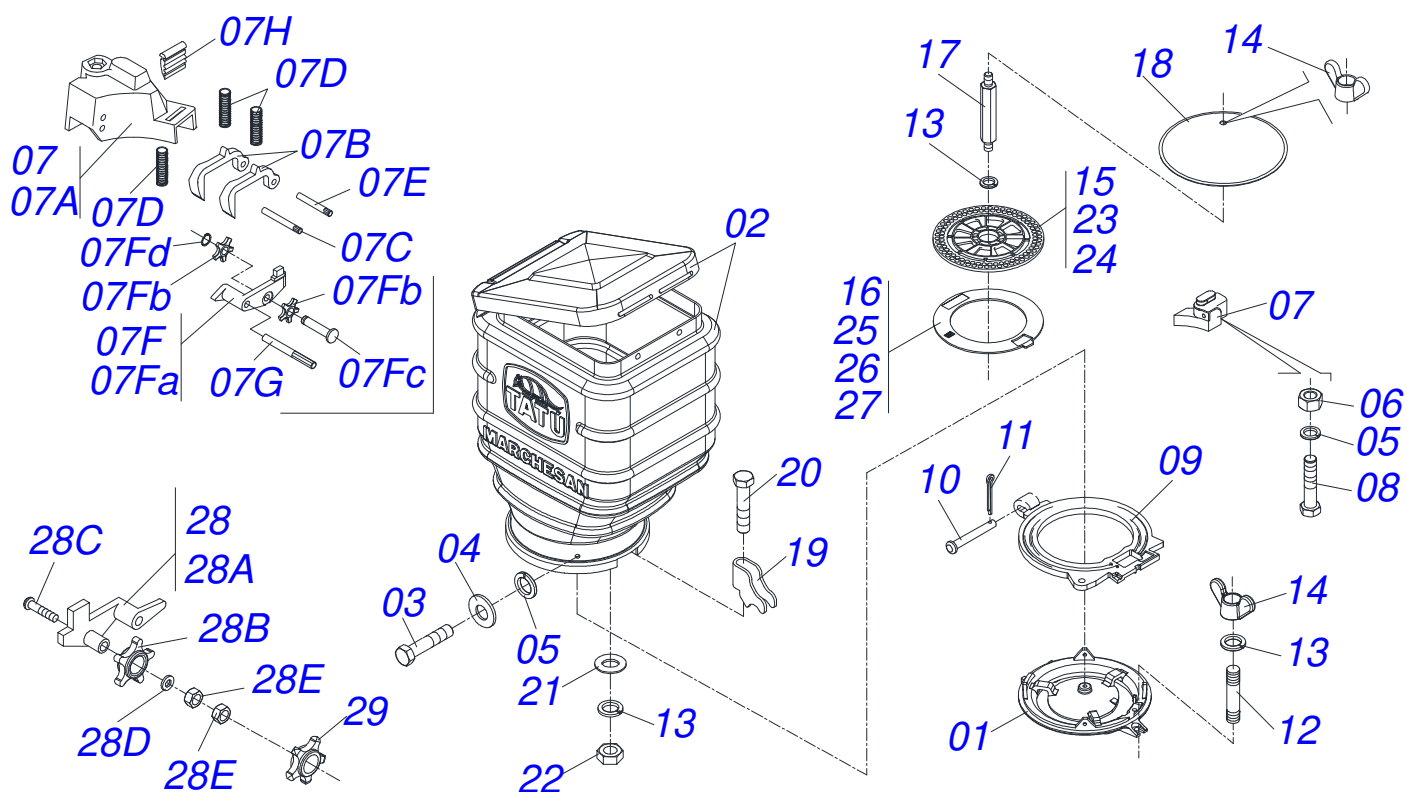


Item	Code	Description	See page
00	0501052234	SEED SISTEM ASSY	01
01	0502020324	SEED BOX SUPPORT	01
02	0503031508	COVER GREEN BEAM SEED YELLOW	01
03	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN	04
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER	04
05	0503010179	5/16" ZN SPRING WASHER	05
06	0503010337	5/16" NUT	01
07	0501051094	SEED DISTRIB ASSY WITH DOUB PULLEY	01
07A	0503030381	SEED DISTRIBUTOR BOX	01
07B	0502010447	TRIGGER	02
07C	0501013467	KEY AXLE	01
07D	0503030378	0.4" X 1.1" X 0.03" SPRING	03
07E	0501013466	KEY LIMITER AXLE	01
07F	0501051119	DOUBLE PULLEY ROCKER'S	01
07Fa	0503031129	DOUBLE PULLEY ROCKER ARM	01
07Fb	0503031128	5Z PLASTIC DOUB PULLEY FOR SOYBEAN	02
07Fc	0503031130	PIN OF THE PULLEY	01
07Fd	0503011853	503050 CLAMPING RING (FOR HOLE)	01
07G	0501013468	ROCKER ARM AXLE, OF THE PULLEY	01
07H	0503030377	SCRAPER	01
08	0503010675	5/16" X 2.1/4" BOLT	01
09	0502010408	SEED DISC LOWER TRAIL	01
10	0521010536	0.3" X 3.8" COUPLING SHAFT	01
11	0503010140	1/8" X 3/4" COTTERPIN	01
12	0503030083	3/8" X 3/8" X 1.6" STUD	01
13	0503010025	3/8" SPRING WASHER	03
14	0503010209	3/8" UNC BUTTERFLY NUT	14
15	0503016217	SOYBEAN SEED DISC 34 OBLONG	01
16	0503016219	RING TO SOYBEANS	01
17	0511013590	HEX STUD 3/8" X 3/8"	01
18	0511013494	DEFLECTOR	01

Item	Code	Description	See page
19	0531018622	BOLT FAST SUPPORT UPPER	01
20	0501010096	3/8" X 2" BOLT	01
21	0501010984	FLAT WASHER	01
22	0503010026	3/8" NUT	01
23	0503016204	CORN DISK 12 ORANGE	01
24	0503016218	DISC OF SOYBEAN	01
25	0503016214	RING CORN (APOLLO740)	01
26	0503016220	RING TO SOYBEANS (APOLLO 745)	01
27	0503016221	RING TO SOYBEANS (APOLLO 571)	01
28	0501050120	LARGER WALKING BEAM ASSY	01
28A	0503030379	LARGER ROCKER ARM	01
28B	0502060001	PLASTIC PULLEY FOR MAIZE	01
28C	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN	01
28D	0503010669	FLAT WASHER	01
28E	0503010667	3/16" NUT	02
29	0503030558	PULLEY 4Z CORN PLASTIC	01

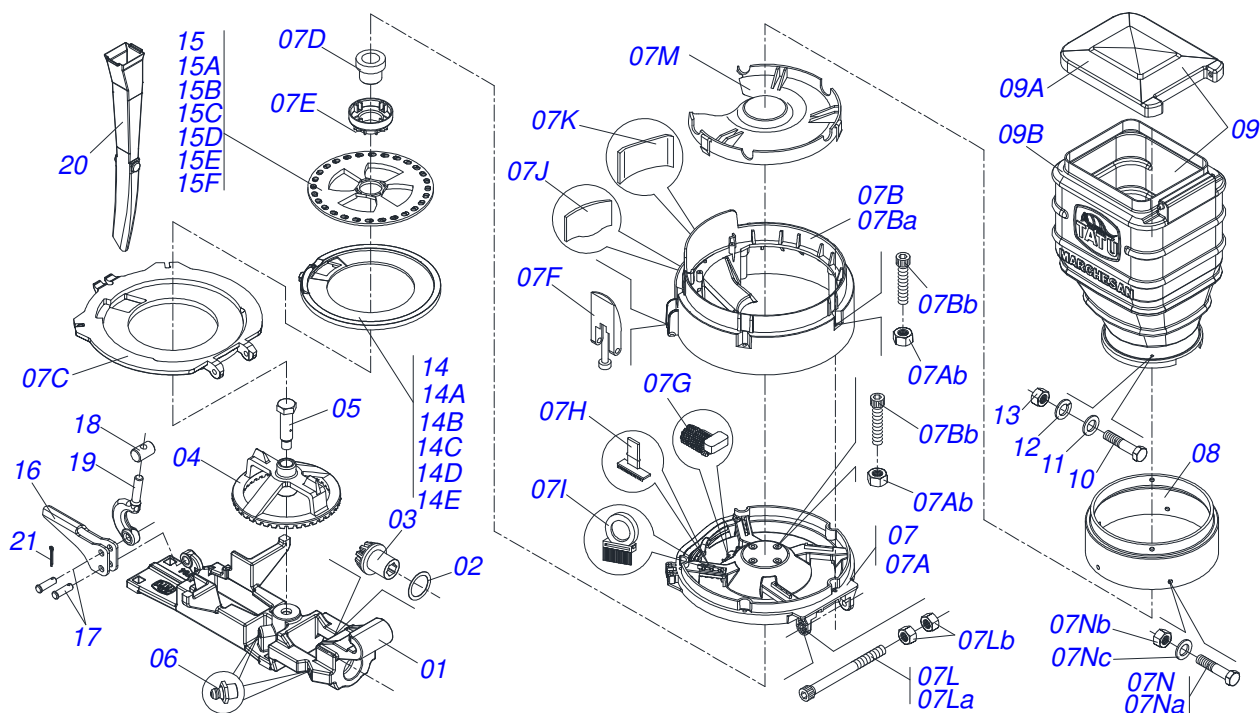


Item	Code	Description	See page	QT
01	0502012704	BASE FIXING SYSTEM	01	
02	0501013354	FLAT WASHER	01	
03	0502012639	12Z LOWER CONICAL GEAR	01	
04	0502011418	40Z CONICAL GEAR	01	
05	0511018700	AXLE	01	
06	0503010002	1800 GREASE FITTING	02	
07	0511052058	SEED SYSTEM TITANIUM	01	
07A	0503062031	BASE SET	01	
07Aa	0503016268	BASE TITANIUM	01	
07Ab	0503016269	HEX NUT	09	
07B	0503062032	NECK TITANIUM ASSY	01	
07Ba	0503016270	NECK TITANIUM ASSY	01	
07Bb	0503016271	ALLEN BOLT	05	
07C	0503062033	OPPOSITE BASE SET	01	
07D	0503062034	CENTRAL ADAPTER SET	01	
07E	0503062035	SET FALSE ADAPT CENTER	01	
07F	0503062036	SUBSET ASSY LOCK BASE	01	
07G	0503062037	SUBSET ESCOVAFLEX ASSY	01	
07H	0503062038	ASSY ANTI-LEAP	01	
07I	0503062039	POLIFLOW TITANIUM ASSY	01	
07J	0503062040	DISPLAY ASSY TITANIUM 1050010	01	
07K	0503062041	TITANIUM DISPLAY PROTECTION ASSY	01	
07L	0503062042	SET BOLT ARTICULADOR	01	
07La	0503016282	ALLEN BOLT	01	
07Lb	0503016283	M8 NUT HEX	02	
07M	0503062043	ASSY LIMIT WEIGHT	01	
07N	0503062044	SET MOUNT BOX FOR SEED	01	
07Na	0503016285	BOLT	05	
07Nb	0503016236	CABLE ASSY	05	
07Nc	0503016287	FLAT WASHER	05	
08	0503033683	SEED BOX SUPPORT	01	

Item	Code	Description	See page	QT
09	0503031508	COVER GREEN BEAM SEED YELLOW		01
09A	0503031509	YELLOW BEAM SEED		01
09B	0503031510	FERTILIZER BEAM COVER		01
10	0503010371	5/16" X 1" BOLT		09
11	0501010694	8.5 X 18 X 1.5 FLAT WASHER		18
12	0503010179	5/16" ZN SPRING WASHER		09
13	0503010337	5/16" NUT		09
14	0503062066	DISC SET WITH CORN RING		01
14A	0503016204	CORN DISK 12 ORANGE		01
14B	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
14C	0503016399	TITANIUM RING CORN (GREEN)		01
14D	0503016400	TITANIUM RING CORN (GREY)		01
14E	0503016401	TITANIUM RING CORN (BLUE)		01
15	0503062067	DISC SET / RING SOY 90F TITANIUM		01
15A	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
15B	0503016218	DISC OF SOYBEAN		01
15C	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
15D	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
15E	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
15F	0503016407	TITANIUM RING FOR SOYBEAN		01
16	0541016855	SPEED ??LOCK LEVER ASSY		01
17	0551018050	FAST BOLT GUIDE AXLE		02
18	0531018626	BOLT FAST REGULACION		01
19	0502012661	PRISONER CLOSING FAST		01
20	0503033672	NOZZLE WITHOUT TITANIUM		01
21	0503010257	1/8" X 1" COTTERPIN		02

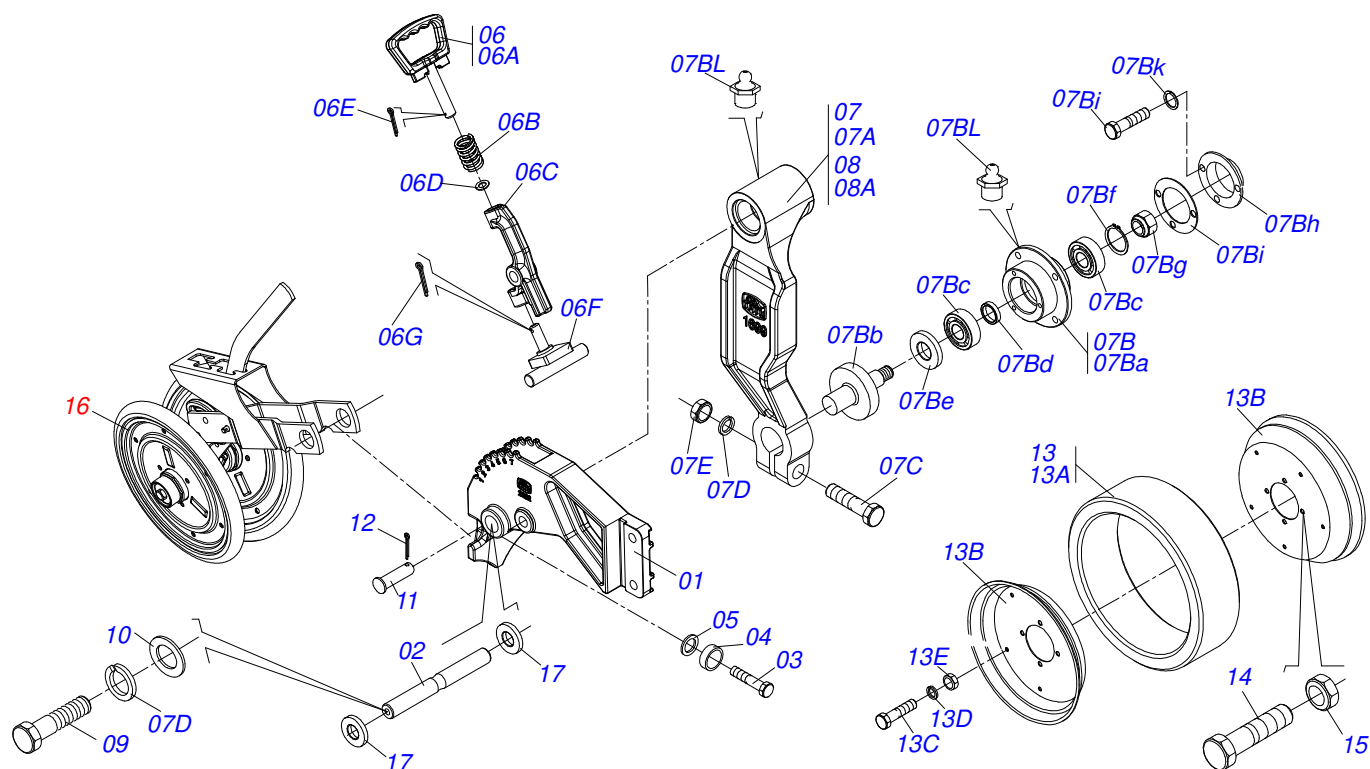


Item	Code	Description	See page
00	0511049343	SEED ROW REAR	01
01	0502012282	DEPTH CONTROL SUPPORT	01
02	0531010765	DEPTH WHEEL AXLE	01
03	0503010256	3/8" X 3/4" BOLT	01
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE	02
05	0511015346	FLAT WASHER	04
06	0511069633	PRESS WHEELS COMPACTOR	01
06A	0502011689	1/8" DEPTH CONTROL LEVER	01
06B	0503030975	0.9" X 1.5" X 0.1" SPRING	01
06C	0502011688	SEED SIST CONTROL DEPTH LEVER	01
06D	0511015976	FLAT WASHER	01
06E	0503010257	1/8" X 1" COTTERPIN	01
06F	0511060699	DEPTH WHEEL STOP	01
06G	0503010071	3/16" X 1" COTTERPIN	01
07	0501058576	RIGHT WHEEL ARM	01
07A	0502012553	DEPTH WHEEL RIGHT ARM	01
07B	0501052627	ASSY DEPTH WHEEL BOX	01
07Ba	0502011907	DEPTH CONTROL WHEEL HUB	02
07Bb	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK	01
07Bc	0503010269	6204 BALL BEARING	02
07Bd	0501013636	SPACING SLEEVE	02
07Be	0503010689	SEAL 00763-BR	01
07Bf	0503011105	SEAL RING	01
07Bg	0503010878	5/8" SELF ALIGNING NUT	02
07Bh	0521019178	COVER DEPTH	02
07Bi	0503030757	2.9" X 2" X 0.02" JOINT	02
07Bj	0503013758	1/4" X 1-1/2" BOLT	06
07Bk	0503011441	SPRING WASHER	06
07Bl	0503010691	1/4" GREASE FITTING	02
07C	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	01
07D	0503011440	SPRING WASHER	01


Item	Code	Description	See page
07E	0503010060	1/2" NUT	01
07F	0503015021	6871-GA SEAL RING	02
08	0501058577	RIGHT ARM DEPTH CONTROL WHEEL	01
08A	0502012552	LH ARM DEPTH CONTROL WHEEL	01
09	0503010311	1/2" X 1-1/4" BOLT	02
10	0511017302	FLAT WASHER	02
11	0521019093	0.6" X 2.7" PIVOT SHAFT	01
12	0503010257	1/8" X 1" COTTERPIN	01
13	0501052538	DEPTH BAND WITH ARMS	02
13A	0503030551	DEPTH CONTROL WHEEL RUBBER BAND	01
13B	0521010832	RIM FLANGE	02
13C	0503010298	1/4" X 1/2" BOLT	05
13D	0503010143	1/4" SPRING WASHER	05
13E	0503010144	1/4" NUT	05
14	0503010358	5/16" X 5/8" BOLT	08
15	0503013816	5/16" LOCKNUT	08
16	0501052908	COMPACTOR WHEEL WITH BEARING	02
17	0503015021	6871-GA SEAL RING	02

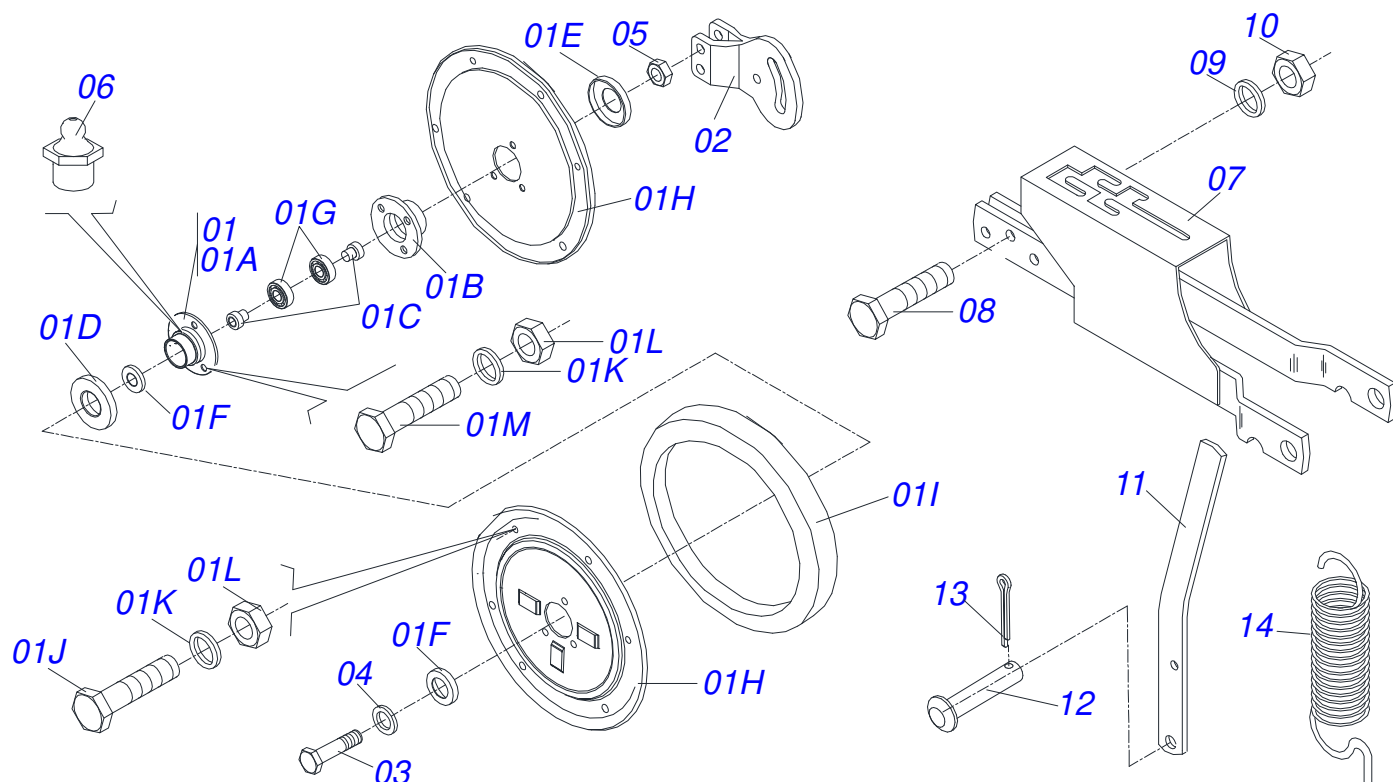

Item	Code	Description	See page
01	0501052908	COMPACTOR WHEEL WITH BEARING	01
01A	0502011919	PRESS WHEEL HUB	01
01B	0502011877	PRESS WHEEL HUB	01
01C	0521018922	PRESS WHEEL PASSANG AXLE	02
01D	0521018921	DUST CLOAK	01
01E	0521016316	DUST CLOAK	01
01F	0503012734	SEAL 01556 BR	02
01G	0503010269	6204 BALL BEARING	02
01H	0521018928	PRESS WHEEL RIM	02
01I	0503031421	DEPTH CONTROL WHEEL RUBBER BAND	01
01J	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN	06
01K	0503010179	5/16" ZN SPRING WASHER	06
01L	0503010337	5/16" NUT	06
01M	0503010371	5/16" X 1" BOLT	03
02	0502012116	PRESS WHEEL ADJUSTER	01
03	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN	02
04	0521014508	FLAT WASHER	12
05	0503011336	1/2" HEX SELF ADJUSTING NUT	02
06	0503010691	1/4" GREASE FITTING	02
07	0511069633	PRESS WHEELS COMPACTOR	01
08	0503010849	3/8" X 1-1/2" BOLT	02
09	0503011443	3/8" SPRING WASHER	02
10	0503010026	3/8" NUT	02
11	0541016906	PRESS WHEELS REGULATOR BODY	01
12	0521010539	0.3" X 1.2" COUPLING SHAFT	01
13	0503010140	1/8" X 3/4" COTTERPIN	01
14	0503030805	1.6" X 6" X 0.2 TRACTION SPRING	01

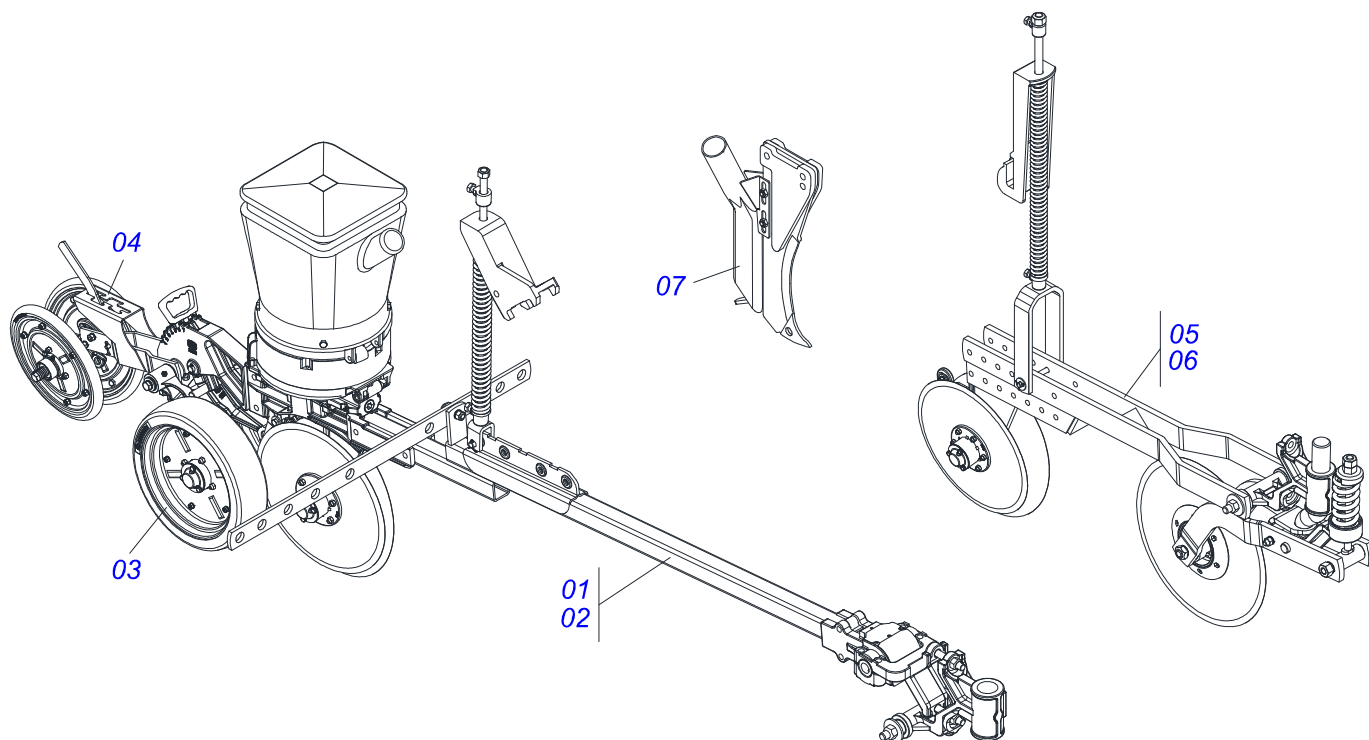


Item	Code	Description	See page	QT
1	0511052898	SHORT SEED ROW FRONT		08
2	0511052899	LONG SEED ROW FRONT		07
3	0521040 111	DEPTH CONTROL WHEELS ASSY		15
4	0501052908	COMPACTOR WHEEL WITH BEARING		15
5	050 1058190	LH DOUB-DISC FERTILIZER ROW ASSY		08
6	0501058191	RH LONG FERT. ROW W/DDD ASSY		07
7	0501110231	SCARIFIER HEAD WITH SPIKE 0061		15

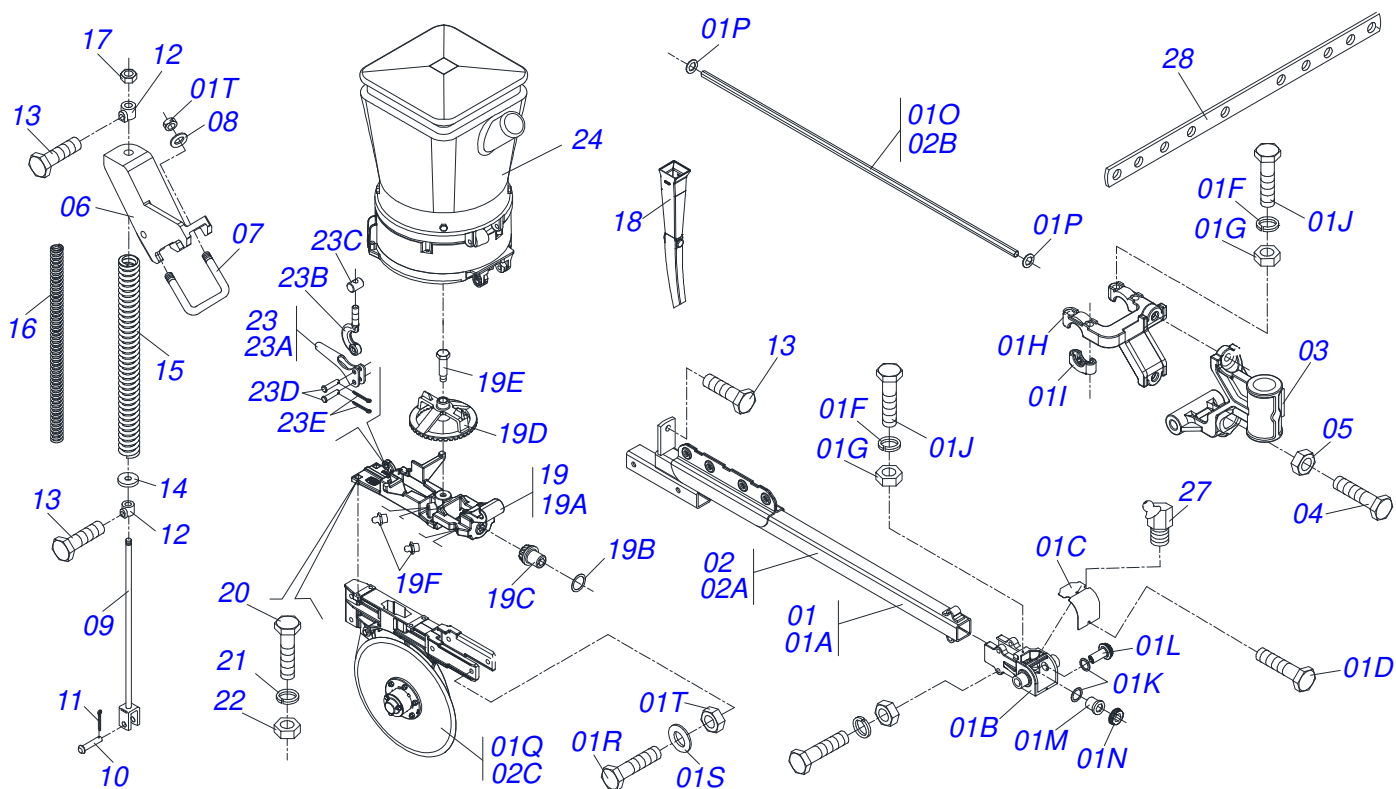


Item	Code	Description	See page	CT LG
00	0511053202	SHORT SEED ROW FRONT	01	00
00A	0511053203	LONG FRONT SEED ROW	00	01
01	0511050807	RH SHORT SEED ROW	01	00
01A	0521062183	SHORT SEED ROW ARM	01	00
01B	0502011830	ARTICULACCION SUPPORT	01	01
01C	0521018079	SEEP ROW DRAWBAR COVER	01	01
01D	0503014729	1/4" UNF X 1/2" BOLT	02	02
01E	0503010752	1/2" X 3.1/2" BOLT	02	02
01F	0503010019	1/2" SPRING WASHER	02	02
01G	0503010060	1/2" NUT	07	07
01H	0502011561	BEARING SEMI	01	01
01I	0502010426	UPPER BEARING SEMI	02	02
01J	0503010479	BOLT	04	04
01K	0501013354	FLAT WASHER	02	02
01L	0502011400	18Z CONICAL GEAR	01	01
01M	0502011296	1/2 HEX AXLE BEARING SLEEVE	01	01
01N	0502011505	18Z CONICAL GEAR	01	01
01O	0521018077	1/2" X 58.6" HEX AXLE	01	00
01P	0501013352	FLAT WASHER	04	04
01Q	0501059631	DDD SEED 15" X 15" RIGHT	01	00
01R	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN	02	02
01S	0521014508	FLAT WASHER	02	02
01T	0503011336	1/2" HEX SELF ADJUSTING NUT	04	04
02	0511050808	LH LONG SED ROW	00	01
02A	0521062184	LONG SEED ROW ARM	00	01
02B	0521018078	1/2" X 66.5" HEX AXLE	00	01
02C	0501059632	DDD SEED 15X15 LEFT	00	01
03	0502011567	FERTILIZER ROW SUPPORT	01	01
04	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN	02	02
05	0503012412	5/8 UNC SELF LOCKING NUT	02	02
06	0502012538	SPRING VARON SUPPORT	01	01

Item	Code	Description	See page	CT LG
07	0521014021	1/2" X 4.5" X 5.4" FASTENER		01 01
08	0511017302	FLAT WASHER		03 03
09	0511060376	SEEP SPRING GUIDE		01 01
10	0521010542	COUPLING SHAFT		01 01
11	0503010257	1/8" X 1" COTTERPIN		01 01
12	0502040534	SPRING GUIDE BUSHING LOCK		02 02
13	0503010834	1/2 X 1 BOLT		02 02
14	0501013753	FLAT WASHER		01 01
15	0503031340	1.7"X 19" X 0.3" COMPRESSION SPRING		01 01
16	0503031339	1" X 19" X 0.1" COMPRESSION SPRING		01 01
17	0503010013	5/8" NUT		01 01
18	0503033672	NOZZLE WITHOUT TITANIUM		01 01
19	0511051693	BASE FIXING SYSTEM		01 01
19A	0502012704	BASE FIXING SYSTEM		01 01
19B	0501013354	FLAT WASHER		01 01
19C	0502011411	10Z CONICAL GEAR		01 01
19D	0502011418	40Z CONICAL GEAR		01 01
19E	0511018700	AXLE		01 01
19F	0503010002	1800 GREASE FITTING		02 02
20	0503010849	3/8" X 1-1/2" BOLT		04 04
21	0503010025	3/8" SPRING WASHER		04 04
22	0503010026	3/8" NUT		04 04
23	0511052024	FAST CLOSING SET		01 01
23A	0541016855	SPEED ??LOCK LEVER ASSY		01 01
23B	0571011803	PRISONER CLOSE FAST		01 01
23C	0571011804	FAST BOLT ADJUSTMENT		01 01
23D	0551018050	FAST BOLT GUIDE AXLE		02 02
23E	0503010257	1/8" X 1" COTTERPIN		02 02
24	0511053204	SEED SYSTEM TITANIUM ASSY, CSU PST4		01 01
25	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01 01
26	0521010505	13,50 X 19,00 X 21,50 SLEEVE		01 01
27	0503011099	GREASE FITTING		02 02
28	0501013714	STABILIZER BAR		01 01

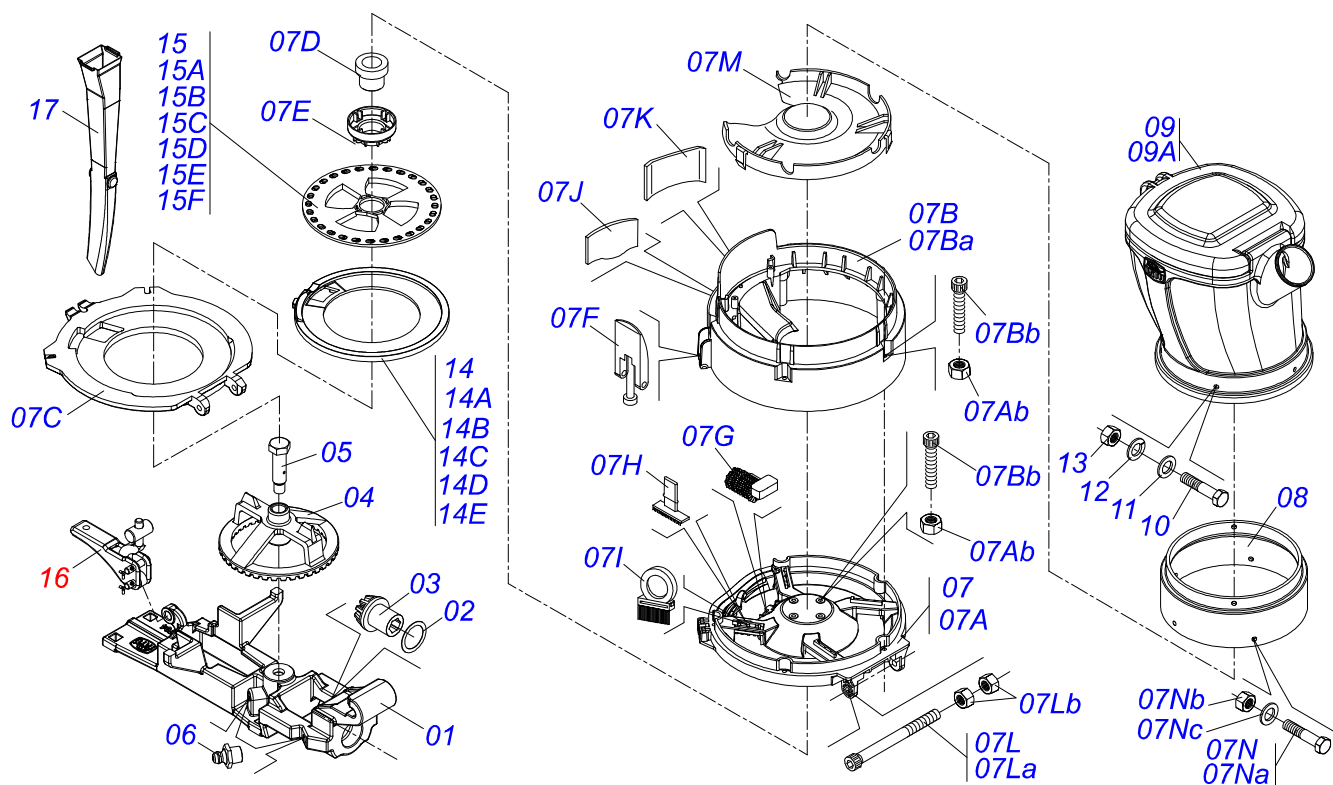


Item	Code	Description	See page	QT
01	0502012704	BASE FIXING SYSTEM		01
02	0501013354	FLAT WASHER		01
03	0502011411	10Z CONICAL GEAR		01
04	0502011418	40Z CONICAL GEAR		01
05	0511018700	AXLE		01
06	0503010002	1800 GREASE FITTING		02
07	0511052058	SEED SYSTEM TITANIUM		01
07A	0503062031	BASE SET		01
07Aa	0503016268	BASE TITANIUM		01
07Ab	0503016269	HEX NUT		09
07B	0503062032	NECK TITANIUM ASSY		01
07Ba	0503016270	NECK TITANIUM ASSY		01
07Bb	0503016271	ALLEN BOLT		05
07C	0503062033	OPPOSITE BASE SET		01
07D	0503062034	CENTRAL ADAPTER SET		01
07E	0503062035	SET FALSE ADAPT CENTER		01
07F	0503062036	SUBSET ASSY LOCK BASE		01
07G	0503062037	SUBSET ESCOVAFLEX ASSY		01
07H	0503062038	ASSY ANTI-LEAP		01
07I	0503062039	POLIFLOW TITANIUM ASSY		01
07J	0503062040	DISPLAY ASSY TITANIUM 1050010		01
07K	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
07L	0503062042	SET BOLT ARTICULADOR		01
07La	0503016282	ALLEN BOLT		01
07Lb	0503016283	M8 NUT HEX		02
07M	0503062043	ASSY LIMIT WEIGHT		01
07N	0503062044	SET MOUNT BOX FOR SEED		01
07Na	0503016285	BOLT		05
07Nb	0503016286	HEX NUT		05
07Nc	0503016287	FLAT WASHER		05
08	0503033683	SEED BOX SUPPORT		01

Item	Code	Description	See page	QT
09	0521050118	DEPOSIT SEED BOCAL		01
09A	0503062397	DEPOSIT SEED ASSY		01
10	0503010358	5/16" X 5/8" BOLT		09
11	0501010694	8.5 X 18 X 1.5 FLAT WASHER		18
12	0503010179	5/16" ZN SPRING WASHER		09
13	0503010337	5/16" NUT		09
14	0503062066	DISC SET WITH CORN RING		01
14A	0503016204	CORN DISK 12 ORANGE		01
14B	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
14C	0503016399	TITANIUM RING CORN (GREEN)		01
14D	0503016400	TITANIUM RING CORN (GREY)		01
14E	0503016401	TITANIUM RING CORN (BLUE)		01
15	0503062067	DISC SET / RING SOY 90F TITANIUM		01
15A	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
15B	0503016218	DISC OF SOYBEAN		01
15C	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
15D	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
15E	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
15F	0503016407	TITANIUM RING FOR SOYBEAN		01
16	0511052024	FAST CLOSING SET		01
17	0503033672	NOZZLE WITHOUT TITANIUM		01

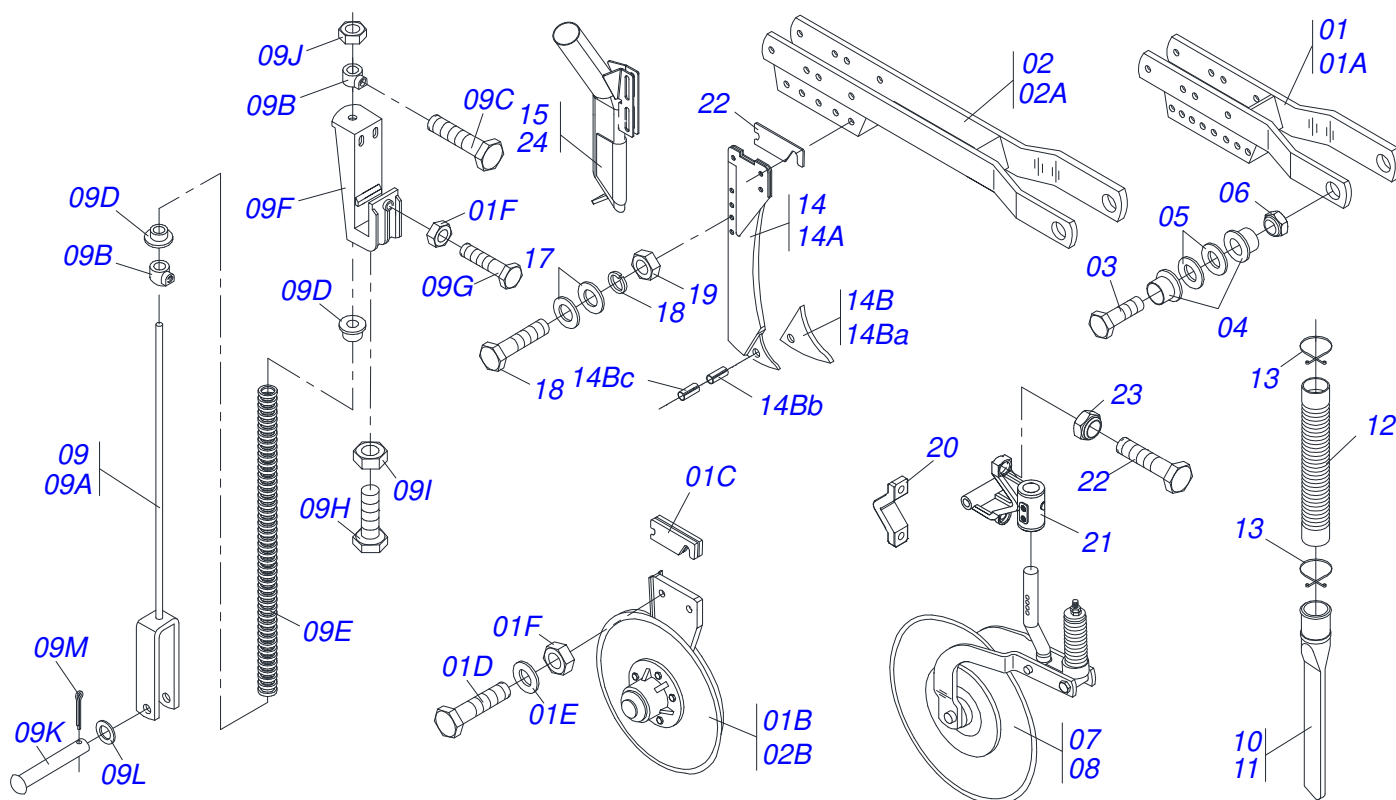


Item	Code	Description	See page	CT LG
00	0501058190	LH SHORT FERT. ROW W/DDD ASSY	01	00
00A	0501058191	RH LONG FERT. ROW W/DDD ASSY	00	01
01	0501058185	LH FERTILIZER W/DDD ROW ARM	01	00
01A	0511064230	SHORT FERTILIZER ROW ARM	01	00
01B	0501052977	DDD LEFT FERTILIZER 15 X 15 ASSY	01	00
01C	0511018662	SPACING PLATE	04	04
01D	0503010547	1/2" X 4" BOLT	02	02
01E	0503011440	SPRING WASHER	02	02
01F	0503010060	1/2" NUT	04	04
02	0501058186	RH FERTILIZER W/DDD LONG ROW ARM	00	01
02A	0511064232	LONG FERTILIZER ROW ARM	00	01
02B	0501052976	15 X 15 RIGHT FERT UNAL DOUB-DISC ASSY	00	01
03	0501010066	3/4" X 9" BOLT	01	01
04	0521017831	SUPPORT SLEEVE SPACER	02	02
05	0511017232	FLAT WASHER	02	02
06	0503011255	3/4" LOCK NUT	01	01
07	0511044549	18" COULTER BLADE ASSY FOR SHORT ROW	01	00
08	0511044573	18" COULTER BLADE ASSY FOR LONG ROW	00	01
09	0501058423	FERTILIZER ROD SPRING ROW	01	01
09A	0511069645	FERTILIZER SPRING ROD	01	01
09B	0502040534	SPRING GUIDE BUSHING LOCK	02	02
09C	0501018535	1/2 X 1 BOLT	02	02
09D	0502012184	FERTILIZER SPRING GUIDE	02	02
09E	0503031910	1.7" X 22.8" X 0.3" SPRING	01	01
09F	0502012510	SPRING ROD SUPPORT	01	01
09G	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN	01	01
09H	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN	01	01
09I	0502010891	SPRING CHOCK SUPPORT VARON	01	01
09J	0503010014	3/4" NUT	01	01
09K	0561014471	COUPLING SHAFT	01	01
09L	0511017302	FLAT WASHER	01	01

Item	Code	Description	See page	CT LG
09M	0503010257	1/8" X 1" COTTERPIN		01 01
10	0503030391	RIGHT FERTILIZER NOZZLE		01 00
11	0503030392	LEFT FERTILIZER NOZZLE		00 01
12	0503031145	2" X 2" X 20" HOSE		01 01
13	0503031076	2" HOSE CLAMP		02 02
14	0501110231	SCARIFIER HEAD WITH SPIKE 0061		01 01
14A	0511061768	FERTILIZER SCARIFIER SPINDLE		01 01
14B	0501056132	POINT SUBSOILER		01 01
14Ba	0502070061	POINT SUBSOILER		01 01
14Bb	0503010585	0,24" X 1.18" SPRING PIN		01 01
14Bc	0503011373	0.4" X 1.1" SPRING PIN		01 01
15	0511061769	RIGHT FERTILIZER CONDUCTOR WITH REGULATOR		00 01
16	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02 02
17	0501010984	FLAT WASHER		04 04
18	0503010025	3/8" SPRING WASHER		02 02
19	0503010026	3/8" NUT		02 02
20	0502010175	HITCH CLAMP		01 01
21	0502011567	FERTILIZER ROW SUPPORT		01 01
22	0511017969	0.1" SPACING PLATE		02 02
23	0503012412	5/8 UNC SELF LOCKING NUT		02 02
24	0511061770	LEFT CONDUCTOR FERTILIZER WITH REGULATOR		02 02
25	0501011543	5/8" X 4" BOLT		02 02

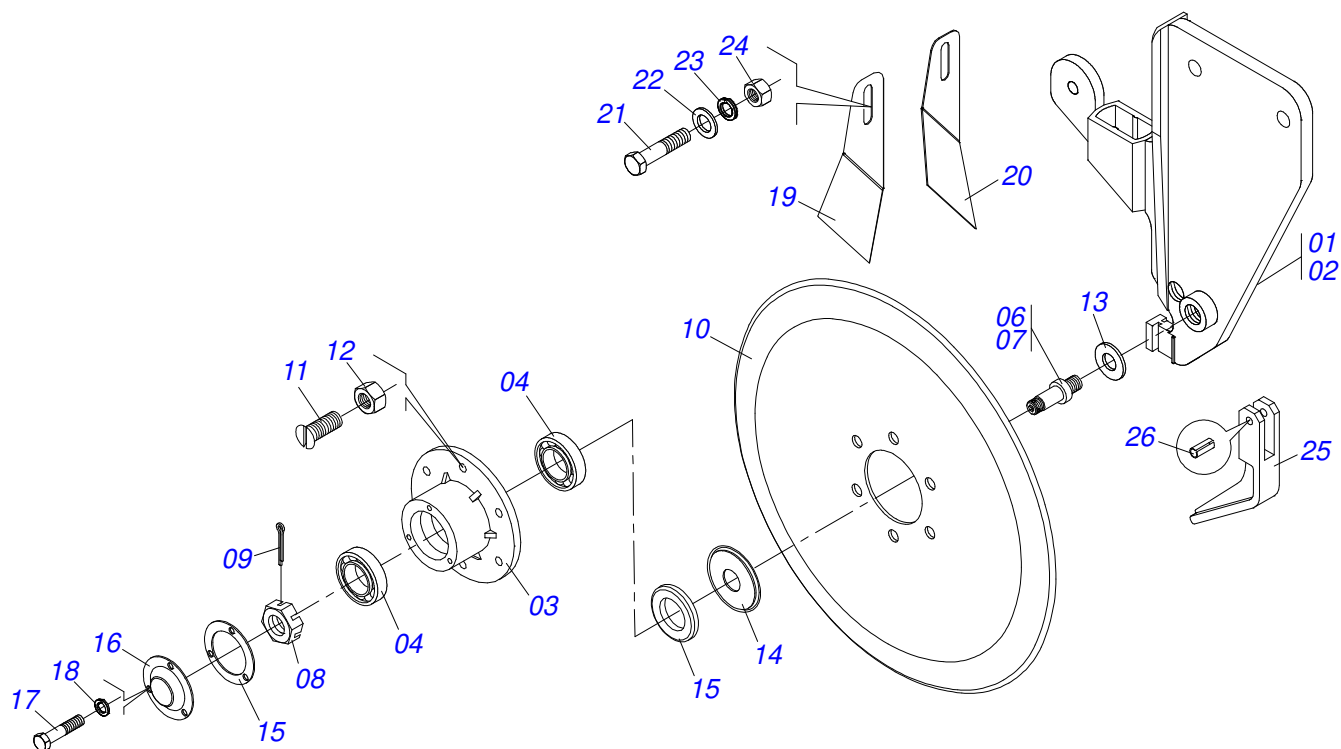


Item	Code	Description	See page	DIR	ESQ
00	0501052976	15 X 15 RIGHT FERT UNAL DOUB-DISC ASSY		01	00
00A	0501052977	DDD LEFT FERTILIZER 15 X 15 ASSY		00	01
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01	00
02	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		00	01
03	0502011930	DOUBLE DISC COULTER BOX		02	02
04	0503010598	30204 BALL BEARING		04	04
05	0503011112	SEAL 02376-BRG		02	02
06	0521019154	RIGHT DOUB DISC HUB		01	01
07	0521019148	LEFT DOUBLE DISC HUB		01	01
08	0503030282	3/4" CASTLE NUT		02	02
09	0503010257	1/8" X 1" COTTERPIN		02	02
10	0603022042	13" X 0.12" PLAIN COULTER BLADE		02	02
11	0503010546	5/16" X 7/8" BOLT		12	12
12	0503010337	5/16" NUT		02	02
13	0511015098	FLAT WASHER		06	06
14	0511011927	DUST CLOAK		02	02
15	0503030757	2.9" X 2" X 0.02" JOINT		02	02
16	0521019178	COVER DEPTH		02	02
17	0503014729	1/4" UNF X 1/2" BOLT		06	06
18	0503011441	SPRING WASHER		06	06
19	0501017541	RIGHT DOUBLE DISC SCRAPER		01	01
20	0501017542	LH DOUBLE DISC SCRAPER		01	01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01	01
22	0501010984	FLAT WASHER		02	02
23	0503011443	3/8" SPRING WASHER		01	01
24	0503010026	3/8" NUT		01	01
25	0502070062	SCRAPER		01	01
26	0503011402	0.2" X 0.8" SPRING PIN		01	01

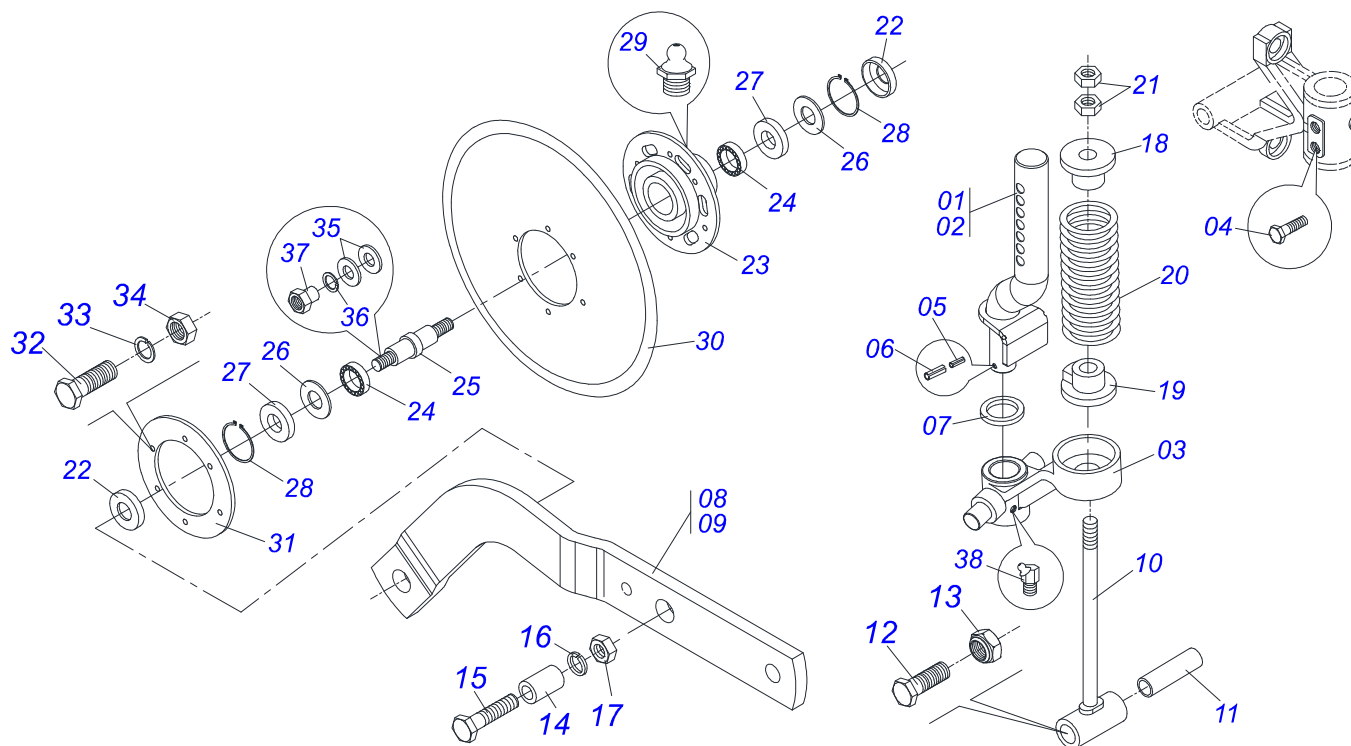

Item	Code	Description	See page	CT LG
00	0511044549	18" COULTER BLADE ASSY FOR SHORT ROW		01 00
00A	0511044573	18" COULTER BLADE ASSY FOR LONG ROW		00 01
01	0511067045	SHORT WHIT BEATER BLADE DISC FIX AXLE		01 00
02	0511067044	LONG WHIT BEATER BLADE DISC FIX AXLE		00 01
03	0502012368	BLADE DISC SUPPORT AXLE		01 01
04	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02 02
05	0503010756	0.2" X 2.4" SPRING PIN		01 01
06	0503010361	SPRING PIN		01 01
07	0541018684	FLAT WASHER		01 01
08	0521014137	RIGHT ARM OF THE BLADE DISC		01 01
09	0521014138	SUPPORT ARM LEFT BALDE DISC		01 01
10	0501067323	SPRING REGULATOR		01 01
11	0521010452	SLEEVE		01 01
12	0503013185	3/4" X 5-1/2" BOLT		01 01
13	0503011255	3/4" LOCK NUT		01 01
14	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01 01
15	0503011411	1/2" X 5-1/2" BOLT		01 01
16	0503011440	SPRING WASHER		01 01
17	0503010060	1/2" NUT		01 01
18	0502020393	SPRING UPPER SUPPORT		01 01
19	0502020394	SPRING SUPPORT		01 01
20	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01 01
21	0503010014	3/4" NUT		02 02
22	0521015376	DUST CLOAK		02 02
23	0502011562	DC BOX		01 01
24	0503010276	6206 BALL BEARING		02 02
25	0521013610	BLADE DISC HUB AXLE		01 01
26	0503030832	FLAT WASHER		02 02
27	0503012417	SEAL		02 02
28	0503011800	SEAL RING		02 02
29	0503010691	1/4" GREASE FITTING		01 01

Item	Code	Description	See page	CT LG
30	0603026013	PLAIN COULTER BLADE		01 01
31	0502020641	BLADE DISC FLANGE		01 01
32	0503010371	5/16" X 1" BOLT		06 06
33	0503011444	SPRING WASHER		06 06
34	0503010337	5/16" NUT		06 06
35	0511015346	FLAT WASHER		02 02
36	0503011442	3/4" SPRING WASHER		02 02
37	0521013510	3/4" NUT		02 02
38	0503010003	1845 GREASE FITTING		01 01

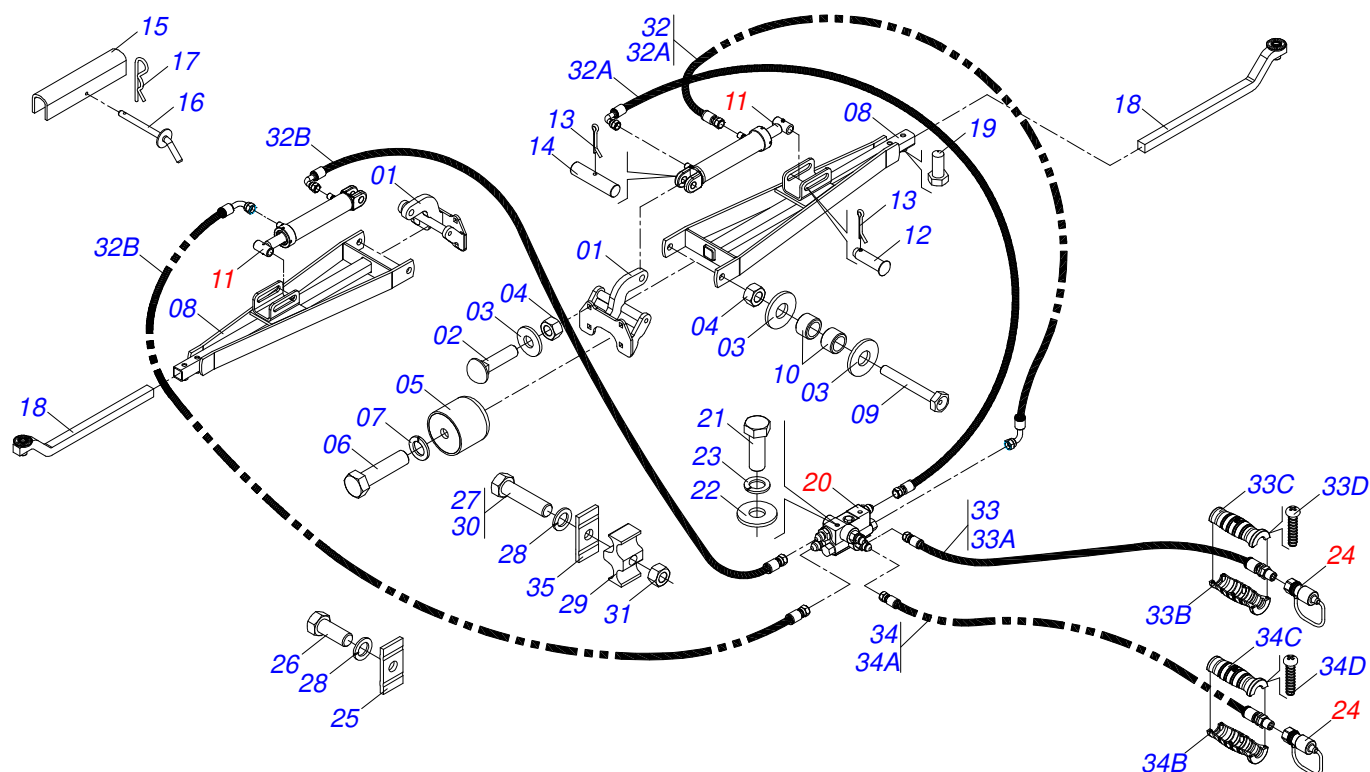


Item	Code	Description	See page	QT
01	0511069622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
03	0501012140	FLAT WASHER		12
04	0503012412	5/8 UNC SELF LOCKING NUT		10
05	0503011070	BEATER		02
06	0503010920	1/2" X 1.1/2" BOLT		02
07	0503010019	1/2" SPRING WASHER		02
08	0511061811	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0511058449	HYDRAULIC CYLINDER	67	02
12	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
13	0503010523	1/4" X 2" COTTERPIN		04
14	0511015779	1" X 4.2" AXLE		02
15	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
16	0501068994	0.3" X 3.1" LOCK PIN		02
17	0503030168	HAIR PIN		02
18	0501066949	1235 TURNBUCKLE		02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
20	0501054649	SEQUENTIAL VALVE ASSY	68	01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
22	0501010984	FLAT WASHER		02
23	0503010025	3/8" SPRING WASHER		02
24	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
25	0531011180	UPPER BODY CLIP		10
26	0503011102	BOLT 7/16 UNC X 1.1/4 C S G.5 ZN		04
27	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
28	0503010180	7/16" SPRING WASHER		10
29	0502012702	BODY SUPPORT CLAMP		10
30	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
31	0503010244	7/16" NUT		04

SEMI MOUNTED HYDRAULIC MARKER 5750/5850


0511059289

Item	Code	Description	See page	QT
32	0511059235	HYDRAULIC MARKER HAND SET		01
32A	0501081046	3/8" X 161.4" TC-TM HOSE ASSY		02
32B	0501081967	TR-TC HOSE ASSY		02
33	0521052277	HOSE 3/8 X 4212 TC-TM PURPLE / RED		01
33A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
33B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
33C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
33D	0503018952	PLASTIC BOLT		06
34	0521052278	HOSE 3/8 X 4212 TC-TM PURPLE / BLUE		01
34A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
34C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
34D	0503018952	PLASTIC BOLT		06

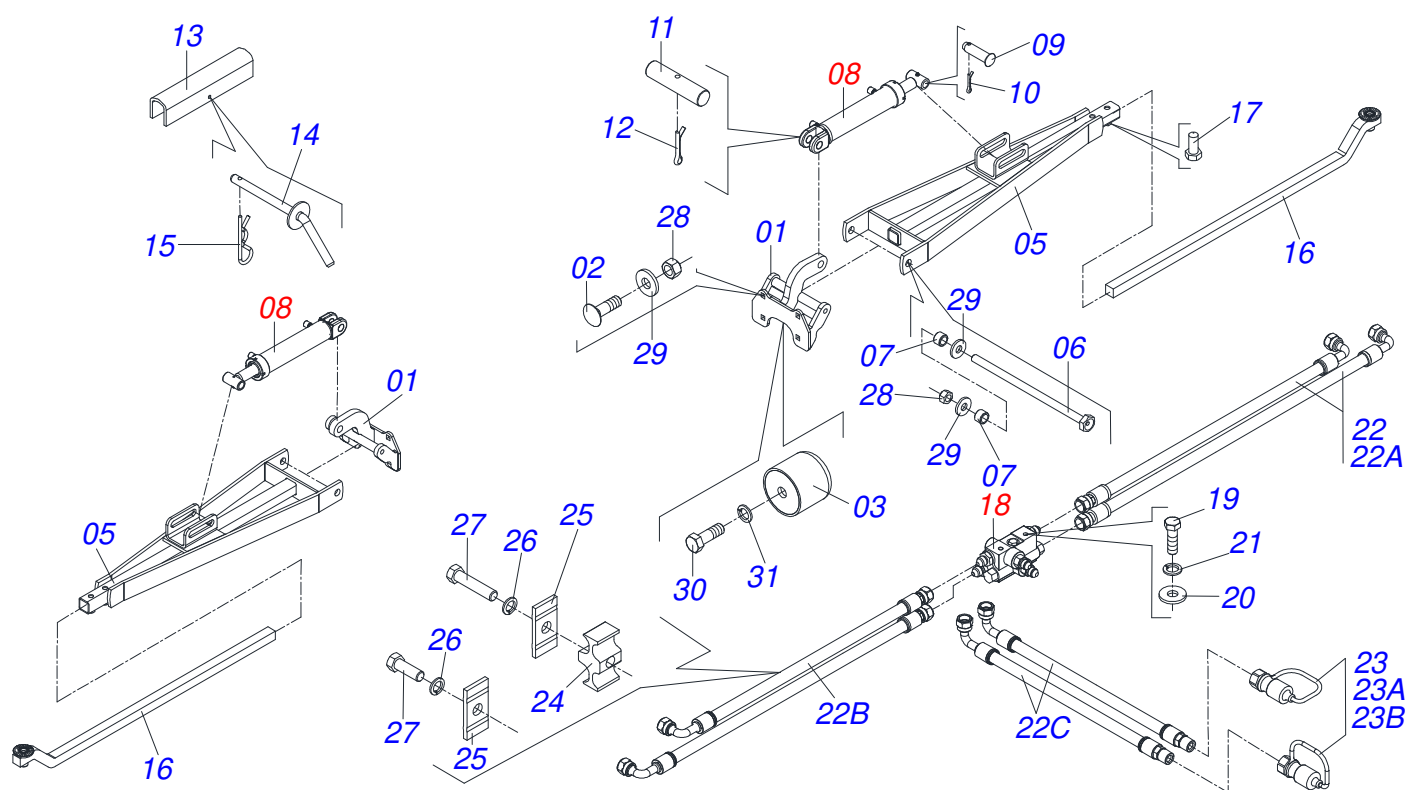

Item	Code	Description	See page	QT
001	0511069622	ROW MARKER ARM SUPPORT		02
002	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
003	0503011070	BEATER		02
004	0503011336	1/2" HEX SELF ADJUSTING NUT		02
005	0511061811	ROW MARKER ARM		02
006	0521061655	BOLT 5/8 UNC X 320 MM		02
007	0521010479	SLEEVE ARTICULATION		04
008	0511058449	HYDRAULIC CYLINDER	67	02
009	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
010	0503010523	1/4" X 2" COTTERPIN		02
011	0511015779	1" X 4.2" AXLE		02
012	0503010523	1/4" X 2" COTTERPIN		02
013	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
014	0501068994	0.3" X 3.1" LOCK PIN		02
015	0503030168	HAIR PIN		02
016	0501066949	1235 TURNBUCKLE		02
017	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
018	0501054649	SEQUENTIAL VALVE ASSY	68	01
019	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
020	0501010984	FLAT WASHER		02
021	0503010025	3/8" SPRING WASHER		02
022	0511057094	HYDRAULIC HOSE MARKER ASSY 6450		01
022A	0501081804	HOSE ASSY		02
022B	0501081093	3/8" X 188.9" TR-TC HOSE ASSY		02
022C	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
023	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
023A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
023B	0503011882	MALE QUICK COUPLER CAP		01
024	0502012702	BODY SUPPORT CLAMP		02
025	0531011180	UPPER BODY CLIP		08
026	0503010180	7/16" SPRING WASHER		02

Item	Code	Description	See page	QT
027	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
028	0503012412	5/8 UNC SELF LOCKING NUT		08
029	0501012140	FLAT WASHER		04
030	0503010920	1/2" X 1.1/2" BOLT		02
031	0503010019	1/2" SPRING WASHER		02

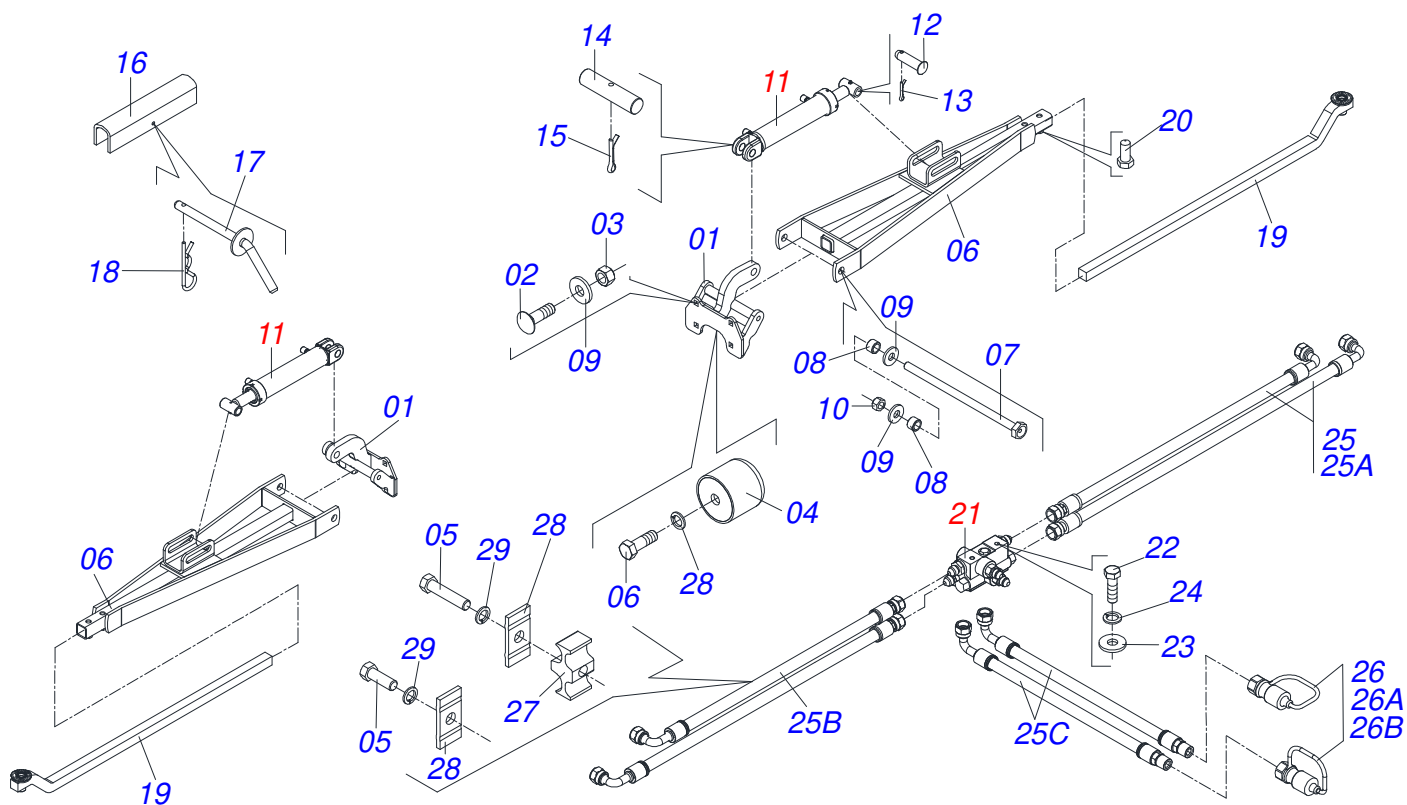


Item	Code	Description	See page	QT
001	0511069622	ROW MARKER ARM SUPPORT		02
002	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
003	0503012412	5/8 UNC SELF LOCKING NUT		08
004	0503011070	BEATER		02
005	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
006	0511061811	ROW MARKER ARM		02
007	0521061655	BOLT 5/8 UNC X 320 MM		02
008	0521010479	SLEEVE ARTICULATION		04
009	0501012140	FLAT WASHER		04
010	0503012412	5/8 UNC SELF LOCKING NUT		02
011	0511058449	HYDRAULIC CYLINDER	67	02
012	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
013	0503010523	1/4" X 2" COTTERPIN		02
014	0511015779	1" X 4.2" AXLE		02
015	0503010523	1/4" X 2" COTTERPIN		02
016	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
017	0501068994	0.3" X 3.1" LOCK PIN		02
018	0503030168	HAIR PIN		02
019	0501066949	1235 TURNBUCKLE		02
020	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
021	0501054649	SEQUENTIAL VALVE ASSY	68	01
022	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
023	0501010984	FLAT WASHER		02
024	0503010025	3/8" SPRING WASHER		02
025	0511057093	HYDRAULIC MARKER HYGIENE SET		01
025A	0501080388	3/8 X 4300 TR-TC HOSE ASSY		02
025B	0501081791	HOSE ASSY		02
025C	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
026	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
026A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
026B	0503011882	MALE QUICK COUPLER CAP		01



PST TRIO
MARKER CYLINDER


Page 65
0511053056

Item	Code	Description	See page	QT
027	0502012702	BODY SUPPORT CLAMP		02
028	0531011180	UPPER BODY CLIP		08
029	0503010180	7/16" SPRING WASHER		02

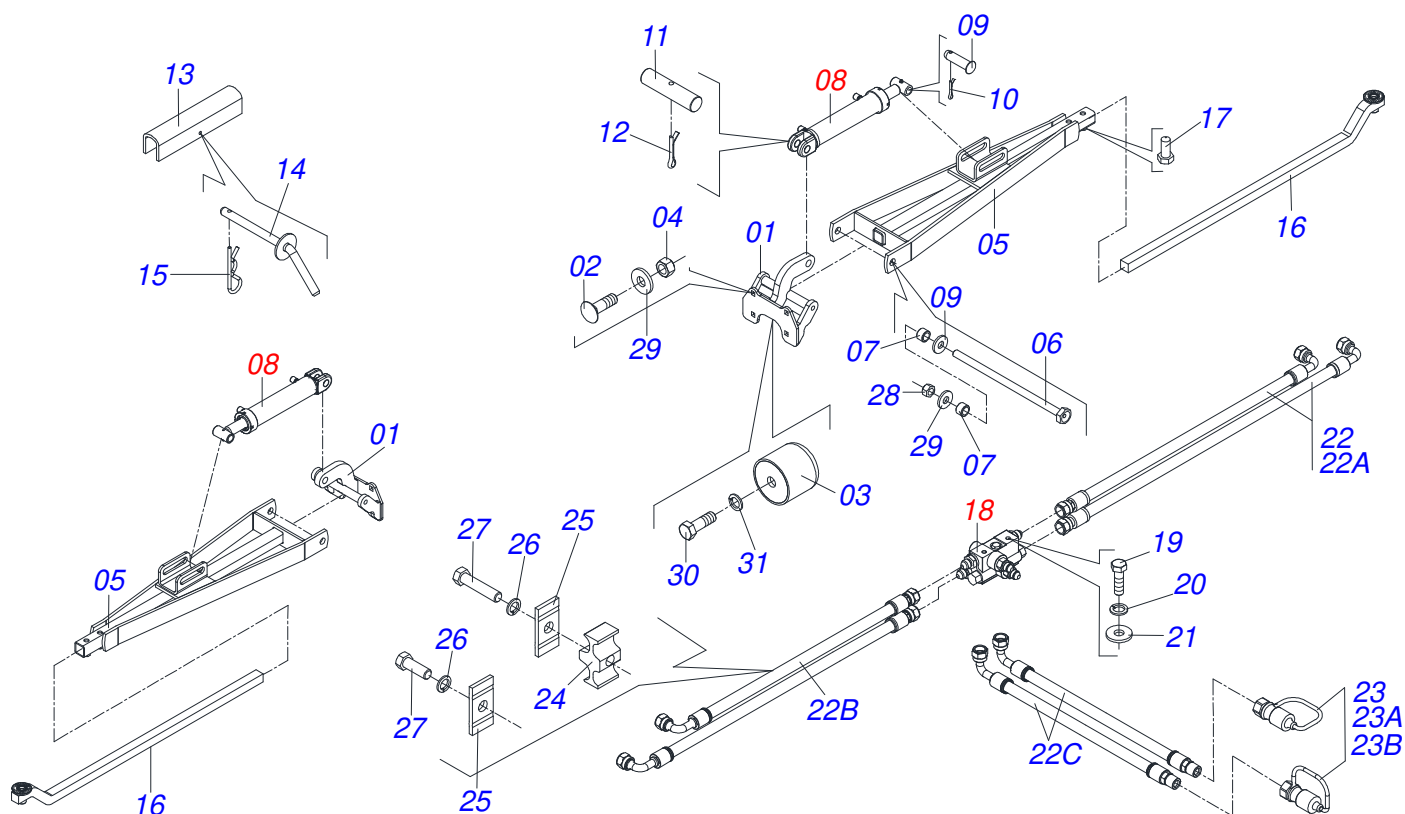


Item	Code	Description	See page	QT
001	0511069622	ROW MARKER ARM SUPPORT		02
002	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
003	0503011070	BEATER		02
004	0503012412	5/8 UNC SELF LOCKING NUT		02
005	0511061811	ROW MARKER ARM		02
006	0521061655	BOLT 5/8 UNC X 320 MM		02
007	0521010479	SLEEVE ARTICULATION		04
008	0511058449	HYDRAULIC CYLINDER	67	02
009	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
010	0503010523	1/4" X 2" COTTERPIN		02
011	0511015779	1" X 4.2" AXLE		02
012	0503010523	1/4" X 2" COTTERPIN		02
013	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
014	0501068994	0.3" X 3.1" LOCK PIN		02
015	0503030168	HAIR PIN		02
016	0501066949	1235 TURNBUCKLE		02
017	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
018	0501054649	SEQUENTIAL VALVE ASSY	68	01
019	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
020	0501010984	FLAT WASHER		02
021	0503010025	3/8" SPRING WASHER		02
022	0511057438	HYDRAULIC MARKER HYGIENE SET		01
022A	0501080394	HOSE TR-TC		02
022B	0501080725	3/8 X 5300 TR-TC HOSE ASSY		02
022C	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
023	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
023A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
023B	0503011882	MALE QUICK COUPLER CAP		01
024	0502012702	BODY SUPPORT CLAMP		02
025	0531011180	UPPER BODY CLIP		08
026	0503010180	7/16" SPRING WASHER		02


Item	Code	Description	See page	QT
027	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
028	0503012412	5/8 UNC SELF LOCKING NUT		08
029	0501012140	FLAT WASHER		04
030	0503010920	1/2" X 1.1/2" BOLT		02
031	0503010019	1/2" SPRING WASHER		02

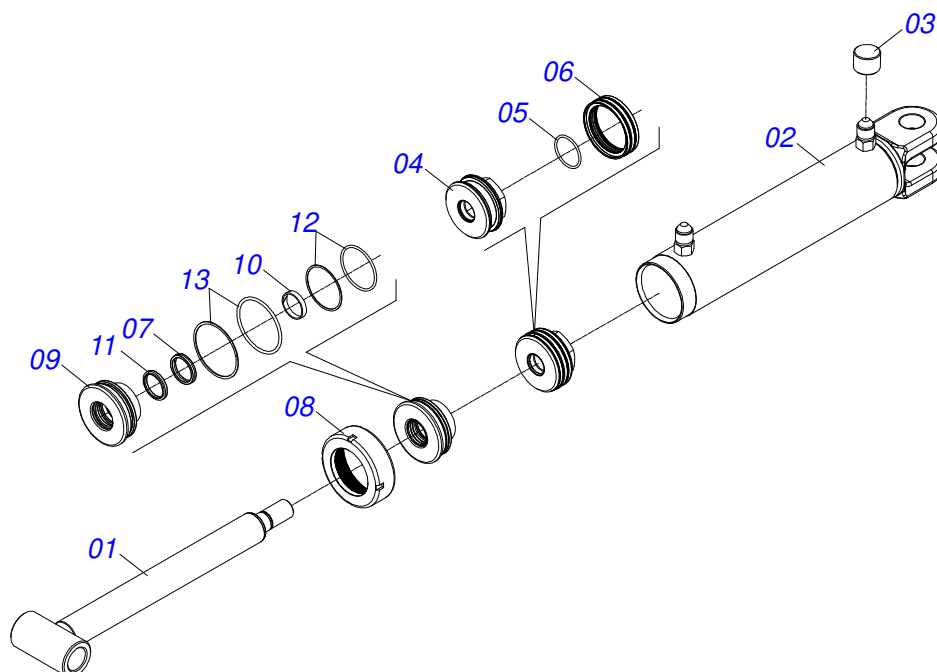


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02

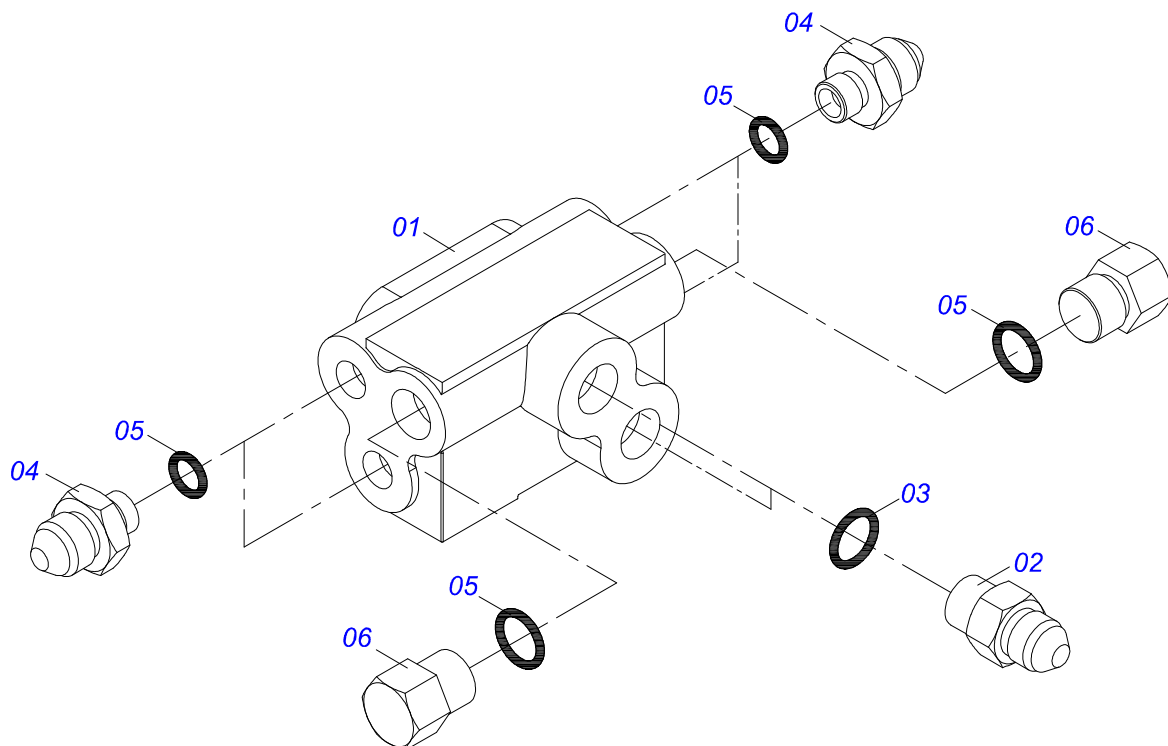


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

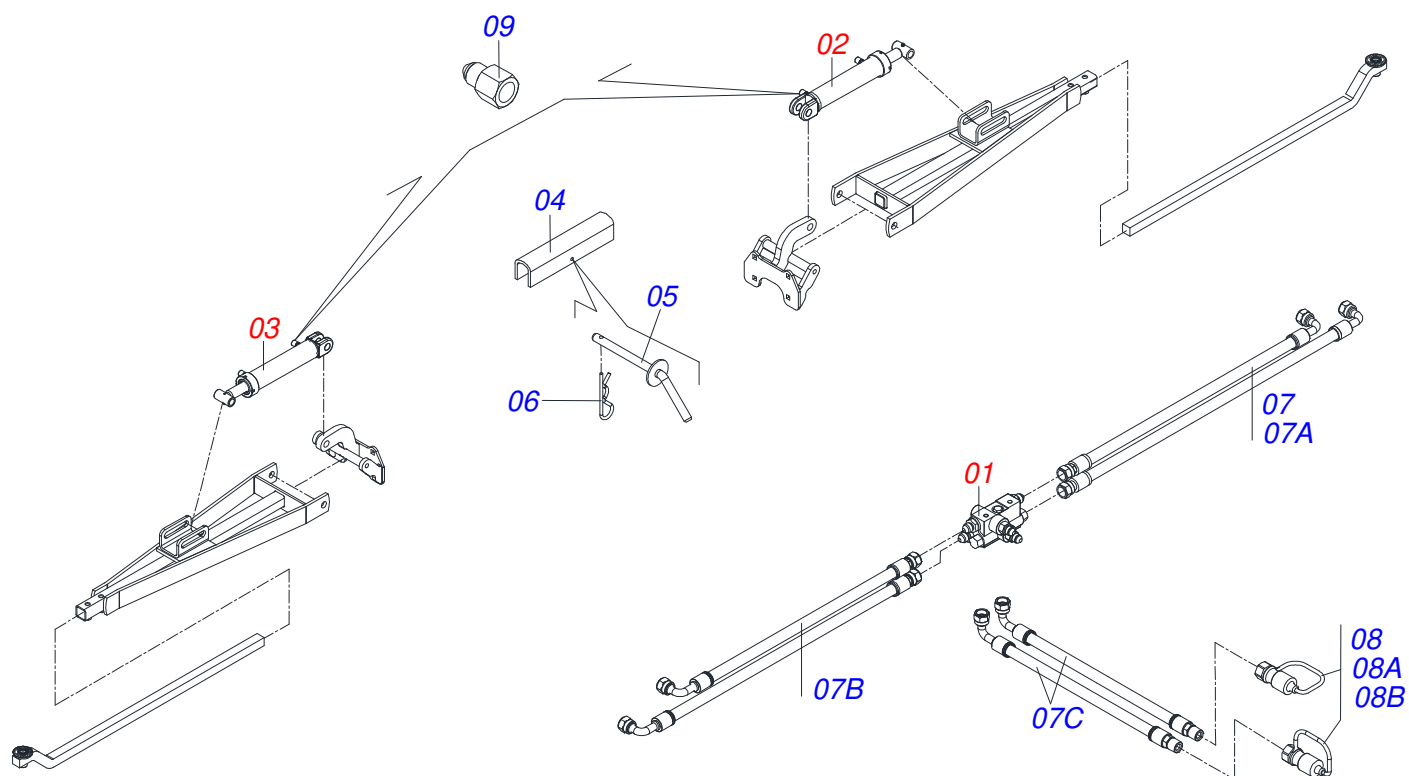


Item	Code	Description	See page	QT
001	0501054649	SEQUENTIAL VALVE ASSY	68	01
002	0511058431	HYDRAULIC CYLINDER	73	01
003	0511058431	HYDRAULIC CYLINDER	73	01
004	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
005	0501068994	0.3" X 3.1" LOCK PIN		02
006	0503030168	HAIR PIN		02
007	0511057890	17 E 500 HYDRAULIC MARKER HOSE ASSEMBLY		01
007A	0501080383	3/8" X 197" TC-TM HOSE		02
007B	0501081748	HOSE		02
007C	0501081981	HOSES		02
008	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
008A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
008B	0503011882	MALE QUICK COUPLER CAP		01
009	0511018012	HIDRAULIC ADAPTER		04

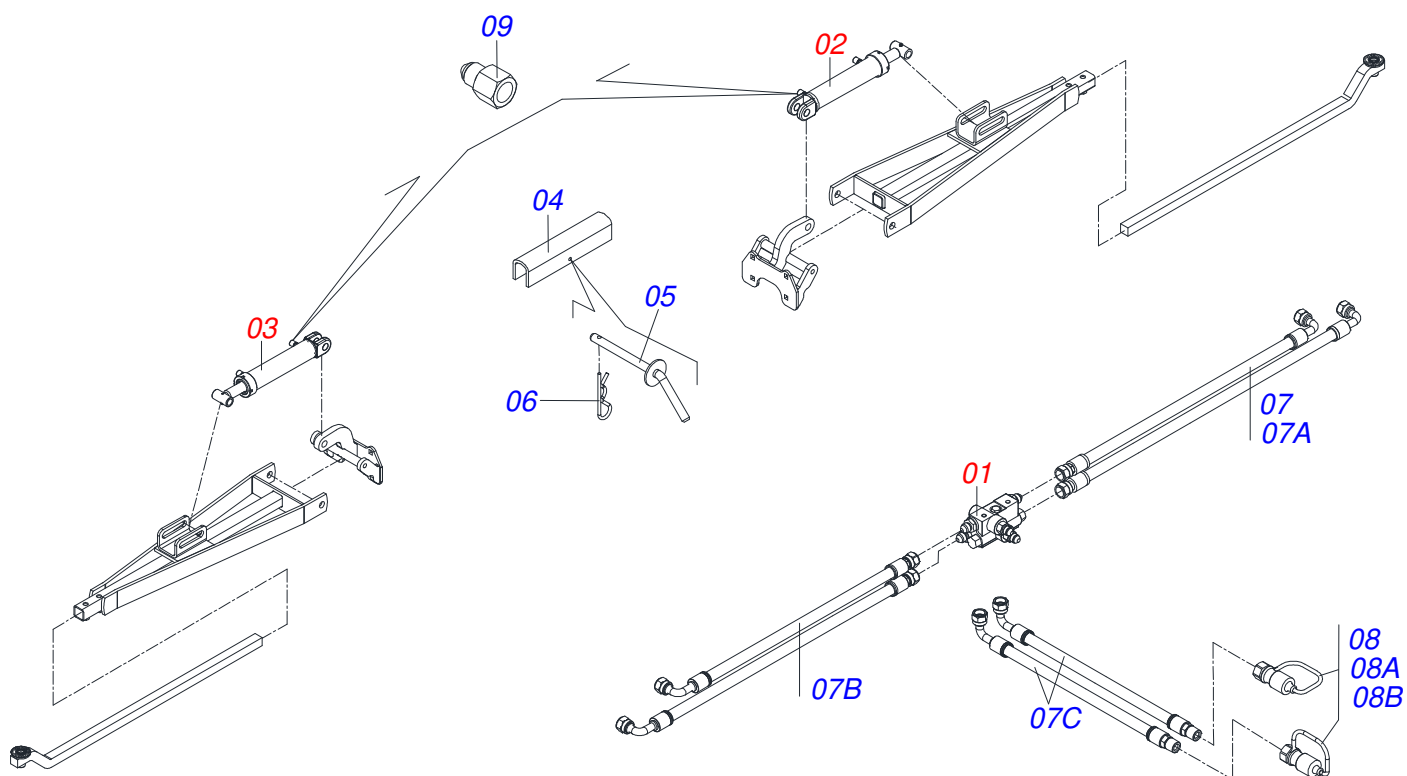


Item	Code	Description	See page	QT
001	0501054649	SEQUENTIAL VALVE ASSY	68	01
002	0511058431	HYDRAULIC CYLINDER	73	01
003	0511058431	HYDRAULIC CYLINDER	73	01
004	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
005	0501068994	0.3" X 3.1" LOCK PIN		02
006	0503030168	HAIR PIN		02
007	0511057739	HYDRAULIC MARKER HAND SET		01
007A	0501081980	HOSE 3/8 X 5200 TC-TM		02
007B	0501081981	HOSES		02
007C	0501081982	HOSE		02
008	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
008A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
008B	0503011882	MALE QUICK COUPLER CAP		01
009	0511018012	HIDRAULIC ADAPTER		04

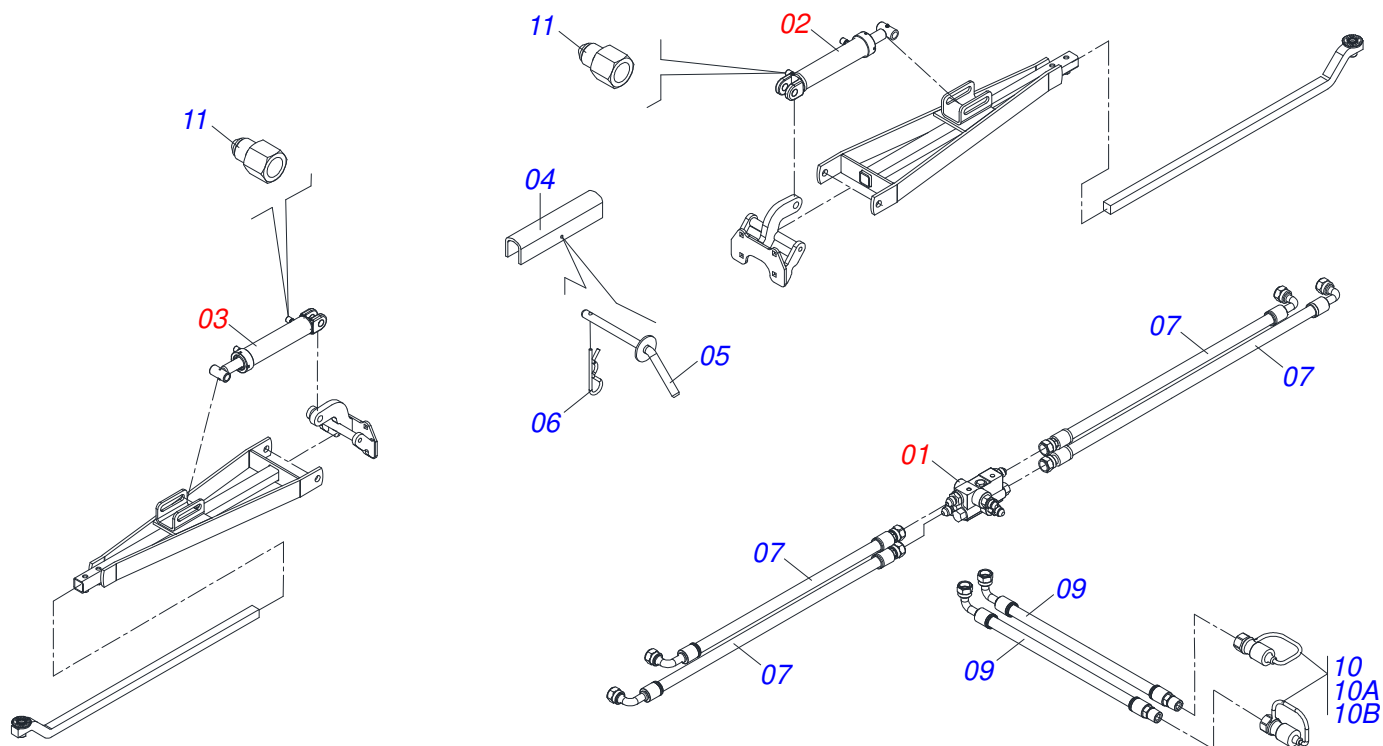


Item	Code	Description	See page	QT
001	0501054649	SEQUENTIAL VALVE ASSY	68	01
002	0511058431	HYDRAULIC CYLINDER	73	01
003	0511058431	HYDRAULIC CYLINDER	73	01
004	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
005	0501068994	0.3" X 3.1" LOCK PIN		02
006	0503030168	HAIR PIN		02
007	0501081980	HOSE 3/8 X 5200 TC-TM		02
008	0501081255	TR-TC HOSE ASSY		02
009	0501080744	3/8" X 248" TR-TC HOSE ASSY		02
010	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
010A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
010B	0503011882	MALE QUICK COUPLER CAP		01
011	0511018012	HIDRAULIC ADAPTER		04

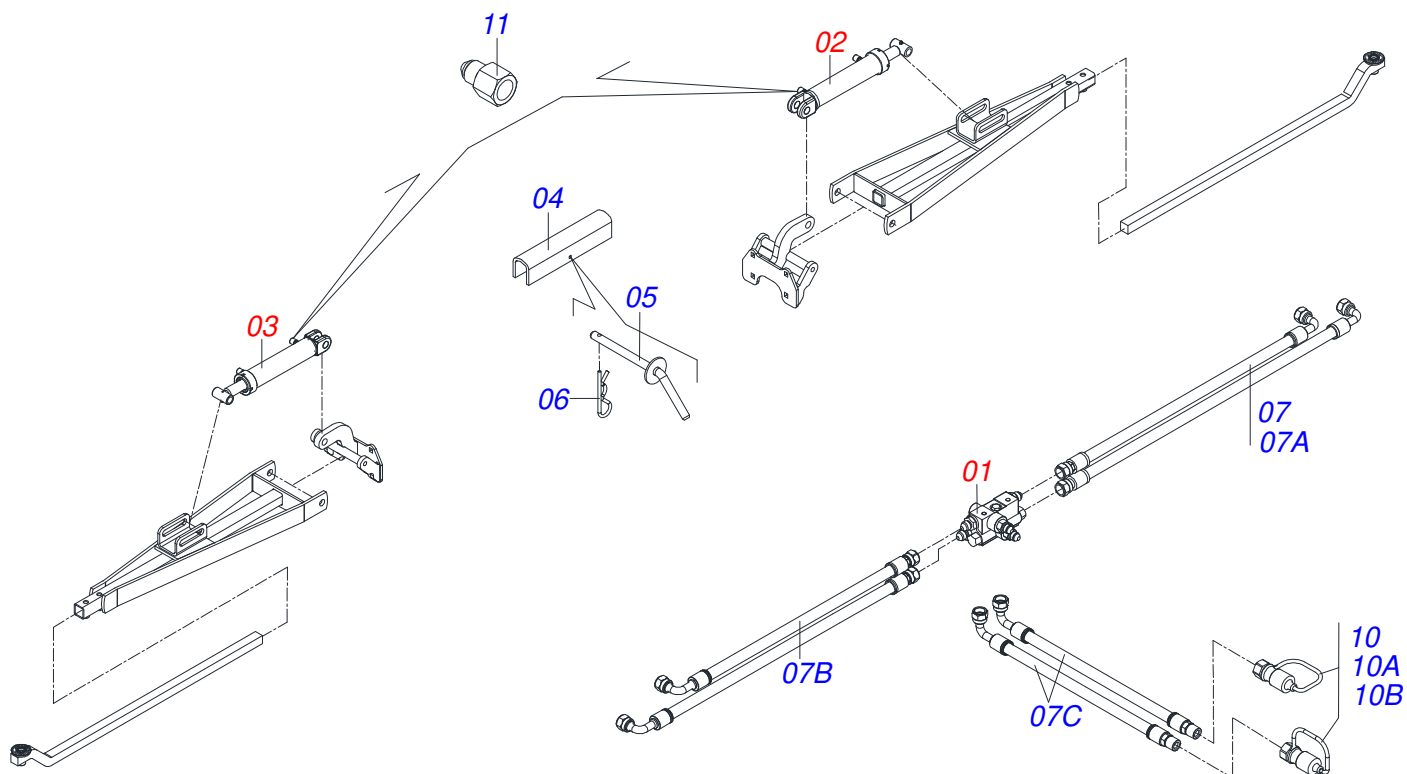


Item	Code	Description	See page	QT
001	0501054649	SEQUENTIAL VALVE ASSY	68	01
002	0511058431	HYDRAULIC CYLINDER	73	01
003	0511058431	HYDRAULIC CYLINDER	73	01
004	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
005	0501068994	0.3" X 3.1" LOCK PIN		02
006	0503030168	HAIR PIN		02
007	0511057526	HYDRAULIC MARKER HAND SET		01
007A	0501081980	HOSE 3/8 X 5200 TC-TM		02
007B	0501082034	HOSE		02
007C	0501082035	HOSE		02
008	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
008A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
008B	0503011882	MALE QUICK COUPLER CAP		01
009	0511018012	HIDRAULIC ADAPTER		04

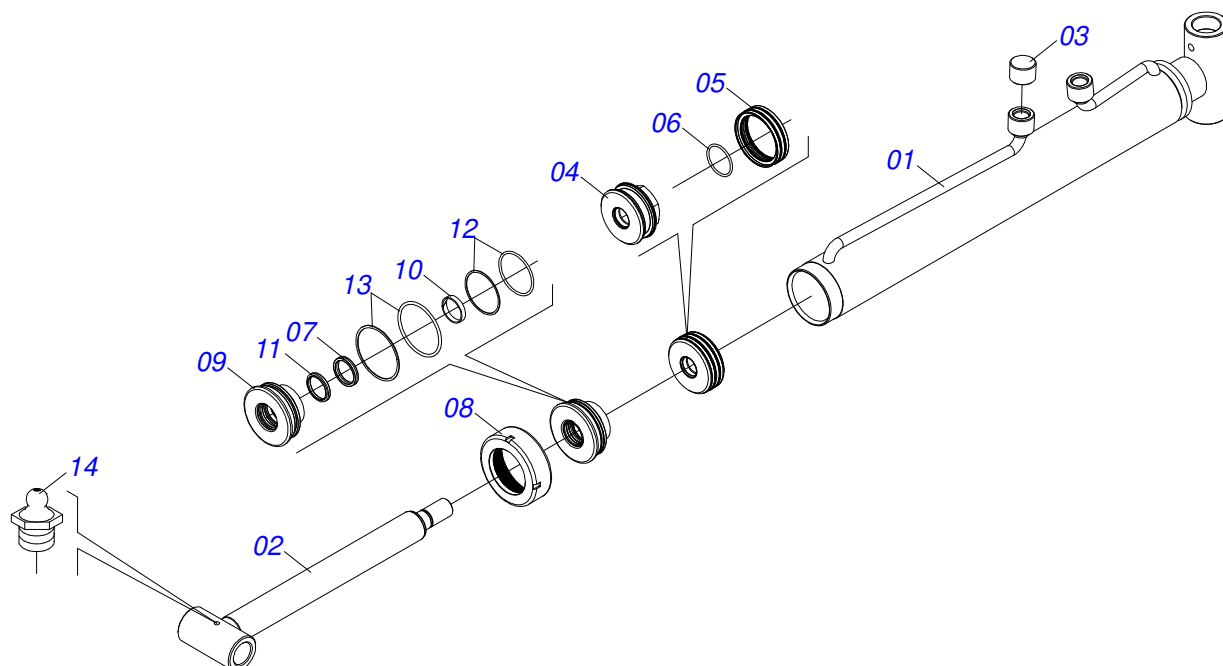


Item	Code	Description	See page	QT
01	0501067700	2.5" X 25" CYLINDER CASE		01
02	0521066632	EXTENDER		01
03	0503030384	CON PLUG N-001		02
04	0502012837	PISTON		01
05	0503018005	RING		01
06	0503011109	2-119 N 3006-9B O'RING		01
07	0503010163	D-1500 SCRAPER RING		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503018004	RING		01
11	0503018003	GASKET		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0503010002	1800 GREASE FITTING		02

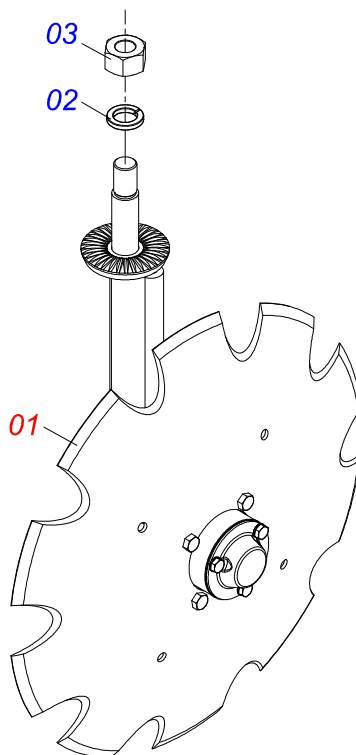


Item	Code	Description	See page	QT
01	0511053904	DISC LINE MARKER	75	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

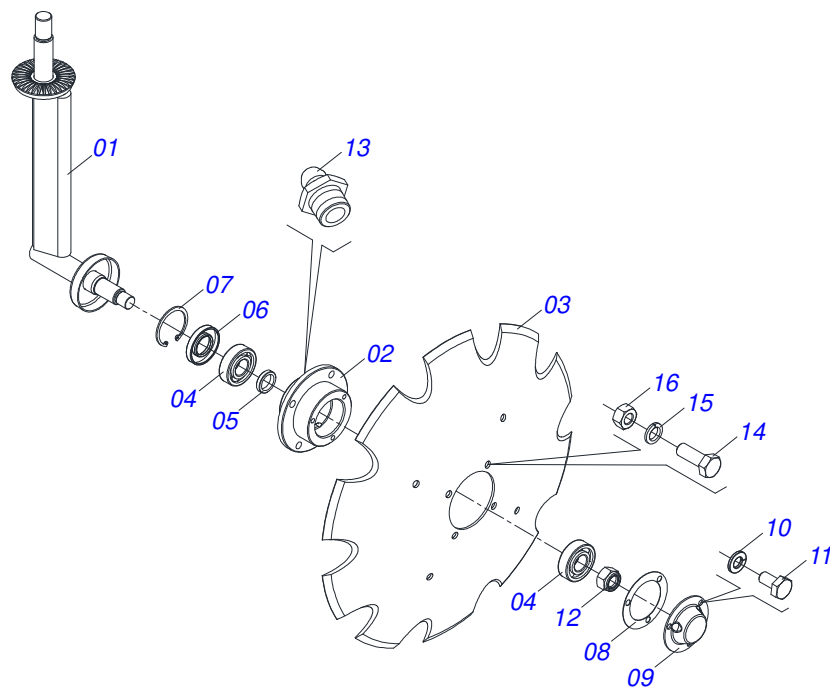

Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

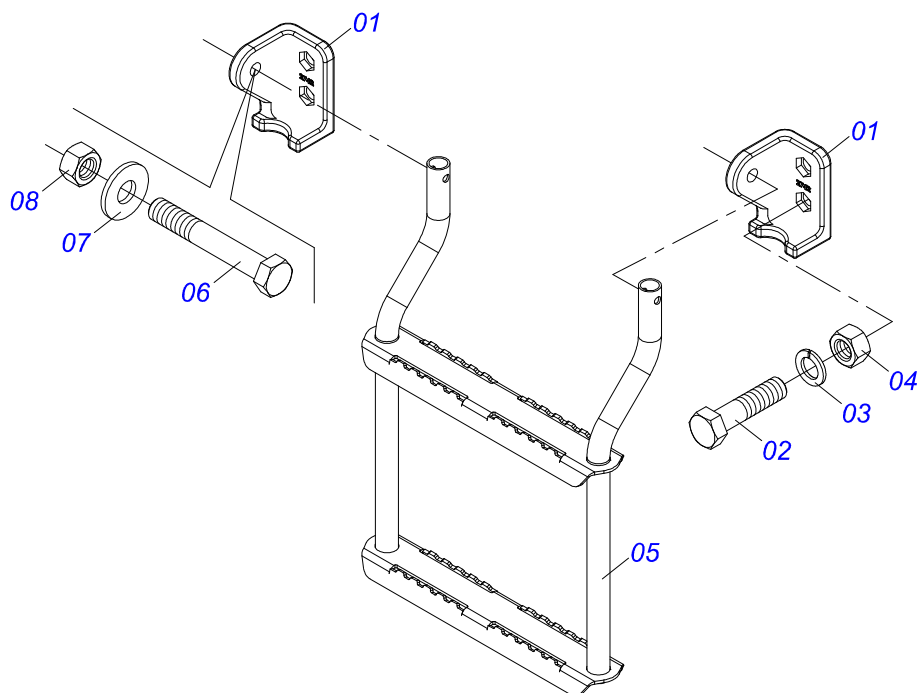


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8" SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	FLAT WASHER	02	
08	0503013357	3/8" SELF-ADJUSTING NUT	02	

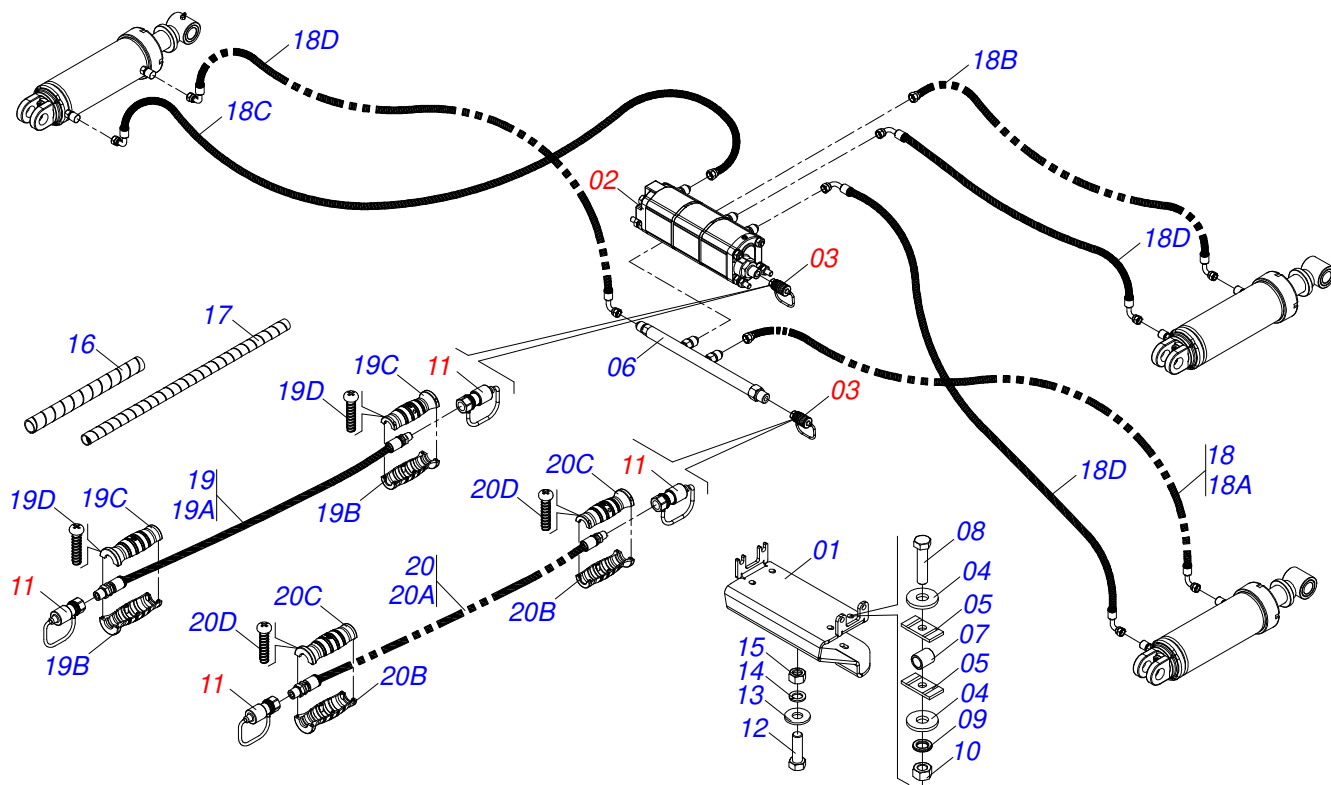


Item	Code	Description	See page	QT
01	0571013472	FIXER BODY VALVE		01
02	0511059290	VALVE ASSEMBLY	81	01
03	0501053835	FEMALE QUICK COUPLER		02
04	0501010984	FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		04
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8" SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		04
12	0503010920	1/2" X 1.1/2" BOLT		02
13	0511017302	FLAT WASHER		02
14	0503010019	1/2" SPRING WASHER		02
15	0503010060	1/2" NUT		02
16	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
17	0571017774	SPRING PROTECTION QUICK HOSE		01
18	0511059234	HOSE KIT SYSTEM HYDRAULIC		01
18A	0501080406	3/8" X 23" TR-TC HOSE		01
18B	0501080150	HOSE ASSY		01
18C	0501080451	3/8" X 94.5" TR-TC HOSE ASSY		01
18D	0501080370	TC-TC HOSE ASSY		03
19	0521052484	HOSE 1/2 X 4122 TM-TM BLACK / RED		01
19A	0501080881	HOSE		01
19B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
19C	0503034495	HYDRAULIC HOSE GRIP (RED)		02
19D	0503018952	PLASTIC BOLT		12
20	0521052485	HOSE 1/2 X 4122 TM-TM BLACK / BLUE		01
20A	0501080881	HOSE		01
20B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
20C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02




Item	Code	Description	See page	QT
20D	0503018952	PLASTIC BOLT		12

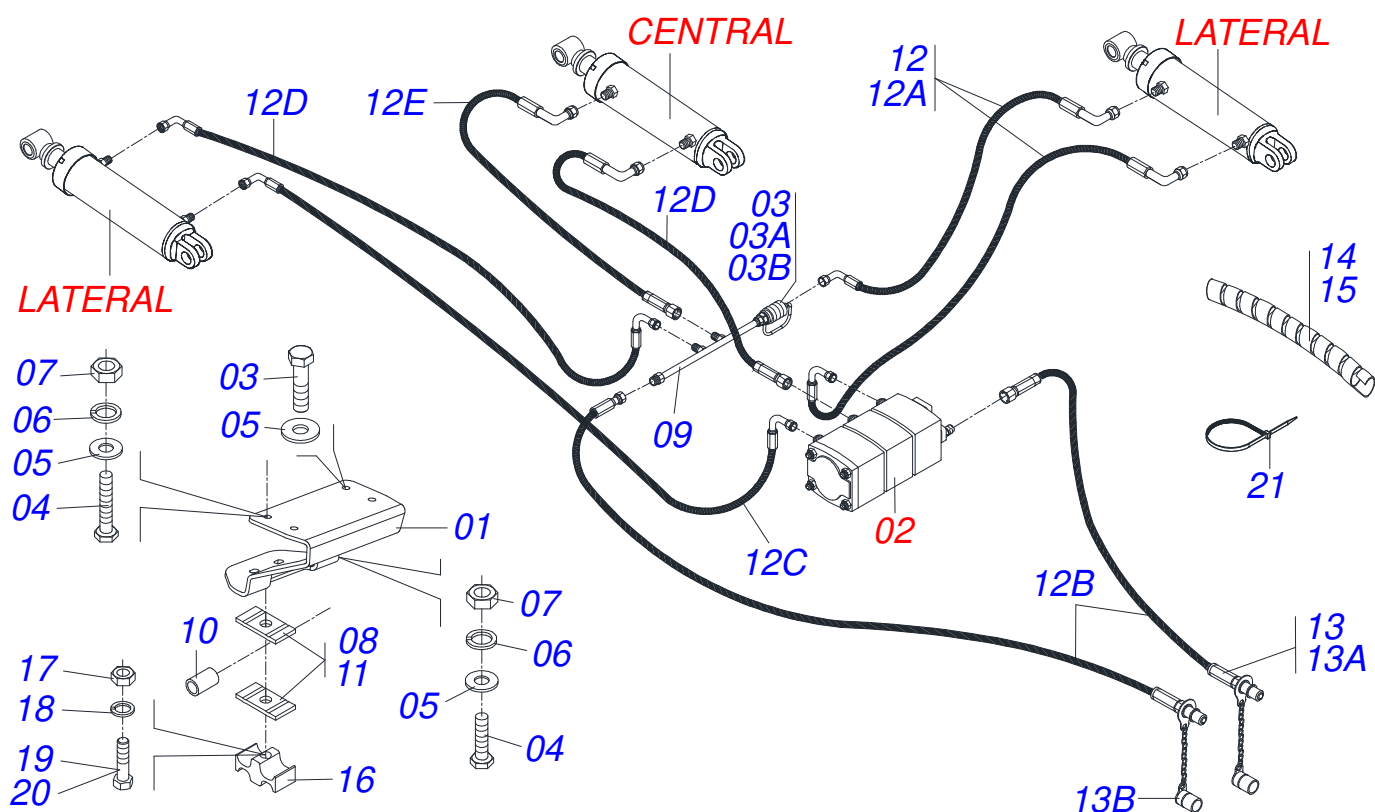


Item	Code	Description	See page	QT
001	0571013472	FIXER BODY VALVE		01
002	0511053065	FIXER VALVE	82	01
003	0503010237	3/8" X 1" BOLT		02
004	0503011179	3/8" X 2-1/4" BOLT		02
005	0501010984	FLAT WASHER		04
006	0503010025	3/8" SPRING WASHER		02
007	0503010026	3/8" NUT		02
008	0531011180	UPPER BODY CLIP		02
009	0521063909	DUCT SEAL OIL		01
010	0531013922	0.6" X 0.8" X 1" SLEEVE		02
011	0531011180	UPPER BODY CLIP		02
012	0511057092	HOSE KIT SYSTEM HYDRAULIC		01
012A	0501080406	3/8" X 23" TR-TC HOSE		01
012B	0501080150	HOSE ASSY		01
012C	0501081930	HOSE		01
012D	0501081646	TC-TC HOSE ASSY		03
012E	0501081073	HOSE 1/2 X 4200 TC-TM		02
013	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
013A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
013B	0503011882	MALE QUICK COUPLER CAP		01
014	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
015	0571017774	SPRING PROTECTION QUICK HOSE		01
016	0502012702	BODY SUPPORT CLAMP		12
017	0503010244	7/16" NUT		04
018	0503010180	7/16" SPRING WASHER		08
019	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
020	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
021	0503013100	NYLON CLAMP		02

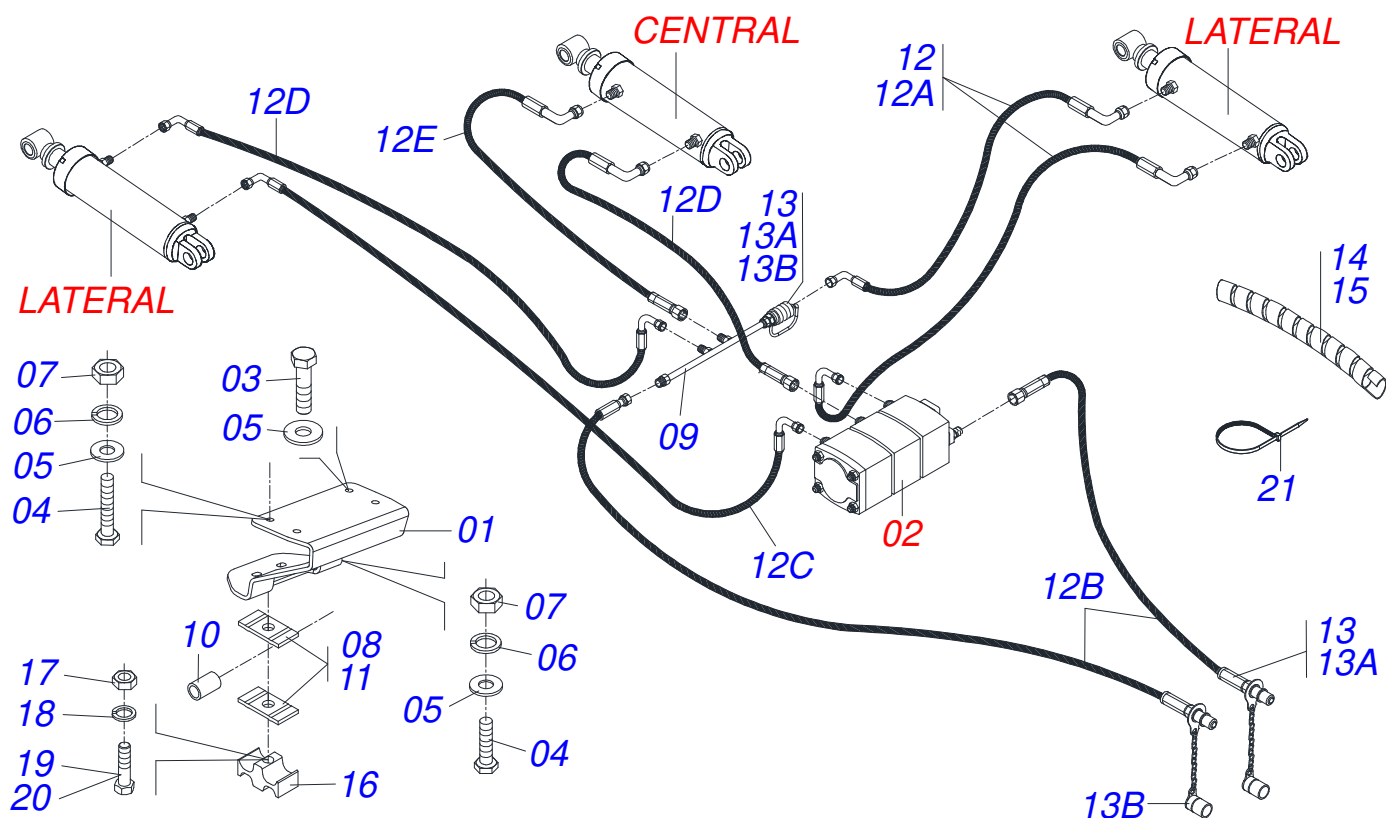


Item	Code	Description	See page	QT
001	0571013472	FIXER BODY VALVE		01
002	0511053065	FIXER VALVE	82	01
003	0503010371	5/16" X 1" BOLT		02
004	0503010421	5/16" X 1-1/2" BOLT		02
005	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
006	0503010179	5/16" ZN SPRING WASHER		04
007	0503010337	5/16" NUT		04
008	0502012701	LOWER BODY CLIP		02
009	0521063909	DUCT SEAL OIL		01
010	0531013922	0.6" X 0.8" X 1" SLEEVE		02
011	0531011180	UPPER BODY CLIP		02
012	0511057676	HOSE KIT SYSTEM HYDRAULIC		01
012A	0501080406	3/8" X 23" TR-TC HOSE		01
012B	0501080150	HOSE ASSY		01
012C	0501080392	3/8" X 3300 TR-TC HOSE		01
012D	0501080442	3/8" X 130" TC-TC HOSE ASSY		03
012E	0501081073	HOSE 1/2 X 4200 TC-TM		02
013	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
013A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
013B	0503011882	MALE QUICK COUPLER CAP		01
014	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
015	0571017774	SPRING PROTECTION QUICK HOSE		01
016	0502012702	BODY SUPPORT CLAMP		12
017	0503010244	7/16" NUT		04
018	0503010180	7/16" SPRING WASHER		08
019	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
020	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
021	0503013100	NYLON CLAMP		02

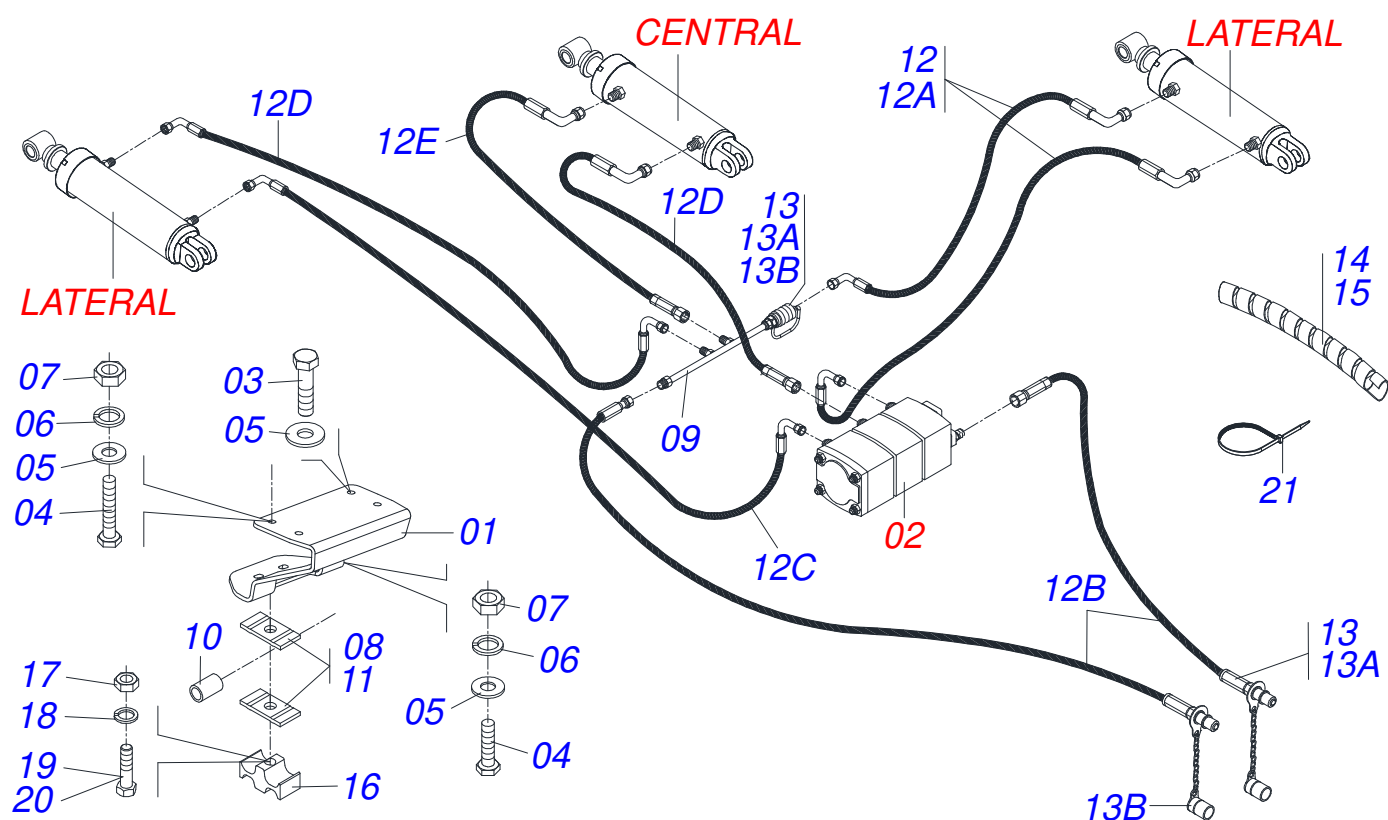


Item	Code	Description	See page	QT
001	0571013472	FIXER BODY VALVE		01
002	0511053065	FIXER VALVE	82	01
003	0503010237	3/8" X 1" BOLT		02
004	0503011179	3/8" X 2-1/4" BOLT		02
005	0501010984	FLAT WASHER		04
006	0503010025	3/8" SPRING WASHER		02
007	0503010026	3/8" NUT		02
008	0531011180	UPPER BODY CLIP		02
009	0521063909	DUCT SEAL OIL		01
010	0531013922	0.6" X 0.8" X 1" SLEEVE		02
011	0531011180	UPPER BODY CLIP		02
012	0511057083	HOSE KIT SYSTEM HYDRAULIC		01
012A	0501080406	3/8" X 23" TR-TC HOSE		01
012B	0501080150	HOSE ASSY		01
012C	0501080388	3/8 X 4300 TR-TC HOSE ASSY		01
012D	0501080757	HOSE 3/8 X 4300 TC-TC		03
012E	0501081922	HOSE		02
013	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
013A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
013B	0503011882	MALE QUICK COUPLER CAP		01
014	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
015	0571017774	SPRING PROTECTION QUICK HOSE		01
016	0502012702	BODY SUPPORT CLAMP		12
017	0503010244	7/16" NUT		04
018	0503010180	7/16" SPRING WASHER		08
019	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
020	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
021	0503013100	NYLON CLAMP		02

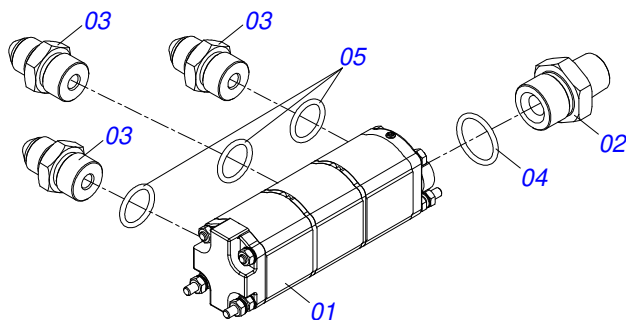


Item	Code	Description	See page	QT
01	0503016524	DIVIDER VALVE		01
02	0581011593	NIPPLE R.1.1/16 UN		01
03	0511010111	7/8" NIPPLE		03
04	0503011109	2-119 N 3006-9B O'RING		01
05	0503010045	O'RING		03

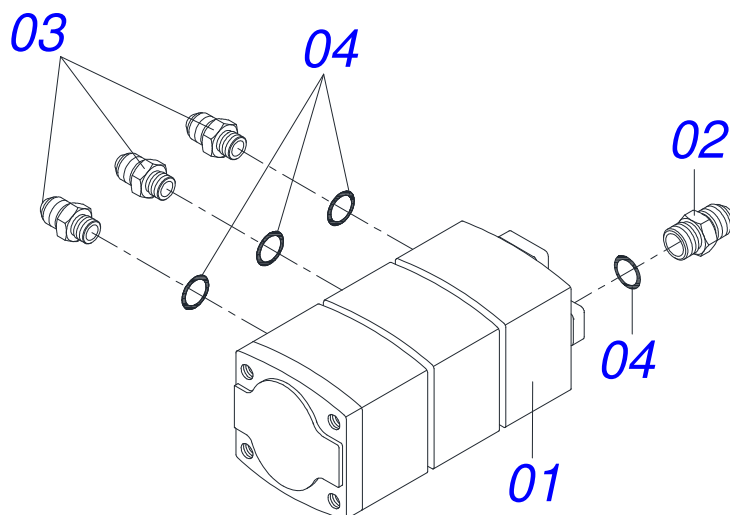


Item	Code	Description	See page	QT
00	0511053065	FIXER VALVE	82	01
01	0503016524	DIVIDER VALVE		01
02	0551012400	7/8" UNF NIPPLE		01
03	0501011460	7/8 NF REDUCTION NIPPLE		03
04	0503010190	2-114 N 3006-9B O'RING		04

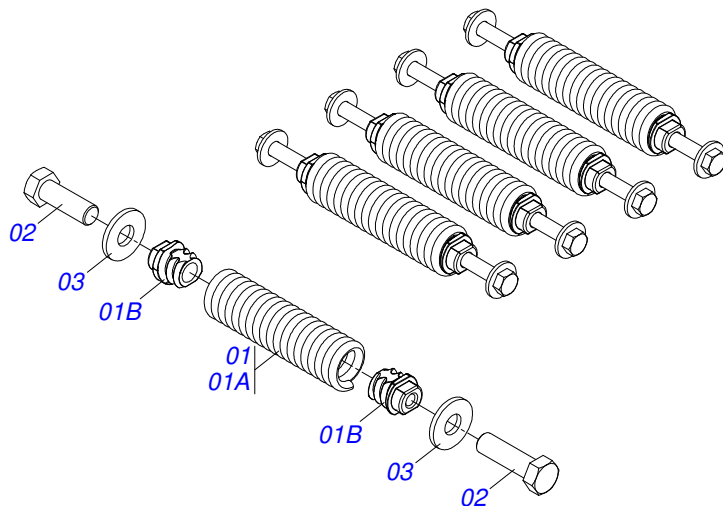


Item	Code	Description	See page	QT
01	0511050681	TRACTION SPRING		05
01A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
01B	0561016062	SPRING HITCH		02
02	0503013030	5/8" X 3.1/4" BOLT		10
03	0501012140	FLAT WASHER		10

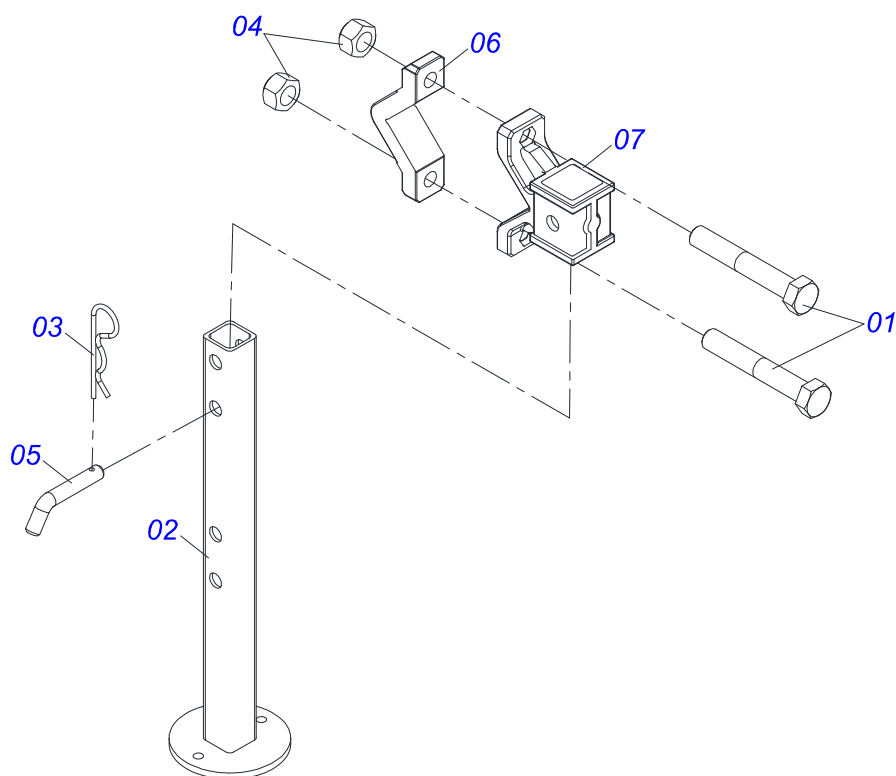


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

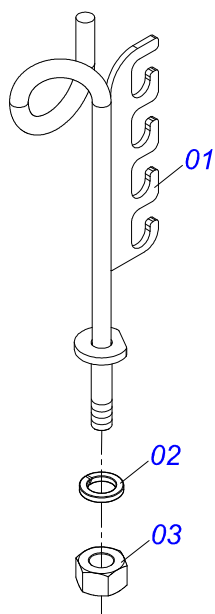


Item	Code	Description	See page	QT
01	0521065611	HOSE SUPPORT		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

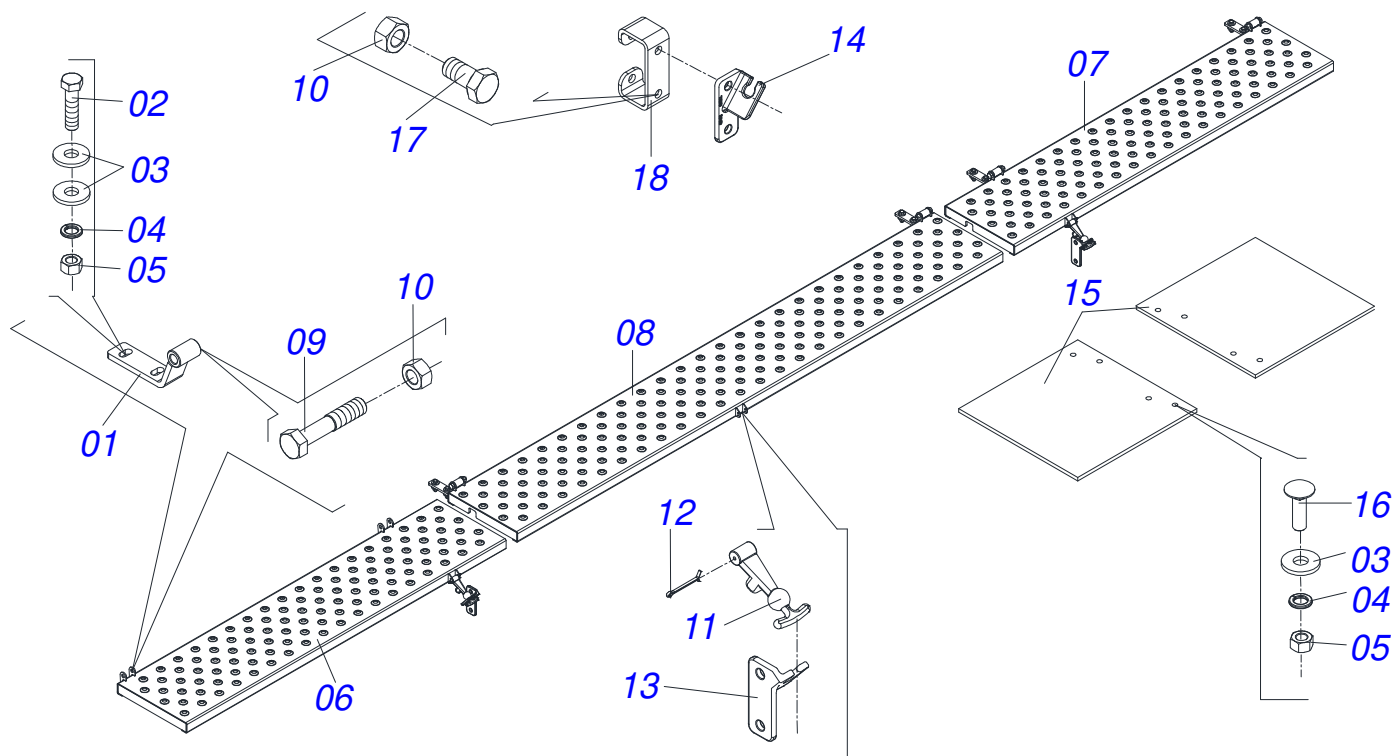


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT		06
002	0503010849	3/8" X 1-1/2" BOLT		12
003	0501010984	FLAT WASHER		28
004	0503010025	3/8" SPRING WASHER		16
005	0503010026	3/8" NUT		16
006	0521066921	SIDE PLATFORM		01
007	0521066920	RIGHT PLATAFORM		01
008	0521063870	PLATFORM CENTER		01
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		06
010	0503011336	1/2" HEX SELF ADJUSTING NUT		18
011	0503011333	COVER FIXER		03
012	0503010274	5/32"X 2" COTTERPIN		03
013	1902012740	PLATFORM RIGHT FIXER SUPPORT		03
014	1902012739	PLATFORM LEFT FIXER SUPPORT		03
015	0571017990	PLATFORM ENHANCEMENT PROTECTION		02
016	0501010942	3/8" X 1-1/4" BOLT		04
017	0503010834	1/2 X 1 BOLT		12
018	0581011924	PLATFORM LOCK EXTENSIONER		03

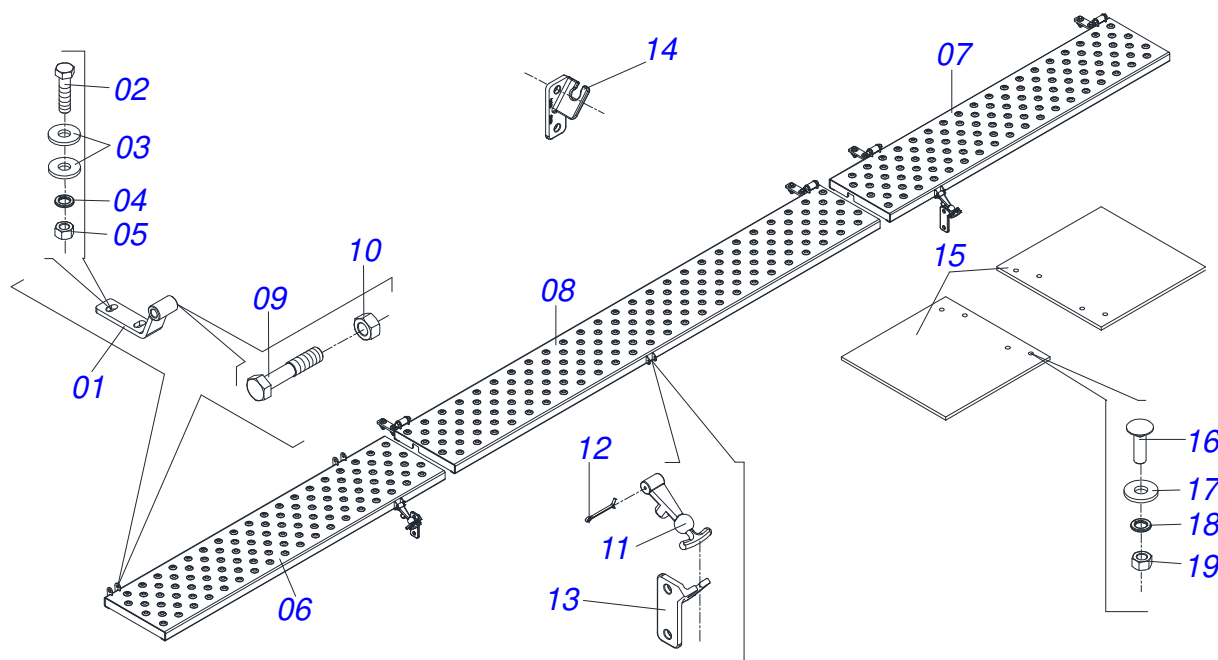


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT		06
002	0503010849	3/8" X 1-1/2" BOLT		10
003	0501010984	FLAT WASHER		20
004	0503010025	3/8" SPRING WASHER		10
005	0503010026	3/8" NUT		10
006	0521063869	RIGHT PLATFORM		01
007	0521063868	SIDE PLATFORM		01
008	0521063870	PLATFORM CENTER		01
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		06
010	0503011336	1/2" HEX SELF ADJUSTING NUT		06
011	0503011333	COVER FIXER		03
012	0503010274	5/32"X 2" COTTERPIN		03
013	0502012740	PLATFORM RIGHT FIXER SUPPORT		02
014	0502012739	PLATFORM LEFT FIXER SUPPORT		01
015	0571017990	PLATFORM ENHANCEMENT PROTECTION		02
016	0501010942	3/8" X 1-1/4" BOLT		04
017	0501010984	FLAT WASHER		04
018	0503010025	3/8" SPRING WASHER		04
019	0503010026	3/8" NUT		04

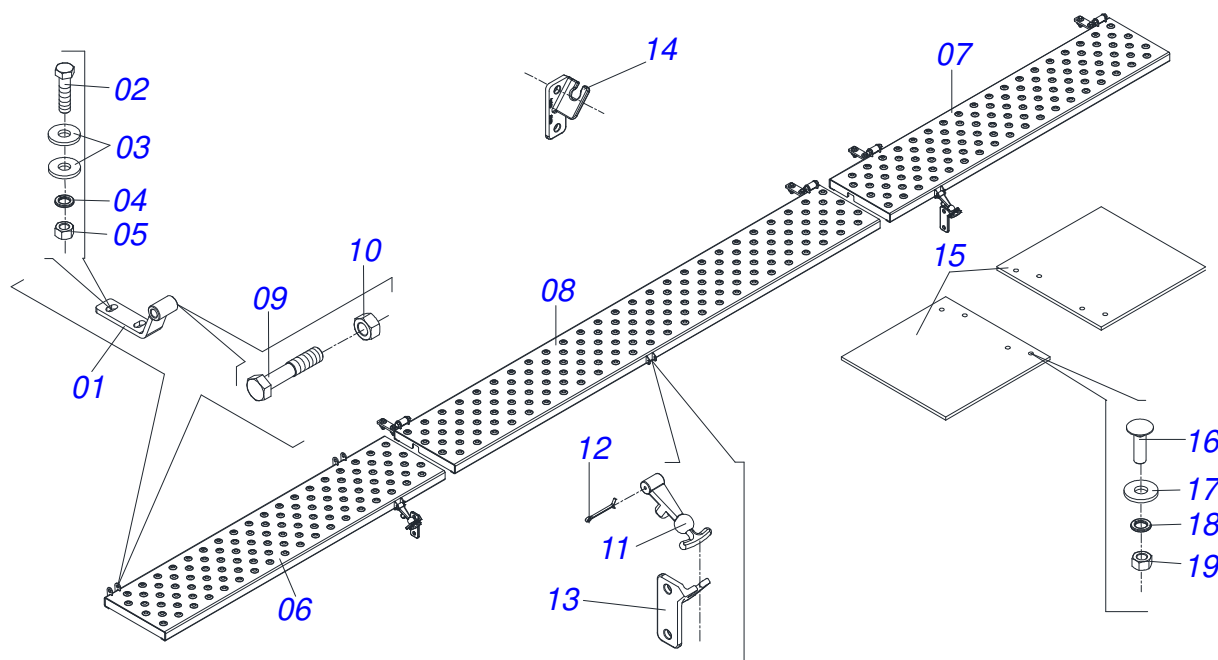


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT		06
002	0503010849	3/8" X 1-1/2" BOLT		10
003	0501010984	FLAT WASHER		20
004	0503010025	3/8" SPRING WASHER		10
005	0503010026	3/8" NUT		10
006	0521064290	RIGHT PLATFORM		01
007	0521064288	LEFT PLATFORM		01
008	0521064289	PLATFORM CENTER		01
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		06
010	0503011336	1/2" HEX SELF ADJUSTING NUT		06
011	0503011333	COVER FIXER		03
012	0503010274	5/32"X 2" COTTERPIN		03
013	0502012740	PLATFORM RIGHT FIXER SUPPORT		02
014	0502012739	PLATFORM LEFT FIXER SUPPORT		01
015	0571017990	PLATFORM ENHANCEMENT PROTECTION		02
016	0501010942	3/8" X 1-1/4" BOLT		04
017	0501010984	FLAT WASHER		04
018	0503010025	3/8" SPRING WASHER		04
019	0503010026	3/8" NUT		04

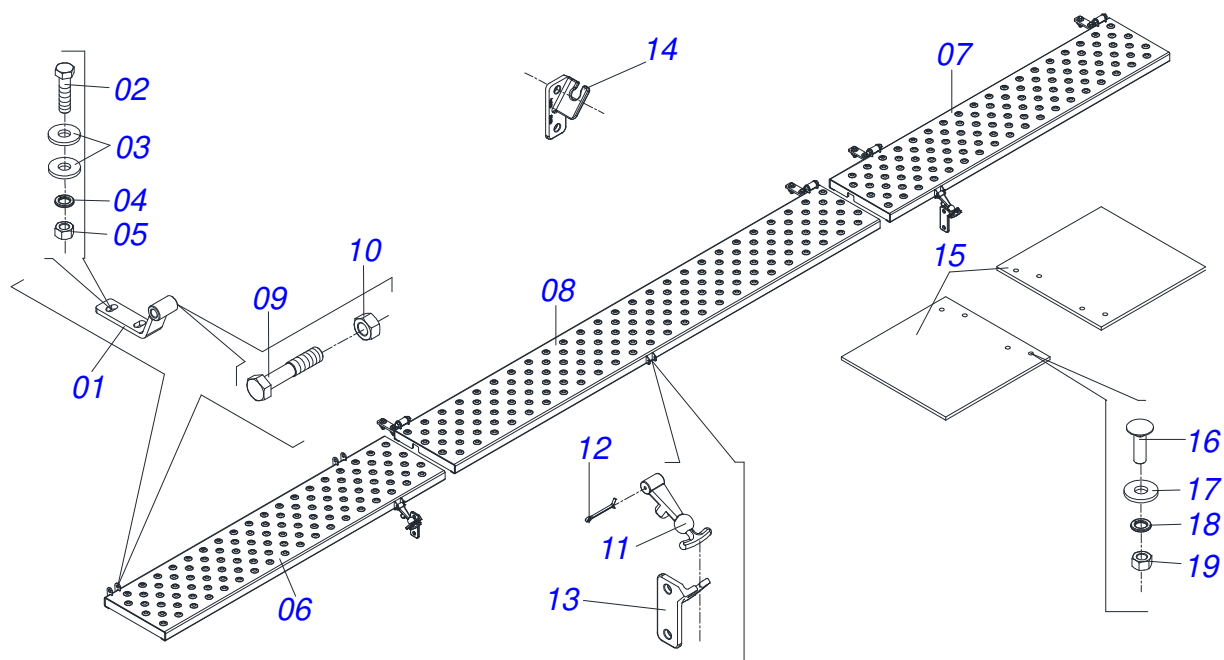


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT		06
002	0503010849	3/8" X 1-1/2" BOLT		10
003	0501010984	FLAT WASHER		20
004	0503010025	3/8" SPRING WASHER		10
005	0503010026	3/8" NUT		10
006	0521064290	RIGHT PLATFORM		01
007	0521064288	LEFT PLATFORM		01
008	0521064017	PLATFORM CENTER		01
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		06
010	0503011336	1/2" HEX SELF ADJUSTING NUT		06
011	0503011333	COVER FIXER		03
012	0503010274	5/32"X 2" COTTERPIN		03
013	0502012740	PLATFORM RIGHT FIXER SUPPORT		02
014	0502012739	PLATFORM LEFT FIXER SUPPORT		01
015	0571017990	PLATFORM ENHANCEMENT PROTECTION		02
016	0501010942	3/8" X 1-1/4" BOLT		04
017	0501010984	FLAT WASHER		04
018	0503010025	3/8" SPRING WASHER		04
019	0503010026	3/8" NUT		04

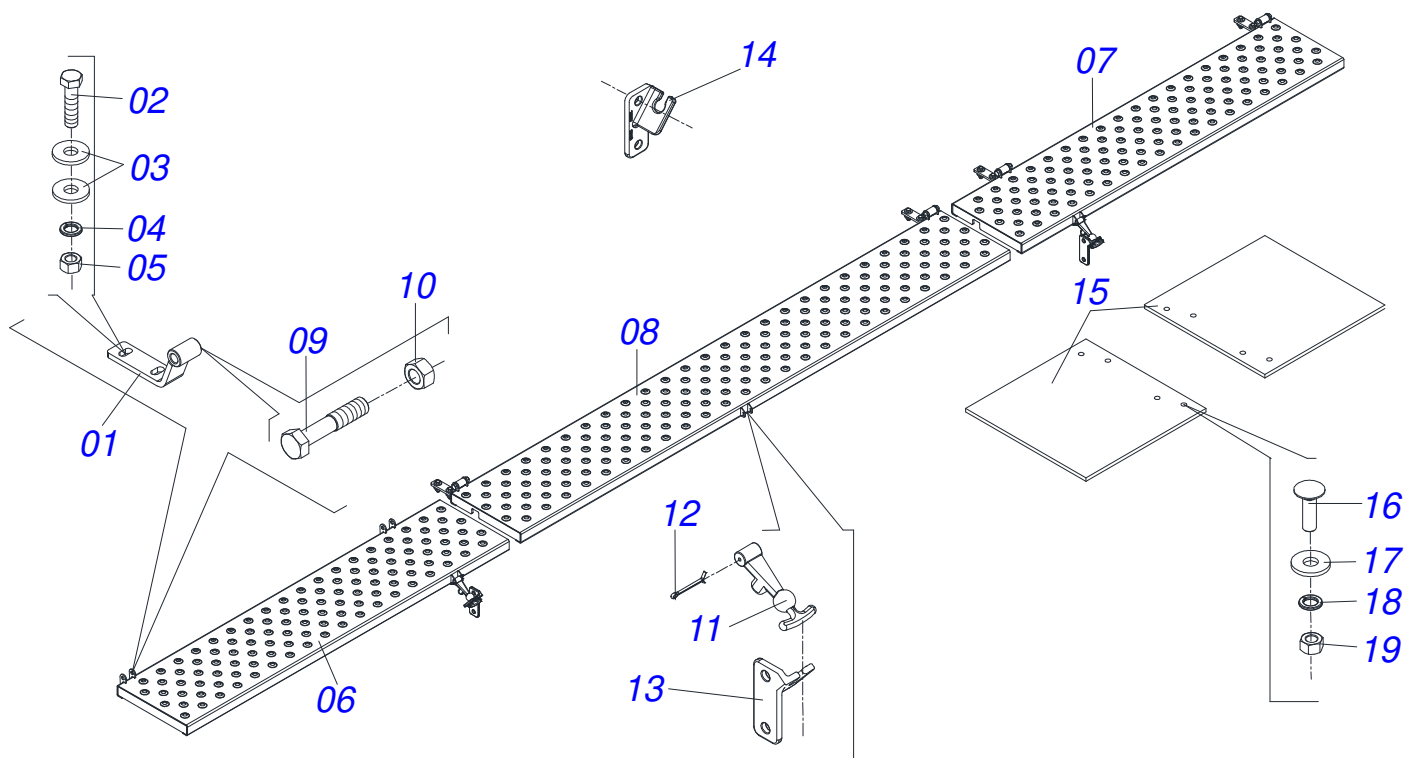


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT	06	
002	0503010849	3/8" X 1-1/2" BOLT	10	
003	0501010984	FLAT WASHER	20	
004	0503010025	3/8" SPRING WASHER	10	
005	0503010026	3/8" NUT	10	
006	0521064290	RIGHT PLATFORM	01	
007	0521064288	LEFT PLATFORM	01	
008	0521065206	PLATFORM CENTER	01	
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	06	
010	0503011336	1/2" HEX SELF ADJUSTING NUT	06	
011	0503011333	COVER FIXER	03	
012	0503010274	5/32"X 2" COTTERPIN	03	
013	0502012740	PLATFORM RIGHT FIXER SUPPORT	02	
014	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
015	0571017990	PLATFORM ENHANCEMENT PROTECTION	02	
016	0501010942	3/8" X 1-1/4" BOLT	04	
017	0501010984	FLAT WASHER	04	
018	0503010025	3/8" SPRING WASHER	04	
019	0503010026	3/8" NUT	04	

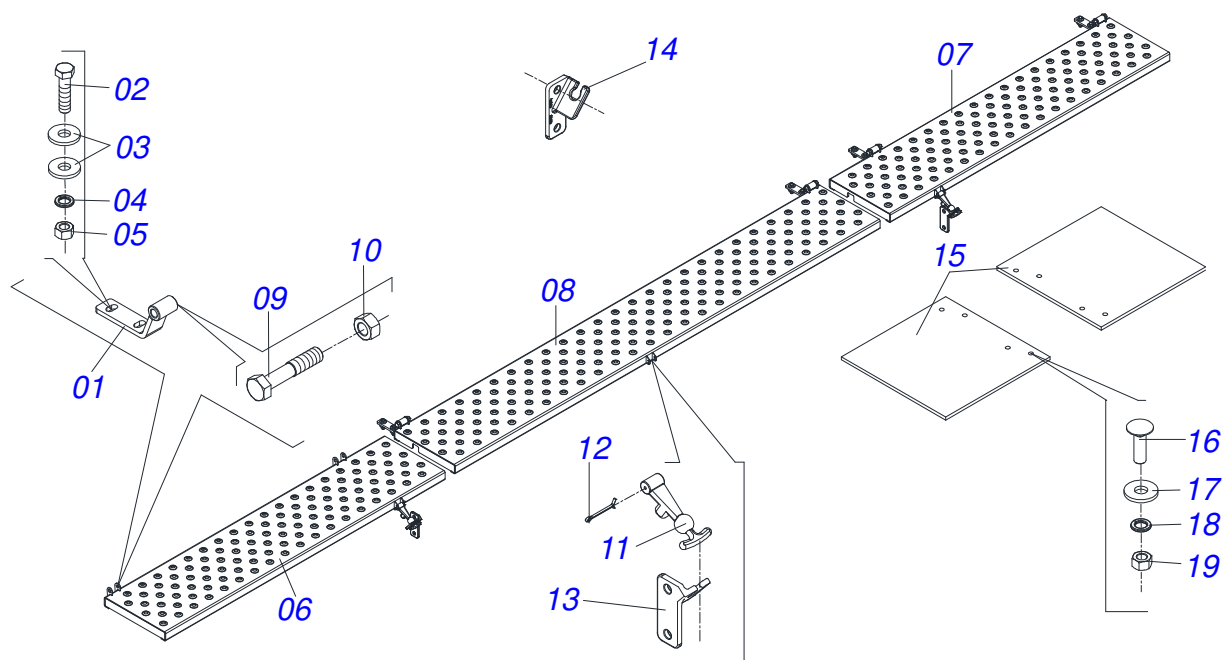


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT	06	
002	0503010849	3/8" X 1-1/2" BOLT	10	
003	0501010984	FLAT WASHER	20	
004	0503010025	3/8" SPRING WASHER	10	
005	0503010026	3/8" NUT	10	
006	0521064290	RIGHT PLATFORM	01	
007	0521064288	LEFT PLATFORM	01	
008	0521064827	CENTRAL PLATFORM	01	
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	06	
010	0503011336	1/2" HEX SELF ADJUSTING NUT	06	
011	0503011333	COVER FIXER	03	
012	0503010274	5/32"X 2" COTTERPIN	03	
013	0502012740	PLATFORM RIGHT FIXER SUPPORT	02	
014	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
015	0571017990	PLATFORM ENHANCEMENT PROTECTION	02	
016	0501010942	3/8" X 1-1/4" BOLT	04	
017	0501010984	FLAT WASHER	04	
018	0503010025	3/8" SPRING WASHER	04	
019	0503010026	3/8" NUT	04	

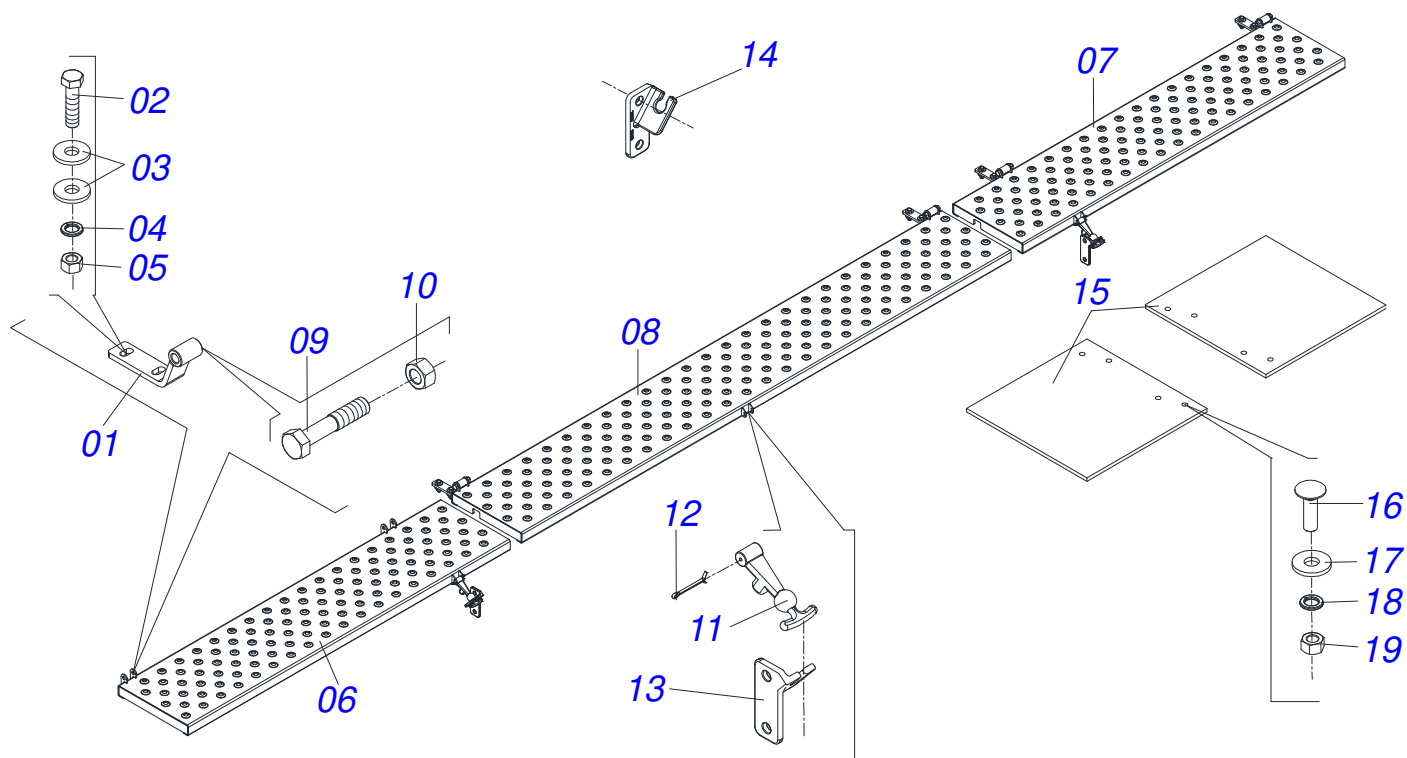


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT	06	
002	0503010849	3/8" X 1-1/2" BOLT	10	
003	0501010984	FLAT WASHER	20	
004	0503010025	3/8" SPRING WASHER	10	
005	0503010026	3/8" NUT	10	
006	0521064829	RIGHT PLATAFORM	01	
007	0521064828	SIDE PLATFORM	01	
008	0521064827	CENTRAL PLATFORM	01	
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	06	
010	0503011336	1/2" HEX SELF ADJUSTING NUT	06	
011	0503011333	COVER FIXER	03	
012	0503010274	5/32"X 2" COTTERPIN	03	
013	0502012740	PLATFORM RIGHT FIXER SUPPORT	02	
014	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
015	0571017990	PLATFORM ENHANCEMENT PROTECTION	02	
016	0501010942	3/8" X 1-1/4" BOLT	04	
017	0501010984	FLAT WASHER	04	
018	0503010025	3/8" SPRING WASHER	04	
019	0503010026	3/8" NUT	04	

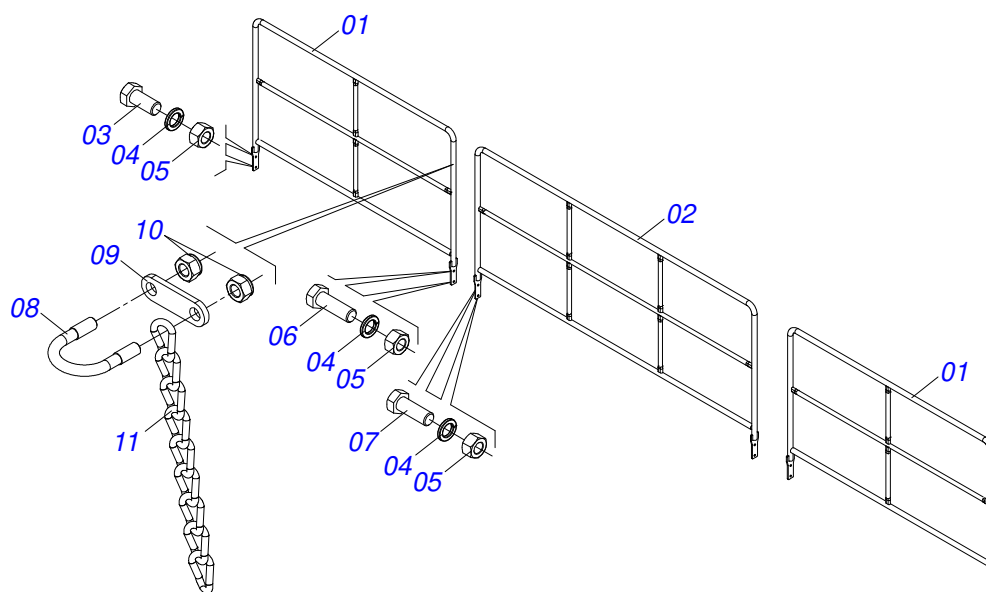


Item	Code	Description	See page	QT
01	0521066922	SIDE HANDRAIL	02	
02	0521063875	CENTRAL HANDRAIL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2" NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8" SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

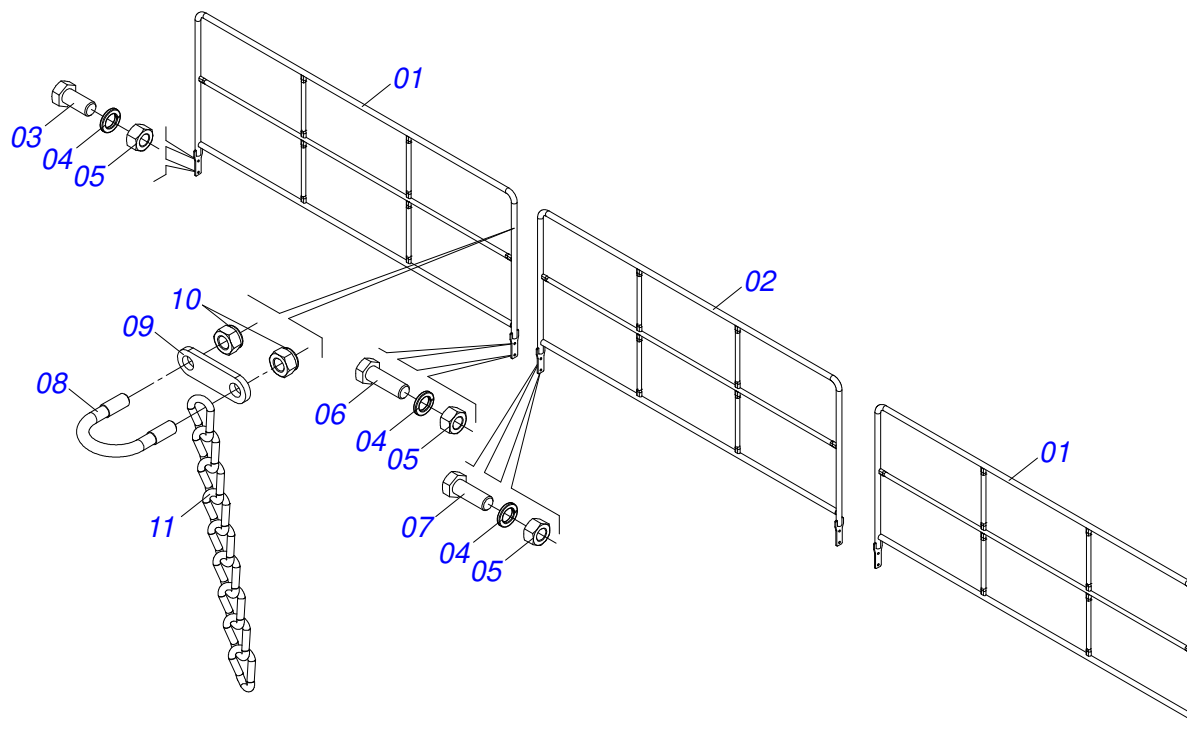


Item	Code	Description	See page	QT
01	0521063871	SIDE HANDRAIL		02
02	0521063875	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2" NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8" SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

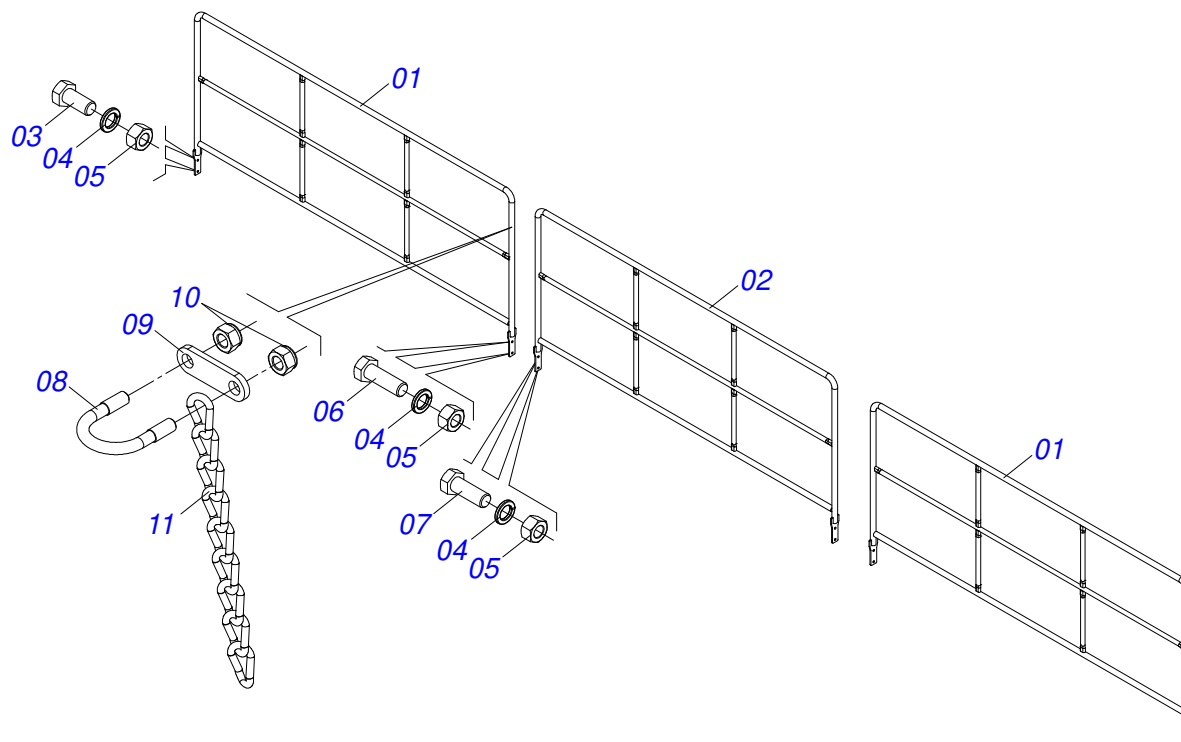


Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL		02
02	0521064279	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2" NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8" SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

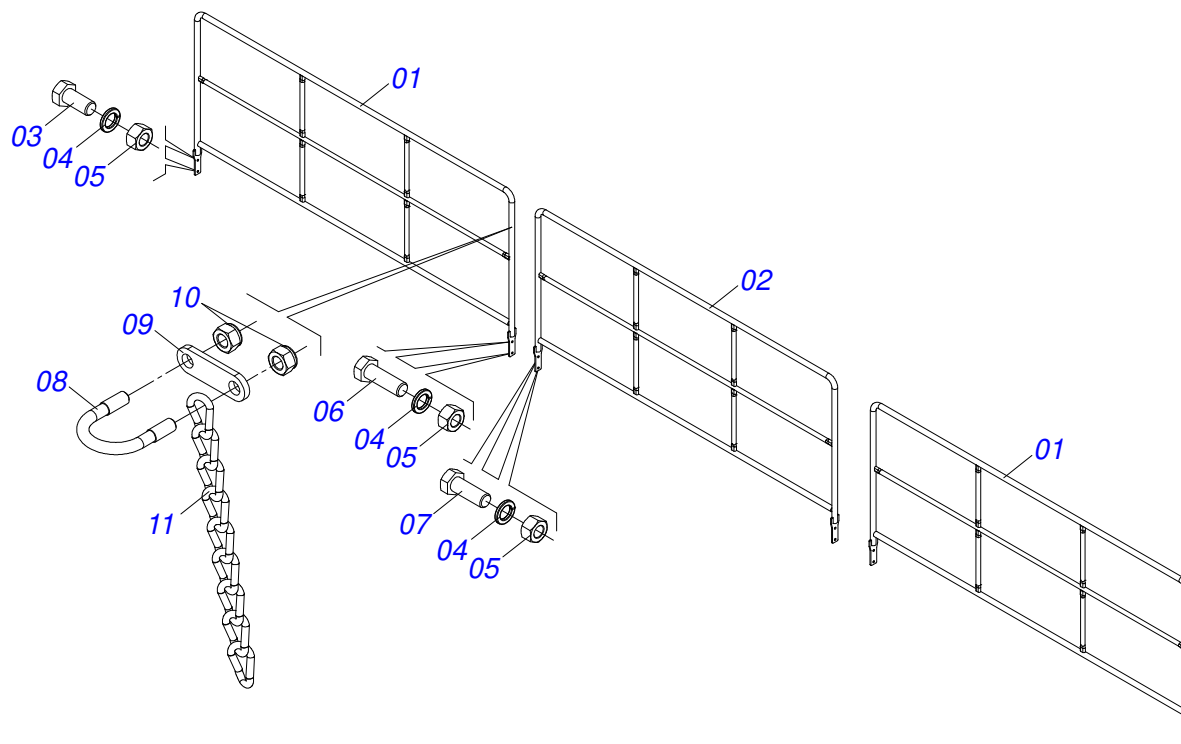


Item	Code	Description	See page	QT
01	0521063976	SIDE HANDRAIL		02
02	0521063875	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2" NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8" SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

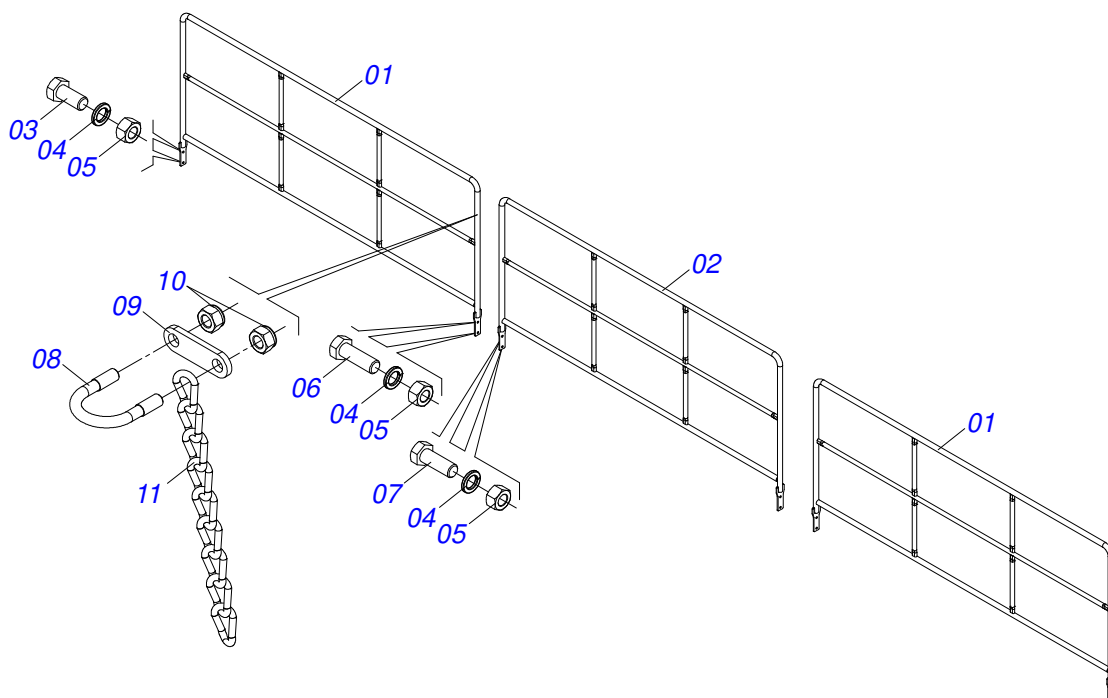

Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL		02
02	0521064018	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2" NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8" SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

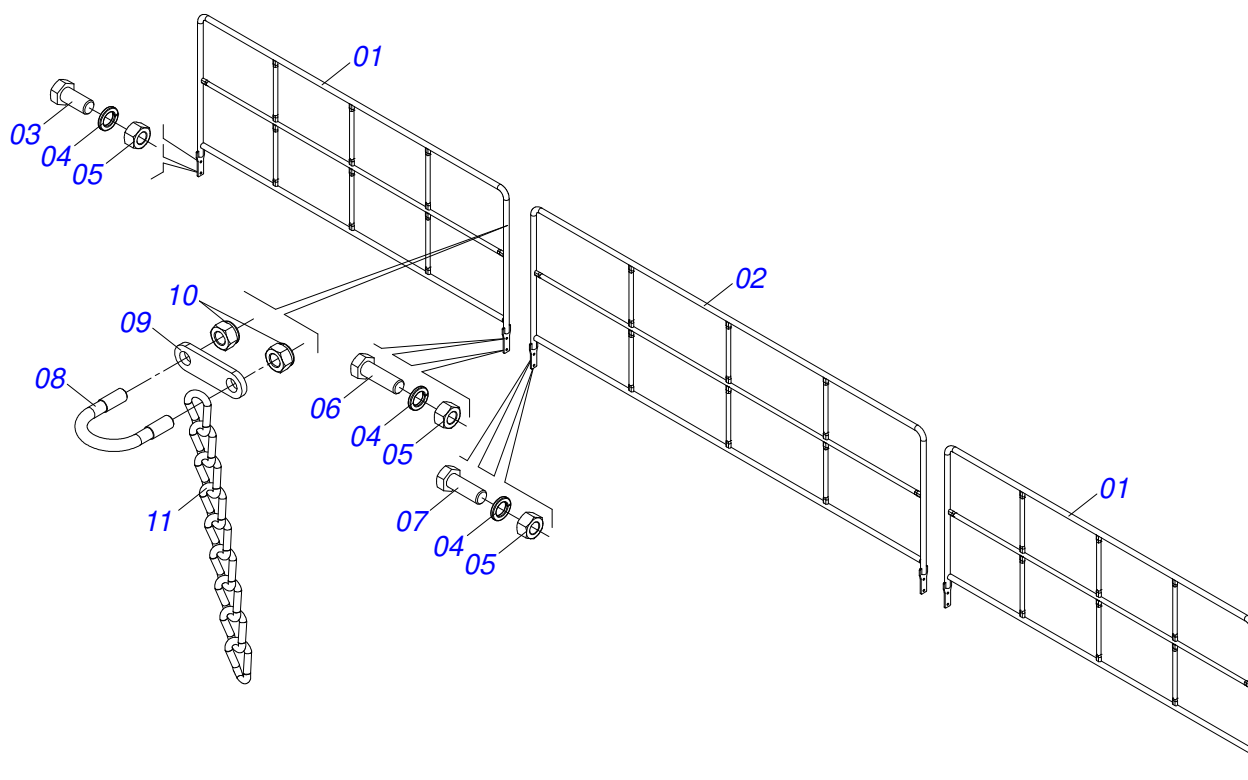


Item	Code	Description	See page	QT
01	0521064844	CORRIMAO LAT		02
02	0521064843	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2" NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8" SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

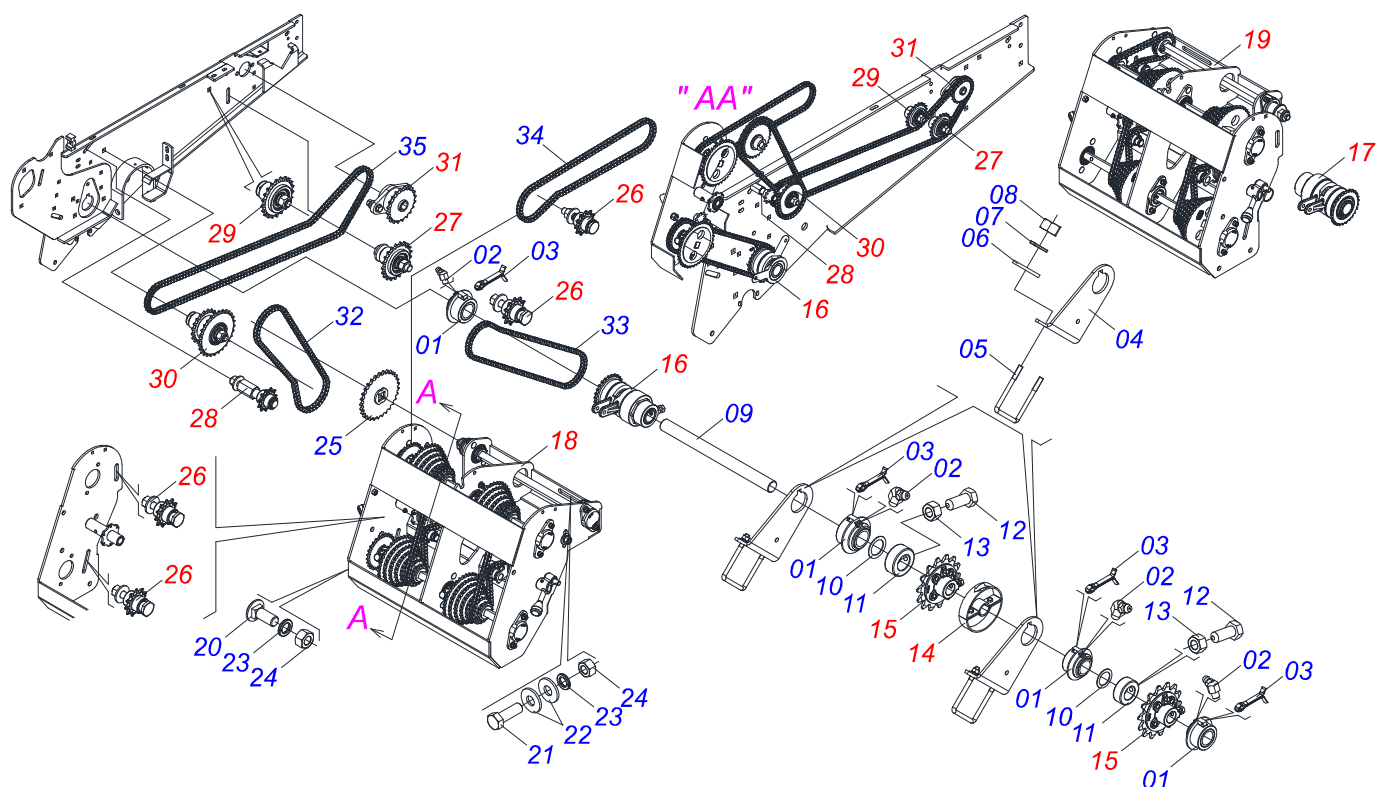


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2" NUT		08
09	0581011682	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0501052560	AXLE MOTOR SLOW-MOVING ASSY		02
15	0511051434	TRANSMISSION DRIVING ASSY	100	04
16	0511047069	SIDE TRANSMISSION DRIVING	101	01
17	0511047070	LH SIDE TRANSMISSION DRIVING	102	01
18	0521043316	RIGHT GEAR BOX ASSY		01
19	0521043317	LEFT GEAR BOX ASSY	103	01
20	0503014734	BOLT		06
21	0503010920	1/2" X 1.1/2" BOLT		04
22	0511017302	FLAT WASHER		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2" NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER		04
27	0521055217	LOWER CURRENT STRETCH		02
28	0501058254	UPPER SEED CHAIN TENSIONER		02
29	0521055216	BEARING WITH GEAR		02
30	0521055218	BEARING GEAR WITH DOUBLE		02
31	0521055214	BEARING GEAR WITH		02


Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

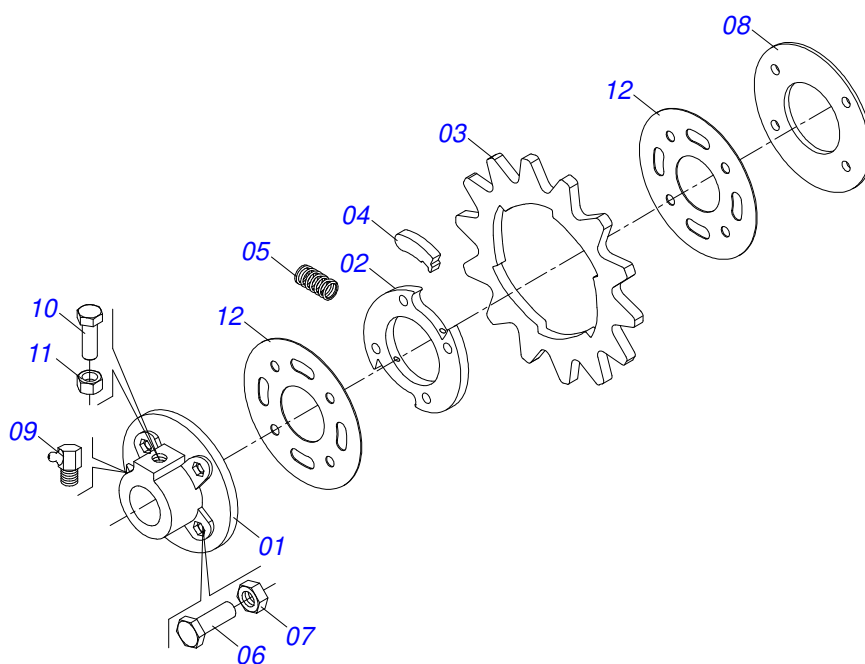


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

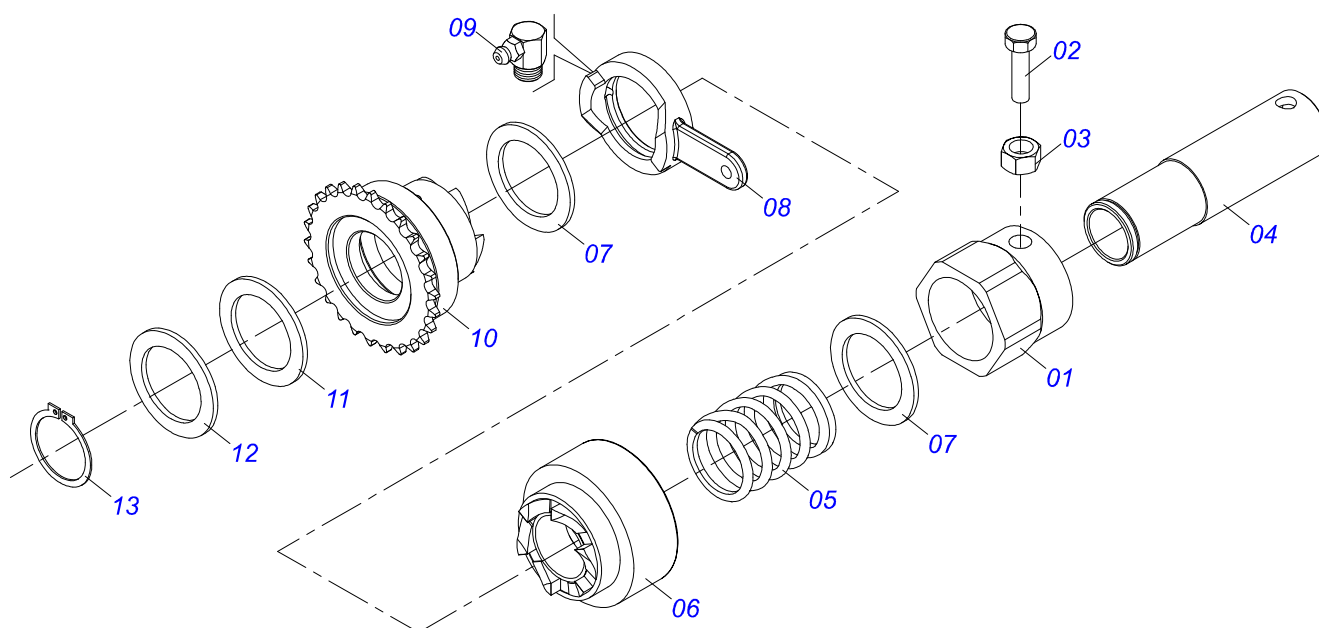


Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

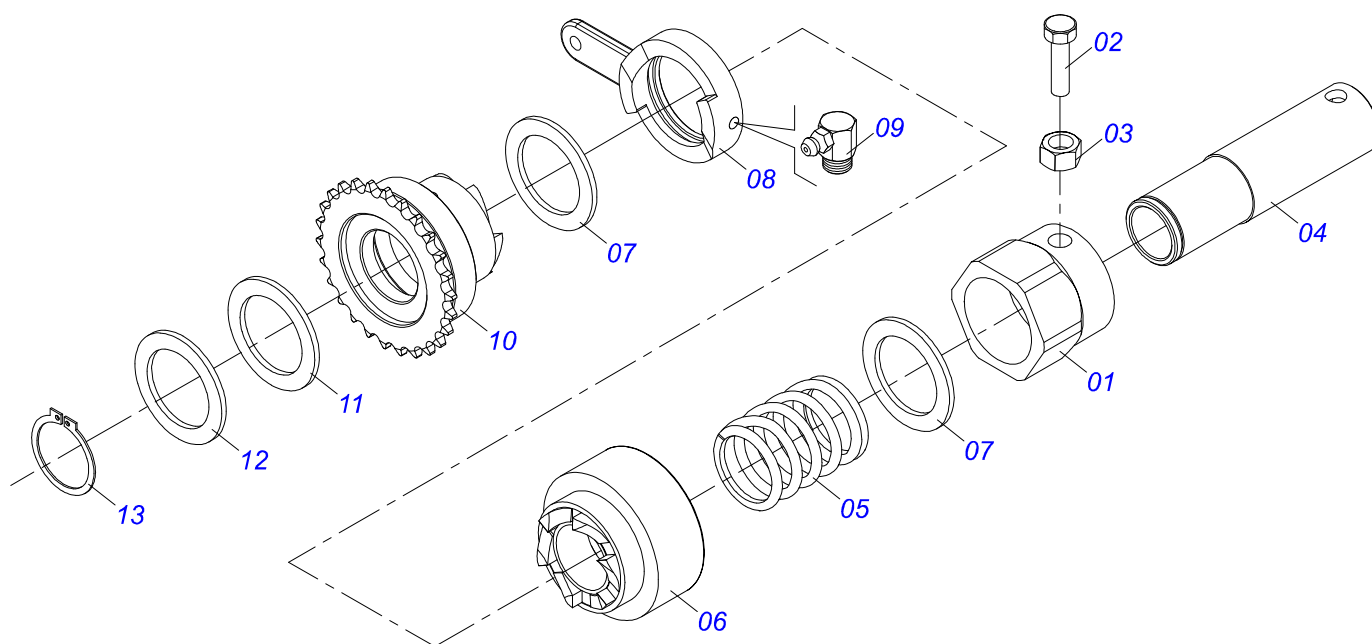


Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

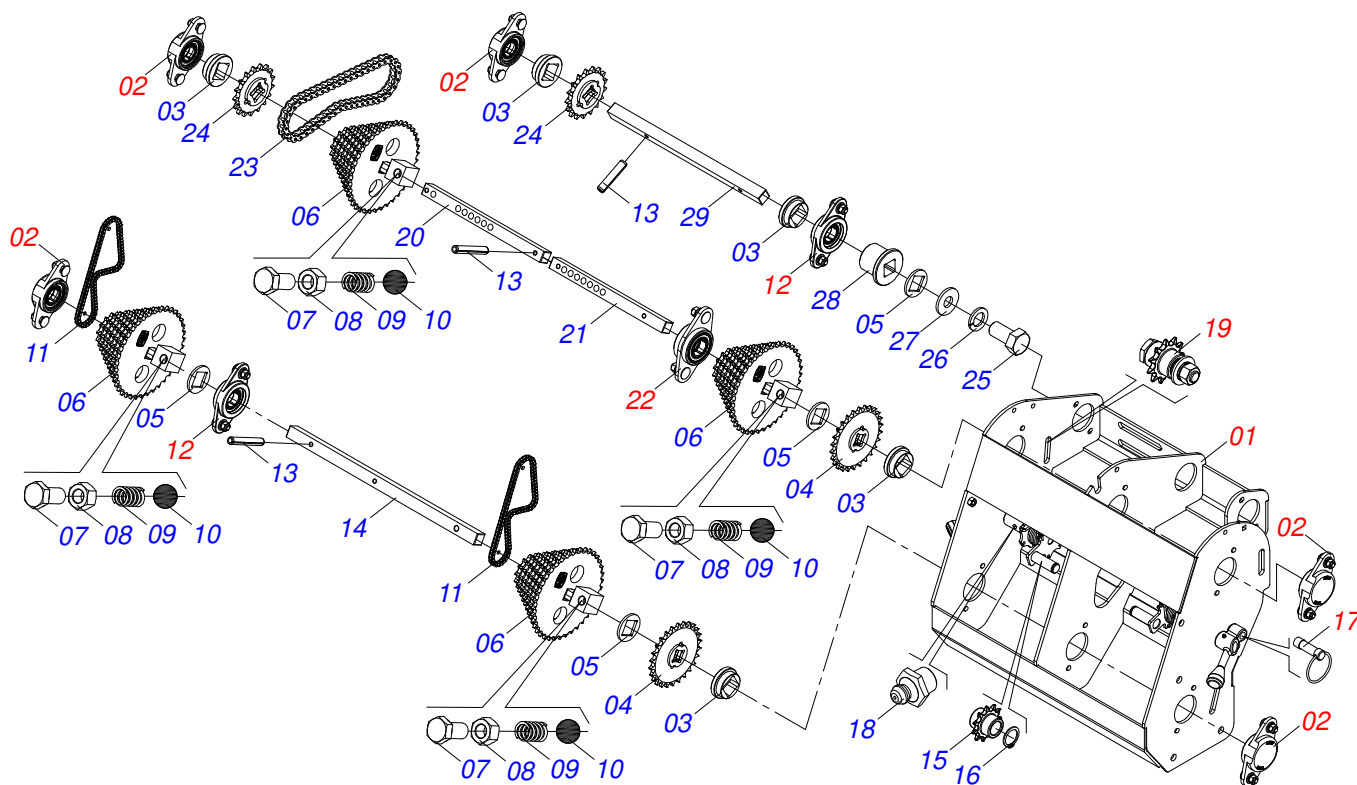


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX		01
02	0511059266	CLOSED BEARING	107	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN AXLE CONE		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2" NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	BEARING ASSY GEAR BOX	106	02
13	0503010292	0.2" X 1.6" SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH LINK ASSY	104	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	108	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	105	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8" SPRING WASHER		01
27	0501010984	FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

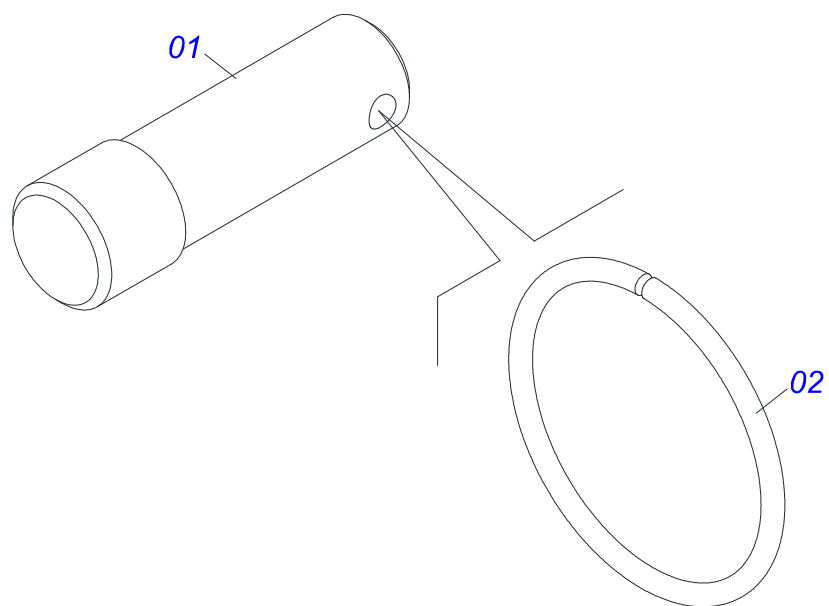


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

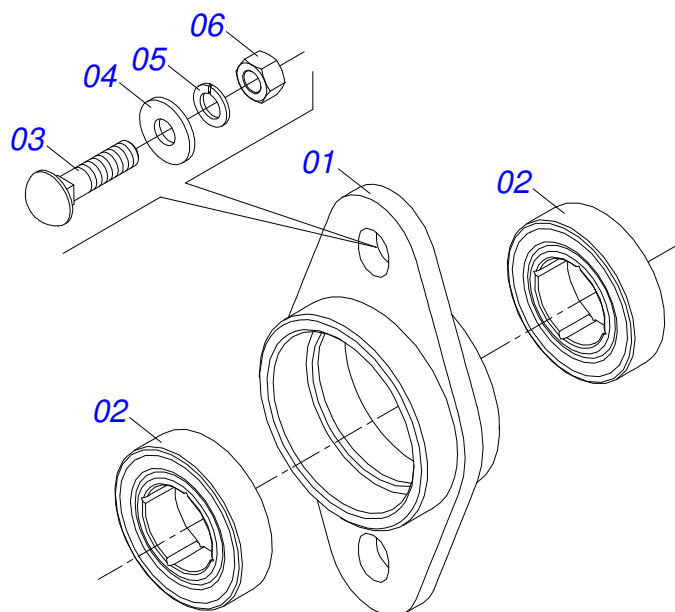


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
05	0503010179	5/16" ZN SPRING WASHER		02
06	0503010337	5/16" NUT		02

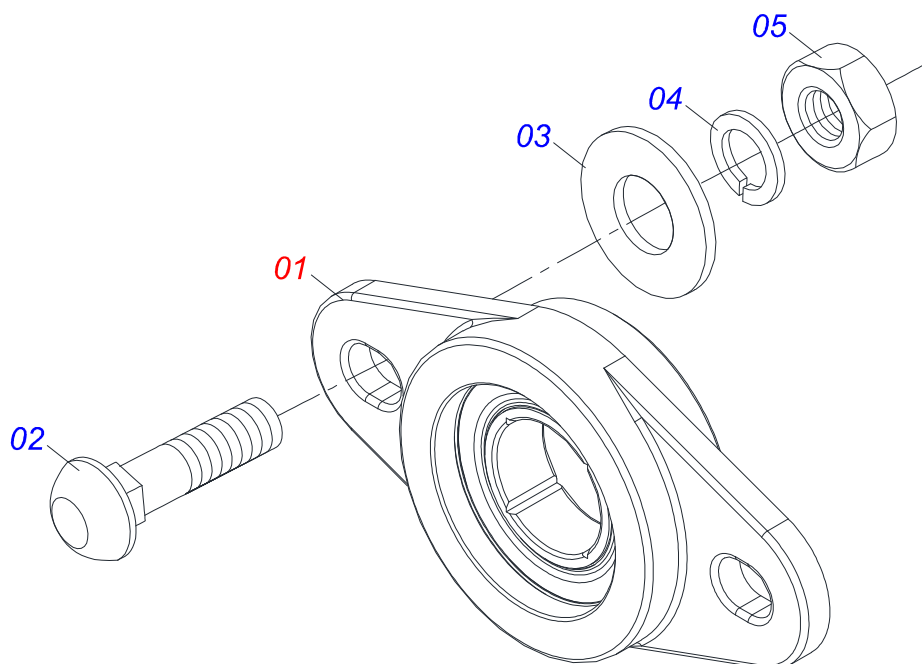


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING		01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

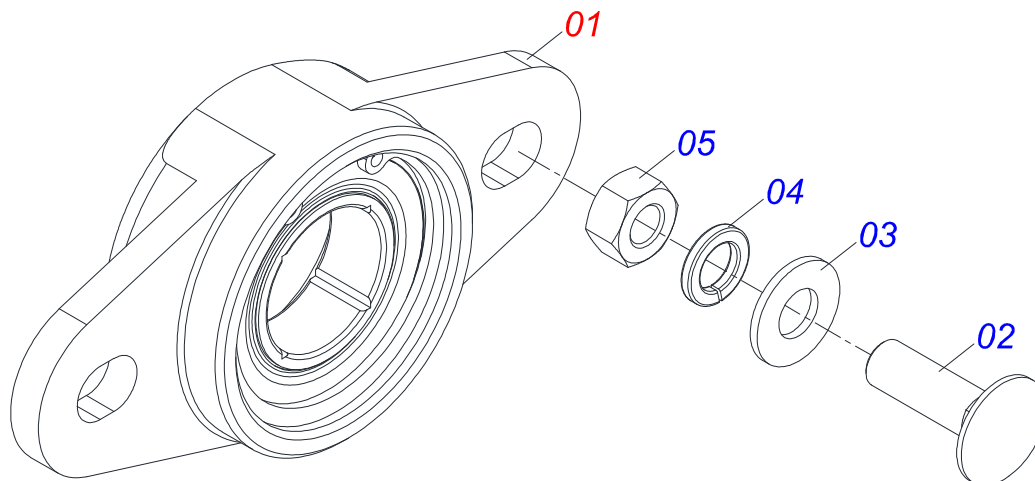

Item	Code	Description	See page	QT
01	0501056271	BEARING CLOSED		01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

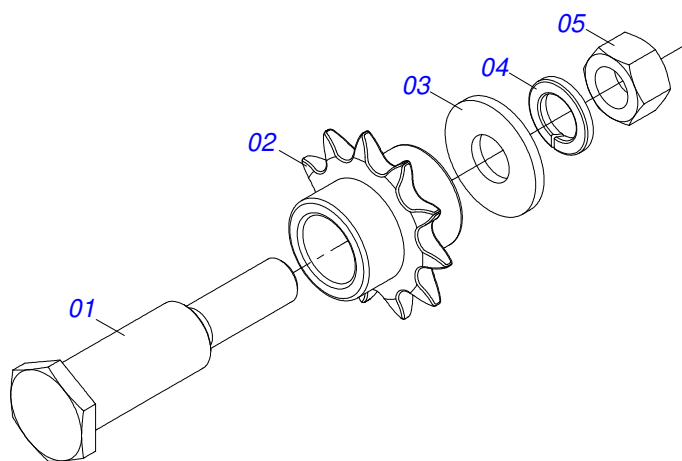


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

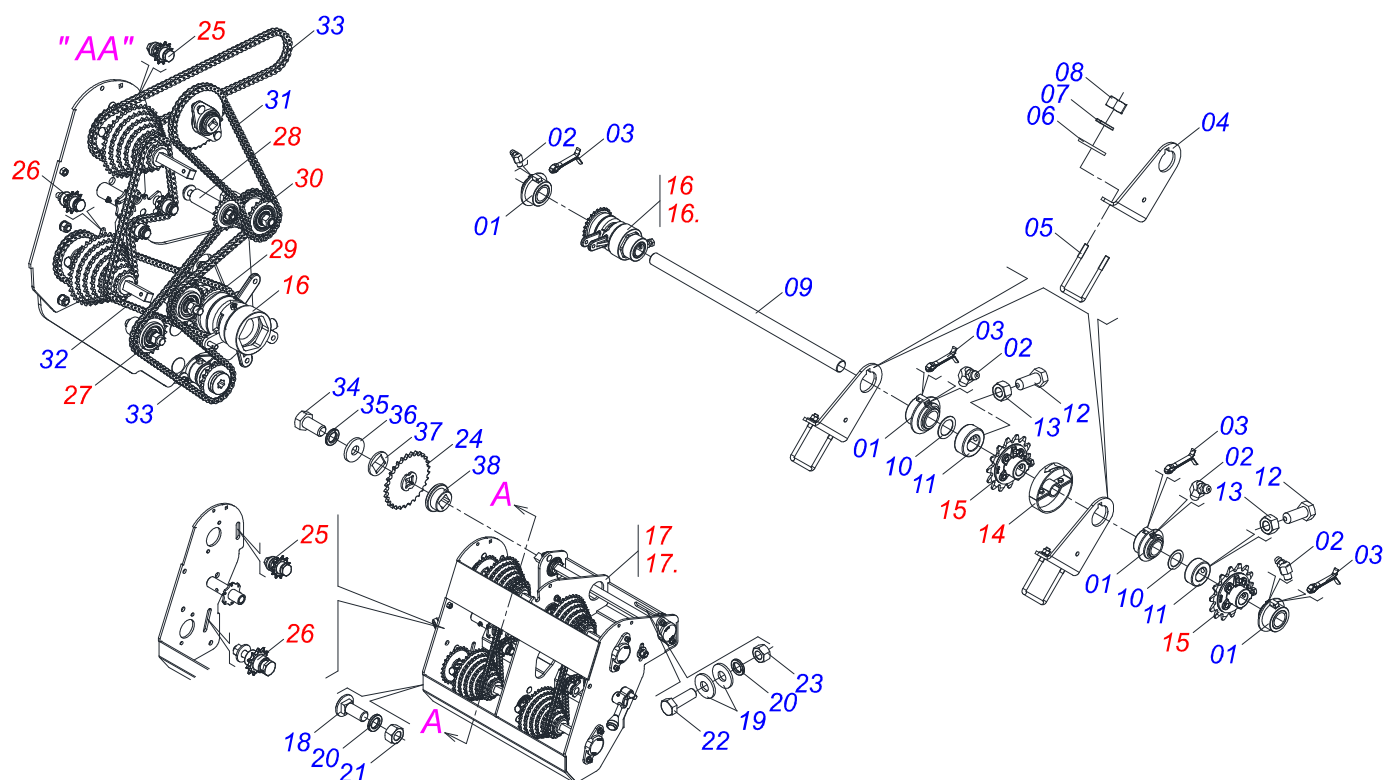


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2" NUT		08
09	0571014441	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0501052560	AXLE MOTOR SLOW-MOVING ASSY		02
15	0511051434	TRANSMISSION DRIVING ASSY	100	04
16	0511047069	SIDE TRANSMISSION DRIVING	101	01
16.	0511047070	LH SIDE TRANSMISSION DRIVING	102	01
17	0521043316	RIGHT GEAR BOX ASSY		01
17.	0521043317	LEFT GEAR BOX ASSY	103	01
18	0501010243	1/2" X 1-1/2" BOLT		06
19	0511017302	FLAT WASHER		08
20	0503010019	1/2" SPRING WASHER		10
21	0503012682	1/2" BSW NUT		06
22	0503010920	1/2" X 1.1/2" BOLT		04
23	0503010060	1/2" NUT		04
24	0521062072	33Z GEAR		02
25	0511054363	CHAIN TENSIONER		02
26	0501058234	LOWER CHAIN TENSIONER		02
27	0521055207	TOP CURRENT STRETCHER		02
28	0501058236	BEARING WITH 21Z GEAR		02
29	0501058237	16Z GEAR BEARING		02

Item	Code	Description	See page	QT
30	0501055112	MICRO GRANULATED CHAIN TENSIONER		02
31	0503012391	40-1 CHAIN X 83 LINK + MENDING		02
32	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
33	0503012718	40-1 CHAIN X 111 LINK + MENDING		04
34	0503010256	3/8" X 3/4" BOLT		02
35	0503010025	3/8" SPRING WASHER		02
36	0501010984	FLAT WASHER		02
37	0501010637	FLAT WASHER		02
38	0503030303	SUPPORT WASHER		06

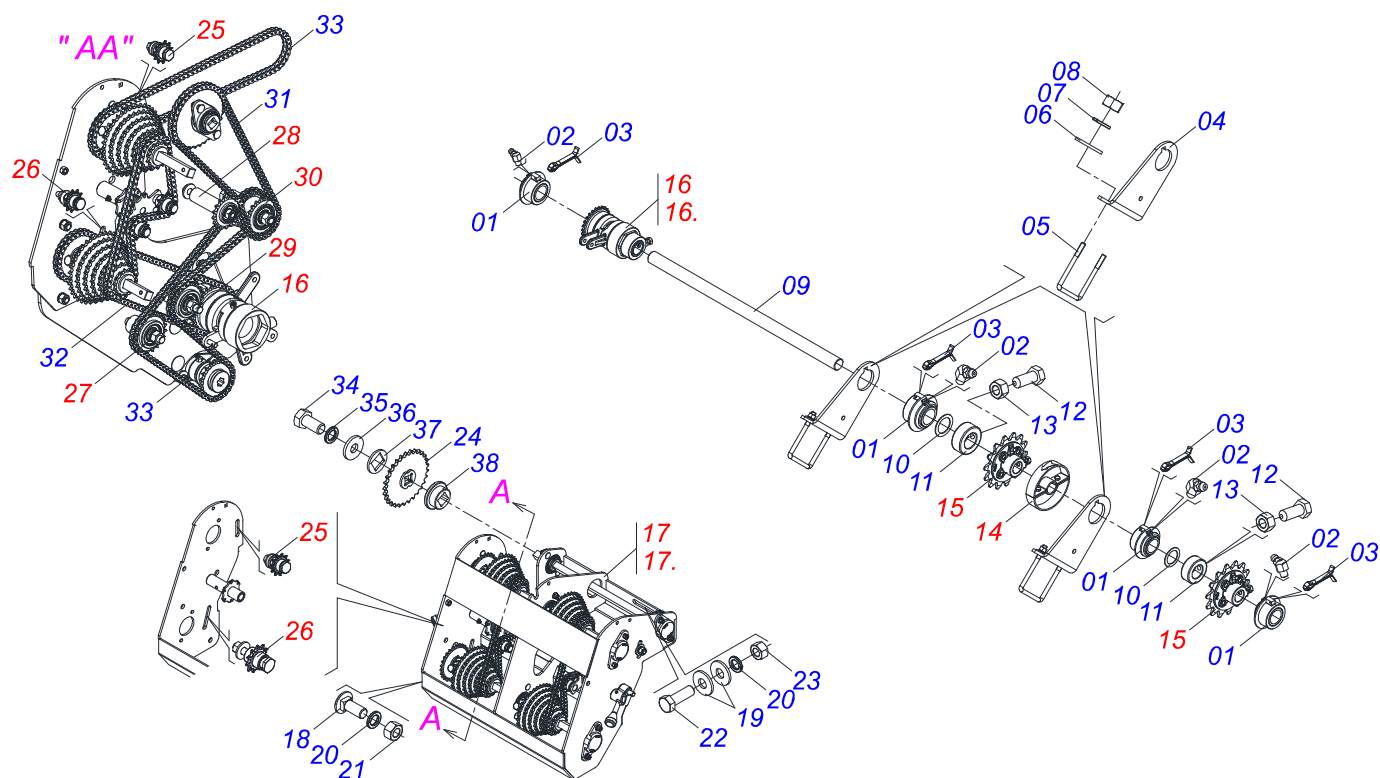


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2" NUT		08
09	0571014439	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0501052560	AXLE MOTOR SLOW-MOVING ASSY		02
15	0511051434	TRANSMISSION DRIVING ASSY	100	04
16	0511047069	SIDE TRANSMISSION DRIVING	101	01
16.	0511047070	LH SIDE TRANSMISSION DRIVING	102	01
17	0521043316	RIGHT GEAR BOX ASSY		01
17.	0521043317	LEFT GEAR BOX ASSY	103	01
18	0501010243	1/2" X 1-1/2" BOLT		06
19	0511017302	FLAT WASHER		08
20	0503010019	1/2" SPRING WASHER		10
21	0503012682	1/2" BSW NUT		06
22	0503010920	1/2" X 1.1/2" BOLT		04
23	0503010060	1/2" NUT		04
24	0521062072	33Z GEAR		02
25	0511054363	CHAIN TENSIONER		02
26	0501058234	LOWER CHAIN TENSIONER		02
27	0521055207	TOP CURRENT STRETCHER		02
28	0501058236	BEARING WITH 21Z GEAR		02
29	0501058237	16Z GEAR BEARING		02

Item	Code	Description	See page	QT
30	0501055112	MICRO GRANULATED CHAIN TENSIONER		02
31	0503012391	40-1 CHAIN X 83 LINK + MENDING		02
32	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
33	0503012718	40-1 CHAIN X 111 LINK + MENDING		04
34	0503010256	3/8" X 3/4" BOLT		02
35	0503010025	3/8" SPRING WASHER		02
36	0501010984	FLAT WASHER		02
37	0501010637	FLAT WASHER		02
38	0503030303	SUPPORT WASHER		06

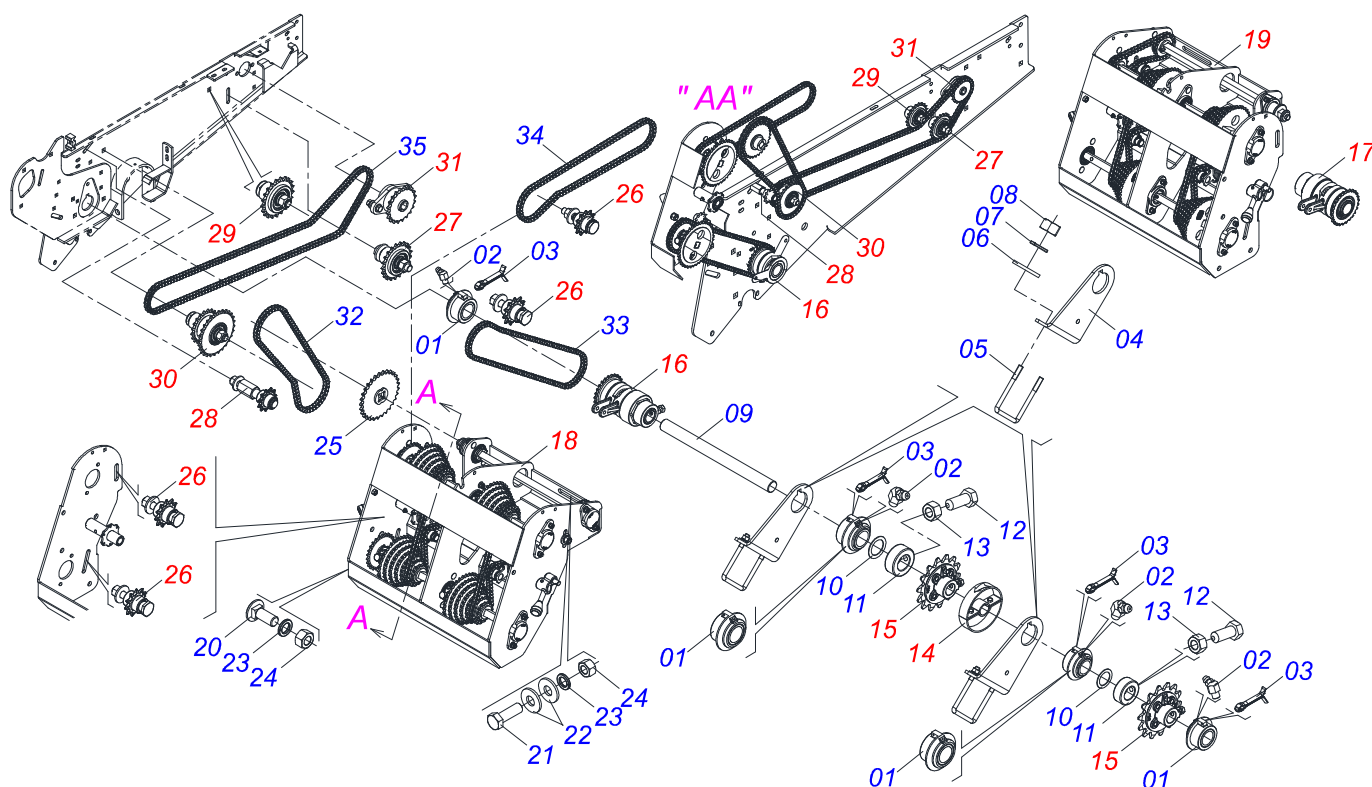


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2" NUT		08
09	0571014442	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0501052560	AXLE MOTOR SLOW-MOVING ASSY		02
15	0511051434	TRANSMISSION DRIVING ASSY	100	04
16	0511047069	SIDE TRANSMISSION DRIVING	101	01
17	0511047070	LH SIDE TRANSMISSION DRIVING	102	01
18	0521043316	RIGHT GEAR BOX ASSY		01
19	0521043317	LEFT GEAR BOX ASSY	103	01
20	0503014734	BOLT		06
21	0503010920	1/2" X 1.1/2" BOLT		04
22	0511017302	FLAT WASHER		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2" NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER		04
27	0521055217	LOWER CURRENT STRETCH		02
28	0501058254	UPPER SEED CHAIN TENSIONER		02
29	0521055216	BEARING WITH GEAR		02
30	0521055218	BEARING GEAR WITH DOUBLE		02
31	0521055214	BEARING GEAR WITH		02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

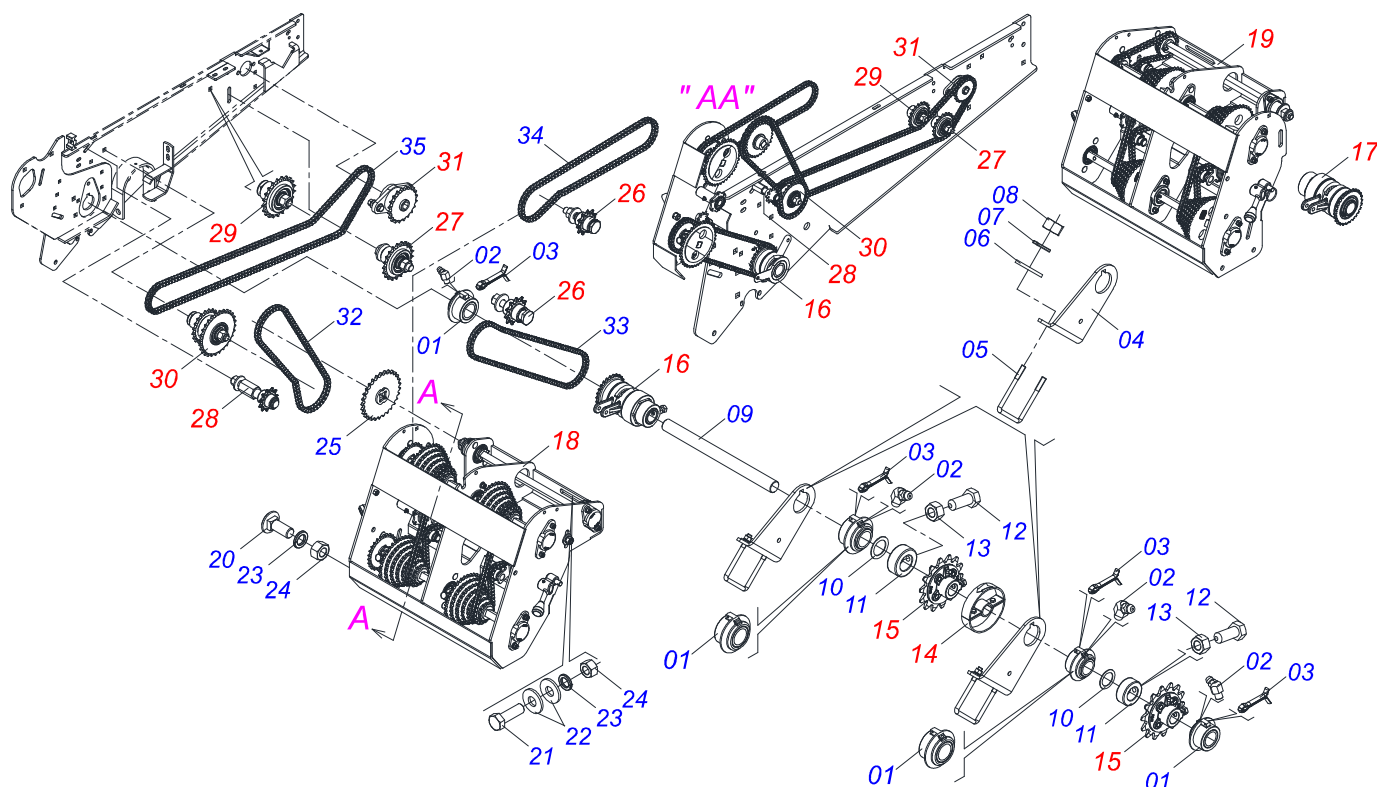


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2" NUT		08
09	0571014442	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0501052560	AXLE MOTOR SLOW-MOVING ASSY		02
15	0511051434	TRANSMISSION DRIVING ASSY	100	04
16	0511047069	SIDE TRANSMISSION DRIVING	101	01
17	0511047070	LH SIDE TRANSMISSION DRIVING	102	01
18	0521043316	RIGHT GEAR BOX ASSY		01
19	0521043317	LEFT GEAR BOX ASSY	103	01
20	0501010243	1/2" X 1-1/2" BOLT		06
21	0503010920	1/2" X 1.1/2" BOLT		04
22	0511017302	FLAT WASHER		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2" NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER		04
27	0521055217	LOWER CURRENT STRETCH		02
28	0501058254	UPPER SEED CHAIN TENSIONER		02
29	0521055216	BEARING WITH GEAR		02
30	0521055218	BEARING GEAR WITH DOUBLE		02
31	0521055214	BEARING GEAR WITH		02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

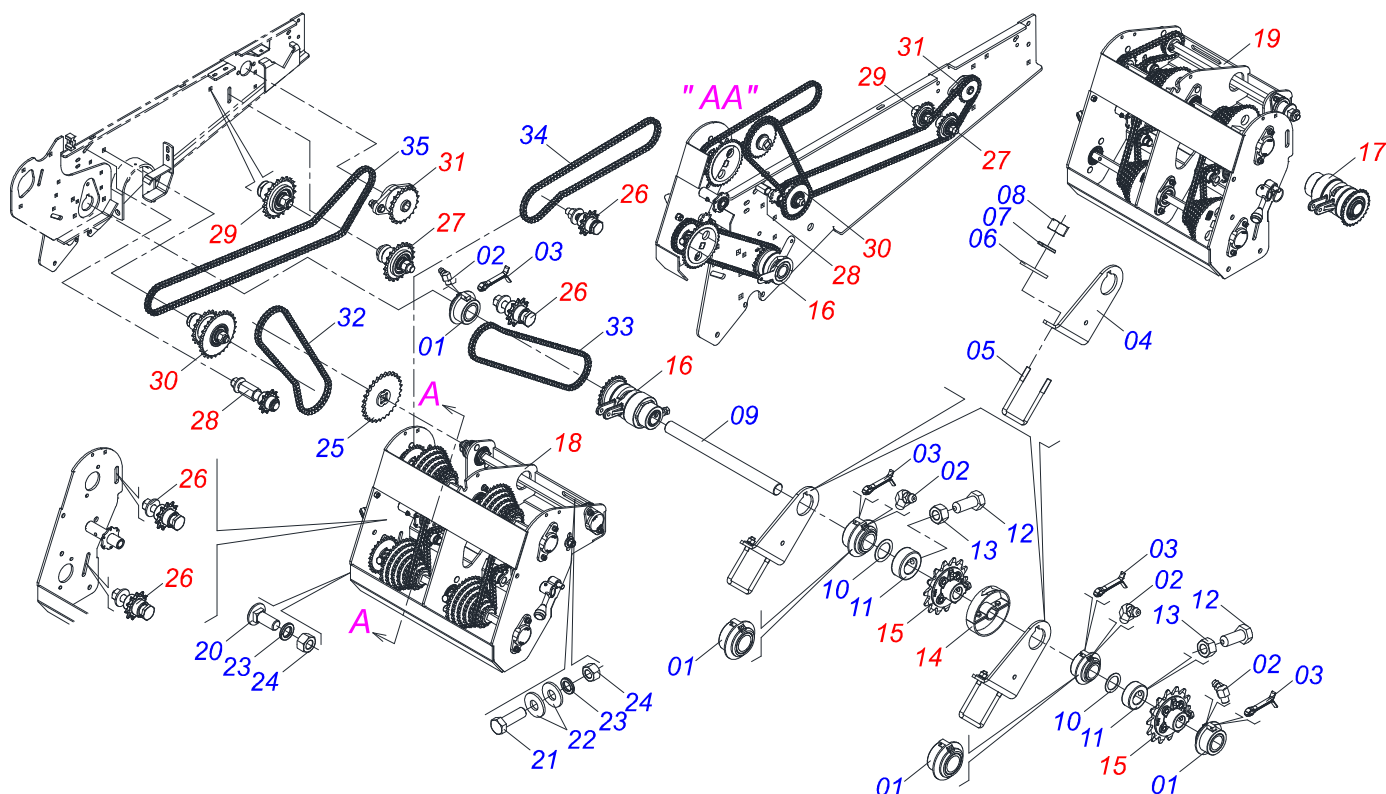


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2" NUT		08
09	0571017078	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0501052560	AXLE MOTOR SLOW-MOVING ASSY		02
15	0511051434	TRANSMISSION DRIVING ASSY	100	04
16	0511047069	SIDE TRANSMISSION DRIVING	101	01
17	0511047070	LH SIDE TRANSMISSION DRIVING	102	01
18	0521043316	RIGHT GEAR BOX ASSY		01
19	0521043317	LEFT GEAR BOX ASSY	103	01
20	0501010243	1/2" X 1-1/2" BOLT		06
21	0503010920	1/2" X 1.1/2" BOLT		04
22	0511017302	FLAT WASHER		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2" NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER		04
27	0521055217	LOWER CURRENT STRETCH		02
28	0501058254	UPPER SEED CHAIN TENSIONER		02
29	0521055216	BEARING WITH GEAR		02
30	0521055218	BEARING GEAR WITH DOUBLE		02
31	0521055214	BEARING GEAR WITH		02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

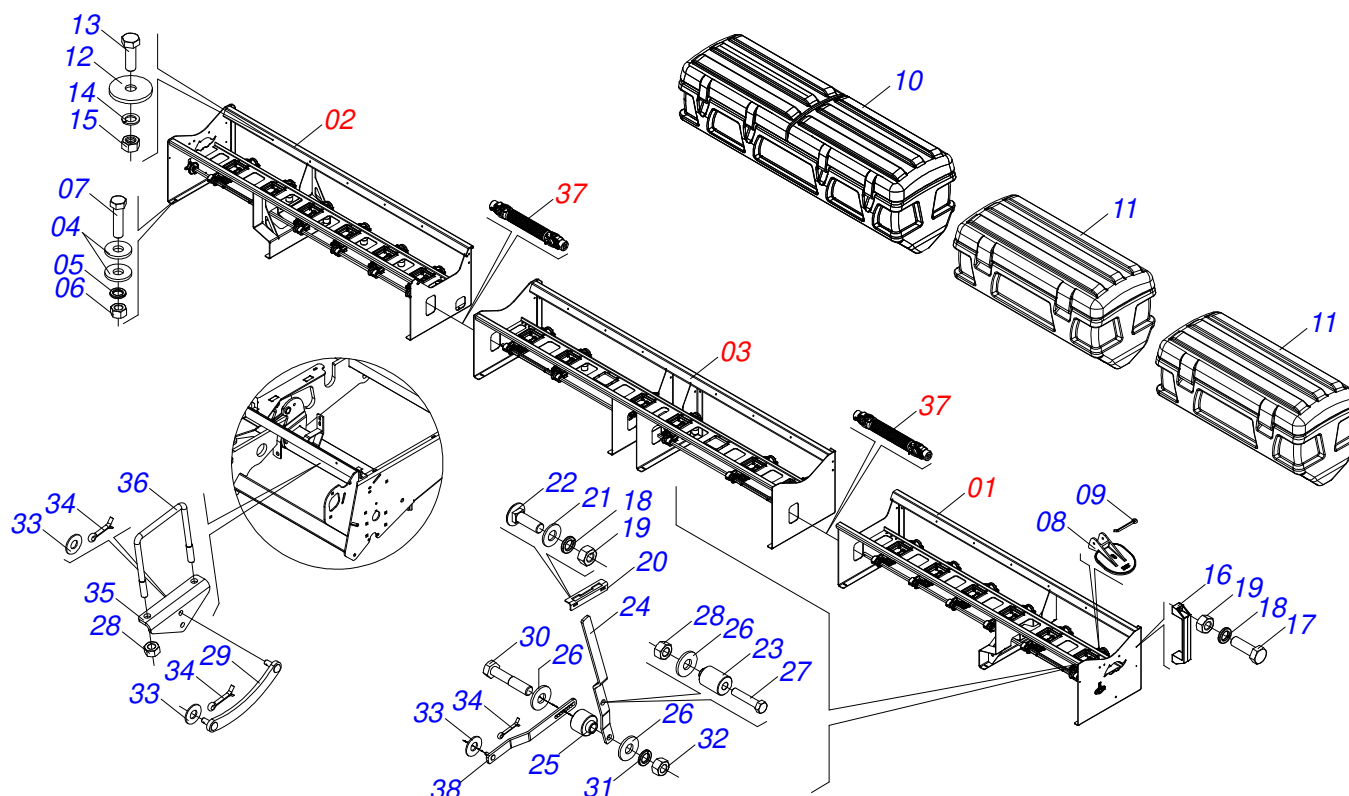


Item	Code	Description	See page	QT
01	0511059278	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 5750		01
02	0511059277	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 5750		01
03	0511059279	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 5750		01
04	0501010984	FLAT WASHER		32
05	0503010025	3/8" SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0503010849	3/8" X 1-1/2" BOLT		16
08	0571010590	FERTILIZER SIDE COVER		13
09	0503010362	1/8" X 1.1/4" COTTERPIN		13
10	0503062391	SILO FERTILIZER 05 MOUTHS	137	01
11	0503062362	SILO FERTILIZER 04 MOUTH	138	02
12	0571019051	FIXER BOX WASHER		20
13	0503013751	3/8 UNC X 1.1/4 BOLT		20
14	0503012535	3/8" SPRING WASHER		20
15	0503012531	3/8" INOX NUT		20
16	0503011957	NYLON LUG		02
17	0503010371	5/16" X 1" BOLT		04
18	0503010179	5/16" ZN SPRING WASHER		08
19	0503010337	5/16" NUT		08
20	0581012605	GEAR BOX LEVER LOCK		02
21	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
22	0503011953	5/16" X 1" BOLT		04
23	0551019168	SLEEVE		02
24	0551019160	LEVER		02
25	0551019167	SLEEVE UNION		02
26	0511017302	FLAT WASHER		06
27	0503010479	BOLT		02
28	0503011336	1/2" HEX SELF ADJUSTING NUT		06
29	0511069678	LH LOWER LEVER		02

Item	Code	Description	See page	QT
30	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
31	0503010019	1/2" SPRING WASHER		02
32	0503010060	1/2" NUT		02
33	0501013518	FLAT WASHER		06
34	0503010140	1/8" X 3/4" COTTERPIN		06
35	0551019159	LEVER FIXER BODY		02
36	0561016468	FASTENER		02
37	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER		02
38	0521061741	INNER LEVER		02

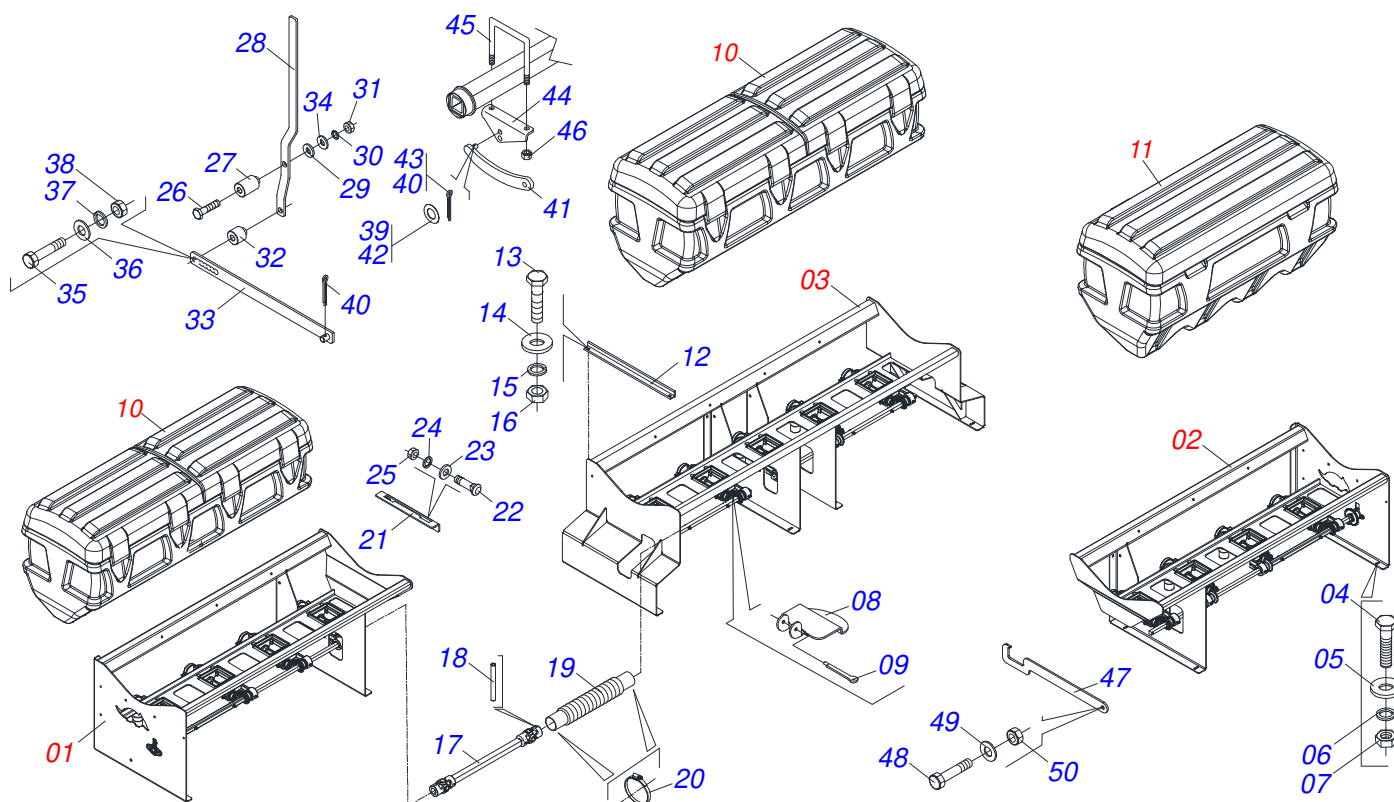


Item	Code	Description	See page	QT
001	0511053051	RIGHT BEAM SUPPORT WITH DISTRIBUTOR		01
002	0511053052	LEFT BEAM SUPPORT WITH DISTRIBUTOR		01
003	0511053053	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01
004	0503010849	3/8" X 1-1/2" BOLT		16
005	0501010984	FLAT WASHER		32
006	0503010025	3/8" SPRING WASHER		16
007	0503010026	3/8" NUT		16
008	0503034396	FERTILIZER SIDE COVER		15
009	0503010362	1/8" X 1.1/4" COTTERPIN		15
010	0503061985	FERTILIZER HOPPER WITH 5 TRUNNELS	135	02
011	0503062169	SILO FERTILIZER 6 MOUTHS MOUNTED	136	01
012	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
013	0503010849	3/8" X 1-1/2" BOLT		12
014	0501010984	FLAT WASHER		24
015	0503010025	3/8" SPRING WASHER		12
016	0503010026	3/8" NUT		12
017	0503062562	CARDAN TERMINAL		02
018	0503011855	0.2" X 1.8" SPRING PIN		04
019	0503030331	1.2" X 1.2" X 12.2" HOSE		02
020	0503010243	CLAMP		04
021	0551019156	GEAR BOX LEVER LOCK		02
022	0503011953	5/16" X 1" BOLT		04
023	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
024	0503010179	5/16" ZN SPRING WASHER		04
025	0503010337	5/16" NUT		04
026	0503010847	1/2" X 3.1/4" BOLT		02
027	0551019168	SLEEVE		02
028	0551019160	LEVER		02
029	0511017302	FLAT WASHER		02
030	0503010019	1/2" SPRING WASHER		02
031	0503010060	1/2" NUT		02

Item	Code	Description	See page	QT
032	0551019167	SLEEVE UNION		02
033	0511069676	INNER LEVER		02
034	0511017302	FLAT WASHER		02
035	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
036	0511017302	FLAT WASHER		02
037	0503010019	1/2" SPRING WASHER		02
038	0503010060	1/2" NUT		02
039	0501013518	FLAT WASHER		02
040	0503010140	1/8" X 3/4" COTTERPIN		02
041	0511069678	LH LOWER LEVER		02
042	0501013518	FLAT WASHER		02
043	0503010140	1/8" X 3/4" COTTERPIN		04
044	0551019159	LEVER FIXER BODY		02
045	0561016468	FASTENER		02
046	0503011336	1/2" HEX SELF ADJUSTING NUT		04
047	0571013471	PLATFORM FIXER LOCK		03
048	0501010096	3/8" X 2" BOLT		03
049	0501010984	FLAT WASHER		03
050	0503013357	3/8" SELF-ADJUSTING NUT		03

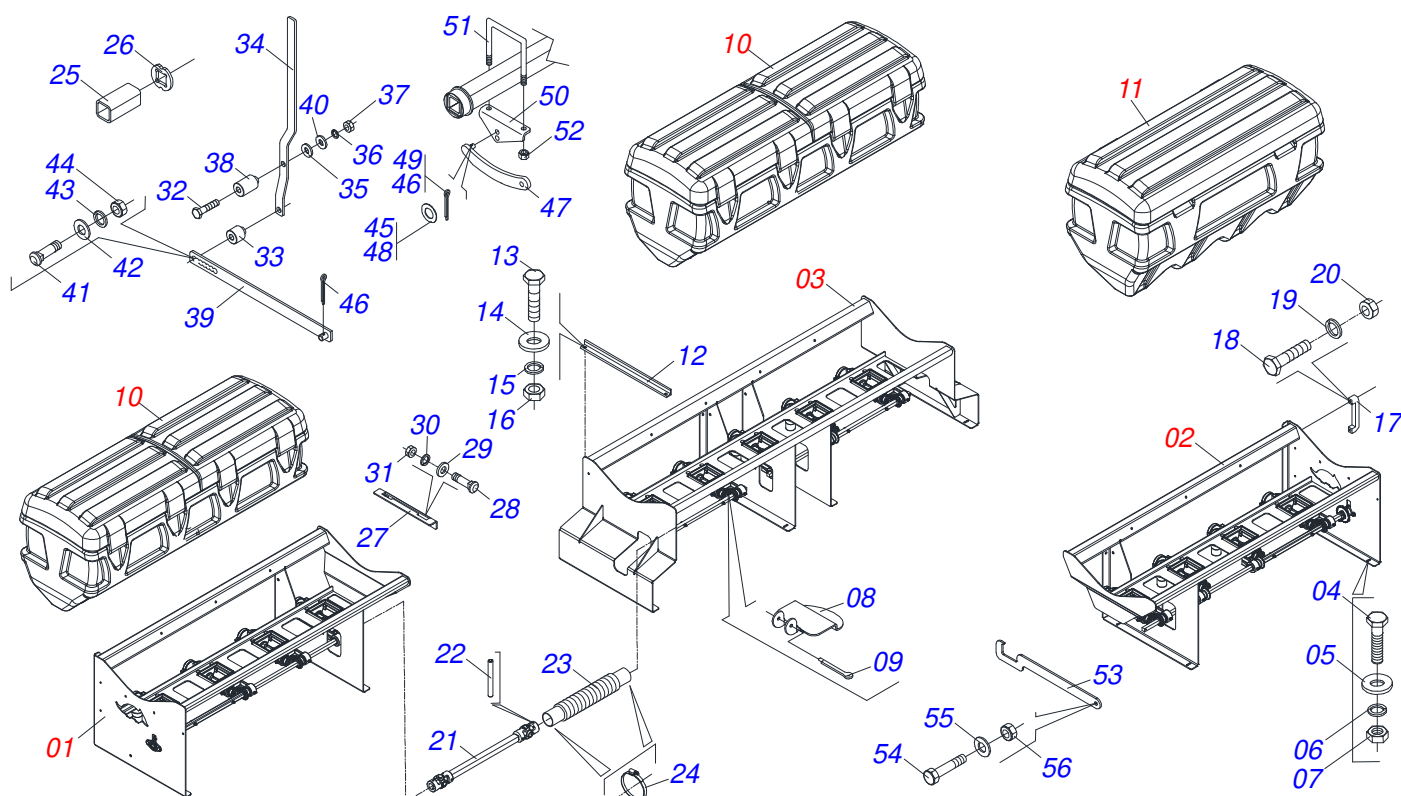


Item	Code	Description	See page	QT
001	0511053191	RIGH BEAM SUPPORT WITH DISTRIBUTOR		01
002	0511053192	LEFT BEAM SUPPORT WITH DISTRIBUTOR		01
003	0511053193	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01
004	0503010849	3/8" X 1-1/2" BOLT		16
005	0501010984	FLAT WASHER		32
006	0503010025	3/8" SPRING WASHER		16
007	0503010026	3/8" NUT		16
008	0503034396	FERTILIZER SIDE COVER		15
009	0503010362	1/8" X 1.1/4" COTTERPIN		15
010	0503061985	FERTILIZER HOPPER WITH 5 TRUNNELS	135	02
011	0503062169	SILO FERTILIZER 6 MOUTHS MOUNTED	136	01
012	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
013	0503010849	3/8" X 1-1/2" BOLT		12
014	0501010984	FLAT WASHER		24
015	0503010025	3/8" SPRING WASHER		12
016	0503010026	3/8" NUT		12
017	0503011957	NYLON LUG		02
018	0503010371	5/16" X 1" BOLT		04
019	0503010179	5/16" ZN SPRING WASHER		04
020	0503010337	5/16" NUT		04
021	0503062208	CARDAN TERMINAL		02
022	0503011855	0.2" X 1.8" SPRING PIN		04
023	0503030331	1.2" X 1.2" X 12.2" HOSE		02
024	0503010243	CLAMP		04
025	0551018055	22,65 X 60 SLEEVE		02
026	0521014167	CONE LOCK		02
027	0551019156	GEAR BOX LEVER LOCK		02
028	0503011953	5/16" X 1" BOLT		04
029	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
030	0503010179	5/16" ZN SPRING WASHER		04
031	0503010337	5/16" NUT		04

Item	Code	Description	See page	QT
032	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02
033	0561016797	SLEEVE UNION LEVER ARM/DESARM		02
034	0561016800	ARM/DISARMENT LEVER		02
035	0511017302	FLAT WASHER		02
036	0503010019	1/2" SPRING WASHER		02
037	0503010060	1/2" NUT		02
038	0581011541	ARTICULAT SLEEVE		02
039	0511069676	INNER LEVER		02
040	0511017302	FLAT WASHER		02
041	0503011082	C1/2" X 1.3/4" SCREW		02
042	0511017302	FLAT WASHER		02
043	0503010019	1/2" SPRING WASHER		02
044	0503010060	1/2" NUT		02
045	0501013518	FLAT WASHER		02
046	0503010140	1/8" X 3/4" COTTERPIN		02
047	0511069678	LH LOWER LEVER		02
048	0501013518	FLAT WASHER		02
049	0503010140	1/8" X 3/4" COTTERPIN		04
050	0551019159	LEVER FIXER BODY		02
051	0561016468	FASTENER		02
052	0503011336	1/2" HEX SELF ADJUSTING NUT		04
053	0571013471	PLATFORM FIXER LOCK		03
054	0501010096	3/8" X 2" BOLT		03
055	0501010984	FLAT WASHER		03
056	0503013357	3/8" SELF-ADJUSTING NUT		03

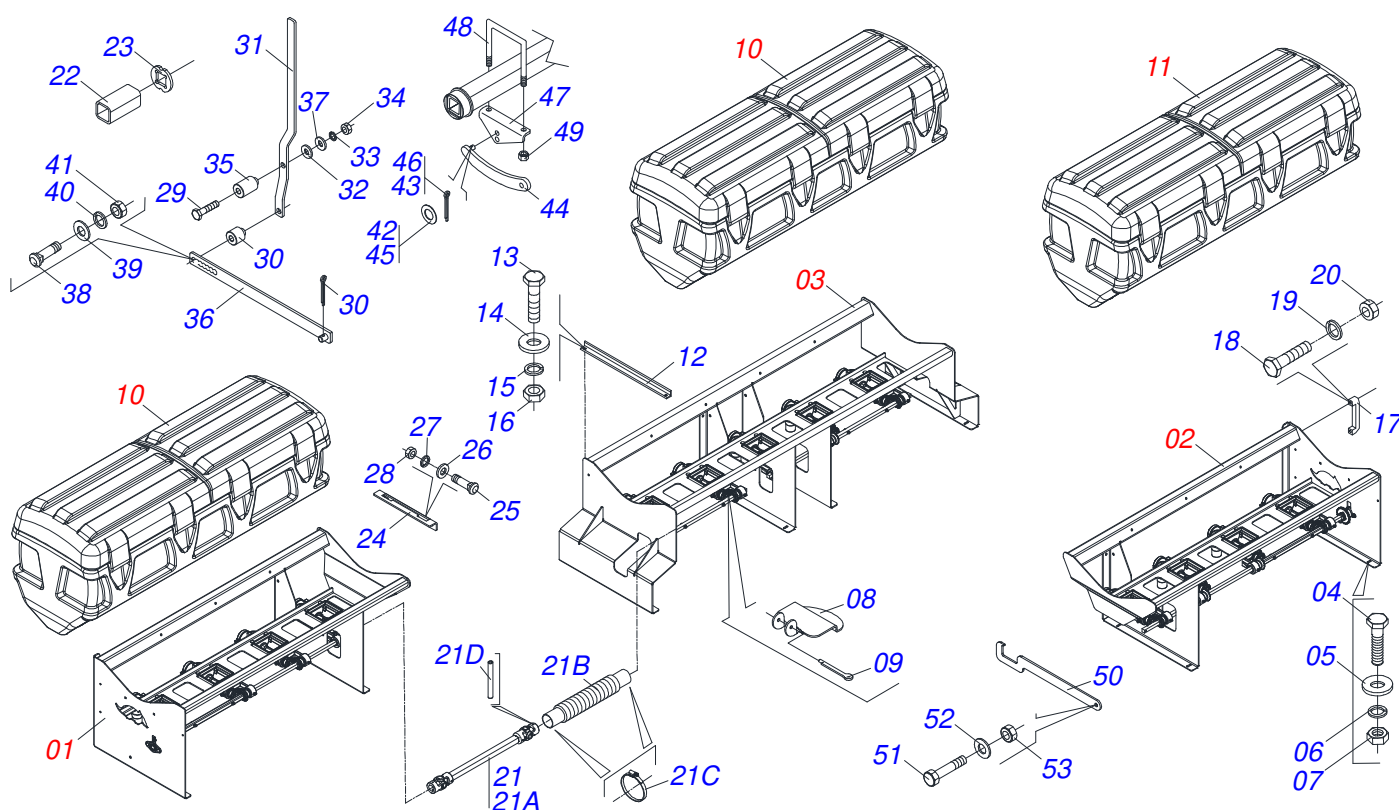


Item	Code	Description	See page	QT
001	0511058116	RH BEAM SUPPORT & METERING		01
002	0511058117	LH BEAM SUPPORT & METERING		01
003	0511058149	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01
004	0503010849	3/8" X 1-1/2" BOLT		16
005	0501010984	FLAT WASHER		32
006	0503010025	3/8" SPRING WASHER		16
007	0503010026	3/8" NUT		16
008	0503034396	FERTILIZER SIDE COVER		16
009	0503010362	1/8" X 1.1/4" COTTERPIN		16
010	0503061985	FERTILIZER HOPPER WITH 5 TRUNNELS	135	02
011	0503062169	SILO FERTILIZER 6 MOUTHS MOUNTED	136	01
012	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
013	0503010849	3/8" X 1-1/2" BOLT		12
014	0501010984	FLAT WASHER		24
015	0503010025	3/8" SPRING WASHER		12
016	0503010026	3/8" NUT		12
017	0503011957	NYLON LUG		02
018	0503010371	5/16" X 1" BOLT		04
019	0503010179	5/16" ZN SPRING WASHER		04
020	0503010337	5/16" NUT		04
021	0511059263	TRANSMISSION		02
021A	0503011855	0.2" X 1.8" SPRING PIN		02
021B	0503030331	1.2" X 1.2" X 12.2" HOSE		01
021C	0503010243	CLAMP		02
021D	0503062562	CARDAN TERMINAL		01
022	0551018055	22,65 X 60 SLEEVE		02
023	0521014167	CONE LOCK		02
024	0551019156	GEAR BOX LEVER LOCK		02
025	0503011953	5/16" X 1" BOLT		04
026	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
027	0503010179	5/16" ZN SPRING WASHER		04

Item	Code	Description	See page	QT
028	0503010337	5/16" NUT		04
029	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02
030	0561016797	SLEEVE UNION LEVER ARM/DESARM		02
031	0561016800	ARM/DISARMENT LEVER		02
032	0511017302	FLAT WASHER		02
033	0503010019	1/2" SPRING WASHER		02
034	0503010060	1/2" NUT		02
035	0581011541	ARTICULAT SLEEVE		02
036	0511069676	INNER LEVER		02
037	0511017302	FLAT WASHER		02
038	0503011082	C1/2" X 1.3/4" SCREW		02
039	0511017302	FLAT WASHER		02
040	0503010019	1/2" SPRING WASHER		02
041	0503010060	1/2" NUT		02
042	0501013518	FLAT WASHER		02
043	0503010140	1/8" X 3/4" COTTERPIN		02
044	0511069678	LH LOWER LEVER		02
045	0501013518	FLAT WASHER		02
046	0503010140	1/8" X 3/4" COTTERPIN		04
047	0551019159	LEVER FIXER BODY		02
048	0561016468	FASTENER		02
049	0503011336	1/2" HEX SELF ADJUSTING NUT		04
050	0571013471	PLATFORM FIXER LOCK		03
051	0501010096	3/8" X 2" BOLT		03
052	0501010984	FLAT WASHER		03
053	0503013357	3/8" SELF-ADJUSTING NUT		03

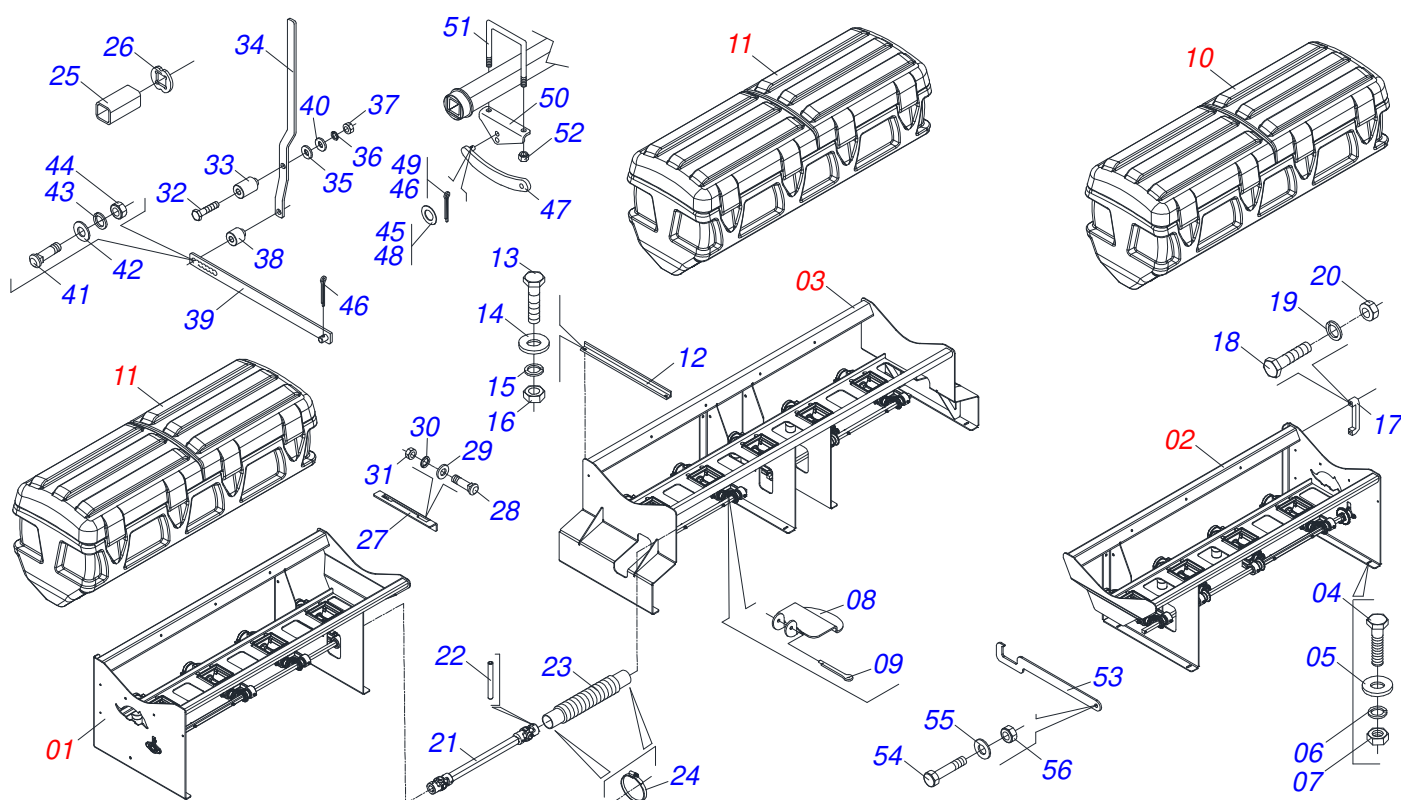


Item	Code	Description	See page	QT
001	0511058950	RH BEAM SUPPORT & METERING		01
002	0511058951	LH BEAM SUPPORT & METERING		01
003	0511058952	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01
004	0503010849	3/8" X 1-1/2" BOLT		20
005	0501010984	FLAT WASHER		40
006	0503010025	3/8" SPRING WASHER		20
007	0503010026	3/8" NUT		20
008	0503034396	FERTILIZER SIDE COVER		16
009	0503010362	1/8" X 1.1/4" COTTERPIN		16
010	0503061985	FERTILIZER HOPPER WITH 5 TRUNNELS	135	01
011	0503062169	SILO FERTILIZER 6 MOUTHS MOUNTED	136	02
012	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
013	0503010849	3/8" X 1-1/2" BOLT		12
014	0501010984	FLAT WASHER		24
015	0503010025	3/8" SPRING WASHER		12
016	0503010026	3/8" NUT		12
017	0503011957	NYLON LUG		02
018	0503010371	5/16" X 1" BOLT		04
019	0503010179	5/16" ZN SPRING WASHER		04
020	0503010337	5/16" NUT		04
021	0503062208	CARDAN TERMINAL		02
022	0503011855	0.2" X 1.8" SPRING PIN		04
023	0503030331	1.2" X 1.2" X 12.2" HOSE		02
024	0503010243	CLAMP		04
025	0551018055	22,65 X 60 SLEEVE		02
026	0521014167	CONE LOCK		02
027	0551019156	GEAR BOX LEVER LOCK		02
028	0503011953	5/16" X 1" BOLT		04
029	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
030	0503010179	5/16" ZN SPRING WASHER		04
031	0503010337	5/16" NUT		04

Item	Code	Description	See page	QT
032	0503010847	1/2" X 3.1/4" BOLT		02
033	0551019168	SLEEVE		02
034	0551019160	LEVER		02
035	0511017302	FLAT WASHER		02
036	0503010019	1/2" SPRING WASHER		02
037	0503010060	1/2" NUT		02
038	0551019167	SLEEVE UNION		02
039	0511069676	INNER LEVER		02
040	0511017302	FLAT WASHER		02
041	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
042	0511017302	FLAT WASHER		02
043	0503010019	1/2" SPRING WASHER		02
044	0503010060	1/2" NUT		02
045	0501013518	FLAT WASHER		02
046	0503010140	1/8" X 3/4" COTTERPIN		02
047	0511069678	LH LOWER LEVER		02
048	0501013518	FLAT WASHER		02
049	0503010140	1/8" X 3/4" COTTERPIN		04
050	0551019159	LEVER FIXER BODY		02
051	0561016468	FASTENER		02
052	0503011336	1/2" HEX SELF ADJUSTING NUT		04
053	0571015891	PLATFORM FIXER LOCK		03
054	0501010096	3/8" X 2" BOLT		03
055	0501010984	FLAT WASHER		03
056	0503013357	3/8" SELF-ADJUSTING NUT		03

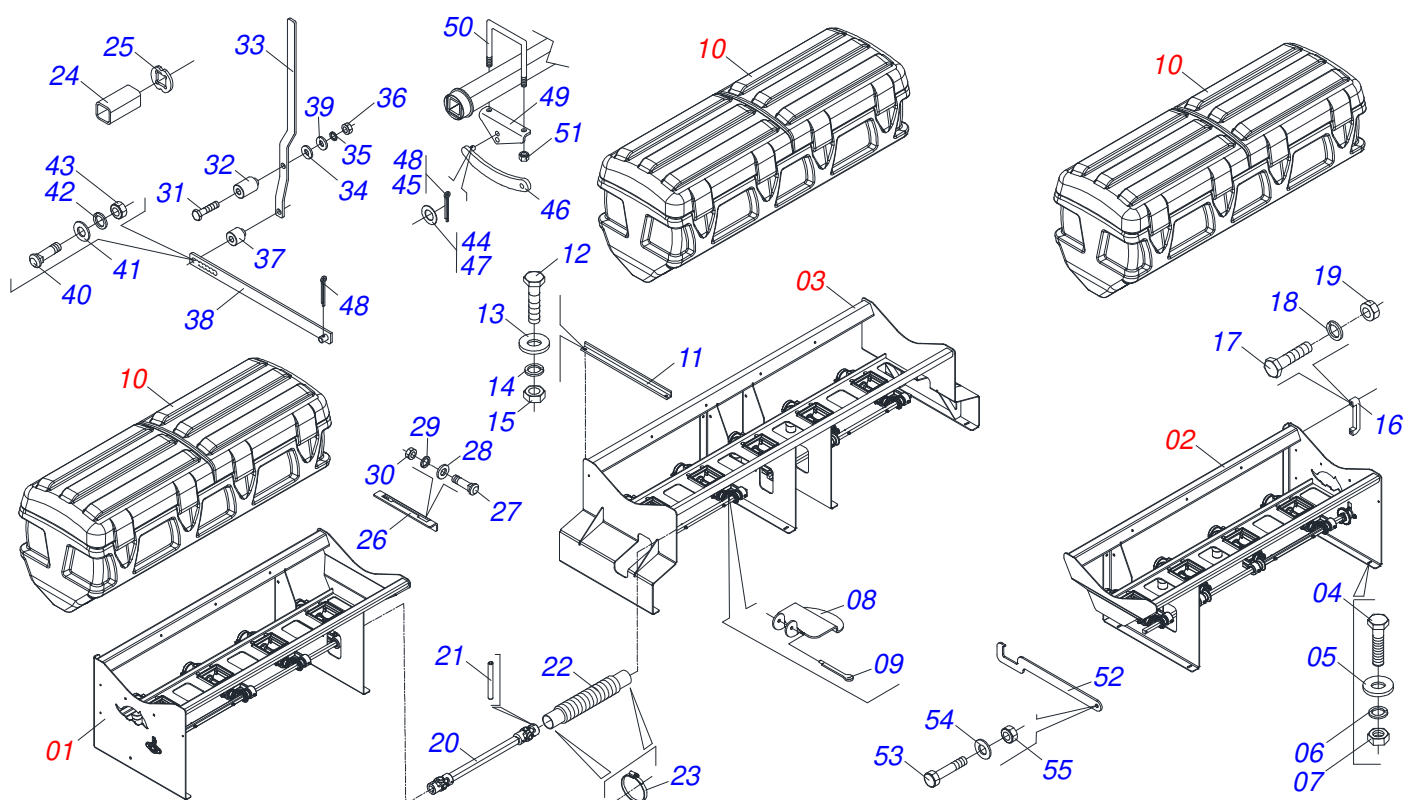


Item	Code	Description	See page	QT
001	0511053137	RIGHT BEAM SUPPORT WITH DISTRIBUTOR		01
002	0511053138	LEFT BEAM SUPPORT WITH DISTRIBUTOR		01
003	0511053053	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01
004	0503010849	3/8" X 1-1/2" BOLT		20
005	0501010984	FLAT WASHER		40
006	0503010025	3/8" SPRING WASHER		20
007	0503010026	3/8" NUT		20
008	0503034396	FERTILIZER SIDE COVER		17
009	0503010362	1/8" X 1.1/4" COTTERPIN		17
010	0503062169	SILO FERTILIZER 6 MOUTHS MOUNTED	136	03
011	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
012	0503010849	3/8" X 1-1/2" BOLT		12
013	0501010984	FLAT WASHER		24
014	0503010025	3/8" SPRING WASHER		12
015	0503010026	3/8" NUT		12
016	0503011957	NYLON LUG		02
017	0503010371	5/16" X 1" BOLT		04
018	0503010179	5/16" ZN SPRING WASHER		04
019	0503010337	5/16" NUT		04
020	0503062562	CARDAN TERMINAL		02
021	0503011855	0.2" X 1.8" SPRING PIN		04
022	0503030331	1.2" X 1.2" X 12.2" HOSE		02
023	0503010243	CLAMP		04
024	0551018055	22,65 X 60 SLEEVE		02
025	0521014167	CONE LOCK		02
026	0551019156	GEAR BOX LEVER LOCK		02
027	0503011953	5/16" X 1" BOLT		04
028	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
029	0503010179	5/16" ZN SPRING WASHER		04
030	0503010337	5/16" NUT		04
031	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02

Item	Code	Description	See page	QT
032	0581011541	ARTICULAT SLEEVE		02
033	0561016800	ARM/DISARMMENT LEVER		02
034	0511017302	FLAT WASHER		02
035	0503010019	1/2" SPRING WASHER		02
036	0503010060	1/2" NUT		02
037	0561016797	SLEEVE UNION LEVER ARM/DESARM		02
038	0511069676	INNER LEVER		02
039	0511017302	FLAT WASHER		02
040	0503011082	C1/2" X 1.3/4" SCREW		02
041	0511017302	FLAT WASHER		02
042	0503010019	1/2" SPRING WASHER		02
043	0503010060	1/2" NUT		02
044	0501013518	FLAT WASHER		02
045	0503010140	1/8" X 3/4" COTTERPIN		02
046	0511069678	LH LOWER LEVER		02
047	0501013518	FLAT WASHER		02
048	0503010140	1/8" X 3/4" COTTERPIN		04
049	0551019159	LEVER FIXER BODY		02
050	0561016468	FASTENER		02
051	0503011336	1/2" HEX SELF ADJUSTING NUT		04
052	0571015891	PLATFORM FIXER LOCK		03
053	0501010096	3/8" X 2" BOLT		03
054	0501010984	FLAT WASHER		03
055	0503013357	3/8" SELF-ADJUSTING NUT		03

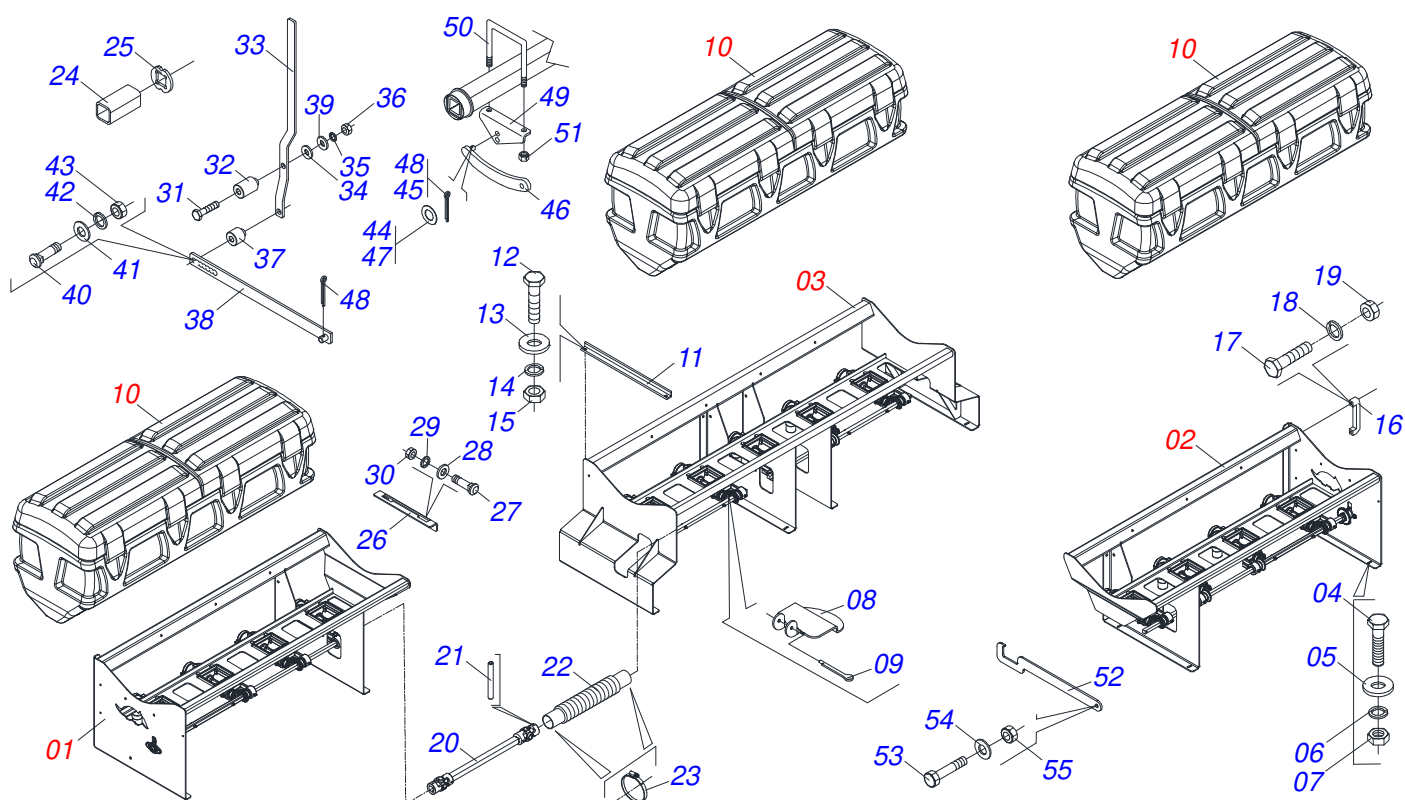


Item	Code	Description	See page	QT
001	0511056159	RH BEAM SUPPORT & METERING		01
002	0511056160	LH BEAM SUPPORT & METERING		01
003	0511056315	BEAM SUPPORT & METERING		01
004	0503010849	3/8" X 1-1/2" BOLT		20
005	0501010984	FLAT WASHER		40
006	0503010025	3/8" SPRING WASHER		20
007	0503010026	3/8" NUT		20
008	0503034396	FERTILIZER SIDE COVER		17
009	0503010362	1/8" X 1.1/4" COTTERPIN		17
010	0503062169	SILO FERTILIZER 6 MOUTHS MOUNTED	136	03
011	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
012	0503010849	3/8" X 1-1/2" BOLT		12
013	0501010984	FLAT WASHER		24
014	0503010025	3/8" SPRING WASHER		12
015	0503010026	3/8" NUT		12
016	0503011957	NYLON LUG		02
017	0503010371	5/16" X 1" BOLT		04
018	0503010179	5/16" ZN SPRING WASHER		04
019	0503010337	5/16" NUT		04
020	0503062208	CARDAN TERMINAL		02
021	0503011855	0.2" X 1.8" SPRING PIN		04
022	0503030331	1.2" X 1.2" X 12.2" HOSE		02
023	0503010243	CLAMP		04
024	0551018055	22,65 X 60 SLEEVE		02
025	0521014167	CONE LOCK		02
026	0551019156	GEAR BOX LEVER LOCK		02
027	0503011953	5/16" X 1" BOLT		04
028	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
029	0503010179	5/16" ZN SPRING WASHER		04
030	0503010337	5/16" NUT		04
031	0503010847	1/2" X 3.1/4" BOLT		02

Item	Code	Description	See page	QT
032	0551019168	SLEEVE		02
033	0551019160	LEVER		02
034	0511017302	FLAT WASHER		02
035	0503010019	1/2" SPRING WASHER		02
036	0503010060	1/2" NUT		02
037	0551019167	SLEEVE UNION		02
038	0511069676	INNER LEVER		02
039	0511017302	FLAT WASHER		02
040	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
041	0511017302	FLAT WASHER		02
042	0503010019	1/2" SPRING WASHER		02
043	0503010060	1/2" NUT		02
044	0501013518	FLAT WASHER		02
045	0503010140	1/8" X 3/4" COTTERPIN		02
046	0511069678	LH LOWER LEVER		02
047	0501013518	FLAT WASHER		02
048	0503010140	1/8" X 3/4" COTTERPIN		04
049	0551019159	LEVER FIXER BODY		02
050	0561016468	FASTENER		02
051	0503011336	1/2" HEX SELF ADJUSTING NUT		04
052	0571013471	PLATFORM FIXER LOCK		03
053	0501010096	3/8" X 2" BOLT		03
054	0501010984	FLAT WASHER		03
055	0503013357	3/8" SELF-ADJUSTING NUT		03

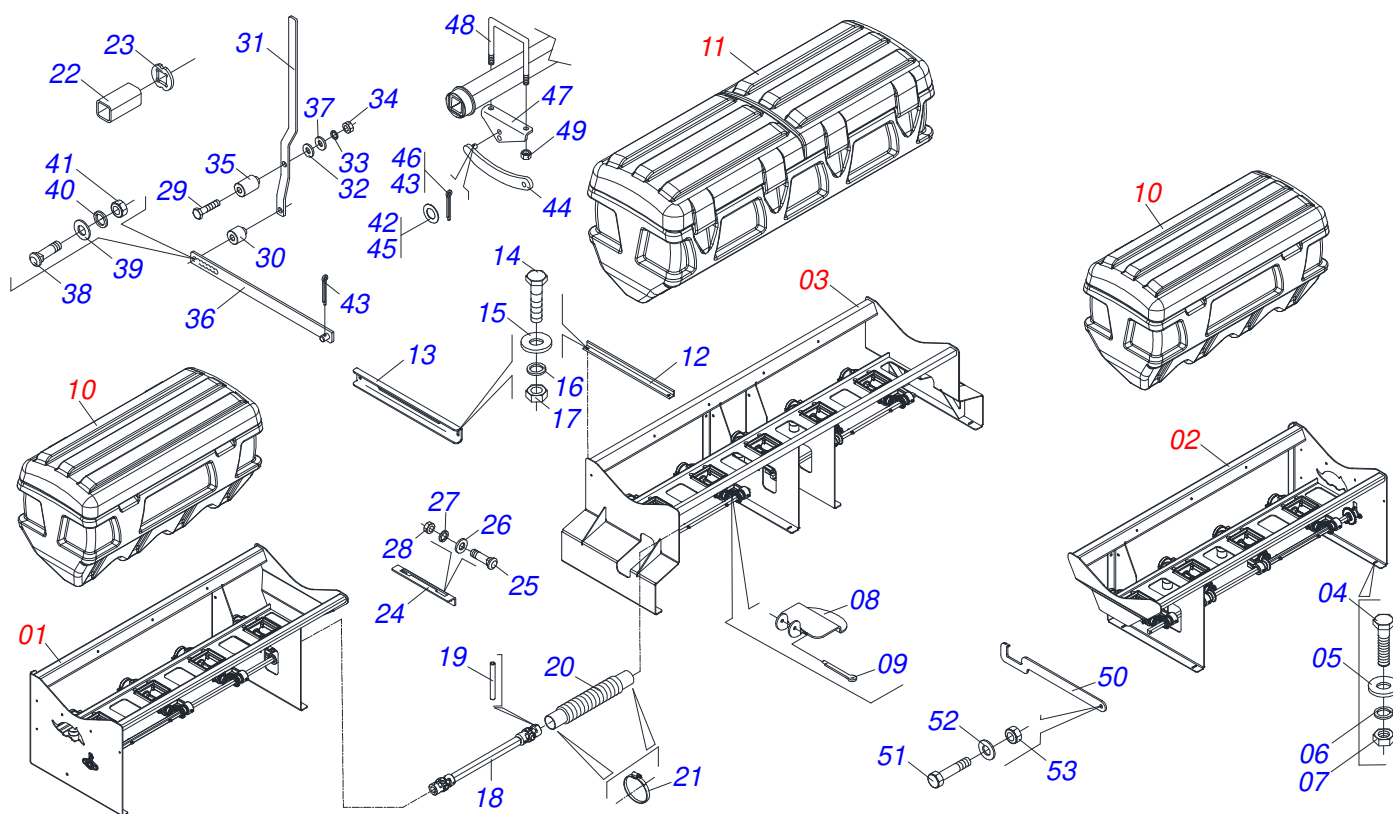


Item	Code	Description	See page	QT
001	0511056159	RH BEAM SUPPORT & METERING		01
002	0511056160	LH BEAM SUPPORT & METERING		01
003	0511056066	BEAM SUPPORT & METERING		01
004	0503010849	3/8" X 1-1/2" BOLT		20
005	0501010984	FLAT WASHER		40
006	0503010025	3/8" SPRING WASHER		20
007	0503010026	3/8" NUT		20
008	0503034396	FERTILIZER SIDE COVER		18
009	0503010362	1/8" X 1.1/4" COTTERPIN		18
010	0503061984	FERTILIZER HOPPER WITH 4 TRUNNELS	134	02
011	0503062169	SILO FERTILIZER 6 MOUTHS MOUNTED	136	02
012	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
013	0571015546	FERTILIZER BEAM CLAMP		01
014	0503010849	3/8" X 1-1/2" BOLT		14
015	0501010984	FLAT WASHER		28
016	0503010025	3/8" SPRING WASHER		14
017	0503010026	3/8" NUT		14
018	0503062208	CARDAN TERMINAL		02
019	0503011855	0.2" X 1.8" SPRING PIN		04
020	0503030331	1.2" X 1.2" X 12.2" HOSE		02
021	0503010243	CLAMP		04
022	0551018055	22,65 X 60 SLEEVE		02
023	0521014167	CONE LOCK		02
024	0551019156	GEAR BOX LEVER LOCK		02
025	0503011953	5/16" X 1" BOLT		04
026	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
027	0503010179	5/16" ZN SPRING WASHER		04
028	0503010337	5/16" NUT		04
029	0503010847	1/2" X 3.1/4" BOLT		02
030	0551019168	SLEEVE		02
031	0551019160	LEVER		02

Item	Code	Description	See page	QT
032	0511017302	FLAT WASHER		02
033	0503010019	1/2" SPRING WASHER		02
034	0503010060	1/2" NUT		02
035	0551019167	SLEEVE UNION		02
036	0511069676	INNER LEVER		02
037	0511017302	FLAT WASHER		02
038	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
039	0511017302	FLAT WASHER		02
040	0503010019	1/2" SPRING WASHER		02
041	0503010060	1/2" NUT		02
042	0501013518	FLAT WASHER		02
043	0503010140	1/8" X 3/4" COTTERPIN		02
044	0511069678	LH LOWER LEVER		02
045	0501013518	FLAT WASHER		02
046	0503010140	1/8" X 3/4" COTTERPIN		04
047	0551019159	LEVER FIXER BODY		02
048	0561016468	FASTENER		02
049	0503011336	1/2" HEX SELF ADJUSTING NUT		04
050	0571013471	PLATFORM FIXER LOCK		03
051	0501010096	3/8" X 2" BOLT		03
052	0501010984	FLAT WASHER		03
053	0503013357	3/8" SELF-ADJUSTING NUT		03

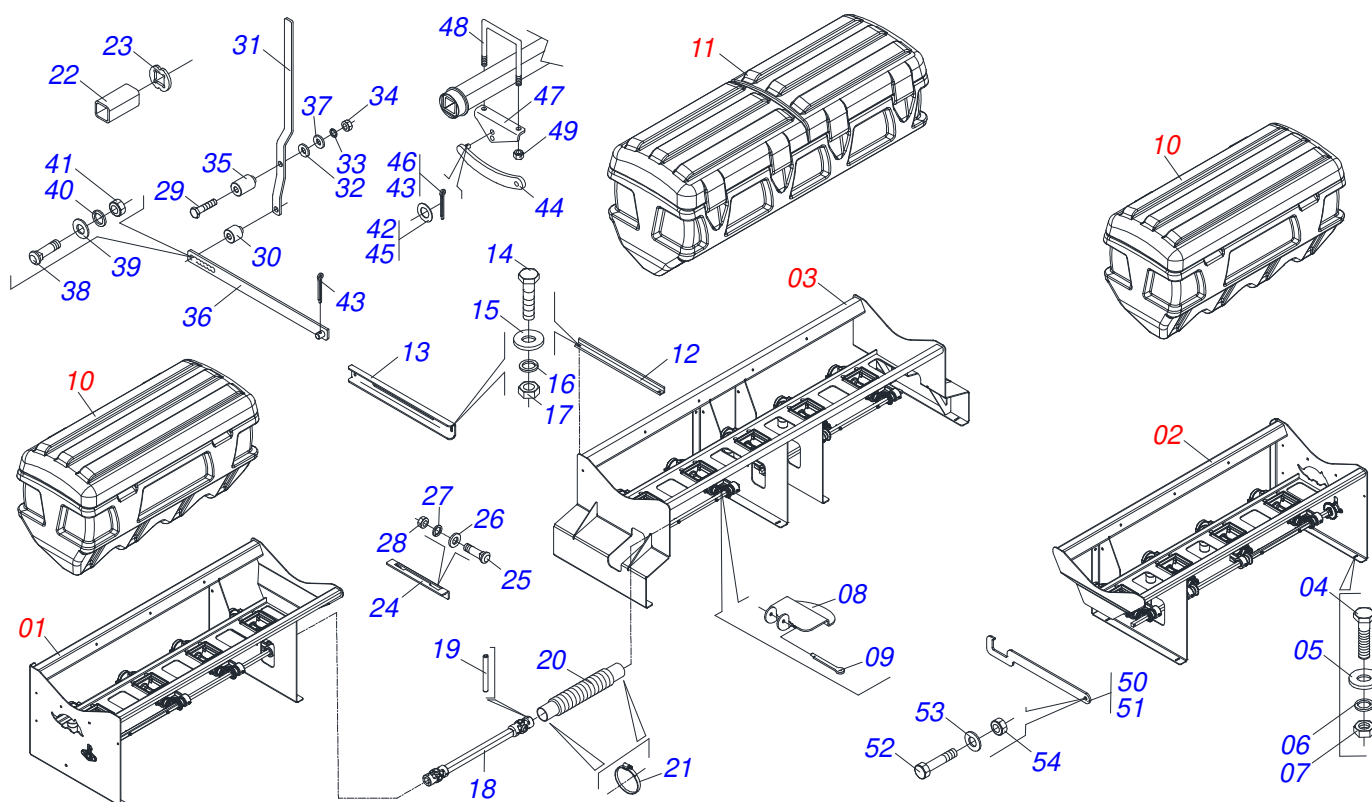


Item	Code	Description	See page	QT
001	0511056159	RH BEAM SUPPORT & METERING		01
002	0511056160	LH BEAM SUPPORT & METERING		01
003	0511055267	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01
004	0503010849	3/8" X 1-1/2" BOLT		20
005	0501010984	FLAT WASHER		40
006	0503010025	3/8" SPRING WASHER		20
007	0503010026	3/8" NUT		20
008	0503034396	FERTILIZER SIDE COVER		19
009	0503010362	1/8" X 1.1/4" COTTERPIN		19
010	0503061984	FERTILIZER HOPPER WITH 4 TRUNNELS	134	02
011	0503062169	SILO FERTILIZER 6 MOUTHS MOUNTED	136	02
012	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
013	0571015546	FERTILIZER BEAM CLAMP		01
014	0503010849	3/8" X 1-1/2" BOLT		14
015	0501010984	FLAT WASHER		28
016	0503010025	3/8" SPRING WASHER		14
017	0503010026	3/8" NUT		14
018	0503062208	CARDAN TERMINAL		02
019	0503011855	0.2" X 1.8" SPRING PIN		04
020	0503030331	1.2" X 1.2" X 12.2" HOSE		02
021	0503010243	CLAMP		04
022	0551018055	22,65 X 60 SLEEVE		02
023	0521014167	CONE LOCK		02
024	0551019156	GEAR BOX LEVER LOCK		02
025	0503011953	5/16" X 1" BOLT		04
026	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
027	0503010179	5/16" ZN SPRING WASHER		04
028	0503010337	5/16" NUT		04
029	0503010847	1/2" X 3.1/4" BOLT		02
030	0551019168	SLEEVE		02
031	0551019160	LEVER		02

Item	Code	Description	See page	QT
032	0511017302	FLAT WASHER		02
033	0503010019	1/2" SPRING WASHER		02
034	0503010060	1/2" NUT		02
035	0551019167	SLEEVE UNION		02
036	0511069676	INNER LEVER		02
037	0511017302	FLAT WASHER		02
038	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
039	0511017302	FLAT WASHER		02
040	0503010019	1/2" SPRING WASHER		02
041	0503010060	1/2" NUT		02
042	0501013518	FLAT WASHER		02
043	0503010140	1/8" X 3/4" COTTERPIN		02
044	0511069678	LH LOWER LEVER		02
045	0501013518	FLAT WASHER		02
046	0503010140	1/8" X 3/4" COTTERPIN		04
047	0551019159	LEVER FIXER BODY		02
048	0561016468	FASTENER		02
049	0503011336	1/2" HEX SELF ADJUSTING NUT		04
050	0571013471	PLATFORM FIXER LOCK		02
051	0571015891	PLATFORM FIXER LOCK		01
052	0501010096	3/8" X 2" BOLT		03
053	0501010984	FLAT WASHER		03
054	0503013357	3/8" SELF-ADJUSTING NUT		03

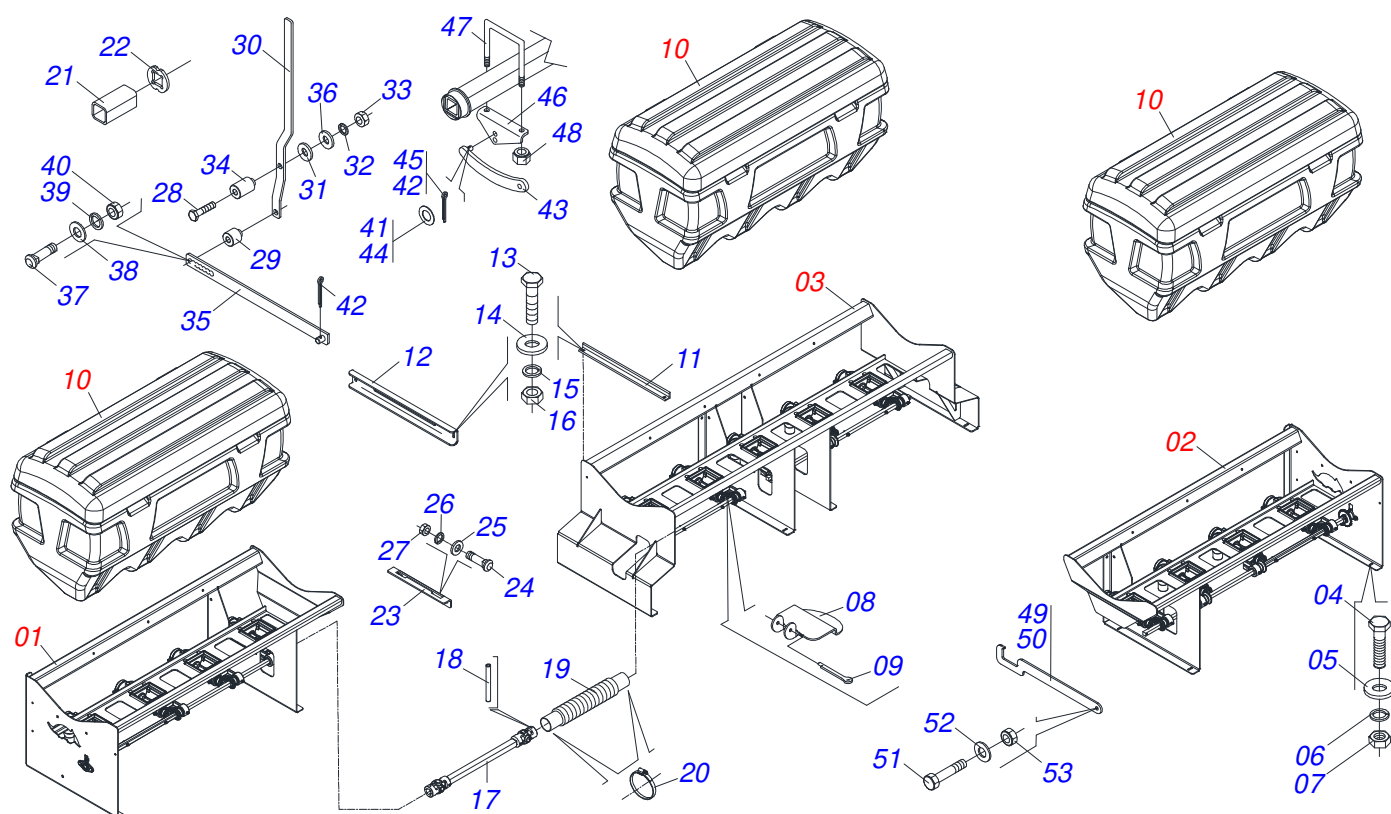


Item	Code	Description	See page	QT
001	0511055780	RH BEAM SUPPORT & METERING		01
002	0511055781	LH BEAM SUPPORT & METERING		01
003	0511056280	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01
004	0503010849	3/8" X 1-1/2" BOLT		20
005	0501010984	FLAT WASHER		40
006	0503010025	3/8" SPRING WASHER		20
007	0503010026	3/8" NUT		20
008	0503034396	FERTILIZER SIDE COVER		21
009	0503010362	1/8" X 1.1/4" COTTERPIN		21
010	0503061984	FERTILIZER HOPPER WITH 4 TRUNNELS	134	06
011	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
012	0571015546	FERTILIZER BEAM CLAMP		03
013	0503010849	3/8" X 1-1/2" BOLT		18
014	0501010984	FLAT WASHER		36
015	0503010025	3/8" SPRING WASHER		18
016	0503010026	3/8" NUT		18
017	0503062562	CARDAN TERMINAL		02
018	0503011855	0.2" X 1.8" SPRING PIN		04
019	0503030331	1.2" X 1.2" X 12.2" HOSE		02
020	0503010243	CLAMP		04
021	0551018055	22,65 X 60 SLEEVE		02
022	0521014167	CONE LOCK		02
023	0551019156	GEAR BOX LEVER LOCK		02
024	0503011953	5/16" X 1" BOLT		04
025	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
026	0503010179	5/16" ZN SPRING WASHER		04
027	0503010337	5/16" NUT		04
028	0503010847	1/2" X 3.1/4" BOLT		02
029	0551019168	SLEEVE		02
030	0551019160	LEVER		02
031	0511017302	FLAT WASHER		02

Item	Code	Description	See page	QT
032	0503010019	1/2" SPRING WASHER		02
033	0503010060	1/2" NUT		02
034	0551019167	SLEEVE UNION		02
035	0511069676	INNER LEVER		02
036	0511017302	FLAT WASHER		02
037	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
038	0511017302	FLAT WASHER		02
039	0503010019	1/2" SPRING WASHER		02
040	0503010060	1/2" NUT		02
041	0501013518	FLAT WASHER		02
042	0503010140	1/8" X 3/4" COTTERPIN		02
043	0511069678	LH LOWER LEVER		02
044	0501013518	FLAT WASHER		02
045	0503010140	1/8" X 3/4" COTTERPIN		04
046	0551019159	LEVER FIXER BODY		02
047	0561016468	FASTENER		02
048	0503011336	1/2" HEX SELF ADJUSTING NUT		04
049	0571013471	PLATFORM FIXER LOCK		02
050	0571015891	PLATFORM FIXER LOCK		01
051	0501010096	3/8" X 2" BOLT		03
052	0501010984	FLAT WASHER		03
053	0503013357	3/8" SELF-ADJUSTING NUT		03

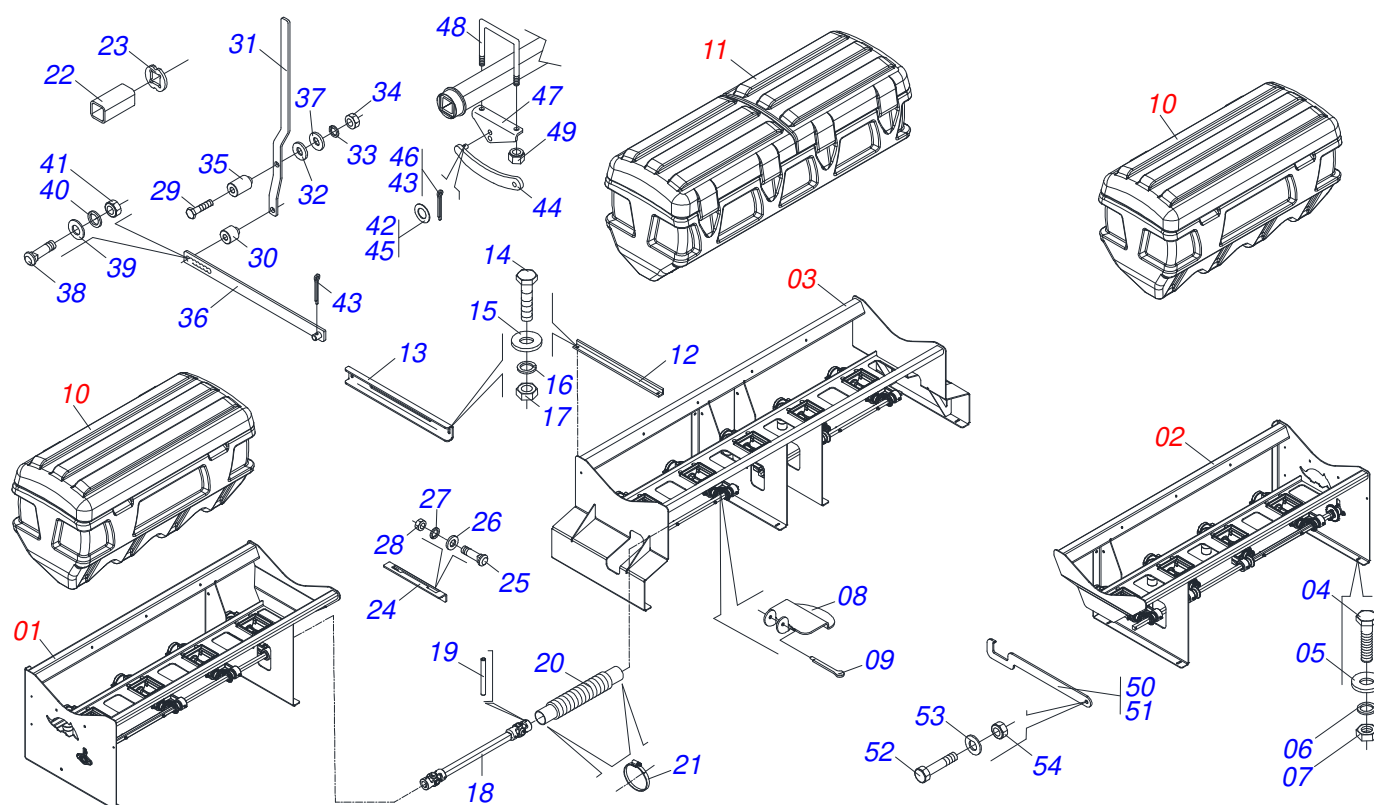


Item	Code	Description	See page	QT
001	0511055780	RH BEAM SUPPORT & METERING		01
002	0511055781	LH BEAM SUPPORT & METERING		01
003	0511055267	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01
004	0503010849	3/8" X 1-1/2" BOLT		20
005	0501010984	FLAT WASHER		40
006	0503010025	3/8" SPRING WASHER		20
007	0503010026	3/8" NUT		20
008	0503034396	FERTILIZER SIDE COVER		21
009	0503010362	1/8" X 1.1/4" COTTERPIN		21
010	0503061984	FERTILIZER HOPPER WITH 4 TRUNNELS	134	04
011	0503061985	FERTILIZER HOPPER WITH 5 TRUNNELS	135	02
012	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
013	0571015546	FERTILIZER BEAM CLAMP		03
014	0503010849	3/8" X 1-1/2" BOLT		18
015	0501010984	FLAT WASHER		36
016	0503010025	3/8" SPRING WASHER		18
017	0503010026	3/8" NUT		18
018	0503062208	CARDAN TERMINAL		02
019	0503011855	0.2" X 1.8" SPRING PIN		04
020	0503030331	1.2" X 1.2" X 12.2" HOSE		02
021	0503010243	CLAMP		04
022	0551018055	22,65 X 60 SLEEVE		02
023	0521014167	CONE LOCK		02
024	0551019156	GEAR BOX LEVER LOCK		02
025	0503011953	5/16" X 1" BOLT		04
026	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
027	0503010179	5/16" ZN SPRING WASHER		04
028	0503010337	5/16" NUT		04
029	0503010847	1/2" X 3.1/4" BOLT		02
030	0551019168	SLEEVE		02
031	0551019160	LEVER		02

Item	Code	Description	See page	QT
032	0511017302	FLAT WASHER		02
033	0503010019	1/2" SPRING WASHER		02
034	0503010060	1/2" NUT		02
035	0551019167	SLEEVE UNION		02
036	0511069676	INNER LEVER		02
037	0511017302	FLAT WASHER		02
038	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
039	0511017302	FLAT WASHER		02
040	0503010019	1/2" SPRING WASHER		02
041	0503010060	1/2" NUT		02
042	0501013518	FLAT WASHER		02
043	0503010140	1/8" X 3/4" COTTERPIN		02
044	0511069678	LH LOWER LEVER		02
045	0501013518	FLAT WASHER		02
046	0503010140	1/8" X 3/4" COTTERPIN		04
047	0551019159	LEVER FIXER BODY		02
048	0561016468	FASTENER		02
049	0503011336	1/2" HEX SELF ADJUSTING NUT		04
050	0571013471	PLATFORM FIXER LOCK		02
051	0571015891	PLATFORM FIXER LOCK		01
052	0501010096	3/8" X 2" BOLT		03
053	0501010984	FLAT WASHER		03
054	0503013357	3/8" SELF-ADJUSTING NUT		03

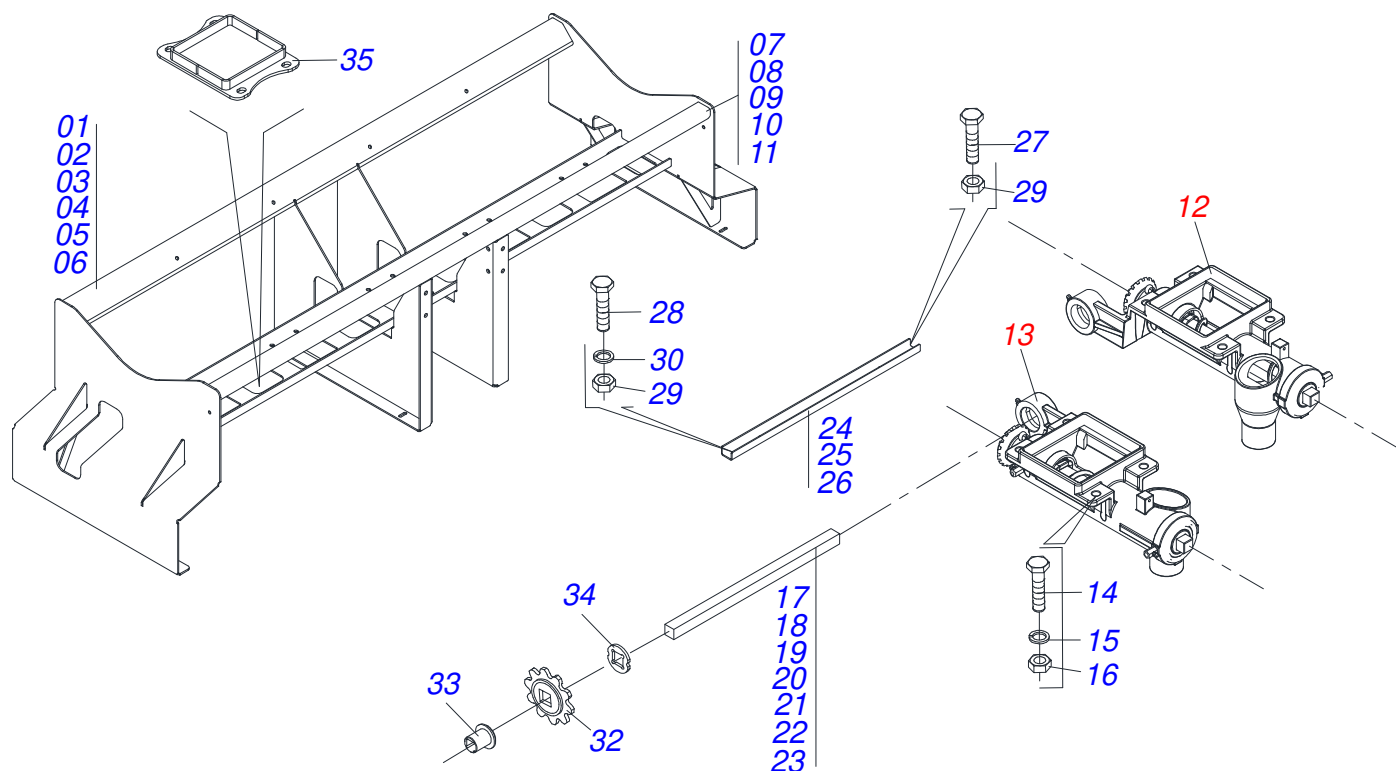

Item	Code	Description	See page	13	15	16	17	18	19	21	L
01	0511059279	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 5750		01	00	00	00	00	00	00	00
02	0511053053	SUPPORT CENTER BEAM WITH DISTRIBUTOR		00	01	00	00	00	00	00	00
03	0511058149	SUPPORT CENTER BEAM WITH DISTRIBUTOR		00	00	01	00	00	00	00	00
04	0521050249	SUPPORT CENTER BEAM WITH DISTRIBUTOR		00	00	00	01	01	00	00	00
05	0511054412	SUPPORT CENTER BEAM WITH DISTRIBUTOR		00	00	00	00	00	00	01	00
06	0511056280	SUPPORT CENTER BEAM WITH DISTRIBUTOR		00	00	00	00	00	00	00	01
07	0521066913	CENTER FERTILIZER SILO SUPPORT		01	00	00	00	00	00	00	00
08	0521066216	CENTER FERTILIZER BEAM SUPPORT		00	01	00	00	00	00	00	00
09	0521065393	CENTER FERTILIZER BEAM SUPPORT		00	00	01	01	01	00	00	00
10	0521064483	CENTER FERTILIZER BEAM SUPPORT		00	00	00	00	00	00	01	00
11	0521065204	CENTER FERTILIZER BEAM SUPPORT		00	00	00	00	00	00	00	01
12	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	131	03	02	03	03	03	03	03	03
13	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	132	02	03	03	03	03	04	04	04
14	0501010942	3/8" X 1-1/4" BOLT		20	20	24	24	24	28	28	28
15	0503011443	3/8" SPRING WASHER		20	20	24	24	24	28	28	28
16	0503010026	3/8" NUT		20	20	24	24	24	28	28	28
17	0581010471	SQUARE SHAFT		01	00	00	00	00	00	00	00
18	0581010470	SQUARE SHAFT		01	00	00	00	00	00	00	00
19	0571019653	SQUARE SHAFT		00	01	00	00	00	00	00	00
20	0571019652	SQUARE SHAFT		00	01	00	00	00	00	00	00
21	0581010700	SQUARE SHAFT		00	00	02	02	02	00	00	00
22	0571014897	SQUARE SHAFT		00	00	00	00	00	00	02	00
23	0571017077	SQUARE SHAFT		00	00	00	00	00	00	00	02
24	0571019828	LOCK AXLE		02	00	00	00	00	00	00	00
25	0571015966	LOCK AXLE		00	02	02	02	02	00	00	02
26	0571014856	LOCK AXLE		00	00	00	00	00	00	02	00
27	0503010365	NUT		04	00	00	00	00	00	00	00
28	0503810421	5/16" BOLT		00	04	04	02	02	02	02	02
29	0503013816	5/16" LOCKNUT		04	00	00	00	00	00	00	00
30	0503011444	SPRING WASHER		00	04	04	02	02	02	02	02
31	0503810337	5/16" NUT SA		00	04	04	02	02	02	02	02


Item	Code	Description	See page	13	15	16	17	18	19	21	L
32	1902010685	18Z CONICAL GEAR		05	05	06	06	06	07	07	
33	0503030275	AGRICULTURAL BEARING		05	05	06	06	06	07	07	
34	0521014167	CONE LOCK		00	04	04	04	04	06	00	
35	0511062163	FERTILIZER BEAM LOWER COVER		00	01	00	00	00	01	01	

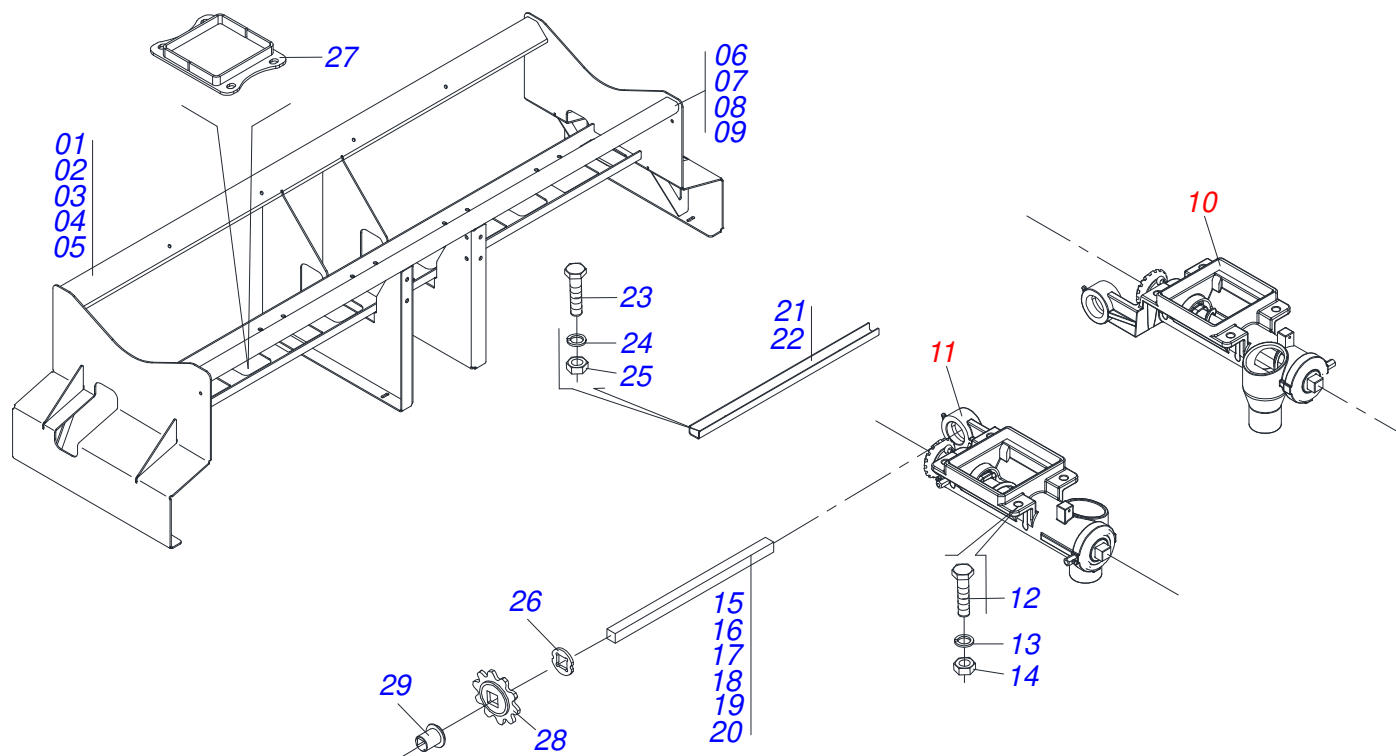

Item	Code	Description	See page	15	16	17	18	19	21	L
01	0511053193	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01	00	00	00	00	00	
02	0511058952	SUPPORT CENTER BEAM WITH DISTRIBUTOR		00	01	00	00	00	00	
03	0511056315	BEAM SUPPORT & METERING		00	00	01	00	00	00	
04	0511054412	SUPPORT CENTER BEAM WITH DISTRIBUTOR		00	00	00	01	01	00	
05	0511055267	SUPPORT CENTER BEAM WITH DISTRIBUTOR		00	00	00	00	00	01	
06	0521065393	CENTER FERTILIZER BEAM SUPPORT		01	00	01	00	00	00	
07	0521066223	CENTER FERTILIZER SILO SUPPORT		00	01	00	00	00	00	
08	0521064483	CENTER FERTILIZER BEAM SUPPORT		00	00	00	01	01	00	
09	0521064819	CENTER FERTILIZER SILO SUPPORT		00	00	00	00	00	01	
10	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	132	03	02	03	04	04	03	
11	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	131	02	02	02	03	03	04	
12	0501010942	3/8" X 1-1/4" BOLT		20	20	20	28	28	28	
13	0503011443	3/8" SPRING WASHER		20	20	20	28	28	28	
14	0503010026	3/8" NUT		20	20	20	28	28	28	
15	0581010699	SQUARE SHAFT		01	00	01	00	00	00	
16	0581010700	SQUARE SHAFT		01	00	01	00	00	00	
17	0581010699	SQUARE SHAFT		00	02	00	00	00	00	
18	0571014897	SQUARE SHAFT		00	00	00	02	02	00	
19	0571015892	SQUARE SHAFT		00	00	00	00	00	01	
20	0571015893	SQUARE SHAFT		00	00	00	00	00	01	
21	0571015966	LOCK AXLE		02	00	01	01	00	01	
22	0571014856	LOCK AXLE		00	01	00	00	01	00	
23	0503810421	5/16" BOLT		04	02	02	02	02	02	
24	0503011444	SPRING WASHER		04	02	02	02	02	02	
25	0503810337	5/16" NUT SA		04	02	02	02	02	02	
26	0521014167	CONE LOCK		04	04	04	04	04	04	
27	0511062163	FERTILIZER BEAM LOWER COVER		01	01	01	01	01	01	
28	1902010685	18Z CONICAL GEAR		06	06	06	06	06	06	
29	0503030275	AGRICULTURAL BEARING		06	06	06	06	06	06	

LEFT FERTILIZER BOX SUPPORT

0909092540

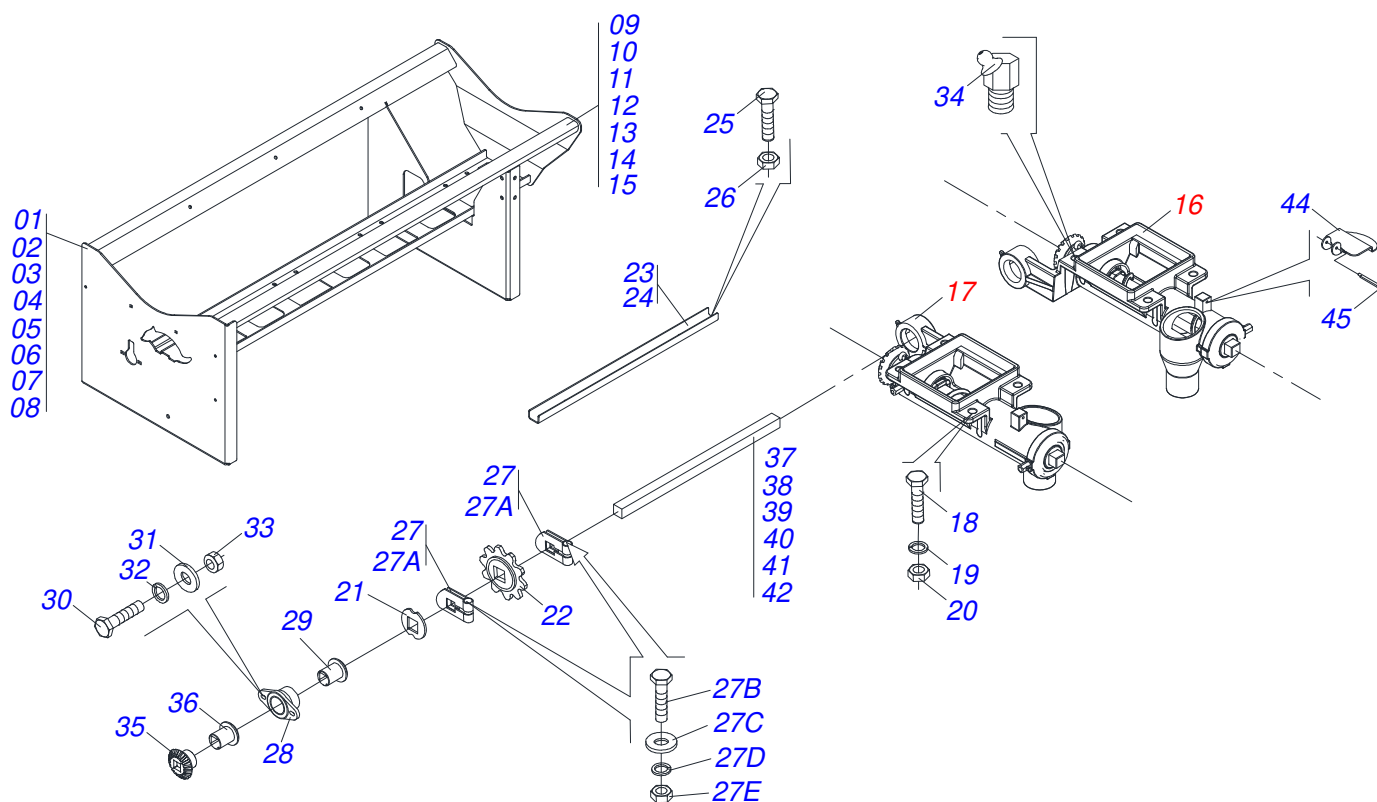

Item	Code	Description	See page	13	15	16	17	18	19	21	L
01	0511059278	SILLO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 5750		01	00	00	00	00	00	00	00
02	0511053052	LEFT BEAM SUPPORT WITH DISTRIBUTOR		00	01	00	00	00	00	00	00
03	0511053192	LEFT BEAM SUPPORT WITH DISTRIBUTOR		00	01	01	00	00	00	00	00
04	0511058117	LH BEAM SUPPORT & METERING		00	00	01	01	00	00	00	00
05	0511058951	LH BEAM SUPPORT & METERING		00	00	01	01	00	00	00	00
06	0511053138	LEFT BEAM SUPPORT WITH DISTRIBUTOR		00	00	00	01	01	00	00	00
07	0511056160	LH BEAM SUPPORT & METERING		00	00	00	00	01	01	00	00
08	0511055781	LH BEAM SUPPORT & METERING		00	00	00	00	00	01	01	01
09	0521066915	FERTILIZER BEAN LEFT SUPPORT		01	00	00	00	00	00	00	00
10	0521066215	FERTILIZER BEAN LEFT SUPPORT		00	01	00	00	00	00	00	00
11	0521066220	FERTILIZER BEAN LEFT SUPPORT		00	01	01	00	00	00	00	00
12	0521066222	FERTILIZER BEAN LEFT SUPPORT		00	00	01	00	00	00	00	00
13	0521066217	FERTILIZER BEAN LEFT SUPPORT		00	00	00	01	00	00	00	00
14	0521065219	FERTILIZER BEAN LEFT SUPPORT		00	00	00	00	01	01	00	00
15	0521064821	LH FERTILIZER BOX SUPPORT		00	00	00	00	00	00	01	01
16	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	131	02	02	02	03	04	05	03	03
17	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	132	02	03	02	02	02	01	04	04
18	0501010942	3/8" X 1-1/4" BOLT		16	20	16	20	24	24	28	28
19	0503011443	3/8" SPRING WASHER		16	20	13	20	24	24	28	28
20	0503010026	3/8" NUT		16	20	13	20	24	24	28	28
21	0521014167	CONE LOCK		01	01	01	01	01	01	01	01
22	0511061759	22Z P12,70 FQ 3/4" GEAR		01	01	01	01	01	01	01	01
23	0571019828	LOCK AXLE		01	01	01	01	01	01	01	01
24	0571015966	LOCK AXLE		00	01	01	01	01	01	01	01
25	0503010365	NUT		02	02	02	02	02	02	02	02
26	0503013816	5/16" LOCKNUT		02	02	02	02	02	02	02	02
27	0501053788	Q3/4" FASTENER AXLE ASSY		01	01	01	01	01	01	01	01
27A	0521010691	AXLE FASTENER		01	01	01	01	01	01	01	01
27B	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01	01	01	01	01	01	01	01
27C	0511017303	FLAT WASHER		02	02	02	02	02	02	02	02
27D	0503010143	1/4" SPRING WASHER		01	01	01	01	01	01	01	01


LEFT FERTILIZER BOX SUPPORT

0909092540

Item	Code	Description	See page	13	15	16	17	18	19	21	L
27E	0503010144	1/4" NUT		01	01	01	01	01	01	01	
28	0501110392	SILO SUPPORT BEARING		01	01	01	01	01	01	01	
29	0521012485	GEAR BOX BEARING AGRICUTURAL		01	01	01	01	01	01	01	
30	0503011953	5/16" X 1" BOLT		02	02	02	02	02	02	02	
31	0521011039	FLAT WASHER		02	02	02	02	02	02	02	
32	0503011444	SPRING WASHER		02	02	02	02	02	02	02	
33	0503010337	5/16" NUT		02	02	02	02	02	02	02	
34	0503010003	1845 GREASE FITTING		04	05	04	05	06	06	07	
35	1902010685	18Z CONICAL GEAR		04	05	04	05	06	06	07	
36	0503030275	AGRICULTURAL BEARING		04	05	04	05	06	06	07	
37	0581011606	SQUARE SHAFT		01	00	00	00	00	00	00	
38	0571019654	SQUARE SHAFT		00	01	00	00	00	00	00	
39	0581012786	SQUARE SHAFT		00	00	01	01	00	00	00	
40	0571019659	SQUARE SHAFT		00	00	00	00	01	00	00	
41	0571017103	SQUARE SHAFT		00	00	00	00	00	01	00	
42	0571015894	SQUARE SHAFT		00	00	00	00	00	00	01	
44	0571010590	FERTILIZER SIDE COVER		04	05	04	05	06	06	07	
45	0503010362	1/8" X 1.1/4" COTTERPIN		04	05	04	05	06	06	07	

LEFT FERTILIZER BOX SUPPORT

0909092539

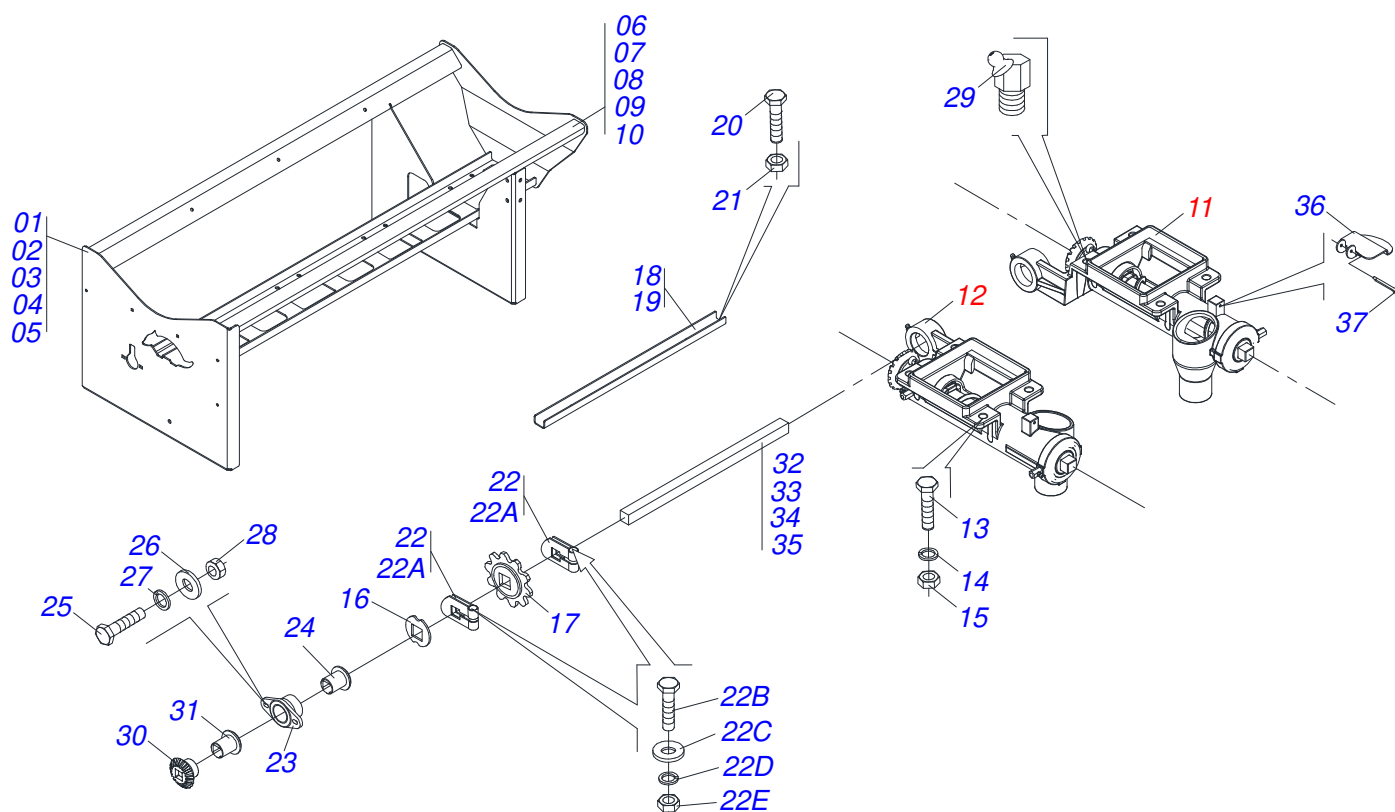


Item	Code	Description	See page	15	16	17	18	19	21	L
01	0511053192	LEFT BEAM SUPPORT WITH DISTRIBUTOR		01	00	00	00	00	00	
02	0511058951	LH BEAM SUPPORT & METERING		00	01	00	00	00	00	
03	0511053138	LEFT BEAM SUPPORT WITH DISTRIBUTOR		00	00	01	01	00	00	
04	0511056160	LH BEAM SUPPORT & METERING		00	00	00	00	01	00	
05	0511055781	LH BEAM SUPPORT & METERING		00	00	00	00	00	01	
06	0521066220	FERTILIZER BEAN LEFT SUPPORT		01	00	00	00	00	00	
07	0521066222	FERTILIZER BEAN LEFT SUPPORT		00	01	00	00	00	00	
08	0521066217	FERTILIZER BEAN LEFT SUPPORT		00	00	01	01	00	00	
09	0521065219	FERTILIZER BEAN LEFT SUPPORT		00	00	00	00	01	00	
10	0521064821	LH FERTILIZER BOX SUPPORT		00	00	00	00	00	01	
11	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	131	01	05	04	04	05	03	
12	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	132	04	01	02	02	01	04	
13	0501010942	3/8" X 1-1/4" BOLT		20	24	24	24	24	28	
14	0503011443	3/8" SPRING WASHER		20	24	24	24	24	28	
15	0503010026	3/8" NUT		20	24	24	24	24	28	
16	0521014167	CONE LOCK		01	01	01	01	01	01	
17	0511061759	22Z P12,70 FQ 3/4" GEAR		01	01	01	01	01	01	
18	0571019828	LOCK AXLE		01	01	01	01	01	01	
19	0571015966	LOCK AXLE		01	01	01	01	01	01	
20	0503010365	NUT		02	02	02	02	02	02	
21	0503013816	5/16" LOCKNUT		02	02	02	02	02	02	
22	0501053788	Q3/4" FASTENER AXLE ASSY		01	01	01	01	01	01	
22A	0521010691	AXLE FASTENER		01	01	01	01	01	01	
22B	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01	01	01	01	01	01	
22C	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01	01	01	01	01	01	
22D	0503010143	1/4" SPRING WASHER		01	01	01	01	01	01	
22E	0503010144	1/4" NUT		01	01	01	01	01	01	
23	0501110392	SILO SUPPORT BEARING		01	01	01	01	01	01	
24	0521012485	GEAR BOX BEARING AGRICUTURAL		01	01	01	01	01	01	
25	0503011953	5/16" X 1" BOLT		02	02	02	02	02	02	
26	0521011039	FLAT WASHER		02	02	02	02	02	02	



LEFT FERTILIZER BOX SUPPORT


0909092539

Item	Code	Description	See page	15	16	17	18	19	21	L
27	0503011444	SPRING WASHER		02	02	02	02	02	02	
28	0503010337	5/16" NUT		02	02	02	02	02	02	
29	0503010003	1845 GREASE FITTING		04	05	04	05	06	07	
30	1902010685	18Z CONICAL GEAR		04	05	04	05	06	07	
31	0503030275	AGRICULTURAL BEARING		04	05	04	05	06	07	
32	0571019663	SQUARE SHAFT		01	00	00	00	00	00	
33	0571017103	SQUARE SHAFT		00	01	00	00	01	00	
34	0571019659	SQUARE SHAFT		00	00	01	01	00	00	
35	0571015894	SQUARE SHAFT		00	00	00	00	00	01	
36	0571010590	FERTILIZER SIDE COVER		05	05	05	06	06	07	
37	0503010362	1/8" X 1.1/4" COTTERPIN		05	05	05	06	06	07	

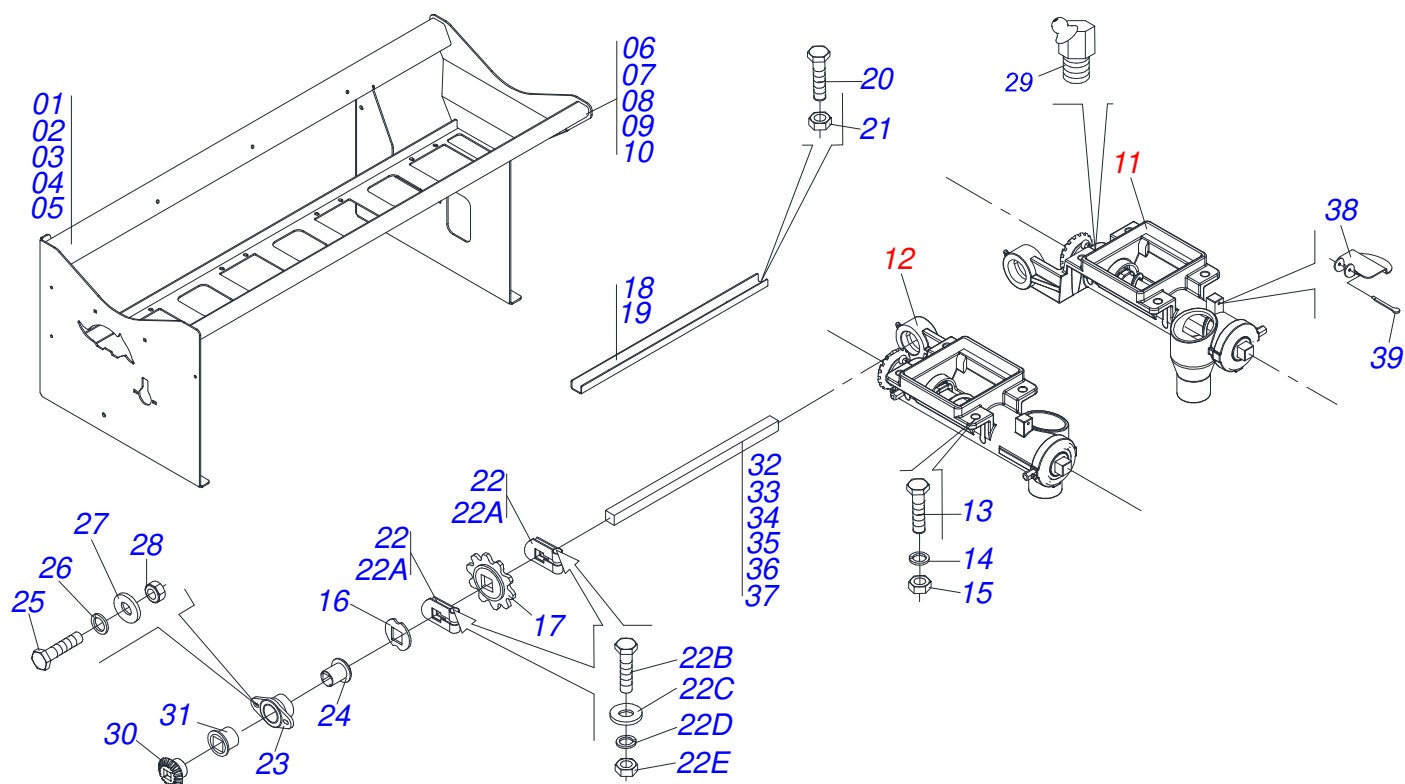


Item	Code	Description	See page	13	15	16	17	18	19	21	L
01	0511059277	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 5750		01	00	00	00	00	00	00	
02	0511053051	RIGHT BEAM SUPPORT WITH DISTRIBUTOR		00	01	00	00	00	00	00	
03	0511058116	RH BEAM SUPPORT & METERING		00	00	01	01	00	00	00	
04	0511053137	RIGHT BEAM SUPPORT WITH DISTRIBUTOR		00	00	00	00	01	01	00	
05	0511056159	RH BEAM SUPPORT & METERING		00	00	00	00	00	01	01	
06	0521066914	FERTILIZER BEAN RIGHT SUPPORT		01	00	00	00	00	00	00	
07	0521066214	FERTILIZER BEAN RIGHT SUPPORT		00	01	00	00	00	00	00	
08	0521066219	FERTILIZER BEAN RIGHT SUPPORT		00	00	01	01	00	00	00	
09	0521066218	FERTILIZER BEAN RIGHT SUPPORT		00	00	00	01	01	00	00	
10	0521065218	FERTILIZER BEAN RIGHT SUPPORT		00	00	00	00	00	01	01	
11	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	131	02	02	03	02	02	01	04	
12	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	132	02	02	02	03	04	05	06	
13	0501010942	3/8" X 1-1/4" BOLT		16	16	20	20	24	24	28	
14	0503011443	3/8" SPRING WASHER		16	16	20	20	24	24	28	
15	0503010026	3/8" NUT		16	16	20	20	24	24	28	
16	0521014167	CONE LOCK		01	01	01	01	01	01	01	
17	0511061759	22Z P12,70 FQ 3/4" GEAR		01	01	01	01	01	01	01	
18	0571019828	LOCK AXLE		01	01	01	01	01	01	01	
19	0571015966	LOCK AXLE		01	01	01	01	01	01	01	
20	0503010365	NUT		02	02	02	02	02	02	02	
21	0503013816	5/16" LOCKNUT		02	02	02	02	02	02	02	
22	0501053788	Q3/4" FASTENER AXLE ASSY		01	01	01	01	01	01	01	
22A	0521010691	AXLE FASTENER		01	01	01	01	01	01	01	
22B	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01	01	01	01	01	01	01	
22C	0511017303	FLAT WASHER		02	02	02	02	02	02	02	
22D	0503010143	1/4" SPRING WASHER		01	01	01	01	01	01	01	
22E	0503010144	1/4" NUT		01	01	01	01	01	01	01	
23	0501110392	SILO SUPPORT BEARING		01	01	01	01	01	01	01	
24	0521012485	GEAR BOX BEARING AGRICUTURAL		01	01	01	01	01	01	01	
25	0503011953	5/16" X 1" BOLT		02	02	02	02	02	02	02	
26	0521011039	FLAT WASHER		02	02	02	02	02	02	02	

Item	Code	Description	See page	13	15	16	17	18	19	21	L
27	0503011444	SPRING WASHER		02	02	02	02	02	02	02	
28	0503010337	5/16" NUT		02	02	02	02	02	02	02	
29	0503010003	1845 GREASE FITTING		04	04	05	05	06	06	07	
30	1902010685	18Z CONICAL GEAR		04	04	05	05	06	06	07	
31	0503030275	AGRICULTURAL BEARING		04	04	05	05	06	06	07	
32	0581011606	SQUARE SHAFT		01	00	00	00	00	00	00	
33	0571019654	SQUARE SHAFT		00	01	00	00	00	00	00	
34	0581012786	SQUARE SHAFT		00	00	01	00	00	00	00	
35	0571019659	SQUARE SHAFT		00	00	00	01	01	00	00	
36	0571017103	SQUARE SHAFT		00	00	00	00	00	01	00	
37	0571015894	SQUARE SHAFT		00	00	00	00	00	00	01	
38	0571010590	FERTILIZER SIDE COVER		04	05	05	06	06	06	07	
39	0503010362	1/8" X 1.1/4" COTTERPIN		04	05	05	06	06	06	07	

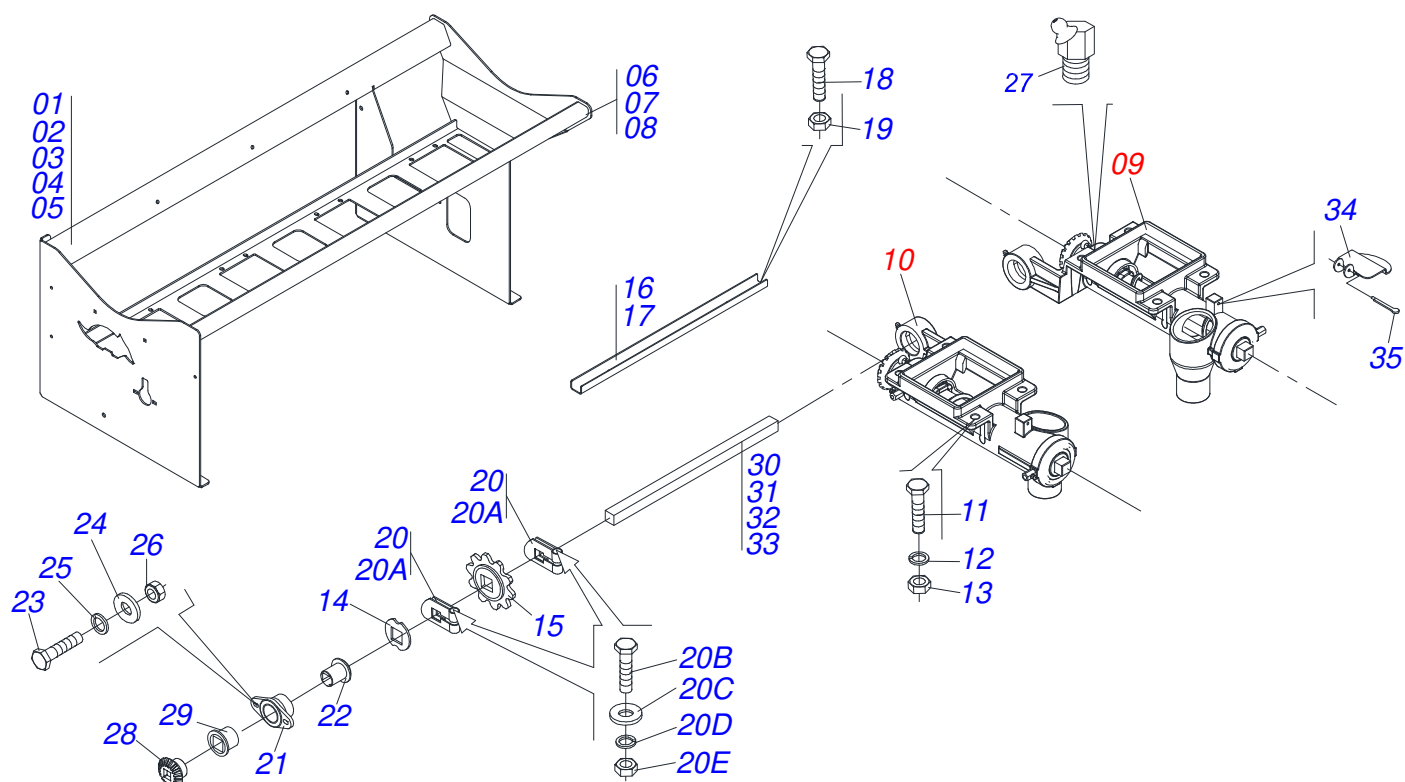


Item	Code	Description	See page	15	16	17	18	19	21	L
01	0511053191	RIGH BEAM SUPPORT WITH DISTRIBUTOR		01	00	00	00	00	00	
02	0511058950	RH BEAM SUPPORT & METERING		00	01	01	00	00	00	
03	0511056159	RH BEAM SUPPORT & METERING		00	00	00	01	01	00	
04	0511055780	RH BEAM SUPPORT & METERING		00	00	00	00	00	01	
05	0521066219	FERTILIZER BEAN RIGHT SUPPORT		01	00	00	00	00	00	
06	0521066221	FERTILIZER BEAN RIGHT SUPPORT		00	01	01	00	00	00	
07	0521065218	FERTILIZER BEAN RIGHT SUPPORT		00	00	00	01	01	00	
08	0521064820	FERTILIZER BEAN RIGHT SUPPORT		00	00	00	00	00	01	
09	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	131	04	01	01	01	01	04	
10	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	132	01	05	05	05	05	03	
11	0501010942	3/8" X 1-1/4" BOLT		20	24	24	24	24	28	
12	0503011443	3/8" SPRING WASHER		20	24	24	24	24	28	
13	0503010026	3/8" NUT		20	24	24	24	24	28	
14	0521014167	CONE LOCK		01	01	01	01	01	01	
15	0511061759	22Z P12,70 FQ 3/4" GEAR		01	01	01	01	01	01	
16	0571019828	LOCK AXLE		01	01	01	01	01	01	
17	0571015966	LOCK AXLE		01	01	01	01	01	01	
18	0503010365	NUT		02	02	02	02	02	02	
19	0503013816	5/16" LOCKNUT		02	02	02	02	02	02	
20	0501053788	Q3/4" FASTENER AXLE ASSY		01	01	01	01	01	01	
20A	0521010691	AXLE FASTENER		01	01	01	01	01	01	
20B	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01	01	01	01	01	01	
20C	0511017303	FLAT WASHER		02	02	02	02	02	02	
20D	0503010143	1/4" SPRING WASHER		01	01	01	01	01	01	
20E	0503010144	1/4" NUT		01	01	01	01	01	01	
21	0501110392	SILO SUPPORT BEARING		01	01	01	01	01	01	
22	0521012485	GEAR BOX BEARING AGRICUTURAL		01	01	01	01	01	01	
23	0503011953	5/16" X 1" BOLT		02	02	02	02	02	02	
24	0521011039	FLAT WASHER		02	02	02	02	02	02	
25	0503011444	SPRING WASHER		02	02	02	02	02	02	
26	0503010337	5/16" NUT		02	02	02	02	02	02	


Item	Code	Description	See page	15	16	17	18	19	21	L
27	0503010003	1845 GREASE FITTING		04	04	05	05	05	06	
28	1902010685	18Z CONICAL GEAR		04	04	05	05	06	07	
29	0503030275	AGRICULTURAL BEARING		04	04	05	05	06	07	
30	0571019663	SQUARE SHAFT		01	00	00	00	00	00	
31	0571017103	SQUARE SHAFT		00	01	01	00	00	00	
32	0571017103	SQUARE SHAFT		00	00	00	01	01	00	
33	0571015894	SQUARE SHAFT		00	00	00	00	00	01	
34	0571010590	FERTILIZER SIDE COVER		04	05	05	06	06	07	
35	0503010362	1/8" X 1.1/4" COTTERPIN		04	05	05	06	06	07	

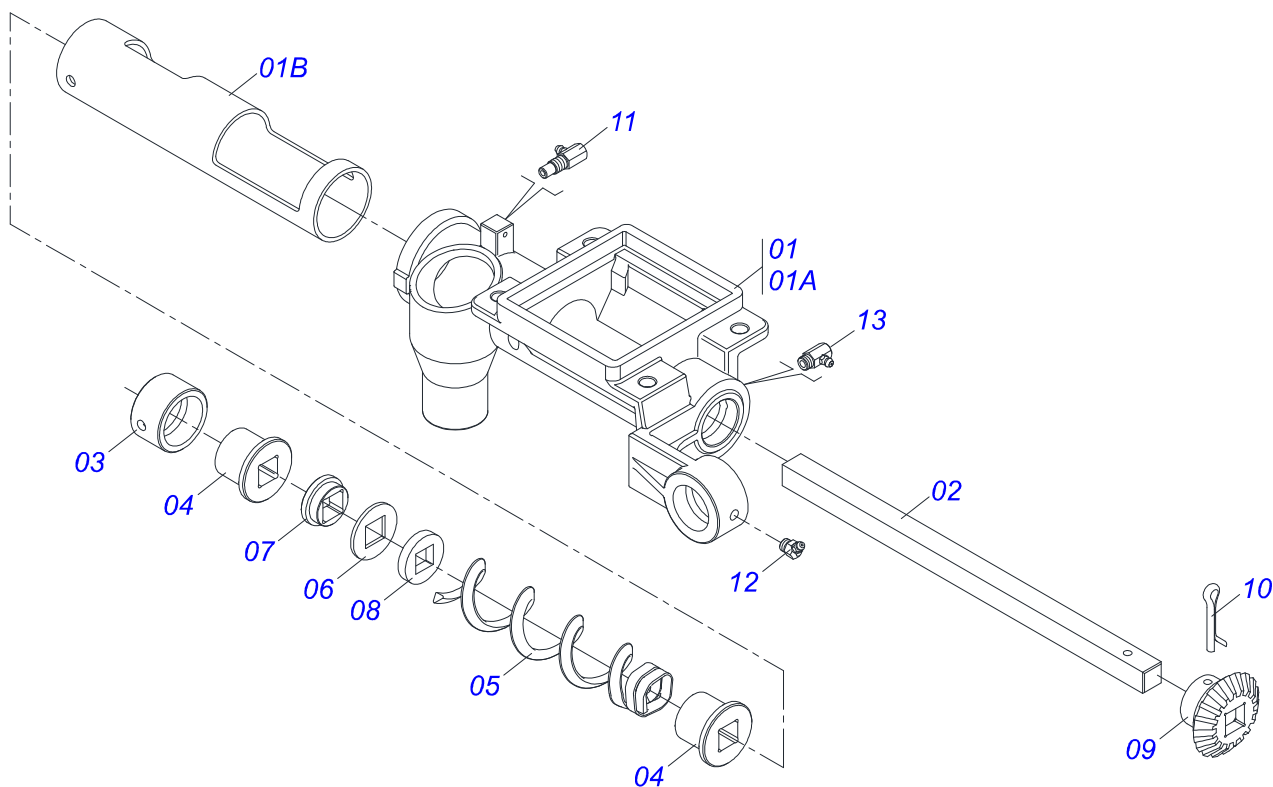


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

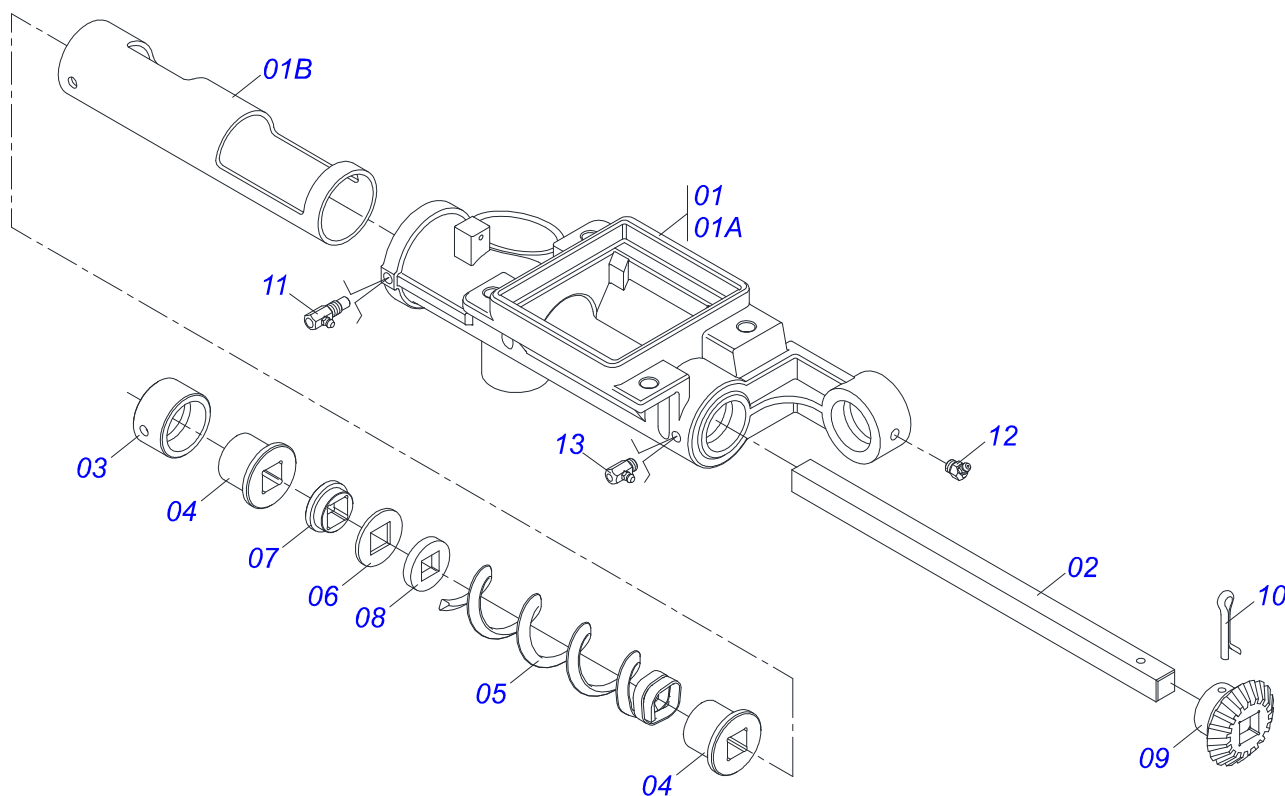


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0502011412	18Z CONICAL GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

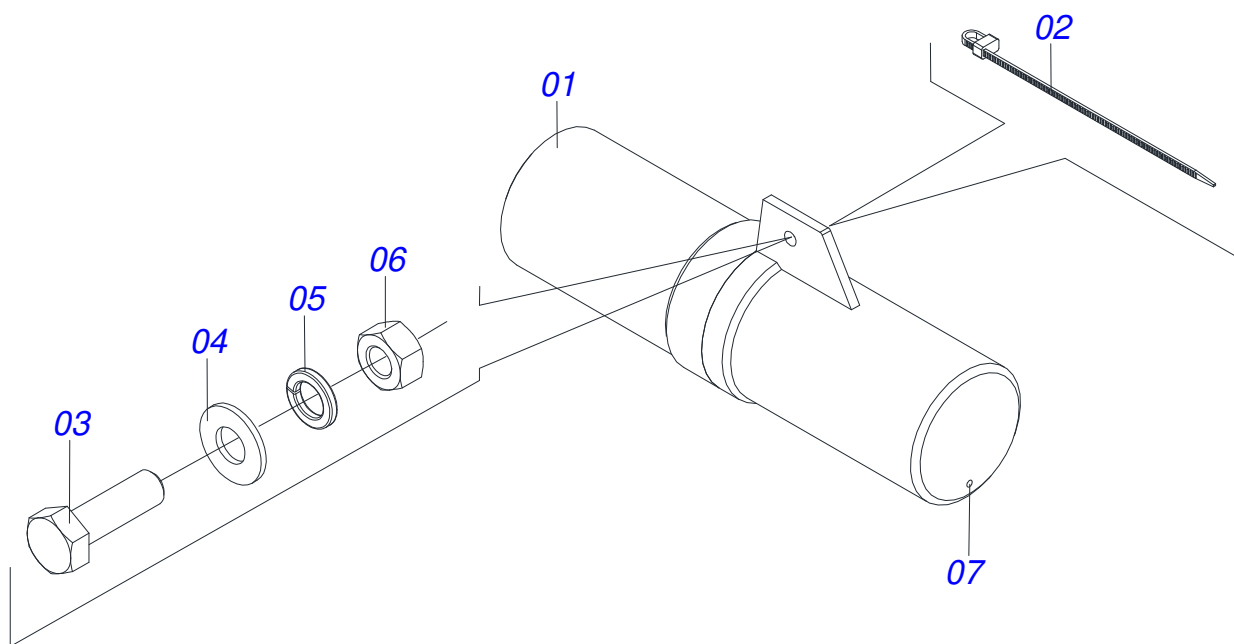


Item	Code	Description	See page	QT
001	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
002	0503010267	NYLON CLAMP		01
003	0503010363	5/16" X 1" BOLT		01
004	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
005	0503010179	5/16" ZN SPRING WASHER		01
006	0503010337	5/16" NUT		01
007	0511031948			01

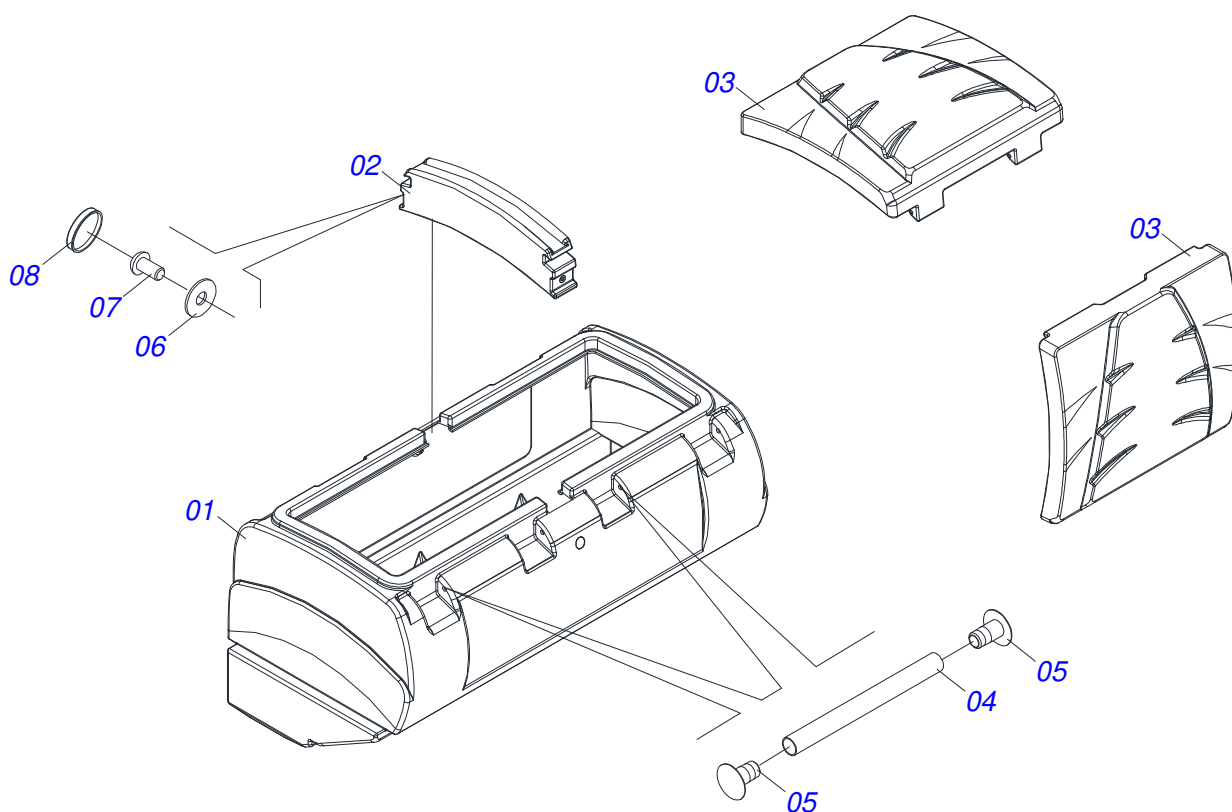


Item	Code	Description	See page	QT
001	0503033576	FERTILIZER BEAN		01
002	0503033578	FERTILIZER BEAM LOCK		01
003	0503032134	FERTILIZER BEAM COVER		02
004	0503032052	COVER PIVOT SHAFT		04
005	0503032051	COVER PIVOT SHAFT		08
006	0503032054	FLAT WASHER (INOX)		02
007	0503032053	BOLT C.A.S.I		02
008	0503032055	COVER		02

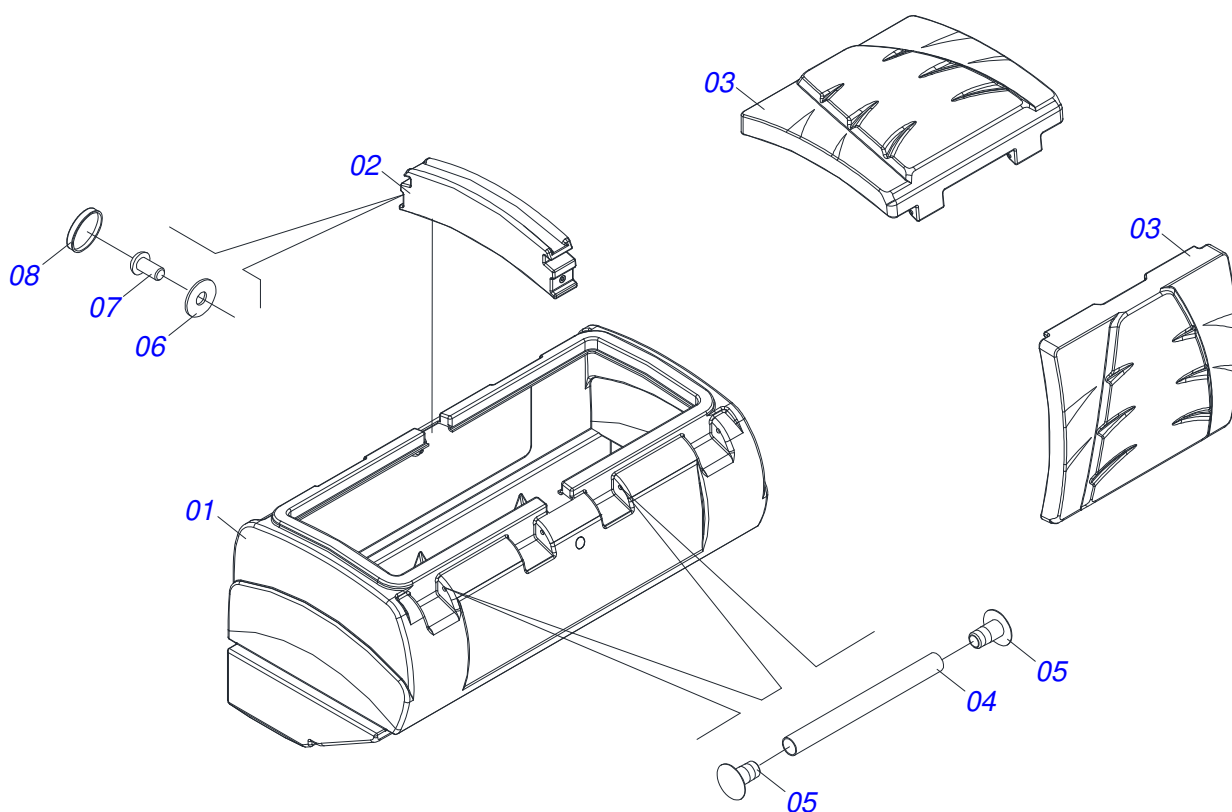


Item	Code	Description	See page	QT
001	0503033577	BEAN FERTILIZ 5 MOUTHS		01
002	0503033578	FERTILIZER BEAM LOCK		01
003	0503032136	FERTILIZER BEAM COVER		02
004	0503032052	COVER PIVOT SHAFT		04
005	0503032051	COVER PIVOT SHAFT		08
006	0503032054	FLAT WASHER (INOX)		02
007	0503032053	BOLT C.A.S.I		02
008	0503032055	COVER		02

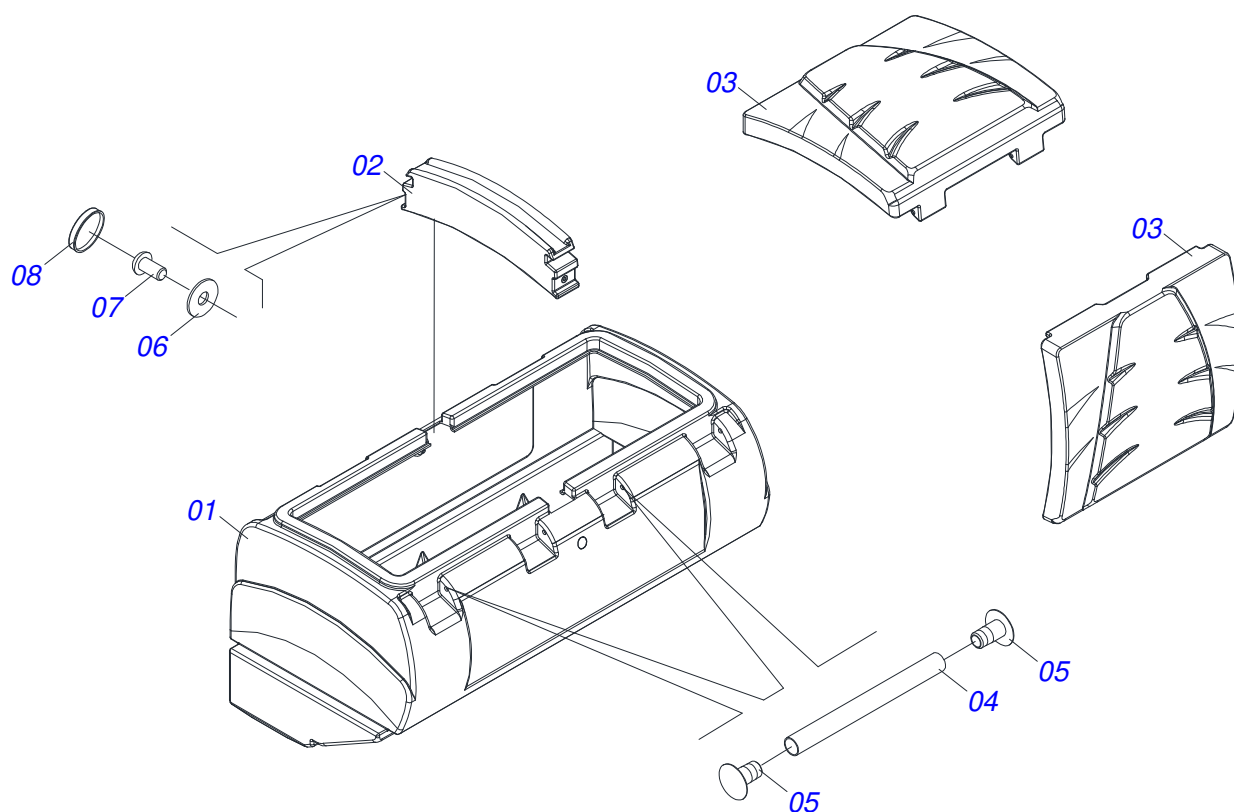


Item	Code	Description	See page	QT
001	0503033801	BEAM FERTILIZER		01
002	0503033578	FERTILIZER BEAM LOCK		02
003	0503032134	FERTILIZER BEAM COVER		03
004	0503032052	COVER PIVOT SHAFT		06
005	0503032051	COVER PIVOT SHAFT		12
006	0503032054	FLAT WASHER (INOX)		04
007	0503032053	BOLT C.A.S.I		04
008	0503032055	COVER		04

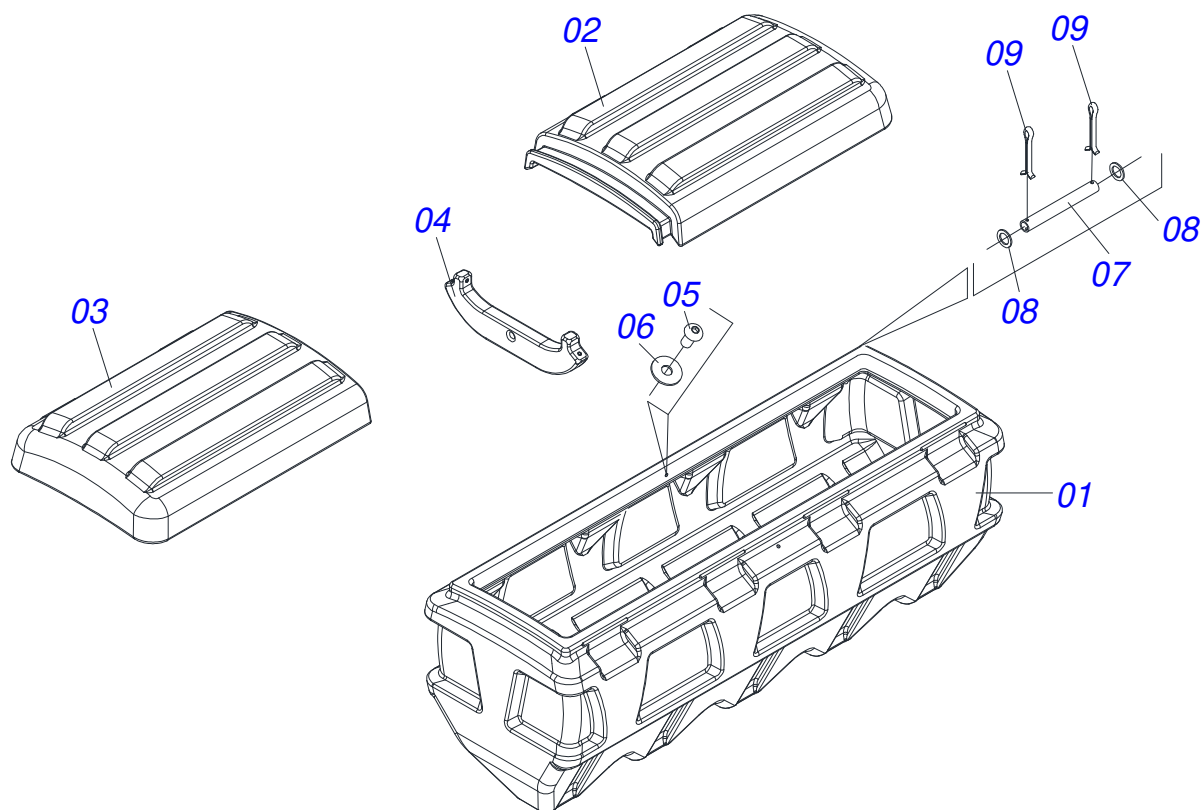


Item	Code	Description	See page	QT
01	0503034127	FERTILIZER BEAM COVER		01
02	0503034129	LOWER COVER		01
03	0503034128	UPPER COVER		01
04	0503034130	PLATE		01
05	0503032053	BOLT C.A.S.I		04
06	0503034220	FLAT WASHER		04
07	0503034087	TUBE COVER PIVOT		04
08	0503034088	WASHER		08
09	0503010131	3/16" X 1-1/2" COTTERPIN		08

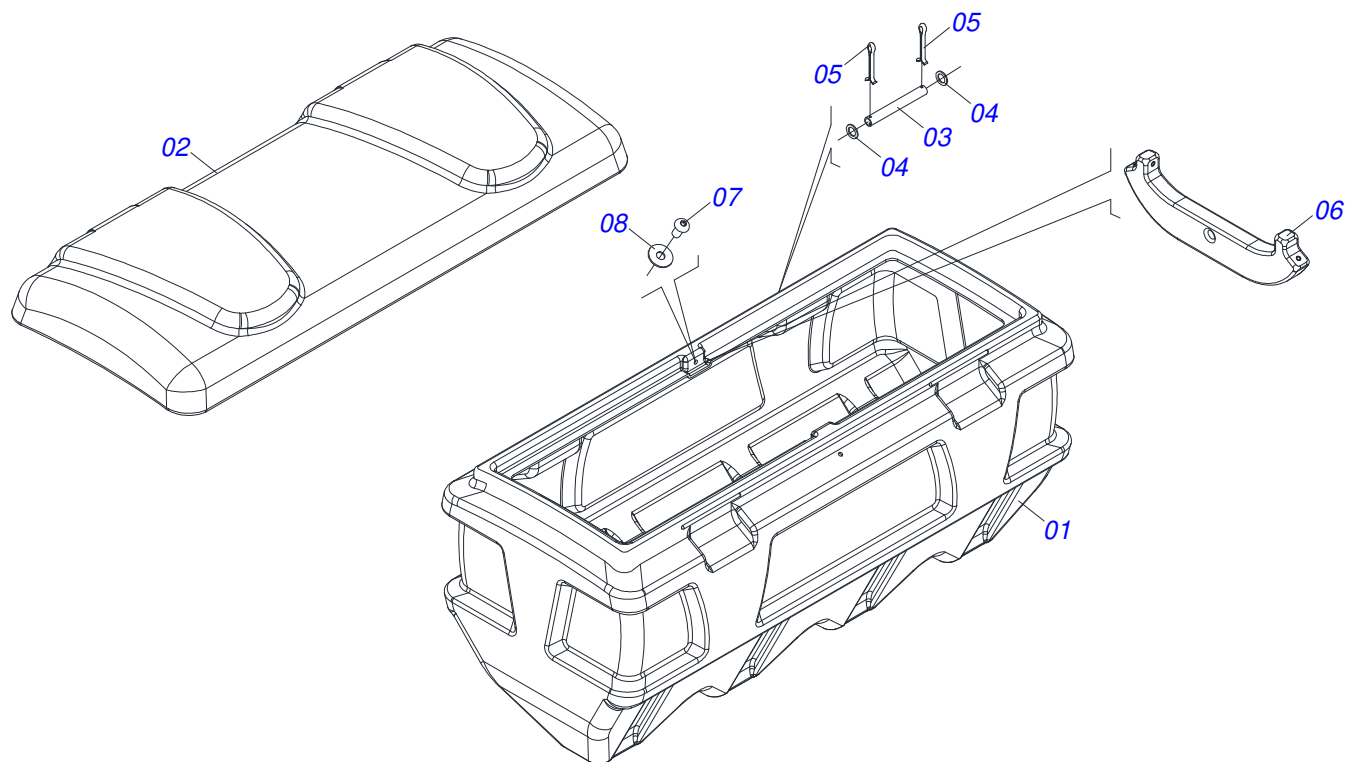


Item	Code	Description	See page	QT
01	0503034085	BEAN FERTILIZER ASSY		01
02	0503034086	BOX COVER		01
03	0503034087	TUBE COVER PIVOT		02
04	0503034088	WASHER		04
05	0503010131	3/16" X 1-1/2" COTTERPIN		04
06	0503034130	PLATE		01
07	0503032053	BOLT C.A.S.I		04
08	0503034220	FLAT WASHER		04

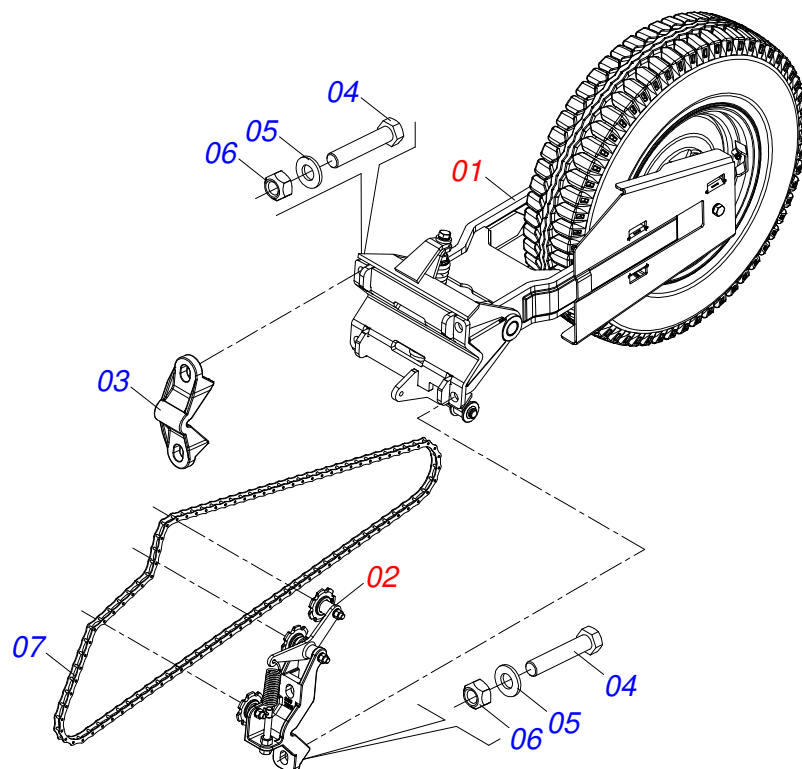


Item	Code	Description	See page	QT
01	0511059262	WHEEL SUPPORT ASSY	140	01
02	0501058240	WHELL FASTENER WITH STRETCHER		01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

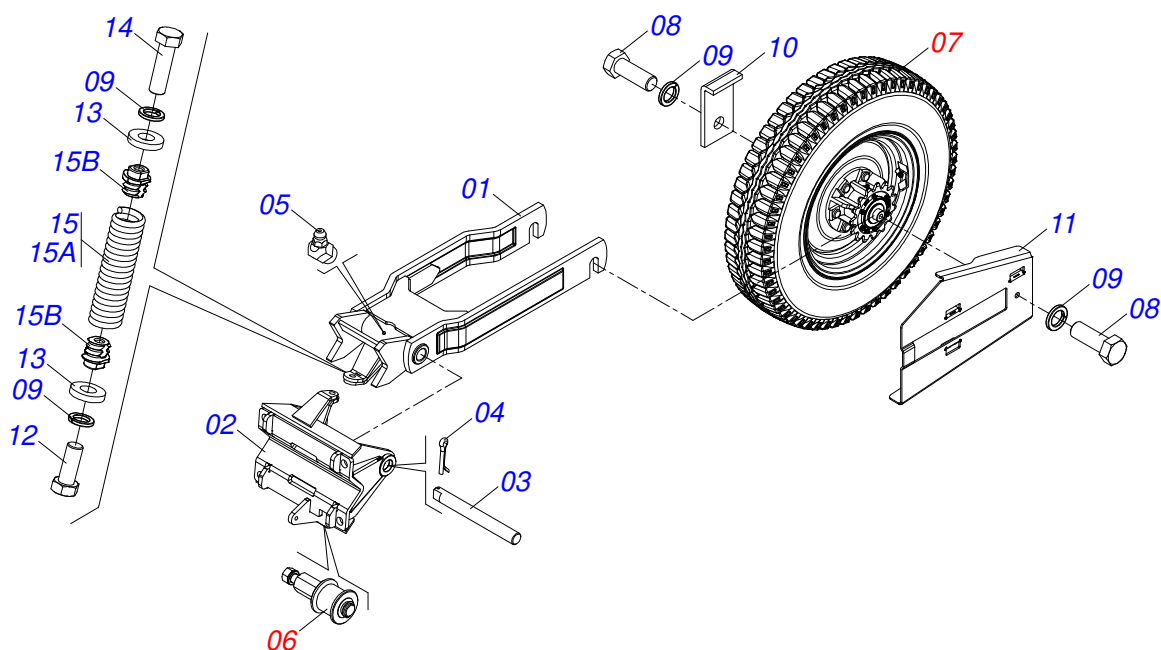


Item	Code	Description	See page	QT
01	0521061566	CARRYING WHEEL ARM TRACTION		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" COTTERPIN		01
05	0503010003	1845 GREASE FITTING		01
06	0501058241	TENSIONER CHAIN SUPPORT		01
07	0511052770	WHEEL WITH TIRE 7.00X16 ASSY WHEELED BOX	141	01
08	0503018981	BOLT		02
09	0503010027	5/8" SPRING WASHER		04
10	0521012190	AXLE LOCK		01
11	0581011124	WHEELED COVER		01
12	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
13	0551017715	FLAT WASHER		02
14	0503013030	5/8" X 3.1/4" BOLT		01
15	0511050681	TRACTION SPRING		01
15A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
15B	0561016062	SPRING HITCH		02

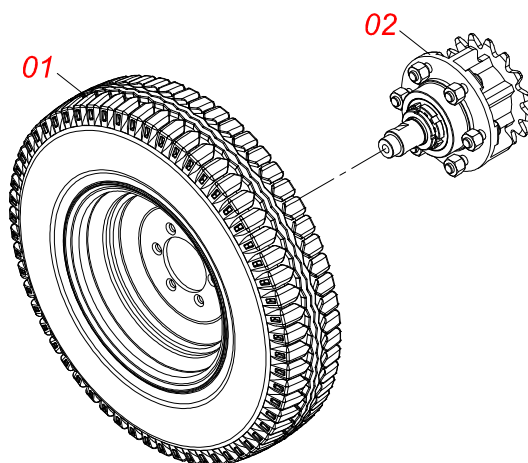


Item	Code	Description	See page	QT
01	0503062159	WHEEL	142	01
02	0511052769	WHEEL TRANSMISSION WITHOUT TIRE	143	01

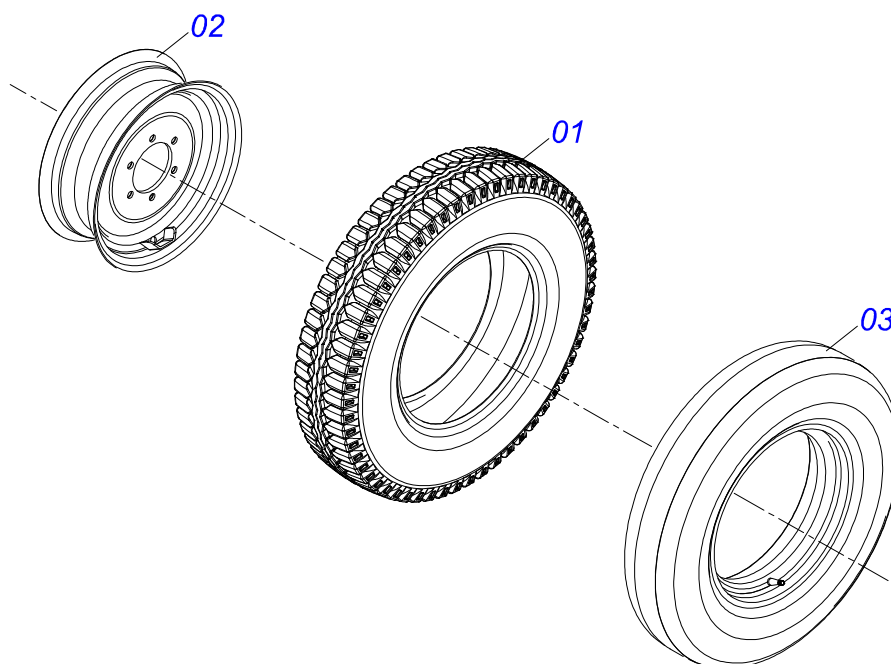


Item	Code	Description	See page	QT
01	0503012113	PLY TIRE		01
02	0503016517	WHEEL EI		01
03	0503012114	7.00 X 16 INNER TIRE		01

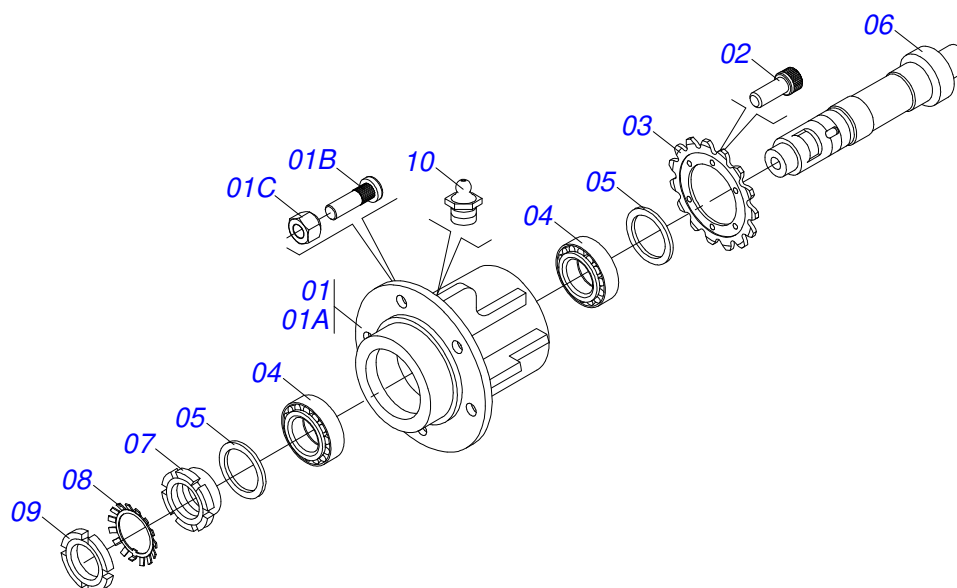


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503012550	5/16" X 3/4" BOLT		06
03	0502011339	15Z GEAR P 1.25"		01
04	0503010328	25590/25523 ROLLER BEARING		02
05	0503010804	00547-B SEAL		02
06	0521012185	TRANSM AXLE CARRYING-WHEEL		01
07	0511015949	LOCK NUT		01
08	0503010329	LOCK WASHER		01
09	0503010330	KM 9 LOCKNUT		01
10	0503010002	1800 GREASE FITTING		01

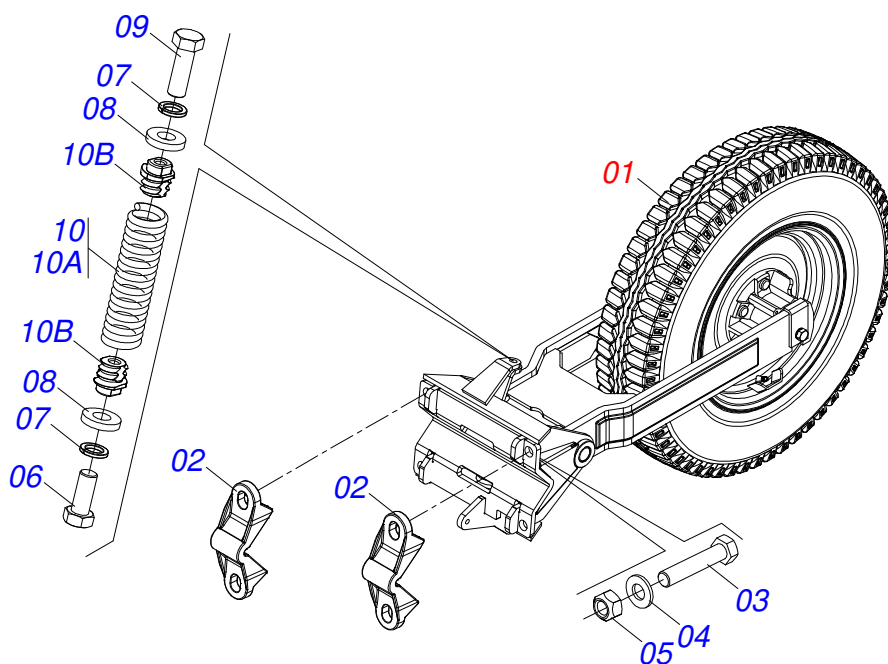


Item	Code	Description	See page	QT
01	0511054336	SUPPORT WHEELED WITHOUT TRANSMISSION	01	
02	0502010584	CARRYING-WHEELS SUPPORT FIXER	02	
03	0503011119	7/8" X 6" BOLT	04	
04	0501014251	FLAT WASHER	04	
05	0503011254	7/8" HEX SELF ADJUSTING NUT	04	
06	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN	01	
07	0503010027	5/8" SPRING WASHER	02	
08	0551017715	FLAT WASHER	02	
09	0503013030	5/8" X 3.1/4" BOLT	01	
10	0511050681	TRACTION SPRING	01	
10A	0503031681	2.1" X 7.78" EXTENSION SPRING	01	
10B	0561016062	SPRING HITCH	02	

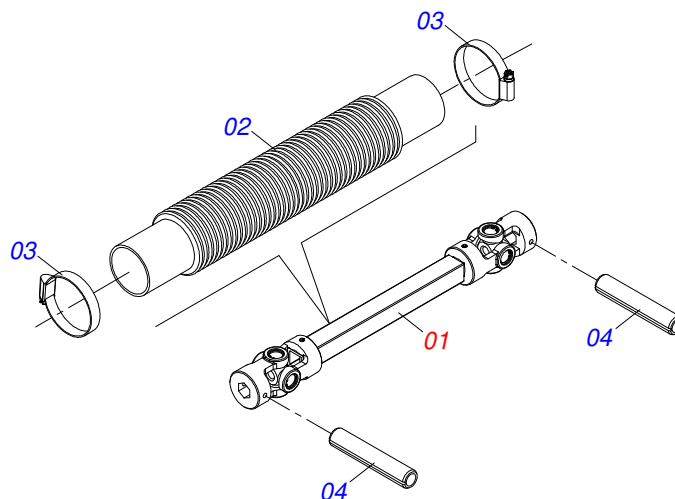


Item	Code	Description	See page	QT
01	0503062206	CARDAN TERMINAL	146	01
02	0503030331	1.2" X 1.2" X 12.2" HOSE		01
03	0503010243	CLAMP		02
04	0503011855	0.2" X 1.8" SPRING PIN		02

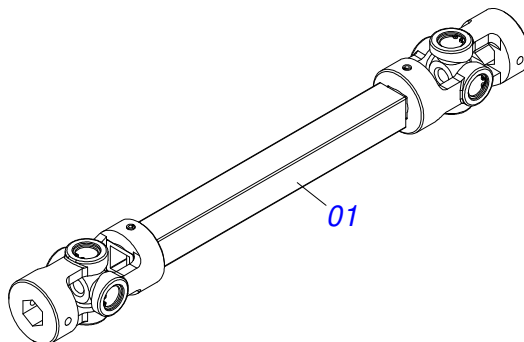

Item	Code	Description	See page	QT
01	0503062206	CARDAN TERMINAL	146	01

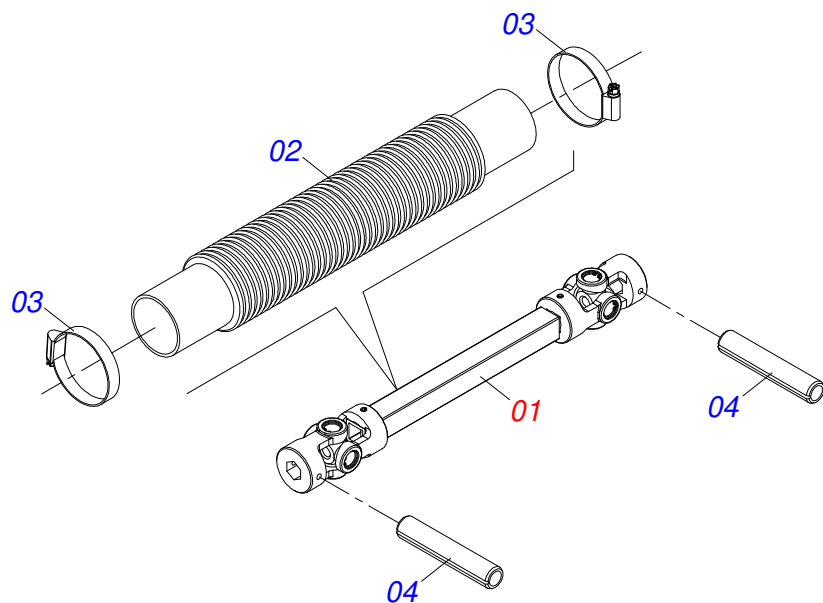

Item	Code	Description	See page	QT
01	0503062392	DRIVE SHAFT		01
02	0503030331	1.2" X 1.2" X 12.2" HOSE		01
03	0503010243	CLAMP		02
04	0503011855	0.2" X 1.8" SPRING PIN		02

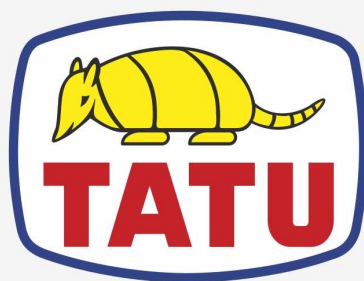

MARCHESAN

Technical Publications | Elaboration and Revision

JOSÉ DOMINGOS GASPARI

www.marchesan.com.br

