

ROW CROP PLANTERS

PST PLUS FLEX - FRAME
3245/3495/4045/4395/4845/5345 - MH

Code: 0501091287
Series: S-0115
Revision: 00
Date Revision: JUNHO/2022

PARTS CATALOGUE



MARCHESAN

PRODUCTS

Code	Description
0111380039	PST PLUS FLEX 3245/6E500 D/HDA S-0115
0111380004	PST PLUS FLEX 3245/6E500 MH DC20 S-0115
0111380033	PST PLUS FLEX 3245/7E450 D CPRA S-0115
0111380019	PST PLUS FLEX 3245/7E450 D/HDA S-0115
0111380002	PST PLUS FLEX 3245/7E450 MH S-0115
0111380003	PST PLUS FLEX 3245/7E450 S-0115
0111380053	PST PLUS FLEX 3495/7E500 H S-0115
0111380036	PST PLUS FLEX 3495/7E500 MH S-0115
0111380060	PST PLUS FLEX 4045/5E900 MH DC20 CBR S-0115
0111380027	PST PLUS FLEX 4045/7E600 MH S-0115
0111380049	PST PLUS FLEX 4045/8E500 MH DC20 CBR S-0115
0111380008	PST PLUS FLEX 4045/8E500 MH DC20 S-0115
0111380034	PST PLUS FLEX 4045/9E450 D CPRA S-0115
0111380022	PST PLUS FLEX 4045/9E450 D/HDA MH S-0115
0111380026	PST PLUS FLEX 4045/9E450 D/HDA S-0115
0111380040	PST PLUS FLEX 4045/9E450 H MH S-0115
0111380037	PST PLUS FLEX 4045/9E450 IAPAR MH DC20 S-0115
0111380020	PST PLUS FLEX 4045/9E450 MH DC20 S-0115
0111380012	PST PLUS FLEX 4045/9E450 MH S-0115
0111380054	PST PLUS FLEX 4045/9E450 RAIAD MH DC20 S-0115
0111380005	PST PLUS FLEX 4045/9E450 S-0115
0111380050	PST PLUS FLEX 4395/10E450 MH DC20 CBR S-0115
0111380044	PST PLUS FLEX 4395/9E500 H S-0115
0111380013	PST PLUS FLEX 4395/9E500 MH DC20 S-0115
0111380066	PST PLUS FLEX 4395/9E500 MH PM400 S-0115
0111380065	PST PLUS FLEX 4845/11E450 ESPECIAL S-0115
0111380030	PST PLUS FLEX 4845/11E450 MH DC20 S-0115
0111380009	PST PLUS FLEX 4845/11E450 MH S-0115
0111380011	PST PLUS FLEX 4845/11E450 S-0115
0111380016	PST PLUS FLEX 5345/12E450 MH S-0115

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX


0909091865	FRAME - 3245/3495/4045/4395	1
0909091870	FRAME - 4845/5345	2
0511057197	CYLINDER SET - 3245/3495/4045/4395	3
0521045510	HYDRAULIC CYLINDER	4
0511057324	CYLINDER SET	5
0521045509	HYDRAULIC CYLINDER 50,8 X 101,6 X 507,5 X 240,5	6
0511057206	HANDRAIL ASSEMBLY - 3245	7
0511057369	HANDRAIL ASSEMBLY - 3495	8
0511057306	HANDRAIL ASSEMBLY - 4045	9
0511057359	HANDRAIL ASSEMBLY - 4395	10
0511057330	HANDRAIL ASSEMBLY - 4845	11
0511057386	HANDRAIL ASSEMBLY - 5345	12
0511057205	PLATFORM ASSEMBLY - 3245	13
0511057370	PLATFORM ASSEMBLY - 3495	14
0511057307	PLATFORM ASSEMBLY - 4045	15
0511057358	PLATFORM ASSEMBLY - 4395	16
0511057331	PLATFORM ASSEMBLY - 4845	17
0511057385	PLATFORM ASSEMBLY - 5345	18
0511056536	LADDER ASSEMBLY	19
0511054971	JACK ASSEMBLY	20
0511057229	DRAWBAR ASSEMBLY - 3245	21
0511057333	DRAWBAR ASSEMBLY - 3495/4045/4395/4845/5345/5745	22
0511054601	HITCH ARTICULATED TRACTOR	23
0511053179	TRACTOR COUPLING SHAFT	24
0511057270	DRAWBAR EXTENDER	25
0511057266	HYDRAULIC SYSTEM ASSEMBLY - 3245/3495/4045/4395	26
0501053834	MALE QUICK COUPLER	27
0511057207	SEMI-ASSEMBLED HYDRAULIC MARKER - 3245	28
0511057368	SEMI-ASSEMBLED HYDRAULIC MARKER - 3495	29
0511057311	SEMI-ASSEMBLED HYDRAULIC MARKER - 4045	30
0511057355	SEMI-ASSEMBLED HYDRAULIC MARKER - 4395	31
0511057328	SEMI-ASSEMBLED HYDRAULIC MARKER - 4845	32
0511057387	SEMI-ASSEMBLED HYDRAULIC MARKER - 5345	33
0511058449	HYDRAULIC CYLINDER	34
0501054649	HBM SEQUENTIAL VALVE	35
0511058119	VALVE SUPPORT ASSEMBLY	36
0511057228	LABELS KIT - 3245	37
0511057365	LABELS KIT - 3495	38
0511057314	LABELS KIT - 4045	39
0511057352	LABELS KIT - 4395	40
0511057332	LABELS KIT - 4845	41
0511057384	LABELS KIT - 5345	42
0511057230	FERTILIZER BOX ASSEMBLY - 3245	43
0511057213	BOX SUPPORT WITH DISTRIBUTOR - 3245	44
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	45
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	46
0511057364	FERTILIZER BOX ASSEMBLY - 3495	47
0511057366	BOX SUPPORT WITH DISTRIBUTOR - 3495	48
0511057305	FERTILIZER BOX ASSEMBLY - 4045	49
0511057309	BOX SUPPORT WITH DISTRIBUTOR - 4045	50
0511057360	FERTILIZER BOX ASSEMBLY - 4395	51
0511057357	BOX SUPPORT WITH DISTRIBUTOR - 4395	52
0511057326	FERTILIZER BOX ASSEMBLY - 4845	53
0511057327	BOX SUPPORT WITH DISTRIBUTOR - 4845	54
0511057389	FERTILIZER BOX ASSEMBLY - 5345	55



MARCHESAN


INDEX

0511057388	BOX SUPPORT WITH DISTRIBUTOR - 5345	56
0909091863	TRANSMISSION ASSY - 3245/3495/4045/6395	57
0909091872	TRANSMISSION ASSY - 4845/5345	58
0501052560	MOTOR AXLE SIGNAL	59
0511051434	TRANSMISSION ACTUATOR	60
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	61
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	62
0511057264	RIGHT/LEFT GEARBOX SET	63
0501053788	3/4 SQUARE AXLE FASTENER	64
0501056444	BEARING WITH ROLLING	65
0511057265	TRANSMISSION CHAIN TENSIONER	66
0501056271	GEARBOX CLOSED BEARING	67
0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	68
0511050652	CHAIN TENSIONER	69
0501053653	BEARING WITH GEAR 20Z 3/4 HEX SHAFT	70
0501057684	SIDE BEARING FRONT SUPPORT SEED LINE	71
0521045638	WHEELED SPRING	72
0501058241	WHEEL SUPPORT CHAIN TENSIONER	73
0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	74
0501058244	WHEEL FIXED CHAIN TENSIONER	75
0501058242	WHEEL MOBILE CHAIN TENSIONER	76
0909091861	FERTILIZER ROW SEED ASSY	77
0511057277	FRONT SHORT SEED ROW WITH RIGHT TRANSMISSION	78
0511057278	FRONT LONG SEED ROW WITH RIGHT TRANSMISSION	79
0511058766	BEARING	80
0511057159	TRANSMISSION BOX SEED LINE	81
0511057269	CHAIN TENSIONER LINE	82
0511059872	BEARING	83
0511058512	PROTECTION COVER	84
0511056621	REAR RIGHT SEED LINE	85
0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	86
0511056622	LEFT REAR LINE SEED	87
0511056586	15 X 15 SEED DDD LEFT	88
0511057281	SHORT FERTILIZER ROW DDD 18" BLADE DISC	89
0511057282	LONG FERTILIZER ROW DDD 18" BLADE DISC	90
0511057185	DISC BLADE 18" ASSY	91
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	92
0511057017	SEED SYSTEM ASSY	93
0501051094	ASSY SEED DISTRIBUTOR	94
0521045198	PRESS WHEELS	95
0501052297	DEPTH WHEELS REGULATOR ASSY	96
0511054333	COMPACT WHEEL RIGHT WITH BEARING	97
0511054334	COMPACT WHEEL LEFT WITH BEARING	98
0501052908	COMPACTOR WHEEL WITH BEARING	99
0521053949	SCARIFIER SPINDLE WITH SOCKET RIGHT	100
0521053948	SCARIFIER SPINDLE WITH SOCKET LEFT	101
0521053950	HDA AUTOMATIC DISARM	102
0521053951	STEM	103

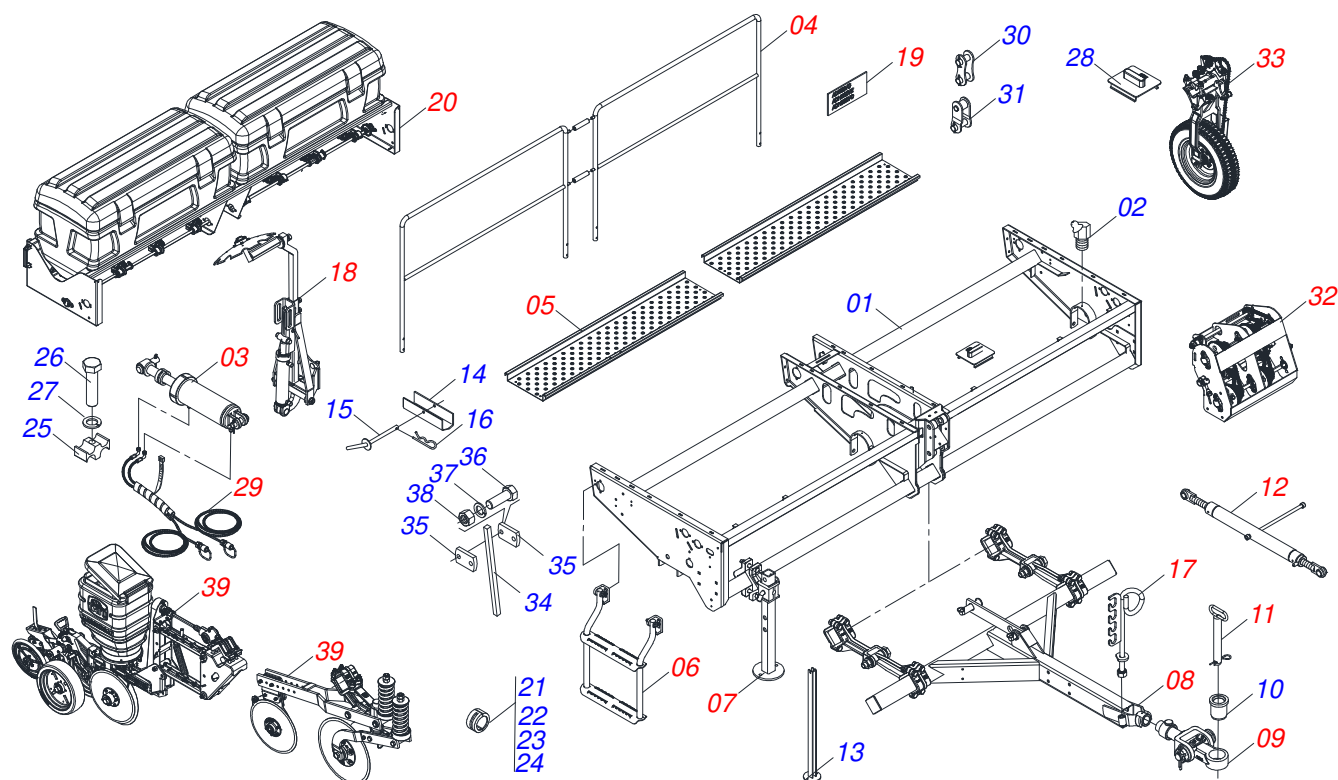

Item	Code	Description	See page	3245	3945	4045	4395
01	0521065917	FRAME - 3245		01	00	00	00
01.	0521065918	FRAME - 3495		00	01	00	00
01..	0521065919	FRAME - 4045		00	00	01	00
01...	0521065920	FRAME - 4395		00	00	00	01
02	0503010003	1845 GREASE FITTING		04	04	04	04
03	0511057197	CYLINDER SET - 3245/3495/4045/4395	3	01	01	01	01
04	0511057206	HANDRAIL ASSEMBLY - 3245	7	01	00	00	00
04.	0511057369	HANDRAIL ASSEMBLY - 3495	8	00	01	00	00
04..	0511057306	HANDRAIL ASSEMBLY - 4045	9	00	00	01	00
04...	0511057359	HANDRAIL ASSEMBLY - 4395	10	00	00	00	01
05	0511057205	PLATFORM ASSEMBLY - 3245	13	01	00	00	00
05.	0511057370	PLATFORM ASSEMBLY - 3495	14	00	01	00	00
05..	0511057307	PLATFORM ASSEMBLY - 4045	15	00	00	01	00
05...	0511057358	PLATFORM ASSEMBLY - 4395	16	00	00	00	01
06	0511056536	LADDER ASSEMBLY	19	02	02	02	02
07	0511054971	JACK ASSEMBLY	20	02	02	02	02
08	0511057229	DRAWBAR ASSEMBLY - 3245	21	01	01	01	01
09	0511054601	HITCH ARTICULATED TRACTOR	23	01	01	01	01
10	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01	01	01	01
11	0511053179	TRACTOR COUPLING SHAFT	24	01	01	01	01
12	0511057270	DRAWBAR EXTENDER	25	01	01	01	01
13	0501065677	STRUT		02	02	02	02
14	0521013022	TRANSPORT LOCK		01	01	01	01
15	0501068994	8,30 X 78 LOCK PIN		01	01	01	01
16	0503030168	HITCH PIN CLIP		01	01	01	01
17	0511056736	HOSE SUPPORT		01	01	01	01
18	0511057207	SEMI-ASSEMBLED HYDRAULIC MARKER - 3245	28	01	00	00	00
18.	0511057368	SEMI-ASSEMBLED HYDRAULIC MARKER - 3495	29	00	01	00	00
18..	0511057311	SEMI-ASSEMBLED HYDRAULIC MARKER - 4045	30	00	00	01	00
18...	0511057355	SEMI-ASSEMBLED HYDRAULIC MARKER - 4395	31	00	00	00	01
19	0511057228	LABELS KIT - 3245	37	01	00	00	00


Item	Code	Description	See page	3245	3945	4045	4395
19.	0511057365	LABELS KIT - 3495	38	00	01	00	00
19..	0511057314	LABELS KIT - 4045	39	00	00	01	00
19...	0511057352	LABELS KIT - 4395	40	00	00	00	01
20	0511057230	FERTILIZER BOX ASSEMBLY - 3245	43	01	00	00	00
20.	0511057364	FERTILIZER BOX ASSEMBLY - 3495	47	00	01	00	00
20..	0511057305	FERTILIZER BOX ASSEMBLY - 4045	49	00	00	01	00
20...	0511057360	FERTILIZER BOX ASSEMBLY - 4395	51	00	00	00	01
21	0501047895	ROD STOP		01	01	01	01
22	0501047885	ROD STOP		01	01	01	01
23	0501047886	ROD STOP		01	01	01	01
24	0501047887	ROD STOP		01	01	01	01
25	0502012702	BODY SUPPORT CLAMP		01	01	01	01
26	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		01	01	01	01
27	0503010180	7/16" SPRING WASHER		01	01	01	01
28	0503032624	SILO FERTILIZER GUTTER		04	03	05	04
29	0511057266	HYDRAULIC SYSTEM ASSEMBLY - 3245/3495/4045/4395	- 26	01	01	01	01
30	0503010780	N-2050 AMENDMENT		02	02	02	02
31	0503010951	REDUCTION		04	04	04	04
32	0909091863	TRANSMISSION ASSY - 3245/3495/4045/6395	57	01	01	01	01
33	0521045638	WHEELED SPRING	72	02	02	02	02
34	0521013164	EXTENSOR		02	02	02	02
35	0501011310	FIXER LOCK		08	08	08	08
36	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		04	04	04	04
37	0503010019	1/2" SPRING WASHER		04	04	04	04
38	0503010060	1/2" NUT		04	04	04	04
39	0909091861	FERTILIZER ROW SEED ASSY	77	07	09	10	12

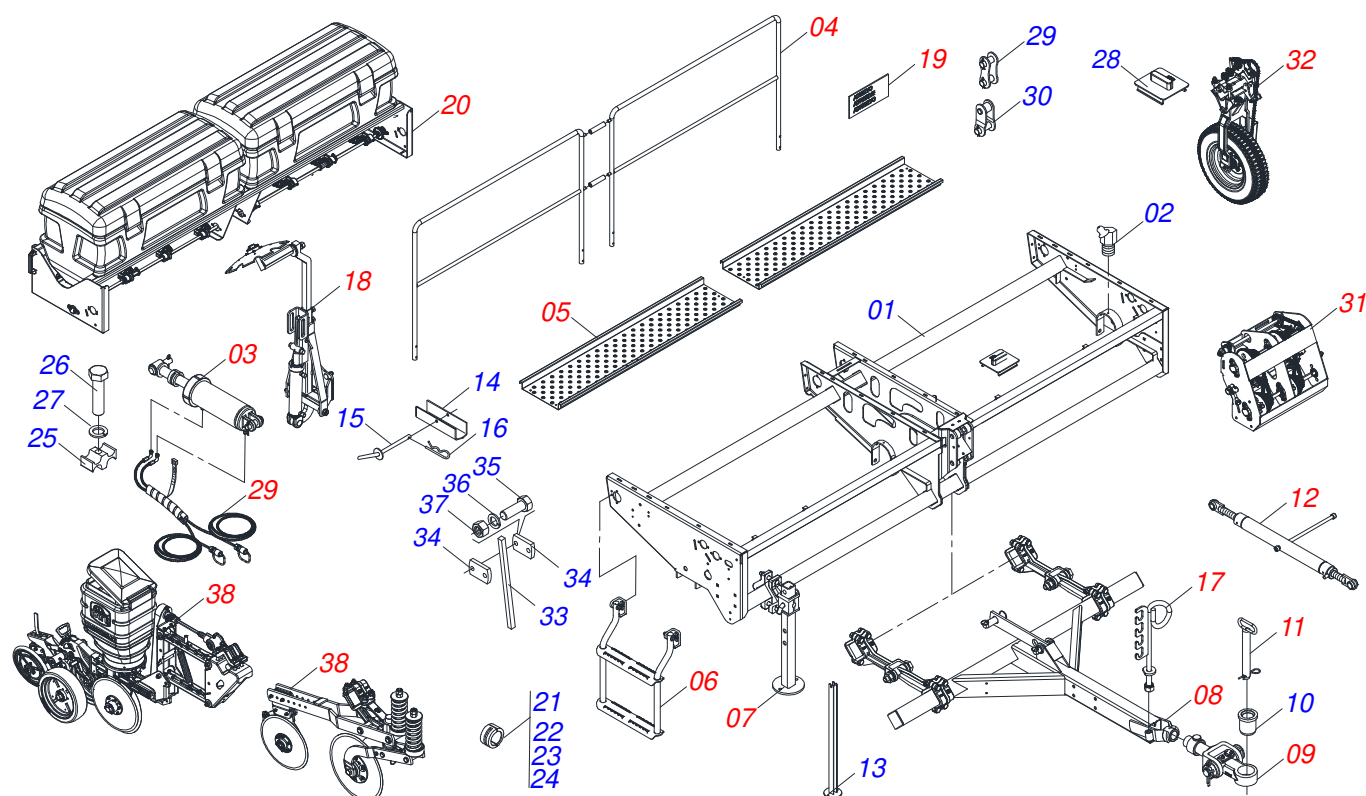


Item	Code	Description	See page	4845	5345
01	0521065921	FRAME - 4845		01	00
01.	0521065922	FRAME - 5345		00	01
02	0503010003	1845 GREASE FITTING		06	06
03	0511057324	CYLINDER SET	5	01	01
03.	0511057324	CYLINDER SET	5	00	01
04	0511057330	HANDRAIL ASSEMBLY - 4845	11	01	00
04.	0511057386	HANDRAIL ASSEMBLY - 5345	12	00	01
05	0511057331	PLATFORM ASSEMBLY - 4845	17	01	00
05.	0511057385	PLATFORM ASSEMBLY - 5345	18	00	01
06	0511056536	LADDER ASSEMBLY	19	02	02
07	0511054971	JACK ASSEMBLY	20	02	02
08	0511057333	DRAWBAR ASSEMBLY 3495/4045/4395/4845/5345/5745	- 22	01	01
09	0511054601	HITCH ARTICULATED TRACTOR	23	01	01
10	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01	01
11	0511053179	TRACTOR COUPLING SHAFT	24	01	01
12	0511057270	DRAWBAR EXTENDER	25	01	01
13	0501065677	STRUT		02	02
14	0521013022	TRANSPORT LOCK		02	02
15	0501068994	8,30 X 78 LOCK PIN		02	02
16	0503030168	HITCH PIN CLIP		02	02
17	0511056736	HOSE SUPPORT		01	01
18	0511057328	SEMI-ASSEMBLED HYDRAULIC MARKER - 4845	32	01	00
18.	0511057387	SEMI-ASSEMBLED HYDRAULIC MARKER - 5345	33	00	01
19	0511057332	LABELS KIT - 4845	41	01	00
19.	0511057384	LABELS KIT - 5345	42	00	01
20	0511057326	FERTILIZER BOX ASSEMBLY - 4845	53	01	00
20.	0511057389	FERTILIZER BOX ASSEMBLY - 5345	55	00	01
21	0501047895	ROD STOP		02	02
22	0501047885	ROD STOP		02	02
23	0501047886	ROD STOP		02	02
24	0501047887	ROD STOP		02	02



Item	Code	Description	See page	4845	5345
25	0502012702	BODY SUPPORT CLAMP		01	01
26	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		01	01
27	0503010180	7/16" SPRING WASHER		01	01
28	0503032624	SILO FERTILIZER GUTTER		06	05
29	0503010780	N-2050 AMENDMENT		02	02
30	0503010951	REDUCTION		04	04
31	0909091872	TRANSMISSION ASSY - 4845/5345	58	01	01
32	0521045638	WHEELED SPRING	72	02	02
33	0521013164	EXTENSOR		02	02
34	0501011310	FIXER LOCK		08	08
35	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		04	04
36	0503010019	1/2" SPRING WASHER		04	04
37	0503010060	1/2" NUT		04	04
38	0909091861	FERTILIZER ROW SEED ASSY	77	04	04

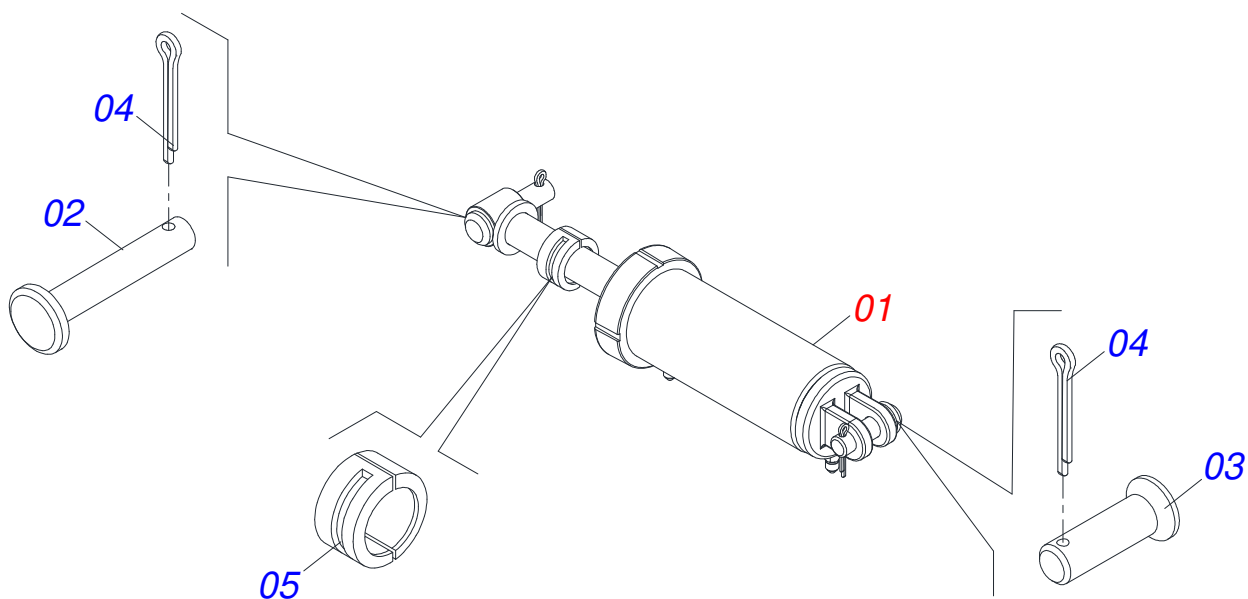


Item	Code	Description	See page	QT
01	0521045510	HYDRAULIC CYLINDER	4	01
02	0551014099	COUPLING SHAFT 31,75 X 185		01
03	0521010547	1.2" X 6.5" COUPLING SHAFT		01
04	0503010523	1/4" X 2" COTTERPIN		02
05	0501047888	ROD STOP		01

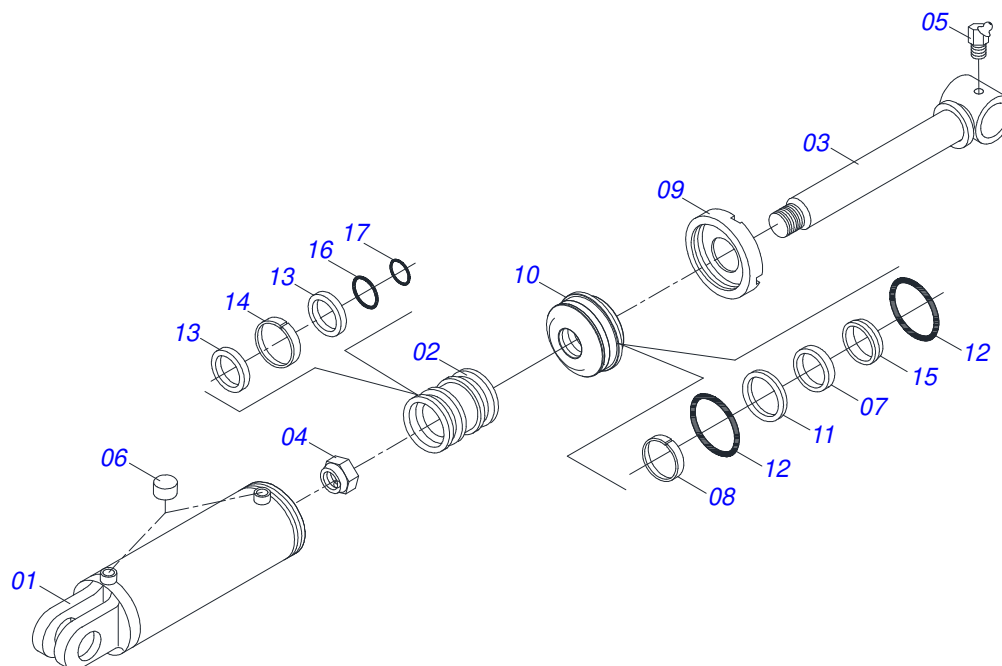


Item	Code	Description	See page	QT
01	0521065976	SHIRT 127 X 438,5		01
02	0581013698	PISTON		01
03	0521067585	EXTENDER 50.80 X 371.5 WITH BUSHING		01
04	0503010817	1.1/4" SELF LOCKING NUT		01
05	0503010003	1845 GREASE FITTING		01
06	0503030385	CYLINDER PLUG N-002		02
07	0503018439	WIPER SEAL		01
08	0503018150	RING GUIDE		01
09	0502010382	5" END CAP		01
10	0581010353	RING SUPPORT		01
11	0503018026	1870-2000-375 B GASKET		01
12	0503011453	O-RING		02
13	0503018152	O-RING		02
14	0503018024	RING BS		01
15	0503018025	RING GUIDE		01
16	0503010039	D-2000 SCRAPER RING		01
17	0503010173	2-220 N 3006-9B O-RING		01

CYLINDER SET


0511057324

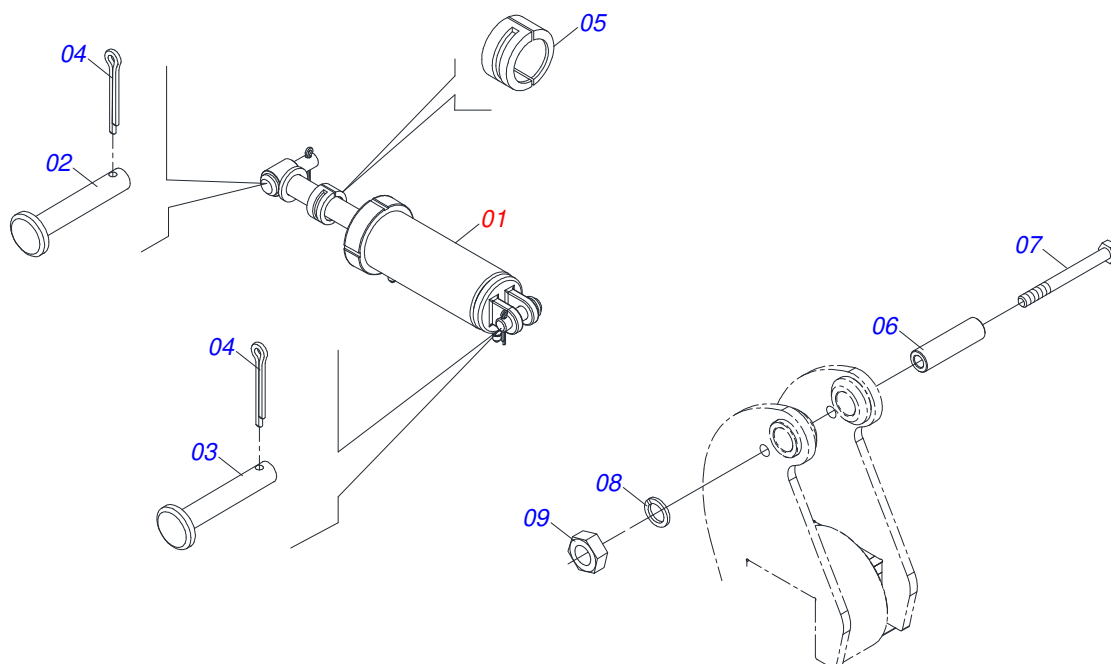


Item	Code	Description	See page	QT
01	0521045509	HYDRAULIC CYLINDER 50,8 X 101,6 X 507,5 X 240,5 6		02
02	0521012538	1.2" X 3.5" COUPLING SHAFT		02
03	0521010547	1.2" X 6.5" COUPLING SHAFT		02
04	0503010523	1/4" X 2" COTTERPIN		04
05	0501047888	ROD STOP		02
06	0571019384	SPACING SLEEVE 16,30 X 30 X 104		02
07	0501013867	BOLT 5/8 UNC X 6 CS G.5 ZN		02
08	0503010027	5/8" SPRING WASHER		02
09	0503010013	5/8" NUT		02

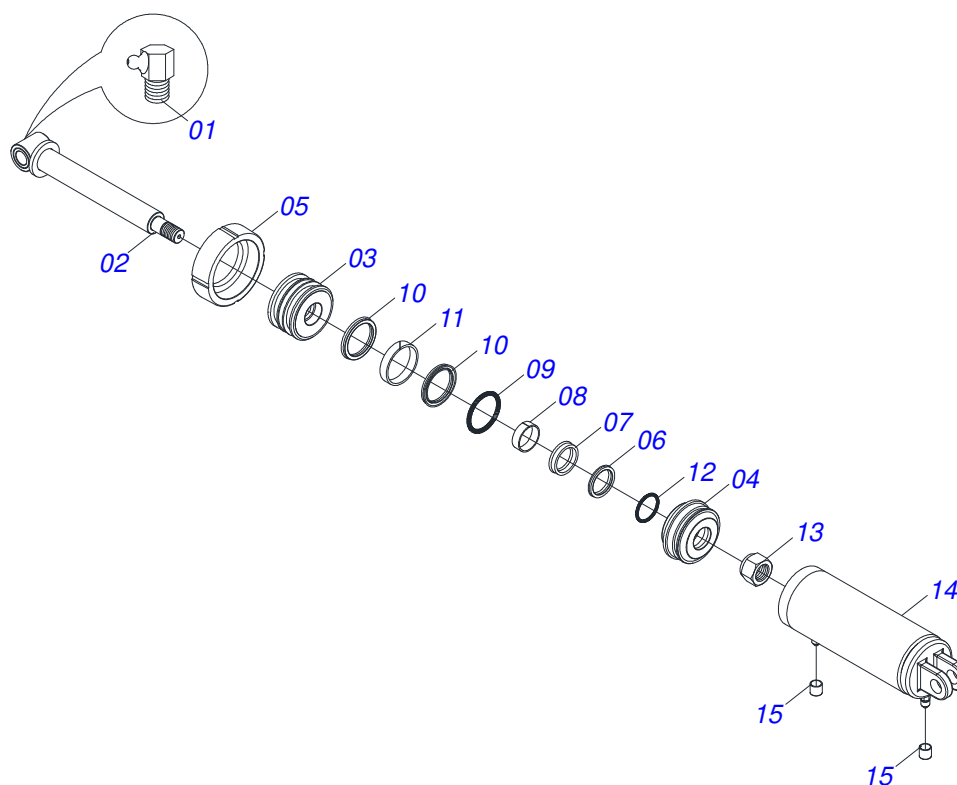


Item	Code	Description	See page	QT
01	0503010004	1890 GREASE FITTING		01
02	0521065974	50,8 X 382,5 PISTON ROD		01
03	0502010992	2.0" X 4.0" PISTON		01
04	0502010778	2" X 4.2" RING SUPPORT		01
05	0502010017	4" HEAD		01
06	0503010039	D-2000 SCRAPER RING		01
07	0503010991	1870-2000-375-B GASKET		01
08	0503010952	W2-2250-500 RING		01
09	0503010338	2-342 N 3006-9B O'RING		01
10	0503010043	PACKING 3750-3250		02
11	0503010994	W2-4000-500 PK RING G.E		01
12	0503010345	2-218 N 3006-9B O'RING		01
13	0503010817	1.1/4" SELF LOCKING NUT		01
14	0521065975	101,6 X 433,5 BARREL		01
15	0503030385	CYLINDER PLUG N-002		02

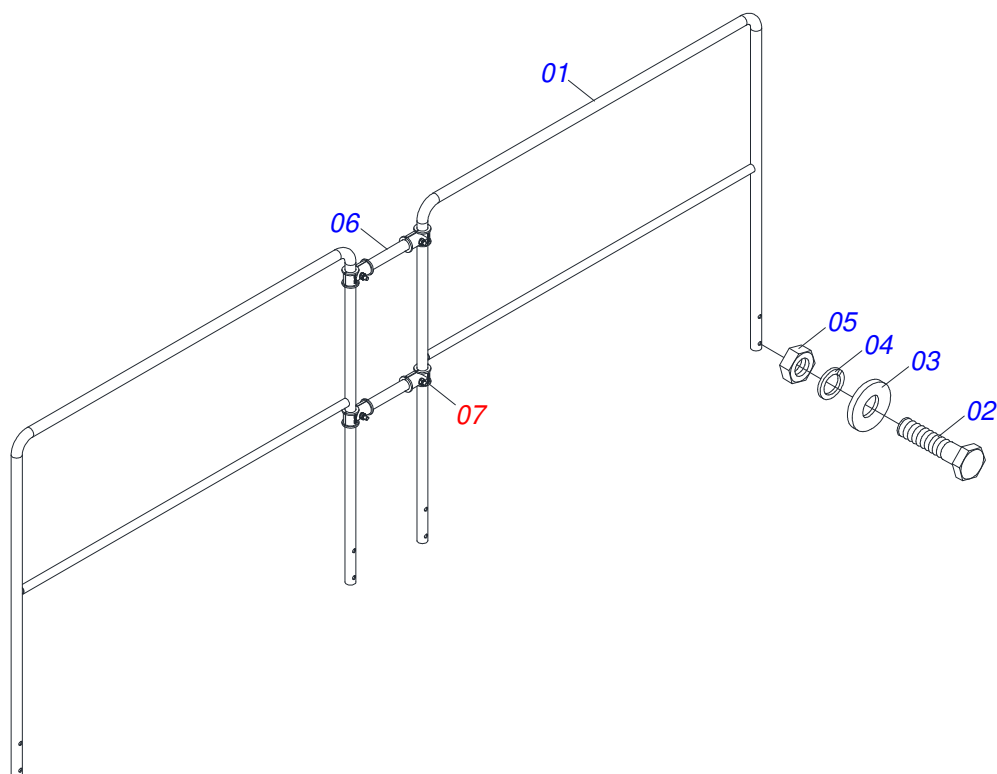


Item	Code	Description	See page	QT
01	0521065948	HANDRAIL FRAME		02
02	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
03	0511017302	FLAT WASHER		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0581012916	INTERMEDIATE TUBE		02
07	0511059383	HANDRAIL INTERNAL FIXER		04

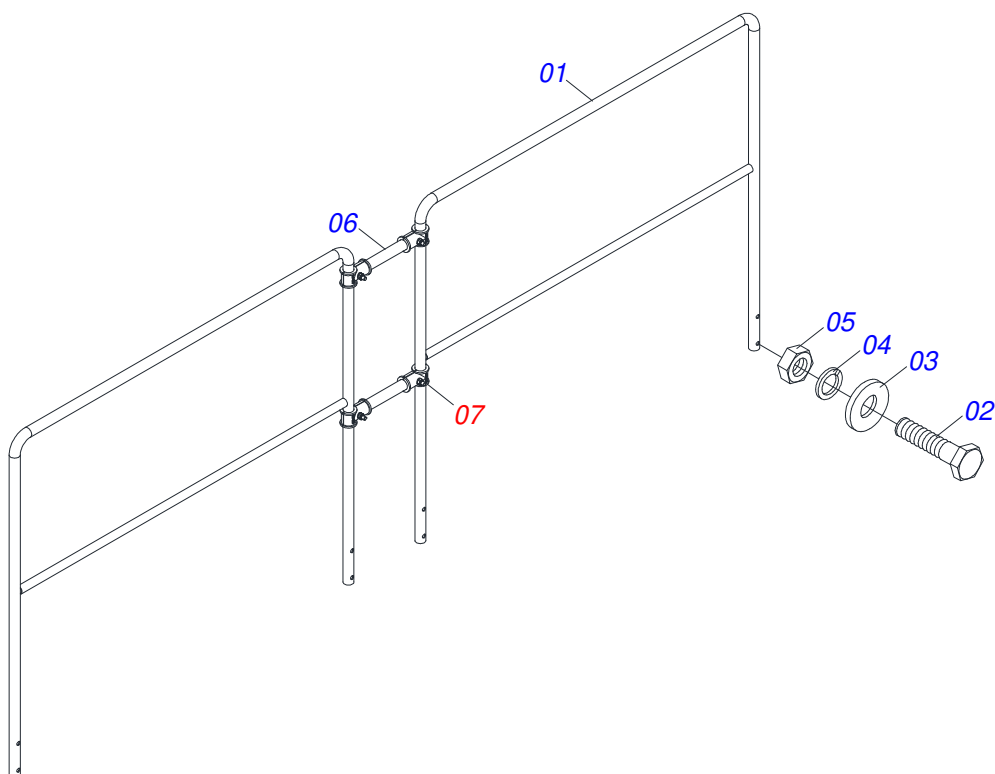


Item	Code	Description	See page	QT
01	0521065949	FRAME HANDRAIL 3495		02
02	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
03	0511017302	FLAT WASHER		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0581012916	INTERMEDIATE TUBE		02
07	0511059383	HANDRAIL INTERNAL FIXER		04

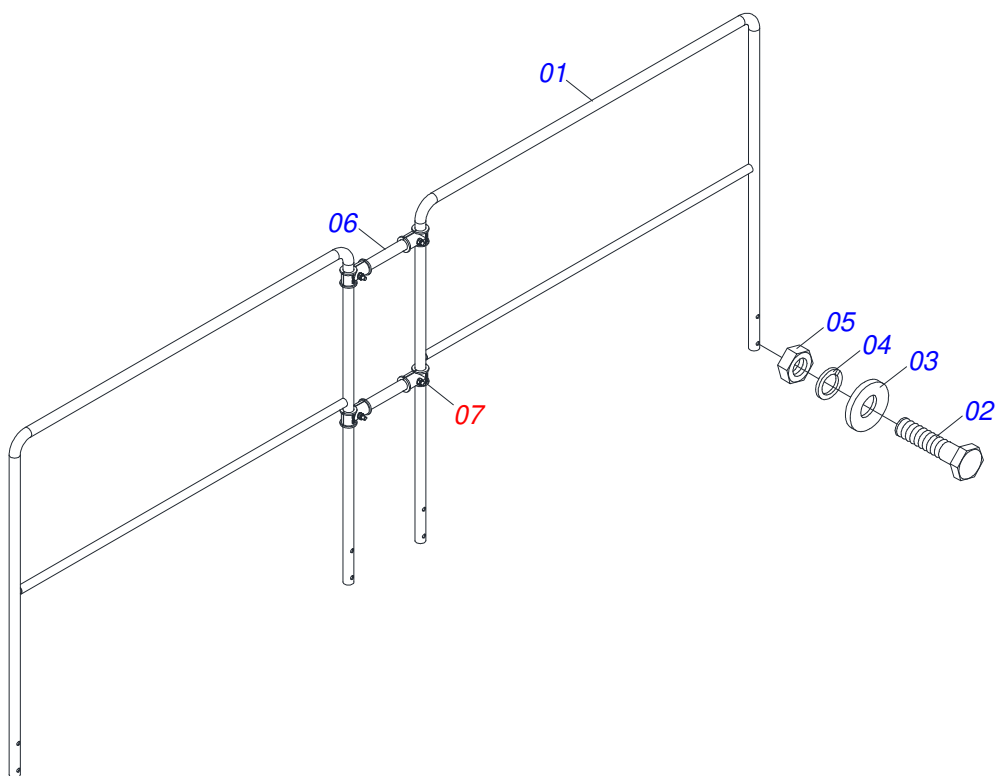


Item	Code	Description	See page	QT
01	0521065950	HANDRAIL		02
02	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
03	0511017302	FLAT WASHER		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0581012916	INTERMEDIATE TUBE		02
07	0511059383	HANDRAIL INTERNAL FIXER		04

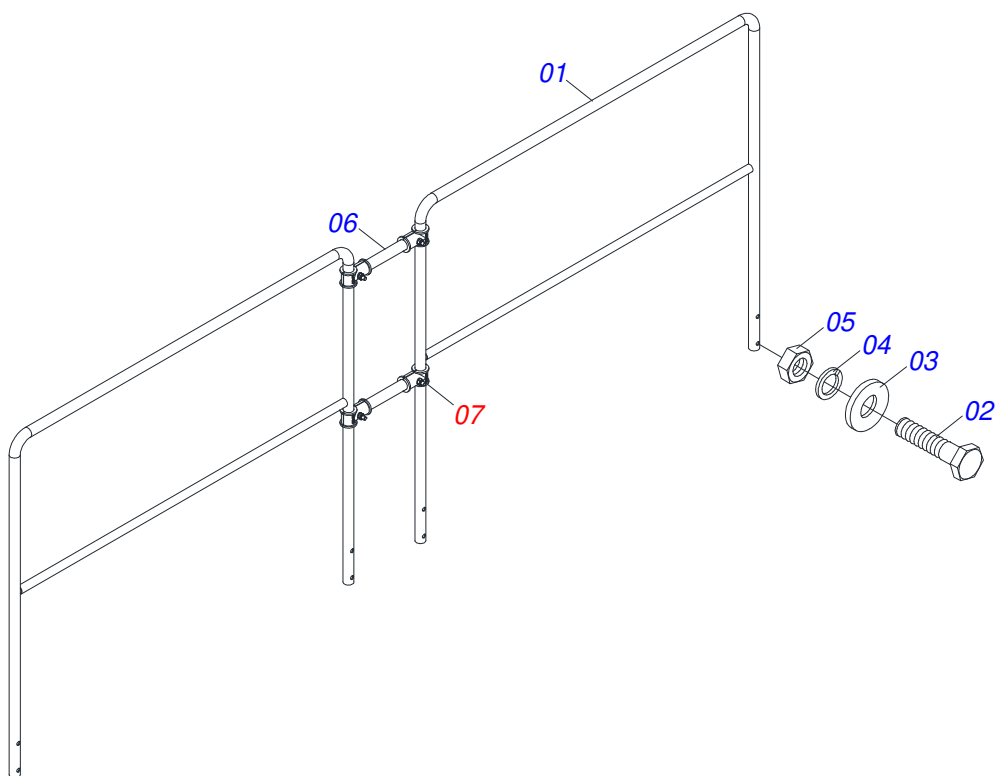


Item	Code	Description	See page	QT
01	0521065951	HANDRAIL 4395		02
02	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
03	0511017302	FLAT WASHER		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0581012916	INTERMEDIATE TUBE		02
07	0511059383	HANDRAIL INTERNAL FIXER		04

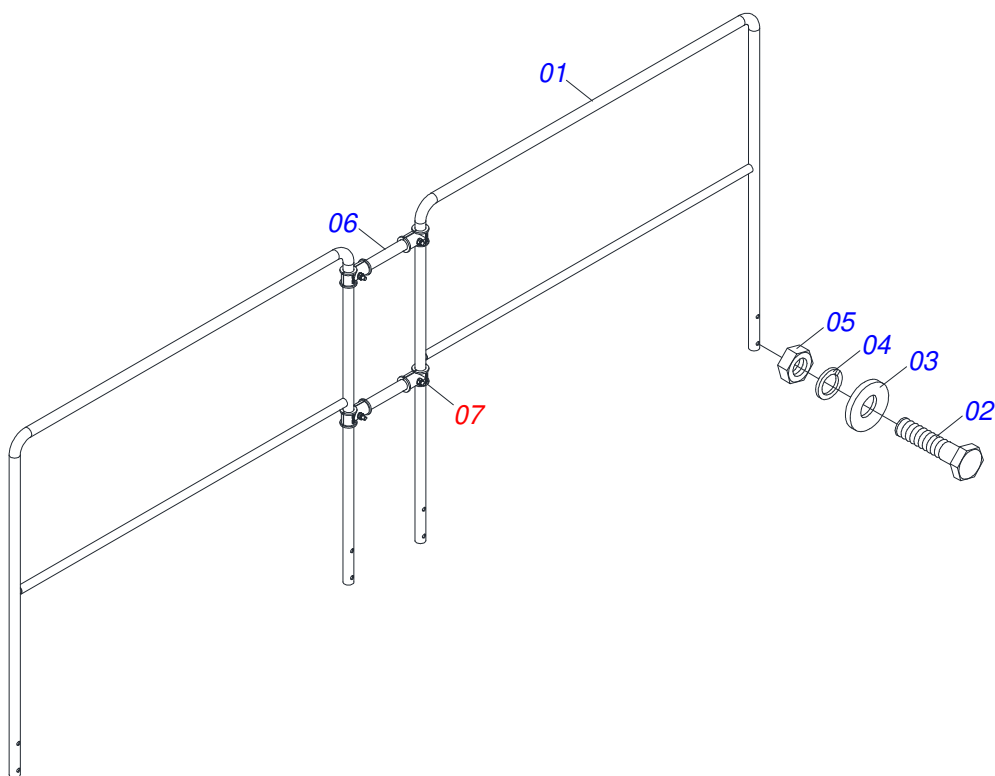


Item	Code	Description	See page	QT
01	0521065952	HANDRAIL FRAME		02
02	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
03	0511017302	FLAT WASHER		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0581012916	INTERMEDIATE TUBE		02
07	0511059383	HANDRAIL INTERNAL FIXER		04

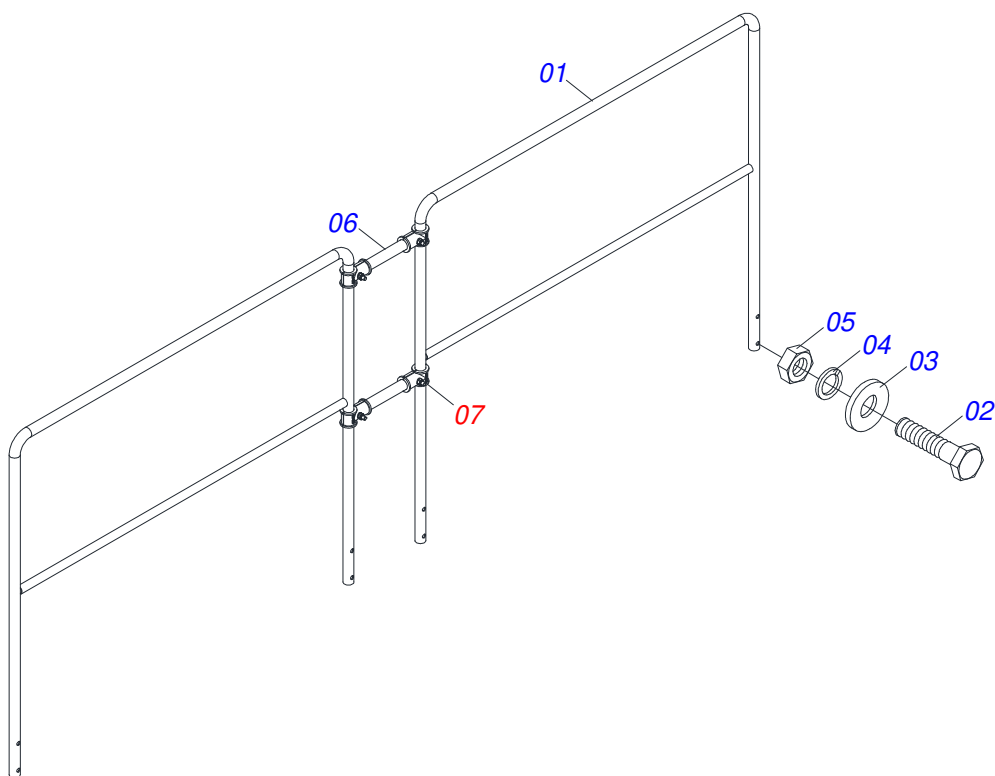


Item	Code	Description	See page	QT
01	0521065953	HANDRAIL FRAME 5345		02
02	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
03	0511017302	FLAT WASHER		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0581012916	INTERMEDIATE TUBE		02
07	0511059383	HANDRAIL INTERNAL FIXER		04

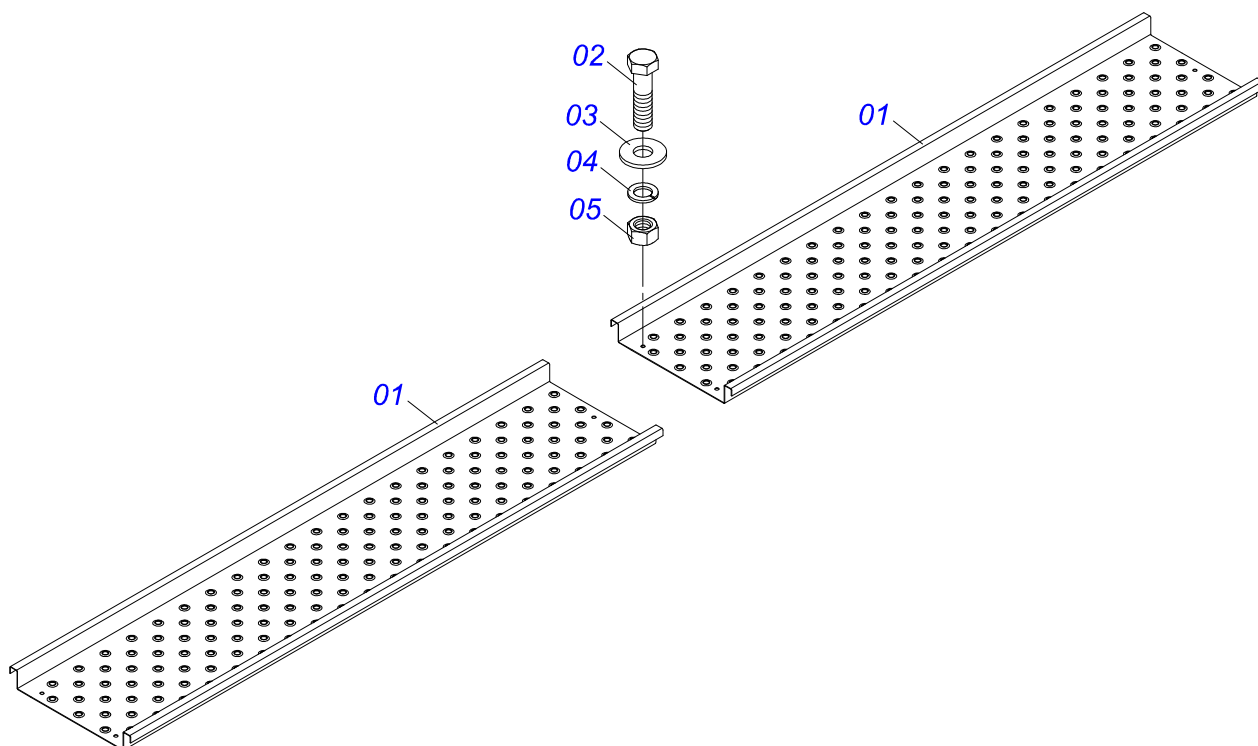


Item	Code	Description	See page	QT
01	0571018864	PLATFORM 3245		02
02	0503010237	3/8" X 1" BOLT		08
03	0501010984	FLAT WASHER		16
04	0503010025	3/8" SPRING WASHER		08
05	0503010026	3/8" NUT		08

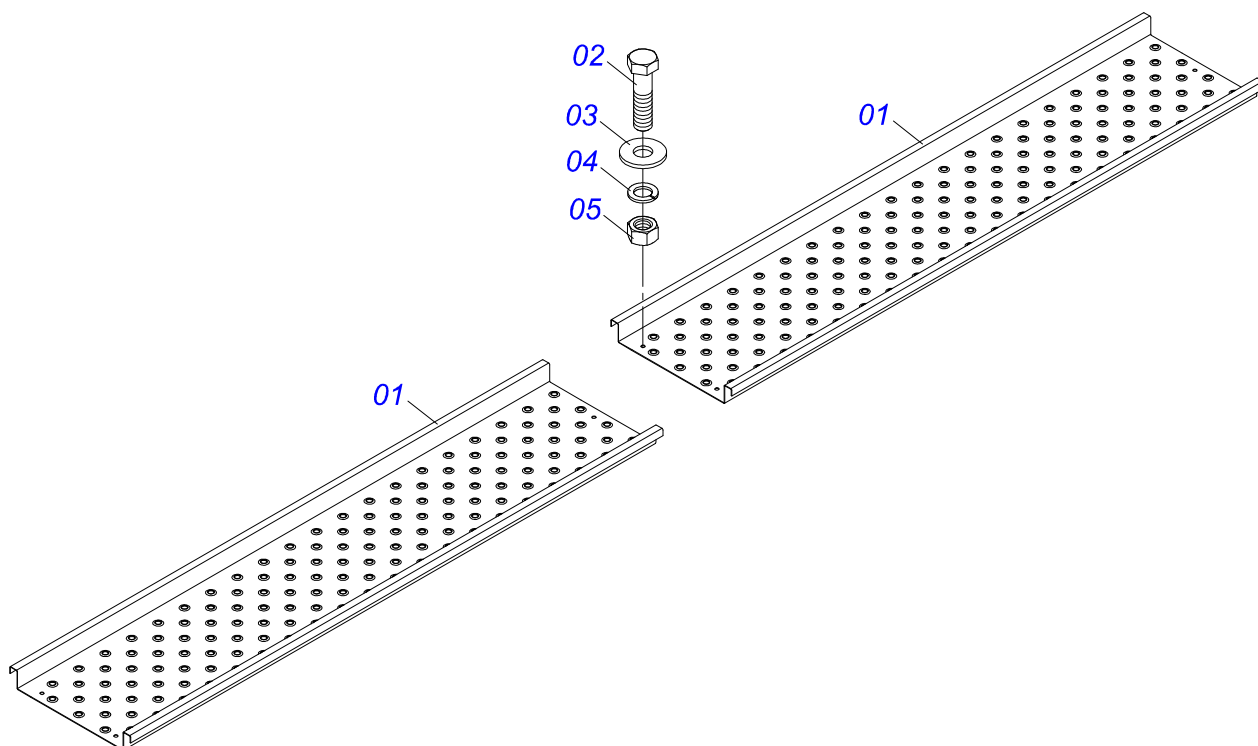


Item	Code	Description	See page	QT
01	0571018865	PLATFORM		02
02	0503010237	3/8" X 1" BOLT		08
03	0501010984	FLAT WASHER		16
04	0503010025	3/8" SPRING WASHER		08
05	0503010026	3/8" NUT		08

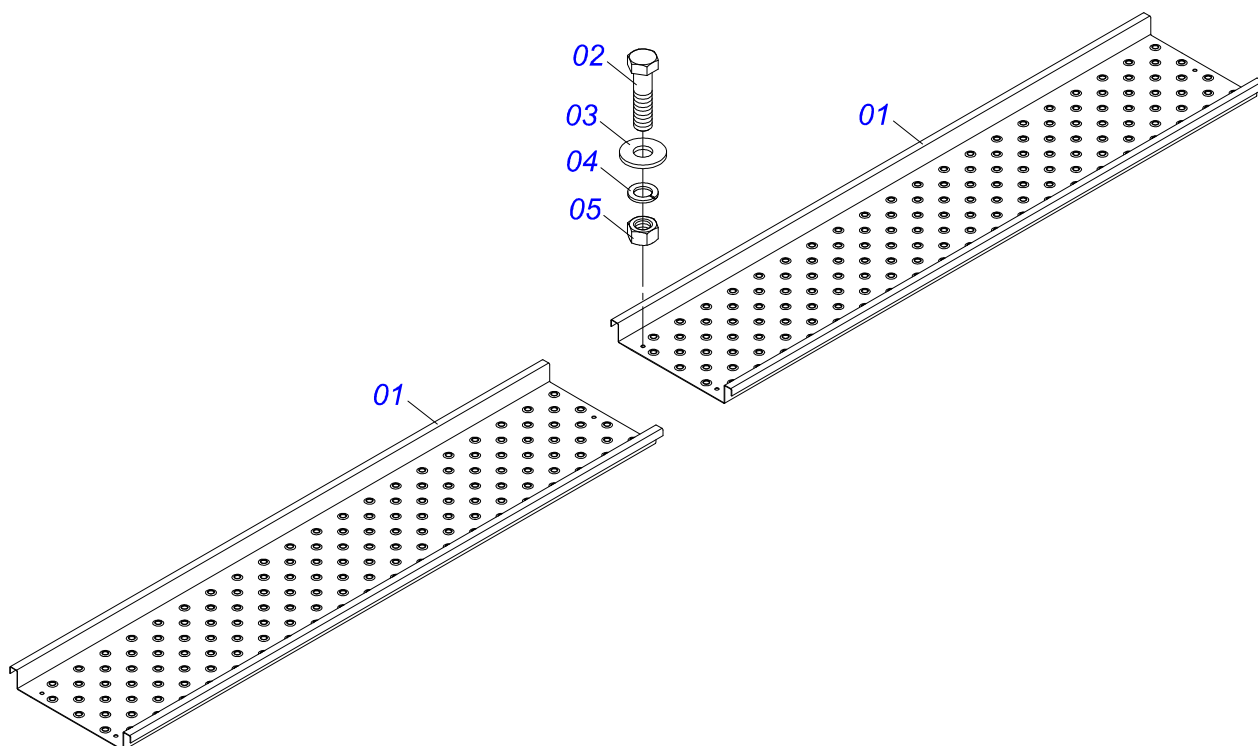


Item	Code	Description	See page	QT
01	0571018866	SET PLATFORM 4045		02
02	0503010237	3/8" X 1" BOLT		08
03	0501010984	FLAT WASHER		16
04	0503010025	3/8" SPRING WASHER		08
05	0503010026	3/8" NUT		08

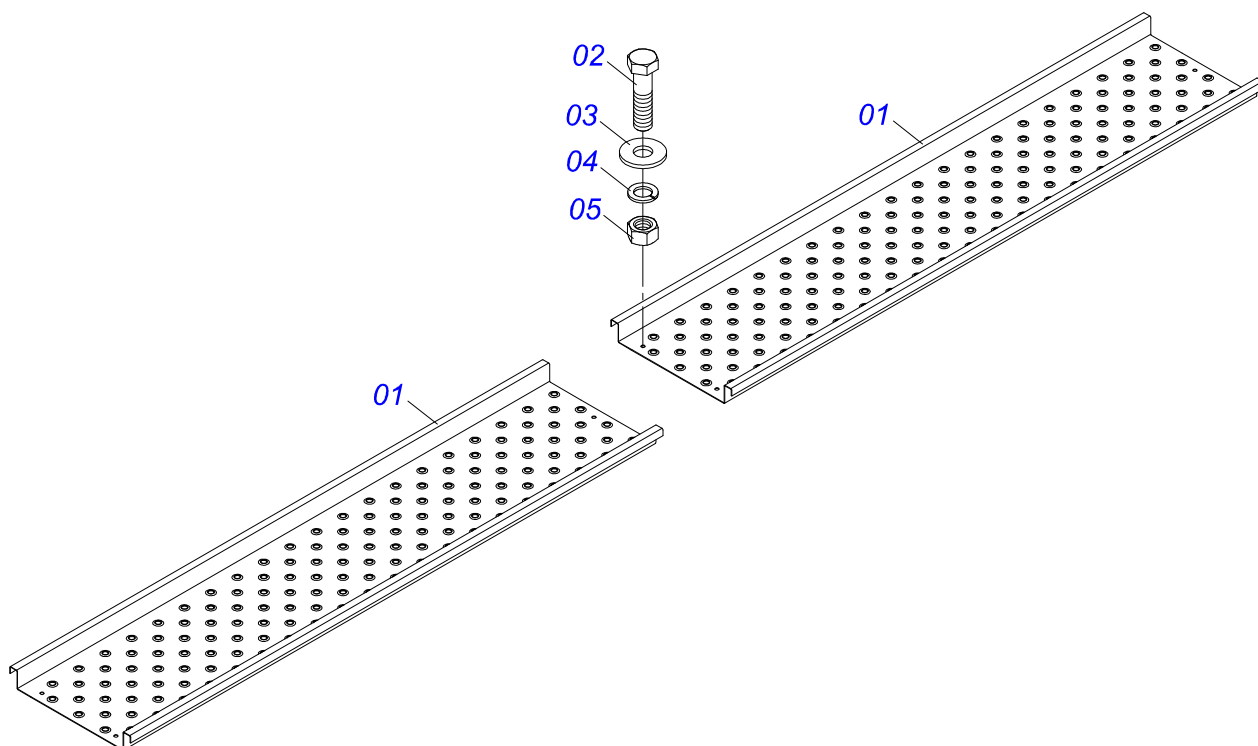

Item	Code	Description	See page	QT
01	0571018867	PLATFORM 4395		02
02	0503010237	3/8" X 1" BOLT		08
03	0501010984	FLAT WASHER		16
04	0503010025	3/8" SPRING WASHER		08
05	0503010026	3/8" NUT		08

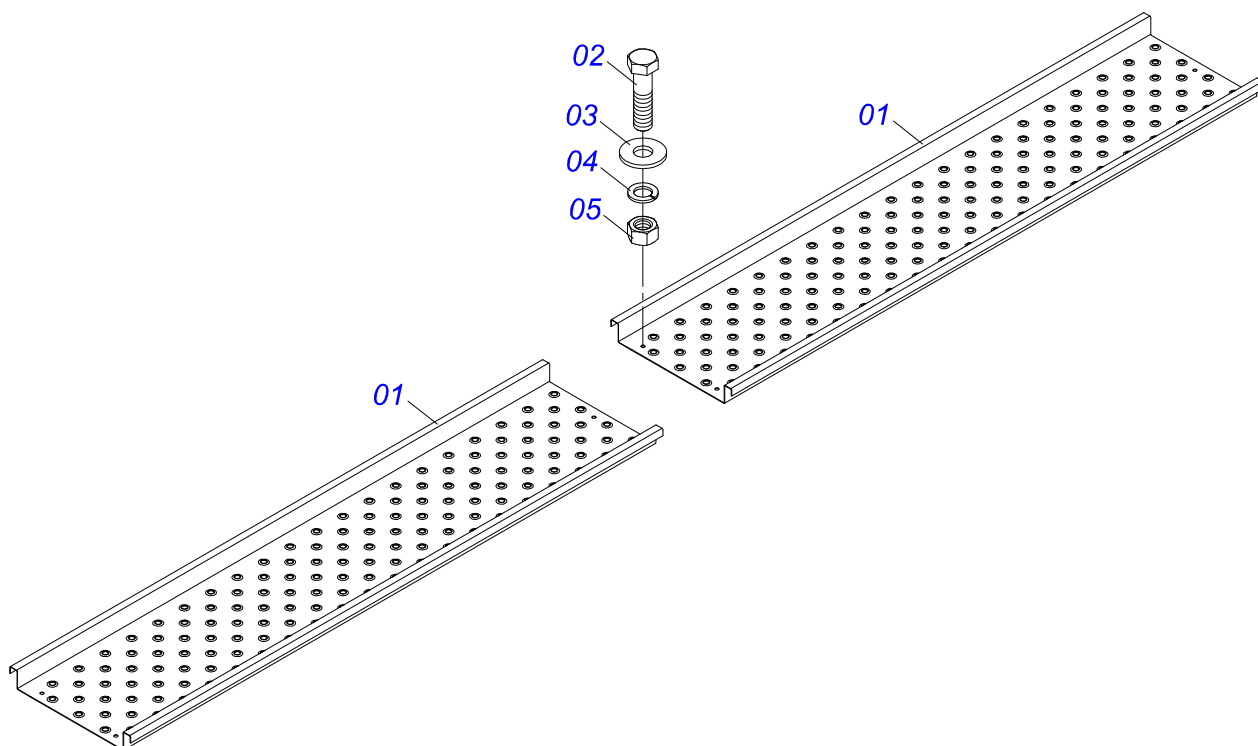


Item	Code	Description	See page	QT
01	0571018868	SET PLATFORM 4845		02
02	0503010237	3/8" X 1" BOLT		08
03	0501010984	FLAT WASHER		16
04	0503010025	3/8" SPRING WASHER		08
05	0503010026	3/8" NUT		08

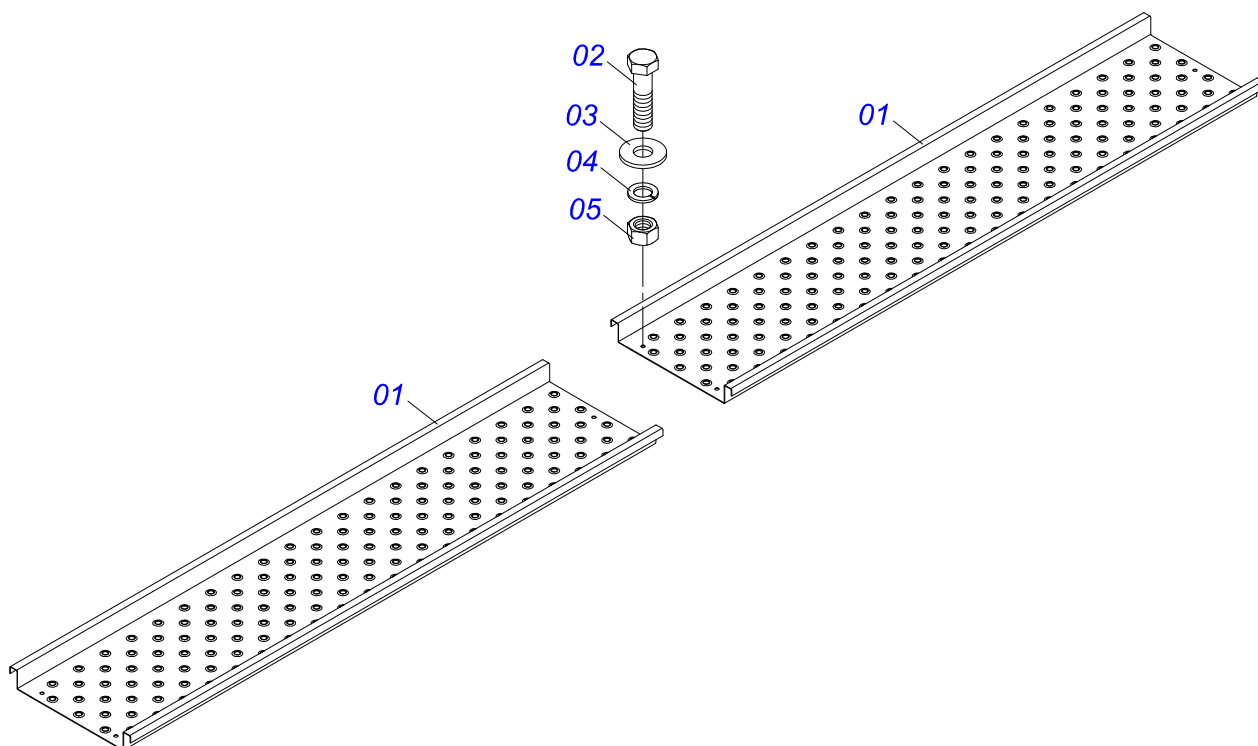

Item	Code	Description	See page	QT
01	0571018869	SET PLATFORM 5345		02
02	0503010237	3/8" X 1" BOLT		08
03	0501010984	FLAT WASHER		16
04	0503010025	3/8" SPRING WASHER		08
05	0503010026	3/8" NUT		08

LADDER ASSEMBLY


0511056536

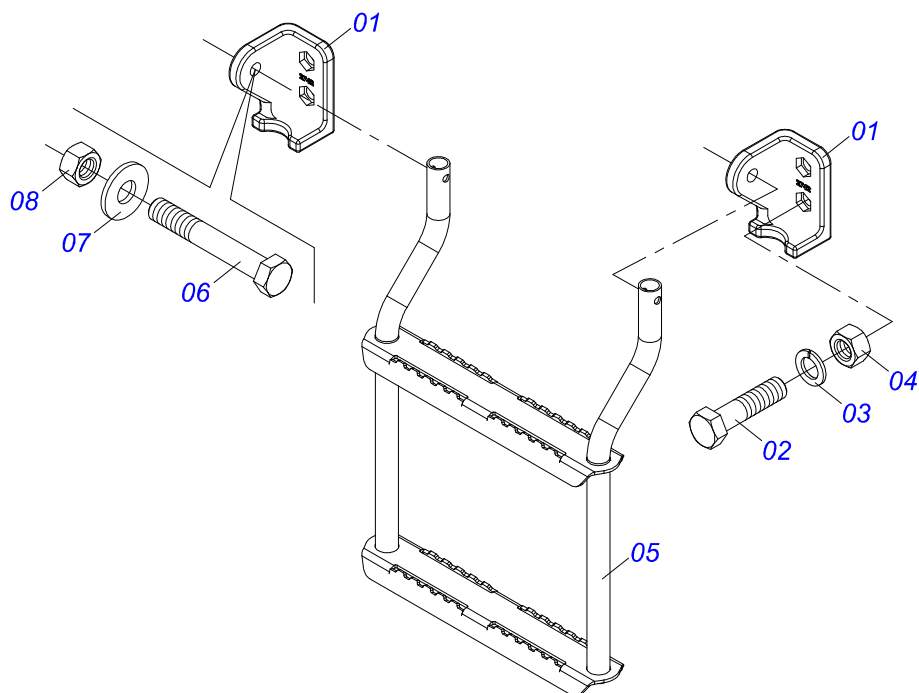

Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8" SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	FLAT WASHER	02	
08	0503013357	3/8" SELF-ADJUSTING NUT	02	

JACK ASSEMBLY


0511054971

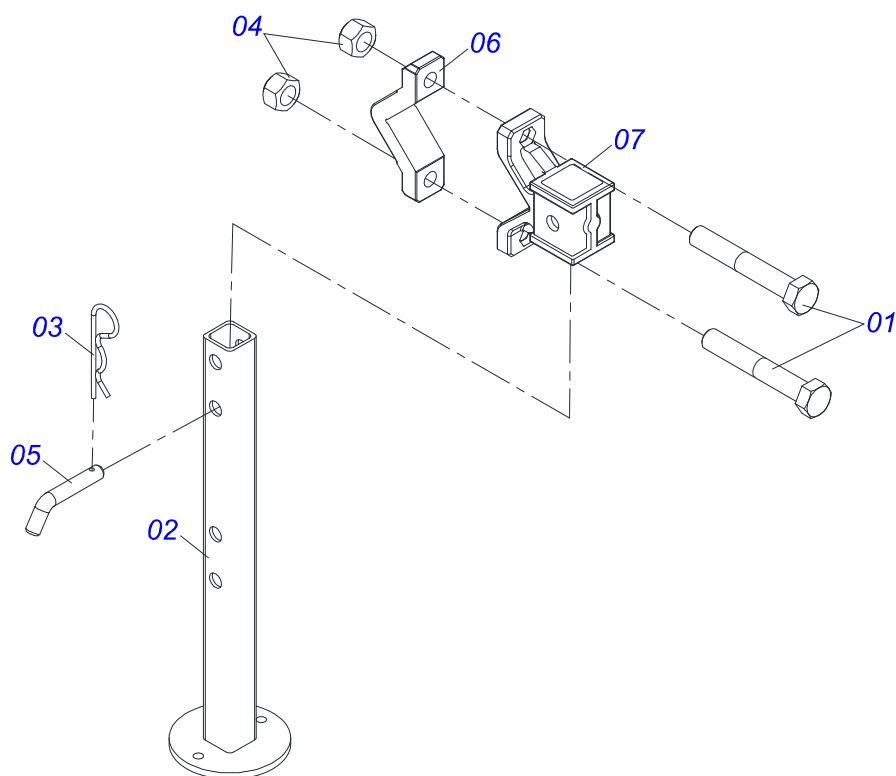


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HITCH PIN CLIP		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

DRAWBAR ASSEMBLY - 3245


0511057229

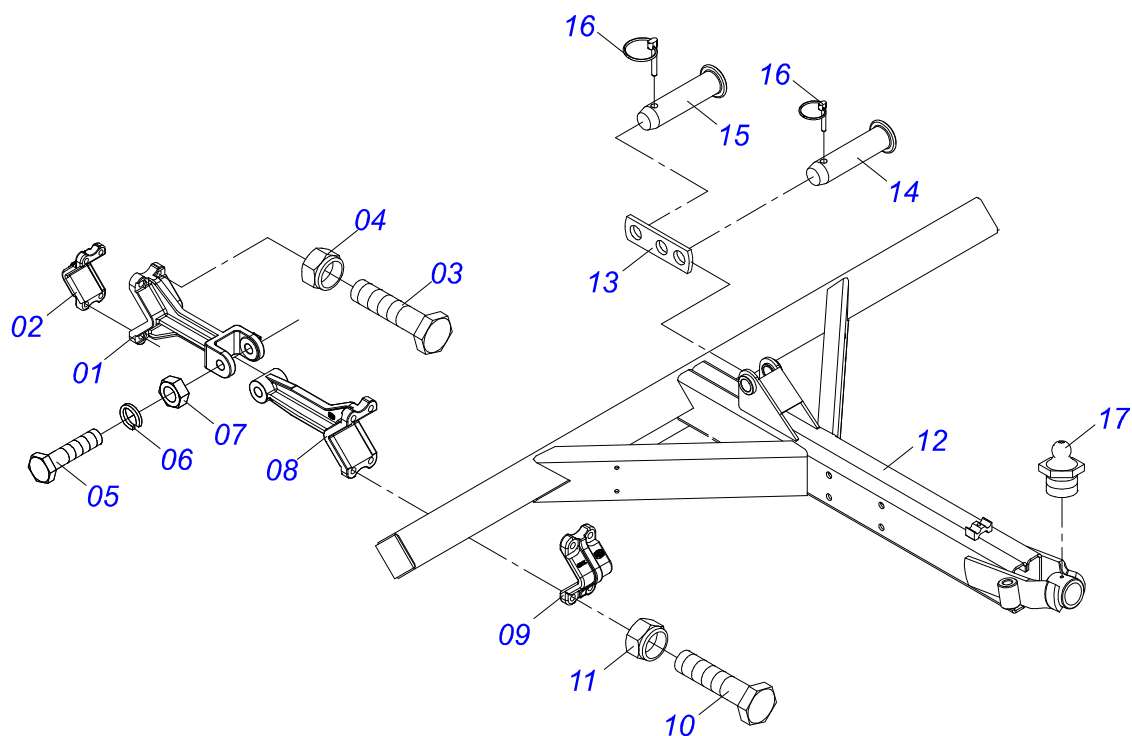


Item	Code	Description	See page	QT
01	0502012806	SUPPORT REAR FIXER DRAWBAR	02	
02	0502012789	FIXER SUPPORT FERTILIZER ROW	02	
03	0503017960	5/8" X 3-12" BOLT	08	
04	0503010811	5/8" UNF SELF ADJUSTING NUT	08	
05	0501010191	1" X 6" BOLT	02	
06	0503010012	1" SPRING WASHER	02	
07	0501010059	1.5/8 NUT	02	
08	0502012805	SUPPORT FRONT FIXER DRAWBAR	02	
09	0502012789	FIXER SUPPORT FERTILIZER ROW	02	
10	0503017960	5/8" X 3-12" BOLT	08	
11	0503010811	5/8" UNF SELF ADJUSTING NUT	08	
12	0521065958	DRAWBAR	01	
13	0561019087	DRAWBAR TRANSPORT LOCK	01	
14	0551014099	COUPLING SHAFT 31,75 X 185	01	
15	0521010544	1.2" X 4.9" COUPLING SHAFT	01	
16	0503030085	LOCK PIN	02	
17	0503010002	1800 GREASE FITTING	01	

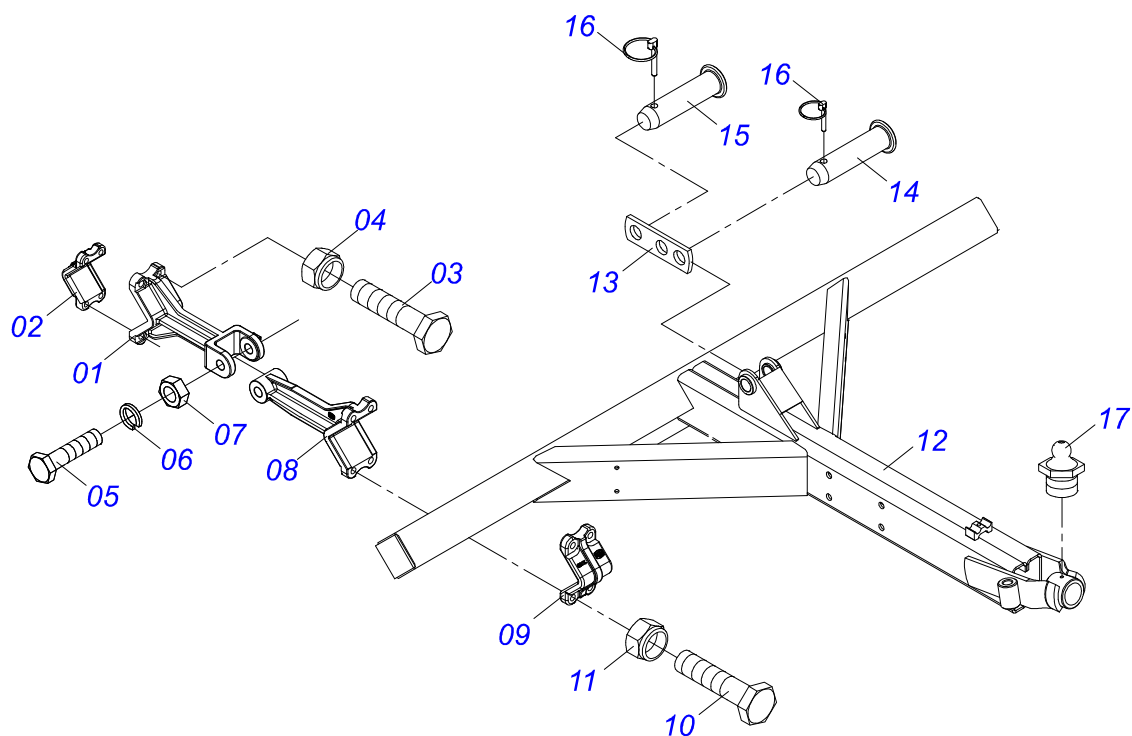


Item	Code	Description	See page	QT
01	0502012806	SUPPORT REAR FIXER DRAWBAR		04
02	0502012789	FIXER SUPPORT FERTILIZER ROW		04
03	0503017960	5/8" X 3-12" BOLT		16
04	0503010811	5/8" UNF SELF ADJUSTING NUT		16
05	0501010191	1" X 6" BOLT		04
06	0503010012	1" SPRING WASHER		04
07	0501010059	1.5/8 NUT		04
08	0502012805	SUPPORT FRONT FIXER DRAWBAR		04
09	0502012789	FIXER SUPPORT FERTILIZER ROW		04
10	0503017960	5/8" X 3-12" BOLT		16
11	0503010811	5/8" UNF SELF ADJUSTING NUT		16
12	0521065958	DRAWBAR		01
13	0561019087	DRAWBAR TRANSPORT LOCK		01
14	0551014099	COUPLING SHAFT 31,75 X 185		01
15	0521010544	1.2" X 4.9" COUPLING SHAFT		01
16	0503030085	LOCK PIN		02
17	0503010002	1800 GREASE FITTING		01

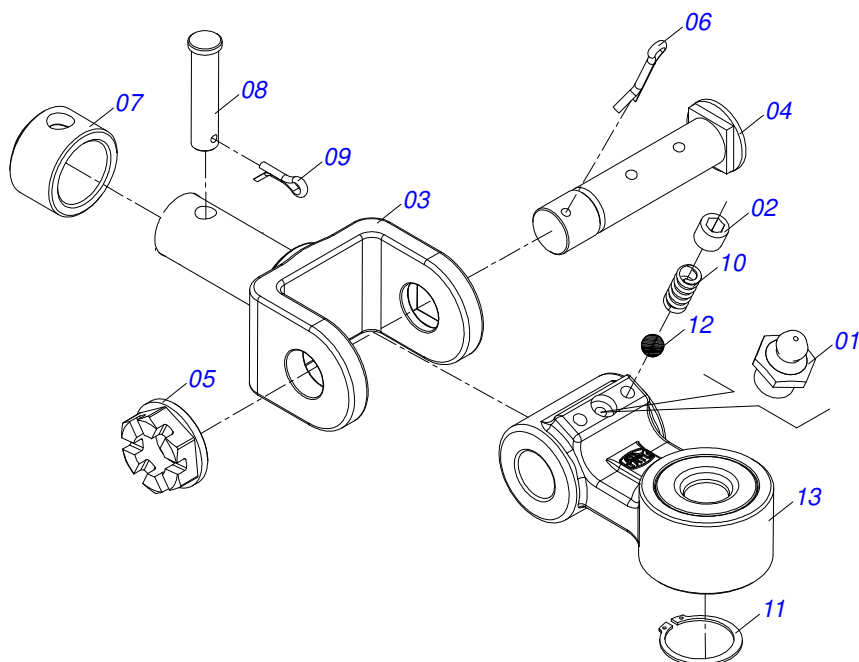


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING	01	
02	0503016482	BOLT	02	
03	0502040846	U TRACTOR HITCH	01	
04	0581019654	ASSY BOLT	01	
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT	01	
06	0503010010	1/4" X 2.1/2" COTTERPIN	01	
07	0521010681	BUSHING COUPLING BODY	01	
08	0521010639	COUPLING SHAFT	01	
09	0503010571	1/4" X 1.1/2 COTTERPIN	01	
10	0503033731	COMPRESSION SPRING LEFT	02	
11	0503010396	501060 CLAMPING RING (FOR AXLE)	01	
12	0503011331	3/8 BALL	02	
13	0501110778	TRACTOR HITCH	01	

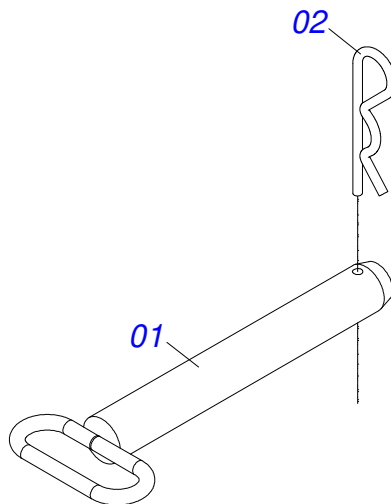


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

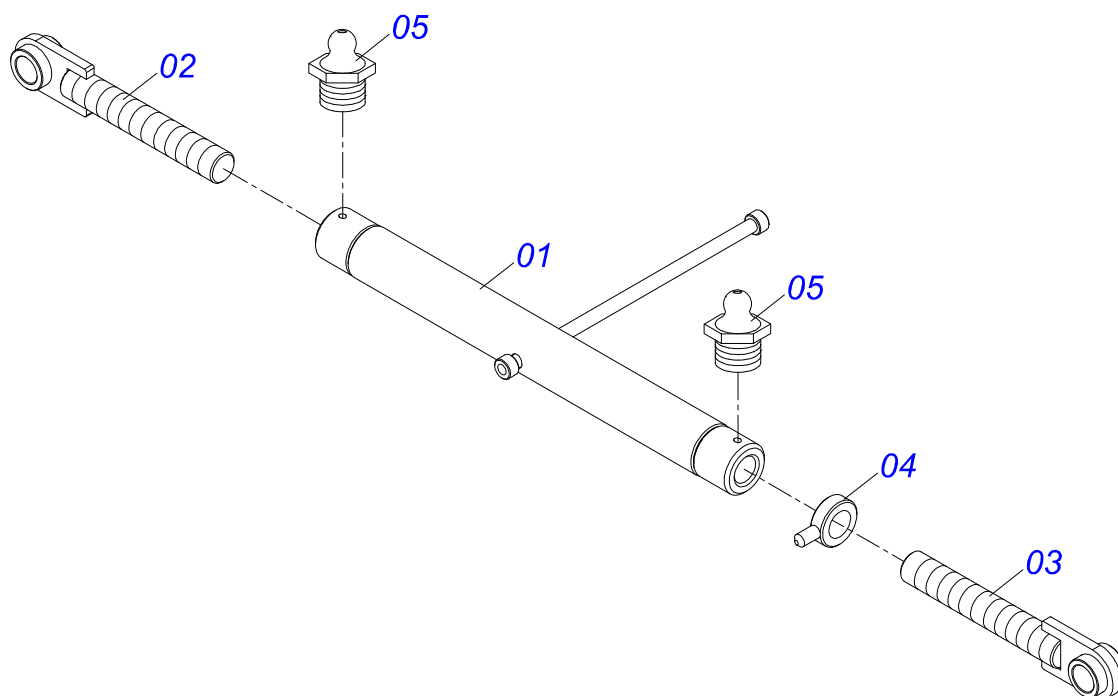


Item	Code	Description	See page	QT
01	0501069529	653 TURNBUCKLE		01
02	0521065959	JACK R.1.1/2 UNC RIGHT X 240		01
03	0521065960	JACK R.1.1/2 UNC LEFT X 240		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

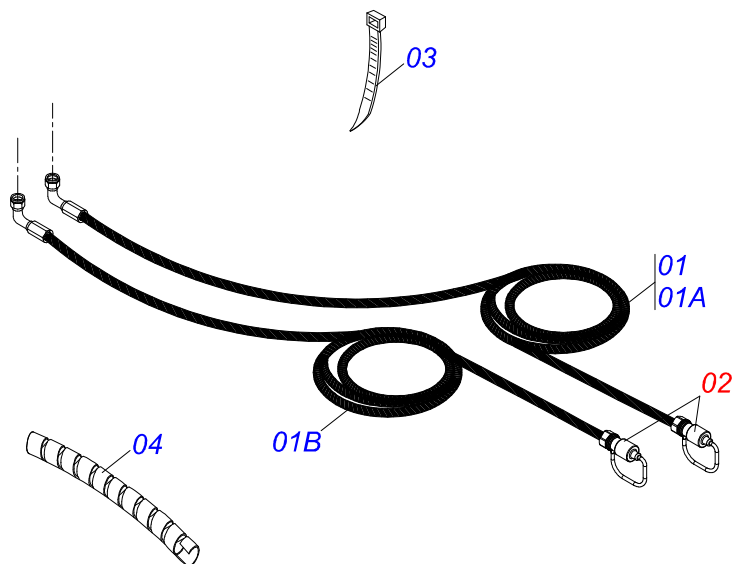

Item	Code	Description	See page	QT
01	0511057267	HOSE KIT HYDRAULIC		01
01A	0501080722	3/8 X 3300 TC-TM HOSE ASSY		01
01B	0501082023	HOSE 3/8 X 3600 TC-TM		01
02	0501053834	MALE QUICK COUPLER	27	02
03	0503013100	NYLON CLAMP		02
04	0571017774	SPRING PROTECTION QUICK HOSE		01

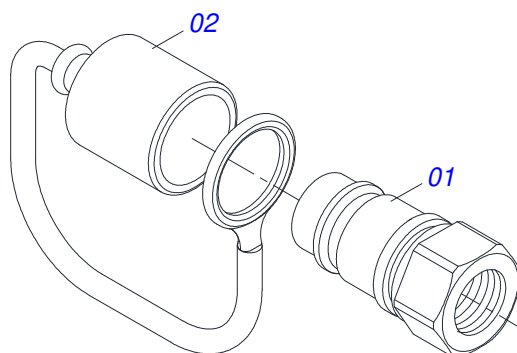


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

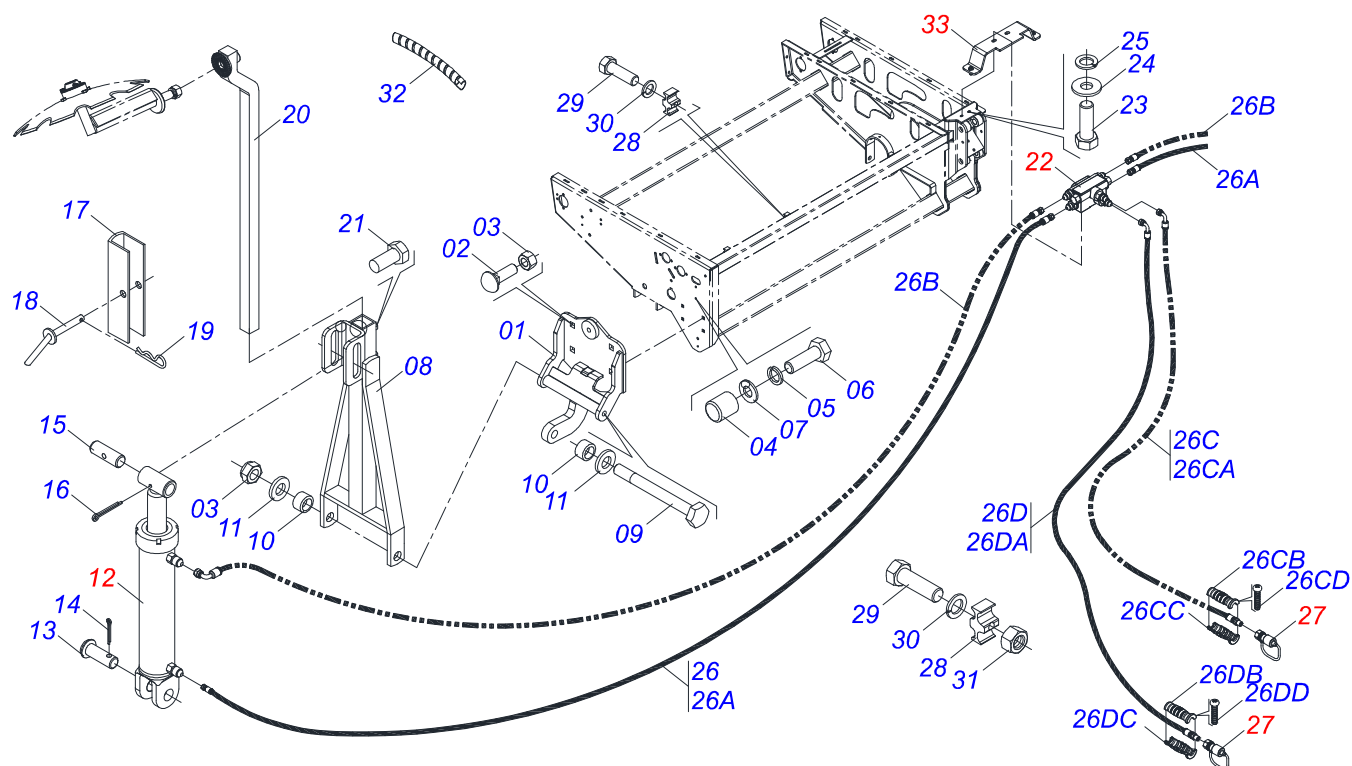


Item	Code	Description	See page	QT
01	0521066622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
03	0503012412	5/8 UNC SELF LOCKING NUT		06
04	0503011070	BEATER		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07	0551019213	FLAT WASHER		02
08	0501069470	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0501012140	FLAT WASHER		04
12	0511058449	HYDRAULIC CYLINDER	34	02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010523	1/4" X 2" COTTERPIN		02
17	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
18	0501068994	8,30 X 78 LOCK PIN		02
19	0503030168	HITCH PIN CLIP		02
20	0501069643	890 TURNBUCKLE		02
21	0503011854	5/8" X 1-1/4" BOLT		04
22	0501054649	HBM SEQUENTIAL VALVE	35	01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
24	0501010984	FLAT WASHER		02
25	0503010025	3/8" SPRING WASHER		02
26	0511057208	HOSE KIT MARKER HYDRAULIC		01
26A	0501080452	3/8" X 98" TR-TR HOSE		02
26B	0501080414	3/8" X 110.2" TR-TC HOSE ASSY		02
26C	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		01
26CA	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
26CB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01

Item	Code	Description	See page	QT
26CC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
26CD	0503018952	PLASTIC BOLT		06
26D	0521052850	3/8 X 4200 TC-TM PURPLE/BLUE HOSE		01
26DA	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
26DB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
26DC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
26DD	0503018952	PLASTIC BOLT		06
27	0501053834	MALE QUICK COUPLER	27	02
28	0502012702	BODY SUPPORT CLAMP		08
29	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		08
30	0503010180	7/16" SPRING WASHER		08
31	0503010244	7/16" NUT		02
32	0571014419	PLASTIC PROTECTION SPRING HOSE 3/4 X 700MM		04
33	0511058119	VALVE SUPPORT ASSEMBLY	36	01

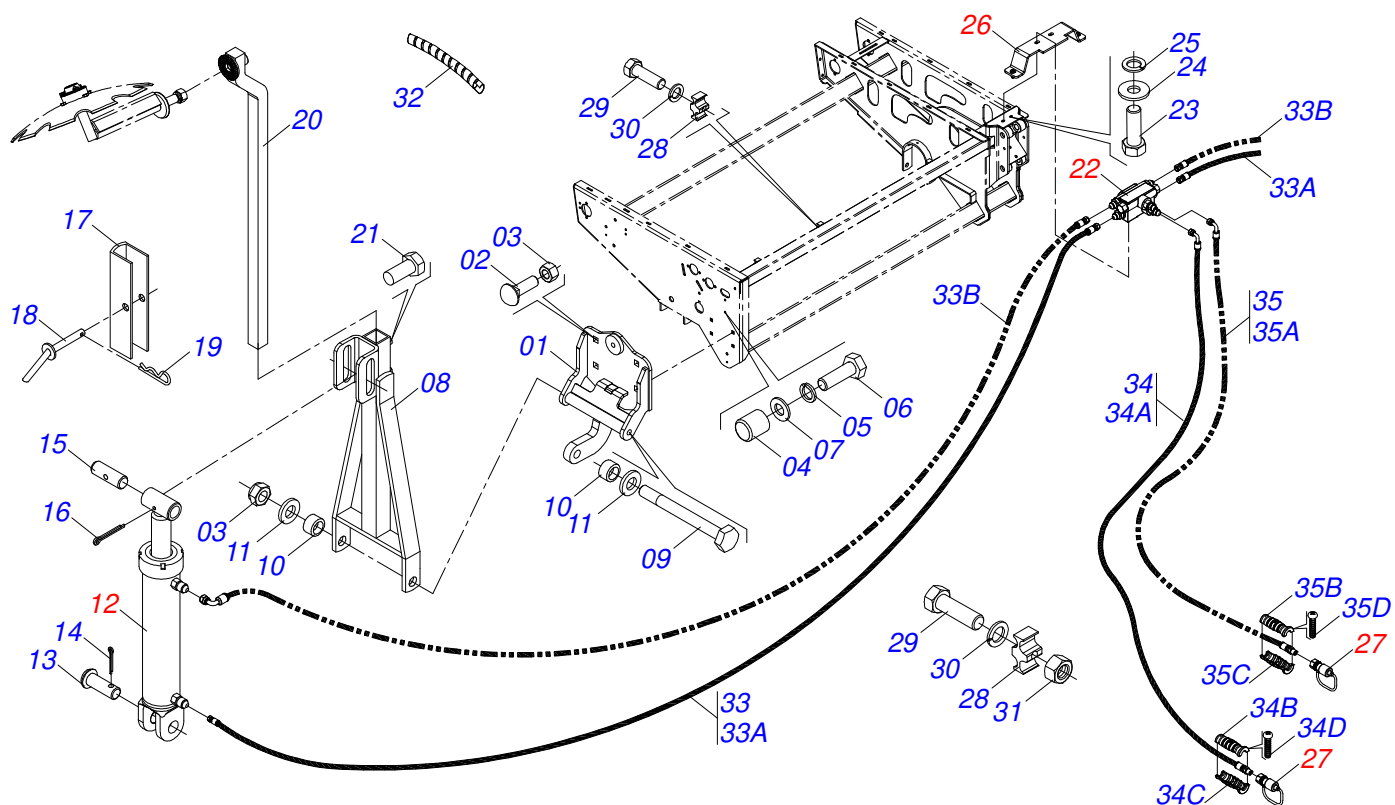


Item	Code	Description	See page	QT
01	0521066622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
03	0503012412	5/8 UNC SELF LOCKING NUT		04
04	0503011070	BEATER		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07	0551019213	FLAT WASHER		02
08	0501069470	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0501012140	FLAT WASHER		04
12	0511058449	HYDRAULIC CYLINDER	34	02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010523	1/4" X 2" COTTERPIN		02
17	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
18	0501068994	8,30 X 78 LOCK PIN		02
19	0503030168	HITCH PIN CLIP		02
20	0501069643	890 TURNBUCKLE		02
21	0503011854	5/8" X 1-1/4" BOLT		04
22	0501054649	HBM SEQUENTIAL VALVE	35	01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
24	0501010984	FLAT WASHER		02
25	0503010025	3/8" SPRING WASHER		02
26	0511058119	VALVE SUPPORT ASSEMBLY	36	01
27	0501053834	MALE QUICK COUPLER	27	02
28	0502012702	BODY SUPPORT CLAMP		08
29	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		08
30	0503010180	7/16" SPRING WASHER		08
31	0503010244	7/16" NUT		02

Item	Code	Description	See page	QT
32	0571014419	PLASTIC PROTECTION SPRING HOSE 3/4 X 700MM		04
33	0511057367	HOSE KIT MARKER HYDRAULIC		01
33A	0501080296	3/8" X 106" TR-TR HOSE		02
33B	0501080397	3/8" X 120" TR-TC HOSE		02
34	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		01
34A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
34C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
34D	0503018952	PLASTIC BOLT		06
35	0521052850	3/8 X 4200 TC-TM PURPLE/BLEUE HOSE		01
35A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
35B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
35C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
35D	0503018952	PLASTIC BOLT		06

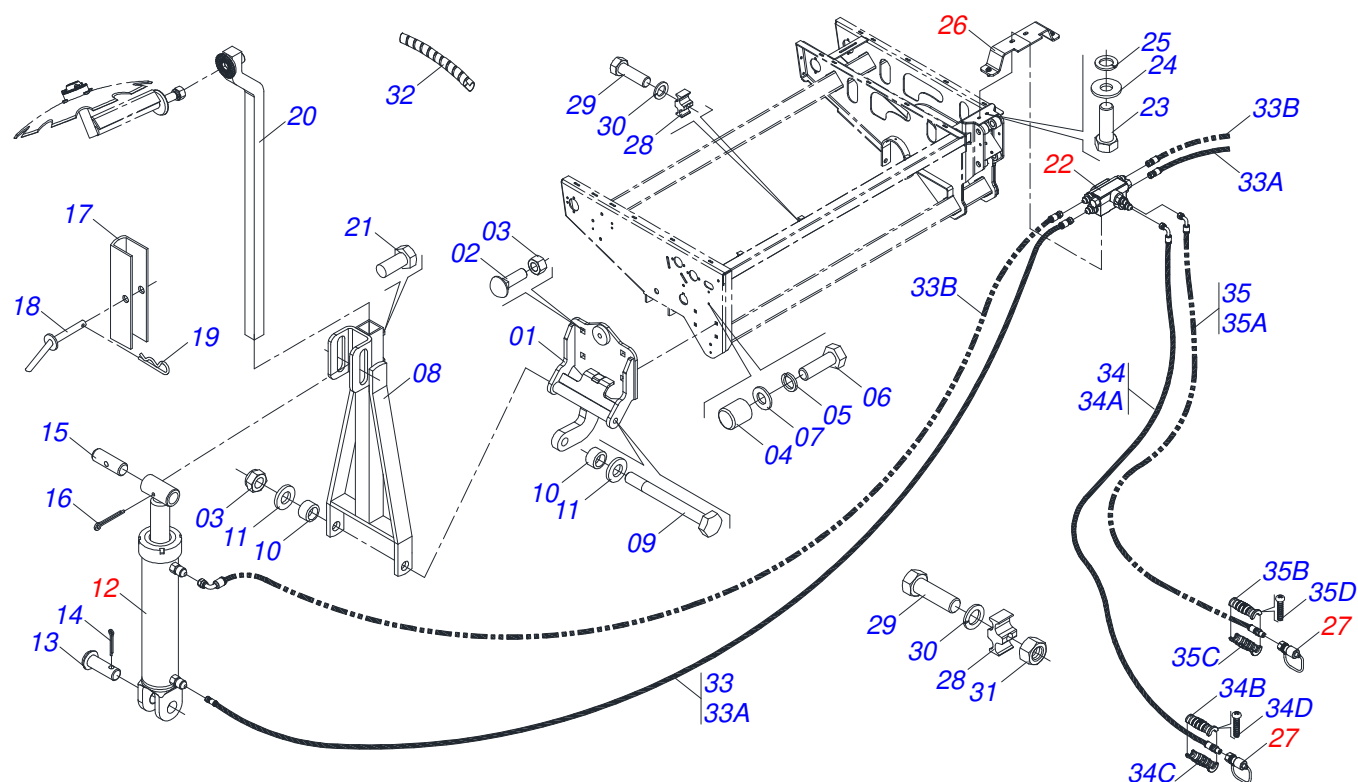


Item	Code	Description	See page	QT
01	0521066622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
03	0503012412	5/8 UNC SELF LOCKING NUT		04
04	0503011070	BEATER		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07	0551019213	FLAT WASHER		02
08	0501069470	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0501012140	FLAT WASHER		04
12	0511058449	HYDRAULIC CYLINDER	34	02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010523	1/4" X 2" COTTERPIN		02
17	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
18	0501068994	8,30 X 78 LOCK PIN		02
19	0503030168	HITCH PIN CLIP		02
20	0501069643	890 TURNBUCKLE		02
21	0503011854	5/8" X 1-1/4" BOLT		04
22	0501054649	HBM SEQUENTIAL VALVE	35	01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
24	0501010984	FLAT WASHER		02
25	0503010025	3/8" SPRING WASHER		02
26	0511058119	VALVE SUPPORT ASSEMBLY	36	01
27	0501053834	MALE QUICK COUPLER	27	02
28	0502012702	BODY SUPPORT CLAMP		08
29	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		08
30	0503010180	7/16" SPRING WASHER		08
31	0503010244	7/16" NUT		02

Item	Code	Description	See page	QT
32	0571014419	PLASTIC PROTECTION SPRING HOSE 3/4 X 700MM		04
33	0511057312	HOSE KIT MARKER HYDRAULIC		
33A	0501081727	TR-TR HOSE ASSY		02
33B	0501080408	HOSE 3/8 X 3200 TR-TC		02
34	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		01
34A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
34C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
34D	0503018952	PLASTIC BOLT		06
35	0521052850	3/8 X 4200 TC-TM PURPLE/BUE HOSE		01
35A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
35B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
35C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
35D	0503018952	PLASTIC BOLT		06

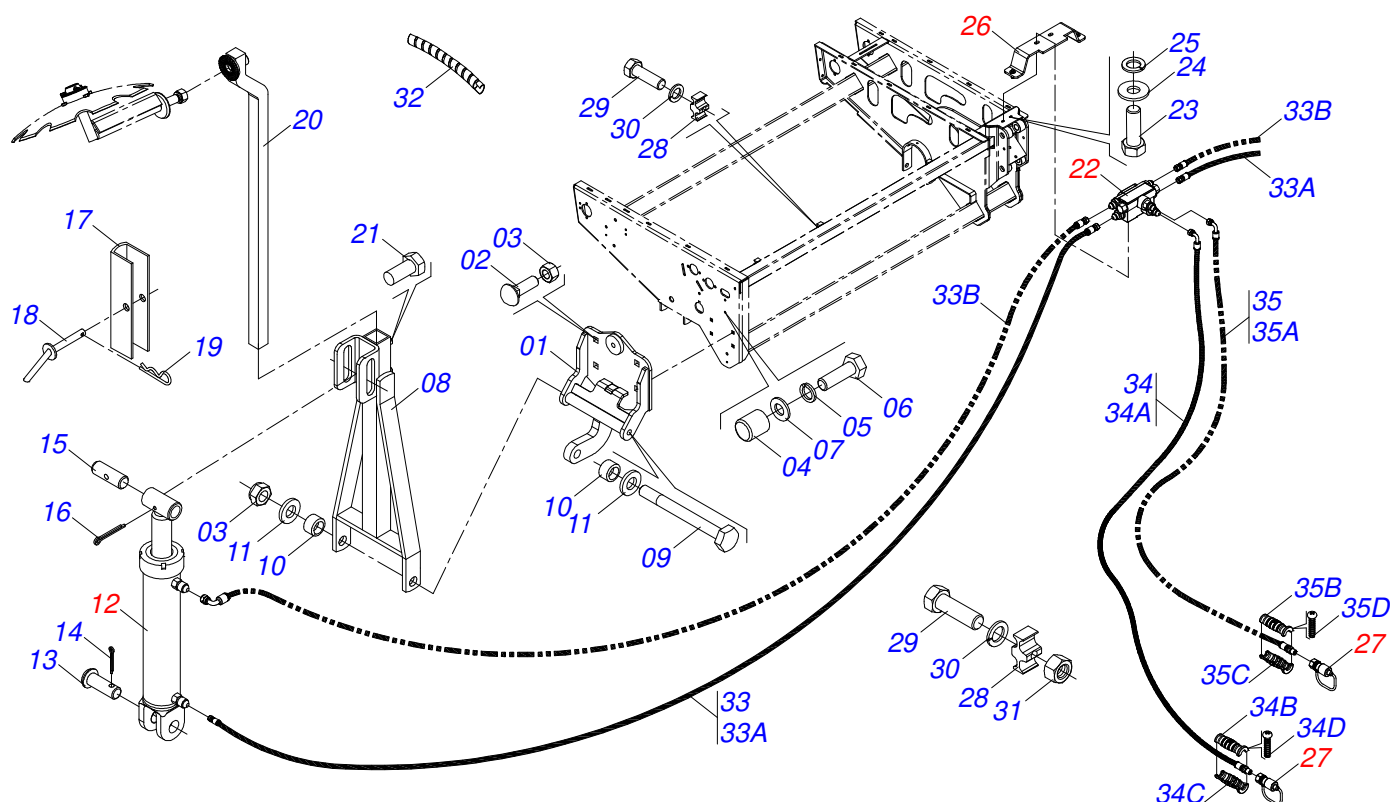


Item	Code	Description	See page	QT
01	052106622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
03	0503012412	5/8 UNC SELF LOCKING NUT		04
04	0503011070	BEATER		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07	0551019213	FLAT WASHER		02
08	0501069470	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0501012140	FLAT WASHER		04
12	0511058449	HYDRAULIC CYLINDER	34	02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010523	1/4" X 2" COTTERPIN		02
17	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
18	0501068994	8,30 X 78 LOCK PIN		02
19	0503030168	HITCH PIN CLIP		02
20	0501069643	890 TURNBUCKLE		02
21	0503011854	5/8" X 1-1/4" BOLT		04
22	0501054649	HBM SEQUENTIAL VALVE	35	01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
24	0501010984	FLAT WASHER		02
25	0503010025	3/8" SPRING WASHER		02
26	0511058119	VALVE SUPPORT ASSEMBLY	36	01
27	0501053834	MALE QUICK COUPLER	27	02
28	0502012702	BODY SUPPORT CLAMP		08
29	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		08
30	0503010180	7/16" SPRING WASHER		08
31	0503010244	7/16" NUT		02

Item	Code	Description	See page	QT
32	0571014419	PLASTIC PROTECTION SPRING HOSE 3/4 X 700MM		04
33	0511057354	HOSE KIT MARKER HYDRAULIC 4395		01
33A	0501081728	HOSE 3/8 X 3100 TR-TR		02
33B	0501080515	HOSE 3/8 X 3400 TR-TC		02
34	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		01
34A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
34C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
34D	0503018952	PLASTIC BOLT		06
35	0521052850	3/8 X 4200 TC-TM PURPLE/BLUE HOSE		01
35A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
35B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
35C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
35D	0503018952	PLASTIC BOLT		06

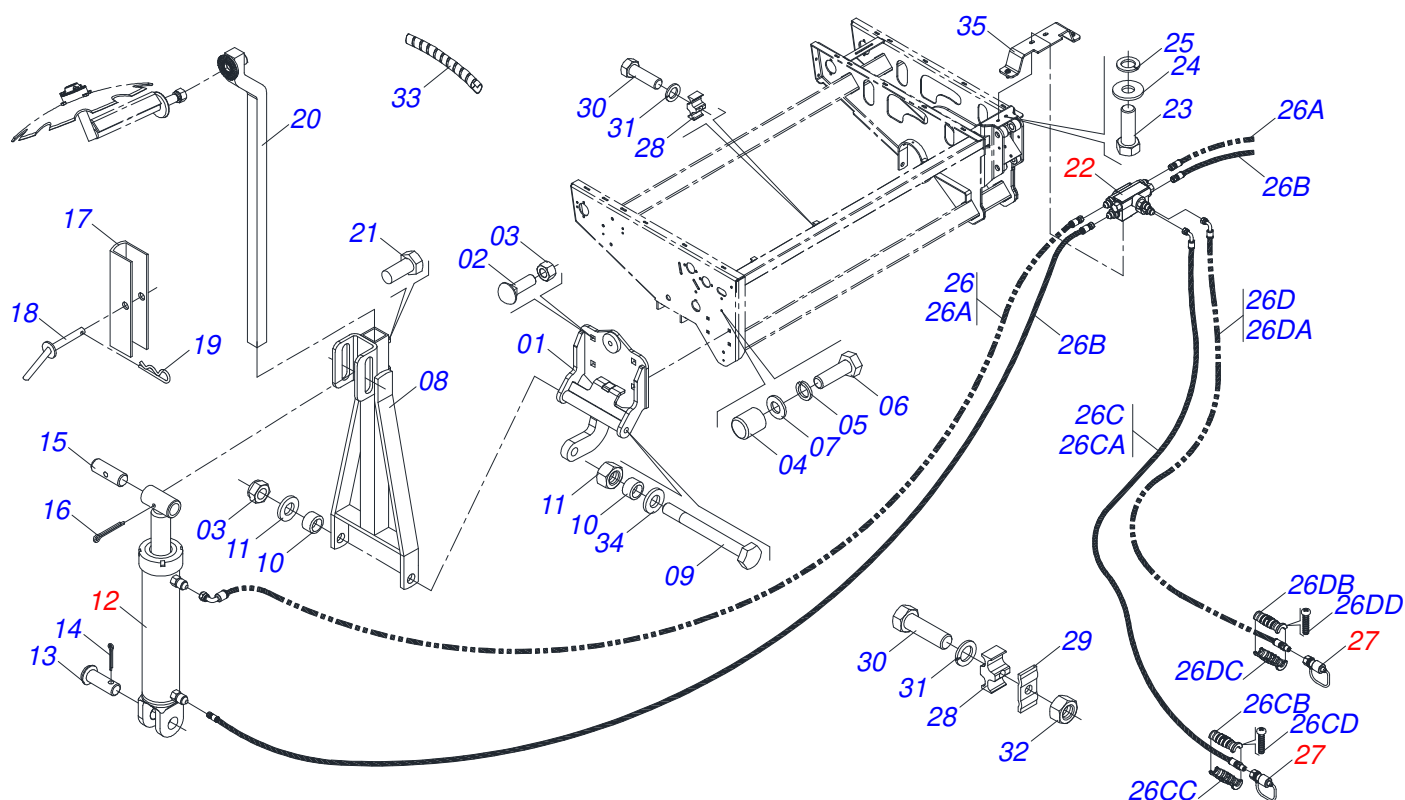


Item	Code	Description	See page	QT
01	052106622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
03	0503012412	5/8 UNC SELF LOCKING NUT		04
04	0503011070	BEATER		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07	0551019213	FLAT WASHER		02
08	0501069470	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0503012412	5/8 UNC SELF LOCKING NUT		02
12	0511058449	HYDRAULIC CYLINDER	34	02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010523	1/4" X 2" COTTERPIN		02
17	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
18	0501068994	8,30 X 78 LOCK PIN		02
19	0503030168	HITCH PIN CLIP		02
20	0501066949	1235 TURNBUCKLE		02
21	0503011854	5/8" X 1-1/4" BOLT		04
22	0501054649	HBM SEQUENTIAL VALVE	35	01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
24	0501010984	FLAT WASHER		02
25	0503010025	3/8" SPRING WASHER		02
26	0511057334	HOSE KIT MARKER HYDRAULIC		01
26A	0501080343	TR-TR HOSE ASSY		02
26B	0501080435	3/8" X 3600 TR-TC HOSE		02
26C	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		01
26CA	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
26CB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01

Item	Code	Description	See page	QT
26CC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
26CD	0503018952	PLASTIC BOLT		06
26D	0521052850	3/8 X 4200 TC-TM PURPLE/BLUE HOSE		01
26DA	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
26DB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
26DC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
26DD	0503018952	PLASTIC BOLT		06
27	0501053834	MALE QUICK COUPLER	27	02
28	0502012702	BODY SUPPORT CLAMP		06
29	0531011180	UPPER BODY CLIP		04
30	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		06
31	0503010180	7/16" SPRING WASHER		06
32	0503010244	7/16" NUT		02
33	0571014419	PLASTIC PROTECTION SPRING HOSE 3/4 X 700MM		04
34	0501012140	FLAT WASHER		04
35	0581010011	VALVE FIXING SUPPORT		01

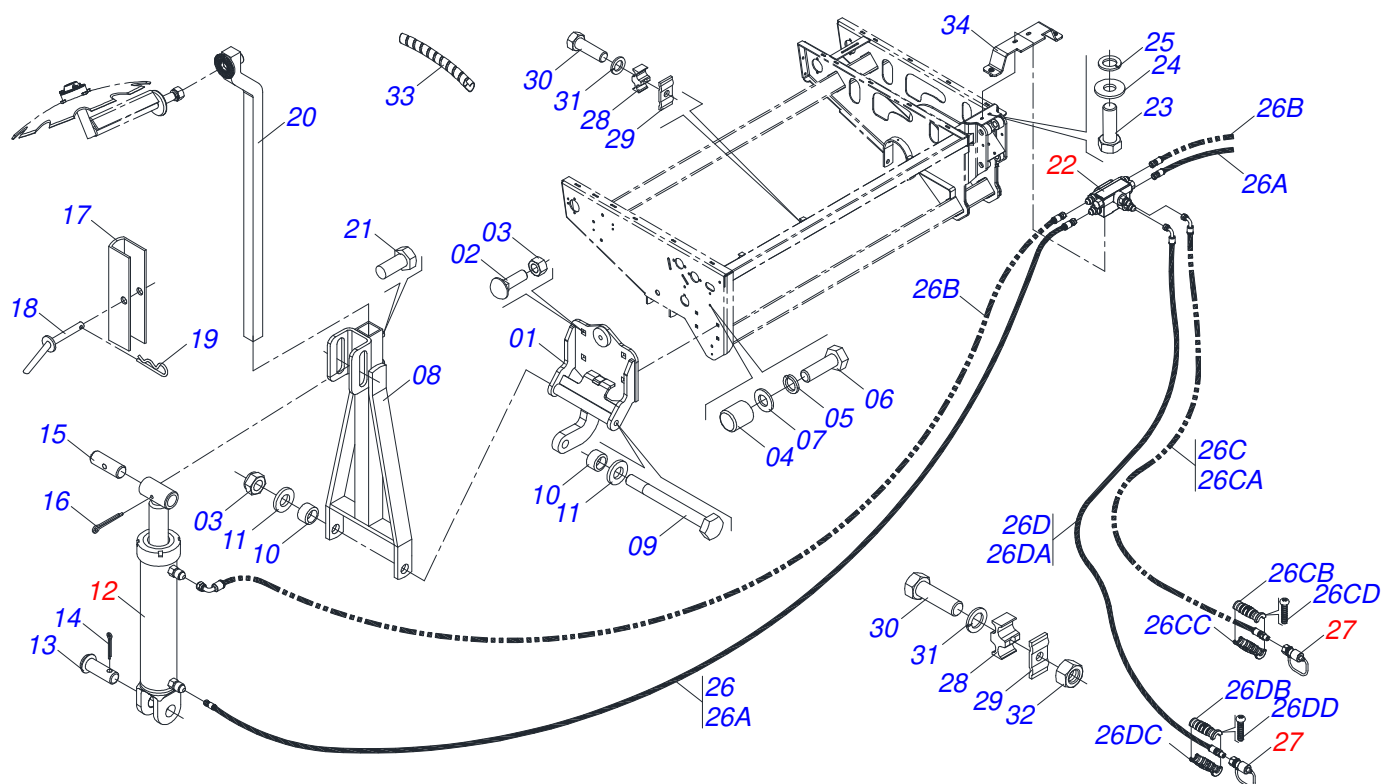


Item	Code	Description	See page	QT
01	0521066622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
03	0503012412	5/8 UNC SELF LOCKING NUT		06
04	0503011070	BEATER		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07	0551019213	FLAT WASHER		02
08	0501069470	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0501012140	FLAT WASHER		04
12	0511058449	HYDRAULIC CYLINDER	34	02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010523	1/4" X 2" COTTERPIN		02
17	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
18	0501068994	8,30 X 78 LOCK PIN		02
19	0503030168	HITCH PIN CLIP		02
20	0501066949	1235 TURNBUCKLE		02
21	0503011854	5/8" X 1-1/4" BOLT		04
22	0501054649	HBM SEQUENTIAL VALVE	35	01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
24	0501010984	FLAT WASHER		02
25	0503010025	3/8" SPRING WASHER		02
26	0511057383	HOSE KIT MARKER HYDRAULIC		01
26A	0501080403	3/8" X 137" TR-TR HOSE ASSY		02
26B	0501080390	3/8" X 150" TR-TC HOSE ASSY		02
26C	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		01
26CA	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
26CB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01


Item	Code	Description	See page	QT
26CC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
26CD	0503018952	PLASTIC BOLT		06
26D	0521052850	3/8 X 4200 TC-TM PURPLE/BLUE HOSE		01
26DA	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
26DB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
26DC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
26DD	0503018952	PLASTIC BOLT		06
27	0501053834	MALE QUICK COUPLER	27	02
28	0502012702	BODY SUPPORT CLAMP		06
29	0531011180	UPPER BODY CLIP		04
30	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		06
31	0503010180	7/16" SPRING WASHER		06
32	0503010244	7/16" NUT		02
33	0571014419	PLASTIC PROTECTION SPRING HOSE 3/4 X 700MM		04
34	0581010011	VALVE FIXING SUPPORT		01

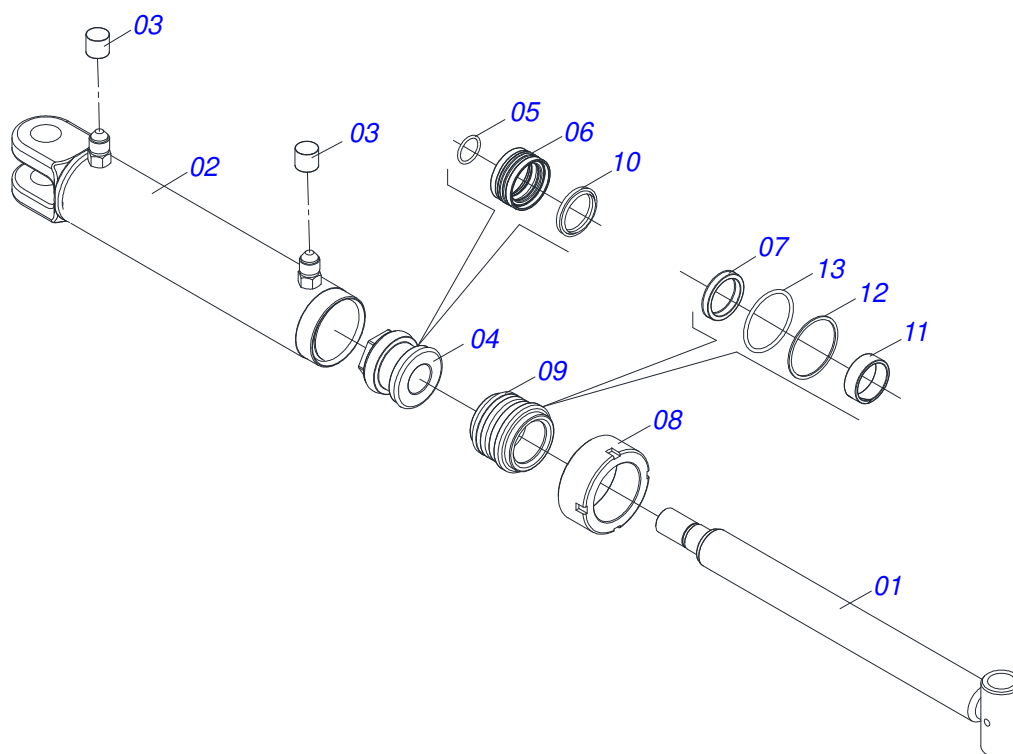

Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

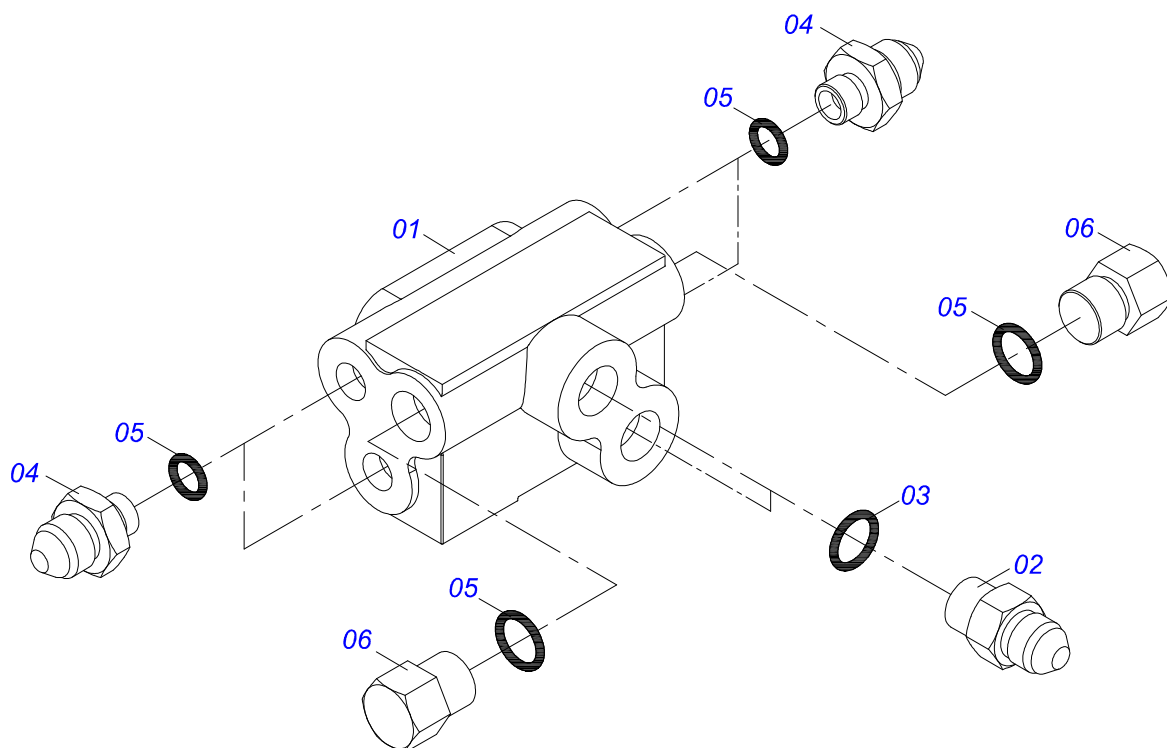


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

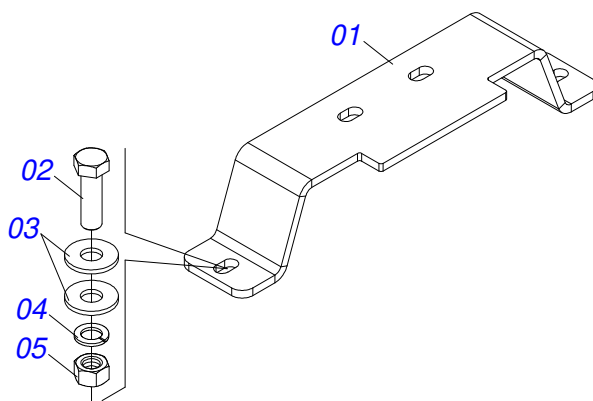


Item	Code	Description	See page	QT
01	0581010011	VALVE FIXING SUPPORT		01
02	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
03	0501010984	FLAT WASHER		04
04	0503010025	3/8" SPRING WASHER		02
05	0503010026	3/8" NUT		02




Item	Code	Description	See page	QT
01	0503034115	ADHESIVE LABEL		02
02	0503034114	ADHESIVE LABEL LOGO TATU BOX 190 X 530		02
03	0503033416	ADHESIVE LABEL		02
04	0503033417	ADHESIVE LABEL		02
05	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
06	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
07	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
08	0503031428	READ MANUAL DECAL		01
09	0503031942	ADHESIVE LABEL		01
10	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
11	0503031565	ADHESIVE LABEL CARE		02
12	0503031566	ADHESIVE LABEL		02
13	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
14	0503031425	ADHESIVE LABEL ATTENTION		02
15	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
16	0503031669	ADHESIVE LABEL		01
17	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
18	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
19	0503032930	ADHESIVE LABEL DANGER		04
20	0503031087	ADHESIVE LABEL		01
21	0503034003	SERIAL NUMBER TAG 61 X 118		01
22	0503010001	3.2 X 5.5 RIVET		04
23	0503032979	ADHESIVE LABEL LETTERS A B C D		02
24	0503034500	ADHESIVE LABEL		01

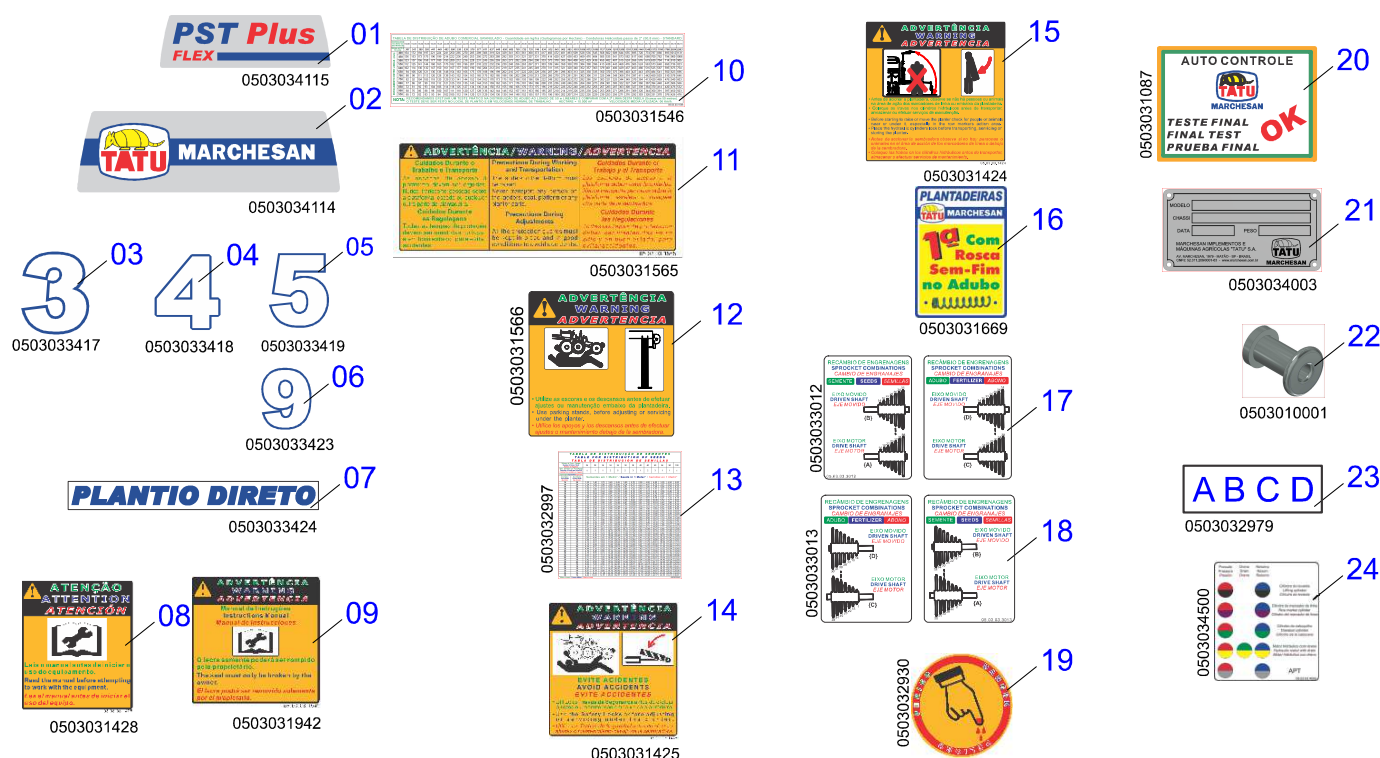


Item	Code	Description	See page	QT
01	0503034115	ADHESIVE LABEL		02
02	0503034114	ADHESIVE LABEL LOGO TATU BOX 190 X 530		02
03	0503033417	ADHESIVE LABEL		02
04	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
05	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
06	0503033423	LABEL ADHESIVE NUMBER 9		02
07	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
08	0503031428	READ MANUAL DECAL		01
09	0503031942	ADHESIVE LABEL		01
10	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
11	0503031565	ADHESIVE LABEL CARE		02
12	0503031566	ADHESIVE LABEL		02
13	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
14	0503031425	ADHESIVE LABEL ATTENTION		02
15	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
16	0503031669	ADHESIVE LABEL		01
17	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
18	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
19	0503032930	ADHESIVE LABEL DANGER		04
20	0503031087	ADHESIVE LABEL		01
21	0503034003	SERIAL NUMBER TAG 61 X 118		01
22	0503010001	3.2 X 5.5 RIVET		04
23	0503032979	ADHESIVE LABEL LETTERS A B C D		02
24	0503034500	ADHESIVE LABEL		01

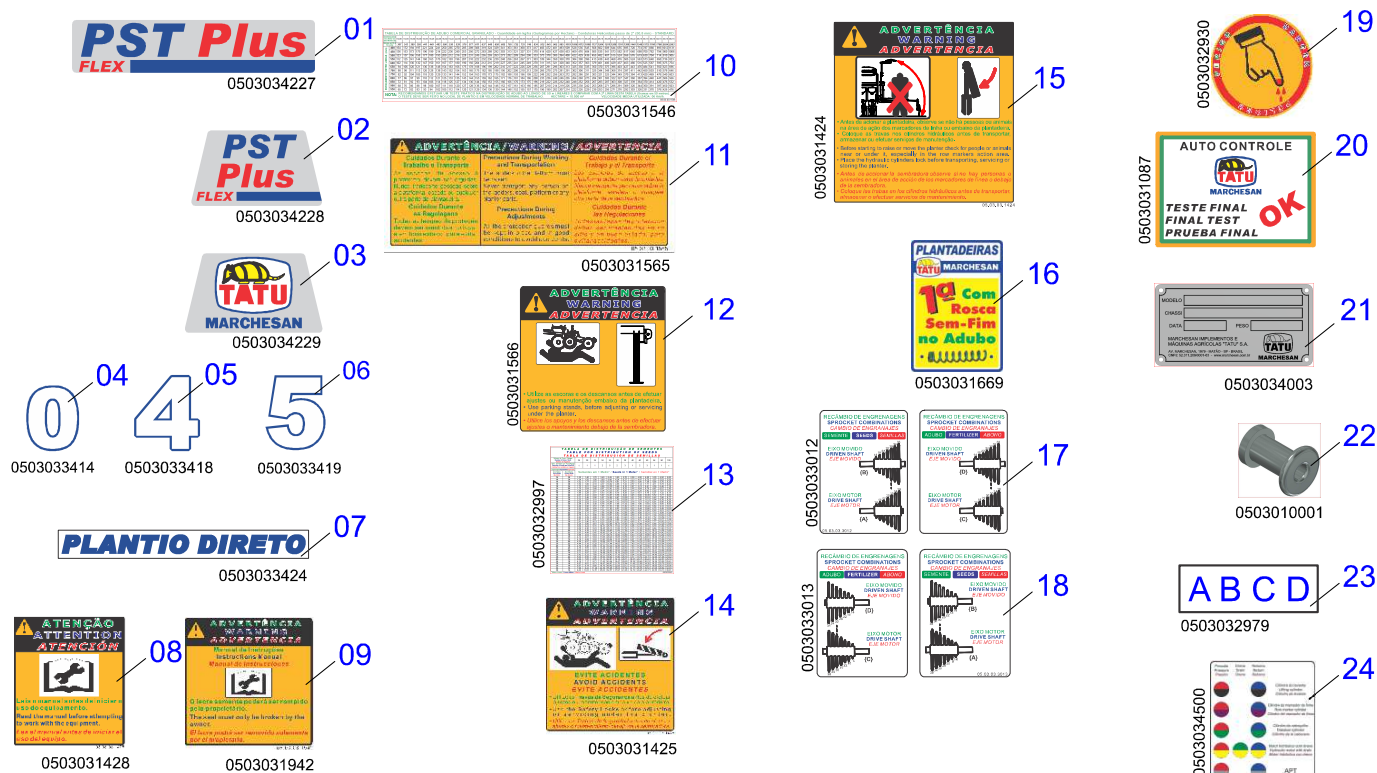


Item	Code	Description	See page	QT
01	0503034227	ADHESIVE LABEL PST PLUS FLEX	02	
02	0503034228	ADHESIVE LABEL PST FLEX PLUS LOWER (05 MOUTH)	02	
03	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 MOUTH)	04	
04	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING	02	
05	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER	04	
06	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING	02	
07	0503033424	DIRECT PLANTIO ADHESIVE LABEL	02	
08	0503031428	READ MANUAL DECAL	01	
09	0503031942	ADHESIVE LABEL	01	
10	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2	02	
11	0503031565	ADHESIVE LABEL CARE	02	
12	0503031566	ADHESIVE LABEL	02	
13	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE	02	
14	0503031425	ADHESIVE LABEL ATTENTION	02	
15	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO	02	
16	0503031669	ADHESIVE LABEL	01	
17	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT	01	
18	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT	01	
19	0503032930	ADHESIVE LABEL DANGER	05	
20	0503031087	ADHESIVE LABEL	01	
21	0503034003	SERIAL NUMBER TAG 61 X 118	01	
22	0503010001	3.2 X 5.5 RIVET	04	
23	0503032979	ADHESIVE LABEL LETTERS A B C D	02	
24	0503034500	ADHESIVE LABEL	01	

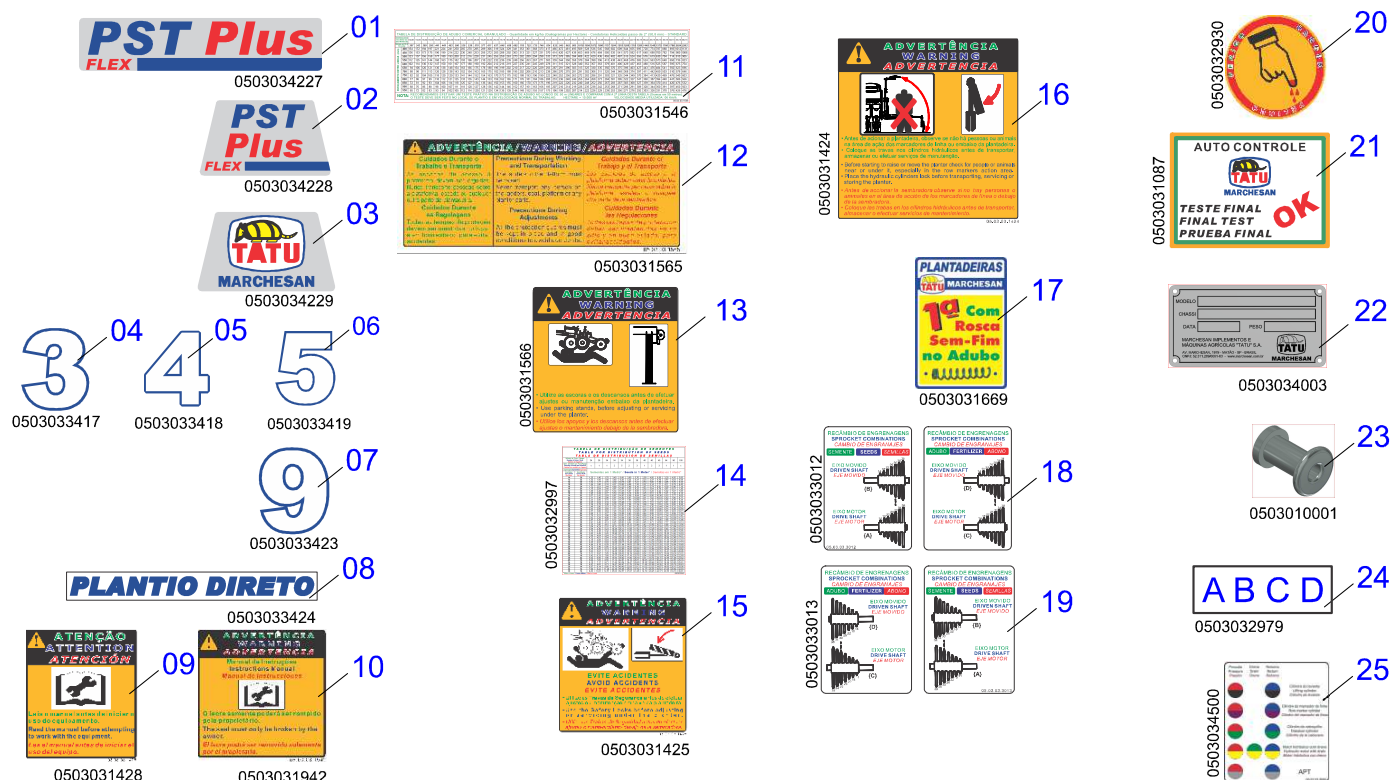


Item	Code	Description	See page	QT
01	0503034227	ADHESIVE LABEL PST PLUS FLEX	02	
02	0503034228	ADHESIVE LABEL PST FLEX PLUS LOWER (05 MOUTH)	02	
03	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 MOUTH)	04	
04	0503033417	ADHESIVE LABEL	02	
05	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER	02	
06	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING	02	
07	0503033423	LABEL ADHESIVE NUMBER 9	02	
08	0503033424	DIRECT PLANTIO ADHESIVE LABEL	02	
09	0503031428	READ MANUAL DECAL	01	
10	0503031942	ADHESIVE LABEL	01	
11	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2	02	
12	0503031565	ADHESIVE LABEL CARE	02	
13	0503031566	ADHESIVE LABEL	02	
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE	02	
15	0503031425	ADHESIVE LABEL ATTENTION	02	
16	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO	02	
17	0503031669	ADHESIVE LABEL	01	
18	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT	01	
19	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT	01	
20	0503032930	ADHESIVE LABEL DANGER	05	
21	0503031087	ADHESIVE LABEL	01	
22	0503034003	SERIAL NUMBER TAG 61 X 118	01	
23	0503010001	3.2 X 5.5 RIVET	04	
24	0503032979	ADHESIVE LABEL LETTERS A B C D	02	
25	0503034500	ADHESIVE LABEL	01	

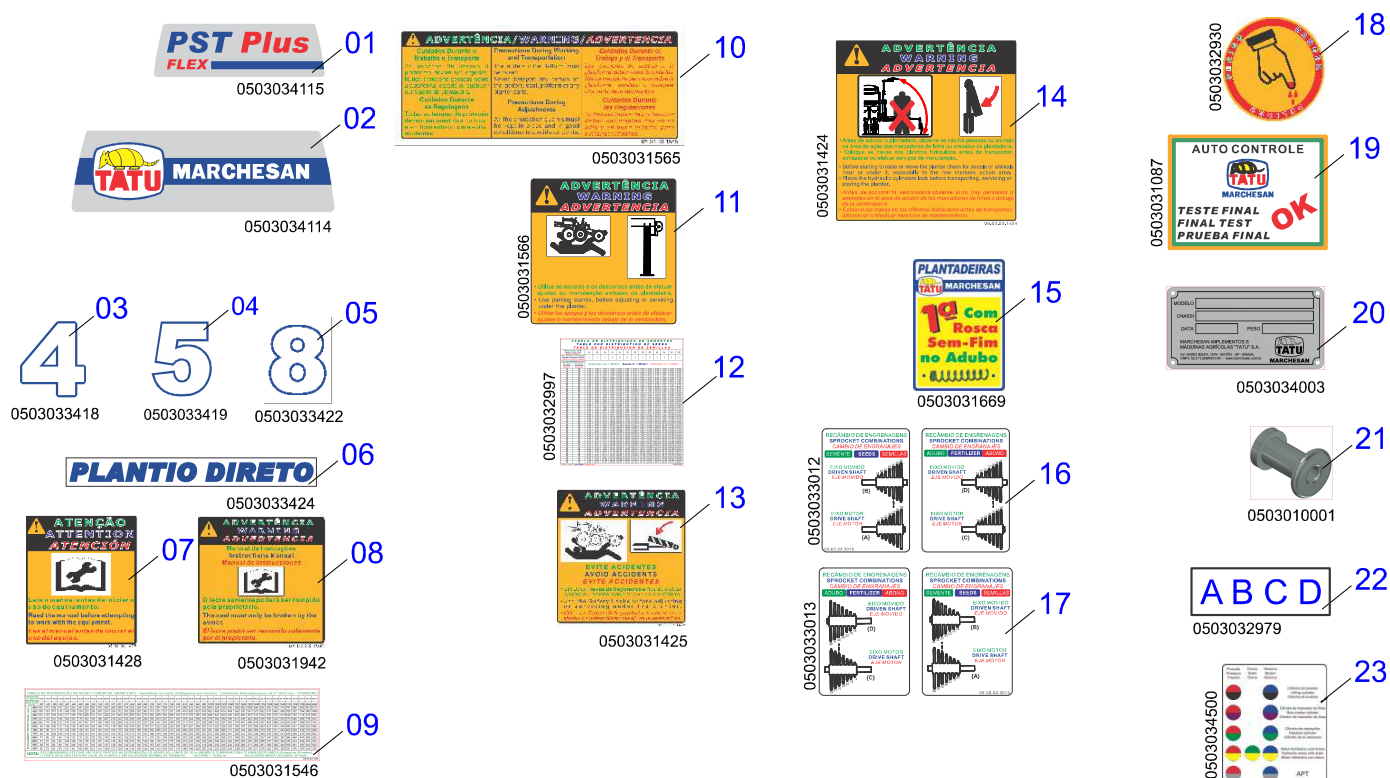


Item	Code	Description	See page	QT
01	0503034115	ADHESIVE LABEL	03	
02	0503034114	ADHESIVE LABEL LOGO TATU BOX 190 X 530	03	
03	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER	04	
04	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING	02	
05	0503033422	ADHESIVE LABEL	02	
06	0503033424	DIRECT PLANTIO ADHESIVE LABEL	02	
07	0503031428	READ MANUAL DECAL	01	
08	0503031942	ADHESIVE LABEL	01	
09	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2	02	
10	0503031565	ADHESIVE LABEL CARE	02	
11	0503031566	ADHESIVE LABEL	02	
12	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE	02	
13	0503031425	ADHESIVE LABEL ATTENTION	02	
14	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO	02	
15	0503031669	ADHESIVE LABEL	01	
16	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT	01	
17	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT	01	
18	0503032930	ADHESIVE LABEL DANGER	06	
19	0503031087	ADHESIVE LABEL	01	
20	0503034003	SERIAL NUMBER TAG 61 X 118	01	
21	0503010001	3.2 X 5.5 RIVET	04	
22	0503032979	ADHESIVE LABEL LETTERS A B C D	02	
23	0503034500	ADHESIVE LABEL	01	

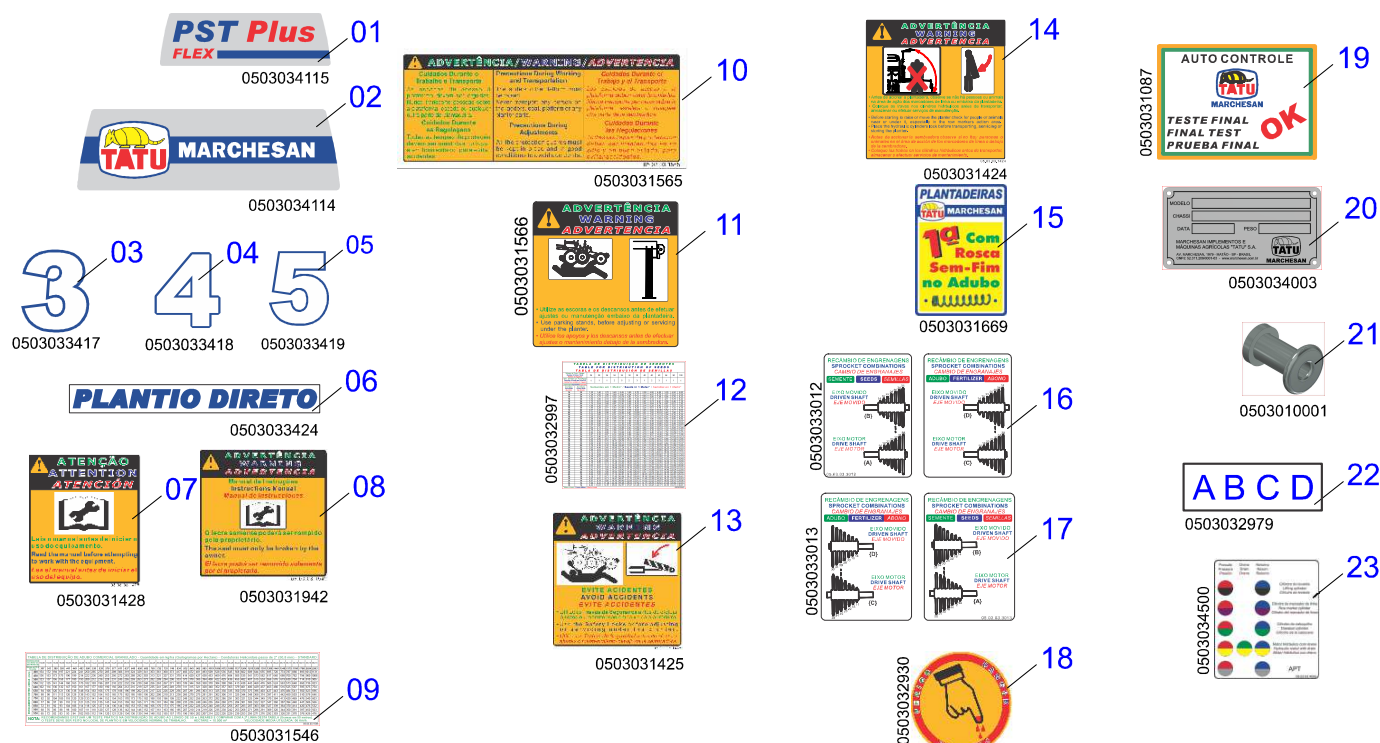


Item	Code	Description	See page	QT
01	0503034115	ADHESIVE LABEL		03
02	0503034114	ADHESIVE LABEL LOGO TATU BOX 190 X 530		03
03	0503033417	ADHESIVE LABEL		02
04	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
05	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		04
06	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
07	0503031428	READ MANUAL DECAL		01
08	0503031942	ADHESIVE LABEL		01
09	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
10	0503031565	ADHESIVE LABEL CARE		02
11	0503031566	ADHESIVE LABEL		02
12	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
13	0503031425	ADHESIVE LABEL ATTENTION		02
14	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
15	0503031669	ADHESIVE LABEL		01
16	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
17	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
18	0503032930	ADHESIVE LABEL DANGER		06
19	0503031087	ADHESIVE LABEL		01
20	0503034003	SERIAL NUMBER TAG 61 X 118		01
21	0503010001	3.2 X 5.5 RIVET		04
22	0503032979	ADHESIVE LABEL LETTERS A B C D		02
23	0503034500	ADHESIVE LABEL		01

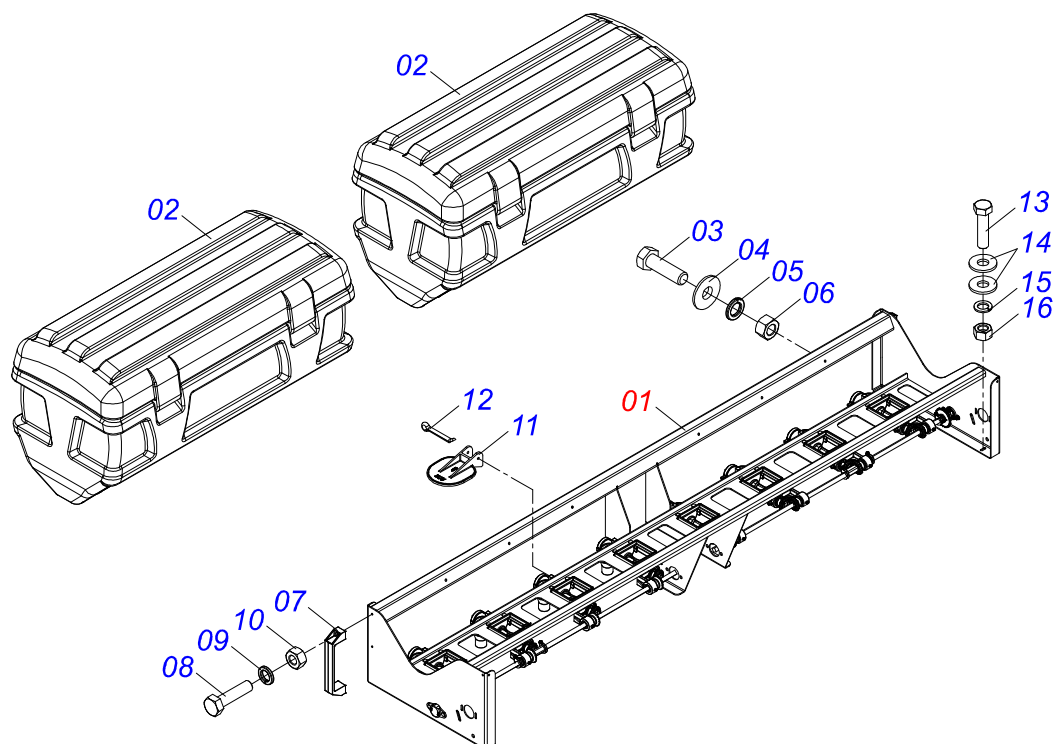

Item	Code	Description	See page	QT
01	0511057213	BOX SUPPORT WITH DISTRIBUTOR - 3245	44	01
02	0503062362	FERTILIZER BOX		02
03	0503013751	3/8 UNC X 1.1/4 BOLT		12
04	0571019051	FIXER BOX WASHER		12
05	0503012535	3/8" SPRING WASHER		12
06	0503012531	3/8" INOX NUT		12
07	0503011957	NYLON LUG		02
08	0503010371	5/16" X 1" BOLT		04
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0503034396	FERTILIZER SIDE COVER		08
12	0503010362	1/8 X 1.1/4 COTTERPIN		08
13	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		10
14	0501010984	FLAT WASHER		20
15	0503010025	3/8" SPRING WASHER		10
16	0503010026	3/8" NUT		10

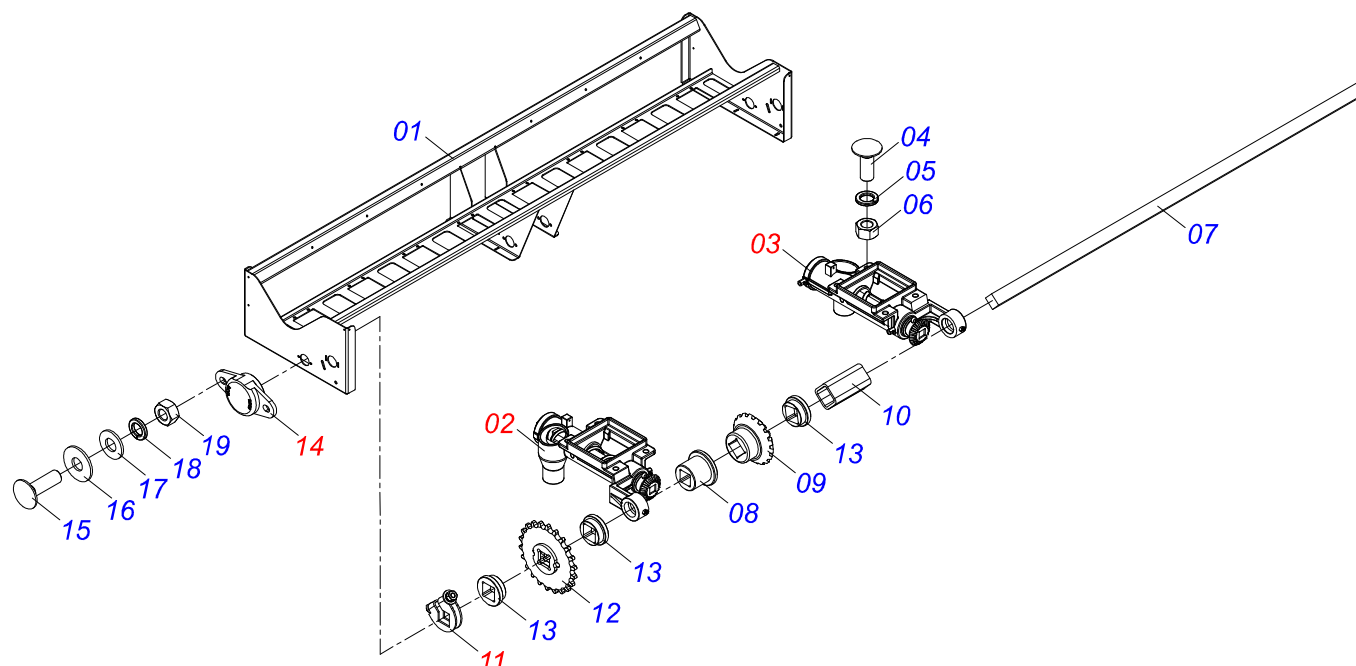


Item	Code	Description	See page	QT
01	0521065932	SUPPORT HOPPER FERTILIZER		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	45	04
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	46	04
04	0501010942	3/8" X 1-1/4" BOLT		32
05	0503011443	3/8" SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0571018894	SQUARE SHAFT 3/4 X 1515		02
08	0503030275	AGRICULTURAL BEARING		08
09	1902010685	18Z CONICAL GEAR		08
10	0551018055	22,65 X 60 SLEEVE		02
11	0501053788	3/4 SQUARE AXLE FASTENER	64	04
12	0511061759	22Z P12,70 FQ 3/4" GEAR		02
13	0503030303	SUPPORT WASHER		04
14	0501056271	GEARBOX CLOSED BEARING	67	02
15	0503011953	5/16" X 1" BOLT		04
16	0501010694	FLAT WASHER		04
17	0521011039	FLAT WASHER		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04

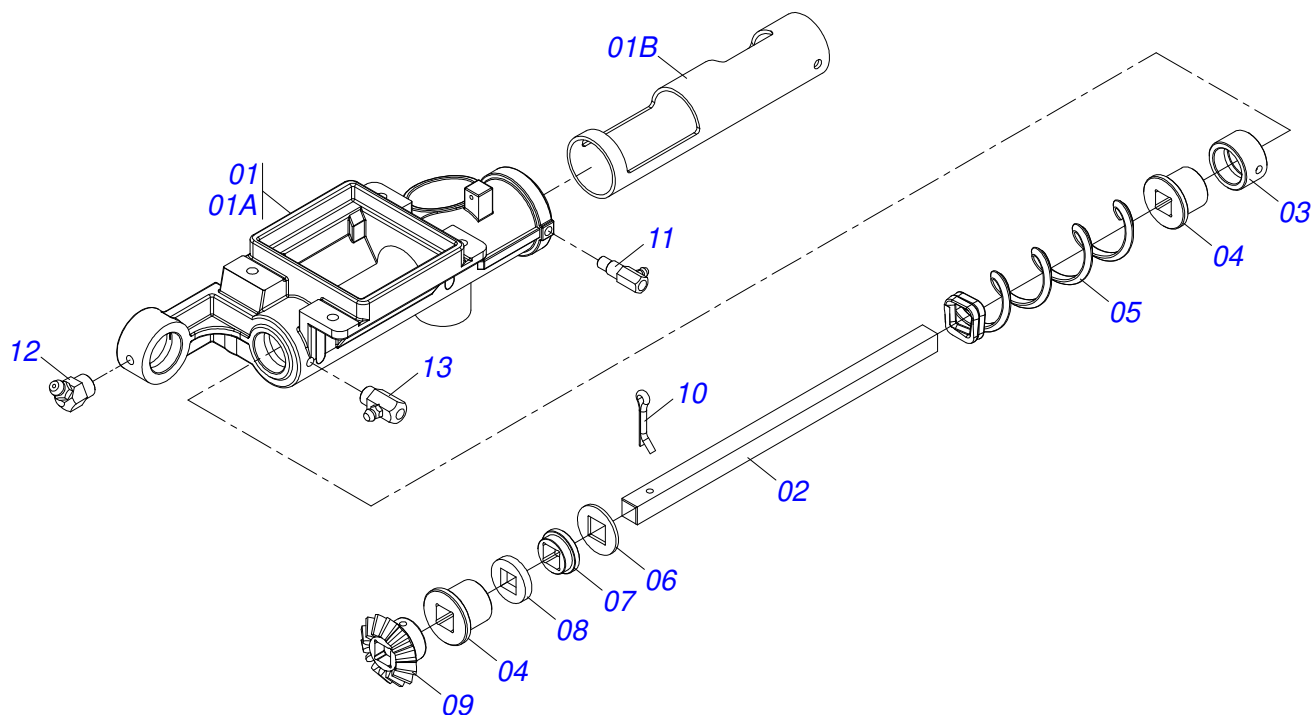


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

LEFT SIDE FERTILIZER DISTRIBUTOR


0511051558

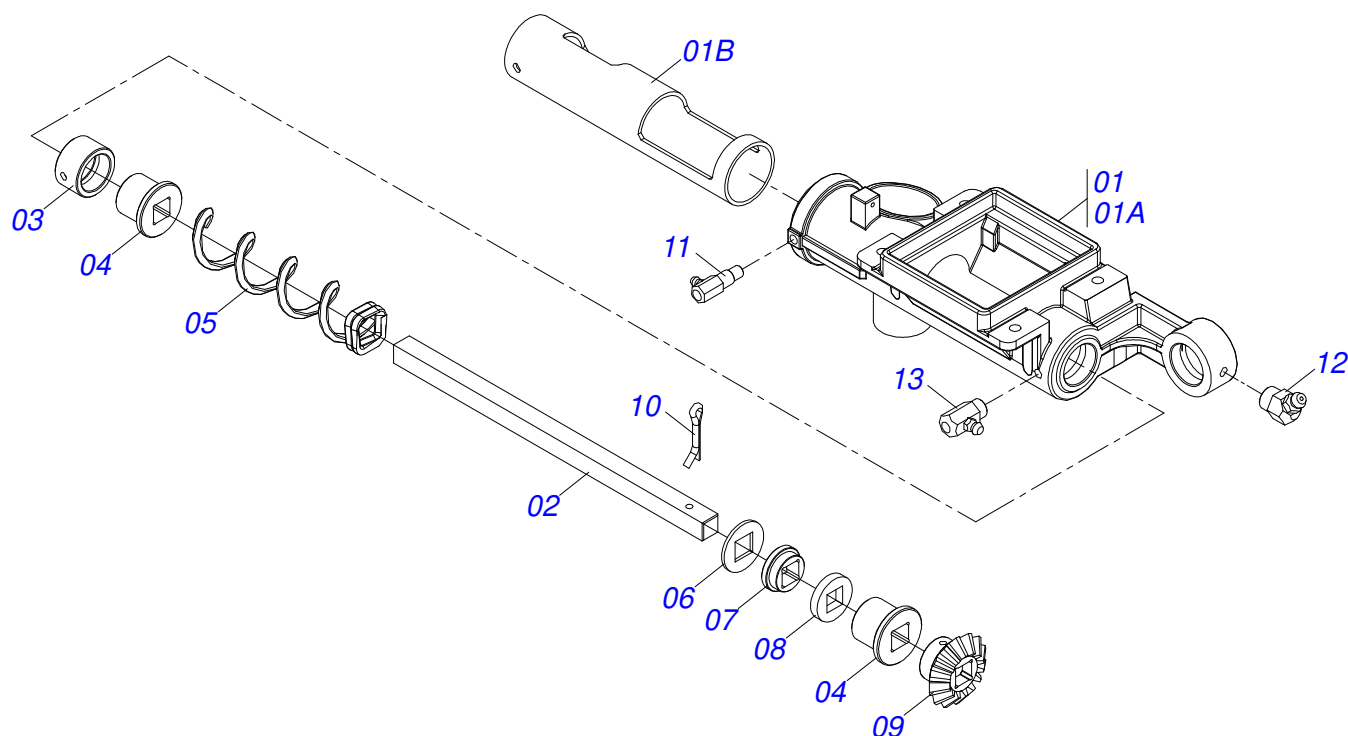


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

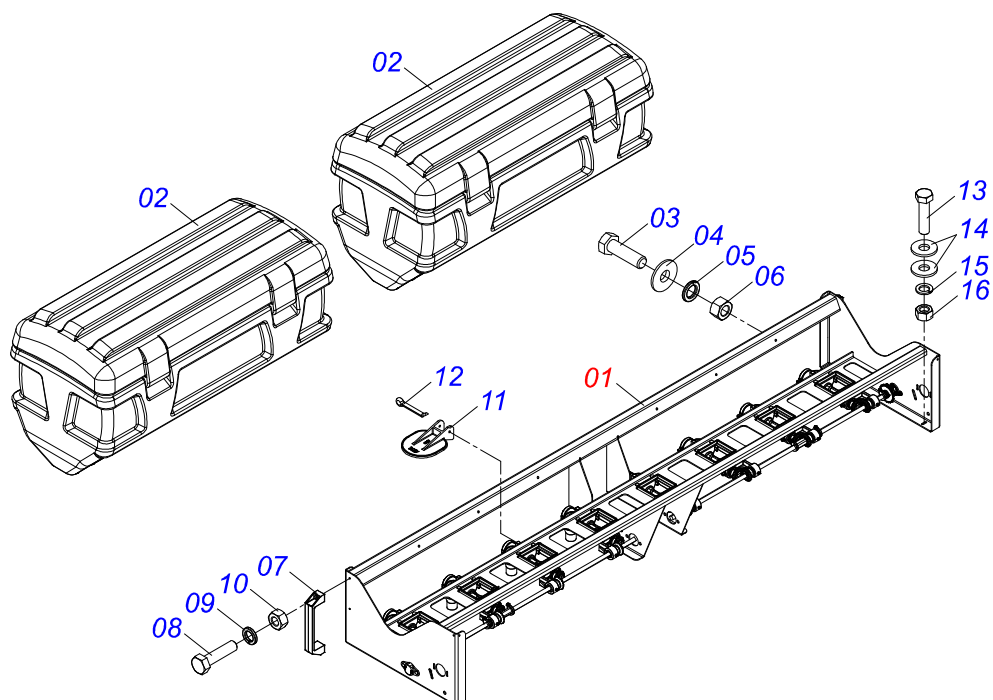


Item	Code	Description	See page	QT
01	0511057366	BOX SUPPORT WITH DISTRIBUTOR - 3495	48	01
02	0503062362	FERTILIZER BOX		02
03	0503013751	3/8 UNC X 1.1/4 BOLT		12
04	0571019051	FIXER BOX WASHER		12
05	0503012535	3/8" SPRING WASHER		12
06	0503012531	3/8" INOX NUT		12
07	0503011957	NYLON LUG		02
08	0503010371	5/16" X 1" BOLT		04
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0503034396	FERTILIZER SIDE COVER		08
12	0503010362	1/8 X 1.1/4 COTTERPIN		08
13	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		10
14	0501010984	FLAT WASHER		20
15	0503010025	3/8" SPRING WASHER		10
16	0503010026	3/8" NUT		10

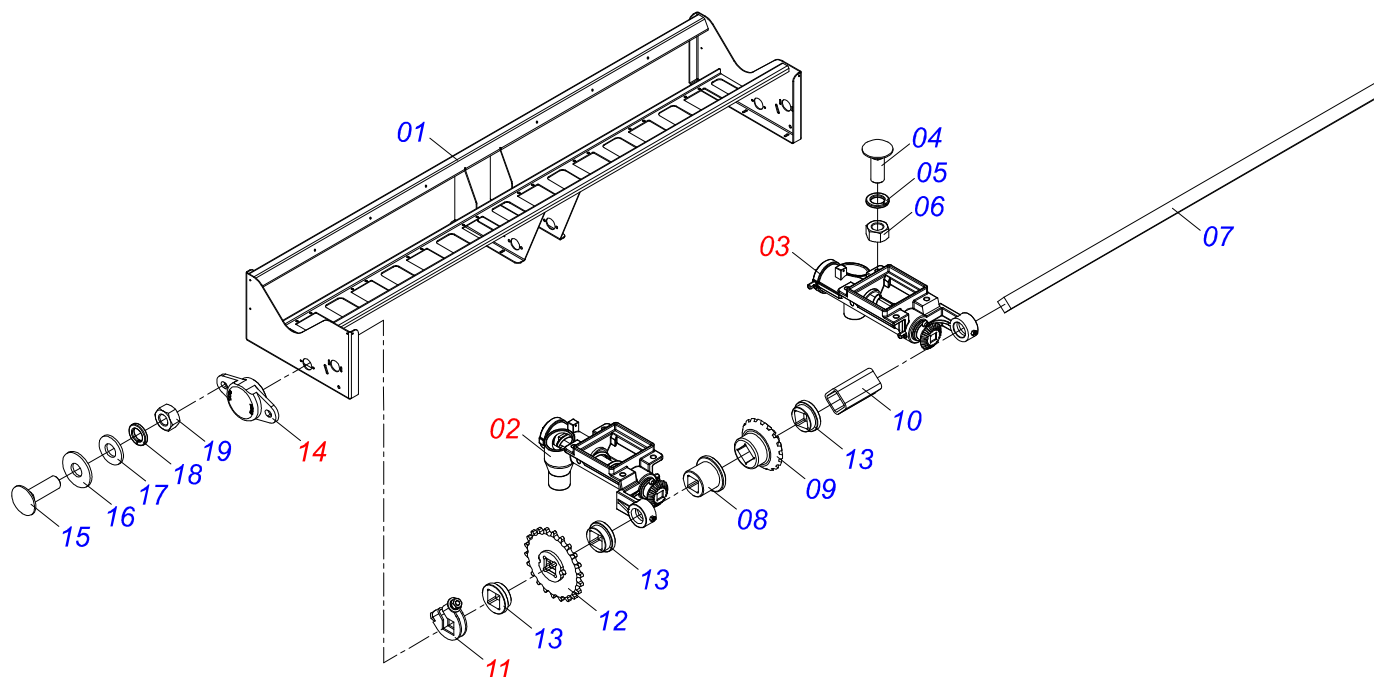


Item	Code	Description	See page	QT
01	0521065933	BEAN FERTILIZER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	45	04
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	46	04
04	0501010942	3/8" X 1-1/4" BOLT		32
05	0503011443	3/8" SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0571018895	SQUARE SHAFT		02
08	0503030275	AGRICULTURAL BEARING		08
09	1902010685	18Z CONICAL GEAR		08
10	0551018055	22,65 X 60 SLEEVE		02
11	0501053788	3/4 SQUARE AXLE FASTENER	64	04
12	0511061759	22Z P12,70 FQ 3/4" GEAR		02
13	0503030303	SUPPORT WASHER		04
14	0501056271	GEARBOX CLOSED BEARING	67	02
15	0503011953	5/16" X 1" BOLT		04
16	0501010694	FLAT WASHER		04
17	0521011039	FLAT WASHER		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04

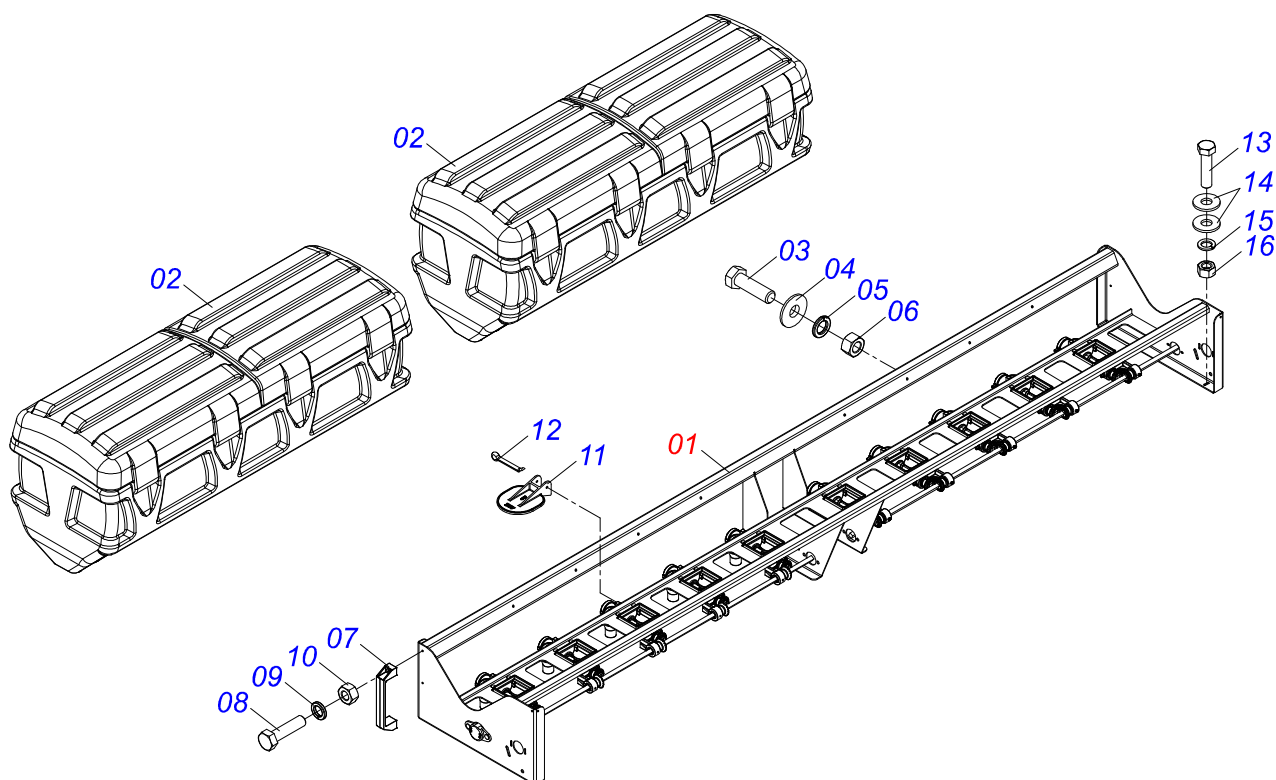


Item	Code	Description	See page	QT
01	0511057309	BOX SUPPORT WITH DISTRIBUTOR - 4045	50	01
02	0503062391	FERTILIZER BOX		02
03	0503013751	3/8 UNC X 1.1/4 BOLT		16
04	0571019051	FIXER BOX WASHER		16
05	0503012535	3/8" SPRING WASHER		16
06	0503012531	3/8" INOX NUT		16
07	0503011957	NYLON LUG		02
08	0503010371	5/16" X 1" BOLT		04
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0503034396	FERTILIZER SIDE COVER		10
12	0503010362	1/8 X 1.1/4 COTTERPIN		10
13	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		10
14	0501010984	FLAT WASHER		20
15	0503010025	3/8" SPRING WASHER		10
16	0503010026	3/8" NUT		10

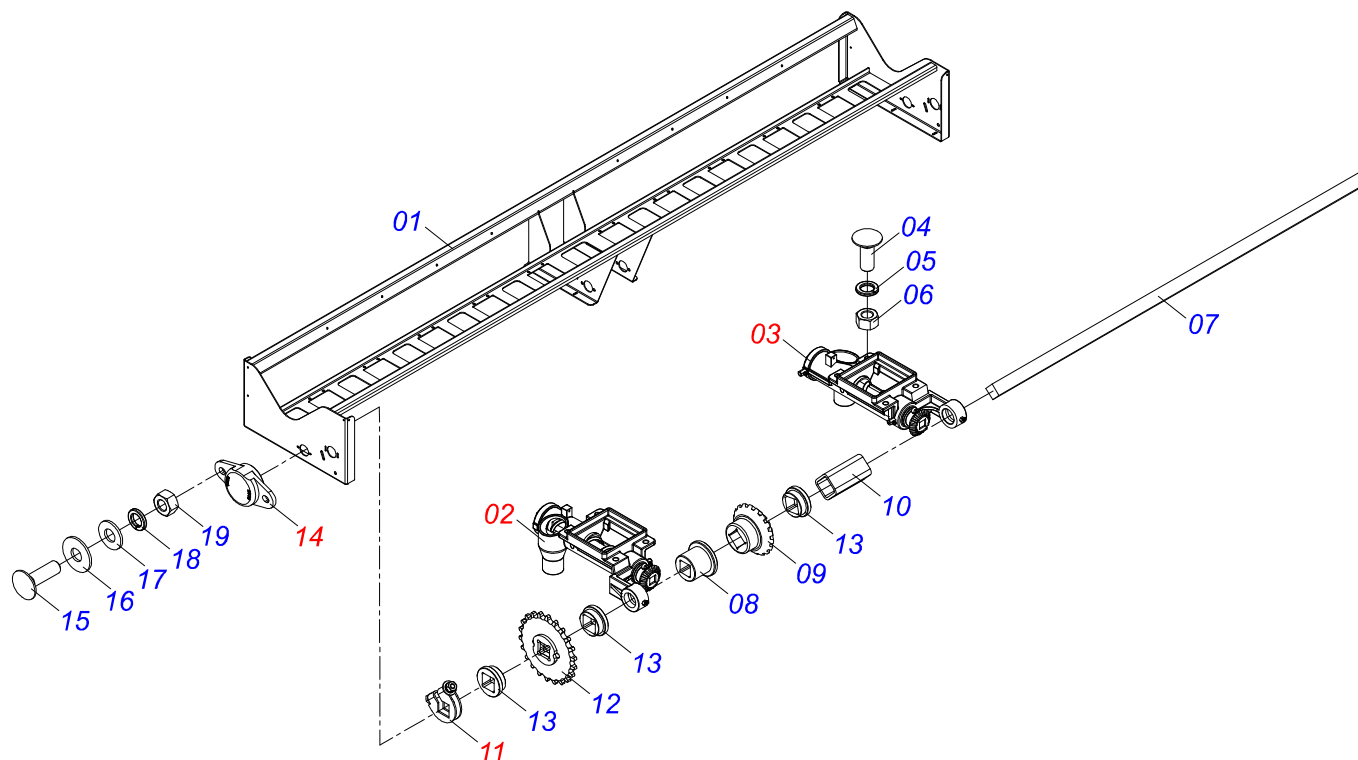


Item	Code	Description	See page	QT
01	0521065934	FERTILIZER BEAM SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	45	05
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	46	05
04	0501010942	3/8" X 1-1/4" BOLT		40
05	0503011443	3/8" SPRING WASHER		40
06	0503010026	3/8" NUT		40
07	0571018896	SQUARE SHAFT		02
08	0503030275	AGRICULTURAL BEARING		10
09	1902010685	18Z CONICAL GEAR		10
10	0551018055	22,65 X 60 SLEEVE		02
11	0501053788	3/4 SQUARE AXLE FASTENER	64	04
12	0511061759	22Z P12,70 FQ 3/4" GEAR		02
13	0503030303	SUPPORT WASHER		04
14	0501056271	GEARBOX CLOSED BEARING	67	02
15	0503011953	5/16" X 1" BOLT		04
16	0501010694	FLAT WASHER		04
17	0521011039	FLAT WASHER		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04

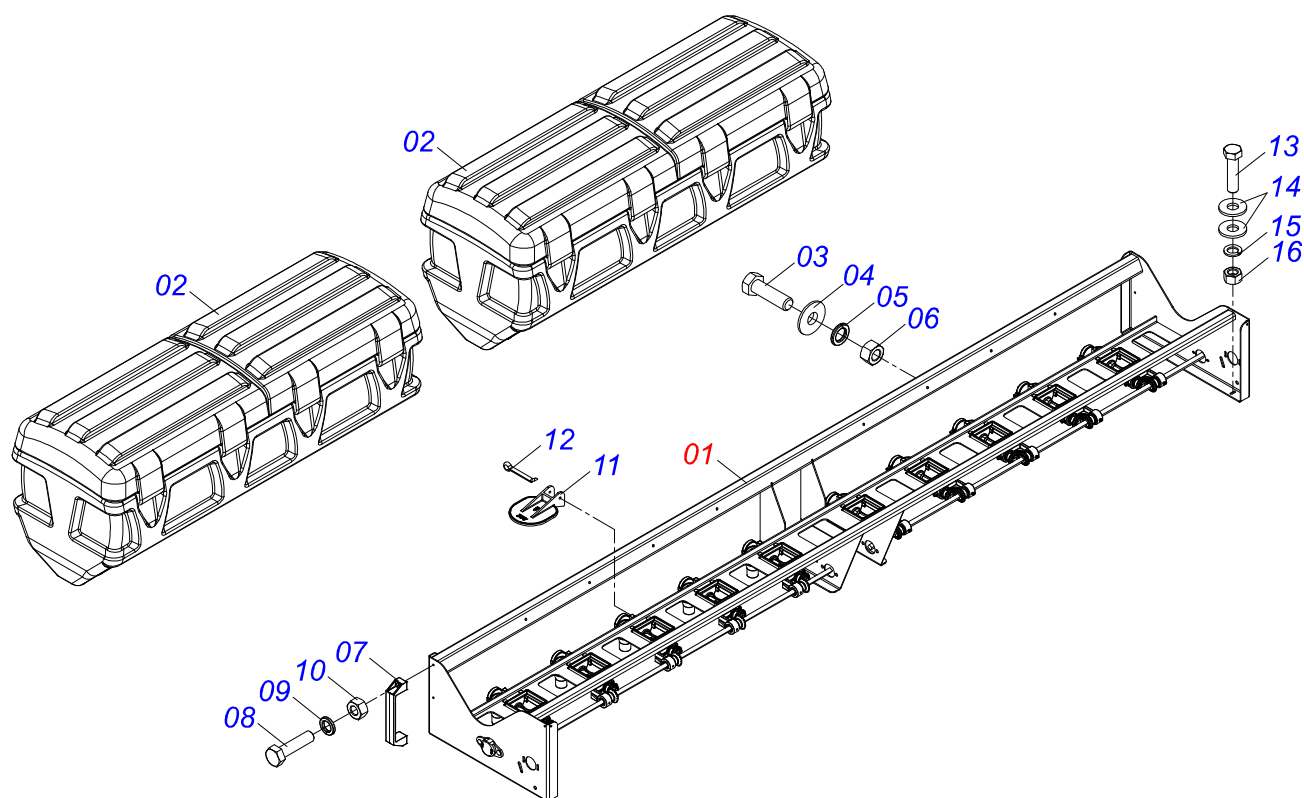


Item	Code	Description	See page	QT
01	0511057357	BOX SUPPORT WITH DISTRIBUTOR - 4395	52	01
02	0503062391	FERTILIZER BOX		02
03	0503013751	3/8 UNC X 1.1/4 BOLT		16
04	0571019051	FIXER BOX WASHER		16
05	0503012535	3/8" SPRING WASHER		16
06	0503012531	3/8" INOX NUT		16
07	0503011957	NYLON LUG		02
08	0503010371	5/16" X 1" BOLT		04
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0503034396	FERTILIZER SIDE COVER		10
12	0503010362	1/8 X 1.1/4 COTTERPIN		10
13	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		10
14	0501010984	FLAT WASHER		20
15	0503010025	3/8" SPRING WASHER		10
16	0503010026	3/8" NUT		10

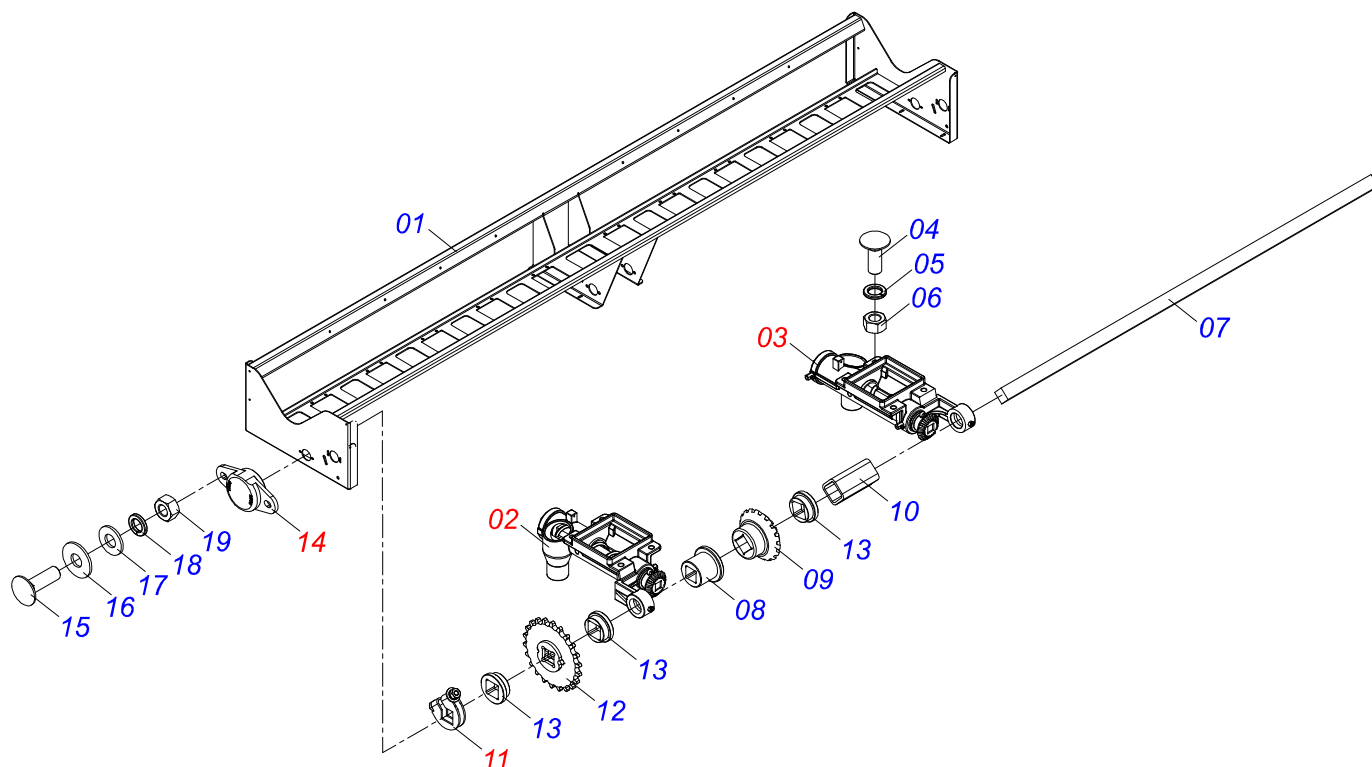


Item	Code	Description	See page	QT
01	0521065935	SUPPORT HOPPER FERTILIZER		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	45	05
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	46	05
04	0501010942	3/8" X 1-1/4" BOLT		40
05	0503011443	3/8" SPRING WASHER		40
06	0503010026	3/8" NUT		40
07	0571018897	SQUARE SHAFT 3/4 X 2090		02
08	0503030275	AGRICULTURAL BEARING		10
09	1902010685	18Z CONICAL GEAR		10
10	0551018055	22,65 X 60 SLEEVE		02
11	0501053788	3/4 SQUARE AXLE FASTENER	64	04
12	0511061759	22Z P12,70 FQ 3/4" GEAR		02
13	0503030303	SUPPORT WASHER		04
14	0501056271	GEARBOX CLOSED BEARING	67	02
15	0503011953	5/16" X 1" BOLT		04
16	0501010694	FLAT WASHER		04
17	0521011039	FLAT WASHER		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04

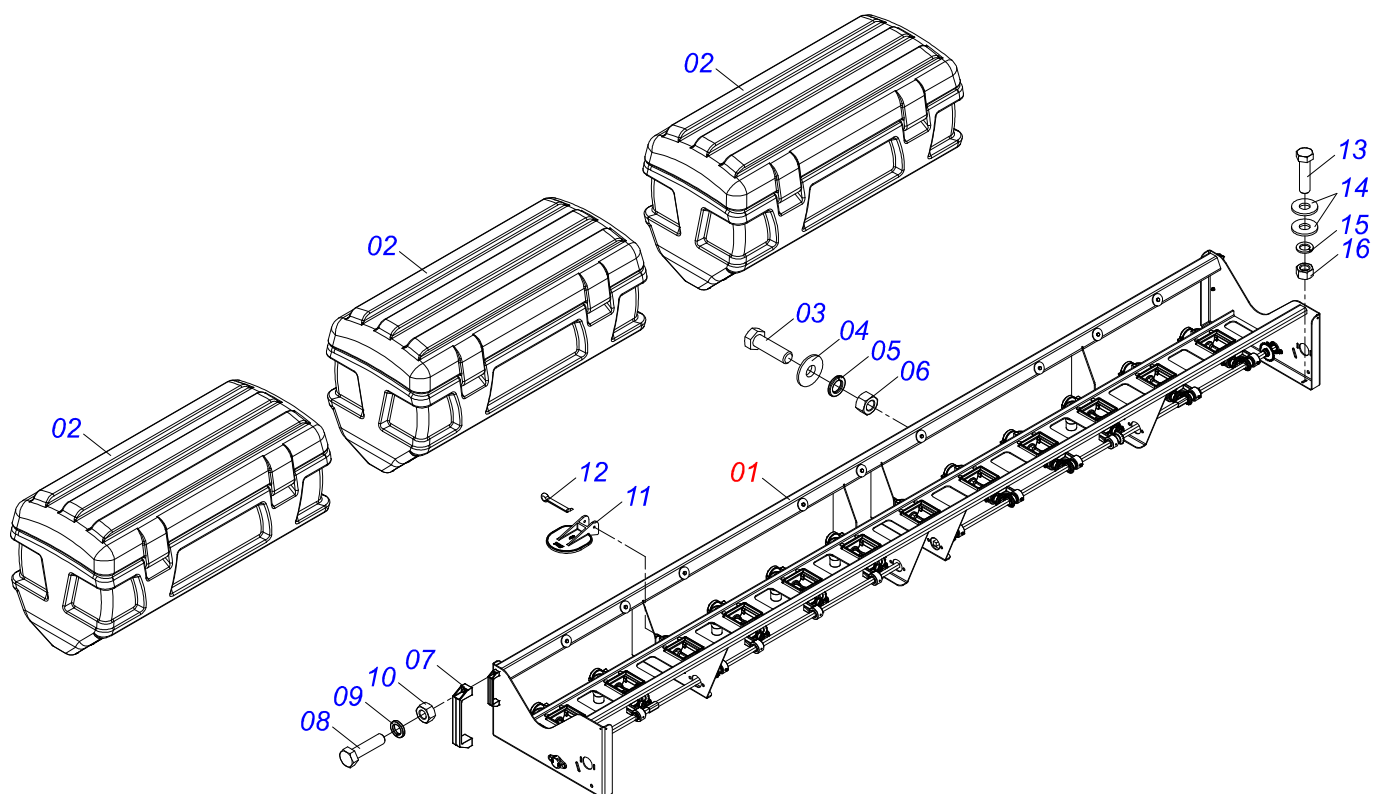


Item	Code	Description	See page	QT
01	0511057327	BOX SUPPORT WITH DISTRIBUTOR - 4845	54	01
02	0503062362	FERTILIZER BOX		03
03	0503013751	3/8 UNC X 1.1/4 BOLT		18
04	0571019051	FIXER BOX WASHER		18
05	0503012535	3/8" SPRING WASHER		18
06	0503012531	3/8" INOX NUT		18
07	0503011957	NYLON LUG		02
08	0503010371	5/16" X 1" BOLT		04
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0503034396	FERTILIZER SIDE COVER		12
12	0503010362	1/8 X 1.1/4 COTTERPIN		12
13	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		14
14	0501010984	FLAT WASHER		28
15	0503010025	3/8" SPRING WASHER		14
16	0503010026	3/8" NUT		14

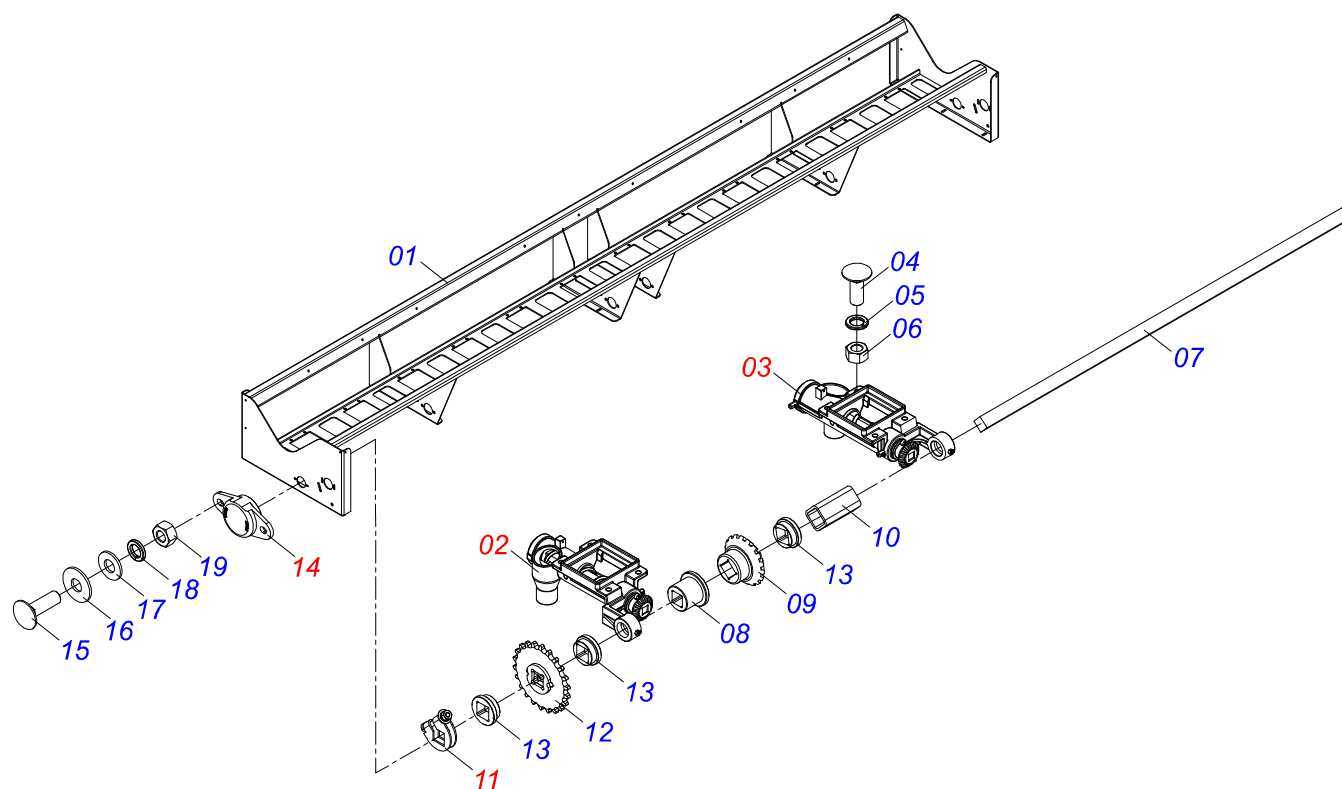


Item	Code	Description	See page	QT
01	0521065936	SUPPORT HOPPER FERTILIZER		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	45	06
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	46	06
04	0501010942	3/8" X 1-1/4" BOLT		48
05	0503011443	3/8" SPRING WASHER		48
06	0503010026	3/8" NUT		48
07	0571018898	SQUARE SHAFT 3/4 X 2315		02
08	0503030275	AGRICULTURAL BEARING		12
09	1902010685	18Z CONICAL GEAR		12
10	0551018055	22,65 X 60 SLEEVE		02
11	0501053788	3/4 SQUARE AXLE FASTENER	64	04
12	0511061759	22Z P12,70 FQ 3/4" GEAR		02
13	0503030303	SUPPORT WASHER		04
14	0501056271	GEARBOX CLOSED BEARING	67	02
15	0503011953	5/16" X 1" BOLT		04
16	0501010694	FLAT WASHER		04
17	0521011039	FLAT WASHER		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04

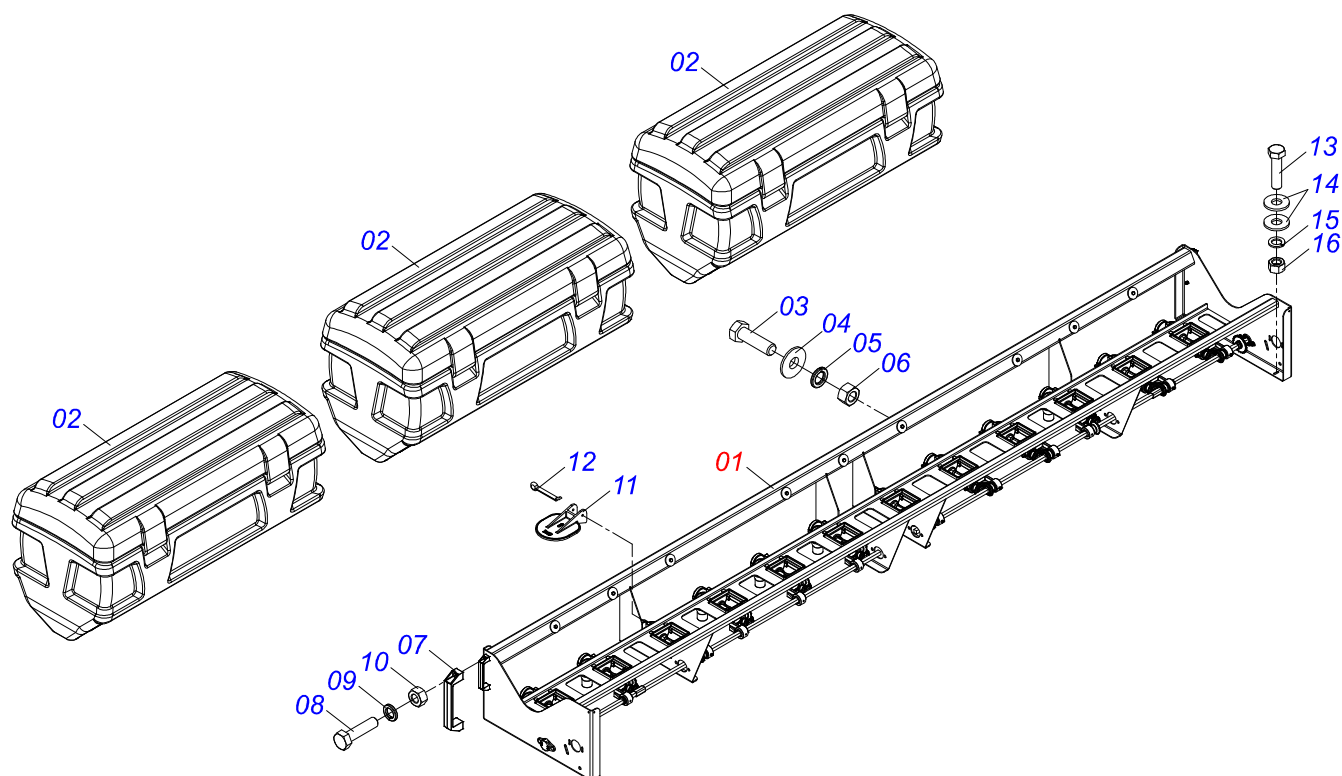

Item	Code	Description	See page	QT
01	0511057388	BOX SUPPORT WITH DISTRIBUTOR - 5345	56	01
02	0503062362	FERTILIZER BOX		03
03	0503013751	3/8 UNC X 1.1/4 BOLT		18
04	0571019051	FIXER BOX WASHER		18
05	0503012535	3/8" SPRING WASHER		18
06	0503012531	3/8" INOX NUT		18
07	0503011957	NYLON LUG		02
08	0503010371	5/16" X 1" BOLT		04
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0503034396	FERTILIZER SIDE COVER		12
12	0503010362	1/8 X 1.1/4 COTTERPIN		12
13	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		14
14	0501010984	FLAT WASHER		28
15	0503010025	3/8" SPRING WASHER		14
16	0503010026	3/8" NUT		14

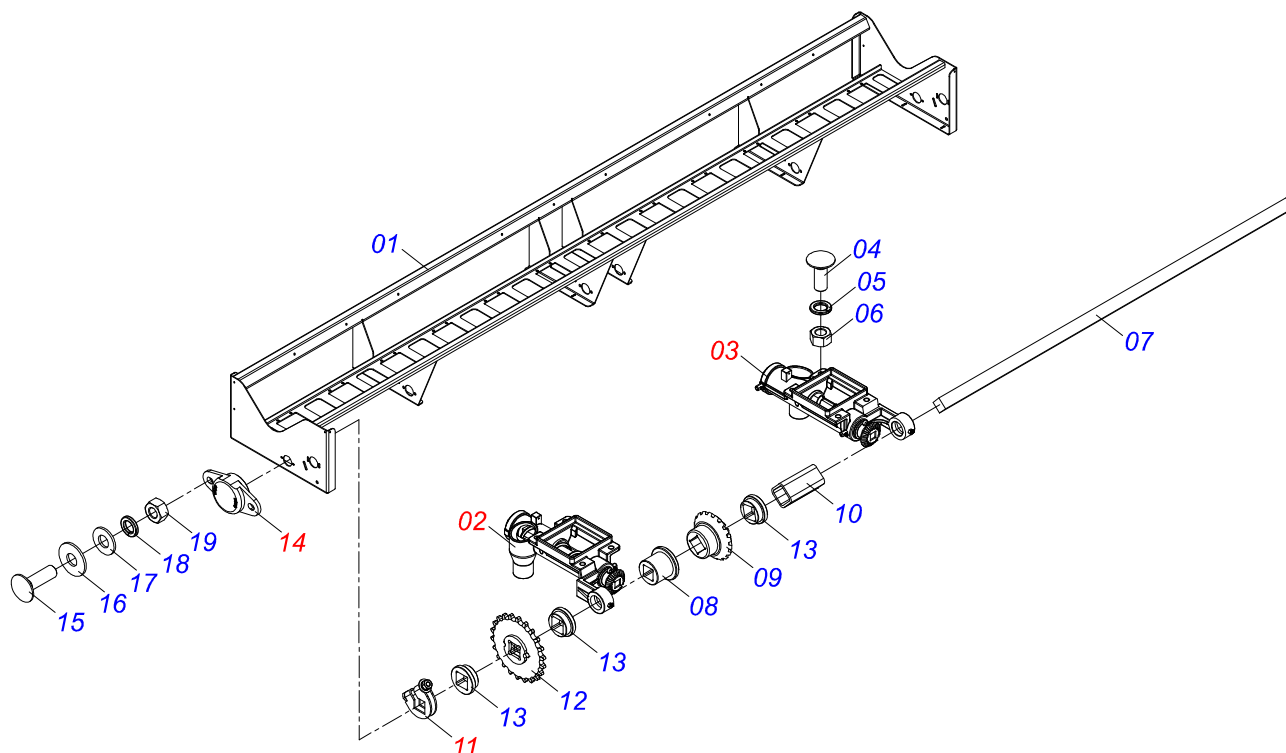


Item	Code	Description	See page	QT
01	0521065937	SUPPORT HOPPER FERTILIZER		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	45	06
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	46	06
04	0501010942	3/8" X 1-1/4" BOLT		48
05	0503011443	3/8" SPRING WASHER		48
06	0503010026	3/8" NUT		48
07	0571018899	SQUARE SHAFT 3/4 X 2565		02
08	0503030275	AGRICULTURAL BEARING		12
09	1902010685	18Z CONICAL GEAR		12
10	0551018055	22,65 X 60 SLEEVE		02
11	0501053788	3/4 SQUARE AXLE FASTENER	64	04
12	0511061759	22Z P12,70 FQ 3/4" GEAR		02
13	0503030303	SUPPORT WASHER		04
14	0501056271	GEARBOX CLOSED BEARING	67	02
15	0503011953	5/16" X 1" BOLT		04
16	0501010694	FLAT WASHER		04
17	0521011039	FLAT WASHER		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04

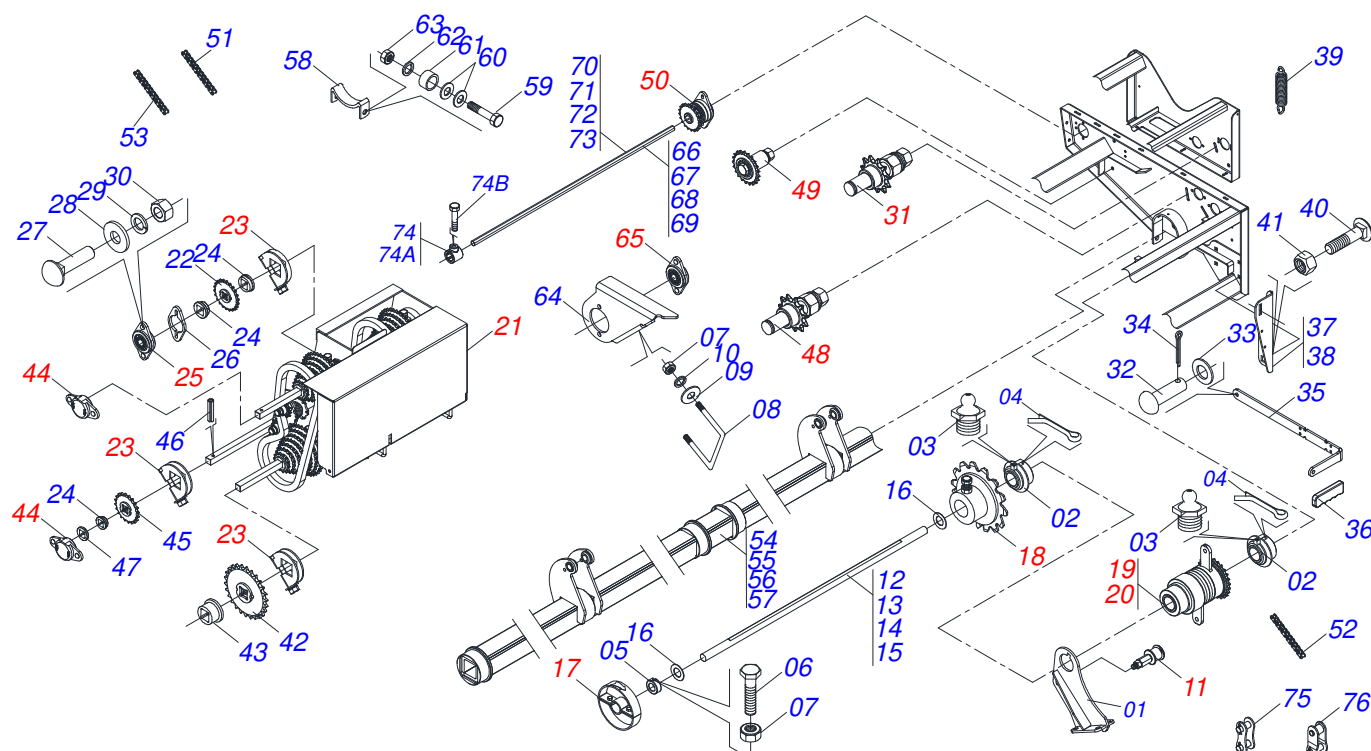


Item	Code	Description	See page	3245	3495	4045	4395
01	0521065954	SUPPORT BEARING AXLE MOTOR		02	02	04	04
02	0501110639	BEARING		06	06	08	08
03	0503011099	GREASE FITTING		06	06	08	08
04	0503010300	5/32" X 1" COTTERPIN		06	06	08	08
05	0511015961	LOCK BUSHING		04	04	04	04
06	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04	04	04	04
07	0503010060	1/2" NUT		16	16	24	24
08	0521014021	1/2" X 4.5" X 5.4" FASTENER		06	06	10	10
09	0511017302	FLAT WASHER		12	12	20	20
10	0503010019	1/2" SPRING WASHER		12	12	20	20
11	0511057263	AXLE CHAIN TENSIONER WHEEL		02	02	02	02
12	0571018904	AXLE MOTOR 1550		02	00	00	00
13	0571018905	AXLE MOTOR 1675		00	02	00	00
14	0571018906	AXLE MOTOR 1950		00	00	02	00
15	0571018907	AXLE MOTOR 2125		00	00	00	02
16	0501018466	FLAT WASHER		02	02	02	02
17	0501052560	MOTOR AXLE SIGNAL	59	02	02	02	02
18	0511051434	TRANSMISSION ACTUATOR	60	02	02	04	04
19	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	61	01	01	01	01
20	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	62	01	01	01	01
21	0511057264	RIGHT/LEFT GEARBOX SET	63	01	01	01	01
22	0511061759	22Z P12,70 FQ 3/4" GEAR		02	02	02	02
23	0501053788	3/4 SQUARE AXLE FASTENER	64	06	06	06	06
24	0503030303	SUPPORT WASHER		06	06	06	06
25	0501056444	BEARING WITH ROLLING	65	02	02	02	02
26	0541010568	CHOCK BEARING		02	02	02	02
27	0503011953	5/16" X 1" BOLT		12	12	12	12
28	0501010694	FLAT WASHER		12	12	12	12
29	0503011444	SPRING WASHER		12	12	12	12
30	0503010337	5/16" NUT		12	12	12	12
31	0511057265	TRANSMISSION CHAIN TENSIONER	66	04	04	04	04

Item	Code	Description	See page	3245	3495	4045	4395
32	0521010773	0.37" X 1.18" COUPLING SHAFT		02	02	02	02
33	0501010984	FLAT WASHER		02	02	02	02
34	0503010140	1/8" X 3/4" COTTERPIN		02	02	02	02
35	0571018846	DISASSEMBLE LEVER		02	02	02	02
36	0503033942	COVER REGULATORY WHEEL		02	02	02	02
37	0571018844	SUPPORT RIGHT DISASSEMBLE LEVER		01	01	01	01
38	0571018845	SUPPORT LEFT DISASSEMBLE LEVER		01	01	01	01
39	0503030093	TRACTION SPRING		02	02	02	02
40	0503012407	5/8" X 1-1/2" BOLT		04	04	04	04
41	0503012412	5/8 UNC SELF LOCKING NUT		04	04	04	04
42	0511067501	26Z GEAR		02	02	02	02
43	0503030275	AGRICULTURAL BEARING		02	02	02	02
44	0501056271	GEARBOX CLOSED BEARING	67	04	04	04	04
45	0511065209	20Z GEAR		02	02	02	02
46	0503010292	0.2" X 1.6" SPRING PIN		02	02	02	02
47	0521018630	1.4" X SQUARE 0.8" WASHER		02	02	02	02
48	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	68	02	02	02	02
49	0511050652	CHAIN TENSIONER	69	04	04	04	04
50	0501053653	BEARING WITH GEAR 20Z 3/4 HEX SHAFT	70	02	02	02	02
51	0503015637	40-1 X 56 CHAIN LINK + REDUCTION		02	02	02	02
52	0503014870	40-1 X 59 CHAIN LINK + MENDING		02	02	02	02
53	0503015001	40-1 X 153 CHAIN LINK + MENDING		02	02	02	02
54	0521065926	CARRYING-WHEELS PIVOT SHAFT 3245		01	00	00	00
55	0521065927	CARRYING-WHEELS PIVOT SHAFT 3495		00	01	00	00
56	0521065928	CARRYING-WHEELS PIVOT SHAFT - 4045		00	00	01	00
57	0521065929	CARRYING-WHEELS PIVOT SHAFT - 4395		00	00	00	01
58	0521013199	LOWER BEARING SEMI		04	04	04	04
59	0503010899	5/8" X 2-1/4" BOLT		08	08	08	08
60	0501012140	FLAT WASHER		16	16	16	16
61	0531013922	0.6" X 0.8" X 1" SLEEVE		08	08	08	08
62	0503011445	SPRING WASHER		08	08	08	08
63	0503010013	5/8" NUT		08	08	08	08
64	0571019315	BEARING SUPPORT AXLE HEX/SUPPORT PLATAFORM		02	02	02	02
65	0501057684	SIDE BEARING FRONT SUPPORT SEED LINE	71	04	04	04	04
66	0571018910	3/4 X 1505 AXLE HEX		01	00	00	00
67	0571018911	3/4 X 1690 AXLE HEX		01	00	00	00
68	0571018912	3/4 X 1630 AXLE HEX		00	01	00	00
69	0571018913	3/4 X 1815 AXLE HEX		00	01	00	00
70	0571018914	3/4 X 1905 AXLE HEX		00	00	01	00
71	0571018915	3/4 X 2090 AXLE HEX		00	00	01	00
72	0571018916	3/4 X 2080 AXLE HEX		00	00	00	01
73	0571018917	3/4 X 2265 AXLE HEX		00	00	00	01
74	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		18	18	22	22
74A	0502012699	LATCH GLOVE BOX TRANSMISSION		18	18	22	22
74B	0503010256	3/8" X 3/4" BOLT		18	18	22	22
75	0503011750	AMENDMENT WITH LOCK		06	06	06	06
76	0503011751	REDUCTION		06	06	06	06

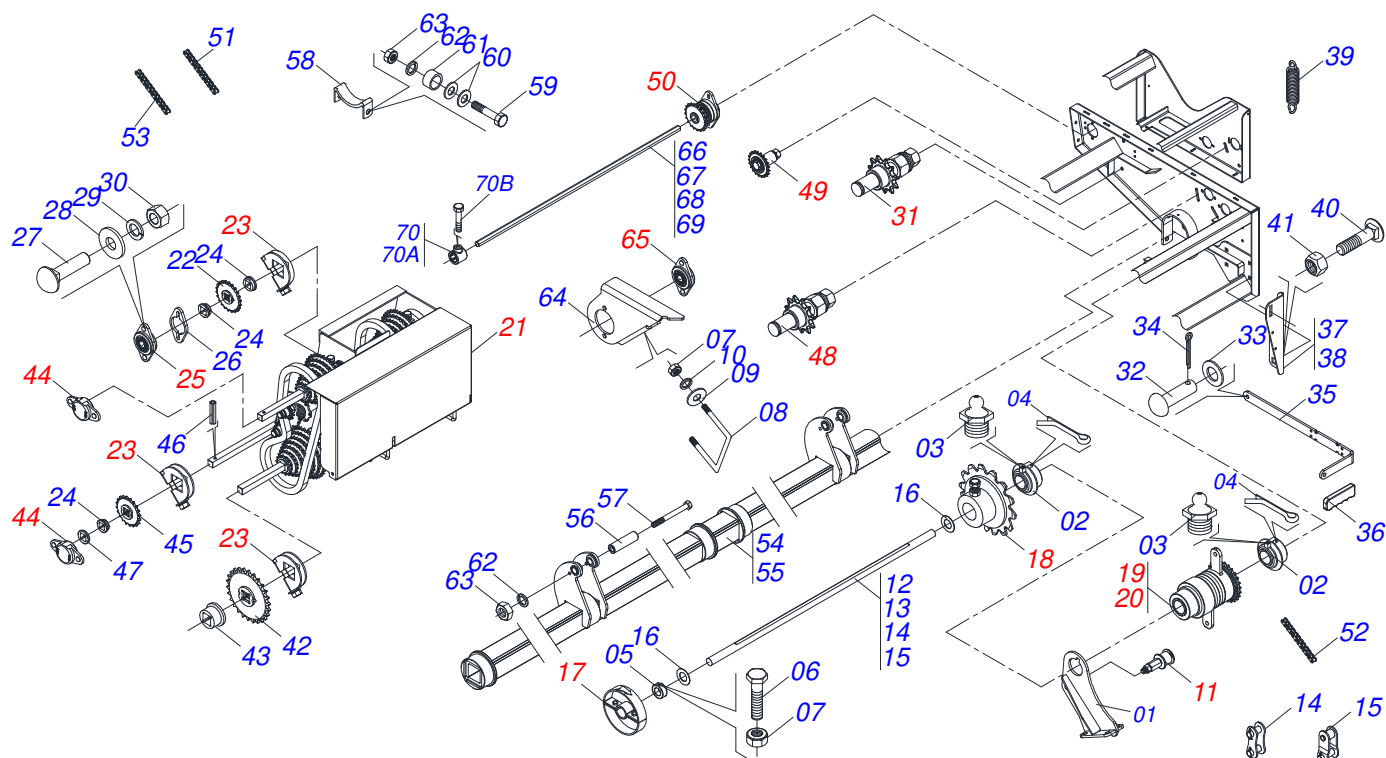


Item	Code	Description	See page	4845	5345
01	0521065954	SUPPORT BEARING AXLE MOTOR		04	04
02	0501110639	BEARING		08	08
03	0503011099	GREASE FITTING		08	08
04	0503010300	5/32" X 1" COTTERPIN		08	08
05	0511015961	LOCK BUSHING		04	04
06	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04	04
07	0503010060	1/2" NUT		28	28
08	0521014021	1/2" X 4.5" X 5.4" FASTENER		12	12
09	0511017302	FLAT WASHER		24	24
10	0503010019	1/2" SPRING WASHER		24	24
11	0511057263	AXLE CHAIN TENSIONER WHEEL		02	02
12	0571018908	MOTOR SHAFT 2350		02	00
13	0571018909	MOTOR SHAFT 2600		00	02
14	0503011750	AMENDMENT WITH LOCK		06	06
15	0503011751	REDUCTION		06	06
16	0501018466	FLAT WASHER		02	02
17	0501052560	MOTOR AXLE SIGNAL	59	02	02
18	0511051434	TRANSMISSION ACTUATOR	60	04	04
19	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	61	01	01
20	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	62	01	01
21	0511057264	RIGHT/LEFT GEARBOX SET	63	01	01
22	0511061759	22Z P12,70 FQ 3/4" GEAR		02	02
23	0501053788	3/4 SQUARE AXLE FASTENER	64	06	06
24	0503030303	SUPPORT WASHER		06	06
25	0501056444	BEARING WITH ROLLING	65	02	02
26	0541010568	CHOCK BEARING		02	02
27	0503011953	5/16" X 1" BOLT		12	12
28	0501010694	FLAT WASHER		12	12
29	0503011444	SPRING WASHER		12	12
30	0503010337	5/16" NUT		12	12
31	0511057265	TRANSMISSION CHAIN TENSIONER	66	04	04


Item	Code	Description	See page	4845	5345
32	0521010773	0.37" X 1.18" COUPLING SHAFT		02	02
33	0501010984	FLAT WASHER		02	02
34	0503010140	1/8" X 3/4" COTTERPIN		02	02
35	0571018846	DISASSEMBLE LEVER		02	02
36	0503033942	COVER REGULATORY WHEEL		02	02
37	0571018844	SUPPORT RIGHT DISASSEMBLE LEVER		01	01
38	0571018845	SUPPORT LEFT DISASSEMBLE LEVER		01	01
39	0503030093	TRACTION SPRING		02	02
40	0503012407	5/8" X 1-1/2" BOLT		04	04
41	0503012412	5/8 UNC SELF LOCKING NUT		04	04
42	0511067501	26Z GEAR		02	02
43	0503030275	AGRICULTURAL BEARING		02	02
44	0501056271	GEARBOX CLOSED BEARING	67	04	04
45	0511065209	20Z GEAR		02	02
46	0503010292	0.2" X 1.6" SPRING PIN		02	02
47	0521018630	1.4" X SQUARE 0.8" WASHER		02	02
48	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	68	02	02
49	0511050652	CHAIN TENSIONER	69	04	04
50	0501053653	BEARING WITH GEAR 20Z 3/4 HEX SHAFT	70	02	02
51	0503015637	40-1 X 56 CHAIN LINK + REDUCTION		02	02
52	0503014870	40-1 X 59 CHAIN LINK + MENDING		02	02
53	0503015001	40-1 X 153 CHAIN LINK + MENDING		02	02
54	0521065930	PIVOT SHAFT WHEEL - 4845		01	00
55	0521065931	PIVOT SHAFT WHEEL - 5345		00	01
56	0571019384	SPACING SLEEVE 16,30 X 30 X 104		02	02
57	0501013867	BOLT 5/8 UNC X 6 CS G.5 ZN		02	02
58	0521013199	LOWER BEARING SEMI		06	06
59	0503010899	5/8" X 2-1/4" BOLT		12	12
60	0501012140	FLAT WASHER		24	24
61	0531013922	0.6" X 0.8" X 1" SLEEVE		12	12
62	0503010027	5/8" SPRING WASHER		24	24
63	0503010013	5/8" NUT		14	14
64	0571019315	BEARING SUPPORT AXLE HEX/SUPPORT PLATAFORM		04	04
65	0501057684	SIDE BEARING FRONT SUPPORT SEED LINE	71	06	06
66	0571018918	3/4 X 2305 AXLE HEX		01	00
67	0571018919	3/4 X 2490 AXLE HEX		01	00
68	0571018920	3/4 X 2555 AXLE HEX		00	01
69	0571018921	3/4 X 2740 AXLE HEX		00	01
70	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		22	22
70A	0502012699	LATCH GLOVE BOX TRANSMISSION		22	22
70B	0503010256	3/8" X 3/4" BOLT		22	22

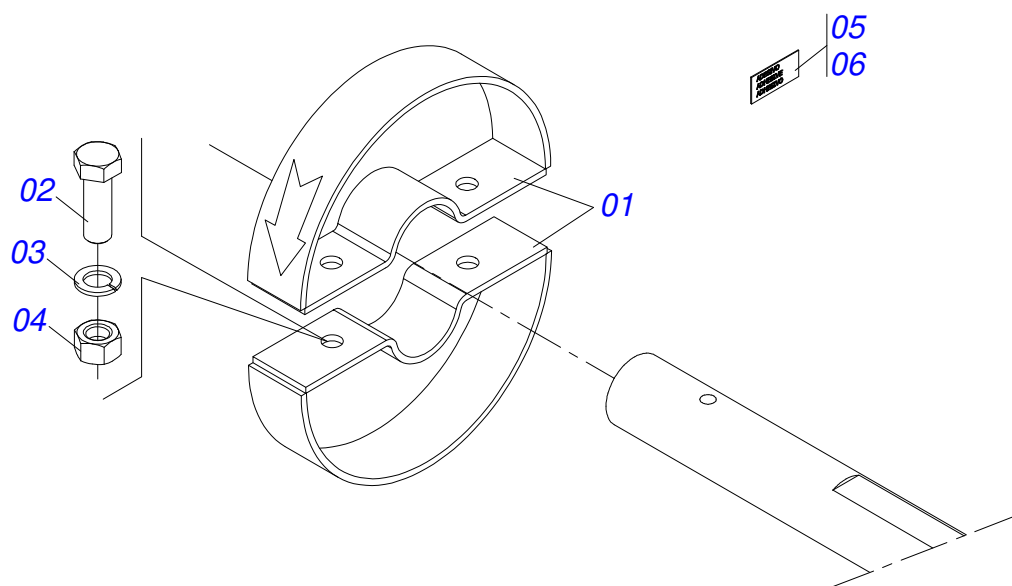

Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ADHESIVE LABEL		01

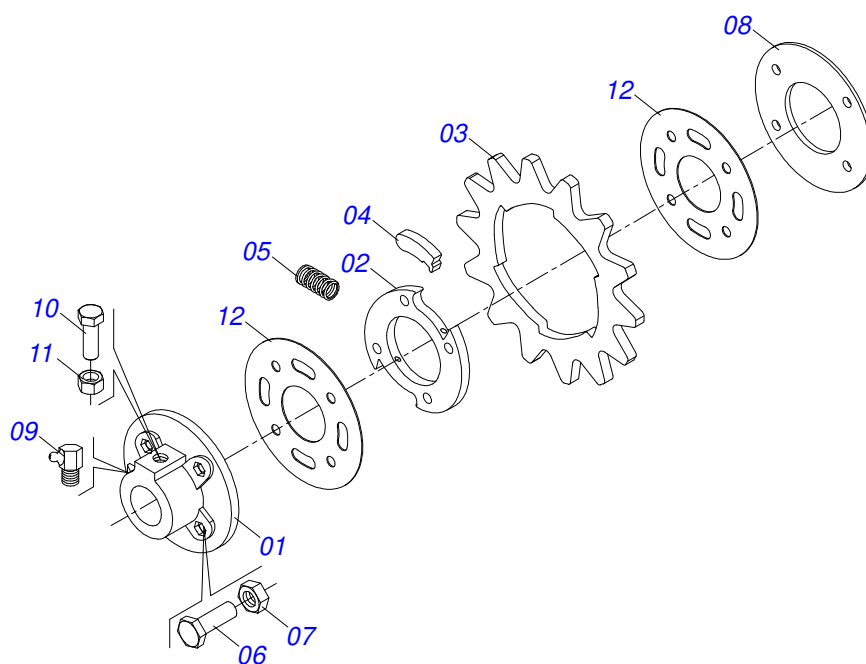


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

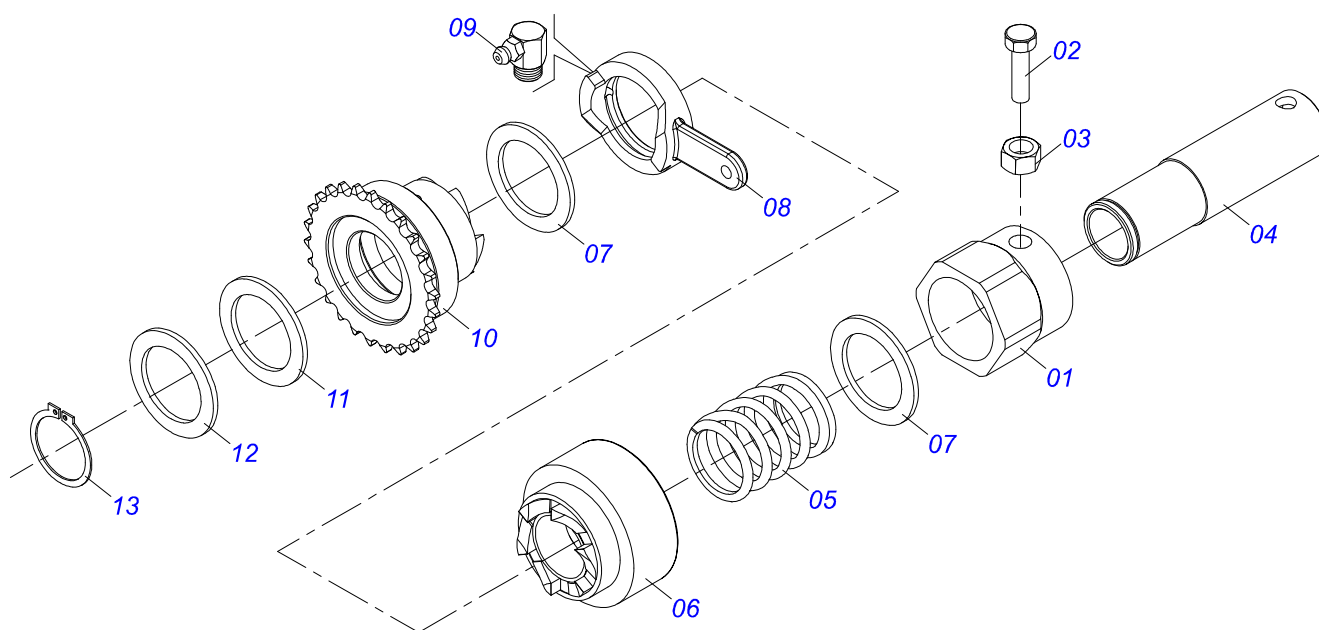

Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

LEFT SIDE TRANSMISSION ACTUATOR


0511047070

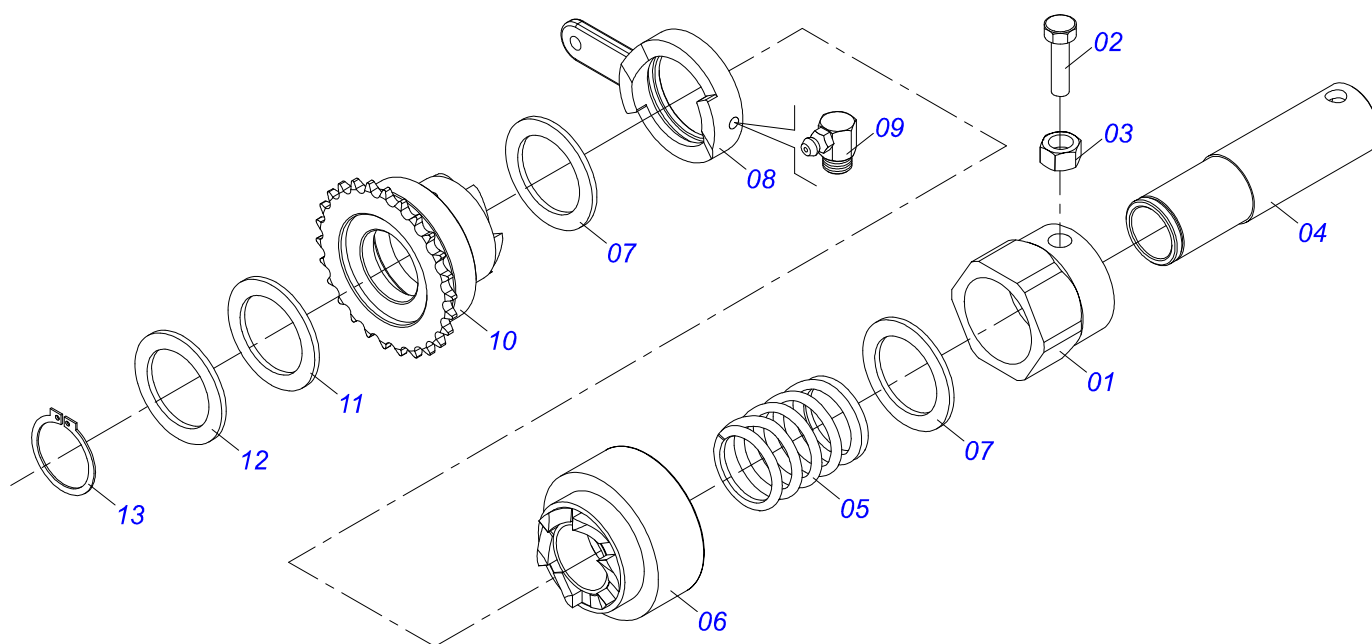

Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

RIGHT/LEFT GEARBOX SET

0511057264

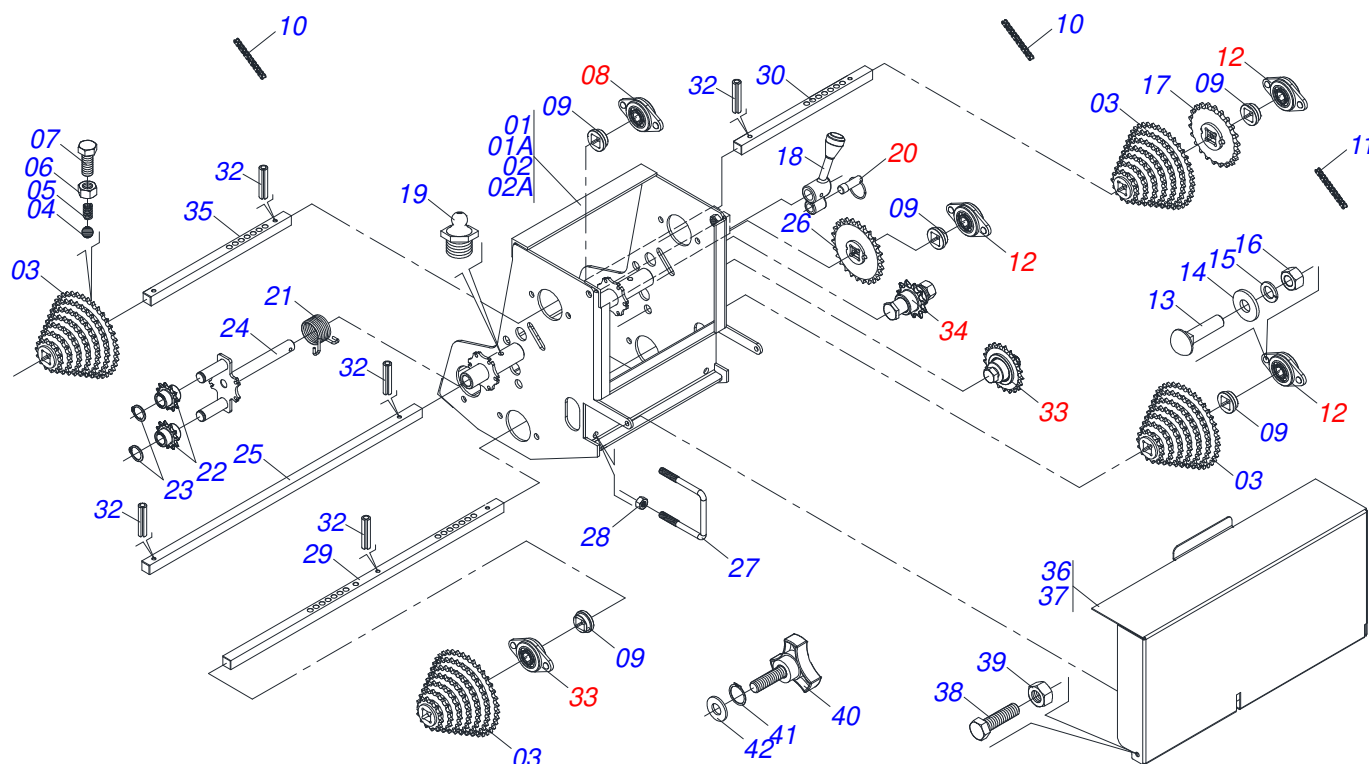


Item	Code	Description	See page	DIR	ESQ
01	0511057260	RIGHT RECOVERY		01	00
01A	0521065939	RIGHT GEAR BOX		01	00
02	0511057261	LEFT CHANGE		00	01
02A	0521065940	LEFT GEAR BOX		00	01
03	0511060396	DRIVE/DRIVEN AXLE CONE		04	04
04	0503012389	1/2 BALL		04	04
05	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04	04
06	0503010060	1/2" NUT		04	04
07	0503010395	1/2" X 1-1/4" BOLT		04	04
08	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING		01	01
09	0503030303	SUPPORT WASHER		06	06
10	0503012204	40-1 CHAIN X 82 LINK + RED		02	02
11	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01	01
12	0501056271	GEARBOX CLOSED BEARING	67	03	03
13	0503011953	5/16" X 1" BOLT		06	06
14	0501010694	FLAT WASHER		06	06
15	0503010179	LOCK WASHER		10	10
16	0503010337	5/16" NUT		10	10
17	0511061759	22Z P12,70 FQ 3/4" GEAR		01	01
18	0502011758	REAR TENSIONER LEVER		02	02
19	0503010002	1800 GREASE FITTING		02	02
20	0501048790	AXLE WITH RING		02	02
21	0503031366	RIGHT TWISTED SPRING RECAMBIO		02	02
22	0503031805	11Z 1/2" GEAR		04	04
23	0503010302	501019 SEAL RING		04	04
24	0511061794	CHAIN TENSIONER		02	02
25	0571018903	AXLE INTERMEDIATE RECAMBIO		01	01
26	0511067501	26Z GEAR		01	01
27	0521010683	3/8 UNC FASTENER		02	02
28	0503010026	3/8" NUT		04	04
29	0571018902	GEAR BOX DRIVER AXLE		01	01


RIGHT/LEFT GEARBOX SET

0511057264


Item	Code	Description	See page	DIR	ESQ
30	0571018900	SEED DRIVEN AXLE		01	01
31	0501056443	GEAR HOUSING BEARING		01	01
32	0503010292	0.2" X 1.6" SPRING PIN		08	08
33	0511057258	TENSIONER WITH GEAR		01	01
34	0511054363	CHAIN TENSIONER		01	01
35	0571018901	DRIVEN AXLE		01	01
36	0521065955	RH GEAR BOX COVER		01	00
37	0521065956	LH GEAR BOX COVER		00	01
38	0503010240	BOLT		02	02
39	0503013816	5/16" LOCKNUT		02	02
40	0503033682	KNOB 3P K3 60A M12 X 40		01	01
41	0503010291	501012 CLAMPING RING (FOR AXLE)		02	02
42	0511017302	FLAT WASHER		01	01

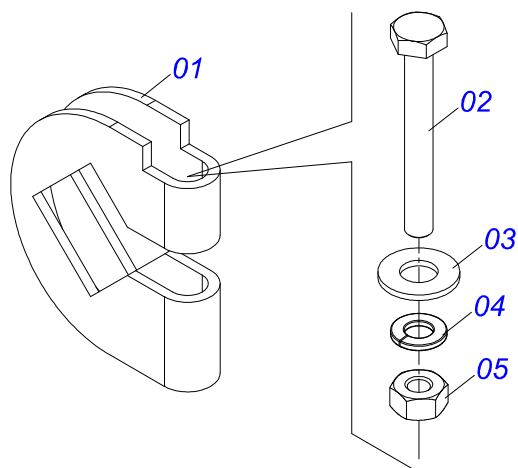


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

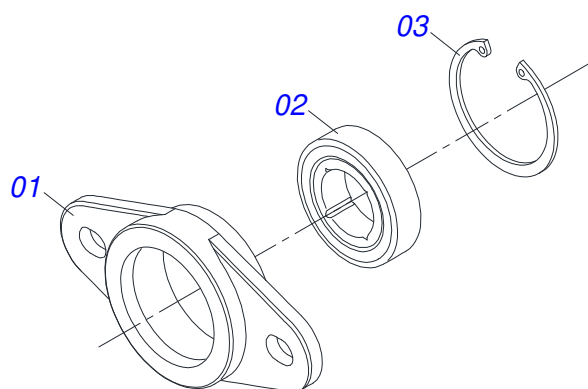


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

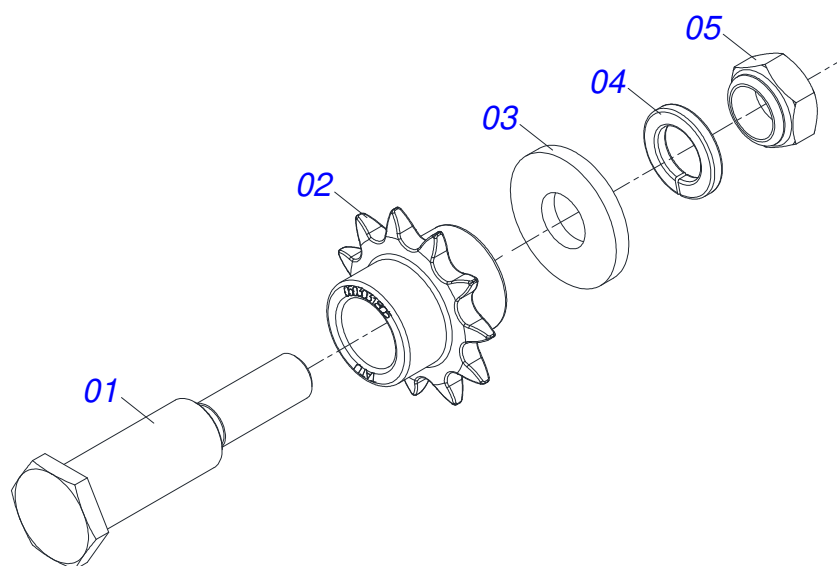


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		03
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

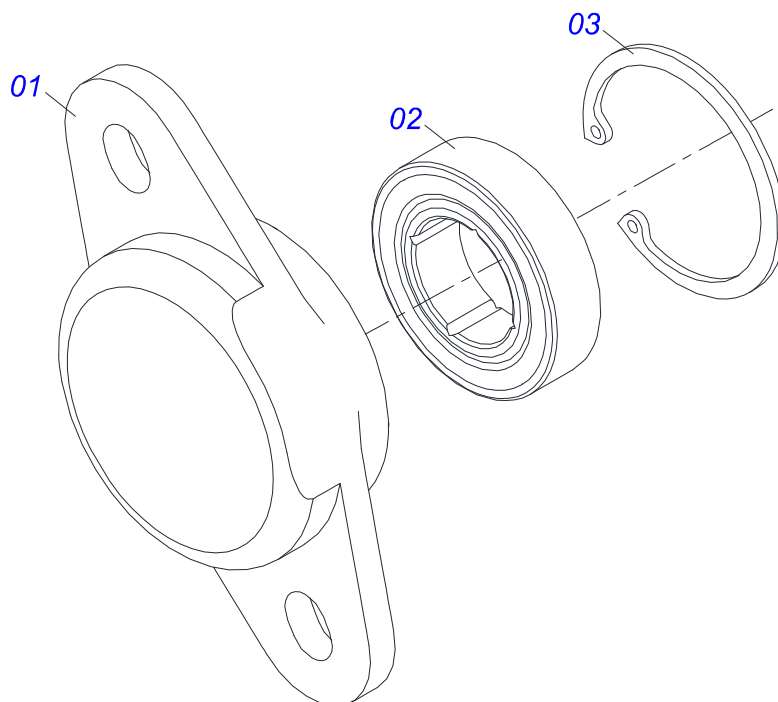


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

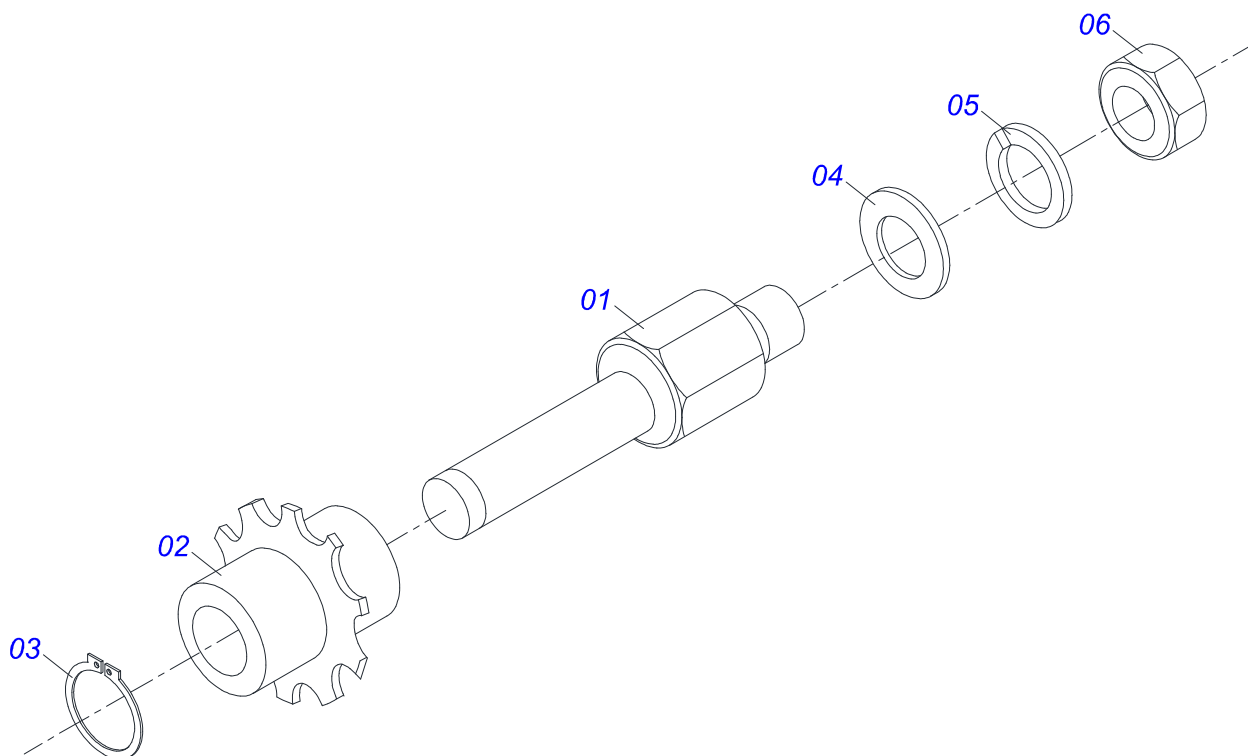


Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

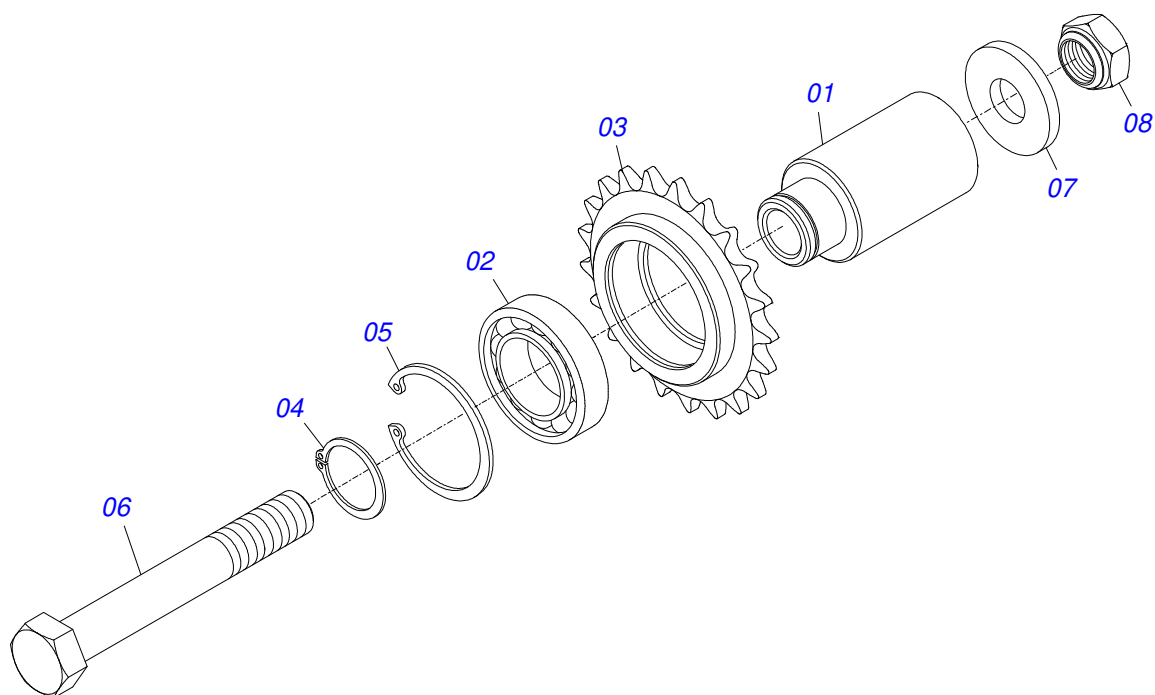

Item	Code	Description	See page	QT
01	0551019171	CHAIN TIGHTENER AXLE		01
02	0503011410	ROLLER BEARING		01
03	0511062169	21Z P 1/2" GEAR		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0503011105	SEAL RING		01
06	0501011027	5/8" X 3-3/4" BOLT		01
07	0571010265	16.5 X 40 X 3 FLAT WASHER		01
08	0503012412	5/8 UNC SELF LOCKING NUT		01

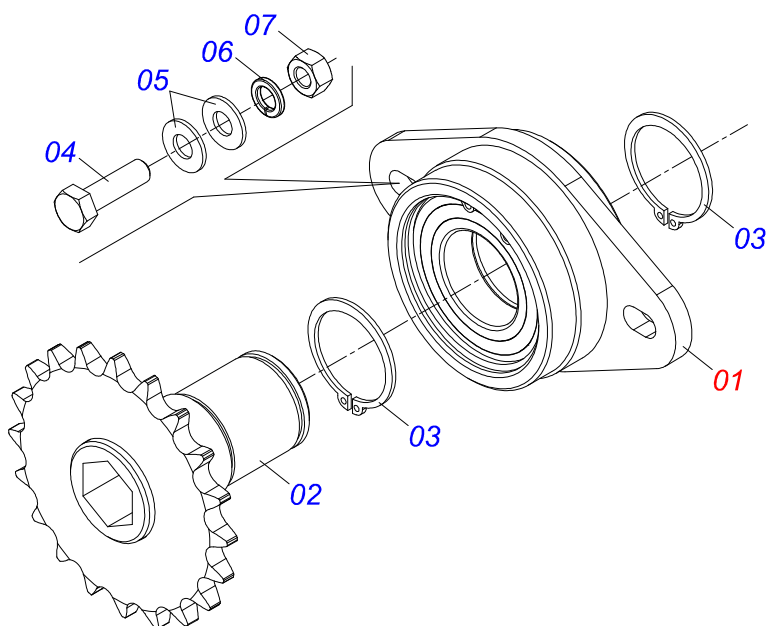


Item	Code	Description	See page	QT
01	0501053654	3/4 SEED TRANSMISSION DOUBLE BEARING		01
02	0511063185	20Z GEAR WITH HEX HOLE AXLE 20		01
03	0503010707	501030 CLAMPING RING (FOR AXLE)		02
04	0503010365	NUT		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

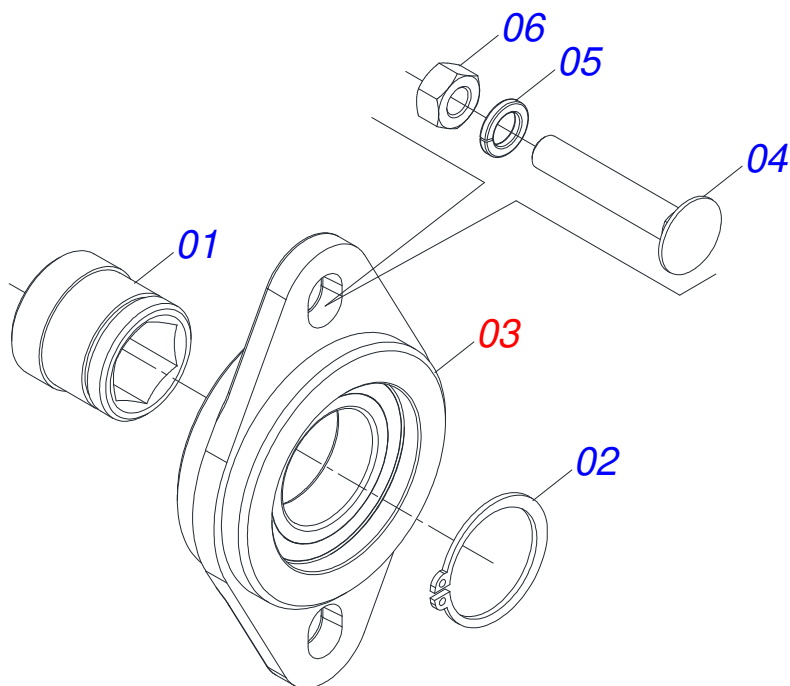


Item	Code	Description	See page	QT
01	0551015804	BEARING AXLE BODY		01
02	0503010707	501030 CLAMPING RING (FOR AXLE)		01
03	0501053566	ROW SEED BEARING		01
04	0503011953	5/16" X 1" BOLT		02
05	0503010179	LOCK WASHER		02
06	0503010337	5/16" NUT		02

WHEELED SPRING


0521045638

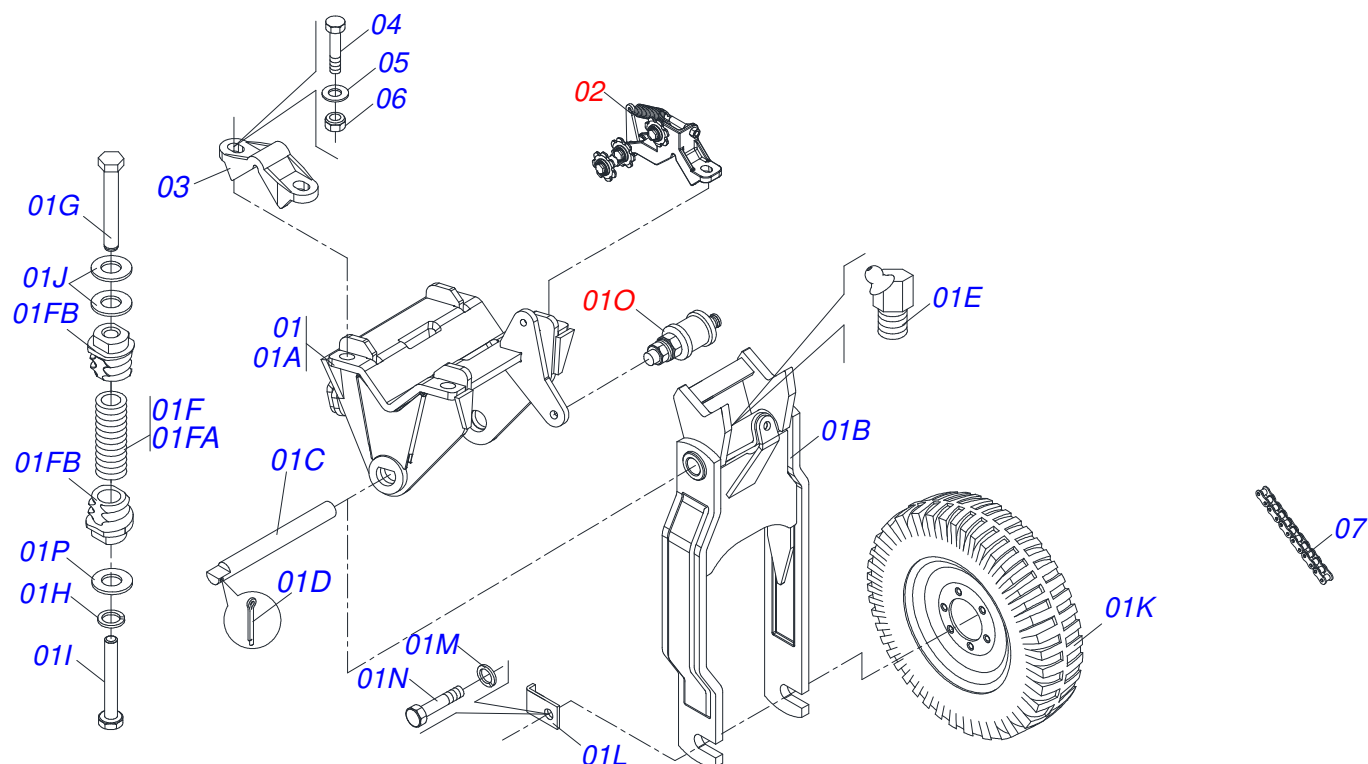


Item	Code	Description	See page	QT
01	0501059907	HUB SUPPORT		01
01A	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
01B	0531062422	WHEEL ARM		01
01C	0531016887	CARRYING WHEEL AXLE ARM		01
01D	0503010523	1/4" X 2" COTTERPIN		01
01E	0503010003	1845 GREASE FITTING		01
01F	0511050681	TRACTION SPRING		01
01FA	0503031681	2.1" X 7.78" EXTENSION SPRING		01
01FB	0561016062	SPRING HITCH		02
01G	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
01H	0503010027	5/8" SPRING WASHER		01
01I	0503013030	5/8" X 3.1/4" BOLT		01
01J	0551017715	FLAT WASHER		02
01K	0511052772	650X16 WHEEL AND TIRE ASSY		01
01L	0591010589	BODY LOCK WHEEL		02
01M	0503010027	5/8" SPRING WASHER		02
01N	0503011167	M16 X 2 X 30 BOLT		02
01O	0501058241	WHEEL SUPPORT CHAIN TENSIONER	73	01
01P	0501012140	FLAT WASHER		01
02	0501058240	WHEEL FASTENER WITH TENSIONER		01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

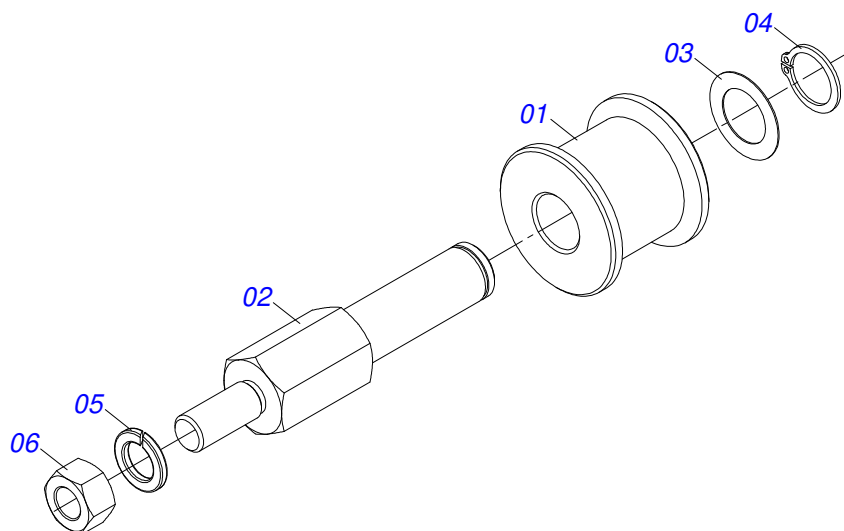


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	FERT CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

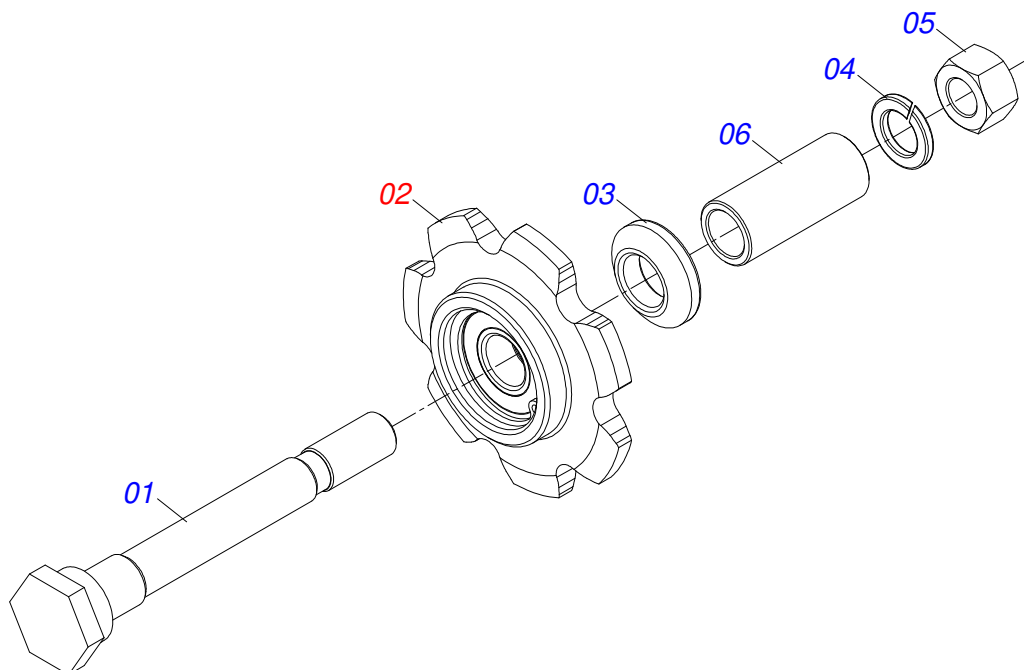

Item	Code	Description	See page	QT
01	0551018245	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0551018239	SLEEVE 19 X 13,50 X 45		01

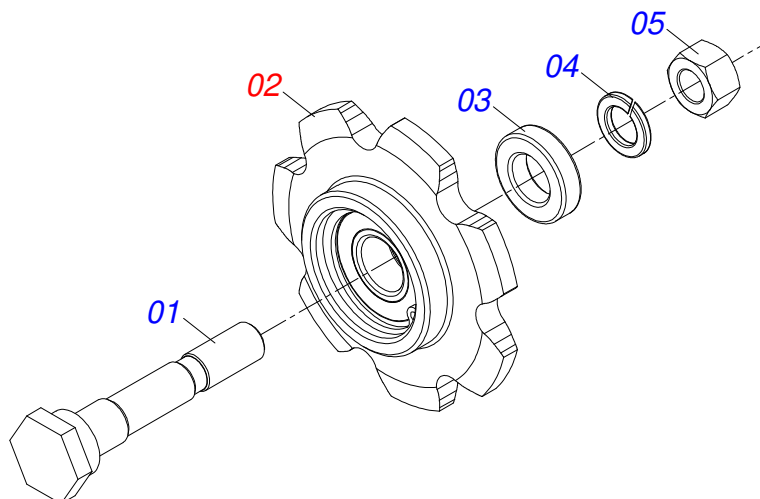


Item	Code	Description	See page	QT
01	0551018252	CHAIN TIGHTENER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

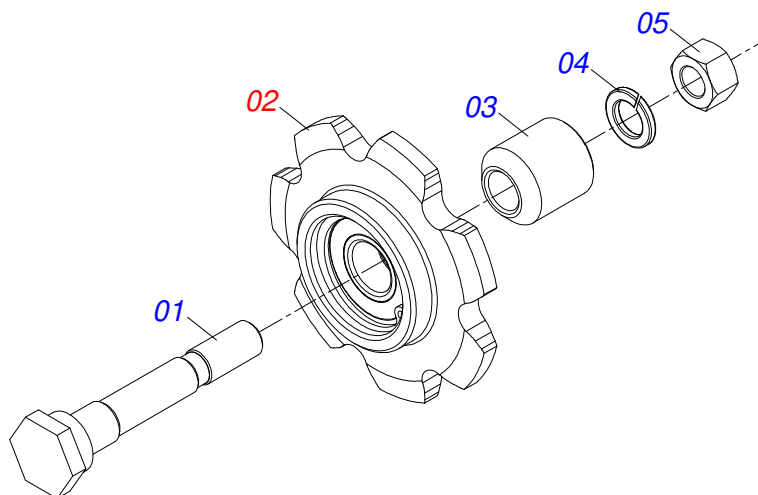

Item	Code	Description	See page	QT
01	0551018244	CHAIN UPPER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0591017923	GLOVE 15.30 X 30 X 32		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

FERTILIZER ROW SEED ASSY

0909091861

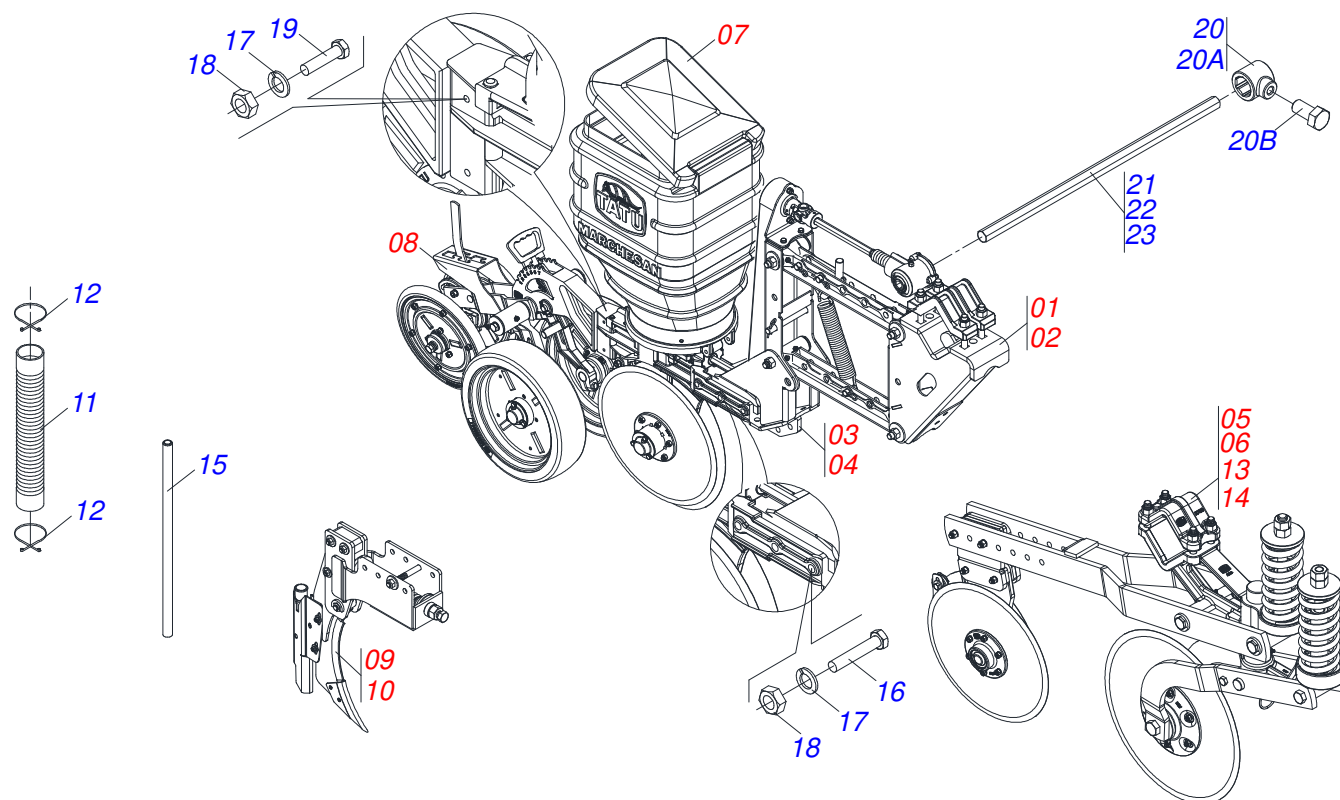


Item	Code	Description	See page	QT
01	0511057277	FRONT SHORT SEED ROW WITH RIGHT TRANSMISSION	78	01
02	0511057278	FRONT LONG SEED ROW WITH RIGHT TRANSMISSION	79	01
03	0511056621	REAR RIGHT SEED LINE	85	01
04	0511056622	LEFT REAR LINE SEED	87	01
05	0511057281	SHORT FERTILIZER ROW DDD 18" BLADE DISC	89	01
06	0511057282	LONG FERTILIZER ROW DDD 18" BLADE DISC	90	01
07	0511057017	SEED SYSTEM ASSY	93	01
08	0521045198	PRESS WHEELS	95	01
09	0521053949	SCARIFIER SPINDLE WITH SOCKET RIGHT	100	01
10	0521053948	SCARIFIER SPINDLE WITH SOCKET LEFT	101	01
11	0503031145	2" X 2" X 20" HOSE		01
12	0503031076	2" HOSE CLAMP		01
13	0511057283	SHORT FERTILIZER ROW DDD 20" BLADE DISC		01
14	0511057284	LONG FERTILIZER ROW DDD 20" BLADE DISC		01
15	0531013600	PRESS ADJUSTMENT LEVER		01
16	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
17	0503010019	1/2" SPRING WASHER		01
18	0503010060	1/2" NUT		01
19	0503010905	1/2" X 2-1/4" BOLT		01
20	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		01
20A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
20B	0503010256	3/8" X 3/4" BOLT		01
21	0571018910	3/4 X 1505 AXLE HEX		01
21.	0571018912	3/4 X 1630 AXLE HEX		01
21..	0571018914	3/4 X 1905 AXLE HEX		01
21...	0571018916	3/4 X 2080 AXLE HEX		01
22	0571018919	3/4 X 2490 AXLE HEX		01
22.	0571018921	3/4 X 2740 AXLE HEX		01
22..	0571018911	3/4 X 1690 AXLE HEX		01

**FERTILIZER ROW SEED ASSY**

0909091861


Item	Code	Description	See page	QT
22...	0571018913	3/4 X 1815 AXLE HEX		01
23	0571018915	3/4 X 2090 AXLE HEX		01
23.	0571018917	3/4 X 2265 AXLE HEX		01
23..	0571018918	3/4 X 2305 AXLE HEX		01
23...	0571018920	3/4 X 2555 AXLE HEX		01

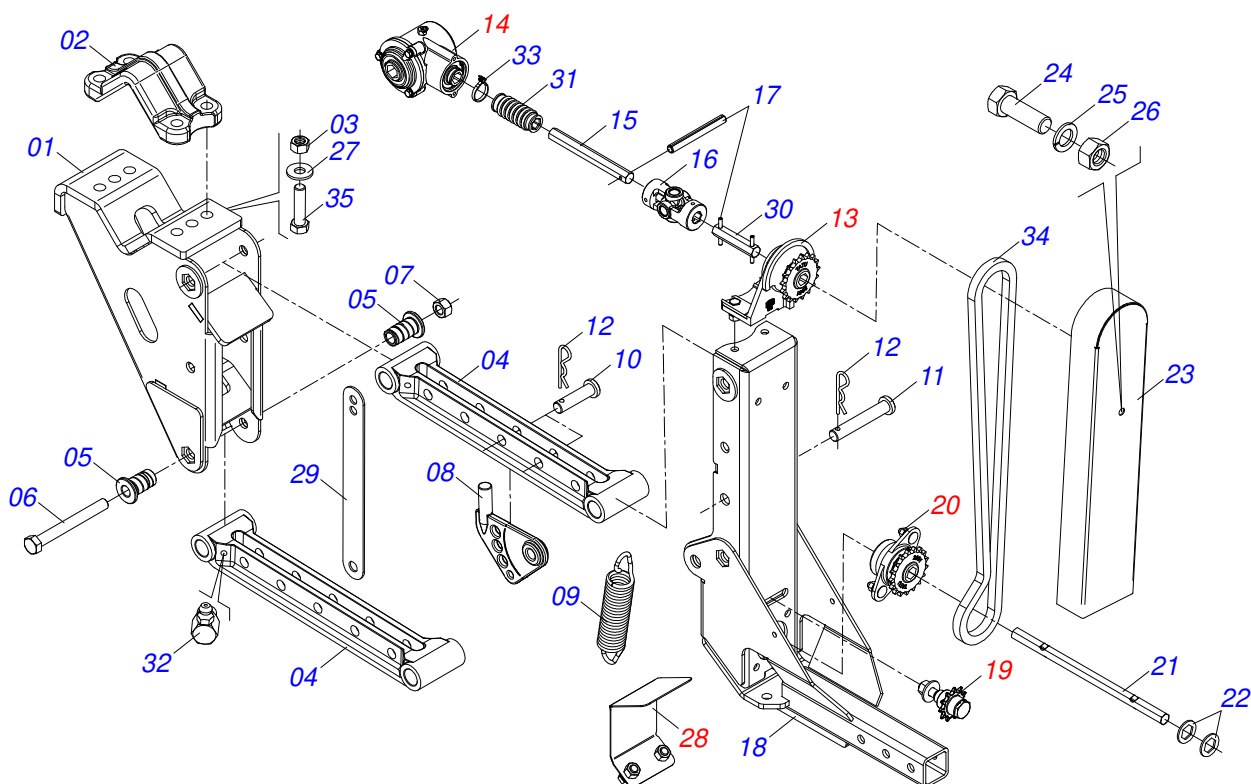

Item	Code	Description	See page	QT
01	0521065941	FRAME SEED ROW FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0502012804	PIVOT ARM SEED ROW		02
05	0571018882	SLEEVE ARM LINE SEED		08
06	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		04
07	0503012412	5/8 UNC SELF LOCKING NUT		04
08	0502012812	SEED ROW ADJUSTMENT LEVER ASSY		01
09	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
10	0571018883	PIN FIXER SPRING		03
11	0571018884	LOCK PIN ROW ARTICULAT		01
12	0503030168	HITCH PIN CLIP		04
13	0511058766	BEARING	80	01
14	0511057159	TRANSMISSION BOX SEED LINE	81	01
15	0571012492	5/8 X 330 AXLE HEX		01
16	0501056296	UNIVERSAL JOINT		01
17	0503011855	0.2" X 1.8" SPRING PIN		03
18	0521065942	FRAME REAR SHORT ROW SEED		01
19	0511057269	CHAIN TENSIONER LINE	82	01
20	0511059872	BEARING	83	01
21	0581010239	SEED ROW AXLE TRANSMISSION		01
22	0521011859	FLAT WASHER		02
23	0581011694	PROTECTION REAR COVER SEED ROW		01
24	0503010765	3/8" X 3" BOLT		01
25	0503010025	3/8" SPRING WASHER		01
26	0503010026	3/8" NUT		01
27	0501012140	FLAT WASHER		08
28	0511058512	PROTECTION COVER	84	01
29	0581011430	DRAWBAR ASSY		01
30	0581010976	5/8" HEX AXLE		01
31	0503032984	HOOD HEX AXLE ROW		01




Item	Code	Description	See page	QT
32	0503010004	1890 GREASE FITTING		04
33	0503013100	NYLON CLAMP		01
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		01
35	0503017857	BOLT 5/8 UNF 4		04

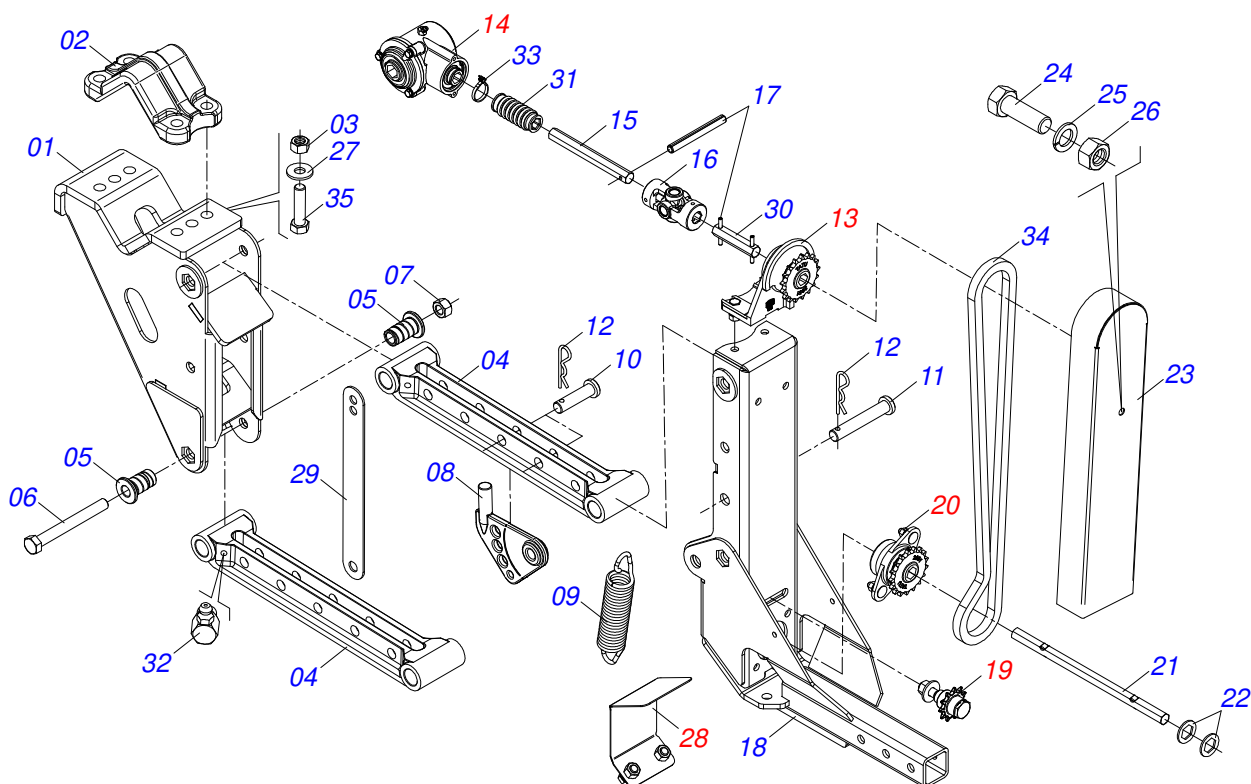


Item	Code	Description	See page	QT
01	0521065941	FRAME SEED ROW FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0502012804	PIVOT ARM SEED ROW		02
05	0571018882	SLEEVE ARM LINE SEED		08
06	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		04
07	0503012412	5/8 UNC SELF LOCKING NUT		04
08	0502012812	SEED ROW ADJUSTMENT LEVER ASSY		01
09	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
10	0571018883	PIN FIXER SPRING		03
11	0571018884	LOCK PIN ROW ARTICULAT		01
12	0503030168	HITCH PIN CLIP		04
13	0511058766	BEARING	80	01
14	0511057159	TRANSMISSION BOX SEED LINE	81	01
15	0571012492	5/8 X 330 AXLE HEX		01
16	0501056296	UNIVERSAL JOINT		01
17	0503011855	0.2" X 1.8" SPRING PIN		03
18	0521065943	REAR FRAME LONG ROW SEED		01
19	0511057269	CHAIN TENSIONER LINE	82	01
20	0511059872	BEARING	83	01
21	0581010240	SEED ROW AXLE TRANSMISSION		01
22	0521011859	FLAT WASHER		02
23	0581011694	PROTECTION REAR COVER SEED ROW		01
24	0503010765	3/8" X 3" BOLT		01
25	0503010025	3/8" SPRING WASHER		01
26	0503010026	3/8" NUT		01
27	0501012140	FLAT WASHER		08
28	0511058512	PROTECTION COVER	84	01
29	0581011430	DRAWBAR ASSY		01
30	0581010976	5/8" HEX AXLE		01
31	0503032984	HOOD HEX AXLE ROW		01




Item	Code	Description	See page	QT
32	0503010004	1890 GREASE FITTING		04
33	0503013100	NYLON CLAMP		01
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		01
35	0503017857	BOLT 5/8 UNF 4		04

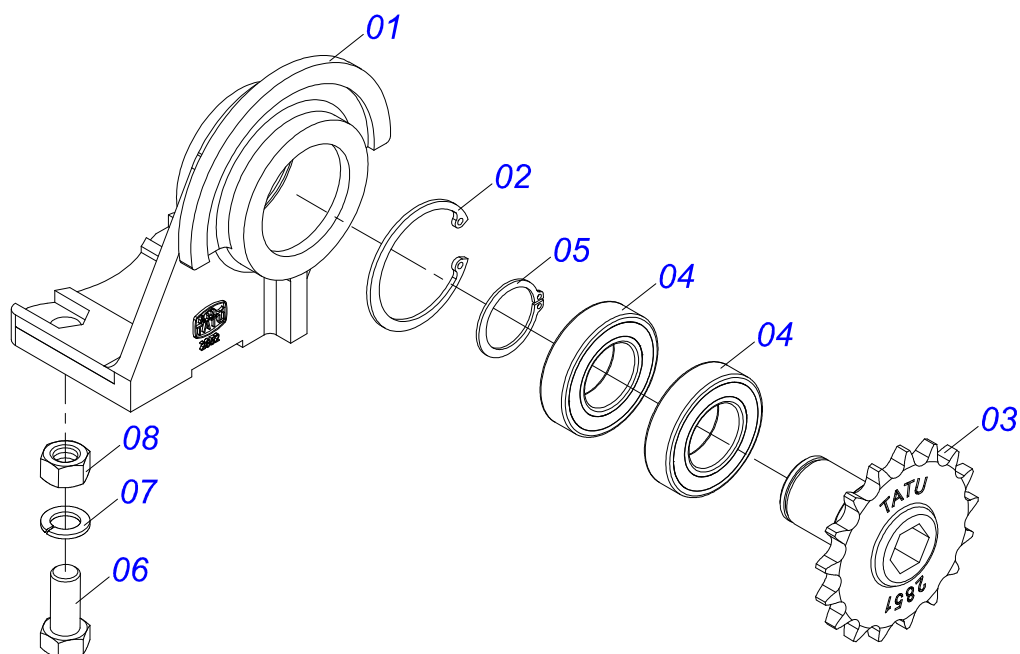


Item	Code	Description	See page	QT
01	0502012852	ROW SEED UPPER BEARING		01
02	0503011105	SEAL RING		01
03	0502012851	17Z GEAR WITH HEX HOLE		01
04	0503011410	ROLLER BEARING		02
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503010237	3/8" X 1" BOLT		02
07	0503010025	3/8" SPRING WASHER		02
08	0503010026	3/8" NUT		02

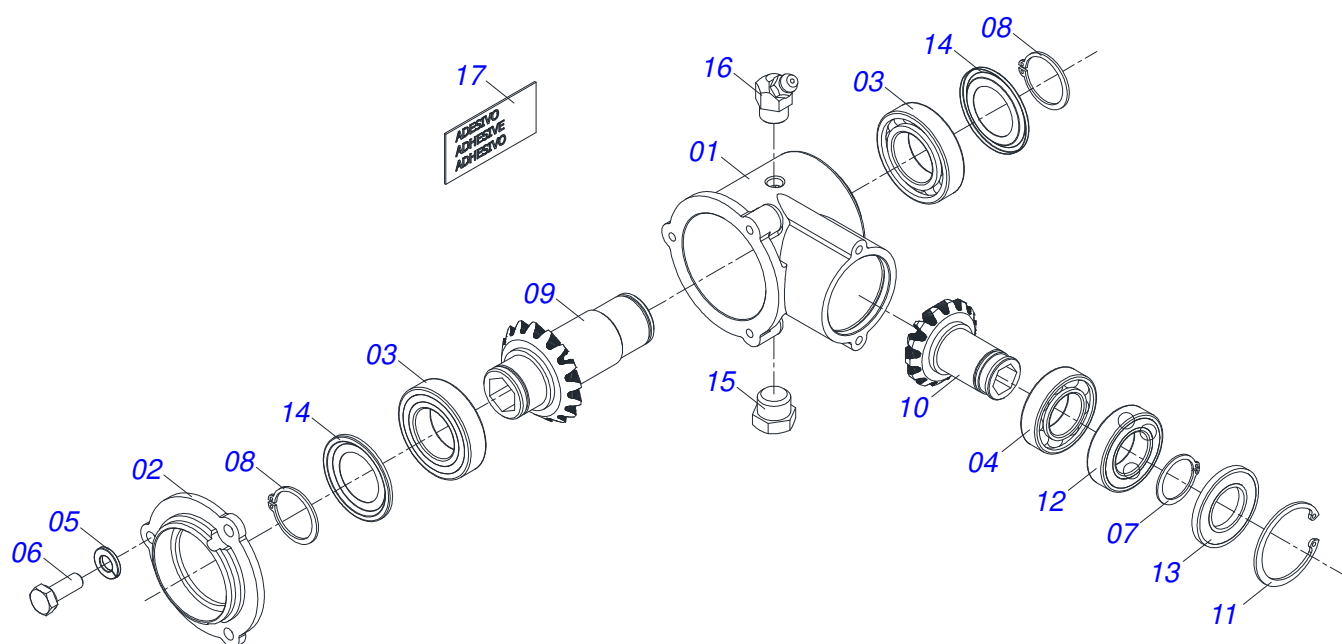


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB	01	
02	0502012464	BOX TRANSMISSION COVER	01	
03	0503016995	6006 BALL BEARING	02	
04	0503015895	6005 Z BALL BEARING	01	
05	0503010143	1/4" SPRING WASHER	03	
06	0503011378	M6X1X16 C S 8.8 ZN BOLT	03	
07	0503010406	501025 CLAMPING RING (FOR AXLE)	01	
08	0503010707	501030 CLAMPING RING (FOR AXLE)	02	
09	0502040856	CONICAL GEAR	01	
10	0571018870	14Z CONICAL GEAR	01	
11	0503011105	SEAL RING	01	
12	0503011409	6005 Z BALL BEARING	01	
13	0503017008	SEAL RING	01	
14	0503017007	SEAL RING	02	
15	0511017907	1/8" BSPT X 6 PLUG	01	
16	0503010003	1845 GREASE FITTING	01	
17	0503035316	LUBRICATED POINTS ADHESIVE LABEL	01	

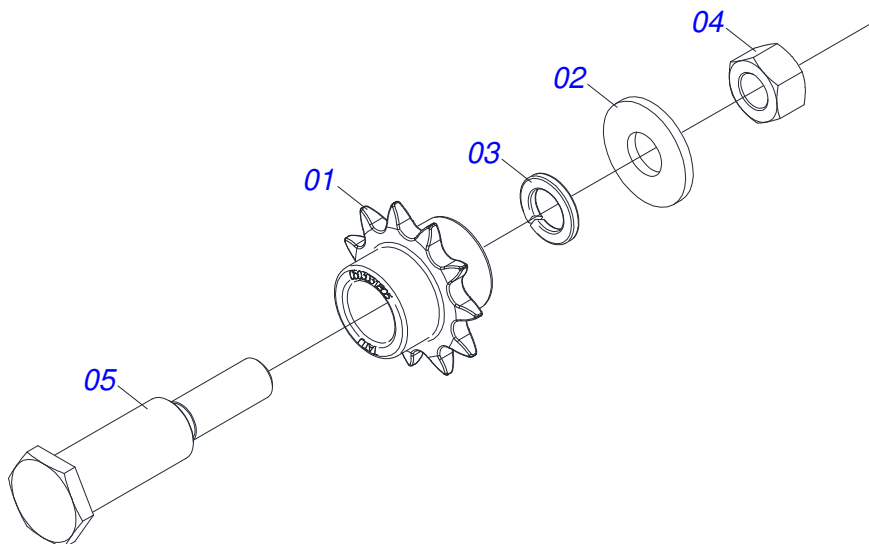


Item	Code	Description	See page	QT
01	0503031805	11Z 1/2" GEAR		01
02	0511017302	FLAT WASHER		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0531019479	AXLE CHAIN GEAR		01

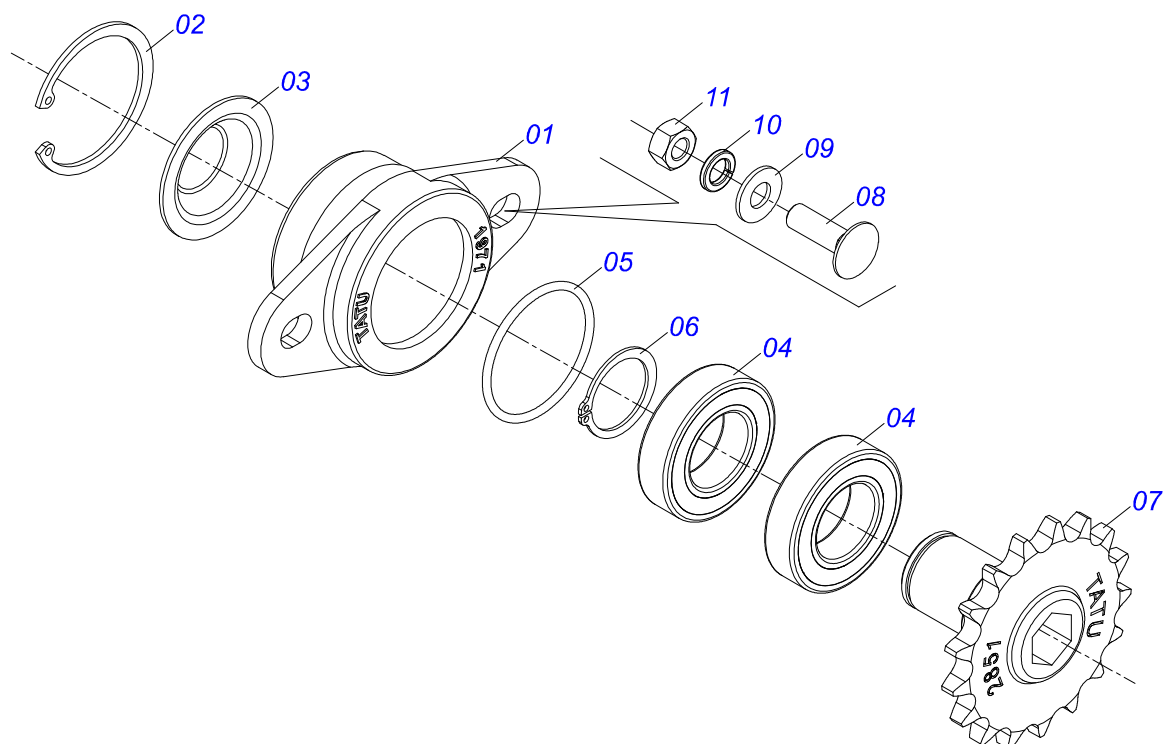


Item	Code	Description	See page	QT
01	0581012948	HOUSING BEARING		01
02	0503011105	SEAL RING		01
03	0581012949	BEARING COVER		01
04	0503011410	ROLLER BEARING		02
05	0503018045	2-130 (AGEL) O'RING		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		01
07	0502012851	17Z GEAR WITH HEX HOLE		01
08	0503011953	5/16" X 1" BOLT		02
09	0501010694	FLAT WASHER		02
10	0503010179	LOCK WASHER		02
11	0503010337	5/16" NUT		02

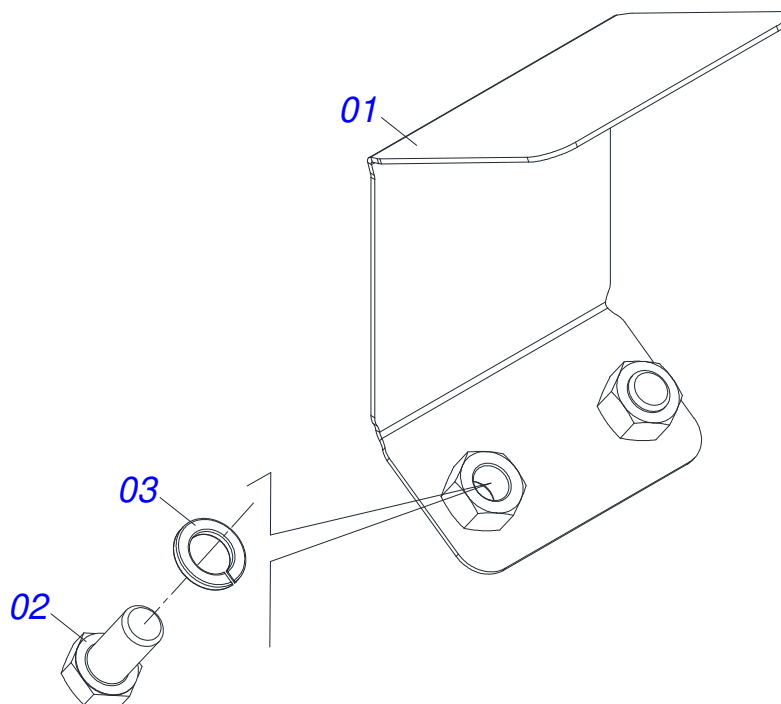


Item	Code	Description	See page	QT
01	0521066693	CAP BEARING		01
02	0503010834	1/2 X 1 BOLT		02
03	0503010019	1/2" SPRING WASHER		02

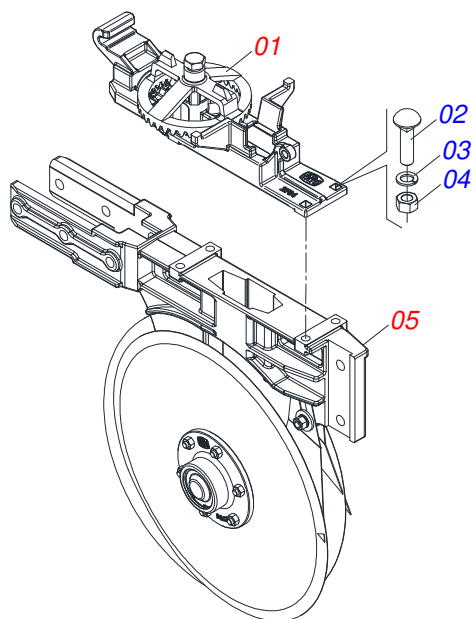


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	86	01

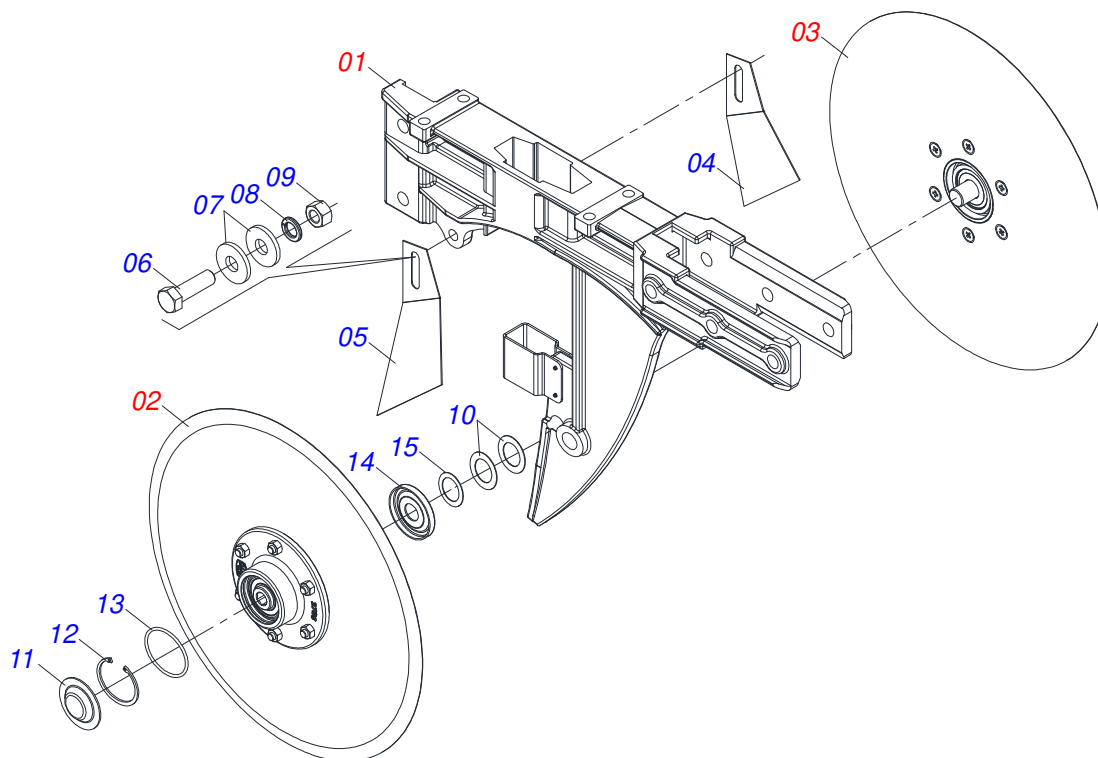


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT		01
02	0511053173	CUBE LOW RIGHT WITH DISC 15		01
03	0511053172	LEFT LOW CUBE WITH DISC 15		01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511815098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O-RING		02
14	0511011927	DUST CLOAK		02
15	0591014250	19 X 26 X 0,50 FLAT WASHER		02

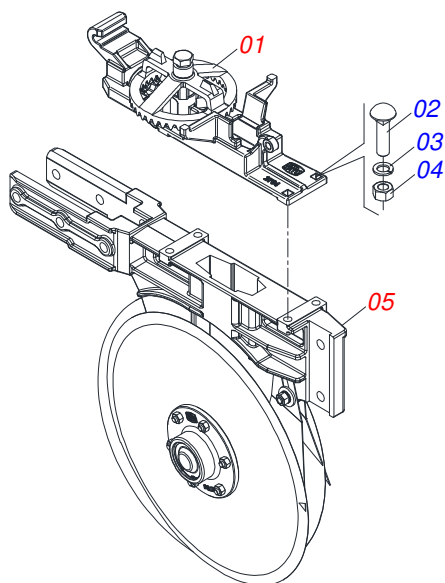


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0511056586	15 X 15 SEED DDD LEFT	88	01

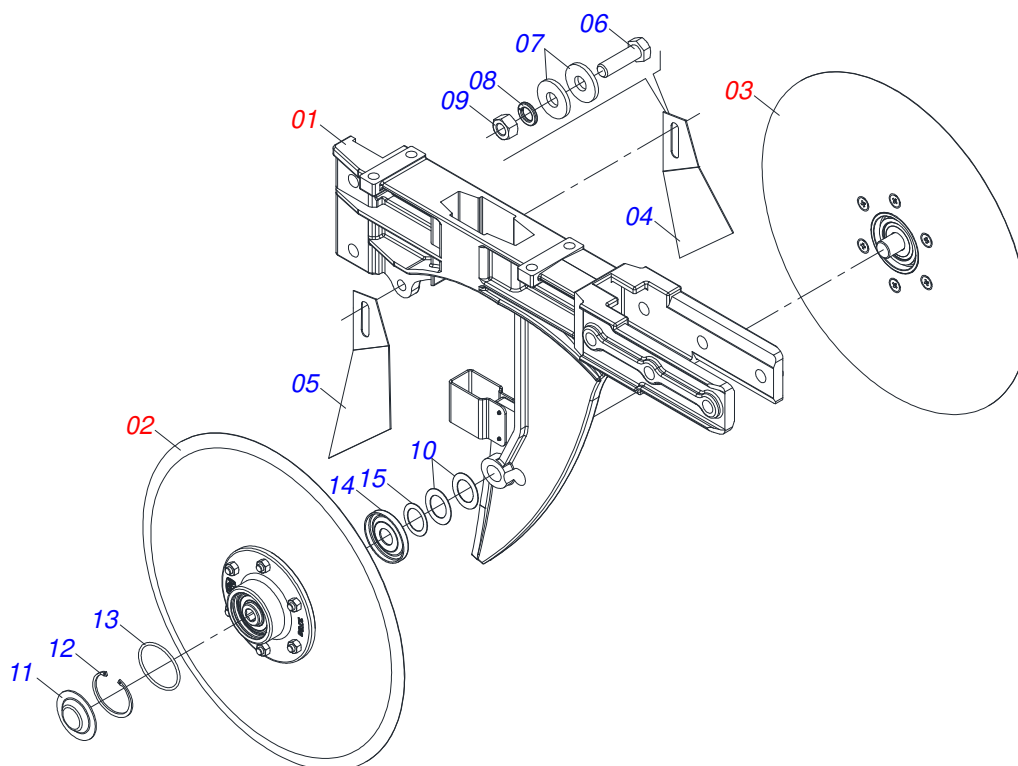

Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE		01
02	0511053173	CUBE LOW RIGHT WITH DISC 15		01
03	0511053172	LEFT LOW CUBE WITH DISC 15		01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511815098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O'RING		02
14	0511011927	DUST CLOAK		02
15	0591014250	19 X 26 X 0,50 FLAT WASHER		02

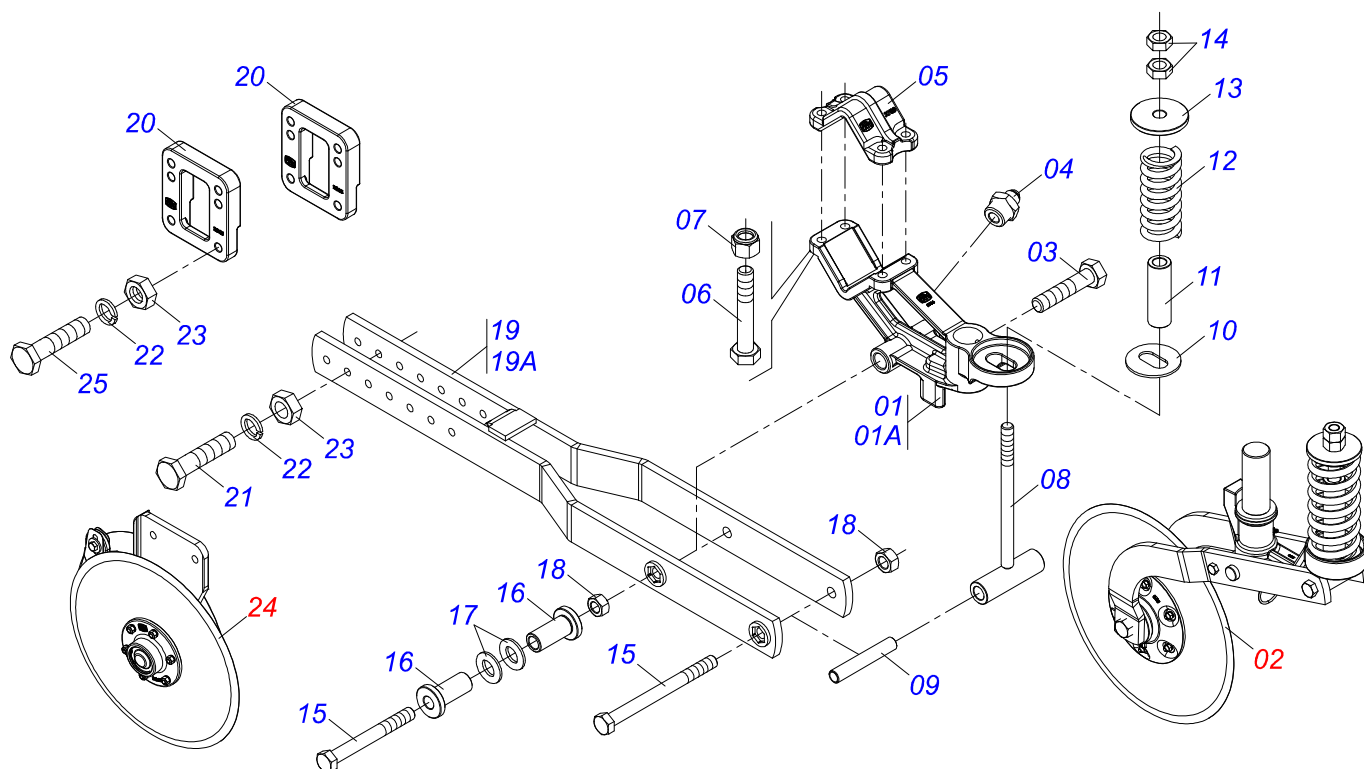


Item	Code	Description	See page	QT
01	0511057279	FIXER BOX SUPPORT FERTILIZER ROW		01
01A	0502012794	SHORT SUPPORT FERTILIZER ROW		01
02	0511057185	DISC BLADE 18" ASSY	91	01
03	0503011854	5/8" X 1-1/4" BOLT		02
04	0503010002	1800 GREASE FITTING		01
05	0502012789	FIXER SUPPORT FERTILIZER ROW		01
06	0503017960	5/8" X 3-12" BOLT		04
07	0503010811	5/8" UNF SELF ADJUSTING NUT		04
08	0521065997	ADJUSTMENT SPRING FERTILIZER ROW		01
09	0571019062	SLEEVE		01
10	0571019059	SUPPORT WASHER		01
11	0571019030	SLEEVE LIMITER COURSE SPRING		01
12	0503034134	COMPRESSION SPRING		01
13	0571019060	FLANGE WASHER		01
14	0503011254	7/8" HEX SELF ADJUSTING NUT		02
15	0521010066	3/4" X 8.12" BOLT		02
16	0571019061	SLEEVE ARM LINE		02
17	0511017232	FLAT WASHER		02
18	0503011255	3/4" LOCK NUT		02
19	0511057272	LH SHORT ARM ROW FERTILIZER		01
19A	0521065972	LH SHORT ARM ROW FERTILIZER		01
20	0502012815	DOUBLE-DISC SPACING PLATE		02
21	0503810479	BOLT		02
22	0503011440	SPRING WASHER		04
23	0503010060	1/2" NUT		04
24	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR		01
25	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02

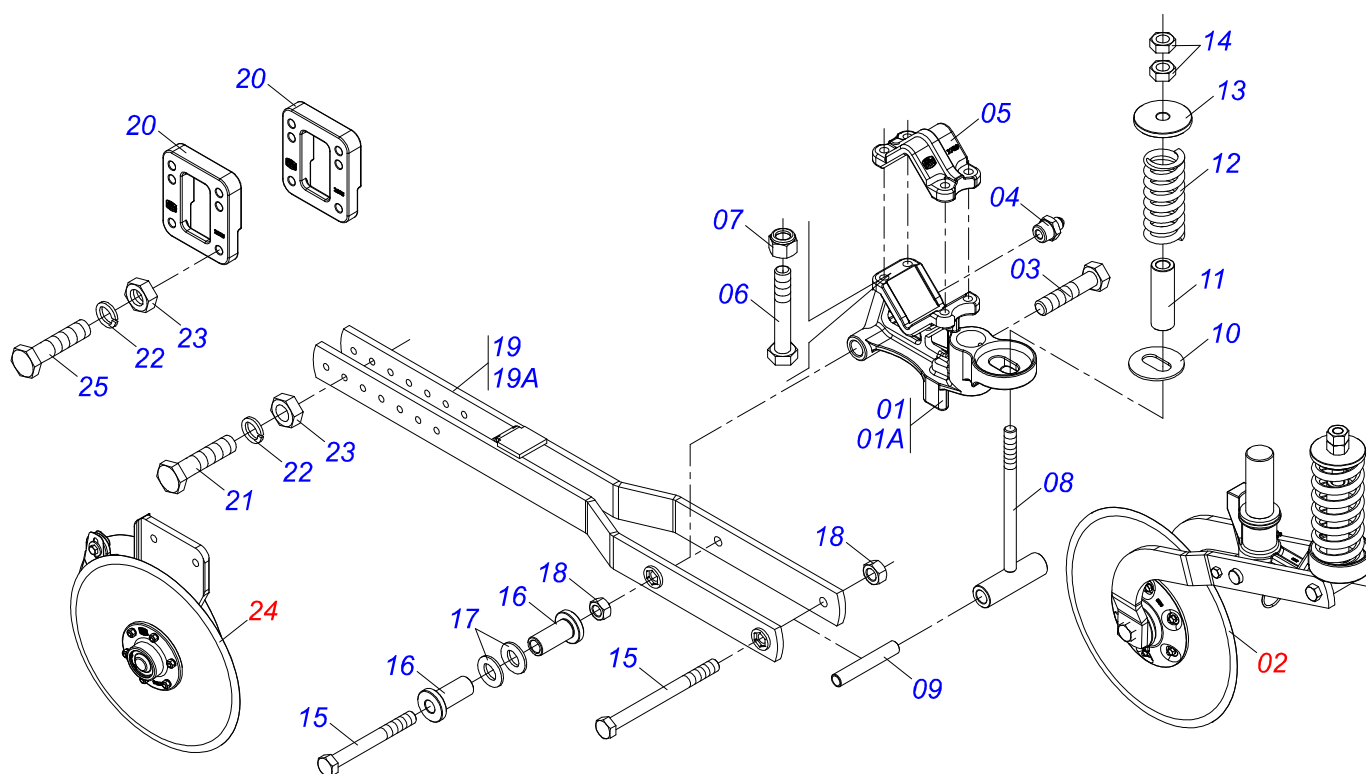


Item	Code	Description	See page	QT
01	0511057280	LARGER SUPPORT FIXER FERTILIZER ROW		01
01A	0502012795	SUPPORT LONG		01
02	0511057185	DISC BLADE 18" ASSY	91	01
03	0503011854	5/8" X 1-1/4" BOLT		02
04	0503010002	1800 GREASE FITTING		01
05	0502012789	FIXER SUPPORT FERTILIZER ROW		01
06	0503017960	5/8" X 3-12" BOLT		04
07	0503010811	5/8" UNF SELF ADJUSTING NUT		04
08	0521065997	ADJUSTMENT SPRING FERTILIZER ROW		01
09	0571019062	SLEEVE		01
10	0571019059	SUPPORT WASHER		01
11	0571019030	SLEEVE LIMITER COURSE SPRING		01
12	0503034134	COMPRESSION SPRING		01
13	0571019060	FLANGE WASHER		01
14	0503011254	7/8" HEX SELF ADJUSTING NUT		02
15	0521010066	3/4" X 8.12" BOLT		02
16	0571019061	SLEEVE ARM LINE		02
17	0511017232	FLAT WASHER		02
18	0503011255	3/4" LOCK NUT		02
19	0511057271	RH LONG ARM ROW FERTILIZER		01
19A	0521065973	RH LONG ARM ROW FERTILIZER		01
20	0502012815	DOUBLE-DISC SPACING PLATE		02
21	0503010479	BOLT		02
22	0503011440	SPRING WASHER		04
23	0503010060	1/2" NUT		04
24	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	92	01
25	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02

DISC BLADE 18" ASSY


0511057185

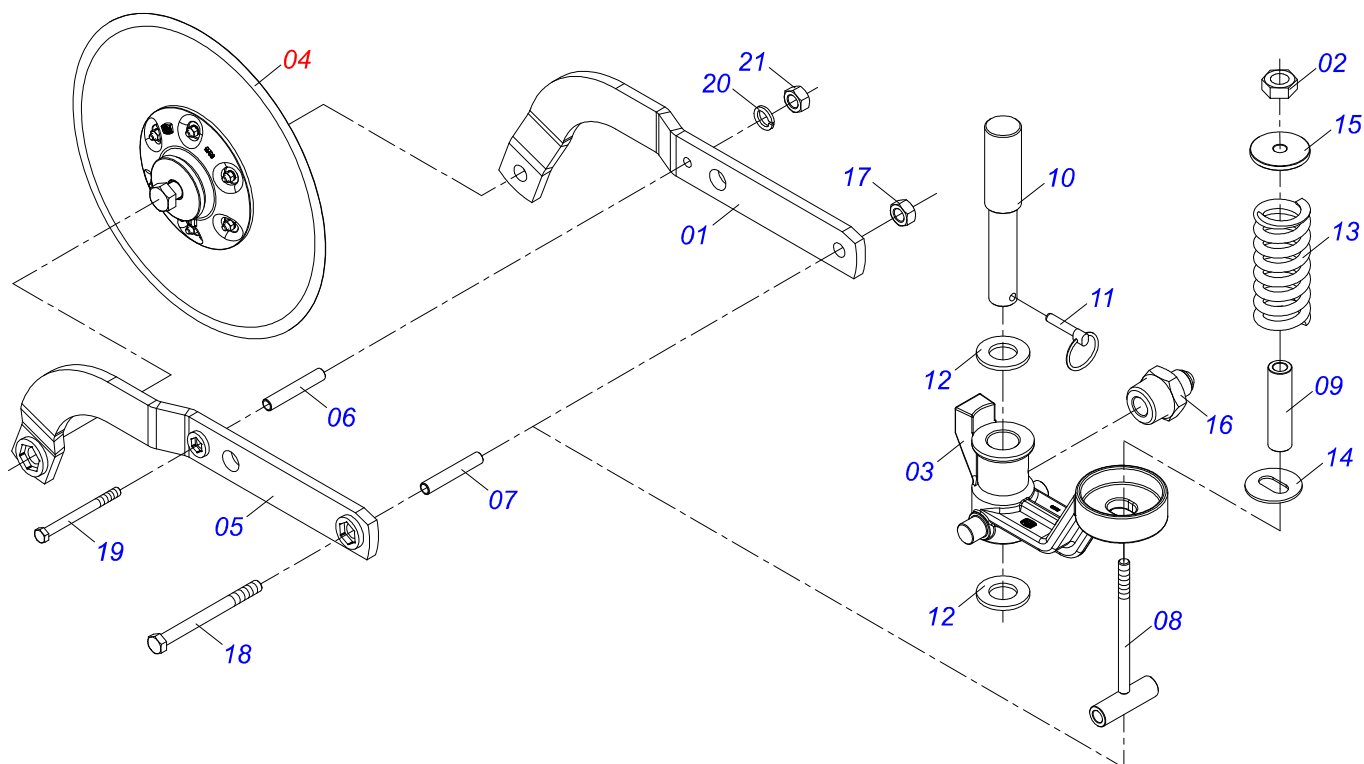


Item	Code	Description	See page	QT
01	0571018989	LH BLADE DISC ARM	01	
02	0503011254	7/8" HEX SELF ADJUSTING NUT	02	
03	0502012790	LOCK NUT	01	
04	0511056910	BOX WITH DISC CUT 18	01	
05	0521065978	RIGHT ARM WITH WASHER LOCK	01	
06	0571019035	SLEEVE SUPPORT ARM	01	
07	0521010452	SLEEVE	01	
08	0521065992	ADJUSTMENT SPRING	01	
09	0571019591	BLADE DISC ROD SLEEVE	01	
10	0571019033	FIXATION AXLE	01	
11	0503030430	7/16 X 2" PIN LOCK	01	
12	0502012813	FLANGE WASHER SPRING	02	
13	0503034135	COMPRESSION SPRING	01	
14	0571019032	SUPPORT WASHER	01	
15	0571019034	FLANGE WASHER AXLE	01	
16	0503010002	1800 GREASE FITTING	01	
17	0503011255	3/4" LOCK NUT	01	
18	0503013185	3/4" X 5-1/2" BOLT	01	
19	0503011411	1/2" X 5-1/2" BOLT	01	
20	0503010019	1/2" SPRING WASHER	01	
21	0503010060	1/2" NUT	01	

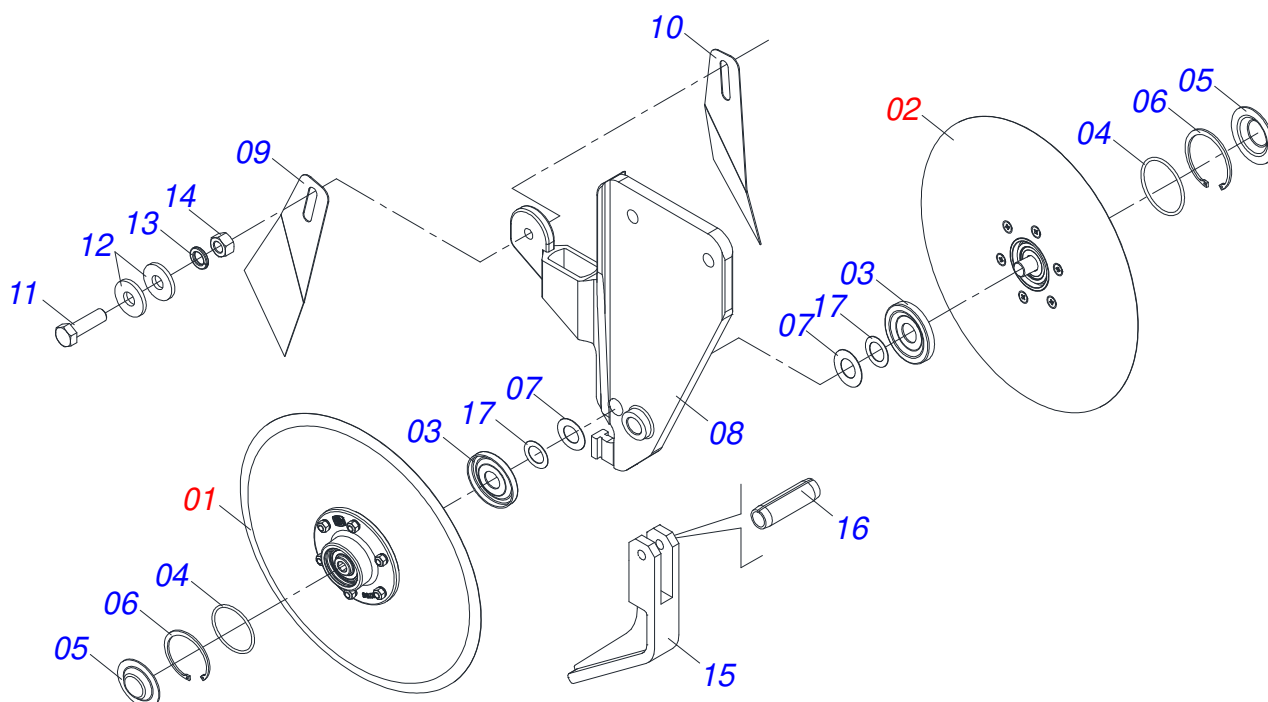


Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15		01
02	0511053172	LEFT LOW CUBE WITH DISC 15		01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010025	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

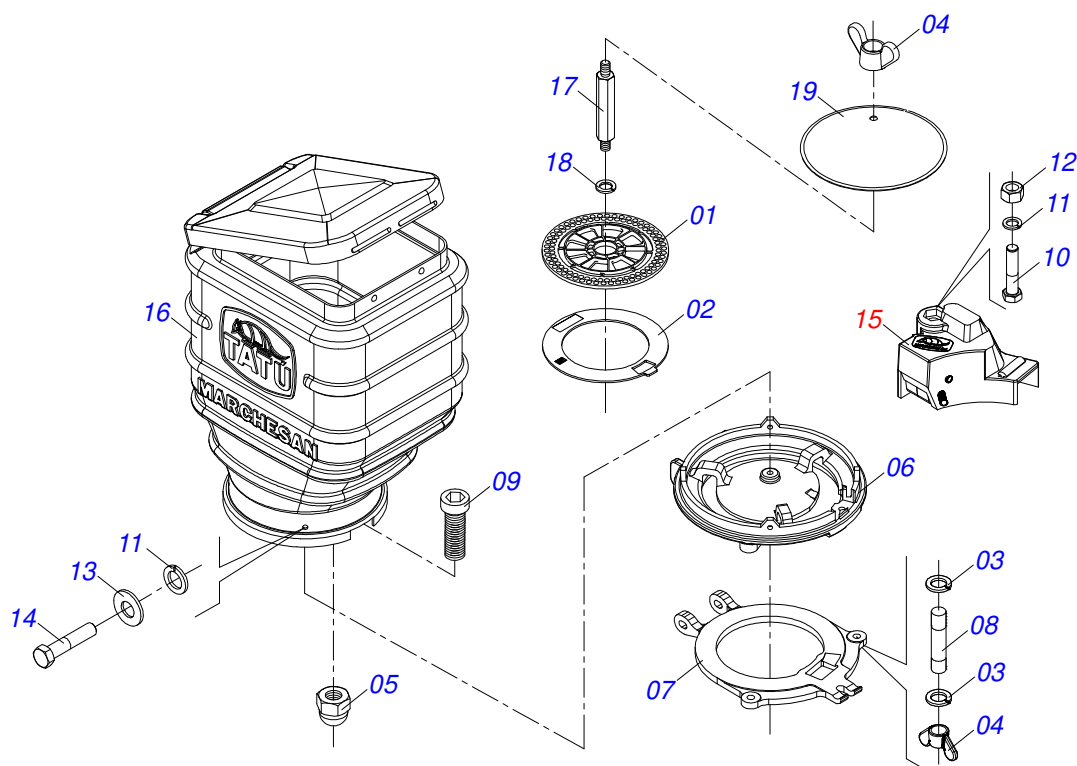

Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016219	RING TO SOYBEANS		01
03	0503010025	3/8" SPRING WASHER		04
04	0503010209	3/8" UNC BUTTERFLY NUT		03
05	0503016283	M8 NUT HEX		01
06	0502020693	SUPPORT SEED BOX		01
07	0502012721	SEED DISC LOWER TRAIL		01
08	0503030083	3/8" X 3/8" X 1.6" STUD		02
09	0503016282	ALLEN BOLT		01
10	0503010675	5/16" X 2.1/4" BOLT		01
11	0503010179	LOCK WASHER		05
12	0503010337	5/16" NUT		01
13	0501010694	FLAT WASHER		04
14	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		04
15	0501051094	ASSY SEED DISTRIBUTOR	94	01
16	0503031508	COVER GREEN BEAM SEED YELLOW		01
17	0571018536	HEX PRISONER		01
18	0501013518	FLAT WASHER		02
19	0503034131	DEFLECTOR		01

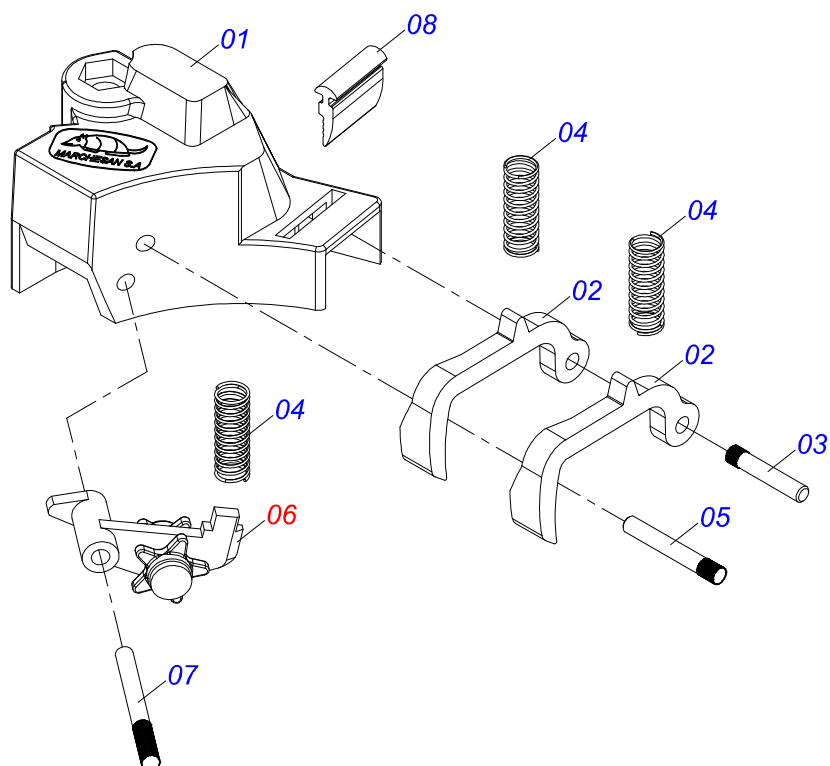

Item	Code	Description	See page	QT
01	0503030381	SEED DISTRIBUTOR BOX		01
02	0502010447	TRIGGER		02
03	0501013467	KEY AXLE		01
04	0503030378	0.4" X 1.1" X 0.03" SPRING		03
05	0501013466	KEY LIMITER AXLE		01
06	0501051119	DOUBLE PULLEY ROCKER'S		01
07	0501013468	ROCKER ARM AXLE, OF THE PULLEY		01
08	0503030377	SCRAPER		01

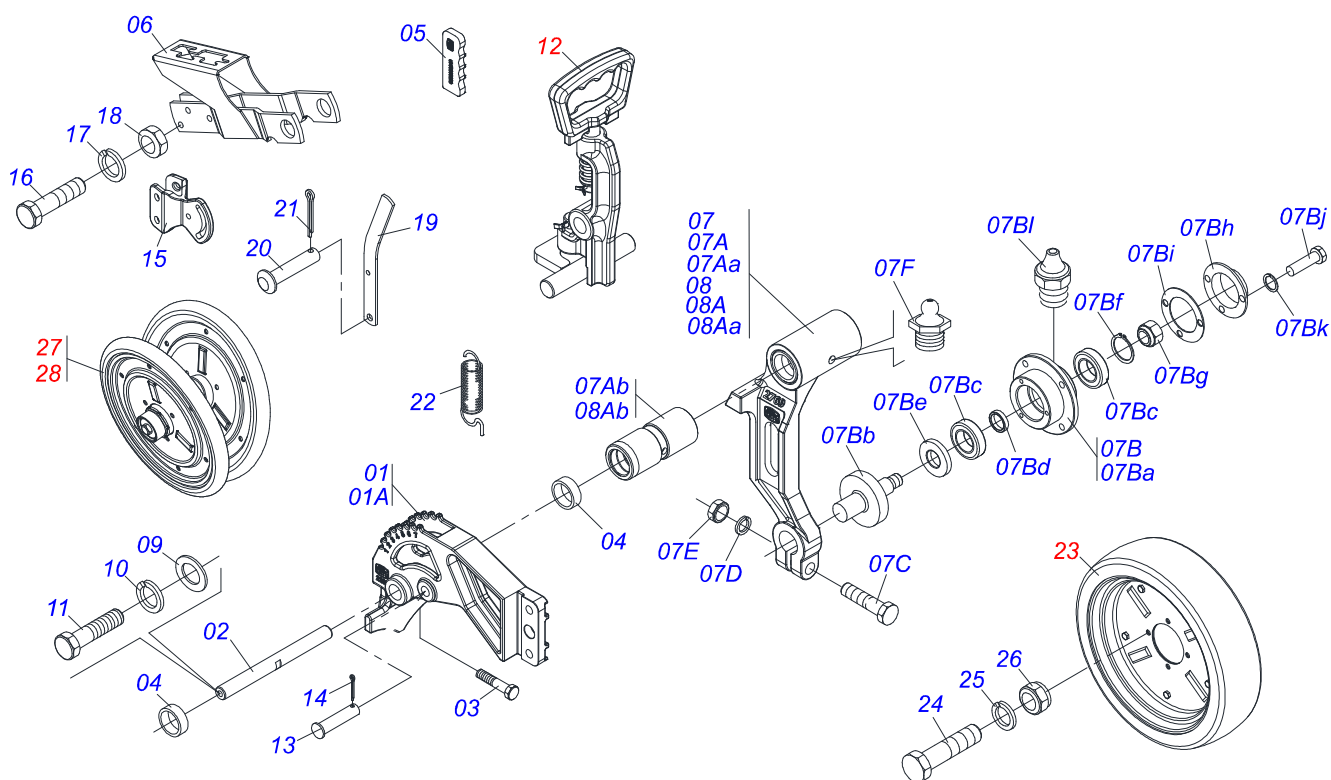


Item	Code	Description	See page	QT
01	0511056691	CONTROL DEPTH SUPPORT		01
01A	0502012282	DEPTH CONTROL SUPPORT		01
02	0571016886	DEPTH WHEEL AXLE		01
03	0503810256	SCREW		01
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
05	0503033942	COVER REGULATORY WHEEL		01
06	0521064073	REGULACION WHEEL COMPACTOR		01
07	0511056692	DEPTH WHEEL RIGHT ARM		01
07A	0501110796	DEPTH CONTROL RIGHT ARM		01
07Aa	0502012769	DEPTH WHEEL RIGHT ARM		01
07Ab	0571016883	GLOVE NYLON		01
07B	0501052627	ASSY DEPTH WHEEL BOX		02
07Ba	0502011907	DEPTH CONTROL WHEEL HUB		02
07Bb	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		02
07Bc	0503010269	6204 BALL BEARING		04
07Bd	0501013636	SPACING SLEEVE		02
07Be	0503010689	SEAL 00763-BR		02
07Bf	0503011105	SEAL RING		02
07Bg	0503010878	5/8" SELF ALIGNING NUT		02
07Bh	0521019178	COVER DEPTH		02
07bi	0503030757	2.9" X 2" X 0.02" JOINT		02
07Bj	0503014729	1/4" UNF X 1/2" BOLT		06
07Bk	0503011441	SPRING WASHER		06
07Bl	0503010691	1/4" GREASE FITTING		02
07C	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07D	0503011440	SPRING WASHER		02
07E	0503010060	1/2" NUT		02
07F	0503010002	1800 GREASE FITTING		02
08	0511056693	LH ARM DEPTH CONTROL WHEEL		01
08A	0501110797	ARM LEFT GLOVE WITH DEPTH CONTROL		01
08Aa	0502012770	DEPTH WHEEL LEFT ARM		01


PRESS WHEELS

0521045198


Item	Code	Description	See page	QT
08Ab	0571016883	GLOVE NYLON		01
09	0571017749	FLAT WASHER		02
10	0503011440	SPRING WASHER		02
11	0503010311	1/2" X 1-1/4" BOLT		02
12	0501052297	DEPTH WHEELS REGULATOR ASSY	96	01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010257	1/8" X 1" COTTERPIN		01
15	0502012116	PRESS WHEEL ADJUSTER		01
16	0503010849	3/8" X 1-1/2" BOLT		02
17	0503011443	3/8" SPRING WASHER		02
18	0503010026	3/8" NUT		02
19	0541016906	PRESS WHEELS REGULATOR BODY		01
20	0521010539	0.3" X 1.2" COUPLING SHAFT		01
21	0503010140	1/8" X 3/4" COTTERPIN		01
22	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
23	0501052538	DEPTH BAND WITH ARMS		02
24	0503010358	5/16" X 5/8" BOLT		08
25	0503010179	LOCK WASHER		08
26	0503013816	5/16" LOCKNUT		08
27	0511054333	COMPACT WHEEL RIGHT WITH BEARING	97	01
28	0511054334	COMPACT WHEEL LEFT WITH BEARING	98	01

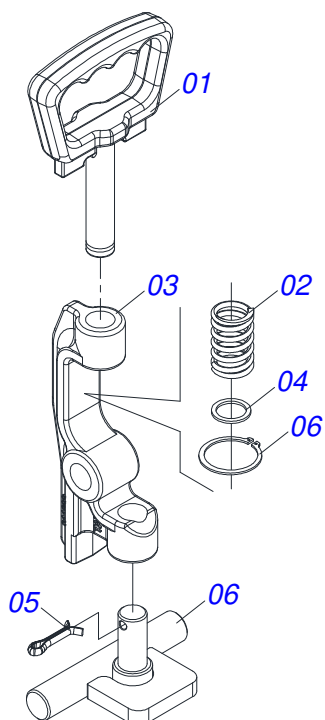


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	SEED SIST CONTROL DEPTH LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

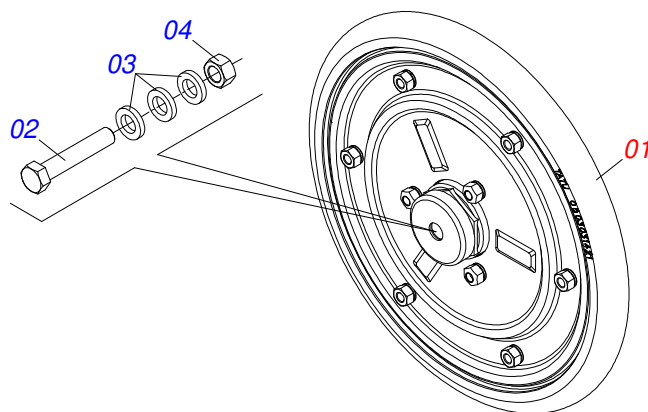


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	99	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

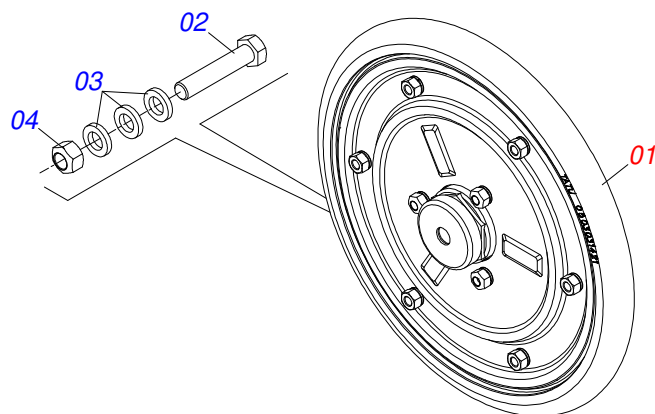


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	99	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

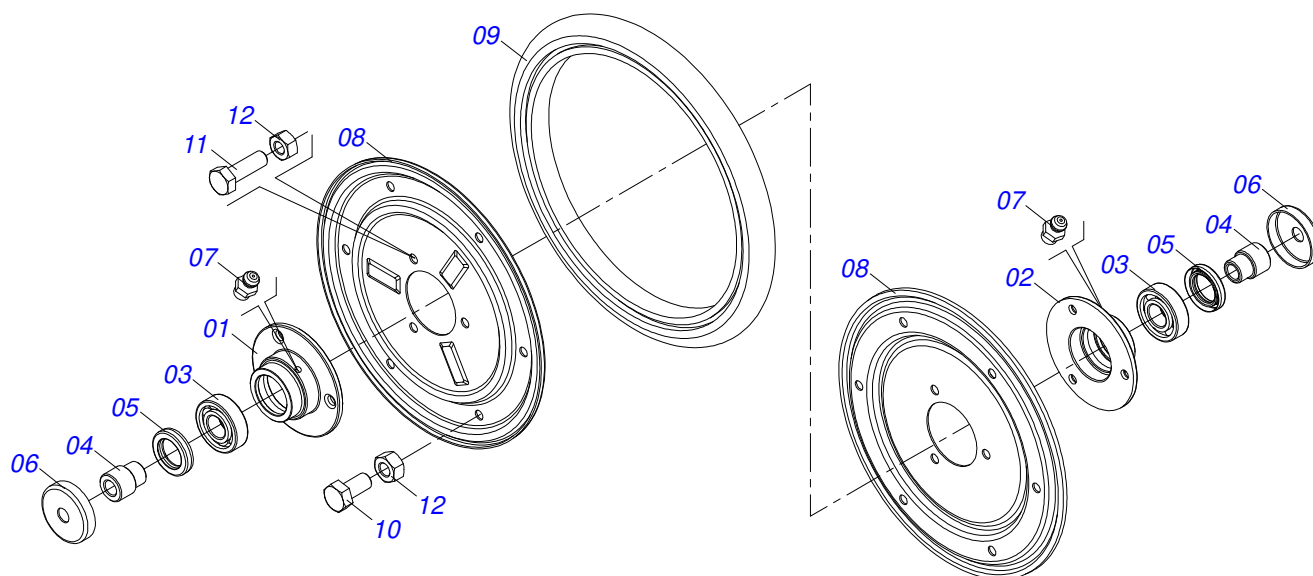


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

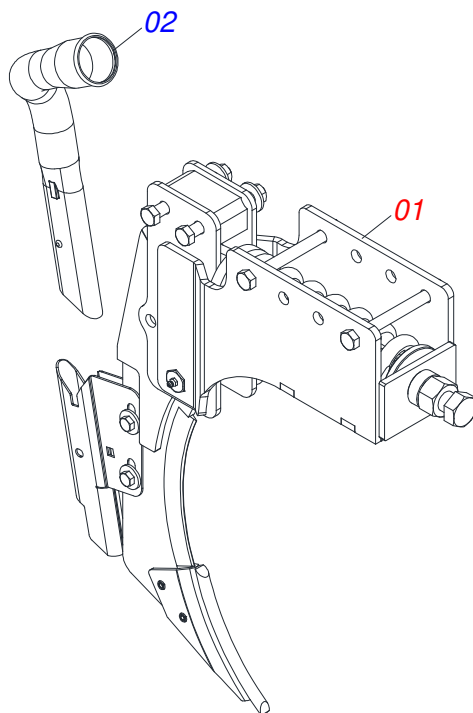


Item	Code	Description	See page	QT
01	0521053950	HDA AUTOMATIC DISARM	102	01
02	0581010082	FERTILIZER SOCKET RIGHT		01

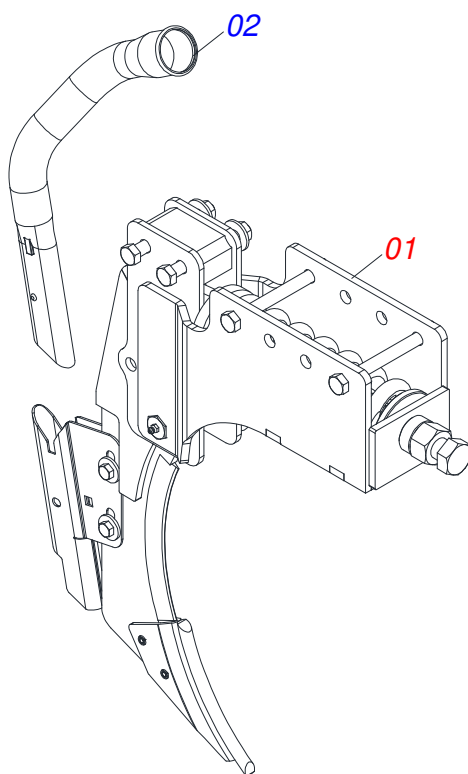


Item	Code	Description	See page	QT
01	0521053950	HDA AUTOMATIC DISARM	102	01
02	0581010083	FERTILIZER SOCKET LEFT		01

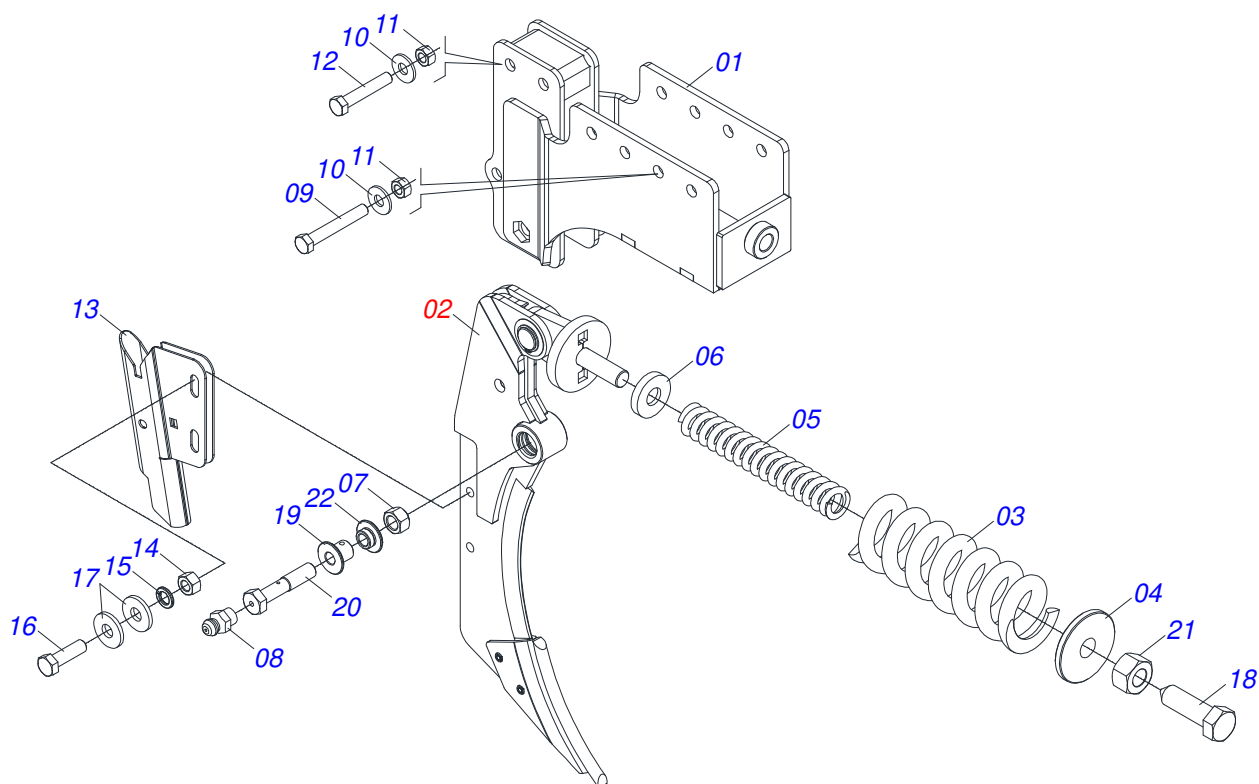

Item	Code	Description	See page	QT
01	0521067522	HDA SPRING BOX		01
02	0521053951	STEM	103	01
03	0503034106	80 X 230 X 16,50 HDA COMPRESSSION SPRING		01
04	0581012094	SUPPORT WASHER		01
05	0503033624	35 X 215 X 7,14 COMPRES SPRING		01
06	0571019462	SUPPORT GUIDE PRING		01
07	0503012795	5/8" HEX SELF ADJUSTING NUT		01
08	0503010691	1/4" GREASE FITTING		01
09	0503010384	1/2" X 5" BOLT		02
10	0511017302	FLAT WASHER		04
11	0503011336	1/2" HEX SELF ADJUSTING NUT		04
12	0503017874	BOLT 1/2 UNC		02
13	0571018541	BODY SOCKET FERTILIZER		01
14	0503010026	3/8" NUT		02
15	0503010025	3/8" SPRING WASHER		02
16	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
17	0501010984	FLAT WASHER		04
18	0503017058	HEX 7/8 UNC X 3 CSRT PC G.5 ZN		01
19	0581012084	ARTICULATED GLOVE		01
20	0581012082	SCREW		01
21	0503010417	7/8" NUT		01
22	0581012081	GLOVE		01

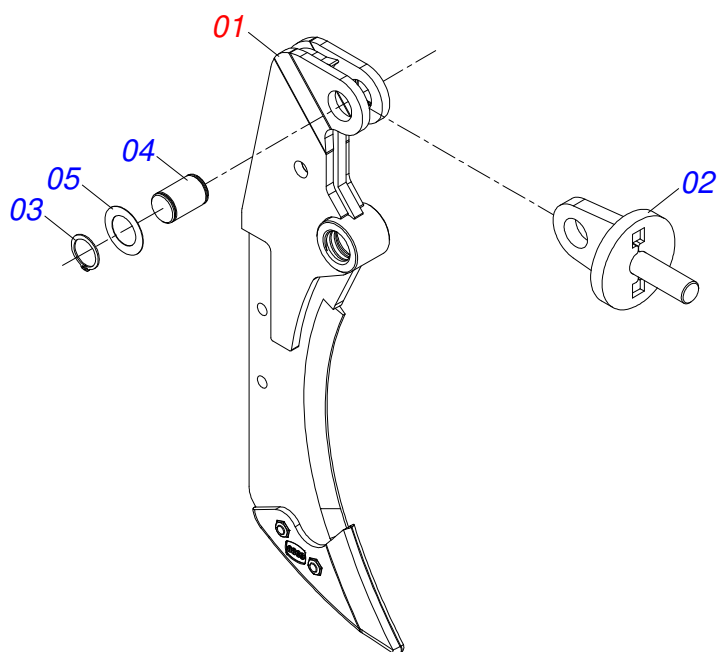

Item	Code	Description	See page	QT
01	0521053932	ROD WITH BEAK 0869		01
02	0521067065	FLANGE WASHER SPRING		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0581012092	AXLE FIXER		01
05	0521015818	FLAT WASHER		02

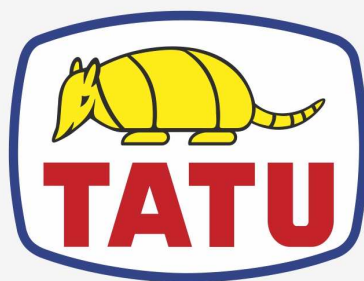

MARCHESAN

Technical Publications | Elaboration and Revision
JOSÉ DOMINGOS GASPARI

www.marchesan.com.br

