

SEEDERS

SDA FLEX

Code: 0501091533
Series: S-0116
Revision: 00
Date Revision: JANEIRO/2016

PARTS CATALOGUE



MARCHESAN



PRODUCTS

Code	Description	
0112080033	SDA FLEX 5510/23E175 S/DC	S-0116
0112080036	SDA FLEX 6720/29/27E175 S-0116	
0112080037	SDA FLEX 6720/29/27E175 S/DC S-0116	
0112080034	SDA FLEX 6720/29E175 S-0116	
0112080035	SDA FLEX 6720/29E175 S/DC S-0116	

ATTENTION: IMPORTANT


Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN


INDEX

0909091772	CHASSIS ASSY	1
0909090835	SEMI-ASSEMBLED FRAME	2
0909091773	DRAWBAR ASSY	3
0511050539	DRAWBAR ASSY	4
0501054428	ASSY HEADER EXTENSOR	5
0511058505	RH FRONT SEED/FERTILIZER BEAM	6
0511058506	LH FRONT SEED/FERTILIZER BEAM	7
0511058501	RH REAR SEED/FERTILIZER BEAM	8
0511058502	LH REAR SEED/FERTILIZER BEAM	9
0511058498	LH FRONT SEED/FERTILIZER BEAM	10
0511058503	SEED AND FERTILIZER CENTRAL BEAM	11
0511058500	RH FRONT SEED/FERTILIZER BEAM	12
0511058499	RH REAR SEED/FERTILIZER BEAM	13
0511058504	CENTER REAR SEED/FERTILIZER BEAM	14
0511050683	ASSY RIGHT TRANSMISSION DRIVER	15
0511058497	LH REAR SEED/FERTILIZER BEAM	15
0511058488	OUTPUT SIDE FERTILIZER DISTRIBUTOR	16
0511050523	BEARING SEED 39Z	17
0503032990	SEED DISTRIBUTOR HOPPER ASSY	18
0511050527	BEARING WITH 22Z GEAR	19
0521044560	HYDRAULIC CYLINDER	20
0511056574	RH CARRYNG-WHEELS ASSY	21
0511056573	LEFT CARRYING-WHEELS	22
0511056587	TIRE WHELL	23
0909090832	LH SEED FERTILIZER ROW ASSY	24
0909090833	RH SEED/FERTILIZER ROW ASSY	25
0521045171	SEED ROW RYGHT	26
0521045172	SEED ROW LEFT	27
0511051290	DEPTH CONTROL / COMPACTOR	28
0511051291	DEPTH CONTROL / COMPACTOR	29
0501055187	DEPTH WHEEL WITHOUT CUBE	30
0511056609	DDD 13X15 LEFT	31
0511056610	DDD 13X15 RYGHT	32
0521041741	DC DPL 18 ASSY	33
0909091778	TRANSMISSION	34
0511050397	FULL RIGHT EXCHANGE	35
0511050398	EXCHANGE FULL LEFT	36
0501054562	FERILIZER CHAIN TENSIONER ASSY	37
0511050652	CHAIN TENSIONER	38
0511040203	1.5" X 2.5" X 19" X 9" HYDRAULIC CYLINDER	39
0511056616	ASSY RIGHT WHEEL	40
0511056615	LEFT DEPTH CONTROL ASSY	41
0511054754	ROW MARK SET	42
0501054886	ROW MARKER DISC	43
0909091777	HYDRAULIC CIRCUIT	44
0511056604	WHEEL TIRE BOX WHEELED COMPLETE LARGER	45
0501057301	FLOW DIVIDING VALVE	46
0501053834	MALE QUICK COUPLER	47

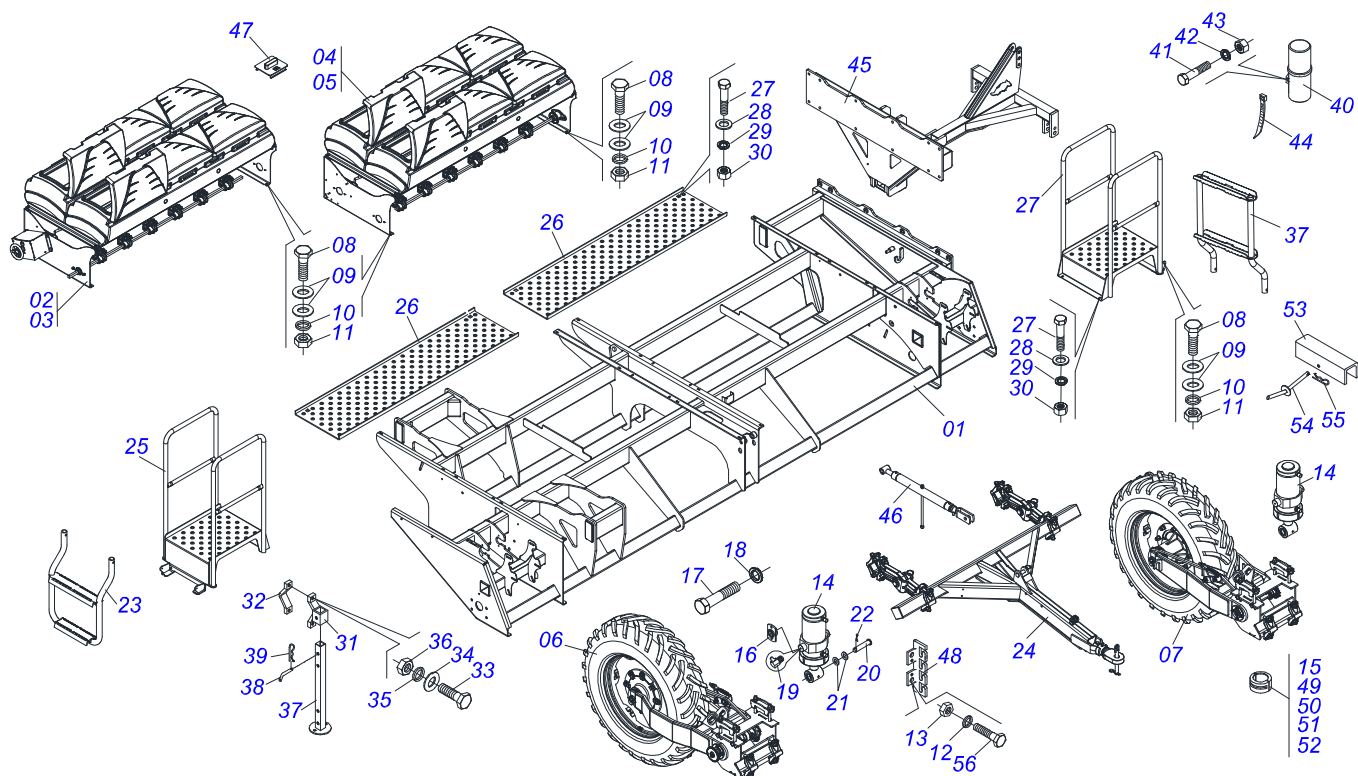


Item	Code	Description	See page	QT
01	0521065509	LONGITUDINAL TRANSPORT FRAME		01
02	0511056583	ASSEMBLY FERTILIZER SILO		01
03	0511056580	ASSEMBLY FERTILIZER SILO		01
04	0511056582	ASSEMBLY FERTILIZER SILO		01
05	0511056581	ASSEMBLY FERTILIZER SILO		01
06	0511056574	RH CARRYNG-WHEELS ASSY	21	01
07	0511056573	LEFT CARRYING-WHEELS	22	01
08	0503010849	3/8" X 1-1/2" BOLT		16
09	0501010984	10,50 X 27 X 3,00 FLAT WASHER		32
10	0503010025	3/8 SPRING WASHER		16
11	0503010026	3/8" NUT		16
12	0503010395	1/2" X 1-1/4" BOLT		02
13	0503010060	1/2 UNC G.5 ZN HEX NUT		02
14	0521044560	HYDRAULIC CYLINDER	20	02
15	0501047888	45 ROD STOP		02
16	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		04
17	0503010834	1/2 X 1 BOLT		08
18	0503010019	1/2" SPRING WASHER		08
19	0503010004	1890 GREASE FITTING		04
20	0531019171	1.25" X 7" COUPLING SHAFT		02
21	0501017779	32 X 60 X 4.75 FLAT WASHER		04
22	0503010523	1/4" X 2" SPLIT PIN		02
23	0511069636	LADDER		02
24	0511050539	DRAWBAR ASSY	4	01
25	0521061840	PLATFORM SIDE		02
26	0561017202	CENTER PLATFORM BODY		02
27	0501010096	3/8" X 2" BOLT		08
28	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
29	0503010025	3/8 SPRING WASHER		08
30	0503010026	3/8" NUT		08
31	0502011530	SUPPORT		02

Item	Code	Description	See page	QT
32	0502010175	HITCH CLAMP		02
33	0501011543	5/8" X 4" BOLT		04
34	0501012140	FLAT WASHER		04
35	0503010027	5/8 SPRING WASHER		04
36	0503010013	5/8 NUT		04
37	0511061835	PLOUGH SUPPORT		02
38	0501011075	PIN		02
39	0503030012	HITCH PIN CLIP		02
40	0503060100	INSTRUCTIONS MANUAL CANISTER		01
41	0503010358	5/16" X 5/8" BOLT		01
42	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
43	0503010337	5/16" NUT		01
44	0503010267	NYLON CLAMP		01
45	0511056689	LONGITUDINAL TRANSPORT ASSY		01
46	0501054428	ASSY HEADER EXTENSOR	5	01
47	0503032624	FERTILIZER HOPPER GUTTER		17
48	0541011767	HOSE FIXATION		01
49	0501047895	25 ROD STOP		02
50	0501047885	30 ROD STOP		02
51	0501047886	35 ROD STOP		02
52	0501047887	40 ROD STOP		02
53	0521013022	TRANSPORT LOCK		02
54	0501068994	8,30 X 78 LOCK PIN		02
55	0503030168	HITCH PIN CLIP		02
56	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
57	0503010025	3/8 SPRING WASHER		02
58	0503010026	3/8" NUT		02

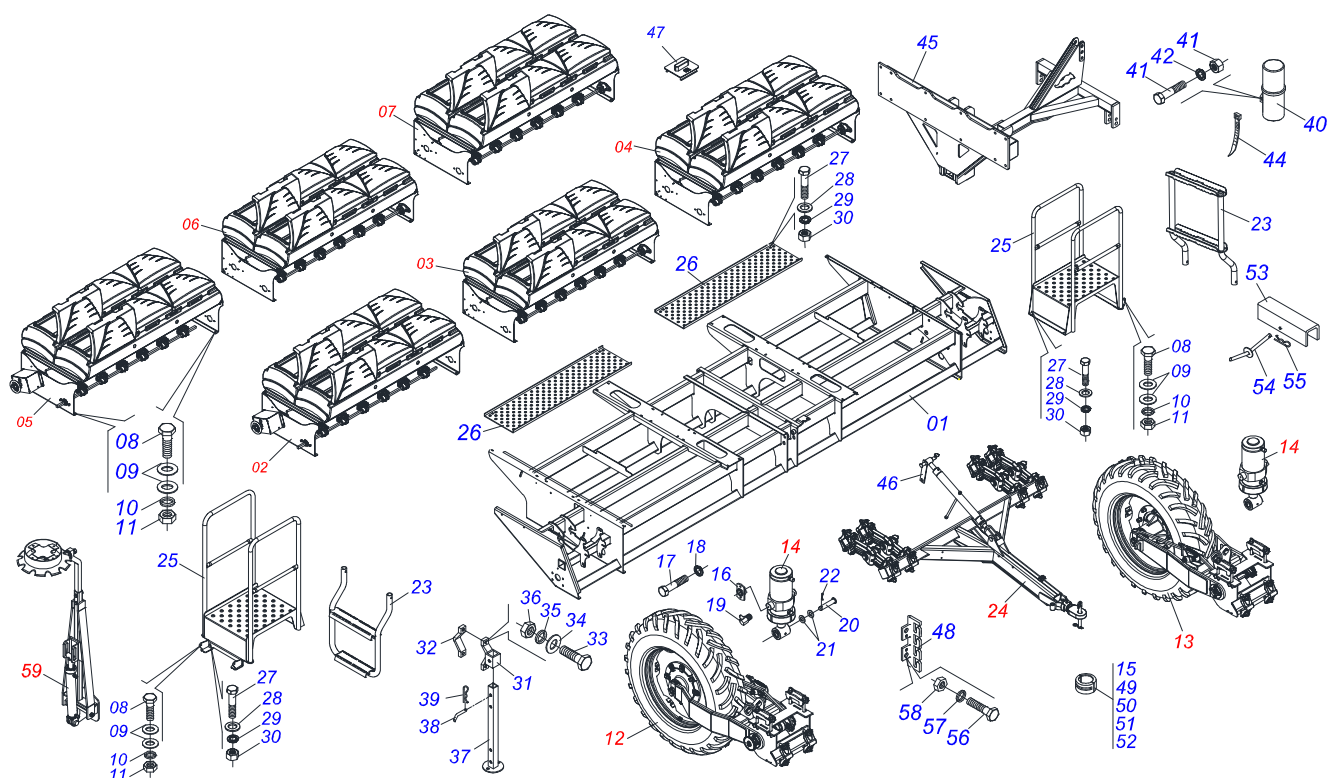


Item	Code	Description	See page	QT
01	0521062577	FRAME		01
02	0511058500	RH FRONT SEED/FERTILIZER BEAM	12	01
03	0511058503	SEED AND FERTILIZER CENTRAL BEAM	11	01
04	0511058498	LH FRONT SEED/FERTILIZER BEAM	10	01
05	0511058499	RH REAR SEED/FERTILIZER BEAM	13	01
06	0511058504	CENTER REAR SEED/FERTILIZER BEAM	14	01
07	0511058497	LH REAR SEED/FERTILIZER BEAM	15	01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		24
09	0501010984	10,50 X 27 X 3,00 FLAT WASHER		48
10	0503010025	3/8 SPRING WASHER		24
11	0503010026	3/8" NUT		24
12	0511056616	ASSY RIGHT WHEEL	40	01
13	0511056615	LEFT DEPTH CONTROL ASSY	41	
14	0521044560	HYDRAULIC CYLINDER	20	02
15	0501047888	45 ROD STOP		02
16	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		04
17	0503010834	1/2 X 1 BOLT		08
18	0503010019	1/2" SPRING WASHER		08
19	0503010004	1890 GREASE FITTING		04
20	0531019171	1.25" X 7" COUPLING SHAFT		02
21	0501017779	32 X 60 X 4.75 FLAT WASHER		04
22	0503010523	1/4" X 2" SPLIT PIN		02
23	0511069636	LADDER		02
24	0511051281	DRAWBAR ASSY		01
25	0521062583	PLATFORM SIDE		02
26	0561017202	CENTER PLATFORM BODY		02
27	0503011236	3/8" X 2" BOLT		08
28	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
29	0503010025	3/8 SPRING WASHER		08
30	0503010026	3/8" NUT		08
31	0502011530	SUPPORT		02


Item	Code	Description	See page	QT
32	0502010175	HITCH CLAMP		02
33	0501011543	5/8" X 4" BOLT		04
34	0501012140	FLAT WASHER		04
35	0503010027	5/8 SPRING WASHER		04
36	0503010013	5/8 NUT		04
37	0511061835	PLOUGH SUPPORT		02
38	0501011075	PIN		02
39	0503030012	HITCH PIN CLIP		02
40	0503060100	INSTRUCTIONS MANUAL CANISTER		01
41	0503010358	5/16" X 5/8" BOLT		01
42	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
43	0503010337	5/16" NUT		01
44	0503010267	NYLON CLAMP		01
45	0511056689	LONGITUDINAL TRANSPORT ASSY		01
46	0501054428	ASSY HEADER EXTENSOR	5	01
47	0503032624	FERTILIZER HOPPER GUTTER		17
48	0541011767	HOSE FIXATION		01
49	0501047895	25 ROD STOP		02
50	0501047885	30 ROD STOP		02
51	0501047886	35 ROD STOP		02
52	0501047887	40 ROD STOP		02
53	0521013022	TRANSPORT LOCK		02
54	0501068994	8,30 X 78 LOCK PIN		02
55	0503030168	HITCH PIN CLIP		02
56	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
57	0503010025	3/8 SPRING WASHER		02
58	0503010026	3/8" NUT		02
59	0511054754	ROW MARK SET	42	

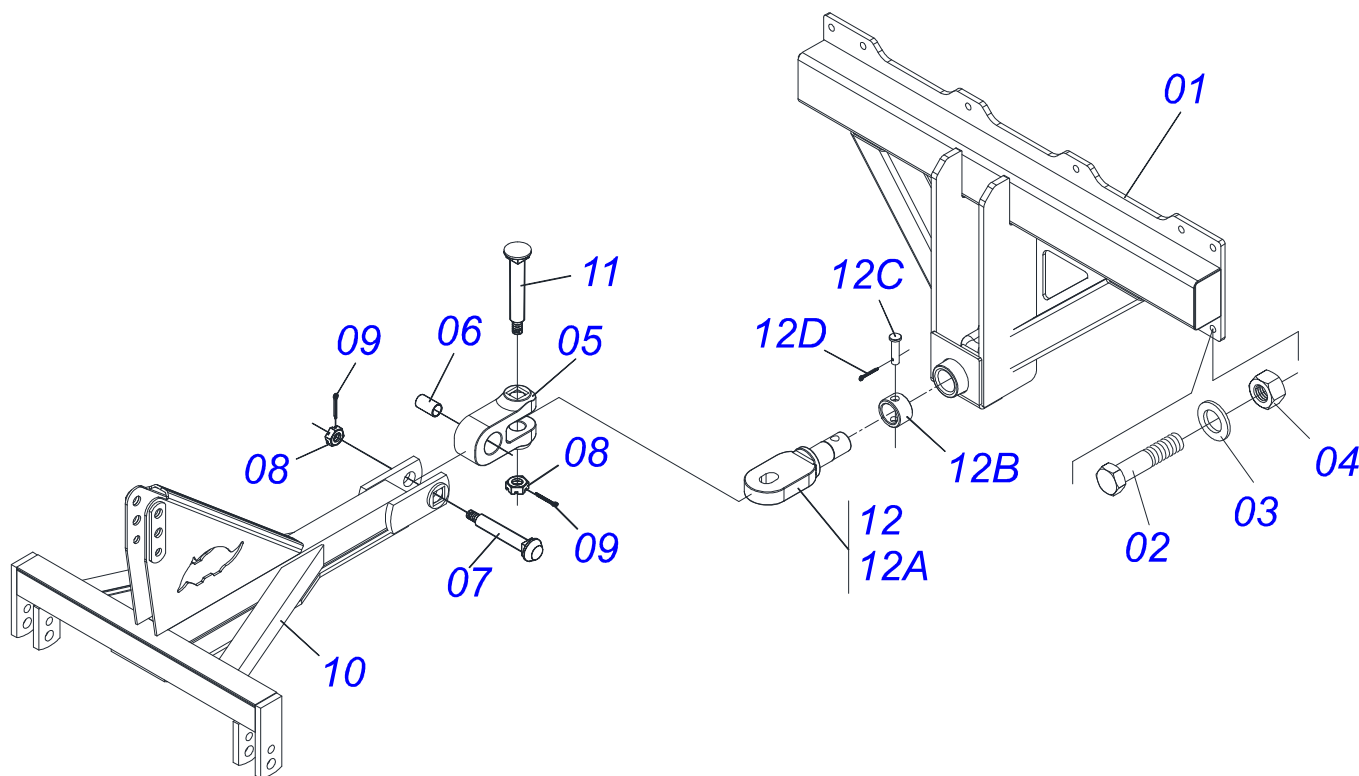


Item	Code	Description	See page	QT
01	0521065505	LONGITUDINAL CABLE SUPPORT		01
02	0501010827	3/4" X 2-3/4" BOLT		12
03	0501010322	FLAT WASHER		12
04	0503011255	3/4" LOCK NUT		12
05	0502040733	TRACTOR HITCH		01
06	0511018782	2.4" X 1.6" X 3" BUSHING		01
07	0521014542	1-1/2" X 5.8" COUPLING SHAFT		01
08	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		02
09	0503010010	1/4" X 2.1/2" COTTERPIN		02
10	0501068348	LONGITUDINAL TRANSPORT DRAWBAR		01
11	0521012545	COUPLING SHAFT		01
12	0501051160	TRACTOR HITCH PIN		01
12A	0502040556	HITCH TURNER		01
12B	0521010681	BUSHING COUPLING BODY		01
12C	0521010639	COUPLING SHAFT		01
12D	0503010571	1/4" X 1.1/2 COTTERPIN		01

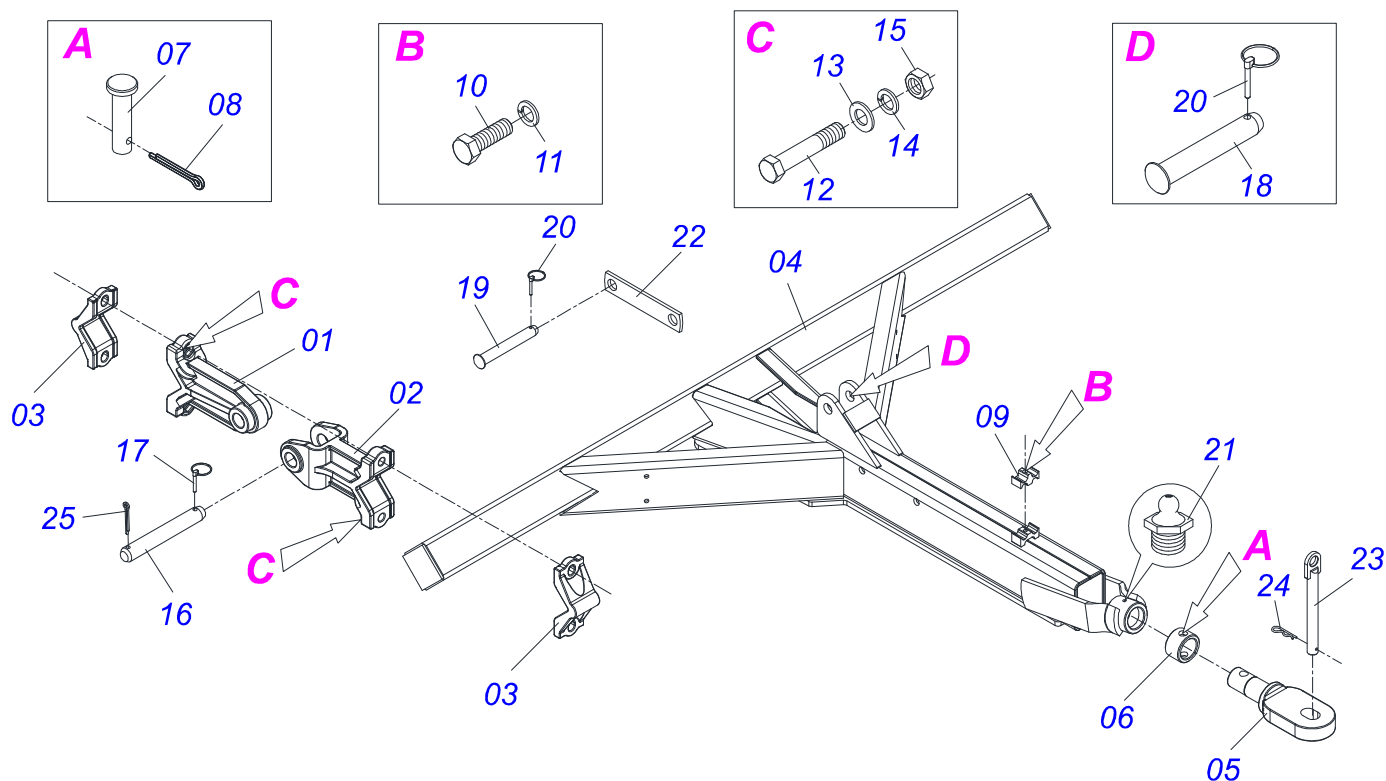

Item	Code	Description	See page
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	02
02	0502012328	DRAWBAR SUPPORT FRONT FIXATION	02
03	0502012330	SUPPORT FIXER PIVOT	04
04	0511064808	DRAWBAR	01
05	0502040556	HITCH TURNER	01
06	0521010681	BUSHING COUPLING BODY	01
07	0521010639	COUPLING SHAFT	01
08	0503010571	1/4" X 1.1/2 COTTERPIN	01
09	0502010477	HOSE CLAMP	01
10	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01
11	0503010025	3/8 SPRING WASHER	01
12	0503011084	3/4" X 5" BOLT	08
13	0501010322	FLAT WASHER	08
14	0503010023	3/4" SPRING WASHER	08
15	0503010014	3/4" HEX NUT	08
16	0561014393	COUPLING SHAFT	02
17	0503030119	LOCK PIN	02
18	0521010578	COUPLING SHAFT	01
19	0521010588	0.9" X 7.0" COUPLING SHAFT	01
20	0503030085	LOCK PIN	02
21	0503010002	1800 GREASE FITTING	01
22	0531015979	DRAWBAR LOCK	01
23	0501068989	COUPLING SHAFT	01
24	0503031035	HITCH PIN CLIP	01
25	0503010038	3/16 X 2 COTTERPIN	01

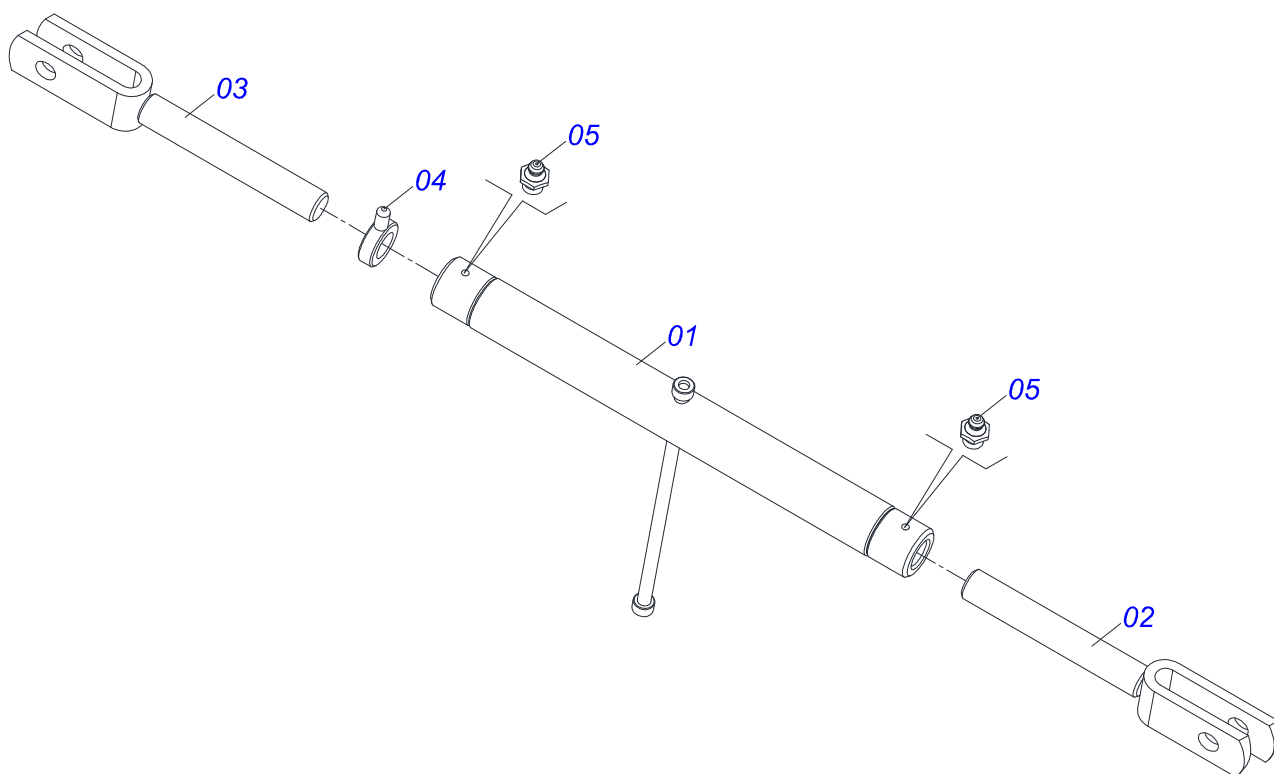

Item	Code	Description	See page	QT
01	0501067353	508 TURNBUCKLE		01
02	0511062887	RIGHT TURNBUCKLE		01
03	0511062888	LH TURNBUCKLE		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

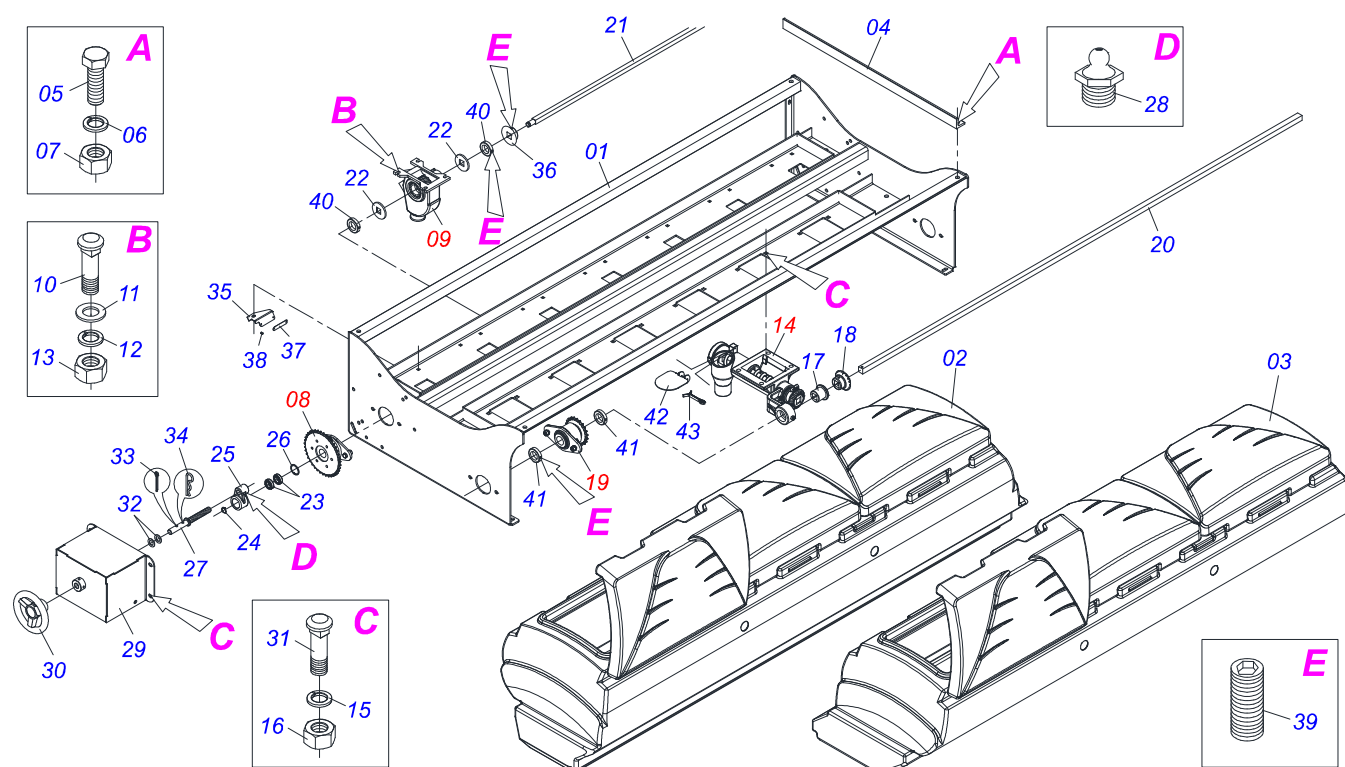


Item	Code	Description	See page	QT
001	0521061796	SEED/ FERTILIZER BEAM SUPPORT		01
002	0503061901	REAR SEED/FERTILIZER BEAM ASSY		01
003	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		01
004	0561017043	ANGLE BAR		02
005	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
006	0503011440	SPRING WASHER		04
007	0503010060	1/2 UNC G.5 ZN HEX NUT		04
008	0511050523	BEARING SEED 39Z	17	01
009	0503032990	SEED DISTRIBUTOR HOPPER ASSY	18	07
010	0503011953	5/16" X 1" BOLT		28
011	0501010694	FLAT WASHER		28
012	0503010179	LOCK WASHER 5/16 ZN 1K01528		28
013	0503010337	5/16" NUT		28
014	0511058488	OUTPUT SIDE FERTILIZER DISTRIBUTOR	16	06
015	0503010025	3/8 SPRING WASHER		28
016	0503010026	3/8" NUT		28
017	0503030275	AGRICULTURAL BEARING		06
018	0502011412	18Z CONICAL GEAR		06
019	0511050527	BEARING WITH 22Z GEAR	19	01
020	0571017645	FERTILIZER AXLE		01
021	0571017644	SEED AXLE		01
022	0541015361	FLAT WASHER	14	
023	0503012882	BEARING		02
024	0503012104	501015 CLAMPING RING (FOR AXLE)		01
025	0502012325	SEED REGULATOR BEARING		01
026	0503011945	503050 CLAMPING RING (FOR AXLE)		01
027	0541015305	HANDLE SPINDLE		01
028	0503010002	1800 GREASE FITTING		01
029	0521061856	HANDLE BOX FIXER WITH BUSHING		01
030	0551019597	SEED REGULATION STEERING WHEEL		01
031	0501011643	3/8 X 1"BOLT		28



RH FRONT SEED/FERTILIZER BEAM

0511058505

Item	Code	Description	See page	QT
032	0511015098	FLAT WASHER		02
033	0503010523	1/4" X 2" SPLIT PIN		01
034	0503031035	HITCH PIN CLIP		01
035	0561017360	SEED SCALE SUPPORT		01
036	0571017641	LARGER DOSER		01
037	0503030886	SCALE DOSER		01
038	0503010001	3.2 X 5.5 RIVET		02
039	0503017021	M8 X 0.5" BOLT		17
040	0571017642	LATCH GLOVE BOX		14
041	0571017643	AXLE FERTILIZER LOCK SLEVE		02
042	0571010590	FERTILIZER SIDE COVER		06
043	0503010257	1/8" X 1" COTTERPIN		06

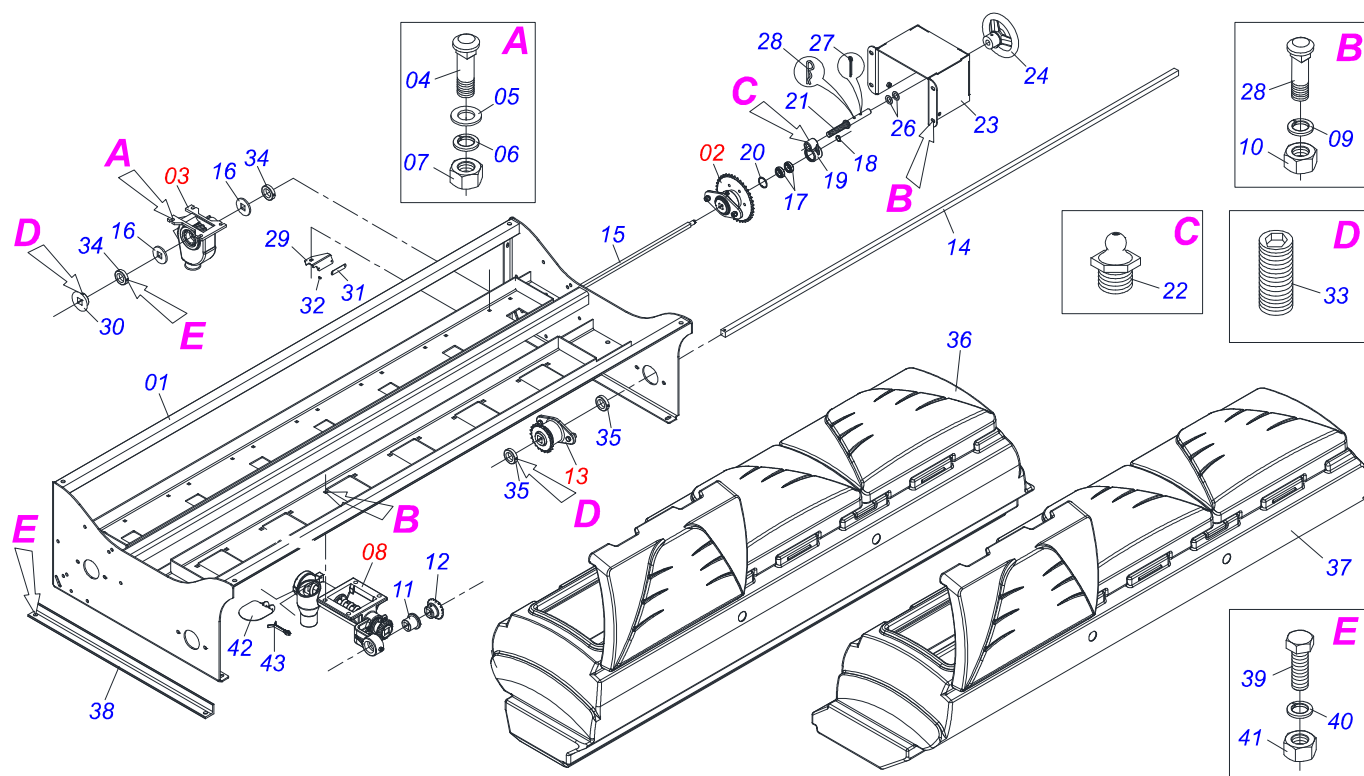


Item	Code	Description	See page	QT
001	0521061796	SEED/ FERTILIZER BEAM SUPPORT		01
002	0511050523	BEARING SEED 39Z	17	01
003	0503032990	SEED DISTRIBUTOR HOPPER ASSY	18	07
004	0503011953	5/16" X 1" BOLT		28
005	0501010694	FLAT WASHER		28
006	0503010179	LOCK WASHER 5/16 ZN 1K01528		28
007	0503010337	5/16" NUT		28
008	0511058488	OUTPUT SIDE FERTILIZER DISTRIBUTOR	16	06
009	0503010025	3/8 SPRING WASHER		28
010	0503010026	3/8" NUT		28
011	0503030275	AGRICULTURAL BEARING		06
012	0502011412	18Z CONICAL GEAR		06
013	0511050527	BEARING WITH 22Z GEAR	19	01
014	0571017645	FERTILIZER AXLE		01
015	0571017644	SEED AXLE		01
016	0541015361	FLAT WASHER		14
017	0503012882	BEARING		02
018	0503012104	501015 CLAMPING RING (FOR AXLE)		01
019	0502012325	SEED REGULATOR BEARING		01
020	0503011945	503050 CLAMPING RING (FOR AXLE)		01
021	0541015305	HANDLE SPINDLE		01
022	0503010002	1800 GREASE FITTING		01
023	0521061856	HANDLE BOX FIXER WITH BUSHING		01
024	0551019597	SEED REGULATION STEERING WHEEL		01
025	0501011643	3/8 X 1"BOLT		28
026	0511015098	FLAT WASHER		02
027	0503010523	1/4" X 2" SPLIT PIN		01
028	0503031035	HITCH PIN CLIP		01
029	0561017360	SEED SCALE SUPPORT		01
030	0571017641	LARGER DOSER		01
031	0503030886	SCALE DOSER		01

LH FRONT SEED/FERTILIZER BEAM

0511058506

Item	Code	Description	See page	QT
032	0503010001	3.2 X 5.5 RIVET		02
033	0503017021	M8 X 0.5" BOLT		17
034	0571017642	LATCH GLOVE BOX		14
035	0571017643	AXLE FERTILIZER LOCK SLEVE		02
036	0503061901	REAR SEED/FERTILIZER BEAM ASSY		01
037	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		01
038	0561017043	ANGLE BAR		02
039	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
040	0503011440	SPRING WASHER		04
041	0503010060	1/2 UNC G.5 ZN HEX NUT		04
042	0571010590	FERTILIZER SIDE COVER		06
043	0503010257	1/8" X 1" COTTERPIN		06

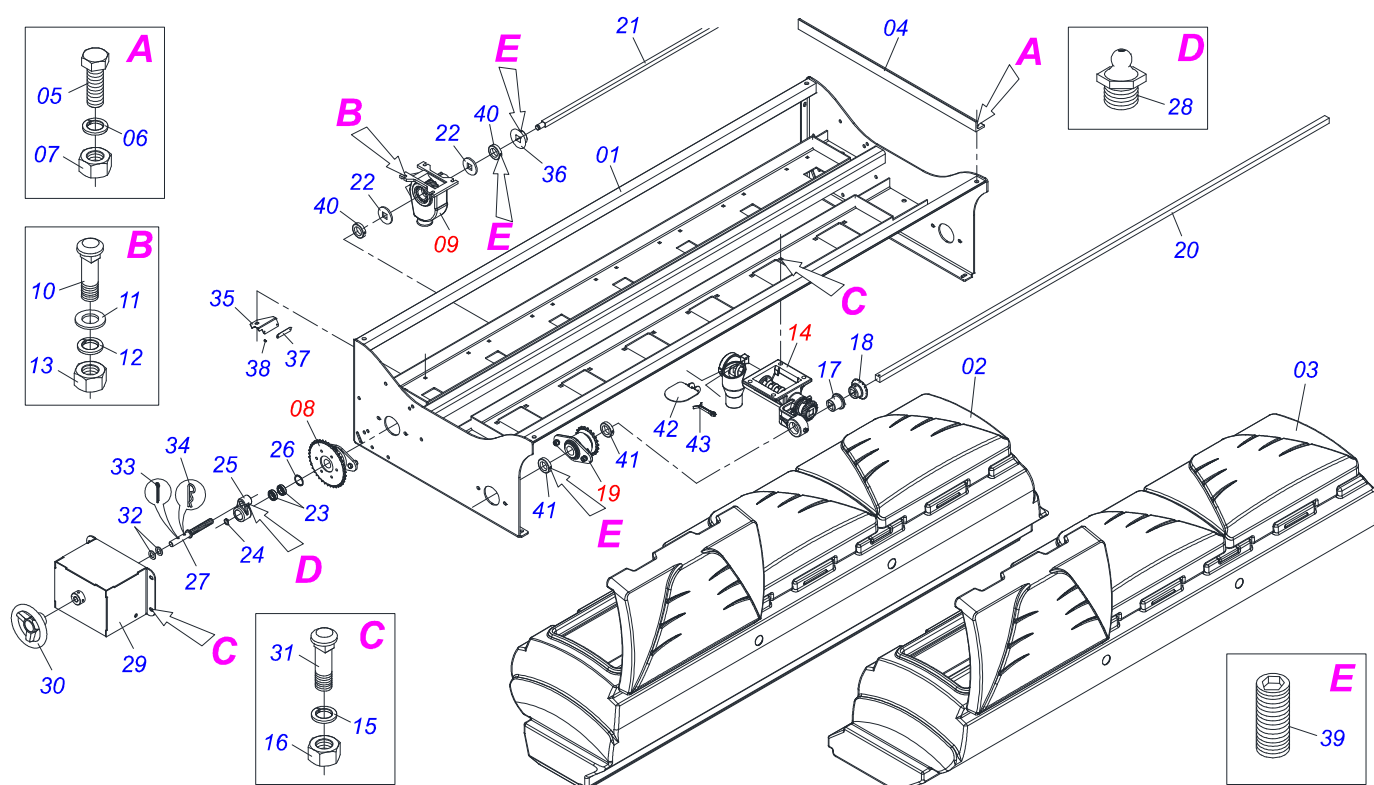


Item	Code	Description	See page	QT
001	0521061796	SEED/ FERTILIZER BEAM SUPPORT		01
002	0503061901	REAR SEED/FERTILIZER BEAM ASSY		01
003	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		01
004	0561017043	ANGLE BAR		02
005	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
006	0503011440	SPRING WASHER		04
007	0503010060	1/2 UNC G.5 ZN HEX NUT		04
008	0511050523	BEARING SEED 39Z	17	01
009	0503032990	SEED DISTRIBUTOR HOPPER ASSY	18	07
010	0503011953	5/16" X 1" BOLT		28
011	0501010694	FLAT WASHER		28
012	0503010179	LOCK WASHER 5/16 ZN 1K01528		28
013	0503010337	5/16" NUT		28
014	0511058488	OUTPUT SIDE FERTILIZER DISTRIBUTOR	16	06
015	0503010025	3/8 SPRING WASHER		28
016	0503010026	3/8" NUT		28
017	0503030275	AGRICULTURAL BEARING		06
018	0502011412	18Z CONICAL GEAR		06
019	0511050527	BEARING WITH 22Z GEAR	19	01
020	0571017645	FERTILIZER AXLE		01
021	0571017644	SEED AXLE		01
022	0541015361	FLAT WASHER	14	
023	0503012882	BEARING		02
024	0503012104	501015 CLAMPING RING (FOR AXLE)		01
025	0502012325	SEED REGULATOR BEARING		01
026	0503011945	503050 CLAMPING RING (FOR AXLE)		01
027	0541015305	HANDLE SPINDLE		01
028	0503010002	1800 GREASE FITTING		01
029	0521061856	HANDLE BOX FIXER WITH BUSHING		01
030	0551019597	SEED REGULATION STEERING WHEEL		01
031	0501011643	3/8 X 1" BOLT		28



RH REAR SEED/FERTILIZER BEAM


0511058501

Item	Code	Description	See page	QT
032	0511015098	FLAT WASHER		02
033	0503010523	1/4" X 2" SPLIT PIN		01
034	0503031035	HITCH PIN CLIP		01
035	0561017360	SEED SCALE SUPPORT		01
036	0571017641	LARGER DOSER		01
037	0503030886	SCALE DOSER		01
038	0503010001	3.2 X 5.5 RIVET		02
039	0503017021	M8 X 0.5" BOLT		17
040	0571017642	LATCH GLOVE BOX		14
041	0571017643	AXLE FERTILIZER LOCK SLEVE		02
042	0571010590	FERTILIZER SIDE COVER		06
043	0503010257	1/8" X 1" COTTERPIN		06

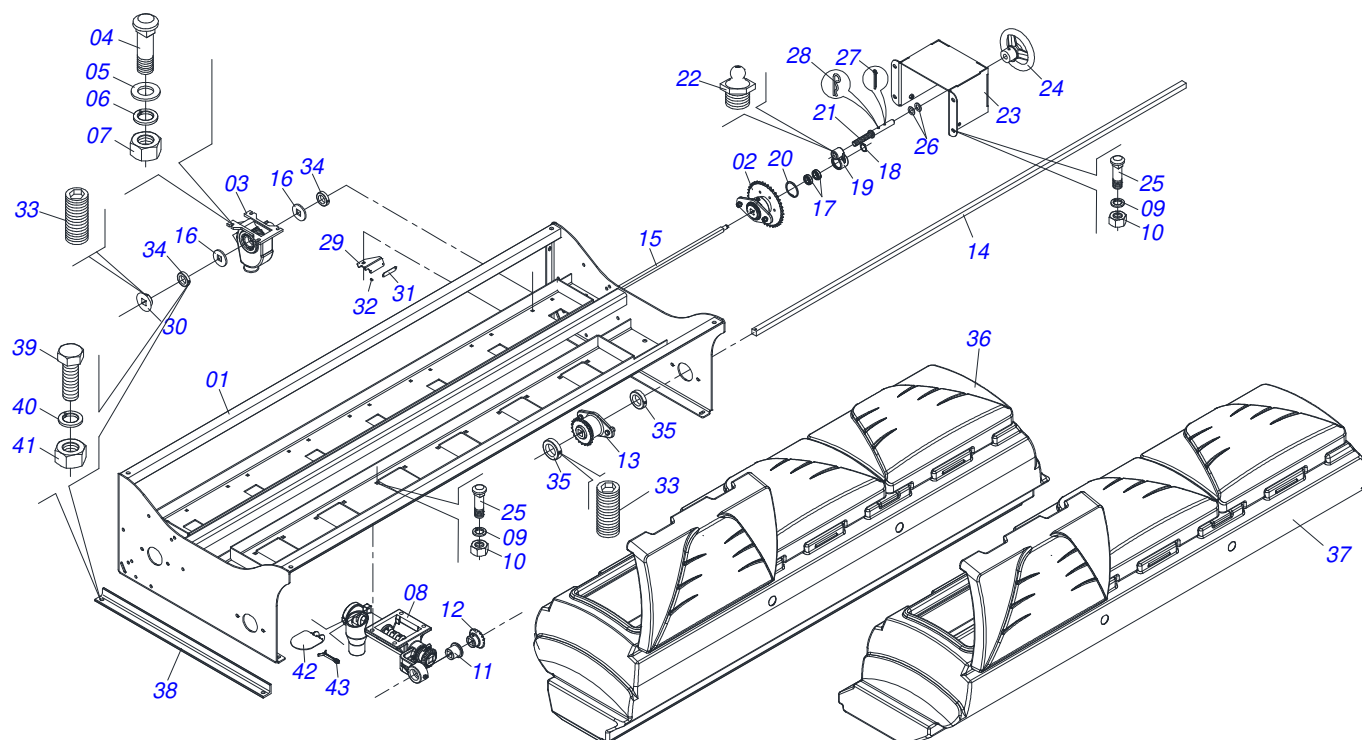


Item	Code	Description	See page	QT
00	0511056581	ASSEMBLY FERTILIZER SILO		01
01	0521061796	SEED/ FERTILIZER BEAM SUPPORT		01
02	0511050523	BEARING SEED 39Z	17	01
03	0503032990	SEED DISTRIBUTOR HOPPER ASSY	18	07
04	0503011953	5/16" X 1" BOLT		28
05	0501010694	FLAT WASHER		28
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		28
07	0503010337	5/16" NUT		28
08	0511058488	OUTPUT SIDE FERTILIZER DISTRIBUTOR	16	06
09	0503010025	3/8 SPRING WASHER		28
10	0503010026	3/8" NUT		28
11	0503030275	AGRICULTURAL BEARING		06
12	0502011412	18Z CONICAL GEAR		06
13	0511050527	BEARING WITH 22Z GEAR	19	01
14	0571017645	FERTILIZER AXLE		01
15	0571017644	SEED AXLE		01
16	0541015361	FLAT WASHER		14
17	0503012882	BEARING		02
18	0503012104	501015 CLAMPING RING (FOR AXLE)		01
19	0502012325	SEED REGULATOR BEARING		01
20	0503011945	503050 CLAMPING RING (FOR AXLE)		01
21	0541015305	HANDLE SPINDLE		01
22	0503010002	1800 GREASE FITTING		01
23	0521061856	HANDLE BOX FIXER WITH BUSHING		01
24	0551019597	SEED REGULATION STEERING WHEEL		01
25	0501011643	3/8 X 1" BOLT		28
26	0511015098	FLAT WASHER		02
27	0503010523	1/4" X 2" SPLIT PIN		01
28	0503031035	HITCH PIN CLIP		01
29	0561017360	SEED SCALE SUPPORT		01
30	0571017641	LARGER DOSER		01

Item	Code	Description	See page	QT
31	0503030886	SCALE DOSER		01
32	0503010001	3.2 X 5.5 RIVET		02
33	0503017021	M8 X 0.5" BOLT		17
34	0571017642	LATCH GLOVE BOX		14
35	0571017643	AXLE FERTILIZER LOCK SLEVE		02
36	0503061901	REAR SEED/FERTILIZER BEAM ASSY		01
37	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		01
38	0561017043	ANGLE BAR		02
39	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
40	0503011440	SPRING WASHER		04
41	0503010060	1/2 UNC G.5 ZN HEX NUT		04
42	0571010590	FERTILIZER SIDE COVER		06
43	0503010257	1/8" X 1" COTTERPIN		06

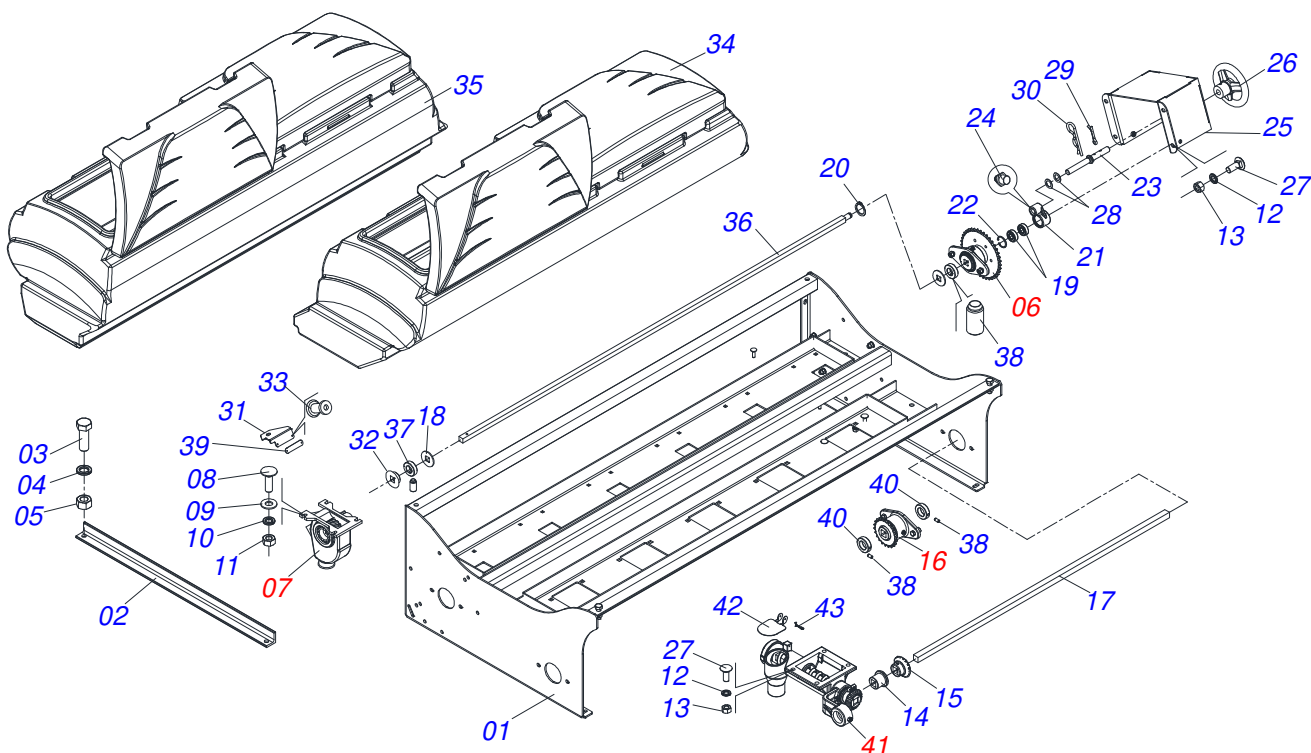

Item	Code	Description	See page	QT
01	0521062578	SUPPORT FERTILIZ BOX		1
02	0561017043	ANGLE BAR		1
03	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		4
04	0503011440	SPRING WASHER		4
05	0503010060	1/2 UNC G.5 ZN HEX NUT		4
06	0511050523	BEARING SEED 39Z	17	1
07	0503032990	SEED DISTRIBUTOR HOPPER ASSY	18	1
08	0503011953	5/16" X 1" BOLT		4
09	0501010694	FLAT WASHER		4
10	0503010179	LOCK WASHER 5/16 ZN 1K01528		4
11	0503010337	5/16" NUT		4
12	0503010025	3/8 SPRING WASHER		8
13	0503010026	3/8" NUT		8
14	0503030275	AGRICULTURAL BEARING		1
15	0502011412	18Z CONICAL GEAR		1
16	0511050527	BEARING WITH 22Z GEAR	19	1
17	0571017734	EJE ABONO Q 19.05 X 1760		1
18	0541015361	FLAT WASHER		2
19	0503012882	BEARING		2
20	0503012104	501015 CLAMPING RING (FOR AXLE)		1
21	0502012325	SEED REGULATOR BEARING		1
22	0503011945	503050 CLAMPING RING (FOR AXLE)		1
23	0541015305	HANDLE SPINDLE		1
24	0503010002	1800 GREASE FITTING		1
25	0521061856	HANDLE BOX FIXER WITH BUSHING		1
26	0551019597	SEED REGULATION STEERING WHEEL		1
27	0501011643	3/8 X 1" BOLT		8
28	0511015098	FLAT WASHER		2
29	0503010523	1/4" X 2" SPLIT PIN		1
30	0503031035	HITCH PIN CLIP		1
31	0561017360	SEED SCALE SUPPORT		1

Item	Code	Description	See page	QT
32	0571017641	LARGER DOSER		1
33	0503010001	3.2 X 5.5 RIVET		2
34	0503061987	05 NOZZLES FERTILIZER HOPPER		1
35	0503061989	BEAM SEED		1
36	0571017732	SEED AXLE		1
37	0571017642	LATCH GLOVE BOX		2
38	0503017021	M8 X 0.5" BOLT		5
39	0503030886	SCALE DOSER		1
40	0571017643	AXLE FERTILIZER LOCK SLEVE		2
41	0511058488	OUTPUT SIDE FERTILIZER DISTRIBUTOR	16	1
42	0571010590	FERTILIZER SIDE COVER		1
43	0503010257	1/8" X 1" COTTERPIN		1

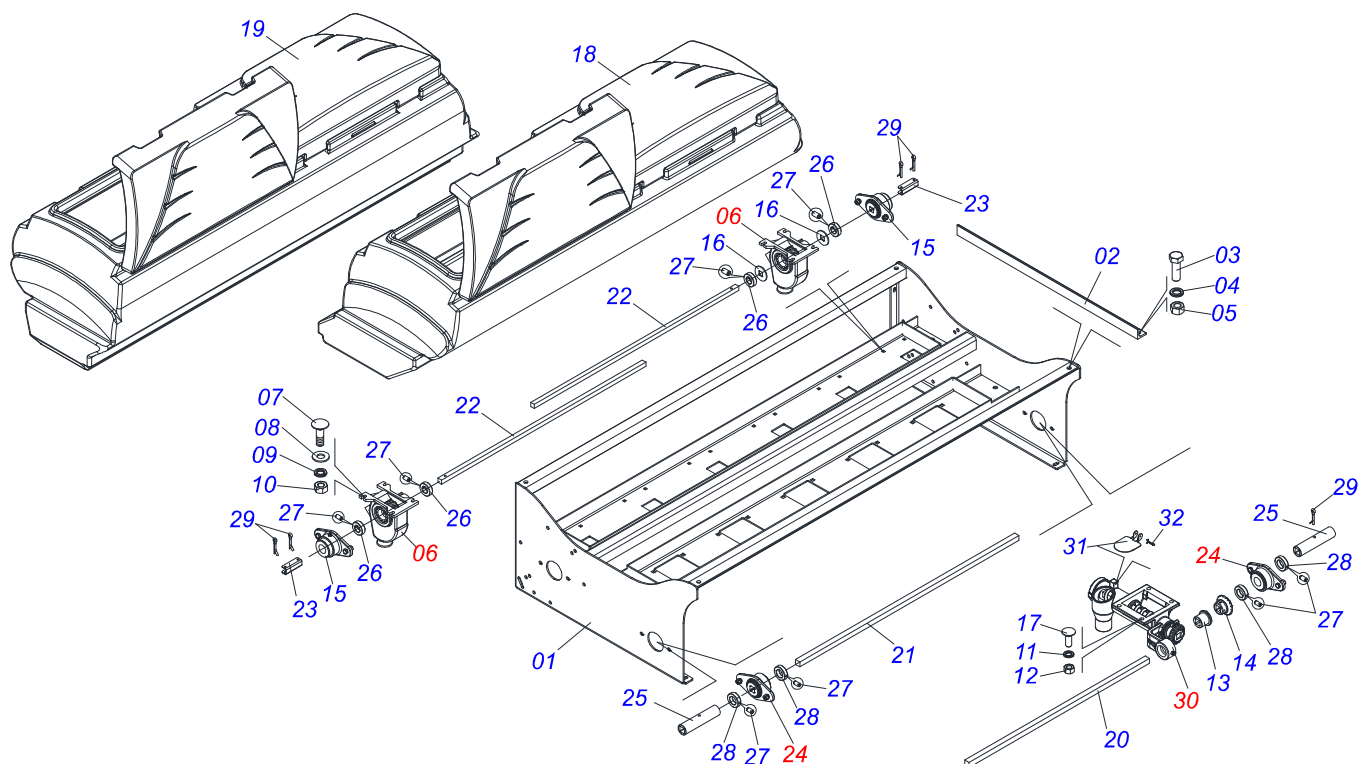


Item	Code	Description	See page	QT
01	0521062578	SUPPORT FERTILIZ BOX		1
02	0561017043	ANGLE BAR		2
03	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		4
04	0503011440	SPRING WASHER		4
05	0503010060	1/2 UNC G.5 ZN HEX NUT		4
06	0503032990	SEED DISTRIBUTOR HOPPER ASSY	18	2
07	0503011953	5/16" X 1" BOLT		4
08	0501010694	FLAT WASHER		4
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		4
10	0503010337	5/16" NUT		4
11	0503010025	3/8 SPRING WASHER		4
12	0503010026	3/8" NUT		4
13	0503030275	AGRICULTURAL BEARING		1
14	0502011412	18Z CONICAL GEAR		1
15	0511051278	BEARING		2
16	0541015361	FLAT WASHER		2
17	0501011643	3/8 X 1" BOLT		4
18	0503061987	05 NOZZLES FERTILIZER HOPPER		1
19	0503061989	BEAM SEED		1
20	0571017737	FERTILIZER AXLE		1
21	0571017736	FERTILIZER AXLE		1
22	0571017735	SEED AXLE		2
23	0561019580	U TRACTION SEED AXLE		2
24	0511051277	FERTILIZER BEARING FQ.20 ASSY		2
25	0502012007	SQUARE SLEEVE		2
26	0571017642	LATCH GLOVE BOX		4
27	0503017021	M8 X 0.5" BOLT		8
28	0571017643	AXLE FERTILIZER LOCK SLEVE		4
29	0503010523	1/4" X 2" SPLIT PIN		6
30	0511058488	OUTPUT SIDE FERTILIZER DISTRIBUTOR	16	1
31	0571010590	FERTILIZER SIDE COVER		1



SEED AND FERTILIZER CENTRAL BEAM

0511058503

Item	Code	Description	See page	QT
32	0503010257	1/8" X 1" COTTERPIN		1

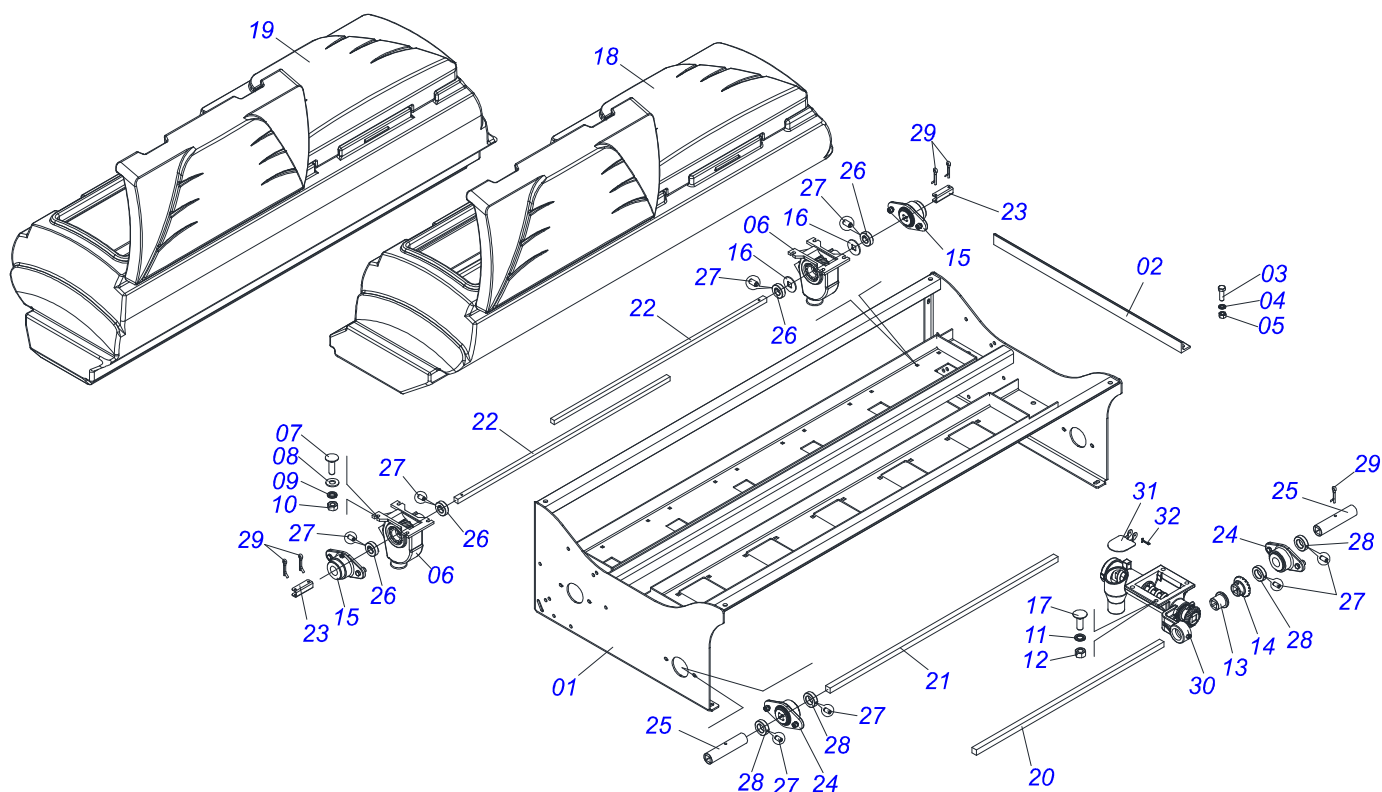


Item	Code	Description	See page	QT
01	0521062578	SUPPORT FERTILIZ BOX		1
02	0561017043	ANGLE BAR		1
03	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		4
04	0503011440	SPRING WASHER		4
05	0503010060	1/2 UNC G.5 ZN HEX NUT		4
06	0511050523	BEARING SEED 39Z	17	1
07	0503032990	SEED DISTRIBUTOR HOPPER ASSY	18	1
08	0503011953	5/16" X 1" BOLT		4
09	0501010694	FLAT WASHER		4
10	0503010179	LOCK WASHER 5/16 ZN 1K01528		4
11	0503010337	5/16" NUT		4
12	0503010025	3/8 SPRING WASHER		8
13	0503010026	3/8" NUT		8
14	0503030275	AGRICULTURAL BEARING		1
15	0502011412	18Z CONICAL GEAR		1
16	0511050527	BEARING WITH 22Z GEAR	19	1
17	0571017734	EJE ABONO Q 19.05 X 1760		1
18	0541015361	FLAT WASHER		2
19	0503012882	BEARING		2
20	0503012104	501015 CLAMPING RING (FOR AXLE)		1
21	0502012325	SEED REGULATOR BEARING		1
22	0503011945	503050 CLAMPING RING (FOR AXLE)		1
23	0541015305	HANDLE SPINDLE		1
24	0503010002	1800 GREASE FITTING		1
25	0521061856	HANDLE BOX FIXER WITH BUSHING		1
26	0551019597	SEED REGULATION STEERING WHEEL		1
27	0501011643	3/8 X 1" BOLT		8
28	0511015098	FLAT WASHER		2
29	0503010523	1/4" X 2" SPLIT PIN		1
30	0503031035	HITCH PIN CLIP		1
31	0561017360	SEED SCALE SUPPORT		1



RH FRONT SEED/FERTILIZER BEAM

0511058500

Item	Code	Description	See page	QT
32	0571017641	LARGER DOSER		1
33	0503030886	SCALE DOSER		1
34	0503010001	3.2 X 5.5 RIVET		2
35	0503061987	05 NOZZLES FERTILIZER HOPPER		1
36	0503061989	BEAM SEED		1
37	0571017732	SEED AXLE		1
38	0571017642	LATCH GLOVE BOX		2
39	0503017021	M8 X 0.5" BOLT		5
40	0571017643	AXLE FERTILIZER LOCK SLEVE		2
41	0511058488	OUTPUT SIDE FERTILIZER DISTRIBUTOR	16	1
42	0503010257	1/8" X 1" COTTERPIN		1
43	0571010590	FERTILIZER SIDE COVER		1

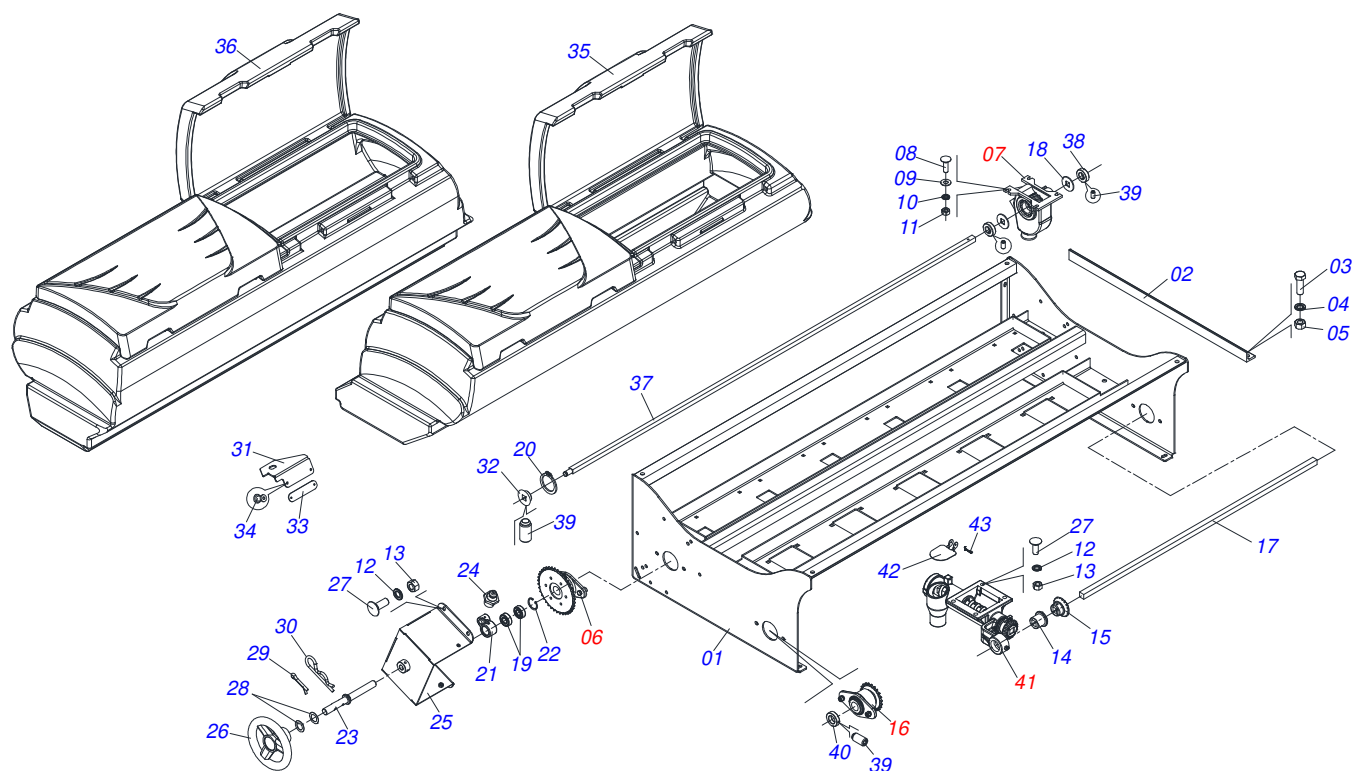


Item	Code	Description	See page	QT
01	0521062578	SUPPORT FERTILIZ BOX		1
02	0561017043	ANGLE BAR		2
03	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		4
04	0503011440	SPRING WASHER		4
05	0503010060	1/2 UNC G.5 ZN HEX NUT		4
06	0511050523	BEARING SEED 39Z	17	1
07	0503032990	SEED DISTRIBUTOR HOPPER ASSY	18	1
08	0503011953	5/16" X 1" BOLT		4
09	0501010694	FLAT WASHER		4
10	0503010179	LOCK WASHER 5/16 ZN 1K01528		4
11	0503010337	5/16" NUT		4
12	0503010025	3/8 SPRING WASHER		8
13	0503010026	3/8" NUT		8
14	0503030275	AGRICULTURAL BEARING		1
15	0502011412	18Z CONICAL GEAR		1
16	0511050527	BEARING WITH 22Z GEAR	19	1
17	0571017734	EJE ABONO Q 19.05 X 1760		1
18	0541015361	FLAT WASHER		2
19	0503012882	BEARING		2
20	0503012104	501015 CLAMPING RING (FOR AXLE)		1
21	0502012325	SEED REGULATOR BEARING		1
22	0503011945	503050 CLAMPING RING (FOR AXLE)		1
23	0541015305	HANDLE SPINDLE		1
24	0503010002	1800 GREASE FITTING		1
25	0521061856	HANDLE BOX FIXER WITH BUSHING		1
26	0551019597	SEED REGULATION STEERING WHEEL		1
27	0501011643	3/8 X 1" BOLT		8
28	0511015098	FLAT WASHER		2
29	0503010523	1/4" X 2" SPLIT PIN		1
30	0503031035	HITCH PIN CLIP		1
31	0561017360	SEED SCALE SUPPORT		1

Item	Code	Description	See page	QT
32	0571017641	LARGER DOSER		1
33	0503030886	SCALE DOSER		1
34	0503010001	3.2 X 5.5 RIVET		2
35	0503061988	SILO FERTILIZER 05 MOUTHS REAR MOUNTED		1
36	0503061990	SILO FERTILIZER 06 MOUTHS REAR MOUNTED		1
37	0571017732	SEED AXLE		1
38	0571017642	LATCH GLOVE BOX		2
39	0503017021	M8 X 0.5" BOLT		5
40	0571017643	AXLE FERTILIZER LOCK SLEVE		2
41	0511058488	OUTPUT SIDE FERTILIZER DISTRIBUTOR	16	1
42	0571010590	FERTILIZER SIDE COVER		1
43	0503010257	1/8" X 1" COTTERPIN		1

CENTER REAR SEED/FERTILIZER BEAM

0511058504

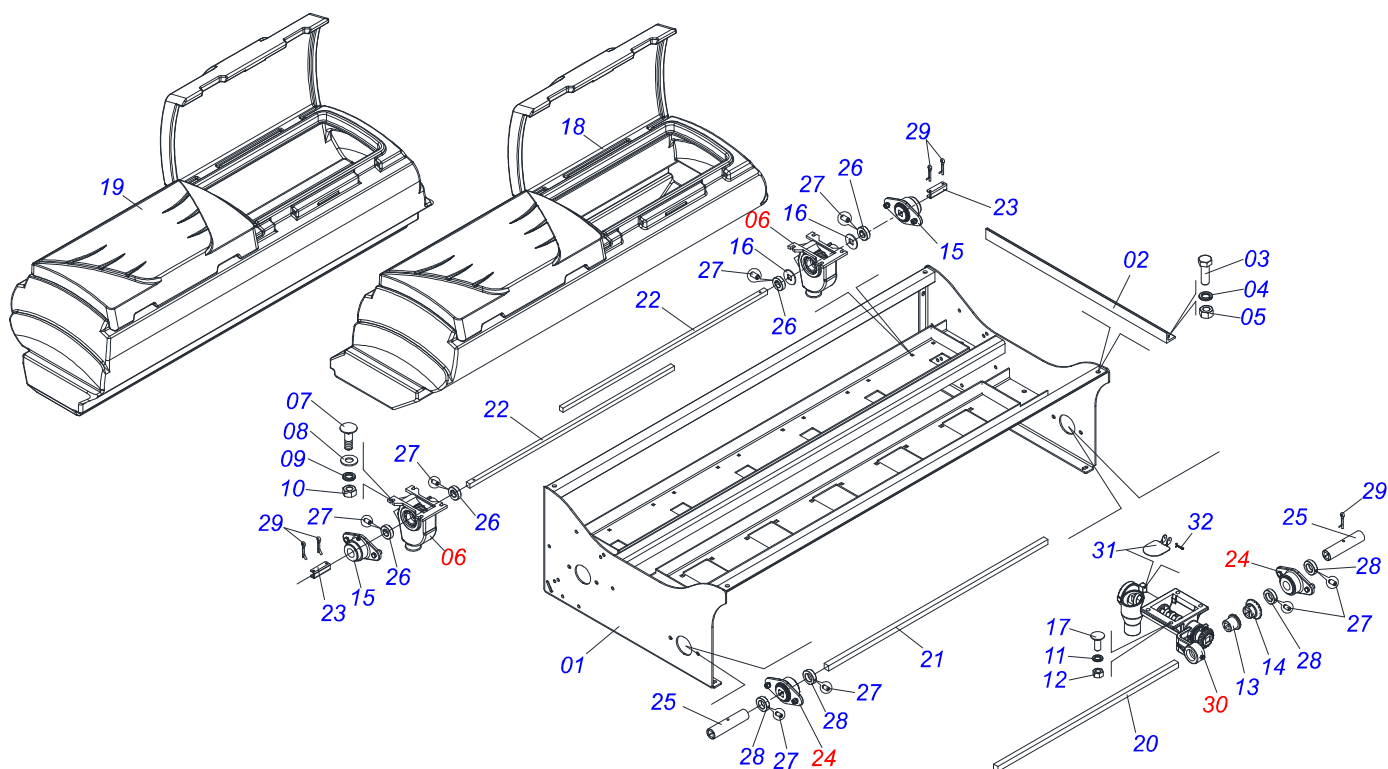


Item	Code	Description	See page	QT
01	0521062578	SUPPORT FERTILIZ BOX		01
02	0561017043	ANGLE BAR		02
03	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
04	0503011440	SPRING WASHER		04
05	0503010060	1/2 UNC G.5 ZN HEX NUT		04
06	0503032990	SEED DISTRIBUTOR HOPPER ASSY	18	02
07	0503011953	5/16" X 1" BOLT		04
08	0501010694	FLAT WASHER		04
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
10	0503010337	5/16" NUT		04
11	0503010025	3/8 SPRING WASHER		04
12	0503010026	3/8" NUT		04
13	0503030275	AGRICULTURAL BEARING		01
14	0502011412	18Z CONICAL GEAR		01
15	0511051278	BEARING		02
16	0541015361	FLAT WASHER		02
17	0501011643	3/8 X 1" BOLT		04
18	0503061988	SILO FERTILIZER 05 MOUTHS REAR MOUNTED		01
19	0503061990	SILO FERTILIZER 06 MOUTHS REAR MOUNTED		01
20	0571017737	FERTILIZER AXLE		01
21	0571017736	FERTILIZER AXLE		01
22	0571017735	SEED AXLE		02
23	0561019580	U TRACTION SEED AXLE		02
24	0511051277	FERTILIZER BEARING FQ.20 ASSY		02
25	0502012007	SQUARE SLEEVE		02
26	0571017642	LATCH GLOVE BOX		04
27	0503017021	M8 X 0.5" BOLT		08
28	0571017643	AXLE FERTILIZER LOCK SLEVE		04
29	0503010523	1/4" X 2" SPLIT PIN		06
30	0511058488	OUTPUT SIDE FERTILIZER DISTRIBUTOR	16	01
31	0571010590	FERTILIZER SIDE COVER		01




CENTER REAR SEED/FERTILIZER BEAM

0511058504

Item	Code	Description	See page	QT
32	0503010257	1/8" X 1" COTTERPIN		01

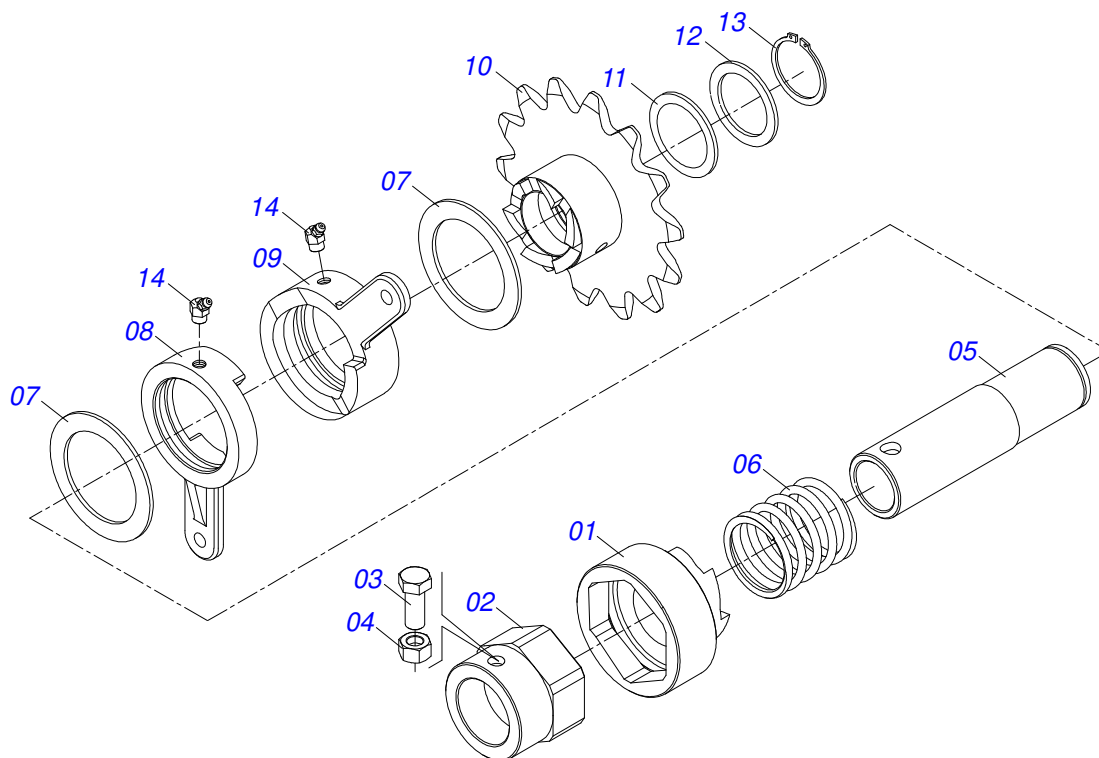


Item	Code	Description	See page	QT
01	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
02	0502011996	SLEEVE FIXER		01
03	0503010395	1/2" X 1-1/4" BOLT		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0521017590	GUIDE AXLE		01
06	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		01
09	0502010721	LEFT CAM,LARGER		01
10	0502011329	14Z GEAR WITH RIGHT DRAGGER		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01
14	0503010003	1845 GREASE FITTING		02

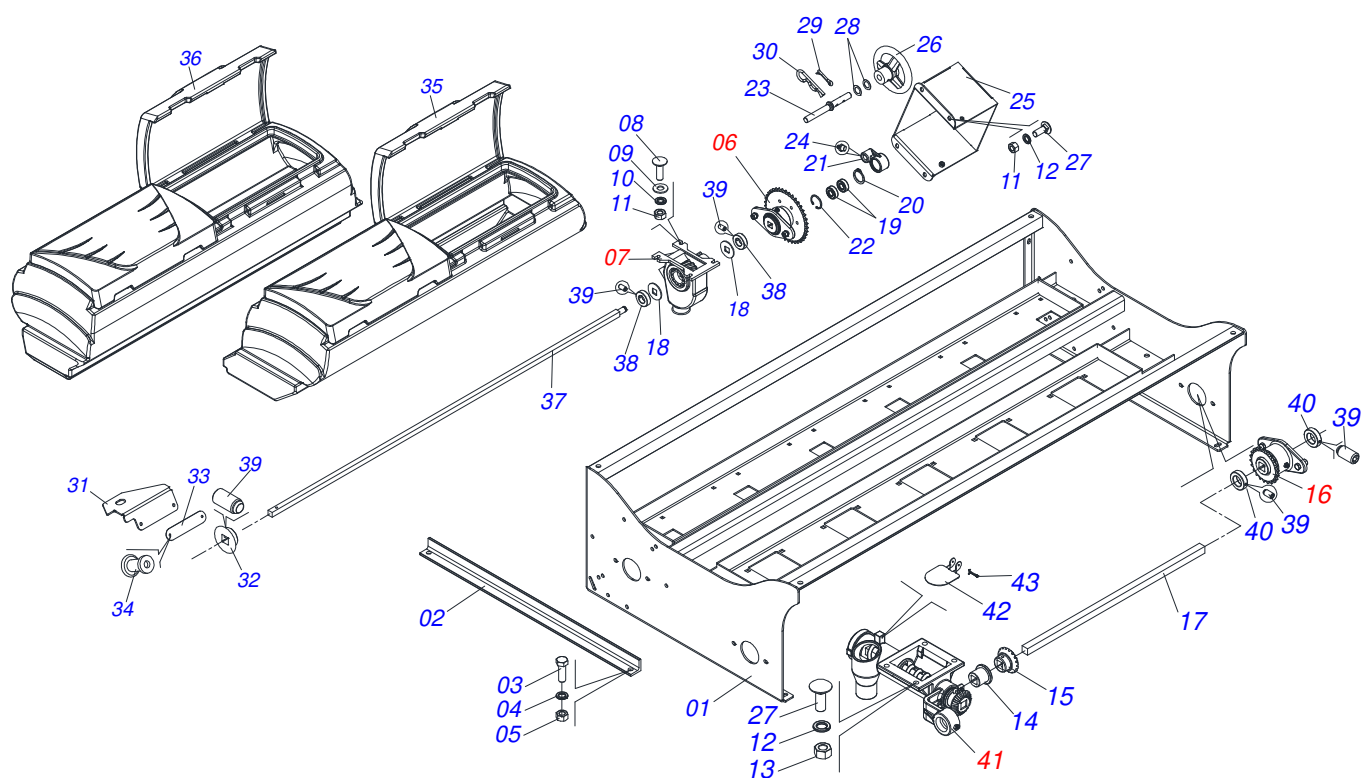


Item	Code	Description	See page	QT
01	0521062578	SUPPORT FERTILIZ BOX		1
02	0561017043	ANGLE BAR		2
03	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		3
04	0503011440	SPRING WASHER		3
05	0503010060	1/2 UNC G.5 ZN HEX NUT		3
06	0511050523	BEARING SEED 39Z	17	1
07	0503032990	SEED DISTRIBUTOR HOPPER ASSY	18	1
08	0503011953	5/16" X 1" BOLT		3
09	0501010694	FLAT WASHER		3
10	0503010179	LOCK WASHER 5/16 ZN 1K01528		3
11	0503010337	5/16" NUT		3
12	0503010025	3/8 SPRING WASHER		8
13	0503010026	3/8" NUT		8
14	0503030275	AGRICULTURAL BEARING		1
15	0502011412	18Z CONICAL GEAR		1
16	0511050527	BEARING WITH 22Z GEAR	19	1
17	0571017734	EJE ABONO Q 19.05 X 1760		1
18	0541015361	FLAT WASHER		2
19	0503012882	BEARING		2
20	0503012104	501015 CLAMPING RING (FOR AXLE)		1
21	0502012325	SEED REGULATOR BEARING		1
22	0503011945	503050 CLAMPING RING (FOR AXLE)		1
23	0541015305	HANDLE SPINDLE		1
24	0503010002	1800 GREASE FITTING		1
25	0521061856	HANDLE BOX FIXER WITH BUSHING		1
26	0551019597	SEED REGULATION STEERING WHEEL		1
27	0501011643	3/8 X 1" BOLT		8
28	0511015098	FLAT WASHER		2
29	0503010523	1/4" X 2" SPLIT PIN		1
30	0503031035	HITCH PIN CLIP		1
31	0561017360	SEED SCALE SUPPORT		1


Item	Code	Description	See page	QT
32	0571017641	LARGER DOSER		1
33	0503030886	SCALE DOSER		1
34	0503010001	3.2 X 5.5 RIVET		2
35	0503061988	SILO FERTILIZER 05 MOUTHS REAR MOUNTED		1
36	0503061990	SILO FERTILIZER 06 MOUTHS REAR MOUNTED		1
37	0571017732	SEED AXLE		1
38	0571017642	LATCH GLOVE BOX		2
39	0503017021	M8 X 0.5" BOLT		5
40	0571017643	AXLE FERTILIZER LOCK SLEVE		2
41	0511058488	OUTPUT SIDE FERTILIZER DISTRIBUTOR	16	1
42	0571010590	FERTILIZER SIDE COVER		1
43	0503010257	1/8" X 1" COTTERPIN		1

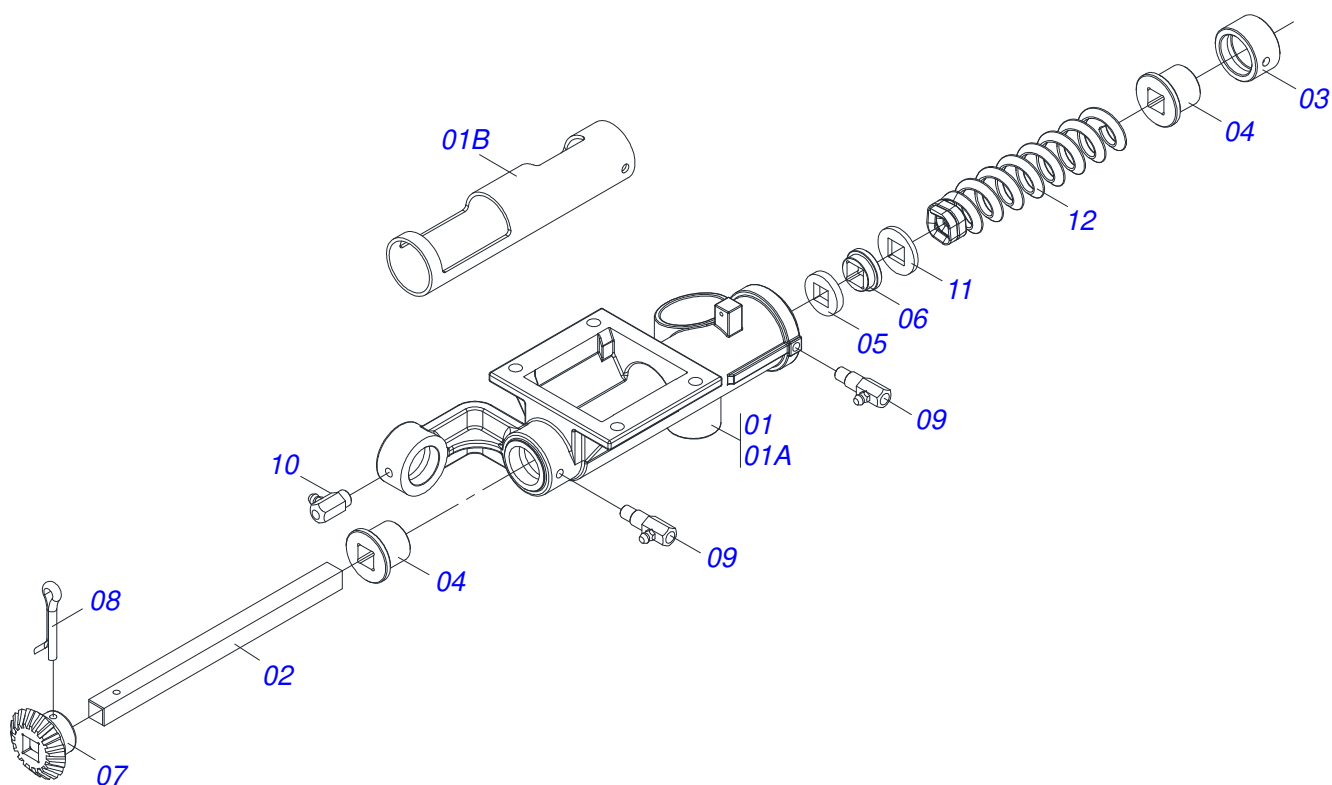


Item	Code	Description	See page	QT
01	0501110831	FERTILIZER DISTRIBUTOR BODY WITH HOSE		01
01A	1902012845	DISTRIBUTOR OF FERTILIZER OUT RIGHT SIDE		01
01B	0581010951	TUBE DISTRIBUTOR FERTILIZER		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0501013774	GREASE SEAL		01
06	0503030303	SUPPORT WASHER		01
07	0591017505	GEAR		01
08	0503010523	1/4" X 2" SPLIT PIN		01
09	0503011962	GREASE FITTING		02
10	0503010003	1845 GREASE FITTING		01
11	0501010637	FLAT WASHER		01
12	0503031166	LEFT CONDUTOR		01

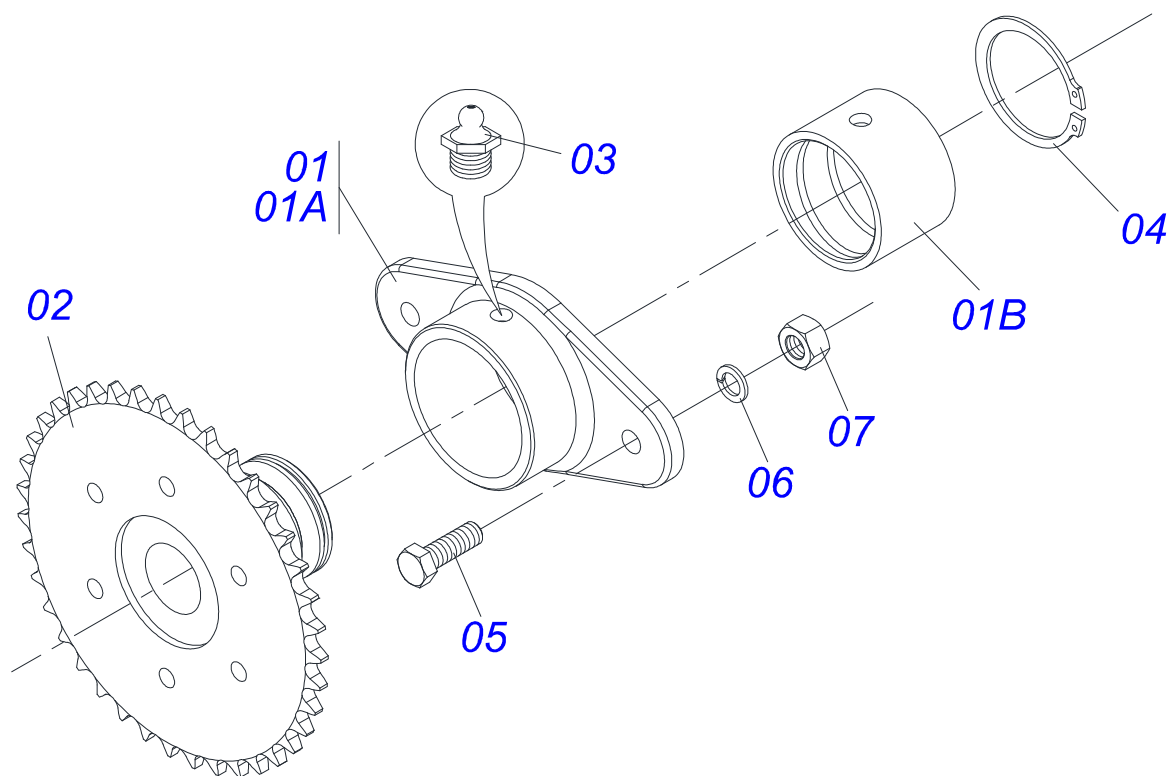


Item	Code	Description	See page
01	0501110359	OUTER BEARING ASSY	01
01A	0502011730	BEARING BODY	01
01B	0531015356	INNER SLEEVE 58,74 X 46,04 X 43	01
02	0521061990	39Z SEED GEAR	01
03	0503010002	1800 GREASE FITTING	01
04	0503010372	501050 CLAMPING RING (FOR AXLE)	01
05	0503010237	3/8" X 1" BOLT	01
06	0503010025	3/8 SPRING WASHER	01
07	0503010026	3/8" NUT	01

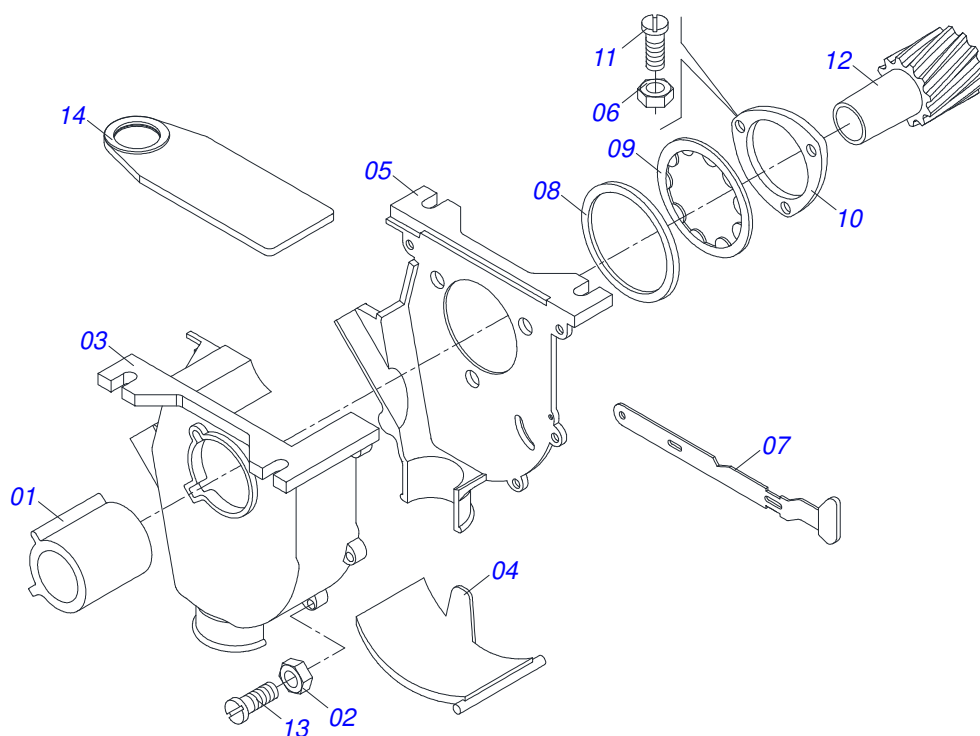


Item	Code	Description	See page	QT
01	0503015222	BUSHING		01
02	0503014540	M6 NUT		01
03	0503015223	LARGER COVER		01
04	0503015224	DISTRIBUTOR		01
05	0503015225	SMALLER COVER		01
06	0503011397	M5 X 0.3" NUT		01
07	0503015226	REGULATOR FLOW		01
08	0503015227	GRAPHITIZED RING		01
09	0503015228	TOOTHED WASHER		01
10	0503015229	TOOTH LOCKWASHER COVER		01
11	0503015230	M5 BOLT		01
12	0503015231	ROTOR		01
13	0503015232	M 6 X 12 BOLT		01
14	0503015233	COVER		01

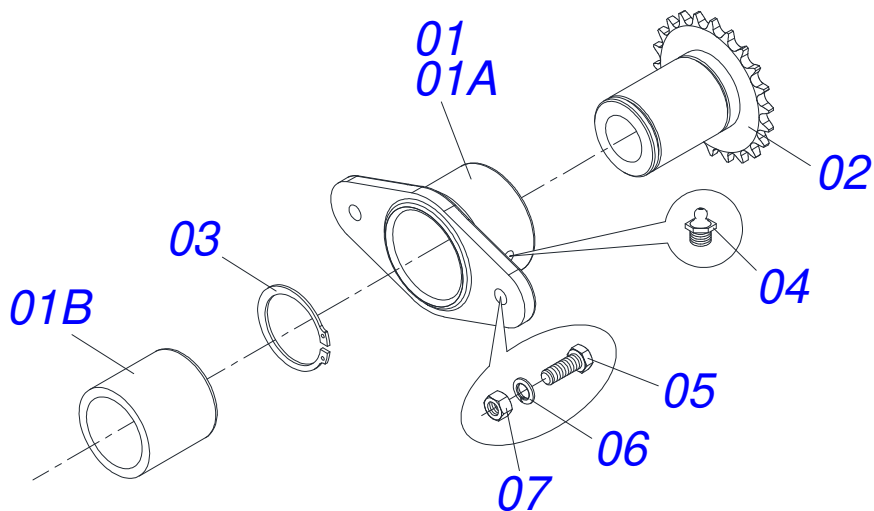

Item	Code	Description	See page	QT
01	0501110582	FERTILIZER/SEED HOPPER BEARING		01
01A	0502011549	BUCHING BEARING		01
01B	0521010897	BEARING SLEEVE		01
02	0521061996	22Z GEAR		01
03	0503010372	501050 CLAMPING RING (FOR AXLE)		02
04	0503010002	1800 GREASE FITTING		01
05	0503010237	3/8" X 1" BOLT		02
06	0503010025	3/8 SPRING WASHER		02
07	0503010026	3/8" NUT		02

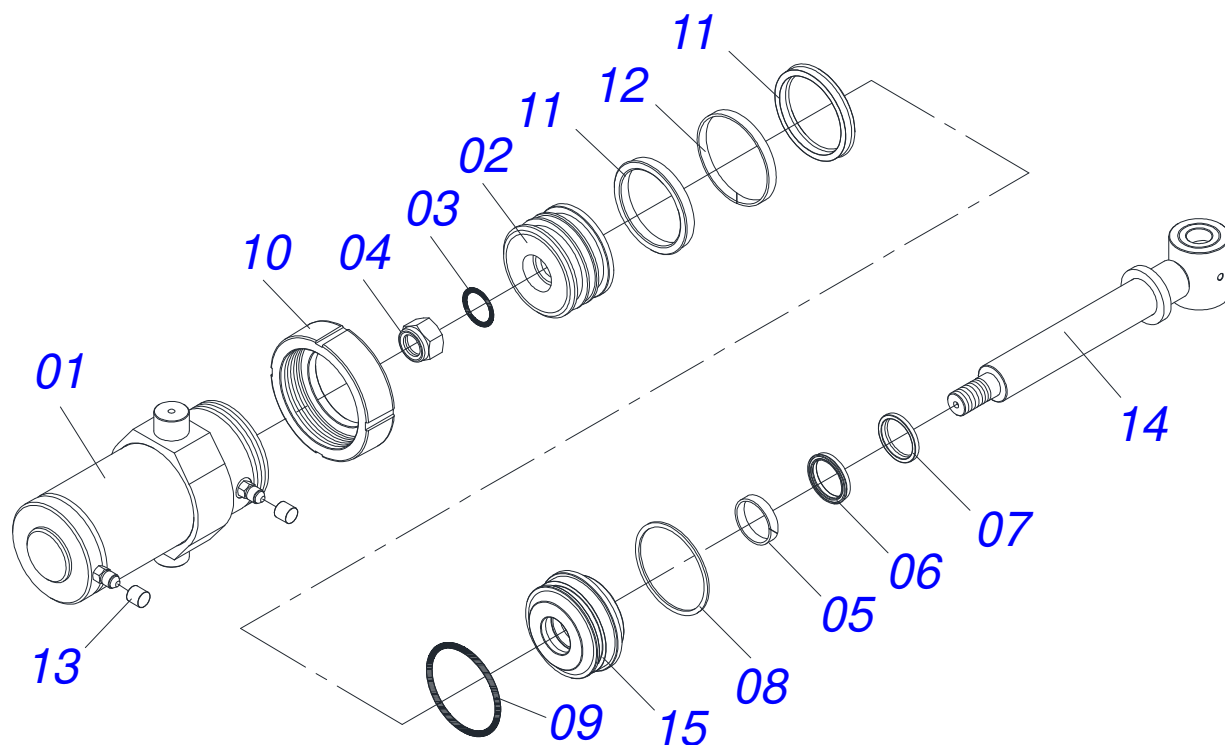


Item	Code	Description	See page	QT
001	0521063196	SHIRT 127 X 166		01
002	0502010963	2.0" X 5.0" PISTON		01
003	0503010345	2-218 N 3006-9B O'RING		01
004	0503010817	1.1/4" SELF LOCKING NUT		01
005	0503010973	W2-2500-500 PK O'RING G.E		01
006	0503010314	GASKET		01
007	0503010319	D-2125 SCRAPER		01
008	0503011062	8-425 BACK-UP RING		01
009	0503010351	2-425 N 3006-9B O'RING		01
010	0502010382	5" END CAP		01
011	0503010552	PACKING 3750-4250-625-B		02
012	0503010974	W2-5000-500 RING		01
013	0503030385	CYLINDER PLUG N-002		02
014	0521065129	HYDRAULIC CYLINDER TURNBUCKLE		01
015	0502012227	50.80 X 127 RING SUPPORT		01
016	0521160030	PAINTING BLACK		01

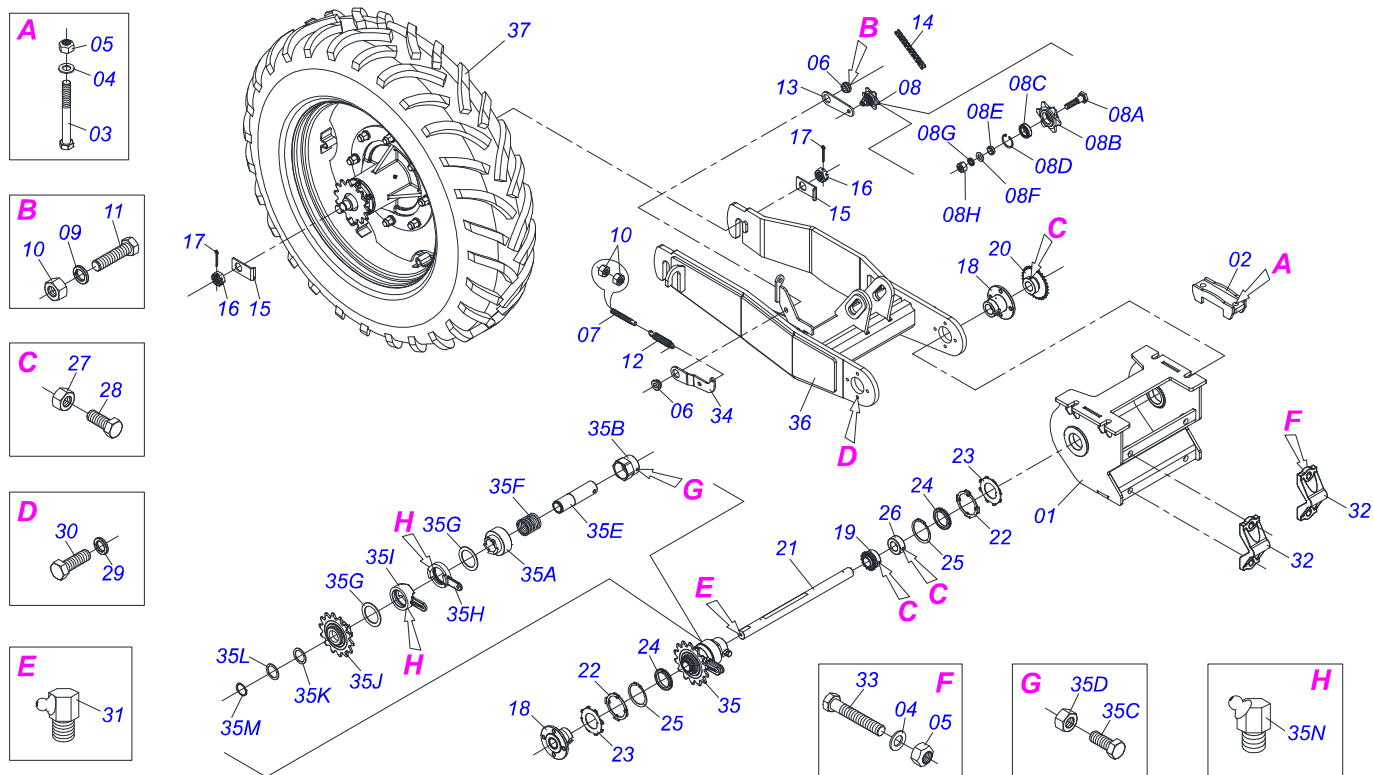


Item	Code	Description	See page	QT
001	0521065130	CARRYING-WHEELS SUPPORT		01
002	0521065139	CLAMP UPPER		02
003	0503012729	3/4" X 6-3/4" BOLT		04
004	0501010941	FLAT WASHER		08
005	0503011255	3/4" LOCK NUT		08
006	0531016916	SLEEVE BEARING SUPPORT		02
007	0501013491	5/8" TENSIONER SPRING		01
008	0501053522	WHEEL CHAIN TENSIONER		01
008A	0551018252	CHAIN TENSIONER AXLE		001
008B	0502012018	CHAIN TIGHTENER BEARING		001
008C	0503012882	BEARING		001
008D	0503011945	503050 CLAMPING RING (FOR AXLE)		001
008E	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE		001
008F	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		001
008G	0503010019	1/2" SPRING WASHER		001
008H	0503010060	1/2 UNC G.5 ZN HEX NUT		001
009	0503010027	5/8 SPRING WASHER		01
010	0503010013	5/8 NUT		03
011	0503010233	5/8" X 2-1/2" BOLT		01
012	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
013	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
014	0503013362	2050 CHAIN X 76 LINK + REDECTION		01
015	0531015109	WHEEL AXLE LOCK		02
016	0503011052	1.1/4" X 0.77" CASTLE NUT		02
017	0503010067	3/16" X 2.1/2" COTTER PIN		02
018	0501110627	WHEEL PIVOT BEARING		02
019	0521061883	CARRYING-WHEELS DRIVER GEAR		01
020	0521063359	DRIVER GEAR		01
021	0561017305	CARRYNG-WHEELS AXLE TRANSMISSION		01
022	0561013022	BEARING EXTERNAL LOCK		02
023	0561013021	BEARING INNER LOCK		02

Item	Code	Description	See page	QT
024	0561013020	KM 12 NUT		02
025	0503010398	501082 CLAMPING RING (FOR AXLE)		02
026	0511015961	LOCK BUSHING		01
027	0503010060	1/2 UNC G.5 ZN HEX NUT		03
028	0503010395	1/2" X 1-1/4" BOLT		03
029	0503010019	1/2" SPRING WASHER		08
030	0503010834	1/2 X 1 BOLT		08
031	0503010004	1890 GREASE FITTING		02
032	1902012330	FIXER SUPPORT ARTICULATED		02
033	0503010797	3/4" X 4" BOLT		04
034	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPORT		01
035	0511050683	ASSY RIGHT TRANSMISSION DRIVER	15	01
035A	0502012009	DRIVING AXLE RIGHT FOLLOWER		001
035B	0502011996	SLEEVE FIXER		001
035C	0503010395	1/2" X 1-1/4" BOLT		001
035D	0503010060	1/2 UNC G.5 ZN HEX NUT		001
035E	0521017590	GUIDE AXLE		001
035F	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		001
035G	0501019734	FLAT WASHER		002
035H	0502010720	RIGHT CAM, SMALLER		001
035I	0502010721	LEFT CAM,LARGER		001
035J	0502011329	14Z GEAR WITH RIGHT DRAGGER		001
035K	0501019735	FLAT WASHER		001
035L	0521017593	FLAT WASHER		001
035M	0503010542	501045 CLAMPING RING (FOR AXLE)		001
035N	0503010003	1845 GREASE FITTING		002
036	0521065555	RH WHEEL FORK		01
037	0511056587	TIRE WHELL	23	01

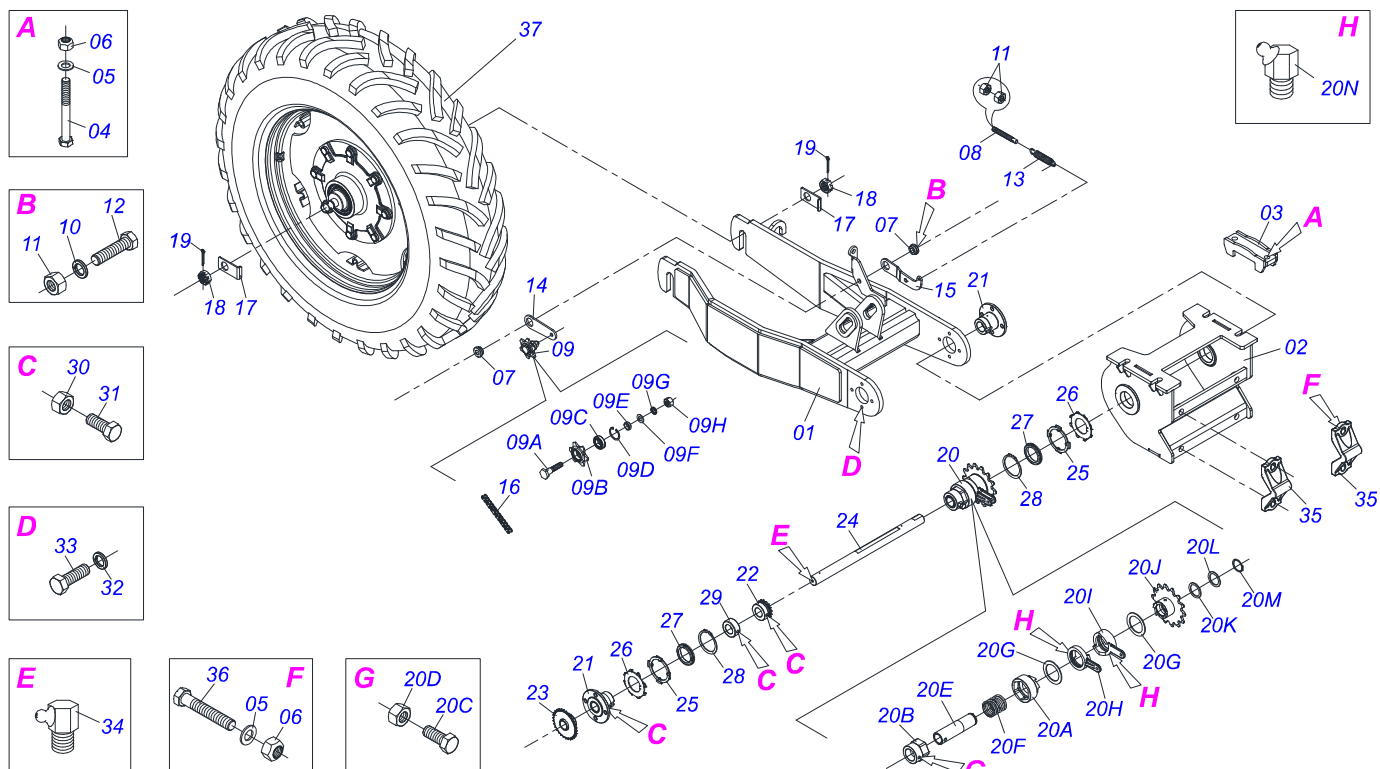


Item	Code	Description	See page	QT
001	0521065556	LH WHEEL FORK	01	
002	0521065130	CARRYING-WHEELS SUPPORT	01	
003	0521065139	CLAMP UPPER	02	
004	0503012729	3/4" X 6-3/4" BOLT	04	
005	0501010941	FLAT WASHER	08	
006	0503011255	3/4" LOCK NUT	08	
007	0531016916	SLEEVE BEARING SUPPORT	02	
008	0501013491	5/8" TENSIONER SPRING	01	
009	0501053522	WHEEL CHAIN TENSIONER	01	
009A	0551018252	CHAIN TENSIONER AXLE	001	
009B	0502012018	CHAIN TIGHTENER BEARING	001	
009C	0503012882	BEARING	001	
009D	0503011945	503050 CLAMPING RING (FOR AXLE)	001	
009E	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE	001	
009F	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN	001	
009G	0503010019	1/2" SPRING WASHER	001	
009H	0503010060	1/2 UNC G.5 ZN HEX NUT	001	
010	0503010027	5/8 SPRING WASHER	01	
011	0503010013	5/8 NUT	03	
012	0503010233	5/8" X 2-1/2" BOLT	01	
013	0503011103	7/16" X 2-1/2" BOLT	01	
014	0531018653	CHAIN TIGHTENER MINOR SUPPORT	01	
015	0531018654	CHAIN TIGHTENER SUPPORT	01	
016	0503013362	2050 CHAIN X 76 LINK + REDECTION	01	
017	0531015109	WHEEL AXLE LOCK	02	
018	0503011052	1.1/4" X 0.77" CASTLE NUT	02	
019	0503010067	3/16" X 2.1/2" COTTER PIN	02	
020	0511050684	ASSY LEFT TRANSMISSION DRIVER	01	
020A	0502011995	LH DRIVING AXLE FOLLOWER	001	
020B	0502011996	SLEEVE FIXER	001	
020C	0503010395	1/2" X 1-1/4" BOLT	001	

Item	Code	Description	See page	QT
020D	0503010060	1/2 UNC G.5 ZN HEX NUT		001
020E	0521017590	GUIDE AXLE		001
020F	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		001
020G	0501019734	FLAT WASHER		002
020H	0502010710	RIGHT CAM, SMALLER		001
020I	0502010711	RIGHT CAM,LARGER		001
020J	0502011331	LH 14Z P 1.25" GEAR WITH DRAGGER		001
020K	0501019735	FLAT WASHER		001
020L	0521017593	FLAT WASHER		001
020M	0503010542	501045 CLAMPING RING (FOR AXLE)		001
020N	0503010003	1845 GREASE FITTING		002
021	0501110627	WHEEL PIVOT BEARING		02
022	0521061883	CARRYING-WHEELS DRIVER GEAR		01
023	0521063359	DRIVER GEAR		01
024	0561017305	CARRYNG-WHEELS AXLE TRANSMISSION		01
025	0561013022	BEARING EXTERNAL LOCK		02
026	0561013021	BEARING INNER LOCK		02
027	0561013020	KM 12 NUT		02
028	0503010398	501082 CLAMPING RING (FOR AXLE)		02
029	0511015961	LOCK BUSHING		01
030	0503010060	1/2 UNC G.5 ZN HEX NUT		03
031	0503010395	1/2" X 1-1/4" BOLT		03
032	0503010019	1/2" SPRING WASHER		08
033	0503010834	1/2 X 1 BOLT		08
034	0503010004	1890 GREASE FITTING		02
035	1902012330	FIXER SUPPORT ARTICULATED		02
036	0503010797	3/4" X 4" BOLT		04
037	0511056587	TIRE WHELL	23	01

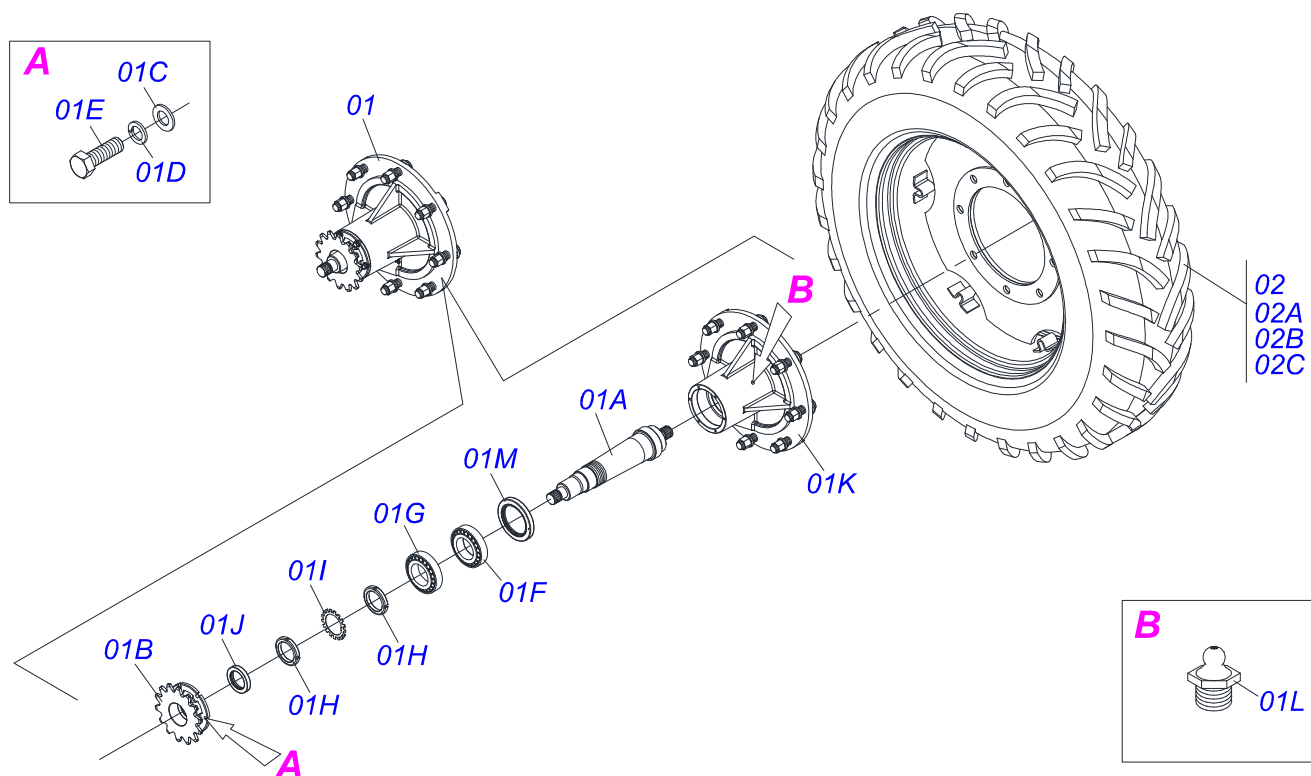


Item	Code	Description	See page	QT
001	0511055849	HUB AND SPINDLE WITH BOLT		01
001A	0571016840	WHEEL AXLE		001
001B	0502012177	14Z FLANG GEAR		001
001C	0501010694	FLAT WASHER		006
001D	0503010179	LOCK WASHER 5/16 ZN 1K01528		006
001E	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		006
001F	0503010059	33287/33462 ROLLER BEARING		001
001G	0503010007	3982/3920 ROLLER BEARING		001
001H	0503012702	KM-12 NUT		002
001I	0503012703	LOCK WASHER		001
001J	0503010528	SEAL # 00838-B		001
001K	0501110792	ROLLED BOX WITH SCREW		001
001L	0503010002	1800 GREASE FITTING		001
001M	0503013106	SEAL 00085-B		001
002	0511056588	WHEEL AND TIRE		01
002A	0521065126	WHEEL AND CENTER		001
002B	0503010379	TIRE 6L		001
002C	0503010380	INNER TIRE		001

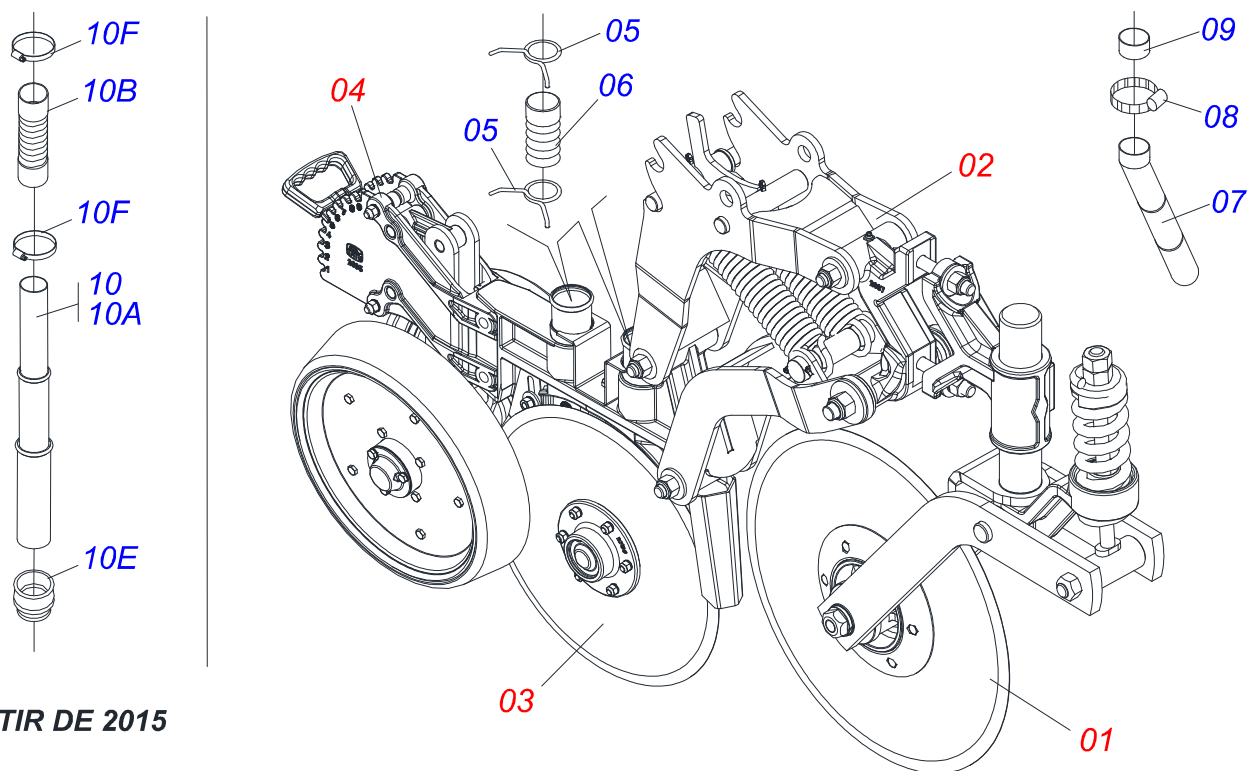


APARTIR DE 2015

Item	Code	Description	See page	QT
01	0521041741	DC DPL 18 ASSY	33	01
02	0521045172	SEED ROW LEFT	27	01
03	0511056609	DDD 13X15 LEFT	31	01
04	0511051290	DEPTH CONTROL / COMPACTOR	28	01
05	0503031076	2" HOSE CLAMP		02
06	0503031145	2" X 2" X 20" HOSE		01
07	0503031826	CURVED CONDUCTOR		01
08	0503010246	CLAMP		01
09	0531018513	SLEEVE NYLON 51 X 41 X 33		01
10	0501058814	3 STAGE TELESCOPE WITH HOSE		01
10A	0503061799	TELESCOPIC		01
10B	0503030645	2 X 2 X 225 HOSE		01
10E	0503015268	BALANCING FERTILIZER / SEED		01
10F	0503010246	CLAMP		02

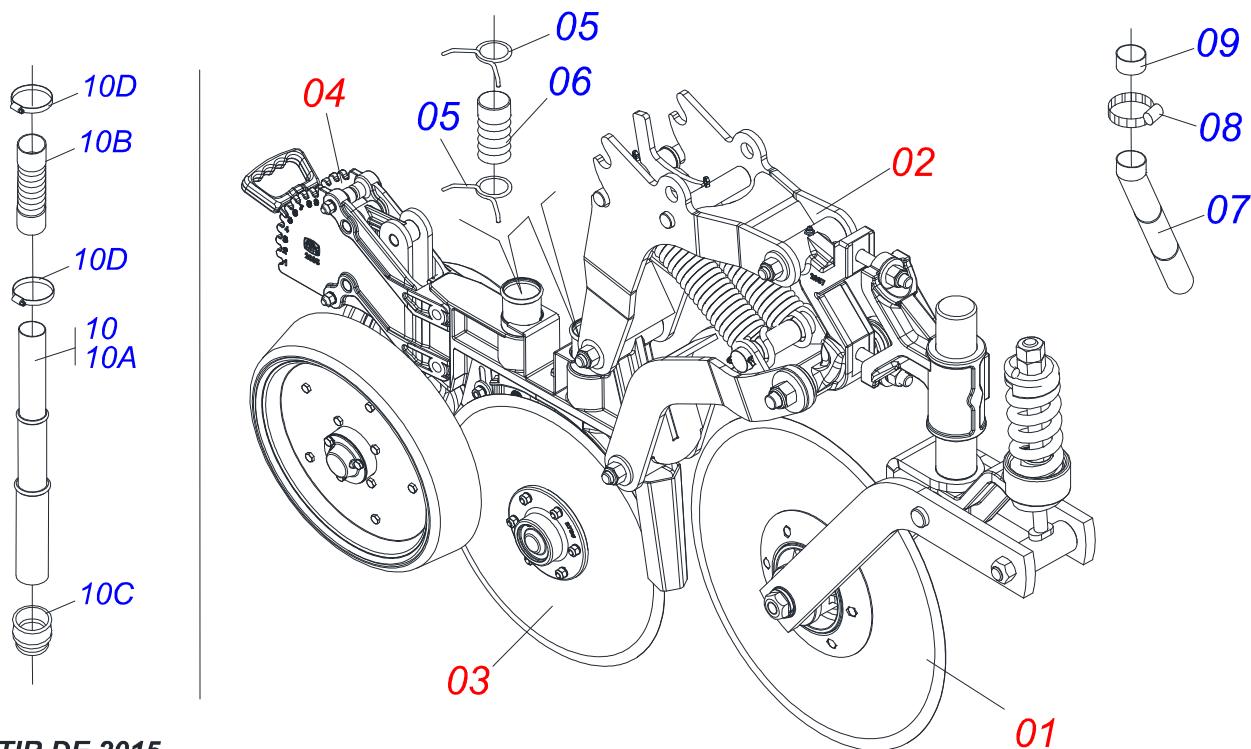


APARTIR DE 2015


Item	Code	Description	See page	QT
01	0521041741	DC DPL 18 ASSY	33	01
02	0521045171	SEED ROW RYGH	26	01
03	0511056610	DDD 13X15 RYGH	32	01
04	0511051290	DEPTH CONTROL / COMPACTOR	28	01
05	0503031076	2" HOSE CLAMP		01
06	0503031145	2" X 2" X 20" HOSE		02
07	0503031826	CURVED CONDUCTOR		01
08	0503010246	CLAMP		01
09	0531018513	SLEEVE NYLON 51 X 41 X 33		01
10	0501058814	3 STAGE TELESCOPE WITH HOSE		01
10A	0503061799	TELESCOPIC		01
10B	0503030645	2 X 2 X 225 HOSE		01
10C	0503015268	BALANCING FERTILIZER / SEED		01
10D	0503010246	CLAMP		02

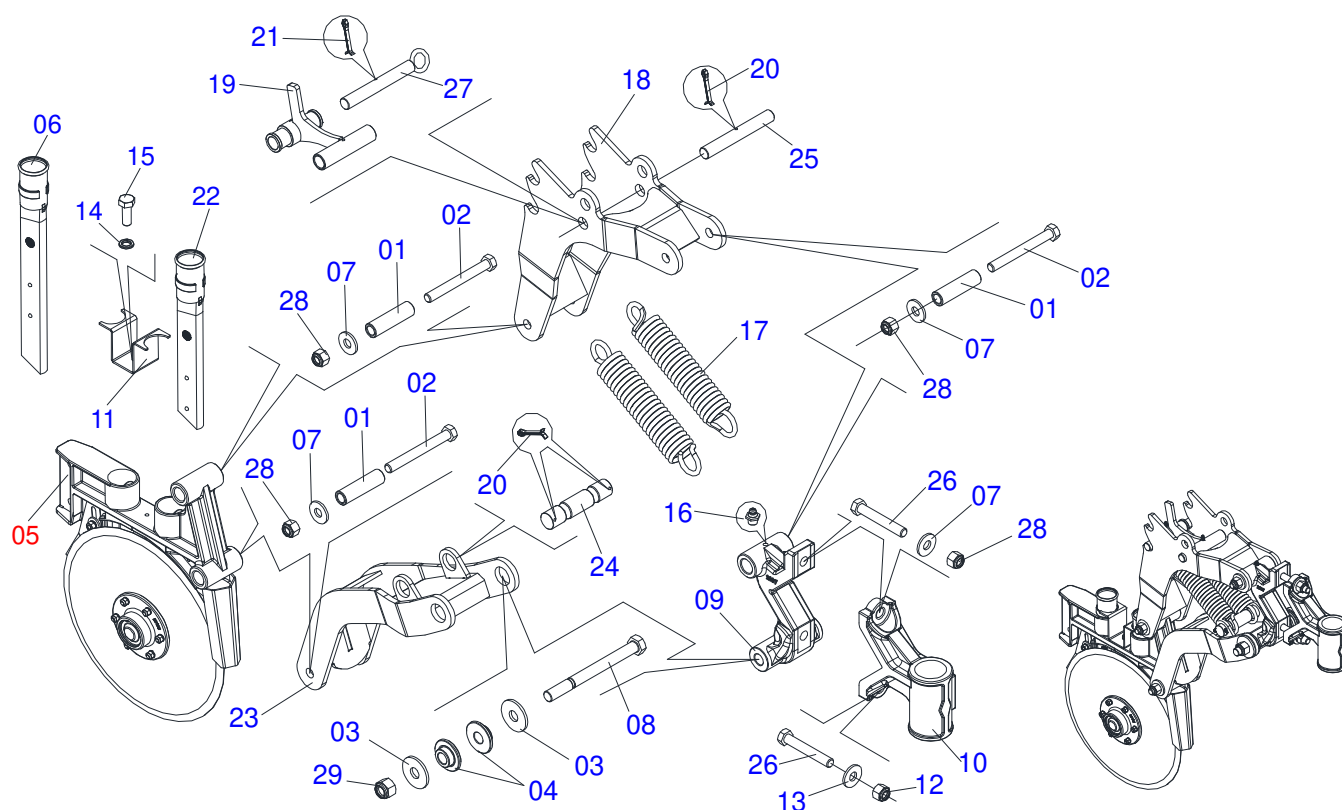


Item	Code	Description	See page	QT
01	0531016857	0.6" X 1" X 3.6" SLEEVE		3
02	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		3
03	0511017232	FLAT WASHER		2
04	0571013598	SLEEVE SPACER		2
05	0511056610	DDD 13X15 RYGH	32	1
06	0503030520	SEED SOCKET		1
07	0501012140	FLAT WASHER		5
08	0511016281	3/4" X 8" BOLT		1
09	0502012687	ROW FASTENER		1
10	0502012719	FIXER SUPPORT BUSHING		1
11	0561019444	SEED SOCKET FIXER		1
12	0503010013	5/8 NUT		1
13	0503010027	5/8 SPRING WASHER		1
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		1
15	0503010358	5/16" X 5/8" BOLT		1
16	0503010002	1800 GREASE FITTING		1
17	0503034017	TRACTION SPRING		2
18	0521065581	UPPER PANTOGRAPH		1
19	0521065584	PANTOGRAPH LOCK SPRING		1
20	0503010131	3/16" X 1-1/2" COTTERPIN		3
21	0503012198	3/16" X 2" COTTERPIN		1
22	0503030483	FERTILIZER SOCKET		1
23	0521065580	PANTOGRAF LOWER		1
24	0571017712	PIVOT SPRING PANTOGRAF		1
25	0571017717	AXLE 20,64		1
26	0503016110	BOLT 5/8 UNC X 4 C S G.7 ZN		2
27	0521066095	LOCK PIN		1
28	0503013389	5/8" SELF LOCKING NUT		4
29	0503011075	3/4" UNC NUT		1

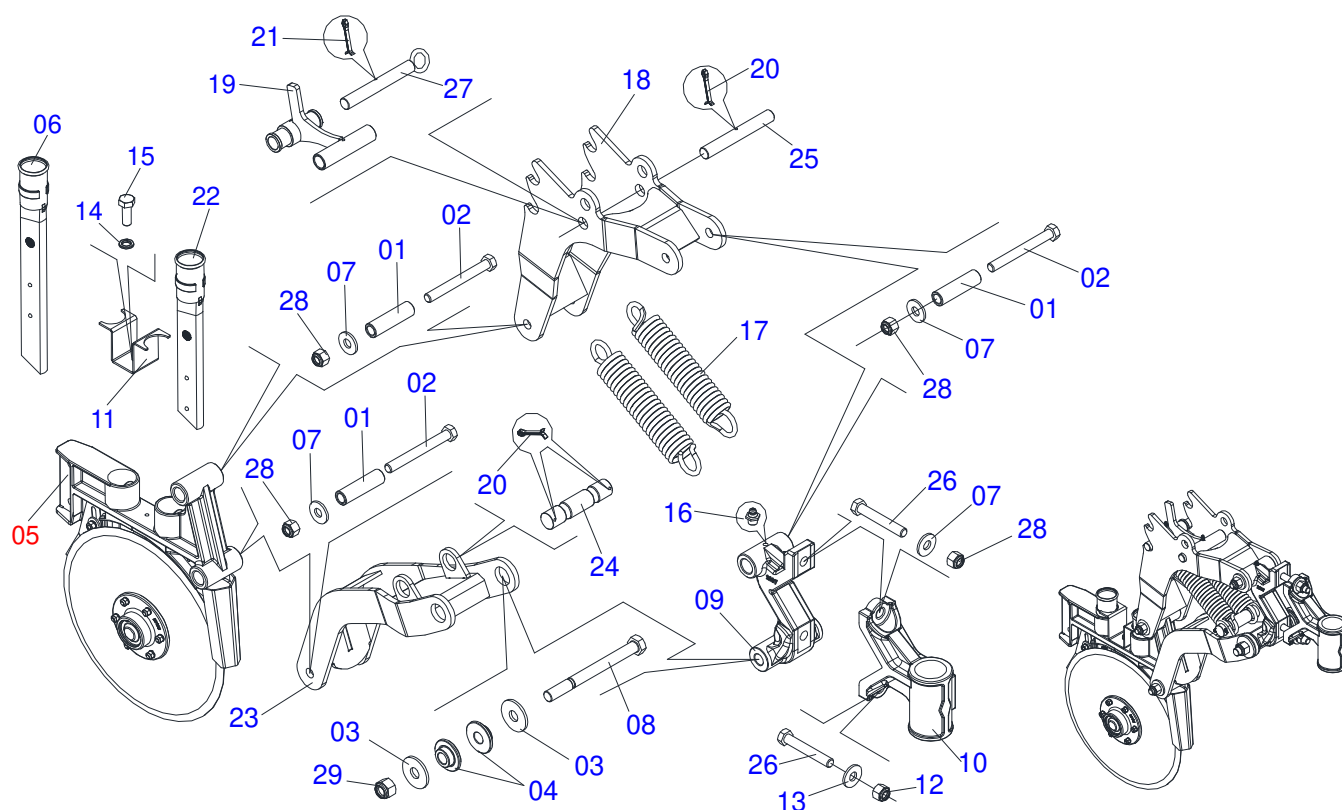

Item	Code	Description	See page	QT
001	0531016857	0.6" X 1" X 3.6" SLEEVE		03
002	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		03
003	0511017232	FLAT WASHER		02
004	0571013598	SLEEVE SPACER		02
005	0511056609	DDD 13X15 LEFT	31	01
006	0503030520	SEED SOCKET		01
007	0501012140	FLAT WASHER		05
008	0511016281	3/4" X 8" BOLT		01
009	0502012687	ROW FASTENER		01
010	0502012719	FIXER SUPPORT BUSHING		01
011	0561019444	SEED SOCKET FIXER		01
012	0503010013	5/8 NUT		01
013	0503010027	5/8 SPRING WASHER		01
014	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
015	0503010358	5/16" X 5/8" BOLT		01
016	0503010002	1800 GREASE FITTING		01
017	0503034017	TRACTION SPRING		02
018	0521065581	UPPER PANTOGRAPH		01
019	0521065584	PANTOGRAPH LOCK SPRING		01
020	0503010131	3/16" X 1-1/2" COTTERPIN		03
021	0503012198	3/16" X 2" COTTERPIN		01
022	0503030483	FERTILIZER SOCKET		01
023	0521065580	PANTOGRAF LOWER		01
024	0571017712	PIVOT SPRING PANTOGRAF		01
025	0571017717	AXLE 20,64		01
026	0503016110	BOLT 5/8 UNC X 4 C S G.7 ZN		02
027	0521066095	LOCK PIN		01
028	0503013389	5/8" SELF LOCKING NUT		04
029	0503011075	3/4" UNC NUT		01

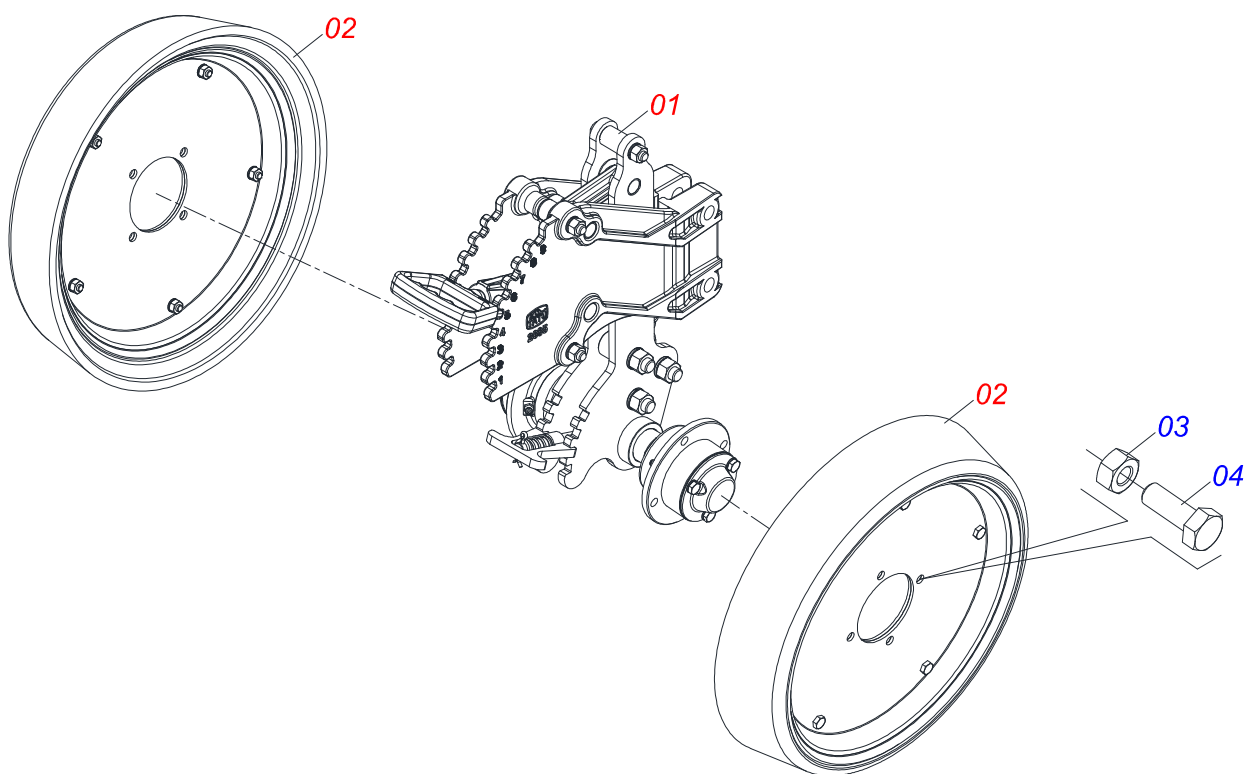


Item	Code	Description	See page	QT
01	0511051291	DEPTH CONTROL / COMPACTOR	29	01
02	0501055187	DEPTH WHEEL WITHOUT CUBE	30	02
03	0503013816	5/16" LOCKNUT		08
04	0503010358	5/16" X 5/8" BOLT		08

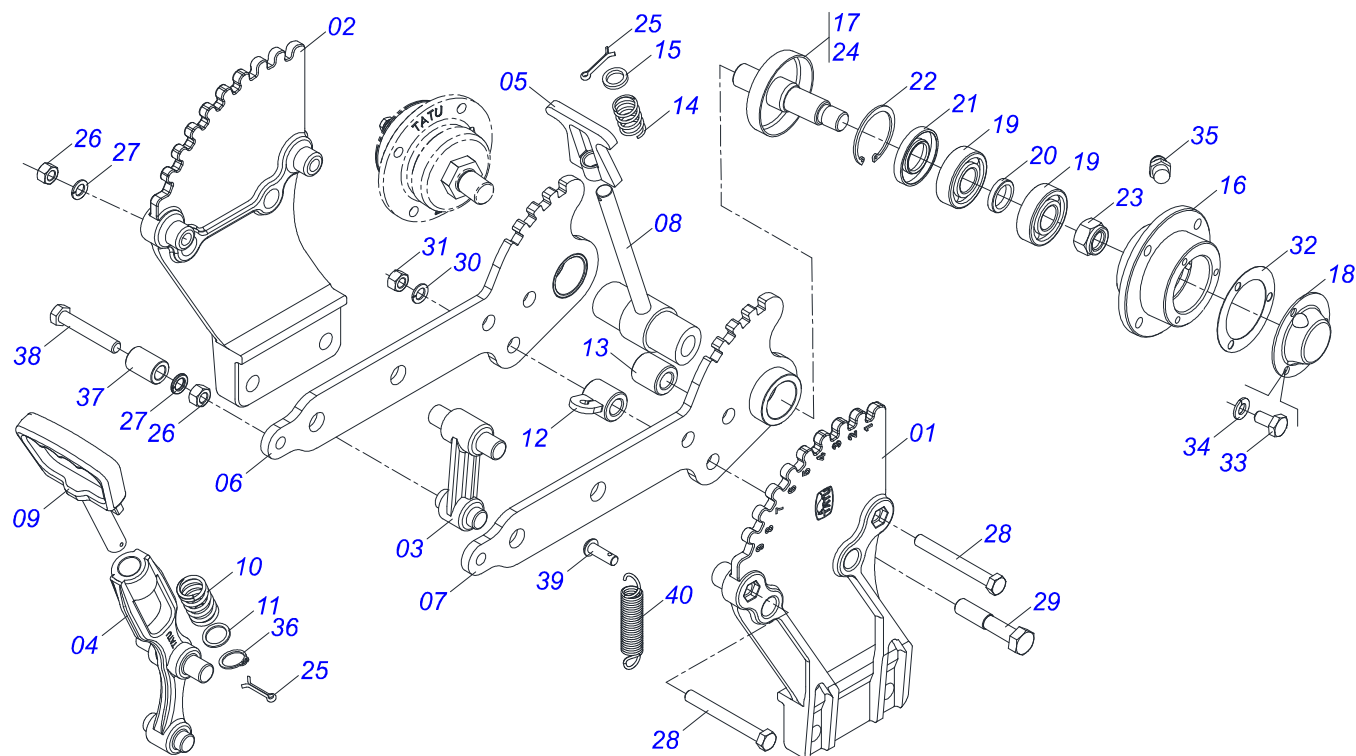


Item	Code	Description	See page	QT
01	0502012686	LEFT SIDE DEPHT CONTROL	01	01
02	0502012685	RIGHT SIDE DEPHT CONTROL	01	01
03	1902012683	DEPTH CONTROL UPPER ARM	01	01
04	0502012684	DEPTH CONTROL LOWER ARM	01	01
05	0521062602	LOCK DEPTH CONTROL	01	01
06	0521068667	ARTICULATION LEFT DEPTH CONTROL	01	01
07	0521068668	ARTICULATION RIGHT DEPTH CONTROL	01	01
08	0521068666	ADJUSTMENT AXLE	01	01
09	0502011689	1/8" DEPTH CONTROL LEVER	01	01
10	0503030975	0.9" X 1.5" X 0.1" SPRING	01	01
11	0581019519	FLAT WASHER	01	01
12	0521062714	SLLEVE FIXER SPRING	01	01
13	0571010115	SLEEVE DEPHT CONTROL	01	01
14	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING	01	01
15	0541011627	FLAT WASHER	03	03
16	0502011907	DEPTH CONTROL WHEEL HUB	02	02
17	0511066638	RIGHT AXLE WITH DUST CLOAK	01	01
18	0521019178	PROTECTION LID	02	02
19	0503010269	6204 BALL BEARING	04	04
20	0501013636	SPACING SLEEVE	02	02
21	0503010689	SEAL 00763-BR	02	02
22	0503011105	SEAL RING	02	02
23	0503010878	5/8" SELF ALIGNING NUT	02	02
24	0511066637	LEFT AXLE WITH DUST CLOAK	01	01
25	0503010140	1/8" X 3/4" COTTERPIN	03	03
26	0503010026	3/8" NUT	03	03
27	0503010025	3/8 SPRING WASHER	02	02
28	0503013665	SCREW 3/8 UNC X 3.1/4 C S RP G.2 ZN	02	02
29	0503816453	BOLT 1/2 UNF X 2.1/2 C S G.5 SA	03	03
30	0503011440	SPRING WASHER	03	03
31	0503810028	NUT 1/2 NF SA	03	03


Item	Code	Description	See page	QT
32	0503030757	2.9" X 2" X 0.02" JOINT		02
33	0503014729	1/4" UNF X 1/2" BOLT		06
34	0503010143	1/4" SPRING WASHER		06
35	0503010691	1/4" GREASE FITTING		02
36	0503011166	501017 CLAMPING RING (FOR AXLE)		01
37	0581017093	SLEEVE		01
38	0503811179	BOLT 3/8 UNC X 2.1/4 C S G.5 SA		01
39	0521010793	COUPLING SHAFT		01
40	0503030093	TRACTION SPRING		01

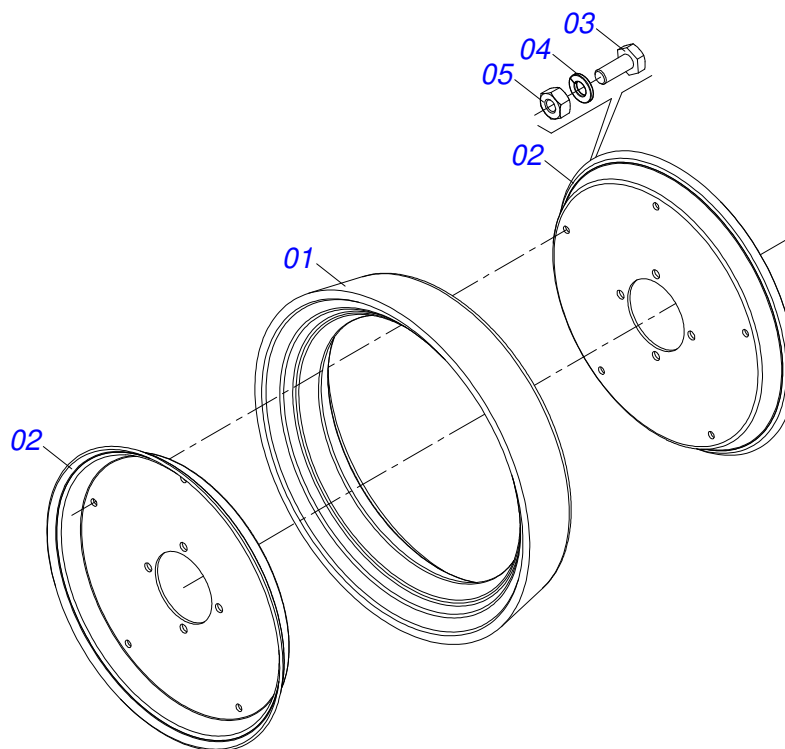


Item	Code	Description	See page	QT
01	0503032005	RUBBER BAND		01
02	0541011628	DEPTH WHEEL RIM SEMI		02
03	0503010519	1/4" X 5/8" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

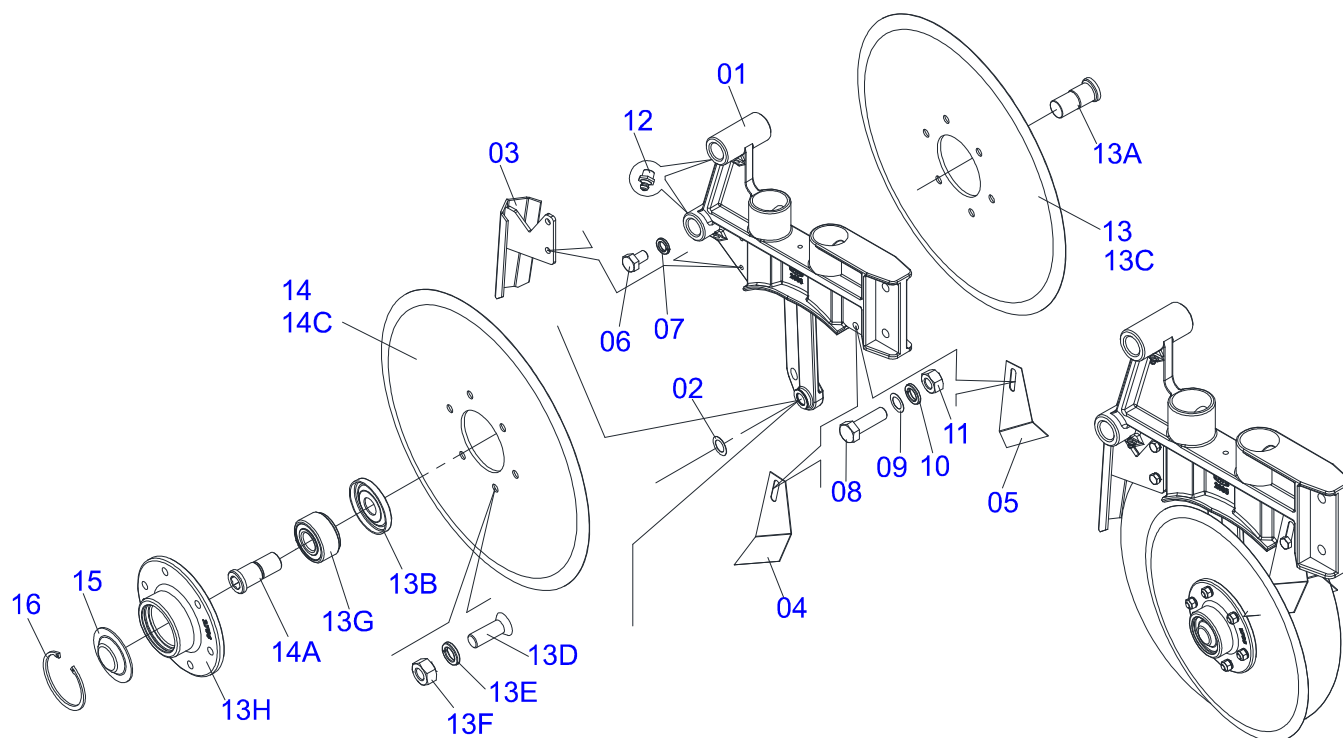

Item	Code	Description	See page	QT
01	0502012679	LH DOUBLE DISC SUPPORT	01	
02	0511015098	FLAT WASHER	06	
03	0521065162	FRONT PROTECTION DDD LEFT	01	
04	0531013568	RIGHT DOUBLE DISC SCRAPER	01	
05	0531013569	LEFT DOUBLE-DISC SCRAPER	01	
06	0503010011	5/16" X 1/2" BOLT	02	
07	0503010179	LOCK WASHER 5/16 ZN 1K01528	02	
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
09	0501010984	10,50 X 27 X 3,00 FLAT WASHER	01	
10	0503011443	3/8" SPRING WASHER	01	
11	0503010026	3/8" NUT	01	
12	0503010002	1800 GREASE FITTING	02	
13	0511056612	LOW LEFT HUB WITH DISC 13	01	
13A	0571011151	LEFT DOUBLE DISC HUB	01	
13B	0511011927	DUST CLOAK	01	
13C	0603020117	FLAT PALIN DISC	01	
13D	0503010546	5/16" X 7/8" BOLT	06	
13E	0503011444	SPRING WASHER	06	
13F	0503010337	5/16" NUT	06	
13G	0503062300	EVA-F8 ESF2CARR BALL BEARING	01	
13H	0502012736	HUB LOWER	01	
14	0511056611	RIGHT LOW CUBE WITH DISC 15	01	
14A	0571011150	RIGHT DOUB DISC - HUB	01	
14C	0603022042	13" X 0.12" PLAIN COULTER BLADE	01	
15	0571011152	DOUBLE DISC CAP	02	
16	0503015081	502052 CLAMPING RING (FOR AXLE)	02	

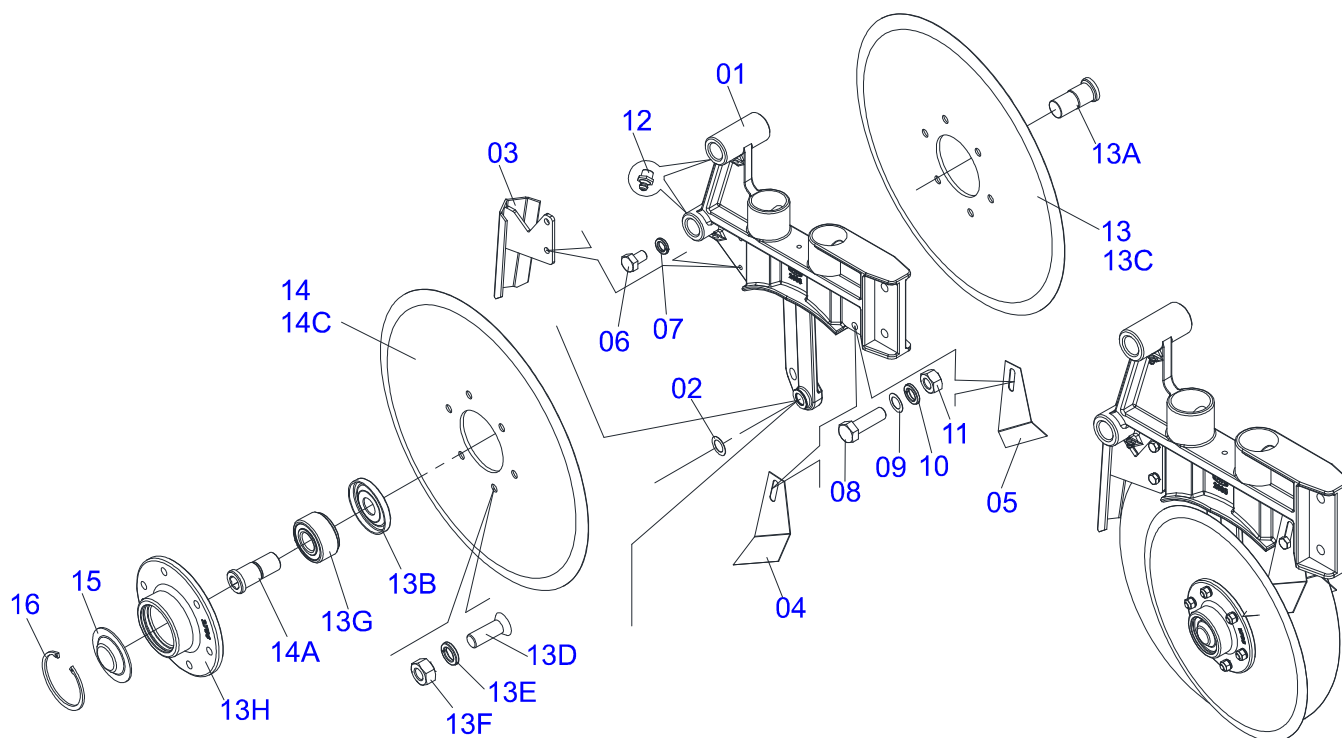


Item	Code	Description	See page	QT
01	0502012680	RIGHT UNIAL DISC DOUBLE SUPPORT	01	
02	0511015098	FLAT WASHER	06	
03	0521065162	FRONT PROTECTION DDD LEFT	01	
04	0531013568	RIGHT DOUBLE DISC SCRAPER	01	
05	0531013569	LEFT DOUBLE-DISC SCRAPER	01	
06	0503010011	5/16" X 1/2" BOLT	02	
07	0503010179	LOCK WASHER 5/16 ZN 1K01528	02	
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
09	0501010984	10,50 X 27 X 3,00 FLAT WASHER	01	
10	0503011443	3/8" SPRING WASHER	01	
11	0503010026	3/8" NUT	01	
12	0503010002	1800 GREASE FITTING	02	
13	0511056612	LOW LEFT HUB WITH DISC 13	01	
13A	0571011151	LEFT DOUBLE DISC HUB	01	
13B	0511011927	DUST CLOAK	01	
13C	0603020117	FLAT PALIN DISC	01	
13D	0503010546	5/16" X 7/8" BOLT	06	
13E	0503011444	SPRING WASHER	06	
13F	0503010337	5/16" NUT	06	
13G	0503062300	EVA-F8 ESF2CARR BALL BEARING	01	
13H	0502012736	HUB LOWER	01	
14	0511056611	RIGHT LOW CUBE WITH DISC 15	01	
14A	0571011150	RIGHT DOUB DISC - HUB	01	
14C	0603022042	13" X 0.12" PLAIN COULTER BLADE	01	
15	0571011152	DOUBLE DISC CAP	02	
16	0503015081	502052 CLAMPING RING (FOR AXLE)	02	

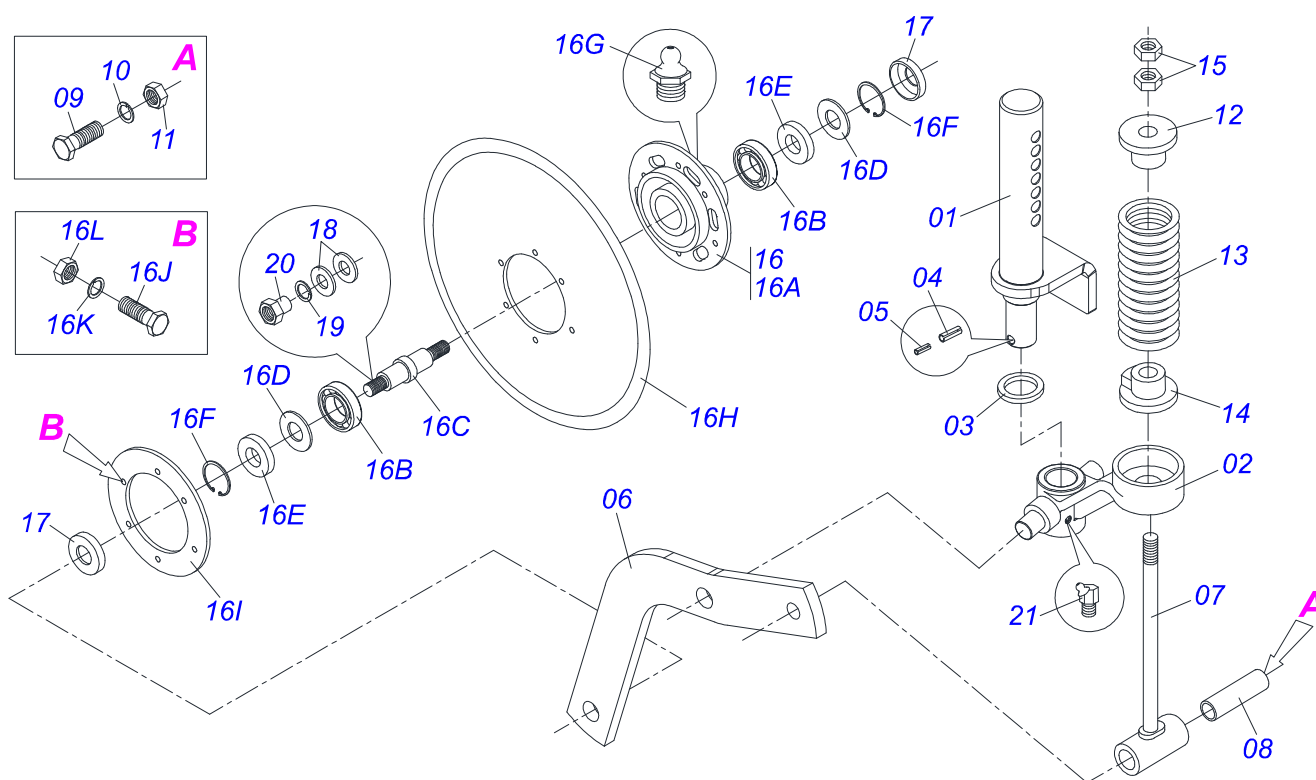

Item	Code	Description	See page	QT
001	0521062962	BLADE DISC AXLE		01
002	0502012369	BLADE DISC SUPPORT		01
003	0541018684	FLAT WASHER		01
004	0503010361	SPRING PIN		01
005	0503010756	0.2" X 2.4" SPRING PIN		01
006	0551014573	BLADE DISC ARM		02
007	0501067323	SPRING REGULATOR		01
008	0521010452	SLEEVE		01
009	0503013185	3/4" X 5-1/2" BOLT		01
010	0503011442	3/4" SPRING WASHER		01
011	0503010014	3/4" HEX NUT		01
012	1902020393	SPRING UPPER SUPPORT		01
013	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
014	0502020394	SPRING SUPPORT		01
015	0503010014	3/4" HEX NUT		02
016	0501052139	ASSY CUTTING DISK DPL18		01
016A	0503010276	6206 BALL BEARING		02
016B	0503010691	1/4" GREASE FITTING		01
016C	0503011444	SPRING WASHER		06
016D	0503011800	SEAL RING		02
016E	0503010337	5/16" NUT		06
016F	0503010371	5/16" X 1" BOLT		06
016G	0603026013	PLAIN COULTER BLADE		01
016H	0502011562	DISC BLADE HUB		01
016I	0521013610	BLADE DISC HUB AXLE		01
016J	0503030832	FLAT WASHER		02
016K	0503012417	SEAL		02
016L	0502020641	BLADE DISC FLANGE		01
017	0521015376	DUST CLOAK		02
018	0511015346	FLAT WASHER		02
019	0503011438	SPRING WASHER		02

Item	Code	Description	See page	QT
020	0521013510	3/4" NUT		02
021	0503010003	1845 GREASE FITTING		01
022	0521160030	PAINTING BLACK		01

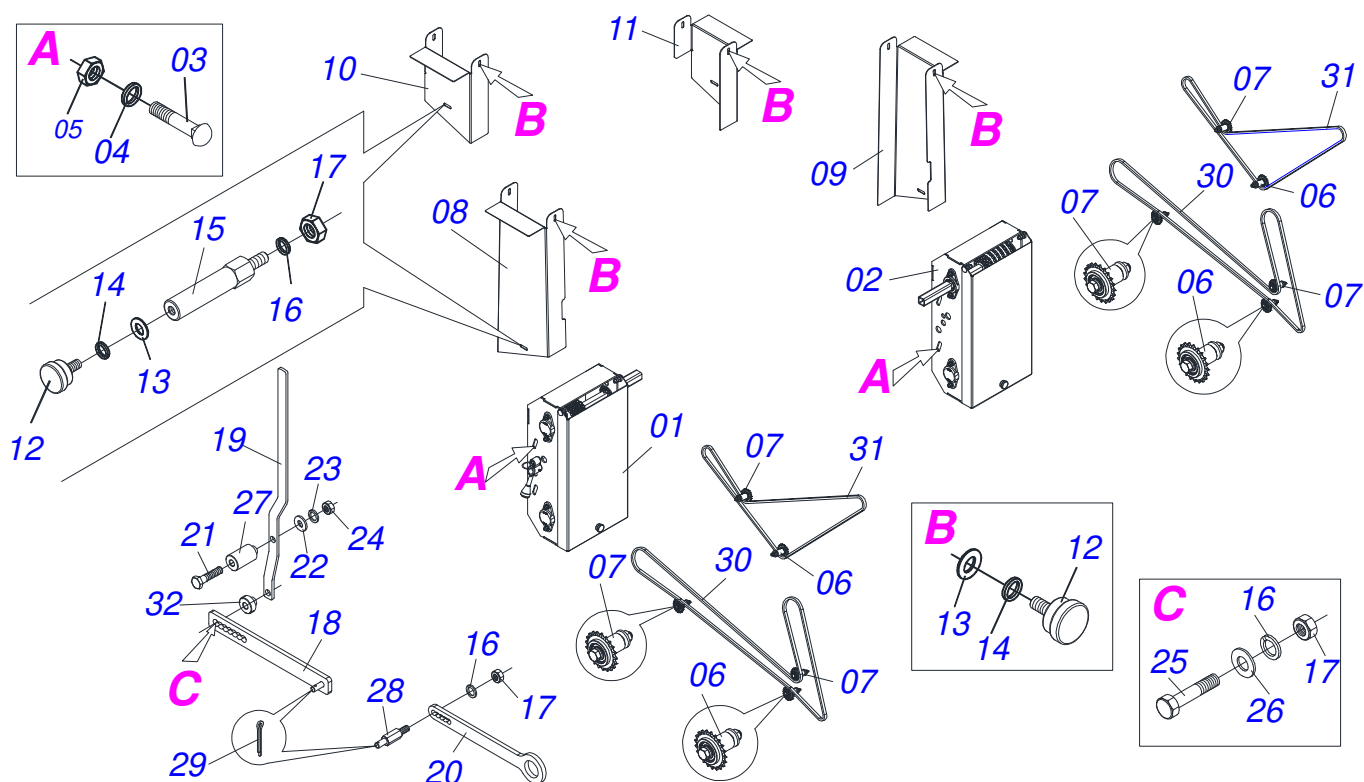


Item	Code	Description	See page	QT
01	0511050397	FULL RIGHT EXCHANGE	35	01
02	0511050398	EXCHANGE FULL LEFT	36	01
03	0501011600	1/2" X 1-1/4" BOLT		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010020	1/2"NUT		08
06	0501054562	FERILIZER CHAIN TENSIONER ASSY	37	04
07	0511050652	CHAIN TENSIONER	38	06
08	0561017247	LARGER COVER		01
09	0561017246	LARGER COVER		01
10	0561017244	CARRY-WHEEL CHAIN PROTECTION		01
11	0561017245	CHAIN PROTECTION COVER		01
12	0503010386	CABLE		12
13	0501010694	FLAT WASHER		12
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		12
15	0561017963	PRISONER 3/8 X 110		04
16	0503010025	3/8 SPRING WASHER		08
17	0503010026	3/8" NUT		08
18	0521061942	LEVER GUIDE		02
19	0551019160	LEVER		02
20	0561017552	REAR ROCKER		02
21	0503010741	1/2" X 2-3/4" BOLT		02
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
23	0503010019	1/2" SPRING WASHER		02
24	0503010060	1/2 UNC G.5 ZN HEX NUT		02
25	0503011404	BOLT		02
26	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
27	0551019168	SLEEVE		02
28	0561010192	PIN LOCK RATCHET		02
29	0503010362	1/8 X 1.1/4 COTTERPIN		08
30	0503015973	40-1 CHAIN X 419 LINK + MENDING		02
31	0503015974	40-1 CHAIN X 273 LINK + MENDING		02



**SDA FLEX
TRANSMISSION**

Page 34
0909091778

Item	Code	Description	See page	QT
32	0561016797	SLEEVE UNION LEVER		02

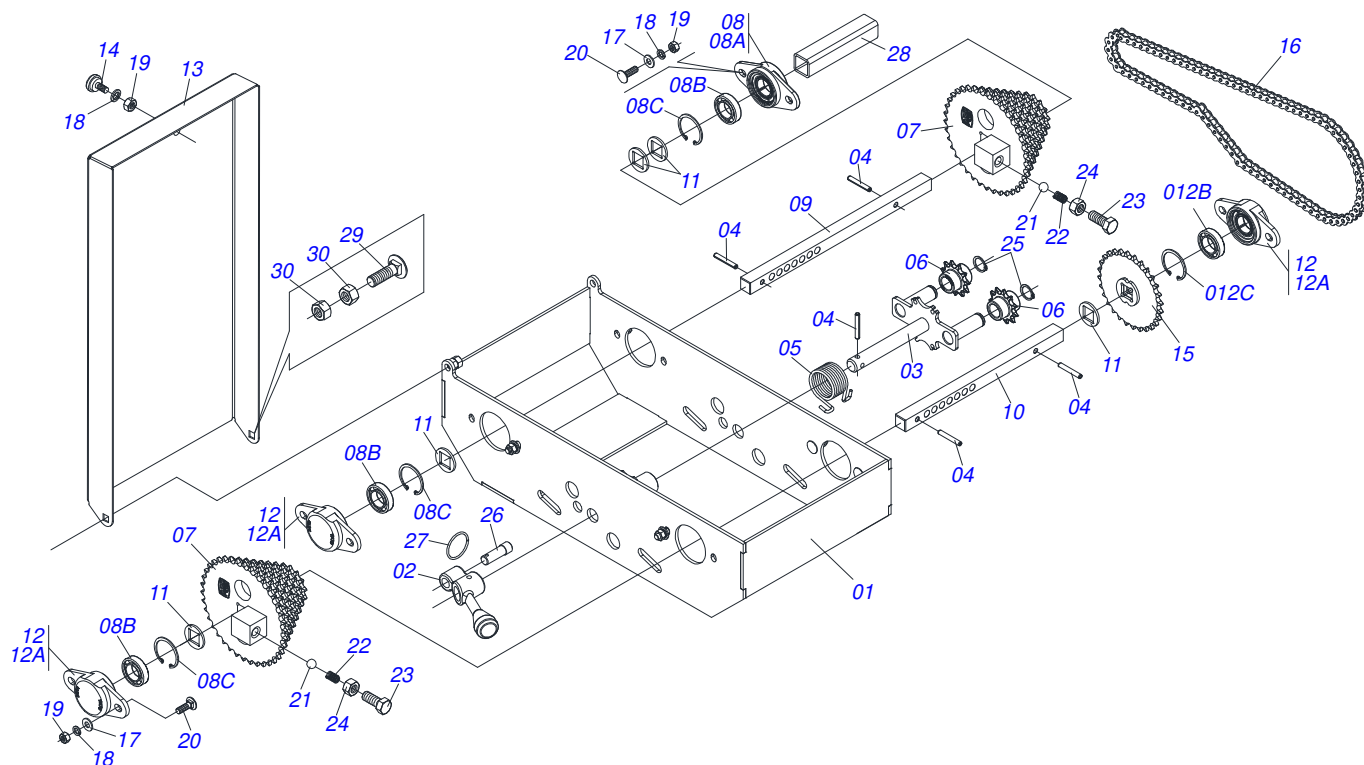


Item	Code	Description	See page	QT
001	0521061857	RIGHT GEAR BOX ASSY		01
002	0502011758	REAR TIGHTENER LEVER		01
003	0511060392	CHAIN TENSIONER		01
004	0503010292	701164 6 X 40 SPRING PIN		05
005	0503031367	SPRING		01
006	0503031805	11Z 1/2" GEAR		02
007	0511060396	DRIVE/DRIVEN SHAFT		02
008	0501056444	BEARING WITH ROLLER		01
008A	0502011697	GEARBOX BEARING		01
008B	0503013462	BEARING WITH BALL BEARING		01
008C	0503011105	SEAL RING		01
009	0561017352	GEAR BOX DRIVEN AXLE		01
010	0561017353	MOTOR SHAFT		01
011	0521018630	1.4" X SQUARE 0.8" WASHER		13
012	0501056271	GEARBOX CLOSED BEARING		03
012A	0502012310	GEAR BOX CLOSE BEARING		01
012B	0503013462	BEARING WITH BALL BEARING		01
012C	0503011105	SEAL RING		01
013	0561017206	GEAR BOX COVER		01
014	0503010386	CABLE		01
015	0511064536	28Z GEAR		01
016	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
017	0521011039	FLAT WASHER		08
018	0503011444	SPRING WASHER		09
019	0503010337	5/16" NUT		09
020	0503011953	5/16" X 1" BOLT		08
021	0503012389	1/2 BALL		02
022	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
023	0503010395	1/2" X 1-1/4" BOLT		02
024	0503010060	1/2 UNC G.5 ZN HEX NUT		02
025	0503010302	501019 SEAL RING		02



SDA FLEX
FULL RIGHT EXCHANGE

Page 35
0511050397

Item	Code	Description	See page	QT
026	0521012476	GEAR BOX LEVER AXLE		01
027	0503031369	LINK		01
028	0501018672	AXLE SLEEVE		01
029	0501010942	3/8" X 1-1/4" BOLT		02
030	0503010026	3/8" NUT		04

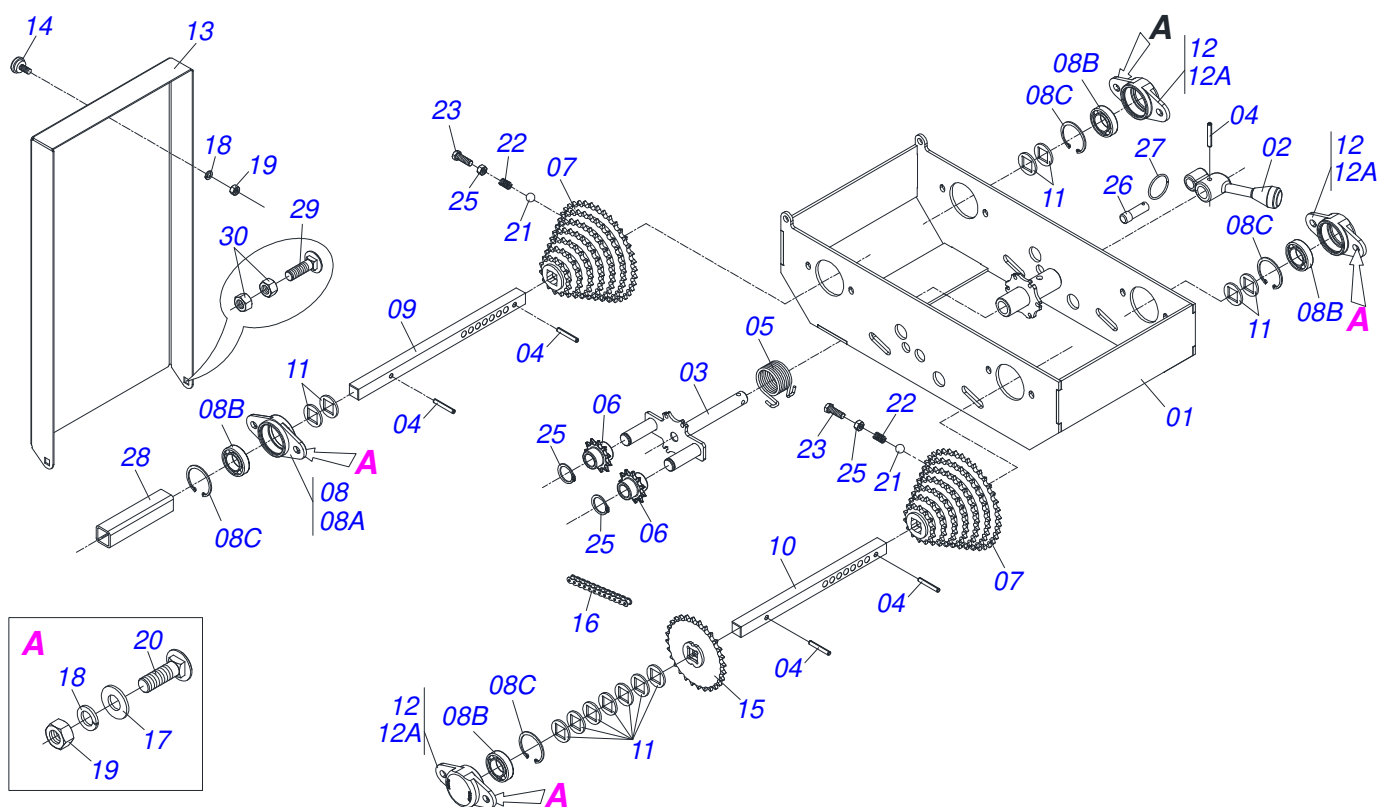


Item	Code	Description	See page	QT
001	0521061858	LEFT GEAR BOX ASSY	01	
002	0502011758	REAR TIGHTENER LEVER	01	
003	0511060392	CHAIN TENSIONER	01	
004	0503010292	701164 6 X 40 SPRING PIN	05	
005	0503031367	SPRING	01	
006	0503031805	11Z 1/2" GEAR	02	
007	0511060396	DRIVE/DRIVEN SHAFT	02	
008	0501056444	BEARING WITH ROLLER	01	
008A	0502011697	GEARBOX BEARING	01	
008B	0503013462	BEARING WITH BALL BEARING	01	
008C	0503011105	SEAL RING	01	
009	0561017352	GEAR BOX DRIVEN AXLE	01	
010	0561017353	MOTOR SHAFT	01	
011	0521018630	1.4" X SQUARE 0.8" WASHER	13	
012	0501056271	GEARBOX CLOSED BEARING	03	
013	0561017206	GEAR BOX COVER	01	
014	0503010386	CABLE	01	
015	0511064536	28Z GEAR	01	
016	0503012707	40-1 CHAIN X 96 LINK + REDUCTION	01	
017	0521011039	FLAT WASHER	08	
018	0503011444	SPRING WASHER	09	
019	0503010337	5/16" NUT	09	
020	0503011953	5/16" X 1" BOLT	08	
021	0503012389	1/2 BALL	02	
022	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING	02	
023	0503010395	1/2" X 1-1/4" BOLT	02	
024	0503010060	1/2 UNC G.5 ZN HEX NUT	02	
025	0503010302	501019 SEAL RING	02	
026	0521012476	GEAR BOX LEVER AXLE	01	
027	0503031369	LINK	01	
028	0501018672	AXLE SLEEVE	01	




SDA FLEX
EXCHANGE FULL LEFT

Page 36
0511050398

Item	Code	Description	See page	QT
029	0501010942	3/8" X 1-1/4" BOLT		02
030	0503010026	3/8" NUT		04

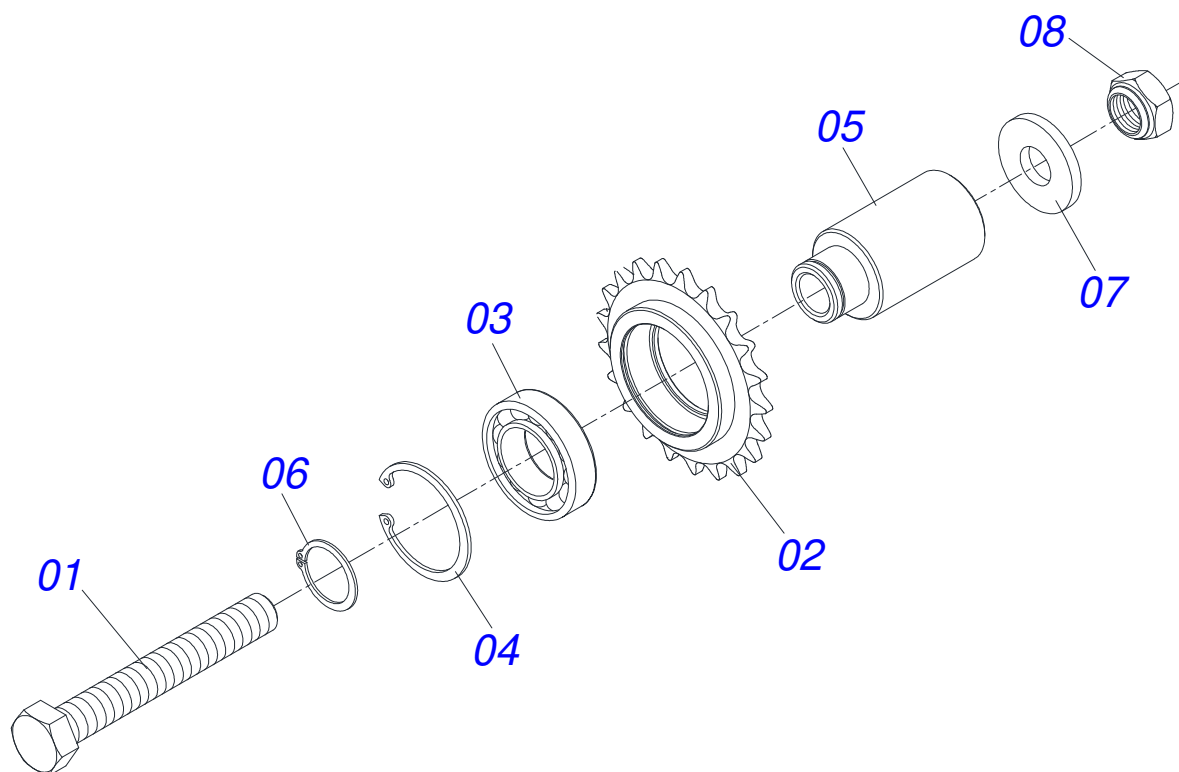


Item	Code	Description	See page	QT
001	0503010796	5/8" X 4-1/4" BOLT		01
002	0511062169	21Z P 1/2" GEAR		01
003	0503011410	ROLLER BEARING		01
004	0503011105	SEAL RING		01
005	0531018515	CHAIN SLEEVE TENSIONER		01
006	0503010406	501025 CLAMPING RING (FOR AXLE)		01
007	0501012140	FLAT WASHER		01
008	0503012412	5/8" UNC SELF LOCKING NUT		01

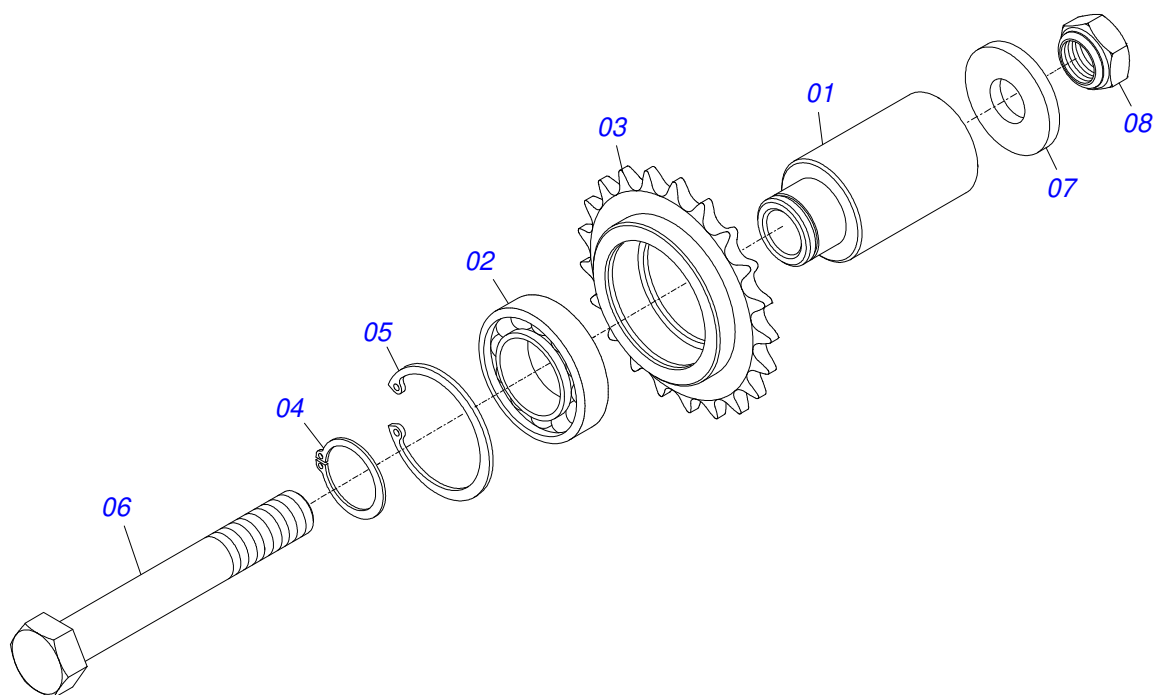


Item	Code	Description	See page	QT
01	0551019171	CHAIN TIGHTENER AXLE		01
02	0503011410	ROLLER BEARING		01
03	0511062169	21Z P 1/2" GEAR		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0503011105	SEAL RING		01
06	0501011027	5/8" X 3-3/4" BOLT		01
07	0571010265	16.5 X 40 X 3 FLAT WASHER		01
08	0503012412	5/8" UNC SELF LOCKING NUT		01

1.5" X 2.5" X 19" X 9" HYDRAULIC CYLINDER

0511040203

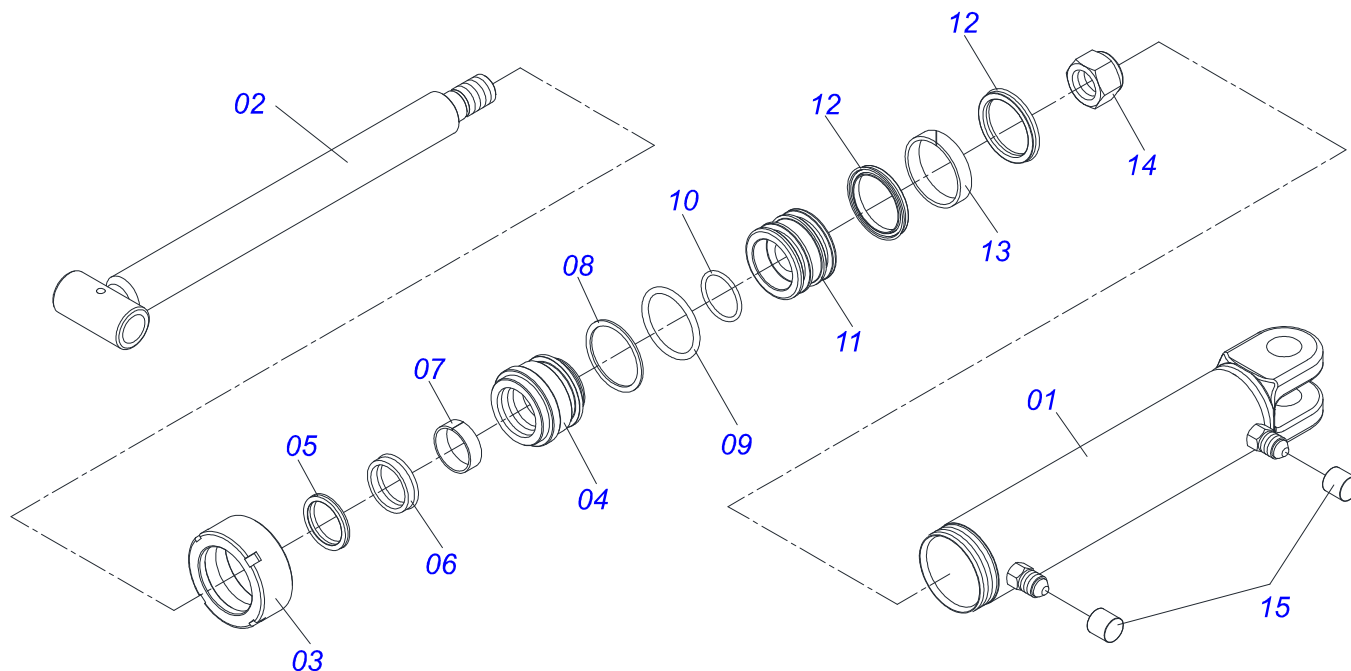


Item	Code	Description	See page	QT
01	0511062810	2.5" X 15" CYLINDER CASE		01
02	0501065662	HYDRAULIC CYLINDER TURNBUCKLE		01
03	0502010471	63,50 MOBILE CAP		01
04	0502010780	RING SUPPORT		01
05	0503010163	D-1500 SCRAPER RING		01
06	0503010989	1870-1500-375-B GASKET		01
07	0503010970	W1-1650-500 PK O'RING G.E		01
08	0503011058	8-330 BACK-UP RING		01
09	0503010161	2-330 N 3006 9B O'RING		01
10	0503010285	2-222 N 3006-9B O'RING		01
11	0502010783	1.5" X 2.5" PISTON		01
12	0503010160	2500 2000 GASKET		02
13	0503010973	W2-2500-500 PK O'RING G.E		01
14	0503010063	1" SELF-ALIGNING NUT		01
15	0503030384	CON PLUG N-001		02
16	0501032666	HYDRAULIC CYLINDER REPAIR KIT		01

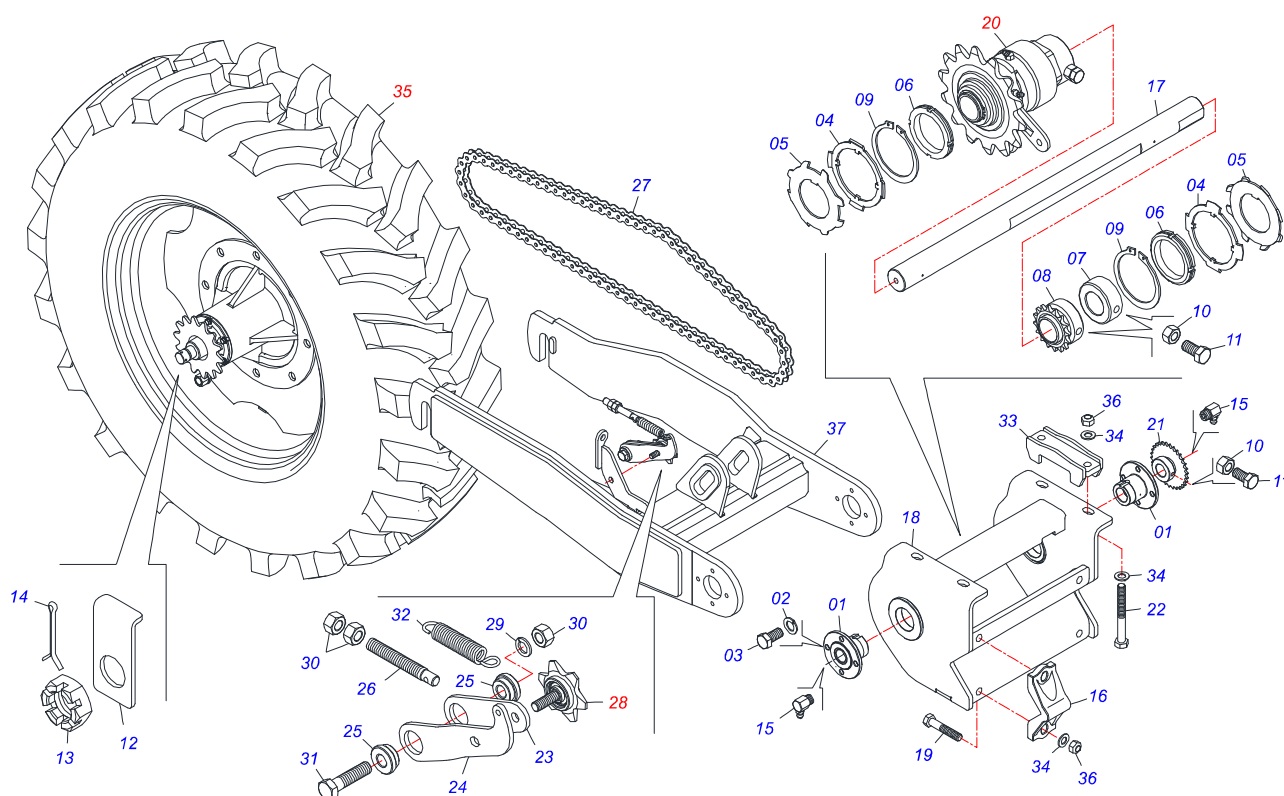


Item	Code	Description	See page	QT
01	0501110627	WHEEL PIVOT BEARING	02	
02	0503010019	1/2" SPRING WASHER	08	
03	0503010834	1/2 X 1 BOLT	08	
04	0561013022	BEARING EXTERNAL LOCK	02	
05	0561013021	BEARING INNER LOCK	02	
06	0561013020	KM 12 NUT	02	
07	0511015961	LOCK BUSHING	01	
08	0521061883	CARRYING-WHEELS DRIVER GEAR	01	
09	0503010398	501082 CLAMPING RING (FOR AXLE)	02	
10	0503010060	1/2 UNC G.5 ZN HEX NUT	03	
11	0503010395	1/2" X 1-1/4" BOLT	03	
12	0531015109	WHEEL AXLE LOCK	02	
13	0503011052	1.1/4" X 0.77" CASTLE NUT	02	
14	0503010067	3/16" X 2.1/2" COTTER PIN	02	
15	0503010004	1890 GREASE FITTING	02	
16	0502012330	SUPPORT FIXER PIVOT	02	
17	0561019591	MOTOR AXLE 34.93 X 595	01	
18	0521064619	RIGHT WHEEL SUPPORT	01	
19	0503010797	3/4" X 4" BOLT	04	
20	0511050684	ASSY LEFT TRANSMISSION DRIVER	01	
21	0521063359	DRIVER GEAR	01	
22	0503012729	3/4" X 6-3/4" BOLT	04	
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT	01	
24	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPORT	01	
25	0531016916	SLEEVE BEARING SUPPORT	02	
26	0501013491	5/8" TENSIONER SPRING	01	
27	0503014887	2050 CHAIN X 80 LINK + REDUCTION	01	
28	0501053522	WHEEL CHAIN TENSIONER	01	
29	0503010027	5/8 SPRING WASHER	01	
30	0503010013	5/8 NUT	03	
31	0503010233	5/8" X 2-1/2" BOLT	01	

Item	Code	Description	See page	QT
32	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
33	0521065139	CLAMP UPPER		02
34	0501010941	FLAT WASHER		12
35	0511056604	WHEEL TIRE BOX WHEELED COMPLETE LARGER	45	01
36	0503011255	3/4" LOCK NUT		08
37	0521065124	RIGHT WHEEL FORK		01

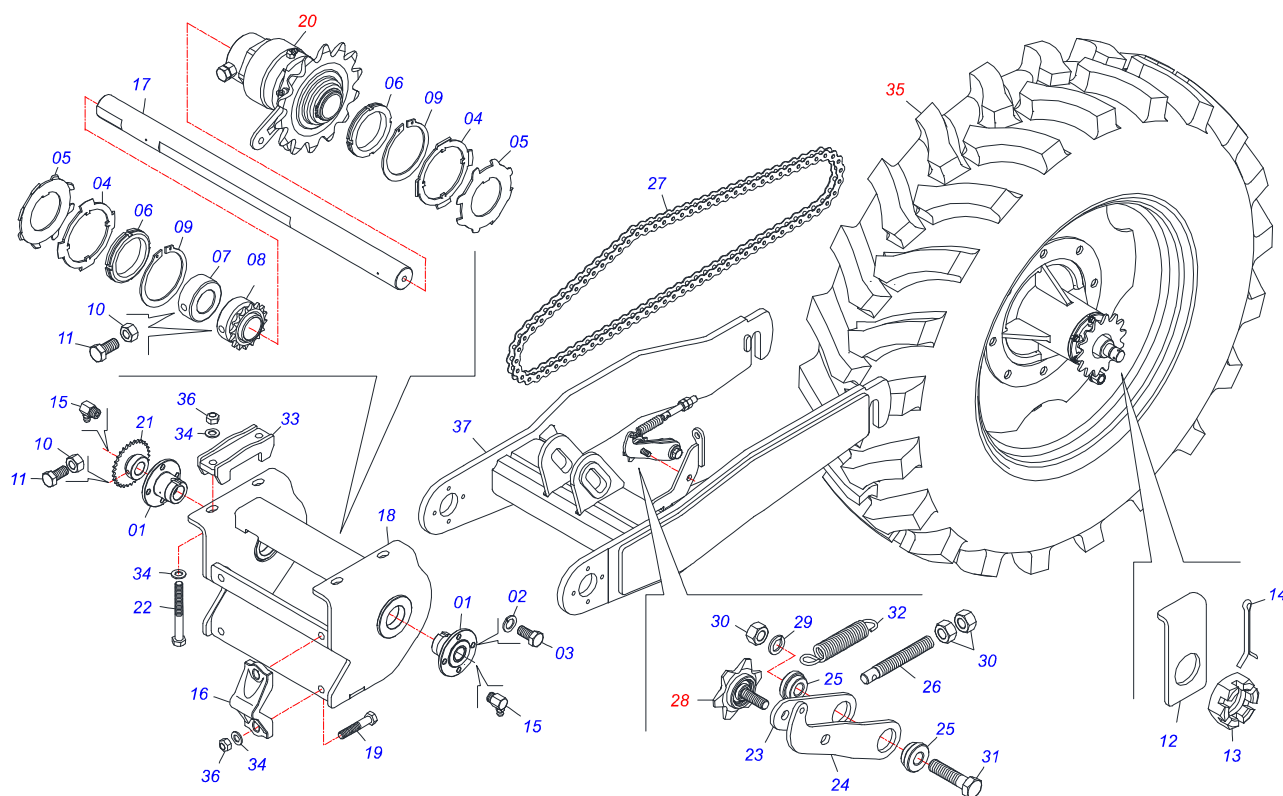

Item	Code	Description	See page	QT
01	0501110627	WHEEL PIVOT BEARING		02
02	0503010019	1/2" SPRING WASHER		08
03	0503010834	1/2 X 1 BOLT		08
04	0561013022	BEARING EXTERNAL LOCK		02
05	0561013021	BEARING INNER LOCK		02
06	0561013020	KM 12 NUT		02
07	0511015961	LOCK BUSHING		01
08	0521061883	CARRYING-WHEELS DRIVER GEAR		01
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0503010060	1/2 UNC G.5 ZN HEX NUT		03
11	0503010395	1/2" X 1-1/4" BOLT		03
12	0531015109	WHEEL AXLE LOCK		02
13	0503011052	1.1/4" X 0.77" CASTLE NUT		02
14	0503010067	3/16" X 2.1/2" COTTER PIN		02
15	0503010004	1890 GREASE FITTING		02
16	0502012330	SUPPORT FIXER PIVOT		02
17	0561019591	MOTOR AXLE 34.93 X 595		01
18	0521064620	LEFT WHEEL SUPPORT		01
19	0503010797	3/4" X 4" BOLT		04
20	0511050683	ASSY RIGHT TRANSMISSION DRIVER	15	01
21	0521063359	DRIVER GEAR		01
22	0503012729	3/4" X 6-3/4" BOLT		04
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0531018654	CHAIN TIGHTENER SUPPORT		01
25	0531016916	SLEEVE BEARING SUPPORT		02
26	0501013491	5/8" TENSIONER SPRING		01
27	0503014887	2050 CHAIN X 80 LINK + REDUCTION		01
28	0501053522	WHEEL CHAIN TENSIONER		01
29	0503010027	5/8 SPRING WASHER		01
30	0503010013	5/8 NUT		03
31	0503010233	5/8" X 2-1/2" BOLT		01

Item	Code	Description	See page	QT
32	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
33	0521065139	CLAMP UPPER		02
34	0501010941	FLAT WASHER		12
35	0511056604	WHEEL TIRE BOX WHEELED COMPLETE LARGER	45	01
36	0503011255	3/4" LOCK NUT		08
37	0521065125	LEFT WHEELED FORK		01

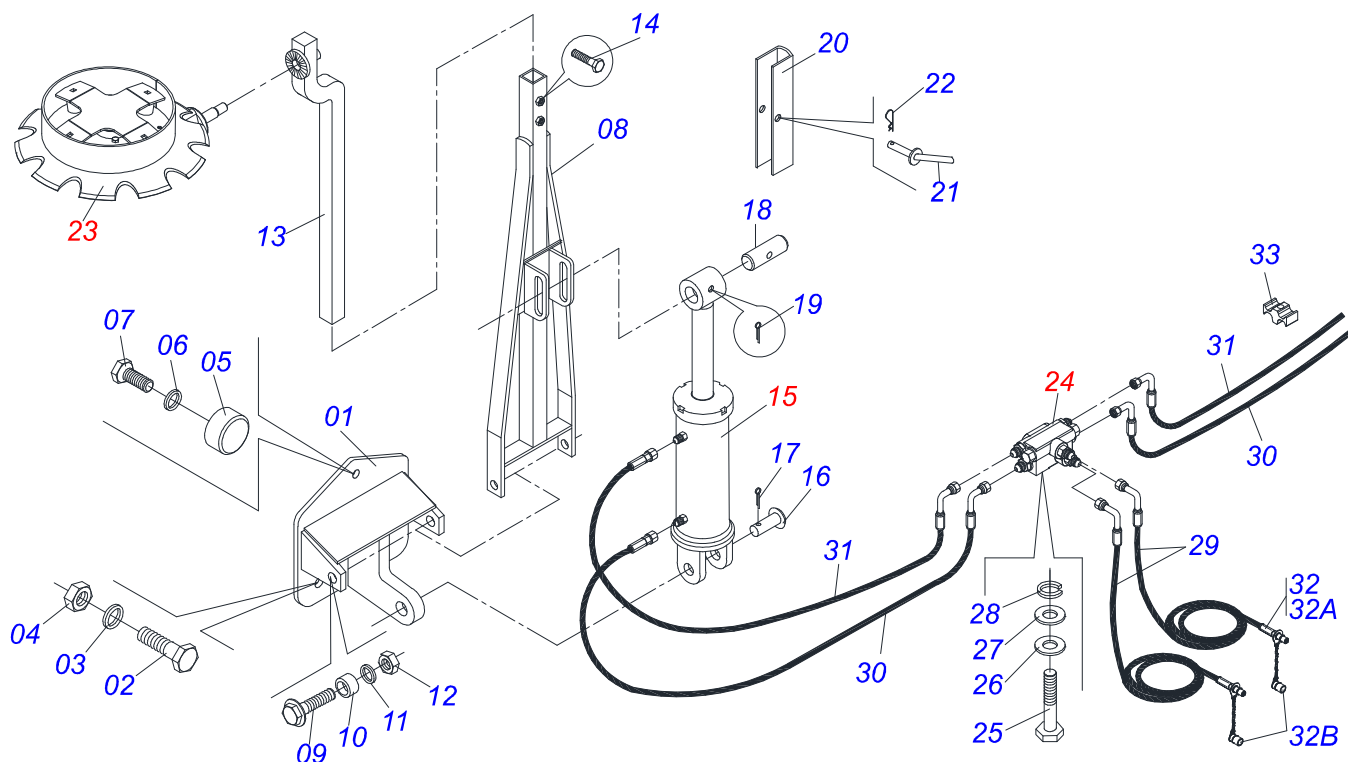


Item	Code	Description	See page	QT
01	0511065449	ROW MARKER ARM SUPPORT		02
02	0503010901	3/4UNC 3.1/2 BOLT		08
03	0503010023	3/4" SPRING WASHER		08
04	0503011255	3/4" LOCK NUT		08
05	0503011070	BEATER		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
08	0511061811	ROW MARKER ARM		02
09	0503011067	5/8" X 2-1/2" BOLT		04
10	0521010479	SLEEVE ARTICULATION		04
11	0501012140	FLAT WASHER		04
12	0503012795	5/8" HEX SELF ADJUSTING NUT		04
13	0501069643	890 TURNBUCKLE		02
14	0503011267	5/8 UNC X 1.1/2 C S G.5 ZN BOLT		04
15	0511040203	1.5" X 2.5" X 19" X 9" HYDRAULIC CYLINDER	39	02
16	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
17	0503010571	1/4" X 1.1/2 COTTERPIN		02
18	0511015779	1" X 4.2" AXLE		02
19	0503010523	1/4" X 2" SPLIT PIN		02
20	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
21	0501068994	8,30 X 78 LOCK PIN		02
22	0503030168	HITCH PIN CLIP		02
23	0501054886	ROW MARKER DISC	43	02
24	0501054649	HBM SEQUENTIAL VALVE		01
25	0503010371	5/16" X 1" BOLT		02
26	0501010694	FLAT WASHER		02
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
28	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
29	0501080528	3/8 X 3700 TR-TM HOSE		02
30	0501080724	3/8" X 4700 TR-TC HOSE ASSY		02
31	0501081093	3/8" X 188.9" TR-TC HOSE ASSY		02




SDA FLEX
ROW MARK SET

Page 42
0511054754


Item	Code	Description	See page	QT
32	0501053834	MALE QUICK COUPLER	47	02
32A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
32B	0503011882	MALE QUICK COUPLER CAP		01
33	0502012702	BODY SUPPORT CLAMP		12

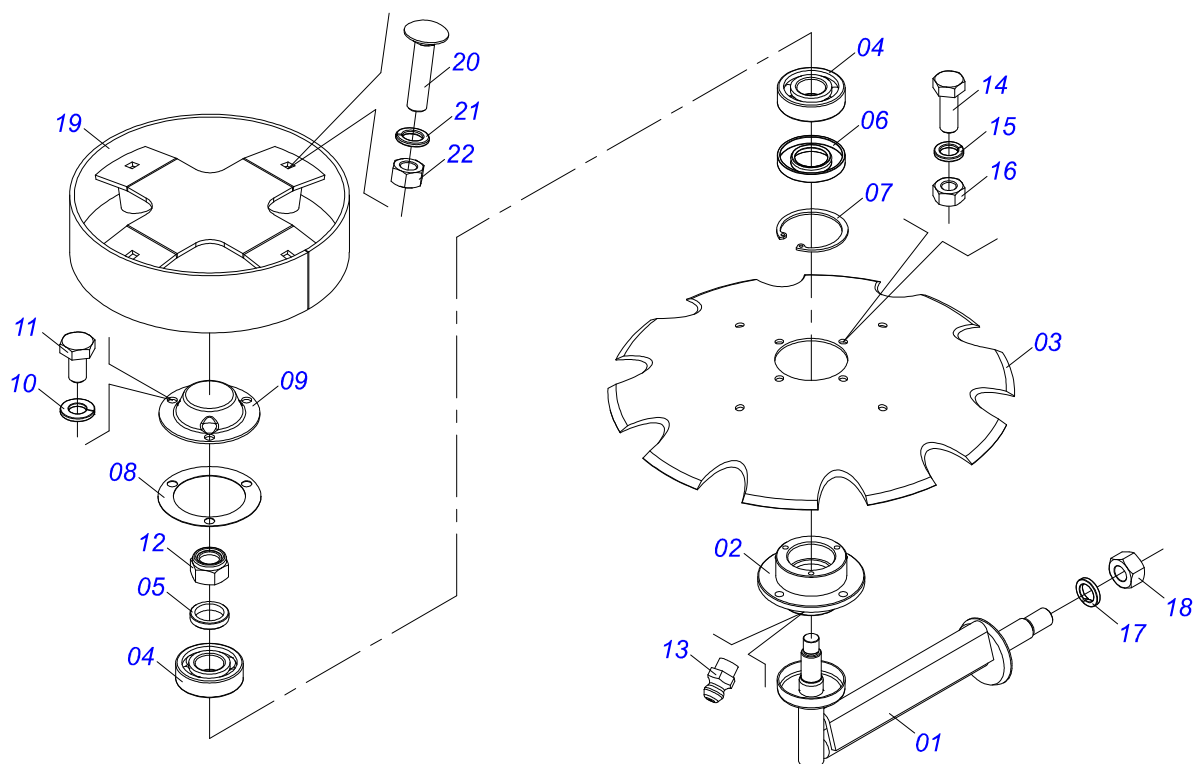


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY	01	
02	0502011907	DEPTH CONTROL WHEEL HUB	01	
03	0602023094	DR16X3 C36AFPAFR73+4FR+4FR D474 10R	01	
04	0503010269	6204 BALL BEARING	02	
05	0501013636	SPACING SLEEVE	01	
06	0503010689	SEAL 00763-BR	01	
07	0503011105	SEAL RING	01	
08	0503030757	2.9" X 2" X 0.02" JOINT	01	
09	0521019178	PROTECTION LID	01	
10	0503011441	SPRING WASHER	03	
11	0503014729	1/4" UNF X 1/2" BOLT	03	
12	0503010878	5/8" SELF ALIGNING NUT	01	
13	0503010691	1/4" GREASE FITTING	01	
14	0503010358	5/16" X 5/8" BOLT	04	
15	0503011444	SPRING WASHER	04	
16	0503010337	5/16" NUT	04	
17	0503810023	PRESSURE WASHER	01	
18	0503010014	3/4" HEX NUT	01	
19	0501069226	ROW MARKER ROD STOP	01	
20	0501011778	3/8" X 2-1/2" BOLT	04	
21	0503011443	3/8" SPRING WASHER	04	
22	0503010026	3/8" NUT	04	

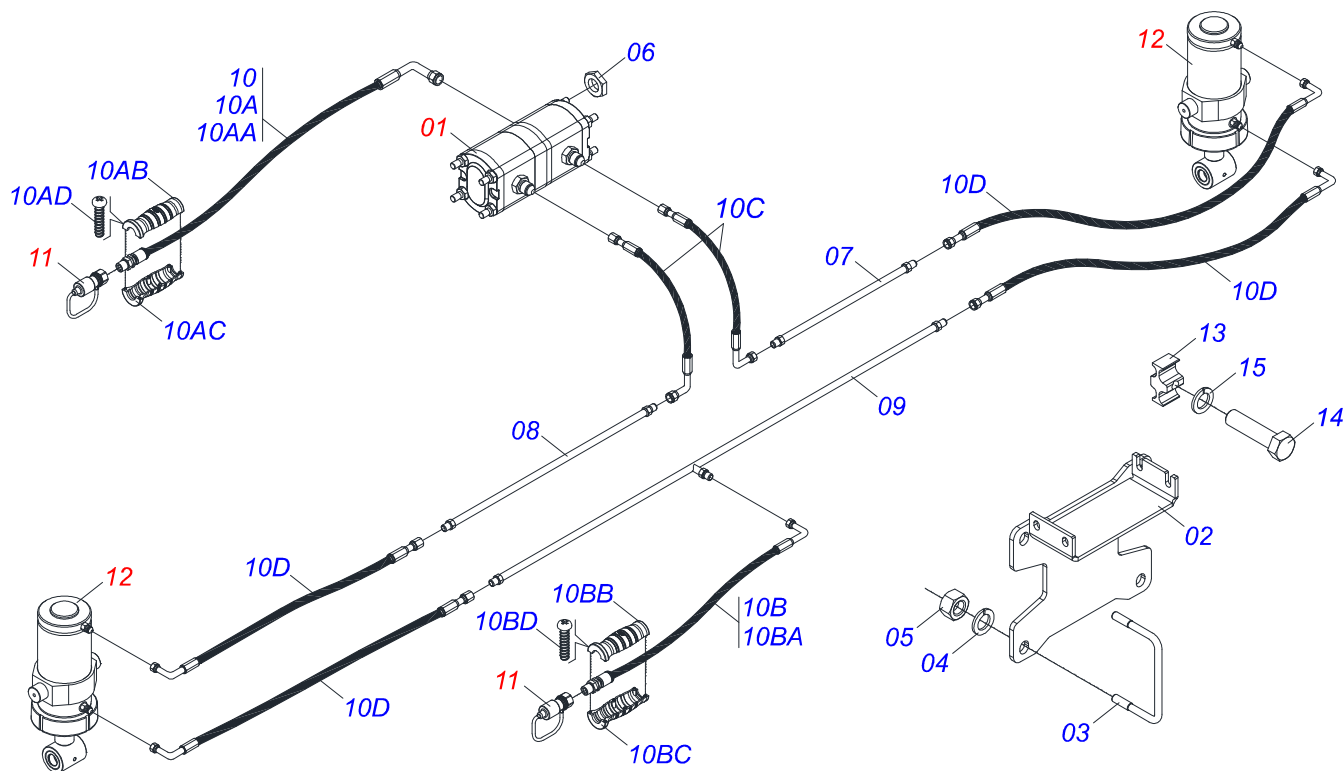


Item	Code	Description	See page	23	29
01	0501057301	FLOW DIVIDING VALVE	46	01	01
02	0521064937	VALVE SUPPORT		01	01
03	0503033709	CATCH HEAD LINSEED SEEDS		02	02
04	0503010027	5/8 SPRING WASHER		04	04
05	0503010013	5/8 NUT		04	04
06	0503011051	M10 X 0.6" NUT		04	04
07	0521061992	2450 OIL TUBE		01	00
07.	0521062585	OIL DISTRIBUTOR DUCT 2975		00	01
08	0521061994	1770 OIL TUBE		01	00
08.	0521062586	DUCT OIL DISTRIBUTOR 2295		00	01
09	0521061995	4320 OIL TUBE		01	00
09.	0521062584	DUCT OIL DISTRIBUTOR 5370		00	01
10	0511057178	HYDRAULIC SYSTEM HOSE SET		01	01
10A	0521052601	HOSE 1/2 X 4200 TC-TM BLACK/RED		01	01
10AA	0501081073	HOSE 1/2 X 4200 TC-TM		01	01
10AB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01	01
10AC	0503034495	HYDRAULIC HOSE GRIP (RED)		01	01
10AD	0503018952	PLASTIC BOLT		06	06
10B	0521052600	HOSE 1/2 X 4200 TC-TM BLACK/BLUE		01	01
10BA	0501081073	HOSE 1/2 X 4200 TC-TM		01	01
10BB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01	01
10BC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01	01
10BD	0503018952	PLASTIC BOLT		06	06
10C	0501080191	3/8" X 18" TC-TC HOSE ASSY		02	02
10D	0501080599	3/8 X 650 TR-TC HOSE		04	04
11	0501053834	MALE QUICK COUPLER	47	02	02
12	0521044560	HYDRAULIC CYLINDER	20	02	02
13	0502012702	BODY SUPPORT CLAMP		04	04
14	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04	04
15	0503010180	7/16" SPRING WASHER		04	04

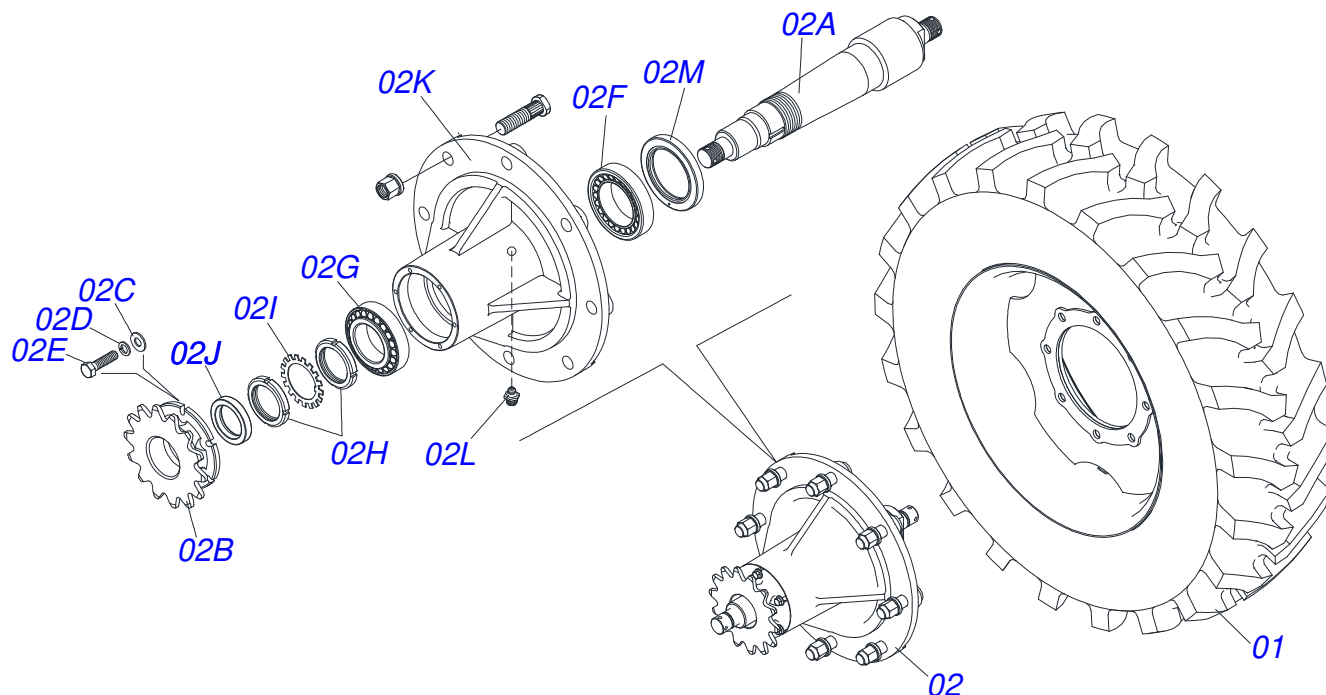


Item	Code	Description	See page	QT
01	0511056603	WHEEL WITH TIRE 14.9 X 28 COMPLETE BIGGER		01
02	0511055847	COMPLETE WHEELED BOX		01
02A	0571016841	WHEEL AXLE 490		01
02B	0502012177	14Z FLANG GEAR		01
02C	0501010694	FLAT WASHER		06
02D	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
02E	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
02F	0503010059	33287/33462 ROLLER BEARING		01
02G	0503010007	3982/3920 ROLLER BEARING		01
02H	0503012702	KM-12 NUT		02
02I	0503012703	LOCK WASHER		01
02J	0503010528	SEAL # 00838-B		01
02K	0501110792	ROLLED BOX WITH SCREW		01
02L	0503010002	1800 GREASE FITTING		01
02M	0503013106	SEAL 00085-B		01

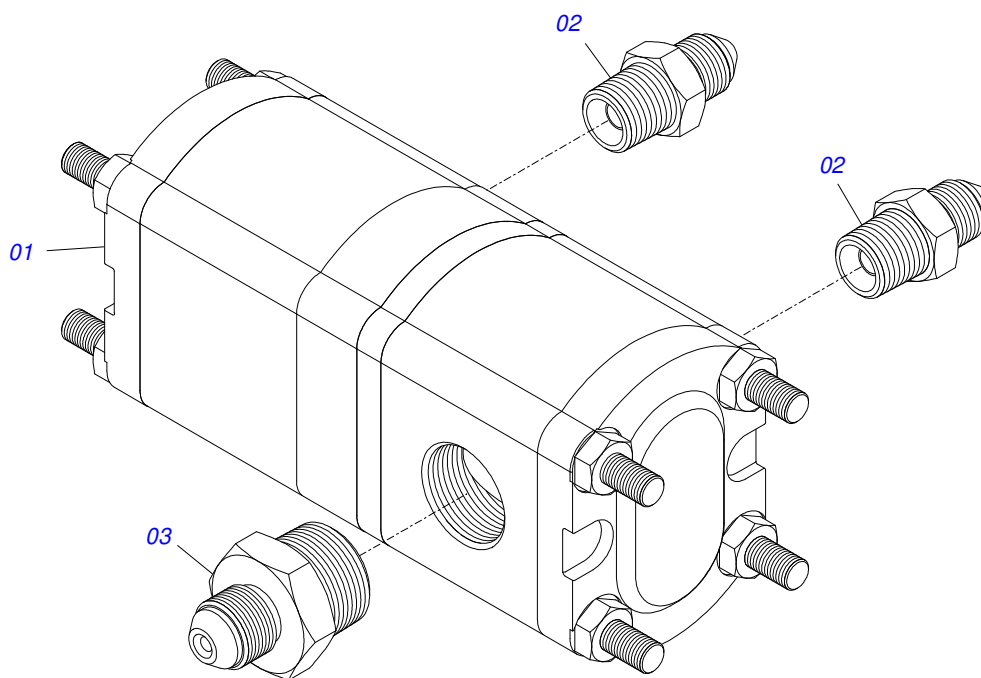

Item	Code	Description	See page	QT
01	0503013791	DOUBLE MOTOR		01
02	0551012463	1/2" BSPT X 3/4" UNF X 51 NIPPLE		02
03	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE		01

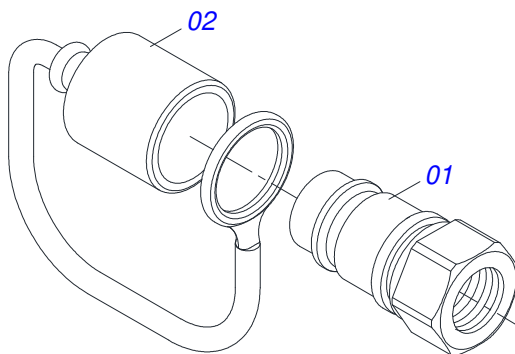

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

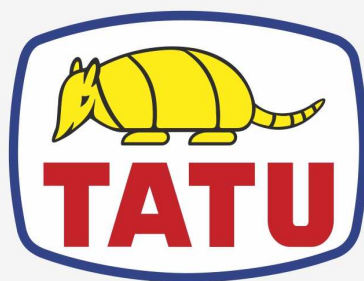

MARCHESAN

Technical Publications | Elaboration and Revision

JOSÉ DOMINGOS GASPARI

www.marchesan.com.br

