

ROW CROP PLANTERS

COP CA SUPREMA P.P - FRAME 3300/4300 - CSU

Code: 0501091696
Series: S-0915
Revision: 00
Date Revision: FEVEREIRO/2023

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111310023	COP CA SUP PP 3300/7E500 MH MTH PP CSU PM400 S0915
0111310025	COP CA SUP PP 3300/7E500 MH MTH PP CSU S-0915
0111310020	COP CA SUP PP 4300/8E560 MH MTH PP CSU S-0915
0111310028	COP CA SUP PP 4300/9E500 CSU MTH PP PM400 S-0915
0111310032	COP CA SUP PP 4300/9E500 ESPECIAL S-0915
0111310024	COP CA SUP PP 4300/9E500 ESPECIAL S-0915
0111310018	COP CA SUP PP 4300/9E500 MH CSU MTH PP PM400 S0915
0111310021	COP CA SUP PP 4300/9E500 MH MTH PP CSU S-0915
0111310019	COP CA SUP PP 4300/9E500 MH SPCRR MTH PP CSU S0915
0111310029	COP CA SUP PP 4300/9E500 MTH PP CSU S-0915

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX

0909091805	ASSY FRAME	1
0501059662	CONJUNTO RODADO DIREITO SEMI MONTADO	2
0501059663	SET WHEELED LEFT SEMI MOUNTED	3
0501048672	CHAIN TIGHTENER ASSY	4
0501059655	HUB CARRYING-WHEELS	5
0501053522	WHEEL CHAIN TENSIONER	6
0511055725	TRANSMISSION ASSEMBLY	7
0511053899	TRANSMISSION ASSEMBLY	8
0511053898	SET OF INTERNAL TRANSMISSION	9
0511053897	TRANSMISSION ASSEMBLY	10
0511040424	RH TRANSMISSION DRIVING ASSY	11
0501049265	LH TRANSMISSION DRIVING ASSY	12
0511048348	RIGHT GEAR BOX ASSY	13
0511048349	RIGHT GEAR BOX ASSY	14
0511050639	RIGHT GEAR BOX ASSY	15
0501058212	SEMI MOUNTED RIGHT CHANGE	16
0501058213	LH GEAR BOX	17
0501048790	AXLE WITH RING	18
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	19
0501056443	GEAR HOUSING BEARING	20
0501056444	BEARING WITH ROLLER	21
0501056271	GEARBOX CLOSED BEARING	22
0501054655	CHAIN TENSIONER ASSY	23
0501054686	GEAR BOX CHAIN TENSIONER	24
0501052788	CHAIN TIGHTENER ASSY	25
0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	26
0501053846	MIDDLE BEARING OF THE TRANSMISSION	27
0501052775	ROW SEED BEARING	28
0511053918	FERTILIZER BOX ASSEMBLY	29
0511053892	FERTILIZER BOX ASSEMBLY	30
0511051077	SUPPORT RIGHT BOX FERTILIZER WITH DISTRIBUTOR	31
0511051078	SUPPORT LEFT BOX FERTILIZER WITH DISTRIBUTOR	32
0501059656	FERTILIZER SUPORT RIGHT BOX	33
0501059657	FERTILIZER SUPORT LEFT BOX	34
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	35
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	36
0501053788	3/4 SQUARE AXLE FASTENER	37
0511053919	HYDRAULIC ASSEMBLY	38
0511053893	HYDRAULIC ASSEMBLY	39
0511053894	HYDRAULIC CYLINDER ASSEMBLY	40
0511058411	HYDRAULIC CYLINDER	41
0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	42
0501054452	FLOW DIVIDING VALVE	43
0511052909	HYDRAULIC MARKER	44
0511058449	HYDRAULIC CYLINDER	45
0501054649	HBM SEQUENTIAL VALVE	46
0511052197	WHEELS HOSE ASSEMBLY	47
0501053834	MALE QUICK COUPLER	48
0501050633	ROW MARKER DISC ASSEMBLY	49
0511053904	ROW MARKER DISC	50
0511053920	OIL PIPE ASSEMBLY	51
0511053895	OIL DUCT ASSEMBLY	52
0511053917	PLATFORM ASSEMBLY	53
0511053891	PLATFORM ASSEMBLY	54
0511053916	HANDRAIL ASSEMBLE	55



MARCHESAN

INDEX

0511053889	HANDRAIL ASSEMBLE	56
0511053890	HANDRAIL ASSEMBLE	57
0511053085	ASSY FIXER HEADER	58
0511043100	DRAWBAR ASSY	59
0511058192	ASSY PORT MANUAL INSTRUCCION	60
0511058191	REST ASSY	61
0511053886	HEXAGONAL AXLE ASSEMBLY	62
0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	63
0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	64
0511058101	ASSEMBLY CSU C3 SEMI MOUNTED 4045/4495	65
0521050112	ASSEMBLY CSU	66
0511058100	2 HOPPERS WITH 9 CONDUCTORS SET	67
0511057690	3" ARTICULATED SEED CONDUCTOR	68
0521050110	ASSEMBLY CSU	69
0521050109	ASSEMBLY CSU	70
0521051927	TOWER SUPPORT HOPPER	71
0501055579	DRAWBAR ESTABILIZER	72
0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER	73
0511056393	PLANTING OF MONITORING ASSEMBLY	74
0521053443	MONITORING ASSEMBLY PLANTING SEEDS 07L PM400	75
0511059709	SUPPOT BASE	76
0511053915	HEXAGONAL SHAFT ASSEMBLY	77
0521041586	TURBINE ASSY CARDAN	78
0511059720	TURBINE ASSEMBLY	79
0521053717	TURBINE SET 3300 CSU	80
0511059725	TURBINE P.P	81
0511059406	TURBINE P.P MOUNTED	82
0521050154	PRECISION PLANTING TURBINE WITH HOLE	83
0501053716	BEARING ASSY OF THE LARGER FAN	84
0501053886	PULLEY ASSY WITH FREE ROT	85
0521044612	FAN	86
0511059319	AIR FIXING SUPPORT	87
0511057906	HOSE ASSY	88
0511057840	ASSY TURBINE HOSE REAR	89
0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	90
0531053837	4 MOUTH AIR CONDUCTOR 1363	91
0511058368	EAR MOVABLE	92
0511053887	WHEEL FIXING ASSY	93
0909091808	SEED/FERTILIZER ROW ASSY	94
0501059838	SHORT SEED ROW FRONT	95
0501059837	SHORT SEED ROW FRONT	96
0511052740	LONG SEED ROW FRONT	97
0511052741	LONG FRONT SEED ROW	98
0511054635	BEARING AXLE BODY	99
0511054884	TRANSMISSION BOX	100
0511050609	BEARING WITH 17Z GEAR ASSY	101
0511050610	SEED ROW CHAIN TENSIONER ASSY	102
0511050617	FRONT SEED ROW BEARING	103
0511055260	SEED ROW CHAIN TENSIONER	104
0511052426	TRANSMISSION CARDAN ASSY	105
0511052742	TRANSMISSION HUB ASSY	106
0511052389	BEARING DOUBLE FRONT ROW SEED	107
0511053825	SEMI-ASSEMBLED SHORT FERTILIZER LINE	108
0511053826	SEMI-ASSEMBLED LONG FERTILIZER LINE	109
0511048339	24" BLADE DISC ASSY	110




MARCHESAN

INDEX

0511057186	20 CUTTING DISC	111
0501057526	DISC HUB	112
0511058648	HUB WITH 20" DISC BLADE	113
0511056909	DISC BLADE HUB WITHOUT DISC	114
0521045198	PRESS WHEELS	115
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	116
0521051424	WHEEL SYSTEM DEPTH/COMPACTOR QUICK ADJUSTMENT	117
0501052627	ASSY DEPTH WHEEL HUB	118
0501052297	DEPTH WHEELS REGULATOR ASSY	119
0501052538	DEPTH BAND WITH ARMS	120
0511054333	COMPACT WHEEL RIGHT WITH BEARING	121
0511054334	COMPACT WHEEL LEFT WITH BEARING	122
0511058650	SEMI-MOUNTED DEPTH CONTROL	123
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	124
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	125
0501056769	DEPTH WHEELS REGULATOR ASSY	126
0521051423	COMPACTOR SUPPORT	127
0501052908	COMPACTOR WHEEL WITH BEARING	128
0511050077	WHEEL STRIPED	129
0511052287	DEPTH WHEEL HUB ASSY	130
0501059631	DDD SEED 15 X 15 RIGHT	131
0501059632	DDD SEED 15X15 LEFT	132
0501054167	15" RIGHT OPENING DISC HUB	133
0501054168	15" LEFT DOUBLE DISC HUB	134
0511052301	SUPPORT DDD 15 RIGHT	135
0511052302	LH SUPPORT DDD GUIDE	136
0521050331	RIGHT REAR SUPREME	137
0511059724	REAR RIGHT	138
0521050330	SUPREME LEFT REAR SUPREME	139
0511059723	REAR LEFT	140
0511057502	SET PRECISION PLANTING	141
0511057155	PRECISION PLANTING LEFT TRANSMISSION HOPPER	142
0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN DISC	143
0521052131	DISTRIBUTOR VSET2 WITH CORN DISK WITHOUT PROTECTION	144
0511057154	RIGHT DDD	145
0511057153	DDD LEFT SUPREMA PRECISION PLANTING	146
0511053172	LEFT LOW CUBE WITH DISC 15	147
0511053173	CUBE LOW RIGHT WITH DISC 15	148
0501058972	ASSEMBLY SENSOR ELECTRONIC	149
0521052549	CLAMP	150
0521050525	FIXER FERTILIZER CONDUCTOR	151

ASSY FRAME

0909091805

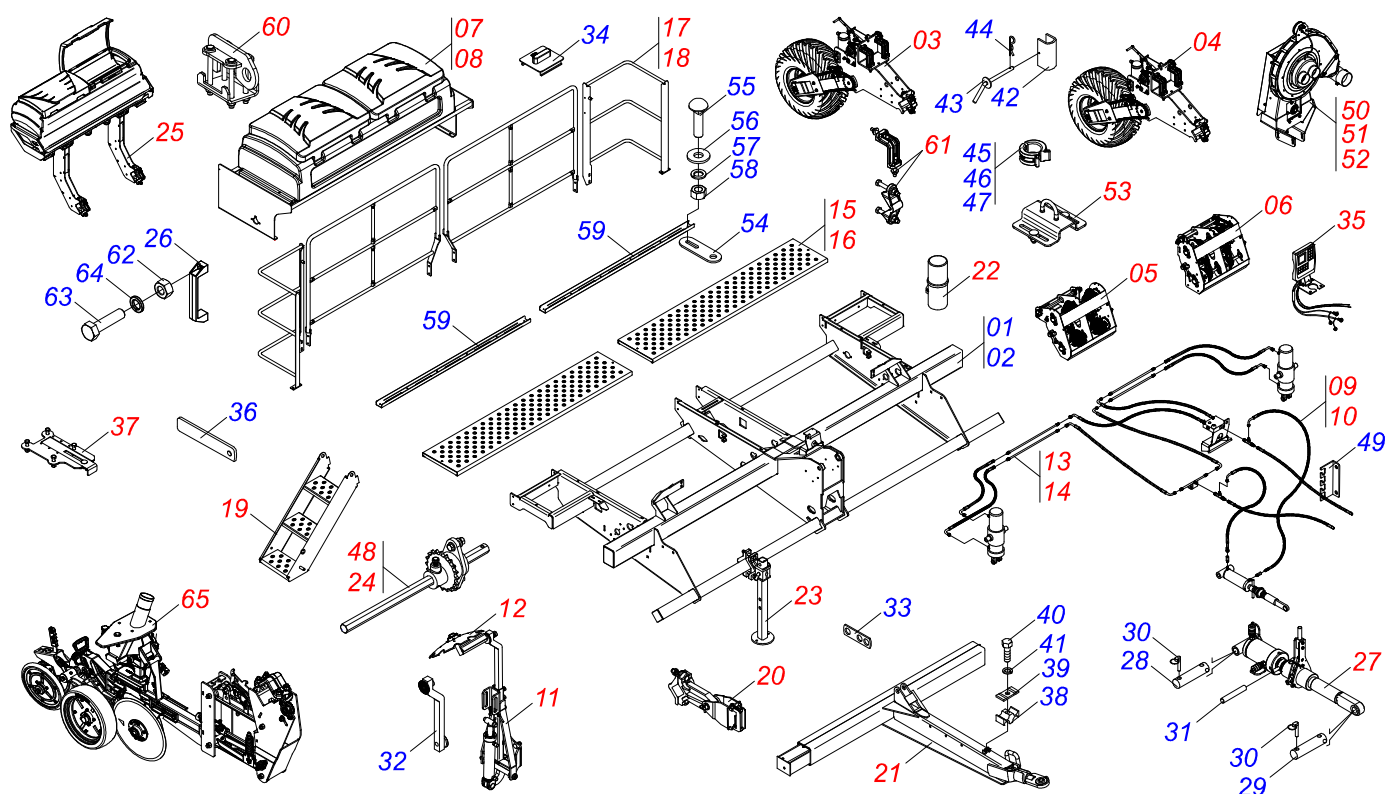


Item	Code	Description	See page	3300	4300
01	0521062422	FRAME		01	00
02	0521061323	FRAME		00	01
03	0501059662	CONJUNTO RODADO DIREITO SEMI MONTADO	2	01	01
04	0501059663	SET WHEELED LEFT SEMI MOUNTED	3	01	01
05	0511055725	TRANSMISSION ASSEMBLY	7	01	00
06	0511053899	TRANSMISSION ASSEMBLY	8	00	01
07	0511053918	FERTILIZER BOX ASSEMBLY	29	02	00
08	0511053892	FERTILIZER BOX ASSEMBLY	30	00	02
09	0511053919	HYDRAULIC ASSEMBLY	38	01	00
10	0511053893	HYDRAULIC ASSEMBLY	39	00	01
11	0511052909	HYDRAULIC MARKER	44	01	01
12	0501050633	ROW MARKER DISC ASSEMBLY	49	01	01
13	0511053920	OIL PIPE ASSEMBLY	51	01	00
14	0511053895	OIL DUCT ASSEMBLY	52	00	01
15	0511053917	PLATFORM ASSEMBLY	53	01	00
16	0511053891	PLATFORM ASSEMBLY	54	00	01
17	0511053916	HANDRAIL ASSEMBLE	55	01	00
18	0511053889	HANDRAIL ASSEMBLE	56	00	01
19	0511053890	HANDRAIL ASSEMBLE	57	02	02
20	0511053085	ASSY FIXER HEADER	58	02	02
21	0511043100	DRAWBAR ASSY	59	01	01
22	0511058192	ASSY PORT MANUAL INSTRUCCION	60	01	01
23	0511058191	REST ASSY	61	01	01
24	0511053886	HEXAGONAL AXLE ASSEMBLY	62	01	01
25	0511058101	ASSEMBLY CSU C3 SEMI MOUNTED 4045/4495	65	00	01
25.	0521050112	ASSEMBLY CSU	66	01	00
26	0503011957	NYLON LUG		02	02
27	0501055579	DRAWBAR ESTABILIZER	72	01	01
28	0521010639	COUPLING SHAFT		01	01
29	0521018531	1.4" X 4.5" COUPLING SHAFT		01	01
30	0503030085	LOCK PIN		02	02

ASSY FRAME


0909091805

Item	Code	Description	See page	3300	4300
31	0521018501	TURNBUCKLE LEVER		01	01
32	0511066652	400 TURNBUCKLE		02	02
33	0561019087	DRAWBAR TRANSPORT LOCK		01	01
34	0503032624	FERTILIZER HOPPER GUTTER		06	06
35	0511056393	PLANTING OF MONITORING ASSEMBLY	74	00	01
35.	0521053443	MONITORING ASSEMBLY PLANTING SEEDS 07L PM400	75	01	00
36	0511015627	SEED DISC LEVER		01	01
37	0511059709	SUPPOT BASE	76	09	09
38	0502012702	BODY SUPPORT CLAMP		03	03
39	0531011180	UPPER BODY CLIP		01	01
40	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04	04
41	0503010180	7/16" SPRING WASHER		04	04
42	0521013022	TRANSPORT LOCK		02	02
43	0501068994	8,30 X 78 LOCK PIN		02	02
44	0503030168	HITCH PIN CLIP		02	02
45	0501047885	30 ROD STOP		03	03
46	0501047886	35 ROD STOP		03	03
47	0501047887	40 ROD STOP		03	03
48	0511053915	HEXAGONAL SHAFT ASSEMBLY	77	01	01
49	0541014576	HOSE FIXER ASSY		01	01
50	0521041586	TURBINE ASSY CARDAN	78	01	01
51	0511059720	TURBINE ASSEMBLY	79	01	01
51.	0521053717	TURBINE SET 3300 CSU	80	01	00
52	0511059725	TURBINE P.P	81	01	01
53	0511059323	PLATFORM TRANSPORT SUPPORT		04	04
54	0571018663	SUPPORT GUTTER		00	08
55	0501011643	3/8 X 1"BOLT		00	08
56	0501010984	10,50 X 27 X 3,00 FLAT WASHER		00	08
57	0503010025	3/8 SPRING WASHER		00	08
58	0503010026	3/8" NUT		00	08
59	0571019693	GUN 25 X 58 X 800		00	04
59.	0571018391	GUTTER 25 X 58 X 1200		02	00
60	0511058368	EAR MOVABLE	92	02	02
61	0511053887	WHEEL FIXING ASSY	93	01	00
62	0503010337	5/16" NUT		04	04
63	0503010371	5/16" X 1" BOLT		04	04
64	0503010179	LOCK WASHER 5/16 ZN 1K01528		04	04
65	0909091808	SEED/FERTILIZER ROW ASSY	94	07	09

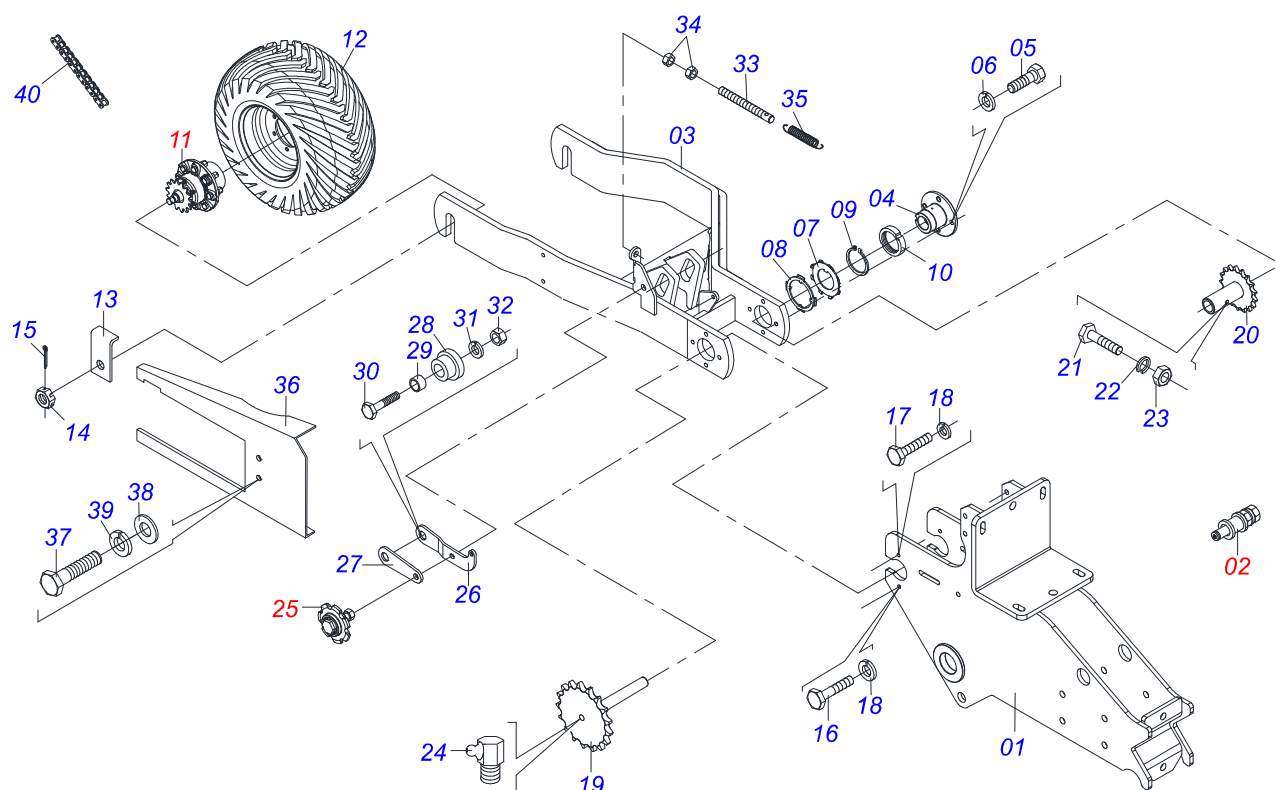

Item	Code	Description	See page	QT
01	0511065423	WHEEL SUPPORT		01
02	0501048672	CHAIN TIGHTENER ASSY	4	01
03	0521061337	RIGHT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOCK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0501059655	HUB CARRYING-WHEELS	5	01
12	0503060602	400/60 X 15,5-14L RODA		01
13	0531015109	WHEEL AXLE LOCK		02
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010523	1/4" X 2" COTTERPIN		02
16	0503010834	1/2 X 1 BOLT		03
17	0503010395	1/2" X 1-1/4" BOLT		01
18	0503010019	1/2" SPRING WASHER		04
19	0511064769	15Z GEAR WITH AXLE		01
20	0511061809	15Z GEAR WITH COUPLING		01
21	0503011103	7/16" X 2-1/2" BOLT		01
22	0503010180	7/16" SPRING WASHER		01
23	0503010244	7/16" NUT		01
24	0503010004	1890 GREASE FITTING		02
25	0501053522	WHEEL CHAIN TENSIONER	6	01
26	0531018654	CHAIN TIGHTENER SUPPORT		01
27	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
28	0531016916	SLEEVE BEARING SUPPORT		02
29	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE		01
30	0503010899	5/8 UNC X 2.1/4 BOLT		01
31	0503010027	5/8 SPRING WASHER		01

Item	Code	Description	See page	QT
32	0503010013	5/8 NUT		01
33	0501013491	5/8" TENSIONER SPRING		01
34	0503010013	5/8 NUT		02
35	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
36	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
37	0501018535	1/2 X 1 BOLT		02
38	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
39	0503010019	1/2" SPRING WASHER		02
40	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01

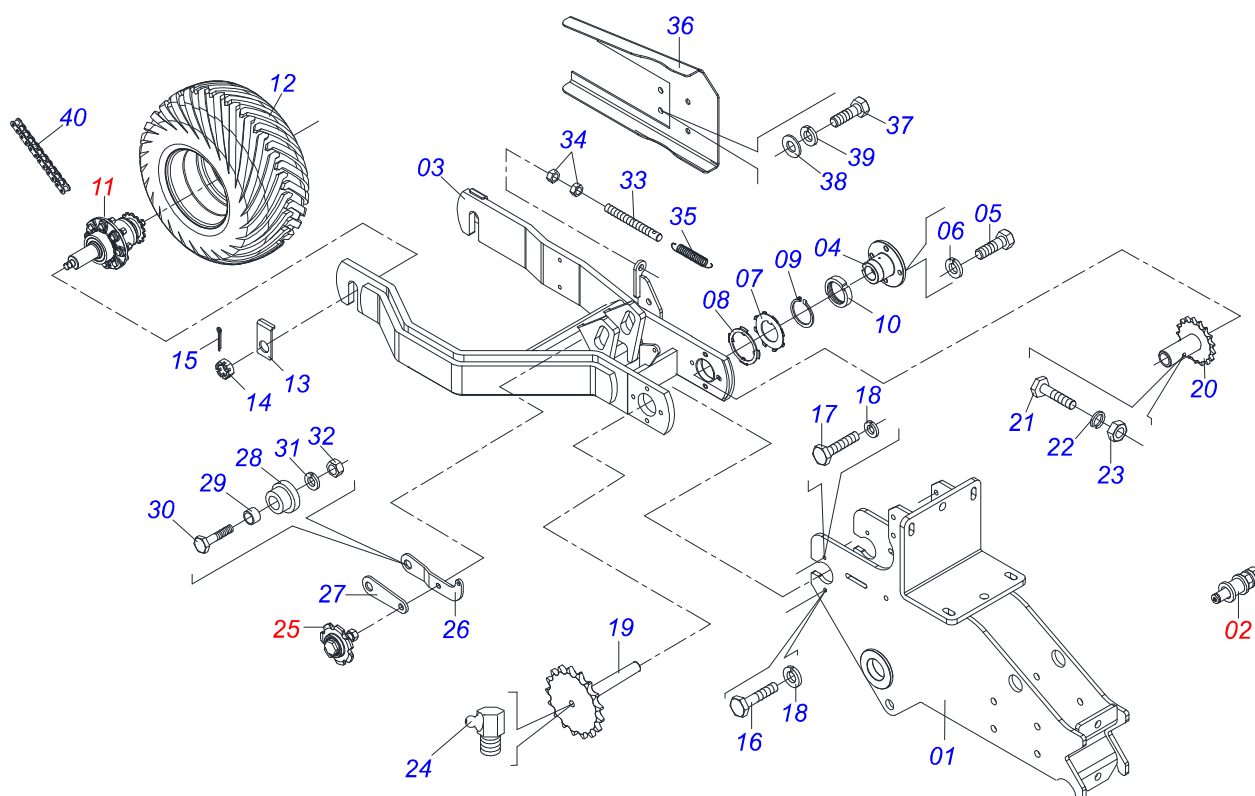


Item	Code	Description	See page	QT
01	0511065423	WHEEL SUPPORT		01
02	0501048672	CHAIN TIGHTENER ASSY	4	01
03	0521061338	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL		02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOCK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0501059655	HUB CARRYING-WHEELS	5	01
12	0503060602	400/60 X 15,5-14L RODA		01
13	0531015109	WHEEL AXLE LOCK		02
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010523	1/4" X 2" COTTERPIN		02
16	0503010834	1/2 X 1 BOLT		03
17	0503010395	1/2" X 1-1/4" BOLT		01
18	0503010019	1/2" SPRING WASHER		04
19	0511064769	15Z GEAR WITH AXLE		01
20	0511061809	15Z GEAR WITH COUPLING		01
21	0503011103	7/16" X 2-1/2" BOLT		01
22	0503010180	7/16" SPRING WASHER		01
23	0503010244	7/16" NUT		01
24	0503010004	1890 GREASE FITTING		02
25	0501053522	WHEEL CHAIN TENSIONER	6	01
26	0531018654	CHAIN TIGHTENER SUPPORT		01
27	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
28	0531016916	SLEEVE BEARING SUPPORT		02
29	0511014513	1" X 0.6" X 0.4" ARTICULAT SLEEVE		01
30	0503010899	5/8 UNC X 2-1/4 BOLT		01
31	0503010027	5/8 SPRING WASHER		01

SET WHEELED LEFT SEMI MOUNTED

0501059663


Item	Code	Description	See page	QT
32	0503010013	5/8 NUT		01
33	0501013491	5/8" TENSIONER SPRING		01
34	0503010013	5/8 NUT		02
35	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
36	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
37	0501018535	1/2 X 1 BOLT		02
38	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
39	0503010019	1/2" SPRING WASHER		02
40	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01

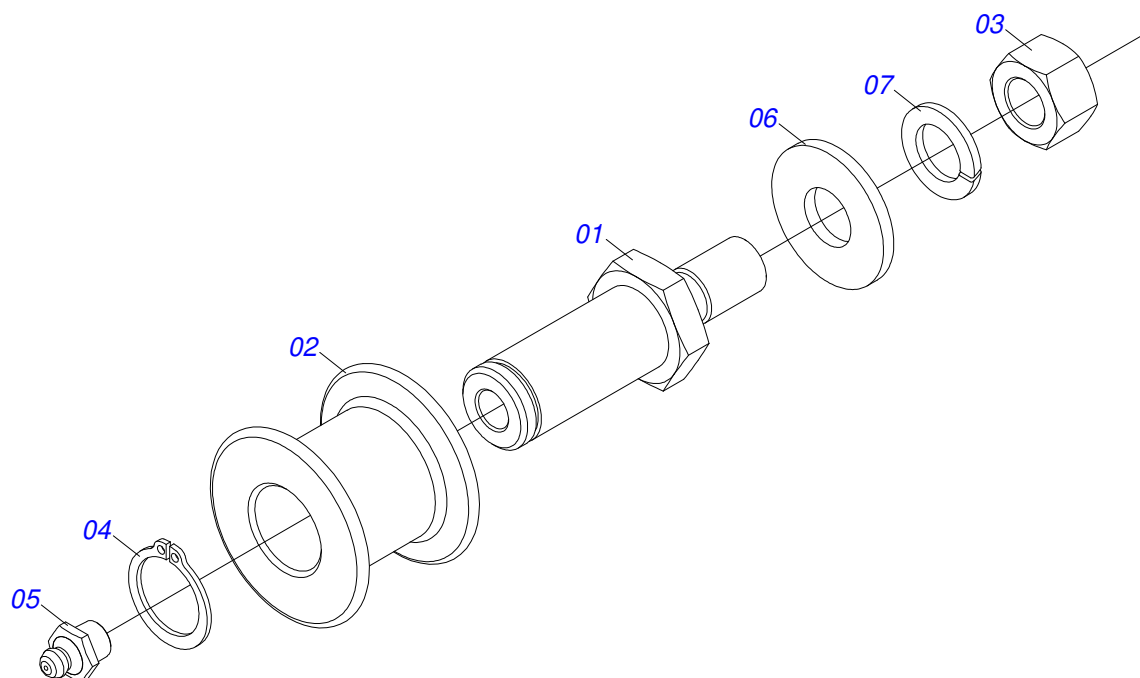


Item	Code	Description	See page	QT
01	0521012529	CHAIN TIGHTENER AXLE		01
02	0503030402	PULLEY		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0503010302	501019 SEAL RING		01
05	0503010002	1800 GREASE FITTING		01
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
07	0503010019	1/2" SPRING WASHER		01

HUB CARRYING-WHEELS


0501059655

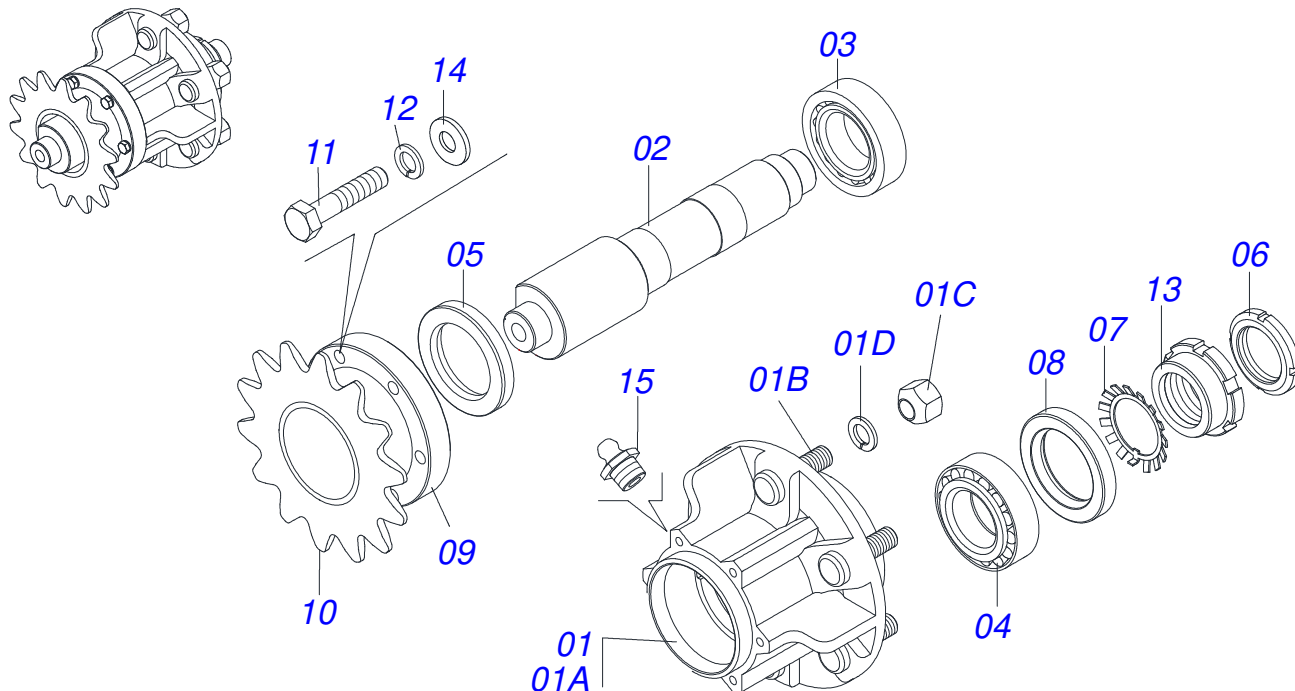


Item	Code	Description	See page	QT
01	0501110751	HUB AND SPINDLE WITH BOLT		01
01A	0502040522	HUB CARRYING-WHEELS		01
01B	0503011339	M22 X 1,5 X 72 BOLT		08
01C	0503011341	M22 X 0.6" NUT GR8		08
01D	0503011340	SPHERICAL SPRING WASHER		08
02	0561015609	WHEEL AXLE		01
03	0503010059	33287/33462 ROLLER BEARING		01
04	0503010007	3982/3920 ROLLER BEARING		01
05	0503010050	SEAL 00085-B		01
06	0503012702	KM-12 NUT		02
07	0503012703	LOCK WASHER		01
08	0503010528	SEAL # 00838-B		01
09	0551017794	PROTRACTOR GEAR		01
10	0502012177	14Z FLANG GEAR		01
11	0503010397	5/16" X 1-3/4" BOLT		06
12	0503011444	SPRING WASHER		06
13	0503011052	1.1/4" X 0.77" CASTLE NUT		02
14	0501010694	FLAT WASHER		06
15	0503010002	1800 GREASE FITTING		01

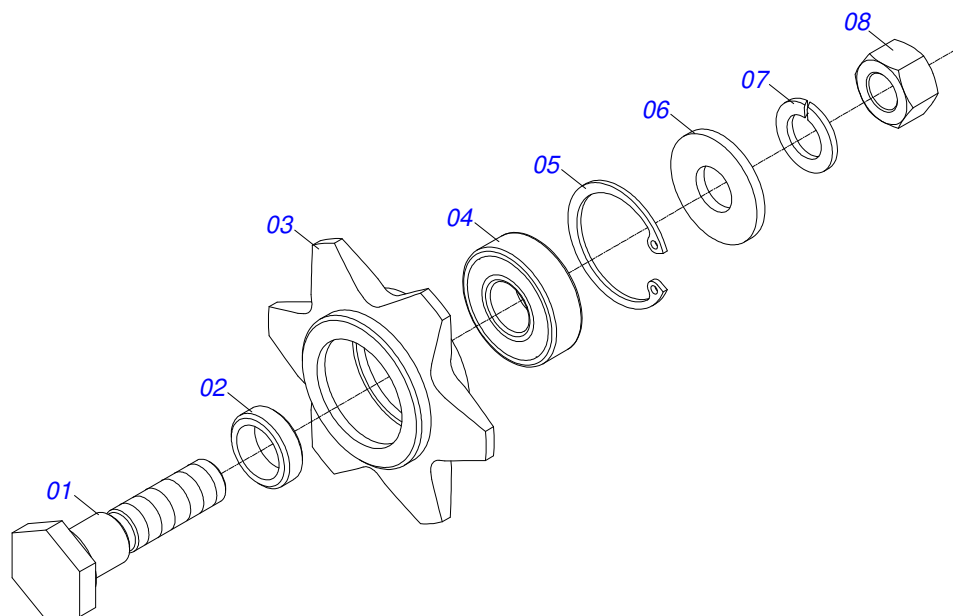


Item	Code	Description	See page	QT
01	0531012640	AXLE CHAIN TIGHTENER		01
02	0531012678	4.5" X 0.9" X 0.2" SLEEVE		01
03	0502012853	GEAR		01
04	0503012882	BEARING		01
05	0503011945	503050 CLAMPING RING (FOR AXLE)		01
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
07	0503010019	1/2" SPRING WASHER		01
08	0503010060	1/2 UNC G.5 ZN HEX NUT		01

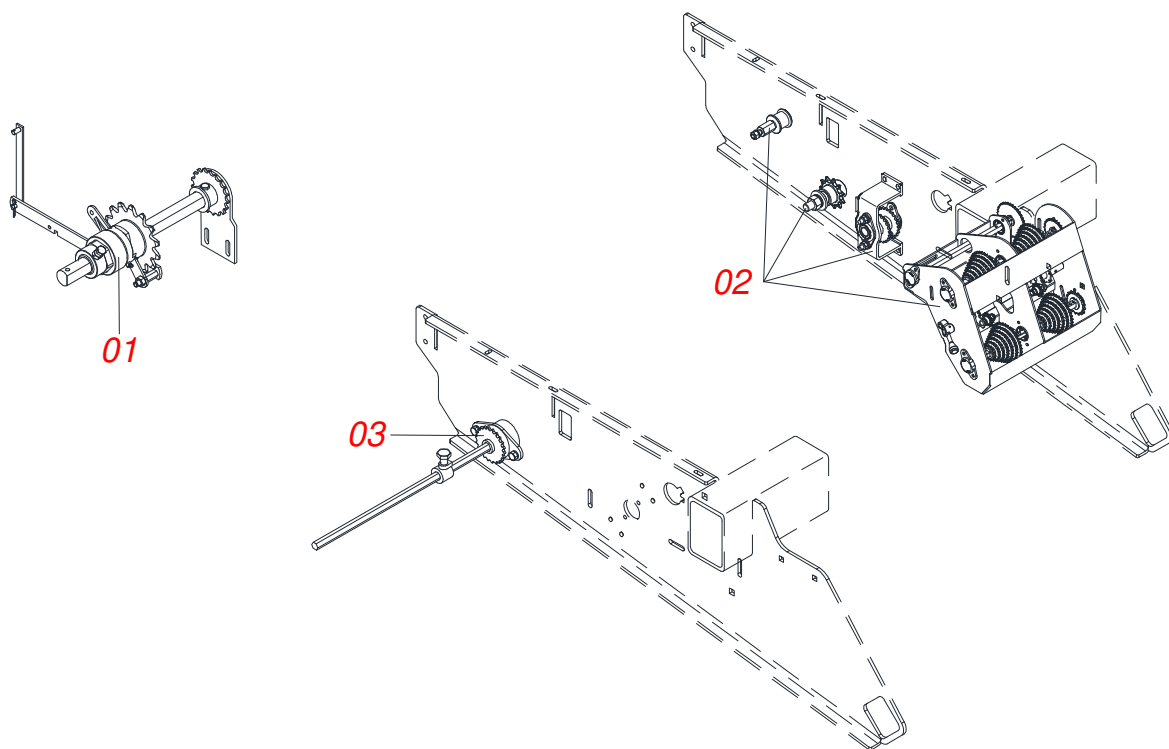

Item	Code	Description	See page	QT
01	0511053898	SET OF INTERNAL TRANSMISSION	9	01
02	0511053897	TRANSMISSION ASSEMBLY	10	01
03	0511053915	HEXAGONAL SHAFT ASSEMBLY	77	01

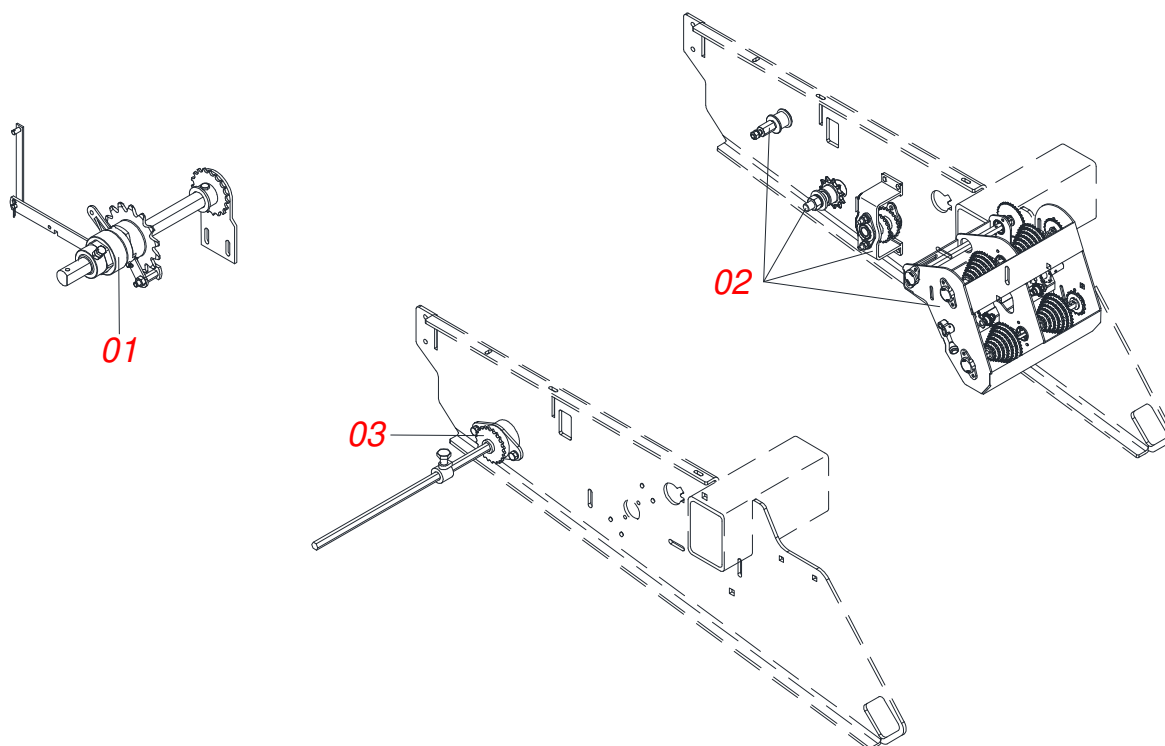

Item	Code	Description	See page	QT
01	0511053898	SET OF INTERNAL TRANSMISSION	9	01
02	0511053897	TRANSMISSION ASSEMBLY	10	01
03	0511053886	HEXAGONAL AXLE ASSEMBLY	62	01

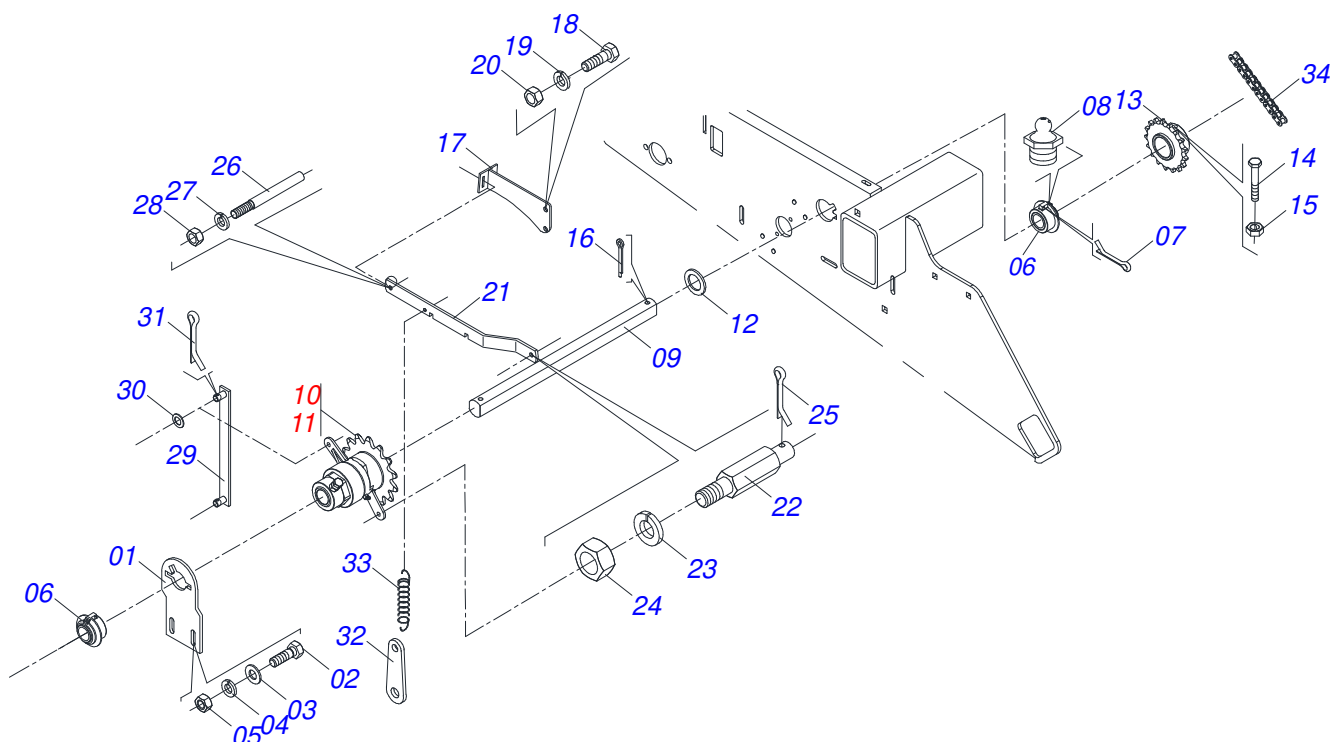


Item	Code	Description	See page	QT
01	0531019365	PLATE FIXER BEARING AXIS		02
02	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		04
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2 UNC G.5 ZN HEX NUT		04
06	0501110639	BEARING		04
07	0503010257	1/8" X 1" COTTERPIN		04
08	0503010002	1800 GREASE FITTING		04
09	0561015384	518 MOTOR SHAFT		02
10	0511040424	RH TRANSMISSION DRIVING ASSY	11	01
11	0501049265	LH TRANSMISSION DRIVING ASSY	12	01
12	0501018466	FLAT WASHER		08
13	0511064105	17Z P 5/8" RH 1.4" GEAR		02
14	0503010937	5/16" X 3" BOLT		02
15	0503010337	5/16" NUT		04
16	0503010010	1/4" X 2.1/2" COTTERPIN		02
17	0511061896	RATCHET DISMANTLE SUPPORT		02
18	0503010395	1/2" X 1-1/4" BOLT		04
19	0503010019	1/2" SPRING WASHER		04
20	0503010060	1/2 UNC G.5 ZN HEX NUT		04
21	0521018428	ASSEMBLE AND DISASSEMBLE ARM		02
22	0521015800	REAR LEVER FASTENER		02
23	0503010025	3/8 SPRING WASHER		02
24	0503010026	3/8" NUT		02
25	0503010140	1/8" X 3/4" COTTERPIN		02
26	0521018560	HANDLE LEVER		02
27	0503010019	1/2" SPRING WASHER		02
28	0503010060	1/2 UNC G.5 ZN HEX NUT		02
29	0511065949	ASSEMBLE AND DISASSEMBLE ARM		02
30	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
31	0503010140	1/8" X 3/4" COTTERPIN		04


**SET OF INTERNAL TRANSMISSION**

0511053898


Item	Code	Description	See page	QT
32	0541014046	SPRING HITCH		02
33	0503030242	0.8" X 4.7" X 0.08" TRACTION SPRING		02
34	0503012708	2050 CHAIN X 34 LINKS + REDUCTION		02

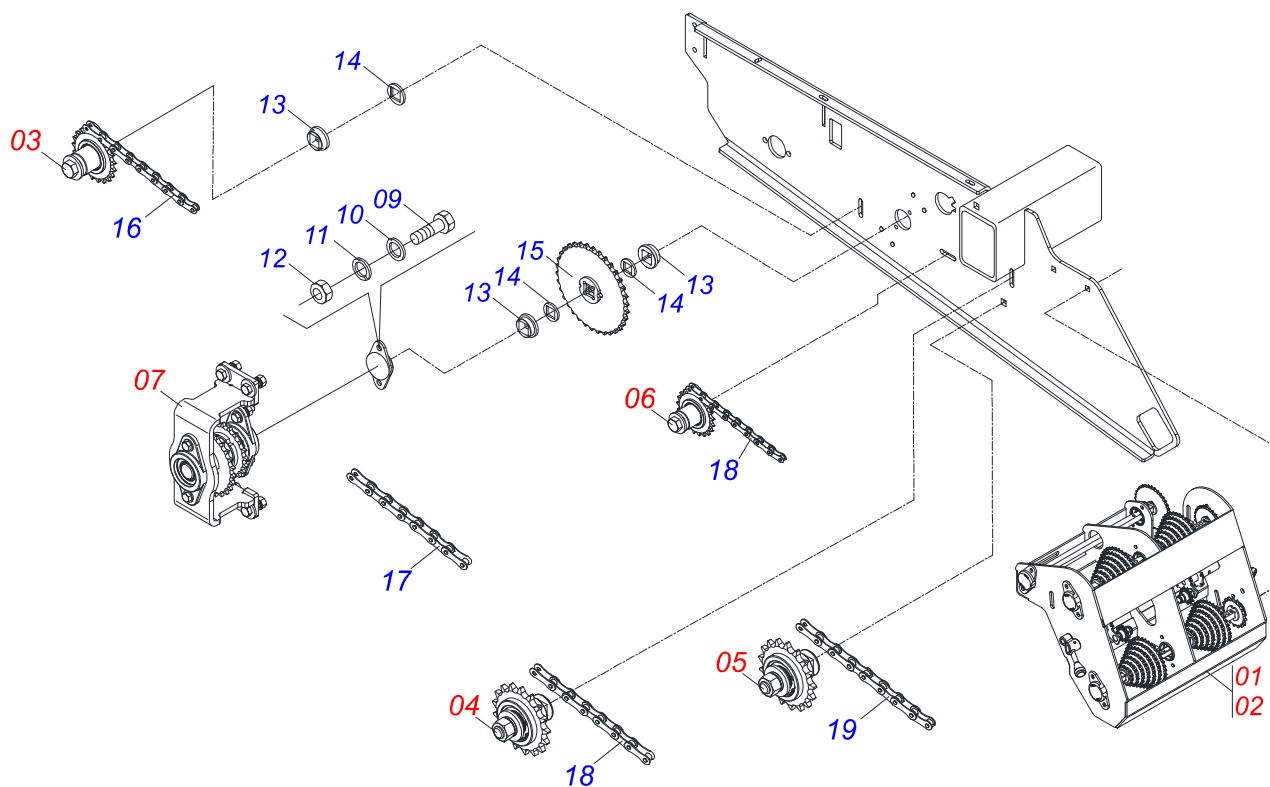


Item	Code	Description	See page	QT
01	0511048348	RIGHT GEAR BOX ASSY	13	01
02	0511048349	RIGHT GEAR BOX ASSY	14	01
03	0501054655	CHAIN TENSIONER ASSY	23	02
04	0501054686	GEAR BOX CHAIN TENSIONER	24	02
05	0501052788	CHAIN TIGHTENER ASSY	25	02
06	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	26	02
07	0501053846	MIDDLE BEARING OF THE TRANSMISSION	27	02
08	0561014215	BEARING COVER LOWER ROW FRAME		02
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
10	0501010694	FLAT WASHER		04
11	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
12	0503010337	5/16" NUT		04
13	0503030303	SUPPORT WASHER		04
14	0501010637	FLAT WASHER		04
15	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		02
16	0503016852	50-1 X 85 CHAIN LINK + MENDING		02
17	0503015364	40-1 X 51 CHAIN LINK + MENDING		02
18	0503012390	40-1 CHAIN X 93 LINK + MENDING		02
19	0503013214	40-1 CHAIN X 97 LINK + MENDING		02

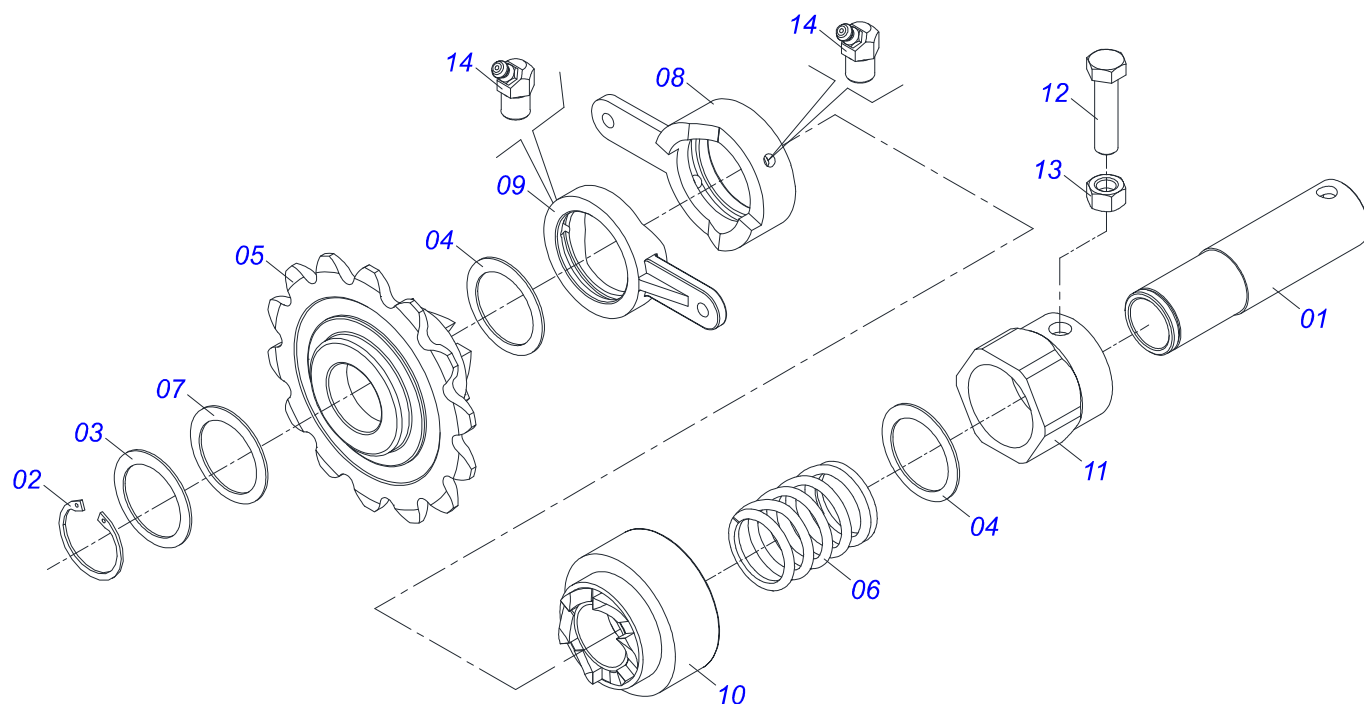

Item	Code	Description	See page	QT
01	0521017590	GUIDE AXLE		01
02	0503010542	501045 CLAMPING RING (FOR AXLE)		01
03	0521017593	FLAT WASHER		01
04	0501019734	FLAT WASHER		02
05	0502011329	14Z GEAR WITH RIGHT DRAGGER		01
06	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
07	0501019735	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		01
09	0502010711	RIGHT CAM,LARGER		01
10	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
11	0502011996	SLEEVE FIXER		01
12	0503030678	BOLT 1/2 UNC X 1.1/2 C50P G.5 ZN		01
13	0503010060	1/2 UNC G.5 ZN HEX NUT		01
14	0503010003	1845 GREASE FITTING		02

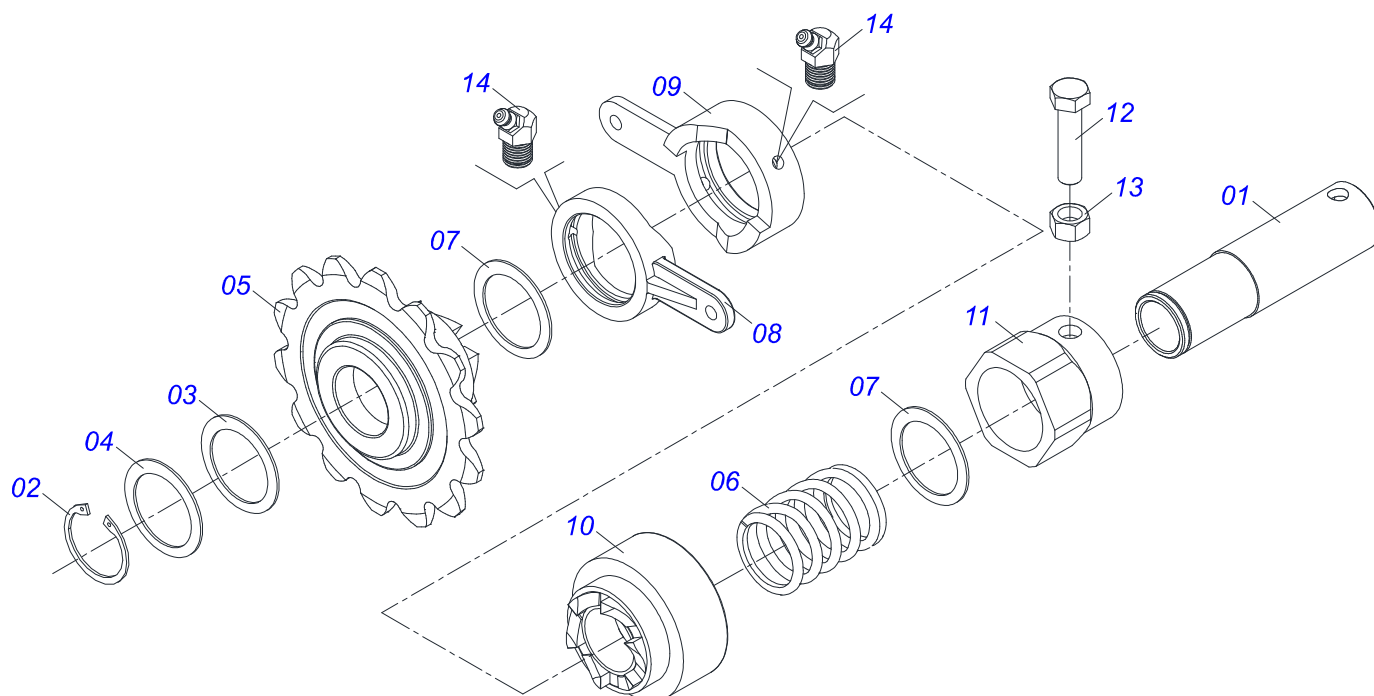


Item	Code	Description	See page	QT
01	0521017590	GUIDE AXLE		01
02	0503010542	501045 CLAMPING RING (FOR AXLE)		01
03	0521017593	FLAT WASHER		01
04	0501019735	FLAT WASHER		01
05	0502011331	LH 14Z P 1.25" GEAR WITH DRAGGER		01
06	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		01
09	0502010721	LEFT CAM,LARGER		01
10	0502011995	LH DRIVING AXLE FOLLOWER		01
11	0502011996	SLEEVE FIXER		01
12	0503010395	1/2" X 1-1/4" BOLT		01
13	0503010060	1/2 UNC G.5 ZN HEX NUT		01
14	0503010003	1845 GREASE FITTING		02

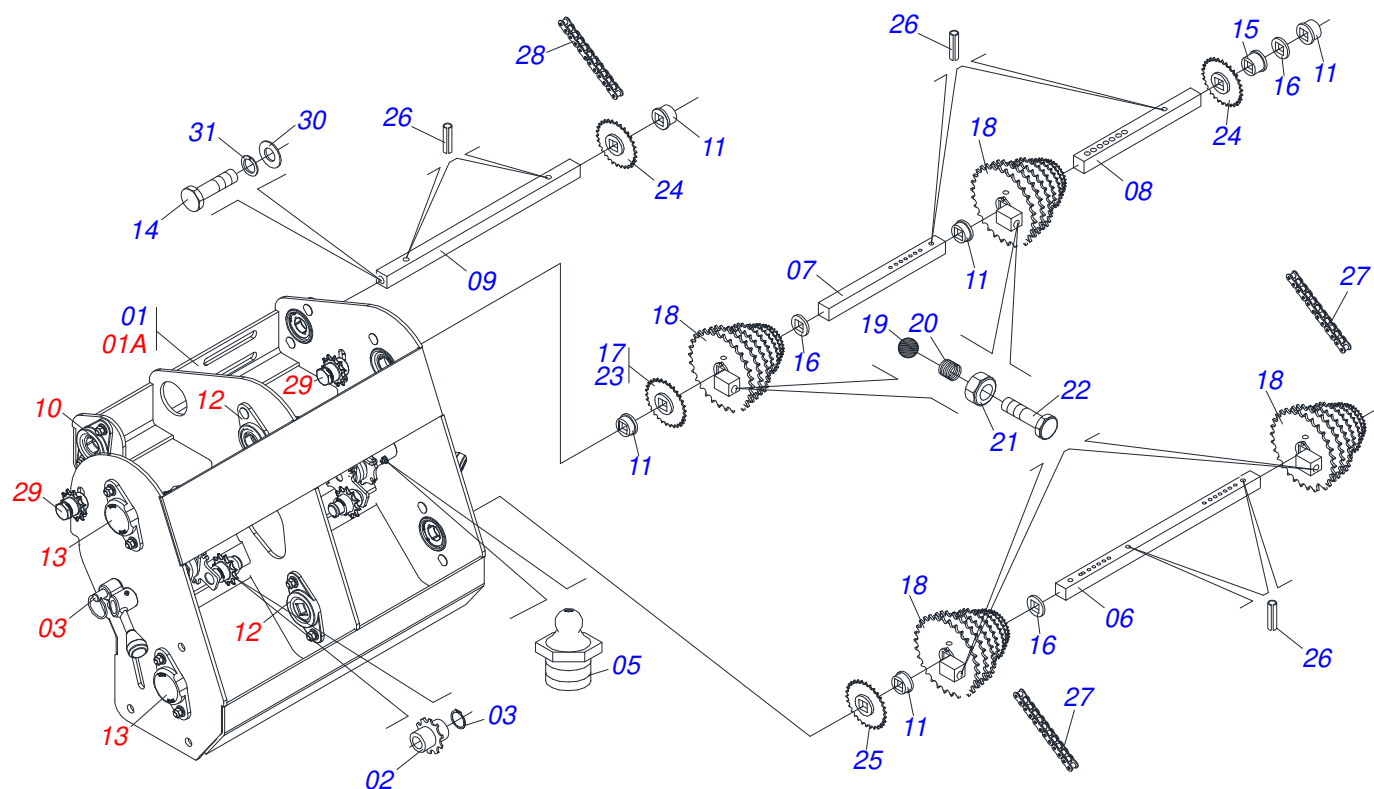


Item	Code	Description	See page	07 09
001	0511050639	RIGHT GEAR BOX ASSY	15	01
001A	0501058212	SEMI MOUNTED RIGHT CHANGE	16	01
002	0503031805	11Z 1/2" GEAR		04
003	0503010302	501019 SEAL RING		04
004	0501048790	AXLE WITH RING	18	02
005	0503010002	1800 GREASE FITTING		02
006	0551018209	DRIVING AXLE		01
007	0521018259	DRIVEN AXLE		01
008	0551018210	DRIVEN AXLE		01
009	0551018211	INTERM SHAFT		01
010	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	19	01
011	0503030303	SUPPORT WASHER		05
012	0501056443	GEAR HOUSING BEARING	20	02
013	0501056271	GEARBOX CLOSED BEARING	22	05
014	0503010256	3/8" X 3/4" BOLT		01
015	0503030275	AGRICULTURAL BEARING		01
016	0521018630	1.4" X SQUARE 0.8" WASHER		03
017	0511061822	25Z P0.5" GEAR SQUARE HOL		01
018	0502040868	GEAR CONE REPLACEMENT		04
019	0503012389	1/2 BALL		04
020	0503031512	0.4" X 0.1"X 2" X 0.6" SPRING		04
021	0503010060	1/2 UNC G.5 ZN HEX NUT		04
022	0503010395	1/2" X 1-1/4" BOLT		04
023	0521062072	33Z GEAR		01
024	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
025	0511067501	26Z GEAR		01
026	0503010292	701164 6 X 40 SPRING PIN		07
027	0503012204	40-1 CHAIN X 82 LINK + RED		02
028	0503012713	40-1 CHAIN X 45 LINK + MEN		01
029	0501054655	CHAIN TENSIONER ASSY	23	02
030	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01



Item	Code	Description	See page	07 09
031	0503010025	3/8 SPRING WASHER		01

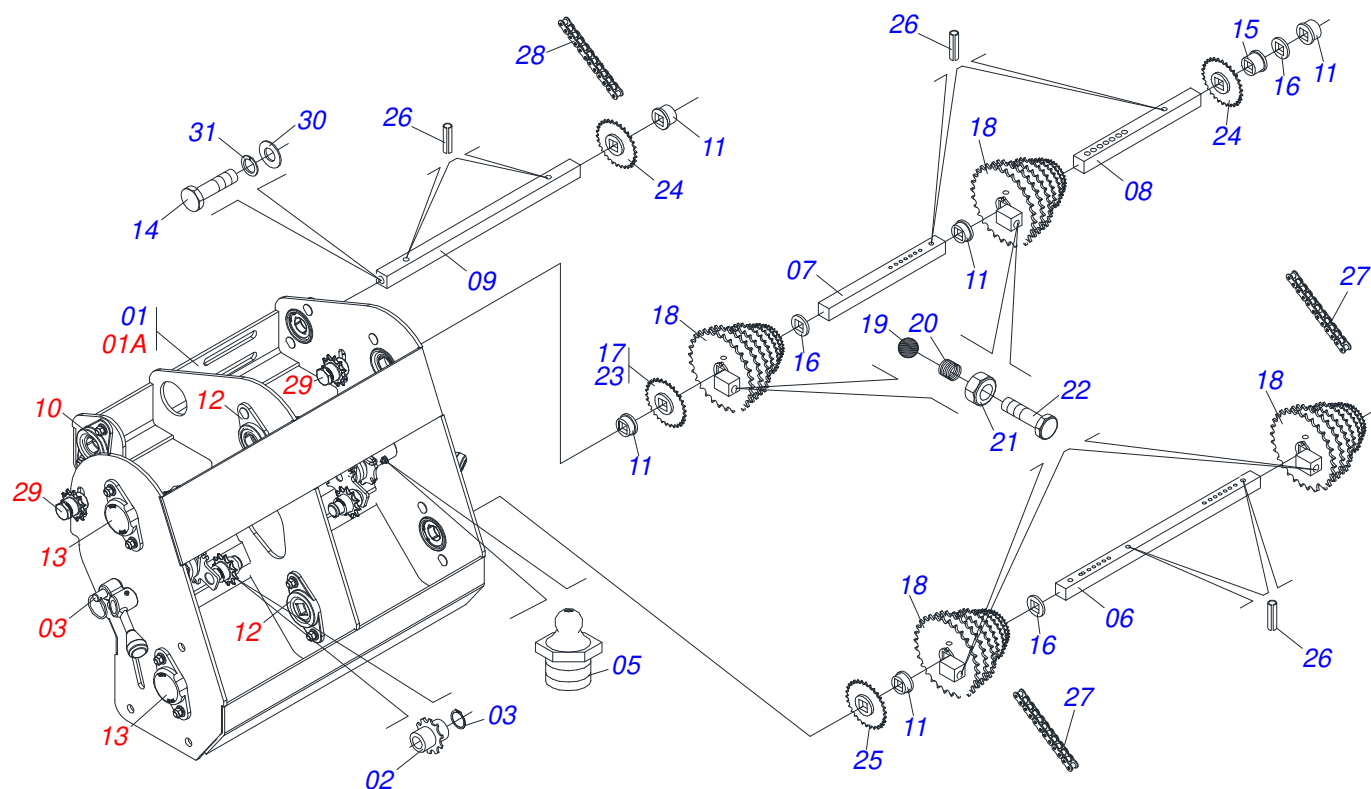


Item	Code	Description	See page	07 09
01	0501058213	LH GEAR BOX	17	01 01
02	0503031805	11Z 1/2" GEAR		12 12
03	0503010302	501019 SEAL RING		04 04
04	0501048790	AXLE WITH RING	18	02 02
05	0503010002	1800 GREASE FITTING		02 02
06	0551018209	DRIVING AXLE		01 01
07	0521018259	DRIVEN AXLE		01 01
08	0551018210	DRIVEN AXLE		01 01
09	0551018211	INTERM SHAFT		01 01
10	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	19	01 01
11	0503030303	SUPPORT WASHER		05 05
12	0501056443	GEAR HOUSING BEARING	20	02 02
13	0501056271	GEARBOX CLOSED BEARING	22	05 05
14	0503010256	3/8" X 3/4" BOLT		01 01
15	0503030275	AGRICULTURAL BEARING		01 01
16	0521018630	1.4" X SQUARE 0.8" WASHER		03 03
17	0511061822	25Z P0.5" GEAR SQUARE HOL		01 01
18	0511060396	DRIVE/DRIVEN SHAFT		08 08
19	0503012389	1/2 BALL		04 04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04 04
21	0503010060	1/2 UNC G.5 ZN HEX NUT		04 04
22	0503010395	1/2" X 1-1/4" BOLT		04 04
23	0511061822	25Z P0.5" GEAR SQUARE HOL		01 01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02 02
25	0501069874	SPROCKET 17Z P 15,87 FQ 3/4		02 02
26	0503010292	701164 6 X 40 SPRING PIN		07 07
27	0503012204	40-1 CHAIN X 82 LINK + RED		04 04
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01 01
29	0501054655	CHAIN TENSIONER ASSY	23	04 04
30	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02 02
31	0503010025	3/8 SPRING WASHER		01 01

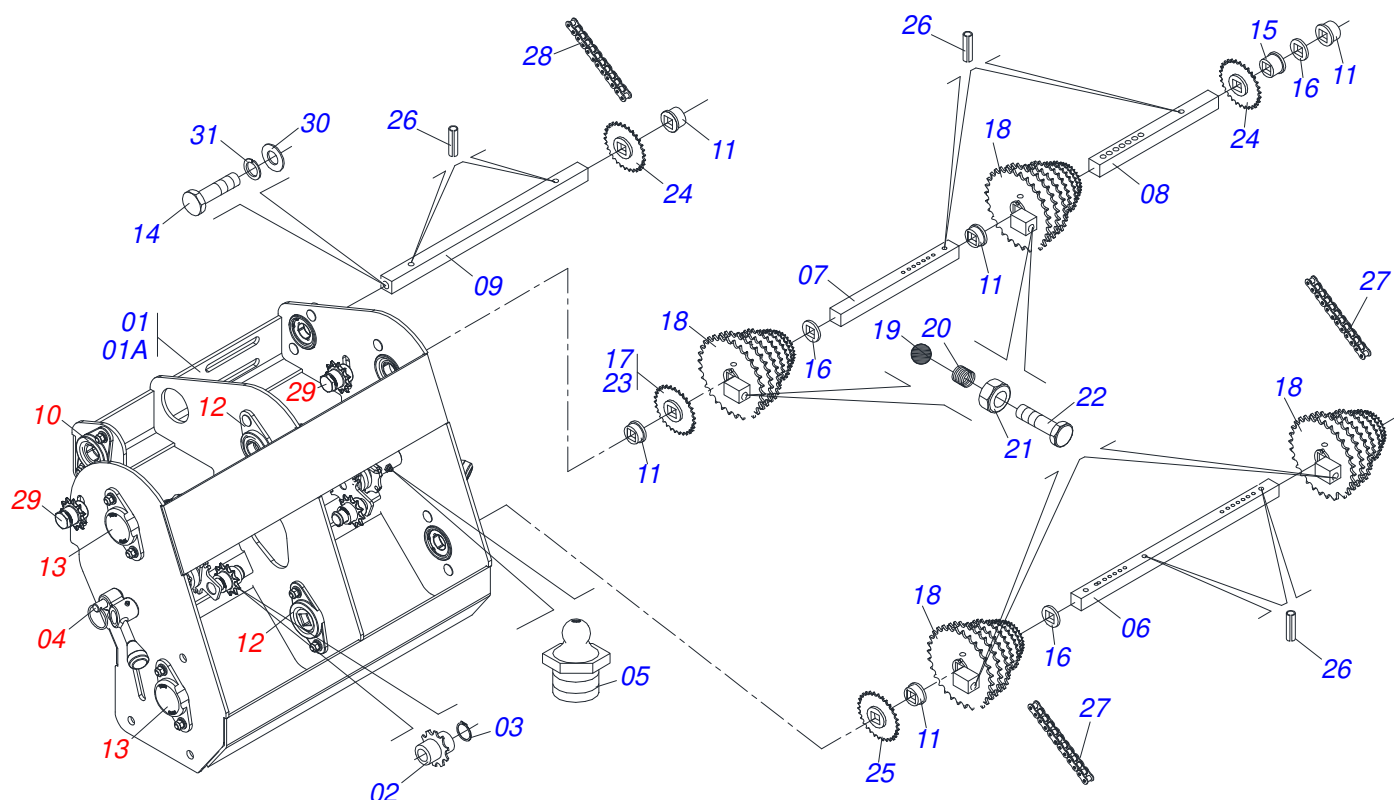


Item	Code	Description	See page	QT
01	0511050639	RIGHT GEAR BOX ASSY	15	01
01A	0501058212	SEMI MOUNTED RIGHT CHANGE	16	01
02	0503031805	11Z 1/2" GEAR		04
03	0503010302	501019 SEAL RING		04
04	0501048790	AXLE WITH RING	18	02
05	0503010002	1800 GREASE FITTING		02
06	0551018209	DRIVING AXLE		01
07	0521018259	DRIVEN AXLE		01
08	0551018210	DRIVEN AXLE		01
09	0551018211	INTERM SHAFT		01
10	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	19	01
11	0503030303	SUPPORT WASHER		05
12	0501056443	GEAR HOUSING BEARING	20	02
13	0501056271	GEARBOX CLOSED BEARING	22	05
14	0503010256	3/8" X 3/4" BOLT		01
15	0503030275	AGRICULTURAL BEARING		01
16	0521018630	1.4" X SQUARE 0.8" WASHER		03
17	0511061822	25Z P0.5" GEAR SQUARE HOL		01
18	0502040868	GEAR CONE REPLACEMENT		04
19	0503012389	1/2 BALL		04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
21	0503010060	1/2 UNC G.5 ZN HEX NUT		04
22	0503010395	1/2" X 1-1/4" BOLT		04
23	0521062072	33Z GEAR		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0511067501	26Z GEAR		01
26	0503010292	701164 6 X 40 SPRING PIN		07
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0501054655	CHAIN TENSIONER ASSY	23	02
30	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01




Item	Code	Description	See page	QT
31	0503010025	3/8 SPRING WASHER		01

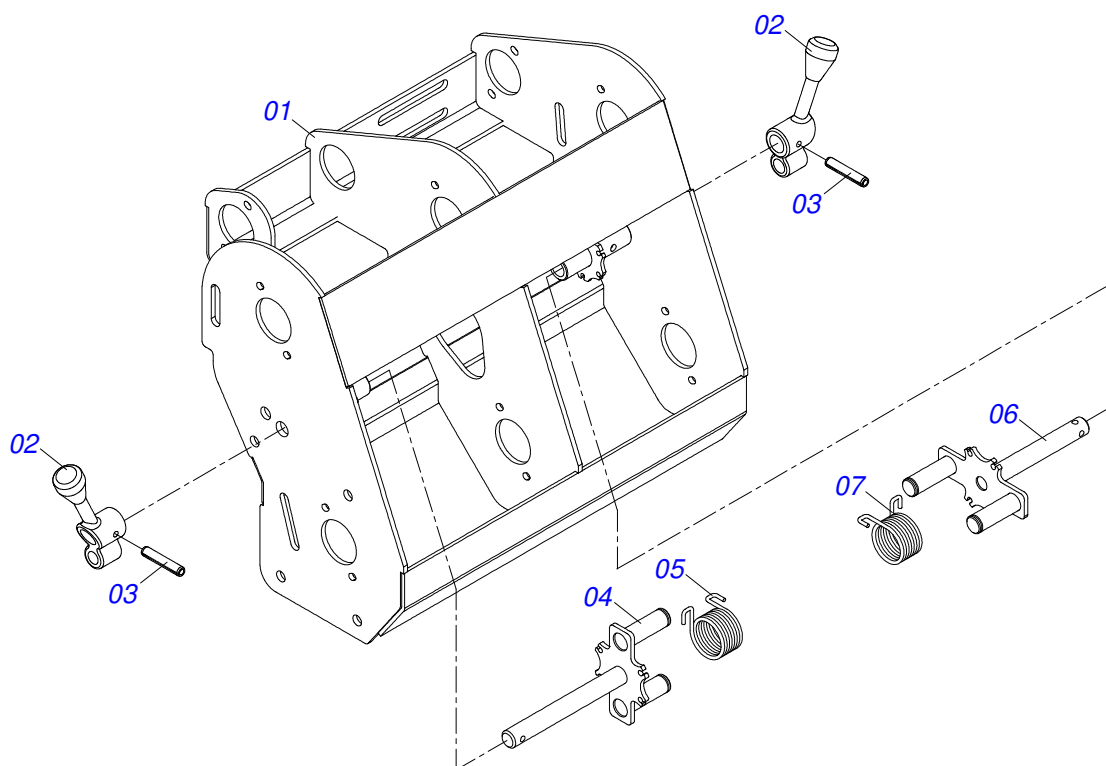


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TIGHTENER LEVER		02
03	0503010292	701164 6 X 40 SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING		01

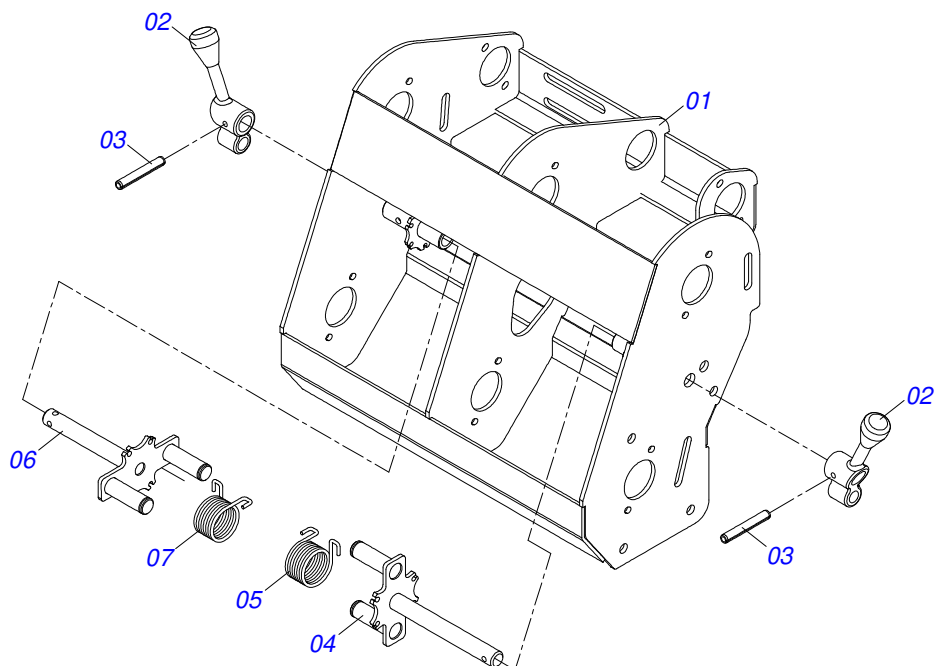


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TIGHTENER LEVER		02
03	0503010292	701164 6 X 40 SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING		01

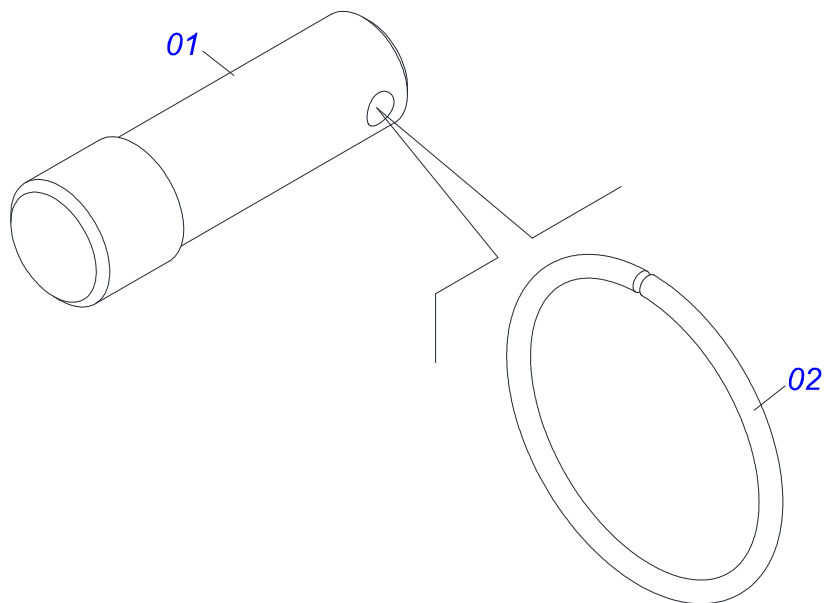


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

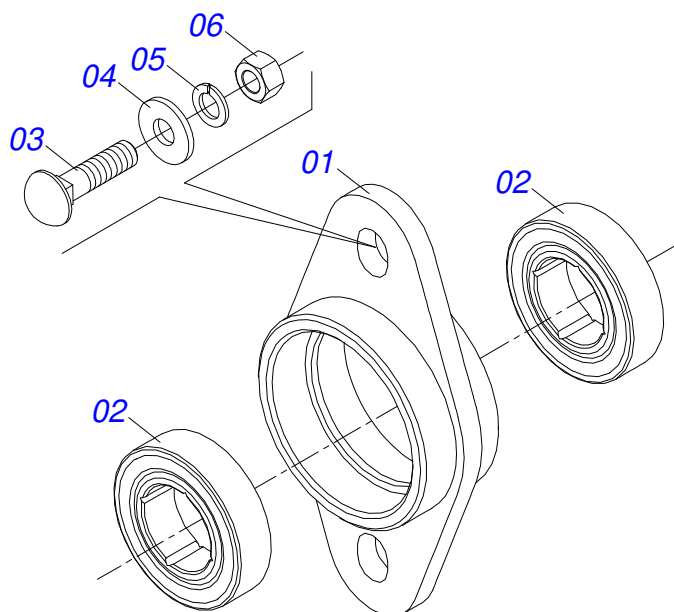

Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

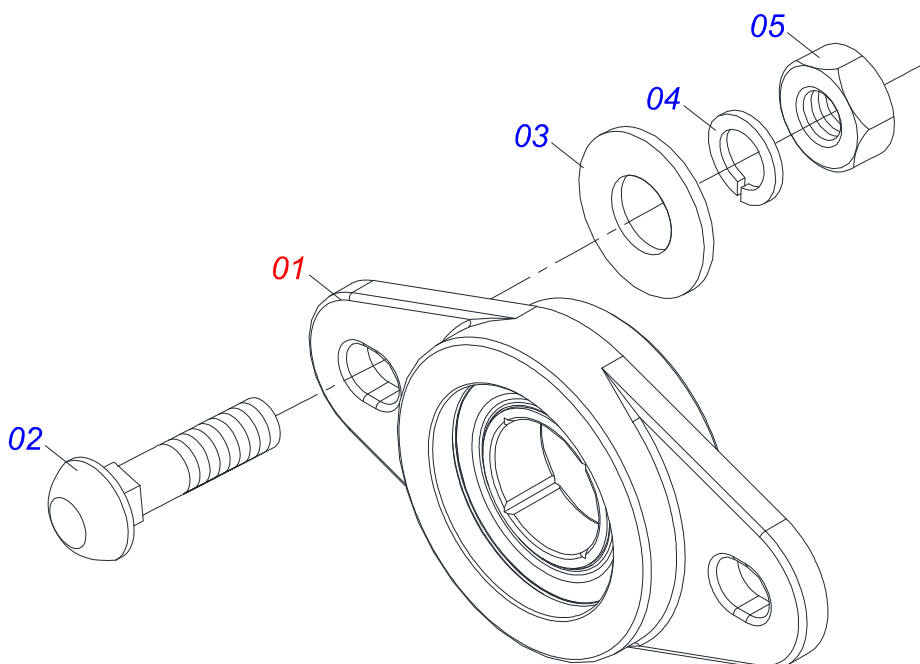


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLER	21	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

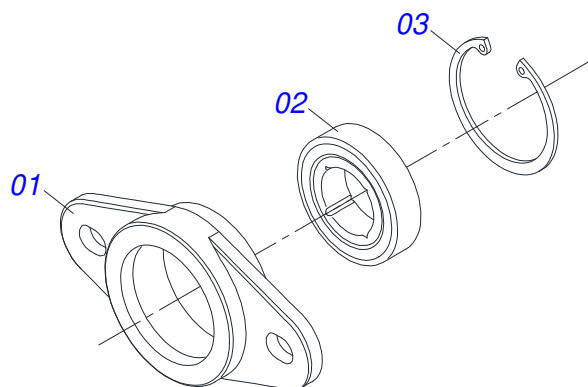


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

GEARBOX CLOSED BEARING


0501056271

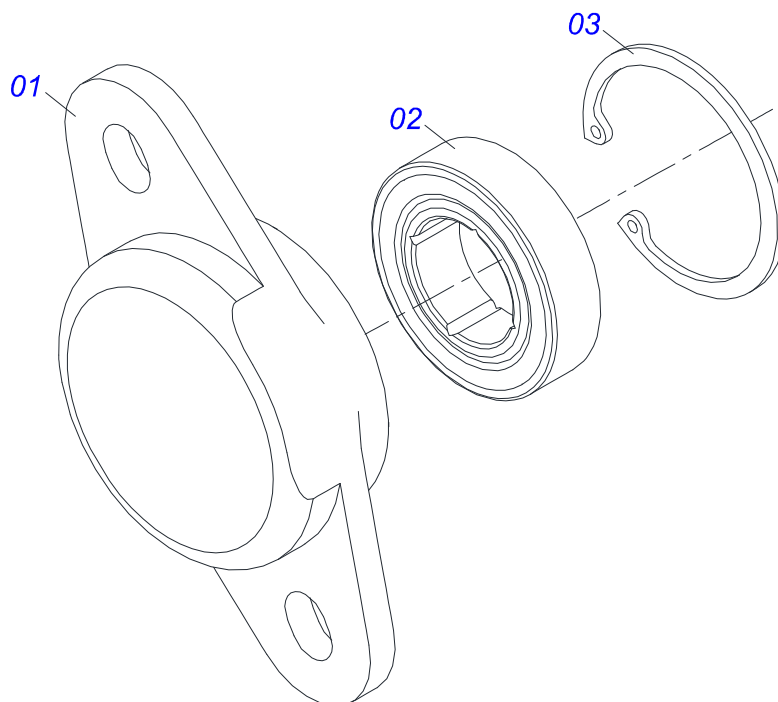

Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

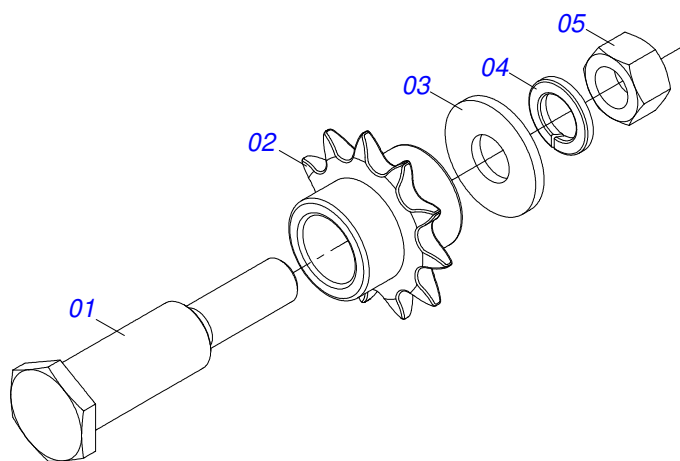


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

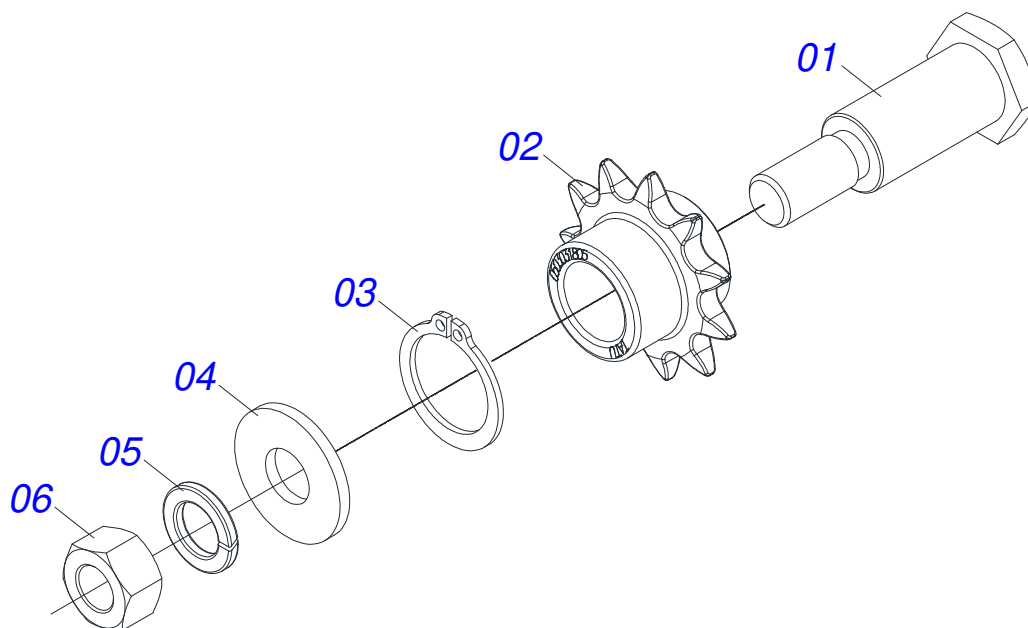


Item	Code	Description	See page	QT
01	0531017202	AXLE CHAIN TIGHTENER		01
02	0503031806	9Z X P 5/8" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

CHAIN TIGHTENER ASSY

0501052788

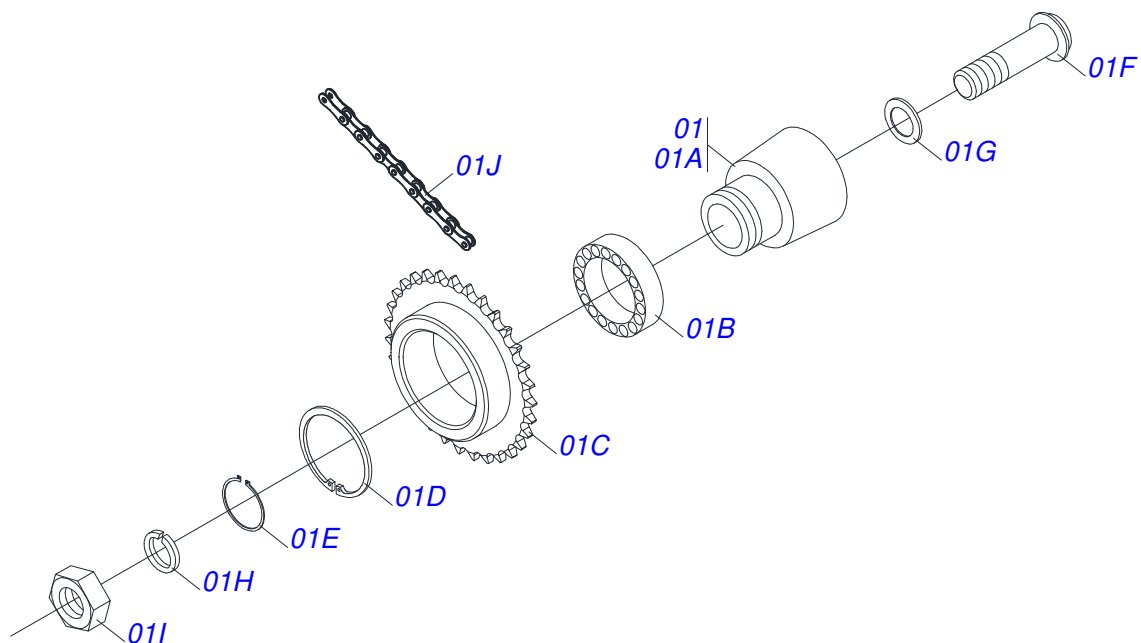


Item	Code	Description	See page
01	0501052788	CHAIN TIGHTENER ASSY	25 001
01A	0521018415	TIGHTENER AXLE	01
01B	0503012861	6006 2RS BALL BEARING	01
01C	0511061836	17Z GEAR	01
01D	0503012858	502075 CLAMPING RING (FOR HOLE)	01
01E	0503010707	501030 CLAMPING RING (FOR AXLE)	01
01F	0501011234	5/8" X 3" BOLT	01
01G	0501012140	FLAT WASHER	01
01H	0503010027	5/8 SPRING WASHER	01
01I	0503010013	5/8 NUT	01
01J	0503012716	CHAIN 50-1 X 3.7" LINK + MENDING	01

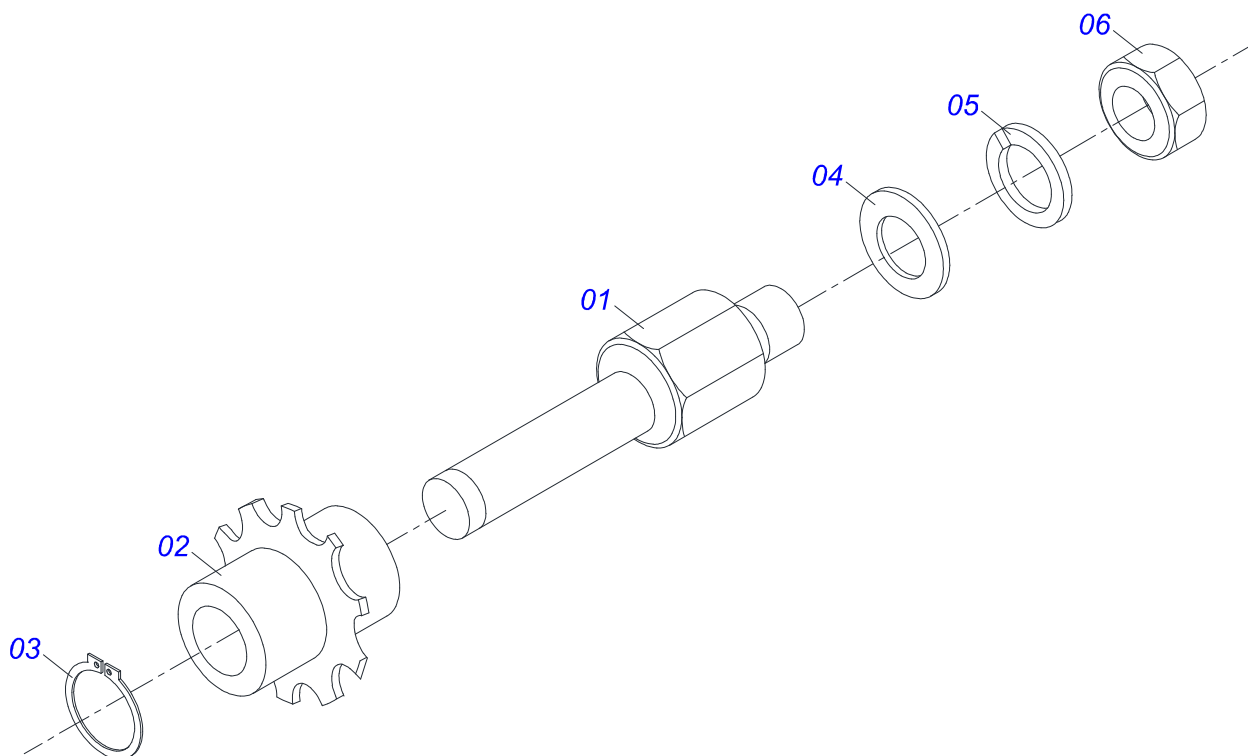


Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

MIDDLE BEARING OF THE TRANSMISSION

0501053846

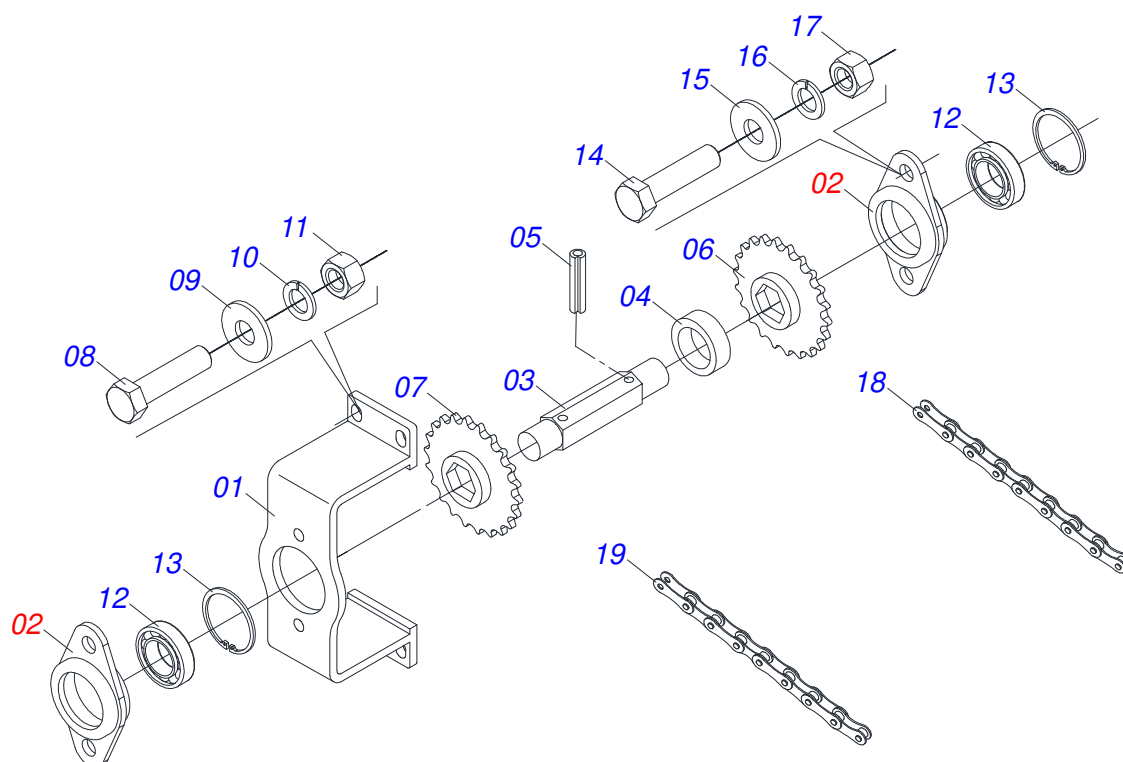


Item	Code	Description	See page
01	0511063266	INTERMEDIARY BEARING SUPPORT	01
02	0501052775	ROW SEED BEARING	28 02
03	0531013674	INTERMEDIATE AXLE	01
04	0541011184	1.1" X 2" X 0.7" SLEEVE	01
05	0503010292	701164 6 X 40 SPRING PIN	02
06	0511063268	20Z P1/2" GEAR FOR HEX AXLE, 1"	01
07	0511063267	26Z P1/2" GEAR FOR HEX AXLE, 1"	01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	04
09	0501010984	10,50 X 27 X 3,00 FLAT WASHER	04
10	0503010025	3/8 SPRING WASHER	04
11	0503010026	3/8" NUT	04
12	0503011410	ROLLER BEARING	02
13	0503011105	SEAL RING	02
14	0503010371	5/16" X 1" BOLT	04
15	0501010694	FLAT WASHER	04
16	0503010179	LOCK WASHER 5/16 ZN 1K01528	04
17	0503010337	5/16" NUT	04
18	0503012717	40-1 CHAIN X 101 LINK + MENDING	01
19	0503012718	40-1 CHAIN X 111 LINK + MENDING	01

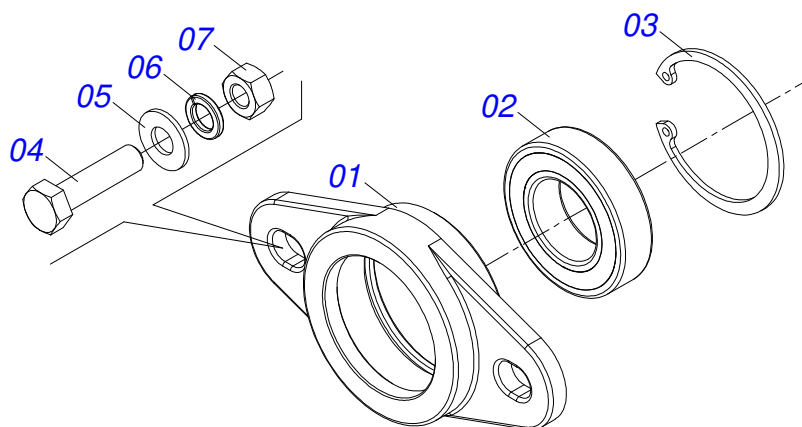

Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503010371	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER		02
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

FERTILIZER BOX ASSEMBLY


0511053918

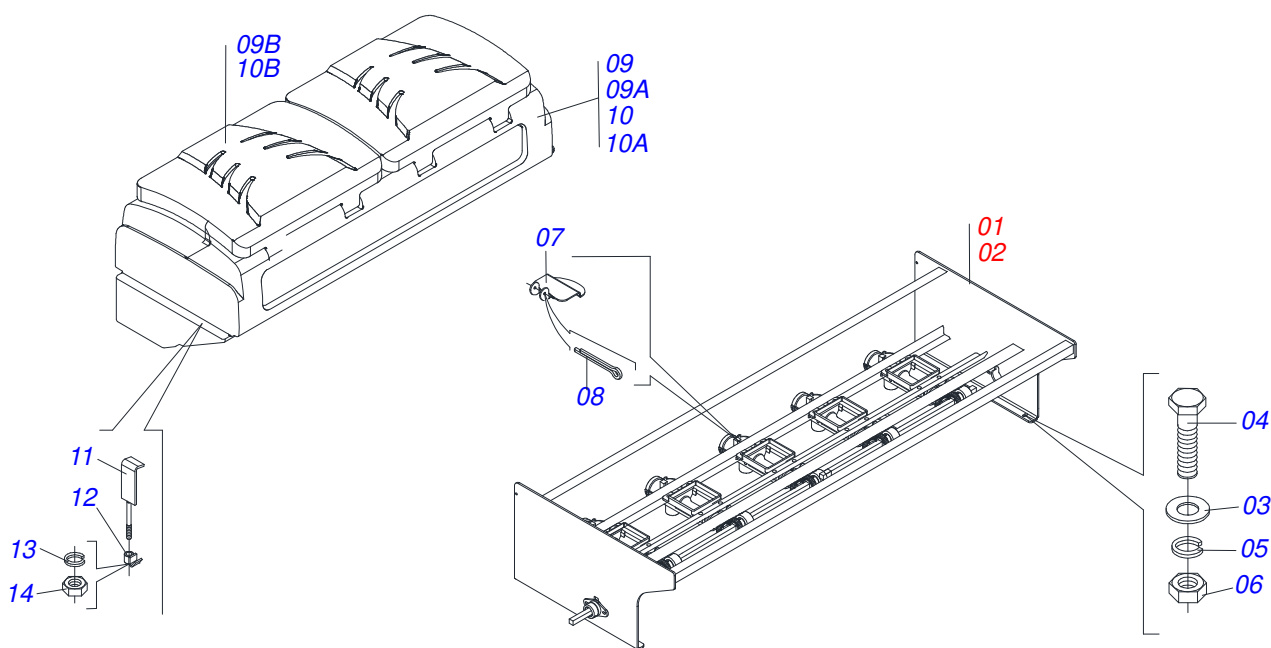


Item	Code	Description	See page	QT
001	0511051077	SUPPORT RIGHT BOX FERTILIZER WITH DISTRIBUTOR	31	01
002	0511051078	SUPPORT LEFT BOX FERTILIZER WITH DISTRIBUTOR	32	01
003	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
004	0503010849	3/8" X 1-1/2" BOLT		08
005	0503010025	3/8 SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0571010590	FERTILIZER SIDE COVER		08
008	0503010362	1/8 X 1.1/4 COTTERPIN		08
009	0503060636	RIGHT FERTILIZER HOPPER WITH LID		01
009A	0503031948	RIGHT FERTILIZER HOPPER		01
009B	0503031950	FERTILIZER HOPPER LID		02
010	0503060637	LEFT FERTILIZER HOPPER WITH LID		01
010A	0503031949	LEFT FERTILIZER HOPPER		01
010B	0503031950	FERTILIZER HOPPER LID		02
011	0511062099	FERTILIZER BEAM CLAMP		04
012	0511061886	FERTILIZER BEAM LOCK		04
013	0503010019	1/2" SPRING WASHER		04
014	0503010060	1/2 UNC G.5 ZN HEX NUT		04

FERTILIZER BOX ASSEMBLY


0511053892

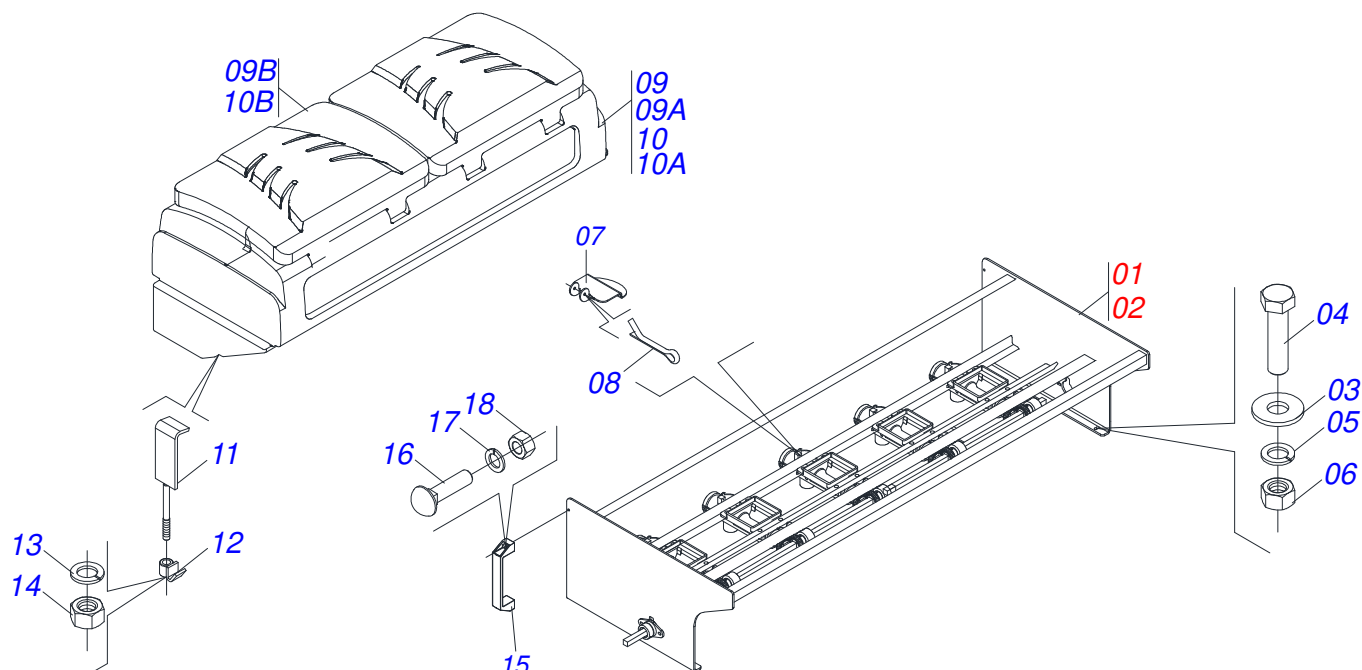


Item	Code	Description	See page	QT
001	0501059656	FERTILIZER SUPORT RIGHT BOX	33	01
002	0501059657	FERTILIZER SUPORT LEFT BOX	34	01
003	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
004	0503010849	3/8" X 1-1/2" BOLT		08
005	0503010025	3/8 SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0571010590	FERTILIZER SIDE COVER		10
008	0503010362	1/8 X 1.1/4 COTTERPIN		10
009	0503060640	COVER BOX RIGHT FERTILIZER		01
009A	0503031954	SILO RIGHT FERTILIZER		01
009B	0503031956	FERTILIZER HOPPER LID		02
010	0503060641	LEFT FERTILIZER HOPPER WITH LID		01
010A	0503031955	LEFT FERTILIZER HOPPER		01
010B	0503031956	FERTILIZER HOPPER LID		02
011	0511062099	FERTILIZER BEAM CLAMP		04
012	0511061886	FERTILIZER BEAM LOCK		04
013	0503010019	1/2" SPRING WASHER		04
014	0503010060	1/2 UNC G.5 ZN HEX NUT		04
015	0503011957	NYLON LUG		02
016	0503010371	5/16" X 1" BOLT		04
017	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
018	0503010337	5/16" NUT		04

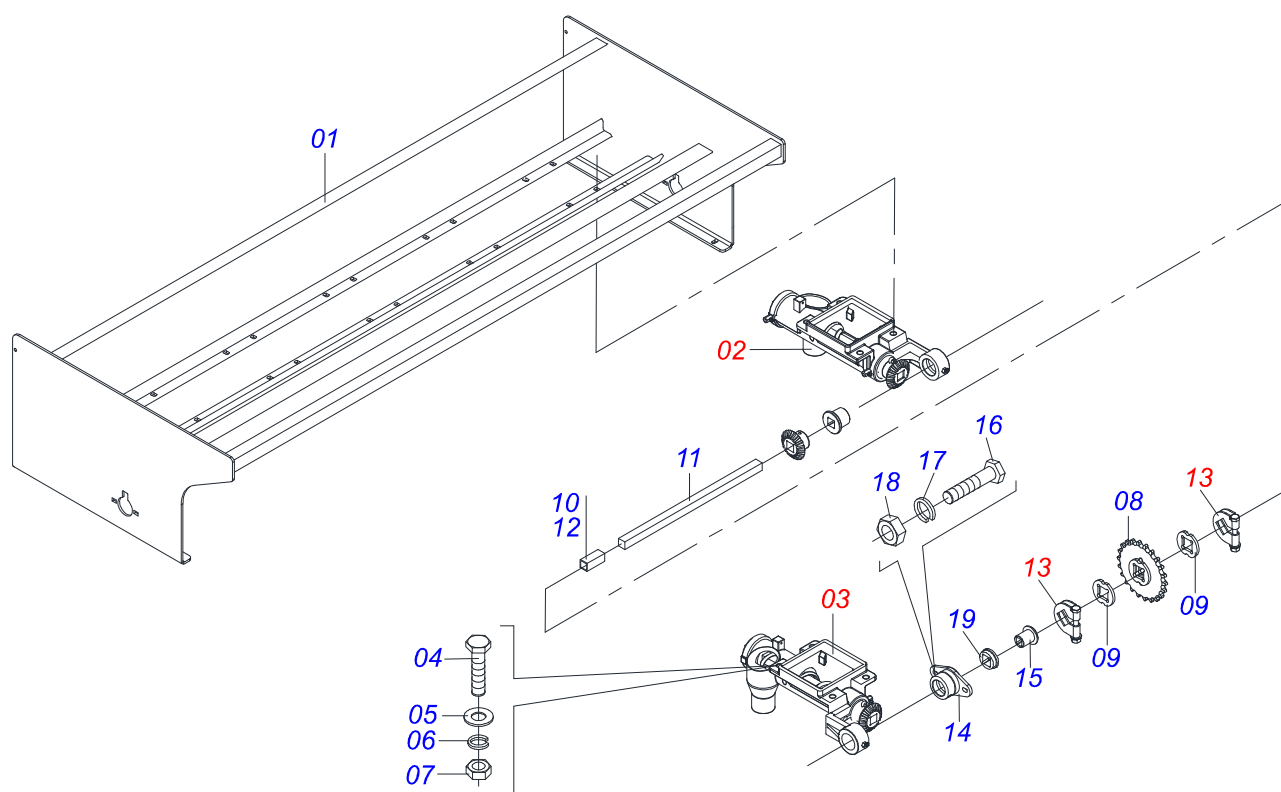


Item	Code	Description	See page	QT
01	0521062410	RH BEAM SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	35	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	36	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0501018700	3/4" X 58"SQUARE SHAFT		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER	37	02
14	0501110392	HOPPER SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

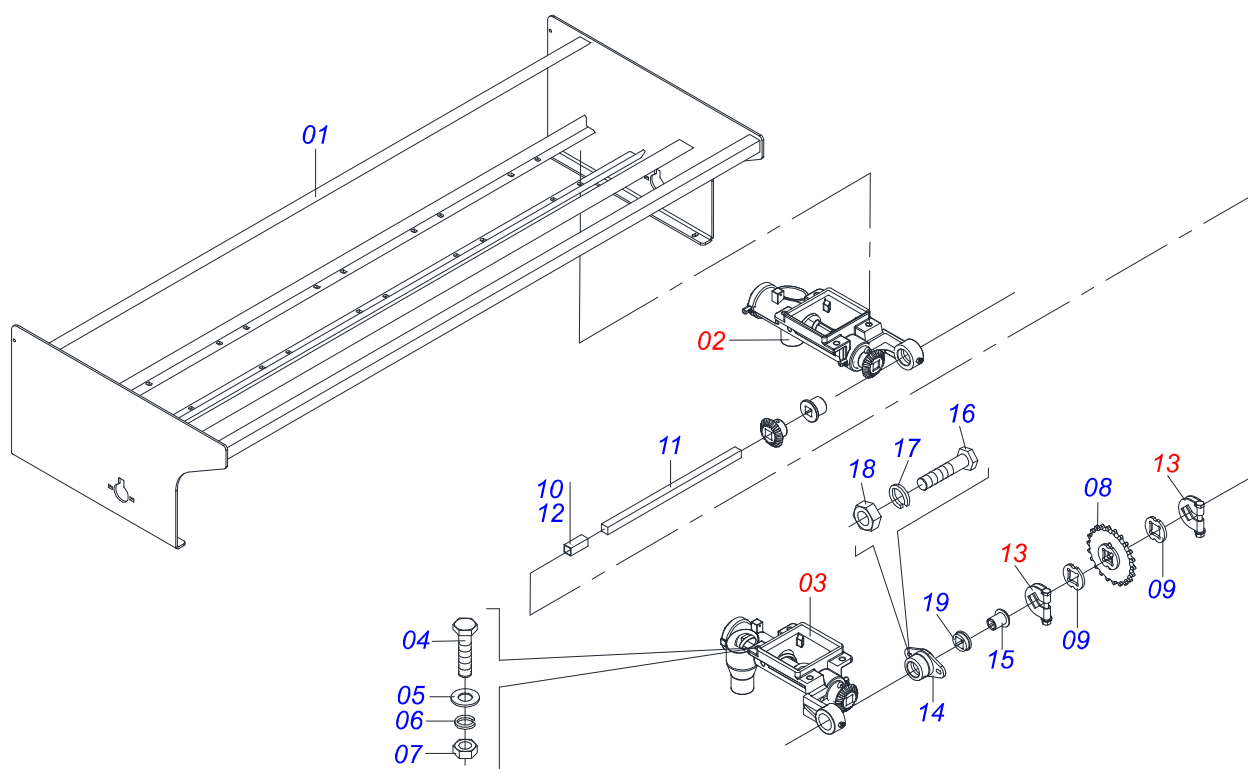

Item	Code	Description	See page	QT
01	0521062412	LH BEAM SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	35	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	36	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
06	0503011443	3/8" SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		02
11	0501018700	3/4" X 58"SQUARE SHAFT		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER	37	02
14	0501110392	HOPPER SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

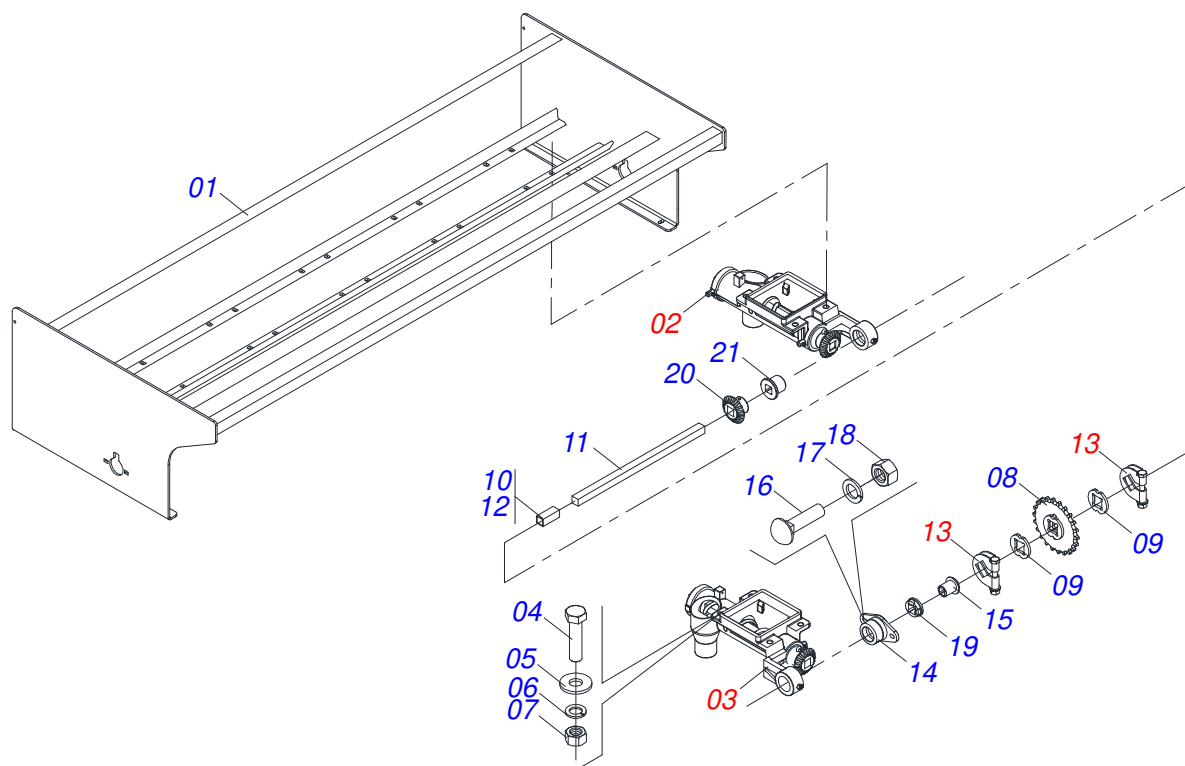


Item	Code	Description	See page	QT
01	0521061324	BOX FERTILIZER SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	35	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	36	03
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		20
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		20
06	0503011443	3/8" SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0511010866	RIGHT AXLE		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER	37	02
14	0501110392	HOPPER SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01
20	0502012990	CONICA 14Z SQUARE GEAR		05
21	0503030275	AGRICULTURAL BEARING		05

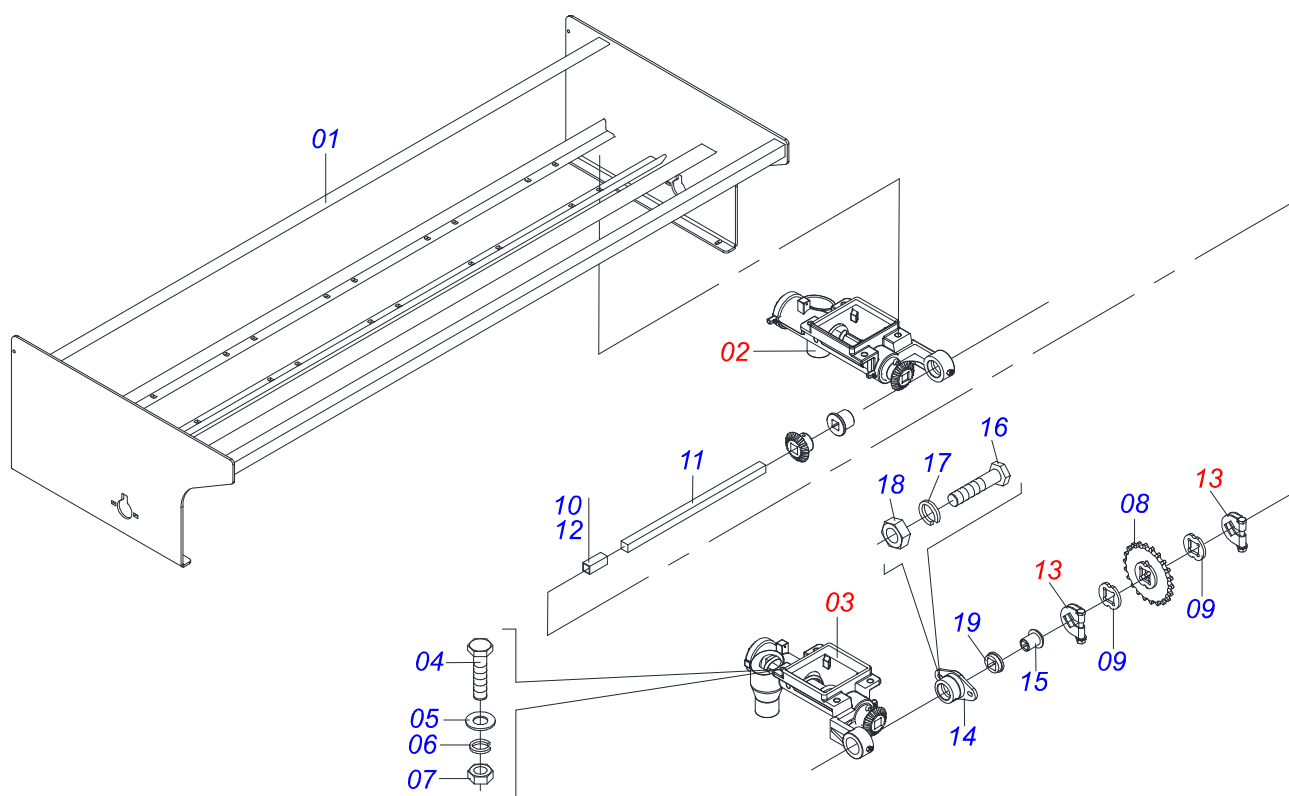


Item	Code	Description	See page	QT
01	0521061325	FERTILIZER SUPORT LEFT BOX		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	35	03
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	36	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		20
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		20
06	0503011443	3/8" SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0511010866	RIGHT AXLE		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER	37	02
14	0501110392	HOPPER SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

LEFT SIDE FERTILIZER DISTRIBUTOR


0511051558

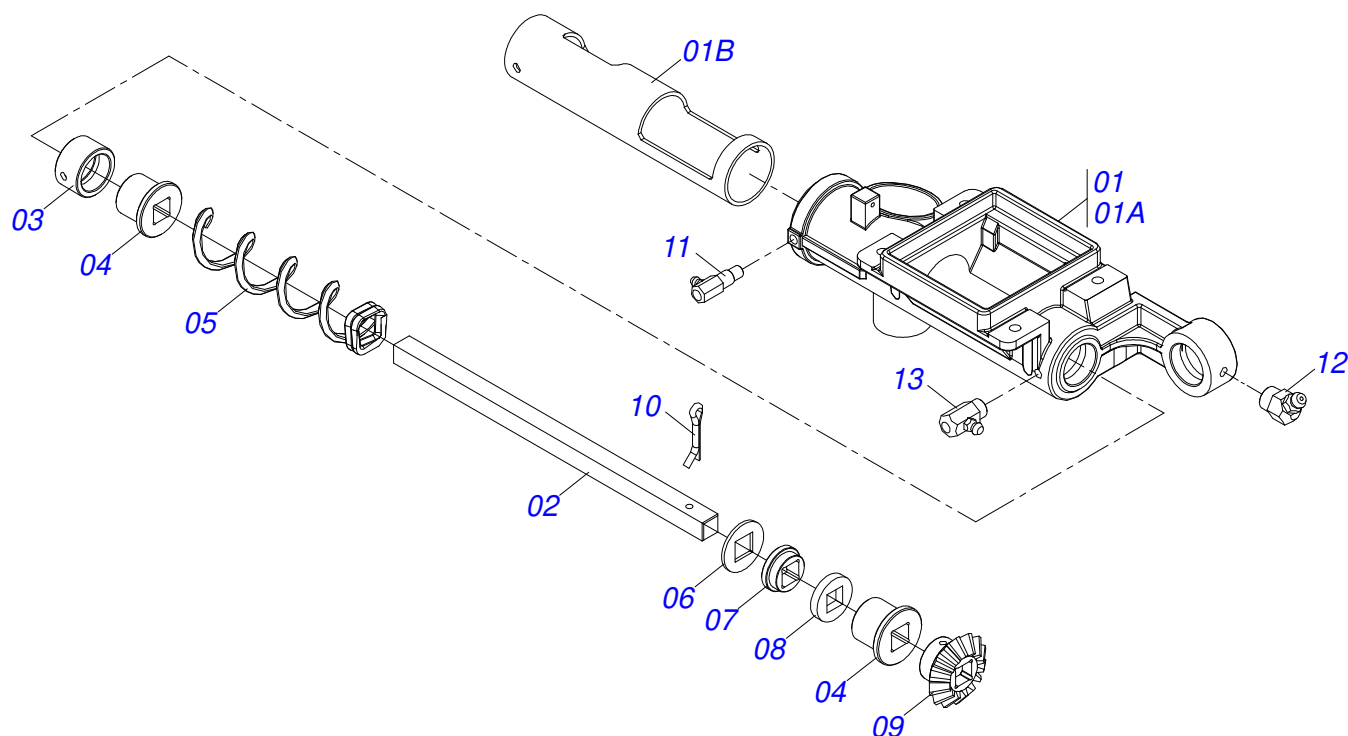







Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

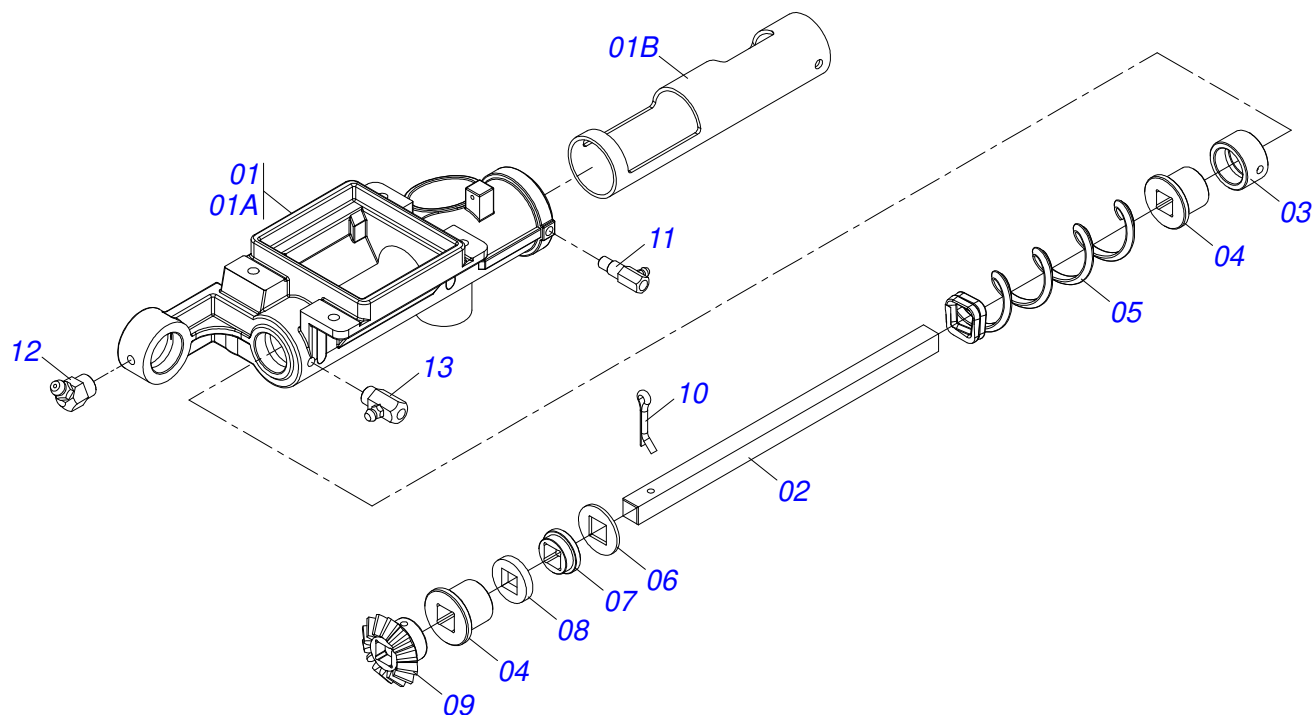







Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

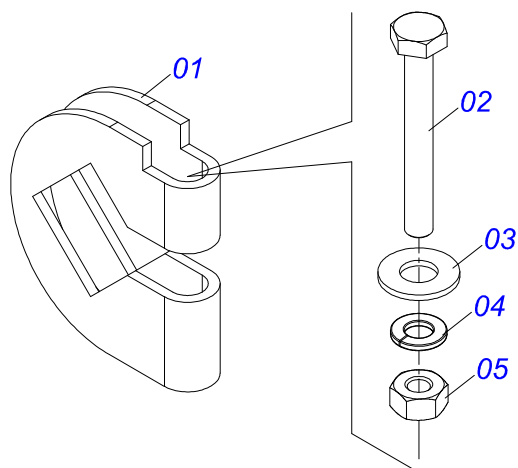


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

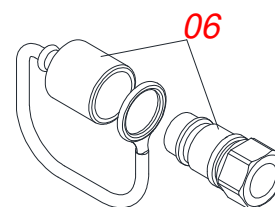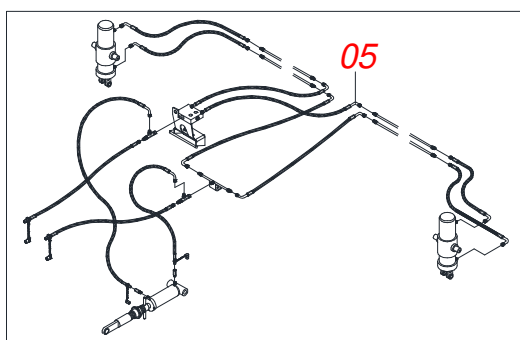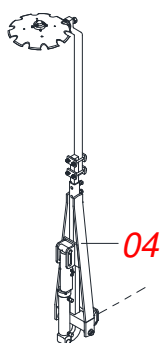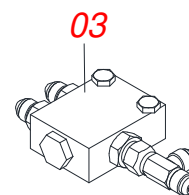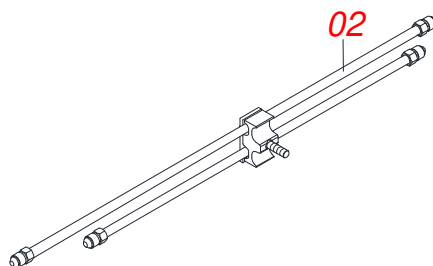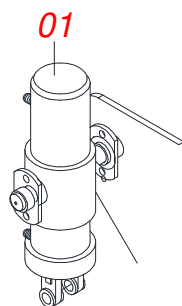

Item	Code	Description	See page	QT
01	0511053894	HYDRAULIC CYLINDER ASSEMBLY	40	01
02	0511053920	OIL PIPE ASSEMBLY	51	01
03	0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	42	01
04	0511052909	HYDRAULIC MARKER	44	01
05	0511052197	WHEELS HOSE ASSEMBLY	47	01
06	0501053834	MALE QUICK COUPLER	48	02

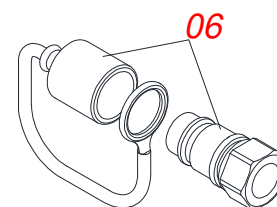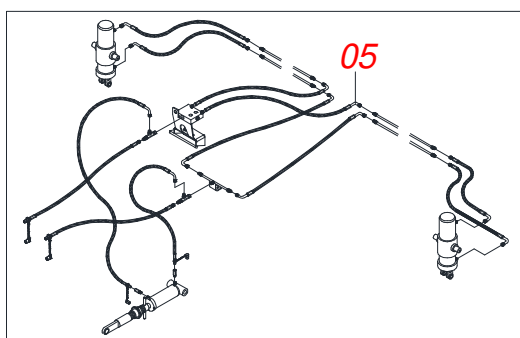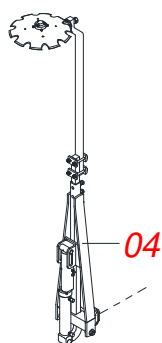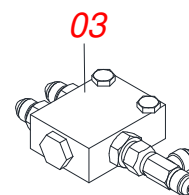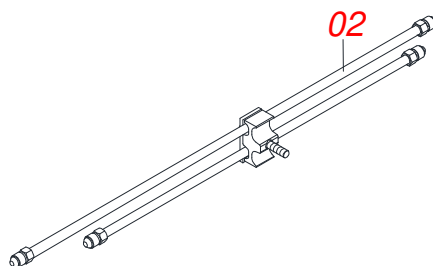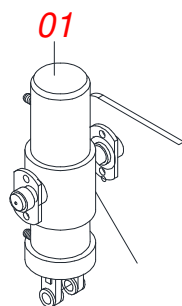


Item	Code	Description	See page	QT
01	0511053894	HYDRAULIC CYLINDER ASSEMBLY	40	01
02	0511053895	OIL DUCT ASSEMBLY	52	01
03	0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	42	01
04	0511052909	HYDRAULIC MARKER	44	01
05	0511052197	WHEELS HOSE ASSEMBLY	47	01
06	0501053834	MALE QUICK COUPLER	48	02

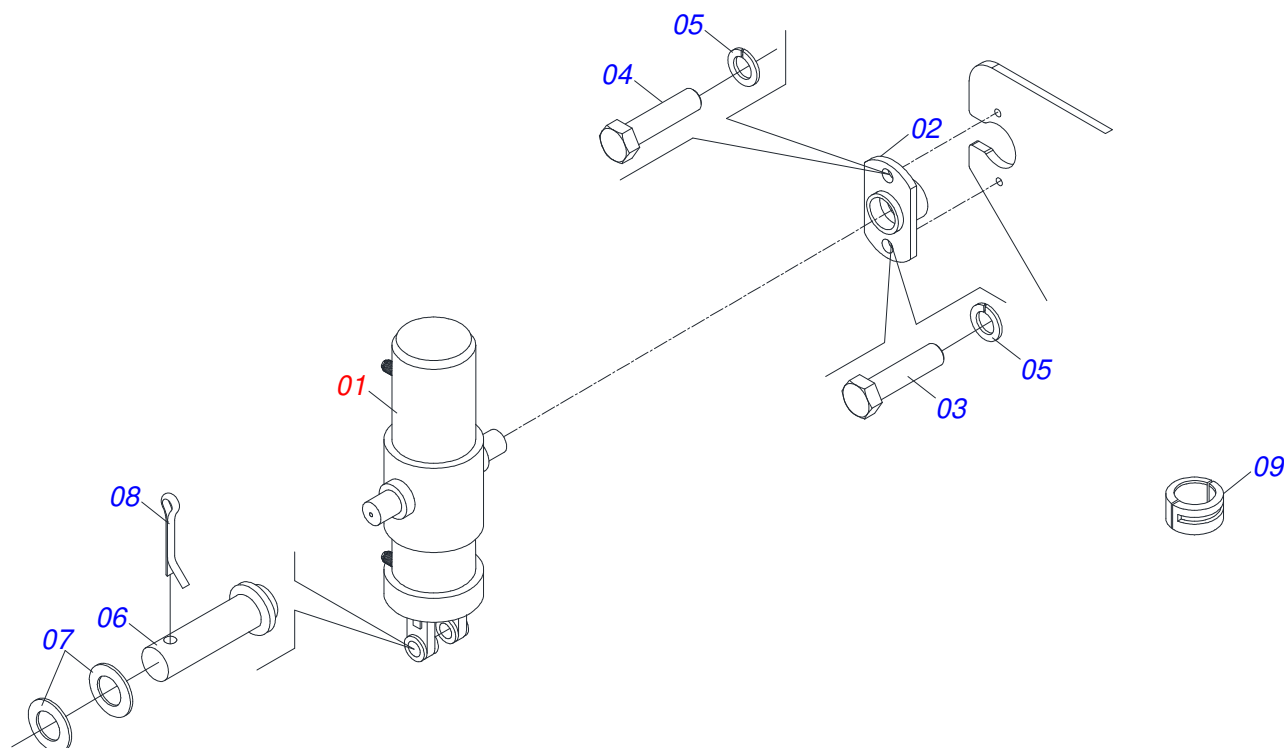


Item	Code	Description	See page	QT
001	0511058411	HYDRAULIC CYLINDER	41	02
002	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		04
003	0503010834	1/2 X 1 BOLT		06
004	0503010395	1/2" X 1-1/4" BOLT		02
005	0503010019	1/2" SPRING WASHER		08
006	0521010546	1.2" X 5.7" COUPLING SHAFT		02
007	0501017779	32 X 60 X 4.75 FLAT WASHER		04
008	0503010523	1/4" X 2" COTTERPIN		02
009	0501047887	40 ROD STOP		02

HYDRAULIC CYLINDER

0511058411

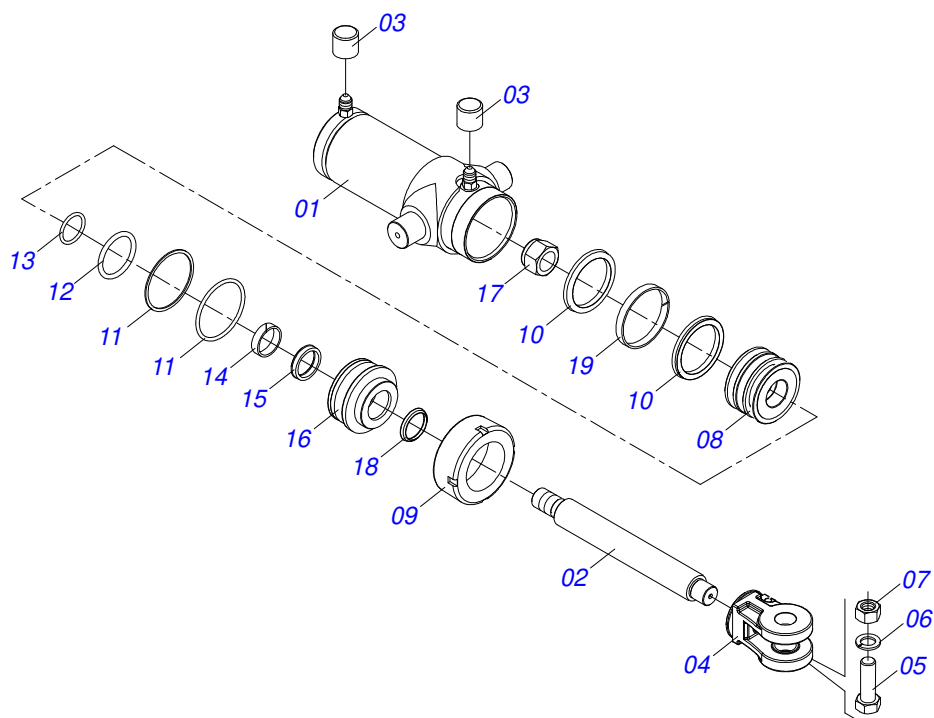


Item	Code	Description	See page	QT
01	0511066774	2.5" X 28" CYLINDER CASE		01
02	0541017674	TURNBUCLE BODY		01
03	0503030385	CYLINDER PLUG N-002		02
04	0511064408	FORK		01
05	0503011094	3/8" X 2" BOLT		01
06	0503010025	3/8 SPRING WASHER		01
07	0503010026	3/8" NUT		01
08	0581010302	RING OF SUPPORT		01
09	0502012822	101.60 END CAP		01
10	0503011061	8-342 BACK-UP RING		02
11	0503010338	2-342 N 3006-9B O'RING		02
12	0503017936	RING		01
13	0503017938	RING GUIDE		01
14	0503017937	GASKET		01
15	0503010761	D-1750 SCRAPER RING		01
16	0581010837	PISTON		01
17	0503010817	1.1/4" SELF LOCKING NUT		01
18	0503015633	SELEMASTER SEALING		01
19	0503018029	2-217 O'RING		01

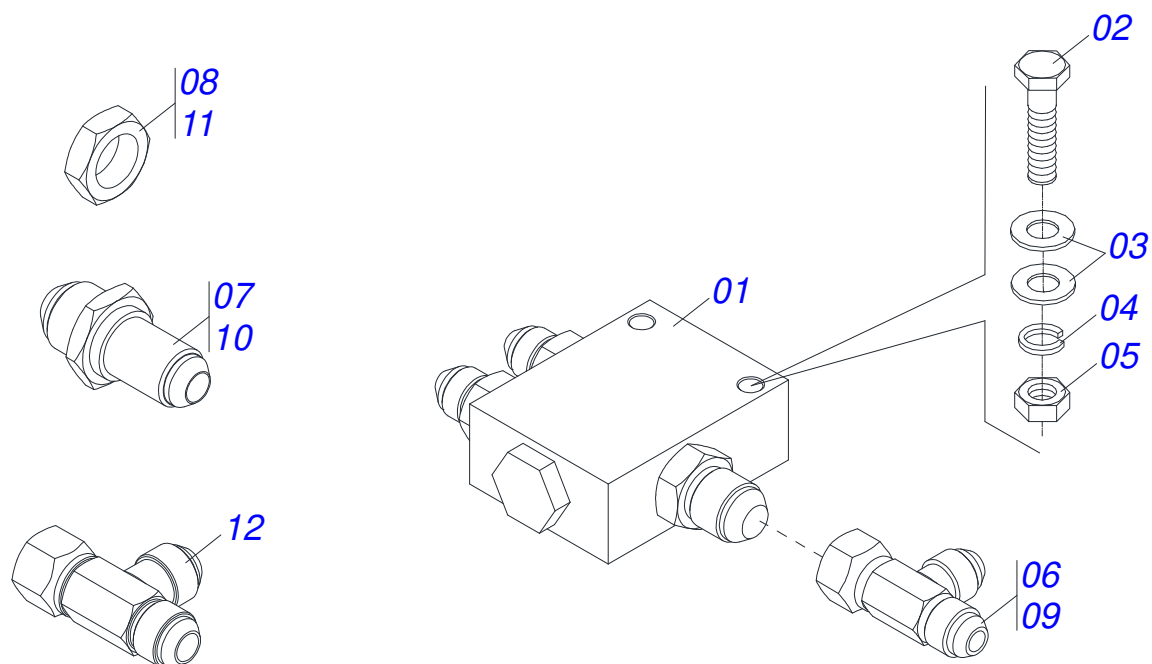


Item	Code	Description	See page	QT
001	0501054452	FLOW DIVIDING VALVE	43	01
002	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
003	0501010694	FLAT WASHER		04
004	0503010143	1/4" SPRING WASHER		02
005	0503010144	1/4" NUT		02
006	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
007	0541012166	NIPPLE 3/4" UNF X 7/8"		01
008	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01
009	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
010	0541012166	NIPPLE 3/4" UNF X 7/8"		01
011	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01
012	0503012341	T 7/8" ADAPOR GIRAT NUT		01

FLOW DIVIDING VALVE

0501054452

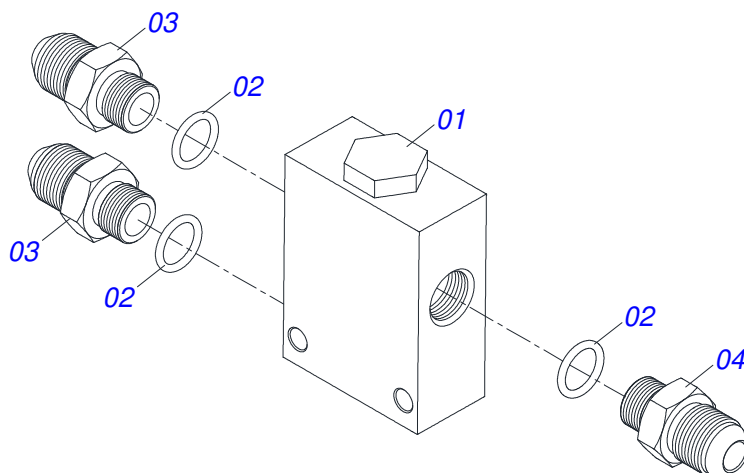

Item	Code	Description	See page	QT
01	0503012481	FLOW DIVIDING VALVE		01
02	0503010190	2-114 N 3006-9B O'RING		03
03	0501010617	3/4" NIPPLE		02
04	0501011460	7/8 NF REDUCTION NIPPLE		01

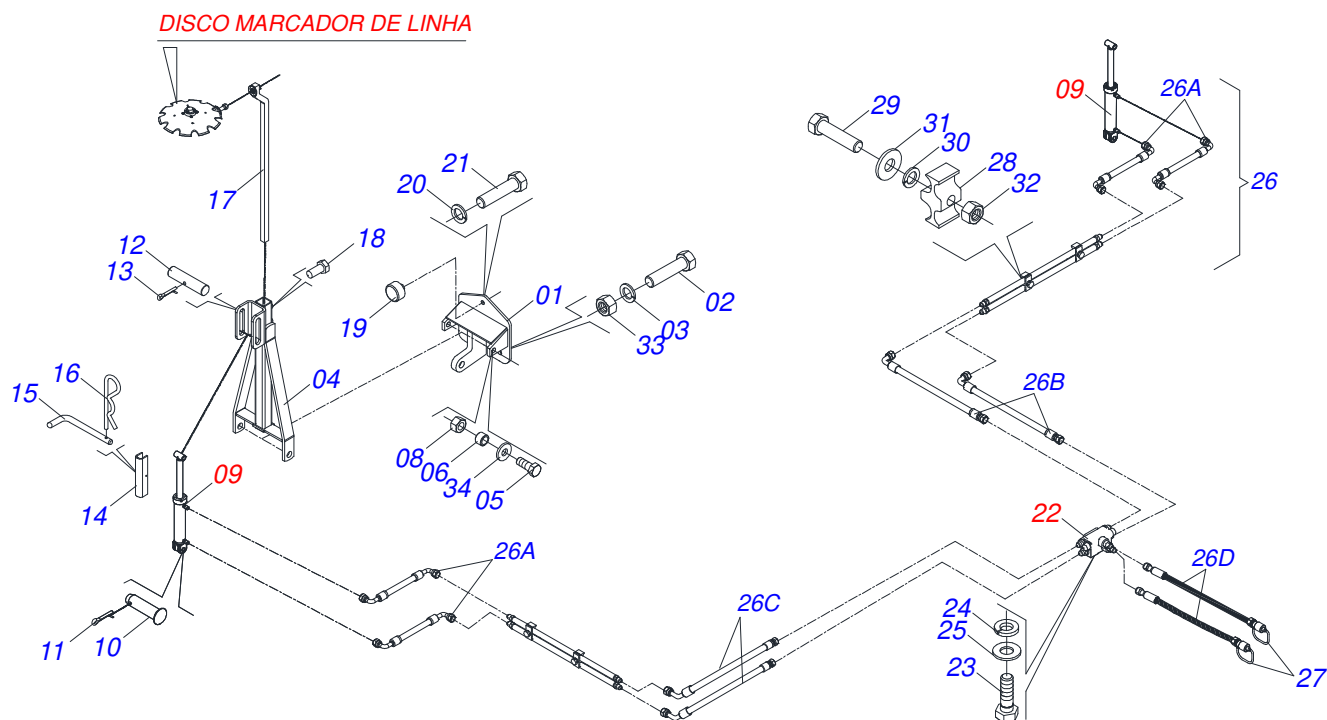

Item	Code	Description	See page	QT
001	0511065449	ROW MARKER ARM SUPPORT		02
002	0501018059	3/4" X 2-1/4" BOLT		08
003	0503010023	3/4" SPRING WASHER		08
004	0501069470	ROW MARKER ARM		02
005	0503011067	5/8" X 2-1/2" BOLT		04
006	0521010479	SLEEVE ARTICULATION		04
008	0503012795	5/8" HEX SELF ADJUSTING NUT		04
009	0511058449	HYDRAULIC CYLINDER	45	02
010	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
011	0503010571	1/4" X 1.1/2 COTTERPIN		02
012	0511015779	1" X 4.2" AXLE		02
013	0503010523	1/4" X 2" COTTERPIN		02
014	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
015	0501068994	8,30 X 78 LOCK PIN		02
016	0503030168	HITCH PIN CLIP		02
017	0501069643	890 TURNBUCKLE		02
018	0503010962	5/8" X 1-1/4" BOLT		04
019	0503011070	BEATER		02
020	0503010019	1/2" SPRING WASHER		02
021	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
022	0501054649	HBM SEQUENTIAL VALVE	46	01
023	0503010371	5/16" X 1" BOLT		02
024	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
025	0501010694	FLAT WASHER		02
026	0511051082	SET OF HYDRAULIC MARKER HOSES		01
026A	0501080687	3/8 X 1150 TC-TC HOSE ASSY		04
026B	0501080436	3/8 X 1600 TR-TC HOSE		02
026C	0501080402	HOSE 3/8 X 1700 TR-TC		02
026D	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
027	0501053834	MALE QUICK COUPLER	48	02
028	0502012702	BODY SUPPORT CLAMP		02


HYDRAULIC MARKER

0511052909


Item	Code	Description	See page	QT
029	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
030	0503010180	7/16" SPRING WASHER		02
031	0501012803	FLAT WASHER		02
032	0503010244	7/16" NUT		04
033	0503011255	3/4" LOCK NUT		08
034	0501012140	FLAT WASHER		04

HYDRAULIC CYLINDER


0511058449

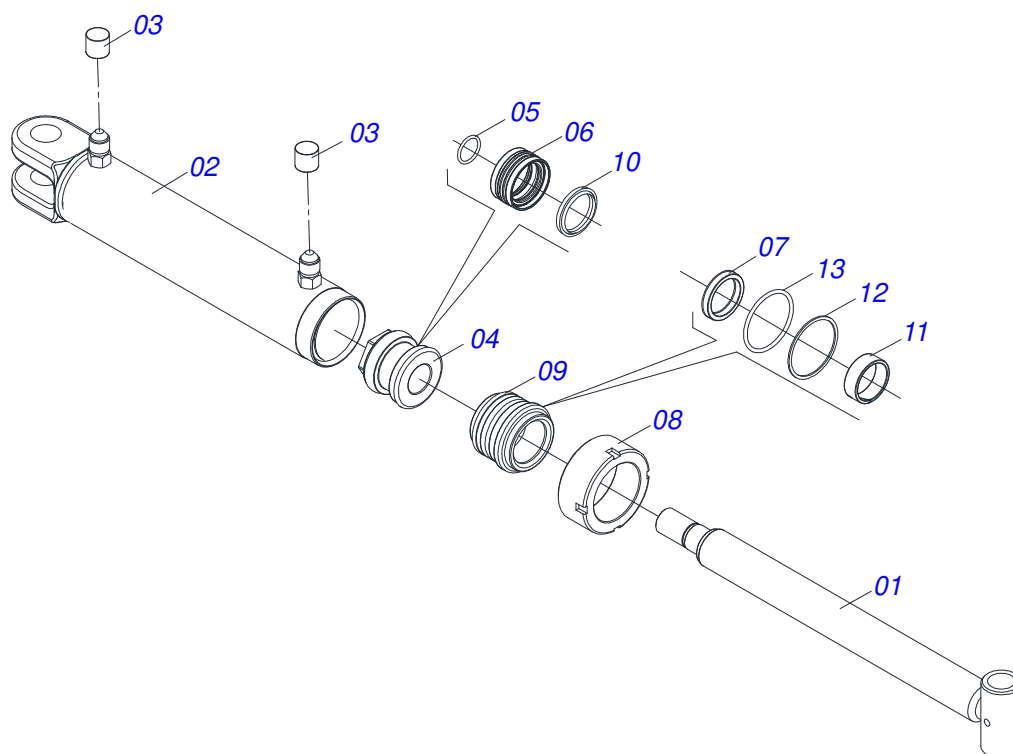


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

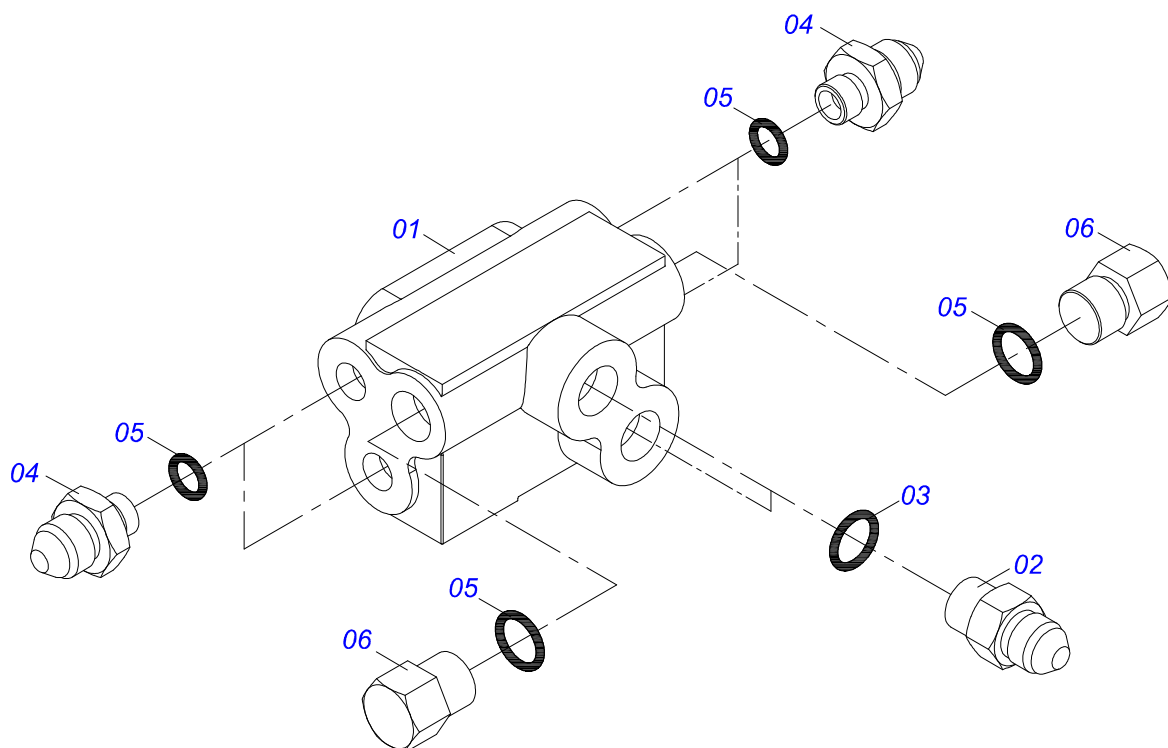


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

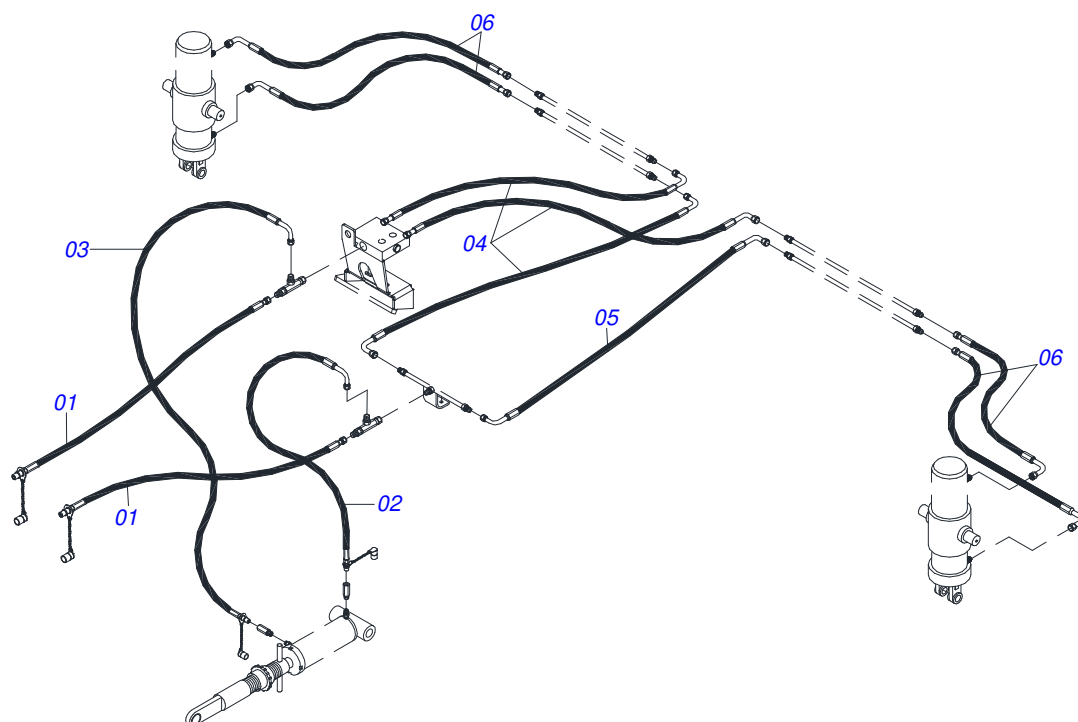

Item	Code	Description	See page	QT
01	0501080933	HOSE 1/2 X 4200 TR-TM		02
02	0501080116	TR-TM HOSE ASSY		01
03	0501080182	1/2" X 850 TR-TM HOSE ASSY		01
04	0501080396	3/8" X 45" HOSE		03
05	0501080687	3/8 X 1150 TC-TC HOSE ASSY		01
06	0501080054	3/8" X 17" TR-TC HOSE ASSY		04

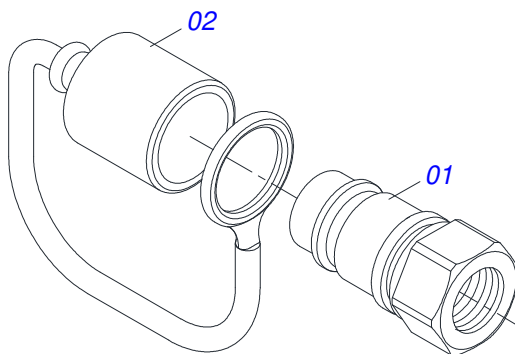


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

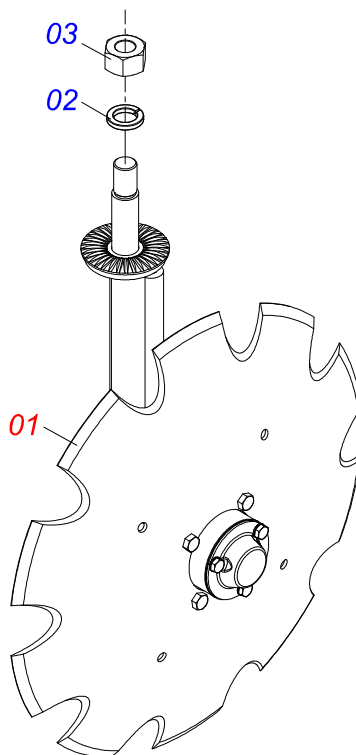


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC	50	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

ROW MARKER DISC


0511053904

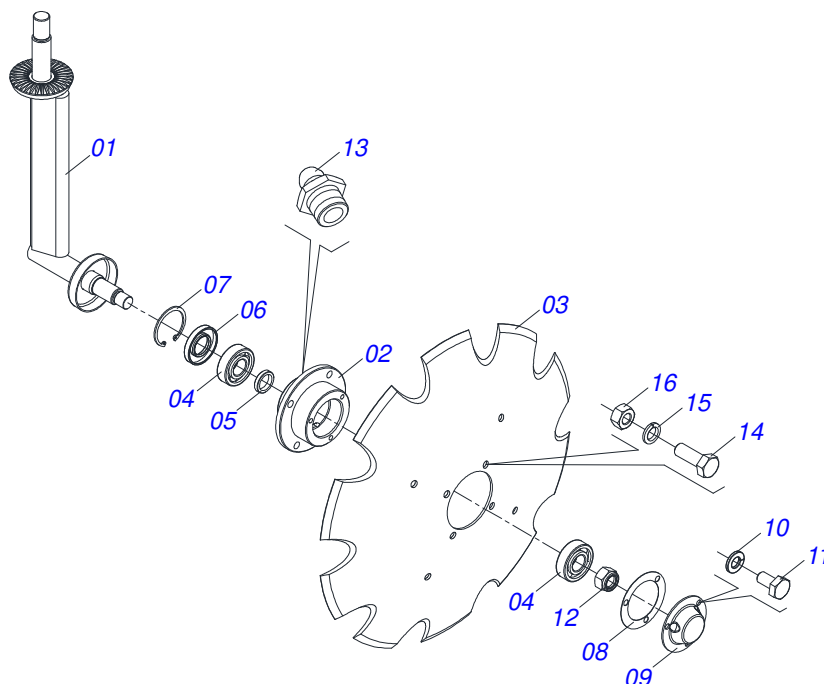


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	PROTECTION LID		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

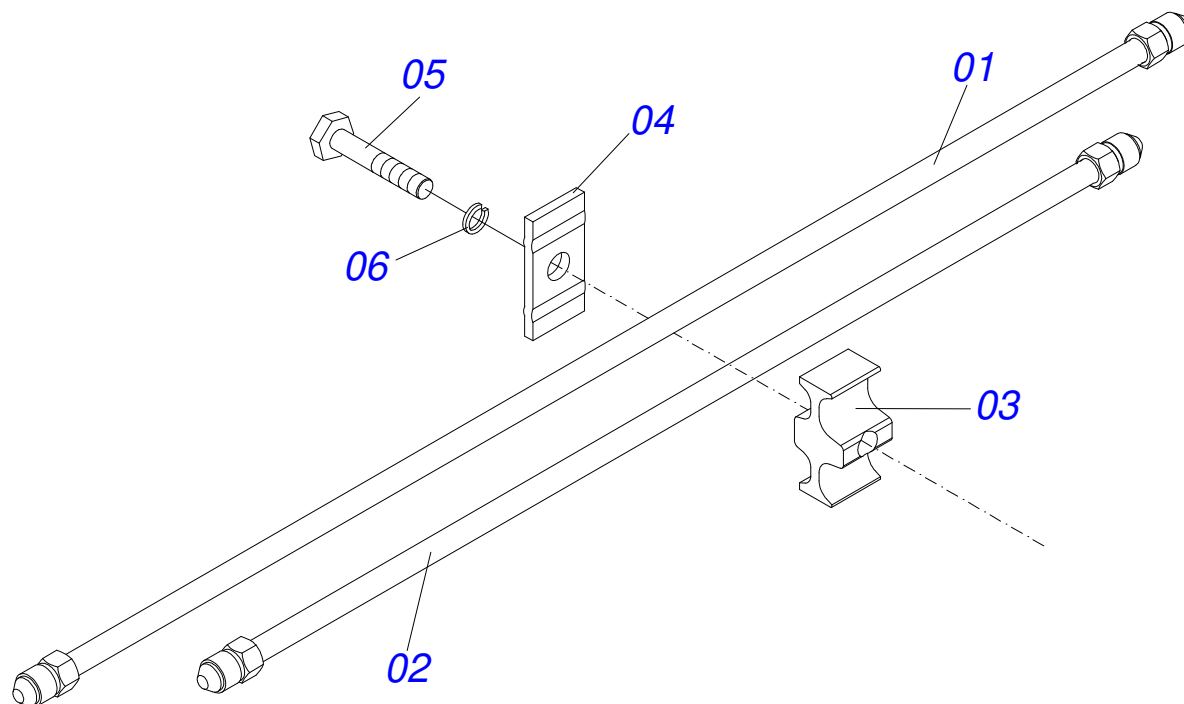


Item	Code	Description	See page	QT
001	0521062404	OIL TUBE		04
002	0521063408	OIL TUBE		04
003	0502012702	BODY SUPPORT CLAMP		04
004	0531011180	UPPER BODY CLIP		04
005	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
006	0503010180	7/16" SPRING WASHER		04

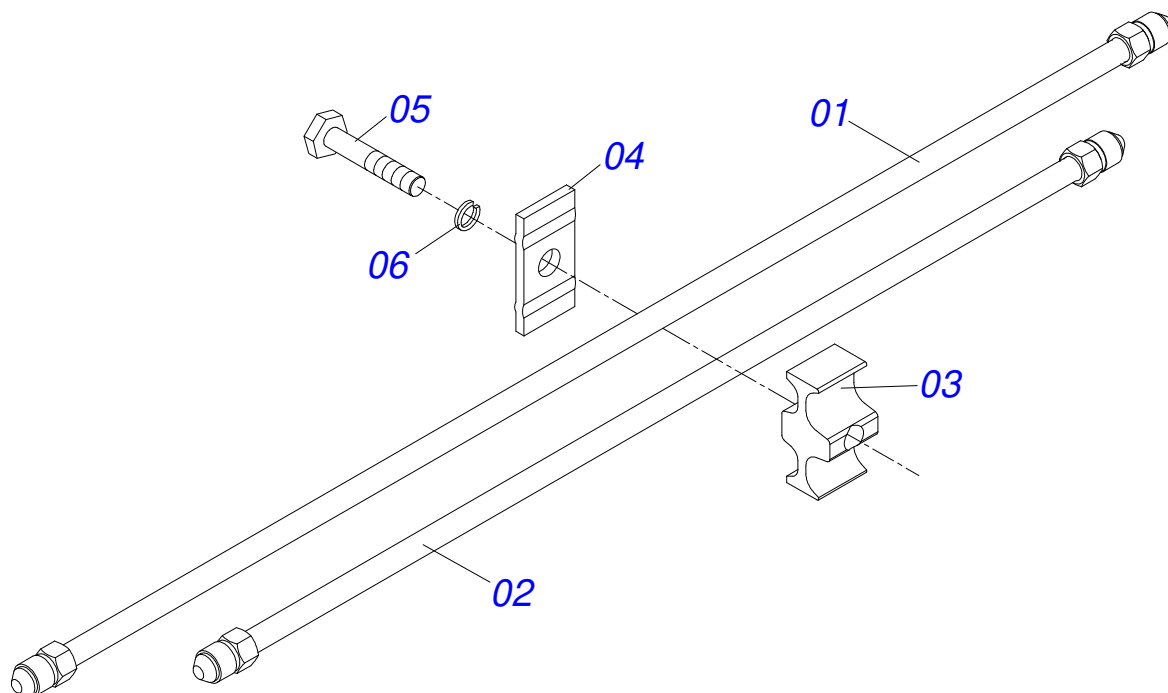

Item	Code	Description	See page	QT
001	0521061340	OIL TUBE		04
002	0521063409	2120 OIL TUBE		04
003	0502012702	BODY SUPPORT CLAMP		04
004	0531011180	UPPER BODY CLIP		04
005	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
006	0503010180	7/16" SPRING WASHER		04

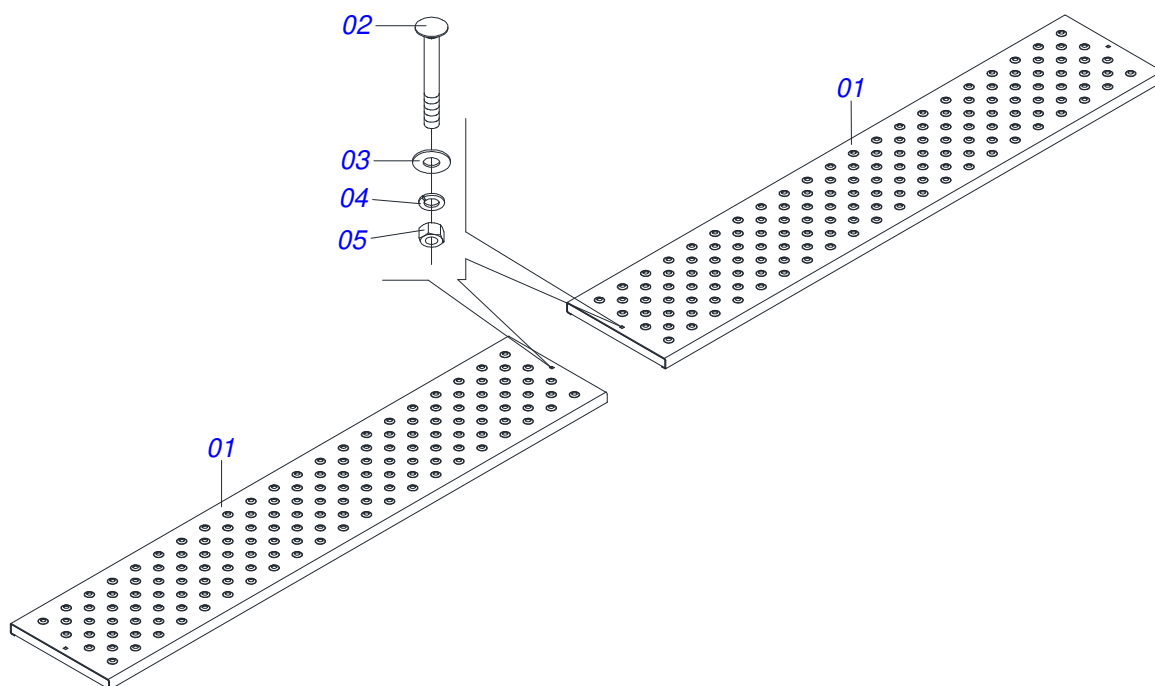


Item	Code	Description	See page	QT
01	0521062416	PLATFORM		02
02	0501011755	3/8" X 3" BOLT		04
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04

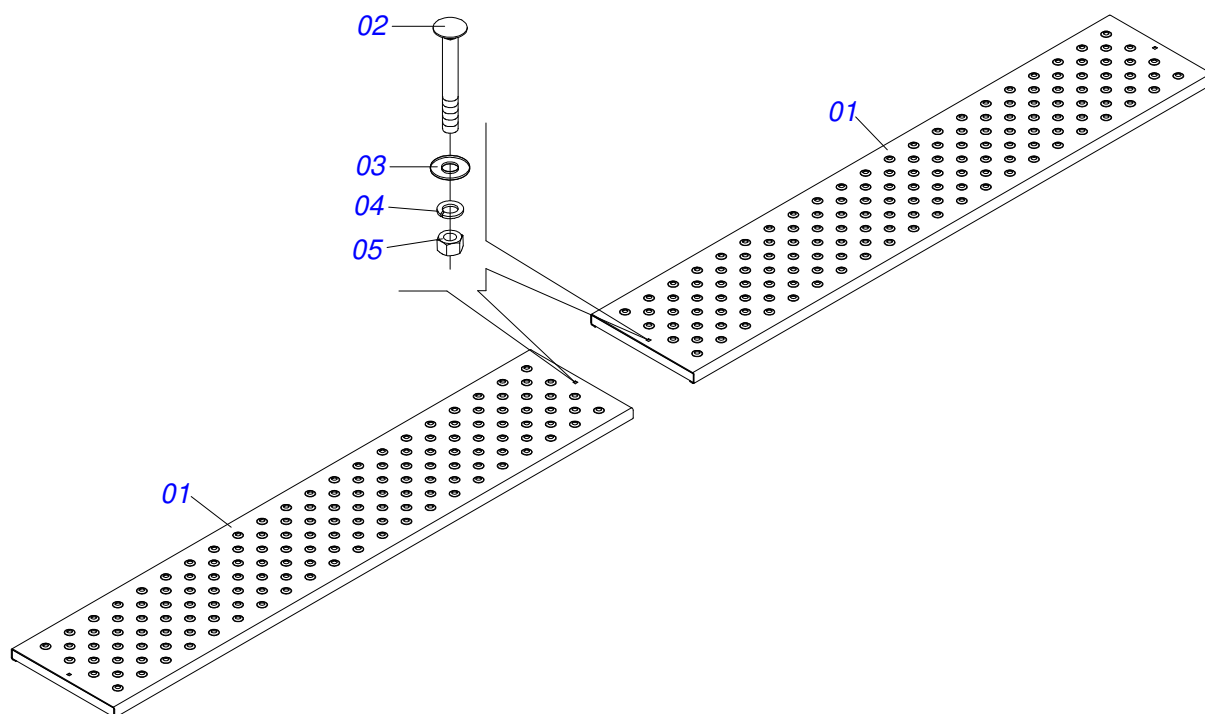

Item	Code	Description	See page	QT
01	0521061333	PLATFORM		02
02	0501011755	3/8" X 3" BOLT		04
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04

HANDRAIL ASSEMBLE


0511053916

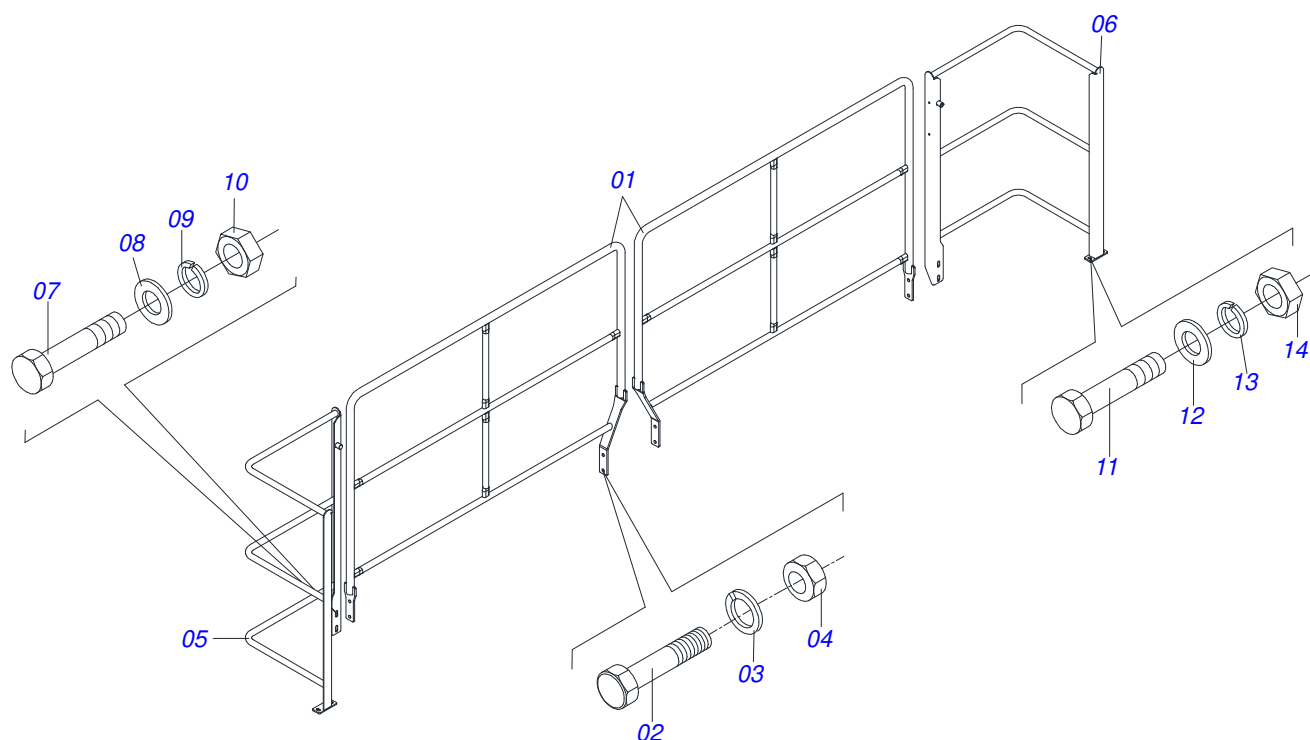

Item	Code	Description	See page	QT
01	0521062417	HANDRAIL	02	
02	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT	08	
03	0503010019	1/2" SPRING WASHER	08	
04	0503010060	1/2 UNC G.5 ZN HEX NUT	08	
05	0521061335	RIGHT SIDE HANDRAIL	01	
06	0521061336	LH SIDE HANDRAIL	01	
07	0503011088	3/8" X 1-1/4" BOLT	04	
08	0501010984	10,50 X 27 X 3,00 FLAT WASHER	08	
09	0503010025	3/8 SPRING WASHER	04	
10	0503010026	3/8" NUT	04	
11	0501010161	1/2" X 1.1/4" BOLT	04	
12	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN	04	
13	0503010019	1/2" SPRING WASHER	04	
14	0503010060	1/2 UNC G.5 ZN HEX NUT	04	

HANDRAIL ASSEMBLE


0511053889

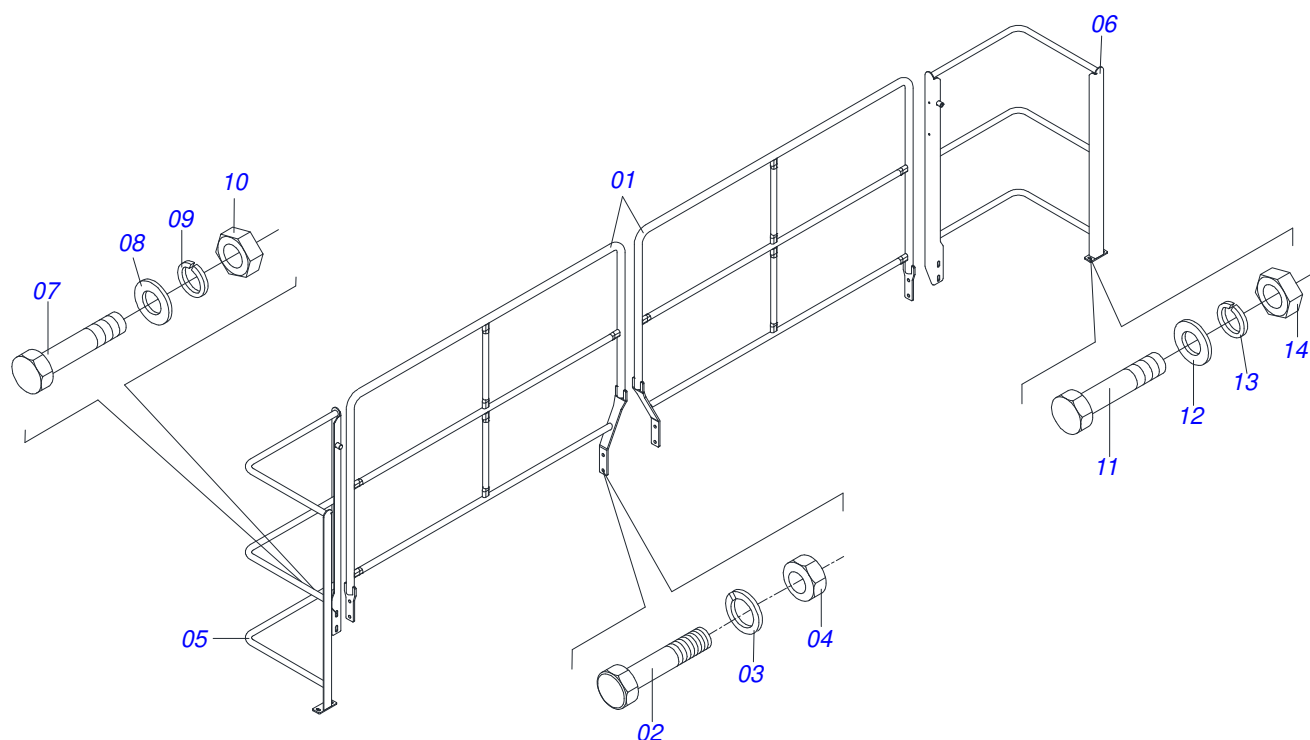

Item	Code	Description	See page	QT
01	0521061334	HANDRAIL		02
02	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		08
03	0503010019	1/2" SPRING WASHER		08
04	0503010060	1/2 UNC G.5 ZN HEX NUT		08
05	0521061335	RIGHT SIDE HANDRAIL		01
06	0521061336	LH SIDE HANDRAIL		01
07	0503011088	3/8" X 1-1/4" BOLT		04
08	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
09	0503010025	3/8 SPRING WASHER		04
10	0503010026	3/8" NUT		04
11	0501010161	1/2" X 1.1/4" BOLT		04
12	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
13	0503010019	1/2" SPRING WASHER		04
14	0503010060	1/2 UNC G.5 ZN HEX NUT		04

HANDRAIL ASSEMBLE


0511053890

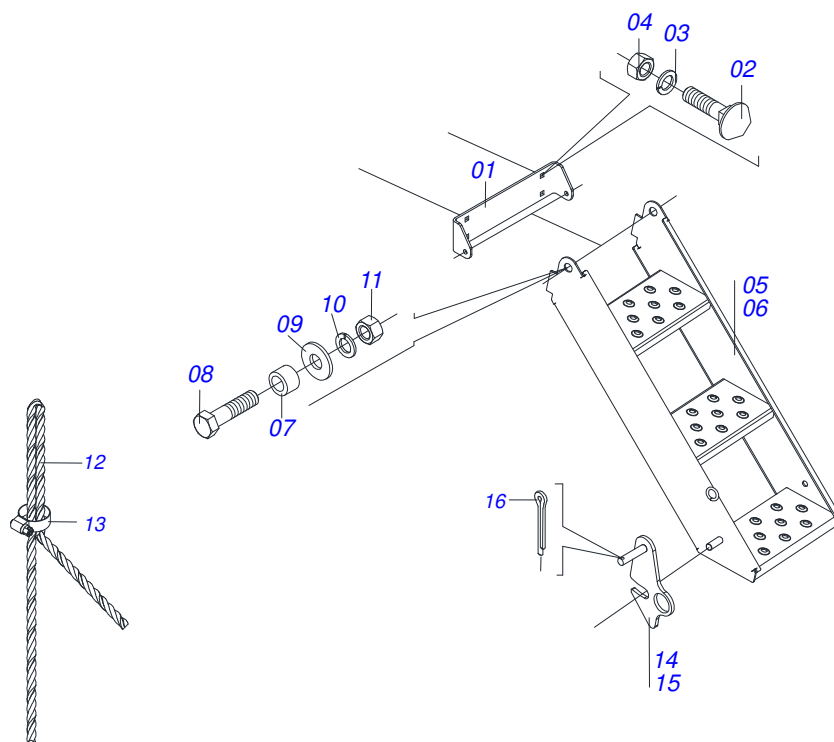

Item	Code	Description	See page	QT
001	0561015343	ARTICULACION SUPPORT		02
002	0501010243	1/2" X 1-1/2" BOLT		08
003	0503010019	1/2" SPRING WASHER		08
004	0503010060	1/2 UNC G.5 ZN HEX NUT		08
005	0521061331	RIGHT LADDER		01
006	0521061332	LEFT LADDER		01
007	0531018627	0.5" X 1" X 0.2" SLEEVE		04
008	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
009	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
010	0503010019	1/2" SPRING WASHER		04
011	0503010060	1/2 UNC G.5 ZN HEX NUT		04
012	0511010369	3/8" X 74.80" LEVER ROPE		02
013	0503010296	CLAMP		04
014	0511065678	STAIR RIGHT LOCK		01
015	0511065679	STAIR RIGHT LOCK		01
016	0503010257	1/8" X 1" COTTERPIN		02

ASSY FIXER HEADER


0511053085

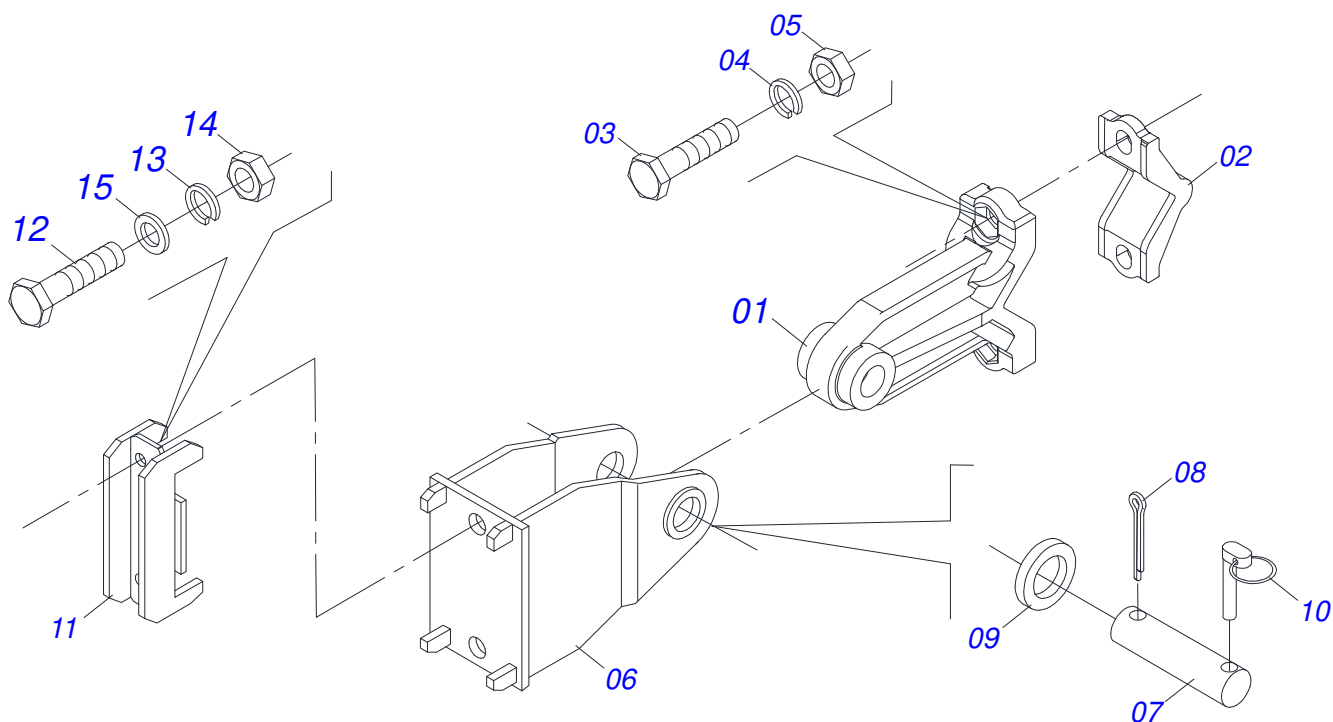


Item	Code	Description	See page	QT
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	04	
02	0502012330	SUPPORT FIXER PIVOT	04	
03	0503011084	3/4" X 5" BOLT	08	
04	0503010023	3/4" SPRING WASHER	08	
05	0503010014	3/4" HEX NUT	08	
06	0511065418	DRAWBAR SUPPORT FRONT FIXATION	04	
07	0561014393	COUPLING SHAFT	04	
08	0503010523	1/4" X 2" COTTERPIN	04	
09	0501012916	FLAT WASHER 40 X 66 X 4,75 ZN	08	
10	0503030119	LOCK PIN	04	
11	0511065419	DRAWBAR FIXER CLAMP	04	
12	0521010066	3/4" X 8.12" BOLT	08	
13	0503010023	3/4" SPRING WASHER	08	
14	0503010014	3/4" HEX NUT	08	
15	0501010322	FLAT WASHER	08	

DRAWBAR ASSY


0511043100

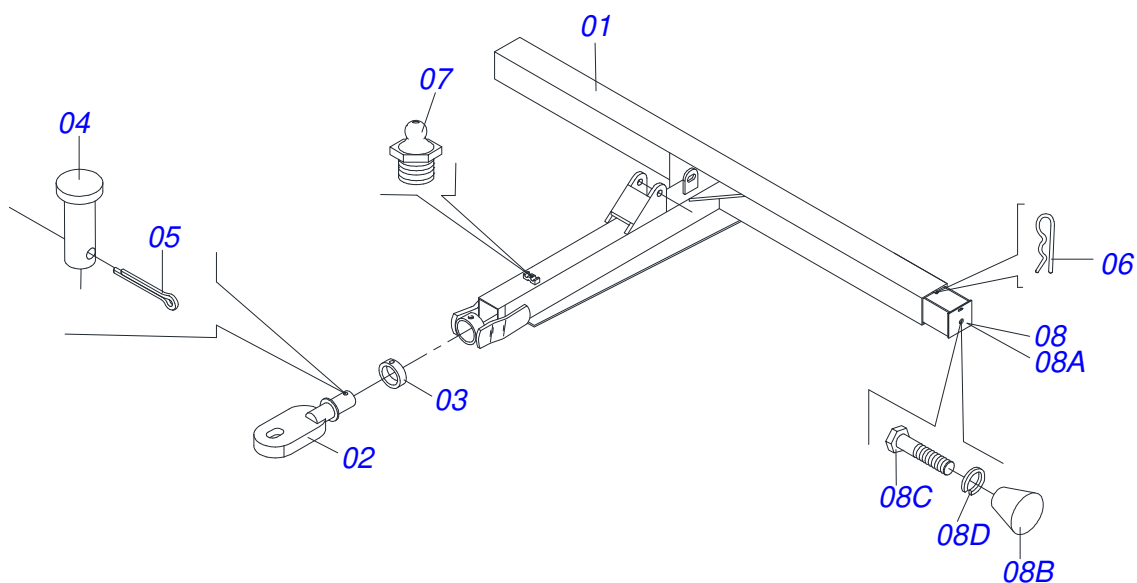

Item	Code	Description	See page	QT
001	0511065905	DRAWBAR COP-CE		01
002	0501069632	TRACTOR HITCH		01
003	0521010681	BUSHING COUPLING BODY		01
004	0521010639	COUPLING SHAFT		01
005	0503010571	1/4" X 1.1/2 COTTERPIN		01
006	0503030012	HITCH PIN CLIP		02
007	0503010002	1800 GREASE FITTING		01
008	0511043137	TOOLS BOX ASSY		02
008A	0511065471	BOX OF TOOLS		01
008B	0503010293	CLAMP KNOB		01
008C	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
008D	0503011443	3/8" SPRING WASHER		01

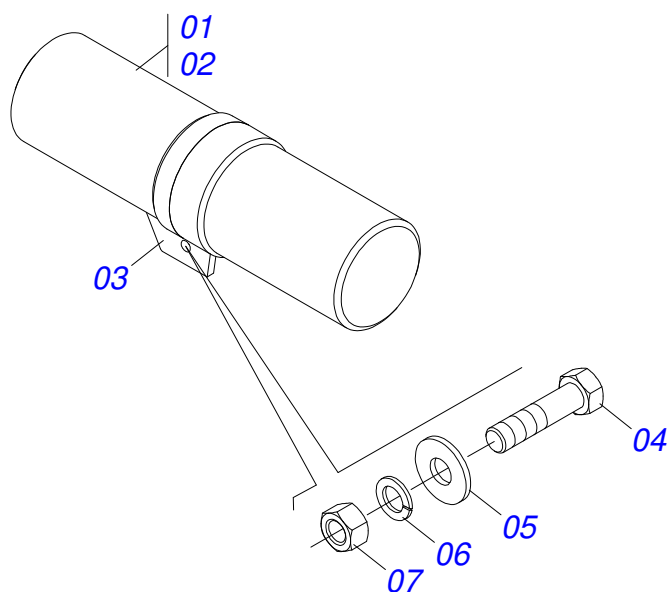


Item	Code	Description	See page	QT
001	0503060100	INSTRUCTIONS MANUAL CANISTER		01
002	0511031937	BAG WITH MANUAL CATALOG		01
003	0503010267	NYLON CLAMP		01
004	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
005	0501010694	FLAT WASHER		01
006	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
007	0503010337	5/16" NUT		01

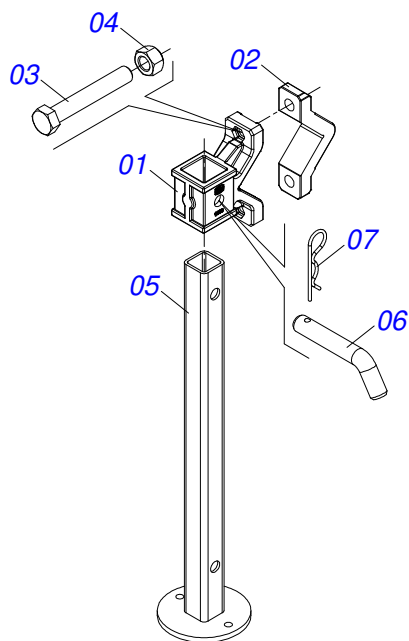


Item	Code	Description	See page	QT
01	0502011530	SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	5/8 UNC SELF LOCKING NUT		04
05	0501069951	PLOUGH SUPPORT		04
06	0501011075	PIN		02
07	0503030012	HITCH PIN CLIP		02

HEXAGONAL AXLE ASSEMBLY


0511053886

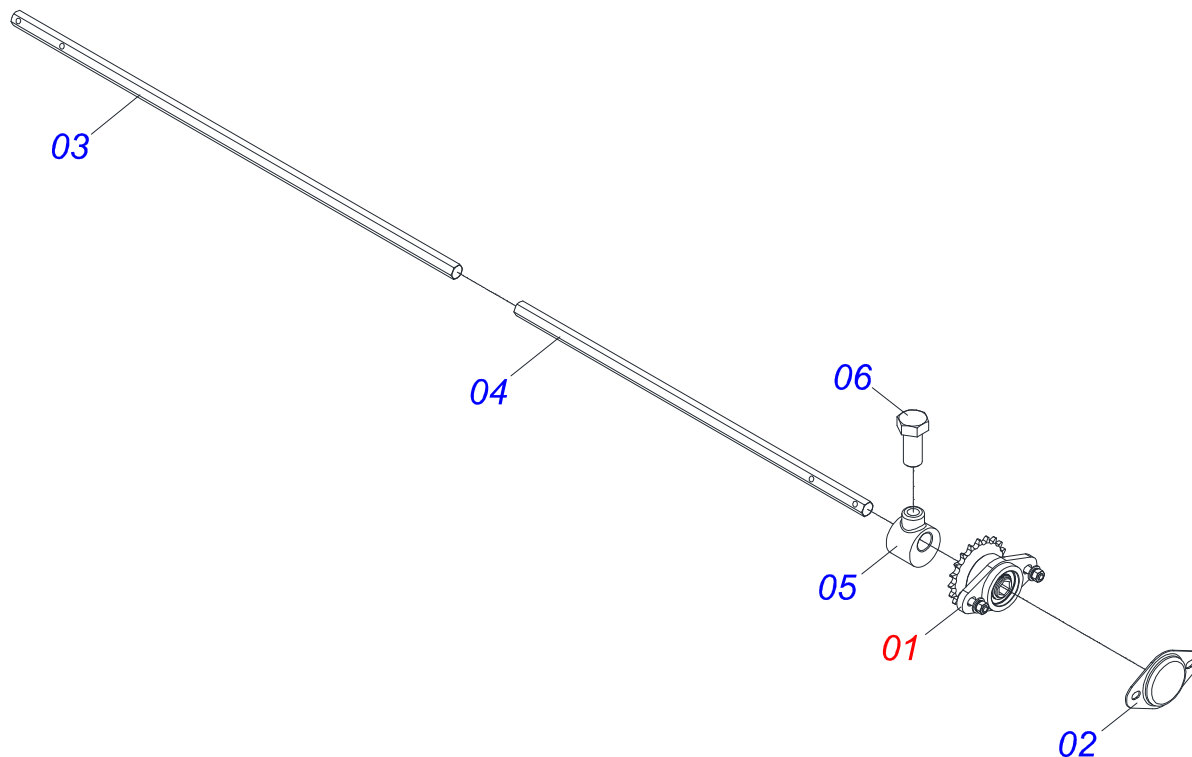


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	63	02
02	0561014215	BEARING COVER LOWER ROW FRAME		02
03	0561018823	5/8" X 2250 MOTOR SHAFT		01
04	0531016942	RIGHT HEX AXLE 5/8 X 2050		01
05	0502040534	SPRING GUIDE BUSHING LOCK		04
06	0501018535	1/2 X 1 BOLT		04

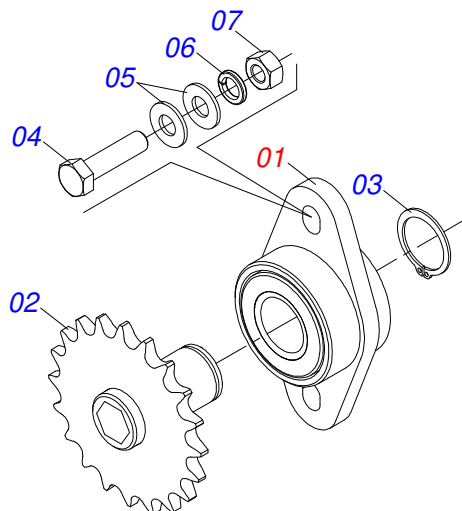


Item	Code	Description	See page	QT
01	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8	64	01
02	0511063106	20Z AXLE BEARING DOUBLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

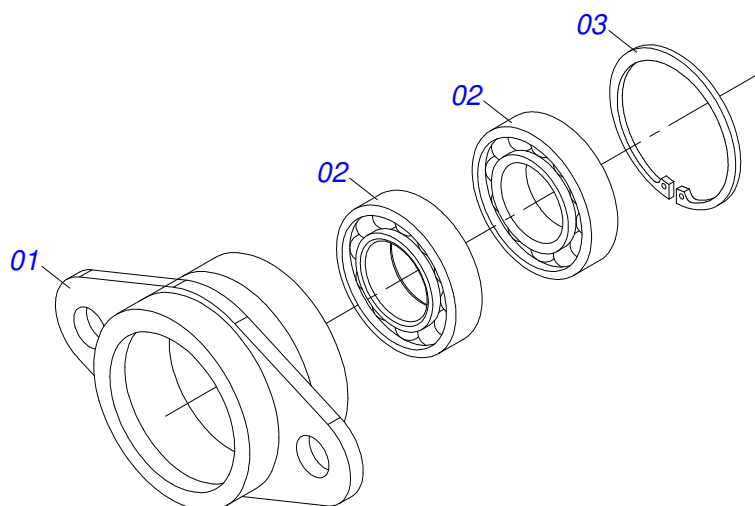


Item	Code	Description	See page	QT
01	0502011987	DOUBLE HOUSING BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01

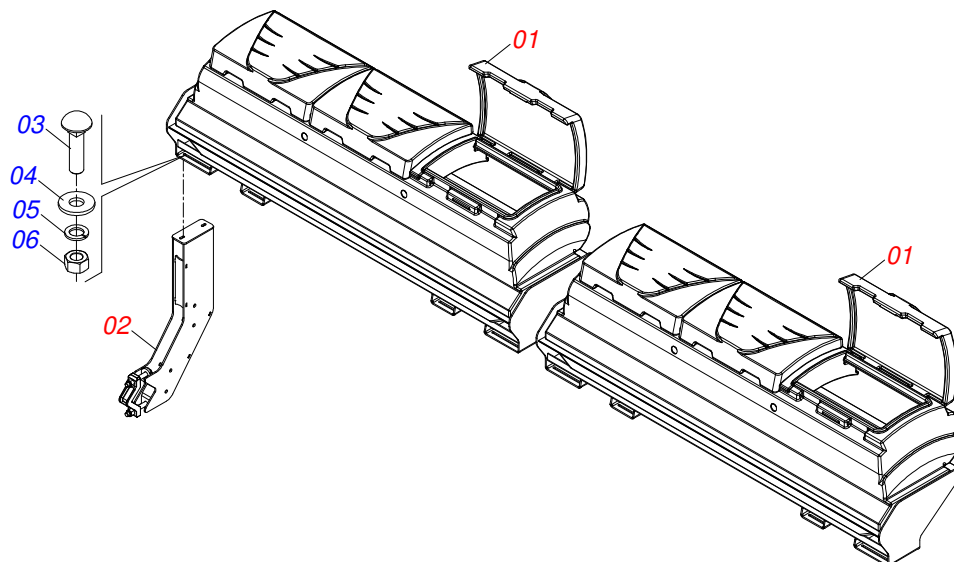


Item	Code	Description	See page	QT
01	0511058100	2 HOPPERS WITH 9 CONDUCTORS SET	67	01
02	0521051927	TOWER SUPPORT HOPPER	71	04
03	0501010942	3/8" X 1-1/4" BOLT		08
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
05	0503010025	3/8 SPRING WASHER		08
06	0503010026	3/8" NUT		08

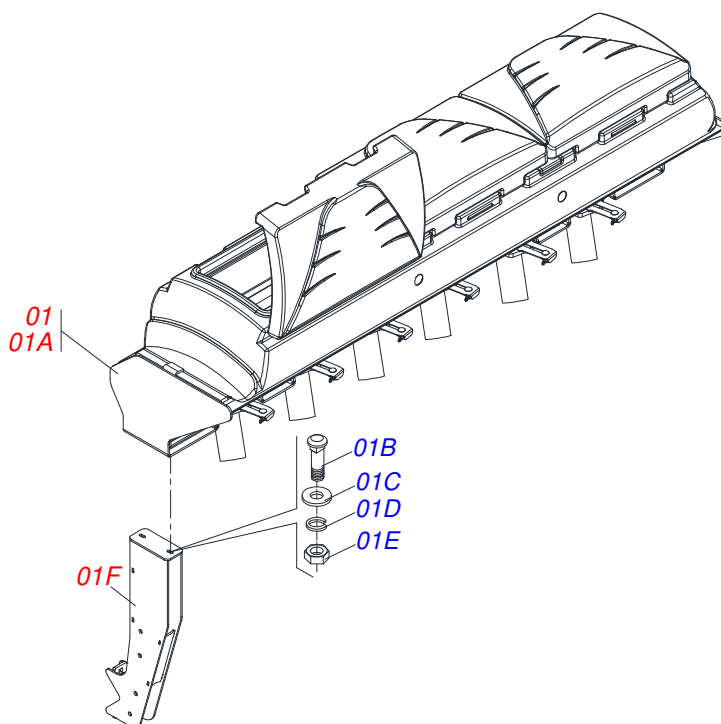


Item	Code	Description	See page	QT
001	0521050110	ASSEMBLY CSU	69	02
001A	0521050109	ASSEMBLY CSU	70	01
001B	0501010942	3/8" X 1-1/4" BOLT		04
001C	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
001D	0503010025	3/8 SPRING WASHER		04
001E	0503010026	3/8" NUT		04
001F	0521051927	TOWER SUPPORT HOPPER	71	02

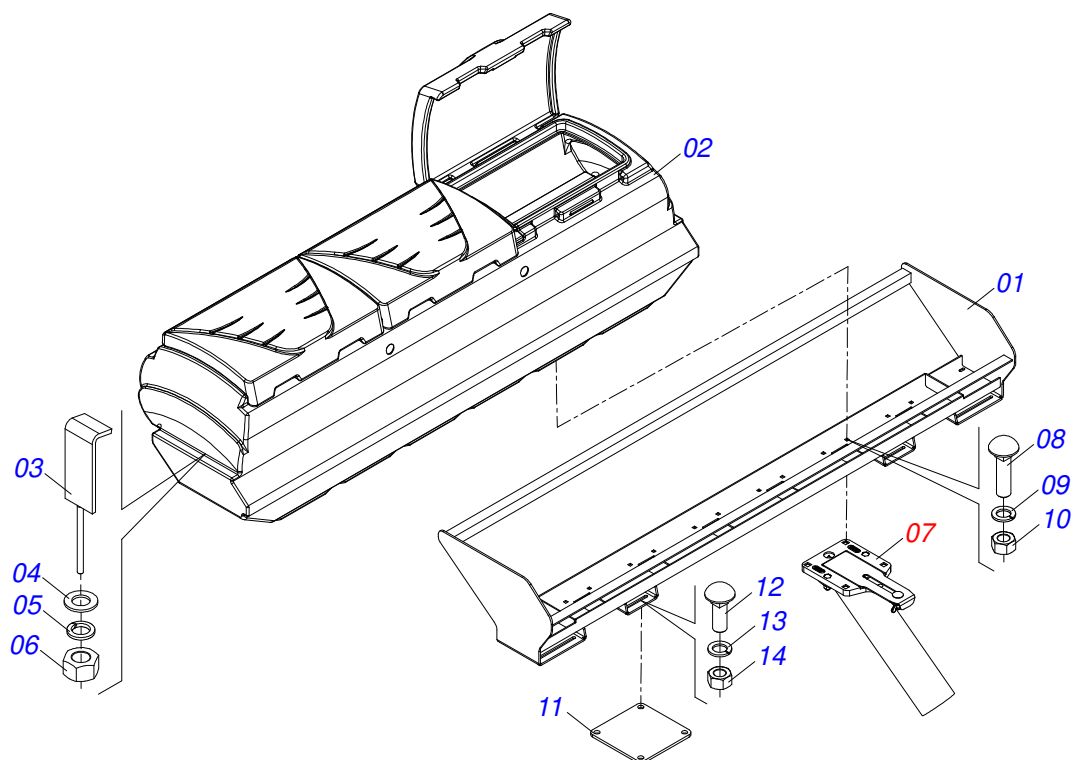


Item	Code	Description	See page	QT
01	0521064813	6 NOZZLES SINGLE SEED HOPPER SUPPORT		02
02	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		02
03	0521063401	FIXING LOCK		04
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0503010025	3/8 SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0511057690	3" ARTICULATED SEED CONDUCTOR	68	09
08	0501010942	3/8" X 1-1/4" BOLT		36
09	0503010025	3/8 SPRING WASHER		36
10	0503010026	3/8" NUT		36
11	0571015773	SUPPORT SEED		03
12	0501011643	3/8 X 1"BOLT		12
13	0503010025	3/8 SPRING WASHER		12
14	0503010026	3/8" NUT		12

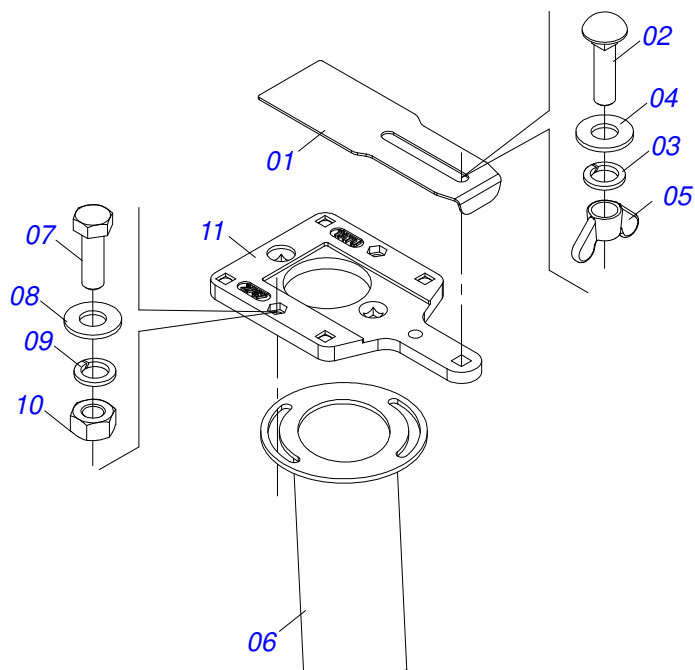


Item	Code	Description	See page	QT
01	0571015779	ARTICULATION NOZZLE SUPPORT LID		01
02	0501010942	3/8" X 1-1/4" BOLT		01
03	0503010025	3/8 SPRING WASHER		01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
05	0503010209	3/8" UNC BUTTERFLY NUT		01
06	0521066332	CONDUCTOR WITH FLANGE		01
07	0503010371	5/16" X 1" BOLT		02
08	0501010694	FLAT WASHER		02
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
10	0503010337	5/16" NUT		02
11	0502012767	SEED NOZZLE FIXER SUPPORT		01

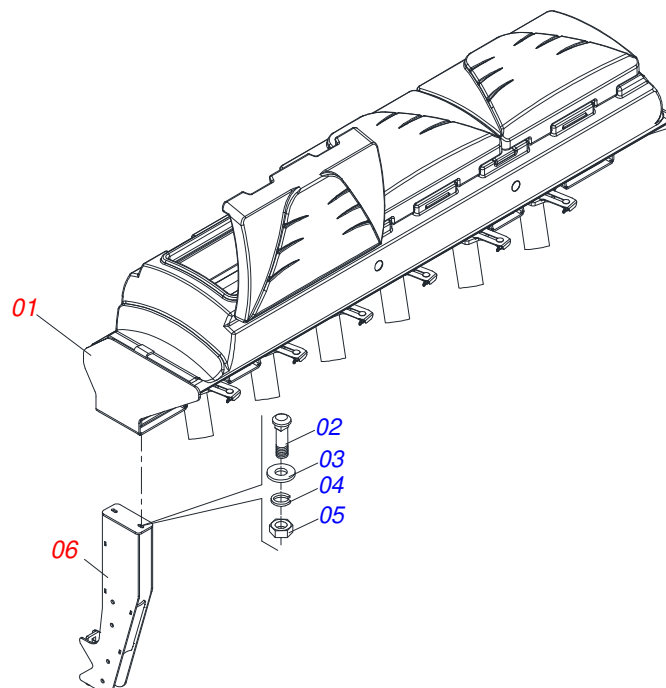

Item	Code	Description	See page	QT
001	0521050109	ASSEMBLY CSU	70	01
002	0501010942	3/8" X 1-1/4" BOLT		04
003	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
004	0503010025	3/8 SPRING WASHER		04
005	0503010026	3/8" NUT		04
006	0521051927	TOWER SUPPORT HOPPER	71	02

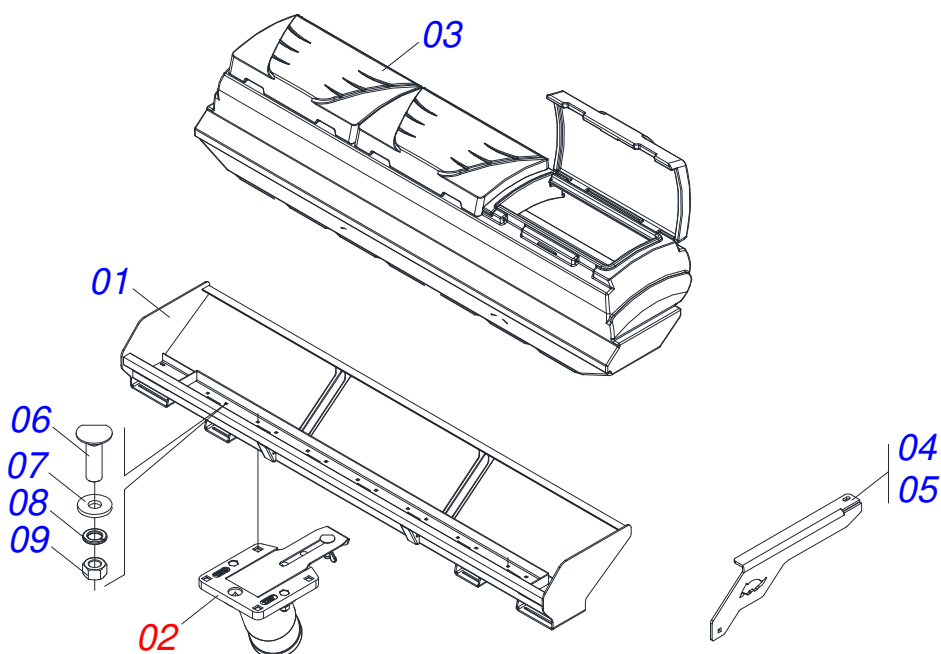


Item	Code	Description	See page	QT
001	0521067411	FERTILIZER BOX SUPPORT		01
002	0511057690	3" ARTICULATED SEED CONDUCTOR	68	05
003	0503061987	05 NOZZLES FERTILIZER HOPPER		01
004	0581013196	LEFT LOCK		01
005	0581013195	LOCK RIGHT		01
006	0501010942	3/8" X 1-1/4" BOLT		24
007	0501013518	FLAT WASHER		04
008	0503010025	3/8 SPRING WASHER		24
009	0503010026	3/8" NUT		24

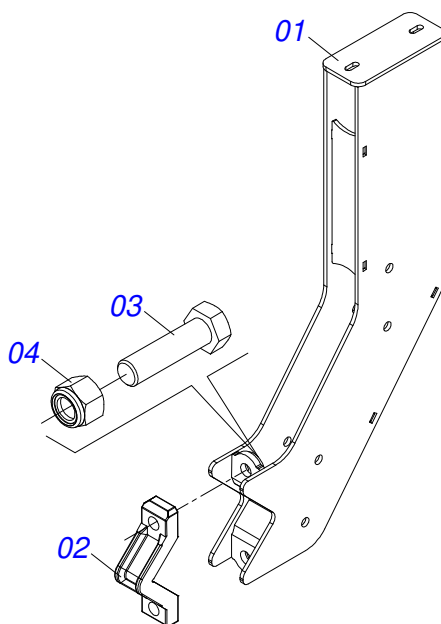


Item	Code	Description	See page	QT
01	0521066208	HOPPER SUPPORT TOWER		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

DRAWBAR ESTABILIZER


0501055579

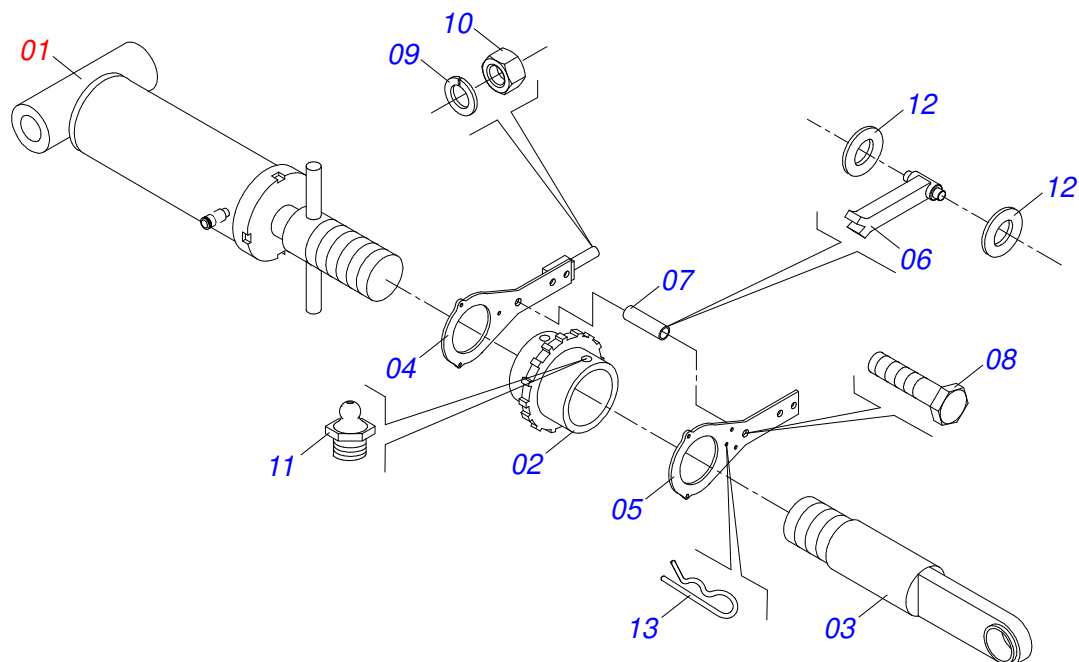


Item	Code	Description	See page	QT
001	0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER	73	01
002	0502011237	ESTABILIZER BODY		01
003	0511065467	LH SCREW ARBOR		01
004	0511061880	SIDE RIGHT RATCHET		01
005	0531010264	SIDE RATCHET		01
006	0511061881	RATCHET FOLLOWER		01
007	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
008	0503011179	3/8" X 2-1/4" BOLT		05
009	0503010025	3/8 SPRING WASHER		05
010	0503010026	3/8" NUT		05
011	0503010002	1800 GREASE FITTING		02
012	0521018517	FLAT WASHER		02
013	0503030012	HITCH PIN CLIP		01

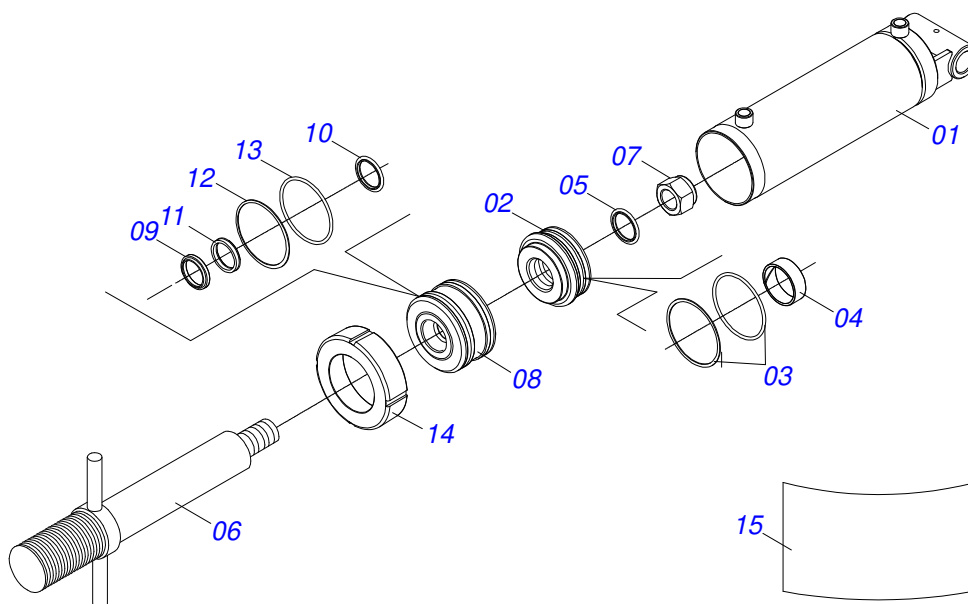


Item	Code	Description	See page	07
01	0511064908	4.5" X 25.4" CYLINDER CASE		01
02	0502011221	2.0" X 4.5" PISTON		01
03	0503011890	3750-3750 GASKET		02
04	0503011891	W2-4500-500 RING G.E		01
05	0503010345	2-218 N 3006-9B O'RING		01
06	0511064909	2" X 14.4" TURNBUCLE		01
07	0503010817	1.1/4" SELF LOCKING NUT		01
08	0502011220	2" X 4.5" RING SUPPORT		01
09	0503010952	W2-2250-500 RING		01
10	0503010991	1870-2000-375-B GASKET		01
11	0503010039	D-2000 SCRAPER RING		01
12	0503011892	O' RING, 2-346 N 3006-9B		01
13	0503011893	BACK-UP RING, 8-346		01
14	0502011222	0.56" END CAP		01
15	0501032513	HYDRAULIC CYLINDER REPAIR KIT		01

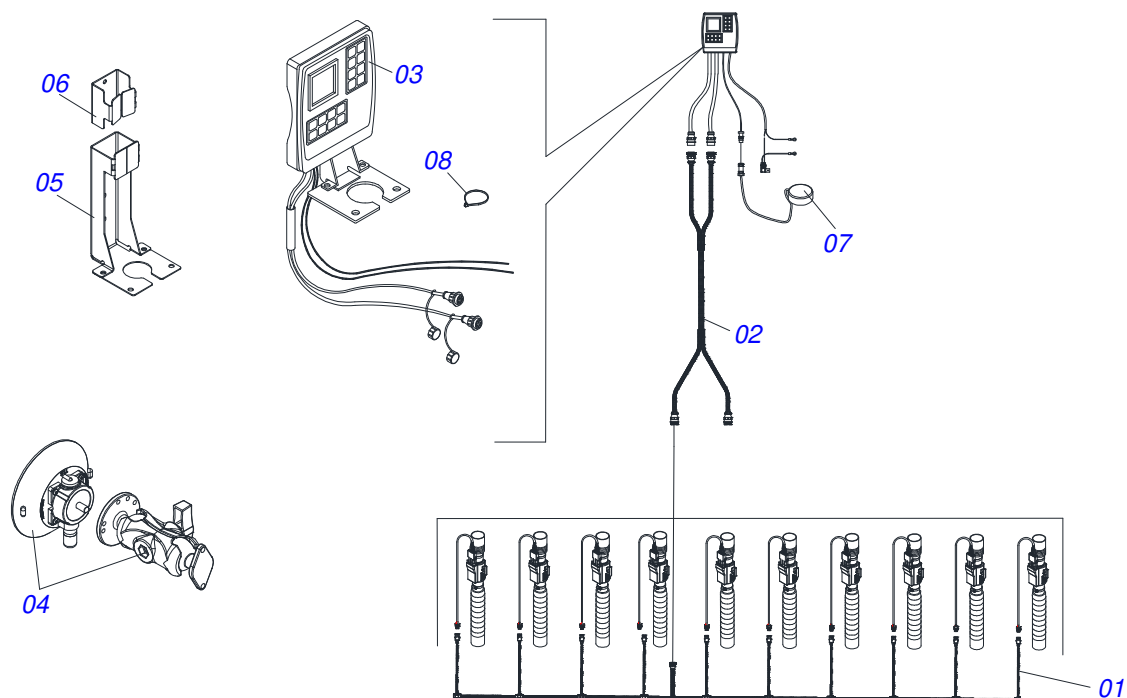


Item	Code	Description	See page	10 L
01	0503016556	10 ROW SIMPLE MONITOR CABLE	01	
02	0503017577	CAB UNIC PM400	01	
03	0503017602	MONITOR PLANT PM400	01	
04	0503016234	TRIMBLE FIXING WINDOW	01	
05	0503016452	FIXING SUPPORT AG500 TRIMBLE	01	
06	0571012196	MOUNTING BRACKET PM 400	01	
07	0503017443	ANTENNA GPS PM 400	01	
08	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP	150	

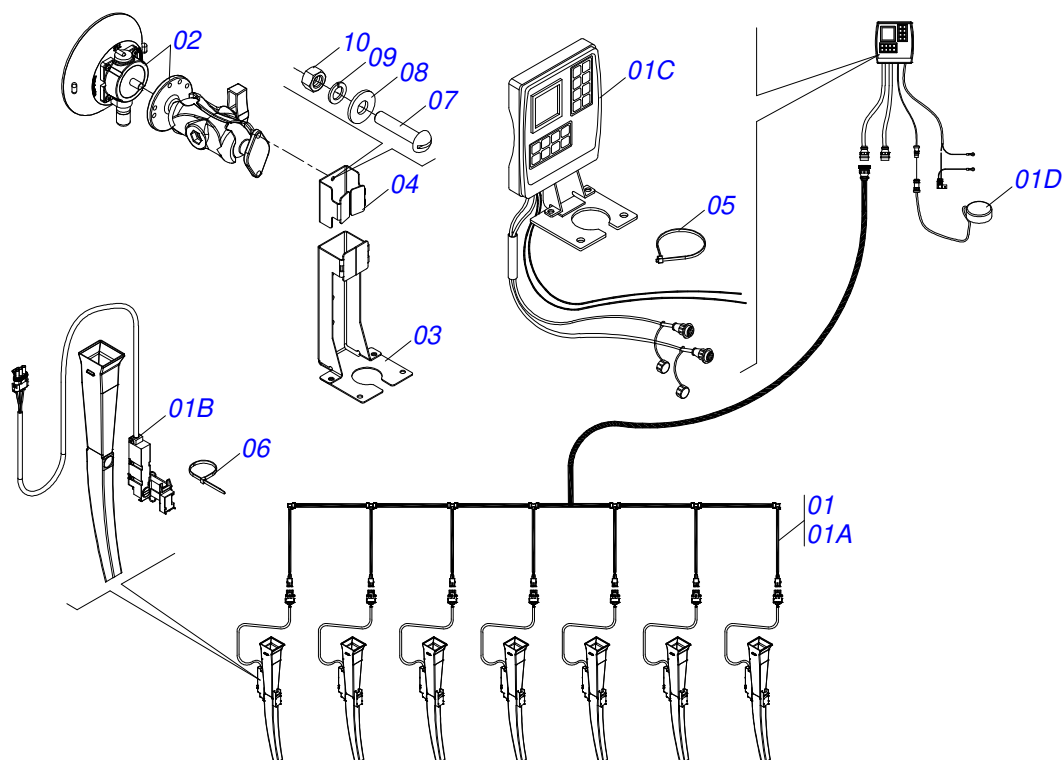

Item	Code	Description	See page	QT
01	0503062792	SEED MONITORING KIT		01
01A	0503016553	7 ROW SIMPLE MONITOR CABLE		01
01B	0503019100	SENSOR		07
01C	0503017602	MONITOR PLANT PM400		01
01D	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		35
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		105
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02

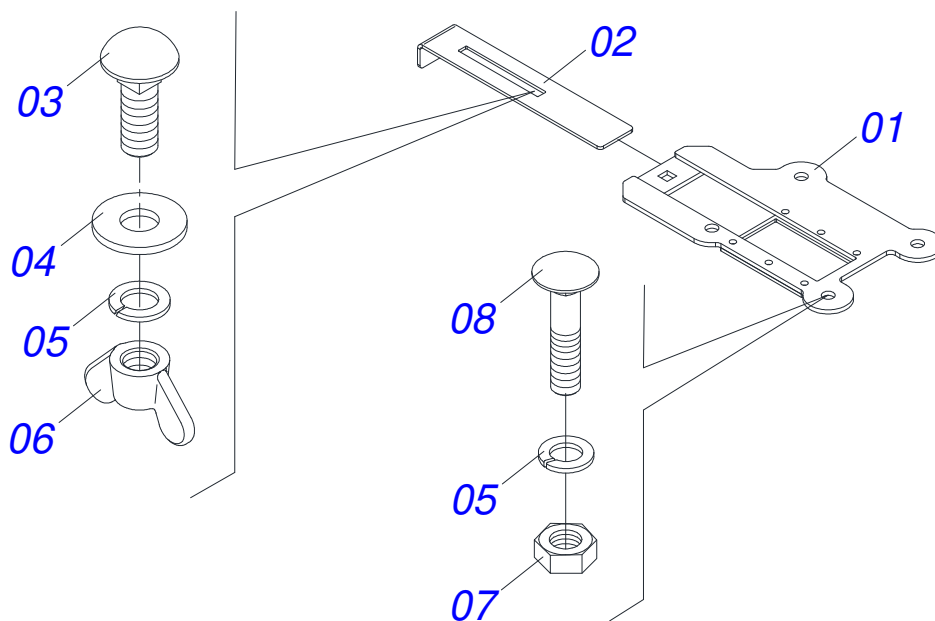


Item	Code	Description	See page	QT
001	0521067215	BASE SUPPORT PRECISION PLANTING		01
002	0581012522	SEED DISTRIBUTOR BOX SWITCH		01
003	0501011643	3/8 X 1"BOLT		01
004	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
005	0503010025	3/8 SPRING WASHER		05
006	0503010209	3/8" UNC BUTTERFLY NUT		01
007	0503010026	3/8" NUT		04
008	0503010849	3/8" X 1-1/2" BOLT		04

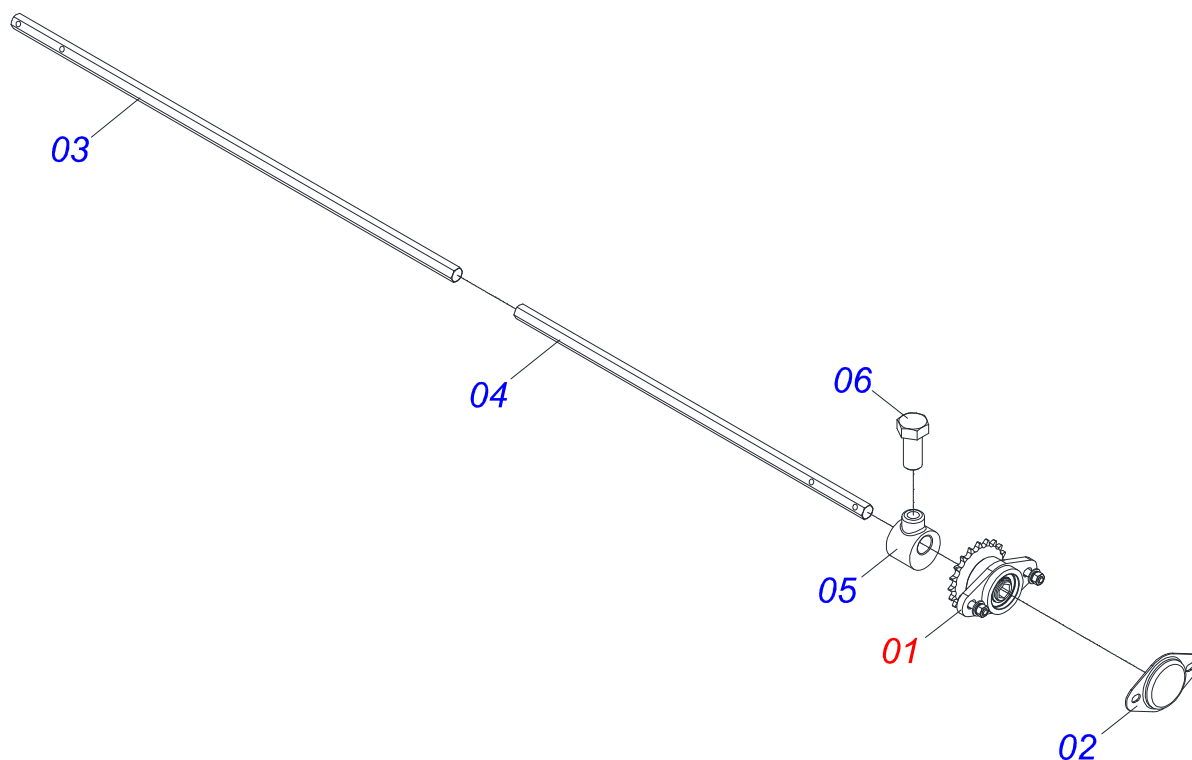

Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE	63	02
02	0561014215	BEARING COVER LOWER ROW FRAME		02
03	0531016940	5/8 X 1650 RIGHT HEX AXLE		01
04	0531016941	LEFT 5/8" X 59" AXLE HEX		01
05	0502040534	SPRING GUIDE BUSHING LOCK		04
06	0501018535	1/2 X 1 BOLT		04

TURBINE ASSY CARDAN

0521041586

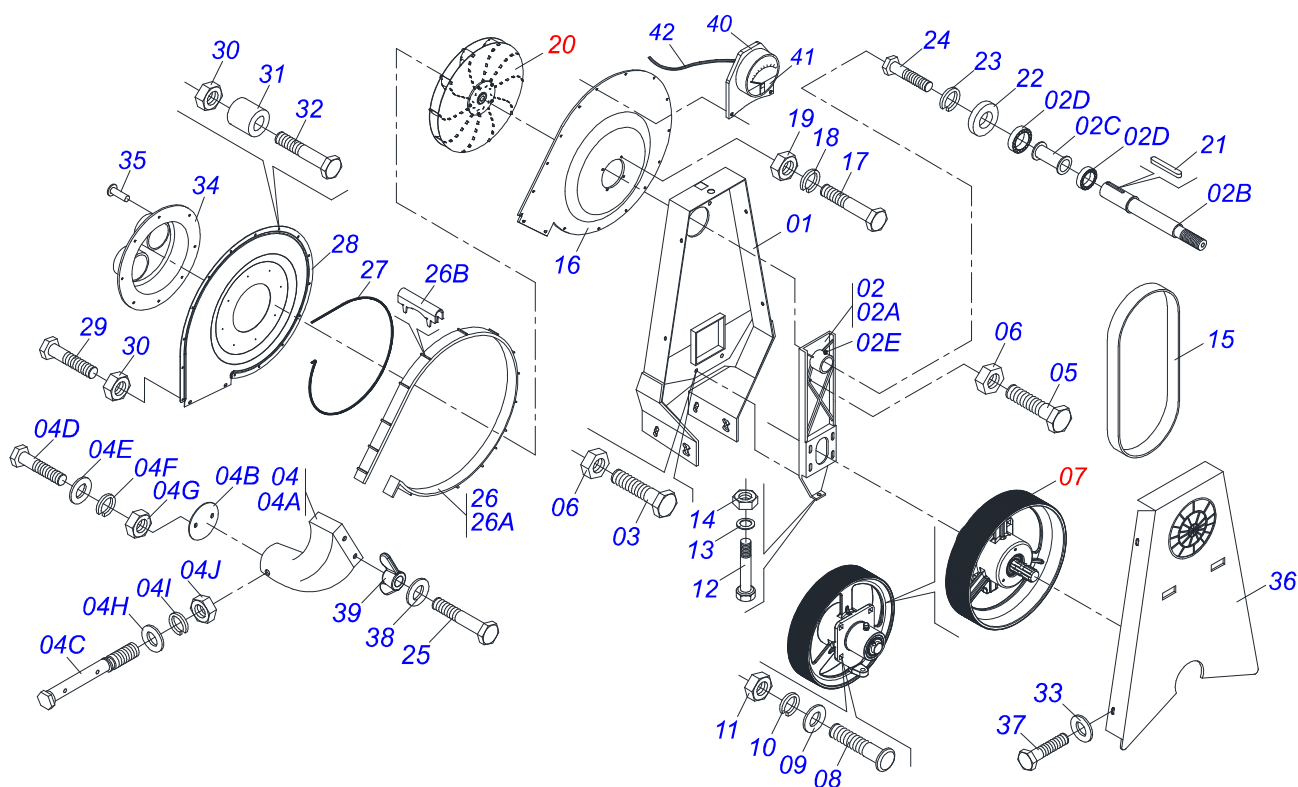

Item	Code	Description	See page	QT
01	0511061094	TURBINE SUPPORT		01
02	0501053716	BEARING ASSY OF THE LARGER FAN	84	01
02A	0502012016	CHAIN TENSIONER SUPPOT		01
02B	0503012778	MIDDLE LARGER AXLE		01
02C	0531010881	INTERMEDIARY UPPER SLEEVE		01
02D	0503012689	6306 DDU BEARING		02
02E	0503010325	VCA-118 VALVE		01
03	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
04	0501056495	TURBINE OUTPUT SOCKET		01
04A	0503031812	TURBINE OUTPUT SOCKET		01
04B	0541017539	BUTTERFLY VALVE		01
04C	0511066760	VALVE FIXATION SUPPORT		01
04D	0503013813	1/4" UNC X 7/8" BOLT		02
04E	0511017303	FLAT WASHER		02
04F	0503010143	1/4" SPRING WASHER		02
04G	0503010144	1/4" NUT		02
04H	0501013519	FLAT WASHER		01
04I	0503010019	1/2" SPRING WASHER		01
04J	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0503010395	1/2" X 1-1/4" BOLT		02
06	0503011336	1/2" HEX SELF ADJUSTING NUT		04
07	0501053886	PULLEY ASSY WITH FREE ROT	85	01
08	0501011194	1/2" X 1-3/4" BOLT		04
09	0521018517	FLAT WASHER		04
10	0503010019	1/2" SPRING WASHER		04
11	0503010020	1/2"NUT		04
12	0503013030	5/8" X 3.1/4" BOLT		01
13	0501012140	FLAT WASHER		01
14	0503010013	5/8 NUT		01
15	0503012780	LARGER TURBINE BELT		01
16	0571012629	FRONT COVER		01


TURBINE ASSY CARDAN

0521041586

Item	Code	Description	See page	QT
17	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
18	0503010025	3/8 SPRING WASHER		04
19	0503010026	3/8" NUT		04
20	0521044612	FAN	86	01
21	0503011775	6 X 6 X 35 KEYWAY		01
22	0503011774	PULLEY		01
23	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
24	0503011257	M 8 X 1,25 X 30 BOLT		01
25	0503013096	5/16" X 4" BOLT		02
26	0501054272	RIBBON FOR COVER CLOSING ASSY		01
26A	0531017193	RIBBON FOR COVER CLOSING		01
26B	0521018401	SEGMENT COVER		15
27	0503031776	TURBINE RIBBON SEAL		02
28	0571012630	REAR COVER		01
29	0503013031	1/4" X 3.1/4" BOLT		13
30	0503012880	1/4" UNC SELF ADJUSTING NUT		15
31	0511014024	10 X 13 X 15,5 SLEEVE		02
32	0503012721	1/4" X 4" BOLT		02
33	0511017303	FLAT WASHER		04
34	0503031649	CONECTOR CENTER		01
35	0503012722	0.16" X 0.4" BLIND RIVET		08
36	0531012760	TURBINE REAR COVER		01
37	0503013758	1/4" X 1-1/2" BOLT		04
38	0501010694	FLAT WASHER		02
39	0503010499	5/16 UNC BUTTERFLY NUT		02
40	0561010635	SWITCH FIXER		01
41	0503013584	VACUUM GAUGE		01
42	0503015062	TUBE		0.500

TURBINE ASSEMBLY

0511059720

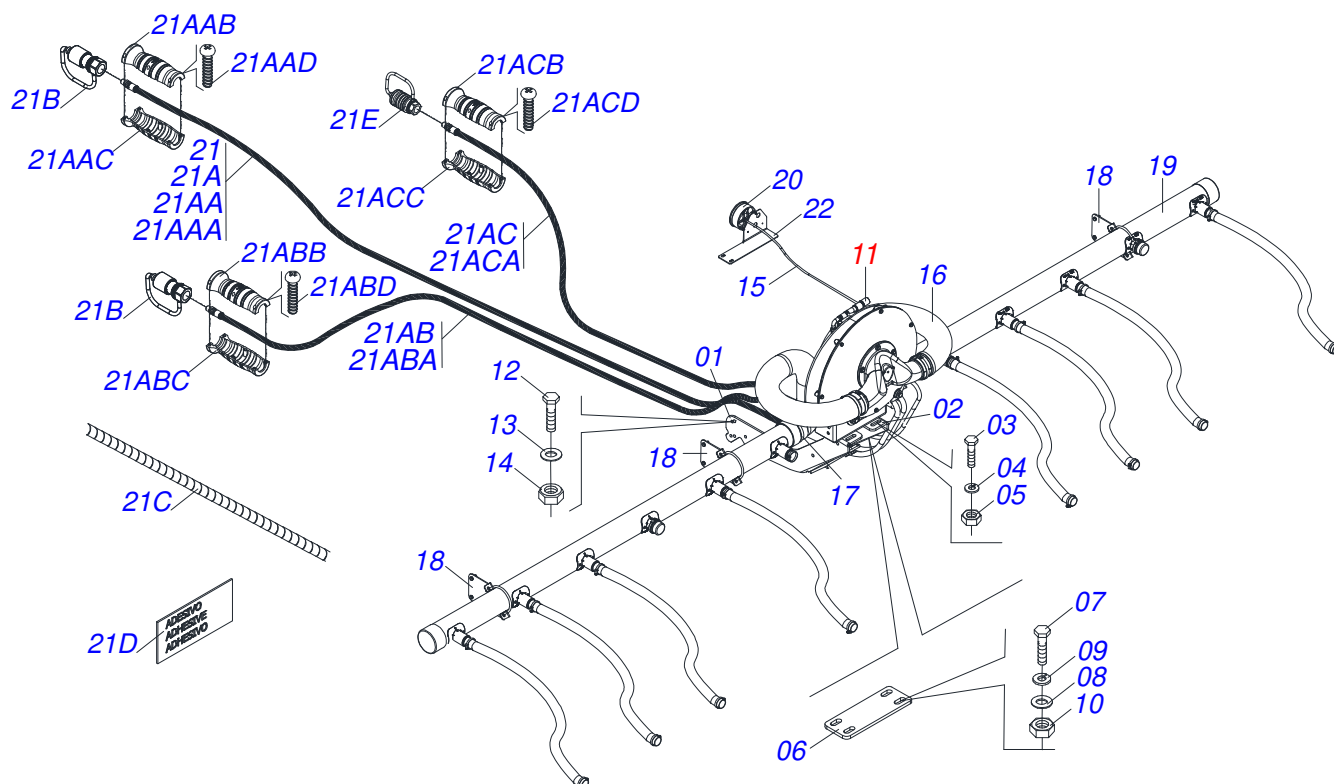


Item	Code	Description	See page	QT
001	0581011414	BODY RIGHT SUPPORT TURBINE		01
002	0581011413	UPPER LEFT SUPPORT		01
003	0503011239	1/2" X 2" BOLT		04
004	0503010019	1/2" SPRING WASHER		04
005	0503010060	1/2 UNC G.5 ZN HEX NUT		04
006	0581011415	SUPPORTER FIXING BAR		01
007	0503011082	C1/2" X 1.3/4" SCREW		04
008	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
009	0503010019	1/2" SPRING WASHER		04
010	0503010060	1/2 UNC G.5 ZN HEX NUT		04
011	0511059725	TURBINE P.P	81	01
012	0503011267	5/8 UNC X 1.1/2 C S G.5 ZN BOLT		02
013	0501012140	FLAT WASHER		02
014	0503012412	5/8 UNC SELF LOCKING NUT		02
015	0503015062	TUBE		03
016	0521014680	HOSE		02
017	0503011372	102 TO 121 CLAMP		02
018	0511059319	AIR FIXING SUPPORT	87	04
019	0511059721	DRIVER AIR		02
020	0503013584	VACUUM GAUGE		01
021	0511057906	HOSE ASSY	88	01
021A	0511057840	ASSY TURBINE HOSE REAR	89	01
021AA	0521052534	HOSE 1/2 X 7012 TC-TM YELLOW / RED		01
021AAA	0501081247	HOSE 1/2 X 7012 TC-TM		01
021AAB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
021AAC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
021AAD	0503018952	PLASTIC BOLT		06
021AB	0521052535	HOSE 1/2 X 7012 TC-TM YELLOW / BLUE		01
021ABA	0501081247	HOSE 1/2 X 7012 TC-TM		01
021ABB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
021ABC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01


TURBINE ASSEMBLY

0511059720


Item	Code	Description	See page	QT
021ABD	0503018952	PLASTIC BOLT		06
021AC	0521052536	HOSE 3/8 X 7012 TC-TM YELLOW / GREEN		01
021ACA	0501080477	HOSE 3/8 X 7012 TC-TM		01
021ACB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
021ACC	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01
021ACD	0503018952	PLASTIC BOLT		06
021B	0501053834	MALE QUICK COUPLER	48	02
021C	0581010092	SPRING PROTECTION PLASTIC HOSE 3/4		01
021D	0503033981	ADHESIVE LABEL		01
021E	0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	90	01
022	0571013731	VACUUM GAUGE SUPPORT		01

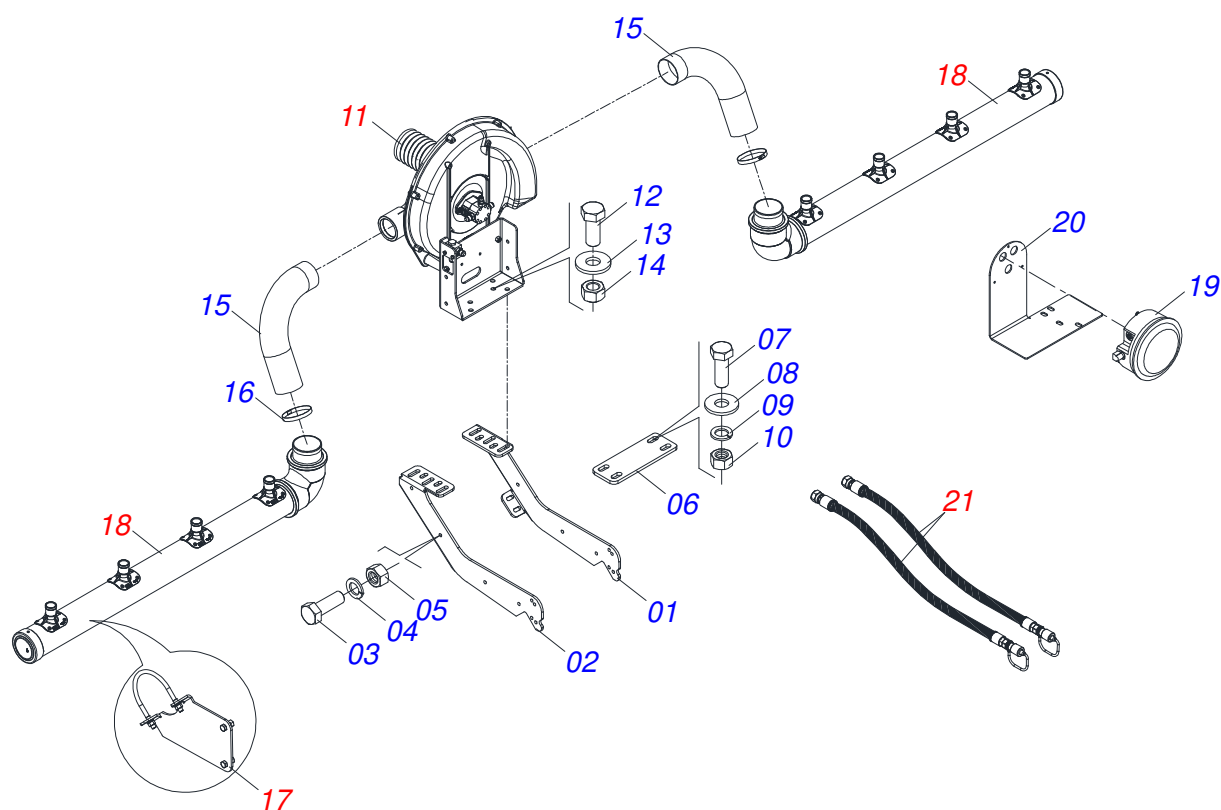


Item	Code	Description	See page	QT
01	0581011414	BODY RIGHT SUPPORT TURBINE		01
02	0581011413	UPPER LEFT SUPPORT		01
03	0503011239	1/2" X 2" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2 UNC G.5 ZN HEX NUT		04
06	0581011415	SUPPORTER FIXING BAR		01
07	0503011082	C1/2" X 1.3/4" SCREW		04
08	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
09	0503010019	1/2" SPRING WASHER		04
10	0503010060	1/2 UNC G.5 ZN HEX NUT		04
11	0511059725	TURBINE P.P	81	01
12	0503011267	5/8 UNC X 1.1/2 C S G.5 ZN BOLT		02
13	0501012140	FLAT WASHER		02
14	0503012412	5/8 UNC SELF LOCKING NUT		02
15	0521014680	HOSE		02
16	0503011372	102 TO 121 CLAMP		02
17	0511059319	AIR FIXING SUPPORT	87	04
18	0531053837	4 MOUTH AIR CONDUCTOR 1363	91	02
19	0503013584	VACUUM GAUGE		01
20	0501310635	VACUUM METER SUPPORT		01
21	0511057906	HOSE ASSY	88	01

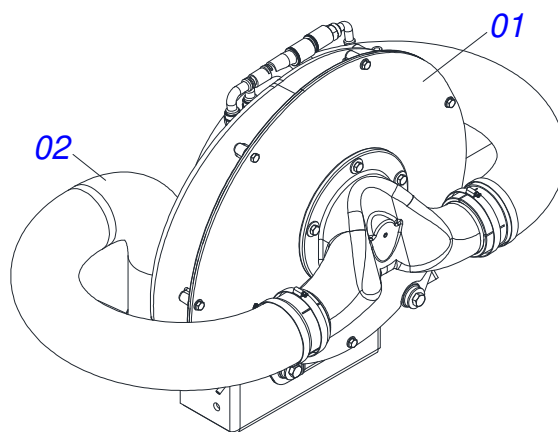


Item	Code	Description	See page	QT
01	0511059406	TURBINE P.P MOUNTED	82	02
02	0503031576	ELBOW		02

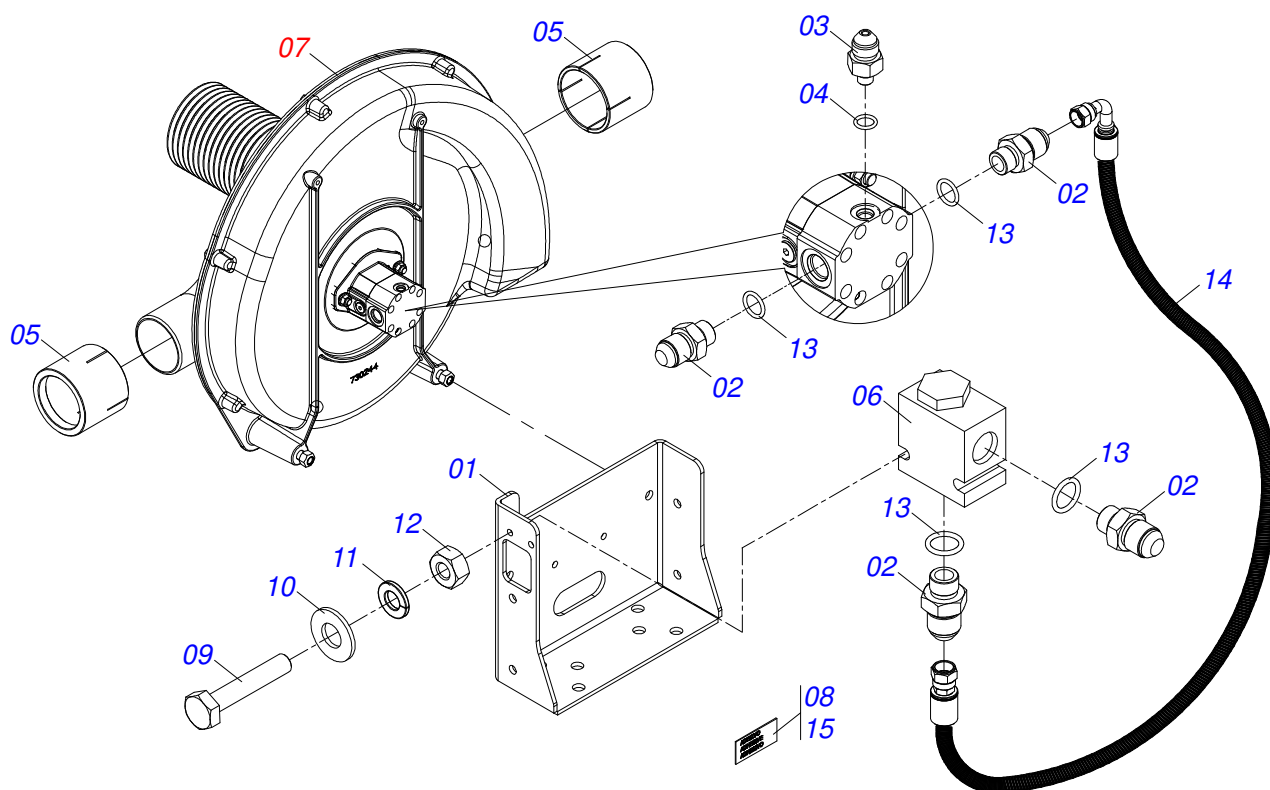


Item	Code	Description	See page	QT
01	0581012099	BODY SUPPORT TURBINE		01
02	0501011460	7/8 NF REDUCTION NIPPLE		04
03	0503034385	NIPPLE 7/16 UNF X UNF JIC		01
04	0503010392	2-046 N 3006 9B O'RING		01
05	0581012096	ROUND SLEEVE		02
06	0503015420	CV10208TN5 ANTI-CAVITATION VALVE		01
07	0521050154	PRECISION PLANTING TURBINE WITH HOLE	83	01
08	0503031087	ADHESIVE LABEL		01
09	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
10	0501010694	FLAT WASHER		02
11	0503010143	1/4\" SPRING WASHER		02
12	0503010144	1/4\" NUT		02
13	0503010190	2-114 N 3006-9B O'RING		04
14	0501081235	1/2 X 650 TR- TC HOSE		01
15	0503031426	ADHESIVE LABEL ATTENTION TURBINE		01

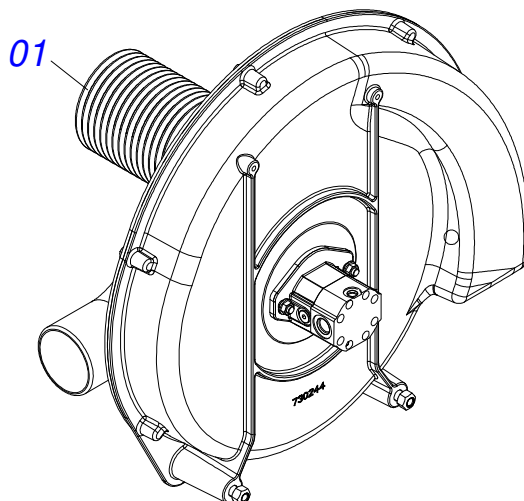


Item	Code	Description	See page	QT
01	0503062627	HYDRAULIC TURBINE ASSY		01

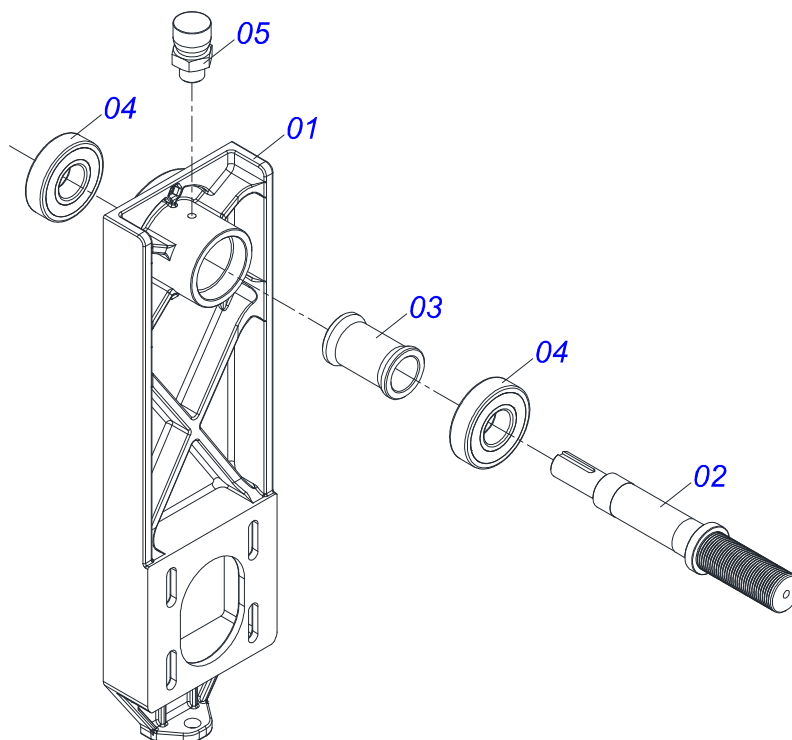


Item	Code	Description	See page	QT
01	0502012016	CHAIN TENSIONER SUPPOT		01
02	0503012778	MIDDLE LARGER AXLE		01
03	0531010881	INTERMEDIARY UPPER SLEEVE		01
04	0503012689	6306 DDU BEARING		02
05	0503010325	VCA-118 VALVE		01

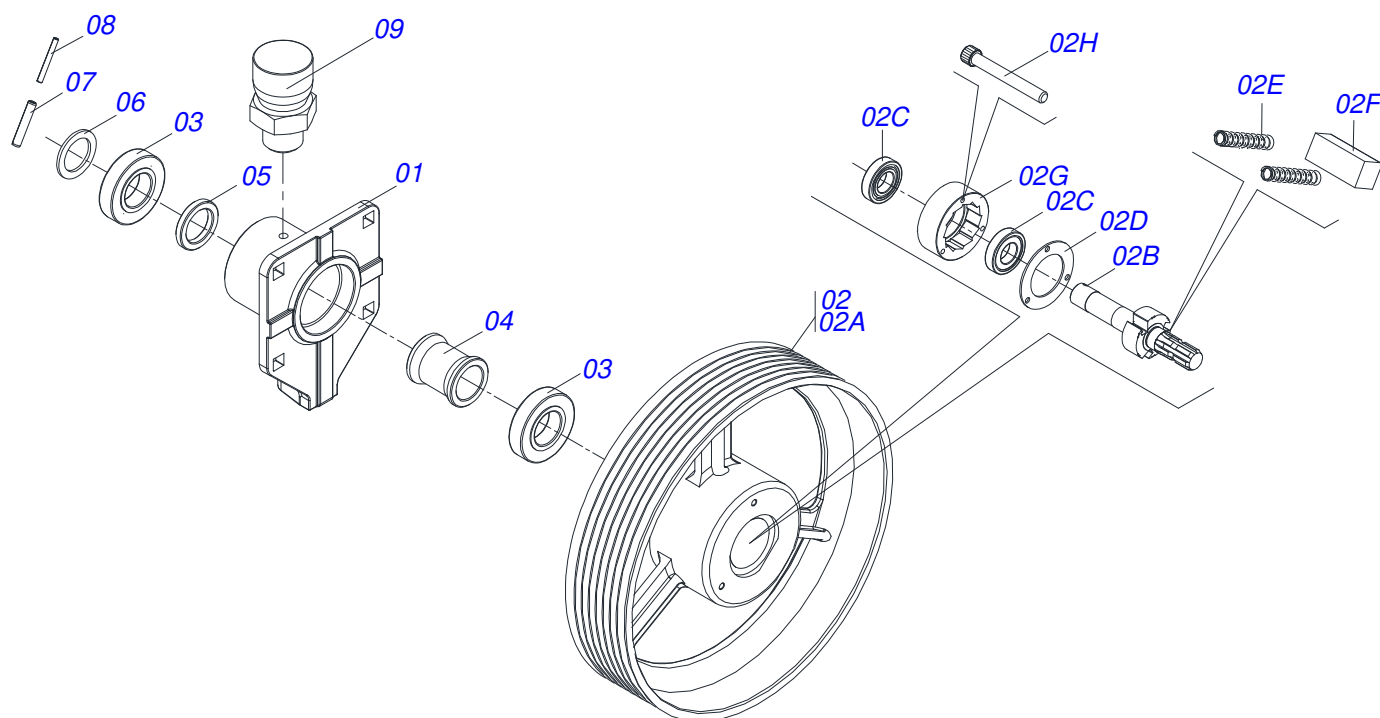

Item	Code	Description	See page	QT
001	0502012020	PULLEY HOUSING BEARING		01
002	0501053888	TURBINE PULLEY ASSY		01
002A	0502012055	TURBINE PULLEY ASSY		01
002B	0503031732	RATCHET TURBINE PULLEY AXLE		01
002C	0503011081	6207 2RS BEARING		02
002D	0531014520	WASHER RATCHET		01
002E	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		06
002F	0501010649	RATCHET CLICK		03
002G	0503031731	RATCHET PULLEY TURBINE		01
002H	0503012950	5/16" X 2-1/2" BOLT		03
003	0503011081	6207 2RS BEARING		02
004	0531014518	INTERMEDIARY LOWER BUSHING BEARING		01
005	0531014519	FLAT WASHER		01
006	0531014527	FLAT WASHER		01
007	0503010301	0.3" X 1.8" SPRING PIN		01
008	0503011855	0.2" X 1.8" SPRING PIN		01
009	0503010325	VCA-118 VALVE		01

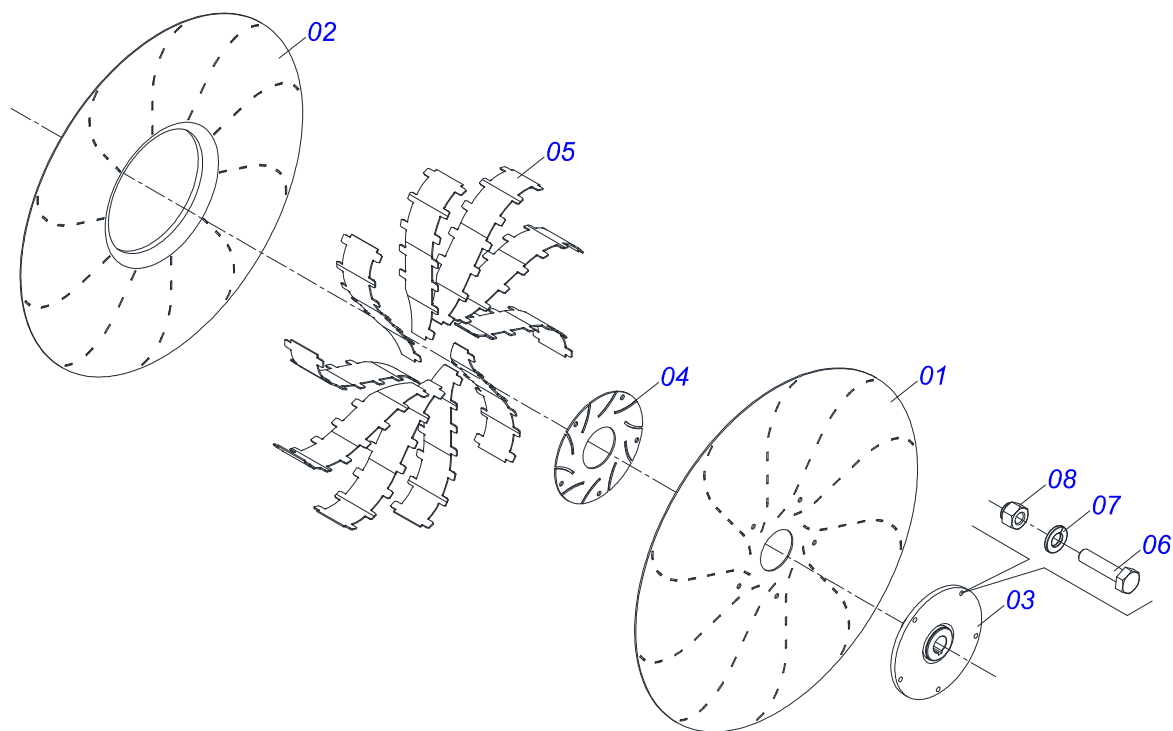


Item	Code	Description	See page	QT
01	0571016947	DISC FRONT TURBINE		01
02	0571016949	DISC REAR TURBINE		01
03	0521065170	HUB FAN		01
04	0571016950	DISC STRENGTHENING TURBINE		01
05	0571016951	FLIP TURBINE		10
06	0503012651	M6 X 1" BOLT		05
07	0503010143	1/4" SPRING WASHER		05
08	0503011776	M6 SELF ADJUSTINGNUT		05

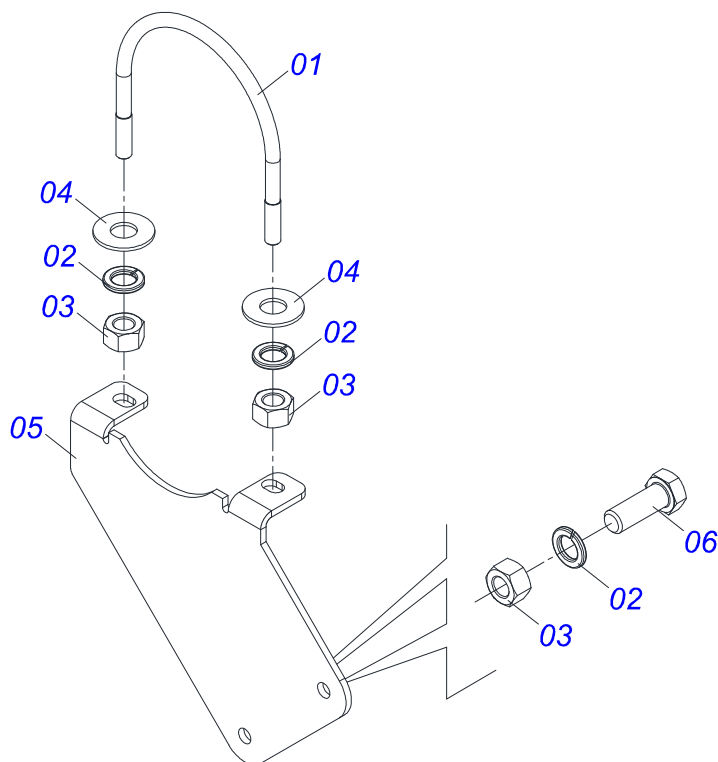


Item	Code	Description	See page	QT
01	0571019403	STAPLE FIXER		01
02	0503010025	3/8 SPRING WASHER		04
03	0503010026	3/8" NUT		04
04	0501013518	FLAT WASHER		02
05	0571019921	AIR SUPPORT FIXATION		01
06	0503010237	3/8" X 1" BOLT		02

HOSE ASSY


0511057906

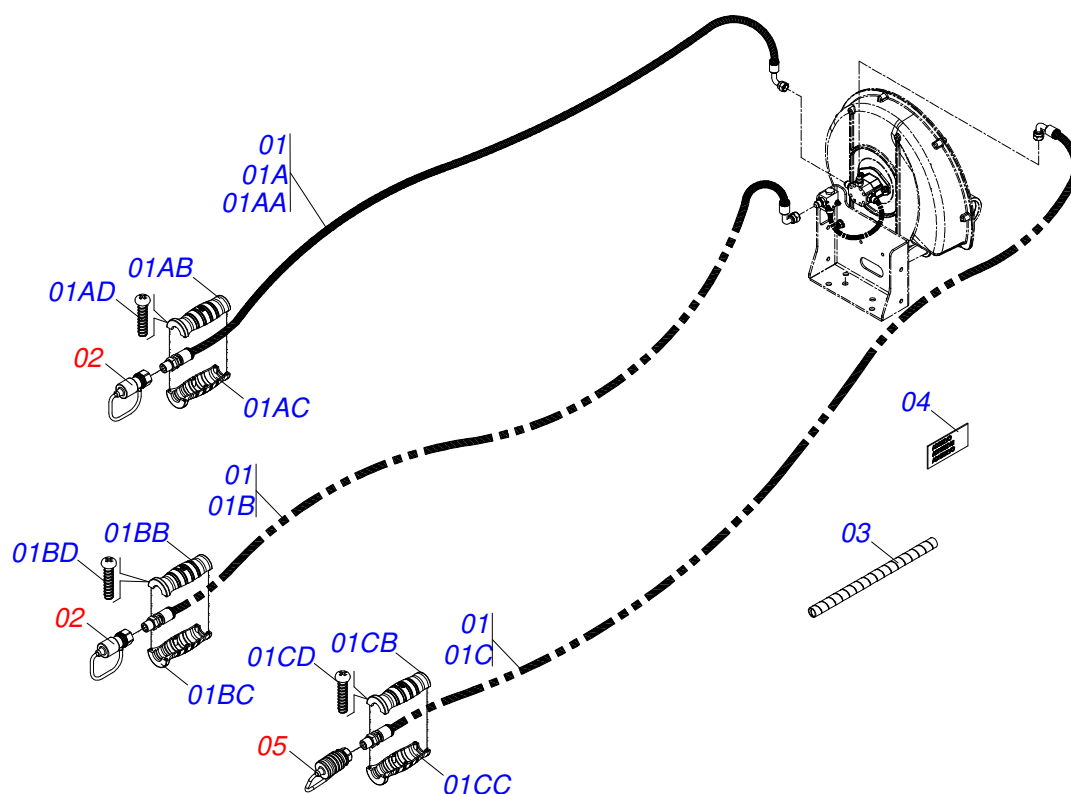


Item	Code	Description	See page	QT
01	0511057840	ASSY TURBINE HOSE REAR	89	01
01A	0521052534	HOSE 1/2 X 7012 TC-TM YELLOW / RED		01
01AA	0501081247	HOSE 1/2 X 7012 TC-TM		01
01AB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01AC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
01AD	0503018952	PLASTIC BOLT		06
01B	0521052535	HOSE 1/2 X 7012 TC-TM YELLOW / BLUE		01
01BA	0501081247	HOSE 1/2 X 7012 TC-TM		01
01BB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01BC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
01BD	0503018952	PLASTIC BOLT		06
01C	0521052536	HOSE 3/8 X 7012 TC-TM YELLOW / GREEN		01
01CA	0501080477	HOSE 3/8 X 7012 TC-TM		01
01CB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01CC	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01
01CD	0503018952	PLASTIC BOLT		06
02	0501053834	MALE QUICK COUPLER	48	02
03	0581010092	SPRING PROTECTION PLASTIC HOSE 3/4		01
04	0503033981	ADHESIVE LABEL		01
05	0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	90	01

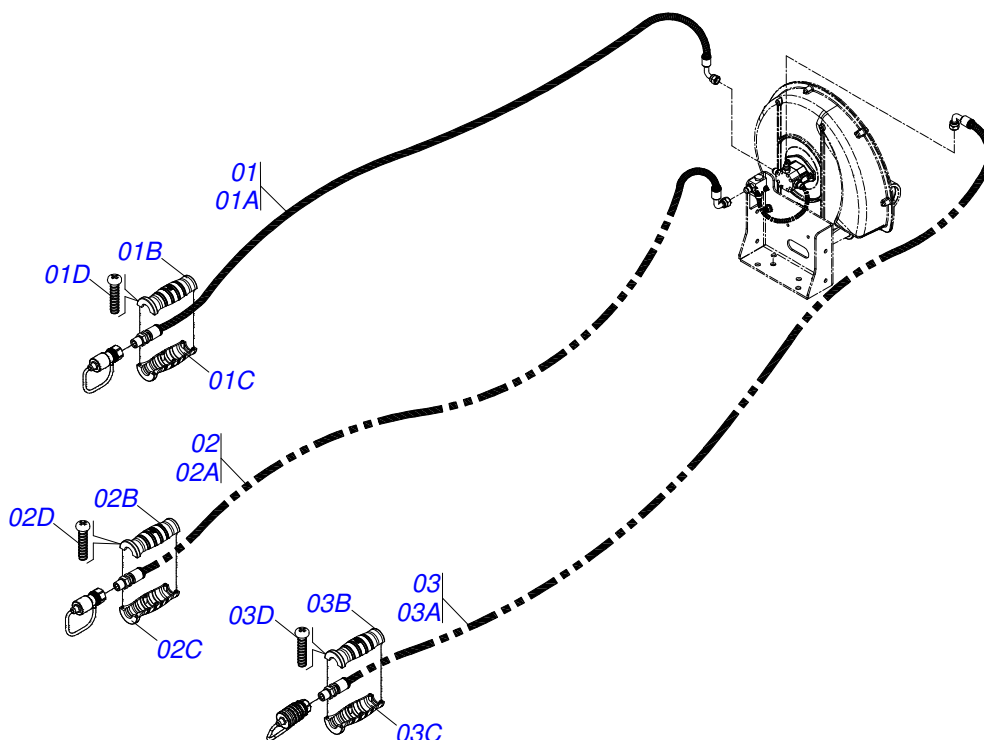


Item	Code	Description	See page	QT
01	0521052534	HOSE 1/2 X 7012 TC-TM YELLOW / RED		01
01A	0501081247	HOSE 1/2 X 7012 TC-TM		01
01B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
01D	0503018952	PLASTIC BOLT		06
02	0521052535	HOSE 1/2 X 7012 TC-TM YELLOW / BLUE		01
02A	0501081247	HOSE 1/2 X 7012 TC-TM		01
02B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
02C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
02D	0503018952	PLASTIC BOLT		06
03	0521052536	HOSE 3/8 X 7012 TC-TM YELLOW / GREEN		01
03A	0501080477	HOSE 3/8 X 7012 TC-TM		01
03B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
03C	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01
03D	0503018952	PLASTIC BOLT		06

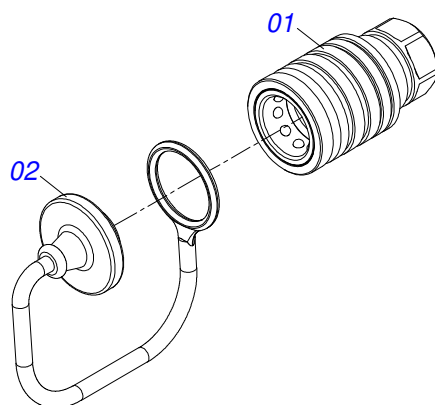


Item	Code	Description	See page	QT
01	0503018799	QUICK COUPLING		01
02	0503011883	QUICK CONNECTION COVER		01

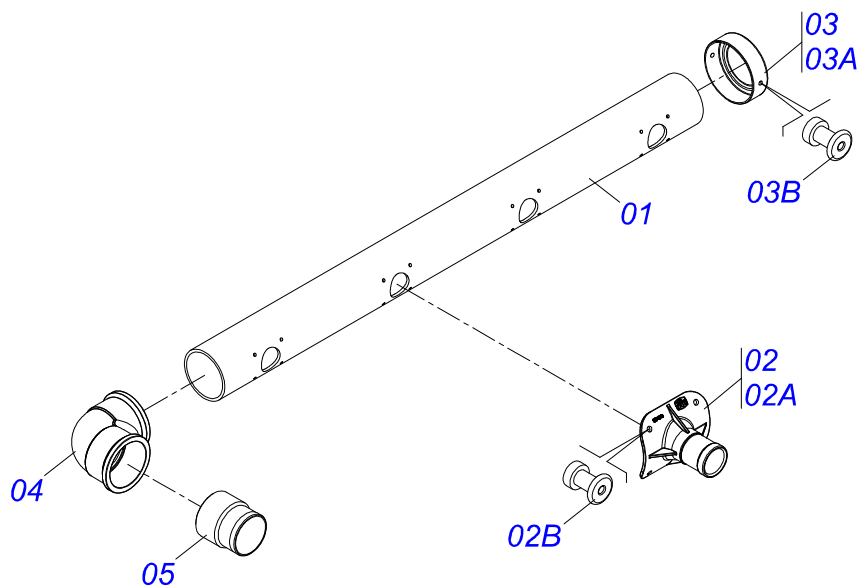


Item	Code	Description	See page	QT
01	0591011134	CONDUCTOR BODY AIR 4 MOUTH 1300 04 HOLES		01
02	0521056048	AIR DISTRIBUTOR NOZZLE 1.1 / 2 WITH RIVET		04
02A	0503034812	SOCKET DISTRIBUTOR AR		01
02B	0503012856	POP RIVET		04
03	0521056049	AIR DISTRIBUTOR CAP WITH RIVET		01
03A	0503034763	AIR DITRIBUTOR PUMP		01
03B	0503015341	POP RIVET		02
04	0503017845	90 PVC KNEE		01
05	0581013890	AIR DISTRIBUTOR SOCKET		01

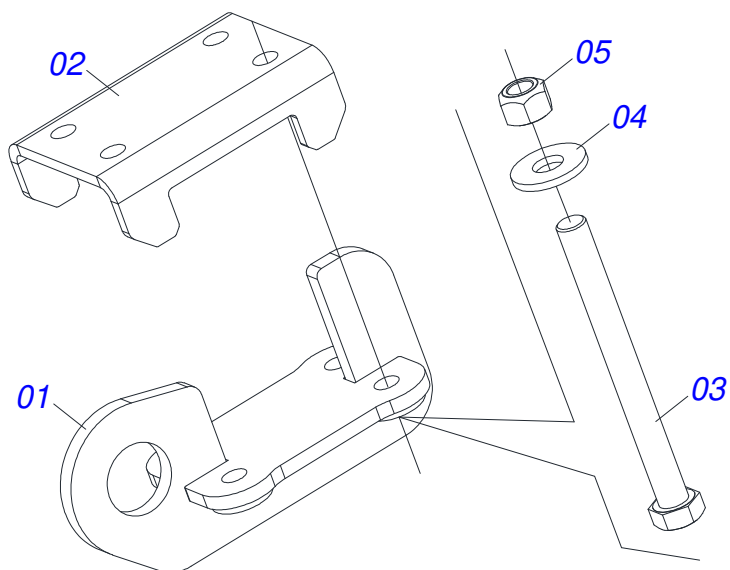

Item	Code	Description	See page	QT
01	0521066608	LIFTING HOOK		01
02	0581019707	FIXATION SUPPORT SUPPORT		01
03	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
04	0501012140	FLAT WASHER		04
05	0503012412	5/8 UNC SELF LOCKING NUT		04

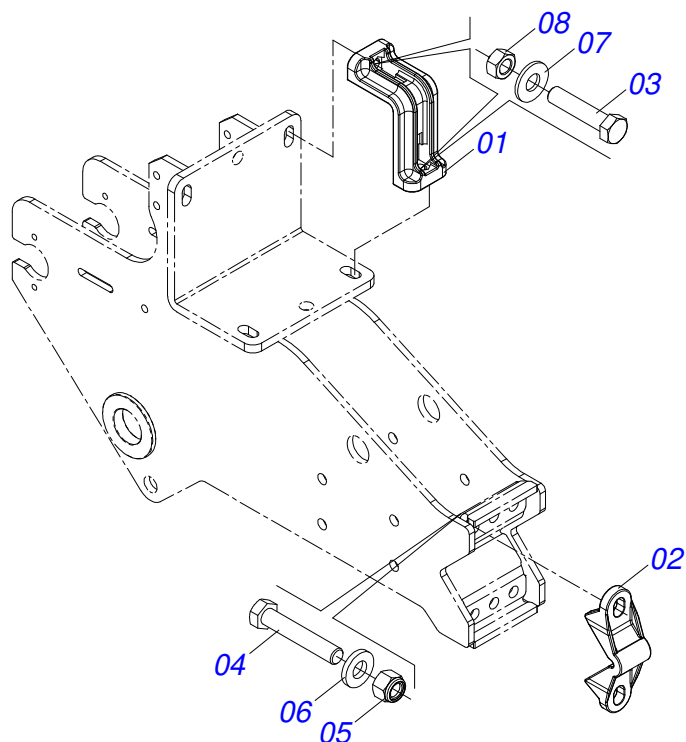

Item	Code	Description	See page	QT
01	0502012400	ROW FERTILIZER FIXER		04
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		04
03	0503010797	3/4" X 4" BOLT		08
04	0503016485	BOLT 3/4		08
05	0503010152	3/4" SELF LOCKING NUT		08
06	0541010763	FLAT WASHER		08
07	0501010322	FLAT WASHER		08
08	0503011255	3/4" LOCK NUT		08

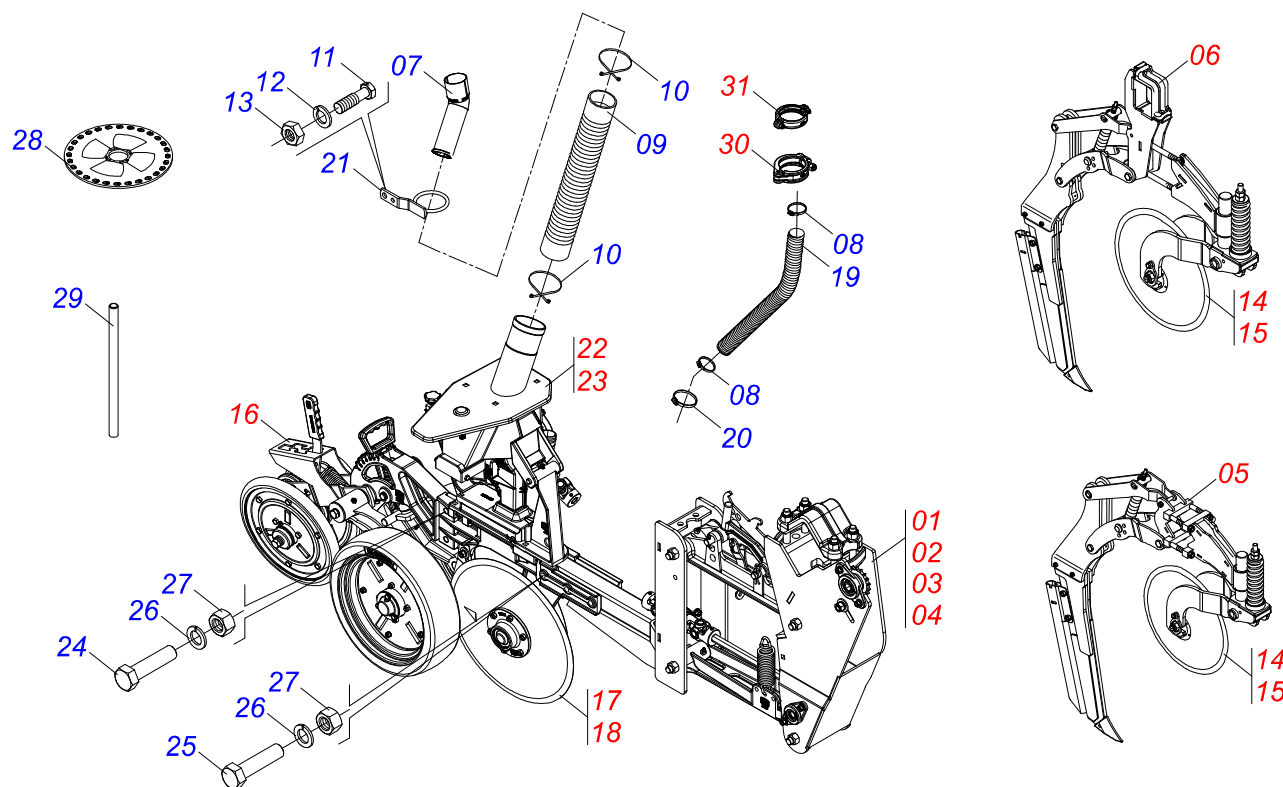


Item	Code	Description	See page	QT
01	0501059838	SHORT SEED ROW FRONT	95	01
02	0501059837	SHORT SEED ROW FRONT	96	01
03	0511052740	LONG SEED ROW FRONT	97	01
04	0511052741	LONG FRONT SEED ROW	98	01
05	0511053825	SEMI-ASSEMBLED SHORT FERTILIZER LINE	108	01
06	0511053826	SEMI-ASSEMBLED LONG FERTILIZER LINE	109	01
07	0503031050	CURVED CONDUCTOR		01
08	0503010246	CLAMP		01
09	0503031145	2" X 2" X 20" HOSE		01
10	0503031076	2" HOSE CLAMP		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0503010025	3/8 SPRING WASHER		01
13	0503010026	3/8" NUT		01
14	0511048339	24" BLADE DISC ASSY	110	01
15	0511057186	20 CUTTING DISC	111	01
16	0521045198	PRESS WHEELS	115	01
16.	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	116	01
16..	0521051424	WHEEL SYSTEM DEPTH/COMPACTOR QUICK ADJUSTMENT	117	01
17	0501059631	DDD SEED 15 X 15 RIGHT	131	01
18	0501059632	DDD SEED 15X15 LEFT	132	01
19	0571019712	AIR CONDUCTOR		01
19.	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		01
20	0503010243	CLAMP		01
21	0511063282	HOSE HOLDER		01
22	0521050331	RIGHT REAR SUPREME	137	01
22.	0511059724	REAR RIGHT	138	01
23	0521050330	SUPREME LEFT REAR SUPREME	139	01
23.	0511059723	REAR LEFT	140	01
24	0503010905	1/2" X 2-1/4" BOLT		01
25	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
26	0503010019	1/2" SPRING WASHER		01

**SEED/FERTILIZER ROW ASSY**

0909091808

Item	Code	Description	See page	QT
27	0503010060	1/2 UNC G.5 ZN HEX NUT		01
28	0503062763	CONVERSION ASSY FOR DISTRIBUTOR SOY / BEANS		01
29	0531013600	PRESS ADJUSTMENT LEVER		01
29.	0521018501	TURNBUCKLE LEVER		01
30	0521052549	CLAMP	150	01
31	0521050525	FIXER FERTILIZER CONDUCTOR	151	01

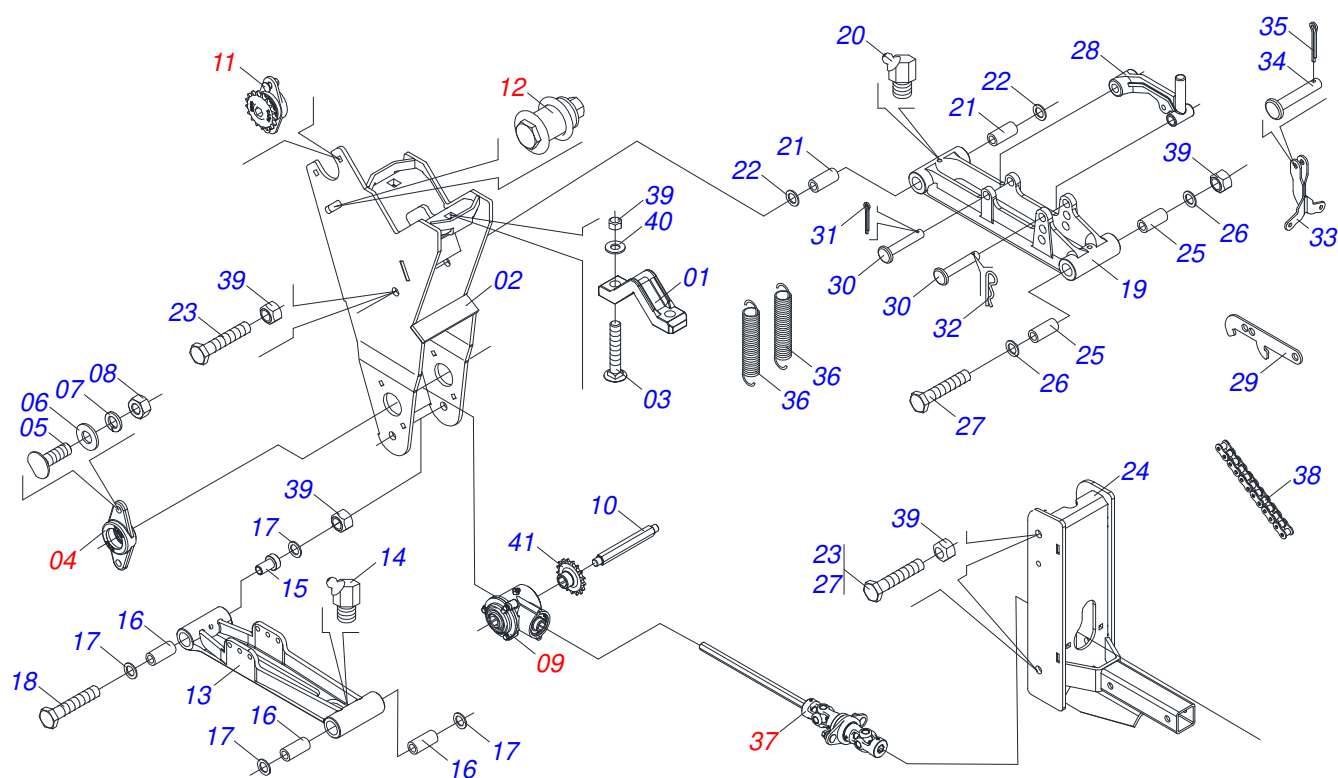


Item	Code	Description	See page	QT
001	0502010175	HITCH CLAMP		01
002	0521064651	LEFT SEED ROW SUPPORT FRONT		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0511054635	BEARING AXLE BODY	99	02
005	0503011953	5/16" X 1" BOLT		04
006	0501010694	FLAT WASHER		04
007	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
008	0503010337	5/16" NUT		04
009	0511054884	TRANSMISSION BOX	100	01
010	0561014904	TRANSMISSION AXLE FRAME ROW		01
011	0511050609	BEARING WITH 17Z GEAR ASSY	101	01
012	0511055260	SEED ROW CHAIN TENSIONER	104	01
013	0502012666	SEED ROW LOWER ARM		01
014	0503010003	1845 GREASE FITTING		02
015	0561015858	SPACER LOWER SLEEVE		01
016	0531015151	0.6" X 1" X 2.4" SLEEVE		01
017	0531015184	FLAT WASHER		02
018	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		01
019	0502012350	SEED ROW UPPER ARM		01
020	0503010003	1845 GREASE FITTING		02
021	0531015151	0.6" X 1" X 2.4" SLEEVE		02
022	0531015184	FLAT WASHER		02
023	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		01
024	0521061427	SHORT SEED ROW FRAME		01
025	0531015151	0.6" X 1" X 2.4" SLEEVE		04
026	0531015184	FLAT WASHER		04
027	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		02
028	0502012568	UPPER ROCKER ARM		01
029	0561019032	SEED FERTIL ROW LOCK		01
030	0501011388	COUPLING SHAFT		02
031	0503010071	3/16" X 1" COTTERPIN		01

SHORT SEED ROW FRONT

0501059838

Item	Code	Description	See page	QT
032	0503030168	HITCH PIN CLIP		01
033	0521061850	SPRING UPPER FIXER		01
034	0521010773	0.37" X 1.18" COUPLING SHAFT		01
035	0503010140	1/8" X 3/4" COTTERPIN		01
036	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
037	0511052426	TRANSMISSION CARDAN ASSY	105	01
038	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
039	0503012412	5/8 UNC SELF LOCKING NUT		02
040	0501012140	FLAT WASHER		02
041	0502012782	17Z GEAR WITH HEX HOLE		01

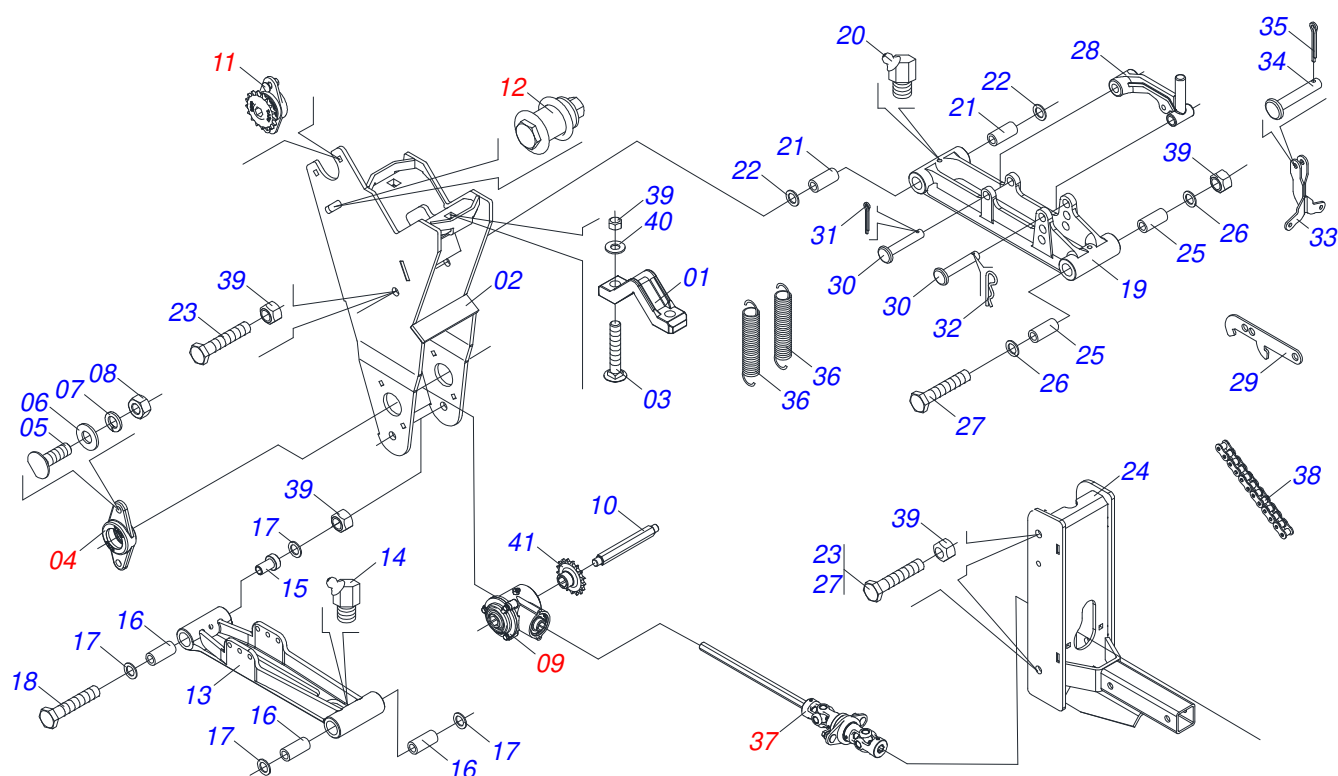


Item	Code	Description	See page	QT
001	0502010175	HITCH CLAMP		01
002	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0511054635	BEARING AXLE BODY	99	02
005	0503011953	5/16" X 1" BOLT		04
006	0501010694	FLAT WASHER		04
007	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
008	0503010337	5/16" NUT		04
009	0511054884	TRANSMISSION BOX	100	01
010	0561014904	TRANSMISSION AXLE FRAME ROW		01
011	0511050609	BEARING WITH 17Z GEAR ASSY	101	01
012	0511055260	SEED ROW CHAIN TENSIONER	104	01
013	0502012666	SEED ROW LOWER ARM		01
014	0503010003	1845 GREASE FITTING		02
015	0561015858	SPACER LOWER SLEEVE		01
016	0531015151	0.6" X 1" X 2.4" SLEEVE		01
017	0531015184	FLAT WASHER		02
018	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		01
019	0502012350	SEED ROW UPPER ARM		01
020	0503010003	1845 GREASE FITTING		02
021	0531015151	0.6" X 1" X 2.4" SLEEVE		02
022	0531015184	FLAT WASHER		02
023	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		01
024	0521061427	SHORT SEED ROW FRAME		01
025	0531015151	0.6" X 1" X 2.4" SLEEVE		04
026	0531015184	FLAT WASHER		04
027	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		02
028	0502012568	UPPER ROCKER ARM		01
029	0561019032	SEED FERTIL ROW LOCK		01
030	0501011388	COUPLING SHAFT		02
031	0503010071	3/16" X 1" COTTERPIN		01

SHORT SEED ROW FRONT


0501059837

Item	Code	Description	See page	QT
032	0503030168	HITCH PIN CLIP		01
033	0521061850	SPRING UPPER FIXER		01
034	0521010773	0.37" X 1.18" COUPLING SHAFT		01
035	0503010140	1/8" X 3/4" COTTERPIN		01
036	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
037	0511052426	TRANSMISSION CARDAN ASSY	105	01
038	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
039	0503012412	5/8 UNC SELF LOCKING NUT		02
040	0501012140	FLAT WASHER		02
041	0502012782	17Z GEAR WITH HEX HOLE		01

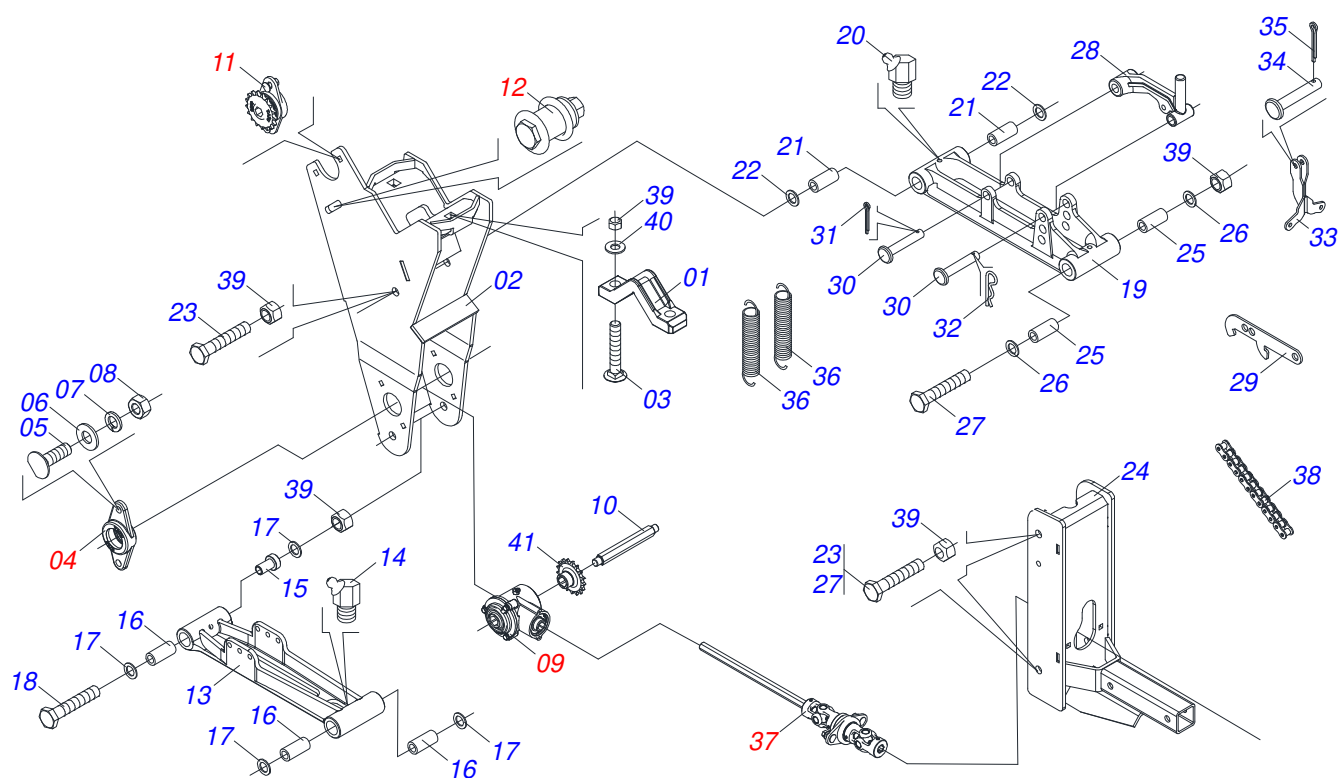

Item	Code	Description	See page	QT
001	0502010175	HITCH CLAMP		01
002	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0511054635	BEARING AXLE BODY	99	02
005	0503011953	5/16" X 1" BOLT		04
006	0501010694	FLAT WASHER		04
007	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
008	0503010337	5/16" NUT		04
009	0511054884	TRANSMISSION BOX	100	01
010	0561014904	TRANSMISSION AXLE FRAME ROW		01
011	0511050609	BEARING WITH 17Z GEAR ASSY	101	01
012	0511050610	SEED ROW CHAIN TENSIONER ASSY	102	01
013	0502012666	SEED ROW LOWER ARM		01
014	0503010003	1845 GREASE FITTING		02
015	0561015858	SPACER LOWER SLEEVE		01
016	0531015151	0.6" X 1" X 2.4" SLEEVE		01
017	0531015184	FLAT WASHER		02
018	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		01
019	0502012350	SEED ROW UPPER ARM		01
020	0503010003	1845 GREASE FITTING		02
021	0531015151	0.6" X 1" X 2.4" SLEEVE		02
022	0531015184	FLAT WASHER		02
023	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		01
024	0521061428	CC TIRE ROW FRAME		01
025	0531015151	0.6" X 1" X 2.4" SLEEVE		04
026	0531015184	FLAT WASHER		04
027	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		02
028	0502012568	UPPER ROCKER ARM		01
029	0561019032	SEED FERTIL ROW LOCK		01
030	0501011388	COUPLING SHAFT		02
031	0503010071	3/16" X 1" COTTERPIN		01

Item	Code	Description	See page	QT
032	0503030168	HITCH PIN CLIP		01
033	0521061850	SPRING UPPER FIXER		01
034	0521010773	0.37" X 1.18" COUPLING SHAFT		01
035	0503010140	1/8" X 3/4" COTTERPIN		01
036	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
037	0511052742	TRANSMISSION HUB ASSY	106	01
038	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
039	0503012412	5/8 UNC SELF LOCKING NUT		02
040	0501012140	FLAT WASHER		02
041	0502012782	17Z GEAR WITH HEX HOLE		01

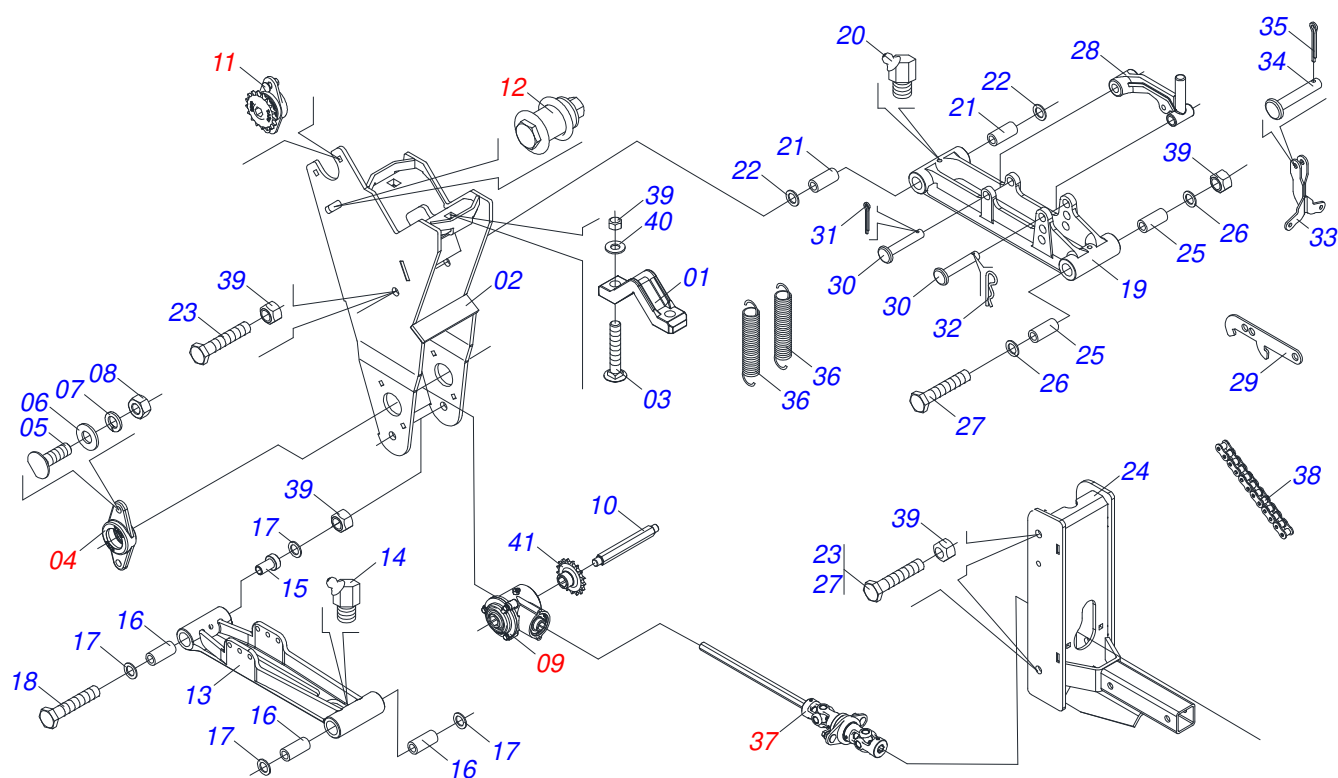


Item	Code	Description	See page	QT
001	0502010175	HITCH CLAMP		01
002	0521064651	LEFT SEED ROW SUPPORT FRONT		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0511054635	BEARING AXLE BODY	99	02
005	0503011953	5/16" X 1" BOLT		04
006	0501010694	FLAT WASHER		04
007	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
008	0503010337	5/16" NUT		04
009	0511054884	TRANSMISSION BOX	100	01
010	0561014904	TRANSMISSION AXLE FRAME ROW		01
011	0511050609	BEARING WITH 17Z GEAR ASSY	101	01
012	0511050610	SEED ROW CHAIN TENSIONER ASSY	102	01
013	0502012666	SEED ROW LOWER ARM		01
014	0503010003	1845 GREASE FITTING		02
015	0561015858	SPACER LOWER SLEEVE		01
016	0531015151	0.6" X 1" X 2.4" SLEEVE		01
017	0531015184	FLAT WASHER		02
018	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		01
019	0502012350	SEED ROW UPPER ARM		01
020	0503010003	1845 GREASE FITTING		02
021	0531015151	0.6" X 1" X 2.4" SLEEVE		02
022	0531015184	FLAT WASHER		02
023	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		01
024	0521061428	CC TIRE ROW FRAME		01
025	0531015151	0.6" X 1" X 2.4" SLEEVE		04
026	0531015184	FLAT WASHER		04
027	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		02
028	0502012568	UPPER ROCKER ARM		01
029	0561019032	SEED FERTIL ROW LOCK		01
030	0501011388	COUPLING SHAFT		02
031	0503010071	3/16" X 1" COTTERPIN		01

LONG FRONT SEED ROW

0511052741


Item	Code	Description	See page	QT
032	0503030168	HITCH PIN CLIP		01
033	0521061850	SPRING UPPER FIXER		01
034	0521010773	0.37" X 1.18" COUPLING SHAFT		01
035	0503010140	1/8" X 3/4" COTTERPIN		01
036	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
037	0511052742	TRANSMISSION HUB ASSY	106	01
038	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
039	0503012412	5/8 UNC SELF LOCKING NUT		02
040	0501012140	FLAT WASHER		02
041	0502012782	17Z GEAR WITH HEX HOLE		01

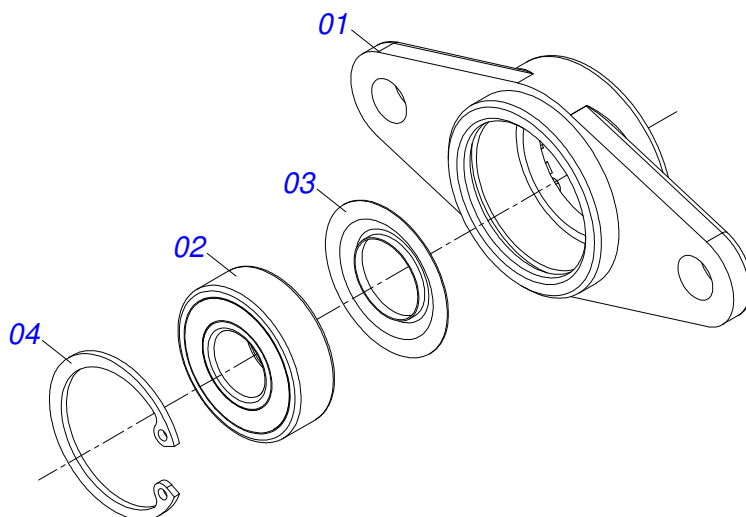


Item	Code	Description	See page	QT
01	0502012718	BEARIN BODY		01
02	0503012882	BEARING		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

TRANSMISSION BOX


0511054884

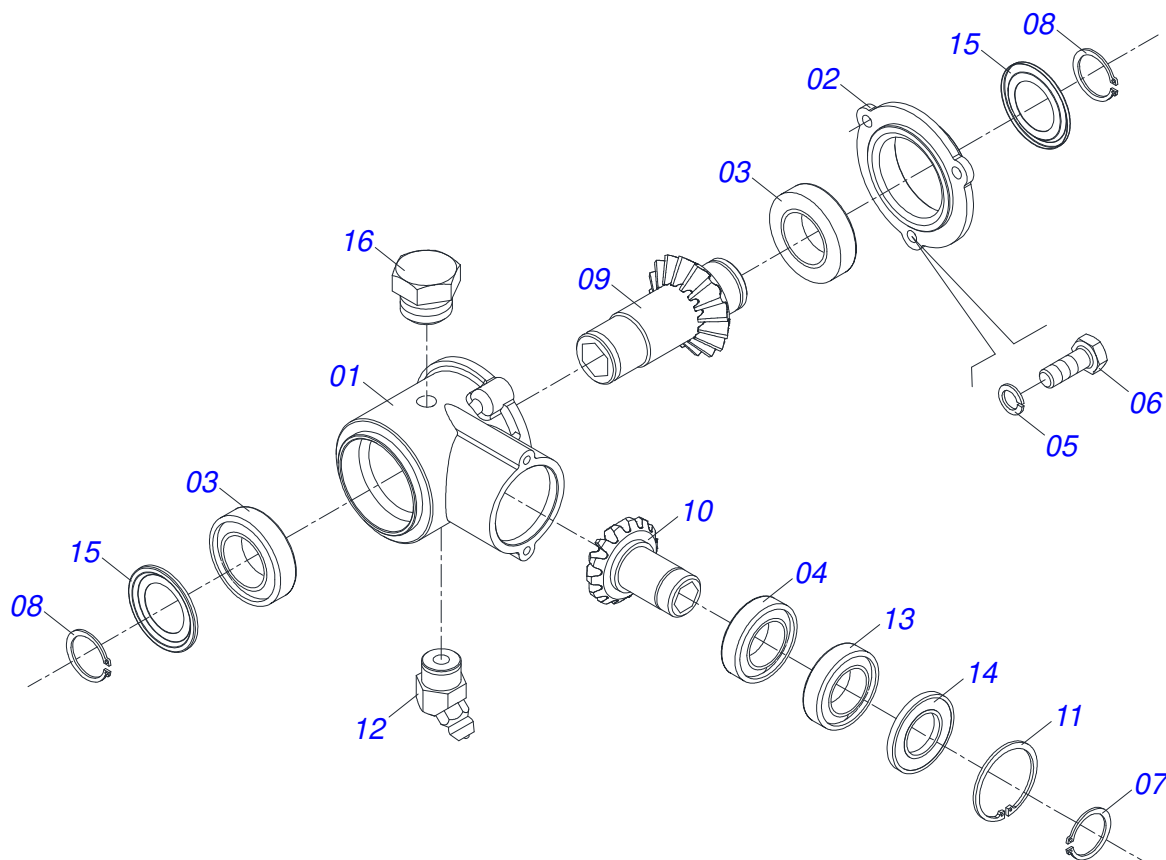

Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0502040857	CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503010003	1845 GREASE FITTING		01
13	0503011409	6005 Z BALL BEARING		01
14	0503017008	SEAL RING		01
15	0503017007	SEAL RING		02
16	0511017907	1/8" BSPT X 6 PLUG		01

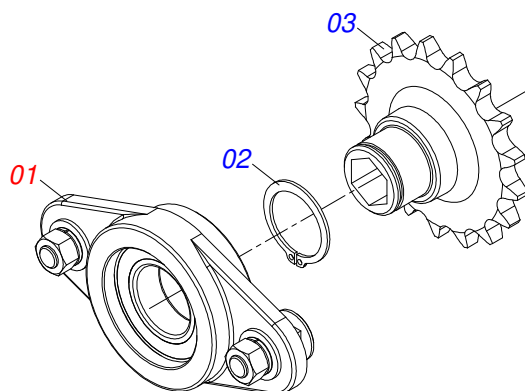


Item	Code	Description	See page	QT
01	0511050617	FRONT SEED ROW BEARING	103	01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0502012819	17Z GEAR WITH HEX HOLE		01

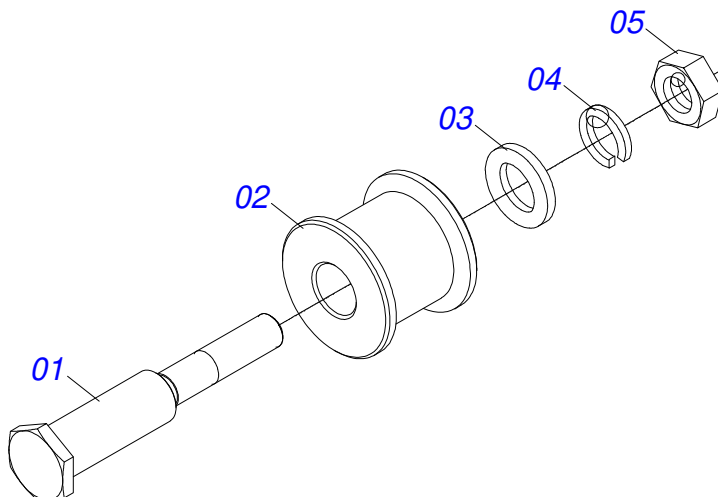


Item	Code	Description	See page	QT
001	0531019479	AXLE CHAIN GEAR		01
002	0541016454	PULLEY		01
003	0521014188	FLAT WASHER		01
004	0503010019	1/2" SPRING WASHER		01
005	0503010060	1/2 UNC G.5 ZN HEX NUT		01

FRONT SEED ROW BEARING


0511050617

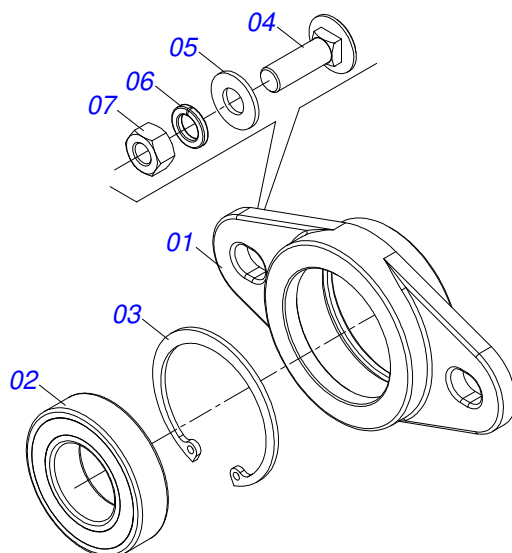

Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER		02
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

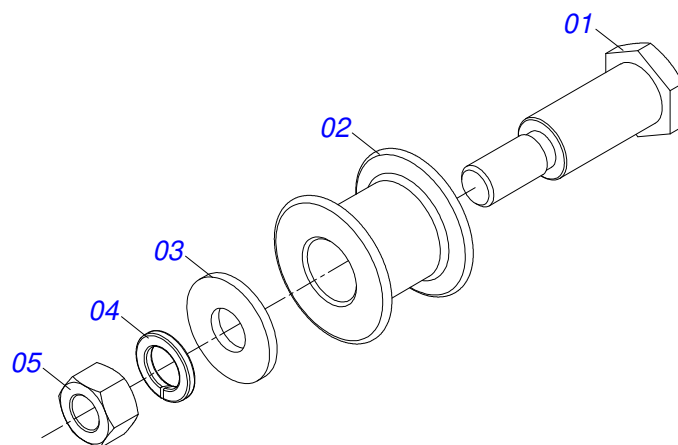


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

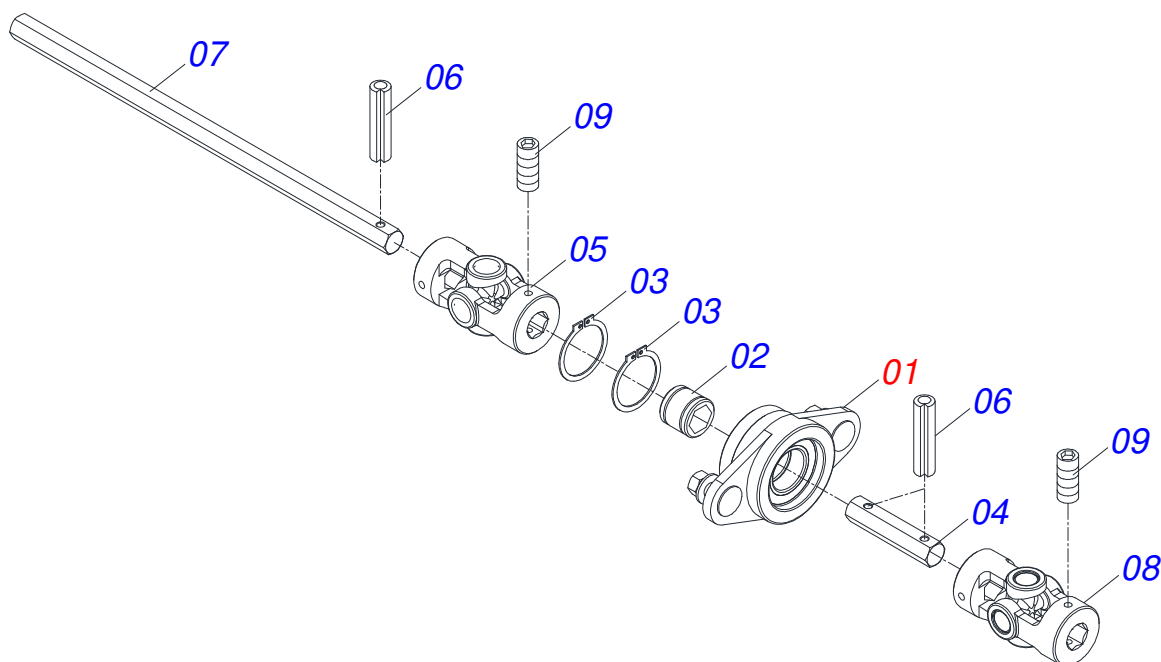

Item	Code	Description	See page	QT
01	0511052389	BEARING DOUBLE FRONT ROW SEED	107	01
02	0551017559	BEARING AXLE BODY		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0551017540	5/8" X 73 AXLE HEX		01
05	0501056296	UNIVERSAL JOINT		01
06	0503011855	0.2" X 1.8" SPRING PIN		03
07	0571012412	HEX AXLE		01
08	0561014778	HEX UNIVERSAL JOINT		01
09	0503013958	1/4" X 1" BOLT		02

TRANSMISSION HUB ASSY


0511052742

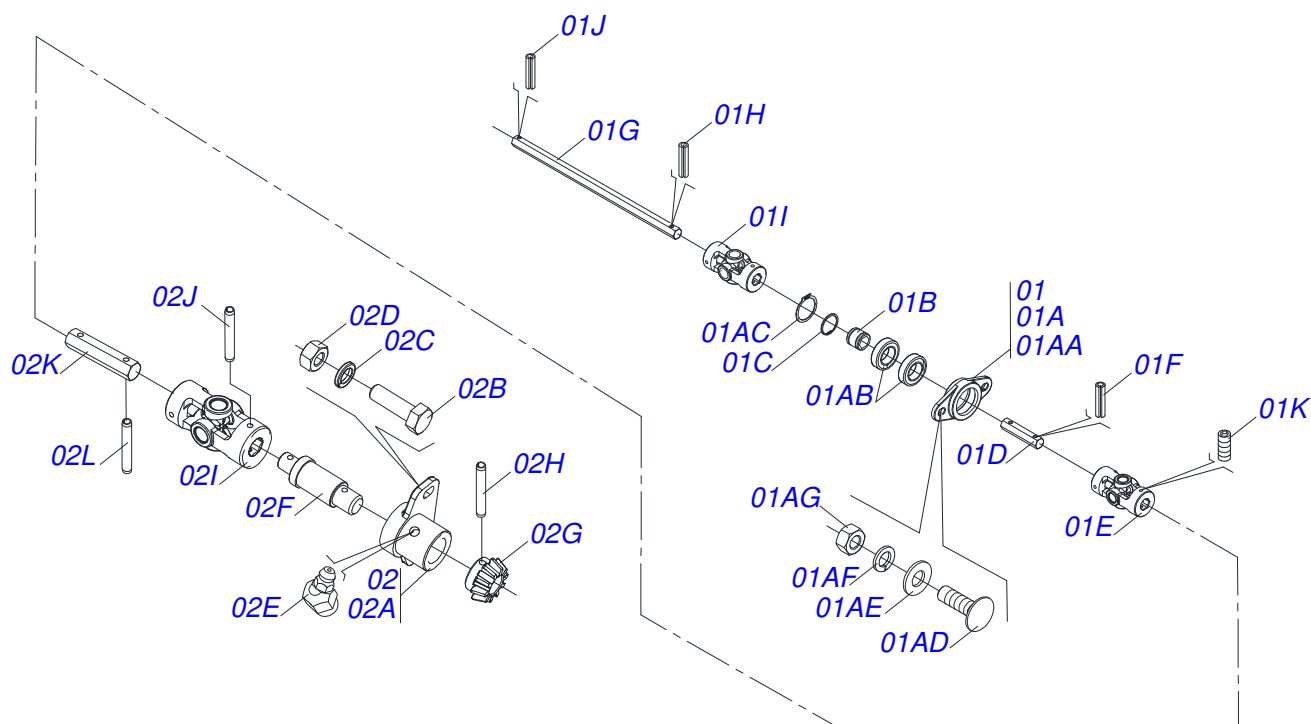


Item	Code	Description	See page	QT
001	0511052390	BEARING WITH AXLE ASSY FRONT ROW SEED		01
001A	0511052389	BEARING DOUBLE FRONT ROW SEED	107	01
001AA	0502011971	HOUSING WITH DOUBLE BEARING		01
001AB	0503011410	ROLLER BEARING		02
001AC	0503011105	SEAL RING		01
001AD	0503011953	5/16" X 1" BOLT		02
001AE	0501010694	FLAT WASHER		02
001AF	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
001AG	0503010337	5/16" NUT		02
001B	0551017559	BEARING AXLE BODY		01
001C	0503010406	501025 CLAMPING RING (FOR AXLE)		02
001D	0551017540	5/8" X 73 AXLE HEX		01
001E	0501056296	UNIVERSAL JOINT		01
001F	0503011855	0.2" X 1.8" SPRING PIN		01
001G	0571012412	HEX AXLE		01
001H	0503011855	0.2" X 1.8" SPRING PIN		01
001I	0561014778	HEX UNIVERSAL JOINT		01
001J	0503011855	0.2" X 1.8" SPRING PIN		01
001K	0503013958	1/4" X 1" BOLT		02
002	0511052743	BEARING WITH LONG FRONT AXLE		01
002A	0571012291	PONTEIRA LODGING BEARING		01
002B	0503010371	5/16" X 1" BOLT		02
002C	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
002D	0503010337	5/16" NUT		02
002E	0503010003	1845 GREASE FITTING		01
002F	0571012413	POINT TRANSMISSION		01
002G	0502012648	10Z CONICAL GEAR		01
002H	0503015356	SPRING PIN		01
002I	0501056296	UNIVERSAL JOINT		01
002J	0503011855	0.2" X 1.8" SPRING PIN		01
002K	0571012788	HEX AXLE		01



Item	Code	Description	See page	QT
002L	0503011855	0.2" X 1.8" SPRING PIN		01

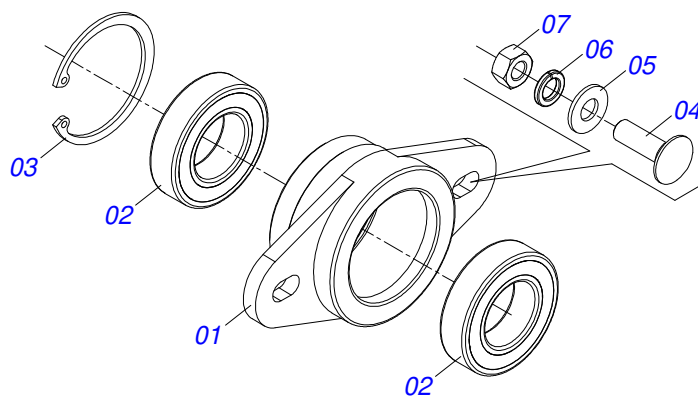


Item	Code	Description	See page	QT
01	0502011971	HOUSING WITH DOUBLE BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER		02
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

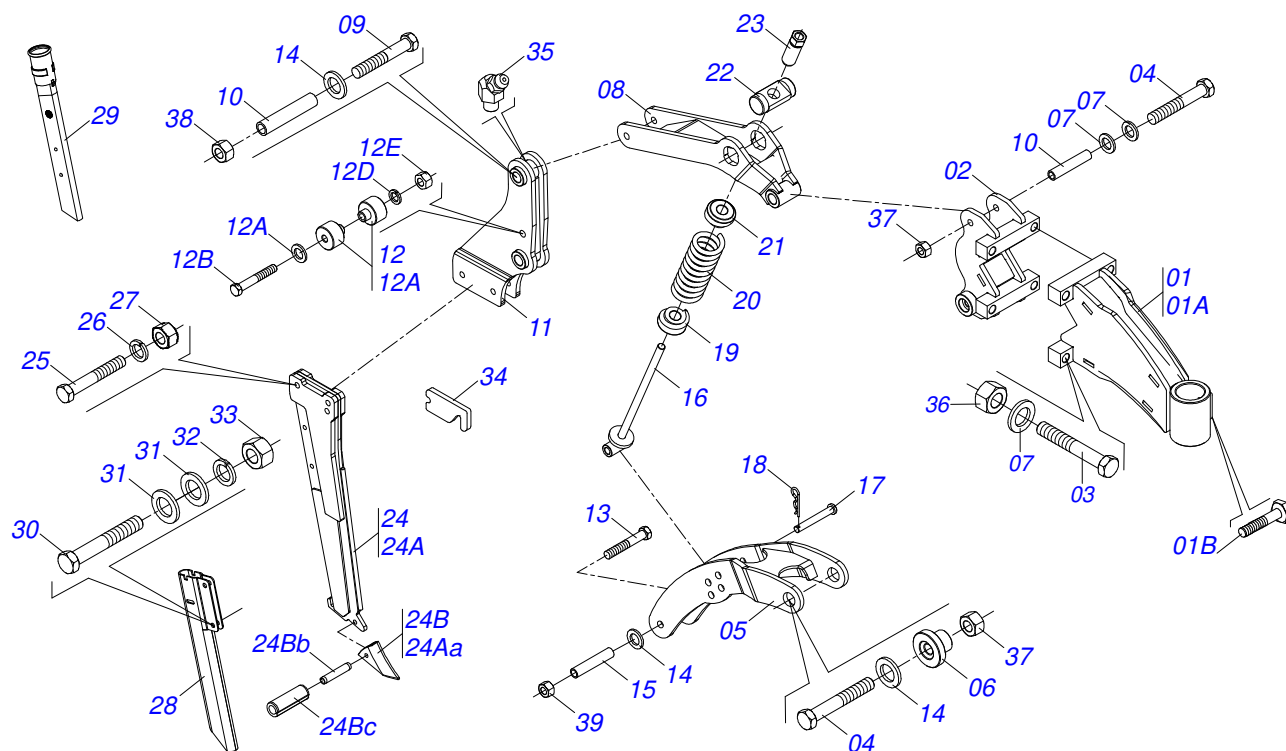

Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT		01
001A	0521061326	BLADE DISC AXLE SUPPORT		01
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
002	0521061407	ROW FERTILIZER SUPPORT		01
003	0503011084	3/4" X 5" BOLT		04
004	0501013233	5/8" X 2-3/4" BOLT		02
005	0521063504	FERTILIZER ROW LOWER SUPPORT		01
006	0531019990	BLADE D ARM ARTIC SLEEVE		02
007	0511015098	FLAT WASHER		06
008	0511063862	FERTILIZER ROW UPPER SUPPORT		01
009	0501010163	5/8" X 4-1/2" BOLT		01
010	0531016207	0.6" X 1" X 2.8" SLEEVE		01
011	0511065837	FERTILIZER ROW REAR SUPPORT		01
012	0501059640	BEATER LINE SET FERTILIZER		01
012A	0561015611	BEATER SLEEVE		02
012B	0503011123	BOLT		01
012C	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
012D	0503010025	3/8 SPRING WASHER		01
012E	0503010026	3/8" NUT		01
013	0501010452	5/8" X 5" BOLT		02
014	0531016031	1/2" SPRING WASHER		04
015	0531016207	0.6" X 1" X 2.8" SLEEVE		02
016	0521063505	GUIDE SPRING LINE FERTILIZER		01
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
018	0503030168	HITCH PIN CLIP		01
019	1902020393	SPRING UPPER SUPPORT		01
020	0503031450	2.7" X 9.2" X 0.03" SPRING		01
021	1902020393	SPRING UPPER SUPPORT		01
022	0521011158	SPRING LOCKNUT		01
023	0571012375	VARON REGULATOR SPINDLE		01
024	0501110640	SCARIFIER SPINDLE		01

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2 UNC G.5 ZN HEX NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
032	0503010025	3/8 SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8 UNC SELF LOCKING NUT		02

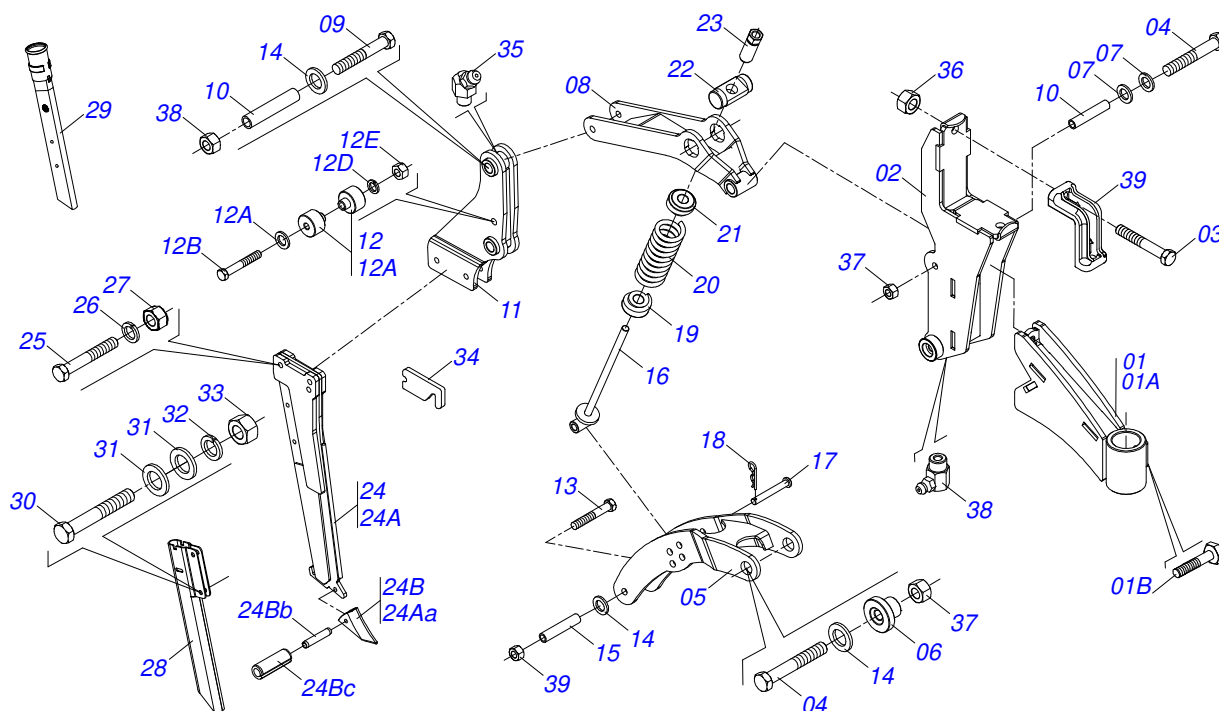


Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT		01
001A	0521061326	BLADE DISC AXLE SUPPORT		01
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
002	0521063521	ROW FERTILIZER SUPPORT		01
003	0501010125	3/4" X 2-1/2" BOLT		02
004	0501013233	5/8" X 2-3/4" BOLT		02
005	0521063504	FERTILIZER ROW LOWER SUPPORT		01
006	0531019990	BLADE D ARM ARTIC SLEEVE		02
007	0511015098	FLAT WASHER		06
008	0511063862	FERTILIZER ROW UPPER SUPPORT		01
009	0501010163	5/8" X 4-1/2" BOLT		01
010	0531016207	0.6" X 1" X 2.8" SLEEVE		01
011	0511065837	FERTILIZER ROW REAR SUPPORT		01
012	0501059640	BEATER LINE SET FERTILIZER		01
012A	0561015611	BEATER SLEEVE		02
012B	0503011123	BOLT		01
012C	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
012D	0503010025	3/8 SPRING WASHER		01
012E	0503010026	3/8" NUT		01
013	0501010452	5/8" X 5" BOLT		02
014	0531016031	1/2" SPRING WASHER		04
015	0531016207	0.6" X 1" X 2.8" SLEEVE		02
016	0521063505	GUIDE SPRING LINE FERTILIZER		01
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
018	0503030168	HITCH PIN CLIP		01
019	1902020393	SPRING UPPER SUPPORT		01
020	0503031450	2.7" X 9.2" X 0.03" SPRING		01
021	1902020393	SPRING UPPER SUPPORT		01
022	0521011158	SPRING LOCKNUT		01
023	0571012375	VARON REGULATOR SPINDLE		01
024	0501110640	SCARIFIER SPINDLE		01

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2 UNC G.5 ZN HEX NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
032	0503010025	3/8 SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8 UNC SELF LOCKING NUT		02
038	0503010004	1890 GREASE FITTING		01
039	0502012400	ROW FERTILIZER FIXER		01

24" BLADE DISC ASSY


0511048339

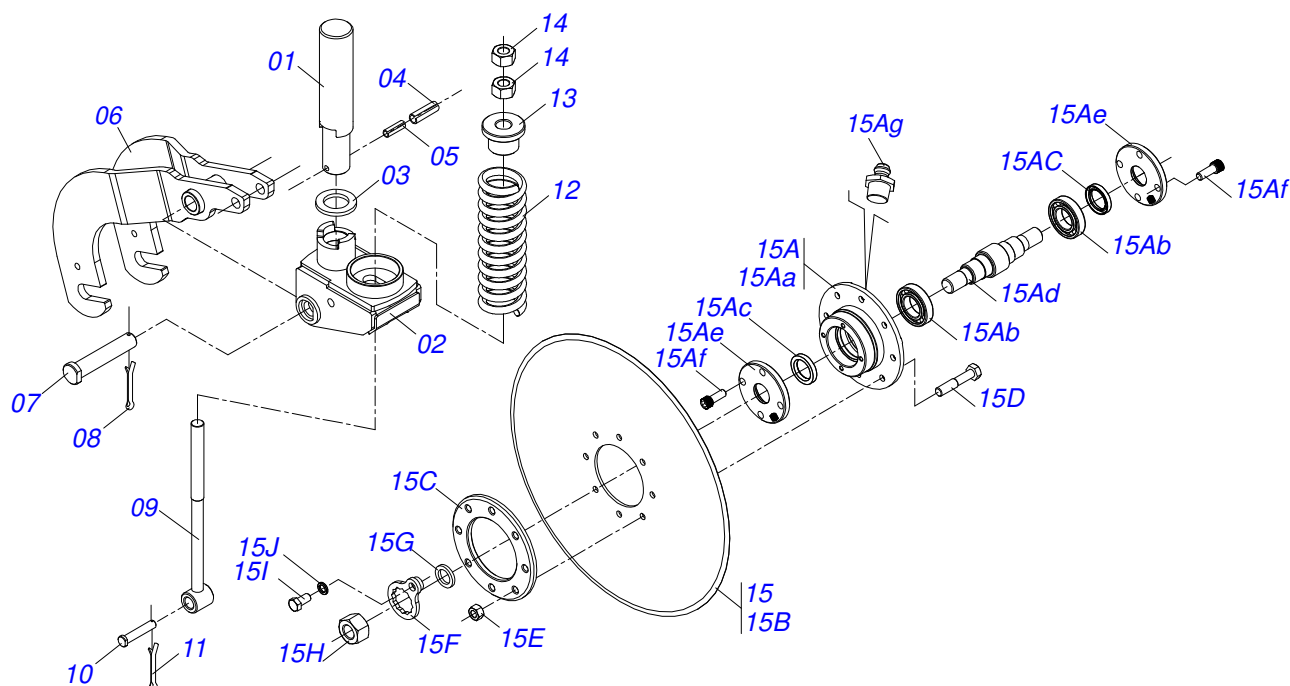


Item	Code	Description	See page	QT
01	0561015334	BLADE DISC AXLE ASSY		01
02	0521061328	SWIVEL BASE		01
03	0561015610	FLAT WASHER		01
04	0503010361	SPRING PIN		01
05	0503010756	0.2" X 2.4" SPRING PIN		01
06	0521062418	BLADE DISC FORK		01
07	0561015339	BLADE DISC AXLE ASSY		01
08	0503010010	1/4" X 2.1/2" COTTERPIN		01
09	0501069390	SPRING ROD		01
10	0561019515	COUPLING SHAFT		01
11	0503010571	1/4" X 1.1/2 COTTERPIN		01
12	0503031346	COMPRESSION SPRING		01
13	0561015400	BLADE DISC SPRING GUIDE		01
14	0503014018	1" NUT		01
15	0511050746	24" BLADE DISC ASSY		01
15A	0501057526	DISC HUB	112	01
15Aa	0502011478	DISC HUB		01
15Ab	0503011291	6209 BALL BEARING		02
15Ac	0503012106	00521-BR RETAINER		02
15Ad	0521012661	BLADE DISC AXLE HUB		01
15Ae	0502011477	BLADE DISC HOUSIG CP		02
15Af	0503010134	3/8" X 1" BOLT		08
15Ag	0503010002	1800 GREASE FITTING		01
15B	0603030044	24" X 0.2" FLAT PLAIN DISC		01
15C	0521011824	BLADE DISC FLANGE OUTER		01
15D	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
15E	0503010060	1/2 UNC G.5 ZN HEX NUT		16
15F	0501069637	AXLE NUT LOCK		02
15G	0521012664	FLAT WASHER		02
15H	0501010087	1.1/4" NUT		02
15I	0503010962	5/8" X 1-1/4" BOLT		02




Item	Code	Description	See page	QT
15J	0503010027	5/8 SPRING WASHER		02

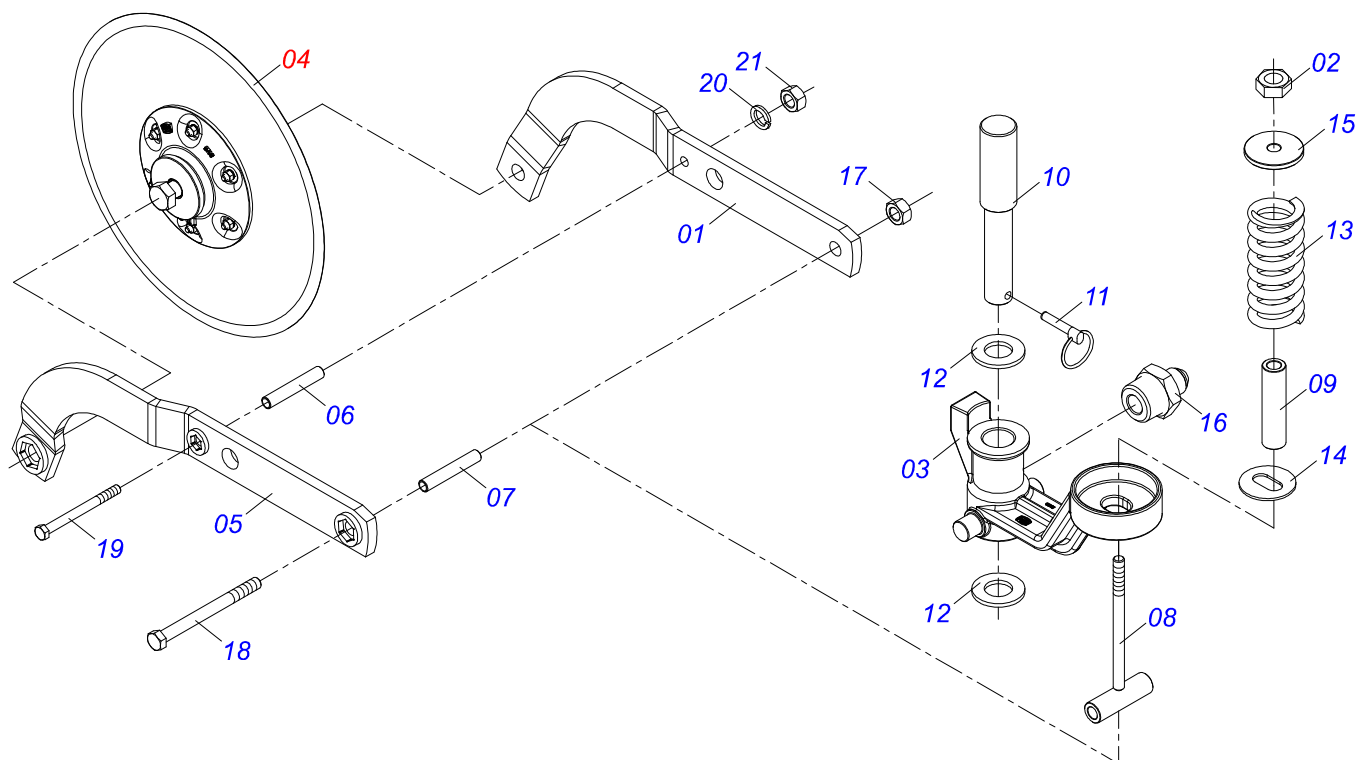


Item	Code	Description	See page	QT
01	0571018989	LH BLADE DISC ARM		01
02	0503011254	7/8" HEX SELF ADJUSTING NUT		01
03	0502012790	LOCK NUT		01
04	0511058648	HUB WITH 20" DISC BLADE	113	01
05	0521065978	RIGHT ARM WITH WASHER LOCK		01
06	0571019035	SLEEVE SUPPORT ARM		01
07	0521010452	SLEEVE		01
08	0521065992	ADJUSTMENT SPRING		01
09	0571019591	BLADE DISC ROD SLEEVE		01
10	0571019033	FIXATION AXLE		01
11	0503030430	7/16 X 2" PIN LOCK		01
12	0502012813	FLANGE WASHER SPRING		02
13	0503034135	COMPRESSION SPRING		01
14	0571019032	SUPPORT WASHER		01
15	0571019034	FLANGE WASHER AXLE		01
16	0503010002	1800 GREASE FITTING		01
17	0503011255	3/4" LOCK NUT		01
18	0503013185	3/4" X 5-1/2" BOLT		01
19	0503011411	1/2" X 5-1/2" BOLT		01
20	0503010019	1/2" SPRING WASHER		01
21	0503010060	1/2 UNC G.5 ZN HEX NUT		01

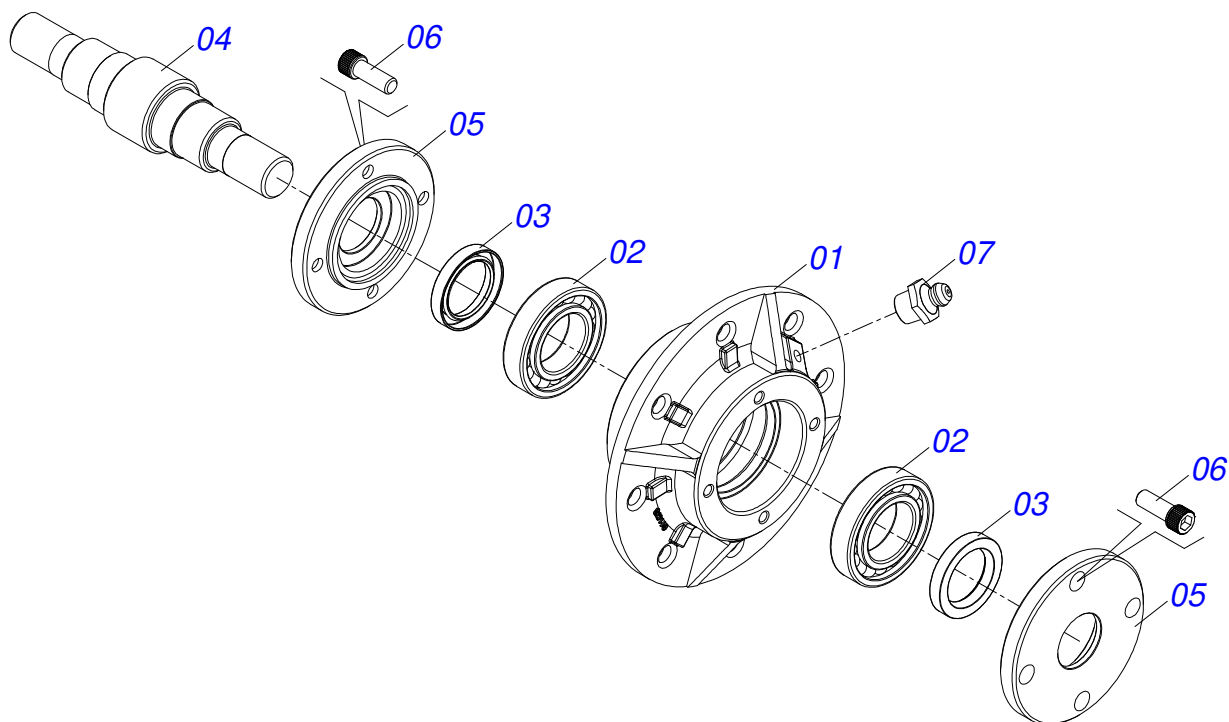


Item	Code	Description	See page	QT
01	0502011478	DISC HUB		01
02	0503011291	6209 BALL BEARING		02
03	0503012106	00521-BR RETAINER		02
04	0521012661	BLADE DISC AXLE HUB		01
05	0502011477	BLADE DISC HOUSIG CP		02
06	0503010134	3/8" X 1" BOLT		08
07	0503010002	1800 GREASE FITTING		01
08	1882970002	GREASE SOAP		0,03Kg

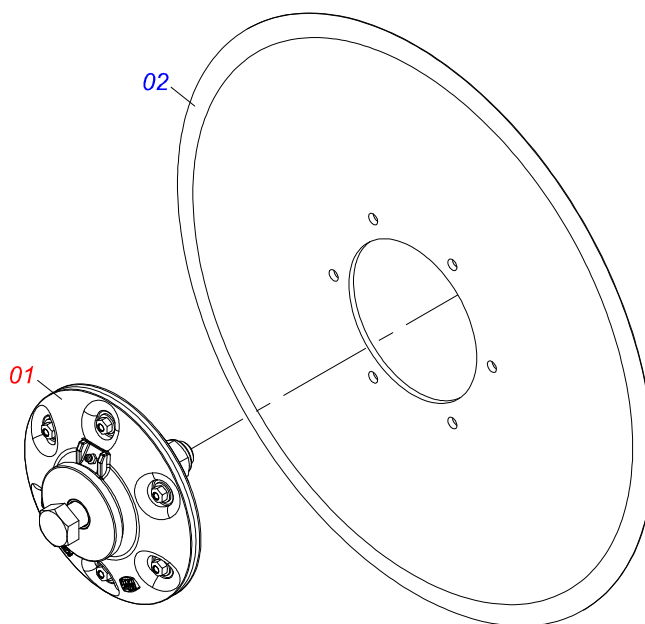

Item	Code	Description	See page	QT
01	0511056909	DISC BLADE HUB WITHOUT DISC	114	01
02	0603027851	20" X 0.2" FLAT PLAIN DISC		01

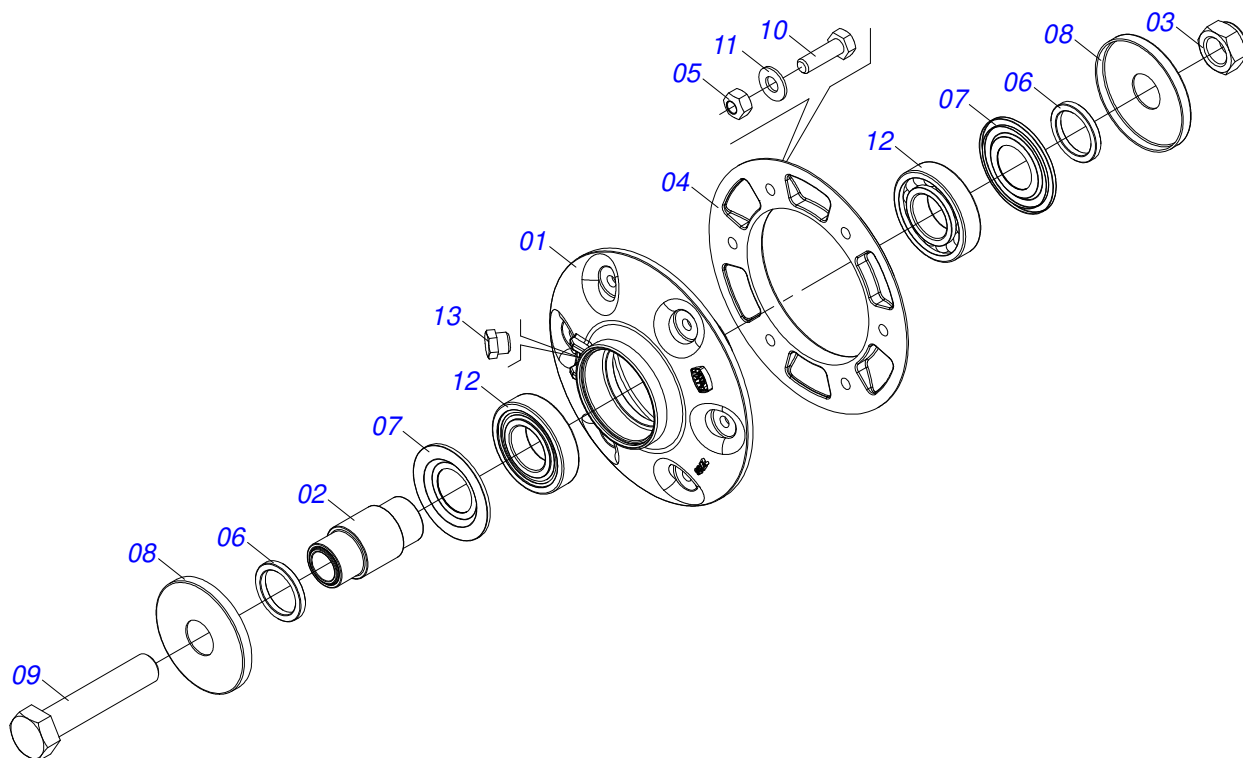

Item	Code	Description	See page	QT
01	0502012793	DISC HUB		01
02	0571018047	DISC BLADE HUB AXLE		01
03	0503017755	NUT		01
04	0502020641	BLADE DISC FLANGE		01
05	0503013816	5/16" LOCKNUT		06
06	0571018048	BACKREST WASHER		02
07	0521065882	NILOS SEALING RING		02
08	0571018049	DUST CLOAK		02
09	0581010575	7/8" X 145 BOLT		01
10	0503018825	5/16 UNC UNC BOLT		06
11	0501010694	FLAT WASHER		06
12	0503016061	BEARING		02
13	0511017907	1/8" BSPT X 6 PLUG		01

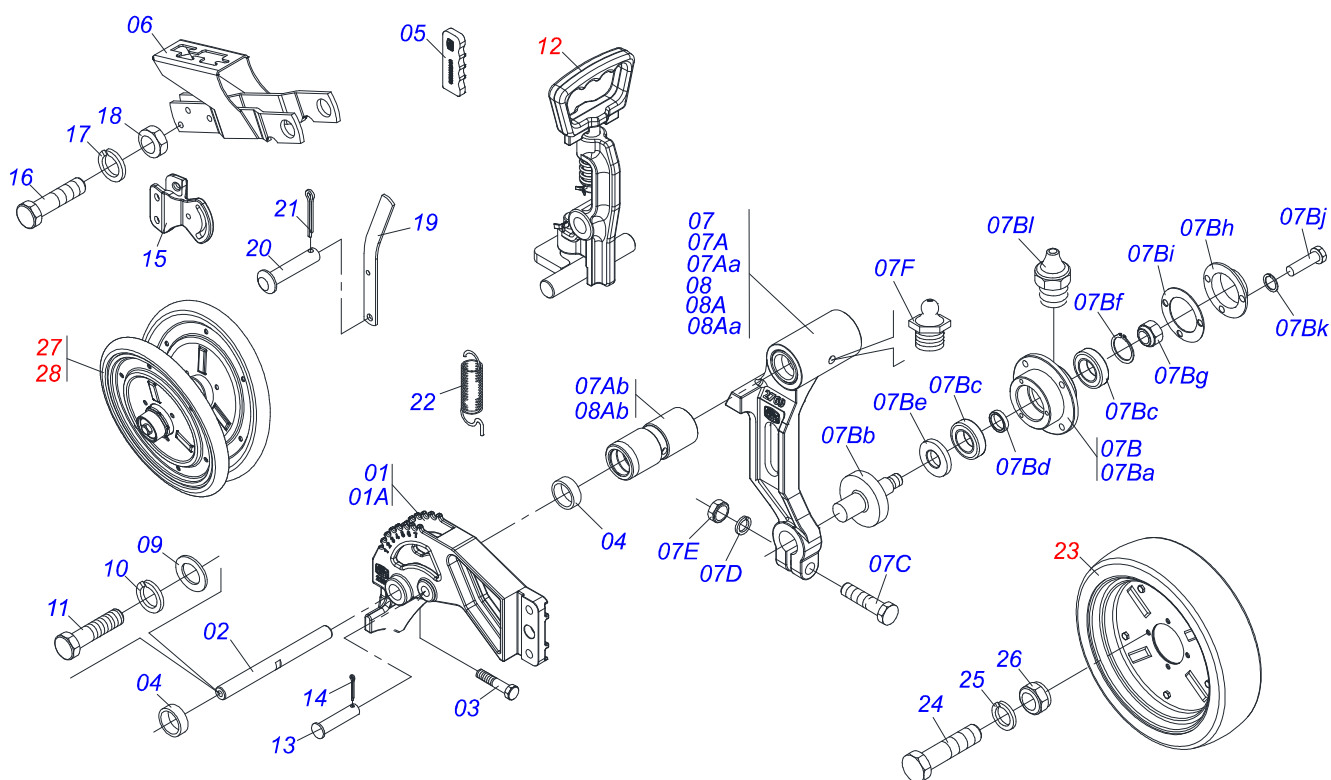


Item	Code	Description	See page	QT
01	0511056691	CONTROL DEPTH SUPPORT		01
01A	0502012282	DEPTH CONTROL SUPPORT		01
02	0571016886	DEPTH WHEEL AXLE		01
03	0503810256	SCREW		01
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
05	0503033942	COMPACTOR WHEEL REGULATOR LID		01
06	0521064073	REGULACION WHEEL COMPACTOR		01
07	0511056692	DEPTH WHEEL RIGHT ARM		01
07A	0501110796	DEPTH CONTROL RIGHT ARM		01
07Aa	0502012769	DEPTH WHEEL RIGHT ARM		01
07Ab	0571016883	36,04 X 25,62 X 85 NYLON SLEEVE		01
07B	0501052627	ASSY DEPTH WHEEL HUB	118	02
07Ba	0502011907	DEPTH CONTROL WHEEL HUB		02
07Bb	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		02
07Bc	0503010269	6204 BALL BEARING		04
07Bd	0501013636	SPACING SLEEVE		02
07Be	0503010689	SEAL 00763-BR		02
07Bf	0503011105	SEAL RING		02
07Bg	0503010878	5/8" SELF ALIGNING NUT		02
07Bh	0521019178	PROTECTION LID		02
07bi	0503030757	2.9" X 2" X 0.02" JOINT		02
07Bj	0503014729	1/4" UNF X 1/2" BOLT		06
07Bk	0503011441	SPRING WASHER		06
07Bl	0503010691	1/4" GREASE FITTING		02
07C	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07D	0503011440	SPRING WASHER		02
07E	0503010060	1/2 UNC G.5 ZN HEX NUT		02
07F	0503010002	1800 GREASE FITTING		02
08	0511056693	LH ARM DEPTH CONTROL WHEEL		01
08A	0501110797	LEFT ARM WITH SLEEVE		01
08Aa	0502012770	DEPTH WHEEL LEFT ARM		01


PRESS WHEELS

0521045198


Item	Code	Description	See page	QT
08Ab	0571016883	36,04 X 25,62 X 85 NYLON SLEEVE		01
09	0571017749	FLAT WASHER		02
10	0503011440	SPRING WASHER		02
11	0503010311	1/2" X 1-1/4" BOLT		02
12	0501052297	DEPTH WHEELS REGULATOR ASSY	119	01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010257	1/8" X 1" COTTERPIN		01
15	0502012116	PRESS WHEEL ADJUSTER		01
16	0503010849	3/8" X 1-1/2" BOLT		02
17	0503011443	3/8" SPRING WASHER		02
18	0503010026	3/8" NUT		02
19	0541016906	PRESS WHEELS REGULATOR BODY		01
20	0521010539	0.3" X 1.2" COUPLING SHAFT		01
21	0503010140	1/8" X 3/4" COTTERPIN		01
22	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
23	0501052538	DEPTH BAND WITH ARMS	120	02
24	0503010358	5/16" X 5/8" BOLT		08
25	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
26	0503013816	5/16" LOCKNUT		08
27	0511054333	COMPACT WHEEL RIGHT WITH BEARING	121	01
28	0511054334	COMPACT WHEEL LEFT WITH BEARING	122	01

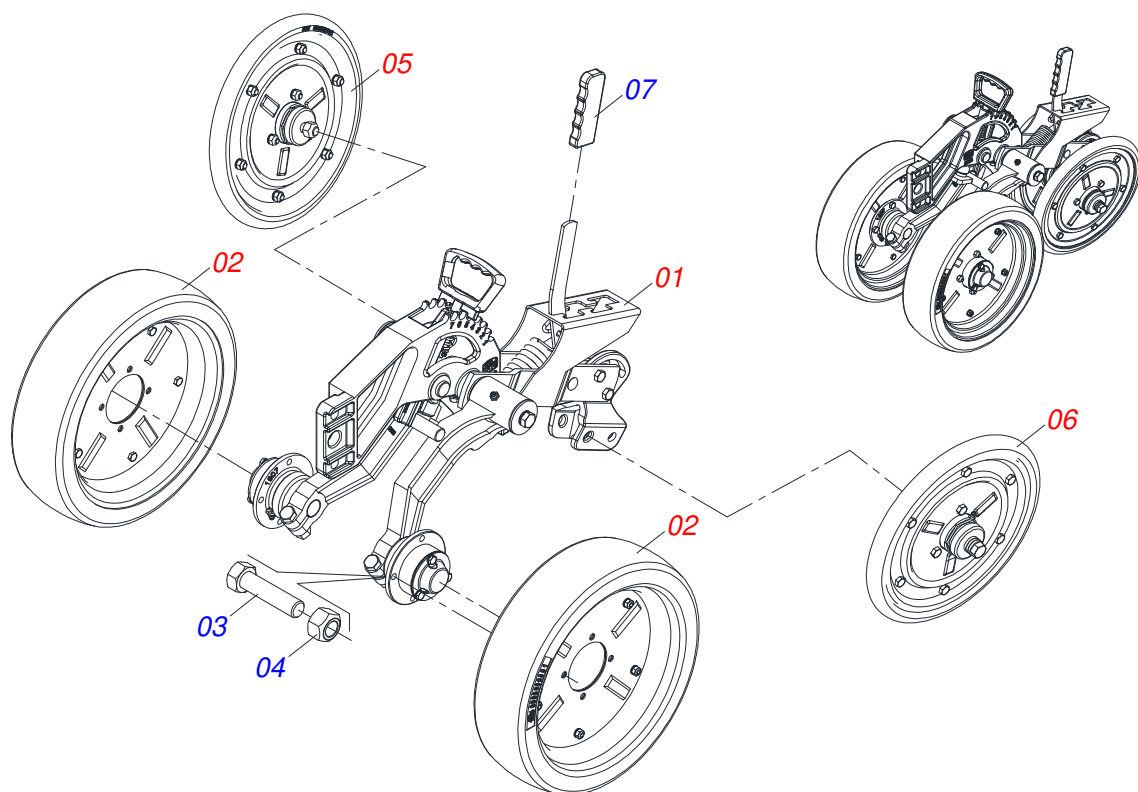


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	123	01
02	0501052538	DEPTH BAND WITH ARMS	120	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	121	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	122	01
07	0503033942	COMPACTOR WHEEL REGULATOR LID		01

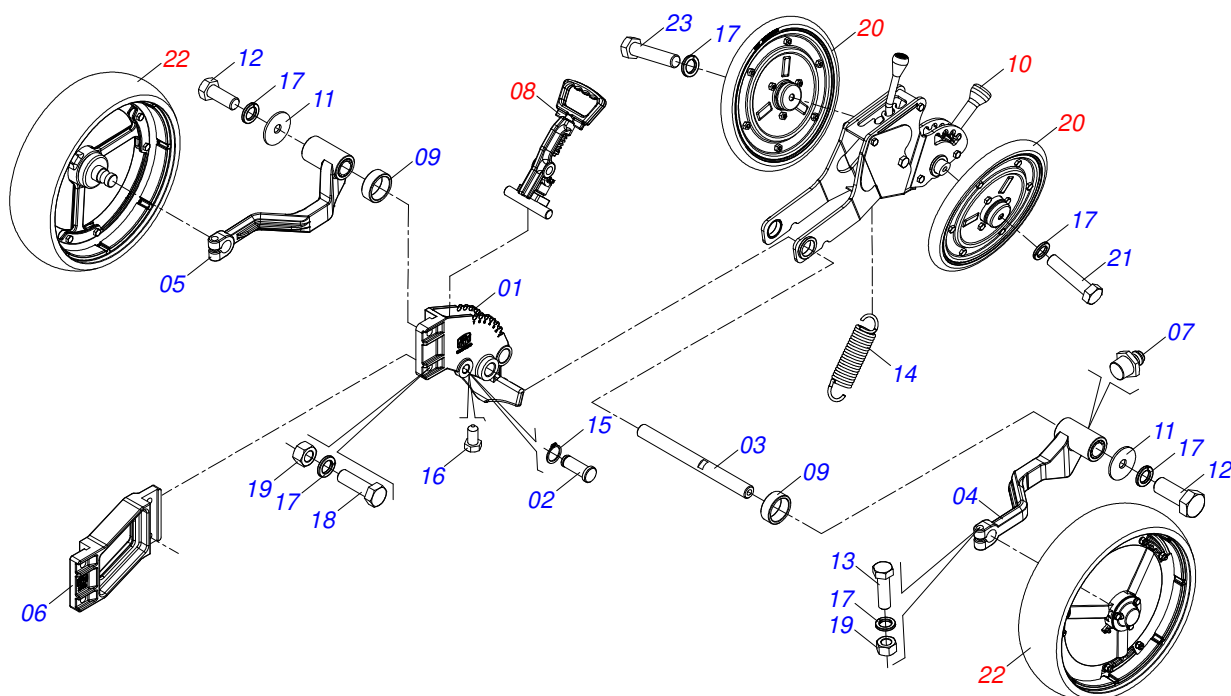


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0581014858	DEPTH WHEEL AXLE		01
04	0501110720	ARM LEFT		01
05	0501110719	DEPTH CONTROL RIGHT ARM		01
06	0502012663	EXTENSION		01
07	0503010002	1800 GREASE FITTING		02
08	0501056769	DEPTH WHEELS REGULATOR ASSY	126	01
09	0503034793	ARTICULATION SLEEVE		02
10	0521051423	COMPACTOR SUPPORT	127	01
11	0571017749	FLAT WASHER		02
12	0503010311	1/2" X 1-1/4" BOLT		02
13	0503016453	1/2" X 2.1/2 BOLT		02
14	0503034817	SPRING		01
15	0503010581	RING		01
16	0503034377	3/8 UNC X 3/4 BOLT		01
17	0503010019	1/2" SPRING WASHER		08
18	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
19	0503010060	1/2 UNC G.5 ZN HEX NUT		04
20	0501052908	COMPACTOR WHEEL WITH BEARING	128	02
21	0503013739	1/2" X 1" BOLT		01
22	0511050077	WHEEL STRIPED	129	02
23	0503010752	1/2" X 3.1/2" BOLT		01

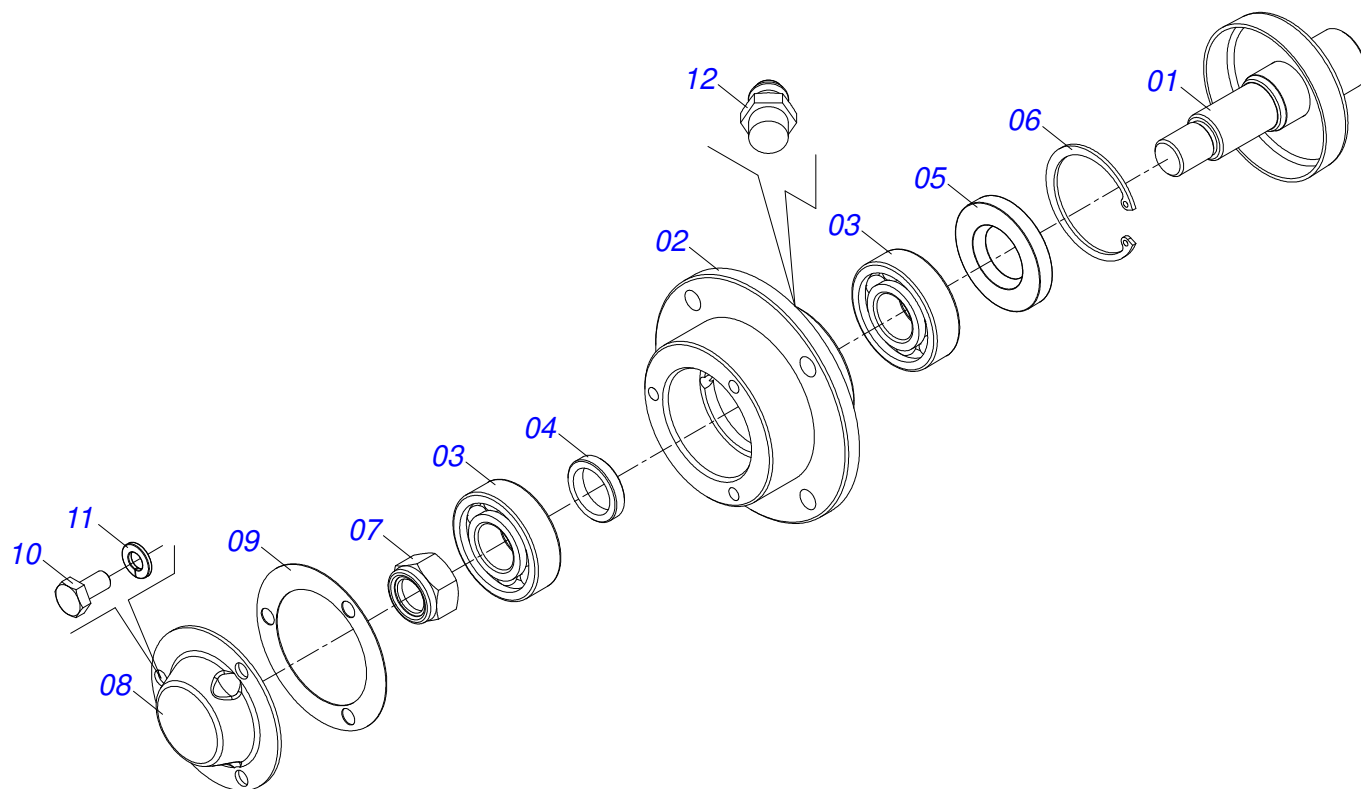


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	PROTECTION LID		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

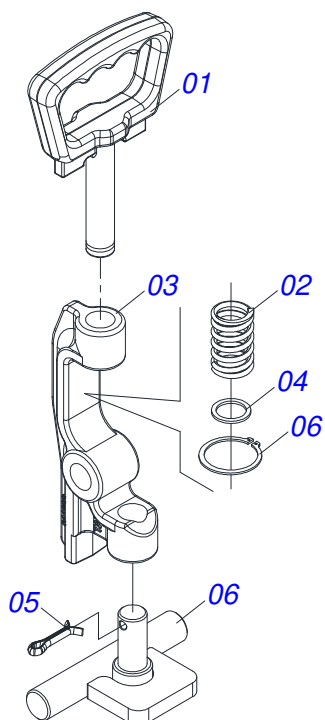


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	DEPTH CONTROL LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

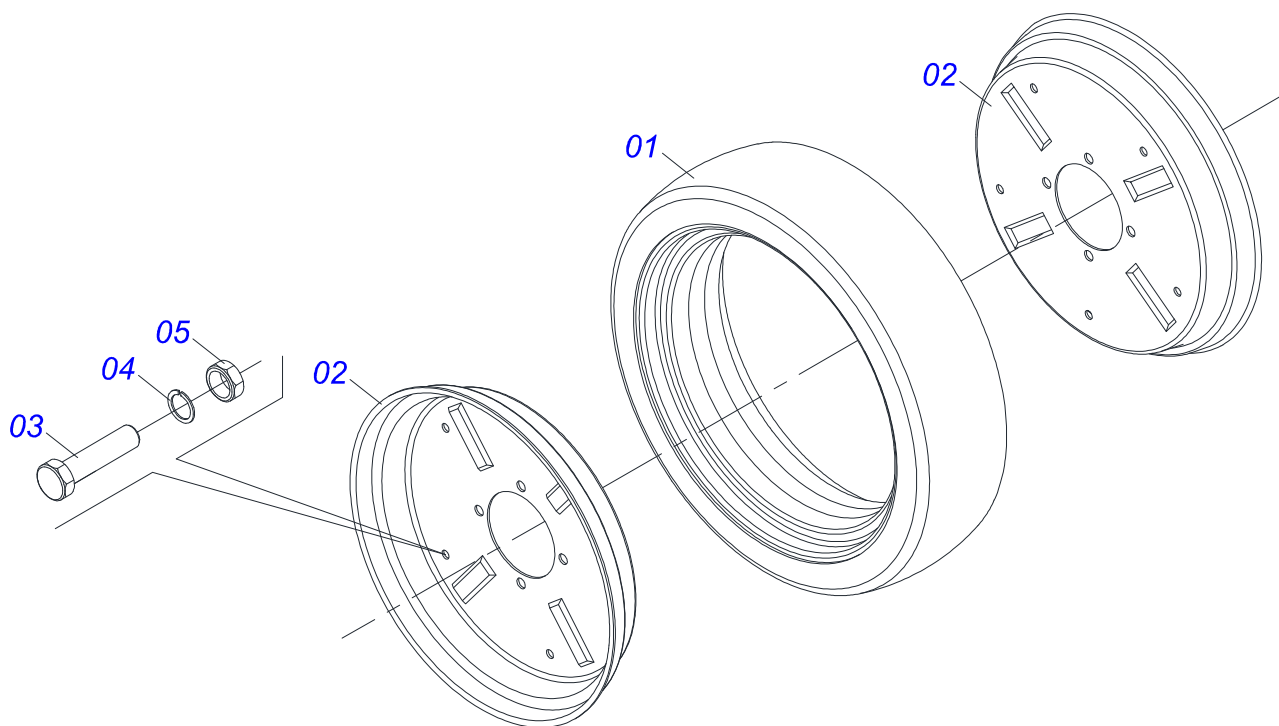


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

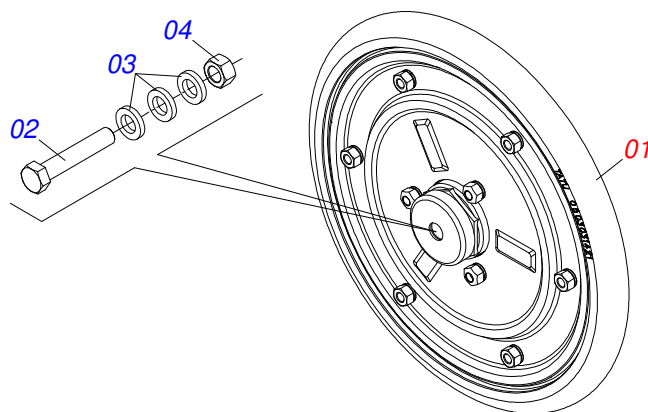


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	128	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

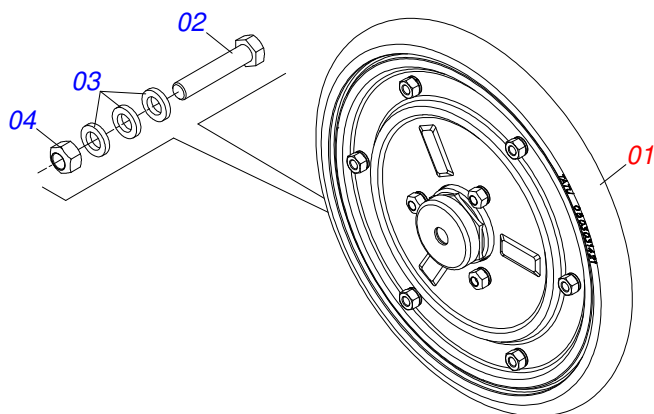


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	128	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

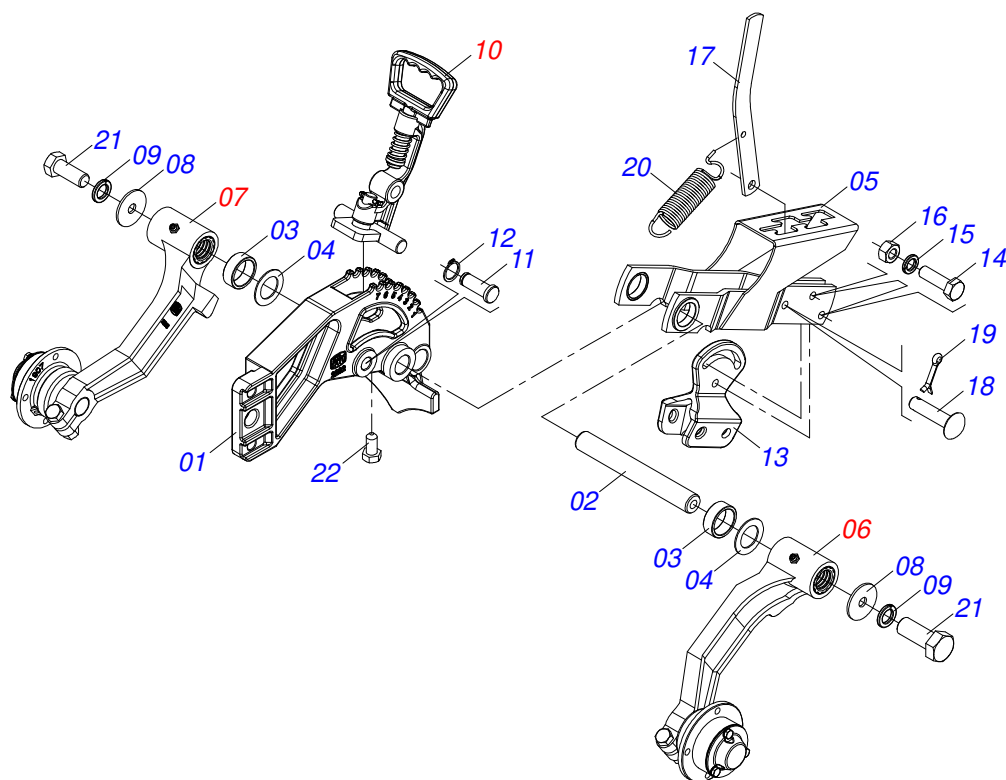


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	124	01
07	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	125	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	119	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	3/8 UNC X 3/4 BOLT		01

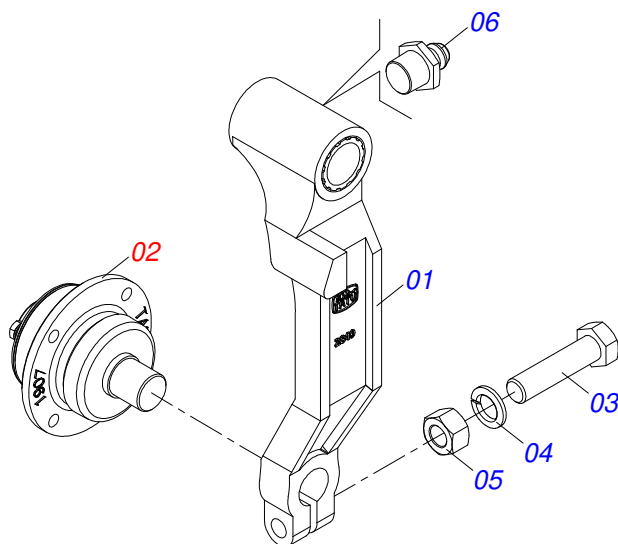


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL HUB	118	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0503010002	1800 GREASE FITTING		01

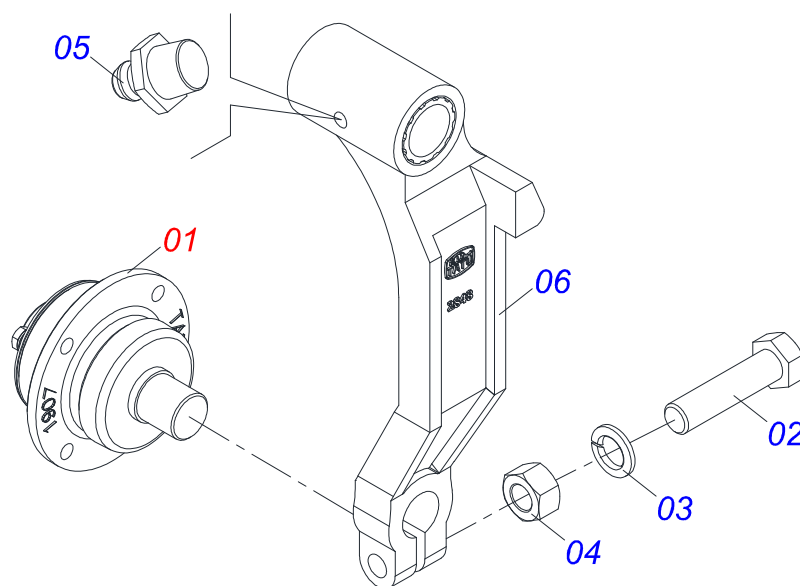


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL HUB	118	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

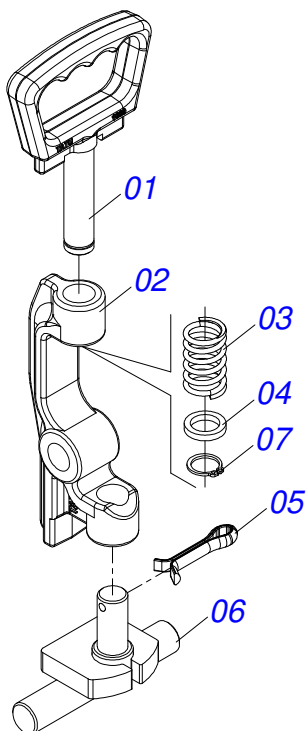


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

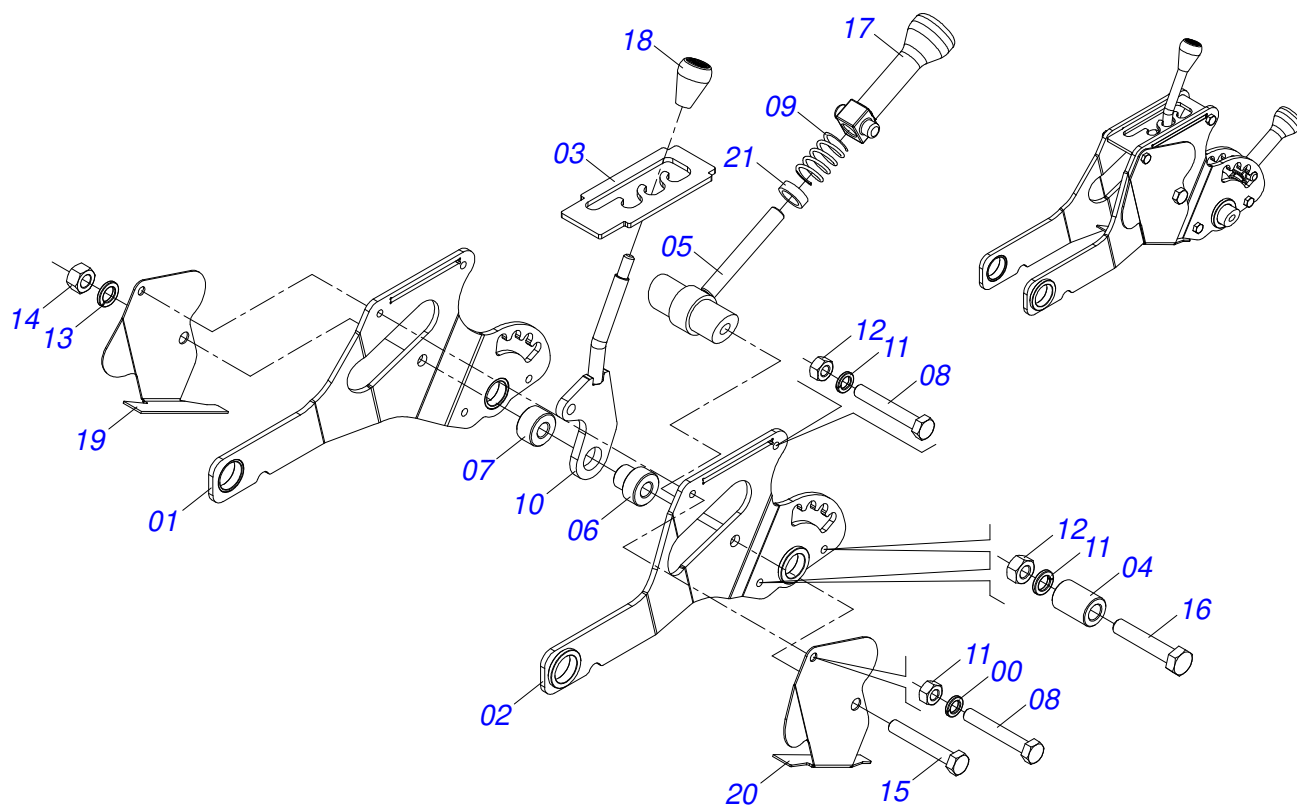

Item	Code	Description	See page	QT
01	0521068003	RIGHT SIDE		01
02	0521068002	LEFT SIDE		01
03	0581014847	PLATE UPPER		01
04	0581015855	SLEEVE		02
05	0521068004	HANDLE BODY		01
06	0581014969	GUIDE SLEEVE		01
07	0581014968	SLEEVE FLANGE		01
08	0503010937	5/16" X 3" BOLT		02
09	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
10	0521068005	LEVER		01
11	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
12	0503010337	5/16" NUT		04
13	0503010019	1/2" SPRING WASHER		01
14	0503010060	1/2 UNC G.5 ZN HEX NUT		01
15	0503010847	1/2" X 3.1/4" BOLT		01
16	0503010882	BOLT		02
17	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
18	0503030878	LEVER CRANK		01
19	0581015854	RIGHT PROTECTION COVER		01
20	0581015853	LEFT PROTECTION COVER		01
21	0581015903	SPACER WASHER		01

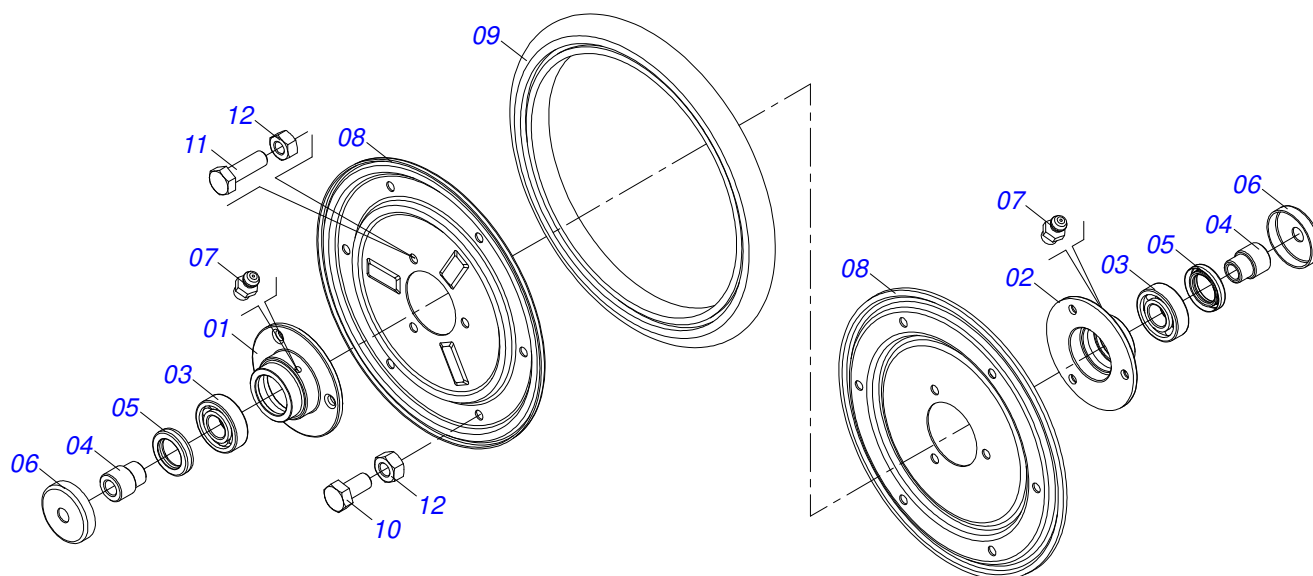


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

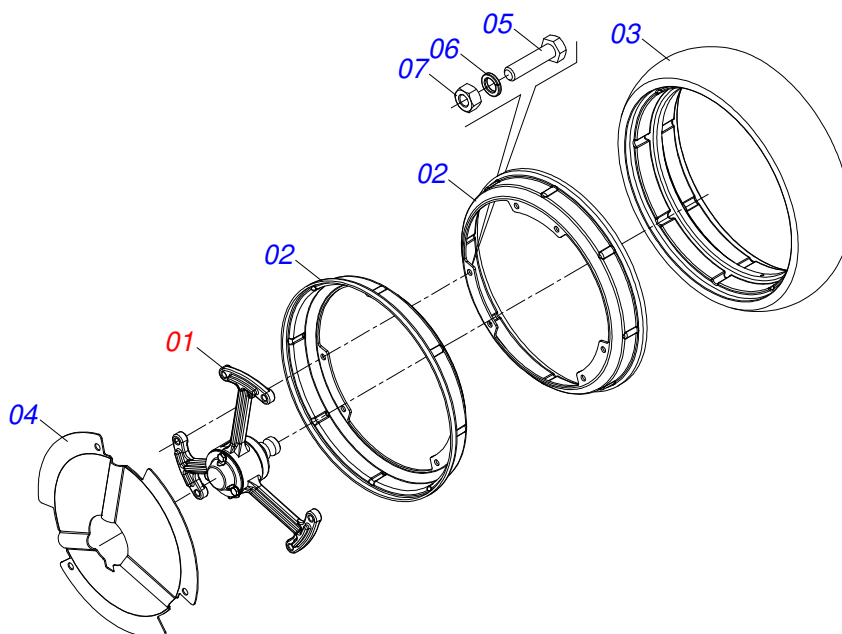


Item	Code	Description	See page	QT
01	0511052287	DEPTH WHEEL HUB ASSY	130	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
07	0503010337	5/16" NUT		06

DEPTH WHEEL HUB ASSY


0511052287

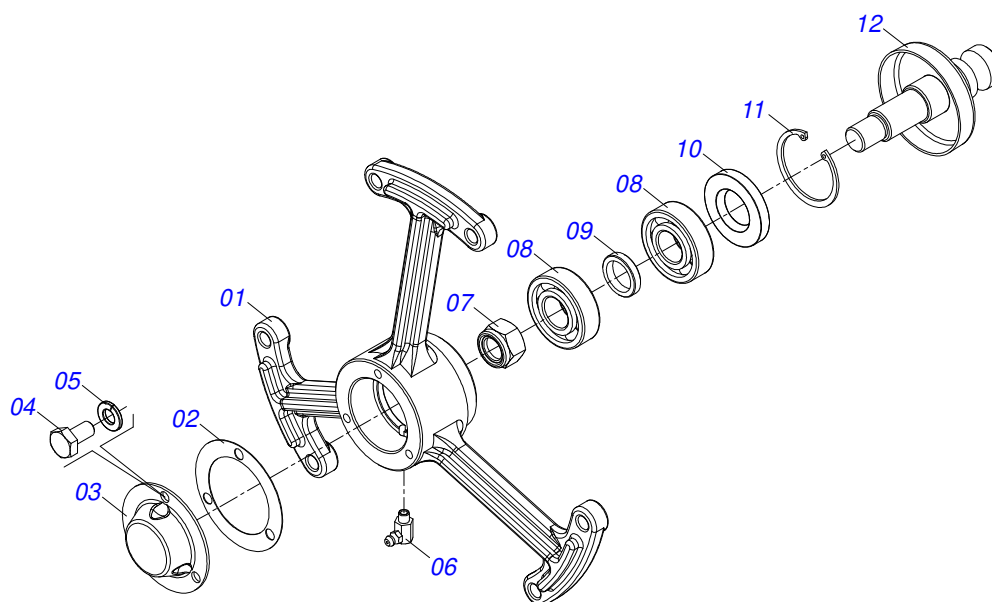


Item	Code	Description	See page	QT
01	0502011918	DEPHT WHEEL HUB		01
02	0503030757	2.9" X 2" X 0.02" JOINT		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503011098	1/4" GREASE FITTING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503010269	6204 BALL BEARING		02
09	0501013636	SPACING SLEEVE		01
10	0503010689	SEAL 00763-BR		01
11	0503011105	SEAL RING		01
12	0521063443	DEPTH CONTROL AXLE		01

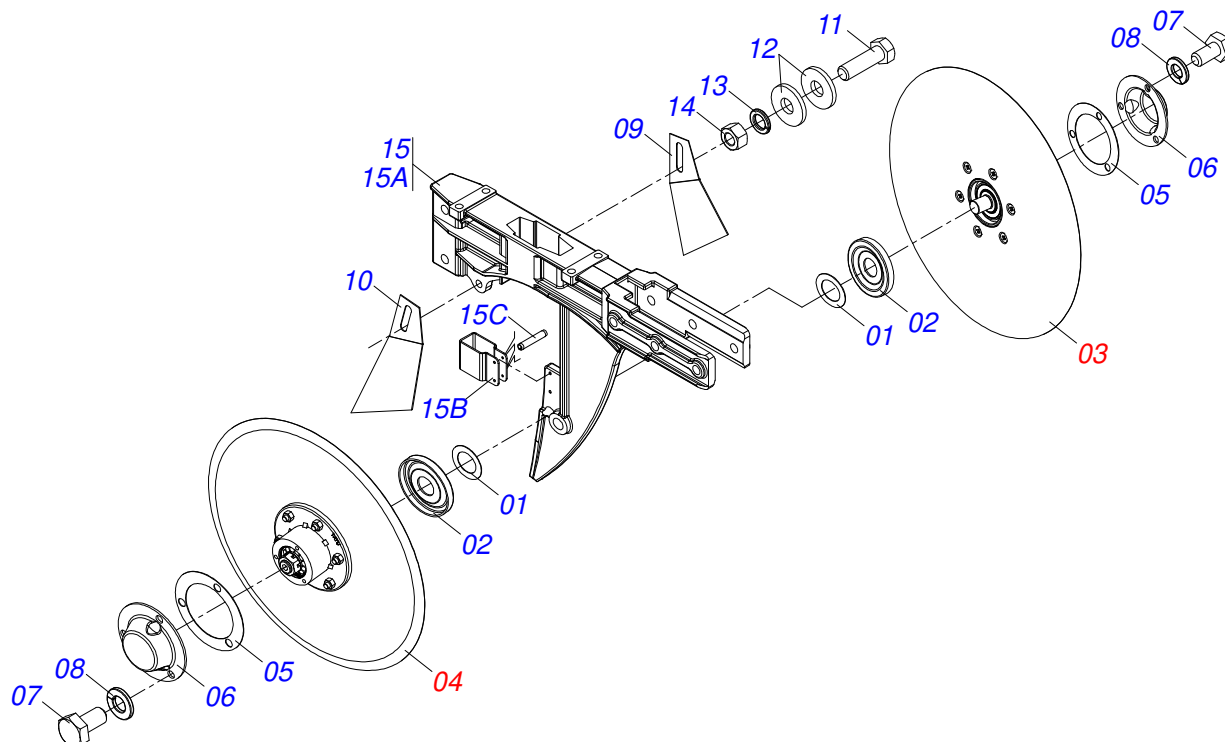


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	15" RIGHT OPENING DISC HUB	133	01
04	0501054168	15" LEFT DOUBLE DISC HUB	134	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	PROTECTION LID		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052301	SUPPORT DDD 15 RIGHT	135	01
15A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

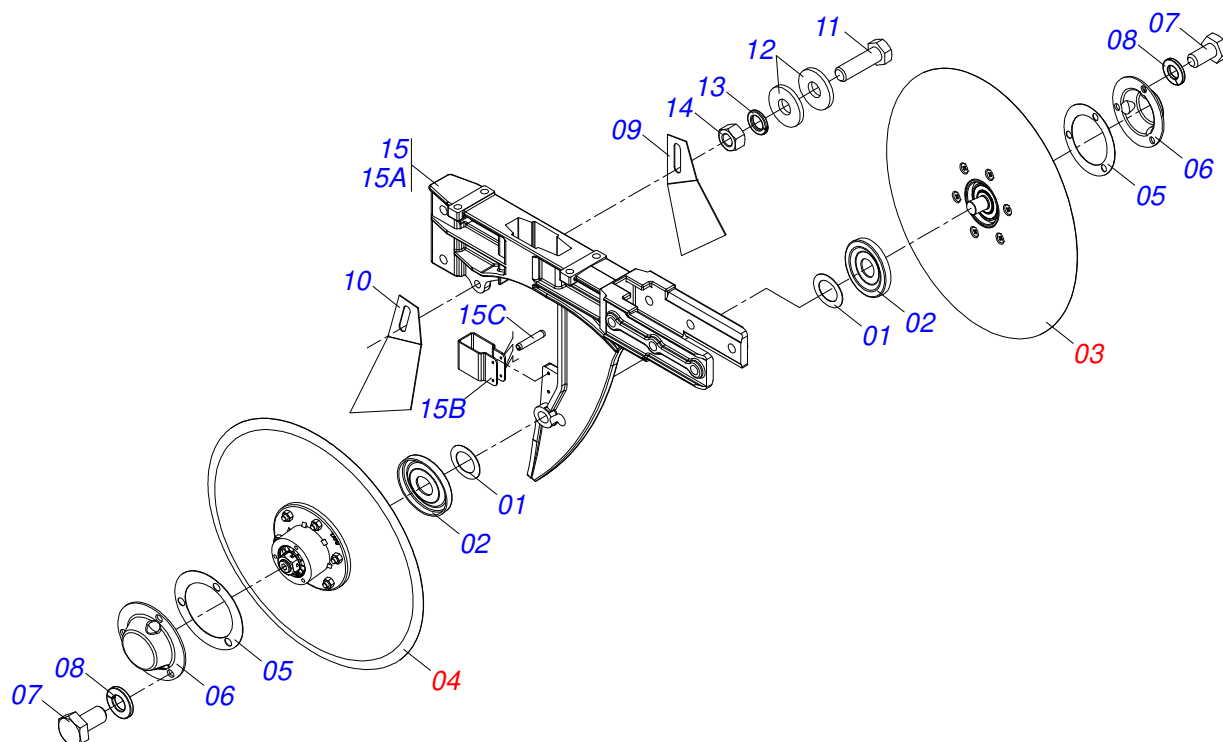


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	15" RIGHT OPENING DISC HUB	133	01
04	0501054168	15" LEFT DOUBLE DISC HUB	134	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	PROTECTION LID		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052302	LH SUPPORT DDD GUIDE	136	01
15A	0561015592	LEFT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

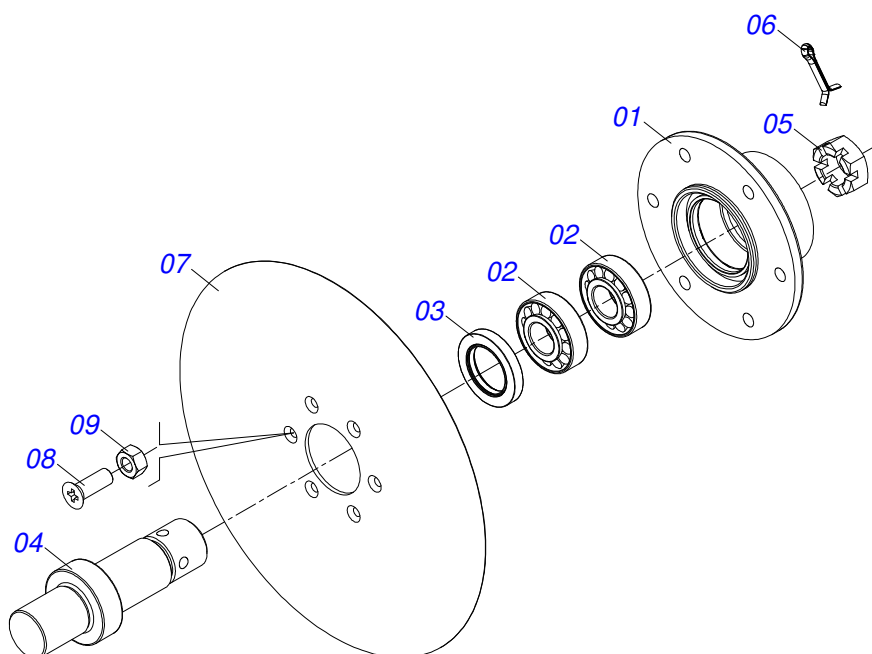


Item	Code	Description	See page	QT
01	0502011930	OPENING DISCS HUB		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT DOUB DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

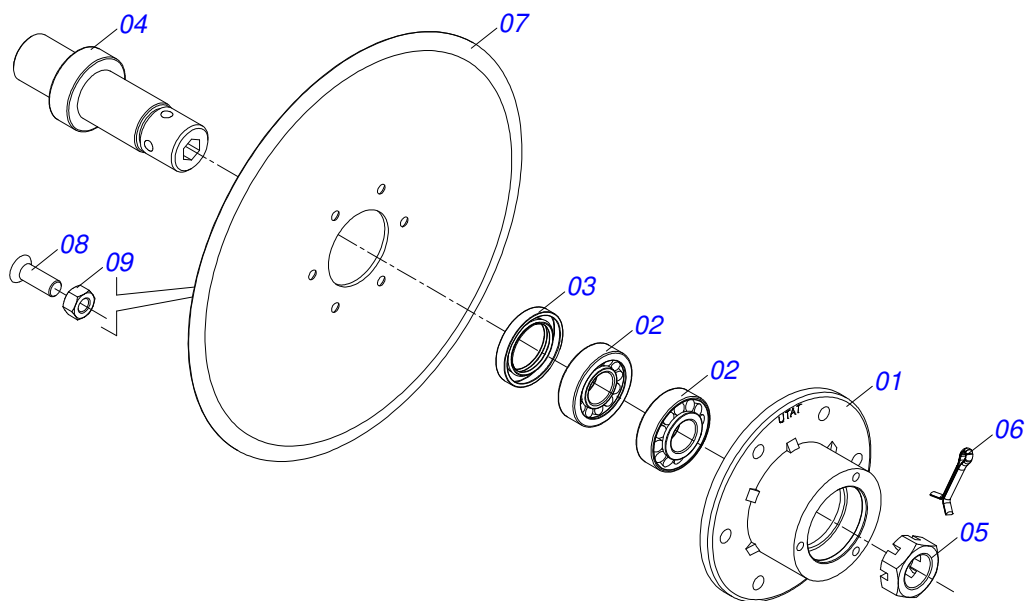


Item	Code	Description	See page	QT
01	0502011930	OPENING DISCS HUB		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

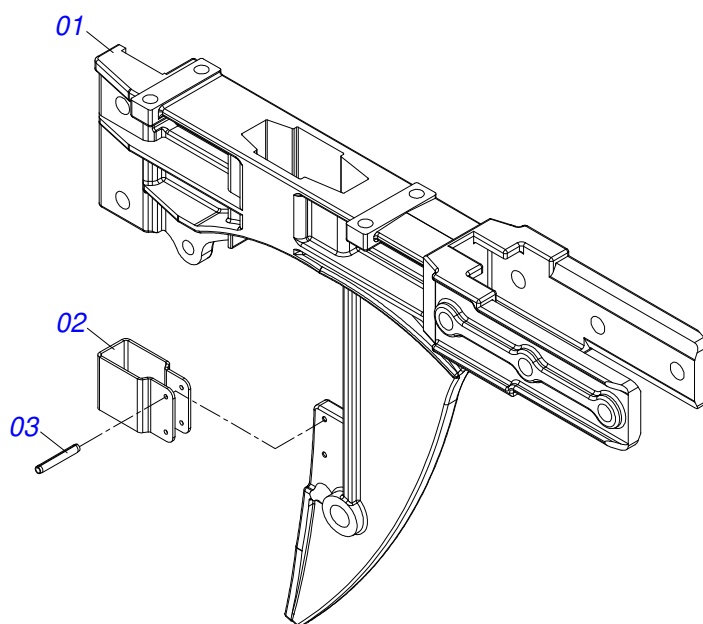


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

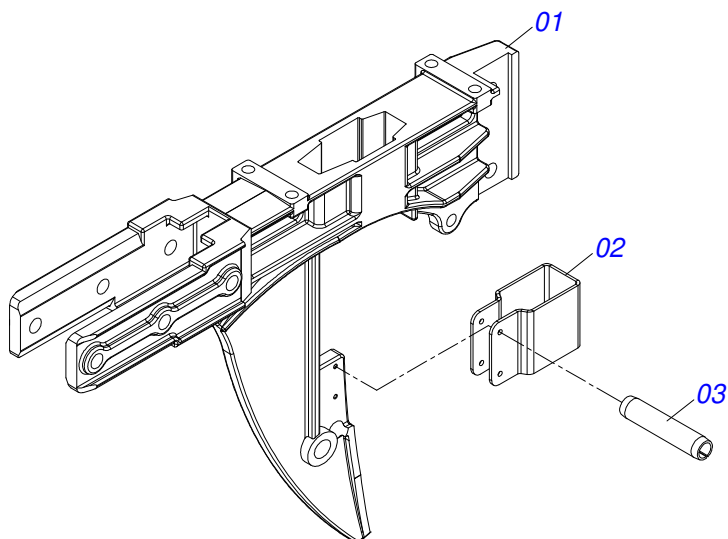


Item	Code	Description	See page	QT
01	0561015592	LEFT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

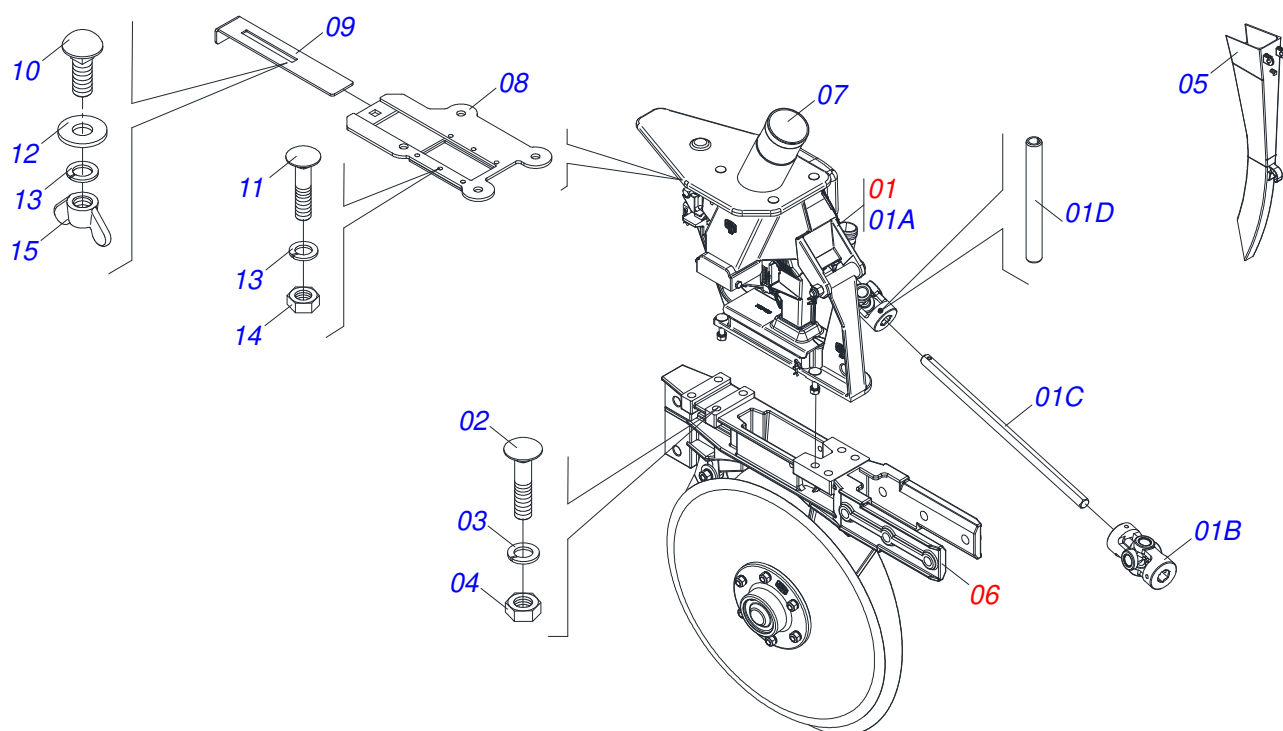


Item	Code	Description	See page	QT
001	0511058195	ASSY FERTILIZER DISTRIBUTOR		01
001A	0511057502	SET PRECISION PLANTING	141	01
001B	0501056296	UNIVERSAL JOINT		01
001C	0571012458	HEX AXLE		01
001D	0503011855	0.2" X 1.8" SPRING PIN		02
002	0503015920	3/8" UNC X 1.3/4" BOLT		04
003	0503010025	3/8 SPRING WASHER		04
004	0503010026	3/8" NUT		04
005	0503062403	TUBE SEED P.P		01
006	0511057154	RIGHT DDD	145	01
007	0521069806	PROTECTION		01
008	0521067215	BASE SUPPORT PRECISION PLANTING		01
009	0581012522	SEED DISTRIBUTOR BOX SWITCH		01
010	0501011643	3/8 X 1"BOLT		01
011	0501010942	3/8" X 1-1/4" BOLT		04
012	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
013	0503010025	3/8 SPRING WASHER		05
014	0503010026	3/8" NUT		04
015	0503010209	3/8" UNC BUTTERFLY NUT		01

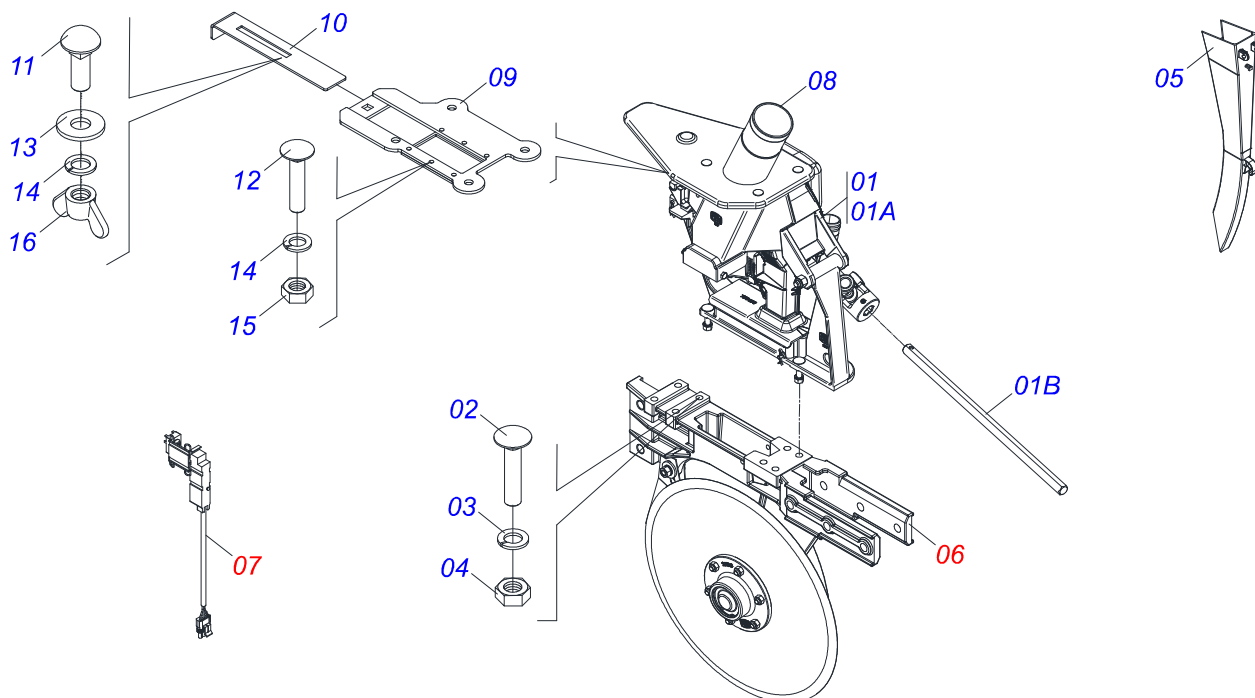


Item	Code	Description	See page	QT
01	0511058195	ASSY FERTILIZER DISTRIBUTOR		01
01A	0511057502	SET PRECISION PLANTING	141	01
01B	0571012458	HEX AXLE		01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057154	RIGHT DDD	145	01
07	0501058972	ASSEMBLY SENSOR ELECTRONIC	149	01
08	0521069806	PROTECTION		01
09	0521067215	BASE SUPPORT PRECISION PLANTING		01
10	0581012522	SEED DISTRIBUTOR BOX SWITCH		01
11	0501011643	3/8 X 1" BOLT		01
12	0501010942	3/8" X 1-1/4" BOLT		04
13	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
14	0503010025	3/8 SPRING WASHER		05
15	0503010026	3/8" NUT		04
16	0503010209	3/8" UNC BUTTERFLY NUT		01

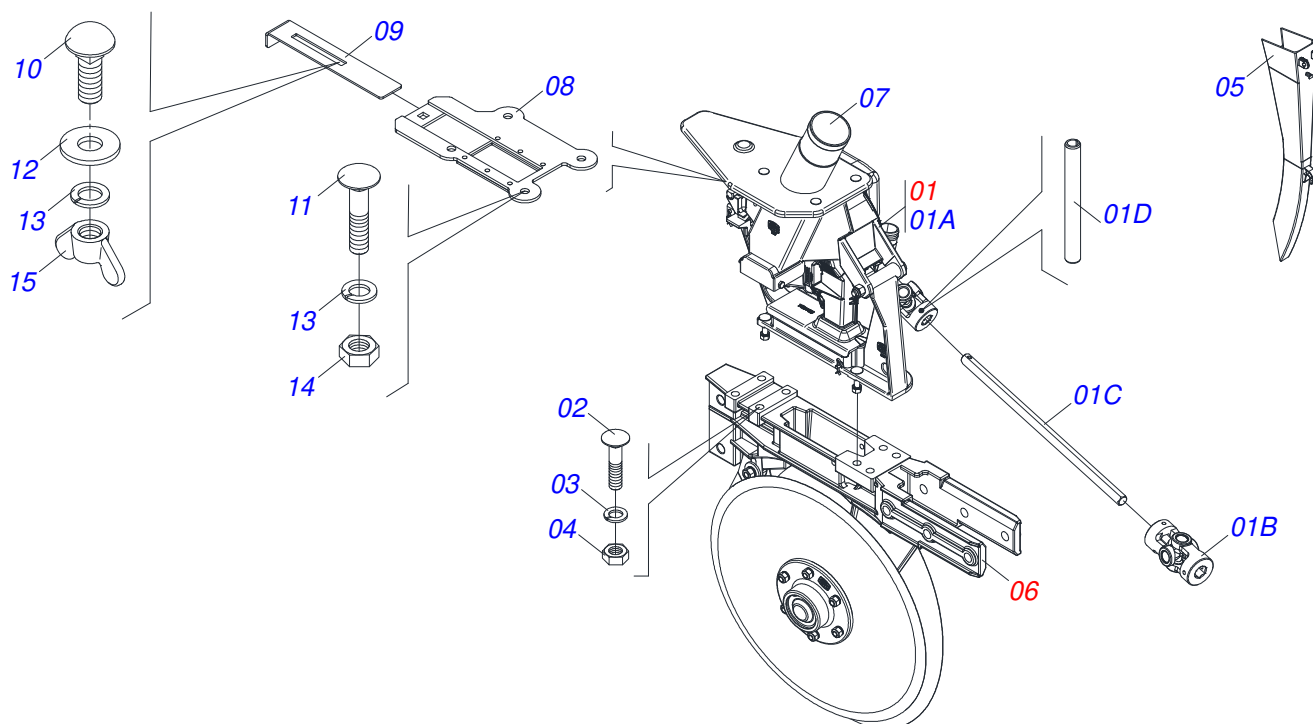

Item	Code	Description	See page	QT
001	0511058196	SEED DISTRIBUTOR		01
001A	0511057502	SET PRECISION PLANTING	141	01
001B	0501056296	UNIVERSAL JOINT		01
001C	0581010584	SIDE SEX SIDE AXLE		01
001D	0503011855	0.2" X 1.8" SPRING PIN		02
002	0503015920	3/8" UNC X 1.3/4" BOLT		04
003	0503010025	3/8 SPRING WASHER		04
004	0503010026	3/8" NUT		04
005	0503062403	TUBE SEED P.P		01
006	0511057153	DDD LEFT SUPREMA PRECISION PLANTING	146	01
007	0521069806	PROTECTION		01
008	0521067215	BASE SUPPORT PRECISION PLANTING		01
009	0581012522	SEED DISTRIBUTOR BOX SWITCH		01
010	0501011643	3/8 X 1"BOLT		01
011	0501010942	3/8" X 1-1/4" BOLT		04
012	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
013	0503010025	3/8 SPRING WASHER		05
014	0503010026	3/8" NUT		04
015	0503010209	3/8" UNC BUTTERFLY NUT		01

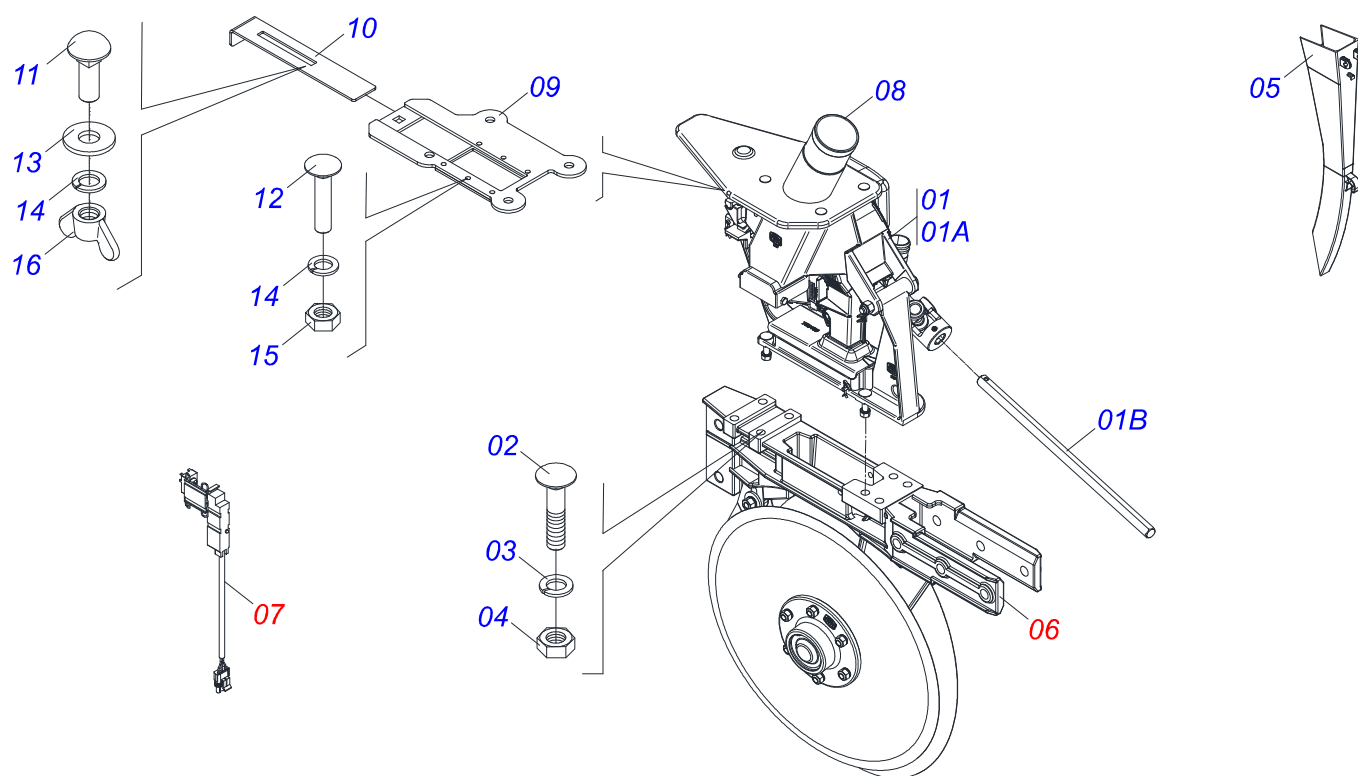

Item	Code	Description	See page	QT
01	0511058196	SEED DISTRIBUTOR		01
01A	0511057502	SET PRECISION PLANTING	141	01
01B	0581010584	SIDE SEX SIDE AXLE		01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057153	DDD LEFT SUPREMA PRECISION PLANTING	146	01
07	0501058972	ASSEMBLY SENSOR ELECTRONIC	149	01
08	0521069806	PROTECTION		01
09	0521067215	BASE SUPPORT PRECISION PLANTING		01
10	0581012522	SEED DISTRIBUTOR BOX SWITCH		01
11	0501011643	3/8 X 1"BOLT		01
12	0501010942	3/8" X 1-1/4" BOLT		09
13	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
14	0503010025	3/8 SPRING WASHER		05
15	0503010026	3/8" NUT		04
16	0503010209	3/8" UNC BUTTERFLY NUT		01

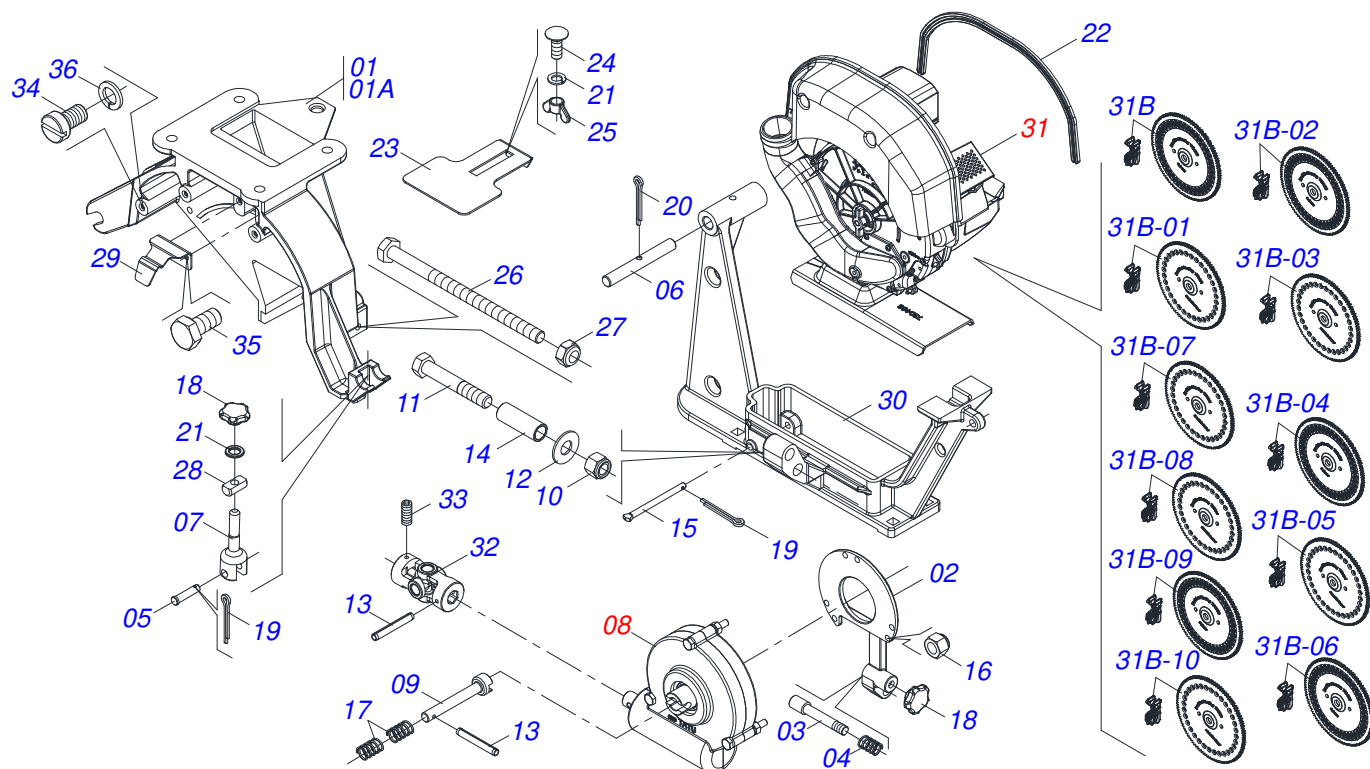


Item	Code	Description	See page	QT
01	0502012807	SUPPORT HOPPER PRECISION PLANTING		01
01A	1902012807	SEED HOPPER SUPPORT		01
02	0502012776	SUPPORT ARTICULATION PNEUMATIC PP		01
03	0571017899	PIN LOCK		01
04	0503030190	0.5" X 1.6" X 0.05" SPRING		01
05	0571014024	FAST BOLT GUIDE AXLE		02
06	0571017897	AXLE ARTICULATION PRECISION PLANTING		01
07	0581011225	FIXER P PLANTING CONTR CPRA		01
08	0511057155	PRECISION PLANTING LEFT TRANSMISSION 142 HOPPER		01
09	0571017894	PIN DRAG PRECISION PLANTING		01
10	0503013357	3/8 SELF-ADJUSTING NUT		01
11	0503015752	3/8" X 2" BOLT		01
12	0501013518	FLAT WASHER		02
13	0503015356	SPRING PIN		01
14	0571017896	SLEEVE ARTICULATION PRECISION PLANTING		01
15	0571017895	PIN FIXER CONDUCTOR P.P		01
16	0503011776	M6 SELF ADJUSTINGNUT		03
17	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		02
18	0503010293	CLAMP KNOB		01
19	0503010140	1/8" X 3/4" COTTERPIN		03
20	0503010131	3/16" X 1-1/2" COTTERPIN		01
21	0503010025	3/8 SPRING WASHER		01
22	0503037390	PACKING FOR PLANTING		01
23	0571019491	SLUICE PNEUMATIC PRECISION PLANTING		01
24	0501011643	3/8 X 1" BOLT		01
25	0503010209	3/8" UNC BUTTERFLY NUT		01
26	0503012721	1/4" X 4" BOLT		01
27	0503012880	1/4" UNC SELF ADJUSTING NUT		01
28	0581011226	FIXER CLOSING P. PLANTING CONTROL CPRA		01
29	0571019489	CLAMP PRECISION PLANTING		01


SET PRECISION PLANTING

0511057502


Item	Code	Description	See page	QT
30	0502012799	UPPER SUPPORT BASE PNEUMATIC PRECISION PLANTING		01
31	0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN 143 DISC		01
31A	0503062405	SEED DISTRIBUTOR		01
31B	0503062407	SET SOYBEAN DISTRIBUTION		01
31B-01	0503062417	KIT CORN DISTRIBUTION		01
31B-02	0503062471	DISTRIBUTION ASSY (SORGHUM / MILLET)		01
31B-03	0503062577	DISTRIBUTION ASSY (LARGE CORN / SUNFLOWER)		01
31B-04	0503062578	DISTRIBUTION ASSY (LARGE CORN)		01
31B-05	0503062579	DISTRIBUTION ASSY (CORN / SUNFLOWER)		01
31B-06	0503062580	DISTRIBUTION ASSY (POPCORN / COTTON)		01
31B-07	0503062581	DISTRIBUTION ASSY (SMALL CORN / POP CORN)		01
31B-08	0503062573	CONVERSATION SET FOR DISTRIBUTION (LARGE BEAN)		01
31B-09	0503062574	CONVERSATION SET FOR DISTRIBUTION (SMALL BEET)		01
31B-10	0503062564	CONVERSATION SET FOR DISTRIBUTION (SOYBEAN / BEAN)		01
32	0561014778	HEX UNIVERSAL JOINT		01
33	0503013958	1/4" X 1" BOLT		02
34	0503818139	BOLT		03
35	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		02
36	0503015110	M06 SPRING WASHER		02

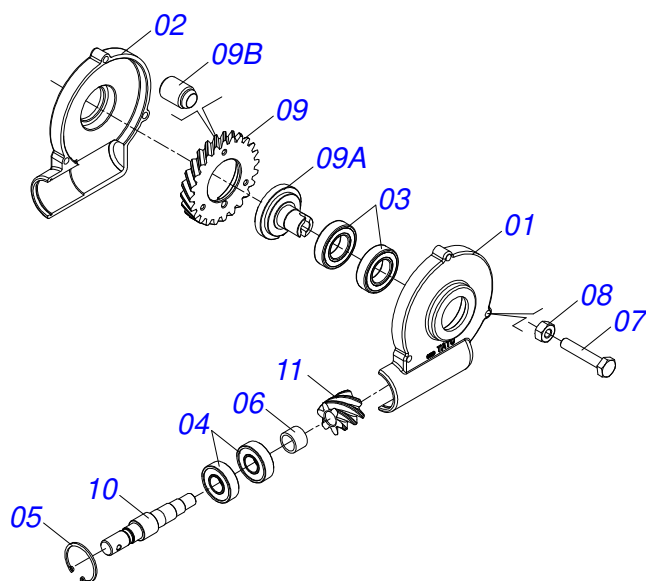


Item	Code	Description	See page	QT
01	0502050052	LEFT SIDE TRANSMISSION HOPPER PP		01
02	0502050053	RIGHT SIDE TRANSMISSION HOPPER PP		01
03	0503011410	ROLLER BEARING		02
04	0503011182	6203 ROLLER BEARING		02
05	0503011184	502040 CLAMPING RING (FOR AXLE)		01
06	0571017655	SLEEVE FIXER HITCH PNEUMATIC		01
07	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		03
08	0503010144	1/4" NUT		03
09	0511057504	JOIN GEAR		01
09A	0571017898	BODY GEAR TRANSMISSION		01
09B	0503011769	M8 X 0.5" BOLT		01
10	0581011222	PINION AXLE 6Z PNEUMATIC		01
11	0503034340	PINION AXLE 6Z PNEUMATIC		01

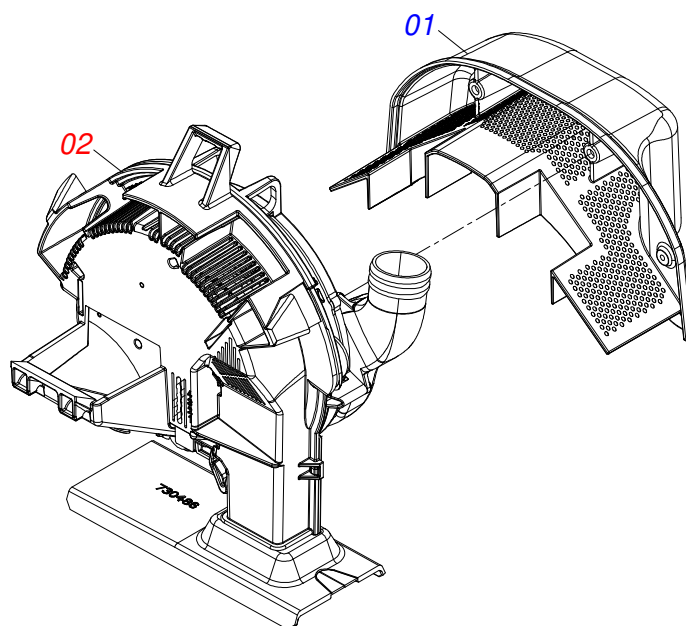


Item	Code	Description	See page	QT
01	0571019613	STRAW PRECISION PLANTING SHIELD		01
02	0521052131	DISTRIBUTOR VSET2 WITH CORN DISK WITHOUT PROTECTION	144	01

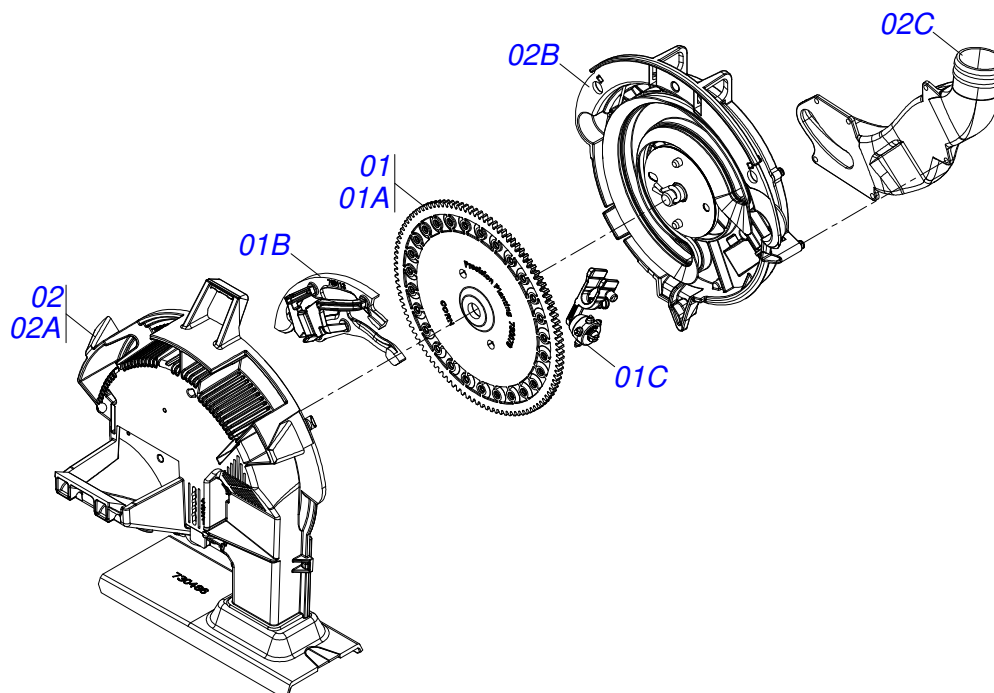


Item	Code	Description	See page	QT
01	0503062417	KIT CORN DISTRIBUTION		01
01A	0503018160	CORN PLASTIC DISC		01
01B	0503062472	SELECTOR SEED CORN		01
01C	0503062474	EJECTOR CORN SEED SET		01
02	0503062405	SEED DISTRIBUTOR		01
02A	0503062567	FIXED BASE SEEDS DISTRIBUTOR		01
02B	0503062974	MOBILE BASE WITHOUT SNORKEL		01
02C	0503062973	SNORKEL ASSY PP768718		01

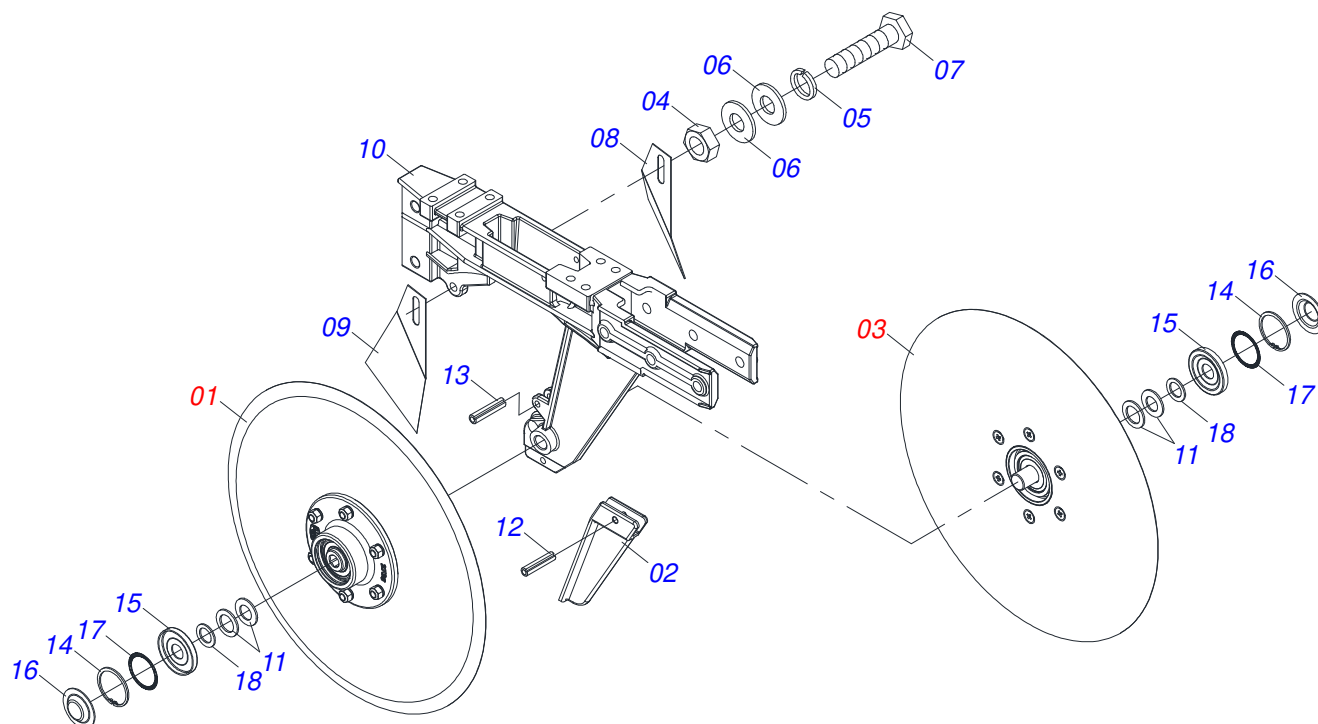


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	147	01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	CUBE LOW RIGHT WITH DISC 15	148	01
04	0503810026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501810984	FLAT WASHER		02
07	0503810751	3/8 UNC X 1.1/4 C S G.5 - SCREW		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012780	SUPPORT DDD RIGHT		01
11	0511815098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O-RING		02
18	0591014250	19 X 26 X 0,50 FLAT WASHER		02

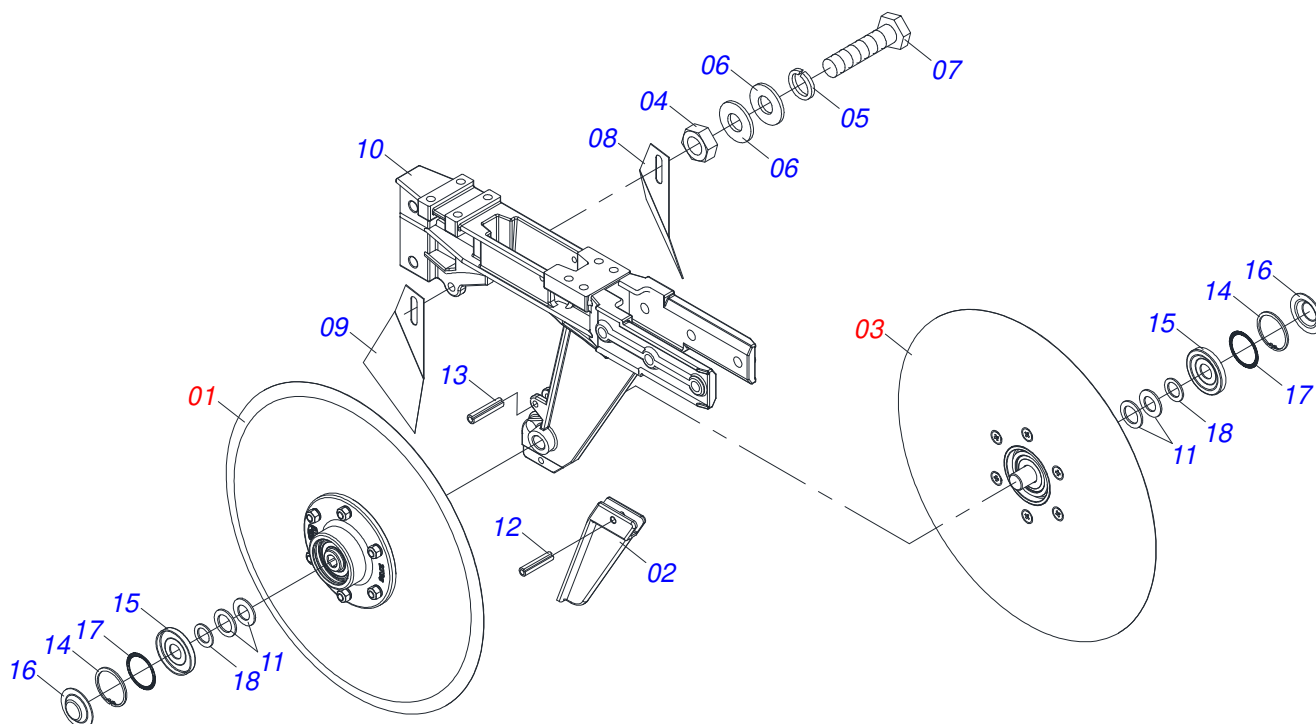


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	147	01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	CUBE LOW RIGHT WITH DISC 15	148	01
04	0503810026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501810984	FLAT WASHER		02
07	0503810751	3/8 UNC X 1.1/4 C S G.5 - SCREW		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012781	SUPPORT DDD LEFT		01
11	0511815098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O-RING		02
18	0591014250	19 X 26 X 0,50 FLAT WASHER		02

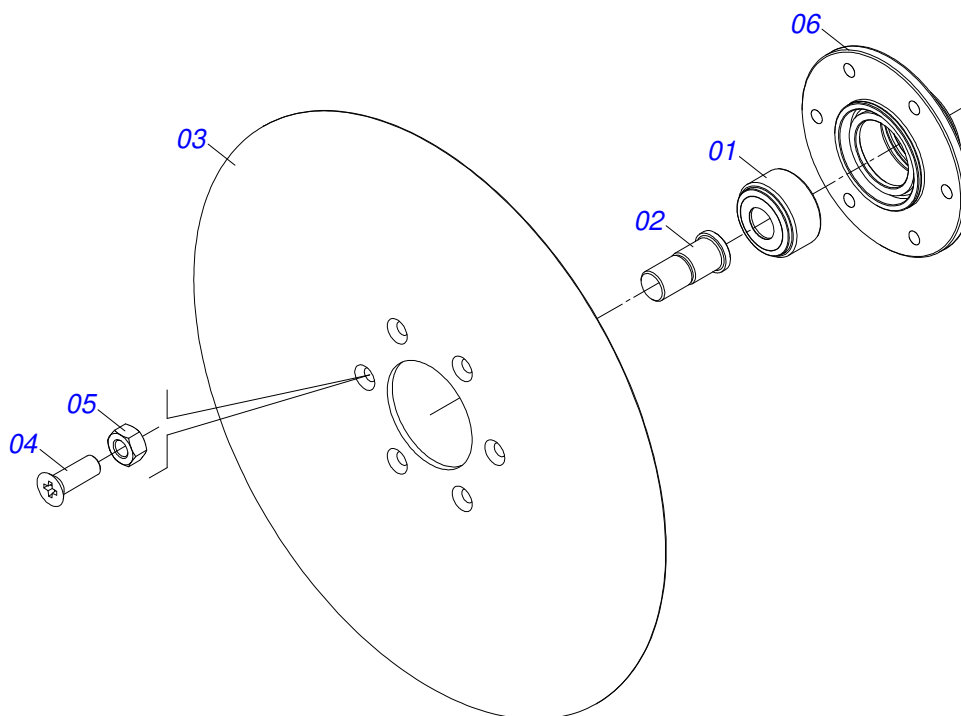

Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

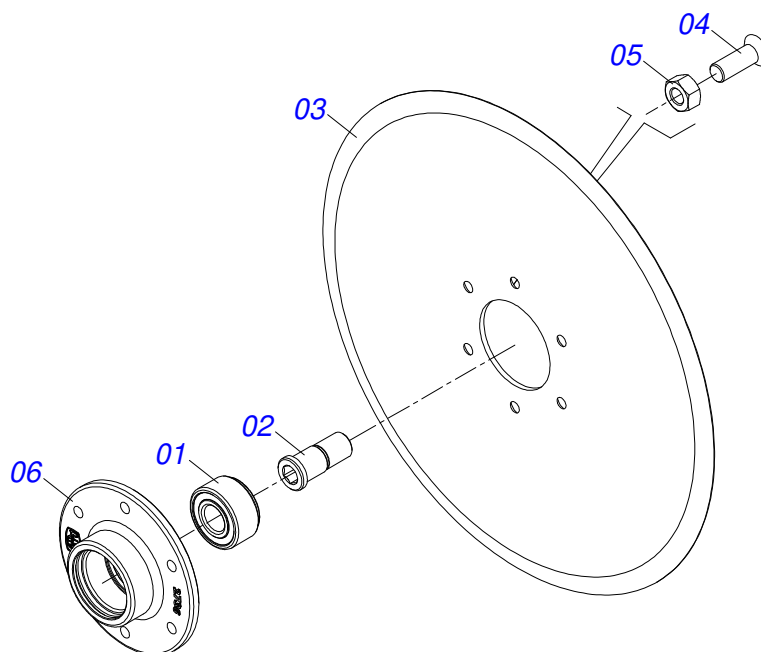


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

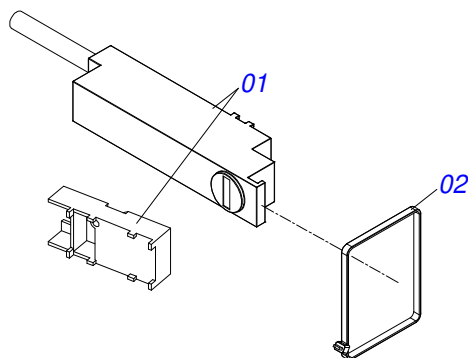


Item	Code	Description	See page	QT
01	0503015218	SENSOR FOTOELE PM 400		01
02	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03

CLAMP


0521052549

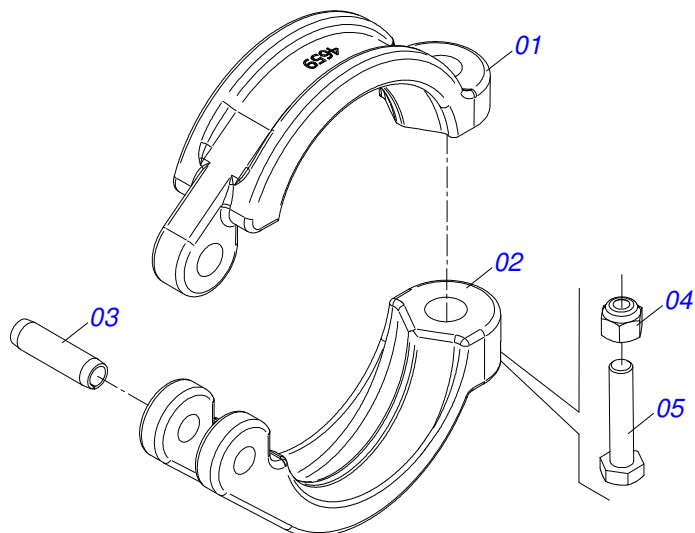

Item	Code	Description	See page	QT
01	0503034660	CLAMP LOWER		01
02	0503034659	CLAMP UPPER		01
03	0503010686	0.2" X 0.7" SPRING PIN		01
04	0503011776	M6 SELF ADJUSTINGNUT		01
05	0503011813	M6 X 1.2" BOLT		01

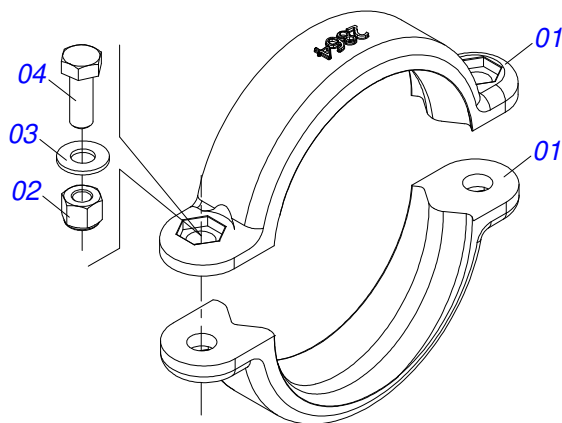

Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02

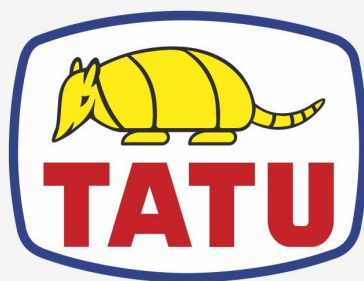

MARCHESAN

Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI

www.marchesan.com.br

