

ROW CROP PLANTERS

**PST3 P - FRAME 3185/3705/3985/4985
(UNTIL 03/2022)**

Code: 0501091758
Series: S-0115
Revision: 00
Date Revision: NOVEMBRO/2020

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111090889	PST3 P 3185/4E900 MM S-0115
0111090890	PST3 P 3185/7E450 MH S-0115
0111090891	PST3 P 3185/7E450 MM S-0115
0111090905	PST3 P 3185/8E400 S-0115
0111090892	PST3 P 3705/5E700 MM S-0115
0111090405	PST3 P 3705/6E600 MM S-0115
0111091213	PST3 P 3705/6E650 MM S-0115
0111090893	PST3 P 3705/8E450 MM S-0115
0111090904	PST3 P 3705/9E400 MH RD S-0115
0111090895	PST3 P 3985/6E700 MM RD S-0115
0111090894	PST3 P 3985/6E700 MM S-0115
0111091212	PST3 P 3985/8E500 MH RD S-0115
0111090903	PST3 P 3985/8E500 MM RD S-0115
0111090897	PST3 P 3985/9E450 H MH RD S-0115
0111090896	PST3 P 3985/9E450 MH RD S-0115
0111090898	PST3 P 3985/9E450 MM RD S-0115
0111090906	PST3 P 3985/9E450 RD S-0115
0111090899	PST3 P 3985/9E450 S-0115
0111090900	PST3 P 4985/10E500 DC20 S-0115
0111090901	PST3 P 4985/10E500 MH S-0115
0111090902	PST3 P 4985/11E450 MH S-0115

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX


0909092064	FULL FRAME	1
0909092102	FRAME SEMI MOUNTED	2
0909092104	FRAME WITH WHEELSET	3
0511055018	WHEELSET WITH SPRING TRACTION	4
0501051818	WHEEL ARM ASSY	5
0501053877	WHEEL ARM ASSY	6
0511053874	WITHOUT WHEELS TIRE	7
0501058240	WHEEL FASTENER WITH TENSIONER	8
0909092105	SET HYDRAULIC SYSTEM	9
0501049849	2.0" X 4.5" X 25.8" HYDRAULIC CYLINDER	10
0511040203	1.5" X 2.5" X 19" X 9" HYDRAULIC CYLINDER	11
0501053834	MALE QUICK COUPLER	12
0909092106	MARKER MECHANIC MOUNTED	13
0909092123	MOUNTED HYDRAULIC MARKER	14
0909090984	ROW MARKER 08/09L	15
0501043881	ROW MARKER PIVOT	16
0909092107	PROTECTION COVER SET	17
0909092112	HANDRAIL SET	18
0909092113	PLATFORM SET	19
0909092114	RIGHT TRANSMISSION ASSY	20
0511040424	RH TRANSMISSION DRIVING ASSY	21
0501052560	MOTOR AXLE SIGNAL	22
0501057939	RIGHT CHAIN TENSIONER ASSY TRANSMISSION	23
0501049365	RIGHT GEAR BOX ASSY	24
0501052236	CHAIN TENSIONER ASSY	25
0501052238	CHAIN TENSIONER ASSY	26
0501048790	AXLE WITH RING	27
0501056444	BEARING WITH ROLLING	28
0501056271	GEARBOX CLOSED BEARING	29
0501054655	CHAIN TENSIONER ASSY	30
0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	31
0909092115	LEFT TRANSMISSION ASSEMBLY	32
0511054973	ASSY LADDER	33
0511054971	JACK ASSEMBLY	34
0909092116	RIGHT / LEFT FERTILIZER BOX SET	35
0909092117	FERTILIZER RIGHT BOX ASSY	36
0501053701	LH FERTILIZER METERING	37
0501052423	LH FERTILIZER METERING	38
0501052424	LH FERTILIZER METERING	39
0501052467	LH FERTILIZER METERING	40
0501052449	LH FERTILIZER METERING	41
0501058403	LH FERTILIZER METERING	42
0501050274	BOX BEARING ASSY	43
0909092118	LEFT FERTILIZER BOX ASSY	44
0501052400	RIGHT FERTILIZER METERING	45
0501052421	RIGHT FERTILIZER METERING	46
0501052461	RIGHT FERTILIZER METERING	47
0501052448	RIGHT FERTILIZER METERING	48
0909092122	SET SUPPORT FRONT/REAR	49
0501054428	ASSY HEADER EXTENSOR	50
0511054601	HITCH ARTICULATED TRACTOR	51
0909092372	FERTILIZER SEED ROW ASSY	52
0511057057	SEED SHORT LINE	53
0511057059	SHORT SEED ROW ARM	54
0511057058	LONG SEED LINE ARM	55



MARCHESAN

INDEX

0511056600	FRONT LINE SEED SHORT DDD RIGHT	56
0511056601	LONG SEED ROW FRONT DDD LEFT	57
0511051693	BASE FIXING SYSTEM	58
0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	59
0511056586	15 X 15 SEED DDD LEFT	60
0511052301	SUPPORT DDD 15 RIGHT	61
0511057017	SEED SYSTEM ASSY	62
0501051094	ASSY SEED DISTRIBUTOR	63
0511052024	FAST CLOSING SET	64
0511053173	CUBE LOW RIGHT WITH DISC 15	65
0511053172	LEFT LOW CUBE WITH DISC 15	66
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	67
0511058650	SEMI-MOUNTED DEPTH CONTROL	68
0501052538	DEPTH BAND WITH ARMS	69
0511054333	COMPACT WHEEL RIGHT WITH BEARING	70
0511054334	COMPACT WHEEL LEFT WITH BEARING	71
0501052908	COMPACTOR WHEEL WITH BEARING	72
0909090195	WHEEL PRESS FERTILIZER ASSY (CBRF)	74
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	76
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	77
0501053080	IRON DEPTH CONTR. WHEEL	78
0501052627	ASSY DEPTH WHEEL BOX	79
0501052297	DEPTH WHEELS REGULATOR ASSY	80
0501053037	IRON DEPTH CONTR. WHEEL ASSY	81
0501052957	IRON V PRESS WHEELS	82
0511053252	FERTILIZER SHORT ROW WITH LEFT DDD/18" DC	83
0511053253	FERTILIZER LONG ROW WITH RIGHT DDD/18" DC	84
0909092371	SHORT FERTILIZER ROW WITH SHANK	85
0909092373	LONG FERTILIZER ROW WITH SHANK	86
0511053250	SHORT ARM FERTILIZER ROW WITH LEFT DOUBLE DISC	87
0511053251	LONG ARM FERTILIZER ROW WITH RIGHT DOUBLE DISC	88
0511044549	18" COULTER BLADE ASSY FOR SHORT ROW	89
0511044573	18" COULTER BLADE ASSY FOR LONG ROW	90
0511044563	20" COULTER BLADE ASSY FOR SHORT ROW	91
0511044585	20" COULTER BLADE ASSY FOR LONG ROW	92
0501054887	20 BLADE DISC WITH FLAT PLAN DISC	93
0501058423	FERTILIZER ROD SPRING ROW	94
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	95
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	96
0501050633	ROW MARKER DISK ASSEMBLY	97
0511058212	ASSY LINE SUPPORT FERTILIZER	98
0501050120	LARGER WALKING BEAM ASSY	99
0909094459	HEX AXLE ASSEMBLY	100

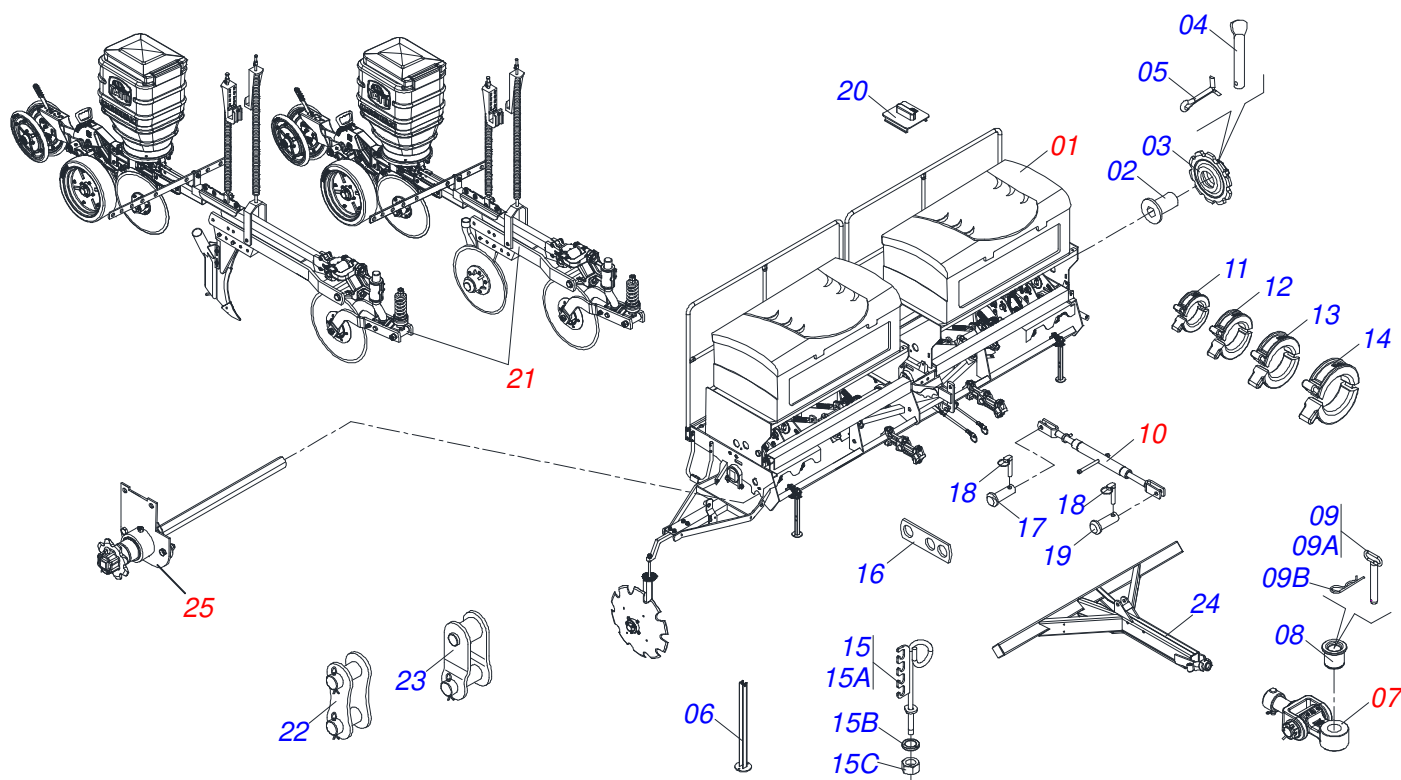

Item	Code	Description	See page	08	09	10	12
01	0511055360	FRAME SEMI MOUNTED		01	00	00	00
01.	0511055073	SEMI MOUNTED FRAME		00	01	00	00
01..	0511055373	SEMI MOUNTED FRAME		00	00	01	00
01...	0511055182	SEMI MOUNTED FRAME		00	00	00	01
02	0502011299	BUSHING GEAR		02	02	02	02
03	0502011317	10Z P 1.2" RH 1.3/8" GEAR		02	02	02	00
03.	0502011324	12Z P 1.2" RH 1.4" GEAR		00	00	00	02
04	0521010530	COUPLING SHAFT		02	02	02	02
05	0503010140	1/8" X 3/4" COTTERPIN		02	02	02	02
06	0501065677	STRUT		02	02	02	02
07	0511054601	HITCH ARTICULATED TRACTOR	51	01	01	01	01
08	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01	01	01	01
09	0511053179	TRACTOR COUPLING SHAFT		01	01	01	01
09A	0521064036	TRACTOR HITCH AXLE		01	01	01	01
09B	0503030012	HAIR PIN		01	01	01	01
10	0501054428	ASSY HEADER EXTENSOR	50	01	01	01	01
11	0501047895	ROD STOP		01	01	01	01
12	0501047885	ROD STOP		01	01	01	01
13	0501047886	ROD STOP		01	01	01	01
14	0501047887	ROD STOP		01	01	01	01
15	0511056736	HOSE SUPPORT		01	01	01	01
15A	0521065611	HOSE SUPPORT		01	01	01	01
15B	0503010023	3/4" SPRING WASHER		01	01	01	01
15C	0503010014	3/4" NUT		01	01	01	01
16	0561019087	DRAWBAR TRANSPORT LOCK		01	01	01	01
17	0521010572	0.9" X 2.9" COUPLING SHAFT		01	01	01	01
18	0503030085	LOCK PIN		02	02	02	02
19	0521010577	0.9" X 4.1" COUPLING SHAFT		01	01	01	01
20	0503032624	SILO FERTILIZER GUTTER		04	06	05	06
21	0909092372	FERTILIZER SEED ROW ASSY	52	01	01	01	01
22	0503010780	N-2050 AMENDMENT		02	02	02	02



PST3 P - FRAME 3185/3705/3985/4985


(UNTIL 03/2022)

Page 1

FULL FRAME

0909092064

Item	Code	Description	See page	08	09	10	12
23	0503010951	REDUCTION		04	04	04	04
24	0511064808	DRAWBAR		01	01	01	01
25	0909094459	HEX AXLE ASSEMBLY	100	01	01	01	01

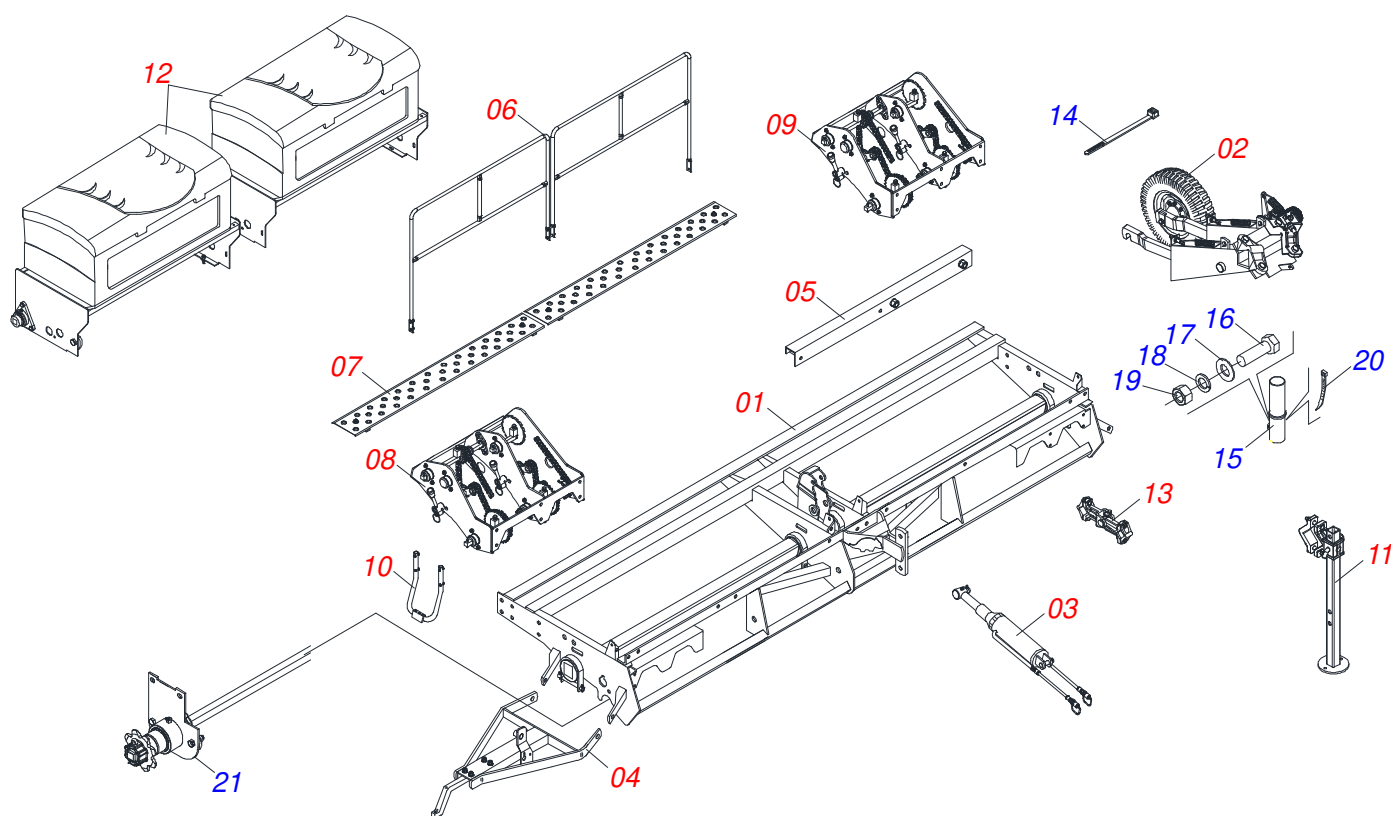


Item	Code	Description	See page	08	09	10	12
01	0909092104	FRAME WITH WHEELSET	3	01	01	01	01
02	0511055018	WHEELSET WITH SPRING TRACTION	4	02	02	02	04
03	0909092105	SET HYDRAULIC SYSTEM	9	01	01	01	01
04	0909092106	MARKER MECCHANIC MOUNTED	13	01	01	01	00
05	0511055048	COVER PROTECTION SET		01	00	00	00
05.	0511055066	COVER PROTECTION SET		00	01	00	00
05..	0511055365	COVER PROTECTION SET		00	00	01	00
05...	0511055174	COVER PROTECTION SET		00	00	00	01
06	0511055049	HANDRAIL SET		01	00	00	00
06.	0511055067	HANDRAIL ASSY		00	01	00	00
06..	0511055366	HANDRAIL ASSY		00	00	01	00
06...	0511055175	HANDRAIL ASSY		00	00	00	01
07	0511055050	PLATFORM SET		01	00	00	00
07.	0511055068	PLATFORM SET		00	01	00	00
07..	0511055367	PLATFORM SET		00	00	01	00
07...	0511055176	PLATFORM SET		00	00	00	01
08	0511055051	SET TRANSMISSION RIGHT		01	00	00	00
08.	0511057111	RIGHT TRANSMISSION ASSY		00	01	00	00
08..	0511057113	RIGHT TRANSMISSION ASSY		00	00	01	00
08...	0511055177	RIGHT TRANSMISSION ASSY		00	00	00	01
09	0511055052	SET TRANSMISSION LEFT		01	00	00	00
09.	0511057112	LEFT TRANSMISSION ASSEMBLY		00	01	00	00
09..	0511057114	LEFT TRANSMISSION ASSEMBLY		00	00	01	00
09...	0511055178	LEFT TRANSMISSION ASSEMBLY		00	00	00	01
10	0511054973	ASSY LADDER	33	01	01	01	01
11	0511054971	JACK ASSEMBLY	34	02	02	02	02
12	0511055053	SET		01	00	00	00
12.	0511055071	FERTILIZER BOX ASSEMBLY		00	01	00	00
12..	0511055370	FERTILIZER BOX ASSEMBLY		00	00	01	00
12...	0511055179	FERTILIZER BOX ASSEMBLY		00	00	00	01
13	0511055054	SET SUPPORT FRONT BACK HEADER		01	01	01	00


**FRAME SEMI MOUNTED**

0909092102

Item	Code	Description	See page	08	09	10	12
13.	0511055180	SET SUPPORT FRONT/REAR		00	00	00	01
14	0503013100	NYLON CLAMP		01	01	01	01
15	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01	01	01	01
16	0503010363	5/16" X 1" BOLT		01	01	01	01
17	0501010694	FLAT WASHER		01	01	01	01
18	0503010179	LOCK WASHER		01	01	01	01
19	0503010337	5/16" NUT		01	01	01	01
20	0503010267	NYLON CLAMP		01	01	01	01
21	0909094459	HEX AXLE ASSEMBLY	100	01	01	01	01

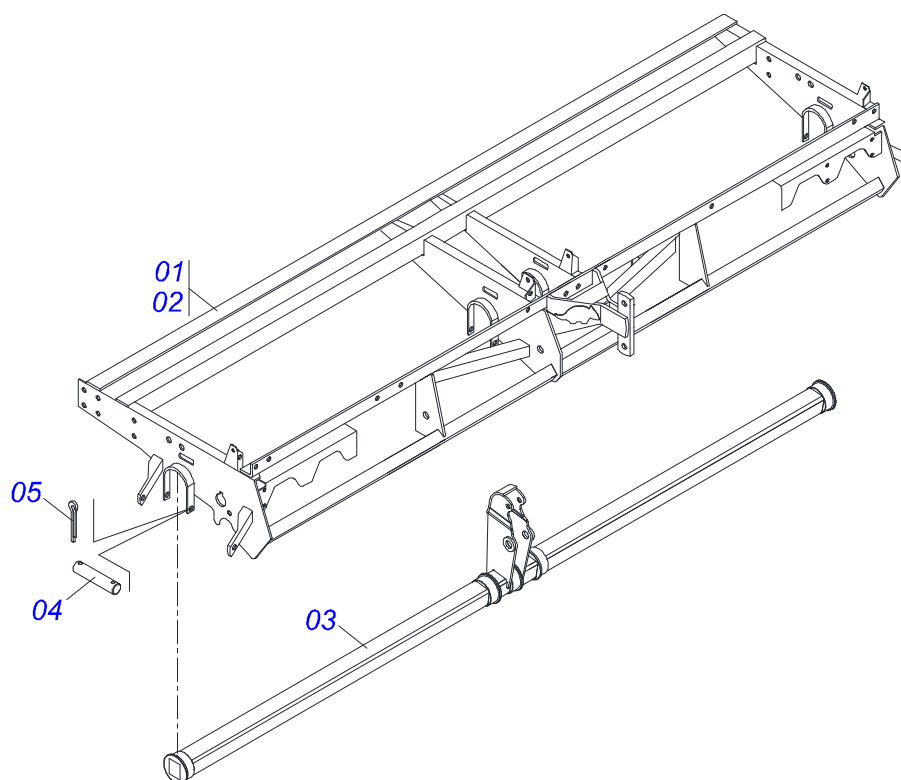


Item	Code	Description	See page	08	09	10	12
01	0501053198	FRAME WITH WHEELSET		01	00	00	00
01.	0501053199	FRAME WITH WHEELSET		00	01	00	00
01..	0501054739	WHEEL AXLE FRAME		00	00	01	00
01...	0501054740	WHEEL AXLE FRAME		00	00	00	01
02	0511065595	FRAME		01	00	00	00
02.	0511065596	FRAME		00	01	00	00
02..	0511064815	FRAME		00	00	01	00
02...	0511064816	FRAME		00	00	00	01
03	0511062157	CARRYING-WHEELS PIVOT SHAFT		01	00	00	00
03.	0511062158	CARRYING-WHEELS PIVOT SHAFT		00	01	00	00
03..	0511062159	CARRYING-WHEELS PIVOT SHAFT		00	00	01	00
03...	0511062160	CARRYING-WHEELS PIVOT SHAFT		00	00	00	01
04	0521010569	COUPLING SHAFT		04	04	04	06
05	0503010571	1/4" X 1.1/2 COTTERPIN		08	08	08	12

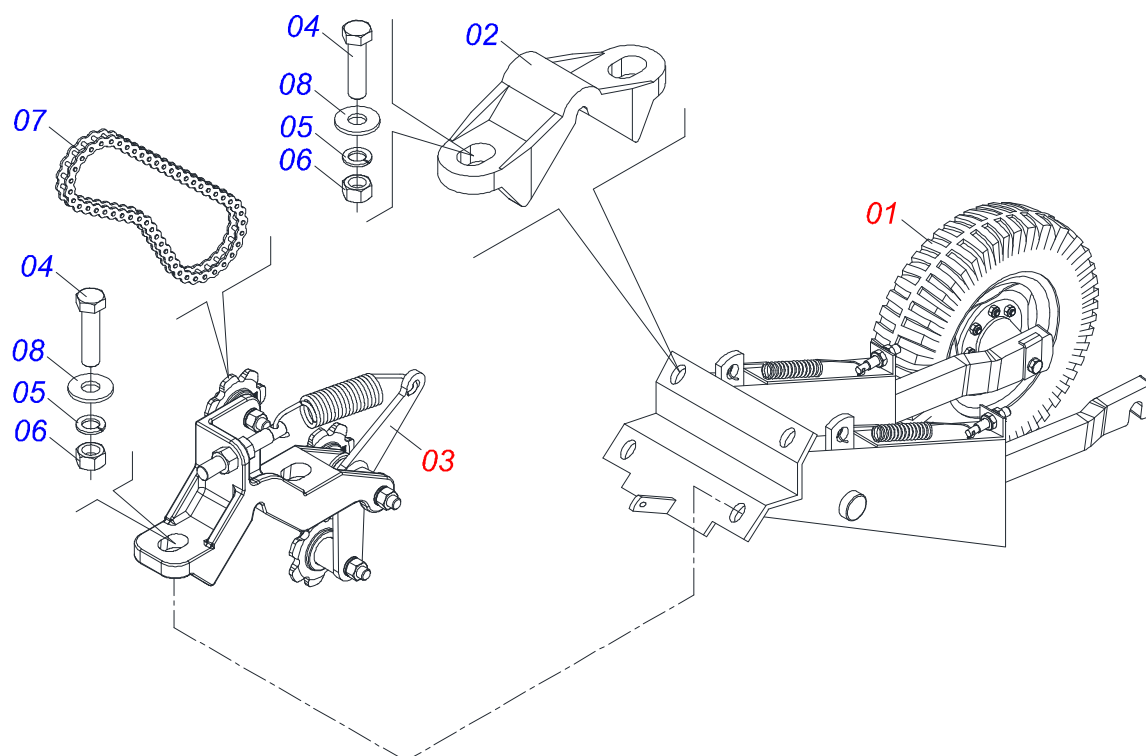

Item	Code	Description	See page	QT
01	0501051818	WHEEL ARM ASSY	5	01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
03	0501058240	WHEEL FASTENER WITH TENSIONER	8	01
04	0503010797	3/4" X 4" BOLT		04
05	0503010023	3/4" SPRING WASHER		04
06	0503010014	3/4" NUT		04
07	0503015344	2050 CHAIN X 74 LINK + REDUCTION		01
08	0501010322	FLAT WASHER		04

WHEEL ARM ASSY


0501051818

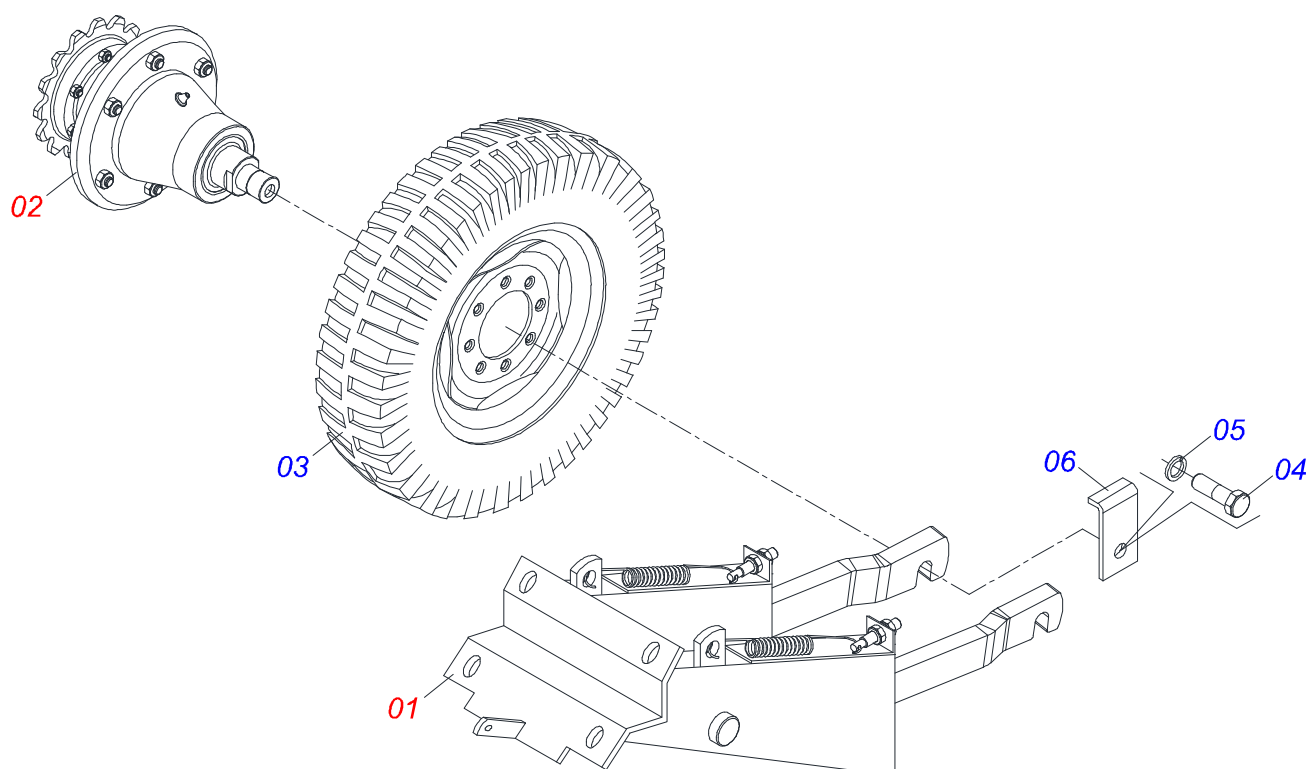


Item	Code	Description	See page	QT
001	0501053877	WHEEL ARM ASSY	6	01
002	0511053874	WITHOUT WHEELS TIRE	7	01
003	0503060112	WHEEL AND TIRE ASSY - 16-10 L		01
004	0503011167	M16 X 2 X 30 BOLT		02
005	0503010027	5/8" SPRING WASHER		02
006	0521012190	AXLE LOCK		02

WHEEL ARM ASSY


0501053877

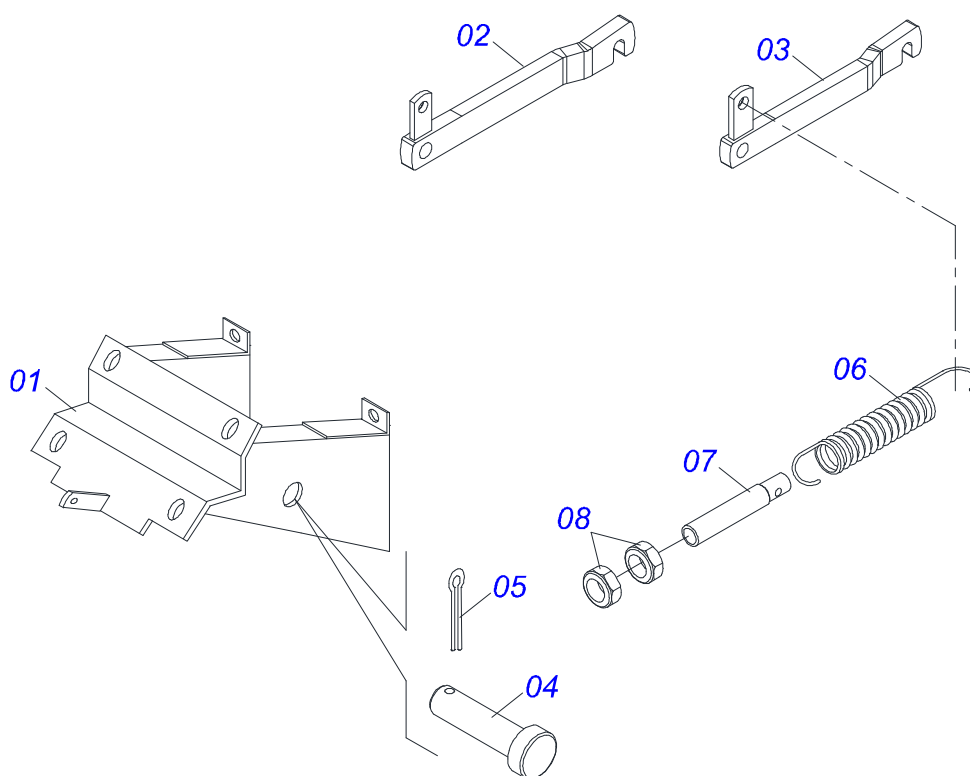


Item	Code	Description	See page	QT
001	0501067549	WHEEL SUPPORT		01
002	0501067177	WHEEL RIGHT ARM		01
003	0501067178	WHEEL LEFT ARM		01
004	0521010648	1.2" X 2.2" COUPLING SHAFT		02
005	0503010523	1/4" X 2" COTTERPIN		02
006	0503030425	1" X 6" X 0.2"TRACTION SPRING		02
007	0501013491	5/8" TENSIONER SPRING		02
008	0503010013	5/8" NUT		04

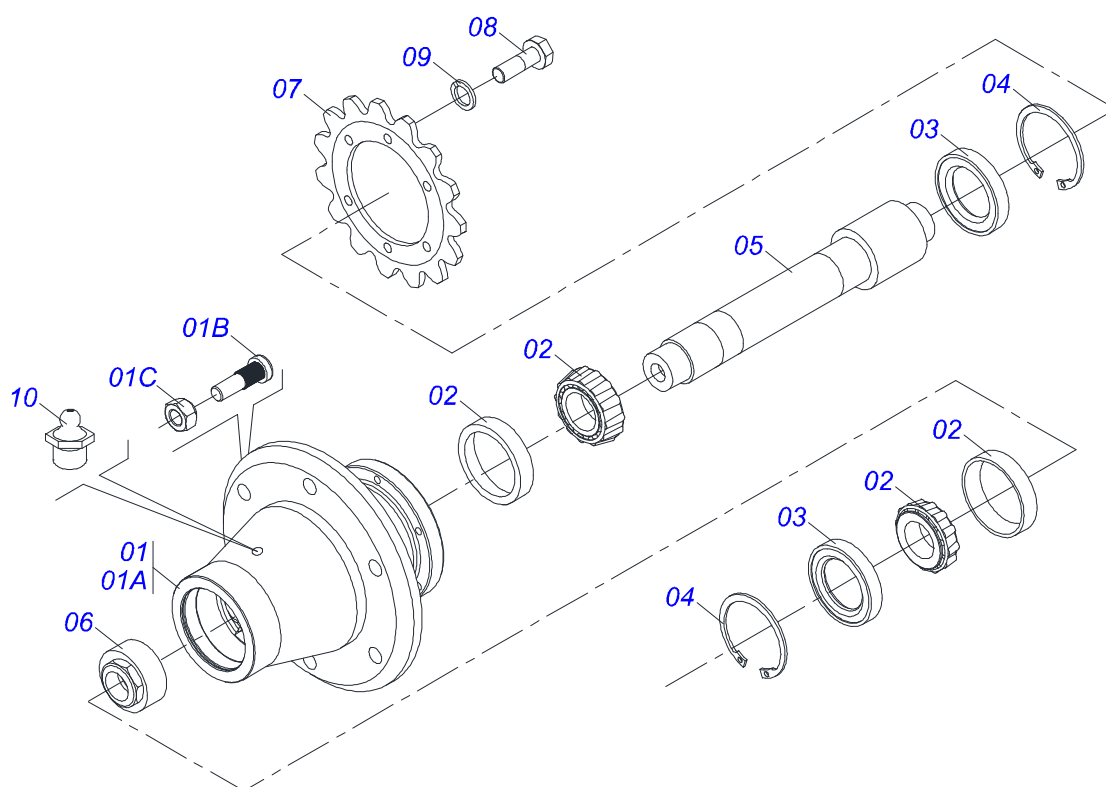


Item	Code	Description	See page	QT
01	0501110737	CARRYING WHEEL HUB		01
01A	0502011284	CARRYING WHEEL HUB		01
01B	0501010127	9/16" X 1-7/8" LUG BOLT		06
01C	0503010035	9/16" CONIC NUT		06
02	0503010037	30207 ROLLER BEARING		02
03	0503010590	00674-B SEAL		02
04	0503010370	502072 CLAMPING RING (FOR AXLE)		02
05	0511015300	WHEELS AXLE		01
06	0502040663	ADJUSTMENT NUT		01
07	0502011339	15Z GEAR P 1.25"		01
08	0503010240	BOLT		06
09	0503011444	SPRING WASHER		06
10	0503010002	1800 GREASE FITTING		01

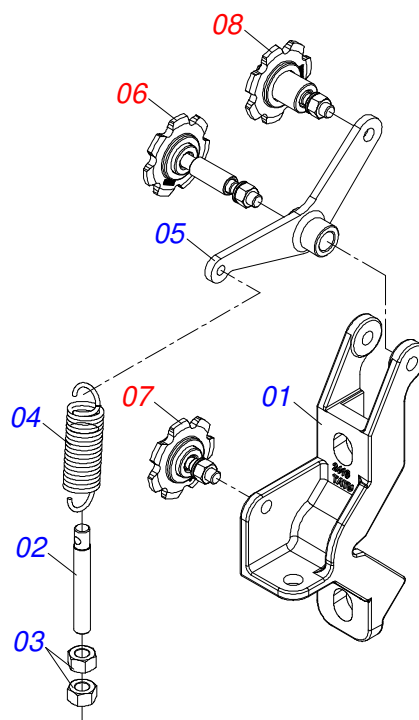


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8" NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER		01
07	0501058244	WHEEL FIXED CHAIN TENSIONER		01
08	0501058242	WHEEL MOBILE CHAIN TENSIONER		01

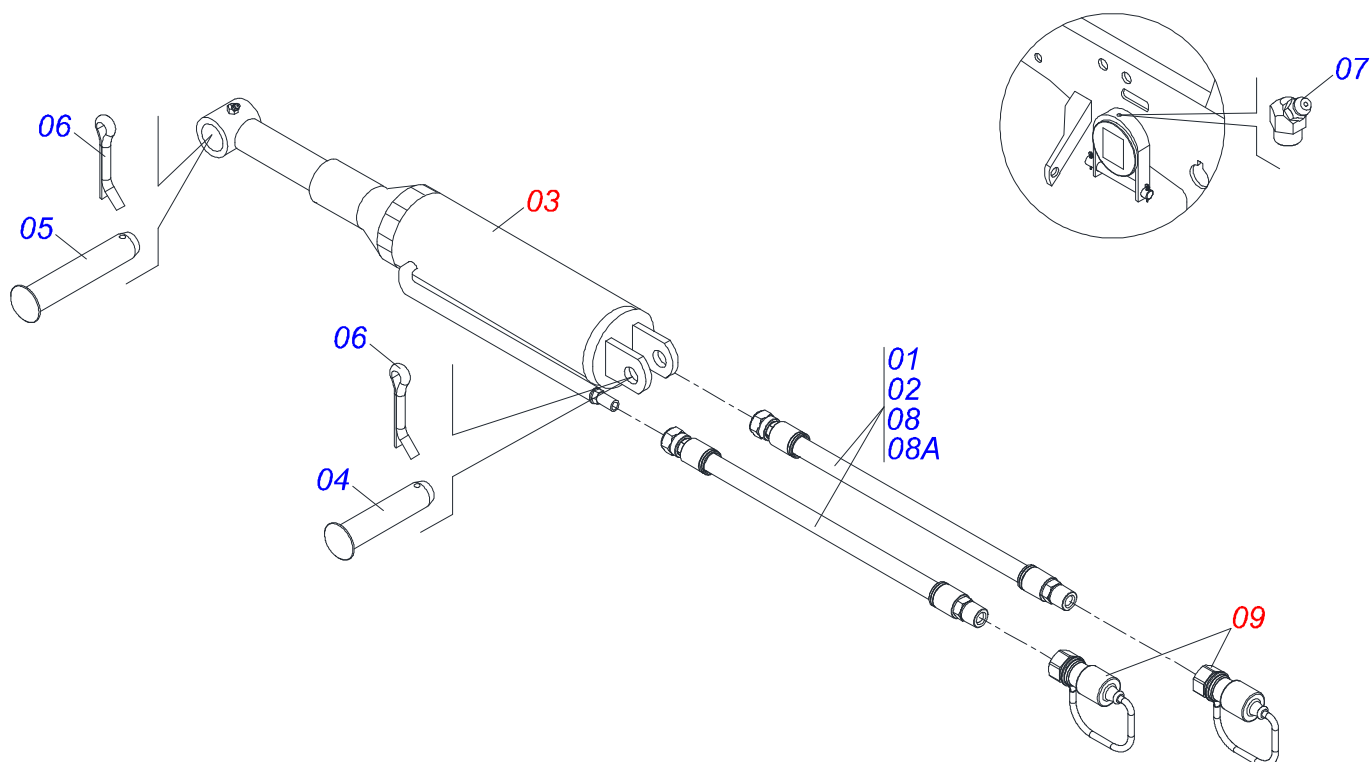


Item	Code	Description	See page	08	09	10	12
01	0511055047	SET HYDRAULIC SYSTEM		01	01	01	00
02	0511055173	SET HYDRAULIC SYSTEM		00	00	00	01
03	0501049849	2.0" X 4.5" X 25.8" HYDRAULIC CYLINDER	10	01	01	01	01
04	0521012538	1.2" X 3.5" COUPLING SHAFT		01	01	01	01
05	0521012536	COUPLING SHAFT		01	01	01	01
06	0503010523	1/4" X 2" COTTERPIN		02	02	02	02
07	0503010003	1845 GREASE FITTING		04	04	04	04
08	0511057077	HYDRAULIC SYSTEM HOSE SET		01	01	01	01
08A	0501080510	HOSE 3/8 X 3500 TR-TM		02	02	02	02
09	0501053834	MALE QUICK COUPLER	12	02	02	02	02

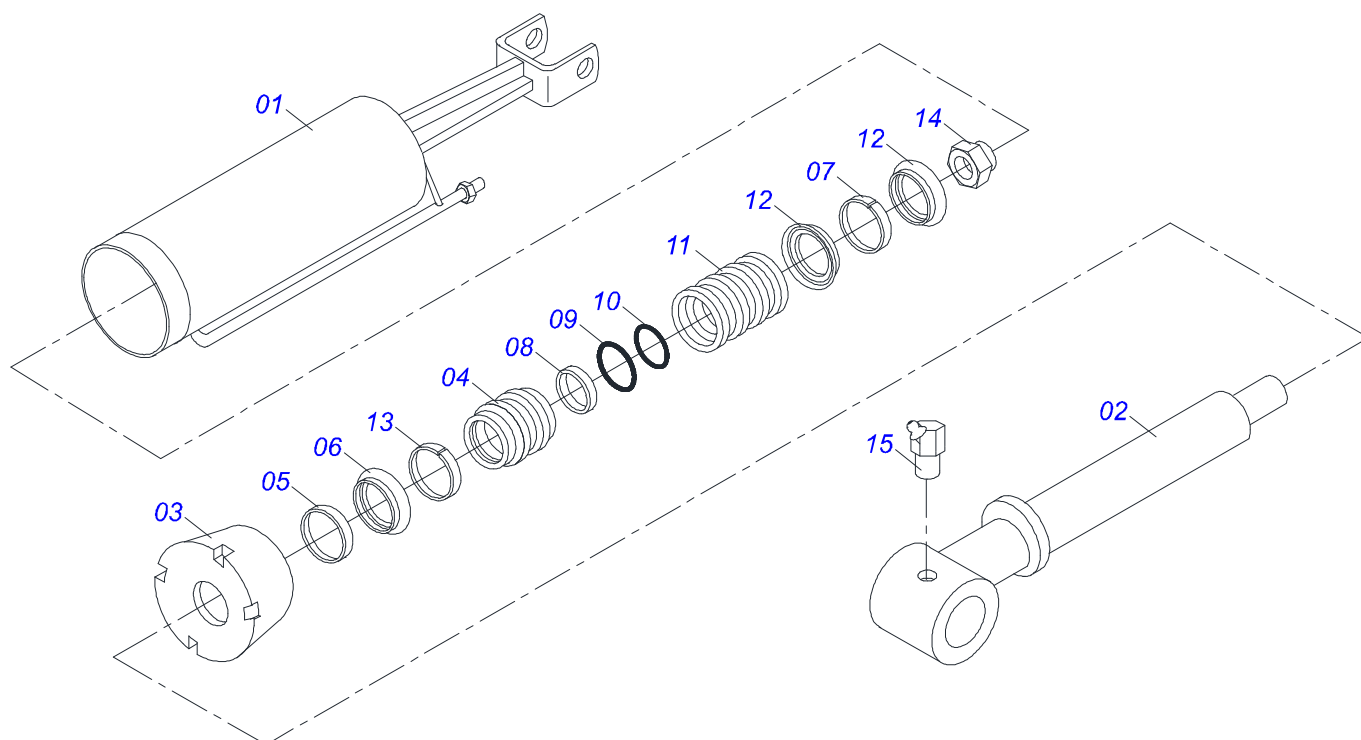


Item	Code	Description	See page	QT
01	0511065689	114,3 X 506 CYLINDER CASE		01
02	0511065690	50,8 X 413 TURNBUCLE		01
03	0502011222	0.56" END CAP		01
04	0502011220	2" X 4.5" RING SUPPORT		01
05	0503010039	D-2000 SCRAPER RING		01
06	0503010991	1870-2000-375-B GASKET		01
07	0503010952	W2-2250-500 RING		01
08	0503011893	BACK-UP RING, 8-346		01
09	0503011892	O' RING, 2-346 N 3006-9B		01
10	0503010345	2-218 N 3006-9B O'RING		01
11	0502011221	2.0" X 4.5" PISTON		01
12	0503011890	3750-3750 GASKET		02
13	0503011891	W2-4500-500 RING G.E		01
14	0503010817	1.1/4" SELF LOCKING NUT		01
15	0503010003	1845 GREASE FITTING		01

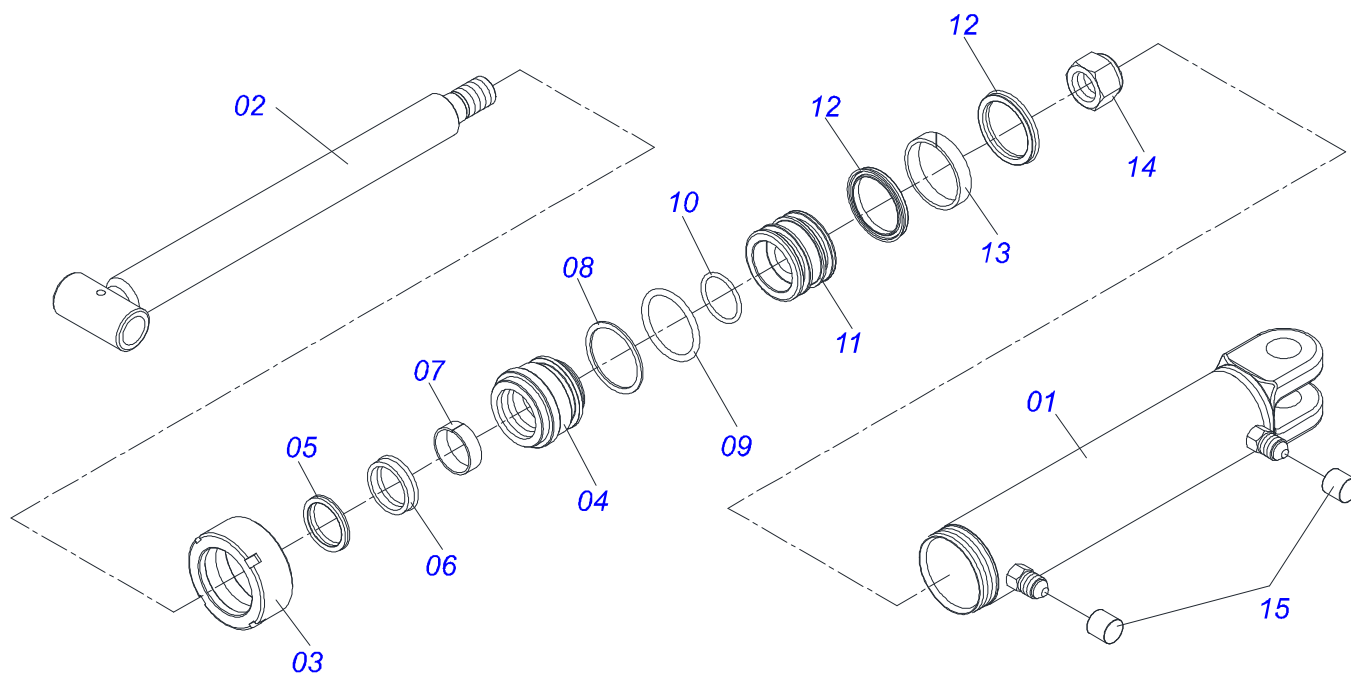

Item	Code	Description	See page	QT
01	0511062810	2.5" X 15" CYLINDER CASE		01
02	0501065662	HYDRAULIC CYLINDER TURNBUCKLE		01
03	0502010471	MOBILE COVER		01
04	0502010780	RING SUPPORT		01
05	0503010163	D-1500 SCRAPER RING		01
06	0503010989	1870-1500-375-B GASKET		01
07	0503010970	W1-1650-500 PK O'RING G.E		01
08	0503011058	8-330 BACK-UP RING		01
09	0503010161	2-330 N 3006 9B O'RING		01
10	0503010285	2-222 N 3006-9B O'RING		01
11	0502010783	1.5" X 2.5" PISTON		01
12	0503010160	2500 2000 GASKET		02
13	0503010973	W2-2500-500 PK O'RING G.E		01
14	0503010063	1" SELF-ALIGNING NUT		01
15	0503030384	CON PLUG N-001		02
16	0501032666	HYDRAULIC CYLINDER REPAIR KIT		01

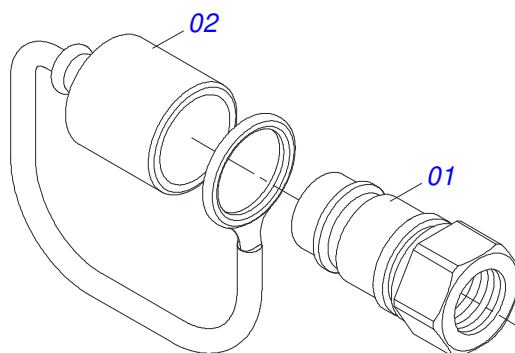

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

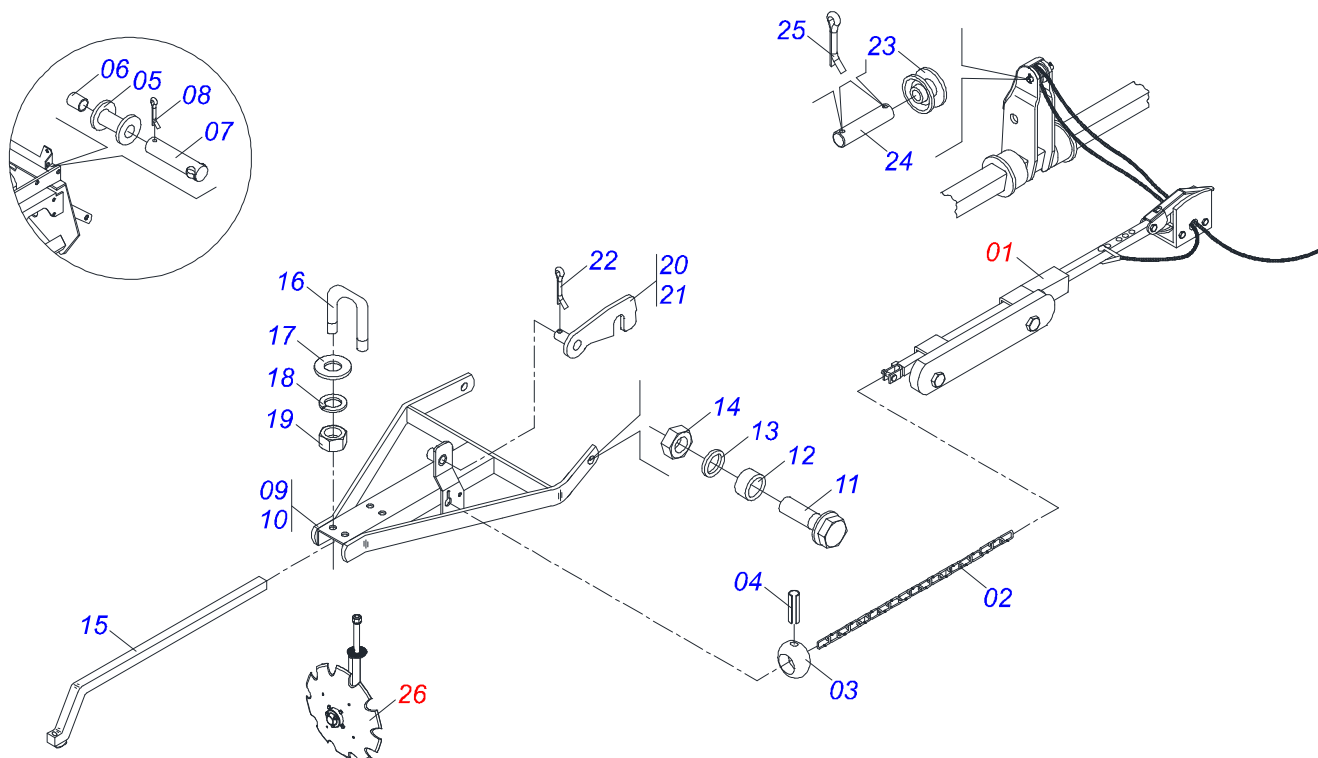

Item	Code	Description	See page	08	09	10
00	0511055361	MARKER MECHANIC		01	00	00
00.	0511055065	MARKER MECHANIC		00	01	00
00..	0511055364	MARKER MECHANIC		00	00	01
01	0501043881	ROW MARKER PIVOT	16	01	01	01
02	0503011126	6,4 X 1000 CHAIN		02	00	00
02.	0503011127	6,4 X 1260 CHAIN		00	02	00
02..	0503011128	6,4 X 1400 CHAIN		00	00	02
03	0502011291	CHAIN SLEEVE		02	02	02
04	0503010683	0,2" X 1,2" SPRING PIN		02	02	02
05	0502010421	SIDE PULLEY		02	02	02
06	0521010445	0.53" X 0.75" X 0.45" SLEEVE		02	02	02
07	0521010641	COUPLING SHAFT		02	02	02
08	0503010140	1/8" X 3/4" COTTERPIN		02	02	02
09	0511060553	ROW MARKER SUPPORTE RIGHT		01	01	01
10	0511060554	ROW MARKER SUPPORTE LEFT		01	01	01
11	0503010769	5/8" X 2-1/4" BOLT		04	04	04
12	0521010479	SLEEVE ARTICULATION		04	04	04
13	0503010027	5/8" SPRING WASHER		04	04	04
14	0503010013	5/8" NUT		04	04	04
15	0511062755	740 TURNBUCKLE		02	02	00
15.	0501069643	890 TURNBUCKLE		00	00	02
16	0521014411	1/2" X 2.76" X 1.54" FASTENER		04	04	04
17	0511017302	FLAT WASHER		08	08	08
18	0503010019	1/2" SPRING WASHER		08	08	08
19	0503010060	1/2" NUT		08	08	08
20	0501069297	ROW MARKER LOCK RIGHT		01	01	01
21	0501069624	ROW MARKER LOCK LEFT		01	01	01
22	0503010257	1/8" X 1" COTTERPIN		02	02	02
23	0502011231	CENTRAL PULLEY		01	01	01
24	0511011309	AXLE PULLEY		01	01	01
25	0503010257	1/8" X 1" COTTERPIN		01	01	01



PST3 P - FRAME 3185/3705/3985/4985

(UNTIL 03/2022)

Page 13


MARKER MECCHANIC MOUNTED

0909092106

Item	Code	Description	See page	08	09	10
26	0501050633	ROW MARKER DISK ASSEMBLY	97	02	02	02

MOUNTED HYDRAULIC MARKER

0909092123

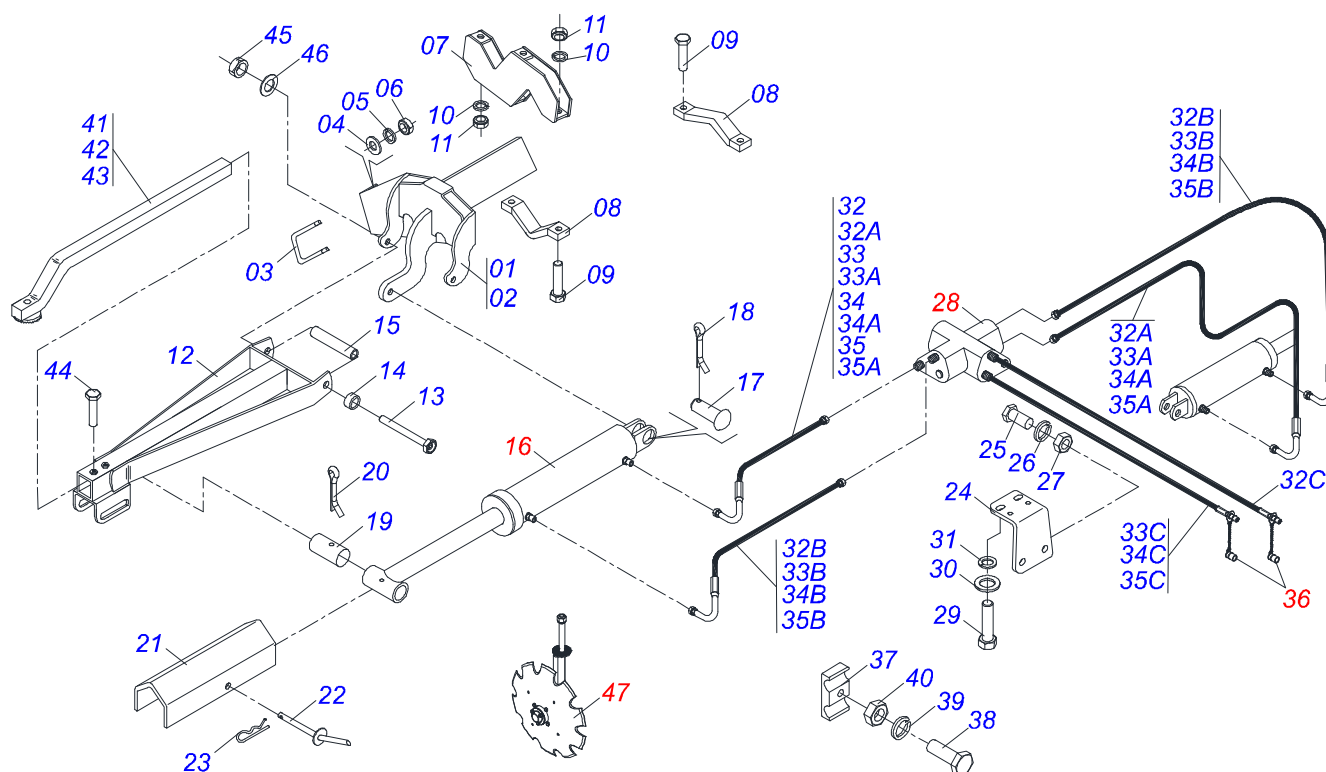


Item	Code	Description	See page	08	09	10	12
00	051105598	SEMI MOUNTED HYDRAULIC MARKER	01	00	00	00	
00.	0511057019	SEMI MOUNTED HYDRAULIC MARKER	00	01	00	00	
00..	0511056124	SEMI MOUNTED HYDRAULIC MARKER	00	00	01	00	
00...	0511055343	SEMI MOUNTED HYDRAULIC MARKER	00	00	00	01	
01	0511062982	RH LARGER SUPPORT	01	01	01	01	
02	0511062983	LH LARGER SUPPORT	01	01	01	01	
03	0521014021	1/2" X 4.5" X 5.4" FASTENER	02	02	02	02	
04	0511017302	FLAT WASHER	04	04	04	04	
05	0503010019	1/2" SPRING WASHER	04	04	04	04	
06	0503010060	1/2" NUT	04	04	04	04	
07	0511062984	ROW MARKER SMALLER SUPPORT	02	02	02	02	
08	0502010175	HITCH CLAMP	04	04	04	04	
09	0501010216	3/4" X 4-1/2" BOLT	08	08	08	08	
10	0503010023	3/4" SPRING WASHER	08	08	08	08	
11	0503010014	3/4" NUT	08	08	08	08	
12	0501069470	ROW MARKER ARM	02	02	02	02	
13	0521061655	BOLT 5/8 UNC X 320 MM	02	02	02	02	
14	0521010479	SLEEVE ARTICULATION	04	04	04	04	
15	0521017687	SPACING SLEEVE	02	02	02	02	
16	0511058449	HYDRAULIC CYLINDER	02	02	02	02	
17	0521010575	C0.9" X 3.3" COUPLING SHAFT	02	02	02	02	
18	0503010523	1/4" X 2" COTTERPIN	02	02	02	02	
19	0511015779	1" X 4.2" AXLE	02	02	02	02	
20	0503010523	1/4" X 2" COTTERPIN	02	02	02	02	
21	0511017592	11.8" X 1.6" TRANSPORT LOCK	02	02	02	02	
22	0501068994	0.3" X 3.1" LOCK PIN	02	02	02	02	
23	0503030168	CUPILLA	02	02	02	02	
24	0511011311	VALVE SUPPORT	01	01	01	01	
25	0503010232	5/8" X 1.3/4" BOLT	02	02	02	02	
26	0503010027	5/8" SPRING WASHER	02	02	02	02	
27	0503010013	5/8" NUT	02	02	02	02	

MOUNTED HYDRAULIC MARKER

0909092123


Item	Code	Description	See page	08	09	10	12
28	0501054649	HBM SEQUENTIAL VALVE		01	01	01	01
29	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02	02	02	02
30	0501010984	FLAT WASHER		02	02	02	02
31	0503010025	3/8" SPRING WASHER		02	02	02	02
32	0511057078	HYDRAULIC HOSE MARKER ASSY		01	01	01	01
32A	0501080451	3/8" X 94.5" TR-TC HOSE ASSY		02	02	02	02
32B	0501080382	3/8" X 102" TR-TC HOSE ASSY		02	02	02	02
32C	0501080553	3/8" X 3200 TC-TM HOSE		02	02	02	02
33	0511057079	HYDRAULIC MARKER HANDLE SET		01	01	01	01
33A	0501080401	3/8" X 106" TR-TC HOSE		02	02	02	02
33B	0501080526	3/8 X 2900 TR-TC HOSE		02	02	02	02
33C	0501080365	HOSE 3/8 X 3500 TC-TM		02	02	02	02
34	0511057080	HYDRAULIC MARKER HANDLE SET		01	01	01	01
34A	0501080414	3/8" X 110.2" TR-TC HOSE ASSY		02	02	02	02
34B	0501080397	3/8" X 120" TR-TC HOSE		02	02	02	02
34C	0501080365	HOSE 3/8 X 3500 TC-TM		02	02	02	02
35	0511057081	HYDRAULIC MARKER HANDLE SET		01	01	01	01
35A	0501080392	3/8 X 3300 TR-TC HOSE		02	02	02	02
35B	0501080720	HOSE 3/8 X 3500 TR-TC		02	02	02	02
35C	0501080365	HOSE 3/8 X 3500 TC-TM		02	02	02	02
36	0501053834	MALE QUICK COUPLER	12	02	02	02	02
37	0502012702	BODY SUPPORT CLAMP		04	04	04	04
38	0503011103	7/16" X 2-1/2" BOLT		04	04	04	04
39	0503010180	7/16" SPRING WASHER		04	04	04	04
40	0503010244	7/16" NUT		04	04	04	04
41	0511062755	740 TURNBUCKLE		02	02	00	00
42	0501069643	890 TURNBUCKLE		00	00	02	00
43	0501066949	1235 TURNBUCKLE		00	00	00	02
44	0503010962	5/8" X 1-1/4" BOLT		04	04	04	04
45	0503012412	5/8 UNC SELF LOCKING NUT		02	02	02	02
46	0501012140	FLAT WASHER		04	04	04	04
47	0501050633	ROW MARKER DISK ASSEMBLY	97	02	02	02	02

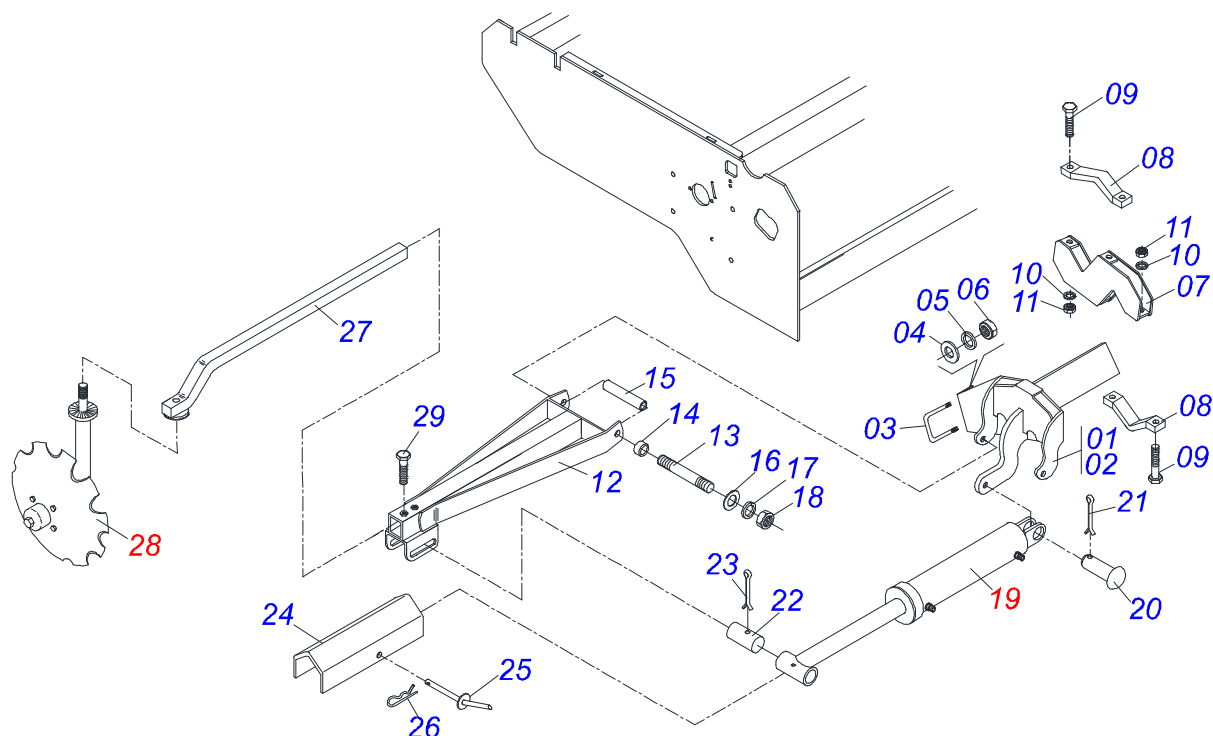


Item	Code	Description	See page	QT
01	0511062982	RH LARGER SUPPORT		01
02	0511062983	LH LARGER SUPPORT		01
03	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
04	0511017302	FLAT WASHER		04
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2" NUT		04
07	0511062984	ROW MARKER SMALLER SUPPORT		02
08	0502010175	HITCH CLAMP		04
09	0501010216	3/4" X 4-1/2" BOLT		08
10	0503010023	3/4" SPRING WASHER		08
11	0503010014	3/4" NUT		08
12	0501069470	ROW MARKER ARM		02
13	0521017686	5/8 UNF X 5/8 UNF X 335 PRISONER		02
14	0521010479	SLEEVE ARTICULATION		04
15	0521017687	SPACING SLEEVE		02
16	0501012140	FLAT WASHER		04
17	0503010027	5/8" SPRING WASHER		04
18	0503012795	5/8" HEX SELF ADJUSTING NUT		04
19	0511040203	1.5" X 2.5" X 19" X 9" HYDRAULIC CYLINDER	11	02
20	0521010574	C0.9" X 3.3" COUPLING SHAFT		02
21	0503010571	1/4" X 1.1/2 COTTERPIN		02
22	0511015779	1" X 4.2" AXLE		02
23	0503010523	1/4" X 2" COTTERPIN		02
24	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
25	0501068994	0.3" X 3.1" LOCK PIN		02
26	0503030168	CUPILLA		02
27	0511062755	740 TURNBUCKLE		02
28	0501050633	ROW MARKER DISK ASSEMBLY	97	02
29	0503010962	5/8" X 1-1/4" BOLT		04

ROW MARKER PIVOT

0501043881

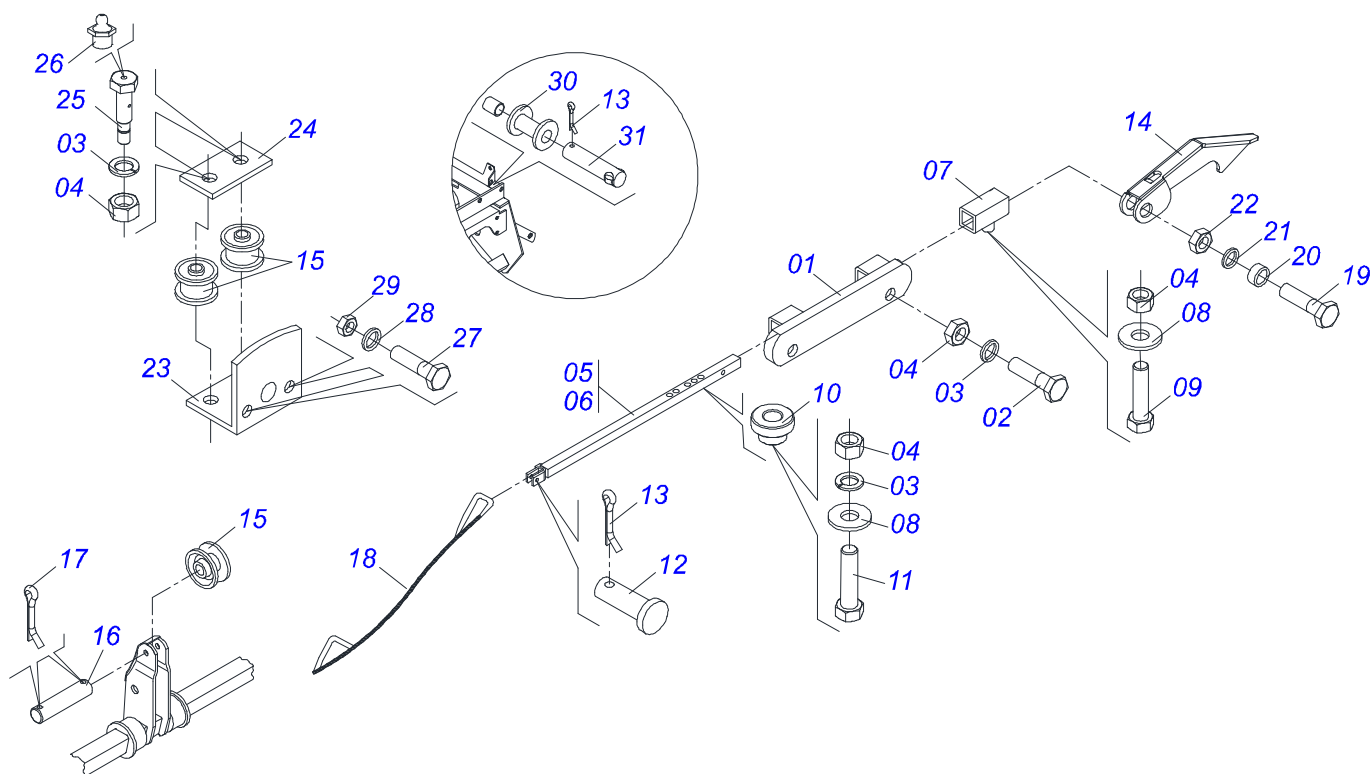


Item	Code	Description	See page	QT
01	0501065640	ROW MARKER ROD GUIDE	02	
02	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN	04	
03	0503010019	1/2" SPRING WASHER	09	
04	0503010060	1/2" NUT	07	
05	0501065644	ROW MARKER ARM/DISARMENT ROD	01	
06	0501064229	REGULATOR ARM/DISARMENT ROD	01	
07	0501062547	ROW MARKER BAR REGULATOR	01	
08	0511017302	FLAT WASHER	02	
09	0503010395	1/2" X 1-1/4" BOLT	01	
10	0521010454	0.83" X 1.25" X 0.79" SLEEVE	02	
11	0503010734	1/2" X 2-1/2" BOLT	01	
12	0521010539	0.3" X 1.2" COUPLING SHAFT	02	
13	0503010140	1/8" X 3/4" COTTERPIN	02	
14	0521062281	ROW MARK ARM LOCK	02	
15	0502011231	CENTRAL PULLEY	02	
16	0511011309	AXLE PULLEY	01	
17	0503010257	1/8" X 1" COTTERPIN	02	
18	0503030755	STEEL CABLE	01	
19	0501010096	3/8" X 2" BOLT	02	
20	0531010415	ROW MARKER ARM/DISARM GUIDE SLEEVE	04	
21	0503010025	3/8" SPRING WASHER	02	
22	0503010026	3/8" NUT	02	
23	0501065642	ROW MARKER SUPPORT	01	
24	0521010693	PULLEY FIXER PLATE	01	
25	0511011308	BOLT	02	
26	0503010691	1/4" GREASE FITTING	02	
27	0503010232	5/8" X 1.3/4" BOLT	02	
28	0503010027	5/8" SPRING WASHER	02	
29	0503010013	5/8" NUT	02	
30	0502010421	SIDE PULLEY	02	
31	0521010641	COUPLING SHAFT	01	

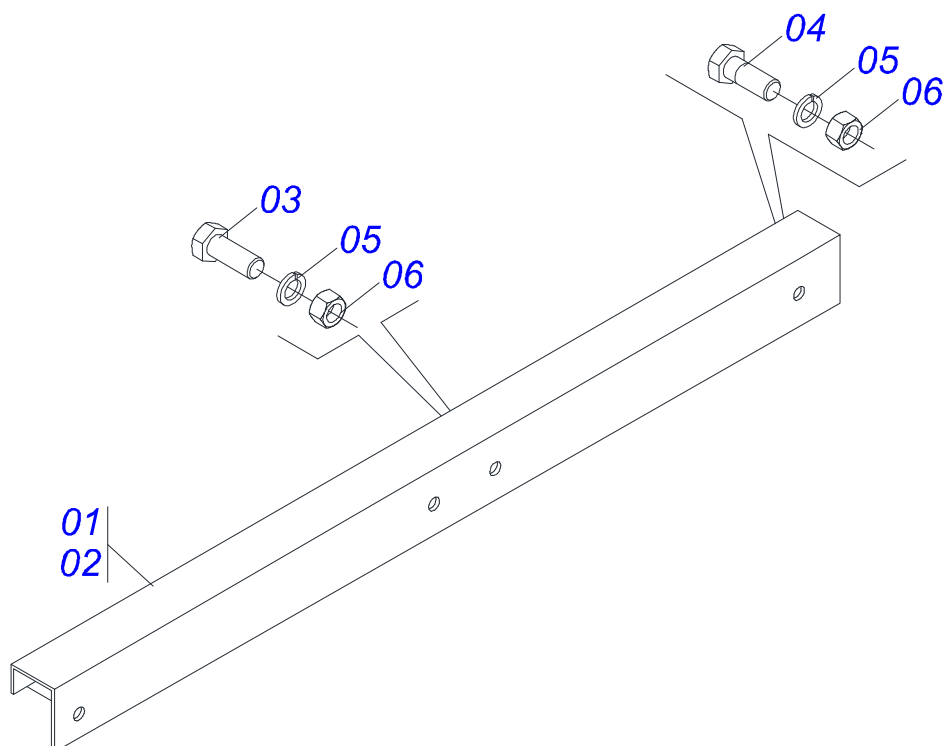


Item	Code	Description	See page	08	09	10	12
00	0511055048	COVER PROTECTION SET		01	00	00	00
00.	0511055066	COVER PROTECTION SET		00	01	00	00
00..	0511055365	COVER PROTECTION SET		00	00	01	00
00...	0511055174	COVER PROTECTION SET		00	00	00	01
01	0511011243	PROTECTION COVER ARM/DISARMMENT		01	00	00	00
01.	0511011270	PROTECTION COVER ARM/DISARMMENT		00	01	00	00
01..	0511011272	PROTECTION COVER ARM/DISARMMENT		00	00	01	00
01...	0511011274	PROTECTION COVER ARM/DISARMMENT		00	00	00	01
02	0511011269	PROTECTION COVER ARM/DISARMMENT		01	00	00	00
02.	0511011271	PROTECTION COVER ARM/DISARMMENT		00	01	00	00
02..	0511011273	PROTECTION COVER ARM/DISARMMENT		00	00	01	00
02...	0511011275	PROTECTION COVER ARM/DISARMMENT		00	00	00	01
03	0503010395	1/2" X 1-1/4" BOLT		02	02	02	04
04	0511017961	1/2" X 1-1/4" REB BOLT		02	02	02	02
05	0503010019	1/2" SPRING WASHER		04	04	04	06
06	0503010060	1/2" NUT		04	04	04	06

HANDRAIL SET

0909092112

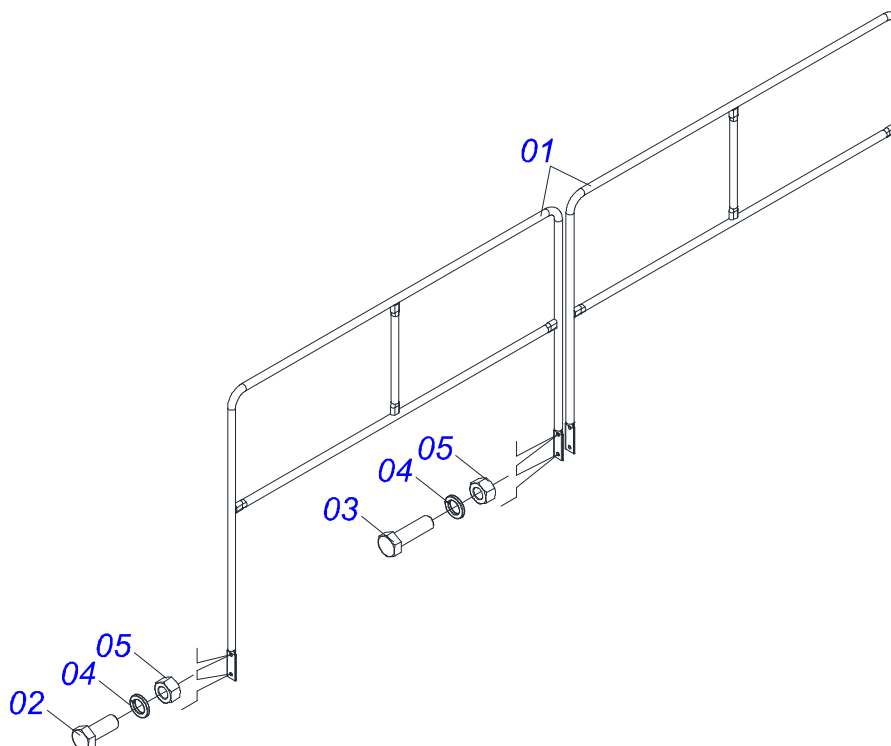


Item	Code	Description	See page	08	09	10	12
00	0511055049	HANDRAIL SET		01	00	00	00
00.	0511055067	HANDRAIL ASSY		00	01	00	00
00..	0511055366	HANDRAIL ASSY		00	00	01	00
00...	0511055175	HANDRAIL ASSY		00	00	00	01
01	0521061075	1550 HANDRAIL		01	00	00	00
01.	0521061076	1800 HANDRAIL		00	01	00	00
01..	0521061077	1950 HANDRAIL		00	00	01	00
01...	0521061078	2470 HANDRAIL		00	00	00	01
02	0503010834	1/2 X 1 BOLT		04	04	04	04
03	0503010395	1/2" X 1-1/4" BOLT		04	04	04	04
04	0503010019	1/2" SPRING WASHER		08	08	08	08
05	0503010060	1/2" NUT		08	08	08	08

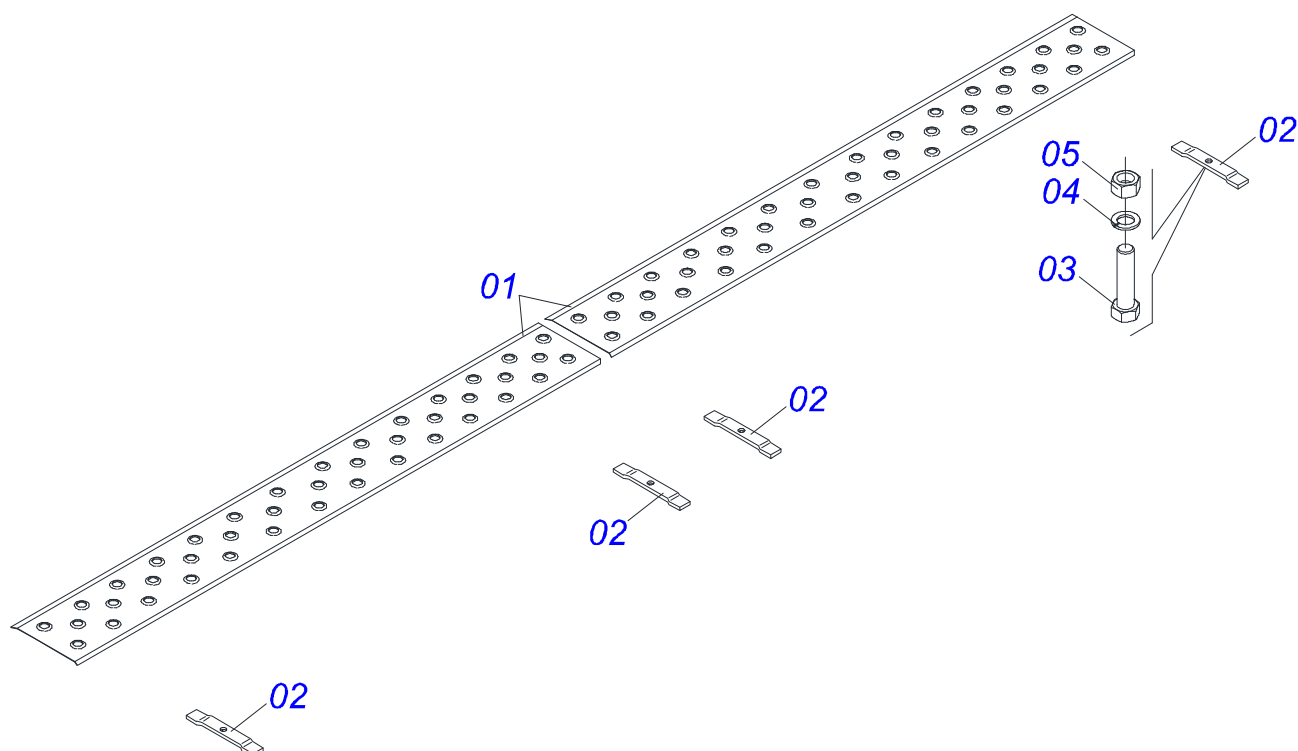

Item	Code	Description	See page	08	09	10	12
00	0511055050	PLATFORM SET		01	00	00	00
00.	0511055068	PLATFORM SET		00	01	00	00
00..	0511055367	PLATFORM SET		00	00	01	00
00...	0511055176	PLATFORM SET		00	00	00	01
01	0521011235	62.60" REAR PLATFORM		02	00	00	00
01.	0521011237	72.83" REAR PLATFORM		00	02	00	00
01..	0521011241	REAR PLATFORM 1990 PST2 10 S-0498		00	00	02	00
01...	0521011244	REAR PLATFORM 2490 PST2 12 S-0498		00	00	00	02
02	0521011300	REAR PLATFORM FIXER		04	04	04	04
03	0501010080	3/8" BOLT		04	04	04	04
04	0503010025	3/8" SPRING WASHER		04	04	04	04
05	0503010026	3/8" NUT		04	04	04	04

RIGHT TRANSMISSION ASSY

0909092114

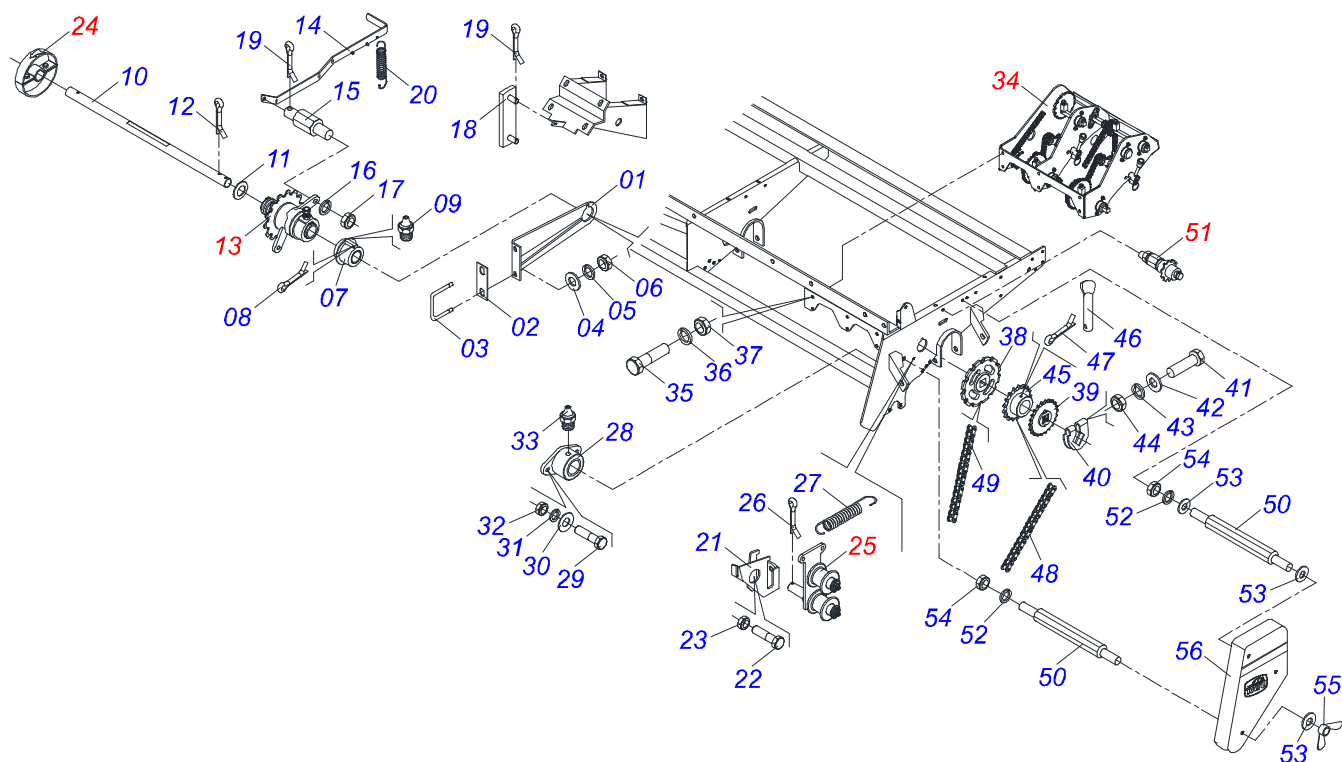


Item	Code	Description	See page	08	09	10	12
00	0511055051	SET TRANSMISSION RIGHT		01	00	00	00
00.	0511057111	RIGHT TRANSMISSION ASSY		00	01	00	00
00..	0511057113	RIGHT TRANSMISSION ASSY		00	00	01	00
00...	0511055177	RIGHT TRANSMISSION ASSY		00	00	00	01
01	0511060718	MOTOR AXLE BEARING SUPPORTE		01	01	01	02
02	0521014436	MOTOR CHOCK SUPPORT BEARING AXLE		03	03	03	06
03	0521014021	1/2" X 4.5" X 5.4" FASTENER		01	01	01	02
04	0511017302	FLAT WASHER		02	02	02	04
05	0503010019	1/2" SPRING WASHER		02	02	02	04
06	0503010060	1/2" NUT		02	02	02	04
07	0501110639	BEARING		03	03	03	04
08	0503010300	5/32" X 1" COTTERPIN		03	03	03	04
09	0503011099	GREASE FITTING		03	03	03	04
10	0521012469	1-3/8" X 59.3" AXLE		01	00	00	00
10.	0521012470	1-3/8" X 70.0" AXLE		00	01	00	00
10..	0521012471	1-3/8" X 75.2" AXLE		00	00	01	00
10...	0521012472	1-3/8" X 94.8" AXLE		00	00	00	01
11	0501018466	FLAT WASHER		05	05	05	05
12	0503010523	1/4" X 2" COTTERPIN		02	02	02	02
13	0511040424	RH TRANSMISSION DRIVING ASSY	21	01	01	01	02
14	0521015778	RATCHET PIVOT ARM		01	01	01	02
15	0521015800	REAR LEVER FASTENER		01	01	01	02
16	0503010025	3/8" SPRING WASHER		01	01	01	02
17	0503010026	3/8" NUT		01	01	01	02
18	0511060719	DISARMENT/ARM PIVOT ARM		01	01	01	02
19	0503010140	1/8" X 3/4" COTTERPIN		03	03	03	06
20	0503030198	0.6" X 2.4" X 0.1" EXTENSION SPRING		01	01	01	02
21	0501069850	RATCHET BAR DES.		01	01	01	02
22	0503011082	C1/2" X 1.3/4" SCREW		01	01	01	02
23	0503010060	1/2" NUT		01	01	01	02
24	0501052560	MOTOR AXLE SIGNAL	22	01	01	01	01


RIGHT TRANSMISSION ASSY

0909092114


Item	Code	Description	See page	08	09	10	12
25	0501057939	RIGHT CHAIN TENSIONER ASSY TRANSMISSION	23	01	01	01	01
26	0503010257	1/8" X 1" COTTERPIN		01	01	01	01
27	0503030418	TRACTION SPRING		01	01	01	01
28	0501110037	AGRICULTURAL BEARING HEX SHAFT 5/8"		01	01	01	01
29	0503010363	5/16" X 1" BOLT		02	02	02	02
30	0501010694	FLAT WASHER		02	02	02	02
31	0503010179	LOCK WASHER		02	02	02	02
32	0503010337	5/16" NUT		02	02	02	02
33	0503010002	1800 GREASE FITTING		01	01	01	01
34	0501049365	RIGHT GEAR BOX ASSY	24	01	01	01	01
35	0503010920	1/2" X 1.1/2" BOLT		04	04	04	04
36	0503010019	1/2" SPRING WASHER		04	04	04	04
37	0503010060	1/2" NUT		04	04	04	04
38	0502011325	12Z P 1.2" GEAR		01	01	01	01
39	0511061759	22Z P12,70 FQ 3/4" GEAR		01	01	01	01
40	0521010691	AXLE FASTENER		05	05	05	05
41	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		05	05	05	05
42	0501010694	FLAT WASHER		05	05	05	05
43	0503010143	1/4" SPRING WASHER		05	05	05	05
44	0503010144	1/4" NUT		05	05	05	05
45	0501069585	17Z P5/8" GEAR ROUND HOLE 1.4"		01	01	01	01
46	0521010530	COUPLING SHAFT		01	01	01	01
47	0503010140	1/8" X 3/4" COTTERPIN		01	01	01	01
48	0503011647	50-1 CHAIN X 42 LINK + REDUCTION		01	01	01	01
49	0503012125	2050 CHAIN X 49 LINK + MENDING		01	01	01	01
50	0511011417	HEX STUD 3/8" X 3/8" X 5.79"		02	02	02	02
51	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	31	01	01	01	01
52	0503010025	3/8" SPRING WASHER		02	02	02	02
53	0501010984	FLAT WASHER		07	07	07	07
54	0503010026	3/8" NUT		02	02	02	02
55	0503010209	3/8" UNC BUTTERFLY NUT		03	03	03	03
56	0503031376	RH CHAIN PROTECTION CAP		01	01	01	01

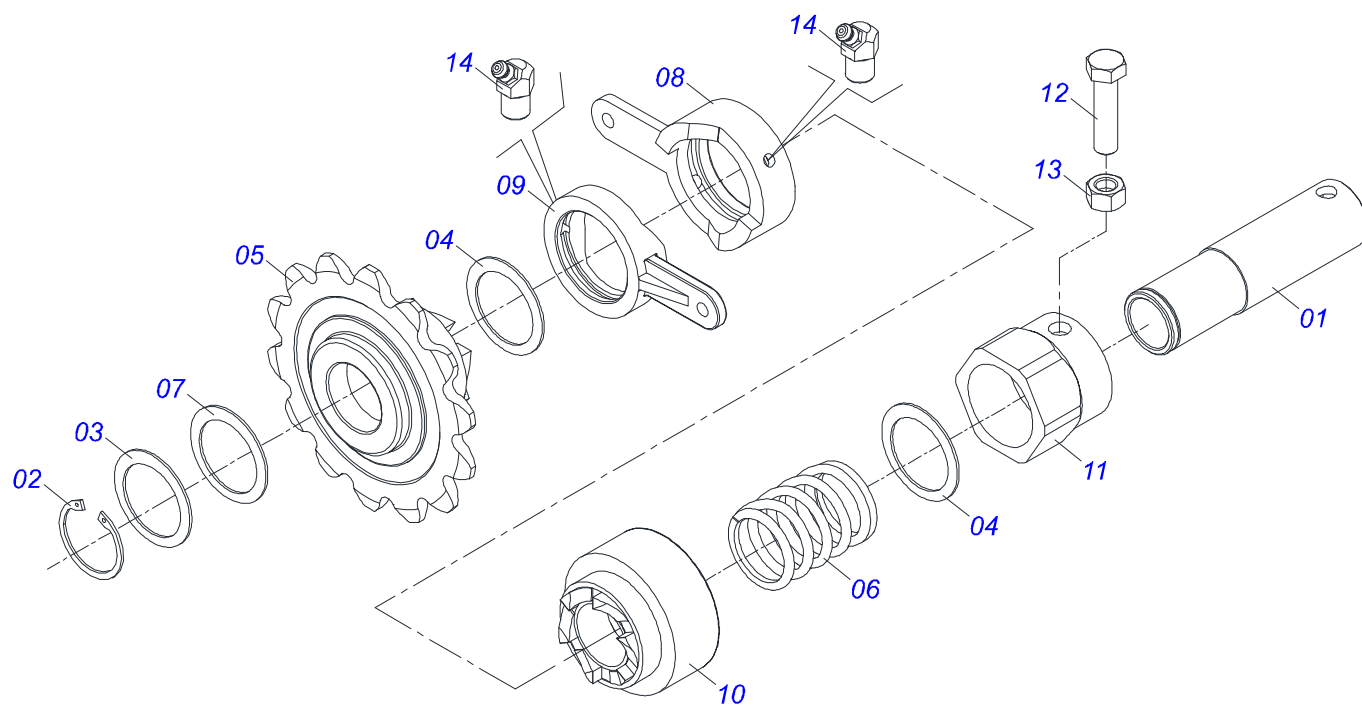

Item	Code	Description	See page	QT
01	0521017590	GUIDE AXLE		01
02	0503010542	501045 CLAMPING RING (FOR AXLE)		01
03	0521017593	FLAT WASHER		01
04	0501019734	FLAT WASHER		02
05	0502011329	14Z GEAR WITH RIGHT DRAGGER		01
06	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
07	0501019735	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		01
09	0502010711	RIGHT CAM,LARGER		01
10	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
11	0502011996	SLEEVE FIXER		01
12	0503030678	BOLT 1/2 UNC X 1.1/2 C50 G.5 ZN		01
13	0503010060	1/2" NUT		01
14	0503010003	1845 GREASE FITTING		02

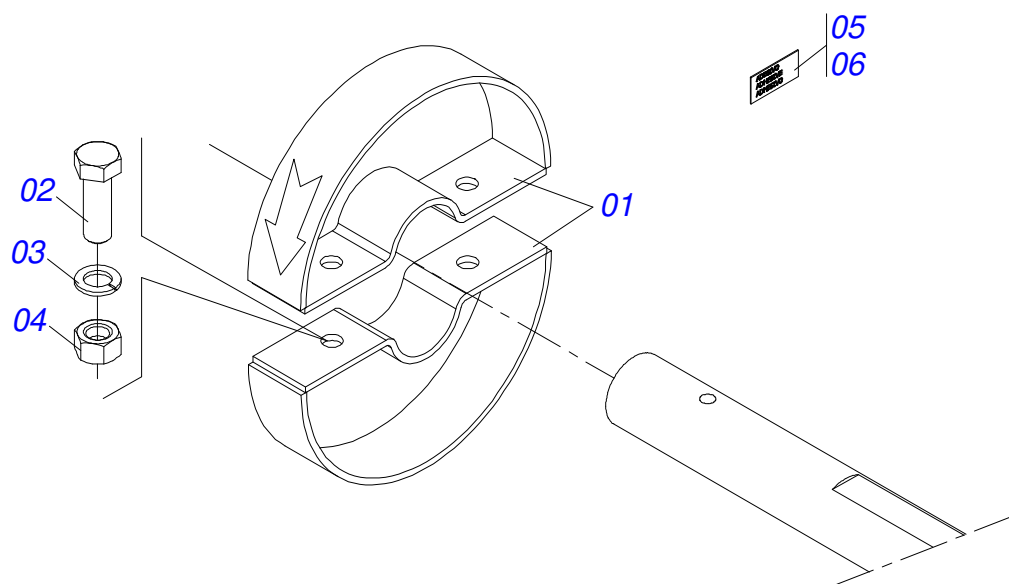


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ADHESIVE LABEL		01

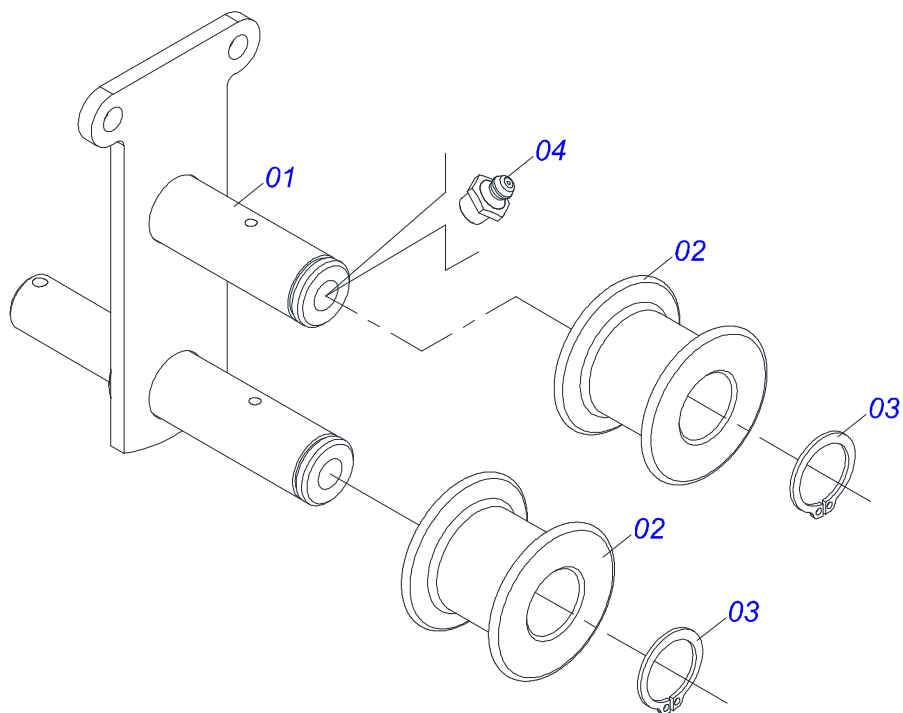

Item	Code	Description	See page	QT
001	0511062457	TENSIONER CHAIN		01
002	0503030402	PULLEY		02
003	0503010302	501019 SEAL RING		02
004	0503010002	1800 GREASE FITTING		02

RIGHT GEAR BOX ASSY


0501049365

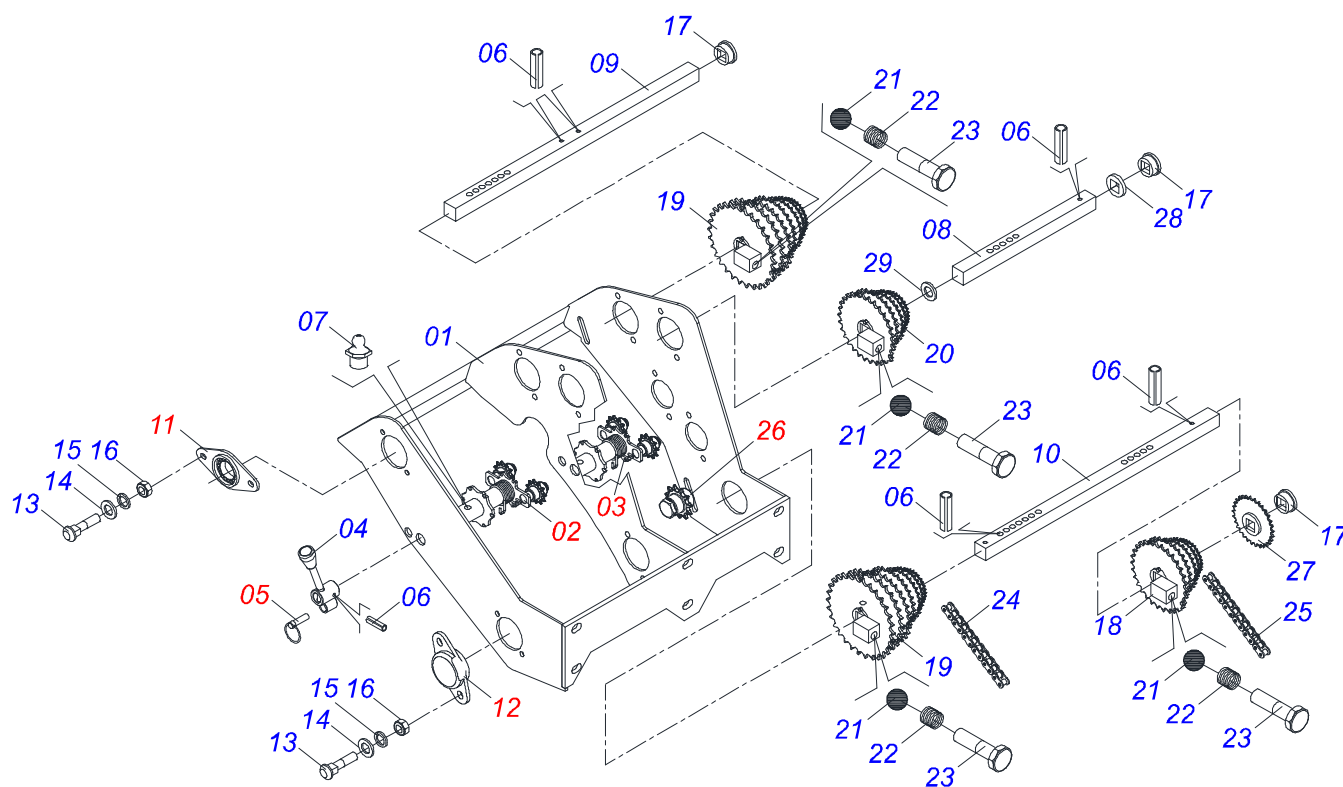

Item	Code	Description	See page	QT
001	0511060682	FERTILIZER GEAR BOX RIGHT SUPPORT		01
002	0501052236	CHAIN TENSIONER ASSY	25	01
003	0501052238	CHAIN TENSIONER ASSY	26	01
004	0502011758	REAR TENSIONER LEVER		02
005	0501048790	AXLE WITH RING	27	02
006	0503010292	0.2" X 1.6" SPRING PIN		08
007	0503010002	1800 GREASE FITTING		02
008	0521017618	SEEP CONE MOV. AXLE		01
009	0521014548	FERTILIZER CONE MOV. AXLE		01
010	0521014144	FERTILIZER/SEEP CONE MOV. AXLE		01
011	0501056444	BEARING WITH ROLLING	28	04
012	0501056271	GEARBOX CLOSED BEARING	29	04
013	0503011953	5/16" X 1" BOLT		16
014	0501010694	FLAT WASHER		16
015	0503011444	SPRING WASHER		16
016	0503010337	5/16" NUT		16
017	0503030303	SUPPORT WASHER		05
018	0511061668	SEED SYSTEM DRIVE AXLE CONE		01
019	0502040868	GEAR CONE REPLACEMENT		02
020	0511061667	SEED SYSTEM DRIVEN AXLE CONE		01
021	0503012389	1/2 BALL		04
022	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
023	0503010395	1/2" X 1-1/4" BOLT		04
024	0503012390	40-1 CHAIN X 93 LINK + MENDING		01
025	0503012391	40-1 CHAIN X 83 LINK + MENDING		01
026	0501054655	CHAIN TENSIONER ASSY	30	01
027	0501069874	GEAR 17Z P 15,87 FQ 3/4		01
028	0521018630	1.4" X SQUARE 0.8" WASHER		01
029	0551015329	FLAT WASHER		01

CHAIN TENSIONER ASSY


0501052236

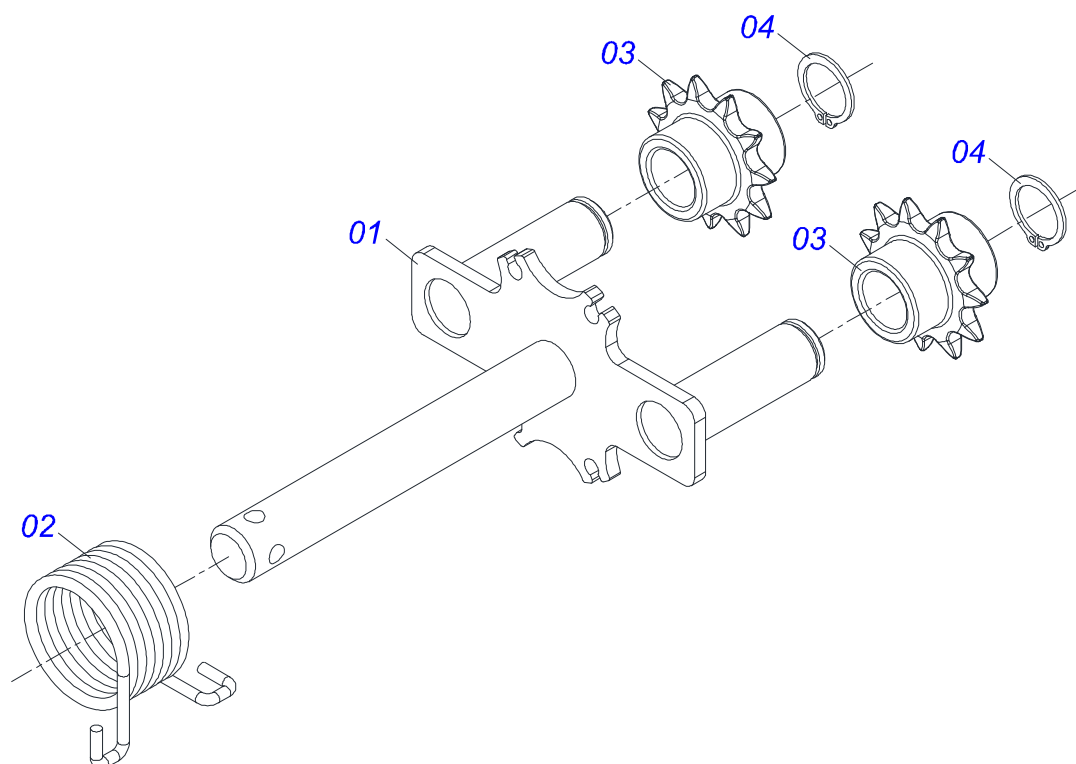


Item	Code	Description	See page	QT
001	0511060392	CHAIN TENSIONER		01
002	0503031366	RIGHT TWISTED SPRING RECAMBIO		01
003	0503031805	1 1/2" GEAR		02
004	0503010302	501019 SEAL RING		02

CHAIN TENSIONER ASSY


0501052238

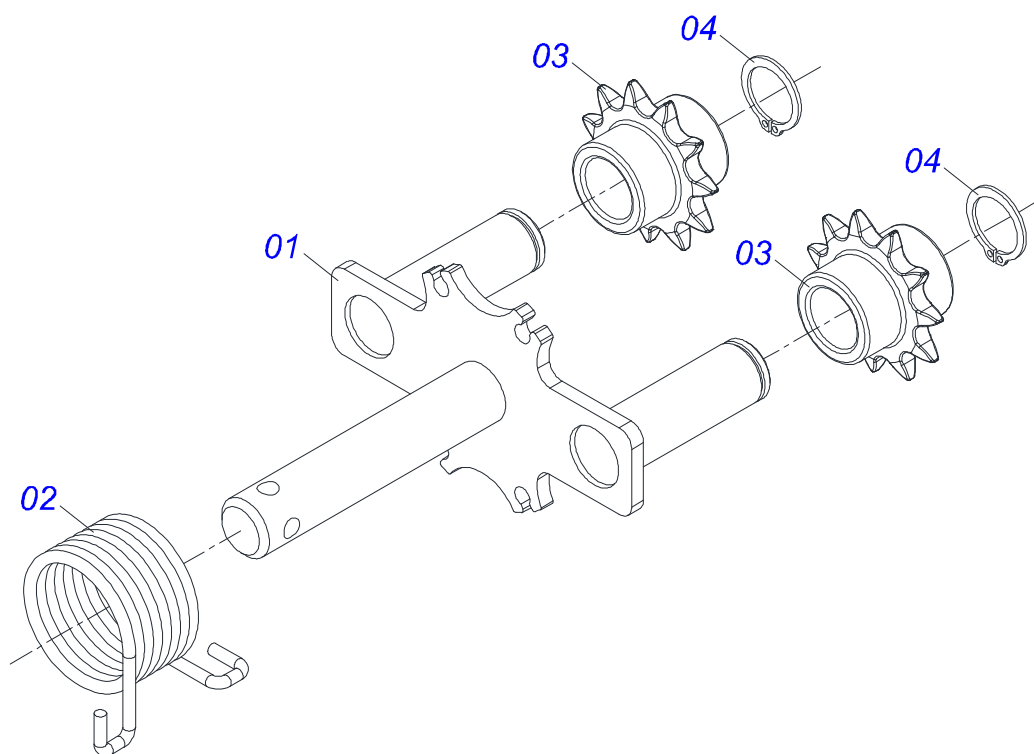

Item	Code	Description	See page	QT
001	0511060393	CHAIN TENSIONER ASSY		01
002	0503031366	RIGHT TWISTED SPRING RECAMBIO		01
003	0503031805	1 1/2" GEAR		02
004	0503010302	501019 SEAL RING		02

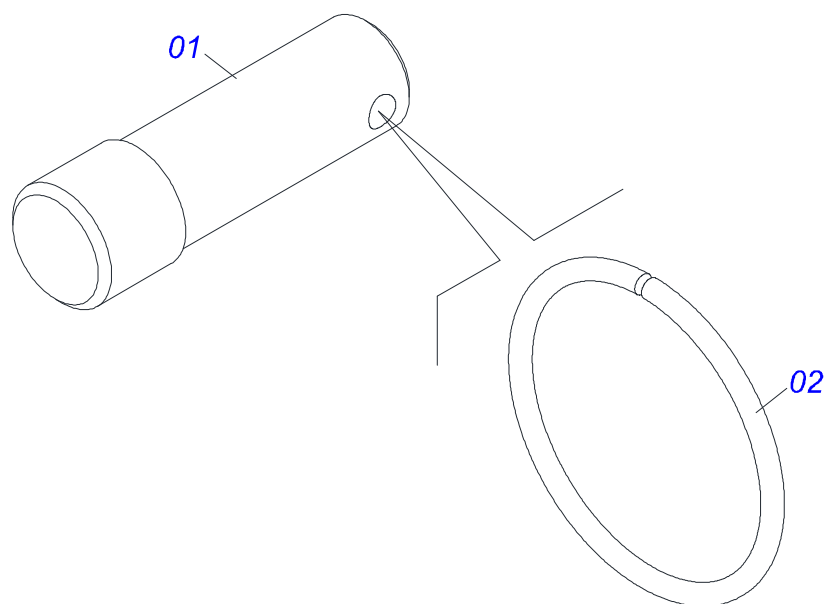


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

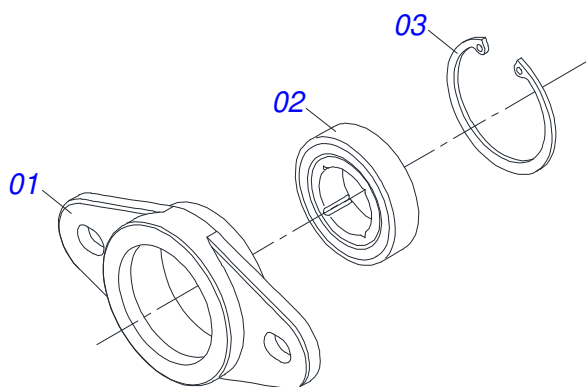

Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

GEARBOX CLOSED BEARING


0501056271

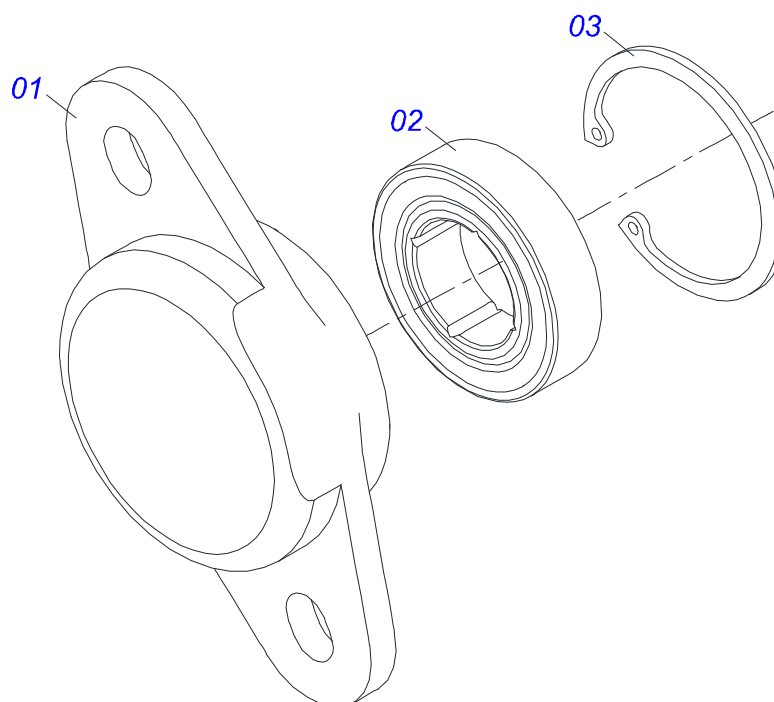


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

CHAIN TENSIONER ASSY

0501054655

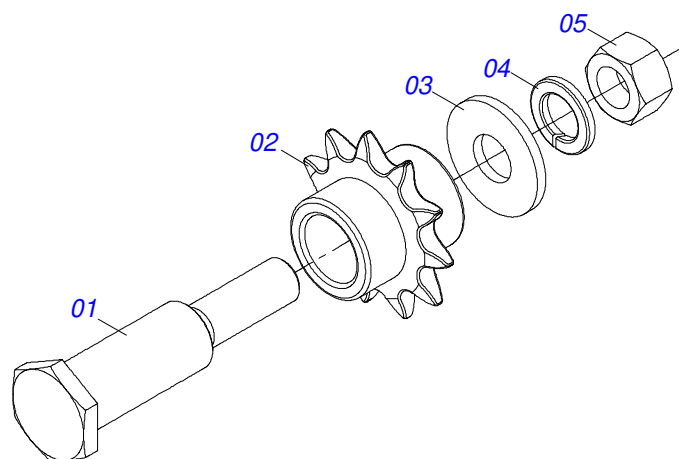


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

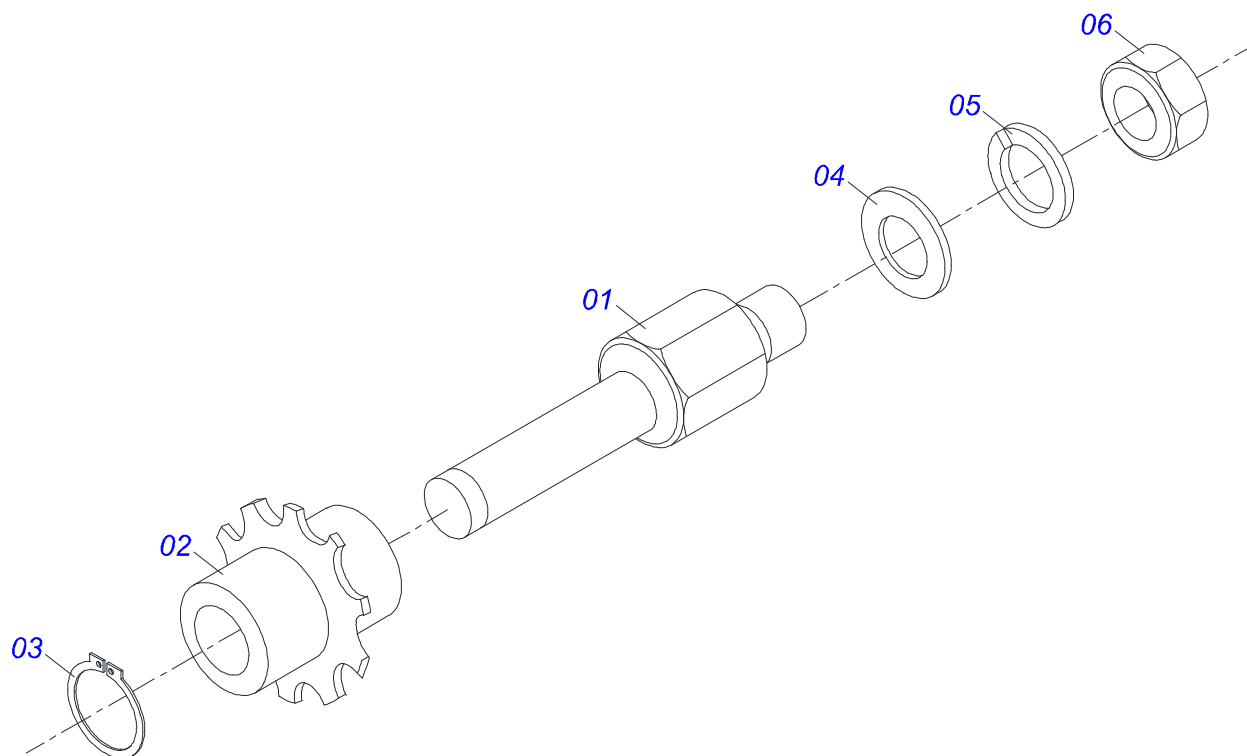

Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

LEFT TRANSMISSION ASSEMBLY

0909092115

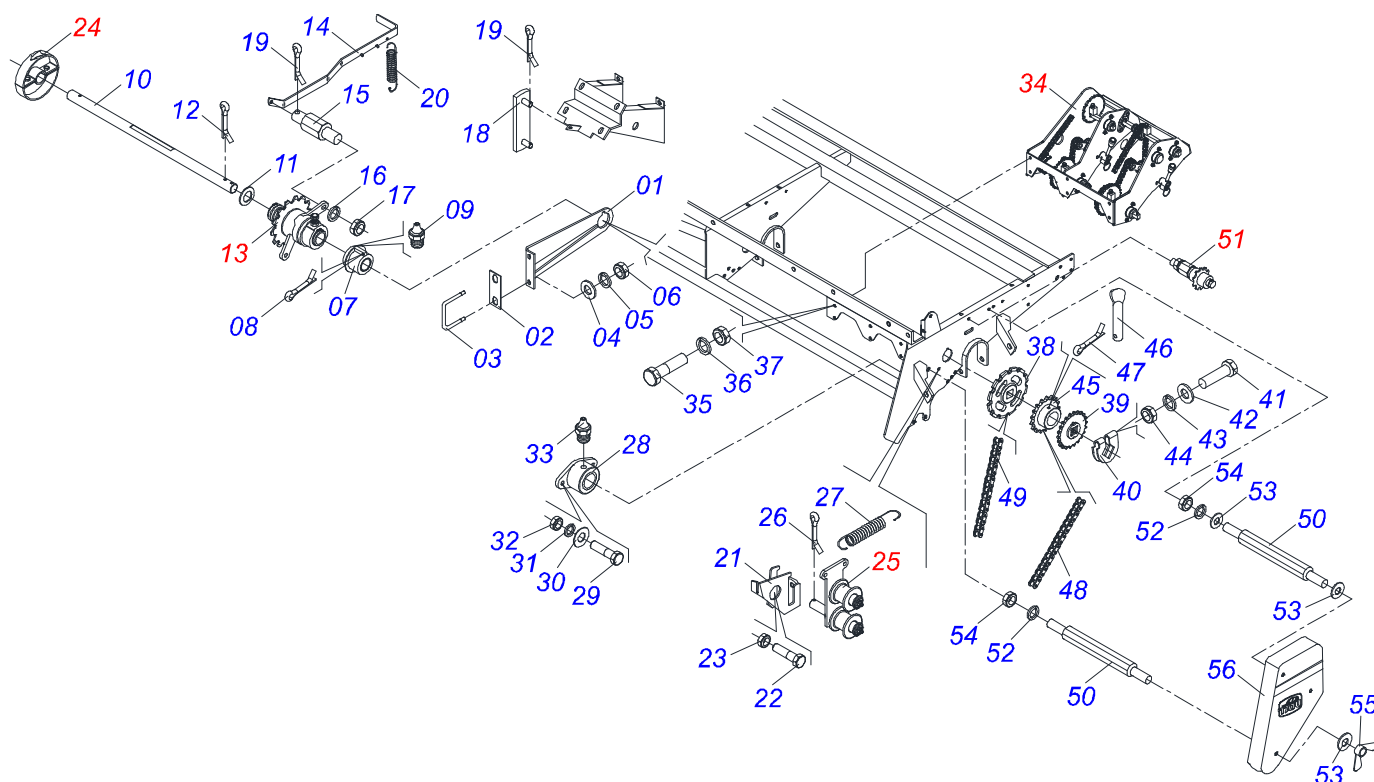


Item	Code	Description	See page	08	09	10	12
00	0511055052	SET TRANSMISSION LEFT		01	00	00	00
00.	0511057112	LEFT TRANSMISSION ASSEMBLY		00	01	00	00
00..	0511057114	LEFT TRANSMISSION ASSEMBLY		00	00	01	00
00...	0511055178	LEFT TRANSMISSION ASSEMBLY		00	00	00	01
01	0511060718	MOTOR AXLE BEARING SUPPORTE		01	01	01	02
02	0521014436	MOTOR CHOCK SUPPORT BEARING AXLE		03	03	03	06
03	0521014021	1/2" X 4.5" X 5.4" FASTENER		01	01	01	02
04	0511017302	FLAT WASHER		02	02	02	04
05	0503010019	1/2" SPRING WASHER		02	02	02	04
06	0503010060	1/2" NUT		02	02	02	04
07	0501110639	BEARING		03	03	03	04
08	0503010300	5/32" X 1" COTTERPIN		03	03	03	04
09	0503011099	GREASE FITTING		03	03	03	04
10	0521012469	1-3/8" X 59.3" AXLE		01	00	00	00
10.	0521012470	1-3/8" X 70.0" AXLE		00	01	00	00
10..	0521012471	1-3/8" X 75.2" AXLE		00	00	01	00
10...	0521012472	1-3/8" X 94.8" AXLE		00	00	00	01
11	0501018466	FLAT WASHER		05	05	05	05
12	0503010523	1/4" X 2" COTTERPIN		02	02	02	02
13	0511040424	RH TRANSMISSION DRIVING ASSY	21	01	01	01	02
14	0521015778	RATCHET PIVOT ARM		01	01	01	02
15	0521015800	REAR LEVER FASTENER		01	01	01	02
16	0503010025	3/8" SPRING WASHER		01	01	01	02
17	0503010026	3/8" NUT		01	01	01	02
18	0511060719	DISARMENT/ARM PIVOT ARM		01	01	01	02
19	0503010140	1/8" X 3/4" COTTERPIN		03	03	03	06
20	0503030198	0.6" X 2.4" X 0.1" EXTENSION SPRING		01	01	01	02
21	0501069850	RATCHET BAR DES.		01	01	01	02
22	0503011082	C1/2" X 1.3/4" SCREW		01	01	01	02
23	0503010060	1/2" NUT		01	01	01	02
24	0501052560	MOTOR AXLE SIGNAL	22	01	01	01	01


LEFT TRANSMISSION ASSEMBLY

0909092115

Item	Code	Description	See page	08	09	10	12
25	0501057939	RIGHT CHAIN TENSIONER ASSY TRANSMISSION	23	01	01	01	01
26	0503010257	1/8" X 1" COTTERPIN		01	01	01	01
27	0503030418	TRACTION SPRING		01	01	01	01
28	0501110037	AGRICULTURAL BEARING HEX SHAFT 5/8"		01	01	01	01
29	0503010363	5/16" X 1" BOLT		02	02	02	02
30	0501010694	FLAT WASHER		02	02	02	02
31	0503010179	LOCK WASHER		02	02	02	02
32	0503010337	5/16" NUT		02	02	02	02
33	0503010002	1800 GREASE FITTING		01	01	01	01
34	0501049366	LEFT GEAR BOX ASSY		01	01	01	01
35	0503010920	1/2" X 1.1/2" BOLT		04	04	04	04
36	0503010019	1/2" SPRING WASHER		04	04	04	04
37	0503010060	1/2" NUT		04	04	04	04
38	0502011325	12Z P 1.2" GEAR		01	01	01	01
39	0511061759	22Z P12,70 FQ 3/4" GEAR		01	01	01	01
40	0521010691	AXLE FASTENER		05	05	05	05
41	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		05	05	05	05
42	0501010694	FLAT WASHER		05	05	05	05
43	0503010143	1/4" SPRING WASHER		05	05	05	05
44	0503010144	1/4" NUT		05	05	05	05
45	0501069585	17Z P5/8" GEAR ROUND HOLE 1.4"		01	01	01	01
46	0521010530	COUPLING SHAFT		01	01	01	01
47	0503010140	1/8" X 3/4" COTTERPIN		01	01	01	01
48	0503011647	50-1 CHAIN X 42 LINK + REDUCTION		01	01	01	01
49	0503012125	2050 CHAIN X 49 LINK + MENDING		01	01	01	01
50	0511011417	HEX STUD 3/8" X 3/8" X 5.79"		02	02	02	02
51	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	31	01	01	01	01
52	0503010025	3/8" SPRING WASHER		02	02	02	02
53	0501010984	FLAT WASHER		07	07	07	07
54	0503010026	3/8" NUT		02	02	02	02
55	0503010209	3/8" UNC BUTTERFLY NUT		03	03	03	03
56	0503031377	LEFT CHAIN PROTECTION CAP		01	01	01	01

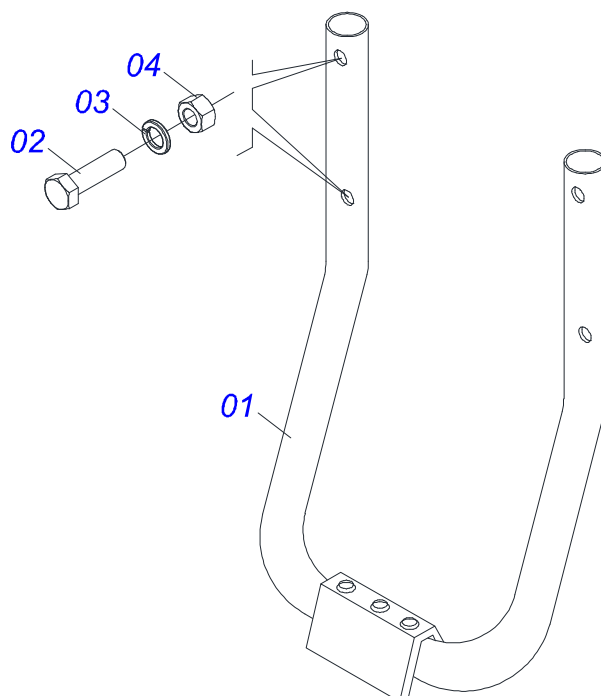


Item	Code	Description	See page	QT
01	0511064807	STIRRUP		01
02	0503011404	BOLT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04

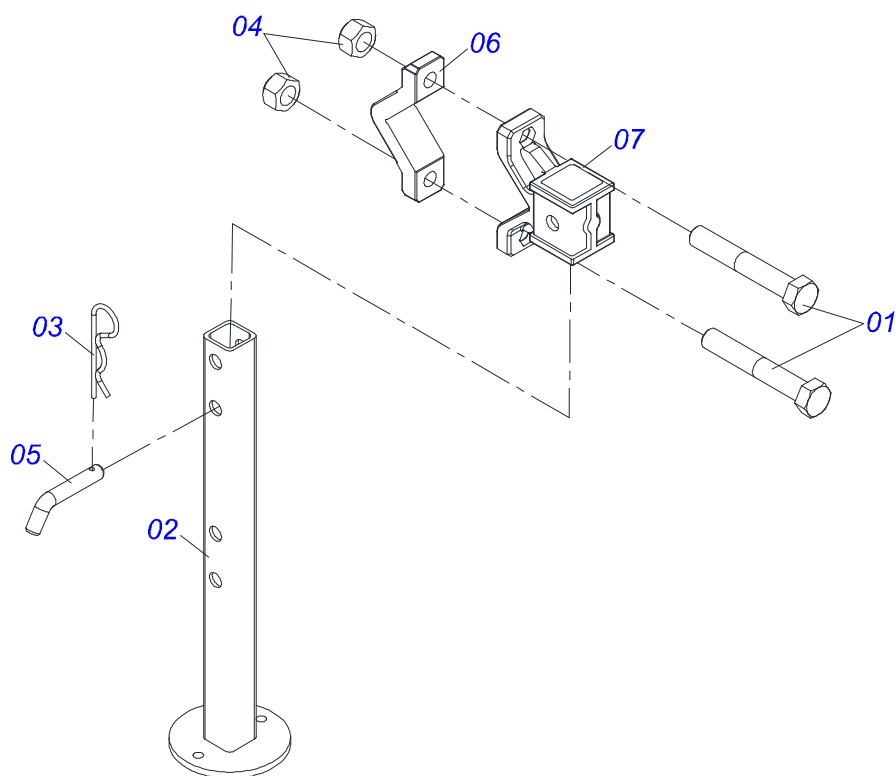

Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

RIGHT / LEFT FERTILIZER BOX SET


0909092116

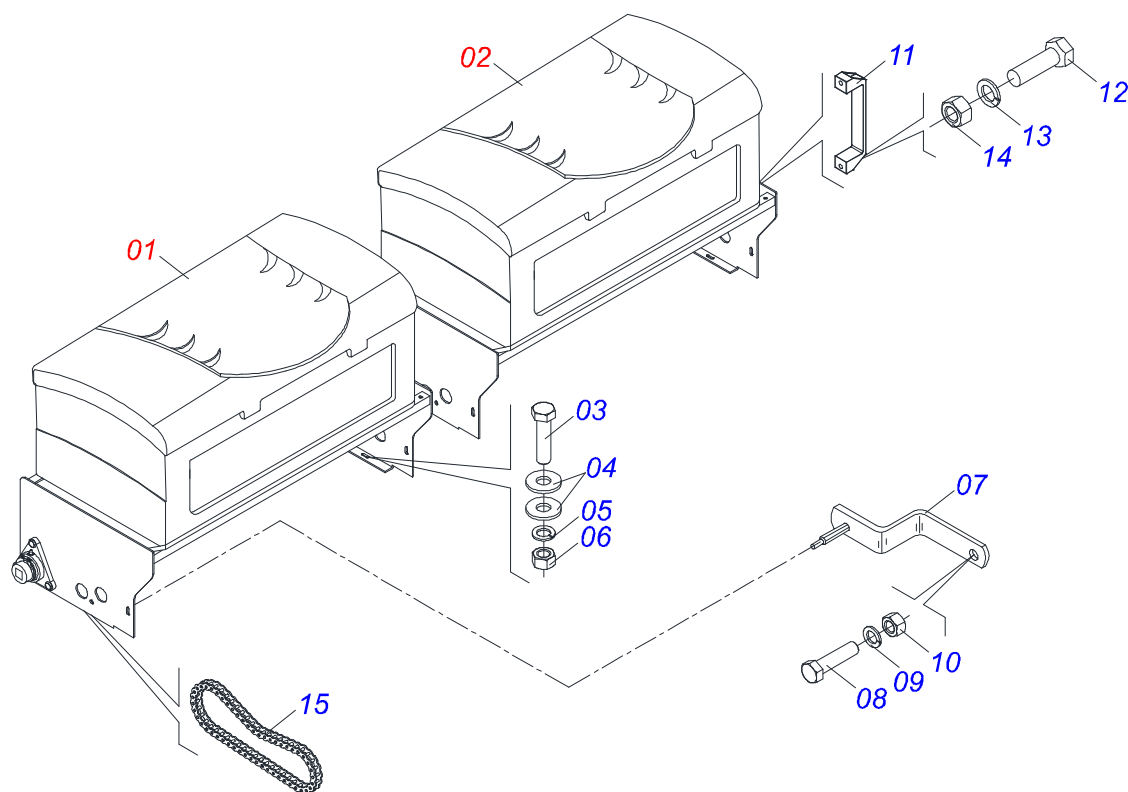

Item	Code	Description	See page	08	09	10	12
00	0511055053	SET		01	00	00	00
00.	0511055071	FERTILIZER BOX ASSEMBLY		00	01	00	00
00..	0511055370	FERTILIZER BOX ASSEMBLY		00	00	01	00
00...	0511055179	FERTILIZER BOX ASSEMBLY		00	00	00	01
01	0501055135	FERTILIZER RIGHT BOX ASSY		01	00	00	00
01.	0501055137	FERTILIZER RIGHT BOX ASSY		00	01	00	00
01..	0501055139	FERTILIZER RIGHT BOX ASSY		00	00	01	00
01...	0501055141	FERTILIZER RIGHT BOX ASSY		00	00	00	01
02	0501055136	FERTILIZER LEFT BOX ASSY		01	00	00	00
02.	0501055138	FERTILIZER LEFT BOX ASSY		00	01	00	00
02..	0501055140	FERTILIZER LEFT BOX ASSY		00	00	01	00
02...	0501055142	FERTILIZER LEFT BOX ASSY		00	00	00	01
03	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04	04	04	04
04	0501010984	FLAT WASHER		08	08	08	08
05	0503010025	3/8" SPRING WASHER		04	04	04	04
06	0503010026	3/8" NUT		04	04	04	04
07	0501069631	COVER FIXER		02	02	02	02
08	0503010395	1/2" X 1-1/4" BOLT		02	02	02	02
09	0503010019	1/2" SPRING WASHER		02	02	02	02
10	0503010060	1/2" NUT		02	02	02	02
11	0503011957	NYLON LUG		02	02	02	02
12	0503010371	5/16" X 1" BOLT		04	04	04	04
13	0503010179	LOCK WASHER		04	04	04	04
14	0503010337	5/16" NUT		04	04	04	04
15	0503012698	2050 CHAIN X 53 LINK + MENDING		02	02	02	02

FERTILIZER RIGHT BOX ASSY

0909092117

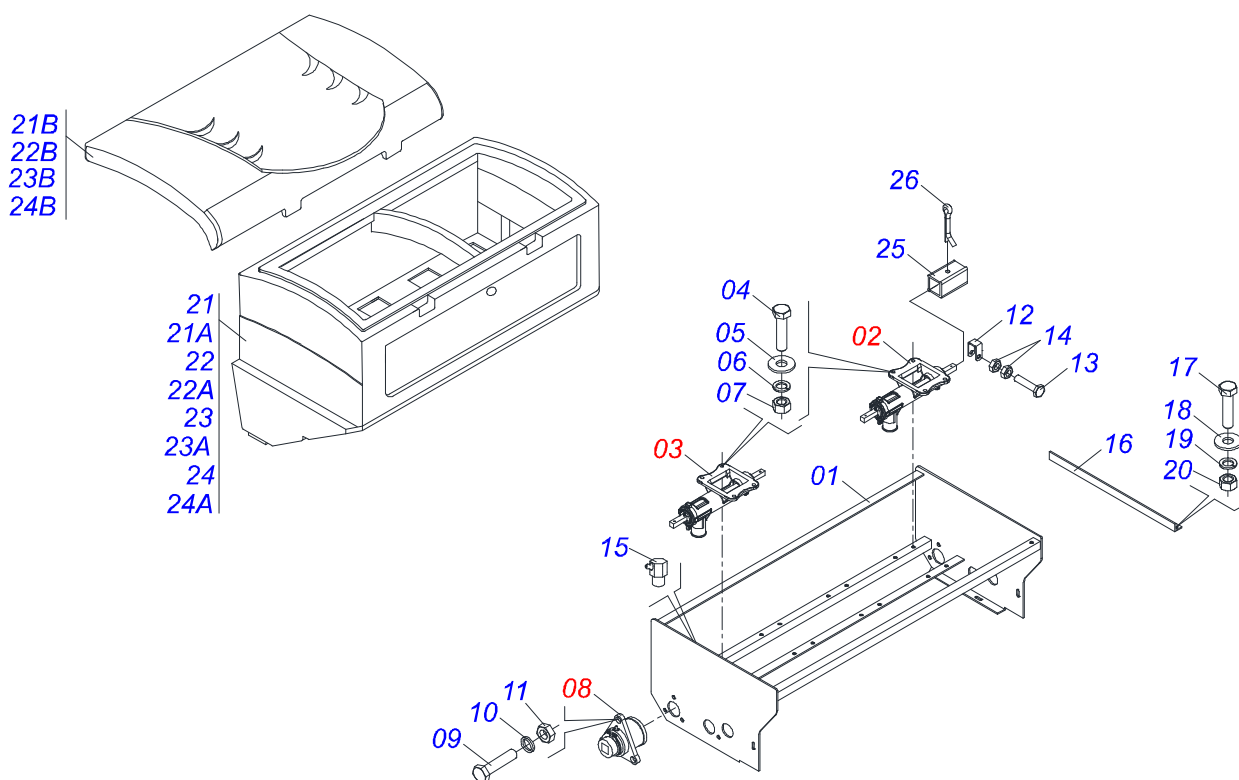


Item	Code	Description	See page	08	09	10	12
00	0501055135	FERTILIZER RIGHT BOX ASSY		01	00	00	00
00.	0511055071	FERTILIZER BOX ASSEMBLY		00	01	00	00
00..	0511055370	FERTILIZER BOX ASSEMBLY		00	00	01	00
00...	0511055179	FERTILIZER BOX ASSEMBLY		00	00	00	01
01	0511060965	FERTILIZER BEAN RIGHT SUPPORT		01	00	00	00
01.	0511061067	FERTILIZER BEAN RIGHT SUPPORT		00	01	00	00
01..	0511061019	FERTILIZER BEAN RIGHT SUPPORT		00	00	01	00
01...	0511061062	FERTILIZER BEAN RIGHT SUPPORT		00	00	00	01
02	0501052423	LH FERTILIZER METERING	38	03	03	04	04
03	0501052424	LH FERTILIZER METERING	39	01	00	00	00
03.	0501052467	LH FERTILIZER METERING	40	00	01	00	00
03..	0501052449	LH FERTILIZER METERING	41	00	00	01	01
03...	0501053701	LH FERTILIZER METERING	37	00	01	00	00
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16	24	24	28
05	0501010984	FLAT WASHER		16	20	20	24
06	0503010025	3/8" SPRING WASHER		16	20	20	24
07	0503010026	3/8" NUT		16	20	20	24
08	0501050274	BOX BEARING ASSY	43	01	01	01	01
09	0501010161	1/2" X 1.1/4" BOLT		03	03	03	03
10	0503010019	1/2" SPRING WASHER		03	03	03	03
11	0503010060	1/2" NUT		03	03	03	03
12	0501017476	DRAGING		03	04	04	04
13	0503010397	5/16" X 1-3/4" BOLT		03	04	04	04
14	0503010337	5/16" NUT		06	08	08	08
15	0503010004	1890 GREASE FITTING		01	01	01	01
16	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		02	02	02	02
17	0503010849	3/8" X 1-1/2" BOLT		04	00	00	00
18	0501010984	FLAT WASHER		12	12	12	12
19	0503010025	3/8" SPRING WASHER		04	04	04	04
20	0503010026	3/8" NUT		04	04	04	04
21	0503060636	COVER BOX RIGHT FERTILIZER		01	00	00	00




FERTILIZER RIGHT BOX ASSY

0909092117


Item	Code	Description	See page	08	09	10	12
21A	0503031548	YELLOW COVER/FERTILIZER BEAM GREEN		01	00	00	00
21B	0503031550	RIGHT YELLOW BEAM FERTILIZER		02	00	00	00
22	0503060638	COVER BOX RIGHT FERTILIZER		00	01	00	00
22A	0503031951	BEAM RIGHT FERTILIZER		00	01	00	00
22B	0503031953	TUBE SILO FERTILIZER		00	02	00	00
23	0503060640	COVER BOX RIGHT FERTILIZER		00	00	01	00
23A	0503031954	SILO RIGHT FERTILIZER		00	00	01	00
23B	0503031956	TUBE SILO FERTILIZER		00	00	02	00
24	0503060642	COVER BOX RIGHT FERTILIZER		00	00	00	01
24A	0503031957	BEAM RIGHT FERTILIZER		00	00	00	01
24B	0503031959	TUBE SILO FERTILIZER		00	00	00	02
25	0521013058	3/4" SQUARE SHAFT 2" GUIDE		00	00	00	01
26	0503010571	1/4" X 1.1/2 COTTERPIN		00	00	00	01

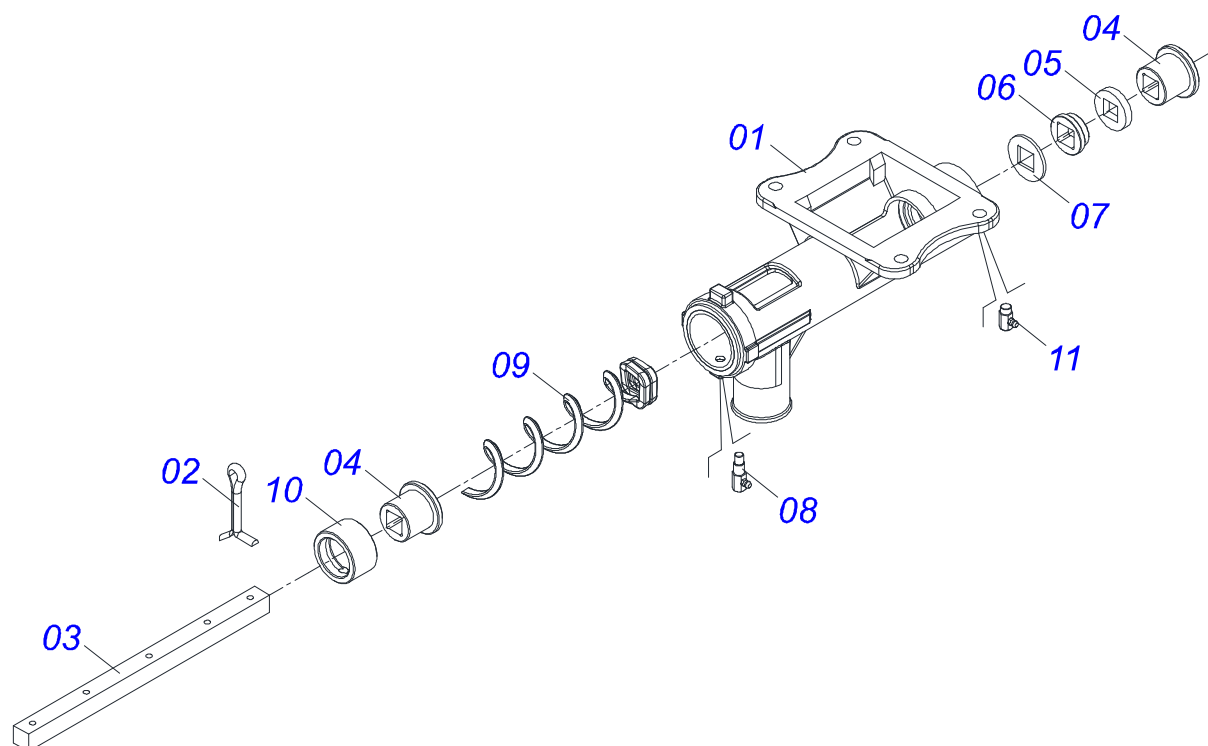


Item	Code	Description	See page	QT
001	0501110453	FERTILIZER DISTRIBUTOR BODY	01	
002	0503013155	1/4" X 1.1/4" COTTERPIN	02	
003	0511062153	3/4" X 13.6" SQUARE SHAFT	01	
004	0503030275	AGRICULTURAL BEARING	02	
005	0501013774	GREASE SEAL	01	
006	0503030303	SUPPORT WASHER	01	
007	0501010637	FLAT WASHER	01	
008	0503011962	GREASE FITTING	01	
009	0503031165	LEFT HELICOID CONDUCTOR	01	
010	0521010309	SLEEVE INTER	01	
011	0503012826	CREASE FITTING	01	

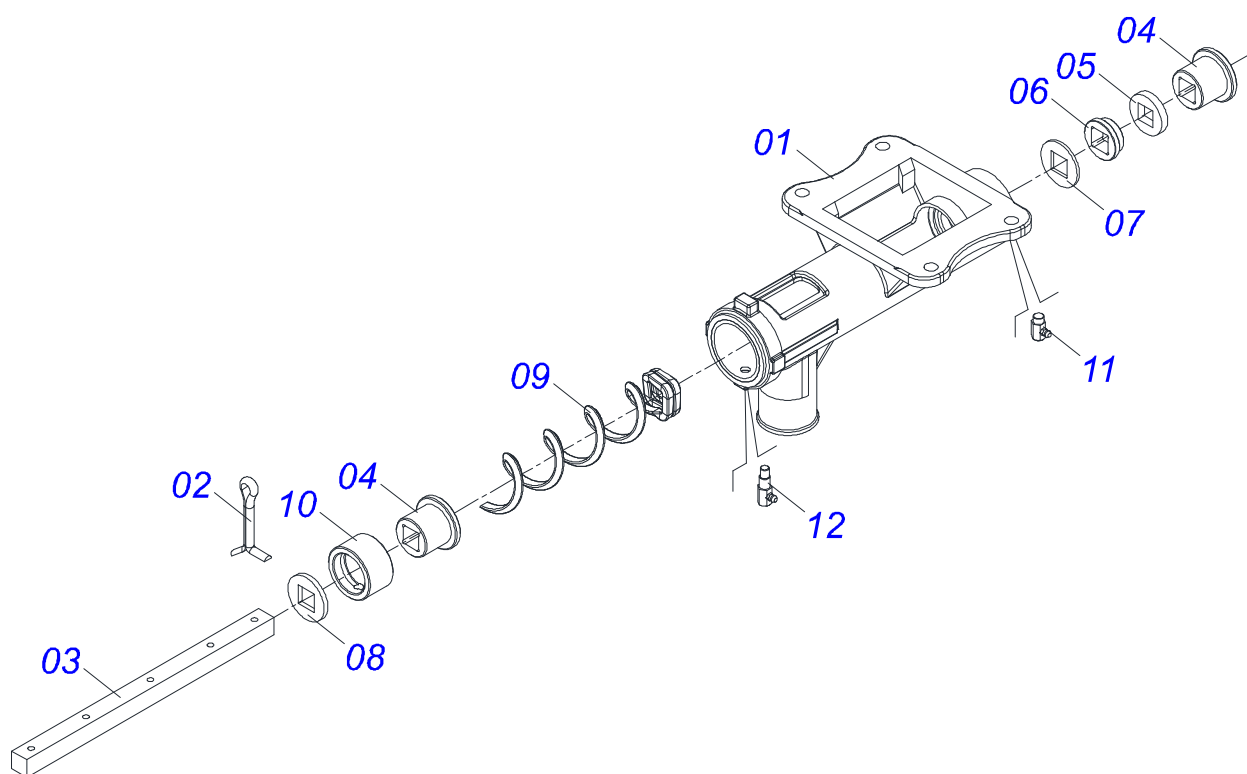


Item	Code	Description	See page	QT
01	0501110453	FERTILIZER DISTRIBUTOR BODY		01
02	0503013155	1/4" X 1.1/4" COTTERPIN		02
03	0501017391	3/4" X 14.3" SQUARE SHAFT		01
04	0503030275	AGRICULTURAL BEARING		02
05	0501013774	GREASE SEAL		01
06	0503030303	SUPPORT WASHER		01
07	0501010637	FLAT WASHER		01
08	0511017137	FLAT WASHER		01
09	0503031165	LEFT HELICOID CONDUCTOR		01
10	0521010309	SLEEVE INTER		01
11	0503012826	CREASE FITTING		01
12	0503011962	GREASE FITTING		01

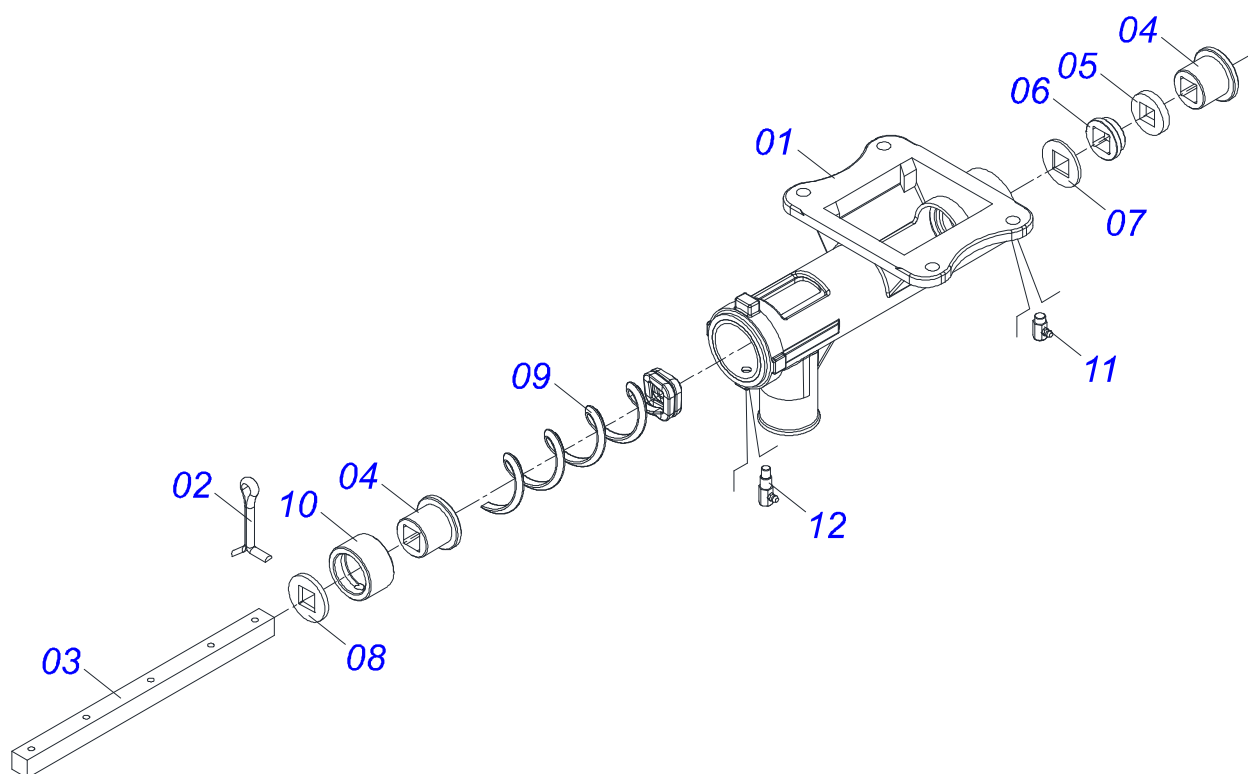


Item	Code	Description	See page	QT
001	0501110453	FERTILIZER DISTRIBUTOR BODY		01
002	0503013155	1/4" X 1.1/4" COTTERPIN		02
003	0501017393	3/4" X 18.1"SQUARE SHAFT		01
004	0503030275	AGRICULTURAL BEARING		02
005	0501013774	GREASE SEAL		01
006	0503030303	SUPPORT WASHER		01
007	0501010637	FLAT WASHER		01
008	0511017137	FLAT WASHER		01
009	0503031165	LEFT HELICOID CONDUCTOR		01
010	0521010309	SLEEVE INTER		01
011	0503012826	CREASE FITTING		01
012	0503011962	GREASE FITTING		01

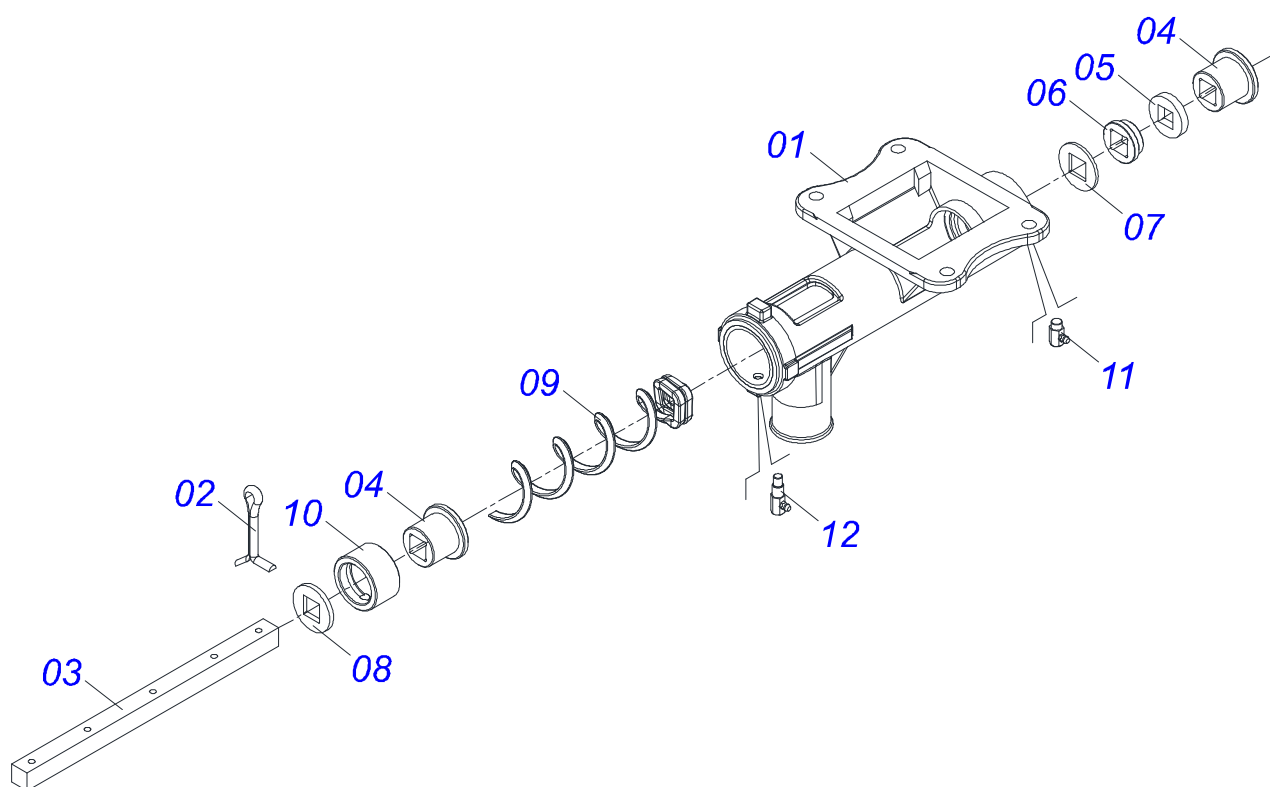


Item	Code	Description	See page	QT
001	0501110453	FERTILIZER DISTRIBUTOR BODY	01	
002	0503013155	1/4" X 1.1/4" COTTERPIN	02	
003	0511011253	3/4" X 18.4" LH SQUARE SHAFT	01	
004	0503030275	AGRICULTURAL BEARING	02	
005	0501013774	GREASE SEAL	01	
006	0503030303	SUPPORT WASHER	01	
007	0501010637	FLAT WASHER	01	
008	0511017137	FLAT WASHER	01	
009	0503031165	LEFT HELICOID CONDUCTOR	01	
010	0521010309	SLEEVE INTER	01	
011	0503012826	CREASE FITTING	01	
012	0503011962	GREASE FITTING	01	

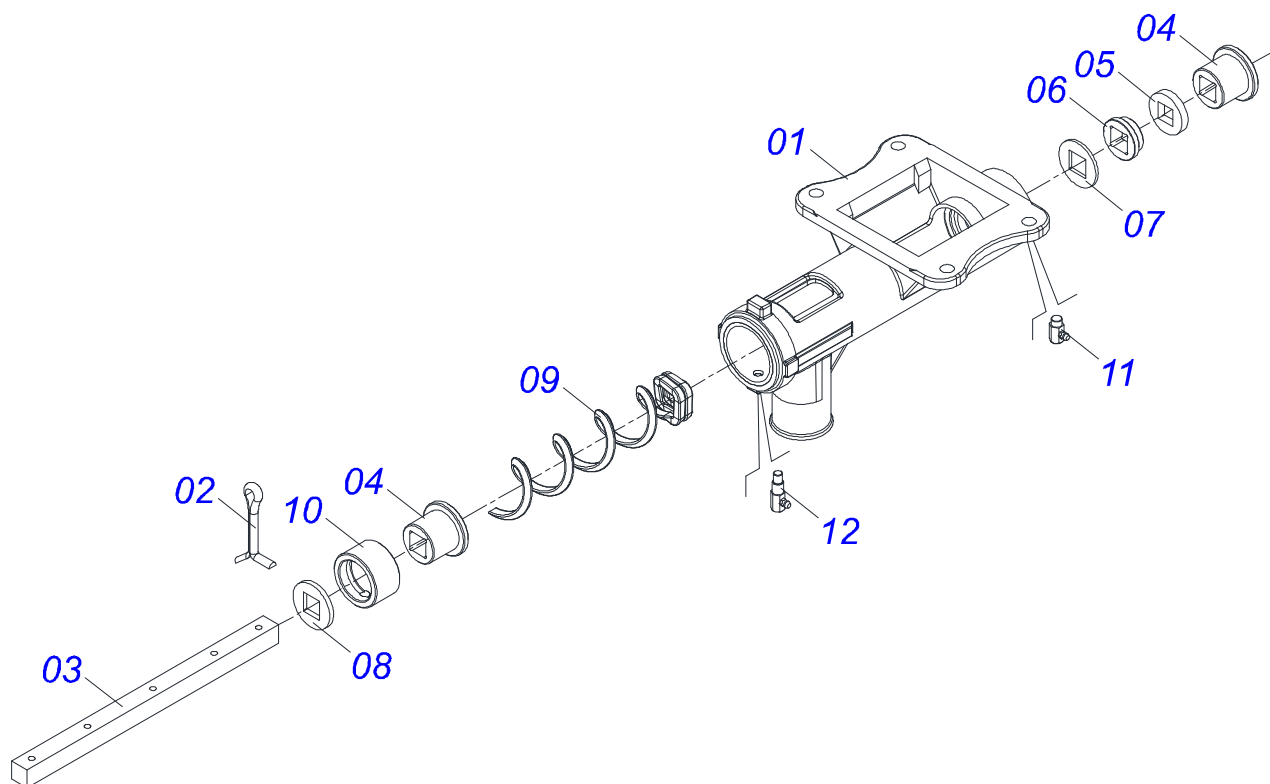

Item	Code	Description	See page	QT
001	0501110453	FERTILIZER DISTRIBUTOR BODY		01
002	0503013155	1/4" X 1.1/4" COTTERPIN		02
003	0501017394	3/4" X 19.4" SQUARE SHAFT		01
004	0503030275	AGRICULTURAL BEARING		02
005	0501013774	GREASE SEAL		01
006	0503030303	SUPPORT WASHER		01
007	0501010637	FLAT WASHER		01
008	0511017137	FLAT WASHER		01
009	0503031165	LEFT HELICOID CONDUCTOR		01
010	0521010309	SLEEVE INTER		01
011	0503012826	CREASE FITTING		01
012	0503011962	GREASE FITTING		01

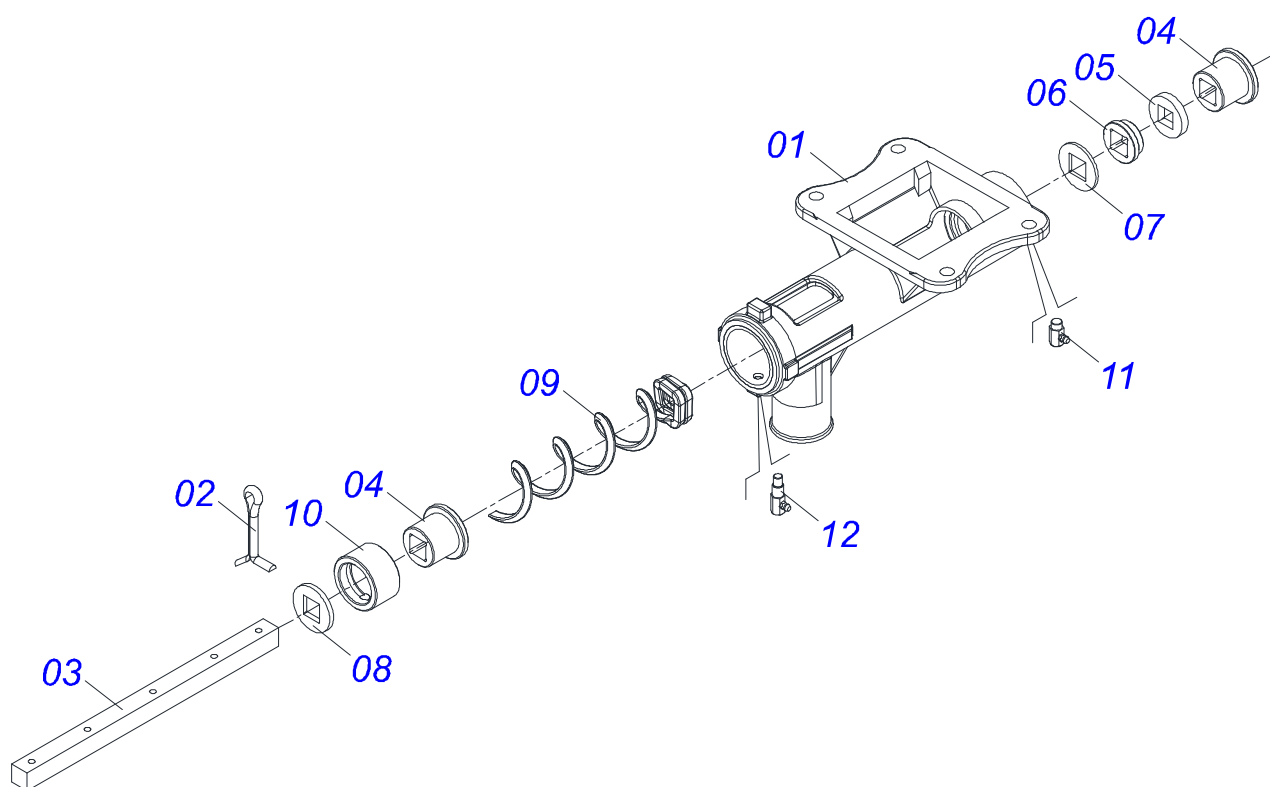


Item	Code	Description	See page	QT
001	0501110453	FERTILIZER DISTRIBUTOR BODY	01	
002	0503013155	1/4" X 1.1/4" COTTERPIN	02	
003	0511011252	3/4" X 24.4"SQUARE SHAFT	01	
004	0503030275	AGRICULTURAL BEARING	02	
005	0501013774	GREASE SEAL	01	
006	0503030303	SUPPORT WASHER	01	
007	0501010637	FLAT WASHER	01	
008	0511017137	FLAT WASHER	01	
009	0503031165	LEFT HELICOID CONDUCTOR	01	
010	0521010309	SLEEVE INTER	01	
011	0503012826	CREASE FITTING	01	
012	0503011962	GREASE FITTING	01	

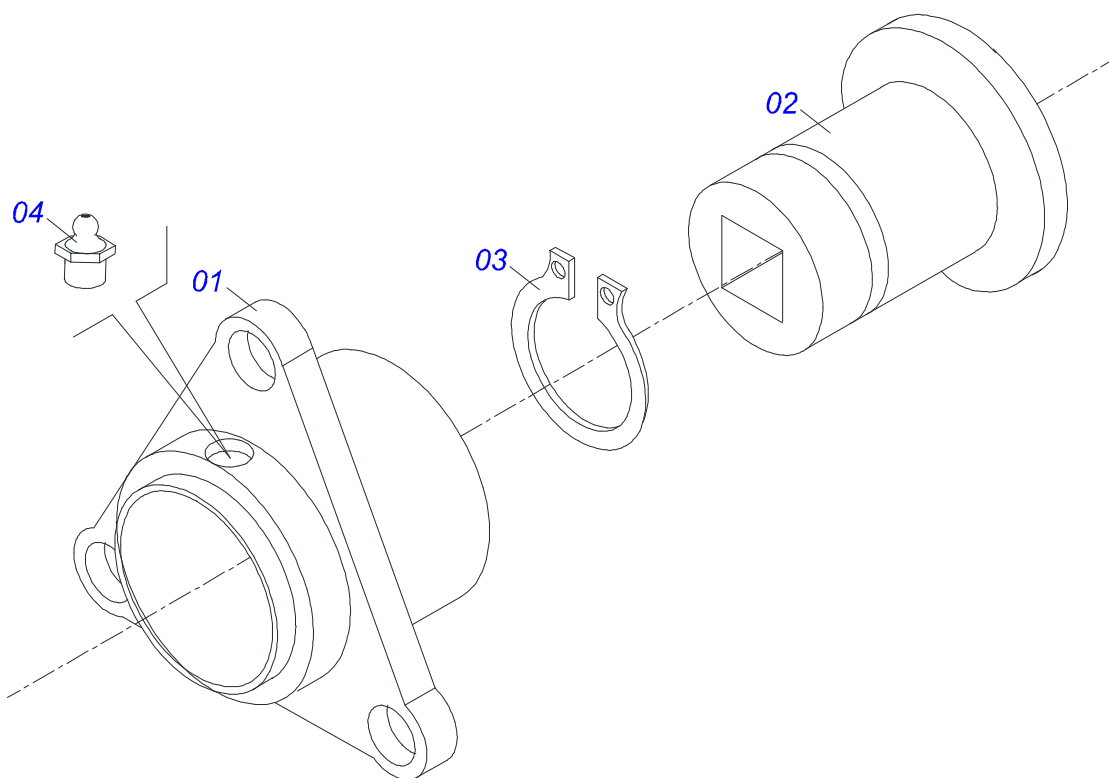

Item	Code	Description	See page	QT
001	0501110001	BOX BEARING ASSY		01
002	0502040379	FERTILIZER BOX BEARINGREEL		01
003	0503010372	501050 CLAMPING RING (FOR AXLE)		01
004	0503010002	1800 GREASE FITTING		01

LEFT FETILIZER BOX ASSY

0909092118

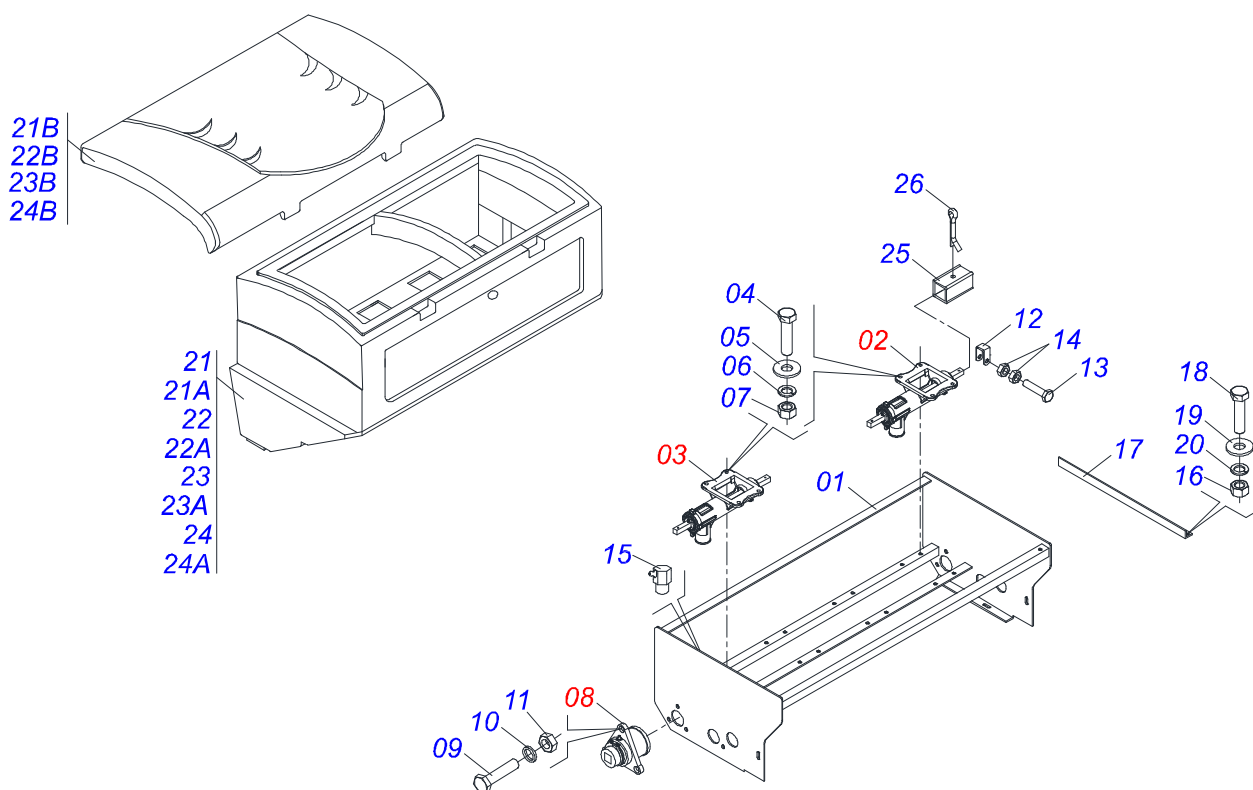


Item	Code	Description	See page	08	09	10	12
00	0501055136	FERTILIZER LEFT BOX ASSY		01	00	00	00
00.	0501055138	FERTILIZER LEFT BOX ASSY		00	01	00	00
00..	0501055140	FERTILIZER LEFT BOX ASSY		00	00	01	00
00...	0501055142	FERTILIZER LEFT BOX ASSY		00	00	00	01
01	0511060966	FERTILIZER BEAN LEFT SUPPORT		01	00	00	00
01.	0511061068	FERTILIZER BEAN LEFT SUPPORT		00	01	00	00
01..	0511061020	FERTILIZER BEAN LEFT SUPPORT		00	00	01	00
01...	0511061063	FERTILIZER BEAN LEFT SUPPORT		00	00	00	01
02	0501052400	RIGHT FERTILIZER METERING	45	03	02	04	04
03	0501052421	RIGHT FERTILIZER METERING	46	01	00	00	00
03.	0501052461	RIGHT FERTILIZER METERING	47	00	01	00	00
03..	0501052448	RIGHT FERTILIZER METERING	48	00	00	01	01
03...	0501058403	LH FERTILIZER METERING	42	00	01	00	00
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16	16	20	24
05	0501010984	FLAT WASHER		16	16	20	24
06	0503010025	3/8" SPRING WASHER		16	16	20	24
07	0503010026	3/8" NUT		16	16	20	24
08	0501050274	BOX BEARING ASSY	43	01	01	01	01
09	0501010161	1/2" X 1.1/4" BOLT		03	03	03	03
10	0503010019	1/2" SPRING WASHER		03	03	03	03
11	0503010060	1/2" NUT		03	03	03	03
12	0501017476	DRAGING		03	03	04	04
13	0503010397	5/16" X 1-3/4" BOLT		03	03	04	04
14	0503010337	5/16" NUT		06	06	08	08
15	0503010004	1890 GREASE FITTING		01	01	01	01
16	0503010026	3/8" NUT		04	04	04	04
17	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		02	02	02	02
18	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04	04	04	04
19	0501010984	FLAT WASHER		12	12	12	12
20	0503010025	3/8" SPRING WASHER		04	04	04	04
21	0503060637	COVER BOX LEFT FERTILIZER		01	00	00	00




LEFT FETILIZER BOX ASSY

0909092118


Item	Code	Description	See page	08	09	10	12
21A	0503031949	SILO LEFT FERTILIZER		01	00	00	00
21B	0503031950	TUBE SILO FERTILIZER		02	00	00	00
22	0503060639	COVER BOX LEFT FERTILIZER		00	01	00	00
22A	0503031952	BEAM LEFT FERTILIZER		00	01	00	00
22B	0503031953	TUBE SILO FERTILIZER		00	02	00	00
23	0503060641	COVER BOX LEFT FERTILIZER		00	00	01	00
23A	0503031955	SILO LEFT FERTILIZER		00	00	01	00
23B	0503031956	TUBE SILO FERTILIZER		00	00	02	00
24	0503060643	COVER BOX LEFT FERTILIZER		00	00	00	01
24A	0503031958	BEAM LEFT FERTILIZER		00	00	00	01
24B	0503031959	TUBE SILO FERTILIZER		00	00	00	02
25	0521013058	3/4" SQUARE SHAFT 2" GUIDE		00	00	00	01
26	0503010571	1/4" X 1.1/2 COTTERPIN		00	00	00	01

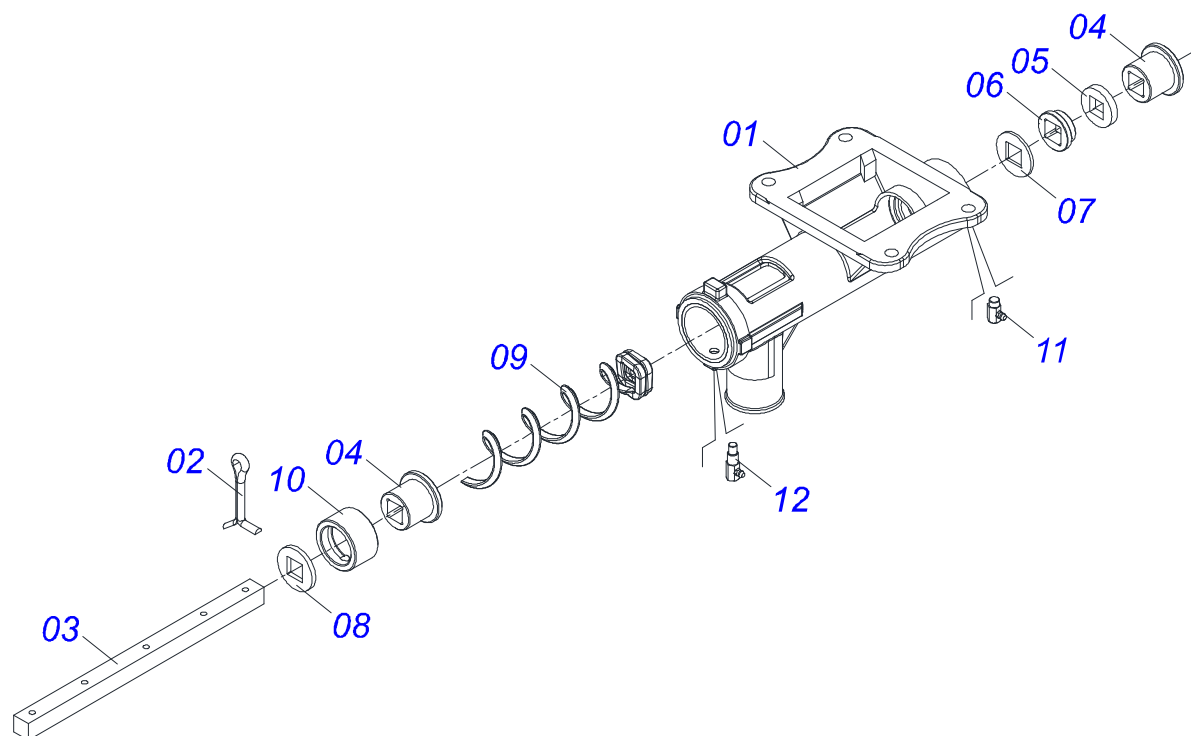


Item	Code	Description	See page	QT
01	0501110453	FERTILIZER DISTRIBUTOR BODY		01
02	0503013155	1/4" X 1.1/4" COTTERPIN		02
03	0501017391	3/4" X 14.3" SQUARE SHAFT		01
04	0503030275	AGRICULTURAL BEARING		02
05	0501013774	GREASE SEAL		01
06	0503030303	SUPPORT WASHER		01
07	0501010637	FLAT WASHER		01
08	0511017137	FLAT WASHER		01
09	0503031164	RIGHT HELICOID CONDUCTOR		01
10	0521010309	SLEEVE INTER		01
11	0503012826	CREASE FITTING		01
12	0503011962	GREASE FITTING		01

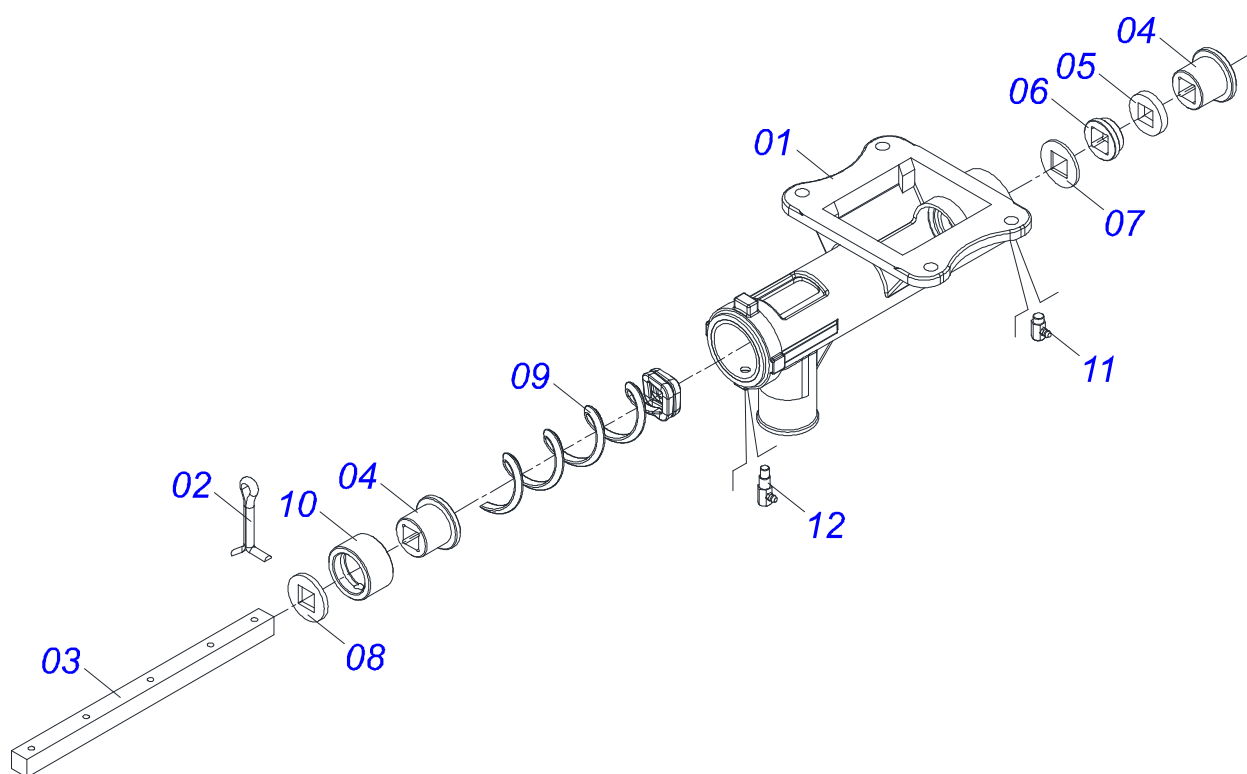


Item	Code	Description	See page	QT
001	0501110453	FERTILIZER DISTRIBUTOR BODY	01	
002	0503013155	1/4" X 1.1/4" COTTERPIN	02	
003	0501017393	3/4" X 18.1"SQUARE SHAFT	01	
004	0503030275	AGRICULTURAL BEARING	02	
005	0501013774	GREASE SEAL	01	
006	0503030303	SUPPORT WASHER	01	
007	0501010637	FLAT WASHER	01	
008	0511017137	FLAT WASHER	01	
009	0503031164	RIGHT HELICOID CONDUCTOR	01	
010	0521010309	SLEEVE INTER	01	
011	0503012826	CREASE FITTING	01	
012	0503011962	GREASE FITTING	01	

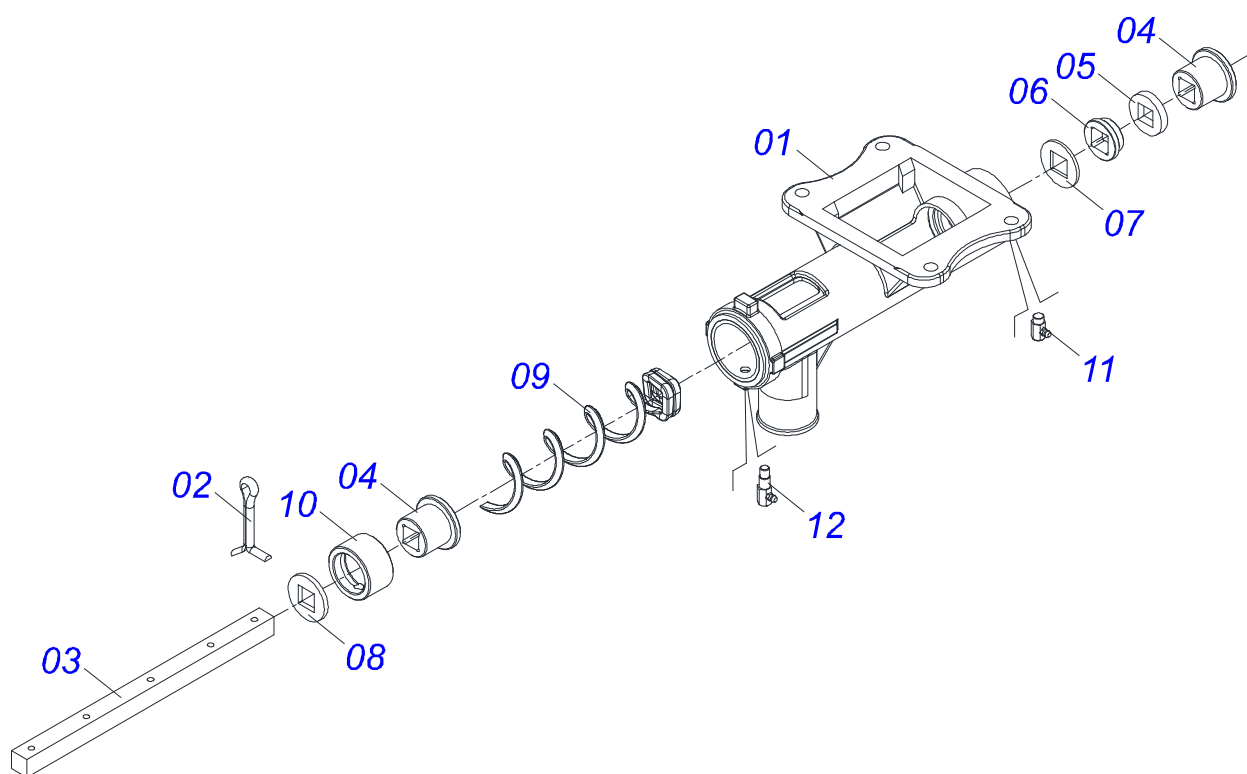


Item	Code	Description	See page	QT
001	0501110453	FERTILIZER DISTRIBUTOR BODY		01
002	0503013155	1/4" X 1.1/4" COTTERPIN		02
003	0511011253	3/4" X 18.4" LH SQUARE SHAFT		01
004	0503030275	AGRICULTURAL BEARING		02
005	0501013774	GREASE SEAL		01
006	0503030303	SUPPORT WASHER		01
007	0501010637	FLAT WASHER		01
008	0511017137	FLAT WASHER		01
009	0503031164	RIGHT HELICOID CONDUCTOR		01
010	0521010309	SLEEVE INTER		01
011	0503012826	CREASE FITTING		01
012	0503011962	GREASE FITTING		01

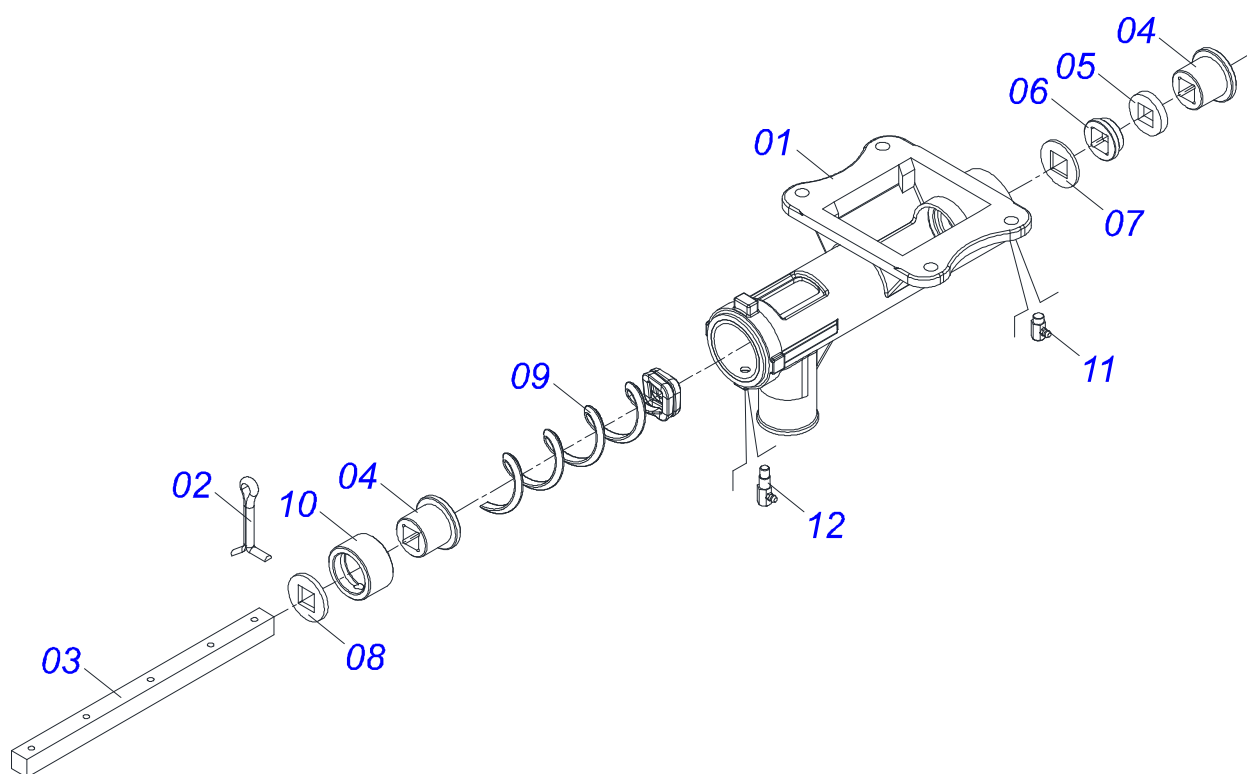


Item	Code	Description	See page	QT
001	0501110453	FERTILIZER DISTRIBUTOR BODY		01
002	0503013155	1/4" X 1.1/4" COTTERPIN		02
003	0501017394	3/4" X 19.4" SQUARE SHAFT		01
004	0503030275	AGRICULTURAL BEARING		02
005	0501013774	GREASE SEAL		01
006	0503030303	SUPPORT WASHER		01
007	0501010637	FLAT WASHER		01
008	0511017137	FLAT WASHER		01
009	0503031164	RIGHT HELICOID CONDUCTOR		01
010	0521010309	SLEEVE INTER		01
011	0503012826	CREASE FITTING		01
012	0503011962	GREASE FITTING		01

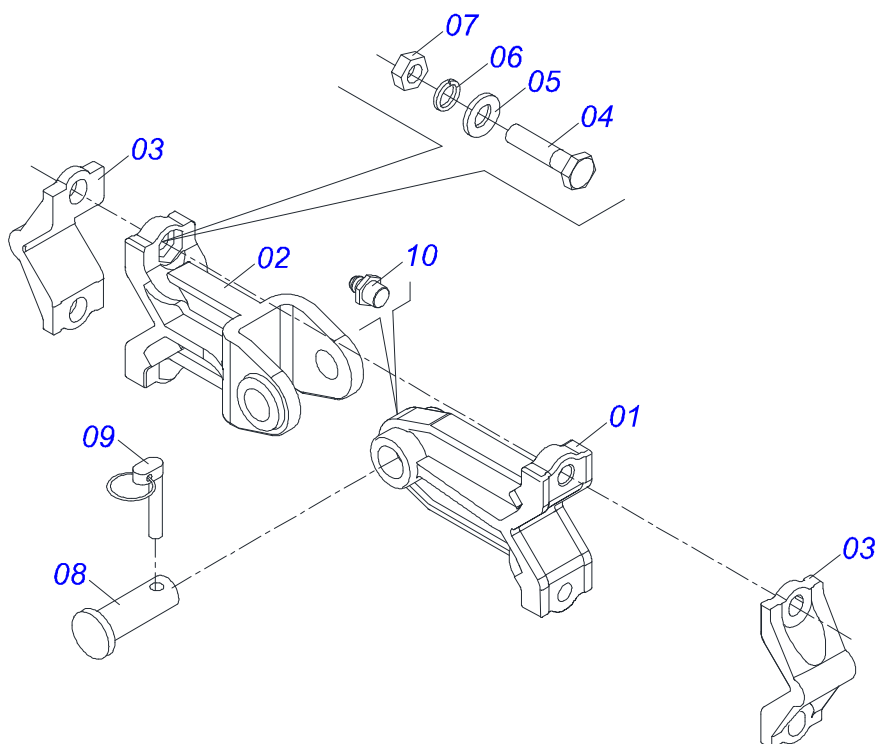


Item	Code	Description	See page	08	09	10	12
00	0511055054	SET SUPPORT FRONT BACK HEADER		01	01	01	00
00.	0511055180	SET SUPPORT FRONT/REAR		00	00	00	01
01	0502012329	DRAWBAR FIXATION REAR SUPPORT		02	02	02	04
02	0502012328	DRAWBAR SUPPORT FRONT FIXATION		02	02	02	04
03	0502012330	SUPPORT FIXER PIVOT		04	04	04	08
04	0503011084	3/4" X 5" BOLT		08	08	08	16
05	0501010322	FLAT WASHER		08	08	08	16
06	0503010023	3/4" SPRING WASHER		08	08	08	16
07	0503010014	3/4" NUT		08	08	08	16
08	0561014393	COUPLING SHAFT		02	02	02	04
09	0503030119	LOCK PIN		04	04	04	08
10	0503010002	1800 GREASE FITTING		02	02	02	02

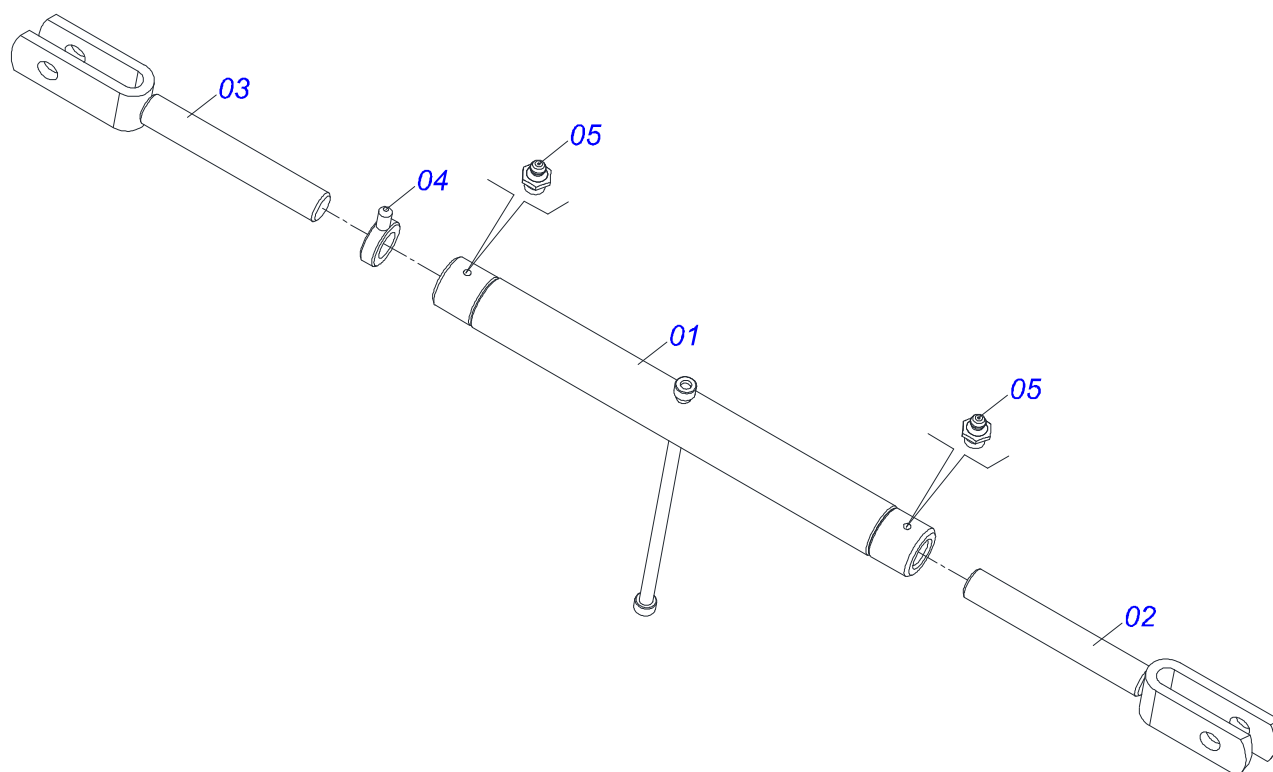


Item	Code	Description	See page	QT
01	0501067353	508 PST3 TURNBUCKLE		01
02	0511062887	RIGHT TURNBUCKLE		01
03	0511062888	LH TURNBUCKLE		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

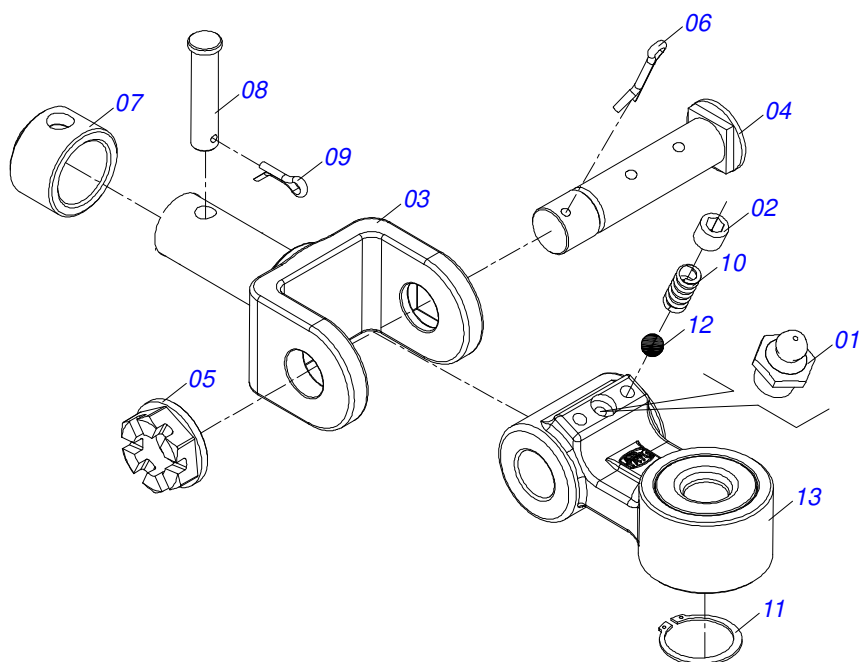

Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0581019654	ASSY BOLT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2 COTTERPIN		01
10	0503033731	COMPRESSION SPRING LEFT		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

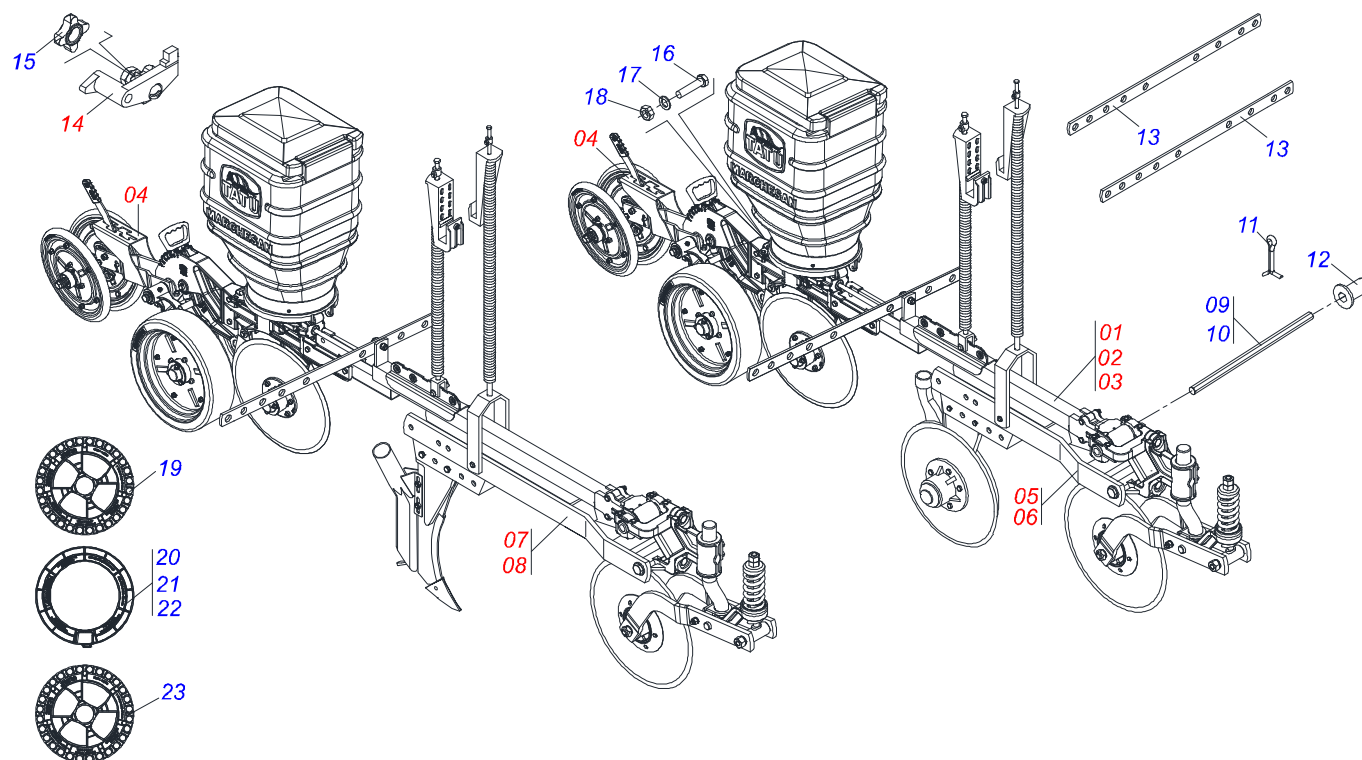


Item	Code	Description	See page	08	09	10	12
01	0511057058	LONG SEED LINE ARM	55	04	04	05	06
02	0511057057	SEED SHORT LINE	53	04	04	05	06
03	0511057059	SHORT SEED ROW ARM	54	00	01	00	00
04	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	67	08	09	10	12
05	0511053252	FERTILIZER SHORT ROW WITH LEFT DDD/18" DC	83	04	05	05	06
06	0511053253	FERTILIZER LONG ROW WITH RIGHT DDD/18" DC	84	04	04	05	06
07	0909092371	SHORT FERTILIZER ROW WITH SHANK	85	04	05	05	06
08	0909092373	LONG FERTILIZER ROW WITH SHANK	86	04	04	05	06
09	0501017440	5/8" X 60.4" HEX AXLE		01	00	00	00
09.	0511010749	5/8" X 71.8" HEX AXLE		00	01	00	00
09..	0501017442	5/8" X 76.1" HEX AXLE		00	00	01	00
09...	0501017432	5/8" X 95.8" HEX AXLE		00	00	00	01
10	0501017441	5/8" X 69.3" HEX AXLE		01	00	00	00
10.	0511010750	5/8" X 79.1" HEX AXLE		00	01	00	00
10..	0501017443	5/8" X 85" HEX AXLE		00	00	01	00
10...	0501017433	5/8" X 2660" HEX AXLE		00	00	00	01
11	0503010257	1/8" X 1" COTTERPIN		02	02	02	02
12	0502040723	5/8 HEX AXLE BEARING SLEEVE 5/8		02	02	02	02
13	0501018652	CORN STABILIZER BAR		03	03	04	05
13.	0501013714	STABILIZER BAR		00	04	05	09
14	0501050120	LARGER WALKING BEAM ASSY	99	04	05	06	10
15	0503030558	PULLEY 4Z CORN PLASTIC		04	05	06	10
16	0503010905	1/2" X 2-1/4" BOLT		08	10	12	20
17	0503010019	1/2" SPRING WASHER		08	10	12	28
18	0503010060	1/2" NUT		08	10	12	28
19	0503016204	CORN DISK 12 ORANGE		04	05	06	10
20	0503016214	RING CORN (APOLLO740)		04	05	06	10
21	0503016220	RING TO SOYBEANS (APOLLO 745)		04	05	06	10
22	0503016221	RING TO SOYBEANS (APOLLO 571)		04	05	06	10
23	0503016218	DISC OF SOYBEAN		04	05	06	10

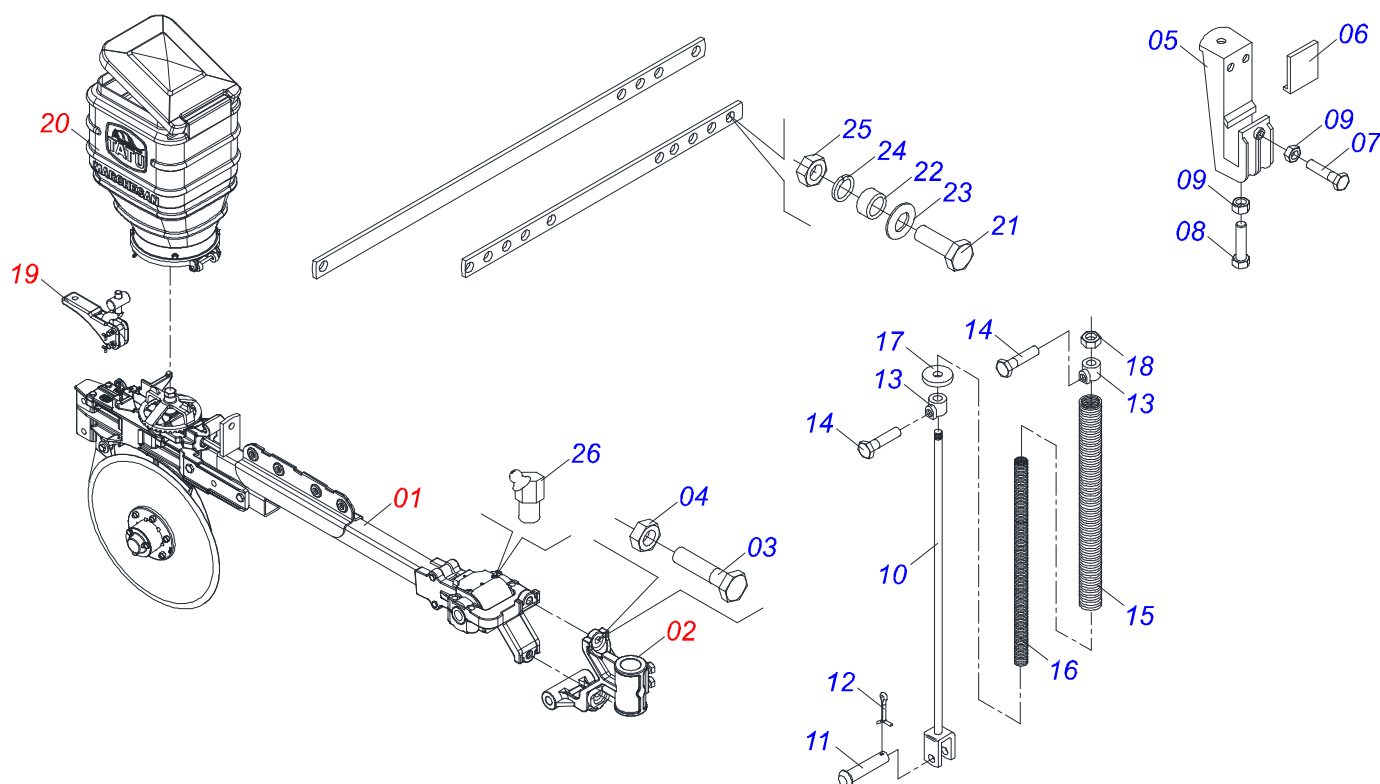


Item	Code	Description	See page	QT
01	0511056600	FRONT LINE SEED SHORT DDD RIGHT	56	01
02	0511058212	ASSY LINE SUPPORT FERTILIZER	98	01
03	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		02
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0502010890	SPRING ROD SUPPORT		01
06	0502010891	SPRING CHOCK SUPPORT VARON		01
07	0503030679	BOLT 1/2 UNC X 1.1/4 CS G.5 ZN		01
08	0503030678	BOLT 1/2 UNC X 1.1/2 CS G.5 ZN		01
09	0503010060	1/2" NUT		02
10	0511060376	SEEP SPRING GUIDE		01
11	0521010542	COUPLING SHAFT		01
12	0503010257	1/8" X 1" COTTERPIN		01
13	0502040534	SPRING GUIDE BUSHING LOCK		02
14	0501018535	1/2 X 1 BOLT		02
15	0503031340	1.7"X 19" X 0.3" COMPRESSION SPRING		01
16	0503031339	1" X 19" X 0.1" COMPRESSION SPRING		01
17	0501013753	FLAT WASHER		01
18	0503010013	5/8" NUT		01
19	0511052024	FAST CLOSING SET	64	01
20	0511057017	SEED SYSTEM ASSY	62	01
21	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
22	0521010505	13,50 X 19,00 X 21,50 SLEEVE		01
23	0511017302	FLAT WASHER		01
24	0503010019	1/2" SPRING WASHER		01
25	0503010060	1/2" NUT		01
26	0503011099	GREASE FITTING		02

SHORT SEED ROW ARM


0511057059

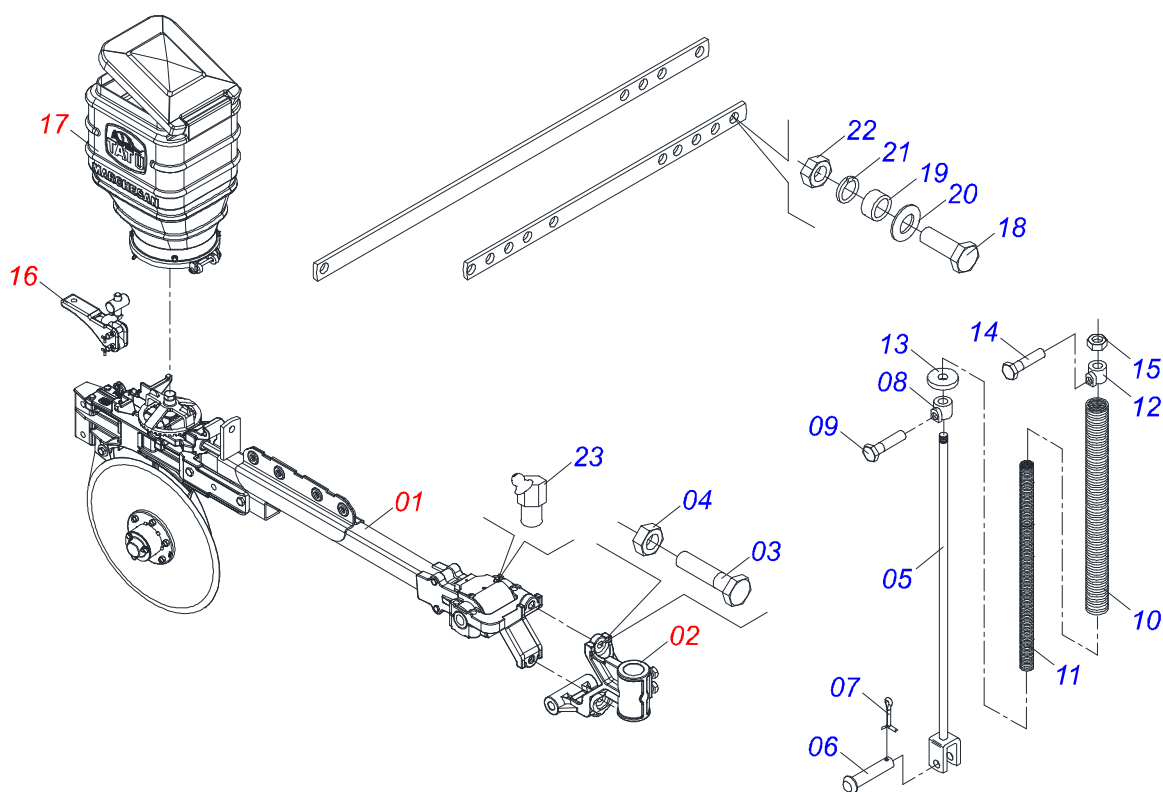


Item	Code	Description	See page	QT
001	0511056600	FRONT LINE SEED SHORT DDD RIGHT	56	01
002	0511058212	ASSY LINE SUPPORT FERTILIZER	98	01
003	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		02
004	0503012412	5/8 UNC SELF LOCKING NUT		02
005	0511060376	SEEP SPRING GUIDE		01
006	0521010542	COUPLING SHAFT		01
007	0503010257	1/8" X 1" COTTERPIN		01
008	0502040534	SPRING GUIDE BUSHING LOCK		01
009	0501018535	1/2 X 1 BOLT		01
010	0503031340	1.7"X 19" X 0.3" COMPRESSION SPRING		01
011	0503031339	1" X 19" X 0.1" COMPRESSION SPRING		01
012	0502040534	SPRING GUIDE BUSHING LOCK		01
013	0501013753	FLAT WASHER		01
014	0501018535	1/2 X 1 BOLT		01
015	0503010013	5/8" NUT		01
016	0511052024	FAST CLOSING SET	64	01
017	0511057017	SEED SYSTEM ASSY	62	01
018	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
019	0521010505	13,50 X 19,00 X 21,50 SLEEVE		01
020	0511017302	FLAT WASHER		01
021	0503010019	1/2" SPRING WASHER		01
022	0503010060	1/2" NUT		01
023	0503011099	GREASE FITTING		02

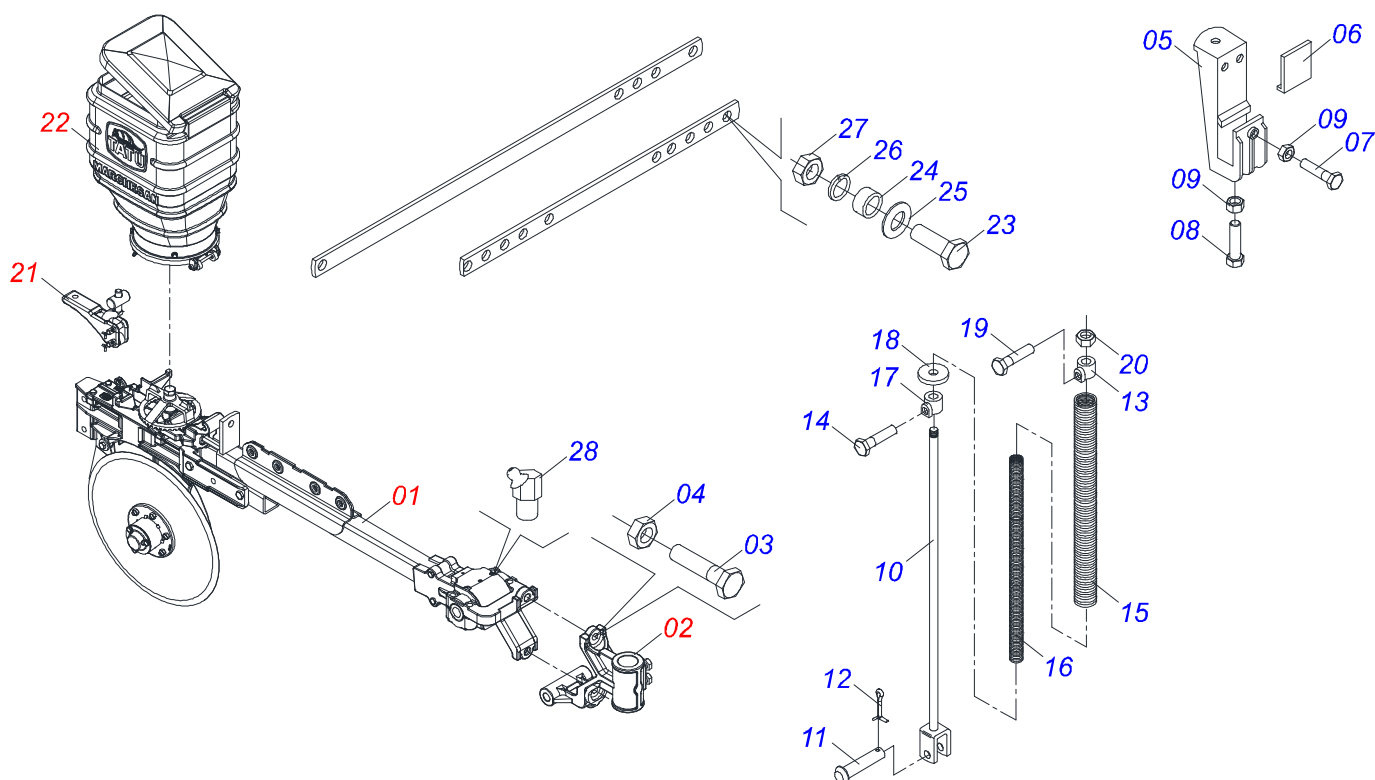

Item	Code	Description	See page	QT
001	0511056601	LONG SEED ROW FRONT DDD LEFT	57	01
002	0511058212	ASSY LINE SUPPORT FERTILIZER	98	01
003	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		02
004	0503012412	5/8 UNC SELF LOCKING NUT		02
005	0502010890	SPRING ROD SUPPORT		01
006	0502010891	SPRING CHOCK SUPPORT VARON		01
007	0503030679	BOLT 1/2 UNC X 1.1/4 CS PC G.5 ZN		01
008	0503030678	BOLT 1/2 UNC X 1.1/2 CS PC G.5 ZN		01
009	0503010060	1/2" NUT		02
010	0511060376	SEEP SPRING GUIDE		01
011	0521010542	COUPLING SHAFT		01
012	0503010257	1/8" X 1" COTTERPIN		01
013	0502040534	SPRING GUIDE BUSHING LOCK		01
014	0501018535	1/2 X 1 BOLT		01
015	0503031340	1.7"X 19" X 0.3" COMPRESSION SPRING		01
016	0503031339	1" X 19" X 0.1" COMPRESSION SPRING		01
017	0502040534	SPRING GUIDE BUSHING LOCK		01
018	0501013753	FLAT WASHER		01
019	0501018535	1/2 X 1 BOLT		01
020	0503010013	5/8" NUT		01
021	0511052024	FAST CLOSING SET	64	01
022	0511057017	SEED SYSTEM ASSY	62	01
023	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
024	0521010505	13,50 X 19,00 X 21,50 SLEEVE		01
025	0511017302	FLAT WASHER		01
026	0503010019	1/2" SPRING WASHER		01
027	0503010060	1/2" NUT		01
028	0503011099	GREASE FITTING		02

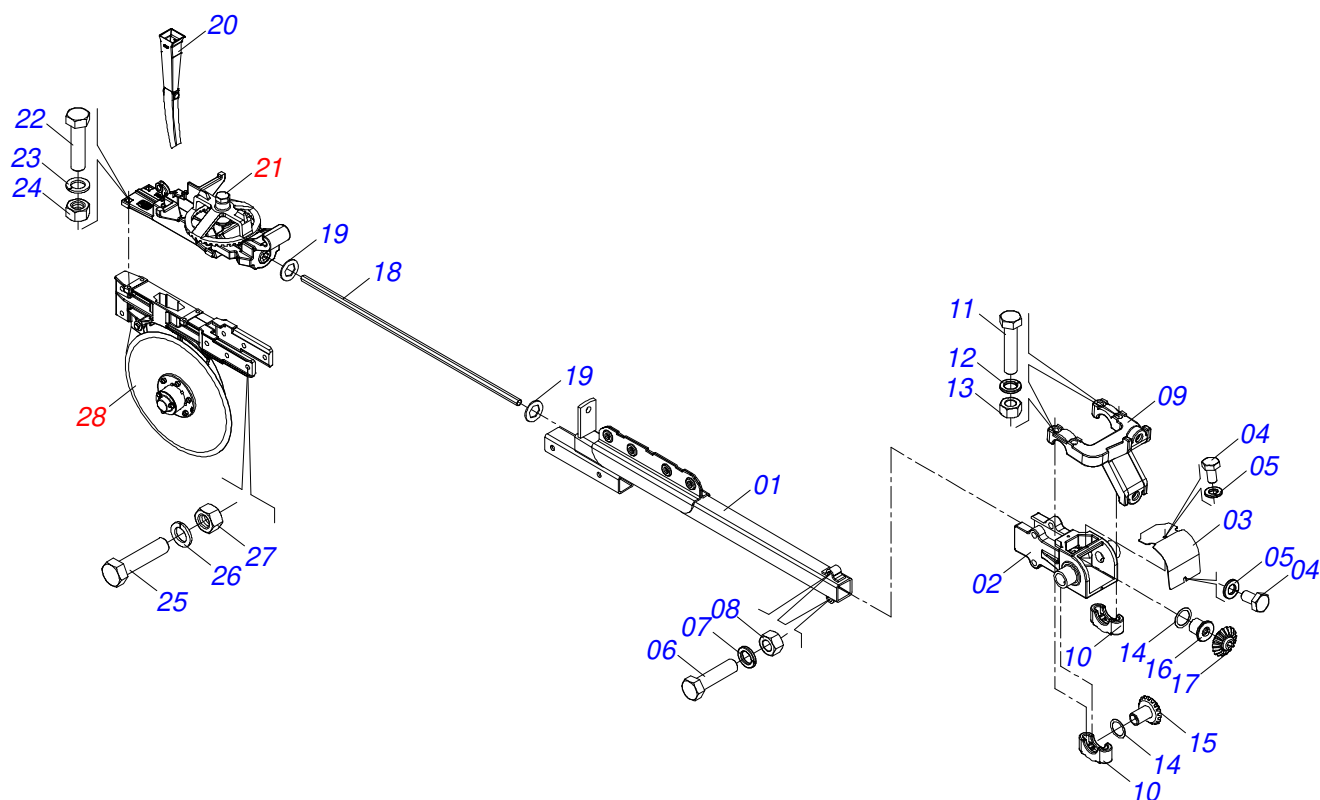


Item	Code	Description	See page	QT
01	0521062183	SHORT SEED ROW ARM		01
02	0502011830	ARTICULACION SUPPORT		01
03	0521018079	SEEP ROW DRAWBAR COVER		01
04	0503014729	1/4" UNF X 1/2" BOLT		02
05	0503011441	SPRING WASHER		02
06	0503010752	1/2" X 3.1/2" BOLT		02
07	0503011440	SPRING WASHER		02
08	0503010060	1/2" NUT		02
09	0502011561	BEARING SEMI		01
10	0502010426	UPPER BEARING SEMI		02
11	0503010479	BOLT		04
12	0503011440	SPRING WASHER		04
13	0503010060	1/2" NUT		04
14	0501013354	FLAT WASHER		02
15	0502011400	18Z CONICAL GEAR		01
16	0502011296	1/2 HEX AXLE BEARING SLEEVE		01
17	0502011505	18Z CONICAL GEAR		01
18	0521018077	1/2" X 58.6" HEX AXLE		01
19	0501013352	FLAT WASHER		04
20	0503033672	NOZZLE WITHOUT TITANIUM		01
21	0511051693	BASE FIXING SYSTEM	58	01
22	0503015920	3/8" UNC X 1.3/4" BOLT		04
23	0503011443	3/8" SPRING WASHER		04
24	0503010026	3/8" NUT		04
25	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
26	0503011440	SPRING WASHER		02
27	0503010060	1/2" NUT		02
28	0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	59	01

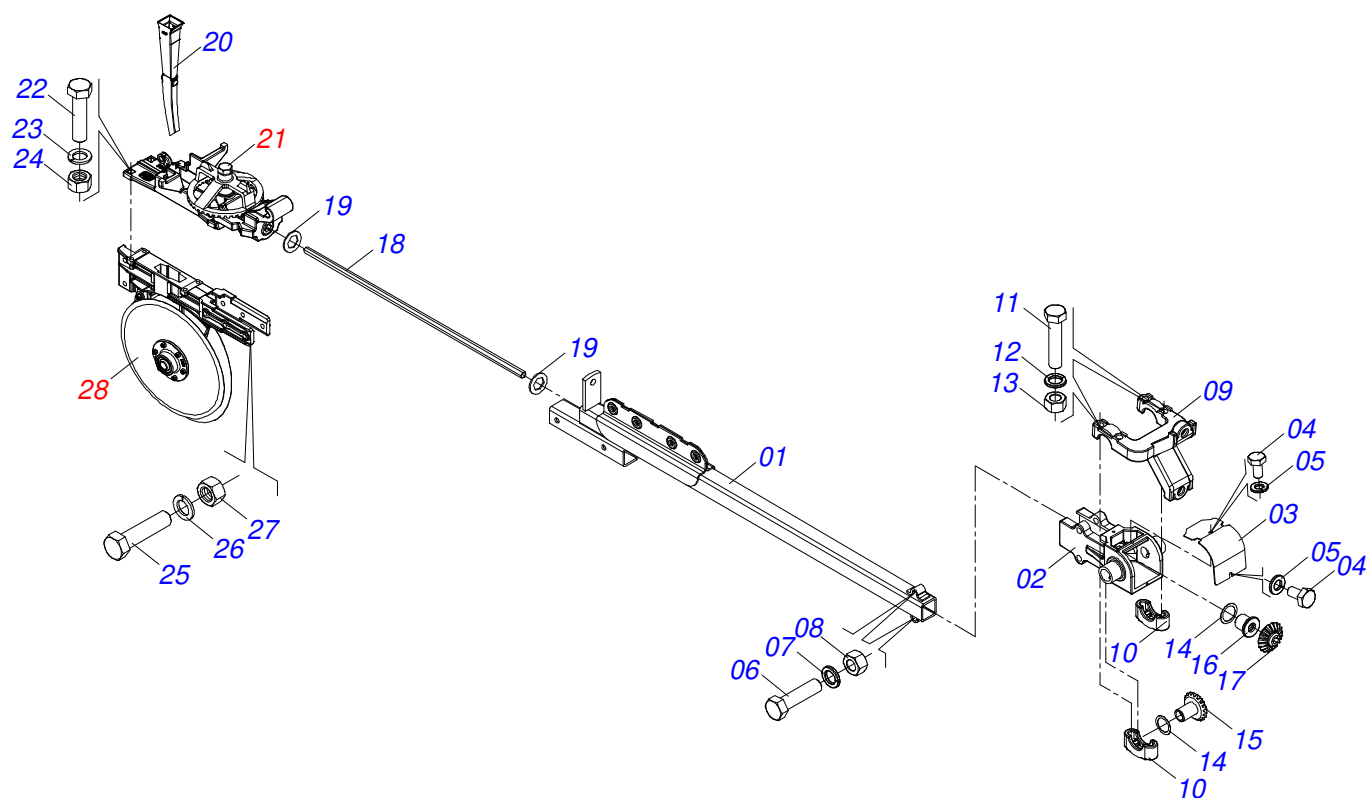


Item	Code	Description	See page	QT
01	0521062184	LONG SEED ROW ARM		01
02	0502011830	ARTICULACION SUPPORT		01
03	0521018079	SEEP ROW DRAWBAR COVER		01
04	0503014729	1/4" UNF X 1/2" BOLT		02
05	0503011441	SPRING WASHER		02
06	0503010752	1/2" X 3.1/2" BOLT		02
07	0503011440	SPRING WASHER		02
08	0503010060	1/2" NUT		02
09	0502011561	BEARING SEMI		01
10	0502010426	UPPER BEARING SEMI		02
11	0503010479	BOLT		04
12	0503011440	SPRING WASHER		04
13	0503010060	1/2" NUT		04
14	0501013354	FLAT WASHER		02
15	0502011400	18Z CONICAL GEAR		01
16	0502011296	1/2 HEX AXLE BEARING SLEEVE		01
17	0502011505	18Z CONICAL GEAR		01
18	0521018078	1/2" X 66.5" HEX AXLE		01
19	0501013352	FLAT WASHER		04
20	0503033672	NOZZLE WITHOUT TITANIUM		01
21	0511051693	BASE FIXING SYSTEM	58	01
22	0503015920	3/8" UNC X 1.3/4" BOLT		04
23	0503011443	3/8" SPRING WASHER		04
24	0503010026	3/8" NUT		04
25	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
26	0503011440	SPRING WASHER		02
27	0503010060	1/2" NUT		02
28	0511056586	15 X 15 SEED DDD LEFT	60	01

BASE FIXING SYSTEM


0511051693

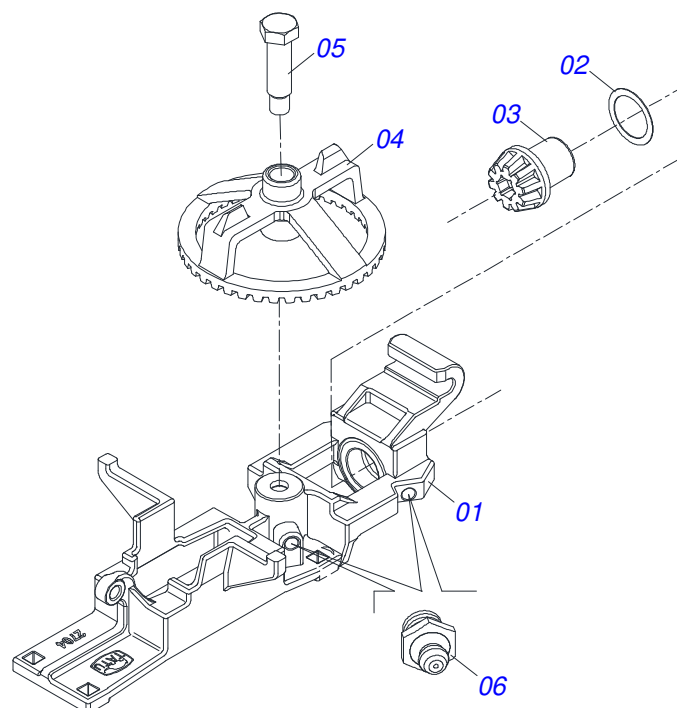


Item	Code	Description	See page	QT
01	0502012704	BASE FIXING SYSTEM		01
02	0501013354	FLAT WASHER		01
03	0502011411	10Z CONICAL GEAR		01
04	0502011418	40Z CONICAL GEAR		01
05	0511018700	AXLE		01
06	0503010002	1800 GREASE FITTING		02

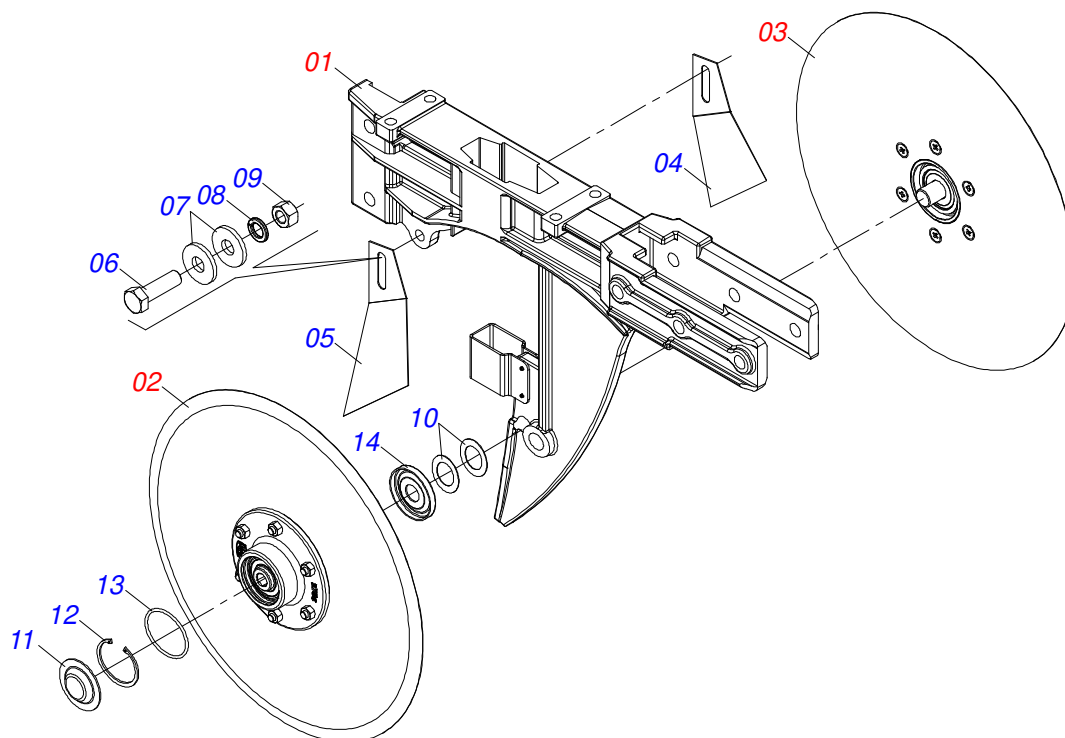


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT	61	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	65	01
03	0511053172	LEFT LOW CUBE WITH DISC 15	66	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511015098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O-RING		02
14	0511011927	DUST CLOAK		02

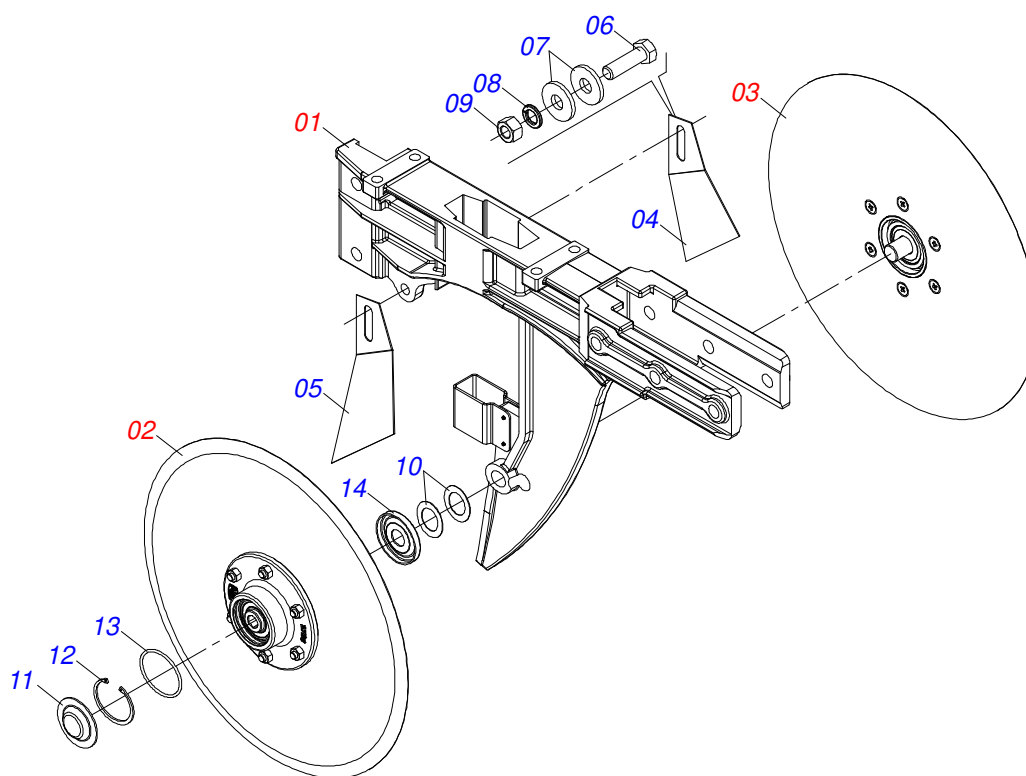

Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE		01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	65	01
03	0511053172	LEFT LOW CUBE WITH DISC 15	66	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511015098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O'RING		02
14	0511011927	DUST CLOAK		02

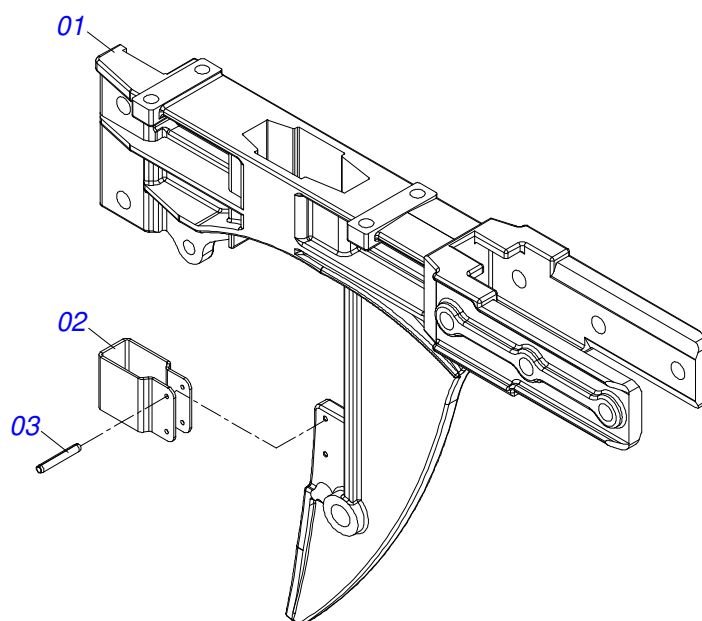


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

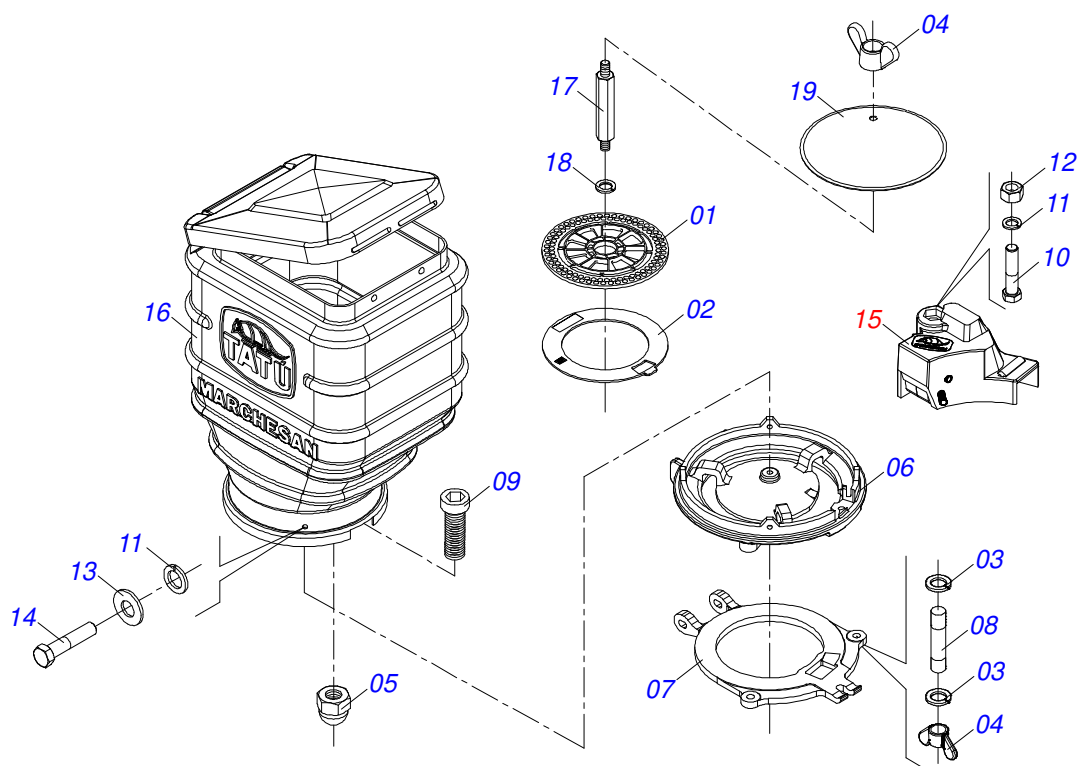


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016219	RING TO SOYBEANS		01
03	0503010025	3/8" SPRING WASHER		04
04	0503010209	3/8" UNC BUTTERFLY NUT		03
05	0503016283	M8 NUT HEX		01
06	0502020693	SUPPORT SEED BOX		01
07	0502012721	SEED DISC LOWER TRAIL		01
08	0503030083	3/8" X 3/8" X 1.6" STUD		02
09	0503016282	ALLEN BOLT		01
10	0503010675	5/16" X 2.1/4" BOLT		01
11	0503010179	LOCK WASHER		05
12	0503010337	5/16" NUT		01
13	0501010694	FLAT WASHER		04
14	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		04
15	0501051094	ASSY SEED DISTRIBUTOR	63	01
16	0503031508	COVER GREEN BEAM SEED YELLOW		01
17	0571018536	HEX PRISONER		01
18	0501013518	FLAT WASHER		02
19	0503034131	DEFLECTOR		01

ASSY SEED DISTRIBUTOR


0501051094

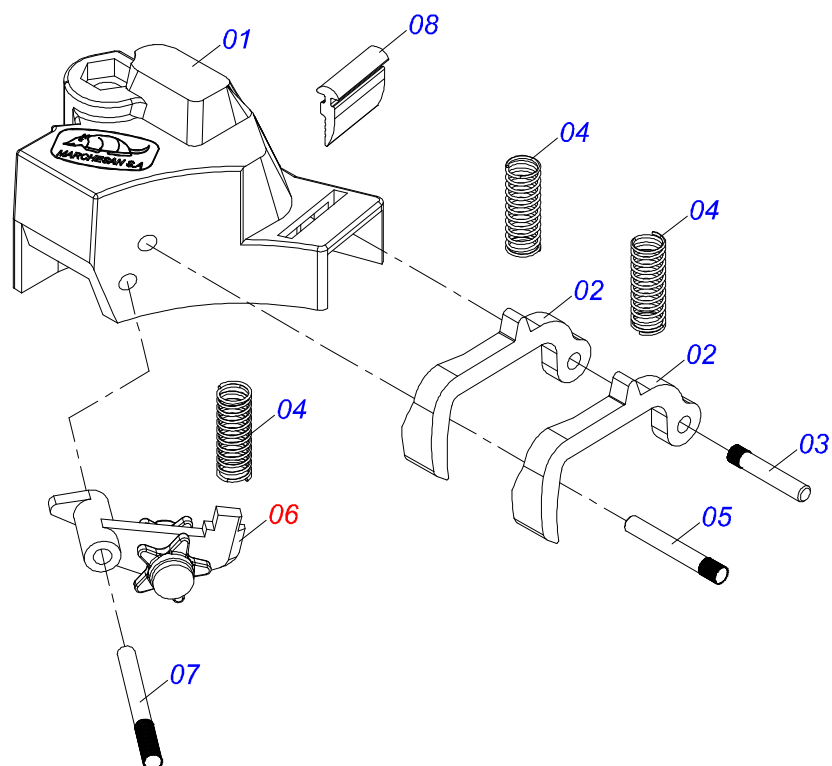


Item	Code	Description	See page	QT
01	0503030381	SEED DISTRIBUTOR BOX		01
02	0502010447	TRIGGER		02
03	0501013467	KEY AXLE		01
04	0503030378	0.4" X 1.1" X 0.03" SPRING		03
05	0501013466	KEY LIMITER AXLE		01
06	0501051119	DOUBLE PULLEY ROCKER'S		01
07	0501013468	ROCKER ARM AXLE, OF THE PULLEY		01
08	0503030377	SCRAPER		01

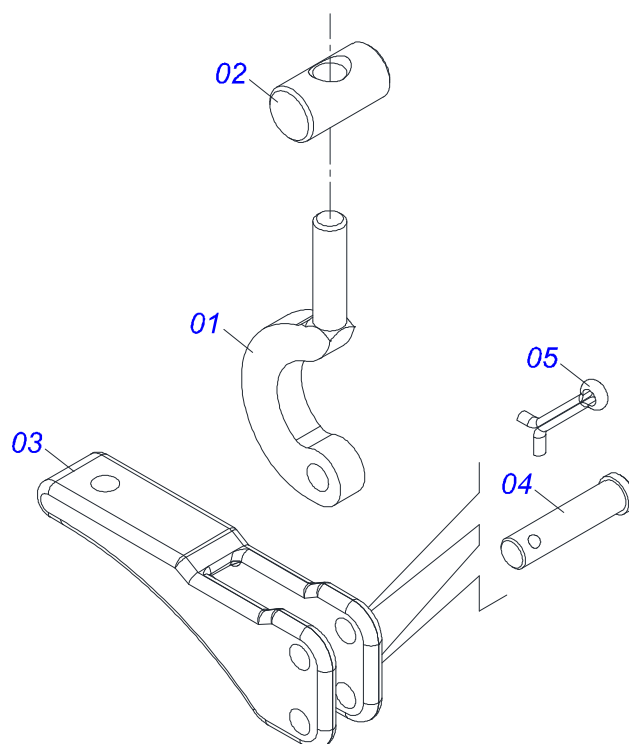


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

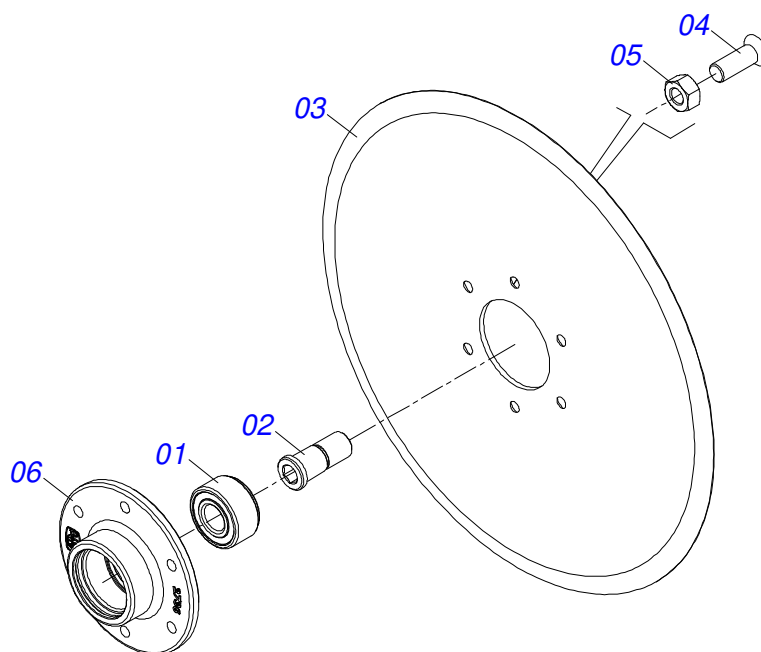


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

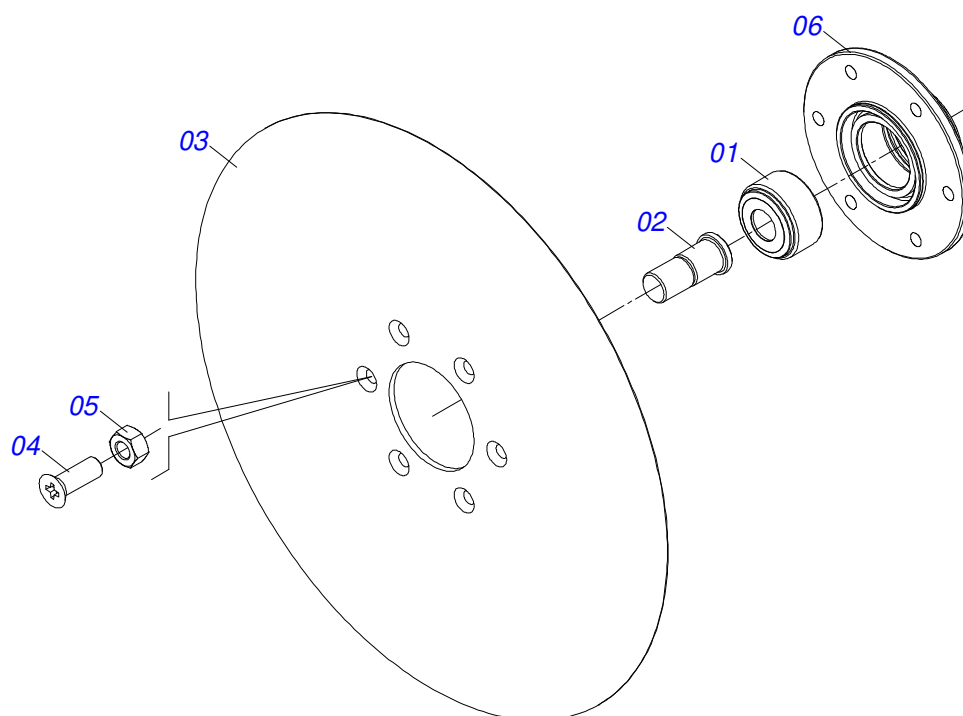


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

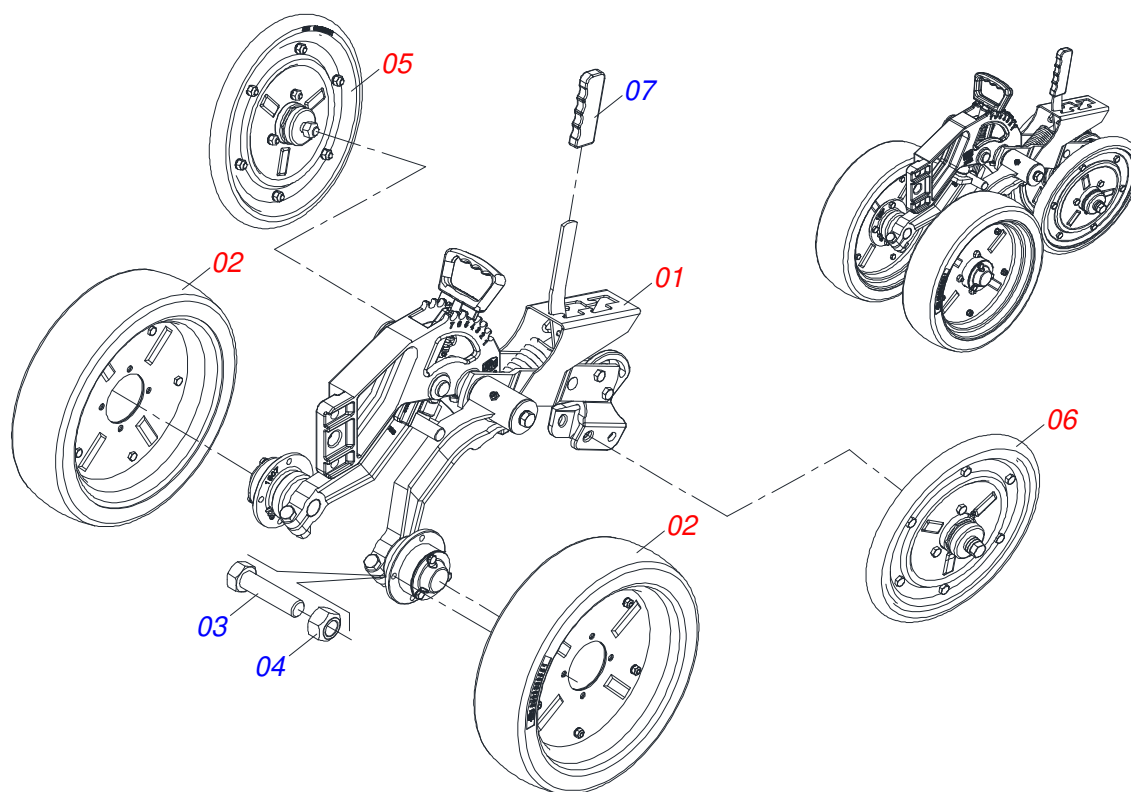


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	68	01
02	0501052538	DEPTH BAND WITH ARMS	69	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	70	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	71	01
07	0503033942	COVER REGULATORY WHEEL		01

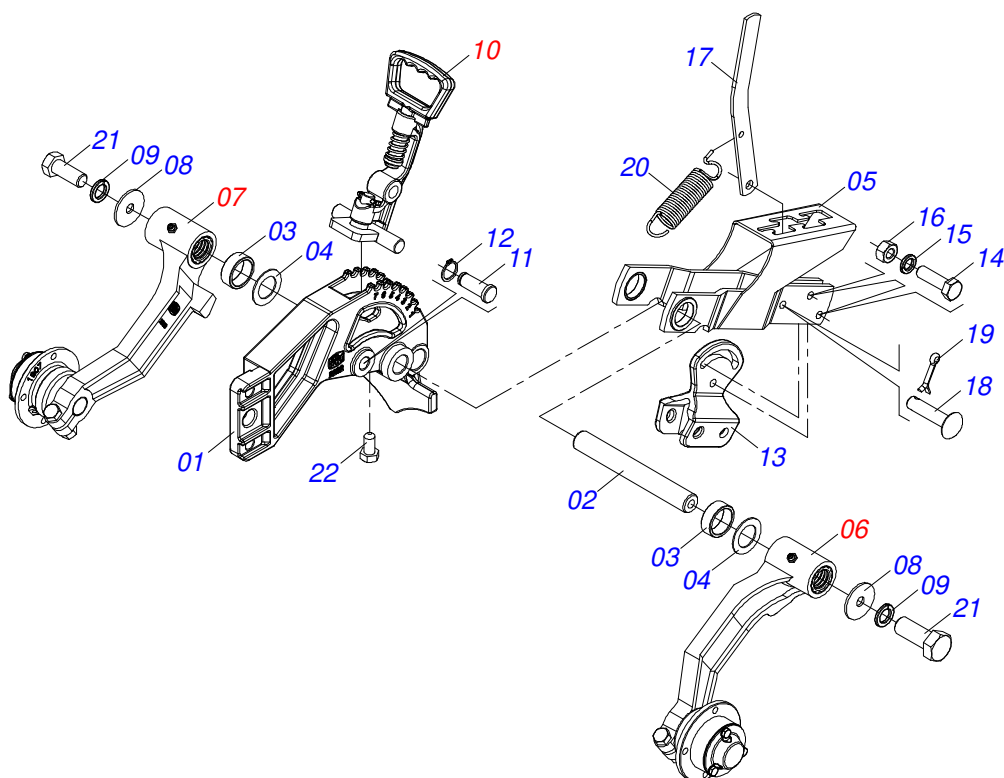


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	76	01
07	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	77	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	80	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	SCREWEW 3/8 UNC X 3/4		01

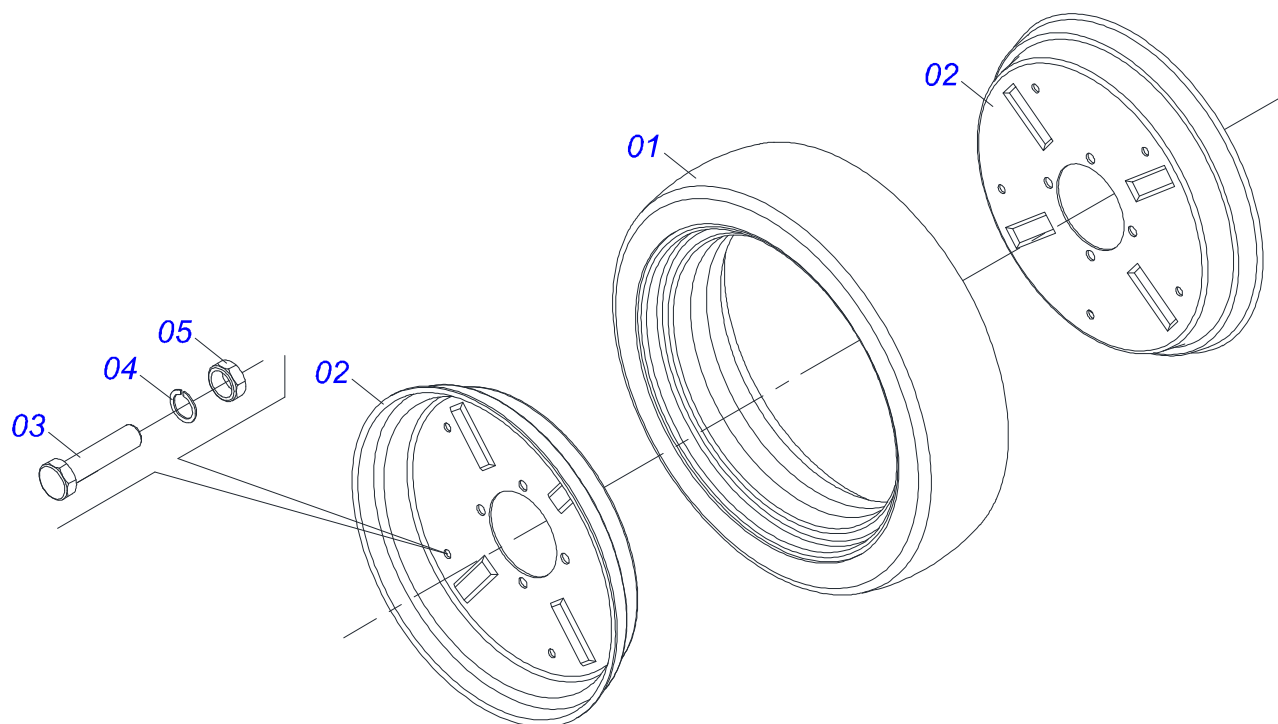


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

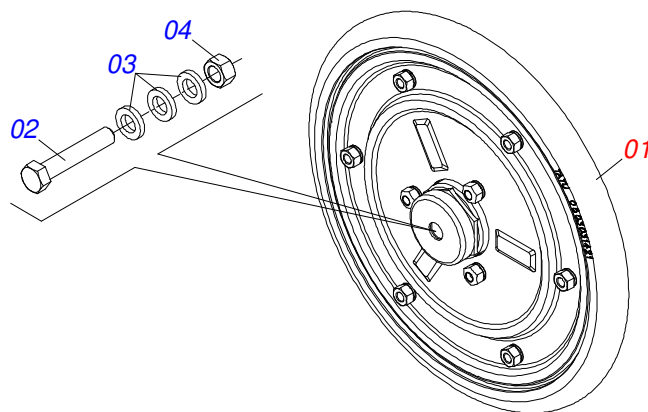


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	72	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

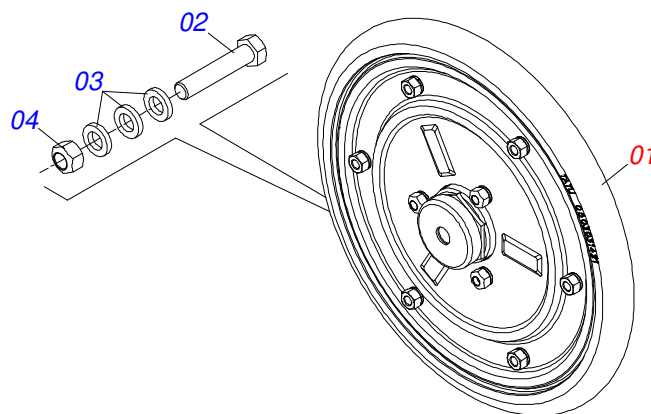


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	72	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

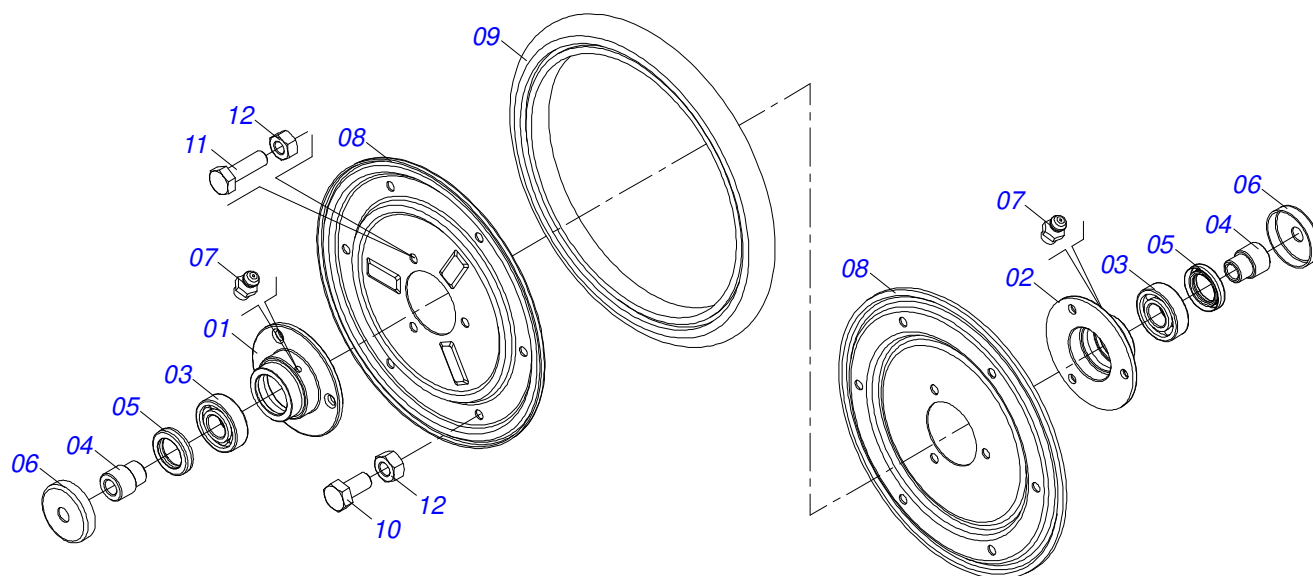


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

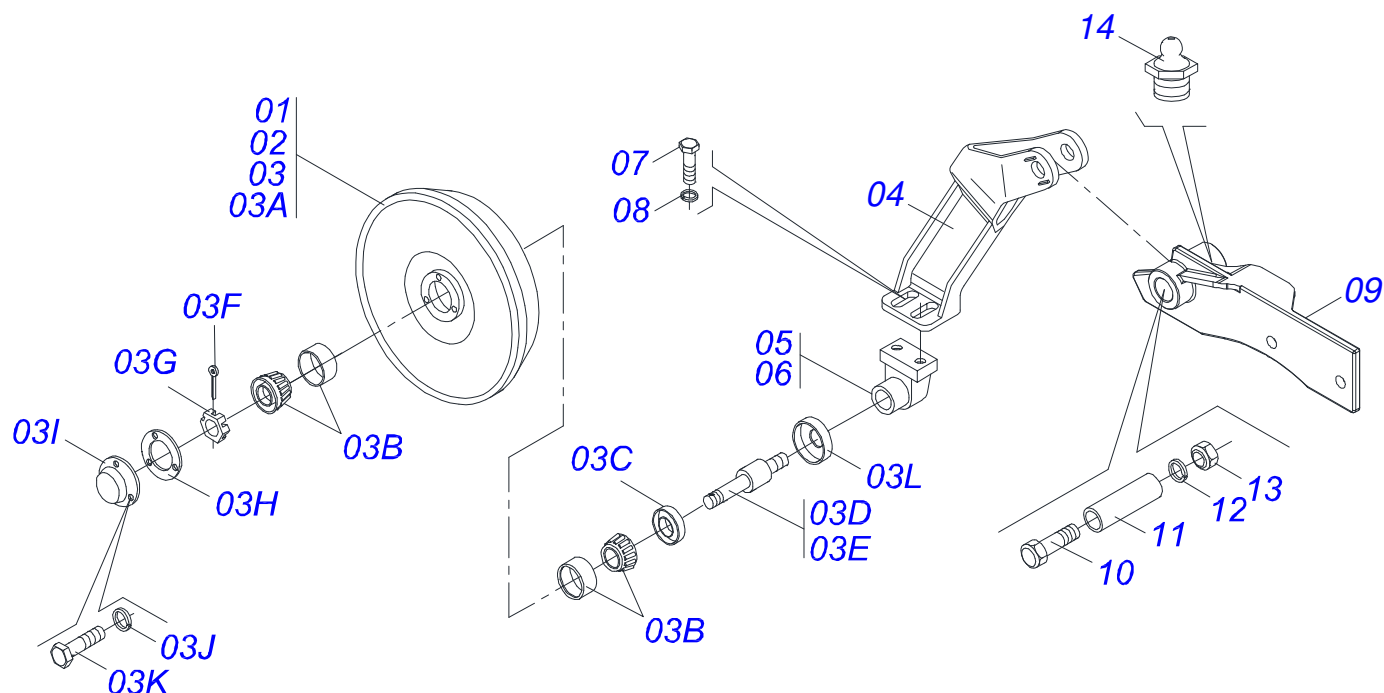


Item	Code	Description	See page	QT
00	0501052735	COVERING WHEEL RIGHT FERTILIZER ASSY IRON	01	
00.	0501052736	COVERING WHEEL LEFT FERTILIZER ASSY IRON	01	
01	0501056289	IRON LEFT PRESS WHEEL FERT UP	01	
02	0501056288	WHEEL COVER ROD FERRO	01	
03	0501053186	RIGHT IRON PRESS WHEEL ASSY	01	
03A	0502011970	IRON PRESS WHEEL	01	
03B	0503010598	30204 BALL BEARING	02	
03C	0503011112	SEAL 02376-BRG	01	
03D	0521019148	LEFT DOUBLE DISC HUB	01	
03E	0521019154	RIGHT DOUB DISC HUB	01	
03F	0503010257	1/8" X 1" COTTERPIN	01	
03G	0503030282	3/4" CASTLE NUT	01	
03H	0503030757	2.9" X 2" X 0.02" JOINT	01	
03I	0521019178	COVER DEPTH	01	
03J	0503011441	SPRING WASHER	03	
03K	0503013758	1/4" X 1-1/2" BOLT	03	
03L	0511016896	DUST CLOAK	01	
04	0502012348	RIGHT WHEEL ARM	01	
05	0502011156	LEFT FIXER WHEEL	01	
06	0502011155	RIGHT FIXER WHEEL	01	
07	0503010920	1/2" X 1.1/2" BOLT	02	
08	0503011440	SPRING WASHER	02	
09	0502012347	LEFT WHEEL ARM SUPPORT	02	
10	0501010163	5/8" X 4-1/2" BOLT	01	
11	0531016207	0.6" X 1" X 2.8" SLEEVE	01	
12	0503010027	5/8" SPRING WASHER	01	
13	0503010013	5/8" NUT	01	
14	0503010003	1845 GREASE FITTING	01	

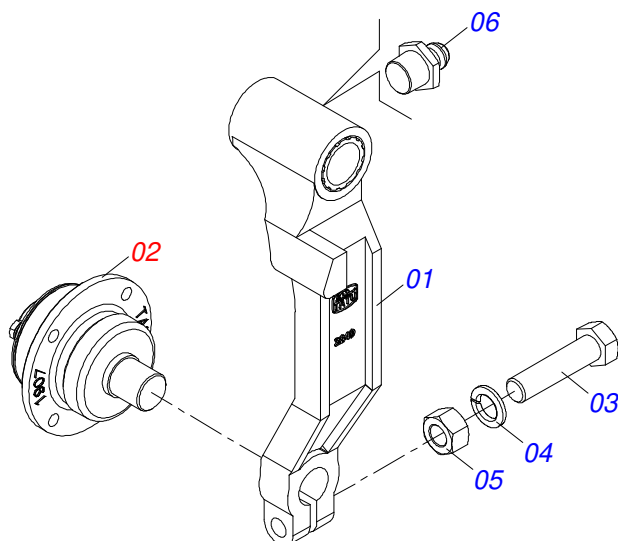


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL BOX	79	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01

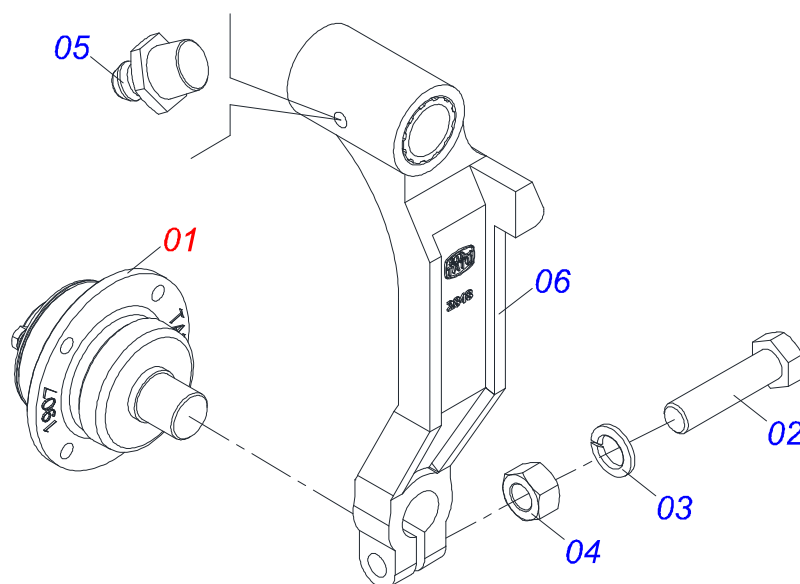

Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL BOX	79	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

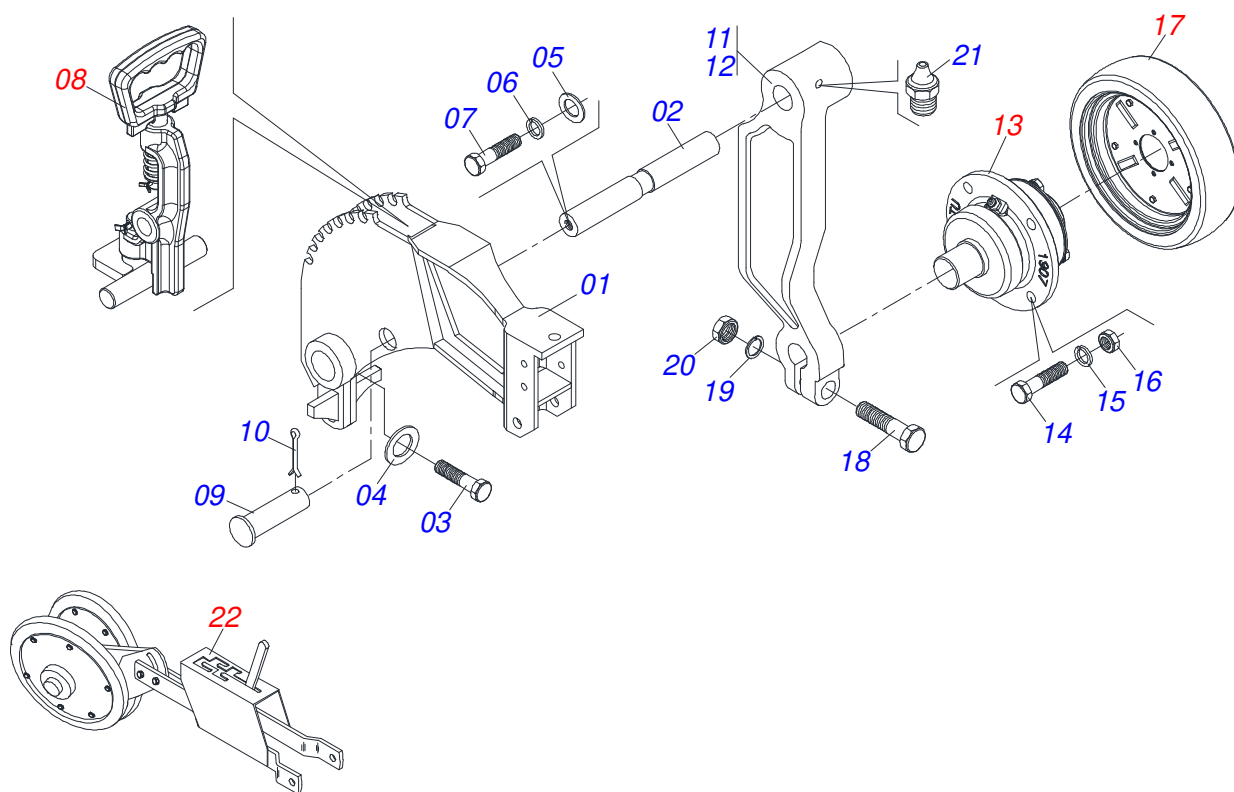


Item	Code	Description	See page	QT
01	0502012086	DEPTH CONTROL SUPPORT		01
02	0511012244	DEPTH CONTROL WHEEL AXLE		01
03	0503010256	3/8" X 3/4" BOLT		01
04	0521015818	FLAT WASHER		04
05	0511017302	FLAT WASHER		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010834	1/2 X 1 BOLT		02
08	0501052297	DEPTH WHEELS REGULATOR ASSY	80	01
09	0521019093	0.6" X 2.7" PIVOT SHAFT		01
10	0503010778	1/8" X 1.1/2" COTTERPIN		01
11	0502011699	RIGHT DEPTH WHEEL ARM		01
12	0502011698	LEFT DEPTH WHEEL ARM		01
13	0501052627	ASSY DEPTH WHEEL BOX	79	02
14	0503010358	5/16" X 5/8" BOLT		08
15	0503010179	LOCK WASHER		08
16	0503013816	5/16" LOCKNUT		08
17	0501052538	DEPTH BAND WITH ARMS	69	02
18	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
19	0503011440	SPRING WASHER		02
20	0503010060	1/2" NUT		02
21	0503010002	1800 GREASE FITTING		02
22	0501053037	IRON DEPTH CONTR. WHEEL ASSY	81	01

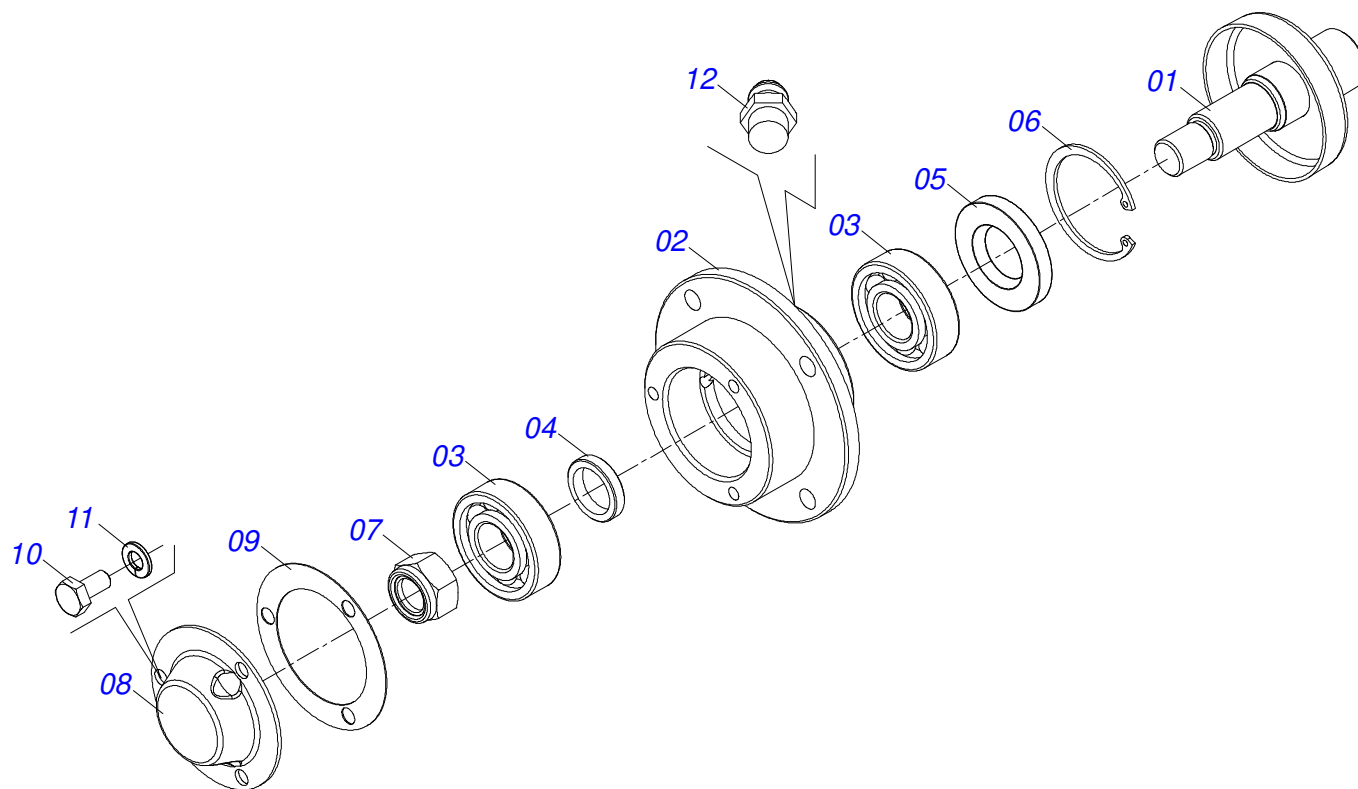


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	COVER DEPTH		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

DEPTH WHEELS REGULATOR ASSY


0501052297

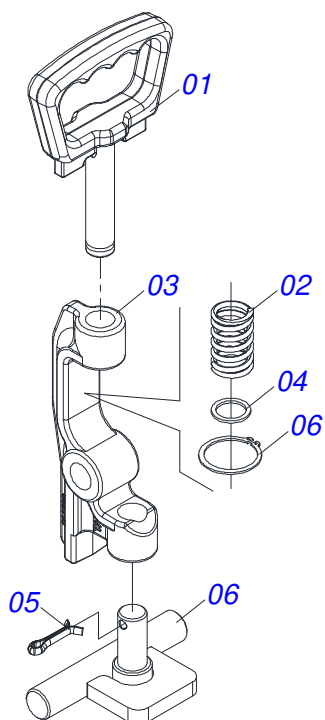


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	SEED SIST CONTROL DEPTH LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

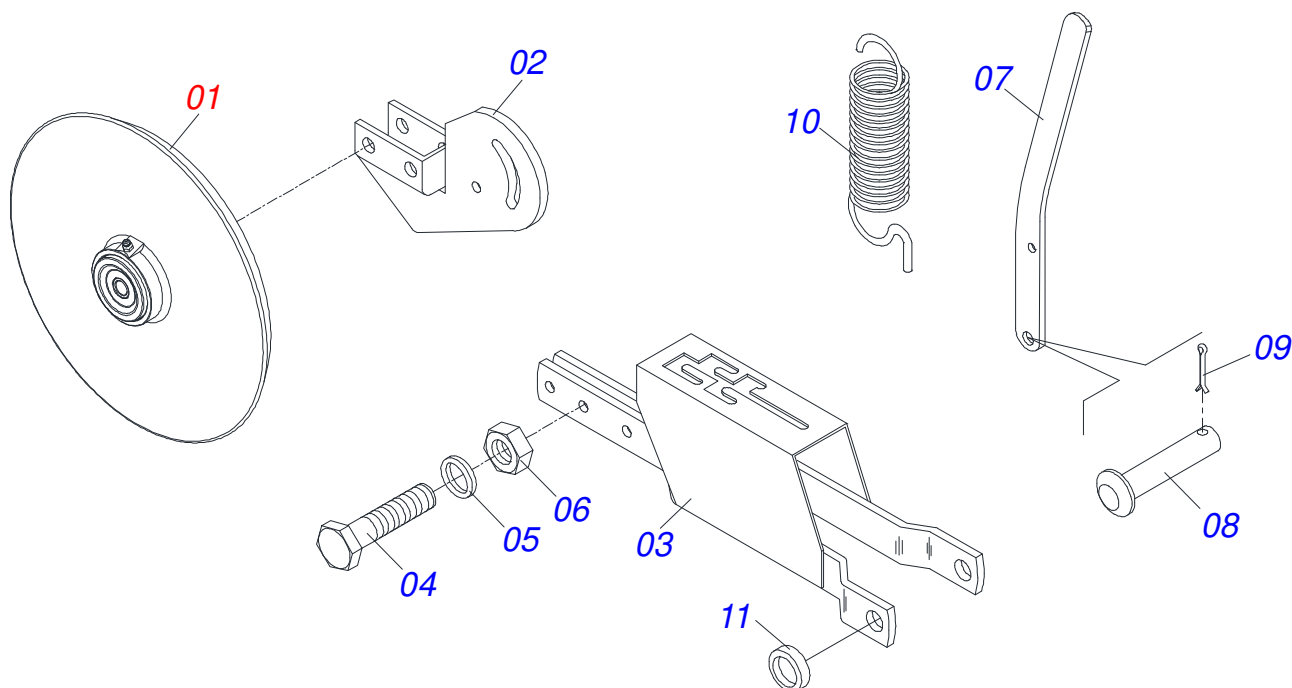


Item	Code	Description	See page	QT
01	0501052957	IRON V PRESS WHEELS	82	02
02	0502011757	PRESS REGULATOR		01
03	0511060673	PRESS WHEELS REGULATOR		01
04	0503010849	3/8" X 1-1/2" BOLT		02
05	0503010025	3/8" SPRING WASHER		02
06	0503010026	3/8" NUT		02
07	0521013398	PRESS WHEELS REGULATOR BODY		01
08	0521010539	0.3" X 1.2" COUPLING SHAFT		01
09	0503010257	1/8" X 1" COTTERPIN		01
10	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
11	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02

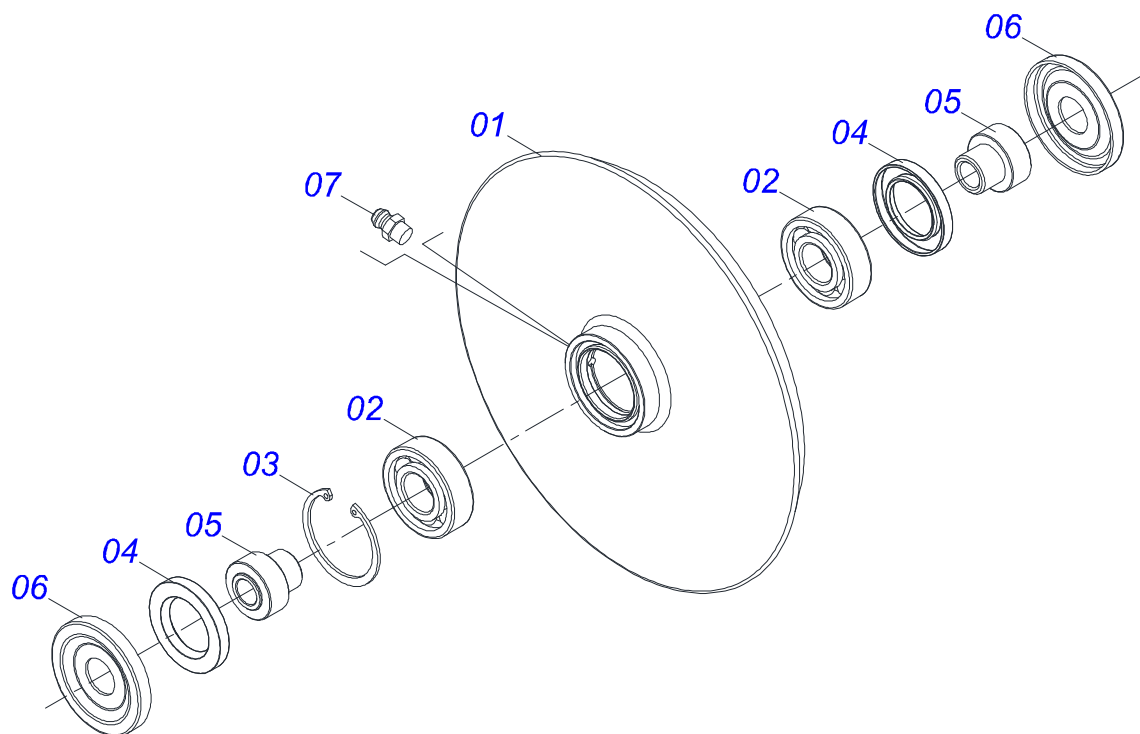

Item	Code	Description	See page	QT
01	0502011932	IRON PRESS WHEELS		01
02	0503010269	6204 BALL BEARING		02
03	0503011105	SEAL RING		01
04	0503013848	5072-BR SEAL		02
05	0521019147	V COMPACT WHEELS AXLE		02
06	0511011927	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01

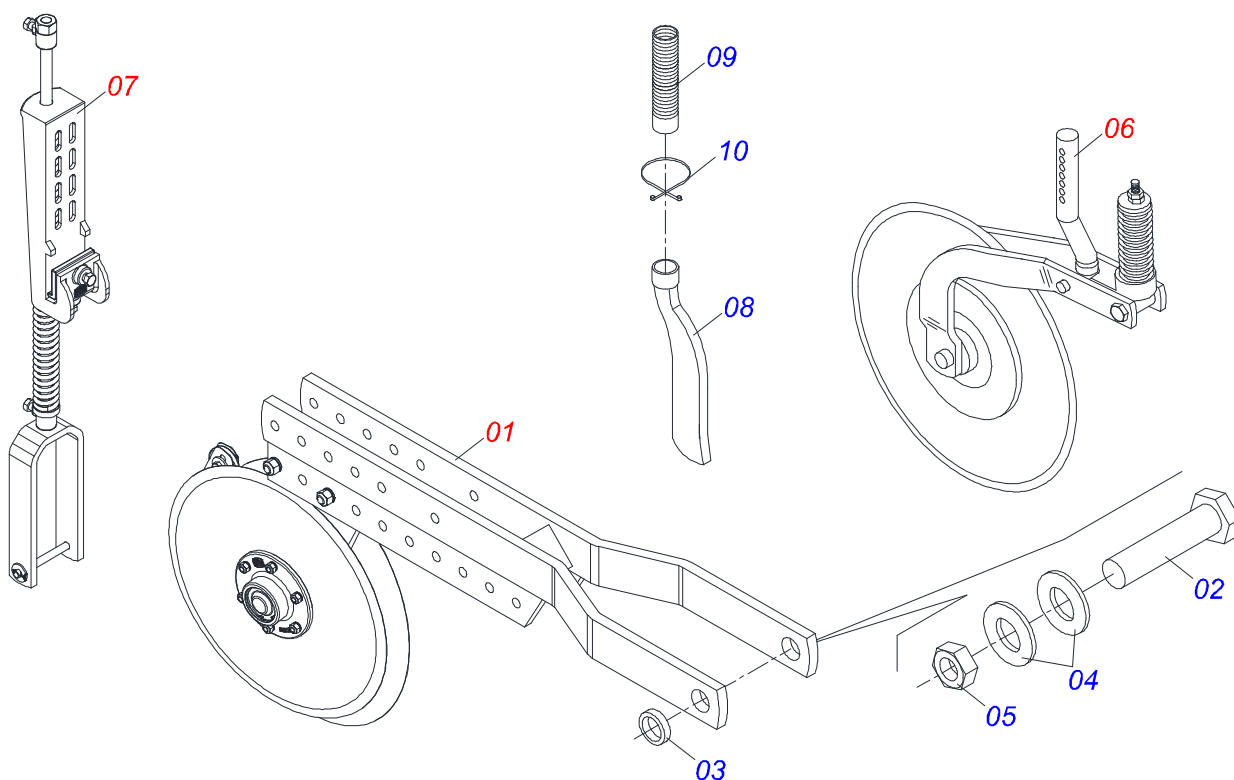


Item	Code	Description	See page	QT
01	0511053250	SHORT ARM FERTILIZER ROW WITH LEFT 87		01
		DOUBLE DISC		
02	0501010066	3/4" X 9" BOLT		01
03	0521017831	SUPPORT SLEEVE SPACER		02
04	0511017232	FLAT WASHER		02
05	0503011255	3/4" LOCK NUT		01
06	0511044549	18" COULTER BLADE ASSY FOR SHORT ROW	89	01
07	0501058423	FERTILIZER ROD SPRING ROW	94	01
08	0503030391	RIGHT FERTILIZER NOZZLE		01
09	0503031145	2" X 2" X 20" HOSE		01
10	0503031076	2" HOSE CLAMP		02

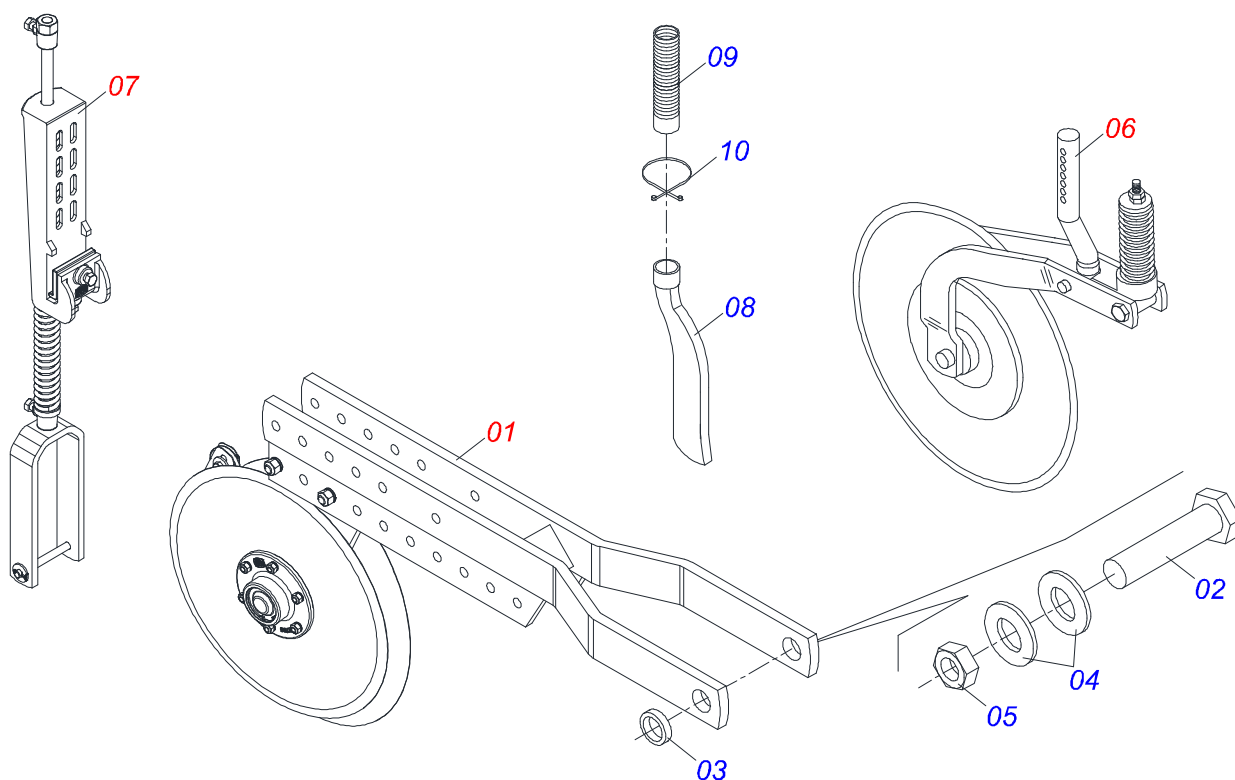


Item	Code	Description	See page	QT
01	0511053251	LONG ARM FERTILIZER ROW WITH RIGHT 88		01
		DOUBLE DISC		
02	0501010066	3/4" X 9" BOLT		01
03	0521017831	SUPPORT SLEEVE SPACER		02
04	0511017232	FLAT WASHER		02
05	0503011255	3/4" LOCK NUT		01
06	0511044573	18" COULTER BLADE ASSY FOR LONG ROW	90	01
07	0501058423	FERTILIZER ROD SPRING ROW	94	01
08	0503030392	LEFT FERTILIZER NOZZLE		01
09	0503031145	2" X 2" X 20" HOSE		01
10	0503031076	2" HOSE CLAMP		02

SHORT FERTILIZER ROW WITH SHANK


0909092371

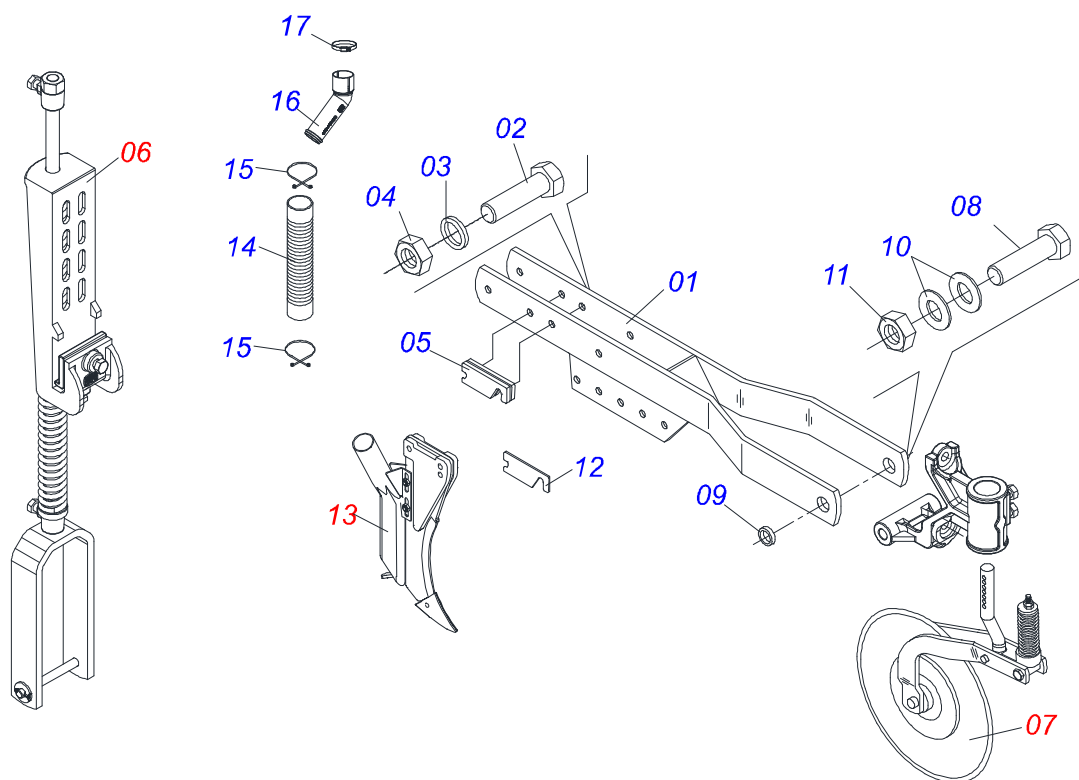


Item	Code	Description	See page	QT
01	0521061121	SHORT FERTILIZER ROW ARM		01
02	0503010547	1/2" X 4" BOLT		02
03	0503011440	SPRING WASHER		02
04	0503010060	1/2" NUT		02
05	0511018662	SPACING PLATE		04
06	0501058423	FERTILIZER ROD SPRING ROW	94	01
07	0511044549	18" COULTER BLADE ASSY FOR SHORT ROW	89	01
08	0501010066	3/4" X 9" BOLT		01
09	0521017831	SUPPORT SLEEVE SPACER		02
10	0511017232	FLAT WASHER		02
11	0503011255	3/4" LOCK NUT		01
12	0511017969	0.1" SPACING PLATE		02
13	0909091030	ROD SCARIFIER SPINDLE		01
14	0503031145	2" X 2" X 20" HOSE		01
15	0503031076	2" HOSE CLAMP		02
16	0503031050	CURVED CONDUCTOR		01
17	0503010246	CLAMP		01

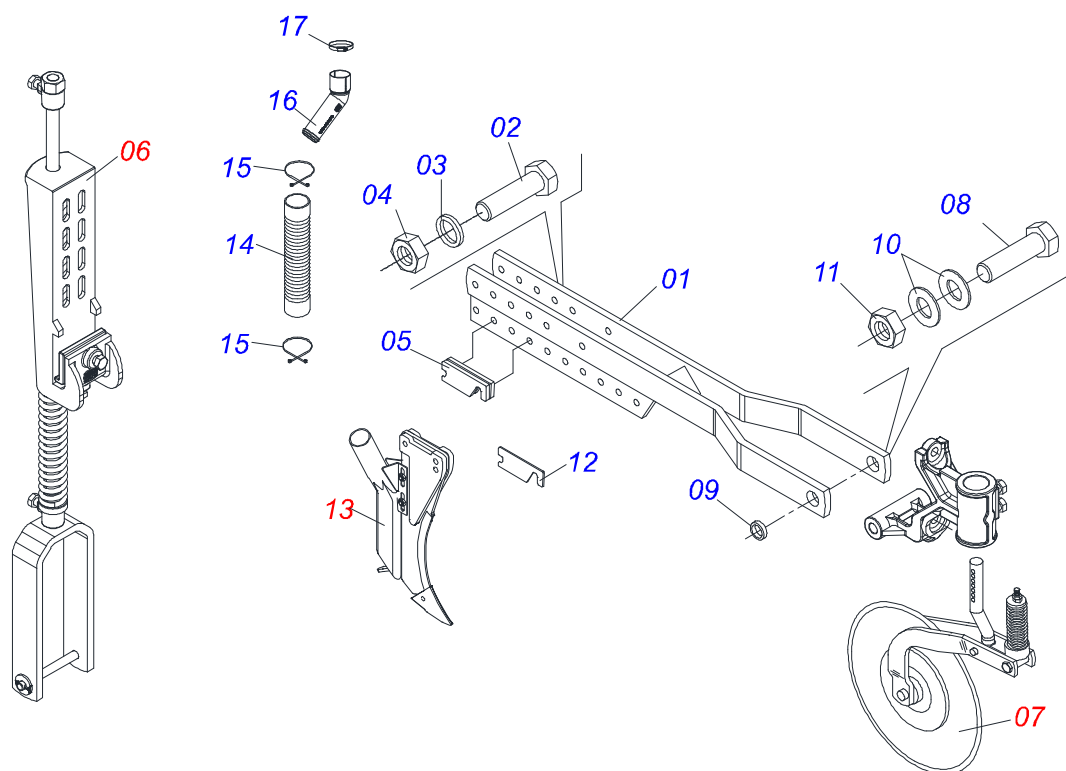

Item	Code	Description	See page	QT
01	0521061153	LONG ARM FERTILIZER LINE		01
02	0503010547	1/2" X 4" BOLT		02
03	0503011440	SPRING WASHER		02
04	0503010060	1/2" NUT		02
05	0511018662	SPACING PLATE		04
06	0501058423	FERTILIZER ROD SPRING ROW	94	01
07	0511044573	18" COULTER BLADE ASSY FOR LONG ROW	90	01
08	0501010066	3/4" X 9" BOLT		01
09	0521017831	SUPPORT SLEEVE SPACER		02
10	0511017232	FLAT WASHER		02
11	0503011255	3/4" LOCK NUT		01
12	0511017969	0.1" SPACING PLATE		02
13	0909091030	ROD SCARIFIER SPINDLE		01
14	0503031145	2" X 2" X 20" HOSE		01
15	0503031076	2" HOSE CLAMP		02
16	0503031050	CURVED CONDUCTOR		01
17	0503010246	CLAMP		01

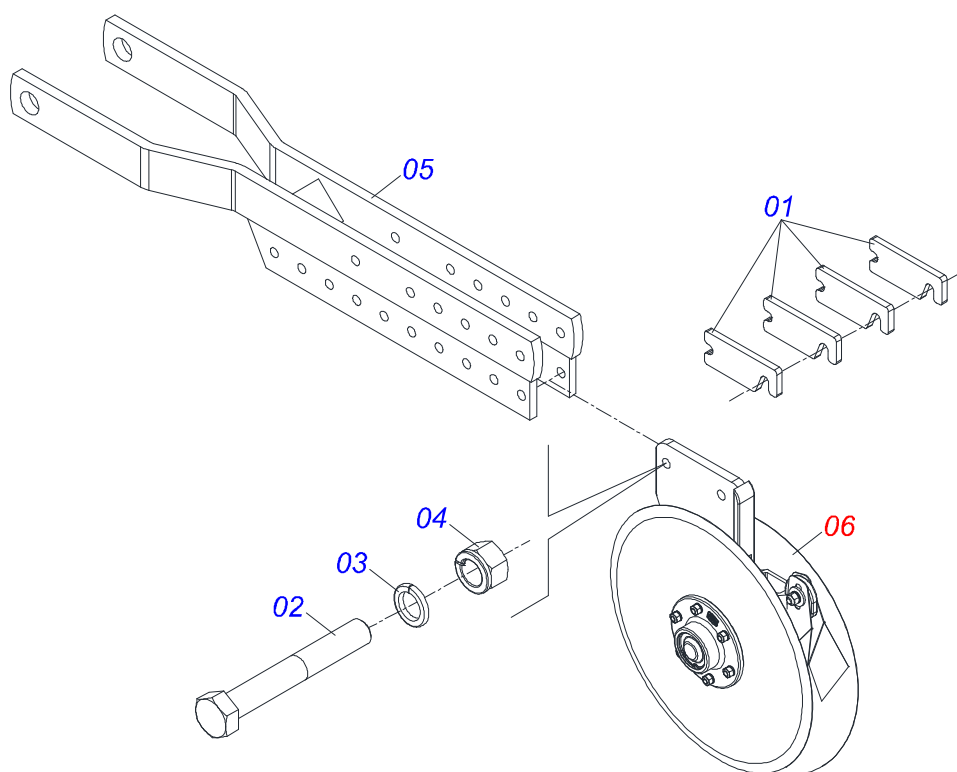


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2" NUT		02
05	0521061121	SHORT FERTILIZER ROW ARM		01
06	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	95	01

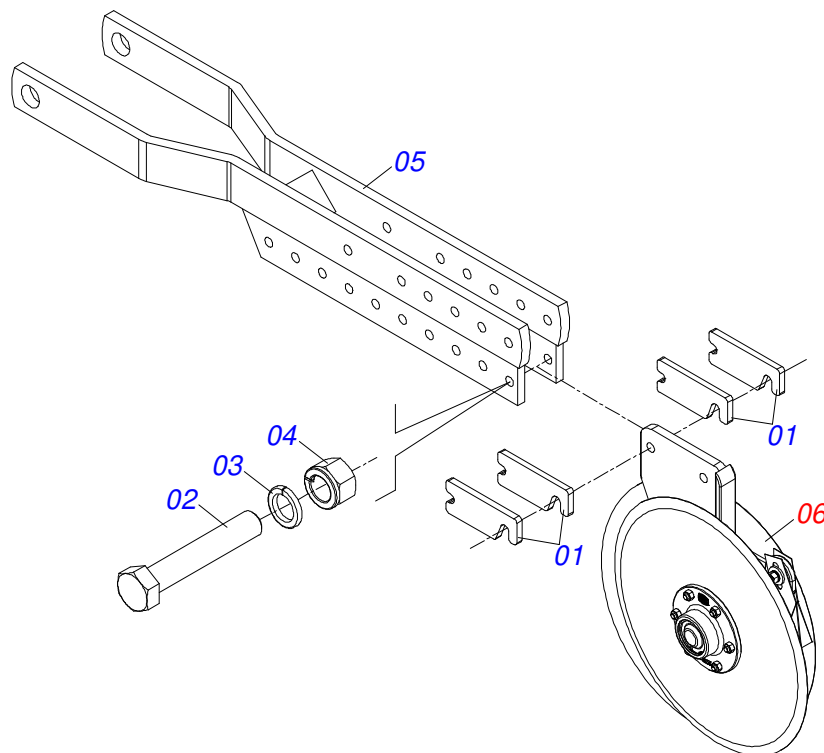


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2" NUT		02
05	0521061153	LONG ARM FERTILIZER LINE		01
06	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	96	01

18" COULTER BLADE ASSY FOR SHORT ROW


0511044549

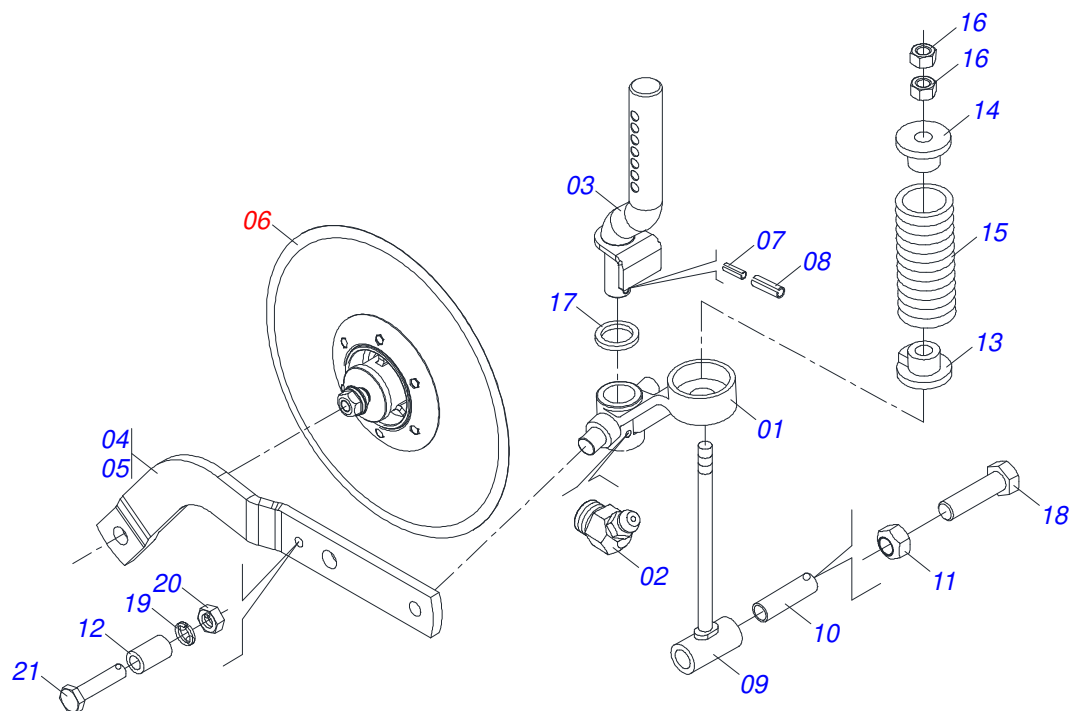


Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE	01	
02	0503010003	1845 GREASE FITTING	01	
03	0511067045	SHORT WHIT BEATER BLADE DISC FIX AXLE	01	
04	0521014137	RIGHT ARM OF THE BLADE DISC	01	
05	0521014138	SUPPORT ARM LEFT BALDE DISC	01	
06	0521054686	CUTTING DISC BOX 18	01	
07	0503010756	0.2" X 2.4" SPRING PIN	01	
08	0503010361	SPRING PIN	01	
09	0501067323	SPRING REGULATOR	01	
10	0521010452	SLEEVE	01	
11	0503011255	3/4" LOCK NUT	01	
12	0571010188	13,50 X 19 X 86,30/86 SLEEVE	01	
13	1902020394	SPRING SUPPORT	01	
14	1902020393	SPRING UPPER SUPPORT	01	
15	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING	01	
16	0503010014	3/4" NUT	02	
17	0541018684	FLAT WASHER	01	
18	0503013185	3/4" X 5-1/2" BOLT	01	
19	0503010019	1/2" SPRING WASHER	01	
20	0503010060	1/2" NUT	01	
21	0503011411	1/2" X 5-1/2" BOLT	01	

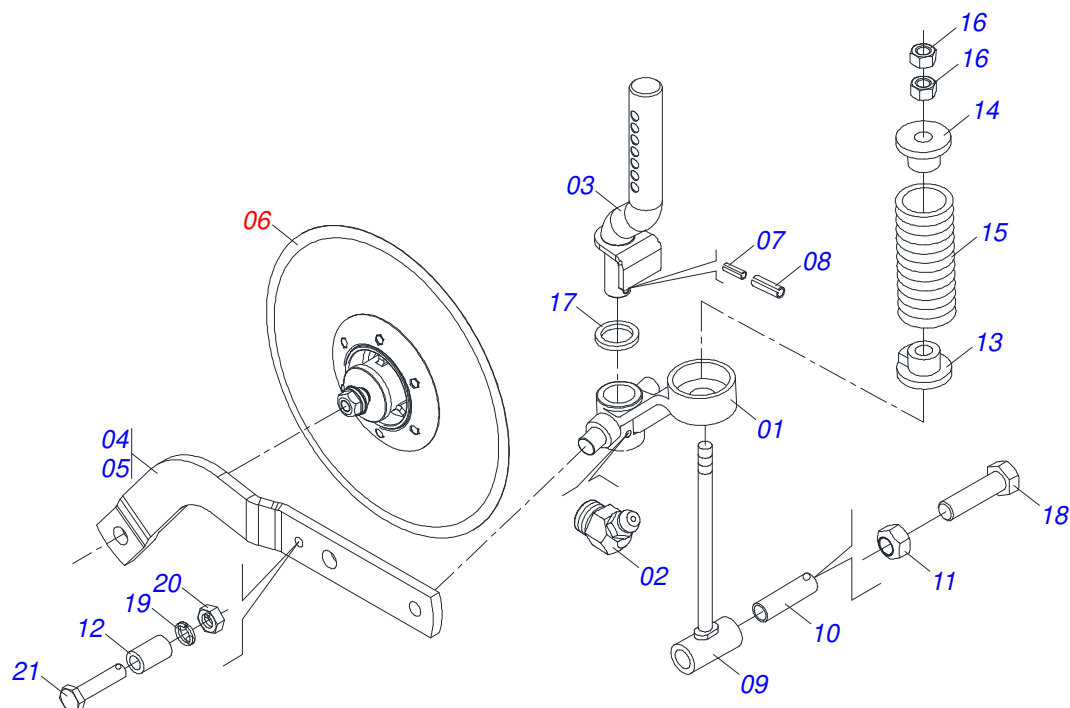


Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE	01	
02	0503010003	1845 GREASE FITTING	01	
03	0511067044	LONG WHIT BEATER BLADE DISC FIX AXLE	01	
04	0521014137	RIGHT ARM OF THE BLADE DISC	01	
05	0521014138	SUPPORT ARM LEFT BALDE DISC	01	
06	0521054686	CUTTING DISC BOX 18	01	
07	0503010756	0.2" X 2.4" SPRING PIN	01	
08	0503010361	SPRING PIN	01	
09	0501067323	SPRING REGULATOR	01	
10	0521010452	SLEEVE	01	
11	0503011255	3/4" LOCK NUT	01	
12	0571010188	13,50 X 19 X 86,30/86 SLEEVE	01	
13	1902020394	SPRING SUPPORT	01	
14	1902020393	SPRING UPPER SUPPORT	01	
15	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING	01	
16	0503010014	3/4" NUT	02	
17	0541018684	FLAT WASHER	01	
18	0503013185	3/4" X 5-1/2" BOLT	01	
19	0503010019	1/2" SPRING WASHER	01	
20	0503010060	1/2" NUT	01	
21	0503011411	1/2" X 5-1/2" BOLT	01	

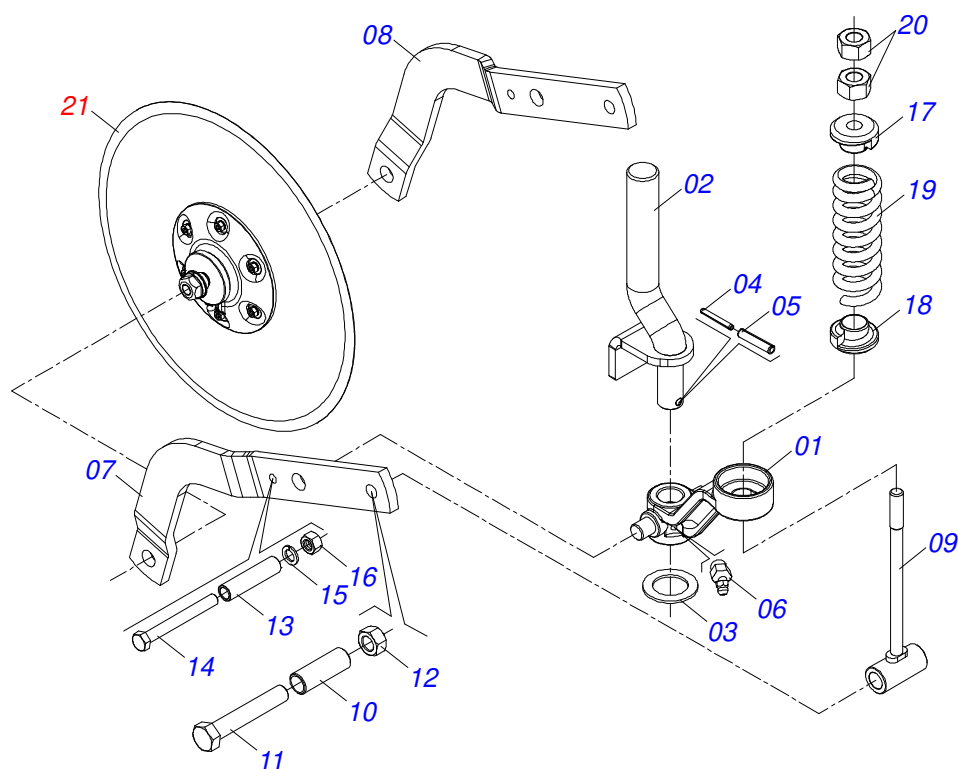


Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE	01	
02	0511067045	SHORT WHIT BEATER BLADE DISC FIX AXLE	01	
03	0541018684	FLAT WASHER	01	
04	0503010756	0.2" X 2.4" SPRING PIN	01	
05	0503010361	SPRING PIN	01	
06	0503010003	1845 GREASE FITTING	01	
07	0521014137	RIGHT ARM OF THE BLADE DISC	01	
08	0521014138	SUPPORT ARM LEFT BALDE DISC	01	
09	0501067323	SPRING REGULATOR	01	
10	0521010452	SLEEVE	01	
11	0503013185	3/4" X 5-1/2" BOLT	01	
12	0503011255	3/4" LOCK NUT	01	
13	0571010188	13,50 X 19 X 86,30/86 SLEEVE	01	
14	0503011411	1/2" X 5-1/2" BOLT	01	
15	0503010019	1/2" SPRING WASHER	01	
16	0503010060	1/2" NUT	01	
17	0502020393	SPRING UPPER SUPPORT	01	
18	0502020394	SPRING SUPPORT	01	
19	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING	01	
20	0503010014	3/4" NUT	02	
21	0521054680	CUTTING DISC BOX 20	01	

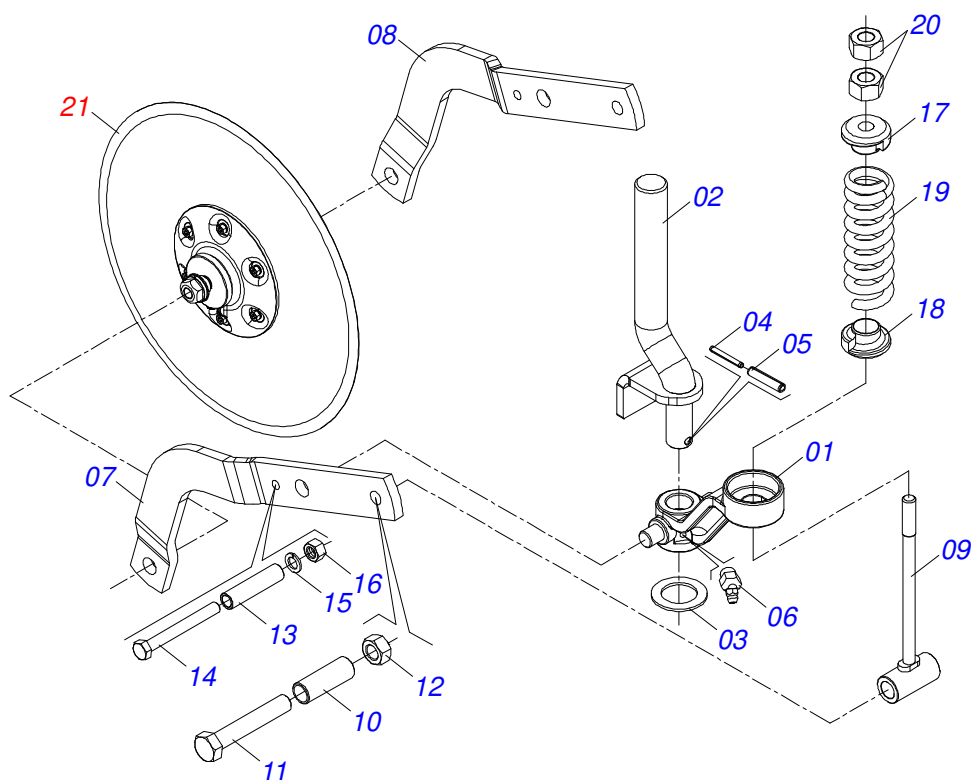


Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE	01	
02	0511067044	LONG WHIT BEATER BLADE DISC FIX AXLE	01	
03	0541018684	FLAT WASHER	01	
04	0503010756	0.2" X 2.4" SPRING PIN	01	
05	0503010361	SPRING PIN	01	
06	0503010003	1845 GREASE FITTING	01	
07	0521014137	RIGHT ARM OF THE BLADE DISC	01	
08	0521014138	SUPPORT ARM LEFT BALDE DISC	01	
09	0501067323	SPRING REGULATOR	01	
10	0521010452	SLEEVE	01	
11	0503013185	3/4" X 5-1/2" BOLT	01	
12	0503011255	3/4" LOCK NUT	01	
13	0571010188	13,50 X 19 X 86,30/86 SLEEVE	01	
14	0503011411	1/2" X 5-1/2" BOLT	01	
15	0503010019	1/2" SPRING WASHER	01	
16	0503010060	1/2" NUT	01	
17	0502020393	SPRING UPPER SUPPORT	02	
18	0502020394	SPRING SUPPORT	01	
19	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING	01	
20	0503010014	3/4" NUT	02	
21	0521054680	CUTTING DISC BOX 20	01	

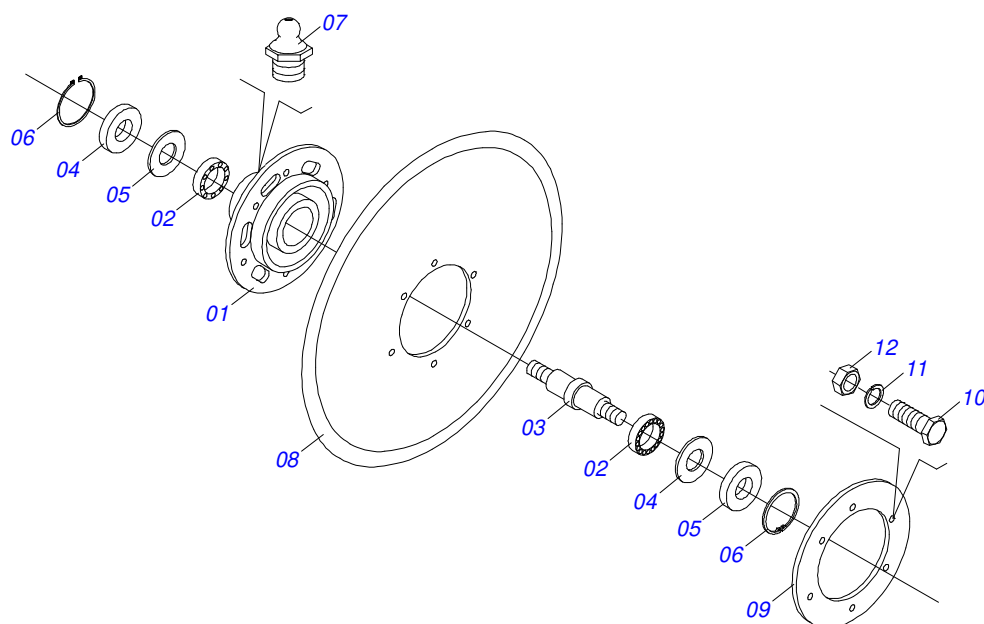


Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503010276	6206 BALL BEARING		02
03	0521013610	BLADE DISC HUB AXLE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0603027851	20" X 0.2" FLAT PLAIN DISC		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

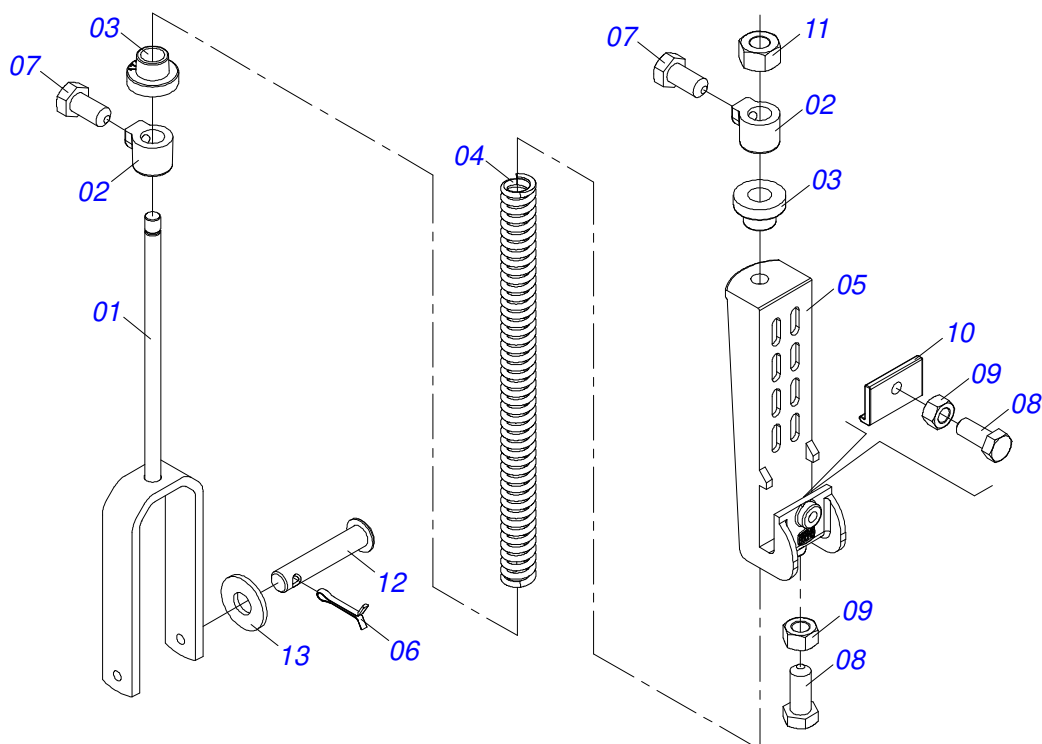

Item	Code	Description	See page	QT
01	0511069645	FERTILIZER SPRING ROD	01	
02	0502040534	SPRING GUIDE BUSHING LOCK	02	
03	0502012184	FERTILIZER SPRING GUIDE	02	
04	0503031910	1.7" X 22.8" X 0.3" SPRING	01	
05	0502012510	SPRING ROD SUPPORT	01	
06	0503010257	1/8" X 1" COTTERPIN	01	
07	0501018535	1/2 X 1 BOLT	02	
08	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN	02	
09	0503010060	1/2" NUT	02	
10	1902010891	SPRING CHOCK SUPPORT VARON	01	
11	0503010014	3/4" NUT	01	
12	0561014471	COUPLING SHAFT	01	
13	0511017302	FLAT WASHER	01	

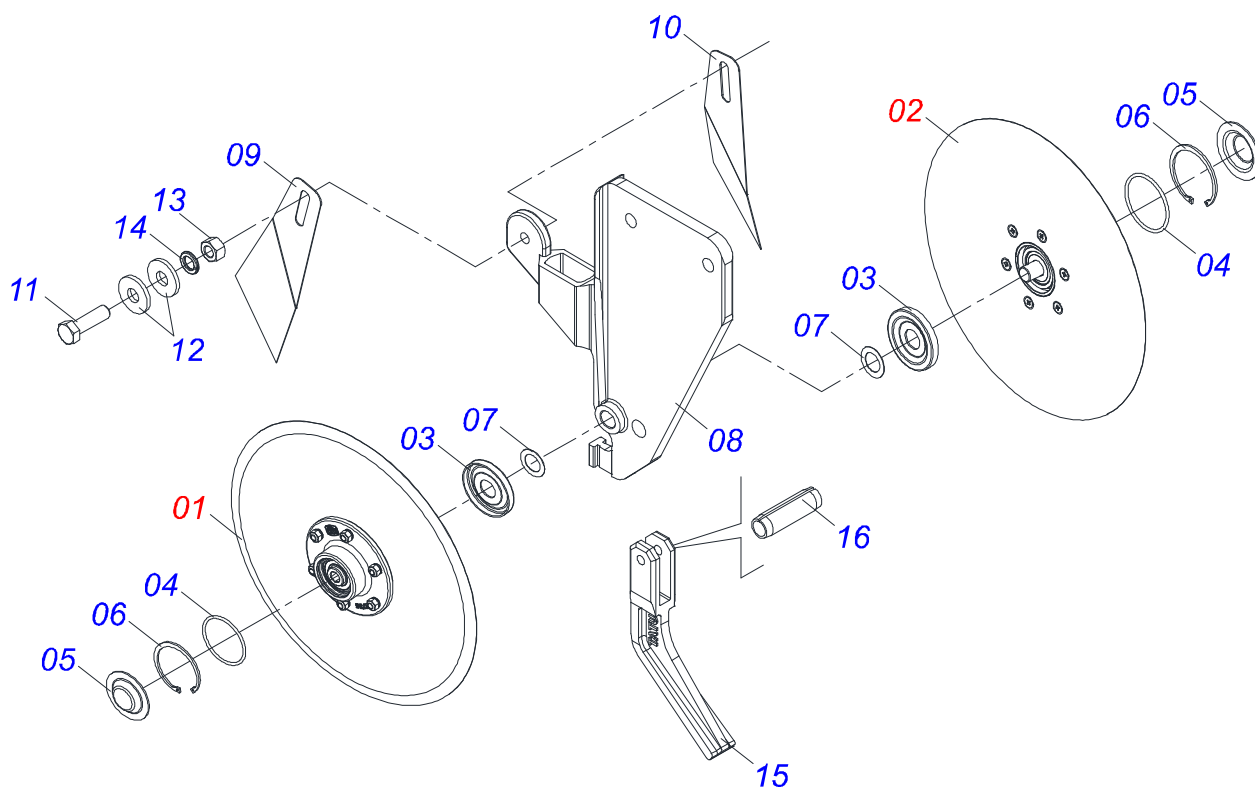


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	66	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	65	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503010025	3/8" SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

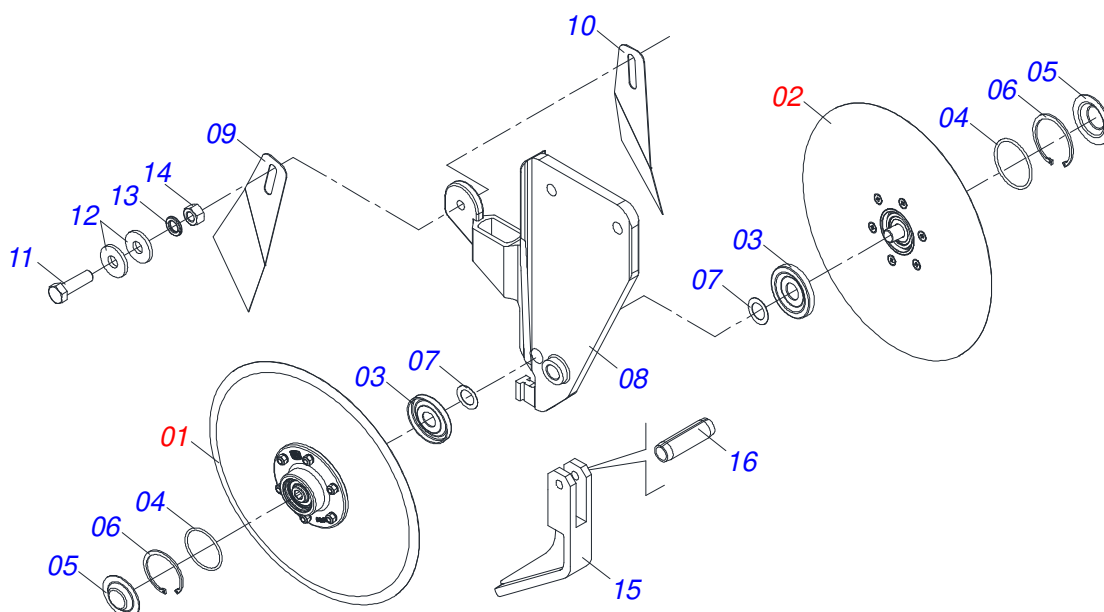


Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15	65	01
02	0511053172	LEFT LOW CUBE WITH DISC 15	66	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010025	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

ROW MARKER DISK ASSEMBLY


0501050633

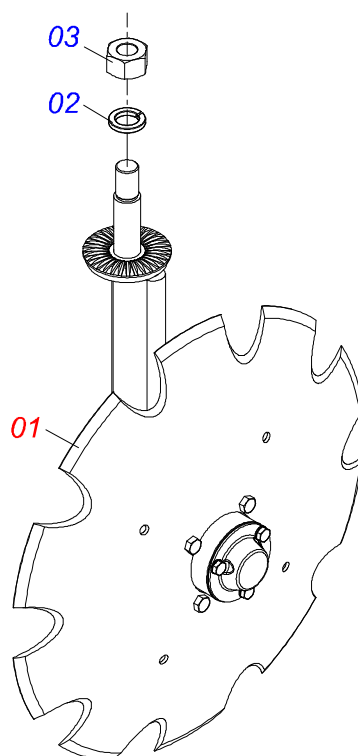

Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

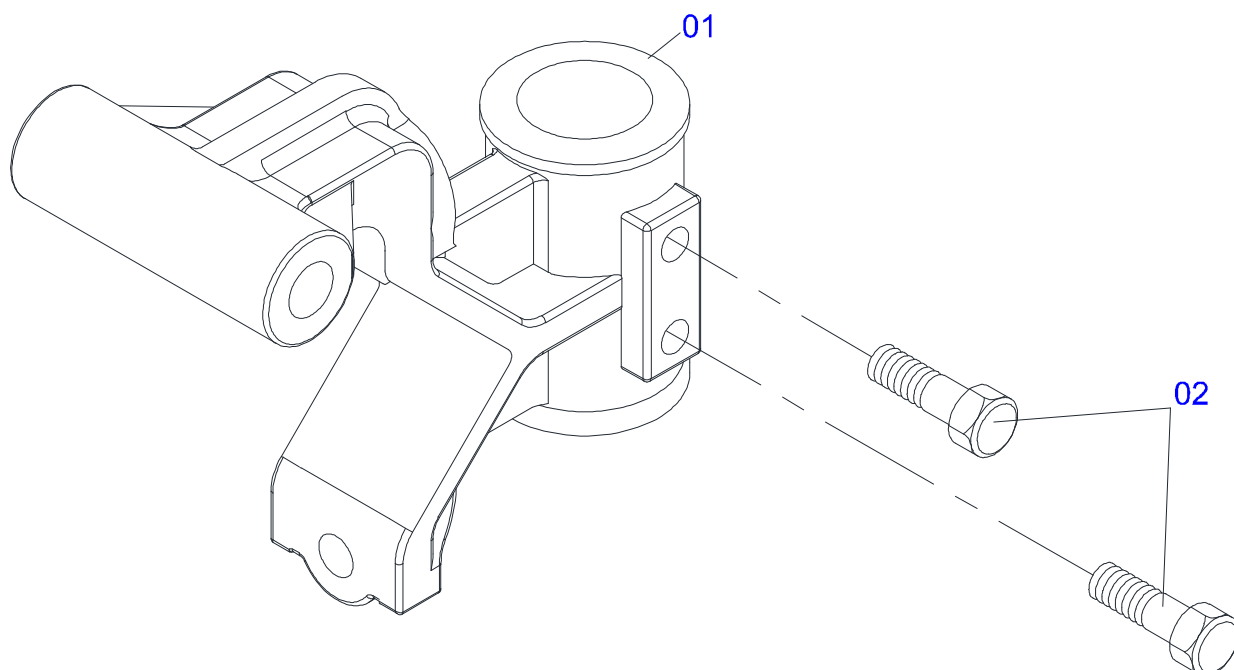


Item	Code	Description	See page	QT
01	0502011567	FERTILIZER ROW SUPPORT		01
02	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02

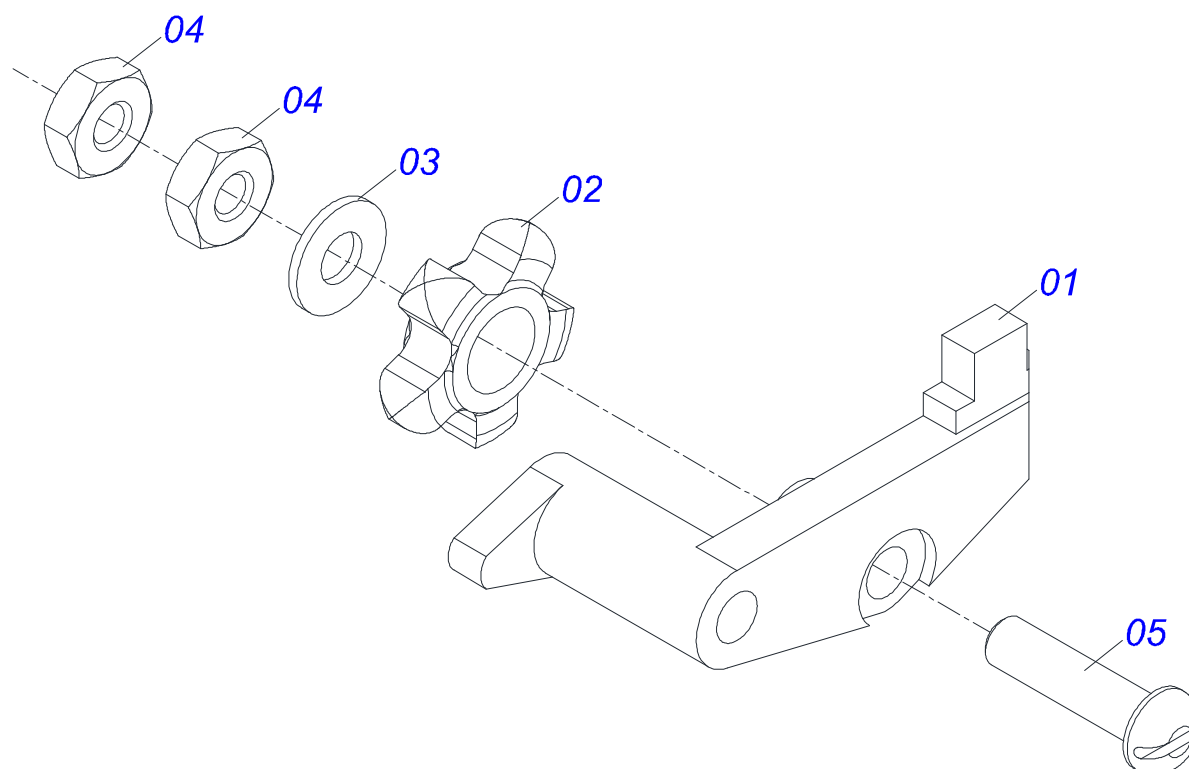


Item	Code	Description	See page	QT
01	0503030379	LARGER ROCKER ARM		01
02	0502060001	PLASTIC PULLEY FOR MAIZE		01
03	0503010669	FLAT WASHER		01
04	0503010667	3/16" NUT		02
05	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		01

HEX AXLE ASSEMBLY

0909094459

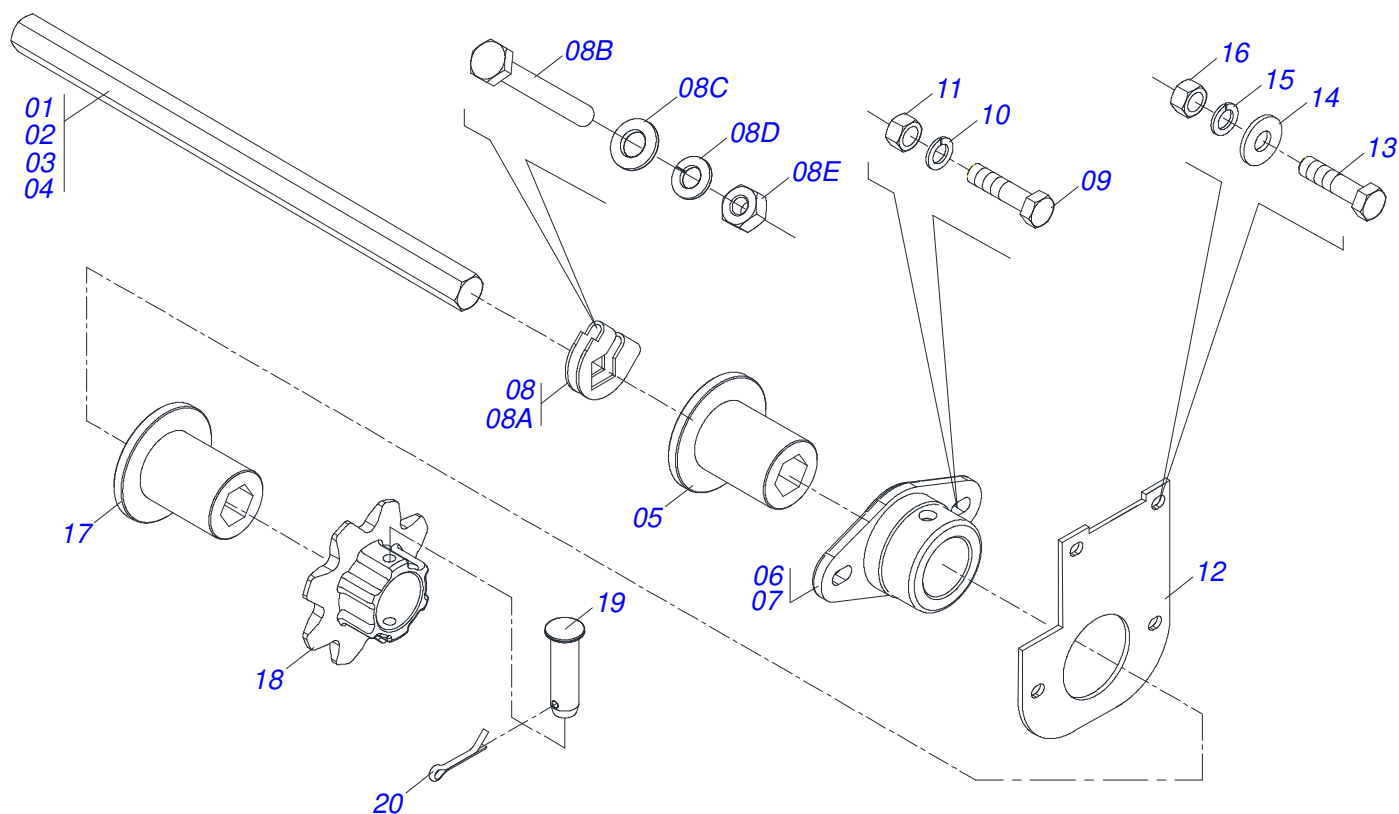

Item	Code	Description	See page	08	09	10	12 L.
01	0501017440	5/8" X 60.4" HEX AXLE		01	00	00	00
01.	0501017441	5/8" X 69.3" HEX AXLE		01	00	00	00
02	0511010749	5/8" X 71.8" HEX AXLE		00	01	00	00
02.	0511010750	5/8" X 79.1" HEX AXLE		00	01	00	00
03	0501017442	5/8" X 76.1" HEX AXLE		00	00	01	00
03.	0501017443	5/8" X 85" HEX AXLE		00	00	01	00
04	0501017432	5/8" X 95.8" HEX AXLE		00	00	00	01
04.	0501017433	5/8" X 2660" HEX AXLE		00	00	00	01
05	0502040723	5/8 HEX AXLE BEARING SLEEVE 5/8		02	02	02	02
06	0501110036	HEX AXLE RIGHT BEARING ASSY		01	01	01	01
07	0501110037	AGRICULTURAL BEARING HEX SHAFT 5/8"		01	01	01	01
08	0501053788	3/4 SQUARE AXLE FASTENER		02	02	02	02
09	0503010363	5/16" X 1" BOLT		04	04	04	04
10	0503011176	5/16" SPRING WASHER		04	04	04	04
11	0503010337	5/16" NUT		04	04	04	04
12	0501017558	5/8" HEX AXLE BEARING SUPPORT		02	02	02	02
13	0503010920	1/2" X 1.1/2" BOLT		04	04	04	04
14	0511017302	FLAT WASHER		04	04	04	04
15	0503010019	1/2" SPRING WASHER		04	04	04	04
16	0503010060	1/2" NUT		04	04	04	04
17	0502011299	BUSHING GEAR		02	02	02	02
18	0502011314	8Z P 1.1/4" RH1.4" GEAR		02	02	02	02
19	0521010530	COUPLING SHAFT		02	02	02	02
20	0503010140	1/8" X 3/4" COTTERPIN		02	02	02	02

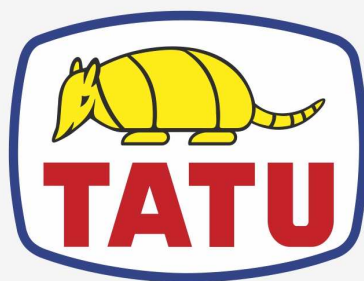

MARCHESAN

Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI

www.marchesan.com.br

