

ROW CROP PLANTERS

PST TRIO FLEX SUPREMA P.P - FRAME
5750/5845/6850/7450/7960/8460/9460

Code: 0501091797
Series: S-0116
Revision: 00
Date Revision: JANEIRO/2017

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111360014	PST TRIO FLEX SUP PP 5750/13E450 ESPECIAL S-0116
0111260062	PST TRIO FLEX SUP PP 5845/12E500 ESPECIAL S-0116
0111260111	PST TRIO FLEX SUP PP 6850/15E450 MH MTH PP S-0116
0111360012	PST TRIO FLEX SUP PP 7450/15E500 ESPECIAL S-0116
0111360013	PST TRIO FLEX SUP PP 7960/16E500 ESPECIAL S-0116
0111260073	PST TRIO FLEX SUP PP 8460/17E500 ESPECIAL S-0116
0111260117	PST TRIO FLEX SUP PP 9460/19E500 ESPECIAL S-0116

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX

0909092331	ASSY FRAME	1
0511059285	5750 ARTICULATION FRAME	2
0511057634	FRAME WITH ARTICULATION 5850	3
0511053196	FRAME WITH ARTICULATION 7450	4
0511053769	FRAME WITH ARTICULATION 7960	5
0511056311	ARTICULATION FRAME 8460	6
0511056155	FRAME WITH ARTICULATION 9460	7
0511059286	RIGHT FRAME WITH AXLE WHEEL 5750	8
0511059287	LEFT FRAME WITH AXLE WHEEL 5750	9
0511059288	CENTRAL FRAME WITH WHEELED AXLE 5750/6850/7860/8160	10
0511057712	RIGHT FRAME WITH WHEELED AXLE 5850	11
0511057668	LEFT FRAME WITH WHEELED AXLE 5850	12
0511053768	CENTRAL FRAME WITH WHEELED AXLE 5850/7960	13
0511053188	RIGHT FRAME WITH WHEELED AXLE 7450	14
0511053189	LEFT FRAME WITH WHEELED AXLE 7450	15
0511053190	CENTRAL FRAME WITH WHEELED AXLE 6450/7285/7450/8460	16
0511053766	RIGHT FRAME WITH WHEELED AXLE 7960/8160	17
0511053767	LEFT FRAME WITH WHEELED AXLE 7960/8160	18
0511056312	RIGHT FRAME WITH WHEELED AXLE 8460	19
0511056313	LEFT FRAME WITH WHEELED AXLE 8460	20
0511056156	RIGHT FRAME WITH WHEEL AXLE	21
0511056157	LEFT FRAME WITH WHEEL AXLE	22
0511055270	CENTRAL FRAME WITH WHEEL AXLE	23
0511059281	PLATFORM SET 5750	24
0511058233	PLATFORM SET 6850	25
0511058251	PLATFORM ASSEMBLY 7450	26
0511058956	PLATFORM SET 7960	27
0511058281	PLATFORM SET 8460	28
0521050214	PLATFORM SET 9460	29
0511059282	HANDLE ASSEMBLY 5750	30
0511057633	HANDLE ASSEMBLY 5850	31
0511058234	HANDLE ASSEMBLY 6850	32
0511058252	HANDLE ASSEMBLY 7450	33
0511058955	HANDLE ASSEMBLY 7960	34
0511058282	HANDLE ASSEMBLY 8460	35
0521050213	HANDLE ASSEMBLY 9460	36
0511056536	LADDER ASSEMBLY	37
0521050533	TURBINE ASSEMBLY MTH PP CSU	38
0521050134	HYDRAULIC SYSTEM ASSEMBLY	39
0521050282	TURBINE ASSEMBLY MTH PP CSU	40
0521050344	ASSY TURBINE MTH PP CSU 7960	41
0521050031	SET TURBINE	42
0521050267	SET TURBINE	43
0521050531	4 MOUTHS RIGHT AIR CONDUCTOR - 13	44
0521050532	LEFT AIR CONDUCTOR 4 MOUTHS - 13	45
0511059503	6 MOUTH AIR CONDUCTOR X 2150 - 6850	46
0511059319	AIR FIXING SUPPORT	47
0501053834	MALE QUICK COUPLER	48
0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	49
0511059406	TURBINE P.P MOUNTED	50
0521050154	PRECISION PLANTING TURBINE WITH HOLE	51
0521052549	CLAMP	52
0511059504	RIGHT AIR CONDUCTOR - 6850	53
0511059505	LEFT AIR CONDUCTOR - 6850	54
0511057906	HOSE ASSY	55



MARCHESAN

INDEX

0521050016	RIGHT AIR DISTRIBUTOR 06 NOZZLES - 17 E500	56
0521050017	LEFT AIR DISTRIBUTOR 06 NOZZLES - 17 E500	57
0521050018	CENTRAL AIR DISTRIBUTOR	58
0511059887	TURBINE PRECISION PLANTING	59
0521050260	SUPPORT ASSEMBLY P.P MTH	60
0521050262	RIGHT AIR DISTRIBUTOR	61
0521050263	LEFT AIR DISTRIBUTOR	62
0521050261	DISTRIBUTOR AIR CENTER 08 MOUTHS - 19 A 21	63
0511057292	ASSY FLOW REGULATION VALVE	64
0511059280	ASSY SILO FERTILIZER 5750	65
0511059954	SET FERTILIZER SILO 5845 CEAC	66
0511058232	SET FERTILIZER SILO 6850	67
0511058250	SET FERTILIZER SILO	68
0511058953	SET FERTILIZER SILO	69
0511058280	SET FERTILIZER SILO	70
0521050215	SET FERTILIZER SILO	71
0511059278	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 5750	72
0511059277	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 5750	73
0511059279	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 5750	74
0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	75
0511057285	SILO FERTILIZER LEFT SUPPORT 5850	76
0511057222	SILO FERTILIZER RIGHT SUPPORT 5850	77
0511057286	SUPPORT SILO CENTRAL FERTILIZER 5850	78
0503061985	FERTILIZER HOPPER WITH 5 TRUNNELS	79
0503062169	ASSEMBLED FERTILIZER HOPPER	80
0511053191	RIGH BEAM SUPPORT WITH DISTRIBUTOR	81
0511053192	LEFT BEAM SUPPORT WITH DISTRIBUTOR	82
0511053193	SUPPORT CENTER BEAM WITH DISTRIBUTOR	83
0503061984	FERTILIZER HOPPER WITH 4 TRUNNELS	84
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	85
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	86
0501053788	3/4" SQUARE AXLE FASTENER	87
0521050046	ASSEMBLY CSU C3 SEMI MOUNTED 5750	88
0511056265	ASSEMBLY CSU 5850	89
0511057754	SINGLE SEED HOPPER SET	90
0511058961	ASSEMBLY CSU C3 SEMI MOUNTED 7960	91
0511058398	ASSEMBLY CSU C3 SEMI MOUNTED 7860/8460	92
0511058580	ASSEMBLY CSU	93
0511056989	ASSEMBLY CSU C3 3 BOX WITH 12 C - 12 E 500	94
0511057755	ASSEMBLY CSU 6850	95
0511058960	ASSEMBLY CSU C3 - 16 NOZZLES 7960	96
0511058397	ASSEMBLY CSU C3 3BOX 7B WITH 17 C 7860	97
0521052687	RIGHT SUPPORT TOWER WITH BOLT	98
0521051927	TOWER SUPPORT HOPPER	99
0521051931	LEFT SUPPORT TOWER WITH BOLT	100
0511057690	3" ARTICULATED SEED CONDUCTOR	101
0521050535	TRANSMISSION ASSEMBLY 5750	102
0511057219	TRANSMISSION ASSY 5845	103
0521050138	TRANSMISSION ASSEMBLY 6850	104
0521050283	TRANSMISSION ASSEMBLY 7450	105
0521050024	ASSEMBLY TRANSMISSION 7960	106
0521050265	TRANSMISSION ASSEMBLY 9460	107
0501052560	MOTOR AXLE SIGNAL	108
0511051434	TRANSMISSION ACTUATOR	109



MARCHESAN

INDEX

0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	110
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	111
0521050183	RIGHT GEAR BOX ASSY	112
0521050184	EXCHANGE LEFT ASSY	113
0521043316	RIGHT GEAR BOX ASSY	114
0521043317	LEFT GEAR BOX ASSY	115
0501058212	SEMI MOUNTED RIGHT CHANGE	116
0511059266	CLOSED BEARING	117
0501056271	GEARBOX CLOSED BEARING	118
0501056443	GEAR HOUSING BEARING	119
0501056444	BEARING WITH ROLLER	120
0501048790	AXLE WITH RING	121
0501054655	CHAIN TENSIONER ASSY	122
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	123
0501058213	LH GEAR BOX	124
0511059261	CHAIN TENSIONER	125
0521055217	LOWER CURRENT STRETCH	126
0501058254	UPPER SEED CHAIN TENSIONER	127
0521055216	BEARING WITH GEAR	128
0521055218	BEARING GEAR WITH DOUBLE	129
0521055214	BEARING GEAR WITH	130
0521055215	DOUBLE TRANSMISSION BEARING	131
0511059265	WHEELED WITH SPRING TRACTION WITH TRANSMISSION	132
0521043313	WHEELED WITH SPRING TRACTION WITHOUT TRANSMISSION	133
0511059262	WHEEL SUPPORT ASSY	134
0501058240	WHEEL FASTENER WITH TENSIONER	135
0511054336	SUPPORT WHEELED WITHOUT TRANSMISSION	136
0511052770	WHEEL WITH TIRE	137
0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	138
0521051801	WHEEL WITH TIRE 7.00X16 WHEELED BOX WITHOUT TRANSMISSION	139
0521051800	WHEELED WITHOUT TRANSMISSION WITHOUT TIRE	140
0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	141
0501058244	WHEEL FIXED CHAIN TENSIONER	142
0501058242	WHEEL MOBILE CHAIN TENSIONER	143
0501058239	WHEEL CHAIN TENSIONER BEARING	144
0511059289	SEMI MOUNTED HYDRAULIC MARKER 5750/5850	145
0511053056	MARKER CYLINDER	146
0511053194	HYDRAULIC MARKER	147
0511053771	MARKER CYLINDER	148
0511057889	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8460	149
0511056158	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 9460	150
0511058449	HYDRAULIC CYLINDER	151
0511058431	HYDRAULIC CYLINDER	152
0501054649	HBM SEQUENTIAL VALVE	153
0511054971	JACK ASSEMBLY	154
0501050633	ROW MARKER DISC ASSEMBLY	155
0511053904	ROW MARKER DISC	156
0511059232	ASSEMBLY SPRING TRACTION	157
0511059291	HYDRAULIC SYSTEM ASSEMBLY 5750/5850	158
0511058231	HYDRAULIC SYSTEM ASSEMBLY	159
0511058284	HYDRAULIC SYSTEM ASSEMBLY	160
0511058901	HYDRAULIC SYSTEM ASSEMBLY	161
0511059290	VALVE ASSEMBLY	162



MARCHESAN

INDEX

0511053065	TRIPLE VALVE	163
0511059948	ASSY PORT MANUAL INSTRUCCION	164
0521053471	MONITORING ASSEMBLY PLANTING SEEDS 18L SEED AND FERTILIZER PM400	165
0511057817	SUPPORT HOSE	166
0521045756	HYDRAULIC CYLINDER	167
0511057653	HYDRAULIC CYLINDER	168
0501053835	FEMALE QUICK COUPLER	169
0511055096	TRACTOR HITCH	170
0511054601	HITCH ARTICULATED TRACTOR	171
0511053179	TRACTOR COUPLING SHAFT	172
0511059236	ASSY TURNBUCKLE SIDE	173
0511053073	TURNBUCKLE SIDE ASSY	174
0521050133	TURNBUCKLE SIDE 755/480	175
0511055275	COMPLETE SIDE EXTENDER	176
0511059237	3 POINT TURNBUCKLE	177
0511053075	3 POINT TURNBUCKLE	178
0511053076	TURNBUCKLE SIDE UPPER	179
0511055277	TURNBUCKLE SIDE UPPER	180
0511059233	INTERMEDIATE TRANSMISSION	181
0503062206	CARDAN TERMINAL	182
0909092333	COMPLETE SEED/FERTILIZER ROW	183
0511057243	LEFT SHORT SEED ROW FRONT	184
0511057246	RIGHT LONG SEED ROW FRONT	185
0511057244	RIGH SHORT SEED ROW FRONT	186
0511057247	LEFT LONG SEED ROW FRONT	187
0511054635	BEARING AXLE BODY	188
0511057159	TRANSMISSION HOPPER SEED ROW	189
0511050609	BEARING WITH 17Z GEAR ASSY	190
0511055260	SEED ROW CHAIN TENSIONER	191
0511052426	TRANSMISSION CARDAN ASSY	192
0511052389	BEARING DOUBLE FRONT ROW SEED	193
0501052769	BEARING WITH 17Z GEAR	194
0511057607	REAR RIGHT ROW SEED	195
0511057608	REAR LEFT ROW SEED	196
0511058747	RIGHT REAR SUPREME SEED ROW P.P CSU	197
0511058748	LEFT REAR SUPREME SEED ROW P.P CSU	198
0511057606	PNEUMATIC SEED DISTRIBUTOR WHIT AXLE HEX	199
0511057502	SET PRECISION PLANTING	200
0511057155	PRECISION PLANTING LEFT TRANSMISSION HOPPER	201
0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN DISC	202
0521052131	VSET2 DISTRIBUTOR WITH CORN DISC WITHOUT PROTECTION	203
0511057154	RIGHT DDD	204
0511057153	DDD LEFT	205
0511053172	LEFT LOW HUB WITH 15 DISC	206
0511053173	RIGHT LOW HUB WITH 15 DISC	207
0511058617	DISC CUT 18 SHORT LINE	208
0511058618	DISC CUT 18 LONG LINE	209
0511044563	20" COULTER BLADE ASSY FOR SHORT ROW	210
0511044585	20" COULTER BLADE ASSY FOR LONG ROW	211
0511056909	DISC BLADE HUB WITHOUT DISC	212
0511056910	HUB WITH 18" DISC BLADE	213
0521054680	20" DISC BLADE HUB	214
0521054679	DISC BLADE HUB	215



MARCHESAN

INDEX


0511053250	SHORT ARM FERTILIZER ROW WITH LEFT DOUBLE DISC	216
0511053251	LONG ARM FERTILIZER ROW WITH RIGHT DOUBLE DISC	217
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	218
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	219
0511057509	SEED RESERVOIR PNEUMATIC ASSY	220
0521057957	FIXED ROD EXTENSION WITH FIXATION	221
0511058212	FERTILIZER ROW SUPPORT ASSY	222
0521042327	DEPTH CONTROL & PRESS WHEEL ASSY	223
0521045198	PRESS WHEELS	224
0521044460	SYSTEM DEPTH / COMPACTOR	225
0521044269	PRESS WHEELS/DEPTH ASSY	226
0521046501	DEPTH CONTROL AND PRESS WHEEL WITH FAST ADJUSTING	227
0521051424	WHEEL SYSTEM DEPTH/COMPACTOR QUICK ADJUSTMENT	228
0521044538	DEPTH WHIT REGULACION ANGLE COMPACT CONTROL	229
0521055064	WHEEL SYSTEM DEPTH/ASSY COMPACTOR	230
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	231
0511053550	DEPTH CONTROL ASSY	232
0511050077	WHEEL STRIPED	233
0511052287	DEPTH WHEEL HUB ASSY	234
0511054333	COMPACT WHEEL RIGHT WITH BEARING	235
0511054334	COMPACT WHEEL LEFT WITH BEARING	236
0501052297	DEPTH WHEELS REGULATOR ASSY	237
0501052538	DEPTH BAND WITH ARMS	238
0511055690	WHEEL SYSTEM	239
0511055326	DEPTH CONTROL PRESS WHEEL ASSY	240
0511055327	COMPACTING WHEEL V ASSY RUBBER	241
0511059462	DEPTH CONTROL WITH FAST ADJUSTMENT	242
0501052908	COMPACTOR WHEEL WITH BEARING	243
0501056769	DEPTH WHEELS REGULATOR ASSY	244
0521051423	COMPACTOR SUPPORT	245
0511052971	SEMI-ASSEMBLED DEPTH CONTROL WITH THREAD	246
0511052970	SYSTEM COMPACTOR V SEMI MOUNTED	247
0511055819	DEPTH BAND WITH RIM	248
0521055065	ASSY DEPTH / COMPACTOR	249
0521055068	RAYED WHEEL CENTER CLOSED	250
0521055018	WHEEL DRIVE WHEEL LEFT IN V	251
0521055019	IRON IN RIGHT WHEEL COMPACTOR V	252
0521054991	WHEEL DRIVE WHEEL RIGHT	253
0511058650	SEMI-MOUNTED DEPTH CONTROL	254
0501059228	ADJUSTMENT LEVER	255
0511058652	LEFT DEPTH WHEEL ARM WITH HUB	256
0511058651	RIGHT DEPTH WHEEL ARM WITH HUB	257
0501052627	ASSY DEPTH WHEEL HUB	258
0511055628	DEPTH WHEEL SYSTEM	259
0511055629	DEPTH WHEEL SYSTEM	260
0511055328	DEPTH WHEEL SYSTEM	261
0511055329	LEFT DEPTH WHEEL	262
0501058362	LARGER HANDLE ASSY	263
0501055289	HANDLE SMALLER ASSY	264
0511059463	COMFORT WHEEL WITH FAST ADJUSTMENT	265
0511059325	LEFT ARM COVERED WHEEL ASSEMBLED	266
0511059324	RIGHT ARM COVERED WHEEL ASSEMBLED	267
0511051546	RIGHT DEPTH CONTROL HUB	268
0511051547	LEFT DEPTH CONTROL HUB	269



MARCHESAN

INDEX

0511051583	SEMI-ASSEMBLED DEPTH WHEEL HUB		270
0521055033	SEMI-ASSEMBLED COMPACTOR BODY		271
0521055054	LEFT ARM WITH SLEEVE		272
0521055055	HUB WHEEL DEPTH COMPLETE WITHOUT LUBRICATION		273
0521055066	RIGHT ARM WITH SLEEVE		274
0511051144	SCARIFIER SPINDLE		275
0501110231	SCARIFIER ROD WITH TIP		276
0511054835	HDA		277
0511058935	ROD WITH POINT FLANGE WASHER SPRING HDA		278
0521050193	STEM FUSE WITH CONDUCTOR		279
0501110860	ROD WITH BEAK		280

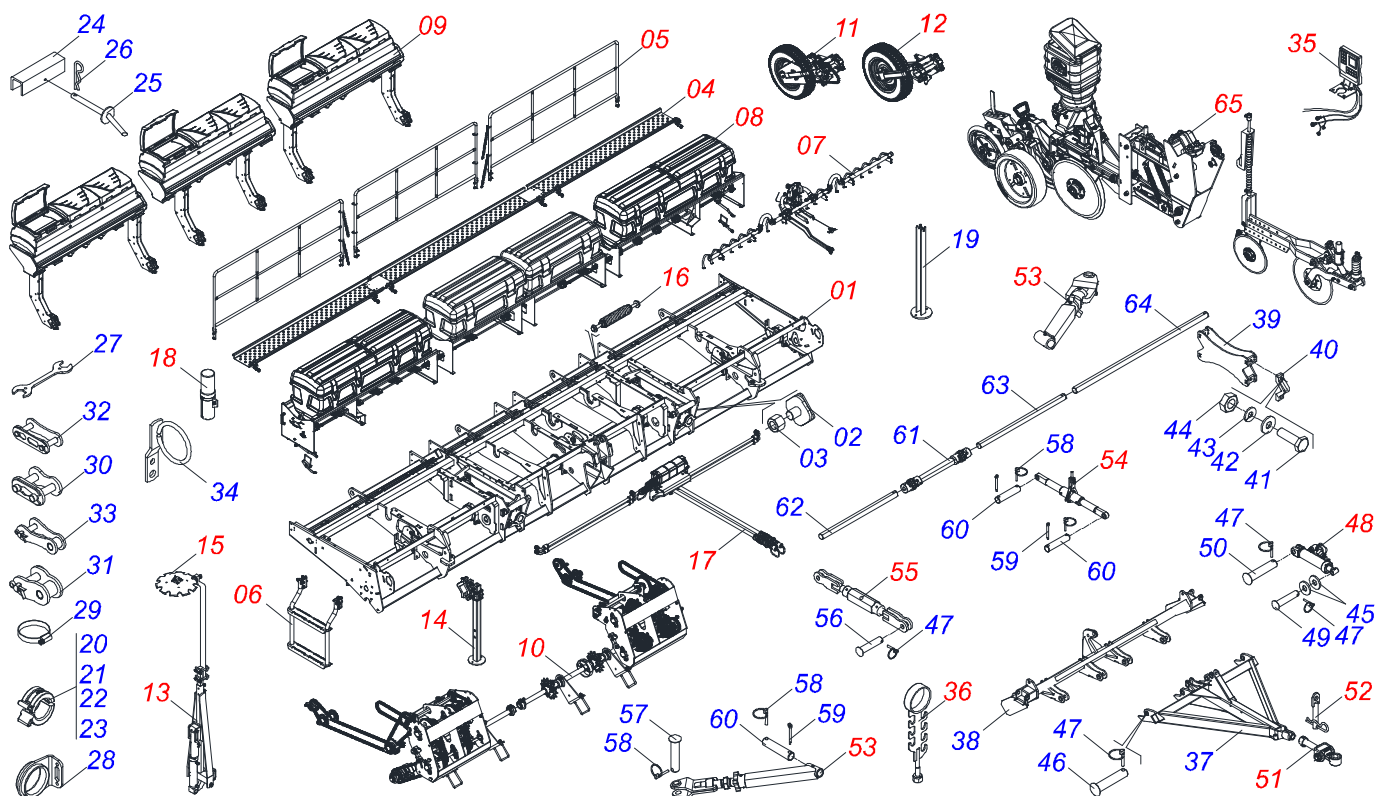

Item	Code	Description	See page	5750	5845	6850	7450	7960	8460	9460
01	0511059285	5750 ARTICULATION FRAME	2	01	00	00	00	00	00	00
01..	0511057634	FRAME WITH ARTICULATION 5850	3	00	01	00	00	00	00	00
01...	0511053049	FRAME WITH ARTICULATION 6850		00	00	01	00	00	00	00
01....	0511053196	FRAME WITH ARTICULATION 7450	4	00	00	00	01	00	00	00
01.....	0511053769	FRAME WITH ARTICULATION 7960	5	00	00	00	00	01	00	00
01.....	0511056311	ARTICULATION FRAME 8460	6	00	00	00	00	00	01	00
01.....	0511056155	FRAME WITH ARTICULATION 9460	7	00	00	00	00	00	00	01
02	0521064285	LOCK LOWER FRAME		02	02	02	02	02	02	02
03	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		02	02	02	02	02	02	02
04	0511059281	PLATFORM SET 5750	24	01	00	00	00	00	00	00
04..	0511057220			00	01	00	00	00	00	00
04...	0511058233	PLATFORM SET 6850	25	00	00	01	00	00	00	00
04....	0511058251	PLATFORM ASSEMBLY 7450	26	00	00	00	01	00	00	00
04.....	0511058956	PLATFORM SET 7960	27	00	00	00	00	01	00	00
04.....	0511058281	PLATFORM SET 8460	28	00	00	00	00	00	01	00
04.....	0521050214	PLATFORM SET 9460	29	00	00	00	00	00	00	01
05	0511059282	HANDLE ASSEMBLY 5750	30	01	00	00	00	00	00	00
05..	0511057633	HANDLE ASSEMBLY 5850	31	00	01	00	00	00	00	00
05...	0511058234	HANDLE ASSEMBLY 6850	32	00	00	01	00	00	00	00
05....	0511058252	HANDLE ASSEMBLY 7450	33	00	00	00	01	00	00	00
05.....	0511058955	HANDLE ASSEMBLY 7960	34	00	00	00	00	01	00	00
05.....	0511058282	HANDLE ASSEMBLY 8460	35	00	00	00	00	00	01	00
05.....	0521050213	HANDLE ASSEMBLY 9460	36	00	00	00	00	00	00	01
06	0511056536	LADDER ASSEMBLY	37	02	02	02	02	02	02	02
07	0521050533	TURBINE ASSEMBLY MTH PP CSU	38	01	00	00	00	00	00	00
07..	0511059962	TURBINE MTH SUP PP		00	01	00	00	00	00	00
07...	0521050134	HYDRAULIC SYSTEM ASSEMBLY	39	00	00	01	00	00	00	00
07....	0521050282	TURBINE ASSEMBLY MTH PP CSU	40	00	00	00	01	00	00	00
07.....	0521050344	ASSY TURBINE MTH PP CSU 7960	41	00	00	00	00	01	00	00
07.....	0521050031	SET TURBINE	42	00	00	00	00	00	01	00
07.....	0521050267	SET TURBINE	43	00	00	00	00	00	00	01

ASSY FRAME


0909092331

Item	Code	Description	See page	5750	5845	6850	7450	7960	8460	9460
08	0511059280	ASSY SILO FERTILIZER 5750	65	01	00	00	00	00	00	00
08.	0511059954	SET FERTILIZER SILO 5845 CEAC	66	00	01	00	00	00	00	00
08..	0511058232	SET FERTILIZER SILO 6850	67	00	00	01	00	00	00	00
08...	0511058250	SET FERTILIZER SILO	68	00	00	00	01	00	00	00
08....	0511058953	SET FERTILIZER SILO	69	00	00	00	00	01	00	00
08.....	0511058280	SET FERTILIZER SILO	70	00	00	00	00	00	01	00
08.....	0521050215	SET FERTILIZER SILO	71	00	00	00	00	00	00	01
09	0521050046	ASSEMBLY CSU C3 SEMI MOUNTED 5750	88	01	00	00	00	00	00	00
09.	0511056265	ASSEMBLY CSU 5850	89	00	01	00	00	00	00	00
09..	0511057754	SINGLE SEED HOPPER SET	90	00	00	01	00	00	00	00
09...	0511058961	ASSEMBLY CSU C3 SEMI MOUNTED 7960	91	00	00	00	00	01	00	00
09....	0511058398	ASSEMBLY CSU C3 SEMI MOUNTED 7860/8460	92	00	00	00	00	00	01	00
09.....	0511058486	SET CSU C3 SEMI ASSEMBLED		00	00	00	00	00	00	01
10	0521050535	TRANSMISSION ASSEMBLY 5750	102	01	00	00	00	00	00	00
10.	0511057219	TRANSMISSION ASSY 5845	103	00	01	00	00	00	00	00
10..	0521050138	TRANSMISSION ASSEMBLY 6850	104	00	00	01	00	00	00	00
10...	0521050283	TRANSMISSION ASSEMBLY 7450	105	00	00	00	01	00	00	00
10....	0521050024	ASSEMBLY TRANSMISSION 7960	106	00	00	00	00	01	01	00
10.....	0521050265	TRANSMISSION ASSEMBLY 9460	107	00	00	00	00	00	00	01
11	0511059265	WHEELED WITH SPRING TRACTION WITH TRANSMISSION	132	04	04	04	04	04	04	04
12	0521043313	WHEELED WITH SPRING TRACTION WITHOUT TRANSMISSION	133	02	02	02	02	02	02	02
13	0511059289	SEMI MOUNTED HYDRAULIC MARKER 5750/5850	145	01	01	00	00	00	00	00
13.	0511053056	MARKER CYLINDER	146	00	00	01	00	00	00	00
13..	0511053194	HYDRAULIC MARKER	147	00	00	00	01	00	00	00
13...	0511053771	MARKER CYLINDER	148	00	00	00	00	01	00	00
13....	0511057889	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8460	149	00	00	00	00	00	01	00
13.....	0511056158	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 9460	150	00	00	00	00	00	00	01
14	0511054971	JACK ASSEMBLY	154	02	02	02	02	02	02	02
15	0501050633	ROW MARKER DISC ASSEMBLY	155	02	02	02	02	02	02	02
16	0511059232	ASSEMBLY SPRING TRACTION	157	02	02	02	02	02	02	02
17	0511059291	HYDRAULIC SYSTEM ASSEMBLY 5750/5850	158	01	01	00	00	00	00	00
17.	0511058231	HYDRAULIC SYSTEM ASSEMBLY	159	00	00	01	01	01	00	00
17..	0511058284	HYDRAULIC SYSTEM ASSEMBLY	160	00	00	00	00	00	01	00
17...	0511058901	HYDRAULIC SYSTEM ASSEMBLY	161	00	00	00	00	00	00	01
18	0511059948	ASSY PORT MANUAL INSTRUCCION	164	01	01	01	01	01	01	01
19	0501065677	STRUT		02	02	02	02	02	02	02
20	0501047895	25 ROD STOP		03	03	03	03	03	03	03
21	0501047885	30 ROD STOP		03	03	03	03	03	03	03
22	0501047886	35 ROD STOP		03	03	03	03	03	03	03
23	0501047887	40 ROD STOP		03	03	03	03	03	03	03
24	0521013022	TRANSPORT LOCK		03	03	03	03	03	03	03
25	0501068994	8,30 X 78 LOCK PIN		03	03	03	03	03	03	03
26	0503030168	HITCH PIN CLIP		03	03	03	03	03	03	03
27	0541015451	FIXED KEY 2.3/8 X 2.3/4		01	01	01	01	01	01	01
28	0521066304	HOSE GUIDE		01	01	01	01	01	01	01
29	0503010243	CLAMP		05	05	05	05	05	05	05
29.	0503010246	CLAMP		07	07	07	07	07	07	07
29..	0503017823	THREAD CLAMP WITHOUT END 14MM WIDTH		09	09	09	09	09	09	09
30	0503011751	REDUCTION		06	06	06	06	06	06	06
31	0503010951	REDUCTION		04	04	04	04	04	04	04
32	0503010780	N-2050 AMENDMENT		06	06	06	06	06	06	06
33	0503011750	AMENDMENT WITH LOCK		06	06	06	06	06	06	06
34	0511063282	HOSE HOLDER		10	12	14	16	18	19	19
35	0521053471	MONITORING ASSEMBLY PLANTING SEEDS 18L SEED AND FERTILIZER PM400	165	00	00	00	00	00	00	01
36	0511057817	SUPPORT HOSE	166	01	01	01	01	01	01	01


ASSY FRAME

0909092331


Item	Code	Description	See page	5750	5845	6850	7450	7960	8460	9460
37	0521066289	5750/6350/6850 FRONT DRAWBAR		01	01	00	00	01	00	00
37.	0521063882	DRAWBAR		00	00	01	00	00	00	00
37..	0521065284	HYDRAULIC HEADER		01	01	00	01	00	01	00
37...	0521064835	HEADER		00	00	00	00	00	00	01
38	0521066290	INTERMEDIATE DRAWBAR - 5750/6850/7860/8160		01	00	00	00	00	00	00
38.	0521067151	INTERMEDIATE DRAWBAR - 5850/7960		00	01	00	00	01	00	00
38..	0521063898	DRAWBAR INTERMEDIARY		00	00	01	00	00	00	00
38...	0521065283	INTERMEDIATE HEADER		00	00	00	01	00	01	00
38....	0521067839	INTERMEDIATE HEAD 9460/10460/10985		00	00	00	00	00	00	01
39	0511061021	SUPPORT FASTENER		04	04	04	04	04	04	04
40	0502010175	HITCH CLAMP		06	06	06	06	06	06	06
41	0501010163	5/8" X 4-1/2" BOLT		16	16	16	16	16	16	16
42	0501012140	FLAT WASHER		16	16	16	16	16	16	16
43	0503010027	5/8 SPRING WASHER		16	16	16	16	16	16	16
44	0503010013	5/8 NUT		16	16	16	16	16	16	16
45	0531016049	FLAT WASHER		02	02	02	02	02	02	02
46	0571019949	JUNCTION SHAFT		06	06	00	00	00	00	00
47	0503030085	LOCK PIN		06	06	00	00	00	00	00
48	0521045756	HYDRAULIC CYLINDER	167	01	01	01	01	01	01	01
49	0521010582	COUPLING SHAFT		01	01	01	01	01	01	01
50	0521010581	0.9" X 4.9" COUPLING SHAFT		01	01	01	01	01	01	01
51	0511055096	TRACTOR HITCH	170	01	01	00	00	00	00	00
51.	0511054601	HITCH ARTICULATED TRACTOR	171	00	00	01	01	01	01	01
52	0511053179	TRACTOR COUPLING SHAFT	172	01	01	01	01	01	01	01
53	0511059236	ASSY TURNBUCKLE SIDE	173	02	00	00	00	00	00	00
53.	0511059959	COMPLETE SIDE EXTENDER		00	02	00	00	00	00	00
53..	0511053073	TURNBUCKLE SIDE ASSY	174	00	00	02	02	00	00	00
53...	0521050133	TURNBUCKLE SIDE 755/480	175	00	00	00	00	02	00	00
53....	0511055275	COMPLETE SIDE EXTENDER	176	00	00	00	00	00	02	02
54	0511059237	3 POINT TURNBUCKLE	177	01	01	00	00	01	00	01
54.	0511053075	3 POINT TURNBUCKLE	178	00	00	01	01	00	00	01
55	0511053076	TURNBUCKLE SIDE UPPER	179	02	02	02	02	02	02	02
55.	0511055277	TURNBUCKLE SIDE UPPER	180	00	00	00	00	00	00	02
56	0521010571	COUPLING SHAFT		04	04	04	04	04	04	04
57	0521010780	1.2" X 4.5" COUPLING SHAFT		04	04	04	04	04	04	04
58	0503030119	LOCK PIN		06	06	06	06	06	06	06
59	0503010523	1/4" X 2" SPLIT PIN		04	04	04	04	04	04	04
60	0521010588	0.9" X 7.0" COUPLING SHAFT		01	01	01	01	01	01	01
60.	0571019951	JUNCTION SHAFT		01	01	01	01	01	01	01
61	0511059233	INTERMEDIATE TRANSMISSION	181	02	02	00	00	00	02	02
61.	0503062206	CARDAN TERMINAL	182	00	00	02	02	02	00	00
62	0571013469	5/8 X 700 HEX AXLE		01	00	01	00	00	00	00
62.	0571013726	5/8 X 800 HEX AXLE		00	00	00	01	02	01	00
63	0571013470	5/8 X 1100 HEX AXLE		01	00	01	00	00	00	00
63.	0571013724	5/8 X 1250 HEX AXLE		00	00	01	00	00	01	00
63..	0531012714	HEX AXLE 5/8 X 1700		00	00	00	00	00	00	01
64	0581010472	HEX AXLE 5/8 X 1510		02	00	00	00	00	00	00
64.	0581012757	HEX AXLE 5/8 X 1658		02	00	00	00	00	00	00
64..	0571013468	5/8 X 2040 HEX AXLE		00	00	02	00	00	00	00
64...	0571013725	5/8 X 2190 HEX AXLE		00	00	00	02	00	00	00
64....	0571014914	SHAFT AXLE 5/8 X 2720		00	00	00	00	02	00	02
64.....	0551016265	HEX AXLE 5/8 X 2890		02	00	00	00	00	02	00
65	0909092333	COMPLETE SEED/FERTILIZER ROW	183	13	12	15	15	16	17	18

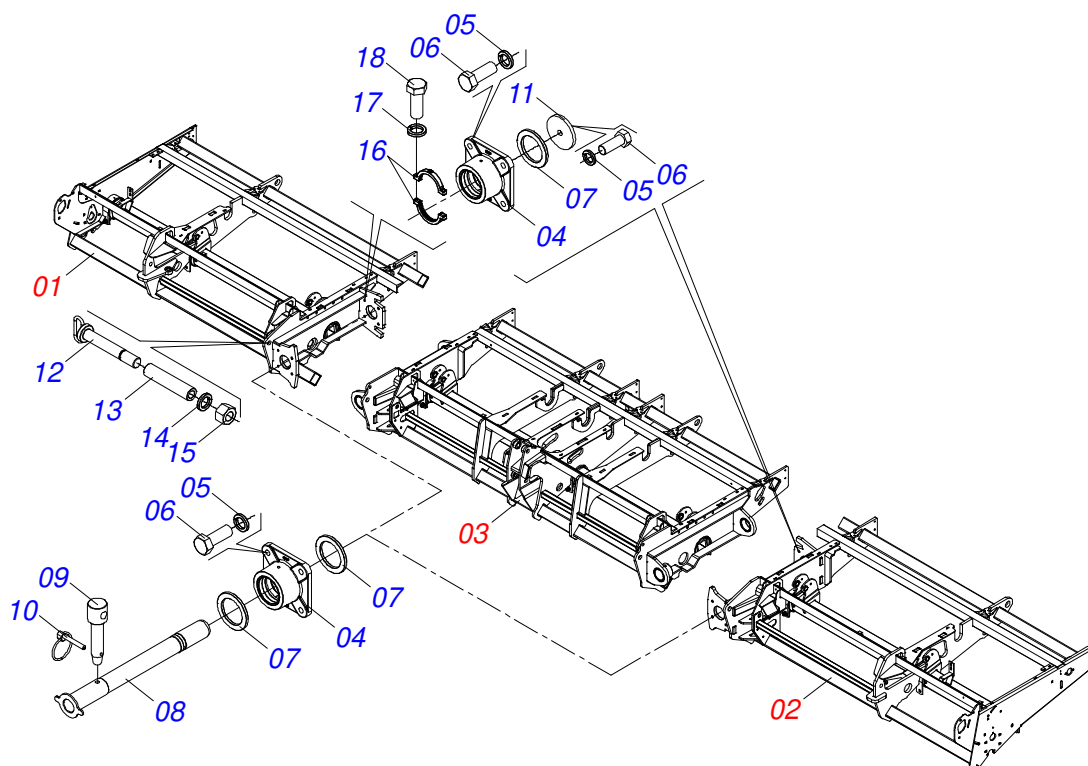


Item	Code	Description	See page	QT
01	0511059286	RIGHT FRAME WITH AXLE WHEEL 5750	8	01
02	0511059287	LEFT FRAME WITH AXLE WHEEL 5750	9	01
03	0511059288	CENTRAL FRAME WITH WHEELED AXLE 10	10	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0521063003	LOCK PIN		02
13	0571010969	LOCK SLEEVE FRAME		02
14	0503013627	1.1/2 SPRING WASHER		02
15	0501010110	1.1/2" NUT		02
16	0502012698	CLAMP		04
17	0503011444	SPRING WASHER		04
18	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		04

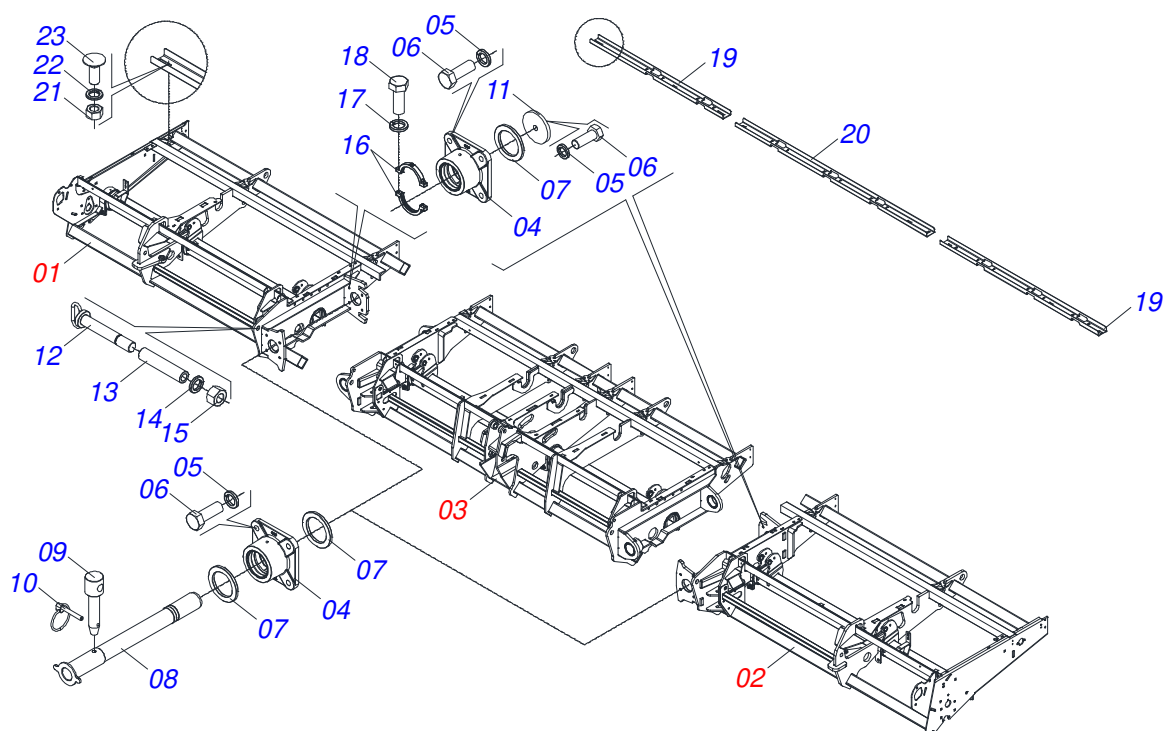


Item	Code	Description	See page	QT
01	0511057712	RIGHT FRAME WITH WHEELED AXLE 5850	11	01
02	0511057668	LEFT FRAME WITH WHEELED AXLE 5850	12	01
03	0511053768	CENTRAL FRAME WITH WHEELED AXLE 5850/7960	13	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0521063003	LOCK PIN		02
13	0571010969	LOCK SLEEVE FRAME		02
14	0503013627	1.1/2 SPRING WASHER		02
15	0501010110	1.1/2" NUT		02
16	0502012698	CLAMP		04
17	0503011444	SPRING WASHER		04
18	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
19	0581017979	GUTTER		02
20	0581018032	24 X 50 X 1550 SIDE GUTTER		02
21	0503010026	3/8" NUT		12
22	0503010025	3/8 SPRING WASHER		12
23	0501011643	3/8 X 1" BOLT		12

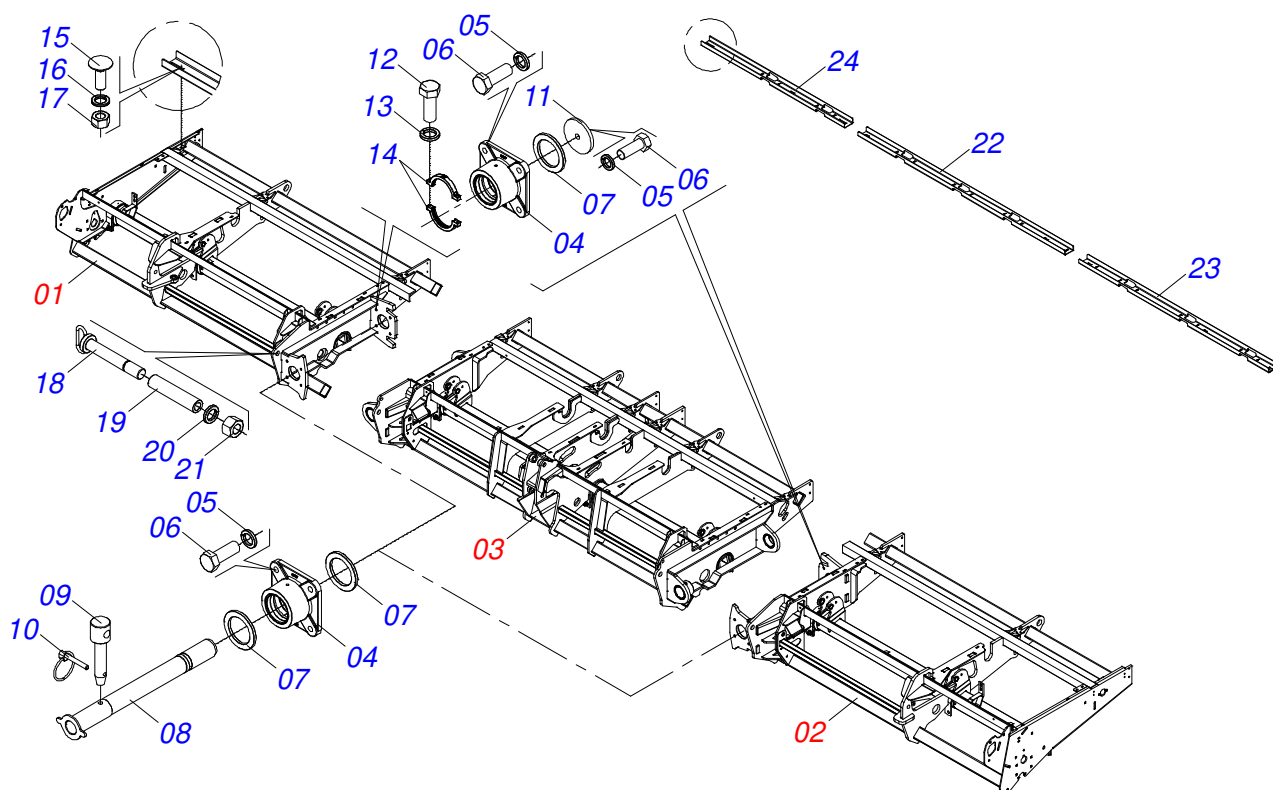


Item	Code	Description	See page	QT
01	0511053188	RIGHT FRAME WITH WHEELED AXLE 7450	14	01
02	0511053189	LEFT FRAME WITH WHEELED AXLE 7450	15	01
03	0511053190	CENTRAL FRAME WITH WHEELED AXLE 6450/7285/7450/8460	16	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
13	0503011444	SPRING WASHER		04
14	0502012698	CLAMP		04
15	0501011643	3/8 X 1" BOLT		14
16	0503010025	3/8 SPRING WASHER		14
17	0503010026	3/8" NUT		14
18	0521063003	LOCK PIN		02
19	0571010969	LOCK SLEEVE FRAME		02
20	0503013627	1.1/2 SPRING WASHER		02
21	0501010110	1.1/2" NUT		02
22	0581018018	TROUGH 24 X 50 X 1255		02
23	0581018019	TROUGH 24 X 50 X 1070		02
24	0581015857	GUTTER 24 X 50 X 1080		02

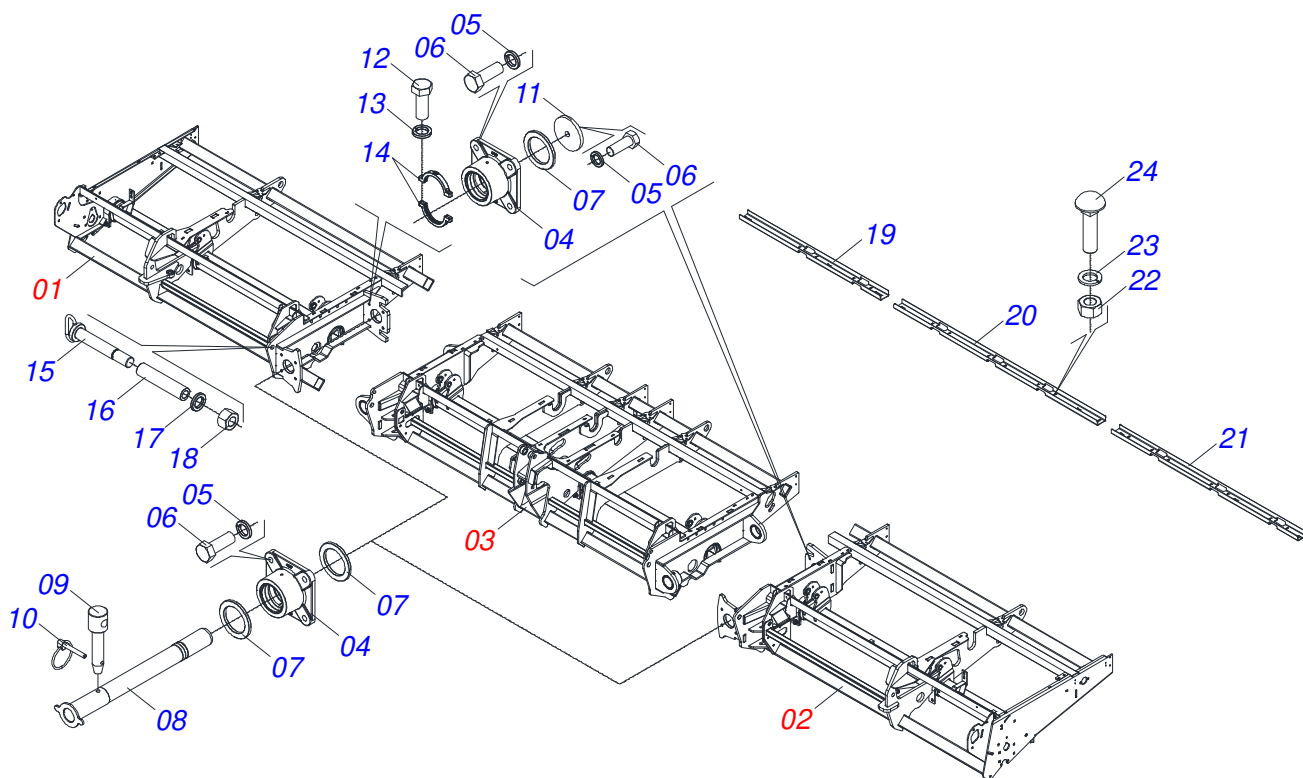


Item	Code	Description	See page	QT
01	0511053766	RIGHT FRAME WITH WHEELED AXLE 7960/8160	17	01
02	0511053767	LEFT FRAME WITH WHEELED AXLE 7960/8160	18	01
03	0511053768	CENTRAL FRAME WITH WHEELED AXLE 5850/7960	13	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
13	0503011444	SPRING WASHER		04
14	0502012698	CLAMP		04
15	0521063003	LOCK PIN		02
16	0571010969	LOCK SLEEVE FRAME		02
17	0503013627	1.1/2 SPRING WASHER		02
18	0501010110	1.1/2" NUT		02
19	0591011141	24 X 50 X 1050 GUTTER		02
20	0591011142	CHANNEL 24 X 50 X 1570		02
21	0591011140	24 X 50 X 1010 GUTTER		02
22	0503010026	3/8" NUT		14
23	0503010025	3/8 SPRING WASHER		14
24	0501011643	3/8 X 1" BOLT		14

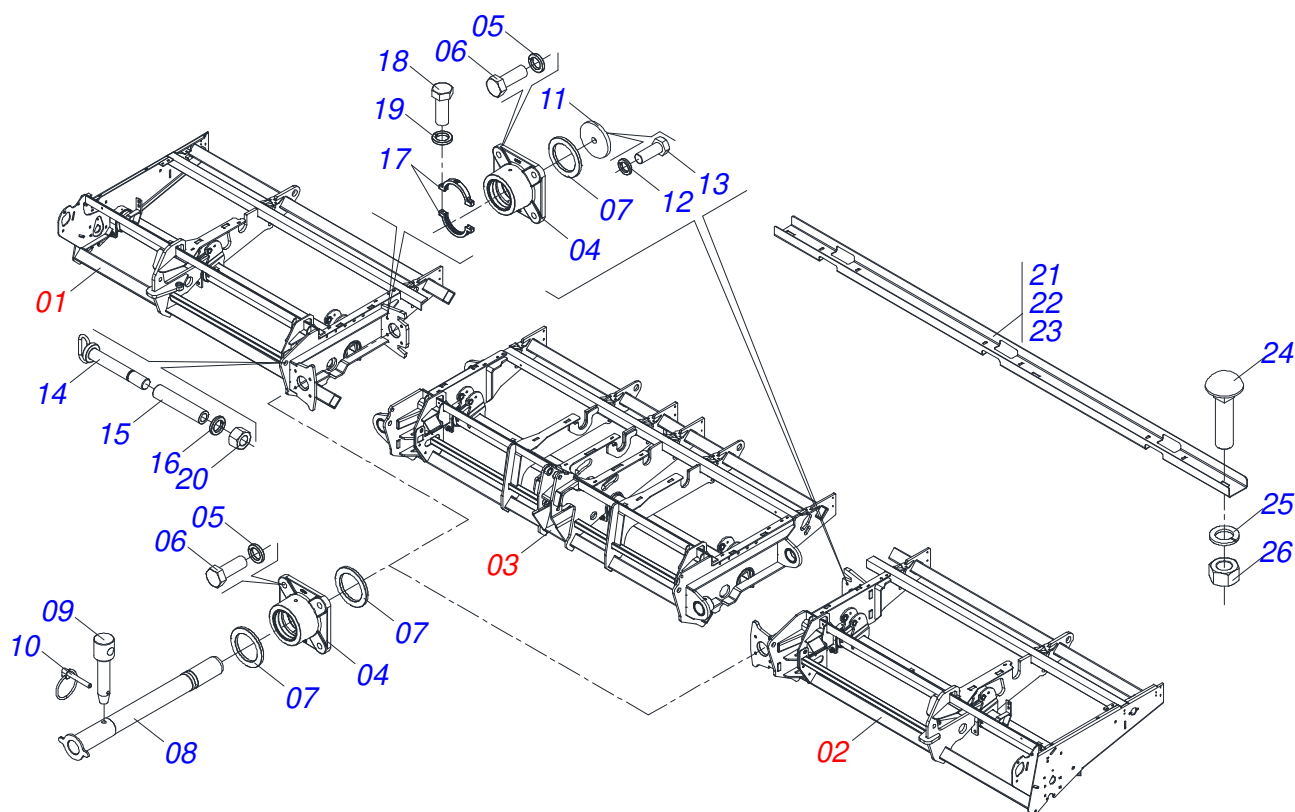


Item	Code	Description	See page	QT
01	0511056312	RIGHT FRAME WITH WHEELED AXLE 8460	19	01
02	0511056313	LEFT FRAME WITH WHEELED AXLE 8460	20	01
03	0511053190	CENTRAL FRAME WITH WHEELED AXLE 6450/7285/7450/8460	16	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		16
06	0501010098	3/4" UNC BOLT		16
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503011442	3/4" SPRING WASHER		02
13	0501010098	3/4" UNC BOLT		02
14	0521063003	LOCK PIN		02
15	0571010969	LOCK SLEEVE FRAME		02
16	0503013627	1.1/2 SPRING WASHER		02
17	0502012698	CLAMP		04
18	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
19	0503011444	SPRING WASHER		04
20	0501010110	1.1/2" NUT		02
21	0581017979	GUTTER		02
22	0581017935	GUTTER		02
23	0581018018	TROUGH 24 X 50 X 1255		02
24	0501011643	3/8 X 1" BOLT		12
25	0503010025	3/8 SPRING WASHER		12
26	0503010026	3/8" NUT		12

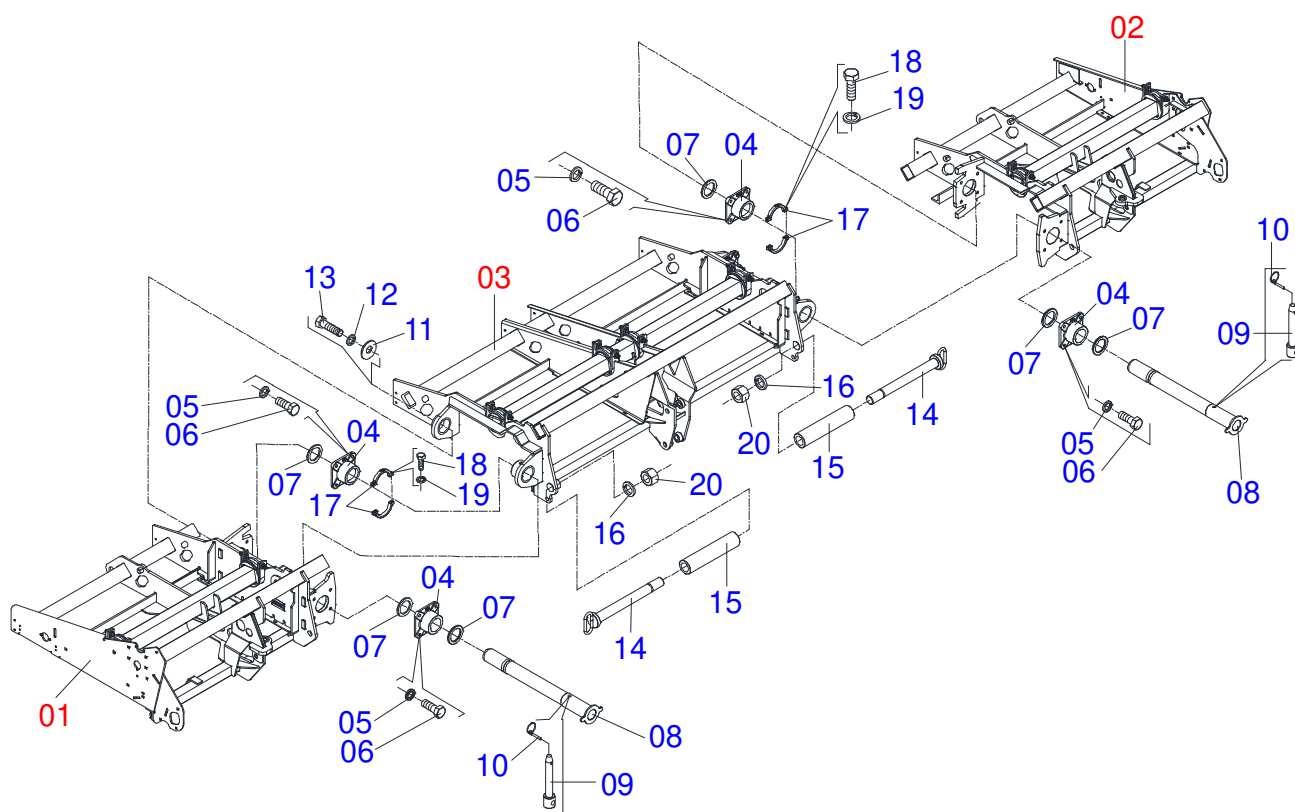


Item	Code	Description	See page	QT
001	0511056156	RIGHT FRAME WITH WHEEL AXLE	21	01
002	0511056157	LEFT FRAME WITH WHEEL AXLE	22	01
003	0511055270	CENTRAL FRAME WITH WHEEL AXLE	23	01
004	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
005	0503011442	3/4" SPRING WASHER		16
006	0501010098	3/4" UNC BOLT		16
007	0571010094	SLEEVE FLANGE		06
008	0521064842	PIVOT SHAFT		02
009	0571013510	LOCK AXLE		02
010	0503030085	LOCK PIN		02
011	0571010095	FLAT WASHER		02
012	0503011442	3/4" SPRING WASHER		02
013	0501010098	3/4" UNC BOLT		02
014	0521063003	LOCK PIN		02
015	0571010969	LOCK SLEEVE FRAME		02
016	0503013627	1.1/2 SPRING WASHER		02
017	0502012698	CLAMP		04
018	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
019	0503011444	SPRING WASHER		04
020	0501010110	1.1/2" NUT		02

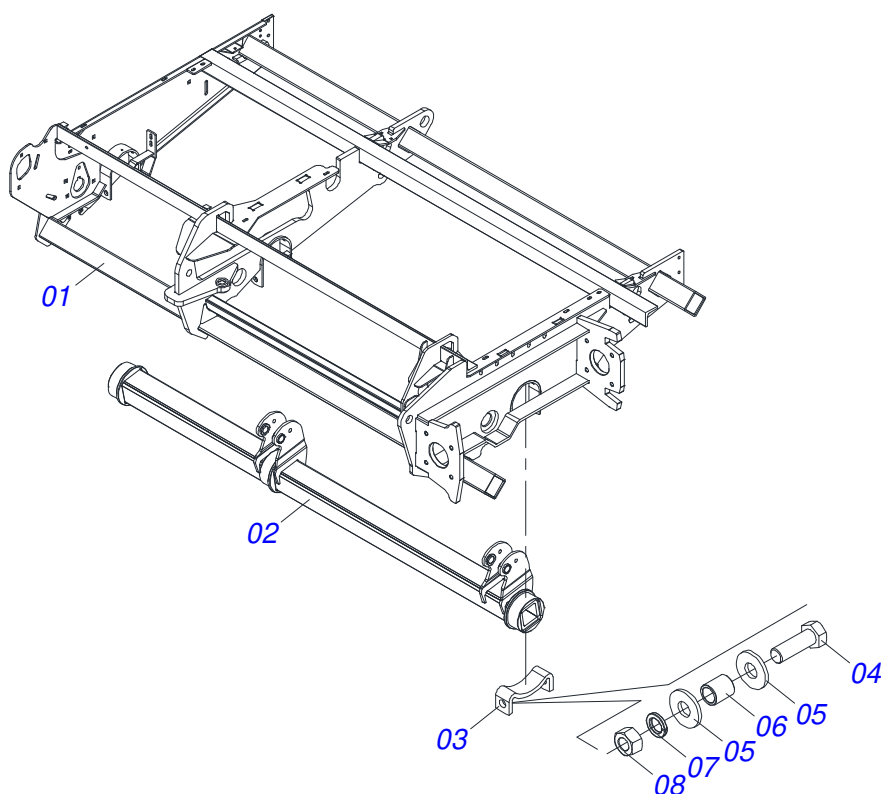


Item	Code	Description	See page	QT
01	0521066917	RIGHT FRAME		01
02	0521063872	ARTICLES AXLE RIGHT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

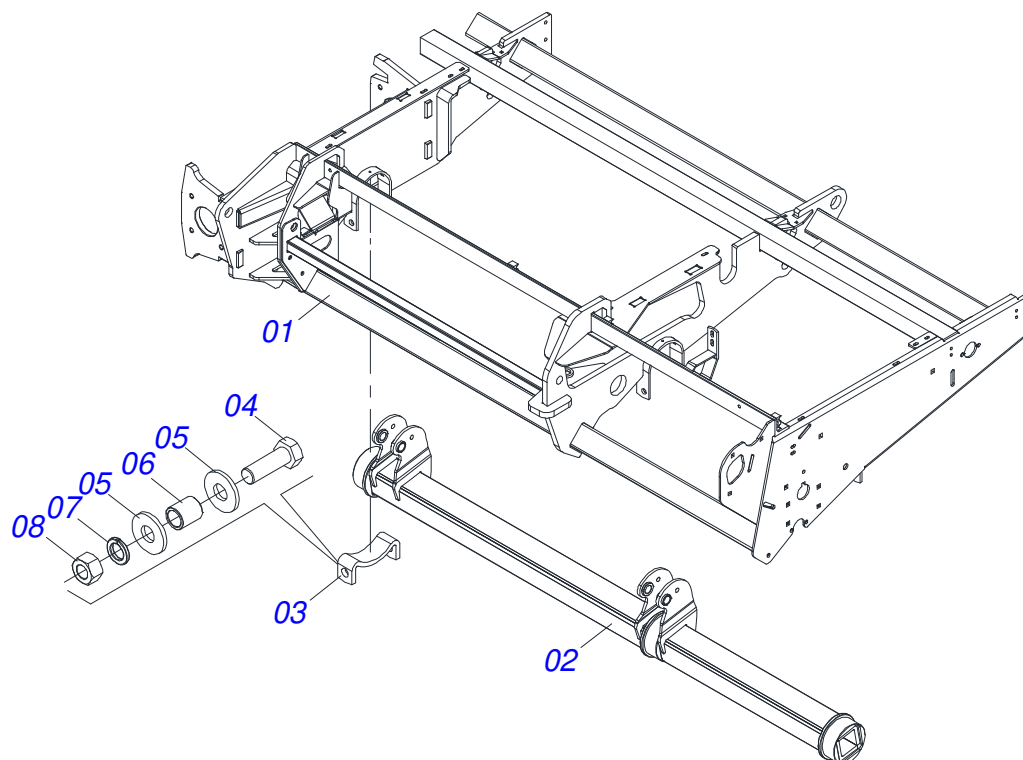


Item	Code	Description	See page	QT
01	0521066918	LEFT FRAME		01
02	0521063873	ARTICLES AXLE LEFT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

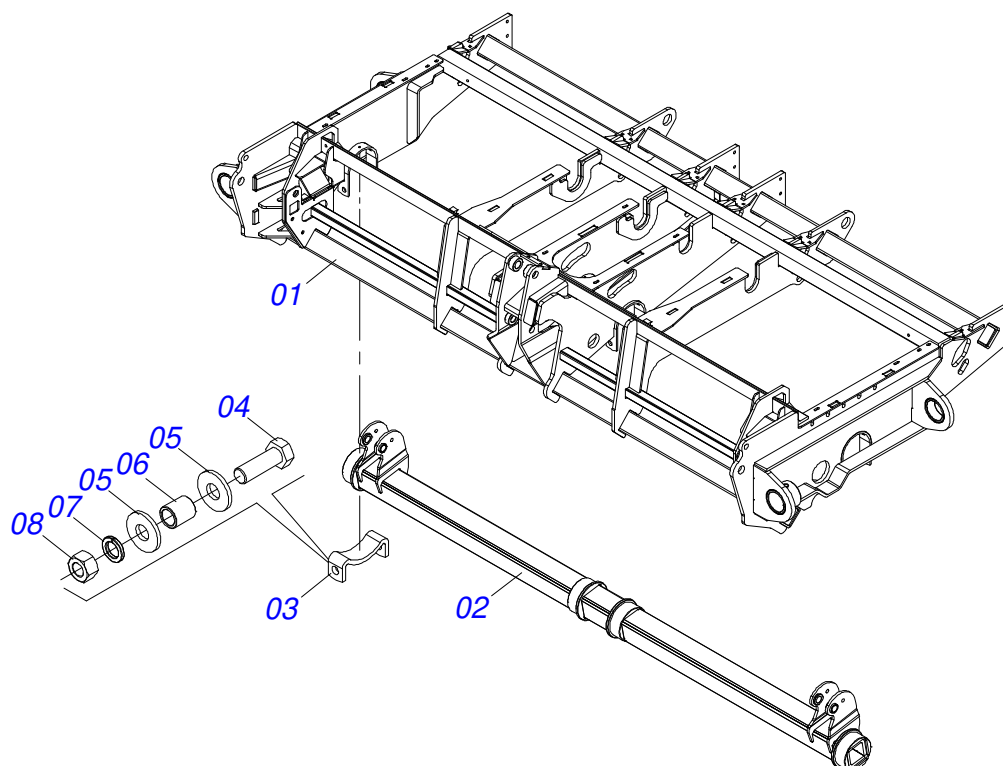


Item	Code	Description	See page	QT
01	0521066916	CENTRAL FRAME		01
02	0521013199	LOWER BEARING SEMI		04
03	0503010899	5/8 UNC X 2.1/4 BOLT		08
04	0501012140	FLAT WASHER		16
05	0531013922	0.6" X 0.8" X 1" SLEEVE		08
06	0503011445	SPRING WASHER		08
07	0503010013	5/8 NUT		08
08	0521063878	ARTICLE AXLE ROLLED		01

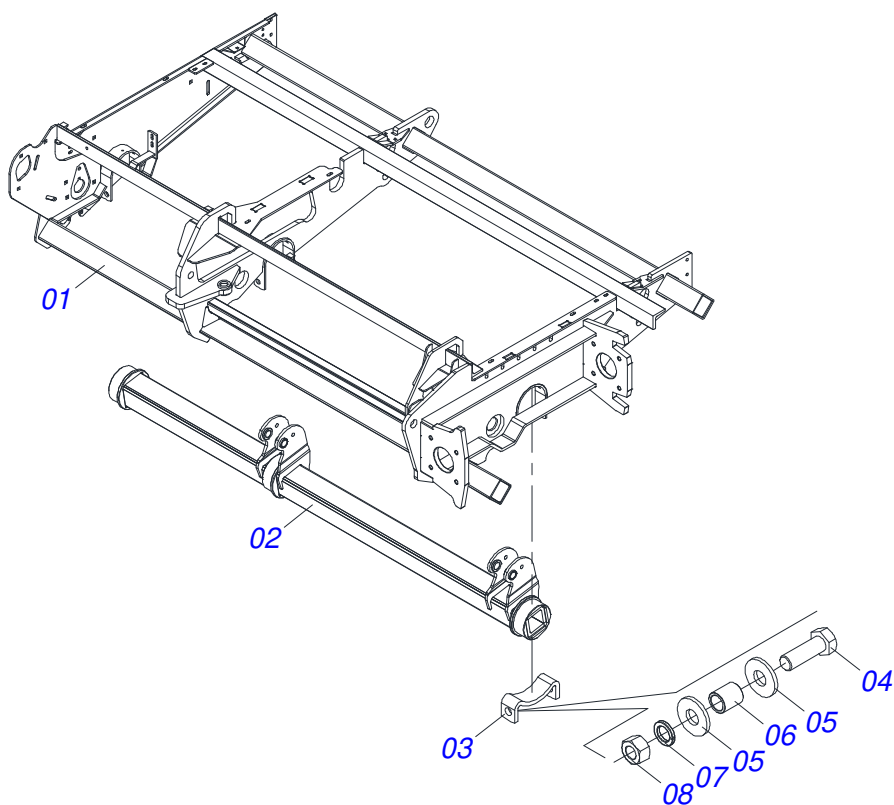


Item	Code	Description	See page	QT
01	0521067217	12 E 500 RH FRAME		01
02	0521067216	RH FRAME WITH AXLE AND WHEEL		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

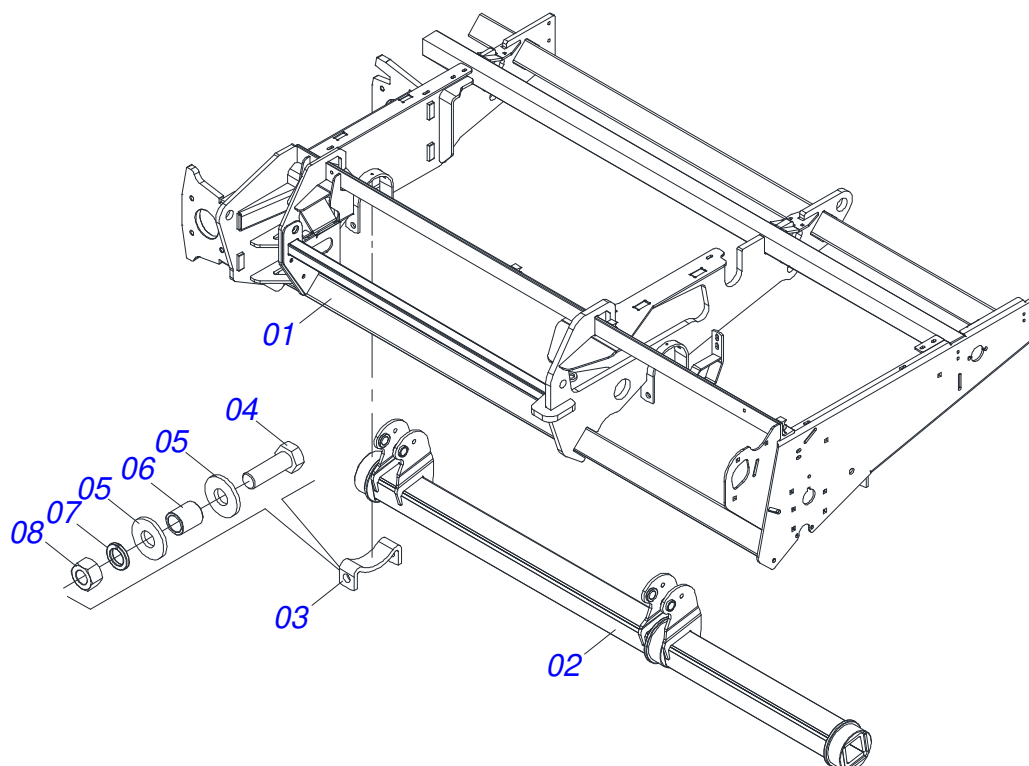


Item	Code	Description	See page	QT
01	0521067156	12 E 500 LEFT FRAME		01
02	0521067159	LH PIVOT SHAFT SIDE WHELL		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

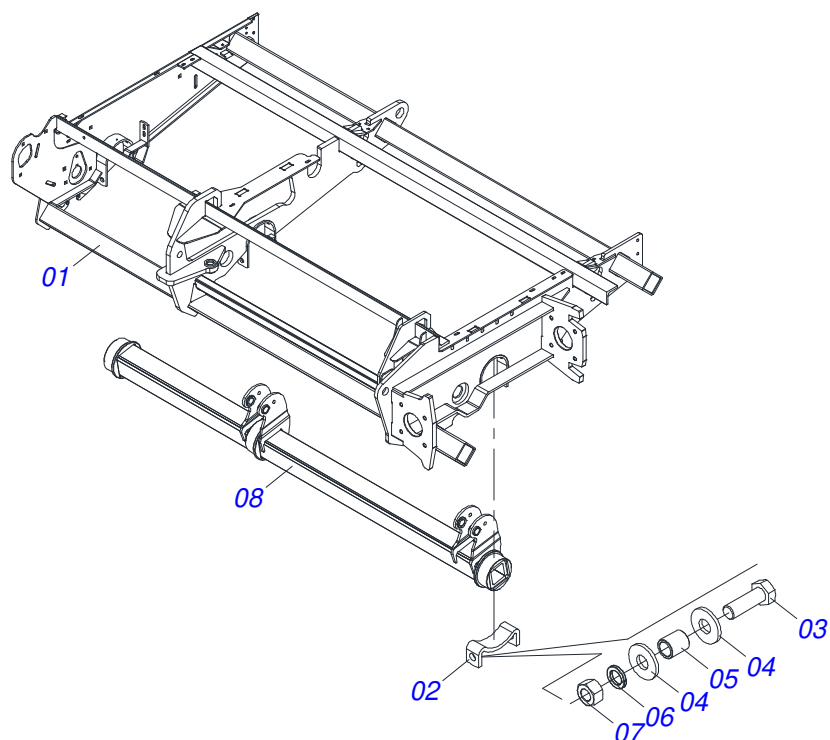


Item	Code	Description	See page	QT
01	0521064281	CENTRAL FRAME		01
02	0521013199	LOWER BEARING SEMI		04
03	0503010899	5/8 UNC X 2.1/4 BOLT		08
04	0501012140	FLAT WASHER		16
05	0531013922	0.6" X 0.8" X 1" SLEEVE		08
06	0503011445	SPRING WASHER		08
07	0503010013	5/8 NUT		08
08	0521064282	CARRYING-WHEELS PIVOT SHAFT		01

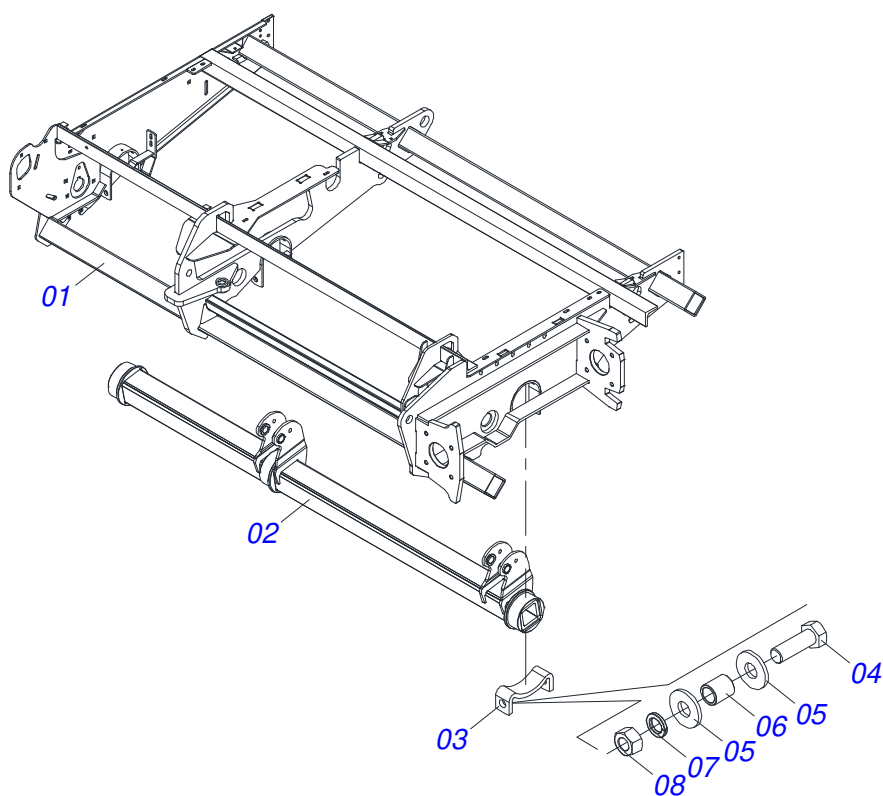


Item	Code	Description	See page	QT
01	0521064009	RIGHT FRAME		01
02	0521064023	ARTICLES AXLE RIGHT ROLLED		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

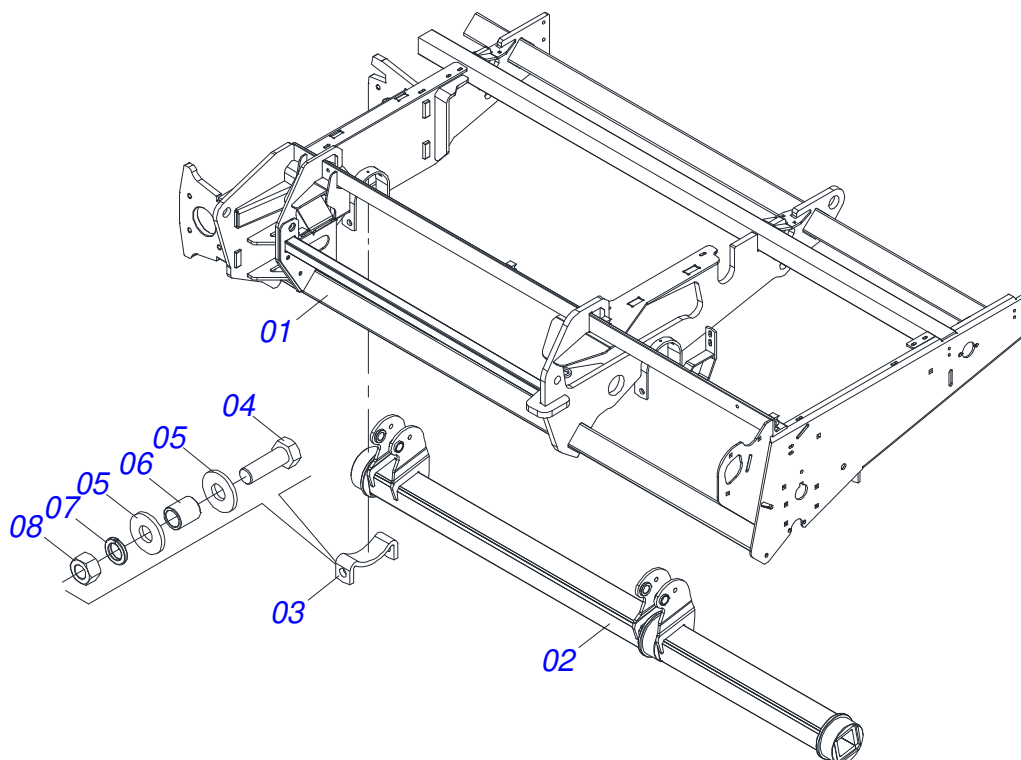


Item	Code	Description	See page	QT
01	0521064010	LEFT FRAME		01
02	0521064021	ARTICLES AXLE LEFT ROLLED		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

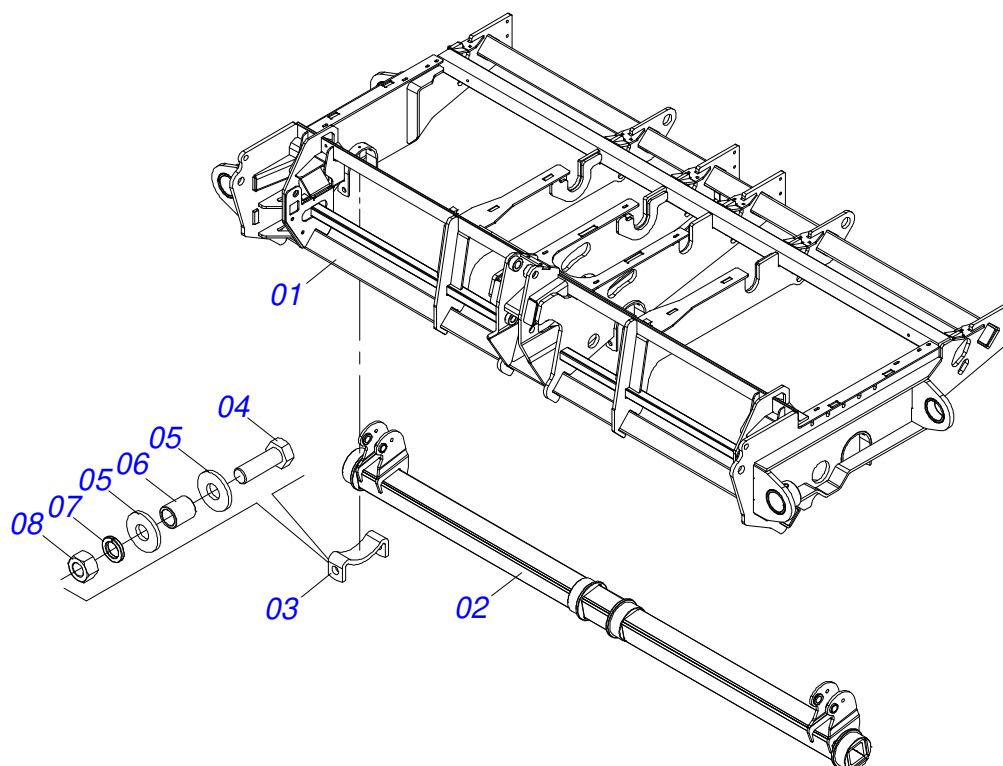


Item	Code	Description	See page	QT
01	0521064011	CENTRAL FRAME		01
02	0521064022	CENTRAL ARTICLES AXLE ROLLED		01
03	0521013199	LOWER BEARING SEMI		04
04	0503010899	5/8 UNC X 2.1/4 BOLT		08
05	0501012140	FLAT WASHER		16
06	0531013922	0.6" X 0.8" X 1" SLEEVE		08
07	0503011445	SPRING WASHER		08
08	0503010013	5/8 NUT		08

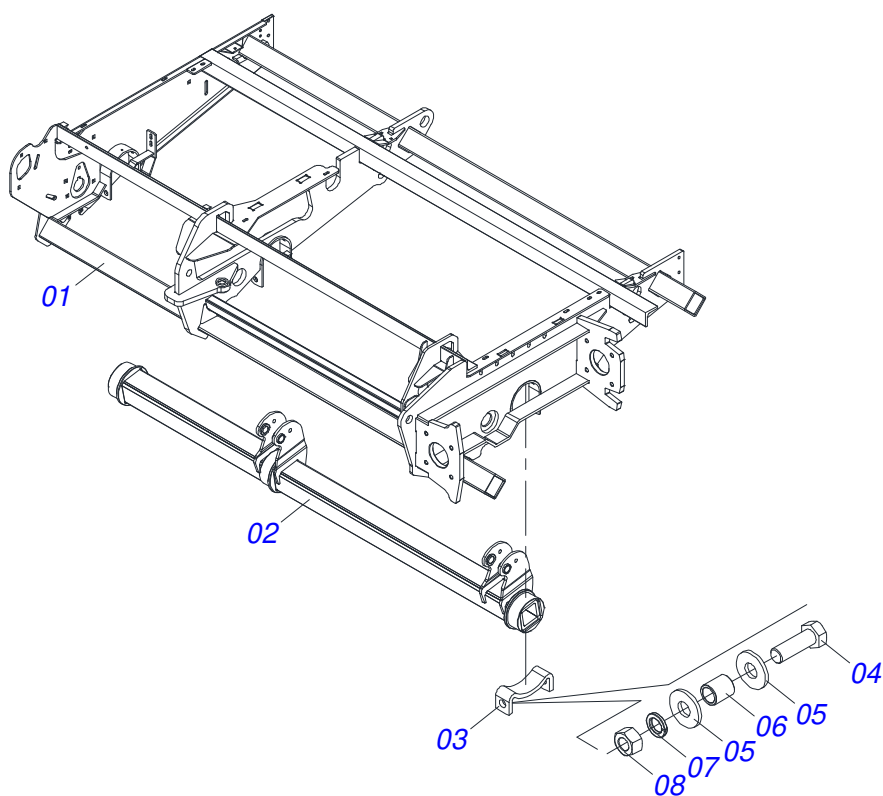


Item	Code	Description	See page	QT
01	0521064287	FRAME BRACKET		01
02	0521064284	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

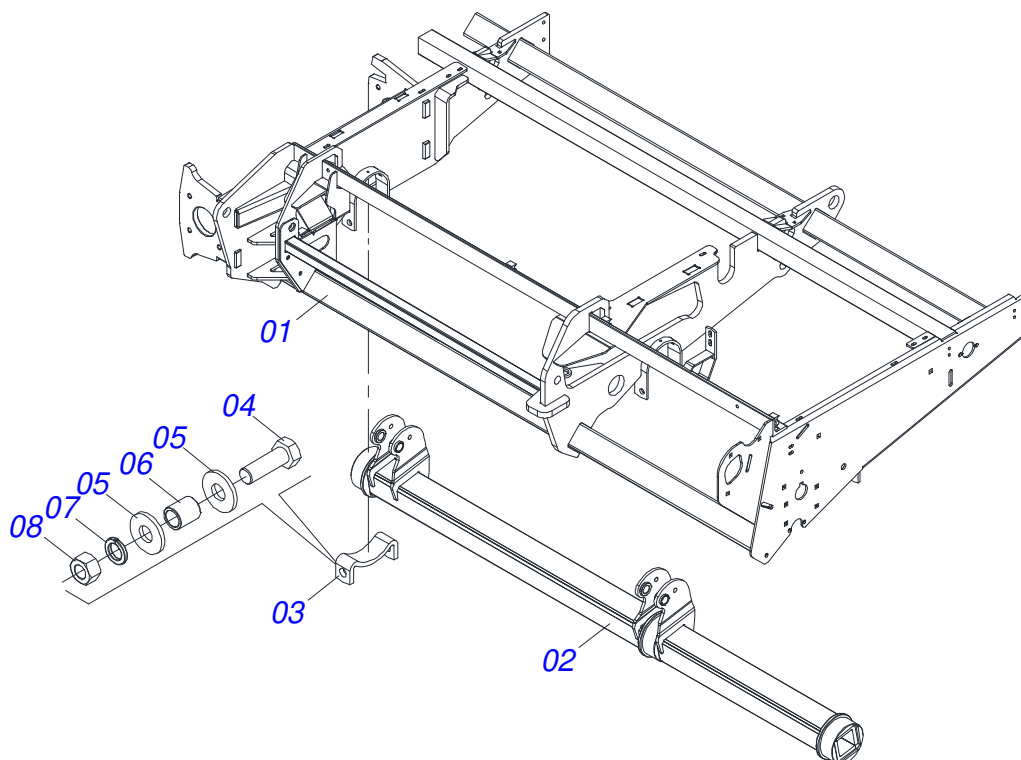


Item	Code	Description	See page	QT
01	0521064286	FRAME BRACKET		01
02	0521064283	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

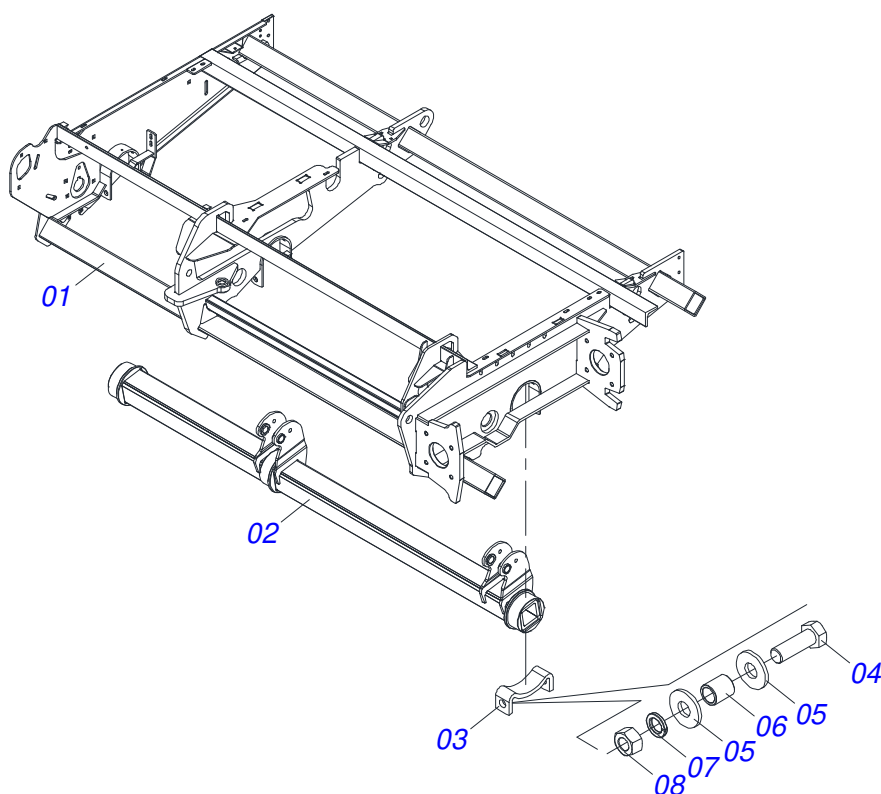


Item	Code	Description	See page	QT
01	0521065394	RIGHT FRAME		01
02	0521065222	SIDE ROD JOINT AXLE		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

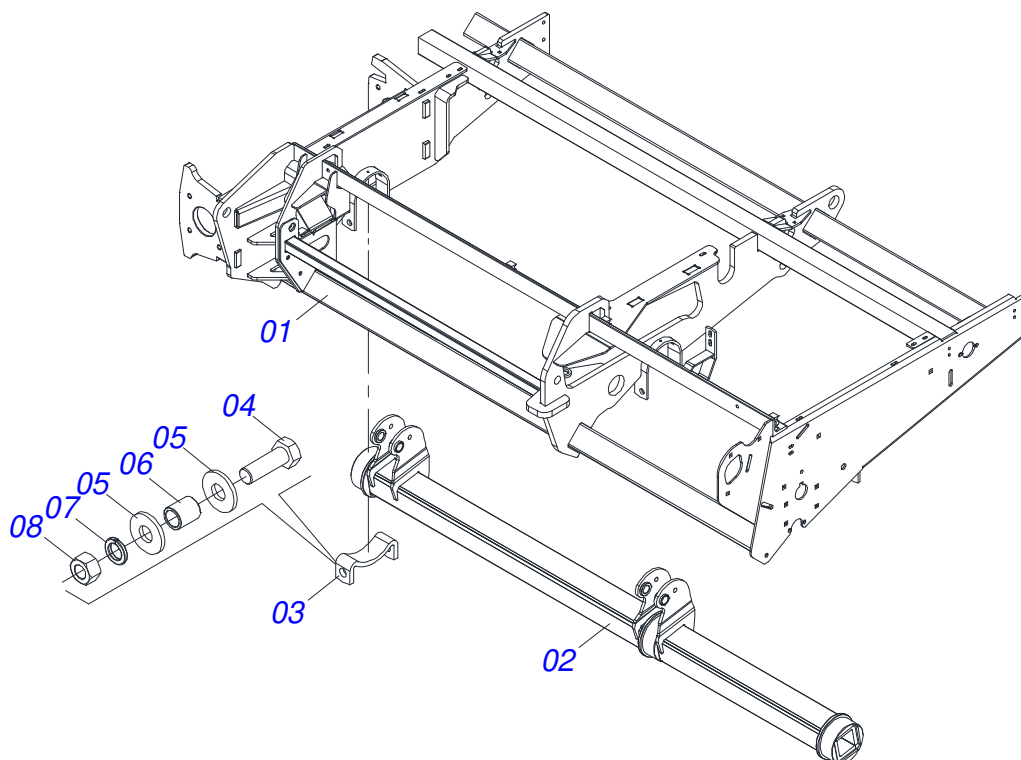


Item	Code	Description	See page	QT
01	0521065395	LEFT FRAME		01
02	0521065223	SHAFT SHAFT SHAFT SIDE SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

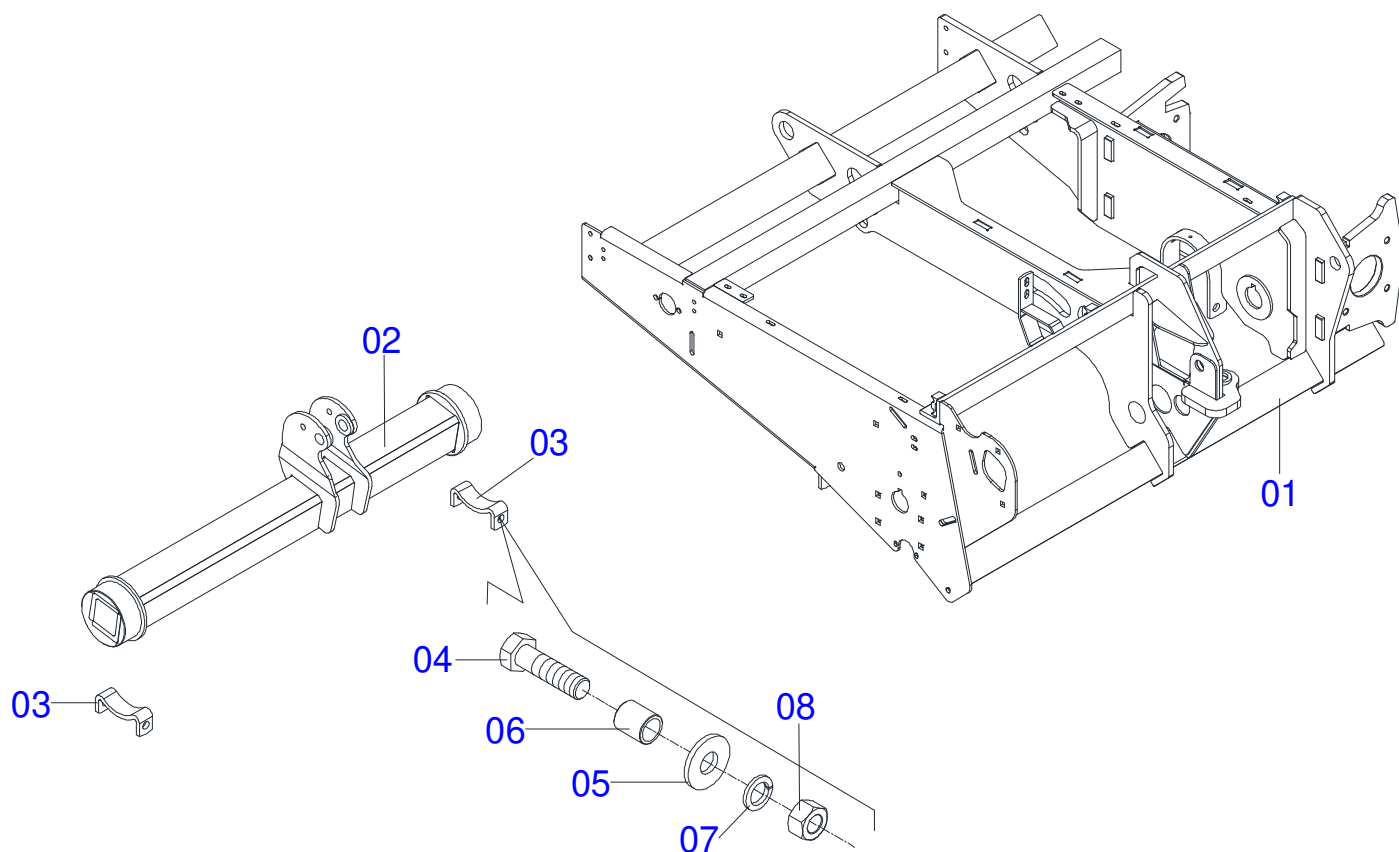


Item	Code	Description	See page	QT
001	0521065220	RIGHT FRAME		01
002	0521065222	SIDE ROD JOINT AXLE		01
003	0521013199	LOWER BEARING SEMI		03
004	0503010899	5/8 UNC X 2.1/4 BOLT		06
005	0501012140	FLAT WASHER		12
006	0531013922	0.6" X 0.8" X 1" SLEEVE		06
007	0503011445	SPRING WASHER		06
008	0503010013	5/8 NUT		06

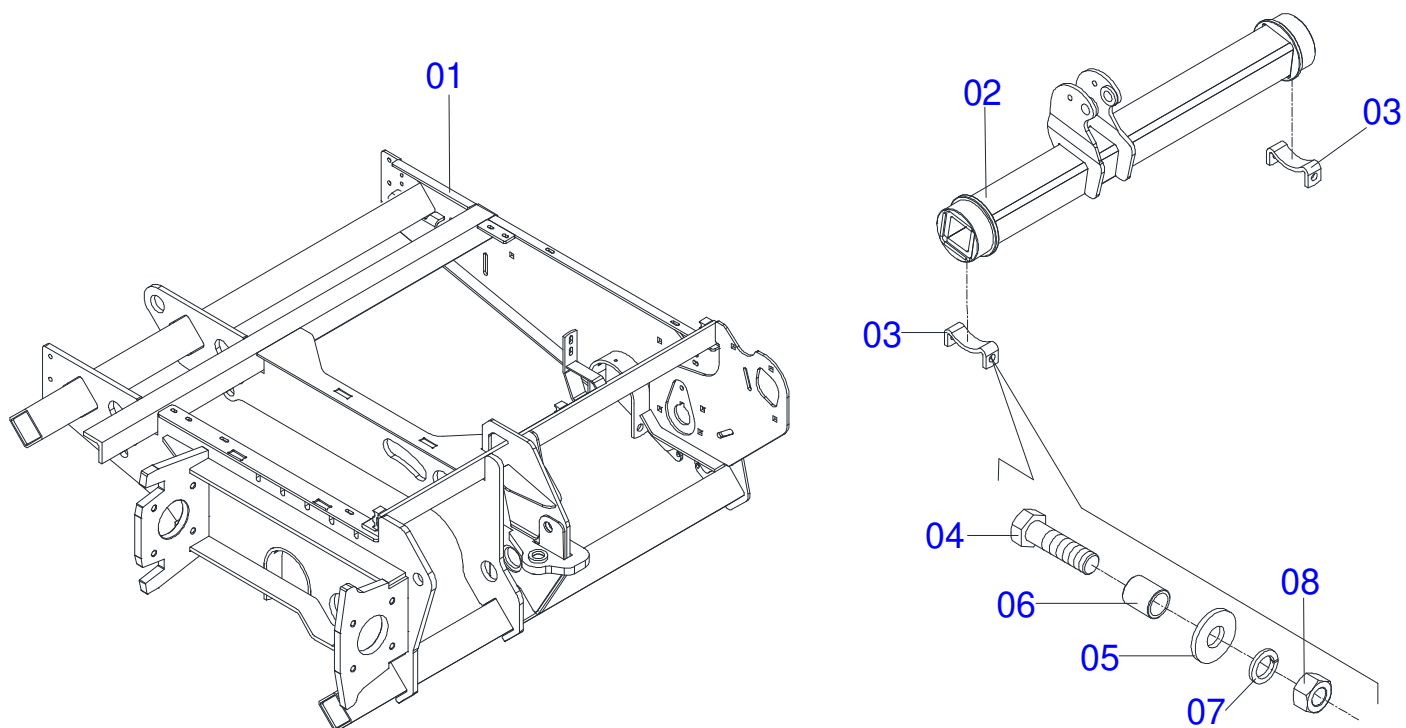


Item	Code	Description	See page	QT
001	0521065221	LEFT FRAME		01
002	0521065223	SHAFT SHAFT SHAFT SIDE SHAFT		01
003	0521013199	LOWER BEARING SEMI		03
004	0503010899	5/8 UNC X 2.1/4 BOLT		06
005	0501012140	FLAT WASHER		12
006	0531013922	0.6" X 0.8" X 1" SLEEVE		06
007	0503011445	SPRING WASHER		06
008	0503010013	5/8 NUT		06

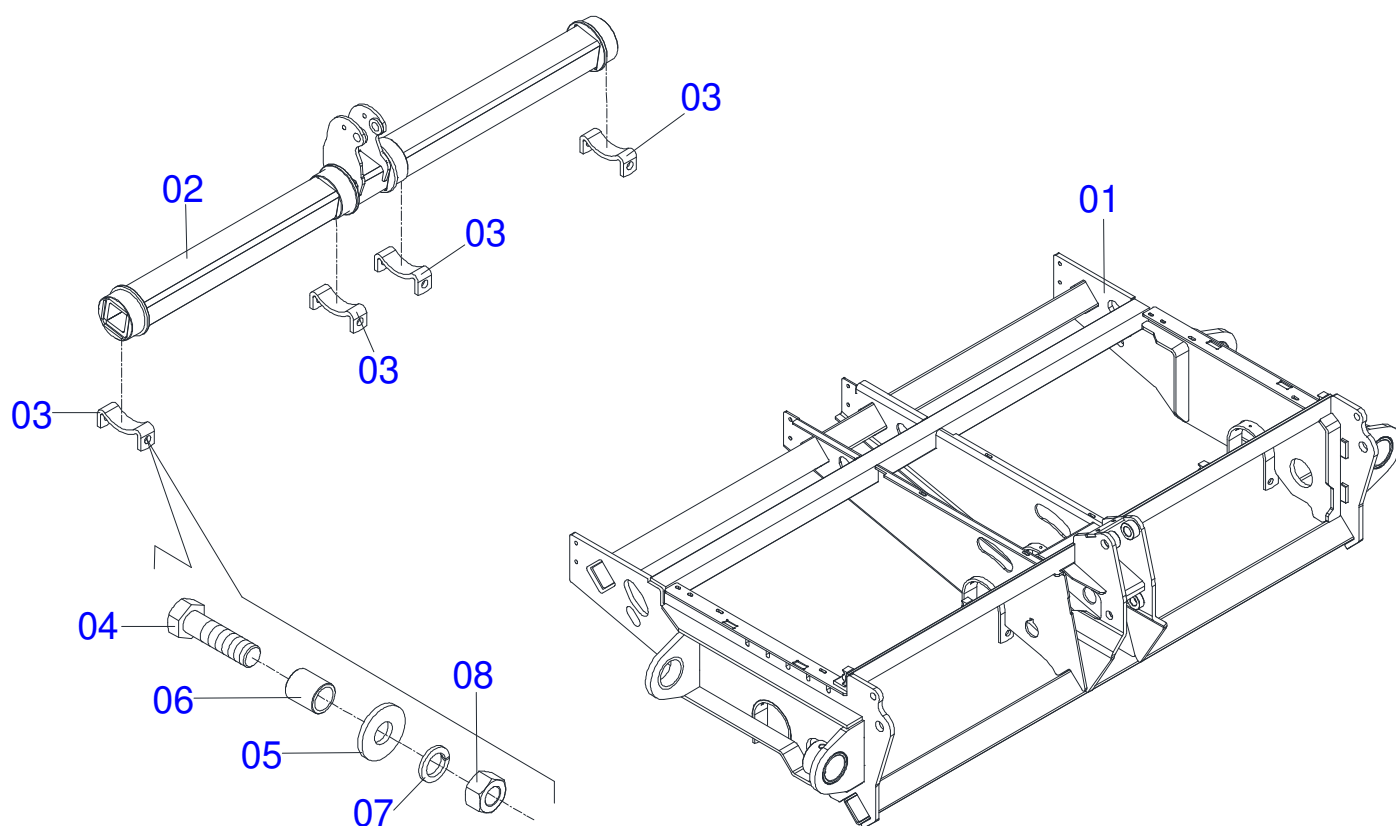


Item	Code	Description	See page	QT
001	0521064839	CENTRAL FRAME		01
002	0521064836	CENTRAL RODE JOINT SHAFT		01
003	0521013199	LOWER BEARING SEMI		04
004	0503010899	5/8 UNC X 2.1/4 BOLT		08
005	0501012140	FLAT WASHER		16
006	0531013922	0.6" X 0.8" X 1" SLEEVE		08
007	0503011445	SPRING WASHER		08
008	0503010013	5/8 NUT		08

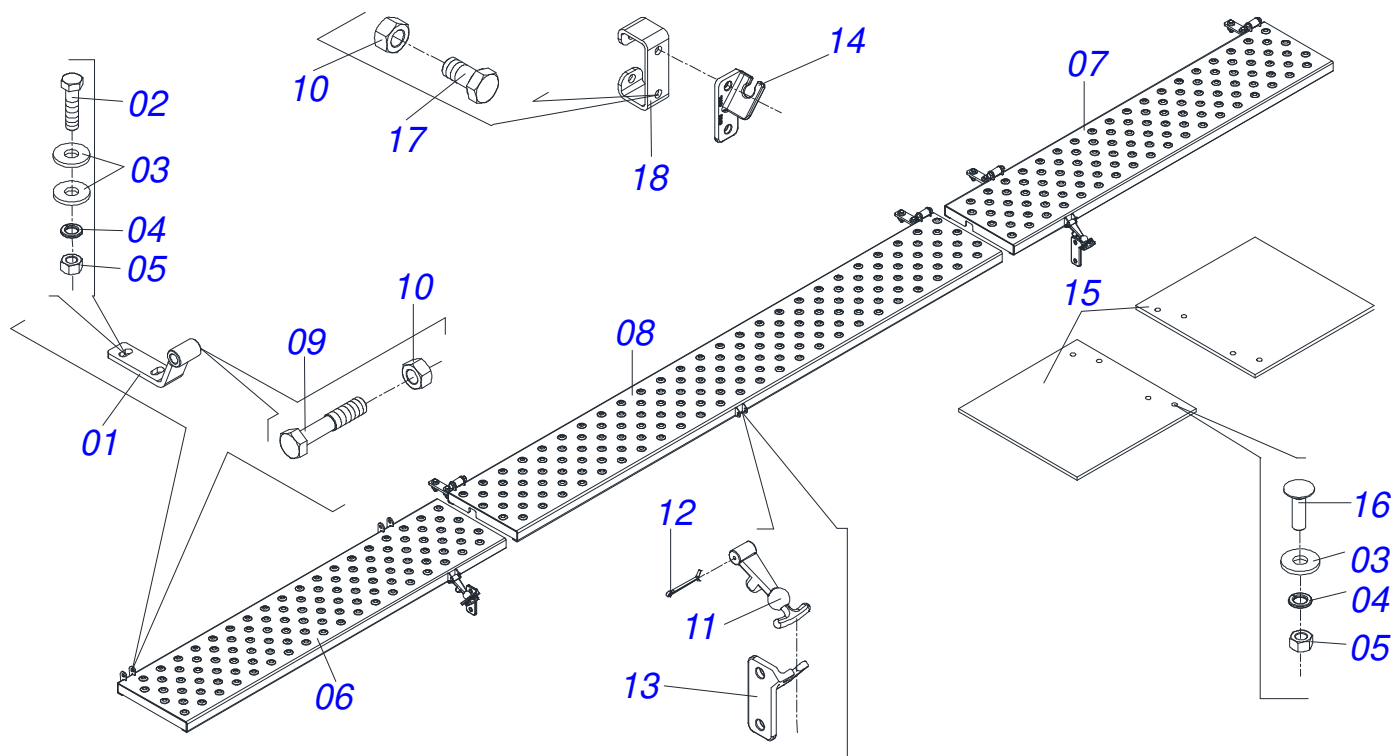


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT	06	
002	0503010849	3/8" X 1-1/2" BOLT	12	
003	0501010984	10,50 X 27 X 3,00 FLAT WASHER	28	
004	0503010025	3/8 SPRING WASHER	16	
005	0503010026	3/8" NUT	16	
006	0521066921	SIDE PLATFORM	01	
007	0521066920	RIGHT PLATAFORM	01	
008	0521063870	PLATFORM CENTER	01	
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	06	
010	0503011336	1/2" HEX SELF ADJUSTING NUT	18	
011	0503011333	COVER FIXER	03	
012	0503010274	5/32"X 2" COTTERPIN	03	
013	1902012740	PLATFORM RIGHT FIXER SUPPORT	03	
014	1902012739	PLATFORM LEFT FIXER SUPPORT	03	
015	0571017990	PLATFORM ENHANCEMENT PROTECTION	02	
016	0501010942	3/8" X 1-1/4" BOLT	04	
017	0503010834	1/2 X 1 BOLT	12	
018	0581011924	PLATFORM LOCK EXTENSIONER	03	

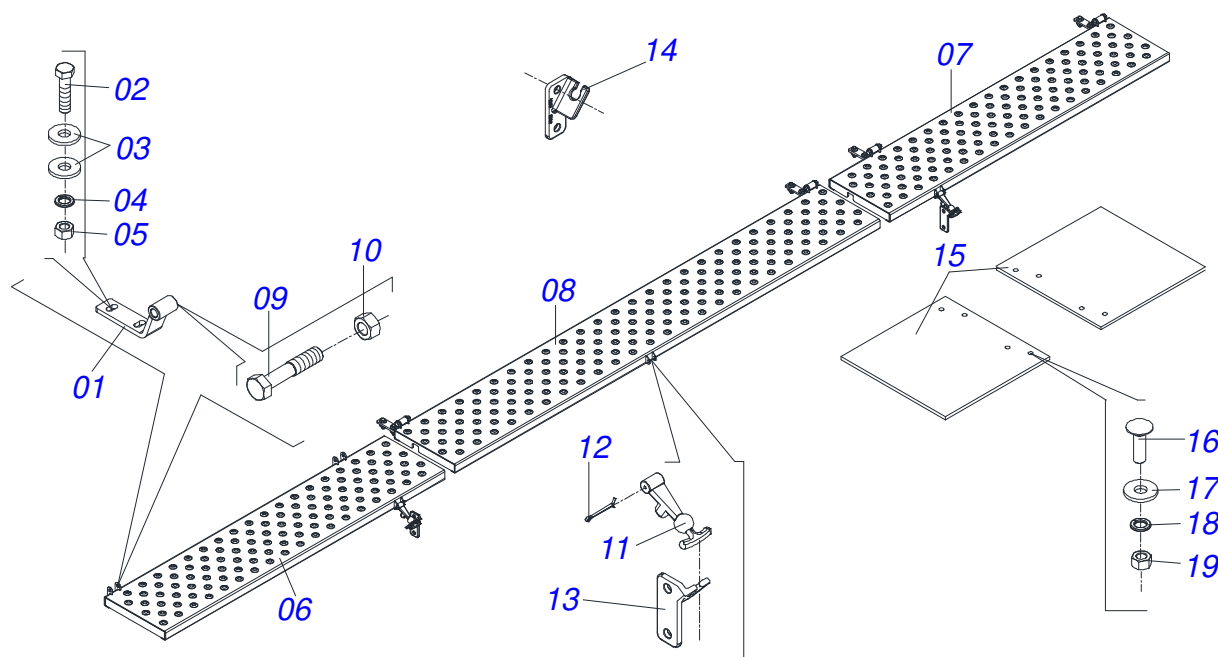


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT	06	
002	0503010849	3/8" X 1-1/2" BOLT	10	
003	0501010984	10,50 X 27 X 3,00 FLAT WASHER	20	
004	0503010025	3/8 SPRING WASHER	10	
005	0503010026	3/8" NUT	10	
006	0521063869	RIGHT PLATFORM	01	
007	0521063868	SIDE PLATFORM	01	
008	0521063870	PLATFORM CENTER	01	
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	06	
010	0503011336	1/2" HEX SELF ADJUSTING NUT	06	
011	0503011333	COVER FIXER	03	
012	0503010274	5/32"X 2" COTTERPIN	03	
013	0502012740	PLATFORM RIGHT FIXER SUPPORT	02	
014	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
015	0571017990	PLATFORM ENHANCEMENT PROTECTION	02	
016	0501010942	3/8" X 1-1/4" BOLT	04	
017	0501010984	10,50 X 27 X 3,00 FLAT WASHER	04	
018	0503010025	3/8 SPRING WASHER	04	
019	0503010026	3/8" NUT	04	

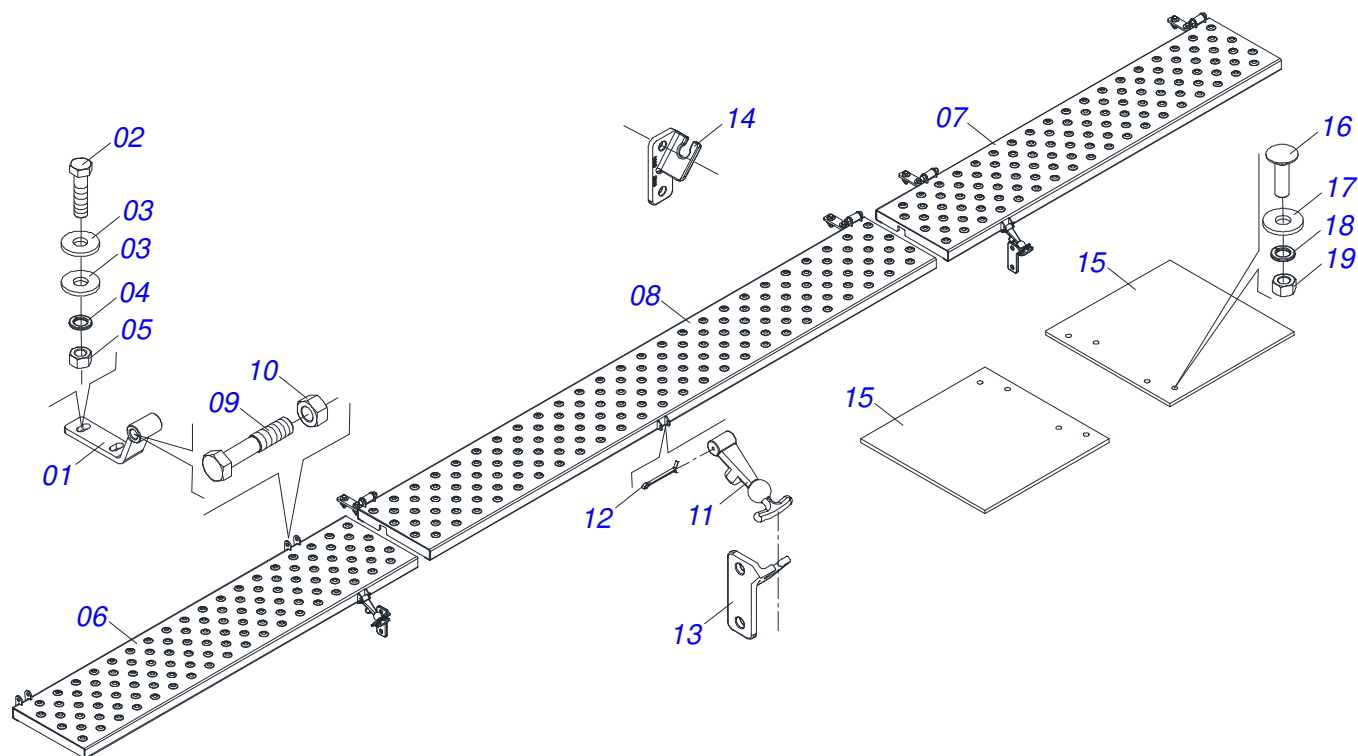


Item	Code	Description	See page	QT
01	0511069661	PLATFORM SUPPORT PIVOT	06	
02	0503010849	3/8" X 1-1/2" BOLT	10	
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER	20	
04	0503010025	3/8 SPRING WASHER	10	
05	0503010026	3/8" NUT	10	
06	0521064015	PLATFORM RIGHT SIDE	01	
07	0521064016	PLATFORM LEFT SIDE	01	
08	0521064017	PLATFORM CENTER	01	
09	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	06	
10	0503011336	1/2" HEX SELF ADJUSTING NUT	06	
11	0503011333	COVER FIXER	03	
12	0503010274	5/32"X 2" COTTERPIN	03	
13	0502012740	PLATFORM RIGHT FIXER SUPPORT	02	
14	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
15	0571017990	PLATFORM ENHANCEMENT PROTECTION	02	
16	0501010942	3/8" X 1-1/4" BOLT	04	
17	0501010984	10,50 X 27 X 3,00 FLAT WASHER	04	
18	0503010025	3/8 SPRING WASHER	04	
19	0503010026	3/8" NUT	04	

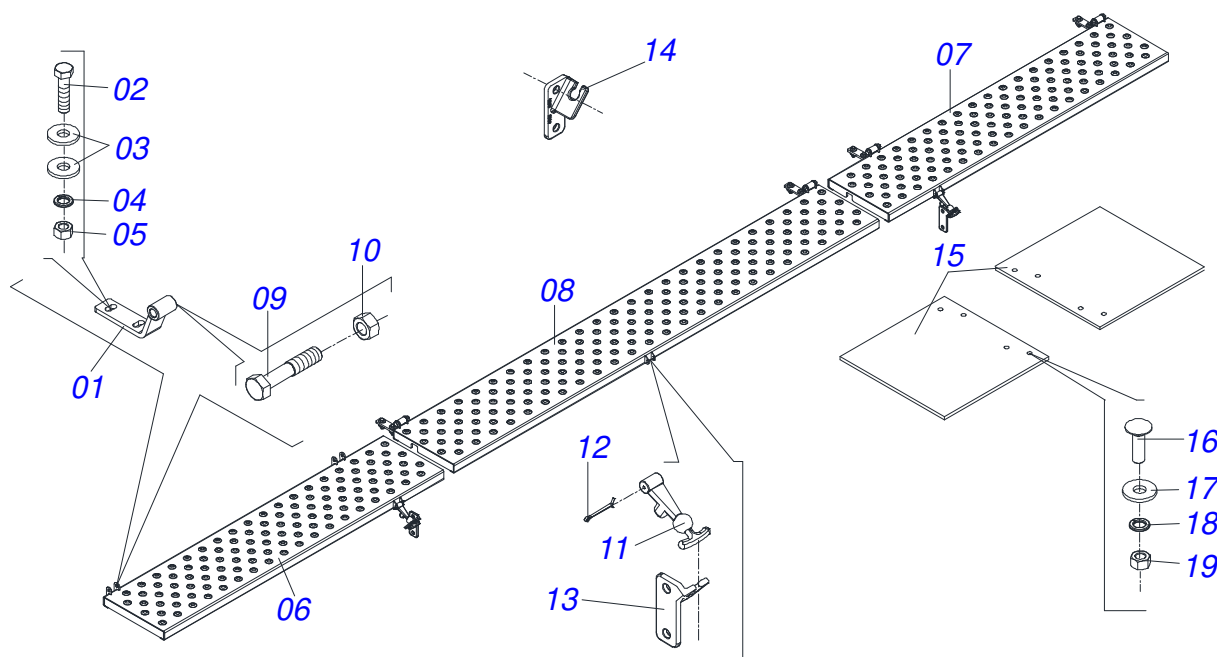


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT		06
002	0503010849	3/8" X 1-1/2" BOLT		10
003	0501010984	10,50 X 27 X 3,00 FLAT WASHER		20
004	0503010025	3/8 SPRING WASHER		10
005	0503010026	3/8" NUT		10
006	0521064290	RIGHT PLATFORM		01
007	0521064288	LEFT PLATFORM		01
008	0521064289	PLATFORM CENTER		01
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		06
010	0503011336	1/2" HEX SELF ADJUSTING NUT		06
011	0503011333	COVER FIXER		03
012	0503010274	5/32"X 2" COTTERPIN		03
013	0502012740	PLATFORM RIGHT FIXER SUPPORT		02
014	0502012739	PLATFORM LEFT FIXER SUPPORT		01
015	0571017990	PLATFORM ENHANCEMENT PROTECTION		02
016	0501010942	3/8" X 1-1/4" BOLT		04
017	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
018	0503010025	3/8 SPRING WASHER		04
019	0503010026	3/8" NUT		04

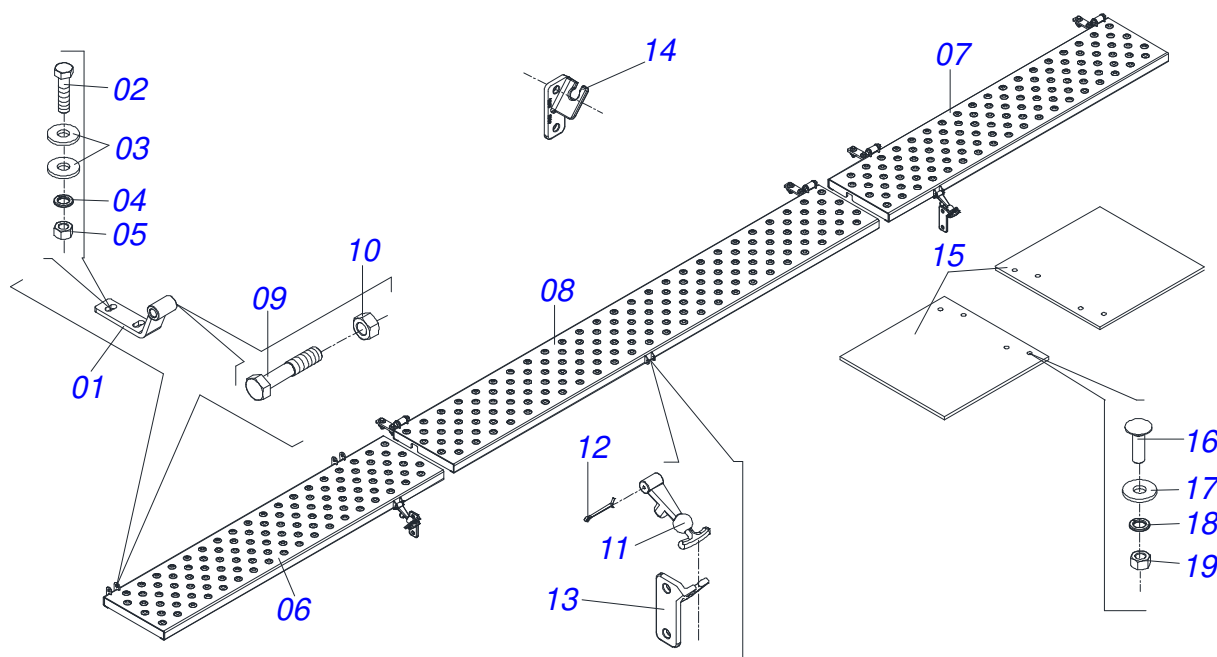


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT	06	
002	0503010849	3/8" X 1-1/2" BOLT	10	
003	0501010984	10,50 X 27 X 3,00 FLAT WASHER	20	
004	0503010025	3/8 SPRING WASHER	10	
005	0503010026	3/8" NUT	10	
006	0521064290	RIGHT PLATFORM	01	
007	0521064288	LEFT PLATFORM	01	
008	0521064017	PLATFORM CENTER	01	
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	06	
010	0503011336	1/2" HEX SELF ADJUSTING NUT	06	
011	0503011333	COVER FIXER	03	
012	0503010274	5/32"X 2" COTTERPIN	03	
013	0502012740	PLATFORM RIGHT FIXER SUPPORT	02	
014	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
015	0571017990	PLATFORM ENHANCEMENT PROTECTION	02	
016	0501010942	3/8" X 1-1/4" BOLT	04	
017	0501010984	10,50 X 27 X 3,00 FLAT WASHER	04	
018	0503010025	3/8 SPRING WASHER	04	
019	0503010026	3/8" NUT	04	

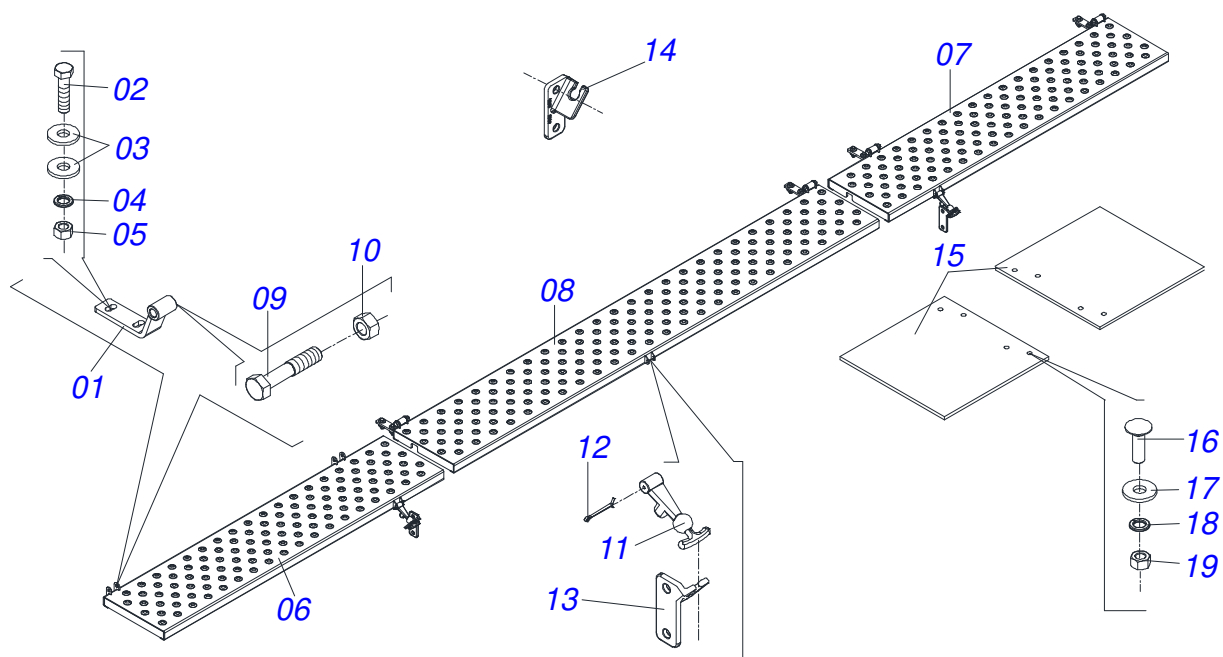


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT		06
002	0503010849	3/8" X 1-1/2" BOLT		10
003	0501010984	10,50 X 27 X 3,00 FLAT WASHER		20
004	0503010025	3/8 SPRING WASHER		10
005	0503010026	3/8" NUT		10
006	0521064290	RIGHT PLATFORM		01
007	0521064288	LEFT PLATFORM		01
008	0521064827	CENTRAL PLATFORM		01
009	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		06
010	0503011336	1/2" HEX SELF ADJUSTING NUT		06
011	0503011333	COVER FIXER		03
012	0503010274	5/32"X 2" COTTERPIN		03
013	0502012740	PLATFORM RIGHT FIXER SUPPORT		02
014	0502012739	PLATFORM LEFT FIXER SUPPORT		01
015	0571017990	PLATFORM ENHANCEMENT PROTECTION		02
016	0501010942	3/8" X 1-1/4" BOLT		04
017	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
018	0503010025	3/8 SPRING WASHER		04
019	0503010026	3/8" NUT		04

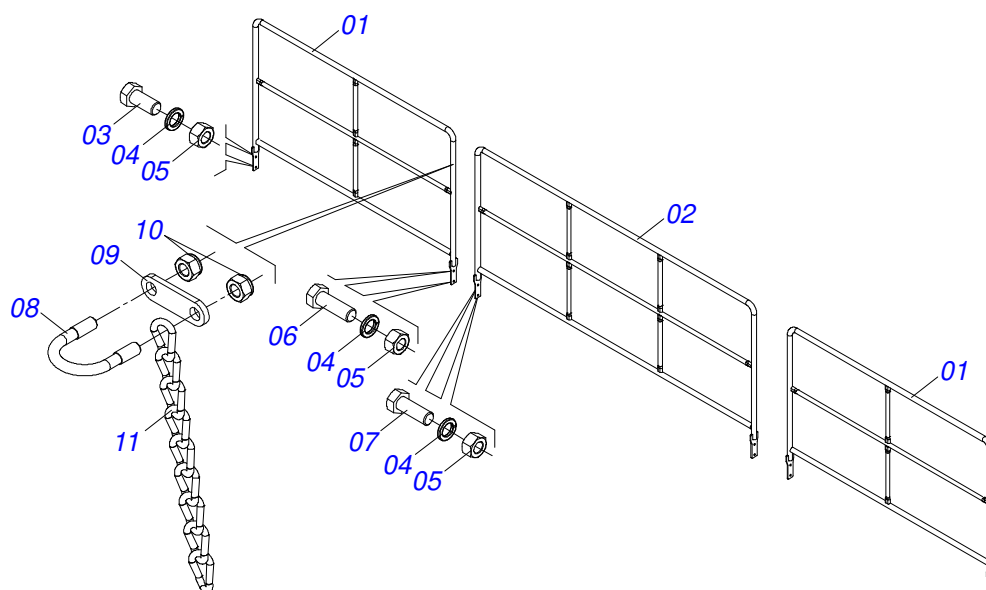


Item	Code	Description	See page	QT
01	0521066922	SIDE HANDRAIL		02
02	0521063875	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2 UNC G.5 ZN HEX NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8 SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

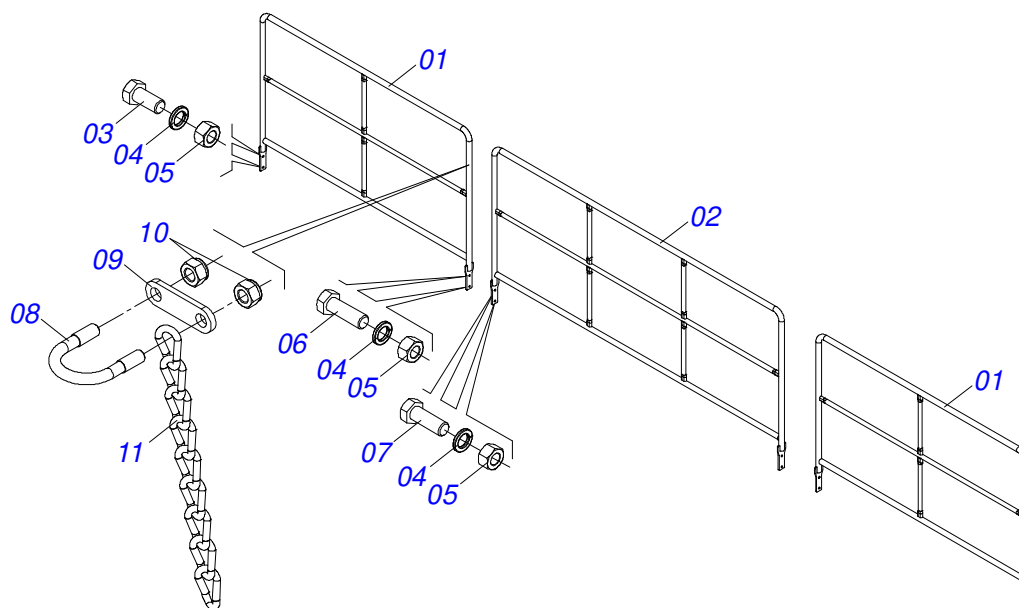


Item	Code	Description	See page	QT
01	0521067150	12 E 500 RIGHT SIDE HARDWARE		02
02	0521064279	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2 UNC G.5 ZN HEX NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8 SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

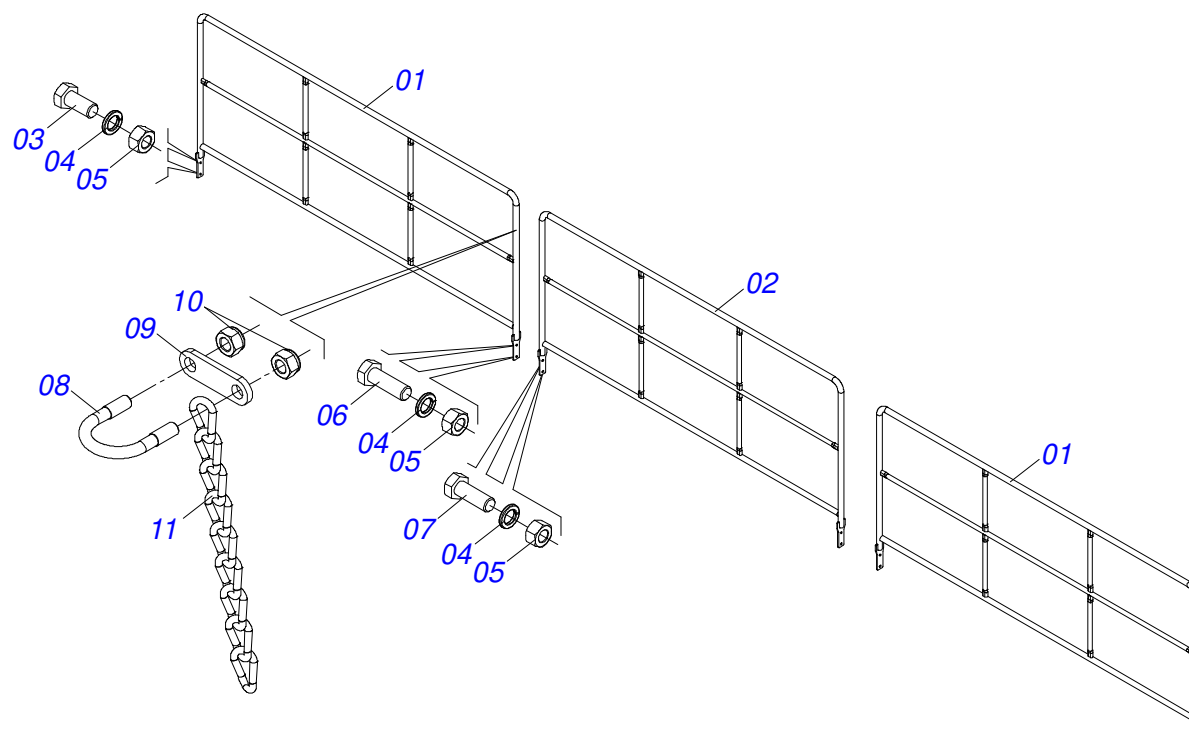


Item	Code	Description	See page	QT
01	0521063871	SIDE HANDRAIL		02
02	0521063875	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2 UNC G.5 ZN HEX NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8 SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

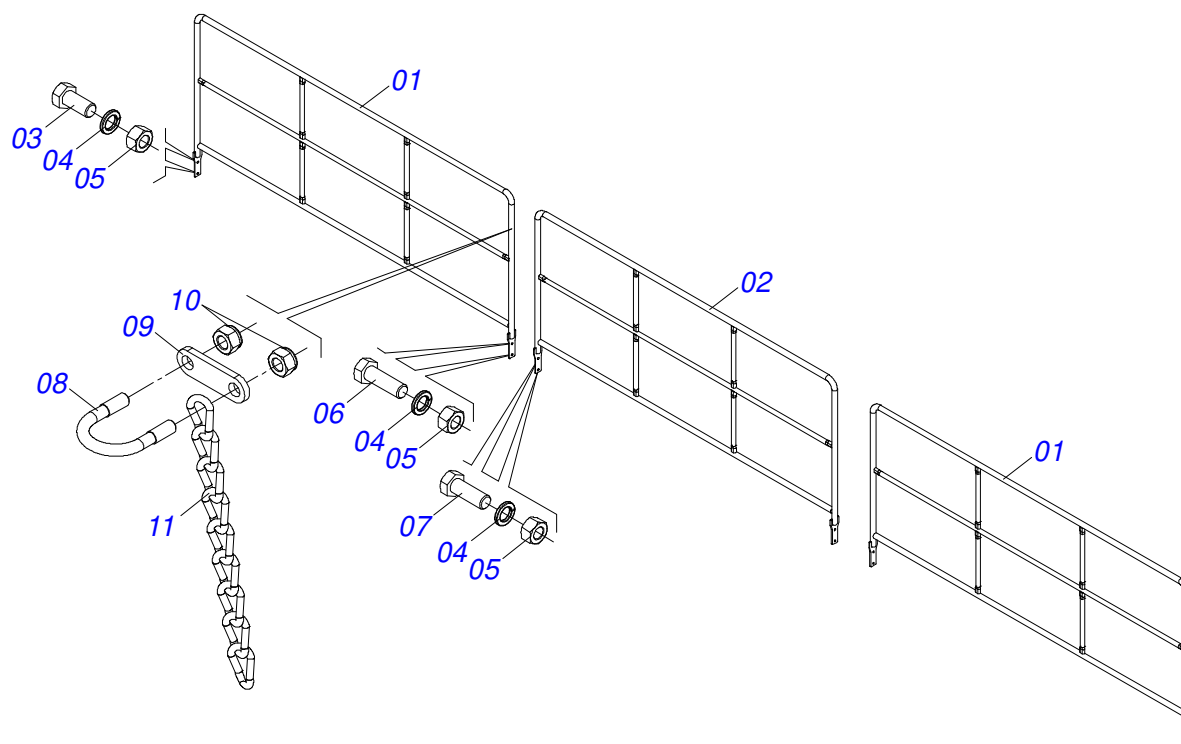


Item	Code	Description	See page	QT
01	0521064019	SIDE HANDRAIL	02	
02	0521064018	CENTRAL HANDRAIL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2 UNC G.5 ZN HEX NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8 SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

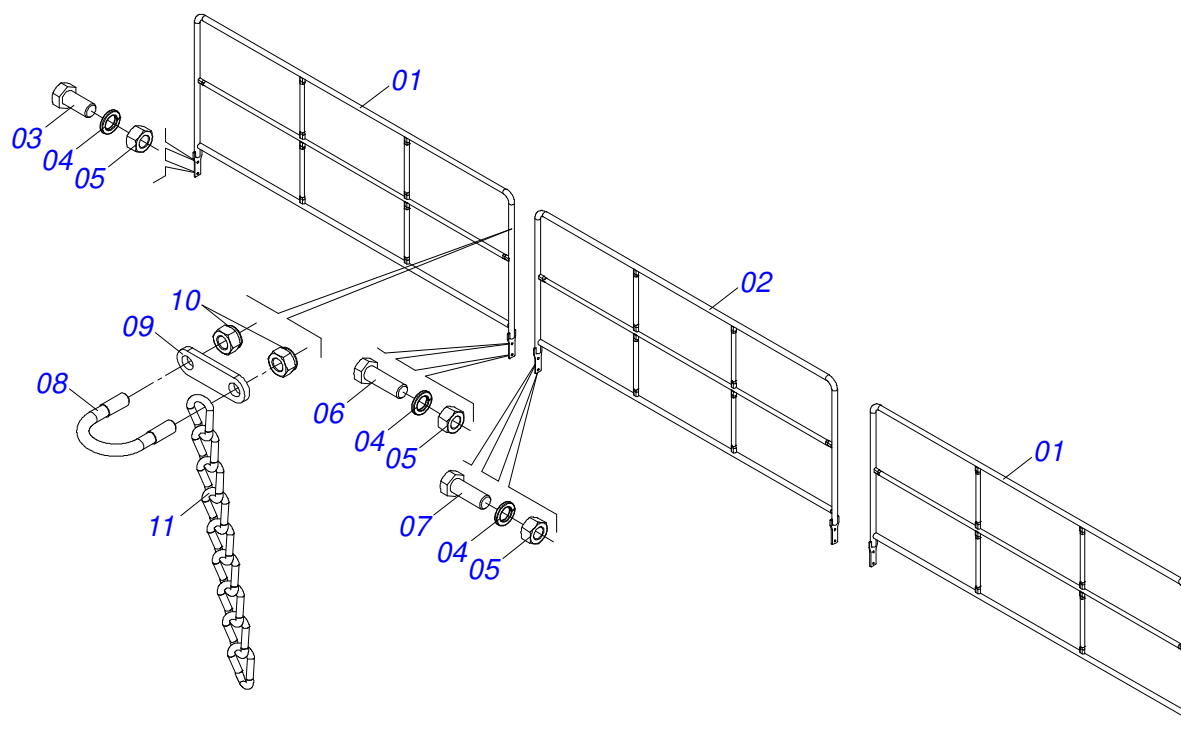


Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL	02	
02	0521064279	CENTRAL HANDRAIL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2 UNC G.5 ZN HEX NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8 SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

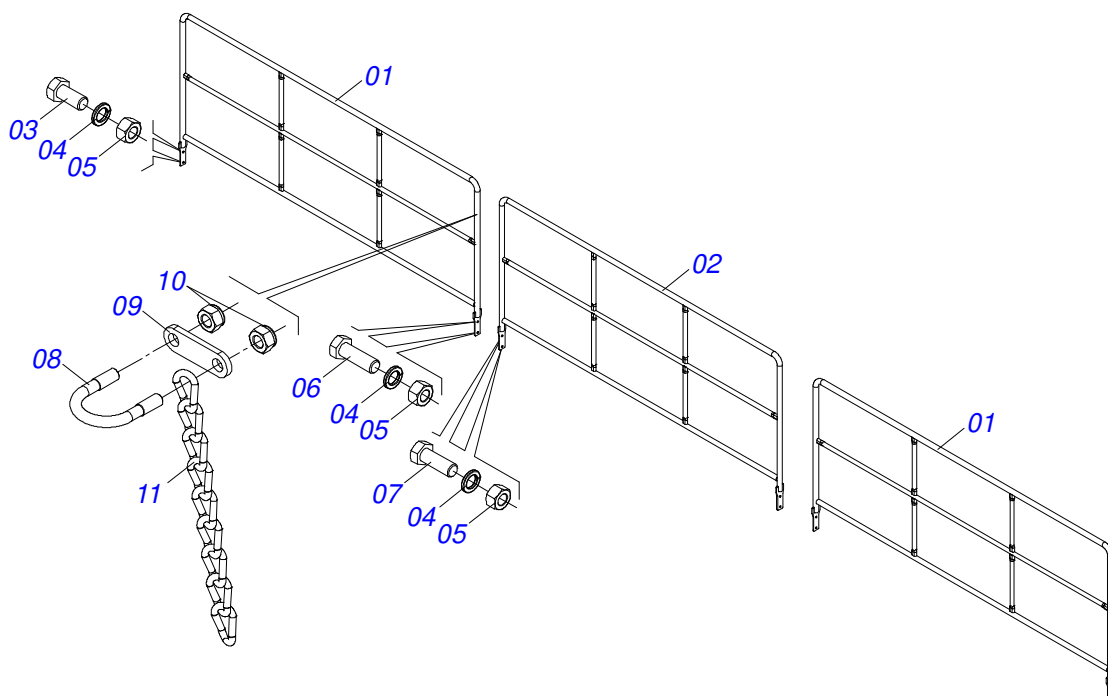


Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL		02
02	0521064018	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2 UNC G.5 ZN HEX NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8 SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

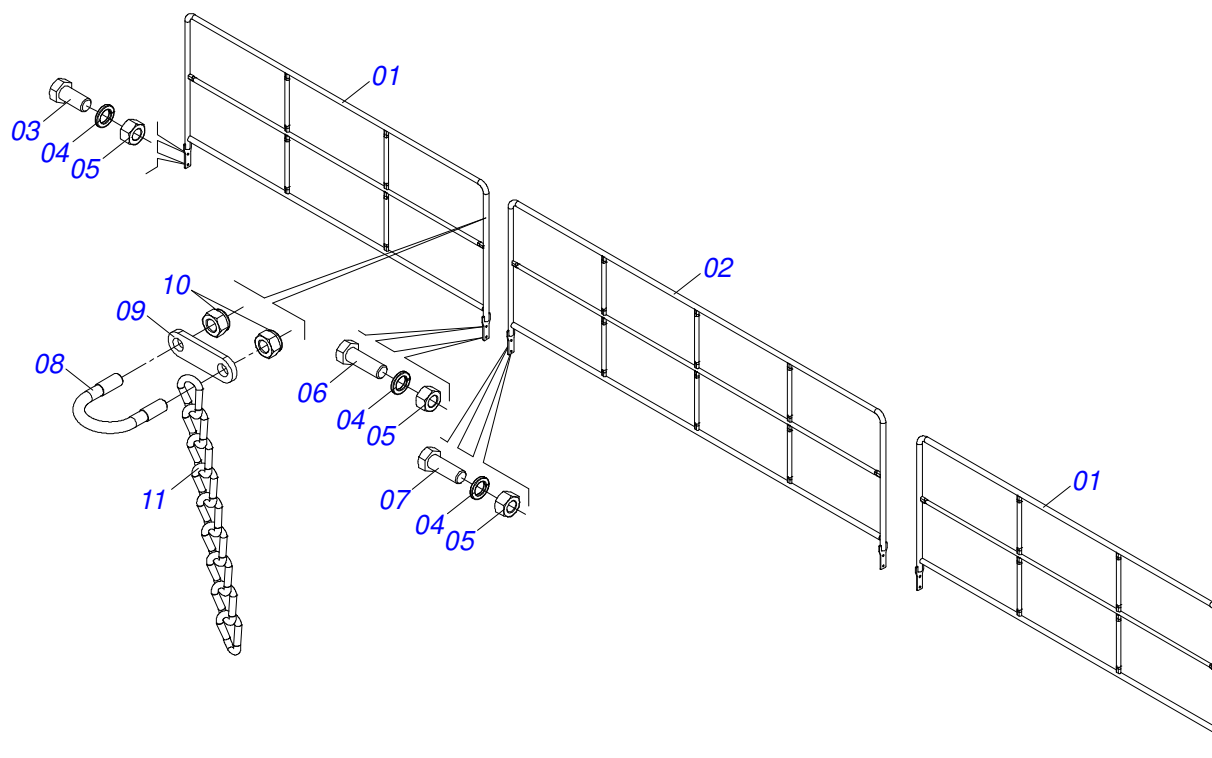

Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL	02	
02	0521064843	CENTRAL HANDRAIL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2 UNC G.5 ZN HEX NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8 SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

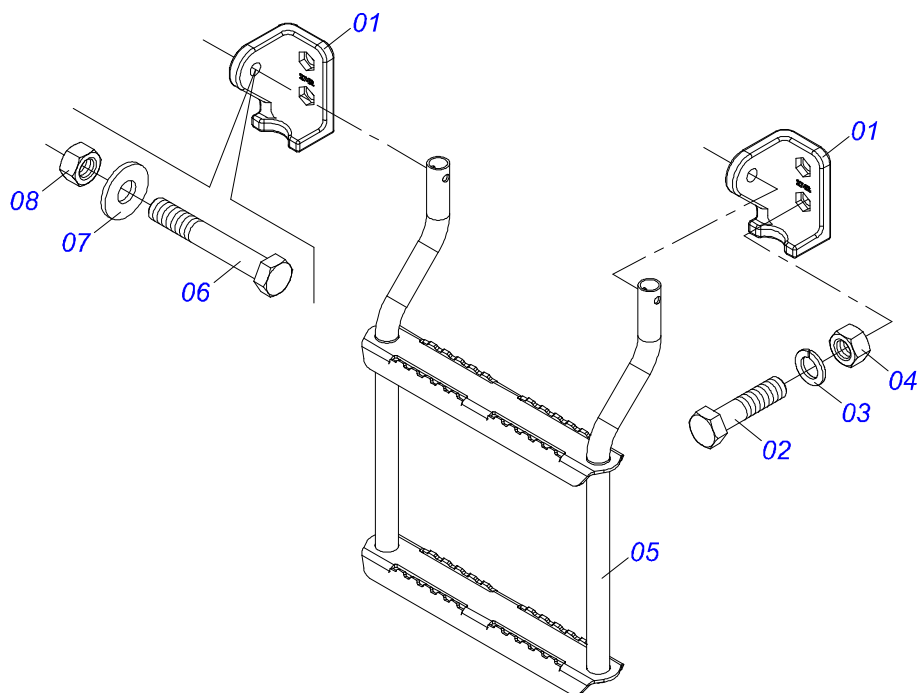


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8 SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER	02	
08	0503013357	3/8 SELF-ADJUSTING NUT	02	

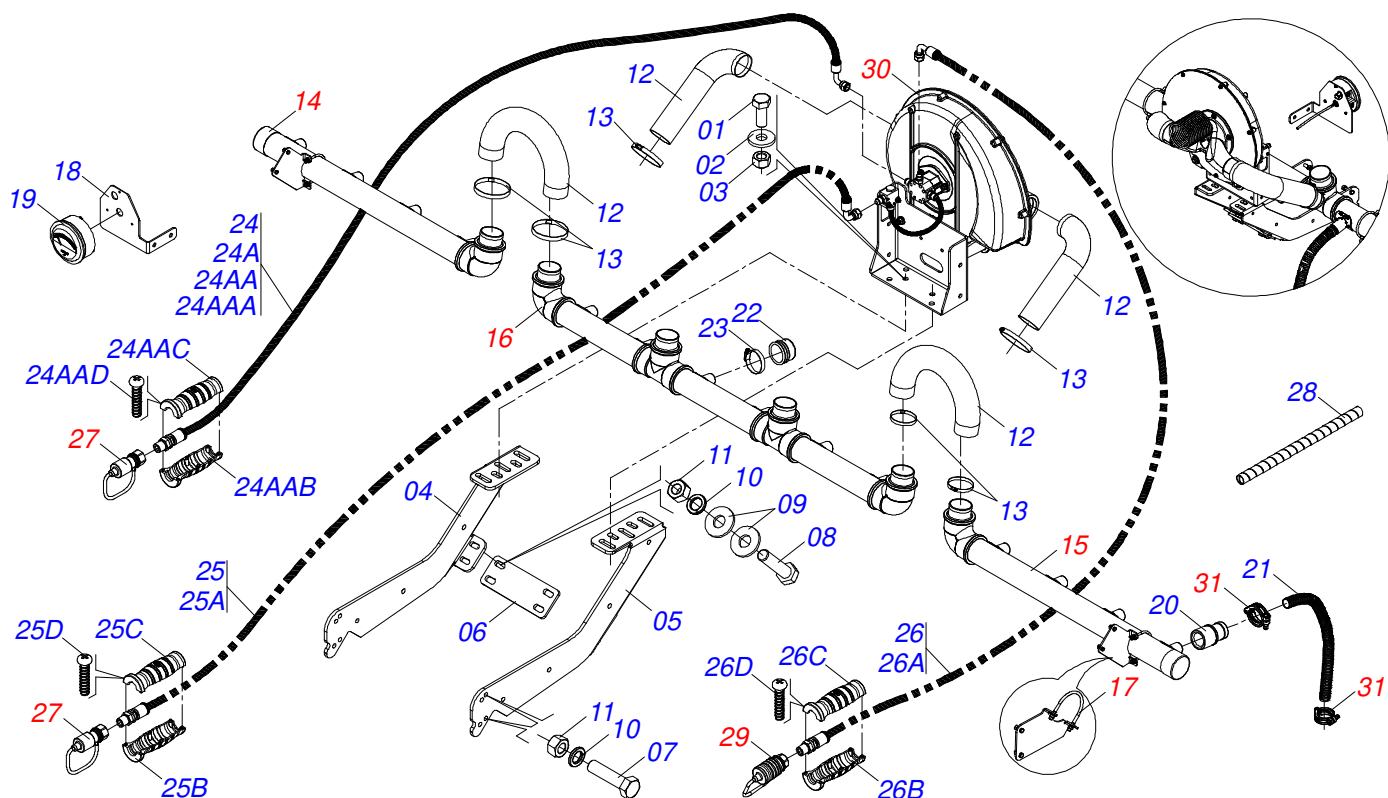


Item	Code	Description	See page	QT
01	0503011267	5/8 UNC X 1.1/2 C S G.5 ZN BOLT		02
02	0501012140	FLAT WASHER		02
03	0503012412	5/8" UNC SELF LOCKING NUT		02
04	0581011414	BODY RIGHT SUPPORT TURBINE		01
05	0581011413	UPPER LEFT SUPPORT		01
06	0581011415	SUPPORTER FIXING BAR		01
07	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
08	0503011239	1/2" X 2" BOLT		04
09	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
10	0503010019	1/2" SPRING WASHER		08
11	0503010060	1/2 UNC G.5 ZN HEX NUT		08
12	0581012166	HOSE		04
13	0503011372	102 TO 121 CLAMP		06
14	0521050531	4 MOUTHS RIGHT AIR CONDUCTOR - 13	44	01
15	0521050532	LEFT AIR CONDUCTOR 4 MOUTHS - 13	45	01
16	0511059503	6 MOUTH AIR CONDUCTOR X 2150 - 6850	46	01
17	0511059319	AIR FIXING SUPPORT	47	06
18	0581010952	VACUUM GAUGE SUPPORT		01
19	0503013584	VACUUM GAUGE		01
20	0571019716	ADAPTER		13
21	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		13
22	0503031436	AIR DISTRIBUTOR PUMP		01
23	0503010246	CLAMP		01
24	0511057906	HOSE ASSY	55	01
24A	0511057840	ASSY TURBINE HOSE REAR		01
24AA	0521052534	HOSE 1/2 X 7012 TC-TM YELLOW / RED		01
24AAA	0501081247	HOSE 1/2 X 7012 TC-TM		01
24AAB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
24AAC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
24AAD	0503018952	PLASTIC BOLT		06
25	0521052535	HOSE 1/2 X 7012 TC-TM YELLOW / BLUE		01

Item	Code	Description	See page	QT
25A	0501081247	HOSE 1/2 X 7012 TC-TM		01
25B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
25C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
25D	0503018952	PLASTIC BOLT		06
26	0521052536	HOSE 3/8 X 7012 TC-TM YELLOW / GREEN		01
26A	0501080477	HOSE 3/8 X 7012 TC-TM		01
26B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
26C	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01
26D	0503018952	PLASTIC BOLT		06
27	0501053834	MALE QUICK COUPLER	48	02
28	0581010092	SPRING PROTECTION PLASTIC HOSE 3/4		01
29	0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	49	01
30	0511059406	TURBINE P.P MOUNTED	50	01
31	0521052549	CLAMP	52	26

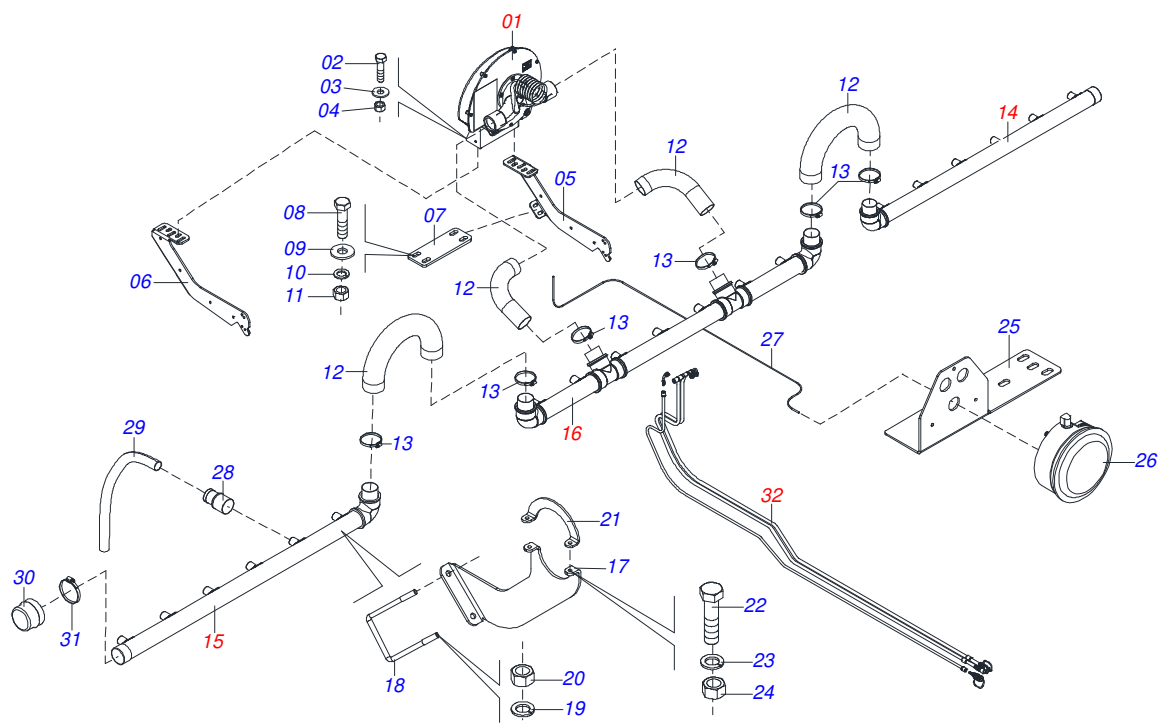


Item	Code	Description	See page	QT
001	0511059406	TURBINE P.P MOUNTED	50	01
002	0503011267	5/8 UNC X 1.1/2 C S G.5 ZN BOLT		02
003	0501012140	FLAT WASHER		02
004	0503012412	5/8" UNC SELF LOCKING NUT		02
005	0581011414	BODY RIGHT SUPPORT TURBINE		01
006	0581011413	UPPER LEFT SUPPORT		01
007	0581011415	SUPPORTER FIXING BAR		01
008	0503011239	1/2" X 2" BOLT		04
009	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
010	0503010019	1/2" SPRING WASHER		04
011	0503010060	1/2 UNC G.5 ZN HEX NUT		04
012	0581012166	HOSE		04
013	0503011372	102 TO 121 CLAMP		06
014	0511059504	RIGHT AIR CONDUCTOR - 6850	53	01
015	0511059505	LEFT AIR CONDUCTOR - 6850	54	01
016	0511059503	6 MOUTH AIR CONDUCTOR X 2150 - 6850	46	01
017	0571019963	AIR DISTRIBUTOR SUPPORT		06
018	0521014021	1/2" X 4.5" X 5.4" FASTENER		06
019	0503010019	1/2" SPRING WASHER		12
020	0503010060	1/2 UNC G.5 ZN HEX NUT		12
021	0521014442	LOWER AIR DISTRIBUTOR SUPPORT		06
022	0503010371	5/16" X 1" BOLT		12
023	0503010179	LOCK WASHER 5/16 ZN 1K01528		12
024	0503010337	5/16" NUT		12
025	0571013731	VACUUM GAUGE SUPPORT		01
026	0503013584	VACUUM GAUGE		01
027	0503015062	TUBE		03
028	0571019716	ADAPTER		15
029	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		15
030	0503031436	AIR DISTRIBUTOR PUMP		01
031	0503010246	CLAMP		01

Item	Code	Description	See page	QT
032	0511057906	HOSE ASSY	55	01

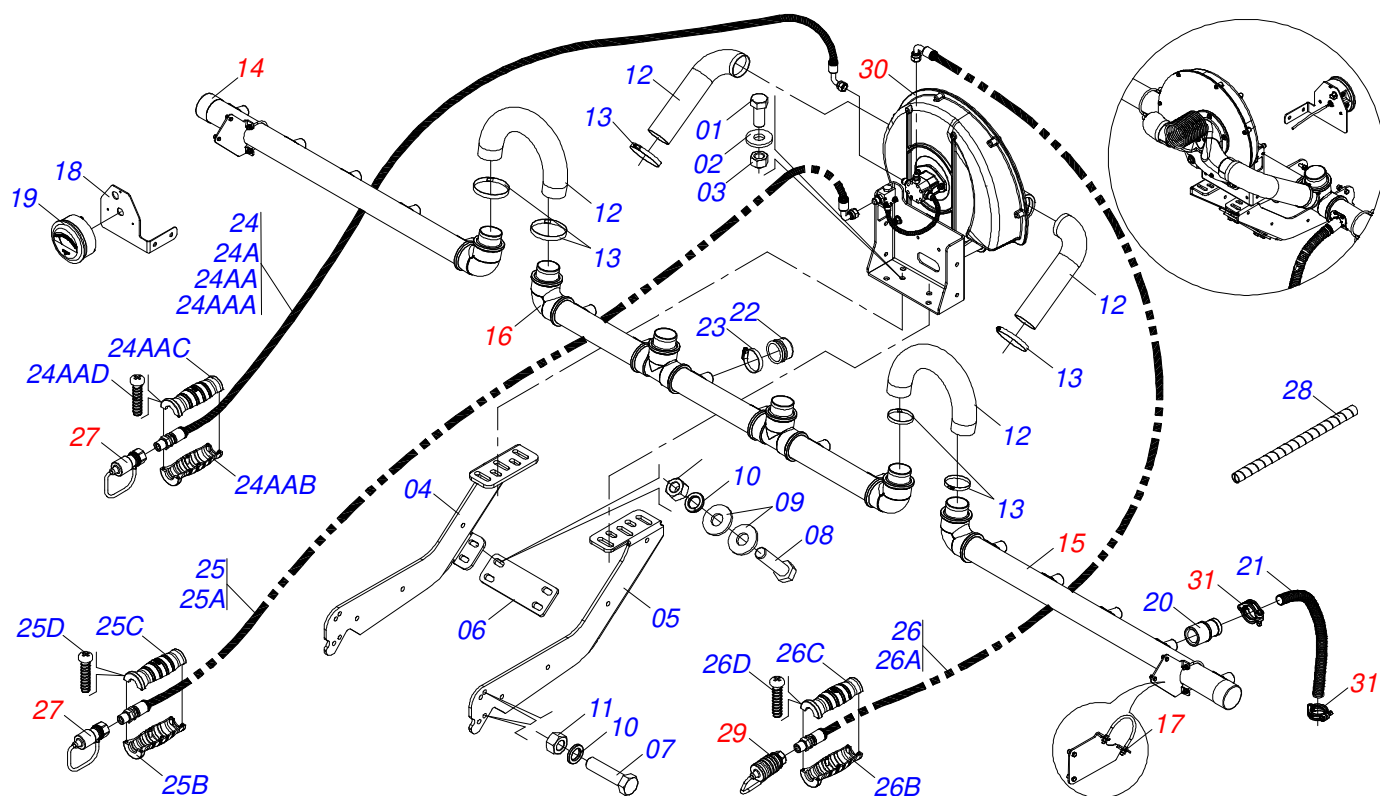


Item	Code	Description	See page	QT
01	0503011267	5/8 UNC X 1.1/2 C S G.5 ZN BOLT		02
02	0501012140	FLAT WASHER		02
03	0503012412	5/8" UNC SELF LOCKING NUT		02
04	0581011414	BODY RIGHT SUPPORT TURBINE		01
05	0581011413	UPPER LEFT SUPPORT		01
06	0581011415	SUPPORTER FIXING BAR		01
07	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
08	0503011239	1/2" X 2" BOLT		04
09	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
10	0503010019	1/2" SPRING WASHER		08
11	0503010060	1/2 UNC G.5 ZN HEX NUT		08
12	0581012166	HOSE		04
13	0503011372	102 TO 121 CLAMP		06
14	0511059504	RIGHT AIR CONDUCTOR - 6850	53	01
15	0511059505	LEFT AIR CONDUCTOR - 6850	54	01
16	0511059503	6 MOUTH AIR CONDUCTOR X 2150 - 6850	46	01
17	0511059319	AIR FIXING SUPPORT	47	06
18	0581010952	VACUUM GAUGE SUPPORT		01
19	0503013584	VACUUM GAUGE		01
20	0571019716	ADAPTER		15
21	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		15
22	0503031436	AIR DISTRIBUTOR PUMP		01
23	0503010246	CLAMP		01
24	0511057906	HOSE ASSY	55	01
24A	0511057840	ASSY TURBINE HOSE REAR		01
24AA	0521052534	HOSE 1/2 X 7012 TC-TM YELLOW / RED		01
24AAA	0501081247	HOSE 1/2 X 7012 TC-TM		01
24AAB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
24AAC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
24AAD	0503018952	PLASTIC BOLT		06
25	0521052535	HOSE 1/2 X 7012 TC-TM YELLOW / BLUE		01


Item	Code	Description	See page	QT
25A	0501081247	HOSE 1/2 X 7012 TC-TM		01
25B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
25C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
25D	0503018952	PLASTIC BOLT		06
26	0521052536	HOSE 3/8 X 7012 TC-TM YELLOW / GREEN		01
26A	0501080477	HOSE 3/8 X 7012 TC-TM		01
26B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
26C	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01
26D	0503018952	PLASTIC BOLT		06
27	0501053834	MALE QUICK COUPLER	48	02
28	0581010092	SPRING PROTECTION PLASTIC HOSE 3/4		01
29	0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	49	01
30	0511059406	TURBINE P.P MOUNTED	50	01
31	0521052549	CLAMP	52	30

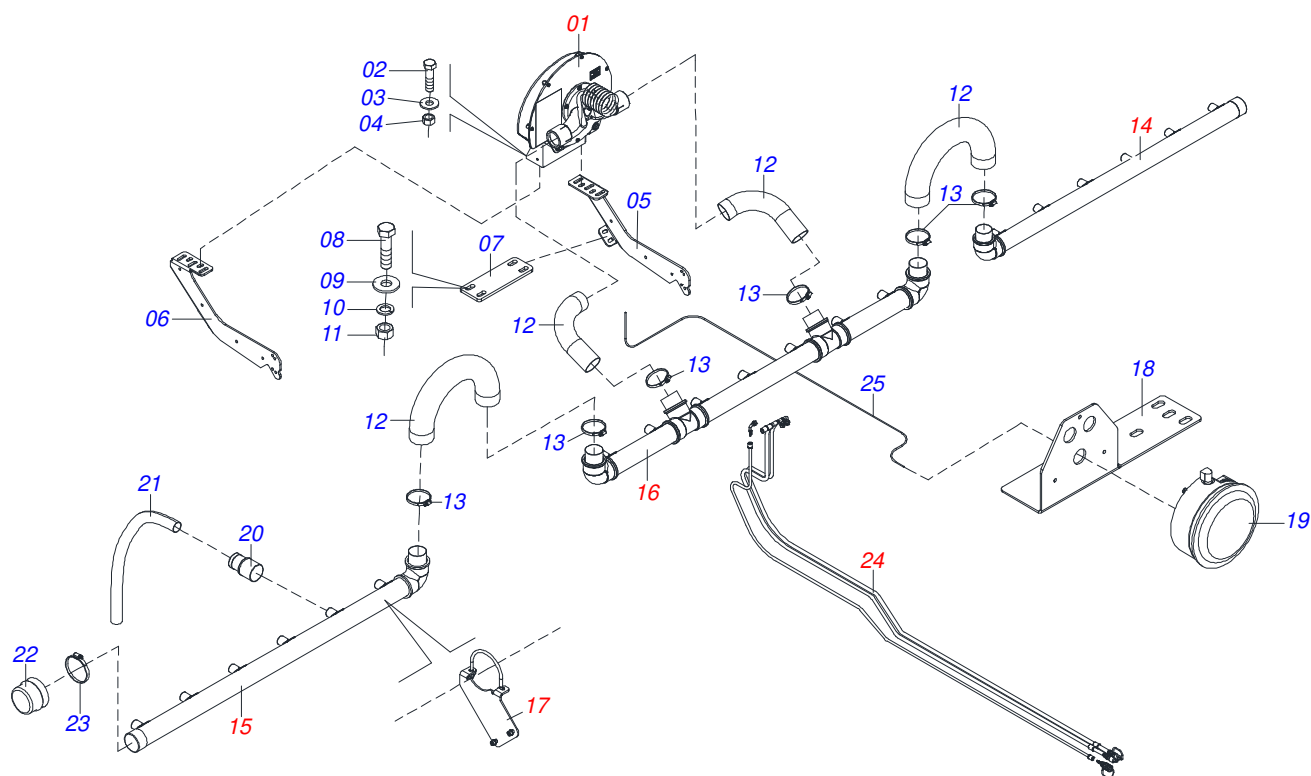

Item	Code	Description	See page	QT
001	0511059406	TURBINE P.P MOUNTED	50	01
002	0503011267	5/8 UNC X 1.1/2 C S G.5 ZN BOLT		02
003	0501012140	FLAT WASHER		02
004	0503012412	5/8" UNC SELF LOCKING NUT		02
005	0581011414	BODY RIGHT SUPPORT TURBINE		01
006	0581011413	UPPER LEFT SUPPORT		01
007	0581011415	SUPPORTER FIXING BAR		01
008	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
009	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
010	0503010019	1/2" SPRING WASHER		08
011	0503010060	1/2 UNC G.5 ZN HEX NUT		08
012	0581012166	HOSE		04
013	0503011372	102 TO 121 CLAMP		06
014	0521050016	RIGHT AIR DISTRIBUTOR 06 NOZZLES - 17 E500	56	01
015	0521050017	LEFT AIR DISTRIBUTOR 06 NOZZLES - 17 E500	57	01
016	0511059503	6 MOUTH AIR CONDUCTOR X 2150 - 6850	46	01
017	0511059319	AIR FIXING SUPPORT	47	06
018	0571013731	VACUUM GAUGE SUPPORT		01
019	0503013584	VACUUM GAUGE		01
020	0571019716	ADAPTER		16
021	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		16
022	0503031436	AIR DISTRIBUTOR PUMP		02
023	0503010246	CLAMP		02
024	0511057906	HOSE ASSY	55	01
025	0503015062	TUBE		03

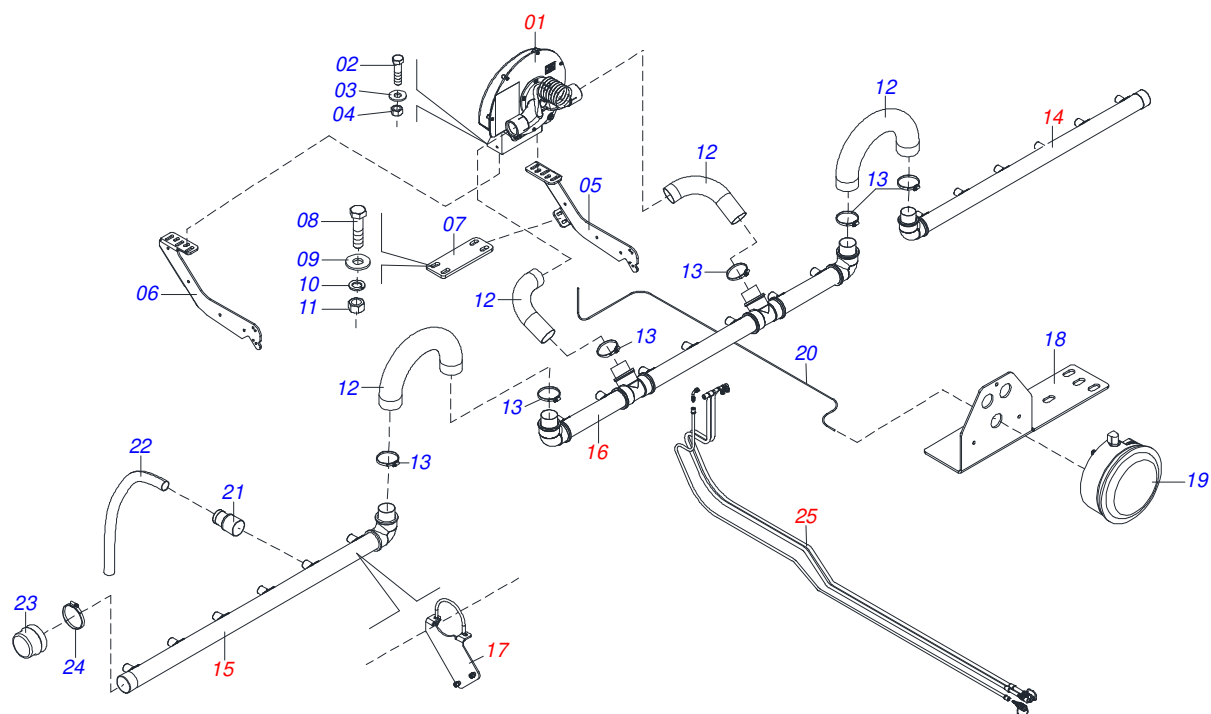


Item	Code	Description	See page	QT
001	0511059406	TURBINE P.P MOUNTED	50	01
002	0503011267	5/8 UNC X 1.1/2 C S G.5 ZN BOLT		02
003	0501012140	FLAT WASHER		02
004	0503012412	5/8" UNC SELF LOCKING NUT		02
005	0581011414	BODY RIGHT SUPPORT TURBINE		01
006	0581011413	UPPER LEFT SUPPORT		01
007	0581011415	SUPPORTER FIXING BAR		01
008	0503011239	1/2" X 2" BOLT		04
009	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
010	0503010019	1/2" SPRING WASHER		04
011	0503010060	1/2 UNC G.5 ZN HEX NUT		04
012	0581012166	HOSE		04
013	0503011372	102 TO 121 CLAMP		06
014	0521050016	RIGHT AIR DISTRIBUTOR 06 NOZZLES - 17 E500	56	01
015	0521050017	LEFT AIR DISTRIBUTOR 06 NOZZLES - 17 E500	57	01
016	0521050018	CENTRAL AIR DISTRIBUTOR	58	01
017	0511059319	AIR FIXING SUPPORT	47	06
018	0571013731	VACUUM GAUGE SUPPORT		01
019	0503013584	VACUUM GAUGE		01
020	0503015062	TUBE		03
021	0571019716	ADAPTER		17
022	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		17
023	0503031436	AIR DISTRIBUTOR PUMP		02
024	0503010246	CLAMP		02
025	0511057906	HOSE ASSY	55	01

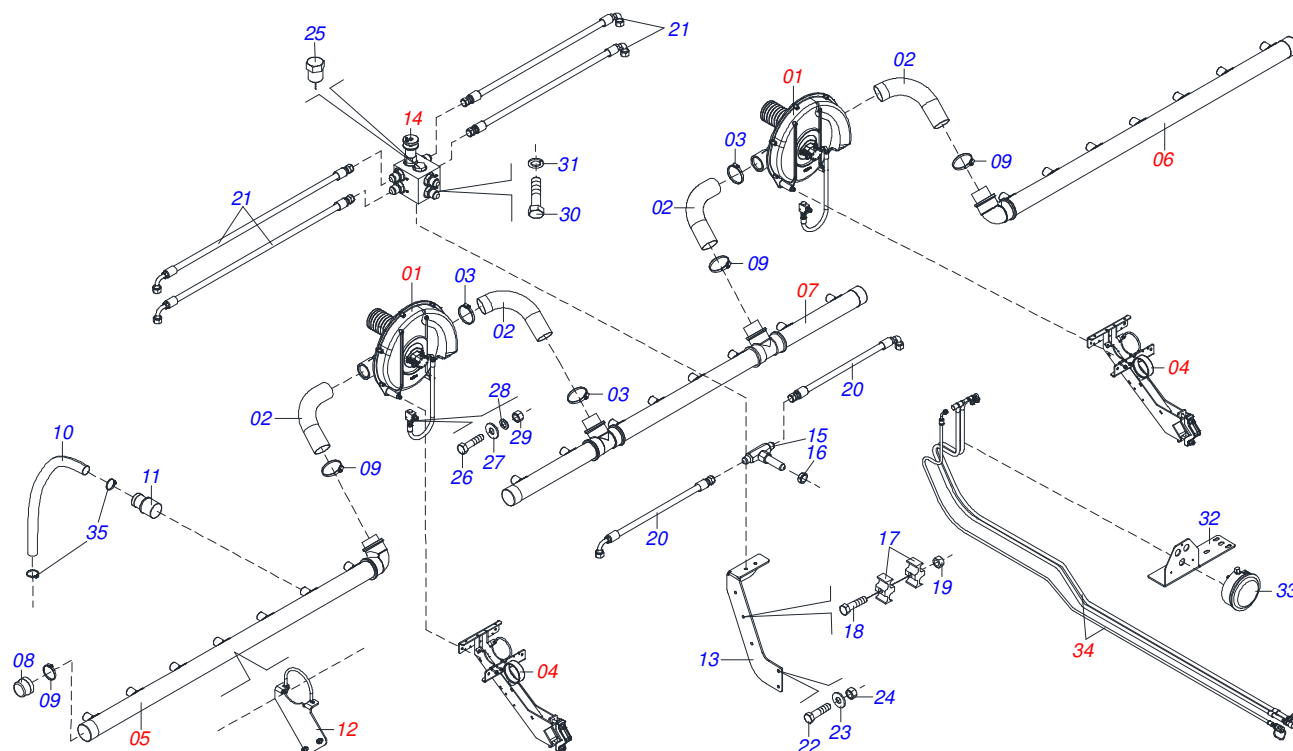


Item	Code	Description	See page	QT
001	0511059887	TURBINE PRECISION PLANTING	59	02
002	0561011377	HOSE 4 X 2200		02
003	0503011372	102 TO 121 CLAMP		04
004	0521050260	SUPPORT ASSEMBLY P.P MTH	60	02
005	0521050262	RIGHT AIR DISTRIBUTOR	61	01
006	0521050263	LEFT AIR DISTRIBUTOR	62	01
007	0521050261	DISTRIBUTOR AIR CENTER 08 MOUTHS - 19 A 21	63	01
008	0503031436	AIR DISTRIBUTOR PUMP		03
009	0503010246	CLAMP		03
010	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		19
011	0571019716	ADAPTER		19
012	0511059319	AIR FIXING SUPPORT	47	04
013	0581013454	VALVE SUPPORT		01
014	0511057292	ASSY FLOW REGULATION VALVE	64	01
015	0521060118	"T" TERMINAL		01
016	0503033787	NUT 3/4 UNF		01
017	0502012702	BODY SUPPORT CLAMP		02
018	0503010674	7/16" X 3-1/4" BOLT		01
019	0503015490	SELF-LOCKING NUT 7/16		01
020	0501080714	3/8 X 1600 TR-TC HOSE		02
021	0501080060	1/2" X 63" TR-TC HOSE		04
022	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
023	0503010019	1/2" SPRING WASHER		02
024	0503010060	1/2 UNC G.5 ZN HEX NUT		02
025	0511017907	1/8" BSPT X 6 PLUG		01
026	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
027	0501010694	FLAT WASHER		02
028	0503010143	1/4" SPRING WASHER		02
029	0503010144	1/4" NUT		02
030	0503012456	3/8" X 7/8" BOLT		02
031	0503010025	3/8 SPRING WASHER		02


Item	Code	Description	See page	QT
032	0571013731	VACUUM GAUGE SUPPORT		01
033	0503013584	VACUUM GAUGE		01
034	0511057906	HOSE ASSY	55	01
035	0503010243	CLAMP		19

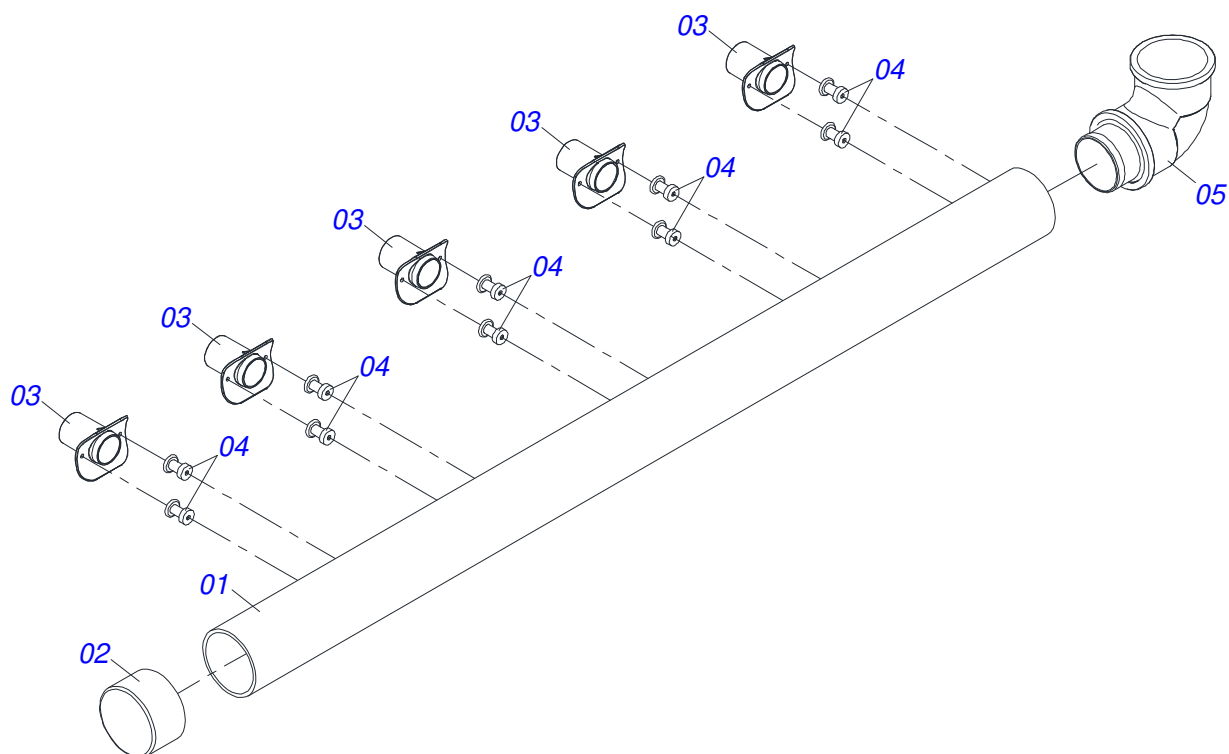


Item	Code	Description	See page	QT
01	0571019406	BODY DISTRIBUTOR VACUUM		01
02	0503012566	COVER KAP 110 YELLOW		01
03	0503031943	SOCKET		04
04	0503012856	POP RIVET		08
05	0521050393	ASSY KNEE		01

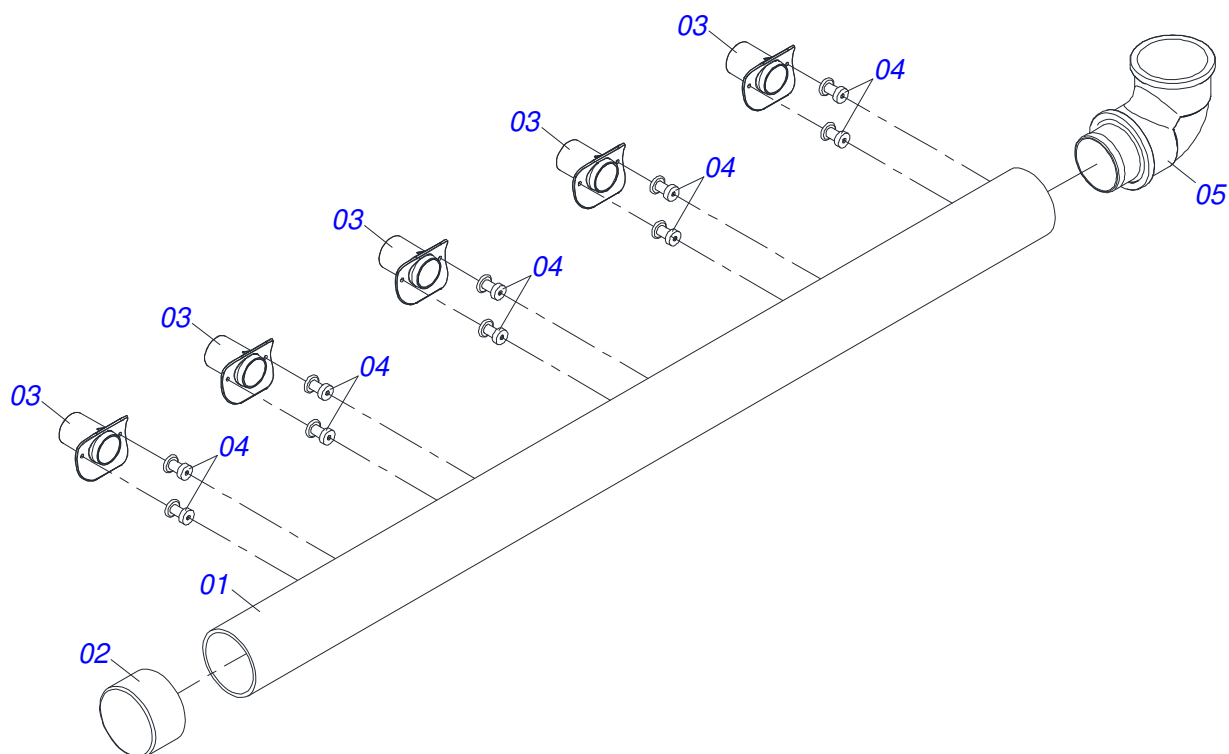


Item	Code	Description	See page	QT
01	0571019406	BODY DISTRIBUTOR VACUUM		01
02	0503012566	COVER KAP 110 YELLOW		01
03	0503031943	SOCKET		04
04	0503012856	POP RIVET		08
05	0521050393	ASSY KNEE		01

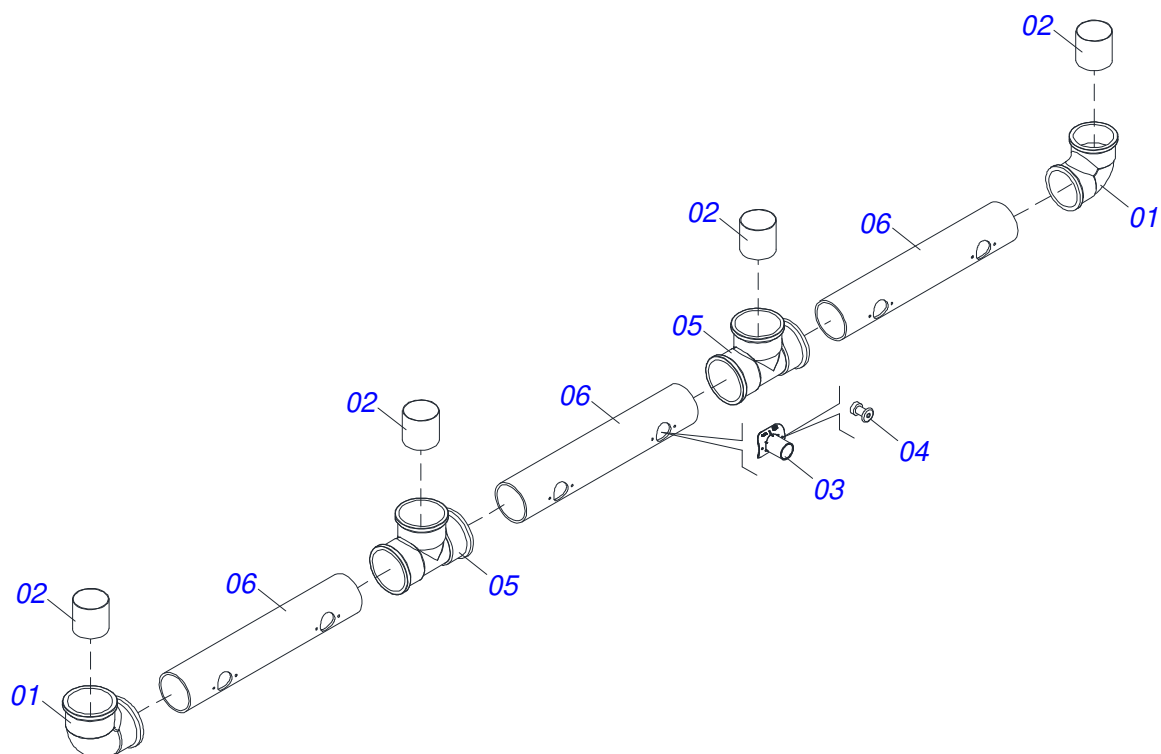


Item	Code	Description	See page	QT
01	0503017845	90 PVC KNEE		02
02	0571018559	WHITE PVC TUBE		04
03	0503031943	SOCKET		06
04	0503012856	POP RIVET		12
05	0503012567	T-JOIN FOR TUBE 110		02
06	0581012167	AR 600 CONDUCTOR BODY		03

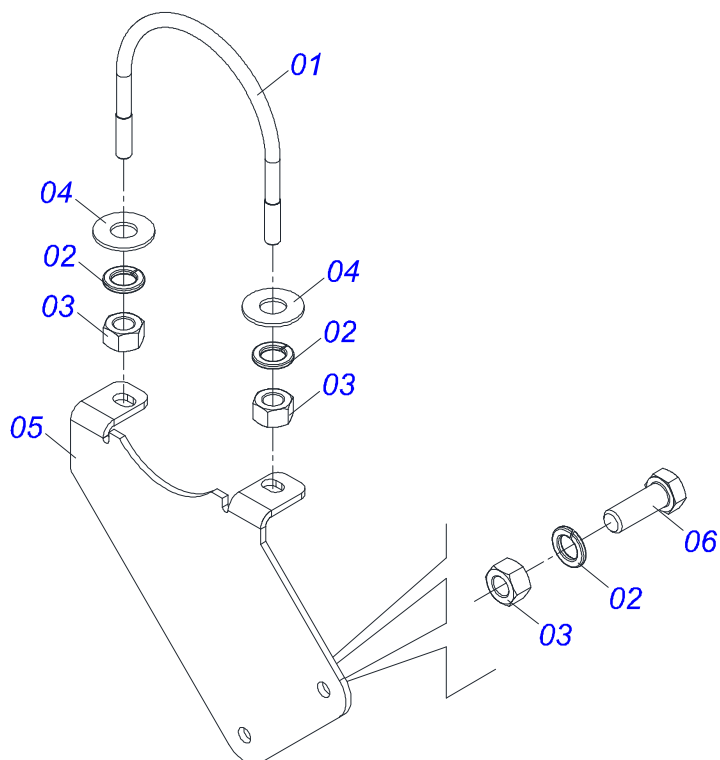


Item	Code	Description	See page	QT
01	0571019403	STAPLE FIXER		01
02	0503010025	3/8 SPRING WASHER		04
03	0503010026	3/8" NUT		04
04	0501013518	FLAT WASHER		02
05	0571019921	AIR SUPPORT FIXATION		01
06	0503010237	3/8" X 1" BOLT		02

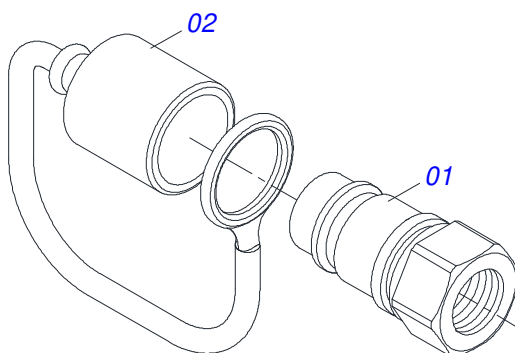


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

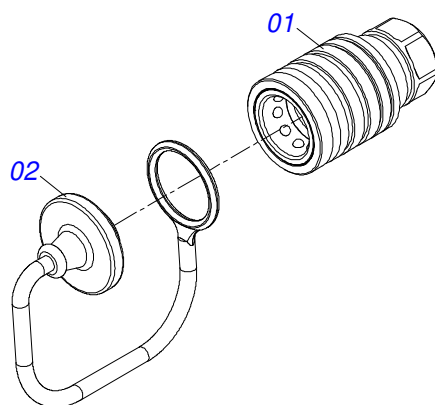


Item	Code	Description	See page	QT
01	0503018799	QUICK COUPLING		01
02	0503011883	QUICK CONNECTION COVER		01

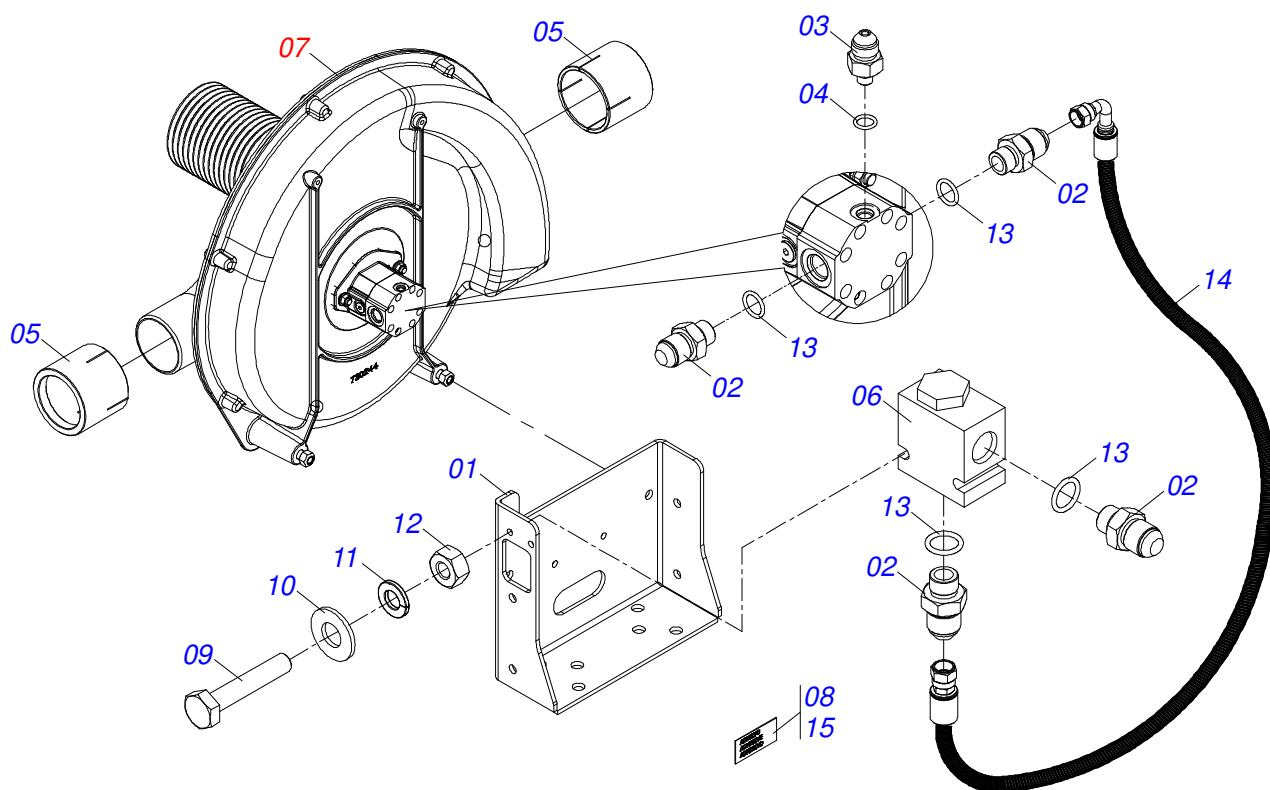


Item	Code	Description	See page	QT
01	0581012099	BODY SUPPORT TURBINE		01
02	0501011460	7/8 NF REDUCTION NIPPLE		04
03	0503034385	NIPPLE 7/16 UNF X UNF JIC		01
04	0503010392	2-046 N 3006 9B O'RING		01
05	0581012096	ROUND SLEEVE		02
06	0503015420	CV10208TN5 ANTI-CAVITATION VALVE		01
07	0521050154	PRECISION PLANTING TURBINE WITH HOLE	51	01
08	0503031087	ADHESIVE LABEL		01
09	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
10	0501010694	FLAT WASHER		02
11	0503010143	1/4" SPRING WASHER		02
12	0503010144	1/4" NUT		02
13	0503010190	2-114 N 3006-9B O'RING		04
14	0501081235	1/2 X 650 TR- TC HOSE		01
15	0503031426	ADHESIVE LABEL ATTENTION TURBINE		01

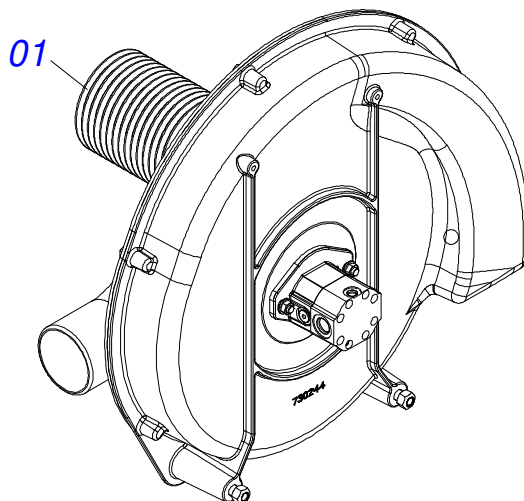


Item	Code	Description	See page	QT
01	0503062627	HYDRAULIC TURBINE ASSY		01

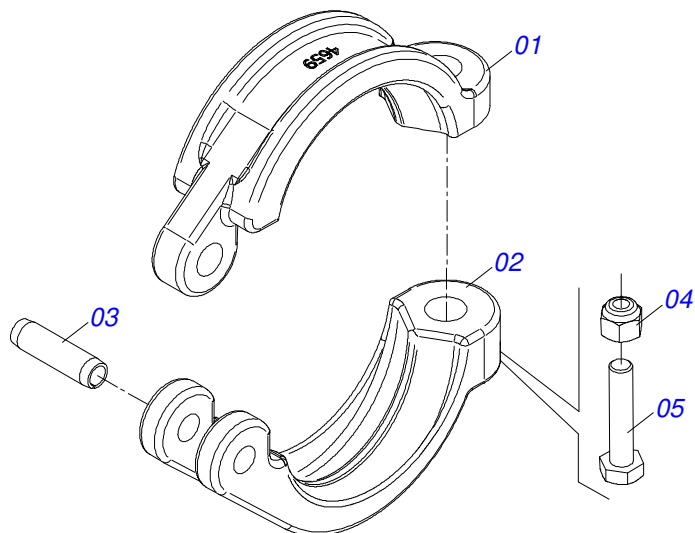


Item	Code	Description	See page	QT
01	0503034660	CLAMP LOWER		01
02	0503034659	CLAMP UPPER		01
03	0503010686	0.2" X 0.7" SPRING PIN		01
04	0503011776	M6 SELF ADJUSTINGNUT		01
05	0503011813	M6 X 1.2" BOLT		01

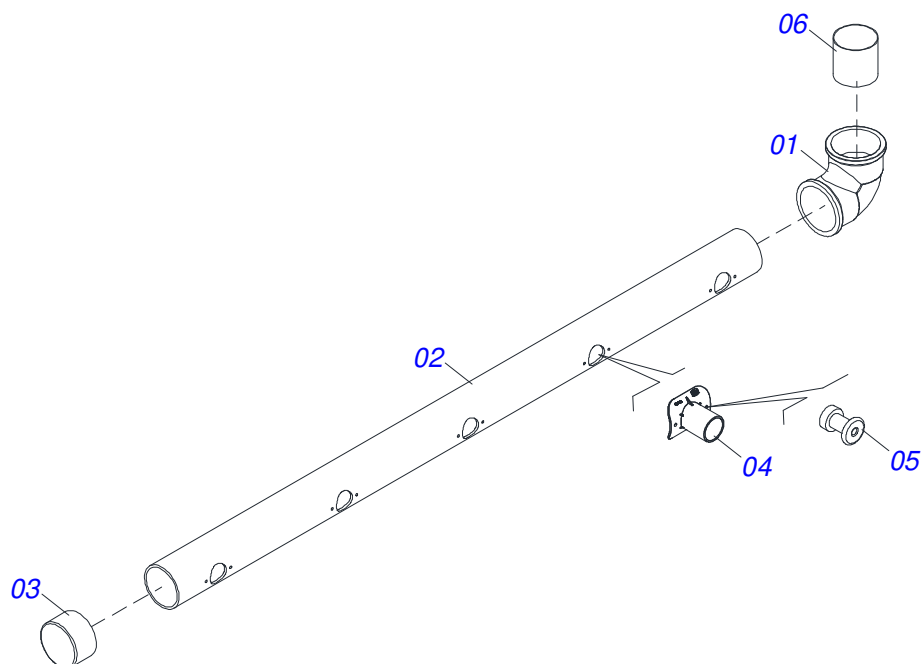


Item	Code	Description	See page	QT
01	0503017845	90 PVC KNEE		01
02	0571019405	BODY DISTRIBUTOR VACUUM 4845/5345		01
03	0503012566	COVER KAP 110 YELLOW		01
04	0503031943	SOCKET		05
05	0503012856	POP RIVET		10
06	0571018559	WHITE PVC TUBE		01

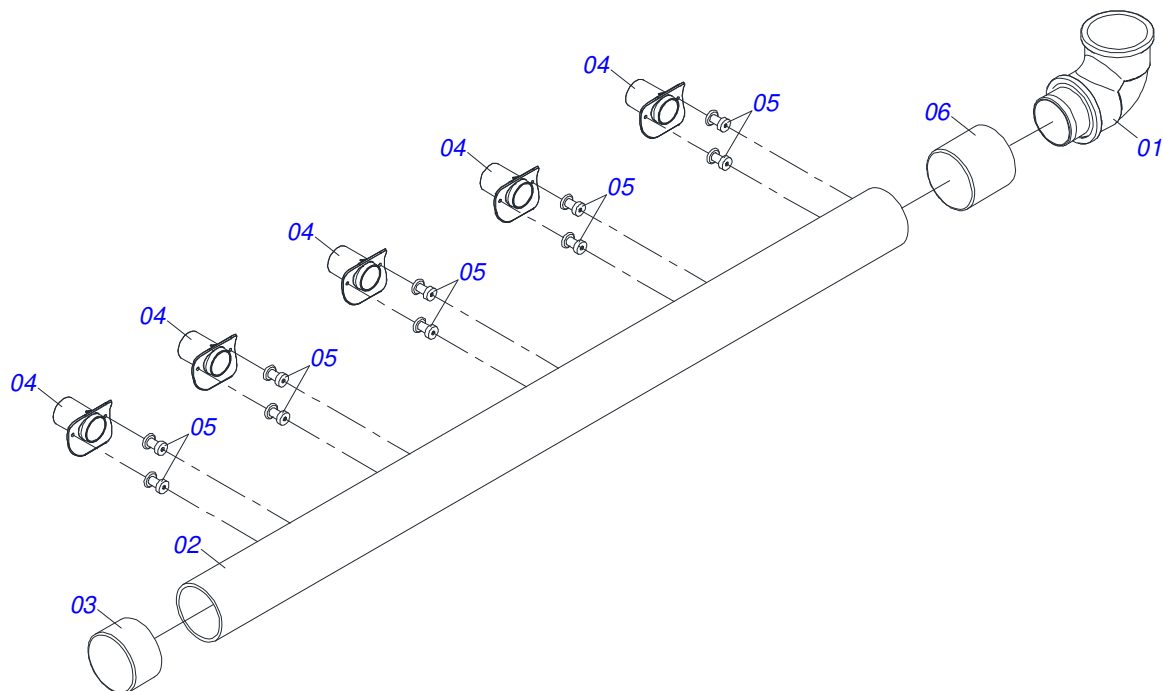


Item	Code	Description	See page	QT
01	0503017845	90 PVC KNEE		01
02	0571019405	BODY DISTRIBUTOR VACUUM 4845/5345		01
03	0503012566	COVER KAP 110 YELLOW		01
04	0503031943	SOCKET		05
05	0503012856	POP RIVET		10
06	0571018559	WHITE PVC TUBE		01

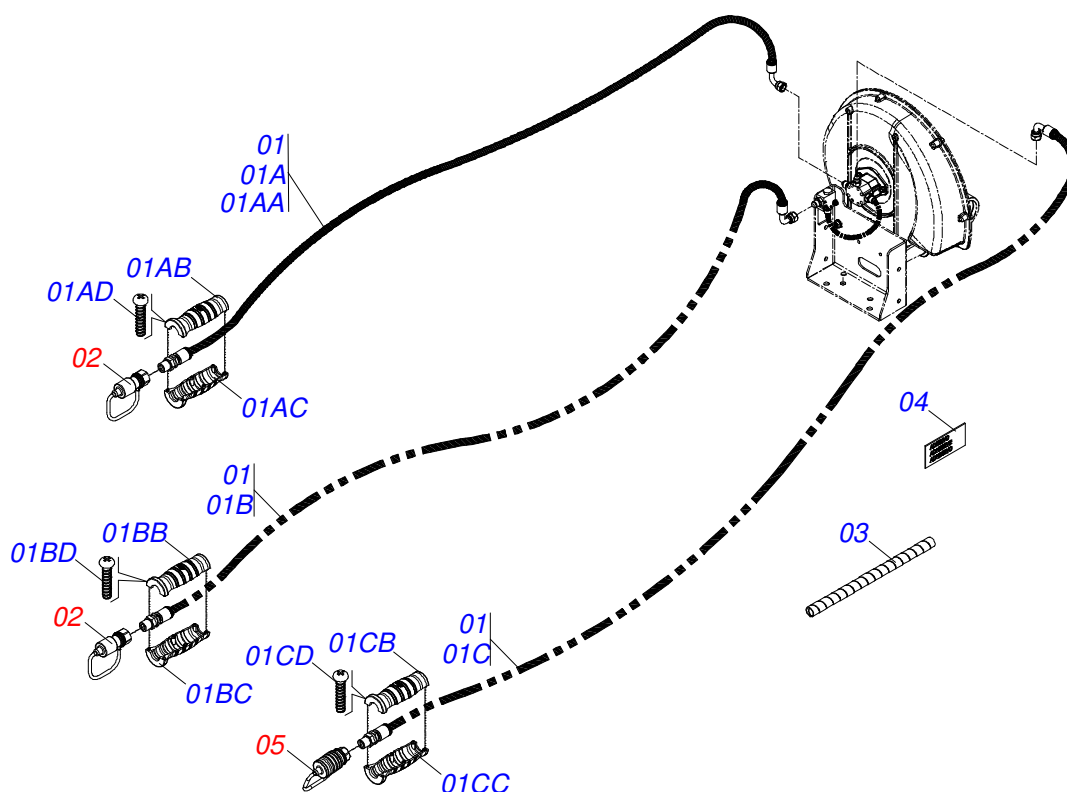


Item	Code	Description	See page	QT
01	0511057840	ASSY TURBINE HOSE REAR		01
01A	0521052534	HOSE 1/2 X 7012 TC-TM YELLOW / RED		01
01AA	0501081247	HOSE 1/2 X 7012 TC-TM		01
01AB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01AC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
01AD	0503018952	PLASTIC BOLT		06
01B	0521052535	HOSE 1/2 X 7012 TC-TM YELLOW / BLUE		01
01BA	0501081247	HOSE 1/2 X 7012 TC-TM		01
01BB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01BC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
01BD	0503018952	PLASTIC BOLT		06
01C	0521052536	HOSE 3/8 X 7012 TC-TM YELLOW / GREEN		01
01CA	0501080477	HOSE 3/8 X 7012 TC-TM		01
01CB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01CC	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01
01CD	0503018952	PLASTIC BOLT		06
02	0501053834	MALE QUICK COUPLER	48	02
03	0581010092	SPRING PROTECTION PLASTIC HOSE 3/4		01
04	0503033981	ADHESIVE LABEL		01
05	0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	49	01

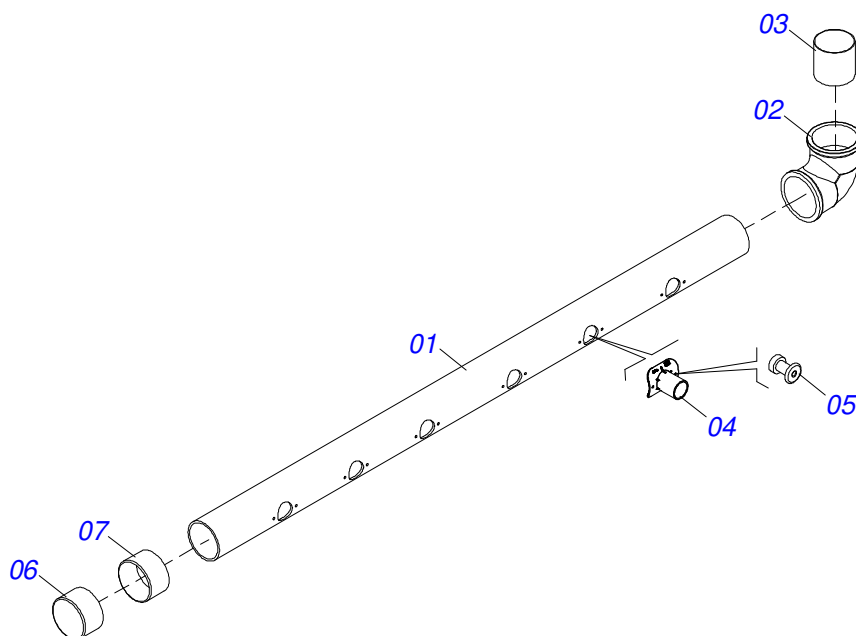


Item	Code	Description	See page	QT
01	0581013131	AIR DISTRIBUTOR BODY		01
02	0503017845	90 PVC KNEE		01
03	0571018559	WHITE PVC TUBE		01
04	0503031943	SOCKET		06
05	0503012856	POP RIVET		12
06	0503012566	COVER KAP 110 YELLOW		01
07	0521015543	110 X 55 AIR DUCT		01

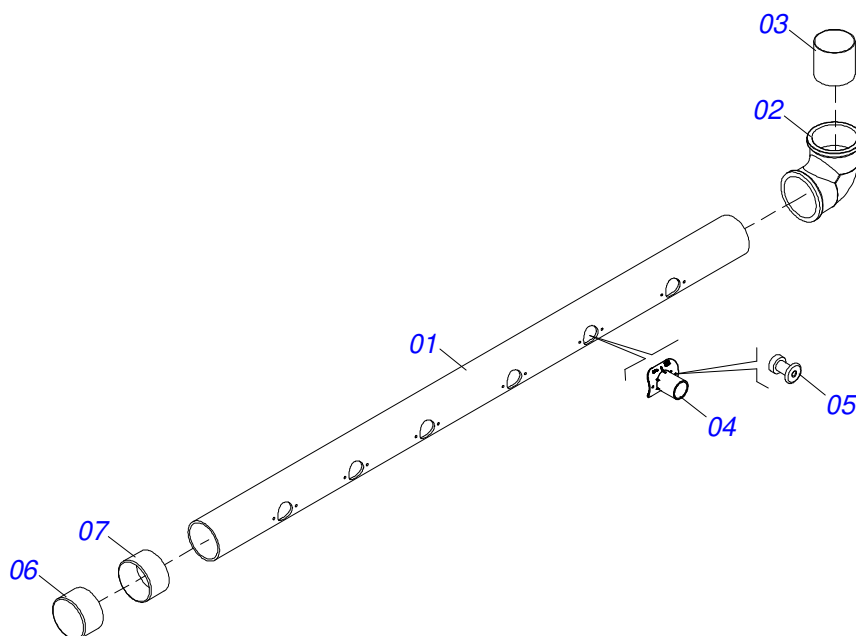


Item	Code	Description	See page	QT
01	0581013131	AIR DISTRIBUTOR BODY		01
02	0503017845	90 PVC KNEE		01
03	0571018559	WHITE PVC TUBE		01
04	0503031943	SOCKET		06
05	0503012856	POP RIVET		12
06	0503012566	COVER KAP 110 YELLOW		01
07	0521015543	110 X 55 AIR DUCT		01

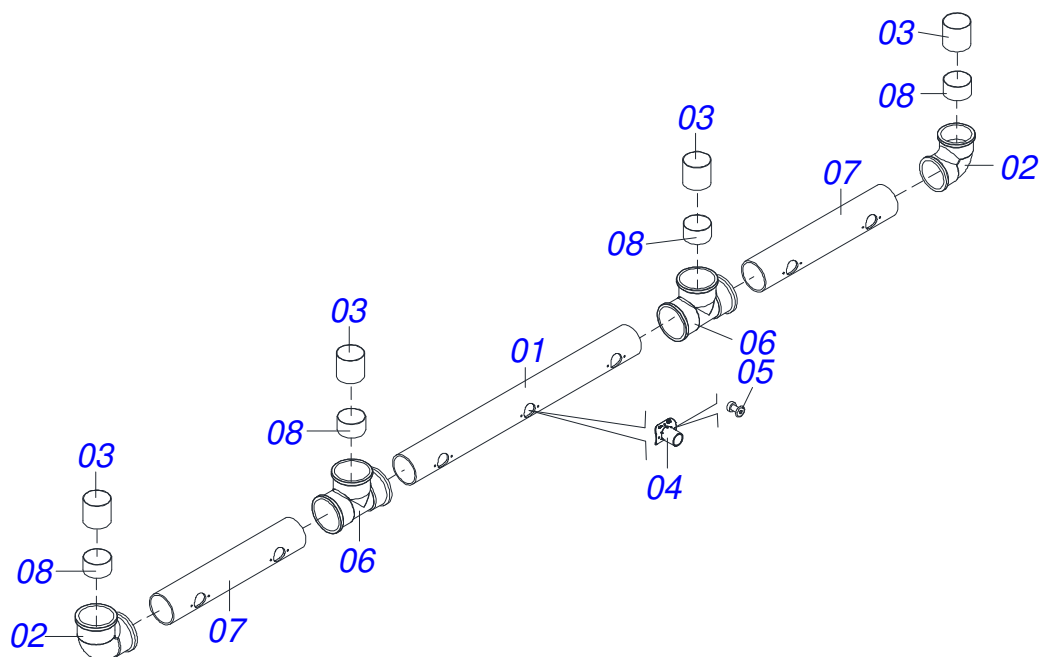


Item	Code	Description	See page	QT
001	0571019573	AR 1000 CONDUCTOR BODY		01
002	0503017845	90 PVC KNEE		02
003	0571018559	WHITE PVC TUBE		04
004	0503031943	SOCKET		07
005	0503012856	POP RIVET		14
006	0503012567	T-JOIN FOR TUBE 110		02
007	0581012167	AR 600 CONDUCTOR BODY		02
008	0521015543	110 X 55 AIR DUCT		04

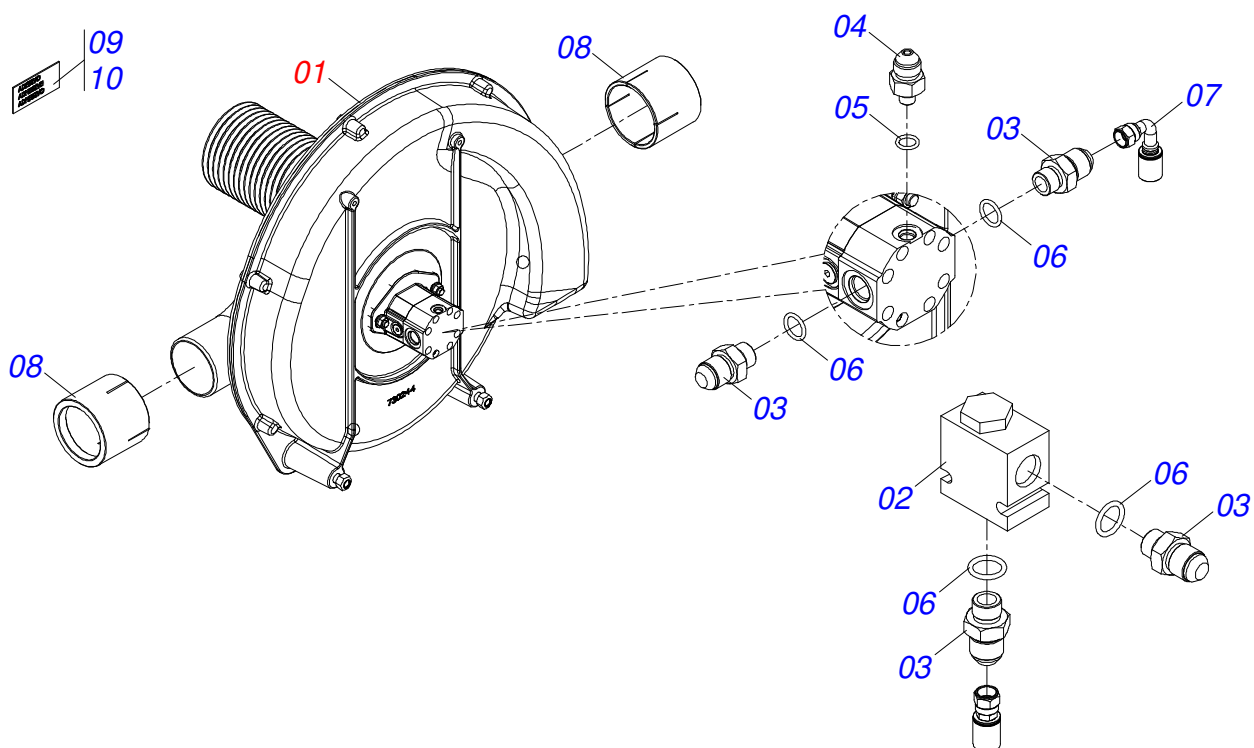


Item	Code	Description	See page	QT
01	0521050154	PRECISION PLANTING TURBINE WITH HOLE	51	01
02	0503015420	CV10208TN5 ANTI-CAVITATION VALVE		01
03	0501011460	7/8 NF REDUCTION NIPPLE		04
04	0503034385	NIPPLE 7/16 UNF X UNF JIC		01
05	0503010392	2-046 N 3006 9B O'RING		01
06	0503010190	2-114 N 3006-9B O'RING		04
07	0501080218	1/2 X 750 HOSE		01
08	0581012096	ROUND SLEEVE		02
09	0503031087	ADHESIVE LABEL		01
10	0503031426	ADHESIVE LABEL ATTENTION TURBINE		01

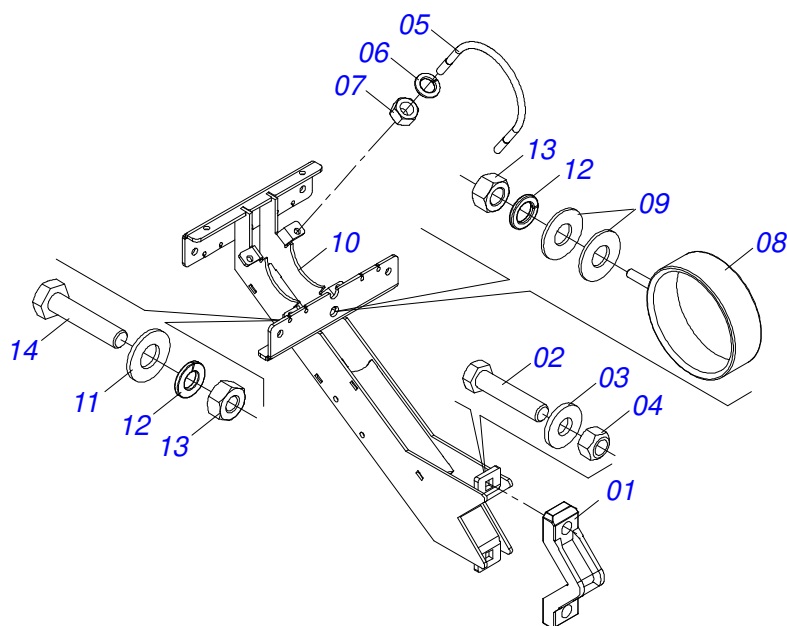


Item	Code	Description	See page	QT
01	0502010175	HITCH CLAMP		01
02	0501011543	5/8" X 4" BOLT		02
03	0501012140	FLAT WASHER		02
04	0503012412	5/8" UNC SELF LOCKING NUT		02
05	0571019403	STAPLE FIXER		01
06	0503010025	3/8 SPRING WASHER		03
07	0503010026	3/8" NUT		03
08	0521067492	SUPPORT		01
09	0501013518	FLAT WASHER		02
10	0521067491	SUPPORT MTH P.P		01
11	0501010694	FLAT WASHER		02
12	0503010143	1/4" SPRING WASHER		02
13	0503010144	1/4" NUT		02
14	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02

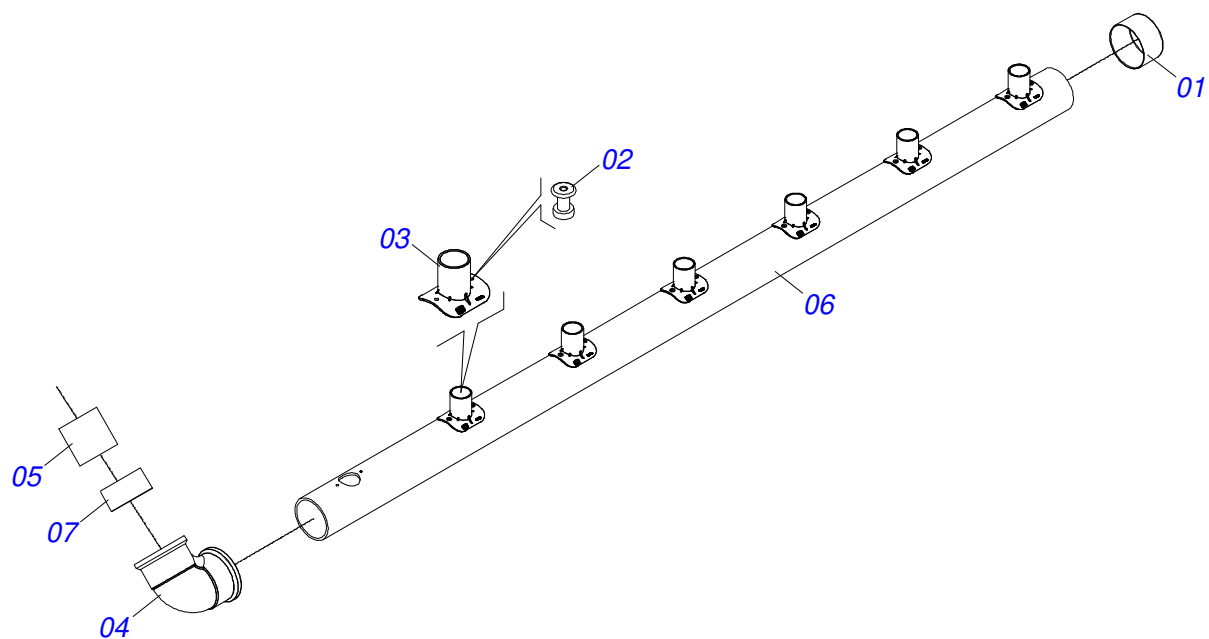


Item	Code	Description	See page	QT
01	0503012566	COVER KAP 110 YELLOW		01
02	0503012856	POP RIVET		14
03	0503031943	SOCKET		07
04	0503017845	90 PVC KNEE		01
05	0571018559	WHITE PVC TUBE		01
06	0581011923	BODY DISTRIBUTOR VACUUM		01
07	0521015543	110 X 55 AIR DUCT		01

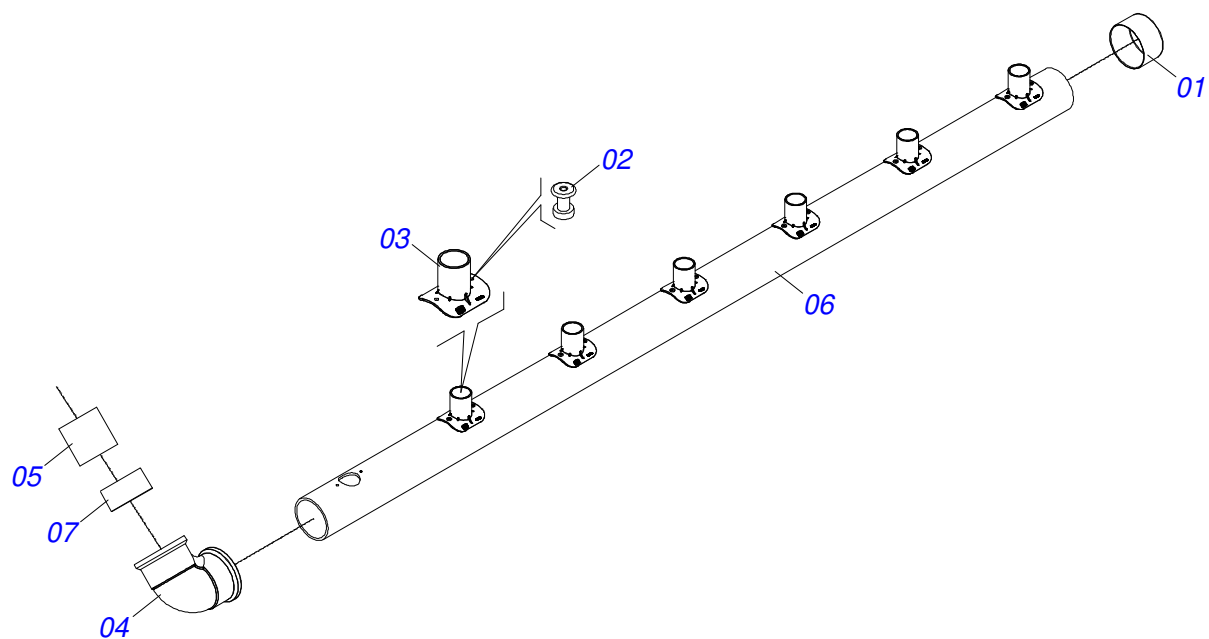


Item	Code	Description	See page	QT
01	0503012566	COVER KAP 110 YELLOW		01
02	0503012856	POP RIVET		14
03	0503031943	SOCKET		07
04	0503017845	90 PVC KNEE		01
05	0571018559	WHITE PVC TUBE		01
06	0581011923	BODY DISTRIBUTOR VACUUM		01
07	0521015543	110 X 55 AIR DUCT		01

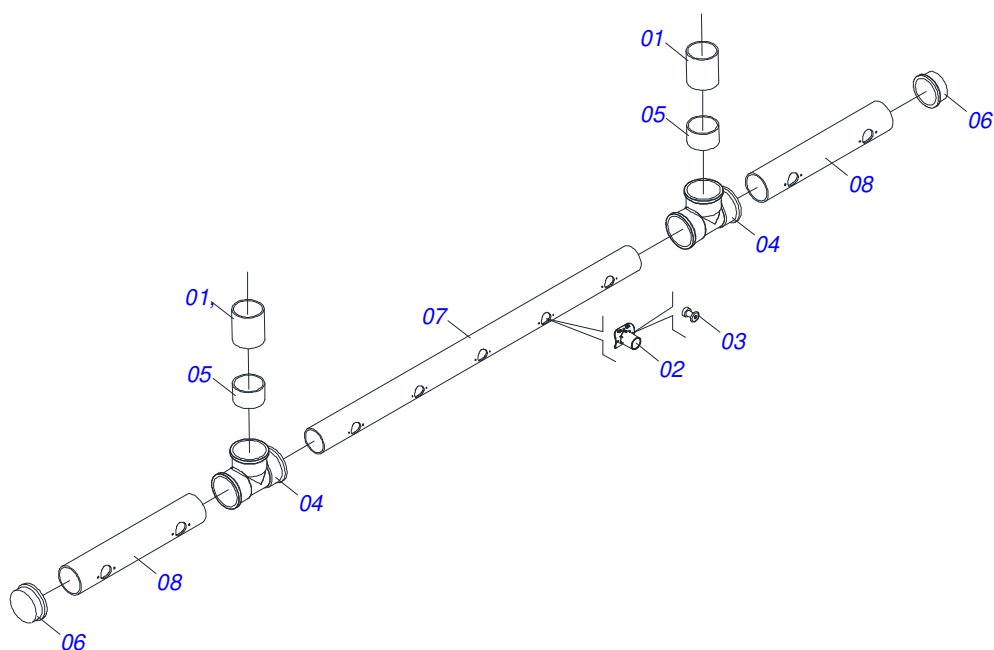

Item	Code	Description	See page	QT
01	0571018559	WHITE PVC TUBE		02
02	0503031943	SOCKET		08
03	0503012856	POP RIVET		16
04	0503012567	T-JOIN FOR TUBE 110		02
05	0521015543	110 X 55 AIR DUCT		02
06	0503012566	COVER KAP 110 YELLOW		02
07	0571019406	BODY DISTRIBUTOR VACUUM		01
08	0561017670	BODY DISTRIBUTOR AR		02

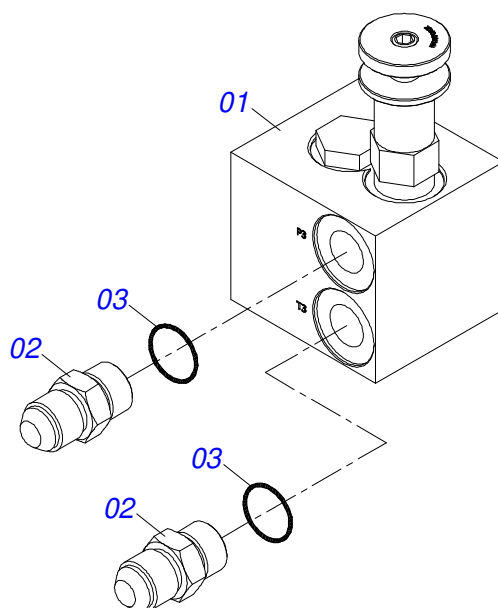


Item	Code	Description	See page	QT
01	0503014774	HFB0709111 CONTROL VALVE		01
02	0501010590	NIPPLE		06
03	0503010045	O'RING		06

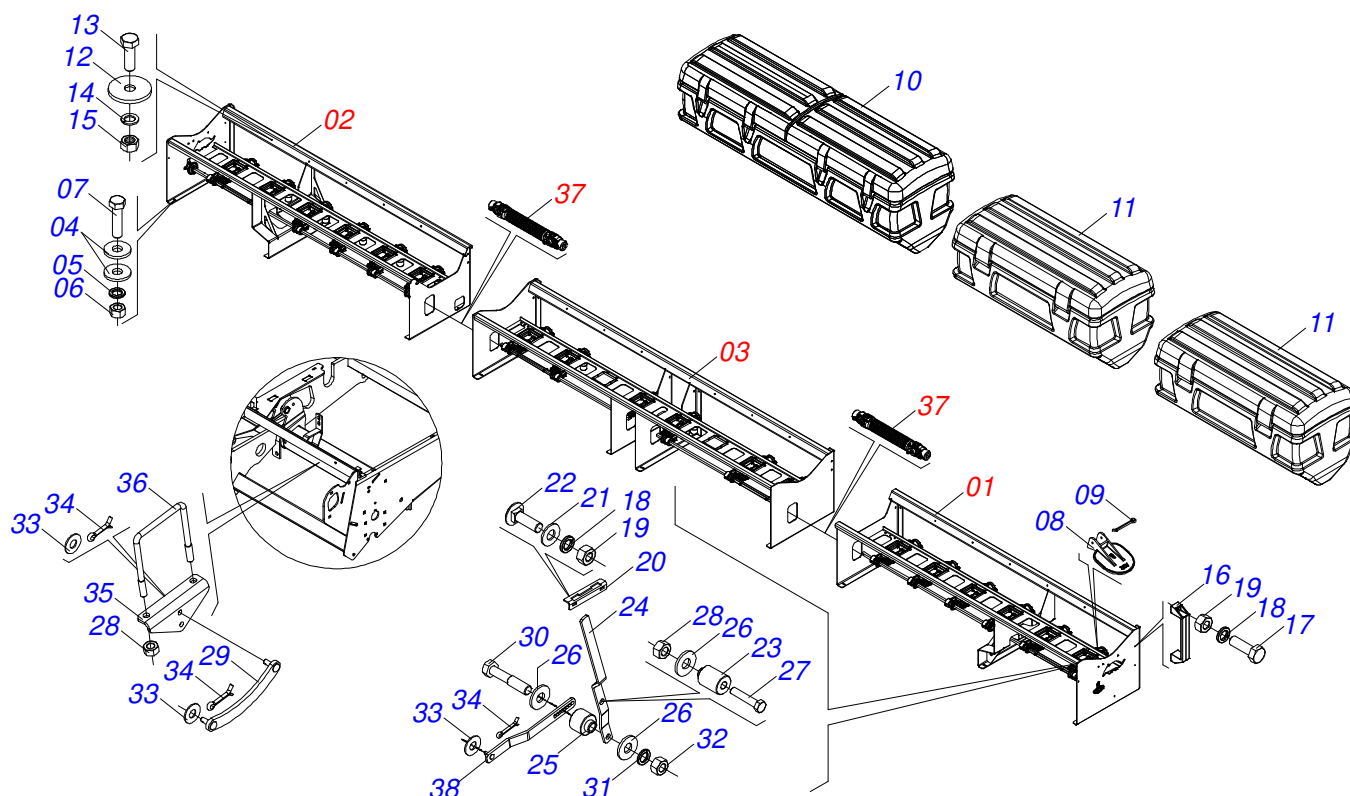


Item	Code	Description	See page	QT
01	0511059278	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 5750	72	01
02	0511059277	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 5750	73	01
03	0511059279	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 5750	74	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		32
05	0503010025	3/8 SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0503010849	3/8" X 1-1/2" BOLT		16
08	0571010590	FERTILIZER SIDE COVER		13
09	0503010362	1/8 X 1.1/4 COTTERPIN		13
10	0503062391	FERTILIZER HOPPER		01
11	0503062362	FERTILIZER HOPPER		02
12	0571019051	FIXER HOPPER WASHER		20
13	0503013751	3/8 UNC X 1.1/4 BOLT		20
14	0503012535	3/8" SPRING WASHER		20
15	0503012531	3/8" INOX NUT		20
16	0503011957	NYLON HANDLE		02
17	0503010371	5/16" X 1" BOLT		04
18	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
19	0503010337	5/16" NUT		08
20	0581012605	GEAR BOX LEVER LOCK		02
21	0501010694	FLAT WASHER		04
22	0503011953	5/16" X 1" BOLT		04
23	0551019168	SLEEVE		02
24	0551019160	LEVER		02
25	0551019167	SLEEVE UNION		02
26	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
27	0503010479	BOLT		02
28	0503011336	1/2" HEX SELF ADJUSTING NUT		06
29	0511069678	LH LOWER LEVER		02

Item	Code	Description	See page	QT
30	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
31	0503010019	1/2" SPRING WASHER		02
32	0503010060	1/2 UNC G.5 ZN HEX NUT		02
33	0501013518	FLAT WASHER		06
34	0503010140	1/8" X 3/4" COTTERPIN		06
35	0551019159	LEVER FIXER BODY		02
36	0561016468	FASTENER		02
37	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	75	02
38	0521061741	INNTER LEVER		02

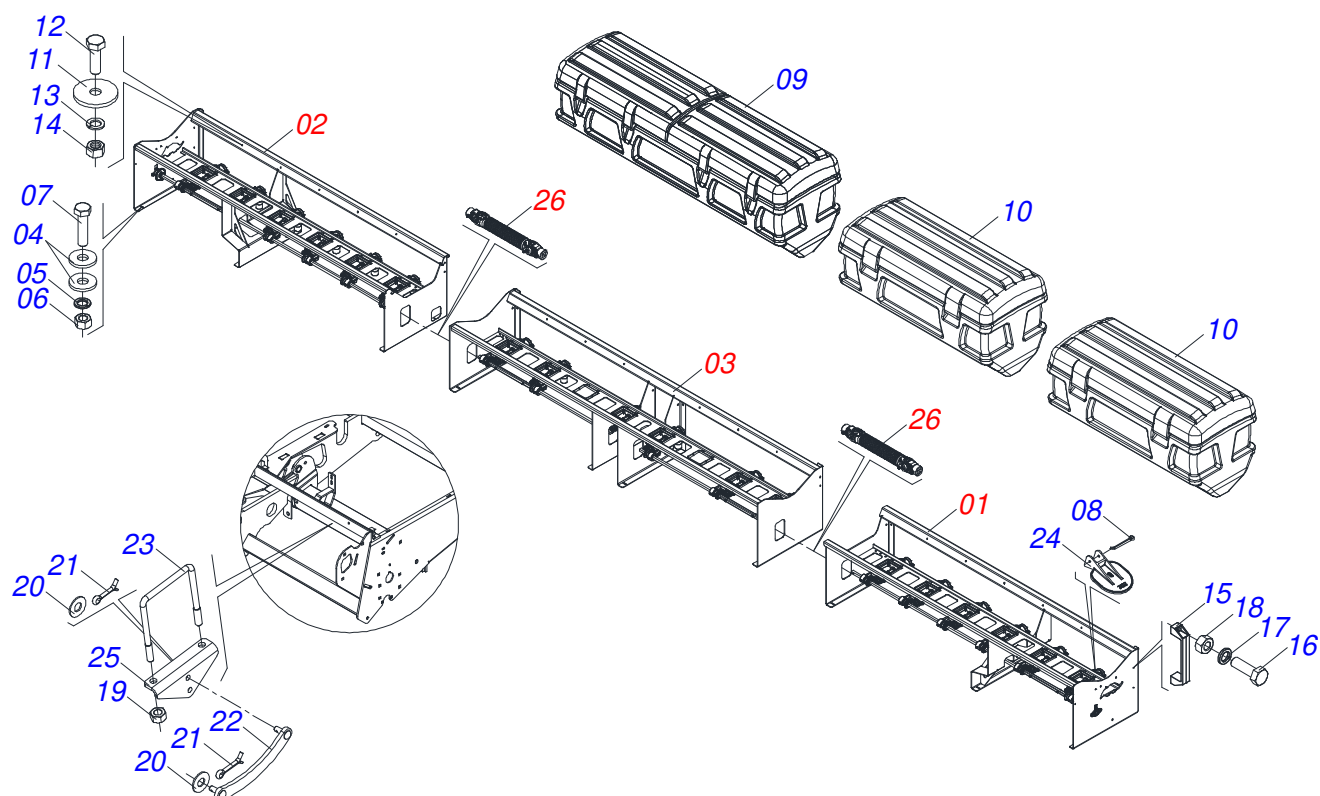


Item	Code	Description	See page	QT
01	0511057285	SILO FERTILIZER LEFT SUPPORT 5850	76	01
02	0511057222	SILO FERTILIZER RIGHT SUPPORT 5850	77	01
03	0511057286	SUPPORT SILO CENTRAL FERTILIZER 5850	78	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		32
05	0503010025	3/8 SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0503010849	3/8" X 1-1/2" BOLT		16
08	0503010362	1/8 X 1.1/4 COTTERPIN		12
09	0503062391	FERTILIZER HOPPER		01
10	0503062362	FERTILIZER HOPPER		02
11	0571019051	FIXER HOPPER WASHER		20
12	0503013751	3/8 UNC X 1.1/4 BOLT		20
13	0503012535	3/8" SPRING WASHER		20
14	0503012531	3/8" INOX NUT		20
15	0503011957	NYLON HANDLE		02
16	0503010371	5/16" X 1" BOLT		04
17	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
18	0503010337	5/16" NUT		04
19	0503011336	1/2" HEX SELF ADJUSTING NUT		04
20	0501013518	FLAT WASHER		04
21	0503010140	1/8" X 3/4" COTTERPIN		04
22	0511069678	LH LOWER LEVER		02
23	0561016468	FASTENER		02
24	0503034396	FERTILIZER SIDE COVER		12
25	0551019159	LEVER FIXER BODY		02
26	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	75	02

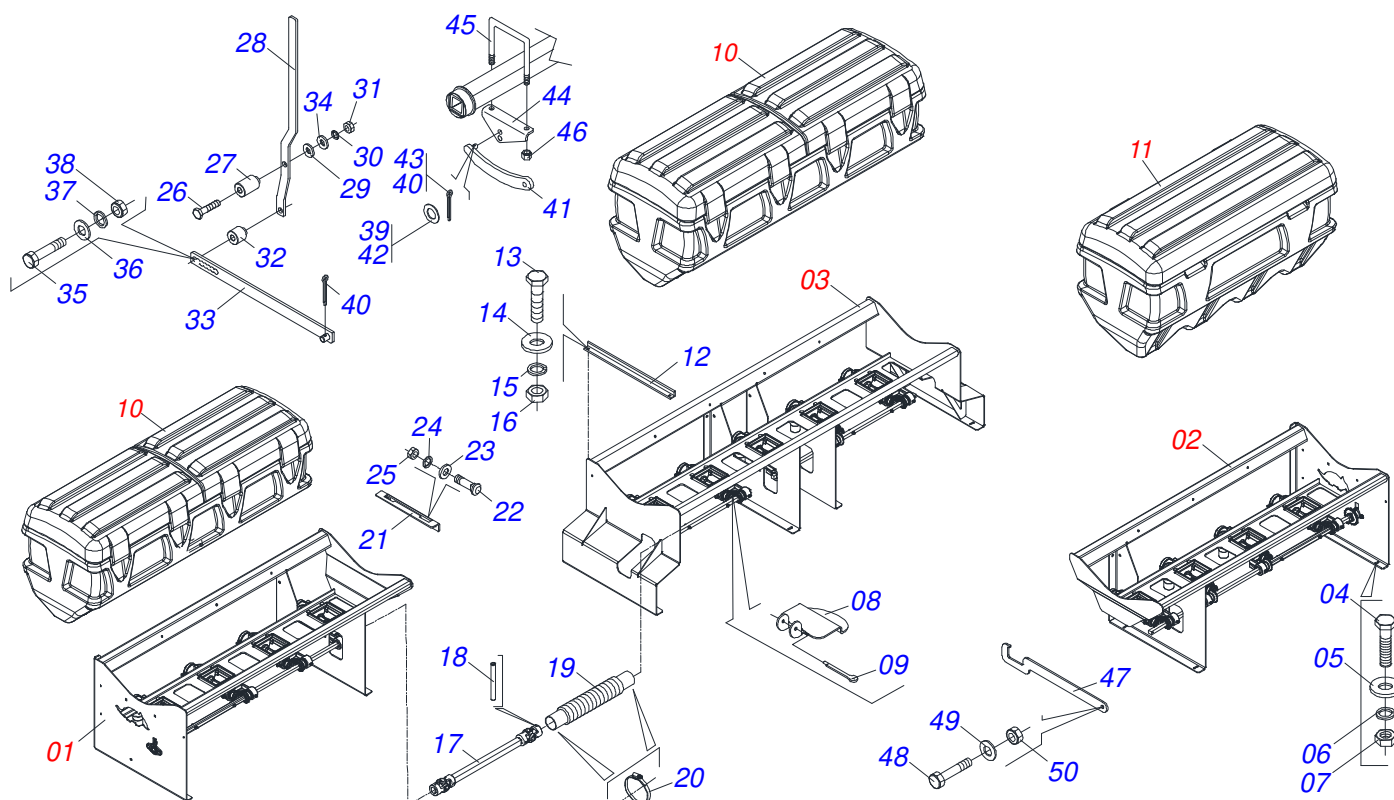


Item	Code	Description	See page	QT
001	0511053051	RIGHT BEAM SUPPORT WITH DISTRIBUTOR		01
002	0511053052	LEFT BEAM SUPPORT WITH DISTRIBUTOR		01
003	0511053053	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01
004	0503010849	3/8" X 1-1/2" BOLT		16
005	0501010984	10,50 X 27 X 3,00 FLAT WASHER		32
006	0503010025	3/8 SPRING WASHER		16
007	0503010026	3/8" NUT		16
008	0503034396	FERTILIZER SIDE COVER		15
009	0503010362	1/8 X 1.1/4 COTTERPIN		15
010	0503061985	FERTILIZER HOPPER WITH 5 TRUNNELS	79	02
011	0503062169	ASSEMBLED FERTILIZER HOPPER	80	01
012	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
013	0503010849	3/8" X 1-1/2" BOLT		12
014	0501010984	10,50 X 27 X 3,00 FLAT WASHER		24
015	0503010025	3/8 SPRING WASHER		12
016	0503010026	3/8" NUT		12
017	0503062562	CARDAN TERMINAL		02
018	0503011855	0.2" X 1.8" SPRING PIN		04
019	0503030331	1.2" X 1.2" X 12.2" HOSE		02
020	0503010243	CLAMP		04
021	0551019156	GEAR BOX LEVER LOCK		02
022	0503011953	5/16" X 1" BOLT		04
023	0501010694	FLAT WASHER		04
024	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
025	0503010337	5/16" NUT		04
026	0503010847	1/2" X 3.1/4" BOLT		02
027	0551019168	SLEEVE		02
028	0551019160	LEVER		02
029	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
030	0503010019	1/2" SPRING WASHER		02
031	0503010060	1/2 UNC G.5 ZN HEX NUT		02

Item	Code	Description	See page	QT
032	0551019167	SLEEVE UNION		02
033	0511069676	INNER LEVER		02
034	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
035	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
036	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
037	0503010019	1/2" SPRING WASHER		02
038	0503010060	1/2 UNC G.5 ZN HEX NUT		02
039	0501013518	FLAT WASHER		02
040	0503010140	1/8" X 3/4" COTTERPIN		02
041	0511069678	LH LOWER LEVER		02
042	0501013518	FLAT WASHER		02
043	0503010140	1/8" X 3/4" COTTERPIN		04
044	0551019159	LEVER FIXER BODY		02
045	0561016468	FASTENER		02
046	0503011336	1/2" HEX SELF ADJUSTING NUT		04
047	0571013471	PLATFORM FIXER LOCK		03
048	0501010096	3/8" X 2" BOLT		03
049	0501010984	10,50 X 27 X 3,00 FLAT WASHER		03
050	0503013357	3/8 SELF-ADJUSTING NUT		03

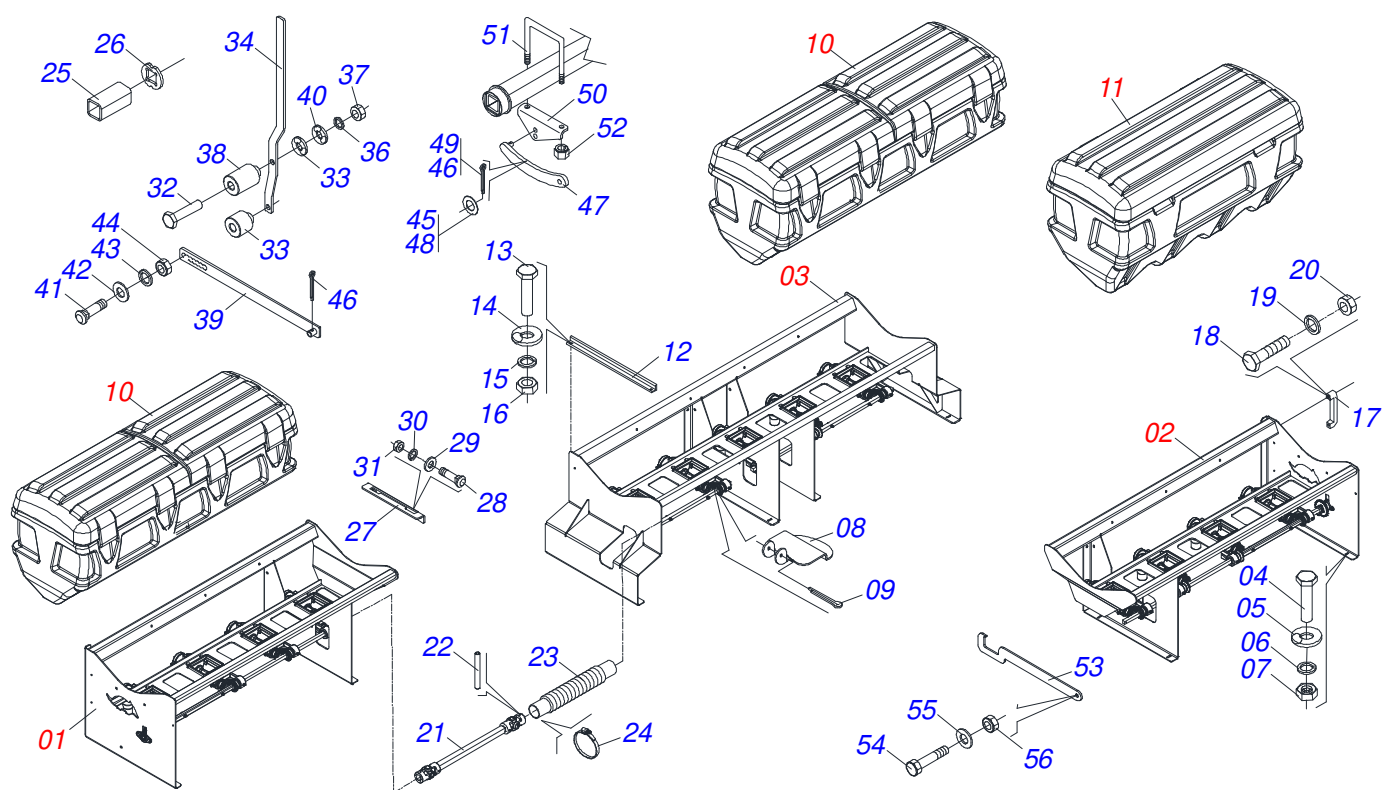


Item	Code	Description	See page	QT
01	0511053191	RIGH BEAM SUPPORT WITH DISTRIBUTOR	81	01
02	0511053192	LEFT BEAM SUPPORT WITH DISTRIBUTOR	82	01
03	0511053193	SUPPORT CENTER BEAM WITH DISTRIBUTOR	83	01
04	0503010849	3/8" X 1-1/2" BOLT		16
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		32
06	0503010025	3/8 SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0503034396	FERTILIZER SIDE COVER		15
09	0503010362	1/8 X 1.1/4 COTTERPIN		15
10	0503061985	FERTILIZER HOPPER WITH 5 TRUNNELS	79	02
11	0503062169	ASSEMBLED FERTILIZER HOPPER	80	01
12	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
13	0503010849	3/8" X 1-1/2" BOLT		12
14	0501010984	10,50 X 27 X 3,00 FLAT WASHER		24
15	0503010025	3/8 SPRING WASHER		12
16	0503010026	3/8" NUT		12
17	0503011957	NYLON HANDLE		02
18	0503010371	5/16" X 1" BOLT		04
19	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
20	0503010337	5/16" NUT		04
21	0503062208	CARDAN TERMINAL		02
22	0503011855	0.2" X 1.8" SPRING PIN		04
23	0503030331	1.2" X 1.2" X 12.2" HOSE		02
24	0503010243	CLAMP		04
25	0551018055	22,65 X 60 SLEEVE		02
26	0521014167	CONE LOCK		02
27	0551019156	GEAR BOX LEVER LOCK		02
28	0503011953	5/16" X 1" BOLT		04
29	0501010694	FLAT WASHER		04
30	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
31	0503010337	5/16" NUT		04

Item	Code	Description	See page	QT
32	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
33	0561016797	SLEEVE UNION LEVER		02
34	0561016800	ARM/DISARMMENT LEVER		02
35	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
36	0503010019	1/2" SPRING WASHER		02
37	0503010060	1/2 UNC G.5 ZN HEX NUT		02
38	0581011541	ARTICULAT SLEEVE		02
39	0511069676	INNER LEVER		02
40	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
41	0503011082	C1/2" X 1.3/4" SCREW		02
42	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
43	0503010019	1/2" SPRING WASHER		02
44	0503010060	1/2 UNC G.5 ZN HEX NUT		02
45	0501013518	FLAT WASHER		02
46	0503010140	1/8" X 3/4" COTTERPIN		02
47	0511069678	LH LOWER LEVER		02
48	0501013518	FLAT WASHER		02
49	0503010140	1/8" X 3/4" COTTERPIN		04
50	0551019159	LEVER FIXER BODY		02
51	0561016468	FASTENER		02
52	0503011336	1/2" HEX SELF ADJUSTING NUT		04
53	0571013471	PLATFORM FIXER LOCK		03
54	0501010096	3/8" X 2" BOLT		03
55	0501010984	10,50 X 27 X 3,00 FLAT WASHER		03
56	0503013357	3/8 SELF-ADJUSTING NUT		03

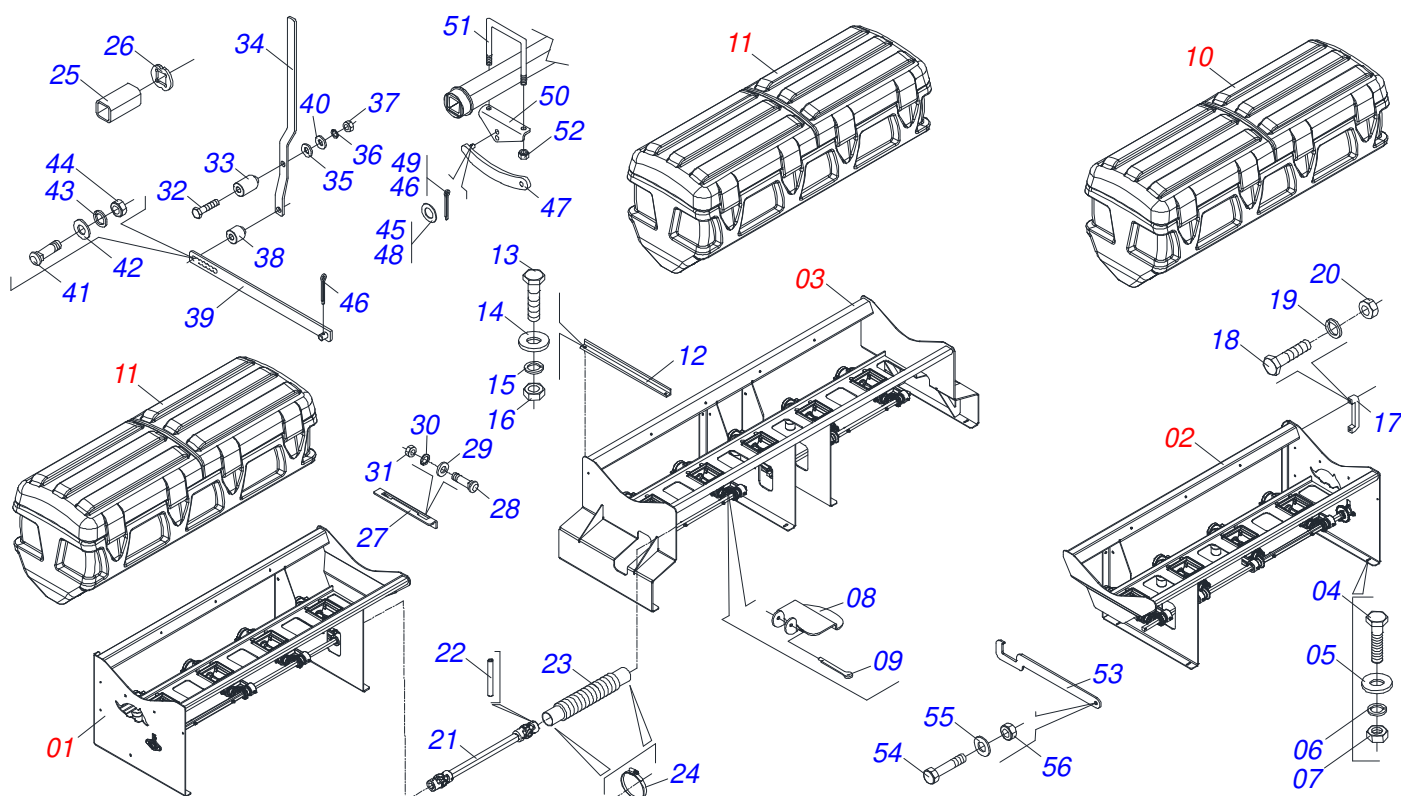


Item	Code	Description	See page	QT
001	0511058950	RH BEAM SUPPORT & METERING		01
002	0511058951	LH BEAM SUPPORT & METERING		01
003	0511058952	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01
004	0503010849	3/8" X 1-1/2" BOLT		20
005	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
006	0503010025	3/8 SPRING WASHER		20
007	0503010026	3/8" NUT		20
008	0503034396	FERTILIZER SIDE COVER		16
009	0503010362	1/8 X 1.1/4 COTTERPIN		16
010	0503061985	FERTILIZER HOPPER WITH 5 TRUNNELS	79	01
011	0503062169	ASSEMBLED FERTILIZER HOPPER	80	02
012	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
013	0503010849	3/8" X 1-1/2" BOLT		12
014	0501010984	10,50 X 27 X 3,00 FLAT WASHER		24
015	0503010025	3/8 SPRING WASHER		12
016	0503010026	3/8" NUT		12
017	0503011957	NYLON HANDLE		02
018	0503010371	5/16" X 1" BOLT		04
019	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
020	0503010337	5/16" NUT		04
021	0503062208	CARDAN TERMINAL		02
022	0503011855	0.2" X 1.8" SPRING PIN		04
023	0503030331	1.2" X 1.2" X 12.2" HOSE		02
024	0503010243	CLAMP		04
025	0551018055	22,65 X 60 SLEEVE		02
026	0521014167	CONE LOCK		02
027	0551019156	GEAR BOX LEVER LOCK		02
028	0503011953	5/16" X 1" BOLT		04
029	0501010694	FLAT WASHER		04
030	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
031	0503010337	5/16" NUT		04

Item	Code	Description	See page	QT
032	0503010847	1/2" X 3.1/4" BOLT		02
033	0551019168	SLEEVE		02
034	0551019160	LEVER		02
035	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
036	0503010019	1/2" SPRING WASHER		02
037	0503010060	1/2 UNC G.5 ZN HEX NUT		02
038	0551019167	SLEEVE UNION		02
039	0511069676	INNER LEVER		02
040	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
041	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
042	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
043	0503010019	1/2" SPRING WASHER		02
044	0503010060	1/2 UNC G.5 ZN HEX NUT		02
045	0501013518	FLAT WASHER		02
046	0503010140	1/8" X 3/4" COTTERPIN		02
047	0511069678	LH LOWER LEVER		02
048	0501013518	FLAT WASHER		02
049	0503010140	1/8" X 3/4" COTTERPIN		04
050	0551019159	LEVER FIXER BODY		02
051	0561016468	FASTENER		02
052	0503011336	1/2" HEX SELF ADJUSTING NUT		04
053	0571015891	PLATFORM FIXER LOCK		03
054	0501010096	3/8" X 2" BOLT		03
055	0501010984	10,50 X 27 X 3,00 FLAT WASHER		03
056	0503013357	3/8 SELF-ADJUSTING NUT		03

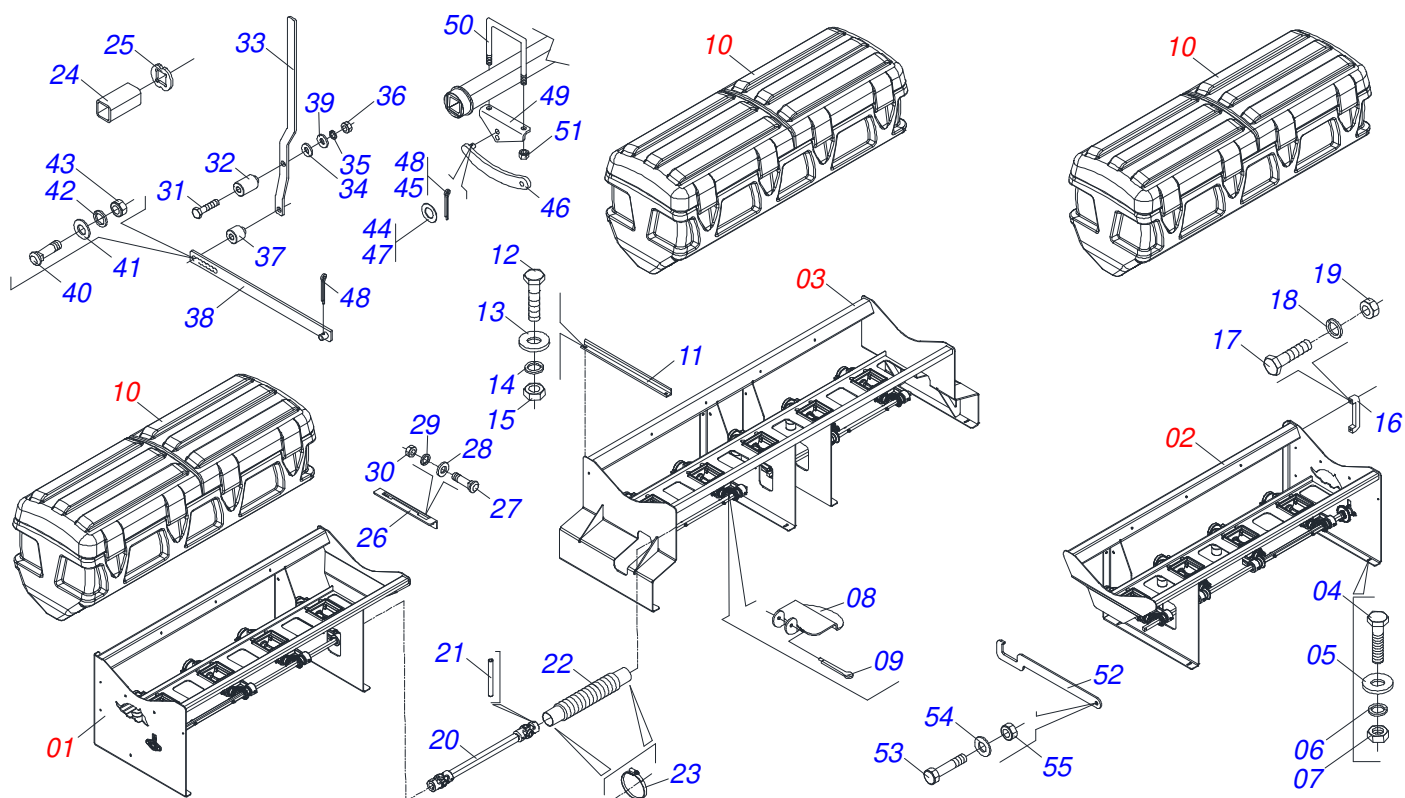


Item	Code	Description	See page	QT
001	0511056159	RH BEAM SUPPORT & METERING		01
002	0511056160	LH BEAM SUPPORT & METERING		01
003	0511056315	BEAM SUPPORT & METERING		01
004	0503010849	3/8" X 1-1/2" BOLT		20
005	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
006	0503010025	3/8 SPRING WASHER		20
007	0503010026	3/8" NUT		20
008	0503034396	FERTILIZER SIDE COVER		17
009	0503010362	1/8 X 1.1/4 COTTERPIN		17
010	0503062169	ASSEMBLED FERTILIZER HOPPER	80	03
011	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
012	0503010849	3/8" X 1-1/2" BOLT		12
013	0501010984	10,50 X 27 X 3,00 FLAT WASHER		24
014	0503010025	3/8 SPRING WASHER		12
015	0503010026	3/8" NUT		12
016	0503011957	NYLON HANDLE		02
017	0503010371	5/16" X 1" BOLT		04
018	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
019	0503010337	5/16" NUT		04
020	0503062208	CARDAN TERMINAL		02
021	0503011855	0.2" X 1.8" SPRING PIN		04
022	0503030331	1.2" X 1.2" X 12.2" HOSE		02
023	0503010243	CLAMP		04
024	0551018055	22,65 X 60 SLEEVE		02
025	0521014167	CONE LOCK		02
026	0551019156	GEAR BOX LEVER LOCK		02
027	0503011953	5/16" X 1" BOLT		04
028	0501010694	FLAT WASHER		04
029	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
030	0503010337	5/16" NUT		04
031	0503010847	1/2" X 3.1/4" BOLT		02

Item	Code	Description	See page	QT
032	0551019168	SLEEVE		02
033	0551019160	LEVER		02
034	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
035	0503010019	1/2" SPRING WASHER		02
036	0503010060	1/2 UNC G.5 ZN HEX NUT		02
037	0551019167	SLEEVE UNION		02
038	0511069676	INNER LEVER		02
039	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
040	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
041	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
042	0503010019	1/2" SPRING WASHER		02
043	0503010060	1/2 UNC G.5 ZN HEX NUT		02
044	0501013518	FLAT WASHER		02
045	0503010140	1/8" X 3/4" COTTERPIN		02
046	0511069678	LH LOWER LEVER		02
047	0501013518	FLAT WASHER		02
048	0503010140	1/8" X 3/4" COTTERPIN		04
049	0551019159	LEVER FIXER BODY		02
050	0561016468	FASTENER		02
051	0503011336	1/2" HEX SELF ADJUSTING NUT		04
052	0571013471	PLATFORM FIXER LOCK		03
053	0501010096	3/8" X 2" BOLT		03
054	0501010984	10,50 X 27 X 3,00 FLAT WASHER		03
055	0503013357	3/8 SELF-ADJUSTING NUT		03

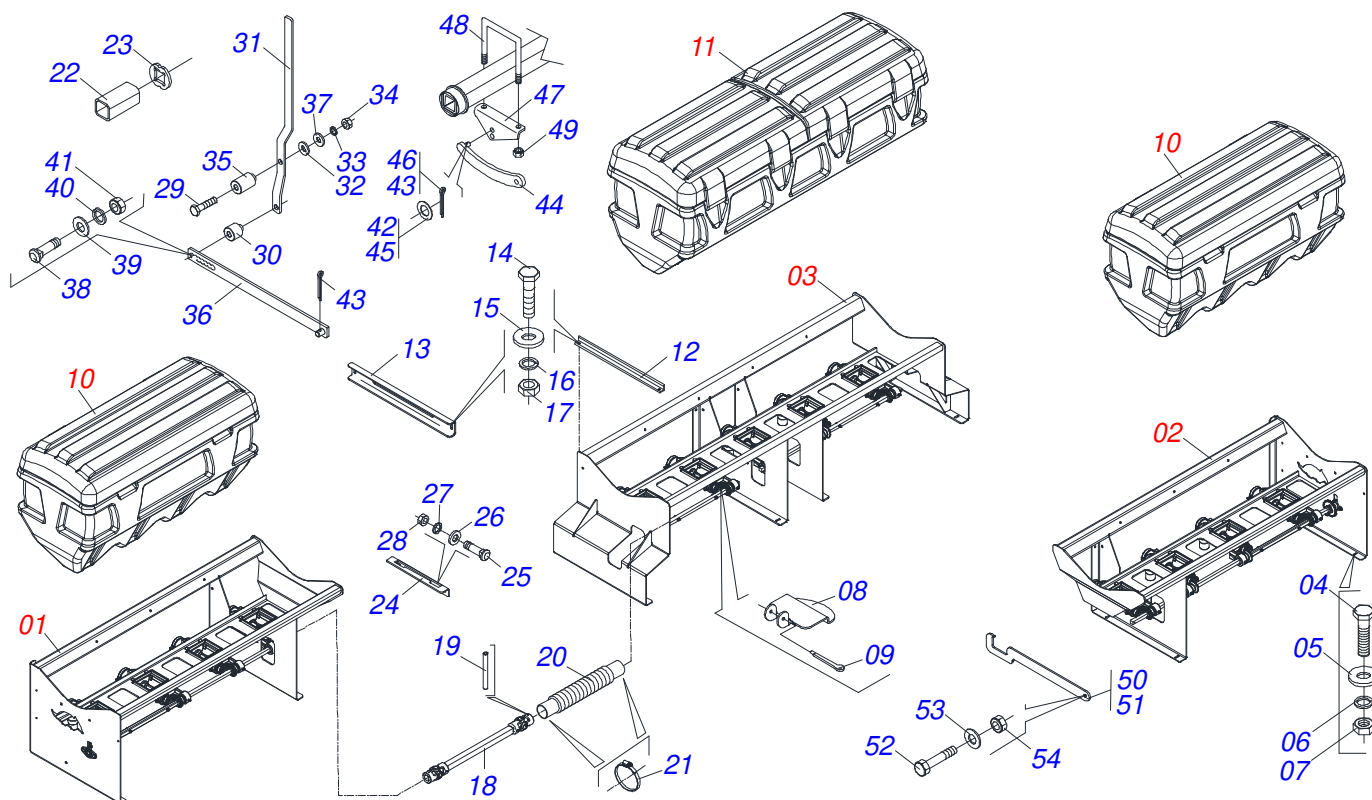


Item	Code	Description	See page	QT
001	0511056159	RH BEAM SUPPORT & METERING		01
002	0511056160	LH BEAM SUPPORT & METERING		01
003	0511055267	SUPPORT CENTER BEAM WITH DISTRIBUTOR		01
004	0503010849	3/8" X 1-1/2" BOLT		20
005	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
006	0503010025	3/8 SPRING WASHER		20
007	0503010026	3/8" NUT		20
008	0503034396	FERTILIZER SIDE COVER		19
009	0503010362	1/8 X 1.1/4 COTTERPIN		19
010	0503061984	FERTILIZER HOPPER WITH 4 TRUNNELS	84	02
011	0503062169	ASSEMBLED FERTILIZER HOPPER	80	02
012	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		06
013	0571015546	FERTILIZER HOPPER FIXER		01
014	0503010849	3/8" X 1-1/2" BOLT		14
015	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
016	0503010025	3/8 SPRING WASHER		14
017	0503010026	3/8" NUT		14
018	0503062208	CARDAN TERMINAL		02
019	0503011855	0.2" X 1.8" SPRING PIN		04
020	0503030331	1.2" X 1.2" X 12.2" HOSE		02
021	0503010243	CLAMP		04
022	0551018055	22,65 X 60 SLEEVE		02
023	0521014167	CONE LOCK		02
024	0551019156	GEAR BOX LEVER LOCK		02
025	0503011953	5/16" X 1" BOLT		04
026	0501010694	FLAT WASHER		04
027	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
028	0503010337	5/16" NUT		04
029	0503010847	1/2" X 3.1/4" BOLT		02
030	0551019168	SLEEVE		02
031	0551019160	LEVER		02


Item	Code	Description	See page	QT
032	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
033	0503010019	1/2" SPRING WASHER		02
034	0503010060	1/2 UNC G.5 ZN HEX NUT		02
035	0551019167	SLEEVE UNION		02
036	0511069676	INNER LEVER		02
037	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
038	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
039	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
040	0503010019	1/2" SPRING WASHER		02
041	0503010060	1/2 UNC G.5 ZN HEX NUT		02
042	0501013518	FLAT WASHER		02
043	0503010140	1/8" X 3/4" COTTERPIN		02
044	0511069678	LH LOWER LEVER		02
045	0501013518	FLAT WASHER		02
046	0503010140	1/8" X 3/4" COTTERPIN		04
047	0551019159	LEVER FIXER BODY		02
048	0561016468	FASTENER		02
049	0503011336	1/2" HEX SELF ADJUSTING NUT		04
050	0571013471	PLATFORM FIXER LOCK		02
051	0571015891	PLATFORM FIXER LOCK		01
052	0501010096	3/8" X 2" BOLT		03
053	0501010984	10,50 X 27 X 3,00 FLAT WASHER		03
054	0503013357	3/8 SELF-ADJUSTING NUT		03

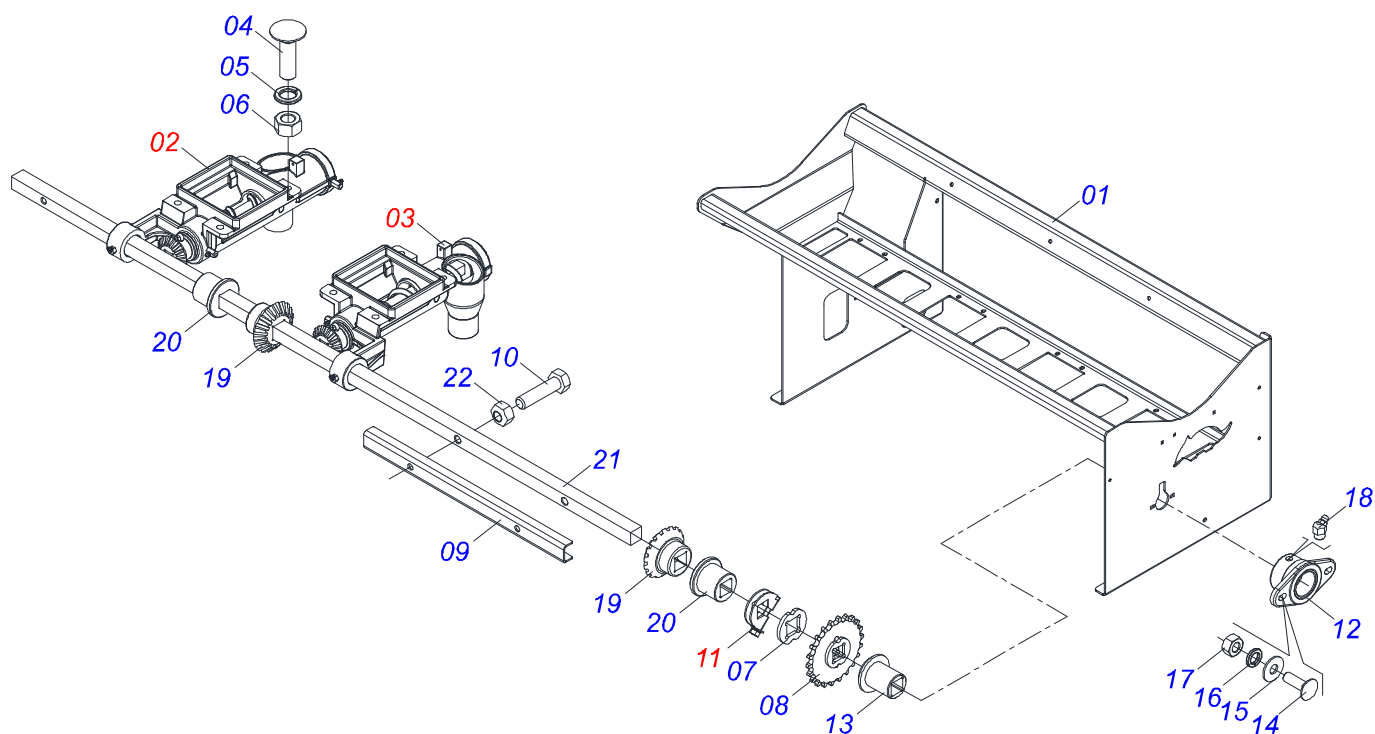


Item	Code	Description	See page	QT
01	0521066915	FERTILIZER BEAN LEFT SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	85	02
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	86	02
04	0501010942	3/8" X 1-1/4" BOLT		16
05	0503011443	3/8" SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
11	0501053788	3/4" SQUARE AXLE FASTENER	87	01
12	0501110392	HOPPER SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0521011039	FLAT WASHER		02
16	0503011444	SPRING WASHER		02
17	0503010337	5/16" NUT		02
18	0503010003	1845 GREASE FITTING		01
19	1902010685	18Z CONICAL GEAR		04
20	0503030275	AGRICULTURAL BEARING		04
21	0581011606	SQUARE SHAFT		01
22	0503013816	5/16" LOCKNUT		02

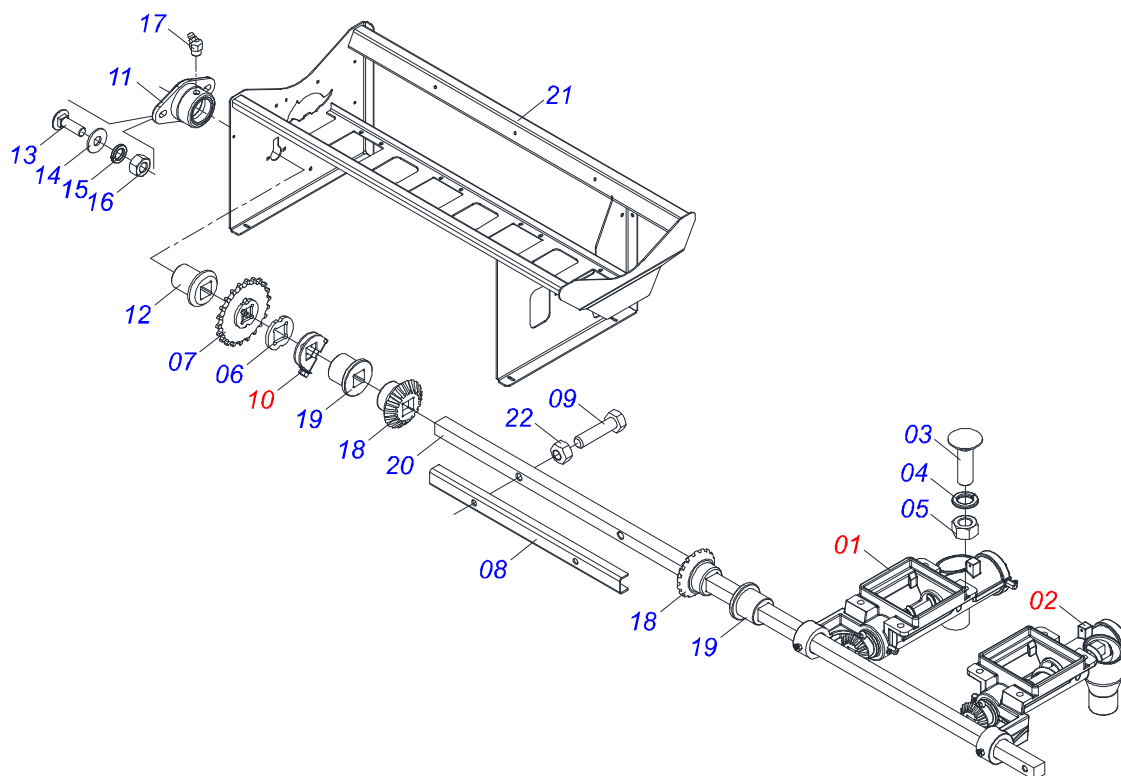


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	85	02
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	86	02
03	0501010942	3/8" X 1-1/4" BOLT		16
04	0503011443	3/8" SPRING WASHER		16
05	0503010026	3/8" NUT		16
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
10	0501053788	3/4" SQUARE AXLE FASTENER	87	01
11	0501110392	HOPPER SUPPORT BEARING		01
12	0521012485	GEAR BOX BEARING AGRICUTURAL		01
13	0503011953	5/16" X 1" BOLT		02
14	0521011039	FLAT WASHER		02
15	0503011444	SPRING WASHER		02
16	0503010337	5/16" NUT		02
17	0503010003	1845 GREASE FITTING		01
18	1902010685	18Z CONICAL GEAR		04
19	0503030275	AGRICULTURAL BEARING		04
20	0581011606	SQUARE SHAFT		01
21	0521066914	FERTILIZER BEAN RIGHT SUPPORT		01
22	0503013816	5/16" LOCKNUT		02

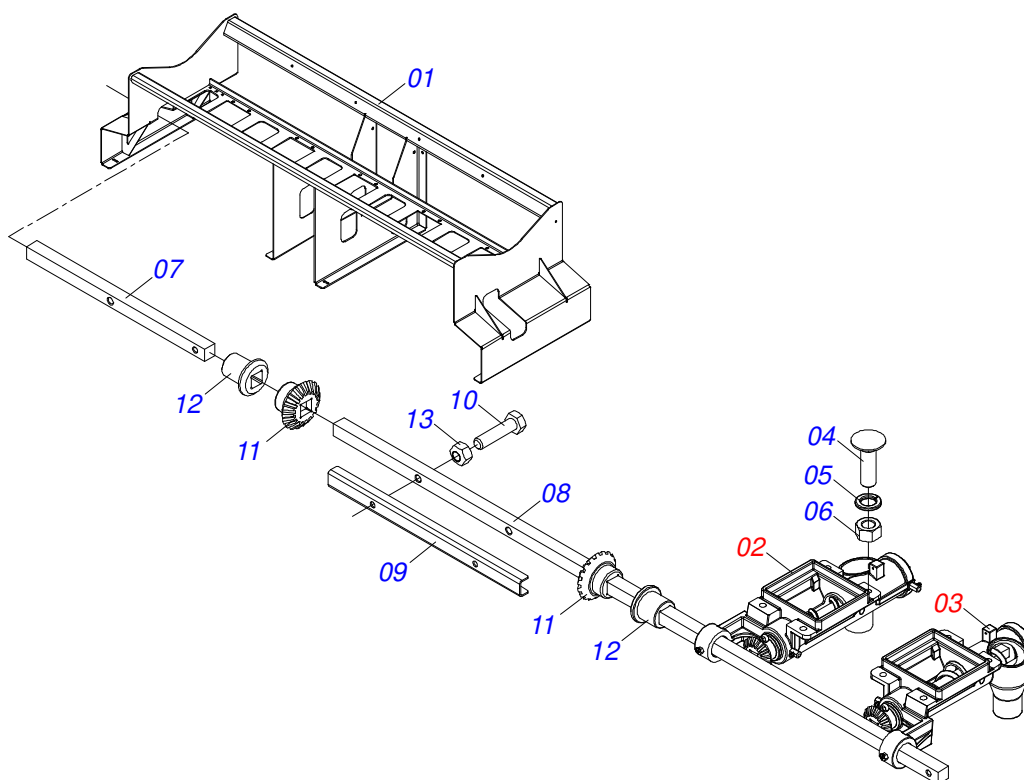


Item	Code	Description	See page	QT
01	0521066913	CENTRAL FERTILIZER HOPPER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	85	03
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	86	02
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0581010471	SQUARE SHAFT		01
08	0581010470	SQUARE SHAFT		01
09	0571019828	LOCK AXLE		02
10	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
11	1902010685	18Z CONICAL GEAR		05
12	0503030275	AGRICULTURAL BEARING		05
13	0503013816	5/16" LOCKNUT		04

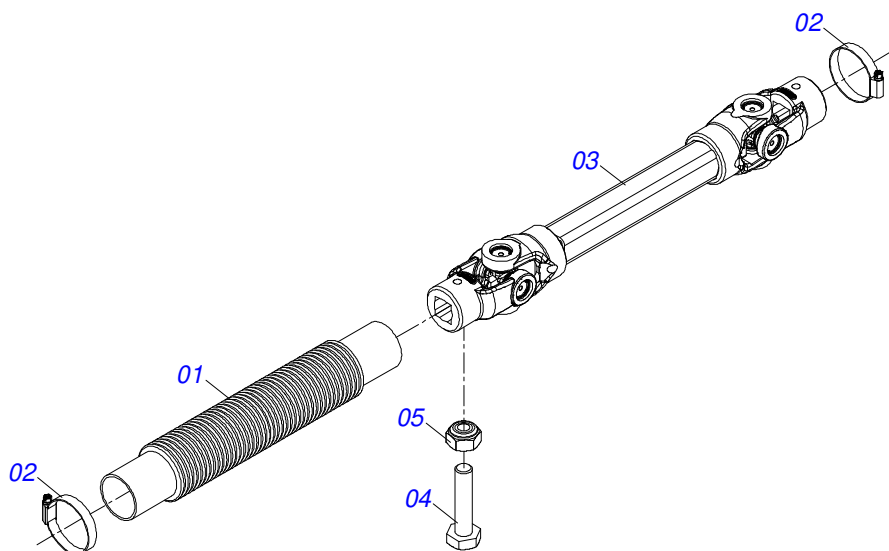


Item	Code	Description	See page	QT
01	0503030331	1.2" X 1.2" X 12.2" HOSE		01
02	0503010243	CLAMP		02
03	0503062755	TRANSMISSION AXLE		01
04	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
05	0503012880	1/4" UNC SELF ADJUSTING NUT		02

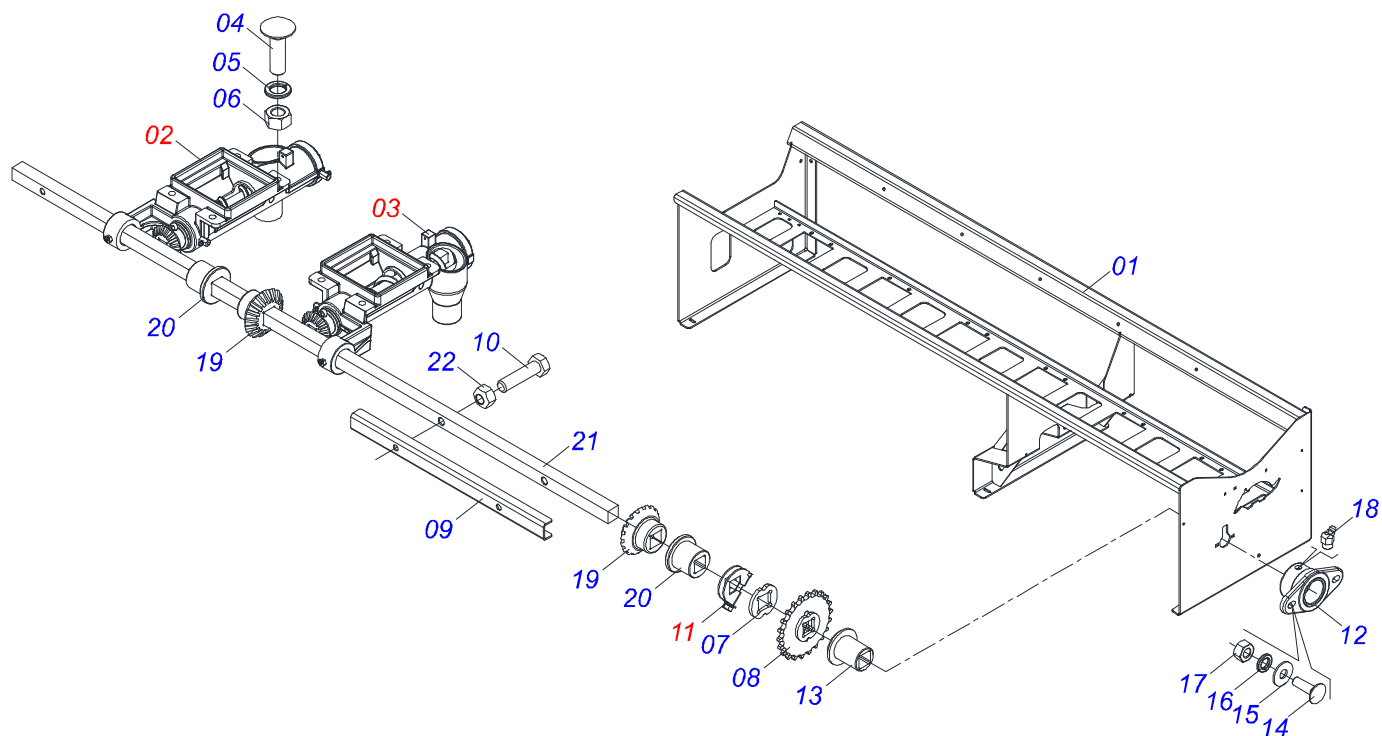


Item	Code	Description	See page	QT
01	0521067149	12 E 500 LH SILO FERTILIZER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	85	02
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	86	02
04	0501010942	3/8" X 1-1/4" BOLT		16
05	0503011443	3/8" SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
11	0501053788	3/4" SQUARE AXLE FASTENER	87	01
12	0501110392	HOPPER SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0521011039	FLAT WASHER		02
16	0503011444	SPRING WASHER		02
17	0503010337	5/16" NUT		02
18	0503010003	1845 GREASE FITTING		01
19	1902010685	18Z CONICAL GEAR		04
20	0503030275	AGRICULTURAL BEARING		04
21	0581012758	SQUARE AXLE 3/4 X 1525		01
22	0503013816	5/16" LOCKNUT		02

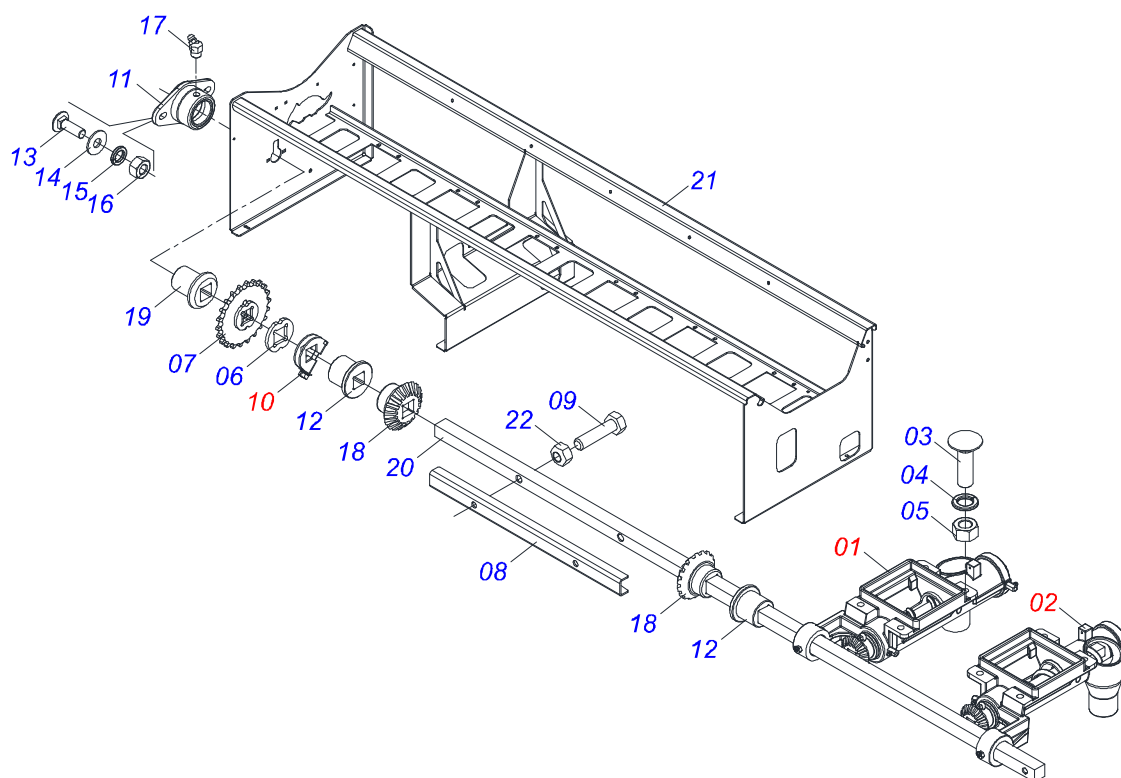


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	85	02
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	86	02
03	0501010942	3/8" X 1-1/4" BOLT		16
04	0503011443	3/8" SPRING WASHER		16
05	0503010026	3/8" NUT		16
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
10	0501053788	3/4" SQUARE AXLE FASTENER	87	01
11	0501110392	HOPPER SUPPORT BEARING		01
12	0503030275	AGRICULTURAL BEARING		04
13	0503011953	5/16" X 1" BOLT		02
14	0521011039	FLAT WASHER		02
15	0503011444	SPRING WASHER		02
16	0503010337	5/16" NUT		02
17	0503010003	1845 GREASE FITTING		01
18	1902010685	18Z CONICAL GEAR		04
19	0521012485	GEAR BOX BEARING AGRICUTURAL		01
20	0581012758	SQUARE AXLE 3/4 X 1525		01
21	0521067148	RH FERTILIZER BOX SUPPORT PST TRIO/FLEX 12 E500		01
22	0503013816	5/16" LOCKNUT		02

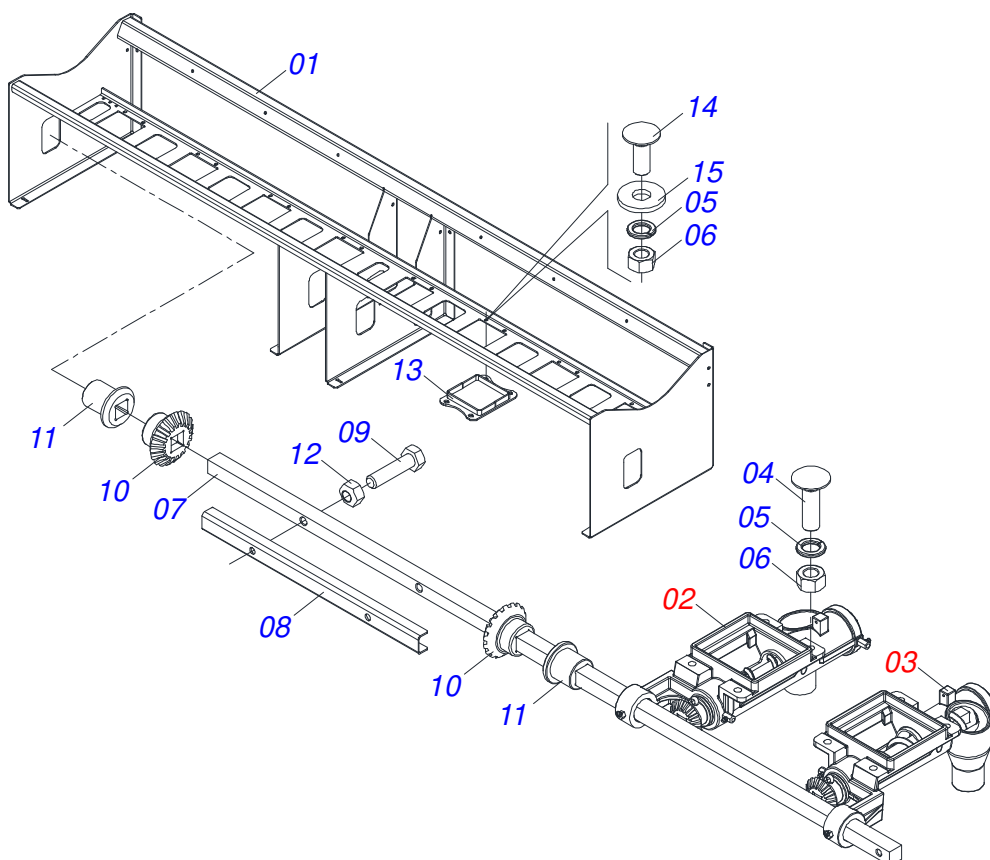


Item	Code	Description	See page	QT
01	0521066981	CENTRAL FERTILIZER HOPPER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	85	02
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	86	02
04	0501010942	3/8" X 1-1/4" BOLT		16
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0581012775	3/4" X 690 SQUARE SHAFT		02
08	0571019828	LOCK AXLE		02
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
10	1902010685	18Z CONICAL GEAR		04
11	0503030275	AGRICULTURAL BEARING		04
12	0503013816	5/16" LOCKNUT		04
13	0511062163	FERTILIZER BEAM LOWER COVER		01
14	0501011643	3/8 X 1" BOLT		04
15	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04

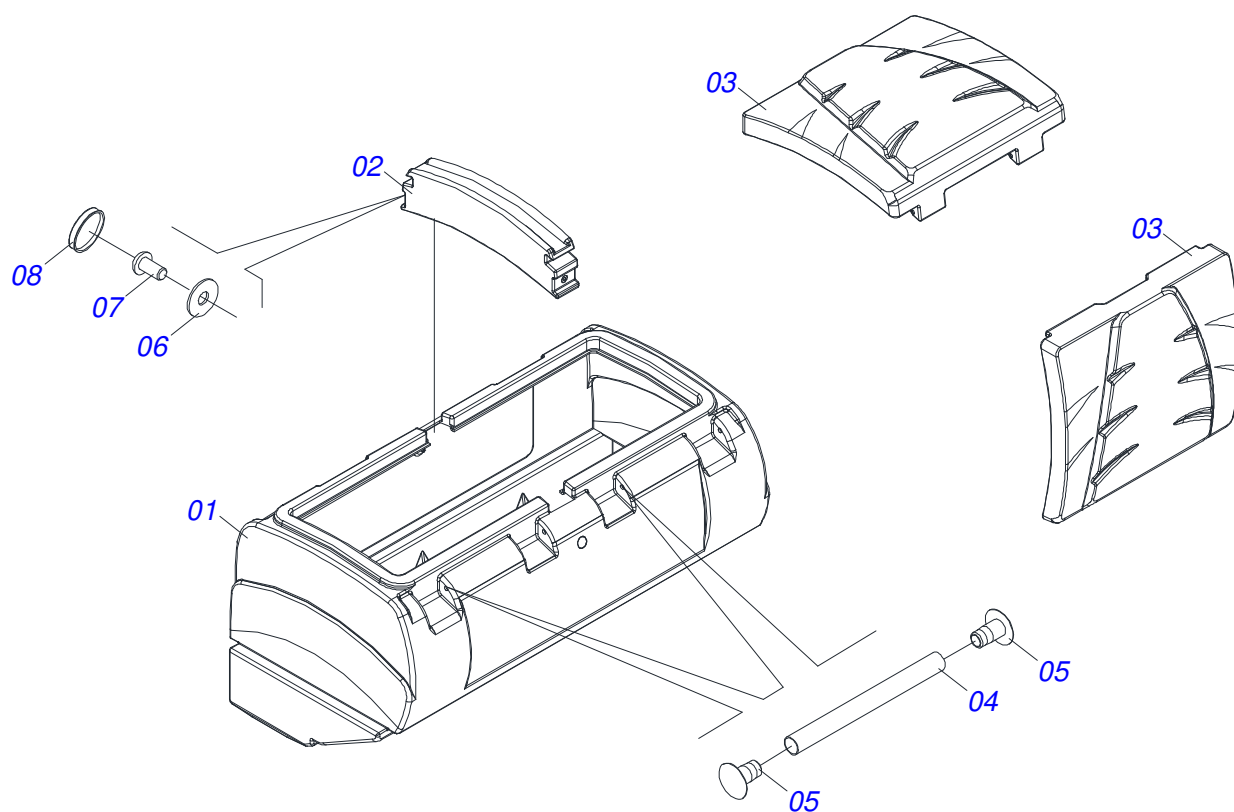


Item	Code	Description	See page	QT
01	0503033577	BEAN FERTILIZ 5 MOUTHS		01
02	0503033578	FERTILIZER BEAM LOCK		01
03	0503032136	FERTILIZER BEAM COVER		02
04	0503032052	LID ARTICULATING SHAFT		04
05	0503032051	LID SHAFT FIXER		08
06	0503032054	FLAT WASHER (INOX)		02
07	0503032053	BOLT C.A.S.I		02
08	0503032055	BOLT LID		02

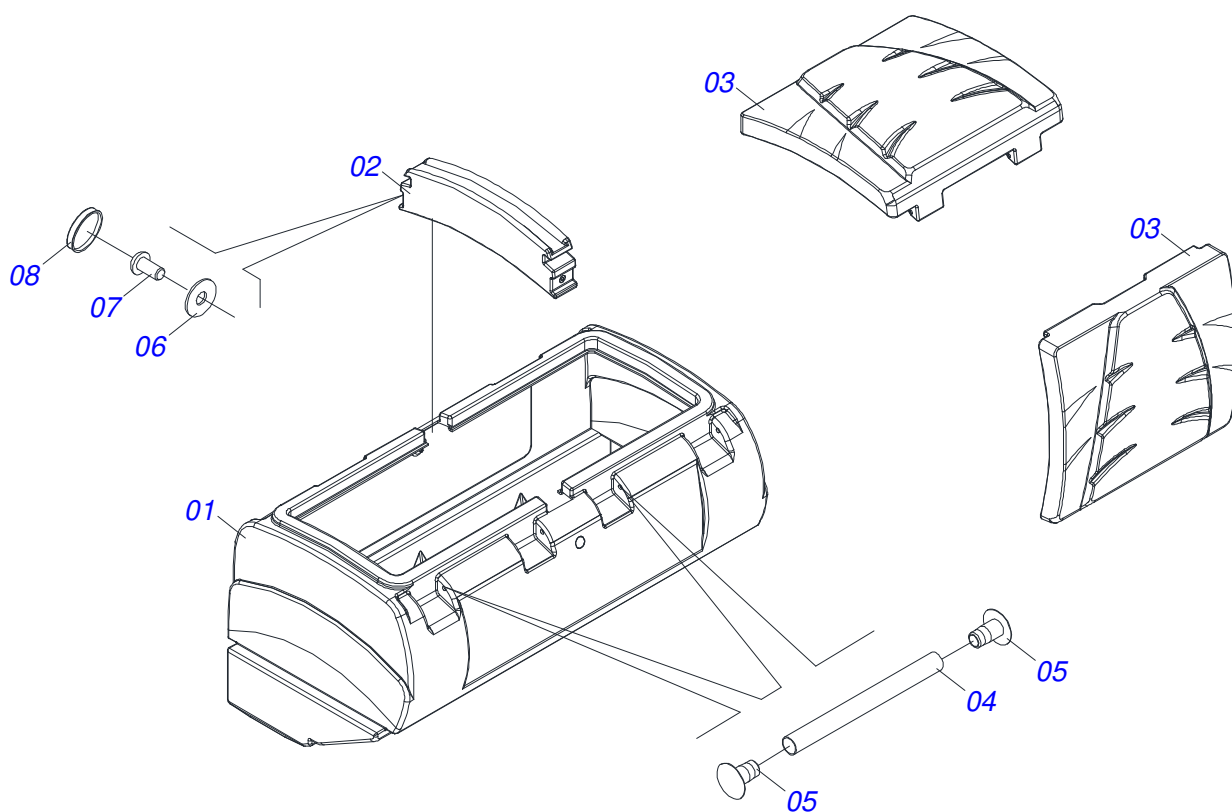


Item	Code	Description	See page	QT
01	0503033801	BEAM FERTILIZER		01
02	0503033578	FERTILIZER BEAM LOCK		02
03	0503032134	FERTILIZER HOPPER LID		03
04	0503032052	LID ARTICULATING SHAFT		06
05	0503032051	LID SHAFT FIXER		12
06	0503032054	FLAT WASHER (INOX)		04
07	0503032053	BOLT C.A.S.I		04
08	0503032055	BOLT LID		04

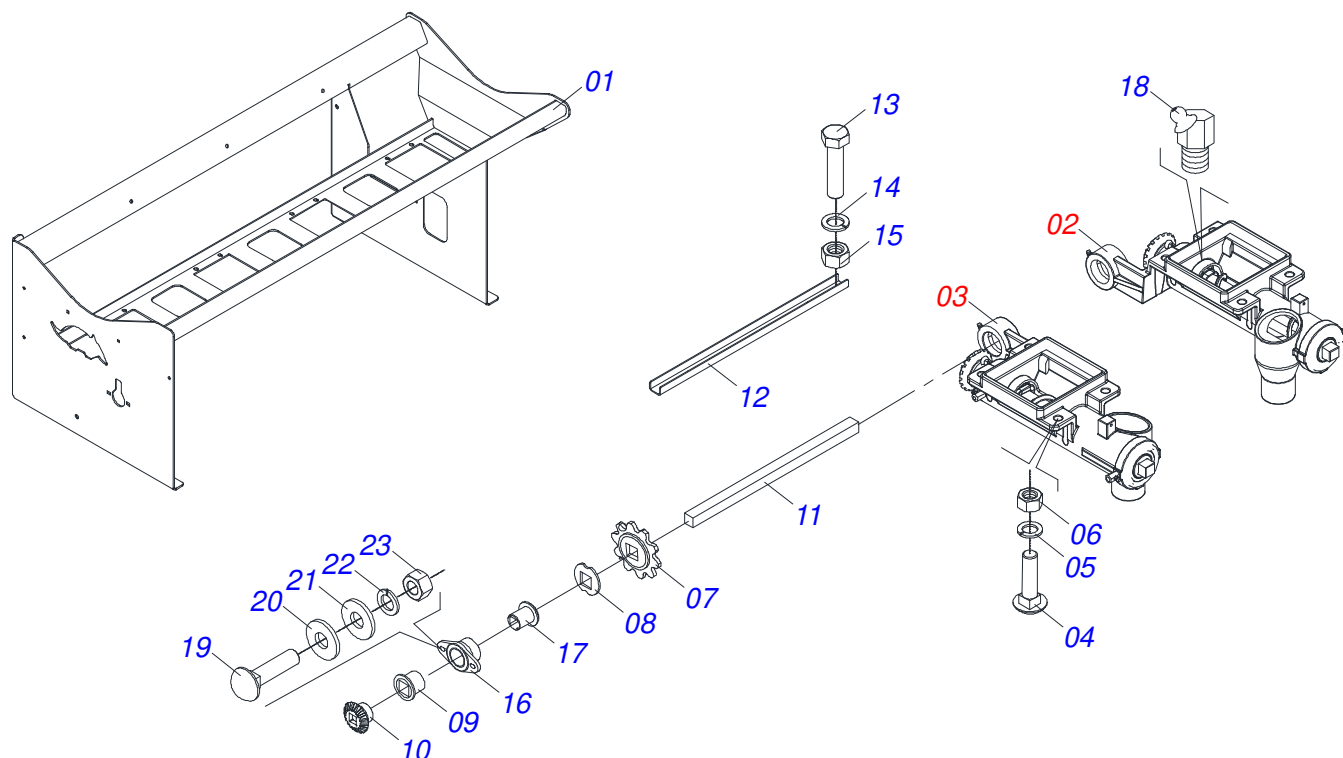


Item	Code	Description	See page	QT
01	0521066219	FERTILIZER BEAN RIGHT SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	86	01
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	85	04
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0521014167	CONE LOCK		01
09	0503030275	AGRICULTURAL BEARING		05
10	0502012990	CONICA 14Z SQUARE GEAR		05
11	0571019663	SQUARE SHAFT		01
12	0571015966	LOCK AXLE		01
13	0503010421	5/16" X 1-1/2" BOLT		02
14	0503011444	SPRING WASHER		02
15	0503010337	5/16" NUT		02
16	0501110392	HOPPER SUPPORT BEARING		01
17	0521012485	GEAR BOX BEARING AGRICUTURAL		01
18	0503010003	1845 GREASE FITTING		01
19	0503011953	5/16" X 1" BOLT		02
20	0501010694	FLAT WASHER		02
21	0521011039	FLAT WASHER		02
22	0503011444	SPRING WASHER		02
23	0503010337	5/16" NUT		02

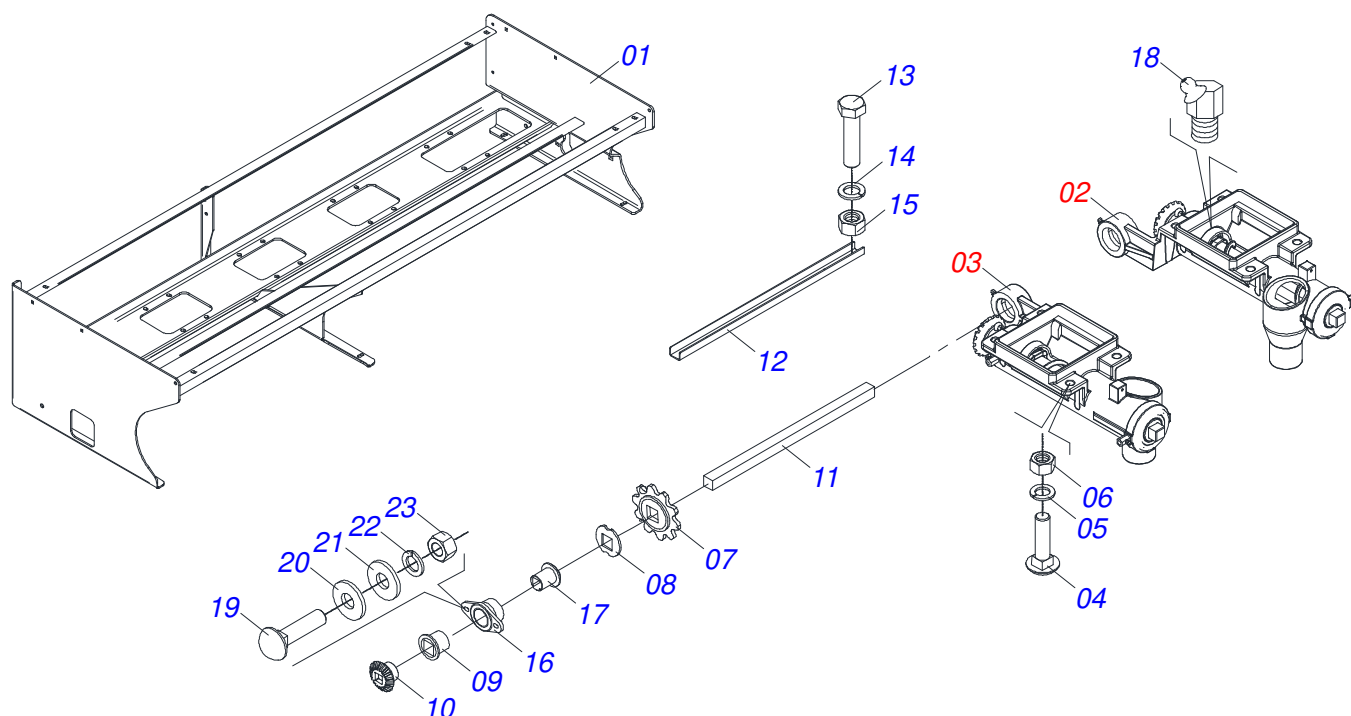


Item	Code	Description	See page	QT
01	0521066220	FERTILIZER BEAN LEFT SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	86	04
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	85	01
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0521014167	CONE LOCK		01
09	0503030275	AGRICULTURAL BEARING		05
10	0502012990	CONICA 14Z SQUARE GEAR		05
11	0571019663	SQUARE SHAFT		01
12	0571015966	LOCK AXLE		01
13	0503010421	5/16" X 1-1/2" BOLT		02
14	0503011444	SPRING WASHER		02
15	0503010337	5/16" NUT		02
16	0501110392	HOPPER SUPPORT BEARING		01
17	0521012485	GEAR BOX BEARING AGRICUTURAL		01
18	0503010003	1845 GREASE FITTING		01
19	0503011953	5/16" X 1" BOLT		02
20	0501010694	FLAT WASHER		02
21	0521011039	FLAT WASHER		02
22	0503011444	SPRING WASHER		02
23	0503010337	5/16" NUT		02

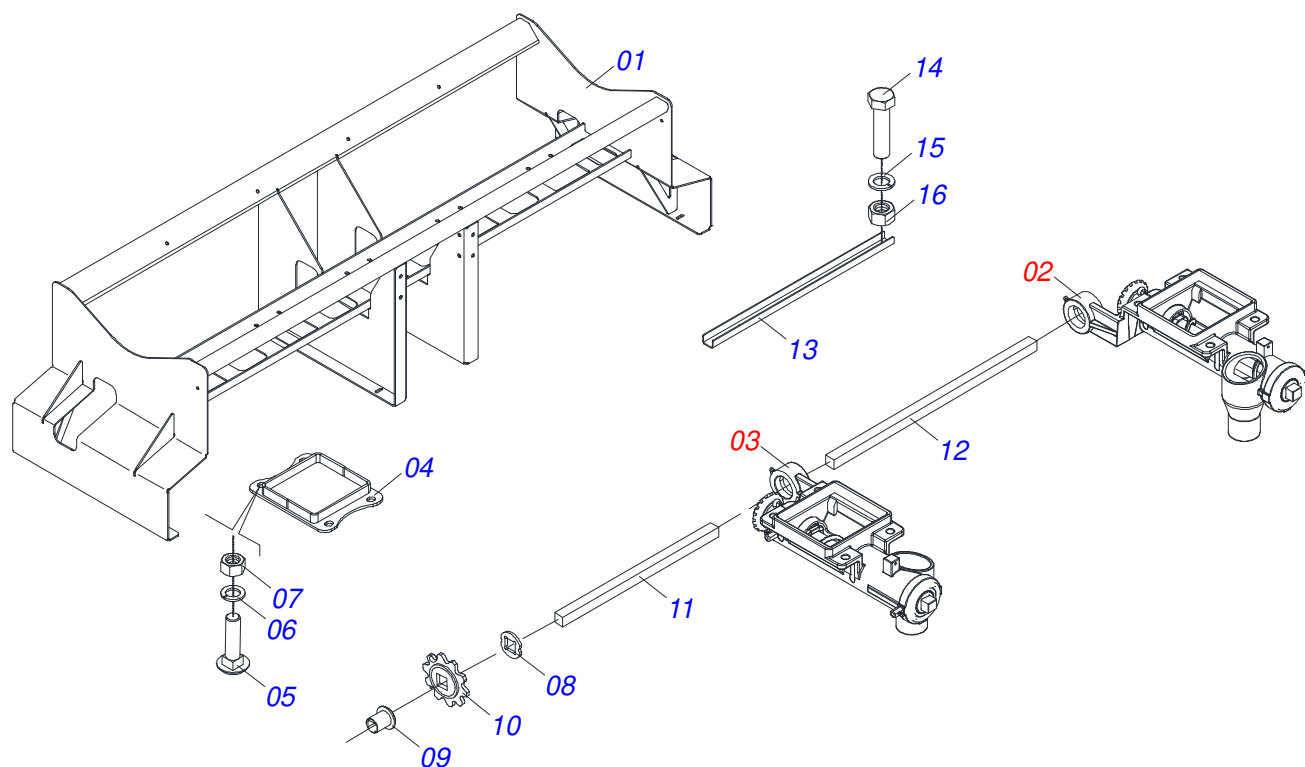


Item	Code	Description	See page	QT
01	0521065393	CENTER FERTILIZER BEAM SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	86	03
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	85	02
04	0511062163	FERTILIZER BEAM LOWER COVER		01
05	0501010942	3/8" X 1-1/4" BOLT		24
06	0503011443	3/8" SPRING WASHER		24
07	0503010026	3/8" NUT		24
08	0521014167	CONE LOCK		04
09	0503030275	AGRICULTURAL BEARING		05
10	0502012990	CONICA 14Z SQUARE GEAR		05
11	0581010699	SQUARE SHAFT		01
12	0581010700	SQUARE SHAFT		01
13	0571015966	LOCK AXLE		02
14	0503010421	5/16" X 1-1/2" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

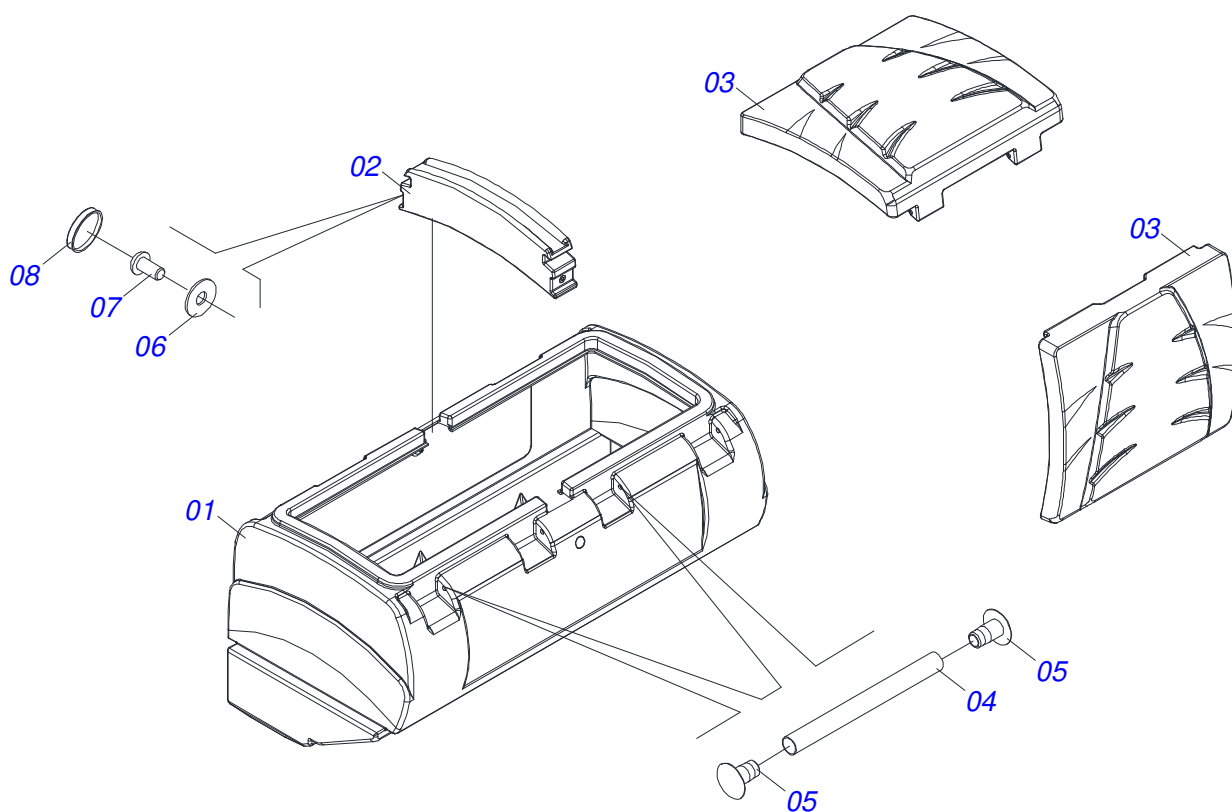


Item	Code	Description	See page	QT
01	0503033576	FERTILIZER HOPPER		01
02	0503033578	FERTILIZER BEAM LOCK		01
03	0503032134	FERTILIZER HOPPER LID		02
04	0503032052	LID ARTICULATING SHAFT		04
05	0503032051	LID SHAFT FIXER		08
06	0503032054	FLAT WASHER (INOX)		02
07	0503032053	BOLT C.A.S.I		02
08	0503032055	BOLT LID		02

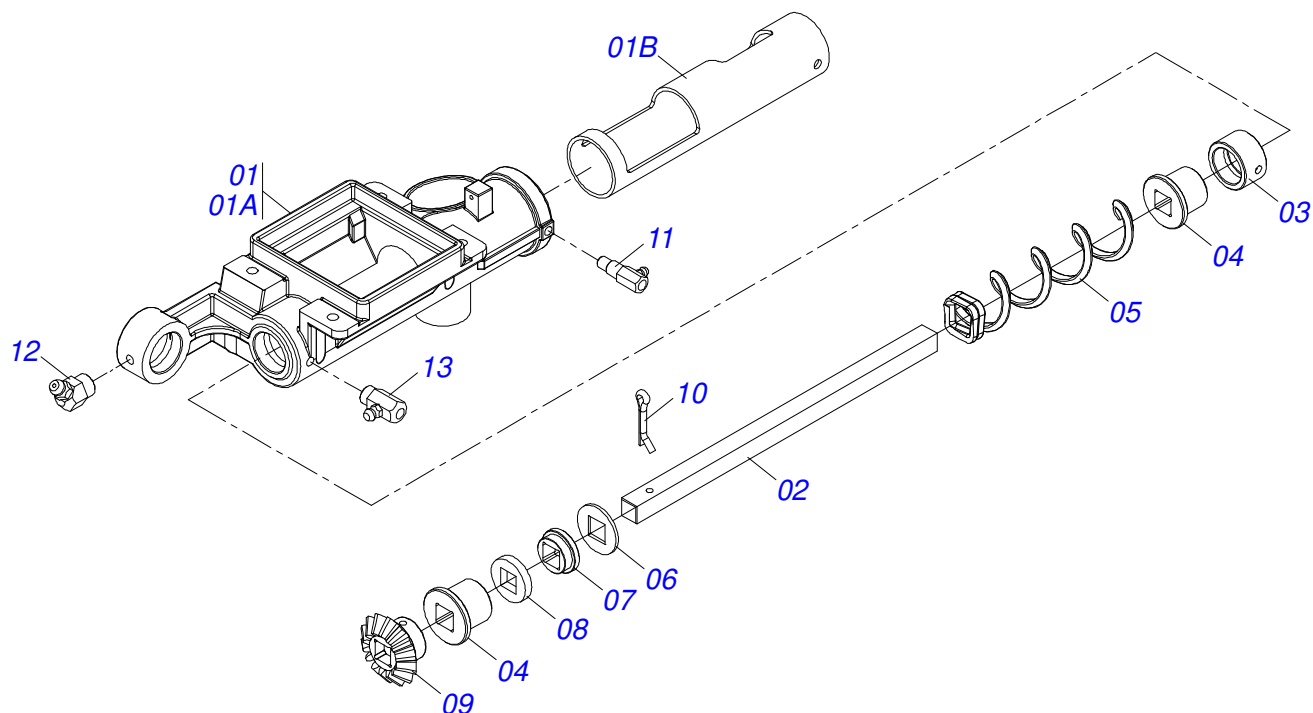


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" SPLIT PIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

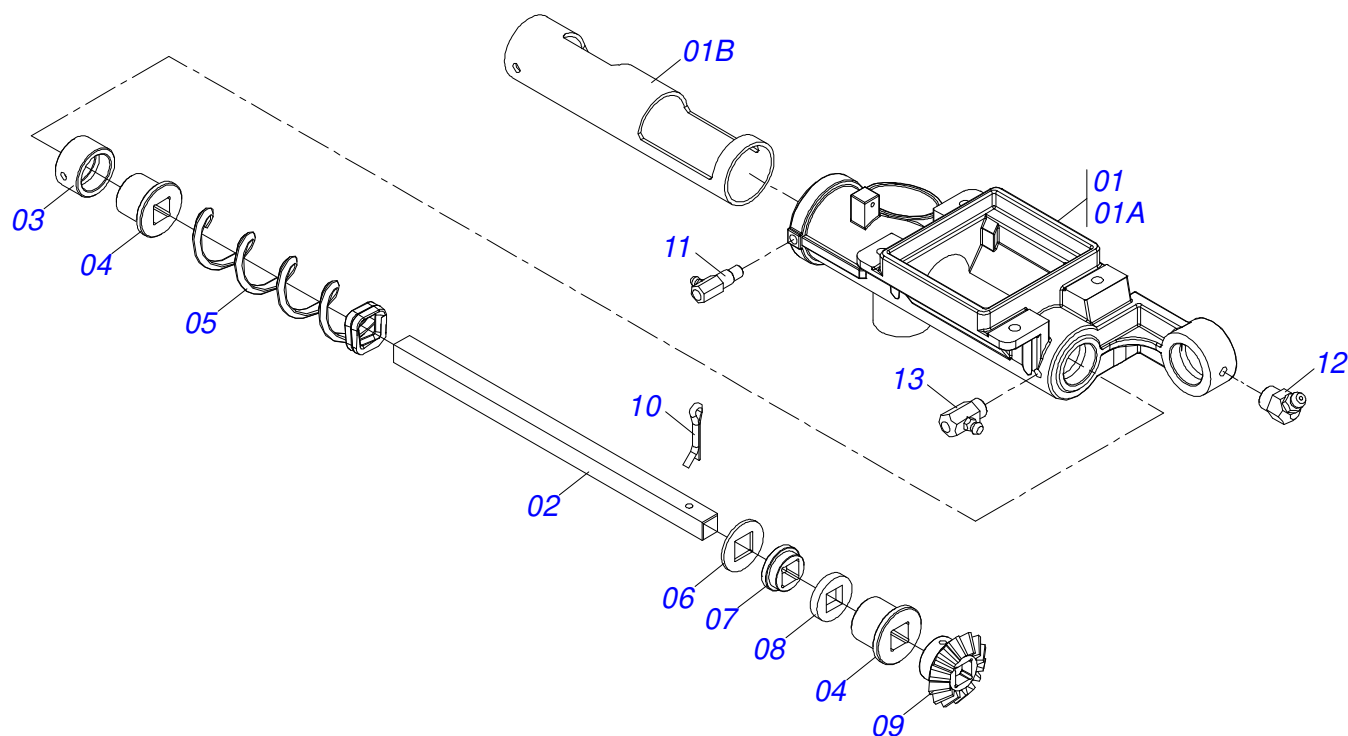


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" SPLIT PIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

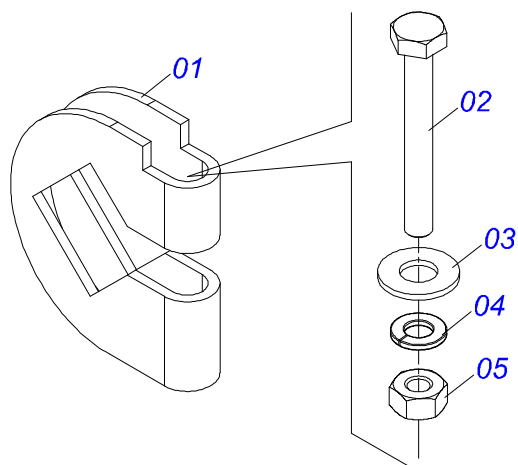


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

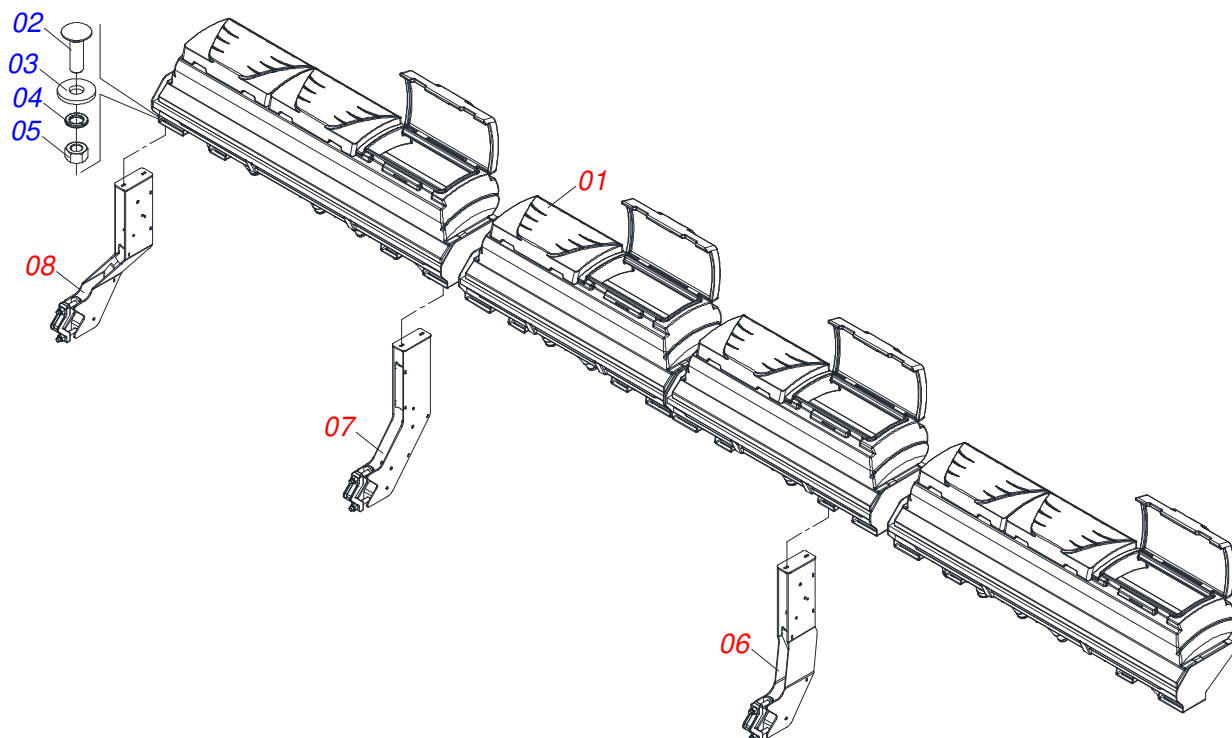


Item	Code	Description	See page	QT
01	0511058580	ASSEMBLY CSU	93	01
02	0501010942	3/8" X 1-1/4" BOLT		12
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
04	0503010025	3/8 SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0521052687	RIGHT SUPPORT TOWER WITH BOLT	98	02
07	0521051927	TOWER SUPPORT HOPPER	99	02
08	0521051931	LEFT SUPPORT TOWER WITH BOLT	100	02

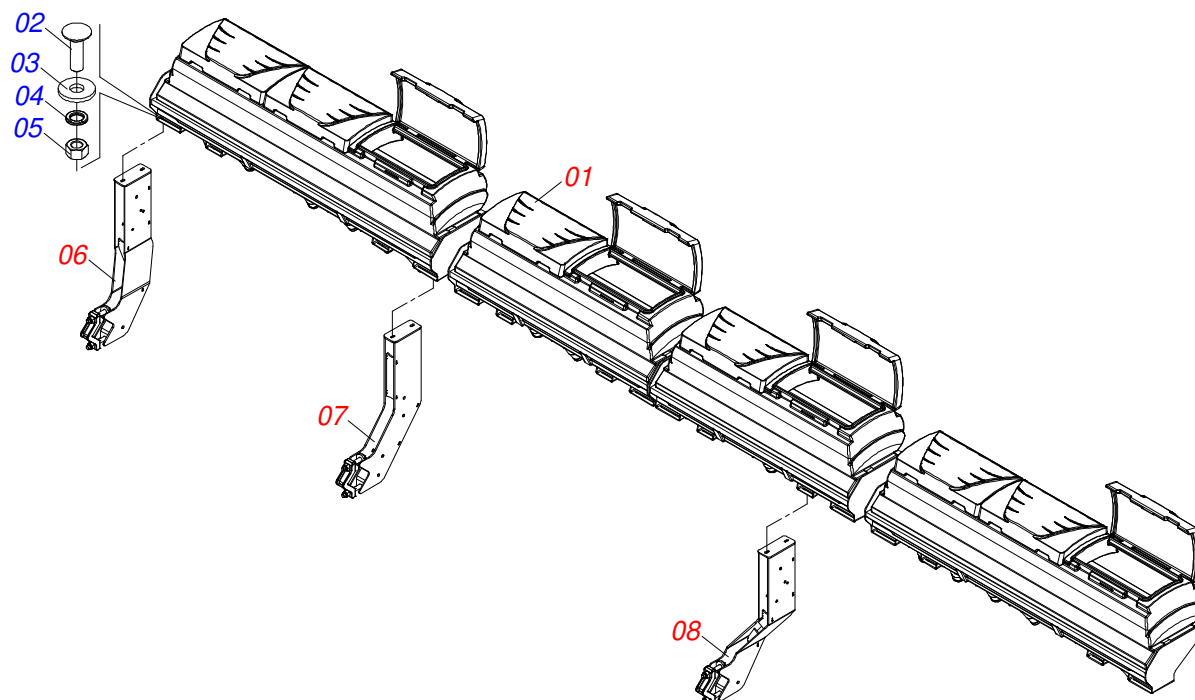


Item	Code	Description	See page	QT
01	0511056989	ASSEMBLY CSU C3 3 BOX WITH 12 C - 12 E 500	94	01
02	0501010942	3/8" X 1-1/4" BOLT		12
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
04	0503010025	3/8 SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0521052687	RIGHT SUPPORT TOWER WITH BOLT	98	02
07	0521051927	TOWER SUPPORT HOPPER	99	02
08	0521051931	LEFT SUPPORT TOWER WITH BOLT	100	02

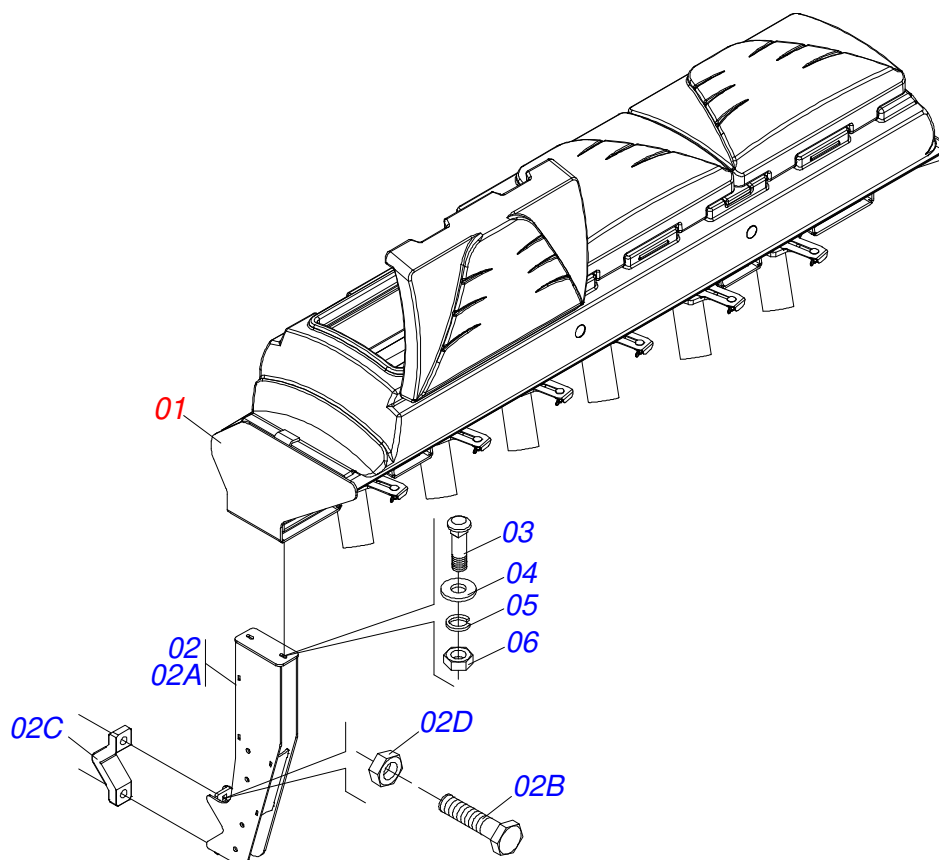


Item	Code	Description	See page	QT
01	0511057755	ASSEMBLY CSU 6850	95	01
02	0521051927	TOWER SUPPORT HOPPER	99	06
02A	0521066208	HOPPER SUPPORT TOWER		01
02B	0503011084	3/4" X 5" BOLT		02
02C	0502010175	HITCH CLAMP		01
02D	0503011075	3/4" UNC NUT		02
03	0501010942	3/8" X 1-1/4" BOLT		12
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
05	0503010025	3/8 SPRING WASHER		12
06	0503010026	3/8" NUT		12

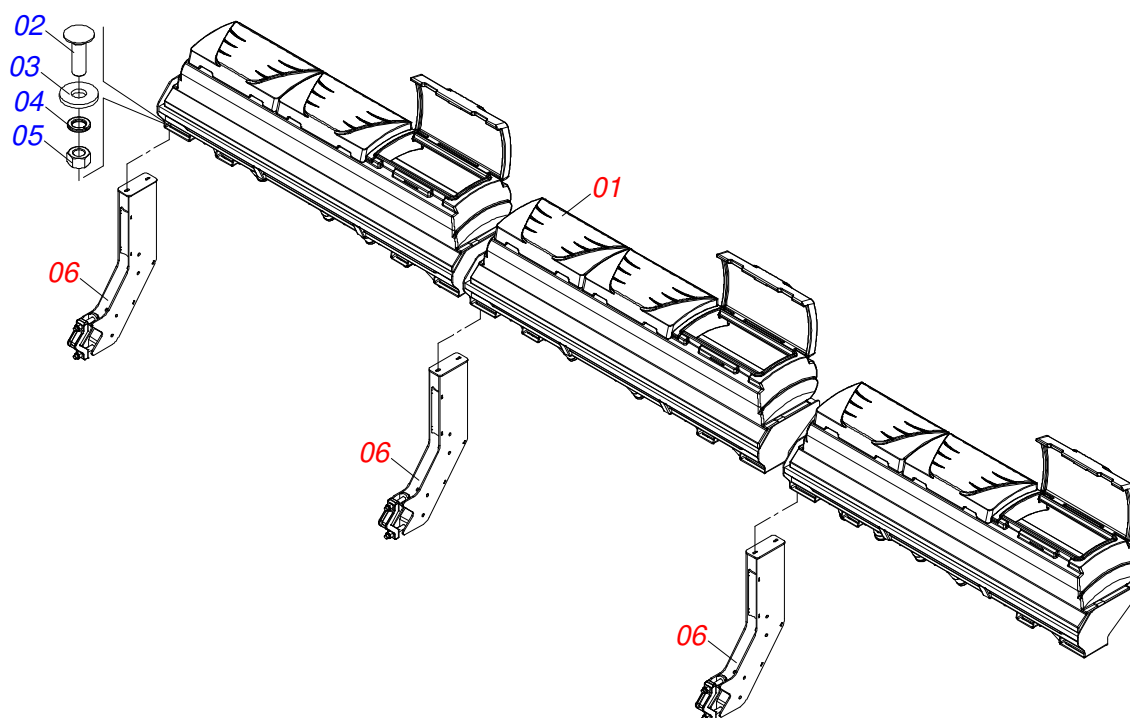


Item	Code	Description	See page	QT
01	0511058960	ASSEMBLY CSU C3 - 16 NOZZLES 7960	96	01
02	0501010942	3/8" X 1-1/4" BOLT		12
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
04	0503010025	3/8 SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0521051927	TOWER SUPPORT HOPPER	99	06

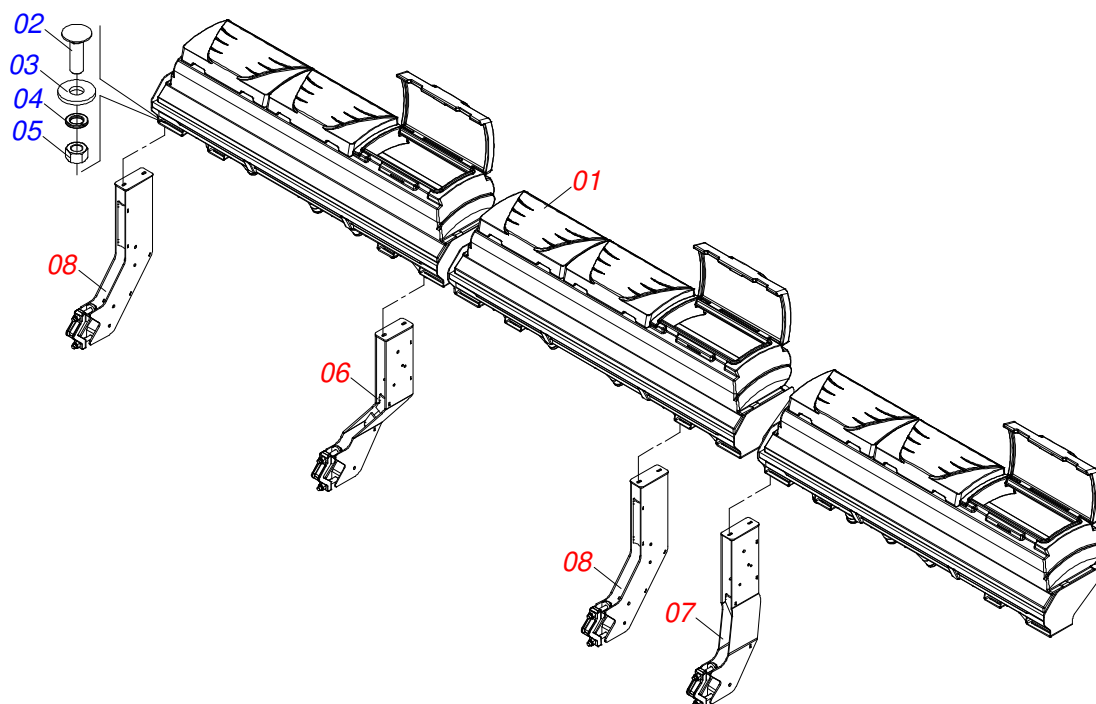


Item	Code	Description	See page	QT
01	0511058397	ASSEMBLY CSU C3 3BOX 7B WITH 17 C 7860	97	01
02	0501010942	3/8" X 1-1/4" BOLT		12
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
04	0503010025	3/8 SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0521051931	LEFT SUPPORT TOWER WITH BOLT	100	01
07	0521052687	RIGHT SUPPORT TOWER WITH BOLT	98	01
08	0521051927	TOWER SUPPORT HOPPER	99	04

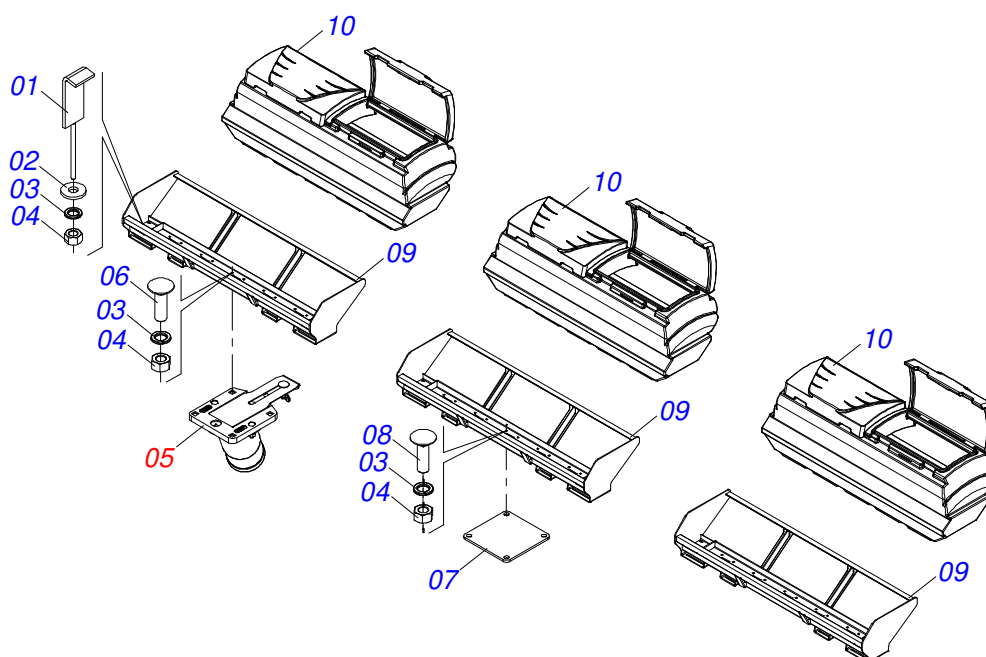


Item	Code	Description	See page	QT
01	0521063401	FIXING LOCK		06
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
03	0503010025	3/8 SPRING WASHER		66
04	0503010026	3/8" NUT		66
05	0511057690	3" ARTICULATED SEED CONDUCTOR	101	13
06	0501010942	3/8" X 1-1/4" BOLT		52
07	0571015773	SUPPORT SEED		02
08	0501011643	3/8 X 1" BOLT		08
09	0521064748	05 NOZZLES SINGLE SEED HOPPER SUPPORT		03
10	0503061987	05 NOZZLES FERTILIZER HOPPER		03

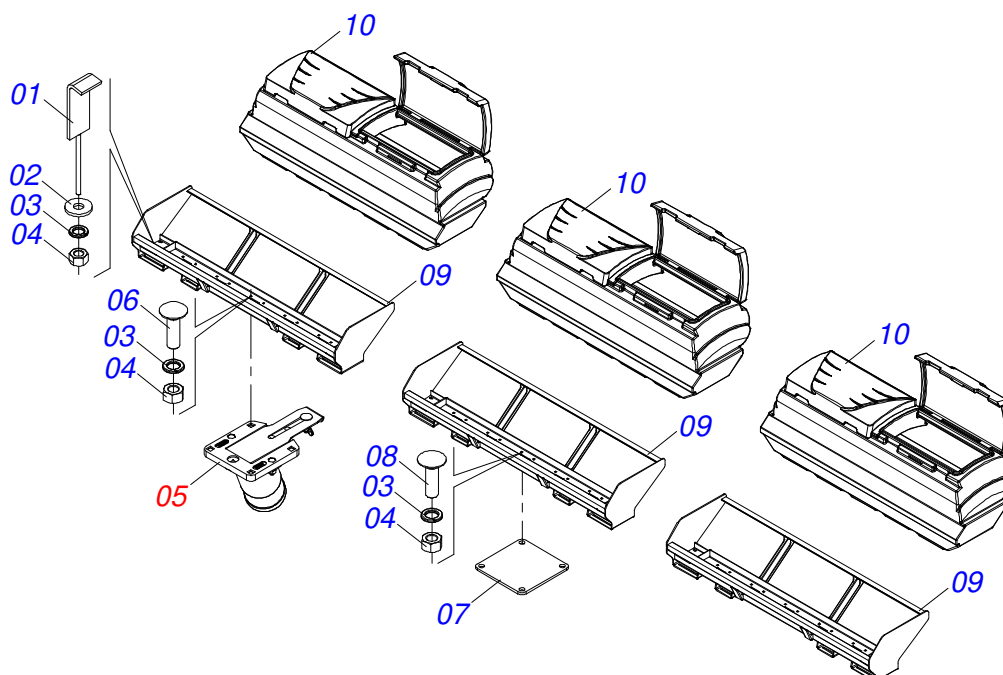


Item	Code	Description	See page	QT
01	0521063401	FIXING LOCK		06
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
03	0503010025	3/8 SPRING WASHER		66
04	0503010026	3/8" NUT		66
05	0511057690	3" ARTICULATED SEED CONDUCTOR	101	12
06	0501010942	3/8" X 1-1/4" BOLT		48
07	0571015773	SUPPORT SEED		03
08	0501011643	3/8 X 1"BOLT		12
09	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		03
10	0503061987	05 NOZZLES FERTILIZER HOPPER		03

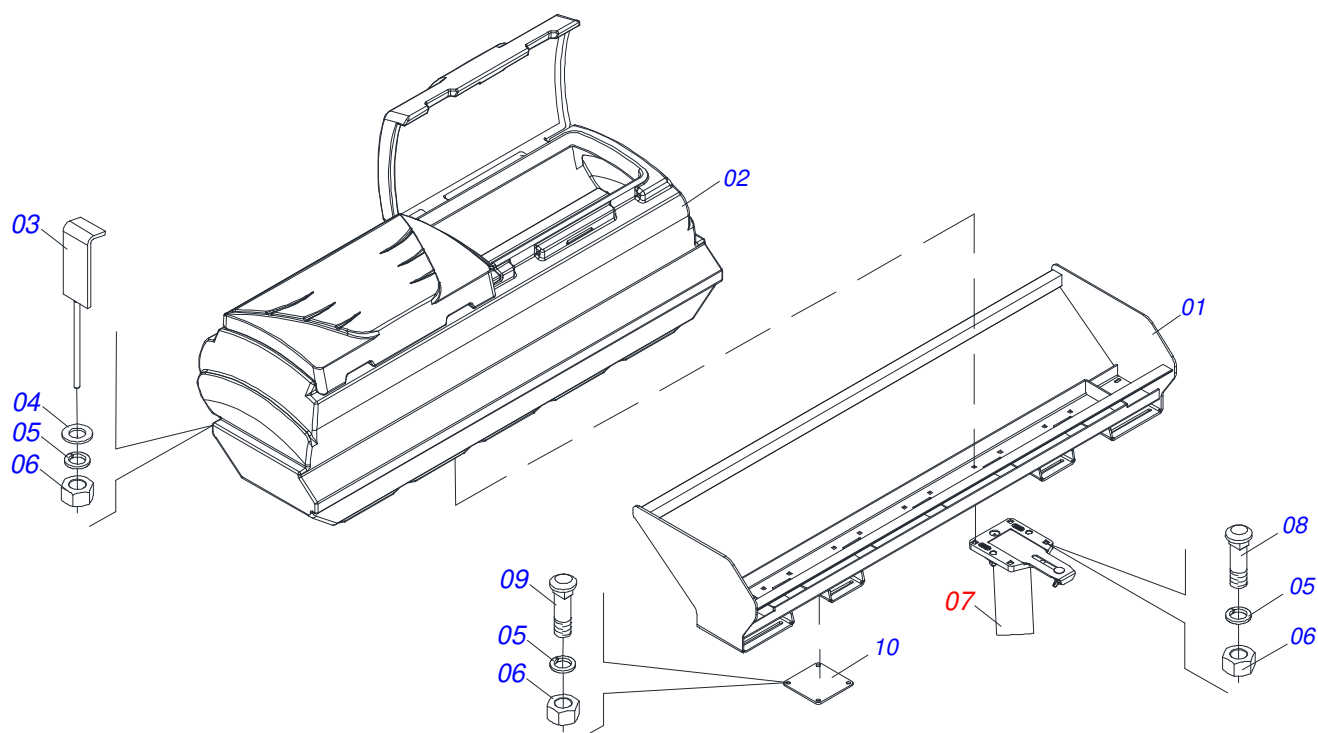


Item	Code	Description	See page	QT
01	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		03
02	0521064813	6 NOZZLES SINGLE SEED HOPPER SUPPORT		03
03	0521063401	FIXING LOCK		06
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
05	0503010025	3/8 SPRING WASHER		78
06	0503010026	3/8" NUT		78
07	0511057690	3" ARTICULATED SEED CONDUCTOR	101	15
08	0501010942	3/8" X 1-1/4" BOLT		60
09	0501011643	3/8 X 1"BOLT		12
10	0571015773	SUPPORT SEED		03

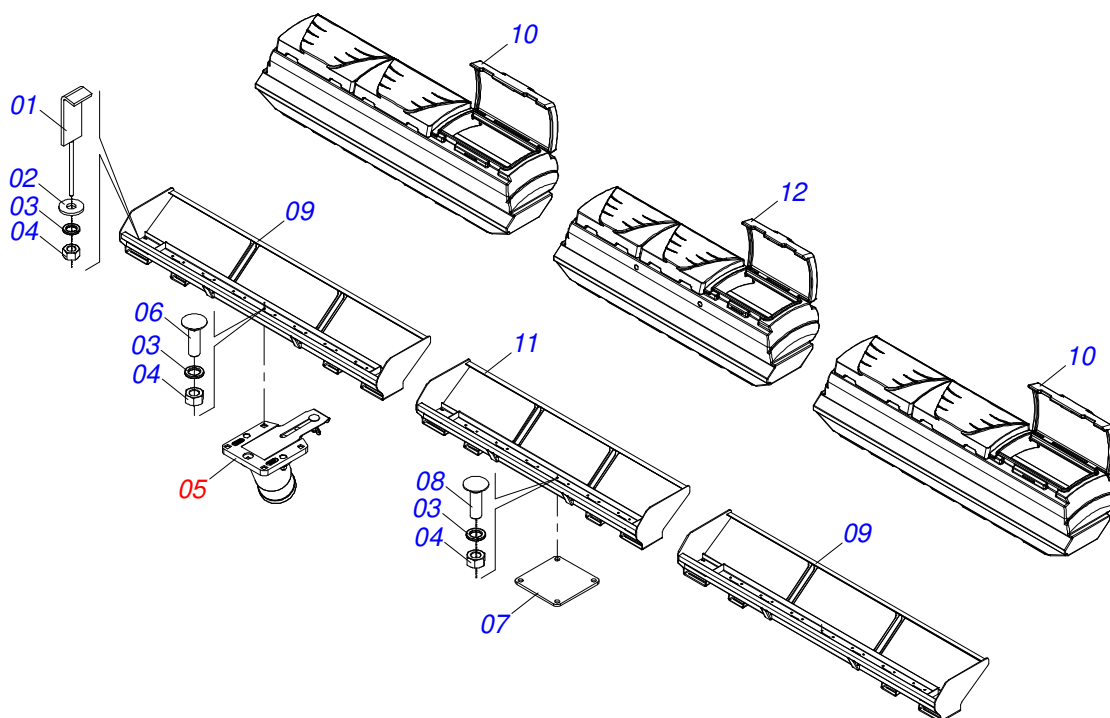


Item	Code	Description	See page	QT
01	0521063401	FIXING LOCK		06
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
03	0503010025	3/8 SPRING WASHER		86
04	0503010026	3/8" NUT		86
05	0511057690	3" ARTICULATED SEED CONDUCTOR	101	16
06	0501010942	3/8" X 1-1/4" BOLT		64
07	0571015773	SUPPORT SEED		04
08	0501011643	3/8 X 1"BOLT		16
09	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		02
10	0503062165	7 NOZZLES FRONT FERTILIZER HOPPER		02
11	0521064813	6 NOZZLES SINGLE SEED HOPPER SUPPORT		01
12	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		01

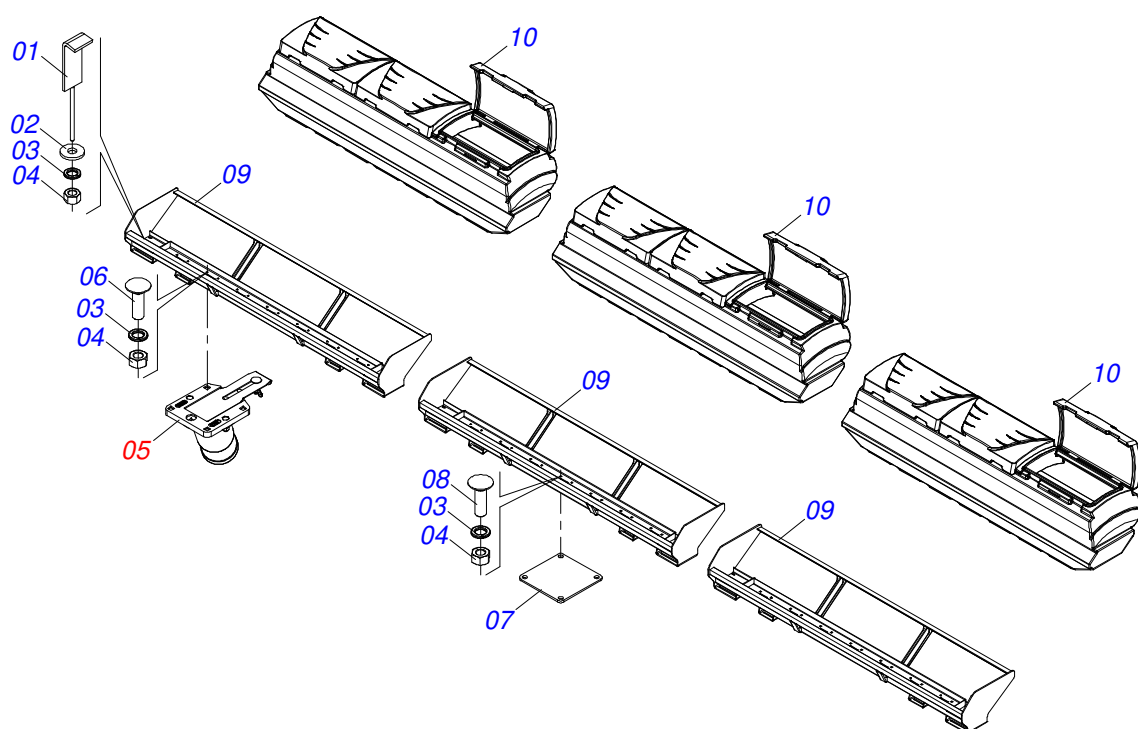


Item	Code	Description	See page	QT
01	0521063401	FIXING LOCK		06
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
03	0503010025	3/8 SPRING WASHER		90
04	0503010026	3/8" NUT		90
05	0511057690	3" ARTICULATED SEED CONDUCTOR	101	17
06	0501010942	3/8" X 1-1/4" BOLT		68
07	0571015773	SUPPORT SEED		04
08	0501011643	3/8 X 1"BOLT		16
09	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		03
10	0503062165	7 NOZZLES FRONT FERTILIZER HOPPER		03

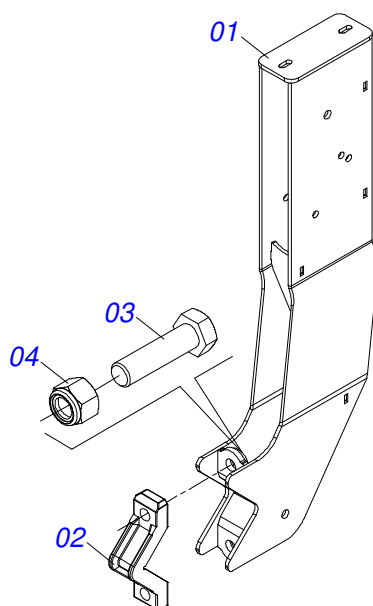


Item	Code	Description	See page	QT
01	0521066206	RIGHT HOPPER SUPPORT TOWER		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

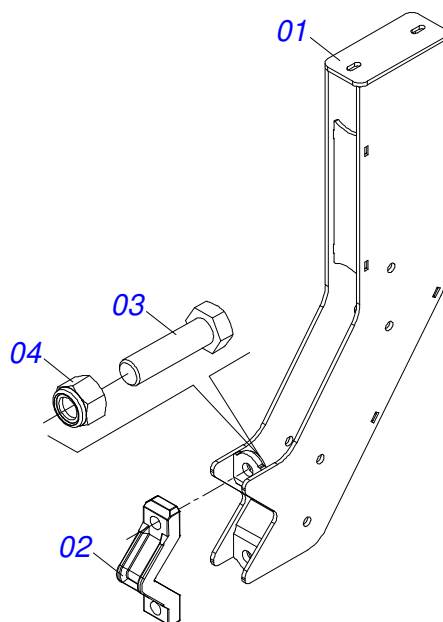


Item	Code	Description	See page	QT
01	0521066208	HOPPER SUPPORT TOWER		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

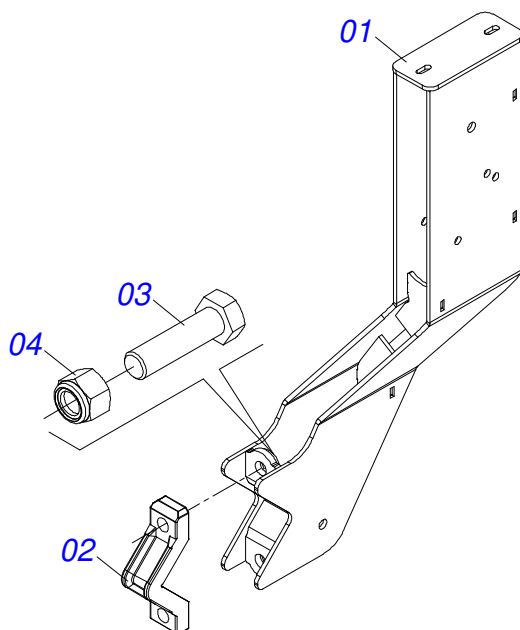

Item	Code	Description	See page	QT
01	0521066207	LEFT HOPPER SUPPORT TOWER		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

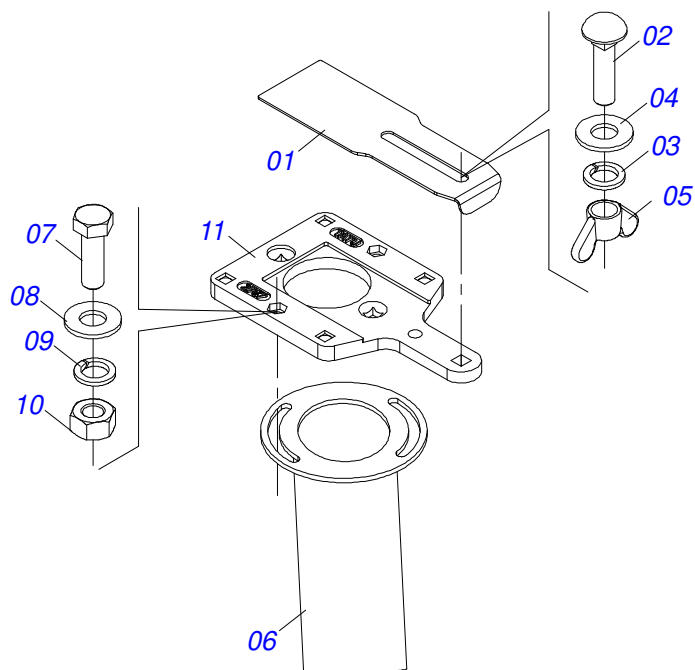


Item	Code	Description	See page	QT
01	0571015779	ARTICULATION NOZZLE SUPPORT LID		01
02	0501010942	3/8" X 1-1/4" BOLT		01
03	0503010025	3/8 SPRING WASHER		01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
05	0503010209	3/8" UNC BUTTERFLY NUT		01
06	0521066332	CONDUCTOR WITH FLANGE		01
07	0503010371	5/16" X 1" BOLT		02
08	0501010694	FLAT WASHER		02
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
10	0503010337	5/16" NUT		02
11	0502012767	SEED NOZZLE FIXER SUPPORT		01

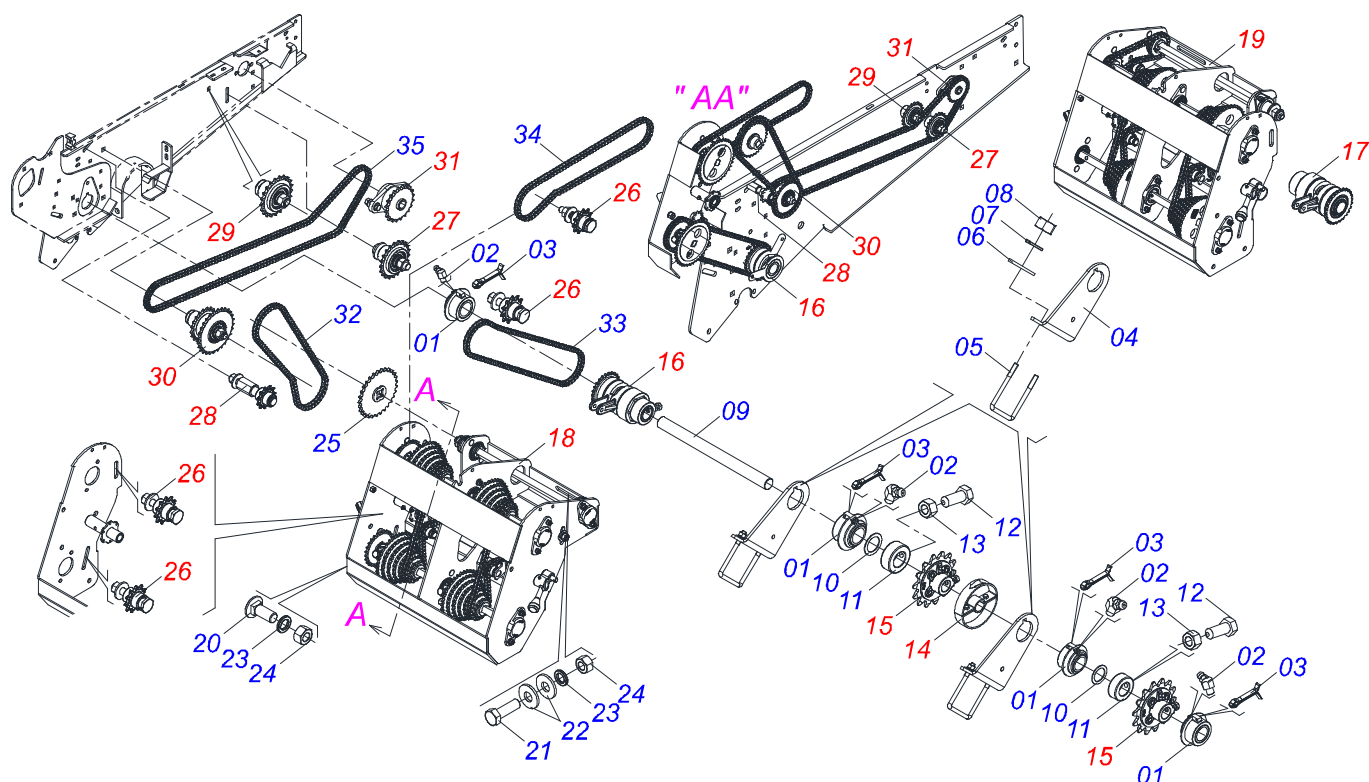


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0581011682	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	108	02
15	0511051434	TRANSMISSION ACTUATOR	109	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	110	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	111	01
18	0521050183	RIGHT GEAR BOX ASSY	112	01
19	0521050184	EXCHANGE LEFT ASSY	113	01
20	0503014734	BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064449	36Z P1/2 SH 3/4 GEAR		02
26	0511059261	CHAIN TENSIONER	125	04
27	0521055217	LOWER CURRENT STRETCH	126	02
28	0501058254	UPPER SEED CHAIN TENSIONER	127	02
29	0521055216	BEARING WITH GEAR	128	02
30	0521055218	BEARING GEAR WITH DOUBLE	129	02
31	0521055214	BEARING GEAR WITH	130	02

Item	Code	Description	See page	QT
32	0503012522	40-1 CHAIN X 85 LINK + MENDING		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

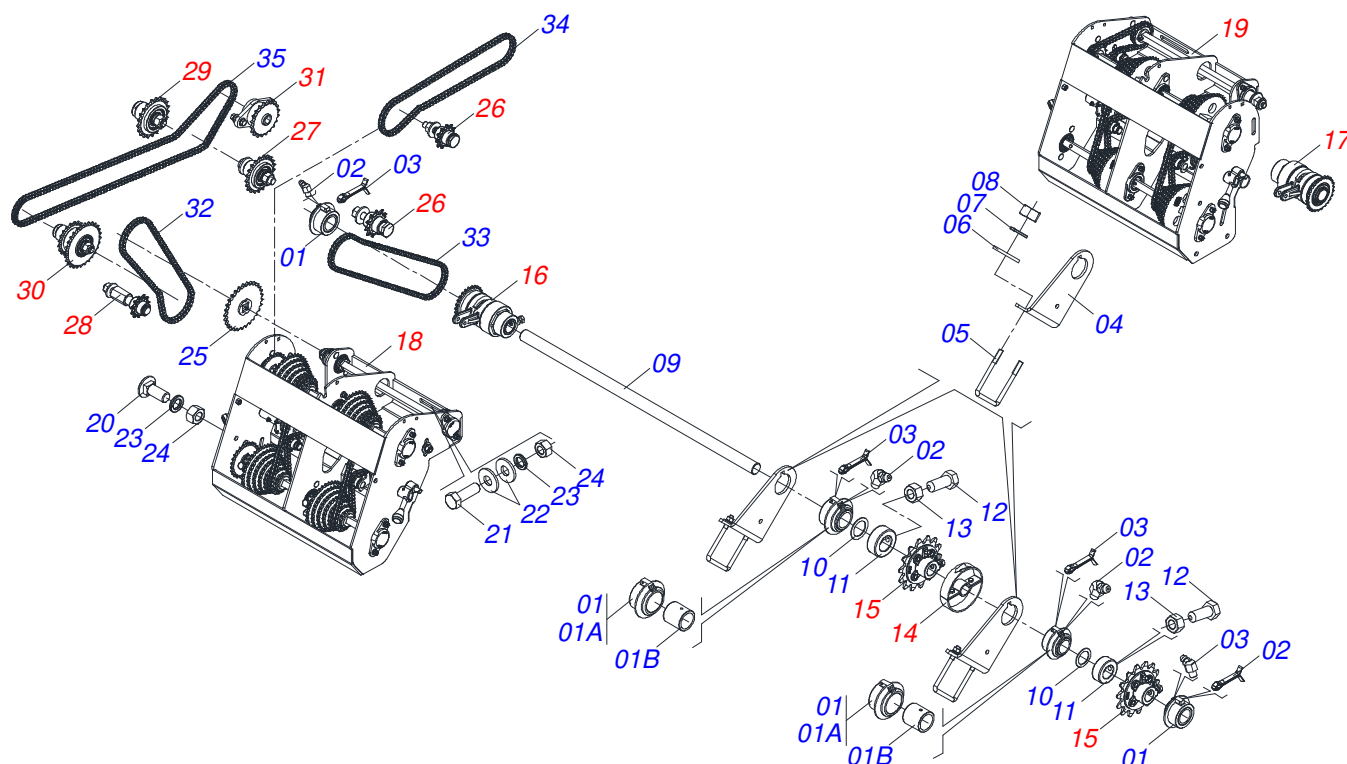


Item	Code	Description	See page	QT
001	0501110639	BEARING		08
002	0503011099	GREASE FITTING		08
003	0511051434	TRANSMISSION ACTUATOR	109	04
004	0551019114	MOTOR BEARING AXLE SUPPORT		04
005	0503010300	5/32" X 1" COTTERPIN		08
006	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
007	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		16
008	0503010019	1/2" SPRING WASHER		18
009	0503010060	1/2 UNC G.5 ZN HEX NUT		22
010	0581012759	1.3/8" X 1568 MOTOR SHAFT PST TRIO/F 12 E 500		02
011	0501018466	FLAT WASHER		04
012	0511015961	LOCK BUSHING		04
013	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
014	0501052560	MOTOR AXLE SIGNAL	108	02
015	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	110	01
016	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	111	01
017	0521043316	RIGHT GEAR BOX ASSY	114	01
018	0521043317	LEFT GEAR BOX ASSY	115	01
019	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
020	0501011600	1/2" X 1-1/4" BOLT		06
021	0521055216	BEARING WITH GEAR	128	02
022	0521055217	LOWER CURRENT STRETCH	126	02
023	0501058254	UPPER SEED CHAIN TENSIONER	127	02
024	0521055218	BEARING GEAR WITH DOUBLE	129	02
025	0521055214	BEARING GEAR WITH	130	02
026	0511059261	CHAIN TENSIONER	125	04
027	0503012522	40-1 CHAIN X 85 LINK + MENDING		02
028	0503014907	40-1 X 151 CHAIN LINK + MENDING		02
029	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
030	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
031	0521064449	36Z P1/2 SH 3/4 GEAR		02

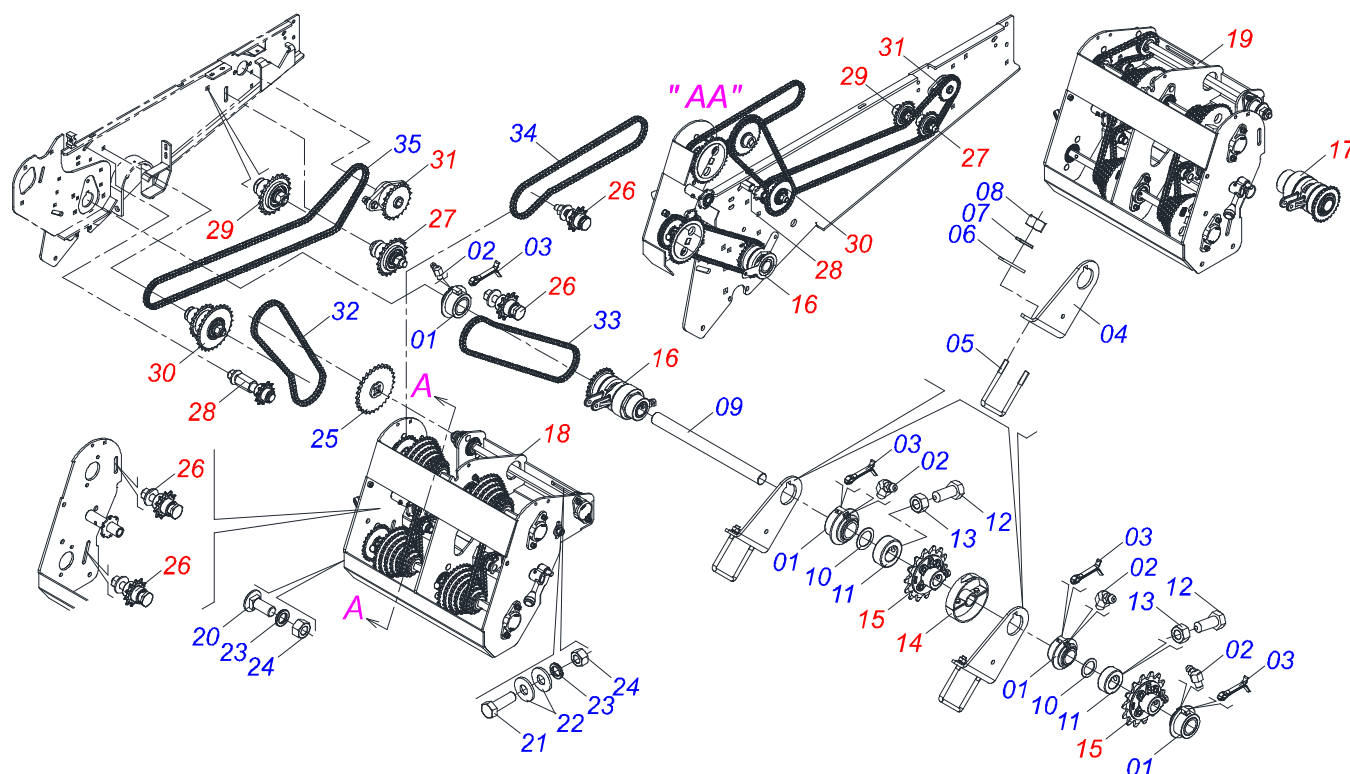


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0571014441	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	108	02
15	0511051434	TRANSMISSION ACTUATOR	109	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	110	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	111	01
18	0521050183	RIGHT GEAR BOX ASSY	112	01
19	0521050184	EXCHANGE LEFT ASSY	113	01
20	0503014734	BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064449	36Z P1/2 SH 3/4 GEAR		02
26	0511059261	CHAIN TENSIONER	125	04
27	0521055217	LOWER CURRENT STRETCH	126	02
28	0501058254	UPPER SEED CHAIN TENSIONER	127	02
29	0521055216	BEARING WITH GEAR	128	02
30	0521055218	BEARING GEAR WITH DOUBLE	129	02
31	0521055214	BEARING GEAR WITH	130	02

Item	Code	Description	See page	QT
32	0503012522	40-1 CHAIN X 85 LINK + MENDING		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

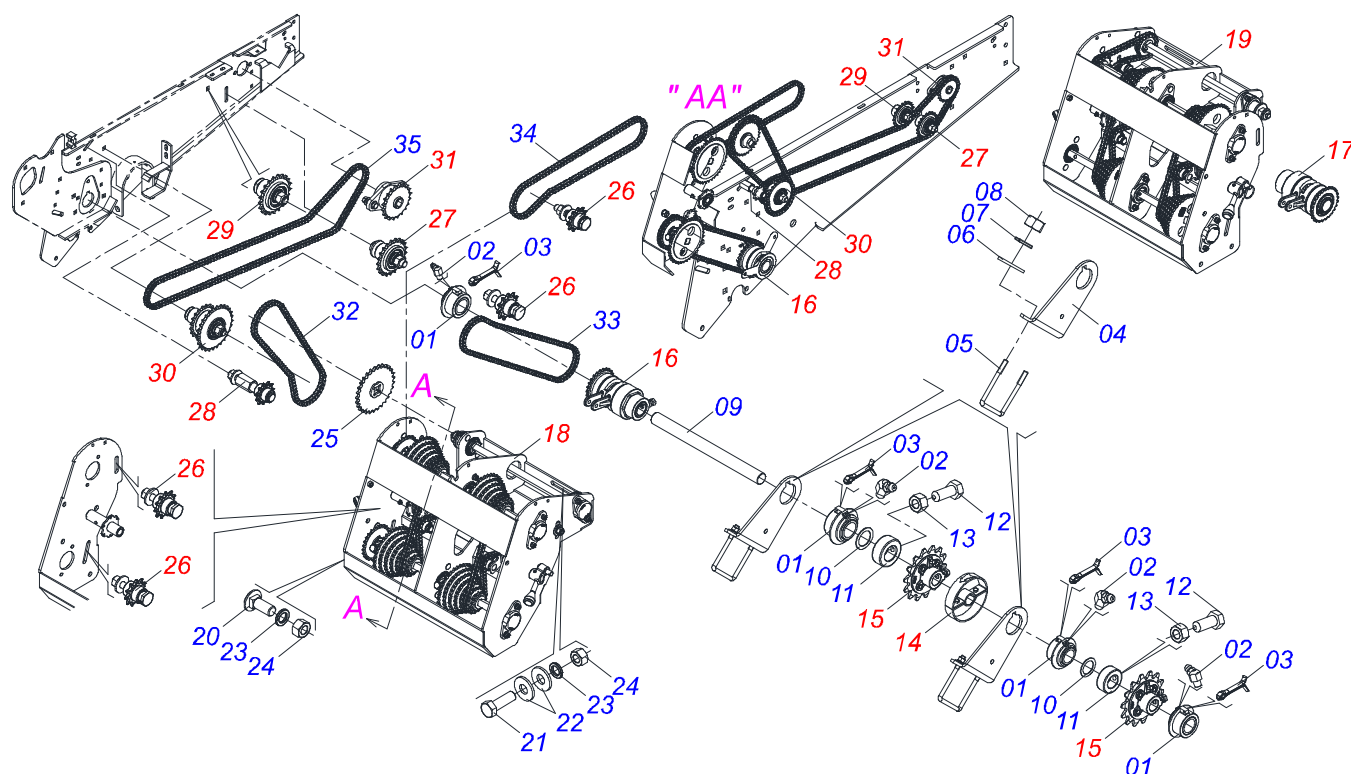


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0571014439	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	108	02
15	0511051434	TRANSMISSION ACTUATOR	109	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	110	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	111	01
18	0521050183	RIGHT GEAR BOX ASSY	112	01
19	0521050184	EXCHANGE LEFT ASSY	113	01
20	0503014734	BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064449	36Z P1/2 SH 3/4 GEAR		02
26	0511059261	CHAIN TENSIONER	125	04
27	0521055217	LOWER CURRENT STRETCH	126	02
28	0501058254	UPPER SEED CHAIN TENSIONER	127	02
29	0521055216	BEARING WITH GEAR	128	02
30	0521055218	BEARING GEAR WITH DOUBLE	129	02
31	0521055214	BEARING GEAR WITH	130	02

Item	Code	Description	See page	QT
32	0503012522	40-1 CHAIN X 85 LINK + MENDING		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

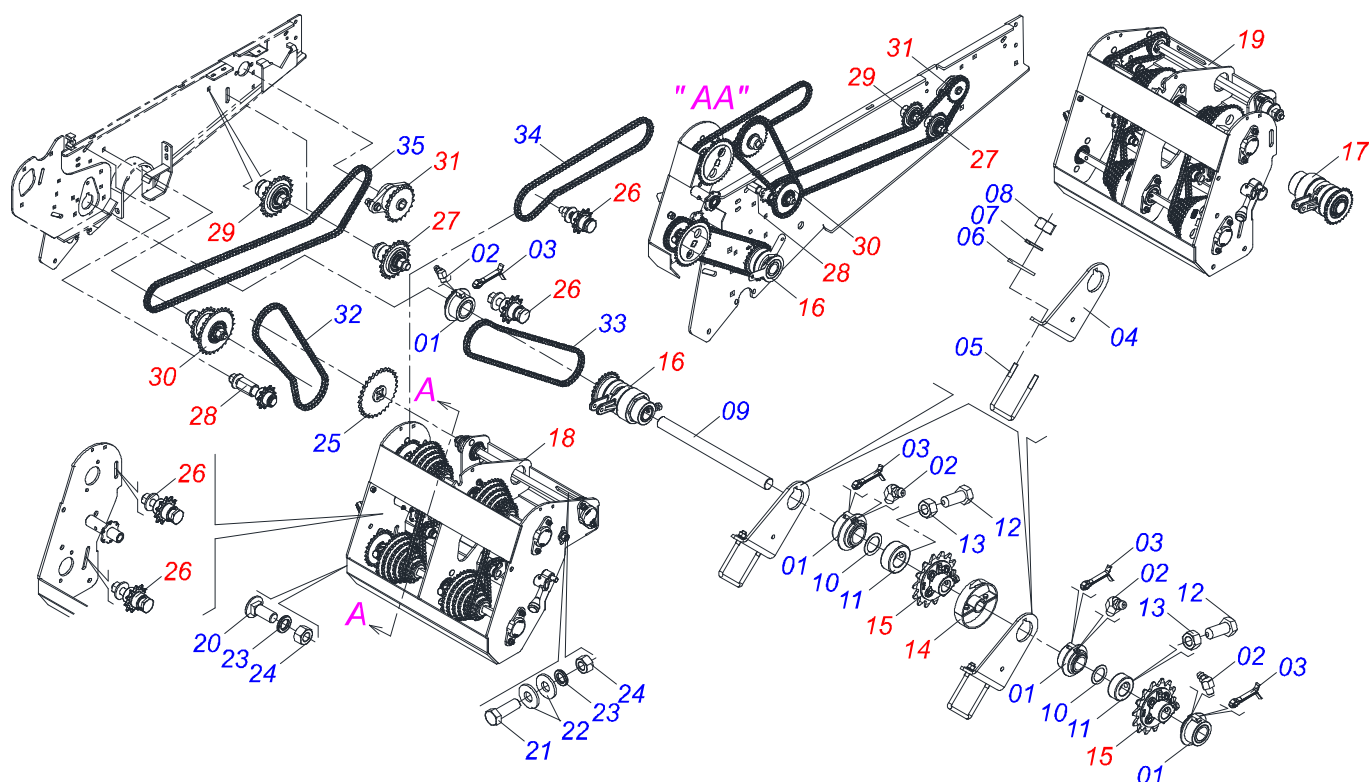


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0571014442	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	108	02
15	0511051434	TRANSMISSION ACTUATOR	109	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	110	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	111	01
18	0521050183	RIGHT GEAR BOX ASSY	112	01
19	0521050184	EXCHANGE LEFT ASSY	113	01
20	0501011600	1/2" X 1-1/4" BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064449	36Z P1/2 SH 3/4 GEAR		02
26	0511059261	CHAIN TENSIONER	125	04
27	0521055217	LOWER CURRENT STRETCH	126	02
28	0501058254	UPPER SEED CHAIN TENSIONER	127	02
29	0521055216	BEARING WITH GEAR	128	02
30	0521055218	BEARING GEAR WITH DOUBLE	129	02
31	0521055214	BEARING GEAR WITH	130	02

Item	Code	Description	See page	QT
32	0503012522	40-1 CHAIN X 85 LINK + MENDING		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

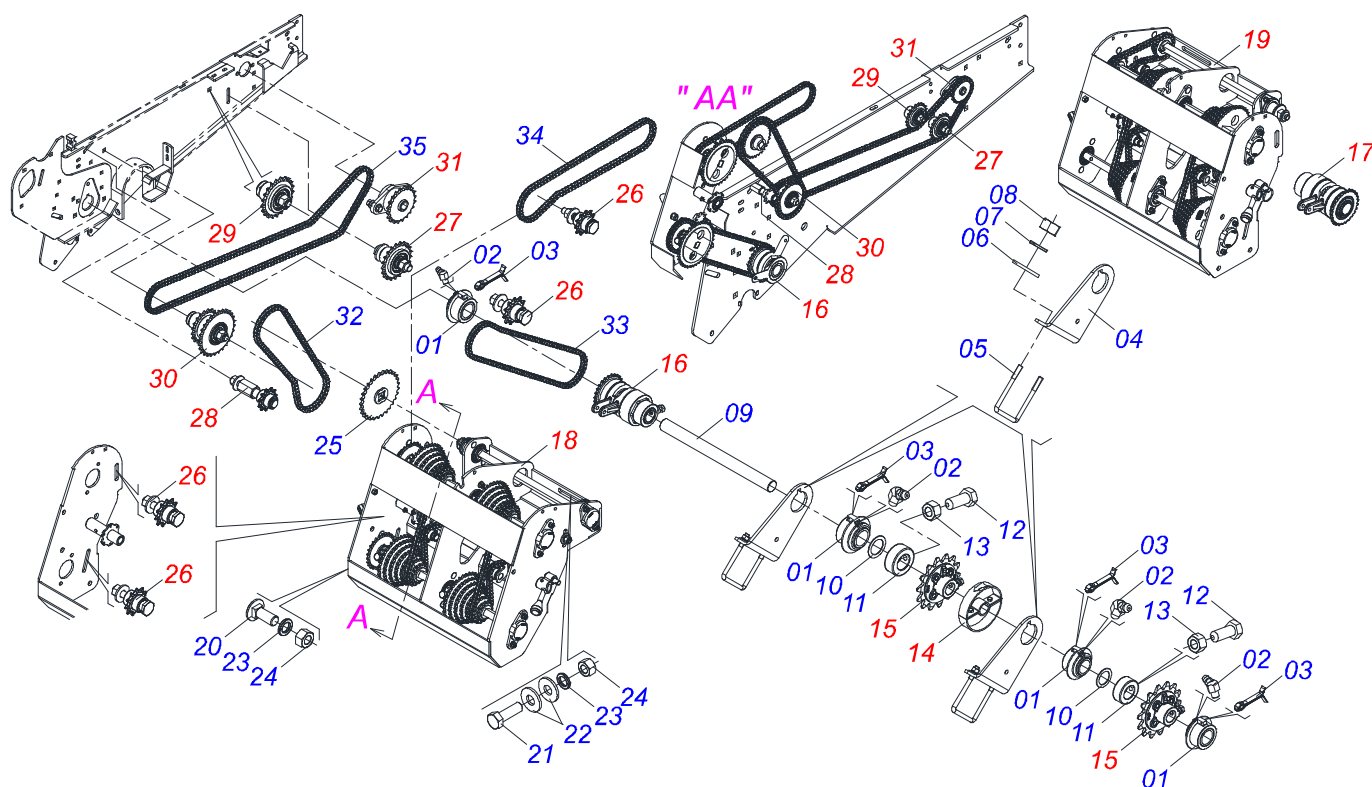


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0571014442	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	108	02
15	0511051434	TRANSMISSION ACTUATOR	109	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	110	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	111	01
18	0521050183	RIGHT GEAR BOX ASSY	112	01
19	0521050184	EXCHANGE LEFT ASSY	113	01
20	0503014734	BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064449	36Z P1/2 SH 3/4 GEAR		02
26	0511059261	CHAIN TENSIONER	125	04
27	0521055217	LOWER CURRENT STRETCH	126	02
28	0501058254	UPPER SEED CHAIN TENSIONER	127	02
29	0521055216	BEARING WITH GEAR	128	02
30	0521055218	BEARING GEAR WITH DOUBLE	129	02
31	0521055214	BEARING GEAR WITH	130	02


Item	Code	Description	See page	QT
32	0503012522	40-1 CHAIN X 85 LINK + MENDING		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

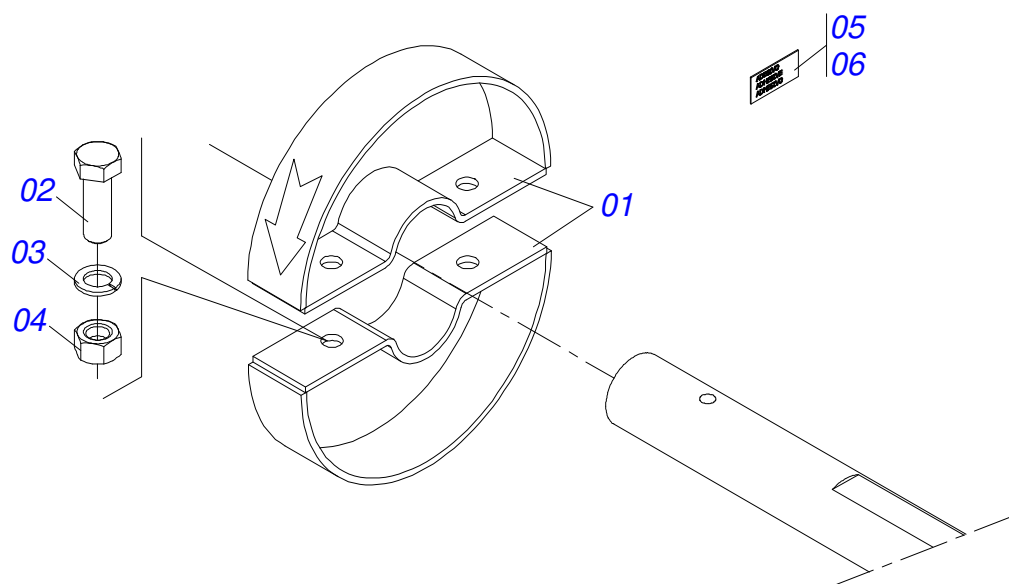


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ADHESIVE LABEL		01

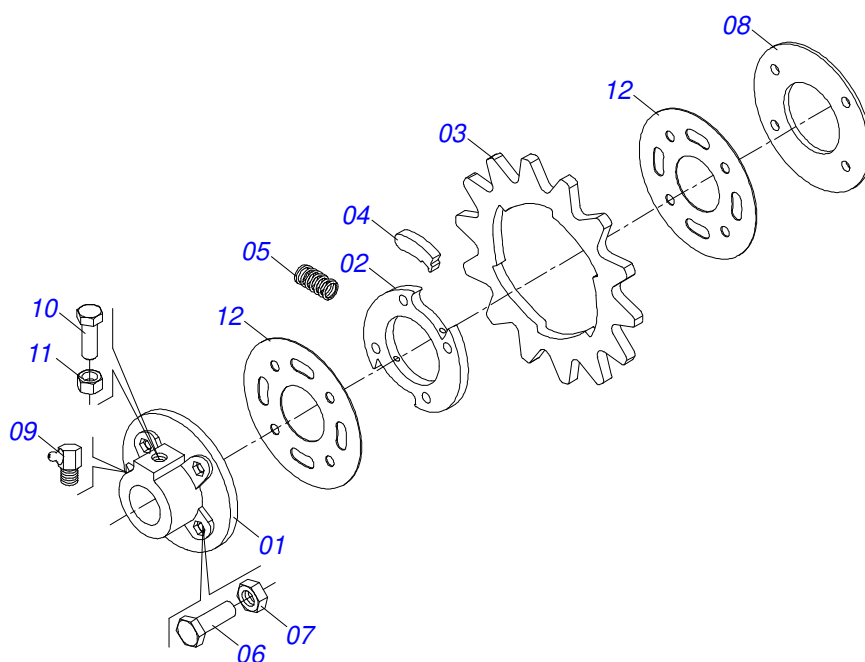


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2 UNC G.5 ZN HEX NUT		01
12	0571010763	FLANGE WASHER		02

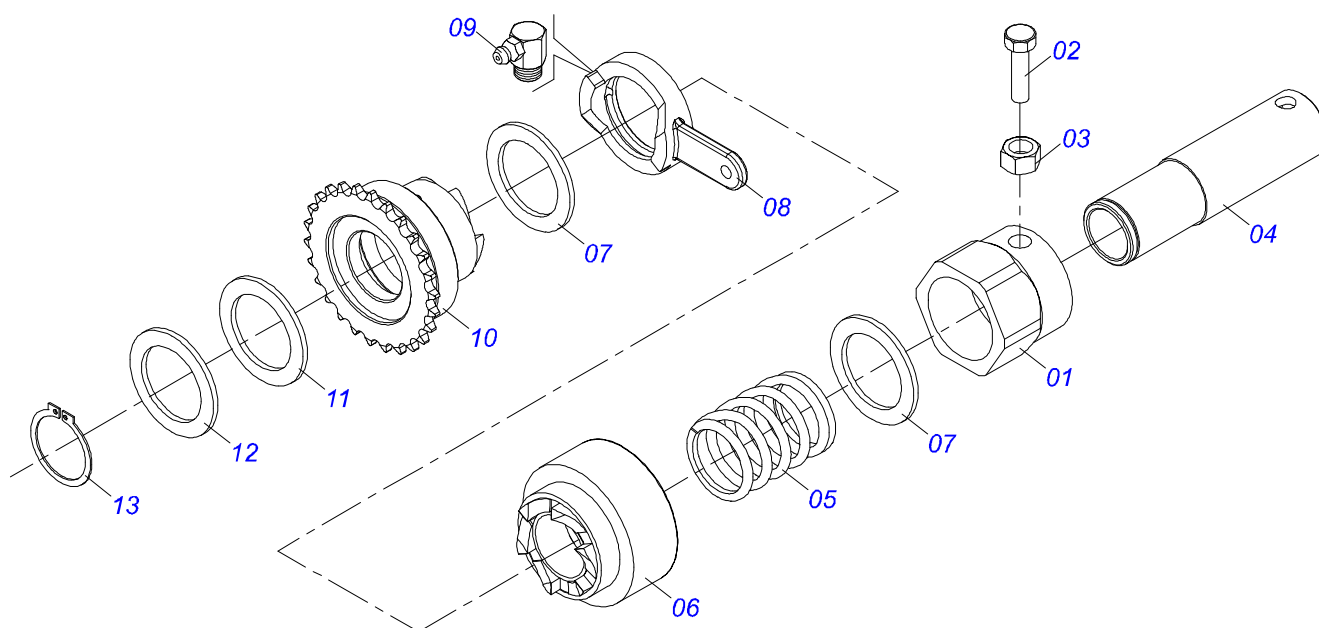


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

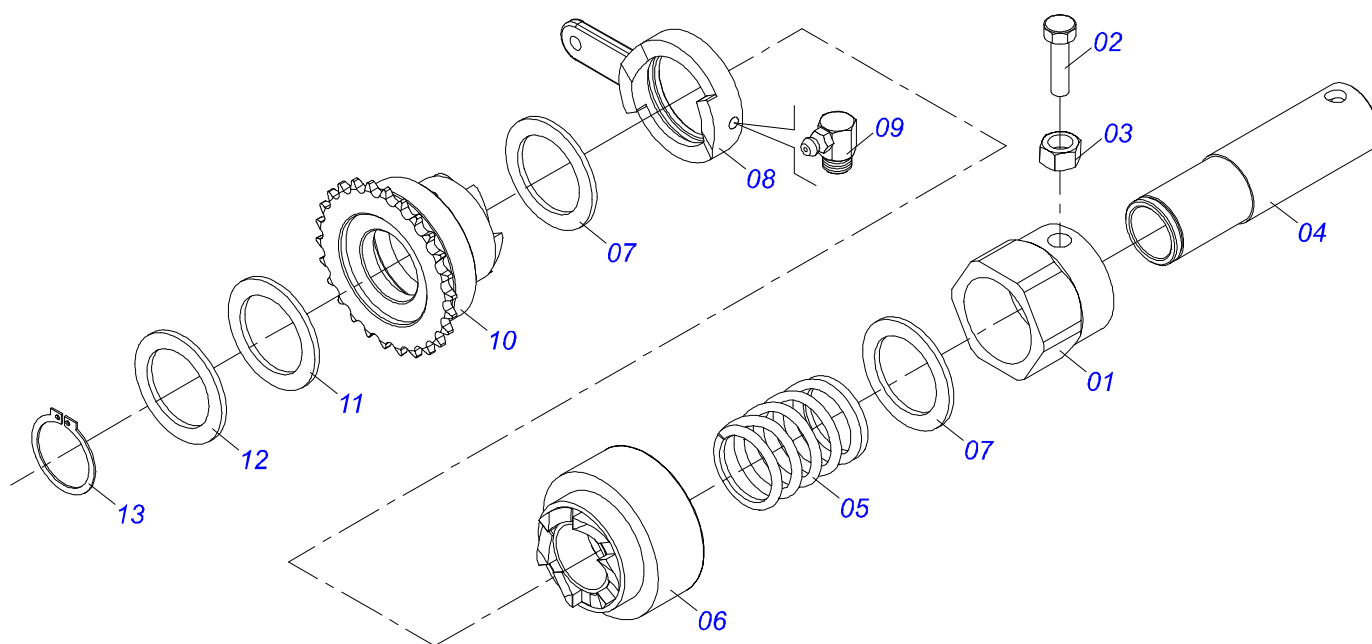


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

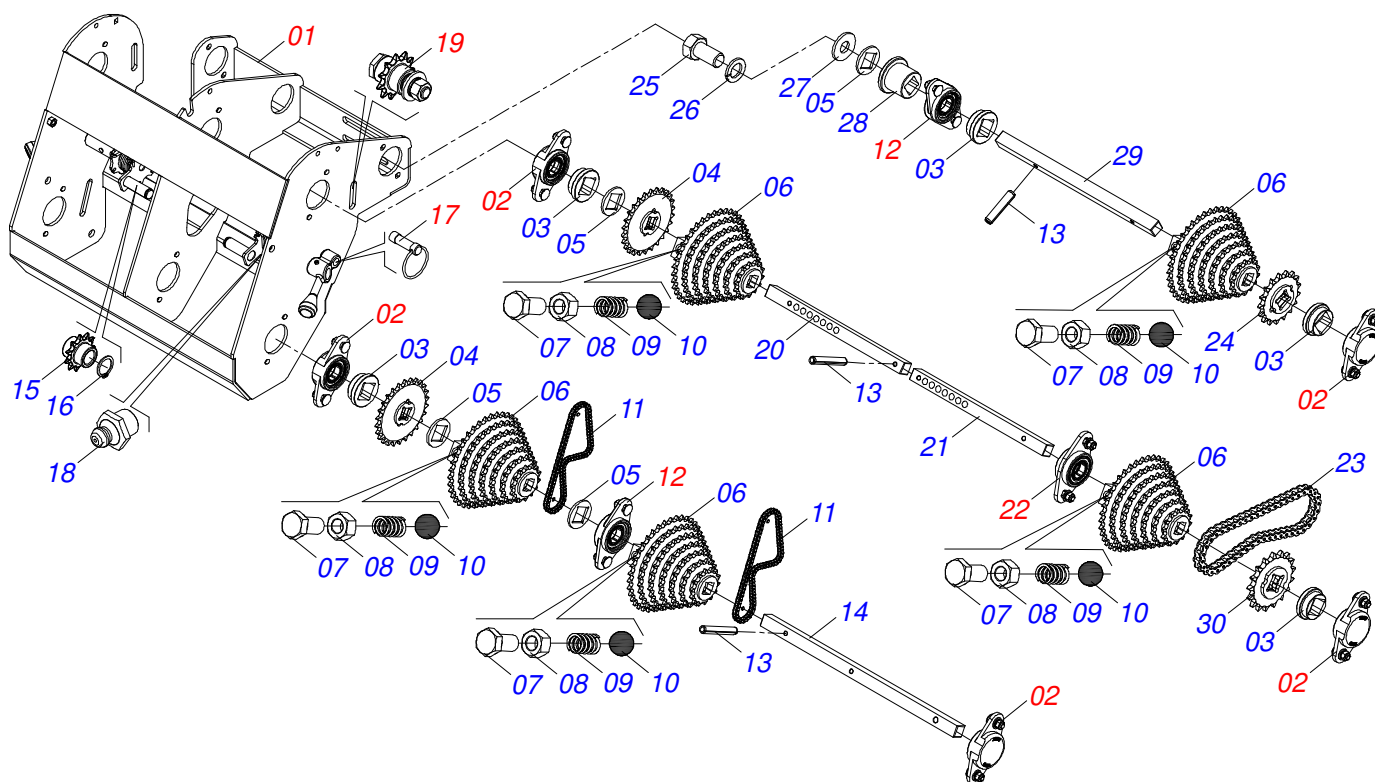

Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	116	01
02	0511059266	CLOSED BEARING	117	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN SHAFT		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	119	02
13	0503010292	701164 6 X 40 SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	121	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	122	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	123	01
23	0503012706	40-1 CHAIN X 47 LINK + MENDING		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		01
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8 SPRING WASHER		01
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01
30	0511065209	20Z GEAR		01

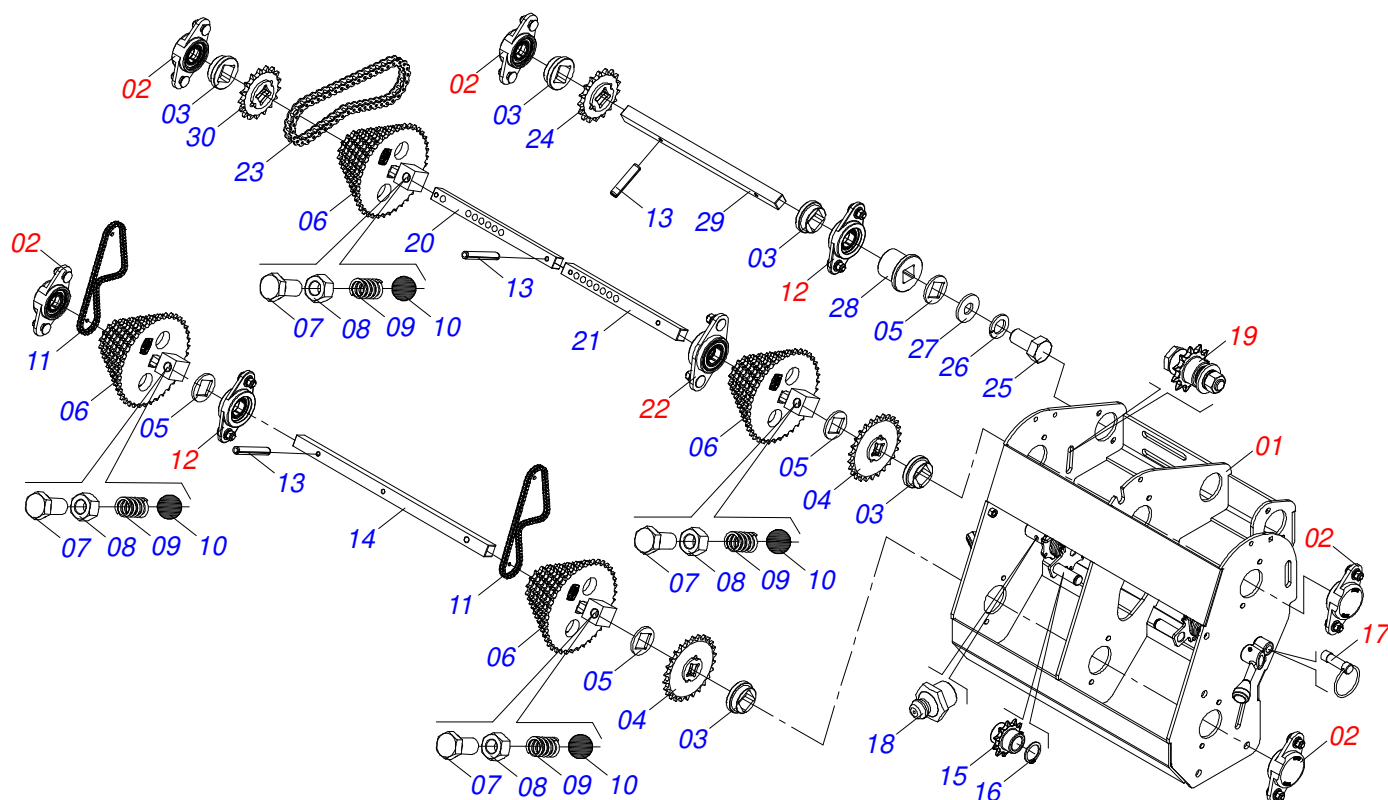


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	124	01
02	0511059266	CLOSED BEARING	117	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN SHAFT		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	119	02
13	0503010292	701164 6 X 40 SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	121	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	122	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	123	01
23	0503012706	40-1 CHAIN X 47 LINK + MENDING		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		01
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8 SPRING WASHER		01
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01
30	0511065209	20Z GEAR		01

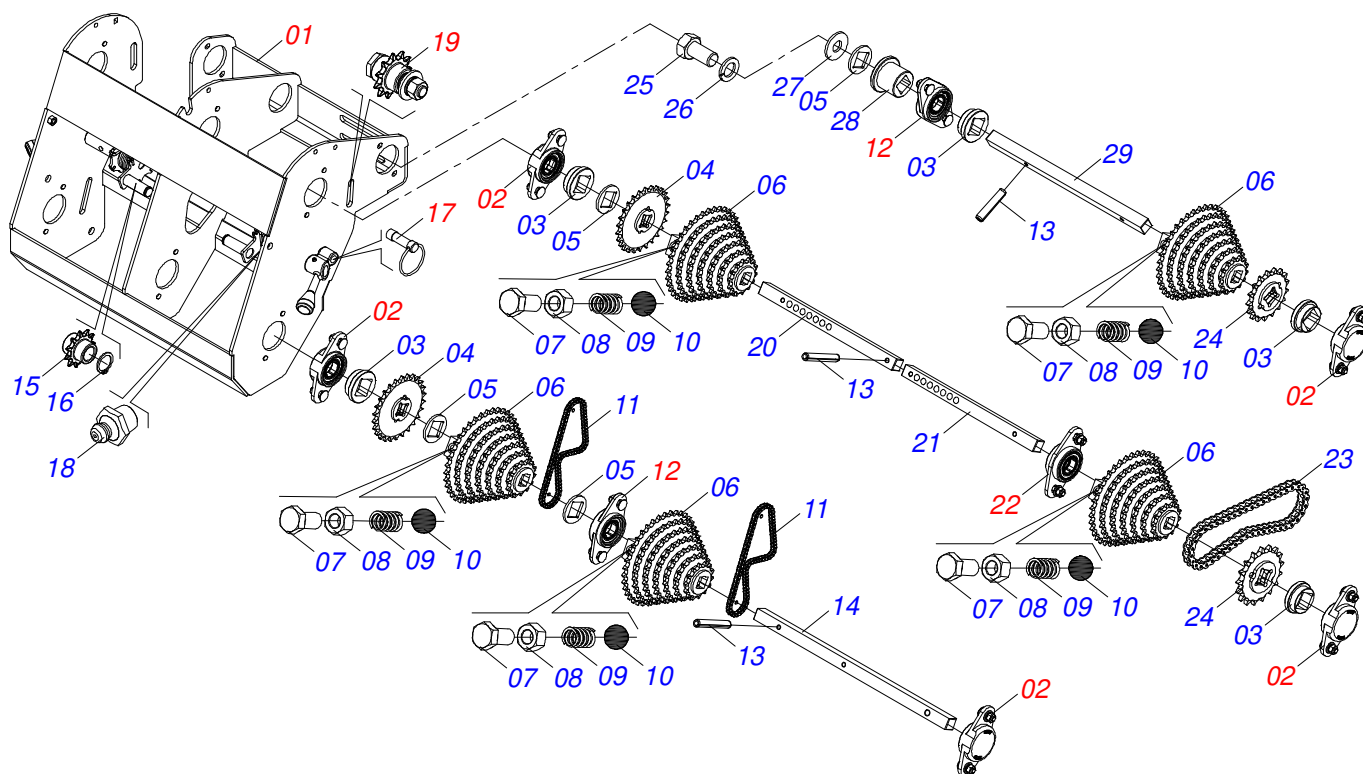


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	116	01
02	0511059266	CLOSED BEARING	117	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN SHAFT		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	119	02
13	0503010292	701164 6 X 40 SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	121	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	122	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	123	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8 SPRING WASHER		01
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

LEFT GEAR BOX ASSY


0521043317

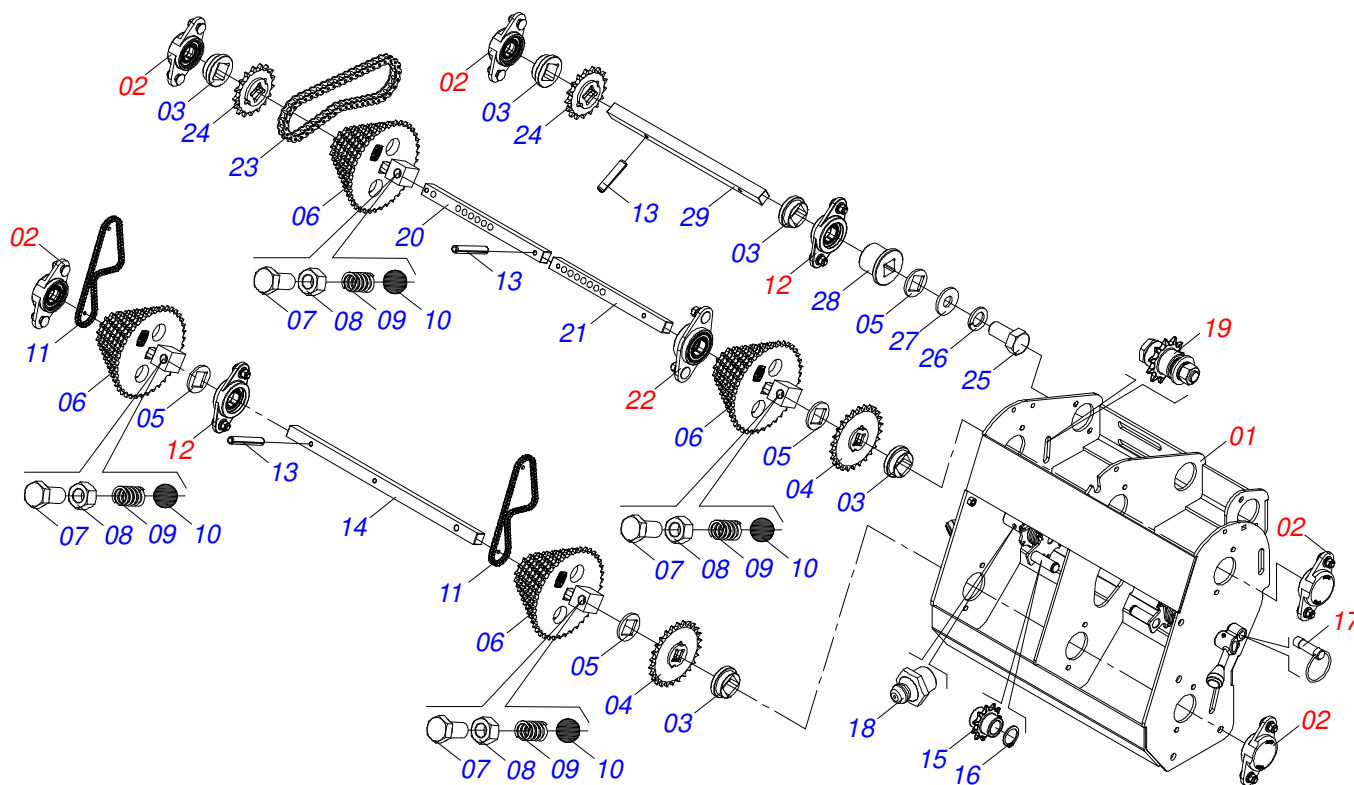


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	124	01
02	0511059266	CLOSED BEARING	117	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN SHAFT		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	119	02
13	0503010292	701164 6 X 40 SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	121	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	122	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	123	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8 SPRING WASHER		01
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

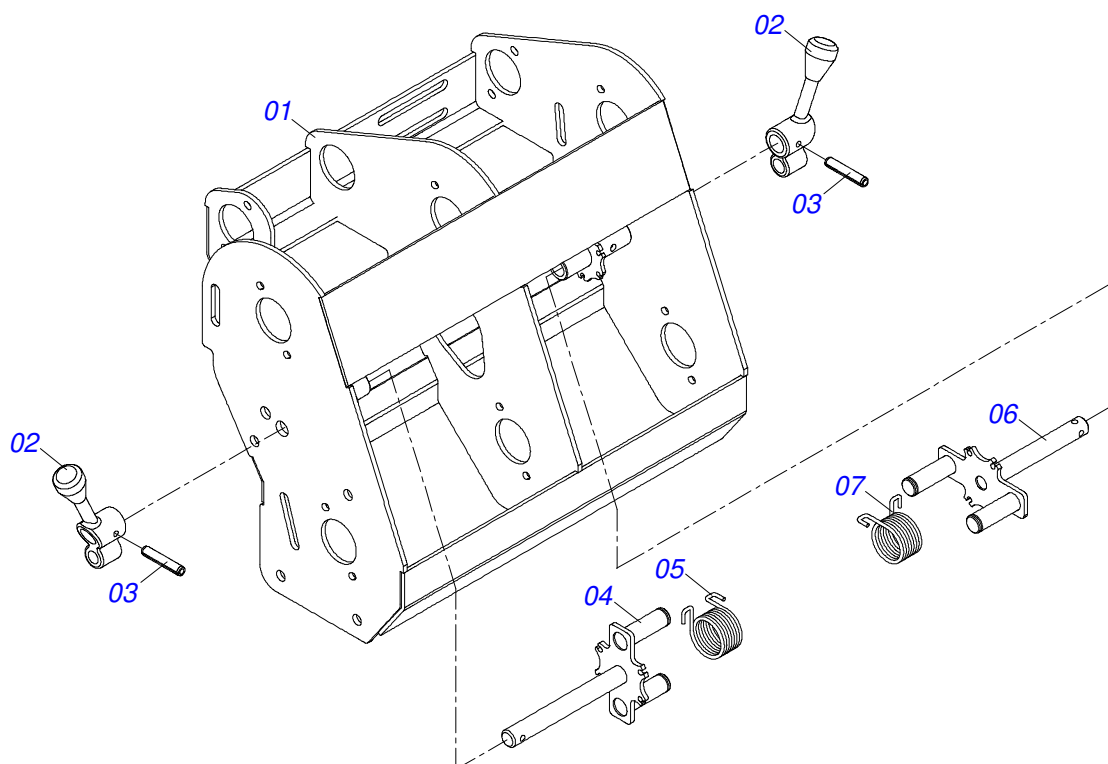


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TIGHTENER LEVER		02
03	0503010292	701164 6 X 40 SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING		01

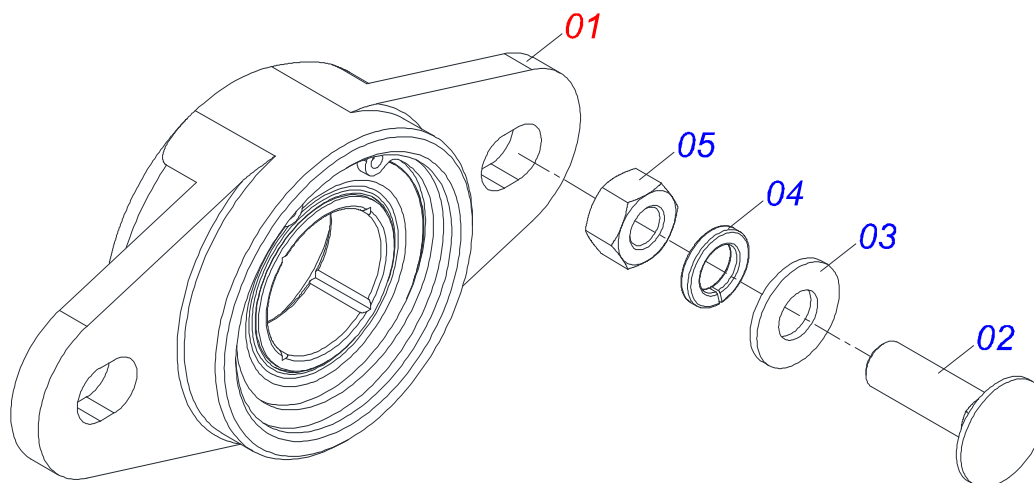


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	118	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

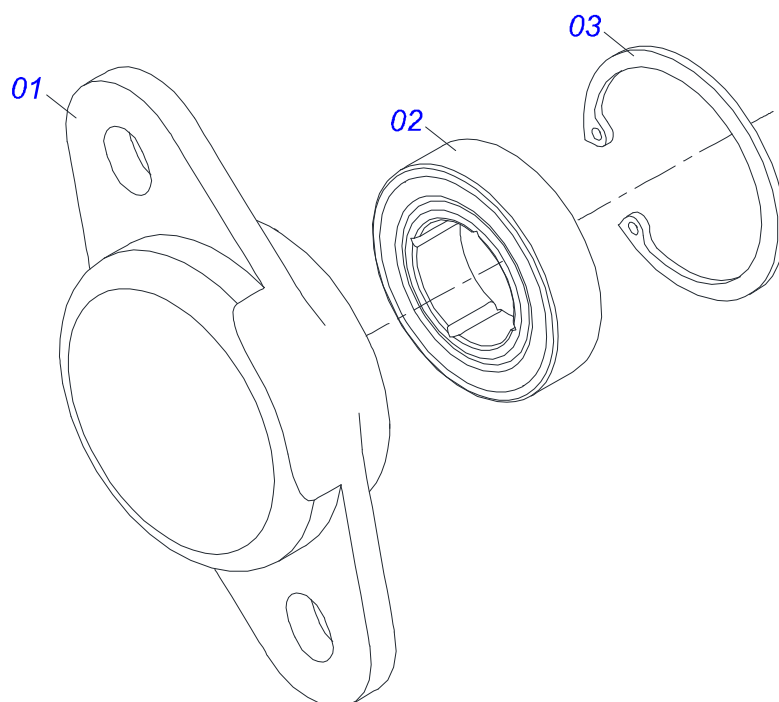


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

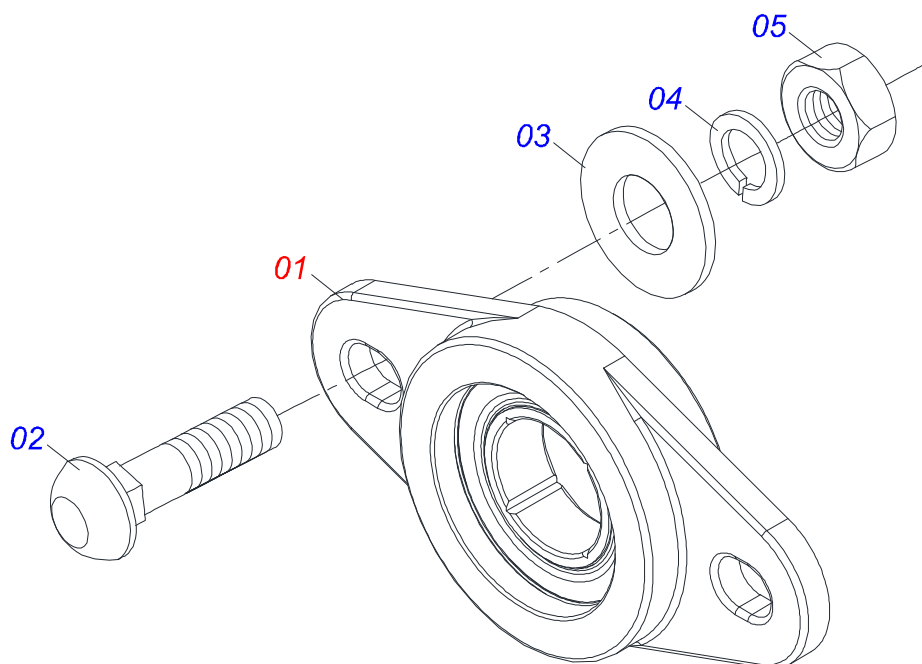


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLER	120	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

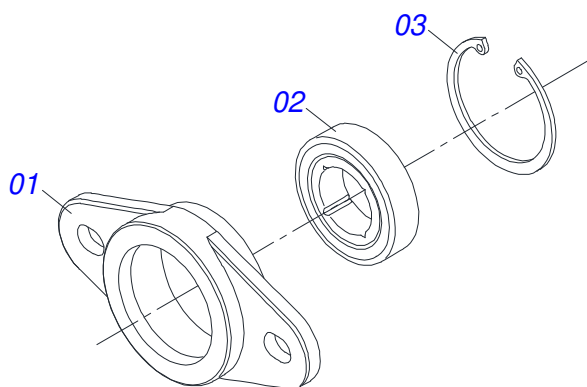


Item	Code	Description	See page	QT
01	0502011697	GEARBOX BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

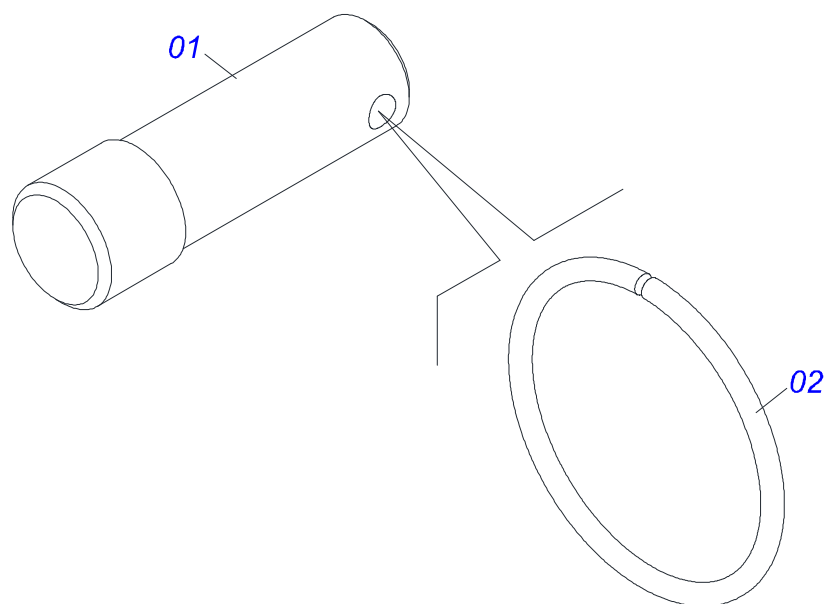


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

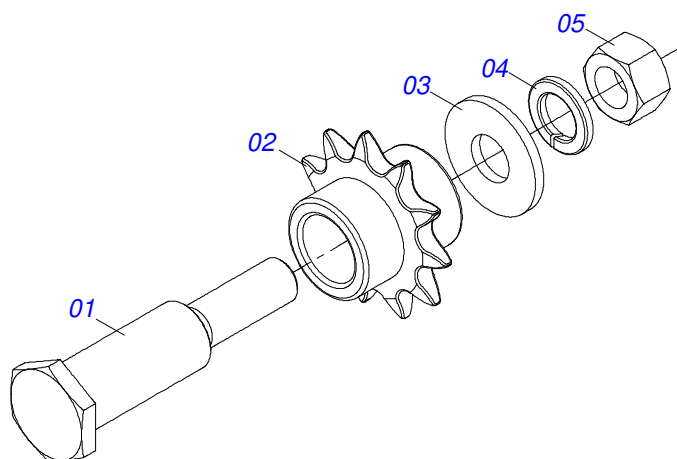


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

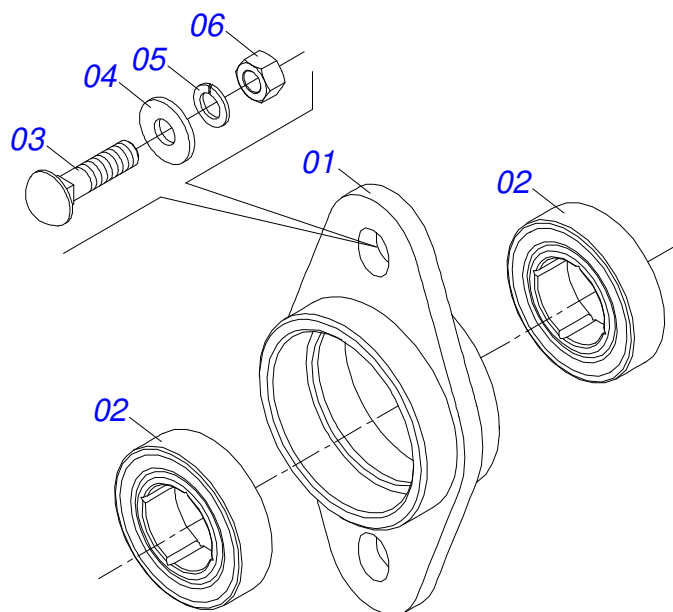


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

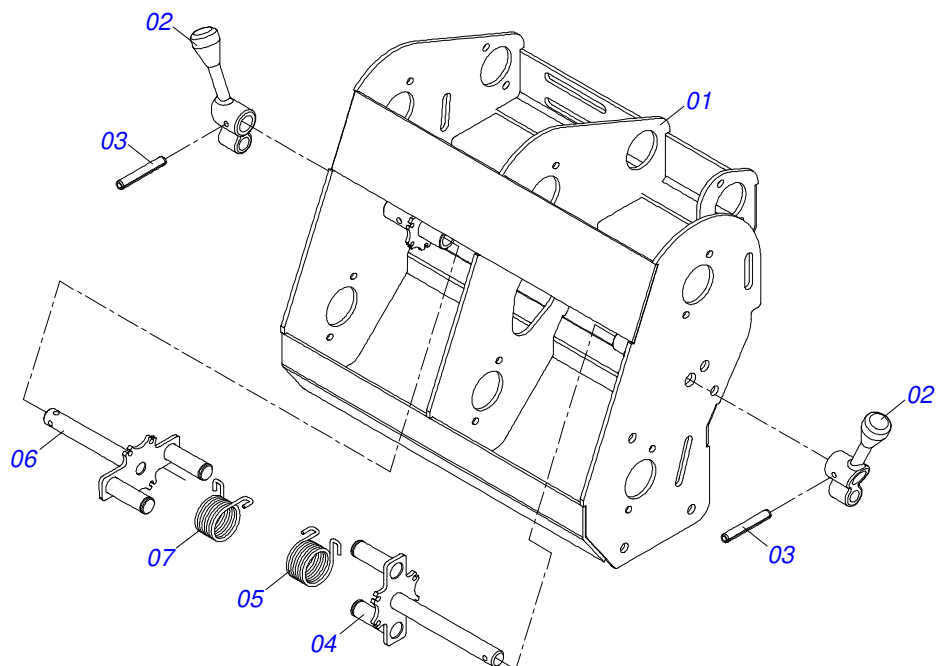


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TIGHTENER LEVER		02
03	0503010292	701164 6 X 40 SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING		01

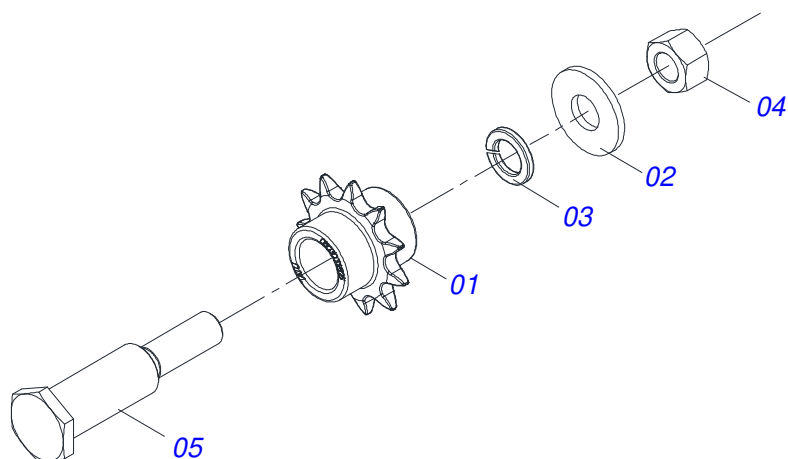


Item	Code	Description	See page	QT
01	0503031805	1 1/2" GEAR		01
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0531019479	AXLE CHAIN GEAR		01

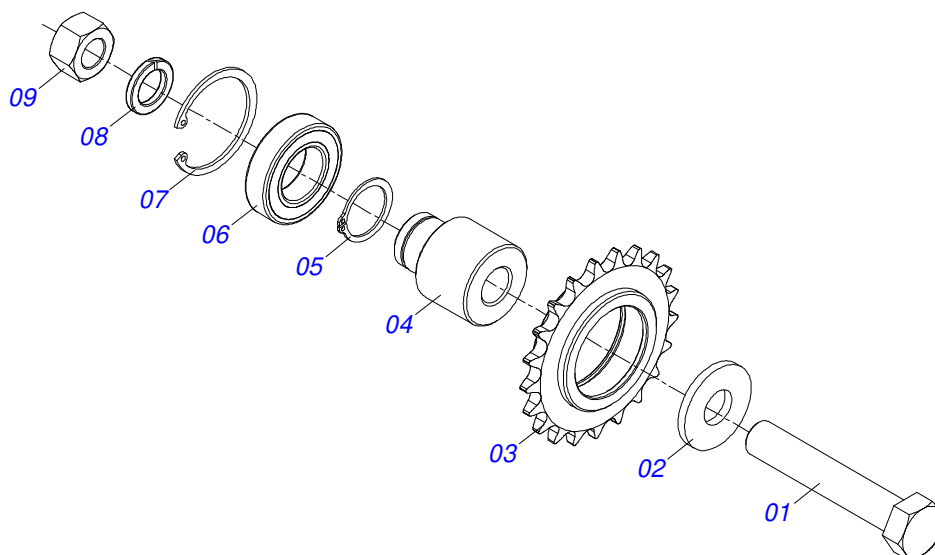


Item	Code	Description	See page	QT
01	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
02	0501012140	FLAT WASHER		01
03	0521069698	GEAR 21Z P 1/2		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503019356	BEARING 6005 2RS1		01
07	0503011105	SEAL RING		01
08	0503010027	5/8 SPRING WASHER		01
09	0503010013	5/8 NUT		01

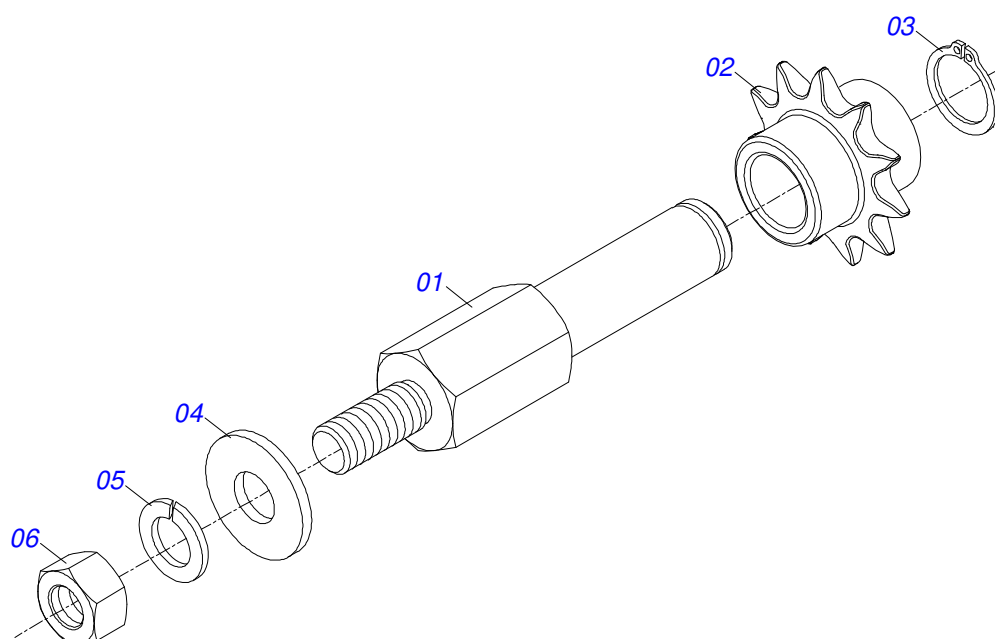


Item	Code	Description	See page	QT
01	0521018933	CHAIN TENSIONER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

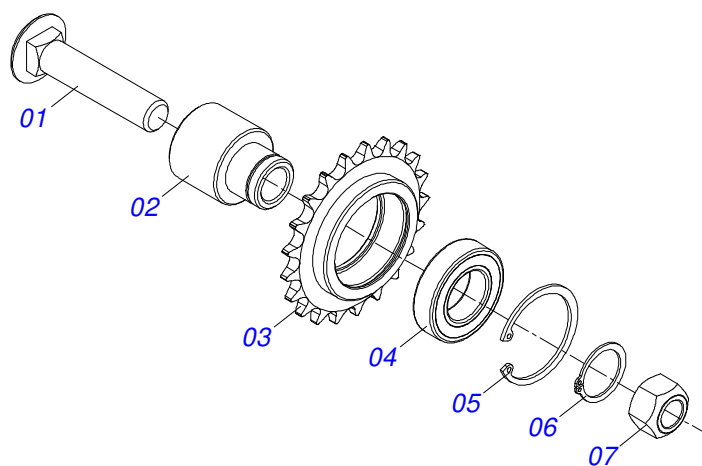


Item	Code	Description	See page	QT
01	0501011234	5/8" X 3" BOLT		01
02	0531017086	50 AXLETIGHTENER		01
03	0521069698	GEAR 21Z P 1/2		01
04	0503019356	BEARING 6005 2RS1		01
05	0503011105	SEAL RING		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		01
07	0503012412	5/8" UNC SELF LOCKING NUT		01

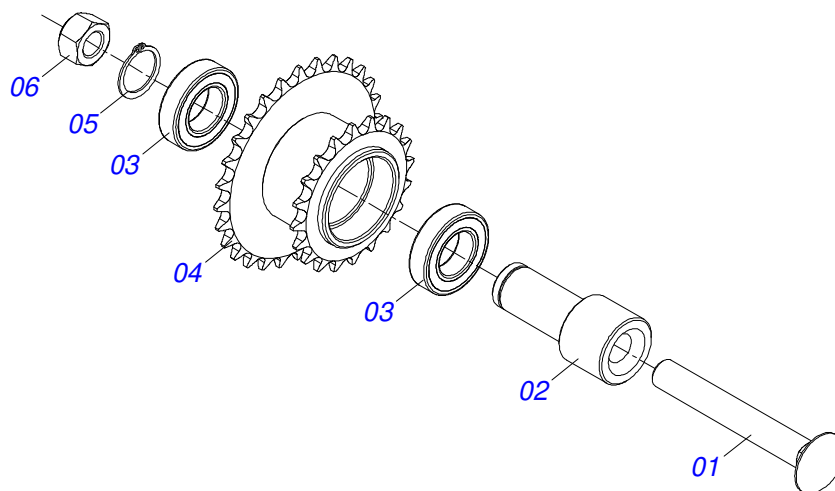


Item	Code	Description	See page	QT
01	0503016460	5/8" X 4.1/2" BOLT		01
02	0551019175	DOUBLE GEAR AXLE		01
03	0503019356	BEARING 6005 2RS1		02
04	0511069680	20Z X 28Z DOUBLE GEAR		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503012412	5/8" UNC SELF LOCKING NUT		01

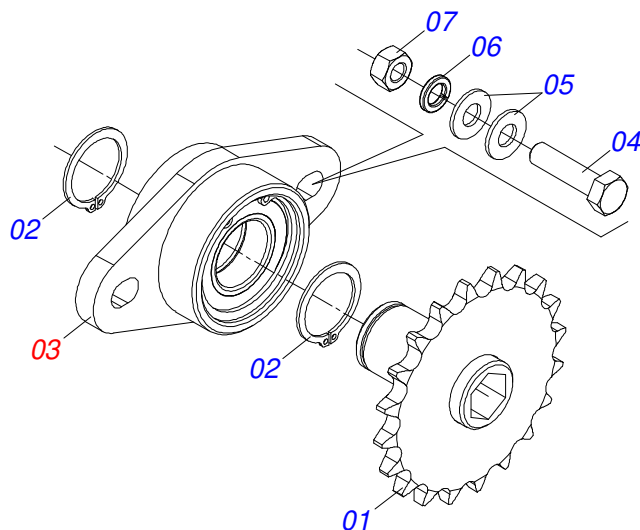


Item	Code	Description	See page	QT
01	0511063106	20Z AXLE BEARING DOUBLE		01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		02
03	0521055215	DOUBLE TRANSMISSION BEARING	131	01
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

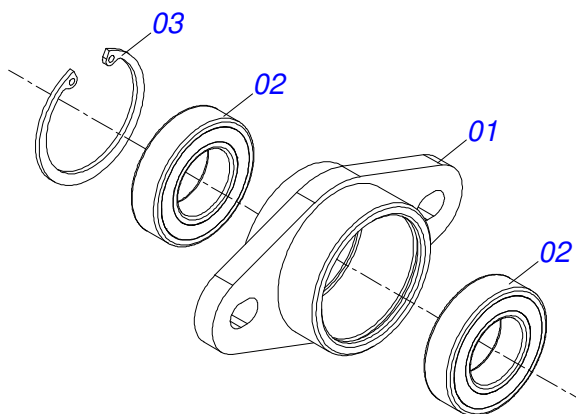


Item	Code	Description	See page	QT
01	0502011987	DOUBLE HOUSING BEARING		01
02	0503019356	BEARING 6005 2RS1		02
03	0503011105	SEAL RING		01

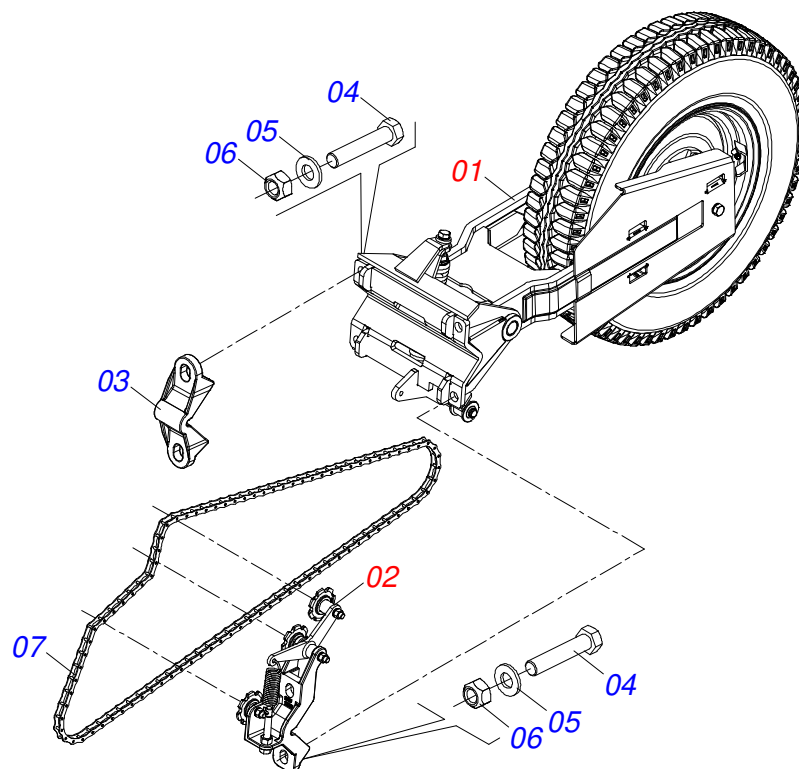


Item	Code	Description	See page	QT
01	0511059262	WHEEL SUPPORT ASSY	134	01
02	0501058240	WHEEL FASTENER WITH TENSIONER	135	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

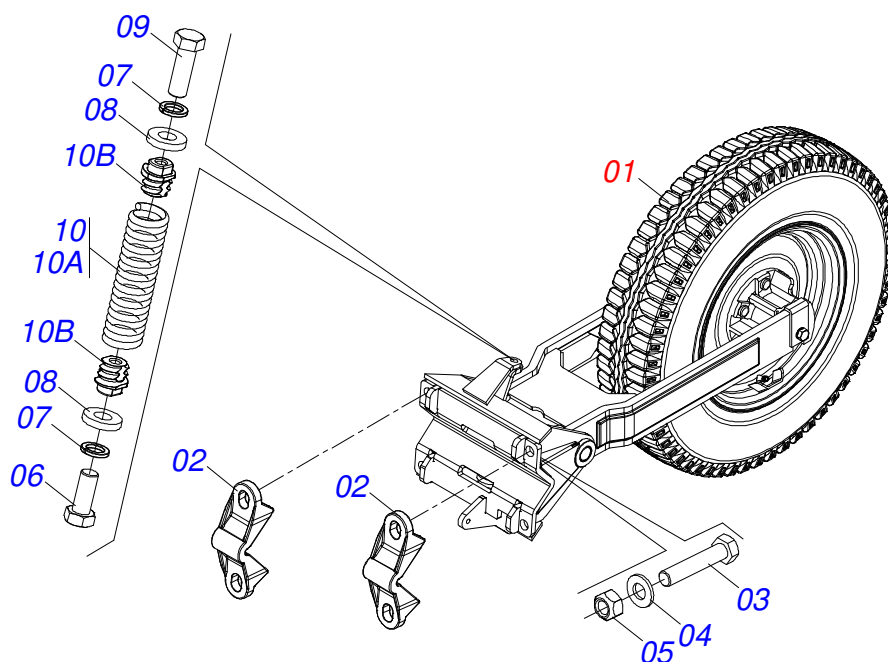


Item	Code	Description	See page	QT
01	0511054336	SUPPORT WHEELED WITHOUT TRANSMISSION	136	01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
03	0503011119	7/8" X 6" BOLT		04
04	0501014251	FLAT WASHER		04
05	0503011254	7/8" HEX SELF ADJUSTING NUT		04
06	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
07	0503010027	5/8 SPRING WASHER		02
08	0551017715	FLAT WASHER		02
09	0503013030	5/8" X 3.1/4" BOLT		01
10	0511050681	TRACTION SPRING		01
10A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
10B	0561016062	SPRING HITCH		02

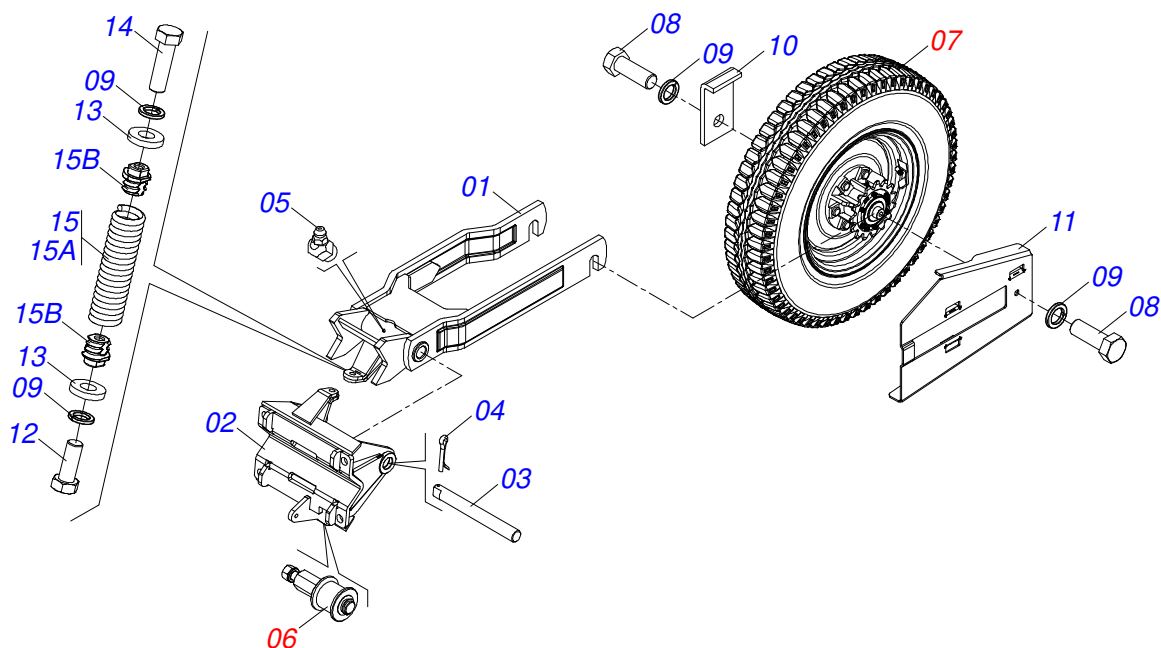


Item	Code	Description	See page	QT
01	0531062422	WHEEL ARM		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" SPLIT PIN		01
05	0503010003	1845 GREASE FITTING		01
06	0501058241	WHEEL SUPPORT CHAIN TENSIONER		01
07	0511052770	WHEEL WITH TIRE	137	01
08	0503018981	BOLT		02
09	0503010027	5/8 SPRING WASHER		04
10	0591010589	BODY LOCK WHEEL		01
11	0521069983	WHEEL COVER		01
12	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
13	0551017715	FLAT WASHER		02
14	0503013030	5/8" X 3.1/4" BOLT		01
15	0511050681	TRACTION SPRING		01
15A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
15B	0561016062	SPRING HITCH		02

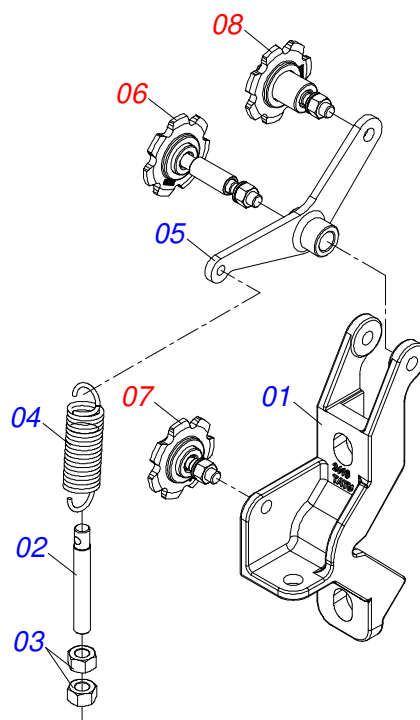


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8 NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	141	01
07	0501058244	WHEEL FIXED CHAIN TENSIONER	142	01
08	0501058242	WHEEL MOBILE CHAIN TENSIONER	143	01

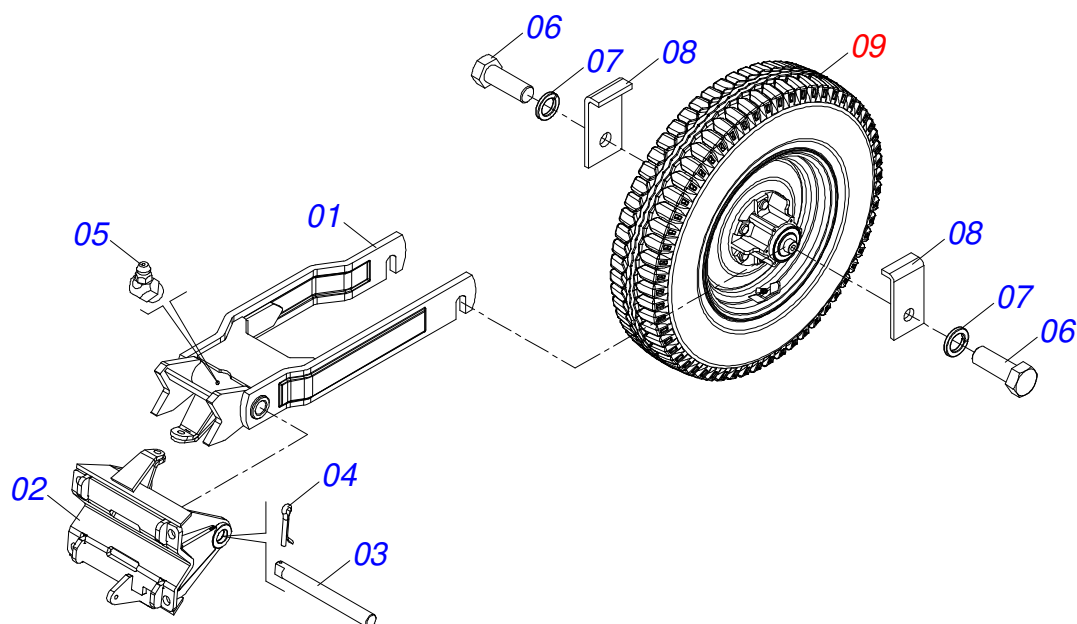


Item	Code	Description	See page	QT
01	0521061566	CARRYING WHEEL ARM TRACTION		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" SPLIT PIN		01
05	0503010003	1845 GREASE FITTING		01
06	0503018981	BOLT		02
07	0503010027	5/8 SPRING WASHER		02
08	0521012190	AXLE LOCK		02
09	0521051801	WHEEL WITH TIRE 7.00X16 WHEELED BOX 139 WITHOUT TRANSMISSION		01

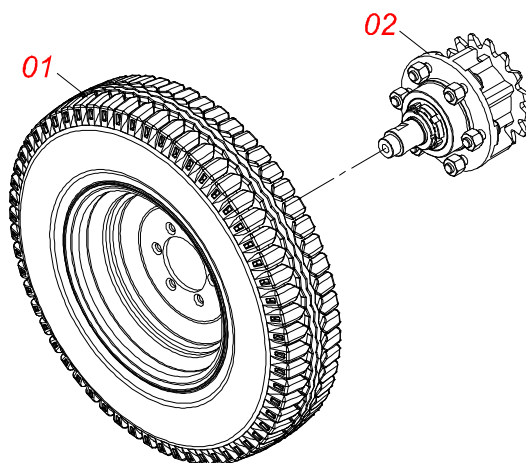


Item	Code	Description	See page	QT
01	0503062159	WHEEL WITH TIRE		01
02	0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	138	01

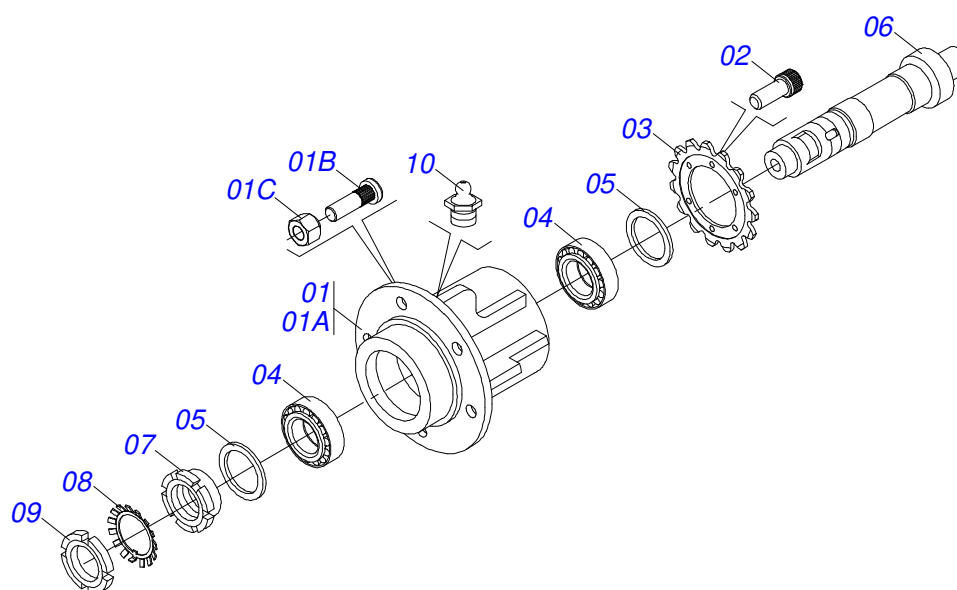


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503012550	5/16" X 3/4" BOLT		06
03	0502011339	15Z GEAR P 1.25"		01
04	0503010328	25590/25523 ROLLER BEARING		02
05	0503010804	00547-B SEAL		02
06	0521012185	TRANSMISSION WHEEL AXLE		01
07	0511015949	LOCK NUT		01
08	0503010329	LOCK WASHER		01
09	0503010330	KM 9 LOCKNUT		01
10	0503010002	1800 GREASE FITTING		01

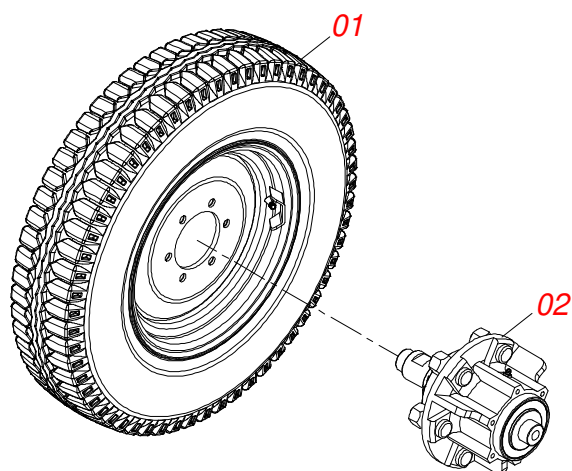


Item	Code	Description	See page	QT
01	0503062159	WHEEL WITH TIRE		01
02	0521051800	WHEELED WITHOUT TRANSMISSION WITHOUT TIRE	140	01

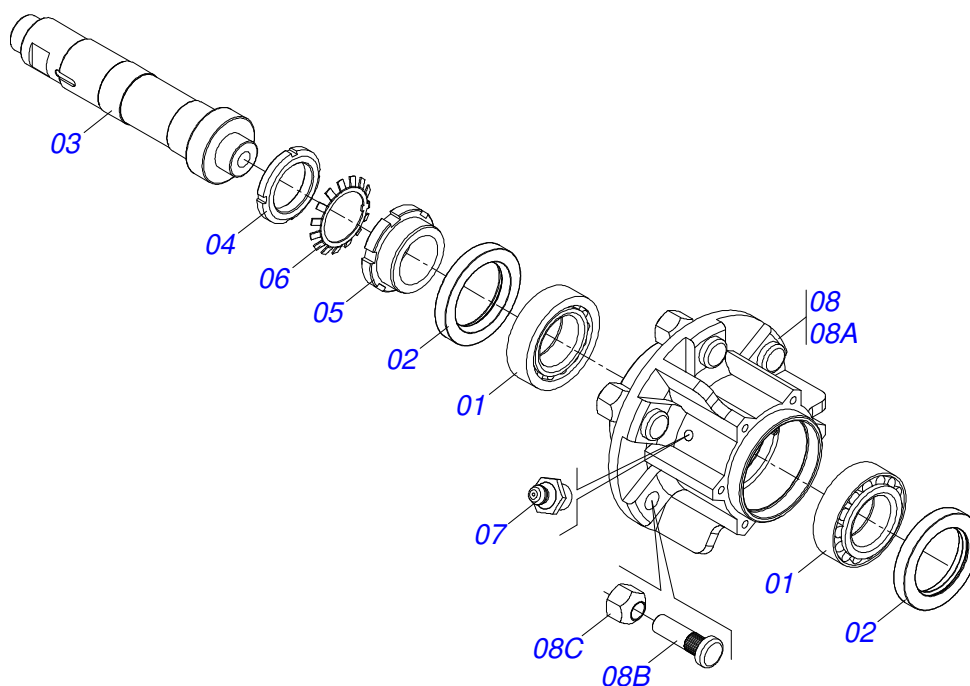


Item	Code	Description	See page	QT
01	0503010328	25590/25523 ROLLER BEARING		02
02	0503010804	00547-B SEAL		02
03	0521012185	TRANSMISSION WHEEL AXLE		01
04	0503010330	KM 9 LOCKNUT		01
05	0511015949	LOCK NUT		01
06	0503010329	LOCK WASHER		01
07	0503010002	1800 GREASE FITTING		01
08	0501110721	WHEEL HUB WITH SCREW / NUTS		01
08A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
08B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
08C	0503016516	5/8 UNF CONIC NUT		06

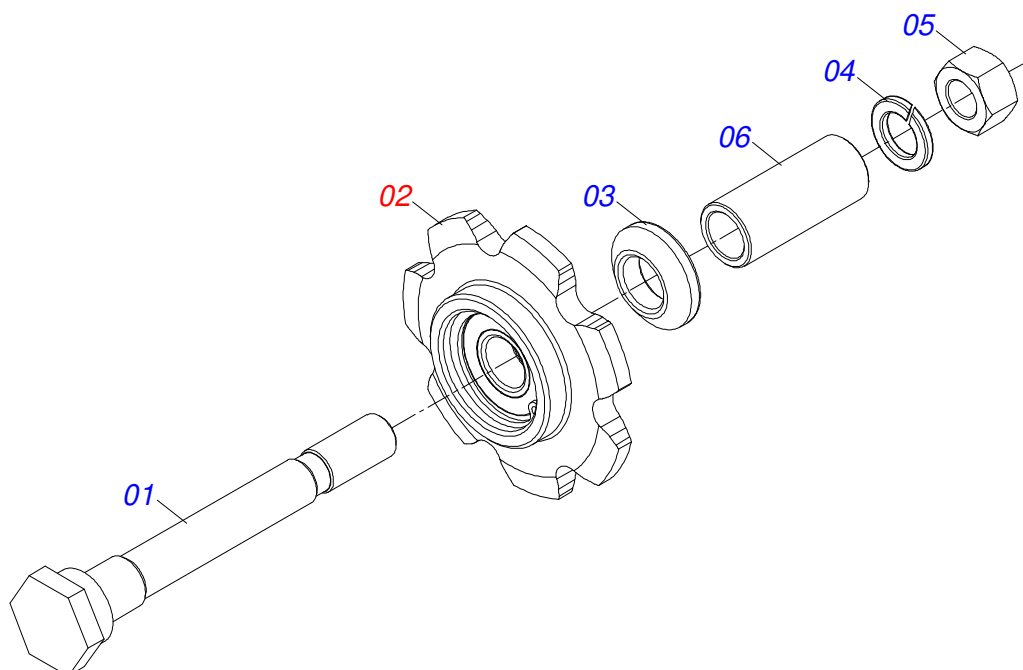


Item	Code	Description	See page	QT
01	0551018245	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	144	01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0551018239	SLEEVE 19 X 13,50 X 45		01

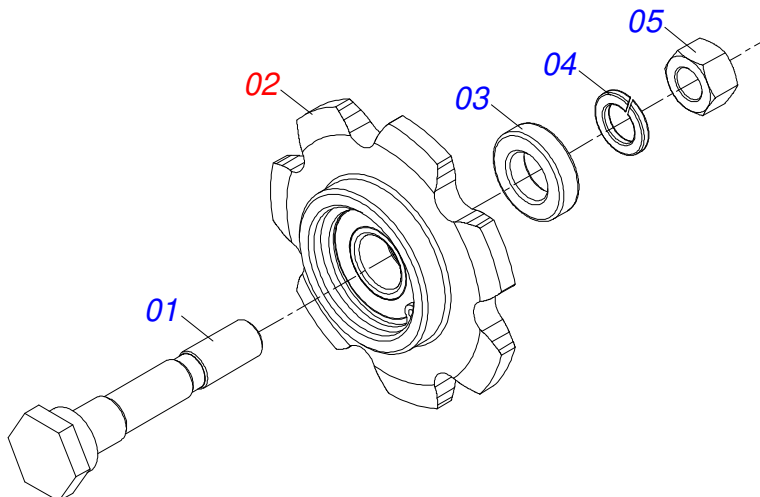


Item	Code	Description	See page	QT
01	0551018252	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	144	01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

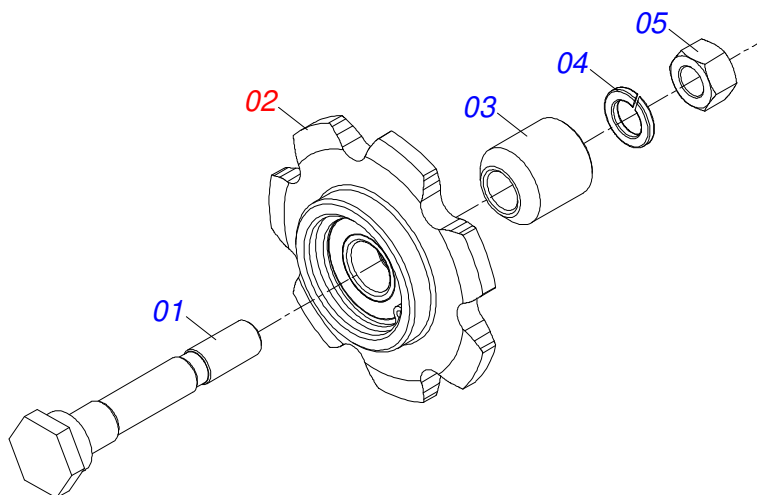

Item	Code	Description	See page	QT
01	0551018244	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	144	01
03	0591017923	15,30 X 30 X 32 SLEEVE		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

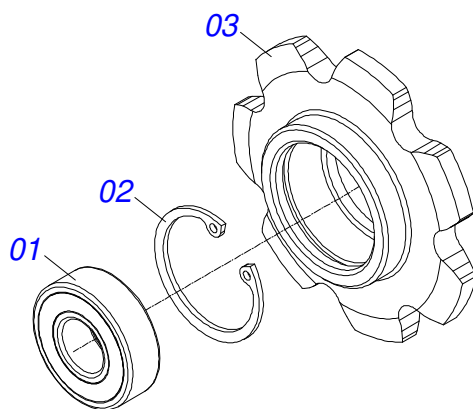


Item	Code	Description	See page	QT
01	0503012882	BEARING		01
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012853	GEAR		01

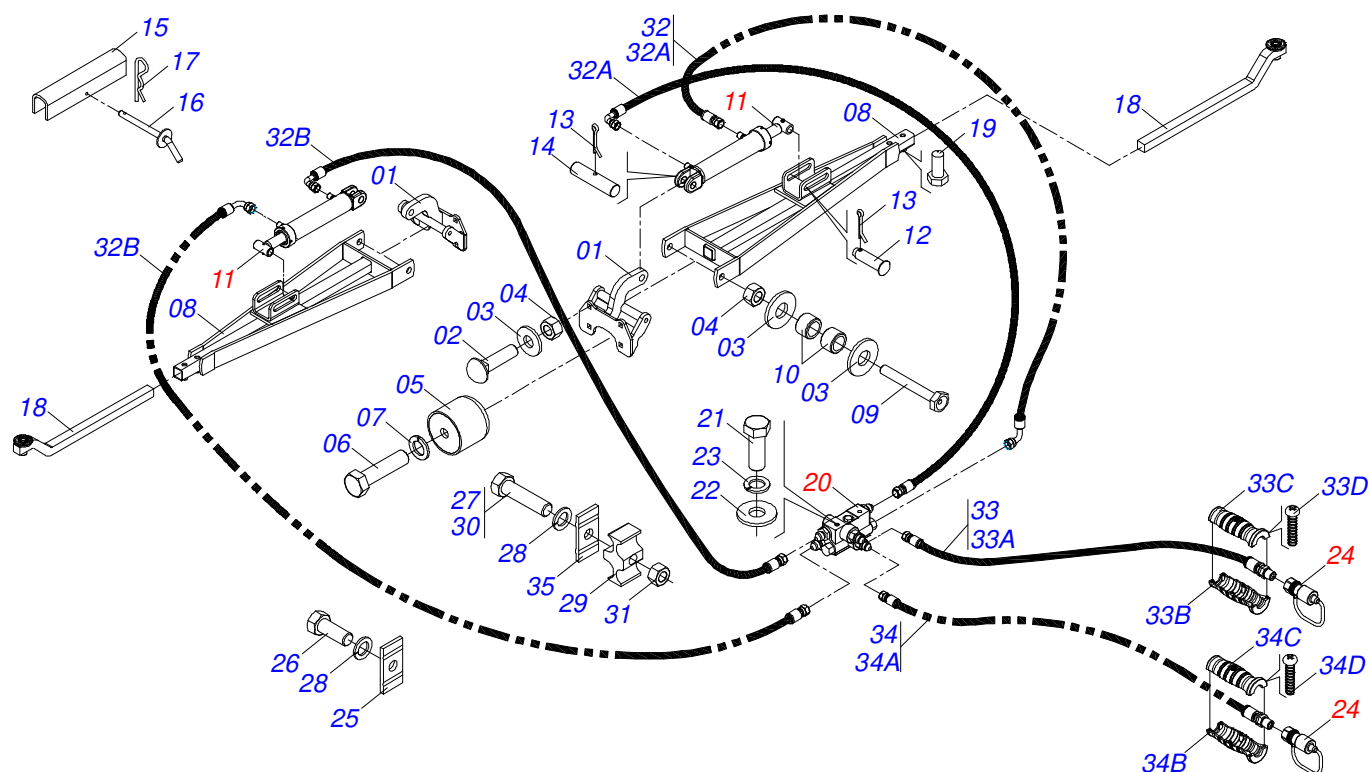


Item	Code	Description	See page	QT
01	0511069622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
03	0501012140	FLAT WASHER		12
04	0503012412	5/8" UNC SELF LOCKING NUT		10
05	0503011070	BEATER		02
06	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
07	0503010019	1/2" SPRING WASHER		02
08	0511061811	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0511058449	HYDRAULIC CYLINDER	151	02
12	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
13	0503010523	1/4" X 2" SPLIT PIN		04
14	0511015779	1" X 4.2" AXLE		02
15	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
16	0501068994	8,30 X 78 LOCK PIN		02
17	0503030168	HITCH PIN CLIP		02
18	0501066949	1235 TURNBUCKLE		02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
20	0501054649	HBM SEQUENTIAL VALVE	153	01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
22	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
23	0503010025	3/8 SPRING WASHER		02
24	0501053834	MALE QUICK COUPLER	48	02
25	0531011180	UPPER BODY CLIP		10
26	0503011102	BOLT 7/16 UNC X 1.1/4 C S G.5 ZN		04
27	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
28	0503010180	7/16" SPRING WASHER		10
29	0502012702	BODY SUPPORT CLAMP		10
30	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
31	0503010244	7/16" NUT		04

Item	Code	Description	See page	QT
32	0511059235	HYDRAULIC MARKER HAND SET		01
32A	0501081046	3/8" X 161.4" TC-TM HOSE ASSY		02
32B	0501081967	3/8" X 151" TR-TC HOSE		02
33	0521052277	HOSE 3/8 X 4212 TC-TM PURPLE / RED		01
33A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
33B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
33C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
33D	0503018952	PLASTIC BOLT		06
34	0521052278	HOSE 3/8 X 4212 TC-TM PURPLE / BLUE		01
34A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
34C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
34D	0503018952	PLASTIC BOLT		06

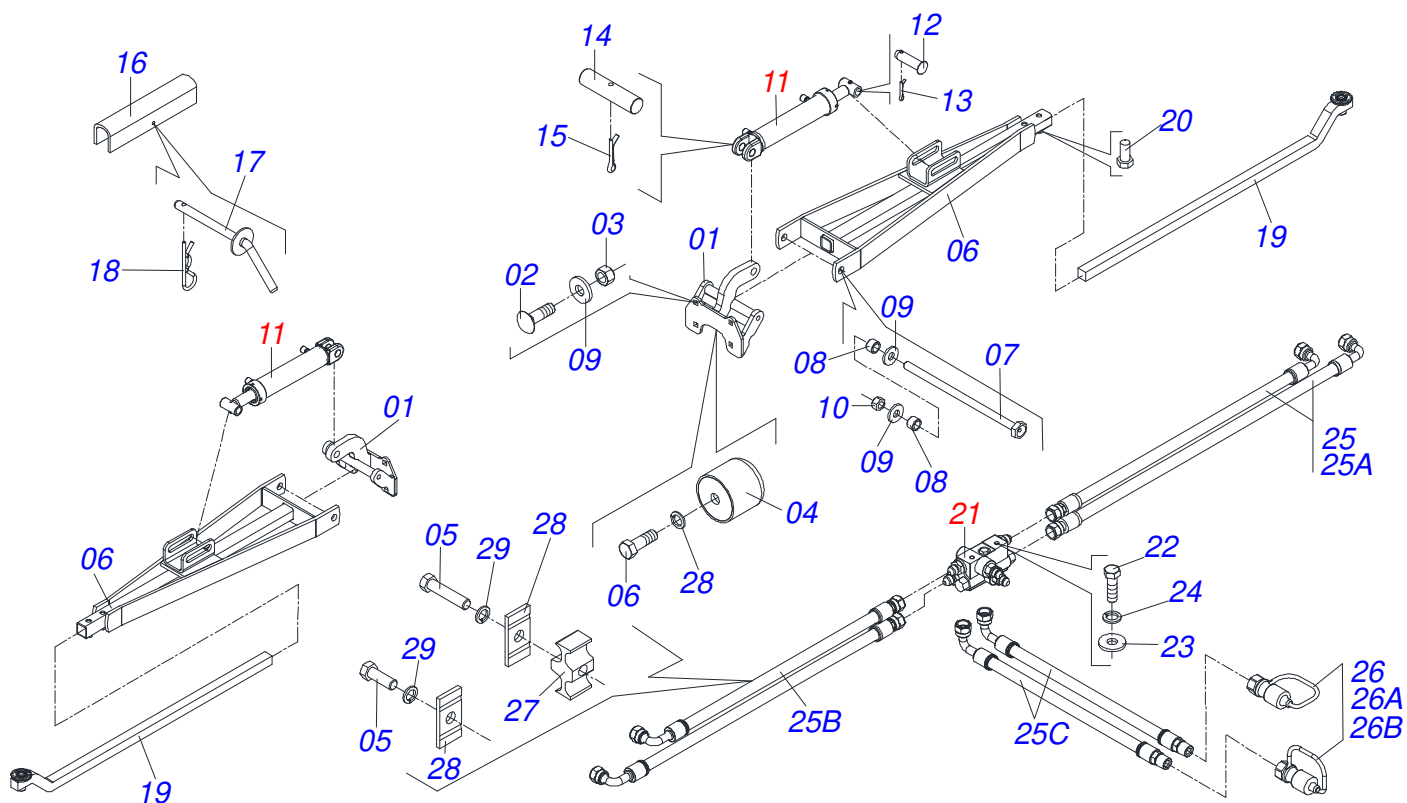


Item	Code	Description	See page	QT
001	0511069622	ROW MARKER ARM SUPPORT		02
002	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
003	0503012412	5/8" UNC SELF LOCKING NUT		08
004	0503011070	BEATER		02
005	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
006	0511061811	ROW MARKER ARM		02
007	0521061655	BOLT 5/8 UNC X 320 MM		02
008	0521010479	SLEEVE ARTICULATION		04
009	0501012140	FLAT WASHER		04
010	0503012412	5/8" UNC SELF LOCKING NUT		02
011	0511058449	HYDRAULIC CYLINDER	151	02
012	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
013	0503010523	1/4" X 2" SPLIT PIN		02
014	0511015779	1" X 4.2" AXLE		02
015	0503010523	1/4" X 2" SPLIT PIN		02
016	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
017	0501068994	8,30 X 78 LOCK PIN		02
018	0503030168	HITCH PIN CLIP		02
019	0501066949	1235 TURNBUCKLE		02
020	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
021	0501054649	HBM SEQUENTIAL VALVE	153	01
022	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
023	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
024	0503010025	3/8 SPRING WASHER		02
025	0511057093	HYDRAULIC MARKER HYGIENE SET		01
025A	0501080388	3/8 X 4300 TR-TC HOSE ASSY		02
025B	0501081791	HOSE ASSY		02
025C	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
026	0501053834	MALE QUICK COUPLER	48	02
026A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
026B	0503011882	MALE QUICK COUPLER CAP		01

Item	Code	Description	See page	QT
027	0502012702	BODY SUPPORT CLAMP		02
028	0531011180	UPPER BODY CLIP		08
029	0503010180	7/16" SPRING WASHER		02

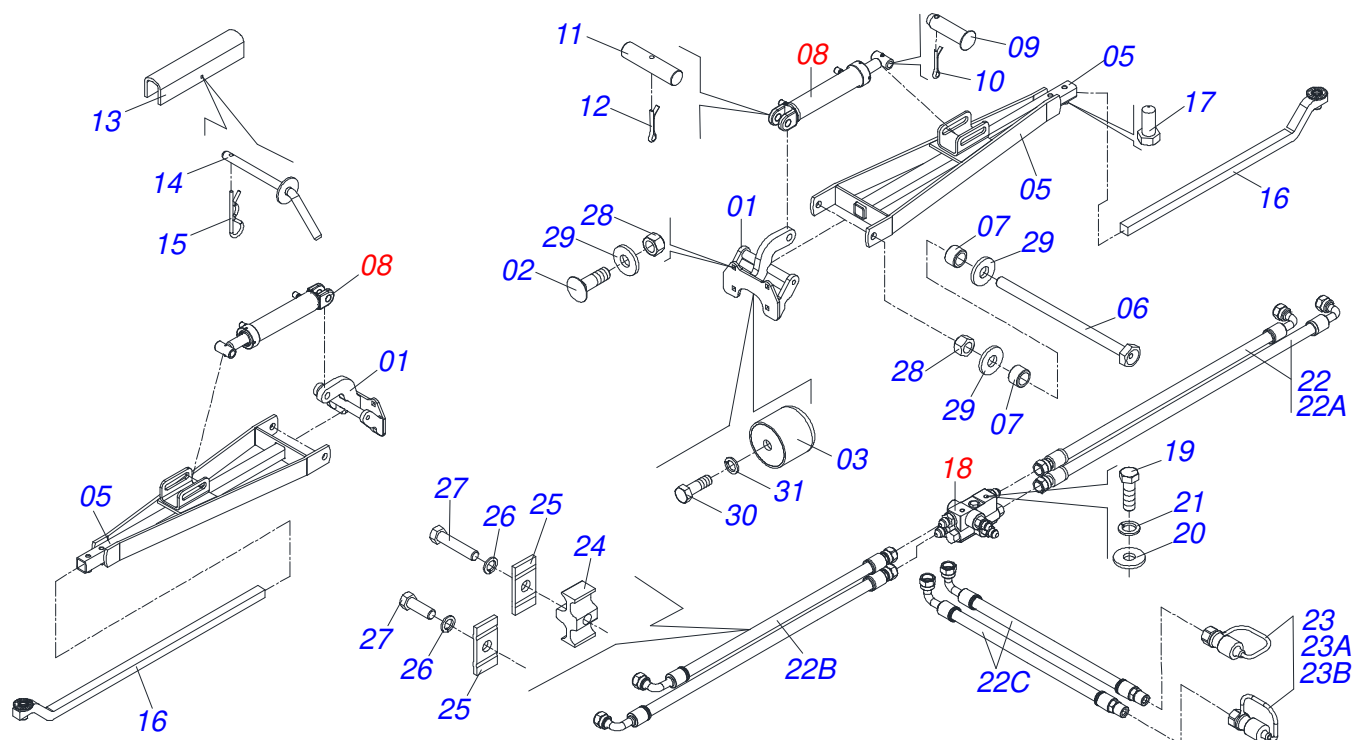


Item	Code	Description	See page	QT
01	0511069622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
03	0503011070	BEATER		02
04	0503011336	1/2" HEX SELF ADJUSTING NUT		02
05	0511061811	ROW MARKER ARM		02
06	0521061655	BOLT 5/8 UNC X 320 MM		02
07	0521010479	SLEEVE ARTICULATION		04
08	0511058449	HYDRAULIC CYLINDER	151	02
09	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
10	0503010523	1/4" X 2" SPLIT PIN		02
11	0511015779	1" X 4.2" AXLE		02
12	0503010523	1/4" X 2" SPLIT PIN		02
13	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
14	0501068994	8,30 X 78 LOCK PIN		02
15	0503030168	HITCH PIN CLIP		02
16	0501066949	1235 TURNBUCKLE		02
17	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
18	0501054649	HBM SEQUENTIAL VALVE	153	01
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
21	0503010025	3/8 SPRING WASHER		02
22	0511057094	HYDRAULIC HOSE MARKER ASSY 6450		01
22A	0501081804	HOSE ASSY		02
22B	0501081093	3/8" X 188.9" TR-TC HOSE ASSY		02
22C	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
23	0501053834	MALE QUICK COUPLER	48	02
23A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
23B	0503011882	MALE QUICK COUPLER CAP		01
24	0502012702	BODY SUPPORT CLAMP		02
25	0531011180	UPPER BODY CLIP		08
26	0503010180	7/16" SPRING WASHER		02

Item	Code	Description	See page	QT
27	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
28	0503012412	5/8" UNC SELF LOCKING NUT		08
29	0501012140	FLAT WASHER		04
30	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
31	0503010019	1/2" SPRING WASHER		02

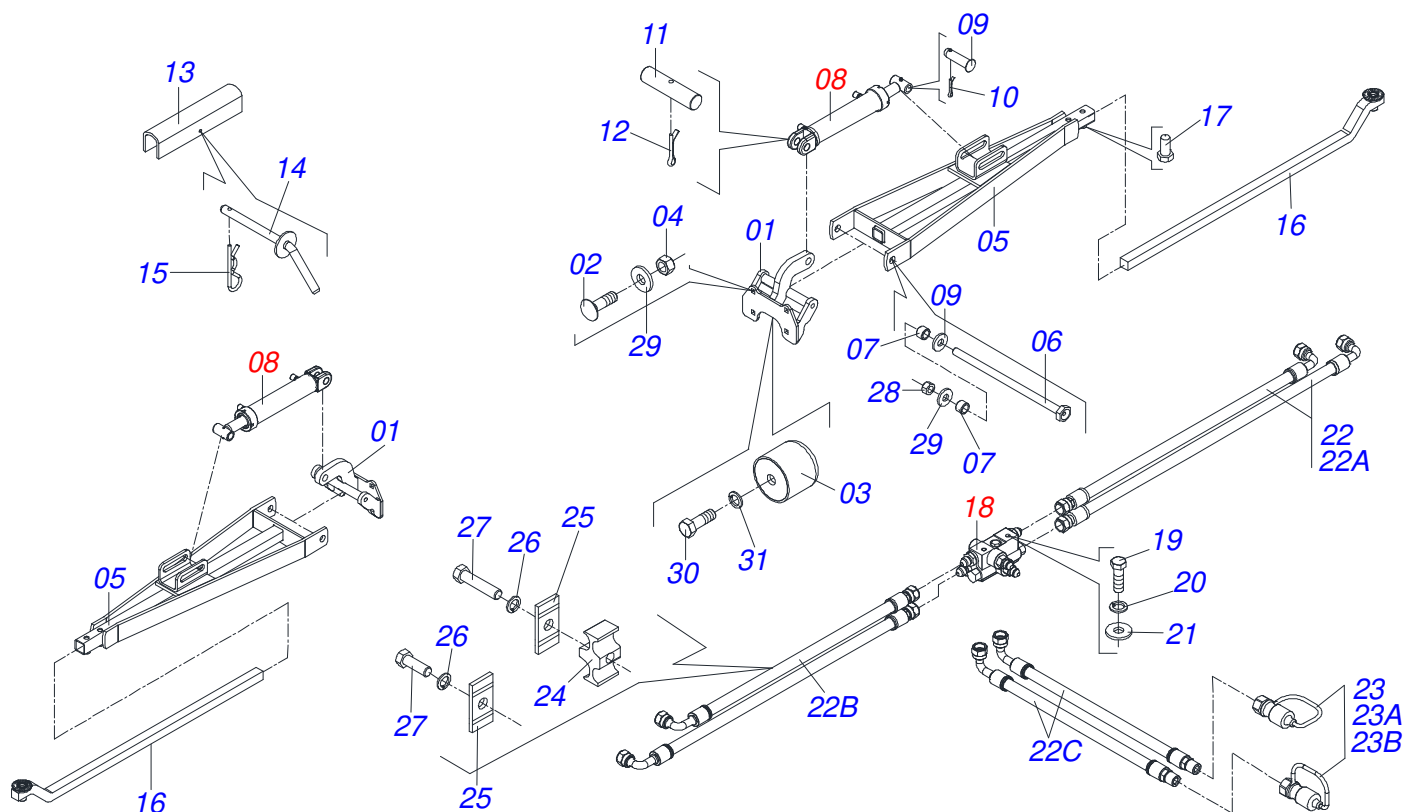


Item	Code	Description	See page	QT
001	0511069622	ROW MARKER ARM SUPPORT		02
002	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
003	0503011070	BEATER		02
004	0503012412	5/8" UNC SELF LOCKING NUT		02
005	0511061811	ROW MARKER ARM		02
006	0521061655	BOLT 5/8 UNC X 320 MM		02
007	0521010479	SLEEVE ARTICULATION		04
008	0511058449	HYDRAULIC CYLINDER	151	02
009	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
010	0503010523	1/4" X 2" SPLIT PIN		02
011	0511015779	1" X 4.2" AXLE		02
012	0503010523	1/4" X 2" SPLIT PIN		02
013	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
014	0501068994	8,30 X 78 LOCK PIN		02
015	0503030168	HITCH PIN CLIP		02
016	0501066949	1235 TURNBUCKLE		02
017	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
018	0501054649	HBM SEQUENTIAL VALVE	153	01
019	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
020	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
021	0503010025	3/8 SPRING WASHER		02
022	0511057438	HYDRAULIC MARKER HYGIENE SET		01
022A	0501080394	HOSE TR-TC		02
022B	0501080725	3/8 X 5300 TR-TC HOSE ASSY		02
022C	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
023	0501053834	MALE QUICK COUPLER	48	02
023A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
023B	0503011882	MALE QUICK COUPLER CAP		01
024	0502012702	BODY SUPPORT CLAMP		02
025	0531011180	UPPER BODY CLIP		08
026	0503010180	7/16" SPRING WASHER		02


Item	Code	Description	See page	QT
027	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
028	0503012412	5/8" UNC SELF LOCKING NUT		08
029	0501012140	FLAT WASHER		04
030	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
031	0503010019	1/2" SPRING WASHER		02

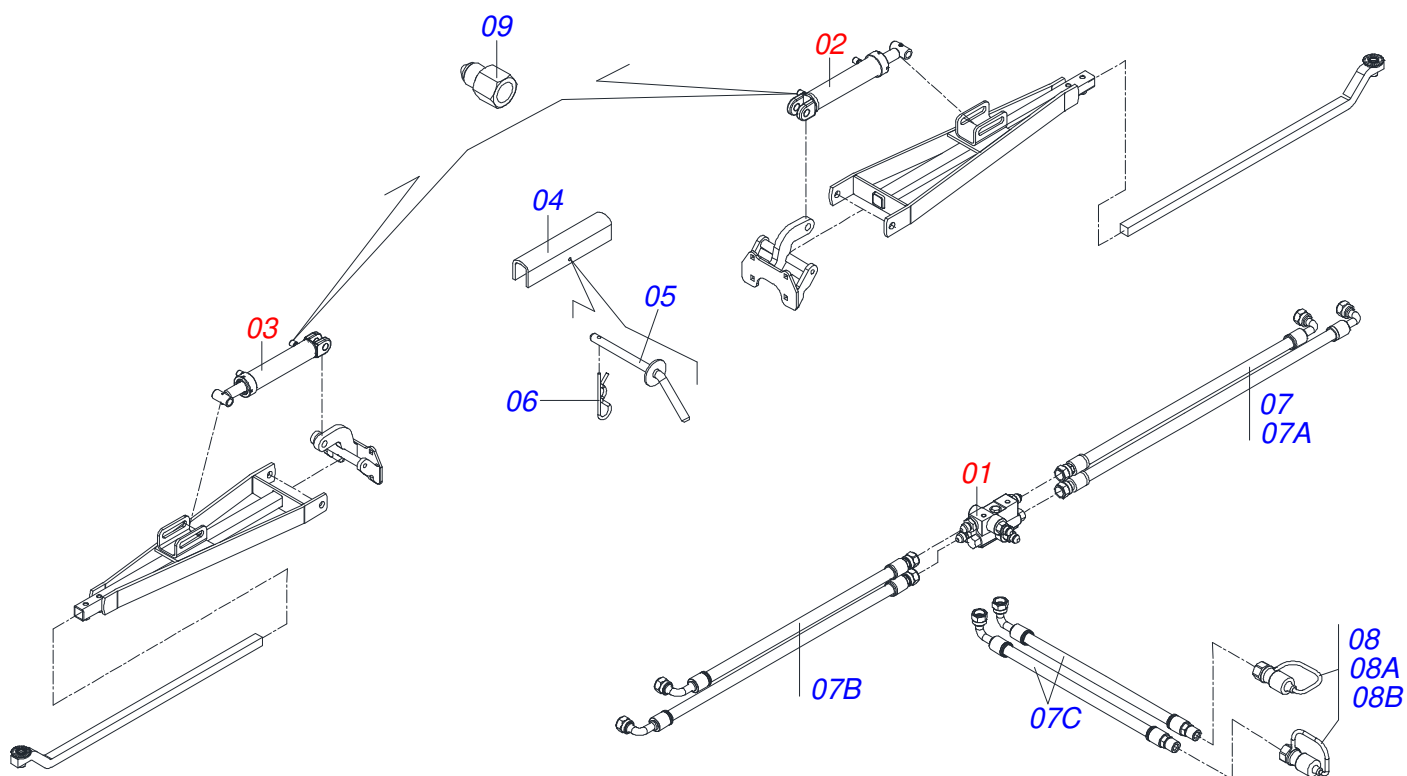


Item	Code	Description	See page	QT
01	0501054649	HBM SEQUENTIAL VALVE	153	01
02	0511058431	HYDRAULIC CYLINDER	152	01
03	0511058431	HYDRAULIC CYLINDER	152	01
04	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
05	0501068994	8,30 X 78 LOCK PIN		02
06	0503030168	HITCH PIN CLIP		02
07	0511057890	17 E 500 HYDRAULIC MARKER HOSE ASSEMBLY		01
07A	0501080383	3/8" X 197" TC-TM HOSE		02
07B	0501081748	HOSE		02
07C	0501081981	HOSES		02
08	0501053834	MALE QUICK COUPLER	48	02
08A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
08B	0503011882	MALE QUICK COUPLER CAP		01
09	0511018012	HIDRAULIC ADAPTER		04

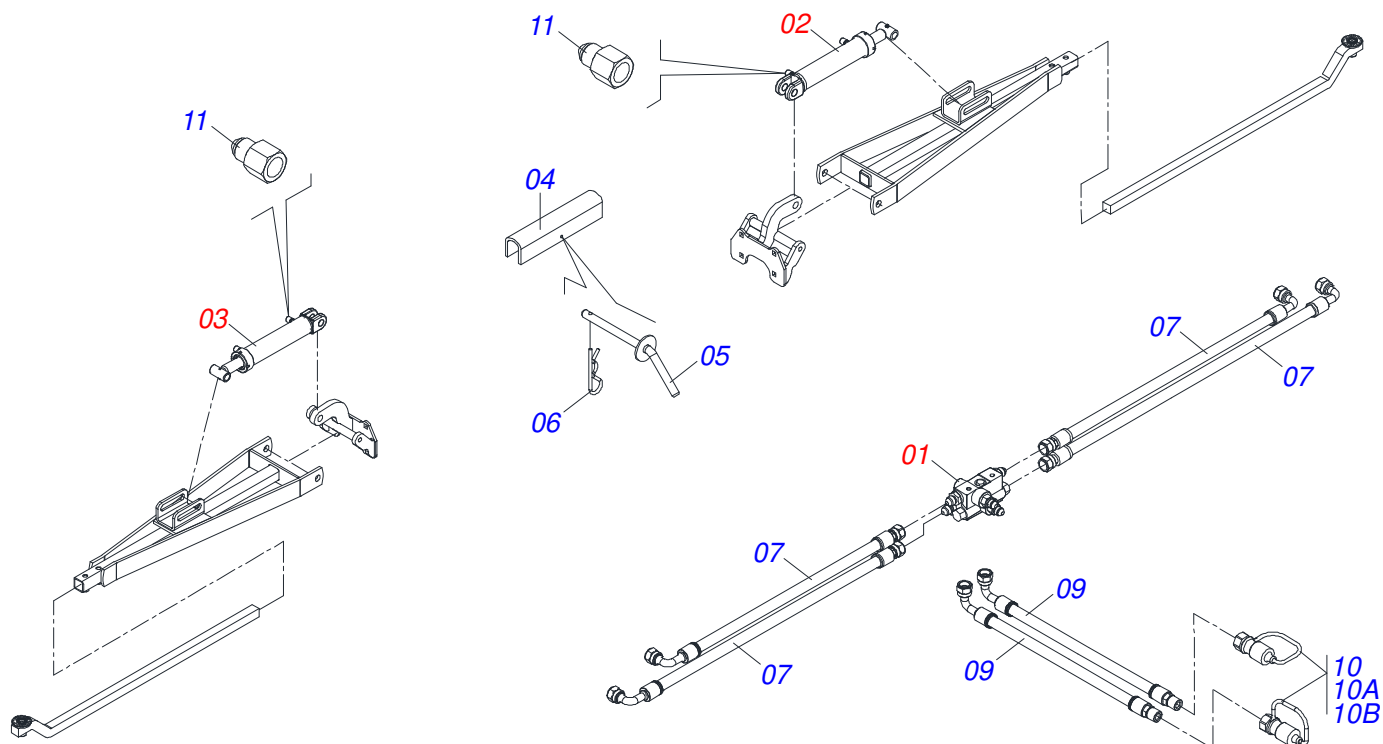


Item	Code	Description	See page	QT
001	0501054649	HBM SEQUENTIAL VALVE	153	01
002	0511058431	HYDRAULIC CYLINDER	152	01
003	0511058431	HYDRAULIC CYLINDER	152	01
004	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
005	0501068994	8,30 X 78 LOCK PIN		02
006	0503030168	HITCH PIN CLIP		02
007	0501081980	HOSE 3/8 X 5200 TC-TM		02
008	0501081255	TR-TC HOSE ASSY		02
009	0501080744	3/8" X 248" TR-TC HOSE ASSY		02
010	0501053834	MALE QUICK COUPLER	48	02
010A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
010B	0503011882	MALE QUICK COUPLER CAP		01
011	0511018012	HIDRAULIC ADAPTER		04

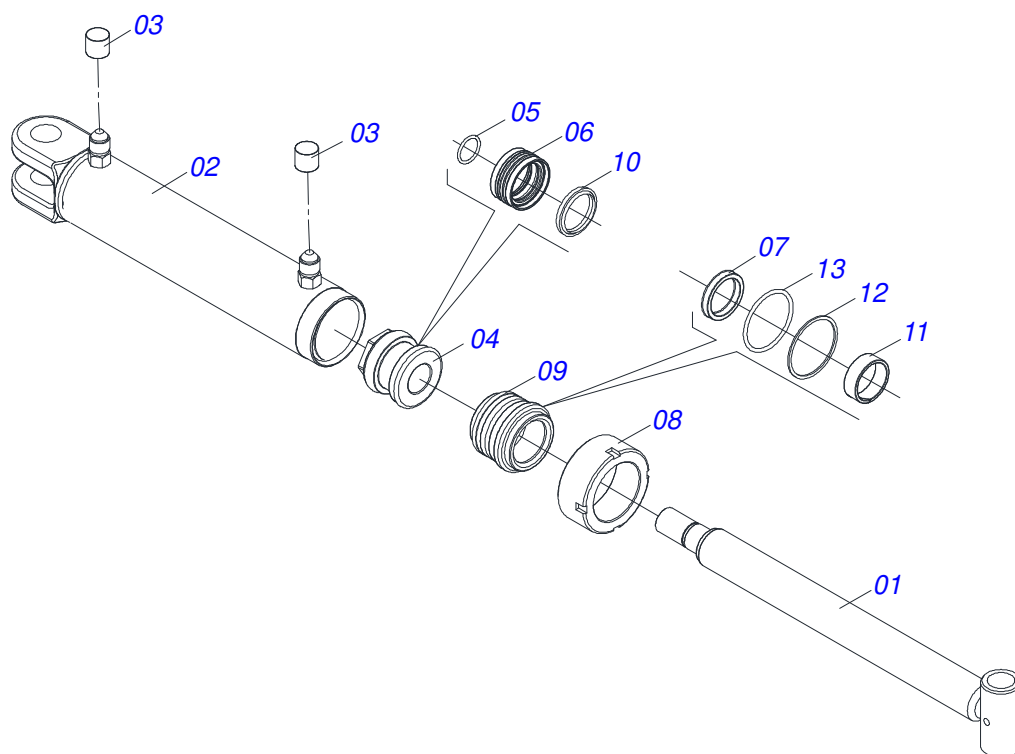


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

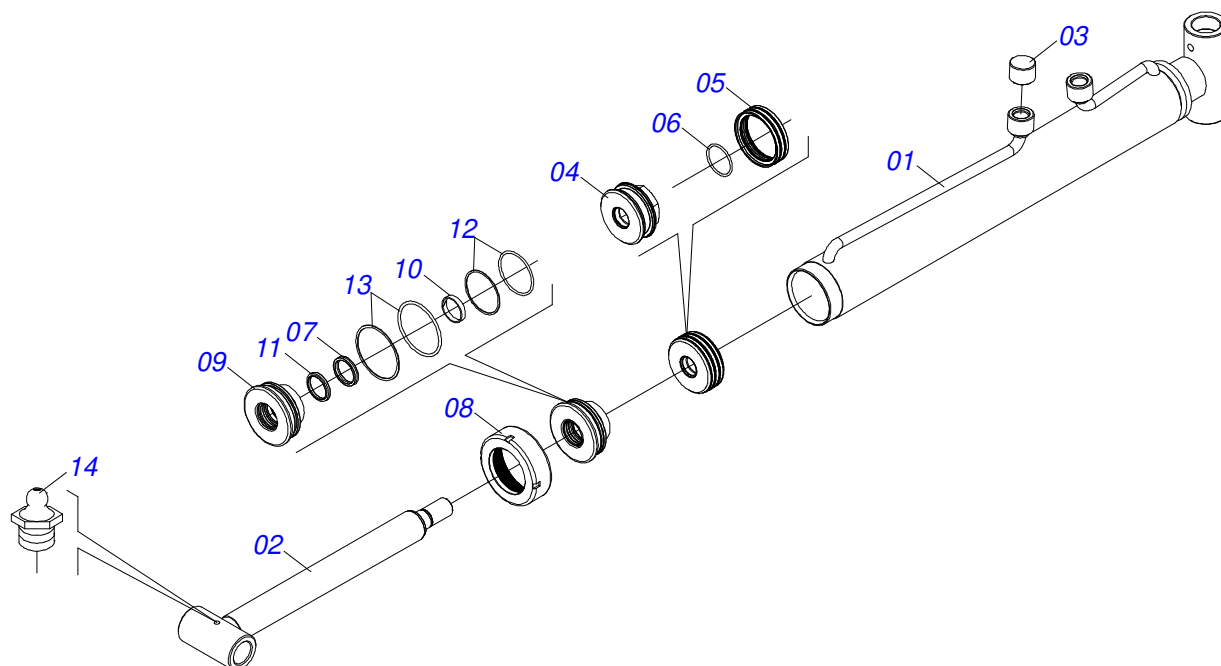


Item	Code	Description	See page	QT
01	0501067700	2.5" X 25" CYLINDER CASE		01
02	0521066632	EXTENDER		01
03	0503030384	CON PLUG N-001		02
04	0502012837	PISTON		01
05	0503018005	RING		01
06	0503011109	2-119 N 3006-9B O'RING		01
07	0503010163	D-1500 SCRAPER RING		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503018004	RING		01
11	0503018003	GASKET		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0503010002	1800 GREASE FITTING		02
15	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

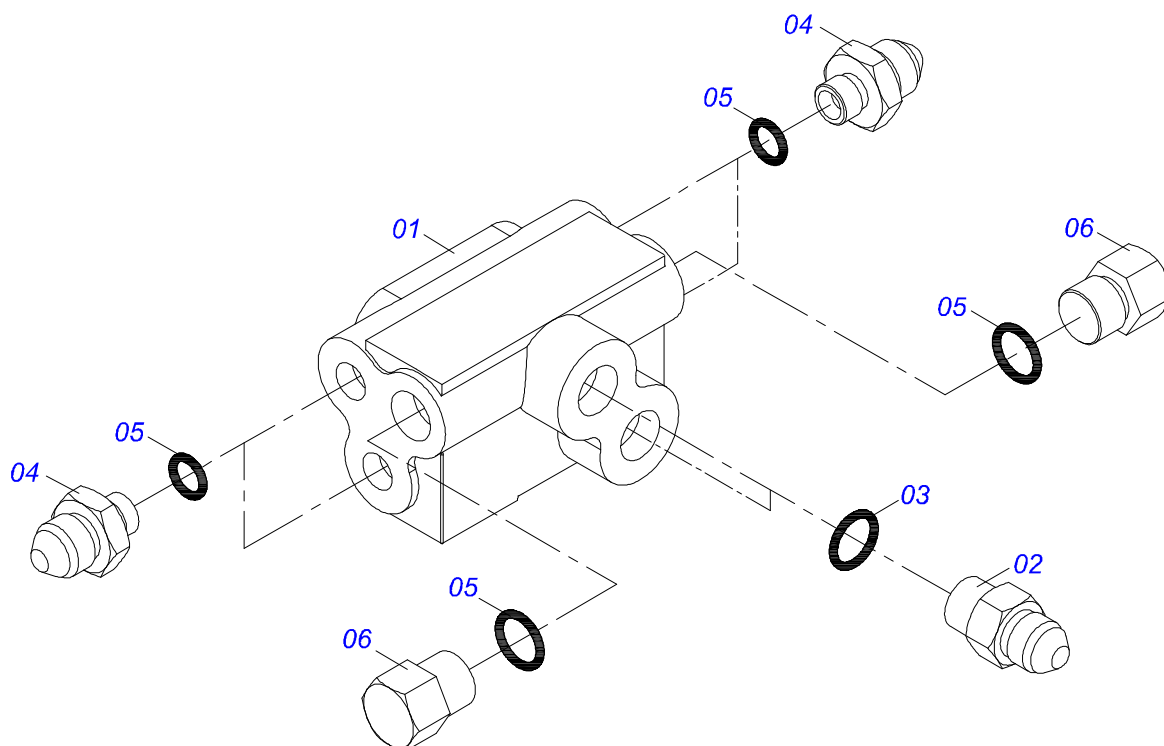


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

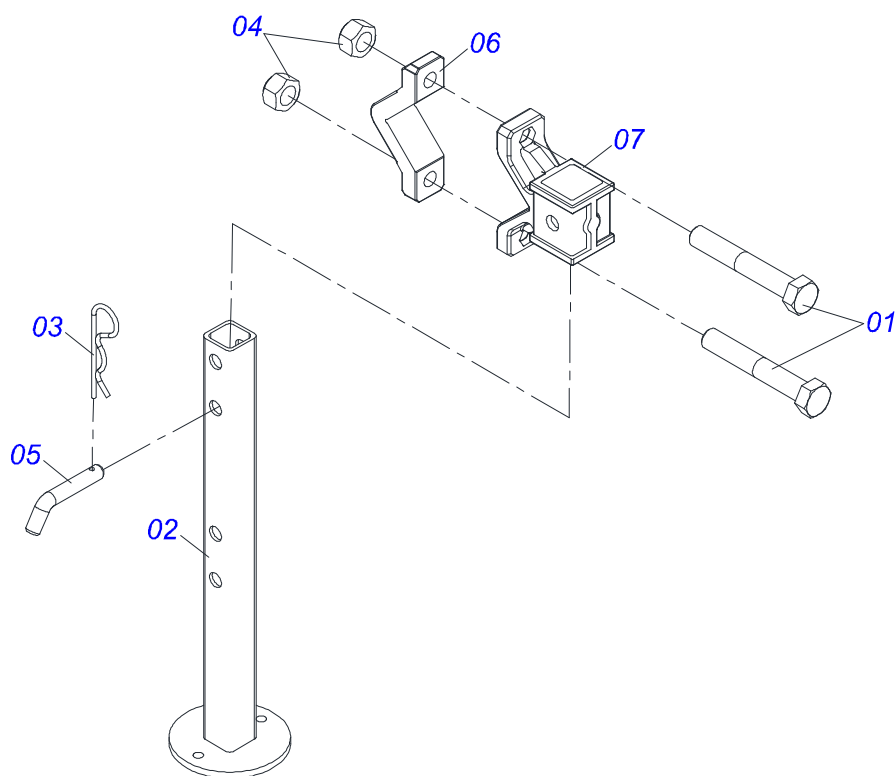


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HITCH PIN CLIP		01
04	0503012412	5/8" UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

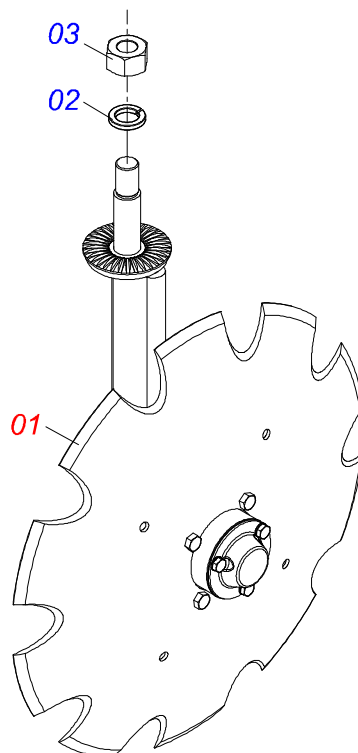


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC	156	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

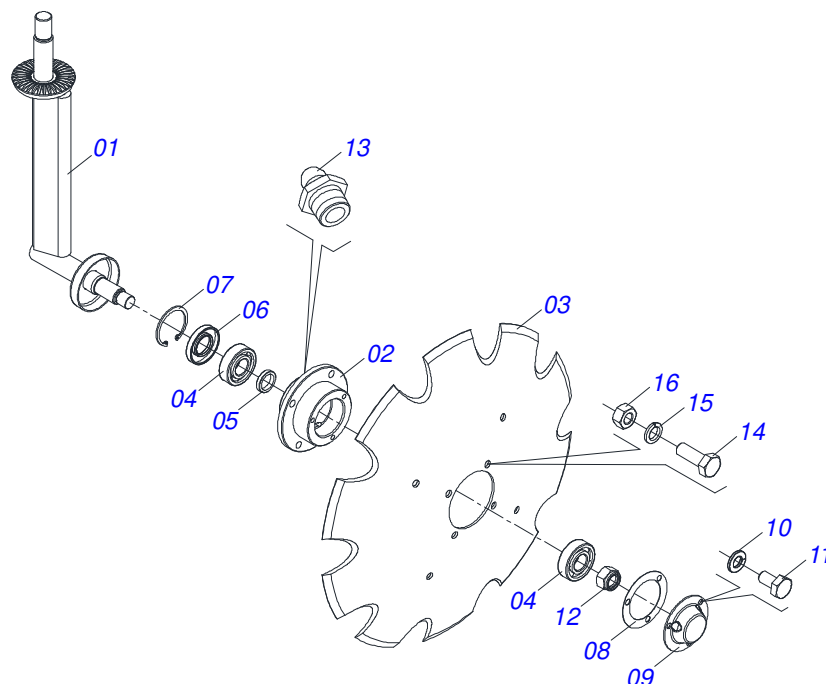

Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	PROTECTION LID		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

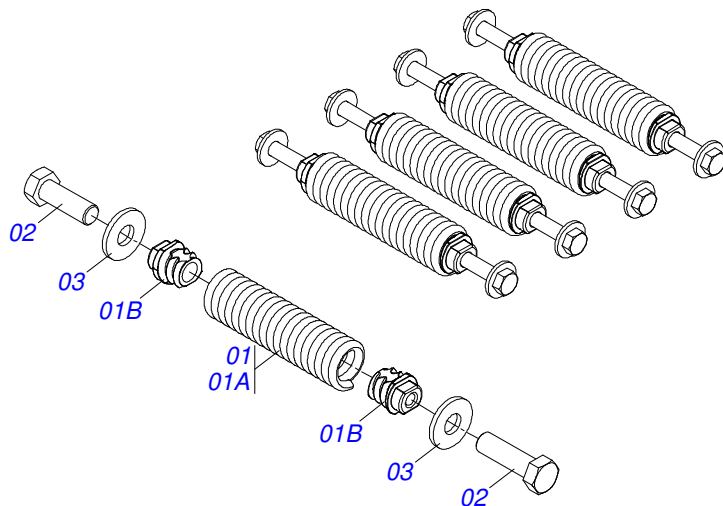


Item	Code	Description	See page	QT
01	0511050681	TRACTION SPRING		05
01A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
01B	0561016062	SPRING HITCH		02
02	0503013030	5/8" X 3.1/4" BOLT		10
03	0501012140	FLAT WASHER		10

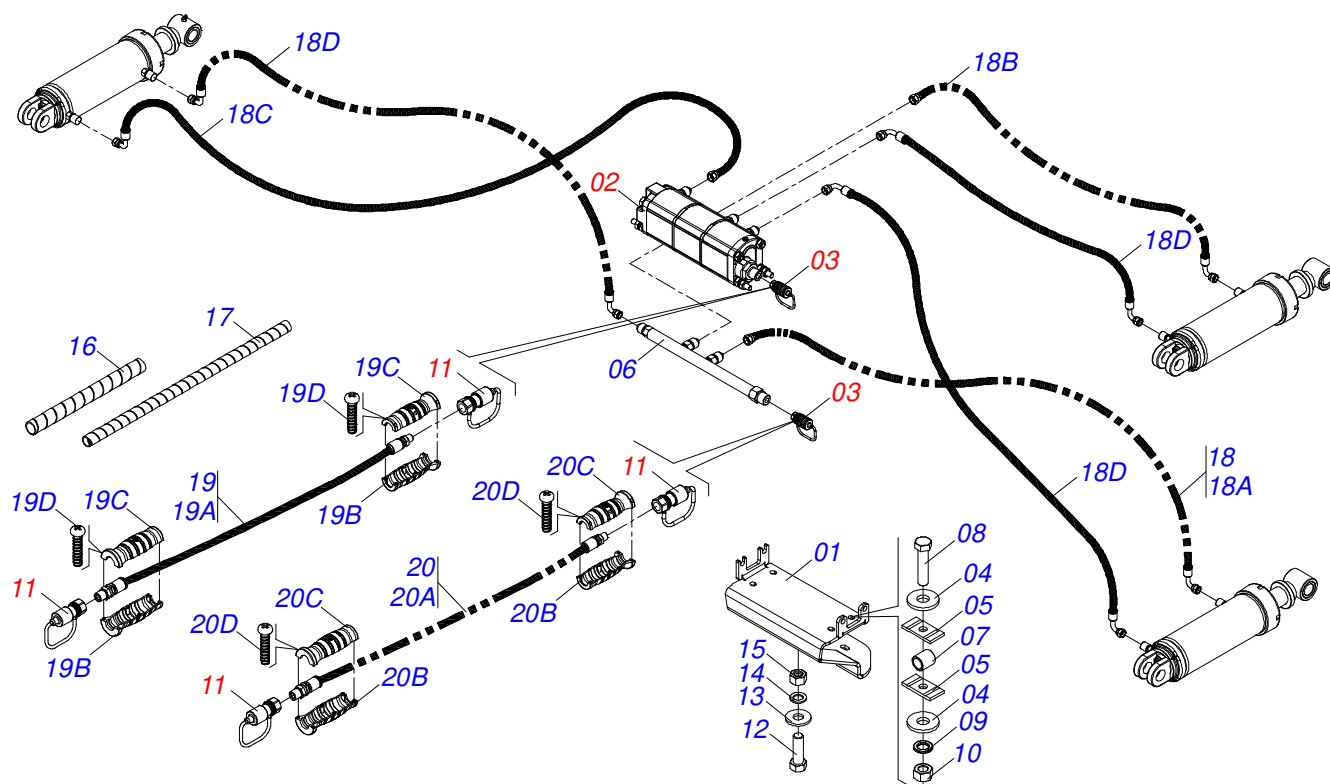


Item	Code	Description	See page	QT
01	0571013472	FIXER BODY VALVE		01
02	0511059290	VALVE ASSEMBLY	162	01
03	0501053835	FEMALE QUICK COUPLER	169	02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		04
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8 SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0501053834	MALE QUICK COUPLER	48	04
12	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
13	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
14	0503010019	1/2" SPRING WASHER		02
15	0503010060	1/2 UNC G.5 ZN HEX NUT		02
16	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
17	0571017774	SPRING PROTECTION QUICK HOSE		01
18	0511059234	HOSE KIT SYSTEM HYDRAULIC		01
18A	0501080406	3/8" X 23" TR-TC HOSE		01
18B	0501080150	3/8 X 800 TR-TC HOSE		01
18C	0501080451	3/8" X 94,5" TR-TC HOSE		01
18D	0501080370	TC-TC HOSE ASSY		03
19	0521052484	HOSE 1/2 X 4122 TM-TM BLACK / RED		01
19A	0501080881	HOSE		01
19B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
19C	0503034495	HYDRAULIC HOSE GRIP (RED)		02
19D	0503018952	PLASTIC BOLT		12
20	0521052485	HOSE 1/2 X 4122 TM-TM BLACK / BLUE		01
20A	0501080881	HOSE		01
20B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
20C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02


Item	Code	Description	See page	QT
20D	0503018952	PLASTIC BOLT		12

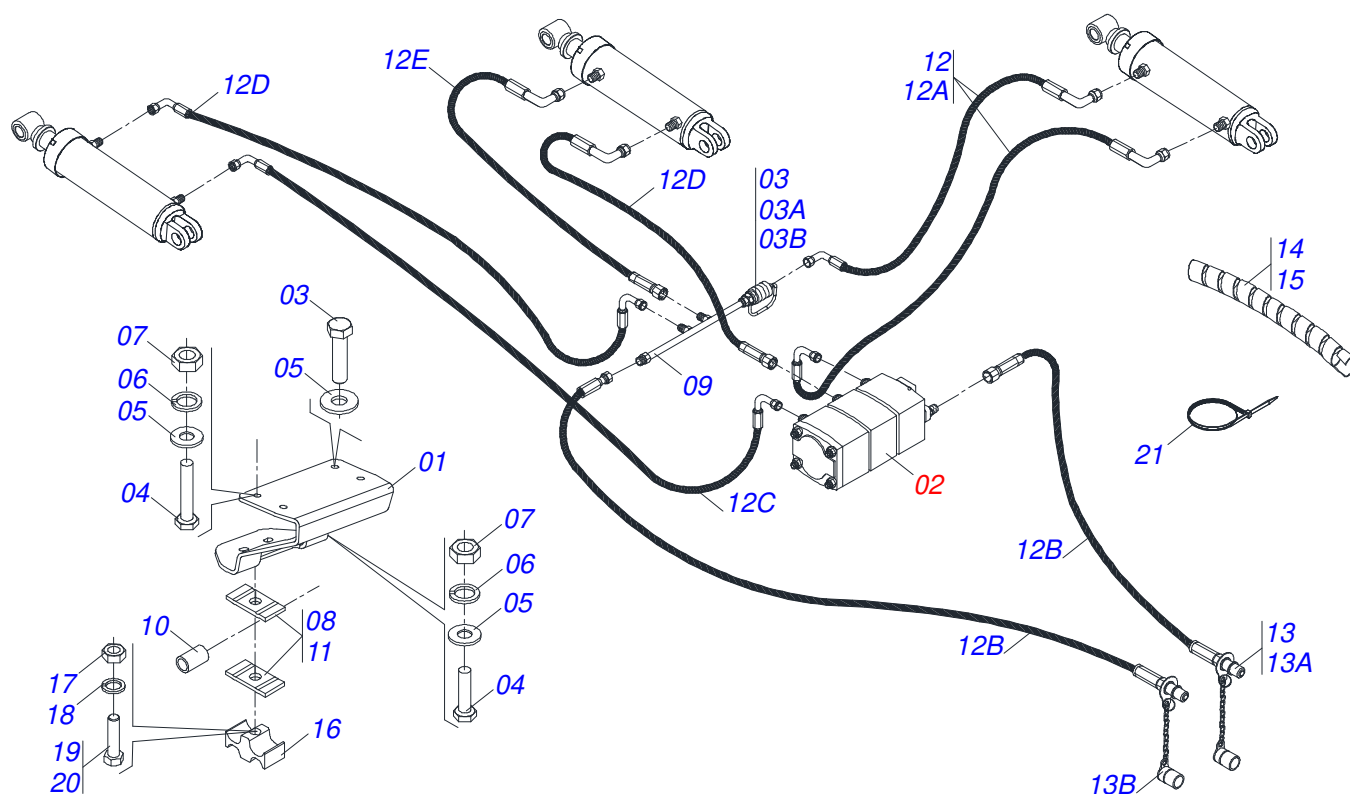


Item	Code	Description	See page	QT
001	0571013472	FIXER BODY VALVE		01
002	0511053065	TRIPLE VALVE	163	01
003	0503010237	3/8" X 1" BOLT		02
004	0503011179	3/8" X 2-1/4" BOLT		02
005	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
006	0503010025	3/8 SPRING WASHER		02
007	0503010026	3/8" NUT		02
008	0531011180	UPPER BODY CLIP		02
009	0521063909	DUCT SEAL OIL		01
010	0531013922	0.6" X 0.8" X 1" SLEEVE		02
011	0531011180	UPPER BODY CLIP		02
012	0511057092	HOSE KIT SYSTEM HYDRAULIC		01
012A	0501080406	3/8" X 23" TR-TC HOSE		01
012B	0501080150	3/8 X 800 TR-TC HOSE		01
012C	0501081930	HOSE		01
012D	0501081646	TC-TC HOSE ASSY		03
012E	0501081073	HOSE 1/2 X 4200 TC-TM		02
013	0501053834	MALE QUICK COUPLER	48	02
013A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
013B	0503011882	MALE QUICK COUPLER CAP		01
014	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
015	0571017774	SPRING PROTECTION QUICK HOSE		01
016	0502012702	BODY SUPPORT CLAMP		12
017	0503010244	7/16" NUT		04
018	0503010180	7/16" SPRING WASHER		08
019	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
020	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
021	0503013100	NYLON CLAMP		02

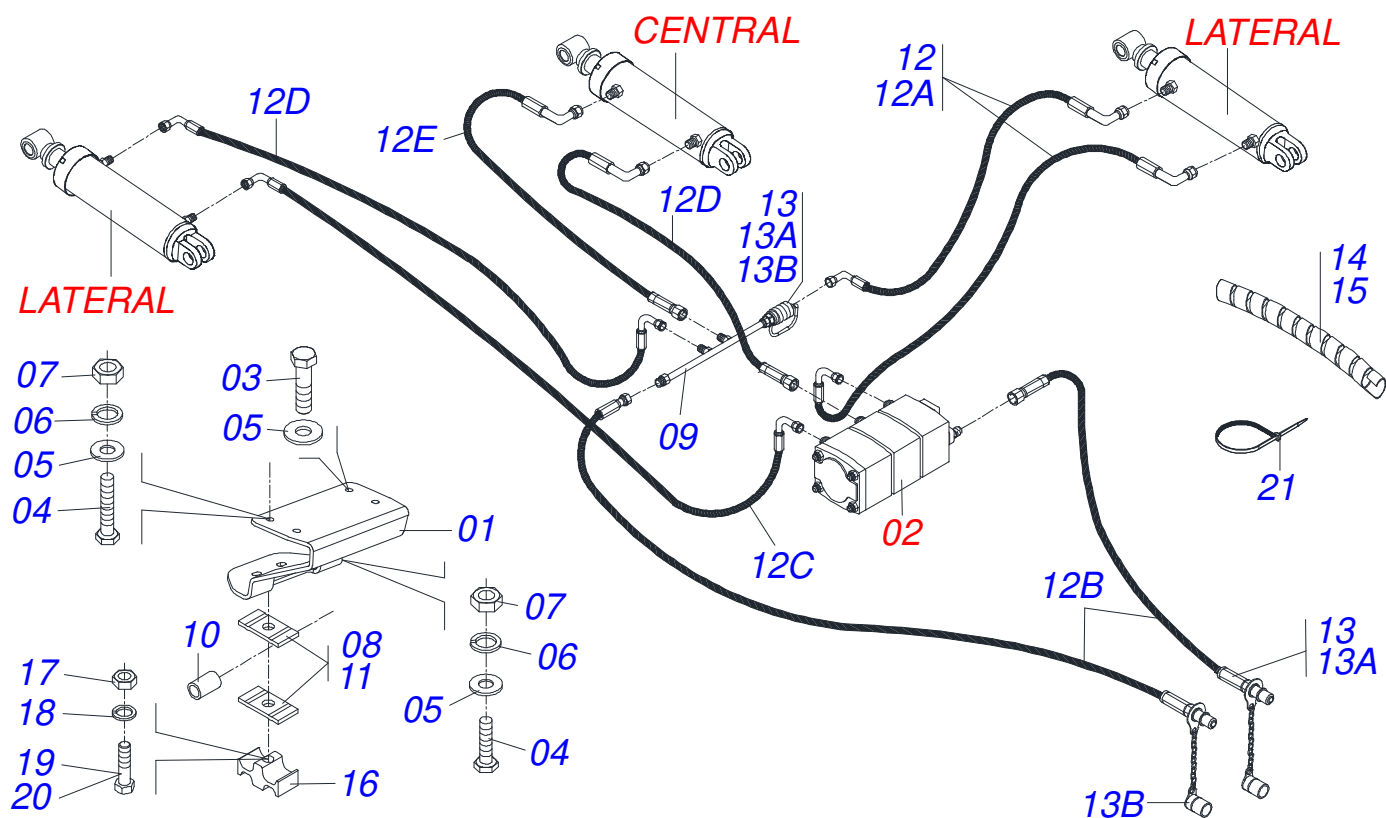


Item	Code	Description	See page	QT
001	0571013472	FIXER BODY VALVE		01
002	0511053065	TRIPLE VALVE	163	01
003	0503010371	5/16" X 1" BOLT		02
004	0503010421	5/16" X 1-1/2" BOLT		02
005	0501010694	FLAT WASHER		04
006	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
007	0503010337	5/16" NUT		04
008	0502012701	LOWER BODY CLIP		02
009	0521063909	DUCT SEAL OIL		01
010	0531013922	0.6" X 0.8" X 1" SLEEVE		02
011	0531011180	UPPER BODY CLIP		02
012	0511057676	HOSE KIT SYSTEM HYDRAULIC		01
012A	0501080406	3/8" X 23" TR-TC HOSE		01
012B	0501080150	3/8 X 800 TR-TC HOSE		01
012C	0501080392	3/8 X 3300 TR-TC HOSE		01
012D	0501080442	3/8" X 130" TC-TC HOSE ASSY		03
012E	0501081073	HOSE 1/2 X 4200 TC-TM		02
013	0501053834	MALE QUICK COUPLER	48	02
013A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
013B	0503011882	MALE QUICK COUPLER CAP		01
014	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
015	0571017774	SPRING PROTECTION QUICK HOSE		01
016	0502012702	BODY SUPPORT CLAMP		12
017	0503010244	7/16" NUT		04
018	0503010180	7/16" SPRING WASHER		08
019	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
020	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
021	0503013100	NYLON CLAMP		02

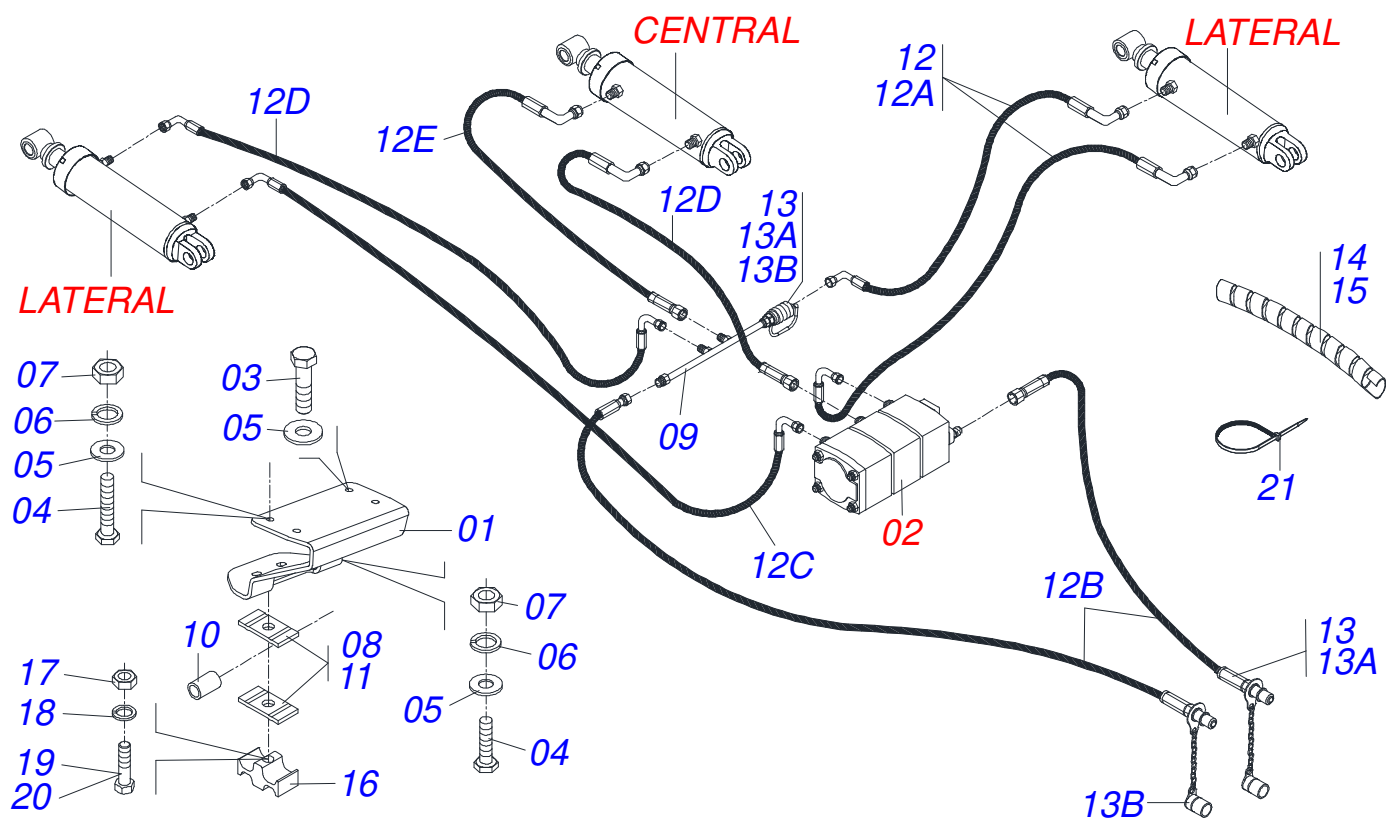


Item	Code	Description	See page	QT
001	0571013472	FIXER BODY VALVE		01
002	0511053065	TRIPLE VALVE	163	01
003	0503010237	3/8" X 1" BOLT		02
004	0503011179	3/8" X 2-1/4" BOLT		02
005	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
006	0503010025	3/8 SPRING WASHER		02
007	0503010026	3/8" NUT		02
008	0531011180	UPPER BODY CLIP		02
009	0521063909	DUCT SEAL OIL		01
010	0531013922	0.6" X 0.8" X 1" SLEEVE		02
011	0531011180	UPPER BODY CLIP		02
012	0511057083	HOSE KIT SYSTEM HYDRAULIC		01
012A	0501080406	3/8" X 23" TR-TC HOSE		01
012B	0501080150	3/8 X 800 TR-TC HOSE		01
012C	0501080388	3/8 X 4300 TR-TC HOSE ASSY		01
012D	0501080757	HOSE 3/8 X 4300 TC-TC		03
012E	0501081922	HOSE		02
013	0501053834	MALE QUICK COUPLER	48	02
013A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
013B	0503011882	MALE QUICK COUPLER CAP		01
014	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
015	0571017774	SPRING PROTECTION QUICK HOSE		01
016	0502012702	BODY SUPPORT CLAMP		12
017	0503010244	7/16" NUT		04
018	0503010180	7/16" SPRING WASHER		08
019	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
020	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
021	0503013100	NYLON CLAMP		02

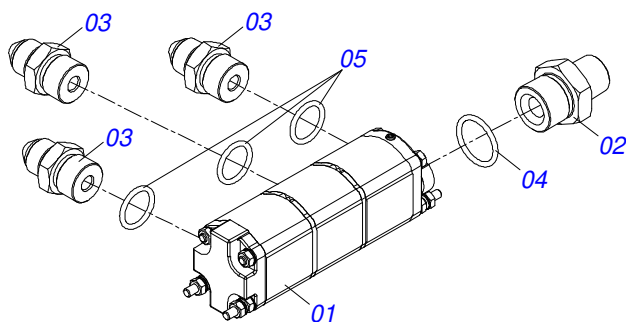


Item	Code	Description	See page	QT
01	0503016524	DIVIDER VALVE		01
02	0581011593	NIPPLE R.1.1/16 UN		01
03	0511010111	7/8" NIPPLE		03
04	0503011109	2-119 N 3006-9B O'RING		01
05	0503010045	O'RING		03

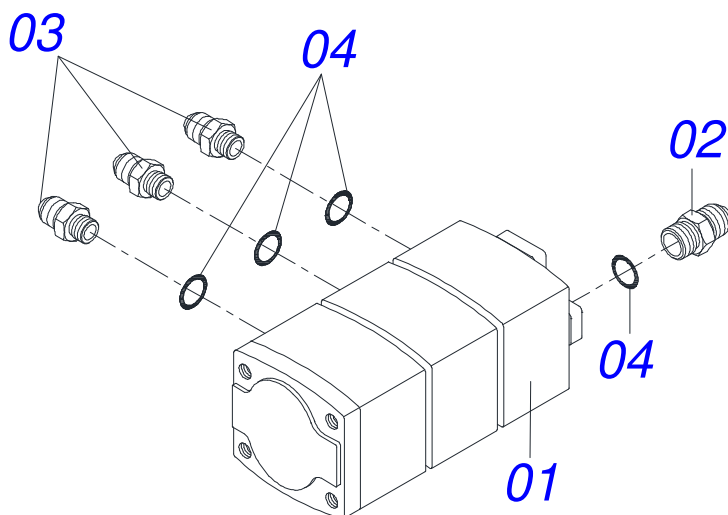


Item	Code	Description	See page	QT
01	0503016524	DIVIDER VALVE		01
02	0551012400	7/8" UNF NIPPLE		01
03	0501011460	7/8 NF REDUCTION NIPPLE		03
04	0503010190	2-114 N 3006-9B O'RING		04

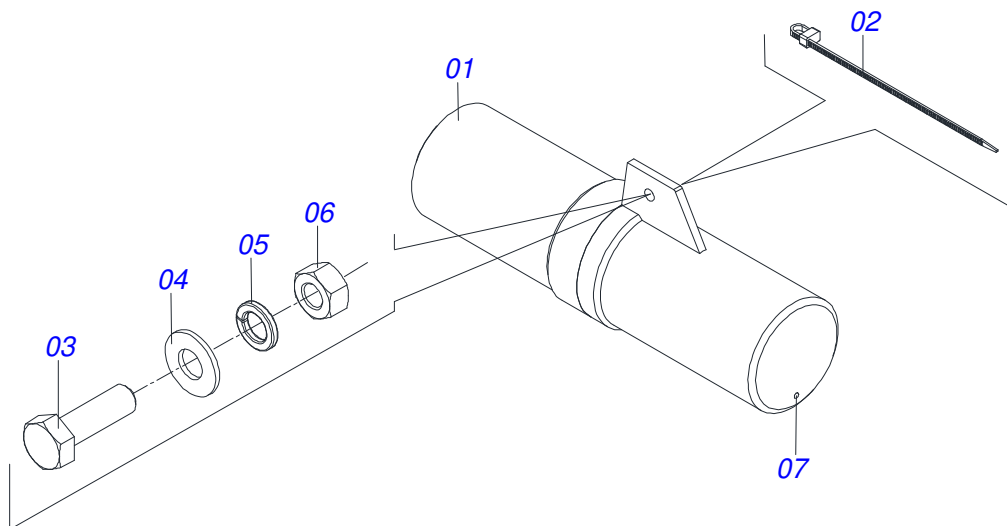


Item	Code	Description	See page	QT
001	0503060100	INSTRUCTIONS MANUAL CANISTER		01
002	0503010267	NYLON CLAMP		01
003	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
004	0501010694	FLAT WASHER		01
005	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
006	0503010337	5/16" NUT		01
007	0511032398	C / CAT BAG / MANUAL		01

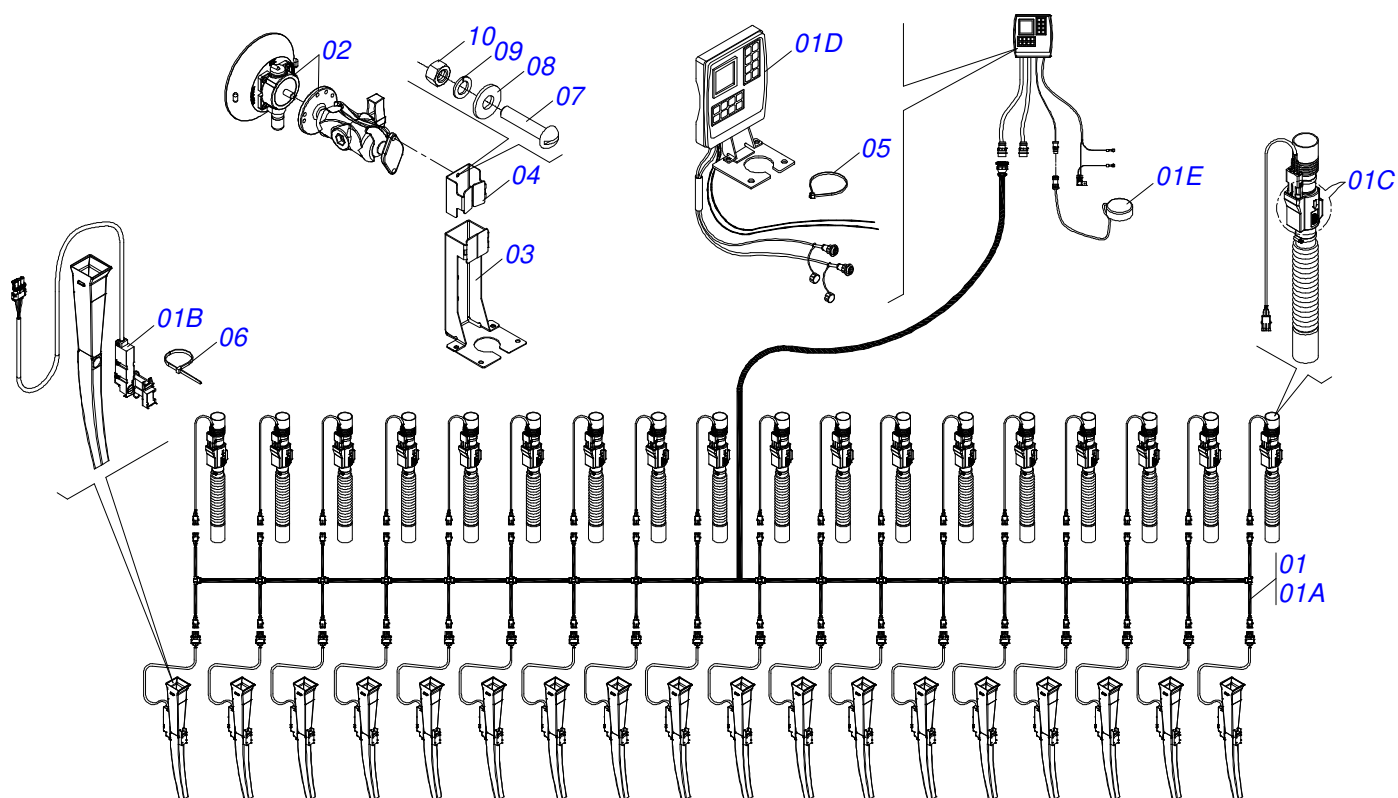


Item	Code	Description	See page	QT
01	0503062830	MONITORING KIT		01
01A	0503017596	18 ROWS MONITORING DOUBLE CABLE		01
01B	0503019100	SENSOR		18
01C	0503018932	FLOW FERTILIZER SENSOR		18
01D	0503017602	MONITOR PLANT PM400		01
01E	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		90
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		415
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02

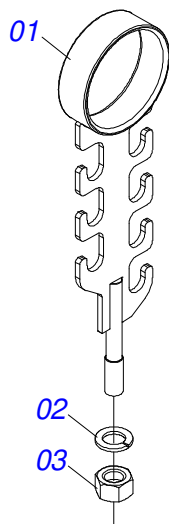


Item	Code	Description	See page	QT
01	0521066302	HOSE HOLDER		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

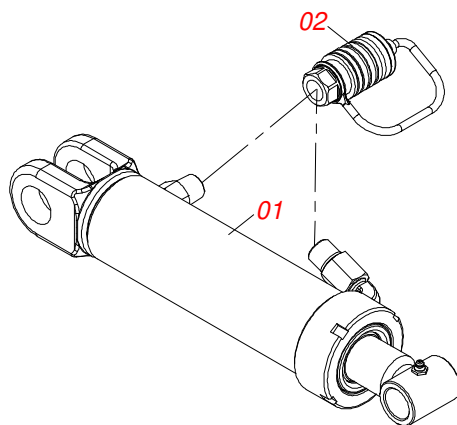


Item	Code	Description	See page	QT
01	0511057653	HYDRAULIC CYLINDER	168	01
02	0501053835	FEMALE QUICK COUPLER	169	02

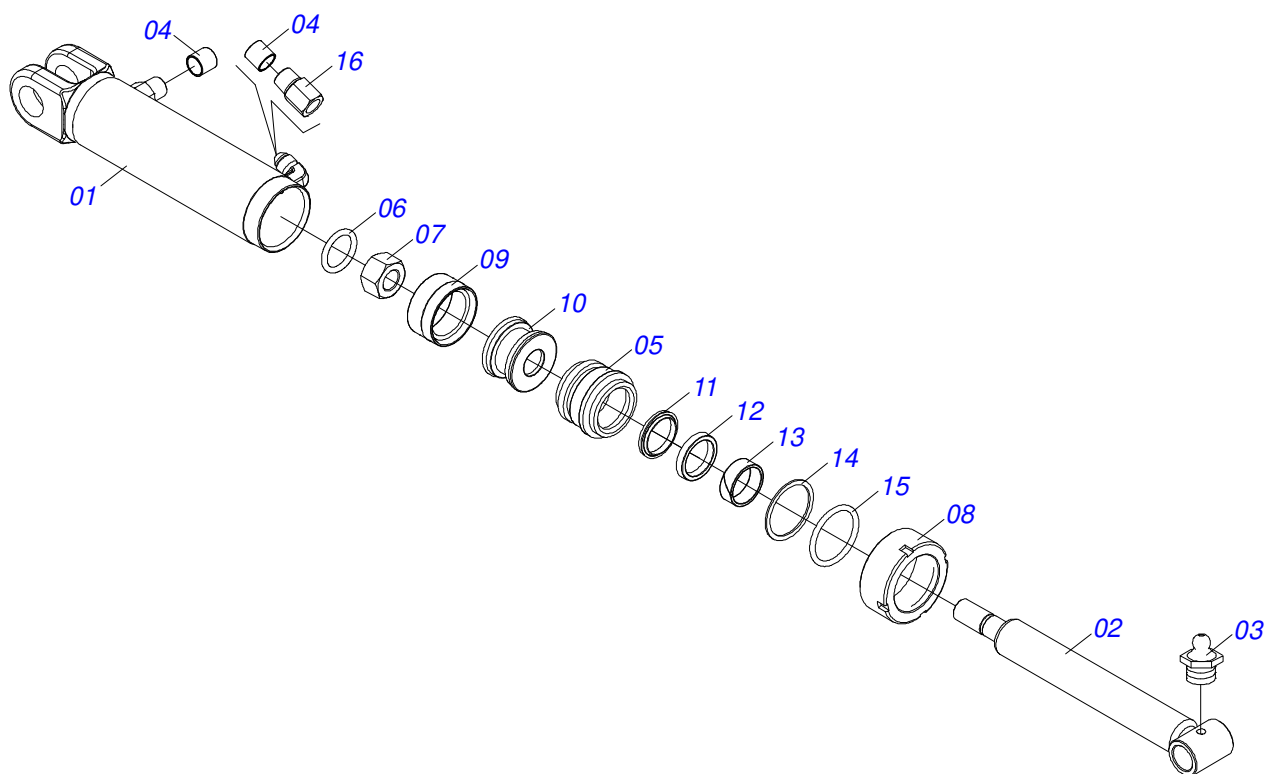


Item	Code	Description	See page	QT
01	0521066550	CASE		01
02	0521066551	EXTENSION DRAWBAR		01
03	0503010002	1800 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010669	EMBOLUS 63.50 X 40 USAP		01
06	0503018005	RING		01
07	0503010558	7/8" NUT		01
08	0502010471	63,50 MOBILE CAP		01
09	0503011058	8-330 BACK-UP RING		01
10	0571019866	RING SUPPORT		01
11	0503010163	D-1500 SCRAPER RING		01
12	0503018004	RING		01
13	0503010161	2-330 N 3006 9B O'RING		01
14	0503018003	GASKET		01
15	0503010605	O'RING		01
16	0581010652	JIC ADAPTER		01

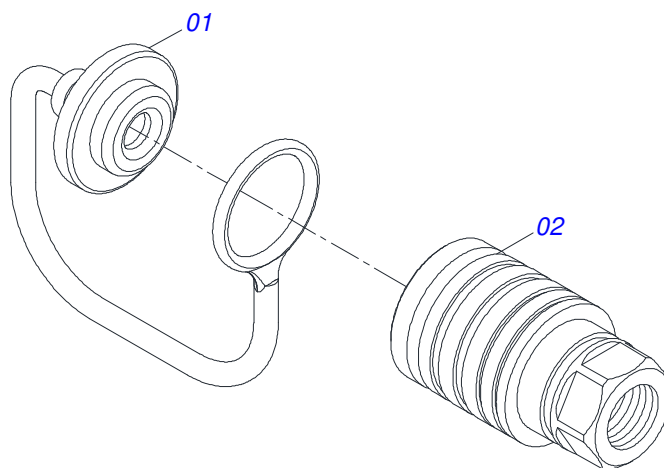


Item	Code	Description	See page	QT
01	0503011883	QUICK CONNECTION COVER		01
02	0503011628	FEMALE QUICK COUPLER		01

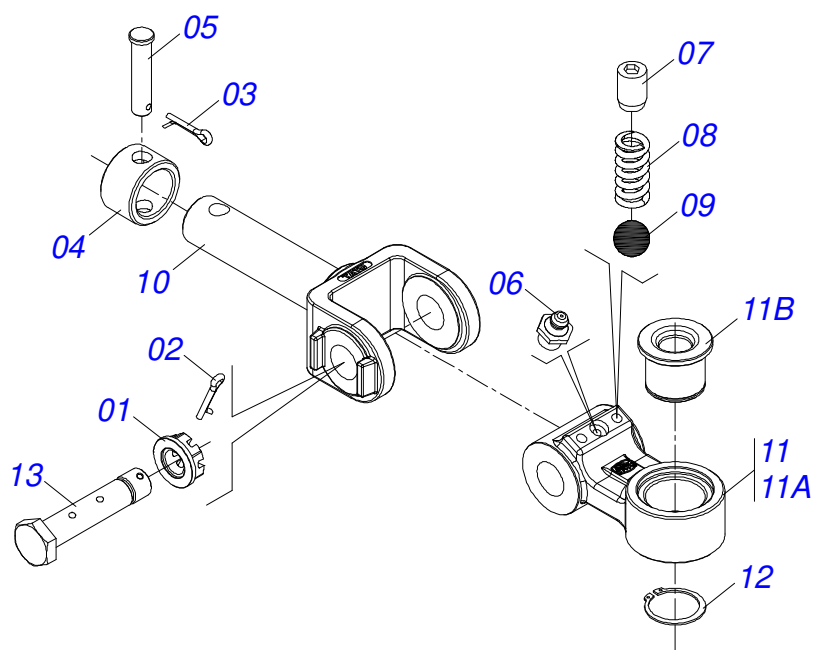


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	LEFT COMPRESSION SPRING		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

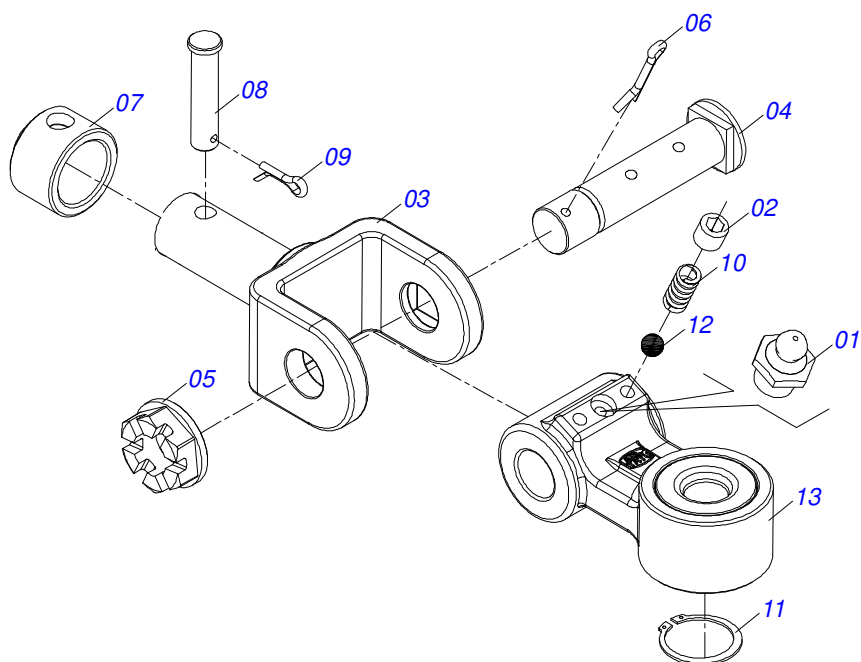


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0581019654	ASSY BOLT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2 COTTERPIN		01
10	0503033731	LEFT COMPRESSION SPRING		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

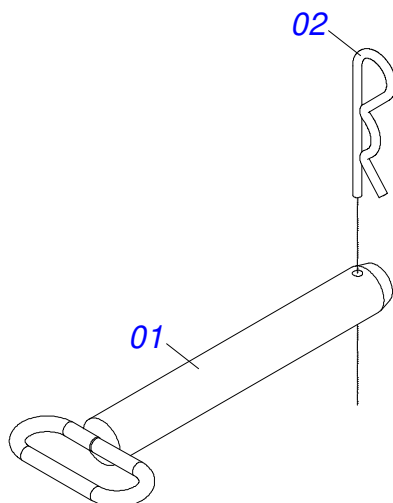


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

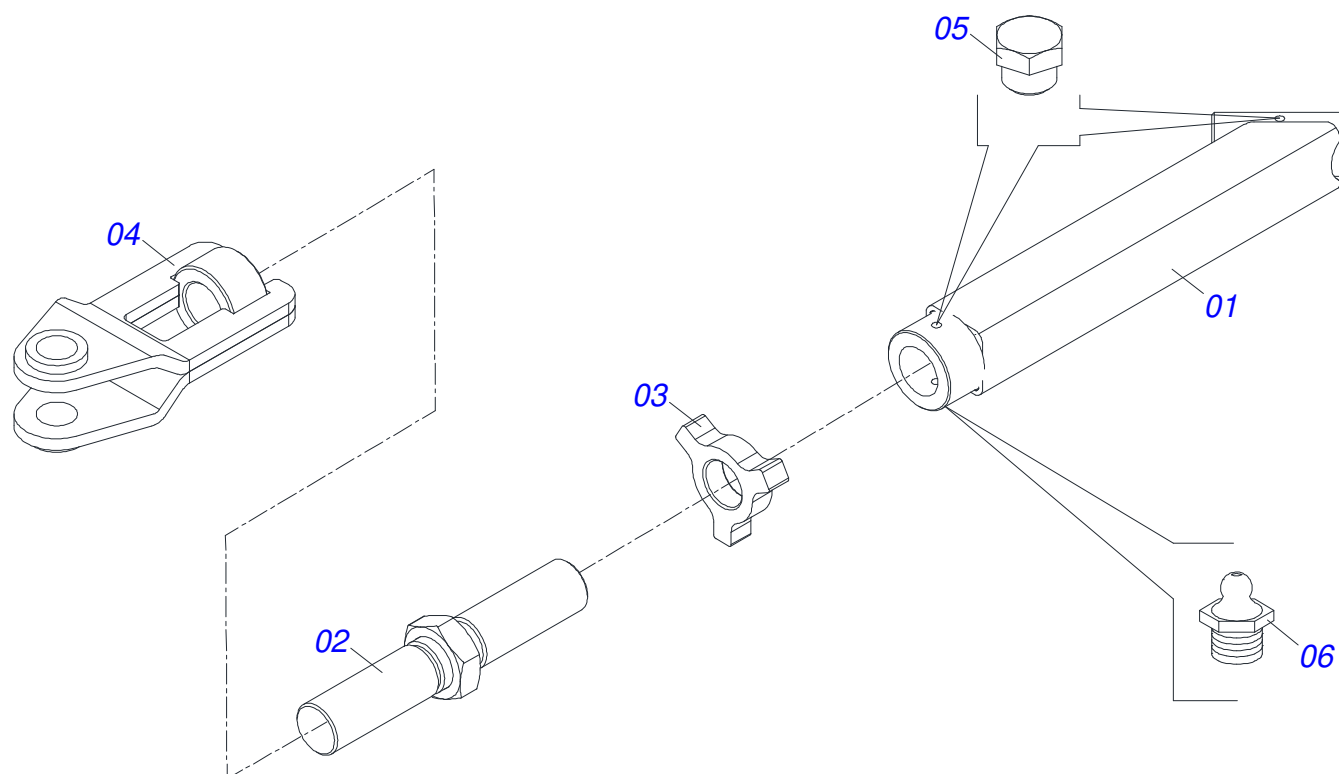


Item	Code	Description	See page	QT
001	0521067014	TURNBUCKLE SIDE		01
002	0501078990	TURNBUCKLE AXLE		01
003	0561019879	LOCK ATTACHMENT BAR		01
004	0521066338	EXTERNAL ROTATING BRIDGE		01
005	0511017907	1/8" BSPT X 6 PLUG		02
006	0503010002	1800 GREASE FITTING		03

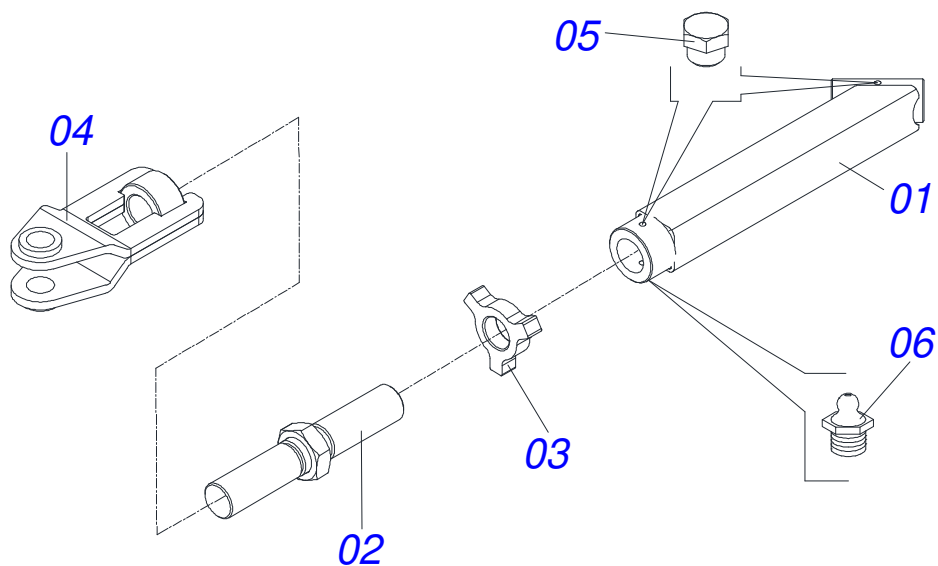


Item	Code	Description	See page	QT
001	0521063911	TURNBUCKLE RIGHT SIDE		01
002	0501078990	TURNBUCKLE AXLE		01
003	0561019879	LOCK ATTACHMENT BAR		01
004	0521063917	POINT REVOLVING EXTENDING		01
005	0511017907	1/8" BSPT X 6 PLUG		02
006	0503010002	1800 GREASE FITTING		02

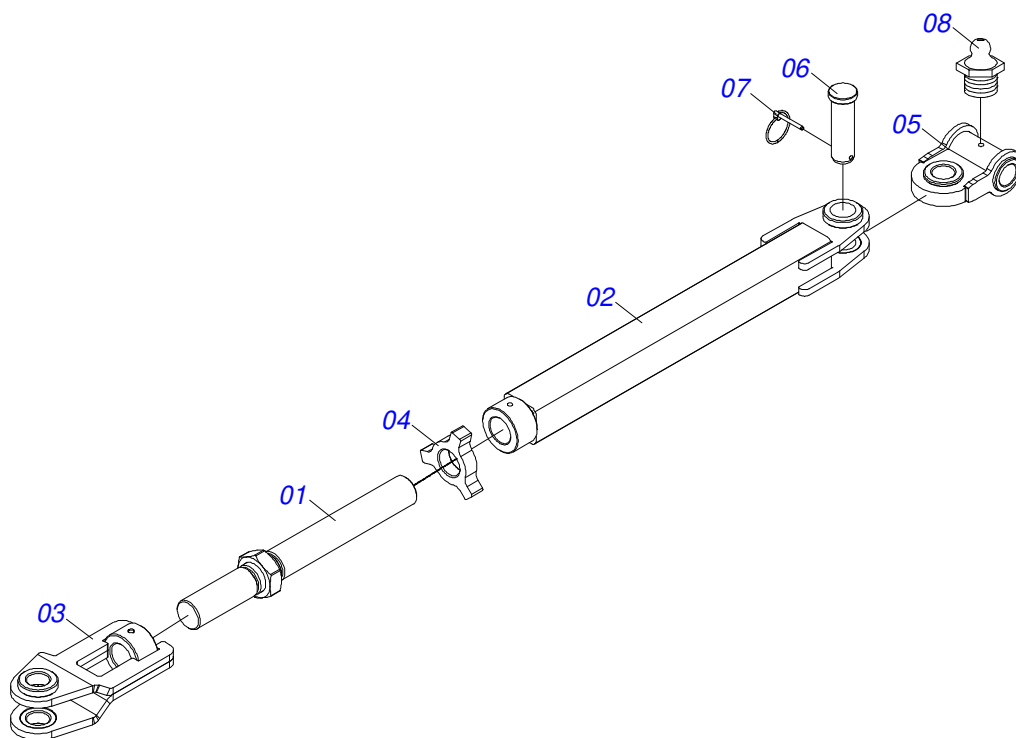


Item	Code	Description	See page	QT
01	0521065193	TURNBUCKLE AXLE		01
02	0521067392	FIXED BRACKET		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0521067393	EXTERNAL SIDE EAR		01
06	0571019949	JUNCTION SHAFT		01
07	0503030119	LOCK PIN		01
08	0503010002	1800 GREASE FITTING		03

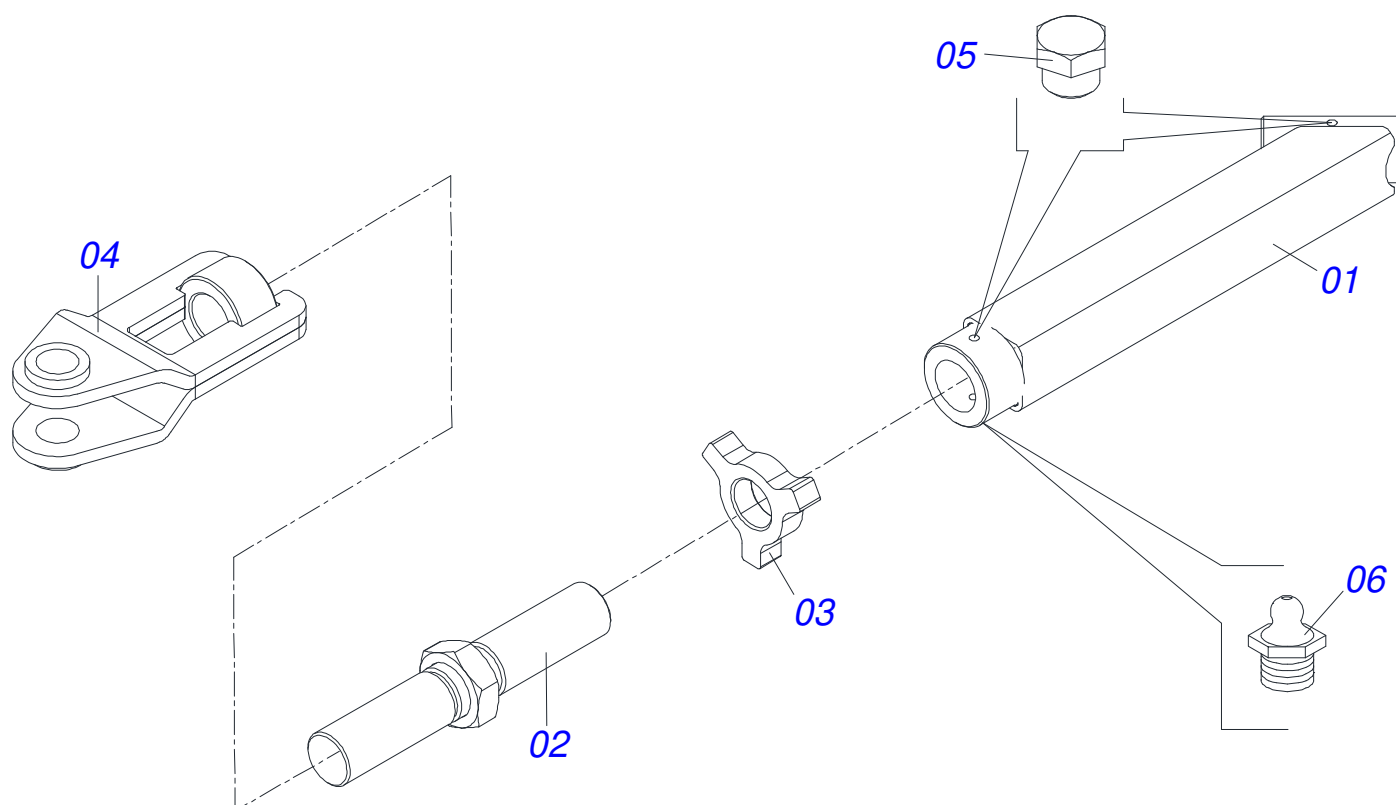


Item	Code	Description	See page	QT
001	0521064834	LATERAL EXTENSOR		01
002	0501078990	TURNBUCKLE AXLE		01
003	0561019879	LOCK ATTACHMENT BAR		01
004	0521063917	POINT REVOLVING EXTENDING		01
005	0511017907	1/8" BSPT X 6 PLUG		02
006	0503010002	1800 GREASE FITTING		02

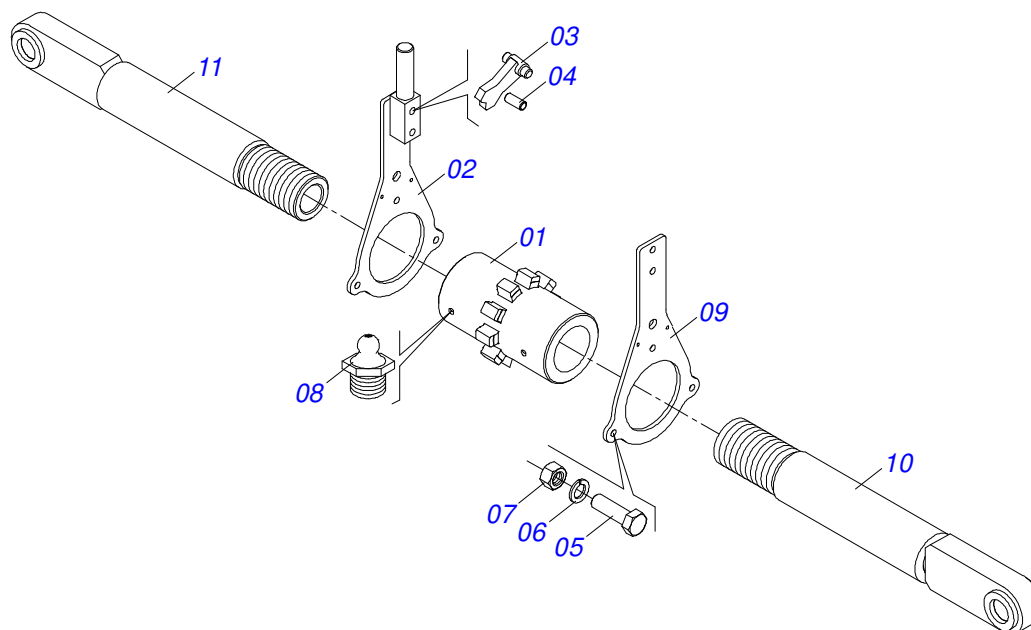


Item	Code	Description	See page	QT
01	0502012783	STABILIZER BODY GREATER		01
02	0511061880	SIDE RIGHT RATCHET		01
03	0511061881	RATCHET FOLLOWER		01
04	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
05	0503011179	3/8" X 2-1/4" BOLT		05
06	0503010025	3/8 SPRING WASHER		05
07	0503010026	3/8" NUT		05
08	0503010002	1800 GREASE FITTING		02
09	0531010264	SIDE RATCHET		01
10	0521066919	3-POINT EXTENSOR RIGHT FUSE		01
11	0521066337	LEFT EXTENSOR 3 SPIKE		01

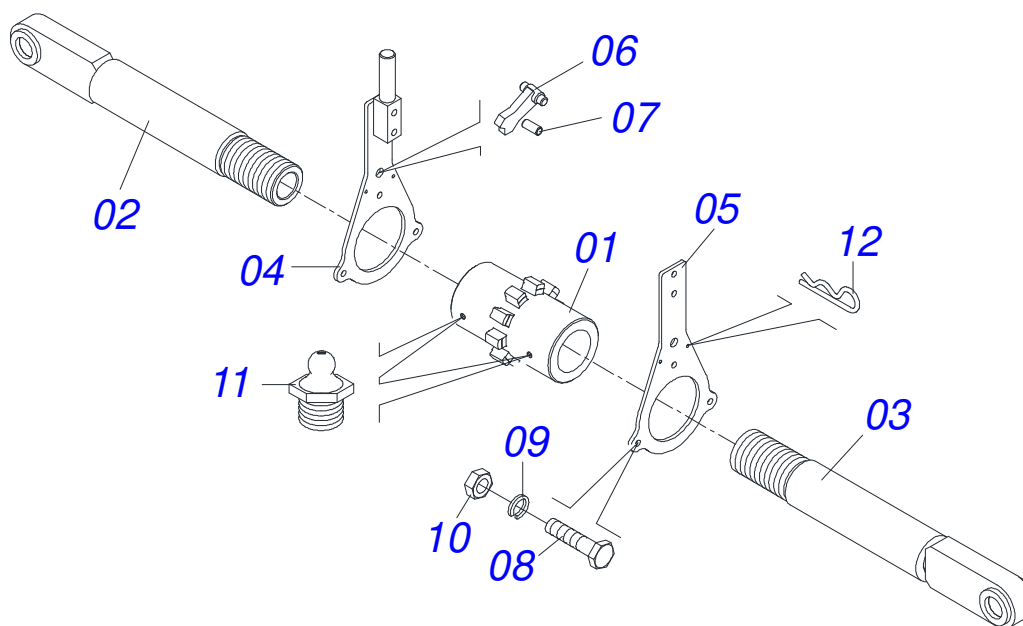


Item	Code	Description	See page	QT
01	0502011237	ESTABILIZER BODY		01
02	0521063913	JACKET LEFT		01
03	0521063914	JACKET RIGHT		01
04	0511061880	SIDE RIGHT RATCHET		01
05	0531010264	SIDE RATCHET		01
06	0511061881	RATCHET FOLLOWER		01
07	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
08	0503011179	3/8" X 2-1/4" BOLT		05
09	0503011443	3/8" SPRING WASHER		05
10	0503010026	3/8" NUT		05
11	0503010002	1800 GREASE FITTING		05
12	0503030012	HITCH PIN CLIP		01

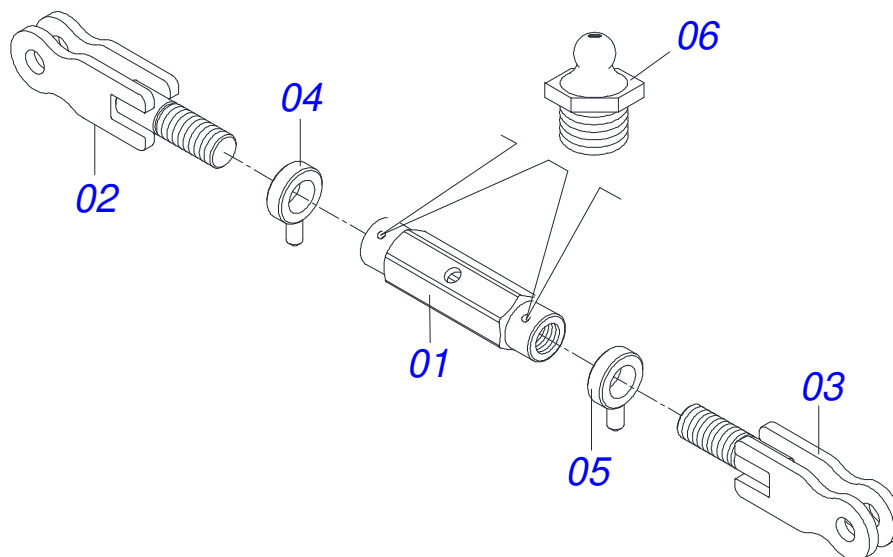


Item	Code	Description	See page	QT
01	0502011195	ADJUSTMENT NUT BODY		02
02	0521063884	LEFT TURNBUCKLE		02
03	0521063883	RIGHT TURNBUCKLE		02
04	0541018673	COUNTERNUT		02
05	0541018672	COUNTERNUT		02
06	0503010002	1800 GREASE FITTING		04

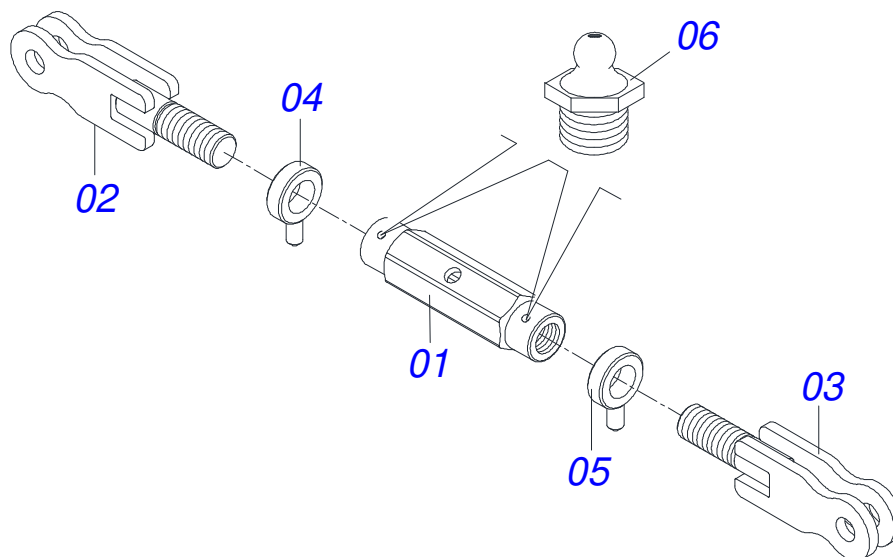


Item	Code	Description	See page	QT
001	0502011197	170 ADJUSTMENT NUT BODY		01
002	0521064845	EXTENSOR		01
003	0521064846	EXTENSOR		01
004	0541018673	COUNTERNUT		01
005	0541018672	COUNTERNUT		01
006	0503010002	1800 GREASE FITTING		02

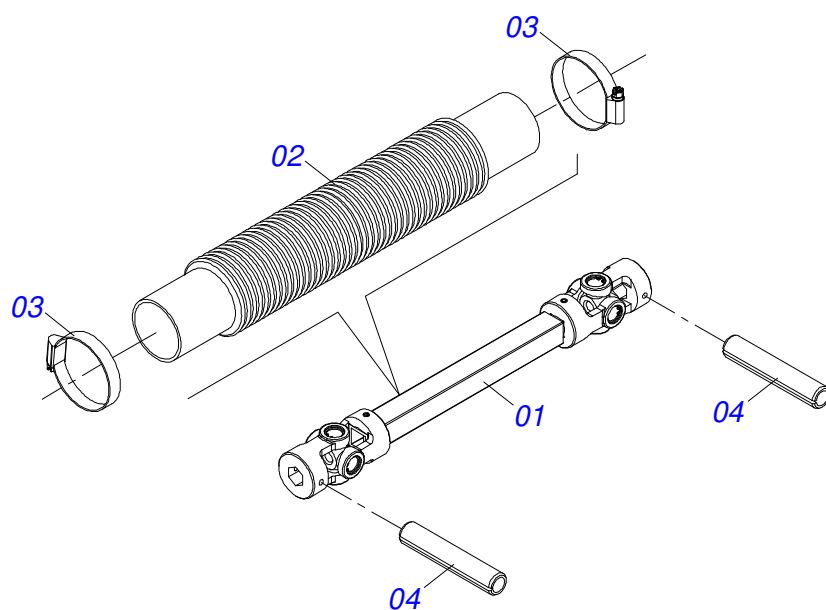

Item	Code	Description	See page	QT
01	0503062206	CARDAN TERMINAL	182	01
02	0503030331	1.2" X 1.2" X 12.2" HOSE		01
03	0503010243	CLAMP		02
04	0503011855	0.2" X 1.8" SPRING PIN		02

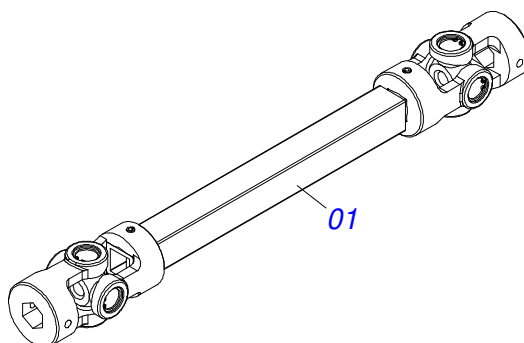


Item	Code	Description	See page	QT
01	0503062206	CARDAN TERMINAL	182	01

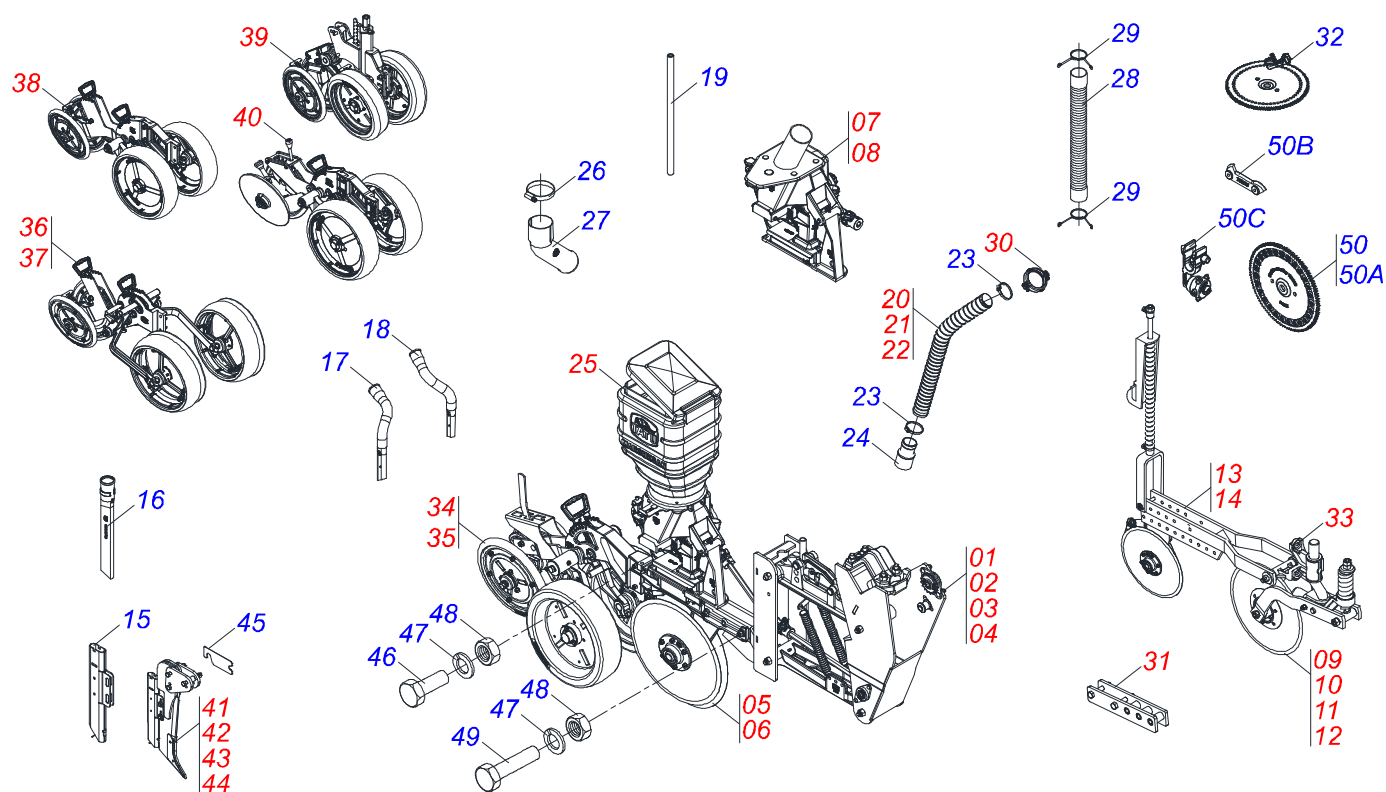

Item	Code	Description	See page	QT
01	0511057243	LEFT SHORT SEED ROW FRONT	184	01
02	0511057246	RIGHT LONG SEED ROW FRONT	185	01
03	0511057244	RIGHTH SHORT SEED ROW FRONT	186	01
04	0511057247	LEFT LONG SEED ROW FRONT	187	01
05	0511057607	REAR RIGHT ROW SEED	195	01
06	0511057608	REAR LEFT ROW SEED	196	01
07	0511058747	RIGHT REAR SUPREME SEED ROW P.P CSU	197	01
08	0511058748	LEFT REAR SUPREME SEED ROW P.P CSU	198	01
09	0511058617	DISC CUT 18 SHORT LINE	208	01
10	0511058618	DISC CUT 18 LONG LINE	209	01
11	0511044563	20" COULTER BLADE ASSY FOR SHORT ROW	210	01
12	0511044585	20" COULTER BLADE ASSY FOR LONG ROW	211	01
13	0511053250	SHORT ARM FERTILIZER ROW WITH LEFT DOUBLE DISC	216	01
14	0511053251	LONG ARM FERTILIZER ROW WITH RIGHT DOUBLE DISC	217	01
15	0521069127	BOTTOM NOZZLE FERTILIZER		01
16	0503030483	FERTILIZER SOCKET		01
17	0503030391	RIGHT FERTILIZER NOZZLE		01
18	0503030392	LEFT FERTILIZER NOZZLE		01
19	0531013600	PRESS ADJUSTMENT LEVER		01
20	0571019714	AIR CONDUCTOR		01
21	0571019715	AIR CONDUCTOR		01
22	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		01
23	0503010243	CLAMP		01
24	0571019716	ADAPTER		01
25	0511057509	SEED RESERVOIR PNEUMATIC ASSY	220	01
26	0503010246	CLAMP		01
27	0503031050	CURVED CONDUCTOR		01
28	0503031145	2" X 2" X 20" HOSE		01
29	0503031076	2" HOSE CLAMP		01
30	0521052549	CLAMP	52	01


Item	Code	Description	See page	QT
31	0521057957	FIXED ROD EXTENSION WITH FIXATION	221	01
32	0503062763	CONVERSION ASSY FOR DISTRIBUTOR SOY / BEANS		01
33	0511058212	FERTILIZER ROW SUPPORT ASSY	222	01
34	0521042327	DEPTH CONTROL & PRESS WHEEL ASSY	223	01
35	0521045198	PRESS WHEELS	224	01
36	0521044460	SYSTEM DEPTH / COMPACTOR	225	01
37	0521044269	PRESS WHEELS/DEPTH ASSY	226	01
38	0521046501	DEPTH CONTROL AND PRESS WHEEL WITH FAST ADJUSTING	227	01
38.	0521051424	WHEEL SYSTEM DEPTH/COMPACTOR QUICK ADJUSTMENT	228	01
39	0521044538	DEPHT WHIT REGULACION ANGLE COMPACT CONTROL	229	01
40	0521055064	WHEEL SYSTEM DEPTH/ASSY COMPACTOR	230	01
40.	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	231	01
41	0511051144	SCARIFIER SPINDLE	275	01
42	0511054835	HDA	277	01
43	0521050193	STEM FUSE WITH CONDUCTOR	279	01
44	0501110231	SCARIFIER ROD WITH TIP	276	01
45	0511017969	0.1" SPACING PLATE		01
46	0503010905	1/2" X 2-1/4" BOLT		01
47	0503010019	1/2" SPRING WASHER		01
48	0503010060	1/2 UNC G.5 ZN HEX NUT		01
49	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
50	0503062417	KIT CORN DISTRIBUTION		01
50A	0503018160	CORN PLASTIC DISC		01
50B	0503062472	SELECTOR SEED CORN		01
50C	0503062474	EJECTOR CORN SEED SET		01

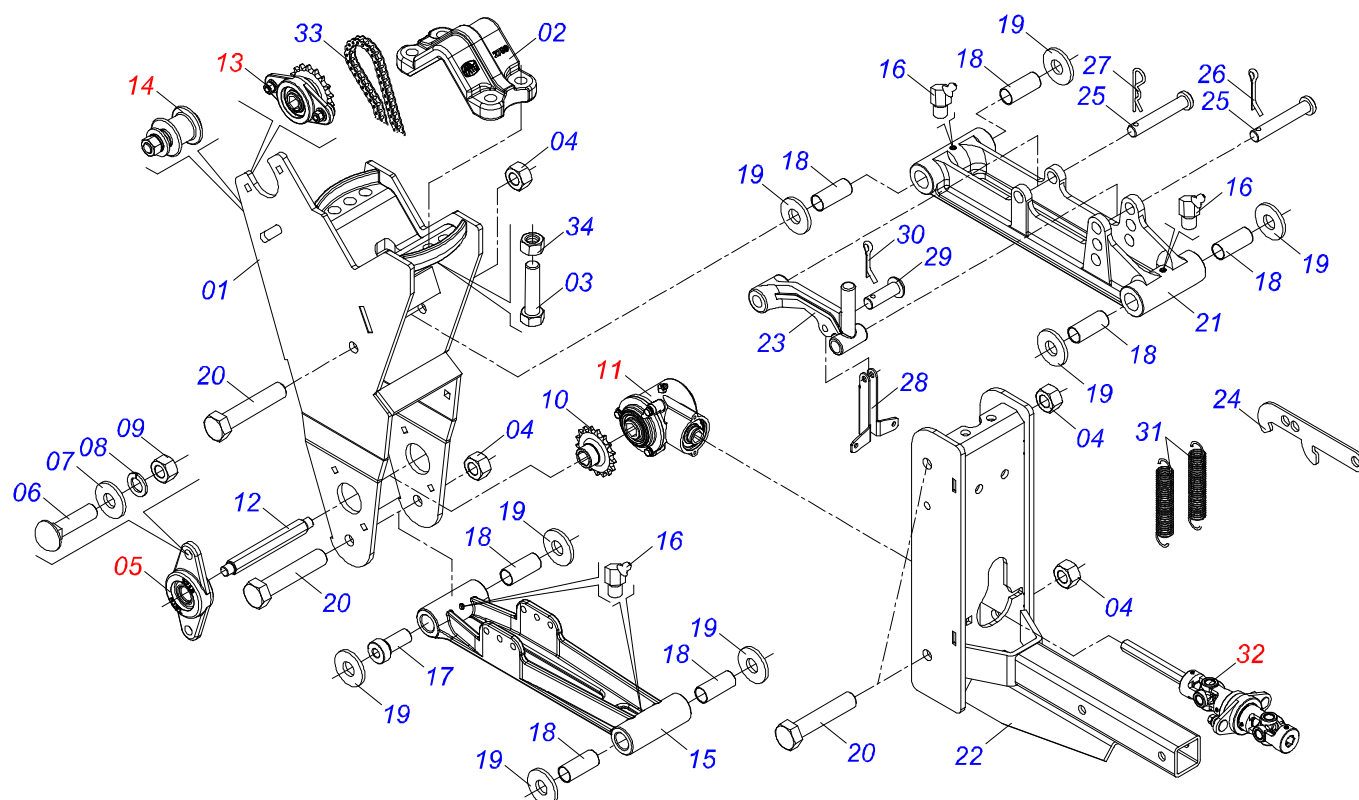

Item	Code	Description	See page	QT
01	0521064651	LEFT SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	188	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	FLAT WASHER		04
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION HOPPER SEED ROW	189	01
12	0561014904	TRANSMISSION AXLE FRAME ROW		01
13	0511050609	BEARING WITH 17Z GEAR ASSY	190	01
14	0511055260	SEED ROW CHAIN TENSIONER	191	01
15	0502012666	SEED ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521065847	SHORT TIRE SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HITCH PIN CLIP		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02




Item	Code	Description	See page	QT
32	0511052426	TRANSMISSION CARDAN ASSY	192	01
33	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

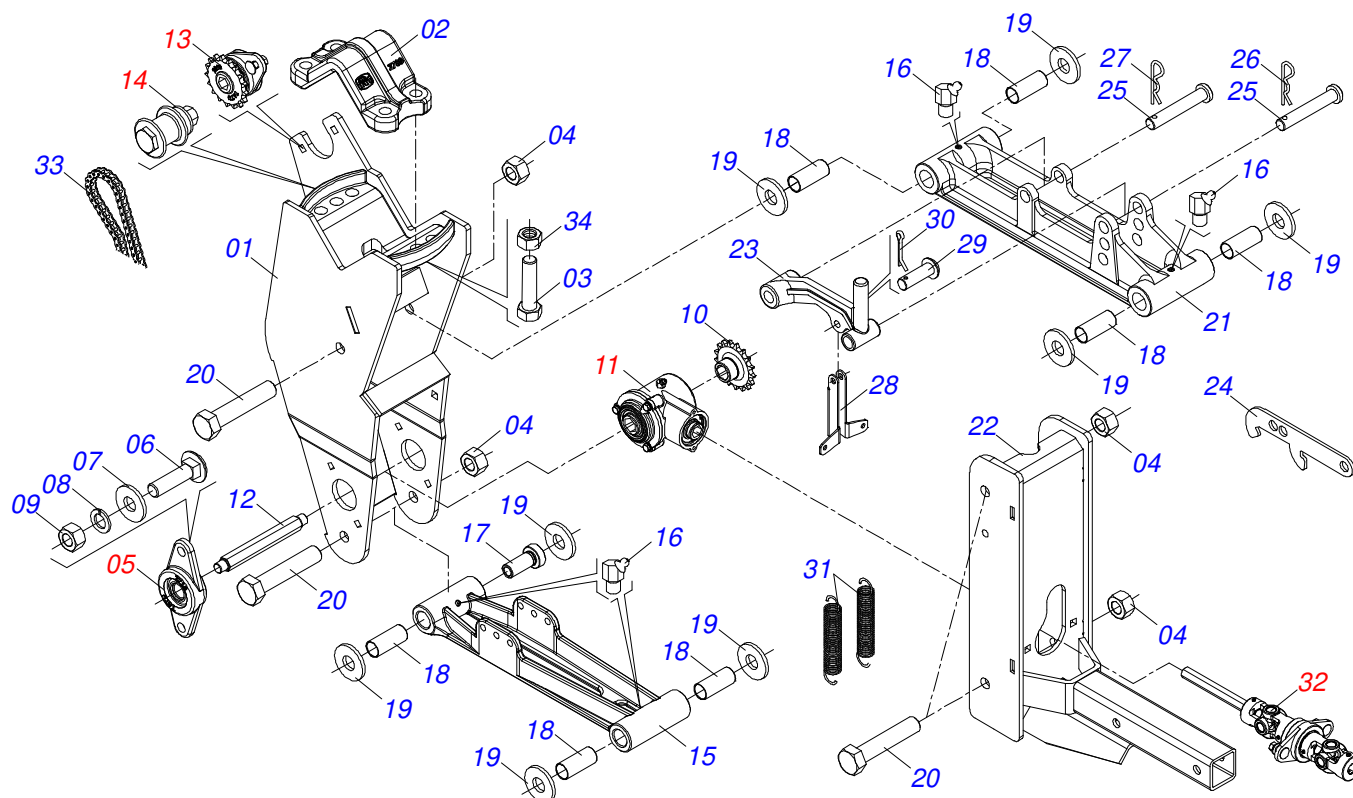

Item	Code	Description	See page	QT
01	0521064652	RH SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	188	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	FLAT WASHER		04
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION HOPPER SEED ROW	189	01
12	0561814904	ROW FRAME TRANSMISSION AXLE		01
13	0501052769	BEARING WITH 17Z GEAR	194	01
14	0511055260	SEED ROW CHAIN TENSIONER	191	01
15	0502012666	SEED ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521065847	SHORT TIRE SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HITCH PIN CLIP		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02

Item	Code	Description	See page	QT
32	0511052426	TRANSMISSION CARDAN ASSY	192	01
33	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

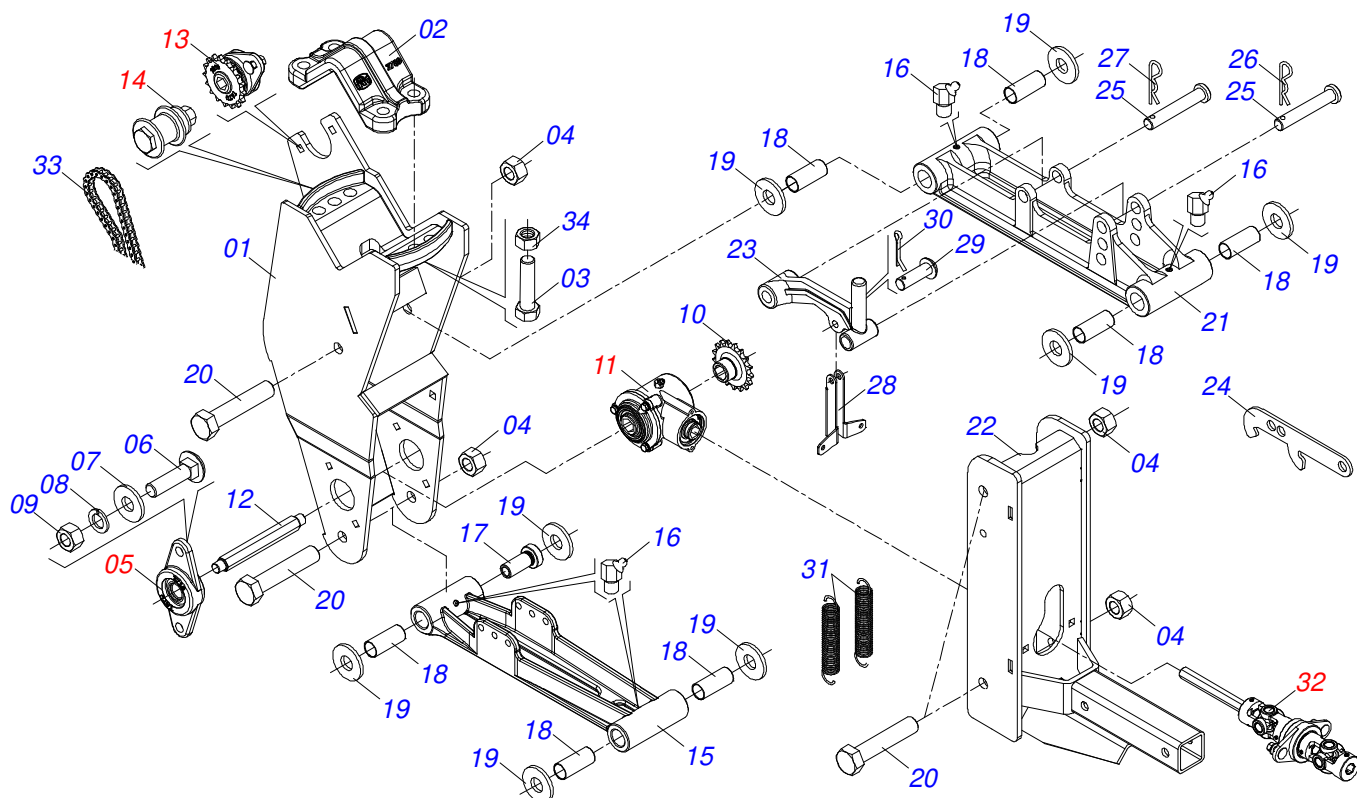


Item	Code	Description	See page	QT
01	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	188	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	FLAT WASHER		04
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION HOPPER SEED ROW	189	01
12	0561014904	TRANSMISSION AXLE FRAME ROW		01
13	0511050609	BEARING WITH 17Z GEAR ASSY	190	01
14	0511055260	SEED ROW CHAIN TENSIONER	191	01
15	0502012666	SEED ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521065847	SHORT TIRE SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HITCH PIN CLIP		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02



PST TRIO FLEX SUPREMA P.P - FRAME
RIGTH SHORT SEED ROW FRONT

Page 186
0511057244

Item	Code	Description	See page	QT
32	0511052426	TRANSMISSION CARDAN ASSY	192	01
33	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

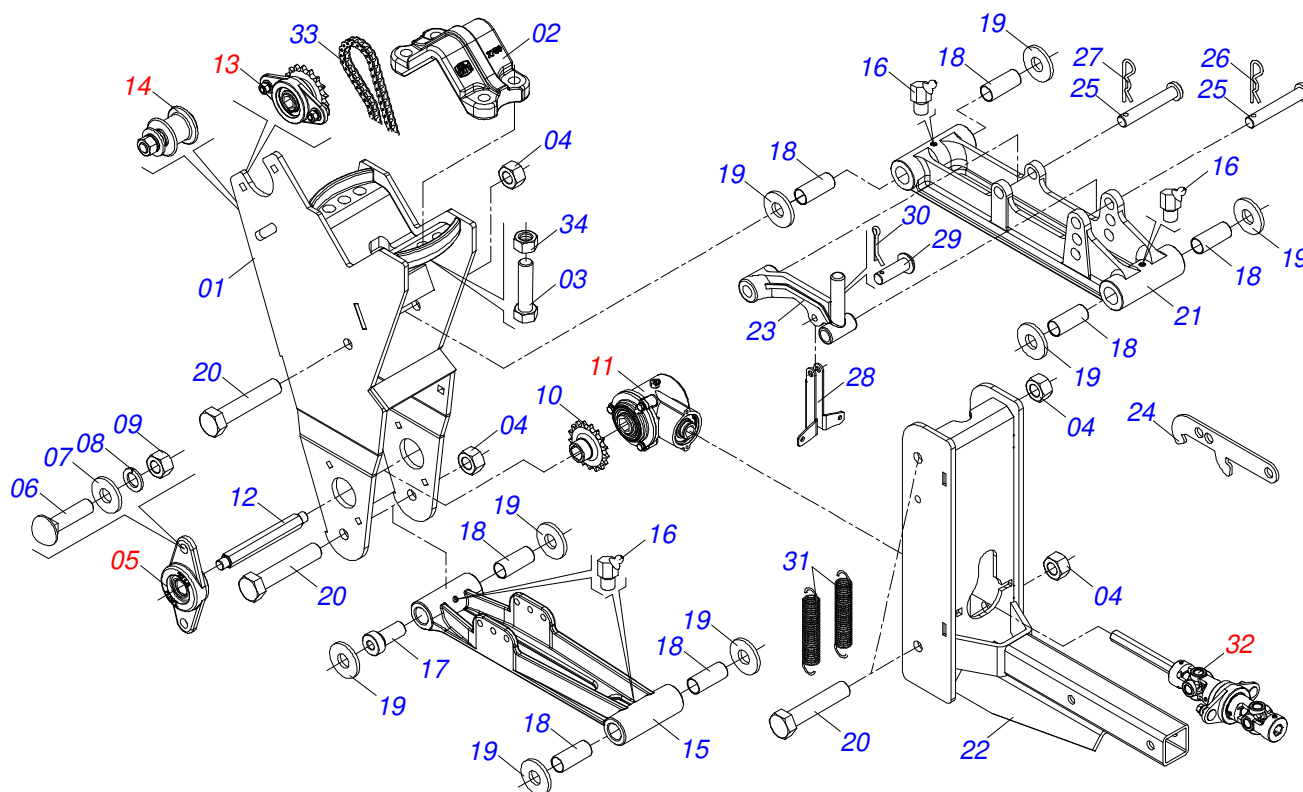


Item	Code	Description	See page	QT
01	0521064650	LEFT SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	188	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	FLAT WASHER		04
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION HOPPER SEED ROW	189	01
12	0561014904	TRANSMISSION AXLE FRAME ROW		01
13	0511050609	BEARING WITH 17Z GEAR ASSY	190	01
14	0511055260	SEED ROW CHAIN TENSIONER	191	01
15	0502012666	SEED ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521065847	SHORT TIRE SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HITCH PIN CLIP		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02




PST TRIO FLEX SUPREMA P.P - FRAME
LEFT LONG SEED ROW FRONT

Page 187
0511057247


Item	Code	Description	See page	QT
32	0511052426	TRANSMISSION CARDAN ASSY	192	01
33	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

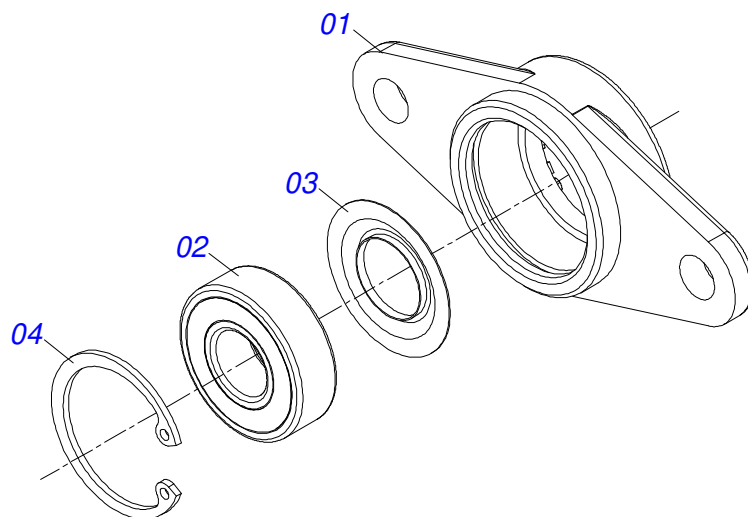


Item	Code	Description	See page	QT
01	0502012718	ROW BEARING		01
02	0503012882	BEARING		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

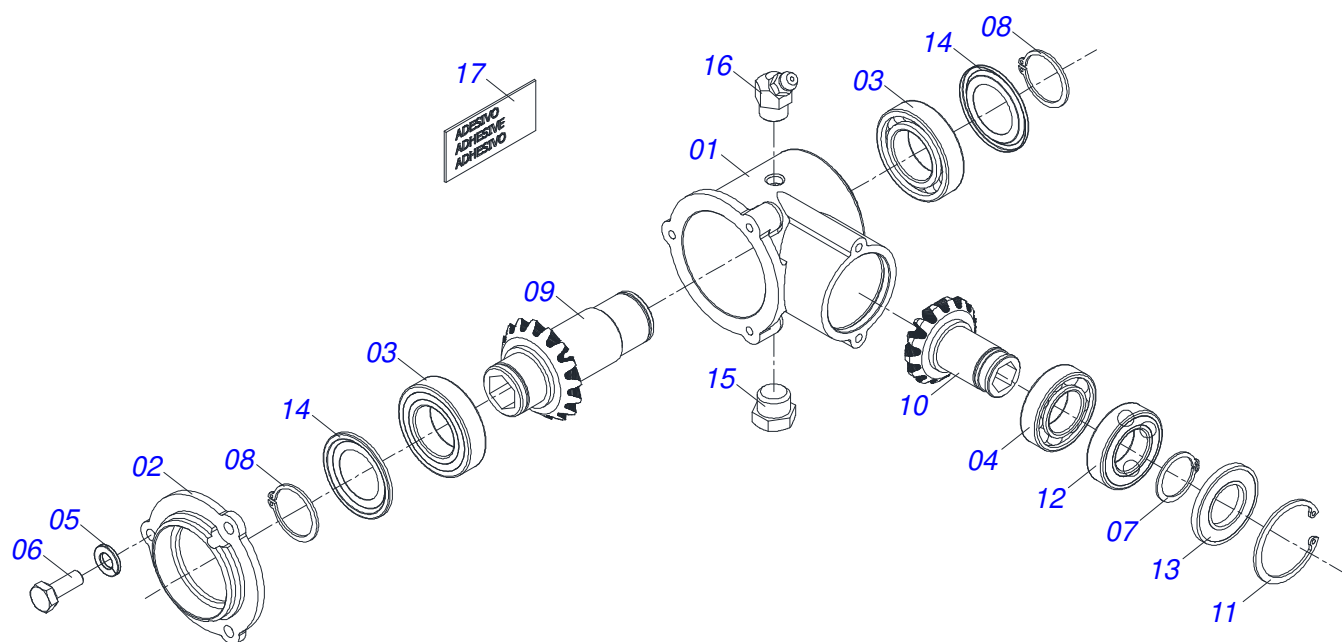


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01
17	0503035316	LUBRICATED POINTS ADHESIVE LABEL		01

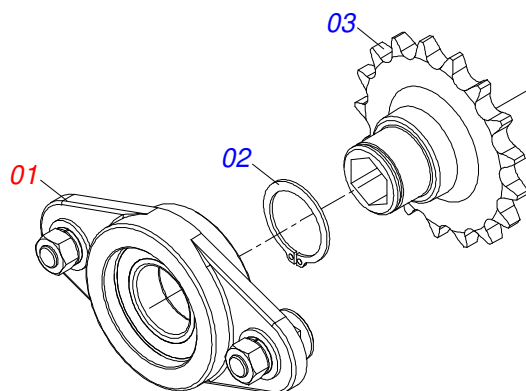


Item	Code	Description	See page	QT
01	0511050617	FRONT SEED ROW BEARING		01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0502012819	17Z GEAR WITH HEX HOLE		01

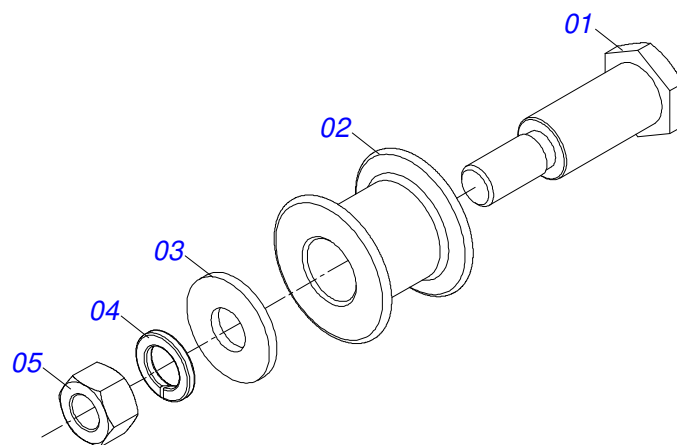


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

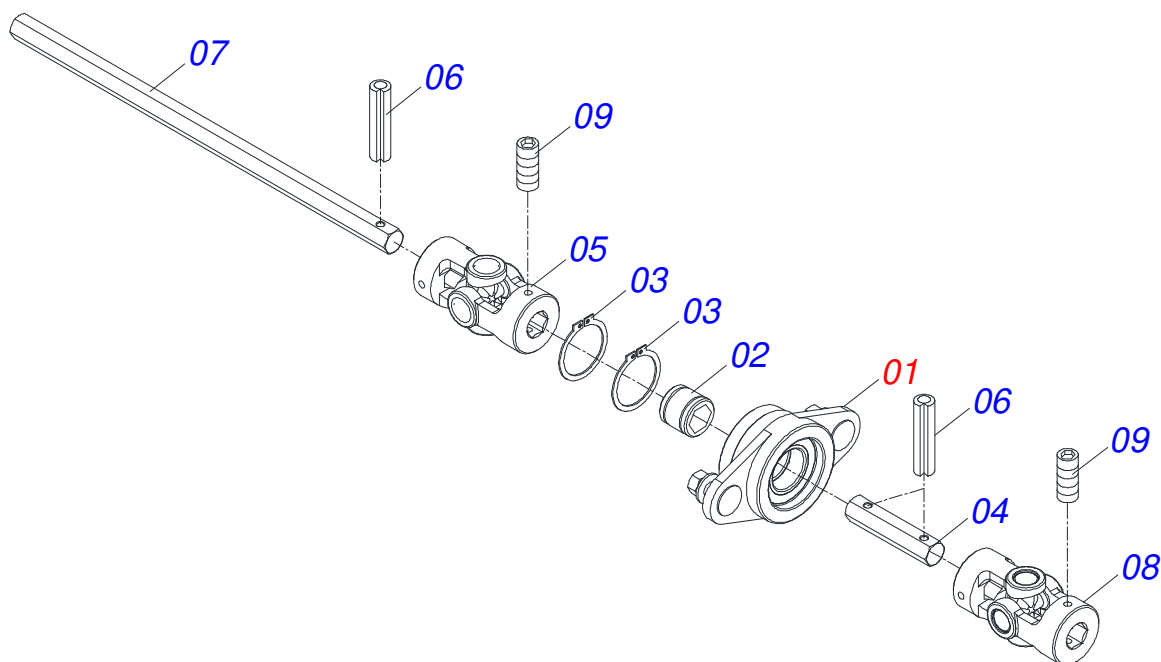


Item	Code	Description	See page	QT
01	0511052389	BEARING DOUBLE FRONT ROW SEED	193	01
02	0551017559	BEARING AXLE BODY		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0551017540	5/8" X 73 AXLE HEX		01
05	0501056296	UNIVERSAL JOINT		01
06	0503011855	0.2" X 1.8" SPRING PIN		03
07	0571012412	HEX AXLE		01
08	0561014778	HEX UNIVERSAL JOINT		01
09	0503013958	1/4" X 1" BOLT		02

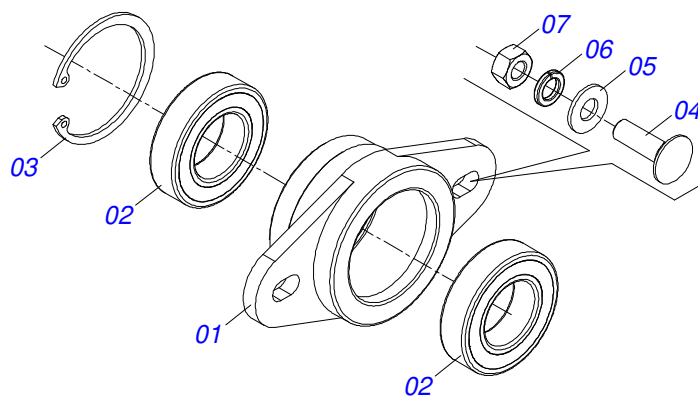


Item	Code	Description	See page	QT
01	0502011971	HOUSING WITH DOUBLE BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER		02
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

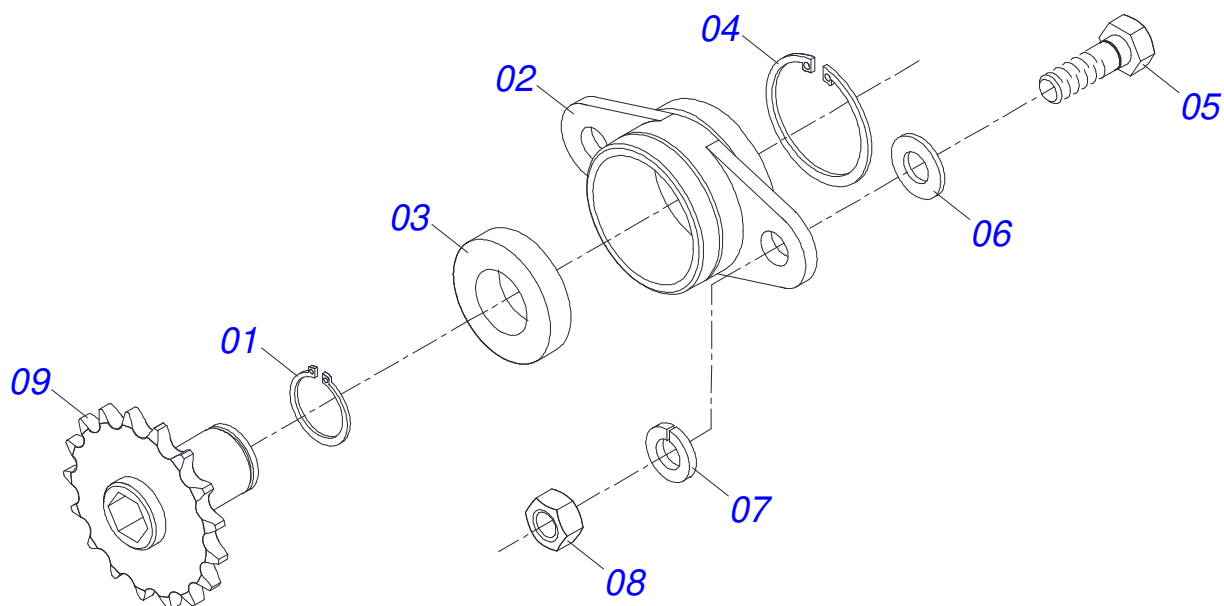


Item	Code	Description	See page	QT
01	0503010406	501025 CLAMPING RING (FOR AXLE)		01
02	0502011697	GEARBOX BEARING		01
03	0503011410	ROLLER BEARING		01
04	0503011105	SEAL RING		01
05	0503011953	5/16" X 1" BOLT		02
06	0501010694	FLAT WASHER		02
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
08	0503010337	5/16" NUT		02
09	0502012819	17Z GEAR WITH HEX HOLE		01

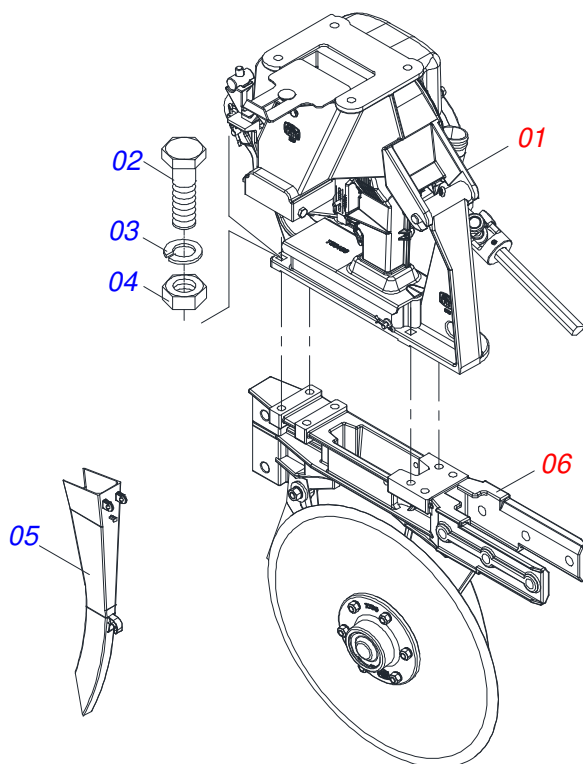


Item	Code	Description	See page	QT
01	0511057606	PNEUMATIC SEED DISTRIBUTOR WHIT AXLE HEX	199	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057154	RIGHT DDD	204	01

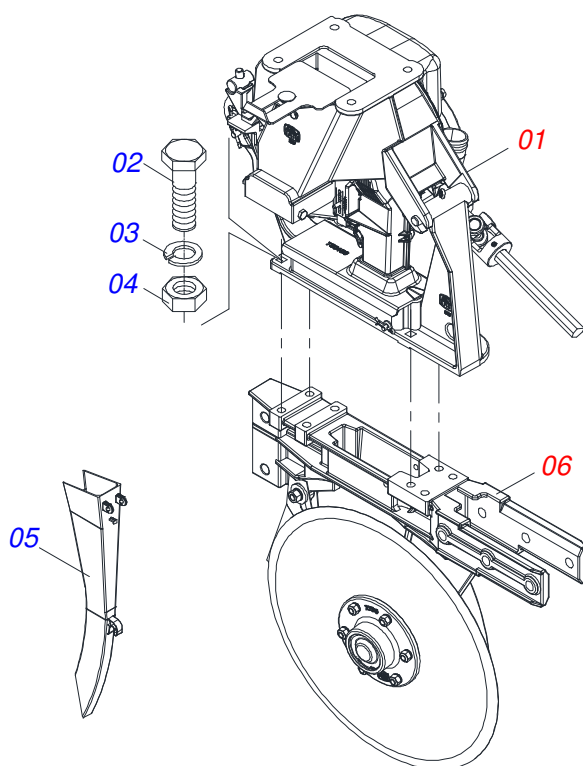


Item	Code	Description	See page	QT
01	0511057606	PNEUMATIC SEED DISTRIBUTOR WHIT AXLE HEX	199	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057153	DDD LEFT	205	01

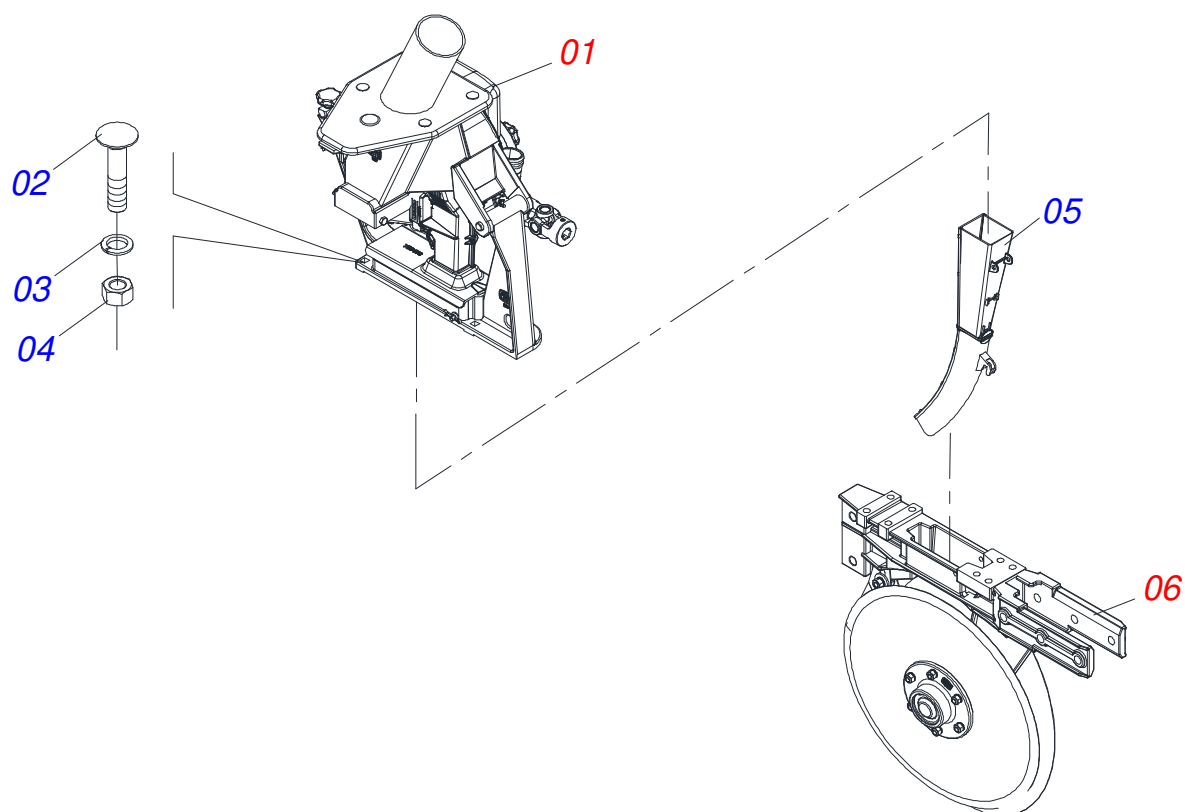

Item	Code	Description	See page	QT
01	0521050737	PNEUMATIC SEED DISTRIBUTOR		01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057154	RIGHT DDD	204	01

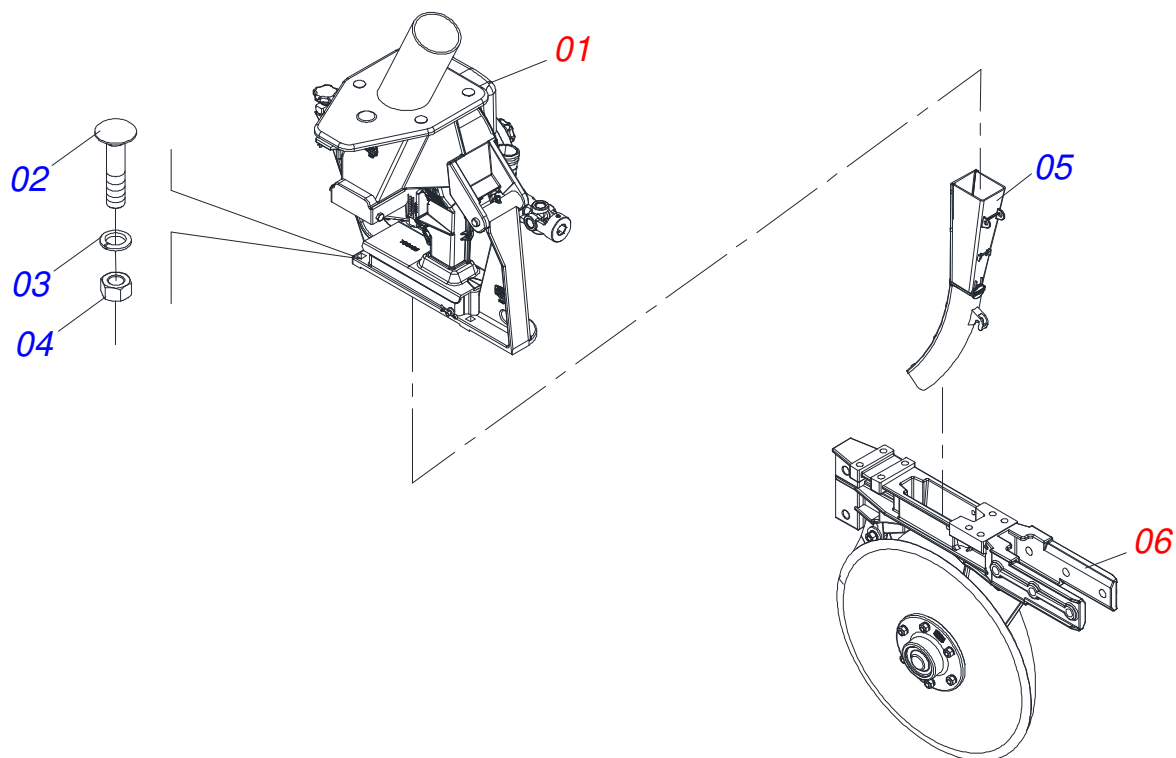


Item	Code	Description	See page	QT
01	0521050737	PNEUMATIC SEED DISTRIBUTOR		01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503062403	TUBE SEED P.P		01
06	0511057153	DDD LEFT	205	01

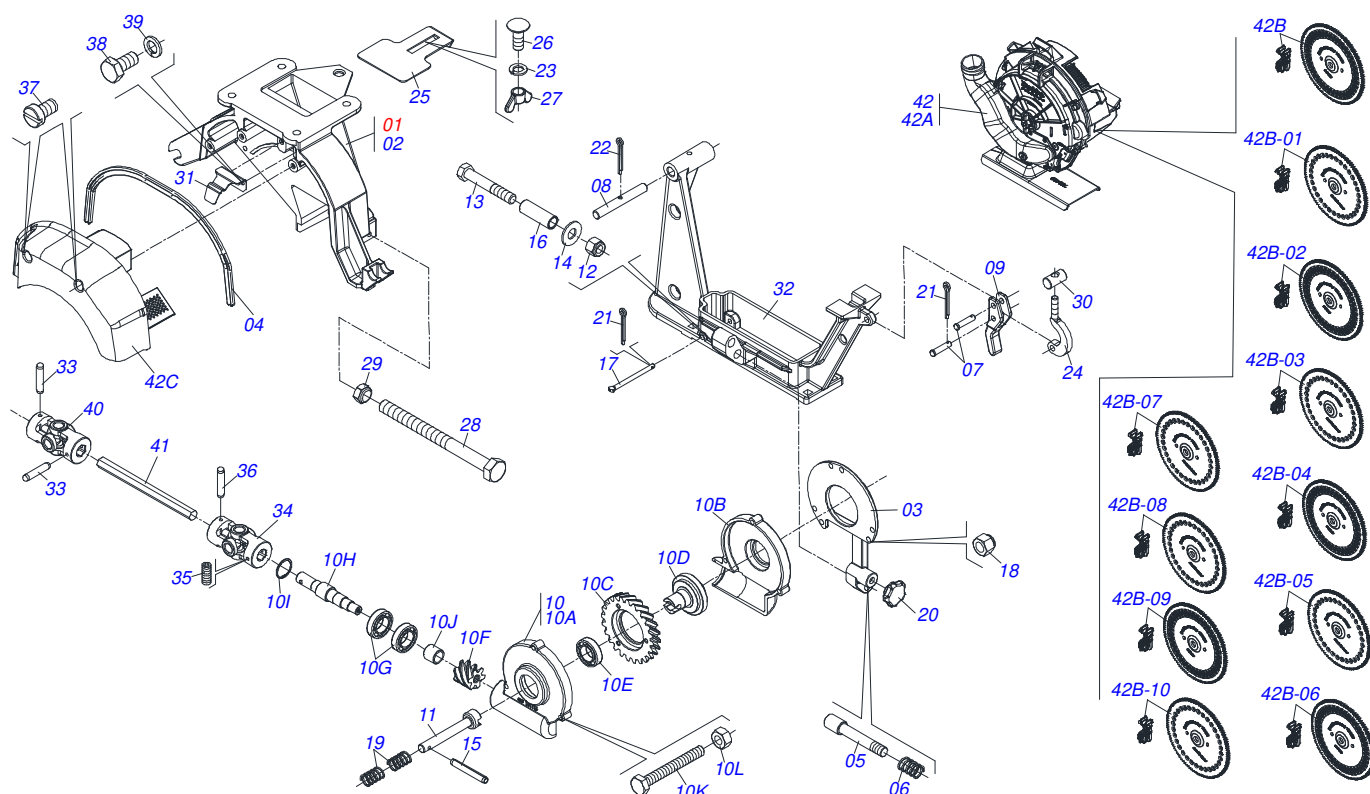


Item	Code	Description	See page	QT
01	0511057502	SET PRECISION PLANTING	200	01
02	0502012807	SUPPORT HOPPER PRECISION PLANTING		01
03	0502012776	SUPPORT ARTICULATION PNEUMATIC PP		01
04	0503037390	PACKING FOR PLANTING		01
05	0571017899	PIN LOCK		01
06	0503030190	0.5" X 1.6" X 0.05" SPRING		01
07	0571014024	FAST BOLT GUIDE AXLE		02
08	0571017897	AXLE ARTICULATION PRECISION PLANTING		01
09	0502012786	FAST LOCK PRECISION PLANTING		01
10	0511057155	PRECISION PLANTING LEFT TRANSMISSION 201 HOPPER		01
10A	0502050053	RIGHT SIDE TRANSMISSION HOPPER PP		01
10B	0502050052	LEFT SIDE TRANSMISSION HOPPER PP		01
10C	0503033975	24Z GEAR PNEUMATIC		01
10D	0571017898	BODY GEAR TRANSMISSION		01
10E	0503011410	ROLLER BEARING		02
10F	0503033976	GEAR 6Z PNEUMATIC 2014		01
10G	0503011182	6203 ROLLER BEARING		02
10H	0571016187	PINION AXLE 6Z PNEUMATIC		01
10I	0503011184	502040 CLAMPING RING (FOR AXLE)		01
10J	0571017655	FIXER SLEEVE		01
10K	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		03
10L	0503010144	1/4" NUT		03
11	0571017894	PIN DRAG PRECISION PLANTING		01
12	0503013357	3/8 SELF-ADJUSTING NUT		01
13	0503015752	3/8" X 2" BOLT		01
14	0501013518	FLAT WASHER		02
15	0503015356	SPRING PIN		01
16	0571017896	SLEEVE ARTICULATION PRECISION PLANTING		01
17	0571017895	PIN FIXER CONDUCTOR P.P		01
18	0503011776	M6 SELF ADJUSTINGNUT		03
19	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		02

Item	Code	Description	See page	QT
20	0503010293	CLAMP KNOB		01
21	0503010140	1/8" X 3/4" COTTERPIN		03
22	0503010131	3/16" X 1-1/2" COTTERPIN		01
23	0503010025	3/8 SPRING WASHER		01
24	0571011803	PRISONER CLOSE FAST		01
25	0571019491	SLUICE PNEUMATIC		01
26	0501011643	3/8 X 1" BOLT		01
27	0503010209	3/8" UNC BUTTERFLY NUT		01
28	0503012721	1/4" X 4" BOLT		01
29	0503012880	1/4" UNC SELF ADJUSTING NUT		01
30	0571011804	FAST BOLT ADJUSTMENT		01
31	0571019489	CLAMP PRECISION PLANTING		01
32	0502012799	UPPER SUPPORT BASE PNEUMATIC PRECISION PLANTING		01
33	0503011855	0.2" X 1.8" SPRING PIN		02
34	0561014778	HEX UNIVERSAL JOINT		01
35	0503013958	1/4" X 1" BOLT		02
36	0503011855	0.2" X 1.8" SPRING PIN		01
37	0503818139	BOLT		03
38	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		02
39	0503015110	M06 SPRING WASHER		02
40	0501056296	UNIVERSAL JOINT		01
41	0571012452	HEX AXLE		01
42	0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN 202 DISC		01
42A	0503062405	SEED DISTRIBUTOR		01
42B	0503062407	SET SOYBEAN DISTRIBUTION		01
42B-01	0503062417	KIT CORN DISTRIBUTION		01
42B-02	0503062471	DISTRIBUTION ASSY (SORGHUM / MILLET)		01
42B-03	0503062577	DISTRIBUTION ASSY (LARGE CORN / SUNFLOWER)		01
42B-04	0503062578	DISTRIBUTION ASSY (LARGE CORN)		01
42B-05	0503062579	DISTRIBUTION ASSY (CORN / SUNFLOWER)		01
42B-06	0503062580	DISTRIBUTION ASSY (POPCORN / COTTON)		01
42B-07	0503062581	DISTRIBUTION ASSY (SMALL CORN / POP CORN)		01
42B-08	0503062573	CONVERSATION SET FOR DISTRIBUTION (LARGE BEAN)		01
42B-09	0503062574	CONVERSATION SET FOR DISTRIBUTION (SMALL BEET)		01
42B-10	0503062564	CONVERSATION SET FOR DISTRIBUTION (SOYBEAN / BEAN)		01
42C	0571019613	STRAW PRECISION PLANTING SHIELD		01

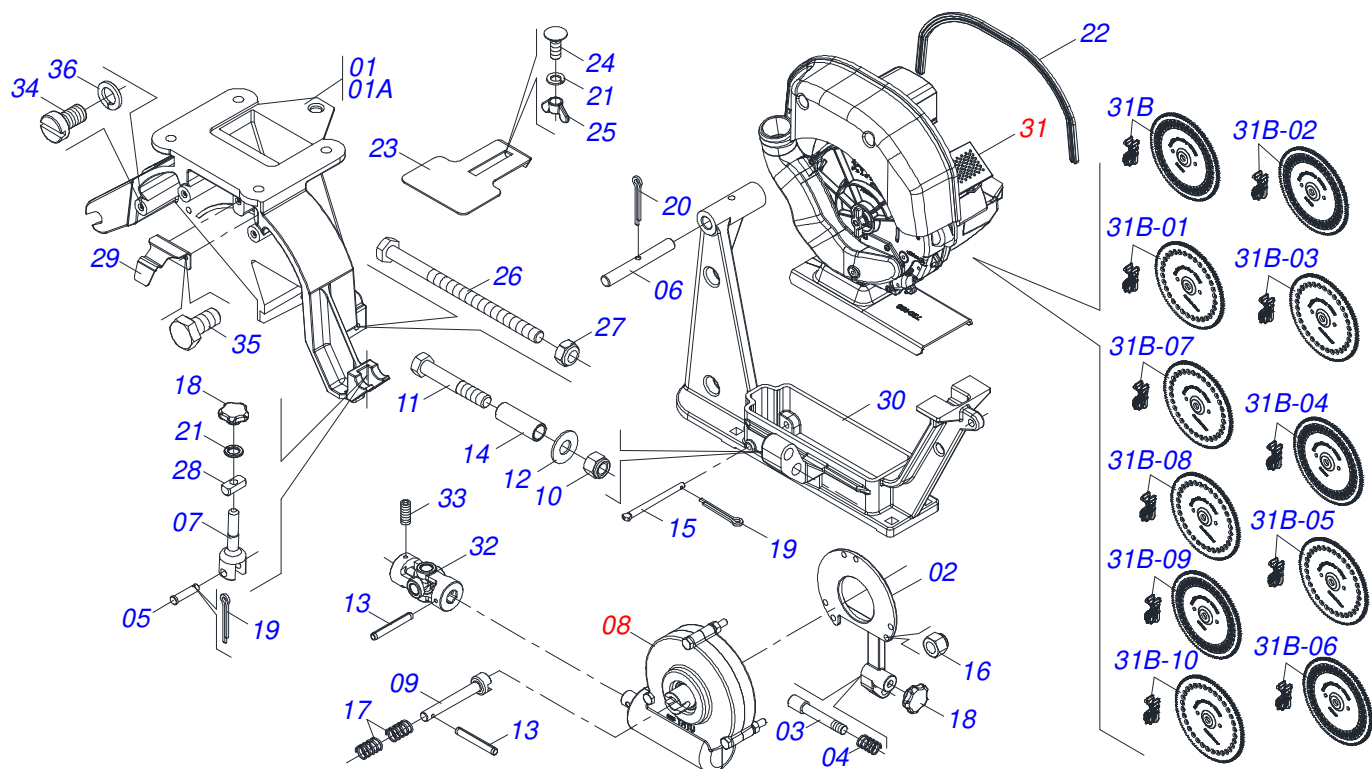


Item	Code	Description	See page	QT
01	0502012807	SUPPORT HOPPER PRECISION PLANTING		01
01A	1902012807	SEED HOPPER SUPPORT		01
02	0502012776	SUPPORT ARTICULATION PNEUMATIC PP		01
03	0571017899	PIN LOCK		01
04	0503030190	0.5" X 1.6" X 0.05" SPRING		01
05	0571014024	FAST BOLT GUIDE AXLE		02
06	0571017897	AXLE ARTICULATION PRECISION PLANTING		01
07	0581011225	FIXER P PLANTING CONTR CPRA		01
08	0511057155	PRECISION PLANTING LEFT TRANSMISSION 201 HOPPER		01
09	0571017894	PIN DRAG PRECISION PLANTING		01
10	0503013357	3/8 SELF-ADJUSTING NUT		01
11	0503015752	3/8" X 2" BOLT		01
12	0501013518	FLAT WASHER		02
13	0503015356	SPRING PIN		01
14	0571017896	SLEEVE ARTICULATION PRECISION PLANTING		01
15	0571017895	PIN FIXER CONDUCTOR P.P		01
16	0503011776	M6 SELF ADJUSTINGNUT		03
17	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		02
18	0503010293	CLAMP KNOB		01
19	0503010140	1/8" X 3/4" COTTERPIN		03
20	0503010131	3/16" X 1-1/2" COTTERPIN		01
21	0503010025	3/8 SPRING WASHER		01
22	0503037390	PACKING FOR PLANTING		01
23	0571019491	SLUICE PNEUMATIC		01
24	0501011643	3/8 X 1" BOLT		01
25	0503010209	3/8" UNC BUTTERFLY NUT		01
26	0503012721	1/4" X 4" BOLT		01
27	0503012880	1/4" UNC SELF ADJUSTING NUT		01
28	0581011226	FIXER CLOSING P. PLANTING CONTROL CPRA		01
29	0571019489	CLAMP PRECISION PLANTING		01


Item	Code	Description	See page	QT
30	0502012799	UPPER SUPPORT BASE PNEUMATIC PRECISION PLANTING		01
31	0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN 202 DISC		01
31A	0503062405	SEED DISTRIBUTOR		01
31B	0503062407	SET SOYBEAN DISTRIBUTION		01
31B-01	0503062417	KIT CORN DISTRIBUTION		01
31B-02	0503062471	DISTRIBUTION ASSY (SORGHUM / MILLET)		01
31B-03	0503062577	DISTRIBUTION ASSY (LARGE CORN / SUNFLOWER)		01
31B-04	0503062578	DISTRIBUTION ASSY (LARGE CORN)		01
31B-05	0503062579	DISTRIBUTION ASSY (CORN / SUNFLOWER)		01
31B-06	0503062580	DISTRIBUTION ASSY (POPCORN / COTTON)		01
31B-07	0503062581	DISTRIBUTION ASSY (SMALL CORN / POP CORN)		01
31B-08	0503062573	CONVERSATION SET FOR DISTRIBUTION (LARGE BEAN)		01
31B-09	0503062574	CONVERSATION SET FOR DISTRIBUTION (SMALL BEET)		01
31B-10	0503062564	CONVERSATION SET FOR DISTRIBUTION (SOYBEAN / BEAN)		01
32	0561014778	HEX UNIVERSAL JOINT		01
33	0503013958	1/4" X 1" BOLT		02
34	0503818139	BOLT		03
35	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		02
36	0503015110	M06 SPRING WASHER		02

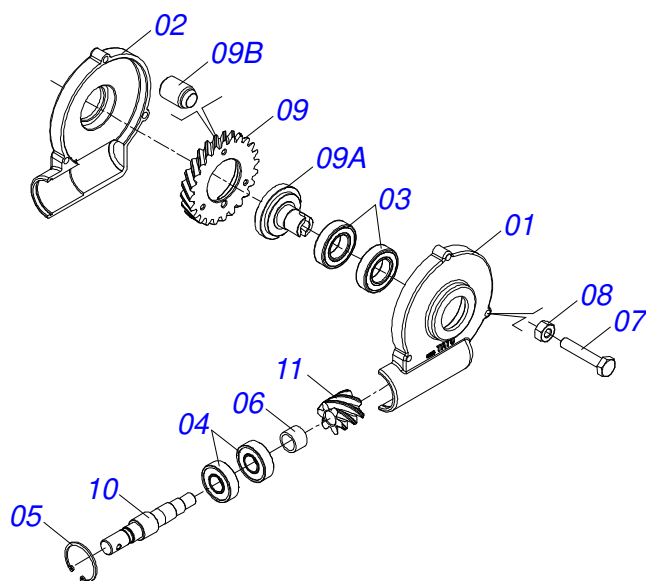


Item	Code	Description	See page	QT
01	0502050052	LEFT SIDE TRANSMISSION HOPPER PP		01
02	0502050053	RIGHT SIDE TRANSMISSION HOPPER PP		01
03	0503011410	ROLLER BEARING		02
04	0503011182	6203 ROLLER BEARING		02
05	0503011184	502040 CLAMPING RING (FOR AXLE)		01
06	0571017655	FIXER SLEEVE		01
07	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		03
08	0503010144	1/4" NUT		03
09	0511057504	JOIN GEAR		01
09A	0571017898	BODY GEAR TRANSMISSION		01
09B	0503011769	M8 X 0.5" BOLT		01
10	0581011222	PINION AXLE 6Z PNEUMATIC		01
11	0503034340	PINION AXLE 6Z PNEUMATIC		01

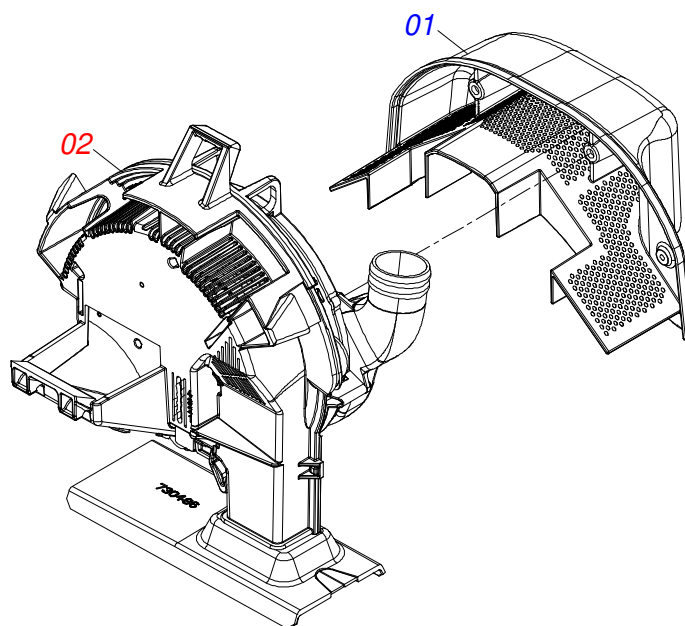


Item	Code	Description	See page	QT
01	0571019613	STRAW PRECISION PLANTING SHIELD		01
02	0521052131	VSET2 DISTRIBUTOR WITH CORN DISC WITHOUT PROTECTION	203	01

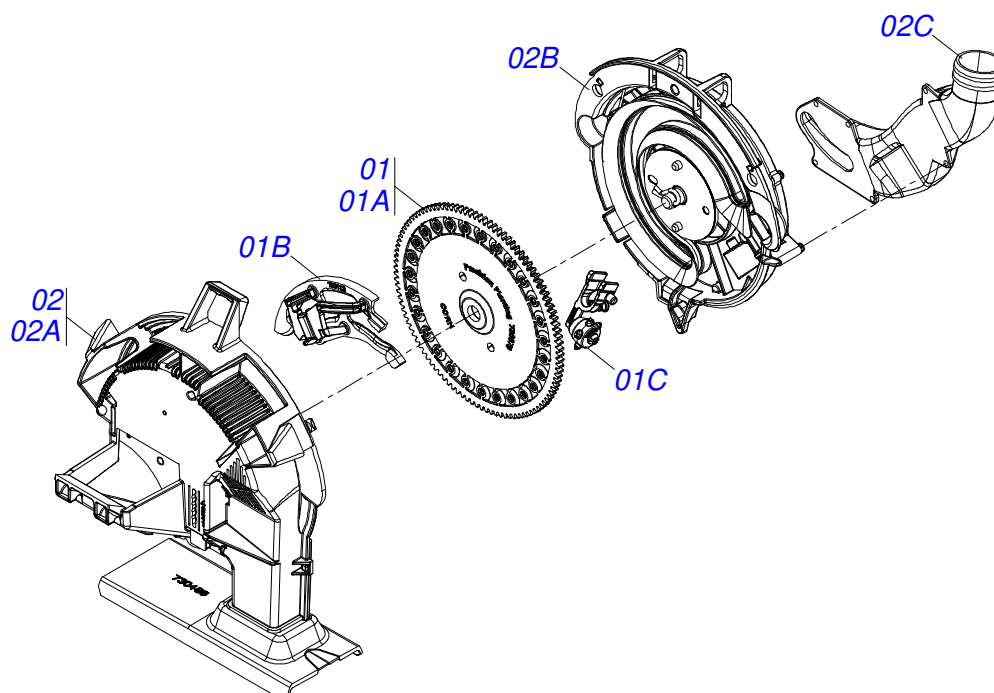


Item	Code	Description	See page	QT
01	0503062417	KIT CORN DISTRIBUTION		01
01A	0503018160	CORN PLASTIC DISC		01
01B	0503062472	SELECTOR SEED CORN		01
01C	0503062474	EJECTOR CORN SEED SET		01
02	0503062405	SEED DISTRIBUTOR		01
02A	0503062567	FIXED BASE SEEDS DISTRIBUTOR		01
02B	0503062974	MOBILE BASE WITHOUT SNORKEL		01
02C	0503062973	SNORKEL ASSY PP768718		01

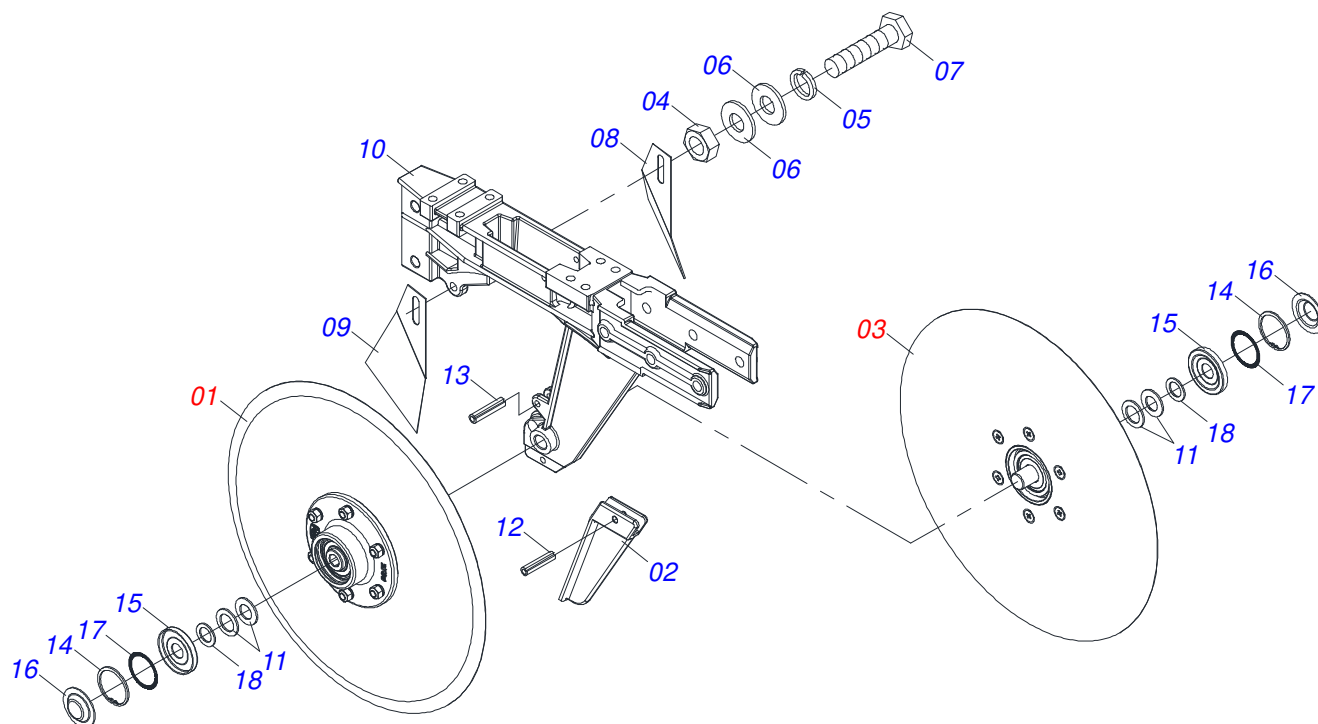


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW HUB WITH 15 DISC	206	01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	RIGHT LOW HUB WITH 15 DISC	207	01
04	0503810026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501810984	FLAT WASHER		02
07	0503810751	3/8 UNC X 1.1/4 C S G.5 - SCREW		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012780	SUPPORT DDD RIGHT		01
11	0511815098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O-RING		02
18	0591014250	19 X 26 X 0,50 FLAT WASHER		02

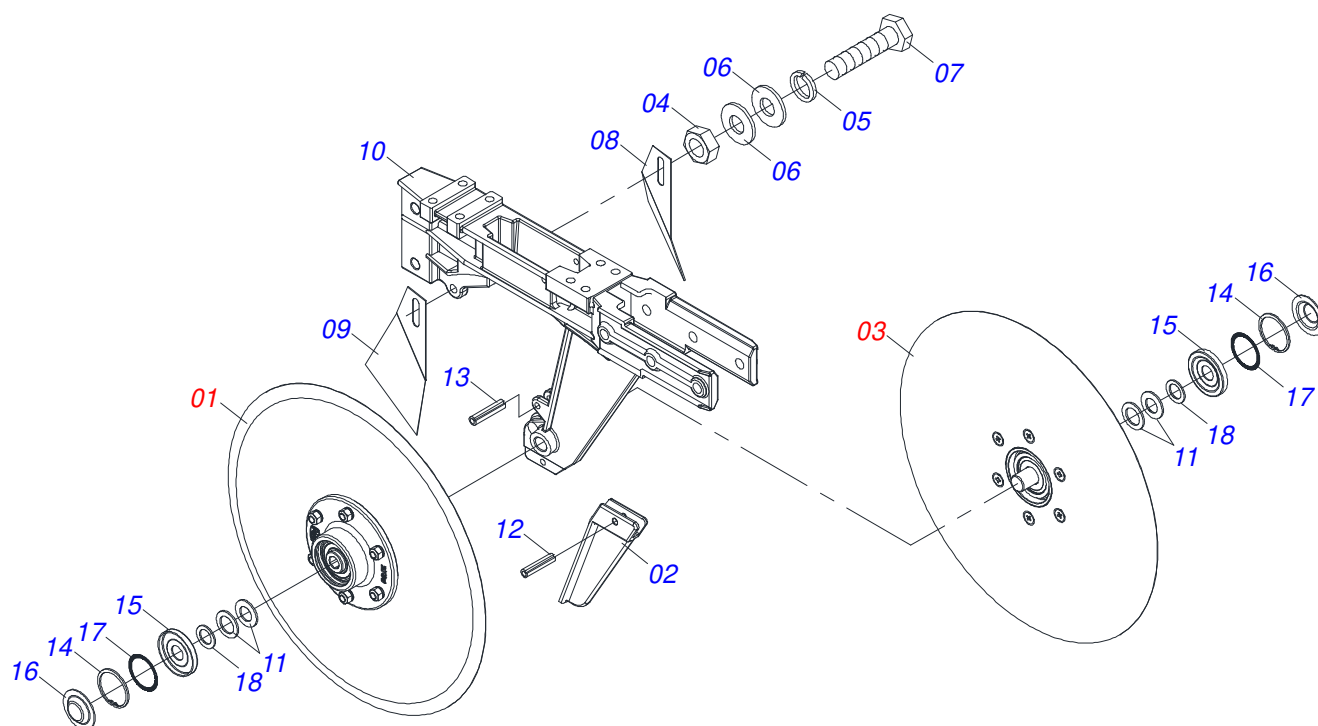


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW HUB WITH 15 DISC	206	01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	RIGHT LOW HUB WITH 15 DISC	207	01
04	0503810026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501810984	FLAT WASHER		02
07	0503810751	3/8 UNC X 1.1/4 C S G.5 - SCREW		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012781	SUPPORT DDD LEFT		01
11	0511815098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O'RING		02
18	0591014250	19 X 26 X 0,50 FLAT WASHER		02

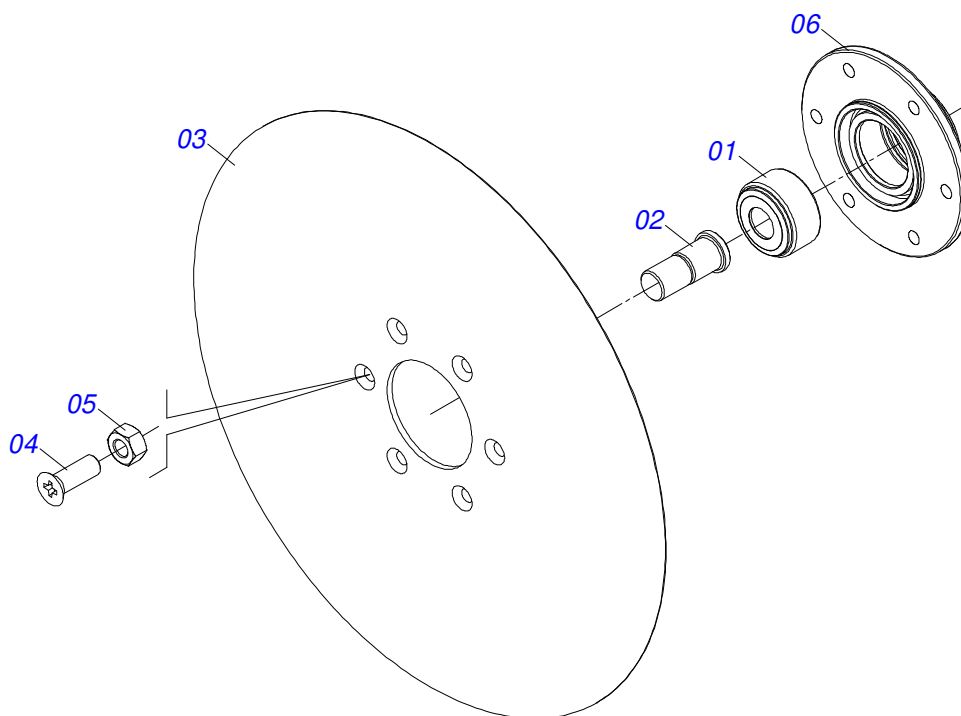


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

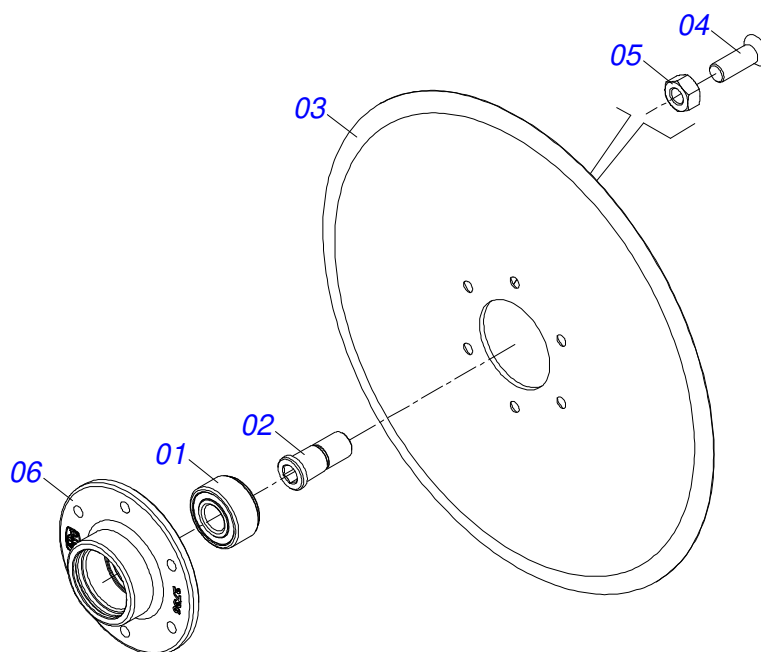


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011150	RIGHT DOUBLE DISC AXLE		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

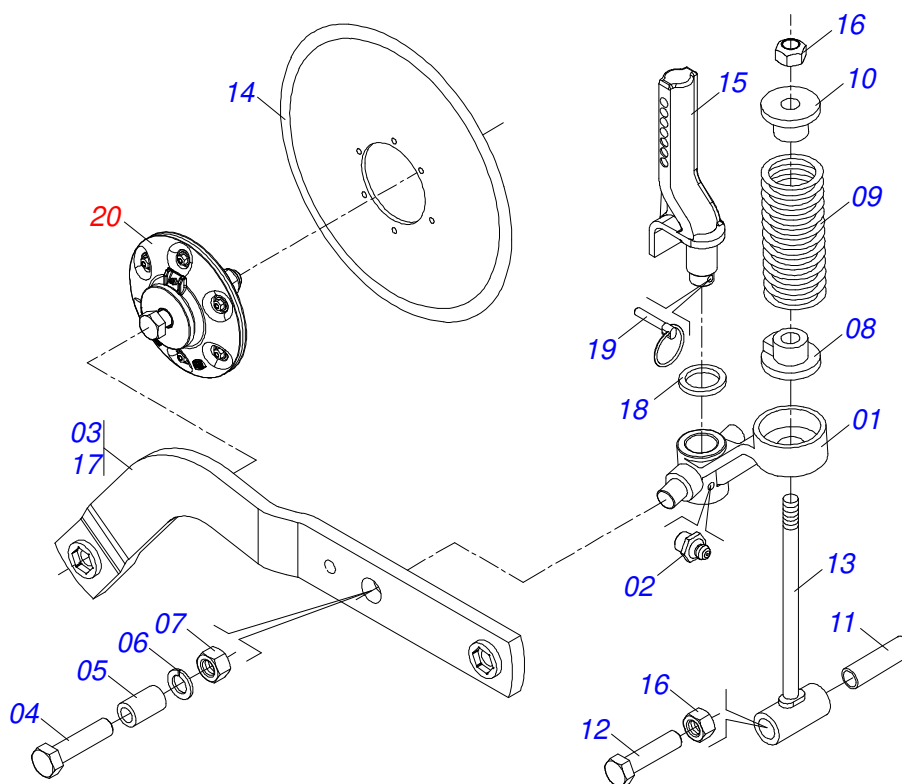


Item	Code	Description	See page	QT
01	0502012816	CUTTING DISC SUPPORT		01
02	0503010003	1845 GREASE FITTING		01
03	0571019976	LEFT BRACELET CUTTING DISC		01
04	0503011411	1/2" X 5-1/2" BOLT		01
05	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
06	0503011440	SPRING WASHER		01
07	0503010060	1/2 UNC G.5 ZN HEX NUT		01
08	0502020394	SPRING SUPPORT		01
09	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
10	0502020393	SPRING UPPER SUPPORT		01
11	0521010452	SLEEVE		01
12	0503013185	3/4" X 5-1/2" BOLT		01
13	0501067323	SPRING REGULATOR		01
14	0511056910	HUB WITH 18" DISC BLADE	213	01
15	0502012825	DISC BLADE FIXED AXLE		01
16	0503011255	3/4" LOCK NUT		02
17	0521066738	BRACO RIGHT DISC CUT WITH WASHER LOCK PST		01
18	0581011111	THRUST WASHER		01
19	0503034319	LOCK PIN		01
20	0511056909	DISC BLADE HUB WITHOUT DISC	212	01

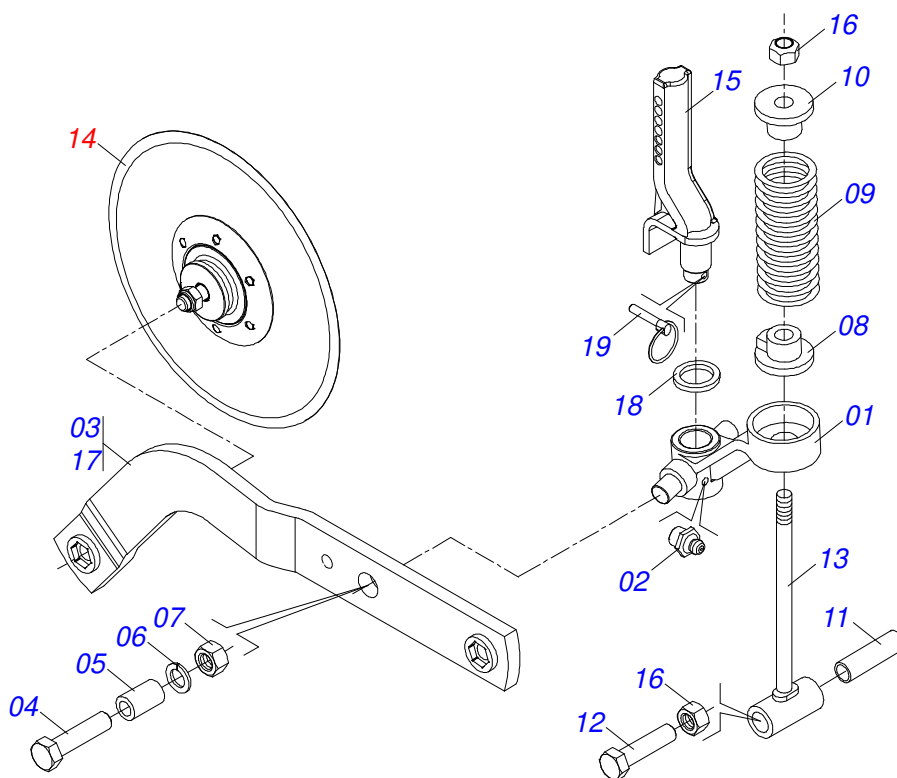


Item	Code	Description	See page	QT
01	0502012816	CUTTING DISC SUPPORT		01
02	0503010003	1845 GREASE FITTING		01
03	0571019976	LEFT BRACELET CUTTING DISC		01
04	0503011411	1/2" X 5-1/2" BOLT		01
05	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
06	0503011440	SPRING WASHER		01
07	0503010060	1/2 UNC G.5 ZN HEX NUT		01
08	0502020394	SPRING SUPPORT		01
09	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
10	0502020393	SPRING UPPER SUPPORT		01
11	0521010452	SLEEVE		01
12	0503013185	3/4" X 5-1/2" BOLT		01
13	0501067323	SPRING REGULATOR		01
14	0511056910	HUB WITH 18" DISC BLADE	213	01
15	0502012824	DISC BLADE FIXED AXLE		01
16	0503011255	3/4" LOCK NUT		02
17	0521066738	BRACO RIGHT DISC CUT WITH WASHER LOCK PST		01
18	0581011111	THRUST WASHER		01
19	0503034319	LOCK PIN		01

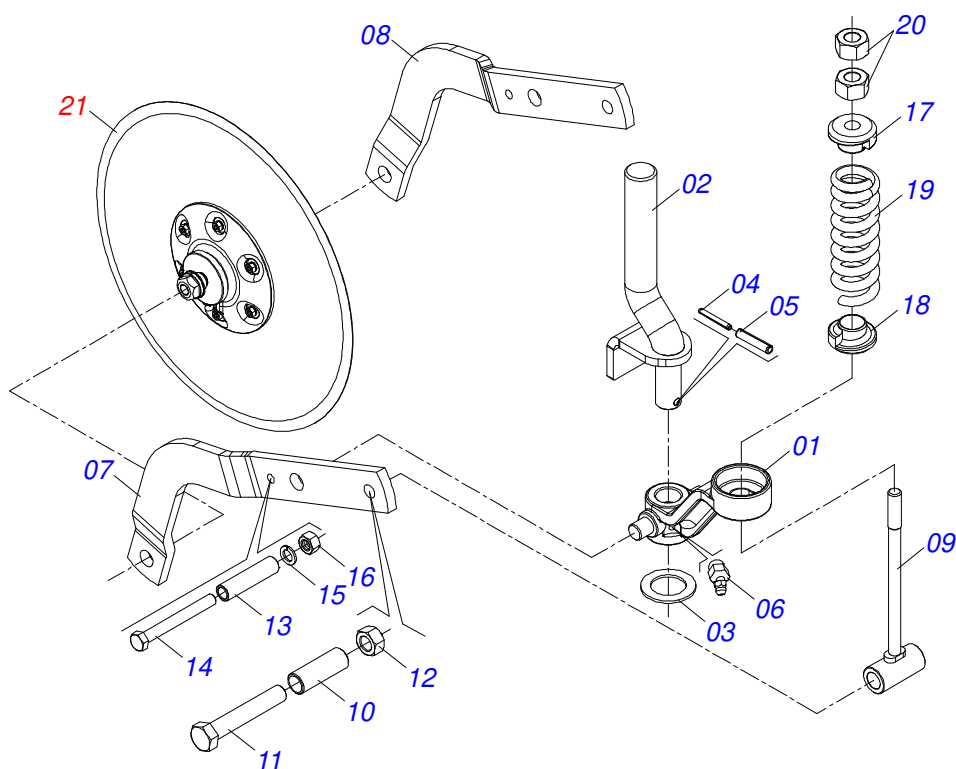


Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE		01
02	0511067045	SHORT WHIT BEATER BLADE DISC FIX AXLE		01
03	0541018684	FLAT WASHER		01
04	0503010756	0.2" X 2.4" SPRING PIN		01
05	0503010361	SPRING PIN		01
06	0503010003	1845 GREASE FITTING		01
07	0521014137	RIGHT ARM BLADE DISC		01
08	0521014138	SUPPORT ARM LEFT BALDE DISC		01
09	0501067323	SPRING REGULATOR		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0503011255	3/4" LOCK NUT		01
13	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
14	0503011411	1/2" X 5-1/2" BOLT		01
15	0503010019	1/2" SPRING WASHER		01
16	0503010060	1/2 UNC G.5 ZN HEX NUT		01
17	0502020393	SPRING UPPER SUPPORT		01
18	0502020394	SPRING SUPPORT		01
19	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
20	0503010014	3/4" HEX NUT		02
21	0521054680	20" DISC BLADE HUB	214	01

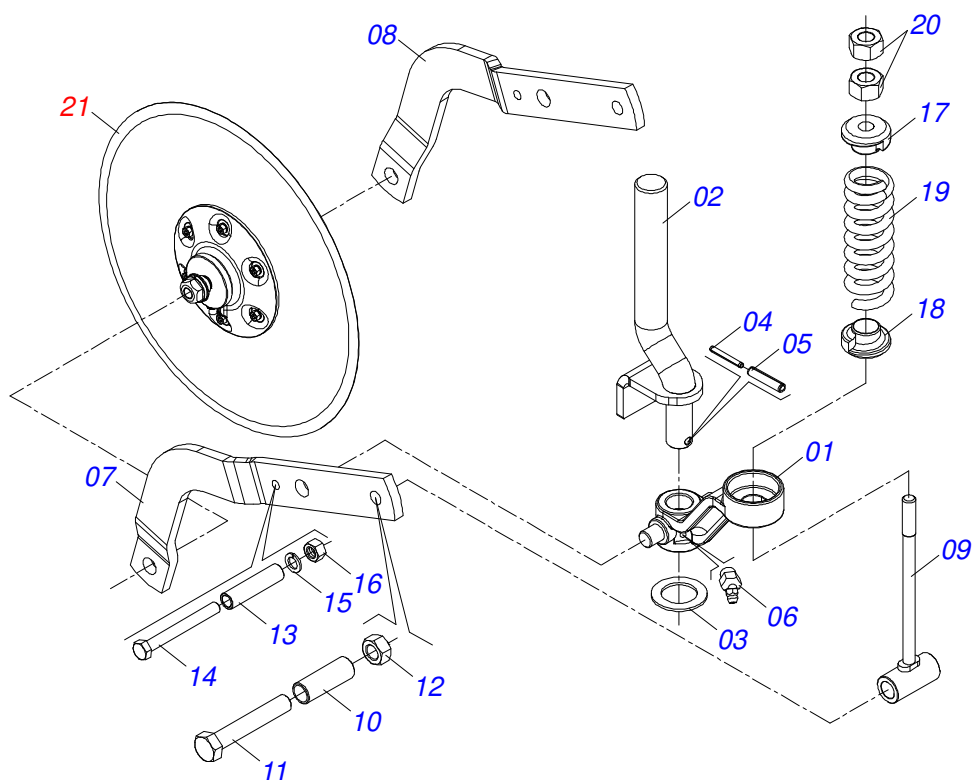


Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE		01
02	0511067044	LONG WHIT BEATER BLADE DISC FIX AXLE		01
03	0541018684	FLAT WASHER		01
04	0503010756	0.2" X 2.4" SPRING PIN		01
05	0503010361	SPRING PIN		01
06	0503010003	1845 GREASE FITTING		01
07	0521014137	RIGHT ARM BLADE DISC		01
08	0521014138	SUPPORT ARM LEFT BALDE DISC		01
09	0501067323	SPRING REGULATOR		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0503011255	3/4" LOCK NUT		01
13	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
14	0503011411	1/2" X 5-1/2" BOLT		01
15	0503010019	1/2" SPRING WASHER		01
16	0503010060	1/2 UNC G.5 ZN HEX NUT		01
17	0502020393	SPRING UPPER SUPPORT		02
18	0502020394	SPRING SUPPORT		01
19	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
20	0503010014	3/4" HEX NUT		02
21	0521054680	20" DISC BLADE HUB	214	01

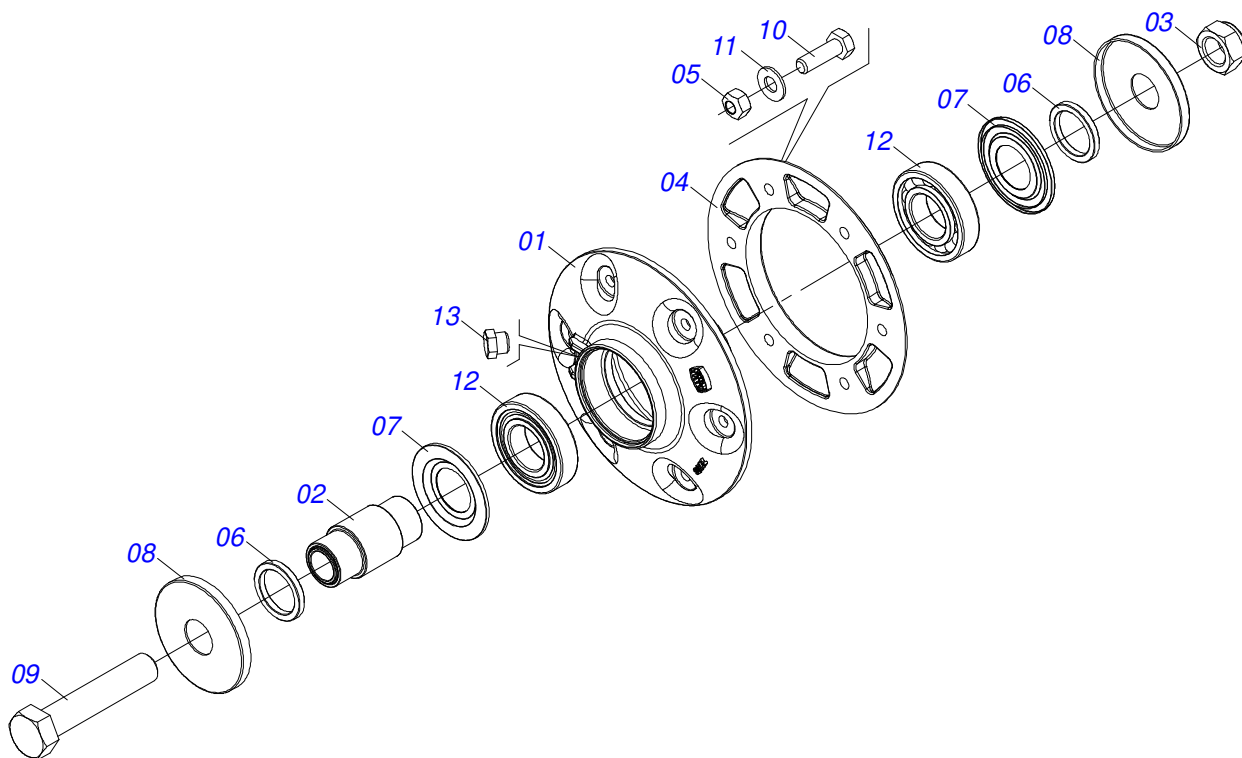


Item	Code	Description	See page	QT
01	0502012793	DISC HUB		01
02	0571018047	DISC BLADE HUB AXLE		01
03	0503017755	NUT		01
04	0502020641	BLADE DISC FLANGE		01
05	0503013816	5/16" LOCKNUT		06
06	0571018048	BACKREST WASHER		02
07	0521065882	NILOS SEALING RING		02
08	0571018049	DUST CLOAK		02
09	0581010575	7/8" X 145 BOLT		01
10	0503018825	5/16 UNC UNC BOLT		06
11	0501010694	FLAT WASHER		06
12	0503016061	BEARING		02
13	0511017907	1/8" BSPT X 6 PLUG		01

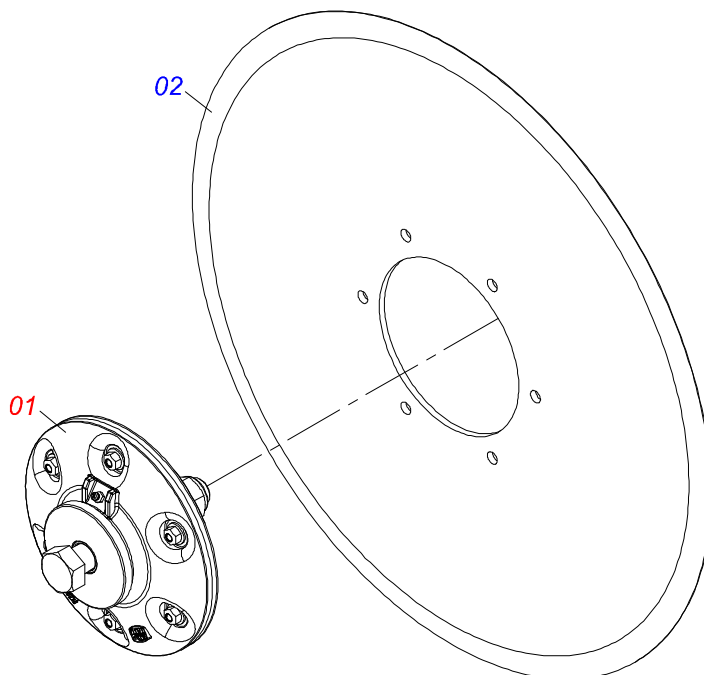


Item	Code	Description	See page	QT
01	0511056909	DISC BLADE HUB WITHOUT DISC	212	01
02	0603026013	PLAIN COULTER BLADE		01

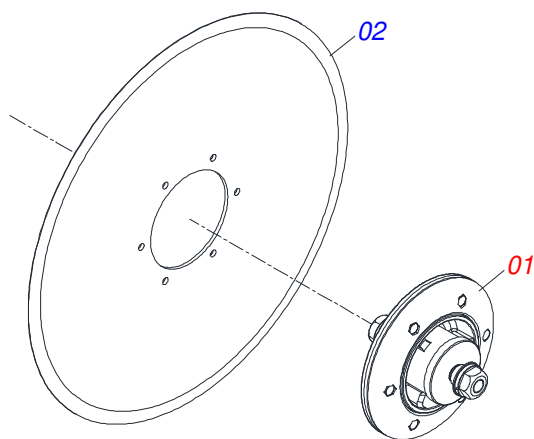


Item	Code	Description	See page	QT
01	0521054679	DISC BLADE HUB	215	01
02	0603027851	20" X 0.2" FLAT PLAIN DISC		01

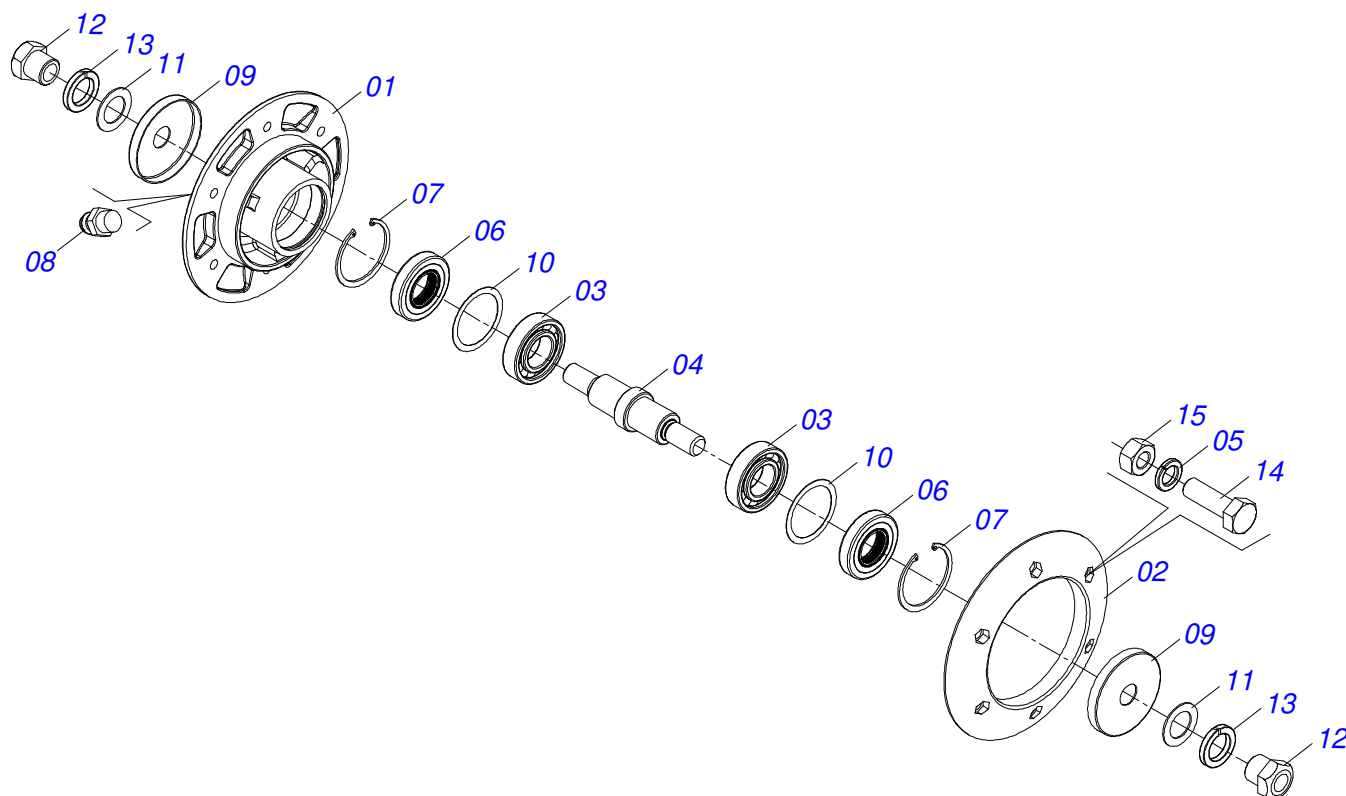


Item	Code	Description	See page	QT
01	0502011562	DISC BLADE HUB		01
02	0502020641	BLADE DISC FLANGE		01
03	0503010276	6206 BALL BEARING		02
04	0521013610	BLADE DISC HUB AXLE		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
06	0503012417	SEAL		02
07	0503011800	SEAL RING		02
08	0503010691	1/4" GREASE FITTING		01
09	0521015376	DUST CLOAK		02
10	0503030832	FLAT WASHER		02
11	0511015346	FLAT WASHER		02
12	0521013510	3/4" NUT		02
13	0503010012	1" SPRING WASHER		02
14	0503010371	5/16" X 1" BOLT		06
15	0503010337	5/16" NUT		06

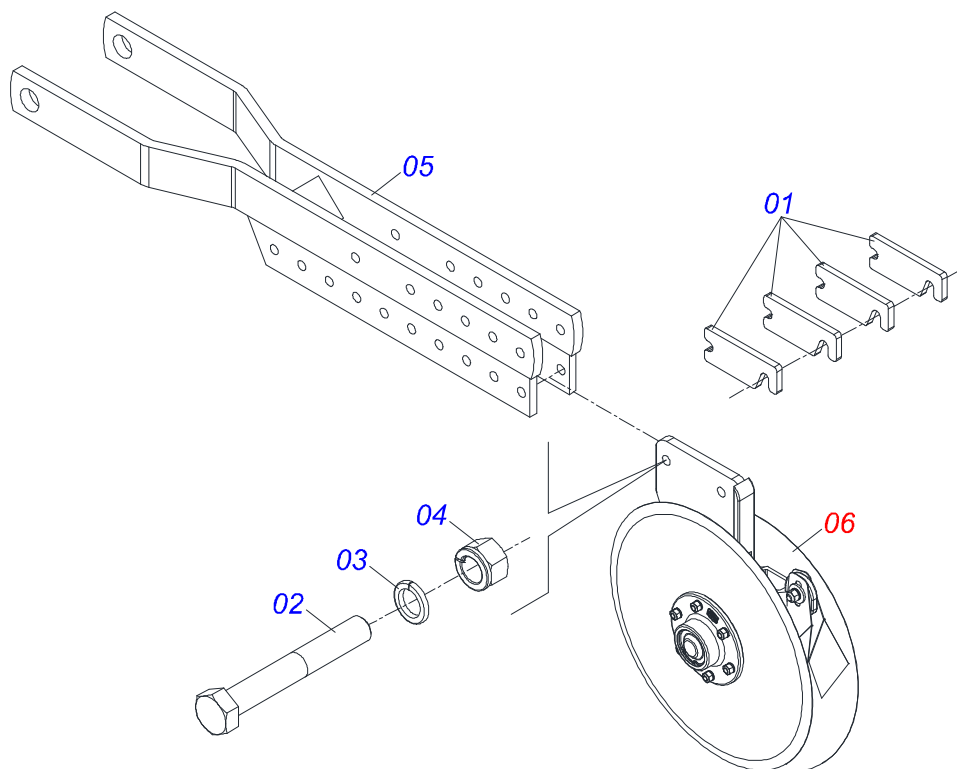


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0521061121	SHORT FERTILIZER ROW ARM		01
06	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	218	01

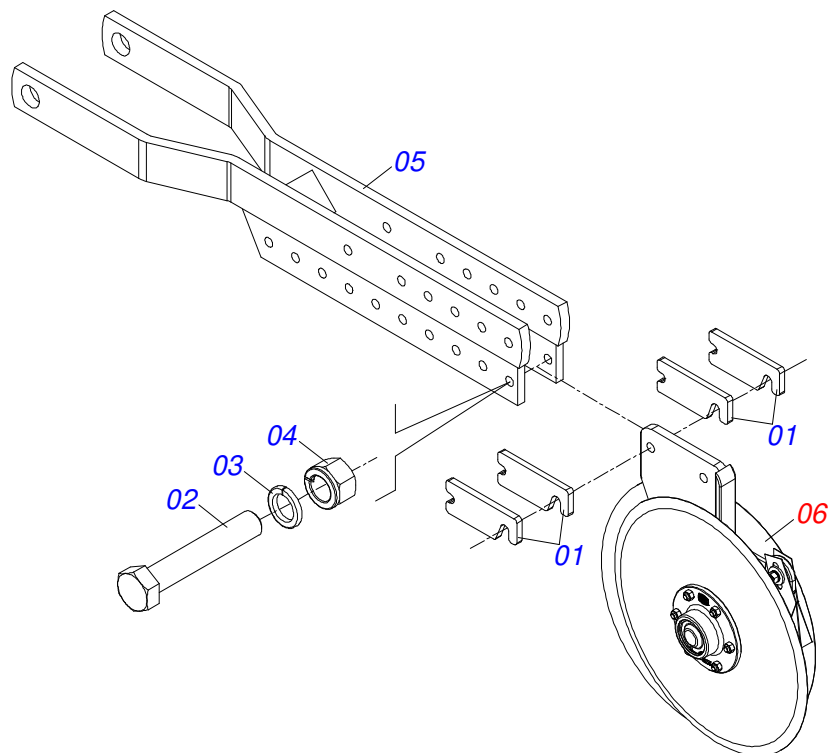


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0521061153	FERTILIZER ROW LONG ARM		01
06	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	219	01

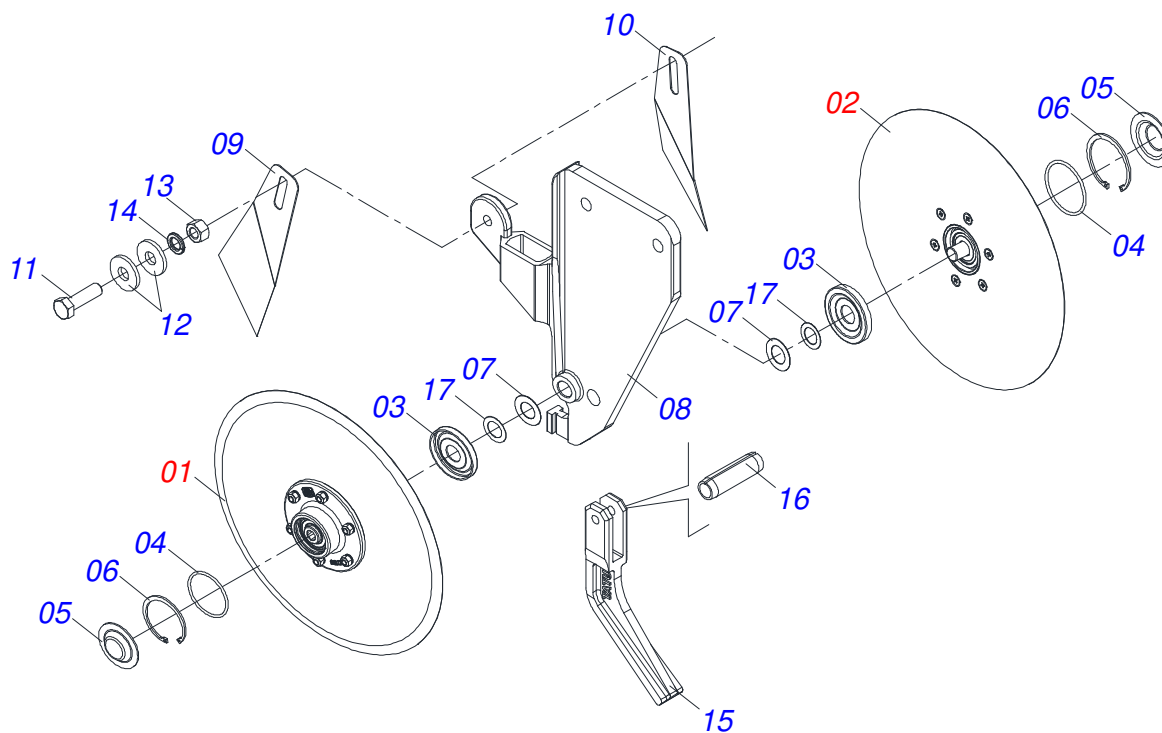


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW HUB WITH 15 DISC	206	01
02	0511053173	RIGHT LOW HUB WITH 15 DISC	207	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503010025	3/8 SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

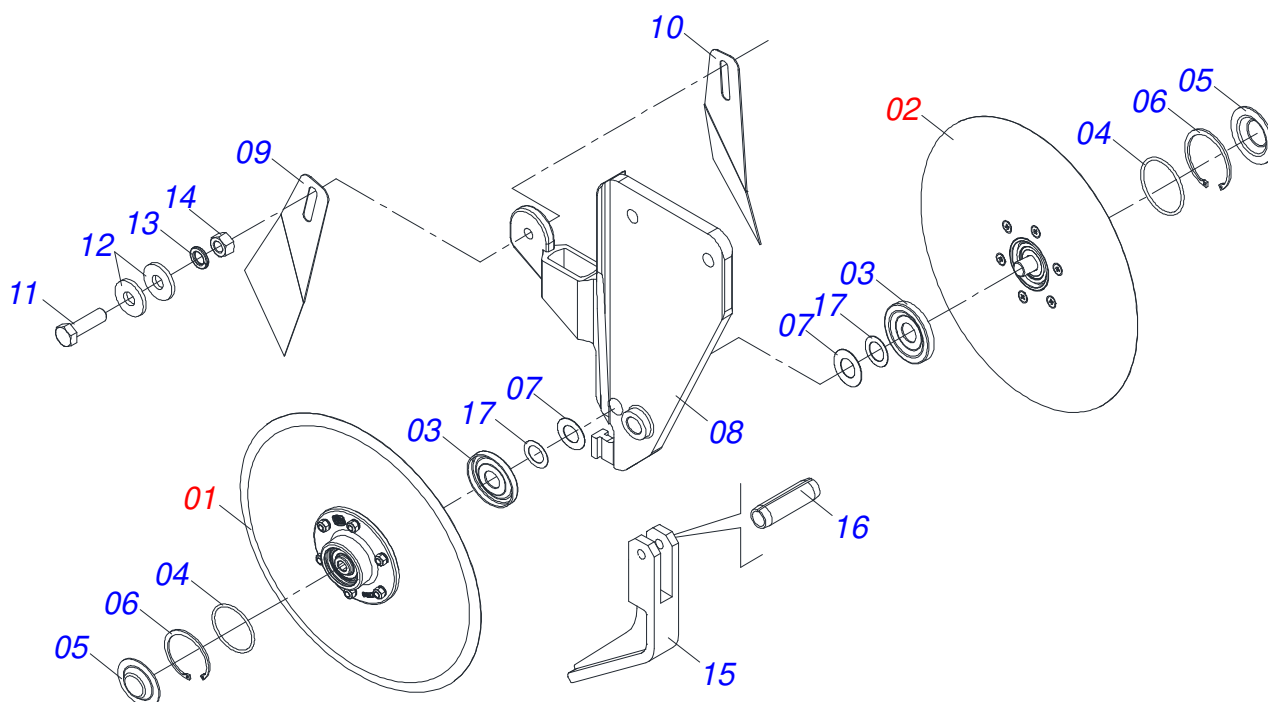


Item	Code	Description	See page	QT
01	0511053173	RIGHT LOW HUB WITH 15 DISC	207	01
02	0511053172	LEFT LOW HUB WITH 15 DISC	206	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
13	0503010025	3/8 SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

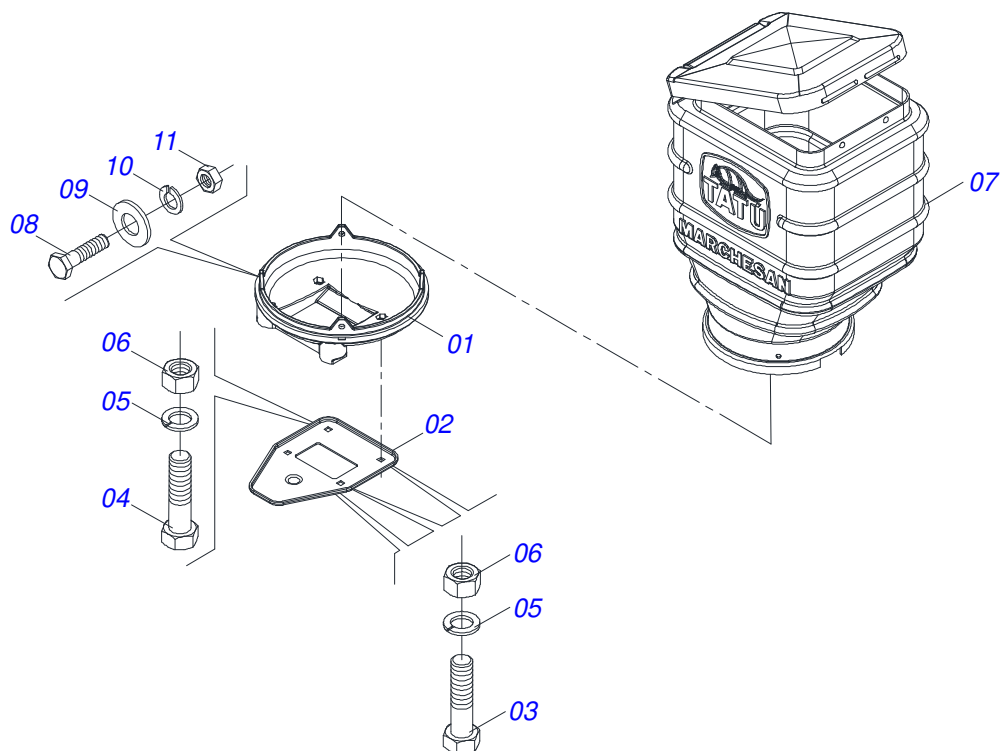


Item	Code	Description	See page	QT
01	0502012798	SUPPORT HOPPER SEED		01
02	0581012694	COMPACT PROTECTION		01
03	0503010849	3/8" X 1-1/2" BOLT		03
04	0501010096	3/8" X 2" BOLT		01
05	0503010025	3/8 SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0503031508	COVER GREEN BEAM SEED YELLOW		01
08	0503010358	5/16" X 5/8" BOLT		04
09	0501010694	FLAT WASHER		04
10	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
11	0503010337	5/16" NUT		04

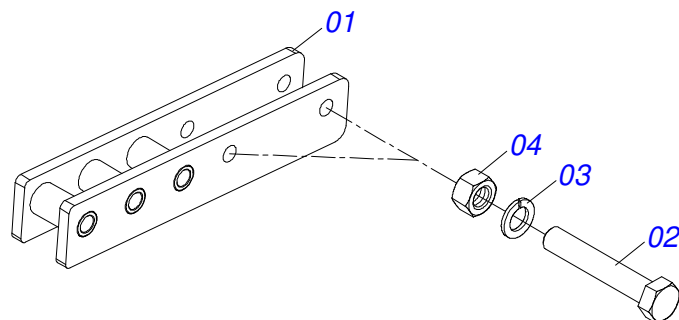


Item	Code	Description	See page	QT
01	0521068467	FIXED ROD EXTENSION		01
02	0503010479	BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02

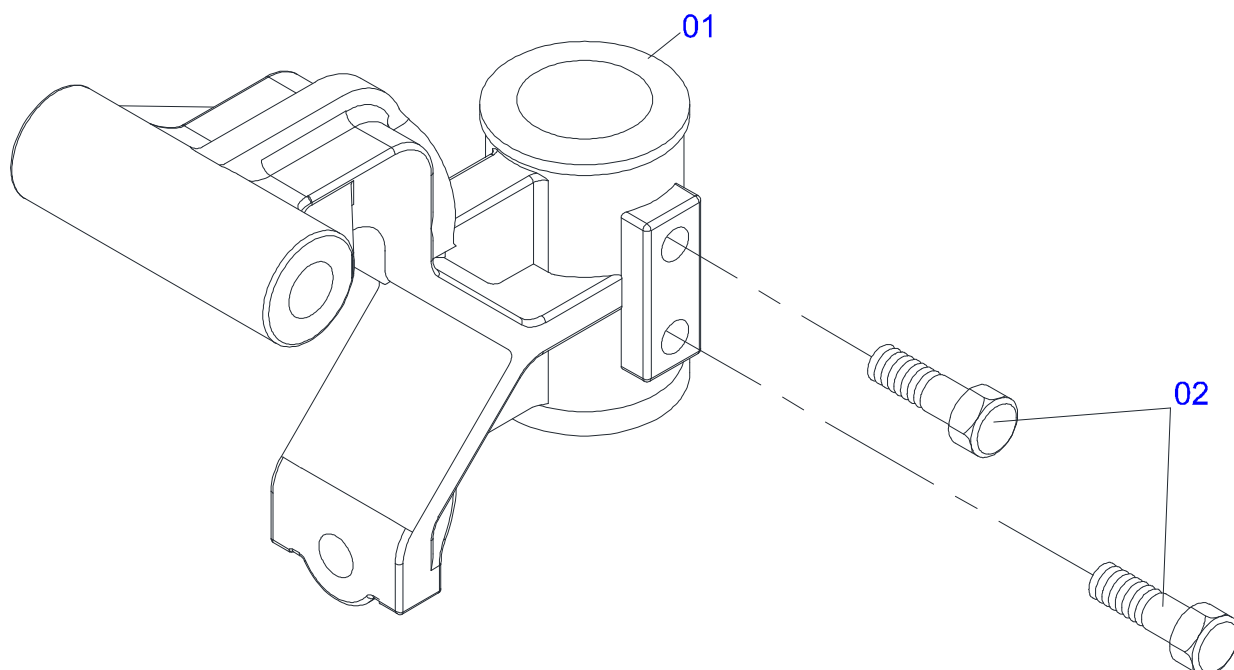

Item	Code	Description	See page	QT
01	0502011567	FERTILIZER ROW SUPPORT		01
02	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02

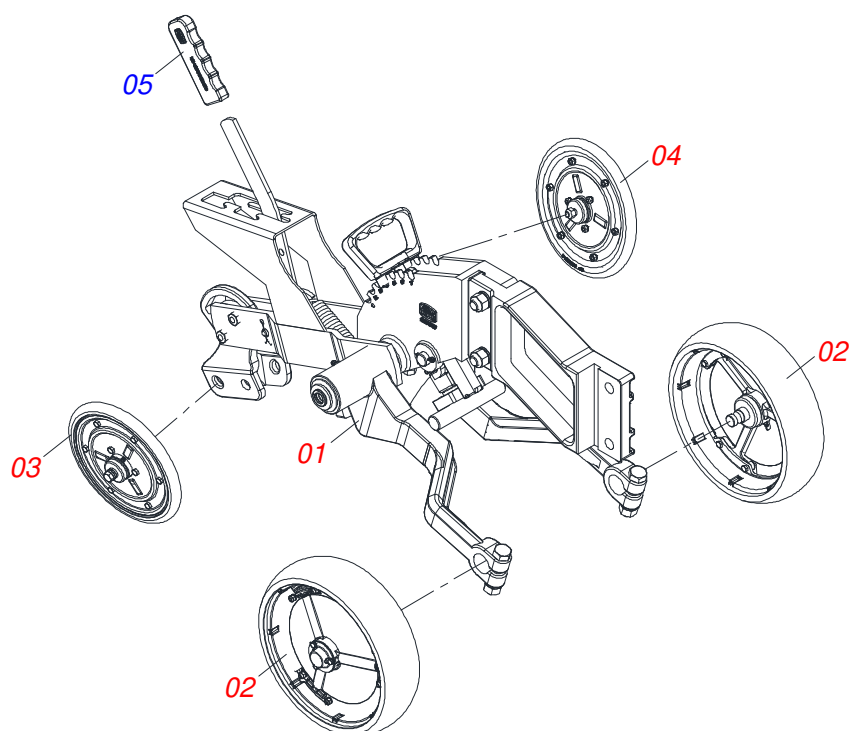


Item	Code	Description	See page	QT
01	0511053550	DEPTH CONTROL ASSY	232	01
02	0511050077	WHEEL STRIPED	233	02
03	0511054333	COMPACT WHEEL RIGHT WITH BEARING	235	01
04	0511054334	COMPACT WHEEL LEFT WITH BEARING	236	01
05	0503033942	COMPACTOR WHEEL REGULATOR LID		01

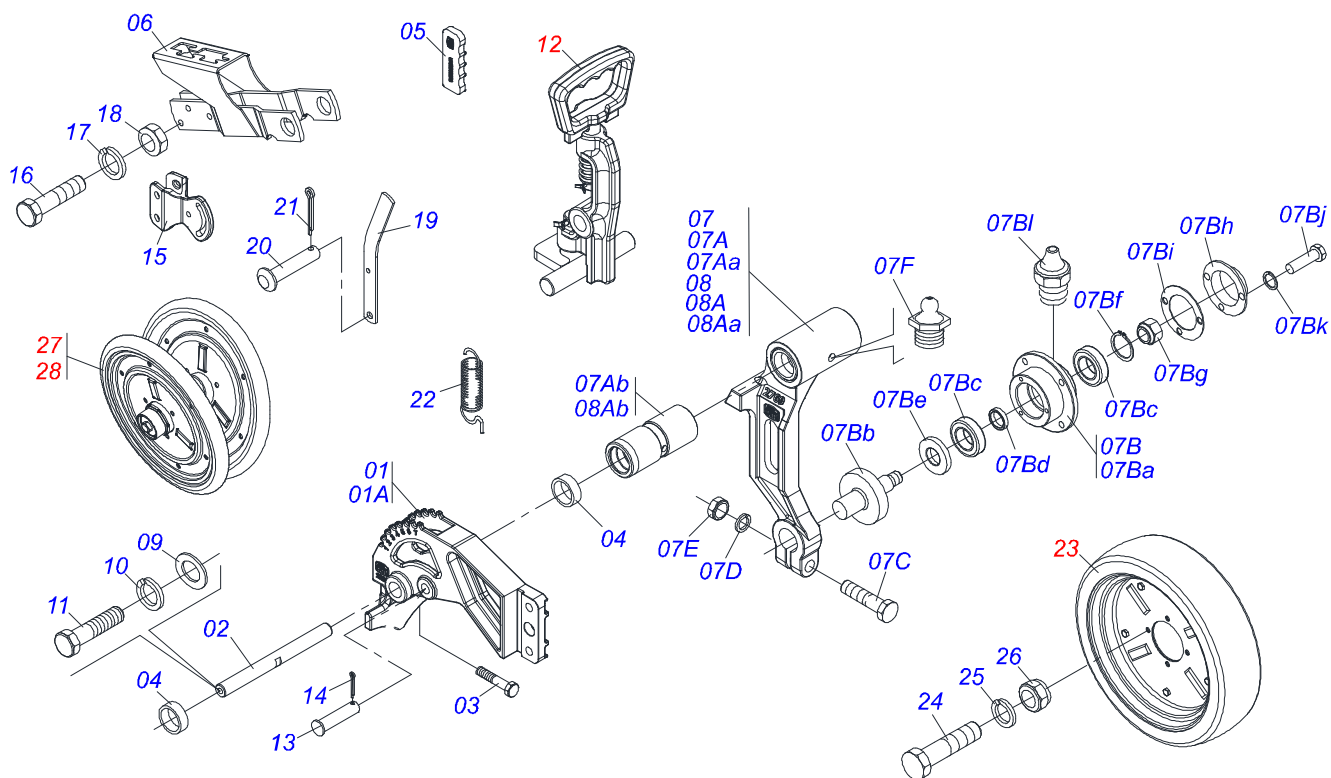


Item	Code	Description	See page	QT
01	0511056691	CONTROL DEPTH SUPPORT		01
01A	0502012282	DEPTH CONTROL SUPPORT		01
02	0571016886	DEPTH WHEEL AXLE		01
03	0503810256	SCREW		01
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
05	0503033942	COMPACTOR WHEEL REGULATOR LID		01
06	0521064073	REGULACION WHEEL COMPACTOR		01
07	0511056692	DEPTH WHEEL RIGHT ARM		01
07A	0501110796	DEPTH CONTROL RIGHT ARM		01
07Aa	0502012769	DEPTH WHEEL RIGHT ARM		01
07Ab	0571016883	36,04 X 25,62 X 85 NYLON SLEEVE		01
07B	0501052627	ASSY DEPTH WHEEL HUB	258	02
07Ba	0502011907	DEPTH CONTROL WHEEL HUB		02
07Bb	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		02
07Bc	0503010269	6204 BALL BEARING		04
07Bd	0501013636	SPACING SLEEVE		02
07Be	0503010689	SEAL 00763-BR		02
07Bf	0503011105	SEAL RING		02
07Bg	0503010878	5/8" SELF ALIGNING NUT		02
07Bh	0521019178	PROTECTION LID		02
07bi	0503030757	2.9" X 2" X 0.02" JOINT		02
07Bj	0503014729	1/4" UNF X 1/2" BOLT		06
07Bk	0503011441	SPRING WASHER		06
07Bl	0503010691	1/4" GREASE FITTING		02
07C	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07D	0503011440	SPRING WASHER		02
07E	0503010060	1/2 UNC G.5 ZN HEX NUT		02
07F	0503010002	1800 GREASE FITTING		02
08	0511056693	LH ARM DEPTH CONTROL WHEEL		01
08A	0501110797	LEFT ARM WITH SLEEVE		01
08Aa	0502012770	DEPTH WHEEL LEFT ARM		01


Item	Code	Description	See page	QT
08Ab	0571016883	36,04 X 25,62 X 85 NYLON SLEEVE		01
09	0571017749	FLAT WASHER		02
10	0503011440	SPRING WASHER		02
11	0503010311	1/2" X 1-1/4" BOLT		02
12	0501052297	DEPTH WHEELS REGULATOR ASSY	237	01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010257	1/8" X 1" COTTERPIN		01
15	0502012116	PRESS WHEEL ADJUSTER		01
16	0503010849	3/8" X 1-1/2" BOLT		02
17	0503011443	3/8" SPRING WASHER		02
18	0503010026	3/8" NUT		02
19	0541016906	PRESS WHEELS REGULATOR BODY		01
20	0521010539	0.3" X 1.2" COUPLING SHAFT		01
21	0503010140	1/8" X 3/4" COTTERPIN		01
22	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
23	0501052538	DEPTH BAND WITH ARMS	238	02
24	0503010358	5/16" X 5/8" BOLT		08
25	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
26	0503013816	5/16" LOCKNUT		08
27	0511054333	COMPACT WHEEL RIGHT WITH BEARING	235	01
28	0511054334	COMPACT WHEEL LEFT WITH BEARING	236	01

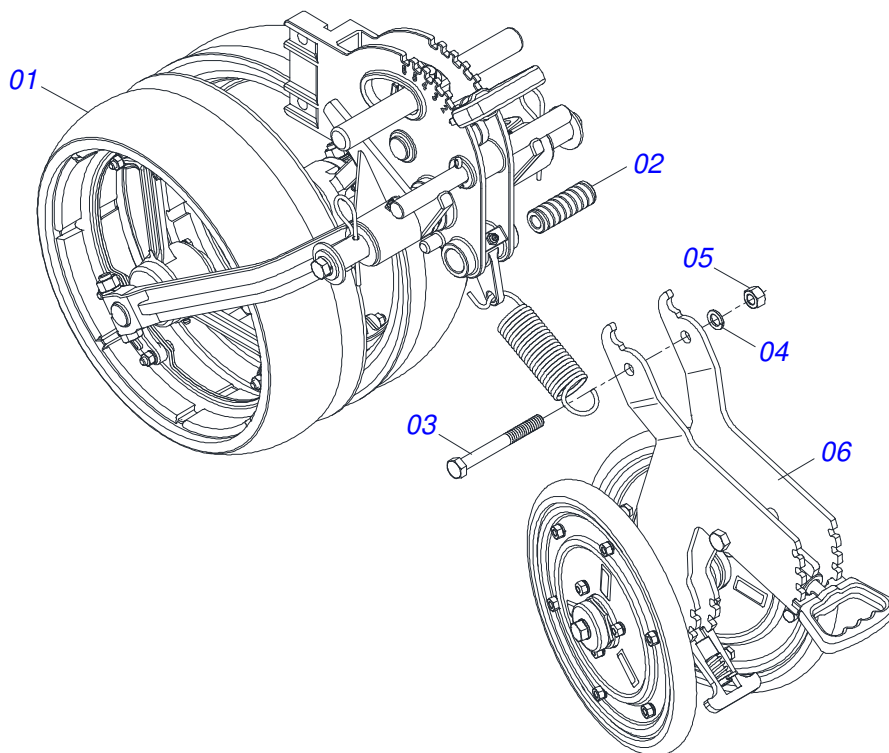


Item	Code	Description	See page	QT
01	0511055690	WHEEL SYSTEM	239	01
02	0551019650	SLEEVE 13,20 X 25 X 74		01
03	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0511055327	COMPACTING WHEEL V ASSY RUBBER	241	01

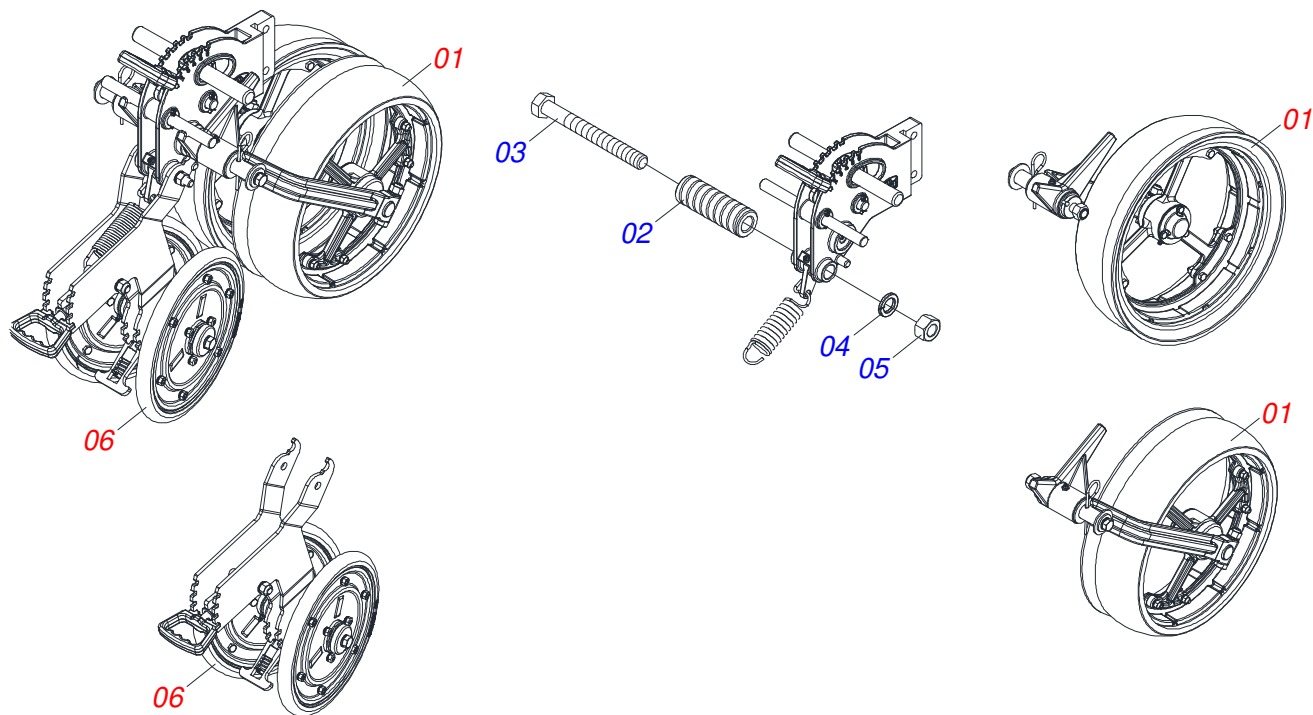


Item	Code	Description	See page	QT
01	0511055326	DEPTH CONTROL PRESS WHEEL ASSY	240	01
02	0551019650	SLEEVE 13,20 X 25 X 74		01
03	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0511055327	COMPACTING WHEEL V ASSY RUBBER	241	01

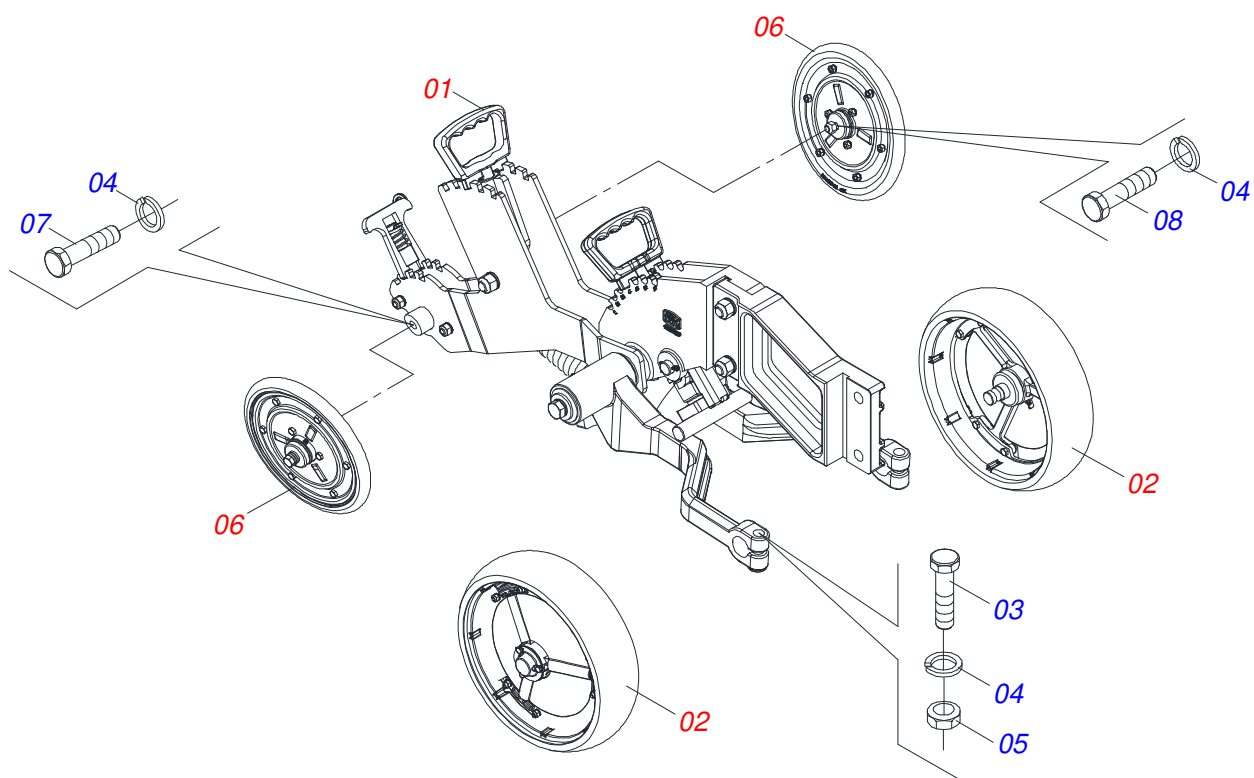


Item	Code	Description	See page	QT
01	0511059462	DEPTH CONTROL WITH FAST ADJUSTMENT	242	01
02	0511050077	WHEEL STRIPED	233	02
03	0503016453	1/2" X 2.1/2 BOLT		02
04	0503010019	1/2" SPRING WASHER		04
05	0503010028	1/2" NUT		02
06	0501052908	COMPACTOR WHEEL WITH BEARING	243	02
07	0503010752	1/2" X 3.1/2" BOLT		01
08	0503013739	1/2" X 1" BOLT		01

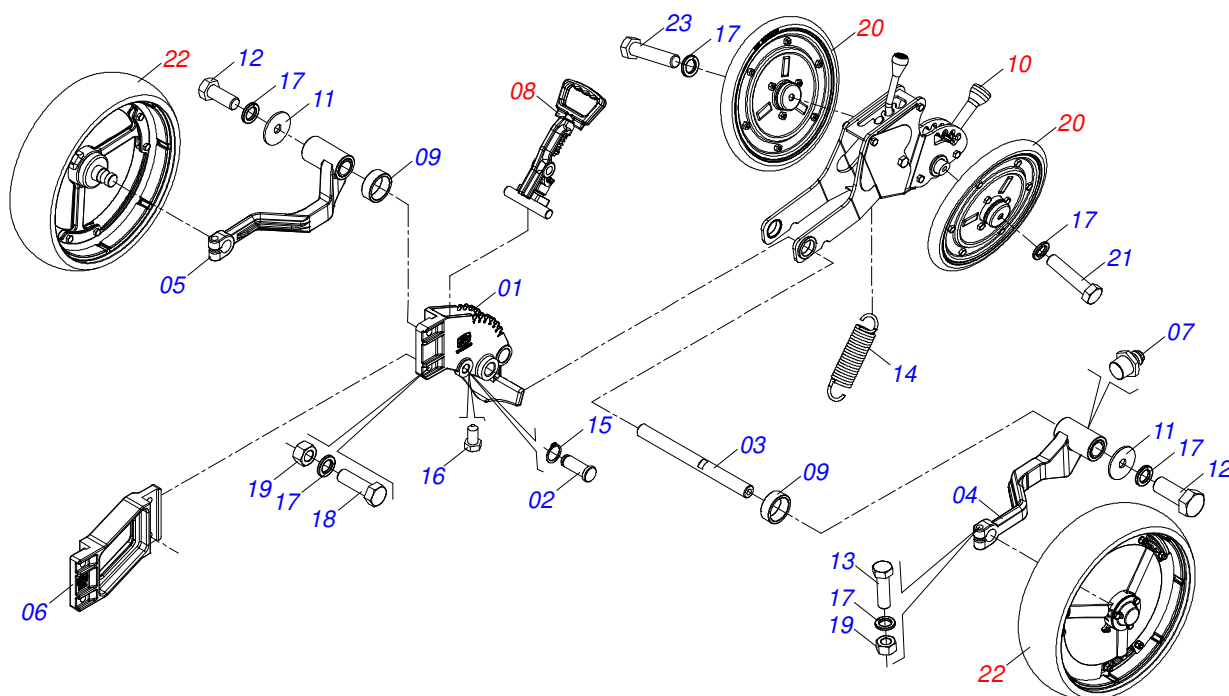


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0581014858	DEPTH WHEEL AXLE		01
04	0501110720	ARM LEFT		01
05	0501110719	DEPTH CONTROL RIGHT ARM		01
06	0502012663	EXTENSION		01
07	0503010002	1800 GREASE FITTING		02
08	0501056769	DEPTH WHEELS REGULATOR ASSY	244	01
09	0503034793	ARTICULATION SLEEVE		02
10	0521051423	COMPACTOR SUPPORT	245	01
11	0571017749	FLAT WASHER		02
12	0503010311	1/2" X 1-1/4" BOLT		02
13	0503016453	1/2" X 2.1/2 BOLT		02
14	0503034817	SPRING		01
15	0503010581	RING		01
16	0503034377	3/8 UNC X 3/4 BOLT		01
17	0503010019	1/2" SPRING WASHER		08
18	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
19	0503010060	1/2 UNC G.5 ZN HEX NUT		04
20	0501052908	COMPACTOR WHEEL WITH BEARING	243	02
21	0503013739	1/2" X 1" BOLT		01
22	0511050077	WHEEL STRIPED	233	02
23	0503010752	1/2" X 3.1/2" BOLT		01

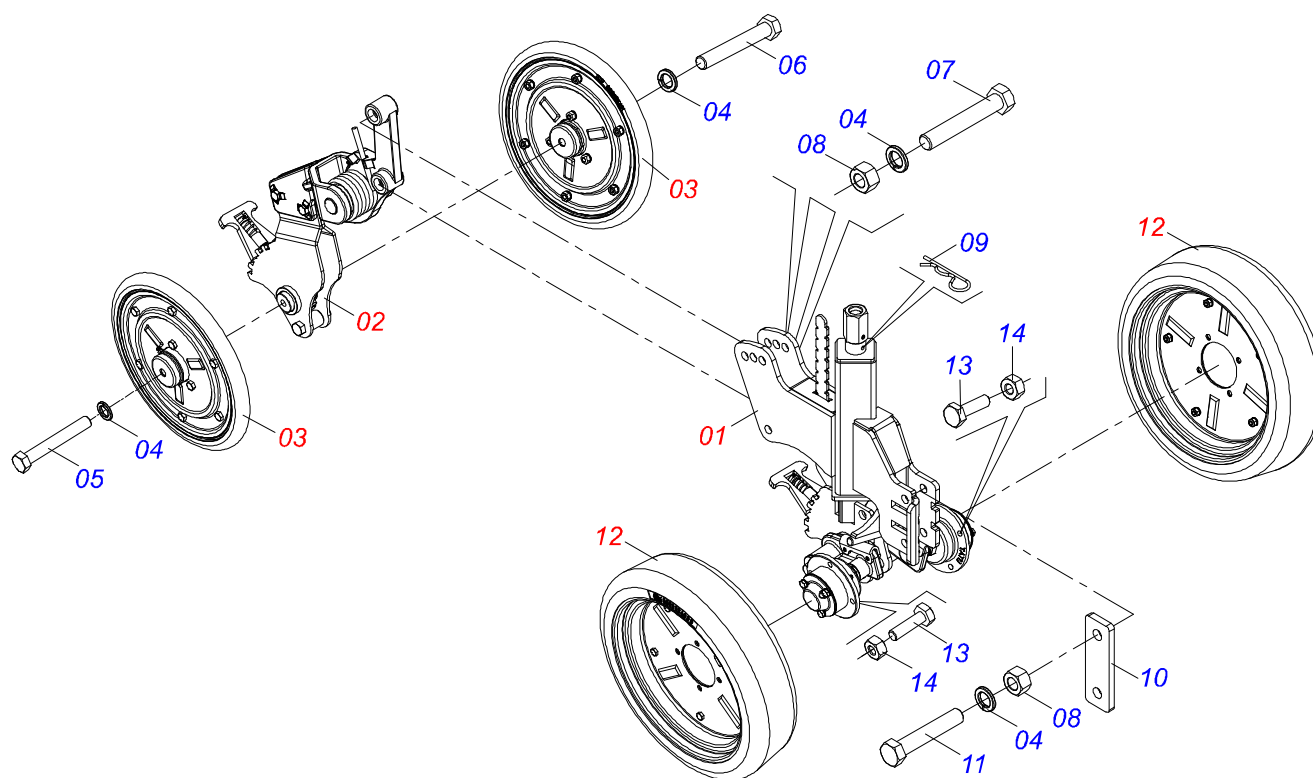


Item	Code	Description	See page	QT
01	0511052971	SEMI-ASSEMBLED DEPTH CONTROL WITH THREAD	246	01
02	0511052970	SYSTEM COMPACTOR V SEMI MOUNTED	247	01
03	0501052908	COMPACTOR WHEEL WITH BEARING	243	02
04	0503010019	1/2" SPRING WASHER		06
05	0503010752	1/2" X 3.1/2" BOLT		01
06	0503013739	1/2" X 1" BOLT		01
07	0503010479	BOLT		02
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503030012	HITCH PIN CLIP		01
10	0571013222	FIXING CHOCK		01
11	0503010741	1/2" X 2-3/4" BOLT		02
12	0511055819	DEPTH BAND WITH RIM	248	02
13	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		08
14	0503013816	5/16" LOCKNUT		08

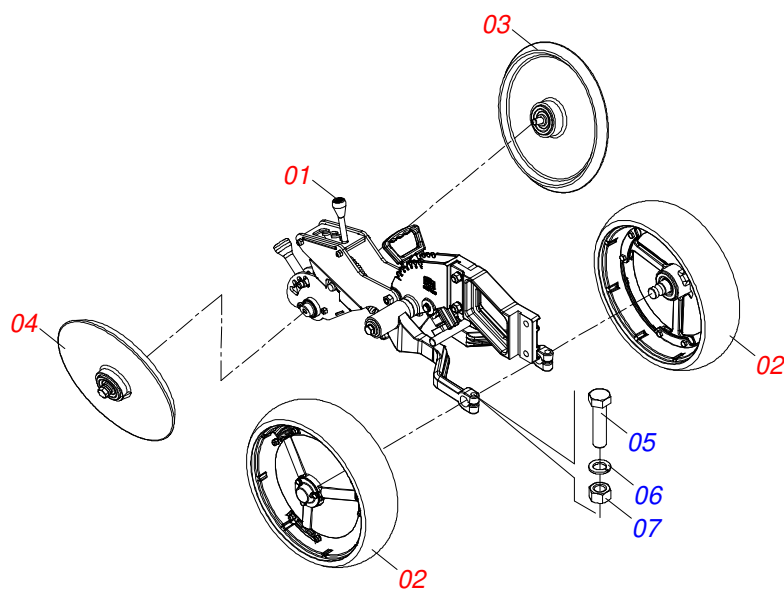


Item	Code	Description	See page	QT
01	0521055065	ASSY DEPTH / COMPACTOR	249	01
02	0521055068	RAYED WHEEL CENTER CLOSED	250	02
03	0521055018	WHEEL DRIVE WHEEL LEFT IN V	251	01
04	0521055019	IRON IN RIGHT WHEEL COMPACTOR V	252	01
05	0503016453	1/2" X 2.1/2 BOLT		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010028	1/2" NUT		02

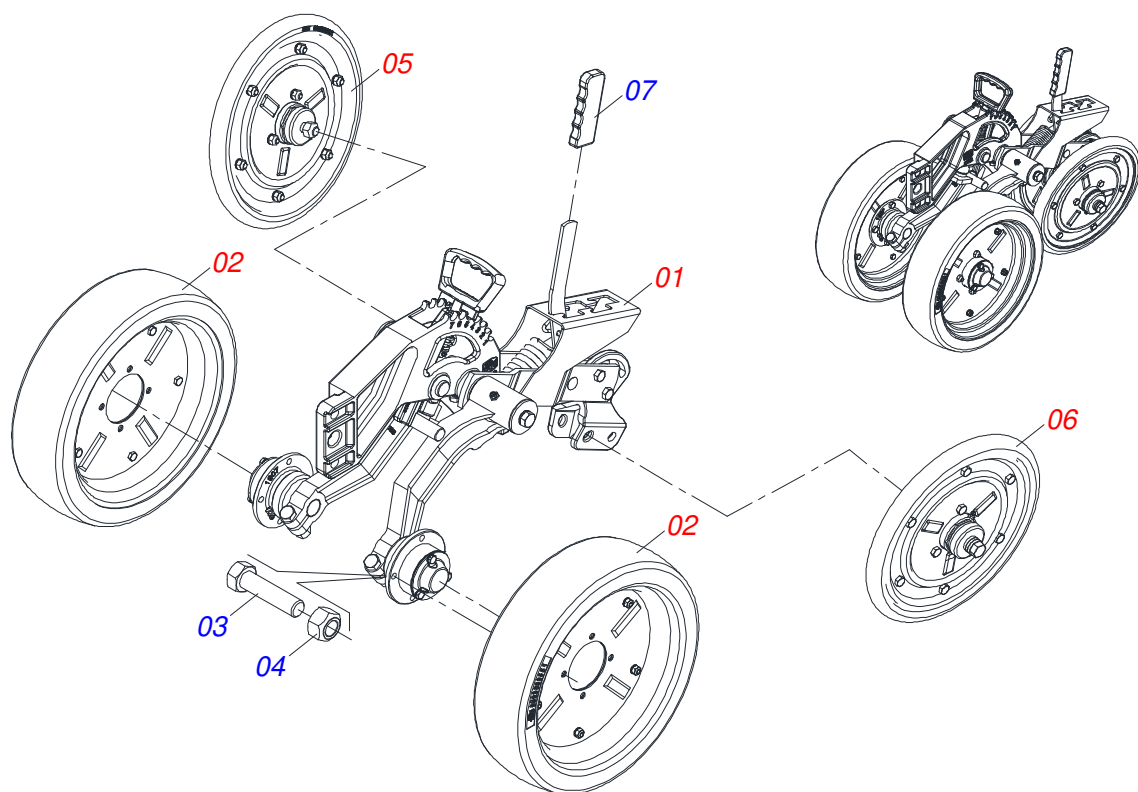


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	254	01
02	0501052538	DEPTH BAND WITH ARMS	238	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	235	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	236	01
07	0503033942	COMPACTOR WHEEL REGULATOR LID		01

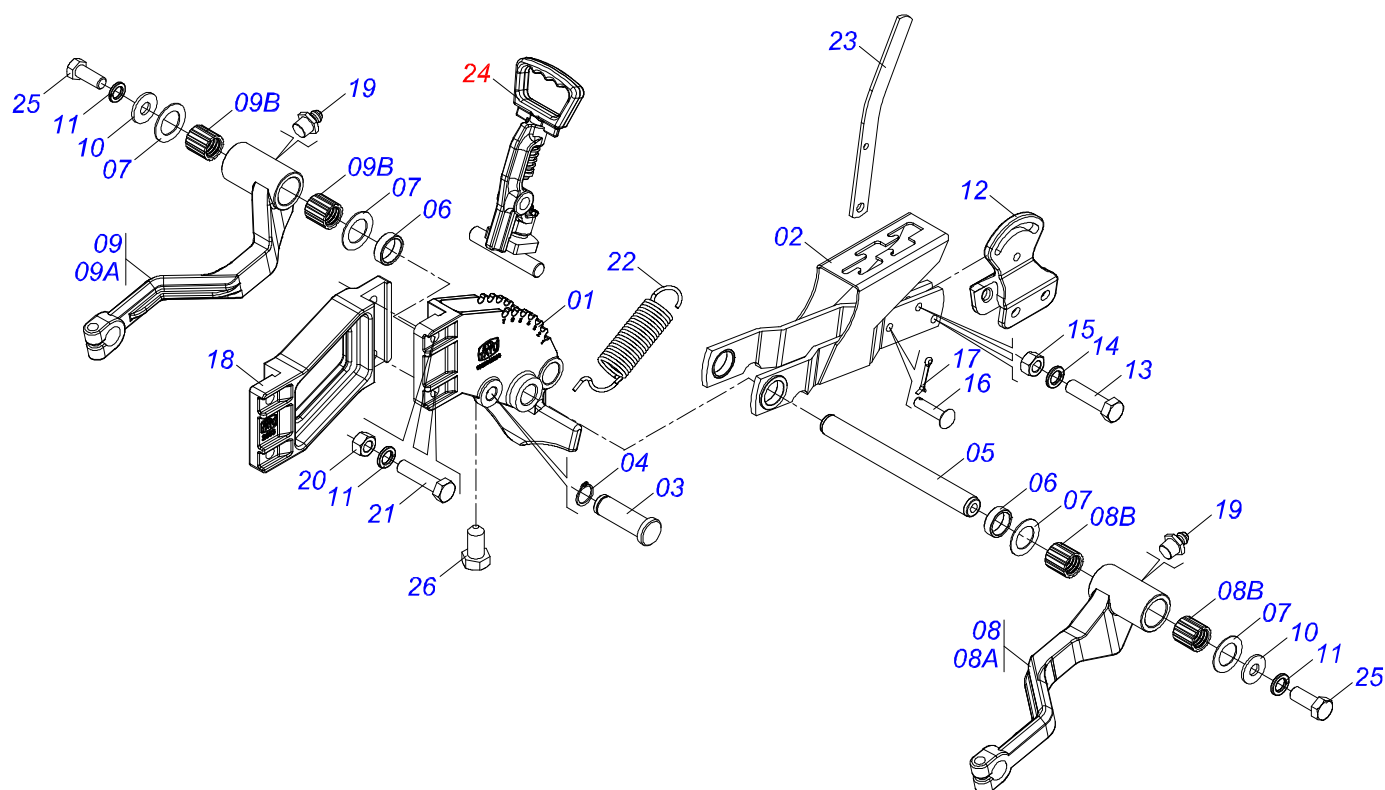


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521064073	REGULACION WHEEL COMPACTOR		01
03	0521019093	0.6" X 2.7" PIVOT SHAFT		01
04	0503010581	RING		01
05	0571013054	DEPTH CONTROL WHEEL AXLE		01
06	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
07	0511015346	FLAT WASHER		04
08	0501110720	ARM LEFT		01
08A	0502012726	LEFT DEPTH WHEEL ARM		01
08B	0503034375	WHEEL ARM SLEEVE		02
09	0501110719	DEPTH CONTROL RIGHT ARM		01
09A	0502012725	DEPTH WHEEL RIGHT ARM		01
09B	0503034375	WHEEL ARM SLEEVE		02
10	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
11	0503011440	SPRING WASHER		04
12	1902012116	PRESS WHEEL ADJUSTER		01
13	0503010849	3/8" X 1-1/2" BOLT		02
14	0503011443	3/8" SPRING WASHER		02
15	0503010026	3/8" NUT		02
16	0521010539	0.3" X 1.2" COUPLING SHAFT		01
17	0503010140	1/8" X 3/4" COTTERPIN		01
18	0502012663	EXTENSION		01
19	0503010002	1800 GREASE FITTING		02
20	0503010060	1/2 UNC G.5 ZN HEX NUT		02
21	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
22	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
23	0541016906	PRESS WHEELS REGULATOR BODY		01
24	0501056769	DEPTH WHEELS REGULATOR ASSY	244	01
25	0503010311	1/2" X 1-1/4" BOLT		02
26	0503010256	3/8" X 3/4" BOLT		01

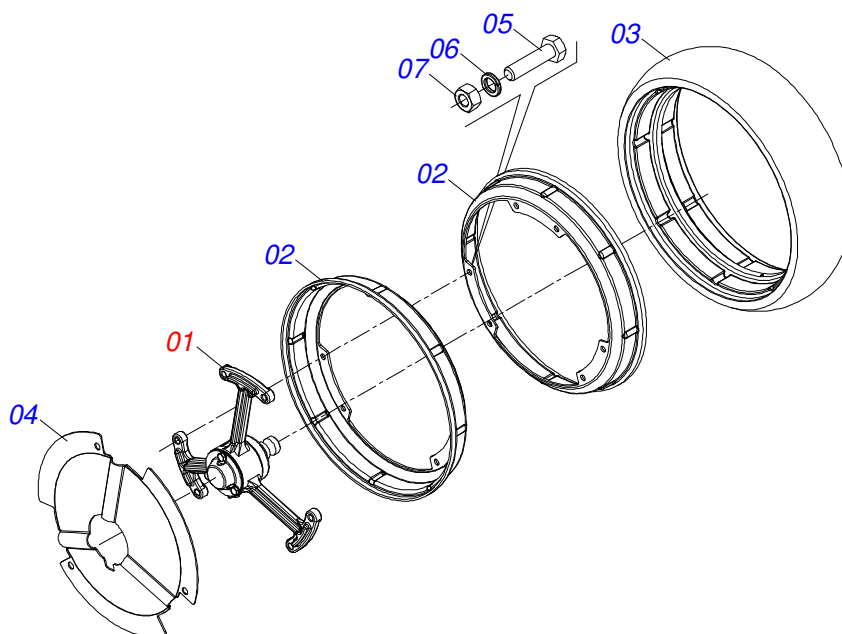


Item	Code	Description	See page	QT
01	0511052287	DEPTH WHEEL HUB ASSY	234	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
07	0503010337	5/16" NUT		06

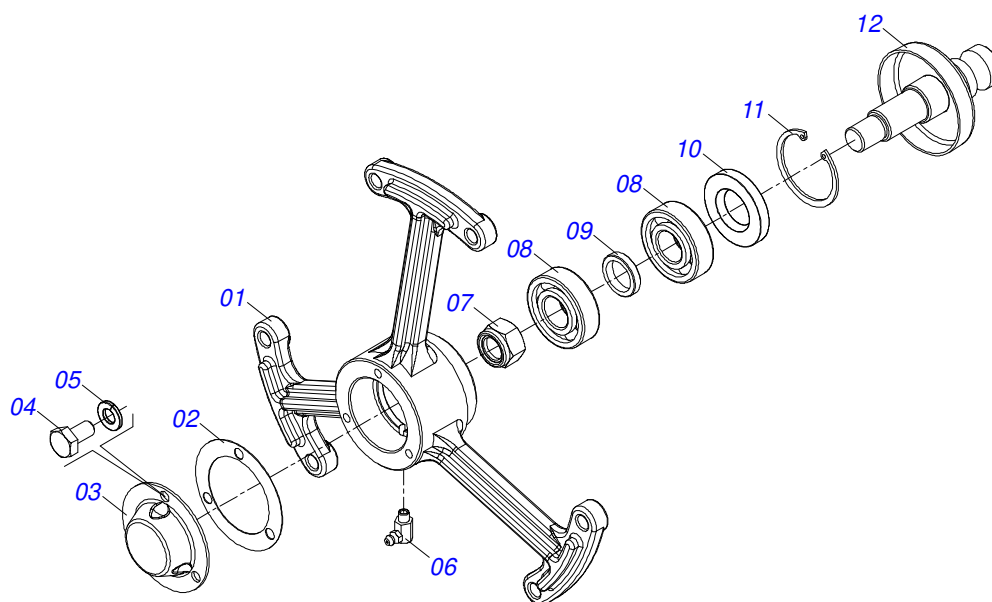


Item	Code	Description	See page	QT
01	0502011918	DEPHT WHEEL HUB		01
02	0503030757	2.9" X 2" X 0.02" JOINT		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503011098	1/4" GREASE FITTING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503010269	6204 BALL BEARING		02
09	0501013636	SPACING SLEEVE		01
10	0503010689	SEAL 00763-BR		01
11	0503011105	SEAL RING		01
12	0521063443	DEPTH CONTROL AXLE		01

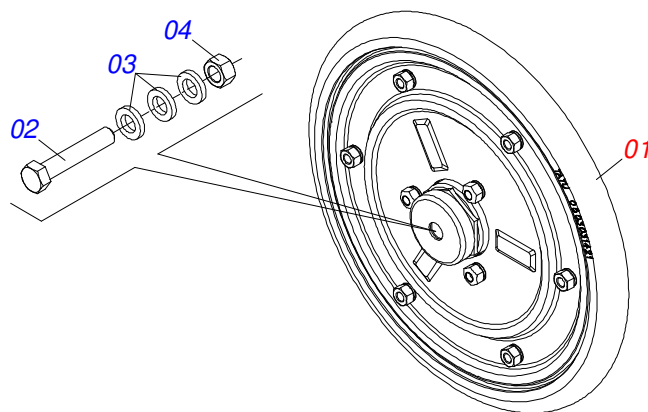


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	243	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

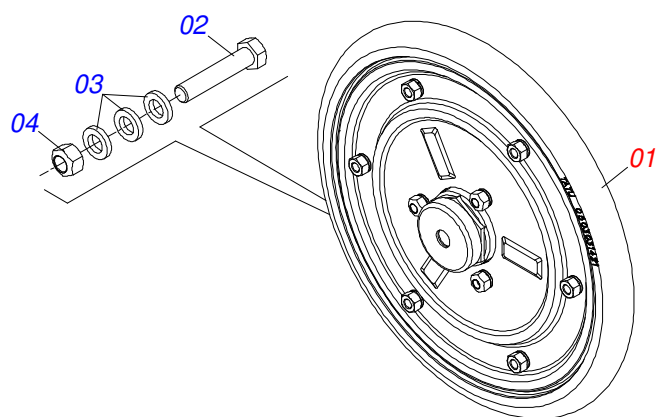


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	243	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

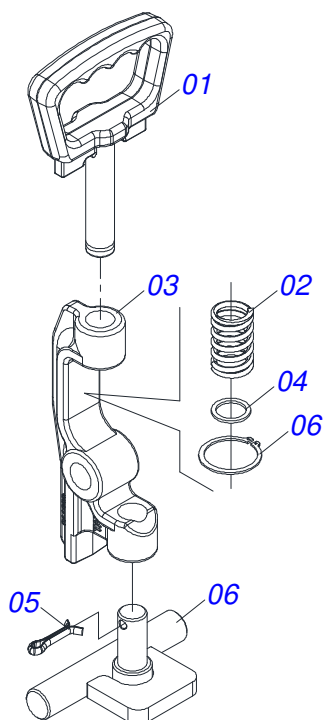


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	DEPTH CONTROL LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

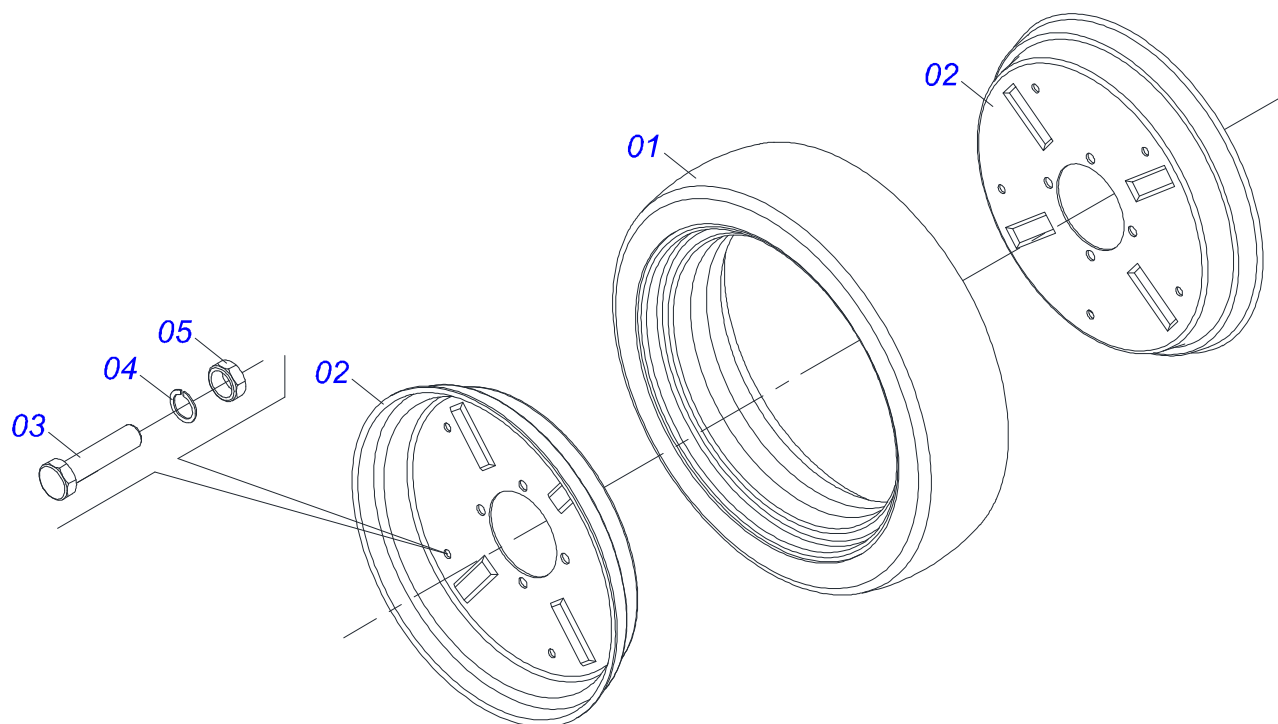


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

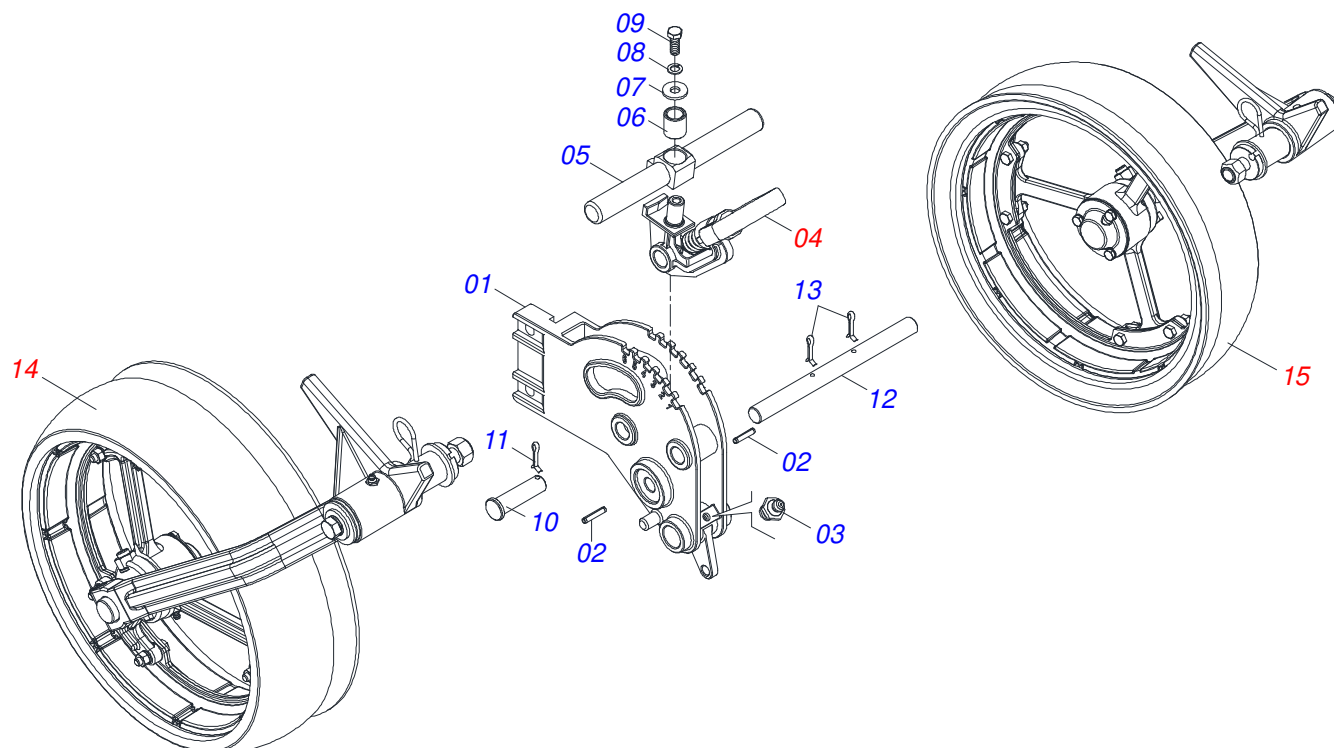


Item	Code	Description	See page	QT
01	0502012758	DEPTH CONTROL SUPPORT		01
02	0503010585	0,24" X 1.18" SPRING PIN		02
03	0503010002	1800 GREASE FITTING		01
04	0501059228	ADJUSTMENT LEVER	255	01
05	0502012611	DEPTH CONTROL AXLE		01
06	0571015326	ARTICULATION SLEEVE HANDLE		01
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
08	0503011443	3/8" SPRING WASHER		01
09	0503010237	3/8" X 1" BOLT		01
10	0571016132	PIVOT SHAFT		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0561014336	PIVOT SHAFT		01
13	0503010071	3/16" X 1" COTTERPIN		02
14	0511055628	DEPTH WHEEL SYSTEM	259	01
15	0511055629	DEPTH WHEEL SYSTEM	260	01

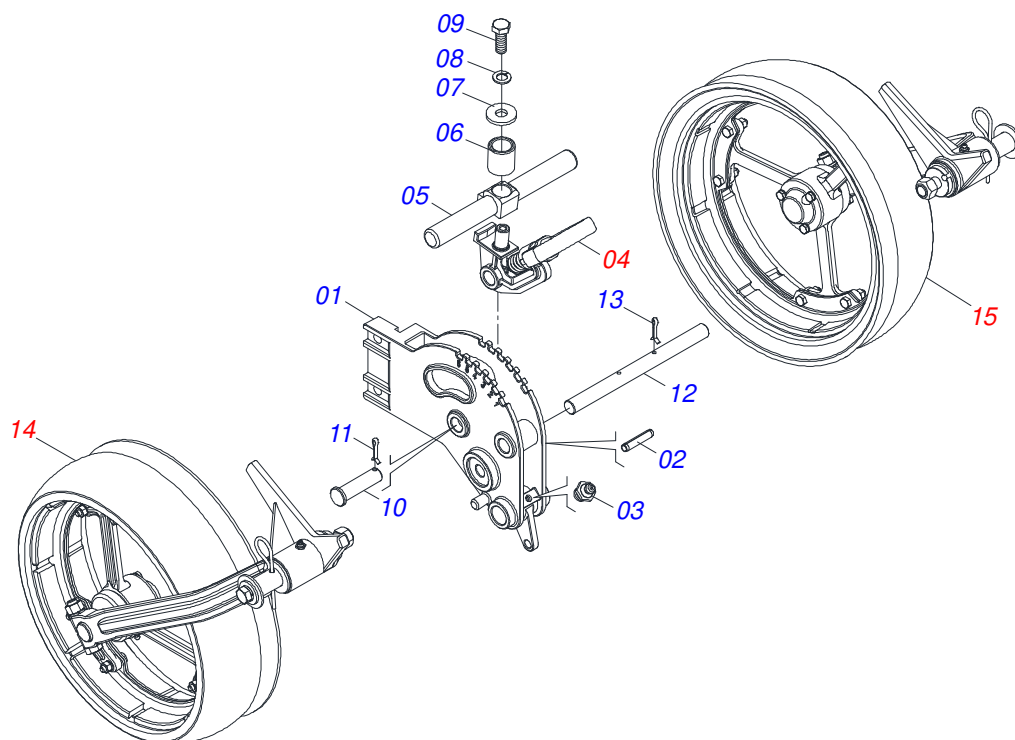


Item	Code	Description	See page	QT
01	0502012758	DEPTH CONTROL SUPPORT		01
02	0503010585	0,24" X 1.18" SPRING PIN		02
03	0503010002	1800 GREASE FITTING		01
04	0501059228	ADJUSTMENT LEVER	255	01
05	0502012611	DEPTH CONTROL AXLE		01
06	0571015326	ARTICULATION SLEEVE HANDLE		01
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
08	0503011443	3/8" SPRING WASHER		01
09	0503010237	3/8" X 1" BOLT		01
10	0571016132	PIVOT SHAFT		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0561014336	PIVOT SHAFT		01
13	0503010071	3/16" X 1" COTTERPIN		02
14	0511055328	DEPTH WHEEL SYSTEM	261	01
15	0511055329	LEFT DEPTH WHEEL	262	01

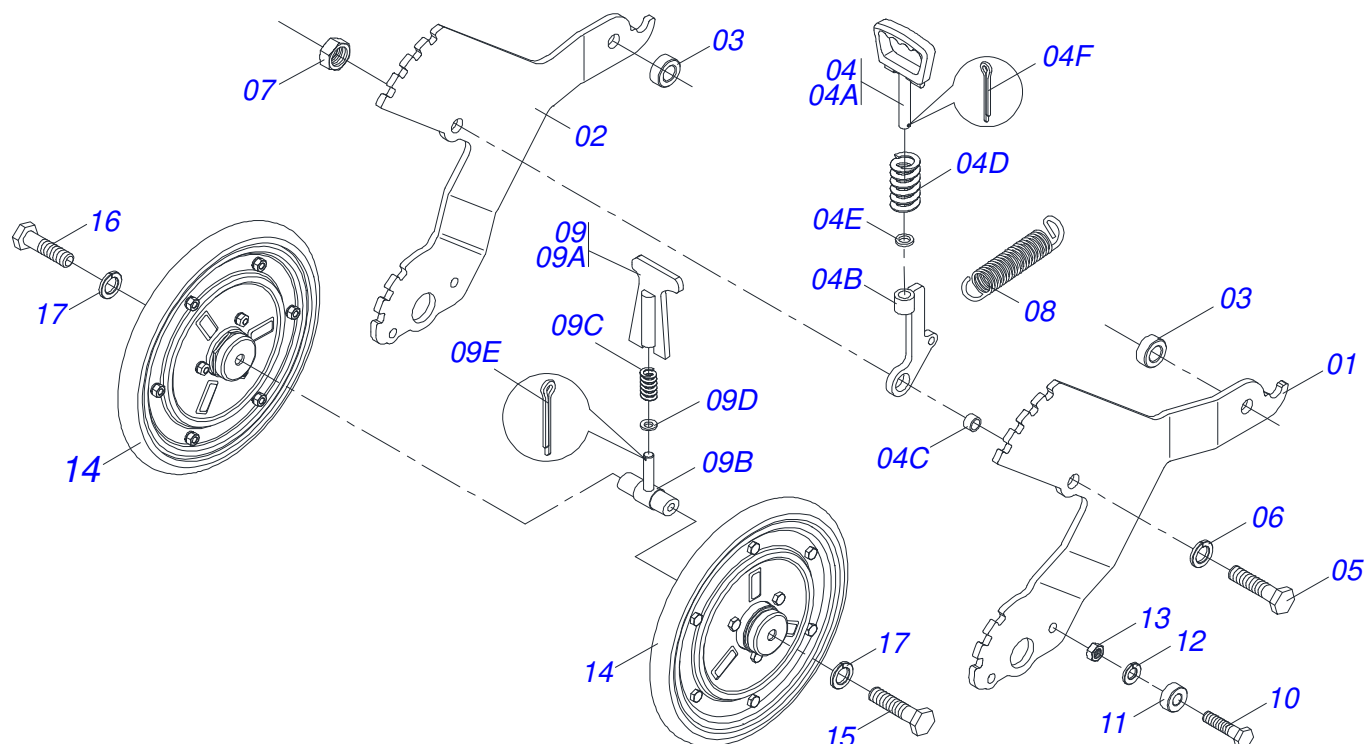


Item	Code	Description	See page	QT
01	0571015324	COMPACT WHEEL RIGHT ARM		01
02	0571015325	LH ARM PRESS WHEELS		01
03	0541012145	13,5 X 25 X 18 SLEEVE		02
04	0501058362	LARGER HANDLE ASSY	263	01
04A	0502011689	1/8" DEPTH CONTROL LEVER		01
04B	0521064892	REGULACION SPRING COMPACTOR		01
04C	0541012146	0.53" X 0.74" X 0.33" SLEEVE		01
04D	0503030174	COMPRESSION SPRING		01
04E	0541012143	FLAT WASHER		01
04F	0503010257	1/8" X 1" COTTERPIN		01
05	0503010479	BOLT		01
06	0503010019	1/2" SPRING WASHER		01
07	0503010060	1/2 UNC G.5 ZN HEX NUT		01
08	0503031393	1.57" X 5.98" X 0.2" TRACTION SPRING		01
09	0501055289	HANDLE SMALLER ASSY	264	01
09A	0511065451	PRESS WHEEL ADJUSTER		01
09B	0511065496	PRESS WHEEL FIXER		01
09C	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
09D	0541012143	FLAT WASHER		01
09E	0503010257	1/8" X 1" COTTERPIN		01
10	0503010397	5/16" X 1-3/4" BOLT		02
11	0541012144	8,50 X 16 X 21 SLEEVE		02
12	0503011444	SPRING WASHER		02
13	0503010337	5/16" NUT		02
14	0501052908	COMPACTOR WHEEL WITH BEARING	243	02
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503013739	1/2" X 1" BOLT		01
17	0503011440	SPRING WASHER		02

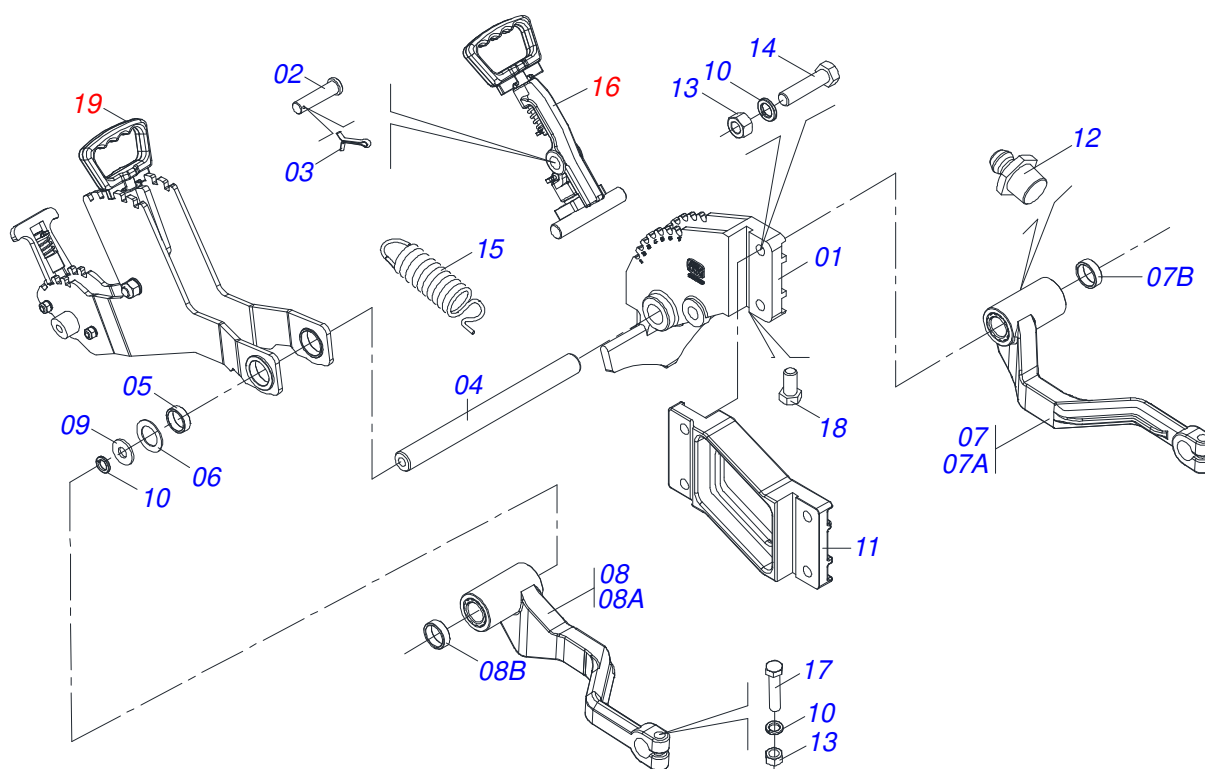


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0503010257	1/8" X 1" COTTERPIN		01
04	0571013054	DEPTH CONTROL WHEEL AXLE		01
05	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
06	0511015346	FLAT WASHER		04
07	0501110720	ARM LEFT		01
07A	0502012726	LEFT DEPTH WHEEL ARM		01
07B	0503034375	WHEEL ARM SLEEVE		02
08	0501110719	DEPTH CONTROL RIGHT ARM		01
08A	0501110720	ARM LEFT		01
08B	0503034375	WHEEL ARM SLEEVE		02
09	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
10	0503011440	SPRING WASHER		04
11	0502012663	EXTENSION		01
12	0503010002	1800 GREASE FITTING		02
13	0503010060	1/2 UNC G.5 ZN HEX NUT		02
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
15	0503031393	1.57" X 5.98" X 0.2"TRACTION SPRING		01
16	0501056769	DEPTH WHEELS REGULATOR ASSY	244	01
17	0503010311	1/2" X 1-1/4" BOLT		02
18	0503010256	3/8" X 3/4" BOLT		01
19	0511059463	COMFORT WHEEL WITH FAST ADJUSTMENT	265	01

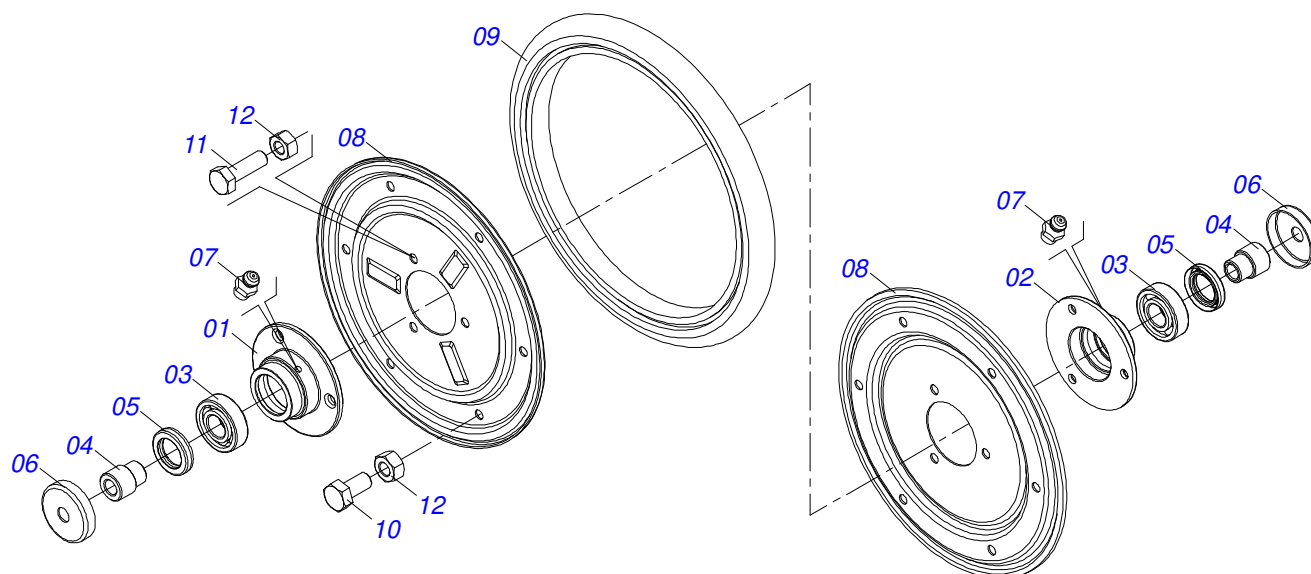


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

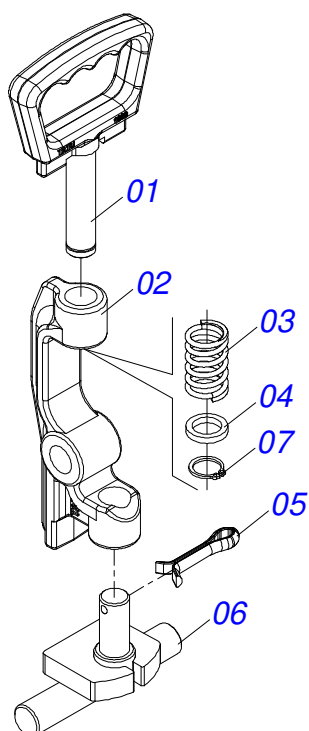


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

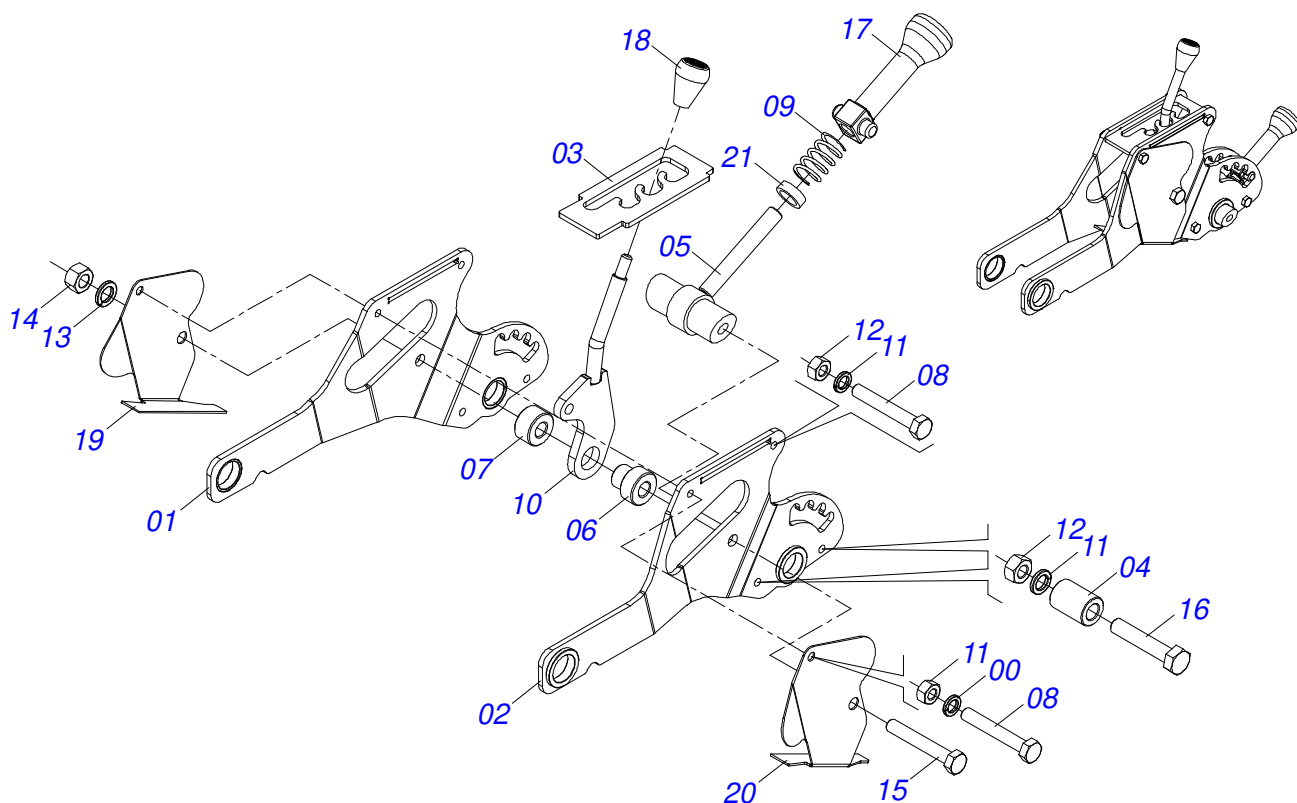


Item	Code	Description	See page	QT
01	0521068003	RIGHT SIDE		01
02	0521068002	LEFT SIDE		01
03	0581014847	PLATE UPPER		01
04	0581015855	SLEEVE		02
05	0521068004	HANDLE BODY		01
06	0581014969	GUIDE SLEEVE		01
07	0581014968	SLEEVE FLANGE		01
08	0503010937	5/16" X 3" BOLT		02
09	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
10	0521068005	LEVER		01
11	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
12	0503010337	5/16" NUT		04
13	0503010019	1/2" SPRING WASHER		01
14	0503010060	1/2 UNC G.5 ZN HEX NUT		01
15	0503010847	1/2" X 3.1/4" BOLT		01
16	0503010882	BOLT		02
17	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
18	0503030878	LEVER CRANK		01
19	0581015854	RIGHT PROTECTION COVER		01
20	0581015853	LEFT PROTECTION COVER		01
21	0581015903	SPACER WASHER		01

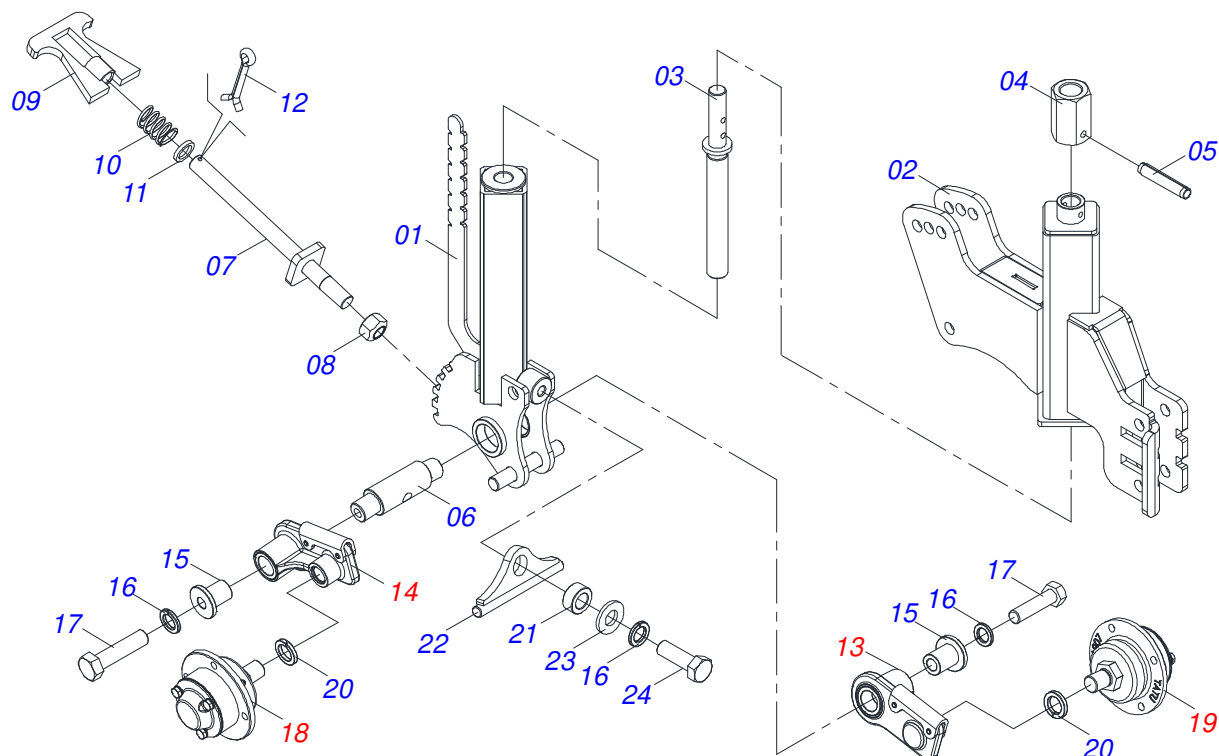


Item	Code	Description	See page	QT
01	0521063808	DEPTH CONTROL INNER COLUMN CONTROL WITH SCREW		01
02	0521063809	DEPTH CONTROL EXTERNAL COLUMN CONTROL WITH SCREW		01
03	0571013194	REGULATOR SPINDLE		01
04	0551010616	ROD HEX		01
05	0503010683	0,2" X 1,2" SPRING PIN		01
06	0571013202	COVERING WHEEL REGULATOR AXLE		01
07	0521063812	REGULATOR LEVER ALXE		01
08	0503011336	1/2" HEX SELF ADJUSTING NUT		01
09	0511065308	LOCK REGULATOR		01
10	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
11	0541011627	FLAT WASHER		01
12	0503010140	1/8" X 3/4" COTTERPIN		01
13	0511059325	LEFT ARM COVERED WHEEL ASSEMBLED	266	01
14	0511059324	RIGHT ARM COVERED WHEEL ASSEMBLED	267	01
15	0571014709	SLEEVE LOCK CONTROL ARM		02
16	0503011440	SPRING WASHER		03
17	0503819099	BOLT		02
18	0511051546	RIGHT DEPTH CONTROL HUB	268	01
19	0511051547	LEFT DEPTH CONTROL HUB	269	01
20	0503011442	3/4" SPRING WASHER		02
21	0571013189	SLEEVE SUPPORT BEATER		01
22	0521063813	WHEEL PRESS BEATER		01
23	0501010937	13,50 X 28 X 3,00 FLAT WASHER		01
24	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		01

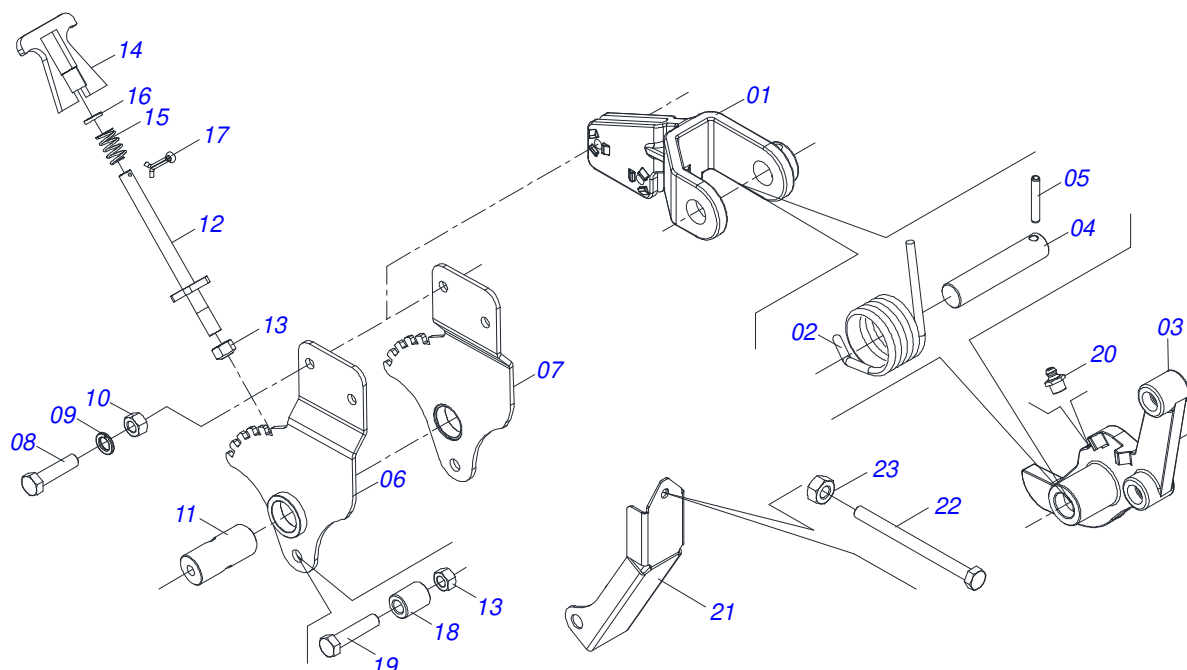


Item	Code	Description	See page	QT
01	0502012850	PRESS WHEELS ARM		01
02	0503030883	RIGHT TORSION SPRING		01
03	0502011066	PRESS WHEELS ARM SUPPORT		01
04	0531017415	1" X 4.72" AXLE JOINT		01
05	0503010839	03"X 0.6" SPRING PIN		01
06	0521063841	REGULATOR RIGHT COMPACTOR		01
07	0521063842	REGULATOR LEFT COMPACTOR		01
08	0503811404	BOLT		02
09	0503011443	3/8" SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0571013295	ALXE REGULATOR COMPACTOR		01
12	0521063812	REGULATOR LEVER ALXE		01
13	0503011336	1/2" HEX SELF ADJUSTING NUT		02
14	0511065308	LOCK REGULATOR		01
15	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
16	0541011627	FLAT WASHER		01
17	0503010140	1/8" X 3/4" COTTERPIN		01
18	0571013293	SLEEVE LOCK COMPACTOR V CONTROL WITH SCREW		01
19	0503811172	BOLT		01
20	0503010002	1800 GREASE FITTING		01
21	0581013744	PROTECTION CASE		01
22	0503813096	BOLT		01
23	0503013816	5/16" LOCKNUT		0

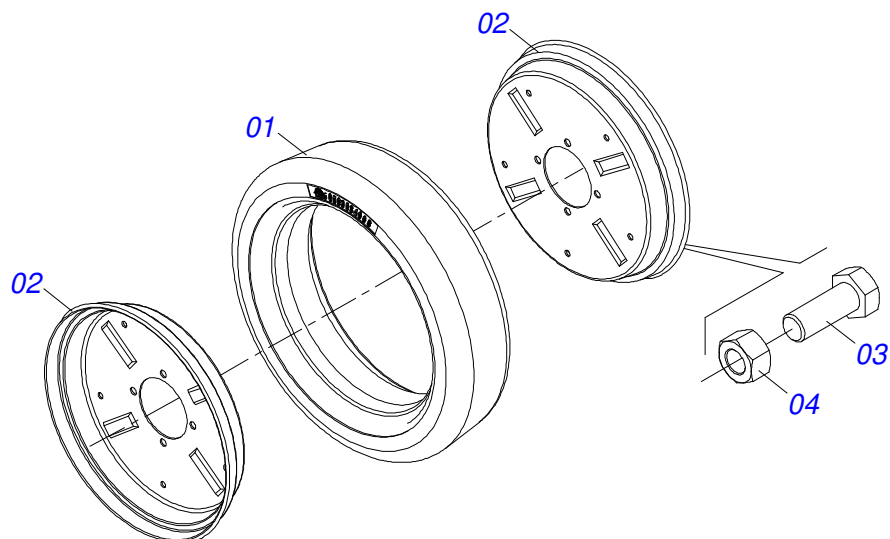


Item	Code	Description	See page	QT
01	0503034008	DEPTH CONTROL		01
02	0521010832	RIM FLANGE		02
03	0503013758	1/4" X 1-1/2" BOLT		05
04	0503013814	1/4" NC LOCKNUT		05

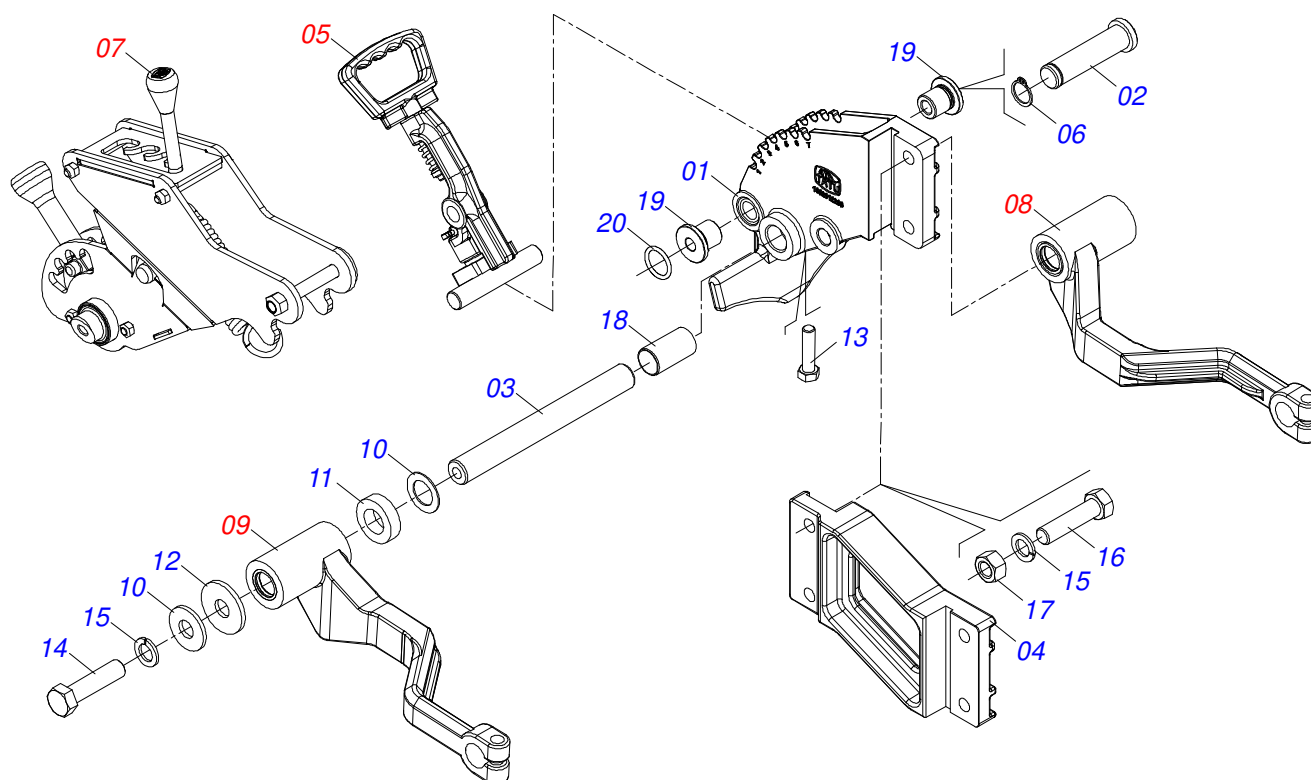


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0571013054	DEPTH CONTROL WHEEL AXLE		01
04	0502012663	EXTENSION		01
05	0501056769	DEPTH WHEELS REGULATOR ASSY	244	01
06	0503019398	AXLE RETAINER RING		01
07	0521055033	SEMI-ASSEMBLED COMPACTOR BODY	271	01
08	0521055054	LEFT ARM WITH SLEEVE	272	01
09	0521055066	RIGHT ARM WITH SLEEVE	274	01
10	0511015346	FLAT WASHER		04
11	0571015974	WASHER		02
12	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
13	0503010256	3/8" X 3/4" BOLT		01
14	0503010311	1/2" X 1-1/4" BOLT		02
15	0503010019	1/2" SPRING WASHER		04
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2 UNC G.5 ZN HEX NUT		02
18	0503019275	SLEEVE LUBRICATION SYSTEM		01
19	0581019473	ARTICULATED SLEEVE		02
20	0503010045	O'RING		02

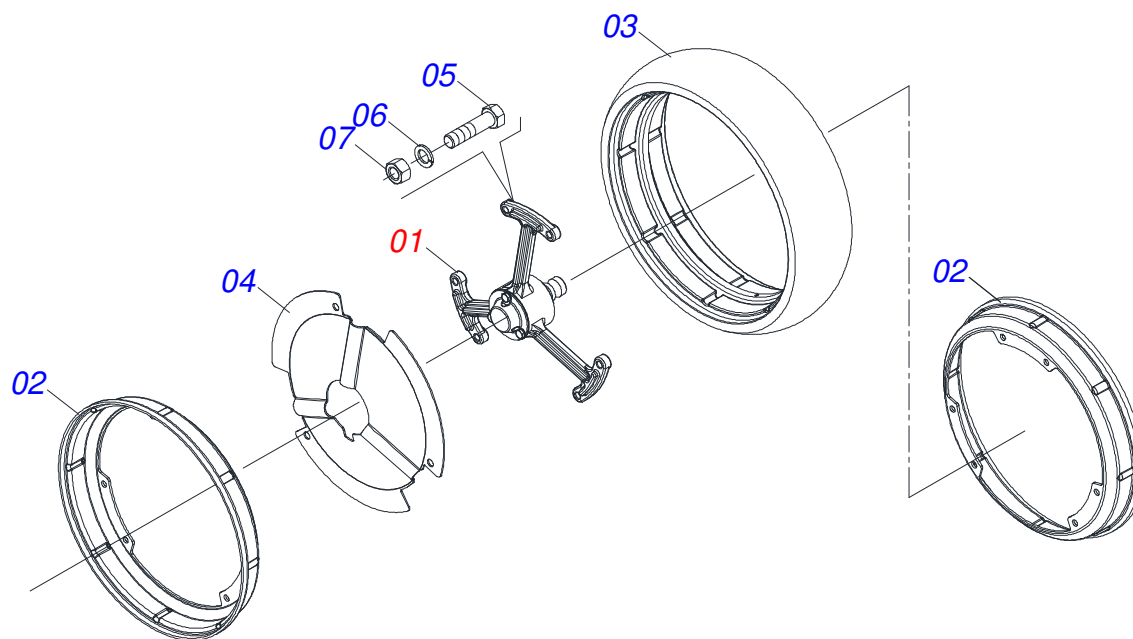


Item	Code	Description	See page	QT
01	0521055055	HUB WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	273	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
07	0503010337	5/16" NUT		06

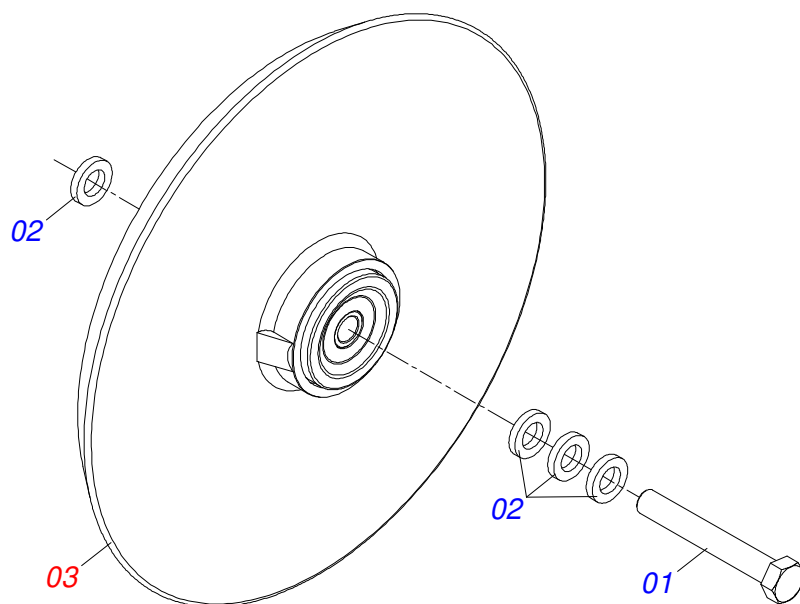


Item	Code	Description	See page	QT
01	0503013739	1/2" X 1" BOLT		01
02	0521014508	FLAT WASHER		04
03	0521054991	WHEEL DRIVE WHEEL RIGHT	253	01

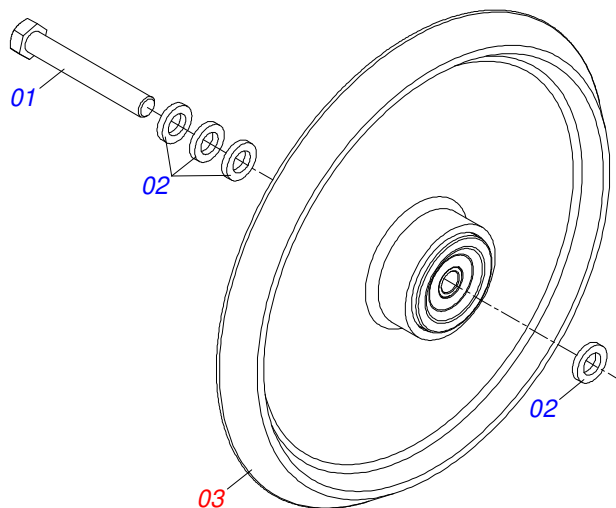


Item	Code	Description	See page	QT
01	0503010752	1/2" X 3.1/2" BOLT		01
02	0521014508	FLAT WASHER		04
03	0521054991	WHEEL DRIVE WHEEL RIGHT	253	01

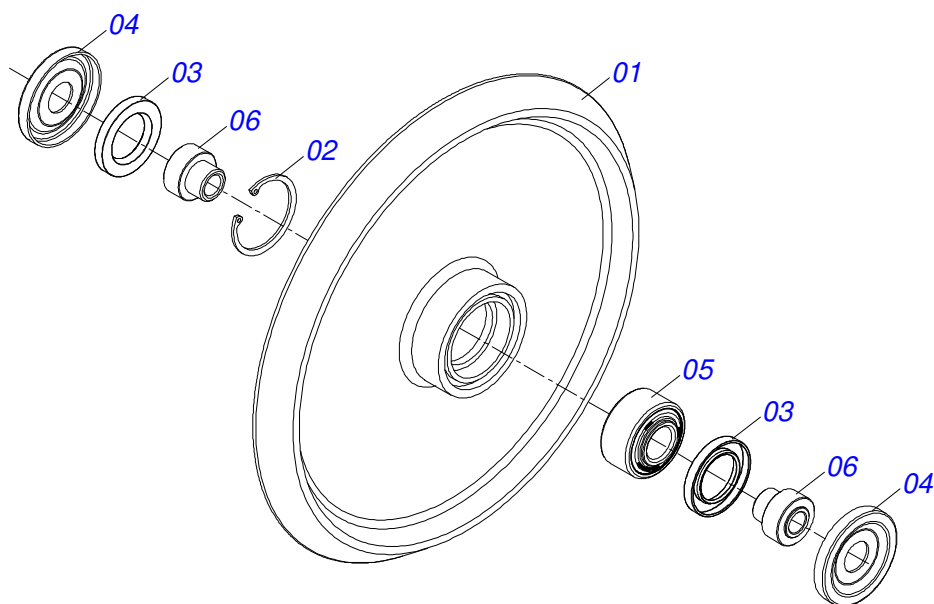


Item	Code	Description	See page	QT
01	0581019509	IRON WHEEL COMPACTOR		01
02	0503011105	SEAL RING		01
03	0503013848	5072-BR SEAL		02
04	0511011927	DUST CLOAK		02
05	0503019342	ROLLER BEARING		01
06	0581019533	AXIS		02

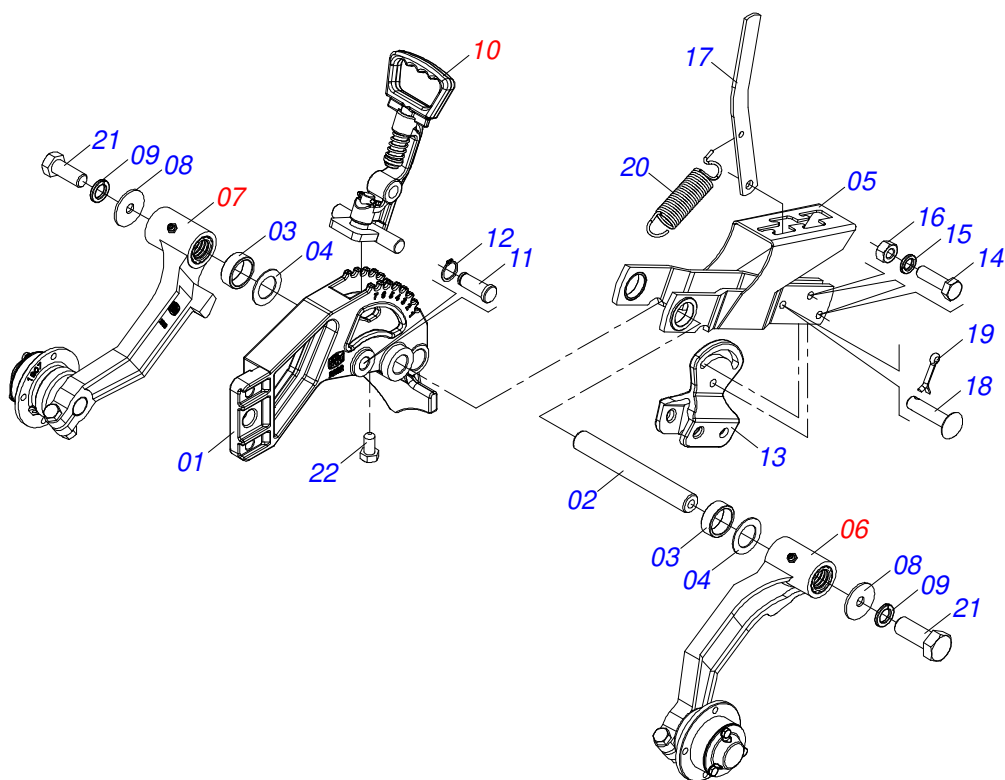


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT DEPTH WHEEL ARM WITH HUB	256	01
07	0511058651	RIGHT DEPTH WHEEL ARM WITH HUB	257	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	237	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	3/8 UNC X 3/4 BOLT		01

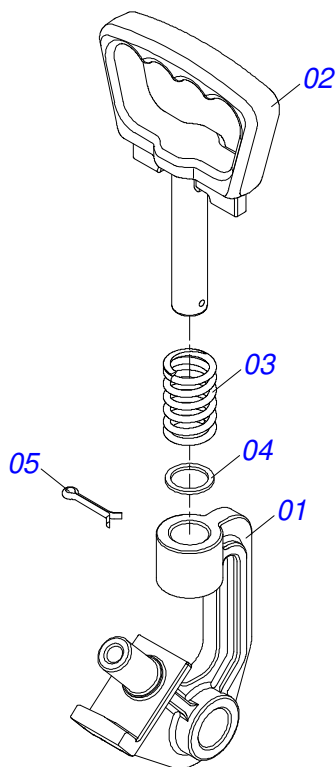


Item	Code	Description	See page	QT
01	0502012603	ADJUSTMENT LEVER		01
02	0502011689	1/8" DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0511015976	FLAT WASHER		01
05	0503010140	1/8" X 3/4" COTTERPIN		01

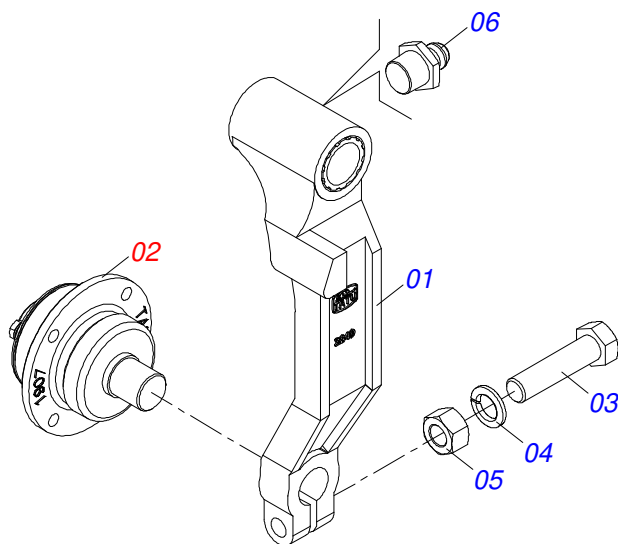


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL HUB	258	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0503010002	1800 GREASE FITTING		01

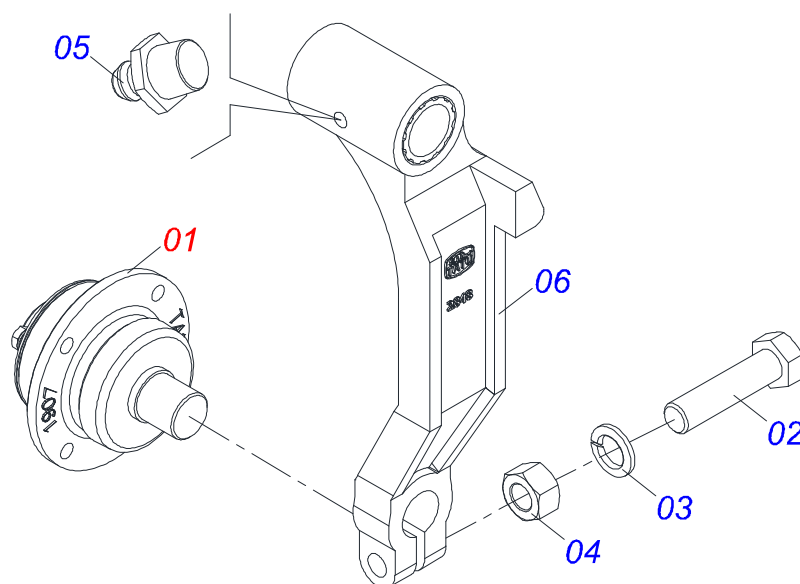


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL HUB	258	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

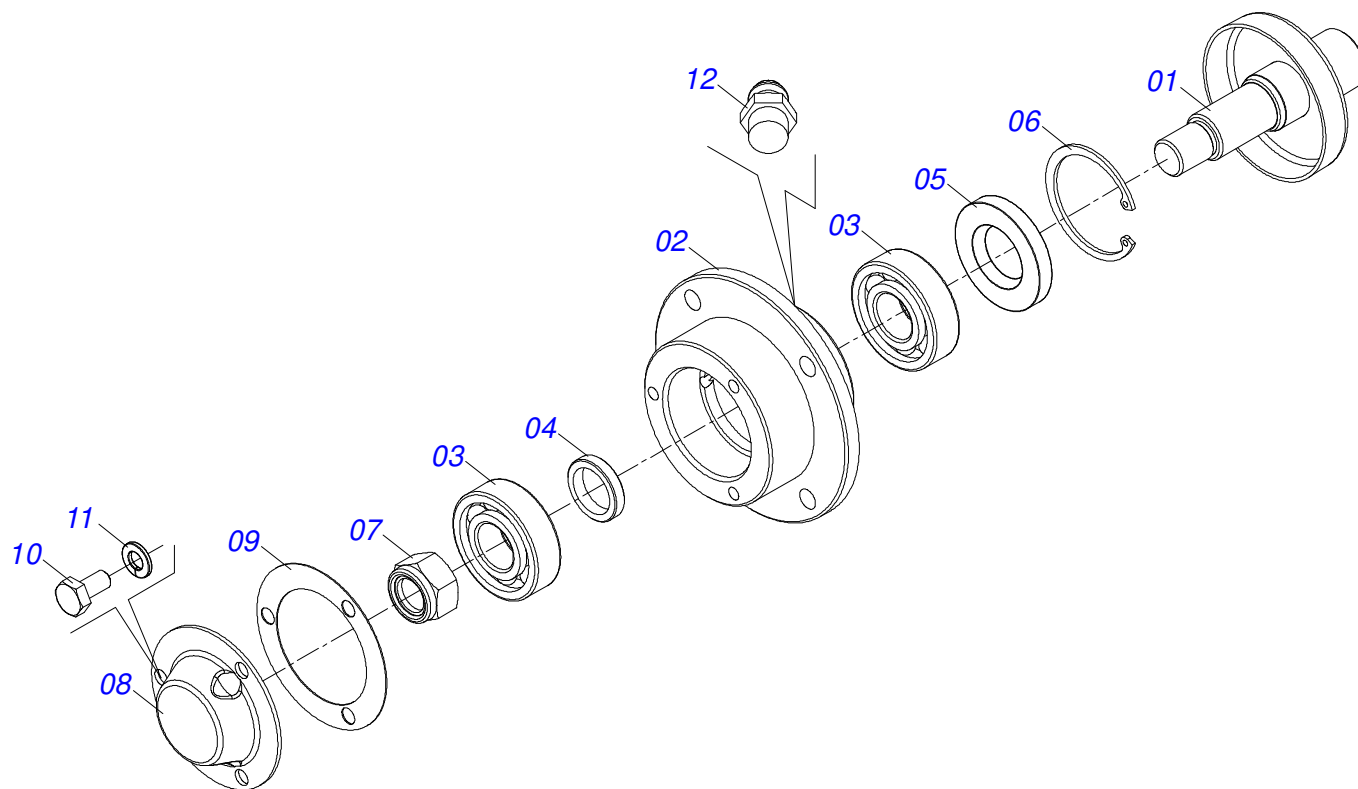


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	PROTECTION LID		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

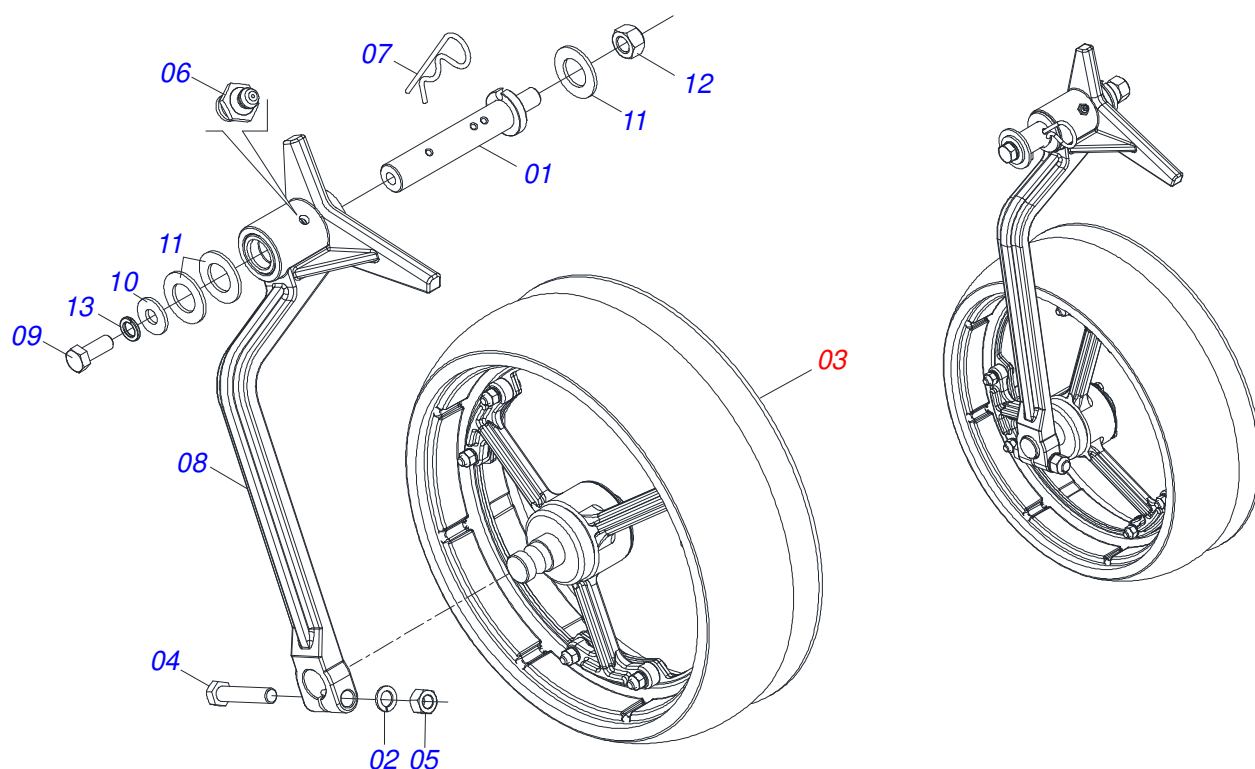


Item	Code	Description	See page	QT
01	0561014385	CARRYING-WHEELS PIVOT SHAFT		01
02	0503010019	1/2" SPRING WASHER		01
03	0511055627	WHEEL ASSY RAYED		01
04	0503016453	1/2" X 2.1/2 BOLT		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0503010002	1800 GREASE FITTING		01
07	0503030012	HITCH PIN CLIP		01
08	0501110777	RIGHT WHEEL ARM		01
09	0503014007	1/2" X 1-1/4" BOLT		01
10	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
11	0501011445	FLAT WASHER		03
12	0503012412	5/8" UNC SELF LOCKING NUT		01
13	0503011440	SPRING WASHER		01

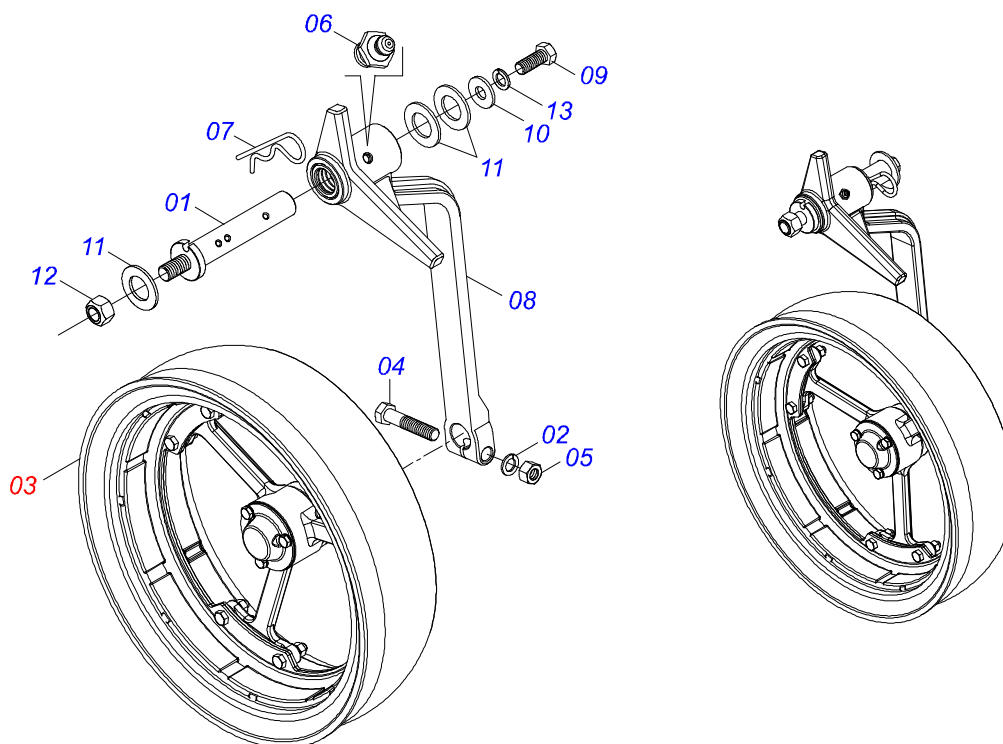


Item	Code	Description	See page	QT
01	0571015973	CARRYING-WHEELS PIVOT SHAFT		01
02	0503010019	1/2" SPRING WASHER		01
03	0511055627	WHEEL ASSY RAYED		01
04	0503016453	1/2" X 2.1/2 BOLT		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0503010002	1800 GREASE FITTING		01
07	0503030012	HITCH PIN CLIP		01
08	0501110776	ARM,LEFT		01
09	0503014007	1/2" X 1-1/4" BOLT		01
10	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
11	0501011445	FLAT WASHER		03
12	0503012412	5/8" UNC SELF LOCKING NUT		01
13	0503011440	SPRING WASHER		01

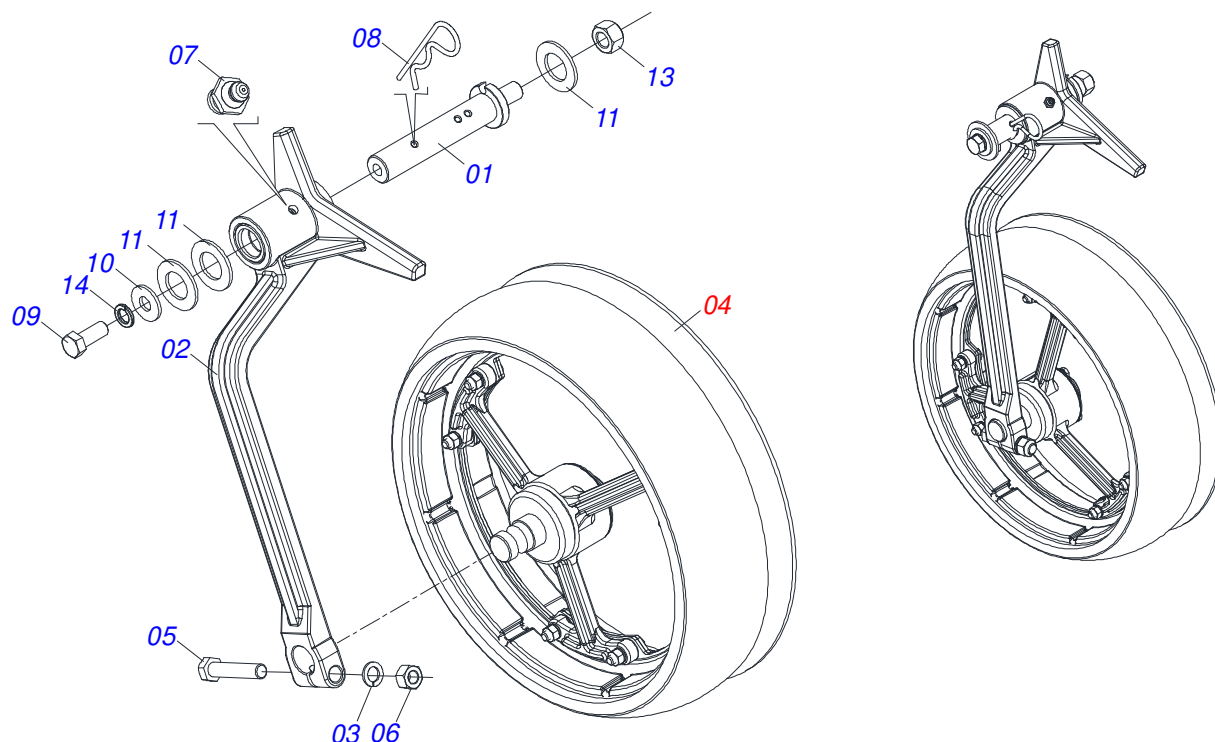


Item	Code	Description	See page	QT
01	0561014385	CARRYING-WHEELS PIVOT SHAFT		01
02	0501110777	RIGHT WHEEL ARM		01
03	0503010019	1/2" SPRING WASHER		01
04	0511055627	WHEEL ASSY RAYED		01
05	0503016453	1/2" X 2.1/2 BOLT		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01
07	0503010002	1800 GREASE FITTING		01
08	0503030012	HITCH PIN CLIP		01
09	0503014007	1/2" X 1-1/4" BOLT		01
10	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
11	0501011445	FLAT WASHER		03
12	0571015974	WASHER		01
13	0503012412	5/8" UNC SELF LOCKING NUT		01
14	0503011440	SPRING WASHER		01

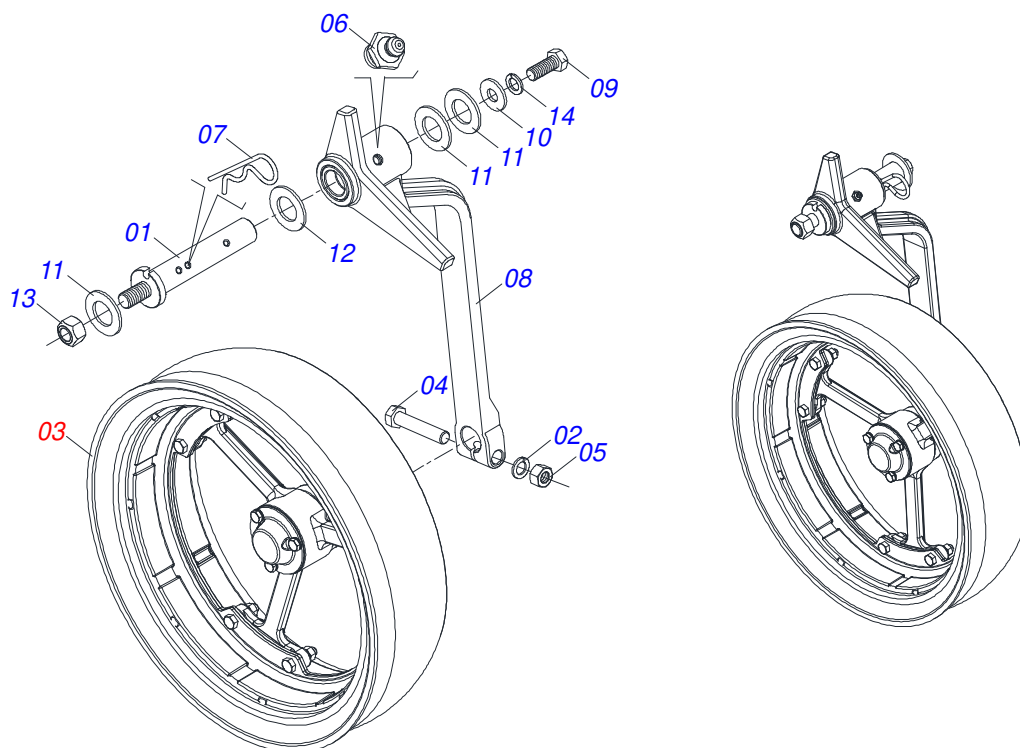


Item	Code	Description	See page	QT
01	0571015973	CARRYING-WHEELS PIVOT SHAFT		01
02	0503010019	1/2" SPRING WASHER		01
03	0511055627	WHEEL ASSY RAYED		01
04	0503016453	1/2" X 2.1/2 BOLT		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0503010002	1800 GREASE FITTING		01
07	0503030012	HITCH PIN CLIP		01
08	0501110776	ARM,LEFT		01
09	0503014007	1/2" X 1-1/4" BOLT		01
10	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
11	0501011445	FLAT WASHER		03
12	0571015974	WASHER		01
13	0503012412	5/8" UNC SELF LOCKING NUT		01
14	0503011440	SPRING WASHER		01

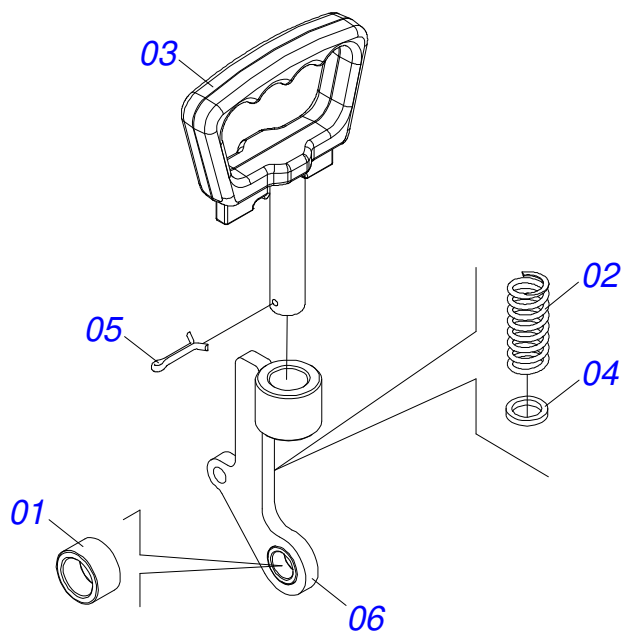


Item	Code	Description	See page	QT
001	0541012146	0.53" X 0.74" X 0.33" SLEEVE		01
002	0503030174	COMPRESSION SPRING		01
003	0502011689	1/8" DEPTH CONTROL LEVER		01
004	0541012143	FLAT WASHER		01
005	0503010257	1/8" X 1" COTTERPIN		01
006	0521064892	REGULACION SPRING COMPACTOR		01

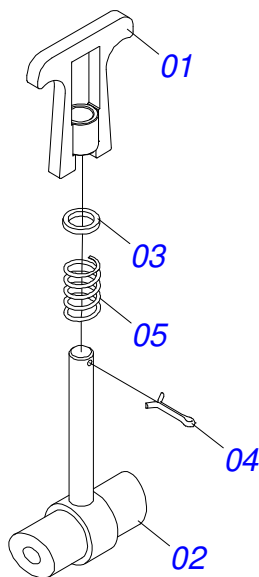


Item	Code	Description	See page	QT
01	0511065451	PRESS WHEEL ADJUSTER		01
02	0511065496	PRESS WHEEL FIXER		01
03	0541012143	FLAT WASHER		01
04	0503010257	1/8" X 1" COTTERPIN		01
05	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01

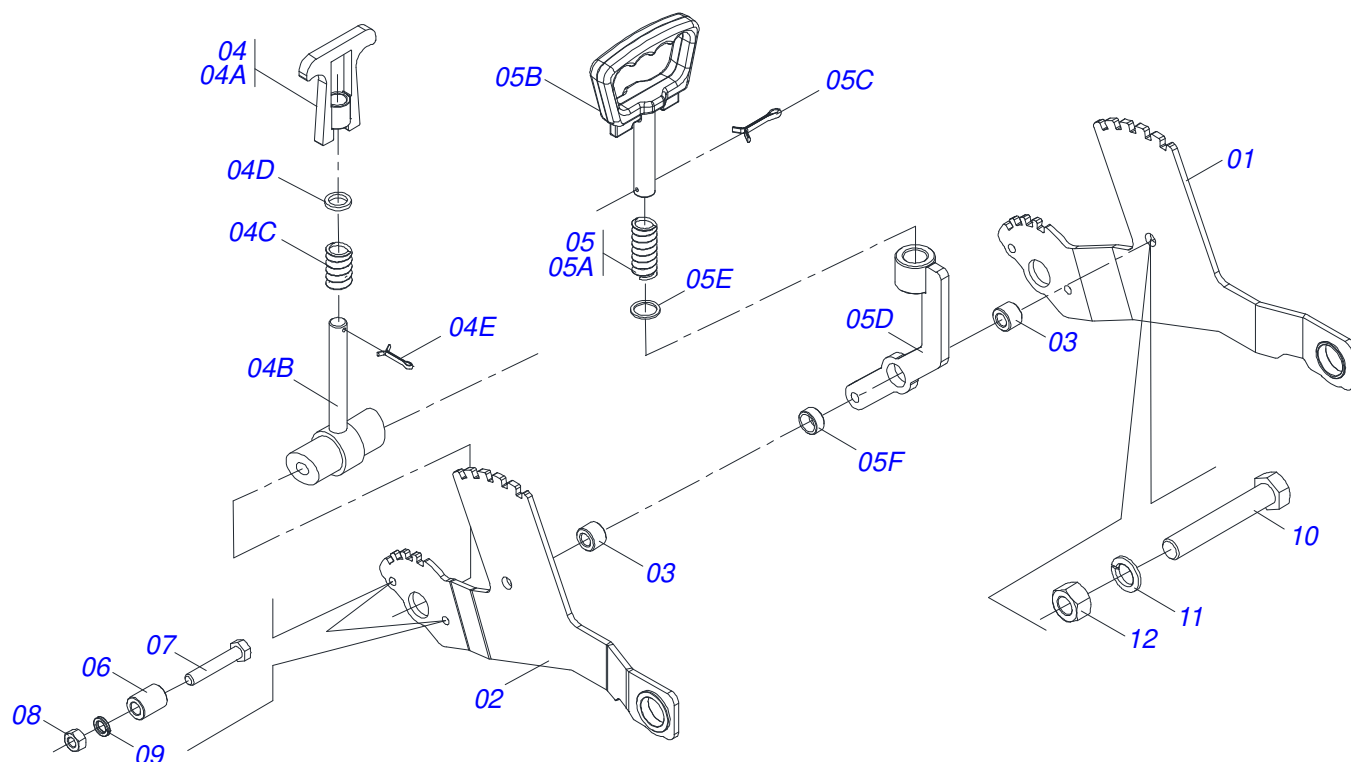


Item	Code	Description	See page	QT
01	0521067072	COMPACT WHEEL RIGHT ARM		01
02	0521067071	COMPACT RUEDA LEFT ARM		01
03	0541012144	8,50 X 16 X 21 SLEEVE		02
04	0501055289	HANDLE SMALLER ASSY	264	01
04A	0511065451	PRESS WHEEL ADJUSTER		01
04B	0511065496	PRESS WHEEL FIXER		01
04C	0503031719	0.7" X 1" X 1,1" COMPRESSION SPRING		01
04D	0541012143	FLAT WASHER		01
04E	0503010257	1/8" X 1" COTTERPIN		01
05	0511059461	COMPLETE REGULATOR		01
05A	0503030174	COMPRESSION SPRING		01
05B	0502011689	1/8" DEPTH CONTROL LEVER		01
05C	0503010257	1/8" X 1" COTTERPIN		01
05D	0521067070	PRESS WHEEL ADJUSTER		01
05E	0511015976	FLAT WASHER		01
05F	0541012146	0.53" X 0.74" X 0.33" SLEEVE		01
06	0541012145	13,5 X 25 X 18 SLEEVE		02
07	0503010479	BOLT		01
08	0503010060	1/2 UNC G.5 ZN HEX NUT		01
09	0503011440	SPRING WASHER		01
10	0503010397	5/16" X 1-3/4" BOLT		02
11	0503011444	SPRING WASHER		02
12	0503010337	5/16" NUT		02

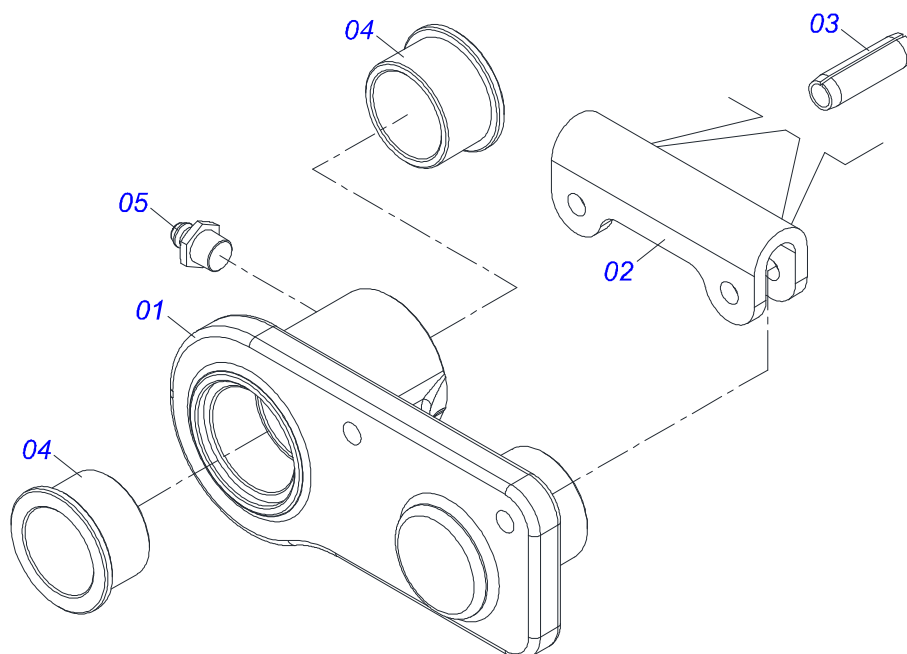


Item	Code	Description	See page	QT
01	0502012844	LEFT ARM WHEELS		01
02	0581011340	ARM CASE		01
03	0503011402	0.2" X 0.8" SPRING PIN		02
04	0503034383	COVERING WHEEL ARM SUPPORT SLEEVE		02
05	0503010002	1800 GREASE FITTING		01

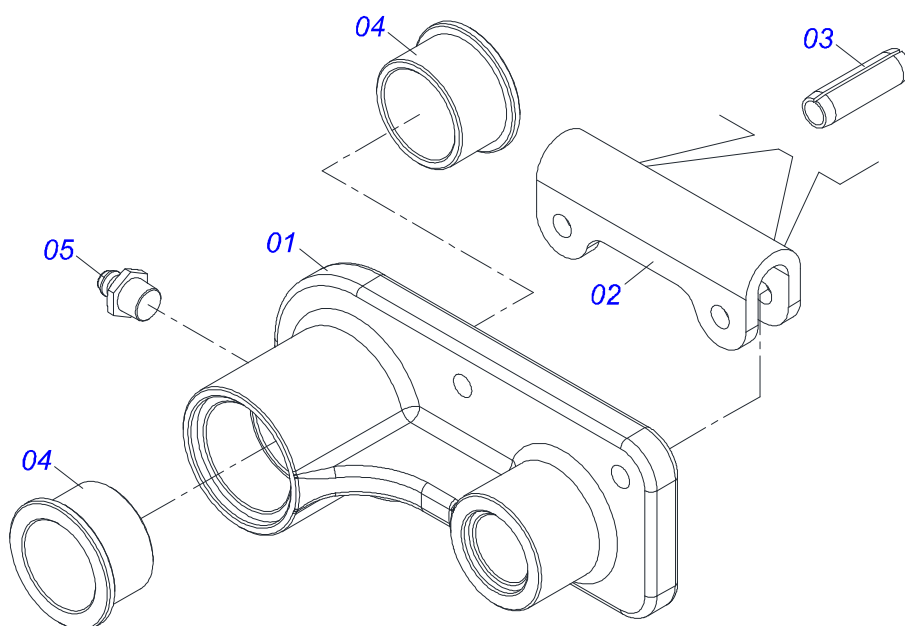


Item	Code	Description	See page	QT
01	0502012843	RIGHT WHEEL ARM		01
02	0581011340	ARM CASE		01
03	0503011402	0.2" X 0.8" SPRING PIN		02
04	0503034383	COVERING WHEEL ARM SUPPORT SLEEVE		02
05	0503010002	1800 GREASE FITTING		01

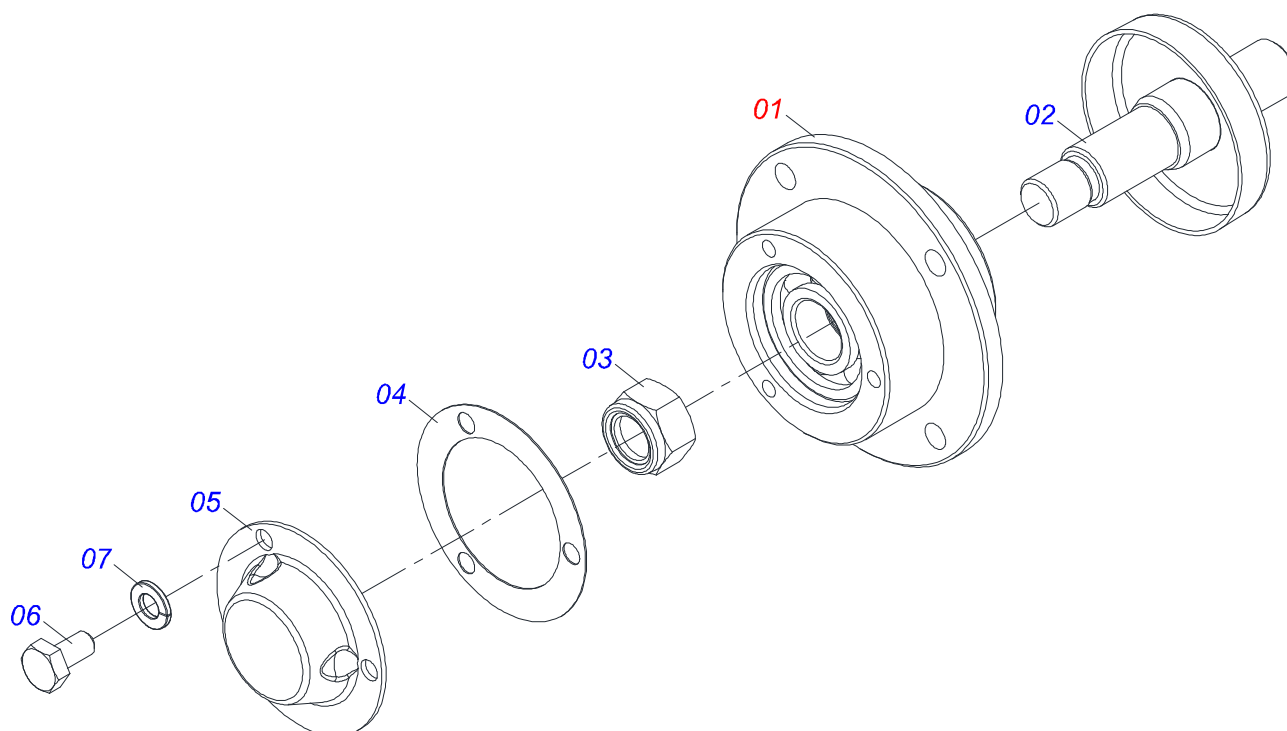


Item	Code	Description	See page	QT
01	0511051583	SEMI-ASSEMBLED DEPTH WHEEL HUB	270	01
02	0511066638	RIGHT AXLE WITH DUST CLOAK		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0503030757	2.9" X 2" X 0.02" JOINT		01
05	0521019178	PROTECTION LID		01
06	0503014729	1/4" UNF X 1/2" BOLT		03
07	0503011441	SPRING WASHER		03

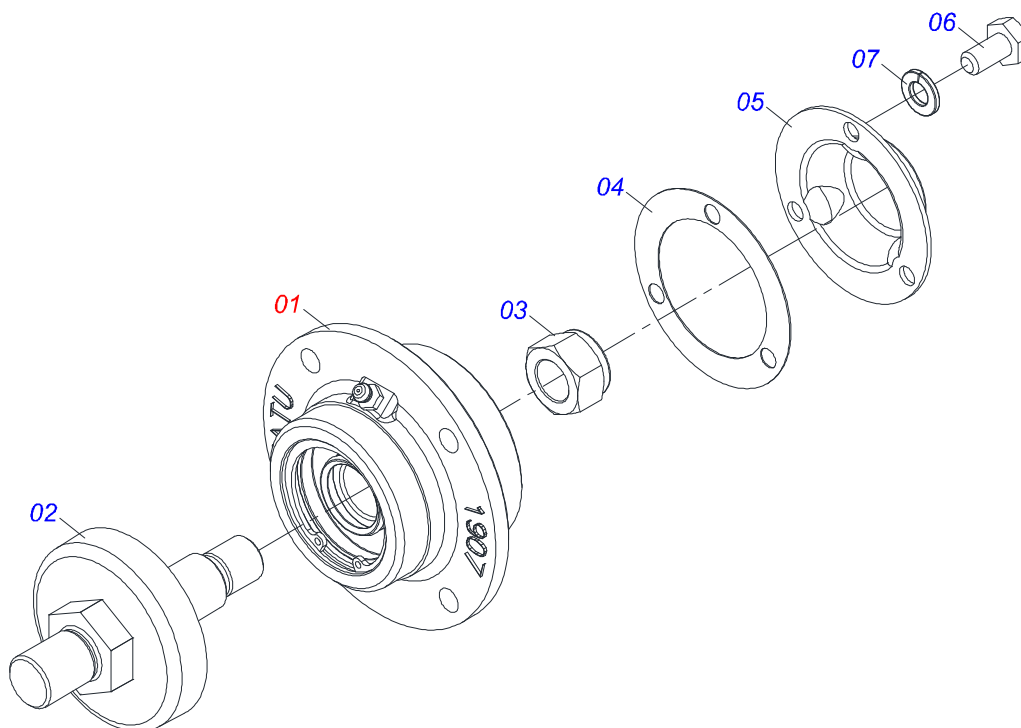


Item	Code	Description	See page	QT
01	0511051583	SEMI-ASSEMBLED DEPTH WHEEL HUB	270	01
02	0511066637	LEFT AXLE WITH DUST CLOAK		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0503030757	2.9" X 2" X 0.02" JOINT		01
05	0521019178	PROTECTION LID		01
06	0503014729	1/4" UNF X 1/2" BOLT		03
07	0503011441	SPRING WASHER		03

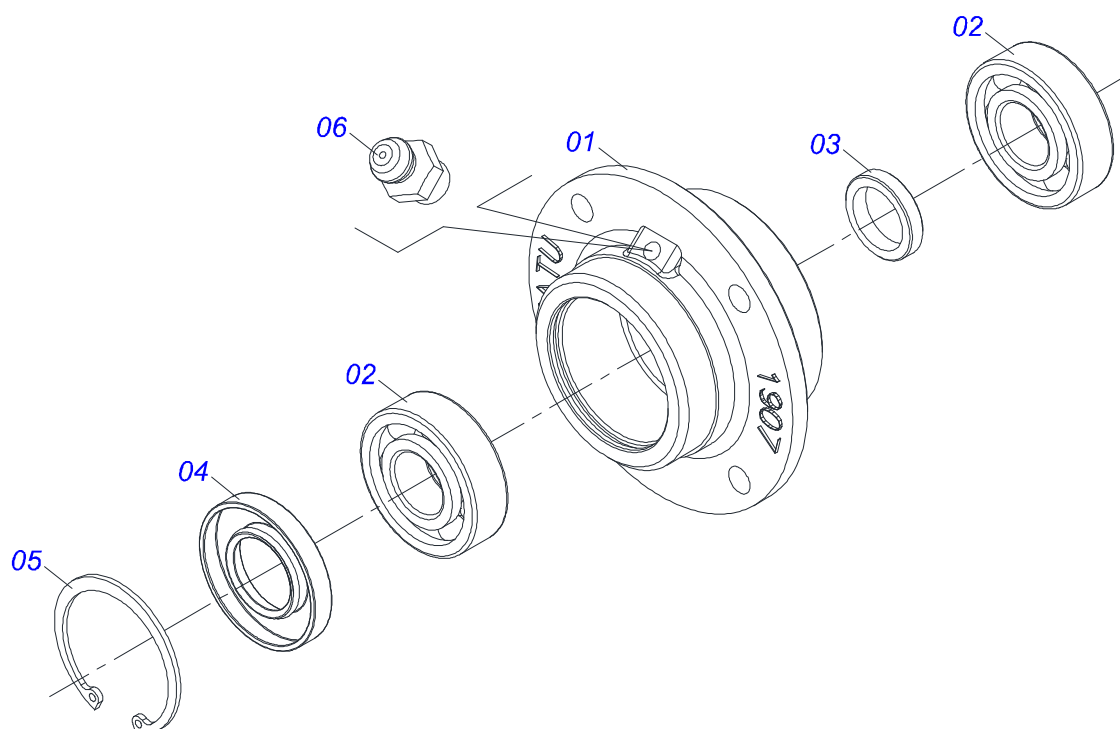


Item	Code	Description	See page	QT
01	0502011907	DEPTH CONTROL WHEEL HUB		01
02	0503010269	6204 BALL BEARING		02
03	0501013636	SPACING SLEEVE		01
04	0503010689	SEAL 00763-BR		01
05	0503011105	SEAL RING		01
06	0503010691	1/4" GREASE FITTING		01

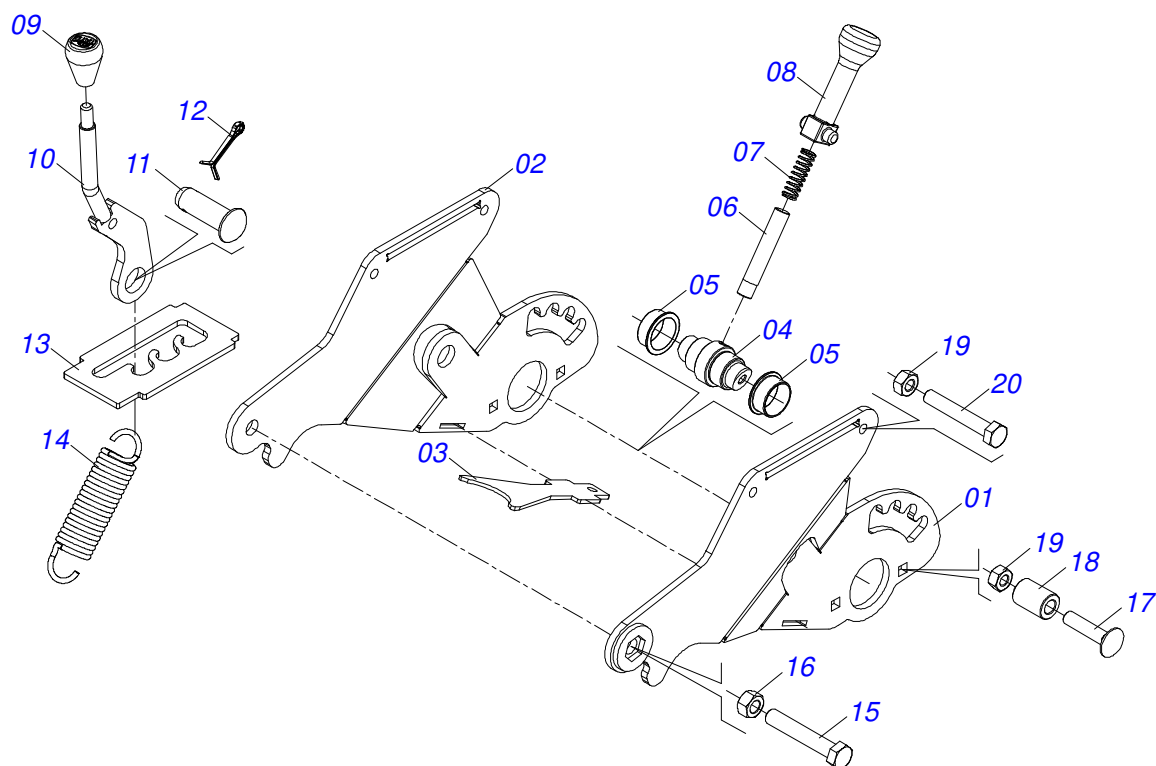


Item	Code	Description	See page	QT
01	0521069585	LEFT SIDE		01
02	0581019475	RIGHT SIDE BODY		01
03	0581019511	COVER		01
04	0581019510	AXIS		01
05	0503019351	LUBRICANT SLEEVE		02
06	0581019520	AXIS		01
07	0503030190	0.5" X 1.6" X 0.05" SPRING		01
08	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
09	0503030878	LEVER CRANK		01
10	0521068661	LEVER		01
11	0571012442	COUPLING SHAFT		01
12	0503010257	1/8" X 1" COTTERPIN		01
13	0581019512	PLATE TOP		01
14	0503034817	SPRING		01
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503011336	1/2" HEX SELF ADJUSTING NUT		01
17	0501011753	5/16" X 1-3/4" BOLT		02
18	0581015855	SLEEVE		02
19	0503013816	5/16" LOCKNUT		04
20	0503010848	5/16" X 3.1/2" BOLT		02

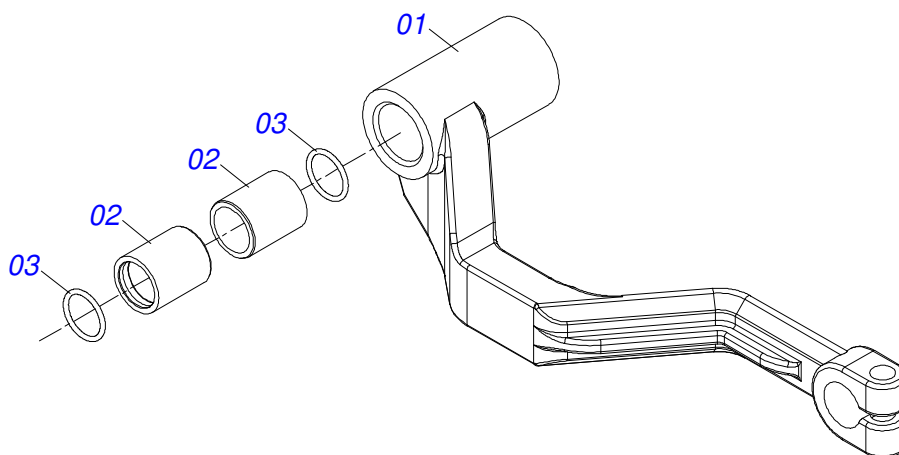


Item	Code	Description	See page	QT
01	0581019523	LEFT ARM WHEEL DEPTH		01
02	0581019514	LUBRICANT SLEEVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

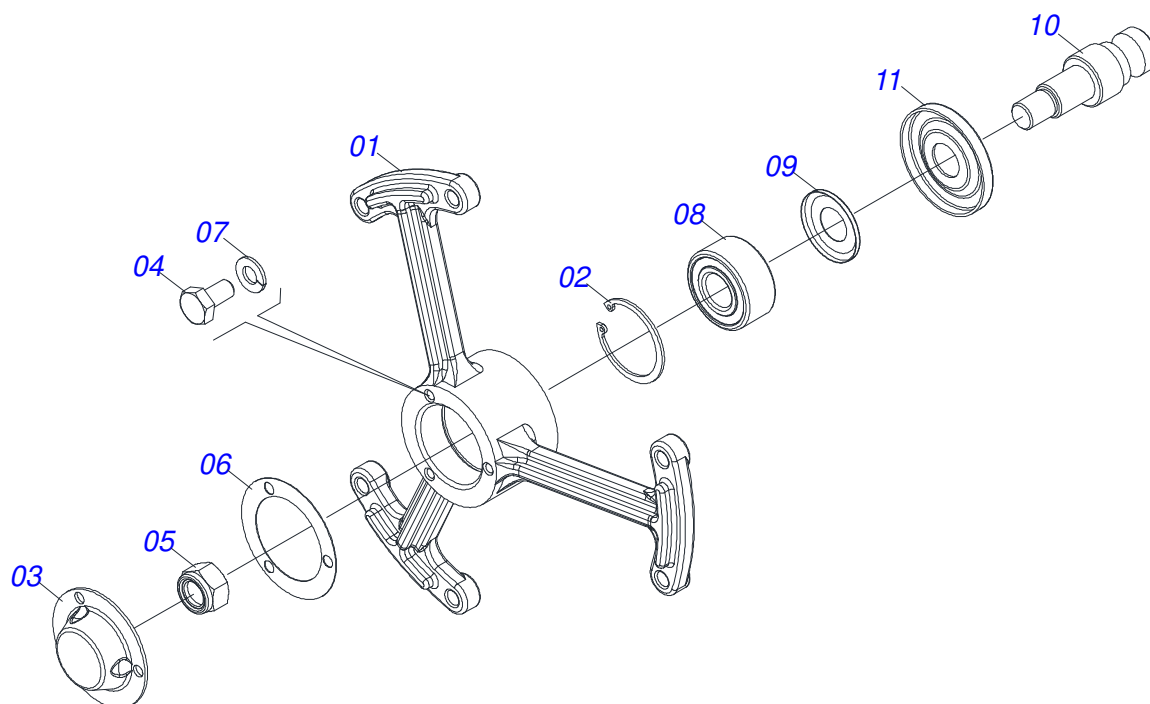


Item	Code	Description	See page	QT
01	0581019522	CASE WHEEL DEPTH WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010878	5/8" SELF ALIGNING NUT		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0503010143	1/4" SPRING WASHER		03
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019529	DEPTH REGULATOR SHAFT		01
11	0581019168	DUST CLOAK		01

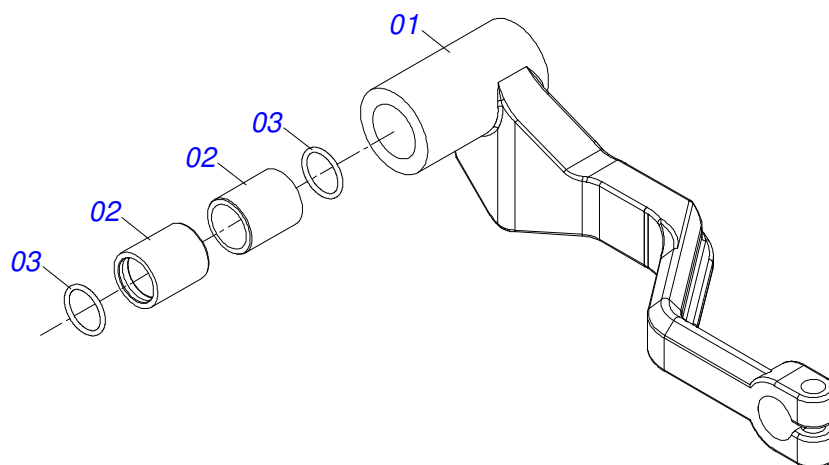


Item	Code	Description	See page	QT
01	0581019524	RIGHT ARM DEPTH		01
02	0581019514	LUBRICANT SLEEVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

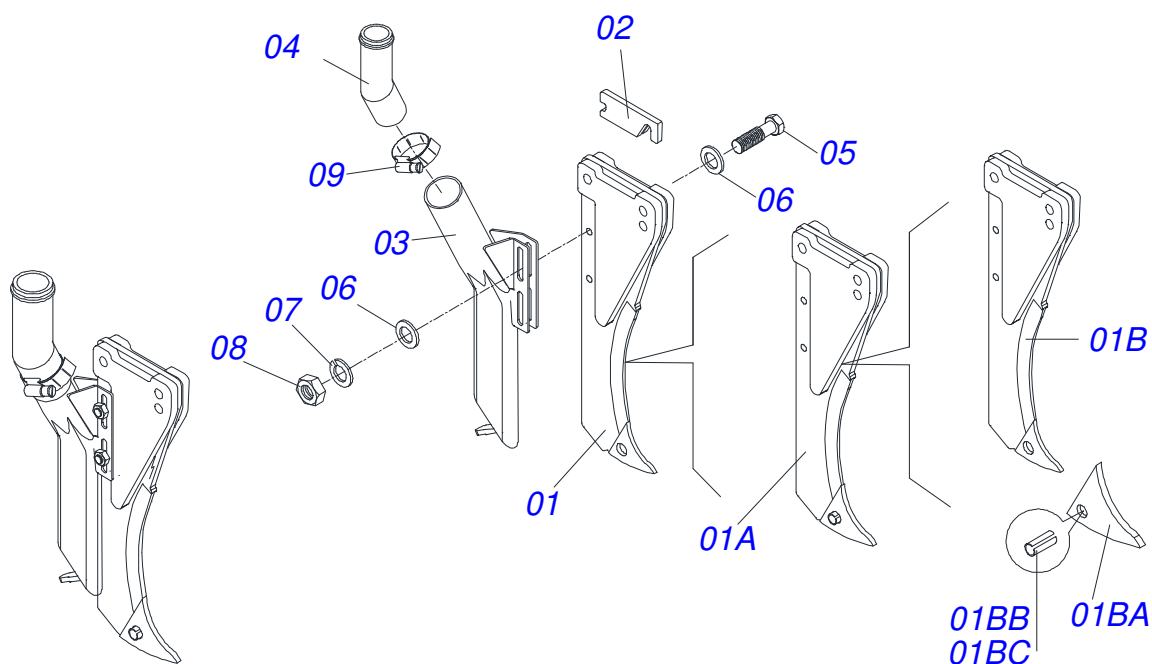


Item	Code	Description	See page	QT
001	0501110231	SCARIFIER ROD WITH TIP	276	01
001A	0511061768	FERTILIZER SCARIFIER ROD		01
001B	0501056132	POINT SUBSOILER		01
001BA	0502070061	POINT SUBSOILER		01
001BB	0503010585	0,24" X 1.18" SPRING PIN		01
001BC	0503011373	0.4" X 1.1" SPRING PIN		01
002	0511017969	0.1" SPACING PLATE		02
003	0511061852	ADJUSTAMENT CONDUCTOR FERTILIZER		01
004	0503031050	CURVED CONDUCTOR		01
005	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
006	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
007	0503010025	3/8 SPRING WASHER		02
008	0503010026	3/8" NUT		02
009	0503010246	CLAMP		01

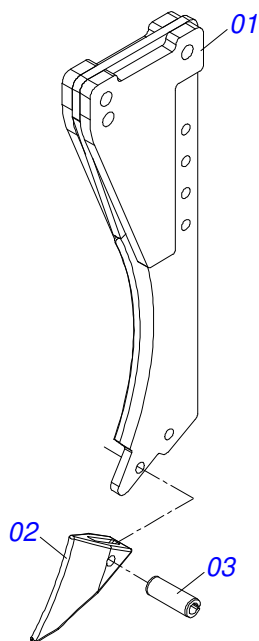


Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER ROD		01
02	1902070061	POINT SUBSOILER		01
03	0503011373	0.4" X 1.1" SPRING PIN		01

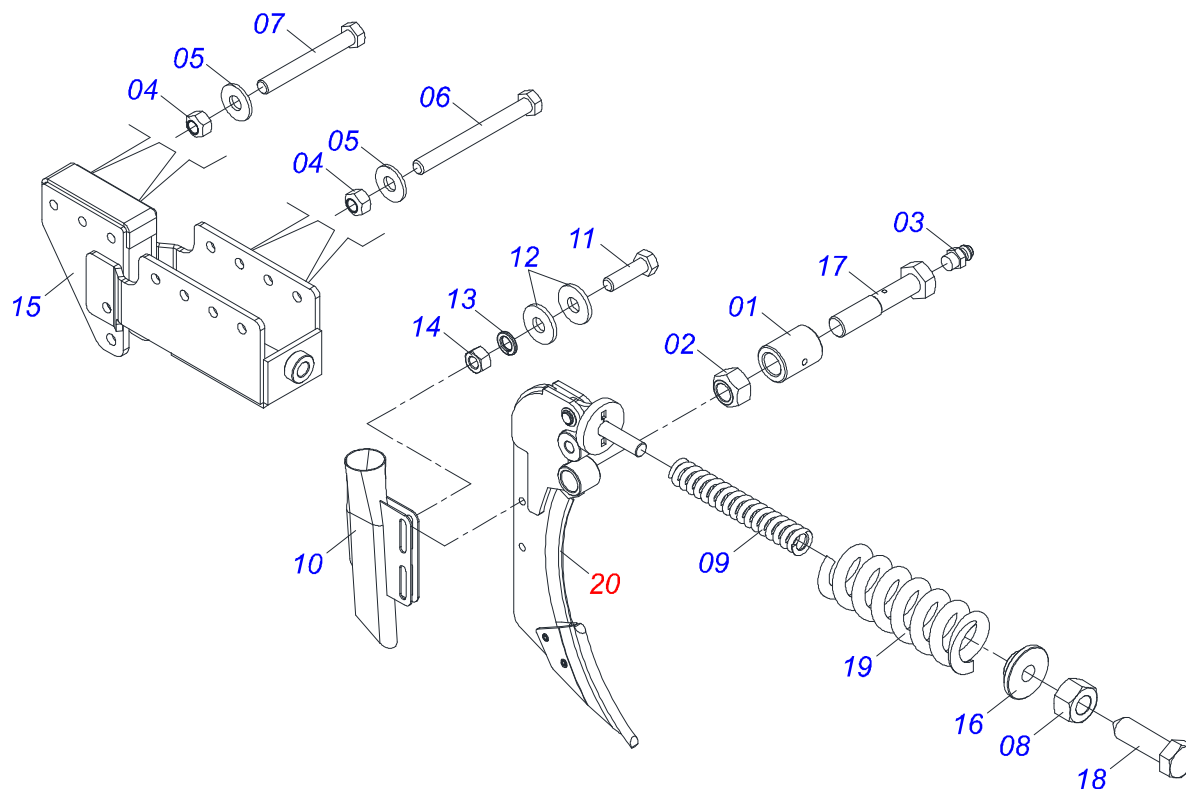


Item	Code	Description	See page	QT
01	0571015538	SLEEVE 37 X 28,3 X 16,70		01
02	0503012412	5/8" UNC SELF LOCKING NUT		01
03	0503010691	1/4" GREASE FITTING		01
04	0503011336	1/2" HEX SELF ADJUSTING NUT		04
05	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
06	0503010384	1/2" X 5" BOLT		02
07	0503010547	1/2" X 4" BOLT		02
08	0503010417	7/8" NUT		01
09	0503033624	35 X 215 X 7,14 COMPRES SPRING		01
10	0521064736	FERTILIZER SOCKET		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
13	0503010025	3/8 SPRING WASHER		02
14	0503010026	3/8" NUT		02
15	0521064739	ROD SUPPORT		01
16	0571015616	GUIDE SPRING SUPPORT		01
17	0571015552	BOLT FIXER		01
18	0503017058	HEX 7/8 UNC X 3 CSRT PC G.5 ZN		01
19	0503034106	80 X 230 X 16,50 COMPRESSION SPRING		01
20	0511058935	ROD WITH POINT FLANGE WASHER SPRING HDA	278	01

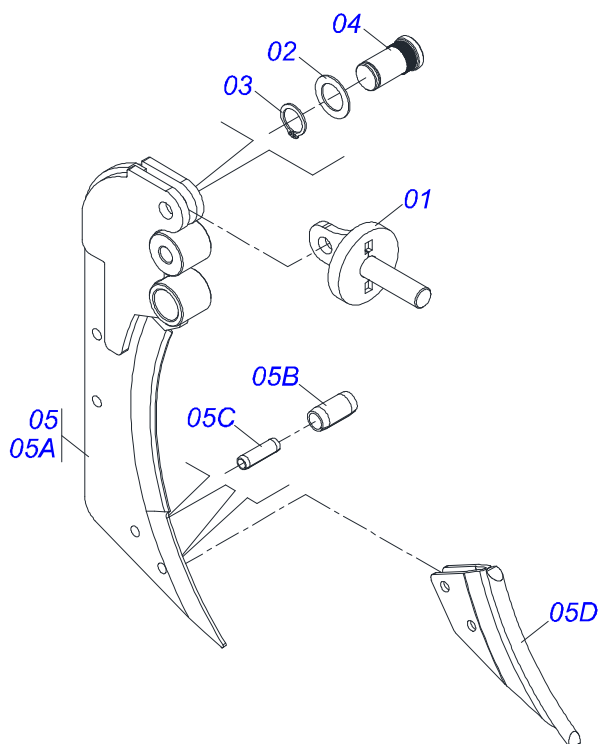


Item	Code	Description	See page	QT
01	0511070103	FLANGE WASHER		01
02	0571017723	FLAT WASHER		01
03	0503012104	501015 CLAMPING RING (FOR AXLE)		01
04	0571015521	PIN LOCK STEM		01
05	0501110780	ROD WITH NOZZLE		01
05A	0521064728	SCARIFIER ROD ASSY		01
05B	0503016853	SPRING PIN		02
05C	0503011402	0.2" X 0.8" SPRING PIN		02
05D	0521066870	POINT SUBSOILER		01

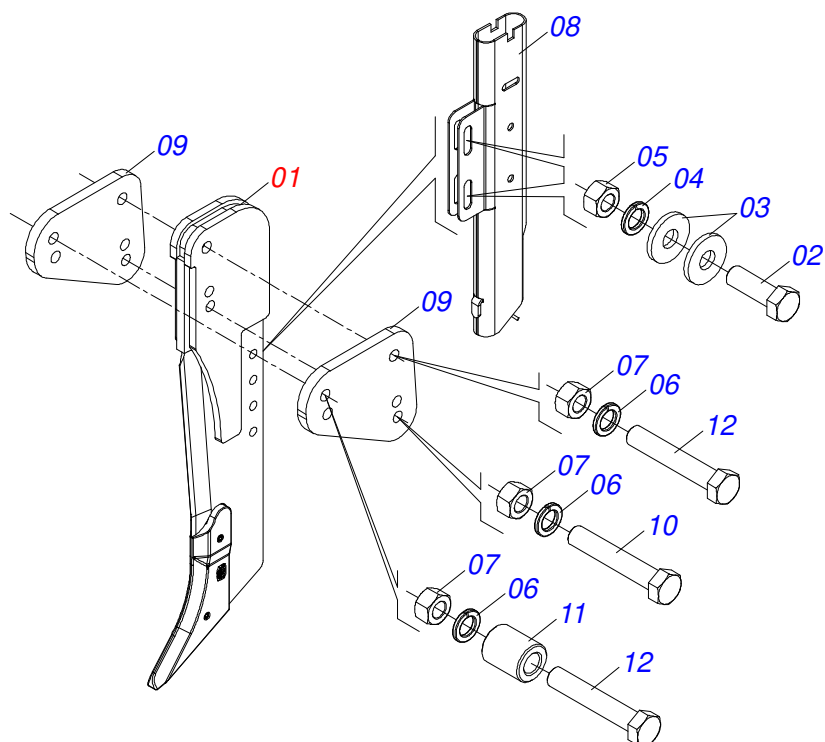

Item	Code	Description	See page	QT
01	0501110860	ROD WITH BEAK	280	01
02	0503010849	3/8" X 1-1/2" BOLT		02
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
04	0503010025	3/8 SPRING WASHER		02
05	0503010026	3/8" NUT		02
06	0503010019	1/2" SPRING WASHER		03
07	0503010060	1/2 UNC G.5 ZN HEX NUT		03
08	0521069125	LOW FERTILIZER NOZZLE		01
09	0581014068	BODY RIGHT FIXING ROD		02
10	0503012914	1/2" X 3" BOLT		01
11	0581016854	GLOVE SPACER STEM FUSE		01
12	0503012558	1/2 UNC X 4 C S G.7 ZN BOLT		02

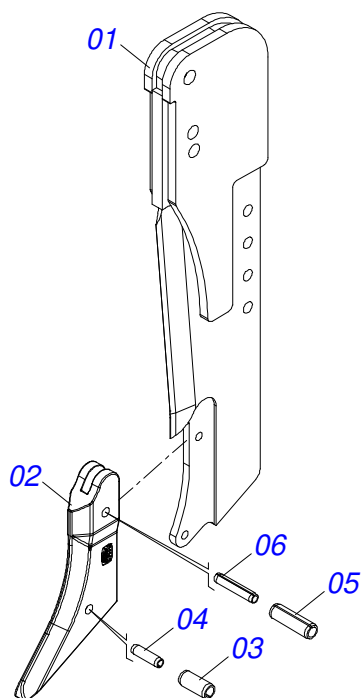

Item	Code	Description	See page	QT
01	0521067442	ROD WITH SCREW FUSE		01
02	0502070086	BODY FUSE ROD		01
03	0503013128	ELASTIC PIN		01
04	0503010686	0.2" X 0.7" SPRING PIN		01
05	0503013129	ELASTIC PIN		01
06	0513010290	ELASTIC PIN 701137 5 X 26		01

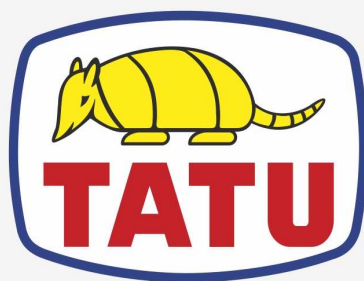

MARCHESAN

Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI

www.marchesan.com.br

