

ROW CROP PLANTERS

PST TRIO FLEX TITANIUM - FRAME
**6450/6850/7285/7450/7960/
8460/8960/9460/9960/10460 - CSU**

Code: 0501092390
Series: S-0518
Revision: 00
Date Revision: JULHO/2021

PARTS CATALOGUE



MARCHESAN

PRODUCTS

Code	Description
0111260288	PST TRIO FLEX 10460/21E500 CI DC20 CSU TIT S-0518
0111260170	PST TRIO FLEX 10460/21E500 ESPECIAL S-0518
0111260193	PST TRIO FLEX 6450/13E500CI MH DC20 CSU TIT S-0518
0111260285	PST TRIO FLEX 6850/15E450 ESPECIAL S-0518
0111260291	PST TRIO FLEX 6850/15E450 ESPECIAL S-0518
0111260315	PST TRIO FLEX 6850/15E450 ESPECIAL S-0518
0111260277	PST TRIO FLEX 6850/15E450 ESPECIAL S-0518
0111260328	PST TRIO FLEX 6850/15E450 ESPECIAL S-0518
0111260323	PST TRIO FLEX 7285/15E500 ESPECIAL S-0518
0111260324	PST TRIO FLEX 7285/15E500 ESPECIAL S-0518
0111260327	PST TRIO FLEX 7450/15E500 ESPECIAL S-0518
0111260278	PST TRIO FLEX 7450/15E500 ESPECIAL S-0518
0111260331	PST TRIO FLEX 7450/15E500 ESPECIAL S-0518
0111260181	PST TRIO FLEX 7450/15E500 ESPECIAL S-0518
0111260206	PST TRIO FLEX 7450/16E450CI MH DC20 CSU TIT S-0518
0111260210	PST TRIO FLEX 7960/16E500CI MH DC20 CSU TIT S-0518
0111260279	PST TRIO FLEX 8460/17E500 ESPECIAL S-0518
0111260218	PST TRIO FLEX 8460/17E500CI MH DC20 CSU TIT S-0518
0111260316	PST TRIO FLEX 8460/18E450 ESPECIAL S-0518
0111260222	PST TRIO FLEX 8460/18E450CI MH DC20 CSU TIT S-0518
0111260284	PST TRIO FLEX 8960/18E500 CI DC20 CSU TIT S-0518
0111260231	PST TRIO FLEX 8960/18E500CI MH DC20 CSU TIT S-0518
0111260333	PST TRIO FLEX 9460/20E450 ESPECIAL S-0518
0111260322	PST TRIO FLEX 9960/20E500 ESPECIAL S-0518

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX

0909095003	FRAME ASSY 6450/6850/7285/7450/7960	1
0909095009	FRAME ASSY 8460/8960/9460/9960/10460	2
0521051604	FRAME WITH ARTICULATION 6450	3
0521051602	RIGHT FRAME WITH AXLE WHEELED 6450	4
0521051603	LEFT FRAME WITH WHEELED AXLE 6450	5
0511053190	CENTRAL FRAME WITH WHEELED AXLE 6450/7285/7450/8460	6
0511059420	FRAME WITH ARTICULATION 6850	7
0511053046	RIGHT FRAME WITH AXLE WHEELED 6850	8
0511059288	CENTRAL FRAME WITH WHEELED AXLE 5750/6850/7860/8160	9
0511053047	LEFT FRAME WITH WHEELED AXLE 6850	10
0521053771	7285 JOINT FRAME	11
0521053773	RIGHT FRAME WITH WHEELED AXLE 7285	12
0521053772	LEFT FRAME WITH WHEELED AXLE 7285	13
0511053196	PST JOINT FRAME	14
0511053188	RIGHT FRAME WITH WHEELED AXLE 7450	15
0511053189	LEFT FRAME WITH WHEELED AXLE 7450	16
0511053769	FRAME WITH ARTICULATION 7960	17
0511053766	RIGHT FRAME WITH WHEELED AXLE 7960/8160	18
0511053767	LEFT FRAME WITH WHEELED AXLE 7960/8160	19
0511053768	CENTRAL FRAME WITH WHEELED AXLE 5850/7960	20
0511056311	ARTICULATION FRAME 8460	21
0511056312	RIGHT FRAME WITH WHEELED AXLE 8460	22
0511056313	LEFT FRAME WITH WHEELED AXLE 8460	23
0521052760	ARTICULATED FRAME 8960	24
0521052758	FRAME RIGHT WITH AXIS 8960/9460	25
0521052761	FRAME CENTRAL WITH AXIS 8960/9960	26
0521052759	LEFT FRAME WITH AXIS 8960/9460	27
0521052763	ARTICULATED FRAME 9460	28
0521052762	FRAME CENTRAL WITH AXIS 9460/10460	29
0521052765	ARTICULATED FRAME 9960	30
0521052767	RIGHT FRAME WITH WHEELED AXLE 9960/10460	31
0521052766	LEFT FRAME WITH WHEELED AXLE 9960/10460	32
0521052798	ARTICULATED FRAME 10460	33
0511059232	ASSEMBLY SPRING TRACTION	34
0511059265	WHEELED WITH SPRING TRACTION WITH TRANSMISSION	35
0511059262	WHEEL SUPPORT ASSY	36
0501058241	WHEEL SUPPORT CHAIN TENSIONER	37
0511052770	WHEEL WITH TIRE	38
0503062159	WHEEL WITH TIRE	39
0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	40
0501058240	WHEEL FASTENER WITH TENSIONER	41
0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	42
0501058244	WHEEL FIXED CHAIN TENSIONER	43
0501058242	WHEEL MOBILE CHAIN TENSIONER	44
0521043313	WHEELED WITH SPRING TRACTION WITHOUT TRANSMISSION	45
0511054336	SUPPORT WHEELED WITHOUT TRANSMISSION	46
0521051801	WHEEL WITH TIRE 7.00X16 WHEELED BOX WITHOUT TRANSMISSION	47
0521051800	WHEELED WITHOUT TRANSMISSION WITHOUT TIRE	48
0909095220	HEADER FULL ASSEMBLY 6450/6850/7285/7450/7960	49
0909095226	HEADER FULL ASSEMBLY 8460	50
0909095227	HEADER FULL ASSEMBLY 8960/9460/9960/10460	51
0511055096	TRACTOR HITCH	52
0521051614	TURNBUCKLE SIDE UPPER	53



MARCHESAN

INDEX

0521051616	TURNBUCKLE SIDE 505/480	54
0521050133	TURNBUCKLE SIDE 755/480	55
0521050681	LATERAL EXTENSOR 1250/480	56
0511059237	3 POINT TURNBUCKLE	57
0521045756	HYDRAULIC CYLINDER	58
0511057653	HYDRAULIC CYLINDER	59
0501053835	FEMALE QUICK COUPLER	60
0521051627	HYDRAULIC SYSTEM ASSEMBLY 6450	61
0511059419	HYDRAULIC SYSTEM ASSEMBLY 6850/7285/7450/7860/7960	62
0521052860	HYDRAULIC SYSTEM ASSEMBLY 8160/8460	63
0521052895	HYDRAULIC SYSTEM ASSEMBLY 8960/9960	64
0521052913	HYDRAULIC SYSTEM ASSEMBLY 9460/10460	65
0511059290	VALVE ASSEMBLY	66
0501053834	MALE QUICK COUPLER	67
0521051608	SILO FERTILIZER ASSEMBLY 6450	68
0521051606	SILO FERTILIZER RIGHT SUPPORT 6450	69
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71
0501053788	3/4 SQUARE AXLE FASTENER	72
0521051607	SUPPORT SILO CENTRAL FERTILIZER 6450/7285/7450/8460	73
0521051605	SILO FERTILIZER LEFT SUPPORT 6450	74
0521050194	SQUARE AXLE RIGHT SUPPORT	75
0521050195	SQUARE AXLE LEFT SUPPORT	76
0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	77
0521052737	6850 FERTILIZER HOPPER ASSEMBLY	78
0521052712	6850 RIGHT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	79
0521052721	6850 LEFT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	80
0521052734	6850/7860 CENTRAL FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	81
0521053777	ASSY SILO FERTILIZER 7285	82
0521053778	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 7285	83
0521053779	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 7285	84
0521052622	ASSY SILO FERTILIZER 7450	85
0521052620	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 7450	86
0521052621	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 7450	87
0521052738	7960 FERTILIZER HOPPER ASSEMBLY	88
0521052711	7860/7960 RIGHT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	89
0521052720	7820/7960 LEFT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	90
0521052732	7960 CENTRAL FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	91
0521052744	ASSY SILO FERTILIZER 8460	92
0521052709	8460/8960/9460 RIGHT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	93
0521052718	8460/8960/9460 LEFT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	94
0521052740	8960 FERTILIZER HOPPER ASSEMBLY	95
0521052731	8960 CENTRAL FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	96
0521052746	ASSY FERTILIZER SILO 9460	97
0521052729	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 9460	98
0521052747	SILO FERTILIZER ASSEMBLY 9960	99
0521052708	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 9960/10460	100



MARCHESAN

INDEX

0521052717	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 9960/10460	101
0521052727	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 9960	102
0521052752	SILO FERTILIZER ASSEMBLY 10460	103
0521052725	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 10460	104
0521051628	TRANSMISSION ASSEMBLY 6450	105
0511058230	TRANSMISSION ASSEMBLY 6850	106
0521053841	ASSEMBLY TRANSMISSION 7285	107
0511058249	ASSEMBLY TRANSMISSION 7450	108
0511058836	ASSEMBLY TRANSMISSION 7960/8160/8460	109
0511058885	TRANSMISSION ASSEMBLY 8960	110
0521050216	TRANSMISSION ASSEMBLY 9460	111
0511058850	TRANSMISSION ASSEMBLY 9960/10460	112
0501052560	MOTOR AXLE SIGNAL	113
0511051434	TRANSMISSION ACTUATOR	114
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	115
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	116
0521043316	RIGHT GEAR BOX ASSY	117
0501058212	SEMI MOUNTED RIGHT CHANGE	118
0511059266	CLOSED BEARING	119
0501056271	GEARBOX CLOSED BEARING	120
0501056443	GEAR HOUSING BEARING	121
0501056444	BEARING WITH ROLLER	122
0501048790	AXLE WITH RING	123
0501054655	CHAIN TENSIONER ASSY	124
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	125
0521043317	LEFT GEAR BOX ASSY	126
0501058213	LH GEAR BOX	127
0511059261	CHAIN TENSIONER	128
0521055217	LOWER CURRENT STRETCH	129
0501058254	UPPER SEED CHAIN TENSIONER	130
0521055216	BEARING WITH GEAR	131
0521055218	BEARING GEAR WITH DOUBLE	132
0521055214	BEARING GEAR WITH	133
0521052670	PLATFORM ASSEMBLY 6450	134
0521052671	PLATFORM ASSEMBLY 6850	135
0521053774	PLATFORM ASSEMBLY 7285	136
0521052672	PLATFORM ASSEMBLY 7450	137
0521052674	PLATFORM ASSEMBLY 7960	138
0521052676	PLATFORM ASSEMBLY 8460	139
0521052677	PLATFORM ASSEMBLY 8960	140
0521052678	PLATFORM ASSEMBLY 9460	141
0521052679	PLATFORM ASSEMBLY 9960	142
0521052103	PLATFORM ASSEMBLY 10460	143
0521051609	HANDLE ASSEMBLY 6450	144
0511058234	HANDLE ASSEMBLY 6850	145
0521053775	HANDLE ASSEMBLY 7285	146
0511058252	HANDLE ASSEMBLY 7450	147
0511058955	HANDLE ASSEMBLY 7960	148
0511058282	HANDLE ASSEMBLY 8460	149
0511058889	HANDLE ASSEMBLY 8960	150
0521050213	HANDLE ASSEMBLY 9460	151
0511058845	HANDLE ASSEMBLY 9960	152



MARCHESAN

INDEX

0511058898	HANDLE ASSEMBLY 10460	153
0511054971	JACK ASSEMBLY	154
0511056536	LADDER ASSEMBLY	155
0521051625	SEMI MOUNTED HYDRAULIC MARKER 6450	156
0511058449	HYDRAULIC CYLINDER	157
0501054649	HBM SEQUENTIAL VALVE	158
0909095167	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 6850/7285/7450/7960	159
0501050633	ROW MARKER DISC ASSEMBLY	160
0511058431	HYDRAULIC CYLINDER	161
0909095228	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8460/8960/9460/9960/10460	162
0521055204	ROW MARKER DISC	163
0521052821	TRANSMISSION AXLE ASSEMBLY 6450	164
0521052826	TRANSMISSION AXLE ASSEMBLY 6850	165
0521053842	AXIS TRANSMISSION SEED ASSY 7285	166
0521052827	AXIS TRANSMISSION SEED ASSY 7450	167
0521052855	AXIS TRANSMISSION SEED ASSY 7960	168
0521052863	AXIS TRANSMISSION SEED ASSY 8460	169
0521052898	AXIS TRANSMISSION SEED ASSY 8960	170
0521052910	AXIS TRANSMISSION SEED ASSY 9460	171
0521052921	AXIS TRANSMISSION SEED ASSY 9960	172
0521052928	AXIS TRANSMISSION SEED ASSY 10460	173
0511059233	INTERMEDIATE TRANSMISSION	174
0503062206	CARDAN TERMINAL	175
0521052803	REAR LIGHT ASSEMBLY	176
0521052844	REAR LIGHT ASSEMBLY 7860/7960/8160/8460	177
0521052899	REAR LIGHT ASSEMBLY 8960/9460	178
0521052923	REAR LIGHT ASSEMBLY 9960	179
0521052930	REAR LIGHT ASSEMBLY 10460	180
0521052792	MOUNTED REAR LIGHT	181
0521051617	ASSEMBLY CSU C3 SEMI MOUNTED 6450	182
0521050210	ASSEMBLY CSU 6450	183
0511057690	3" ARTICULATED SEED CONDUCTOR	184
0521051927	TOWER SUPPORT HOPPER	185
0511057979	ASSEMBLY CSU 6850	186
0511057755	ASSEMBLY CSU 6850	187
0521052698	ASSEMBLY CSU C3 SEMI MOUNTED 7285/7450	188
0521052699	ASSEMBLY CSU C3 2BOX 6/5 - 1BOX 7/5 7285/7450	189
0521052687	RIGHT SUPPORT TOWER WITH BOLT	190
0521051931	LEFT SUPPORT TOWER WITH BOLT	191
0511058961	ASSEMBLY CSU C3 SEMI MOUNTED 7960	192
0511058960	ASSEMBLY CSU C3 - 16 NOZZLES 7960	193
0511058398	ASSEMBLY CSU C3 SEMI MOUNTED 7860/8460	194
0511058397	ASSEMBLY CSU C3 3BOX 7B WITH 17 C 7860	195
0511058577	ASSEMBLY CSU C3 SEMI MOUNTED 8960	196
0511058578	ASSEMBLY CSU C3 - 18 NOZZLES 8960	197
0521050991	ASSEMBLY CSU C3 SEMI MOUNTED 9460	198
0521050990	ASSEMBLY CSU C3 - 2BOXES 7/6 - 2 BOXES 5/4	199
0521052692	ASSEMBLY CSU C3 SEMI MOUNTED 9960	200
0521052693	ASSEMBLY CSU C3 2BOXES 5/4 - 2BOXES 5/3 - 1BOX 7/6 9960	201
0521051929	SIDE FIXED TOWER LEFT HOPPER SUPPORT WITH SCREW	202
0521051928	FIXED TOWER SIDE RIGHT HOPPER SUPPORT WITH SCREW	203
0511058917	ASSEMBLY CSU C3 SEMI MOUNTED 10460	204
0511058854	ASSEMBLY CSU C3 6BOXES 5B WITH 21 C	205



MARCHESAN

INDEX


0521052810	ASSY MANUAL DOOR	206
0909095010	SEED LINE/FERTILIZER ASSEMBLY	207
0501059834	LEFT SHORT SEED ROW FRONT	208
0501059833	RIGHT SHORT SEED ROW FRONT	209
0501059836	LEFT LONG SEED ROW FRONT	210
0501059835	RIGHT LONG SEED ROW FRONT	211
0511059331	FRONT SEMI MOUNTED LONG LEFT SEED LINE	212
0511059332	FRONT SEMI MOUNTED LONG RIGHT SEED LINE	213
0511054635	BEARING AXLE BODY	214
0511057159	TRANSMISSION HOPPER SEED ROW	215
0511050609	BEARING WITH 17Z GEAR ASSY	216
0501052769	BEARING WITH 17Z GEAR	217
0511055260	SEED ROW CHAIN TENSIONER	218
0511059264	BEARING WITH AXLE	219
0501059326	UNIVERSAL JOINT AXLE	220
0511050611	5/8" HEX AXLE BEARING	221
0501059363	5/8" HEX AXLE BEARING	222
0511059333	SEMI-ASSEMBLED MECHANICAL FRAME	223
0511059334	BEARING WITH LONG FRONT AXLE	224
0511058143	UNIVERSAL JOINT AXLE	225
0521055227	BEARING SHAFT HEX	226
0511056622	LEFT REAR SEED ROW	227
0511056586	15 X 15 SEED DDD LEFT	228
0511052302	LH SUPPORT DDD GUIDE	229
0511053173	RIGHT LOW HUB WITH 15 DISC	230
0511053172	LEFT LOW HUB WITH 15 DISC	231
0511056621	RIGHT REAR SEED ROW	232
0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	233
0511052301	SUPPORT DDD 15 RIGHT	234
0521051424	WHEEL SYSTEM DEPTH/COMPACTOR QUICK ADJUSTMENT	235
0501056769	DEPTH WHEELS REGULATOR ASSY	236
0521051423	COMPACTOR SUPPORT	237
0501052908	COMPACTOR WHEEL WITH BEARING	238
0511050077	WHEEL STRIPED	239
0511052287	DEPTH WHEEL HUB ASSY	240
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	241
0511058650	SEMI-MOUNTED DEPTH CONTROL	242
0511058652	LEFT DEPTH WHEEL ARM WITH HUB	243
0511058651	RIGHT DEPTH WHEEL ARM WITH HUB	244
0501052627	ASSY DEPTH WHEEL HUB	245
0501052297	DEPTH WHEELS REGULATOR ASSY	246
0501052538	DEPTH BAND WITH ARMS	247
0511054333	COMPACT WHEEL RIGHT WITH BEARING	248
0511054334	COMPACT WHEEL LEFT WITH BEARING	249
0521044538	DEPHT WHIT REGULACION ANGLE COMPACT CONTROL	250
0511052971	SEMI-ASSEMBLED DEPTH CONTROL WITH THREAD	251
0511059325	LEFT ARM COVERED WHEEL ASSEMBLED	252
0511059324	RIGHT ARM COVERED WHEEL ASSEMBLED	253
0511051546	RIGHT DEPTH CONTROL HUB	254
0511051547	LEFT DEPTH CONTROL HUB	255
0511051583	SEMI-ASSEMBLED DEPTH WHEEL HUB	256
0511052970	SYSTEM COMPACTOR V SEMI MOUNTED	257
0511055819	DEPTH BAND WITH RIM	258
0521052626	SYSTEM DEEP WHEEL / COMPACTOR RAPID IRON ADJUSTMENT	259



MARCHESAN


INDEX

0501052957	IRON V PRESS WHEELS	260
0521053063	SPACRR DEPTH SYSTEM / COMPACTION CLOSED	261
0521053059	SYSTEM WHEELS CONTROL COMPACTOR ASSY	262
0501059228	ADJUSTMENT LEVER	263
0521053060	DEPTH WHEEL RIGHT SPACRR CLOSED	264
0521053061	SPACRR LEFT DEPTH WHEEL CLOSED	265
0521053062	WHEEL RAYED ASSY (SPA) CLOSED	266
0511055626	SPREADED DEPTH WHEEL HUB	267
0521052825	SUPPORT WHEELS COMPACTORS	268
0511053250	SHORT ARM FERTILIZER ROW WITH LEFT DOUBLE DISC	269
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	270
0511053251	LONG ARM FERTILIZER ROW WITH RIGHT DOUBLE DISC	271
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	272
0511058619	20" SHORT ROW DISC BLADE	273
0511058620	20" LONG ROW DISC BLADE	274
0511058648	HUB WITH 20" DISC BLADE	275
0511056909	DISC BLADE HUB WITHOUT DISC	276
0521050096	SEED HOPPER SYSTEM (CSU)	277
0511052058	SEED SYSTEM TITANIUM	278
0511052024	FAST CLOSING SET	279
0501058423	FERTILIZER ROD SPRING ROW	280
0511059350	FERTILIZER ROW SUPPORT ASSEMBLY	281
0521050525	FIXER FERTILIZER CONDUCTOR	282
0501110231	SCARIFIER ROD WITH TIP	283
0503062066	DISC SET WITH CORN RING	284
0503062067	DISC SET / RING SOY 90F TITANIUM	285
0501058972	ASSEMBLY SENSOR ELECTRONIC	286
0511059220	DAOC 18 RIGHT WITH NOZZLE	287
0511059218	RIGHT SUPPORT	288
0511059229	HUB WITH DOC 18 TURBO RIGHT	289
0511059221	DAOC 18 LEFT WITH NOZZLE	290
0511059219	LEFT SUPPORT	291
0511059230	HUB WITH DOC 18 TURBO LEFT	292
0511056736	HOSE SUPPORT	293
0521052796	CYLINDER ASSEMBLY 5750/6850/7860/7960/8460	294
0511058406	HYDRAULIC CYLINDER	295
0521053426	MONITORING ASSEMBLY PLANTING SEEDS 15L PM400	296
0521053451	MONITORING ASSEMBLY PLANTING SEEDS 17L PM400	297
0521053452	MONITORING ASSEMBLY PLANTING SEEDS 18L PM400	298
0521053455	MONITORING ASSEMBLY PLANTING SEEDS 21L PM400	299

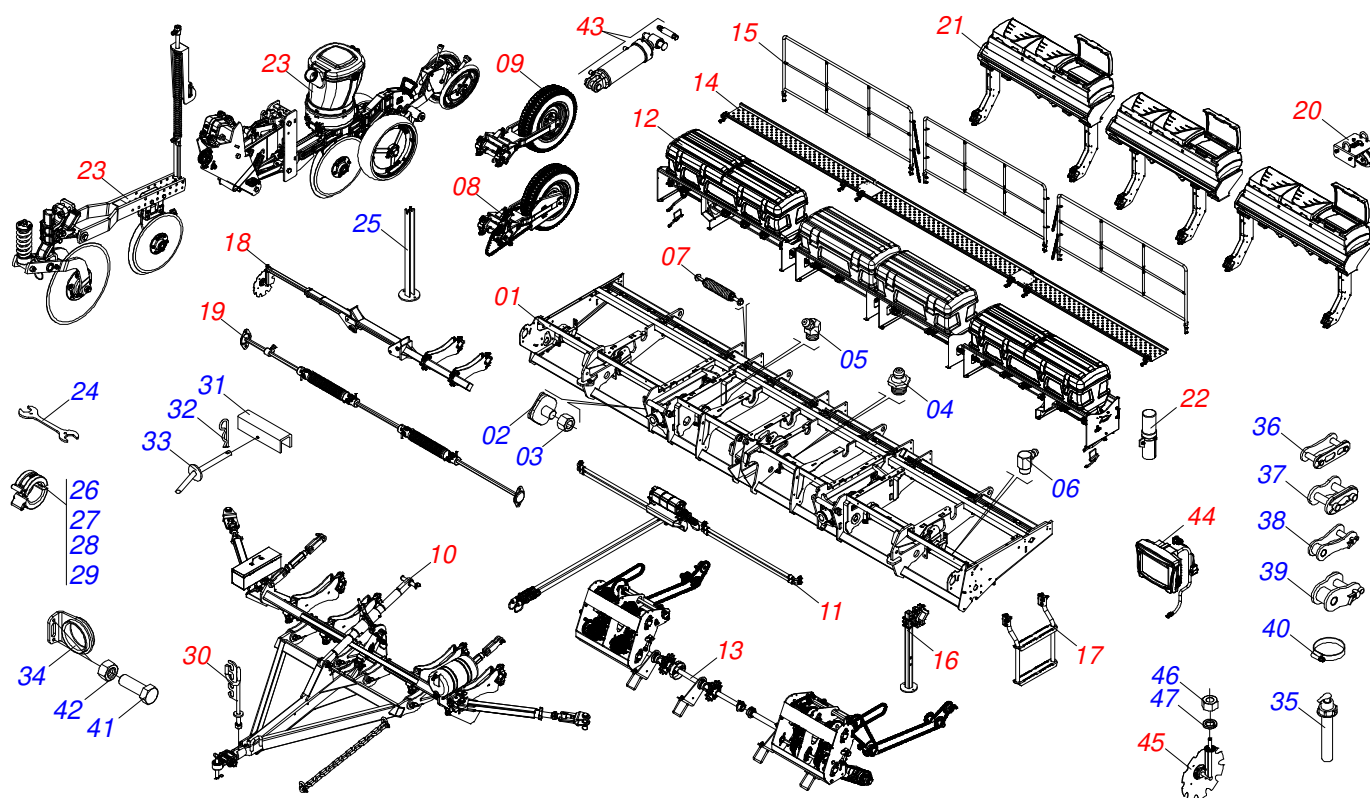


Item	Code	Description	See page	6450	6850	7285	7450	7960
01	0521051604	FRAME WITH ARTICULATION 6450	3	001	000	000	000	000
01.	0511059420	FRAME WITH ARTICULATION 6850	7	000	001	000	000	000
01..	0521053771	7285 JOINT FRAME	11	000	000	001	000	000
01...	0511053196	PST JOINT FRAME	14	000	000	000	001	000
01....	0511053769	FRAME WITH ARTICULATION 7960	17	000	000	000	000	001
02	0521064285	LOCK LOWER FRAME		002	002	002	002	002
03	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		002	002	002	002	002
04	0503010002	1800 GREASE FITTING		002	002	002	002	002
05	0503010003	1845 GREASE FITTING		008	008	008	008	008
06	0503010004	1890 GREASE FITTING		002	002	002	002	002
07	0511059232	ASSEMBLY SPRING TRACTION	34	002	002	002	002	002
08	0511059265	WHEELED WITH SPRING TRACTION WITH TRANSMISSION	35	004	004	004	004	004
09	0521043313	WHEELED WITH SPRING TRACTION WITHOUT TRANSMISSION	45	002	002	002	002	004
10	0909095220	HEADER FULL ASSEMBLY 6450/6850/7285/7450/7960	49	001	001	001	001	001
11	0521051627	HYDRAULIC SYSTEM ASSEMBLY 6450	61	001	000	000	000	000
11.	0511059419	HYDRAULIC SYSTEM ASSEMBLY 6850/7285/7450/7860/7960	62	000	001	001	001	001
12	0521051608	SILO FERTILIZER ASSEMBLY 6450	68	001	000	000	000	000
12.	0521052737	6850 FERTILIZER HOPPER ASSEMBLY	78	000	001	000	000	000
12..	0521053777	ASSY SILO FERTILIZER 7285	82	000	000	001	000	000
12...	0521052622	ASSY SILO FERTILIZER 7450	85	000	000	000	001	000
12....	0521052738	7960 FERTILIZER HOPPER ASSEMBLY	88	000	000	000	000	001
13	0521051628	TRANSMISSION ASSEMBLY 6450	105	001	000	000	000	000
13.	0511058230	TRANSMISSION ASSEMBLY 6850	106	000	001	000	000	000
13..	0521053841	ASSEMBLY TRANSMISSION 7285	107	000	000	001	000	000
13...	0511058249	ASSEMBLY TRANSMISSION 7450	108	000	000	000	001	000
13....	0511058836	ASSEMBLY TRANSMISSION 7960/8160/8460	109	000	000	000	000	001
14	0521052670	PLATFORM ASSEMBLY 6450	134	001	000	000	000	000
14.	0521052671	PLATFORM ASSEMBLY 6850	135	000	001	000	000	000

Item	Code	Description	See page	6450	6850	7285	7450	7960
14..	0521053774	PLATFORM ASSEMBLY 7285	136	000	000	001	000	000
14...	0521052672	PLATFORM ASSEMBLY 7450	137	000	000	000	001	000
14....	0521052674	PLATFORM ASSEMBLY 7960	138	000	000	000	000	001
15	0521051609	HANDLE ASSEMBLY 6450	144	001	000	000	000	000
15.	0511058234	HANDLE ASSEMBLY 6850	145	000	001	000	000	000
15..	0521053775	HANDLE ASSEMBLY 7285	146	000	000	001	000	000
15...	0511058252	HANDLE ASSEMBLY 7450	147	000	000	000	001	000
15....	0511058955	HANDLE ASSEMBLY 7960	148	000	000	000	000	001
16	0511054971	JACK ASSEMBLY	154	002	002	002	002	002
17	0511056536	LADDER ASSEMBLY	155	002	002	002	002	002
18	0521051625	SEMI MOUNTED HYDRAULIC MARKER 6450	156	001	000	000	000	000
18.	0909095167	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 6850/7285/7450/7960	159	000	001	001	001	001
19	0521052821	TRANSMISSION AXLE ASSEMBLY 6450	164	001	000	000	000	000
19.	0521052826	TRANSMISSION AXLE ASSEMBLY 6850	165	000	001	000	000	000
19..	0521053842	AXIS TRANSMISSION SEED ASSY 7285	166	000	000	001	000	000
19...	0521052827	AXIS TRANSMISSION SEED ASSY 7450	167	000	000	000	001	000
19....	0521052855	AXIS TRANSMISSION SEED ASSY 7960	168	000	000	000	000	001
20	0521052803	REAR LIGHT ASSEMBLY	176	001	001	001	001	000
20.	0521052844	REAR LIGHT ASSEMBLY 7860/7960/8160/8460	177	000	000	000	000	001
21	0521051617	ASSEMBLY CSU C3 SEMI MOUNTED 6450	182	001	000	000	000	000
21.	0511057979	ASSEMBLY CSU 6850	186	000	001	000	000	000
21..	0521052698	ASSEMBLY CSU C3 SEMI MOUNTED 7285/7450	188	000	000	001	001	000
21...	0511058961	ASSEMBLY CSU C3 SEMI MOUNTED 7960	192	000	000	000	000	001
22	0521052810	ASSY MANUAL DOOR	206	001	001	001	001	001
23	0909095010	SEED LINE/FERTILIZER ASSEMBLY	207	001	001	001	001	001
24	0541015451	FIXED KEY 2.3/8 X 2.3/4		001	001	001	001	001
25	0501065677	STRUT		002	002	002	002	002
26	0501047895	25 ROD STOP		003	003	003	003	003
27	0501047885	30 ROD STOP		003	003	003	003	003
28	0501047886	35 ROD STOP		003	003	003	003	003
29	0501047887	40 ROD STOP		003	003	003	003	003
30	0511056736	HOSE SUPPORT	293	001	001	001	001	001
31	0521013022	TRANSPORT LOCK		003	003	003	003	003
32	0503030168	HITCH PIN CLIP		003	003	003	003	003
33	0501068994	8,30 X 78 LOCK PIN		003	003	003	003	003
34	0521066304	HOSE GUIDE		001	001	001	001	001
35	0503019262	SOAP DISH VACUUM		001	001	001	001	001
36	0503010780	N-2050 AMENDMENT		002	002	002	002	002
37	0503011750	AMENDMENT WITH LOCK		006	006	006	006	006
38	0503011751	REDUCTION		006	006	006	006	006
39	0503010951	REDUCTION		004	004	004	004	004
40	0503010246	CLAMP		013	015	015	015	016
41	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		002	002	002	002	002
42	0503013816	5/16" LOCKNUT		002	002	002	002	002
43	0521052796	CYLINDER ASSEMBLY 5750/6850/7860/7960/8460	294	001	001	001	001	001
44	0521053426	MONITORING ASSEMBLY PLANTING SEEDS PM400	296	000	001	000	001	000
45	0501050633	ROW MARKER DISC ASSEMBLY	160	001	001	001	001	001
46	0503010014	3/4" HEX NUT		002	002	002	002	002
47	0503010023	3/4" SPRING WASHER		002	002	002	002	002

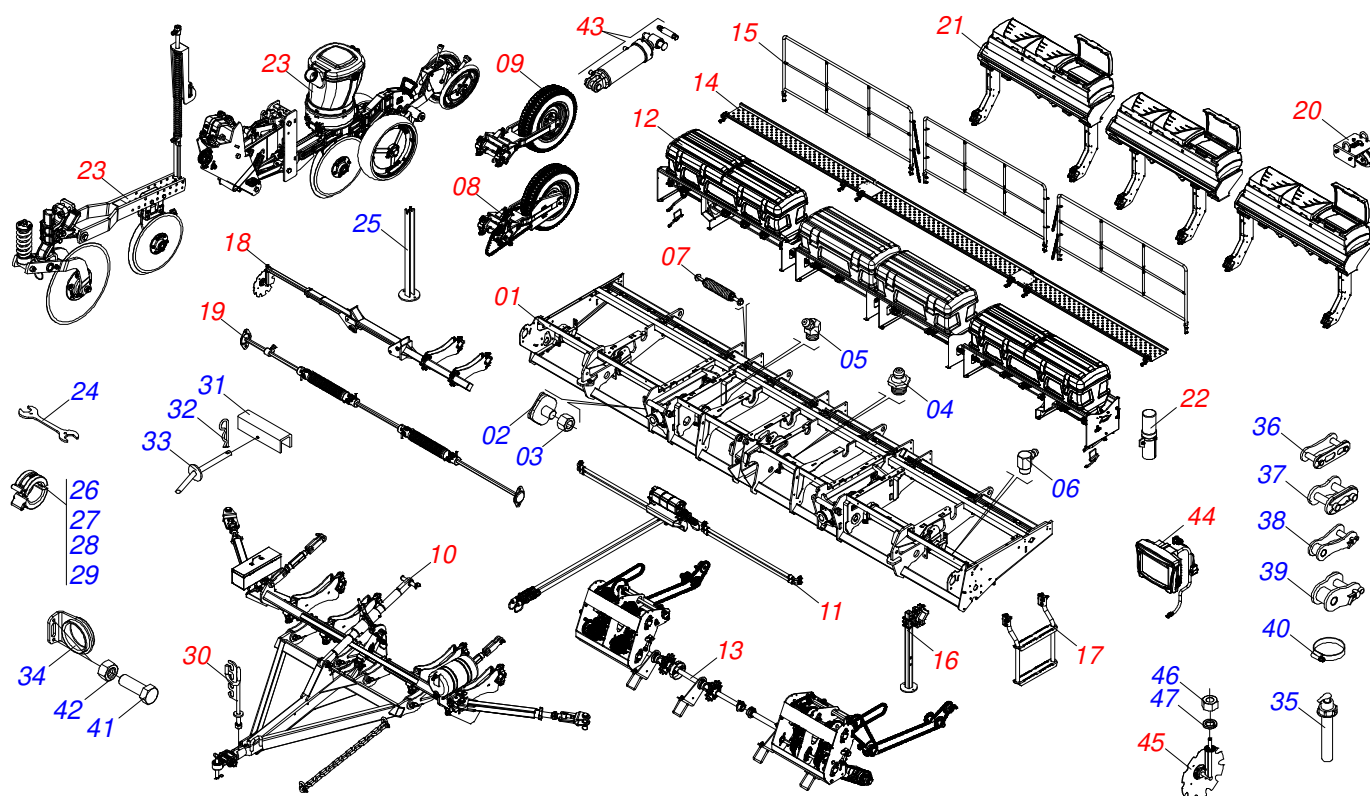


Item	Code	Description	See page	8460	8960	9460	9960	10460
01	0511056311	ARTICULATION FRAME 8460	21	001	000	000	000	000
01.	0521052760	ARTICULATED FRAME 8960	24	000	001	000	000	000
01..	0521052763	ARTICULATED FRAME 9460	28	000	000	001	000	000
01...	0521052765	ARTICULATED FRAME 9960	30	000	000	000	001	000
01....	0521052798	ARTICULATED FRAME 10460	33	000	000	000	000	001
02	0521064285	LOCK LOWER FRAME		002	002	002	002	002
03	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		002	002	002	002	002
04	0503010002	1800 GREASE FITTING		002	002	002	002	002
05	0503010003	1845 GREASE FITTING		008	008	008	008	008
06	0503010004	1890 GREASE FITTING		002	002	002	002	002
07	0511059232	ASSEMBLY SPRING TRACTION	34	002	002	002	002	002
08	0511059265	WHEELED WITH SPRING TRACTION WITH TRANSMISSION	35	004	004	004	004	004
09	0521043313	WHEELED WITH SPRING TRACTION WITHOUT TRANSMISSION	45	004	006	006	006	006
10	0909095226	HEADER FULL ASSEMBLY 8460	50	001	000	000	000	000
10.	0909095227	HEADER FULL ASSEMBLY 8960/9460/9960/10460	51	000	001	001	001	001
11	0521052860	HYDRAULIC SYSTEM ASSEMBLY 8160/8460	63	001	000	000	000	000
11.	0521052895	HYDRAULIC SYSTEM ASSEMBLY 8960/9960	64	000	001	000	001	000
11..	0521052913	HYDRAULIC SYSTEM ASSEMBLY 9460/10460	65	000	000	001	000	001
12	0521052744	ASSY SILO FERTILIZER 8460	92	001	000	000	000	000
12.	0521052740	8960 FERTILIZER HOPPER ASSEMBLY	95	000	001	000	000	000
12..	0521052746	ASSY FERTILIZER SILO 9460	97	000	000	001	000	000
12...	0521052747	SILO FERTILIZER ASSEMBLY 9960	99	000	000	000	001	000
12....	0521052752	SILO FERTILIZER ASSEMBLY 10460	103	000	000	000	000	001
13	0511058836	ASSEMBLY TRANSMISSION 7960/8160/8460	109	001	000	000	000	000
13.	0511058885	TRANSMISSION ASSEMBLY 8960	110	000	001	000	000	000
13..	0521050216	TRANSMISSION ASSEMBLY 9460	111	000	000	001	000	000
13...	0511058850	TRANSMISSION ASSEMBLY 9960/10460	112	000	000	000	001	001
14	0521052676	PLATFORM ASSEMBLY 8460	139	001	000	000	000	000
14.	0521052677	PLATFORM ASSEMBLY 8960	140	000	001	000	000	000
14..	0521052678	PLATFORM ASSEMBLY 9460	141	000	000	001	000	000


Item	Code	Description	See page	8460	8960	9460	9960	10460
14...	0521052679	PLATFORM ASSEMBLY 9960	142	000	000	000	001	000
14....	0521052103	PLATFORM ASSEMBLY 10460	143	000	000	000	000	001
15	0511058282	HANDLE ASSEMBLY 8460	149	001	000	000	000	000
15.	0511058889	HANDLE ASSEMBLY 8960	150	000	001	000	000	000
15..	0521050213	HANDLE ASSEMBLY 9460	151	000	000	001	000	000
15...	0511058845	HANDLE ASSEMBLY 9960	152	000	000	000	001	000
15....	0511058898	HANDLE ASSEMBLY 10460	153	000	000	000	000	001
16	0511054971	JACK ASSEMBLY	154	002	002	002	002	002
17	0511056536	LADDER ASSEMBLY	155	002	002	002	002	002
18	0909095228	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8460/8960/9460/9960/10460	162	001	001	001	001	001
19	0521052863	AXIS TRANSMISSION SEED ASSY 8460	169	001	000	000	000	000
19.	0521052898	AXIS TRANSMISSION SEED ASSY 8960	170	000	001	000	000	000
19..	0521052910	AXIS TRANSMISSION SEED ASSY 9460	171	000	000	001	000	000
19...	0521052921	AXIS TRANSMISSION SEED ASSY 9960	172	000	000	000	001	000
19....	0521052928	AXIS TRANSMISSION SEED ASSY 10460	173	000	000	000	000	001
20	0521052844	REAR LIGHT ASSEMBLY 7860/7960/8160/8460	177	001	000	000	000	000
20.	0521052899	REAR LIGHT ASSEMBLY 8960/9460	178	000	001	001	000	000
20..	0521052923	REAR LIGHT ASSEMBLY 9960	179	000	000	000	001	000
20...	0521052930	REAR LIGHT ASSEMBLY 10460	180	000	000	000	000	001
21	0511058398	ASSEMBLY CSU C3 SEMI MOUNTED 7860/8460	194	001	000	000	000	000
21.	0511058577	ASSEMBLY CSU C3 SEMI MOUNTED 8960	196	000	001	000	000	000
21..	0521050991	ASSEMBLY CSU C3 SEMI MOUNTED 9460	198	000	000	001	000	000
21...	0521052692	ASSEMBLY CSU C3 SEMI MOUNTED 9960	200	000	000	000	001	000
21....	0511058917	ASSEMBLY CSU C3 SEMI MOUNTED 10460	204	000	000	000	000	001
22	0521052810	ASSY MANUAL DOOR	206	001	001	001	001	001
23	0909095010	SEED LINE/FERTILIZER ASSEMBLY	207	001	001	001	001	001
24	0541015451	FIXED KEY 2.3/8 X 2.3/4		001	001	001	001	001
25	0501065677	STRUT		002	002	002	002	002
26	0501047895	25 ROD STOP		003	003	003	003	003
27	0501047885	30 ROD STOP		003	003	003	003	003
28	0501047886	35 ROD STOP		003	003	003	003	003
29	0501047887	40 ROD STOP		003	003	003	003	003
30	0511056736	HOSE SUPPORT	293	001	001	001	001	001
31	0521013022	TRANSPORT LOCK		003	003	003	003	003
32	0503030168	HITCH PIN CLIP		003	003	003	003	003
33	0501068994	8,30 X 78 LOCK PIN		003	003	003	003	003
34	0521066304	HOSE GUIDE		001	001	001	001	001
35	0503019262	SOAP DISH VACUUM		001	001	001	001	001
36	0503010780	N-2050 AMENDMENT		002	002	002	002	002
37	0503011750	AMENDMENT WITH LOCK		006	006	006	006	006
38	0503011751	REDUCTION		006	006	006	006	006
39	0503010951	REDUCTION		004	004	004	004	004
40	0503010246	CLAMP		013	015	015	015	016
41	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		002	002	002	002	002
42	0503013816	5/16" LOCKNUT		002	002	002	002	002
43	0521052796	CYLINDER ASSEMBLY 5750/6850/7860/7960/8460	294	001	001	001	001	001
44	0521053451	MONITORING ASSEMBLY PLANTING SEEDS 17L PM400	297	001	000	000	000	000
44.	0521053452	MONITORING ASSEMBLY PLANTING SEEDS 18L PM400	298	001	000	000	000	000
44..	0521053455	MONITORING ASSEMBLY PLANTING SEEDS 21L PM400	299	000	000	000	000	001
45	0501050633	ROW MARKER DISC ASSEMBLY	160	001	001	001	001	001
46	0503010014	3/4" HEX NUT		002	002	002	002	002
47	0503010023	3/4" SPRING WASHER		002	002	002	002	002

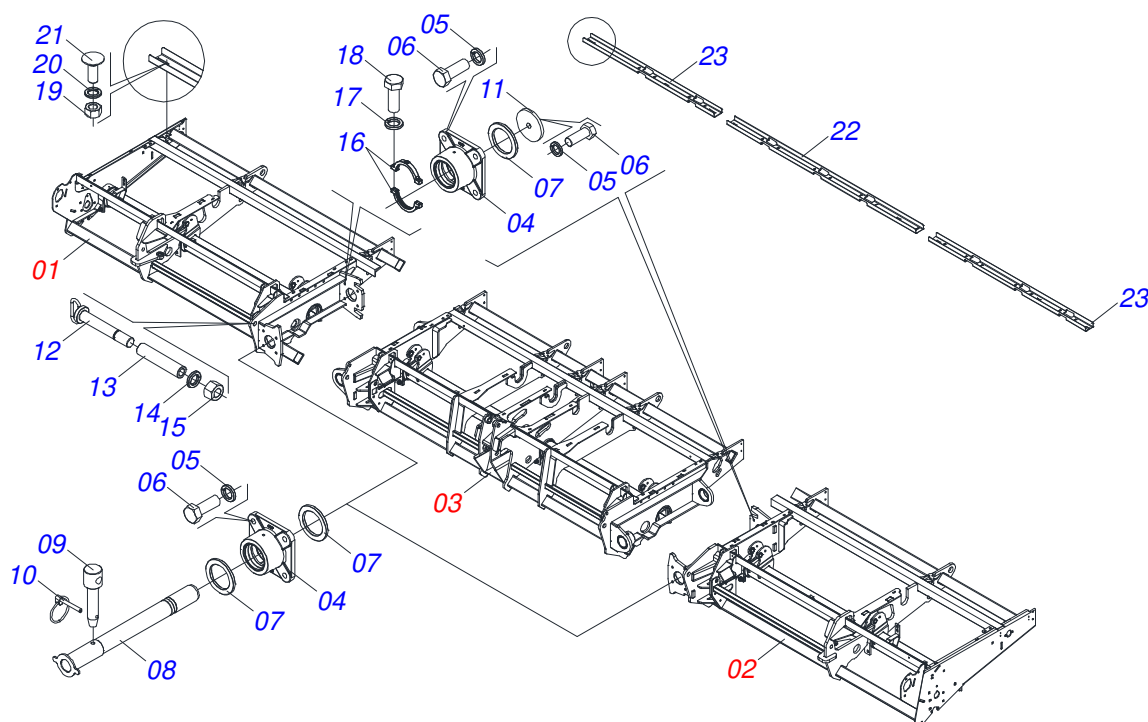


Item	Code	Description	See page	QT
01	0521051602	RIGHT FRAME WITH AXLE WHEELED 6450	4	01
02	0521051603	LEFT FRAME WITH WHEELED AXLE 6450	5	01
03	0511053190	CENTRAL FRAME WITH WHEELED AXLE 6450/7285/7450/8460	6	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0521063003	LOCK PIN		02
13	0571010969	LOCK SLEEVE FRAME		02
14	0503013627	1.1/2 SPRING WASHER		02
15	0501010110	1.1/2" NUT		02
16	0502012698	CLAMP		04
17	0503011444	SPRING WASHER		04
18	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
19	0503010026	3/8" NUT		07
20	0503010025	3/8 SPRING WASHER		07
21	0501011643	3/8 X 1" BOLT		12
22	0581018028	TROUGH 24 X 50 X 1650		02
23	0581018018	TROUGH 24 X 50 X 1255		02

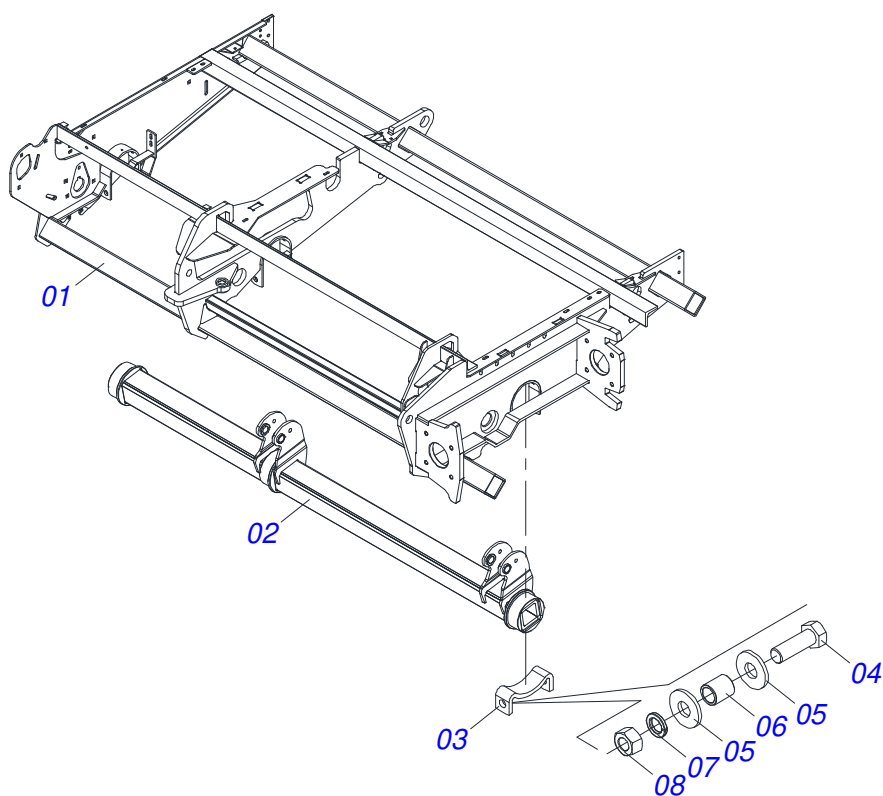


Item	Code	Description	See page	QT
01	0521068087	FRAME RIGHT 6450		01
02	0521068085	RIGHT ARTICULATED AXLE		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

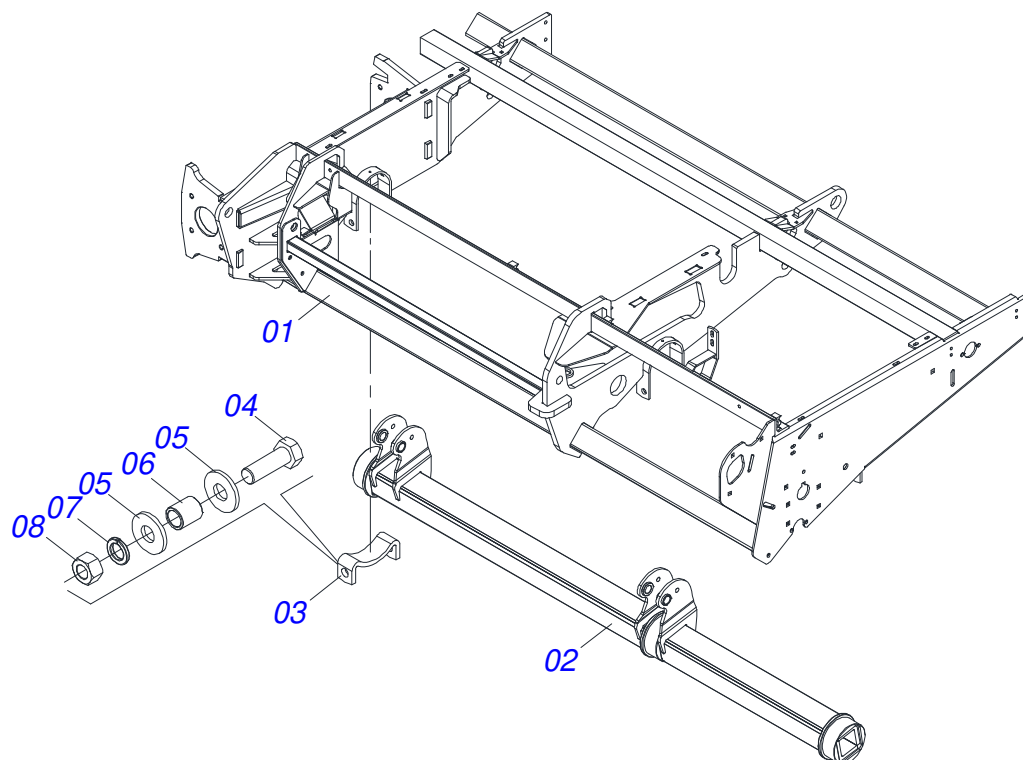


Item	Code	Description	See page	QT
01	0521068088	FRAME LEFT 6450		01
02	0521068086	LEFT ARTICULATED AXLE		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

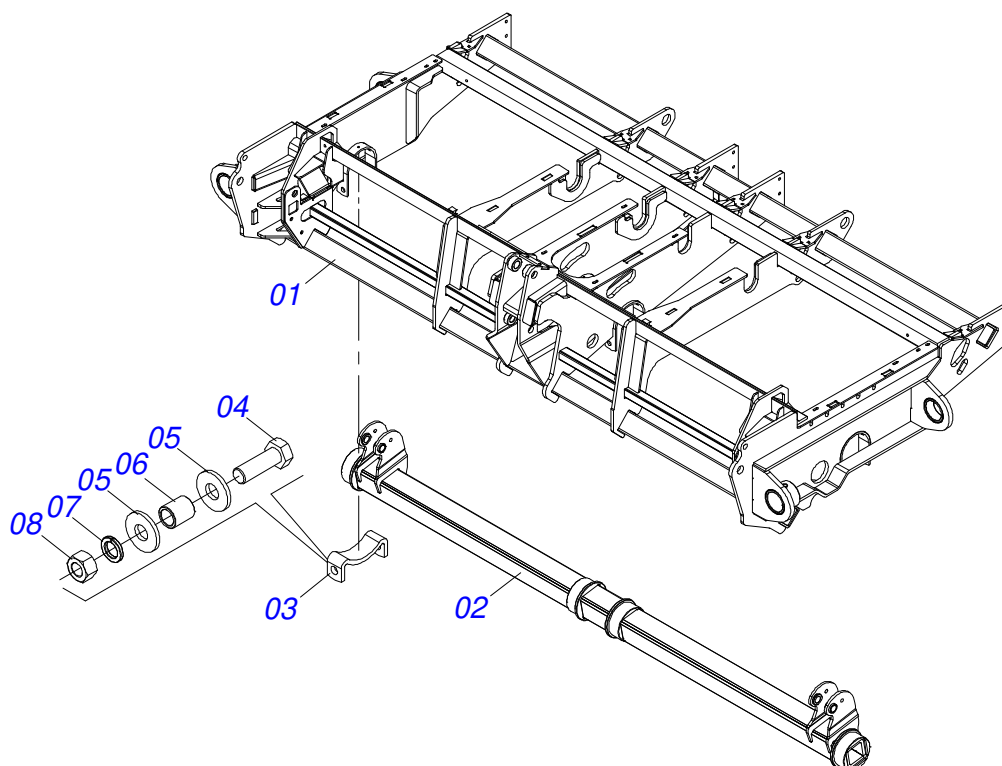


Item	Code	Description	See page	QT
01	0521064011	CENTRAL FRAME PST TRIO 15		01
02	0521064022	CENTRAL ARTICLES AXLE ROLLED		01
03	0521013199	LOWER BEARING SEMI		04
04	0503010899	5/8 UNC X 2.1/4 BOLT		08
05	0501012140	FLAT WASHER		16
06	0531013922	0.6" X 0.8" X 1" SLEEVE		08
07	0503011445	SPRING WASHER		08
08	0503010013	5/8 NUT		08

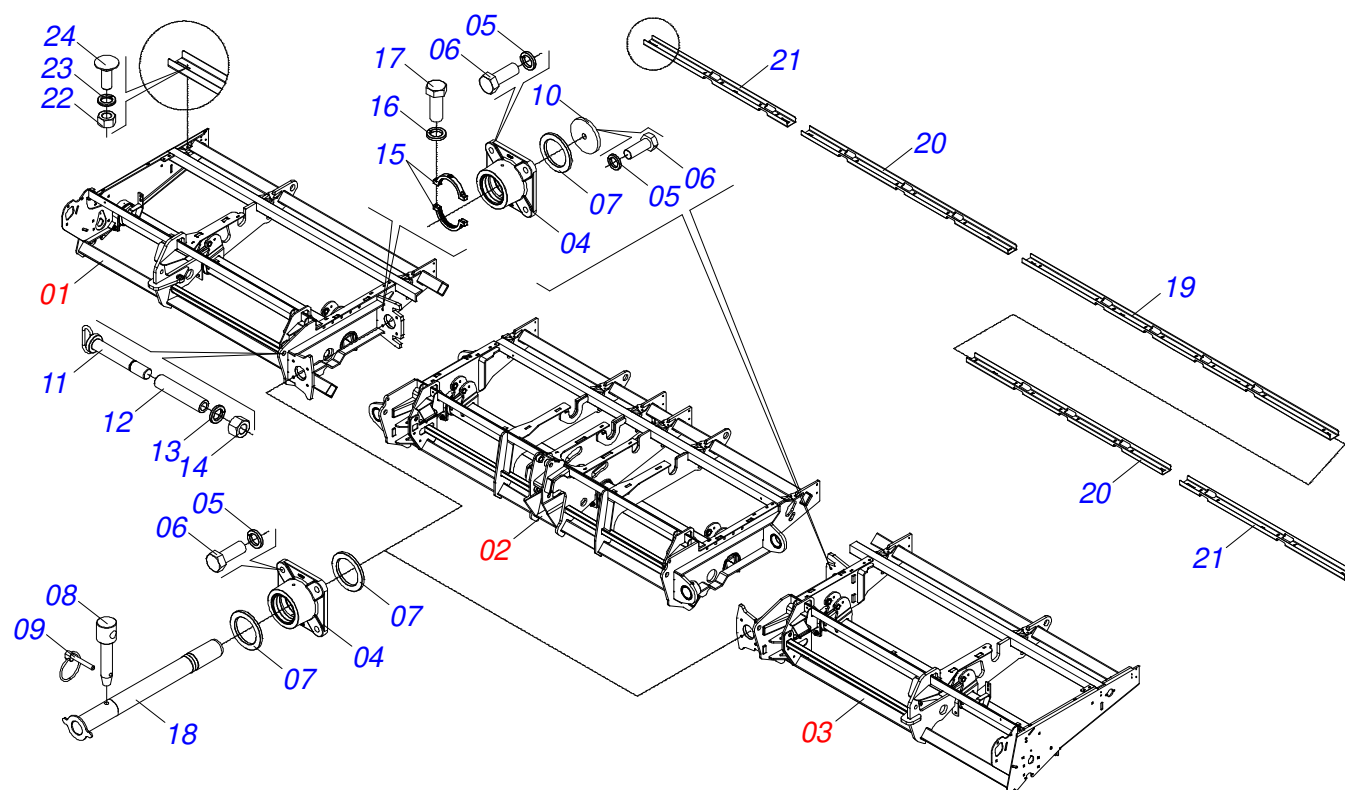


Item	Code	Description	See page	QT
01	0511053046	RIGHT FRAME WITH AXLE WHEELED 6850	8	01
02	0511059288	CENTRAL FRAME WITH WHEELED AXLE 5750/6850/7860/8160	9	01
03	0511053047	LEFT FRAME WITH WHEELED AXLE 6850	10	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0571013510	LOCK AXLE		02
09	0503030085	LOCK PIN		02
10	0571010095	FLAT WASHER		02
11	0521063003	LOCK PIN		02
12	0571010969	LOCK SLEEVE FRAME		02
13	0503013627	1.1/2 SPRING WASHER		02
14	0501010110	1.1/2" NUT		02
15	0502012698	CLAMP		04
16	0503011444	SPRING WASHER		04
17	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
18	0521063912	PIVOT SHAFT		02
19	0581015857	GUTTER 24 X 50 X 1080		01
20	0581018001	GUTTER 24 X 50 X 980		02
21	0581017747	GUTTER 25 X 50 X 1200		02
22	0503010026	3/8" NUT		12
23	0503010025	3/8 SPRING WASHER		12
24	0501011643	3/8 X 1" BOLT		12

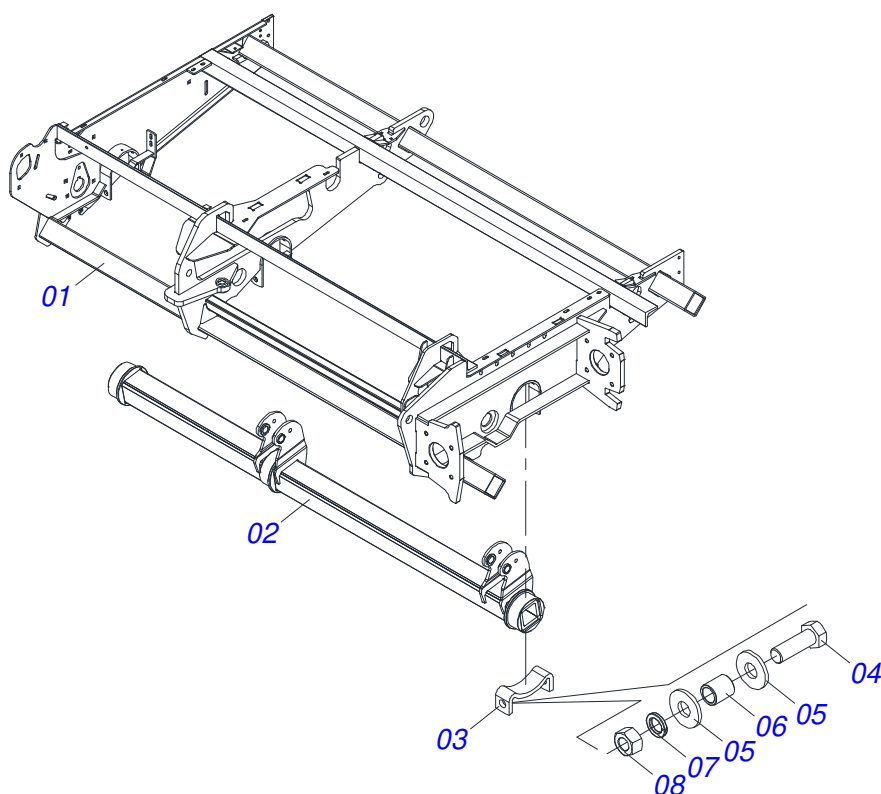


Item	Code	Description	See page	QT
01	0521063886	RIGHT FRAME		01
02	0521063872	ARTICLES AXLE RIGHT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

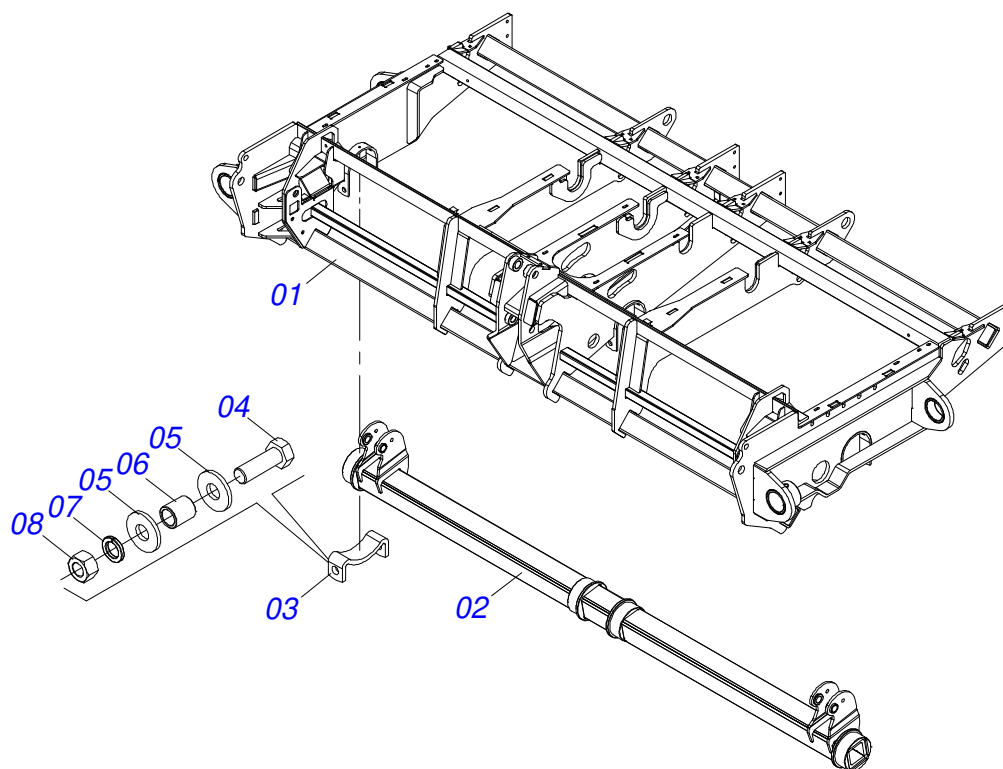


Item	Code	Description	See page	QT
01	0521066916	CENTRAL CHASSIS		01
02	0521013199	LOWER BEARING SEMI		04
03	0503010899	5/8 UNC X 2.1/4 BOLT		08
04	0501012140	FLAT WASHER		16
05	0531013922	0.6" X 0.8" X 1" SLEEVE		08
06	0503011445	SPRING WASHER		08
07	0503010013	5/8 NUT		08
08	0521063878	ARTICLE AXLE ROLLED		01

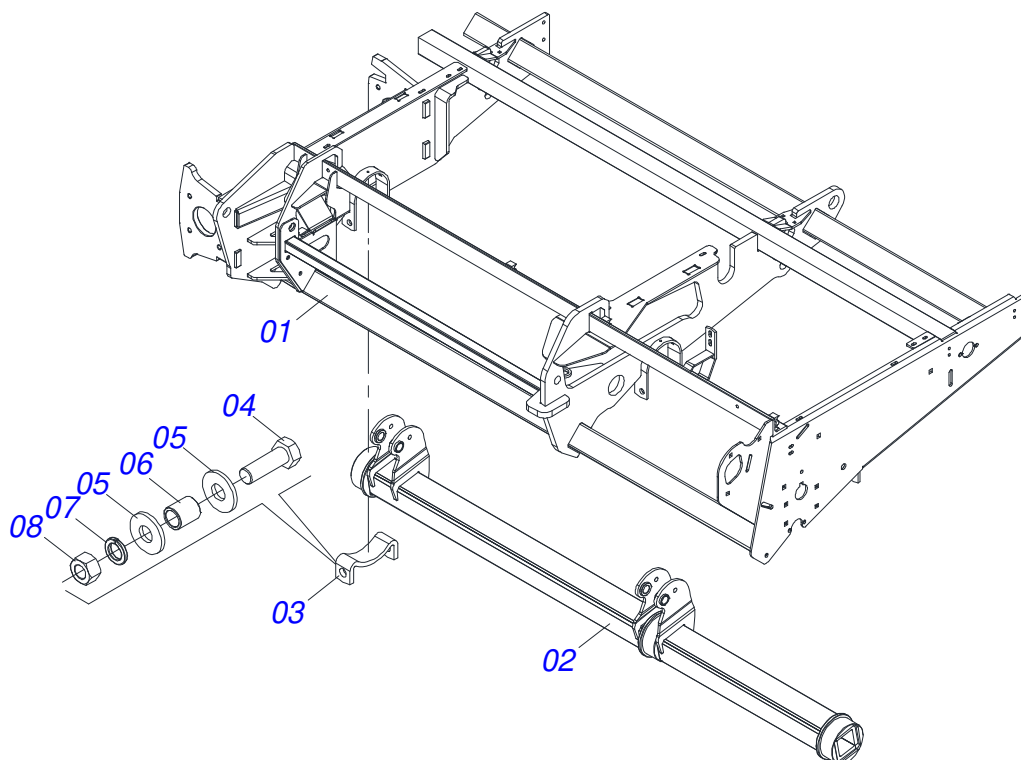


Item	Code	Description	See page	QT
01	0521063885	LEFT FRAME		01
02	0521063873	ARTICLES AXLE LEFT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

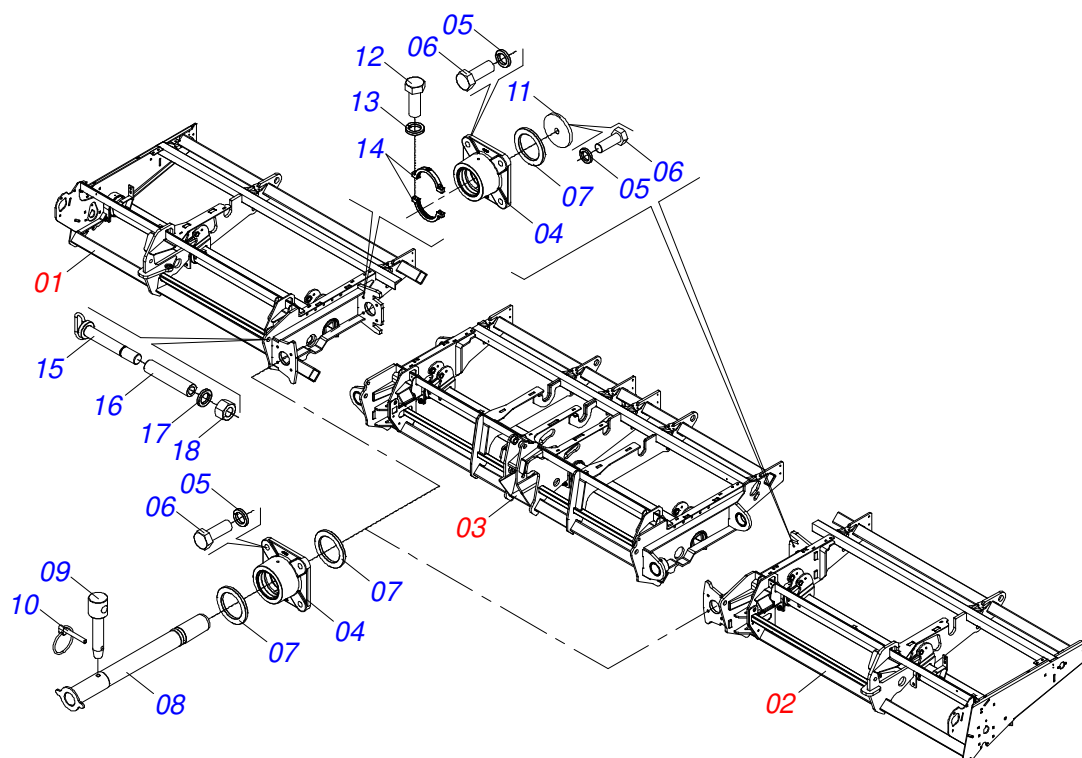

Item	Code	Description	See page	QT
01	0521053773	RIGHT FRAME WITH WHEELED AXLE 7285	12	01
02	0521053772	LEFT FRAME WITH WHEELED AXLE 7285	13	01
03	0511053190	CENTRAL FRAME WITH WHEELED AXLE 6450/7285/7450/8460	6	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
13	0503011444	SPRING WASHER		04
14	0502012698	CLAMP		04
15	0521063003	LOCK PIN		02
16	0571010969	LOCK SLEEVE FRAME		02
17	0503013627	1.1/2 SPRING WASHER		02
18	0501010110	1.1/2" NUT		02

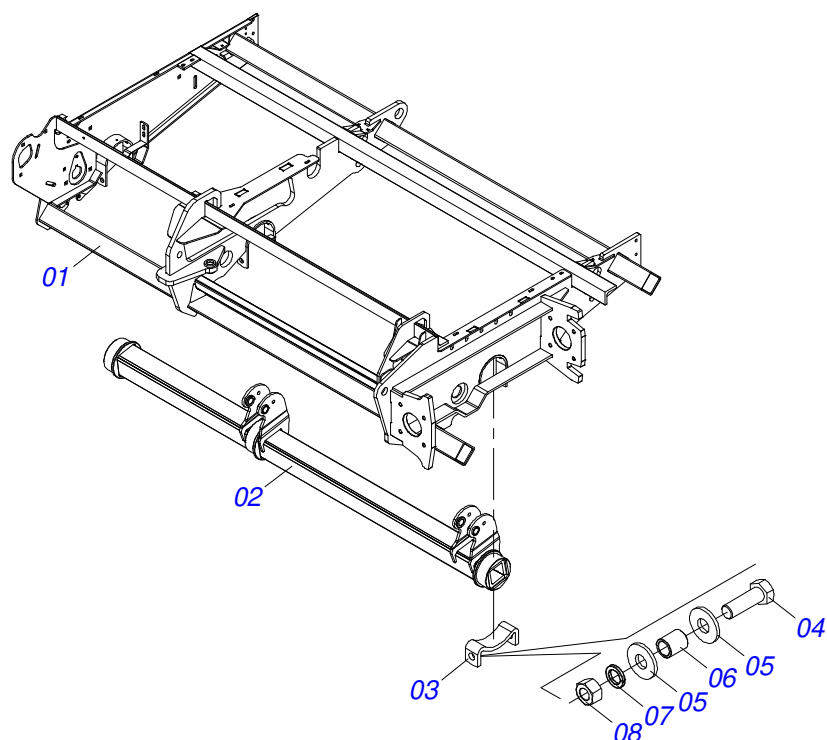


Item	Code	Description	See page	QT
01	0521069053	RIGHT FRAME		01
02	0521069057	RIGHT ARTICULATED AXLE		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

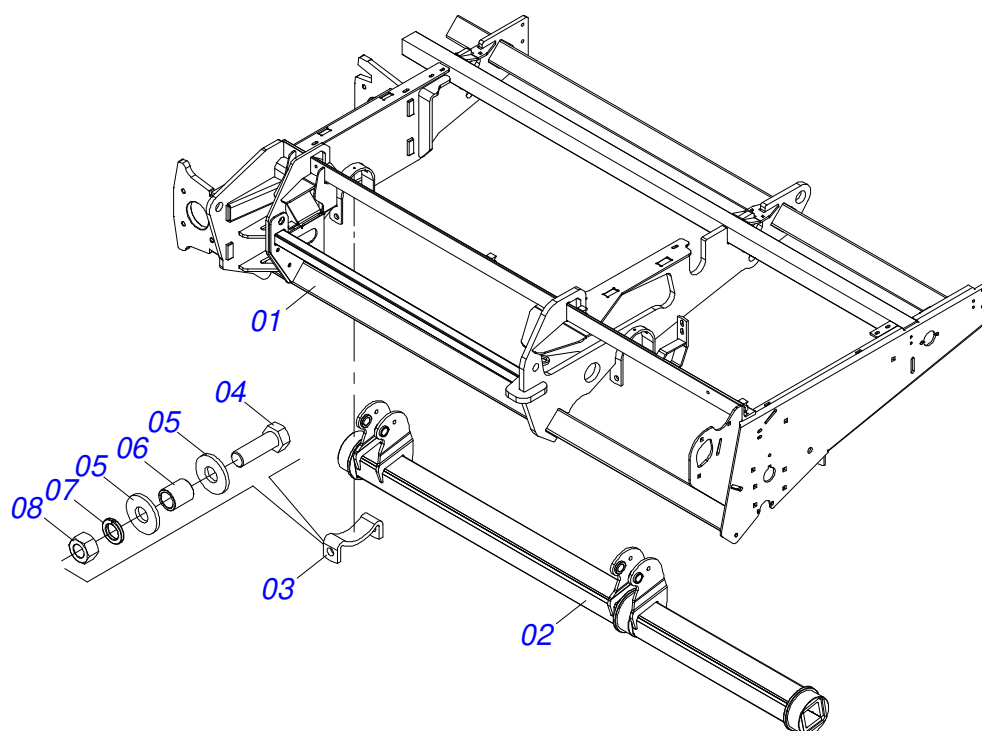


Item	Code	Description	See page	QT
01	0521069054	LEFT FRAME		01
02	0521069058	LEFT ARTICULATED AXLE		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

PST JOINT FRAME


0511053196

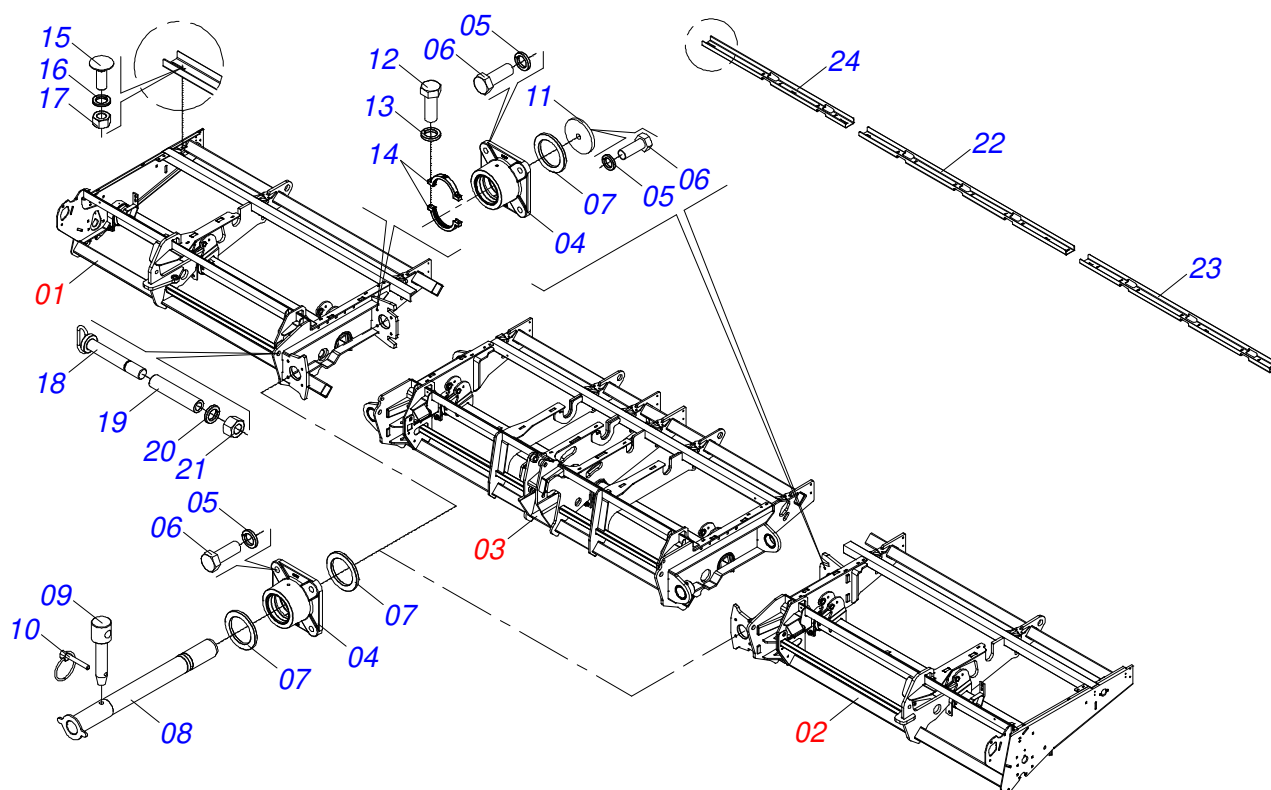


Item	Code	Description	See page	QT
01	0511053188	RIGHT FRAME WITH WHEELED AXLE 7450	15	01
02	0511053189	LEFT FRAME WITH WHEELED AXLE 7450	16	01
03	0511053190	CENTRAL FRAME WITH WHEELED AXLE 6		01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
13	0503011444	SPRING WASHER		04
14	0502012698	CLAMP		04
15	0501011643	3/8 X 1" BOLT		14
16	0503010025	3/8 SPRING WASHER		14
17	0503010026	3/8" NUT		14
18	0521063003	LOCK PIN		02
19	0571010969	LOCK SLEEVE FRAME		02
20	0503013627	1.1/2 SPRING WASHER		02
21	0501010110	1.1/2" NUT		02
22	0581018018	TROUGH 24 X 50 X 1255		02
23	0581018019	TROUGH 24 X 50 X 1070		02
24	0581015857	GUTTER 24 X 50 X 1080		02

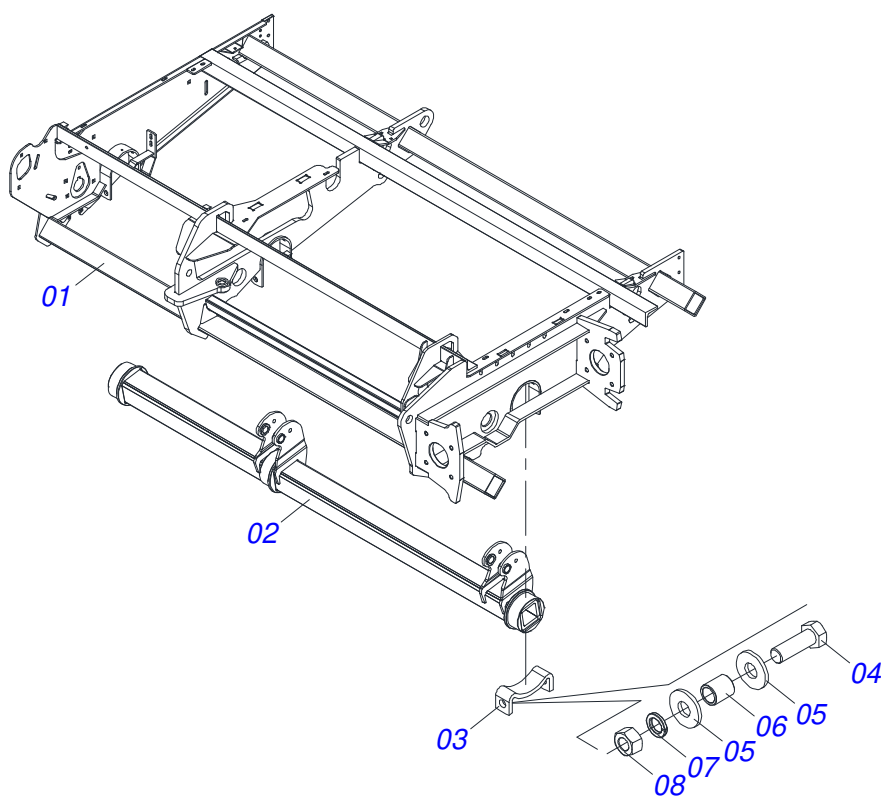


Item	Code	Description	See page	QT
01	0521064009	RIGHT FRAME PST TRIO 15		01
02	0521064023	ARTICLES AXLE RIGHT ROLLED		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

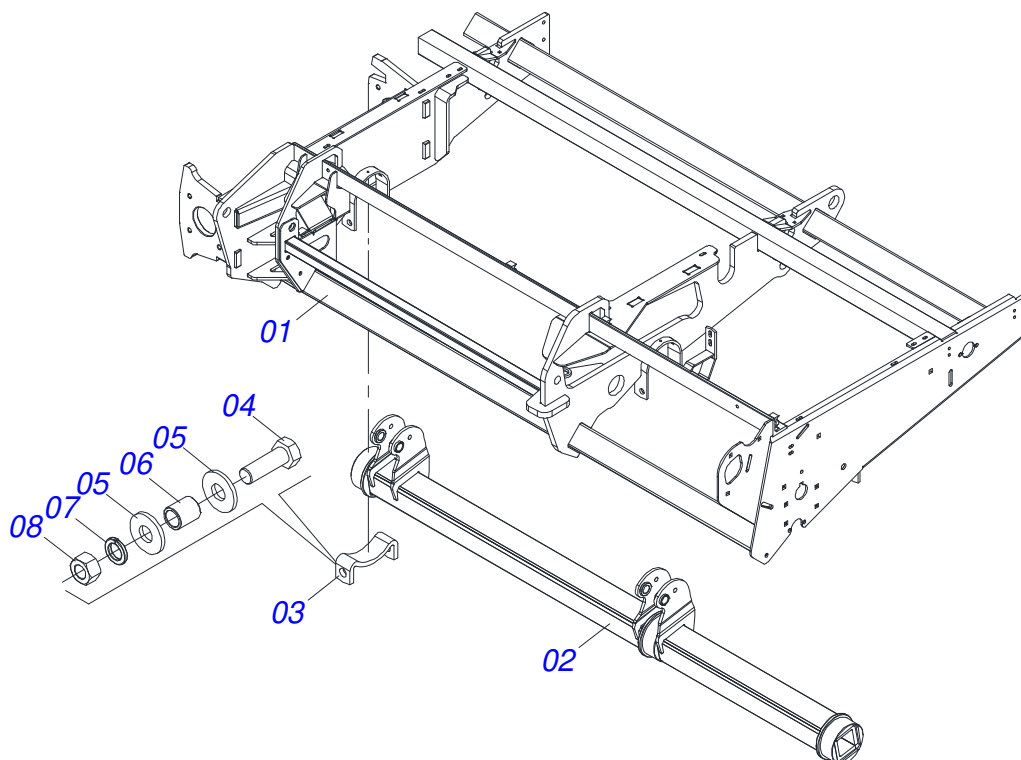


Item	Code	Description	See page	QT
01	0521064010	LEFT FRAME PST TRIO 15		01
02	0521064021	ARTICLES AXLE LEFT ROLLED		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

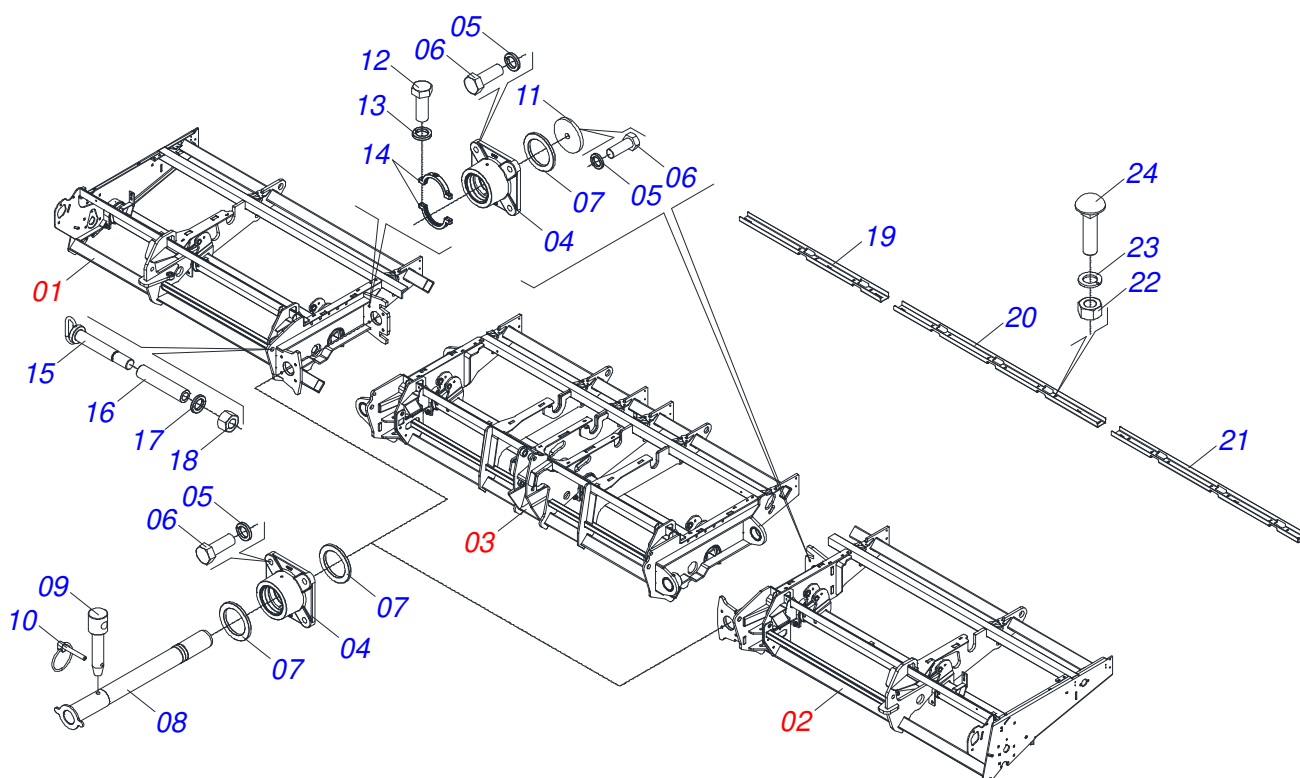


Item	Code	Description	See page	QT
01	0511053766	RIGHT FRAME WITH WHEELED AXLE 7960/8160	18	01
02	0511053767	LEFT FRAME WITH WHEELED AXLE 7960/8160	19	01
03	0511053768	CENTRAL FRAME WITH WHEELED AXLE 5850/7960	20	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
13	0503011444	SPRING WASHER		04
14	0502012698	CLAMP		04
15	0521063003	LOCK PIN		02
16	0571010969	LOCK SLEEVE FRAME		02
17	0503013627	1.1/2 SPRING WASHER		02
18	0501010110	1.1/2" NUT		02
19	0591011141	24 X 50 X 1050 GUTTER		02
20	0591011142	CHANNEL 24 X 50 X 1570		02
21	0591011140	24 X 50 X 1010 GUTTER		02
22	0503010026	3/8" NUT		14
23	0503010025	3/8 SPRING WASHER		14
24	0501011643	3/8 X 1"BOLT		14

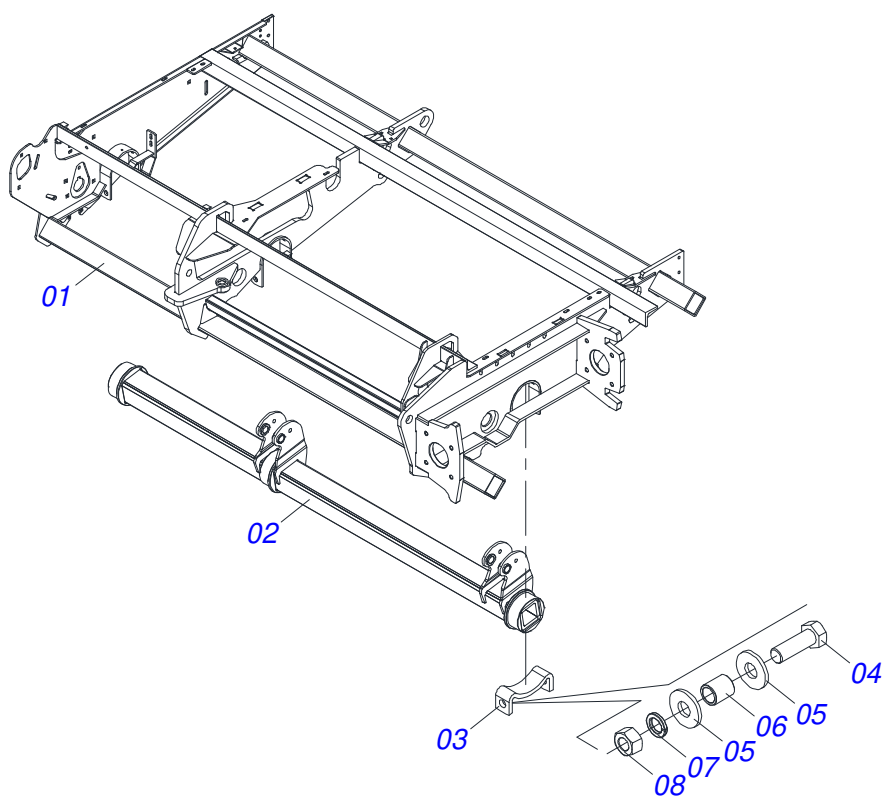


Item	Code	Description	See page	QT
01	0521064287	FRAME BRACKET		01
02	0521064284	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

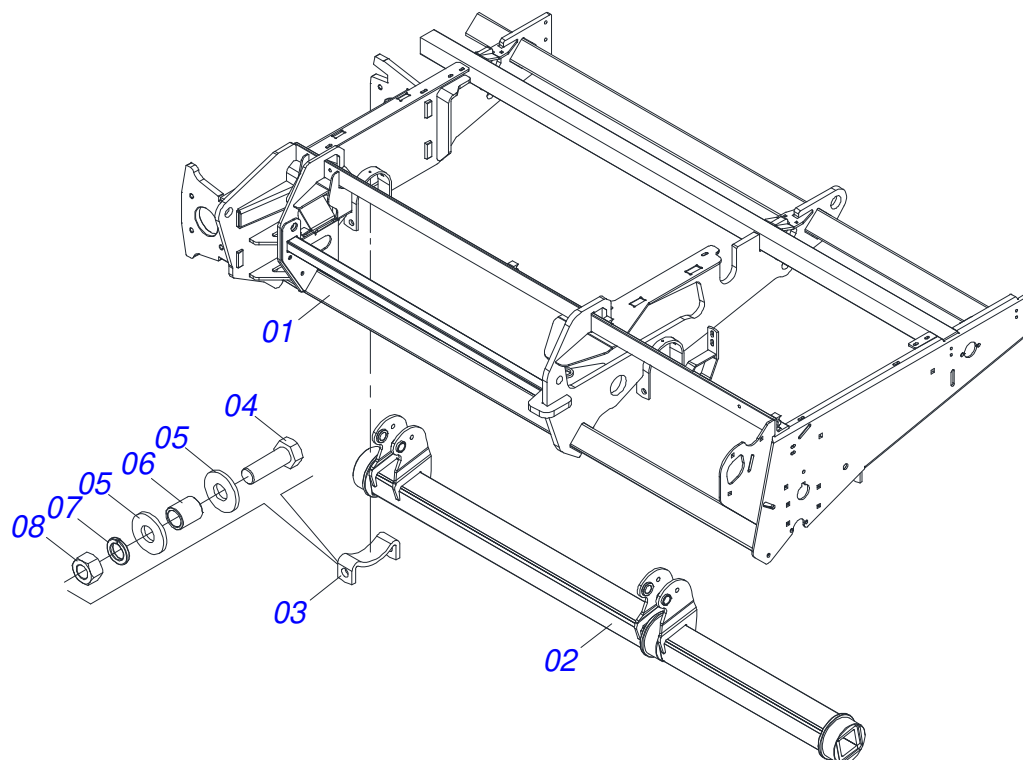


Item	Code	Description	See page	QT
01	0521064286	FRAME BRACKET		01
02	0521064283	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

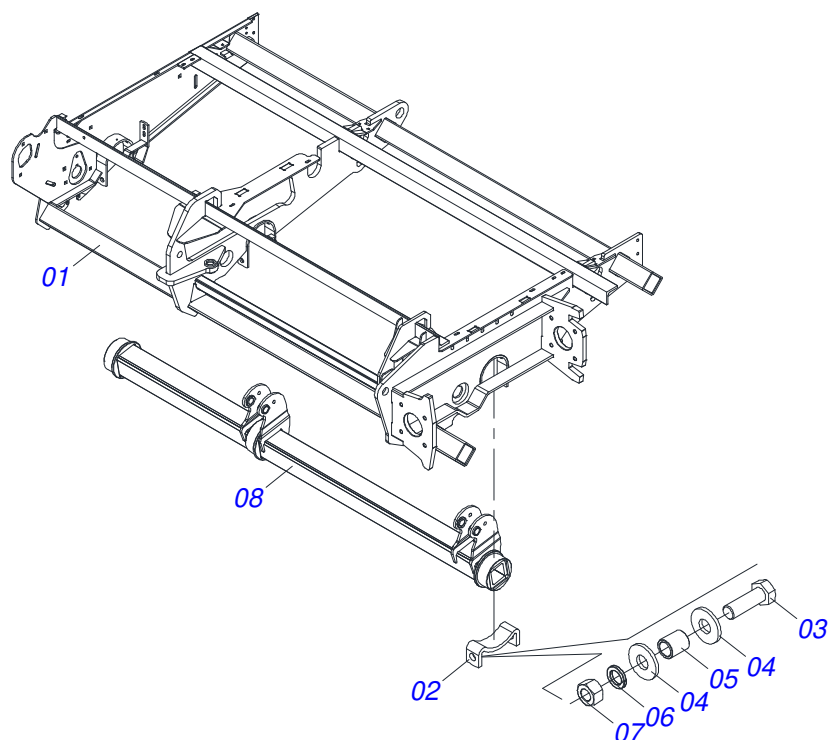


Item	Code	Description	See page	QT
01	0521064281	CENTRAL FRONT FRAME		01
02	0521013199	LOWER BEARING SEMI		04
03	0503010899	5/8 UNC X 2.1/4 BOLT		08
04	0501012140	FLAT WASHER		16
05	0531013922	0.6" X 0.8" X 1" SLEEVE		08
06	0503011445	SPRING WASHER		08
07	0503010013	5/8 NUT		08
08	0521064282	CARRYING-WHEELS PIVOT SHAFT		01

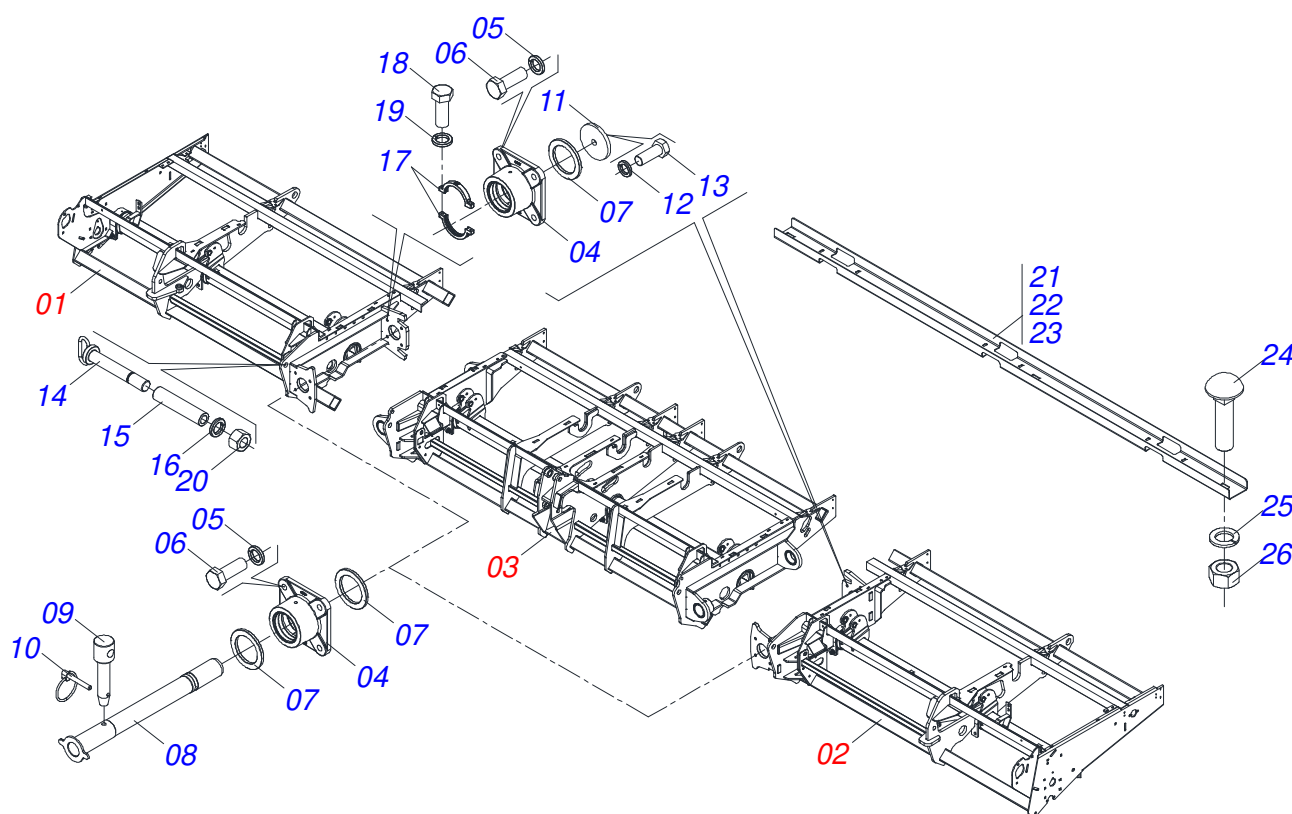


Item	Code	Description	See page	QT
01	0511056312	RIGHT FRAME WITH WHEELED AXLE 8460	22	01
02	0511056313	LEFT FRAME WITH WHEELED AXLE 8460	23	01
03	0511053190	CENTRAL FRAME WITH WHEELED AXLE 6450/7285/7450/8460	6	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		16
06	0501010098	3/4" UNC BOLT		16
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503011442	3/4" SPRING WASHER		02
13	0501010098	3/4" UNC BOLT		02
14	0521063003	LOCK PIN		02
15	0571010969	LOCK SLEEVE FRAME		02
16	0503013627	1.1/2 SPRING WASHER		02
17	0502012698	CLAMP		04
18	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
19	0503011444	SPRING WASHER		04
20	0501010110	1.1/2" NUT		02
21	0581017979	GUTTER		02
22	0581017935	GUTTER		02
23	0581018018	TROUGH 24 X 50 X 1255		02
24	0501011643	3/8 X 1" BOLT		12
25	0503010025	3/8 SPRING WASHER		12
26	0503010026	3/8" NUT		12

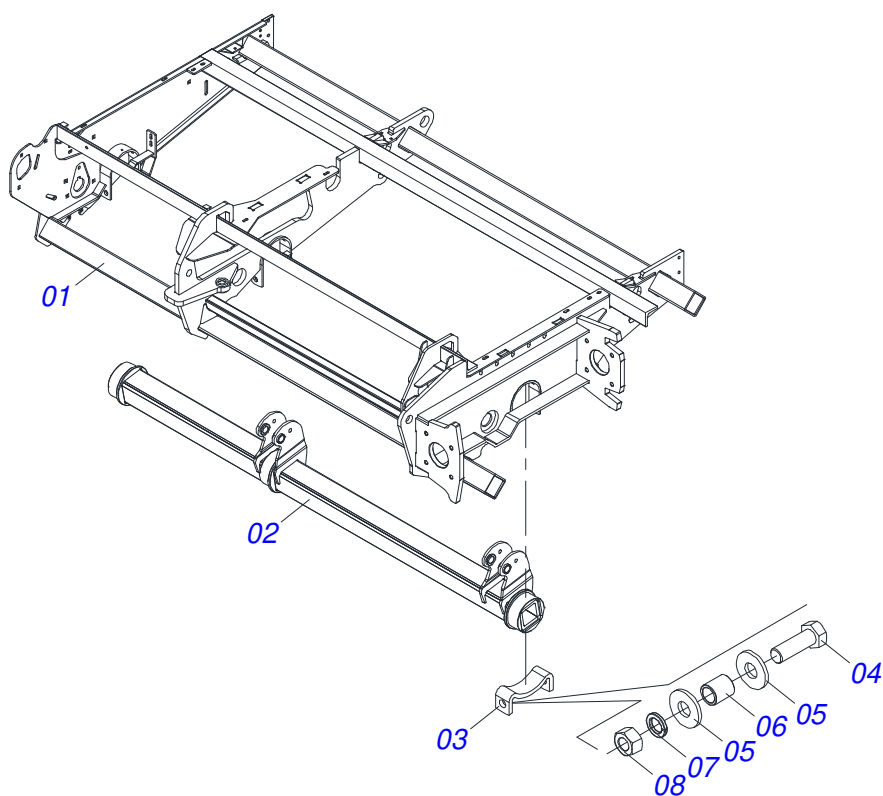


Item	Code	Description	See page	QT
01	0521065394	RIGHT CHASSIS		01
02	0521065222	SIDE ROD JOINT AXLE		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

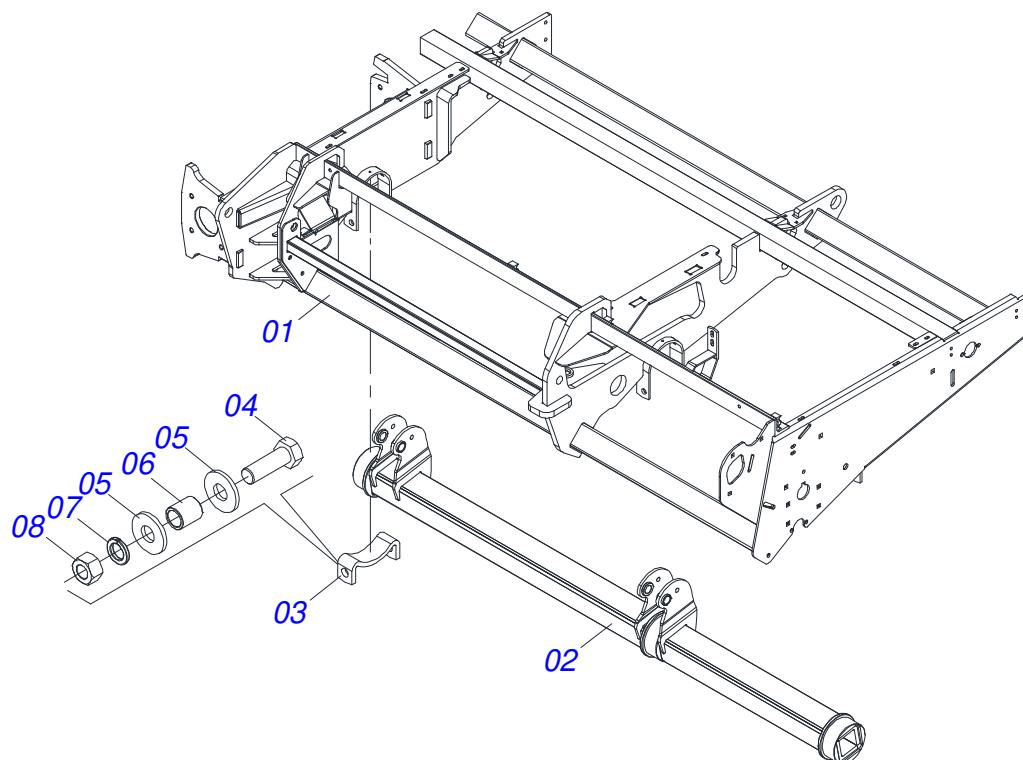


Item	Code	Description	See page	QT
01	0521065395	LEFT CHASSIS		01
02	0521065223	SHAFT SHAFT SHAFT SIDE SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

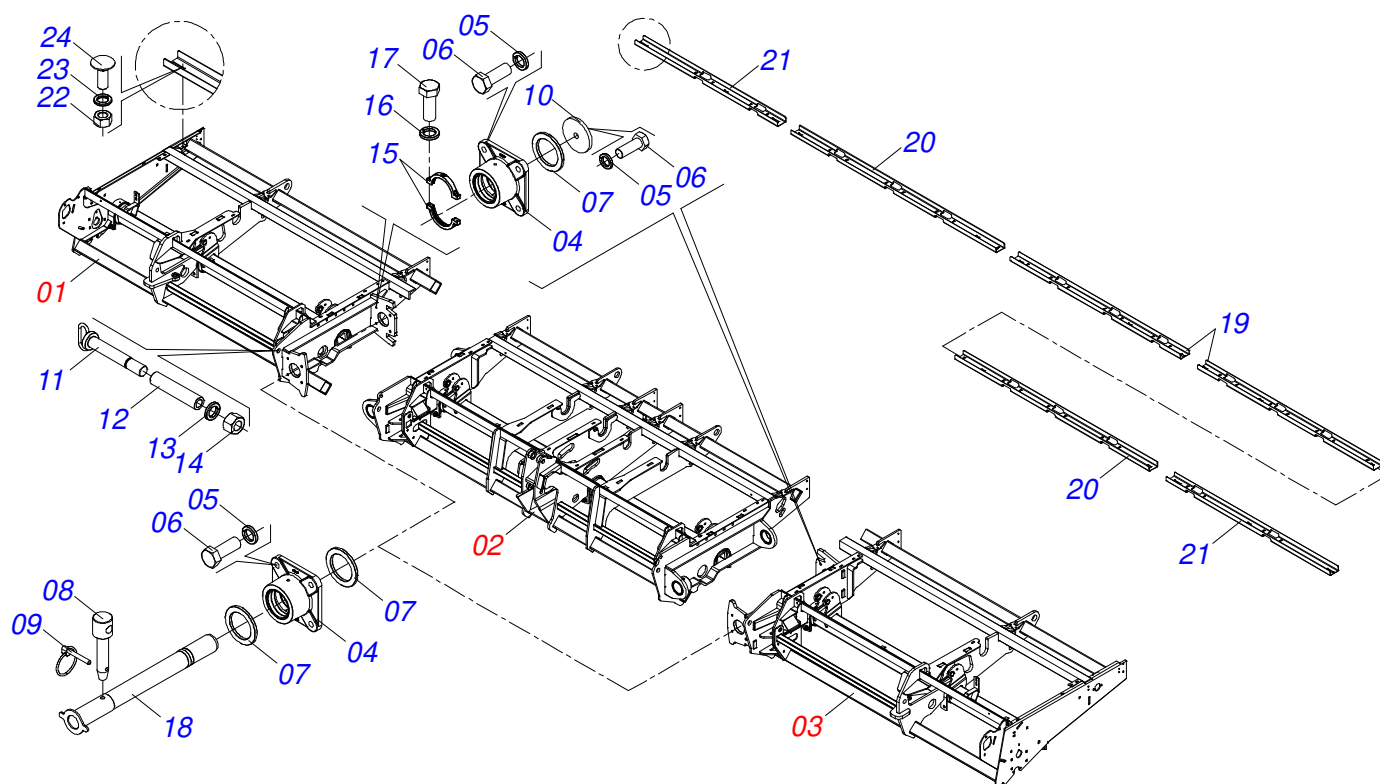


Item	Code	Description	See page	QT
01	0521052758	FRAME RIGHT WITH AXIS 8960/9460	25	01
02	0521052761	FRAME CENTRAL WITH AXIS 8960/9960	26	01
03	0521052759	LEFT FRAME WITH AXIS 8960/9460	27	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0571013510	LOCK AXLE		02
09	0503030085	LOCK PIN		02
10	0571010095	FLAT WASHER		02
11	0521063003	LOCK PIN		02
12	0571010969	LOCK SLEEVE FRAME		02
13	0503013627	1.1/2 SPRING WASHER		02
14	0501010110	1.1/2" NUT		02
15	0502012698	CLAMP		04
16	0503011444	SPRING WASHER		04
17	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
18	0521064842	PIVOT SHAFT		02
19	0581017979	GUTTER		02
20	0581017935	GUTTER		02
21	0581018025	TROUGH 24 X 50 X 1500		02
22	0503010026	3/8" NUT		14
23	0503010025	3/8 SPRING WASHER		14
24	0501011643	3/8 X 1" BOLT		14

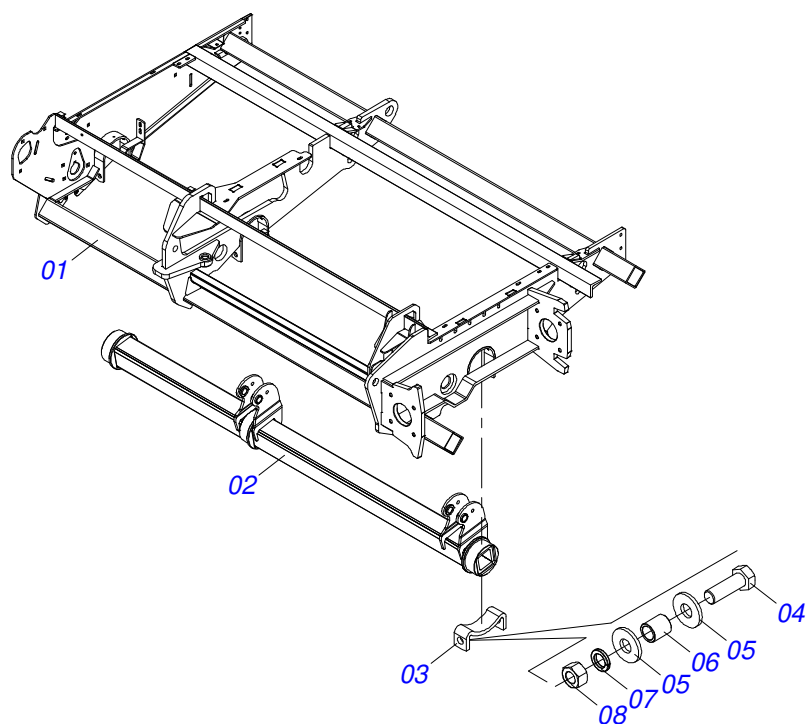


Item	Code	Description	See page	QT
01	0521068631	RIGHT FRAME		01
02	0521068629	ARTICLES AXLE RIGHT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

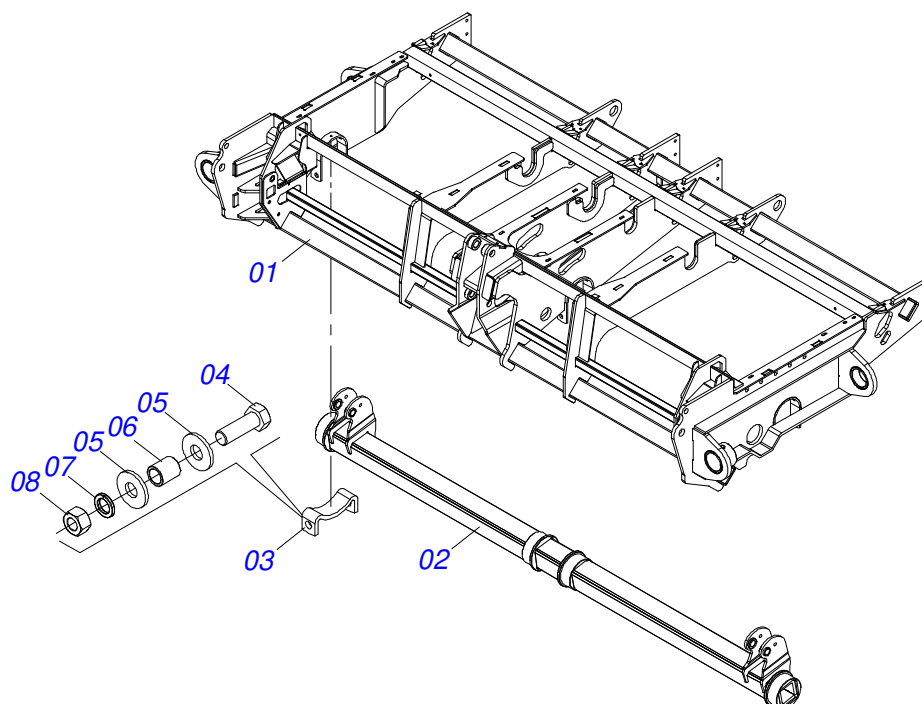


Item	Code	Description	See page	QT
01	0521068633	FRAME CENTRAL		01
02	0521068634	ARTICULATED AXLE		01
03	0521013199	LOWER BEARING SEMI		04
04	0503010899	5/8 UNC X 2.1/4 BOLT		08
05	0501012140	FLAT WASHER		16
06	0531013922	0.6" X 0.8" X 1" SLEEVE		08
07	0503011445	SPRING WASHER		08
08	0503010013	5/8 NUT		08

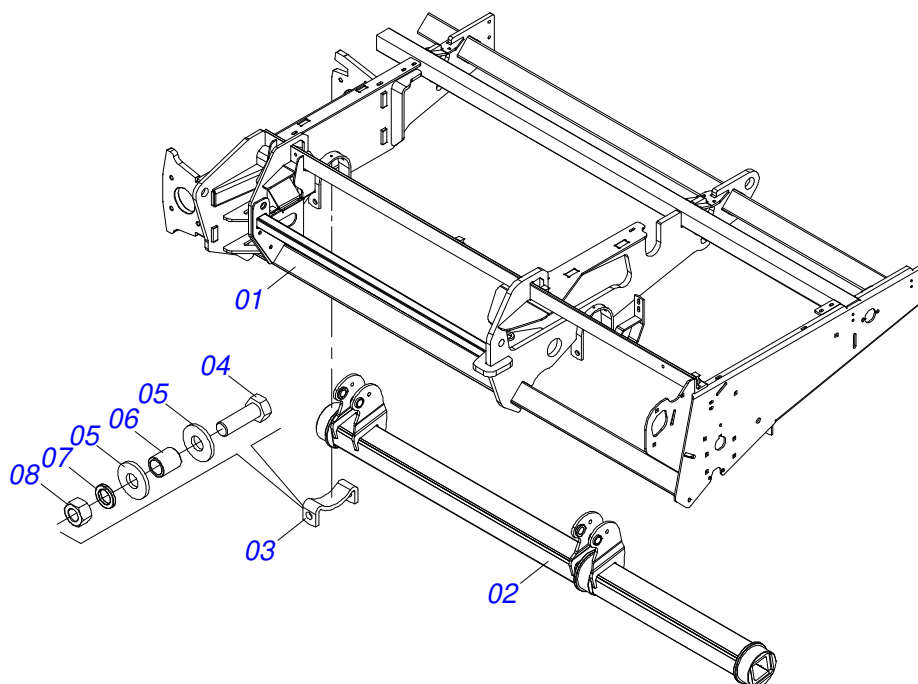


Item	Code	Description	See page	QT
01	0521068632	LEFT FRAME		01
02	0521068630	ARTICLES AXLE LEFT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

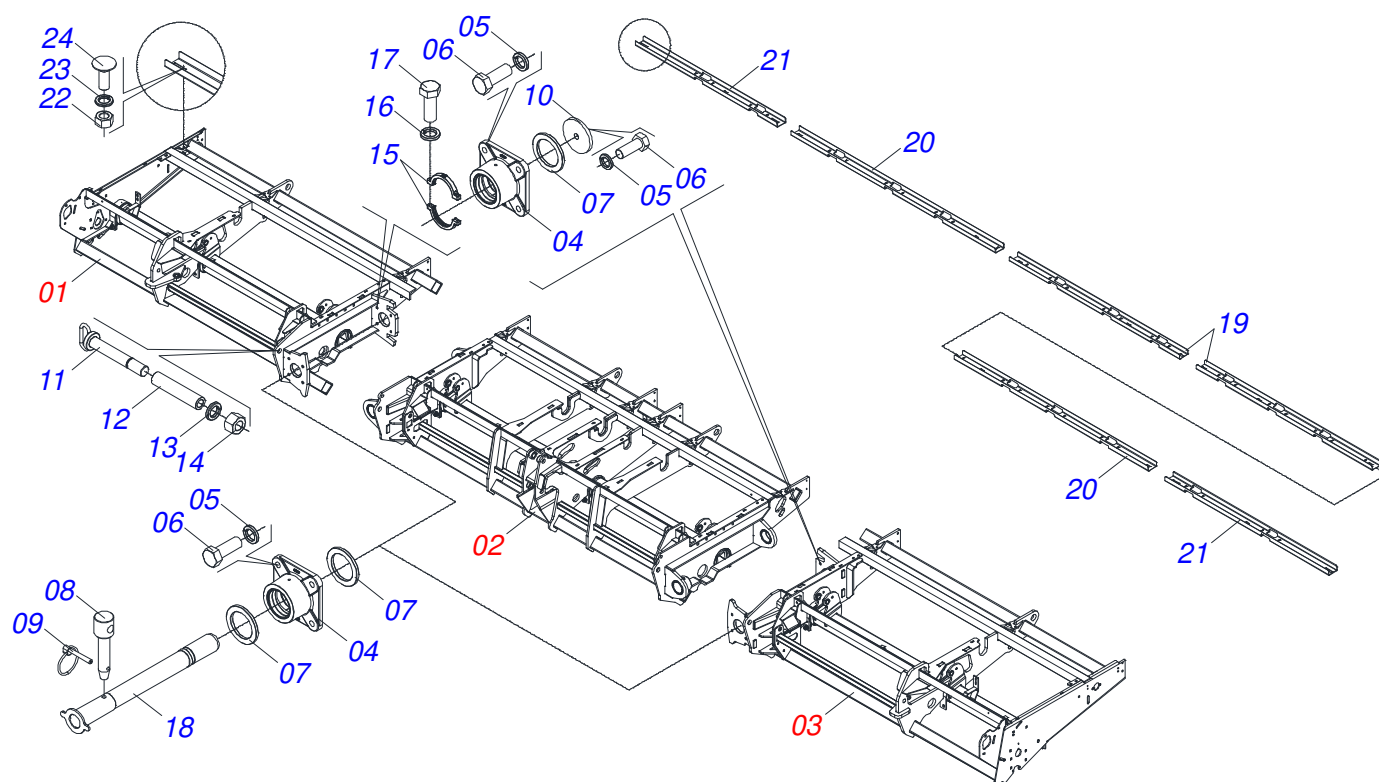


Item	Code	Description	See page	QT
01	0521052758	FRAME RIGHT WITH AXIS 8960/9460	25	01
02	0521052762	FRAME CENTRAL WITH AXIS 9460/10460	29	01
03	0521052759	LEFT FRAME WITH AXIS 8960/9460	27	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0571013510	LOCK AXLE		02
09	0503030085	LOCK PIN		02
10	0571010095	FLAT WASHER		02
11	0521063003	LOCK PIN		02
12	0571010969	LOCK SLEEVE FRAME		02
13	0503013627	1.1/2 SPRING WASHER		02
14	0501010110	1.1/2" NUT		02
15	0502012698	CLAMP		04
16	0503011444	SPRING WASHER		04
17	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
18	0521064842	PIVOT SHAFT		02
19	0581017979	GUTTER		02
20	0581017935	GUTTER		02
21	0581017978	CENTRAL TRACK		02
22	0503010026	3/8" NUT		14
23	0503010025	3/8 SPRING WASHER		14
24	0501011643	3/8 X 1" BOLT		14

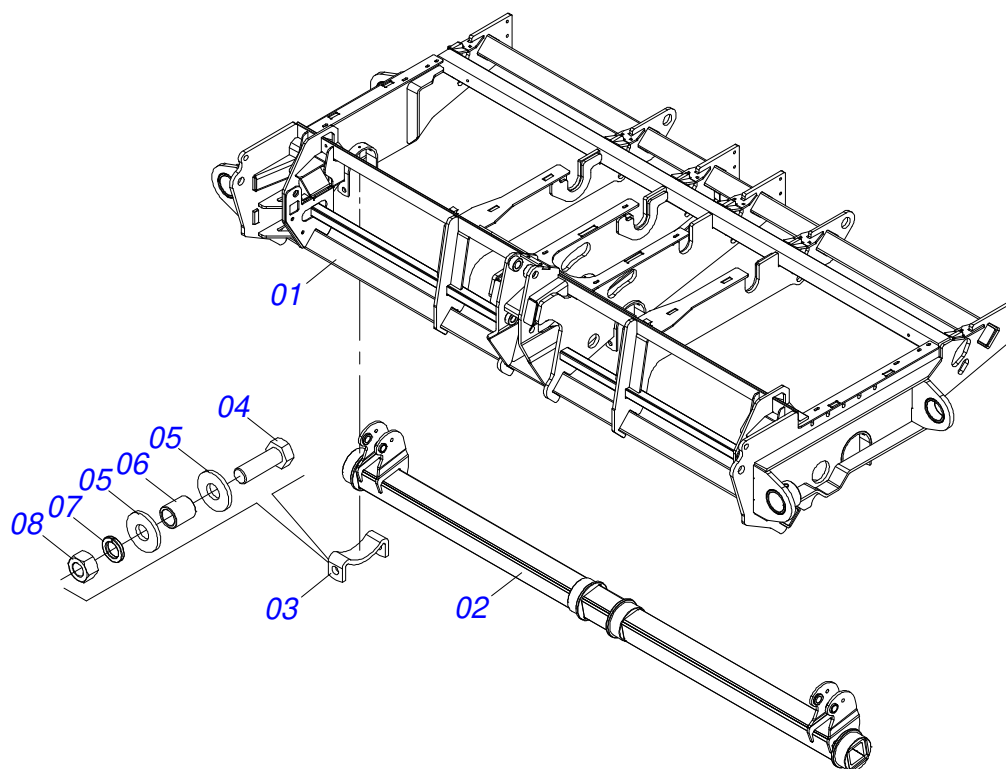


Item	Code	Description	See page	QT
01	0521068635	CENTRAL CHASSIS		01
02	0521068637	ARTICLE AXLE ROLLED		01
03	0521013199	LOWER BEARING SEMI		04
04	0503010899	5/8 UNC X 2.1/4 BOLT		08
05	0501012140	FLAT WASHER		16
06	0531013922	0.6" X 0.8" X 1" SLEEVE		08
07	0503011445	SPRING WASHER		08
08	0503010013	5/8 NUT		08

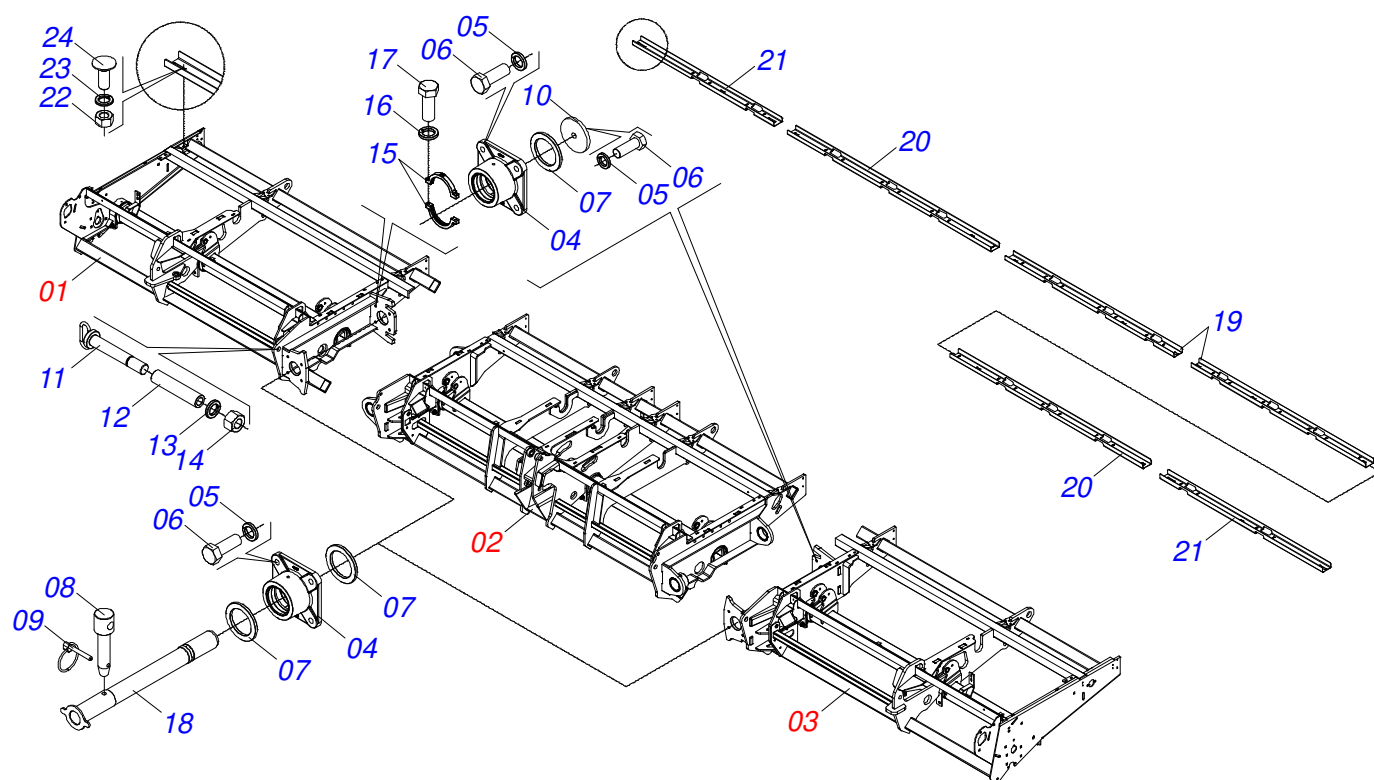


Item	Code	Description	See page	QT
01	0521052767	RIGHT FRAME WITH WHEELED AXLE 9960/10460	31	01
02	0521052761	FRAME CENTRAL WITH AXIS 8960/9960	26	01
03	0521052766	LEFT FRAME WITH WHEELED AXLE 9960/10460	32	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0571013510	LOCK AXLE		02
09	0503030085	LOCK PIN		02
10	0571010095	FLAT WASHER		02
11	0521063003	LOCK PIN		02
12	0571010969	LOCK SLEEVE FRAME		02
13	0503013627	1.1/2 SPRING WASHER		02
14	0501010110	1.1/2" NUT		02
15	0502012698	CLAMP		04
16	0503011444	SPRING WASHER		04
17	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
18	0521064842	PIVOT SHAFT		02
19	0581017935	GUTTER		02
20	0581017750	1576 GUTTER		02
21	0581017933	155 GUTTER		02
22	0503010026	3/8" NUT		12
23	0503010025	3/8 SPRING WASHER		12
24	0501011643	3/8 X 1" BOLT		12

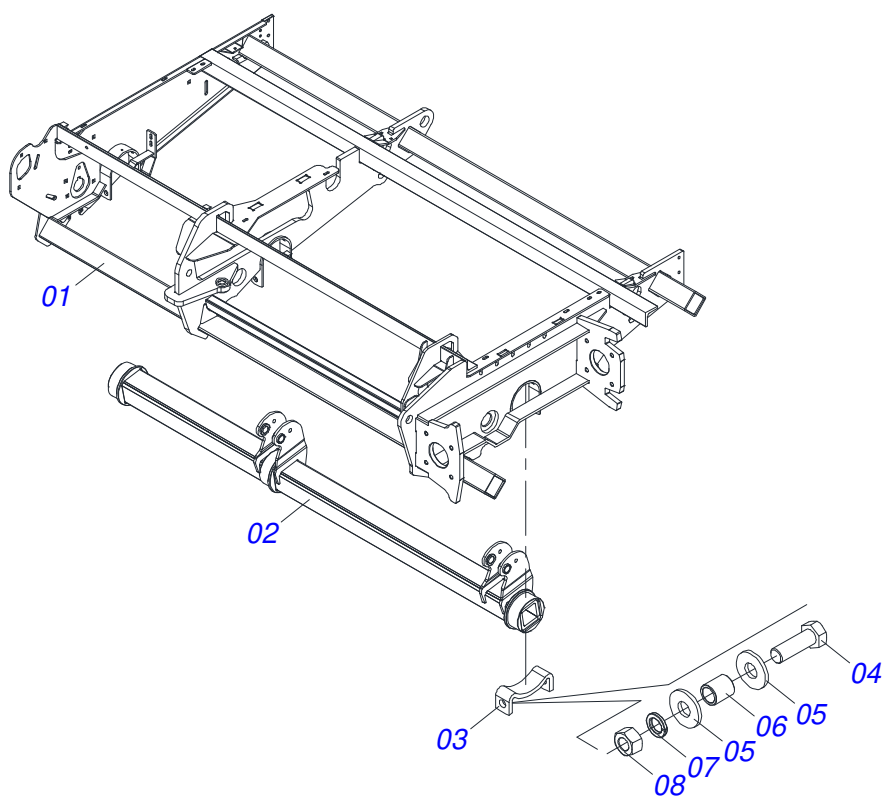


Item	Code	Description	See page	QT
01	0521068641	21 E 500 RH FRAME		01
02	0521068642	RH PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

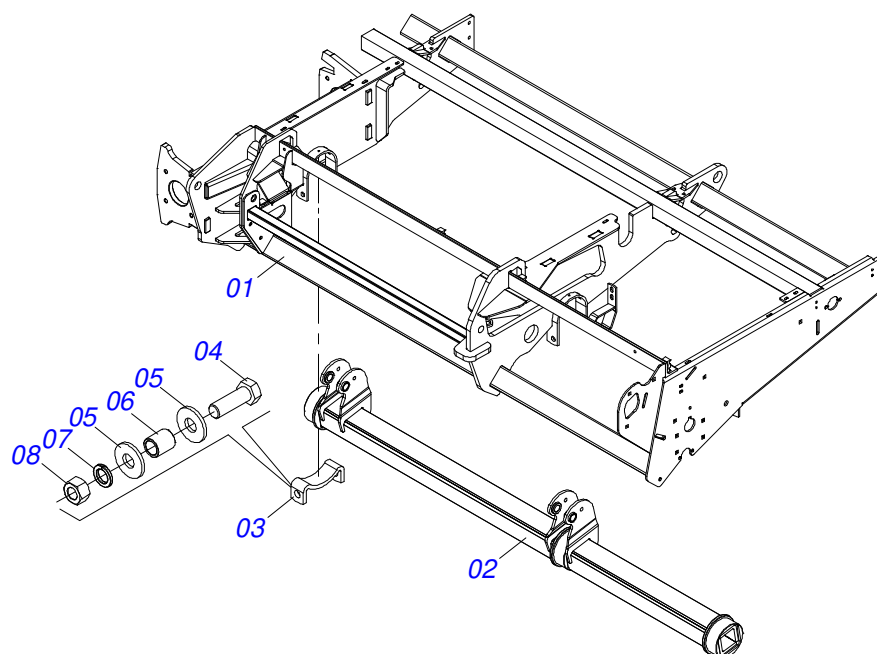


Item	Code	Description	See page	QT
01	0521068639	LEFT FRAME		01
02	0521068640	LH PIVOT SHAFT WHEEL		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8 UNC X 2.1/4 BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8 NUT		04

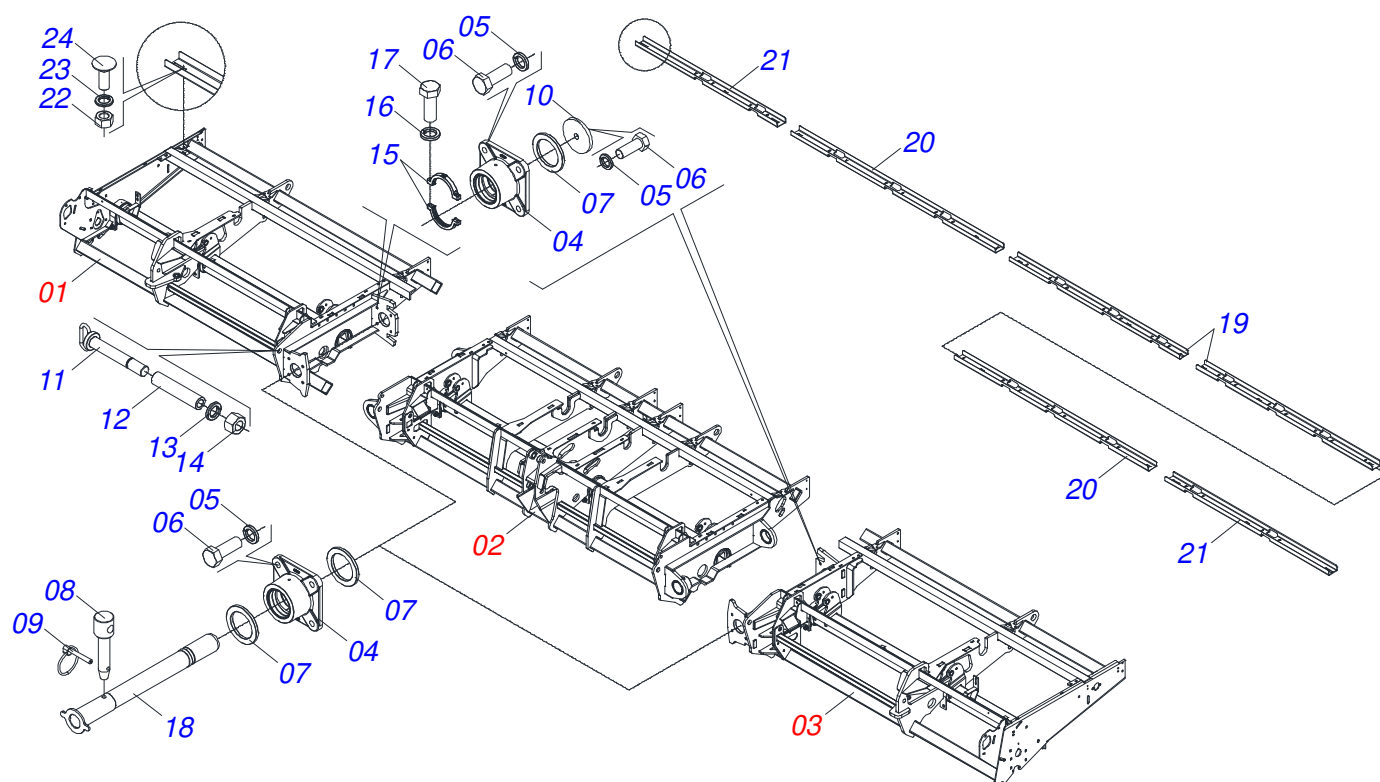


Item	Code	Description	See page	QT
01	0521052767	RIGHT FRAME WITH WHEELED AXLE 9960/10460	31	01
02	0521052762	FRAME CENTRAL WITH AXIS 9460/10460	29	01
03	0521052766	LEFT FRAME WITH WHEELED AXLE 9960/10460	32	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0571013510	LOCK AXLE		02
09	0503030085	LOCK PIN		02
10	0571010095	FLAT WASHER		02
11	0521063003	LOCK PIN		02
12	0571010969	LOCK SLEEVE FRAME		02
13	0503013627	1.1/2 SPRING WASHER		02
14	0501010110	1.1/2" NUT		02
15	0502012698	CLAMP		04
16	0503011444	SPRING WASHER		04
17	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
18	0521064842	PIVOT SHAFT		02
19	0581018006	GUTTER 1685		02
20	0581018005	1465 GUTTER		02
21	0581017978	CENTRAL TRACK		02
22	0503010026	3/8" NUT		15
23	0503010025	3/8 SPRING WASHER		15
24	0501011643	3/8 X 1" BOLT		15

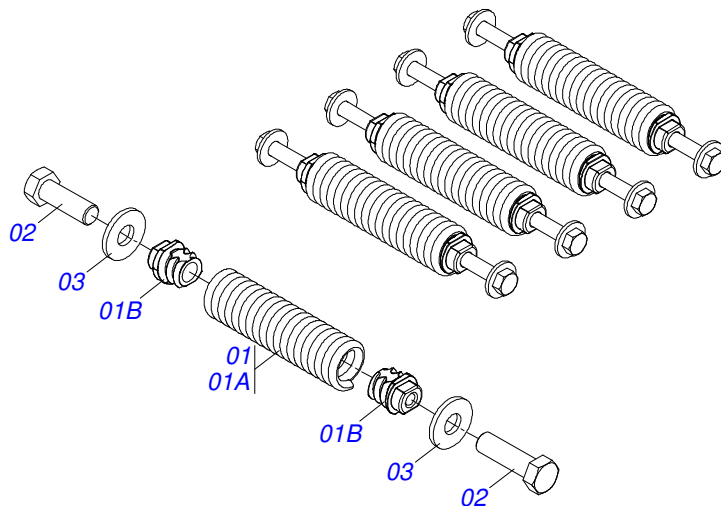


Item	Code	Description	See page	QT
01	0511050681	TRACTION SPRING		05
01A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
01B	0561016062	SPRING HITCH		02
02	0503013030	5/8" X 3.1/4" BOLT		10
03	0501012140	FLAT WASHER		10

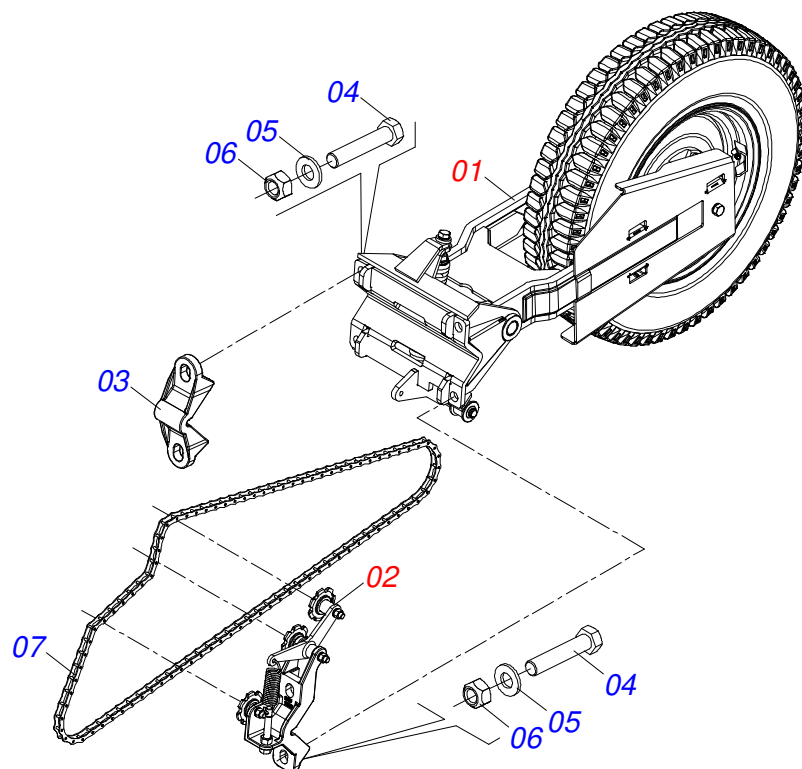


Item	Code	Description	See page	QT
01	0511059262	WHEEL SUPPORT ASSY	36	01
02	0501058240	WHEEL FASTENER WITH TENSIONER	41	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

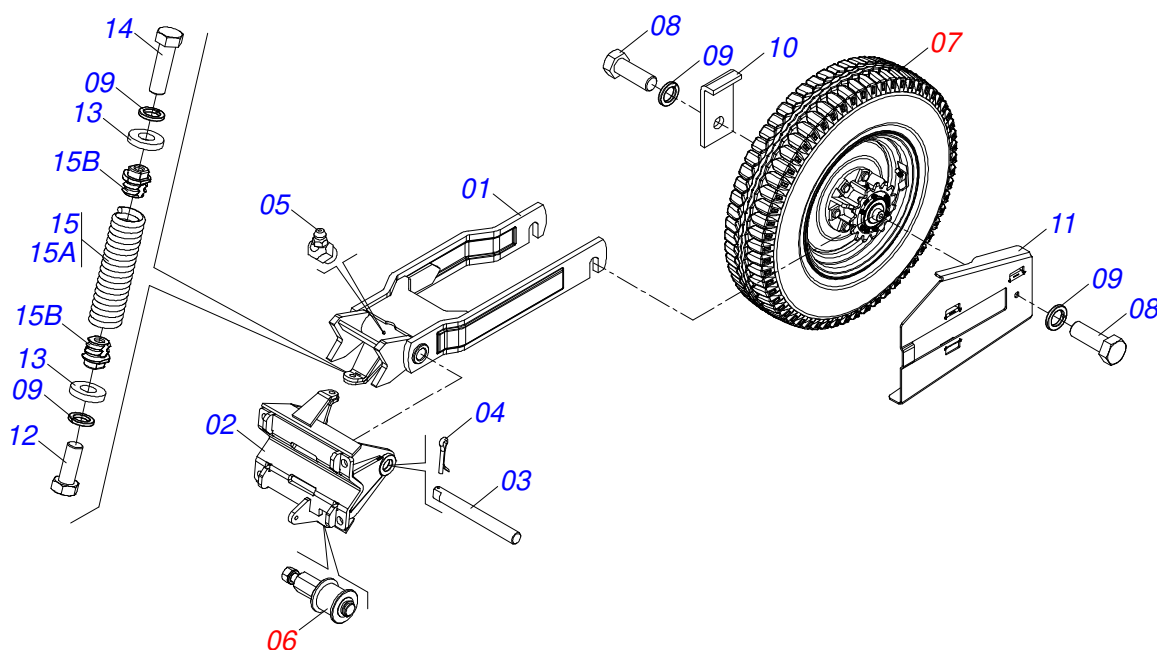


Item	Code	Description	See page	QT
01	0531062422	WHEEL ARM		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" SPLIT PIN		01
05	0503010003	1845 GREASE FITTING		01
06	0501058241	WHEEL SUPPORT CHAIN TENSIONER	37	01
07	0511052770	WHEEL WITH TIRE	38	01
08	0503018981	BOLT		02
09	0503010027	5/8 SPRING WASHER		04
10	0591010589	BODY LOCK WHEEL		01
11	0521069983	WHEEL COVER		01
12	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
13	0551017715	FLAT WASHER		02
14	0503013030	5/8" X 3.1/4" BOLT		01
15	0511050681	TRACTION SPRING		01
15A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
15B	0561016062	SPRING HITCH		02

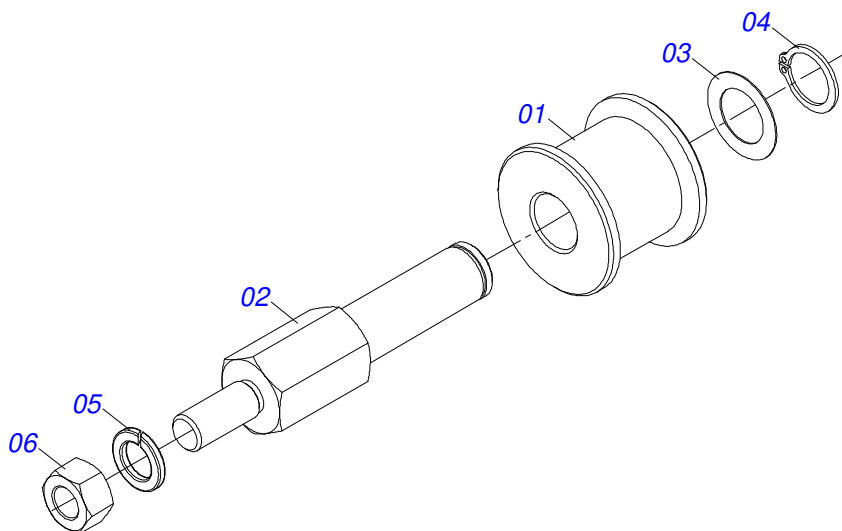


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

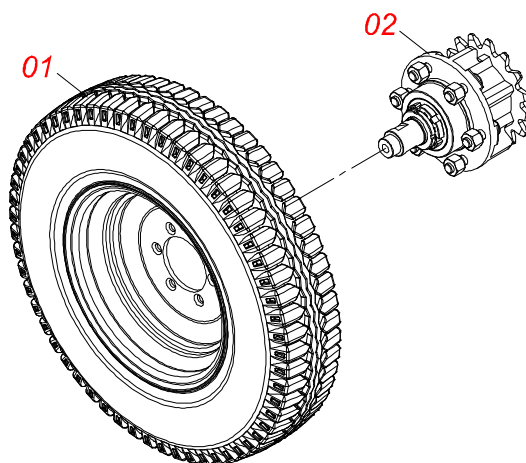


Item	Code	Description	See page	QT
01	0503062159	WHEEL WITH TIRE	39	01
02	0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	40	01

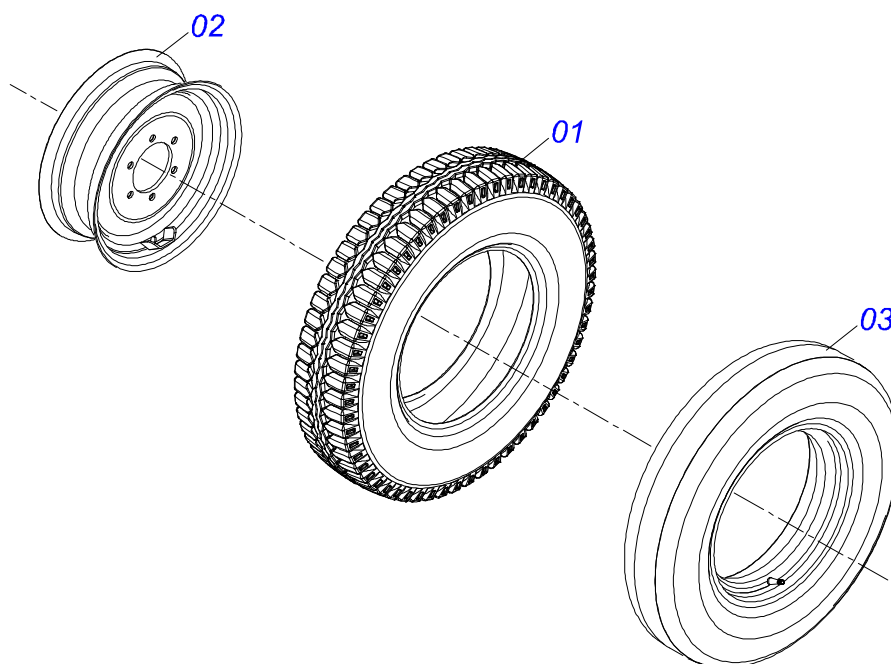


Item	Code	Description	See page	QT
01	0503012113	PLY TIRE		01
02	0503016517	WHEEL EI		01
03	0503010033	7.50 X 16 INNER TIRE		01

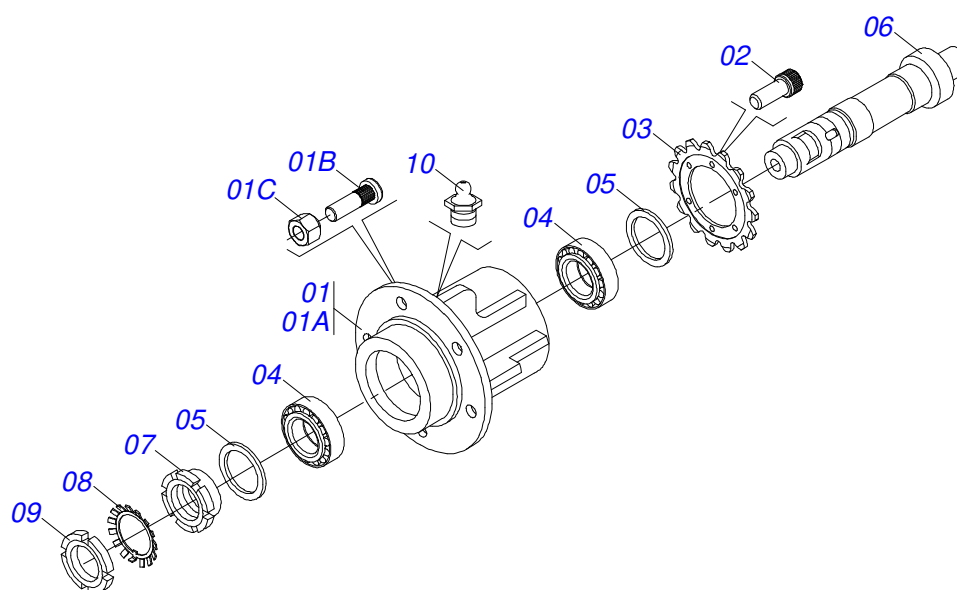


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503012550	5/16" X 3/4" BOLT		06
03	0502011339	15Z GEAR P 1.25"		01
04	0503010328	25590/25523 ROLLER BEARING		02
05	0503010804	00547-B SEAL		02
06	0521012185	TRANSMISSION WHEEL AXLE		01
07	0511015949	LOCK NUT		01
08	0503010329	LOCK WASHER		01
09	0503010330	KM 9 LOCKNUT		01
10	0503010002	1800 GREASE FITTING		01

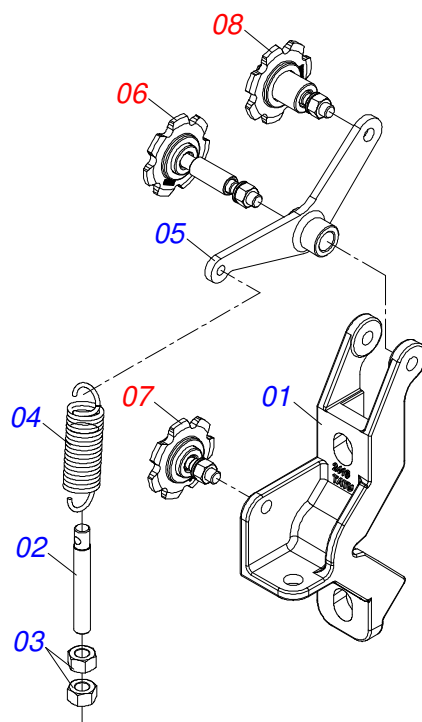


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8 NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	42	01
07	0501058244	WHEEL FIXED CHAIN TENSIONER	43	01
08	0501058242	WHEEL MOBILE CHAIN TENSIONER	44	01

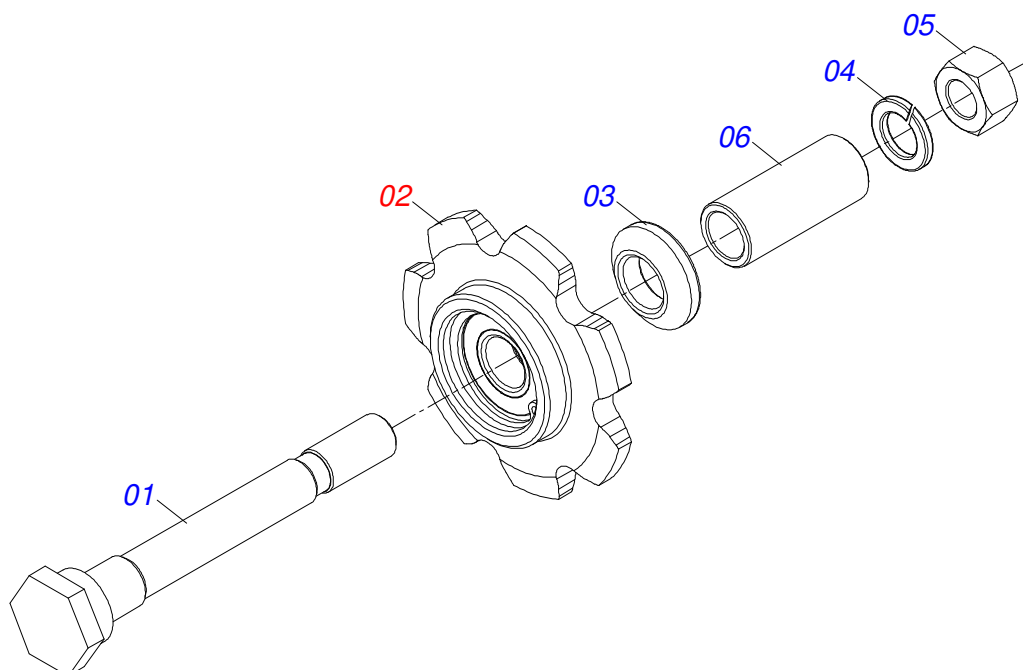


Item	Code	Description	See page	QT
01	0551018245	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0551018239	SLEEVE 19 X 13,50 X 45		01

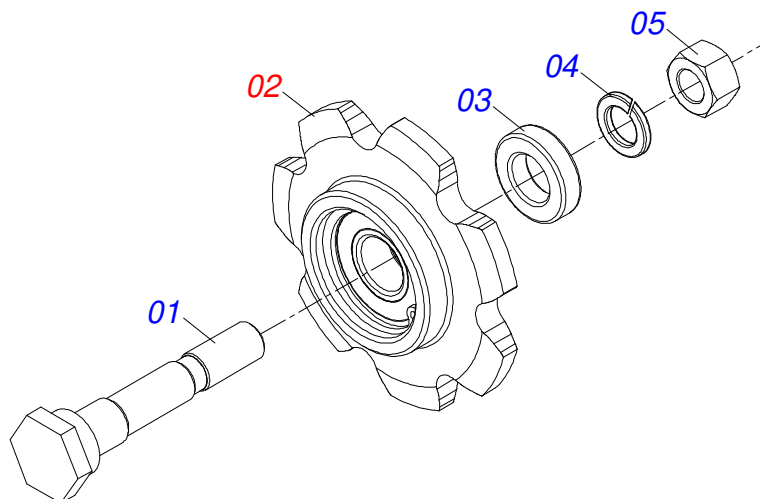


Item	Code	Description	See page	QT
01	0551018252	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

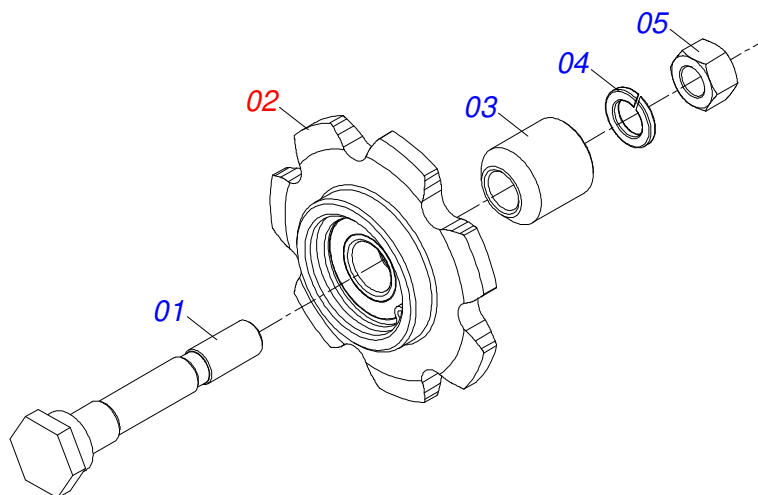


Item	Code	Description	See page	QT
01	0551018244	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0591017923	15,30 X 30 X 32 SLEEVE		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

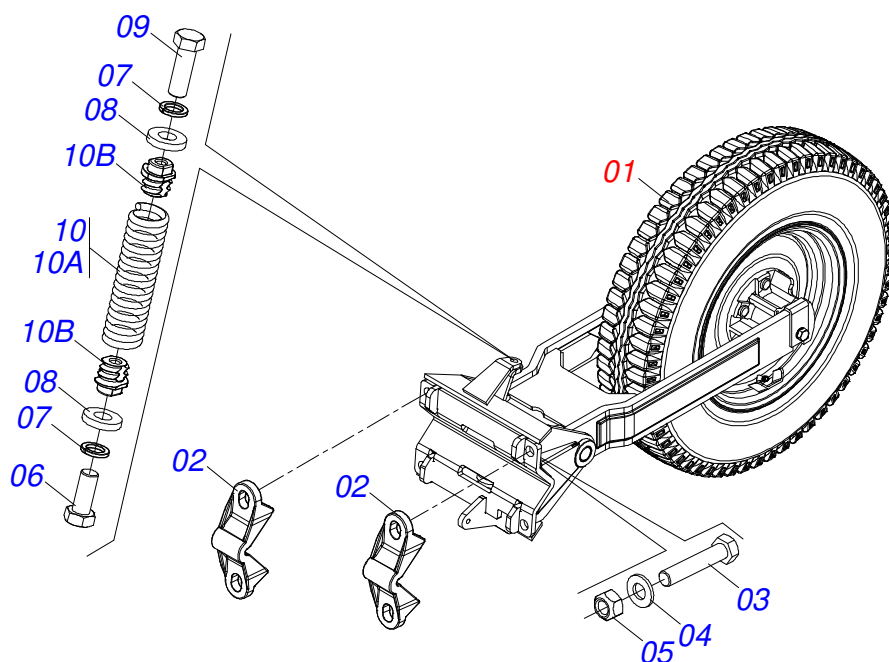


Item	Code	Description	See page	QT
01	0511054336	SUPPORT WHEELED WITHOUT TRANSMISSION	46	01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
03	0503011119	7/8" X 6" BOLT		04
04	0501014251	FLAT WASHER		04
05	0503011254	7/8" HEX SELF ADJUSTING NUT		04
06	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
07	0503010027	5/8 SPRING WASHER		02
08	0551017715	FLAT WASHER		02
09	0503013030	5/8" X 3.1/4" BOLT		01
10	0511050681	TRACTION SPRING		01
10A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
10B	0561016062	SPRING HITCH		02

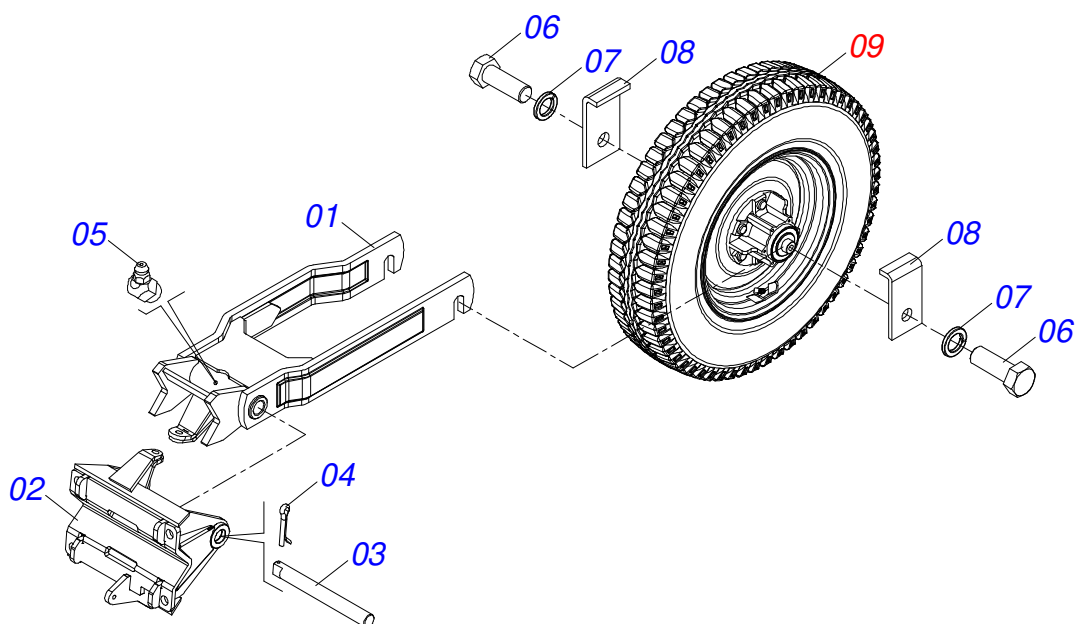


Item	Code	Description	See page	QT
01	0521061566	CARRYING WHEEL ARM TRACTION		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" SPLIT PIN		01
05	0503010003	1845 GREASE FITTING		01
06	0503018981	BOLT		02
07	0503010027	5/8 SPRING WASHER		02
08	0521012190	AXLE LOCK		02
09	0521051801	WHEEL WITH TIRE 7.00X16 WHEELED BOX 47 WITHOUT TRANSMISSION		01

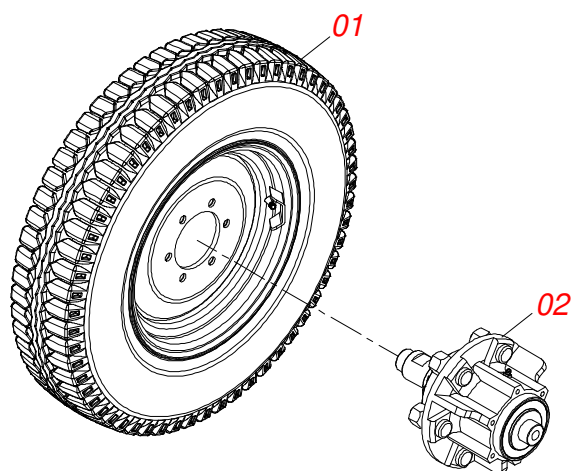

Item	Code	Description	See page	QT
01	0503062159	WHEEL WITH TIRE	39	01
02	0521051800	WHEELED WITHOUT TRANSMISSION WITHOUT TIRE	48	01

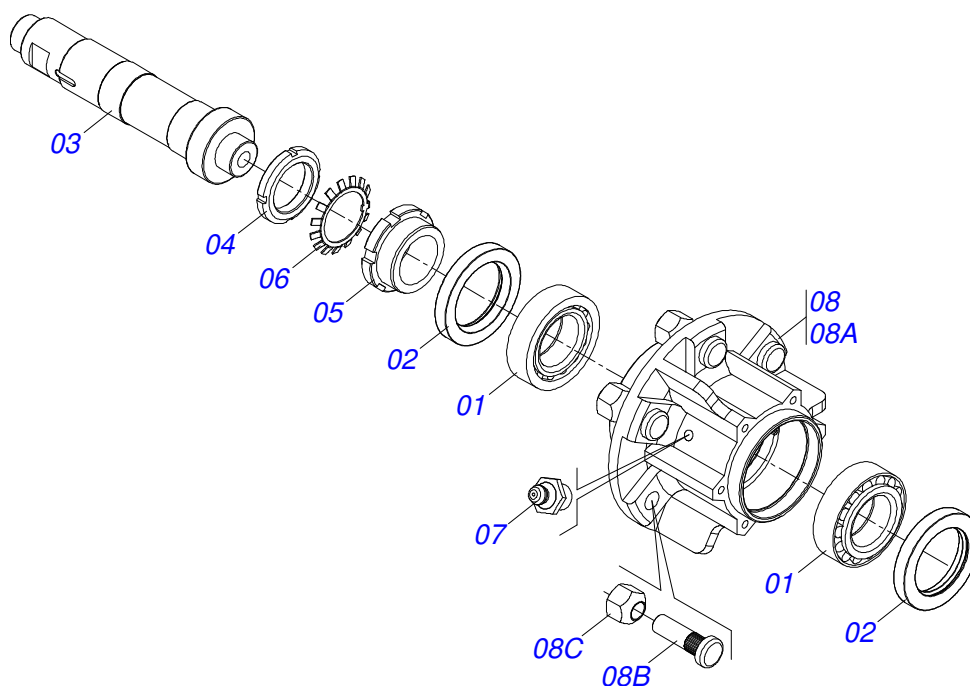


Item	Code	Description	See page	QT
01	0503010328	25590/25523 ROLLER BEARING		02
02	0503010804	00547-B SEAL		02
03	0521012185	TRANSMISSION WHEEL AXLE		01
04	0503010330	KM 9 LOCKNUT		01
05	0511015949	LOCK NUT		01
06	0503010329	LOCK WASHER		01
07	0503010002	1800 GREASE FITTING		01
08	0501110721	WHEEL HUB WITH SCREW / NUTS		01
08A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
08B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
08C	0503016516	5/8 UNF CONIC NUT		06

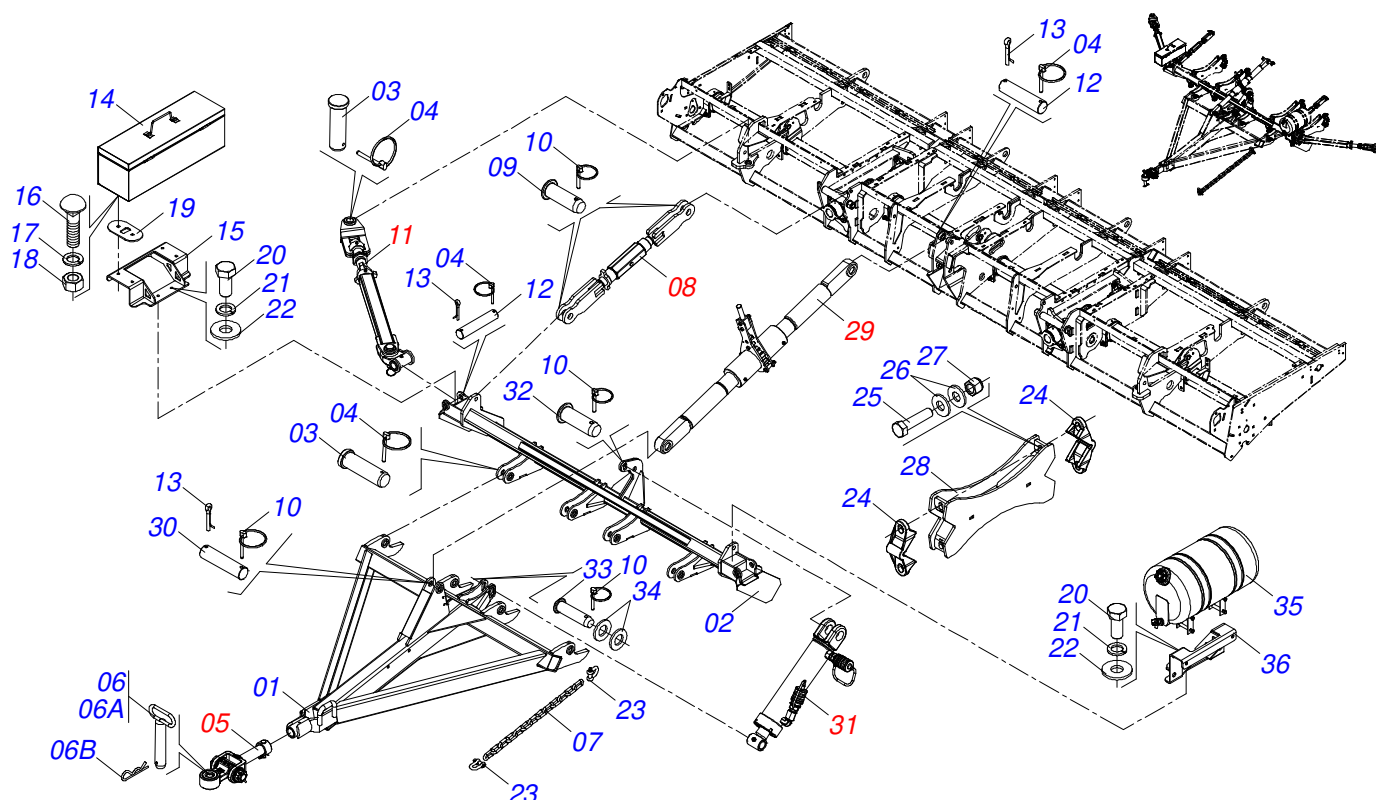

Item	Code	Description	See page	6450	6850	7285	7450	7960
01	0521066289	5750/6350/6850 FRONT DRAWBAR		001	001	001	001	001
02	0521067075	INTERMEDIATE HEAD 6450/7285/7350/7450/8460		001	000	001	001	000
02..	0521066290	INTERMEDIATE HEAD 5750/6850/7860/8160		000	001	000	000	000
02..	0521067151	INTERMEDIATE HEAD 5850/7960		000	000	000	000	001
03	0571019949	JUNCTION SHAFT		006	006	006	006	006
04	0503030119	LOCK PIN		010	010	010	010	010
05	0511055096	TRACTOR HITCH	52	001	001	001	001	001
06	0511053179	TRACTOR COUPLING SHAFT		001	001	001	001	001
06A	0521064036	TRACTOR HITCH AXLE		001	001	001	001	001
06B	0503030012	HITCH PIN CLIP		001	001	001	001	001
07	0503014120	CHAIN		001	001	001	001	001
08	0521051614	TURNBUCKLE SIDE UPPER	53	002	002	002	002	002
09	0521010571	COUPLING SHAFT		004	004	004	004	004
10	0503030085	LOCK PIN		006	006	006	006	006
11	0521051616	TURNBUCKLE SIDE 505/480	54	002	000	000	000	000
11..	0521050133	TURNBUCKLE SIDE 755/480	55	000	002	002	002	002
12	0571019951	JUNCTION SHAFT		003	003	003	003	003
13	0503010523	1/4" X 2" SPLIT PIN		004	004	004	004	004
14	0503034772	BOX		001	001	001	001	001
15	0521068652	TOOLS BOX SUPPORT		001	001	001	001	001
16	0501011643	3/8 X 1" BOLT		004	004	004	004	004
17	0503010025	3/8 SPRING WASHER		004	004	004	004	004
18	0503010026	3/8" NUT		004	004	004	004	004
19	0581017000	PLATE INTERMEDIARY		002	002	002	002	002
20	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		004	004	004	004	004
21	0503010025	3/8 SPRING WASHER		004	004	004	004	004
22	0501010984	10,50 X 27 X 3,00 FLAT WASHER		004	004	004	004	004
23	0503014321	CABLE STEEL SHACKLE		002	002	002	002	002
24	0502010584	CARRYING-WHEELS SUPPORT FIXER		008	008	008	008	008
25	0503016485	BOLT 3/4		016	016	016	016	016
26	0501010322	FLAT WASHER		032	032	032	032	032


Item	Code	Description	See page	6450	6850	7285	7450	7960
27	0503010152	3/4" SELF LOCKING NUT		016	016	016	016	016
28	0521067716	FIXER TUBE		004	004	004	004	004
29	0511059237	3 POINT TURNBUCKLE	57	001	001	001	001	001
30	0571019950	COUPLING SHAFT		001	001	001	001	001
31	0521045756	HYDRAULIC CYLINDER	58	001	001	001	001	001
32	0521010779	31.75 X 95 COUPLING SHAFT		001	001	001	001	001
33	0521010581	0.9" X 4.9" COUPLING SHAFT		001	001	001	001	001
34	0531016049	FLAT WASHER		002	002	002	002	002
35	0503014820	BLACK WATER RESERVOIR		001	001	001	001	001
36	0521068651	SUPPORT BOX		001	001	001	001	001

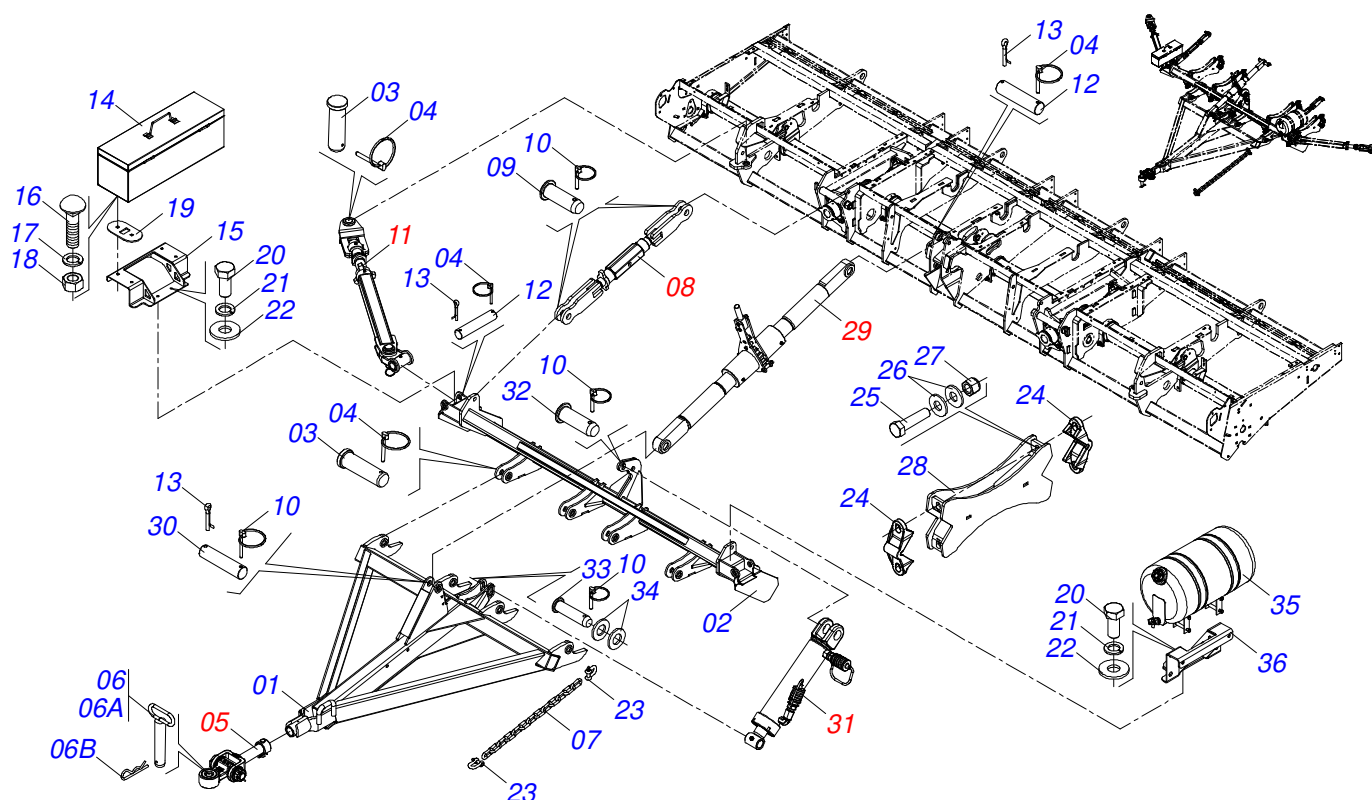

Item	Code	Description	See page	QT
01	0521066289	5750/6350/6850 FRONT DRAWBAR		01
02	0521067075	INTERMEDIATE HEAD 6450/7285/7350/7450/8460		01
03	0571019949	JUNCTION SHAFT		06
04	0503030119	LOCK PIN		10
05	0511055096	TRACTOR HITCH	52	01
06	0511053179	TRACTOR COUPLING SHAFT		01
06A	0521064036	TRACTOR HITCH AXLE		01
06B	0503030012	HITCH PIN CLIP		01
07	0503014120	CHAIN		01
08	0521051614	TURNBUCKLE SIDE UPPER	53	02
09	0521010571	COUPLING SHAFT		04
10	0503030085	LOCK PIN		06
11	0521050681	LATERAL EXTENSOR 1250/480	56	02
12	0571019951	JUNCTION SHAFT		03
13	0503010523	1/4" X 2" SPLIT PIN		04
14	0503034772	BOX		01
15	0521068652	TOOLS BOX SUPPORT		01
16	0501011643	3/8 X 1" BOLT		04
17	0503010025	3/8 SPRING WASHER		04
18	0503010026	3/8" NUT		04
19	0581017000	PLATE INTERMEDIARY		02
20	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		04
21	0503010025	3/8 SPRING WASHER		04
22	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
23	0503014321	CABLE STEEL SHACKLE		02
24	0502010584	CARRYING-WHEELS SUPPORT FIXER		08
25	0503016485	BOLT 3/4		16
26	0501010322	FLAT WASHER		32
27	0503010152	3/4" SELF LOCKING NUT		16
28	0521067716	FIXER TUBE		04
29	0511059237	3 POINT TURNBUCKLE	57	01




Item	Code	Description	See page	QT
30	0571019950	COUPLING SHAFT		01
31	0521045756	HYDRAULIC CYLINDER	58	01
32	0521010779	31.75 X 95 COUPLING SHAFT		01
33	0521010581	0.9" X 4.9" COUPLING SHAFT		01
34	0531016049	FLAT WASHER		02
35	0503014820	BLACK WATER RESERVOIR		01
36	0521068651	SUPPORT BOX		01

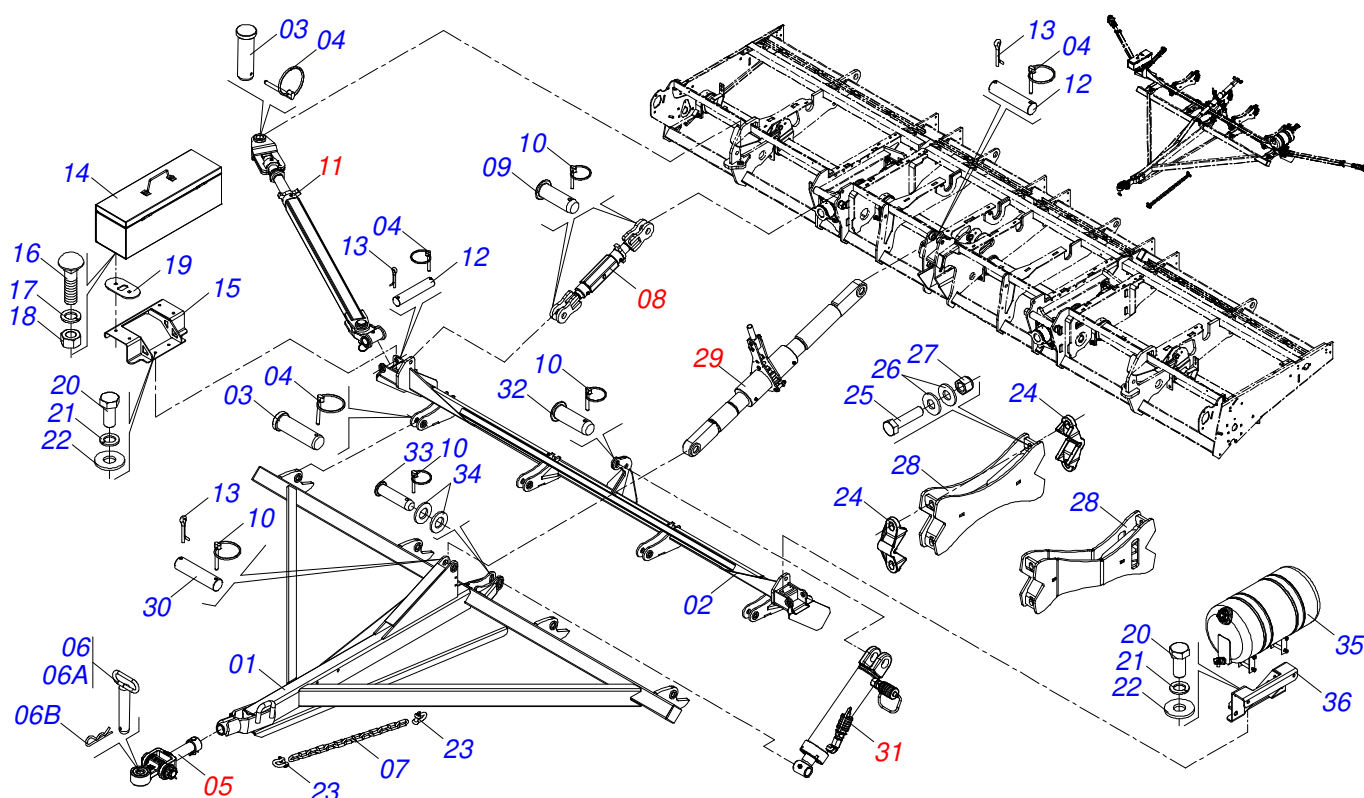


Item	Code	Description	See page	8960	9460	9960	10460
01	0521068119	FRONT HEADER 8960/9960		001	000	001	000
01.	0521067838	9460/10460/10985 FRONT DRAWBAR		000	001	000	001
02	0521068118	INTERMEDIATE HEAD 8960/9960		001	000	001	000
02.	0521067839	INTERMEDIATE HEAD 9460/10460/10985		000	001	000	001
03	0571019949	JUNCTION SHAFT		006	006	006	006
04	0503030119	LOCK PIN		010	010	010	010
05	0511055096	TRACTOR HITCH	52	001	001	001	001
06	0511053179	TRACTOR COUPLING SHAFT		001	001	001	001
06A	0521064036	TRACTOR HITCH AXLE		001	001	001	001
06B	0503030012	HITCH PIN CLIP		001	001	001	001
07	0503014120	CHAIN		001	001	001	001
08	0521050574	EXTENSOR		002	002	002	002
09	0521010571	COUPLING SHAFT		004	004	004	004
10	0503030085	LOCK PIN		006	006	006	006
11	0521050681	LATERAL EXTENSOR 1250/480	56	002	002	002	002
12	0571019951	JUNCTION SHAFT		003	003	003	003
13	0503010523	1/4" X 2" SPLIT PIN		004	004	004	004
14	0503034772	BOX		001	001	001	001
15	0521068652	TOOLS BOX SUPPORT		001	001	001	001
16	0501011643	3/8 X 1" BOLT		004	004	004	004
17	0503010025	3/8 SPRING WASHER		004	004	004	004
18	0503010026	3/8" NUT		004	004	004	004
19	0581017000	PLATE INTERMEDIARY		002	002	002	002
20	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		004	004	004	004
21	0503010025	3/8 SPRING WASHER		004	004	004	004
22	0501010984	10,50 X 27 X 3,00 FLAT WASHER		004	004	004	004
23	0503014321	CABLE STEEL SHACKLE		002	002	002	002
24	0502010584	CARRYING-WHEELS SUPPORT FIXER		008	008	008	008
25	0503016485	BOLT 3/4		016	016	016	016
26	0501010322	FLAT WASHER		032	032	032	032
27	0503010152	3/4" SELF LOCKING NUT		016	016	016	016


Item	Code	Description	See page	8960	9460	9960	10460
28	0521067716	FIXER TUBE		002	004	002	004
28.	0521068136	FIXER INTERMEDIATE HEAD		002	000	002	000
29	0511059237	3 POINT TURNBUCKLE	57	001	001	001	001
30	0571019950	COUPLING SHAFT		001	001	001	001
31	0521045756	HYDRAULIC CYLINDER	58	001	001	001	001
32	0521010779	31.75 X 95 COUPLING SHAFT		001	001	001	001
33	0521010581	0.9" X 4.9" COUPLING SHAFT		001	001	001	001
34	0531016049	FLAT WASHER		002	002	002	002
35	0503014820	BLACK WATER RESERVOIR		001	001	001	001
36	0521068651	SUPPORT BOX		001	001	001	001

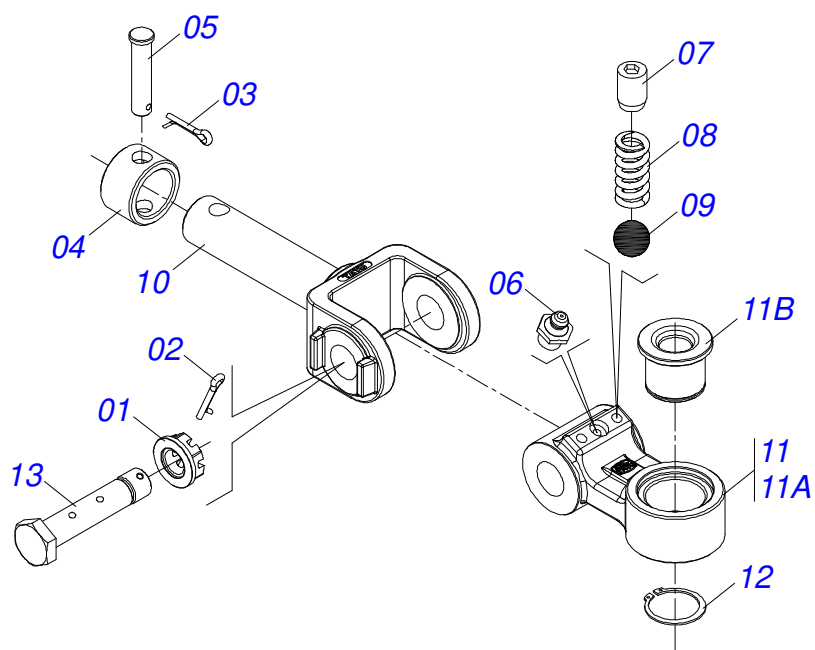


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	LEFT COMPRESSION SPRING		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

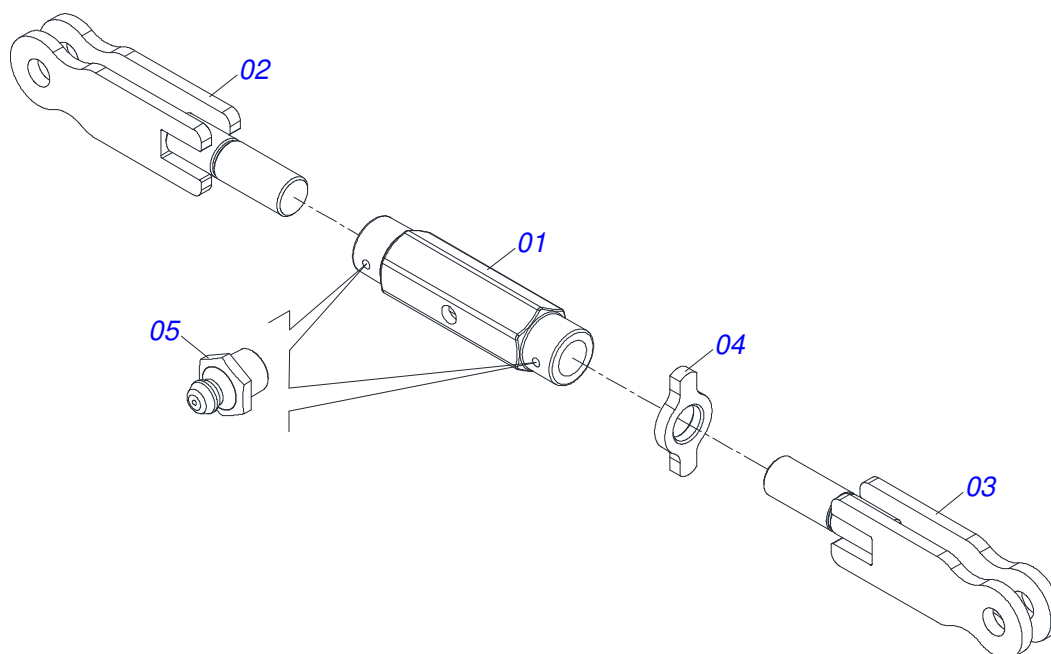


Item	Code	Description	See page	QT
01	0502011195	ADJUSTMENT NUT BODY		01
02	0521068096	EXTENSOR R.1.1 / 2 UNC RIGHT		01
03	0521068095	EXTENSOR R.1.1/2 UNC LEFT		01
04	0541018672	COUNTERNUT		01
05	0503010002	1800 GREASE FITTING		02

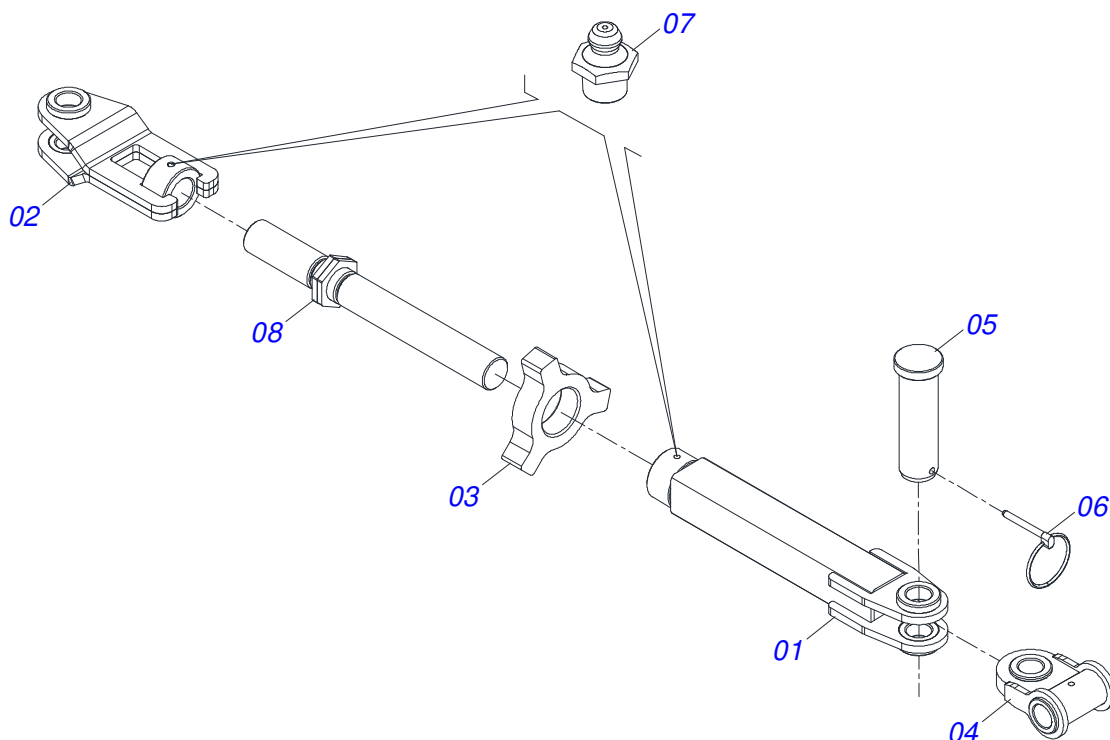


Item	Code	Description	See page	QT
01	0521068097	505 SIDE EXTENSOR FIXED POINT		01
02	0521066338	EXTERNAL ROTATING BRIDGE		01
03	0561019879	LOCK ATTACHMENT BAR		01
04	0521067393	EXTERNAL SIDE EAR		01
05	0571019949	JUNCTION SHAFT		01
06	0503030119	LOCK PIN		01
07	0503010002	1800 GREASE FITTING		03
08	0521065193	TURNBUCKLE AXLE		01

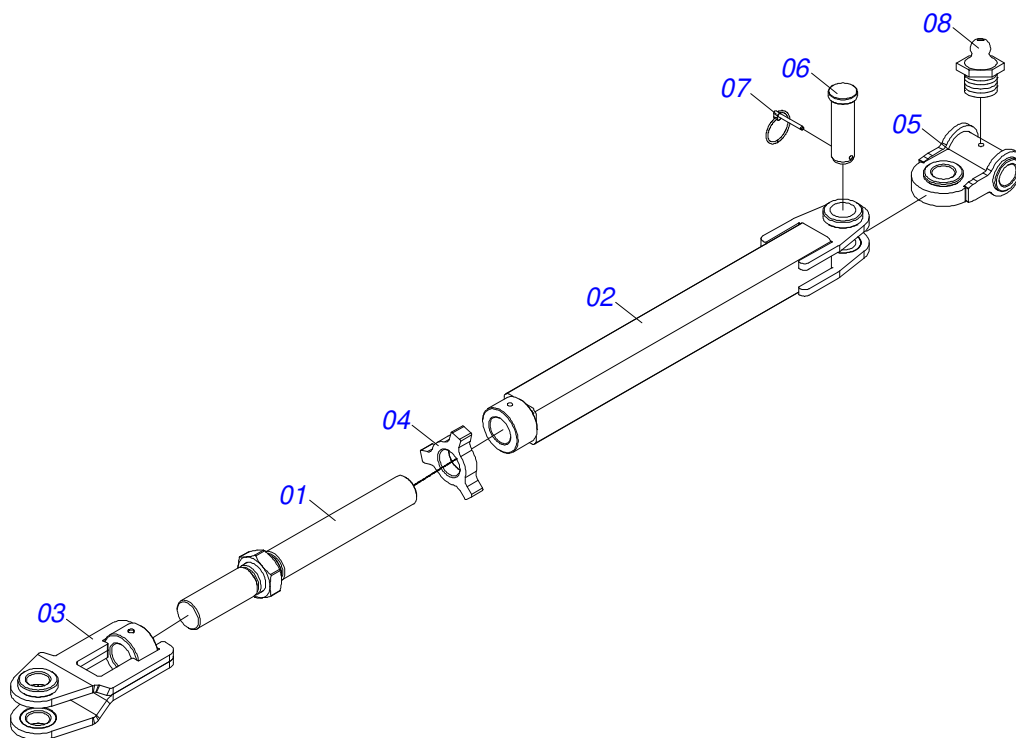


Item	Code	Description	See page	QT
01	0521065193	TURNBUCKLE AXLE		01
02	0521067392	FIXED BRACKET		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0521067393	EXTERNAL SIDE EAR		01
06	0571019949	JUNCTION SHAFT		01
07	0503030119	LOCK PIN		01
08	0503010002	1800 GREASE FITTING		03

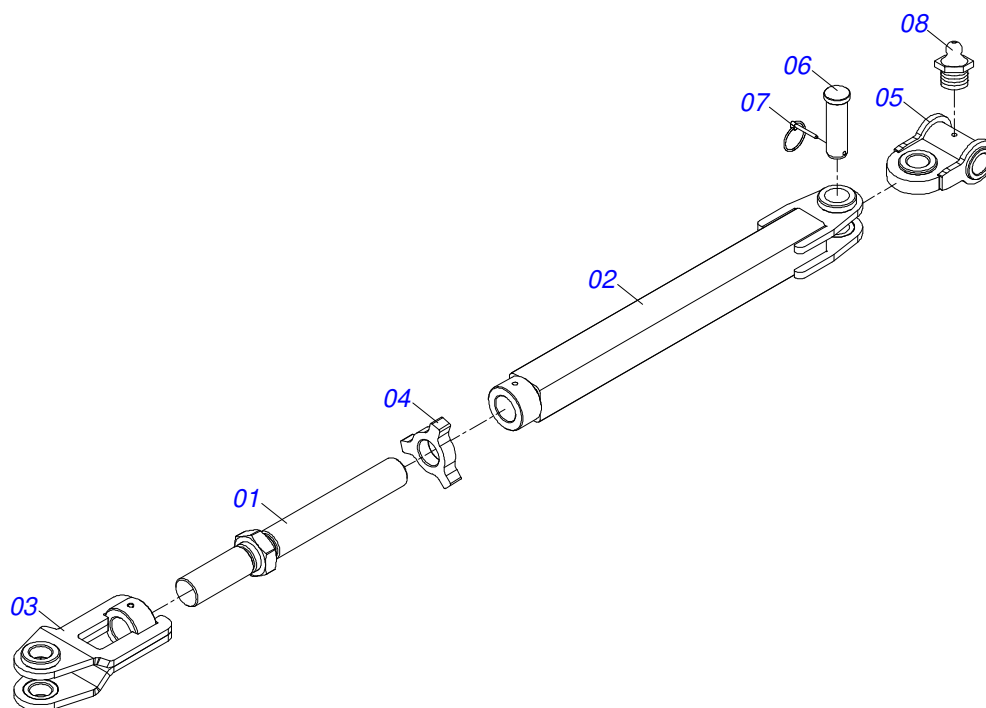


Item	Code	Description	See page	QT
01	0521065193	TURNBUCKLE AXLE		01
02	0521067661	1250 SIDE EXTENSION FIXED TIP		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0521067393	EXTERNAL SIDE EAR		01
06	0571019949	JUNCTION SHAFT		01
07	0503030119	LOCK PIN		01
08	0503010002	1800 GREASE FITTING		03

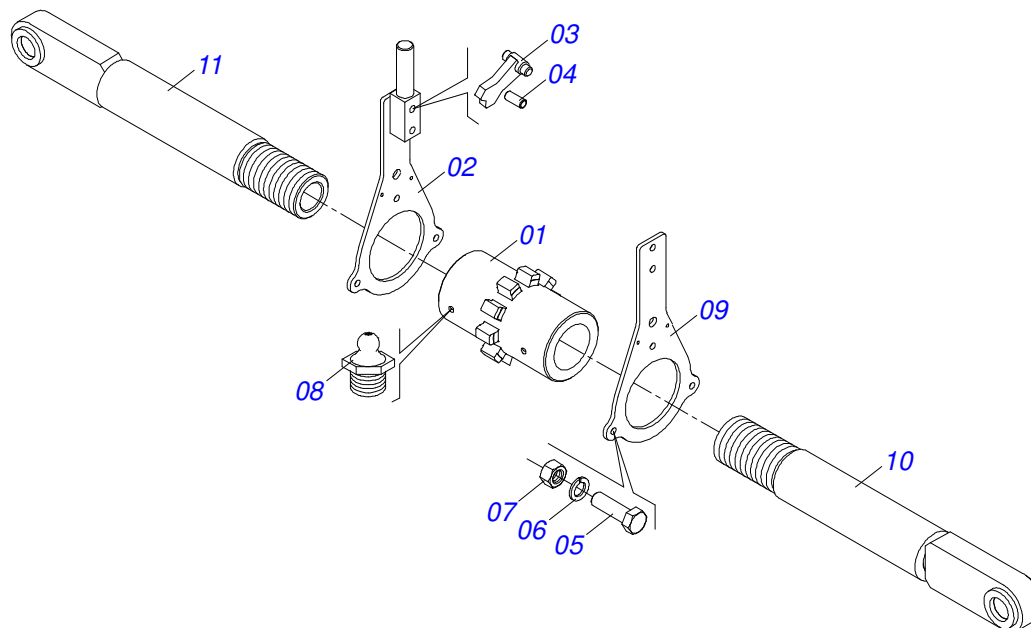


Item	Code	Description	See page	QT
01	0502012783	STABILIZER BODY GREATER		01
02	0511061880	SIDE RIGHT RATCHET		01
03	0511061881	RATCHET FOLLOWER		01
04	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
05	0503011179	3/8" X 2-1/4" BOLT		05
06	0503010025	3/8 SPRING WASHER		05
07	0503010026	3/8" NUT		05
08	0503010002	1800 GREASE FITTING		02
09	0531010264	SIDE RATCHET		01
10	0521066919	3-POINT EXTENSOR RIGHT FUSE		01
11	0521066337	LEFT EXTENSOR 3 SPIKE		01

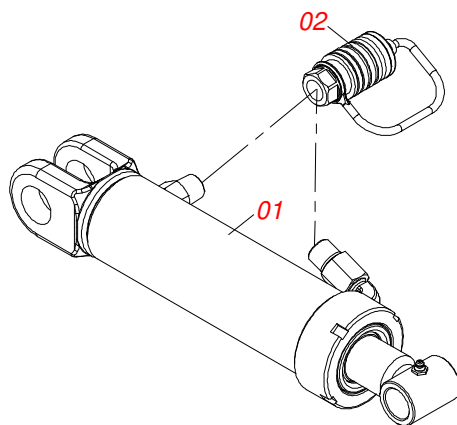


Item	Code	Description	See page	QT
01	0511057653	HYDRAULIC CYLINDER	59	01
02	0501053835	FEMALE QUICK COUPLER	60	02

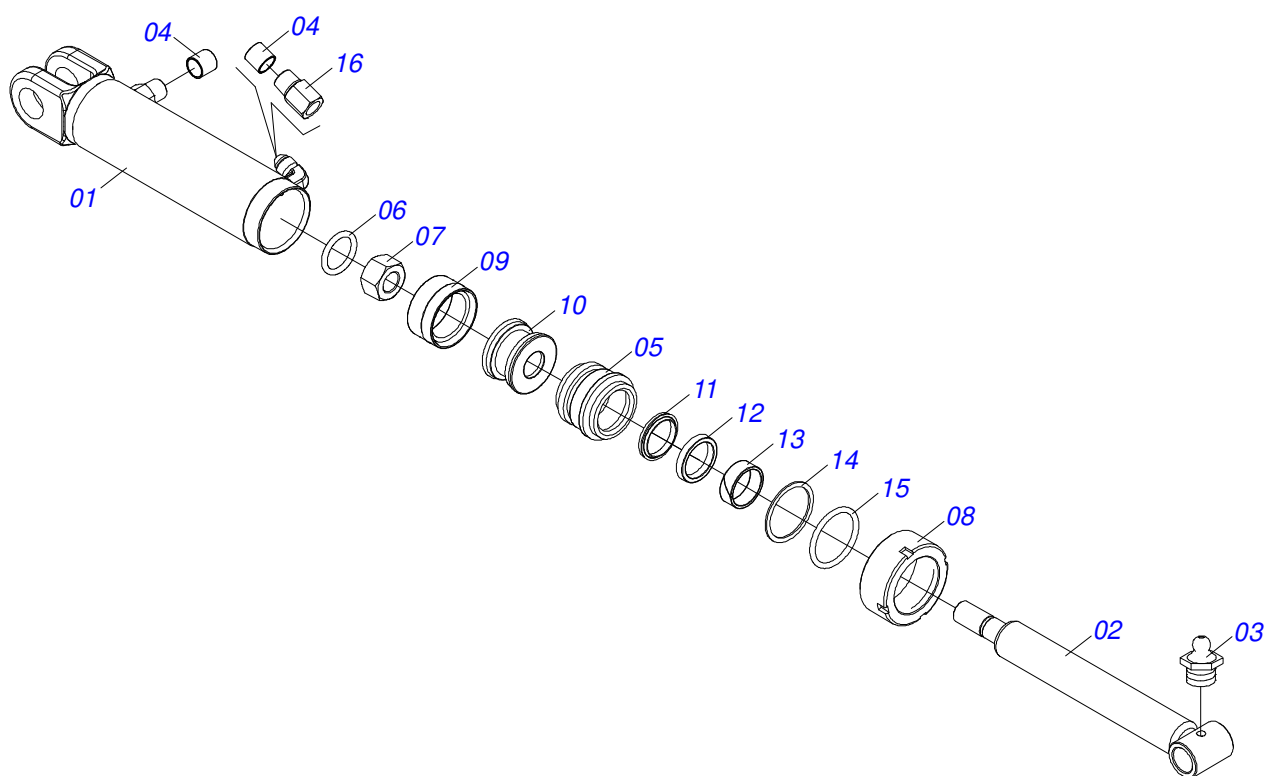

Item	Code	Description	See page	QT
01	0521066550	CASE		01
02	0521066551	EXTENSION DRAWBAR		01
03	0503010002	1800 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010669	EMBOLUS 63.50 X 40 USAP		01
06	0503018005	RING		01
07	0503010558	7/8" NUT		01
08	0502010471	63,50 MOBILE CAP		01
09	0503011058	8-330 BACK-UP RING		01
10	0571019866	RING SUPPORT		01
11	0503010163	D-1500 SCRAPER RING		01
12	0503018004	RING		01
13	0503010161	2-330 N 3006 9B O'RING		01
14	0503018003	GASKET		01
15	0503010605	O'RING		01
16	0581010652	JIC ADAPTER		01

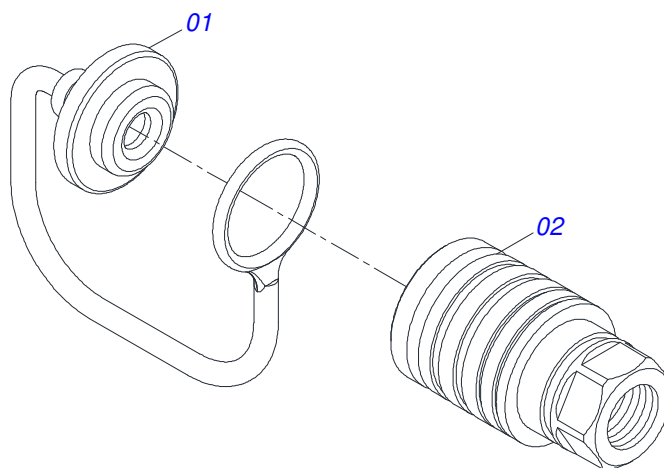


Item	Code	Description	See page	QT
01	0503011883	QUICK CONNECTION COVER		01
02	0503011628	FEMALE QUICK COUPLER		01

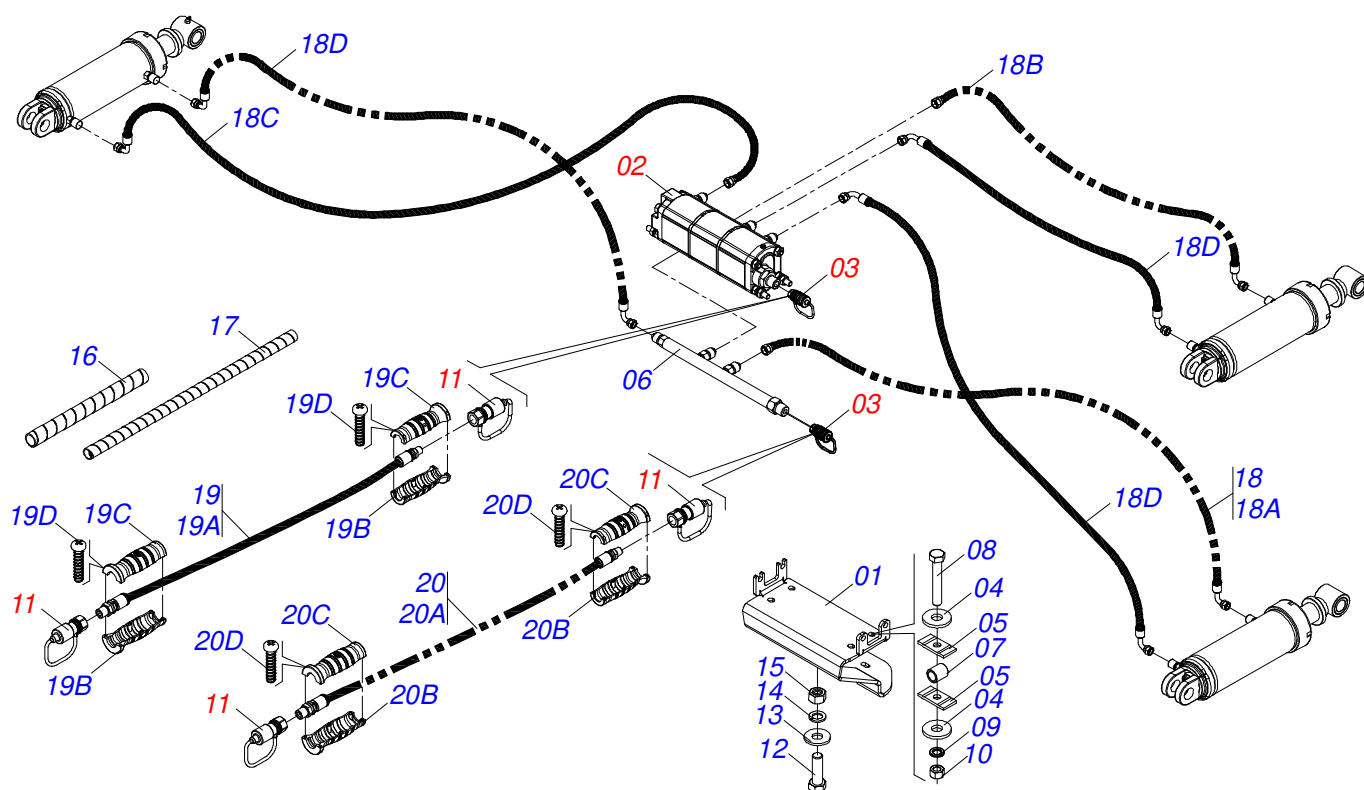

Item	Code	Description	See page	QT
01	0571013472	FIXER BODY VALVE		01
02	0511059290	VALVE ASSEMBLY	66	01
03	0501053835	FEMALE QUICK COUPLER	60	02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		04
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8 SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0501053834	MALE QUICK COUPLER	67	04
12	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
13	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
14	0503010019	1/2" SPRING WASHER		02
15	0503010060	1/2 UNC G.5 ZN HEX NUT		02
16	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
17	0571017774	SPRING PROTECTION QUICK HOSE		01
18	0521051626	HYDRAULIC SYSTEM HOSE SET		01
18A	0501080406	3/8" X 23" TR-TC HOSE		01
18B	0501080150	3/8 X 800 TR-TC HOSE		01
18C	0501080382	3/8" X 102" TR-TC HOSE ASSY		01
18D	0501080432	3/8" X 102" TC-TC HOSE		03
19	0521052484	HOSE 1/2 X 4122 TM-TM BLACK / RED		01
19A	0501080881	HOSE		01
19B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
19C	0503034495	HYDRAULIC HOSE GRIP (RED)		02
19D	0503018952	PLASTIC BOLT		12
20	0521052485	HOSE 1/2 X 4122 TM-TM BLACK / BLUE		01
20A	0501080881	HOSE		01
20B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
20C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02




Item	Code	Description	See page	QT
20D	0503018952	PLASTIC BOLT		12

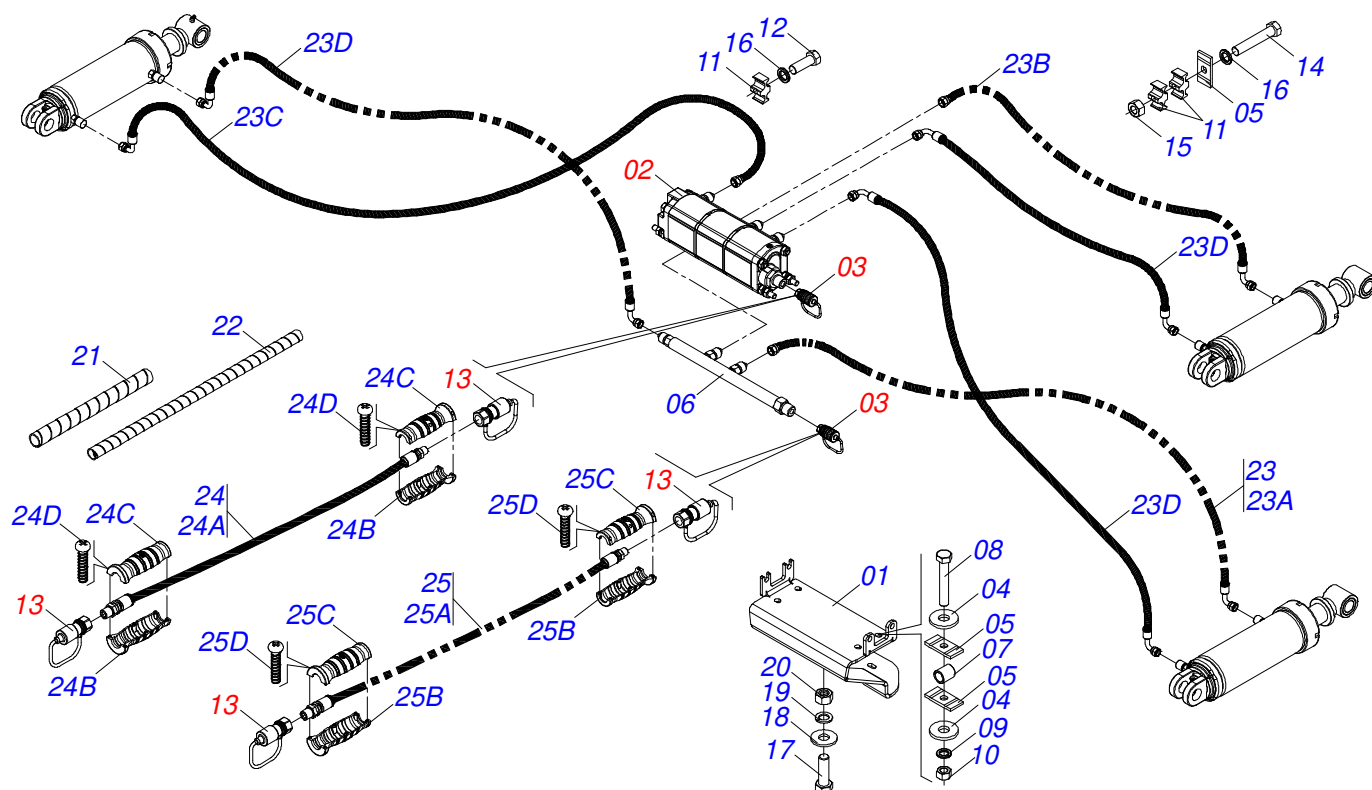


Item	Code	Description	See page	QT
01	0591019605	FLUXO DIVIDER VALVE SUPPORT		01
01.	0591019604	VALVE SUPPORT		01
02	0511059290	VALVE ASSEMBLY	66	01
03	0501053835	FEMALE QUICK COUPLER	60	02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		04
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8 SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0502012702	BODY SUPPORT CLAMP		12
12	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
13	0501053834	MALE QUICK COUPLER	67	04
14	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
15	0503010244	7/16" NUT		04
16	0503010180	7/16" SPRING WASHER		08
17	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
18	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
19	0503010019	1/2" SPRING WASHER		02
20	0503010060	1/2 UNC G.5 ZN HEX NUT		02
21	0571017773	SPRING PROTECTION PLASTIC HOSE 3/4		02
22	0571017774	SPRING PROTECTION QUICK HOSE		01
23	0511059418	HYDRAULIC SYSTEM HOSE ASSEMBLY		01
23A	0501080406	3/8" X 23" TR-TC HOSE		01
23B	0501080150	3/8 X 800 TR-TC HOSE		01
23C	0501081930	HOSE		01
23D	0501081646	TC-TC HOSE ASSY		03
24	0521052484	HOSE 1/2 X 4122 TM-TM BLACK / RED		01
24A	0501080881	HOSE		01
24B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02

Item	Code	Description	See page	QT
24C	0503034495	HYDRAULIC HOSE GRIP (RED)		02
24D	0503018952	PLASTIC BOLT		12
25	0521052485	HOSE 1/2 X 4122 TM-TM BLACK / BLUE		01
25A	0501080881	HOSE		01
25B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
25C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02
25D	0503018952	PLASTIC BOLT		12

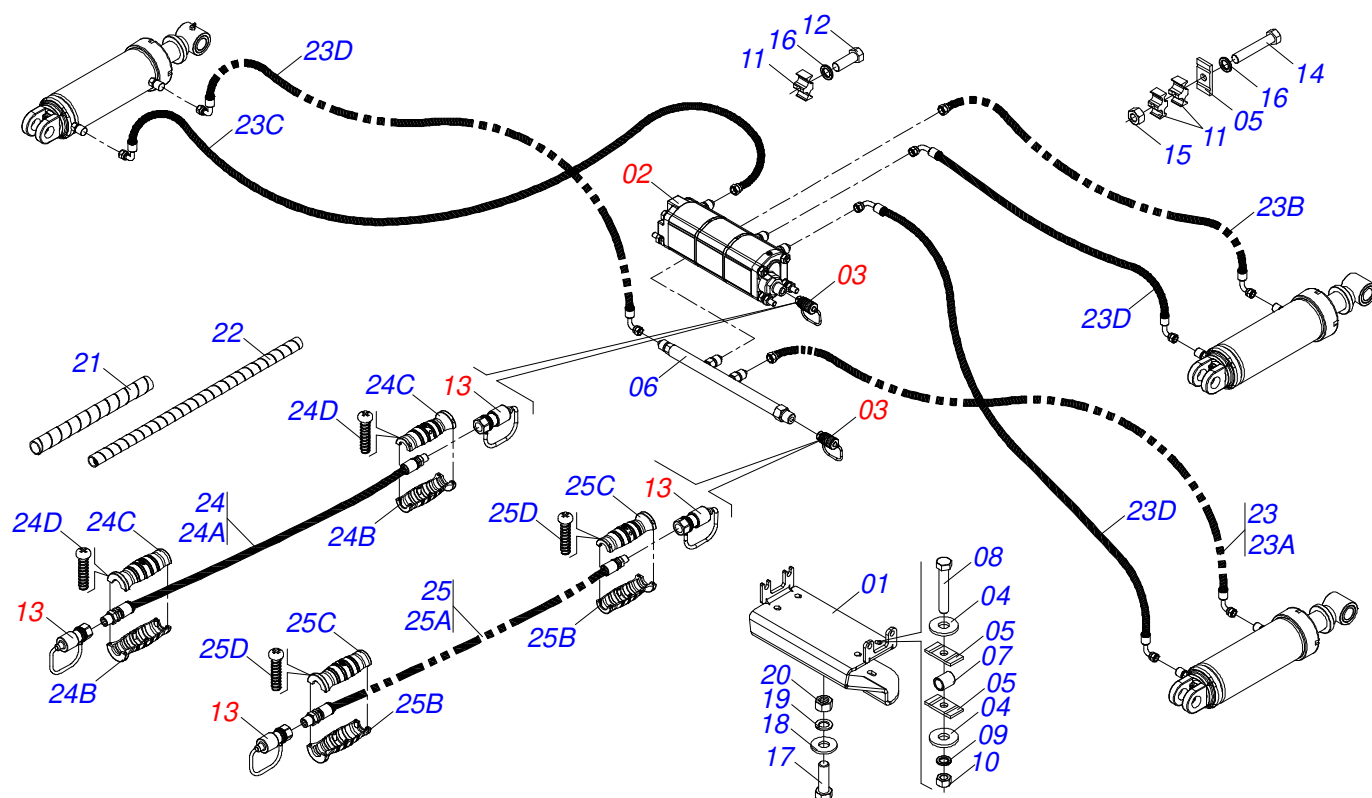


Item	Code	Description	See page	QT
01	0571013472	FIXER BODY VALVE		01
02	0511059290	VALVE ASSEMBLY	66	01
03	0501053835	FEMALE QUICK COUPLER	60	02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		04
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8 SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0502012702	BODY SUPPORT CLAMP		12
12	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
13	0501053834	MALE QUICK COUPLER	67	04
14	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
15	0503010244	7/16" NUT		04
16	0503010180	7/16" SPRING WASHER		08
17	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
18	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
19	0503010019	1/2" SPRING WASHER		02
20	0503010060	1/2 UNC G.5 ZN HEX NUT		02
21	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
22	0571017774	SPRING PROTECTION QUICK HOSE		01
23	0511059418	HYDRAULIC SYSTEM HOSE ASSEMBLY		01
23A	0501080406	3/8" X 23" TR-TC HOSE		01
23B	0501080150	3/8 X 800 TR-TC HOSE		01
23C	0501080392	3/8 X 3300 TR-TC HOSE		01
23D	0501080442	3/8" X 130" TC-TC HOSE ASSY		03
24	0521052484	HOSE 1/2 X 4122 TM-TM BLACK / RED		01
24A	0501080881	HOSE		01
24B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
24C	0503034495	HYDRAULIC HOSE GRIP (RED)		02

Item	Code	Description	See page	QT
24D	0503018952	PLASTIC BOLT		12
25	0521052485	HOSE 1/2 X 4122 TM-TM BLACK / BLUE		01
25A	0501080881	HOSE		01
25B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
25C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02
25D	0503018952	PLASTIC BOLT		12

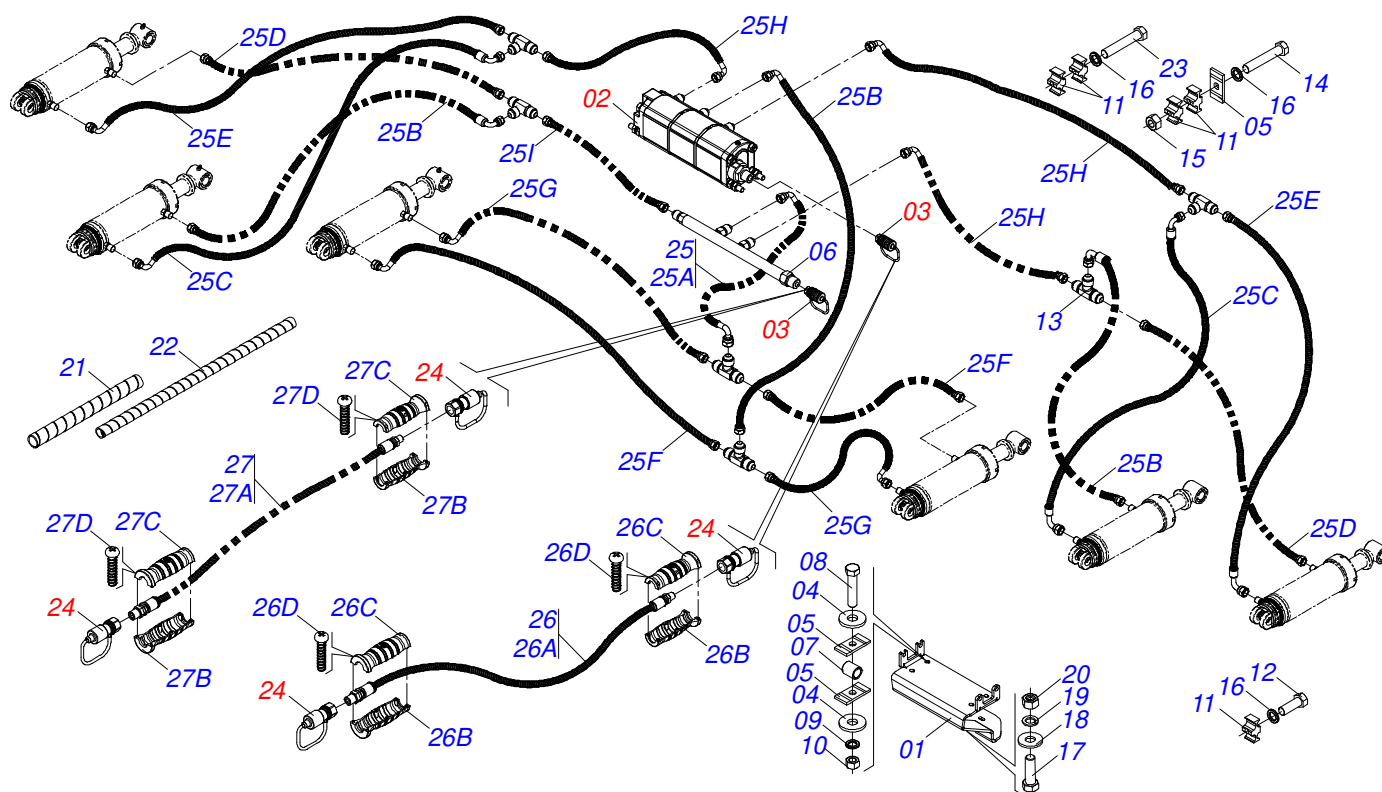


Item	Code	Description	See page	QT
01	0571013472	FIXER BODY VALVE		01
02	0511059290	VALVE ASSEMBLY	66	01
03	0501053835	FEMALE QUICK COUPLER	60	02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		08
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8 SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0502012702	BODY SUPPORT CLAMP		14
12	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
13	0503011271	3/4" UNF "T" CONNECTION T 3 SIDES		06
14	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
15	0503010244	7/16" NUT		04
16	0503010180	7/16" SPRING WASHER		08
17	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
18	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
19	0503010019	1/2" SPRING WASHER		02
20	0503010060	1/2 UNC G.5 ZN HEX NUT		02
21	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
22	0571017774	SPRING PROTECTION QUICK HOSE		01
23	0503010851	7/16" X 3.1/2" BOLT		02
24	0501053834	MALE QUICK COUPLER	67	04
25	0521052894	HYDRAULIC SYSTEM HOSE ASSEMBLY		01
25A	0501082077	TR-TM HOSE ASSY		01
25B	0501080445	TR-TM HOSE ASSY		03
25C	0501080199	3/8" X 13.4" TC-TC HOSE ASSY		02
25D	0501080373	TR-TR HOSE ASSY		02
25E	0501080302	3/8" X 55" TR-TC HOSE		02
25F	0501080025	3/8" X 55,11" TR-TC HOSE		02

Item	Code	Description	See page	QT
25G	0501080056	3/8" X 1700 TR-TC HOSE ASSY		02
25H	0501081607	HOSE 3/8 X 2450 TC-TR		03
25I	0501080452	3/8" X 98" TR-TR HOSE		01
26	0521052663	HOSE 1/2 X 5500 TM-TM BLACK / RED		01
26A	0501081359	1/2 X 5500 TM-TM HOSE ASSY		01
26B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
26C	0503034495	HYDRAULIC HOSE GRIP (RED)		02
26D	0503018952	PLASTIC BOLT		12
27	0521052664	HOSE 1/2 X 5500 TM-TM BLACK / BLUE		01
27A	0501081359	1/2 X 5500 TM-TM HOSE ASSY		01
27B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
27C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02
27D	0503018952	PLASTIC BOLT		12

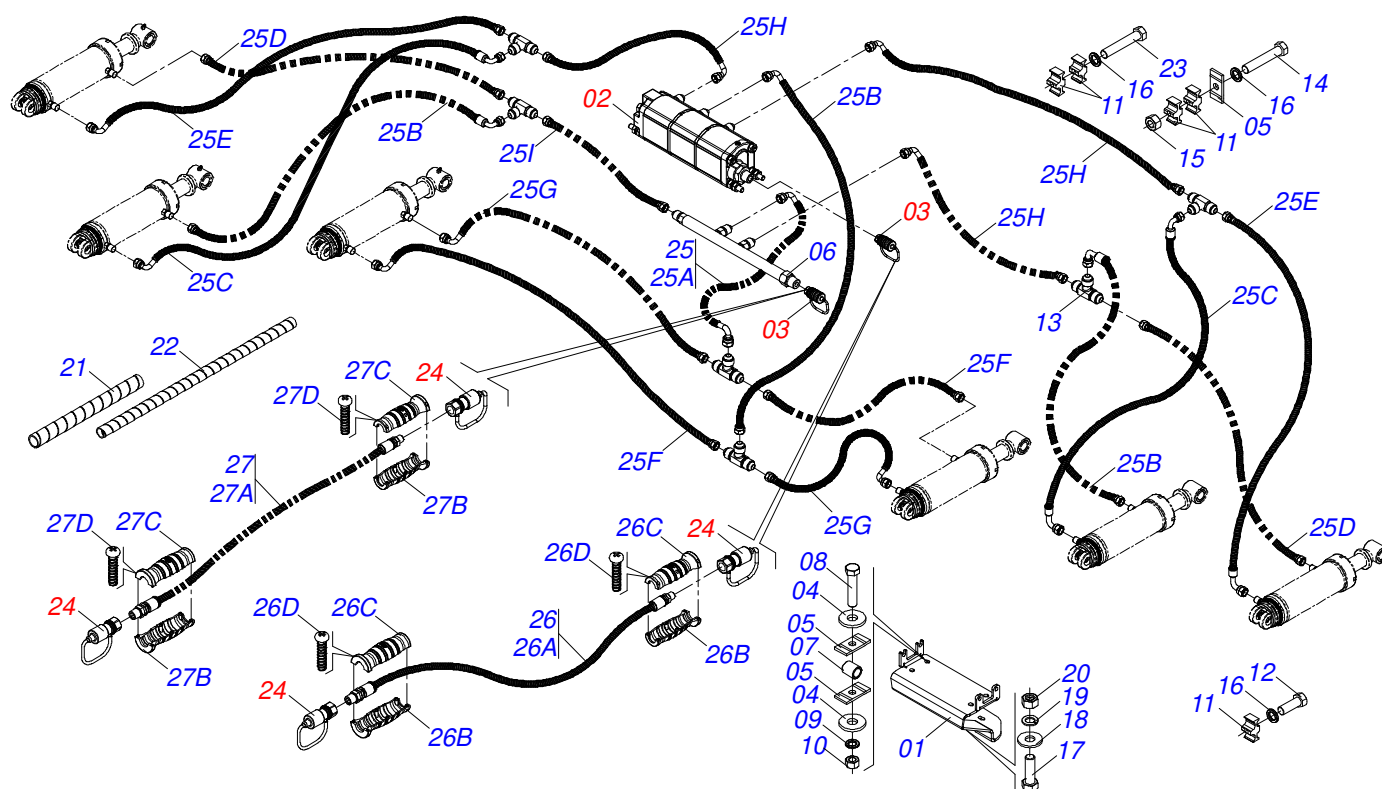


Item	Code	Description	See page	QT
01	0571013472	FIXER BODY VALVE		01
02	0511059290	VALVE ASSEMBLY	66	01
03	0501053835	FEMALE QUICK COUPLER	60	02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		08
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8 SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0502012702	BODY SUPPORT CLAMP		14
12	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
13	0503011271	3/4" UNF "T" CONNECTION T 3 SIDES		06
14	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
15	0503010244	7/16" NUT		04
16	0503010180	7/16" SPRING WASHER		08
17	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
18	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
19	0503010019	1/2" SPRING WASHER		02
20	0503010060	1/2 UNC G.5 ZN HEX NUT		02
21	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
22	0571017774	SPRING PROTECTION QUICK HOSE		01
23	0503010851	7/16" X 3.1/2" BOLT		02
24	0501053834	MALE QUICK COUPLER	67	04
25	0521052878	HOSE KIT SYSTEM HYDRAULIC		01
25A	0501082077	TR-TM HOSE ASSY		01
25B	0501080445	TR-TM HOSE ASSY		03
25C	0501080199	3/8" X 13.4" TC-TC HOSE ASSY		02
25D	0501080373	TR-TR HOSE ASSY		02
25E	0501080302	3/8" X 55" TR-TC HOSE		02
25F	0501081796	3/8" X 64,96" TR-TC HOSE		02


Item	Code	Description	See page	QT
25G	0501080212	3/8 X 1930 TR-TC HOSE ASSY		02
25H	0501080401	3/8" X 106" TR-TC HOSE		03
25I	0501080296	3/8" X 106" TR-TR HOSE		01
26	0521052663	HOSE 1/2 X 5500 TM-TM BLACK / RED		01
26A	0501081359	1/2 X 5500 TM-TM HOSE ASSY		01
26B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
26C	0503034495	HYDRAULIC HOSE GRIP (RED)		02
26D	0503018952	PLASTIC BOLT		12
27	0521052664	HOSE 1/2 X 5500 TM-TM BLACK / BLUE		01
27A	0501081359	1/2 X 5500 TM-TM HOSE ASSY		01
27B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
27C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02
27D	0503018952	PLASTIC BOLT		12

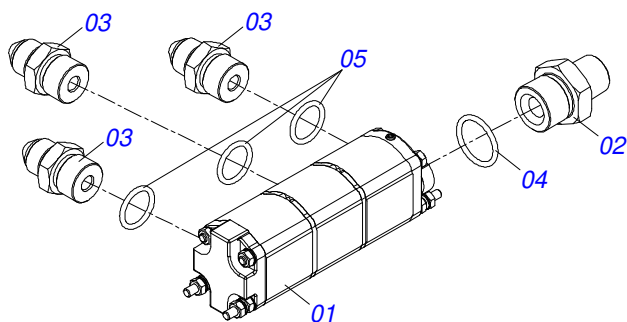

Item	Code	Description	See page	QT
01	0503016524	DIVIDER VALVE		01
02	0581011593	NIPPLE R.1.1/16 UN		01
03	0511010111	7/8" NIPPLE		03
04	0503011109	2-119 N 3006-9B O'RING		01
05	0503010045	O'RING		03

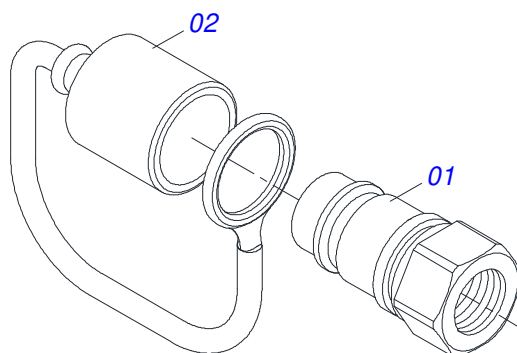


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

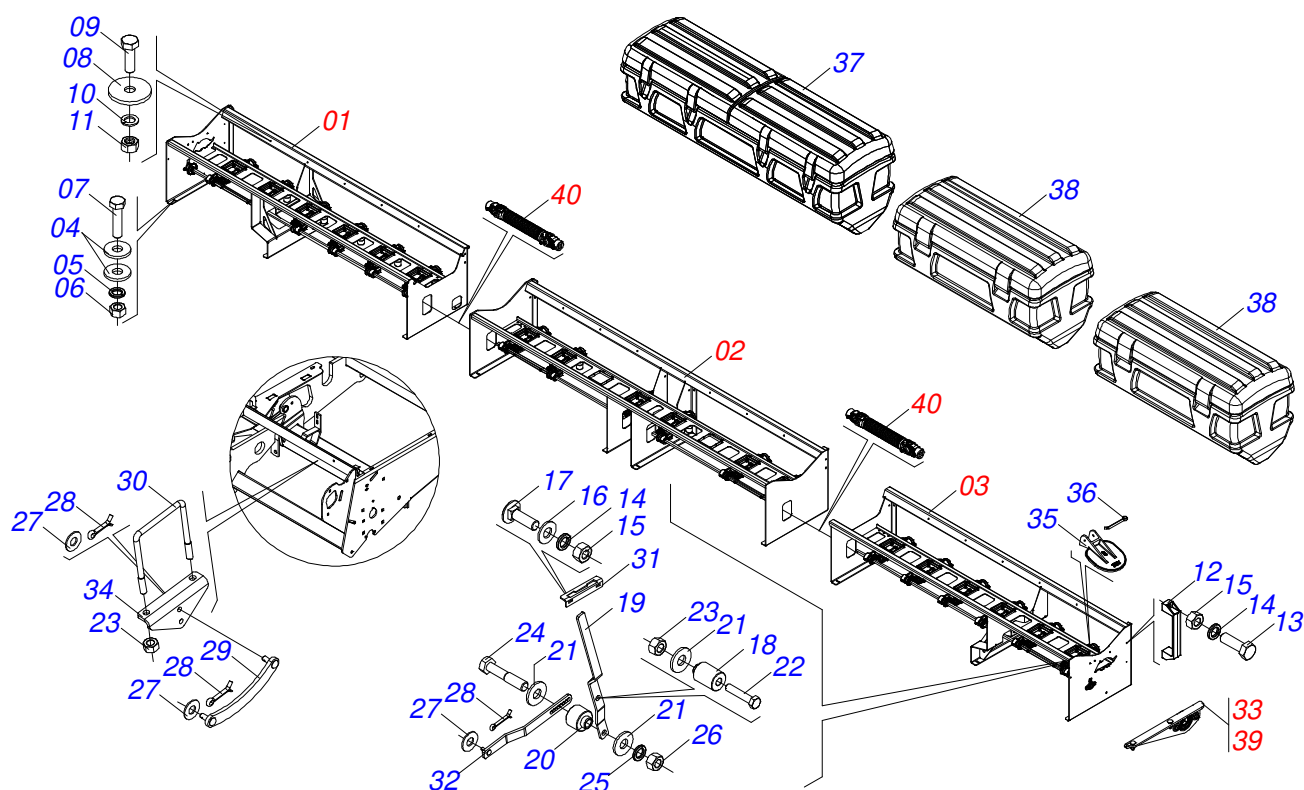


Item	Code	Description	See page	QT
01	0521051606	SILO FERTILIZER RIGHT SUPPORT 6450	69	01
02	0521051607	SUPPORT SILO CENTRAL FERTILIZER 6450/7285/7450/8460	73	01
03	0521051605	SILO FERTILIZER LEFT SUPPORT 6450	74	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		32
05	0503010025	3/8 SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0503010849	3/8" X 1-1/2" BOLT		16
08	0571019051	FIXER HOPPER WASHER		22
09	0503013751	3/8 UNC X 1.1/4 BOLT		22
10	0503012535	3/8" SPRING WASHER		22
11	0503012531	3/8" INOX NUT		22
12	0503011957	NYLON HANDLE		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0551019168	SLEEVE		02
19	0551019160	LEVER		02
20	0551019167	SLEEVE UNION		02
21	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
22	0503010479	BOLT		02
23	0503011336	1/2" HEX SELF ADJUSTING NUT		06
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		02
26	0503010060	1/2 UNC G.5 ZN HEX NUT		02
27	0501013518	FLAT WASHER		06
28	0503010140	1/8" X 3/4" COTTERPIN		06
29	0511069678	LH LOWER LEVER		02
30	0561016468	FASTENER		02
31	0581012605	GEAR BOX LEVER LOCK		02


Item	Code	Description	See page	QT
32	0521061741	INNTER LEVER		02
33	0521050194	SQUARE AXLE RIGHT SUPPORT	75	01
34	0551019159	LEVER FIXER BODY		02
35	0503034396	FERTILIZER SIDE COVER		13
36	0503010362	1/8 X 1.1/4 COTTERPIN		13
37	0503062589	FERTILIZER HOPPER MOUNTED		01
38	0503062362	FERTILIZER HOPPER		02
39	0521050195	SQUARE AXLE LEFT SUPPORT	76	01
40	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	77	02

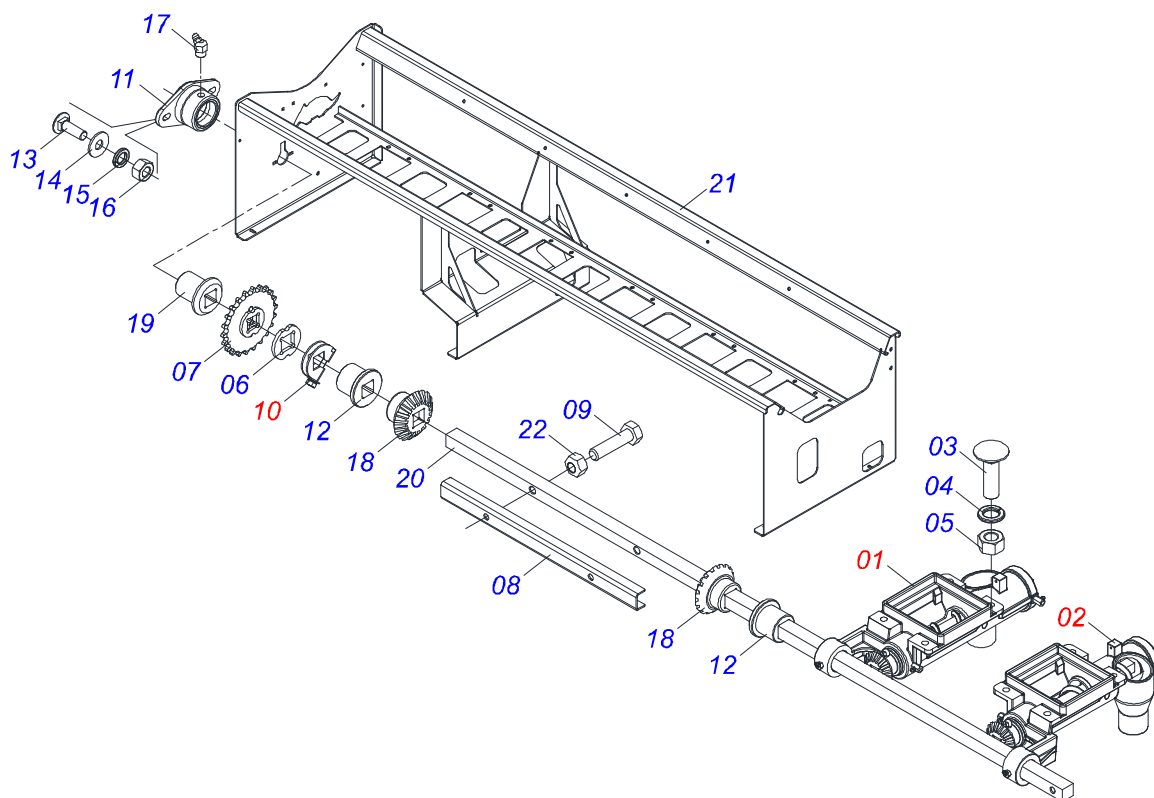


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	02
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	02
03	0501010942	3/8" X 1-1/4" BOLT		16
04	0503011443	3/8" SPRING WASHER		16
05	0503010026	3/8" NUT		16
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
10	0501053788	3/4 SQUARE AXLE FASTENER	72	01
11	0501110392	HOPPER SUPPORT BEARING		01
12	0503030275	AGRICULTURAL BEARING		04
13	0503011953	5/16" X 1" BOLT		02
14	0521011039	FLAT WASHER		02
15	0503011444	SPRING WASHER		02
16	0503010337	5/16" NUT		02
17	0503010003	1845 GREASE FITTING		01
18	1902010685	18Z CONICAL GEAR		04
19	0521012485	GEAR BOX BEARING AGRICUTURAL		01
20	0581012758	SQUARE AXLE 3/4 X 1525		01
21	0521068090	SUPPORT RIGHT SILO FERTILIZER		01
22	0503013816	5/16" LOCKNUT		02

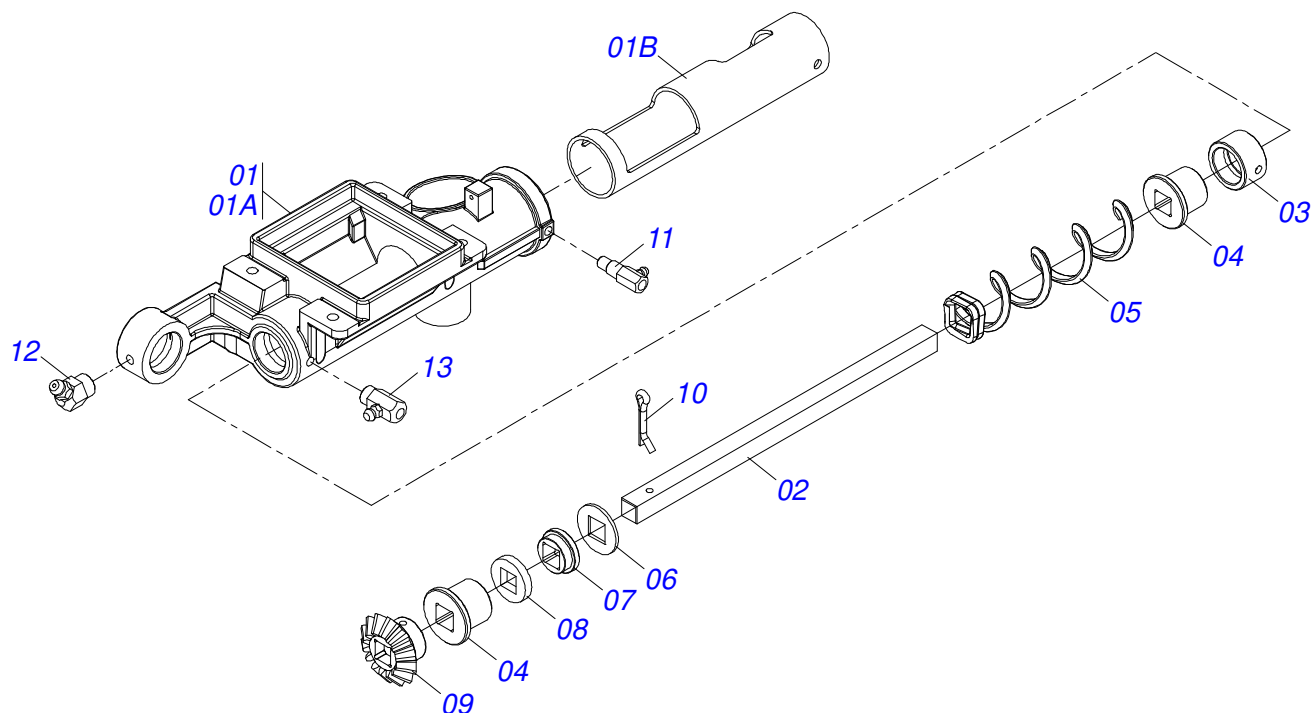


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" SPLIT PIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

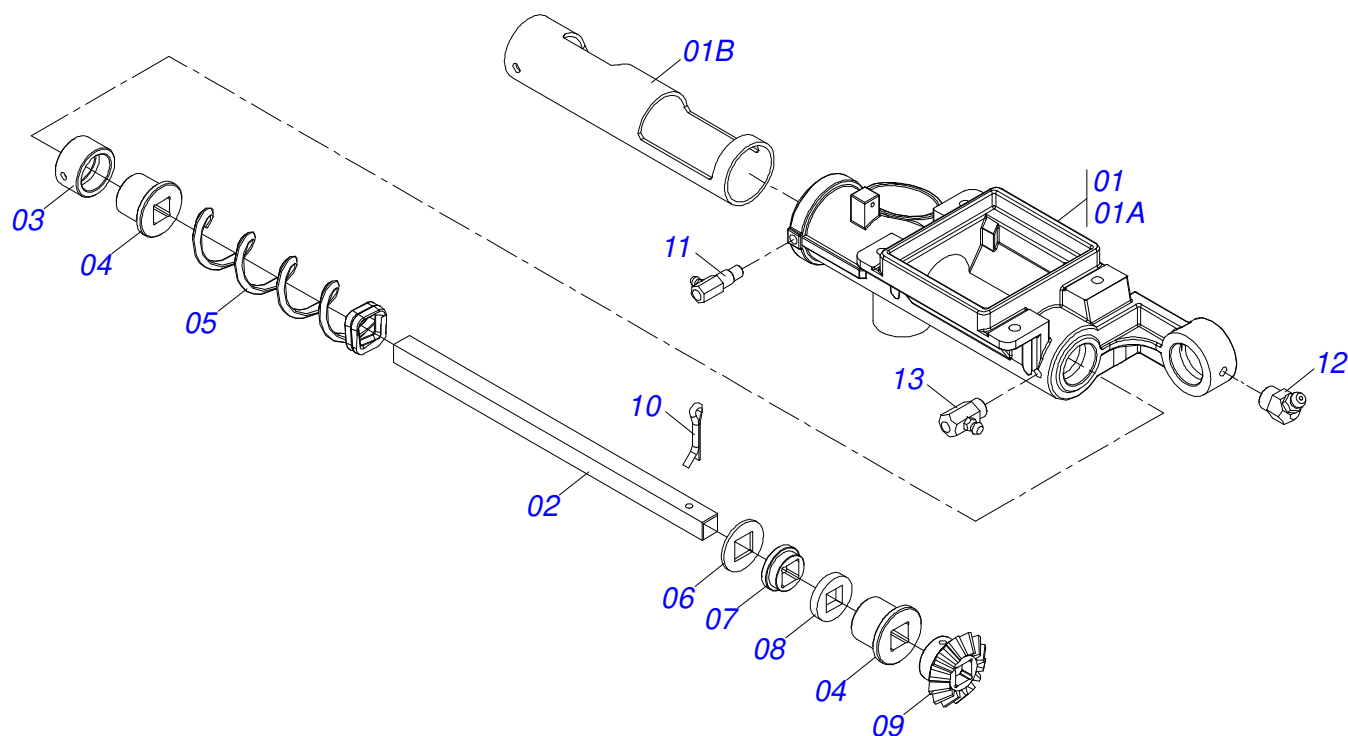


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" SPLIT PIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

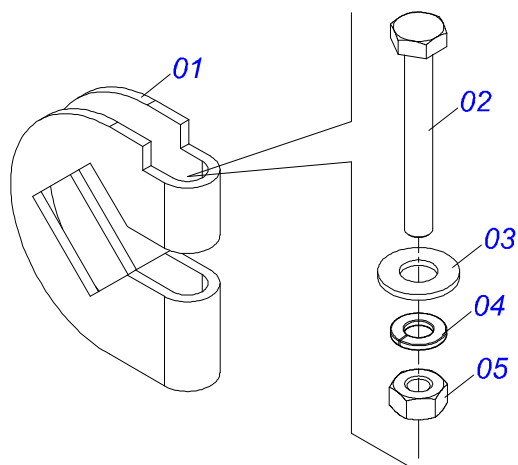


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

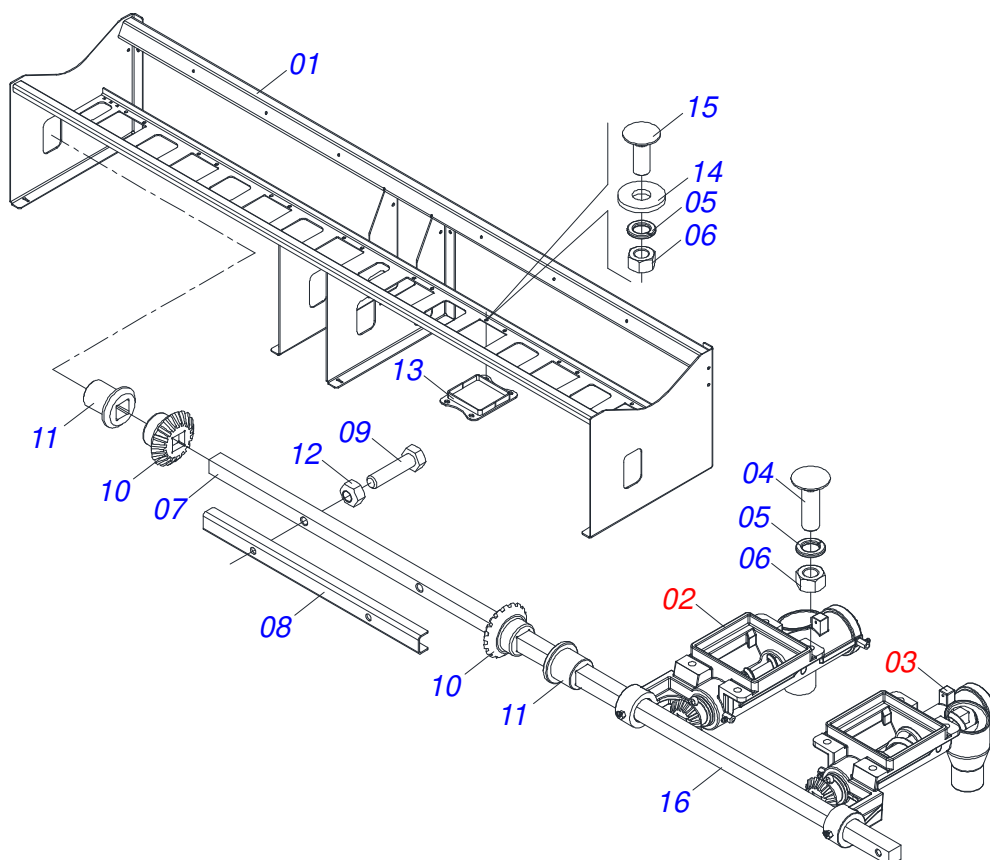


Item	Code	Description	See page	QT
01	0521068089	SUPPORT CENTRAL SILO FERTILIZER		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	03
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	02
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0581016973	SQUARE AXLE 3/4 X 790		01
08	0571019828	LOCK AXLE		02
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
10	1902010685	18Z CONICAL GEAR		05
11	0503030275	AGRICULTURAL BEARING		05
12	0503013816	5/16" LOCKNUT		04
13	0511062163	FERTILIZER BEAM LOWER COVER		01
14	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
15	0501011643	3/8 X 1" BOLT		04
16	0581016950	SQUARE AXLE 3/4 X 1115		01

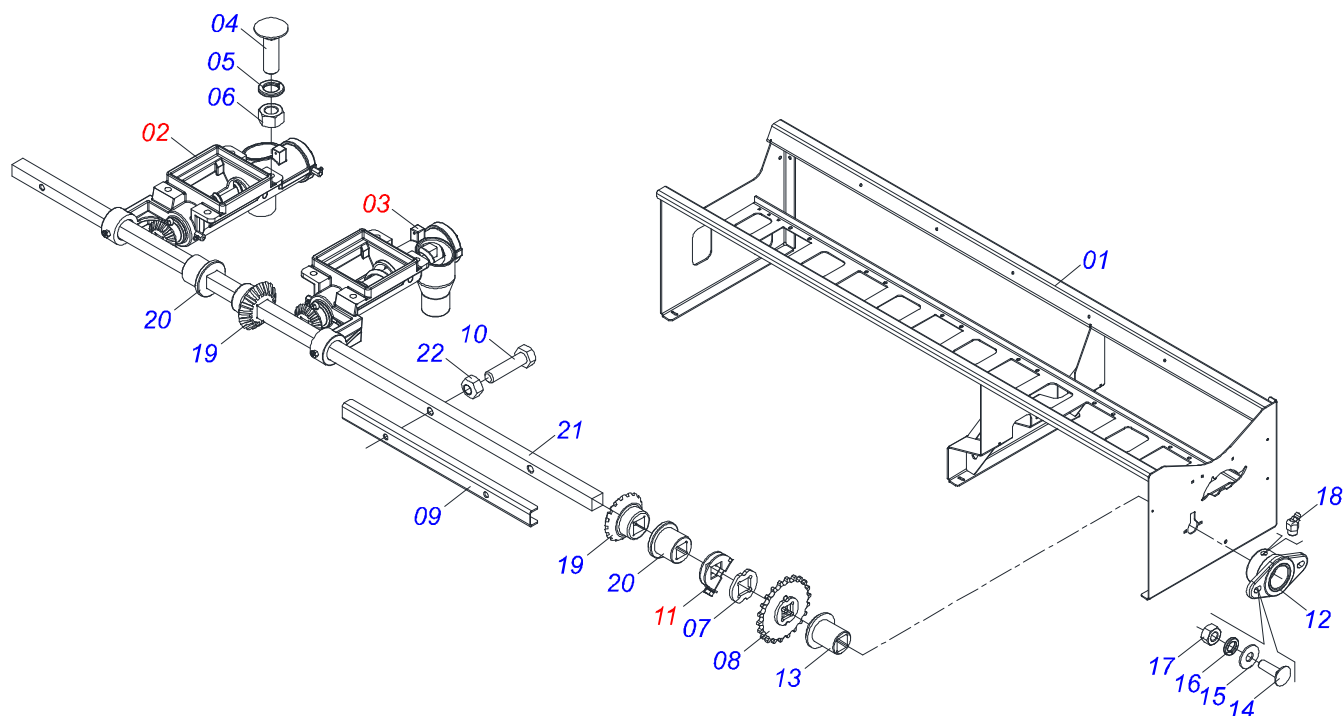


Item	Code	Description	See page	QT
01	0521068091	LEFT SILO FERTILIZER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	02
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	02
04	0501010942	3/8" X 1-1/4" BOLT		16
05	0503011443	3/8" SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
11	0501053788	3/4 SQUARE AXLE FASTENER	72	01
12	0501110392	HOPPER SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0521011039	FLAT WASHER		02
16	0503011444	SPRING WASHER		02
17	0503010337	5/16" NUT		02
18	0503010003	1845 GREASE FITTING		01
19	1902010685	18Z CONICAL GEAR		04
20	0503030275	AGRICULTURAL BEARING		04
21	0581012758	SQUARE AXLE 3/4 X 1525		01
22	0503013816	5/16" LOCKNUT		02

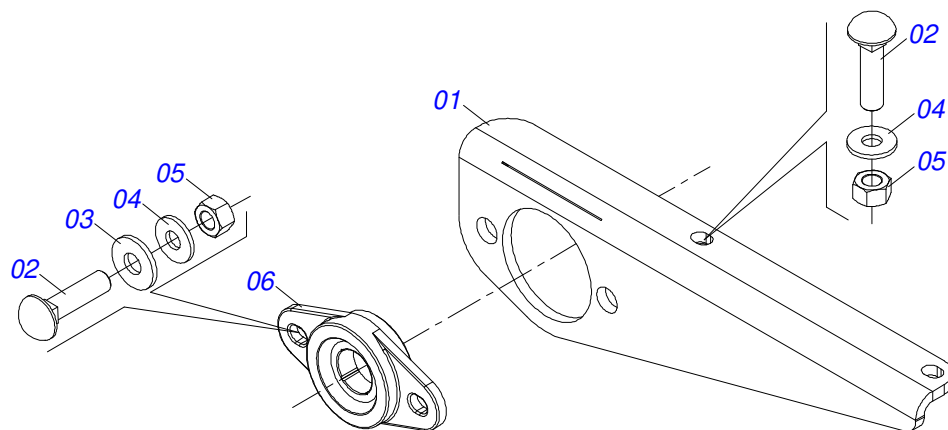


Item	Code	Description	See page	QT
01	0581013322	BEARING RIGHT SUPPORT		01
02	0503011953	5/16" X 1" BOLT		04
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
04	0501010694	FLAT WASHER		04
05	0503013816	5/16" LOCKNUT		04
06	0501056444	BEARING WITH ROLLER	122	01

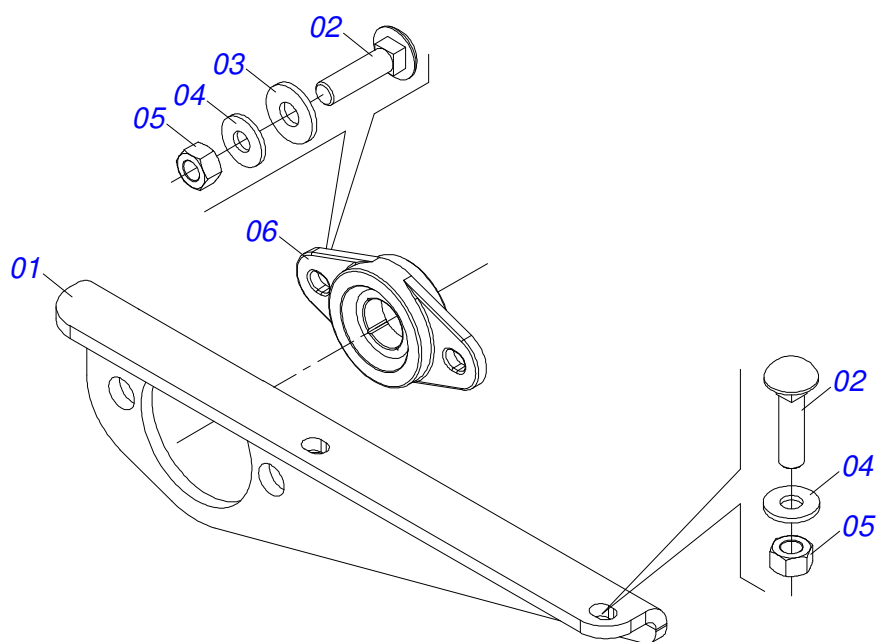

Item	Code	Description	See page	QT
01	0581013324	BEARING LEFT SUPPORT		01
02	0503011953	5/16" X 1" BOLT		04
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
04	0501010694	FLAT WASHER		04
05	0503013816	5/16" LOCKNUT		04
06	0501056444	BEARING WITH ROLLER	122	01

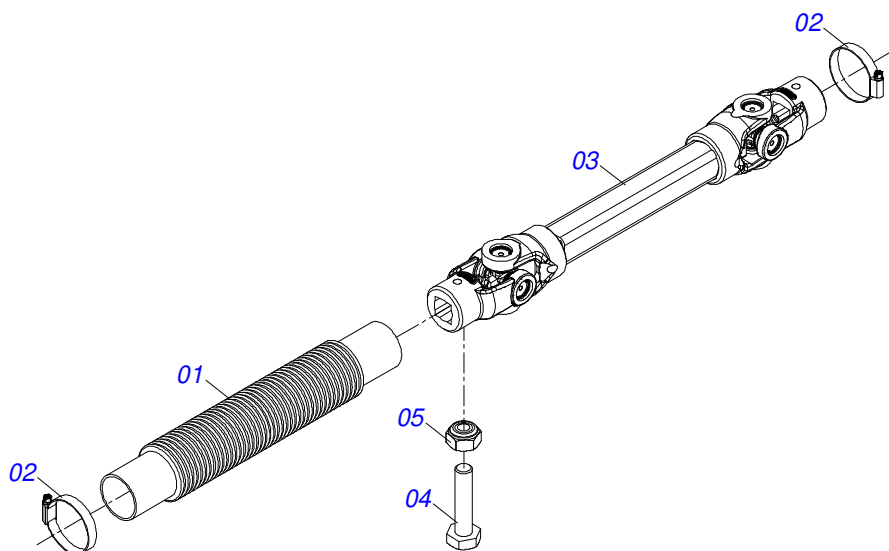

Item	Code	Description	See page	QT
01	0503030331	1.2" X 1.2" X 12.2" HOSE		01
02	0503010243	CLAMP		02
03	0503062755	TRANSMISSION AXLE		01
04	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
05	0503012880	1/4" UNC SELF ADJUSTING NUT		02

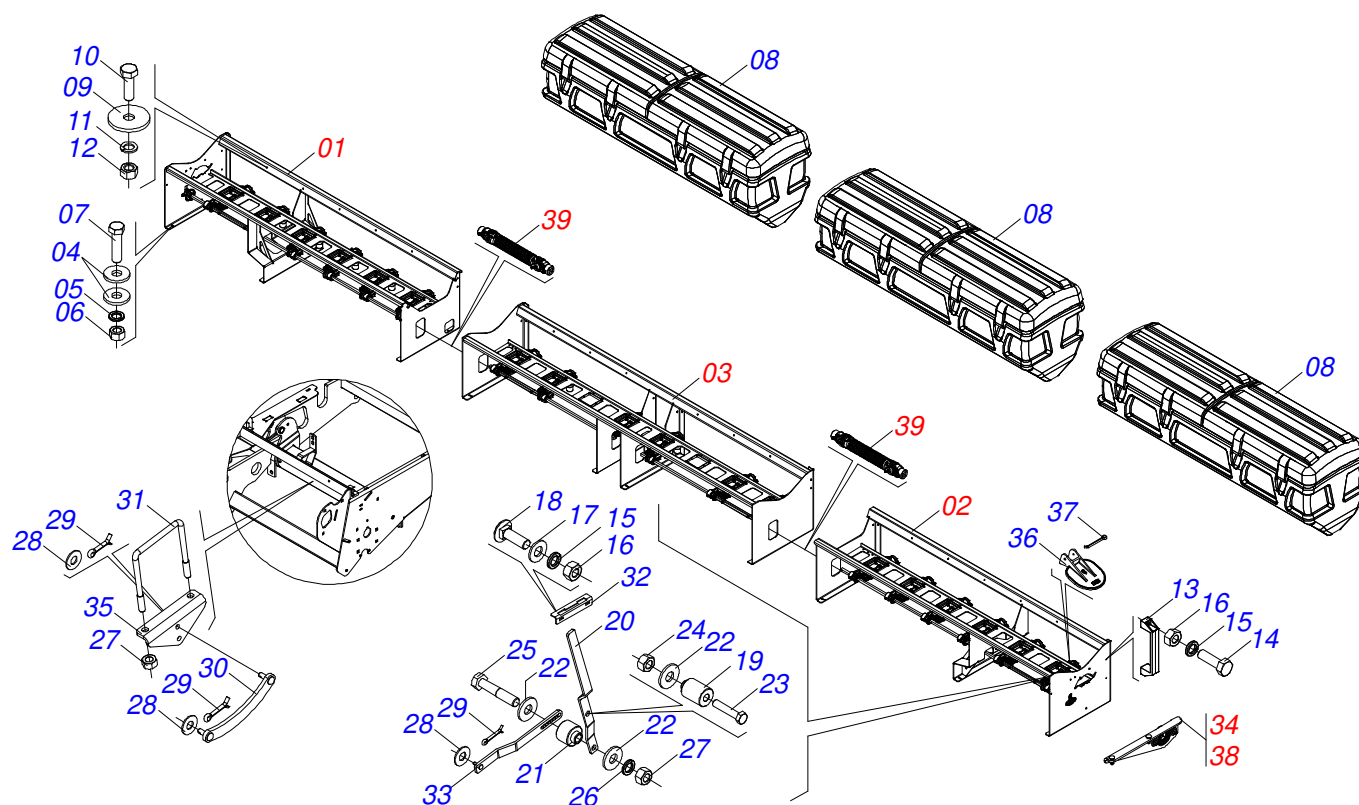


Item	Code	Description	See page	QT
01	0521052712	6850 RIGHT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	79	01
02	0521052721	6850 LEFT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	80	01
03	0521052734	6850/7860 CENTRAL FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	81	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
05	0503010025	3/8 SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0503062391	FERTILIZER HOPPER		03
09	0571019051	FIXER HOPPER WASHER		24
10	0503013751	3/8 UNC X 1.1/4 BOLT		24
11	0503012535	3/8" SPRING WASHER		24
12	0503012531	3/8" INOX NUT		24
13	0503011957	NYLON HANDLE		02
14	0503010371	5/16" X 1" BOLT		04
15	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
16	0503010337	5/16" NUT		08
17	0501010694	FLAT WASHER		04
18	0503011953	5/16" X 1" BOLT		04
19	0551019168	SLEEVE		02
20	0551019160	LEVER		02
21	0551019167	SLEEVE UNION		02
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
23	0503010479	BOLT		02
24	0503011336	1/2" HEX SELF ADJUSTING NUT		06
25	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
26	0503010019	1/2" SPRING WASHER		02
27	0503010060	1/2 UNC G.5 ZN HEX NUT		02
28	0501013518	FLAT WASHER		06
29	0503010140	1/8" X 3/4" COTTERPIN		06


6850 FERTILIZER HOPPER ASSEMBLY

0521052737


Item	Code	Description	See page	QT
30	0511069678	LH LOWER LEVER		02
31	0561016468	FASTENER		02
32	0581012605	GEAR BOX LEVER LOCK		02
33	0521061741	INNTER LEVER		02
34	0521050194	SQUARE AXLE RIGHT SUPPORT	75	01
35	0551019159	LEVER FIXER BODY		02
36	0503034396	FERTILIZER SIDE COVER		15
37	0503010362	1/8 X 1.1/4 COTTERPIN		15
38	0521050195	SQUARE AXLE LEFT SUPPORT	76	01
39	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	77	02

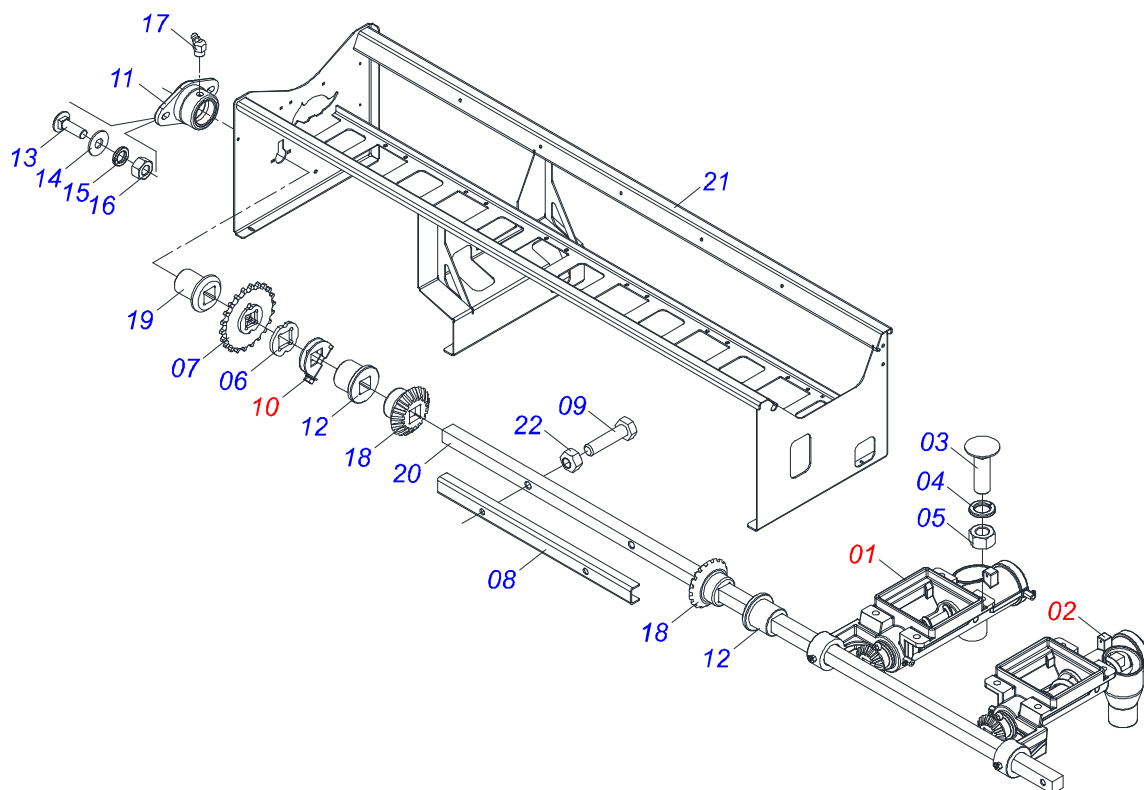


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	02
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	03
03	0501010942	3/8" X 1-1/4" BOLT		20
04	0503011443	3/8" SPRING WASHER		20
05	0503010026	3/8" NUT		20
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
10	0501053788	3/4 SQUARE AXLE FASTENER	72	01
11	0501110392	HOPPER SUPPORT BEARING		01
12	0521012485	GEAR BOX BEARING AGRICUTURAL		01
13	0503011953	5/16" X 1" BOLT		02
14	0521011039	FLAT WASHER		02
15	0503011444	SPRING WASHER		02
16	0503010337	5/16" NUT		02
17	0503010003	1845 GREASE FITTING		01
18	1902010685	18Z CONICAL GEAR		05
19	0503030275	AGRICULTURAL BEARING		05
20	0581016972	AXIS Q 3/4 X 1953		01
21	0521068605	RIGHT FERTILIZER HOPPER SUPPORT		01
22	0503013816	5/16" LOCKNUT		02

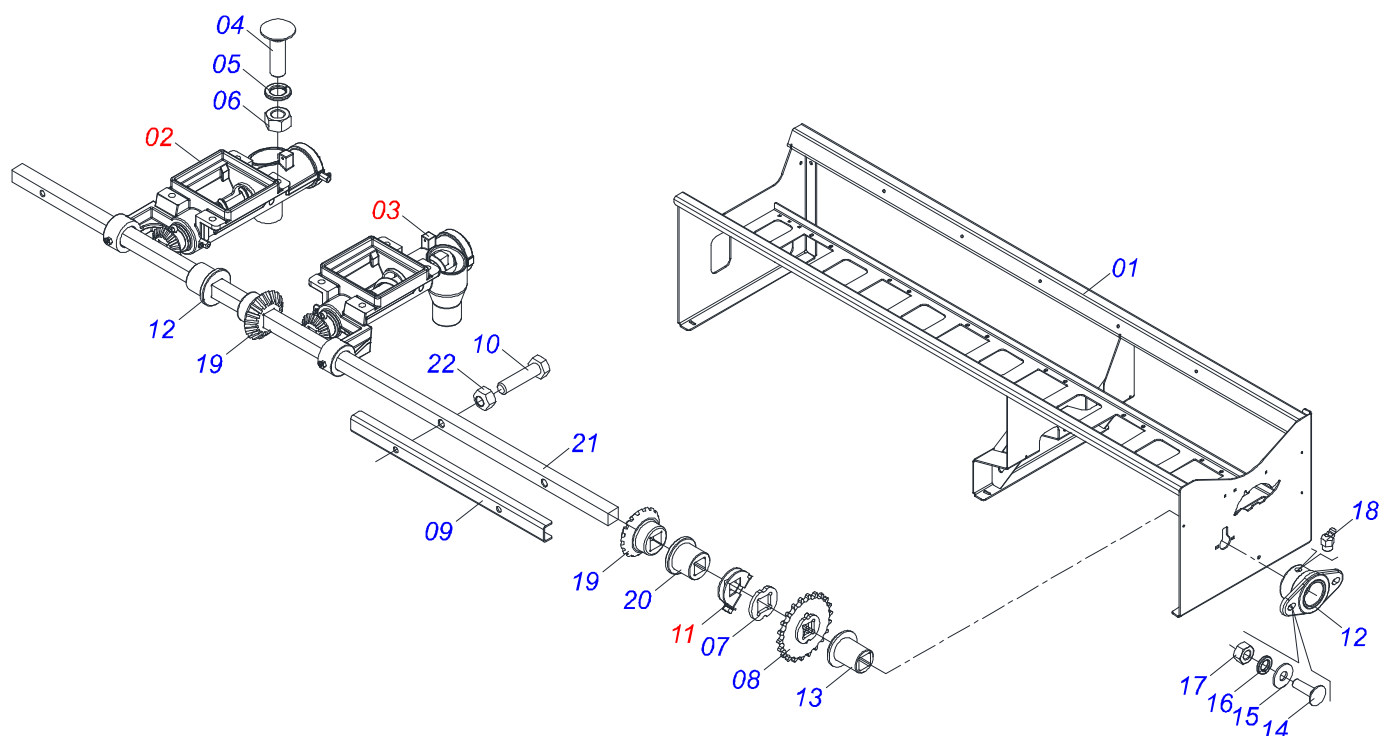

Item	Code	Description	See page	QT
01	0521068615	LEFT FERTILIZER HOPPER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	03
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	02
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
11	0501053788	3/4 SQUARE AXLE FASTENER	72	01
12	0501110392	HOPPER SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0521011039	FLAT WASHER		02
16	0503011444	SPRING WASHER		02
17	0503010337	5/16" NUT		02
18	0503010003	1845 GREASE FITTING		01
19	1902010685	18Z CONICAL GEAR		05
20	0503030275	AGRICULTURAL BEARING		05
21	0581016972	AXIS Q 3/4 X 1953		01
22	0503013816	5/16" LOCKNUT		02

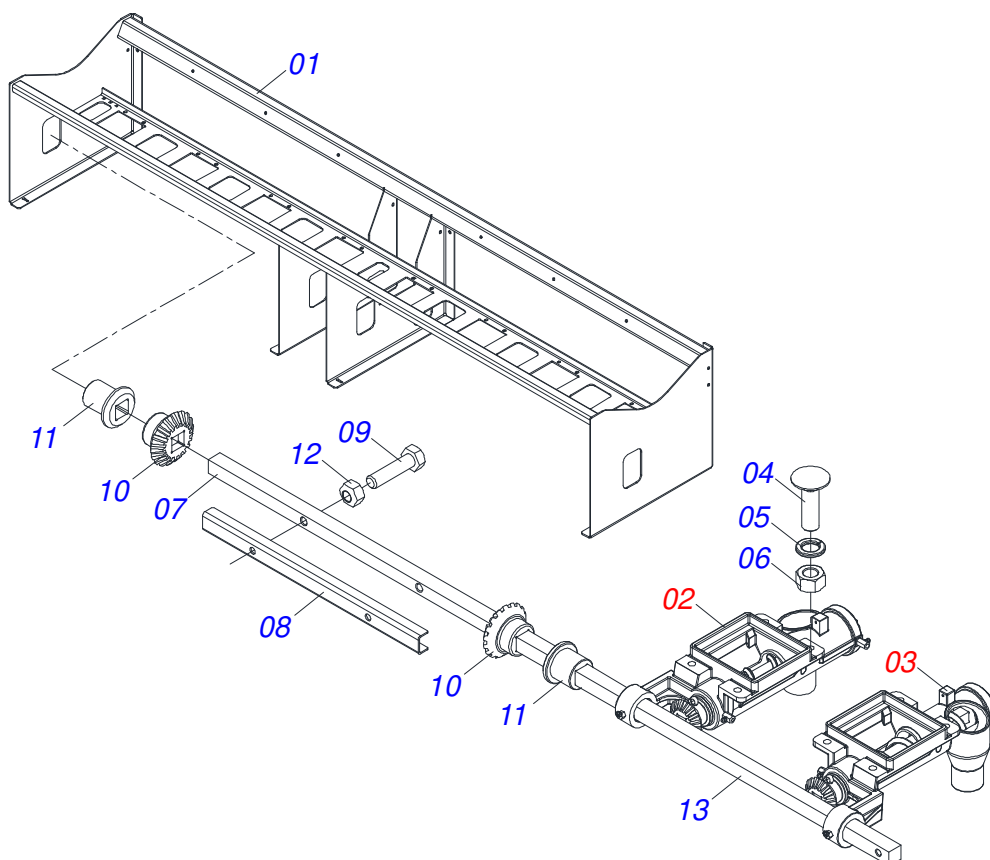


Item	Code	Description	See page	QT
01	0521066913	CENTRAL FERTILIZER HOPPER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	02
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	03
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0581016971	AXIS Q 3/4 X 1063		01
08	0571019828	LOCK AXLE		02
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
10	1902010685	18Z CONICAL GEAR		05
11	0503030275	AGRICULTURAL BEARING		05
12	0503013816	5/16" LOCKNUT		04
13	0581016970	AXIS Q 3/4 X 763		01

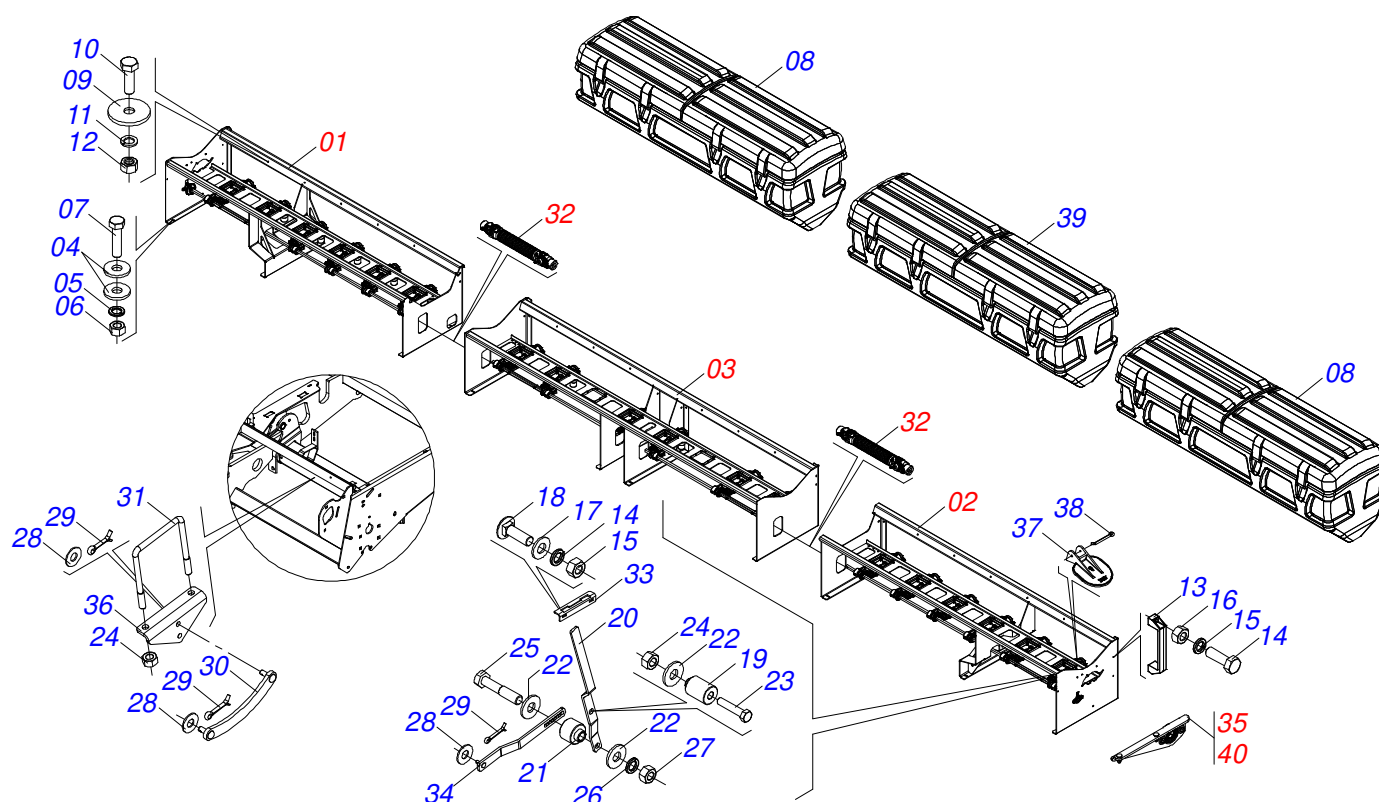


Item	Code	Description	See page	QT
01	0521053778	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 7285	83	01
02	0521053779	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 7285	84	01
03	0521051607	SUPPORT SILO CENTRAL FERTILIZER 6450/7285/7450/8460	73	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
05	0503010025	3/8 SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0503062391	FERTILIZER HOPPER		02
09	0571019051	FIXER HOPPER WASHER		26
10	0503013751	3/8 UNC X 1.1/4 BOLT		26
11	0503012535	3/8" SPRING WASHER		26
12	0503012531	3/8" INOX NUT		26
13	0503011957	NYLON HANDLE		02
14	0503010371	5/16" X 1" BOLT		04
15	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
16	0503010337	5/16" NUT		08
17	0501010694	FLAT WASHER		04
18	0503011953	5/16" X 1" BOLT		04
19	0551019168	SLEEVE		02
20	0551019160	LEVER		02
21	0551019167	SLEEVE UNION		02
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
23	0503010479	BOLT		02
24	0503011336	1/2" HEX SELF ADJUSTING NUT		06
25	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
26	0503010019	1/2" SPRING WASHER		02
27	0503010060	1/2 UNC G.5 ZN HEX NUT		02
28	0501013518	FLAT WASHER		06
29	0503010140	1/8" X 3/4" COTTERPIN		06


Item	Code	Description	See page	QT
30	0511069678	LH LOWER LEVER		02
31	0561016468	FASTENER		02
32	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	77	02
33	0581012605	GEAR BOX LEVER LOCK		02
34	0521061741	INNTER LEVER		02
35	0521050194	SQUARE AXLE RIGHT SUPPORT	75	01
36	0551019159	LEVER FIXER BODY		02
37	0503034396	FERTILIZER SIDE COVER		15
38	0503010362	1/8 X 1.1/4 COTTERPIN		15
39	0503062589	FERTILIZER HOPPER MOUNTED		01
40	0521050195	SQUARE AXLE LEFT SUPPORT	76	01

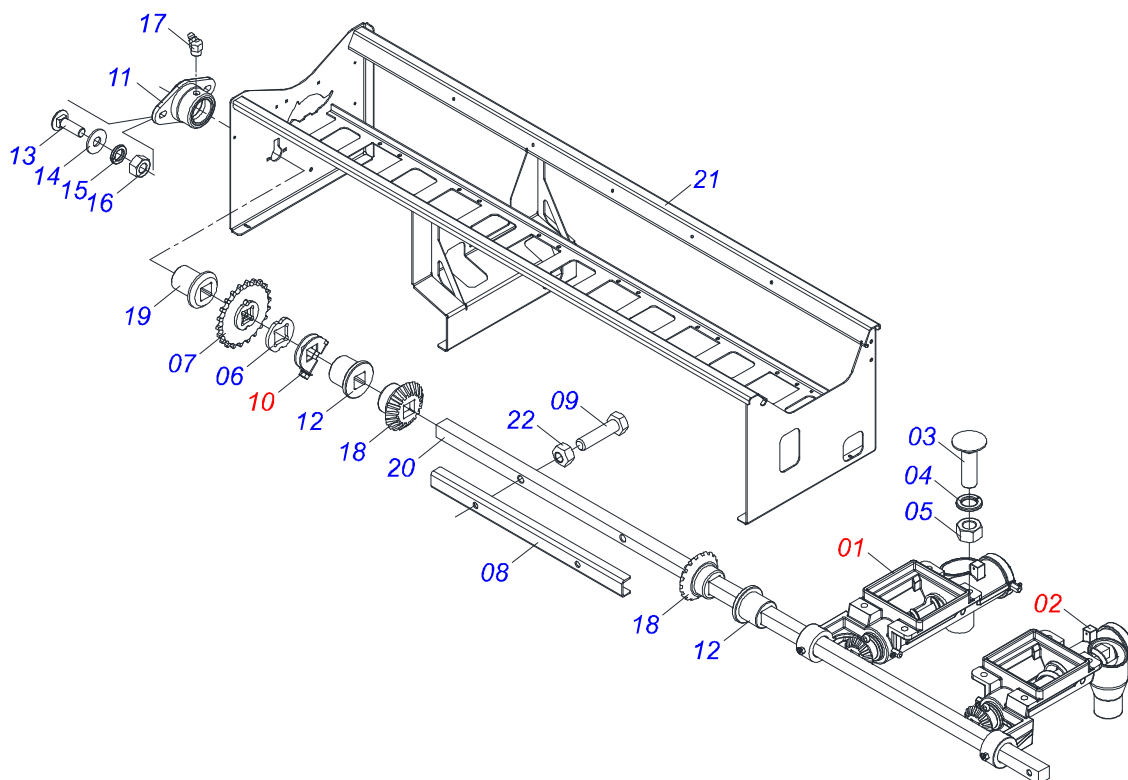

Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	02
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	03
03	0501010942	3/8" X 1-1/4" BOLT		20
04	0503011443	3/8" SPRING WASHER		20
05	0503010026	3/8" NUT		20
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
10	0501053788	3/4 SQUARE AXLE FASTENER	72	01
11	0501110392	HOPPER SUPPORT BEARING		01
12	0503030275	AGRICULTURAL BEARING		05
13	0503011953	5/16" X 1" BOLT		02
14	0521011039	FLAT WASHER		02
15	0503011444	SPRING WASHER		02
16	0503010337	5/16" NUT		02
17	0503010003	1845 GREASE FITTING		01
18	1902010685	18Z CONICAL GEAR		05
19	0521012485	GEAR BOX BEARING AGRICUTURAL		01
20	0581018078	SQUARE AXLE 3/4 X 1944.5		01
21	0521069062	SILO FERTILIZER RIGHT SUPPORT		01
22	0503013816	5/16" LOCKNUT		02

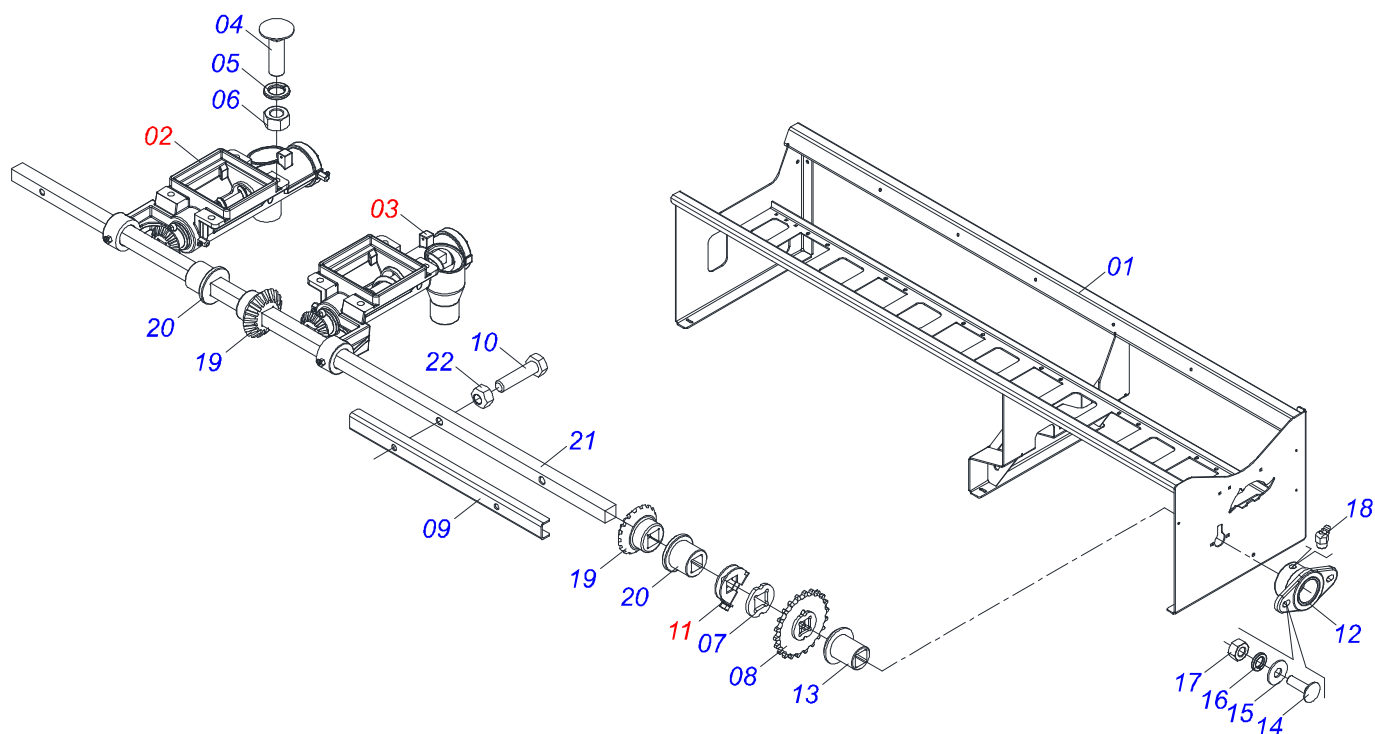


Item	Code	Description	See page	QT
01	0521069063	SILO FERTILIZER LEFT SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	03
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	02
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
11	0501053788	3/4 SQUARE AXLE FASTENER	72	01
12	0501110392	HOPPER SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0521011039	FLAT WASHER		02
16	0503011444	SPRING WASHER		02
17	0503010337	5/16" NUT		02
18	0503010003	1845 GREASE FITTING		01
19	1902010685	18Z CONICAL GEAR		05
20	0503030275	AGRICULTURAL BEARING		05
21	0581018078	SQUARE AXLE 3/4 X 1944.5		01
22	0503013816	5/16" LOCKNUT		02

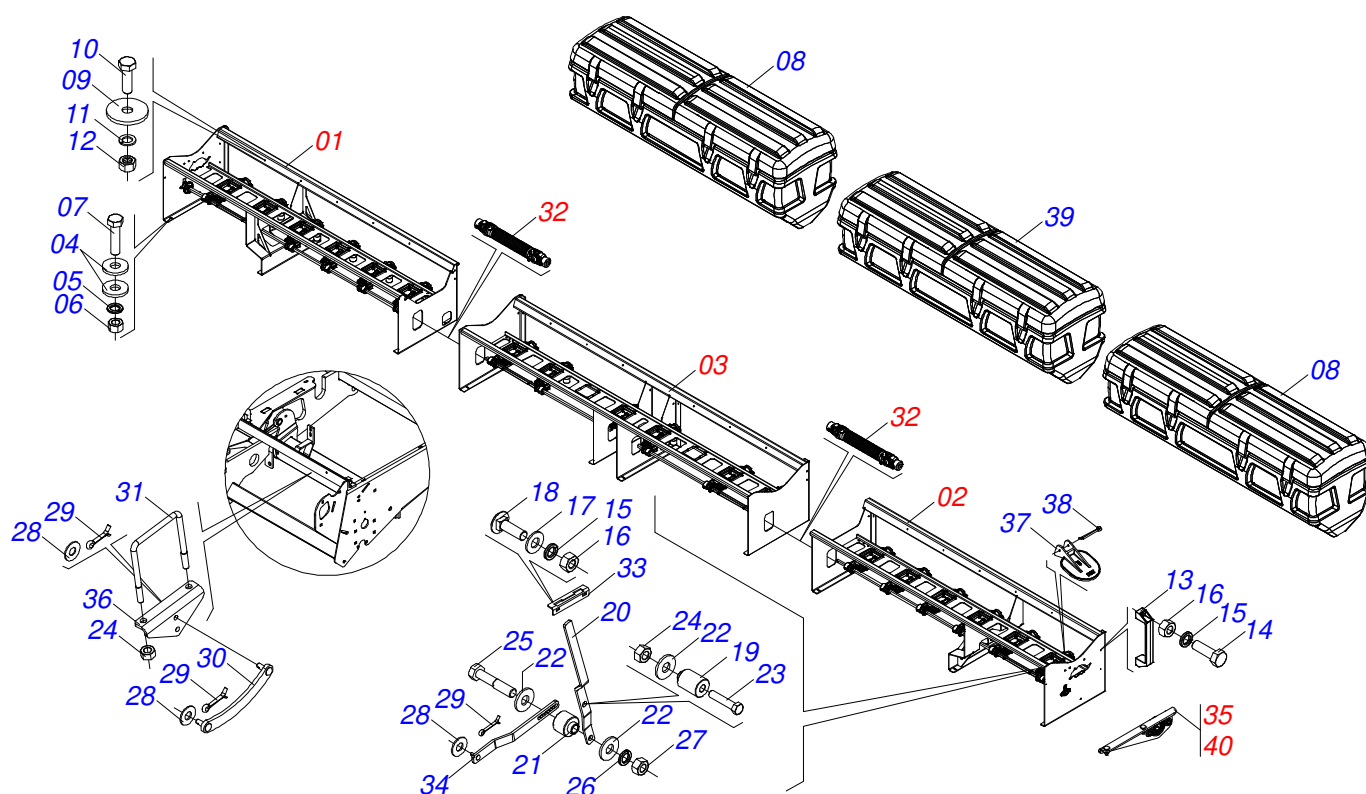


Item	Code	Description	See page	QT
01	0521052620	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 7450	86	01
02	0521052621	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 7450	87	01
03	0521051607	SUPPORT SILO CENTRAL FERTILIZER 6450/7285/7450/8460	73	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
05	0503010025	3/8 SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0503062391	FERTILIZER HOPPER		02
09	0571019051	FIXER HOPPER WASHER		26
10	0503013751	3/8 UNC X 1.1/4 BOLT		26
11	0503012535	3/8" SPRING WASHER		26
12	0503012531	3/8" INOX NUT		26
13	0503011957	NYLON HANDLE		02
14	0503010371	5/16" X 1" BOLT		04
15	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
16	0503010337	5/16" NUT		08
17	0501010694	FLAT WASHER		04
18	0503011953	5/16" X 1" BOLT		04
19	0551019168	SLEEVE		02
20	0551019160	LEVER		02
21	0551019167	SLEEVE UNION		02
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
23	0503010479	BOLT		02
24	0503011336	1/2" HEX SELF ADJUSTING NUT		06
25	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
26	0503010019	1/2" SPRING WASHER		02
27	0503010060	1/2 UNC G.5 ZN HEX NUT		02
28	0501013518	FLAT WASHER		06
29	0503010140	1/8" X 3/4" COTTERPIN		06


Item	Code	Description	See page	QT
30	0511069678	LH LOWER LEVER		02
31	0561016468	FASTENER		02
32	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	77	02
33	0581012605	GEAR BOX LEVER LOCK		02
34	0521061741	INNTER LEVER		02
35	0521050194	SQUARE AXLE RIGHT SUPPORT	75	01
36	0551019159	LEVER FIXER BODY		02
37	0503034396	FERTILIZER SIDE COVER		15
38	0503010362	1/8 X 1.1/4 COTTERPIN		15
39	0503062589	FERTILIZER HOPPER MOUNTED		01
40	0521050195	SQUARE AXLE LEFT SUPPORT	76	01

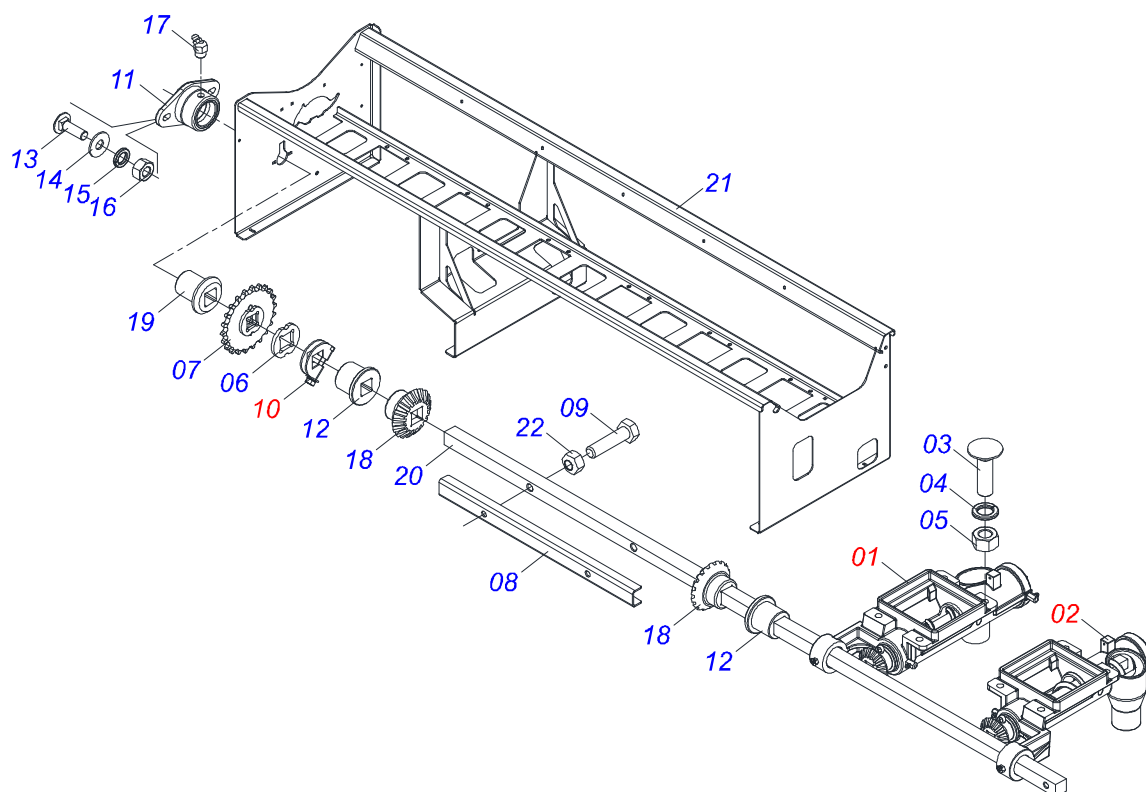

Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	02
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	03
03	0501010942	3/8" X 1-1/4" BOLT		20
04	0503011443	3/8" SPRING WASHER		20
05	0503010026	3/8" NUT		20
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
10	0501053788	3/4 SQUARE AXLE FASTENER	72	01
11	0501110392	HOPPER SUPPORT BEARING		01
12	0503030275	AGRICULTURAL BEARING		05
13	0503011953	5/16" X 1" BOLT		02
14	0521011039	FLAT WASHER		02
15	0503011444	SPRING WASHER		02
16	0503010337	5/16" NUT		02
17	0503010003	1845 GREASE FITTING		01
18	1902010685	18Z CONICAL GEAR		05
19	0521012485	GEAR BOX BEARING AGRICUTURAL		01
20	0581018078	SQUARE AXLE 3/4 X 1944.5		01
21	0521069062	SILO FERTILIZER RIGHT SUPPORT		01
22	0503013816	5/16" LOCKNUT		02

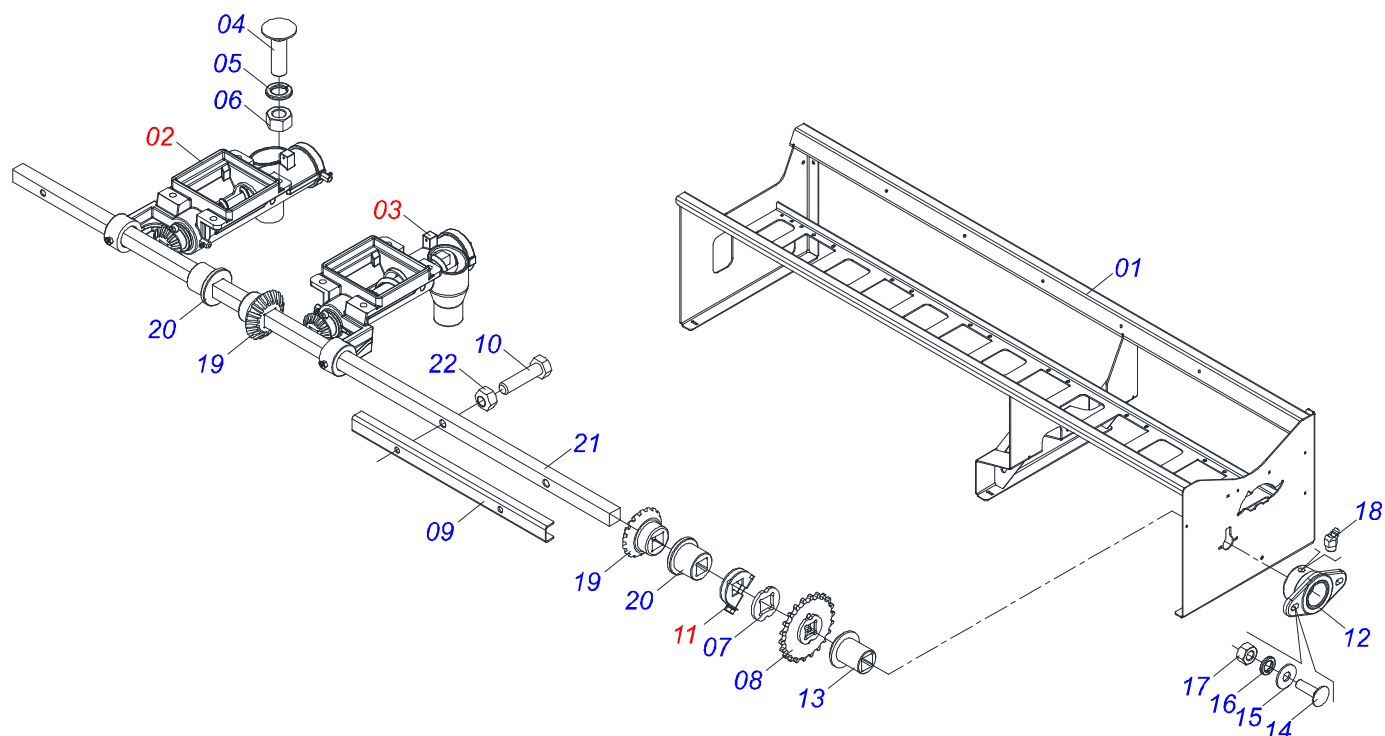

Item	Code	Description	See page	QT
01	0521068563	LEFT SILO FERTILIZER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	03
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	02
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
11	0501053788	3/4 SQUARE AXLE FASTENER	72	01
12	0501110392	HOPPER SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0521011039	FLAT WASHER		02
16	0503011444	SPRING WASHER		02
17	0503010337	5/16" NUT		02
18	0503010003	1845 GREASE FITTING		01
19	1902010685	18Z CONICAL GEAR		05
20	0503030275	AGRICULTURAL BEARING		05
21	0581016776	SQUARE AXLE 3/4 X 2028		01
22	0503013816	5/16" LOCKNUT		02

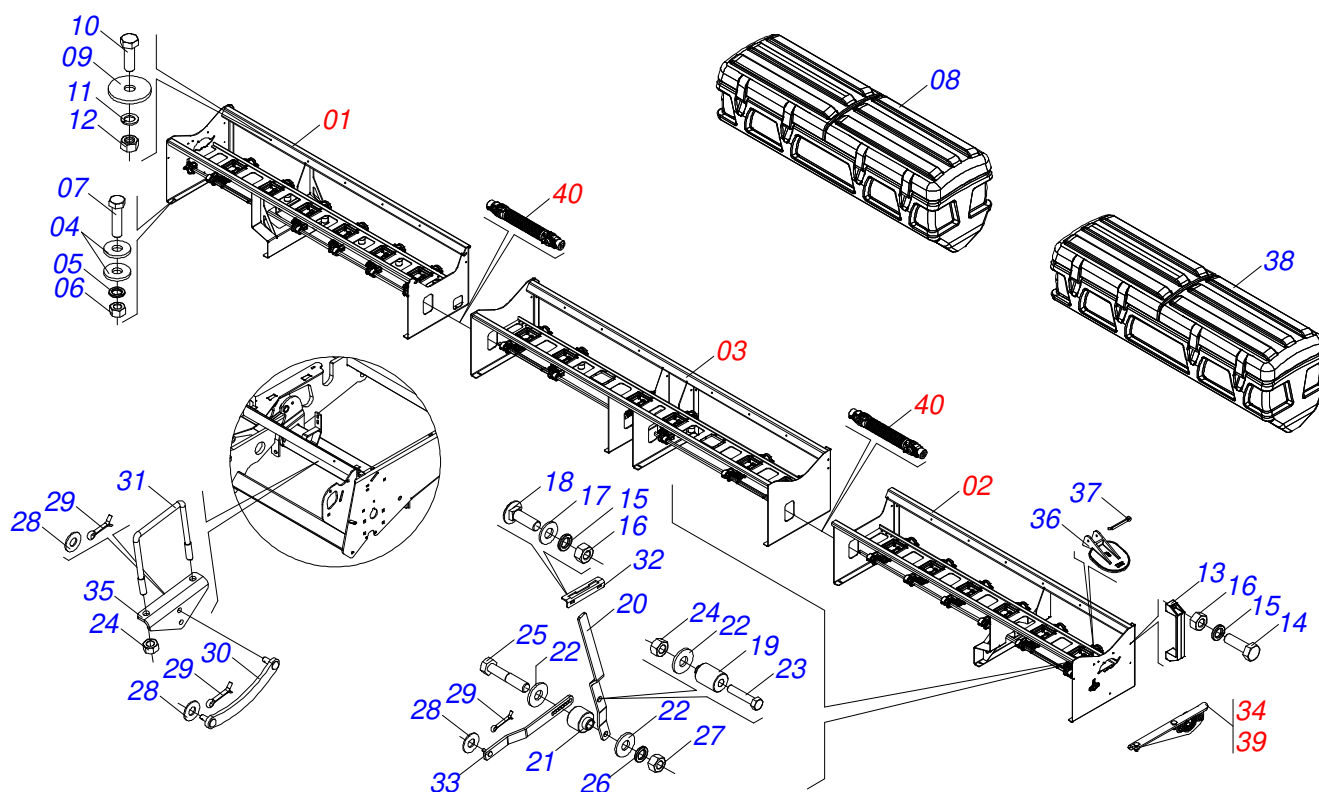


Item	Code	Description	See page	QT
01	0521052711	7860/7960 RIGHT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	89	01
02	0521052720	7820/7960 LEFT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	90	01
03	0521052732	7960 CENTRAL FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	91	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
05	0503010025	3/8 SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0503062391	FERTILIZER HOPPER		01
09	0571019051	FIXER HOPPER WASHER		28
10	0503013751	3/8 UNC X 1.1/4 BOLT		28
11	0503012535	3/8" SPRING WASHER		28
12	0503012531	3/8" INOX NUT		28
13	0503011957	NYLON HANDLE		02
14	0503010371	5/16" X 1" BOLT		04
15	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
16	0503010337	5/16" NUT		08
17	0501010694	FLAT WASHER		04
18	0503011953	5/16" X 1" BOLT		04
19	0551019168	SLEEVE		02
20	0551019160	LEVER		02
21	0551019167	SLEEVE UNION		02
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
23	0503010479	BOLT		02
24	0503011336	1/2" HEX SELF ADJUSTING NUT		06
25	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
26	0503010019	1/2" SPRING WASHER		02
27	0503010060	1/2 UNC G.5 ZN HEX NUT		02
28	0501013518	FLAT WASHER		06
29	0503010140	1/8" X 3/4" COTTERPIN		06


7960 FERTILIZER HOPPER ASSEMBLY

0521052738


Item	Code	Description	See page	QT
30	0511069678	LH LOWER LEVER		02
31	0561016468	FASTENER		02
32	0581012605	GEAR BOX LEVER LOCK		02
33	0521061741	INNTER LEVER		02
34	0521050194	SQUARE AXLE RIGHT SUPPORT	75	01
35	0551019159	LEVER FIXER BODY		02
36	0503034396	FERTILIZER SIDE COVER		16
37	0503010362	1/8 X 1.1/4 COTTERPIN		16
38	0503062589	FERTILIZER HOPPER MOUNTED		02
39	0521050195	SQUARE AXLE LEFT SUPPORT	76	01
40	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	77	02

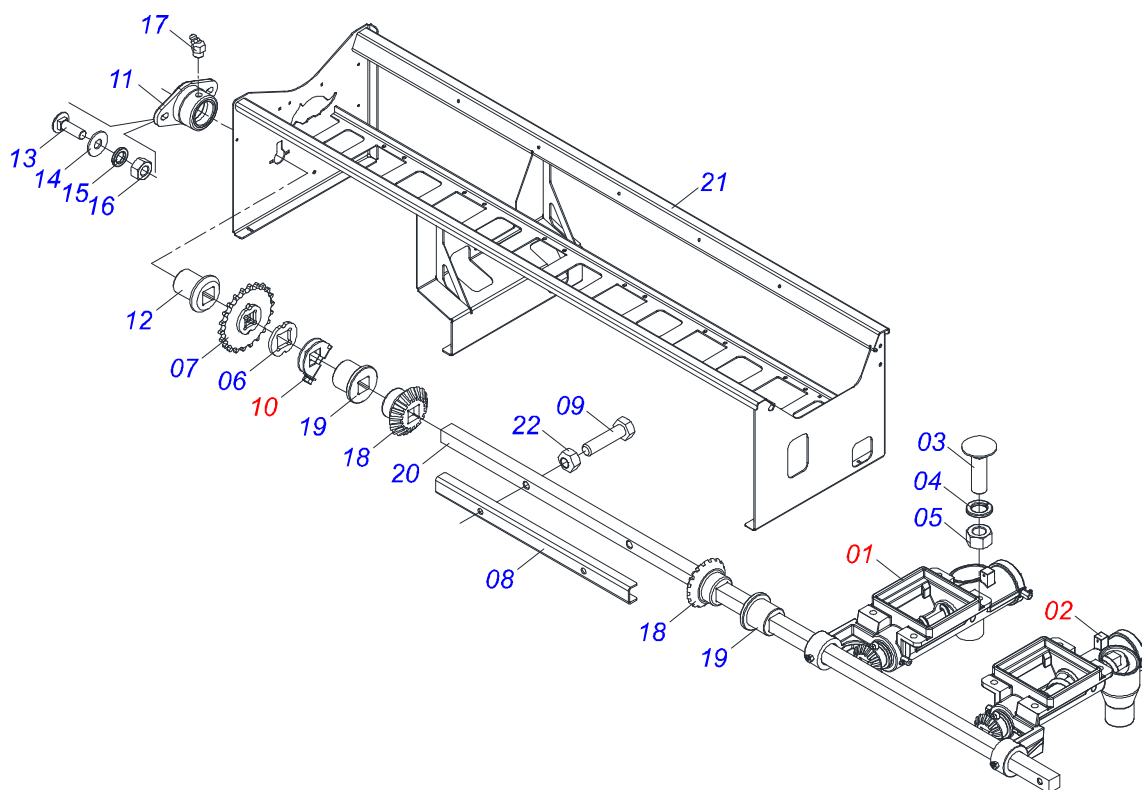


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	05
03	0501010942	3/8" X 1-1/4" BOLT		24
04	0503011443	3/8" SPRING WASHER		24
05	0503010026	3/8" NUT		24
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
10	0501053788	3/4 SQUARE AXLE FASTENER	72	01
11	0501110392	HOPPER SUPPORT BEARING		01
12	0521012485	GEAR BOX BEARING AGRICUTURAL		01
13	0503011953	5/16" X 1" BOLT		02
14	0521011039	FLAT WASHER		02
15	0503011444	SPRING WASHER		02
16	0503010337	5/16" NUT		02
17	0503010003	1845 GREASE FITTING		01
18	1902010685	18Z CONICAL GEAR		06
19	0503030275	AGRICULTURAL BEARING		06
20	0581016969	SQUARE AXLE 3/4 X 2485		01
21	0521068604	RIGHT FERTILIZER HOPPER SUPPORT		01
22	0503013816	5/16" LOCKNUT		02

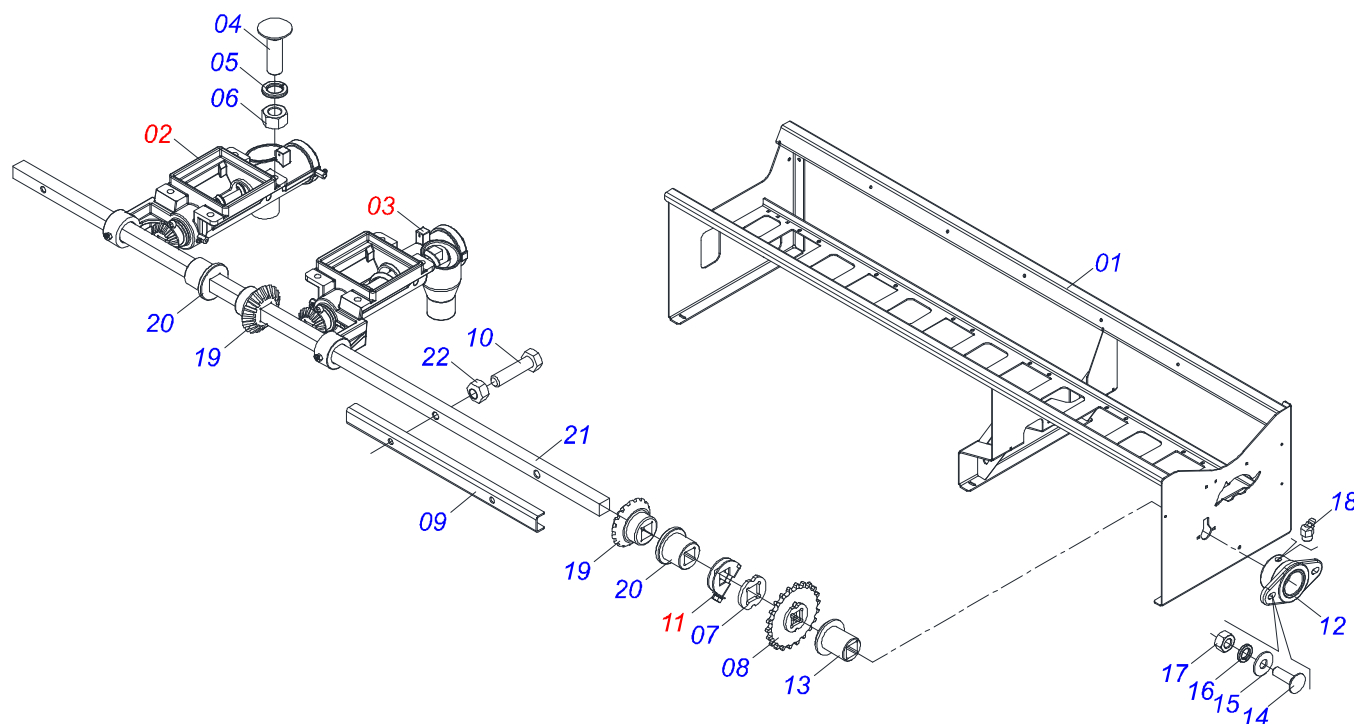

Item	Code	Description	See page	QT
01	0521068614	LEFT FERTILIZER HOPPER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	05
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	01
04	0501010942	3/8" X 1-1/4" BOLT		24
05	0503011443	3/8" SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
11	0501053788	3/4 SQUARE AXLE FASTENER	72	01
12	0501110392	HOPPER SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0521011039	FLAT WASHER		02
16	0503011444	SPRING WASHER		02
17	0503010337	5/16" NUT		02
18	0503010003	1845 GREASE FITTING		01
19	1902010685	18Z CONICAL GEAR		06
20	0503030275	AGRICULTURAL BEARING		06
21	0581016969	SQUARE AXLE 3/4 X 2485		01
22	0503013816	5/16" LOCKNUT		02

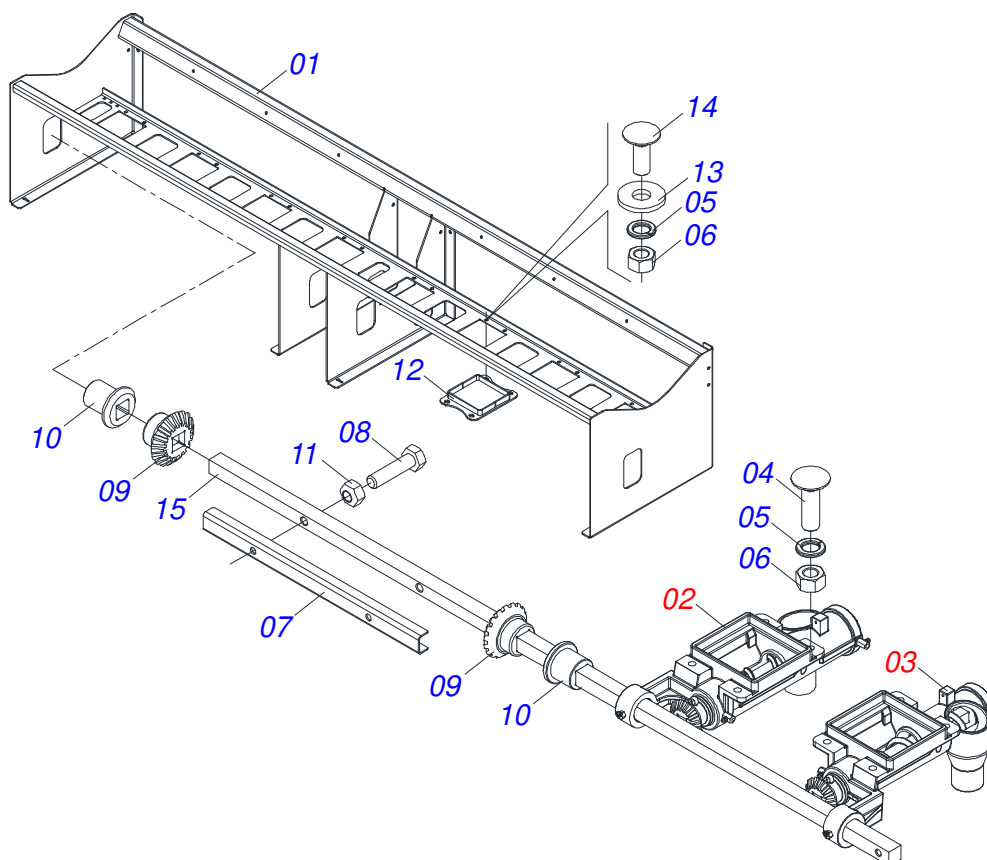


Item	Code	Description	See page	QT
01	0521066981	CENTRAL FERTILIZER HOPPER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	02
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	02
04	0501010942	3/8" X 1-1/4" BOLT		16
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0571019828	LOCK AXLE		02
08	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
09	1902010685	18Z CONICAL GEAR		04
10	0503030275	AGRICULTURAL BEARING		04
11	0503013816	5/16" LOCKNUT		04
12	0511062163	FERTILIZER BEAM LOWER COVER		01
13	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
14	0501011643	3/8 X 1" BOLT		04
15	0581016973	SQUARE AXLE 3/4 X 790		02

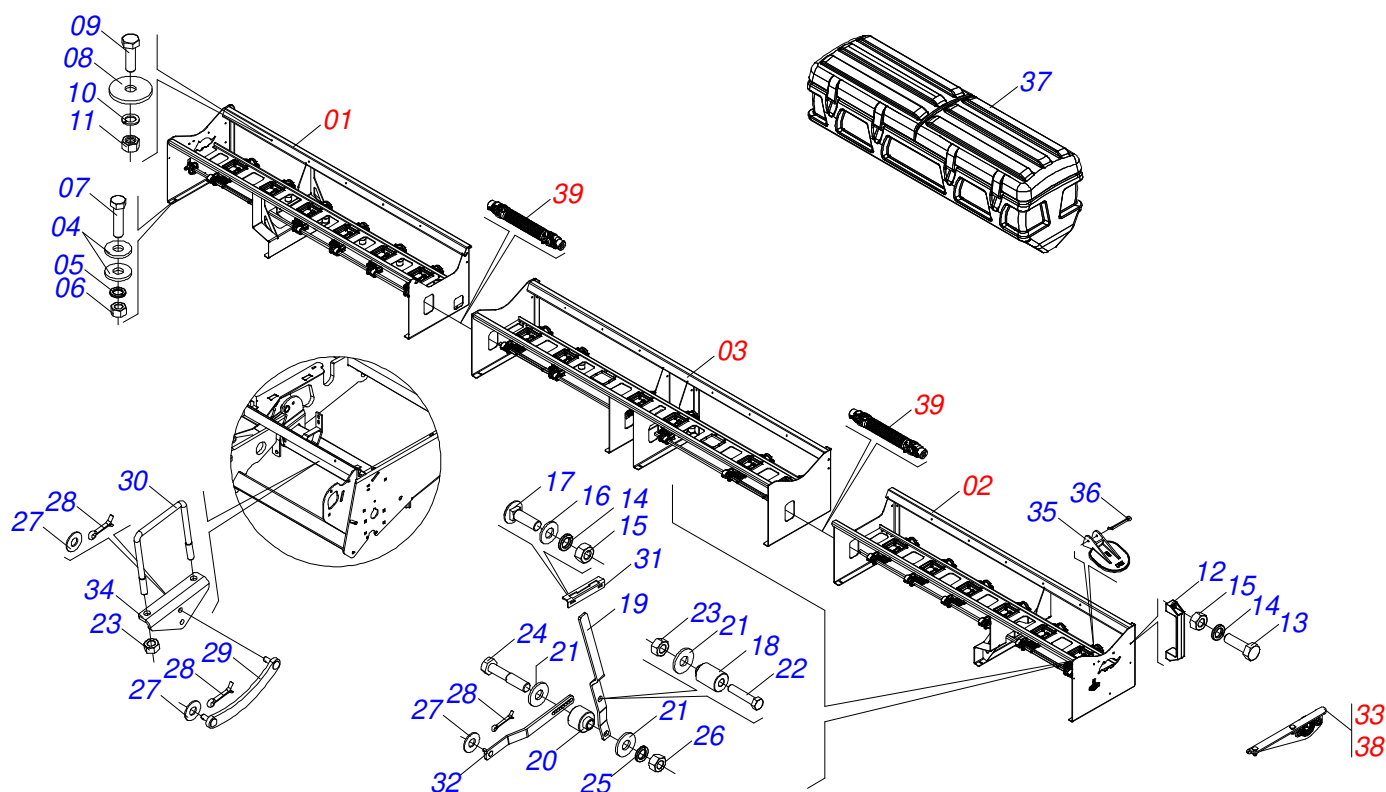


Item	Code	Description	See page	QT
01	0521052709	8460/8960/9460 RIGHT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	93	01
02	0521052718	8460/8960/9460 LEFT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	94	01
03	0521051607	SUPPORT SILO CENTRAL FERTILIZER 6450/7285/7450/8460	73	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
05	0503010025	3/8 SPRING WASHER		04
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0571019051	FIXER HOPPER WASHER		28
09	0503013751	3/8 UNC X 1.1/4 BOLT		28
10	0503012535	3/8" SPRING WASHER		28
11	0503012531	3/8" INOX NUT		28
12	0503011957	NYLON HANDLE		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0551019168	SLEEVE		02
19	0551019160	LEVER		02
20	0551019167	SLEEVE UNION		02
21	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
22	0503010479	BOLT		02
23	0503011336	1/2" HEX SELF ADJUSTING NUT		06
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		02
26	0503010060	1/2 UNC G.5 ZN HEX NUT		02
27	0501013518	FLAT WASHER		06
28	0503010140	1/8" X 3/4" COTTERPIN		06
29	0511069678	LH LOWER LEVER		02


Item	Code	Description	See page	QT
30	0561016468	FASTENER		02
31	0581012605	GEAR BOX LEVER LOCK		02
32	0521061741	INNTER LEVER		02
33	0521050194	SQUARE AXLE RIGHT SUPPORT	75	01
34	0551019159	LEVER FIXER BODY		02
35	0503034396	FERTILIZER SIDE COVER		17
36	0503010362	1/8 X 1.1/4 COTTERPIN		17
37	0503062589	FERTILIZER HOPPER MOUNTED		03
38	0521050195	SQUARE AXLE LEFT SUPPORT	76	01
39	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	77	02

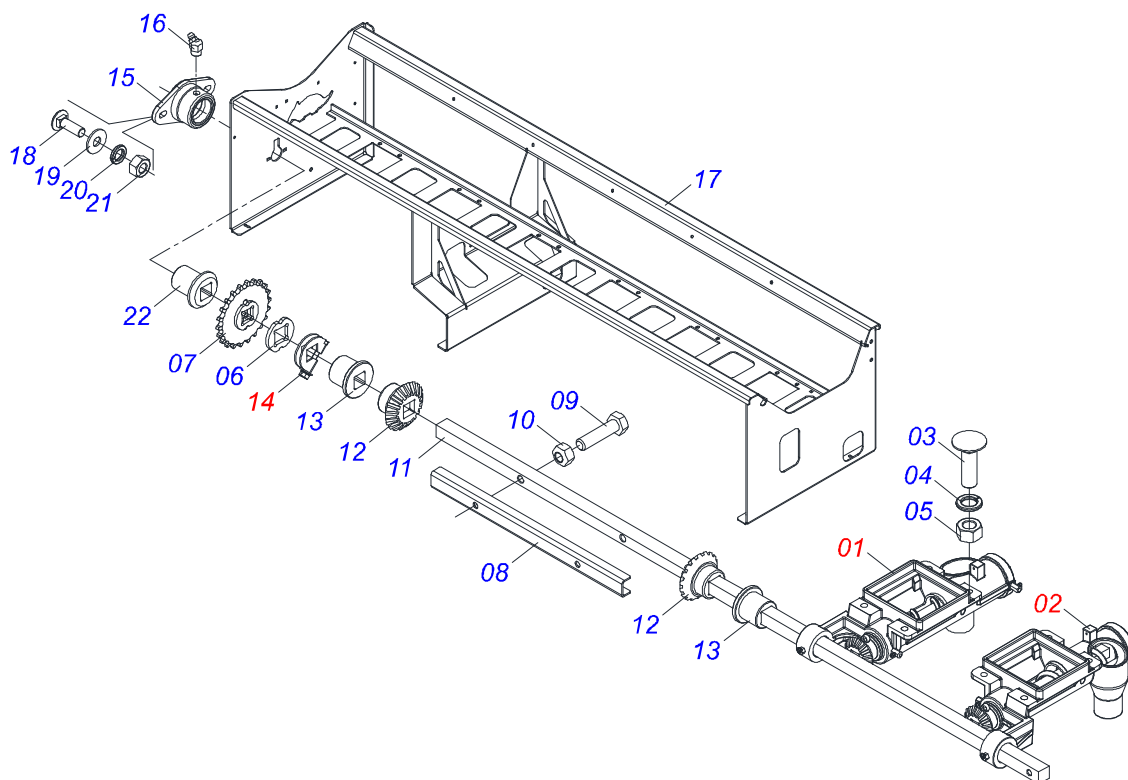

Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	05
03	0501010942	3/8" X 1-1/4" BOLT		24
04	0503010025	3/8 SPRING WASHER		24
05	0503010026	3/8" NUT		24
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
10	0503013816	5/16" LOCKNUT		02
11	0581016967	SQUARE SHAFT		01
12	1902010685	18Z CONICAL GEAR		06
13	0503030275	AGRICULTURAL BEARING		06
14	0501053788	3/4 SQUARE AXLE FASTENER	72	01
15	0501110392	HOPPER SUPPORT BEARING		01
16	0503010003	1845 GREASE FITTING		01
17	0521068602	SUPPORT RIGHT SILO FERTILIZER WITH DISTRIBUTOR		01
18	0503011953	5/16" X 1" BOLT		02
19	0521011039	FLAT WASHER		02
20	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
21	0503010337	5/16" NUT		02
22	0521012485	GEAR BOX BEARING AGRICUTURAL		01

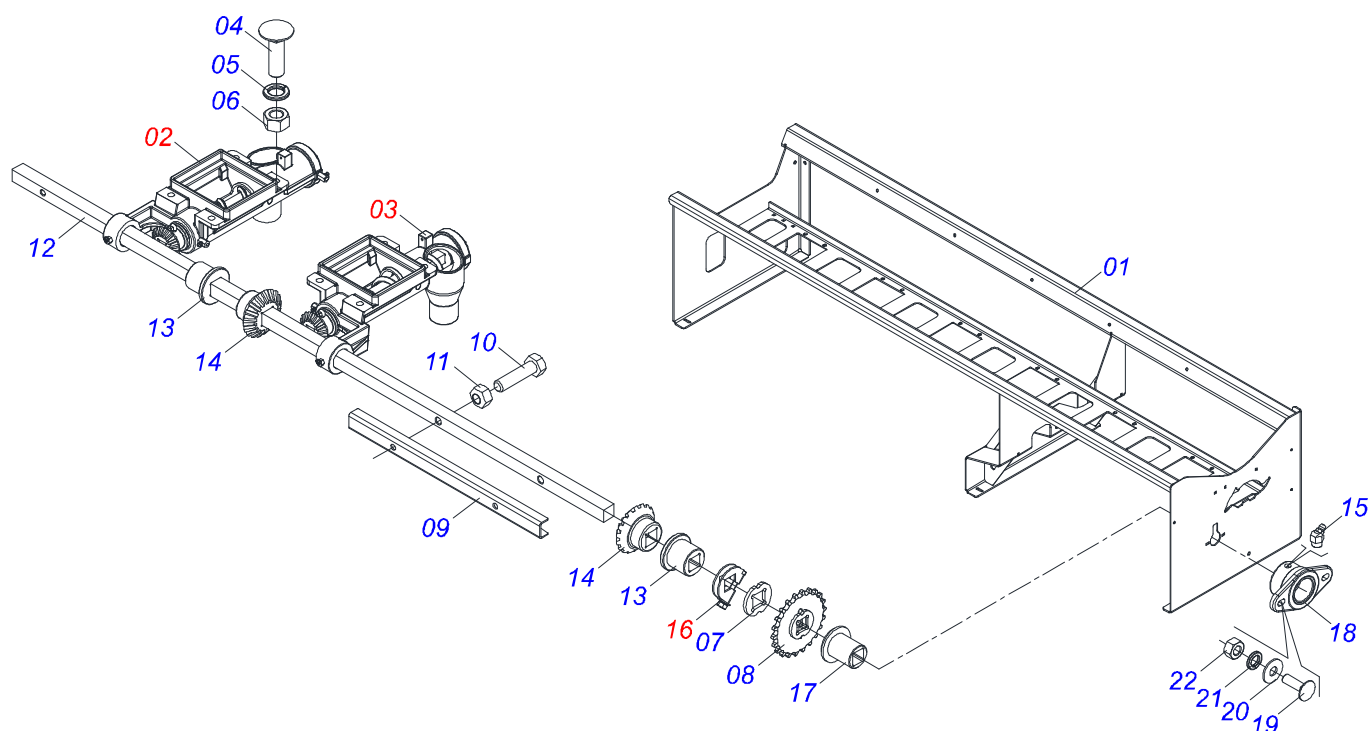


Item	Code	Description	See page	QT
01	0521068612	SILO FERTILIZER SUPPORT WITH DISTRIBUTOR		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	05
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	01
04	0501010942	3/8" X 1-1/4" BOLT		24
05	0503010025	3/8 SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
11	0503010337	5/16" NUT		02
12	0581016967	SQUARE SHAFT		01
13	0503030275	AGRICULTURAL BEARING		06
14	1902010685	18Z CONICAL GEAR		06
15	0503010003	1845 GREASE FITTING		01
16	0501053788	3/4 SQUARE AXLE FASTENER	72	01
17	0521012485	GEAR BOX BEARING AGRICUTURAL		01
18	0501110392	HOPPER SUPPORT BEARING		01
19	0503011953	5/16" X 1" BOLT		02
20	0521011039	FLAT WASHER		02
21	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
22	0503013816	5/16" LOCKNUT		02

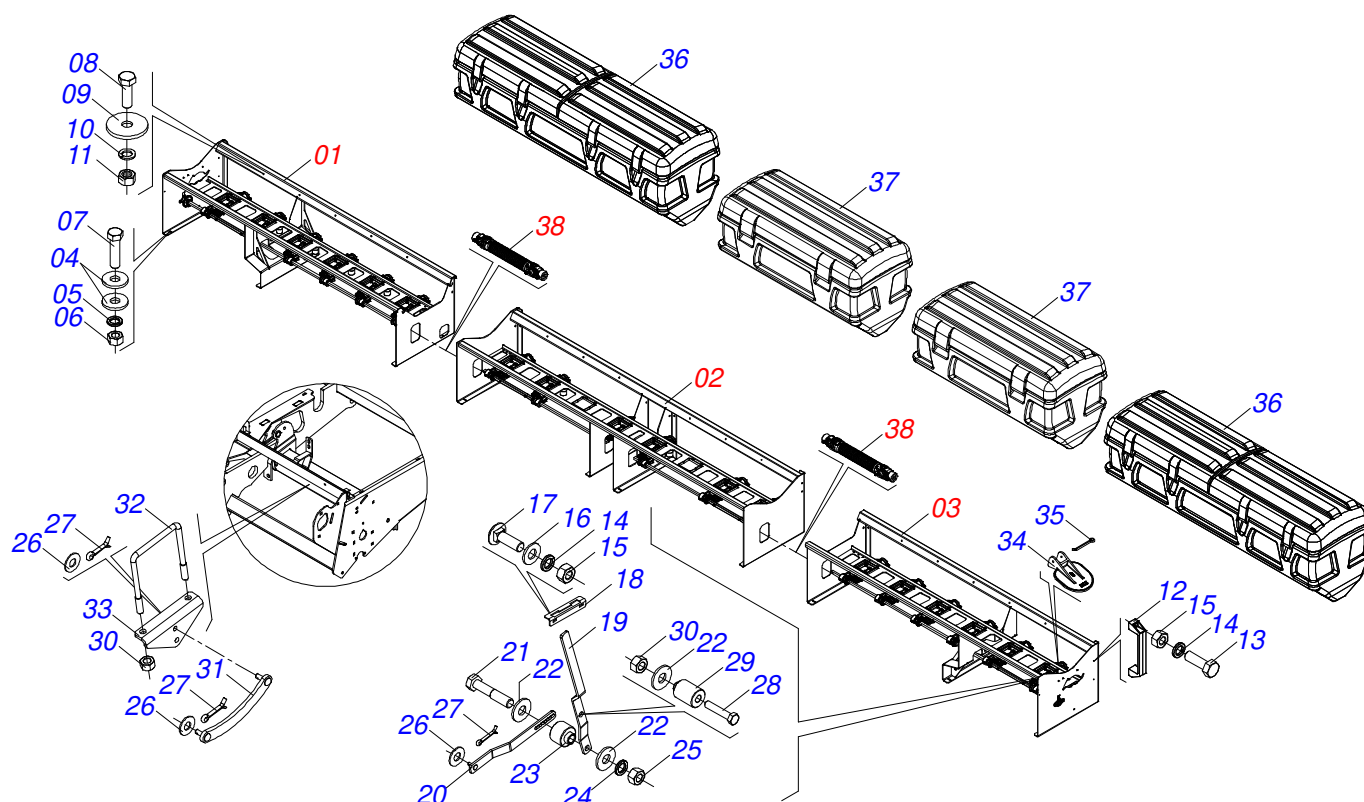


Item	Code	Description	See page	QT
01	0521052709	8460/8960/9460 RIGHT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	93	01
02	0521052731	8960 CENTRAL FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	96	01
03	0521052718	8460/8960/9460 LEFT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	94	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
05	0503010025	3/8 SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0503013751	3/8 UNC X 1.1/4 BOLT		32
09	0571019051	FIXER HOPPER WASHER		32
10	0503012535	3/8" SPRING WASHER		32
11	0503012531	3/8" INOX NUT		32
12	0503011957	NYLON HANDLE		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0581012605	GEAR BOX LEVER LOCK		02
19	0551019160	LEVER		02
20	0521061741	INNER LEVER		02
21	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
23	0551019167	SLEEVE UNION		02
24	0503010019	1/2" SPRING WASHER		02
25	0503010060	1/2 UNC G.5 ZN HEX NUT		02
26	0501013518	FLAT WASHER		06
27	0503010140	1/8" X 3/4" COTTERPIN		06
28	0503010479	BOLT		02
29	0551019168	SLEEVE		02

Item	Code	Description	See page	QT
30	0503011336	1/2" HEX SELF ADJUSTING NUT		06
31	0511069678	LH LOWER LEVER		02
32	0561016468	FASTENER		02
33	0551019159	LEVER FIXER BODY		02
34	0503034396	FERTILIZER SIDE COVER		18
35	0503010362	1/8 X 1.1/4 COTTERPIN		18
36	0503062589	FERTILIZER HOPPER MOUNTED		02
37	0503062362	FERTILIZER HOPPER		02
38	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	77	02

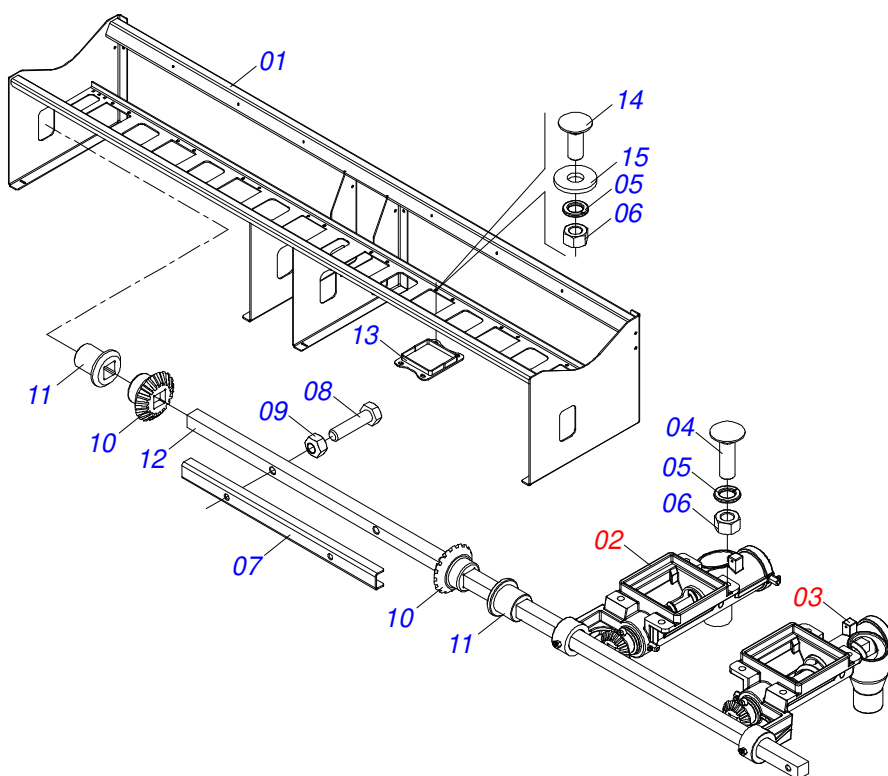


Item	Code	Description	See page	QT
01	0521068620	SUPPORT CENTRAL SILO FERTILIZER		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	03
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	03
04	0501010942	3/8" X 1-1/4" BOLT		24
05	0503011443	3/8" SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0571019828	LOCK AXLE		02
08	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
09	0503013816	5/16" LOCKNUT		04
10	1902010685	18Z CONICAL GEAR		06
11	0503030275	AGRICULTURAL BEARING		06
12	0581016966	AXIS Q 3/4 X 1371		02
13	0511062163	FERTILIZER BEAM LOWER COVER		02
14	0501011643	3/8 X 1" BOLT		08
15	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08

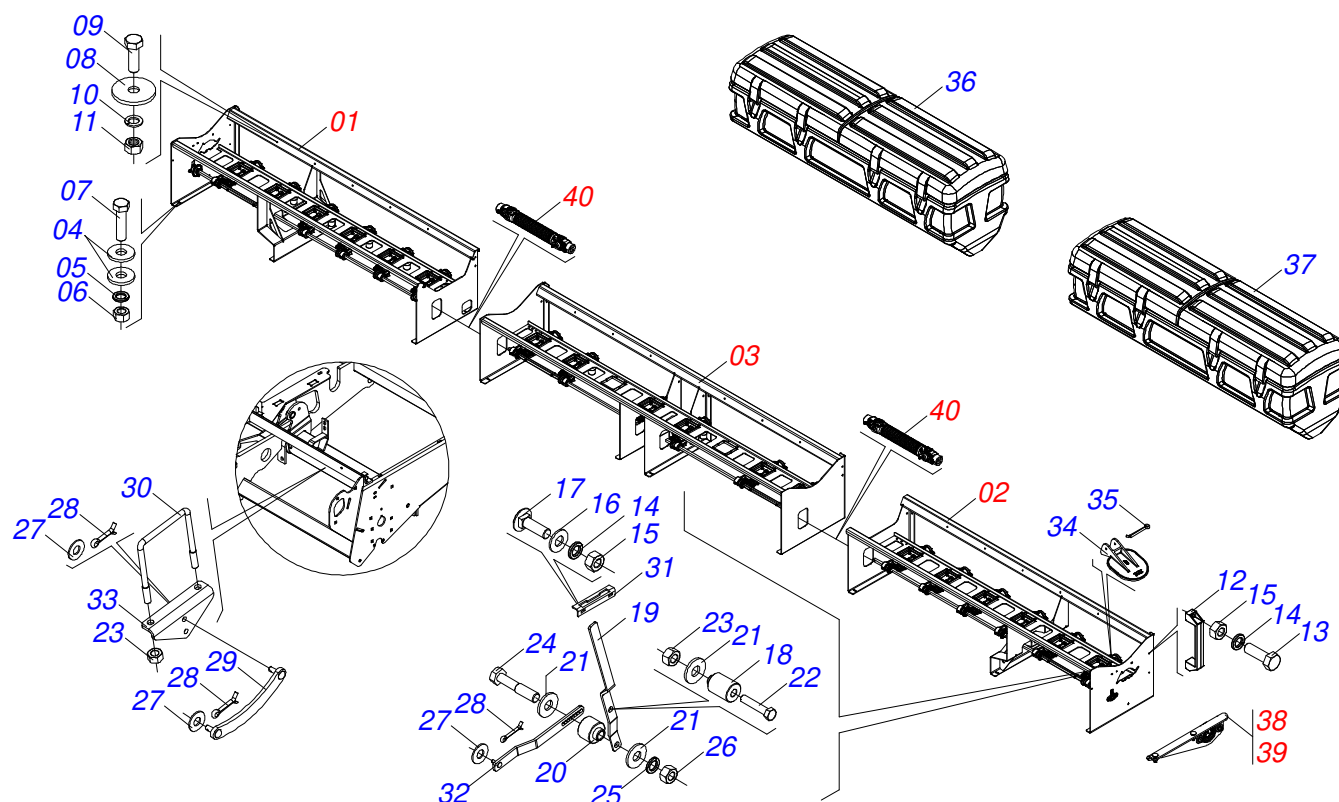


Item	Code	Description	See page	QT
01	0521052709	8460/8960/9460 RIGHT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	93	01
02	0521052718	8460/8960/9460 LEFT FERTILIZER HOPPER SUPPORT WITH DISTRIBUTOR	94	01
03	0521052729	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 9460	98	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
05	0503010025	3/8 SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0571019051	FIXER HOPPER WASHER		32
09	0503013751	3/8 UNC X 1.1/4 BOLT		32
10	0503012535	3/8" SPRING WASHER		32
11	0503012531	3/8" INOX NUT		32
12	0503011957	NYLON HANDLE		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0551019168	SLEEVE		02
19	0551019160	LEVER		02
20	0551019167	SLEEVE UNION		02
21	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
22	0503010479	BOLT		02
23	0503011336	1/2" HEX SELF ADJUSTING NUT		06
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		02
26	0503010060	1/2 UNC G.5 ZN HEX NUT		02
27	0501013518	FLAT WASHER		06
28	0503010140	1/8" X 3/4" COTTERPIN		06
29	0511069678	LH LOWER LEVER		02

Item	Code	Description	See page	QT
30	0561016468	FASTENER		02
31	0581012605	GEAR BOX LEVER LOCK		02
32	0521061741	INNTER LEVER		02
33	0551019159	LEVER FIXER BODY		02
34	0503034396	FERTILIZER SIDE COVER		20
35	0503010362	1/8 X 1.1/4 COTTERPIN		20
36	0503062589	FERTILIZER HOPPER MOUNTED		02
37	0503062362	FERTILIZER HOPPER		02
38	0521050194	SQUARE AXLE RIGHT SUPPORT	75	01
39	0521050195	SQUARE AXLE LEFT SUPPORT	76	01
40	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	77	02

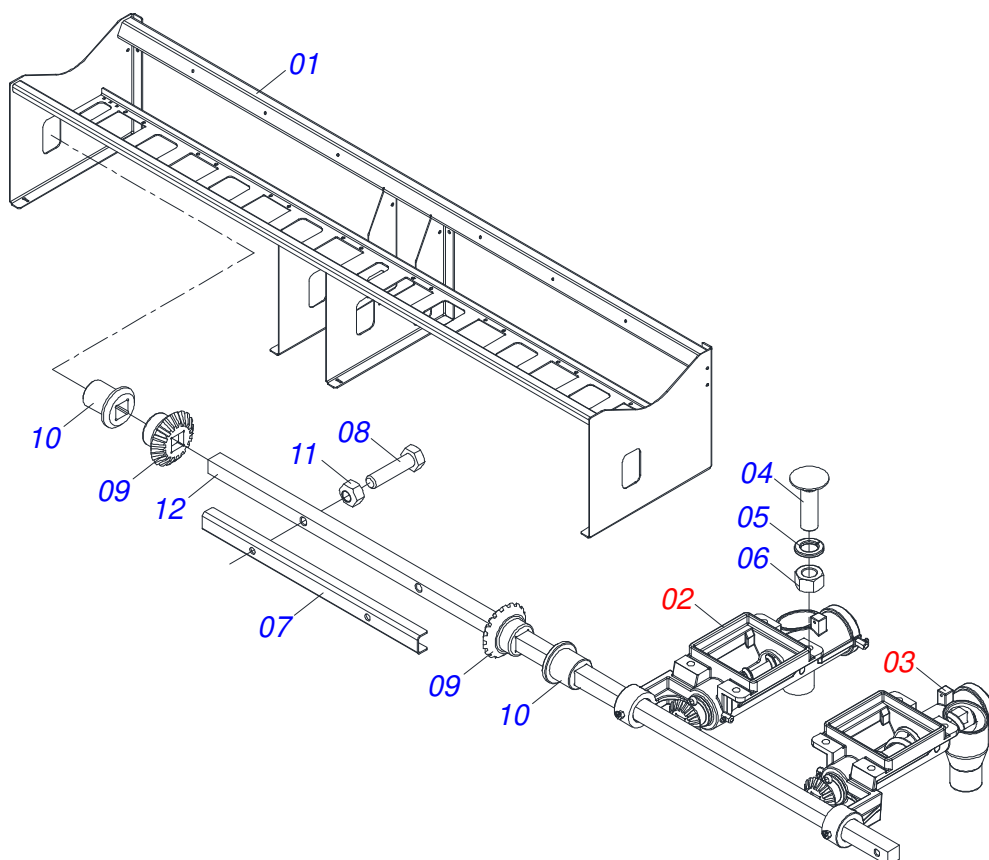

Item	Code	Description	See page	QT
01	0521068619	LR SEED SILO CENTRAL SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	04
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	04
04	0501010942	3/8" X 1-1/4" BOLT		32
05	0503011443	3/8" SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0571019828	LOCK AXLE		02
08	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
09	1902010685	18Z CONICAL GEAR		08
10	0503030275	AGRICULTURAL BEARING		08
11	0503013816	5/16" LOCKNUT		04
12	0581016963	SQUARE SHAFT		02

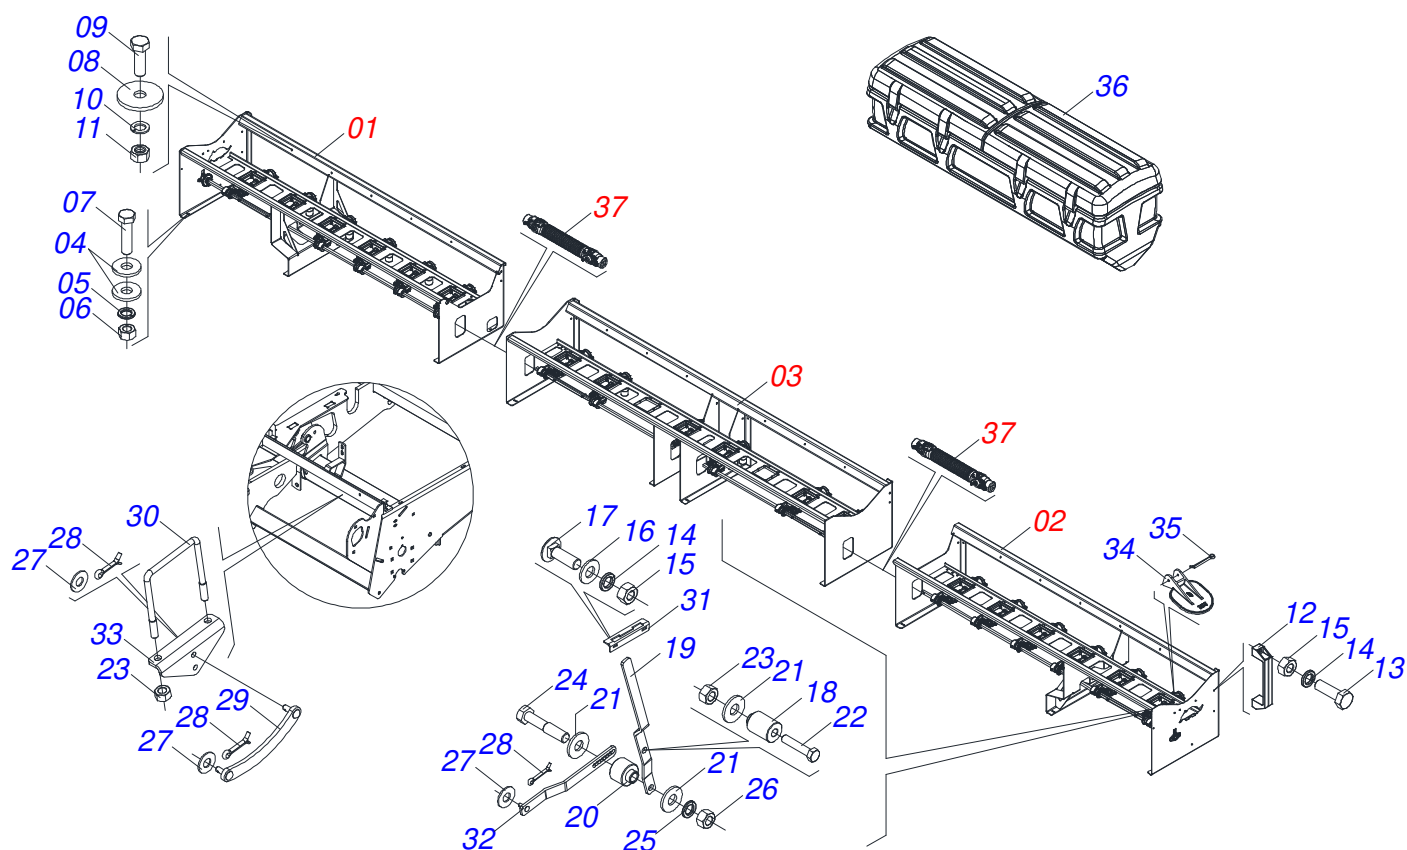


Item	Code	Description	See page	QT
01	0521052708	SUPPORT SILO RIGHT FERTILIZER WITH 100 DISTRIBUTOR 9960/10460	01	01
02	0521052717	SILO SUPPORT LEFT FERTILIZER WITH 101 DISTRIBUTOR 9960/10460	01	01
03	0521052727	SUPPORT SILO CENTRAL FERTILIZER WITH 102 DISTRIBUTOR 9960	01	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
05	0503010025	3/8 SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0571019051	FIXER HOPPER WASHER		36
09	0503013751	3/8 UNC X 1.1/4 BOLT		36
10	0503012535	3/8" SPRING WASHER		36
11	0503012531	3/8" INOX NUT		36
12	0503011957	NYLON HANDLE		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0551019168	SLEEVE		02
19	0551019160	LEVER		02
20	0551019167	SLEEVE UNION		02
21	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
22	0503010479	BOLT		02
23	0503011336	1/2" HEX SELF ADJUSTING NUT		06
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		02
26	0503010060	1/2 UNC G.5 ZN HEX NUT		02
27	0501013518	FLAT WASHER		06
28	0503010140	1/8" X 3/4" COTTERPIN		06
29	0511069678	LH LOWER LEVER		02


**SILO FERTILIZER ASSEMBLY 9960**

0521052747


Item	Code	Description	See page	QT
30	0561016468	FASTENER		02
31	0581012605	GEAR BOX LEVER LOCK		02
32	0521061741	INNER LEVER		02
33	0551019159	LEVER FIXER BODY		02
34	0503034396	FERTILIZER SIDE COVER		20
35	0503010362	1/8 X 1.1/4 COTTERPIN		20
36	0503062362	FERTILIZER HOPPER		06
37	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	77	02

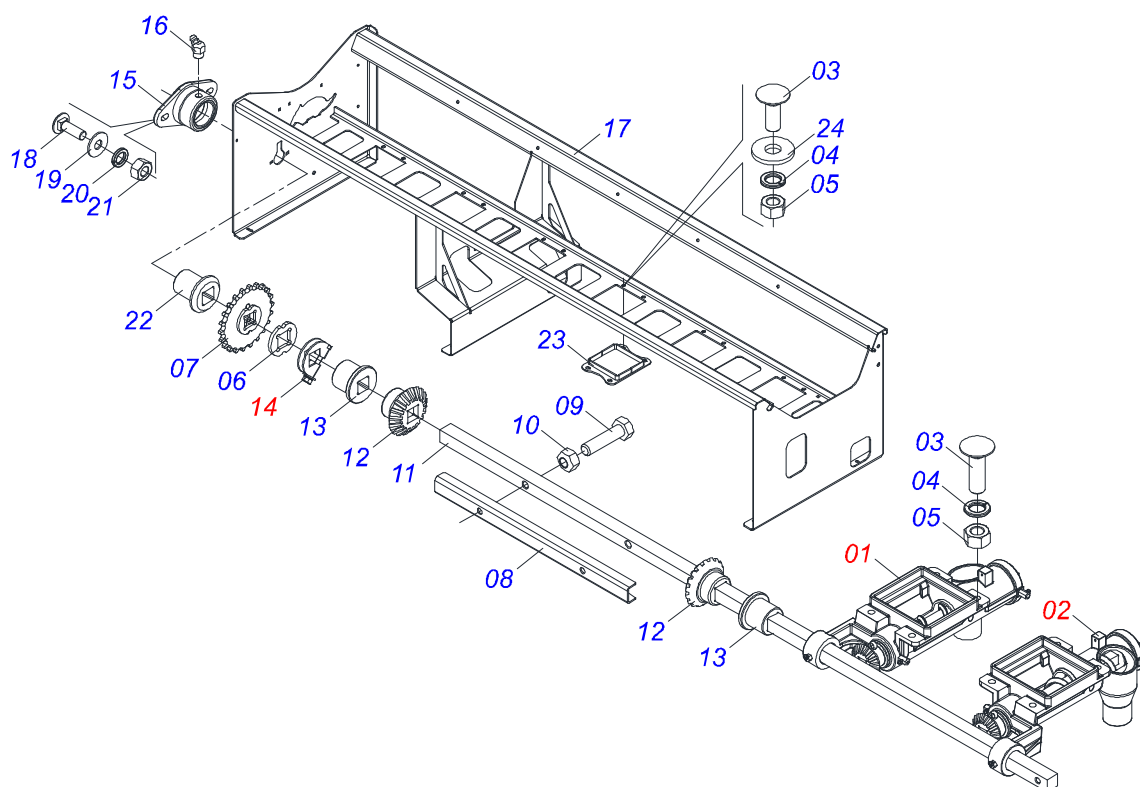


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	03
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	04
03	0501010942	3/8" X 1-1/4" BOLT		32
04	0503010025	3/8 SPRING WASHER		32
05	0503010026	3/8" NUT		32
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
10	0503013816	5/16" LOCKNUT		02
11	0581016961	SQUARE SHAFT		01
12	1902010685	18Z CONICAL GEAR		07
13	0503030275	AGRICULTURAL BEARING		07
14	0501053788	3/4 SQUARE AXLE FASTENER	72	01
15	0501110392	HOPPER SUPPORT BEARING		01
16	0503010003	1845 GREASE FITTING		01
17	0521068601	20 E 500 RH FERTILIZER BEAM SUPPORT		01
18	0503011953	5/16" X 1" BOLT		02
19	0521011039	FLAT WASHER		02
20	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
21	0503010337	5/16" NUT		02
22	0521012485	GEAR BOX BEARING AGRICUTURAL		01
23	0511062163	FERTILIZER BEAM LOWER COVER		01
24	0501810984	FLAT WASHER		04

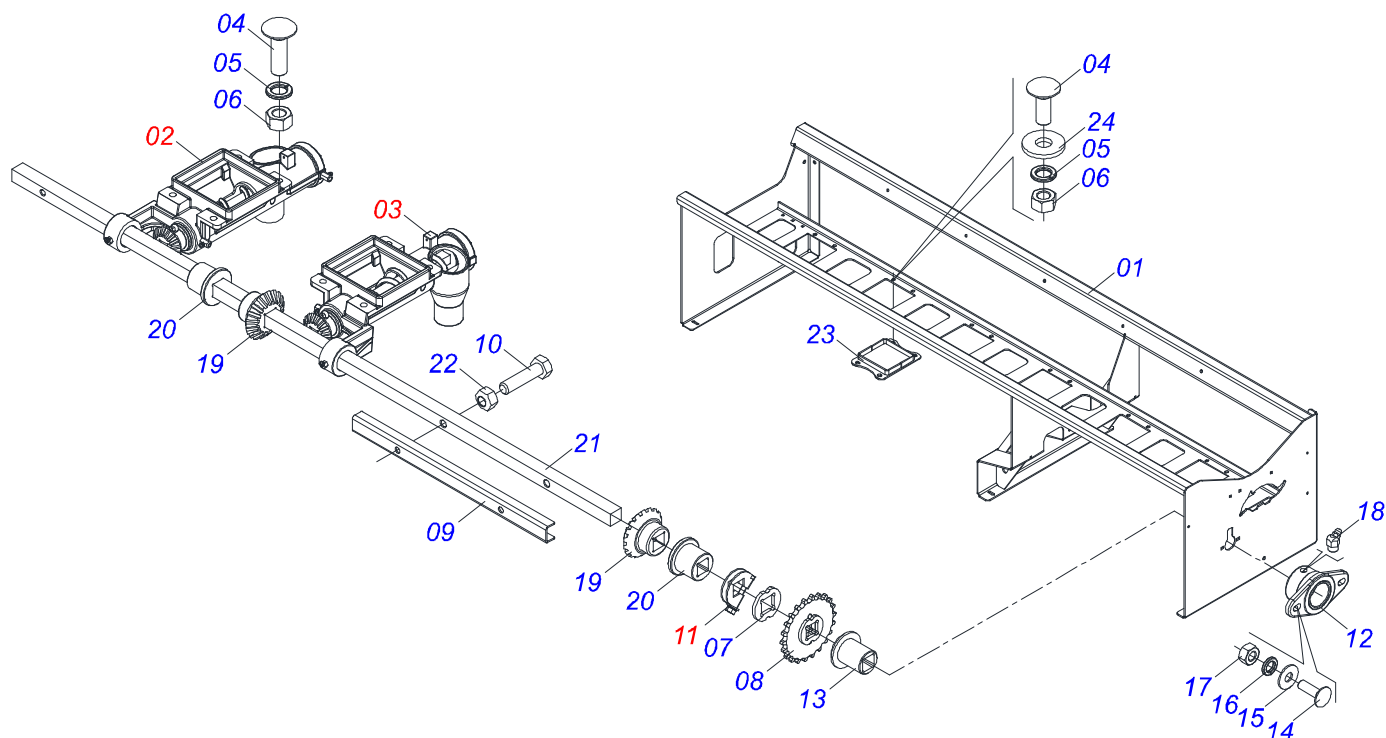

Item	Code	Description	See page	QT
01	0521068611	LEFT SILO FERTILIZER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	04
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	03
04	0501010942	3/8" X 1-1/4" BOLT		32
05	0503010025	3/8 SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
11	0501053788	3/4 SQUARE AXLE FASTENER	72	01
12	0501110392	HOPPER SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0521011039	FLAT WASHER		02
16	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
17	0503010337	5/16" NUT		02
18	0503010003	1845 GREASE FITTING		01
19	1902010685	18Z CONICAL GEAR		07
20	0503030275	AGRICULTURAL BEARING		07
21	0581016961	SQUARE SHAFT		01
22	0503013816	5/16" LOCKNUT		02
23	0511062163	FERTILIZER BEAM LOWER COVER		01
24	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04

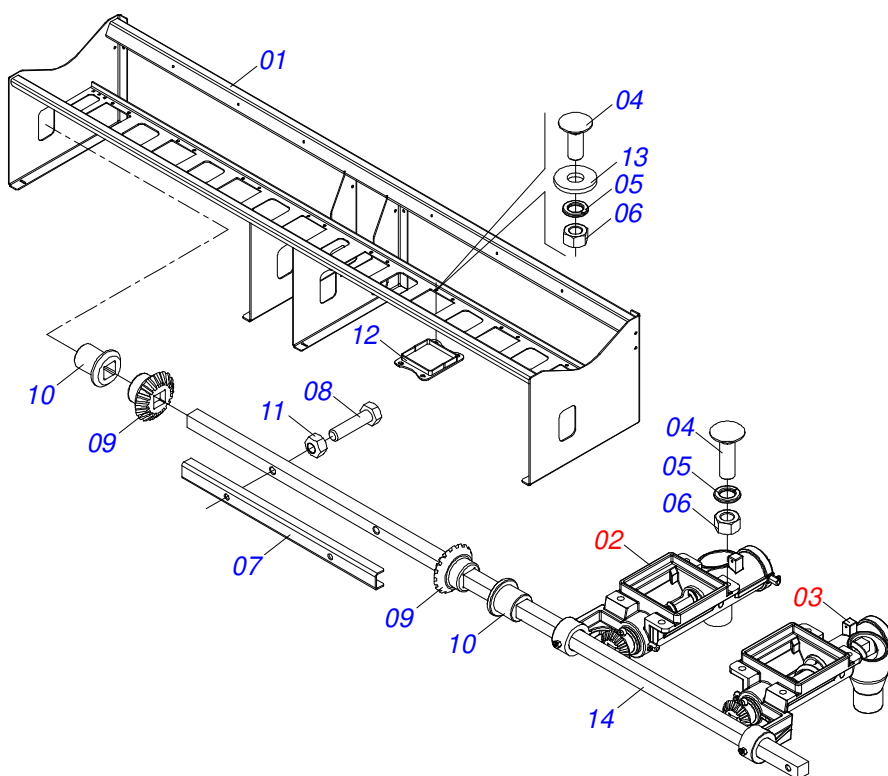


Item	Code	Description	See page	QT
01	0521068618	CENTRAL FERTILIZER BOX SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	03
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	03
04	0501010942	3/8" X 1-1/4" BOLT		32
05	0503010025	3/8 SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0571019828	LOCK AXLE		02
08	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
09	1902010685	18Z CONICAL GEAR		06
10	0503030275	AGRICULTURAL BEARING		06
11	0503013816	5/16" LOCKNUT		04
12	0511062163	FERTILIZER BEAM LOWER COVER		02
13	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
14	0581016962	3/4" X 1392 SQUARE SHAFT 20 E 500		02

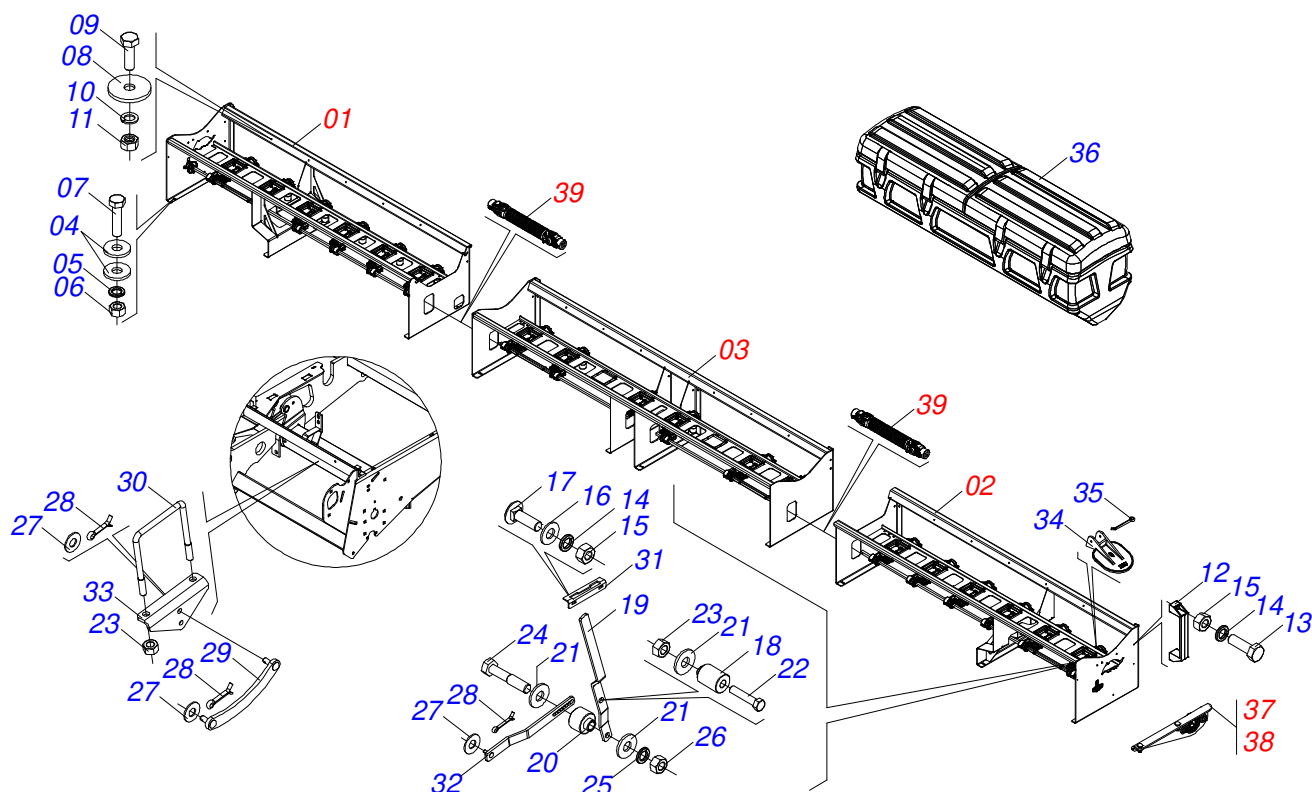


Item	Code	Description	See page	QT
01	0521052708	SUPPORT SILO RIGHT FERTILIZER WITH 100 DISTRIBUTOR 9960/10460	01	01
02	0521052717	SILO SUPPORT LEFT FERTILIZER WITH 101 DISTRIBUTOR 9960/10460	01	01
03	0521052725	SUPPORT SILO CENTRAL FERTILIZER WITH 104 DISTRIBUTOR 10460	01	01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
05	0503010025	3/8 SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0571019051	FIXER HOPPER WASHER		36
09	0503013751	3/8 UNC X 1.1/4 BOLT		36
10	0503012535	3/8" SPRING WASHER		36
11	0503012531	3/8" INOX NUT		36
12	0503011957	NYLON HANDLE		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0551019168	SLEEVE		02
19	0551019160	LEVER		02
20	0551019167	SLEEVE UNION		02
21	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
22	0503010479	BOLT		02
23	0503011336	1/2" HEX SELF ADJUSTING NUT		06
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		02
26	0503010060	1/2 UNC G.5 ZN HEX NUT		02
27	0501013518	FLAT WASHER		06
28	0503010140	1/8" X 3/4" COTTERPIN		06
29	0511069678	LH LOWER LEVER		02

Item	Code	Description	See page	QT
30	0561016468	FASTENER		02
31	0581012605	GEAR BOX LEVER LOCK		02
32	0521061741	INNTER LEVER		02
33	0551019159	LEVER FIXER BODY		02
34	0503034396	FERTILIZER SIDE COVER		21
35	0503010362	1/8 X 1.1/4 COTTERPIN		21
36	0503062362	FERTILIZER HOPPER		06
37	0521050194	SQUARE AXLE RIGHT SUPPORT	75	01
38	0521050195	SQUARE AXLE LEFT SUPPORT	76	01
39	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	77	02

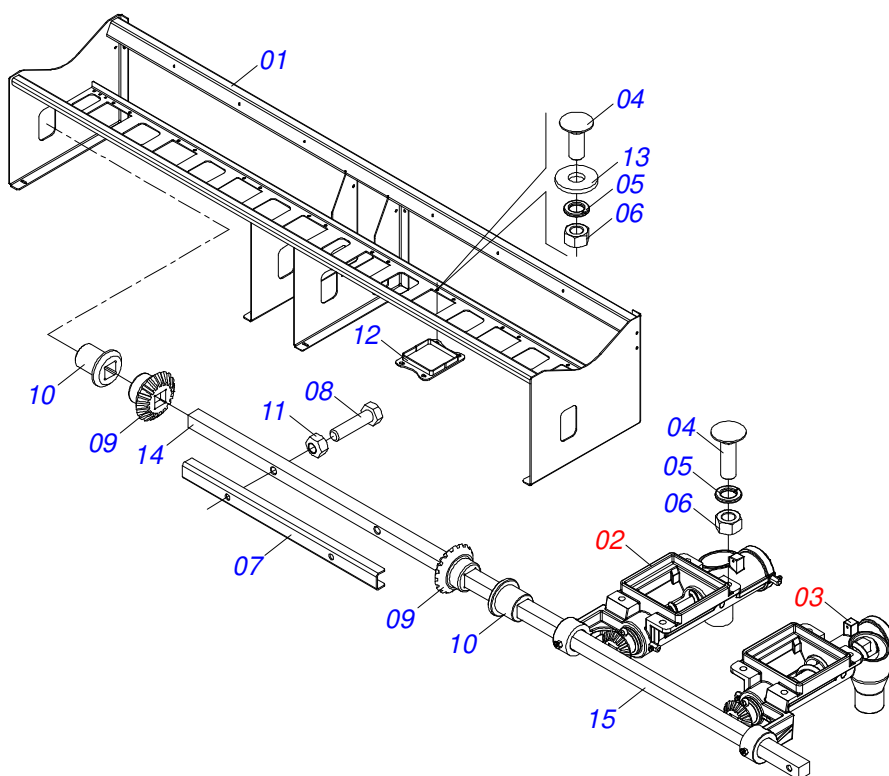


Item	Code	Description	See page	QT
01	0521068619	LR SEED SILO CENTRAL SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	70	04
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	71	03
04	0501010942	3/8" X 1-1/4" BOLT		32
05	0503010025	3/8 SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0571019828	LOCK AXLE		02
08	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
09	1902010685	18Z CONICAL GEAR		07
10	0503030275	AGRICULTURAL BEARING		07
11	0503013816	5/16" LOCKNUT		04
12	0511062163	FERTILIZER BEAM LOWER COVER		01
13	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
14	0581016956	3/4" X 1565 SQUARE SHAFT		01
15	0581016957	3/4" X 1265 SQUARE SHAFT		01

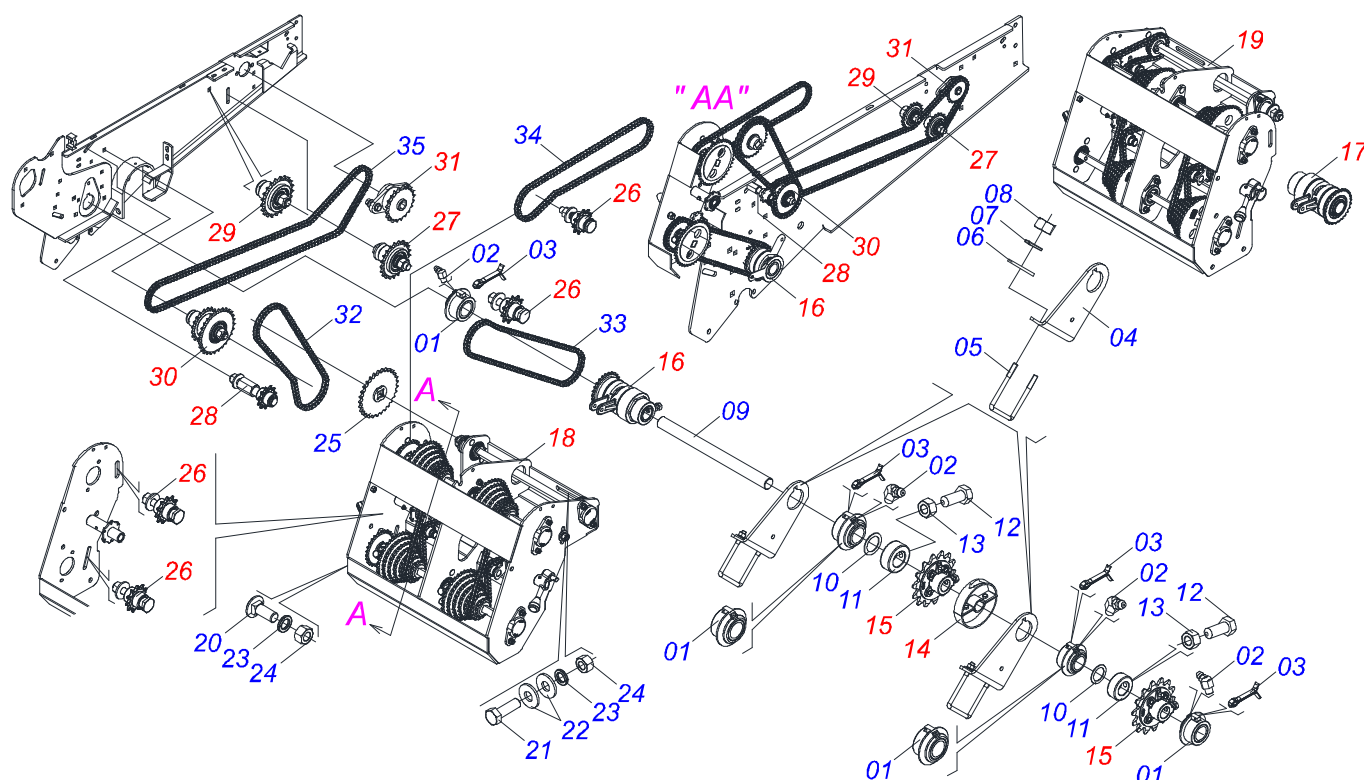


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0581015103	MOTOR AXLE 1.3 / 8 X 1620		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	113	02
15	0511051434	TRANSMISSION ACTUATOR	114	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	115	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	116	01
18	0521043316	RIGHT GEAR BOX ASSY	117	01
19	0521043317	LEFT GEAR BOX ASSY	126	01
20	0503014734	BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	128	04
27	0521055217	LOWER CURRENT STRETCH	129	02
28	0501058254	UPPER SEED CHAIN TENSIONER	130	02
29	0521055216	BEARING WITH GEAR	131	02
30	0521055218	BEARING GEAR WITH DOUBLE	132	02
31	0521055214	BEARING GEAR WITH	133	02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

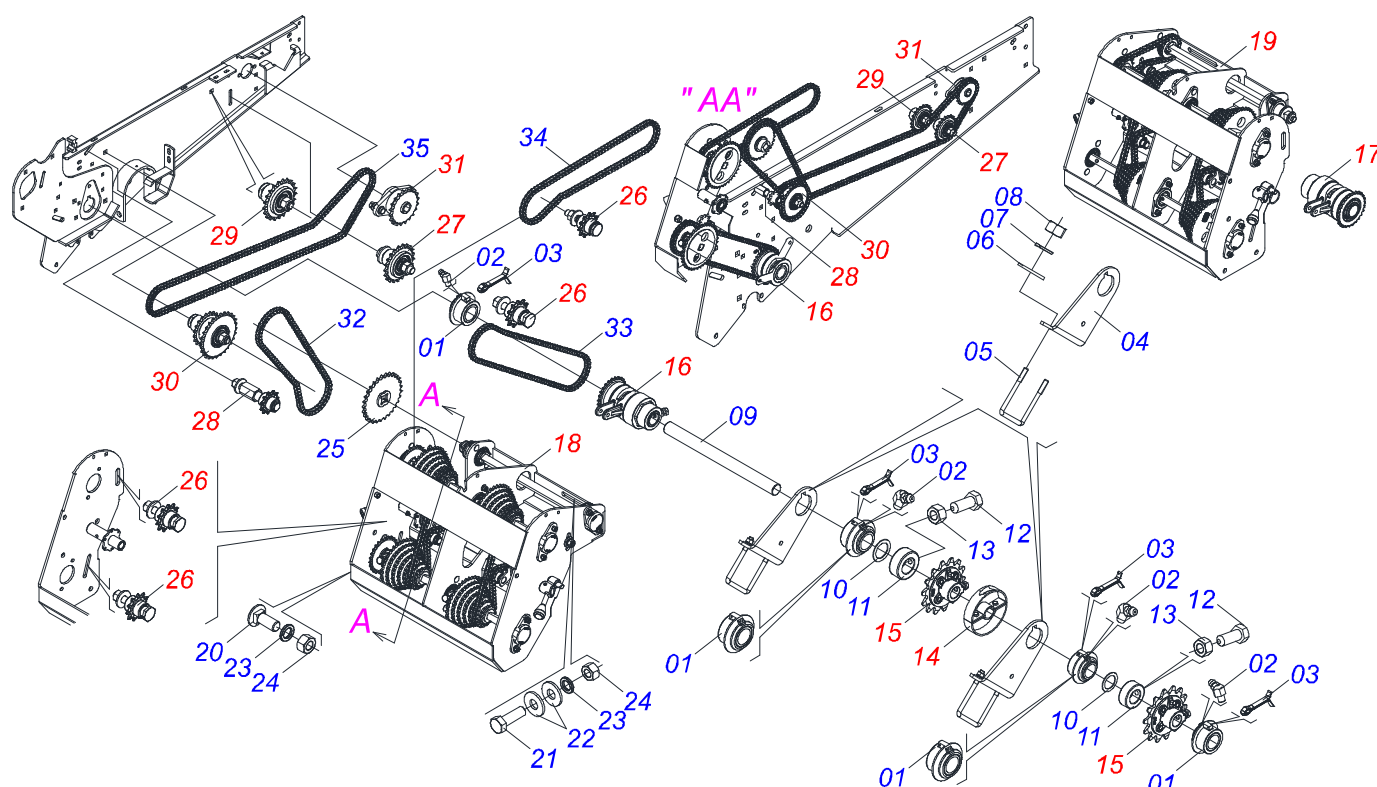


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0571014441	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	113	02
15	0511051434	TRANSMISSION ACTUATOR	114	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	115	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	116	01
18	0521043316	RIGHT GEAR BOX ASSY	117	01
19	0521043317	LEFT GEAR BOX ASSY	126	01
20	0501011600	1/2" X 1-1/4" BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	128	04
27	0521055217	LOWER CURRENT STRETCH	129	02
28	0501058254	UPPER SEED CHAIN TENSIONER	130	02
29	0521055216	BEARING WITH GEAR	131	02
30	0521055218	BEARING GEAR WITH DOUBLE	132	02
31	0521055214	BEARING GEAR WITH	133	02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

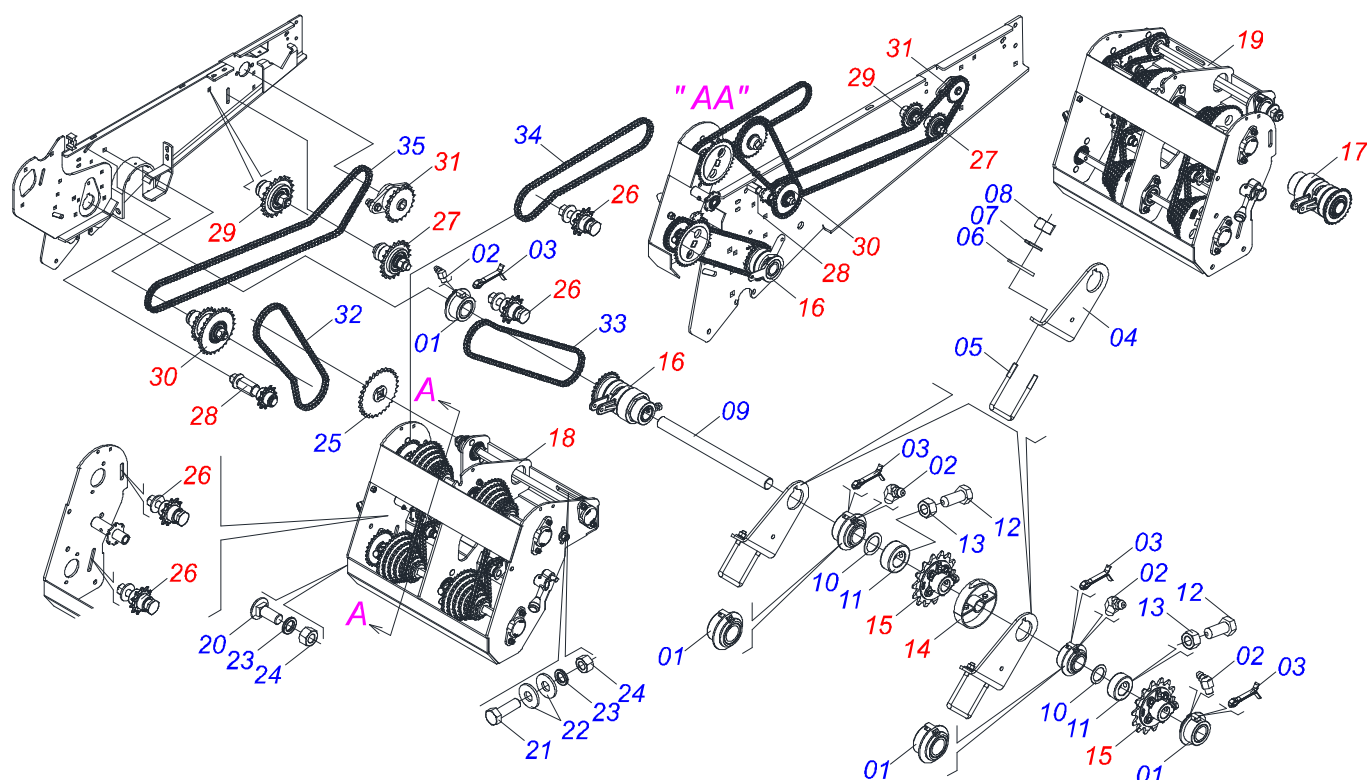


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0581018079	ENGINE SHAFT 2036,50		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	113	02
15	0511051434	TRANSMISSION ACTUATOR	114	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	115	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	116	01
18	0521043316	RIGHT GEAR BOX ASSY	117	01
19	0521043317	LEFT GEAR BOX ASSY	126	01
20	0503014734	BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	128	04
27	0521055217	LOWER CURRENT STRETCH	129	02
28	0501058254	UPPER SEED CHAIN TENSIONER	130	02
29	0521055216	BEARING WITH GEAR	131	02
30	0521055218	BEARING GEAR WITH DOUBLE	132	02
31	0521055214	BEARING GEAR WITH	133	02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

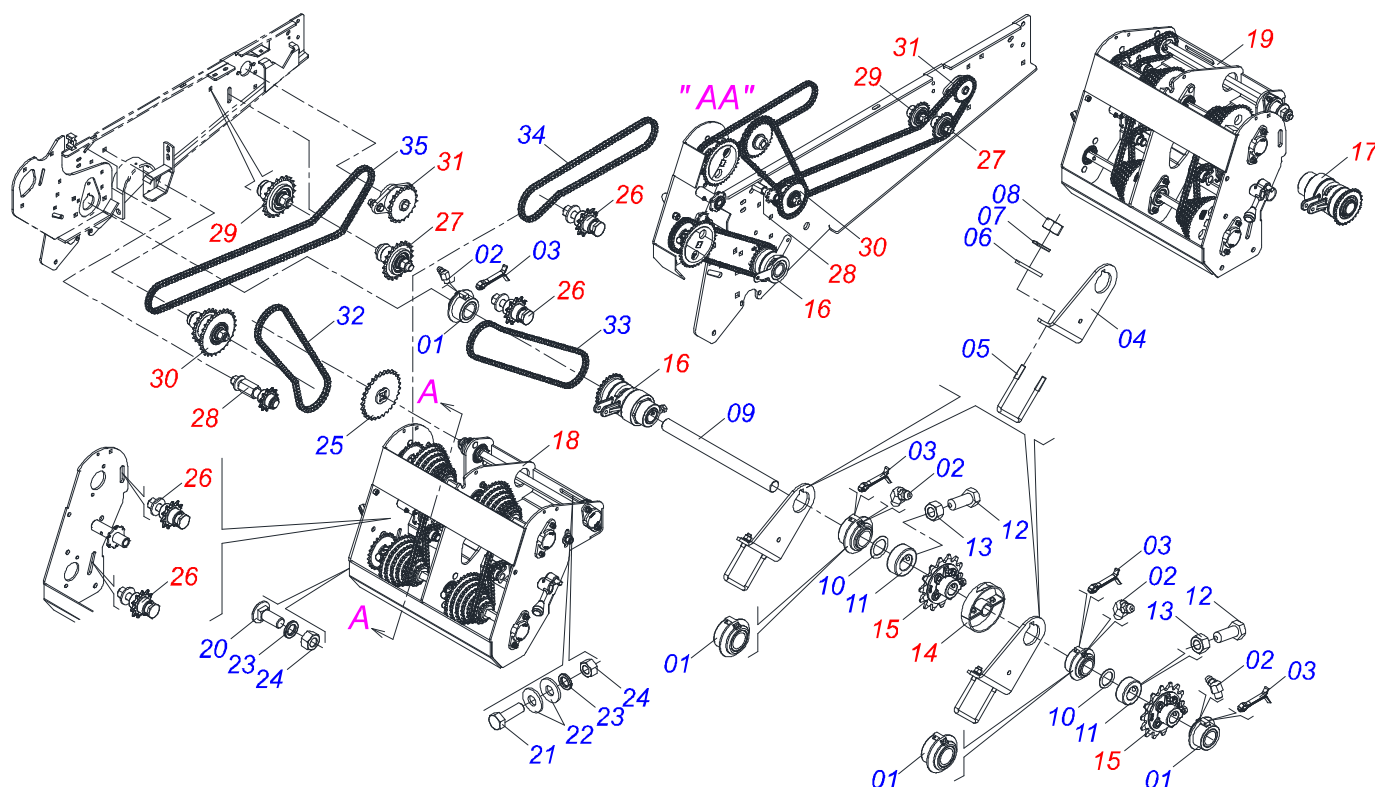


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0571014439	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	113	02
15	0511051434	TRANSMISSION ACTUATOR	114	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	115	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	116	01
18	0521043316	RIGHT GEAR BOX ASSY	117	01
19	0521043317	LEFT GEAR BOX ASSY	126	01
20	0503014734	BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	128	04
27	0521055217	LOWER CURRENT STRETCH	129	02
28	0501058254	UPPER SEED CHAIN TENSIONER	130	02
29	0521055216	BEARING WITH GEAR	131	02
30	0521055218	BEARING GEAR WITH DOUBLE	132	02
31	0521055214	BEARING GEAR WITH	133	02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

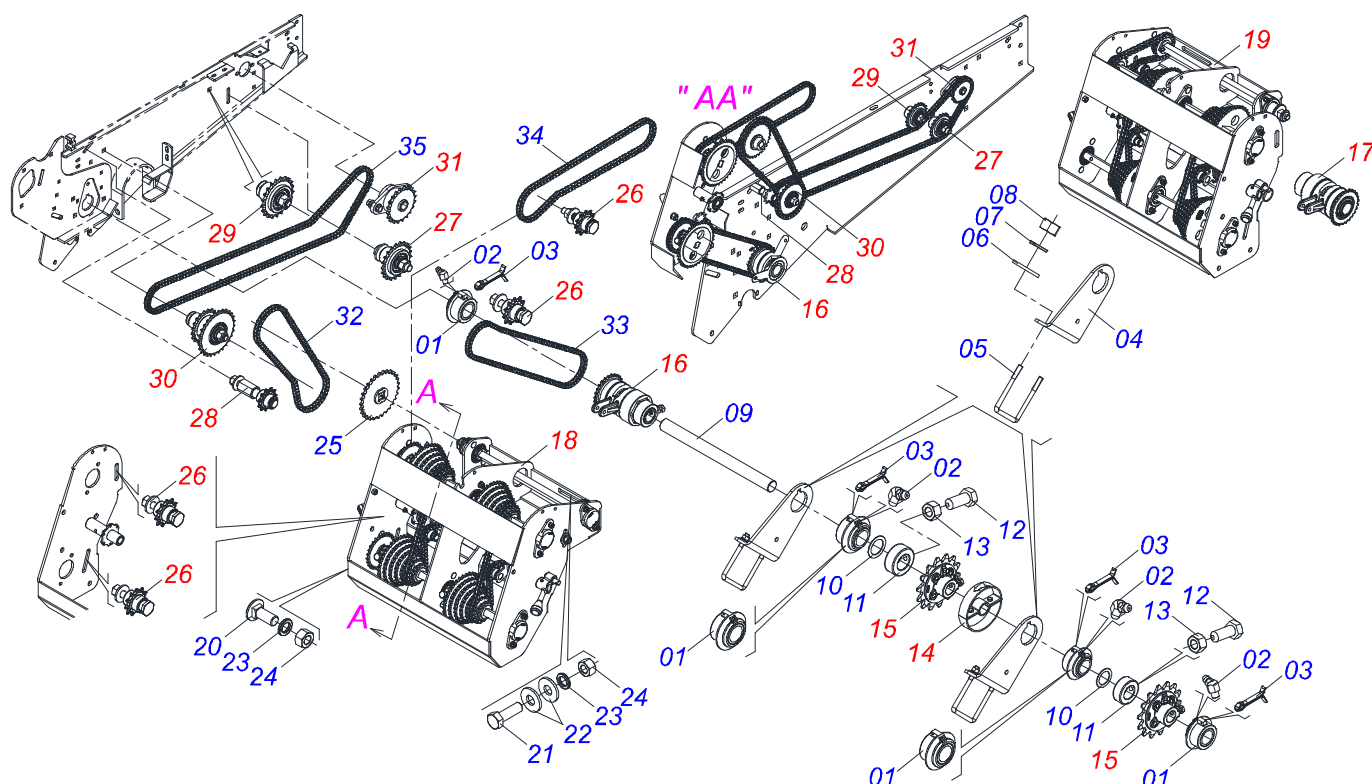


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0571014442	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	113	02
15	0511051434	TRANSMISSION ACTUATOR	114	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	115	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	116	01
18	0521043316	RIGHT GEAR BOX ASSY	117	01
19	0521043317	LEFT GEAR BOX ASSY	126	01
20	0501011600	1/2" X 1-1/4" BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	128	04
27	0521055217	LOWER CURRENT STRETCH	129	02
28	0501058254	UPPER SEED CHAIN TENSIONER	130	02
29	0521055216	BEARING WITH GEAR	131	02
30	0521055218	BEARING GEAR WITH DOUBLE	132	02
31	0521055214	BEARING GEAR WITH	133	02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

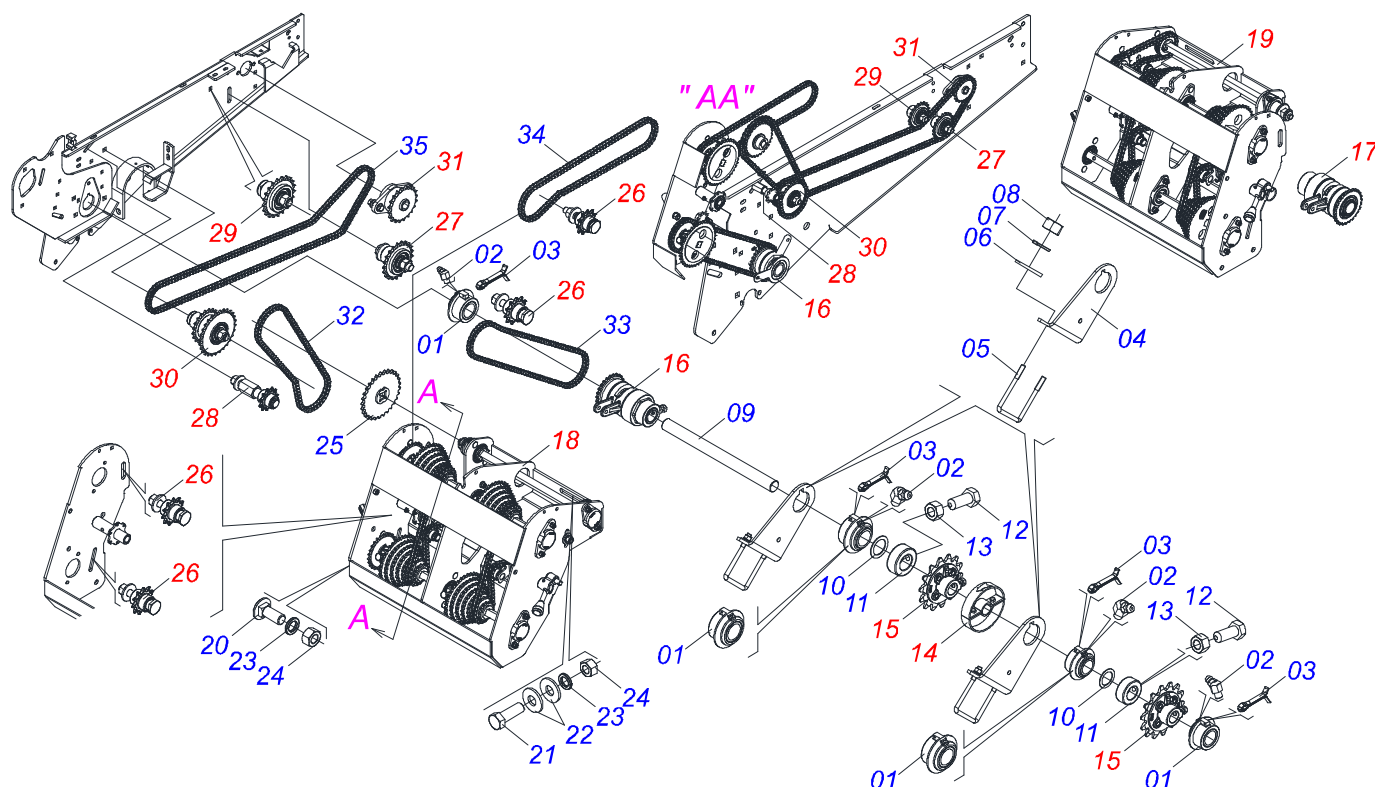

Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0571014442	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 C SPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	113	02
15	0511051434	TRANSMISSION ACTUATOR	114	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	115	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	116	01
18	0521043316	RIGHT GEAR BOX ASSY	117	01
19	0521043317	LEFT GEAR BOX ASSY	126	01
20	0501011600	1/2" X 1-1/4" BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	128	04
27	0521055217	LOWER CURRENT STRETCH	129	02
28	0501058254	UPPER SEED CHAIN TENSIONER	130	02
29	0521055216	BEARING WITH GEAR	131	02
30	0521055218	BEARING GEAR WITH DOUBLE	132	02
31	0521055214	BEARING GEAR WITH	133	02


Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

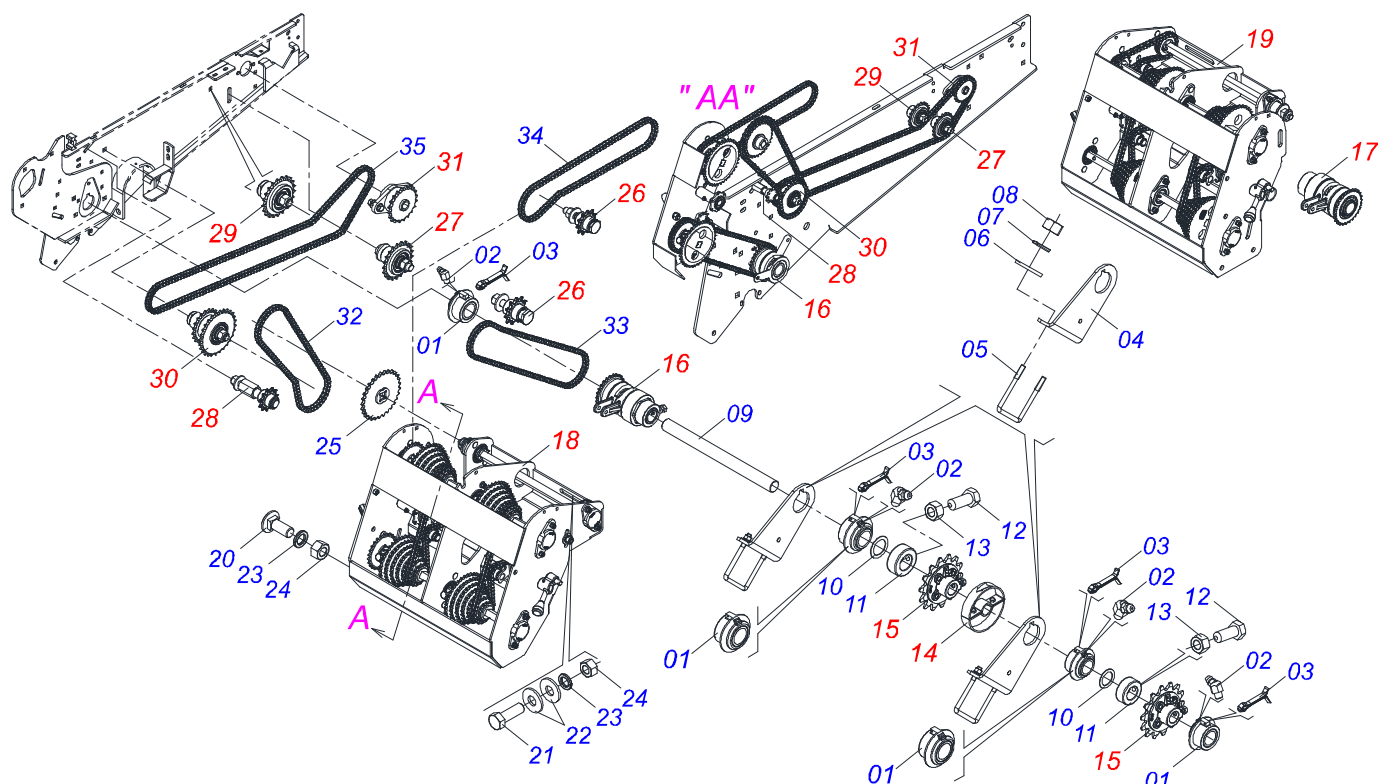

Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0571014442	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	113	02
15	0511051434	TRANSMISSION ACTUATOR	114	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	115	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	116	01
18	0521043316	RIGHT GEAR BOX ASSY	117	01
19	0521043317	LEFT GEAR BOX ASSY	126	01
20	0501010243	1/2" X 1-1/2" BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	128	04
27	0521055217	LOWER CURRENT STRETCH	129	02
28	0501058254	UPPER SEED CHAIN TENSIONER	130	02
29	0521055216	BEARING WITH GEAR	131	02
30	0521055218	BEARING GEAR WITH DOUBLE	132	02
31	0521055214	BEARING GEAR WITH	133	02




Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

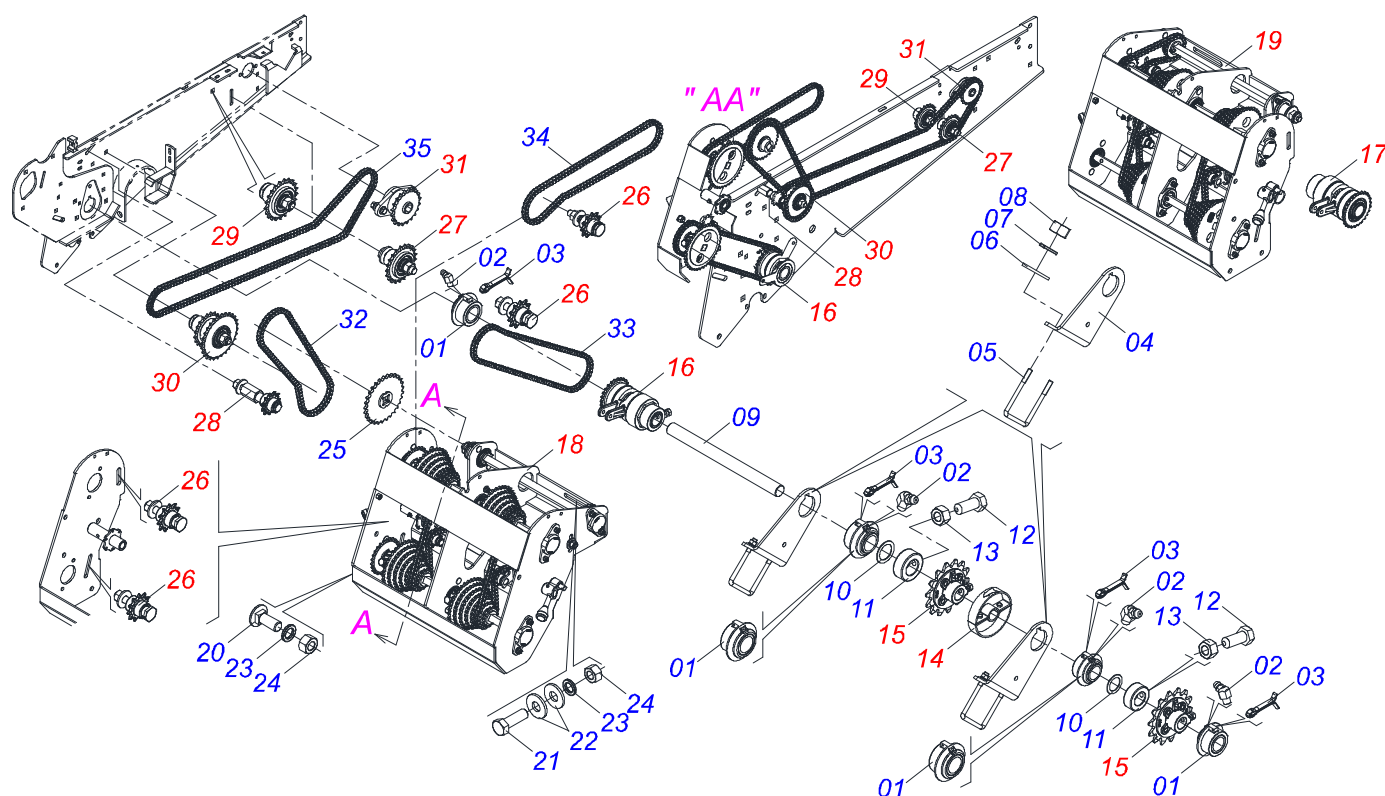


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0571017078	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	113	02
15	0511051434	TRANSMISSION ACTUATOR	114	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	115	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	116	01
18	0521043316	RIGHT GEAR BOX ASSY	117	01
19	0521043317	LEFT GEAR BOX ASSY	126	01
20	0501010243	1/2" X 1-1/2" BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	128	04
27	0521055217	LOWER CURRENT STRETCH	129	02
28	0501058254	UPPER SEED CHAIN TENSIONER	130	02
29	0521055216	BEARING WITH GEAR	131	02
30	0521055218	BEARING GEAR WITH DOUBLE	132	02
31	0521055214	BEARING GEAR WITH	133	02


Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

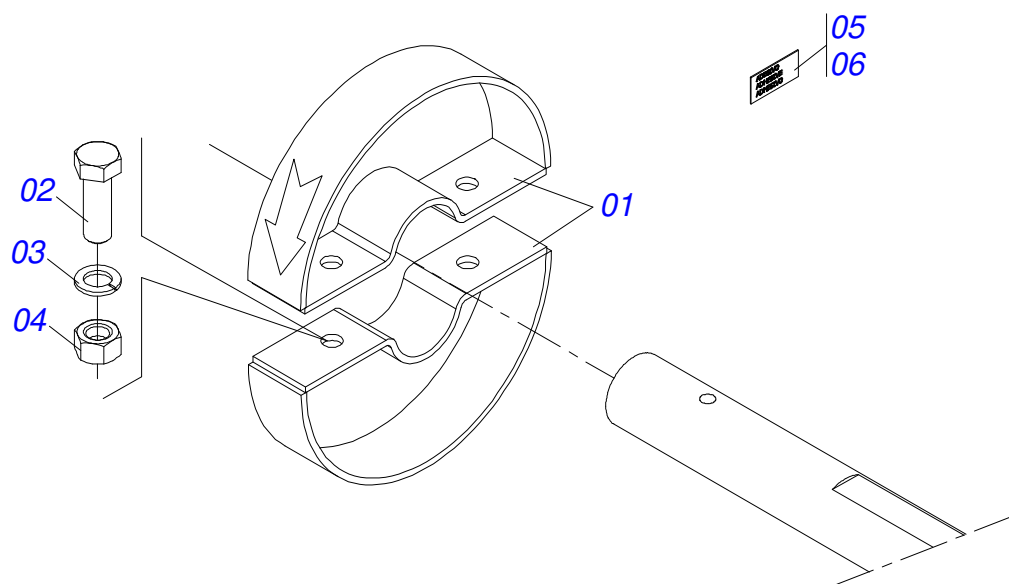


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ADHESIVE LABEL		01

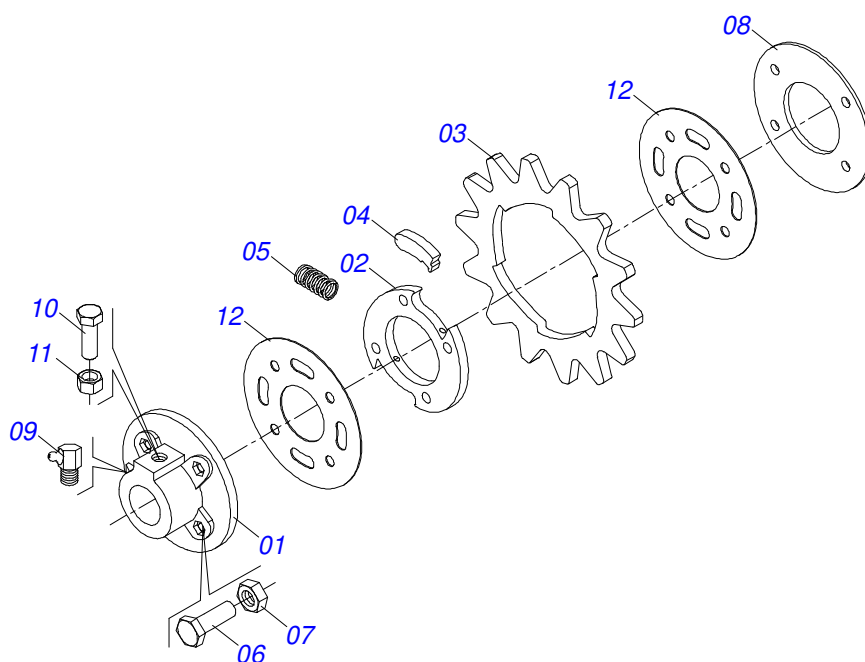

Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2 UNC G.5 ZN HEX NUT		01
12	0571010763	FLANGE WASHER		02

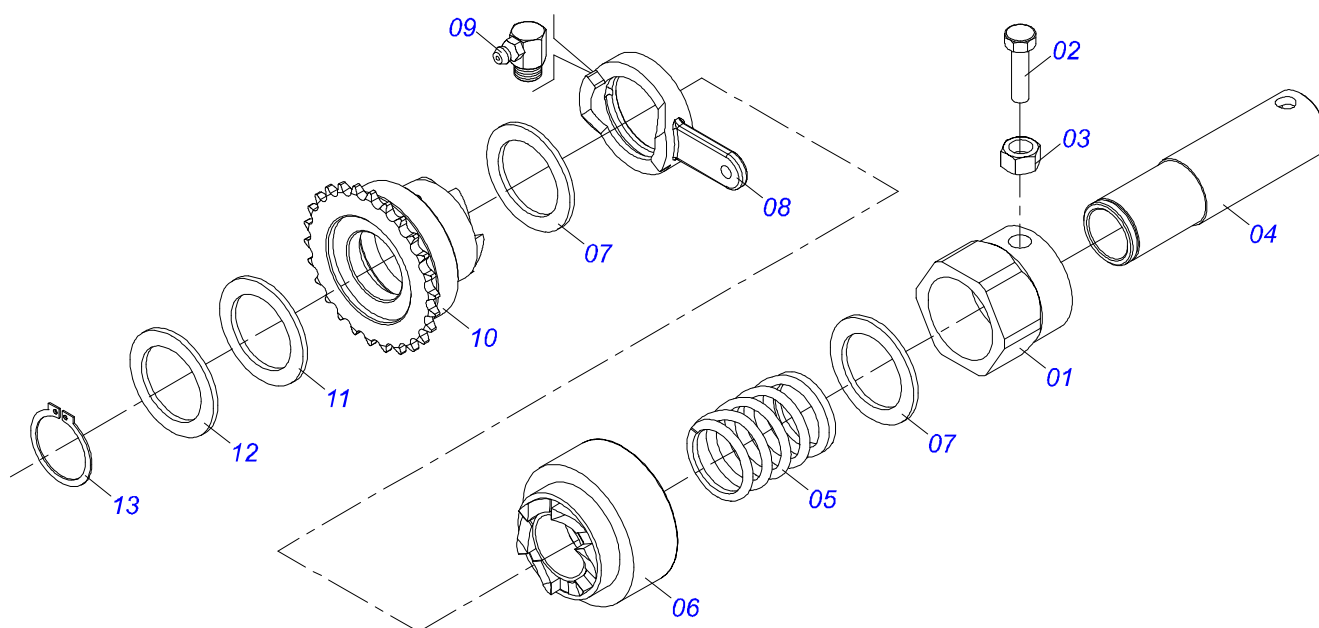


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

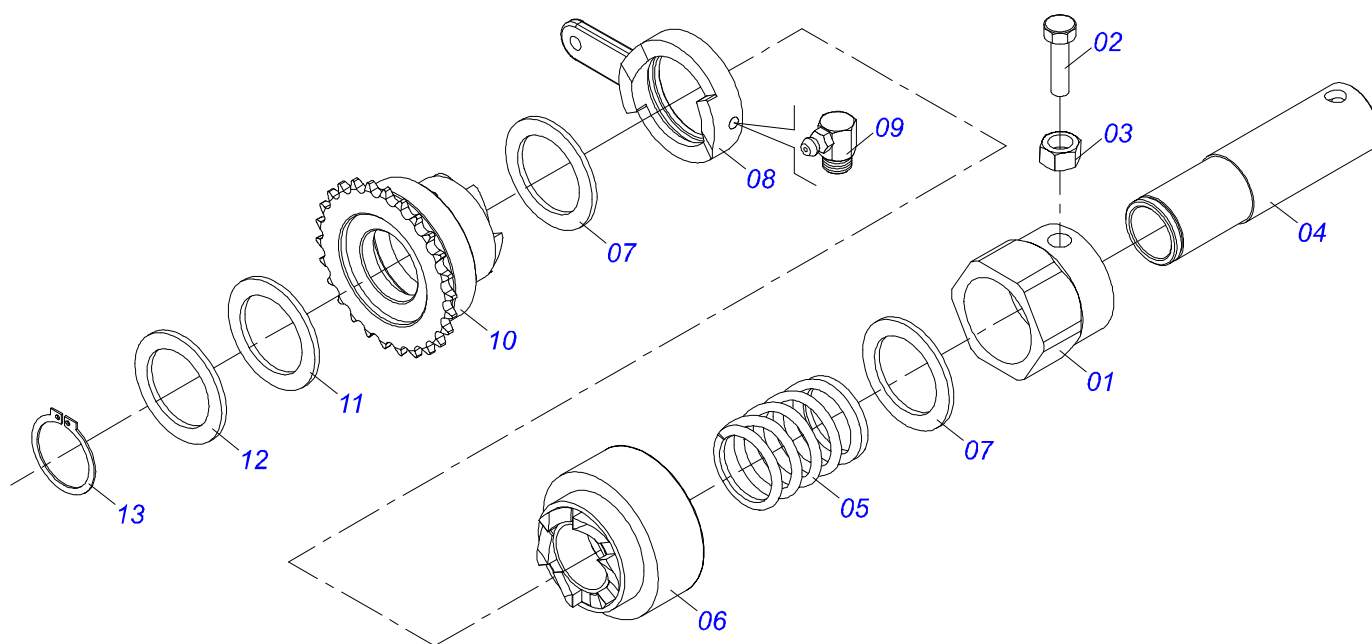


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

RIGHT GEAR BOX ASSY


0521043316

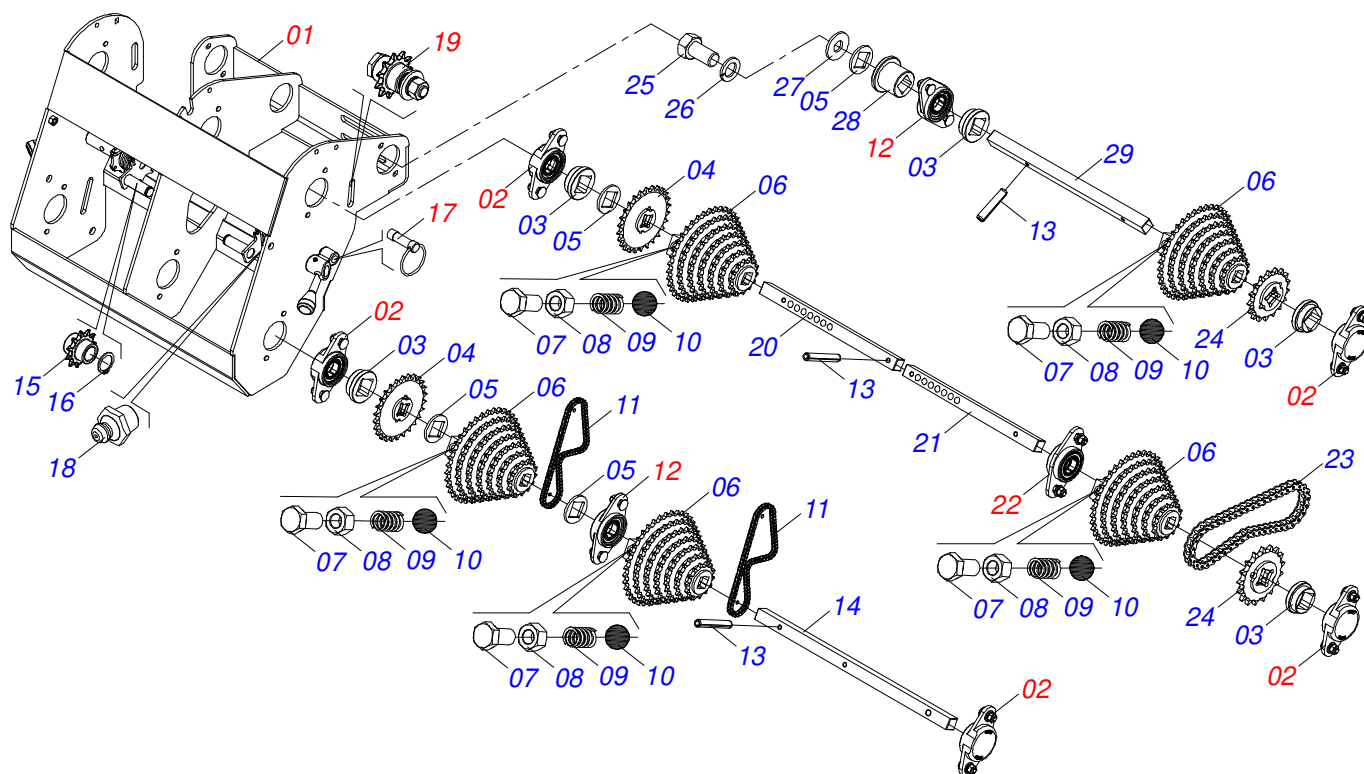


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	118	01
02	0511059266	CLOSED BEARING	119	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN SHAFT		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	121	02
13	0503010292	701164 6 X 40 SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	123	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	124	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	125	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8 SPRING WASHER		01
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

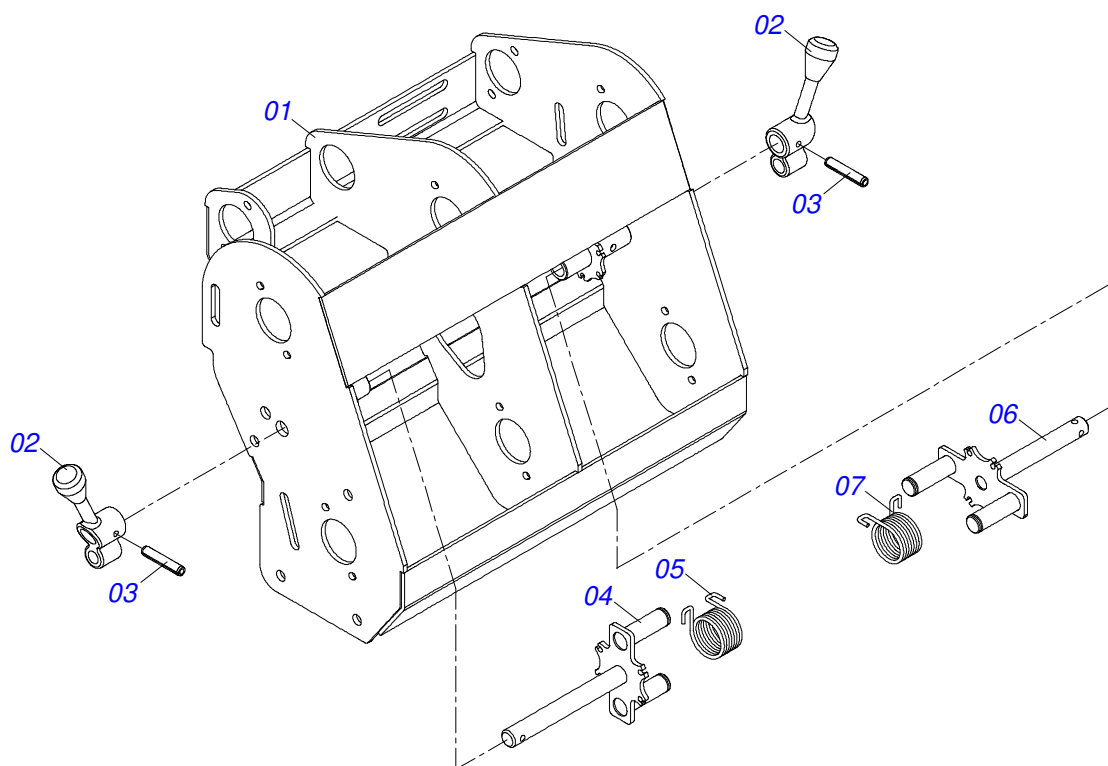


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX	01	
02	0502011758	REAR TIGHTENER LEVER	02	
03	0503010292	701164 6 X 40 SPRING PIN	02	
04	0511061794	CHAIN TENSIONER	01	
05	0503031367	SPRING	01	
06	0511060392	CHAIN TENSIONER	01	
07	0503031366	RIGHT TWISTED SPRING	01	

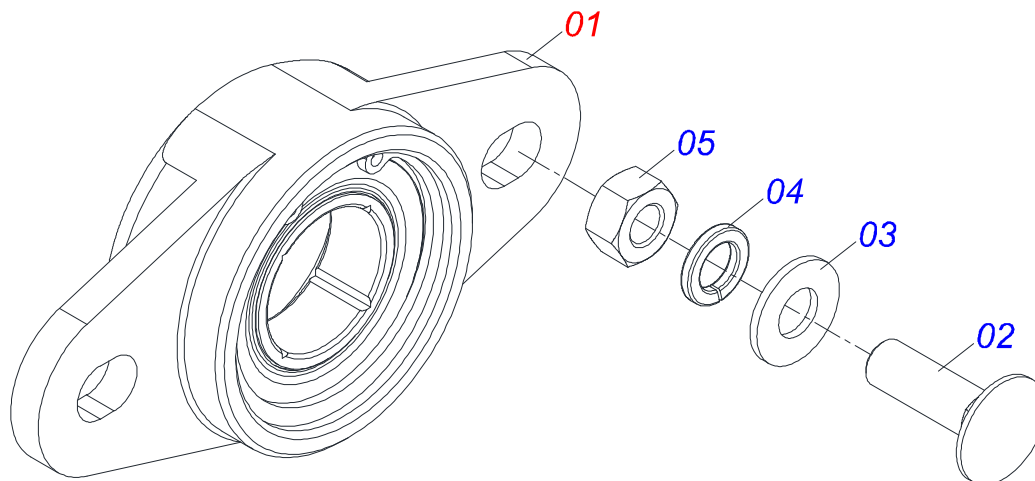


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	120	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

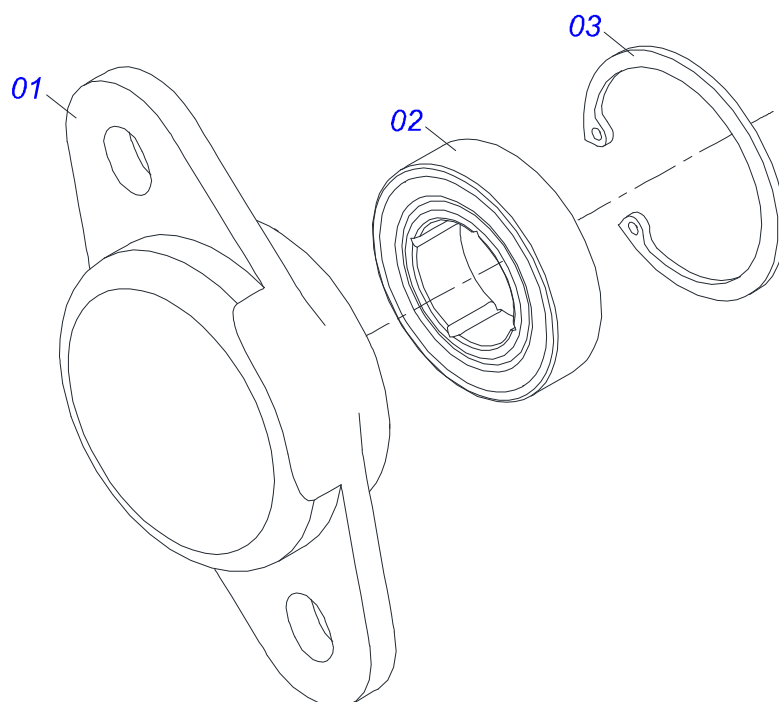


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

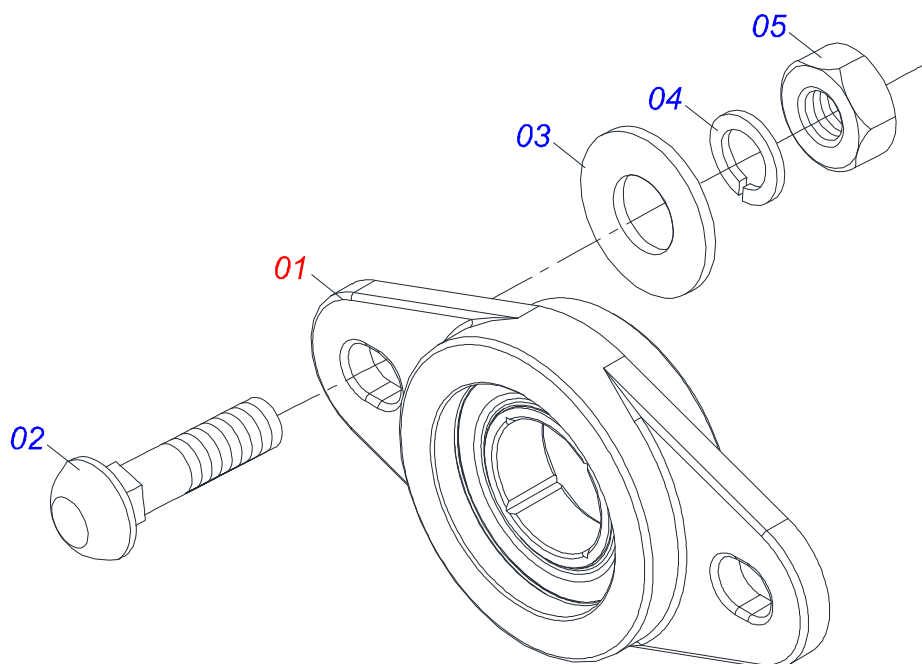


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLER	122	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

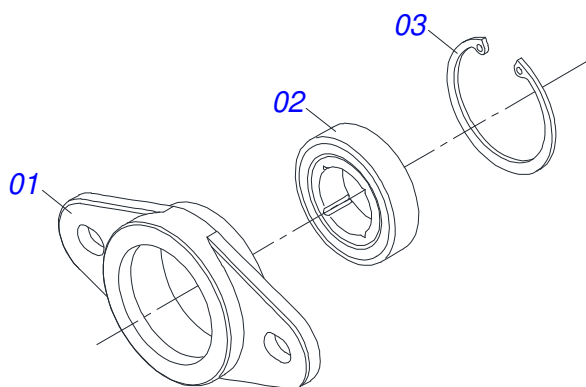


Item	Code	Description	See page	QT
01	0502011697	GEARBOX BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

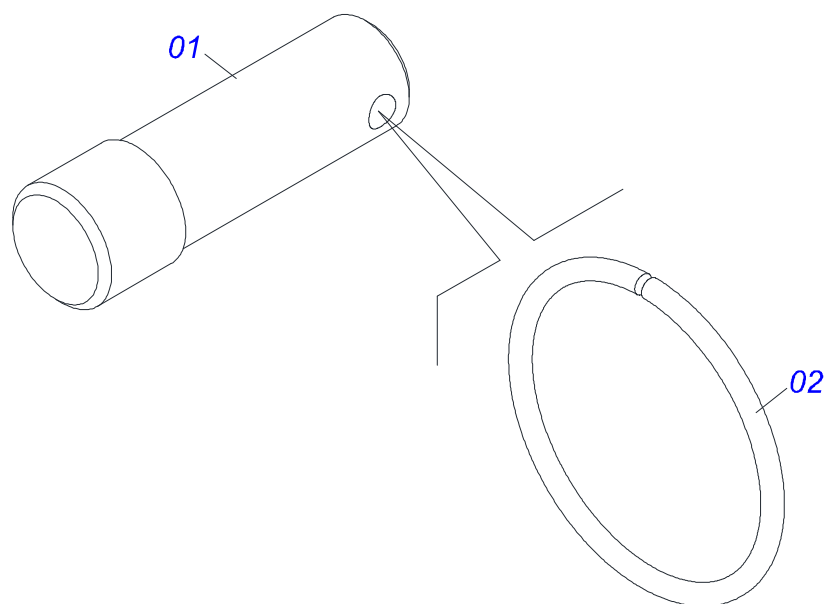

Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

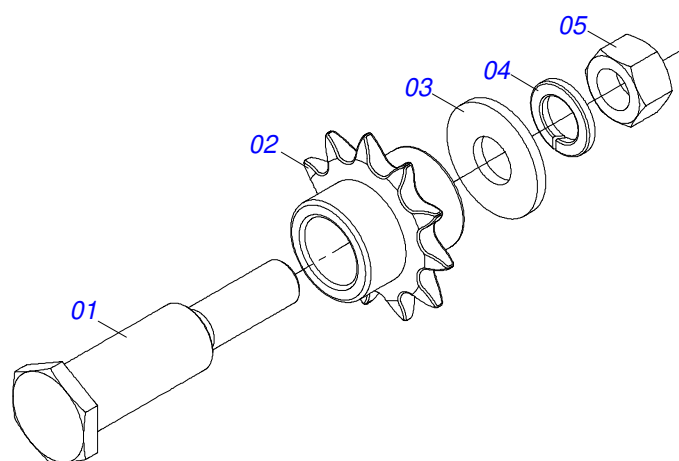


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

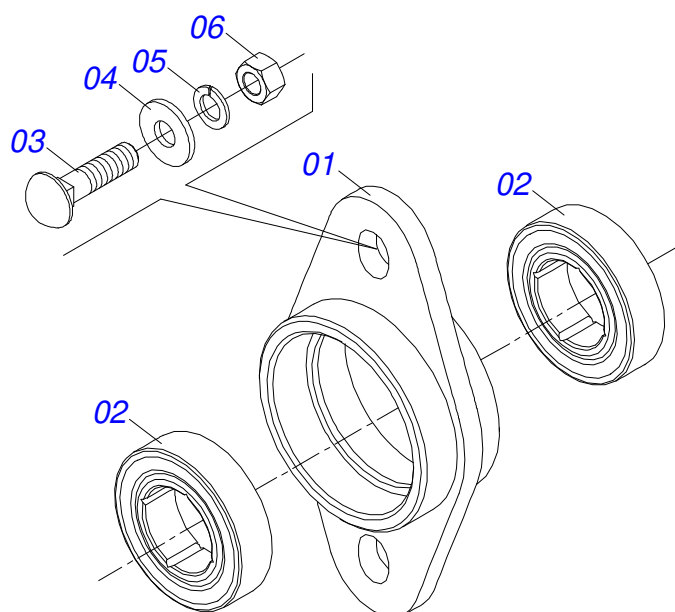


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

LEFT GEAR BOX ASSY


0521043317

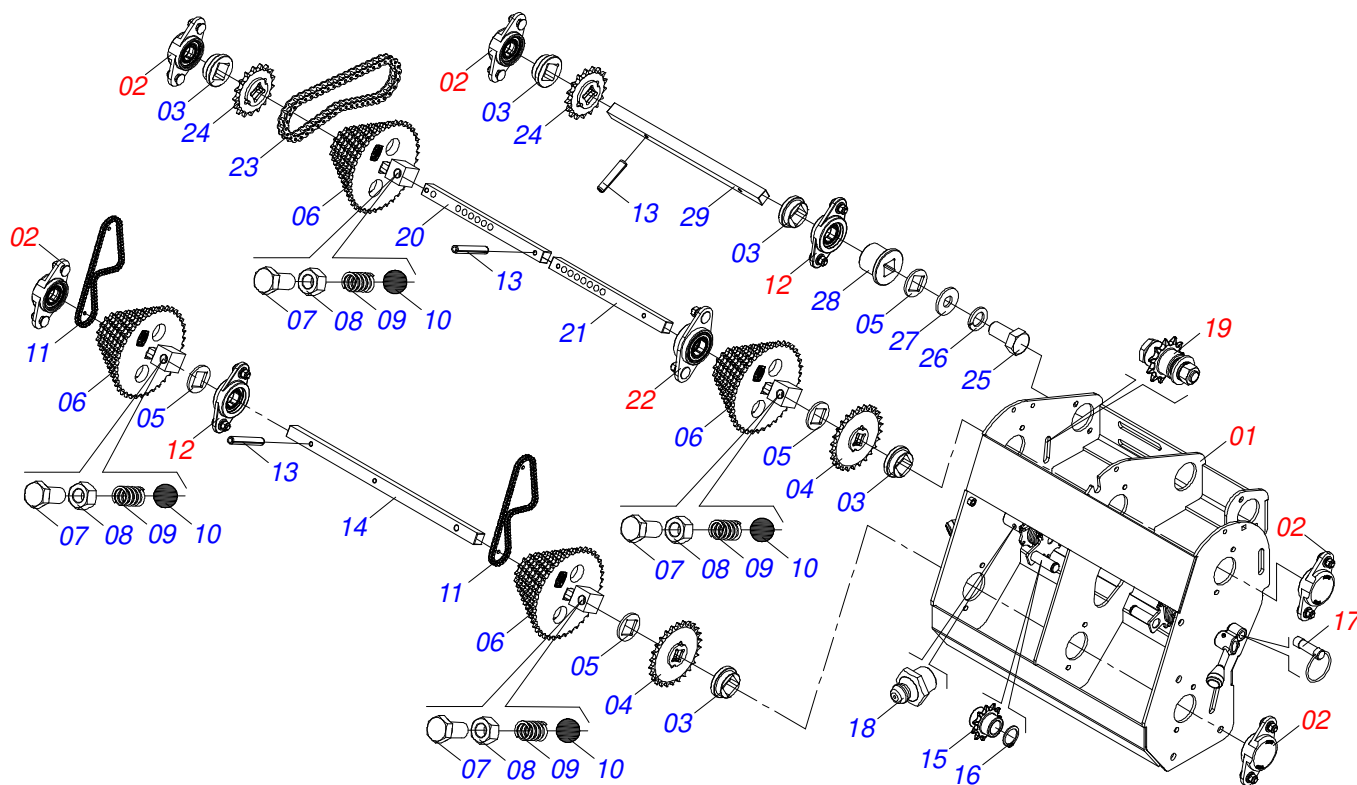


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	127	01
02	0511059266	CLOSED BEARING	119	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN SHAFT		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	121	02
13	0503010292	701164 6 X 40 SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	123	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	124	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	125	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8 SPRING WASHER		01
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

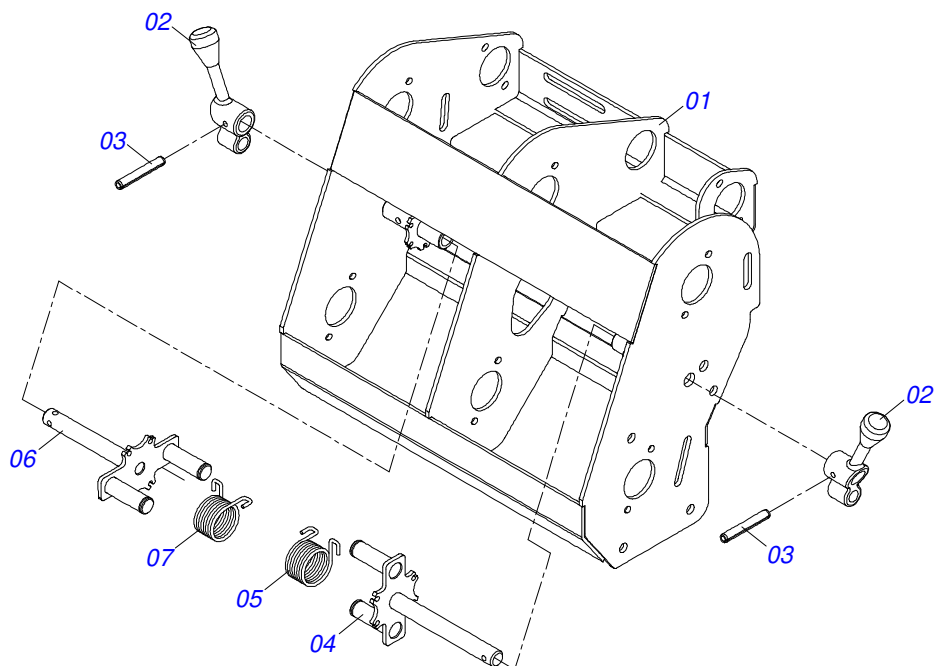


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TIGHTENER LEVER		02
03	0503010292	701164 6 X 40 SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING		01

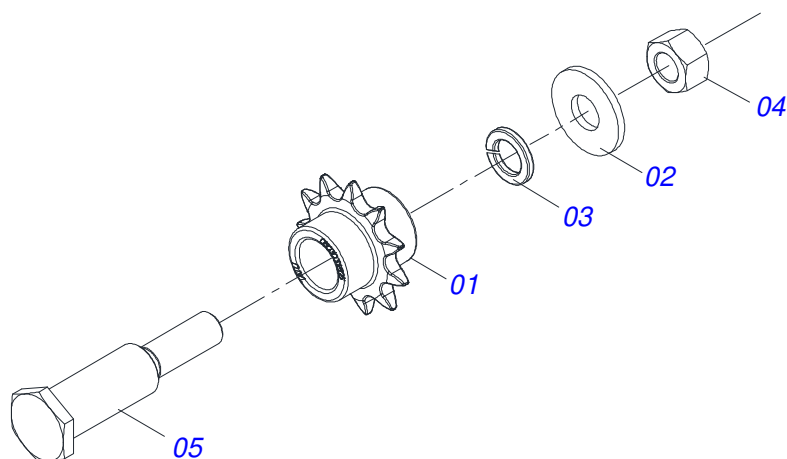


Item	Code	Description	See page	QT
01	0503031805	11Z 1/2" GEAR		01
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0531019479	AXLE CHAIN GEAR		01

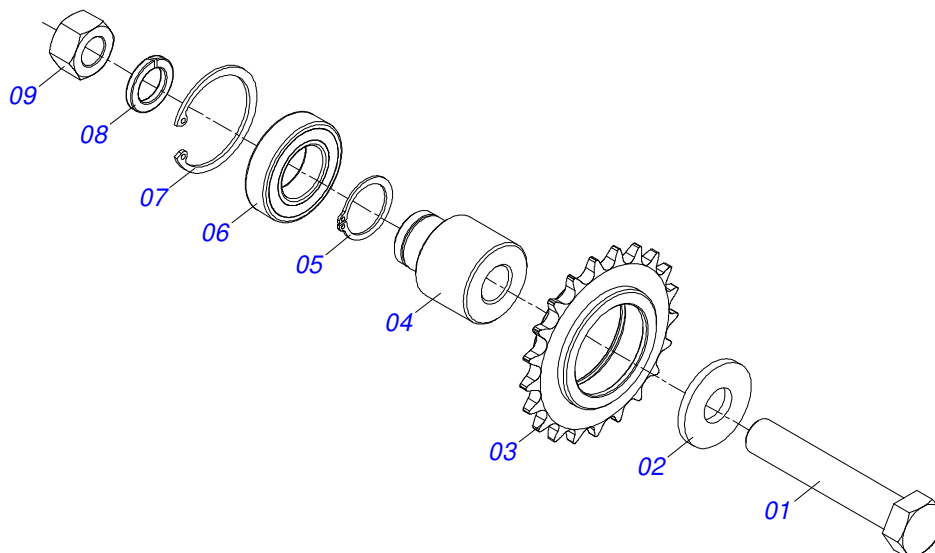


Item	Code	Description	See page	QT
01	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
02	0501012140	FLAT WASHER		01
03	0521069698	GEAR 21Z P 1/2		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503019356	BEARING 6005 2RS1		01
07	0503011105	SEAL RING		01
08	0503010027	5/8 SPRING WASHER		01
09	0503010013	5/8 NUT		01

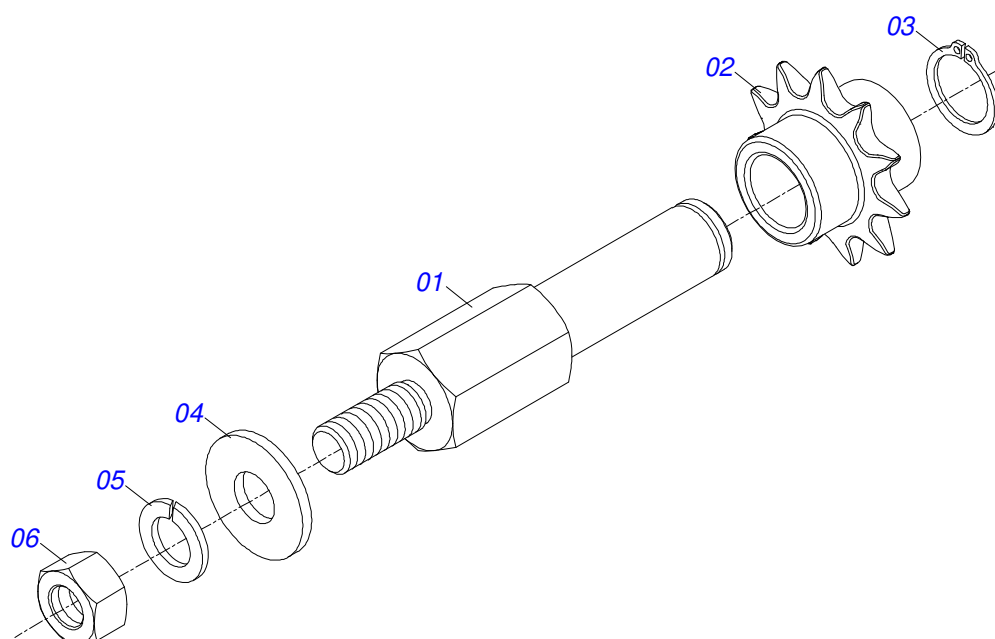


Item	Code	Description	See page	QT
01	0521018933	CHAIN TENSIONER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

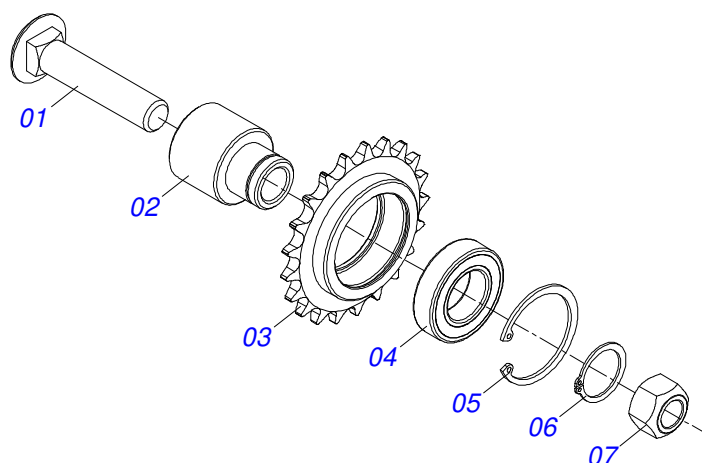


Item	Code	Description	See page	QT
01	0501011234	5/8" X 3" BOLT		01
02	0531017086	50 AXLETIGHTENER		01
03	0521069698	GEAR 21Z P 1/2		01
04	0503019356	BEARING 6005 2RS1		01
05	0503011105	SEAL RING		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		01
07	0503012412	5/8" UNC SELF LOCKING NUT		01

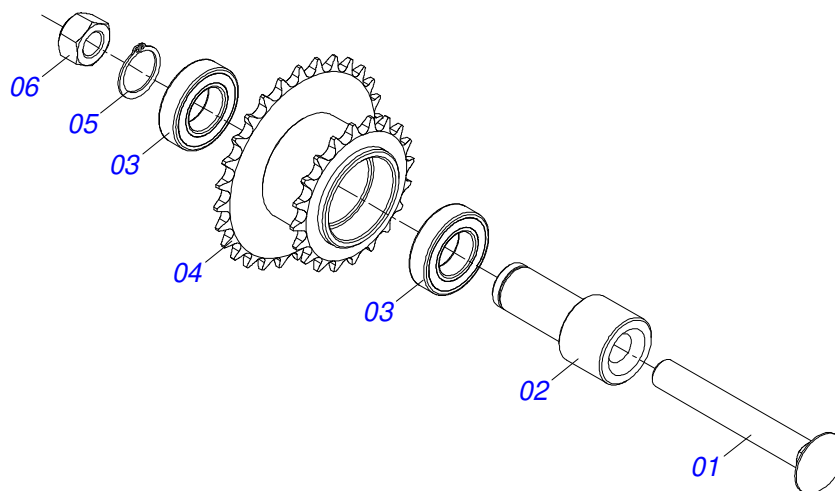


Item	Code	Description	See page	QT
01	0503016460	5/8" X 4.1/2" BOLT		01
02	0551019175	DOUBLE GEAR AXLE		01
03	0503019356	BEARING 6005 2RS1		02
04	0511069680	20Z X 28Z DOUBLE GEAR		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503012412	5/8" UNC SELF LOCKING NUT		01

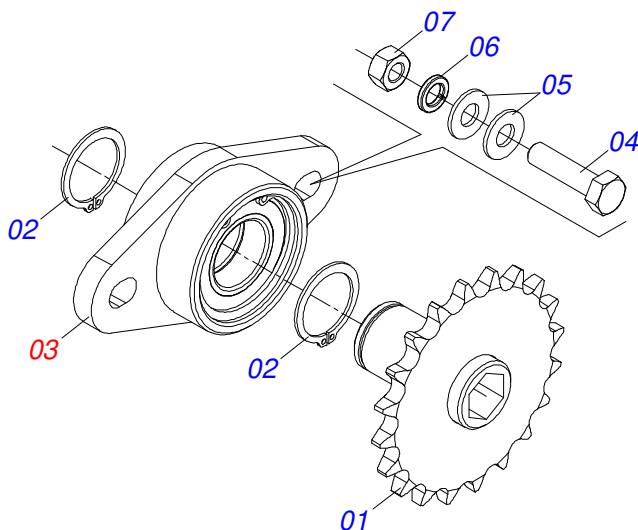


Item	Code	Description	See page	QT
01	0511063106	20Z AXLE BEARING DOUBLE		01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		02
03	0521055215	DOUBLE TRANSMISSION BEARING		01
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

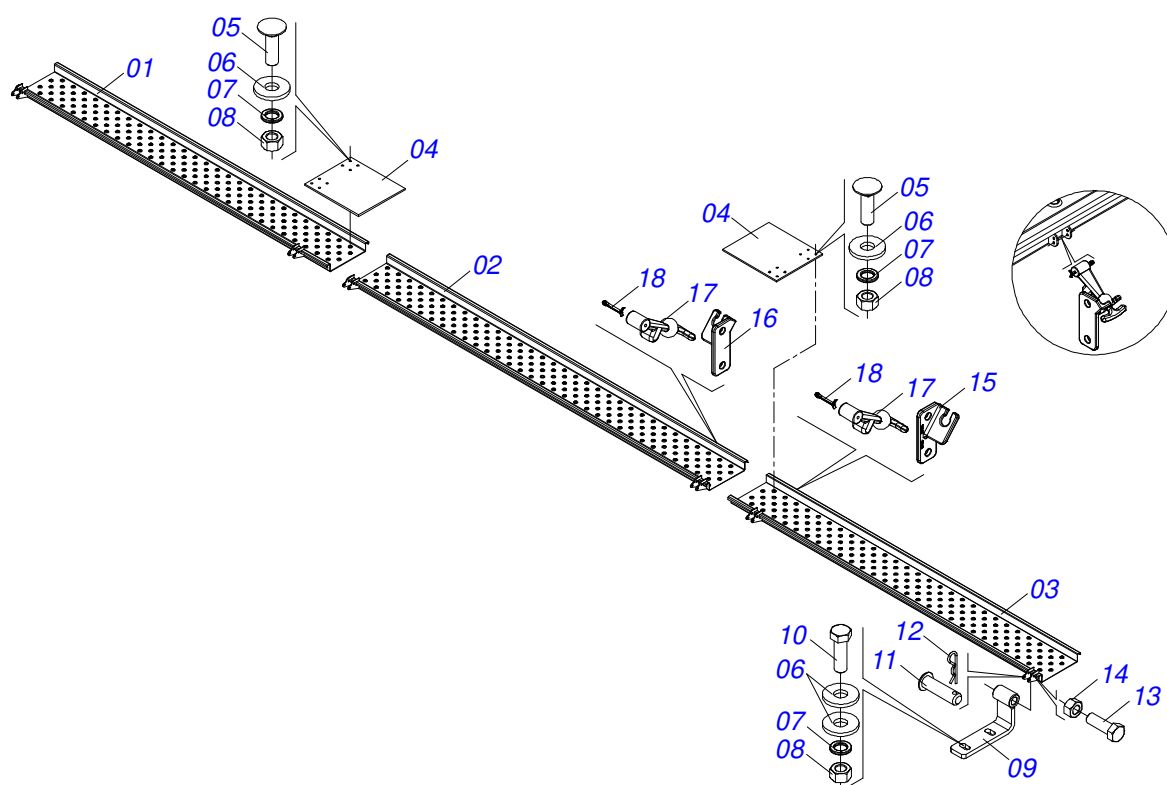


Item	Code	Description	See page	QT
01	0521068584	RIGHT PLATFORM		01
02	0521068596	CENTRAL PLATFORM		01
03	0521068592	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
07	0503010025	3/8 SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

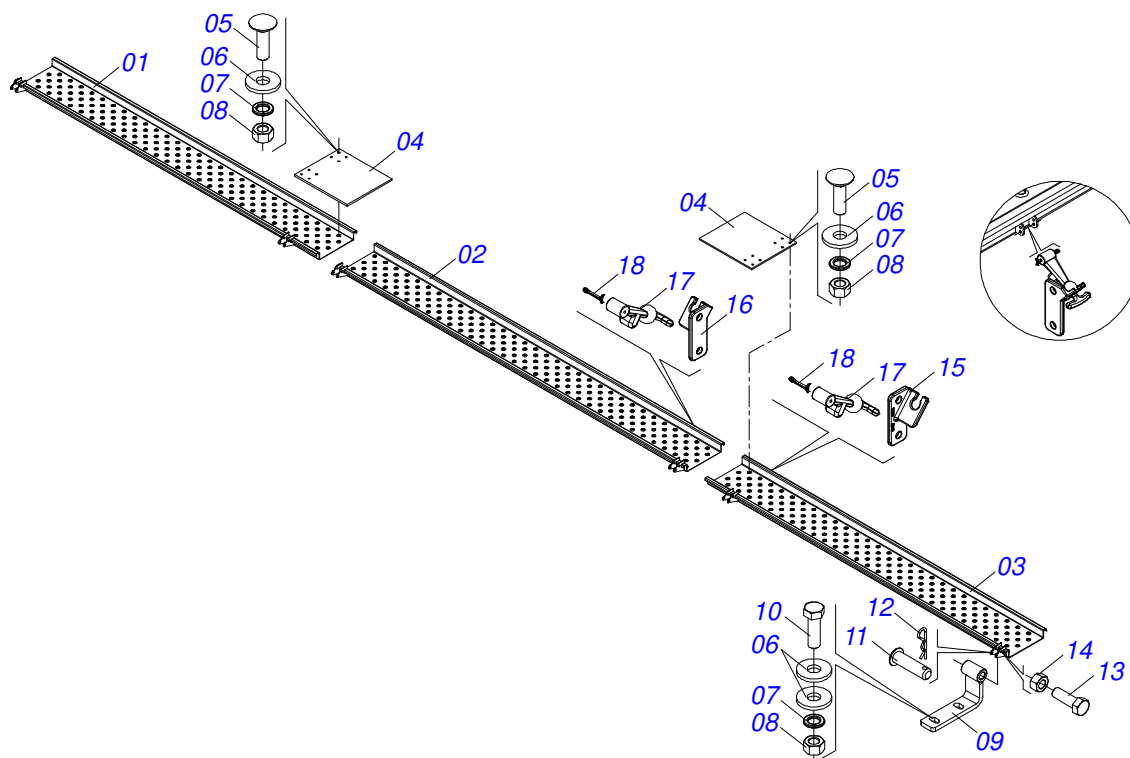


Item	Code	Description	See page	QT
01	0521068581	RIGHT PLATFORM		01
02	0521068597	CENTRAL PLATFORM		01
03	0521068589	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
07	0503010025	3/8 SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

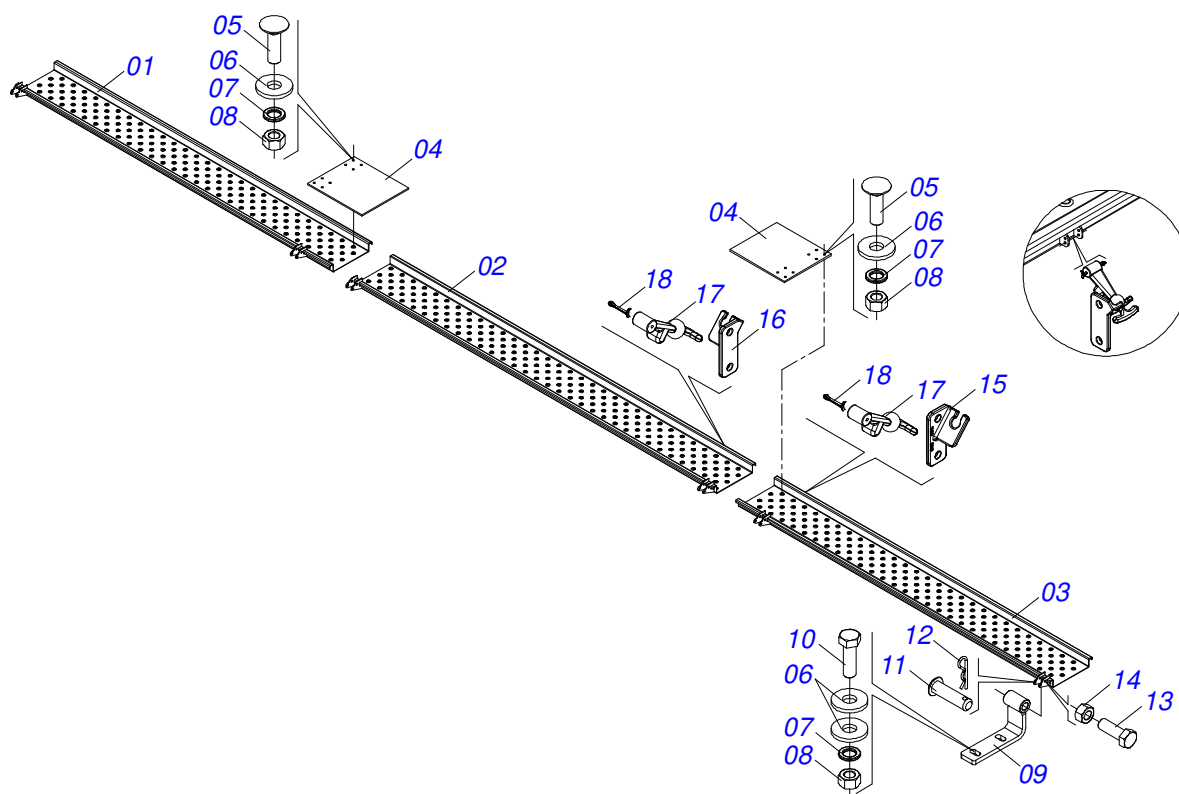


Item	Code	Description	See page	QT
01	0521069060	RIGHT PLATFORM		01
02	0521068596	CENTRAL PLATFORM		01
03	0521069059	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
07	0503010025	3/8 SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

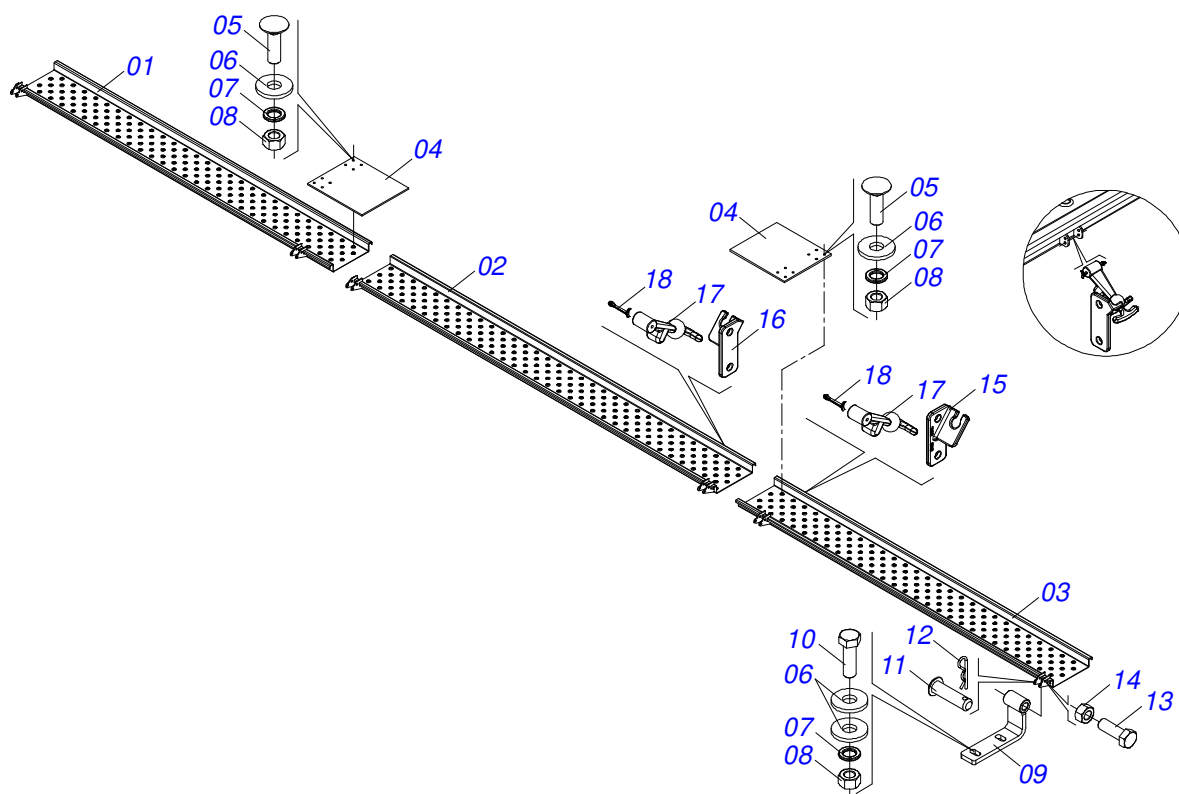


Item	Code	Description	See page	QT
01	0521068580	RIGHT PLATFORM		01
02	0521068596	CENTRAL PLATFORM		01
03	0521068588	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
07	0503010025	3/8 SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

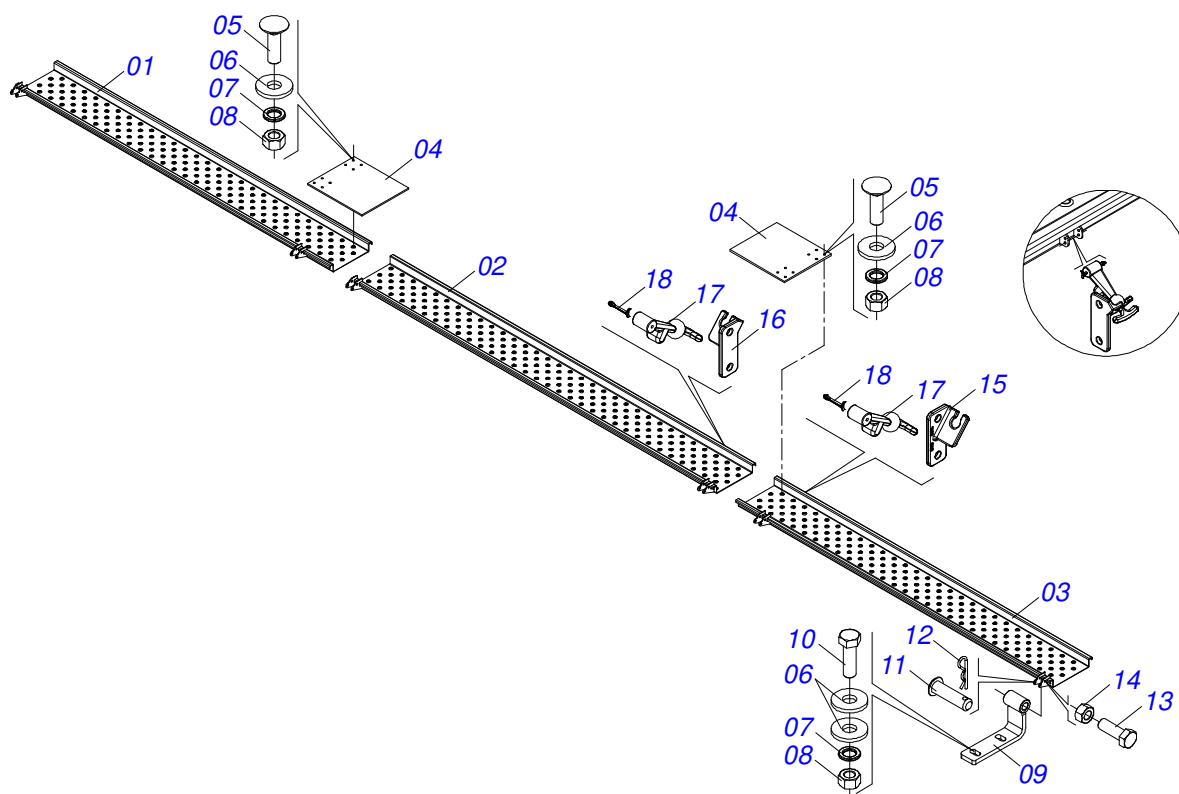


Item	Code	Description	See page	QT
01	0521068579	RIGHT PLATFORM		01
02	0521068595	CENTRAL PLATFORM		01
03	0521068587	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
07	0503010025	3/8 SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

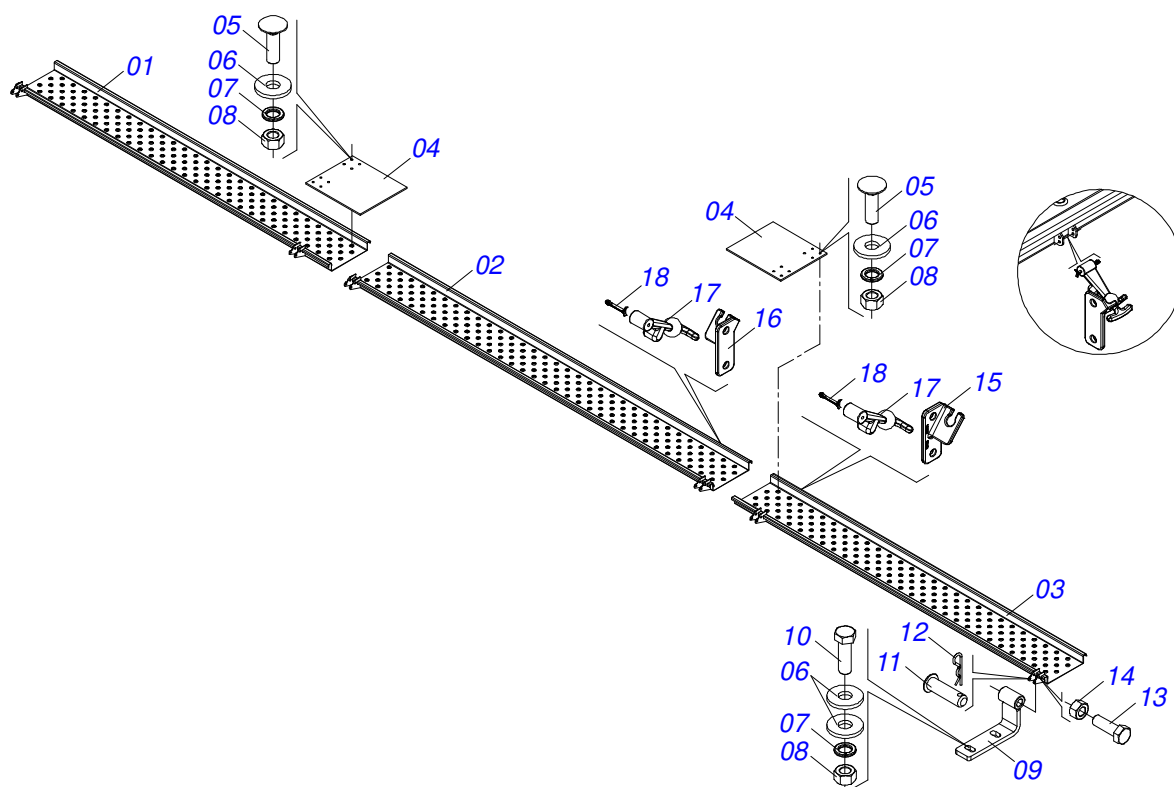


Item	Code	Description	See page	QT
01	0521068579	RIGHT PLATFORM		01
02	0521068596	CENTRAL PLATFORM		01
03	0521068587	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
07	0503010025	3/8 SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

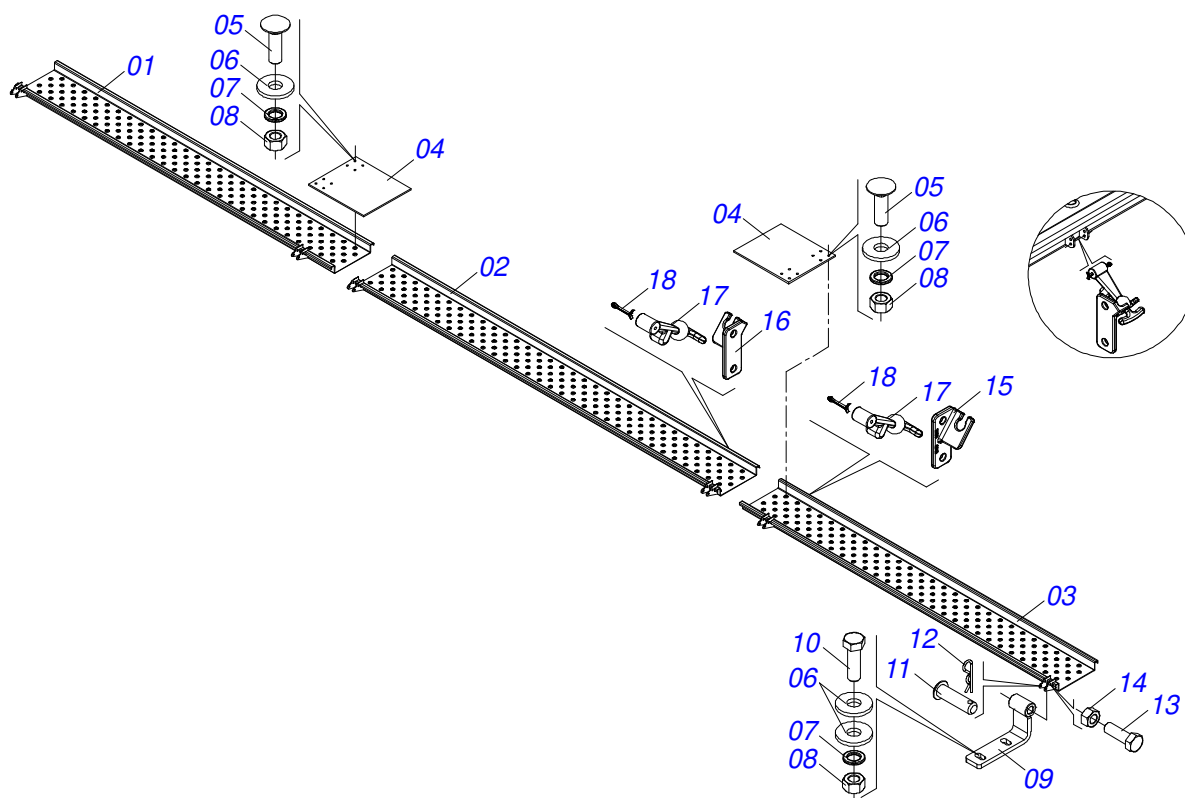


Item	Code	Description	See page	QT
01	0521068579	RIGHT PLATFORM		01
02	0521068594	CENTRAL PLATFORM		01
03	0521068587	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
07	0503010025	3/8 SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

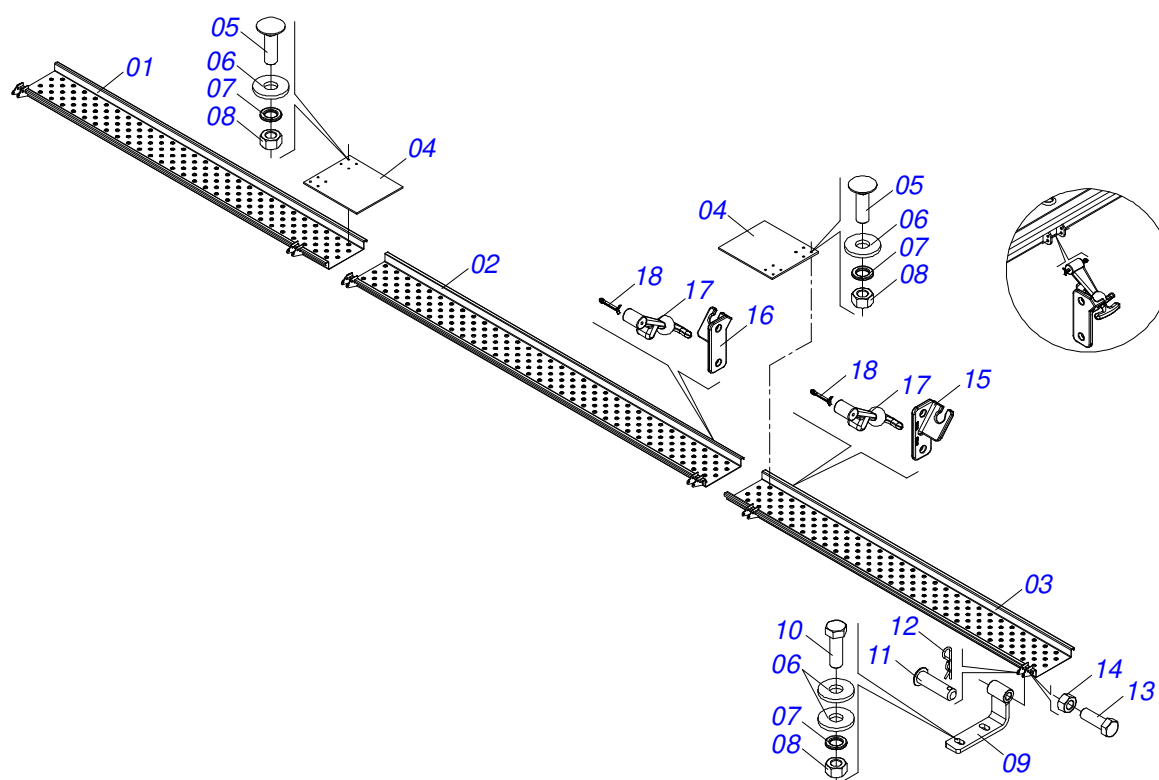


Item	Code	Description	See page	QT
01	0521068579	RIGHT PLATFORM		01
02	0521068313	PLATFORM CENTER		01
03	0521068587	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
07	0503010025	3/8 SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

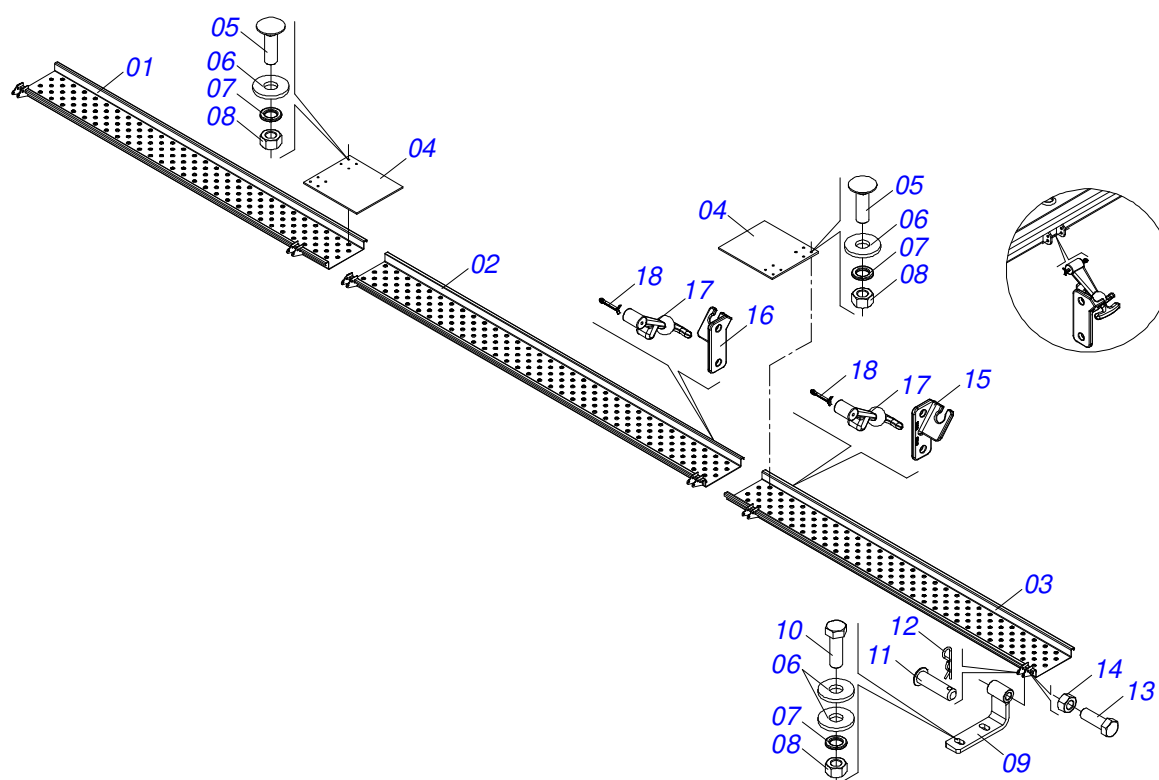


Item	Code	Description	See page	QT
01	0521068315	RIGHT PLATFORM		01
02	0521068594	CENTRAL PLATFORM		01
03	0521068314	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
07	0503010025	3/8 SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

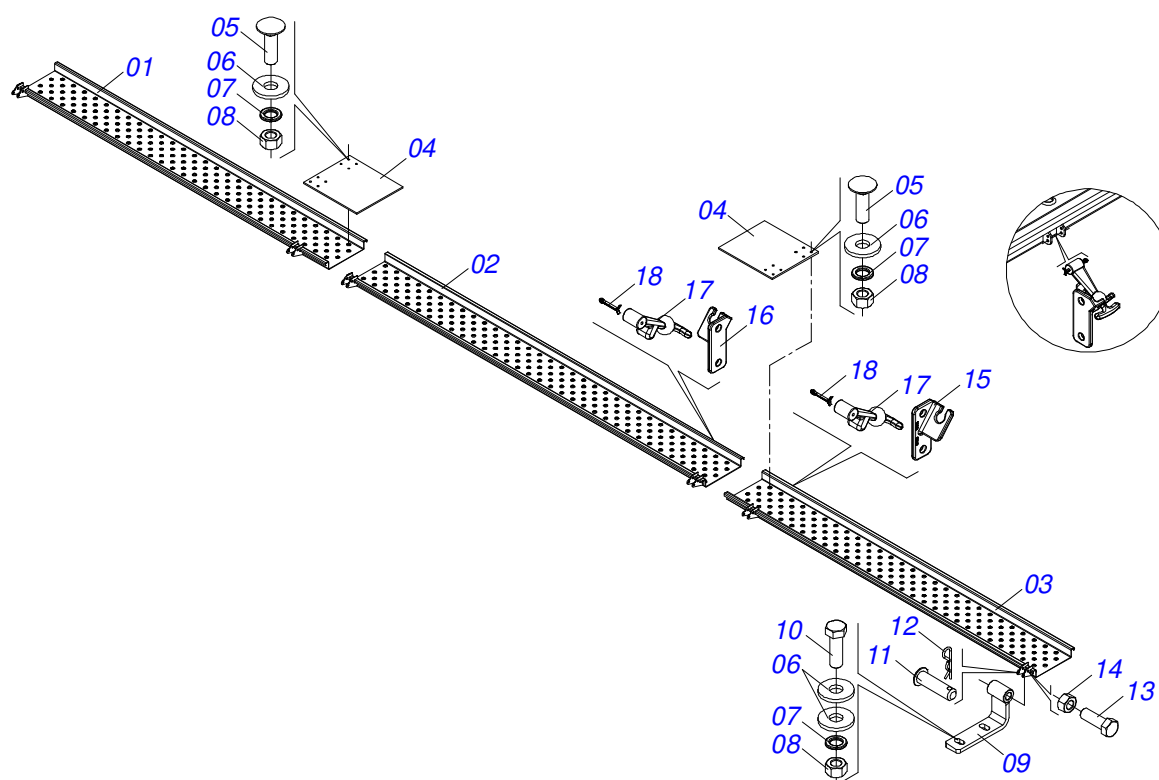


Item	Code	Description	See page	QT
01	0521068315	RIGHT PLATFORM		01
02	0521068313	PLATFORM CENTER		01
03	0521068314	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
07	0503010025	3/8 SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

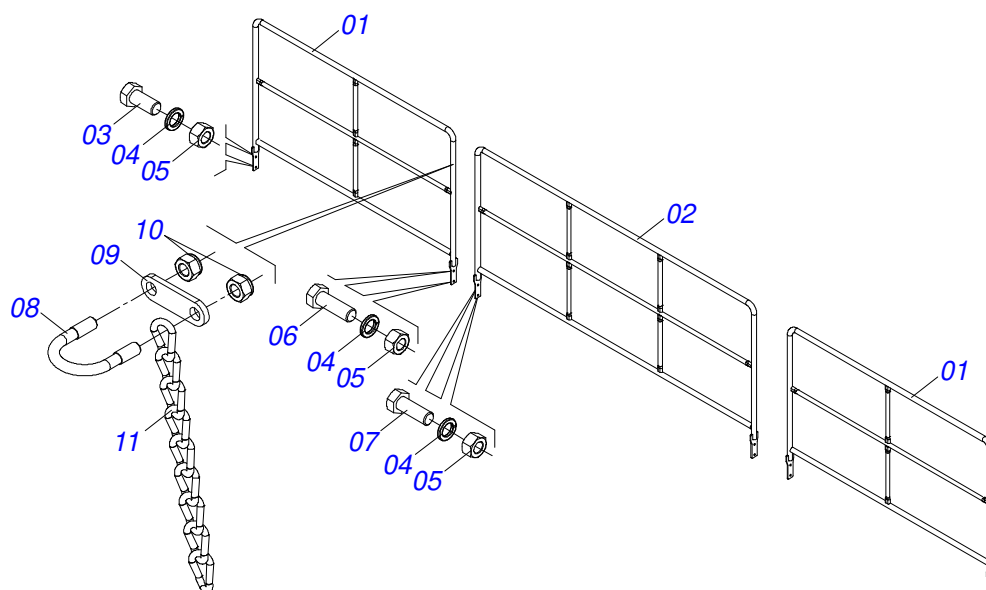


Item	Code	Description	See page	QT
01	0521068092	SIDE HANDRAIL		02
02	0521064018	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2 UNC G.5 ZN HEX NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8 SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

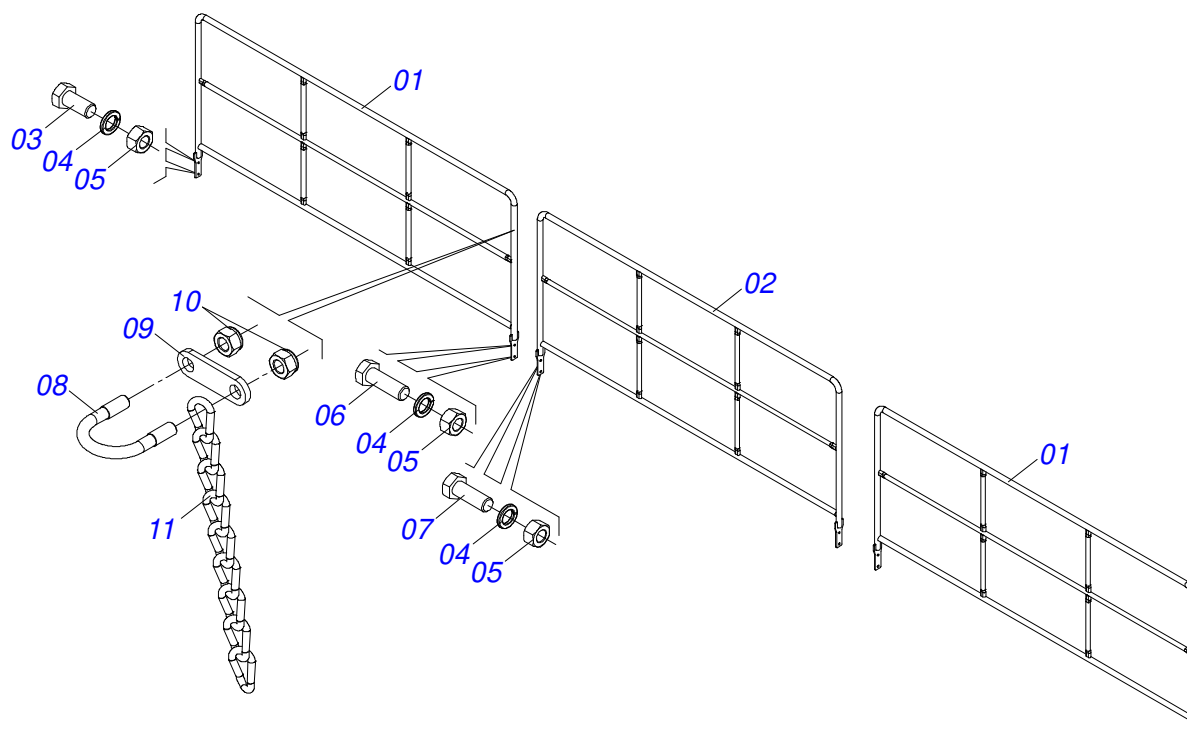


Item	Code	Description	See page	QT
01	0521063871	SIDE HANDRAIL		02
02	0521063875	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2 UNC G.5 ZN HEX NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8 SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

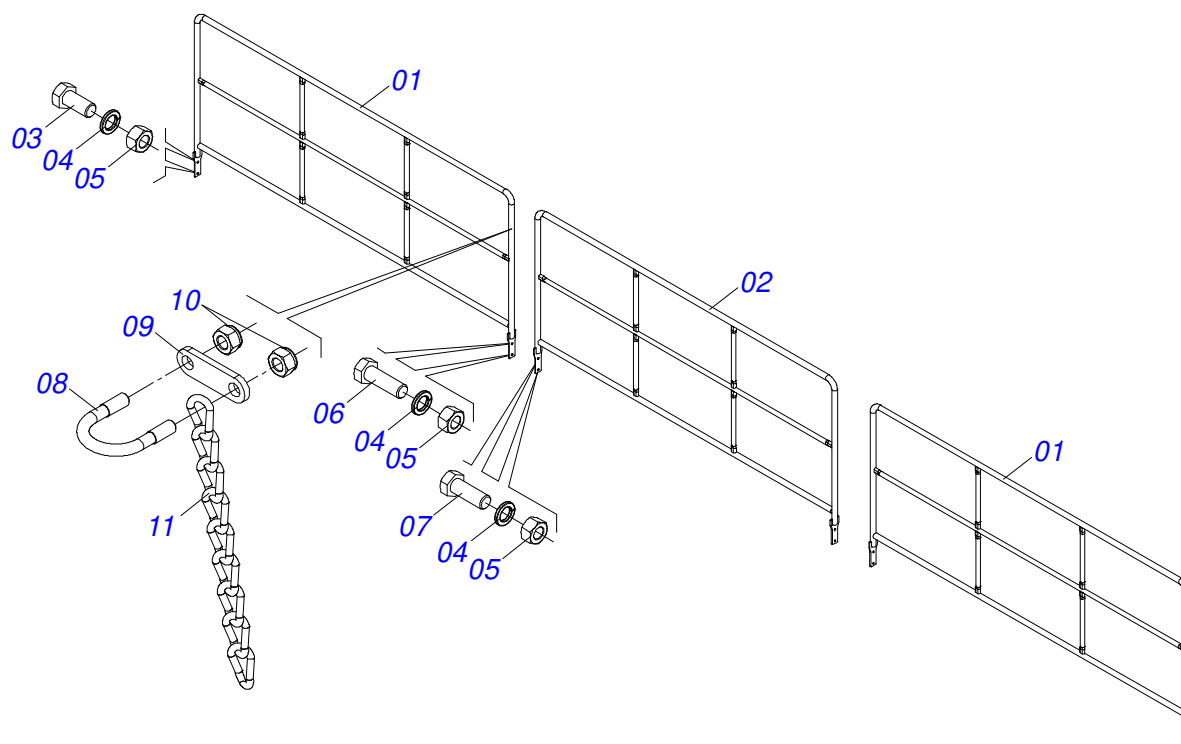


Item	Code	Description	See page	QT
01	0521069061	SIDE HANDRAIL	02	
02	0521064018	CENTRAL HANDRAIL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2 UNC G.5 ZN HEX NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8 SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

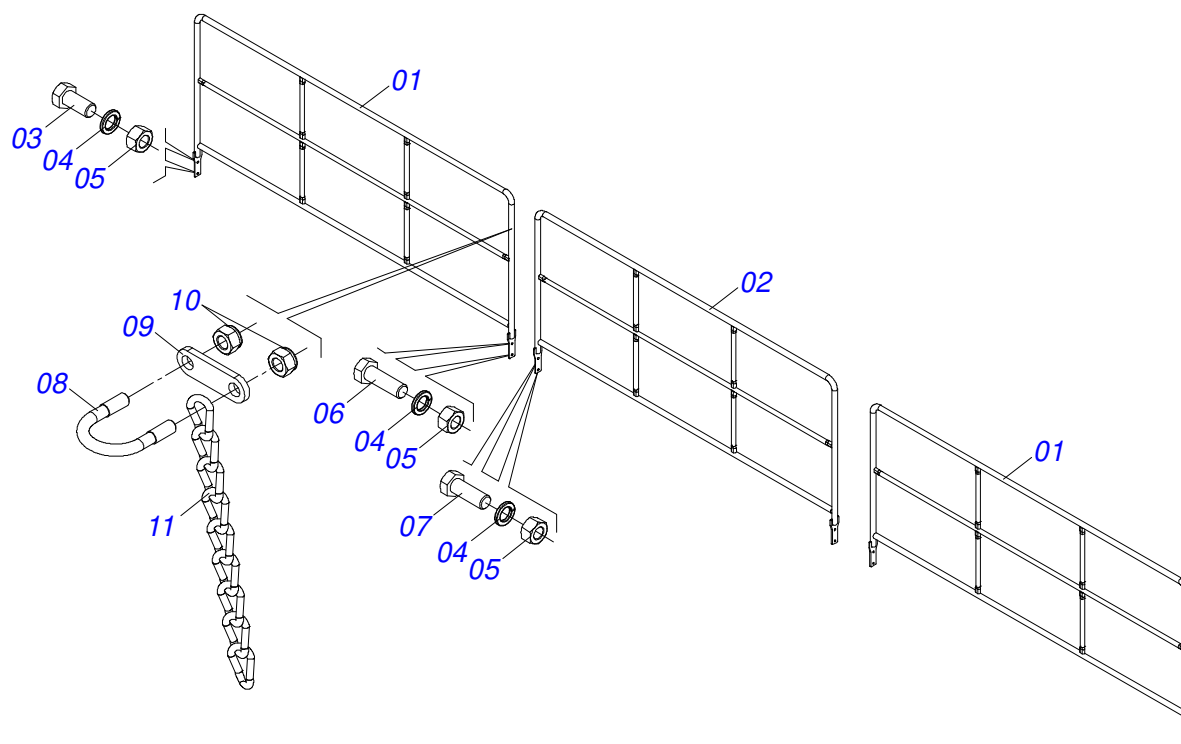


Item	Code	Description	See page	QT
01	0521064019	SIDE HANDRAIL		02
02	0521064018	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2 UNC G.5 ZN HEX NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8 SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

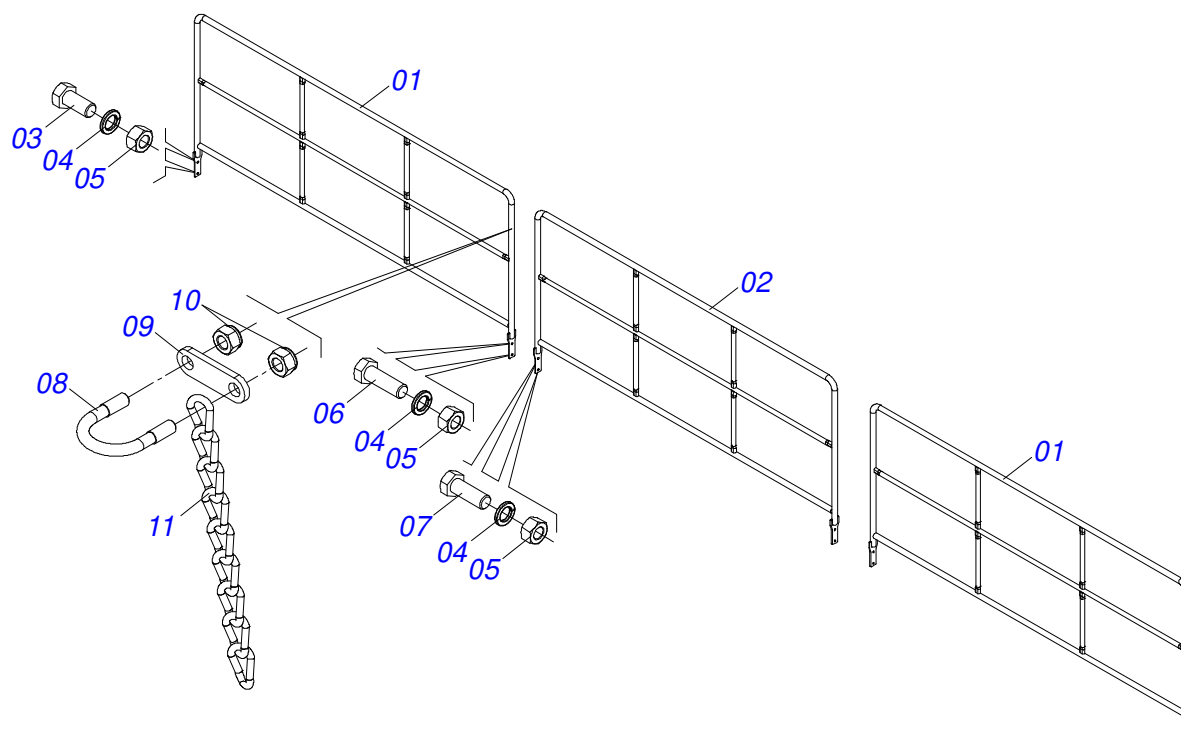


Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL		02
02	0521064279	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2 UNC G.5 ZN HEX NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8 SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

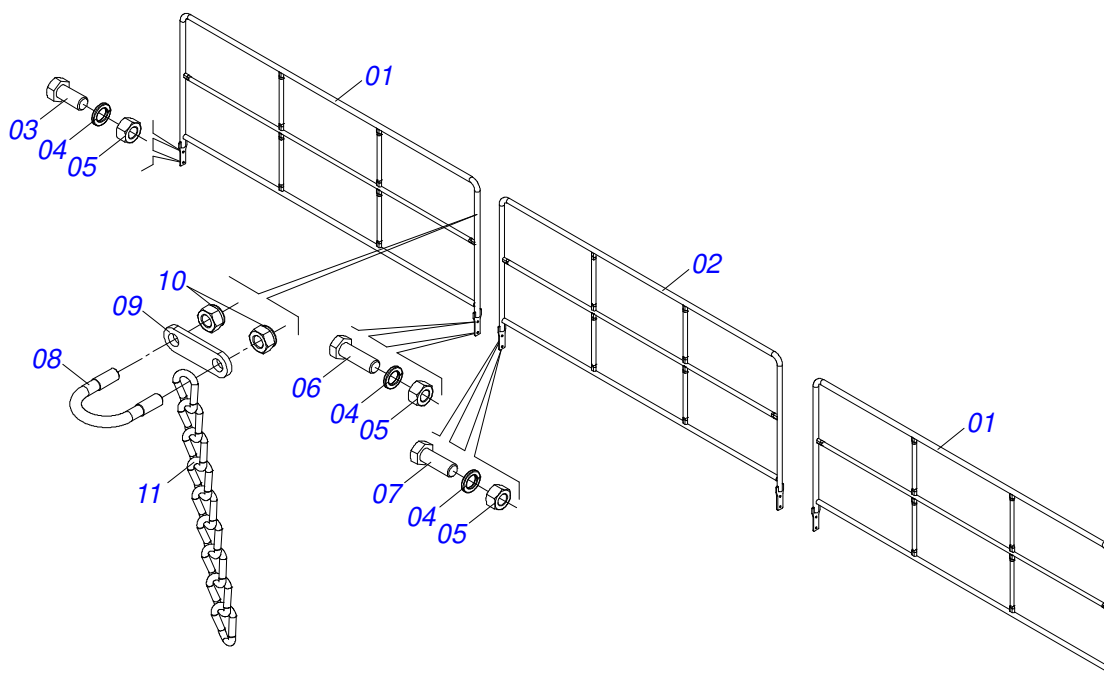


Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL	02	
02	0521064018	CENTRAL HANDRAIL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2 UNC G.5 ZN HEX NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8 SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

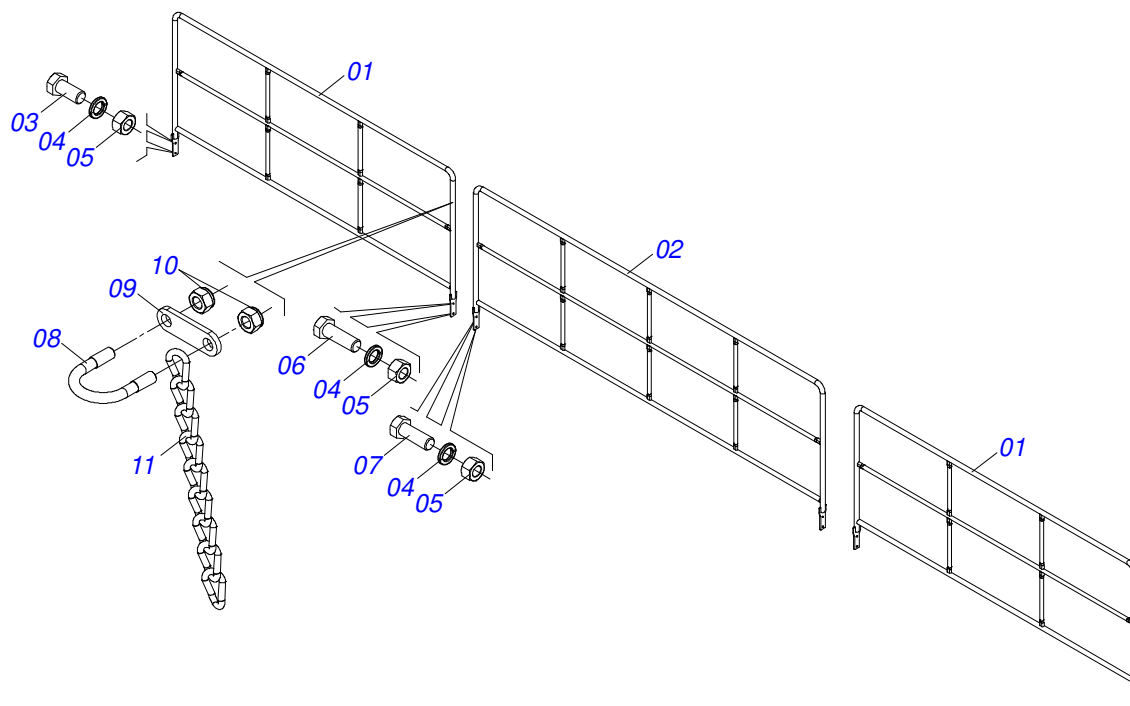


Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL		02
02	0521065205	HANDRAIL CENTRAL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2 UNC G.5 ZN HEX NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8 SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

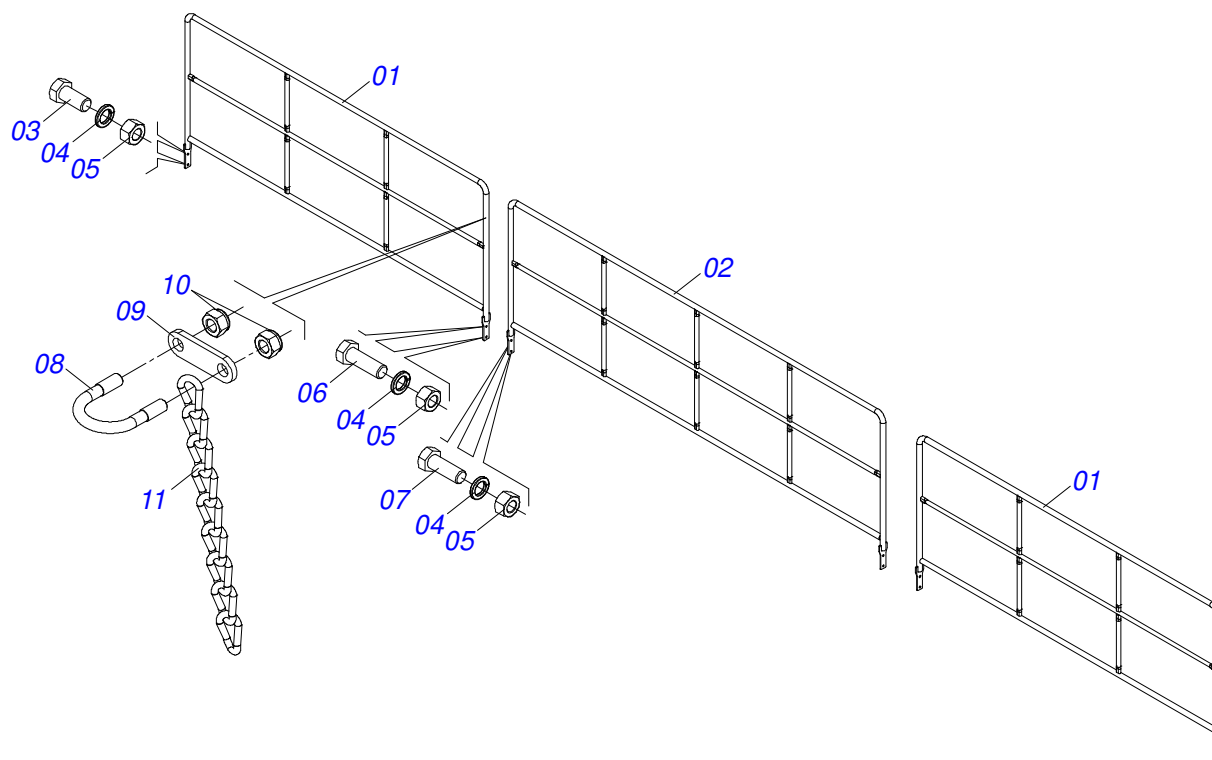


Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL	02	
02	0521064843	CENTRAL HANDRAIL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2 UNC G.5 ZN HEX NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8 SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

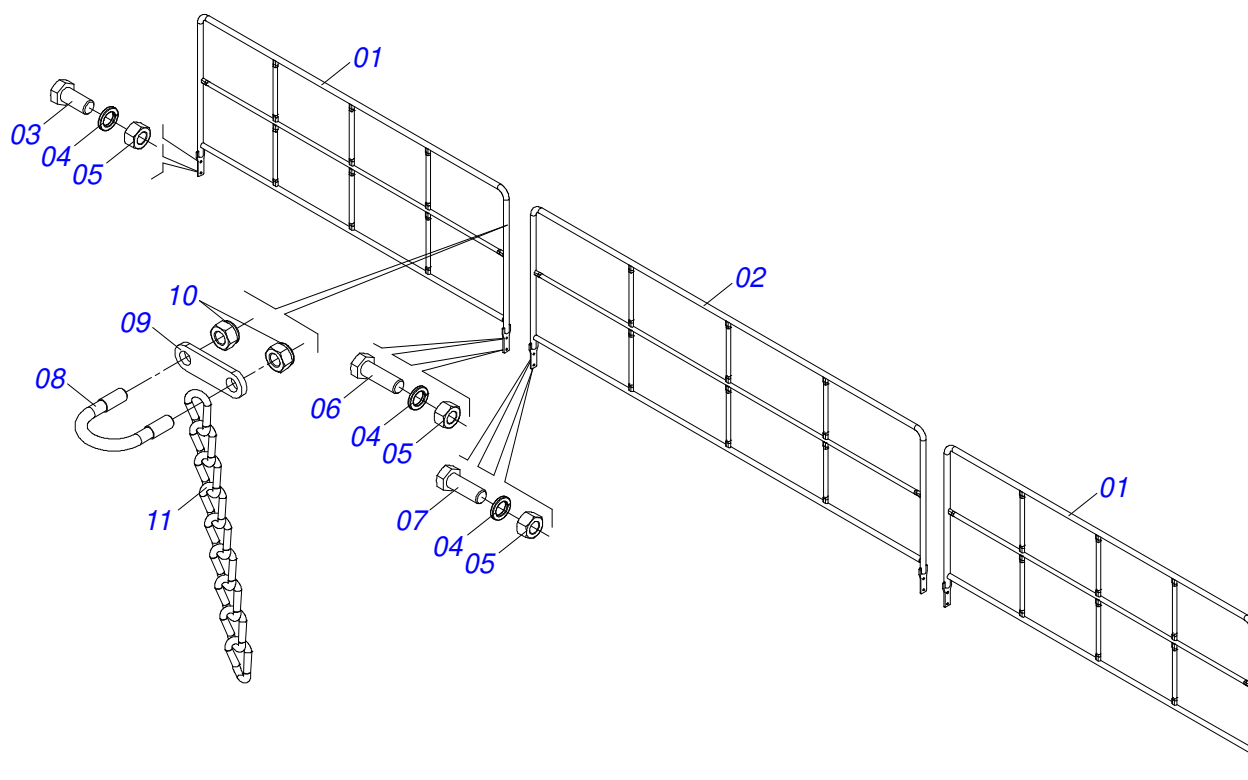


Item	Code	Description	See page	QT
01	0521064844	SIDE HANDRAIL	02	
02	0521065205	HANDRAIL CENTRAL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2 UNC G.5 ZN HEX NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8 SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

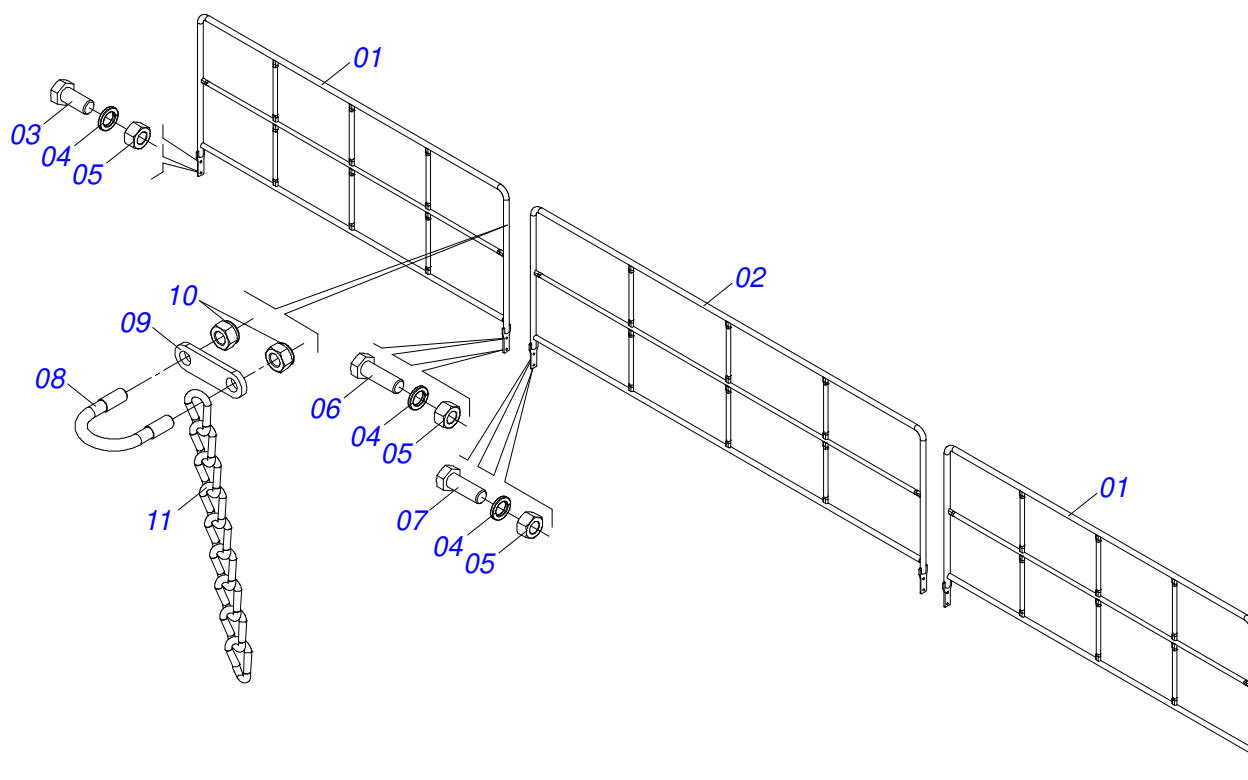


Item	Code	Description	See page	QT
01	0521064844	SIDE HANDRAIL	02	
02	0521064843	CENTRAL HANDRAIL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2 UNC G.5 ZN HEX NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8 SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

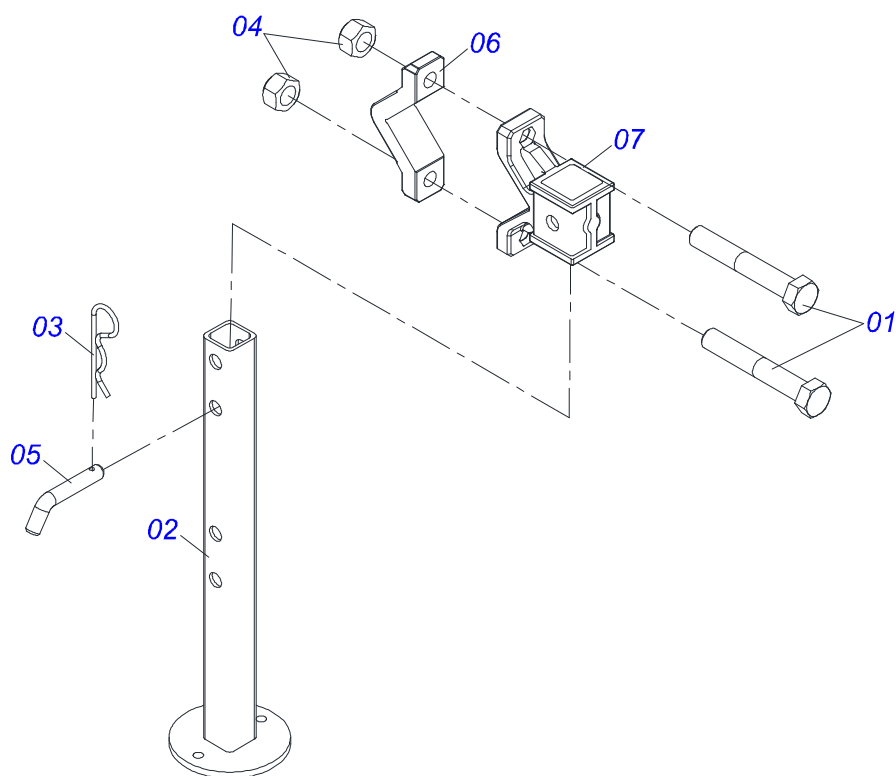

Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HITCH PIN CLIP		01
04	0503012412	5/8" UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

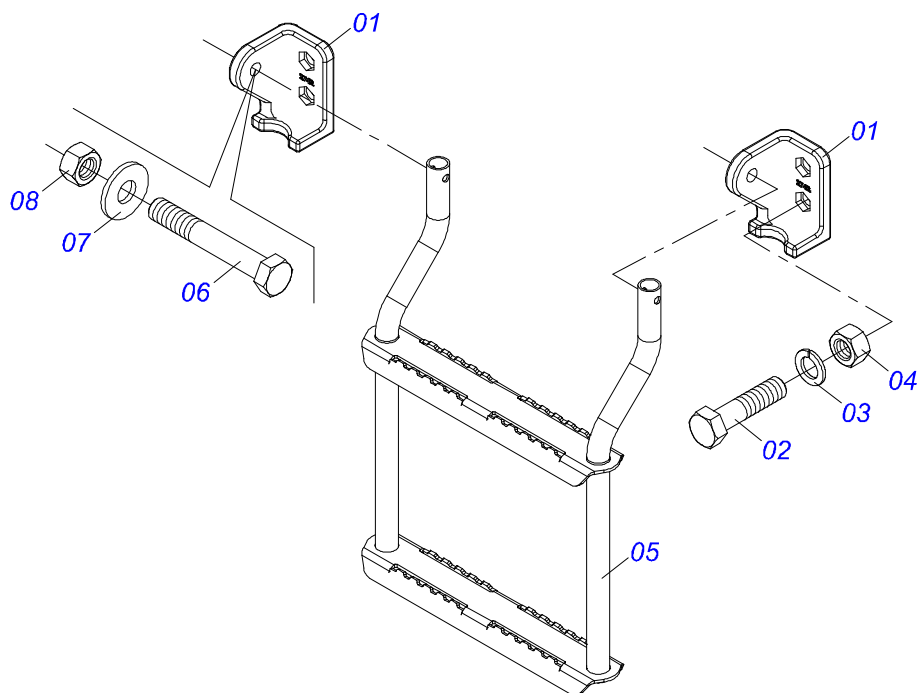


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8 SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER	02	
08	0503013357	3/8 SELF-ADJUSTING NUT	02	

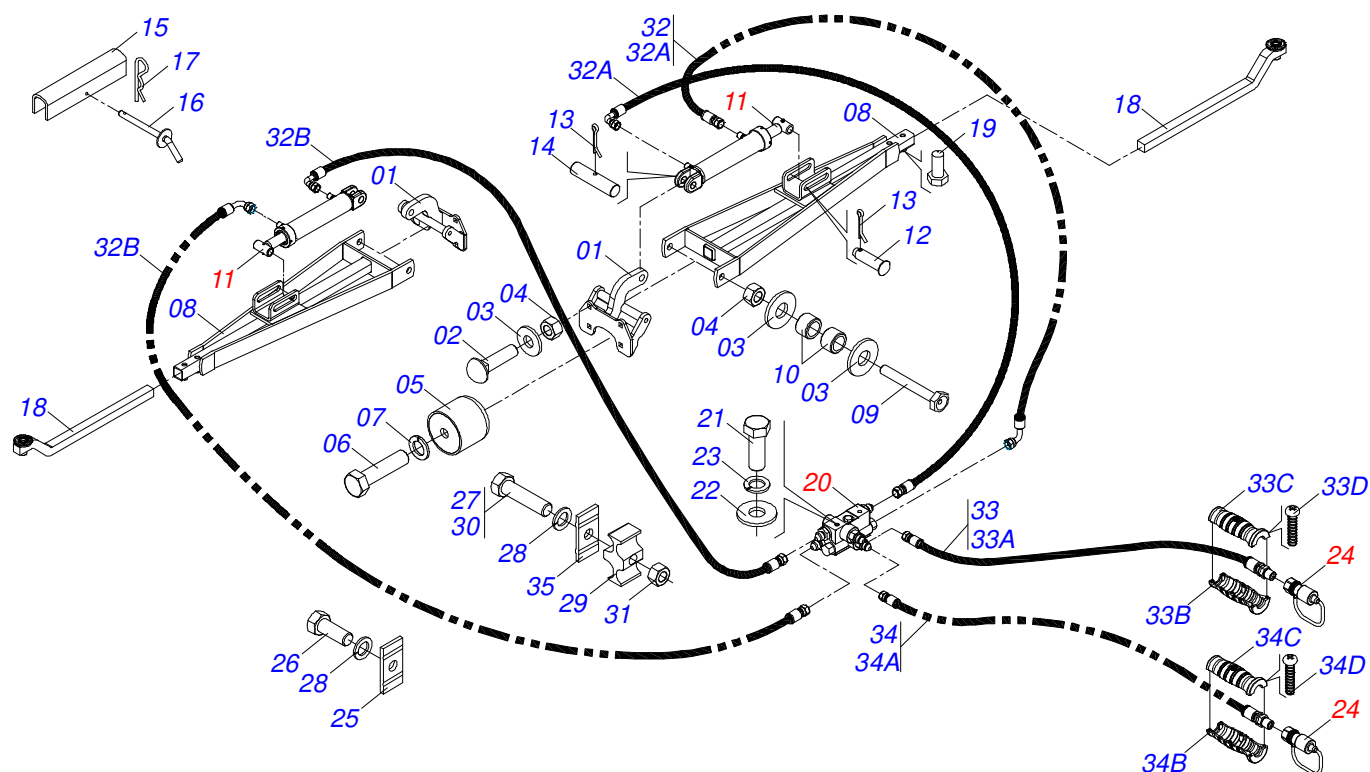


Item	Code	Description	See page	QT
01	0511069622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
03	0501012140	FLAT WASHER		12
04	0503012412	5/8" UNC SELF LOCKING NUT		10
05	0503011070	BEATER		02
06	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
07	0503010019	1/2" SPRING WASHER		02
08	0511061811	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0511058449	HYDRAULIC CYLINDER	157	02
12	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
13	0503010523	1/4" X 2" SPLIT PIN		04
14	0511015779	1" X 4.2" AXLE		02
15	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
16	0501068994	8,30 X 78 LOCK PIN		02
17	0503030168	HITCH PIN CLIP		02
18	0501066949	1235 TURNBUCKLE		02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
20	0501054649	HBM SEQUENTIAL VALVE	158	01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
22	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
23	0503010025	3/8 SPRING WASHER		02
24	0501053834	MALE QUICK COUPLER	67	02
25	0531011180	UPPER BODY CLIP		10
26	0503011102	BOLT 7/16 UNC X 1.1/4 C S G.5 ZN		04
27	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
28	0503010180	7/16" SPRING WASHER		10
29	0502012702	BODY SUPPORT CLAMP		10
30	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
31	0503010244	7/16" NUT		04


Item	Code	Description	See page	QT
32	0521051624	HYDRAULIC MARKER HANDLE SET		01
32A	0501080612	HOSE 3/8 X 4450 TR-TC		02
32B	0501080418	3/8" X 165" TR-TC HOSE		02
33	0521052277	HOSE 3/8 X 4212 TC-TM PURPLE / RED		01
33A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
33B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
33C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
33D	0503018952	PLASTIC BOLT		06
34	0521052278	HOSE 3/8 X 4212 TC-TM PURPLE / BLUE		01
34A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
34C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
34D	0503018952	PLASTIC BOLT		06

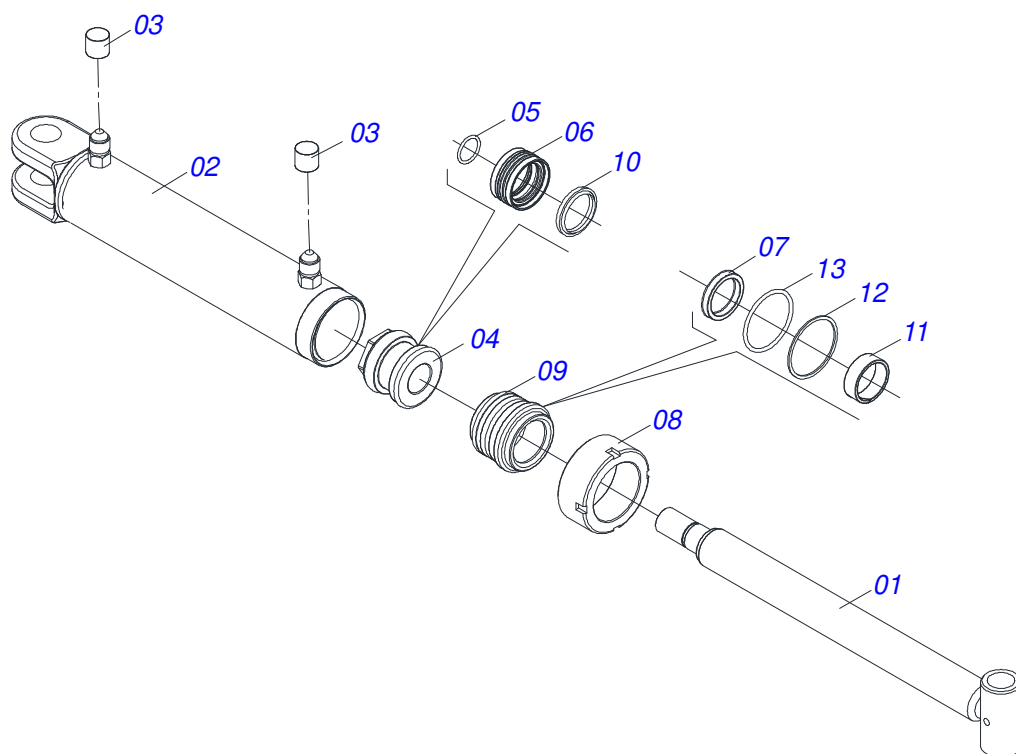

Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

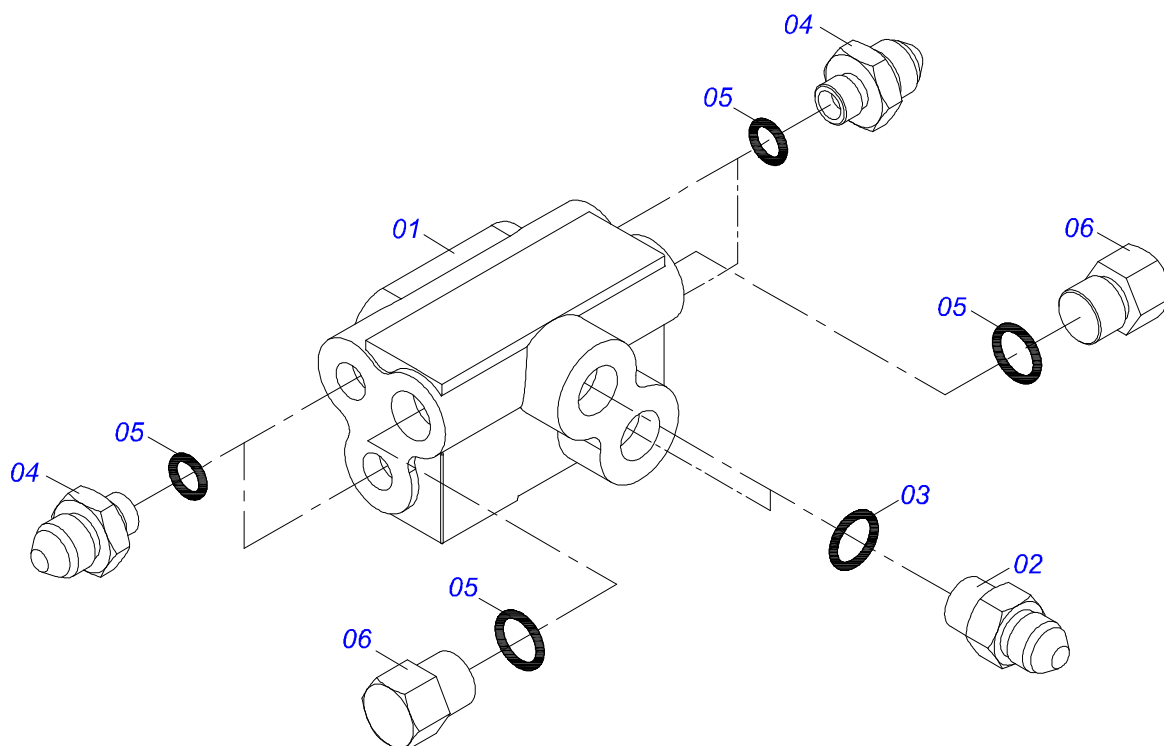

Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

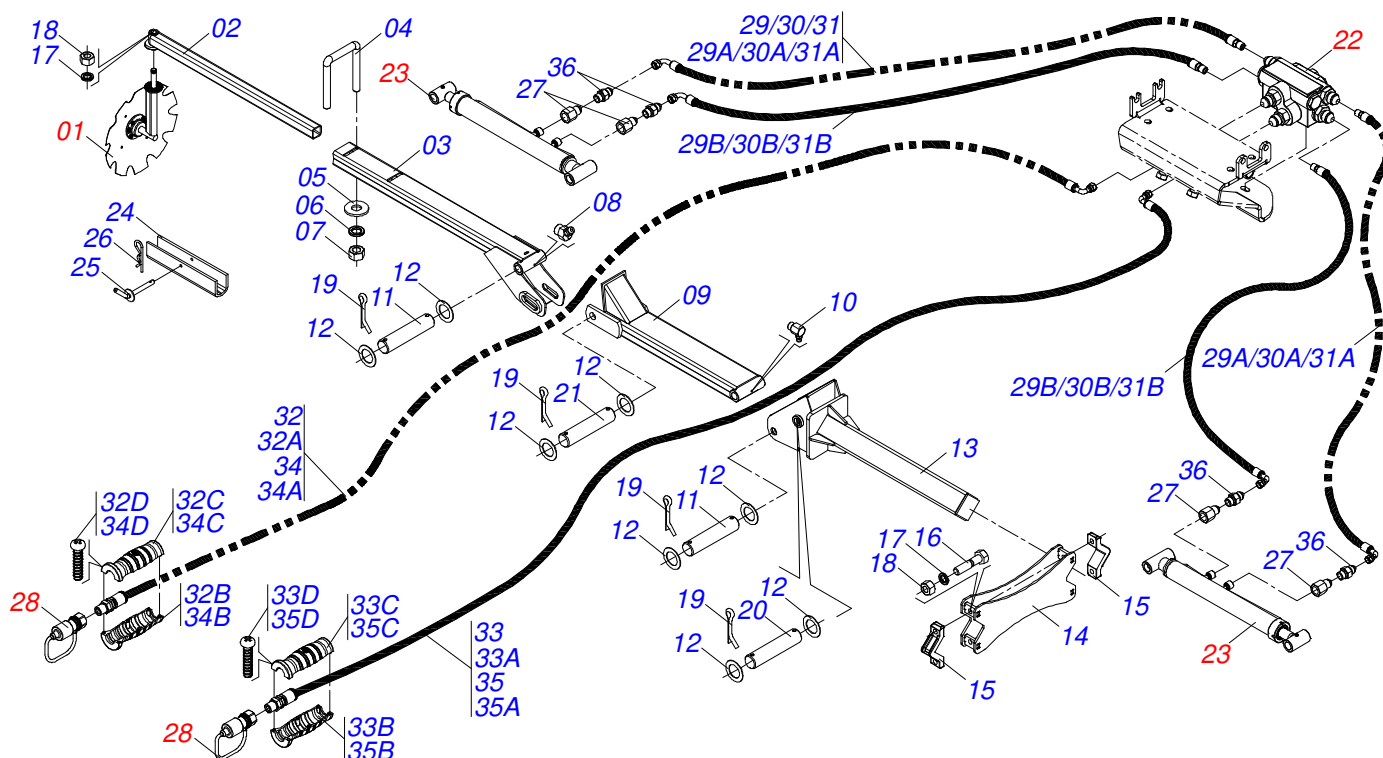


Item	Code	Description	See page	6850	7285	7450	7960
01	0501050633	ROW MARKER DISC ASSEMBLY	160	002	002	002	002
02	0521061790	1750 TURNBUCKLE		002	002	002	002
03	0511060014	ROW MARKER ARM		002	002	002	002
04	0521012324	1/2" X 3.2" X 2.54" FASTENER		004	004	004	004
05	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		008	008	008	008
06	0503010019	1/2" SPRING WASHER		008	008	008	008
07	0503010060	1/2 UNC G.5 ZN HEX NUT		008	008	008	008
08	0503010003	1845 GREASE FITTING		002	002	002	002
09	0511060013	ROW MARKER ARM		002	002	002	002
10	0503010004	1890 GREASE FITTING		002	002	002	002
11	0521011142	1.1/4" X 7.5" AXLE		004	004	004	004
12	0501019435	32 X 50 X 1.5 FLAT WASHER		016	016	016	016
13	0511061022	ROW MARKER SUPPORT		002	002	002	002
14	0511066119	MARKER SUPP FIXER FASTENER		004	004	004	004
15	0502010175	HITCH CLAMP		008	008	008	008
16	0501010216	3/4 UNC X 4.1/2 C S G.5 ZN BOLT		016	016	016	016
17	0503010023	3/4" SPRING WASHER		016	016	016	016
18	0503010014	3/4" HEX NUT		016	016	016	016
19	0503010523	1/4" X 2" SPLIT PIN		016	016	016	016
20	0521013347	1.1/4" X 8.4" AXLE		002	002	002	002
21	0521011141	1.1/4" X 6.5" AXLE		002	002	002	002
22	0501054649	HBM SEQUENTIAL VALVE	158	001	001	001	001
23	0511058431	HYDRAULIC CYLINDER	161	002	002	002	002
24	0511015573	2.07" X 1.6" TRANSPORT LOCK		002	002	002	002
25	0501068994	8,30 X 78 LOCK PIN		002	002	002	002
26	0503030168	HITCH PIN CLIP		002	002	002	002
27	0511018012	HIDRAULIC ADAPTER		004	004	004	004
28	0501053834	MALE QUICK COUPLER	67	002	002	002	002
29	0511057093	HYDRAULIC MARKER HYGIENE SET		001	000	000	000
29A	0501081791	HOSE ASSY		002	000	000	000
29B	0501080388	3/8 X 4300 TR-TC HOSE ASSY		002	000	000	000


ASSY MARKER HYDRAULIC ARTICULATED DOUBLE

0909095167


Item	Code	Description	See page	6850	7285	7450	7960
30	0511057094	HYDRAULIC HOSE MARKER ASSY 6450		000	001	001	000
30A	0501081093	3/8" X 188.9" TR-TC HOSE ASSY		000	002	002	000
30B	0501081804	HOSE ASSY		000	002	002	000
31	0521052851	HYDRAULIC MARKER HAND ASSY		000	000	000	001
31A	0501081225	HOSE 3/8 X 5000 TR-TC		000	000	000	002
31B	0501081465	HOSE 3/8 X 4890 TR-TC		000	000	000	002
32	0521052278	HOSE 3/8 X 4212 TC-TM PURPLE / BLUE		001	001	001	000
32A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		001	001	001	000
32B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		001	001	001	000
32C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		001	001	001	000
32D	0503018952	PLASTIC BOLT		006	006	006	006
33	0521052277	HOSE 3/8 X 4212 TC-TM PURPLE / RED		001	001	001	000
33A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		001	001	001	000
33B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		001	001	001	000
33C	0503034495	HYDRAULIC HOSE GRIP (RED)		001	001	001	000
33D	0503018952	PLASTIC BOLT		006	006	006	006
34	0521052850	3/8 X 4200 TC-TM PURPLE/BLUE HOSE		000	000	000	001
34A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		000	000	000	001
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		000	000	000	001
34C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		000	000	000	001
34D	0503018952	PLASTIC BOLT		000	000	000	006
35	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		000	000	000	001
35A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		000	000	000	001
35B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		000	000	000	001
35C	0503034495	HYDRAULIC HOSE GRIP (RED)		000	000	000	001
35D	0503018952	PLASTIC BOLT		000	000	000	006
36	0501010617	3/4" NIPPLE		004	004	004	004

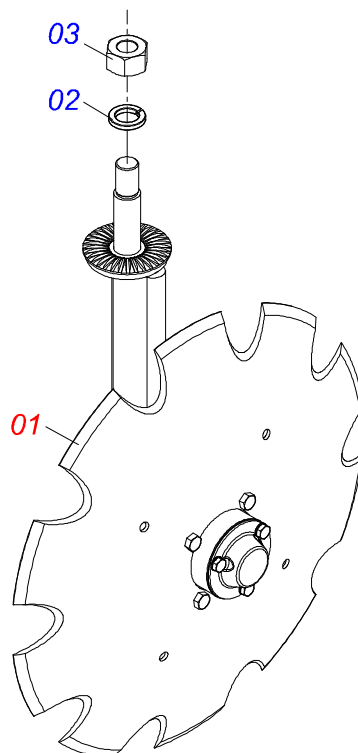

Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

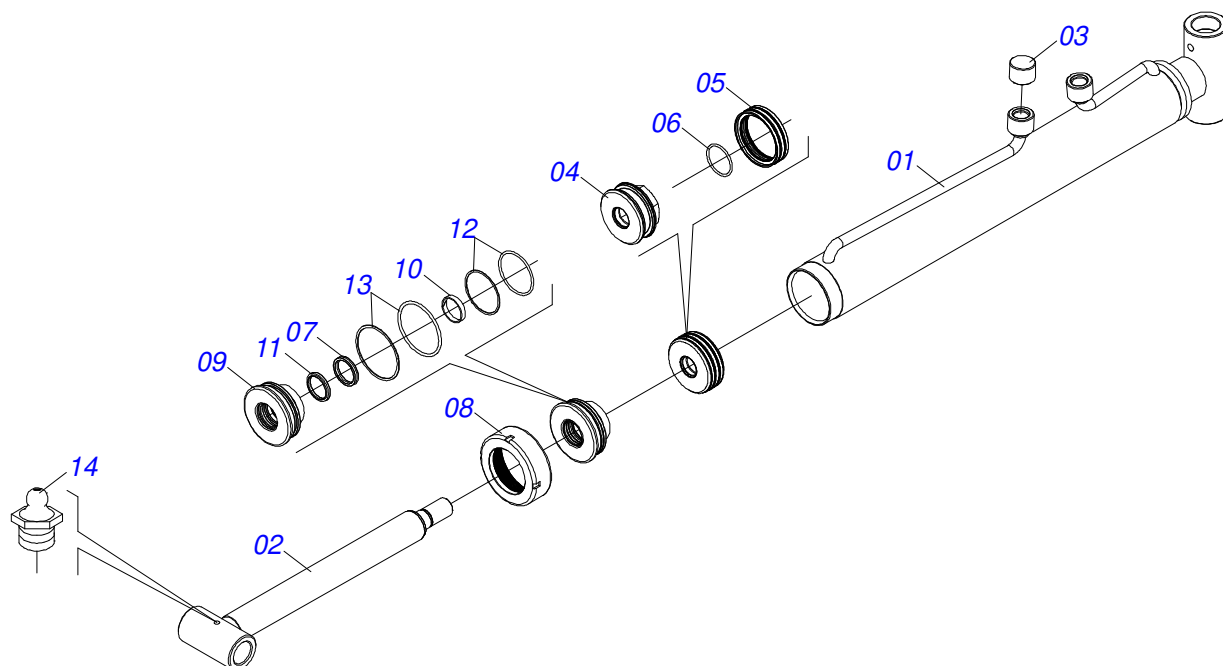

Item	Code	Description	See page	QT
01	0501067700	2.5" X 25" CYLINDER CASE		01
02	0521066632	EXTENDER		01
03	0503030384	CON PLUG N-001		02
04	0502012837	PISTON		01
05	0503018005	RING		01
06	0503011109	2-119 N 3006-9B O'RING		01
07	0503010163	D-1500 SCRAPER RING		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503018004	RING		01
11	0503018003	GASKET		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0503010002	1800 GREASE FITTING		02
15	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

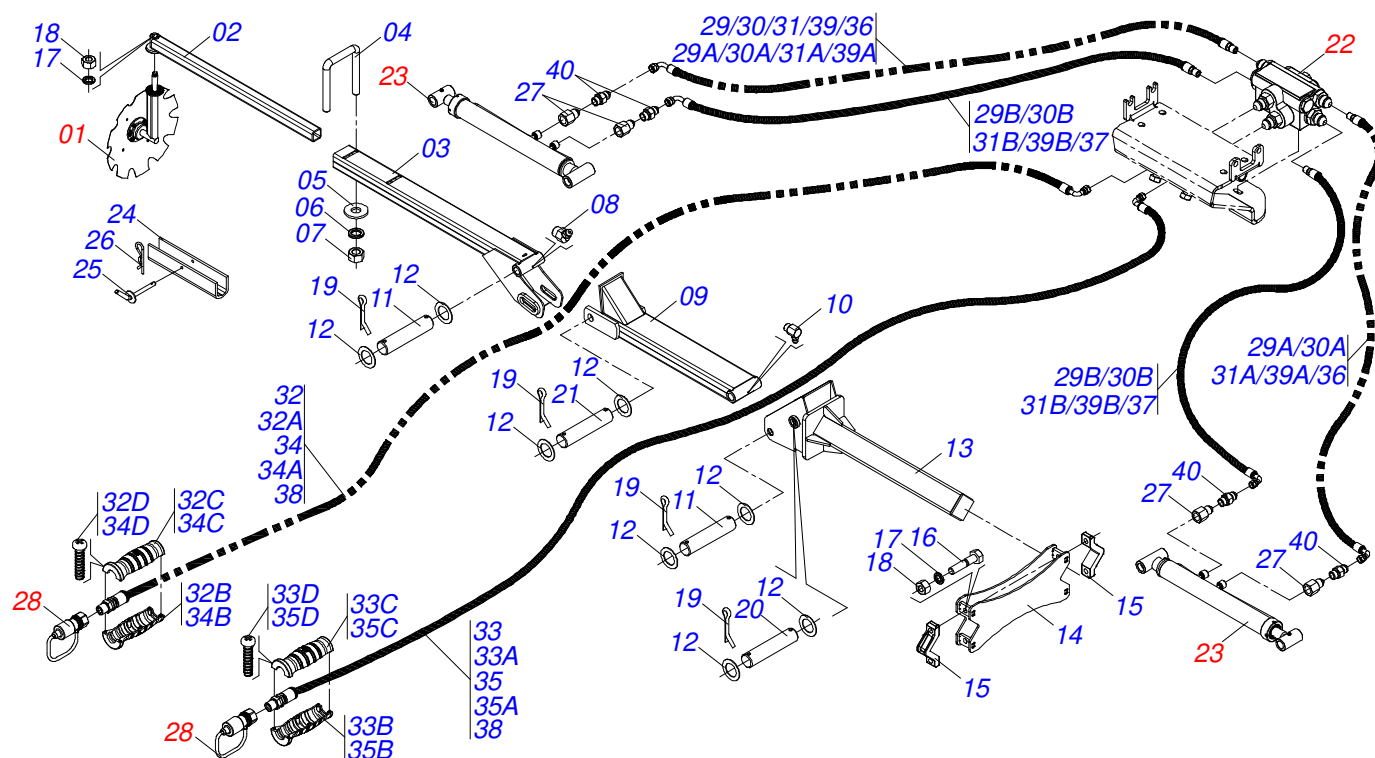


Item	Code	Description	See page	8460	8960	9460	9960	10460
01	0501050633	ROW MARKER DISC ASSEMBLY	160	002	002	000	000	000
01.	0521055204	ROW MARKER DISC	163	000	000	002	002	002
02	0521061790	1750 TURNBUCKLE		002	002	000	000	000
02.	0521064307	EXTENSOR 2400 DOUBLE HEAD		000	000	002	002	002
03	0511060014	ROW MARKER ARM		002	002	002	002	002
04	0521012324	1/2" X 3.2" X 2.54" FASTENER		004	004	004	004	004
05	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		008	008	008	008	008
06	0503010019	1/2" SPRING WASHER		008	008	008	008	008
07	0503010060	1/2 UNC G.5 ZN HEX NUT		008	008	008	008	008
08	0503010003	1845 GREASE FITTING		002	002	002	002	002
09	0511060013	ROW MARKER ARM		002	002	002	002	002
10	0503010004	1890 GREASE FITTING		002	002	002	002	002
11	0521011142	1.1/4" X 7.5" AXLE		004	004	004	004	004
12	0501019435	32 X 50 X 1.5 FLAT WASHER		016	016	016	016	016
13	0511061022	ROW MARKER SUPPORT		002	002	002	002	002
14	0511066119	MARKER SUPP FIXER FASTENER		004	004	004	004	004
15	0502010175	HITCH CLAMP		008	008	008	008	008
16	0501010216	3/4 UNC X 4.1/2 C S G.5 ZN BOLT		016	016	016	016	016
17	0503010023	3/4" SPRING WASHER		016	016	016	016	016
18	0503010014	3/4" HEX NUT		016	016	016	016	016
19	0503010523	1/4" X 2" SPLIT PIN		016	016	016	016	016
20	0521013347	1.1/4" X 8.4" AXLE		002	002	002	002	002
21	0521011141	1.1/4" X 6.5" AXLE		002	002	002	002	002
22	0501054649	HBM SEQUENTIAL VALVE	158	001	001	001	001	001
23	0511058431	HYDRAULIC CYLINDER	161	002	002	002	002	002
24	0511015573	2.07" X 1.6" TRANSPORT LOCK		002	002	002	002	002
25	0501068994	8,30 X 78 LOCK PIN		002	002	002	002	002
26	0503030168	HITCH PIN CLIP		002	002	002	002	002
27	0511018012	HIDRAULIC ADAPTER		004	004	004	004	004
28	0501053834	MALE QUICK COUPLER	67	002	002	002	002	002
29	0511057890	17 E 500 HYDRAULIC MARKER HOSE ASSEMBLY		001	000	000	000	000


ASSY MARKER HYDRAULIC ARTICULATED DOUBLE

0909095228


Item	Code	Description	See page	8460	8960	9460	9960	10460
29A	0501081981	HOSES		002	000	000	000	000
29B	0501081748	HOSE		002	000	000	000	000
30	0511057739	HYDRAULIC MARKER HAND SET		000	001	000	000	000
30A	0501081982	HOSE		000	002	000	000	000
30B	0501081981	HOSES		000	002	000	000	000
31	0521050879	HYDRAULIC MARKER HOSE ASSY		000	000	000	001	000
31A	0501081447	3/8 X 6600 TC-TR HOSE		000	000	000	002	000
31B	0501080744	3/8" X 248" TR-TC HOSE ASSY		000	000	000	002	000
32	0521052513	HOSE 3/8 X 5200 TC-TM PURPLE / BLUE		000	001	000	001	001
32A	0501081980	HOSE 3/8 X 5200 TC-TM		000	001	000	001	001
32B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		000	001	000	001	001
32C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		000	001	000	001	001
32D	0503018952	PLASTIC BOLT		000	006	000	006	006
33	0521052510	3/8 X 5000 TC-TM ROXO/VERM HOSE		001	000	000	000	000
33A	0501080383	3/8" X 197" TC-TM HOSE		001	000	000	000	000
33B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		001	000	000	000	000
33C	0503034495	HYDRAULIC HOSE GRIP (RED)		001	000	000	000	000
33D	0503018952	PLASTIC BOLT		006	000	000	000	000
34	0521052511	3/8 X 5000 TC-TM ROXO/AZUL HOSE		001	000	000	000	000
34A	0501080383	3/8" X 197" TC-TM HOSE		001	000	000	000	000
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		001	000	000	000	000
34C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		001	000	000	000	000
34D	0503018952	PLASTIC BOLT		006	000	000	000	000
35	0521052512	HOSE 3/8 X 5200 TC-TM PURPLE / RED		000	001	000	001	001
35A	0501081980	HOSE 3/8 X 5200 TC-TM		000	001	000	001	001
35B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		000	001	000	001	001
35C	0503034495	HYDRAULIC HOSE GRIP (RED)		000	001	000	001	001
35D	0503018952	PLASTIC BOLT		000	006	000	006	006
36	0501080744	3/8" X 248" TR-TC HOSE ASSY		000	000	002	000	000
37	0501081255	TR-TC HOSE ASSY		000	000	002	000	000
38	0501081980	HOSE 3/8 X 5200 TC-TM		000	000	002	000	000
39	0511057526	HYDRAULIC MARKER HAND SET		000	000	000	000	001
39A	0501082035	HOSE		000	000	000	000	002
39B	0501082034	HOSE		000	000	000	000	002
40	0501010617	3/4" NIPPLE		004	004	004	004	004

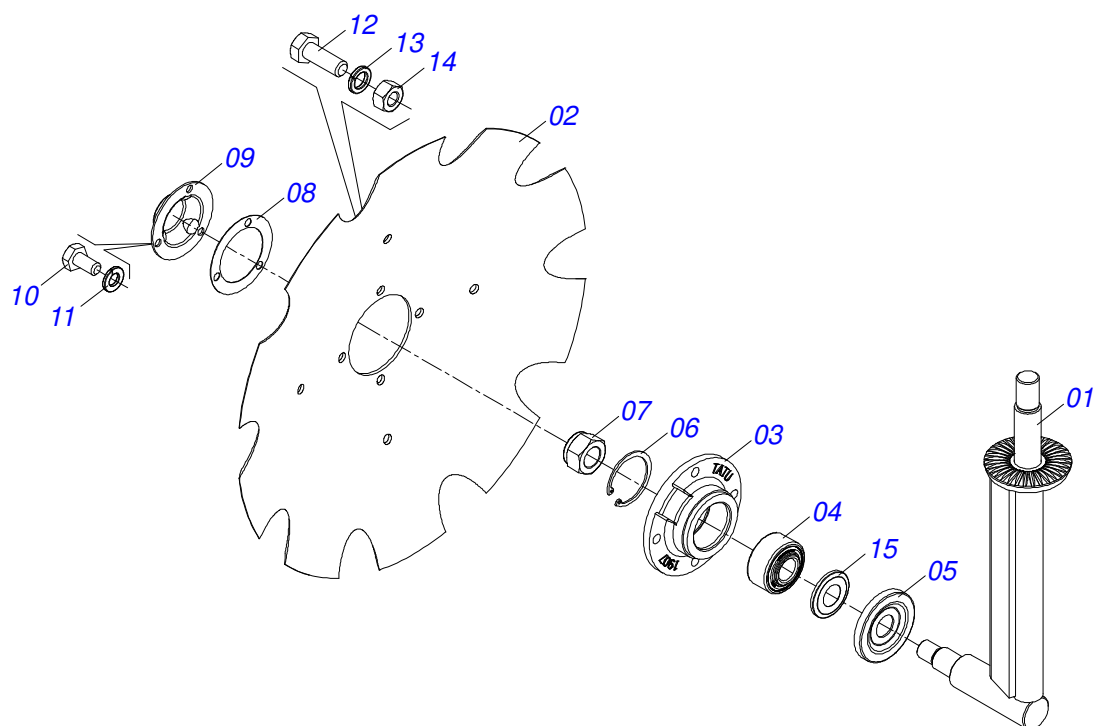


Item	Code	Description	See page	QT
01	0521069643	DISC AXLE MARKER ROW		01
02	0602023094	DR16X3 C36AFPAFR73+4FR+4FR D474 10R		01
03	0581019513	DEPTH WHEEL HUB		01
04	0503019342	ROLLER BEARING		01
05	0581019168	DUST CLOAK		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	PROTECTION LID		01
10	0503013758	1/4" X 1-1/2" BOLT		03
11	0503010143	1/4" SPRING WASHER		03
12	0503010358	5/16" X 5/8" BOLT		04
13	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
14	0503010337	5/16" NUT		04
15	0503034055	CLAMPING RING		01

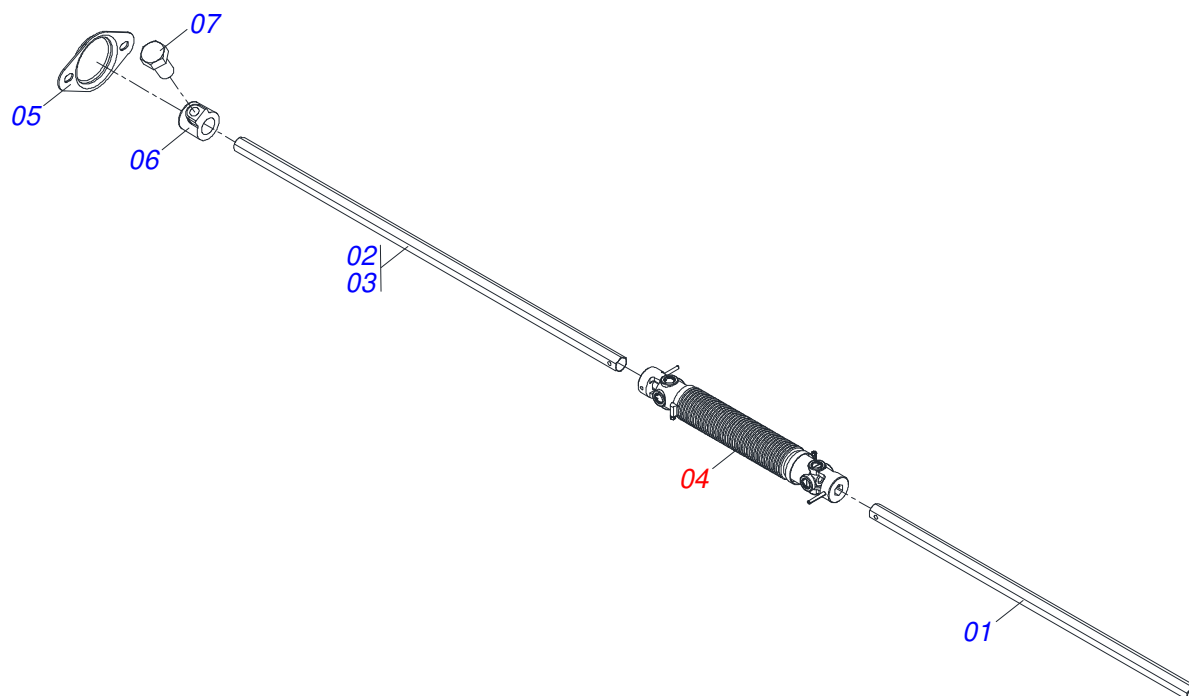


Item	Code	Description	See page	QT
01	0571013470	5/8 X 1100 HEX AXLE		01
02	0581012154	HEX 5/8 X AXIS 755		01
03	0581015104	HEX 5/8 X AXIS 1750		02
04	0511059233	INTERMEDIATE TRANSMISSION	174	02
05	0561014215	BEARING COVER LOWER ROW FRAME		02
06	0502040534	SPRING GUIDE BUSHING LOCK		08
07	0501018535	1/2 X 1 BOLT		08

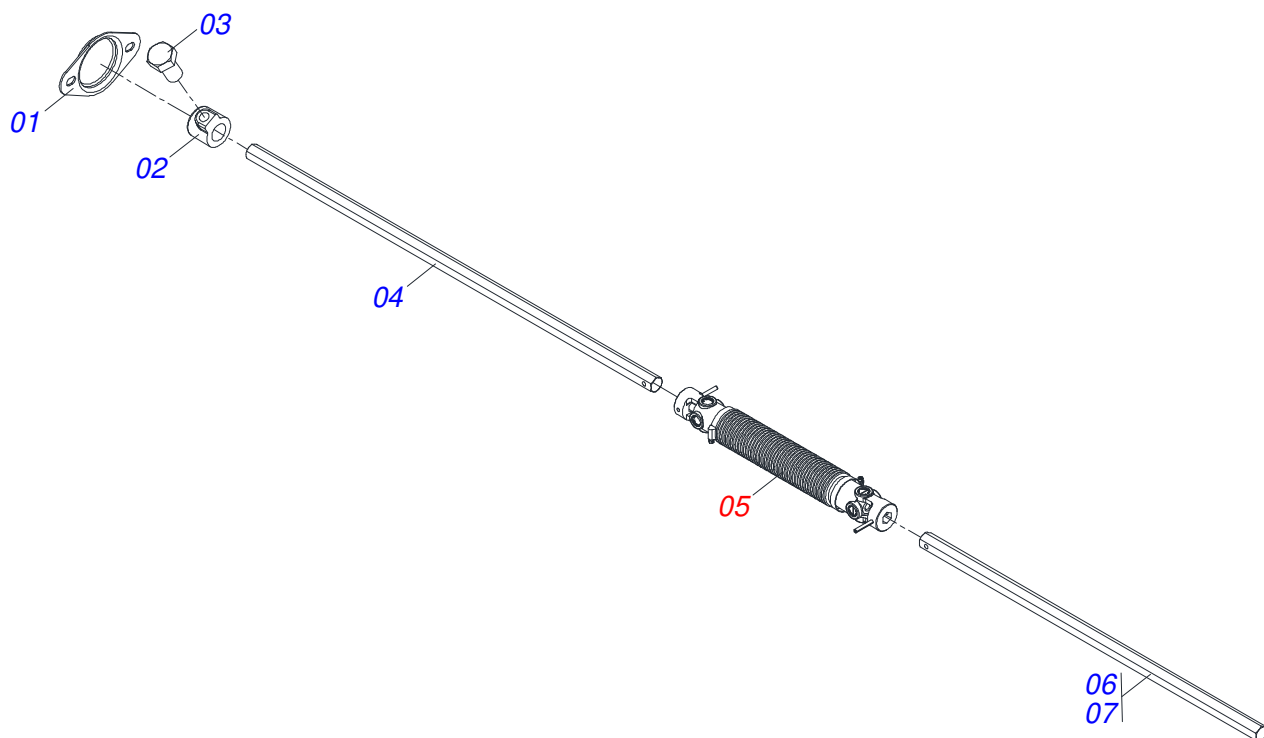


Item	Code	Description	See page	QT
01	0561014215	BEARING COVER LOWER ROW FRAME		02
02	0502040534	SPRING GUIDE BUSHING LOCK		08
03	0501018535	1/2 X 1 BOLT		08
04	0581013561	5/8" X 95.8" HEX AXLE		01
05	0511057287	TRANSMISSION		02
06	0571013469	5/8 X 700 HEX AXLE		01
07	0571013468	5/8 X 2040 HEX AXLE		02

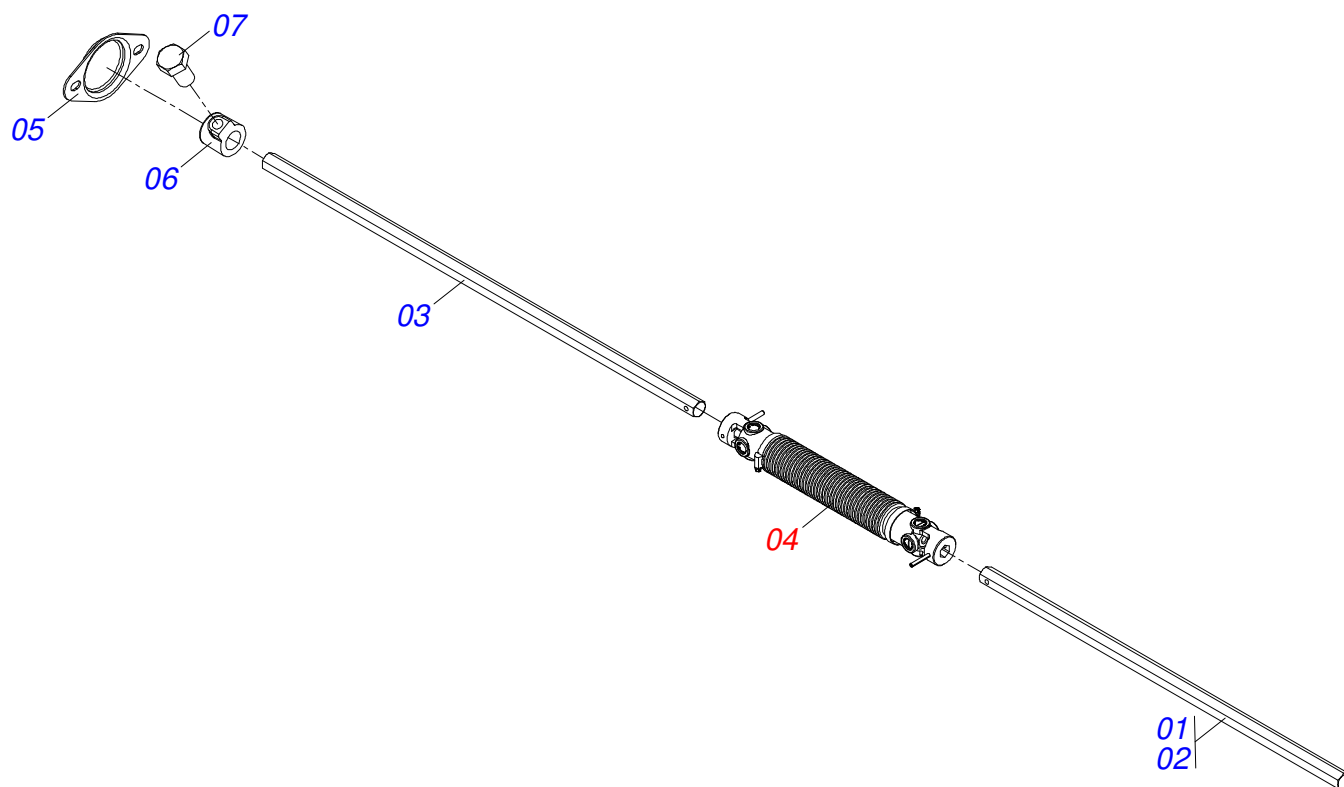


Item	Code	Description	See page	QT
01	0581012154	HEX 5/8 X AXIS 755		01
02	0571013470	5/8 X 1100 HEX AXLE		01
03	0581012787	HEX AXLE		02
04	0511059233	INTERMEDIATE TRANSMISSION	174	02
05	0561014215	BEARING COVER LOWER ROW FRAME		02
06	0502040534	SPRING GUIDE BUSHING LOCK		08
07	0501018535	1/2 X 1 BOLT		08

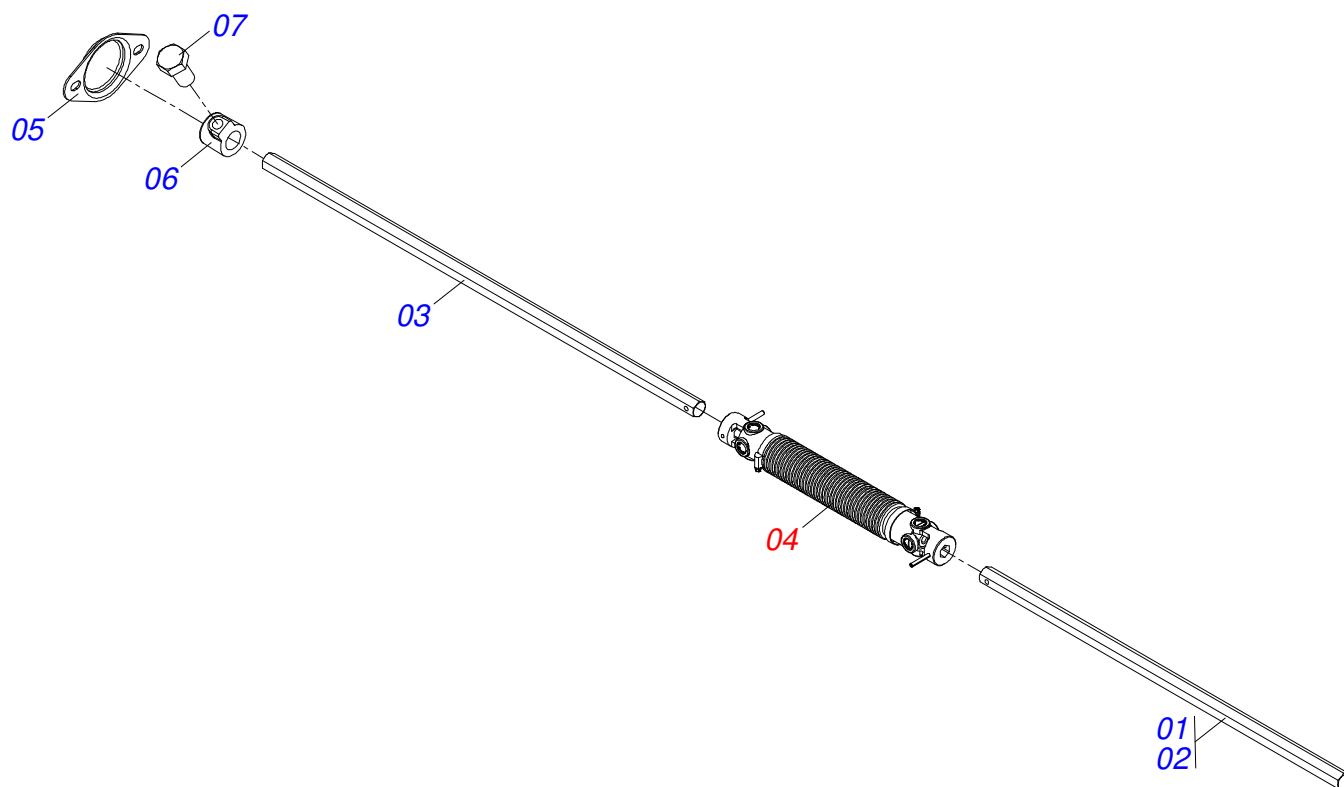


Item	Code	Description	See page	QT
01	0571013726	5/8 X 800 HEX AXLE		01
02	0571013724	5/8 X 1250 HEX AXLE		01
03	0571013725	5/8 X 2190 HEX AXLE		02
04	0503062206	CARDAN TERMINAL	175	02
05	0561014215	BEARING COVER LOWER ROW FRAME		02
06	0502040534	SPRING GUIDE BUSHING LOCK		08
07	0501018535	1/2 X 1 BOLT		08

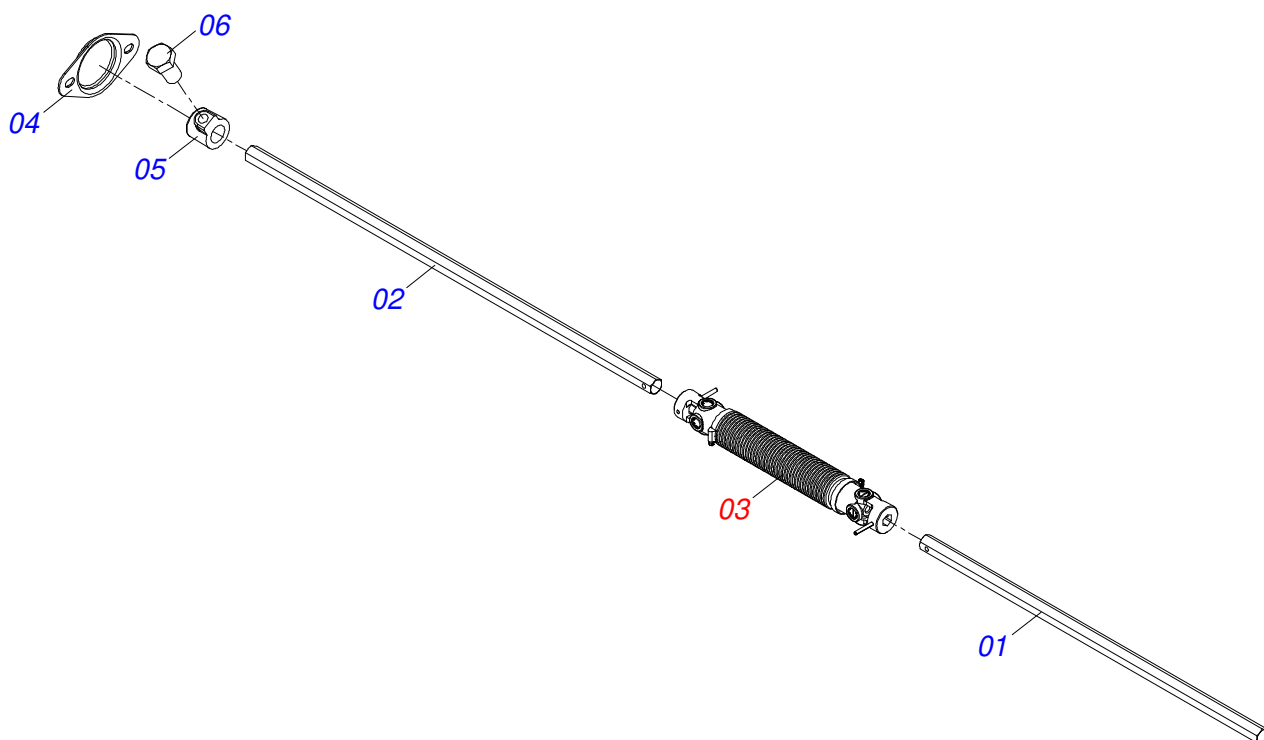


Item	Code	Description	See page	QT
01	0581018862	HEX AXLE 5/8 X 850		02
02	0571014914	SHAFT AXLE		02
03	0511059233	INTERMEDIATE TRANSMISSION	174	02
04	0561014215	BEARING COVER LOWER ROW FRAME		02
05	0502040534	SPRING GUIDE BUSHING LOCK		08
06	0501018535	1/2 X 1 BOLT		08

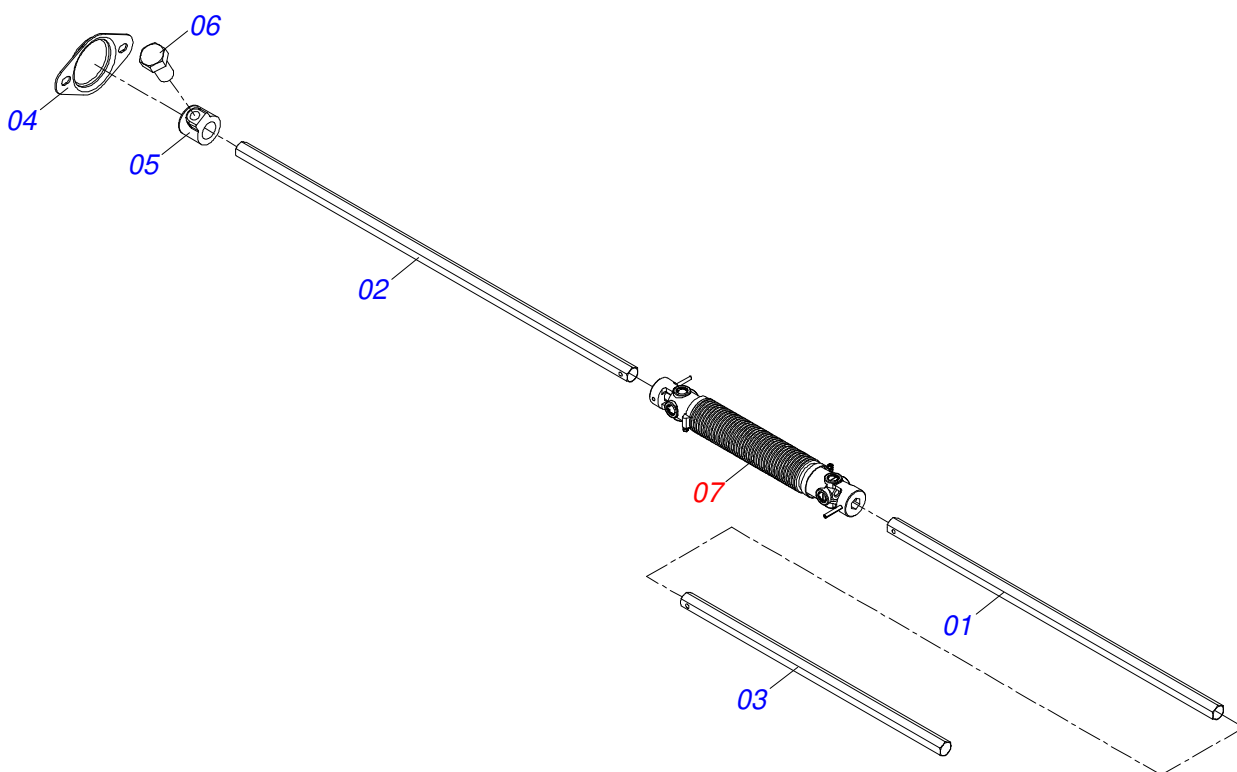


Item	Code	Description	See page	QT
01	0571013470	5/8 X 1100 HEX AXLE		01
02	0581015232	2735 - 17 E 500 5/8" X 60.4" HEX AXLE		02
03	0581012154	HEX 5/8 X AXIS 755		01
04	0561014215	BEARING COVER LOWER ROW FRAME		02
05	0502040534	SPRING GUIDE BUSHING LOCK		08
06	0501018535	1/2 X 1 BOLT		08
07	0511059233	INTERMEDIATE TRANSMISSION	174	02

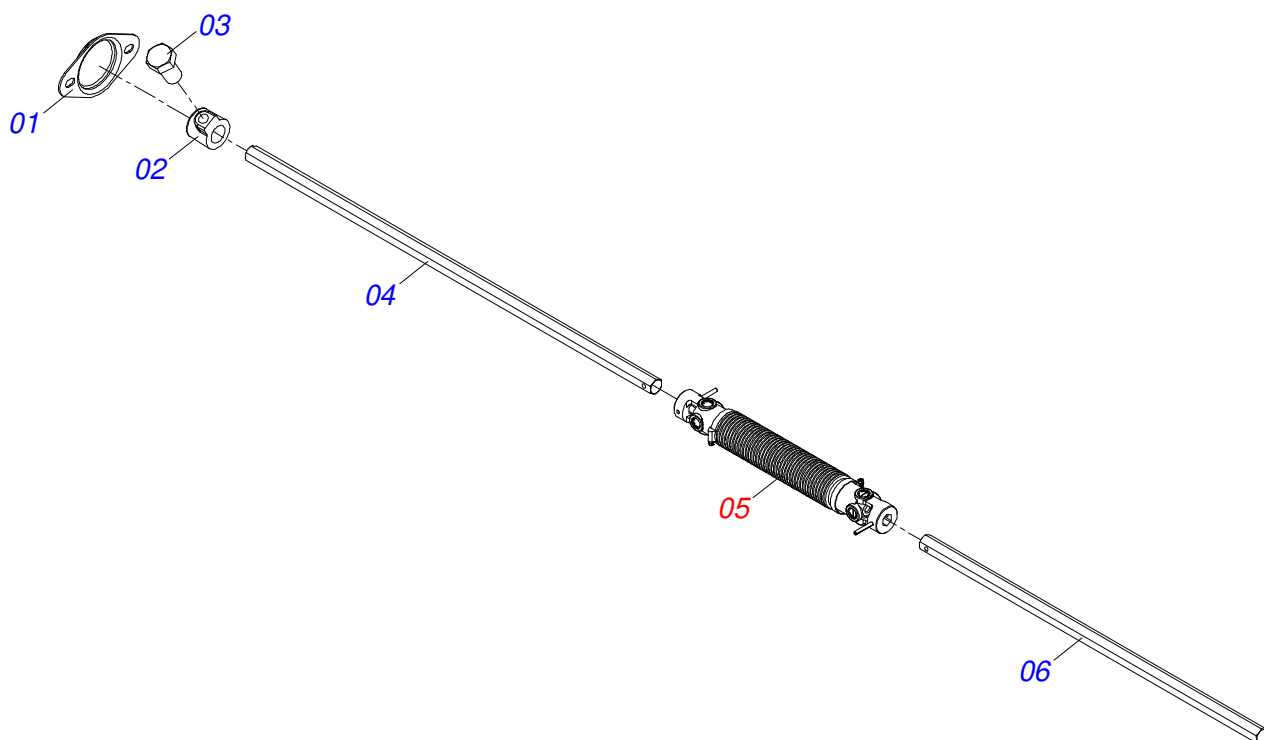


Item	Code	Description	See page	QT
01	0561014215	BEARING COVER LOWER ROW FRAME		02
02	0502040534	SPRING GUIDE BUSHING LOCK		08
03	0501018535	1/2 X 1 BOLT		08
04	0571014914	SHAFT AXLE		02
05	0511059233	INTERMEDIATE TRANSMISSION	174	02
06	0571013724	5/8 X 1250 HEX AXLE		02

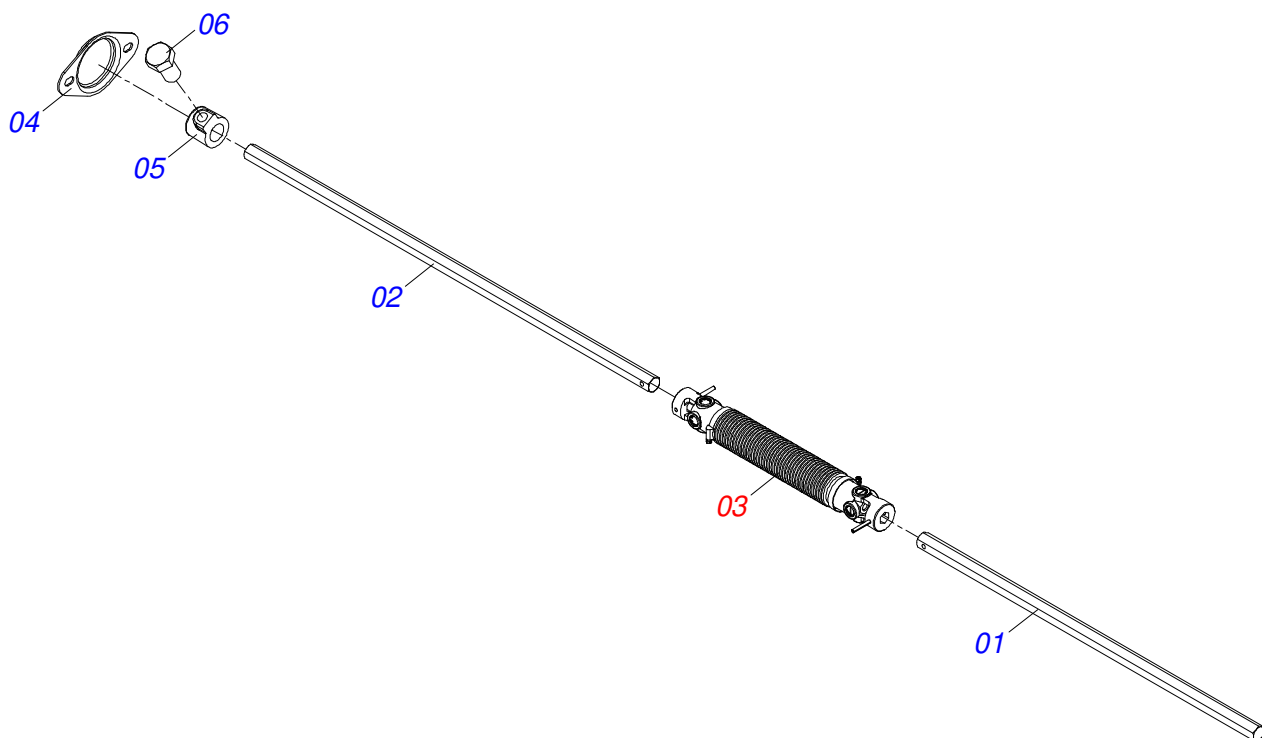


Item	Code	Description	See page	QT
01	0581014408	5/8" X 69.3" HEX AXLE		02
02	0581015234	5/8" X HEX AXLE		02
03	0511057287	TRANSMISSION		02
04	0561014215	BEARING COVER LOWER ROW FRAME		02
05	0502040534	SPRING GUIDE BUSHING LOCK		08
06	0501018535	1/2 X 1 BOLT		08

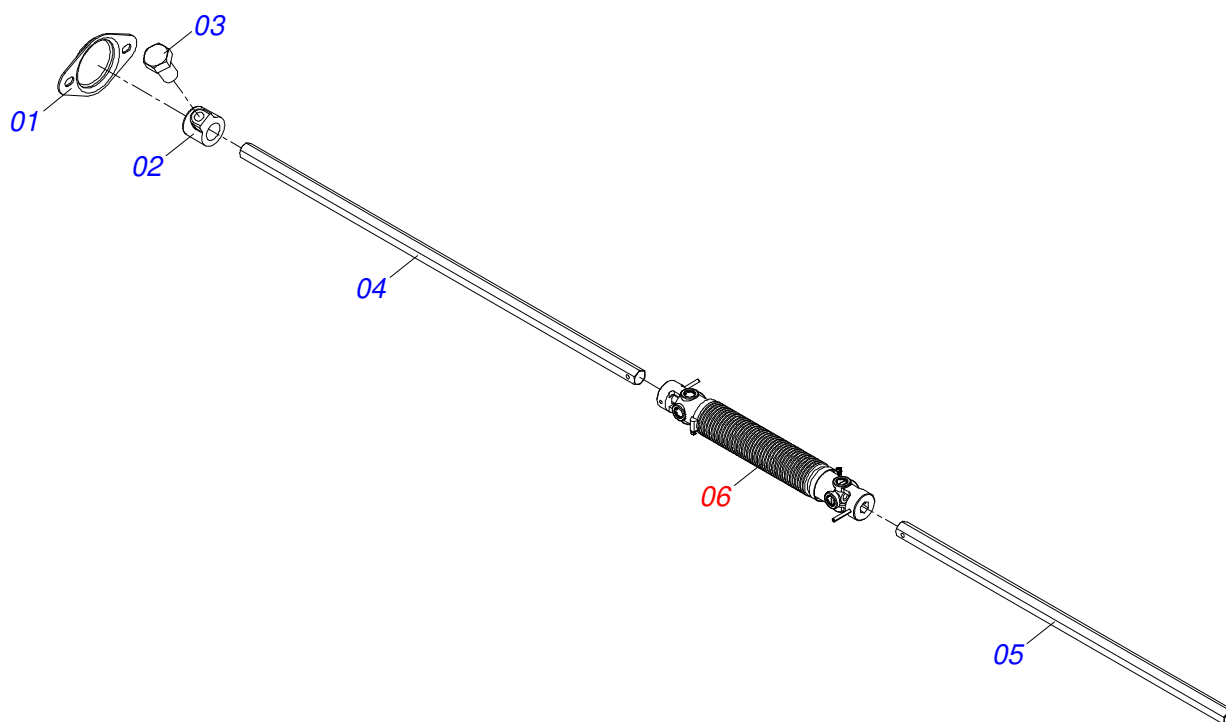


Item	Code	Description	See page	QT
01	0561014215	BEARING COVER LOWER ROW FRAME		02
02	0502040534	SPRING GUIDE BUSHING LOCK		08
03	0501018535	1/2 X 1 BOLT		08
04	0581013848	HEX AXIS 5/8 X 3220		02
05	0571013724	5/8 X 1250 HEX AXLE		02
06	0511059233	INTERMEDIATE TRANSMISSION	174	02

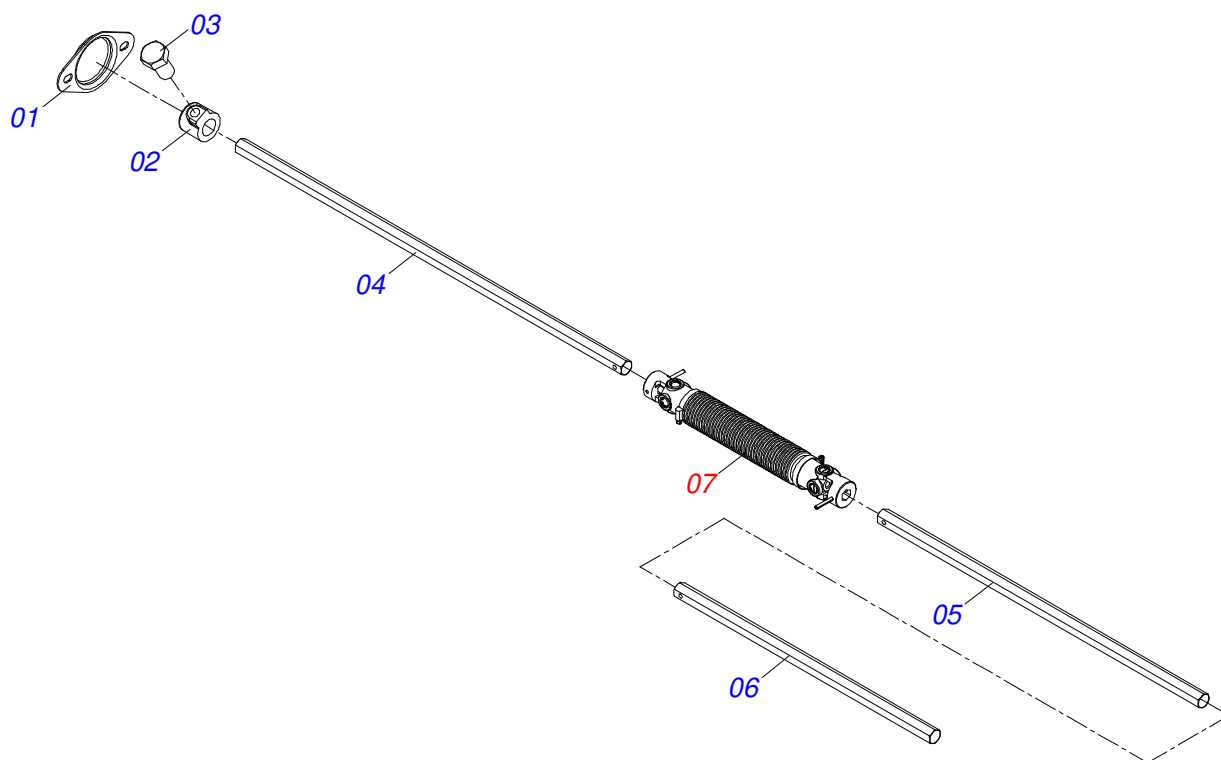


Item	Code	Description	See page	QT
01	0561014215	BEARING COVER LOWER ROW FRAME		02
02	0502040534	SPRING GUIDE BUSHING LOCK		08
03	0501018535	1/2 X 1 BOLT		08
04	0581013848	HEX AXIS 5/8 X 3220		02
05	0581014408	5/8" X 69.3" HEX AXLE		01
06	0571013724	5/8 X 1250 HEX AXLE		01
07	0511059233	INTERMEDIATE TRANSMISSION	174	02

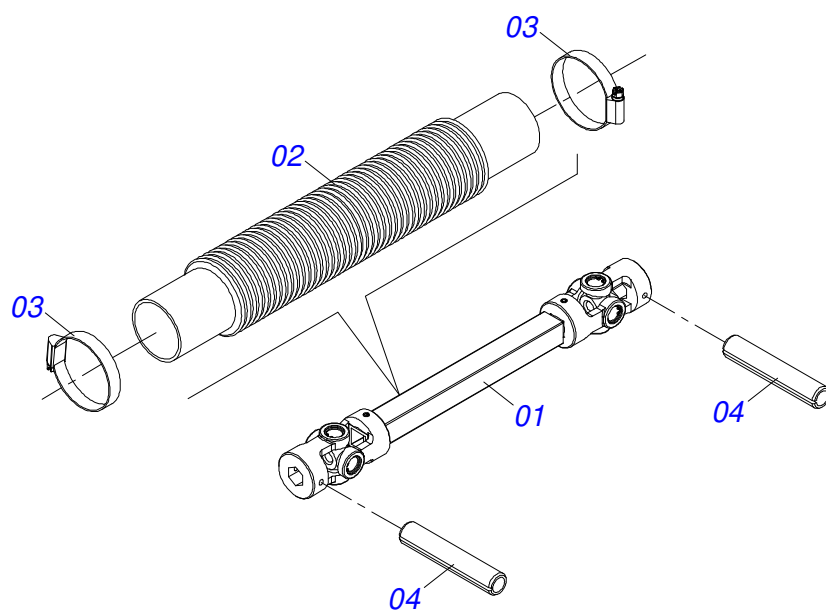


Item	Code	Description	See page	QT
01	0503062206	CARDAN TERMINAL	175	01
02	0503030331	1.2" X 1.2" X 12.2" HOSE		01
03	0503010243	CLAMP		02
04	0503011855	0.2" X 1.8" SPRING PIN		02

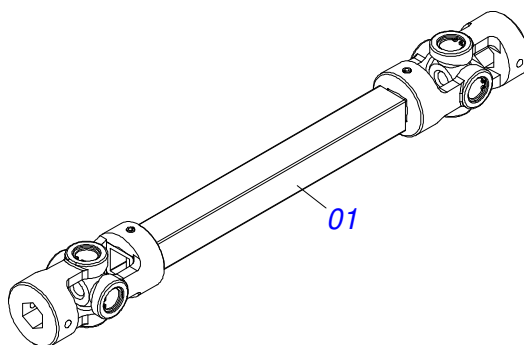


Item	Code	Description	See page	QT
01	0503062206	CARDAN TERMINAL	175	01

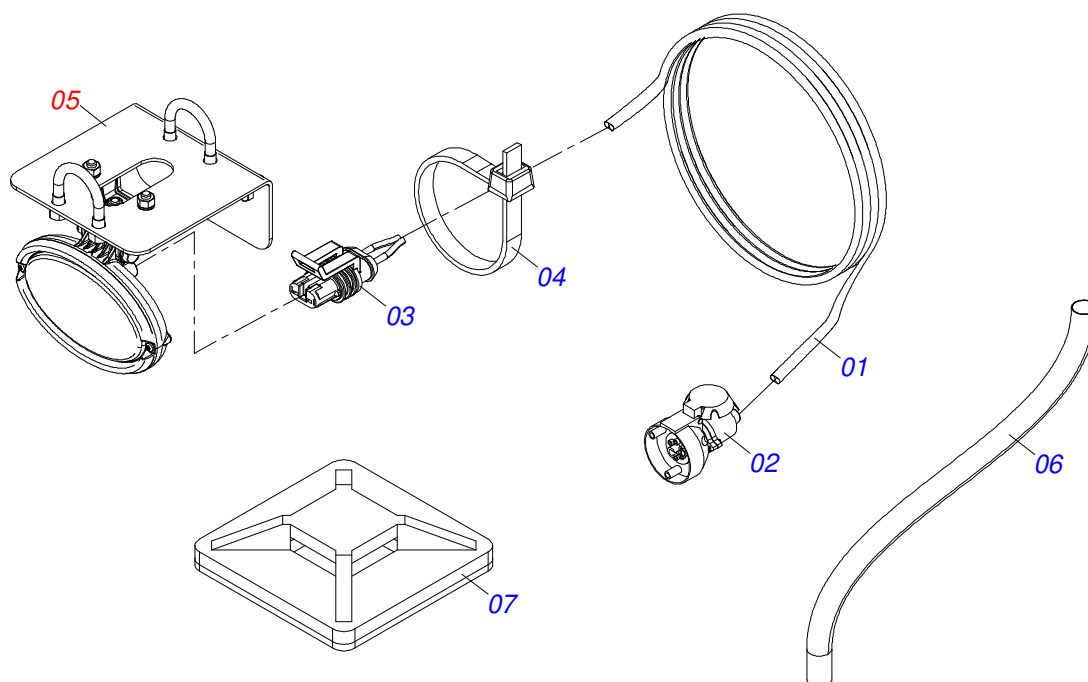


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		16
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		03
04	0503012903	T-80M CRAMP NYLON		50
05	0521052792	MOUNTED REAR LIGHT	181	03
06	3505151602	TUBE		0,3mt
07	0503017702	FIXER		15

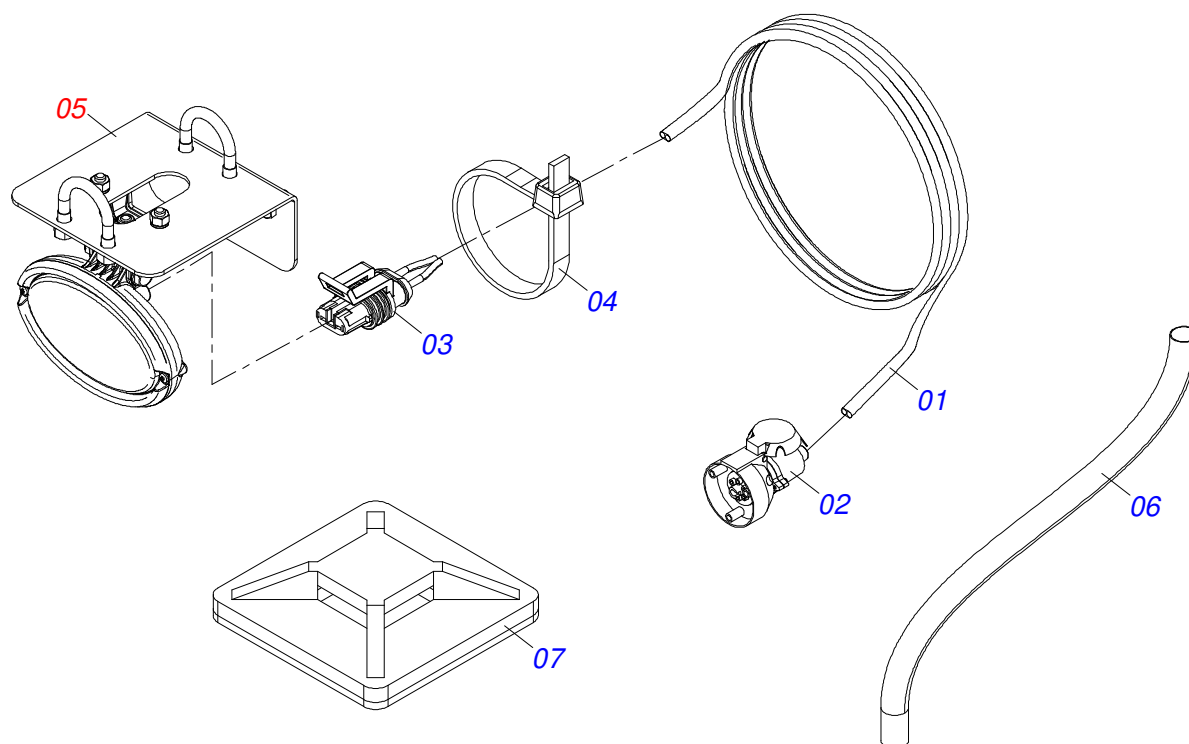


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		17
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		03
04	0503012903	T-80M CRAMP NYLON		50
05	0521052792	MOUNTED REAR LIGHT	181	03
06	3505151602	TUBE		0,3mt
07	0503017702	FIXER		15

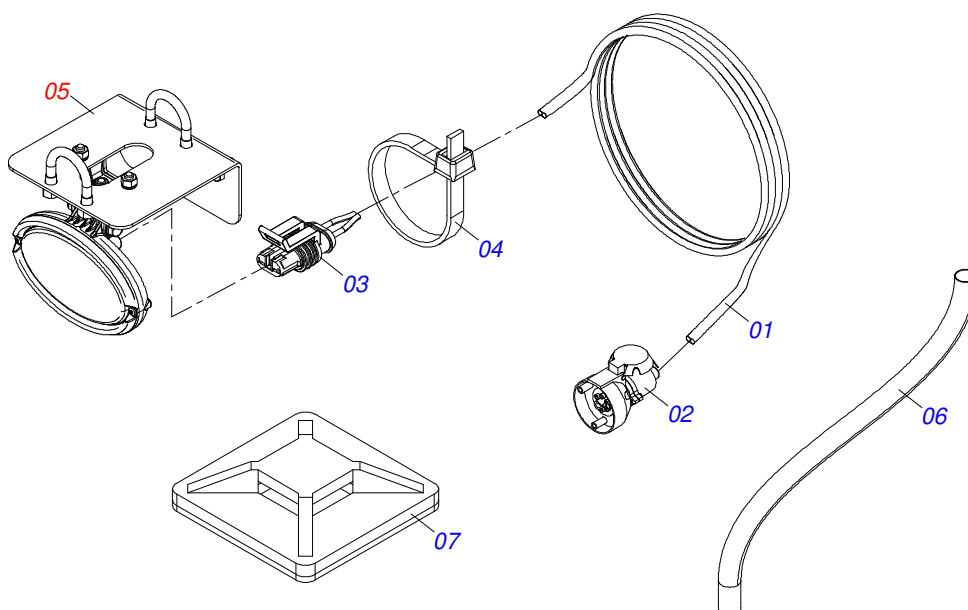


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		21
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		04
04	0503012903	T-80M CRAMP NYLON		60
05	0521052792	MOUNTED REAR LIGHT	181	04
06	3505151602	TUBE		0,4mt
07	0503017702	FIXER		20

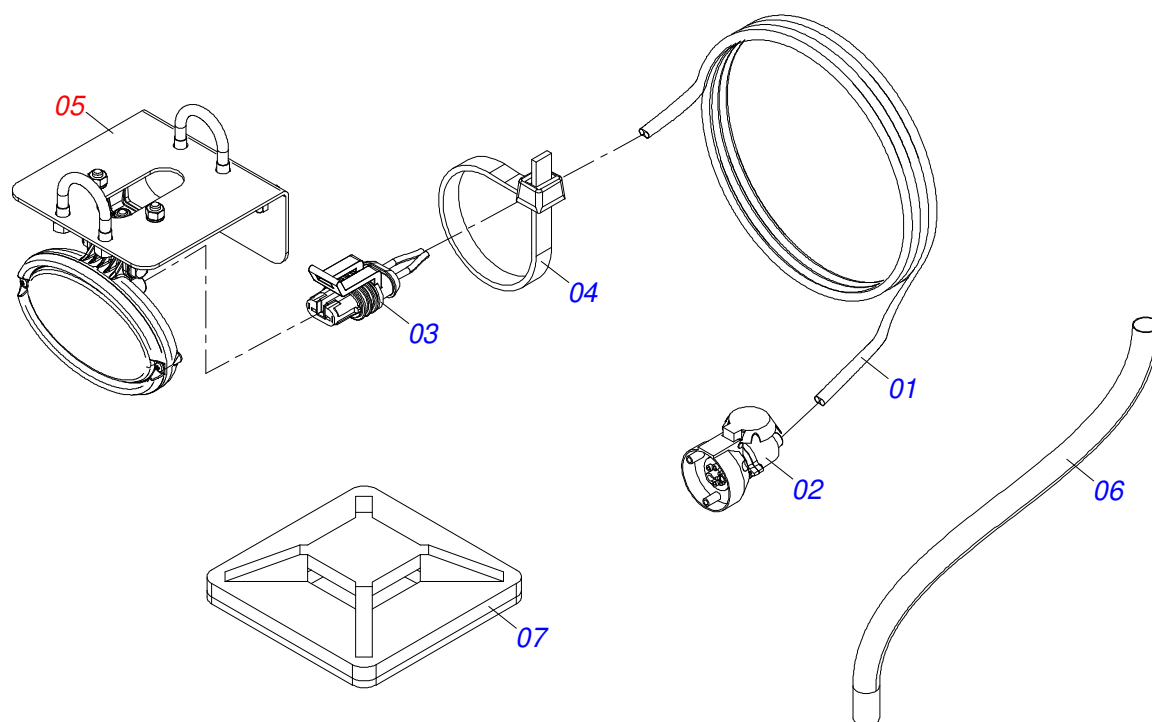


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		22
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		05
04	0503012903	T-80M CRAMP NYLON		70
05	0521052792	MOUNTED REAR LIGHT	181	05
06	3505151602	TUBE		0,5mt
07	0503017702	FIXER		25

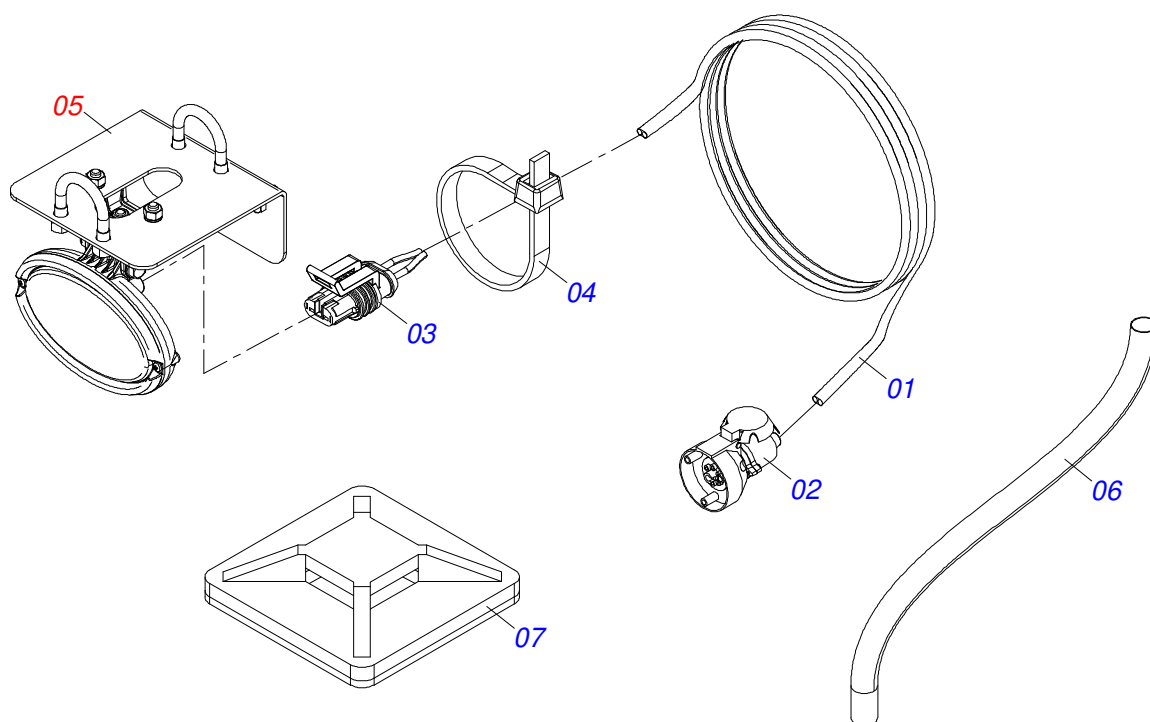


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		24
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		06
04	0503012903	T-80M CRAMP NYLON		80
05	0521052792	MOUNTED REAR LIGHT	181	06
06	3505151602	TUBE		0,6mt
07	0503017702	FIXER		30

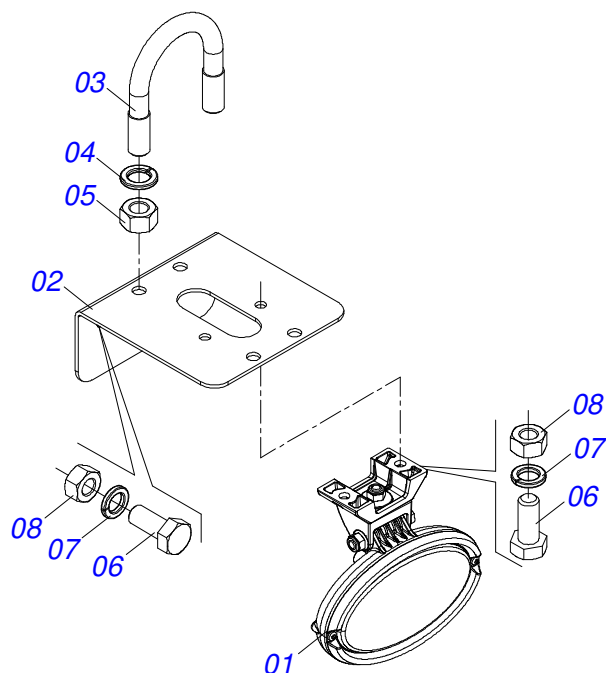


Item	Code	Description	See page	QT
01	0503018738	HEADLIGHT		01
02	0581016999	REAR LIGHT SUPPORT		01
03	0551019884	45 X 50 X 3/8 FASTENER		02
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04

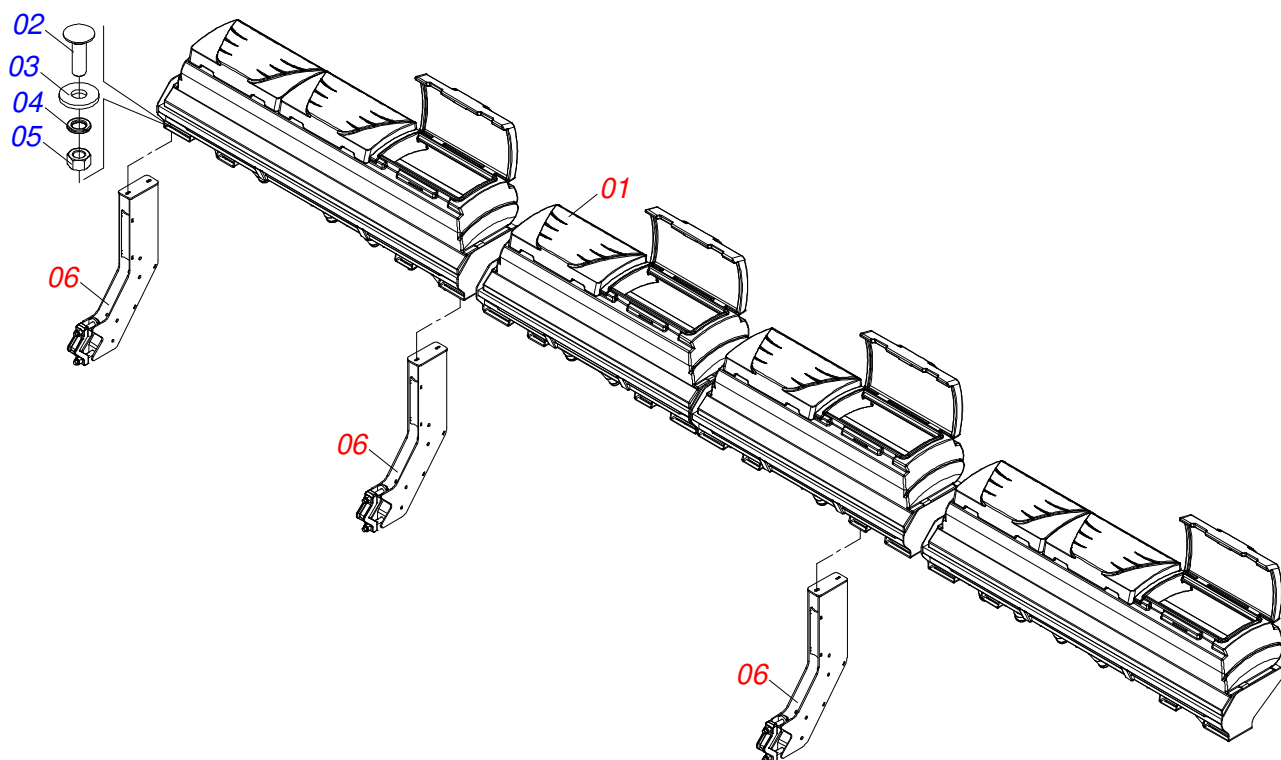


Item	Code	Description	See page	QT
01	0521050210	ASSEMBLY CSU 6450	183	01
02	0501010942	3/8" X 1-1/4" BOLT		12
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
04	0503010025	3/8 SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0521051927	TOWER SUPPORT HOPPER	185	06

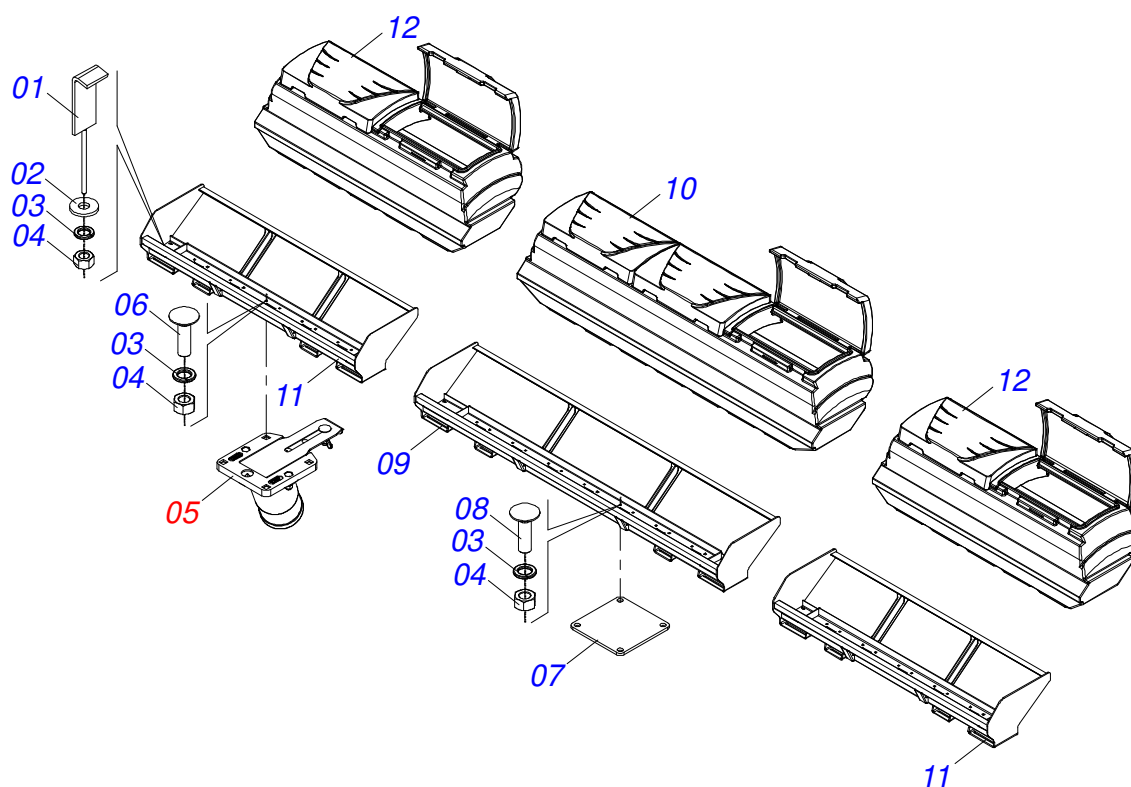


Item	Code	Description	See page	QT
01	0521063401	FIXING LOCK		06
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
03	0503010025	3/8 SPRING WASHER		74
04	0503010026	3/8" NUT		74
05	0511057690	3" ARTICULATED SEED CONDUCTOR	184	13
06	0501010942	3/8" X 1-1/4" BOLT		52
07	0571015773	SUPPORT SEED		04
08	0501011643	3/8 X 1"BOLT		16
09	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		01
10	0503062165	7 NOZZLES FRONT FERTILIZER HOPPER		01
11	0521064748	05 NOZZLES SINGLE SEED HOPPER SUPPORT		02
12	0503061987	05 NOZZLES FERTILIZER HOPPER		02

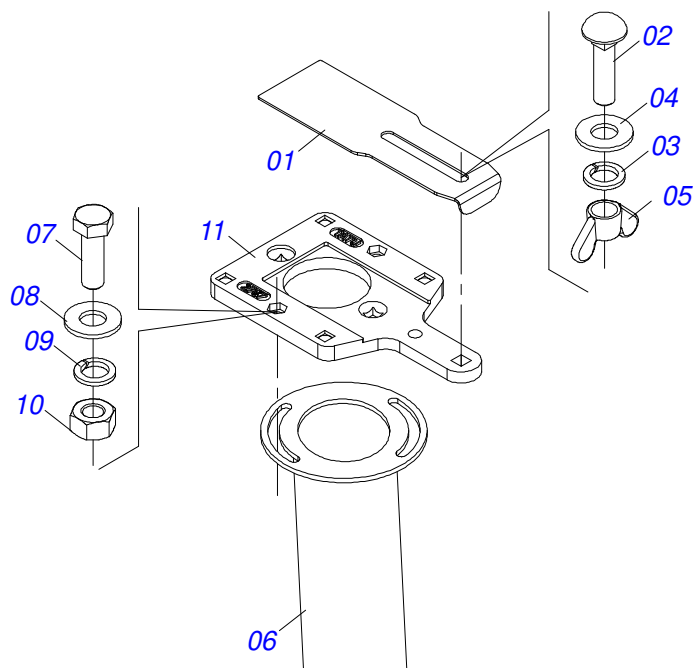


Item	Code	Description	See page	QT
01	0571015779	ARTICULATION NOZZLE SUPPORT LID		01
02	0501010942	3/8" X 1-1/4" BOLT		01
03	0503010025	3/8 SPRING WASHER		01
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
05	0503010209	3/8" UNC BUTTERFLY NUT		01
06	0521066332	CONDUCTOR WITH FLANGE		01
07	0503010371	5/16" X 1" BOLT		02
08	0501010694	FLAT WASHER		02
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
10	0503010337	5/16" NUT		02
11	0502012767	SEED NOZZLE FIXER SUPPORT		01

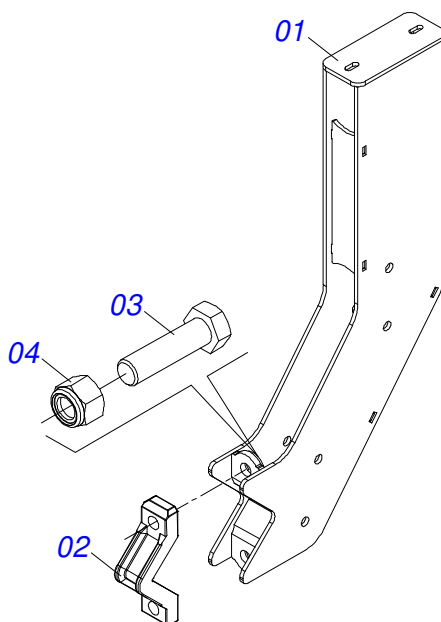


Item	Code	Description	See page	QT
01	0521066208	HOPPER SUPPORT TOWER		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

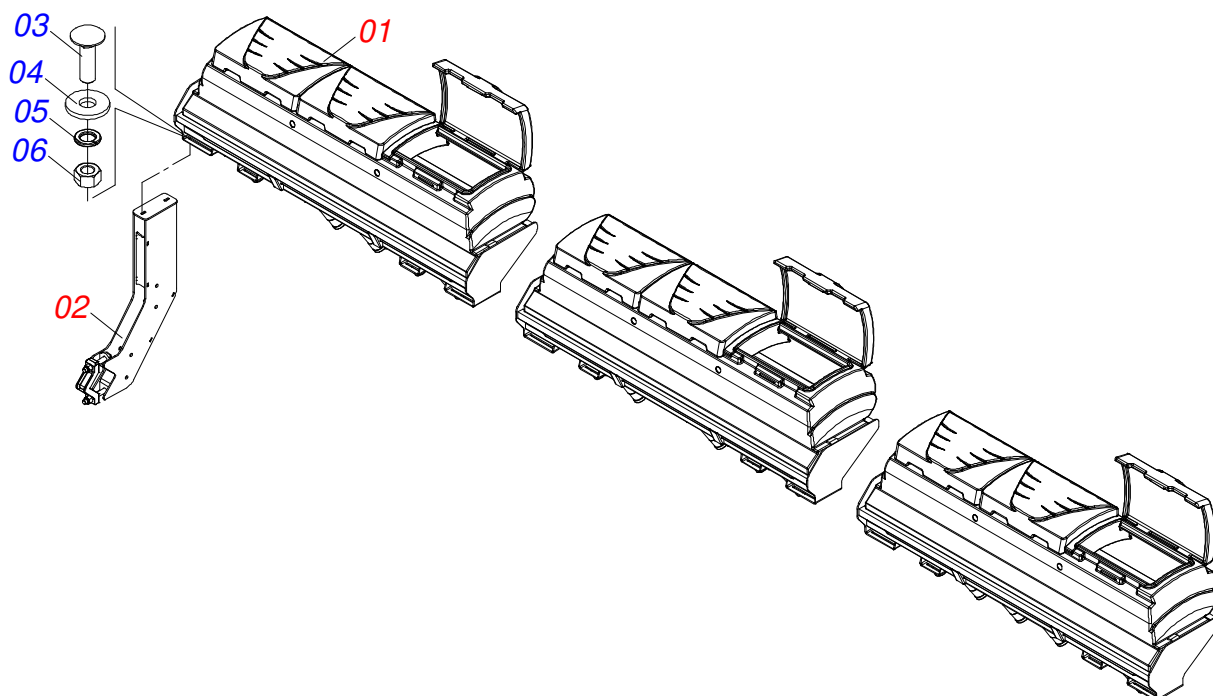


Item	Code	Description	See page	QT
01	0511057755	ASSEMBLY CSU 6850	187	01
02	0521051927	TOWER SUPPORT HOPPER	185	06
03	0501010942	3/8" X 1-1/4" BOLT		12
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
05	0503010025	3/8 SPRING WASHER		12
06	0503010026	3/8" NUT		12

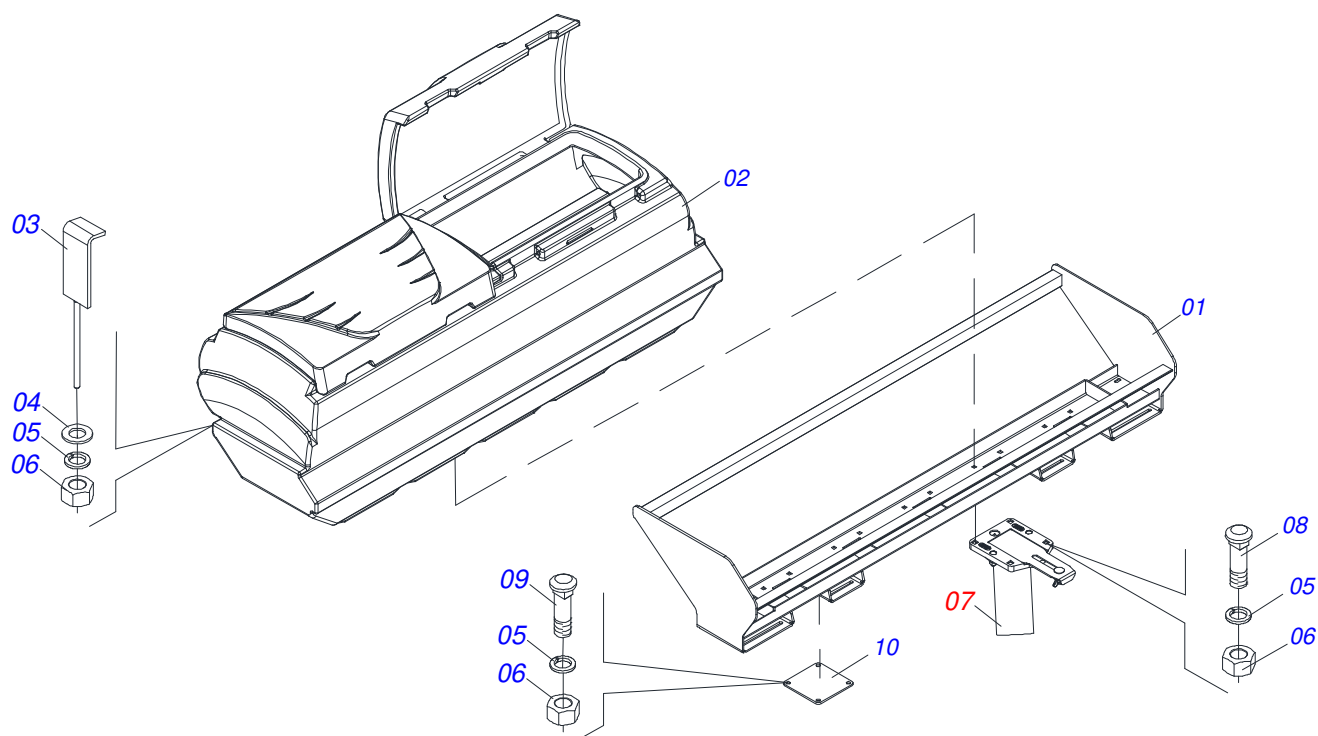


Item	Code	Description	See page	QT
01	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		03
02	0521064813	6 NOZZLES SINGLE SEED HOPPER SUPPORT		03
03	0521063401	FIXING LOCK		06
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
05	0503010025	3/8 SPRING WASHER		78
06	0503010026	3/8" NUT		78
07	0511057690	3" ARTICULATED SEED CONDUCTOR	184	15
08	0501010942	3/8" X 1-1/4" BOLT		60
09	0501011643	3/8 X 1"BOLT		12
10	0571015773	SUPPORT SEED		03

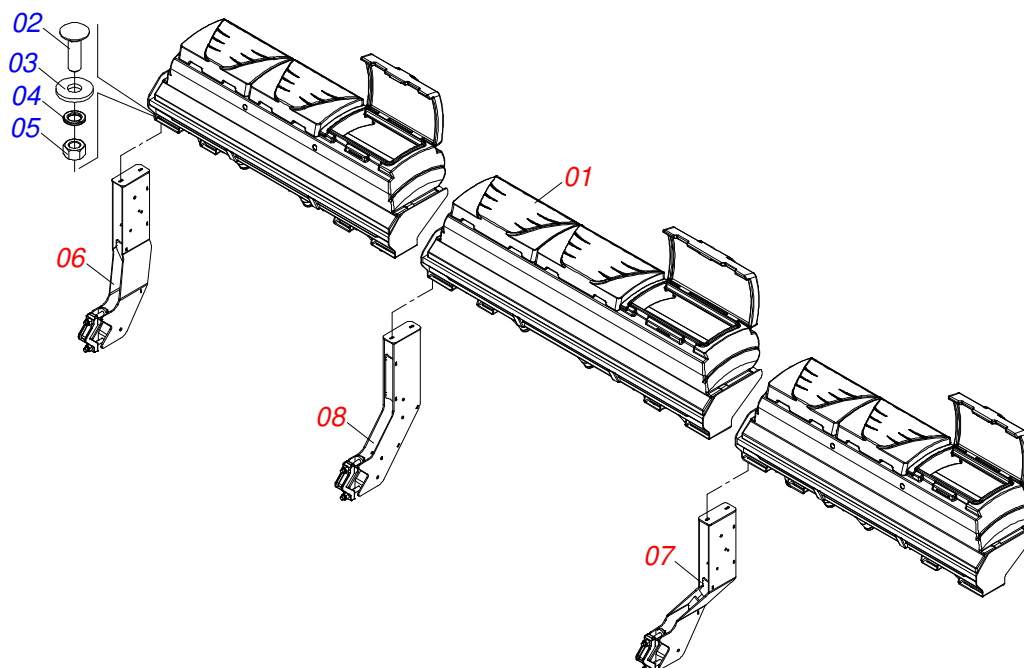


Item	Code	Description	See page	QT
01	0521052699	ASSEMBLY CSU C3 2BOX 6/5 - 1BOX 7/5 7285/7450	189	01
02	0501010942	3/8" X 1-1/4" BOLT		12
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
04	0503010025	3/8 SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0521052687	RIGHT SUPPORT TOWER WITH BOLT	190	02
07	0521051931	LEFT SUPPORT TOWER WITH BOLT	191	02
08	0521051927	TOWER SUPPORT HOPPER	185	02

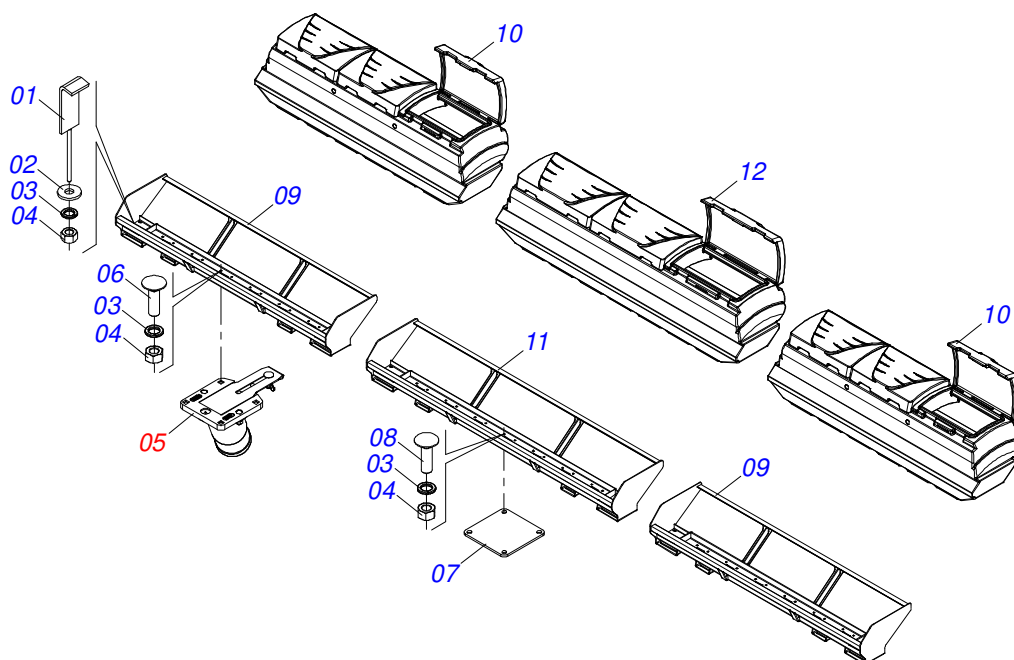


Item	Code	Description	See page	QT
01	0521063401	FIXING LOCK		06
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
03	0503010025	3/8 SPRING WASHER		82
04	0503010026	3/8" NUT		82
05	0511057690	3" ARTICULATED SEED CONDUCTOR	184	15
06	0501010942	3/8" X 1-1/4" BOLT		60
07	0571015773	SUPPORT SEED		04
08	0501011643	3/8 X 1"BOLT		16
09	0521064813	6 NOZZLES SINGLE SEED HOPPER SUPPORT		02
10	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		02
11	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		01
12	0503062165	7 NOZZLES FRONT FERTILIZER HOPPER		01

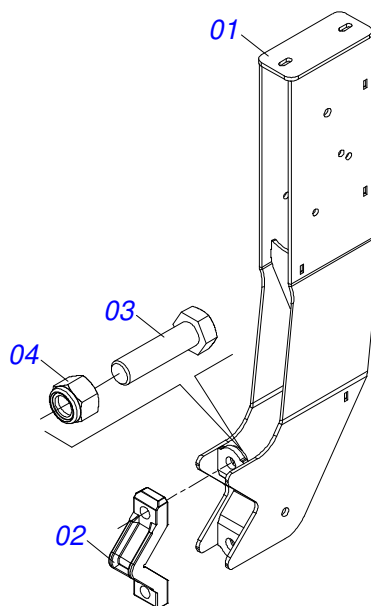


Item	Code	Description	See page	QT
01	0521066206	RIGHT HOPPER SUPPORT TOWER		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

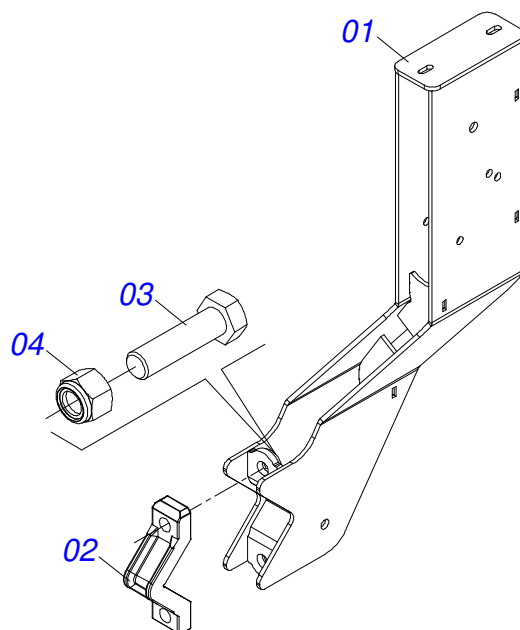


Item	Code	Description	See page	QT
01	0521066207	LEFT HOPPER SUPPORT TOWER		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

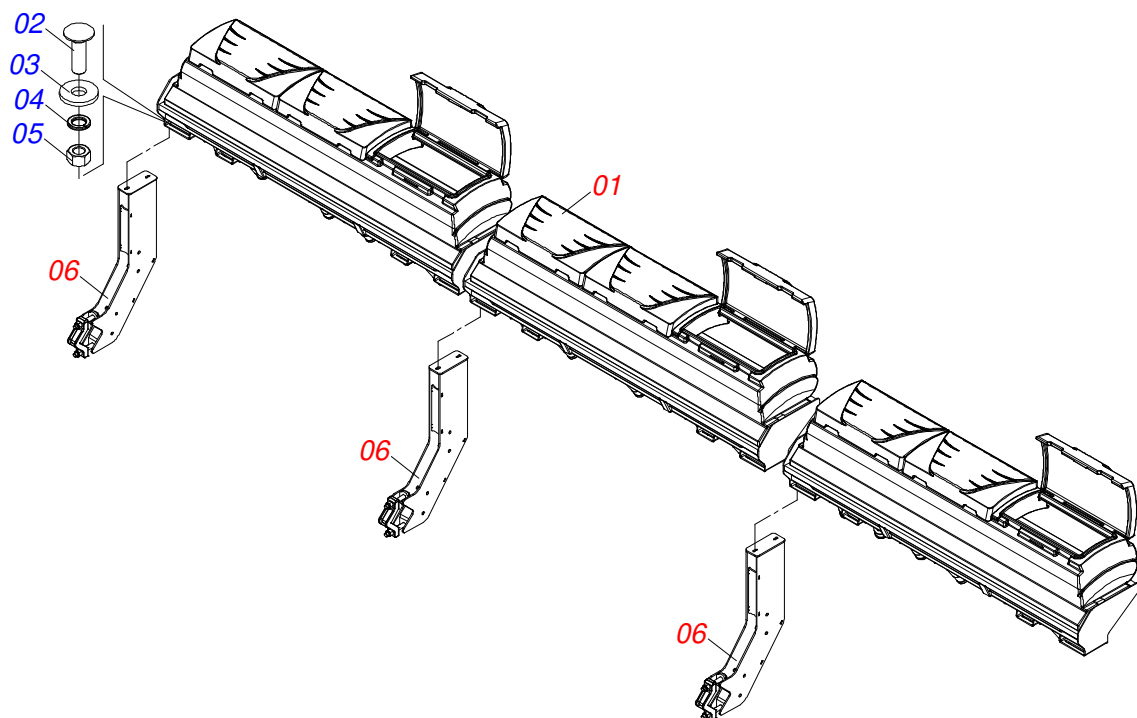


Item	Code	Description	See page	QT
01	0511058960	ASSEMBLY CSU C3 - 16 NOZZLES 7960	193	01
02	0501010942	3/8" X 1-1/4" BOLT		12
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
04	0503010025	3/8 SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0521051927	TOWER SUPPORT HOPPER	185	06

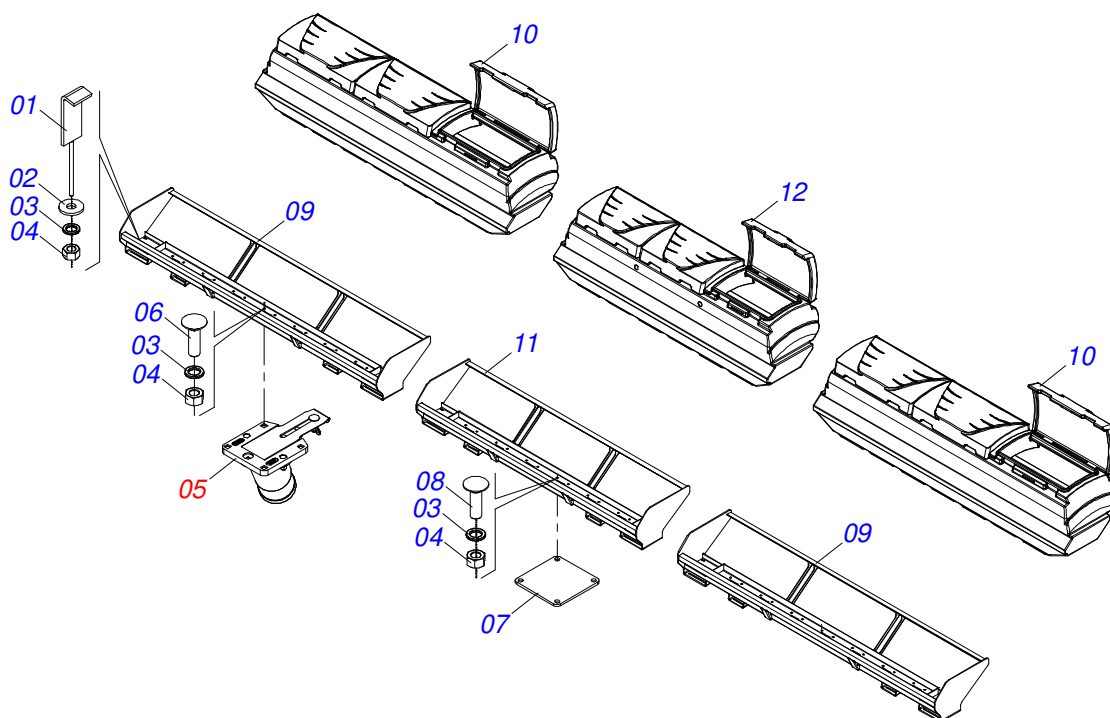


Item	Code	Description	See page	QT
01	0521063401	FIXING LOCK		06
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
03	0503010025	3/8 SPRING WASHER		86
04	0503010026	3/8" NUT		86
05	0511057690	3" ARTICULATED SEED CONDUCTOR	184	16
06	0501010942	3/8" X 1-1/4" BOLT		64
07	0571015773	SUPPORT SEED		04
08	0501011643	3/8 X 1"BOLT		16
09	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		02
10	0503062165	7 NOZZLES FRONT FERTILIZER HOPPER		02
11	0521064813	6 NOZZLES SINGLE SEED HOPPER SUPPORT		01
12	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		01

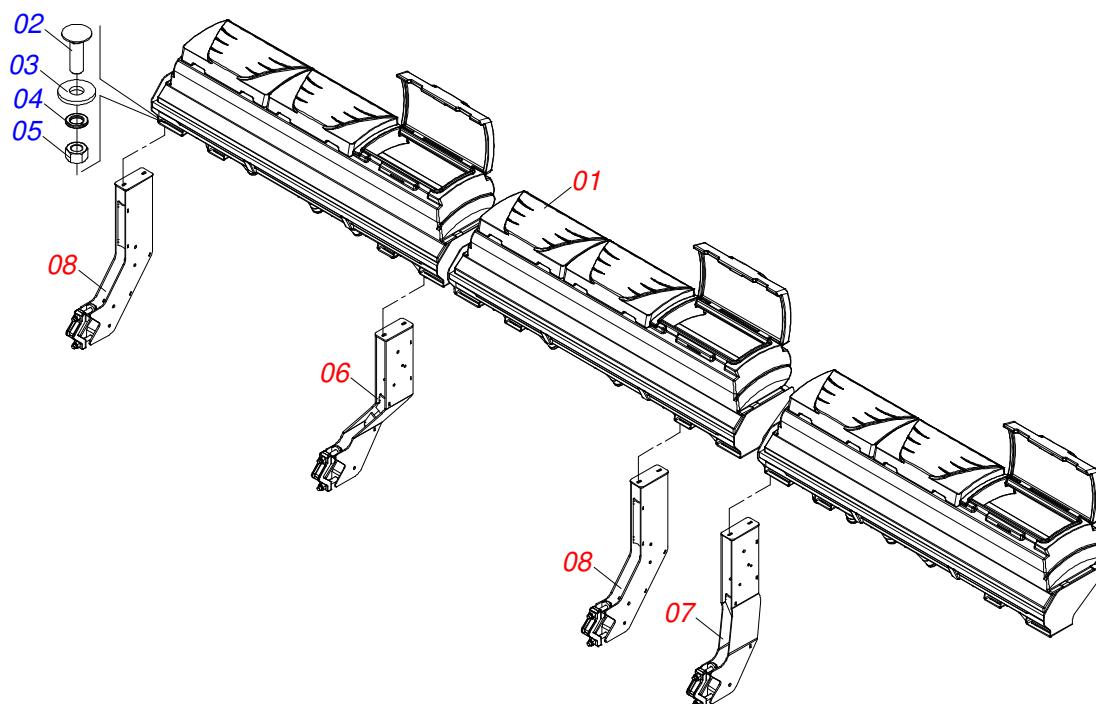


Item	Code	Description	See page	QT
01	0511058397	ASSEMBLY CSU C3 3BOX 7B WITH 17 C 7860	195	01
02	0501010942	3/8" X 1-1/4" BOLT		12
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
04	0503010025	3/8 SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0521051931	LEFT SUPPORT TOWER WITH BOLT	191	01
07	0521052687	RIGHT SUPPORT TOWER WITH BOLT	190	01
08	0521051927	TOWER SUPPORT HOPPER	185	04

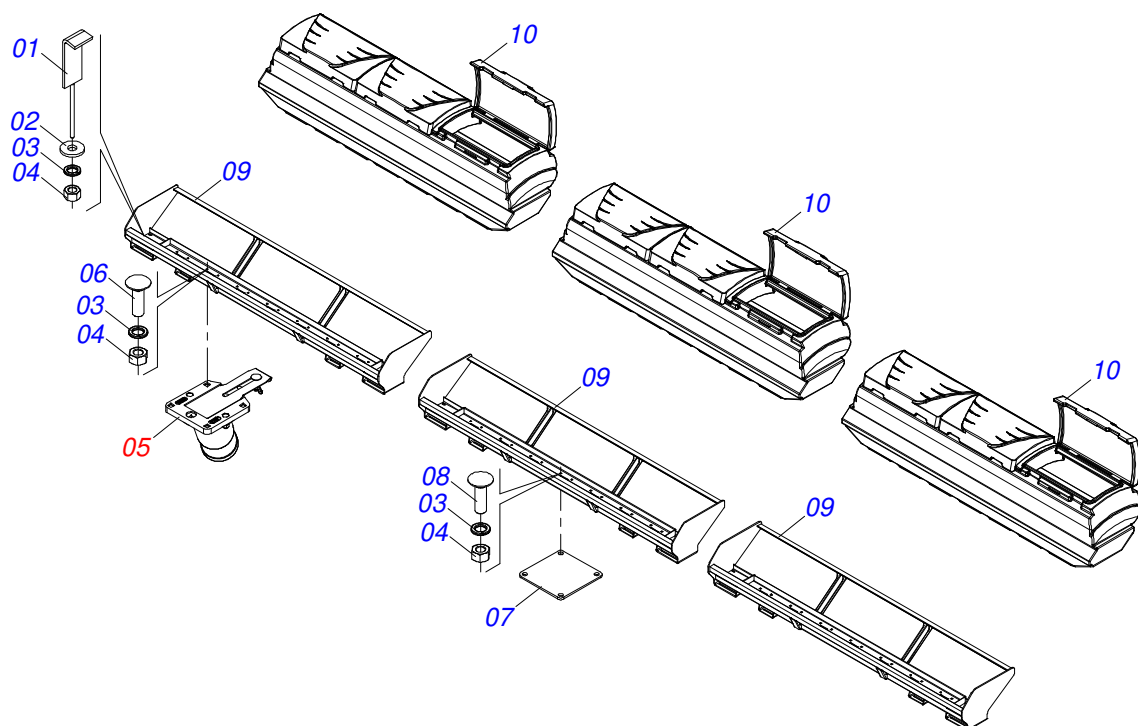


Item	Code	Description	See page	QT
01	0521063401	FIXING LOCK		06
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
03	0503010025	3/8 SPRING WASHER		90
04	0503010026	3/8" NUT		90
05	0511057690	3" ARTICULATED SEED CONDUCTOR	184	17
06	0501010942	3/8" X 1-1/4" BOLT		68
07	0571015773	SUPPORT SEED		04
08	0501011643	3/8 X 1"BOLT		16
09	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		03
10	0503062165	7 NOZZLES FRONT FERTILIZER HOPPER		03

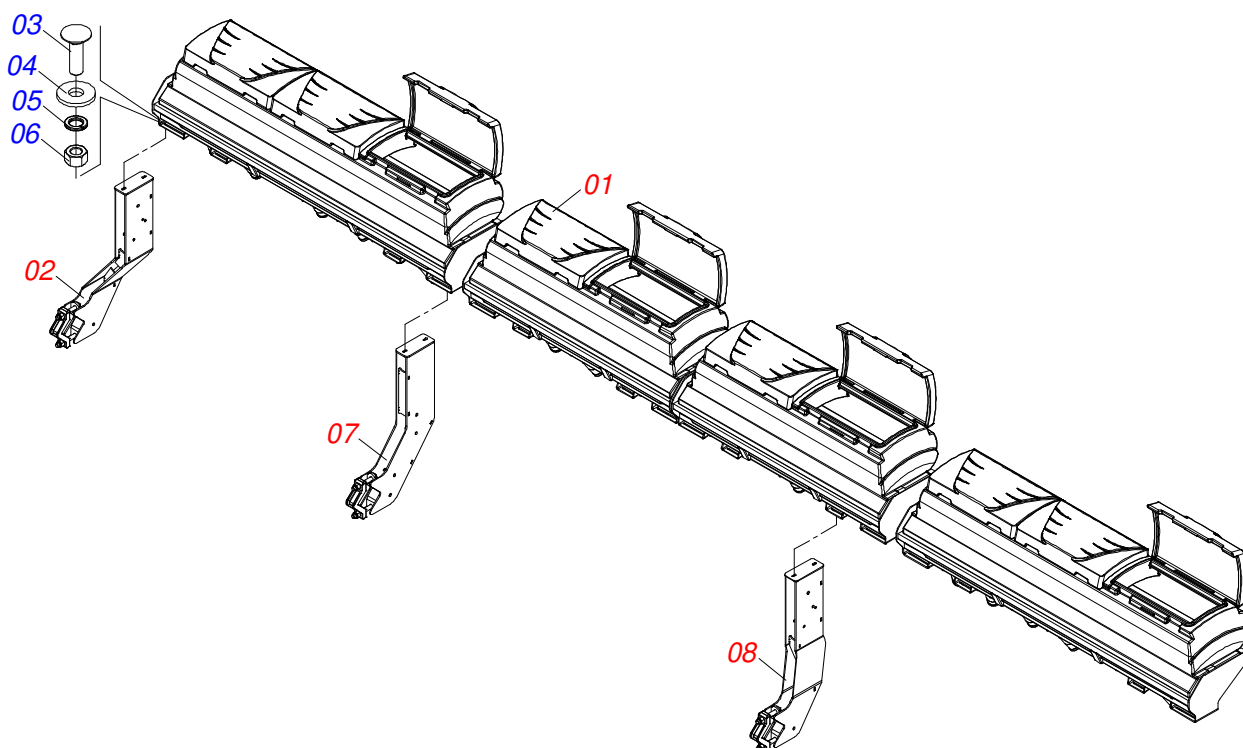


Item	Code	Description	See page	QT
01	0511058578	ASSEMBLY CSU C3 - 18 NOZZLES 8960	197	01
02	0521051931	LEFT SUPPORT TOWER WITH BOLT	191	02
03	0501010942	3/8" X 1-1/4" BOLT		16
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
05	0503010025	3/8 SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0521051927	TOWER SUPPORT HOPPER	185	04
08	0521052687	RIGHT SUPPORT TOWER WITH BOLT	190	02

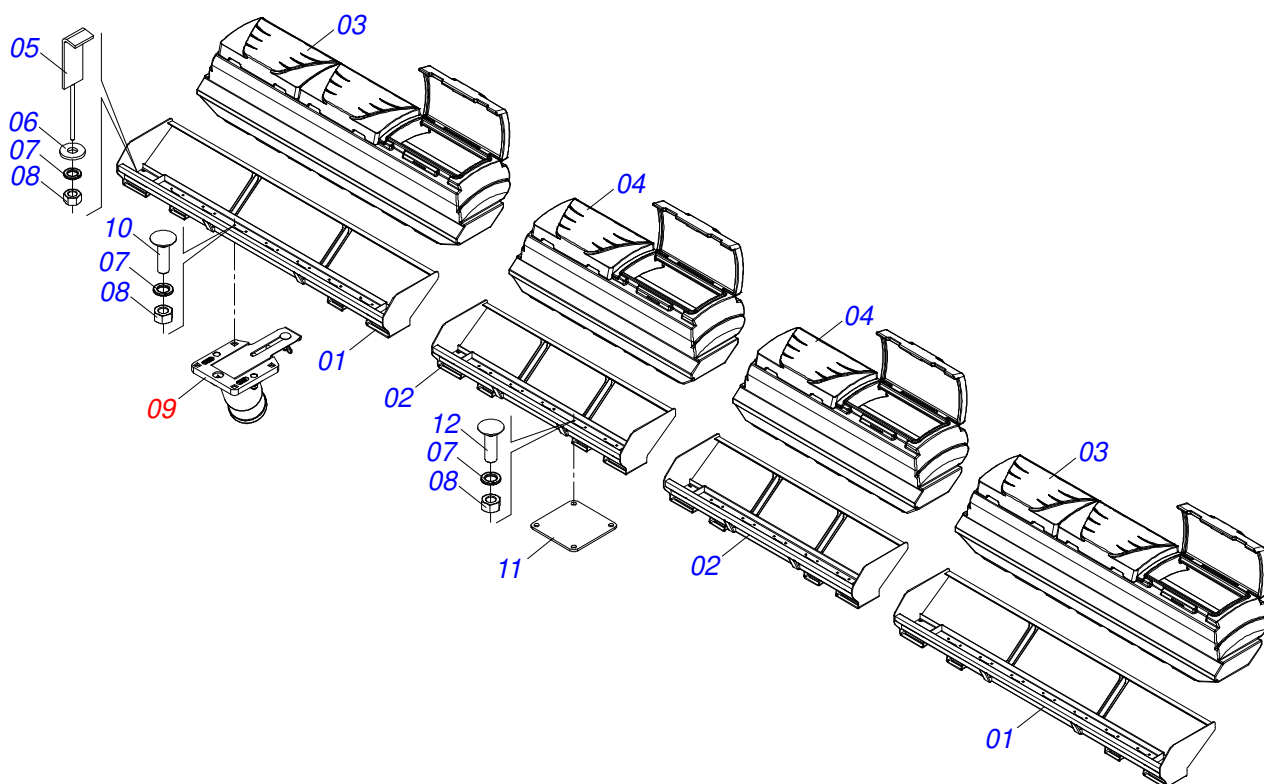


Item	Code	Description	See page	QT
01	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		02
02	0521064748	05 NOZZLES SINGLE SEED HOPPER SUPPORT		02
03	0503062165	7 NOZZLES FRONT FERTILIZER HOPPER		02
04	0503061987	05 NOZZLES FERTILIZER HOPPER		02
05	0521063401	FIXING LOCK		09
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		09
07	0503010025	3/8 SPRING WASHER		105
08	0503010026	3/8" NUT		105
09	0511057690	3" ARTICULATED SEED CONDUCTOR	184	18
10	0501010942	3/8" X 1-1/4" BOLT		72
11	0571015773	SUPPORT SEED		06
12	0501011643	3/8 X 1"BOLT		24

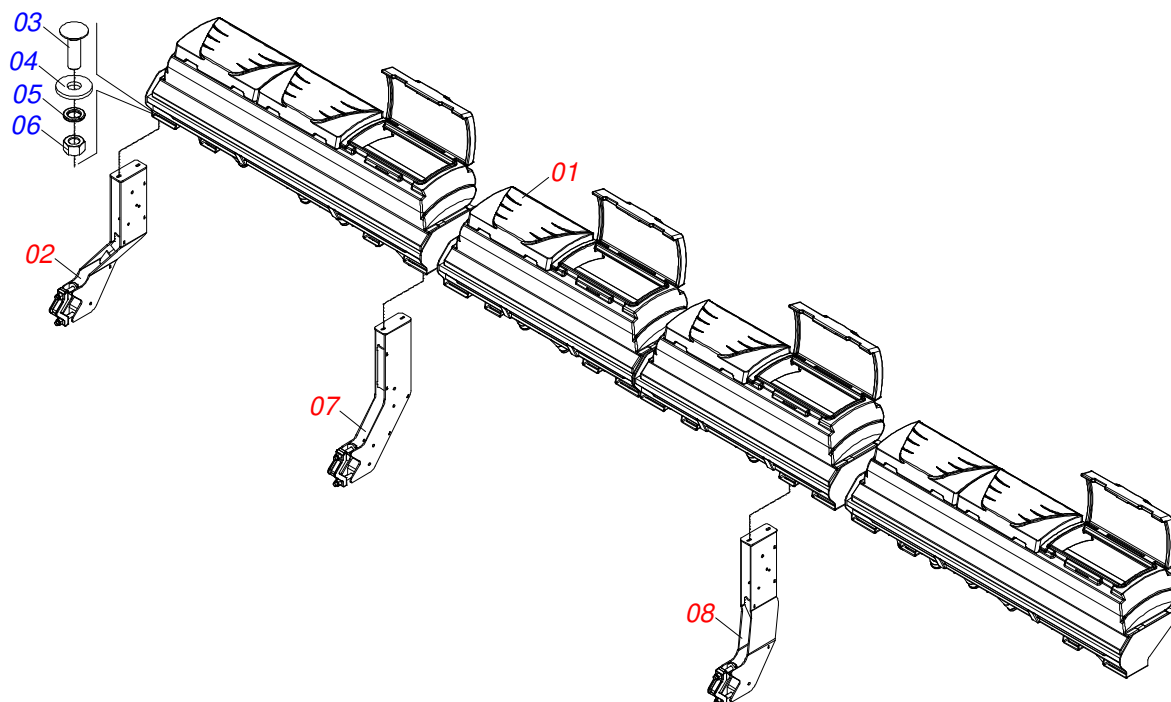


Item	Code	Description	See page	QT
01	0521050990	ASSEMBLY CSU C3 - 2BOXES 7/6 - 2 BOXES 5/4	199	01
02	0521051931	LEFT SUPPORT TOWER WITH BOLT	191	03
03	0501010942	3/8" X 1-1/4" BOLT		16
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
05	0503010025	3/8 SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0521051927	TOWER SUPPORT HOPPER	185	02
08	0521052687	RIGHT SUPPORT TOWER WITH BOLT	190	03

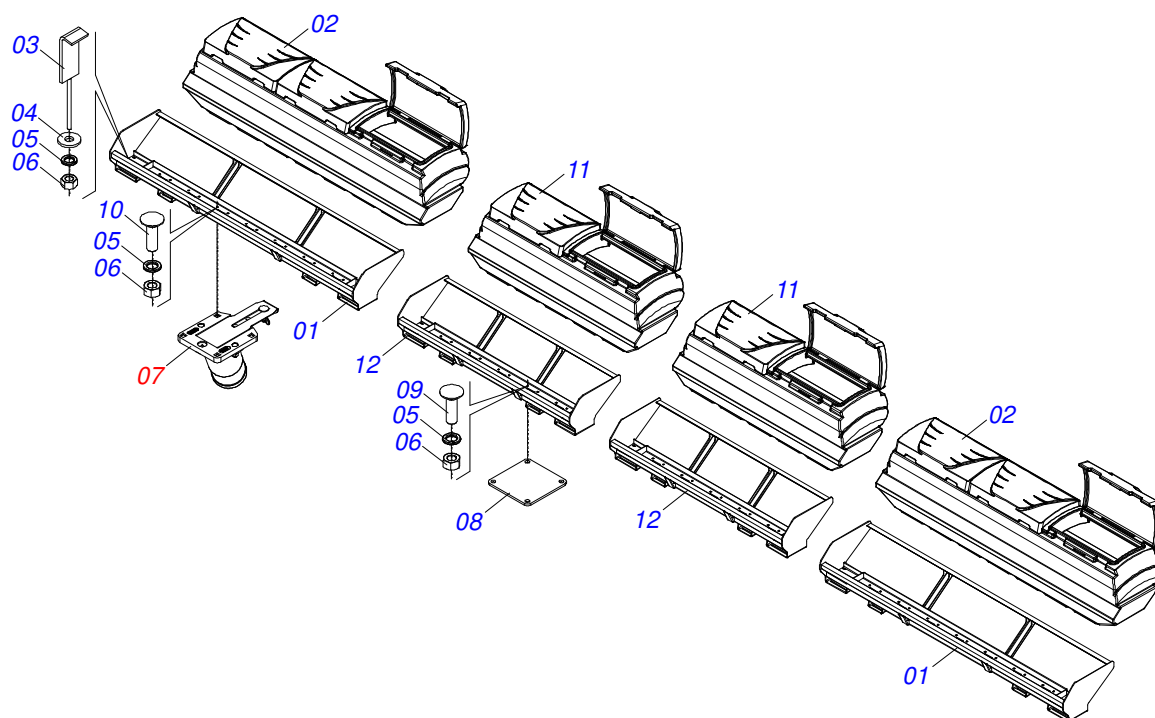


Item	Code	Description	See page	QT
01	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		02
02	0503062165	7 NOZZLES FRONT FERTILIZER HOPPER		02
03	0521063401	FIXING LOCK		09
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		09
05	0503010025	3/8 SPRING WASHER		105
06	0503010026	3/8" NUT		105
07	0511057690	3" ARTICULATED SEED CONDUCTOR	184	20
08	0571015773	SUPPORT SEED		04
09	0501011643	3/8 X 1"BOLT		16
10	0501010942	3/8" X 1-1/4" BOLT		80
11	0503061987	05 NOZZLES FERTILIZER HOPPER		02
12	0521064748	05 NOZZLES SINGLE SEED HOPPER SUPPORT		02

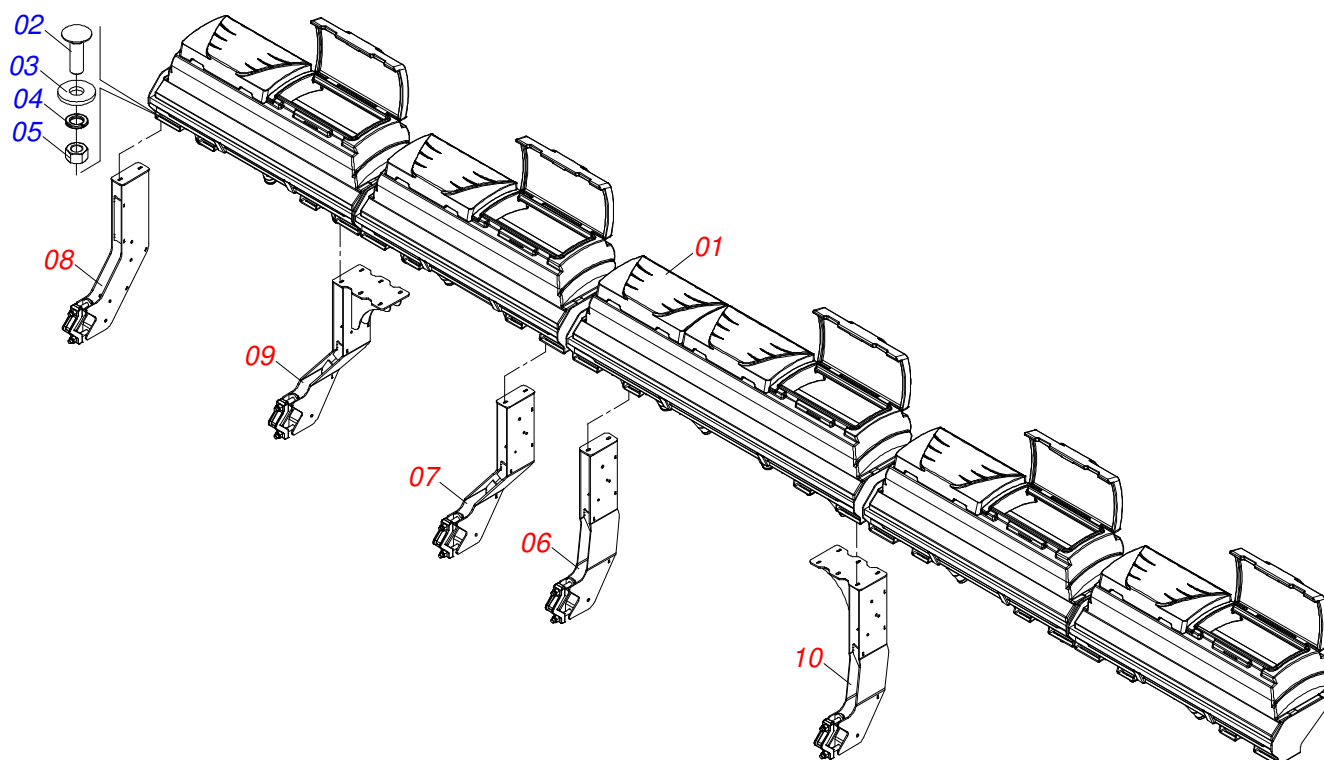


Item	Code	Description	See page	QT
01	0521052693	ASSEMBLY CSU C3 2BOXES 5/4 - 2BOXES 5/3 - 201 1BOX 7/6 9960		01
02	0501010942	3/8" X 1-1/4" BOLT		20
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		20
04	0503010025	3/8 SPRING WASHER		20
05	0503010026	3/8" NUT		20
06	0521052687	RIGHT SUPPORT TOWER WITH BOLT	190	01
07	0521051931	LEFT SUPPORT TOWER WITH BOLT	191	01
08	0521051927	TOWER SUPPORT HOPPER	185	04
09	0521051929	SIDE FIXED TOWER LEFT HOPPER SUPPORT WITH SCREW	202	01
10	0521051928	FIXED TOWER SIDE RIGHT HOPPER SUPPORT WITH SCREW	203	01

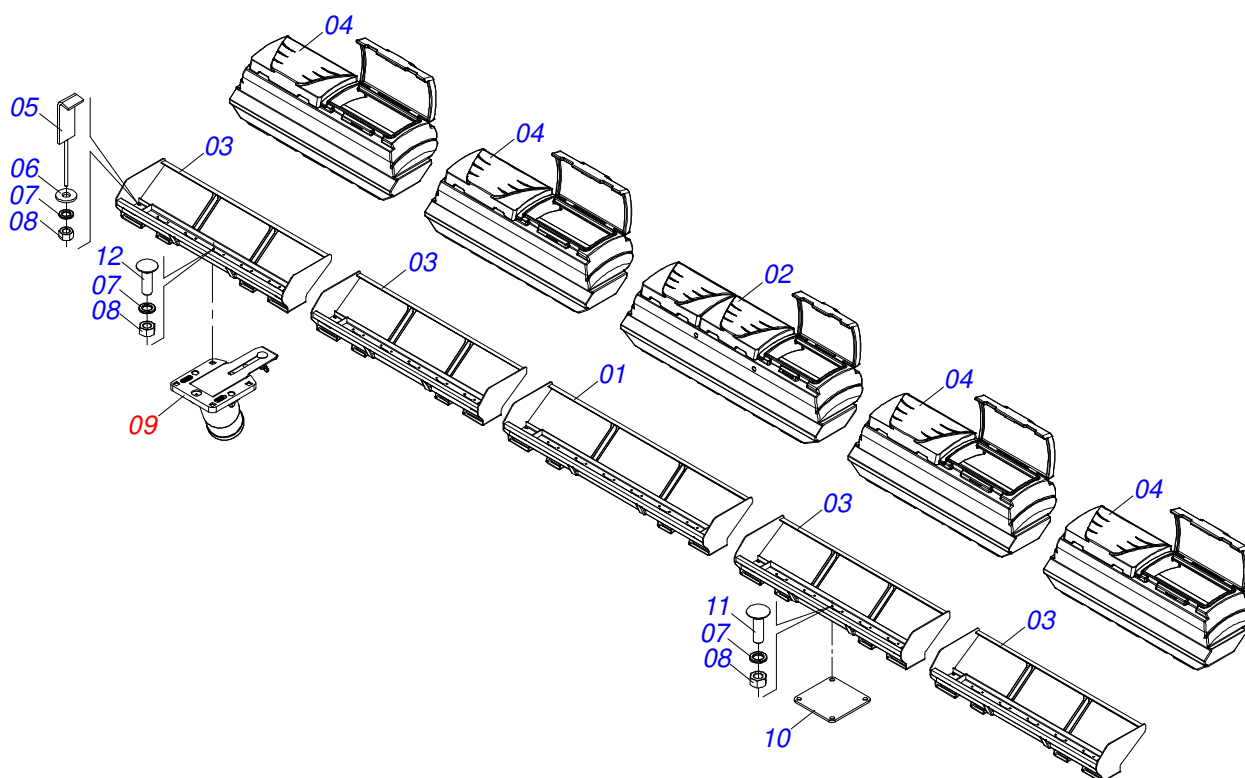


Item	Code	Description	See page	QT
01	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		01
02	0503062165	7 NOZZLES FRONT FERTILIZER HOPPER		01
03	0521064748	05 NOZZLES SINGLE SEED HOPPER SUPPORT		04
04	0503061987	05 NOZZLES FERTILIZER HOPPER		04
05	0521063401	FIXING LOCK		10
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		10
07	0503010025	3/8 SPRING WASHER		118
08	0503010026	3/8" NUT		118
09	0511057690	3" ARTICULATED SEED CONDUCTOR	184	20
10	0571015773	SUPPORT SEED		07
11	0501011643	3/8 X 1"BOLT		28
12	0501010942	3/8" X 1-1/4" BOLT		80

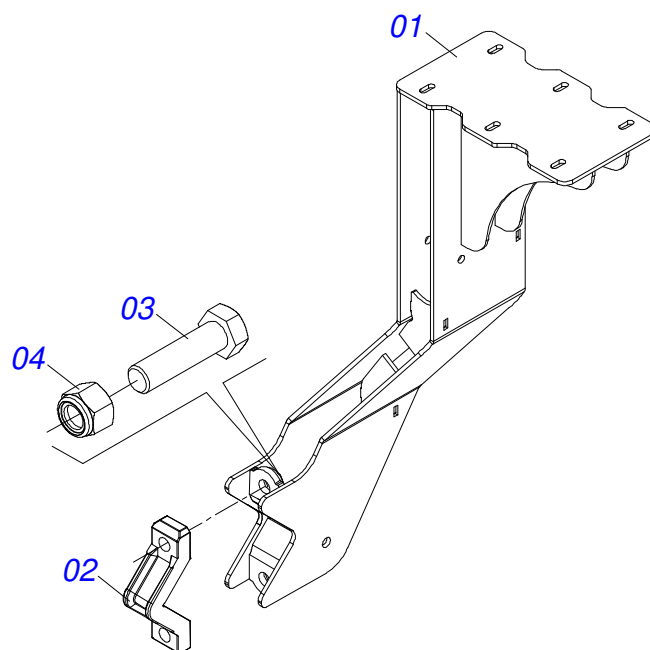


Item	Code	Description	See page	QT
01	0521066205	HOPPER SUPPORT LEFT SIDE FIXER TOWER		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

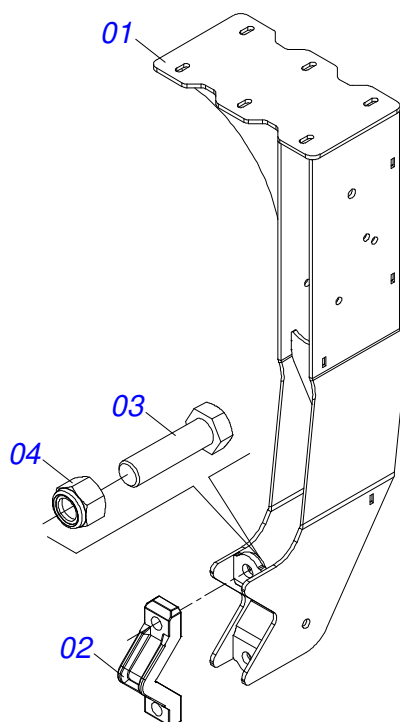


Item	Code	Description	See page	QT
01	0521066204	HOPPER SUPPORT RIGHT SIDE FIXER TOWER		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

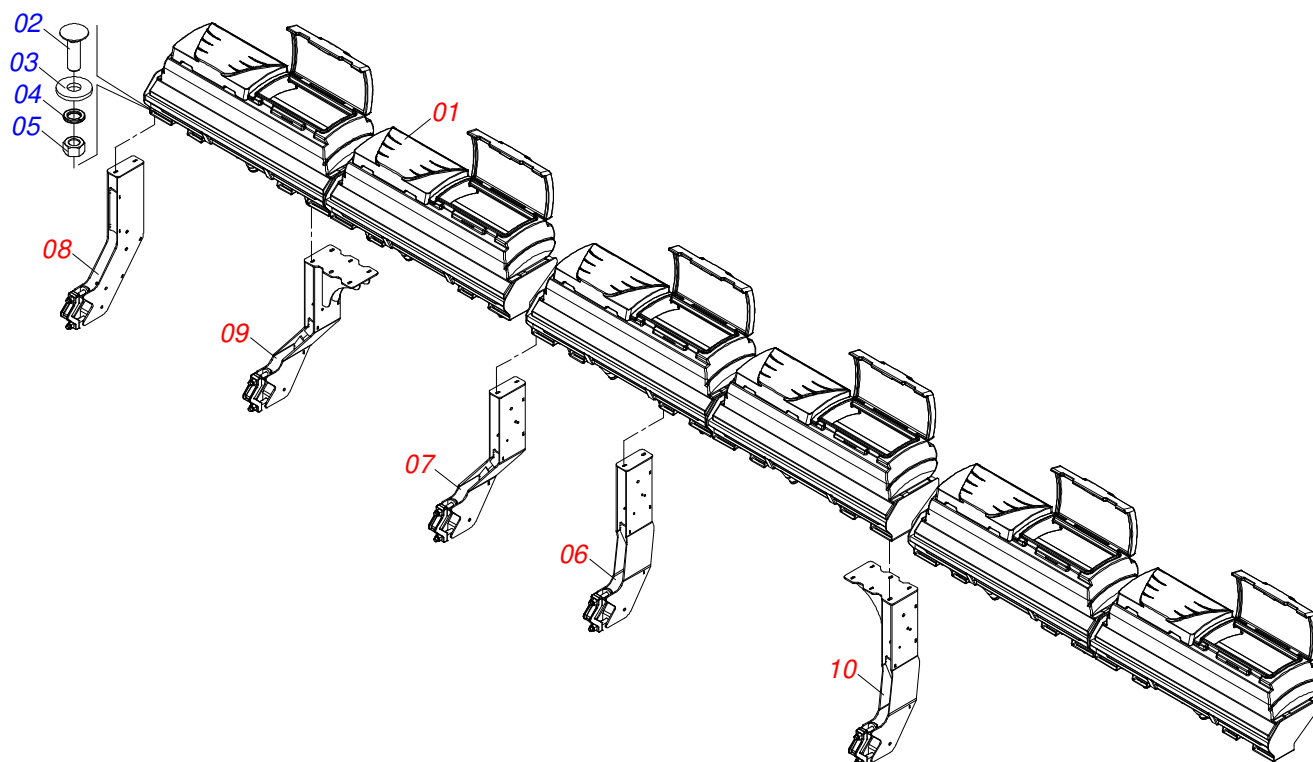


Item	Code	Description	See page	QT
01	0511058854	ASSEMBLY CSU C3 6BOXES 5B WITH 21 C	205	01
02	0501010942	3/8" X 1-1/4" BOLT		24
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		24
04	0503010025	3/8 SPRING WASHER		24
05	0503010026	3/8" NUT		24
06	0521052687	RIGHT SUPPORT TOWER WITH BOLT	190	02
07	0521051931	LEFT SUPPORT TOWER WITH BOLT	191	02
08	0521051927	TOWER SUPPORT HOPPER	185	04
09	0521051929	SIDE FIXED TOWER LEFT HOPPER SUPPORT WITH SCREW	202	01
10	0521051928	FIXED TOWER SIDE RIGHT HOPPER SUPPORT WITH SCREW	203	01

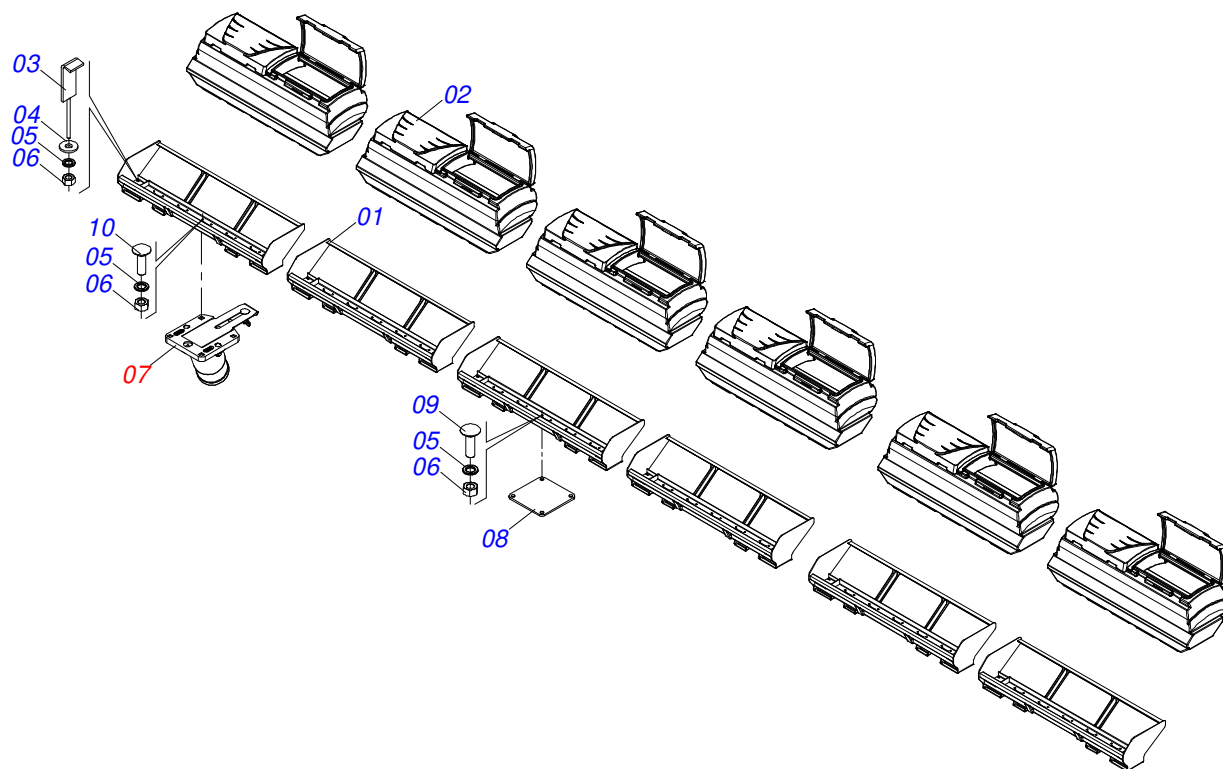

Item	Code	Description	See page	QT
01	0521064748	05 NOZZLES SINGLE SEED HOPPER SUPPORT		06
02	0503061987	05 NOZZLES FERTILIZER HOPPER		06
03	0521063401	FIXING LOCK		12
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
05	0503010025	3/8 SPRING WASHER		132
06	0503010026	3/8" NUT		132
07	0511057690	3" ARTICULATED SEED CONDUCTOR	184	21
08	0571015773	SUPPORT SEED		09
09	0501011643	3/8 X 1"BOLT		36
10	0501010942	3/8" X 1-1/4" BOLT		84

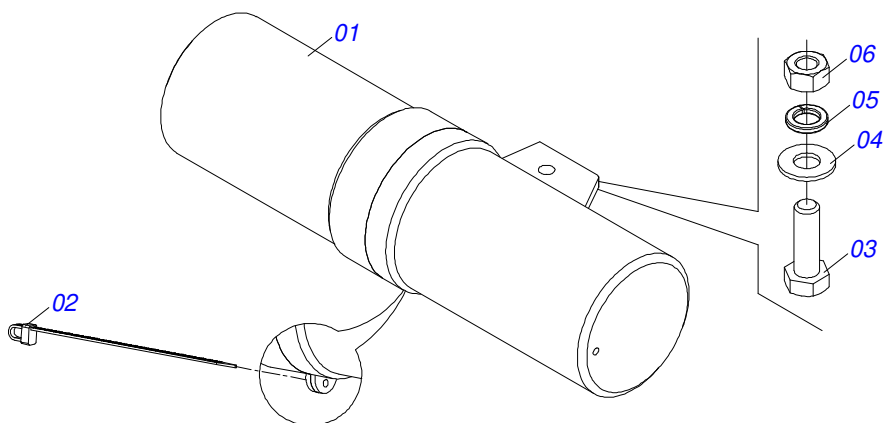


Item	Code	Description	See page	QT
01	0503060100	INSTRUCTIONS MANUAL CANISTER		01
02	0503010267	NYLON CLAMP		01
03	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
04	0501010694	FLAT WASHER		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
06	0503010337	5/16" NUT		01

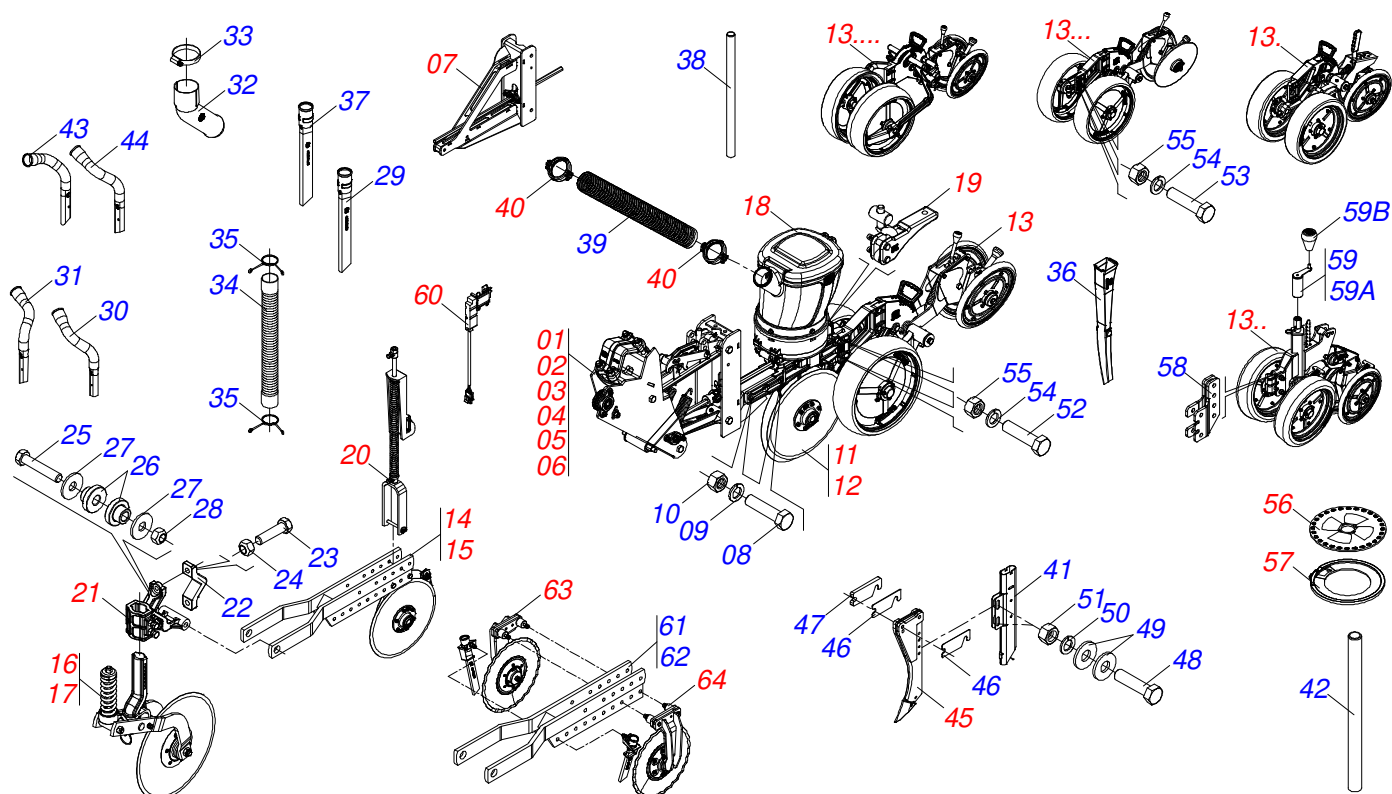

Item	Code	Description	See page	QT
01	0501059834	LEFT SHORT SEED ROW FRONT	208	01
02	0501059833	RIGHT SHORT SEED ROW FRONT	209	01
03	0501059836	LEFT LONG SEED ROW FRONT	210	01
04	0501059835	RIGHT LONG SEED ROW FRONT	211	01
05	0511059331	FRONT SEMI MOUNTED LONG LEFT SEED LINE	212	01
06	0511059332	FRONT SEMI MOUNTED LONG RIGHT SEED LINE	213	01
07	0511059333	SEMI-ASSEMBLED MECHANICAL FRAME	223	01
08	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
09	0503010019	1/2" SPRING WASHER		01
10	0503010060	1/2 UNC G.5 ZN HEX NUT		01
11	0511056622	LEFT REAR SEED ROW	227	01
12	0511056621	RIGHT REAR SEED ROW	232	01
13	0521051424	WHEEL SYSTEM DEPTH/COMPACTOR QUICK ADJUSTMENT	235	01
13.	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	241	01
13..	0521044538	DEPHT WHIT REGULACION ANGLE COMPACT CONTROL	250	01
13...	0521052626	SYSTEM DEEP WHEEL / COMPACTOR RAPID IRON ADJUSTMENT	259	01
13....	0521053063	SPACRR DEPTH SYSTEM / COMPACTION CLOSED	261	01
14	0511053250	SHORT ARM FERTILIZER ROW WITH LEFT DOUBLE DISC	269	01
15	0511053251	LONG ARM FERTILIZER ROW WITH RIGHT DOUBLE DISC	271	01
16	0511058619	20" SHORT ROW DISC BLADE	273	01
17	0511058620	20" LONG ROW DISC BLADE	274	01
18	0521050096	SEED HOPPER SYSTEM (CSU)	277	01
19	0511052024	FAST CLOSING SET	279	01
20	0501058423	FERTILIZER ROD SPRING ROW	280	01
21	0511059350	FERTILIZER ROW SUPPORT ASSEMBLY	281	01
22	0502010175	HITCH CLAMP		01
23	0503016110	BOLT 5/8 UNC X 4 C S G.7 ZN		01


Item	Code	Description	See page	QT
24	0503012412	5/8" UNC SELF LOCKING NUT		01
25	0501010066	3/4" X 9" BOLT		01
26	0521017831	SUPPORT SLEEVE SPACER		01
27	0511017232	FLAT WASHER		01
28	0503011255	3/4" LOCK NUT		01
29	0503030520	SEED SOCKET		01
30	0503030391	RIGHT FERTILIZER NOZZLE		01
31	0503030392	LEFT FERTILIZER NOZZLE		01
32	0503031050	CURVED CONDUCTOR		01
33	0503010246	CLAMP		01
34	0503031145	2" X 2" X 20" HOSE		01
35	0503031076	2" HOSE CLAMP		01
36	0503033672	NOZZLE WITHOUT TITANIUM		01
37	0503030483	FERTILIZER SOCKET		01
38	0531013600	PRESS ADJUSTMENT LEVER		01
39	0571011730	SEED CONDUCTOR 3" X 1500		01
40	0521050525	FIXER FERTILIZER CONDUCTOR	282	01
41	0521069127	BOTTOM NOZZLE FERTILIZER		01
42	0521018501	TURNBUCKLE LEVER		01
43	0581010082	FERTILIZER SOCKET RIGHT		01
44	0581010083	FERTILIZER SOCKET LEFT		01
45	0501110231	SCARIFIER ROD WITH TIP	283	01
46	0511017969	0.1" SPACING PLATE		01
47	0511018662	SPACING PLATE		01
48	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
49	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
50	0503010025	3/8 SPRING WASHER		01
51	0503010026	3/8" NUT		01
52	0503010905	1/2" X 2-1/4" BOLT		01
53	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
54	0503010019	1/2" SPRING WASHER		01
55	0503010060	1/2 UNC G.5 ZN HEX NUT		01
56	0503062066	DISC SET WITH CORN RING	284	01
57	0503062067	DISC SET / RING SOY 90F TITANIUM	285	01
58	0521067360	PROTRACTOR CPRA		01
59	0511058877	REGULATORY KEY		01
59A	0521066800	BODY REGULATORY KEY		01
59B	0503030878	LEVER CRANK		01
60	0501058972	ASSEMBLY SENSOR ELECTRONIC	286	01
61	0521061121	SHORT FERTILIZER ROW ARM		01
62	0521061153	FERTILIZER ROW LONG ARM		01
63	0511059220	DAOC 18 RIGHT WITH NOZZLE	287	01
64	0511059221	DAOC 18 LEFT WITH NOZZLE	290	01

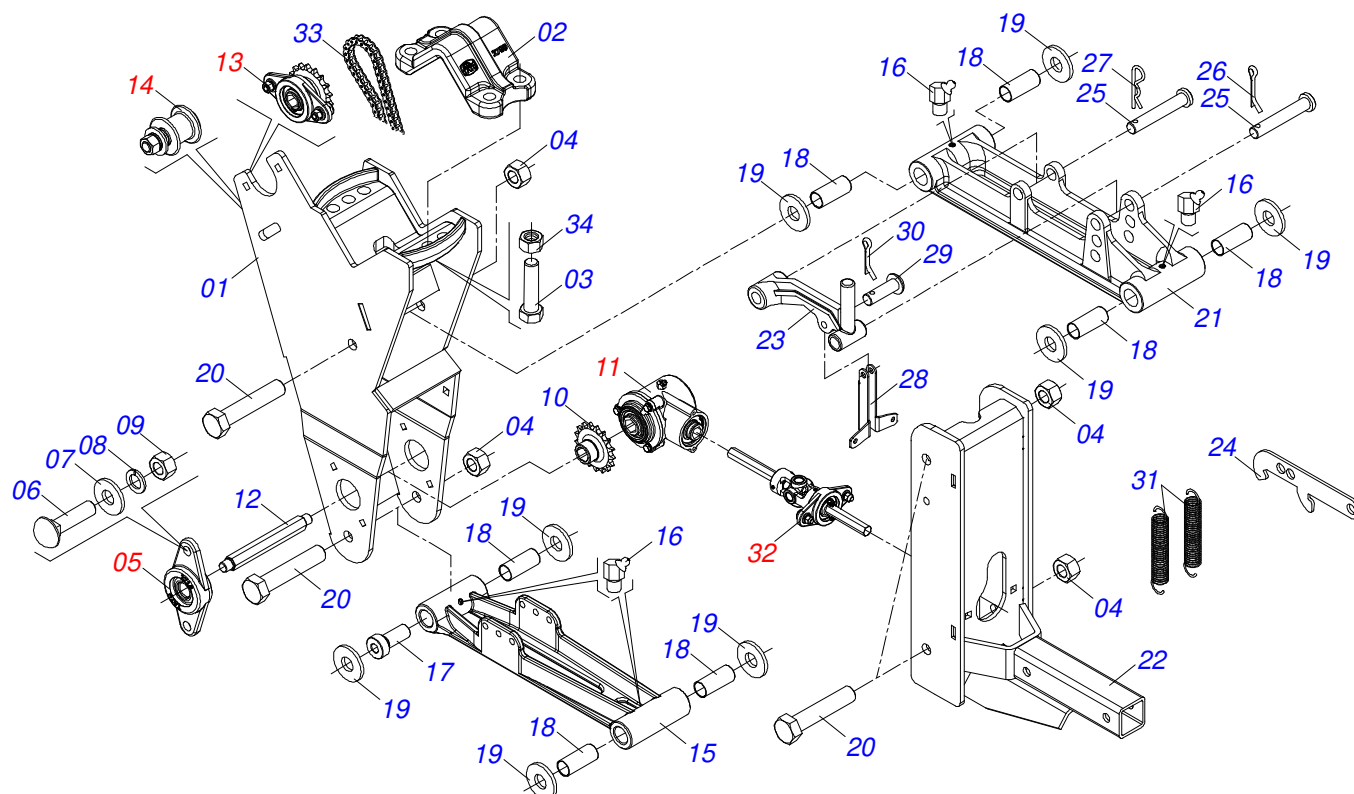

Item	Code	Description	See page	QT
01	0521064651	LEFT SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	214	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	FLAT WASHER		04
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION HOPPER SEED ROW	215	01
12	0561014904	TRANSMISSION AXLE FRAME ROW		01
13	0511050609	BEARING WITH 17Z GEAR ASSY	216	01
14	0511055260	SEED ROW CHAIN TENSIONER	218	01
15	0502012666	SEED ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521061427	SHORT SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HITCH PIN CLIP		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02




Item	Code	Description	See page	QT
32	0511059264	BEARING WITH AXLE	219	01
33	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

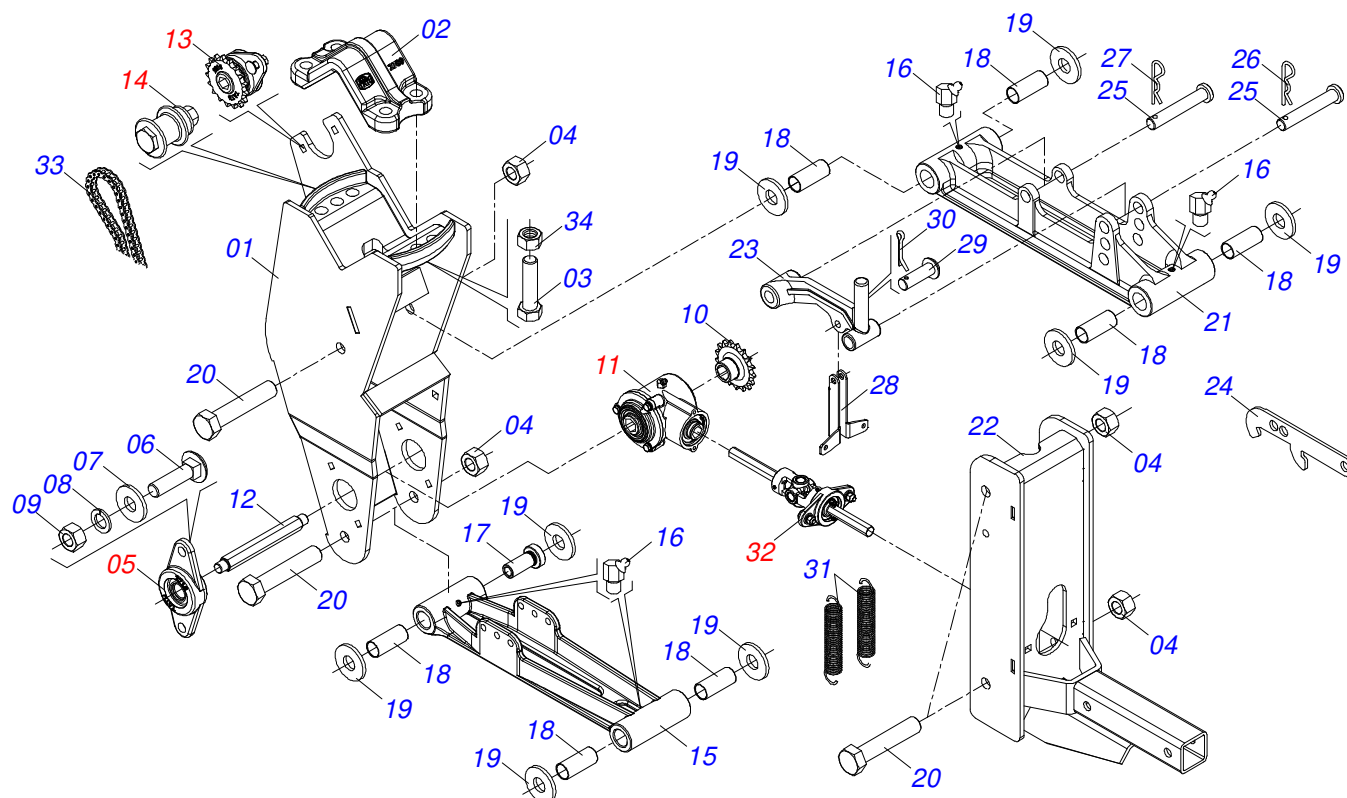

Item	Code	Description	See page	QT
01	0521064653	RIGH SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	214	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	FLAT WASHER		04
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION HOPPER SEED ROW	215	01
12	0561014904	TRANSMISSION AXLE FRAME ROW		01
13	0511050609	BEARING WITH 17Z GEAR ASSY	216	01
14	0511055260	SEED ROW CHAIN TENSIONER	218	01
15	0502012666	SEED ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521061427	SHORT SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HITCH PIN CLIP		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02




Item	Code	Description	See page	QT
32	0511059264	BEARING WITH AXLE	219	01
33	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

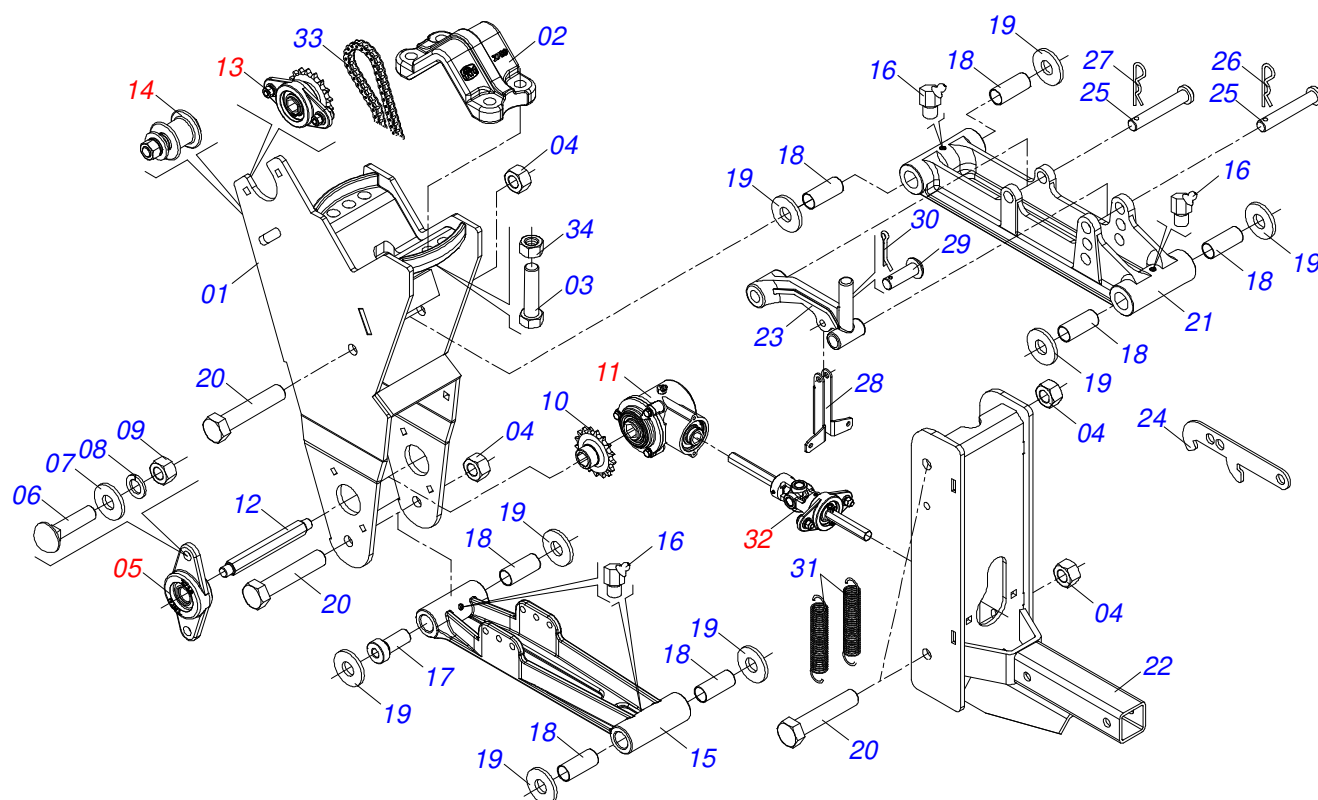

Item	Code	Description	See page	QT
01	0521064650	LEFT SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	214	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	FLAT WASHER		04
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION HOPPER SEED ROW	215	01
12	0561014904	TRANSMISSION AXLE FRAME ROW		01
13	0501052769	BEARING WITH 17Z GEAR	217	01
14	0511055260	SEED ROW CHAIN TENSIONER	218	01
15	0502012666	SEED ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521061427	SHORT SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HITCH PIN CLIP		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02




Item	Code	Description	See page	QT
32	0511059264	BEARING WITH AXLE	219	01
33	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

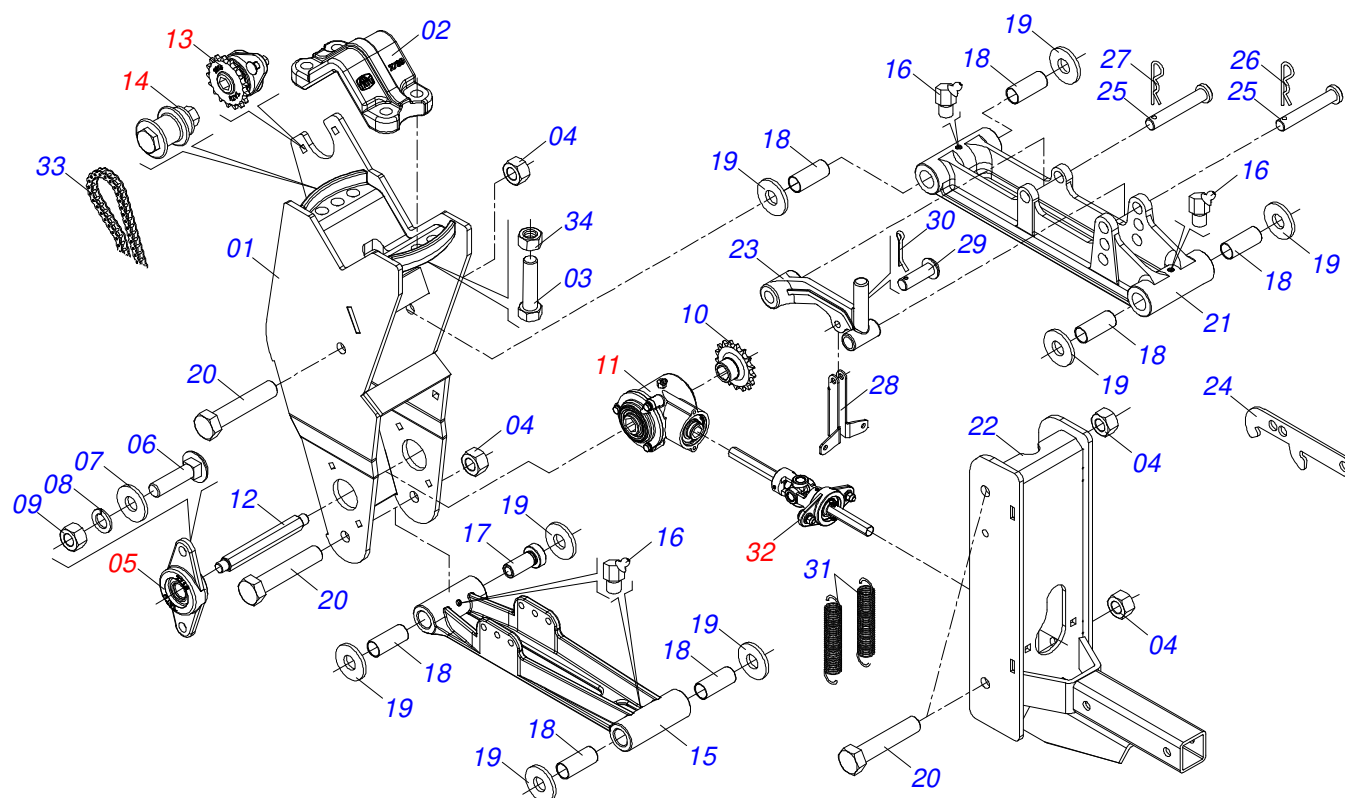

Item	Code	Description	See page	QT
01	0521064652	RH SEED ROW SUPPORT FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0511054635	BEARING AXLE BODY	214	02
06	0503011953	5/16" X 1" BOLT		04
07	0501010694	FLAT WASHER		04
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
09	0503010337	5/16" NUT		04
10	0502012782	17Z GEAR WITH HEX HOLE		01
11	0511057159	TRANSMISSION HOPPER SEED ROW	215	01
12	0561014904	TRANSMISSION AXLE FRAME ROW		01
13	0511050609	BEARING WITH 17Z GEAR ASSY	216	01
14	0511055260	SEED ROW CHAIN TENSIONER	218	01
15	0502012666	SEED ROW LOWER ARM		01
16	0503010003	1845 GREASE FITTING		04
17	0561015858	SPACER LOWER SLEEVE		01
18	0531015151	0.6" X 1" X 2.4" SLEEVE		07
19	0531015184	FLAT WASHER		08
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
21	0502012350	SEED ROW UPPER ARM		01
22	0521061427	SHORT SEED ROW FRAME		01
23	0502012568	UPPER ROCKER ARM		01
24	0561019032	SEED FERTIL ROW LOCK		01
25	0501011388	COUPLING SHAFT		02
26	0503010071	3/16" X 1" COTTERPIN		01
27	0503030168	HITCH PIN CLIP		01
28	0581018487	FIXER UPPER SPRING		01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		01
30	0503010140	1/8" X 3/4" COTTERPIN		01
31	0503034580	TRACTION SPRING		02




Item	Code	Description	See page	QT
32	0511059264	BEARING WITH AXLE	219	01
33	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

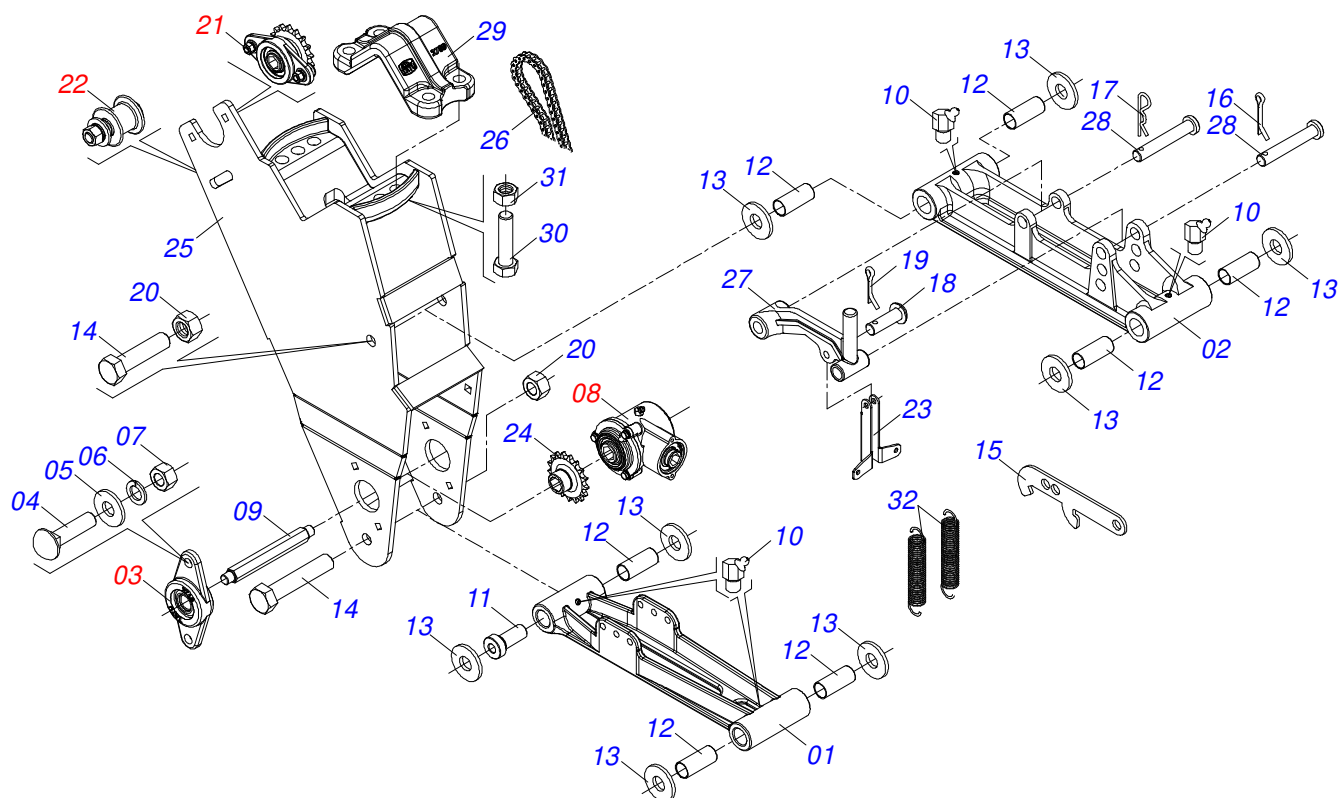

Item	Code	Description	See page	QT
01	0502012666	SEED ROW LOWER ARM		01
02	0502012350	SEED ROW UPPER ARM		01
03	0511054635	BEARING AXLE BODY	214	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
07	0503010337	5/16" NUT		04
08	0511057159	TRANSMISSION HOPPER SEED ROW	215	01
09	0561014904	TRANSMISSION AXLE FRAME ROW		01
10	0503010003	1845 GREASE FITTING		04
11	0561015858	SPACER LOWER SLEEVE		01
12	0531015151	0.6" X 1" X 2.4" SLEEVE		07
13	0531015184	FLAT WASHER		08
14	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
15	0561019032	SEED FERTIL ROW LOCK		01
16	0503010071	3/16" X 1" COTTERPIN		01
17	0503030168	HITCH PIN CLIP		01
18	0521010773	0.37" X 1.18" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503012412	5/8" UNC SELF LOCKING NUT		04
21	0501052769	BEARING WITH 17Z GEAR	217	01
22	0511055260	SEED ROW CHAIN TENSIONER	218	01
23	0581018487	FIXER UPPER SPRING		01
24	0502012782	17Z GEAR WITH HEX HOLE		01
25	0521064650	LEFT SEED ROW SUPPORT FRONT		01
26	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
27	0502012568	UPPER ROCKER ARM		01
28	0501011388	COUPLING SHAFT		02
29	0502012789	FIXER SUPPORT FERTILIZER ROW		01
30	0503017857	BOLT 5/8 UNF 4		04
31	0503010811	5/8" UNF SELF ADJUSTING NUT		04




Item	Code	Description	See page	QT
32	0503034580	TRACTION SPRING		02

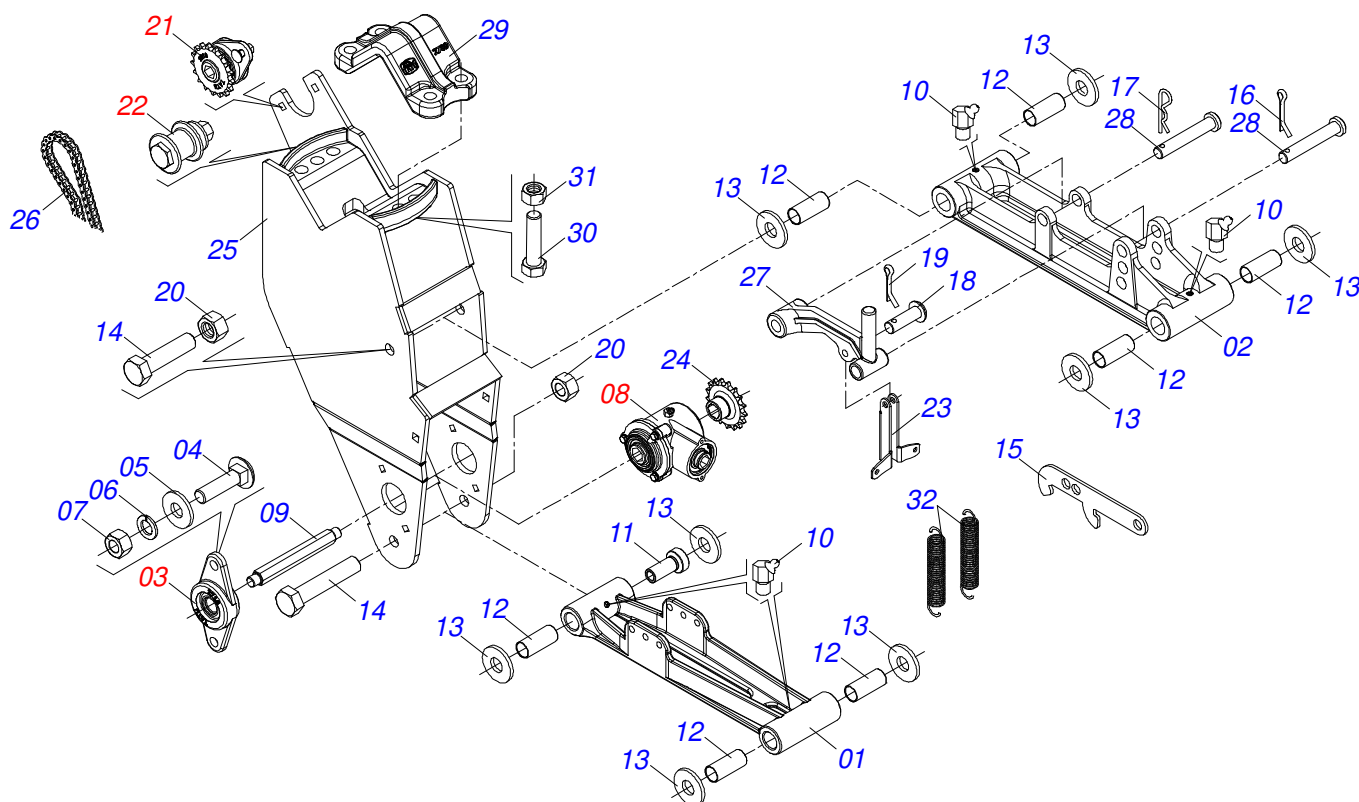


Item	Code	Description	See page	QT
01	0502012666	SEED ROW LOWER ARM		01
02	0502012350	SEED ROW UPPER ARM		01
03	0511054635	BEARING AXLE BODY	214	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
07	0503010337	5/16" NUT		04
08	0511057159	TRANSMISSION HOPPER SEED ROW	215	01
09	0561014904	TRANSMISSION AXLE FRAME ROW		01
10	0503010003	1845 GREASE FITTING		04
11	0561015858	SPACER LOWER SLEEVE		01
12	0531015151	0.6" X 1" X 2.4" SLEEVE		07
13	0531015184	FLAT WASHER		08
14	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
15	0561019032	SEED FERTIL ROW LOCK		01
16	0503010071	3/16" X 1" COTTERPIN		01
17	0503030168	HITCH PIN CLIP		01
18	0521010773	0.37" X 1.18" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503012412	5/8" UNC SELF LOCKING NUT		04
21	0511050609	BEARING WITH 17Z GEAR ASSY	216	01
22	0511055260	SEED ROW CHAIN TENSIONER	218	01
23	0581018487	FIXER UPPER SPRING		01
24	0502012782	17Z GEAR WITH HEX HOLE		01
25	0521064652	RH SEED ROW SUPPORT FRONT		01
26	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
27	0502012568	UPPER ROCKER ARM		01
28	0501011388	COUPLING SHAFT		02
29	0502012789	FIXER SUPPORT FERTILIZER ROW		01
30	0503017857	BOLT 5/8 UNF 4		04
31	0503010811	5/8" UNF SELF ADJUSTING NUT		04




Item	Code	Description	See page	QT
32	0503034580	TRACTION SPRING		02

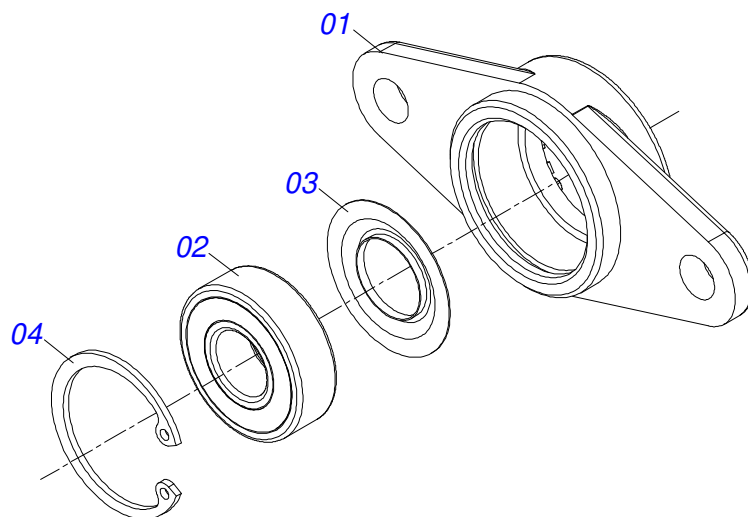


Item	Code	Description	See page	QT
01	0502012718	ROW BEARING		01
02	0503012882	BEARING		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

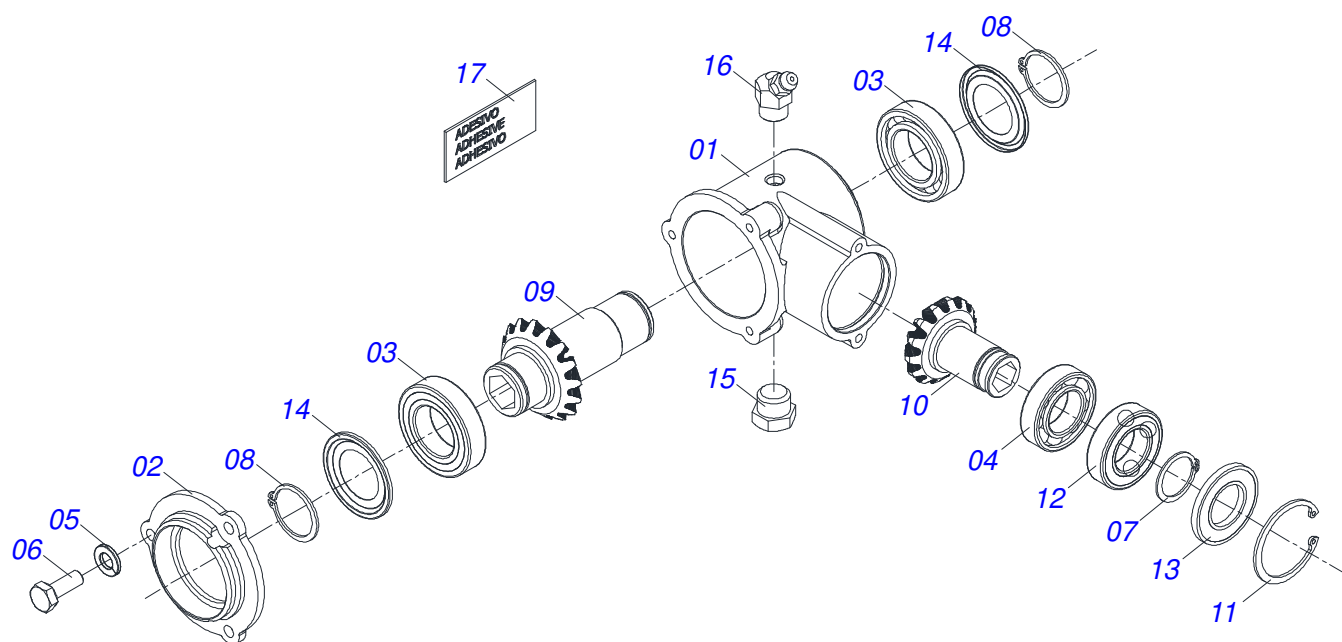


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01
17	0503035316	LUBRICATED POINTS ADHESIVE LABEL		01

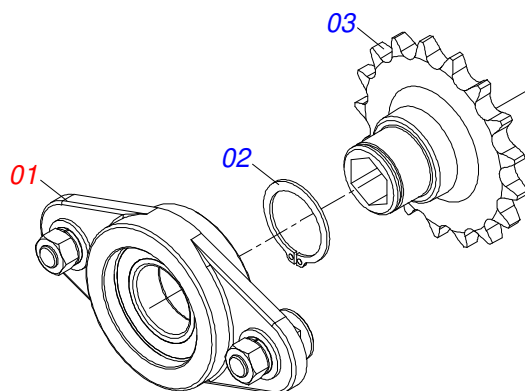


Item	Code	Description	See page	QT
01	0511050617	FRONT SEED ROW BEARING		01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0502012819	17Z GEAR WITH HEX HOLE		01

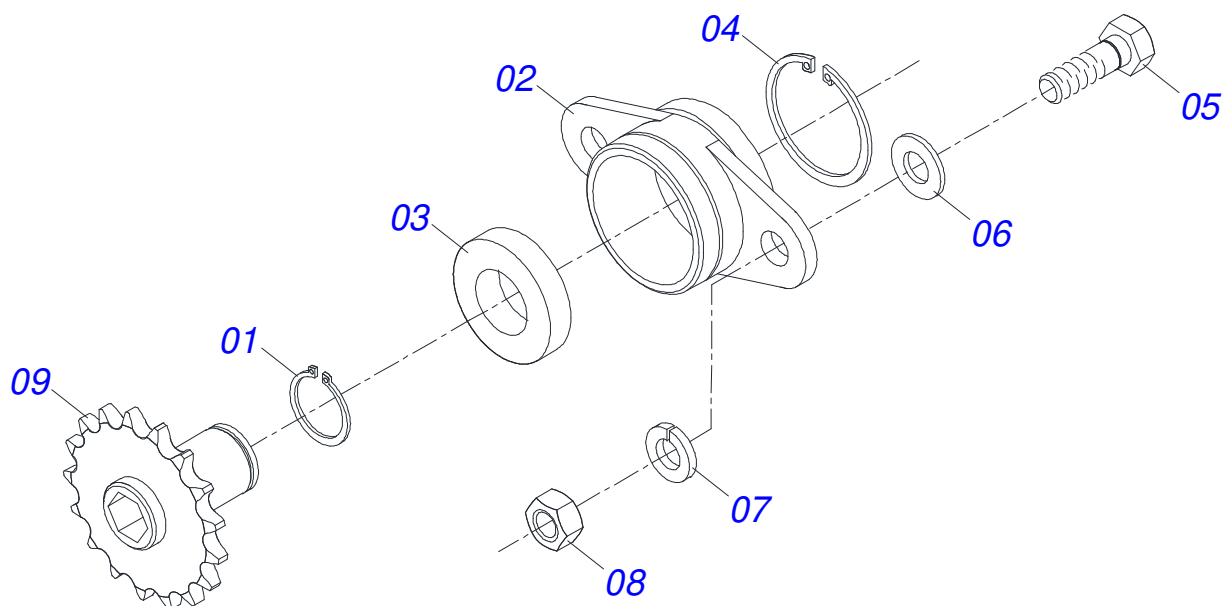


Item	Code	Description	See page	QT
01	0503010406	501025 CLAMPING RING (FOR AXLE)		01
02	0502011697	GEARBOX BEARING		01
03	0503011410	ROLLER BEARING		01
04	0503011105	SEAL RING		01
05	0503011953	5/16" X 1" BOLT		02
06	0501010694	FLAT WASHER		02
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
08	0503010337	5/16" NUT		02
09	0502012819	17Z GEAR WITH HEX HOLE		01

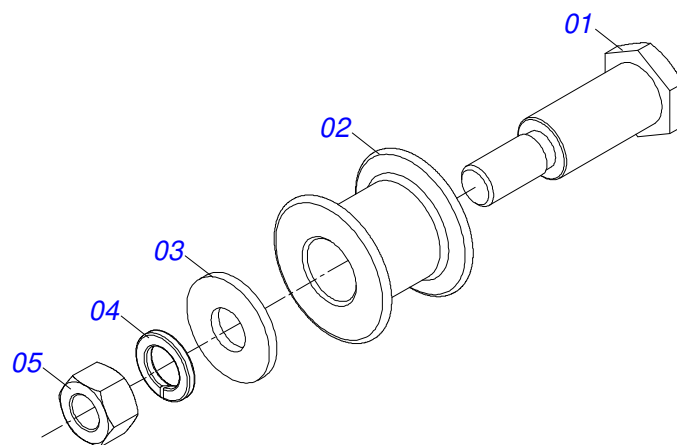


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

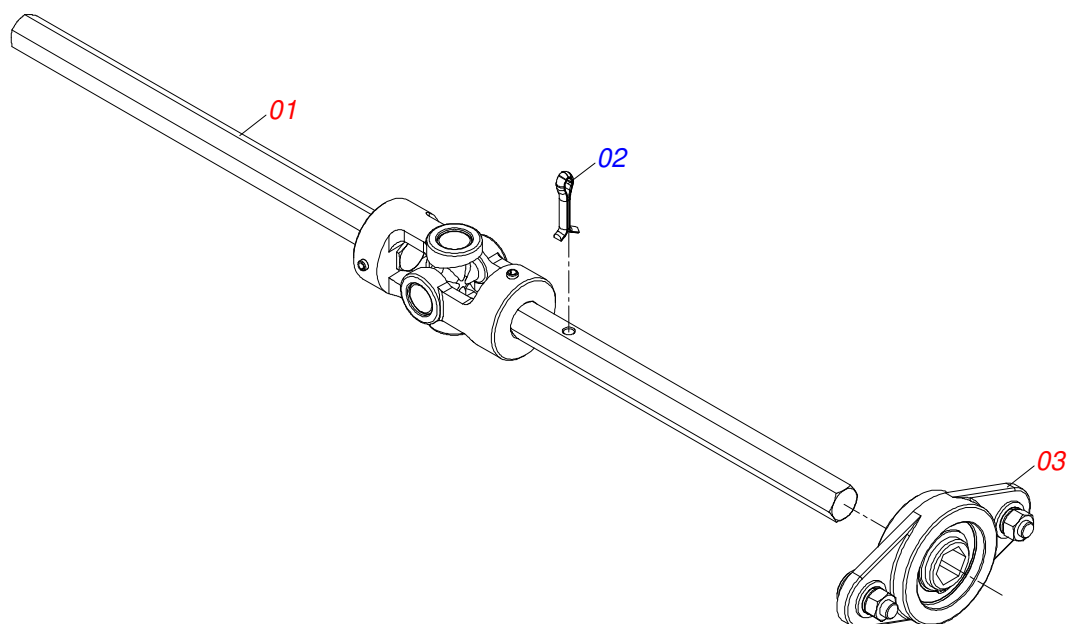


Item	Code	Description	See page	QT
01	0501059326	UNIVERSAL JOINT AXLE	220	01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0511050611	5/8" HEX AXLE BEARING	221	01

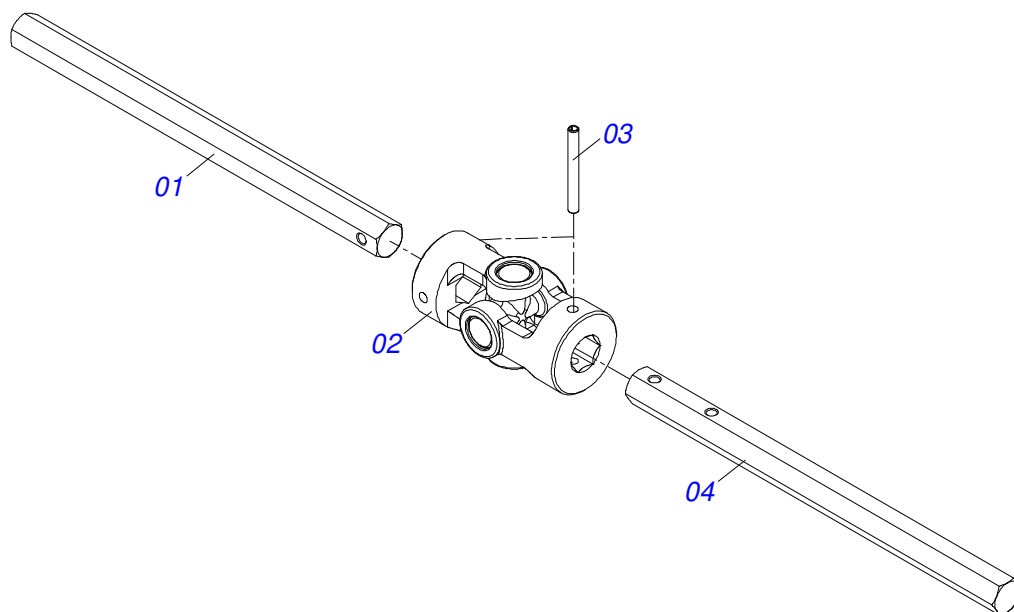


Item	Code	Description	See page	QT
01	0561016322	5/8" HEX AXLE		01
02	0501056296	UNIVERSAL JOINT		01
03	0503011855	0.2" X 1.8" SPRING PIN		02
04	0561014794	350 AXLE HEX		01

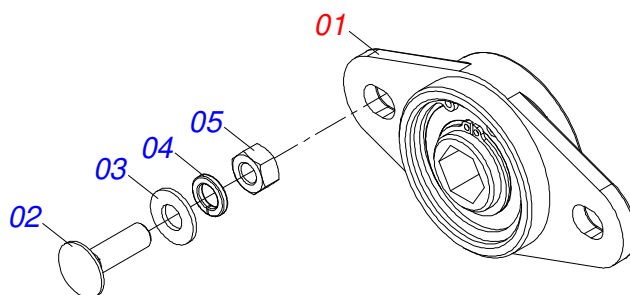


Item	Code	Description	See page	QT
01	0501059363	5/8" HEX AXLE BEARING	222	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

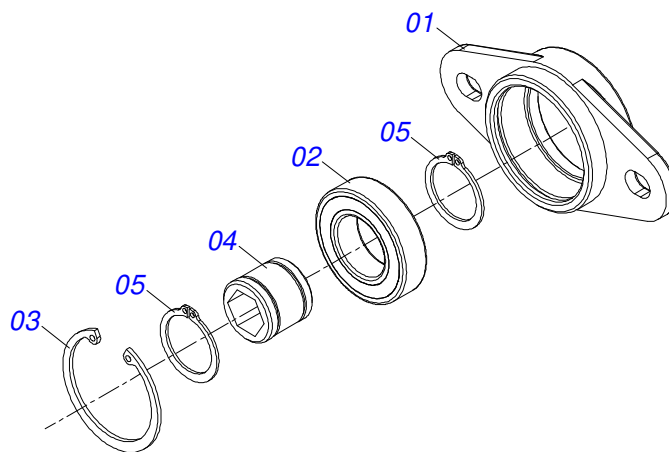


Item	Code	Description	See page	QT
01	0502011697	GEARBOX BEARING		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0561014911	5/8 HEX AXLE GUIDE SLEEVE		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		02

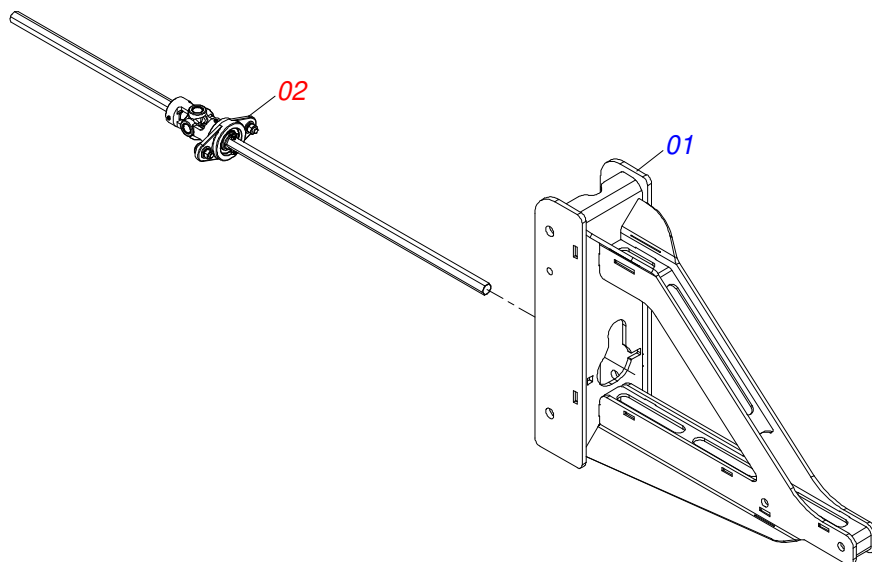


Item	Code	Description	See page	QT
01	0521066496	FRAME MECHANICAL CENTRAL SEED ROW		01
02	0511059334	BEARING WITH LONG FRONT AXLE	224	01

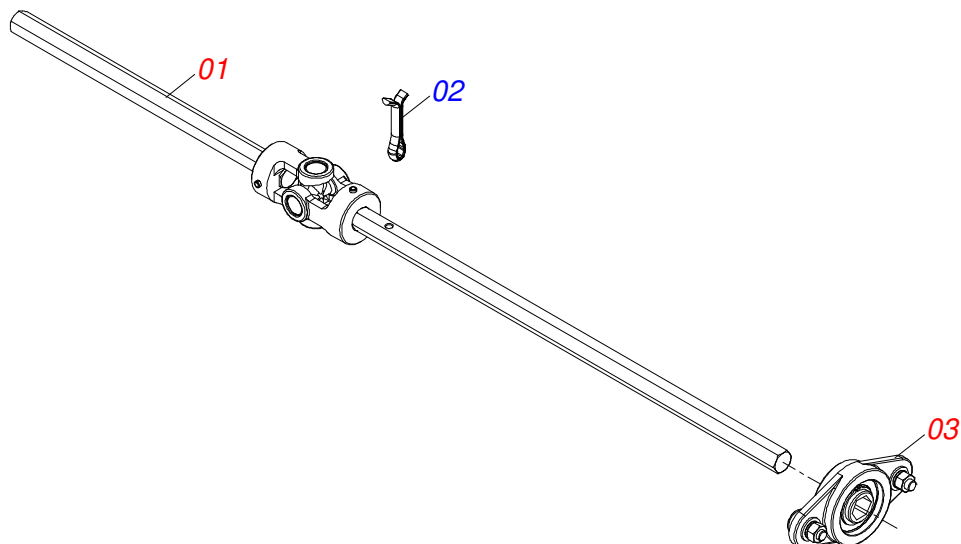


Item	Code	Description	See page	QT
01	0511058143	UNIVERSAL JOINT AXLE	225	01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0521055227	BEARING SHAFT HEX	226	01

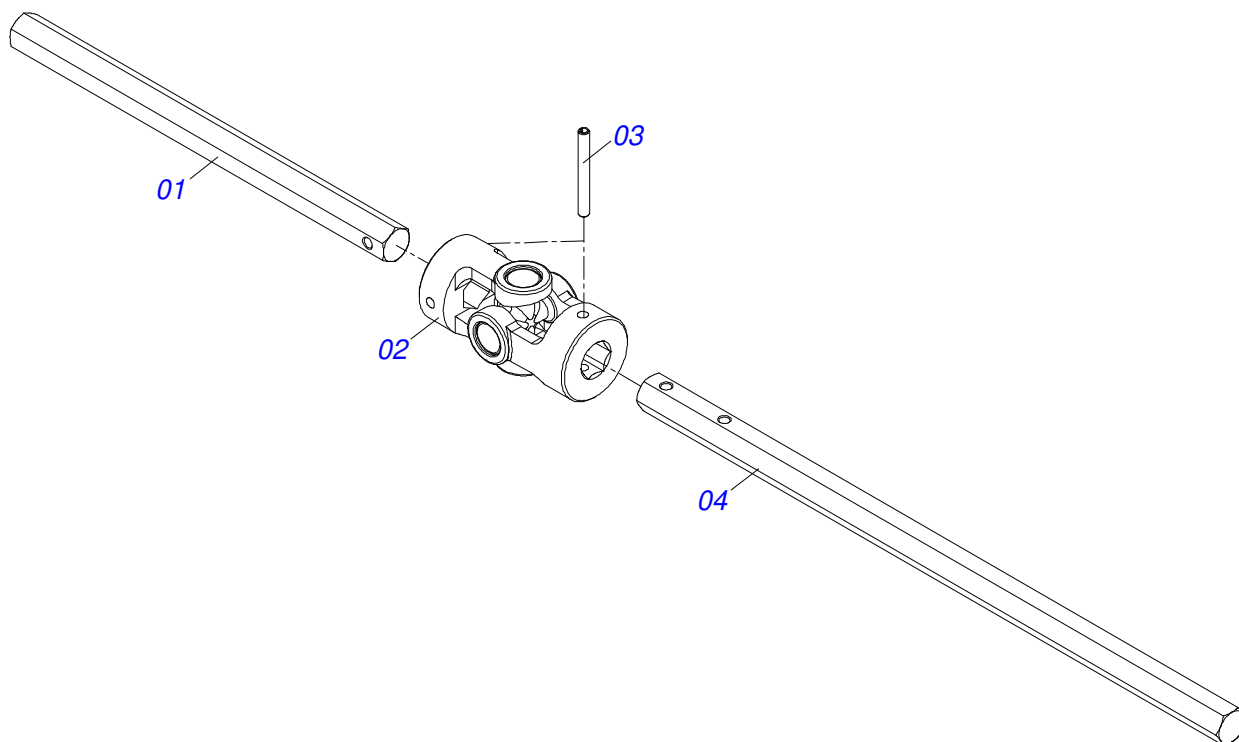


Item	Code	Description	See page	QT
01	0561014794	350 AXLE HEX		01
02	0501056296	UNIVERSAL JOINT		01
03	0503011855	0.2" X 1.8" SPRING PIN		02
04	0581010483	HEX AXLE		01

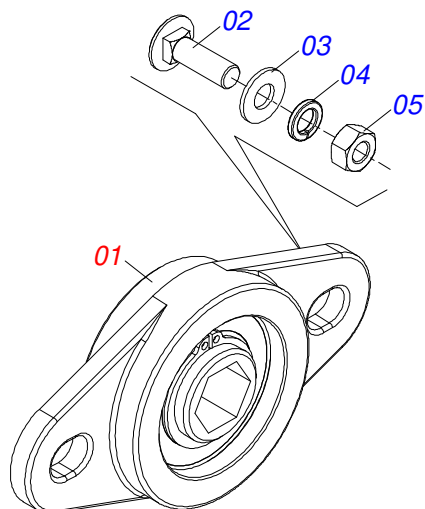


Item	Code	Description	See page	QT
01	0501059363	5/8" HEX AXLE BEARING	222	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

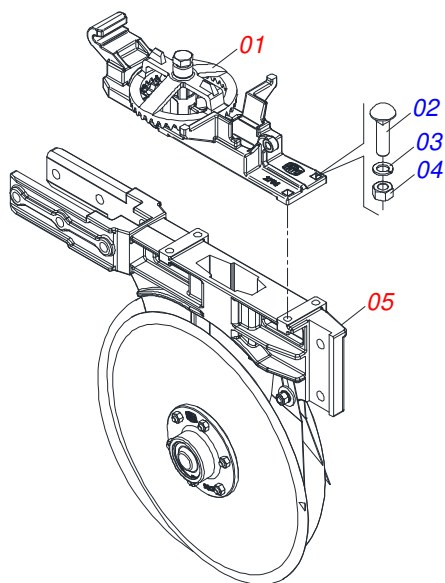


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0511056586	15 X 15 SEED DDD LEFT	228	01

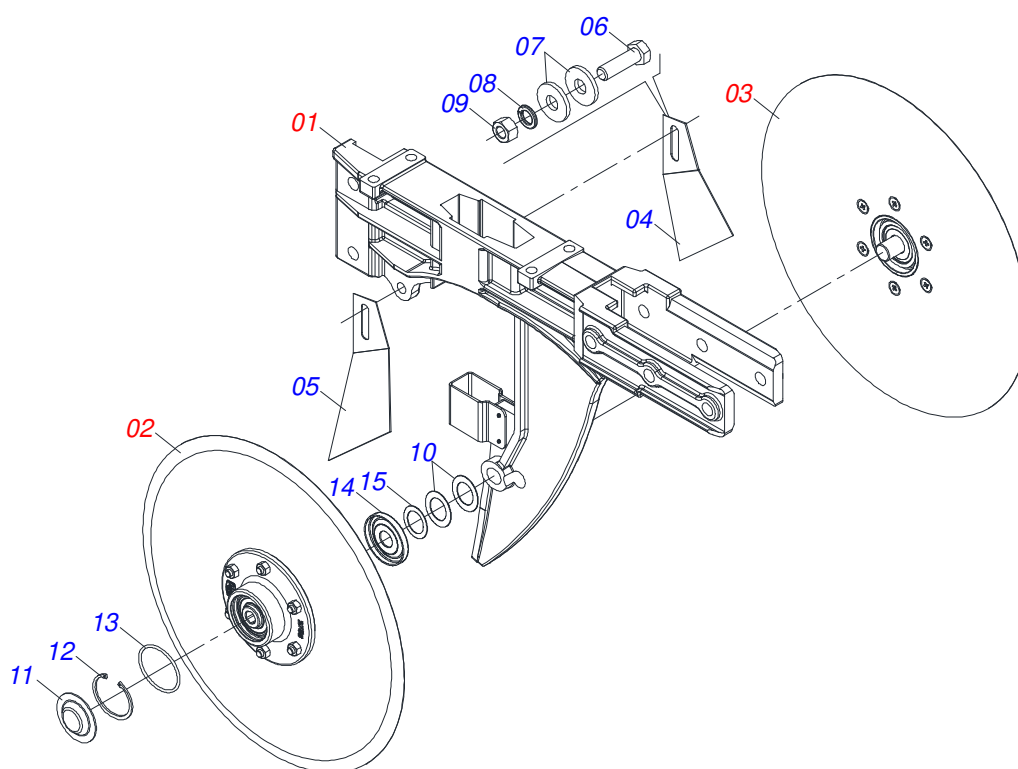


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE	229	01
02	0511053173	RIGHT LOW HUB WITH 15 DISC	230	01
03	0511053172	LEFT LOW HUB WITH 15 DISC	231	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
08	0503010025	3/8 SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511815098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O'RING		02
14	0511011927	DUST CLOAK		02
15	0591014250	19 X 26 X 0,50 FLAT WASHER		02

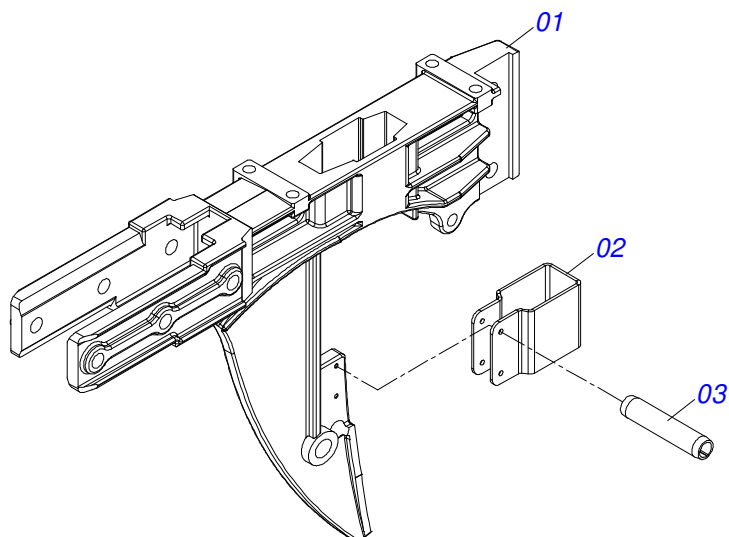


Item	Code	Description	See page	QT
01	0561015592	LEFT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

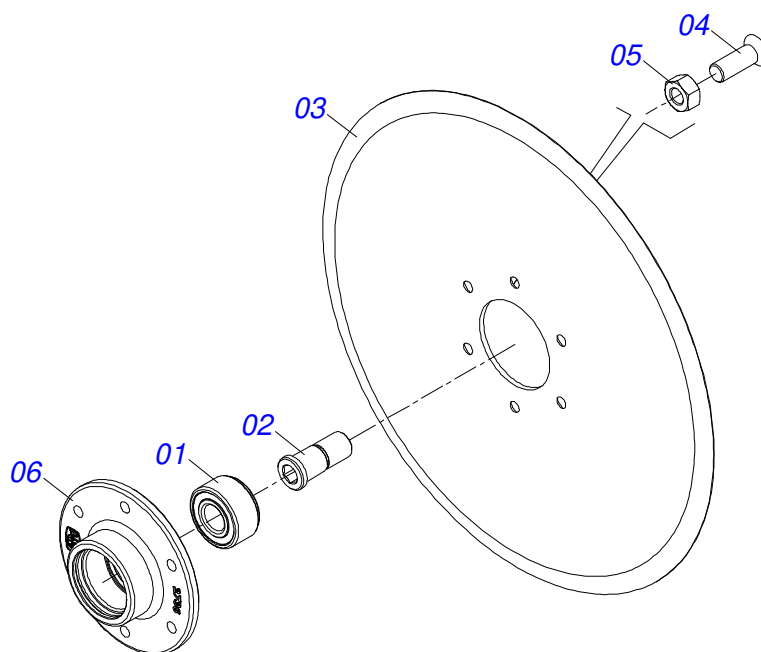


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

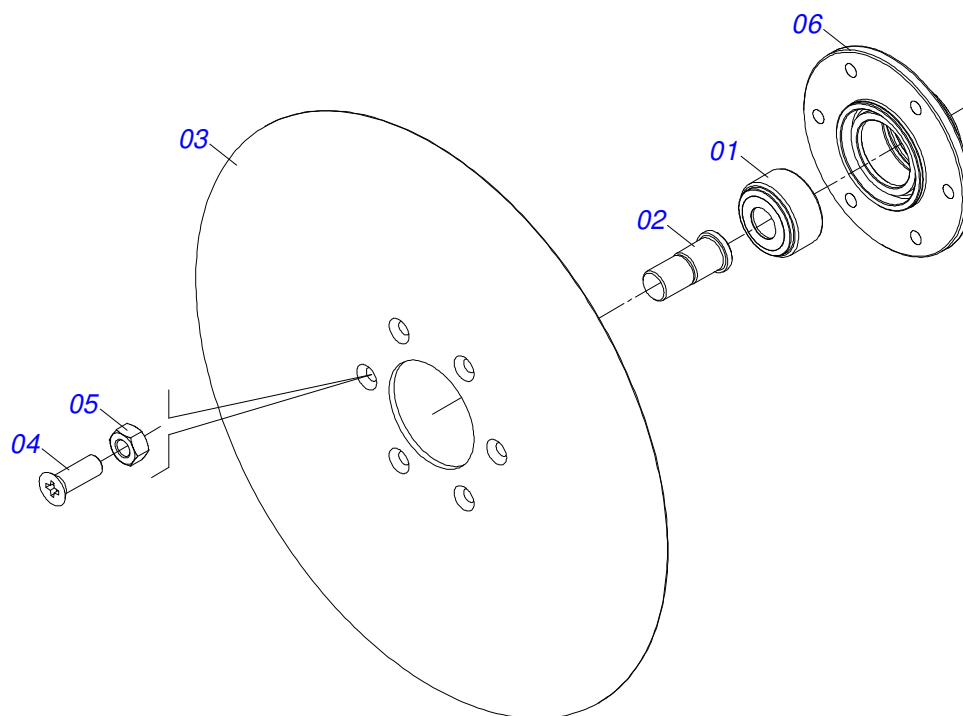


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

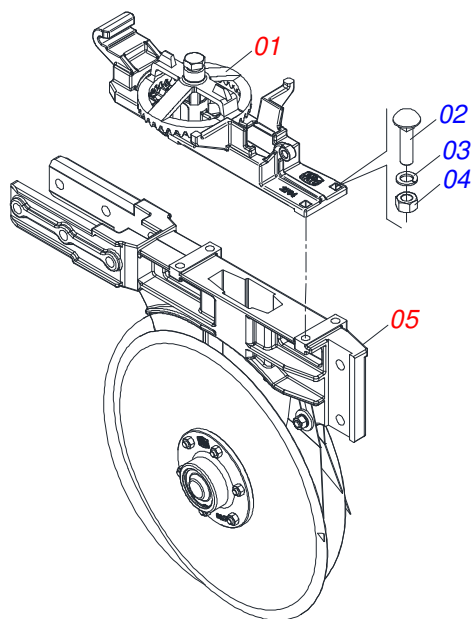


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	233	01

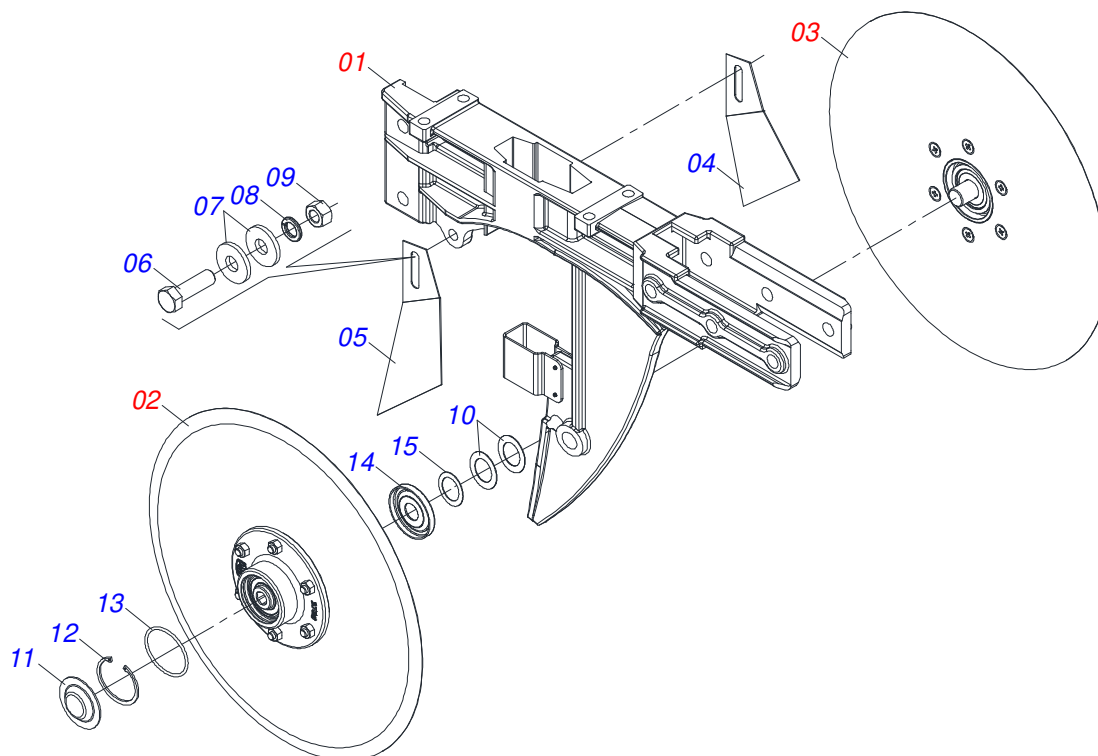


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT	234	01
02	0511053173	RIGHT LOW HUB WITH 15 DISC	230	01
03	0511053172	LEFT LOW HUB WITH 15 DISC	231	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
08	0503010025	3/8 SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511815098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O'RING		02
14	0511011927	DUST CLOAK		02
15	0591014250	19 X 26 X 0,50 FLAT WASHER		02

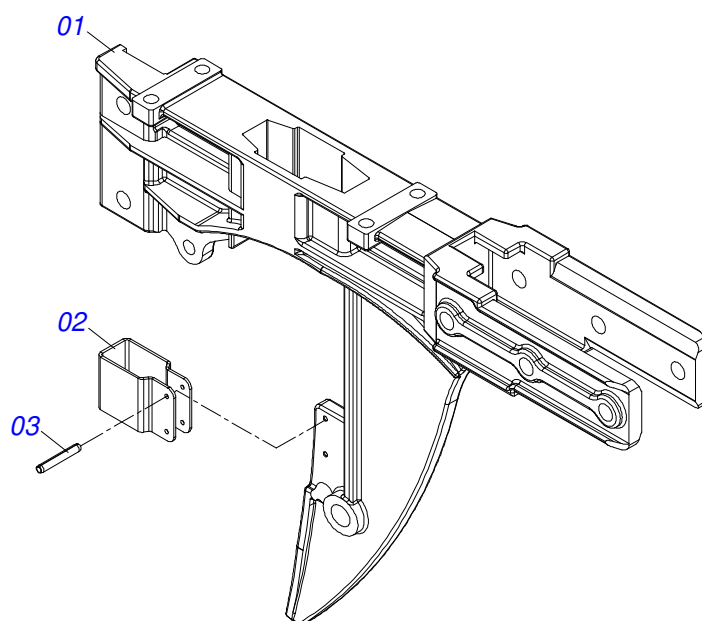


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

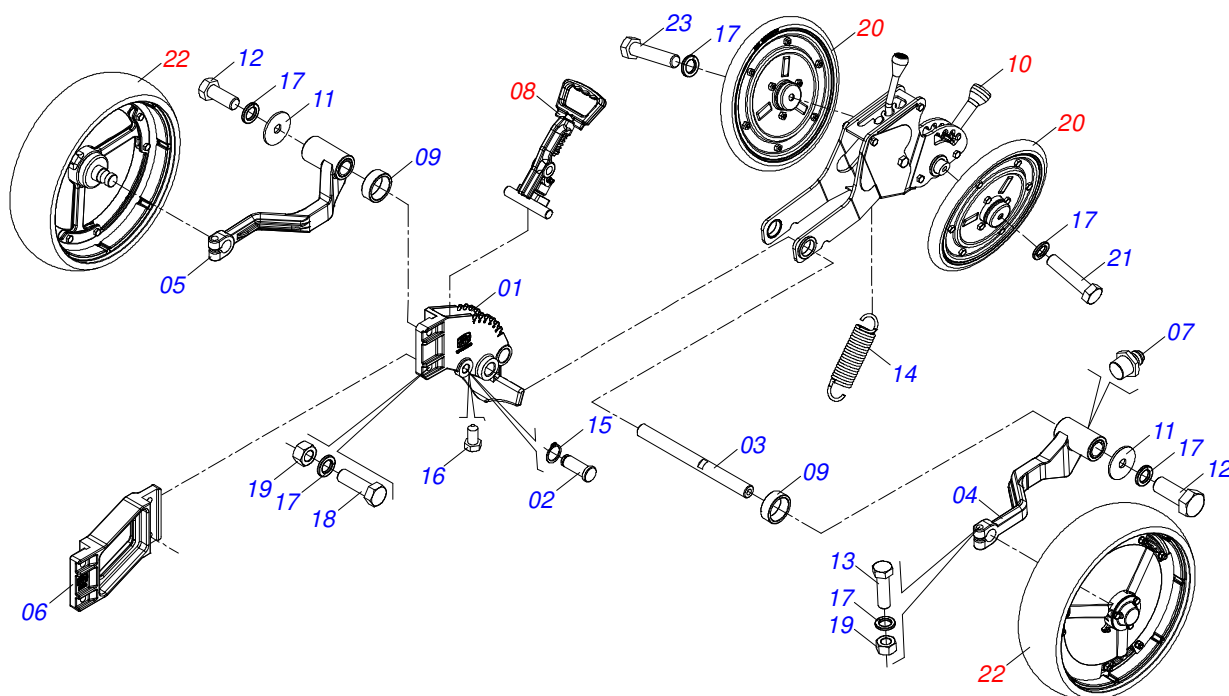


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0581014858	DEPTH WHEEL AXLE		01
04	0501110720	ARM LEFT		01
05	0501110719	DEPTH CONTROL RIGHT ARM		01
06	0502012663	EXTENSION		01
07	0503010002	1800 GREASE FITTING		02
08	0501056769	DEPTH WHEELS REGULATOR ASSY	236	01
09	0503034793	ARTICULATION SLEEVE		02
10	0521051423	COMPACTOR SUPPORT	237	01
11	0571017749	FLAT WASHER		02
12	0503010311	1/2" X 1-1/4" BOLT		02
13	0503016453	1/2" X 2.1/2 BOLT		02
14	0503034817	SPRING		01
15	0503010581	RING		01
16	0503034377	3/8 UNC X 3/4 BOLT		01
17	0503010019	1/2" SPRING WASHER		08
18	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
19	0503010060	1/2 UNC G.5 ZN HEX NUT		04
20	0501052908	COMPACTOR WHEEL WITH BEARING	238	02
21	0503013739	1/2" X 1" BOLT		01
22	0511050077	WHEEL STRIPED	239	02
23	0503010752	1/2" X 3.1/2" BOLT		01

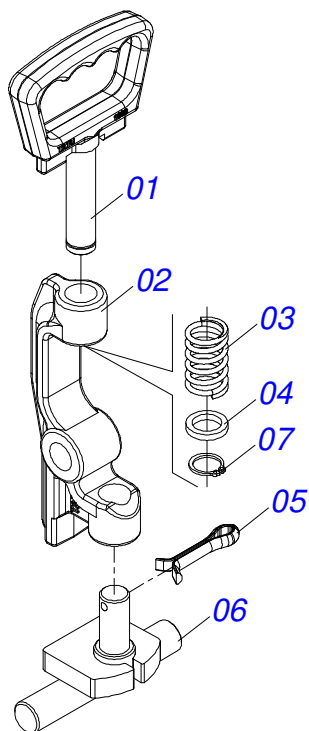


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

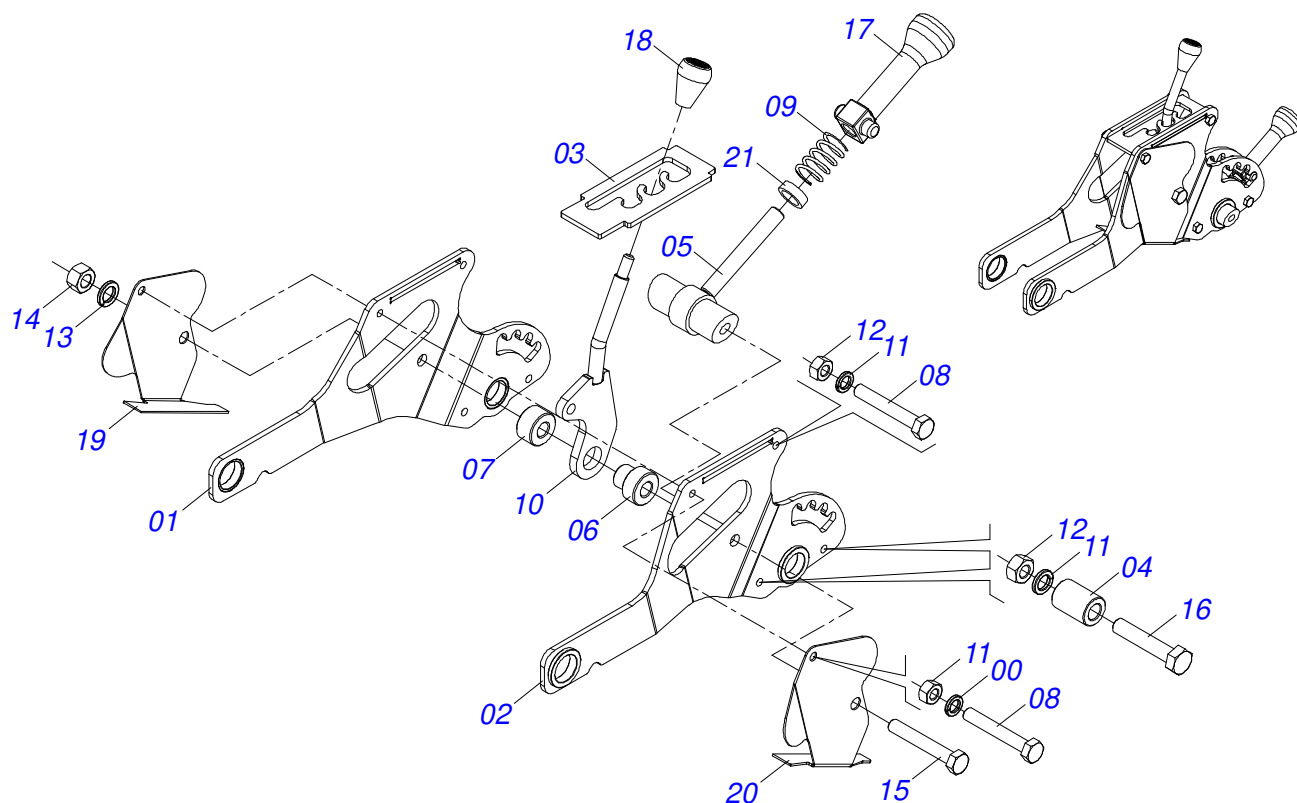


Item	Code	Description	See page	QT
01	0521068003	RIGHT SIDE		01
02	0521068002	LEFT SIDE		01
03	0581014847	PLATE UPPER		01
04	0581015855	SLEEVE		02
05	0521068004	HANDLE BODY		01
06	0581014969	GUIDE SLEEVE		01
07	0581014968	SLEEVE FLANGE		01
08	0503010937	5/16" X 3" BOLT		02
09	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
10	0521068005	LEVER		01
11	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
12	0503010337	5/16" NUT		04
13	0503010019	1/2" SPRING WASHER		01
14	0503010060	1/2 UNC G.5 ZN HEX NUT		01
15	0503010847	1/2" X 3.1/4" BOLT		01
16	0503010882	BOLT		02
17	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
18	0503030878	LEVER CRANK		01
19	0581015854	RIGHT PROTECTION COVER		01
20	0581015853	LEFT PROTECTION COVER		01
21	0581015903	SPACER WASHER		01

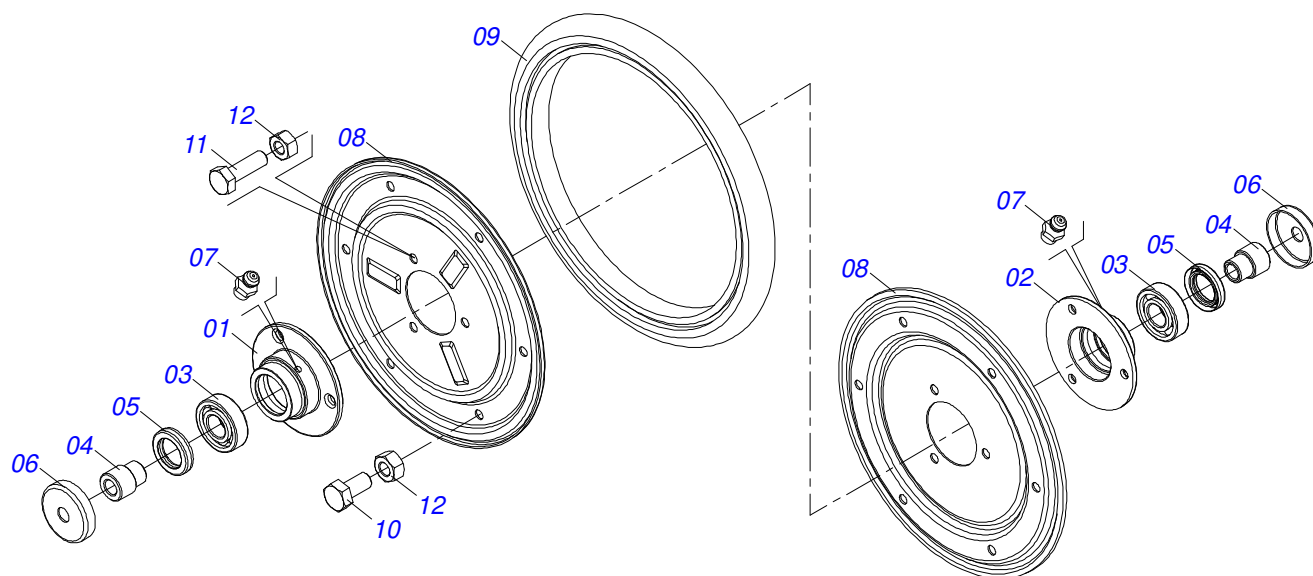


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

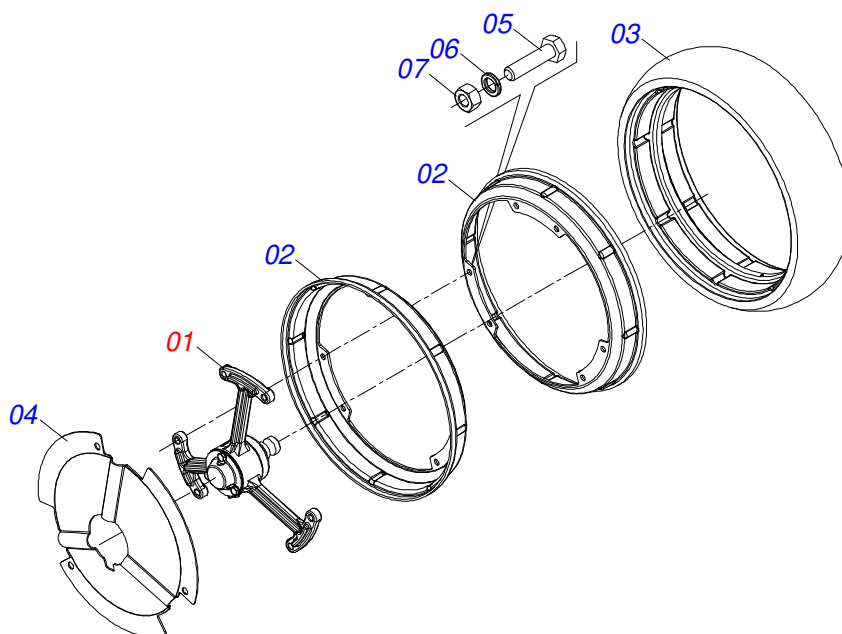


Item	Code	Description	See page	QT
01	0511052287	DEPTH WHEEL HUB ASSY	240	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
07	0503010337	5/16" NUT		06

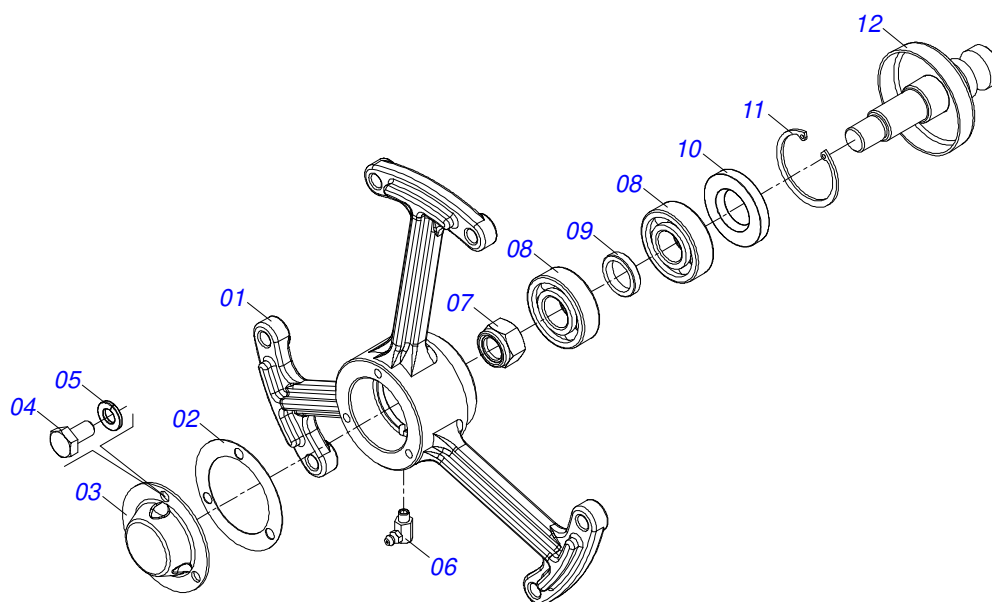


Item	Code	Description	See page	QT
01	0502011918	DEPHT WHEEL HUB		01
02	0503030757	2.9" X 2" X 0.02" JOINT		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503011098	1/4" GREASE FITTING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503010269	6204 BALL BEARING		02
09	0501013636	SPACING SLEEVE		01
10	0503010689	SEAL 00763-BR		01
11	0503011105	SEAL RING		01
12	0521063443	DEPTH CONTROL AXLE		01

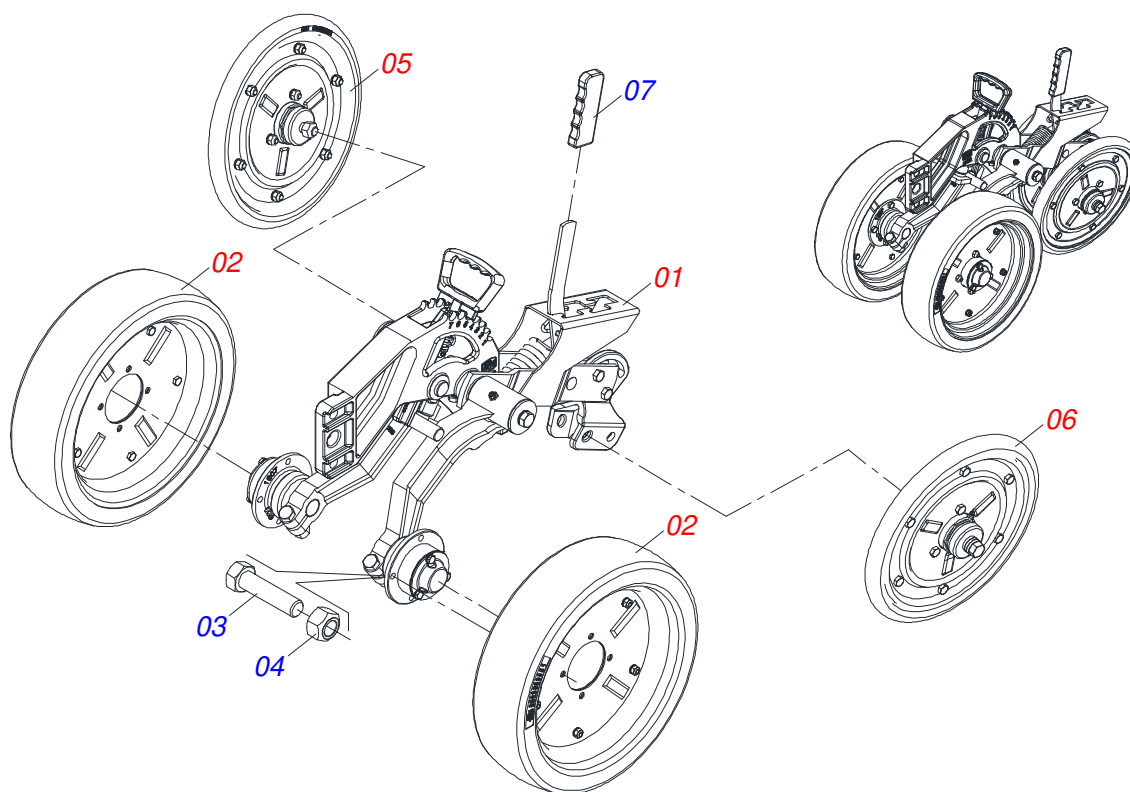


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	242	01
02	0501052538	DEPTH BAND WITH ARMS	247	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	248	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	249	01
07	0503033942	COMPACTOR WHEEL REGULATOR LID		01

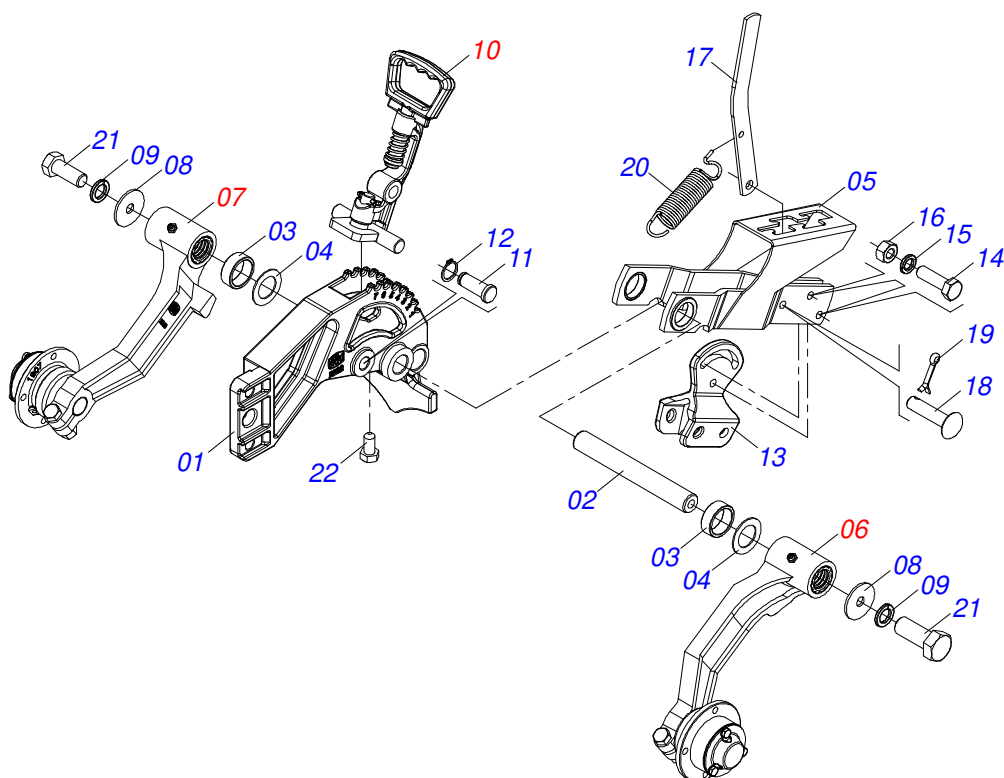


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT DEPTH WHEEL ARM WITH HUB	243	01
07	0511058651	RIGHT DEPTH WHEEL ARM WITH HUB	244	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	246	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	3/8 UNC X 3/4 BOLT		01

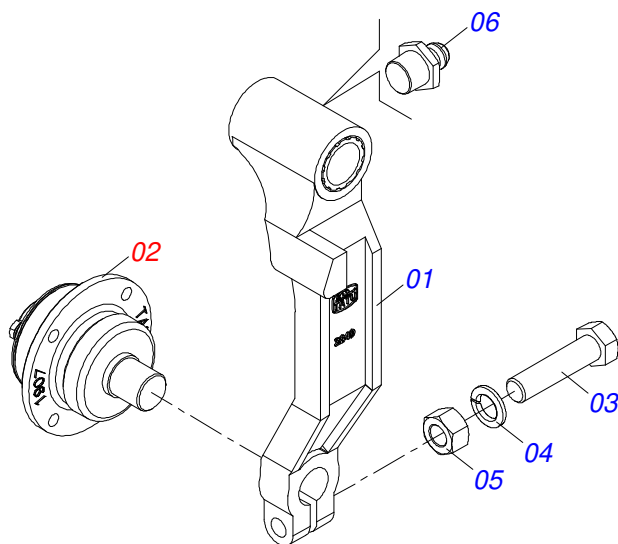


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL HUB	245	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0503010002	1800 GREASE FITTING		01

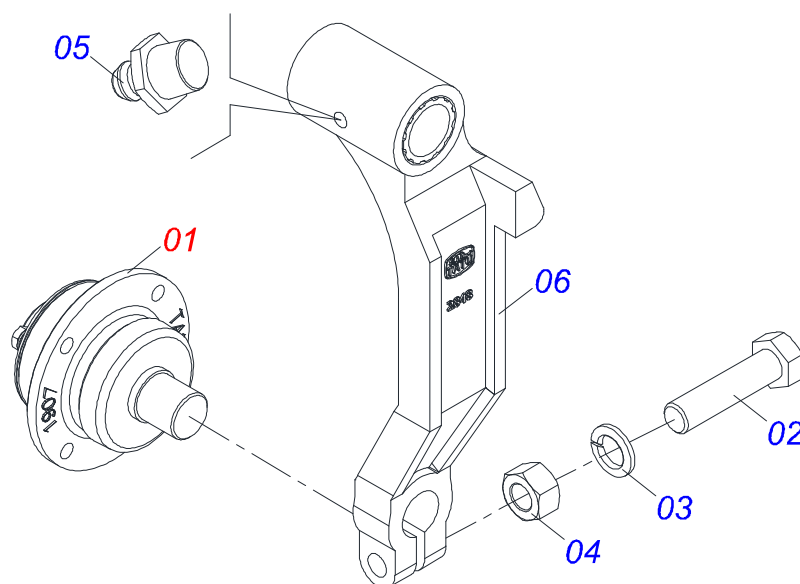


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL HUB	245	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

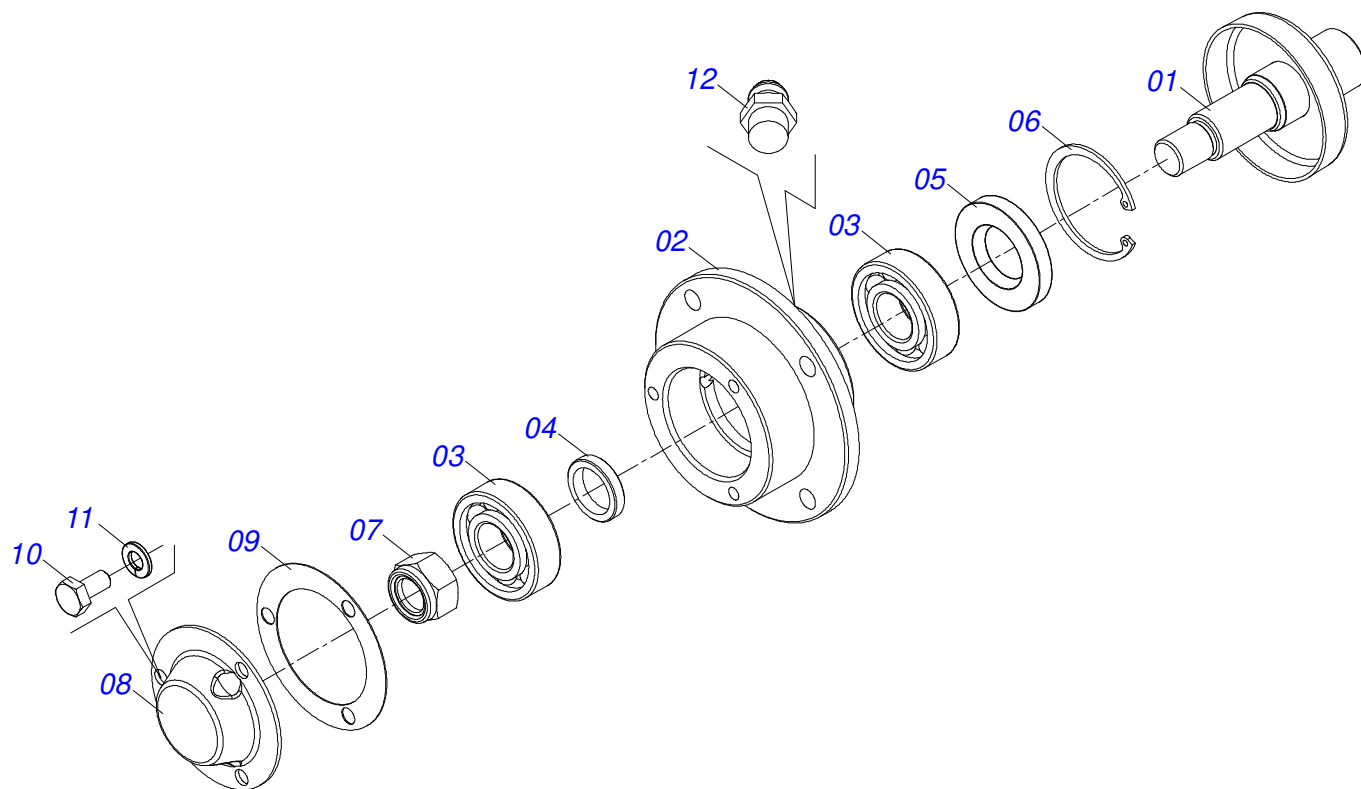


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	PROTECTION LID		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

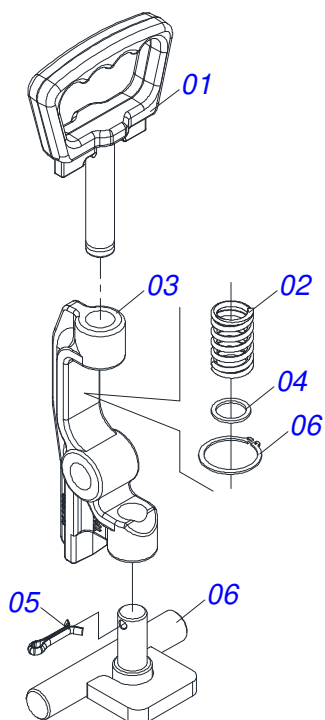


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	DEPTH CONTROL LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

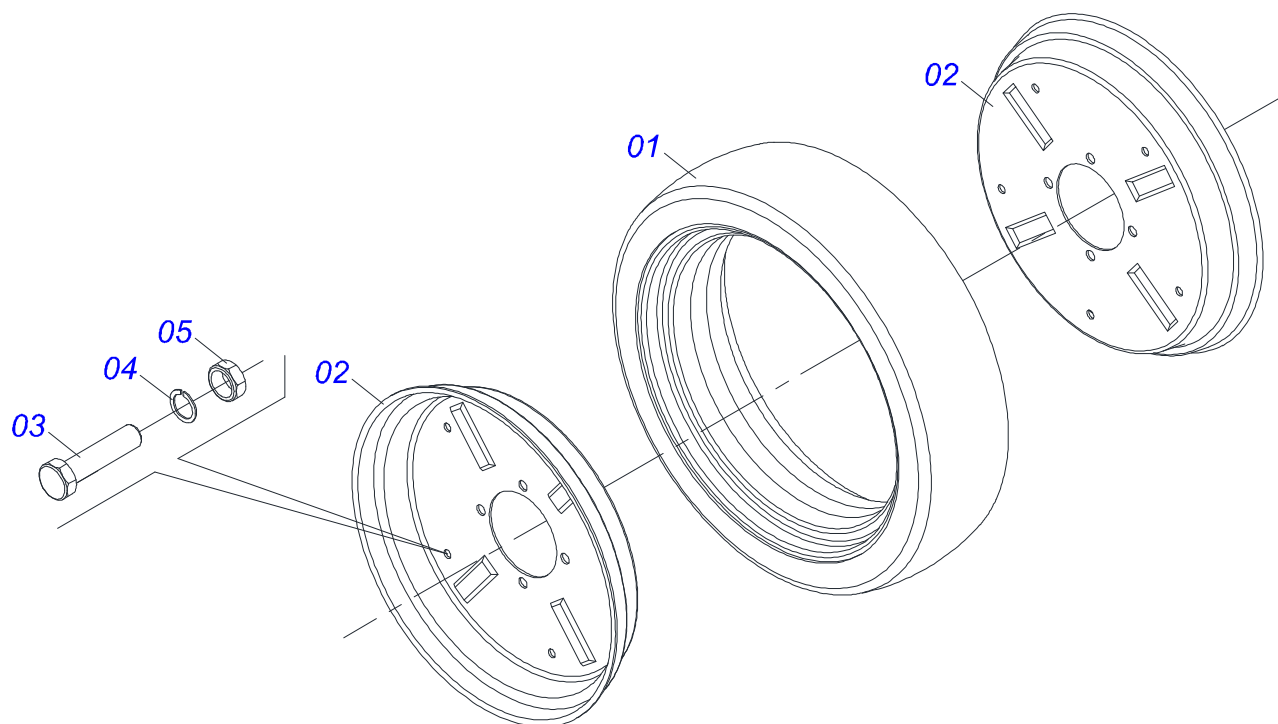


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

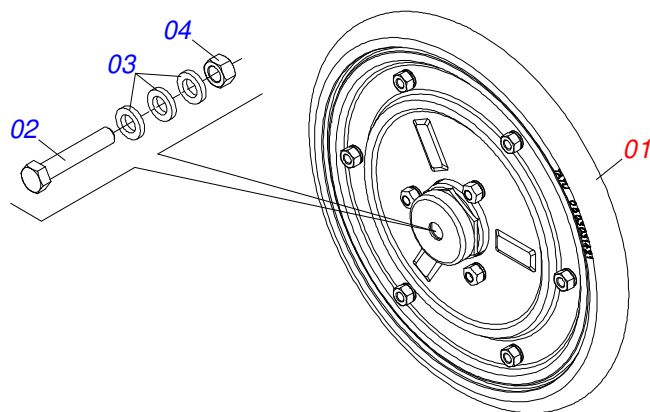


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	238	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

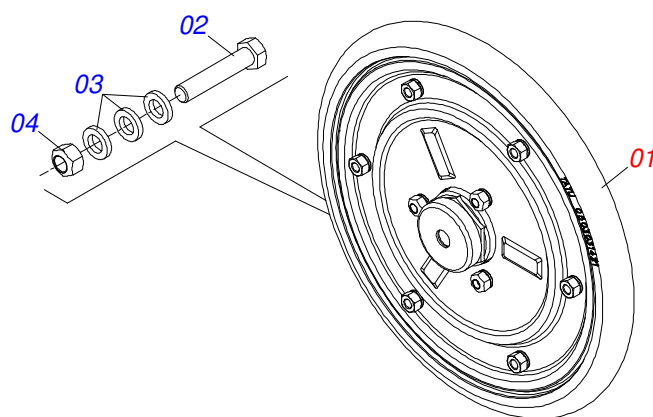


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	238	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

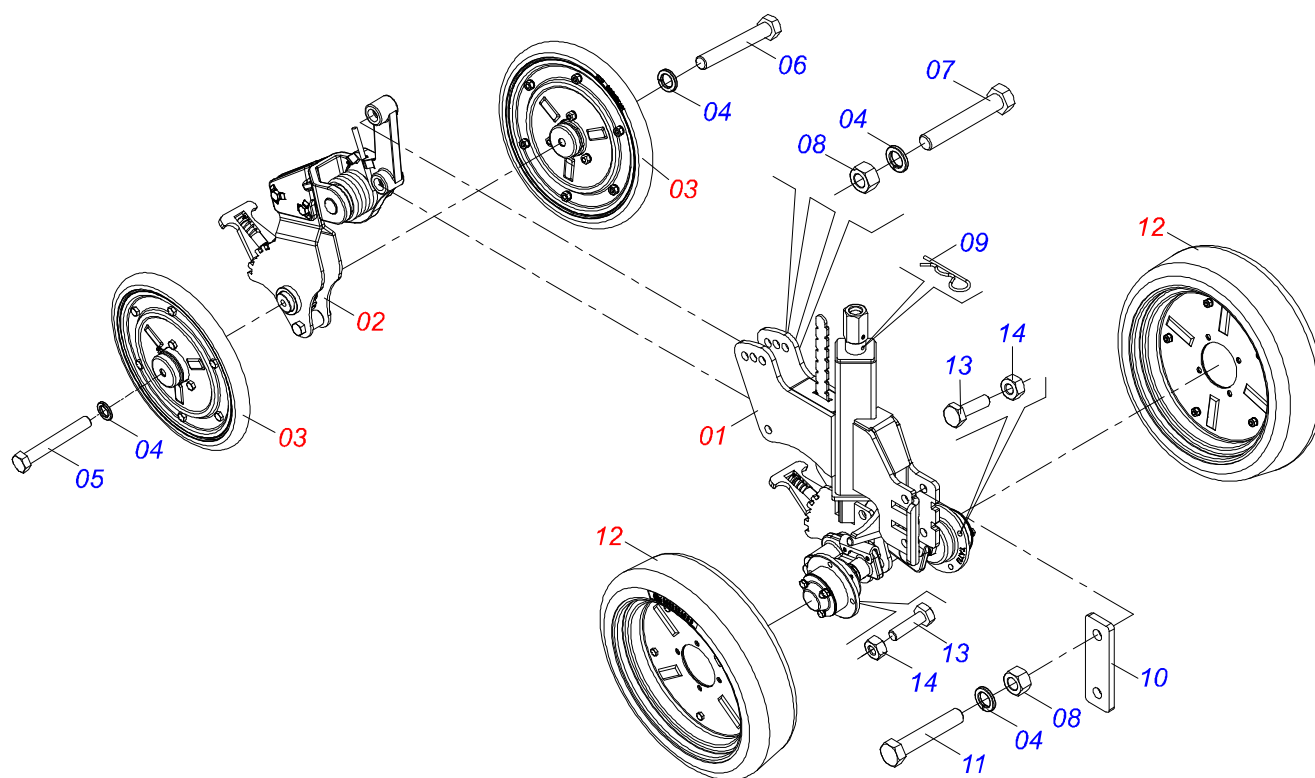


Item	Code	Description	See page	QT
01	0511052971	SEMI-ASSEMBLED DEPTH CONTROL WITH THREAD	251	01
02	0511052970	SYSTEM COMPACTOR V SEMI MOUNTED	257	01
03	0501052908	COMPACTOR WHEEL WITH BEARING	238	02
04	0503010019	1/2" SPRING WASHER		06
05	0503010752	1/2" X 3.1/2" BOLT		01
06	0503013739	1/2" X 1" BOLT		01
07	0503010479	BOLT		02
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503030012	HITCH PIN CLIP		01
10	0571013222	FIXING CHOCK		01
11	0503010741	1/2" X 2-3/4" BOLT		02
12	0511055819	DEPTH BAND WITH RIM	258	02
13	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		08
14	0503013816	5/16" LOCKNUT		08

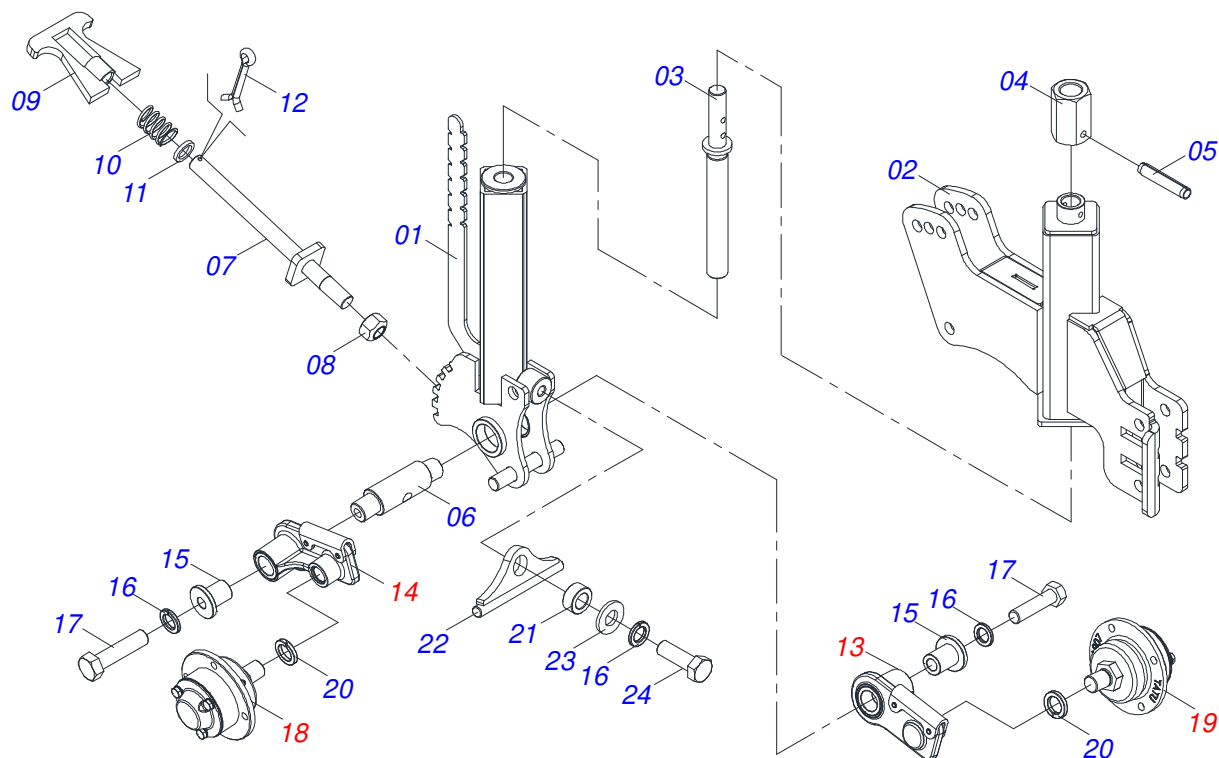


Item	Code	Description	See page	QT
01	0521063808	DEPTH CONTROL INNER COLUMN CONTROL WITH SCREW		01
02	0521063809	DEPTH CONTROL EXTERNAL COLUMN CONTROL WITH SCREW		01
03	0571013194	REGULATOR SPINDLE		01
04	0551010616	ROD HEX		01
05	0503010683	0,2" X 1,2" SPRING PIN		01
06	0571013202	COVERING WHEEL REGULATOR AXLE		01
07	0521063812	REGULATOR LEVER ALXE		01
08	0503011336	1/2" HEX SELF ADJUSTING NUT		01
09	0511065308	LOCK REGULATOR		01
10	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
11	0541011627	FLAT WASHER		01
12	0503010140	1/8" X 3/4" COTTERPIN		01
13	0511059325	LEFT ARM COVERED WHEEL ASSEMBLED	252	01
14	0511059324	RIGHT ARM COVERED WHEEL ASSEMBLED	253	01
15	0571014709	SLEEVE LOCK CONTROL ARM		02
16	0503011440	SPRING WASHER		03
17	0503819099	BOLT		02
18	0511051546	RIGHT DEPTH CONTROL HUB	254	01
19	0511051547	LEFT DEPTH CONTROL HUB	255	01
20	0503011442	3/4" SPRING WASHER		02
21	0571013189	SLEEVE SUPPORT BEATER		01
22	0521063813	WHEEL PRESS BEATER		01
23	0501010937	13,50 X 28 X 3,00 FLAT WASHER		01
24	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		01

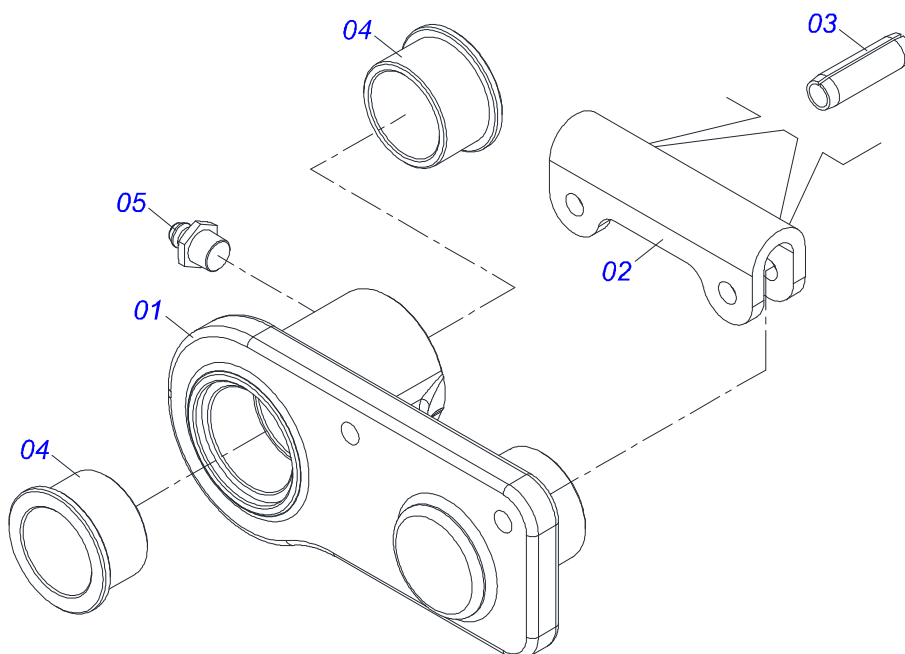


Item	Code	Description	See page	QT
01	0502012844	LEFT ARM WHEELS		01
02	0581011340	ARM CASE		01
03	0503011402	0.2" X 0.8" SPRING PIN		02
04	0503034383	COVERING WHEEL ARM SUPPORT SLEEVE		02
05	0503010002	1800 GREASE FITTING		01

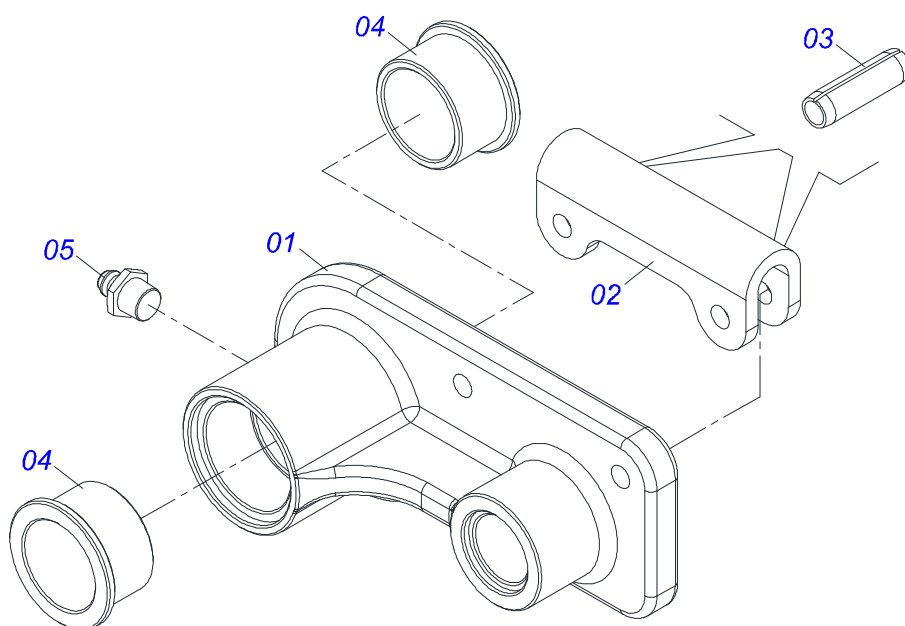


Item	Code	Description	See page	QT
01	0502012843	RIGHT WHEEL ARM		01
02	0581011340	ARM CASE		01
03	0503011402	0.2" X 0.8" SPRING PIN		02
04	0503034383	COVERING WHEEL ARM SUPPORT SLEEVE		02
05	0503010002	1800 GREASE FITTING		01

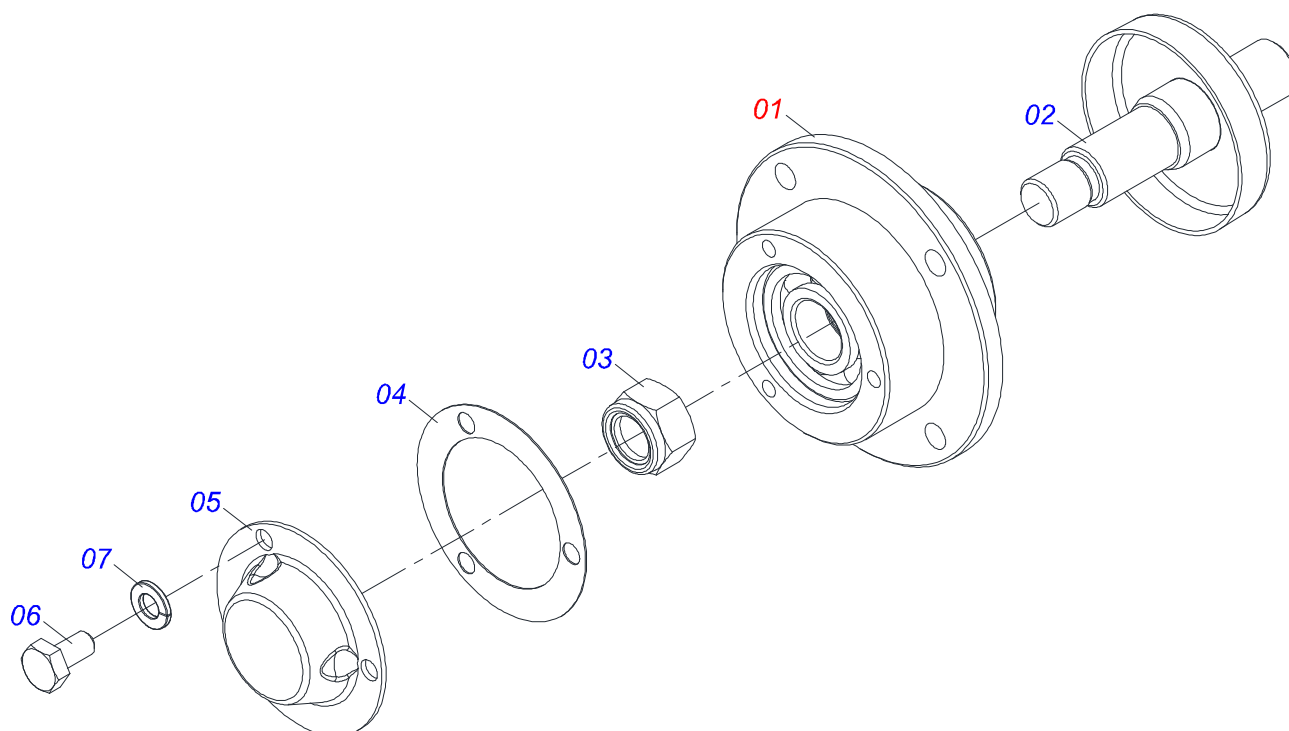


Item	Code	Description	See page	QT
01	0511051583	SEMI-ASSEMBLED DEPTH WHEEL HUB	256	01
02	0511066638	RIGHT AXLE WITH DUST CLOAK		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0503030757	2.9" X 2" X 0.02" JOINT		01
05	0521019178	PROTECTION LID		01
06	0503014729	1/4" UNF X 1/2" BOLT		03
07	0503011441	SPRING WASHER		03

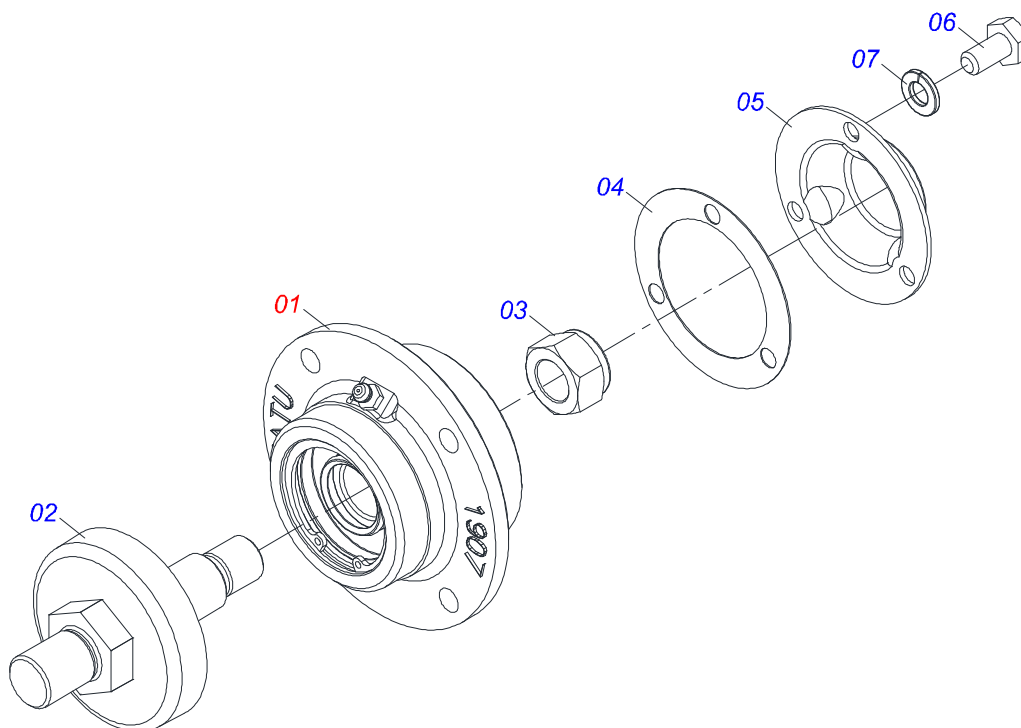


Item	Code	Description	See page	QT
01	0511051583	SEMI-ASSEMBLED DEPTH WHEEL HUB	256	01
02	0511066637	LEFT AXLE WITH DUST CLOAK		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0503030757	2.9" X 2" X 0.02" JOINT		01
05	0521019178	PROTECTION LID		01
06	0503014729	1/4" UNF X 1/2" BOLT		03
07	0503011441	SPRING WASHER		03

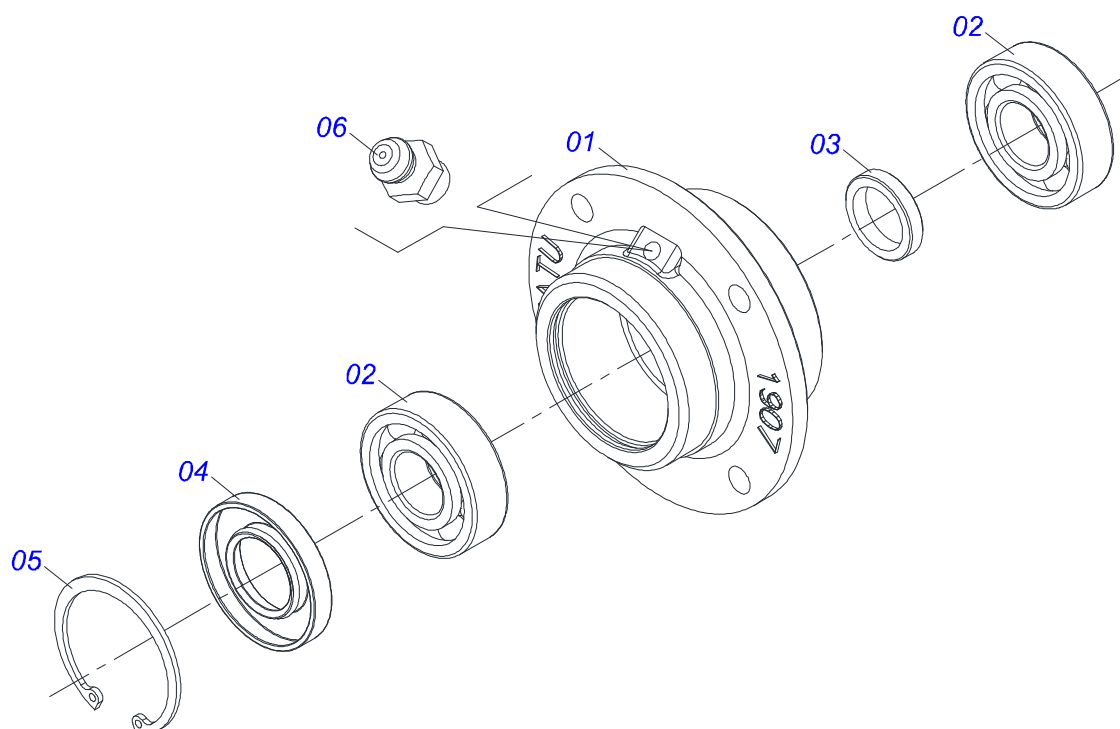


Item	Code	Description	See page	QT
01	0502011907	DEPTH CONTROL WHEEL HUB		01
02	0503010269	6204 BALL BEARING		02
03	0501013636	SPACING SLEEVE		01
04	0503010689	SEAL 00763-BR		01
05	0503011105	SEAL RING		01
06	0503010691	1/4" GREASE FITTING		01

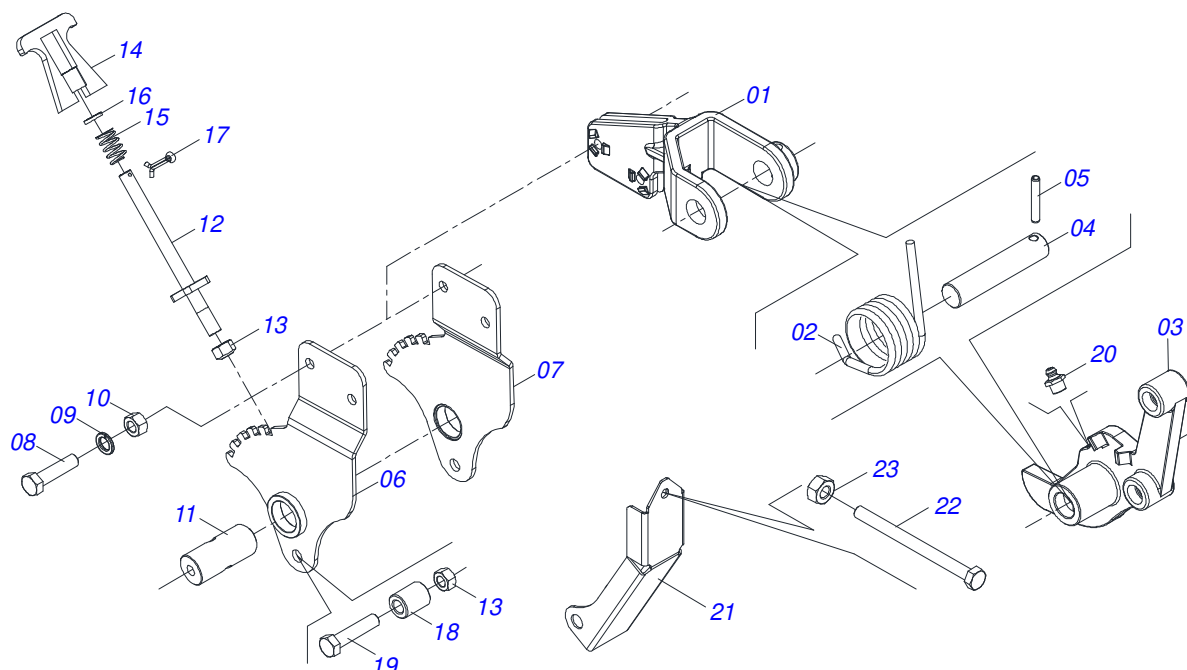


Item	Code	Description	See page	QT
01	0502012850	PRESS WHEELS ARM		01
02	0503030883	RIGHT TORSION SPRING		01
03	0502011066	PRESS WHEELS ARM SUPPORT		01
04	0531017415	1" X 4.72" AXLE JOINT		01
05	0503010839	03"X 0.6" SPRING PIN		01
06	0521063841	REGULATOR RIGHT COMPACTOR		01
07	0521063842	REGULATOR LEFT COMPACTOR		01
08	0503811404	BOLT		02
09	0503011443	3/8" SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0571013295	ALXE REGULATOR COMPACTOR		01
12	0521063812	REGULATOR LEVER ALXE		01
13	0503011336	1/2" HEX SELF ADJUSTING NUT		02
14	0511065308	LOCK REGULATOR		01
15	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
16	0541011627	FLAT WASHER		01
17	0503010140	1/8" X 3/4" COTTERPIN		01
18	0571013293	SLEEVE LOCK COMPACTOR V CONTROL WITH SCREW		01
19	0503811172	BOLT		01
20	0503010002	1800 GREASE FITTING		01
21	0581013744	PROTECTION CASE		01
22	0503813096	BOLT		01
23	0503013816	5/16" LOCKNUT		0

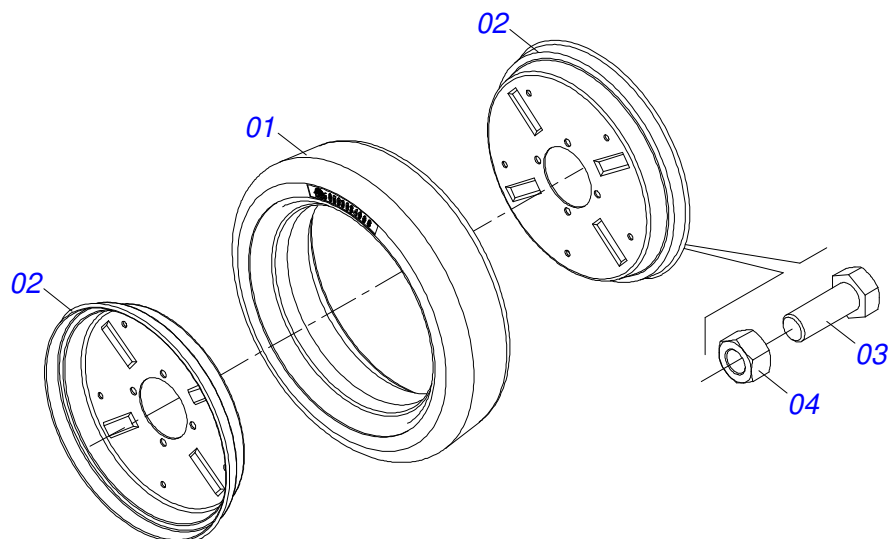


Item	Code	Description	See page	QT
01	0503034008	DEPTH CONTROL		01
02	0521010832	RIM FLANGE		02
03	0503013758	1/4" X 1-1/2" BOLT		05
04	0503013814	1/4" NC LOCKNUT		05

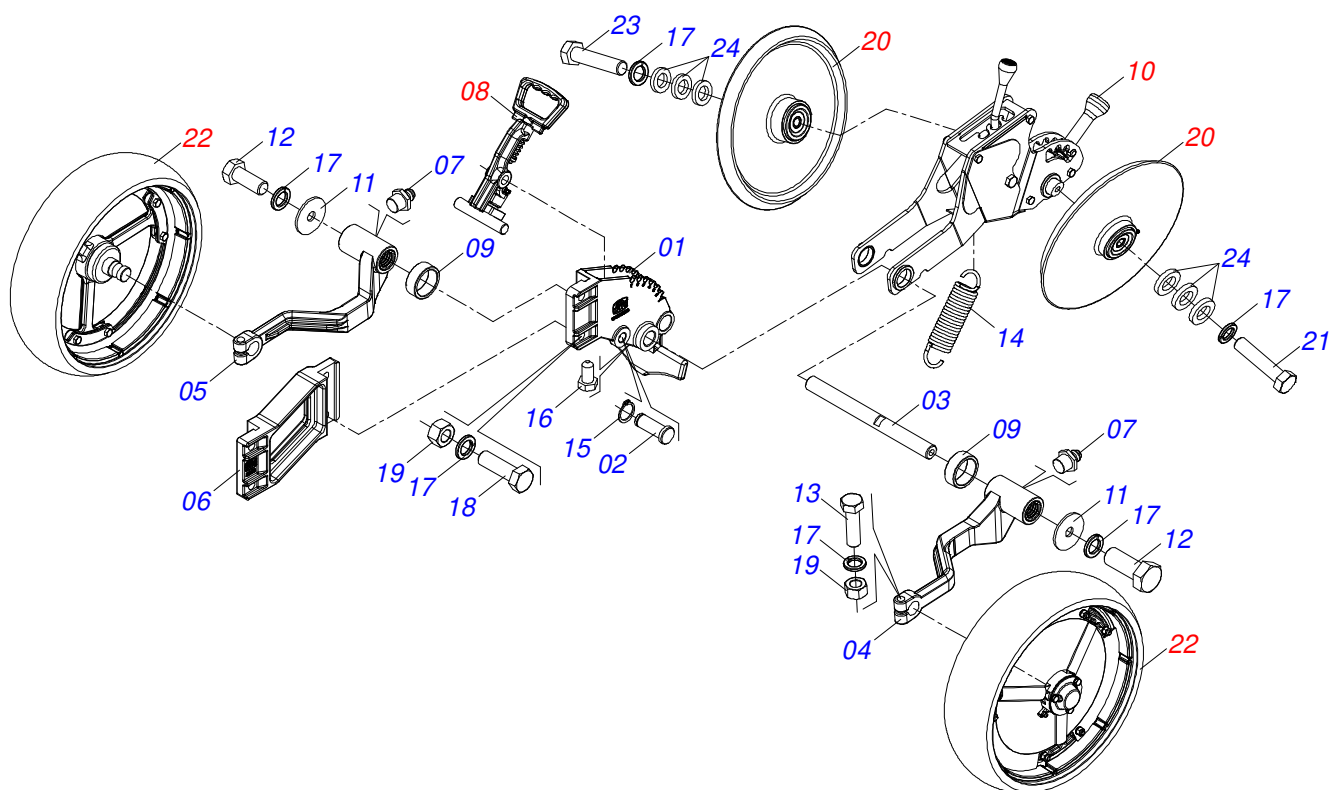


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0581014858	DEPTH WHEEL AXLE		01
04	0501110720	ARM LEFT		01
05	0501110719	DEPTH CONTROL RIGHT ARM		01
06	0502012663	EXTENSION		01
07	0503010002	1800 GREASE FITTING		02
08	0501056769	DEPTH WHEELS REGULATOR ASSY	236	01
09	0503034793	ARTICULATION SLEEVE		02
10	0521051423	COMPACTOR SUPPORT	237	01
11	0571017749	FLAT WASHER		02
12	0503010311	1/2" X 1-1/4" BOLT		02
13	0503016453	1/2" X 2.1/2 BOLT		02
14	0503034817	SPRING		01
15	0503010581	RING		01
16	0503034377	3/8 UNC X 3/4 BOLT		01
17	0503010019	1/2" SPRING WASHER		08
18	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
19	0503010060	1/2 UNC G.5 ZN HEX NUT		04
20	0501052957	IRON V PRESS WHEELS	260	02
21	0503013739	1/2" X 1" BOLT		01
22	0511050077	WHEEL STRIPED	239	02
23	0503010752	1/2" X 3.1/2" BOLT		01
24	0521014508	FLAT WASHER		06

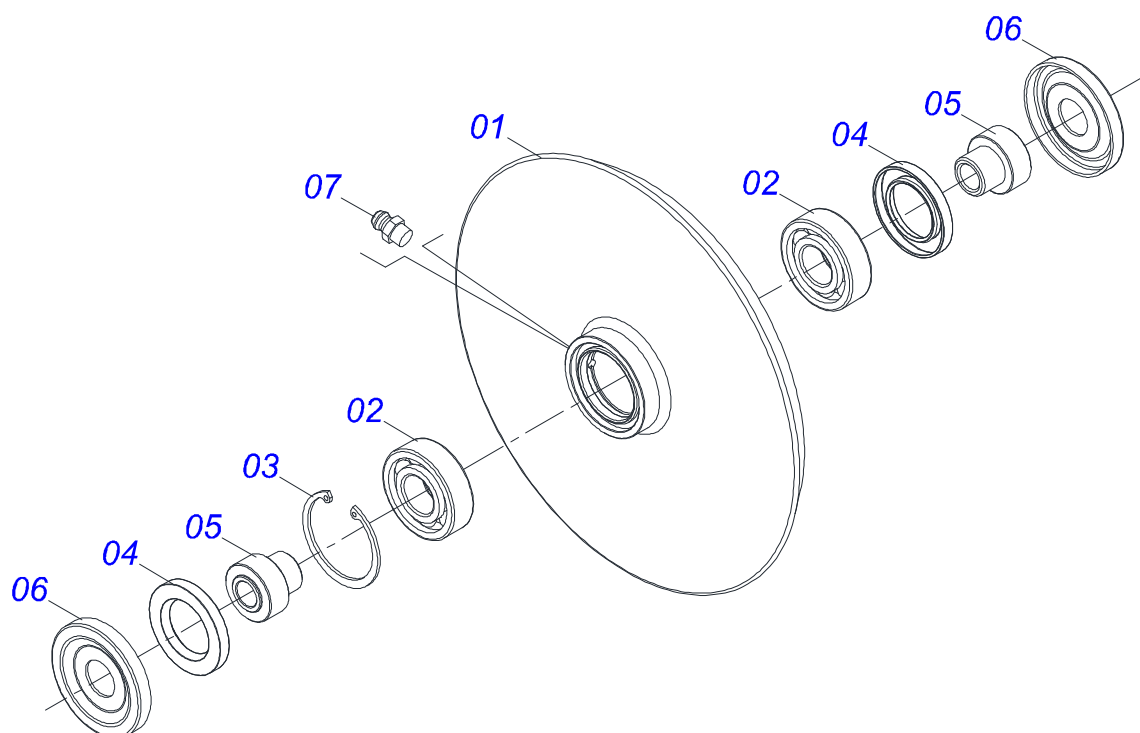


Item	Code	Description	See page	QT
01	0502011932	IRON PRESS WHEELS		01
02	0503010269	6204 BALL BEARING		02
03	0503011105	SEAL RING		01
04	0503013848	5072-BR SEAL		02
05	0521019147	V COMPACT WHEELS AXLE		02
06	0511011927	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01

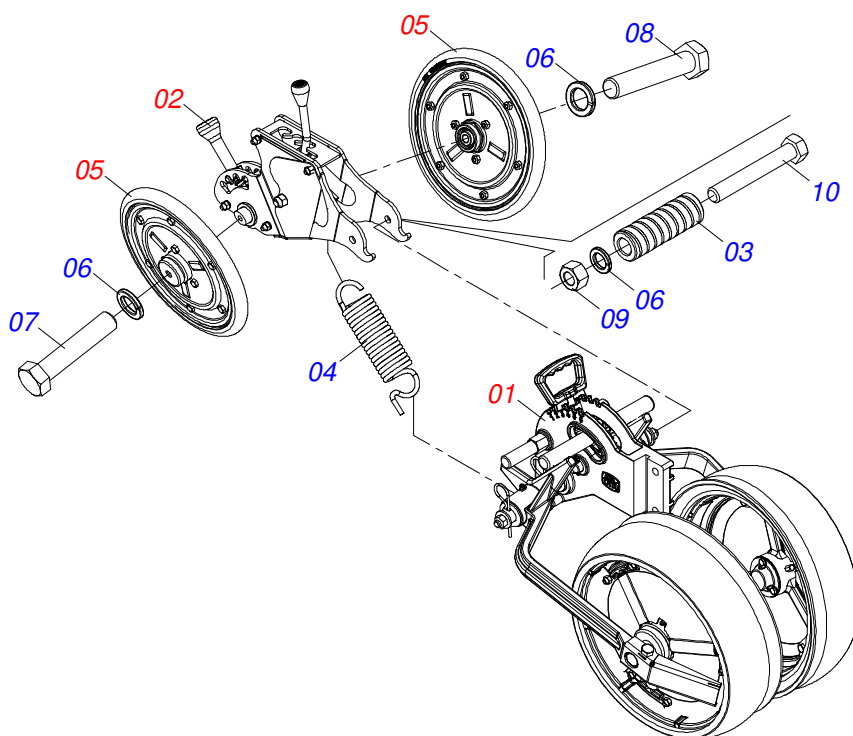


Item	Code	Description	See page	QT
01	0521053059	SYSTEM WHEELS CONTROL COMPACTOR ASSY	262	01
02	0521052825	SUPPORT WHEELS COMPACTORS	268	01
03	0551019650	SLEEVE 13,20 X 25 X 74		01
04	0503031393	1.57" X 5.98" X 0.2"TRACTION SPRING		01
05	0501052908	COMPACTOR WHEEL WITH BEARING	238	02
06	0503010019	1/2" SPRING WASHER		03
07	0503013739	1/2" X 1" BOLT		01
08	0503010752	1/2" X 3.1/2" BOLT		01
09	0503010060	1/2 UNC G.5 ZN HEX NUT		01
10	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01

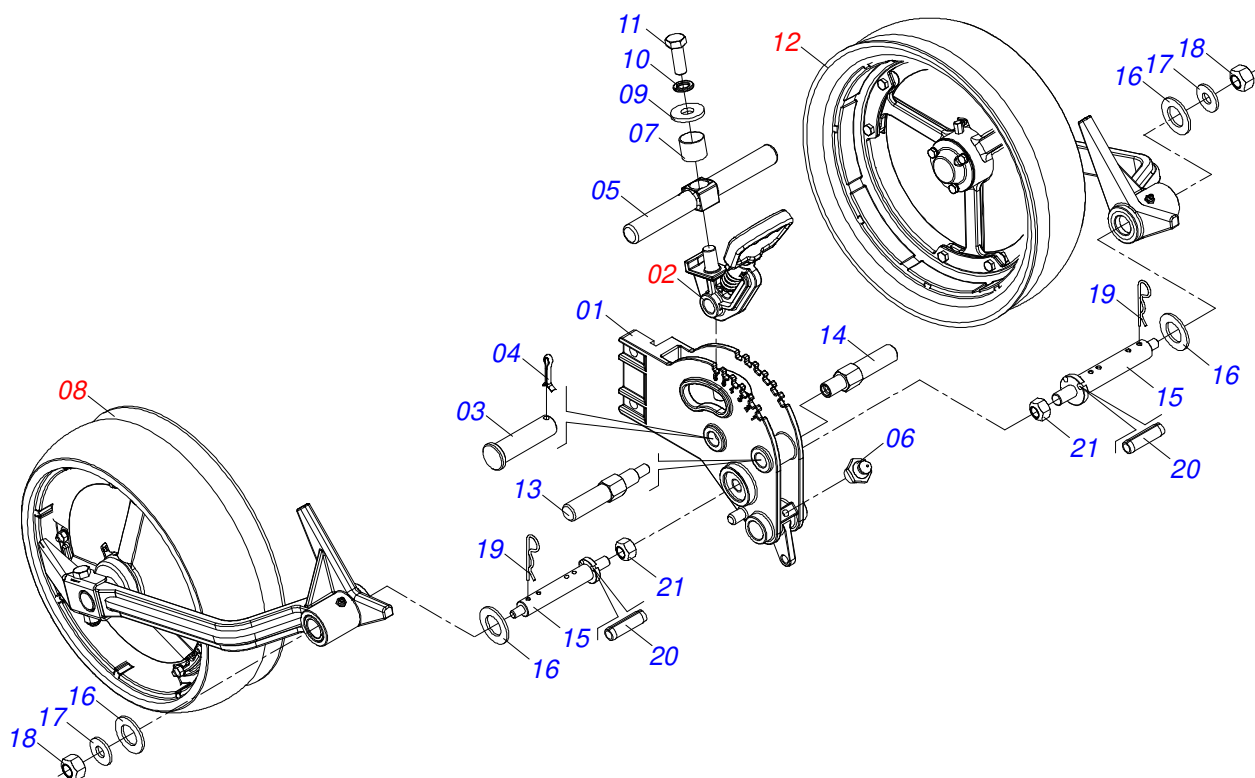


Item	Code	Description	See page	QT
01	0502012758	DEPTH CONTROL SUPPORT		01
02	0501059228	ADJUSTMENT LEVER	263	01
03	0571016132	PIVOT SHAFT		01
04	0503010071	3/16" X 1" COTTERPIN		01
05	0502012611	DEPTH CONTROL AXLE		01
06	0503010002	1800 GREASE FITTING		01
07	0571015326	ARTICULATION SLEEVE HANDLE		01
08	0521053060	DEPTH WHEEL RIGHT SPACRR CLOSED	264	01
09	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
10	0503011443	3/8" SPRING WASHER		01
11	0503010237	3/8" X 1" BOLT		01
12	0521053061	SPACRR LEFT DEPTH WHEEL CLOSED	265	01
13	0581017075	LARGER AXLE		01
14	0581017076	SMALLER AXLE		01
15	0581017077	CARRYING-WHEELS PIVOT SHAFT		02
16	0501011445	FLAT WASHER		04
17	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
18	0503011336	1/2" HEX SELF ADJUSTING NUT		02
19	0503030012	HITCH PIN CLIP		04
20	0503011402	0.2" X 0.8" SPRING PIN		02
21	0503012795	5/8" HEX SELF ADJUSTING NUT		02

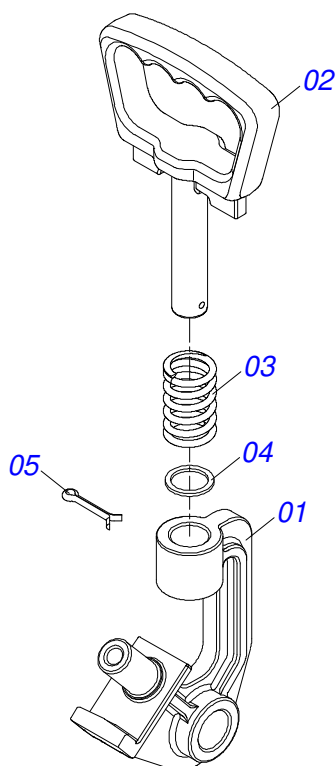


Item	Code	Description	See page	QT
01	0502012603	ADJUSTMENT LEVER		01
02	0502011689	1/8" DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0511015976	FLAT WASHER		01
05	0503010140	1/8" X 3/4" COTTERPIN		01

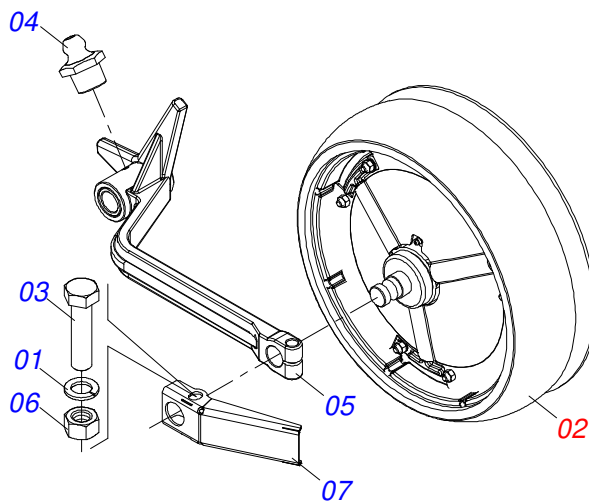


Item	Code	Description	See page	QT
01	0503010019	1/2" SPRING WASHER		01
02	0521053062	WHEEL RAYED ASSY (SPA) CLOSED	266	01
03	0503016453	1/2" X 2.1/2 BOLT		01
04	0503010002	1800 GREASE FITTING		01
05	0501110777	RIGHT WHEEL ARM		01
06	0503010028	1/2" NUT		01
07	0581018815	SET DEVIATION		01

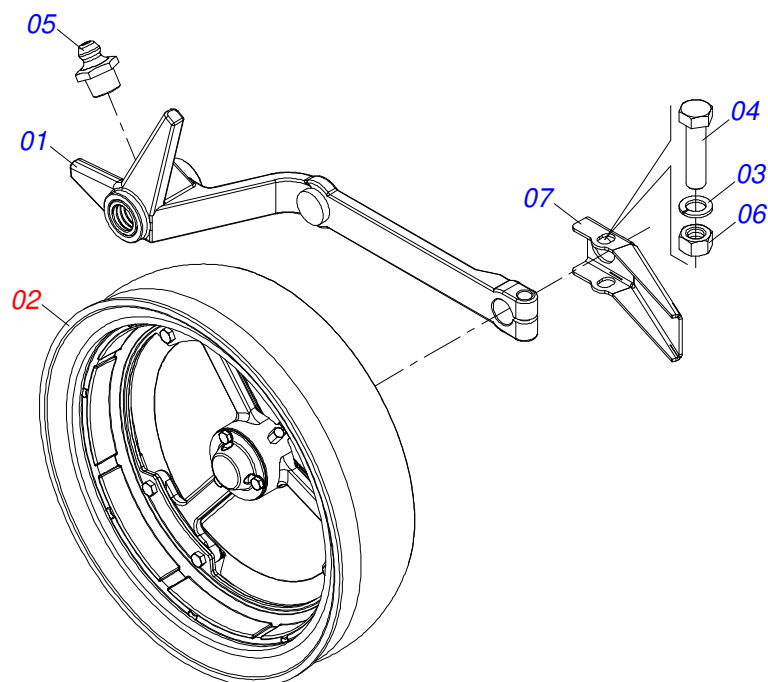


Item	Code	Description	See page	QT
01	0501110776	ARM,LEFT		01
02	0521053062	WHEEL RAYED ASSY (SPA) CLOSED	266	01
03	0503010019	1/2" SPRING WASHER		01
04	0503016453	1/2" X 2.1/2 BOLT		01
05	0503010002	1800 GREASE FITTING		01
06	0503010028	1/2" NUT		01
07	0581018815	SET DEVIATION		01

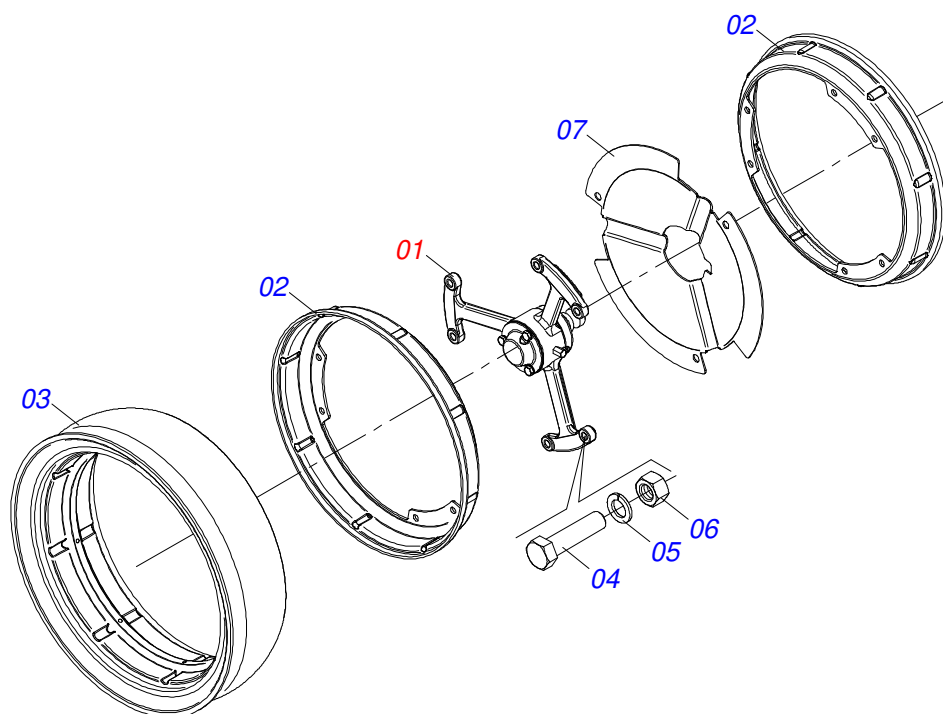


Item	Code	Description	See page	QT
01	0511055626	SPREADED DEPTH WHEEL HUB	267	01
02	0551019904	PRESS WHEEL RIM		02
03	0503030891	RUBBER BAND		01
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
06	0503010337	5/16" NUT		06
07	0561016889	STRIPED CAP WHEEL DEPTH		01

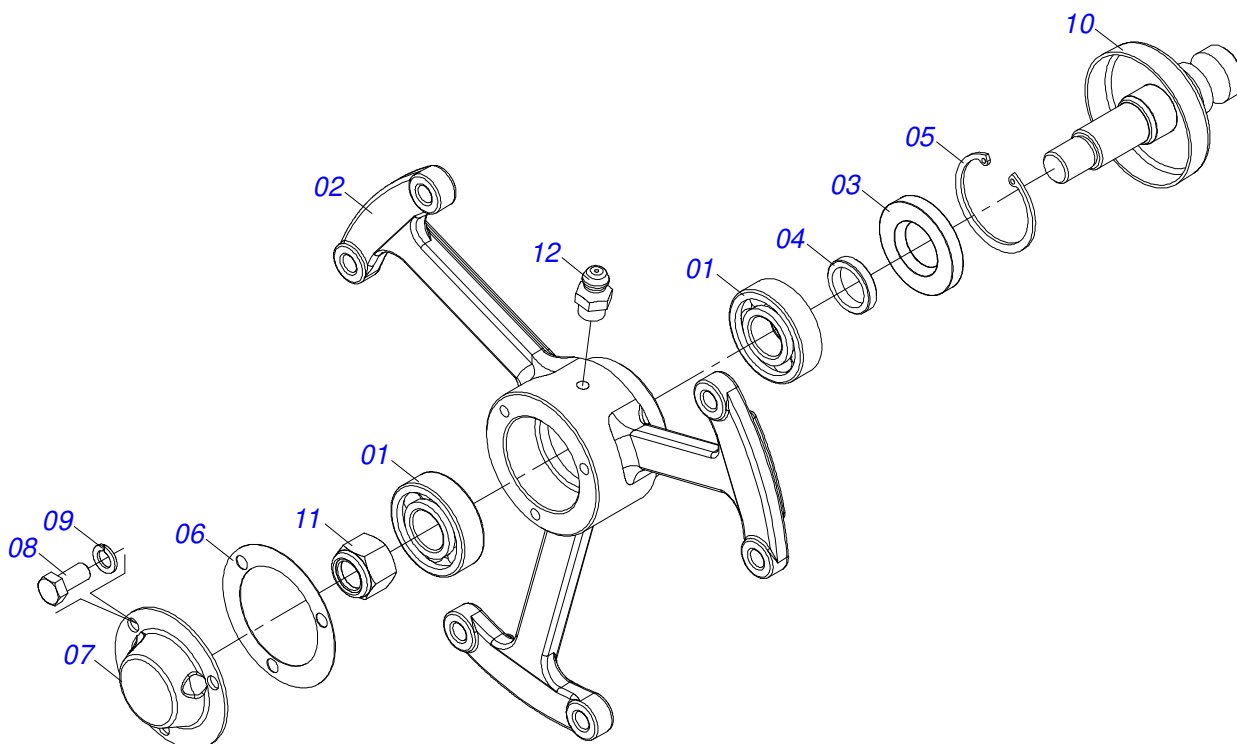


Item	Code	Description	See page	QT
01	0503010269	6204 BALL BEARING		02
02	0502012607	DEPTH SPREADED WHEEL HUB		01
03	0503010689	SEAL 00763-BR		01
04	0501013636	SPACING SLEEVE		01
05	0503011105	SEAL RING		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0521019178	PROTECTION LID		01
08	0503013758	1/4" X 1-1/2" BOLT		03
09	0503011441	SPRING WASHER		03
10	0521063443	DEPTH CONTROL AXLE		01
11	0503010811	5/8" UNF SELF ADJUSTING NUT		01
12	0503010691	1/4" GREASE FITTING		01

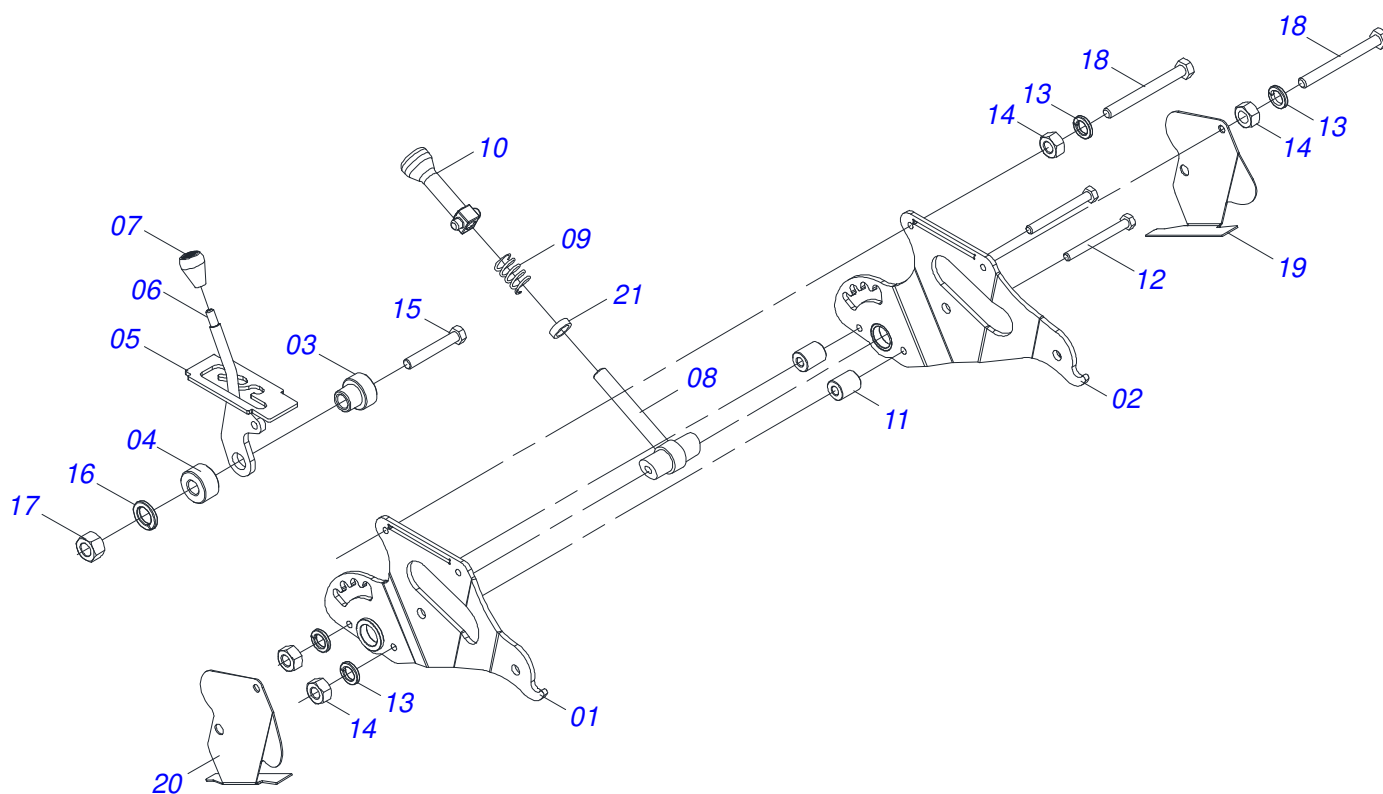


Item	Code	Description	See page	QT
01	0521068514	LEFT SIDE BASE		01
02	0521068660	RIGHT SIDE BASE		01
03	0581014969	GUIDE SLEEVE		01
04	0581014968	SLEEVE FLANGE		01
05	0581014847	PLATE UPPER		01
06	0521068661	LEVER		01
07	0503030878	LEVER CRANK		01
08	0521068004	HANDLE BODY		01
09	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
10	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
11	0581015855	SLEEVE		02
12	0503010882	BOLT		02
13	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
14	0503010337	5/16" NUT		04
15	0503010847	1/2" X 3.1/4" BOLT		01
16	0503010019	1/2" SPRING WASHER		01
17	0503010060	1/2 UNC G.5 ZN HEX NUT		01
18	0503010937	5/16" X 3" BOLT		02
19	0581015853	LEFT PROTECTION COVER		02
20	0581015854	RIGHT PROTECTION COVER		02
21	0581015903	SPACER WASHER		01

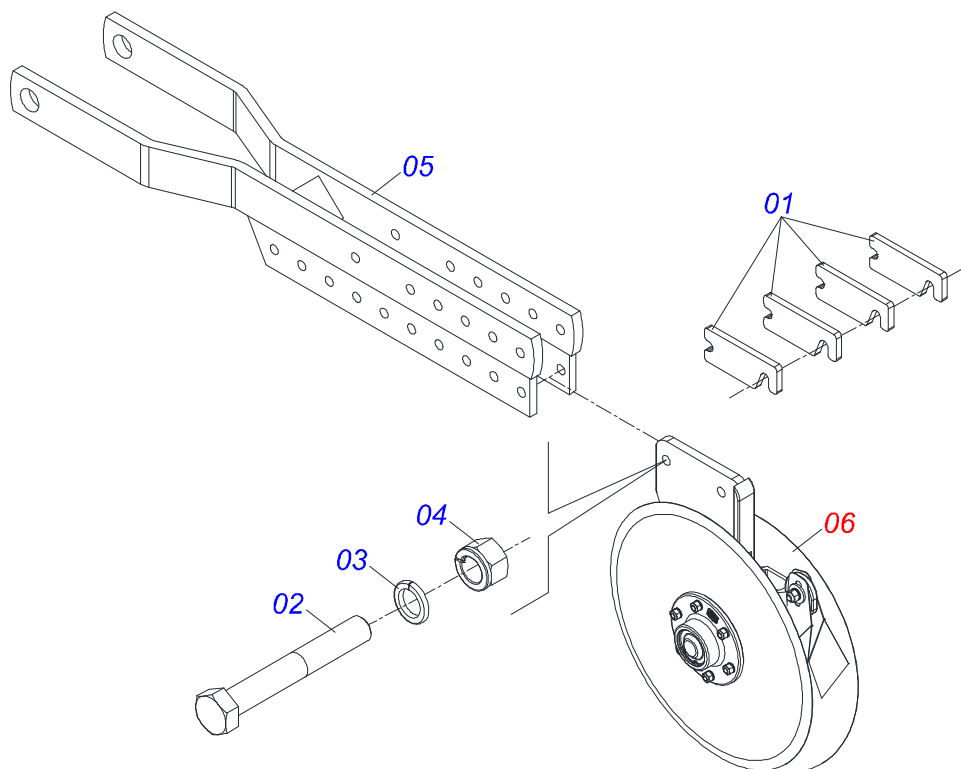


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0521061121	SHORT FERTILIZER ROW ARM		01
06	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	270	01

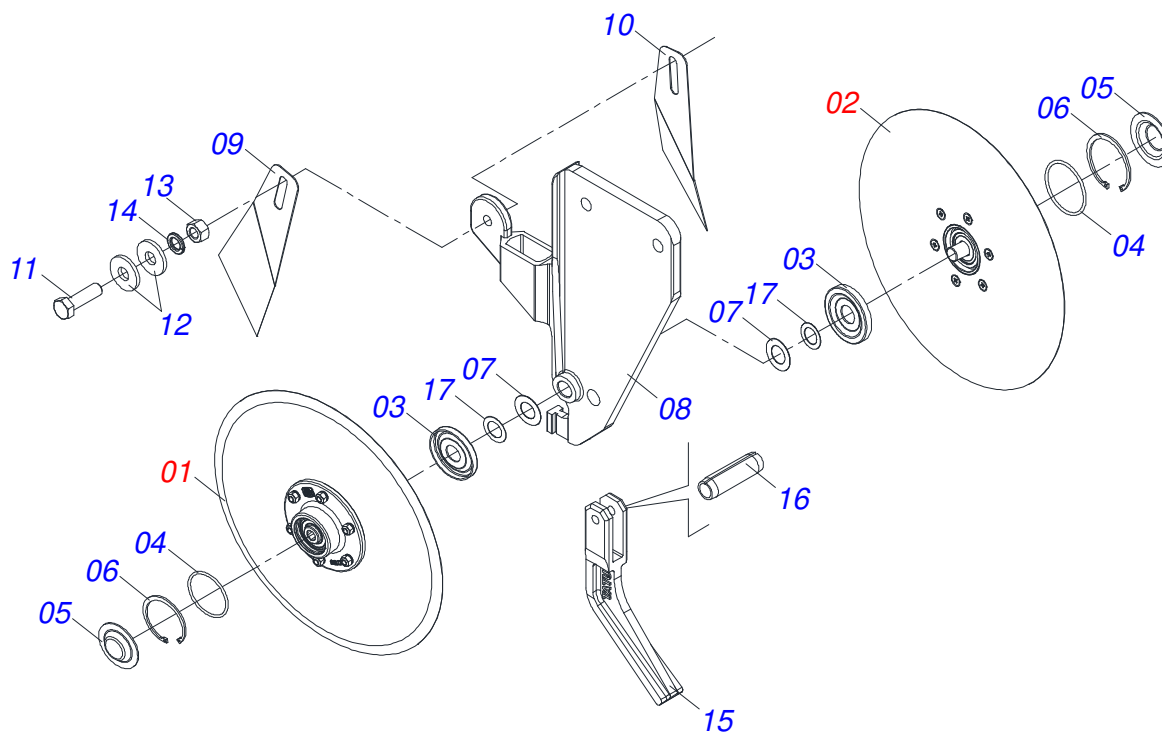


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW HUB WITH 15 DISC	231	01
02	0511053173	RIGHT LOW HUB WITH 15 DISC	230	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503010025	3/8 SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

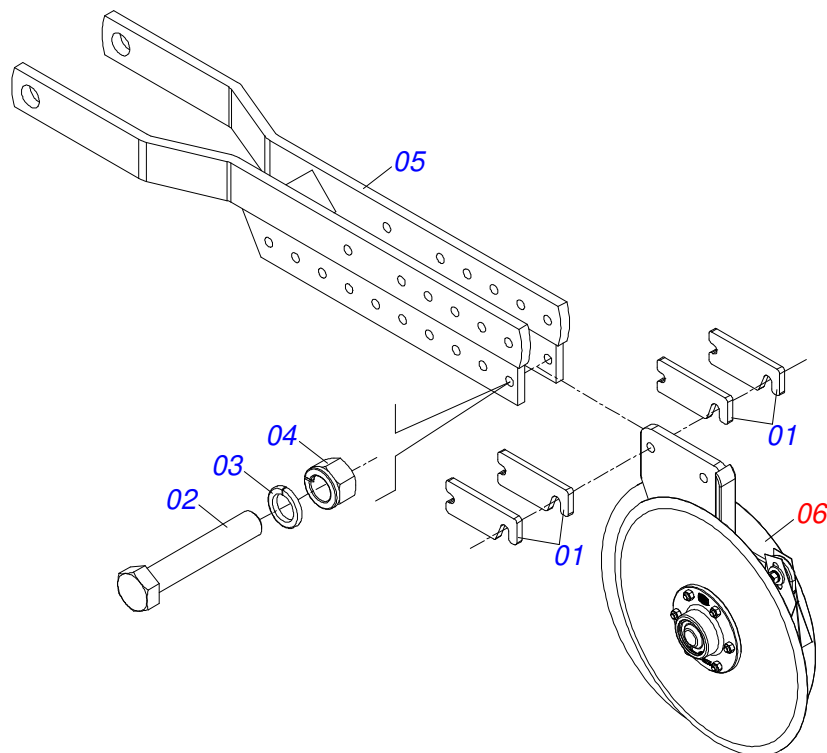


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0521061153	FERTILIZER ROW LONG ARM		01
06	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	272	01

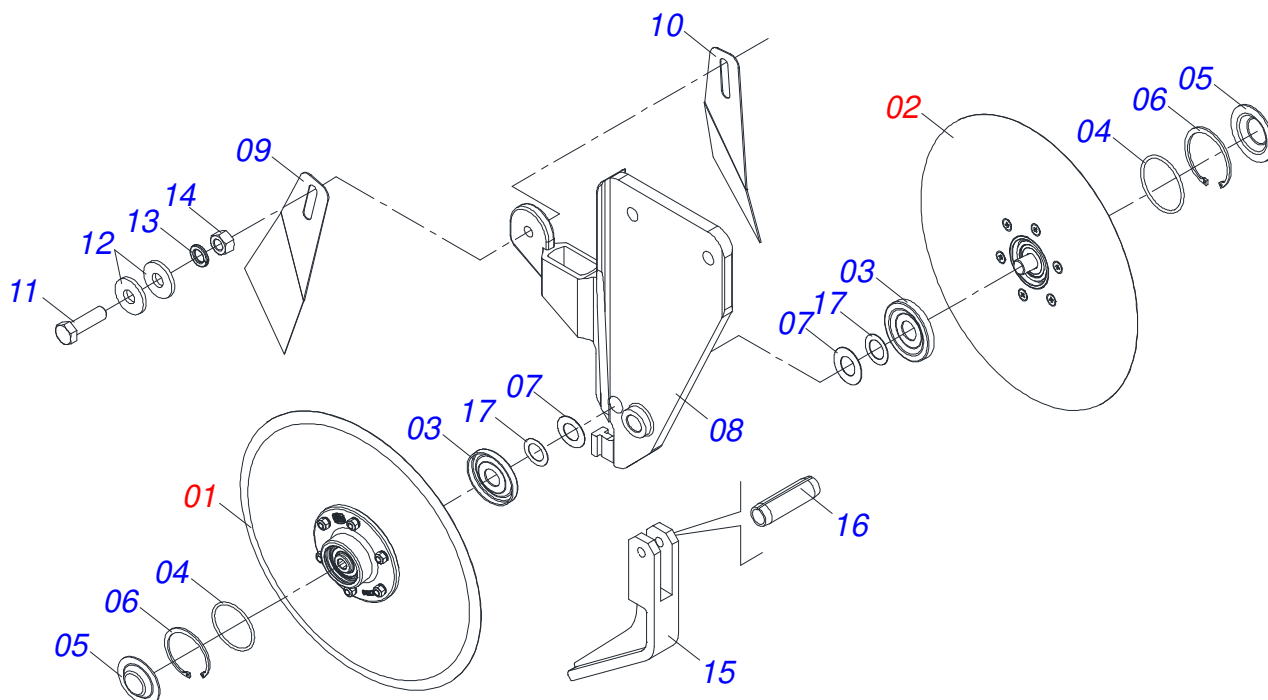


Item	Code	Description	See page	QT
01	0511053173	RIGHT LOW HUB WITH 15 DISC	230	01
02	0511053172	LEFT LOW HUB WITH 15 DISC	231	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
13	0503010025	3/8 SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

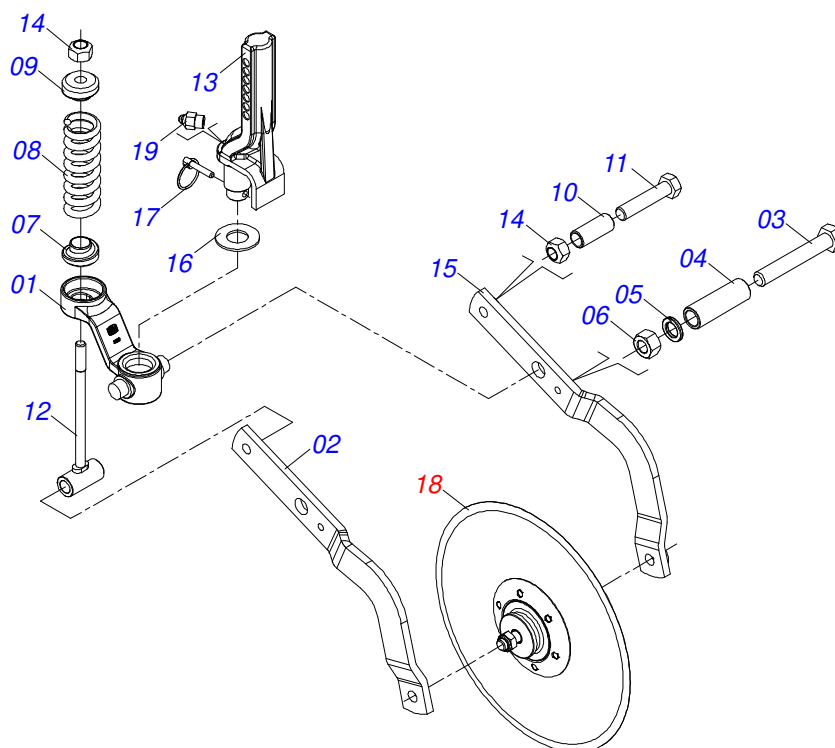


Item	Code	Description	See page	QT
01	0502012816	CUTTING DISC SUPPORT		01
02	0571019976	LEFT BRACELET CUTTING DISC		01
03	0503011411	1/2" X 5-1/2" BOLT		01
04	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
05	0503011440	SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01
07	1902020394	SPRING SUPPORT		01
08	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
09	1902020393	SPRING UPPER SUPPORT		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0501067323	SPRING REGULATOR		01
13	0502012825	DISC BLADE FIXED AXLE		01
14	0503011255	3/4" LOCK NUT		02
15	0521066738	BRACO RIGHT DISC CUT WITH WASHER LOCK PST		01
16	0581011111	THRUST WASHER		01
17	0503034319	LOCK PIN		01
18	0511058648	HUB WITH 20" DISC BLADE	275	01
19	0503010003	1845 GREASE FITTING		01

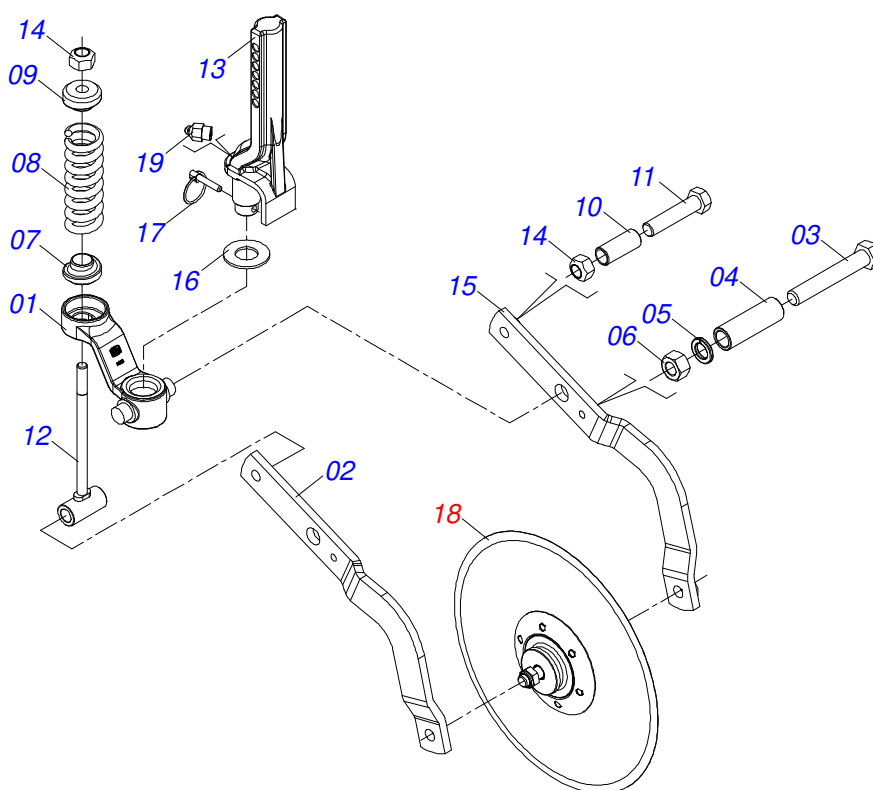


Item	Code	Description	See page	QT
01	0502012816	CUTTING DISC SUPPORT		01
02	0571019976	LEFT BRACELET CUTTING DISC		01
03	0503011411	1/2" X 5-1/2" BOLT		01
04	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
05	0503011440	SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01
07	1902020394	SPRING SUPPORT		01
08	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
09	1902020393	SPRING UPPER SUPPORT		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0501067323	SPRING REGULATOR		01
13	0502012824	DISC BLADE FIXED AXLE		01
14	0503011255	3/4" LOCK NUT		02
15	0521066738	BRACO RIGHT DISC CUT WITH WASHER LOCK PST		01
16	0581011111	THRUST WASHER		01
17	0503034319	LOCK PIN		01
18	0511058648	HUB WITH 20" DISC BLADE	275	01
19	0503010003	1845 GREASE FITTING		01

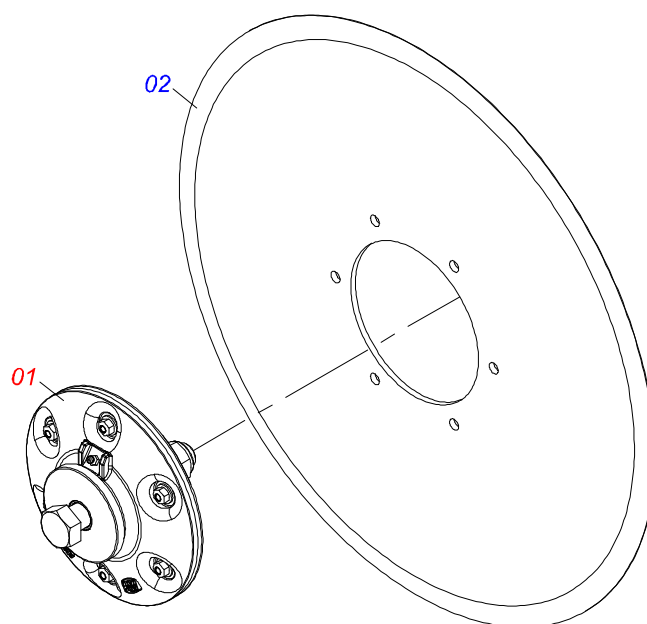


Item	Code	Description	See page	QT
01	0511056909	DISC BLADE HUB WITHOUT DISC	276	01
02	0603027851	20" X 0.2" FLAT PLAIN DISC		01

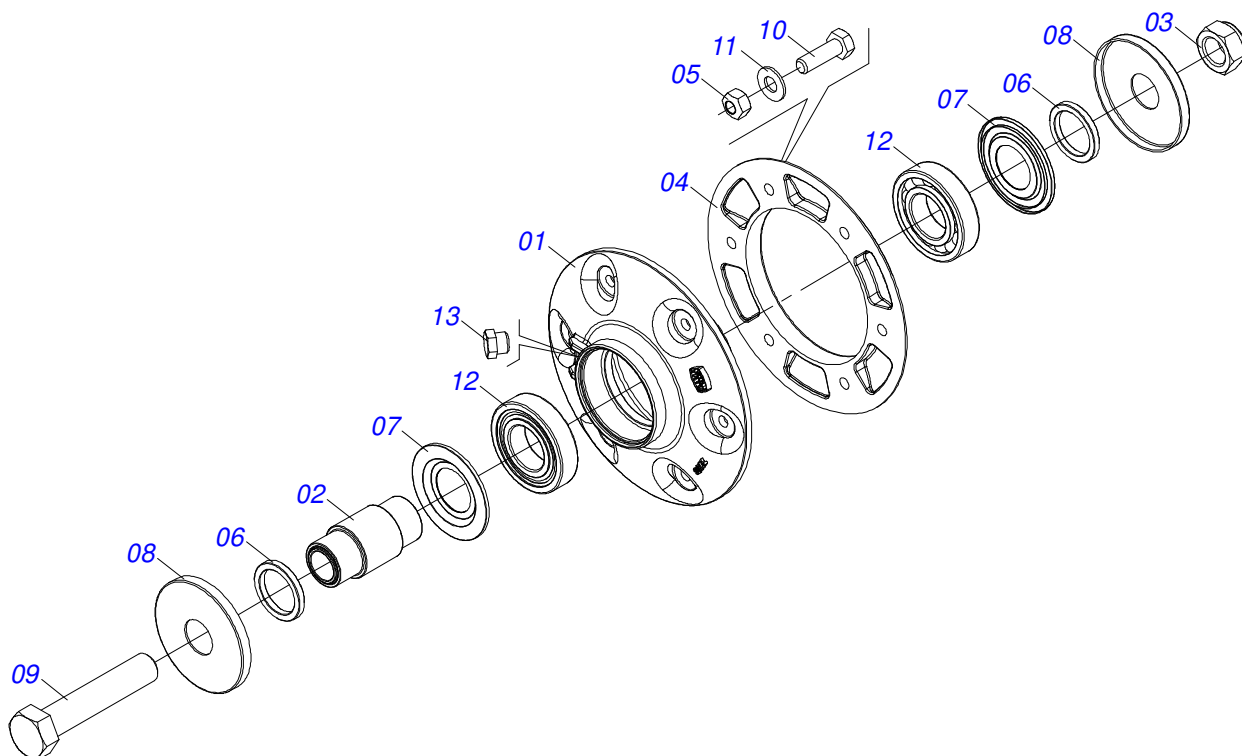


Item	Code	Description	See page	QT
01	0502012793	DISC HUB		01
02	0571018047	DISC BLADE HUB AXLE		01
03	0503017755	NUT		01
04	0502020641	BLADE DISC FLANGE		01
05	0503013816	5/16" LOCKNUT		06
06	0571018048	BACKREST WASHER		02
07	0521065882	NILOS SEALING RING		02
08	0571018049	DUST CLOAK		02
09	0581010575	7/8" X 145 BOLT		01
10	0503018825	5/16 UNC UNC BOLT		06
11	0501010694	FLAT WASHER		06
12	0503016061	BEARING		02
13	0511017907	1/8" BSPT X 6 PLUG		01

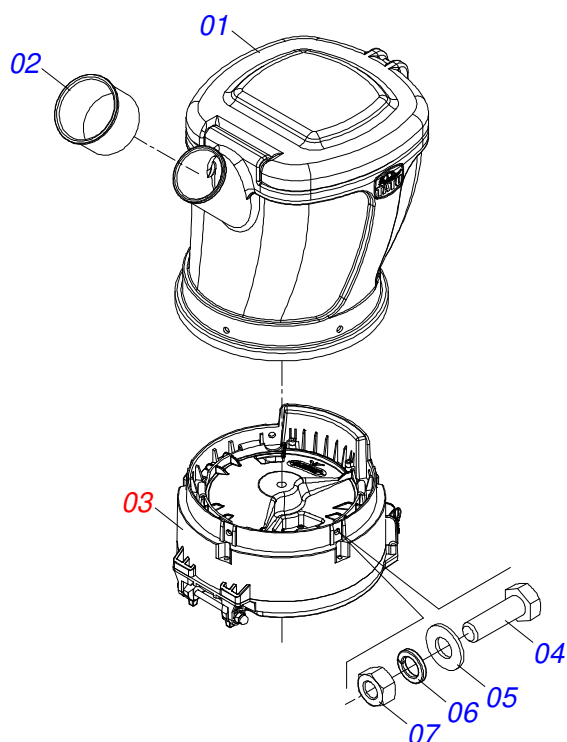


Item	Code	Description	See page	QT
01	0521050118	3" NOZZLE SEED HOPPER		01
02	0581014295	FIXING SLEEVE		01
03	0511052058	SEED SYSTEM TITANIUM	278	01
04	0503010358	5/16" X 5/8" BOLT		05
05	0501010694	FLAT WASHER		05
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		05
07	0503010337	5/16" NUT		05

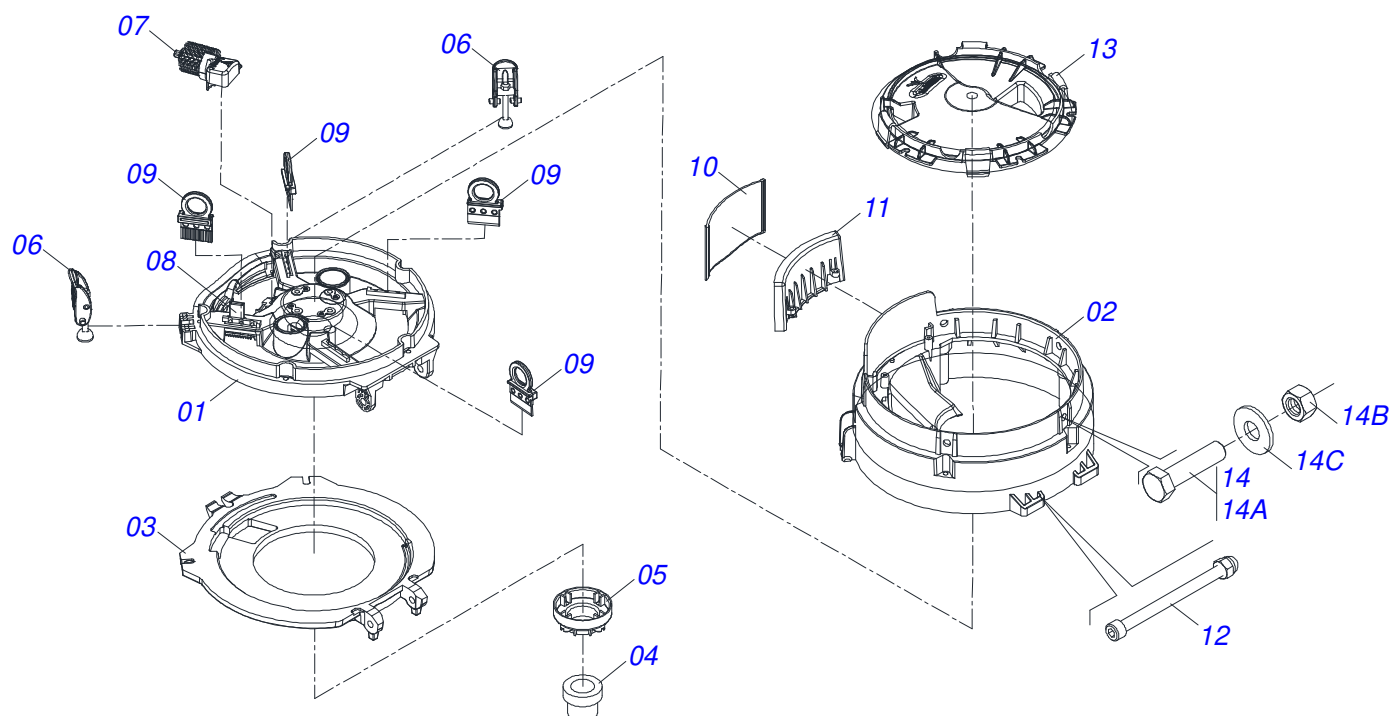


Item	Code	Description	See page	QT
01	0503062031	BASE SET		01
02	0503062032	NECK TITANIUM ASSY		01
03	0503062033	OPPOSITE BASE SET		01
04	0503062034	CENTRAL ADAPTER SET		01
05	0503062035	SET FALSE ADAPT CENTER		01
06	0503062036	SUBSET ASSY LOCK BASE		01
07	0503062037	SUBSET ESCOVAFLEX ASSY		01
08	0503062038	ASSY ANTI-LEAP		01
09	0503062039	POLIFLOW TITANIUM ASSY		01
09.	0503016279	POLIFLOW TITANIUM ASSY		01
10	0503062040	DISPLAY ASSY TITANIUM 1050010		01
11	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
12	0503062042	SET BOLT ARTICULADOR		01
13	0503062043	ASSY LIMIT WEIGHT		01
14	0503062044	ASSEMBLY SEED HOPPER SET		01
14A	0503016285	BOLT		05
14B	0503016286	HEX NUT		05
14C	0503016287	FLAT WASHER		05

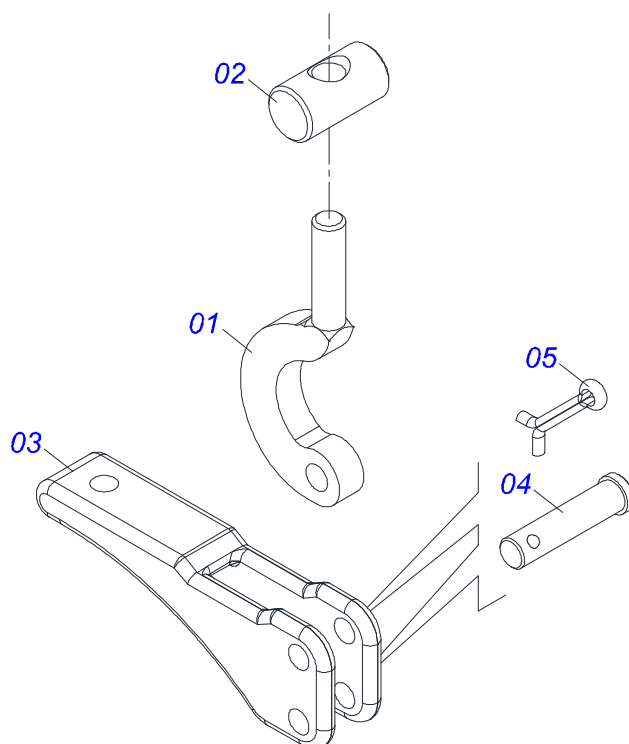


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

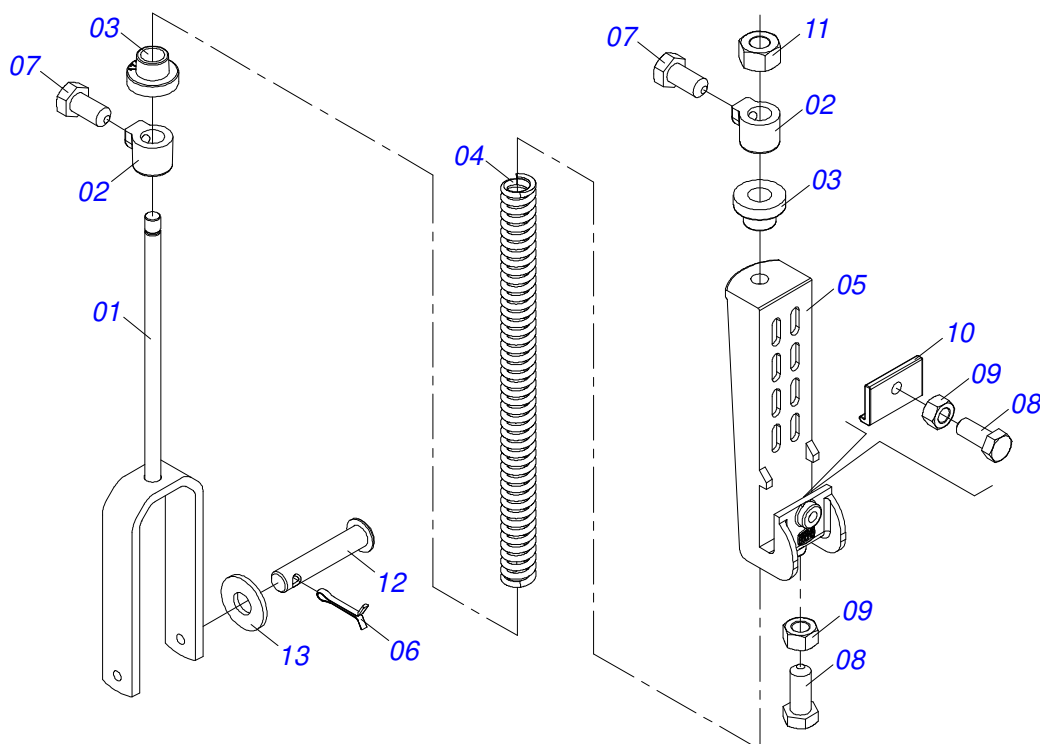


Item	Code	Description	See page	QT
01	0511069645	FERTILIZER SPRING ROD		01
02	0502040534	SPRING GUIDE BUSHING LOCK		02
03	0502012184	FERTILIZER SPRING GUIDE		02
04	0503031910	1.7" X 22.8" X 0.3" SPRING		01
05	0502012510	SPRING ROD SUPPORT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0501018535	1/2 X 1 BOLT		02
08	0503030678	BOLT 1/2 UNC X 1.1/2 C50A G.5 ZN		02
09	0503010060	1/2 UNC G.5 ZN HEX NUT		02
10	1902010891	SPRING CHOCK SUPPORT VARON		01
11	0503010014	3/4" HEX NUT		01
12	0561014471	COUPLING SHAFT		01
13	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01

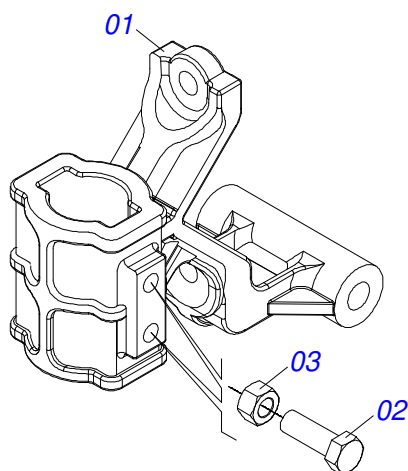


Item	Code	Description	See page	QT
01	0502012823	DISC BLADE SUPPORT		01
02	0503034318	5/8 UNC X 2 BOLT		02
03	0503010013	5/8 NUT		02

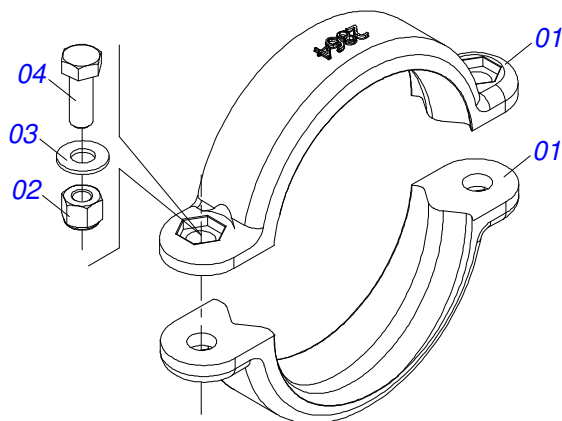


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02

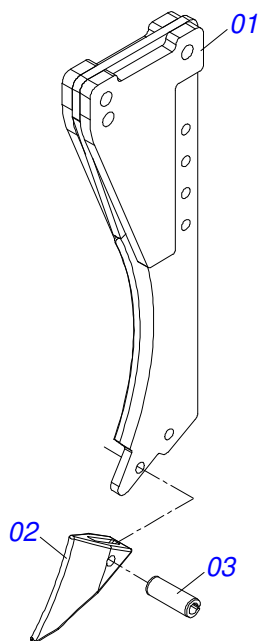


Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER ROD		01
02	1902070061	POINT SUBSOILER		01
03	0503011373	0.4" X 1.1" SPRING PIN		01

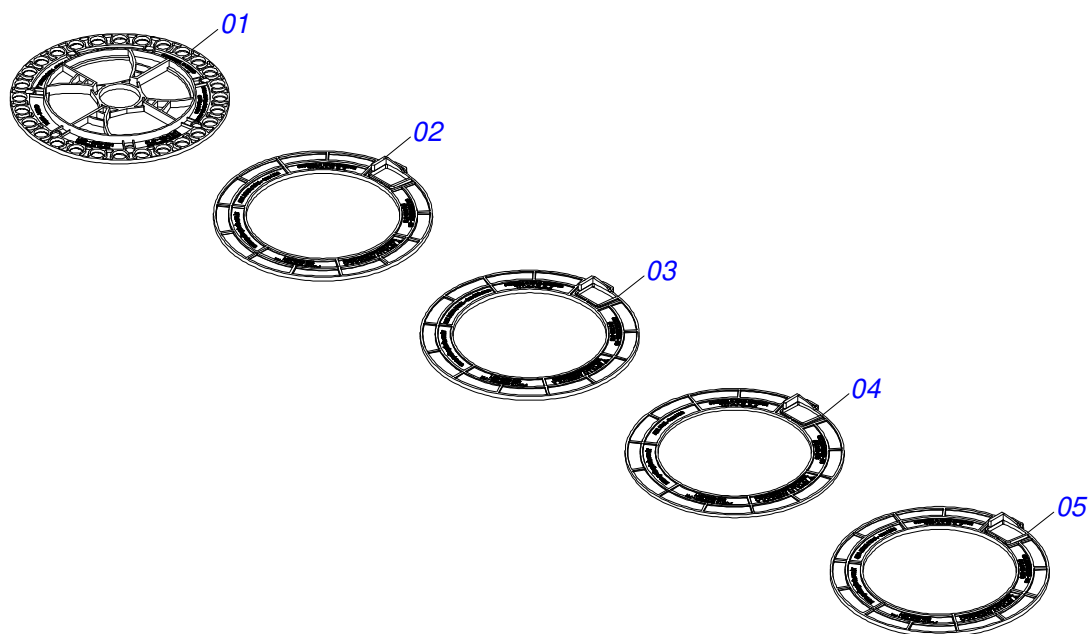


Item	Code	Description	See page	QT
01	0503016204	CORN DISC 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

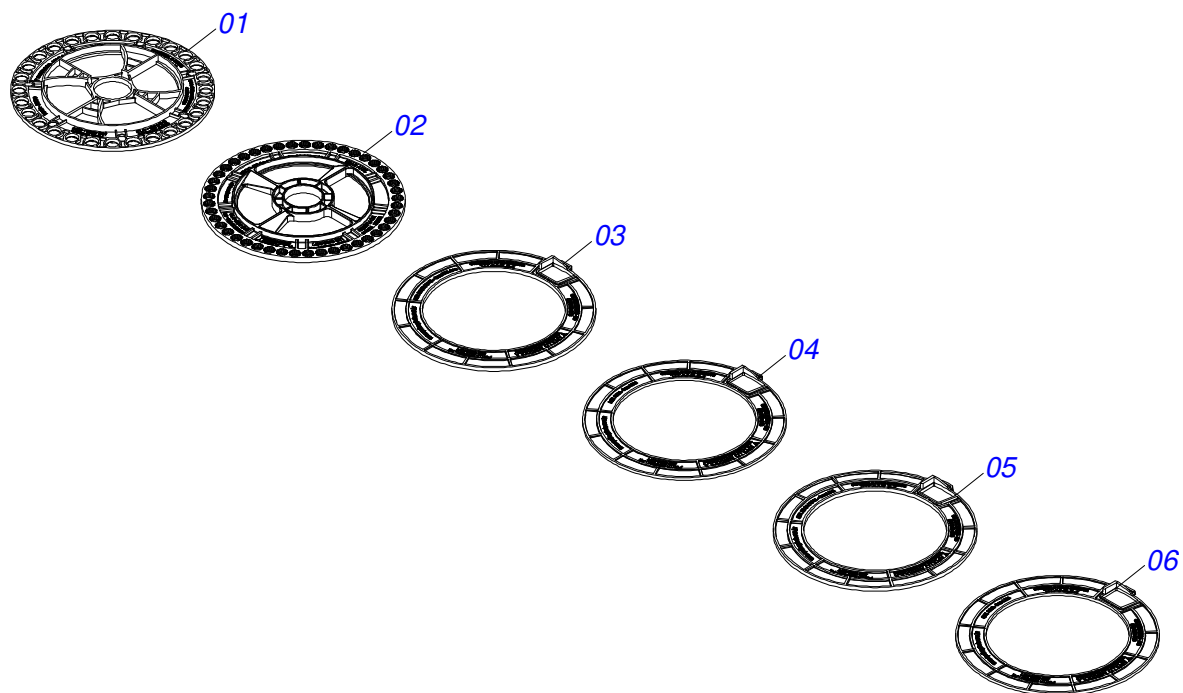


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

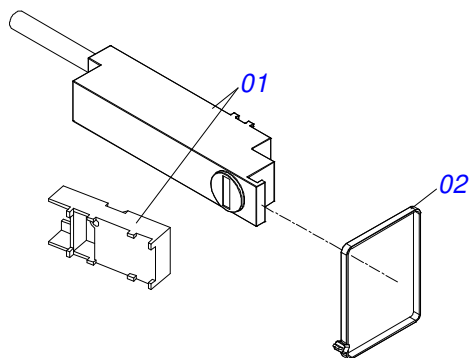


Item	Code	Description	See page	QT
01	0503015218	SENSOR FOTOELE PM 400		01
02	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03

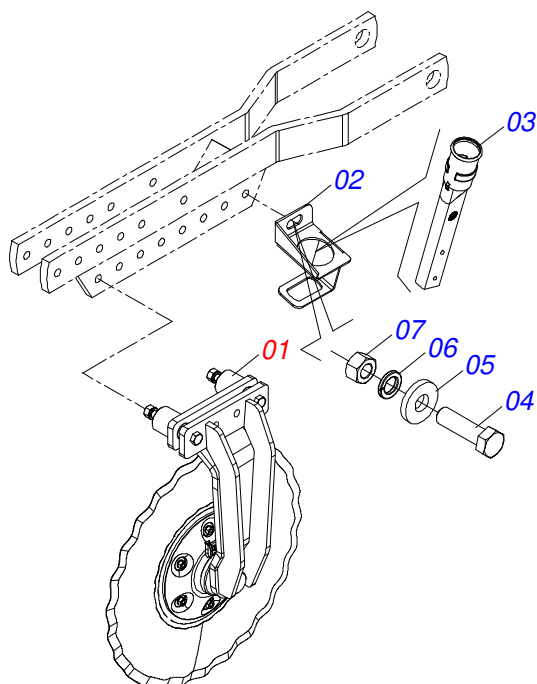


Item	Code	Description	See page	QT
01	0511059218	RIGHT SUPPORT	288	01
02	0571019645	CONDUCTOR SUPPORT		01
03	0503030483	FERTILIZER SOCKET		01
04	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		01
05	0521018517	FLAT WASHER		01
06	0503010019	1/2" SPRING WASHER		01
07	0503010060	1/2 UNC G.5 ZN HEX NUT		01

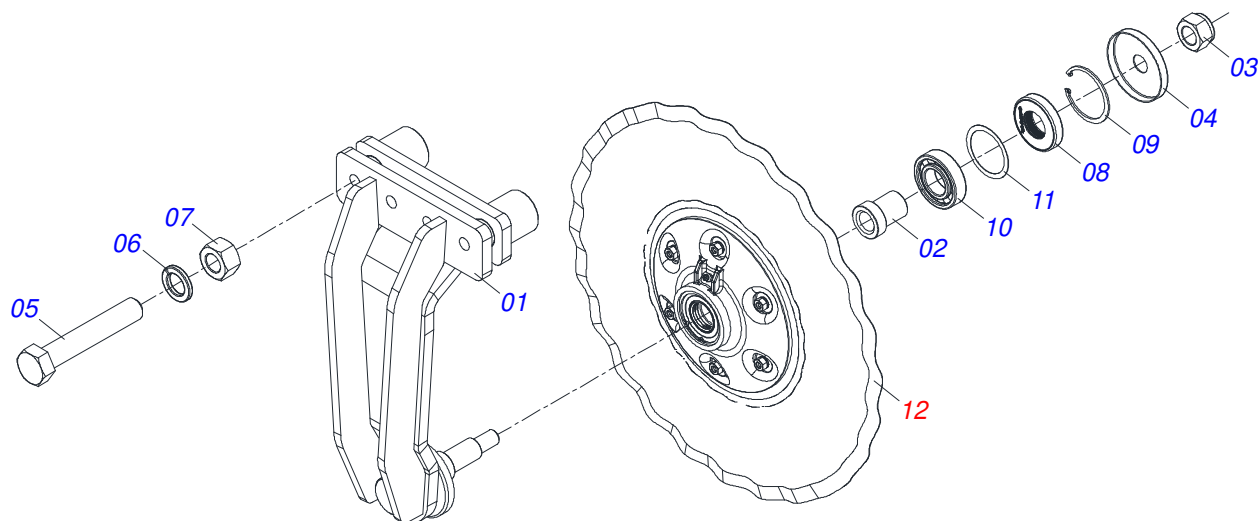


Item	Code	Description	See page	QT
01	0521066977	ARM BLADE DISC		01
02	0581011838	SLEEVE GUIDES		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0521015376	DUST CLOAK		01
05	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2 UNC G.5 ZN HEX NUT		02
08	0503012417	SEAL		01
09	0503011800	SEAL RING		01
10	0503010276	6206 BALL BEARING		01
11	0503030832	FLAT WASHER		01
12	0511059229	HUB WITH DOC 18 TURBO RIGHT	289	01

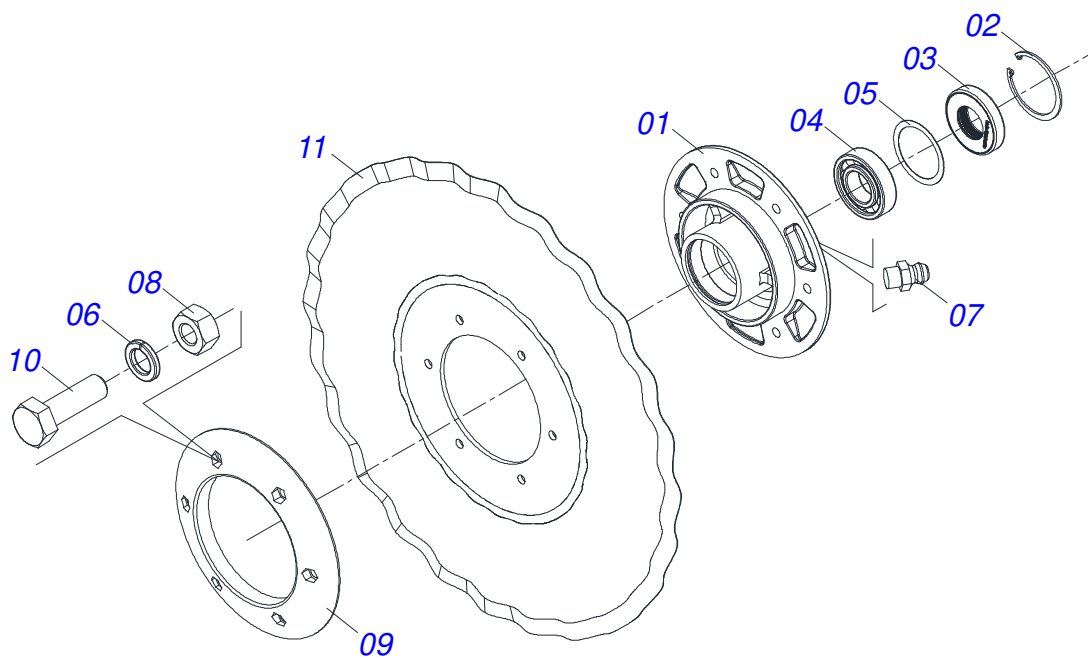


Item	Code	Description	See page	QT
01	0502011562	DISC BLADE HUB		01
02	0503011800	SEAL RING		01
03	0503012417	SEAL		01
04	0503010276	6206 BALL BEARING		01
05	0503030832	FLAT WASHER		01
06	0503011444	SPRING WASHER		06
07	0503010691	1/4" GREASE FITTING		01
08	0503010337	5/16" NUT		06
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0607025032	PLAIN COULTER BLADE		01

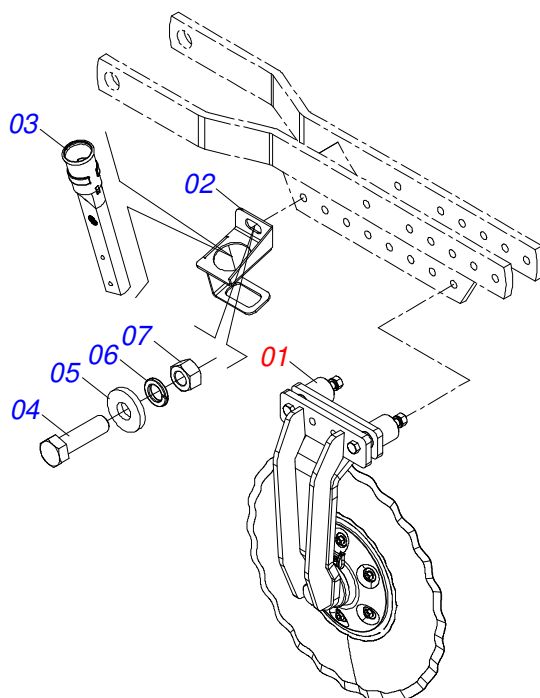


Item	Code	Description	See page	QT
01	0511059219	LEFT SUPPORT	291	01
02	0571019645	CONDUCTOR SUPPORT		01
03	0503030483	FERTILIZER SOCKET		01
04	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		01
05	0521018517	FLAT WASHER		01
06	0503010019	1/2" SPRING WASHER		01
07	0503010060	1/2 UNC G.5 ZN HEX NUT		01

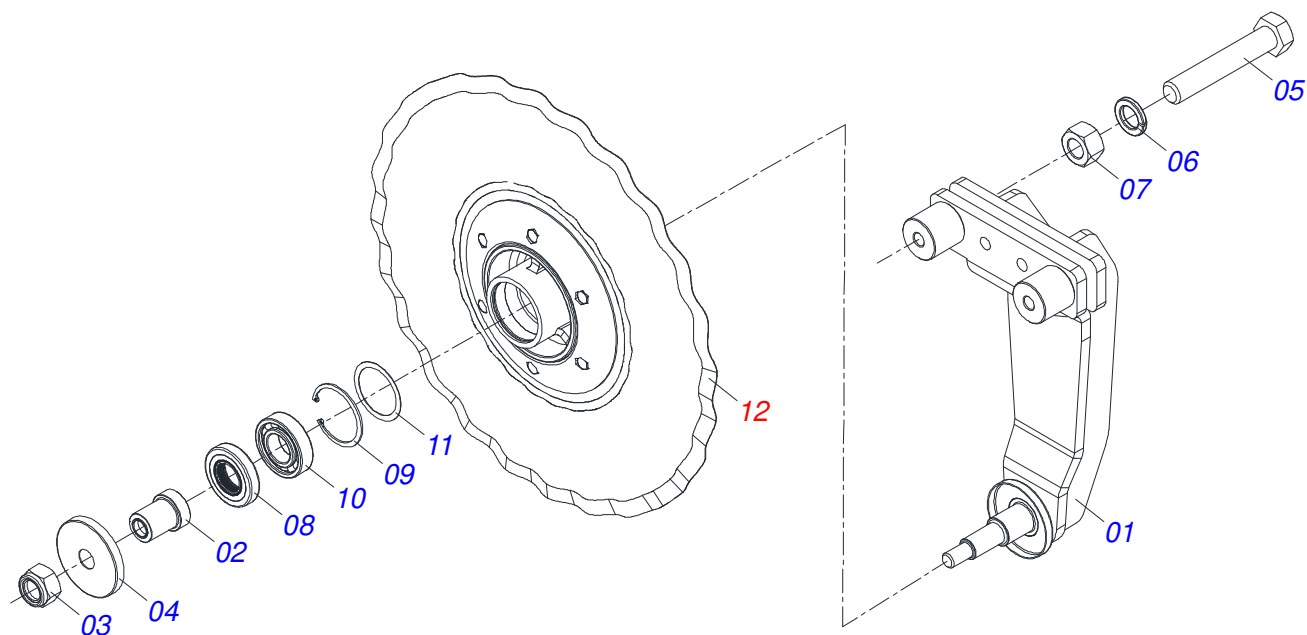


Item	Code	Description	See page	QT
01	0521066977	ARM BLADE DISC		01
02	0581011838	SLEEVE GUIDES		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0521015376	DUST CLOAK		01
05	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2 UNC G.5 ZN HEX NUT		02
08	0503012417	SEAL		01
09	0503011800	SEAL RING		01
10	0503010276	6206 BALL BEARING		01
11	0503030832	FLAT WASHER		01
12	0511059230	HUB WITH DOC 18 TURBO LEFT	292	01

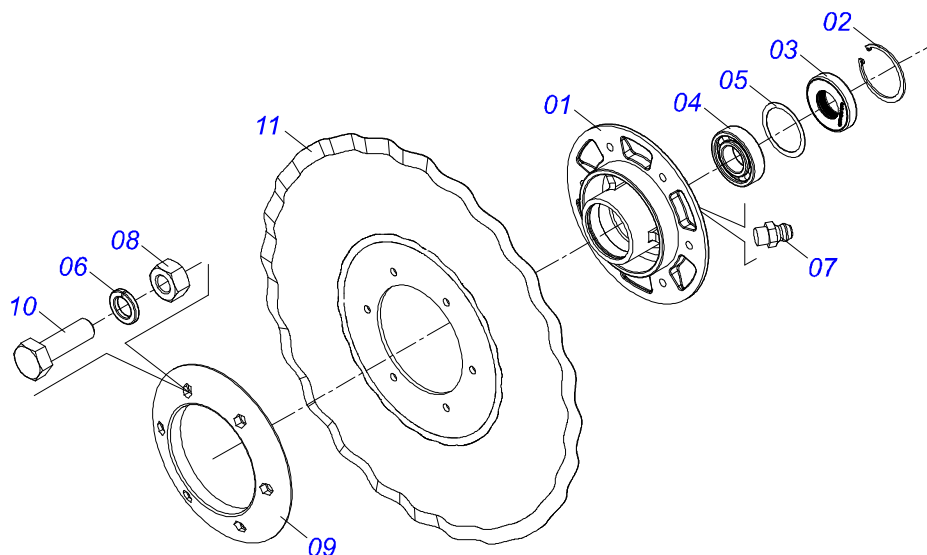


Item	Code	Description	See page	QT
01	0502011562	DISC BLADE HUB		01
02	0503011800	SEAL RING		01
03	0503012417	SEAL		01
04	0503010276	6206 BALL BEARING		01
05	0503030832	FLAT WASHER		01
06	0503011444	SPRING WASHER		06
07	0503010691	1/4" GREASE FITTING		01
08	0503010337	5/16" NUT		06
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0607025032	PLAIN COULTER BLADE		01

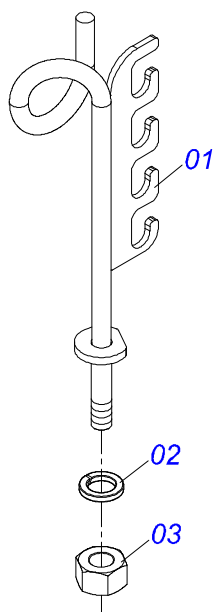


Item	Code	Description	See page	QT
01	0521065611	HOSE SUPPORT		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

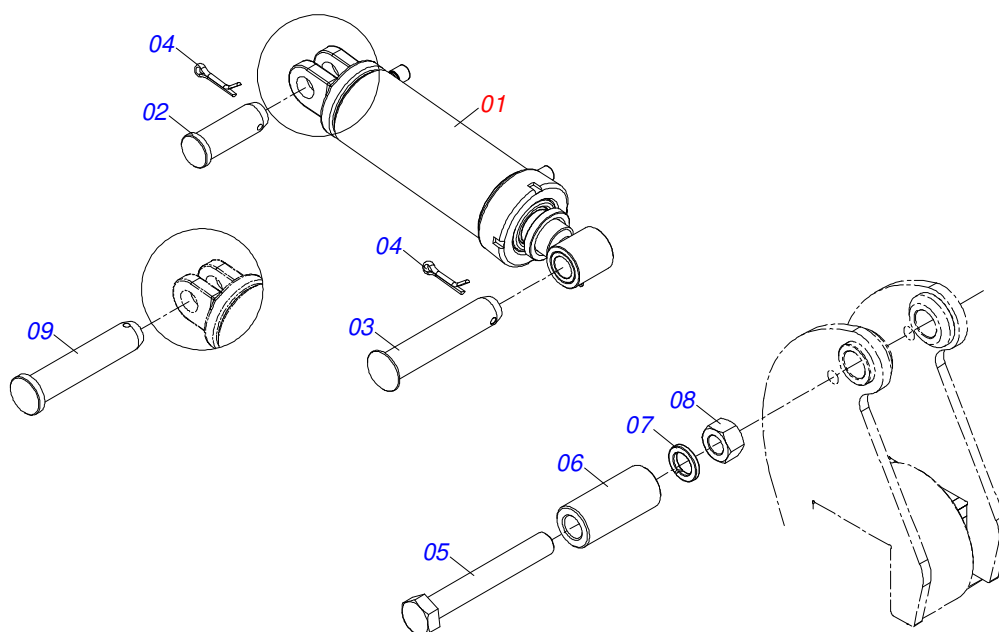


Item	Code	Description	See page	QT
01	0511058406	HYDRAULIC CYLINDER	295	03
02	0521012538	1.2" X 3.5" COUPLING SHAFT		02
03	0521015501	COUPLING SHAFT		03
04	0503010523	1/4" X 2" SPLIT PIN		06
05	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		03
06	0531012565	SLEEVE 16,3X 30 X 88		03
07	0503010027	5/8 SPRING WASHER		03
08	0503010013	5/8 NUT		03
09	0551014099	COUPLING SHAFT 31,75 X 185		01

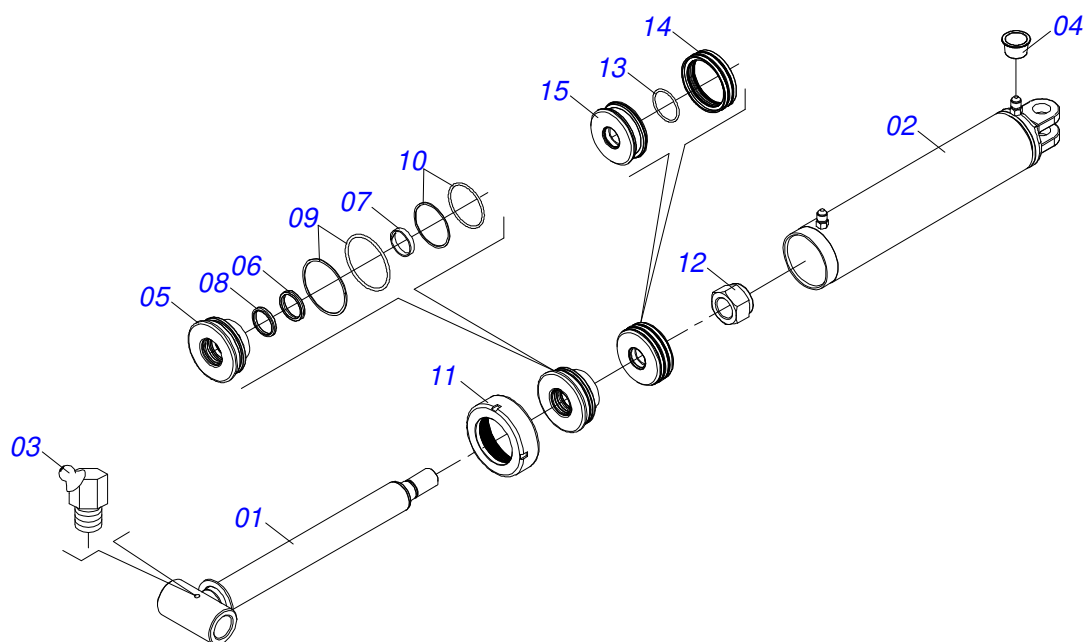


Item	Code	Description	See page	QT
01	0511064053	SLEEVE 2" X 14" TURNBUCKLE		01
02	0511064052	4" X 12.1" CYLINDER CASE		01
03	0503010003	1845 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010678	50,80 X 101 RING SUPPORT		01
06	0503015636	SCRAPER SEAL		01
07	0503018025	RING GUIDE		01
08	0503018026	1870-2000-375 B GASKET		01
09	0503010338	2-342 N 3006-9B O'RING		02
10	0503011061	8-342 BACK-UP RING		02
11	0502012822	101.60 END CAP		01
12	0503010817	1.1/4" SELF LOCKING NUT		01
13	0503010345	2-218 N 3006-9B O'RING		01
14	0503015633	SELEMASTER SEALING		01
15	0502012842	50,80 X 101,60 PISTON		01
16	0511032511	ASSY CYLINDER REPAIR KIT 50.8X101.6		01

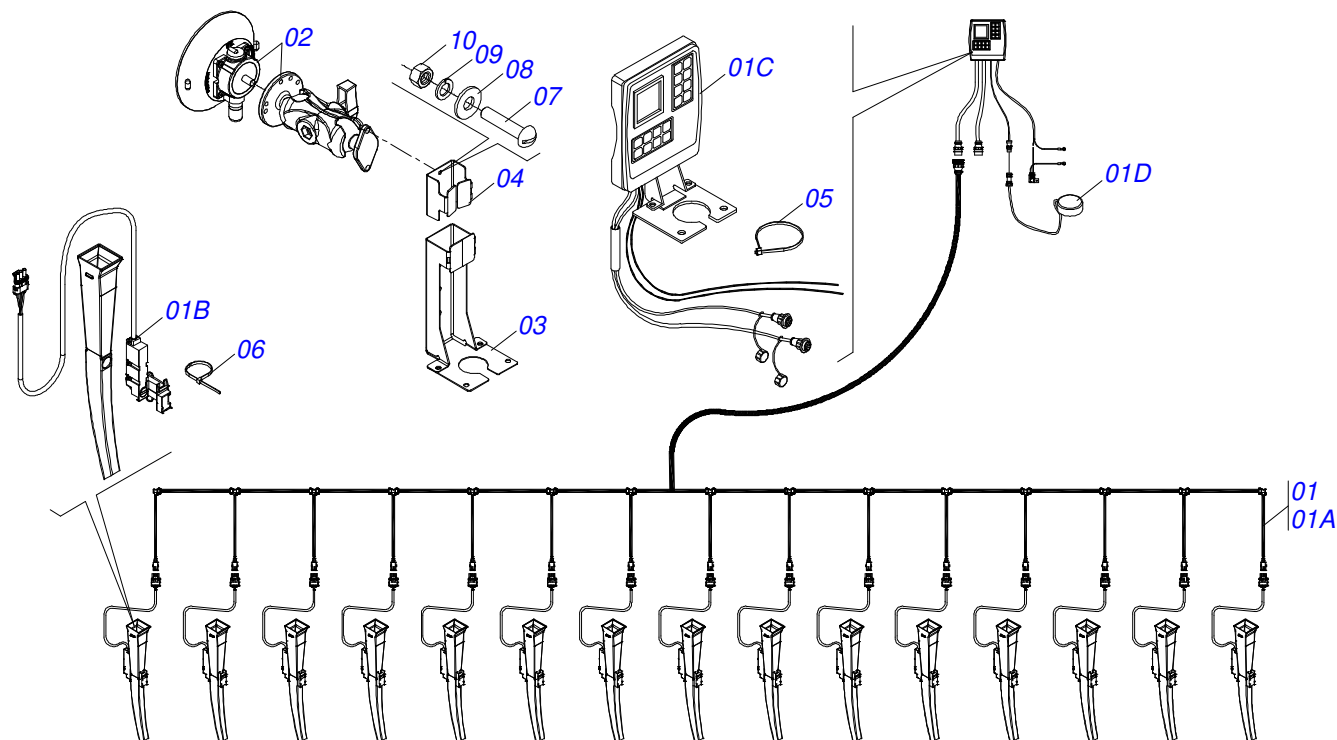


Item	Code	Description	See page	QT
01	0503062808	KIT MONITOR SEED 15L 45/50 PM400		01
01A	0503016561	15 ROW SIMPLE MONITOR CABLE		01
01B	0503019100	SENSOR		15
01C	0503017602	MONITOR PLANT PM400		01
01D	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		75
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		225
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02

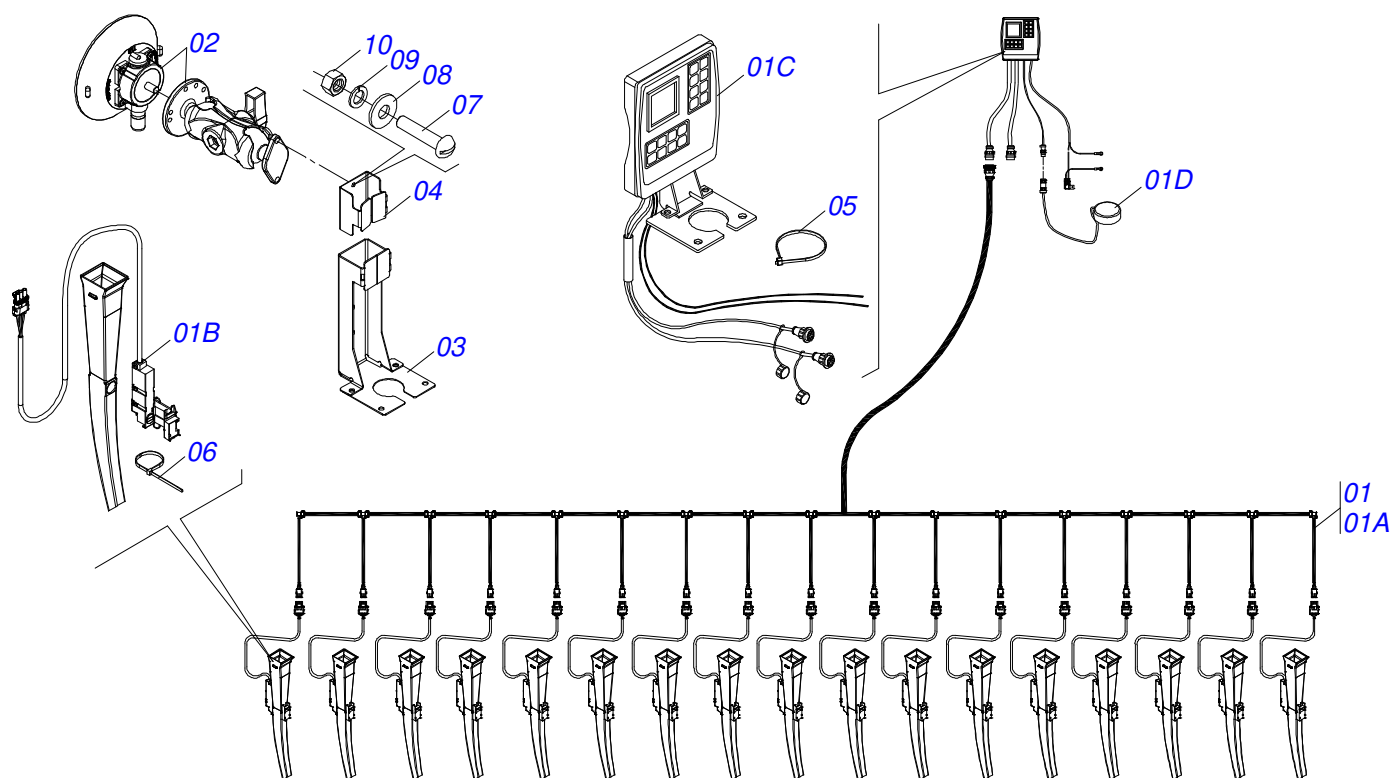


Item	Code	Description	See page	QT
01	0503062810	KIT MONITORING SEED 17L 45/50 PM400		01
01A	0503016563	17 ROW SIMPLE MONITOR CABLE		01
01B	0503019100	SENSOR		17
01C	0503017602	MONITOR PLANT PM400		01
01D	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		85
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		255
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02

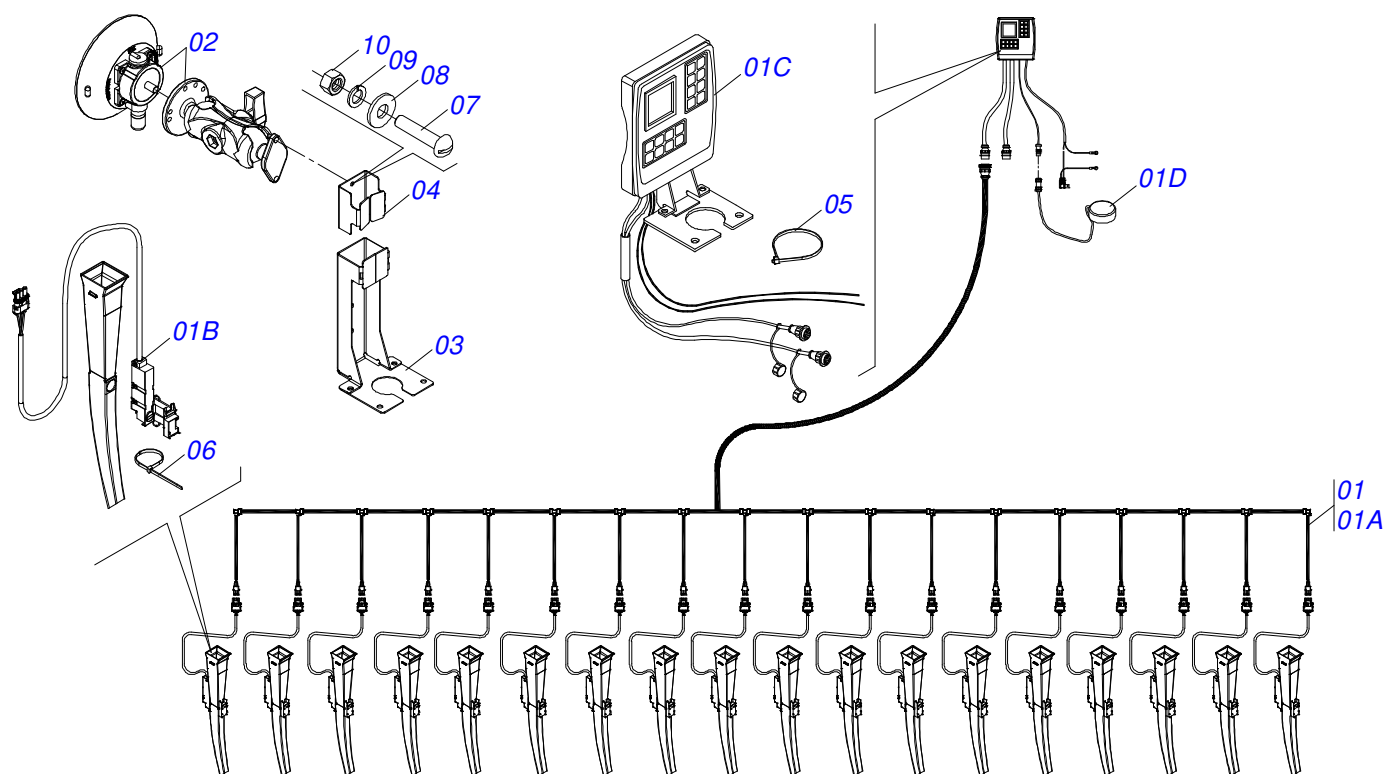

Item	Code	Description	See page	QT
01	0503062811	KIT MONITORING SEED 18L 45/50 PM400		01
		PM418SSM		
01A	0503016564	SIMPLE CABLE MONITORING 18L A OR S PM400		01
01B	0503019100	SENSOR		18
01C	0503017602	MONITOR PLANT PM400		01
01D	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		90
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		270
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02

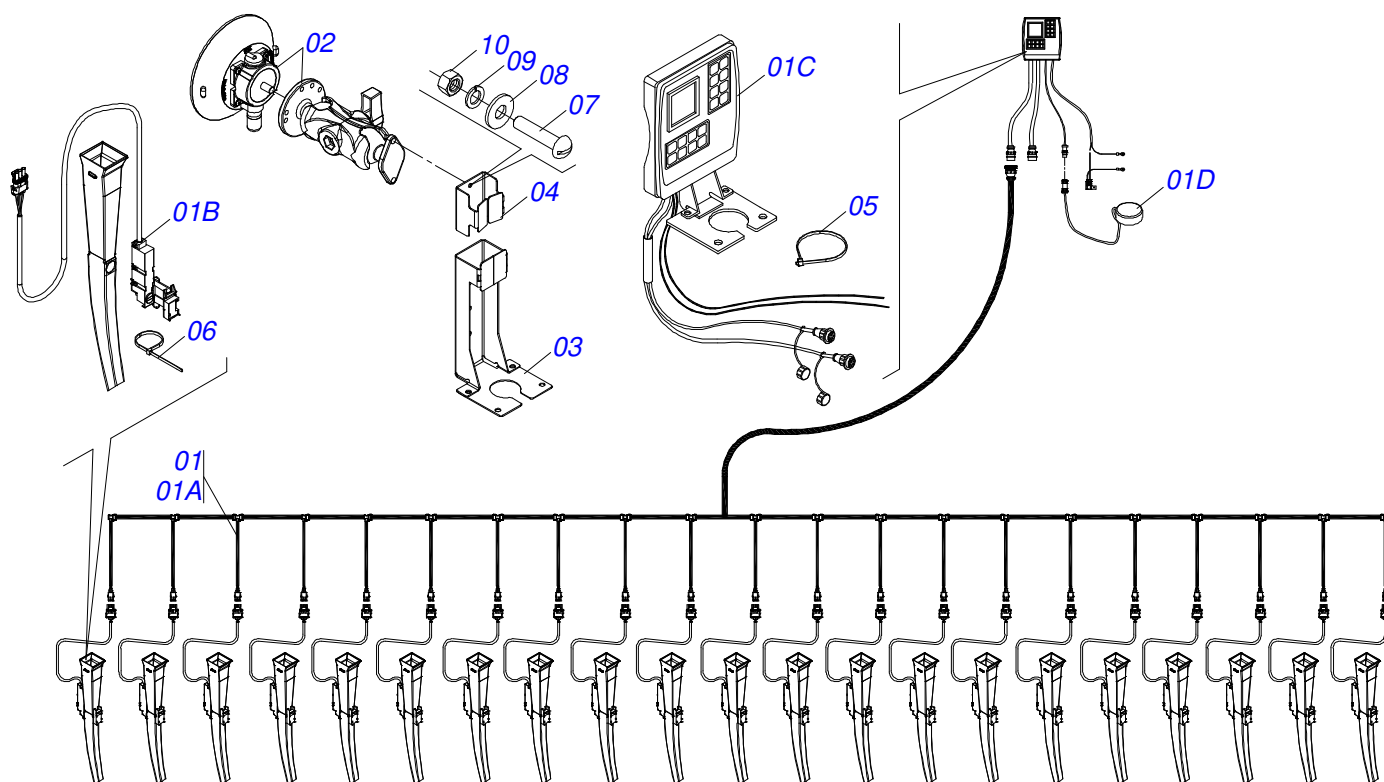

Item	Code	Description	See page	QT
01	0503062814	KIT MONITORING SEED 21L 45/50 PM400		01
01A	0503017583	SIMPLE CABLE MONITORING 21L		01
01B	0503019100	SENSOR		21
01C	0503017602	MONITOR PLANT PM400		01
01D	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		105
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		315
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02

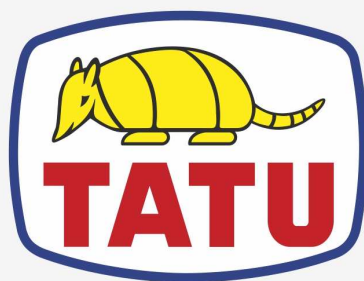

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

