

ROW CROP PLANTERS

PST DUO FLEX - FRAME 4880/5720/5950

Code: 0501092496
Series: S-0115
Revision: 00
Date Revision: JULHO/2021

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111240165	PST DUO FLEX 4880/10E500 MH DC20 S-0115
0111240162	PST DUO FLEX 5340/11E500 D/HDA MH S-0115
0111240156	PST DUO FLEX 5950/12E500 D/HDA MH DC20 CSU S-0115
0111240151	PST DUO FLEX 5950/13E450 MH DC20 S-0115
0111240119	PST DUO FLEX 5950/13E450 MH S-0115

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.



MARCHESAN

INDEX


0909095422	PST DUO FLEX S-0115		1
0511056787	FRAME WHIT ARTICULATION		2
0511056546	RIGHT FRAME WITH WHEEL AXLE - FRAME 4880		3
0511056738	LEFT FRAME WITH WHEEL AXLE - FRAME 4880		4
0511056545	CHASSI COM ARTICULATION		5
0511056786	RIGHT FRAME WITH WHEEL AXLE - FRAME 5950		6
0511056785	LEFT FRAME WITH WHEEL AXLE - FRAME 5950		7
0909095402	HEADER ASSY		8
0511054601	FULL ARTICULATED TRACTOR HITCH		9
0521053311	RIGHT EXTENSOR HEAD 36,00 - 4880/5720/5950		10
0521053310	LEFT EXTENSION HEADER 36.00 - 4880/5720/5950		11
0511052311	3 POINT TURNBUCKLE		12
0511056529	CYLINDER ASSY		13
0511058406	HYDRAULIC CYLINDER		14
0521043312	HUB SPINDLE ASSY		15
0501058240	WHELL FASTENER WITH STRETCHER		16
0511052770	WHEEL WITH TIRE 7.00X16 ASSY WHEELED BOX		17
0511052769	WHEEL TRANSMISSION WITHOUT TIRE		18
0501058241	TENSIONER CHAIN SUPPORT		19
0521043313	WHEELED WITH SPRING TRACTION WITHOUT TRANSMISSION		20
0511056751	RIGHT TRANSMISSION ASSY - 4880		21
0511056752	LEFT TRANSMISSION ASSY - 4880		22
0511056818	RIGHT TRANSMISSION ASSY 5950		23
0511056819	LEFT TRANSMISSION ASSY 5950		24
0511051434	TRANSMISSION DRIVING ASSY		25
0511047070	LH SIDE TRANSMISSION DRIVING		26
0521043317	LEFT GEAR BOX ASSY		27
0511056742	ASSY SYSTEM HYDRAULIC 4880/5720/5950		28
0511056743	SEMI MOUNTED HYDRAULIC MARKER 4880		29
0511056789	SEMI MOUNTED HYDRAULIC MARKER 5720/5950		30
0511058449	HYDRAULIC CYLINDER		31
0501054649	SEQUENTIAL VALVE ASSY		32
0511056745	LATFORM SET		33
0511056793	PLATFORM SET		34
0511056746	HANDRAIL ASSY 4880		35
0511056794	HANDRAIL ASSY 5950		36
0511056536	ASSEMBLY LADDER		37
0511054971	RESTING ASSEMBLY		38
0501050633	MARKER DISC ASSY LINE		39
0511056543	ASSY PORT MANUAL INSTRUCCION		40
0909092633	SEED ROW/FERTILIZER HDA		41
0909092634	SEED/FERTILIZER ROW CPRA/D20		42
0521046122	DEPTH SYSTEM / COMPACTOR ASSY		43
0521044538	DEPHT WHIT REGULACION ANGLE COMPACT CONTROL	(OPTIONAL)	44
0511052971	CONTROL DEPTH WITH SEMI MOUNTED THREAD		45
0511052970	SYSTEM COMPACTOR V SEMI MOUNTED		46
0501052908	COMPACTOR WHEEL WITH BEARING		47
0511055819	DEPTH WHIT AROS BAND		48
0501110714	INNER SOCKET FASTENER	(OPTIONAL)	49
0501059834	FRONT LINE SEED SHORT LEFT CARDAN		50
0501059835	FRONT LINE SEED LONG RIGHT CARDAN		51
0909092645	LONG SEED ROW FRONT		52
0501059833	FRONT LINE SEED SHORT RIGHT CARDAN		53
0501059836	FRONT LINE SEED LONG LEFT CARDAN		54



MARCHESAN


INDEX

0511058619	DISC CUT 20 SHORT LINE	(OPTIONAL)	55
0511058620	DISC CUT 20 LONG LINE	(OPTIONAL)	56
0511059264	BEARING WITH AXLE		57
0511050611	5/8" HEX AXLE BEARING		58
0511056621	REAR RIGHT SEED LINE		59
0511056622	LEFT REAR LINE SEED		60
0511053250	SHORT ARM FERTILIZER LINE WITH DDD LEFT		61
0511053251	ARM LONG FERTILIZER LINE WITH DDD RIGHT		62
0909092648	FERTILIZER ROW ASSY WITH DDD/SHAFT		63
0511057017	SEED SYSTEM ASSY		64
0511058617	DISC CUT 18 SHORT LINE		65
0511058618	DISC CUT 18 LONG LINE		66
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR		67
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR		68
0511057542	HDA		69
0511057533	ROD WITH POINT FLANGE WASHER SPRING		70
0501054292	V RIGHT WHEEL PRESS FERTILIZER ASSY	(OPTIONAL)	71
0501054293	V LEFT WHEEL PRESS FERTILIZER ASSY	(OPTIONAL)	72
0511054333	COMPACT WHEEL RIGHT WITH BEARING		73
0511054334	COMPACT WHEEL LEFT WITH BEARING		74
0511058667	SPRING FLOW ENSEMBLY		75
0511056585	RIGHT 15" X 15" DOUBLE DISC SEED		76
0511056586	15 X 15 SEED DDD LEFT		77
0511053172	LEFT LOW CUBE WITH DISC 15		78
0511053173	CUBE LOW RIGHT WITH DISC 15		79
0511052341	CEAC ASSY 11L	(OPTIONAL)	80
0511052339	CEAC ASSY 13L	(OPTIONAL)	81
0909092664	PM 400 SEED END FERTILIZER MONITORING ASSEMBLY	(OPTIONAL)	82
0521050169	DAOC 18 RIGHT WITH NOZZLE	(OPTIONAL)	83
0521050170	DAOC 18 LEFT WITH NOZZLE	(OPTIONAL)	84
0511059219	LEFT SUPPORT	(OPTIONAL)	85
0511059218	RIGHT SUPPORT	(OPTIONAL)	86
0511059230	BOX WITH DOC 18 TURBO LEFT	(OPTIONAL)	87
0511059229	BOX WITH DOC 18 TURBO RIGHT	(OPTIONAL)	88
0521050168	MOUNTED FERTILIZER CONDUCTOR	(OPTIONAL)	89
0909094322	HEX AXLE ASSEMBLY		90
0511054682	HEX AXLE ASSEMBLY - 4845		91
0909094321	HEX AXLE ASSEMBLY		92
0511059023	SEED SYSTEM ASSY		93

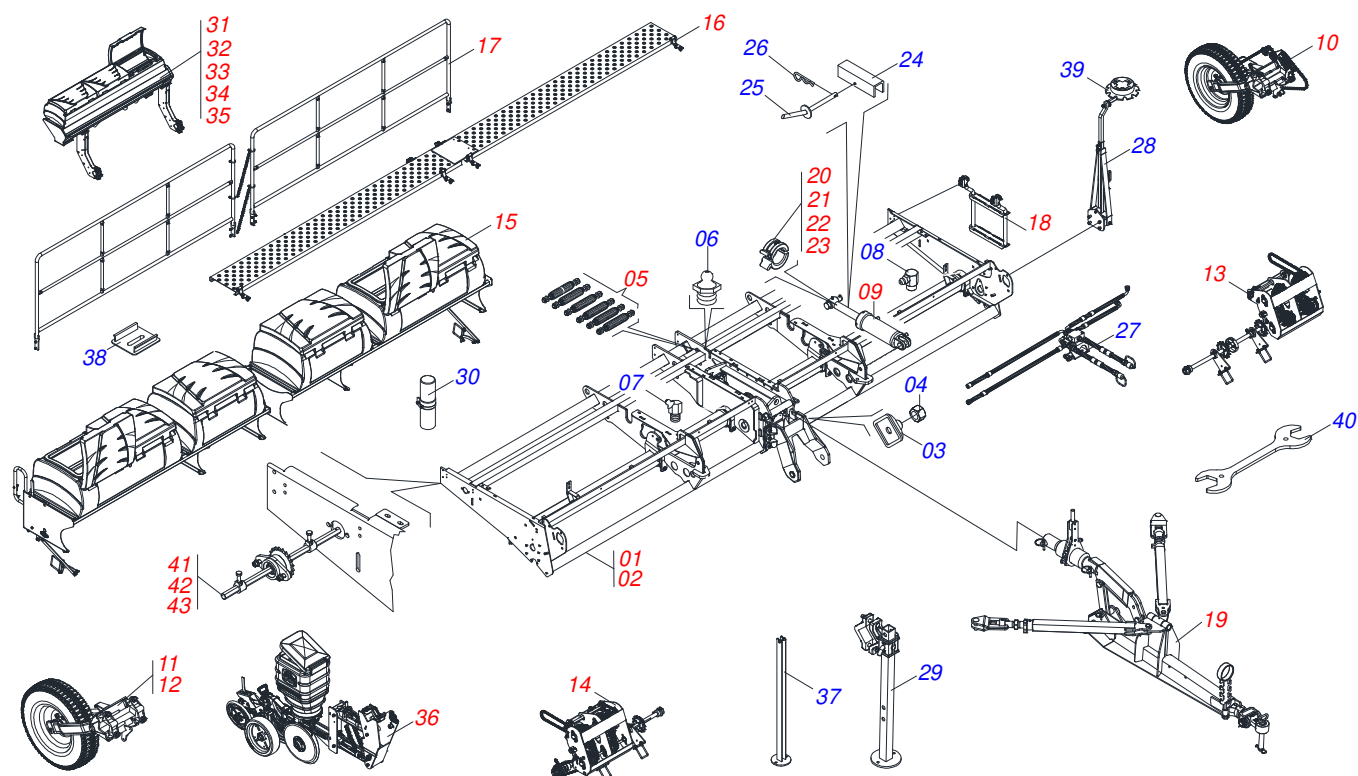


Item	Code	Description	See page	QT
01	0511056545	CHASSI COM ARTICULATION	5	01 01 00 00 00
02	0511056787	FRAME WHIT ARTICULATION	2	00 00 01 01 01
03	0521064285	LOCK LOWER FRAME		01 01 01 01 01
04	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		01 01 01 01 01
05	0511058667	SPRING FLOW ENSEMBLY	75	01 01 01 01 01
06	0503010002	1800 GREASE FITTING		01 01 01 01 01
07	0503010003	1845 GREASE FITTING		05 05 02 02 02
08	0503010004	1890 GREASE FITTING		02 02 02 02 02
09	0511056529	CYLINDER ASSY	13	01 01 01 01 01
10	0511059265	WHEELED WITH SPRING TRACTION WITH TRANSMISSION		04 04 00 04 04
11	0521043312	HUB SPINDLE ASSY	15	00 00 04 00 00
12	0521043313	WHEELED WITH SPRING TRACTION WITHOUT TRANSMISSION	20	00 00 00 02 02
13	0521050294	RIGHT TRANSMISSION ASSY - 4880		01 01 00 00 00
13.	0521050851	RIGHT TRANSMISSION ASSY SUPREME PP 5340		00 00 01 00 00
13..	0521051266	RIGHT TRANSMISSION 5950		00 00 00 01 00
13...	0521050185	LEFT TRANSMISSION ASSY SUPREME PP 5950		00 00 00 00 01
14	0521050295	LEFT TRANSMISSION ASSY - 4880		01 01 00 00 00
14.	0521050852	LEFT TRANSMISSION ASSY SUPREME PP 5340		00 00 01 00 00
14..	0521051267	LEFT TRANSMISSION		00 00 00 01 00
14...	0521050186	LEFT TRANSMISSION ASSY SUPREMA PP 5950		00 00 00 00 01
15	0511056744	SET FERTILIZER SILO		01 01 00 00 00
15.	0511056792	SET FERTILIZER SILO		00 00 00 01 01
15..	0511056533	SET FERTILIZER SILO		00 00 01 00 00
16	0511056745	LATFORM SET	33	01 01 00 00 00
16.	0511056793	PLATFORM SET	34	00 00 00 01 01
16..	0511056534	PLATFORM ASSY		00 00 01 00 00
17	0521050259	SET HANDRAIL		01 01 00 00 00
17.	0521050853	HANDRAIL ASSY		00 00 01 00 00
17..	0511058734	HANDRAIL SET PST DUO/F 5950 MTH		00 00 00 01 01
18	0511056536	ASSEMBLY LADDER	37	02 02 02 02 02


Item	Code	Description	See page	QT
19	0909095402	HEADER ASSY	8	01 01 01 01 01
20	0501047895	ROD STOP		02 02 02 02 02
21	0501047885	ROD STOP		02 02 02 02 02
22	0501047886	ROD STOP		02 02 02 02 02
23	0501047887	ROD STOP		02 02 02 02 02
24	0521013022	TRANSPORT LOCK		02 02 02 02 02
25	0501068994	0.3" X 3.1"LOCK PIN		02 02 02 02 02
26	0503030168	HAIR PIN		02 02 02 02 02
27	0511056742	ASSY SYSTEM HYDRAULIC 4880/5720/5950	28	01 01 00 01 01
27.	0511056532	ASSY SYSTEM HYDRAULIC 5340		00 00 01 00 00
28	0511056743	SEMI MOUNTED HYDRAULIC MARKER 4880	29	01 01 00 00 00
28.	0511056735	SEMI MOUNTED HYDRAULIC MARKER 5340		00 00 01 00 00
28..	0511056789	SEMI MOUNTED HYDRAULIC MARKER 5720/5950	30	00 00 00 01 01
29	0511054971	RESTING ASSEMBLY	38	04 04 04 04 04
30	0511057518	ASSY PORT MANUAL INSTRUCCION		01 01 01 01 01
31	0511059792	CSU C3 SEMI-ASSEMBLED ASSY 4045/4495 8		01 00 00 00 00
32	0511059585	ASSEMBLY CSU C3 SEMI MOUNTED 4880		00 01 00 00 00
33	0511059072	ASSEMBLY CSU C3 SEMI MOUNTED 5340		00 00 01 00 00
34	0511058723	ASSEMBLY CSU C3 SEMI MOUNTED 5950		00 00 00 01 00
35	0521050006	ASSEMBLY CSU PST DUO/F SUP 5950/13		00 00 00 00 01
36	0909092633	SEED ROW/FERTILIZER HDA	41	08 10 11 12 13
37	0501065677	STRUT		02 02 02 02 02
38	0503032624	SILO FERTILIZER GUTTER		06 06 06 06 06
39	0501050633	MARKER DISC ASSY LINE	39	02 02 02 02 02
40	0541015451	FIXED KEY 2.3/8 X 2.3/4		01 01 01 01 01
41	0909094321	HEX AXLE ASSEMBLY	92	01 00 00 00 00
42	0511054682	HEX AXLE ASSEMBLY - 4845	91	00 01 01 00 01
43	0909094322	HEX AXLE ASSEMBLY	90	00 00 00 01 00

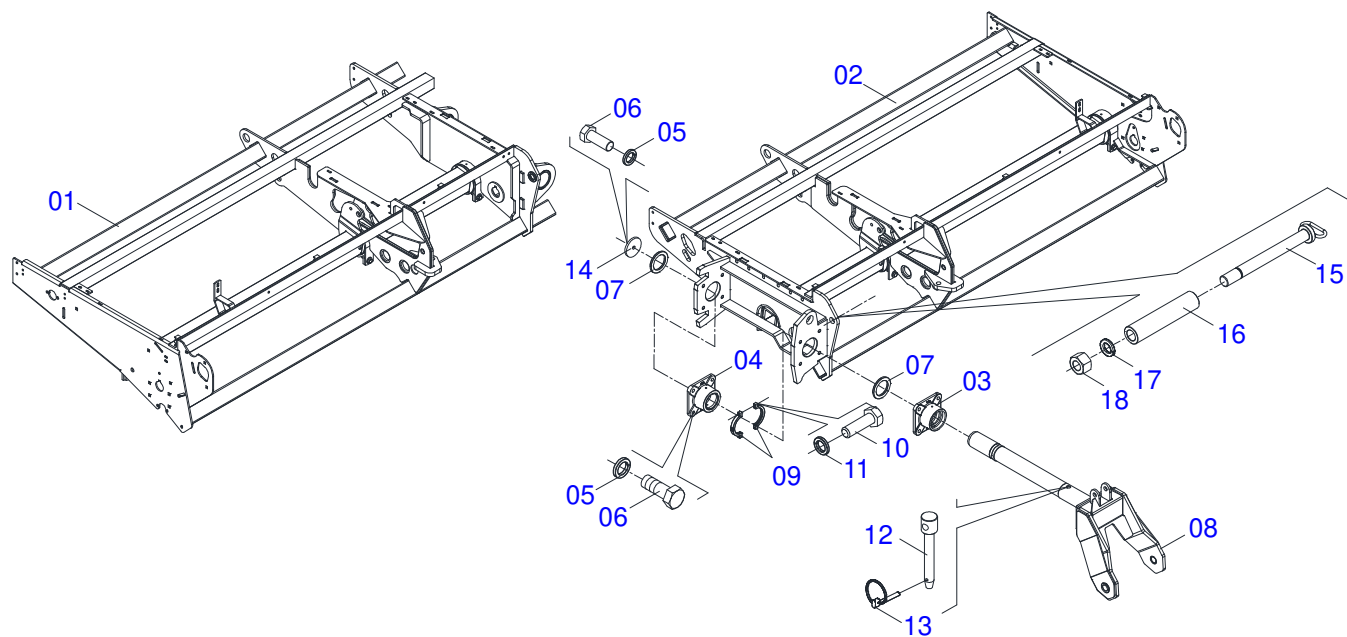


Item	Code	Description	See page	QT
001	0511056786	RIGHT FRAME WITH WHEEL AXLE - FRAME 5950	6	01
002	0511056785	LEFT FRAME WITH WHEEL AXLE - FRAME 5950	7	01
003	0501110791	DRIVER WHEEL HUB		01
004	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		01
005	0503011442	3/4" SPRING WASHER		09
006	0501010098	3/4" UNC BOLT		09
007	0571010094	SLEEVE FLANGE		02
008	0521065616	ARTICULATION		01
009	0502012698	CLAMP		02
010	0503010365	NUT		02
011	0503011444	SPRING WASHER		02
012	0571013510	LOCK AXLE		01
013	0503030085	LOCK PIN		01
014	0571010095	FLAT WASHER		01
015	0521063003	LOCK PIN		01
016	0571010969	LOCK SLEEVE FRAME		01
017	0503013627	1.1/2 SPRING WASHER		01
018	0501010110	1.1/2" NUT		01

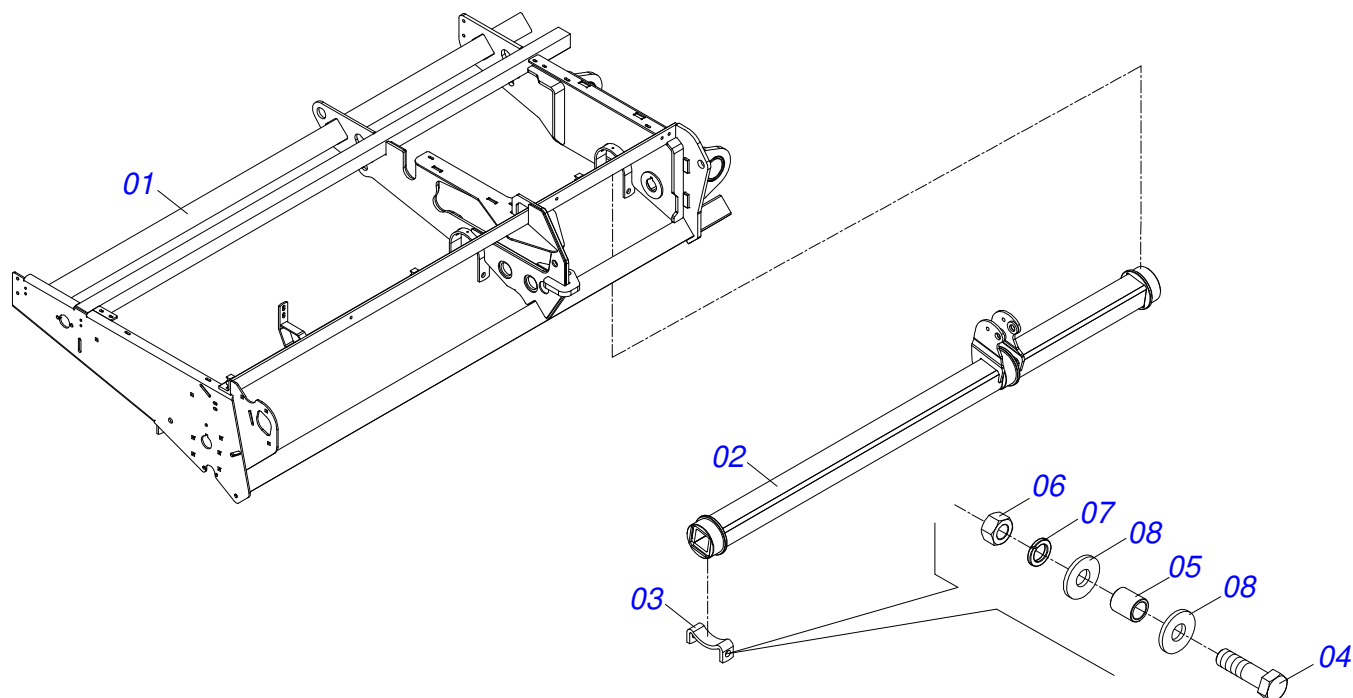


Item	Code	Description	See page	QT
001	0521065512	CH RIGHT		01
002	0521063930	PIVOT SHAFT		01
003	0521013199	LOWER BEARING SEMI		03
004	0503010899	5/8" X 2-1/4" BOLT		06
005	0531013922	0.6" X 0.8" X 1" SLEEVE		06
006	0503010013	5/8" NUT		06
007	0503011445	SPRING WASHER		06
008	0501012140	FLAT WASHER		12

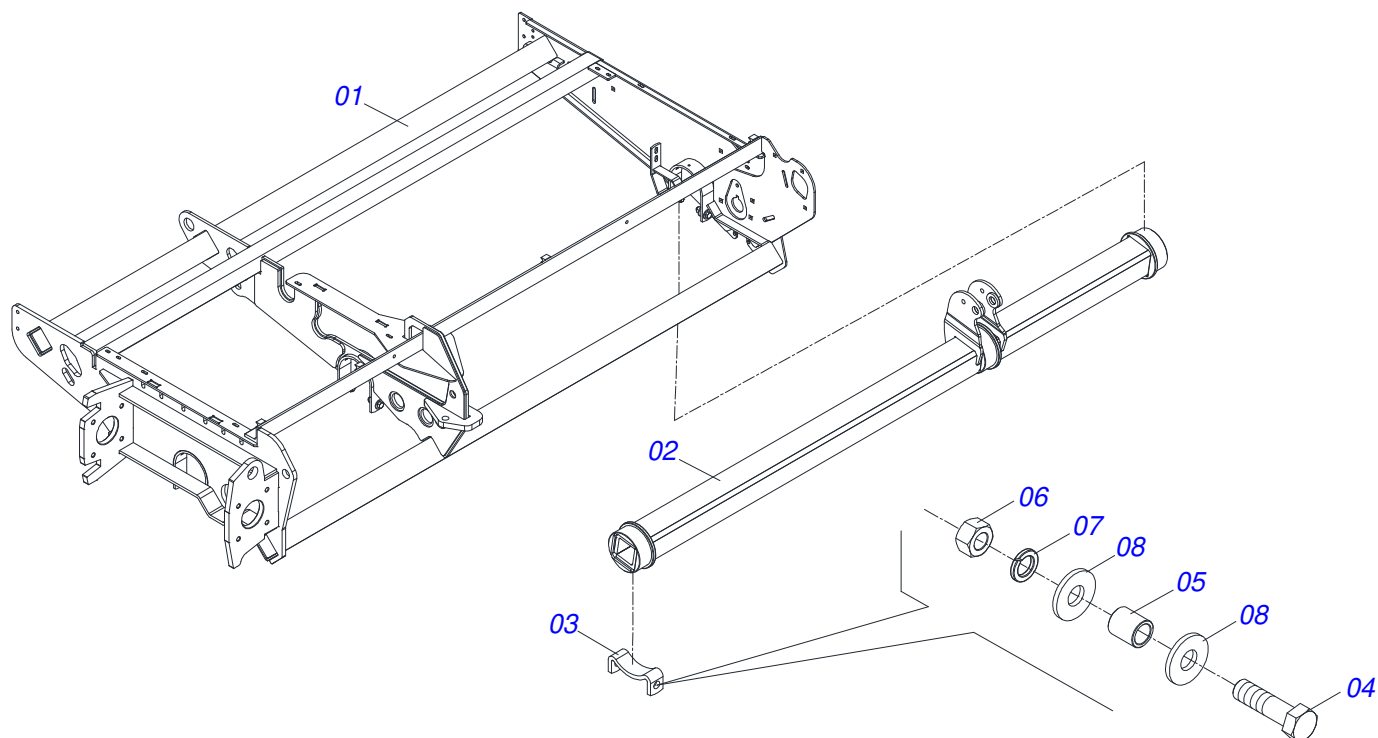


Item	Code	Description	See page	QT
001	0521065632	CH LEFT		01
002	0521063929	CARRYING-WHEELS PIVOT SHAFT		01
003	0521013199	LOWER BEARING SEMI		03
004	0503010899	5/8" X 2-1/4" BOLT		06
005	0531013922	0.6" X 0.8" X 1" SLEEVE		06
006	0503010013	5/8" NUT		06
007	0503011445	SPRING WASHER		06
008	0501012140	FLAT WASHER		12

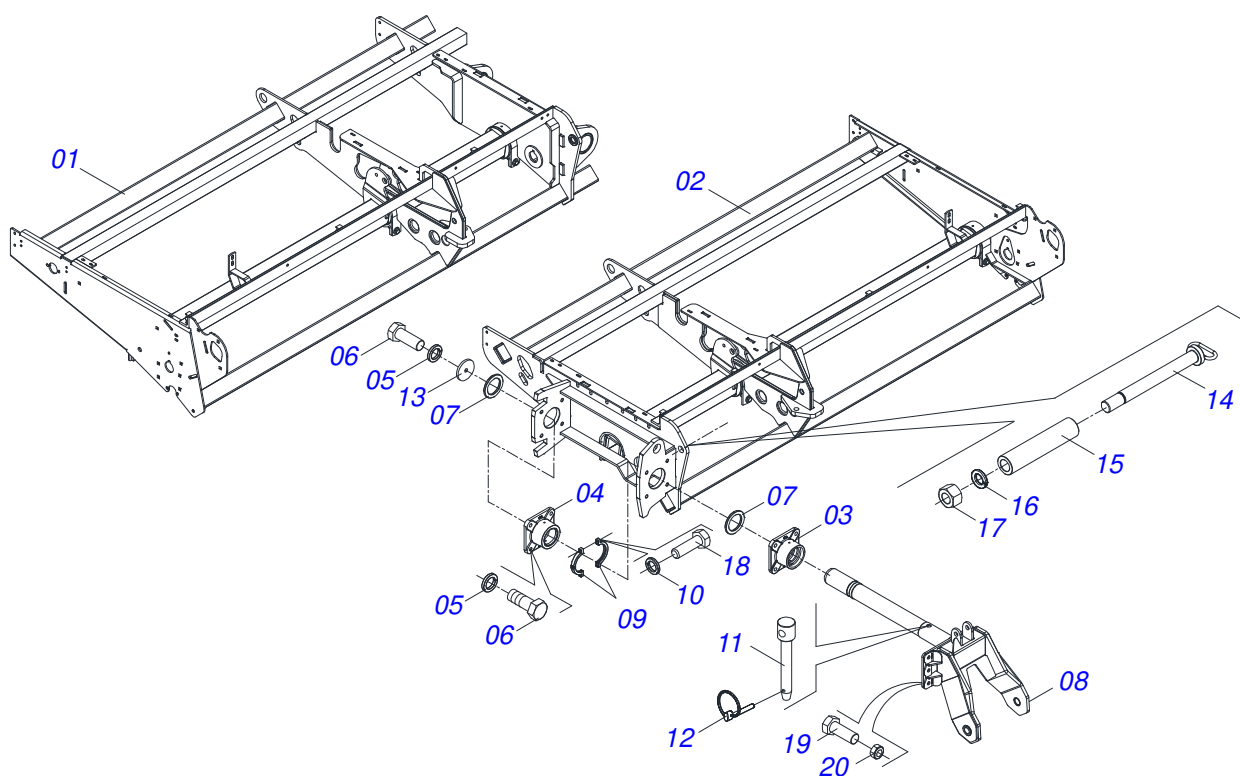

Item	Code	Description	See page	QT
001	0511056546	RIGHT FRAME WITH WHEEL AXLE - FRAME 4880	3	01
002	0511056738	LEFT FRAME WITH WHEEL AXLE - FRAME 4880	4	01
003	0501110791	DRIVER WHEEL HUB		01
004	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		01
005	0503011442	3/4" SPRING WASHER		09
006	0501010098	3/4" UNC BOLT		09
007	0571010094	SLEEVE FLANGE		02
008	0521065616	ARTICULATION		01
009	0502012698	CLAMP		02
010	0503011444	SPRING WASHER		02
011	0571013510	LOCK AXLE		01
012	0503030085	LOCK PIN		01
013	0571010095	FLAT WASHER		01
014	0521063003	LOCK PIN		01
015	0571010969	LOCK SLEEVE FRAME		01
016	0503013627	1.1/2 SPRING WASHER		01
017	0501010110	1.1/2" NUT		01
018	0503010365	NUT		02
019	0501018059	3/4" X 2-1/4" BOLT		03
020	0503011255	3/4" LOCK NUT		03

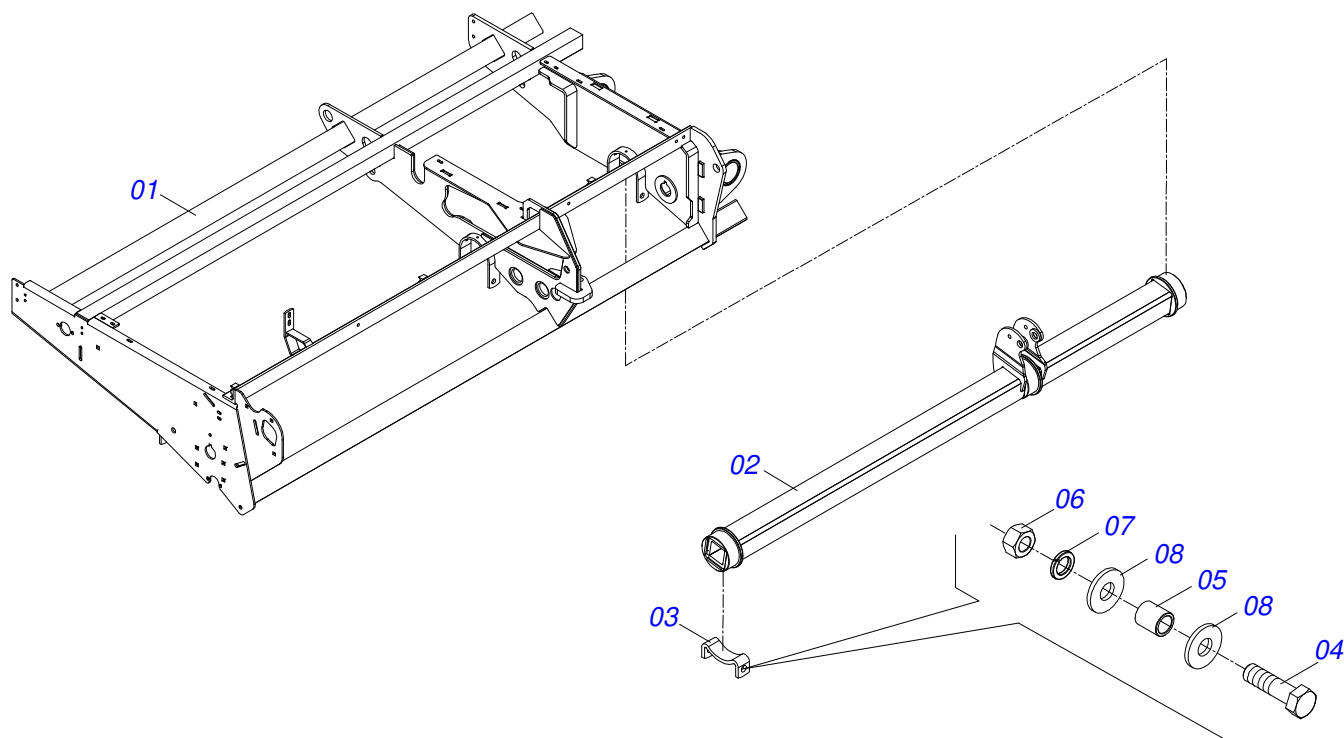


Item	Code	Description	See page	QT
001	0521065639	CH RIGHT		01
002	0521063938	CARRYING-WHEELS PIVOT SHAFT		01
003	0521013199	LOWER BEARING SEMI		03
004	0503010899	5/8" X 2-1/4" BOLT		06
005	0531013922	0.6" X 0.8" X 1" SLEEVE		06
006	0503010013	5/8" NUT		06
007	0503011445	SPRING WASHER		06
008	0501012140	FLAT WASHER		12

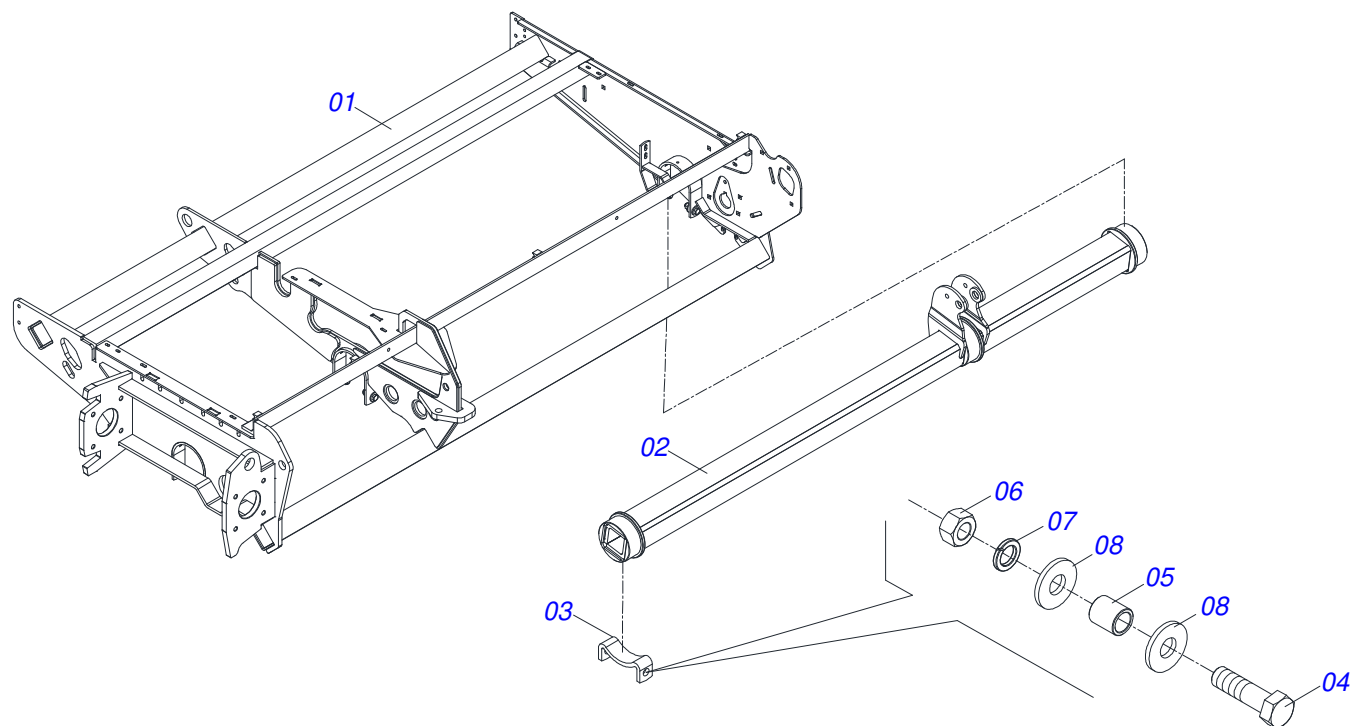


Item	Code	Description	See page	QT
001	0521065634	CH LEFT		01
002	0521063937	PIVOT SHAFT		01
003	0521013199	LOWER BEARING SEMI		03
004	0503010899	5/8" X 2-1/4" BOLT		06
005	0531013922	0.6" X 0.8" X 1" SLEEVE		06
006	0503010013	5/8" NUT		06
007	0503011445	SPRING WASHER		06
008	0501012140	FLAT WASHER		12

HEADER ASSY


0909095402

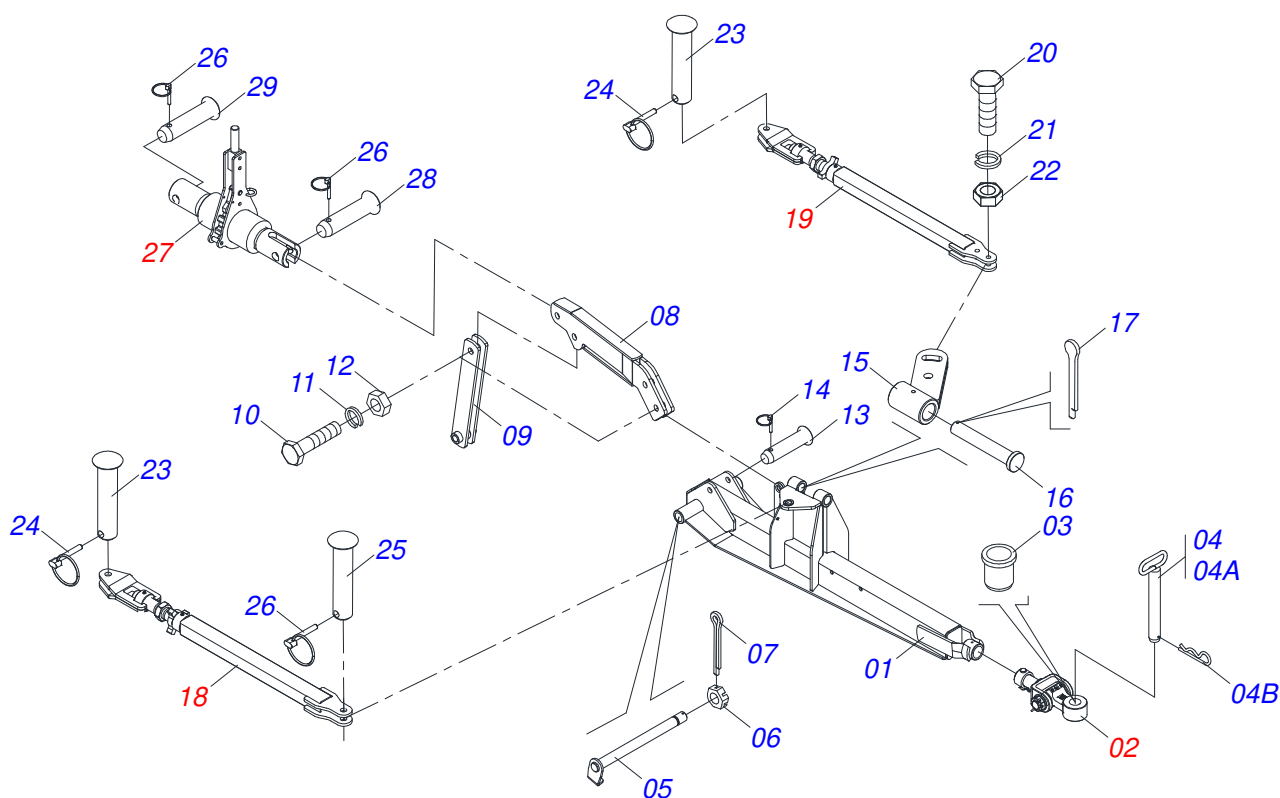


Item	Code	Description	See page	QT
01	0521065557	CABEÇALHO		01
02	0511054601	FULL ARTICULATED TRACTOR HITCH	9	01
03	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
04	0511053179	TRACTOR HITCH AXLE		01
04A	0521064036	TRACTOR HITCH AXLE		01
04B	0503030012	HAIR PIN		01
05	0521063529	LOCK AXLE		01
06	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
07	0503010010	1/4" X 2.1/2" COTTERPIN		01
08	0521063528	EXTENDING FIXER		01
09	0521062916	LEFT FRENCH HAND		01
10	0501010171	BOLT 1 UNC X 3.1/2 C S G.5		02
11	0503010012	1" SPRING WASHER		02
12	0501010059	1.5/8 NUT		02
13	0521010585	0.9" X 5.9" COUPLING SHAFT		01
14	0503030085	LOCK PIN		01
15	0521064203	EAR PIVOT DRAWBAR		01
16	0571010661	PIVOT SHAFT		01
17	0503010010	1/4" X 2.1/2" COTTERPIN		01
18	0521053311	RIGHT EXTENSOR HEAD 36,00 - 4880/5720/5950	10	01
19	0521053310	LEFT EXTENSION HEADER 36.00 - 4880/5720/5950	11	01
20	0501010500	3/4"X3"BOLT		02
21	0503010023	3/4" SPRING WASHER		02
22	0503010014	3/4" NUT		02
23	0571019949	JUNCTION SHAFT		02
24	0503030119	LOCK PIN		02
25	0521010573	0.9" X 3.1" COUPLING SHAFT		01
26	0503030085	LOCK PIN		03
27	0511052311	3 POINT TURNBUCKLE	12	01
28	0521012532	0.9" X 3.9" COUPLING SHAFT		01
29	0521010582	COUPLING SHAFT		01

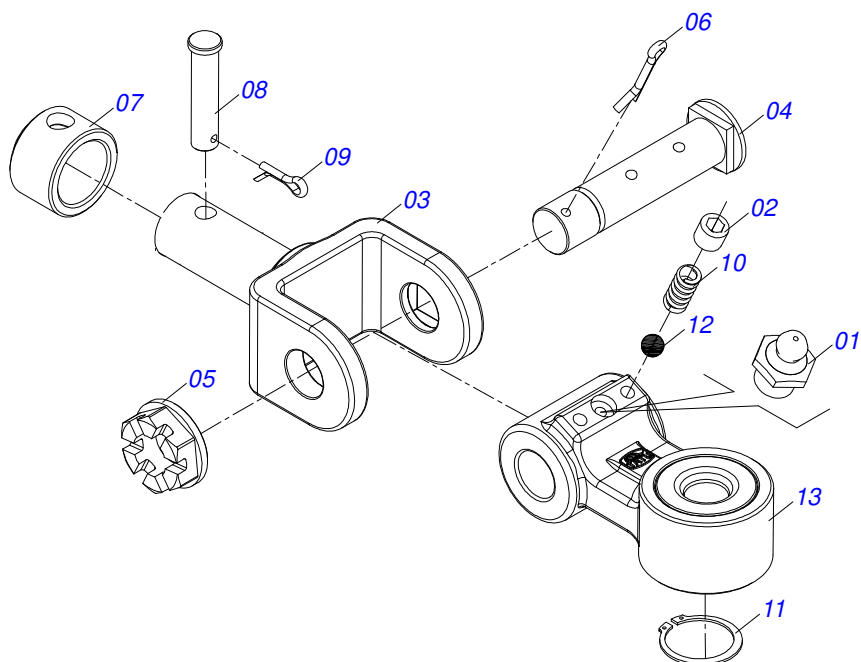


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0571012612	PIVOT SHAFT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2 COTTERPIN		01
10	0503033731	COMPRESSION SPRING LEFT		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

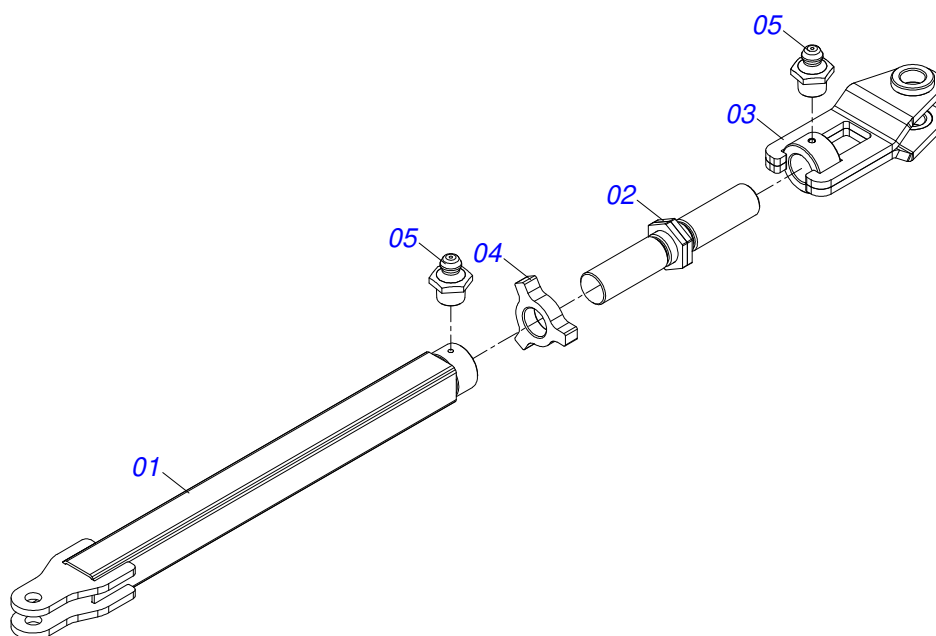


Item	Code	Description	See page	QT
01	0521064425	POINT FIXER EXTENDING RIGHT		01
02	0501078990	TURNBUCLE AXLE		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0503010002	1800 GREASE FITTING		02

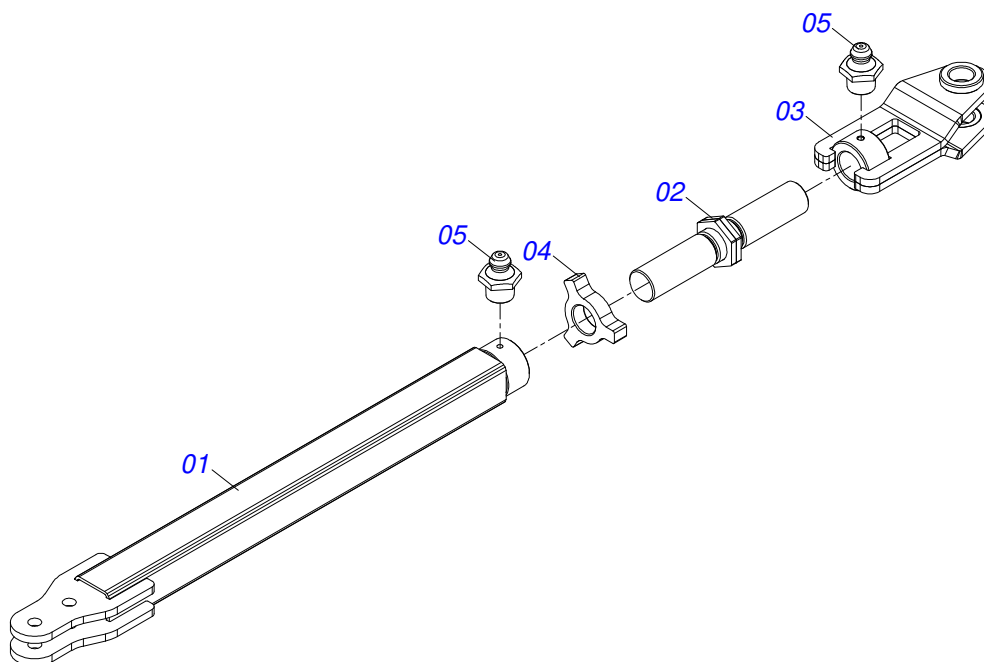


Item	Code	Description	See page	QT
01	0521064426	POINT FIXER EXTENDING LEFT		01
02	0501078990	TURNBUCLE AXLE		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0503010002	1800 GREASE FITTING		02

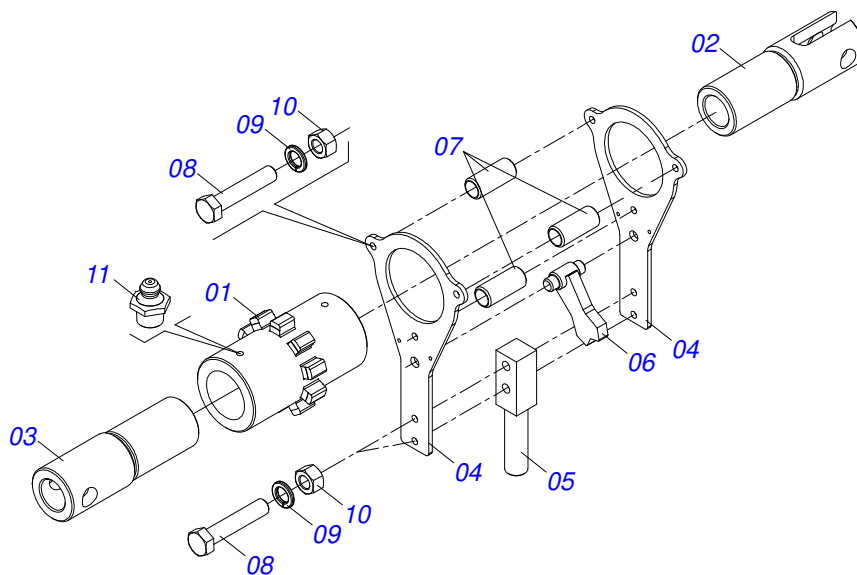

Item	Code	Description	See page	QT
01	0502012783	STABILIZER BODY GREATER		01
02	0571012279	JACK RIGHT		01
03	0571012280	JACK LEFT		01
04	0531010264	SIDE RATCHET		02
05	0521018500	SHAFT LEVER EXTENSOR		01
06	0511061881	RATCHET FOLLOWER		01
07	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
08	0503011179	3/8" X 2-1/4" BOLT		05
09	0503011443	3/8" SPRING WASHER		05
10	0503010026	3/8" NUT		05
11	0503010002	1800 GREASE FITTING		02

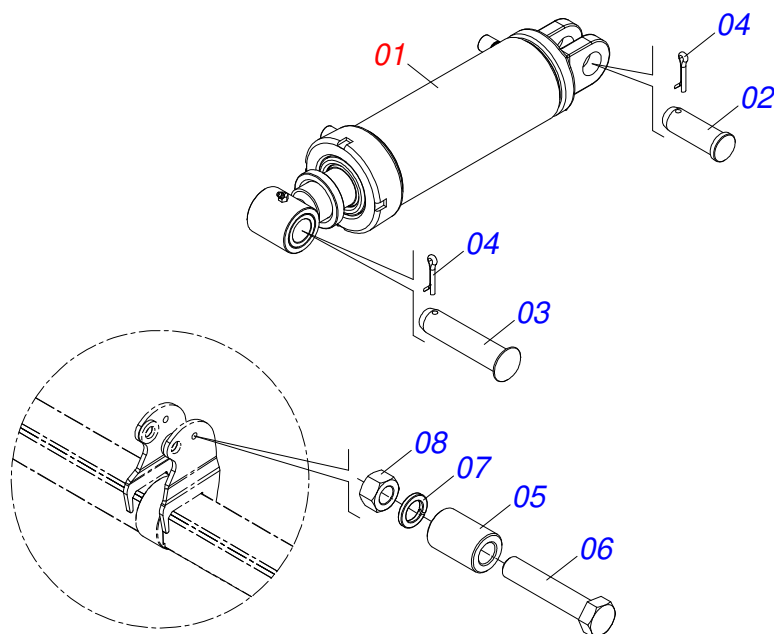


Item	Code	Description	See page	QT
01	0511058406	HYDRAULIC CYLINDER	14	02
02	0521012538	1.2" X 3.5" COUPLING SHAFT		02
03	0521012536	COUPLING SHAFT		02
04	0503010523	1/4" X 2" COTTERPIN		04
05	0531012565	SLEEVE 16,3X 30 X 88		02
06	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02
07	0503010027	5/8" SPRING WASHER		02
08	0503010013	5/8" NUT		02

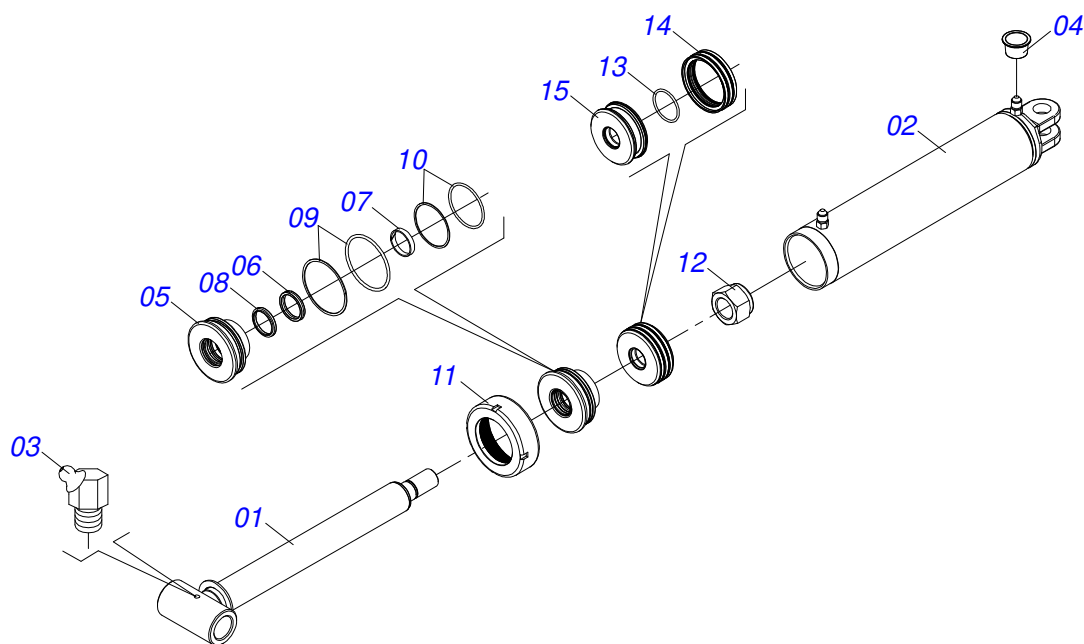


Item	Code	Description	See page	QT
01	0511064053	SLEEVE 2" X 14" TURNBUCLE		01
02	0511064052	4" X 12.1" CYLINDER CASE		01
03	0503010003	1845 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010678	50,80 X 101 RING SUPPORT		01
06	0503015636	SCRAPER SEAL		01
07	0503018025	RING GUIDE		01
08	0503018026	1870-2000-375 B GASKET		01
09	0503010338	2-342 N 3006-9B O-RING		02
10	0503011061	8-342 BACK-UP RING		02
11	0502012822	101.60 END CAP		01
12	0503010817	1.1/4" SELF LOCKING NUT		01
13	0503010345	2-218 N 3006-9B O-RING		01
14	0503015633	SELEMASTER SEALING		01
15	0502012842	50,80 X 101,60 PISTON		01

HUB SPINDLE ASSY


0521043312

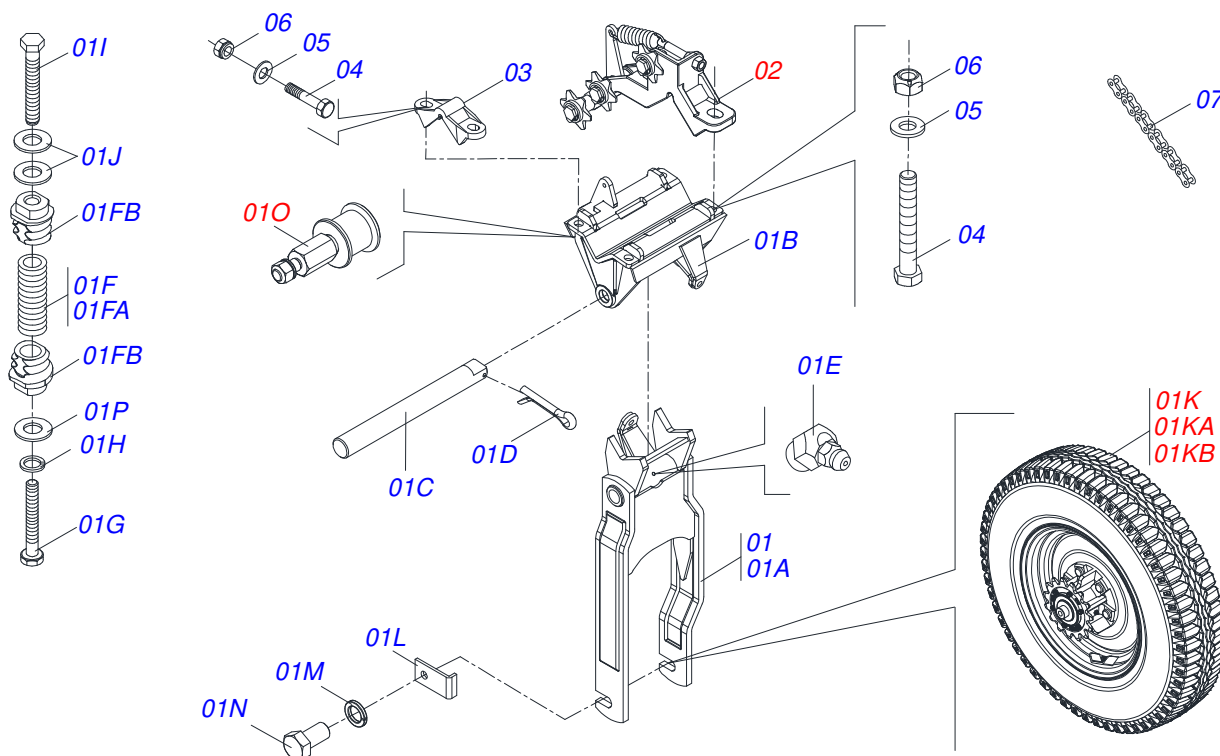


Item	Code	Description	See page	QT
01	0511054335	WHEEL SUPPORT ASSY		01
01A	0521061566	CARRYING WHEEL ARM TRACTION		01
01B	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
01C	0531016887	CARRYING WHEEL AXLE ARM		01
01D	0503010523	1/4" X 2" COTTERPIN		01
01E	0503010003	1845 GREASE FITTING		01
01F	0511050681	TRACTION SPRING		01
01FA	0503031681	2.1" X 7.78" EXTENSION SPRING		01
01FB	0561016062	SPRING HITCH		02
01G	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
01H	0503010027	5/8" SPRING WASHER		01
01I	0503013030	5/8" X 3.1/4" BOLT		01
01J	0551017715	FLAT WASHER		02
01K	0511052770	WHEEL WITH TIRE 7.00X16 ASSY WHEELED BOX	17	01
01KA	0503062159	WHEEL		01
01KB	0511052769	WHEEL TRANSMISSION WITHOUT TIRE	18	01
01L	0521012190	AXLE LOCK		02
01M	0503010027	5/8" SPRING WASHER		02
01N	0503011167	M16 X 2 X 30 BOLT		02
01O	0501058241	TENSIONER CHAIN SUPPORT	19	01
01P	0501012140	FLAT WASHER		01
02	0501058240	WHELL FASTENER WITH STRETCHER	16	01
03	0502011308	WHELL FASTENER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

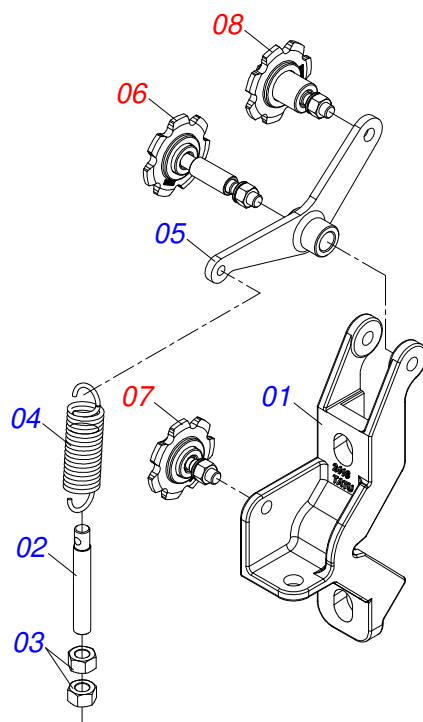


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8" NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	STRETCHER INTERMEDIATE RODE CURRENT		01
07	0501058244	STRETCHER FIXED CURRENT		01
08	0501058242	MOVIL CHAIN TENSIONER		01

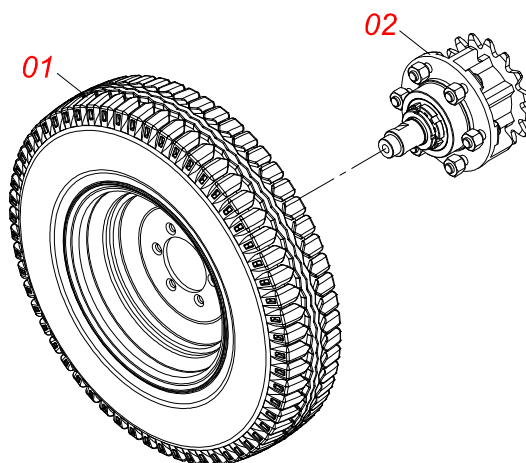


Item	Code	Description	See page	QT
01	0503062159	WHEEL		01
02	0511052769	WHEEL TRANSMISSION WITHOUT TIRE	18	01

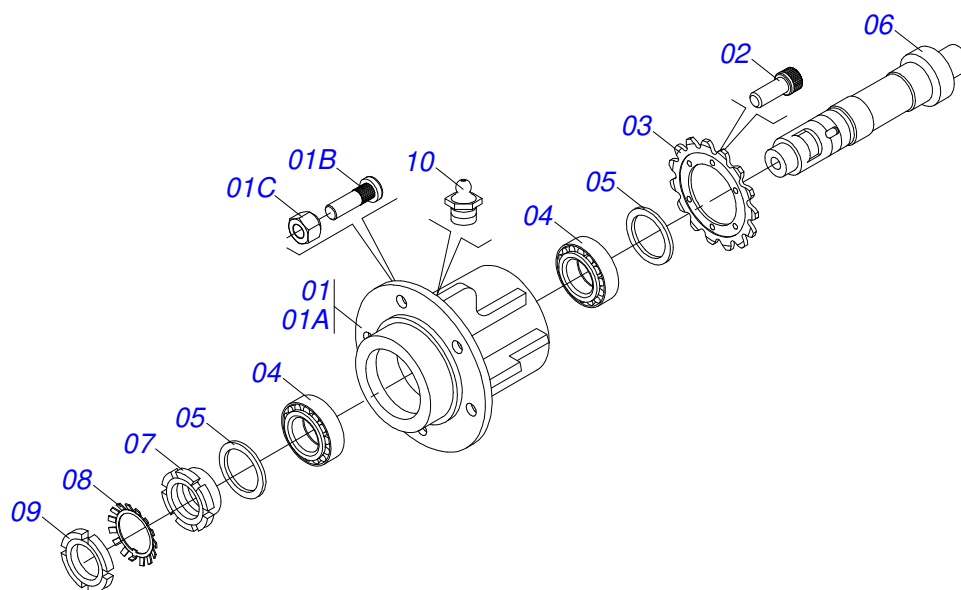


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503012550	5/16" X 3/4" BOLT		06
03	0502011339	15Z GEAR P 1.25"		01
04	0503010328	25590/25523 ROLLER BEARING		02
05	0503010804	00547-B SEAL		02
06	0521012185	TRANSM AXLE CARRYING-WHEEL		01
07	0511015949	LOCK NUT		01
08	0503010329	LOCK WASHER		01
09	0503010330	KM 9 LOCKNUT		01
10	0503010002	1800 GREASE FITTING		01

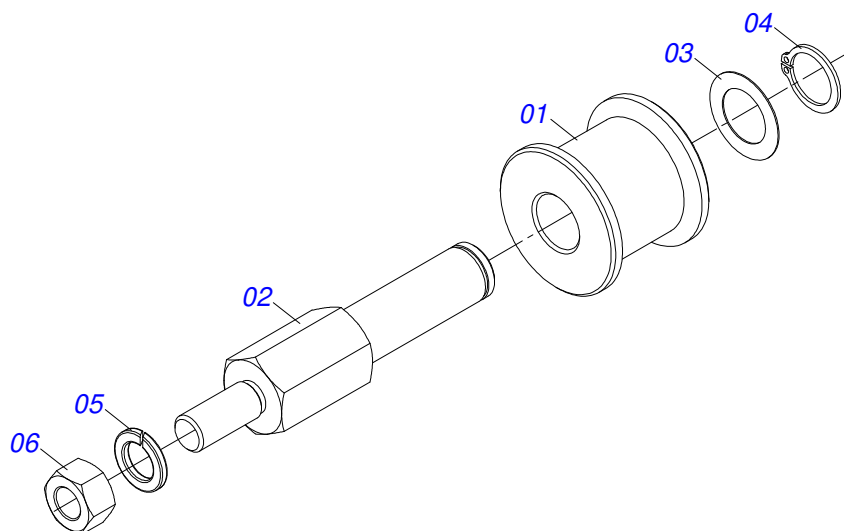

Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	FERT CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

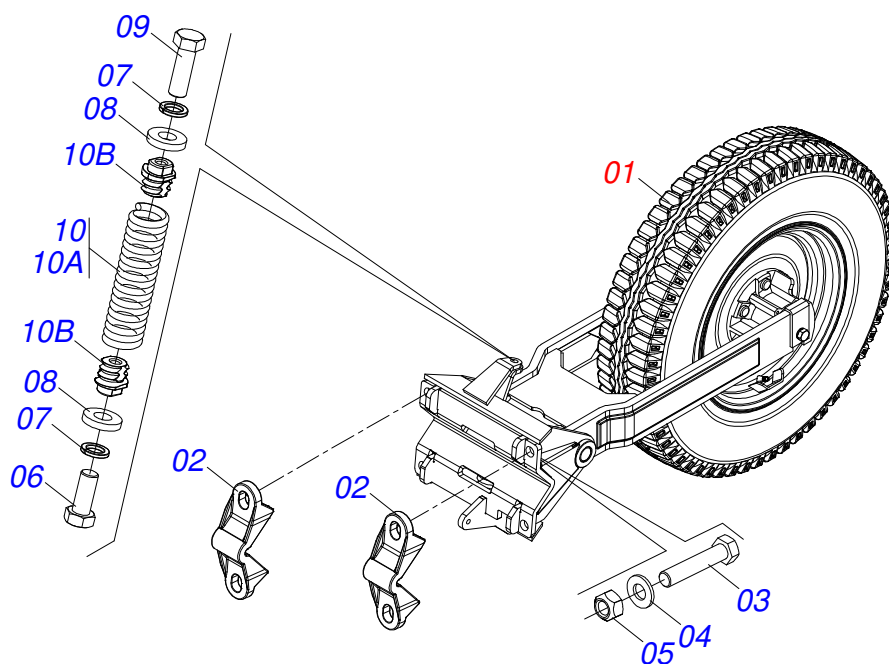


Item	Code	Description	See page	QT
01	0511054336	SUPPORT WHEELED WITHOUT TRANSMISSION	01	
02	0502010584	CARRYING-WHEELS SUPPORT FIXER	02	
03	0503011119	7/8" X 6" BOLT	04	
04	0501014251	FLAT WASHER	04	
05	0503011254	7/8" HEX SELF ADJUSTING NUT	04	
06	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN	01	
07	0503010027	5/8" SPRING WASHER	02	
08	0551017715	FLAT WASHER	02	
09	0503013030	5/8" X 3.1/4" BOLT	01	
10	0511050681	TRACTION SPRING	01	
10A	0503031681	2.1" X 7.78" EXTENSION SPRING	01	
10B	0561016062	SPRING HITCH	02	

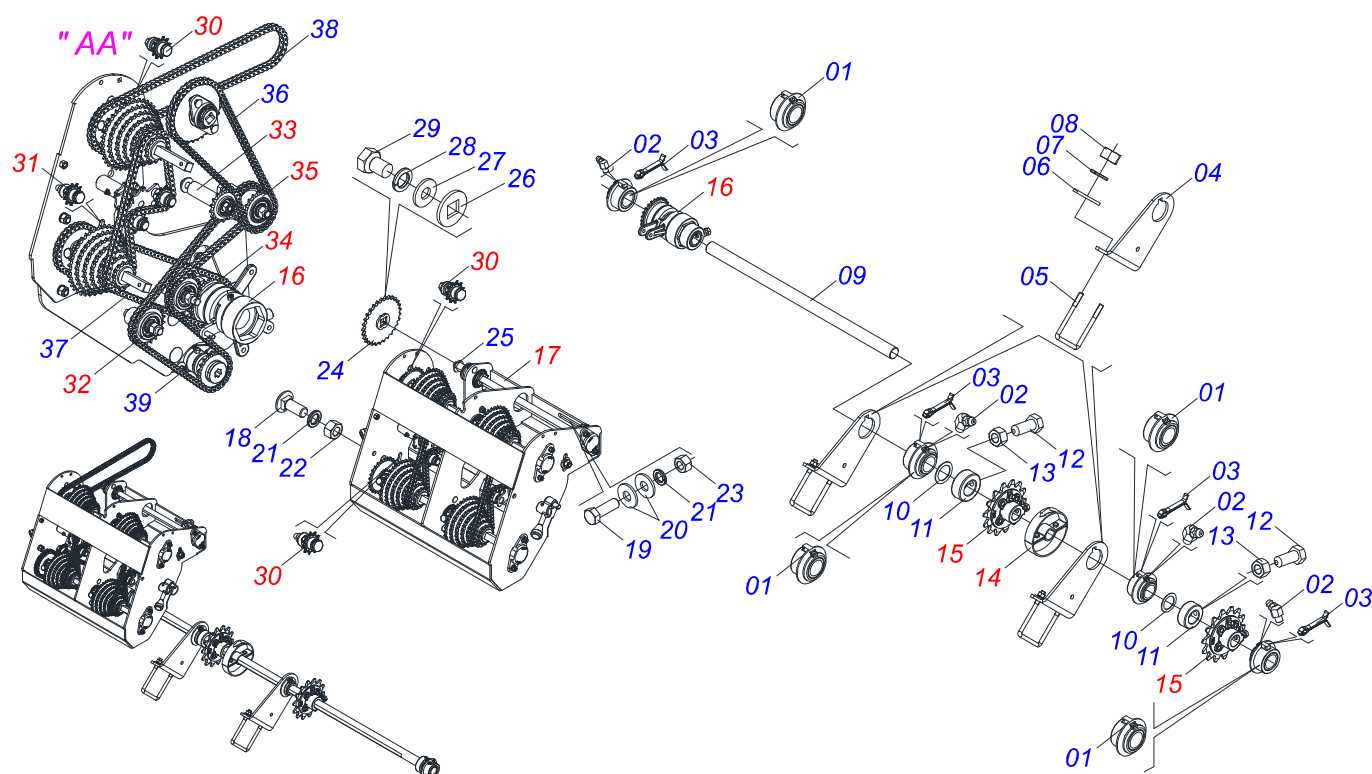


Item	Code	Description	See page	QT
01	0501110639	BEARING		04
02	0503011099	GREASE FITTING		04
03	0503010300	5/32" X 1" COTTERPIN		04
04	0551019114	MOTOR BEARING AXLE SUPPORT		02
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
06	0511017302	FLAT WASHER		04
07	0503010019	1/2" SPRING WASHER		04
08	0503010060	1/2" NUT		04
09	0561016876	MOTOR SHAFT		01
10	0501018466	FLAT WASHER		02
11	0511015961	LOCK BUSHING		02
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		02
13	0503010060	1/2" NUT		02
14	0501052560	AXLE MOTOR SLOW-MOVING ASSY		01
15	0511051434	TRANSMISSION DRIVING ASSY	25	02
16	0511047069	SIDE TRANSMISSION DRIVING		01
17	0521043316	RIGHT GEAR BOX ASSY		01
18	0501010243	1/2" X 1-1/2" BOLT		03
19	0503010920	1/2" X 1.1/2" BOLT		02
20	0511017302	FLAT WASHER		04
21	0503010019	1/2" SPRING WASHER		05
22	0503012682	1/2" BSW NUT		03
23	0503010060	1/2" NUT		02
24	0521064448	GEAR		01
25	0503030275	AGRICULTURAL BEARING		01
26	0501010637	FLAT WASHER		02
27	0501010984	FLAT WASHER		01
28	0503010025	3/8" SPRING WASHER		01
29	0503010256	3/8" X 3/4" BOLT		01
30	0511054363	CHAIN TENSIONER		01
31	0521055217	LOWER CURRENT STRETCH		01

Item	Code	Description	See page	QT
32	0501058254	UPPER SEED CHAIN TENSIONER		01
33	0521055216	BEARING WITH GEAR		01
34	0521055218	BEARING GEAR WITH DOUBLE		01
35	0501055112	MICRO GRANULATED CHAIN TENSIONER		01
36	0503012204	40-1 CHAIN X 82 LINK + RED		01
37	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
38	0503012718	40-1 CHAIN X 111 LINK + MENDING		01
39	0503014907	40-1 X 151 CHAIN LINK + MENDING		01

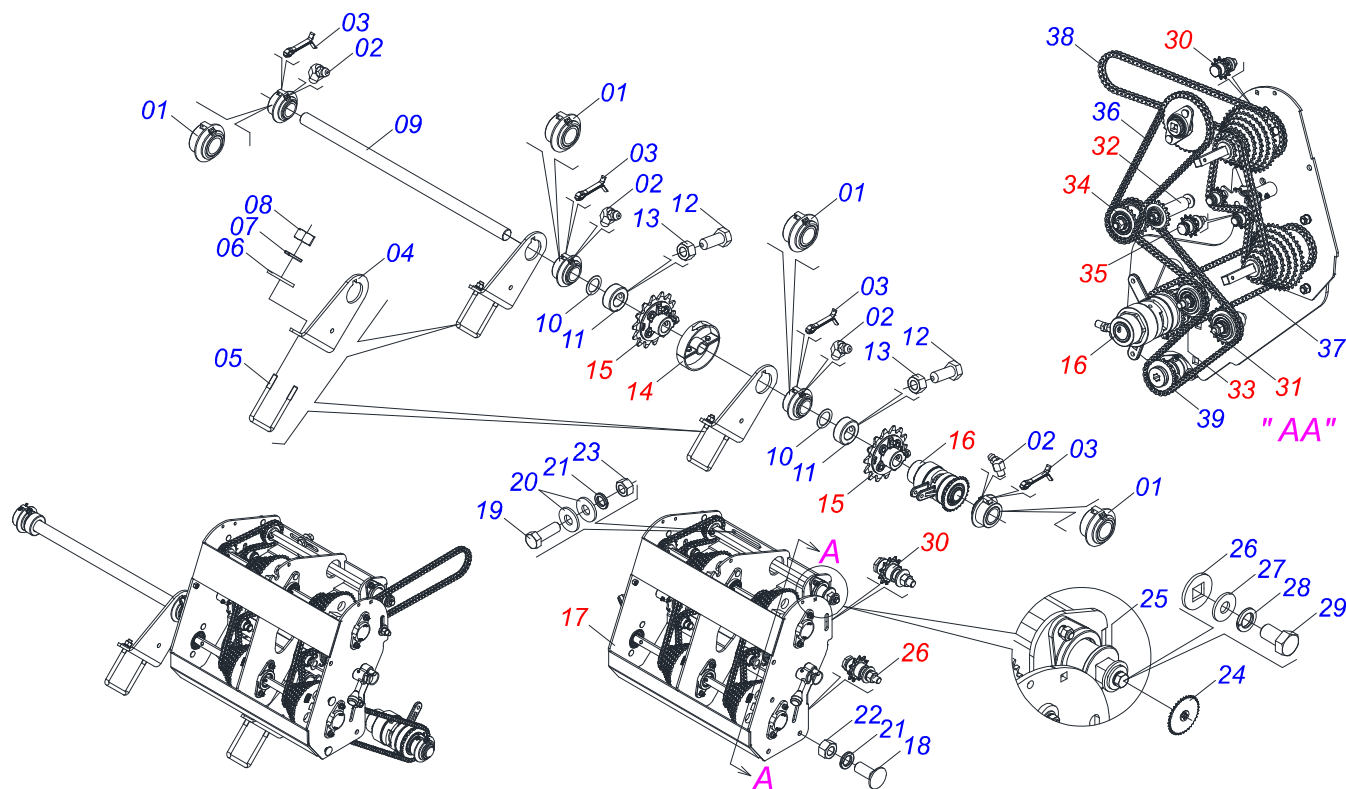


Item	Code	Description	See page	QT
01	0501110639	BEARING		04
02	0503011099	GREASE FITTING		04
03	0503010300	5/32" X 1" COTTERPIN		04
04	0551019114	MOTOR BEARING AXLE SUPPORT		02
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
06	0511017302	FLAT WASHER		04
07	0503010019	1/2" SPRING WASHER		04
08	0503010060	1/2" NUT		04
09	0561016876	MOTOR SHAFT		01
10	0501018466	FLAT WASHER		02
11	0511015961	LOCK BUSHING		02
12	0503030679	BOLT 1/2 UNC X 1.1/4 C50P G.5 ZN		02
13	0503010060	1/2" NUT		02
14	0501052560	AXLE MOTOR SLOW-MOVING ASSY		01
15	0511051434	TRANSMISSION DRIVING ASSY	25	02
16	0511047070	LH SIDE TRANSMISSION DRIVING	26	01
17	0521043317	LEFT GEAR BOX ASSY	27	01
18	0501010243	1/2" X 1-1/2" BOLT		03
19	0503010920	1/2" X 1.1/2" BOLT		02
20	0511017302	FLAT WASHER		04
21	0503010019	1/2" SPRING WASHER		05
22	0503012682	1/2" BSW NUT		03
23	0503010060	1/2" NUT		02
24	0521064448	GEAR		01
25	0503030275	AGRICULTURAL BEARING		01
26	0501010637	FLAT WASHER		02
27	0501010984	FLAT WASHER		01
28	0503010025	3/8" SPRING WASHER		01
29	0503010256	3/8" X 3/4" BOLT		01
30	0511054363	CHAIN TENSIONER		01
31	0501058265	STRETCHER LOWER CURRENT 21Z SEED		01

Item	Code	Description	See page	QT
32	0501058254	UPPER SEED CHAIN TENSIONER		01
33	0501058266	BEARING WITH 21Z GEAR INTERMEDIATE SEED		01
34	0501058267	DOUBLE BEARING WITH 17Z GEAR SEED		01
35	0501055112	MICRO GRANULATED CHAIN TENSIONER		01
36	0503012204	40-1 CHAIN X 82 LINK + RED		01
37	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
38	0503012718	40-1 CHAIN X 111 LINK + MENDING		01
39	0503014907	40-1 X 151 CHAIN LINK + MENDING		01

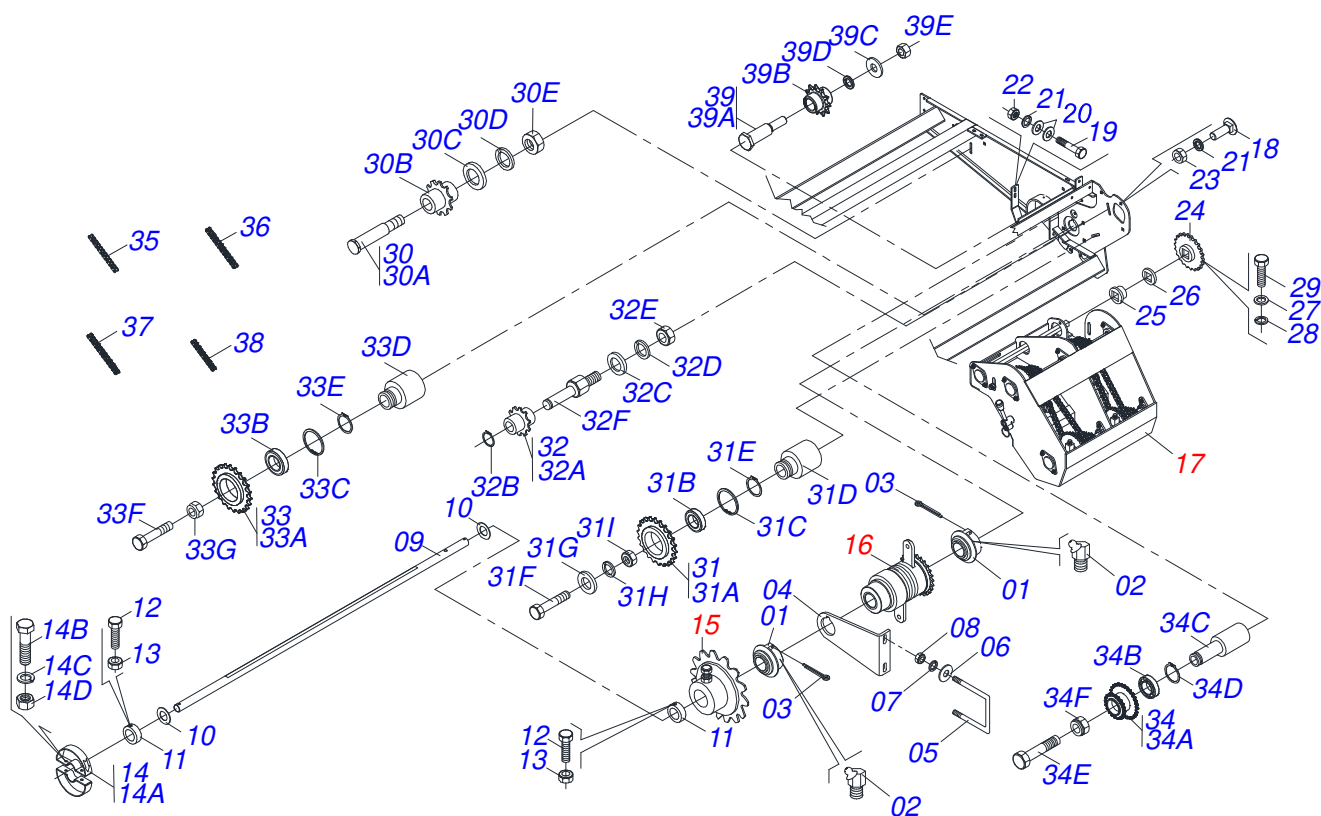


Item	Code	Description	See page	QT
01	0501110639	BEARING		04
02	0503011099	GREASE FITTING		04
03	0503010300	5/32" X 1" COTTERPIN		04
04	0551019114	MOTOR BEARING AXLE SUPPORT		02
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
06	0511017302	FLAT WASHER		04
07	0503010019	1/2" SPRING WASHER		04
08	0503010060	1/2" NUT		04
09	0571011442	MOTOR SHAFT		01
10	0501018466	FLAT WASHER		02
11	0511015961	LOCK BUSHING		02
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		02
13	0503010060	1/2" NUT		02
14	0501052560	AXLE MOTOR SLOW-MOVING ASSY		01
14A	0503031825	AXLE MOTOR SLOW-MOVING		02
14B	0503010240	5/16" X 3/4" BOLT		02
14C	0503010179	5/16" ZN SPRING WASHER		02
14D	0503010337	5/16" NUT		02
15	0511051434	TRANSMISSION DRIVING ASSY	25	02
16	0511047069	SIDE TRANSMISSION DRIVING		01
17	0521043316	RIGHT GEAR BOX ASSY		01
18	0501010243	1/2" X 1-1/2" BOLT		03
19	0503010920	1/2" X 1.1/2" BOLT		02
20	0511017302	FLAT WASHER		04
21	0503010019	1/2" SPRING WASHER		05
22	0503012682	1/2" BSW NUT		03
23	0503010060	1/2" NUT		02
24	0521064448	GEAR		01
25	0503030275	AGRICULTURAL BEARING		01
26	0501010637	FLAT WASHER		02
27	0501010984	FLAT WASHER		01

Item	Code	Description	See page	QT
28	0503010025	3/8" SPRING WASHER		01
29	0503010256	3/8" X 3/4" BOLT		01
30	0511054363	CHAIN TENSIONER		01
30A	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
30B	0503031805	11Z 1/2" GEAR		01
30C	0511017302	FLAT WASHER		02
30D	0503010019	1/2" SPRING WASHER		01
30E	0503010060	1/2" NUT		01
31	0501058265	STRETCHER LOWER CURRENT 21Z SEED		01
31A	0511062169	21Z P 1/2" GEAR		01
31B	0503011410	ROLLER BEARING		01
31C	0503011105	SEAL RING		01
31D	0531017086	50 AXLETIGHTENER		01
31E	0503010406	501025 CLAMPING RING (FOR AXLE)		01
31F	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
31G	0501012140	FLAT WASHER		01
31H	0503010027	5/8" SPRING WASHER		01
31I	0503010013	5/8" NUT		01
32	0501058254	UPPER SEED CHAIN TENSIONER		01
32A	0503031805	11Z 1/2" GEAR		01
32B	0503010302	501019 SEAL RING		01
32C	0511017302	FLAT WASHER		01
32D	0503010019	1/2" SPRING WASHER		01
32E	0503010060	1/2" NUT		01
32F	0521018933	FERT CHAIN TENSIONER AXLE		01
33	0501058266	BEARING WITH 21Z GEAR INTERMEDIATE SEED		01
33A	0511062169	21Z P 1/2" GEAR		01
33B	0503011410	ROLLER BEARING		01
33C	0503011105	SEAL RING		01
33D	0531017086	50 AXLETIGHTENER		01
33E	0503010406	501025 CLAMPING RING (FOR AXLE)		01
33F	0501011234	5/8" X 3" BOLT		01
33G	0503012412	5/8 UNC SELF LOCKING NUT		01
34	0501058267	DOUBLE BEARING WITH 17Z GEAR SEED		01
34A	0511069680	20Z X 28Z DOBLE GEAR		01
34B	0503011410	ROLLER BEARING		02
34C	0551019175	DOUBLE GEAR AXLE		01
34D	0503010406	501025 CLAMPING RING (FOR AXLE)		01
34E	0503016460	5/8" X 4.1/2" BOLT		01
34F	0503012412	5/8 UNC SELF LOCKING NUT		01
35	0503012204	40-1 CHAIN X 82 LINK + RED		01
36	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
37	0503012718	40-1 CHAIN X 111 LINK + MENDING		01
38	0503014907	40-1 X 151 CHAIN LINK + MENDING		01
39	0501055112	MICRO GRANULATED CHAIN TENSIONER		01
39A	0531019479	AXLE CHAIN GEAR		01
39B	0503031805	11Z 1/2" GEAR		01
39C	0511017302	FLAT WASHER		02
39D	0503010019	1/2" SPRING WASHER		01
39E	0503010060	1/2" NUT		01

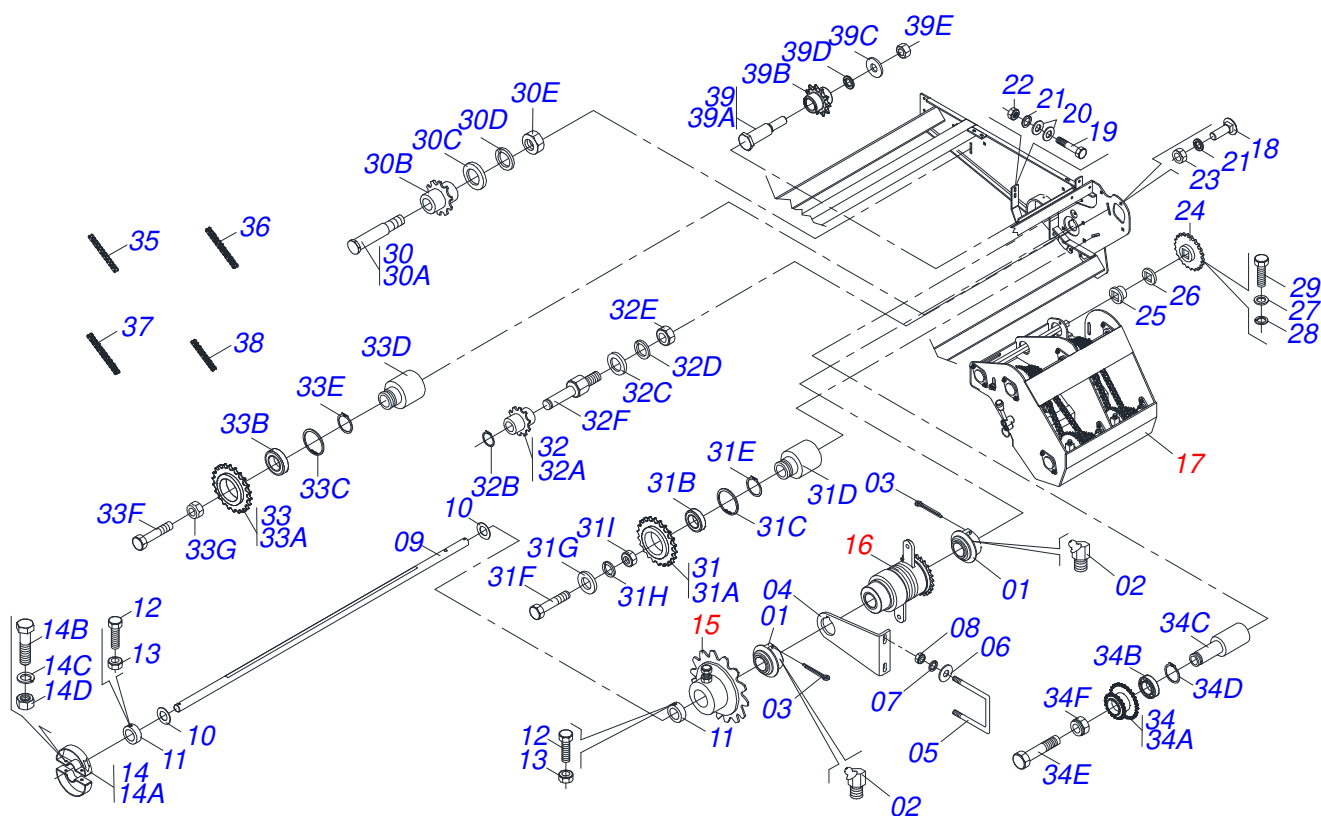


Item	Code	Description	See page	QT
001	0501110639	BEARING		04
002	0503011099	GREASE FITTING		04
003	0503010300	5/32" X 1" COTTERPIN		04
004	0551019114	MOTOR BEARING AXLE SUPPORT		02
005	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
006	0511017302	FLAT WASHER		04
007	0503010019	1/2" SPRING WASHER		04
008	0503010060	1/2" NUT		04
009	0571011442	MOTOR SHAFT		01
010	0501018466	FLAT WASHER		02
011	0511015961	LOCK BUSHING		02
012	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		02
013	0503010060	1/2" NUT		02
014	0501052560	AXLE MOTOR SLOW-MOVING ASSY		01
014A	0503031825	AXLE MOTOR SLOW-MOVING		02
014B	0503010240	5/16" X 3/4" BOLT		02
014C	0503010179	5/16" ZN SPRING WASHER		02
014D	0503010337	5/16" NUT		02
015	0511051434	TRANSMISSION DRIVING ASSY	25	02
016	0511047070	LH SIDE TRANSMISSION DRIVING	26	01
017	0521043317	LEFT GEAR BOX ASSY	27	01
018	0501010243	1/2" X 1-1/2" BOLT		03
019	0503010920	1/2" X 1.1/2" BOLT		02
020	0511017302	FLAT WASHER		04
021	0503010019	1/2" SPRING WASHER		05
022	0503012682	1/2" BSW NUT		03
023	0503010060	1/2" NUT		02
024	0521064448	GEAR		01
025	0503030275	AGRICULTURAL BEARING		01
026	0501010637	FLAT WASHER		02
027	0501010984	FLAT WASHER		01

Item	Code	Description	See page	QT
028	0503010025	3/8" SPRING WASHER		01
029	0503010256	3/8" X 3/4" BOLT		01
030	0511054363	CHAIN TENSIONER		01
030A	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
030B	0503031805	11Z 1/2" GEAR		01
030C	0511017302	FLAT WASHER		02
030D	0503010019	1/2" SPRING WASHER		01
030E	0503010060	1/2" NUT		01
031	0501058265	STRETCHER LOWER CURRENT 21Z SEED		01
031A	0511062169	21Z P 1/2" GEAR		01
031B	0503011410	ROLLER BEARING		01
031C	0503011105	SEAL RING		01
031D	0531017086	50 AXLETIGHTENER		01
031E	0503010406	501025 CLAMPING RING (FOR AXLE)		01
031F	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
031G	0501012140	FLAT WASHER		01
031H	0503010027	5/8" SPRING WASHER		01
031I	0503010013	5/8" NUT		01
032	0501058254	UPPER SEED CHAIN TENSIONER		01
032A	0503031805	11Z 1/2" GEAR		01
032B	0503010302	501019 SEAL RING		01
032C	0511017302	FLAT WASHER		01
032D	0503010019	1/2" SPRING WASHER		01
032E	0503010060	1/2" NUT		01
032F	0521018933	FERT CHAIN TENSIONER AXLE		01
033	0501058266	BEARING WITH 21Z GEAR INTERMEDIATE SEED		01
033A	0511062169	21Z P 1/2" GEAR		01
033B	0503011410	ROLLER BEARING		01
033C	0503011105	SEAL RING		01
033D	0531017086	50 AXLETIGHTENER		01
033E	0503010406	501025 CLAMPING RING (FOR AXLE)		01
033F	0501011234	5/8" X 3" BOLT		01
033G	0503012412	5/8 UNC SELF LOCKING NUT		01
034	0501058267	DOUBLE BEARING WITH 17Z GEAR SEED		01
034A	0511069680	20Z X 28Z DOBLE GEAR		01
034B	0503011410	ROLLER BEARING		02
034C	0551019175	DOUBLE GEAR AXLE		01
034D	0503010406	501025 CLAMPING RING (FOR AXLE)		01
034E	0503016460	5/8" X 4.1/2" BOLT		01
034F	0503012412	5/8 UNC SELF LOCKING NUT		01
035	0503012204	40-1 CHAIN X 82 LINK + RED		01
036	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
037	0503012718	40-1 CHAIN X 111 LINK + MENDING		01
038	0503014907	40-1 X 151 CHAIN LINK + MENDING		01
039	0501055112	MICRO GRANULATED CHAIN TENSIONER		01
039A	0531019479	AXLE CHAIN GEAR		01
039B	0503031805	11Z 1/2" GEAR		01
039C	0511017302	FLAT WASHER		02
039D	0503010019	1/2" SPRING WASHER		01
039E	0503010060	1/2" NUT		01

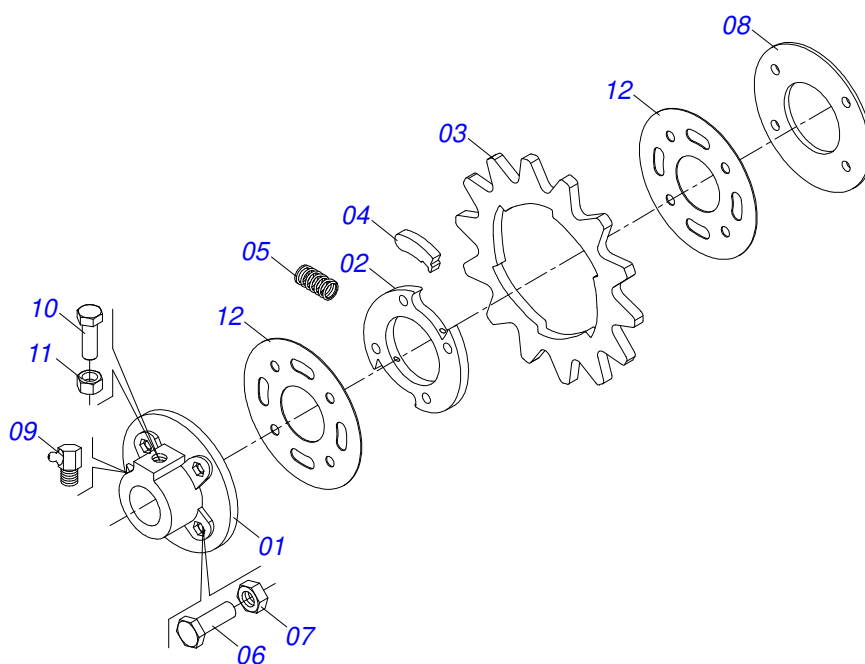


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

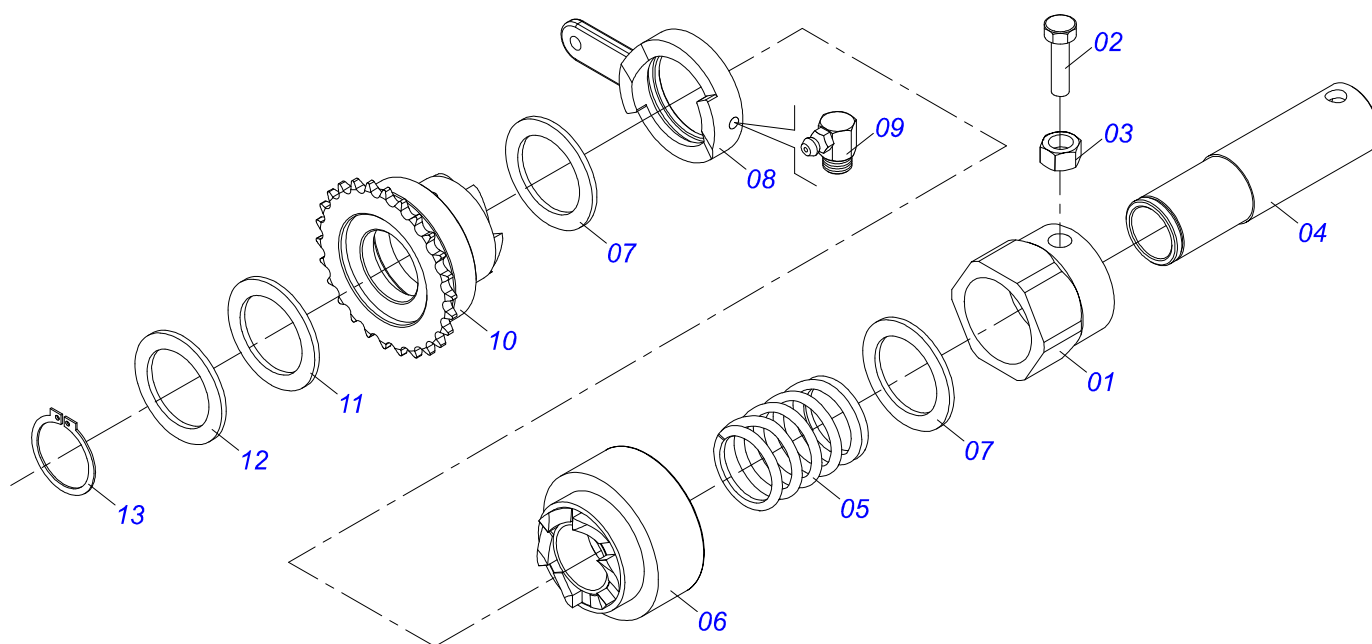


Item	Code	Description	See page	QT
01	0502011996	SLLEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

LEFT GEAR BOX ASSY

0521043317

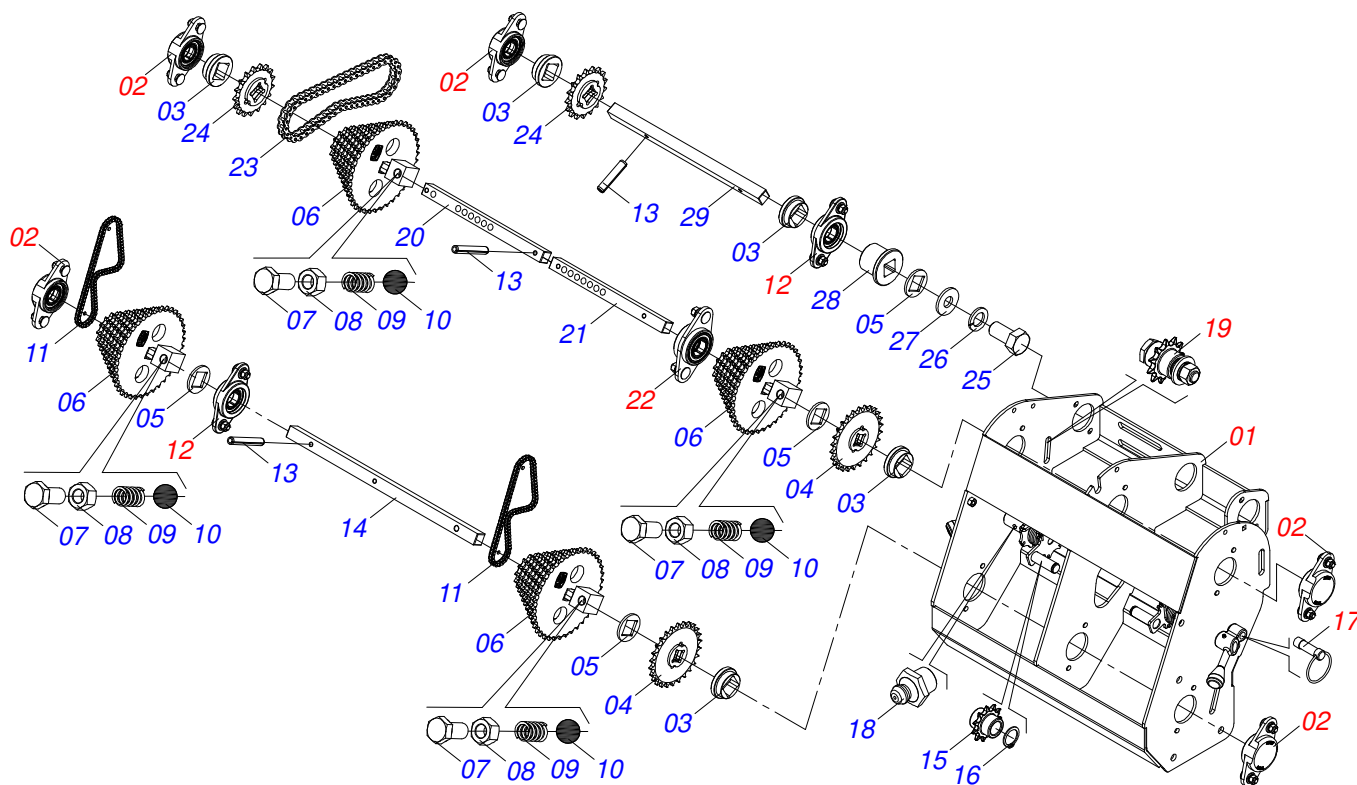

Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	01	
02	0511059266	CLOSED BEARING	05	
03	0503030303	SUPPORT WASHER	05	
04	0511067501	26Z GEAR	02	
05	0521018630	1.4" X SQUARE 0.8" WASHER	04	
06	0511060396	DRIVE/DRIVEN AXLE CONE	04	
07	0503010834	1/2 X 1 BOLT	04	
08	0503010060	1/2" NUT	04	
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING	04	
10	0503012389	1/2 BALL	04	
11	0503012204	40-1 CHAIN X 82 LINK + RED	02	
12	0501056443	BEARING ASSY GEAR BOX	02	
13	0503010292	0.2" X 1.6" SPRING PIN	08	
14	0551018209	DRIVING AXLE	01	
15	0503031805	11Z 1/2" GEAR	04	
16	0503010302	501019 SEAL RING	04	
17	0501048790	AXLE WITH LINK ASSY	02	
18	0503010002	1800 GREASE FITTING	02	
19	0501054655	CHAIN TENSIONER ASSY	01	
20	0521018259	DRIVEN AXLE	01	
21	0551018210	DRIVEN AXLE	01	
22	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	01	
23	0503012713	40-1 CHAIN X 45 LINK + MEN	01	
24	0511061830	17Z P 0.5" GEAR SQUARE HOL	02	
25	0503010256	3/8" X 3/4" BOLT	01	
26	0503010025	3/8" SPRING WASHER	01	
27	0501010984	FLAT WASHER	01	
28	0503030275	AGRICULTURAL BEARING	01	
29	0551018211	INTERM SHAFT	01	

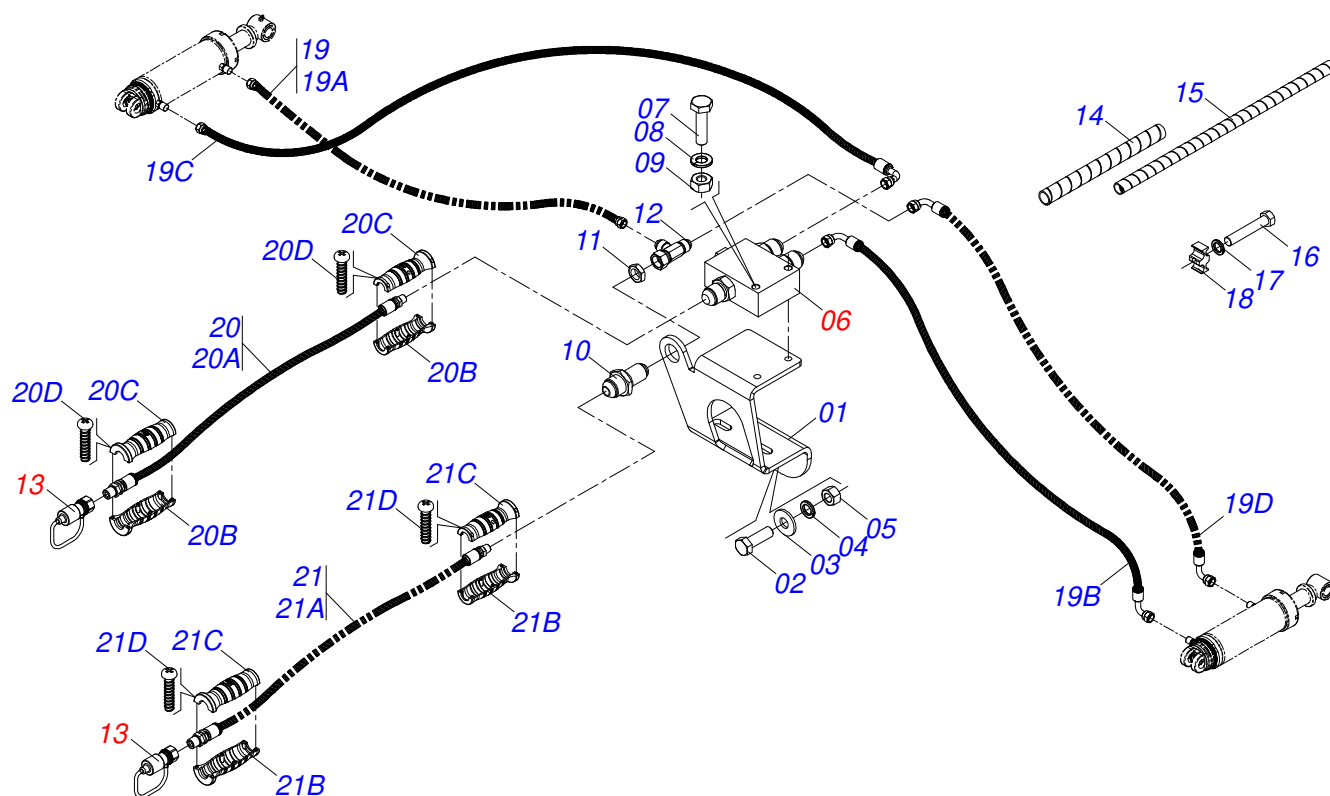


Item	Code	Description	See page	QT
01	0571017027	SOPORTE VALV	01	
02	0503010920	1/2" X 1.1/2" BOLT	02	
03	0511017302	FLAT WASHER	02	
04	0503010019	1/2" SPRING WASHER	02	
05	0503010060	1/2" NUT	02	
06	0501054694	FLOW DIVIDING VALVE ASSY	01	
07	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN	02	
08	0503010143	1/4" SPRING WASHER	02	
09	0503010144	1/4" NUT	02	
10	0541012166	NIPPLE 3/4" UNF X 7/8"	01	
11	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	01	
12	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT	01	
13	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	02	
14	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM	02	
15	0571017774	SPRING PROTECTION QUICK HOSE	02	
16	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN	03	
17	0503010180	7/16" SPRING WASHER	03	
18	0502012702	BODY SUPPORT CLAMP	03	
19	0511057089	HOSE KIT SYSTEM HYDRAULIC	01	
19A	0501080045	3/8" X 850 TR-TR HOSE	01	
19B	0501080999	3/8" X 39" TC-TC HOSE	01	
19C	0501081987	HOSE 3/8 X 1550 TR-TC	01	
19D	0501081986	HOSE 3/8 X 1550 TC-TC	01	
20	0521052299	HOSE 1/2 X 4000 TR-TM BLACK / RED	01	
20A	0501080185	HOSE 1/2 X 4000 TR-TM	01	
20B	0503034492	HYDRAULIC HOSE GRIP (BLACK)	01	
20C	0503034495	HYDRAULIC HOSE GRIP (RED)	01	
20D	0503018952	PLASTIC BOLT	06	
21	0521052300	HOSE 1/2 X 4000 TR-TM BLACK / BLUE	01	
21A	0501080185	HOSE 1/2 X 4000 TR-TM	01	
21B	0503034492	HYDRAULIC HOSE GRIP (BLACK)	01	



PST DUO FLEX - FRAME 4880/5720/5950
ASSY SYSTEM HYDRAULIC 4880/5720/5950


Page 28
0511056742

Item	Code	Description	See page	QT
21C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
21D	0503018952	PLASTIC BOLT		06

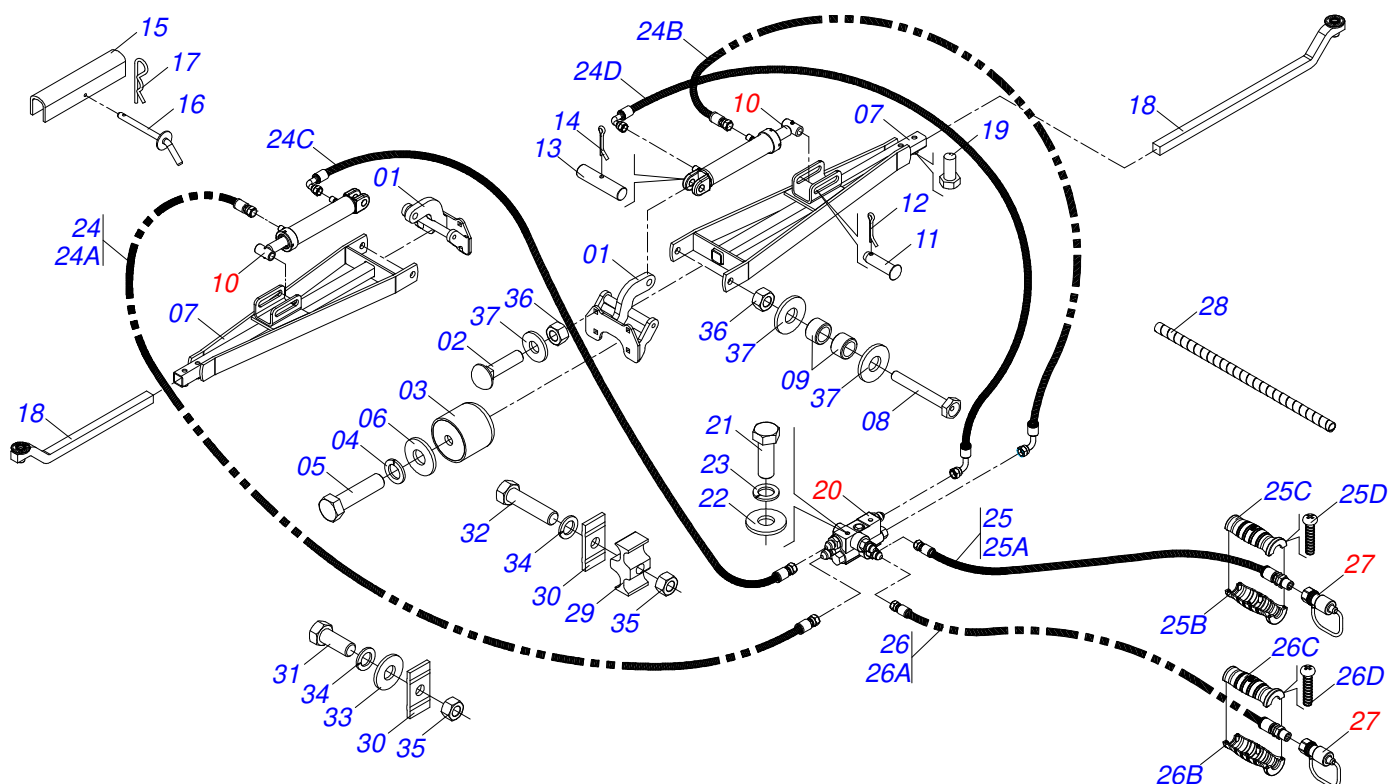


Item	Code	Description	See page	QT
01	0511069622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
03	0503011070	BEATER		02
04	0503010019	1/2" SPRING WASHER		02
05	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
06	0551019213	FLAT WASHER		02
07	0511061811	ROW MARKER ARM		02
08	0521061655	BOLT 5/8 UNC X 320 MM		02
09	0521010479	SLEEVE ARTICULATION		04
10	0511058449	HYDRAULIC CYLINDER	31	02
11	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511015779	1" X 4.2" AXLE		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
16	0501068994	0.3" X 3.1" LOCK PIN		02
17	0503030168	HAIR PIN		02
18	0501066949	1235 TURNBUCKLE		02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
20	0501054649	SEQUENTIAL VALVE ASSY	32	01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
22	0501010984	FLAT WASHER		02
23	0503010025	3/8" SPRING WASHER		02
24	0511057090	HYDRAULIC MARKER HAND SET		01
24A	0501081728	HOSE 3/8 X 3100 TR-TR		01
24B	0501080392	3/8" X 3300 TR-TC HOSE		01
24C	0501081988	3/8" X 145.6" TR-TC HOSE		01
24D	0501081682	TC-TC HOSE ASSY		01
25	0521052417	HOSE 3/8 X 4000 TR-TM PURPLE / RED		01
25A	0501080361	3/8" X 157" TR-TM HOSE		01
25B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01

Item	Code	Description	See page	QT
25C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
25D	0503018952	PLASTIC BOLT		06
26	0521052418	HOSE 3/8 X 4000 TR-TM PURPLE / BLUE		01
26A	0501080361	3/8" X 157" TR-TM HOSE		01
26B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
26C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
26D	0503018952	PLASTIC BOLT		06
27	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
28	0571017773	SPRING PROTECTION PLASTIC HOSE 3/4		02
29	0502012702	BODY SUPPORT CLAMP		06
30	0531011180	UPPER BODY CLIP		04
31	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
32	0503011103	7/16" X 2-1/2" BOLT		02
33	0501012803	FLAT WASHER		02
34	0503010180	7/16" SPRING WASHER		06
35	0503010244	7/16" NUT		02
36	0503012412	5/8 UNC SELF LOCKING NUT		10
37	0501012140	FLAT WASHER		04

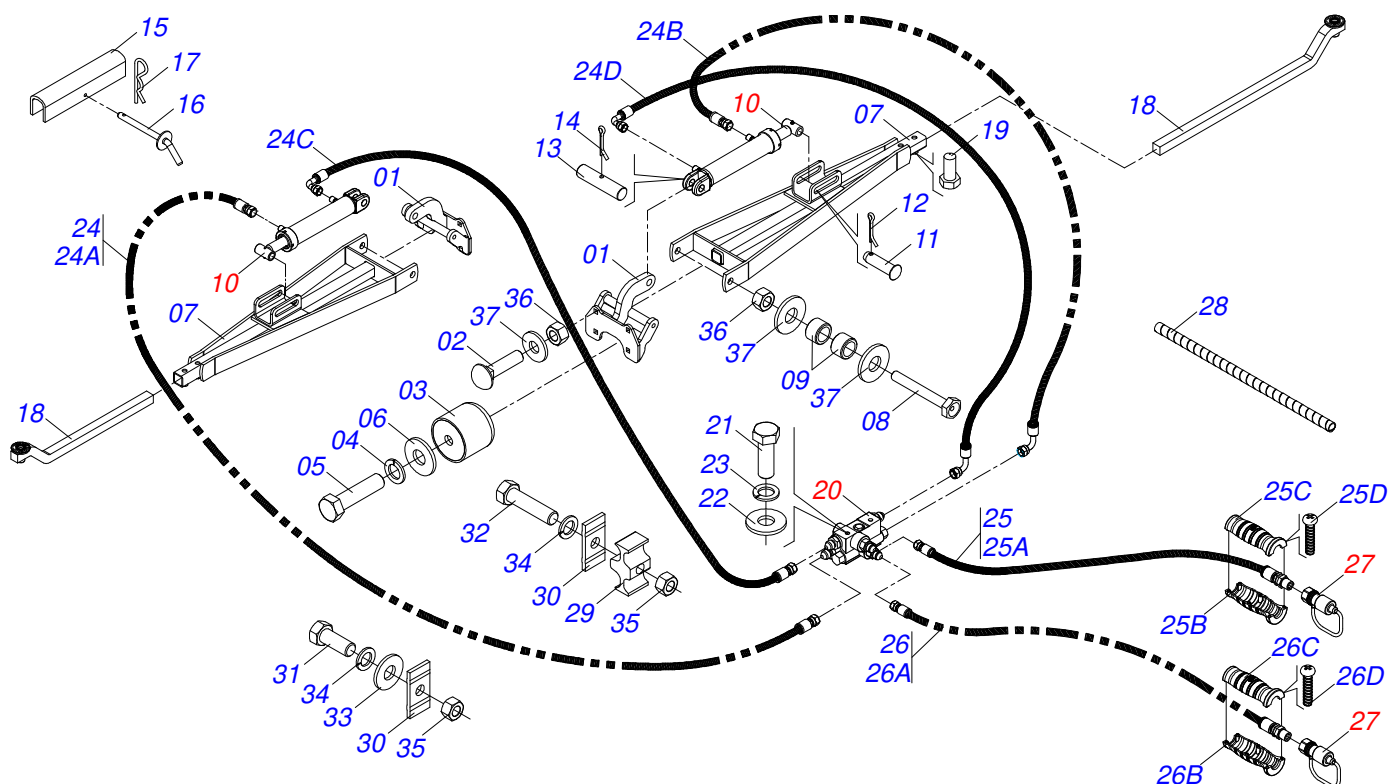


Item	Code	Description	See page	QT
01	0511069622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
03	0503011070	BEATER		02
04	0503010019	1/2" SPRING WASHER		02
05	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
06	0551019213	FLAT WASHER		02
07	0511061811	ROW MARKER ARM		02
08	0521061655	BOLT 5/8 UNC X 320 MM		02
09	0521010479	SLEEVE ARTICULATION		04
10	0511058449	HYDRAULIC CYLINDER	31	02
11	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511015779	1" X 4.2" AXLE		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
16	0501068994	0.3" X 3.1" LOCK PIN		02
17	0503030168	HAIR PIN		02
18	0501066949	1235 TURNBUCKLE		02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
20	0501054649	SEQUENTIAL VALVE ASSY	32	01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
22	0501010984	FLAT WASHER		02
23	0503010025	3/8" SPRING WASHER		02
24	0511057091	HYDRAULIC MARKER HANDLE SET		01
24A	0501081793	HOSE		01
24B	0501081967	TR-TC HOSE ASSY		01
24C	0501081996	HOSE		01
24D	0501081997	HOSE		01
25	0521052417	HOSE 3/8 X 4000 TR-TM PURPLE / RED		01
25A	0501080361	3/8" X 157" TR-TM HOSE		01
25B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01


Item	Code	Description	See page	QT
25C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
25D	0503018952	PLASTIC BOLT		06
26	0521052418	HOSE 3/8 X 4000 TR-TM PURPLE / BLUE		01
26A	0501080361	3/8" X 157" TR-TM HOSE		01
26B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
26C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
26D	0503018952	PLASTIC BOLT		06
27	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT		02
28	0571017773	SPRING PROTECTION PLASTIC HOSE 3/4		02
29	0502012702	BODY SUPPORT CLAMP		06
30	0531011180	UPPER BODY CLIP		04
31	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
32	0503011103	7/16" X 2-1/2" BOLT		02
33	0501012803	FLAT WASHER		02
34	0503010180	7/16" SPRING WASHER		06
35	0503010244	7/16" NUT		02
36	0503012412	5/8 UNC SELF LOCKING NUT		10
37	0501012140	FLAT WASHER		04

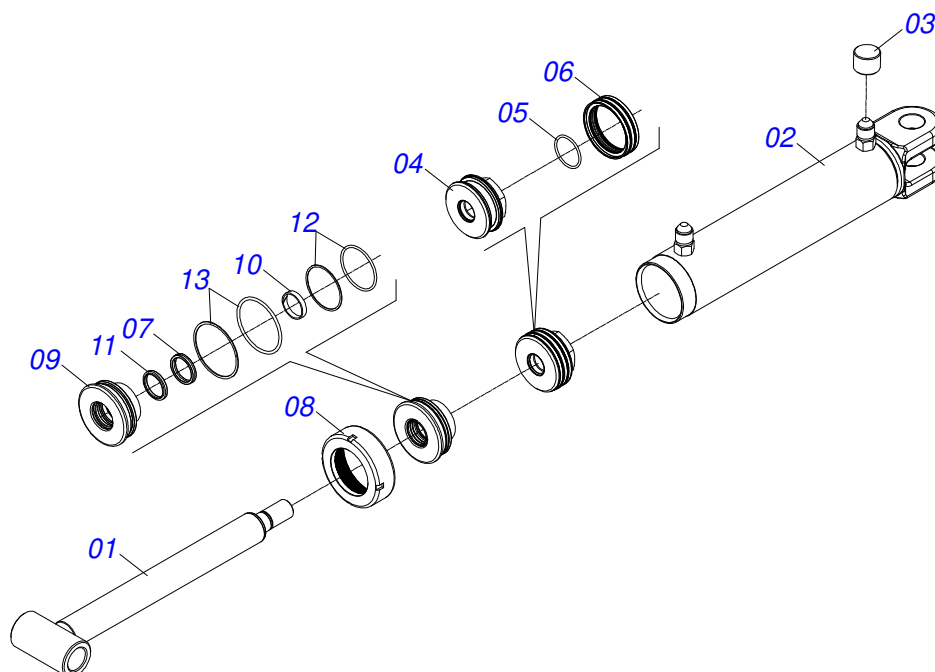


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02

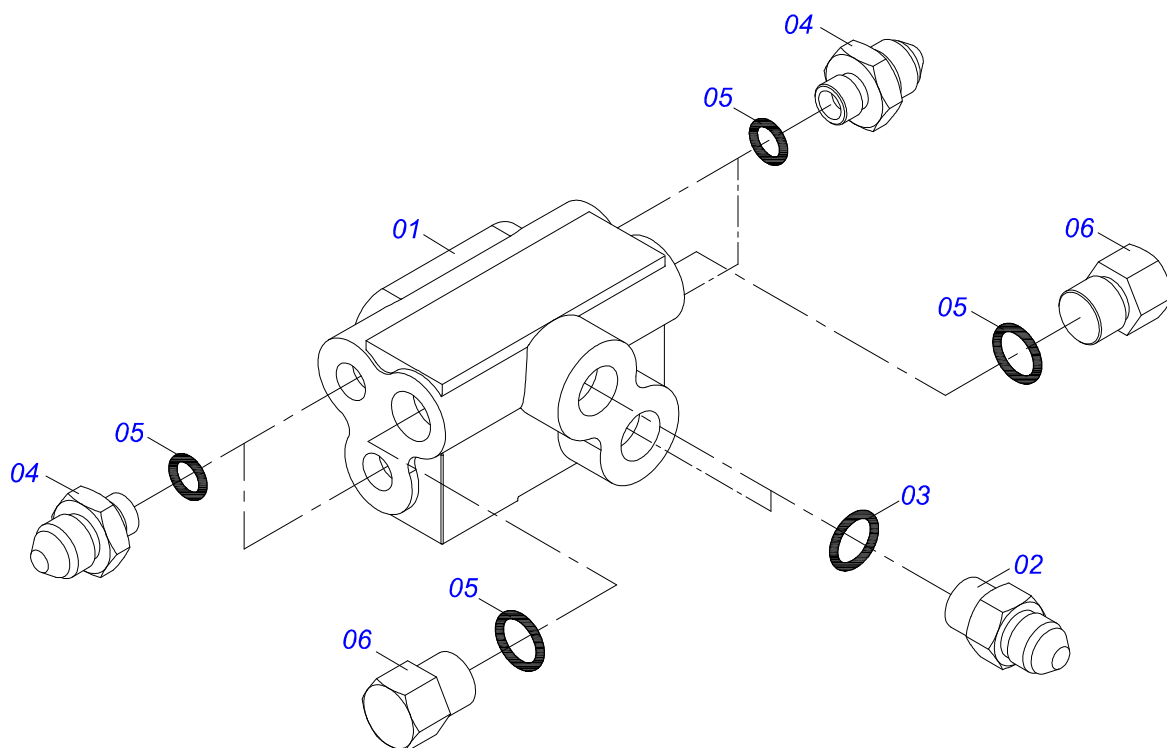


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

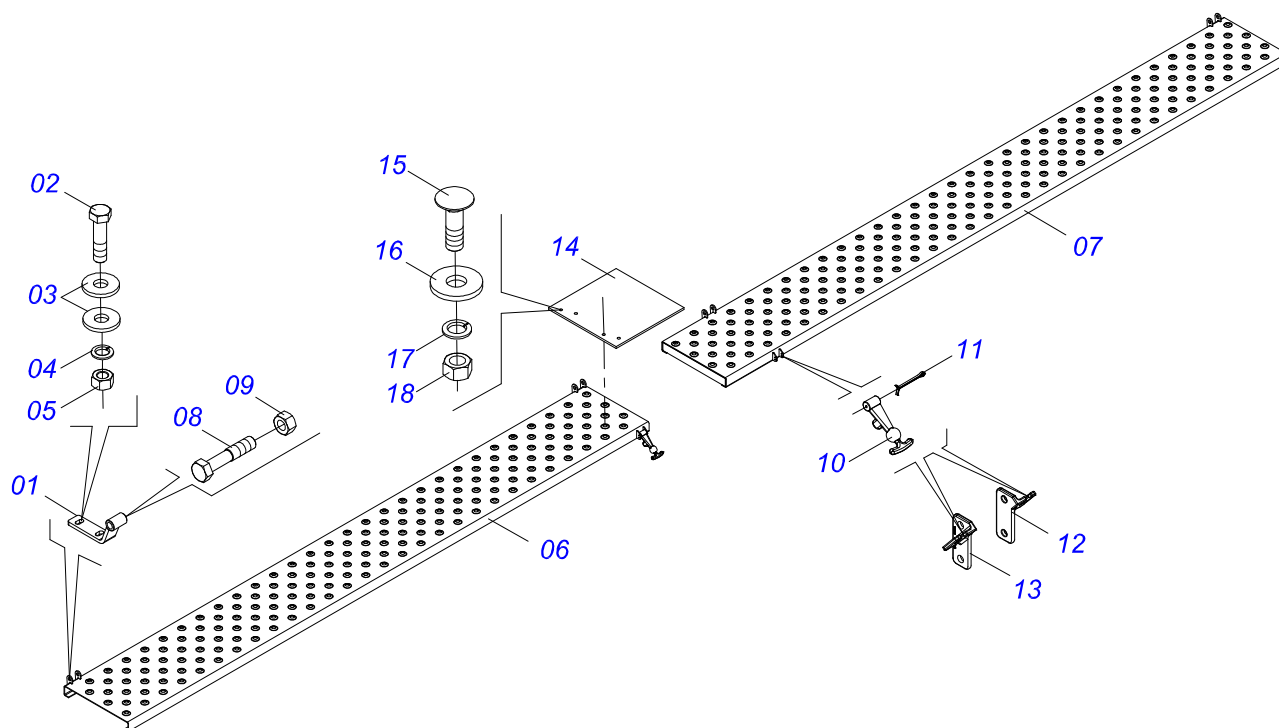


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT	04	
002	0503010849	3/8" X 1-1/2" BOLT	08	
003	0501010984	FLAT WASHER	16	
004	0503010025	3/8" SPRING WASHER	08	
005	0503010026	3/8" NUT	08	
006	0521062991	RIGHT PLATFORM	01	
007	0521062992	LEFT PLATFORM PST DUO 11/F	01	
008	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	04	
009	0503011336	1/2" HEX SELF ADJUSTING NUT	04	
010	0503011333	COVER FIXER	02	
011	0503010274	5/32"X 2" COTTERPIN	02	
012	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
013	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
014	0571017990	PLATFORM ENHANCEMENT PROTECTION	01	
015	0501010942	3/8" X 1-1/4" BOLT	02	
016	0501010984	FLAT WASHER	02	
017	0503010025	3/8" SPRING WASHER	02	
018	0503010026	3/8" NUT	02	

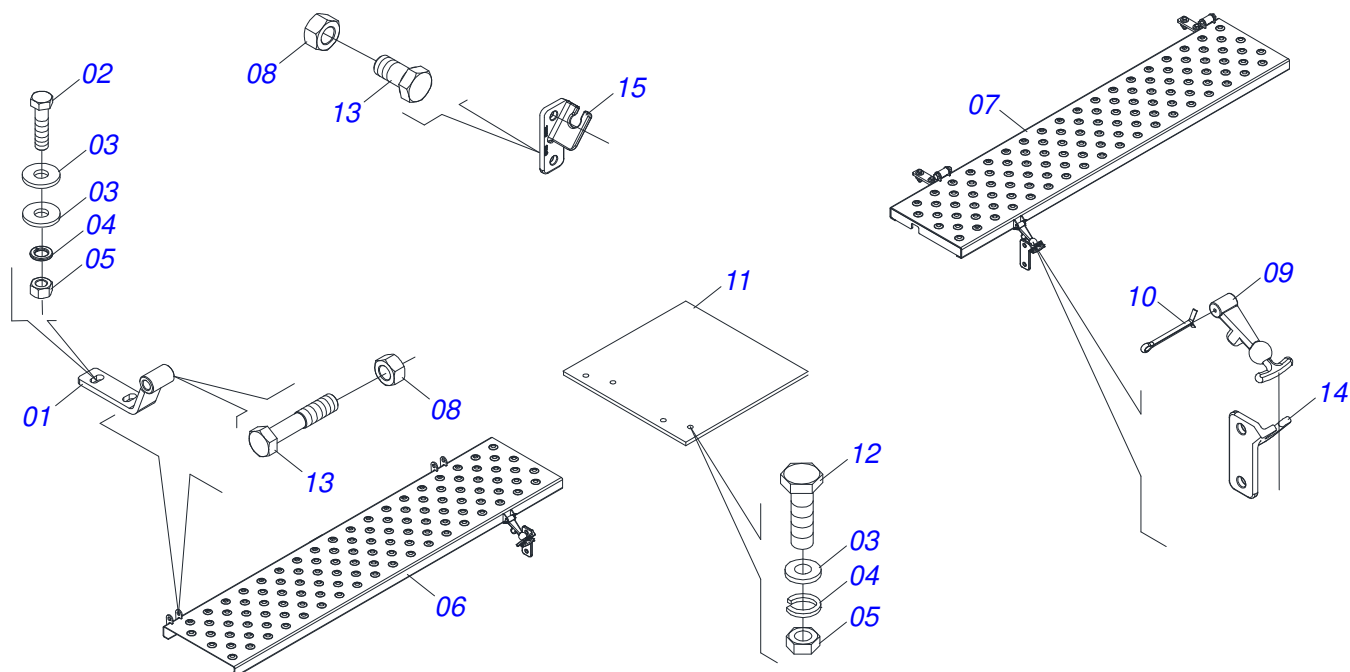


Item	Code	Description	See page	QT
001	0511069661	PLATFORM SUPPORT PIVOT	04	
002	0503010849	3/8" X 1-1/2" BOLT	08	
003	0501010984	FLAT WASHER	18	
004	0503010025	3/8" SPRING WASHER	10	
005	0503010026	3/8" NUT	10	
006	0521063178	RIGHT PLATFORM	01	
007	0521063179	LEFT PLATFORM PST DUO 13/F	01	
008	0503011336	1/2" HEX SELF ADJUSTING NUT	04	
009	0503011333	COVER FIXER	02	
010	0503010274	5/32"X 2" COTTERPIN	02	
011	0571017990	PLATFORM ENHANCEMENT PROTECTION	01	
012	0501010942	3/8" X 1-1/4" BOLT	02	
013	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	04	
014	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
015	0502012739	PLATFORM LEFT FIXER SUPPORT	01	

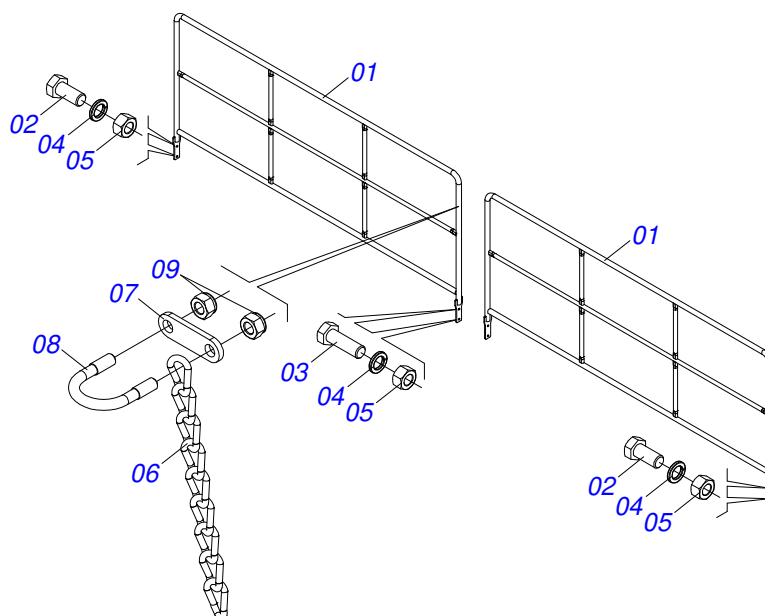


Item	Code	Description	See page	QT
01	0521062988	HANDRAIL		02
02	0503010395	1/2" X 1-1/4" BOLT		04
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0503034094	22 TWISTED CHAIN		02
07	0571017991	CHAIN FIXER HANDRAIL		04
08	0551019884	45 X 50 X 3/8 FASTENER		04
09	0503013357	3/8" SELF-ADJUSTING NUT		08

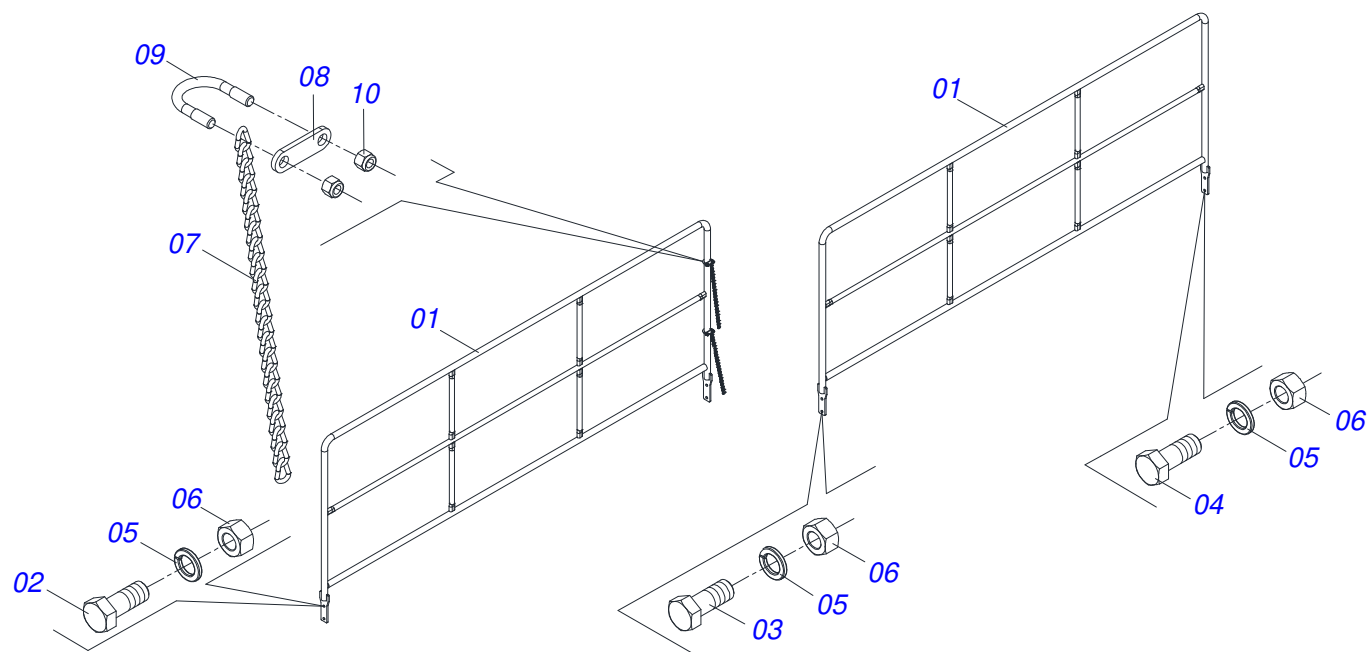


Item	Code	Description	See page	QT
001	0521063175	HANDRAIL		02
002	0503014007	1/2" X 1-1/4" BOLT		04
003	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
004	0503010905	1/2" X 2-1/4" BOLT		02
005	0503010019	1/2" SPRING WASHER		08
006	0503010060	1/2" NUT		08
007	0503034094	22 TWISTED CHAIN		02
008	0571017991	CHAIN FIXER HANDRAIL		04
009	0551019884	45 X 50 X 3/8 FASTENER		04
010	0503013357	3/8" SELF-ADJUSTING NUT		08

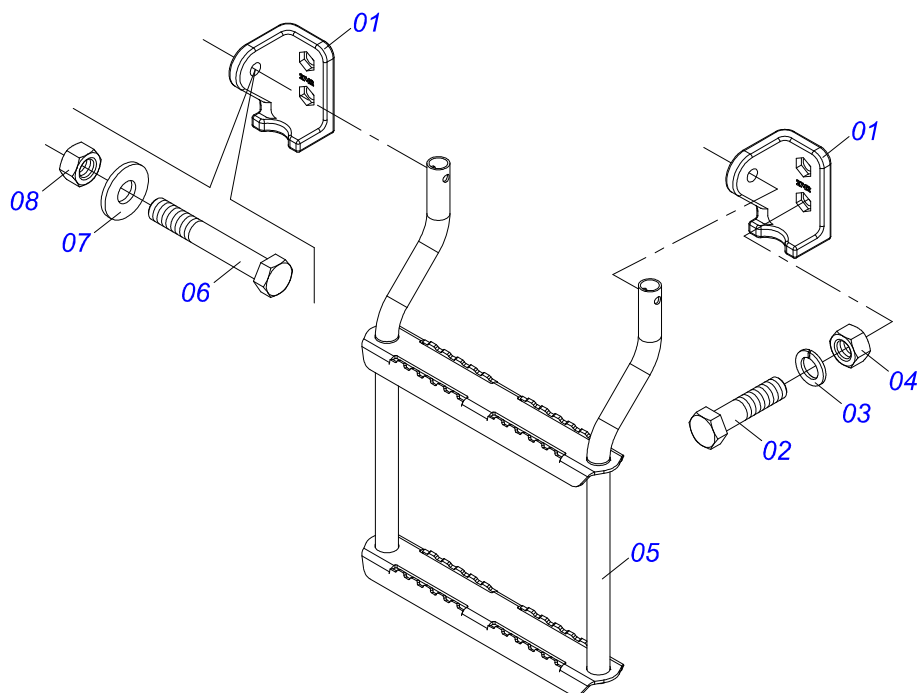


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8" SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	FLAT WASHER	02	
08	0503013357	3/8" SELF-ADJUSTING NUT	02	

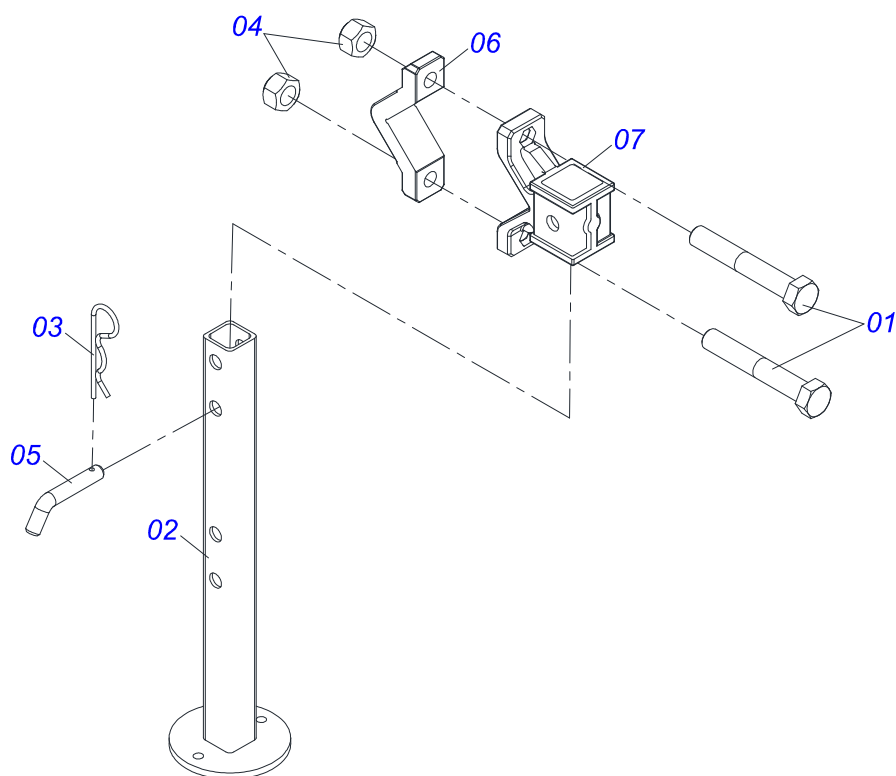


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

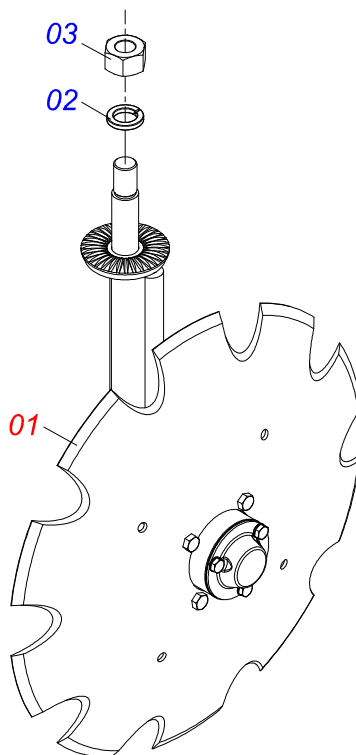


Item	Code	Description	See page	QT
01	0511053904	DISC LINE MARKER		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

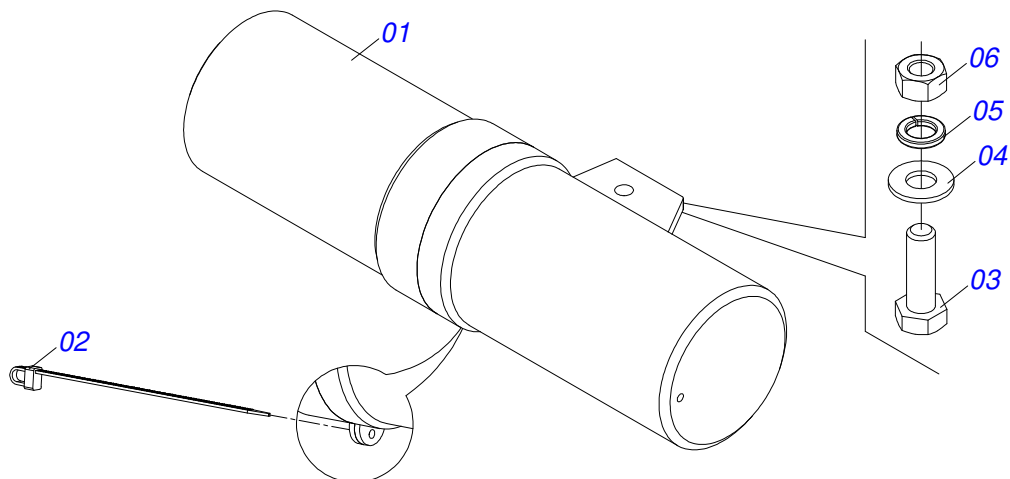


Item	Code	Description	See page	QT
01	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
02	0503010267	NYLON CLAMP		01
03	0503010363	5/16" X 1" BOLT		01
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
05	0503010179	5/16" ZN SPRING WASHER		01
06	0503010337	5/16" NUT		01
07	0511031623	CAT BAG / MANUAL		01

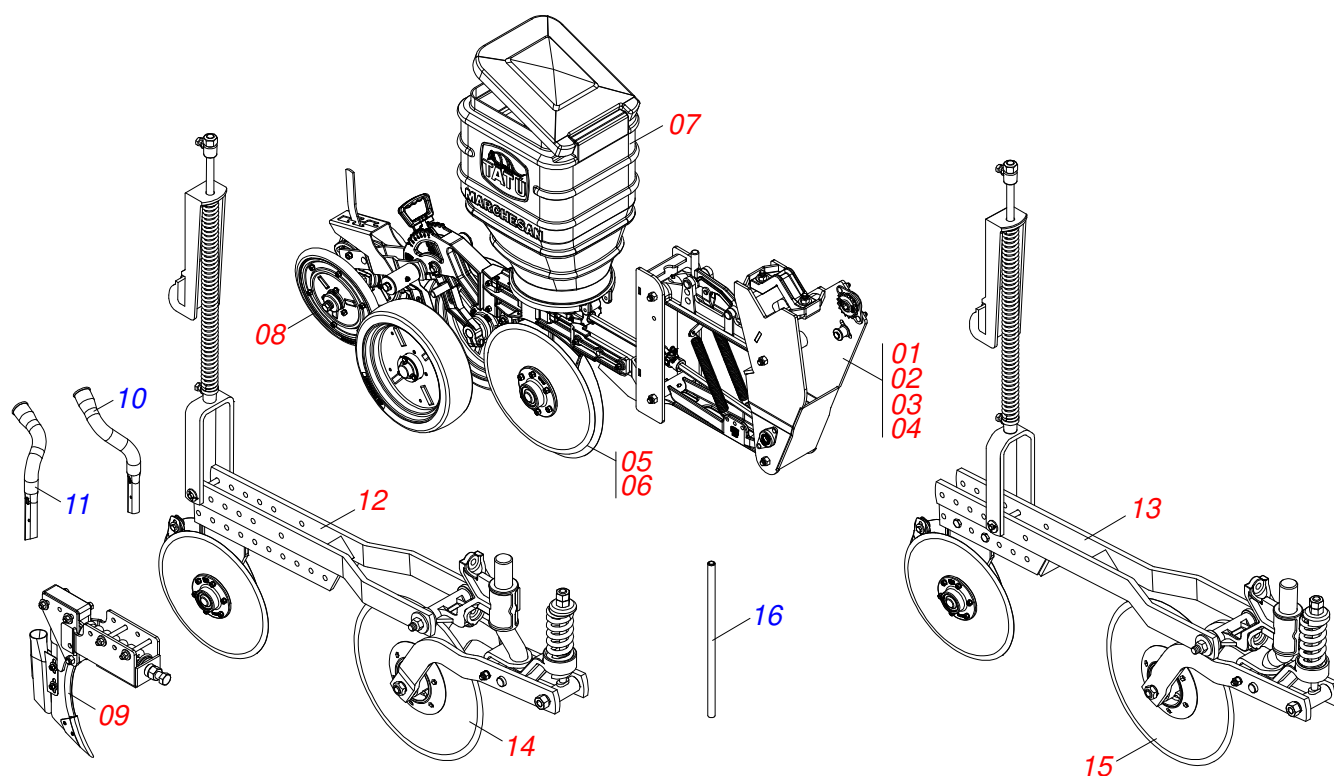


Item	Code	Description	See page	QT
01	0501059834	FRONT LINE SEED SHORT LEFT CARDAN	50	01
02	0501059833	FRONT LINE SEED SHORT RIGHT CARDAN	53	01
03	0501059835	FRONT LINE SEED LONG RIGHT CARDAN	51	01
04	0501059836	FRONT LINE SEED LONG LEFT CARDAN	54	01
05	0511056621	REAR RIGHT SEED LINE	59	01
06	0511056622	LEFT REAR LINE SEED	60	01
07	0511057017	SEED SYSTEM ASSY	64	01
08	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	43	01
09	0511057542	HDA	69	01
10	0581010082	FERTILIZER SOCKET RIGHT		01
11	0581010083	FERTILIZER SOCKET LEFT		01
12	0511053250	SHORT ARM FERTILIZER LINE WITH DDD LEFT	61	01
13	0511053251	ARM LONG FERTILIZER LINE WITH DDD RIGHT	62	01
14	0511058617	DISC CUT 18 SHORT LINE	65	01
14.	0511044563	20" COULTER BLADE ASSY FOR SHORT ROW		01
15	0511058618	DISC CUT 18 LONG LINE	66	01
15.	0511044585	20" COULTER BLADE ASSY FOR LONG ROW		01
16	0531013600	PRESS ADJUSTMENT LEVER		01

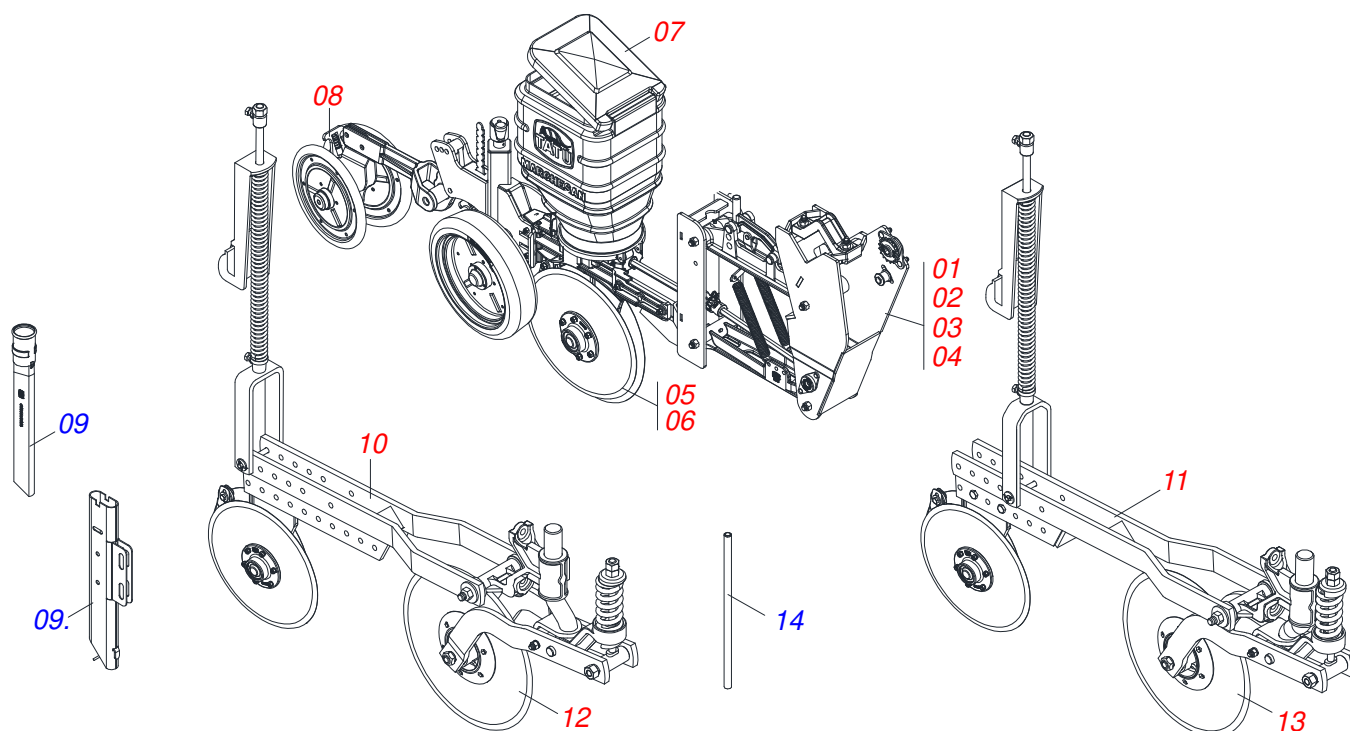


Item	Code	Description	See page	QT
01	0501059834	FRONT LINE SEED SHORT LEFT CARDAN	50	01
02	0501059833	FRONT LINE SEED SHORT RIGHT CARDAN	53	01
03	0511058142	LONG SEED ROW FRONT		01
04	0501059836	FRONT LINE SEED LONG LEFT CARDAN	54	01
05	0511056621	REAR RIGHT SEED LINE	59	01
06	0511056622	LEFT REAR LINE SEED	60	01
07	0511057017	SEED SYSTEM ASSY	64	01
08	0521044538	DEPHT WHIT REGULACION ANGLE COMPACT CONTROL	44	01
09	0503030520	SEED SOCKET		01
09.	0501110714	INNER SOCKET FASTENER	49	01
10	0511053250	SHORT ARM FERTILIZER LINE WITH DDD LEFT	61	01
11	0511053251	ARM LONG FERTILIZER LINE WITH DDD RIGHT	62	01
12	0511058619	DISC CUT 20 SHORT LINE	55	01
13	0511058620	DISC CUT 20 LONG LINE	56	01
14	0531013600	PRESS ADJUSTMENT LEVER		01

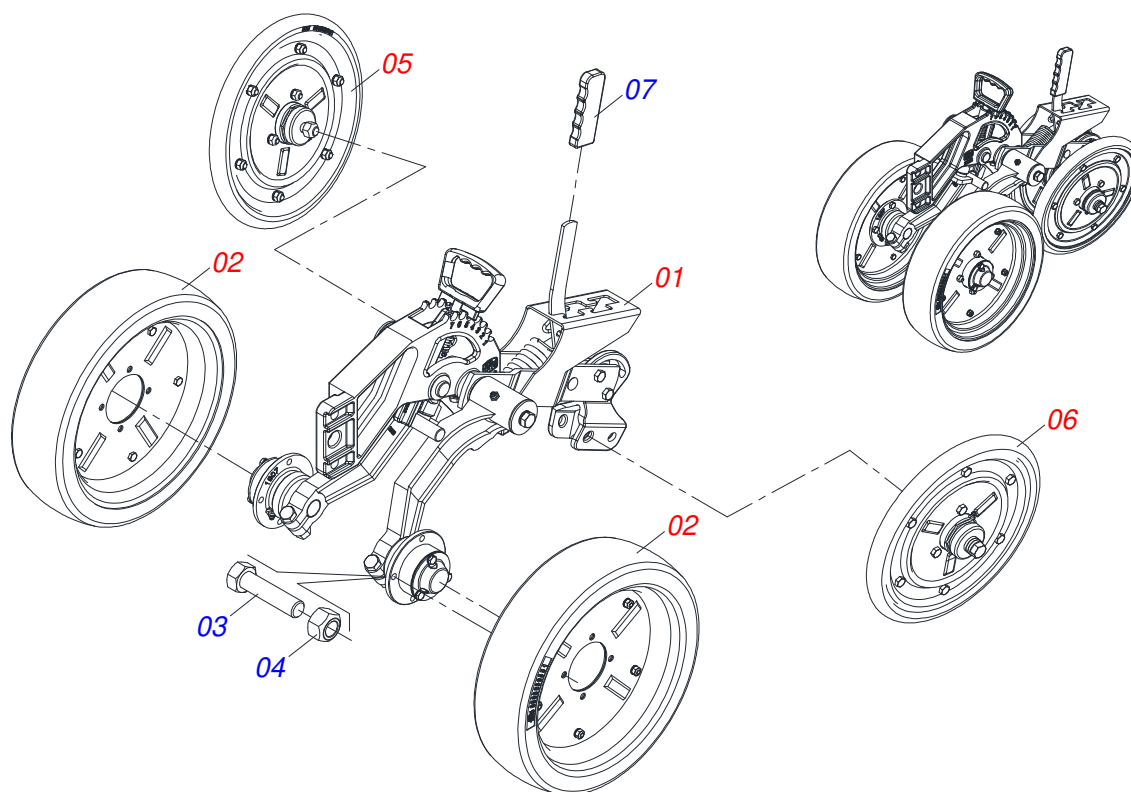


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL		01
02	0501052538	DEPTH BAND WITH ARMS		02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	73	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	74	01
07	0503033942	COVER REGULATORY WHEEL		01

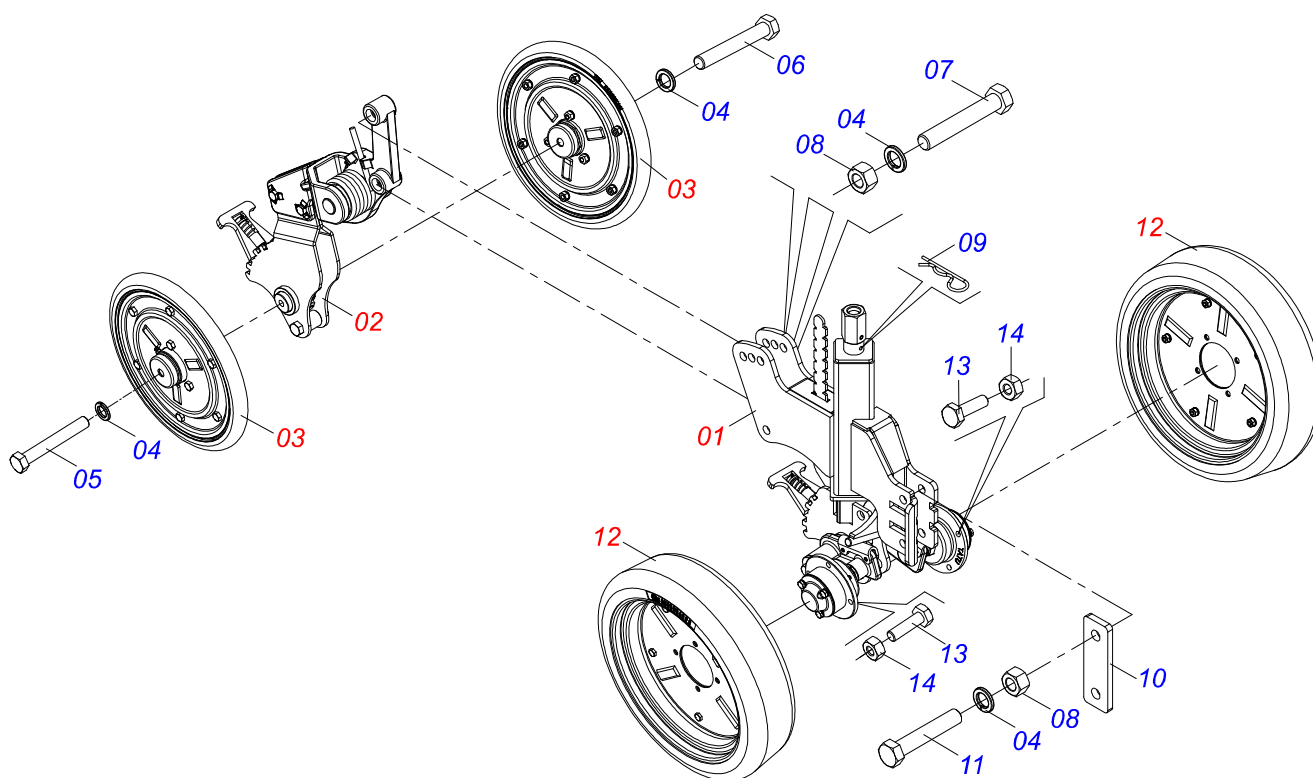


Item	Code	Description	See page	QT
01	0511052971	CONTROL DEPTH WITH SEMI MOUNTED THREAD	45	01
02	0511052970	SYSTEM COMPACTOR V SEMI MOUNTED	46	01
03	0501052908	COMPACTOR WHEEL WITH BEARING	47	02
04	0503010019	1/2" SPRING WASHER		06
05	0503010752	1/2" X 3.1/2" BOLT		01
06	0503013739	1/2" X 1" BOLT		01
07	0503010479	BOLT		02
08	0503010060	1/2" NUT		04
09	0503030012	HAIR PIN		01
10	0571013222	FIXING CHOCK		01
11	0503010741	1/2" X 2-3/4" BOLT		02
12	0511055819	DEPTH WHIT AROS BAND	48	02
13	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		08
14	0503013816	5/16" LOCKNUT		08

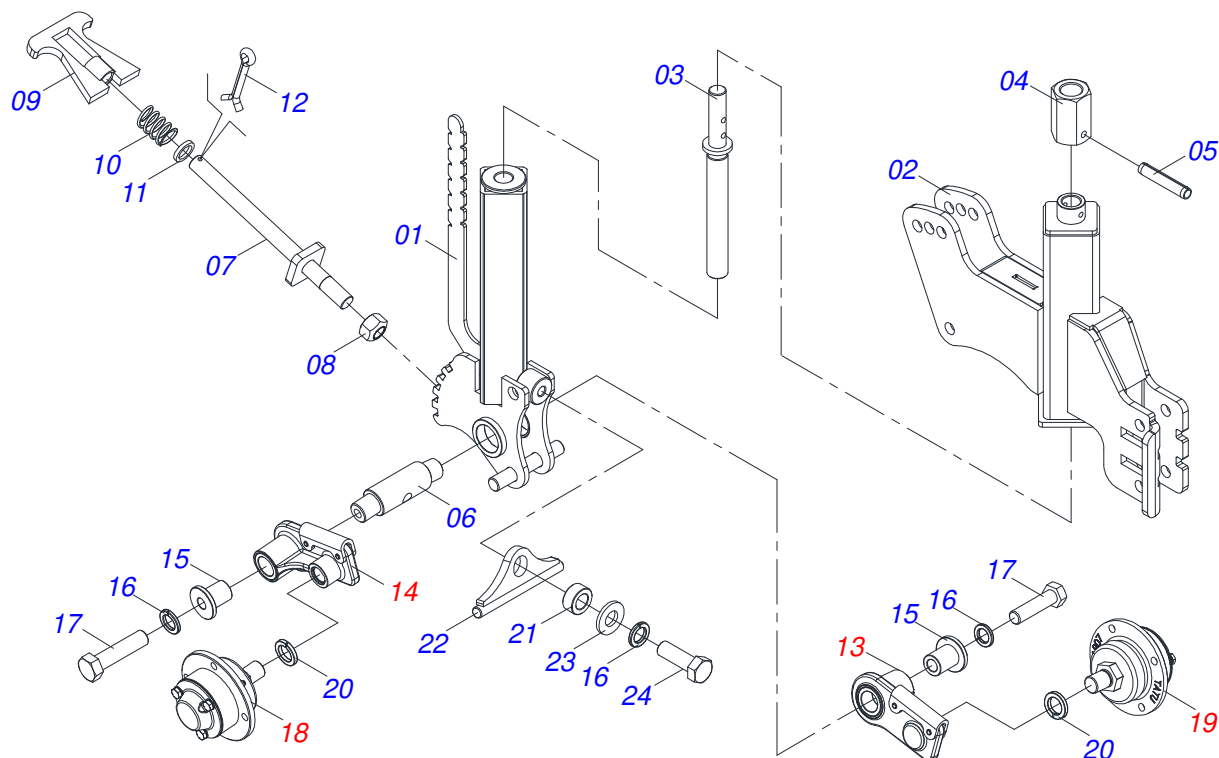


Item	Code	Description	See page	QT
01	0521063808	DEPTH CONTROL INNER COLUMN CONTROL WITH SCREW		01
02	0521063809	DEPTH CONTROL EXTERNAL COLUMN CONTROL WITH SCREW		01
03	0571013194	REGULATOR SPINDLE		01
04	0551010616	ROD HEX		01
05	0503010683	0,2" X 1,2" SPRING PIN		01
06	0571013202	REGULATOR AXLE WHEELS COBRIDORA		01
07	0521063812	REGULATOR LEVER ALXE		01
08	0503011336	1/2" HEX SELF ADJUSTING NUT		01
09	0511065308	LOCK REGULATOR		01
10	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
11	0541011627	FLAT WASHER		01
12	0503010140	1/8" X 3/4" COTTERPIN		01
13	0511059325	LEFT ARM WHEELS		01
14	0511059324	RIGHT ARM COATING WHEEL MOUNTED		01
15	0571014709	SLEEVE LOCK CONTROL ARM		02
16	0503011440	SPRING WASHER		03
17	0503819099	BOLT		02
18	0511051546	CUBE RIGHT CONTROL DEPTH		01
19	0511051547	LEFT CUBE CONTROL DEPTH		01
20	0503011442	3/4" SPRING WASHER		02
21	0571013189	SLEEVE SUPPORT BEATER		01
22	0521063813	WHEEL PRESS BEATER		01
23	0501010937	13.5 X 28 X 3 FLAT WASHER		01
24	0503010920	1/2" X 1.1/2" BOLT		01

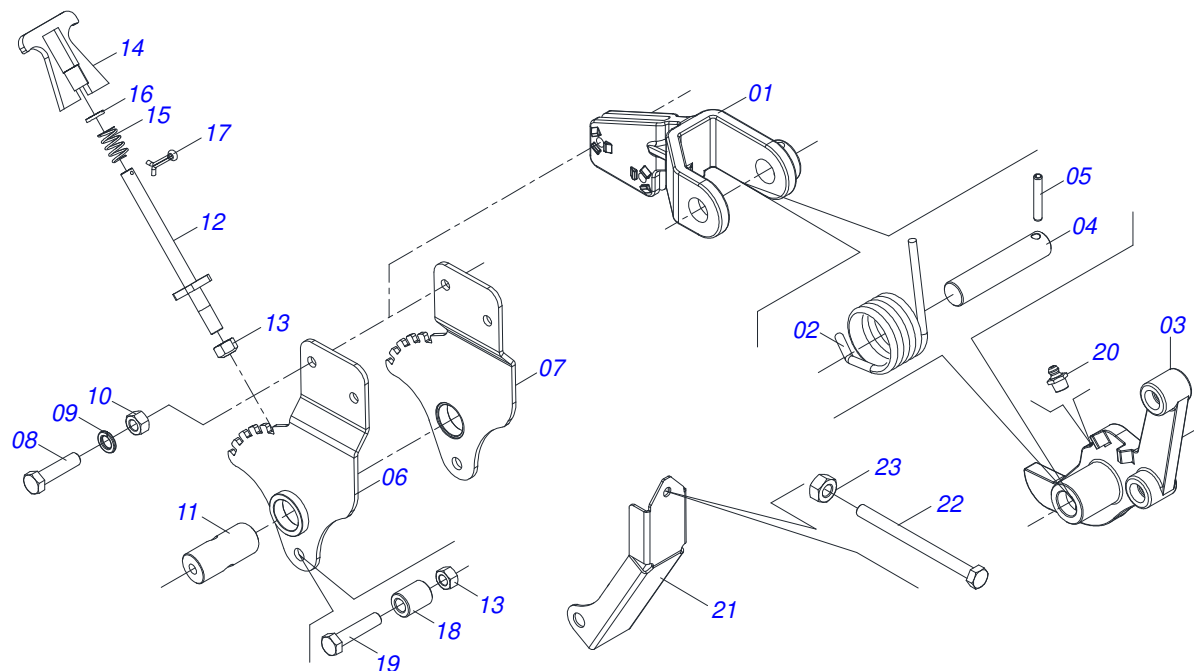


Item	Code	Description	See page	QT
01	0502012850	PRESS WHEELS ARM		01
02	0503030883	RIGHT TORSION SPRING		01
03	0502011066	PRESS WHEELS ARM SUPPORT		01
04	0531017415	1" X 4.72" AXLE JOINT		01
05	0503010839	03"X 0.6" SPRING PIN		01
06	0521063841	REGULATOR RIGHT COMPACTOR		01
07	0521063842	REGULATOR LEFT COMPACTOR		01
08	0503811404	BOLT		02
09	0503011443	3/8" SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0571013295	ALXE REGULATOR COMPACTOR		01
12	0521063812	REGULATOR LEVER ALXE		01
13	0503011336	1/2" HEX SELF ADJUSTING NUT		02
14	0511065308	LOCK REGULATOR		01
15	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
16	0541011627	FLAT WASHER		01
17	0503010140	1/8" X 3/4" COTTERPIN		01
18	0571013293	SLEEVE LOCK COMPACTOR V CONTROL WITH SCREW		01
19	0503811172	BOLT		01
20	0503010002	1800 GREASE FITTING		01
21	0581013744	PROTECTION COVER - CPRA		01
22	0503813096	BOLT		01
23	0503013816	5/16" LOCKNUT		0

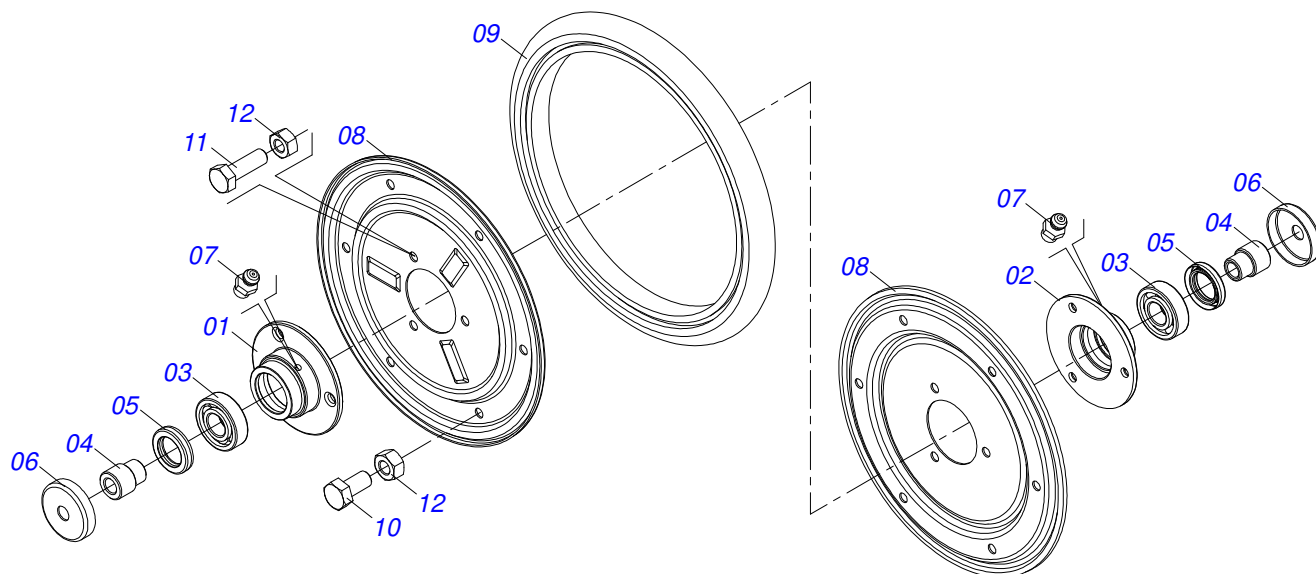


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

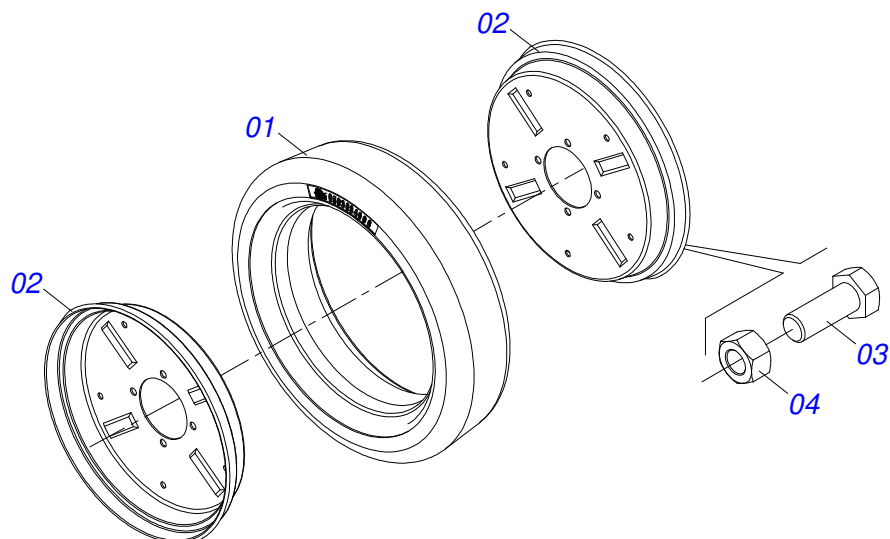

Item	Code	Description	See page	QT
01	0503034008	DEPTH CONTROL		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010144	1/4" NUT		05

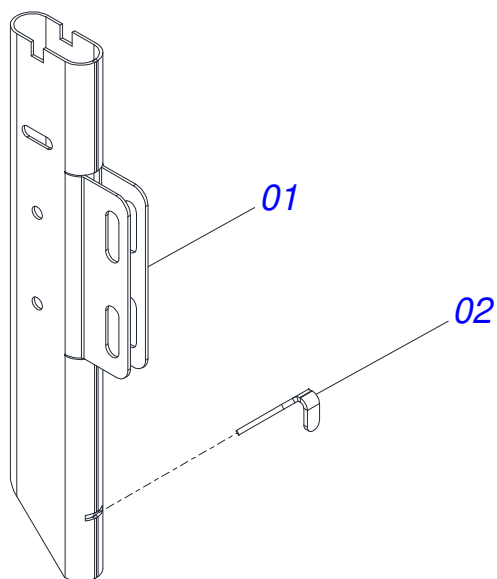

Item	Code	Description	See page	QT
001	0561015595	FERTILIZER SOCKET		01
002	0571010456	POSITIONER OF FERTILIZER		01

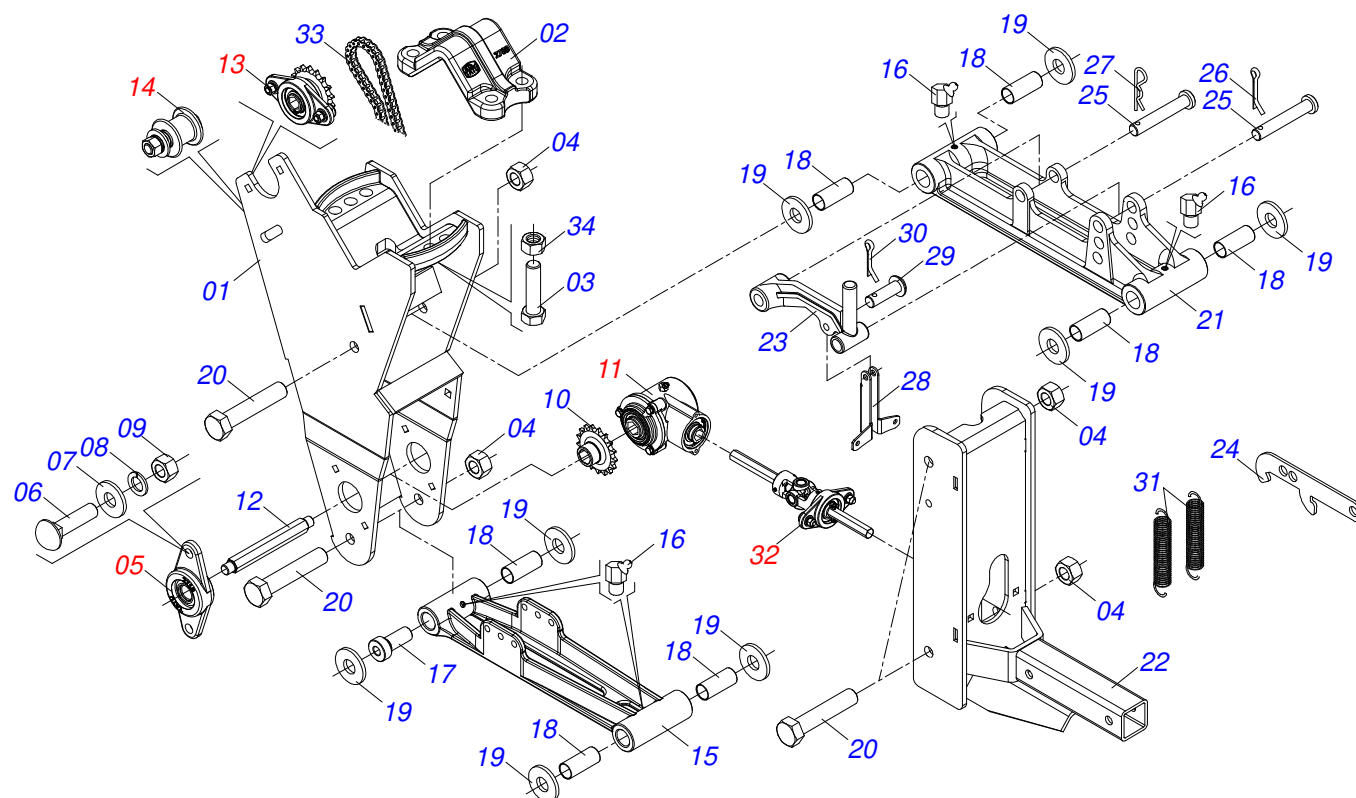


Item	Code	Description	See page	QT
01	0521064651	LEFT SEED ROW SUPPORT FRONT	01	
02	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
03	0503017857	BOLT 5/8 UNF 4	02	
04	0503012412	5/8 UNC SELF LOCKING NUT	06	
05	0511054635	BEARING AXLE BODY	02	
06	0503011953	5/16" X 1" BOLT	04	
07	0501010694	8.5 X 18 X 1.5 FLAT WASHER	04	
08	0503010179	5/16" ZN SPRING WASHER	04	
09	0503010337	5/16" NUT	04	
10	0502012782	17Z GEAR WITH HEX HOLE	01	
11	0511057159	TRANSMISSION BOX SEED LINE	01	
12	0561014904	TRANSMISSION AXLE FRAME LINE	01	
13	0511050609	BEARING WITH 17Z GEAR ASSY	01	
14	0511055260	SEED ROW CHAIN TENSIONER	01	
15	0502012666	SEDD ROW LOWER ARM	01	
16	0503010003	1845 GREASE FITTING	04	
17	0561015858	SPACER LOWER SLEEVE	01	
18	0531015151	0.6" X 1" X 2.4" SLEEVE	07	
19	0531015184	FLAT WASHER	08	
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN	04	
21	0502012350	SEED ROW UPPER ARM	01	
22	0521061427	SHORT SEED ROW FRAME	01	
23	0502012568	UPPER ROCKER ARM	01	
24	0561019032	SEED FERTIL ROW LOCK	01	
25	0501011388	COUPLING SHAFT	02	
26	0503010071	3/16" X 1" COTTERPIN	01	
27	0503030168	HAIR PIN	01	
28	0581018487	FIXER UPPER SPRING	01	
29	0521010773	0.37" X 1.18" COUPLING SHAFT	01	
30	0503010140	1/8" X 3/4" COTTERPIN	01	
31	0503034580	TRACTION SPRING	02	



PST DUO FLEX - FRAME 4880/5720/5950
FRONT LINE SEED SHORT LEFT CARDAN

Page 50
0501059834

Item	Code	Description	See page	QT
32	0511059264	BEARING WITH AXLE	57	01
33	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

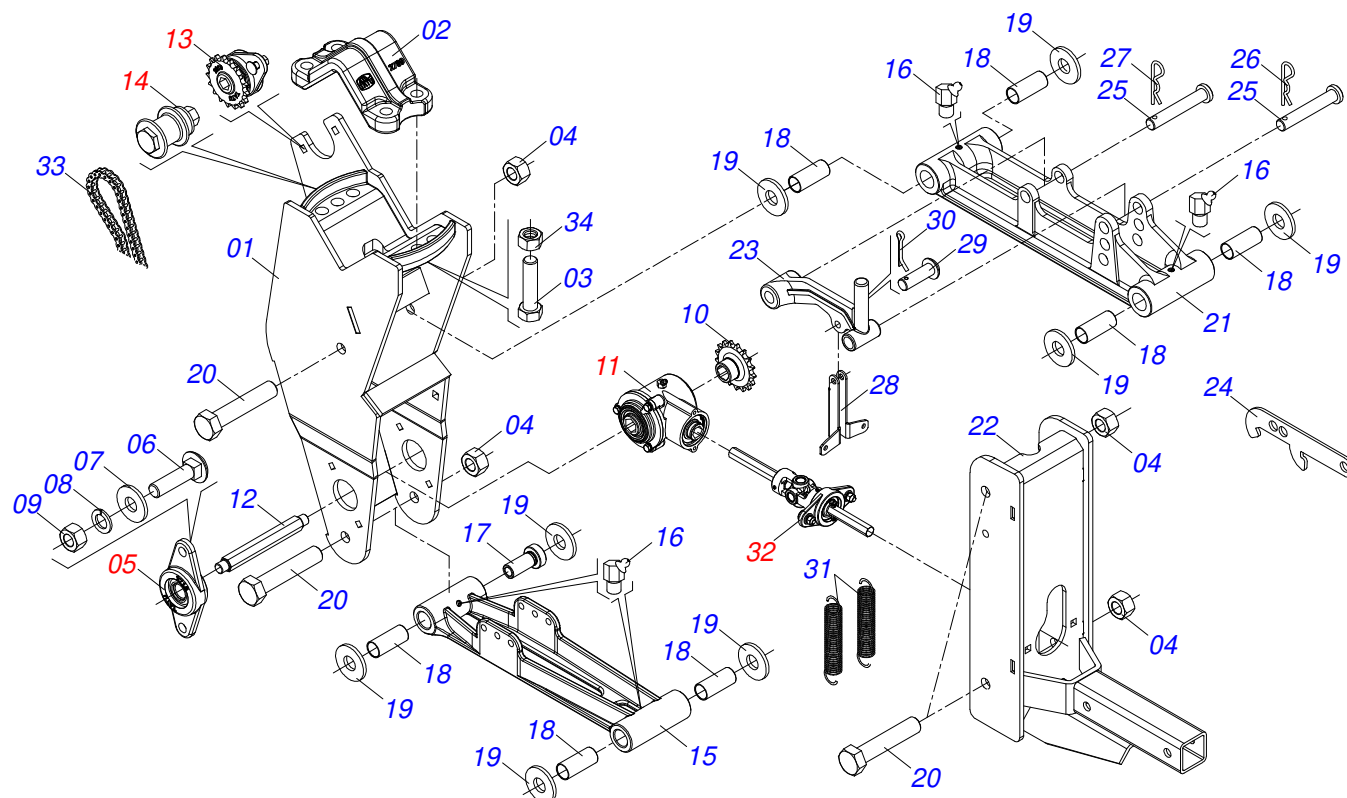


Item	Code	Description	See page	QT
01	0521064652	RH SEED ROW SUPPORT FRONT	01	
02	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
03	0503017857	BOLT 5/8 UNF 4	02	
04	0503012412	5/8 UNC SELF LOCKING NUT	06	
05	0511054635	BEARING AXLE BODY	02	
06	0503011953	5/16" X 1" BOLT	04	
07	0501010694	8.5 X 18 X 1.5 FLAT WASHER	04	
08	0503010179	5/16" ZN SPRING WASHER	04	
09	0503010337	5/16" NUT	04	
10	0502012782	17Z GEAR WITH HEX HOLE	01	
11	0511057159	TRANSMISSION BOX SEED LINE	01	
12	0561014904	TRANSMISSION AXLE FRAME LINE	01	
13	0511050609	BEARING WITH 17Z GEAR ASSY	01	
14	0511055260	SEED ROW CHAIN TENSIONER	01	
15	0502012666	SEDD ROW LOWER ARM	01	
16	0503010003	1845 GREASE FITTING	04	
17	0561015858	SPACER LOWER SLEEVE	01	
18	0531015151	0.6" X 1" X 2.4" SLEEVE	07	
19	0531015184	FLAT WASHER	08	
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN	04	
21	0502012350	SEED ROW UPPER ARM	01	
22	0521061427	SHORT SEED ROW FRAME	01	
23	0502012568	UPPER ROCKER ARM	01	
24	0561019032	SEED FERTIL ROW LOCK	01	
25	0501011388	COUPLING SHAFT	02	
26	0503010071	3/16" X 1" COTTERPIN	01	
27	0503030168	HAIR PIN	01	
28	0581018487	FIXER UPPER SPRING	01	
29	0521010773	0.37" X 1.18" COUPLING SHAFT	01	
30	0503010140	1/8" X 3/4" COTTERPIN	01	
31	0503034580	TRACTION SPRING	02	



PST DUO FLEX - FRAME 4880/5720/5950
FRONT LINE SEED LONG RIGHT CARDAN


Page 51
0501059835

Item	Code	Description	See page	QT
32	0511059264	BEARING WITH AXLE	57	01
33	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

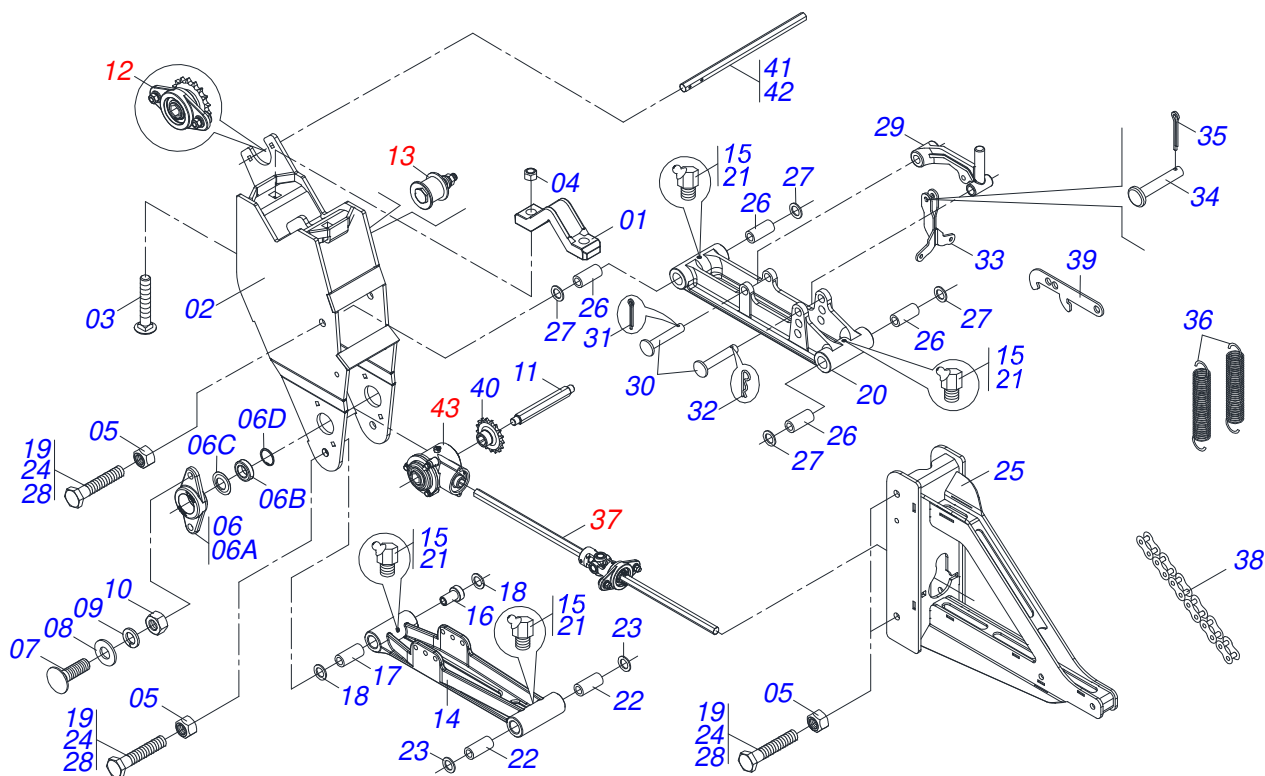

Item	Code	Description	See page	QT
001	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
002	0521064652	RH SEED ROW SUPPORT FRONT	01	
003	0503017857	BOLT 5/8 UNF 4	02	
004	0503010811	5/8" UNF SELF ADJUSTING NUT	02	
005	0503012412	5/8 UNC SELF LOCKING NUT	02	
006	0511054635	BEARING AXLE BODY	04	
006A	0502012718	BEARIN BODY	02	
006B	0503012882	BEARING	02	
006C	0503017011	SEAL RING	02	
006D	0503011945	503050 CLAMPING RING (FOR AXLE)	02	
007	0503011953	5/16" X 1" BOLT	04	
008	0501010694	8.5 X 18 X 1.5 FLAT WASHER	04	
009	0503010179	5/16" ZN SPRING WASHER	04	
010	0503010337	5/16" NUT	04	
011	0561014904	TRANSMISSION AXLE FRAME LINE	01	
012	0511050609	BEARING WITH 17Z GEAR ASSY	01	
013	0511050610	SEED ROW CHAIN TENSIONER ASSY	01	
014	0502012666	SEDD ROW LOWER ARM	01	
015	0503010003	1845 GREASE FITTING	02	
016	0561015858	SPACER LOWER SLEEVE	01	
017	0531015151	0.6" X 1" X 2.4" SLEEVE	01	
018	0531015184	FLAT WASHER	02	
019	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN	01	
020	0502012350	SEED ROW UPPER ARM	01	
021	0503010003	1845 GREASE FITTING	02	
022	0531015151	0.6" X 1" X 2.4" SLEEVE	02	
023	0531015184	FLAT WASHER	02	
024	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN	01	
025	0521066496	FRAME MECHANICAL CENTRAL SEED LINE	01	
026	0531015151	0.6" X 1" X 2.4" SLEEVE	04	
027	0531015184	FLAT WASHER	04	

Item	Code	Description	See page	QT
028	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		02
029	0502012568	UPPER ROCKER ARM		01
030	0501011388	COUPLING SHAFT		02
031	0503010071	3/16" X 1" COTTERPIN		01
032	0503030168	HAIR PIN		01
033	0521061850	SPRING UPPER FIXER		01
034	0521010773	0.37" X 1.18" COUPLING SHAFT		01
035	0503010140	1/8" X 3/4" COTTERPIN		01
036	0503034580	TRACTION SPRING		02
037	0511050611	5/8" HEX AXLE BEARING	58	01
038	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
039	0561019032	SEED FERTIL ROW LOCK		01
040	0502012782	17Z GEAR WITH HEX HOLE		01
041	0571011980	HEX AXLE		01
042	0561018502	SHAFT AXIS 5/8 X 3000		01
043	0511054884	TRANSMISSION BOX		01

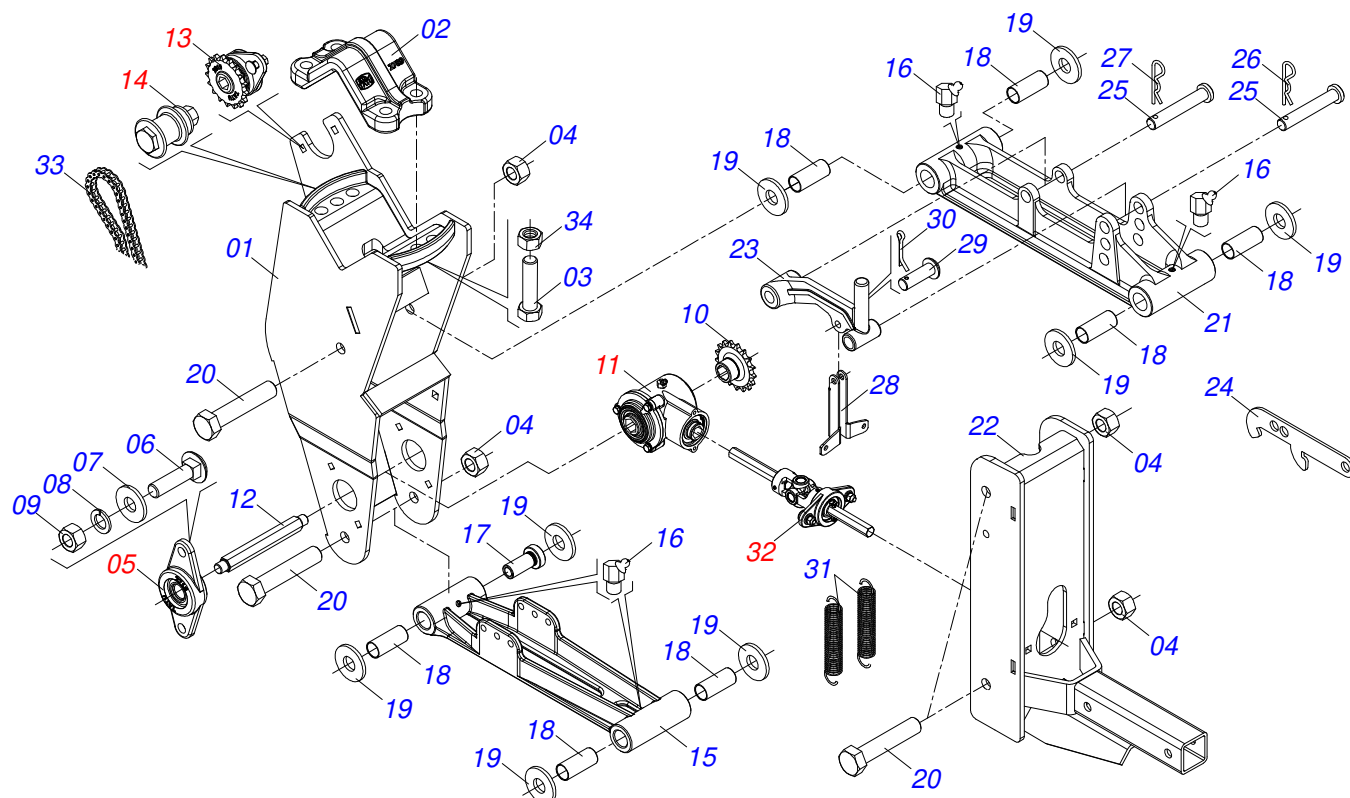


Item	Code	Description	See page	QT
01	0521064653	RIGH SEED ROW SUPPORT FRONT	01	
02	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
03	0503017857	BOLT 5/8 UNF 4	02	
04	0503012412	5/8 UNC SELF LOCKING NUT	06	
05	0511054635	BEARING AXLE BODY	02	
06	0503011953	5/16" X 1" BOLT	04	
07	0501010694	8.5 X 18 X 1.5 FLAT WASHER	04	
08	0503010179	5/16" ZN SPRING WASHER	04	
09	0503010337	5/16" NUT	04	
10	0502012782	17Z GEAR WITH HEX HOLE	01	
11	0511057159	TRANSMISSION BOX SEED LINE	01	
12	0561014904	TRANSMISSION AXLE FRAME LINE	01	
13	0511050609	BEARING WITH 17Z GEAR ASSY	01	
14	0511055260	SEED ROW CHAIN TENSIONER	01	
15	0502012666	SEDD ROW LOWER ARM	01	
16	0503010003	1845 GREASE FITTING	04	
17	0561015858	SPACER LOWER SLEEVE	01	
18	0531015151	0.6" X 1" X 2.4" SLEEVE	07	
19	0531015184	FLAT WASHER	08	
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN	04	
21	0502012350	SEED ROW UPPER ARM	01	
22	0521061427	SHORT SEED ROW FRAME	01	
23	0502012568	UPPER ROCKER ARM	01	
24	0561019032	SEED FERTIL ROW LOCK	01	
25	0501011388	COUPLING SHAFT	02	
26	0503010071	3/16" X 1" COTTERPIN	01	
27	0503030168	HAIR PIN	01	
28	0581018487	FIXER UPPER SPRING	01	
29	0521010773	0.37" X 1.18" COUPLING SHAFT	01	
30	0503010140	1/8" X 3/4" COTTERPIN	01	
31	0503034580	TRACTION SPRING	02	



PST DUO FLEX - FRAME 4880/5720/5950
FRONT LINE SEED SHORT RIGHT CARDAN

Page 53
0501059833

Item	Code	Description	See page	QT
32	0511059264	BEARING WITH AXLE	57	01
33	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

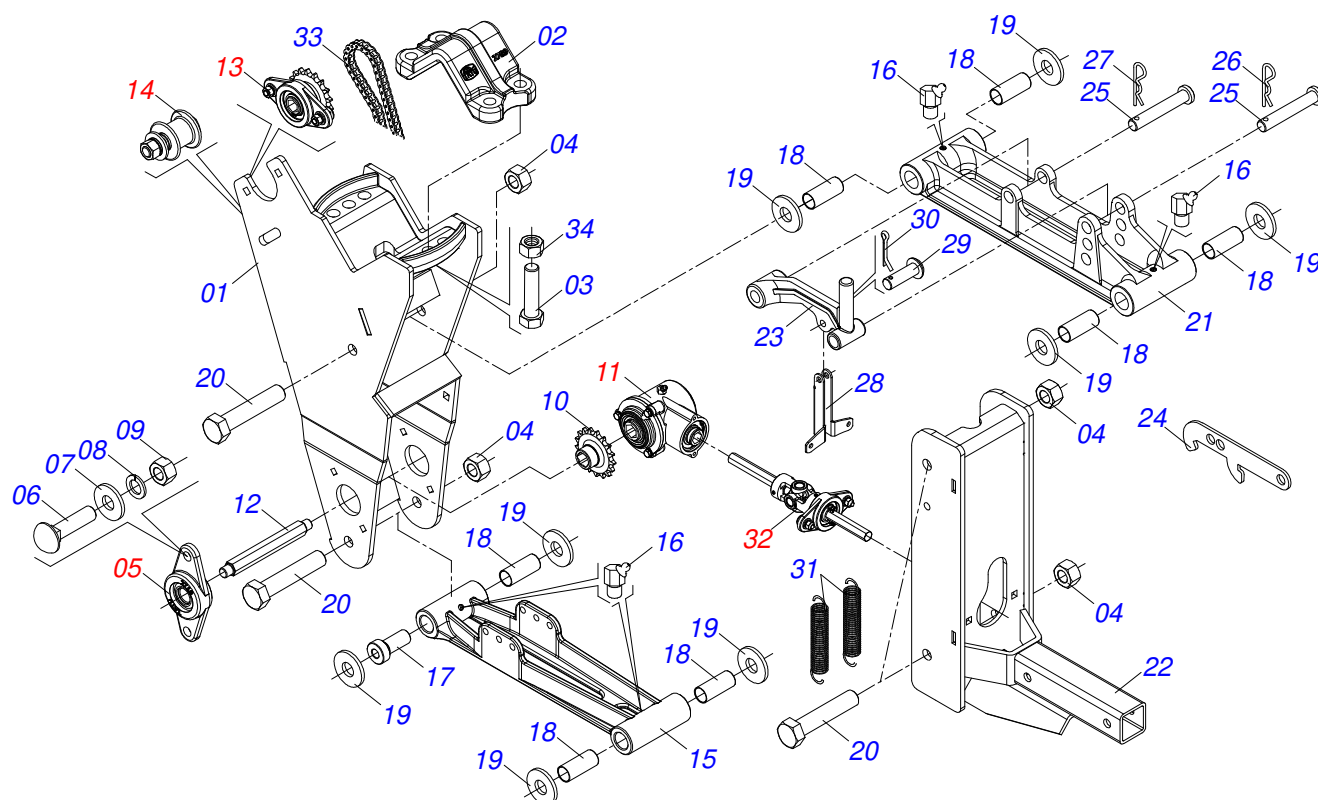


Item	Code	Description	See page	QT
01	0521064650	LEFT SEED ROW SUPPORT FRONT	01	
02	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
03	0503017857	BOLT 5/8 UNF 4	02	
04	0503012412	5/8 UNC SELF LOCKING NUT	06	
05	0511054635	BEARING AXLE BODY	02	
06	0503011953	5/16" X 1" BOLT	04	
07	0501010694	8.5 X 18 X 1.5 FLAT WASHER	04	
08	0503010179	5/16" ZN SPRING WASHER	04	
09	0503010337	5/16" NUT	04	
10	0502012782	17Z GEAR WITH HEX HOLE	01	
11	0511057159	TRANSMISSION BOX SEED LINE	01	
12	0561014904	TRANSMISSION AXLE FRAME LINE	01	
13	0501052769	BEARING WITH 17Z GEAR	01	
14	0511055260	SEED ROW CHAIN TENSIONER	01	
15	0502012666	SEDD ROW LOWER ARM	01	
16	0503010003	1845 GREASE FITTING	04	
17	0561015858	SPACER LOWER SLEEVE	01	
18	0531015151	0.6" X 1" X 2.4" SLEEVE	07	
19	0531015184	FLAT WASHER	08	
20	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN	04	
21	0502012350	SEED ROW UPPER ARM	01	
22	0521061427	SHORT SEED ROW FRAME	01	
23	0502012568	UPPER ROCKER ARM	01	
24	0561019032	SEED FERTIL ROW LOCK	01	
25	0501011388	COUPLING SHAFT	02	
26	0503010071	3/16" X 1" COTTERPIN	01	
27	0503030168	HAIR PIN	01	
28	0581018487	FIXER UPPER SPRING	01	
29	0521010773	0.37" X 1.18" COUPLING SHAFT	01	
30	0503010140	1/8" X 3/4" COTTERPIN	01	
31	0503034580	TRACTION SPRING	02	




PST DUO FLEX - FRAME 4880/5720/5950
FRONT LINE SEED LONG LEFT CARDAN

Page 54
0501059836


Item	Code	Description	See page	QT
32	0511059264	BEARING WITH AXLE	57	01
33	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
34	0503010811	5/8" UNF SELF ADJUSTING NUT		04

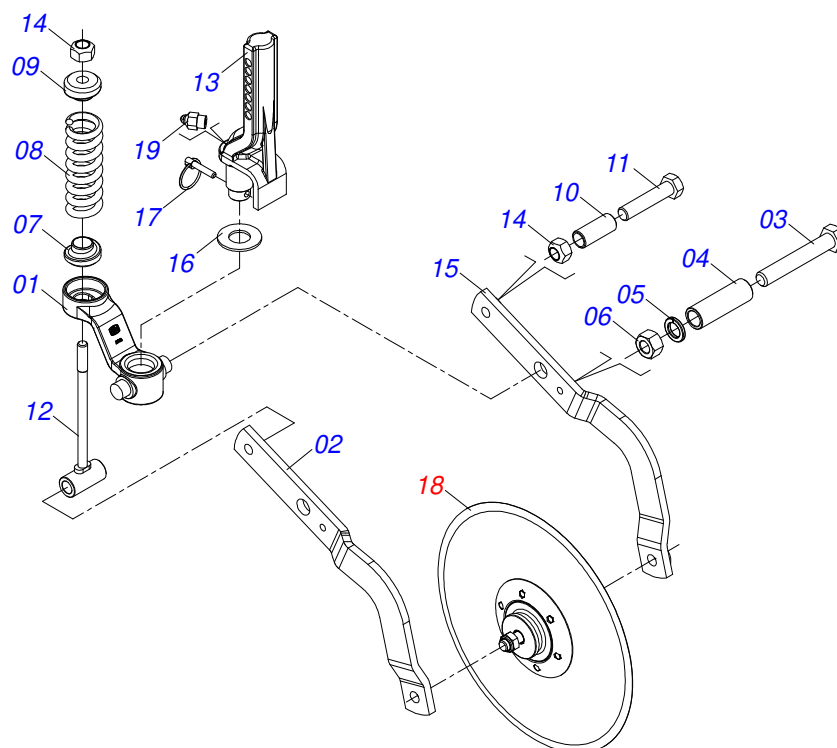


Item	Code	Description	See page	QT
01	0502012816	CUTTING DISC SUPPORT		01
02	0571019976	LEFT BRACELET CUTTING DISC		01
03	0503011411	1/2" X 5-1/2" BOLT		01
04	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
05	0503011440	SPRING WASHER		01
06	0503010060	1/2" NUT		01
07	1902020394	SPRING SUPPORT		01
08	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
09	1902020393	SPRING UPPER SUPPORT		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0501067323	SPRING REGULATOR		01
13	0502012825	SHAFT FIXING SHAFT CUT LINE SHORT		01
14	0503011255	3/4" LOCK NUT		02
15	0521066738	BRACO RIGHT DISC CUT WITH WASHER LOCK PST		01
16	0581011111	WASHER BRACKET AXIS DC PST		01
17	0503034319	LOCK PIN		01
18	0511058648	BOX WITH DISC BLADE 20"		01
19	0503010003	1845 GREASE FITTING		01

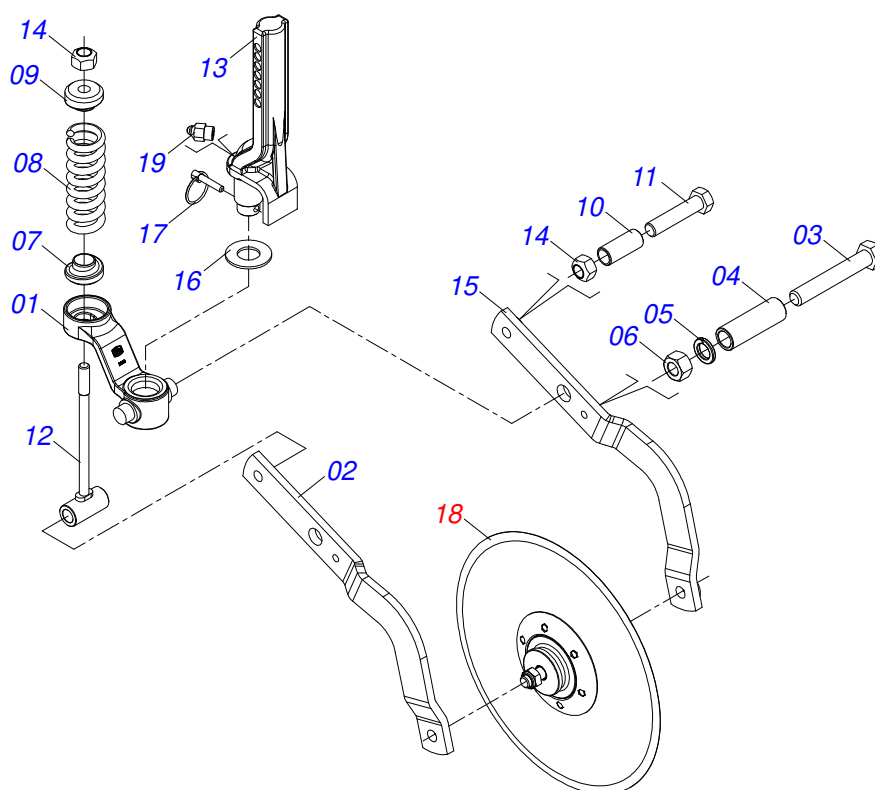


Item	Code	Description	See page	QT
01	0502012816	CUTTING DISC SUPPORT		01
02	0571019976	LEFT BRACELET CUTTING DISC		01
03	0503011411	1/2" X 5-1/2" BOLT		01
04	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
05	0503011440	SPRING WASHER		01
06	0503010060	1/2" NUT		01
07	1902020394	SPRING SUPPORT		01
08	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
09	1902020393	SPRING UPPER SUPPORT		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0501067323	SPRING REGULATOR		01
13	0502012824	FIXING SHAFT DISC CUT LINE		01
14	0503011255	3/4" LOCK NUT		02
15	0521066738	BRACO RIGHT DISC CUT WITH WASHER LOCK PST		01
16	0581011111	WASHER BRACKET AXIS DC PST		01
17	0503034319	LOCK PIN		01
18	0511058648	BOX WITH DISC BLADE 20"		01
19	0503010003	1845 GREASE FITTING		01

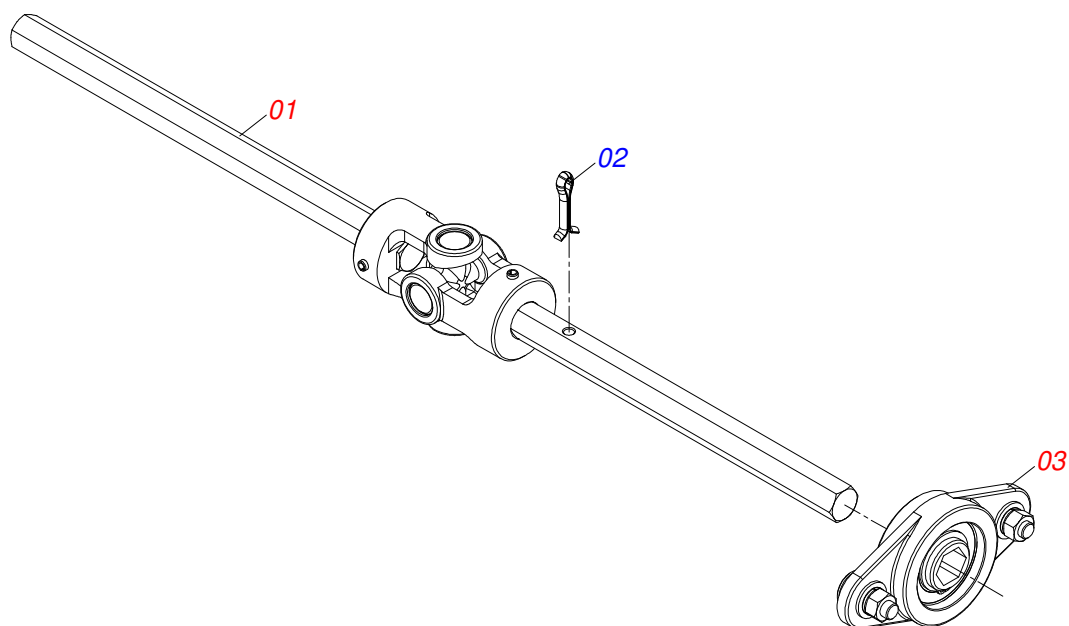


Item	Code	Description	See page	QT
01	0501059326	UNIVERSAL JOINT AXLE		01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0511050611	5/8" HEX AXLE BEARING	58	01

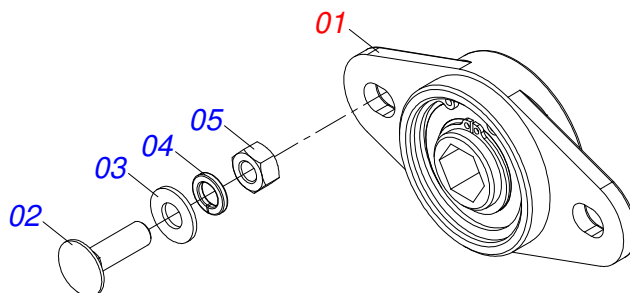


Item	Code	Description	See page	QT
01	0501059363	5/8" HEX AXLE BEARING		01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

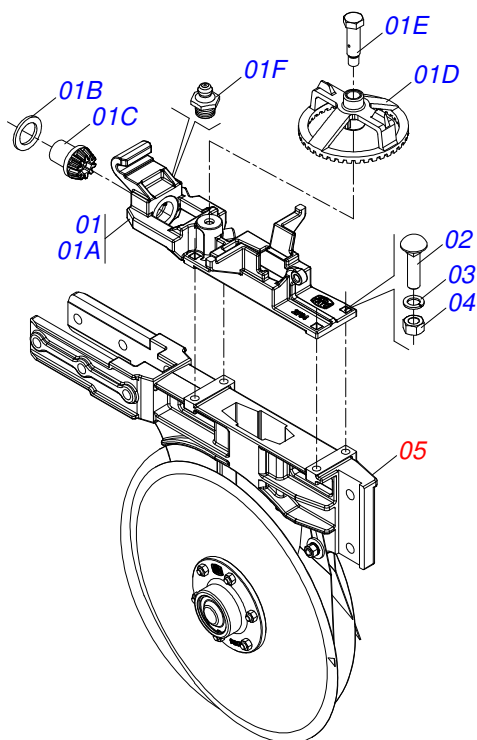


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
01A	0502012704	BASE FIXING SYSTEM		01
01B	0501013354	FLAT WASHER		01
01C	0502012639	12Z LOWER CONICAL GEAR		01
01D	0502011418	40Z CONICAL GEAR		01
01E	0511018700	AXLE		01
01F	0503010002	1800 GREASE FITTING		02
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	76	01

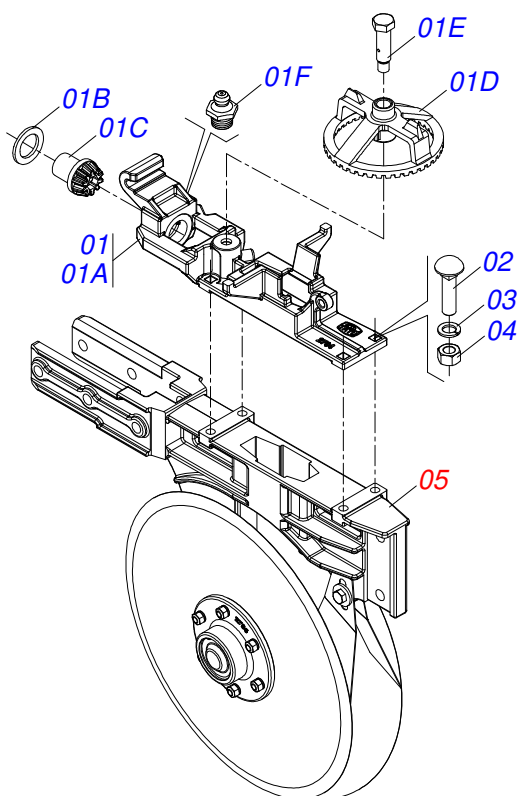


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
01A	0502012704	BASE FIXING SYSTEM		01
01B	0501013354	FLAT WASHER		01
01C	0502012639	12Z LOWER CONICAL GEAR		01
01D	0502011418	40Z CONICAL GEAR		01
01E	0511018700	AXLE		01
01F	0503010002	1800 GREASE FITTING		02
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0511056586	15 X 15 SEED DDD LEFT	77	01

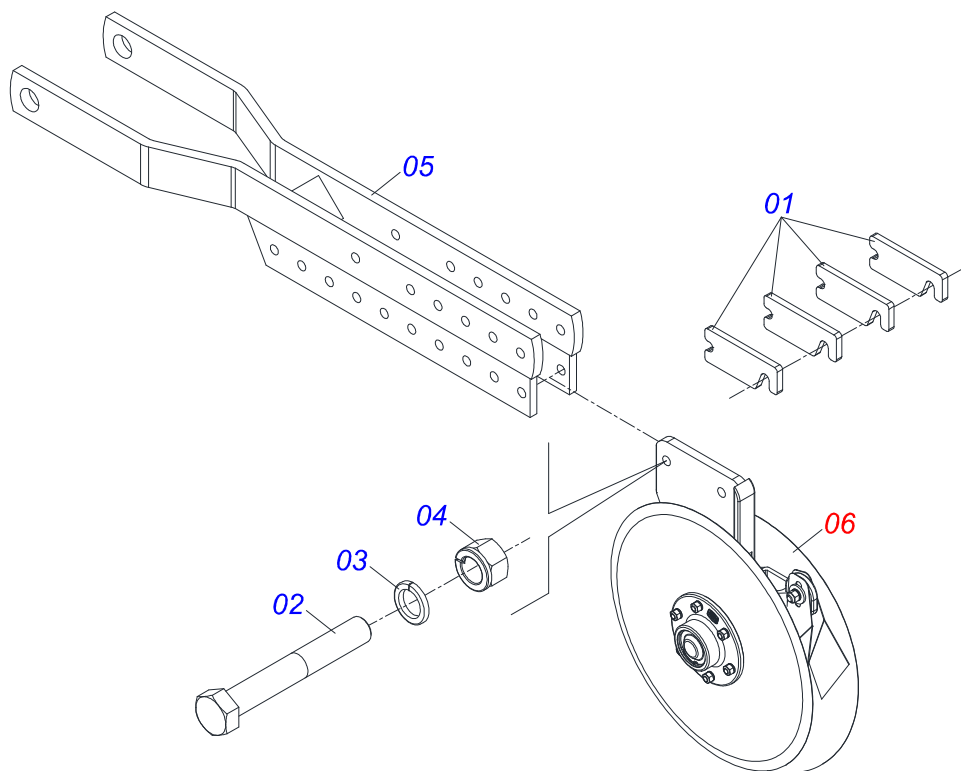

Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503011440	SPRING WASHER		02
04	0503010060	1/2" NUT		02
05	0521061121	SHORT FERTILIZER ROW ARM		01
06	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	67	01

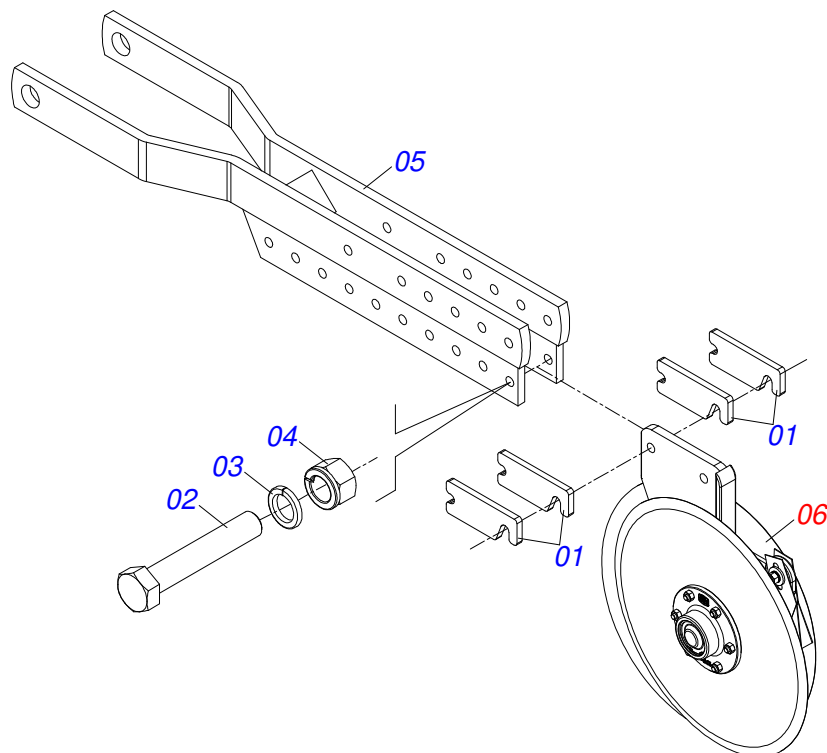

Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503011440	SPRING WASHER		02
04	0503010060	1/2" NUT		02
05	0521061153	LONG ARM FERTILIZER LINE		01
06	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	68	01

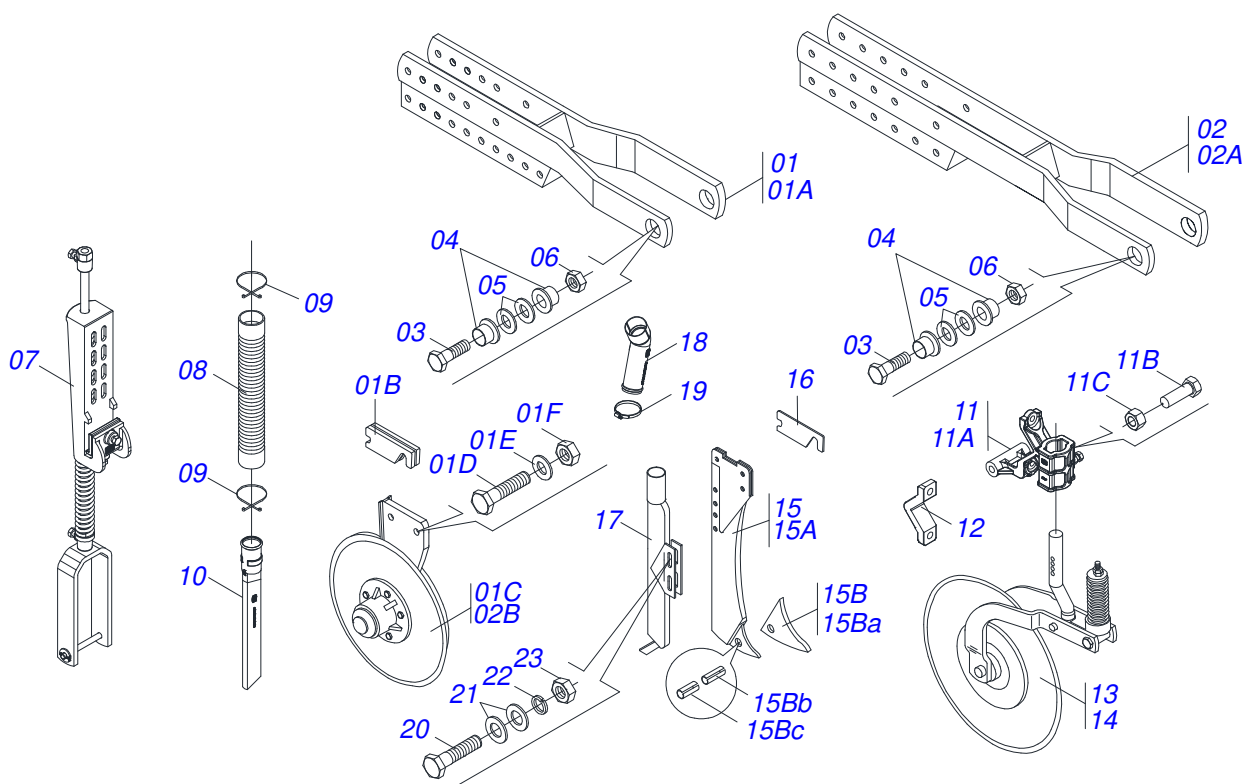


Item	Code	Description	See page	QT
01	0511053250	SHORT ARM FERTILIZER LINE WITH DDD LEFT	61	00 01
01A	0521061153	LONG ARM FERTILIZER LINE		00 01
01B	0511018662	SPACING PLATE		04 04
01C	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	67	00 01
01D	0503010547	1/2" X 4" BOLT		02 02
01E	0503011440	SPRING WASHER		02 02
01F	0503010060	1/2" NUT		04 04
02	0511053251	ARM LONG FERTILIZER LINE WITH DDD RIGHT	62	01 00
02A	0521061121	SHORT FERTILIZER ROW ARM		01 00
02B	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	68	01 00
03	0501010066	3/4" X 9" BOLT		01 01
04	0521017831	SUPPORT SLEEVE SPACER		02 02
05	0511017232	FLAT WASHER		02 02
06	0503011255	3/4" LOCK NUT		01 01
07	0501058423	FERTILIZER ROD SPRING ROW		01 01
08	0503031145	2" X 2" X 20" HOSE		01 01
09	0503031076	2" HOSE CLAMP		02 02
10	0503030520	SEED SOCKET		01 01
11	0511059350	SUPPORT LINE SUPPORT LINE WITH SCREW NUT		01 01
11A	0502012823	CUTTING DISC SUPPORT		01 01
11B	0503019116	BOLT		02 02
11C	0503010013	5/8" NUT		02 02
12	0502010175	HITCH CLAMP		02 02
13	0511058617	DISC CUT 18 SHORT LINE	65	01 00
14	0511058618	DISC CUT 18 LONG LINE	66	00 01
15	0501110231	SCARIFIER HEAD WITH SPIKE 0061		01 01
15A	0511061768	FERTILIZER SCARIFIER SPINDLE		01 01
15B	0501056132	POINT SUBSOILER		01 01
15Ba	0502070061	POINT SUBSOILER		01 01
15Bb	0503010585	0.24" X 1.18" SPRING PIN		01 01
15Bc	0503011373	0.4" X 1.1" SPRING PIN		01 01




PST DUO FLEX - FRAME 4880/5720/5950
FERTILIZER ROW ASSY WITH DDD/SHAFT

Page 63
0909092648


Item	Code	Description	See page	QT
16	0511017969	0.1" SPACING PLATE		02 02
17	0511061852	ADJUSTAMENT CONDUCTOR FERTILIZER		01 01
18	0503031050	CURVED CONDUCTOR		01 01
19	0503010246	CLAMP		01 01
20	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02 02
21	0501010984	FLAT WASHER		04 04
22	0503010025	3/8" SPRING WASHER		02 02
23	0503010026	3/8" NUT		02 02

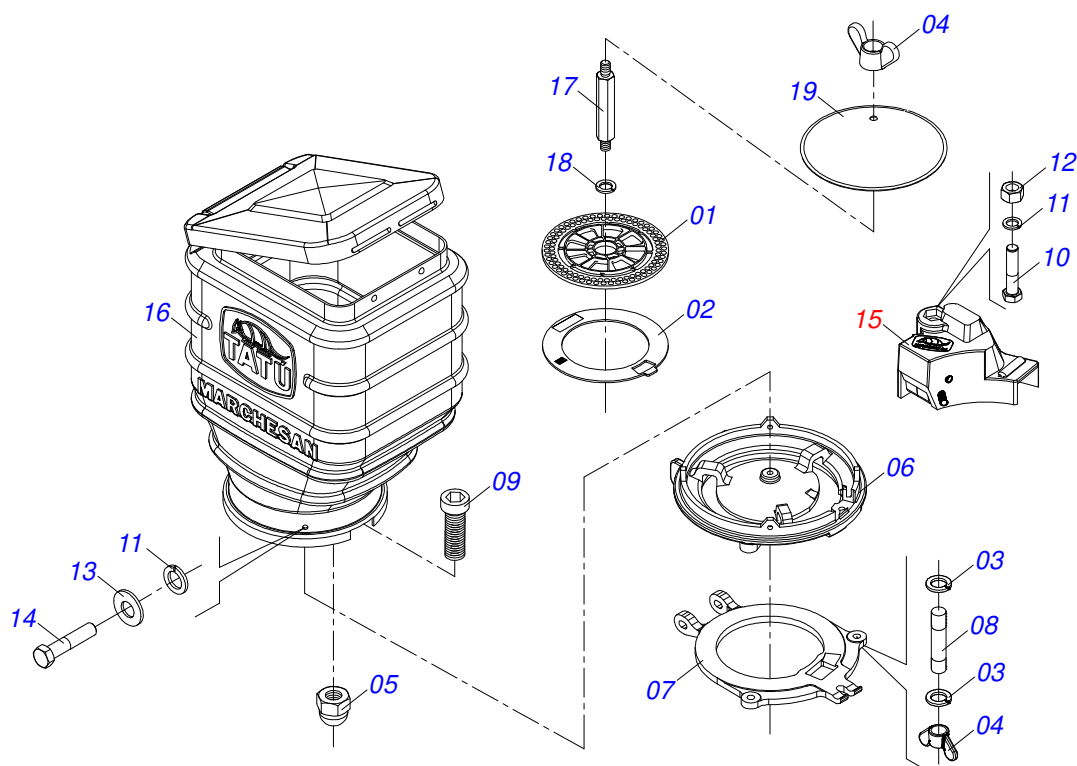


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG	01	
02	0503016219	RING TO SOYBEANS	01	
03	0503010025	3/8" SPRING WASHER	04	
04	0503010209	3/8" UNC BUTTERFLY NUT	03	
05	0503016283	M8 NUT HEX	01	
06	0502020693	SUPPORT SEED BOX	01	
07	0502012721	SEED DISC LOWER TRAIL	01	
08	0503030083	3/8" X 3/8" X 1.6" STUD	02	
09	0503016282	ALLEN BOLT	01	
10	0503010675	5/16" X 2.1/4" BOLT	01	
11	0503010179	5/16" ZN SPRING WASHER	05	
12	0503010337	5/16" NUT	01	
13	0501010694	8.5 X 18 X 1.5 FLAT WASHER	04	
14	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN	04	
15	0501051094	SEED DISTRIB ASSY WITH DOUB PULLEY	01	
16	0503031508	COVER GREEN BEAM SEED YELLOW	01	
17	0571018536	HEX PRISONER	01	
18	0501013518	FLAT WASHER	02	
19	0503034131	DEFLECTOR	01	

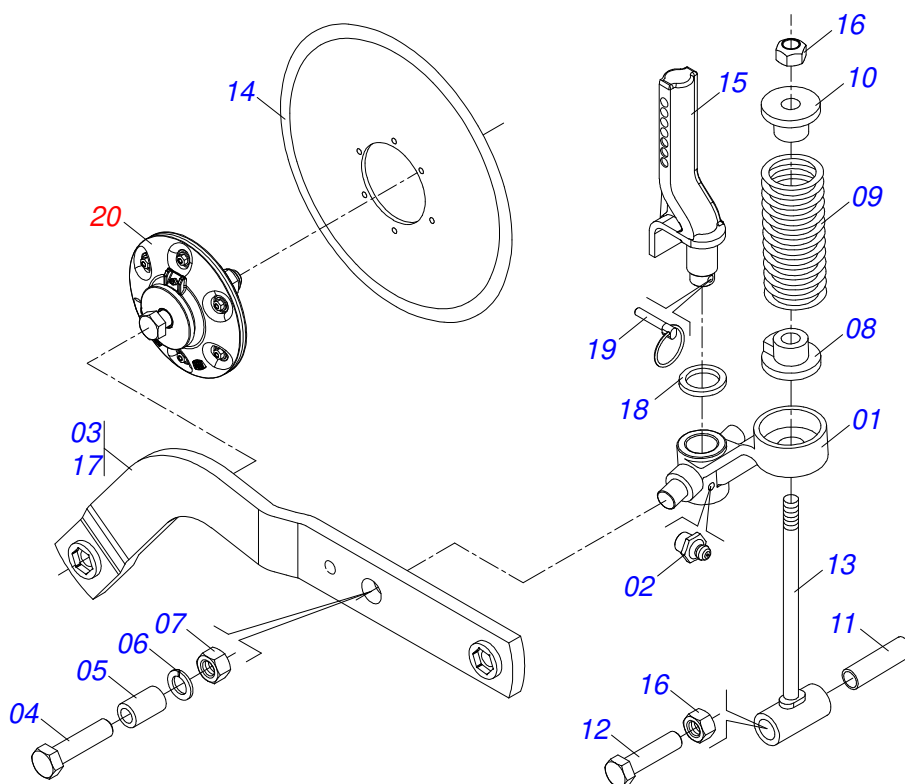


Item	Code	Description	See page	QT
01	0502012816	CUTTING DISC SUPPORT	01	
02	0503010003	1845 GREASE FITTING	01	
03	0571019976	LEFT BRACELET CUTTING DISC	01	
04	0503011411	1/2" X 5-1/2" BOLT	01	
05	0571010188	13,50 X 19 X 86,30/86 SLEEVE	01	
06	0503011440	SPRING WASHER	01	
07	0503010060	1/2" NUT	01	
08	0502020394	SPRING SUPPORT	01	
09	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING	01	
10	0502020393	SPRING UPPER SUPPORT	01	
11	0521010452	SLEEVE	01	
12	0503013185	3/4" X 5-1/2" BOLT	01	
13	0501067323	SPRING REGULATOR	01	
14	0511056910	BOX WITH DISC CUT 18	01	
15	0502012825	SHAFT FIXING SHAFT CUT LINE SHORT	01	
16	0503011255	3/4" LOCK NUT	02	
17	0521066738	BRACO RIGHT DISC CUT WITH WASHER LOCK PST	01	
18	0581011111	WASHER BRACKET AXIS DC PST	01	
19	0503034319	LOCK PIN	01	
20	0511056909	DISC BOX CUT WITHOUT THE DISC	01	

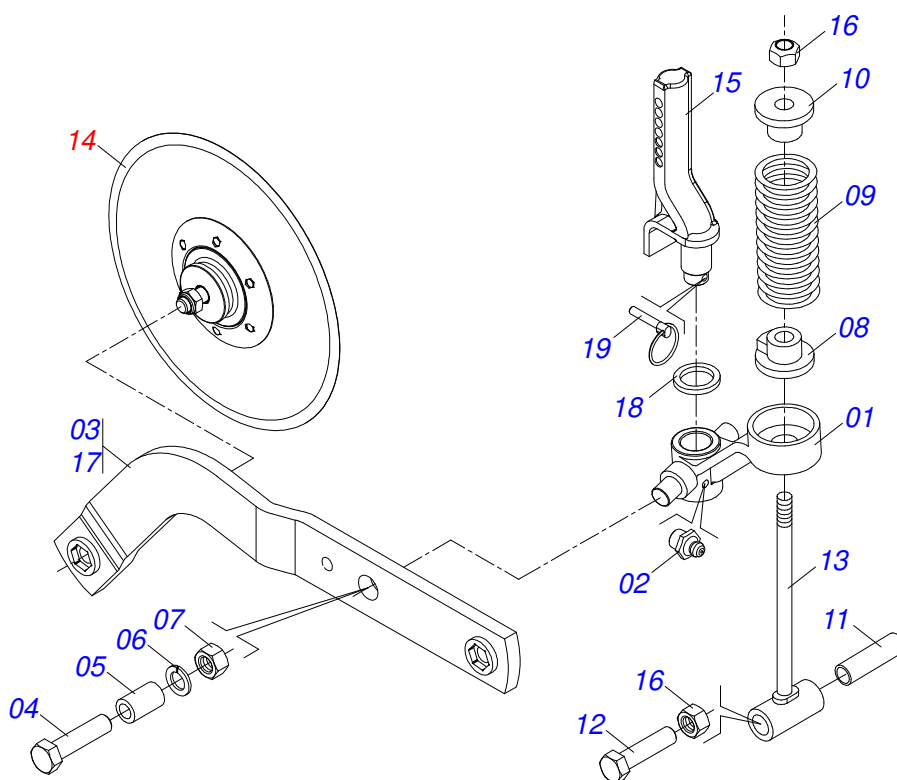


Item	Code	Description	See page	QT
01	0502012816	CUTTING DISC SUPPORT	01	
02	0503010003	1845 GREASE FITTING	01	
03	0571019976	LEFT BRACELET CUTTING DISC	01	
04	0503011411	1/2" X 5-1/2" BOLT	01	
05	0571010188	13,50 X 19 X 86,30/86 SLEEVE	01	
06	0503011440	SPRING WASHER	01	
07	0503010060	1/2" NUT	01	
08	0502020394	SPRING SUPPORT	01	
09	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING	01	
10	0502020393	SPRING UPPER SUPPORT	01	
11	0521010452	SLEEVE	01	
12	0503013185	3/4" X 5-1/2" BOLT	01	
13	0501067323	SPRING REGULATOR	01	
14	0511056910	BOX WITH DISC CUT 18	01	
15	0502012824	FIXING SHAFT DISC CUT LINE	01	
16	0503011255	3/4" LOCK NUT	02	
17	0521066738	BRACO RIGHT DISC CUT WITH WASHER LOCK PST	01	
18	0581011111	WASHER BRACKET AXIS DC PST	01	
19	0503034319	LOCK PIN	01	

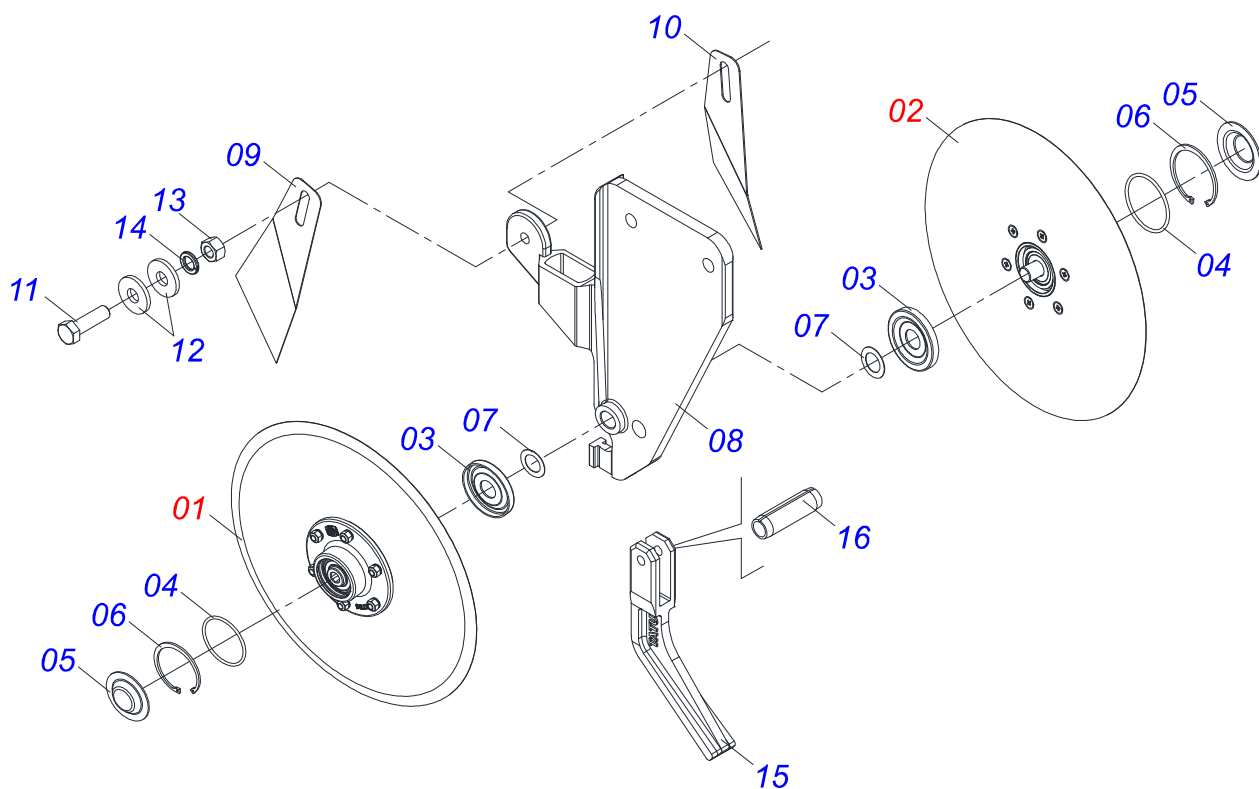


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	78	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	79	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503011443	3/8" SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

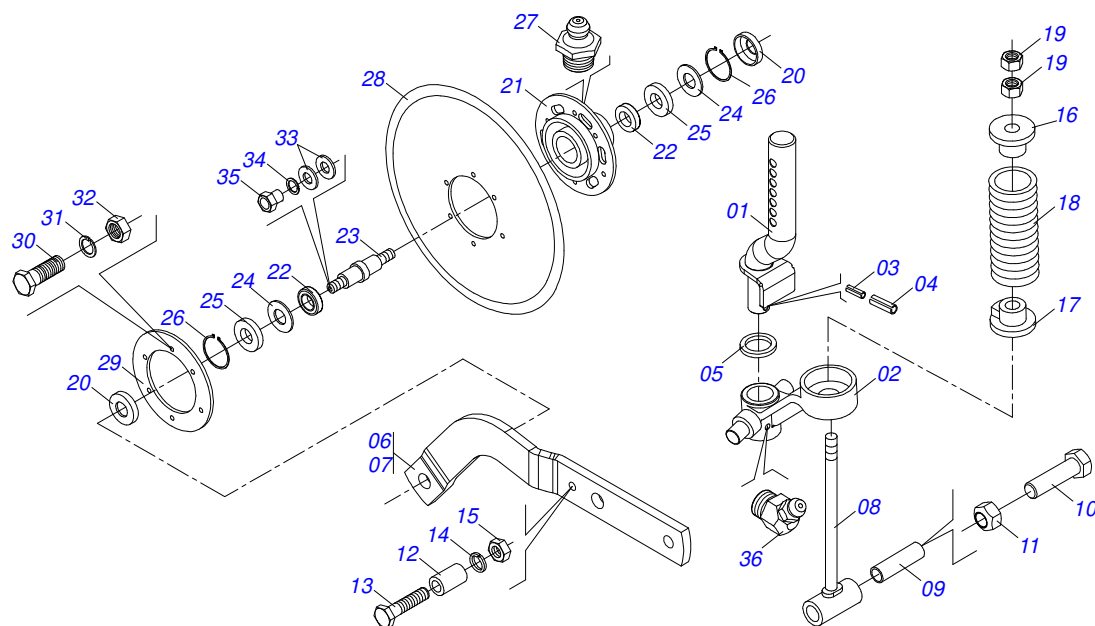


Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15	79	01
02	0511053172	LEFT LOW CUBE WITH DISC 15	78	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010025	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

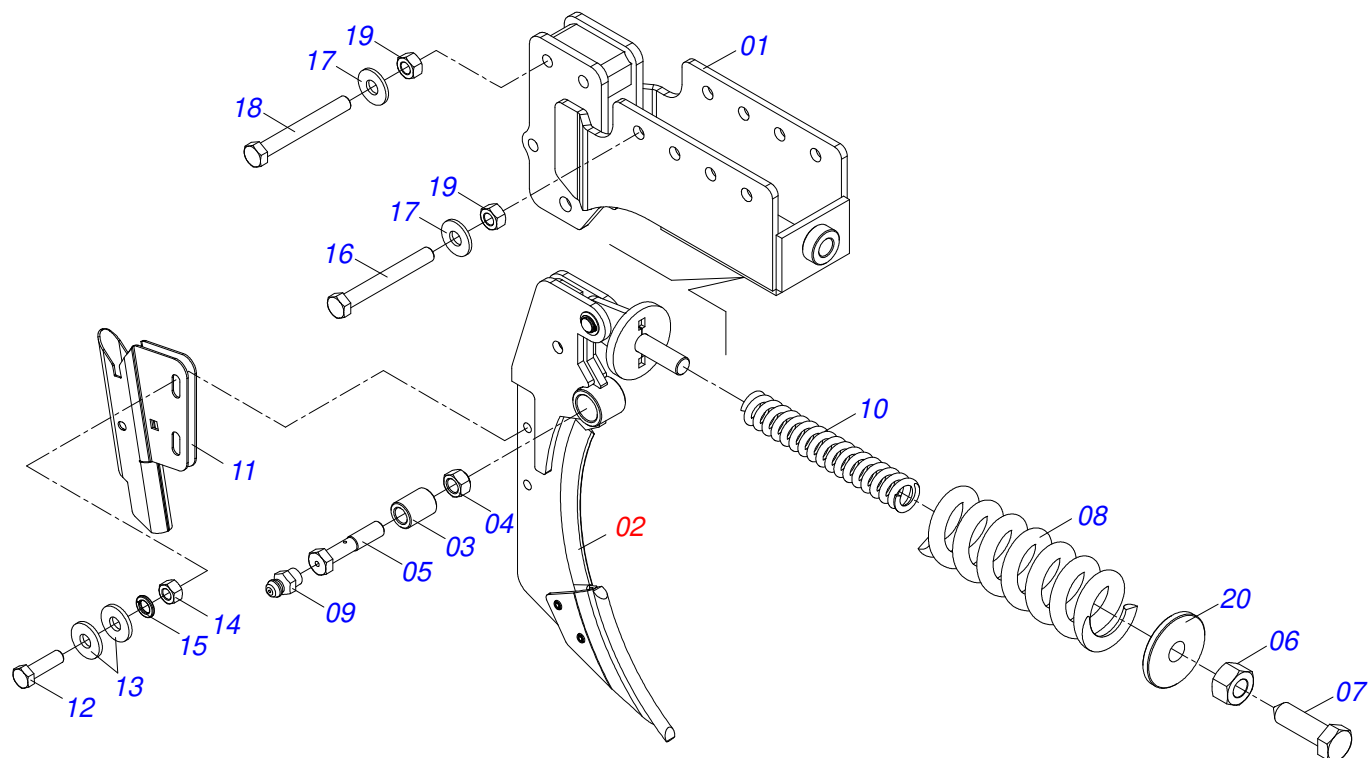

Item	Code	Description	See page	QT
001	0521066202	SUPPORT FIXER ROD		01
002	0511057533	ROD WITH POINT FLANGE WASHER SPRING	70	01
003	0571015538	SLEEVE 37 X 28,3 X 16,70		01
004	0503012795	5/8" HEX SELF ADJUSTING NUT		01
005	0571015552	BOLT FIXER		01
006	0503010417	7/8" NUT		01
007	0503017058	HEX 7/8 UNC X 3 CSRT PC G.5 ZN		01
008	0503034106	80 X 230 X 16,50 HDA COMPRESSION SPRING		01
009	0503010691	1/4" GREASE FITTING		01
010	0503033624	35 X 215 X 7,14 COMPRES SPRING		01
011	0571019531	BODY SOCKET FERTILIZER		01
012	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
013	0501010984	FLAT WASHER		04
014	0503010026	3/8" NUT		02
015	0503011443	3/8" SPRING WASHER		02
016	0503010384	1/2" X 5" BOLT		02
017	0511017302	FLAT WASHER		04
018	0503010547	1/2" X 4" BOLT		02
019	0503011336	1/2" HEX SELF ADJUSTING NUT		04
020	0571019462	SUPPORT GUIDE PRING		01

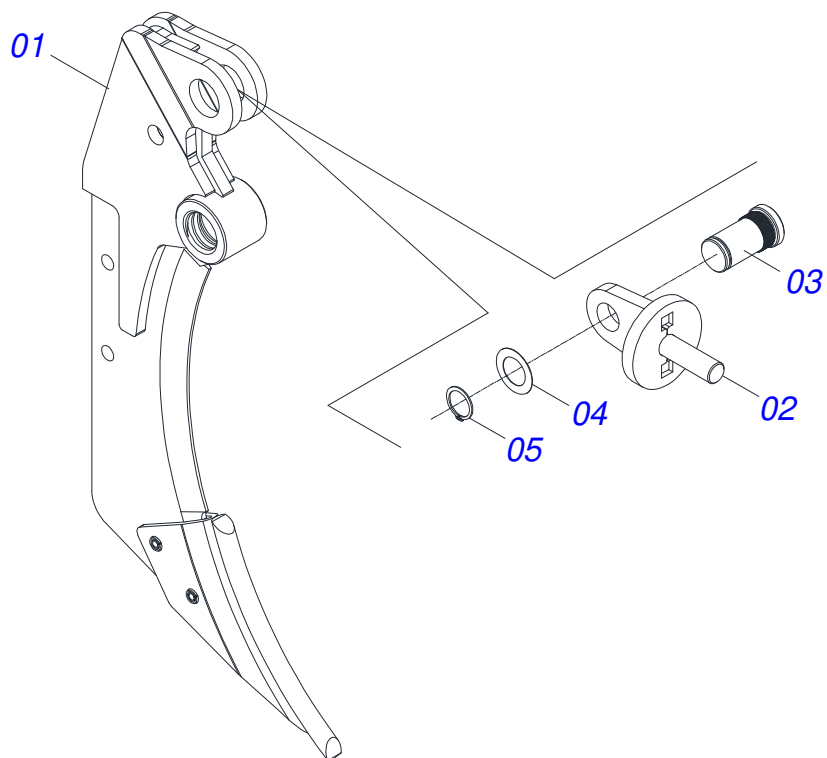


Item	Code	Description	See page	QT
001	0501110810	ROD WITH POINT ARM/DISARMENT		01
002	0521066123	FLANGE WASHER SPRING		01
003	0571015521	PIN LOCK STEM		01
004	0571017723	FLAT WASHER		01
005	0503012104	501015 CLAMPING RING (FOR AXLE)		01

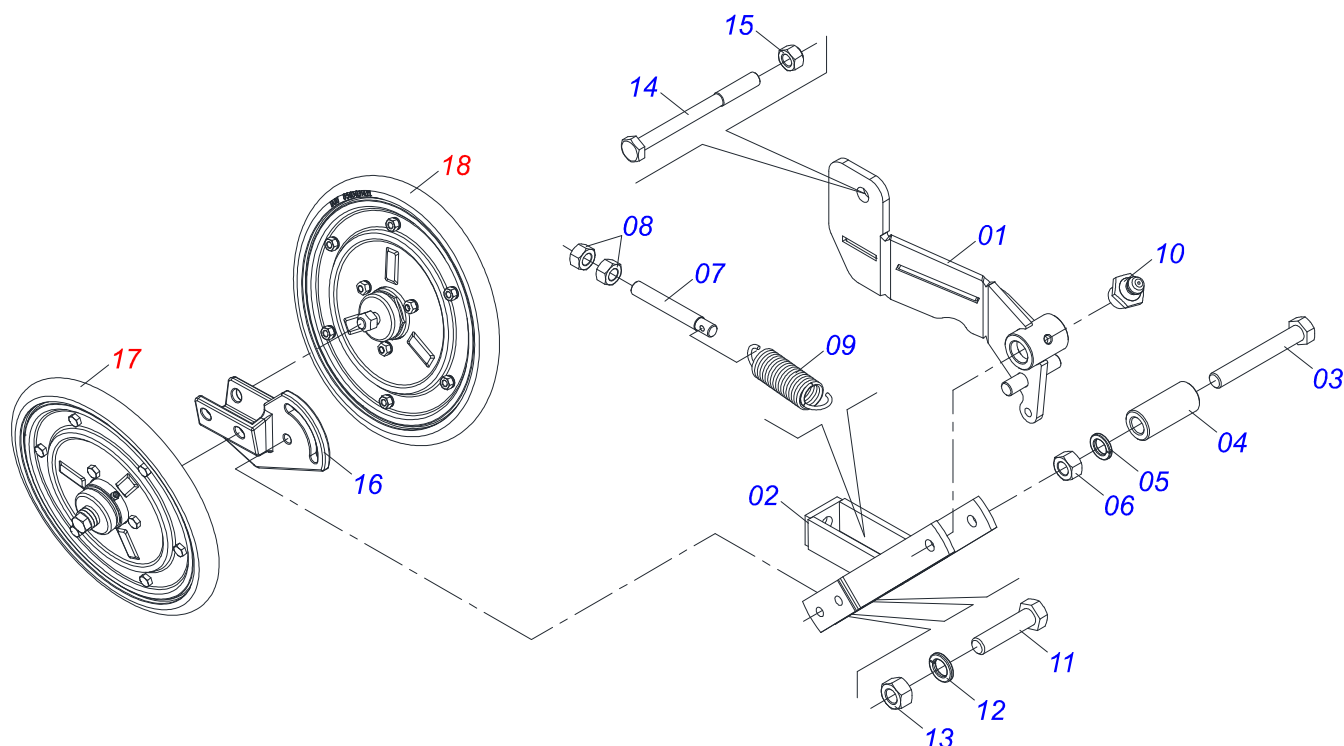


Item	Code	Description	See page	QT
01	0521062253	RIGHT PRESS WHEEL FERT UP SUPPORT		01
02	0511064128	PRESS SUPPORT LOWWER WHEEL		01
03	0503010752	1/2" X 3.1/2" BOLT		01
04	0531013272	0.5" X 1" X 2.2" SLEEVE		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01
07	0501013491	5/8" TENSIONER SPRING		01
08	0503010013	5/8" NUT		02
09	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
10	0503010002	1800 GREASE FITTING		01
11	0503010849	3/8" X 1-1/2" BOLT		02
12	0503010025	3/8" SPRING WASHER		02
13	0503010026	3/8" NUT		02
14	0503010795	5/8" X 7" BOLT		01
15	0503012412	5/8 UNC SELF LOCKING NUT		01
16	0502011757	PRESS REGULATOR		01
17	0511054333	COMPACT WHEEL RIGHT WITH BEARING	73	01
18	0511054334	COMPACT WHEEL LEFT WITH BEARING	74	01

V LEFT WHEEL PRESS FERTILIZER ASSY (OPTIONAL)


0501054293

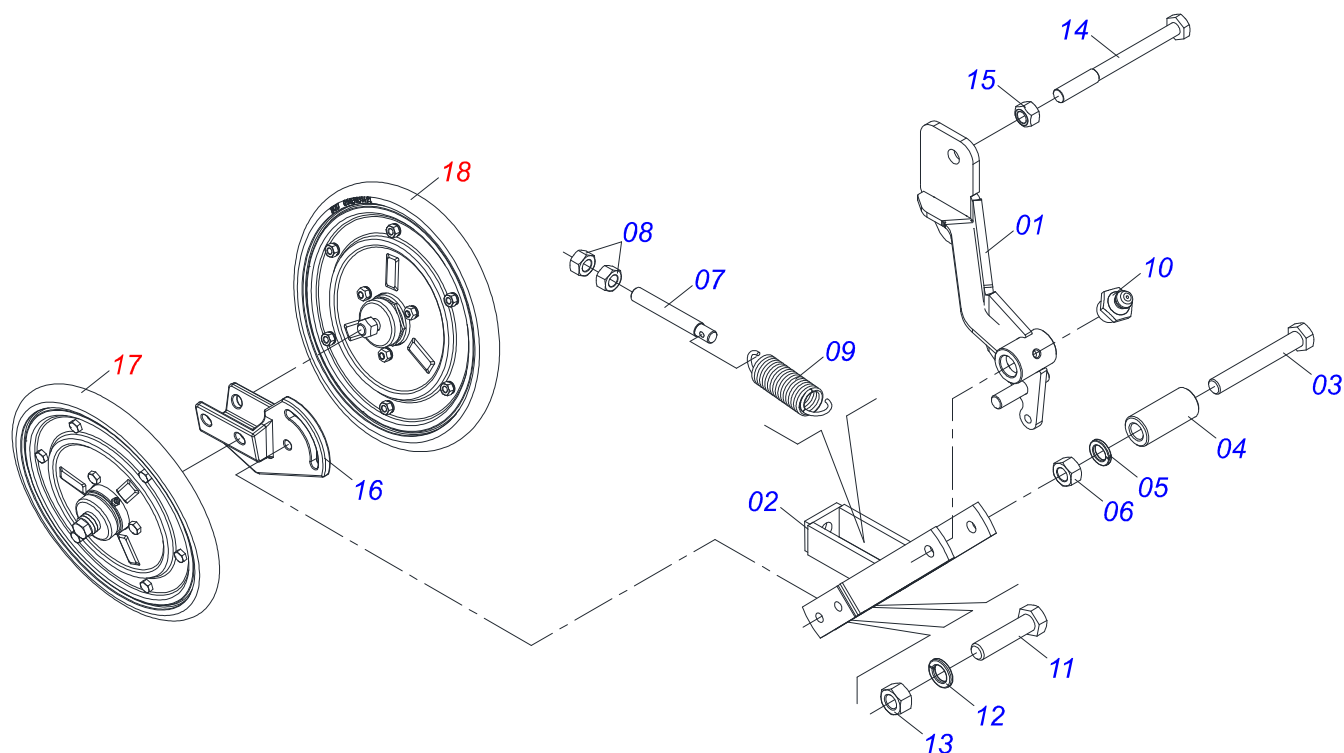


Item	Code	Description	See page	QT
01	0521062254	LEFT PRESS WHEEL FERT UPPER SUPPORT		01
02	0511064128	PRESS SUPPORT LOWWER WHEEL		01
03	0503010752	1/2" X 3.1/2" BOLT		01
04	0531013272	0.5" X 1" X 2.2" SLEEVE		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01
07	0501013491	5/8" TENSIONER SPRING		01
08	0503010013	5/8" NUT		02
09	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
10	0503010002	1800 GREASE FITTING		01
11	0503010849	3/8" X 1-1/2" BOLT		02
12	0503010025	3/8" SPRING WASHER		02
13	0503010026	3/8" NUT		02
14	0503010795	5/8" X 7" BOLT		01
15	0503012412	5/8 UNC SELF LOCKING NUT		01
16	0502011757	PRESS REGULATOR		01
17	0511054333	COMPACT WHEEL RIGHT WITH BEARING	73	01
18	0511054334	COMPACT WHEEL LEFT WITH BEARING	74	01

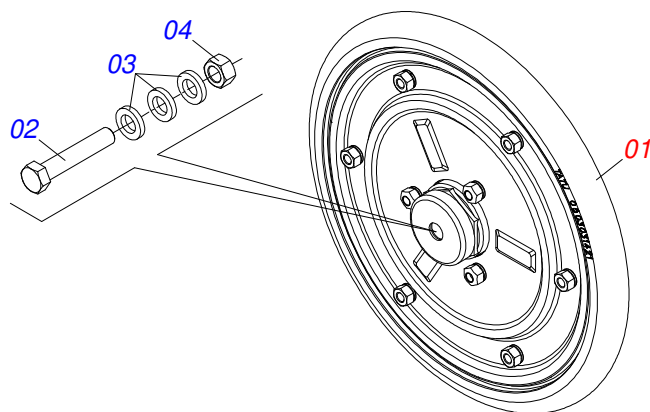


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	47	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

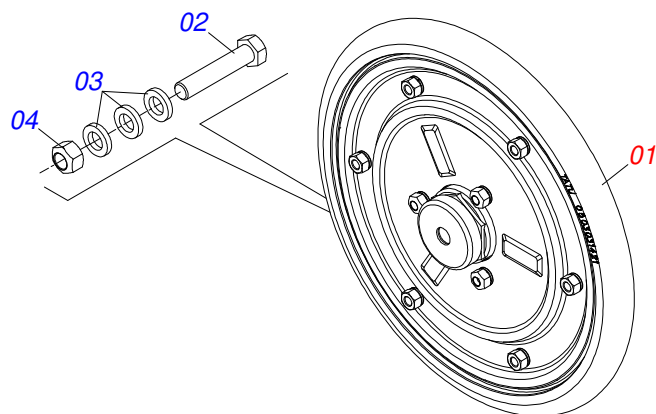


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	47	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

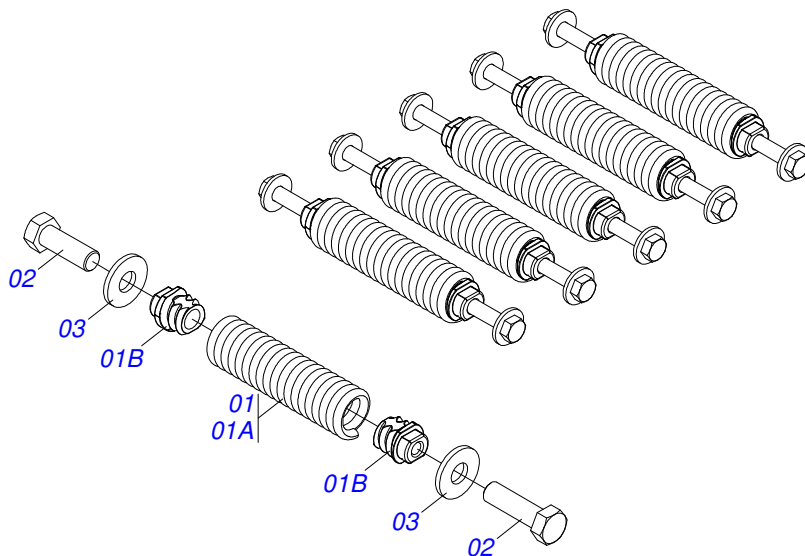


Item	Code	Description	See page	QT
01	0511050681	TRACTION SPRING		06
01A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
01B	0561016062	SPRING HITCH		02
02	0503013030	5/8" X 3.1/4" BOLT		12
03	0501012140	FLAT WASHER		24

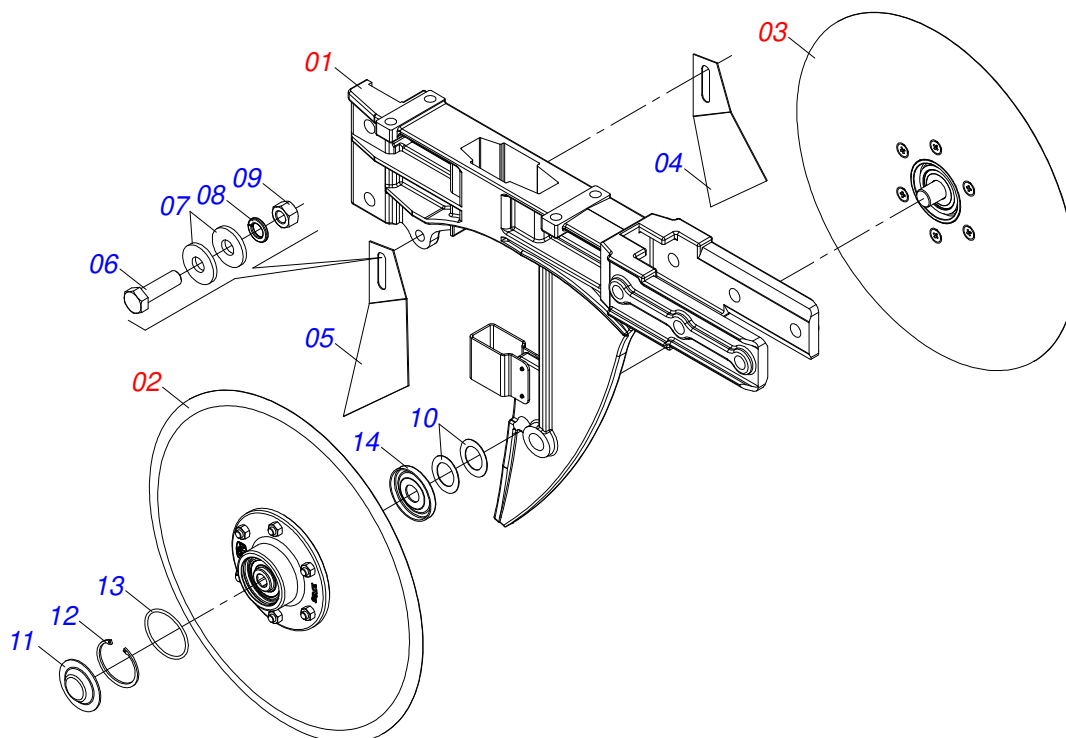


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT		01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	79	01
03	0511053172	LEFT LOW CUBE WITH DISC 15	78	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511015098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O-RING		02
14	0511011927	DUST CLOAK		02

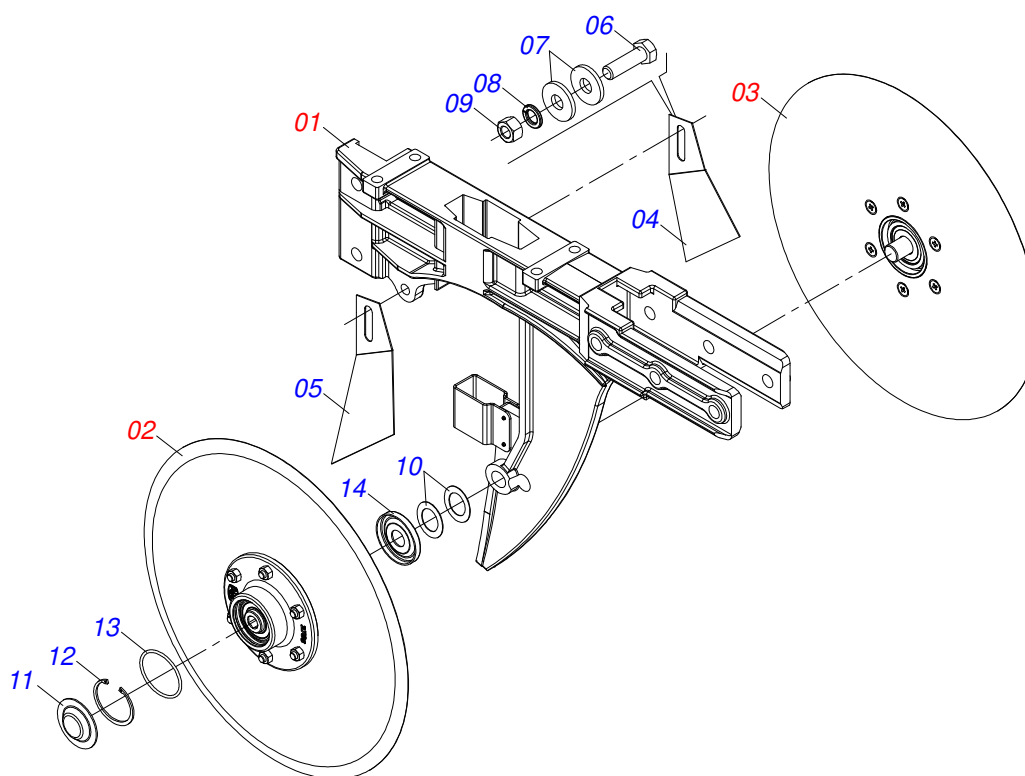


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE		01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	79	01
03	0511053172	LEFT LOW CUBE WITH DISC 15	78	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503011443	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511015098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O-RING		02
14	0511011927	DUST CLOAK		02

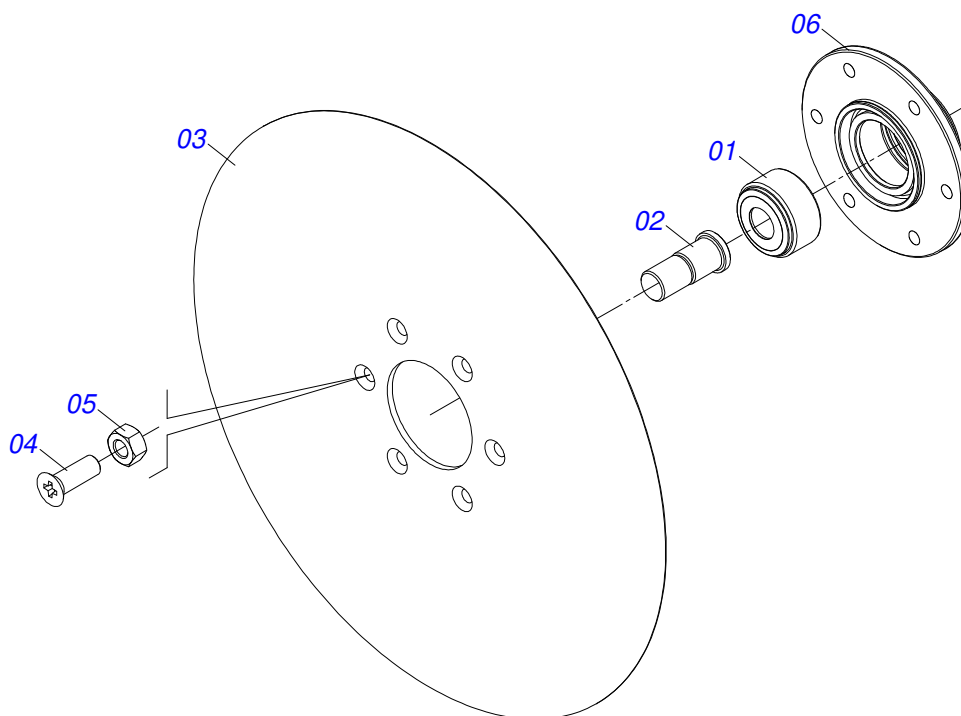

Item	Code	Description	See page	QT
01	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

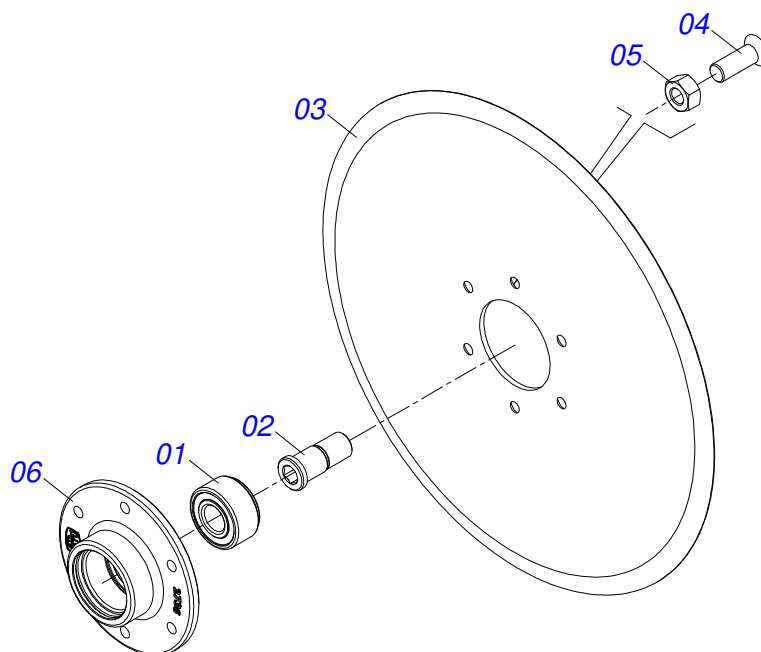


Item	Code	Description	See page	QT
01	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

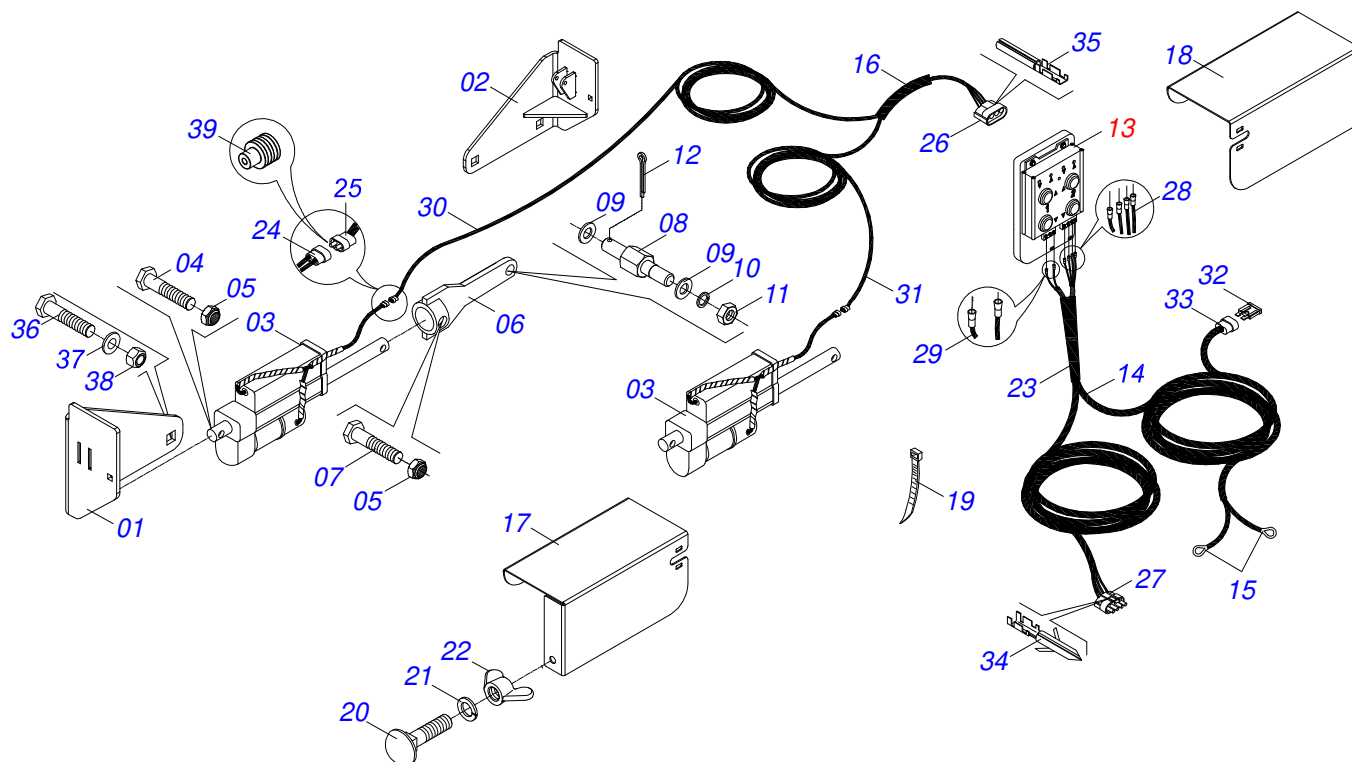


Item	Code	Description	See page	QT
01	0521063492	SUPPORT RIGHT ACTUATOR	01	
02	0521063493	SUPPORT LEFT ACTUATOR	01	
03	0503016360	LINEAR ACTUATOR	02	
04	0503010420	BOLT	02	
05	0503012880	1/4" UNC SELF ADJUSTING NUT	04	
06	0521063491	PIVOT ARM	02	
07	0503010733	1/4" X 1-3/4" BOLT	02	
08	0571012352	AXLE FIXER	02	
09	0501010984	FLAT WASHER	04	
10	0503010025	3/8" SPRING WASHER	02	
11	0503010026	3/8" NUT	02	
12	0503010257	1/8" X 1" COTTERPIN	02	
13	0511052438	COUNTERWEIGHT BOX	01	
14	0503014045	CABLE CORD PLASTIC	6 MT	
15	0503014591	RING CONNECTOR	02	
16	3505151602	TUBE	0.100 MT	
17	0571012359	RH CHAIN PROTECTION	01	
18	0571012360	LH CHAIN PROTECTION CAP	01	
19	0503013527	CLAMP ZIPER	20	
20	0503011953	5/16" X 1" BOLT	02	
21	0503010179	5/16" ZN SPRING WASHER	02	
22	0503010499	5/16" UNC BUTTERFLY NUT	02	
23	3505151603	TUBE	0.500 MT	
24	0503015905	TWO-WAY FEMALE MALE CONNECTOR	03	
25	0503015906	TWO-WAY MALE CONNECTOR	03	
26	0503016371	CONNECTOR FEMALE 4 VIAS	01	
27	0503016372	CONNECTOR FEMALE 5 VIAS	01	
28	0503014043	TERMINAL	04	
29	0503014044	TPP-22-L TERMINAL	02	
30	0503015497	CABLE PP	5.500 MT	
31	0503014745	2 X 2,5 MM ELECTRIC CABLE	5.000 MT	

Item	Code	Description	See page	QT
32	0503016454	10 AMPERES FUSE		01
33	0503016455	SUPPORT FUSE		01
34	0503015907	MALE TERMINAL		10
35	0503015908	FEMALE TERMINAL		10
36	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		04
37	0501012140	FLAT WASHER		04
38	0503012412	5/8 UNC SELF LOCKING NUT		04
39	0503015911	CABLE SEAL		16

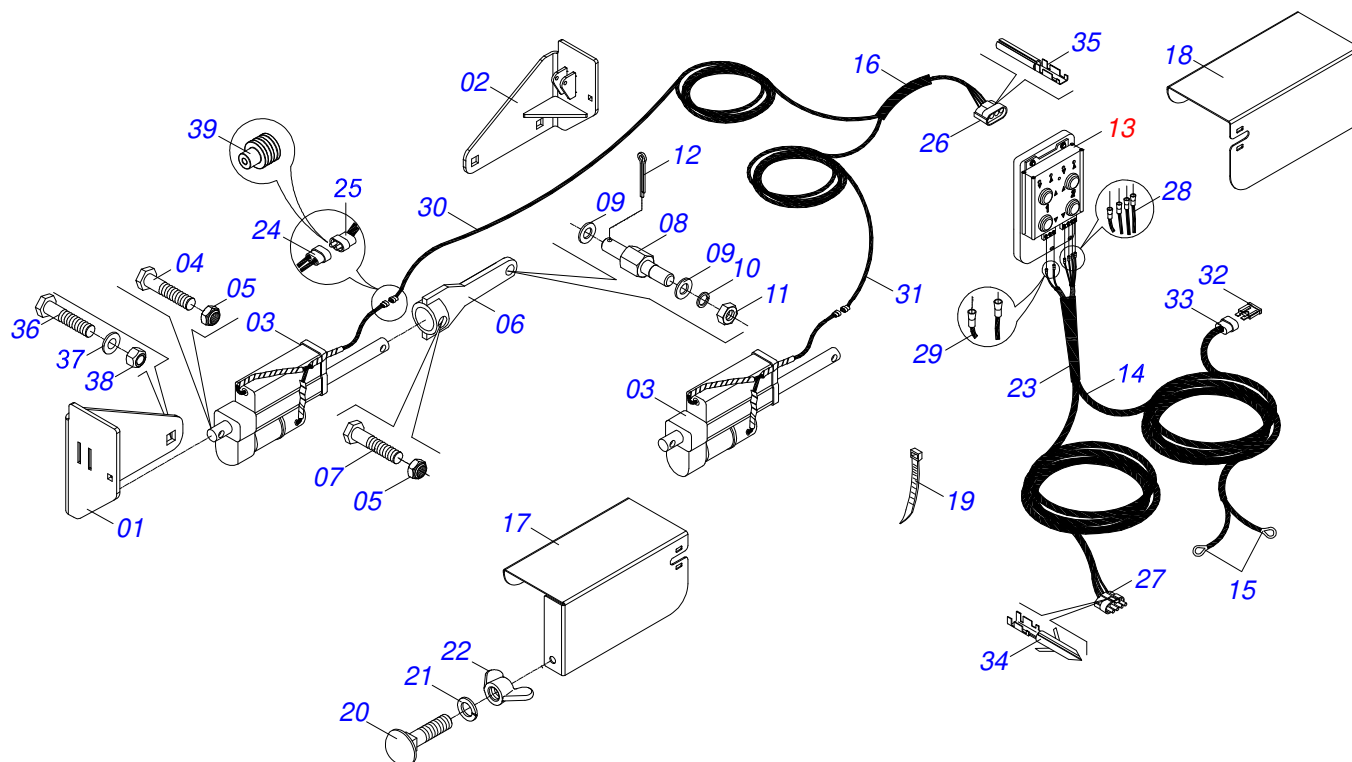


Item	Code	Description	See page	QT
01	0521063492	SUPPORT RIGHT ACTUATOR	01	
02	0521063493	SUPPORT LEFT ACTUATOR	01	
03	0503016360	LINEAR ACTUATOR	02	
04	0503010420	BOLT	02	
05	0503012880	1/4" UNC SELF ADJUSTING NUT	04	
06	0521063491	PIVOT ARM	02	
07	0503010733	1/4" X 1-3/4" BOLT	02	
08	0571012352	AXLE FIXER	02	
09	0501010984	FLAT WASHER	04	
10	0503010025	3/8" SPRING WASHER	02	
11	0503010026	3/8" NUT	02	
12	0503010257	1/8" X 1" COTTERPIN	02	
13	0511052438	COUNTERWEIGHT BOX	01	
14	0503014045	CABLE CORD PLASTIC	7 MT	
15	0503014591	RING CONNECTOR	02	
16	3505151602	TUBE	0.100 MT	
17	0571012359	RH CHAIN PROTECTION	01	
18	0571012360	LH CHAIN PROTECTION CAP	01	
19	0503013527	CLAMP ZIPER	20	
20	0503011953	5/16" X 1" BOLT	02	
21	0503010179	5/16" ZN SPRING WASHER	02	
22	0503010499	5/16" UNC BUTTERFLY NUT	02	
23	3505151603	TUBE	0.500 MT	
24	0503015905	TWO-WAY FEMALE MALE CONNECTOR	03	
25	0503015906	TWO-WAY MALE CONNECTOR	03	
26	0503016371	CONNECTOR FEMALE 4 VIAS	01	
27	0503016372	CONNECTOR FEMALE 5 VIAS	01	
28	0503014043	TERMINAL	04	
29	0503014044	TPP-22-L TERMINAL	02	
30	0503015497	CABLE PP	5.500 MT	
31	0503014745	2 X 2,5 MM ELECTRIC CABLE	5.000 MT	


Item	Code	Description	See page	QT
32	0503016454	10 AMPERES FUSE		01
33	0503016455	SUPPORT FUSE		01
34	0503015907	MALE TERMINAL		10
35	0503015908	FEMALE TERMINAL		10
36	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		04
37	0501012140	FLAT WASHER		04
38	0503012412	5/8 UNC SELF LOCKING NUT		04
39	0503015911	CABLE SEAL		16

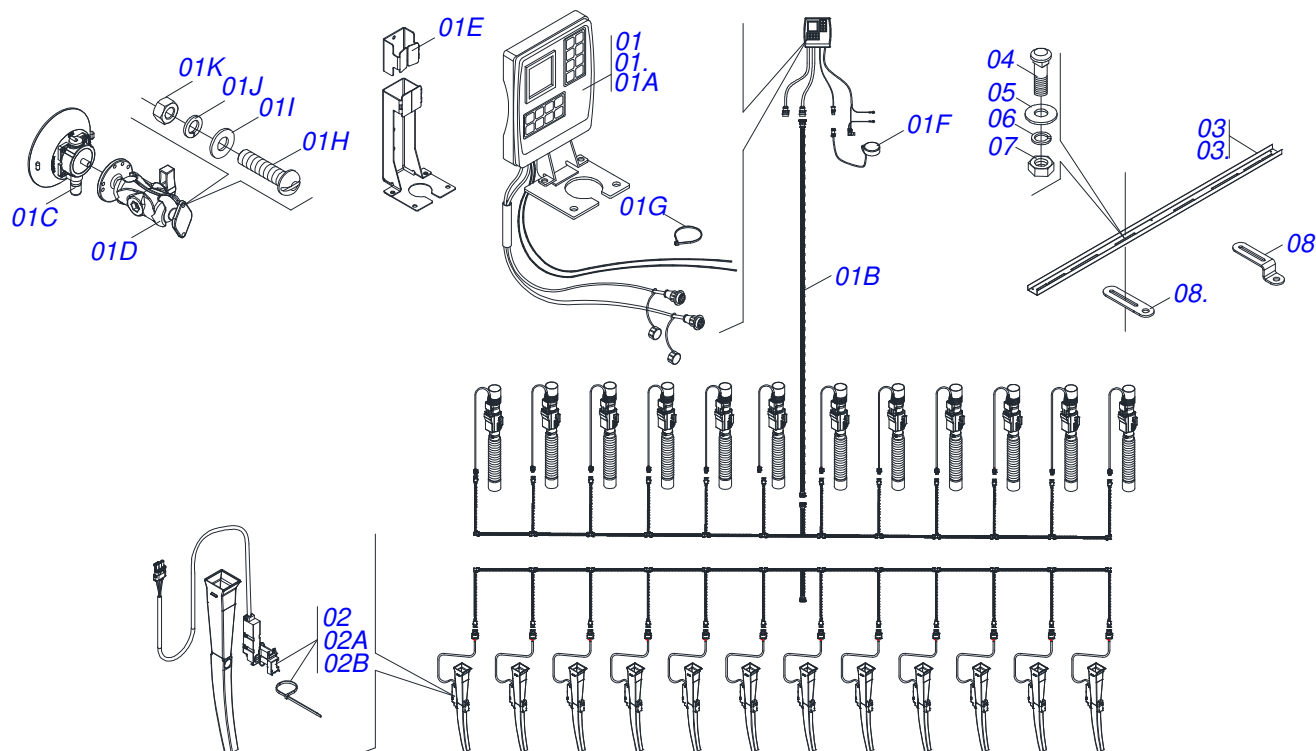


Item	Code	Description	See page	11 13
01	0511056395	SEDD ROW MONITOR ASSY		01 00
01.	0511056396	13L SEED OR FERTILIZER PLANT MONITORING ASSEMBLY PM400		00 01
01A	0503017602	MONITOR PLANT PM400		01 01
01B	0503016559	13 ROW SIMPLE CABLE MONITORING		01 01
01C	0503016234	TRIMBLE FIXING WINDOW		01 01
01D	0503016452	FIXING SUPPORT AG500 TRIMBLE		01 01
01E	0571012196	MOUNTING BRACKET PM 400		01 01
01F	0503017443	ANTENNA GPS PM 400		01 01
01G	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		180 195
01H	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02 02
01I	0503010669	FLAT WASHER		02 02
01J	0503010668	3/16" SPRING WASHER		02 02
01K	0503010667	3/16" NUT		02 02
02	0501058972	ASSEMBLY SENSOR ELECTRONIC		01 01
02A	0503015218	SENSOR FOTOELE PM 400		01 01
02B	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03 03
03	0571017236	GUTTER		08 00
03.	0571013314	GUTTER 25 X 58 X 1500		00 08
04	0501011643	3/8 X 1" BOLT		08 08
05	0501010984	FLAT WASHER		08 08
06	0503010025	3/8" SPRING WASHER		08 08
07	0503010026	3/8" NUT		08 08
08	0571017368	SUPPORT GUTTER		08 00
08.	0571018663	SUPPORT GUTTER		00 08

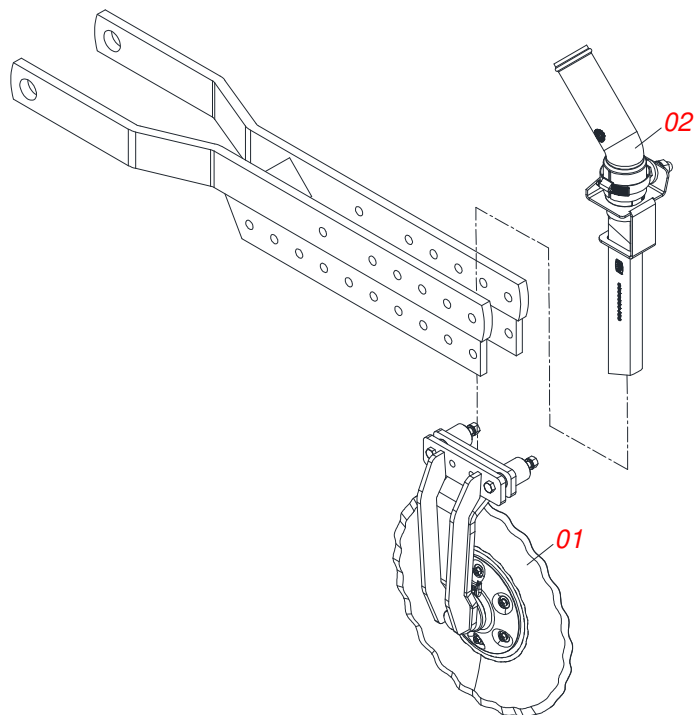


Item	Code	Description	See page	QT
001	0511059218	RIGHT SUPPORT	86	01
002	0521050168	MOUNTED FERTILIZER CONDUCTOR	89	01

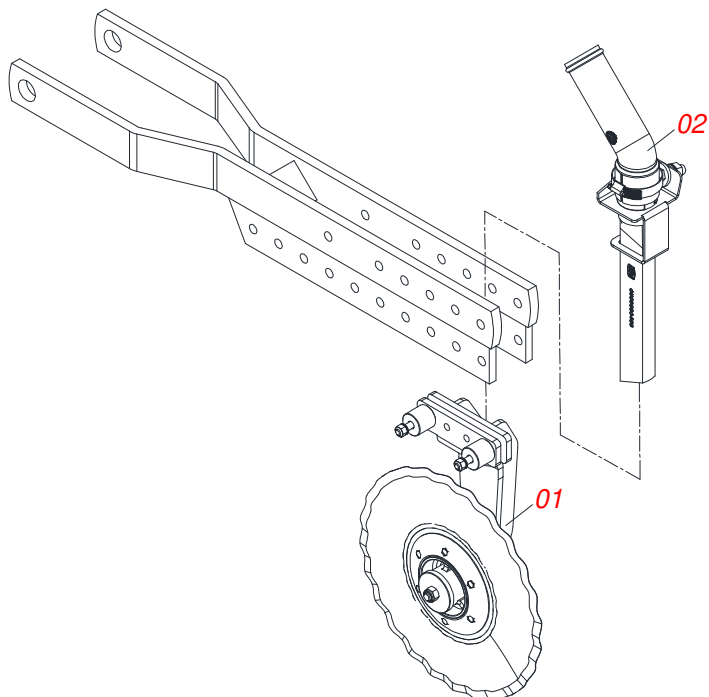


Item	Code	Description	See page	QT
001	0511059219	LEFT SUPPORT	85	01
002	0521050168	MOUNTED FERTILIZER CONDUCTOR	89	01

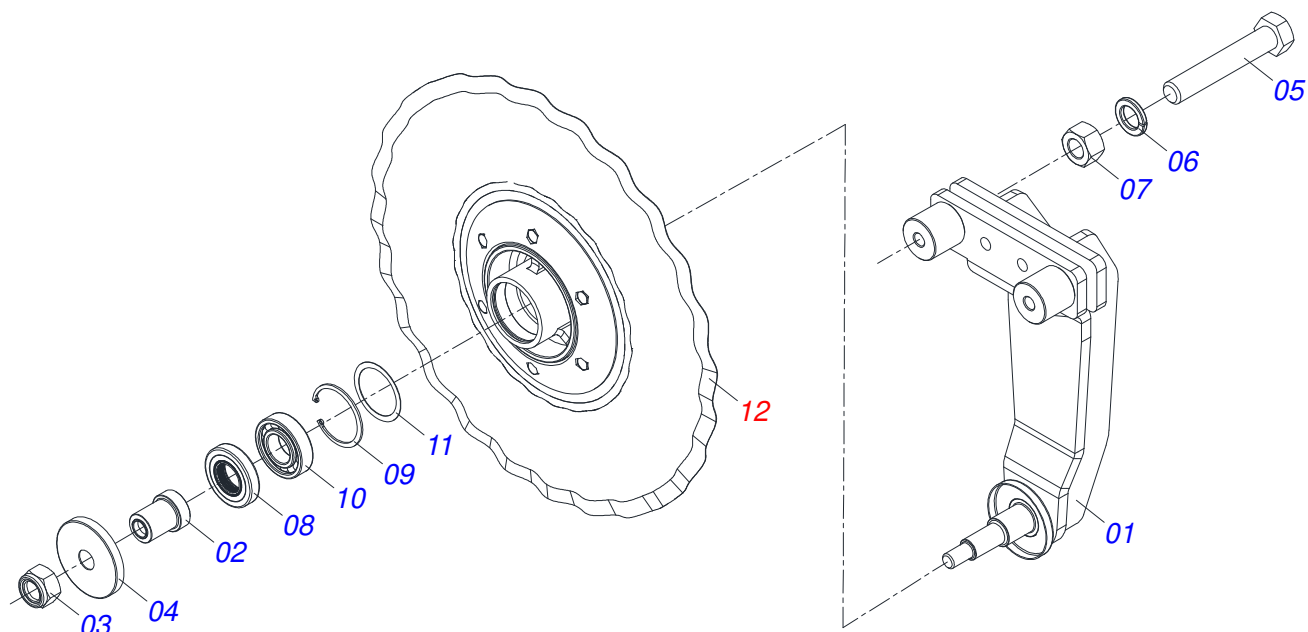


Item	Code	Description	See page	QT
01	0521066977	ARM BLADE DISC		01
02	0581011838	SLEVE GUIDES		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0521015376	DUST CLOAK		01
05	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2" NUT		02
08	0503012417	SEAL		01
09	0503011800	SEAL RING		01
10	0503010276	6206 BALL BEARING		01
11	0503030832	FLAT WASHER		01
12	0511059230	BOX WITH DOC 18 TURBO LEFT	87	01

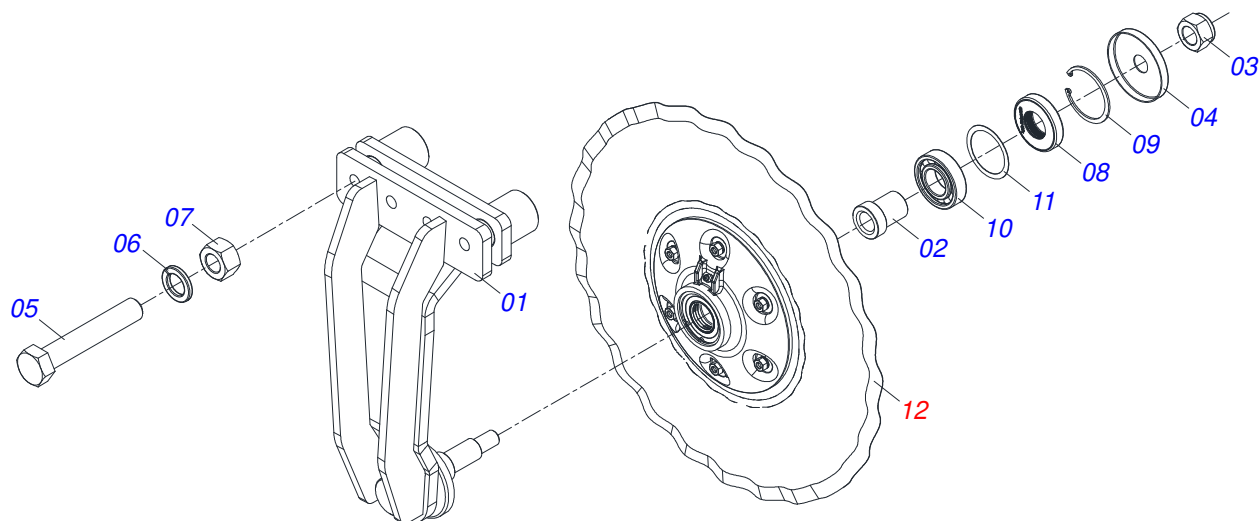


Item	Code	Description	See page	QT
01	0521066977	ARM BLADE DISC		01
02	0581011838	SLEVE GUIDES		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0521015376	DUST CLOAK		01
05	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2" NUT		02
08	0503012417	SEAL		01
09	0503011800	SEAL RING		01
10	0503010276	6206 BALL BEARING		01
11	0503030832	FLAT WASHER		01
12	0511059229	BOX WITH DOC 18 TURBO RIGHT	88	01

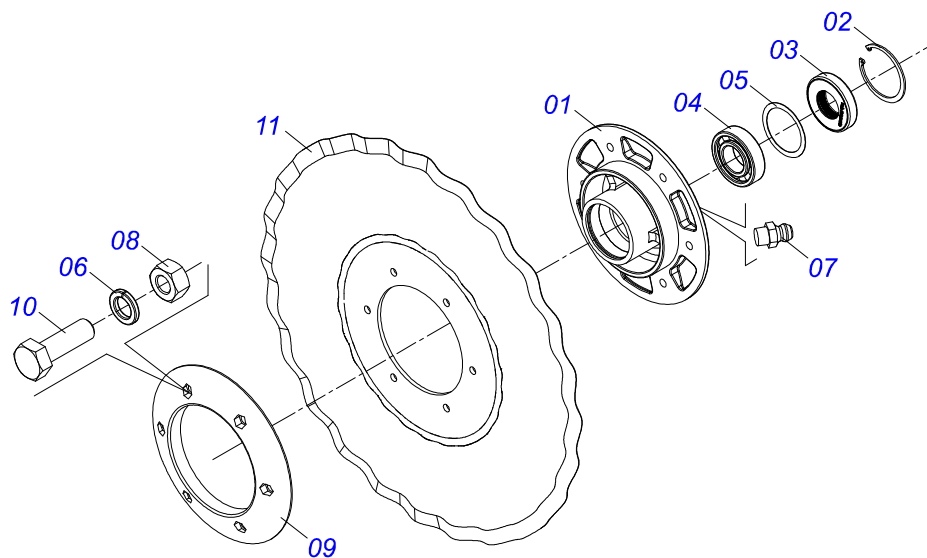

Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503011800	SEAL RING		01
03	0503012417	SEAL		01
04	0503010276	6206 BALL BEARING		01
05	0503030832	FLAT WASHER		01
06	0503011444	SPRING WASHER		06
07	0503010691	1/4" GREASE FITTING		01
08	0503010337	5/16" NUT		06
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0607025032	PLAIN COULTER BLADE		01

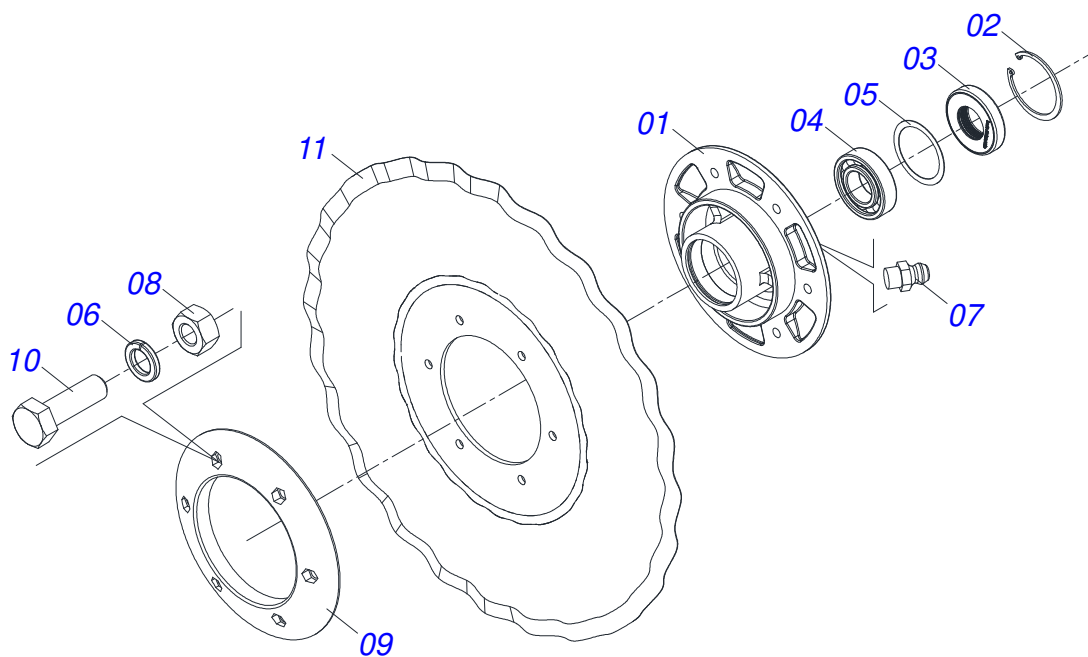


Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503011800	SEAL RING		01
03	0503012417	SEAL		01
04	0503010276	6206 BALL BEARING		01
05	0503030832	FLAT WASHER		01
06	0503011444	SPRING WASHER		06
07	0503010691	1/4" GREASE FITTING		01
08	0503010337	5/16" NUT		06
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0607025032	PLAIN COULTER BLADE		01

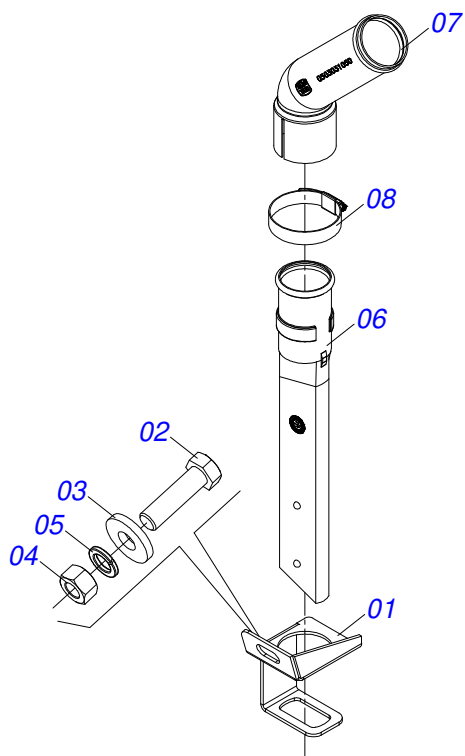


Item	Code	Description	See page	QT
01	0581013298	SUPPORT		01
02	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		01
03	0521018517	FLAT WASHER		01
04	0503010060	1/2" NUT		01
05	0503010019	1/2" SPRING WASHER		01
06	0503030483	FERTILIZER SOCKET		01
07	0503031050	CURVED CONDUCTOR		01
08	0503010246	CLAMP		01

HEX AXLE ASSEMBLY

0909094322

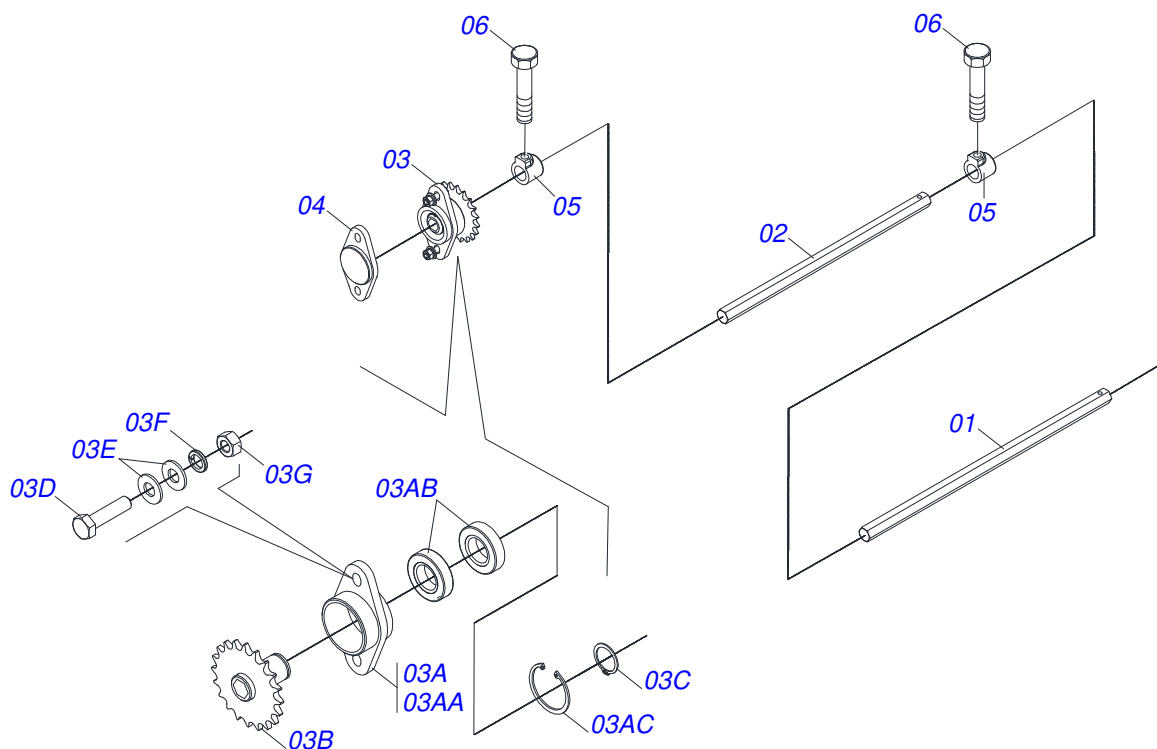


Item	Code	Description	See page	QT
001	0561018502	SHAFT AXIS 5/8 X 3000		01
002	0571011980	HEX AXLE		01
003	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		02
003A	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8		01
003AA	0502011987	DOUBLE HOUSING BEARING		01
003AB	0503011410	ROLLER BEARING		02
003AC	0503011105	SEAL RING		01
003B	0511063106	20Z AXLE BEARING DOBLE		01
003C	0503010406	501025 CLAMPING RING (FOR AXLE)		02
003D	0503010365	NUT		02
003E	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
003F	0503010179	5/16" ZN SPRING WASHER		02
003G	0503010337	5/16" NUT		02
004	0561014215	BEARING COVER LOWER ROW FRAME		02
005	0502040534	SPRING GUIDE BUSHING LOCK		04
006	0503010237	3/8" X 1" BOLT		04

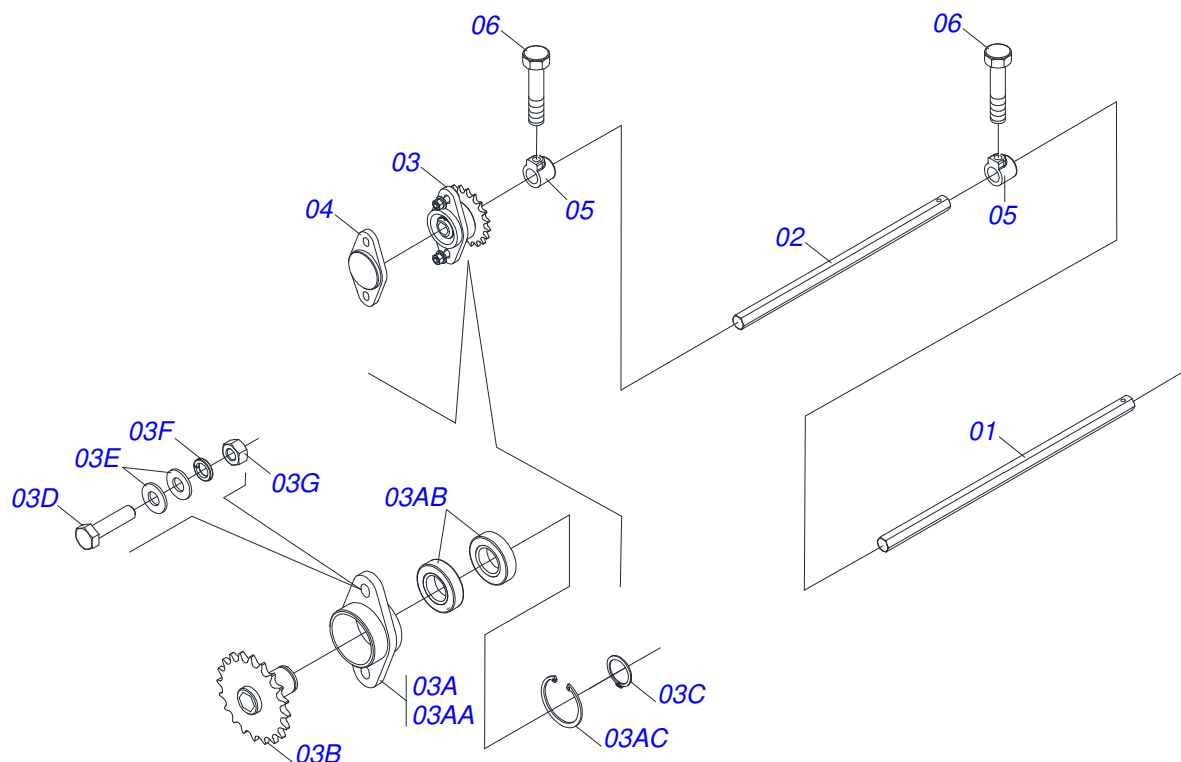


Item	Code	Description	See page	QT
001	0521013430	HEX AXLE 5/8 X 2580		01
002	0521013434	HEX AXLE 5/8 X 2300		01
003	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		02
003A	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8		01
003AA	0502011987	DOUBLE HOUSING BEARING		01
003AB	0503011410	ROLLER BEARING		02
003AC	0503011105	SEAL RING		01
003B	0511063106	20Z AXLE BEARING DOBLE		01
003C	0503010406	501025 CLAMPING RING (FOR AXLE)		02
003D	0503010365	NUT		02
003E	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
003F	0503010179	5/16" ZN SPRING WASHER		02
003G	0503010337	5/16" NUT		02
004	0561014215	BEARING COVER LOWER ROW FRAME		02
005	0502040534	SPRING GUIDE BUSHING LOCK		04
006	0503010237	3/8" X 1" BOLT		04

HEX AXLE ASSEMBLY


0909094321

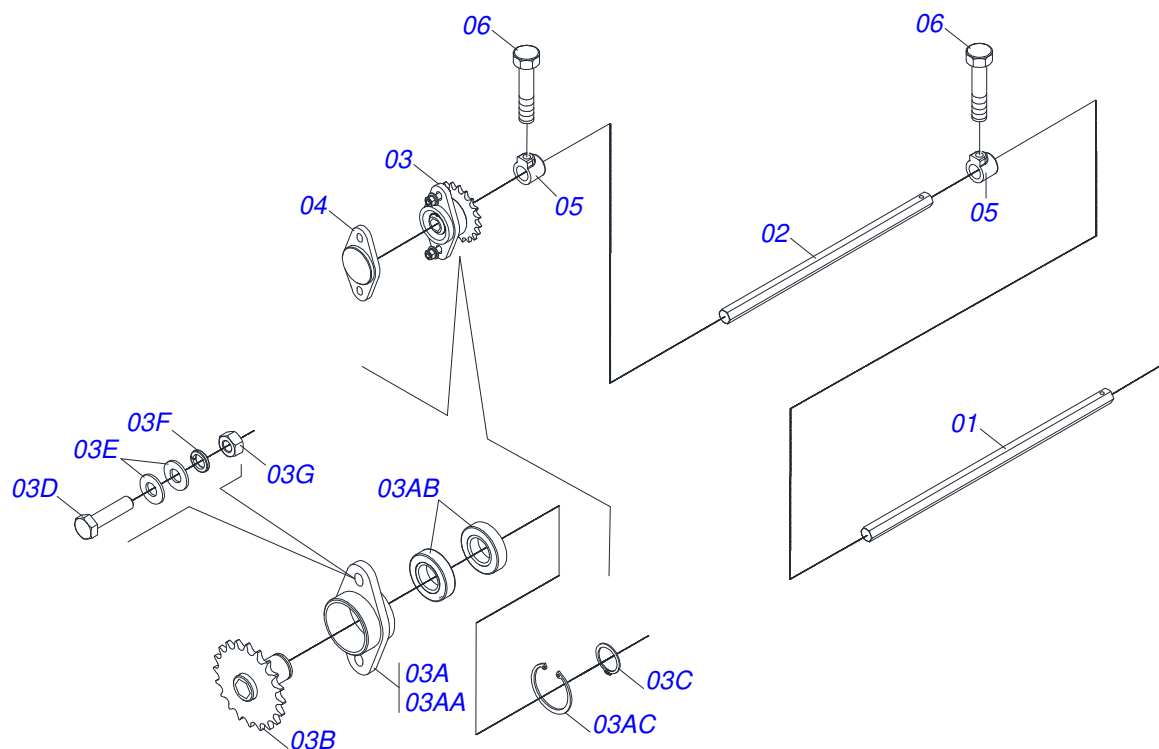

Item	Code	Description	See page	QT
001	0571017425	5/8" X 2530 HEX AXLE		01
002	0571017427	5/8" X 2700 HEX AXLE		01
003	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		02
003A	0501053609	BEARING TRANSMISSION DOUBLE SEED 5/8		01
003AA	0502011987	DOUBLE HOUSING BEARING		01
003AB	0503011410	ROLLER BEARING		02
003AC	0503011105	SEAL RING		01
003B	0511063106	20Z AXLE BEARING DOBLE		01
003C	0503010406	501025 CLAMPING RING (FOR AXLE)		02
003D	0503010365	NUT		02
003E	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
003F	0503010179	5/16" ZN SPRING WASHER		02
003G	0503010337	5/16" NUT		02
004	0561014215	BEARING COVER LOWER ROW FRAME		02
005	0502040534	SPRING GUIDE BUSHING LOCK		04
006	0503010237	3/8" X 1" BOLT		04

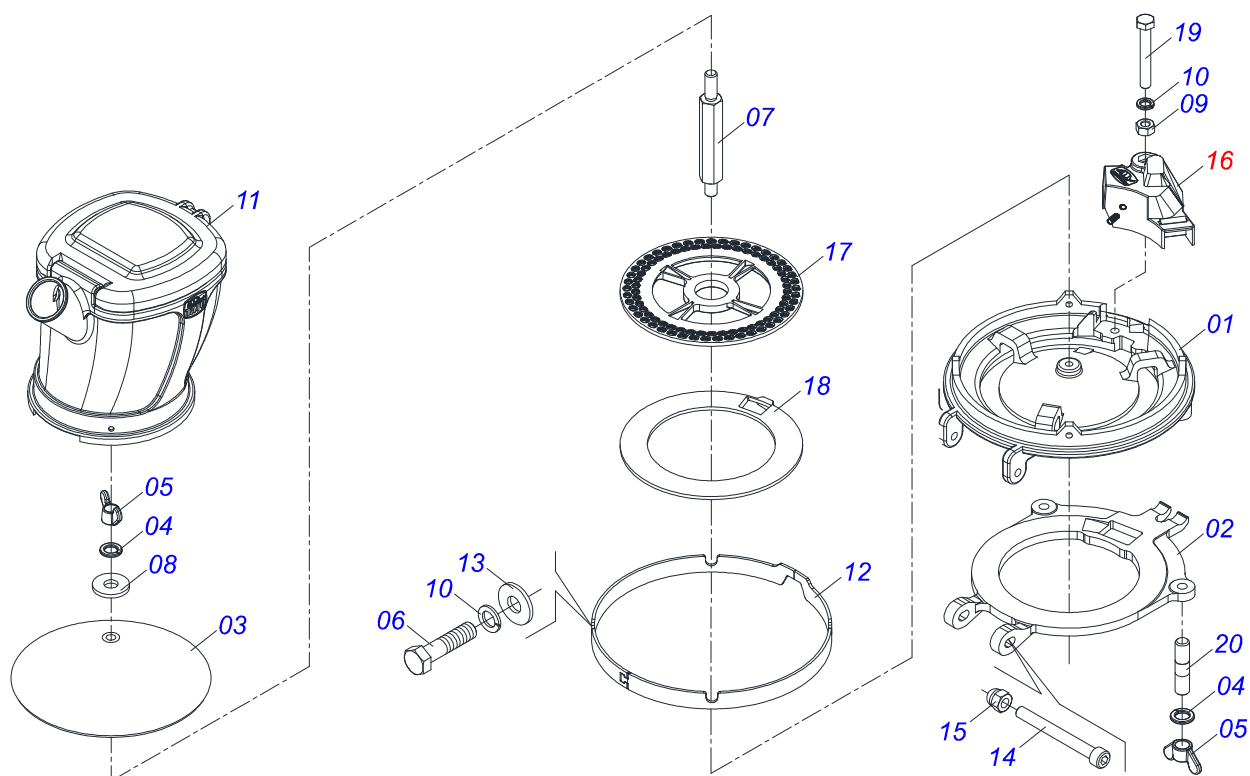

Item	Code	Description	See page	QT
01	0502020693	SUPPORT SEED BOX		01
02	0502012721	SEED DISC LOWER TRAIL		01
03	0503034131	DEFLECTOR		01
04	0503010025	3/8" SPRING WASHER		03
05	0503010209	3/8" UNC BUTTERFLY NUT		03
06	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		04
07	0571018536	HEX PRISONER		01
08	0501010984	FLAT WASHER		01
09	0503010337	5/16" NUT		01
10	0503010179	5/16" ZN SPRING WASHER		05
11	0503062582	DEPOSIT SEED		01
12	0581011346	ADAPTER DEPOSIT		01
13	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
14	0503016282	ALLEN BOLT		01
15	0503016283	M8 NUT HEX		01
16	0501051094	SEED DISTRIB ASSY WITH DOUB PULLEY		01
17	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
18	0503016219	RING TO SOYBEANS		01
19	0503010675	5/16" X 2.1/4" BOLT		01
20	0503030083	3/8" X 3/8" X 1.6" STUD		02

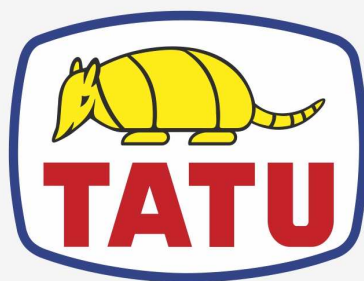

MARCHESAN

Technical Publications | Elaboration and Revision

JOSÉ DOMINGOS GASPARI

www.marchesan.com.br

