

ROW CROP PLANTERS

COP CA SUPREMA P.P - FRAME 8300 - CSC

Code: 0501092532
Series: S-1018
Revision: 00
Date Revision: JUNHO/2019

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111310026	COP CA SUP PP 8300/12E700 ESPECIAL S-1018

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX


0909095298	ASSY FRAME	1
0521055466	WHITH RIGHT WHEEL ASSY	2
0521055468	RH WHELLS SUPPORT	3
0521055470	AXLE LOCK	4
0521055478	HYDRAULIC CYLINDER	5
0521055631	HEX AXLE ASSEMBLY	6
0521055630	FULL SET	7
0521055461	SEAL BOX RIGHT / LEFT	8
0521053174	CENTRAL SEED BOX 15 OUTPUTS WITH LID	9
0521053173	CENTRAL SEED HOPPER 15 OUTPUTS	10
0521053175	BASE CSC HOPPER 15 OUTPUTS	11
0521055463	HIDRAULIC TURBINE	12
0501054983	NIPPLE HIDRAULIC MOTOR	13
0521044613	480 X 50 FAN (HIDRAULIC)	14
0501054577	BLOCK COMMAND WITH NIPLES HYDRAULIC TURBINE	15
0521055622	SET FERTILIZER SILO	16
0521055471	SILO LEFT SUPPORT WITH	17
0521055477	SILO RIGHT SUPPORT WITH	18
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	19
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	20
0511053323	NYLON LUG ASSY	21
0521055623	SET HIDRAULICO	22
0521055624	PLATFORM SET	23
0521055625	HANDRAIL SET	24
0511053320	ASSY SIDE LADDER	25
0511053482	SET FIXER HEADER	26
0521055626	SET LABEL ADHESIVE	27
0511058192	INSTRUCTION MANUAL PORT	28
0511058191	REST ASSY	29
0909095310	FERTILZER SEED ROW ASSY	30
0521053574	FRONT SEED SHORT	31
0521053575	FRONT SEED LONG	32
0521053577	BEARING BOX	33
0511053825	SEMI-ASSEMBLED SHORT FERTILIZER ROW	34
0511053826	SEMI-ASSEMBLED LONG FERTILIZER ROW	35
0511048339	24" BLADE DISC ASSY	36
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	37
0511058650	SEMI-MOUNTED DEPTH CONTROL	38
0511058651	RIGHT DEPTH WHEEL ARM WITH HUB	39
0511058652	LEFT DEPTH WHEEL ARM WITH HUB	40
0501052627	ASSY DEPTH WHEEL HUB	41
0501052538	DEPTH BAND WITH ARMS	42
0511054333	COMPACT WHEEL RIGHT WITH BEARING	43
0511054334	COMPACT WHEEL LEFT WITH BEARING	44
0501052908	COMPACTOR WHEEL WITH BEARING	45
0501058972	ASSEMBLY SENSOR ELECTRONIC	46
0521055628	RIGHT REAR LINE SEED	47
0521055629	LEFT REAR LINE SEED	48
0521054089	PPH ASSY (MINI HOPPER) STEEL CABLE	49
0521052131	VSET2 DISTRIBUTOR WITH CORN DISC WITHOUT PROTECTION	50
0511057154	RIGHT DDD	51
0511057153	DDD LEFT	52
0521055636	ASSY SHT	53
0521055456	SUPPORT TANK OIL	54

INDEX

0521055632	SET RADIATOR		55
0521055459	MOTOR SUPPORT		56
0521055633	BLOCK COMMAND		57
0521055634	MOTOR SUPPORT		58
0511059968	DOUBLE BEARING		59
0511059969	CHAIN TENSIONER		60
0511053776	TANK 100 LITERS ASSY		61
0521055640	FLOW DIVIDING VALVE		62
0511053777	PUMP ASSY WITH SUPPORT		63
0521055460	HIDRAULIC TURBINE		64
0521050154	PRECISION PLANTING TURBINE WITH HOLE		65
0521052970	ASSEMBLY ANTI-CAVITATION VALVE		66
0521055627	SET TURBINE		67
0521055458	DISTRIBUTOR VACUUM		68
0521055455	SUPPORT TUBE AR		69
0511055832	HYDRAULIC CIRCUIT		70
0501055579	DRAWBAR ESTABILIZER		71
0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER		72
0511056255	TRACTOR HITCH		73
0511053179	TRACTOR COUPLING SHAFT		74
0521055447	CENTRAL BOX PROTECTION		75

ASSY FRAME

0909095298

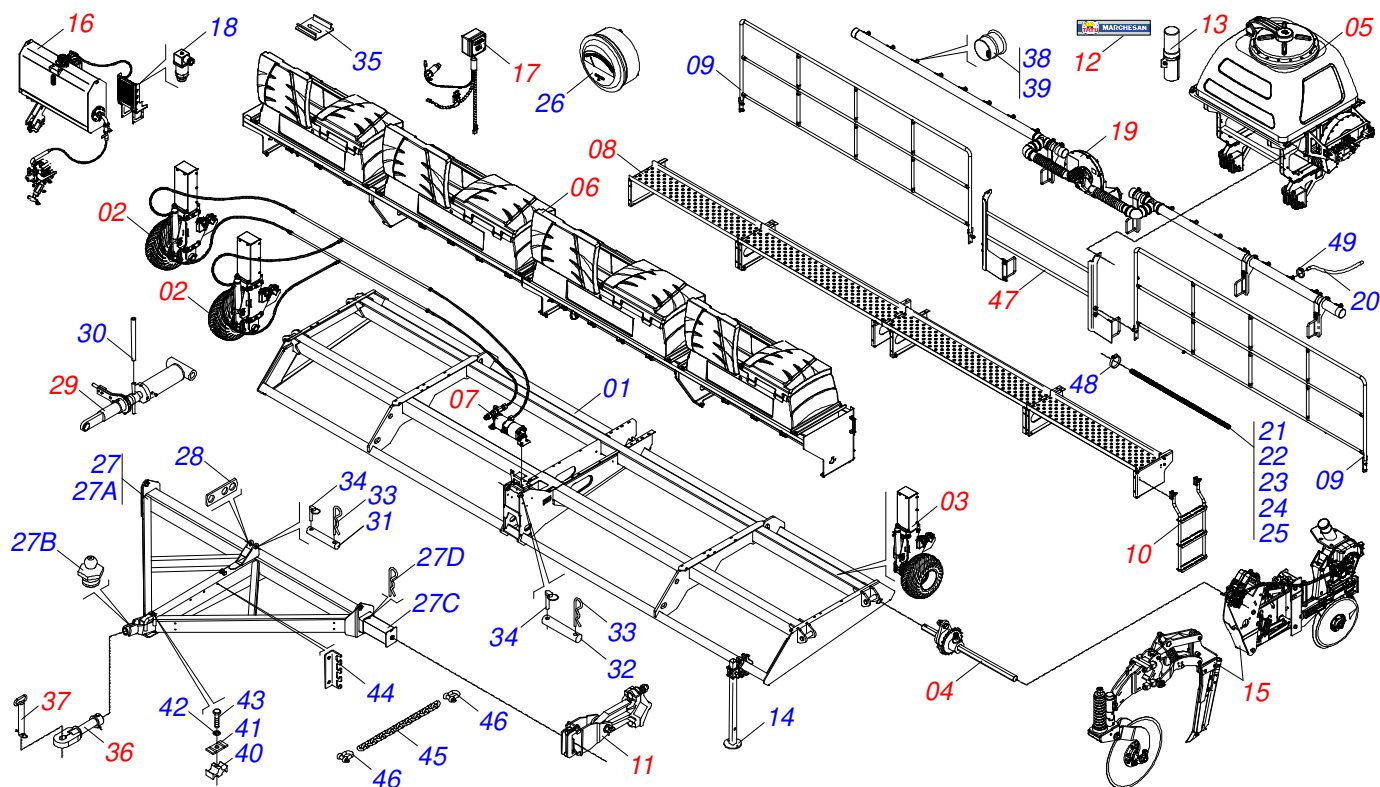


Item	Code	Description	See page	QT
01	0521069782	FRAME		01
02	0521055466	WHITH RIGHT WHEEL ASSY	2	02
03	0521055467	LH WHEEL ARM		02
04	0521055631	HEX AXLE ASSEMBLY	6	01
05	0521055630	FULL SET	7	01
06	0521055622	SET FERTILIZER SILO	16	01
07	0521055623	SET HIDRAULICO	22	01
08	0521055624	PLATFORM SET	23	01
09	0521055625	HANDRAIL SET	24	01
10	0511053320	ASSY SIDE LADDER	25	02
11	0511053482	SET FIXER HEADER	26	01
12	0521055626	SET LABEL ADHESIVE	27	01
13	0511058192	INSTRUCTION MANUAL PORT	28	01
14	0511058191	REST ASSY	29	02
15	0909095310	FERTILZER SEED ROW ASSY	30	12
16	0521055636	ASSY SHT	53	01
17	0511055832	HYDRAULIC CIRCUIT	70	01
18	0503016512	THERMOSTAT FOR HEAT EXCHANGE		01
19	0521055627	SET TURBINE	67	01
20	0581016488	AIR CONDUCTOR		12
21	0521013004	AIR CONDUCTOR		02
22	0581010737	AIR CONDUCTOR		02
23	0581011435	AIR CONDUCTOR		02
24	0511016559	AIR CONDUCTOR		02
25	0581011437	AIR CONDUCTOR 1.1/4 X 2900 COP CL CSC		04
26	0503013584	VACUUM GAUGE		02
27	0511050644	DRAWBAR ASSY		01
27A	0521062074	DRAWBAR		01
27B	0503010002	1800 GREASE FITTING		01
27C	0511043137	TOOLS BOX ASSY		02
27D	0503030012	HITCH PIN CLIP		02


ASSY FRAME

0909095298

Item	Code	Description	See page	QT
28	0561019087	DRAWBAR TRANSPORT LOCK		01
29	0501055579	DRAWBAR ESTABILIZER	71	01
30	0521018501	TURNBUCKLE LEVER		01
31	0521018531	1.4" X 4.5" COUPLING SHAFT		01
32	0521018532	1.4" X 12" COUPLING SHAFT		01
33	0503030012	HITCH PIN CLIP		02
34	0503030119	LOCK PIN		02
35	0503032624	FERTILIZER HOPPER GUTTER		06
36	0511056255	TRACTOR HITCH	73	01
37	0511053179	TRACTOR COUPLING SHAFT	74	01
38	0503034867	AIR DISTRIBUTOR PUMP		06
39	0503034345	DISPENSER COVER		06
40	0502012702	BODY SUPPORT CLAMP		03
41	0531011180	UPPER BODY CLIP		01
42	0503010180	7/16" SPRING WASHER		01
43	0503014802	7/16" X 5 BOLT		01
44	0541014576	HOSE FIXER ASSY		01
45	0503014120	CHAIN		01
46	0503014321	CABLE STEEL SHACKLE		02
47	0521055447	CENTRAL BOX PROTECTION	75	01
48	0503010243	CLAMP		18
49	0503011372	102 TO 121 CLAMP		46

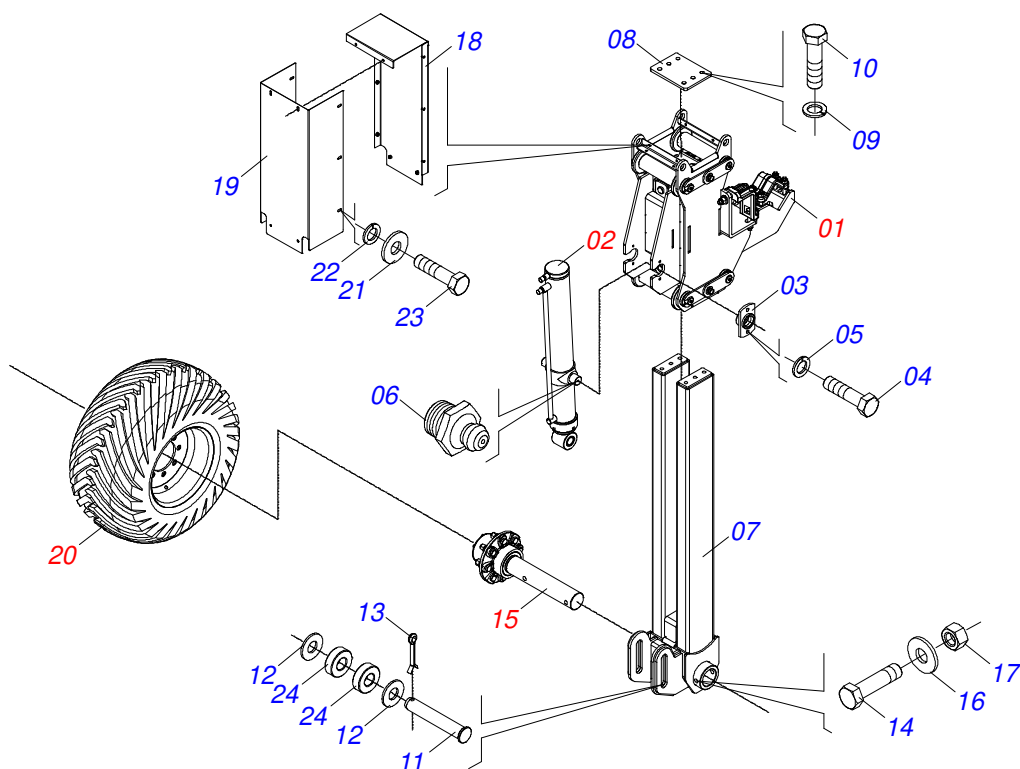


Item	Code	Description	See page	QT
001	0521055468	RH WHEELS SUPPORT	3	01
002	0521055478	HYDRAULIC CYLINDER	5	01
003	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
004	0503012556	1/2" X 1" BOLT		04
005	0503010019	1/2" SPRING WASHER		04
006	0503010002	1800 GREASE FITTING		02
007	0521069773	TOWER		01
008	0581019913	LATCH TOWER		01
009	0503010023	3/4" SPRING WASHER		06
010	0501011544	3/4" X 1-1/2" BOLT		06
011	0561015034	COUPLING SHAFT		01
012	0561019929	FLAT WASHER		02
013	0503010534	3/8" X 2.1/2" SPLIT PIN		01
014	0503011198	C3/4" X 6" SCREW		01
015	0521055465	WHEEL HUB		01
016	0501010941	FLAT WASHER		01
017	0503011255	3/4" LOCK NUT		01
018	0521069788	FRONT PROTECTION COVER		01
019	0521069772	REAR COVER PROTECTION		01
020	0521055479	WHEEL AND TIRE		01
021	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
022	0503010025	3/8 SPRING WASHER		12
023	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		12
024	0581019912	SPACING SLEEVE		02

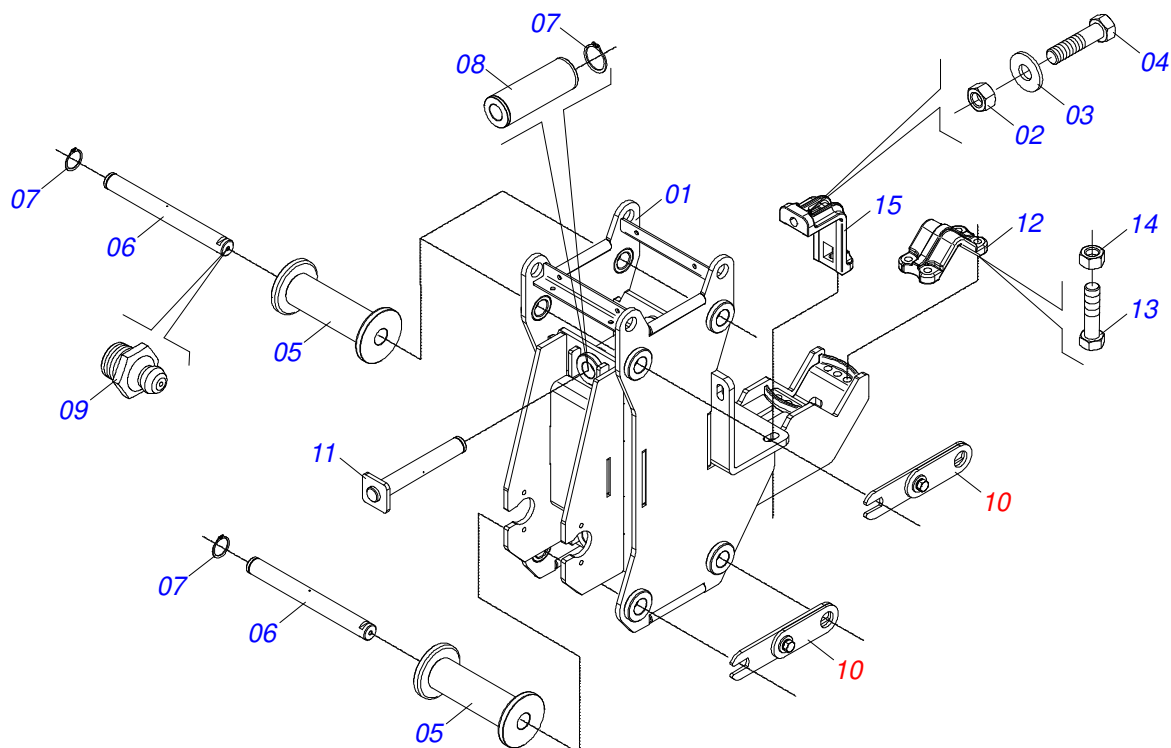


Item	Code	Description	See page	QT
001	0521069776	WHEEL SUPPORT ASSY		01
002	0503010152	3/4" SELF LOCKING NUT		04
003	0541010763	FLAT WASHER		04
004	0503010797	3/4" X 4" BOLT		04
005	0501110951	ROLL SUPPORT		04
006	0581019923	AXLE		04
007	0503010391	501038 CLAMPING RING (FOR AXLE)		06
008	0501110950	SUPPORT PLATE		02
009	0503010002	1800 GREASE FITTING		06
010	0521055470	AXLE LOCK	4	02
011	0521069775	COUPLING SHAFT		02
012	0502012789	FIXER SUPPORT FERTILIZER ROW		01
013	0503017857	BOLT 5/8 UNF 4		04
014	0503010811	5/8" UNF SELF ADJUSTING NUT		04
015	0502012400	ROW FERTILIZER FIXER		02

AXLE LOCK


0521055470

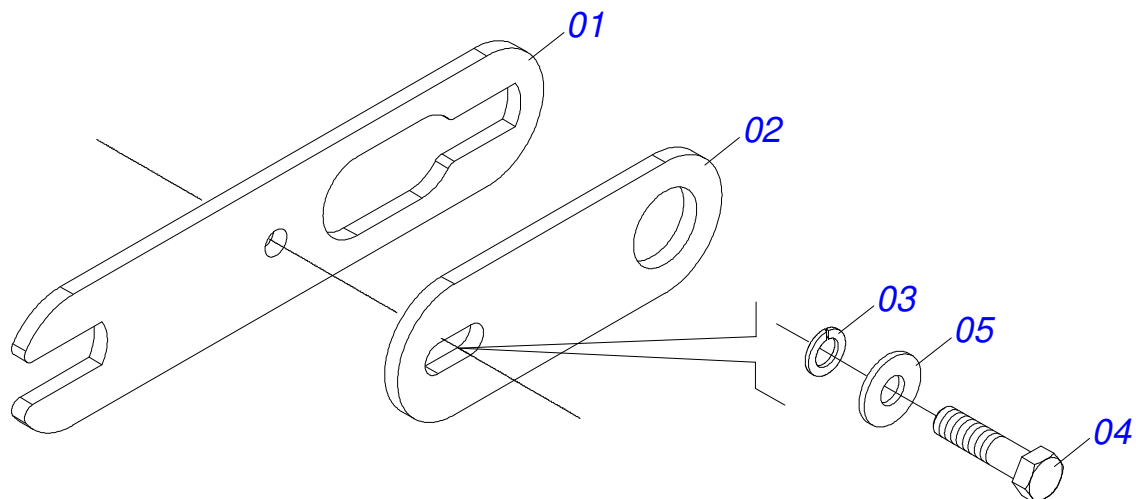


Item	Code	Description	See page	QT
001	0581019918	EXTERNAL AXLE WASHER		01
002	0581019919	EXTERNAL AXLE WASHER		01
003	0503010027	5/8 SPRING WASHER		01
004	0501010108	5/8" X 1" BOLT		01
005	0501012140	FLAT WASHER		01

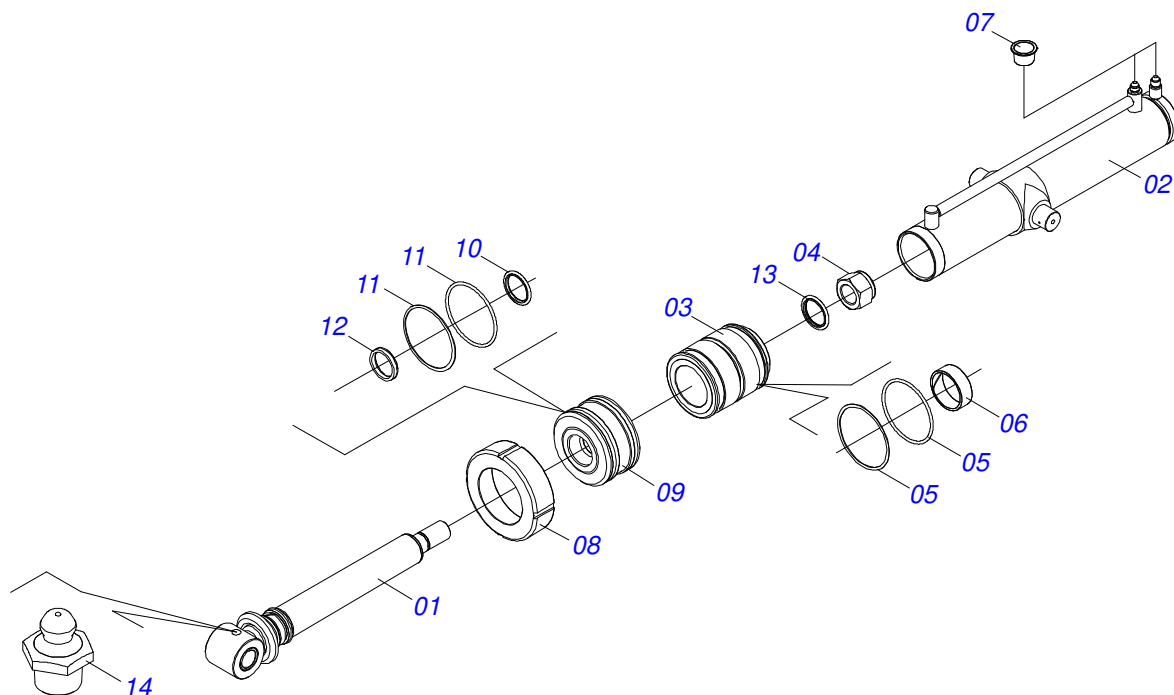


Item	Code	Description	See page	QT
001	0521069770	ROD CILINDER		01
002	0521069787	CYLINDER CASE		01
003	0551016446	101.6 X 63.5 PISTON		01
004	0503010817	1.1/4" SELF LOCKING NUT		01
005	0503010994	W2-4000-500 PK RING G.E		02
006	0503012725	GASKET		01
007	0503030385	CYLINDER PLUG N-002		02
008	0551010932	MOBILE COVER		01
009	0551016459	RING SUPPORT 2.1/2		01
010	0503010287	D-2500 SCRAPER RING		01
011	0503010971	W2-2750-500 PK RING G.I		02
012	0503010288	PACKING 2500-2500-375-B		01
013	0503010338	2-342 N 3006-9B O'RING		01
014	0503010002	1800 GREASE FITTING		01

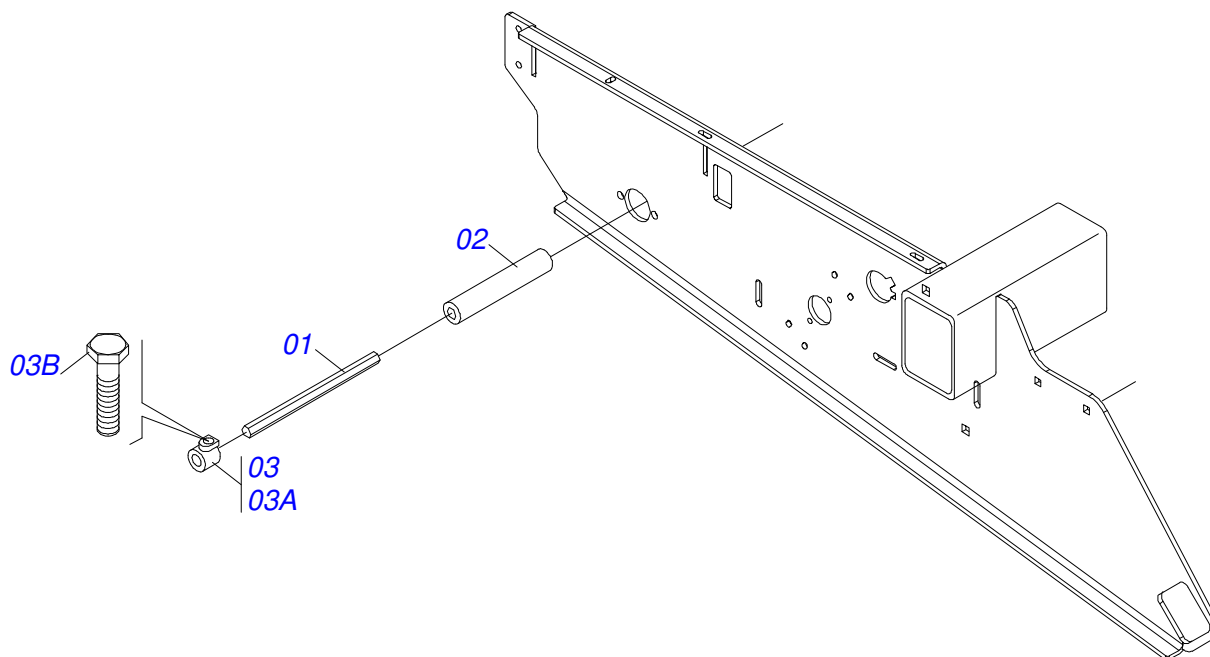


Item	Code	Description	See page	QT
001	0561018616	5/8" X 4100 AXLE HEX		02
002	0571012016	SLEEVE		01
003	0501055489	SPRING GUIDE LOCK SLEEVE		04
003A	0502040534	SPRING GUIDE BUSHING LOCK		01
003B	0501018535	1/2 X 1 BOLT		01

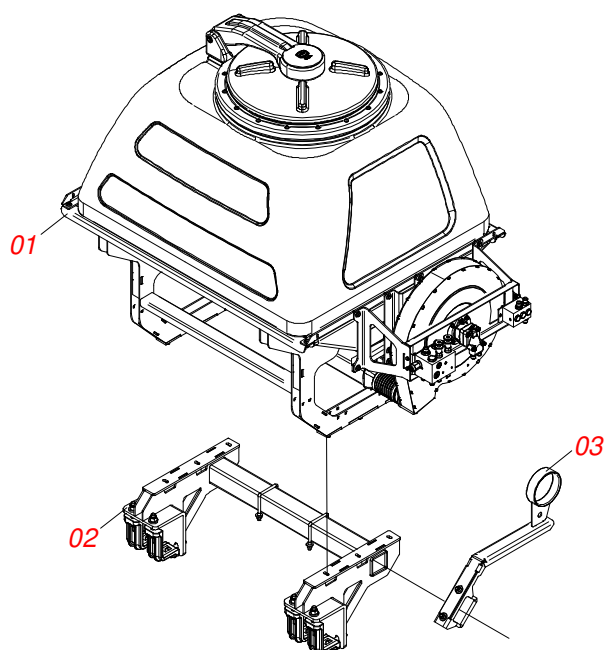


Item	Code	Description	See page	QT
001	0521055461	SEAL BOX RIGHT / LEFT	8	01
002	0521055464	ASSEMBLY SUPPORT		01
003	0521055457	HOSE HOLDER ASSY		04

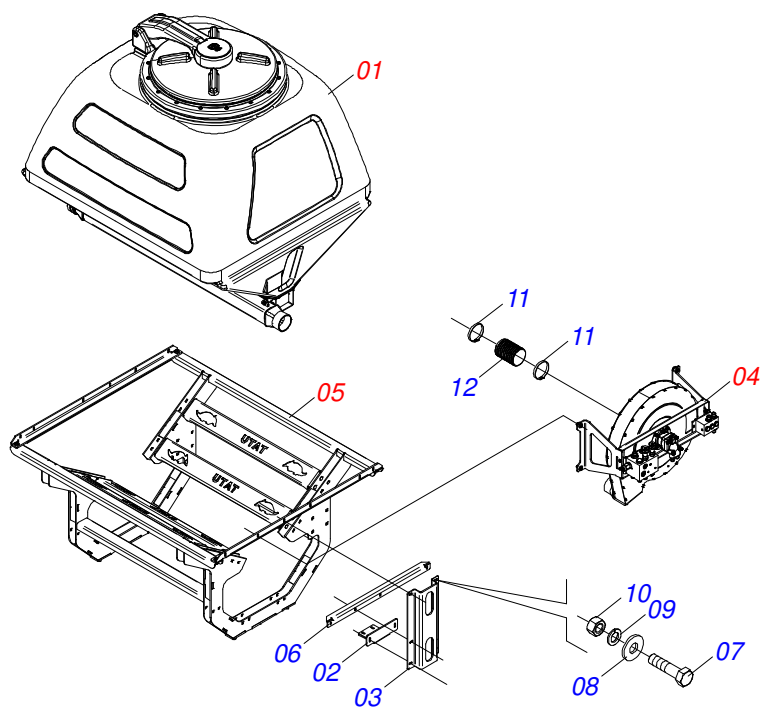


Item	Code	Description	See page	QT
001	0521053174	CENTRAL SEED BOX 15 OUTPUTS WITH LID	9	01
002	0581019902	REGULATOR PLATE		01
003	0581019900	LOCK SUPPORT FLOW		01
004	0521055463	HIDRAULIC TURBINE	12	01
005	0521055462	CENTRAL SUPPORT		01
006	0581019901	LATCH TURBINE		01
007	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		06
008	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
009	0503010025	3/8 SPRING WASHER		06
010	0503010026	3/8" NUT		06
011	0503011372	102 TO 121 CLAMP		02
012	0581019903	DRIVER AIR		01

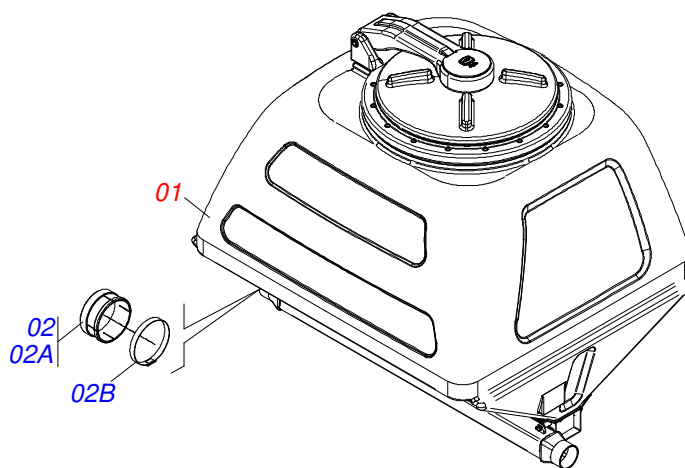

Item	Code	Description	See page	QT
01	0521053173	CENTRAL SEED HOPPER 15 OUTPUTS	10	01
02	0521053176	COVER KAP		01
02A	0581017528	15 OUTPUT TUBE COVER		01
02B	0503011372	102 TO 121 CLAMP		01

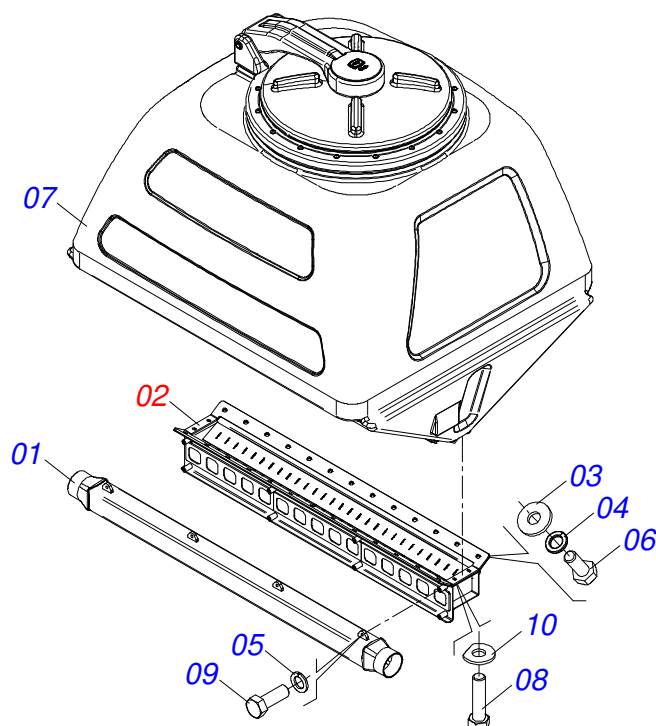


Item	Code	Description	See page	QT
01	0521068977	15 OUTPUTS AIR TUBE		01
02	0521053175	BASE CSC HOPPER 15 OUTPUTS	11	01
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		26
04	0503015075	M10 SPRING WASHER		26
05	0503010025	3/8 SPRING WASHER		08
06	0503010172	M10 X 1,5 X 25 BOLT		26
07	0503062687	SEED HOPPER		01
08	0503019284	M8 X BOLT		04
09	0503010849	3/8" X 1-1/2" BOLT		08
10	0581017922	WASHER		04

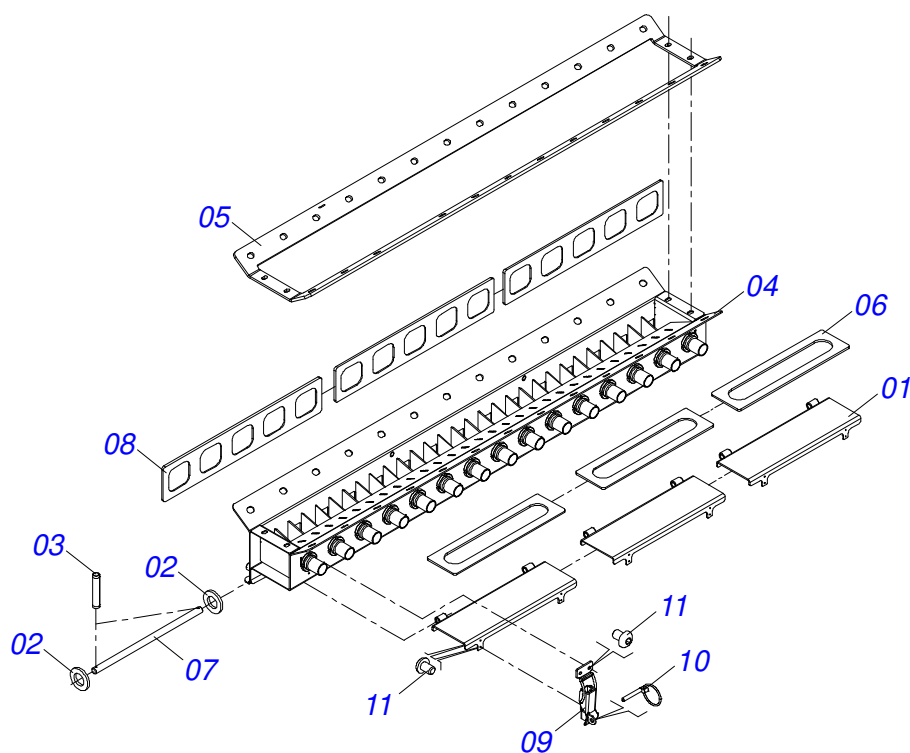


Item	Code	Description	See page	QT
01	0521068978	CASH FUND COVER		03
02	0503015135	FLAT WASHER 10 X 18 X 2		06
03	0503011823	0.1" X 0.6" SPRING PIN		06
04	0521068851	SYSTEM ASSY		01
05	0503034571	SEALING		01
06	0503034573	SEALING		03
07	0581017529	ROD 9,53		03
08	0503062759	SEALING		03
09	0503034692	FAST LOCK ASSY		06
10	0503030085	LOCK PIN		06
11	0503019290	BOLT		24

HIDRAULIC TURBINE


0521055463

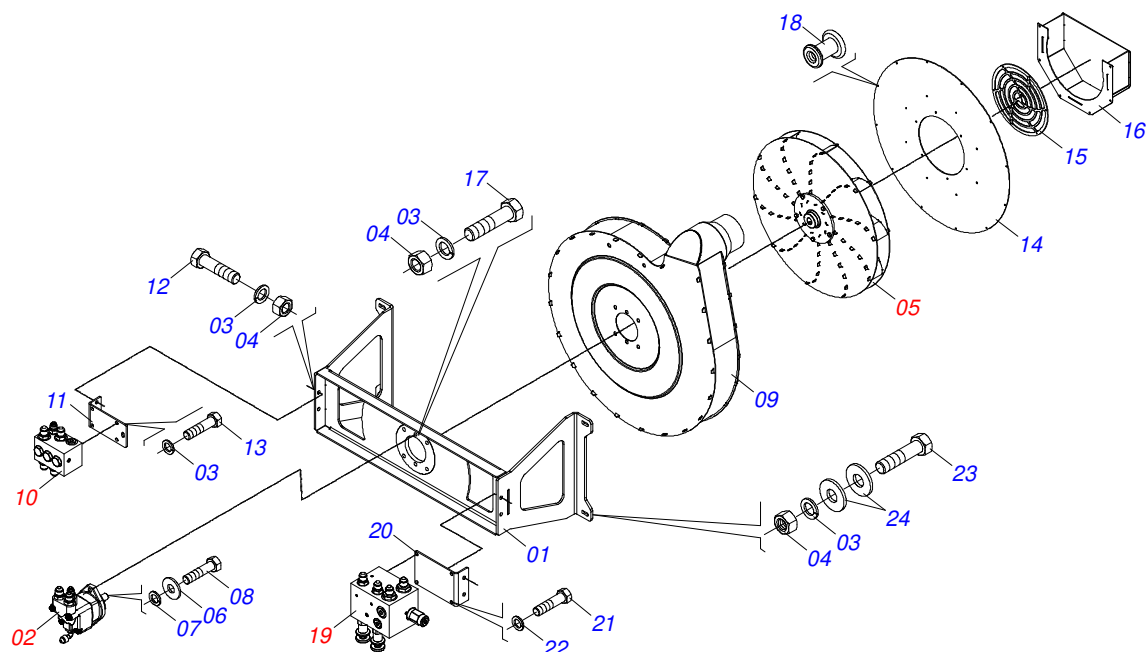


Item	Code	Description	See page	QT
001	0521069769	TURBINE SUPPORT		01
002	0501054983	NIPPLE HIDRAULIC MOTOR	13	01
003	0503010025	3/8 SPRING WASHER		16
004	0503010026	3/8" NUT		14
005	0521044613	480 X 50 FAN (HIDRAULIC)	14	01
006	0531018764	FLAT WASHER		01
007	0503010143	1/4" SPRING WASHER		01
008	0503011104	M6 X 1" BOLT		01
009	0521065857	CARACOL MECHANICAL TURBINE S MEC		01
010	0501054577	BLOCK COMMAND WITH NIPLES HYDRAULIC 15 TURBINE		01
011	0561010634	VALVE SUPPORT ASSY		01
012	0503010237	3/8" X 1" BOLT		08
013	0503010206	3/8 X 1/2 BOLT		02
014	0571018577	COVER SNAIL TURBINE		01
015	0571018578	TURBINE PROTECTIVE SCREEN		01
016	0521069167	FRONT PROTECTION		01
017	0503010849	3/8" X 1-1/2" BOLT		02
018	0503012722	0.16" X 0.4" BLIND RIVET		24
019	0511059542	BLOCK COMMAND TURBINES		01
020	0581012171	SUPPORT BLOCK COMMAND		01
021	0503015115	M8 X 1,25 X 12 BOLT		04
022	0503014371	M8 SPRING WASHER		04
023	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
024	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08

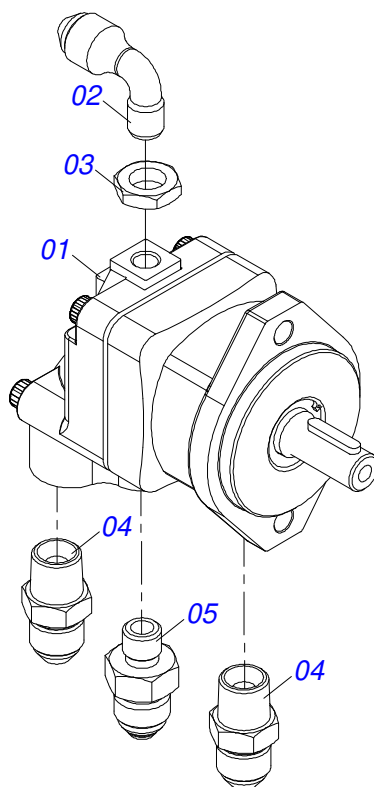


Item	Code	Description	See page	QT
01	0503012871	HYDRAULIC MOTOR		01
02	0531018770	R 3/4"UNF X R 1/4"BSP ELBOW		01
03	0561016941	3/4" NUT		01
04	0511014065	7/8" NF X R1/2NPT X 52 NIPPLE		02
05	0541011065	3/4"UNF X R1/4BSP19FPP X43.5 NIPPLE		01
06	3914103037	TEFLON		0,001RI

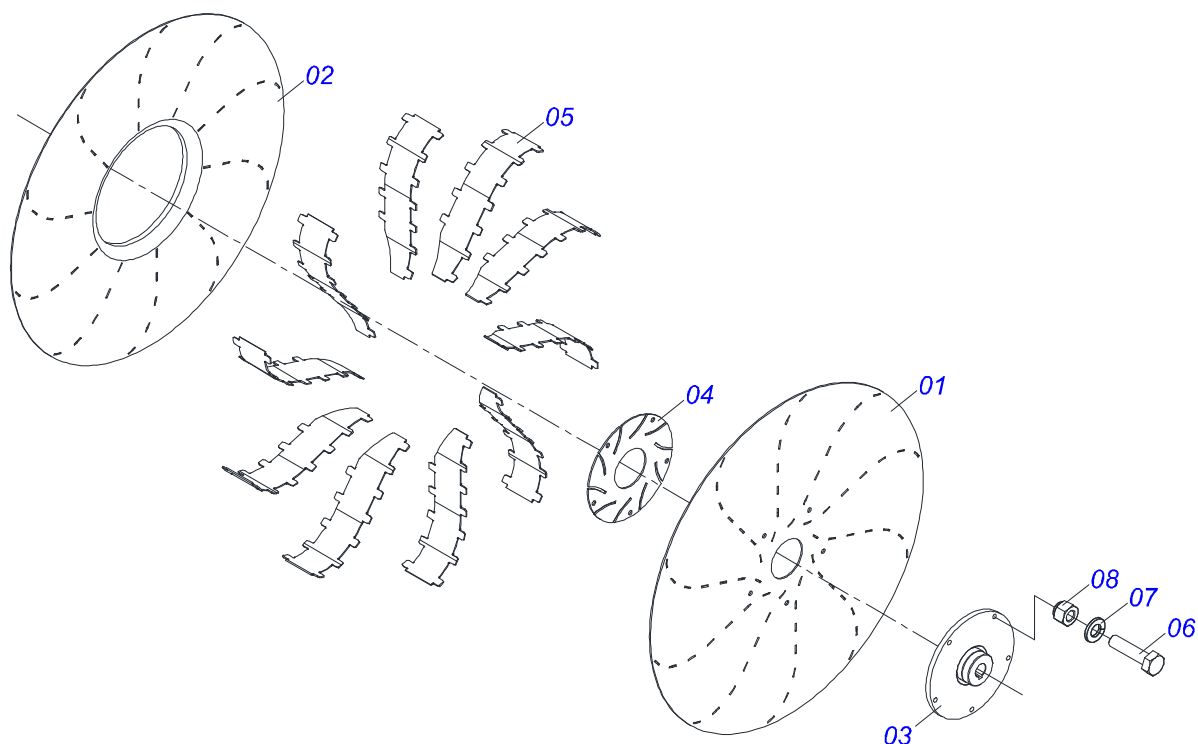


Item	Code	Description	See page	QT
01	0571016947	DISC FRONT TURBINE		01
02	0571016949	DISC REAR TURBINE		01
03	0521065171	HUB FLANGE		01
04	0571016950	DISC STRENGTHENING TURBINE		01
05	0571016951	FLIP TURBINE		10
06	0503012651	M6 X 1" BOLT		05
07	0503010143	1/4" SPRING WASHER		05
08	0503011776	M6 SELF ADJUSTINGNUT		05

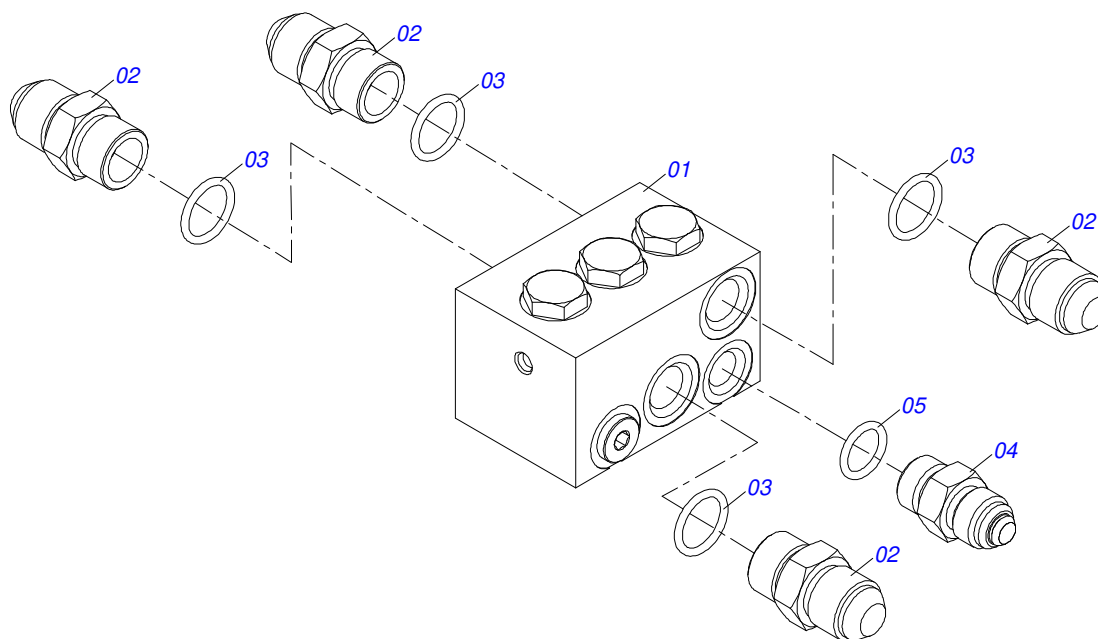


Item	Code	Description	See page	QT
01	0503012291	BLOCK COMMAND		01
02	0501010590	NIPPLE		04
03	0503010045	O'RING		04
04	0541011066	3/4" UNF X 43.5 NIPPLE		01
05	0503010190	2-114 N 3006-9B O'RING		01

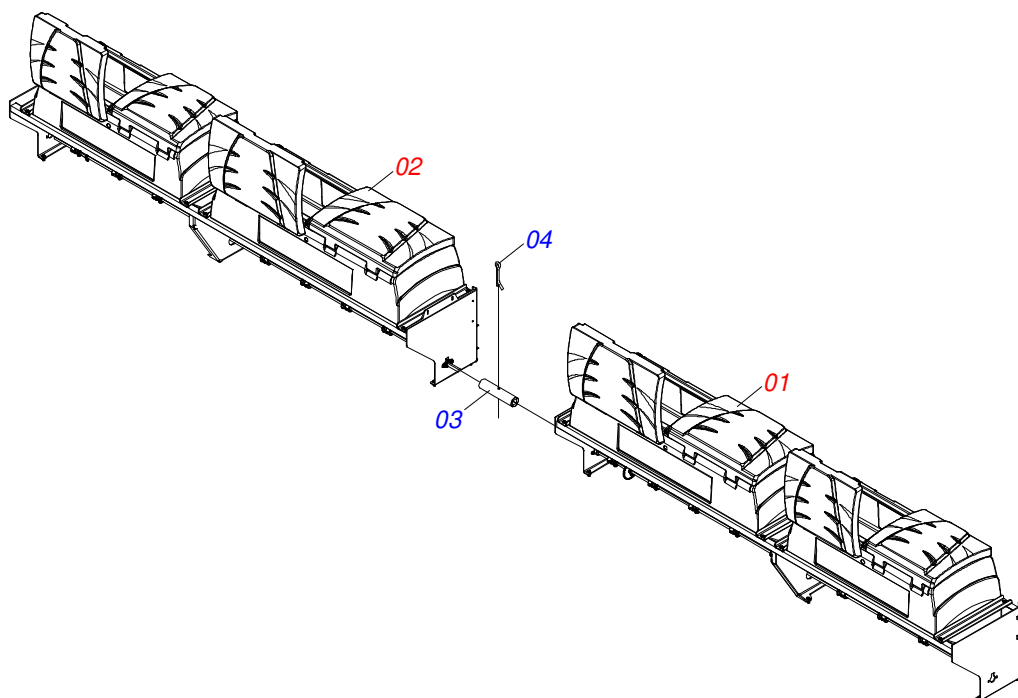


Item	Code	Description	See page	QT
001	0521055471	SILO LEFT SUPPORT WITH	17	01
002	0521055477	SILO RIGHT SUPPORT WITH	18	01
003	0502012007	SQUARE SLEEVE		01
004	0503010010	1/4" X 2.1/2" SPLIT PIN		01

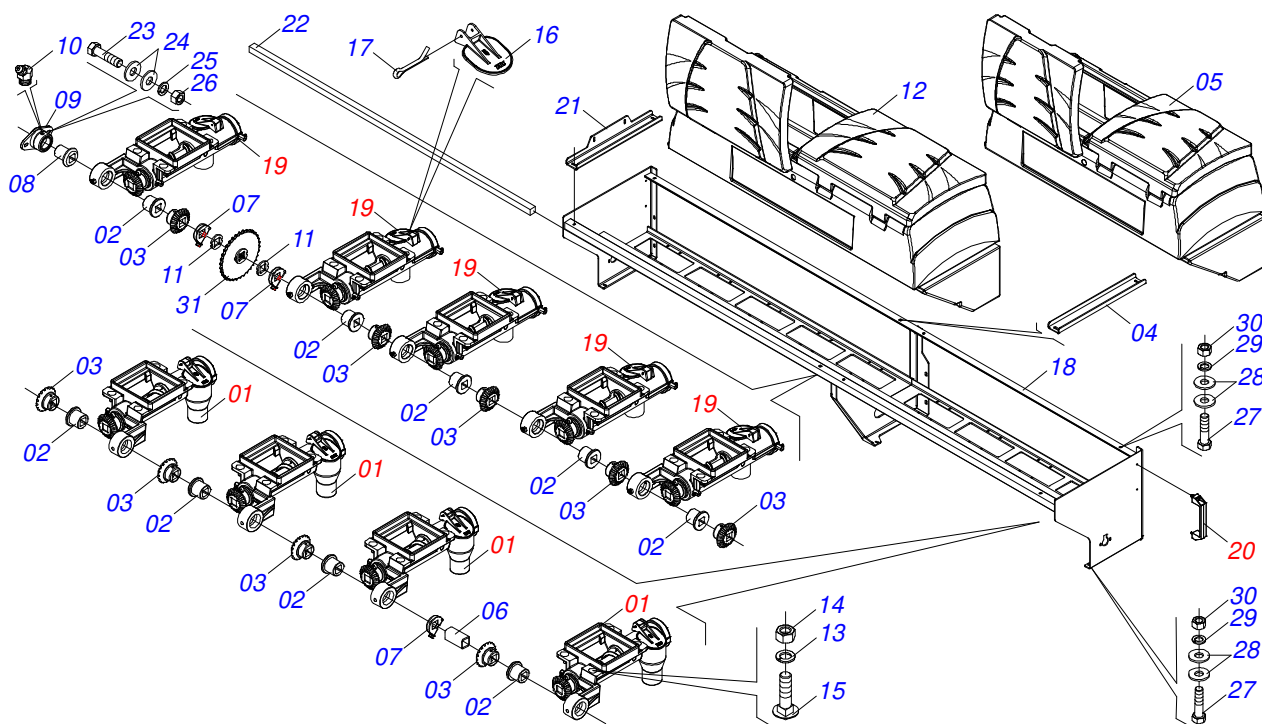


Item	Code	Description	See page	QT
001	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	19	04
002	0503030275	AGRICULTURAL BEARING		09
003	0502011412	18Z CONICAL GEAR		09
004	0571013224	STRINGER FIXING CASH FERTILIZER		03
005	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		01
006	0551018055	22,65 X 60 SLEEVE		01
007	0501053788	3/4" SQUARE AXLE FASTENER		03
008	0521012485	GEAR BOX BEARING AGRICUTURAL		01
009	0501110037	AGRICULTURAL BEARING HEX SHAFT 5/8"		01
010	0503010003	1845 GREASE FITTING		01
011	0521014167	CONE LOCK		02
012	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		01
013	0503011443	3/8" SPRING WASHER		24
014	0503010026	3/8" NUT		24
015	0501010942	3/8" X 1-1/4" BOLT		24
016	0503034396	FERTILIZER SIDE COVER		09
017	0503010362	1/8" X 1.1/4" SPLIT PIN		09
018	0521069778	LH BEAM SUPPORT		01
019	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	20	05
020	0511053323	NYLON LUG ASSY	21	01
021	0581019949	STRINGER FIXING CASH FERTILIZER		01
022	0571017093	SQUARE SHAFT 3/4 X 4100		01
023	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		02
024	0501010694	FLAT WASHER		04
025	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
026	0503010337	5/16" NUT		02
027	0503010849	3/8" X 1-1/2" BOLT		20
028	0501010984	10,50 X 27 X 3,00 FLAT WASHER		39
029	0503010025	3/8 SPRING WASHER		20
030	0503010026	3/8" NUT		20
031	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		01

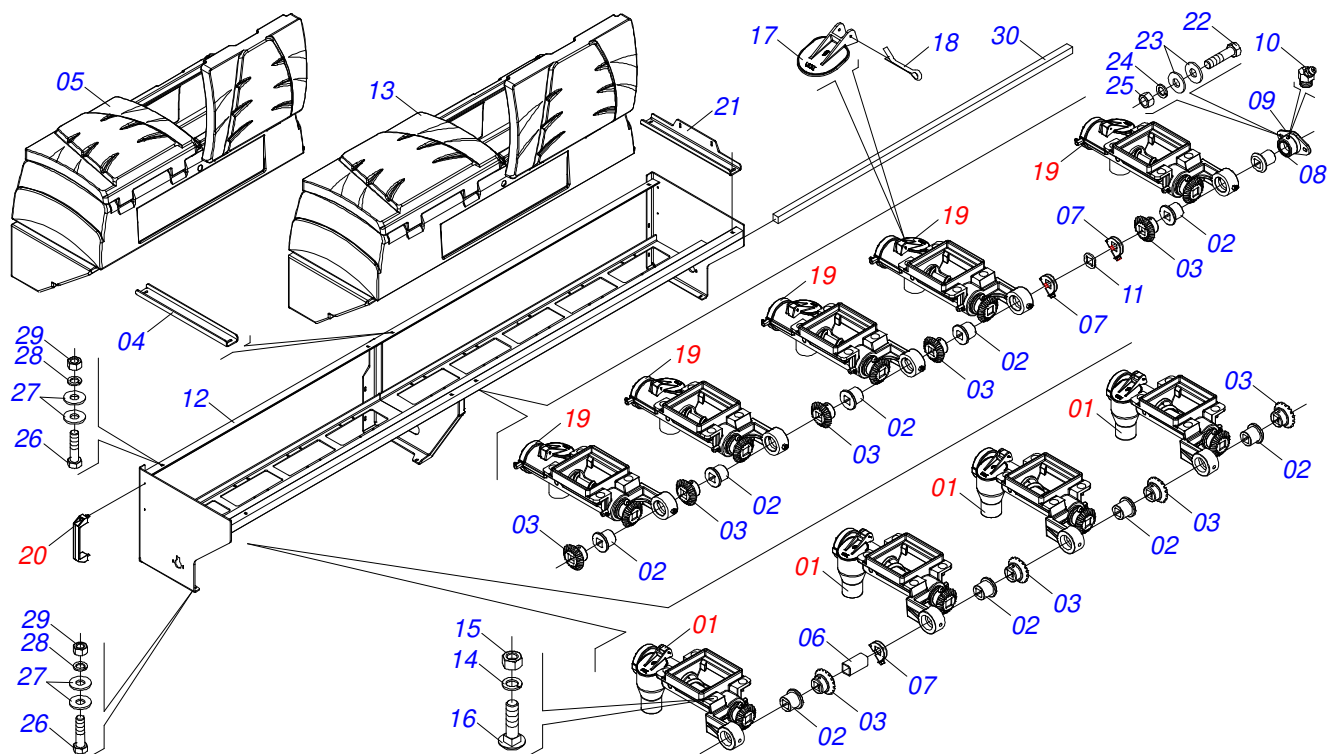


Item	Code	Description	See page	QT
001	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	20	04
002	0503030275	AGRICULTURAL BEARING		09
003	0502011412	18Z CONICAL GEAR		09
004	0571013224	STRINGER FIXING CASH FERTILIZER		03
005	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		01
006	0551018055	22,65 X 60 SLEEVE		01
007	0501053788	3/4" SQUARE AXLE FASTENER		02
008	0521012485	GEAR BOX BEARING AGRICUTURAL		01
009	0501110037	AGRICULTURAL BEARING HEX SHAFT 5/8"		01
010	0503010003	1845 GREASE FITTING		01
011	0521014167	CONE LOCK		01
012	0521069777	RH BEAM SUPPORT		01
013	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		01
014	0503011443	3/8" SPRING WASHER		36
015	0503010026	3/8" NUT		36
016	0501010942	3/8" X 1-1/4" BOLT		36
017	0503034396	FERTILIZER SIDE COVER		09
018	0503010362	1/8" X 1.1/4" SPLIT PIN		09
019	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	19	05
020	0511053323	NYLON LUG ASSY	21	01
021	0581019949	STRINGER FIXING CASH FERTILIZER		01
022	0503010849	3/8" X 1-1/2" BOLT		20
023	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
024	0503010025	3/8 SPRING WASHER		20
025	0503010026	3/8" NUT		20
026	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		02
027	0501010694	FLAT WASHER		04
028	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
029	0503010337	5/16" NUT		02
030	0571017093	SQUARE SHAFT 3/4 X 4100		01

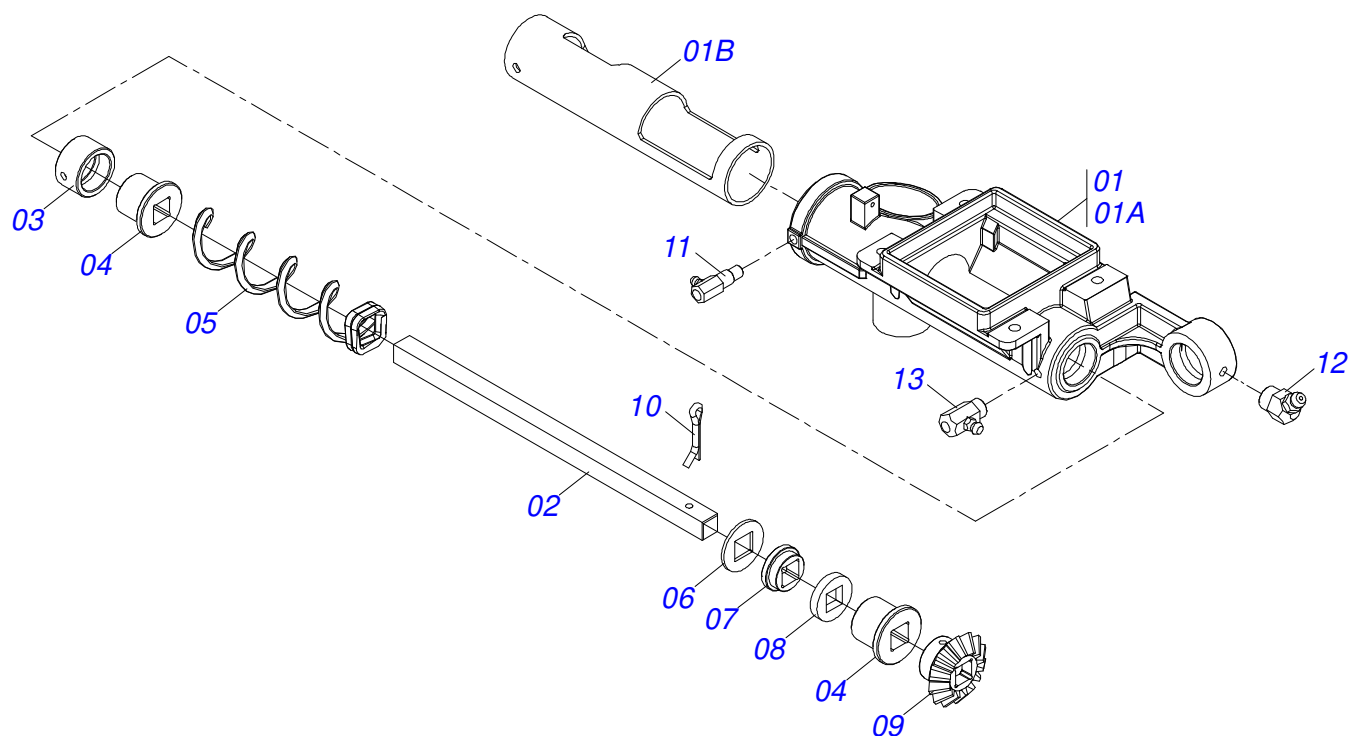


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" SPLIT PIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

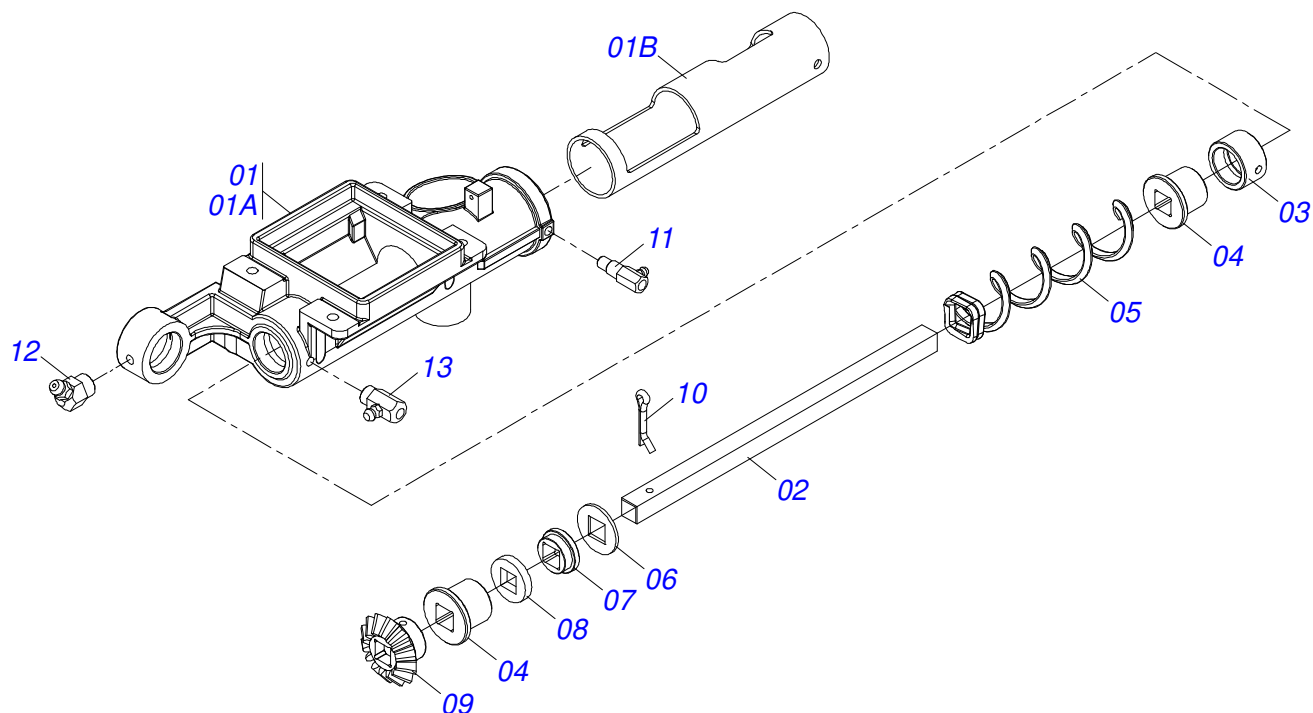

Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" SPLIT PIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

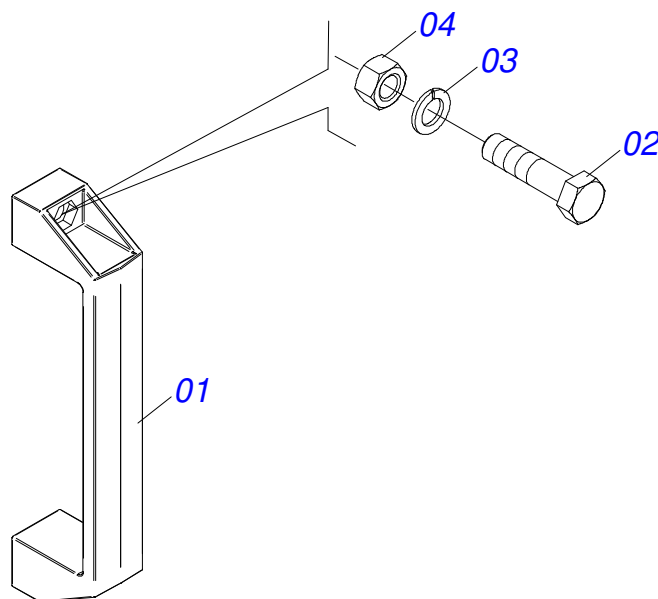


Item	Code	Description	See page	QT
01	0503011957	NYLON HANDLE		01
02	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	5/16" NUT		02

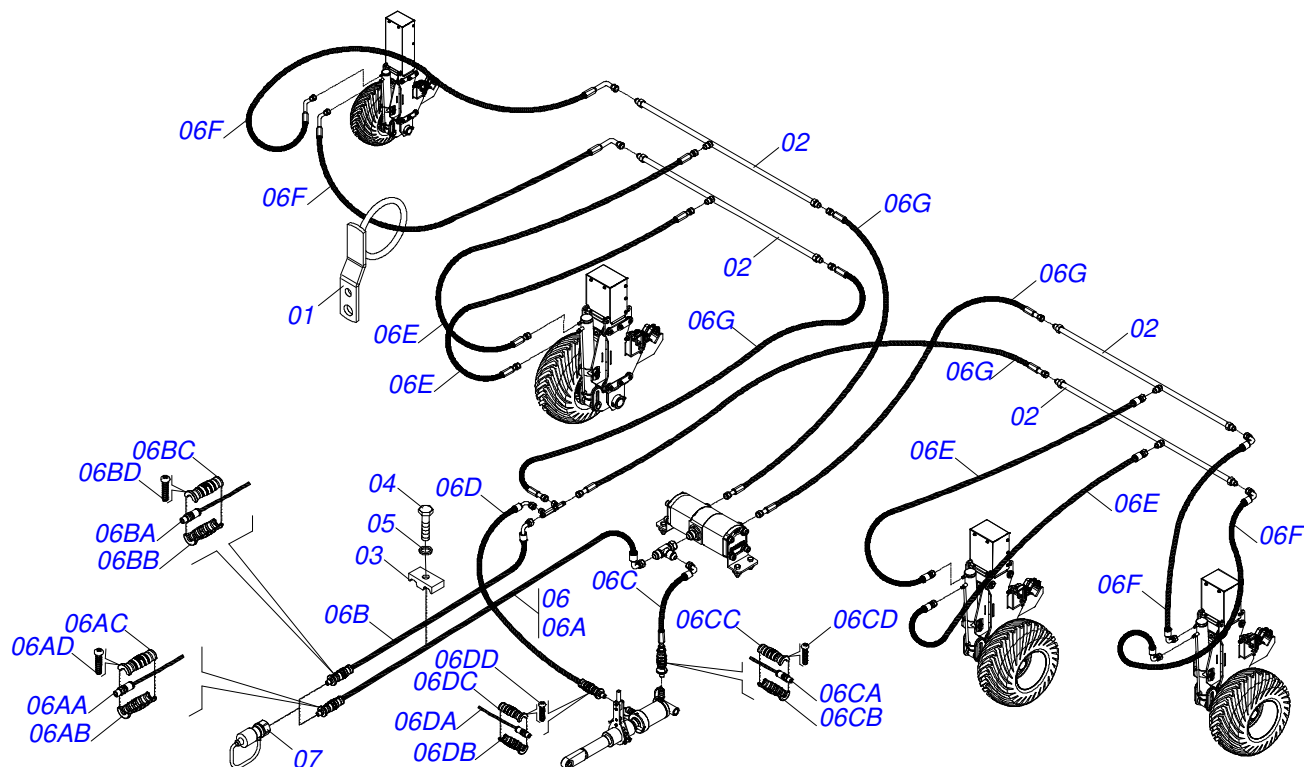

Item	Code	Description	See page	QT
001	0511063282	HOSE HOLDER		04
002	0511069525	2622 OIL TUBE		04
003	0502010477	HOSE CLAMP		04
004	0503011135	BOLT		04
005	0503010180	7/16" SPRING WASHER		04
006	0521055639	HOSE KIT		01
006A	0521052275	HOSE		01
006AA	0501081073	HOSE 1/2 X 4200 TC-TM		01
006AB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
006AC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
006AD	0503018952	PLASTIC BOLT		06
006B	0521052276	HOSE		01
006BA	0501081073	HOSE 1/2 X 4200 TC-TM		01
006BB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
006BC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
006BD	0503018952	PLASTIC BOLT		06
006C	0521052331	HOSE		01
006CA	0501080116	TR-TM HOSE ASSY		01
006CB	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01
006CC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
006CD	0503018952	PLASTIC BOLT		06
006D	0521052332	HOSE		01
006DA	0501080182	1/2" X 850 TR-TM HOSE ASSY		01
006DB	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01
006DC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
006DD	0503018952	PLASTIC BOLT		06
006E	0501080436	3/8" X 62" TR-TC HOSE		04
006F	0501081651	HOSE		04
006G	0501080296	3/8" X 106" TR-TR HOSE		04
007	0501053834	MALE QUICK COUPLER		04

PLATFORM SET


0521055624

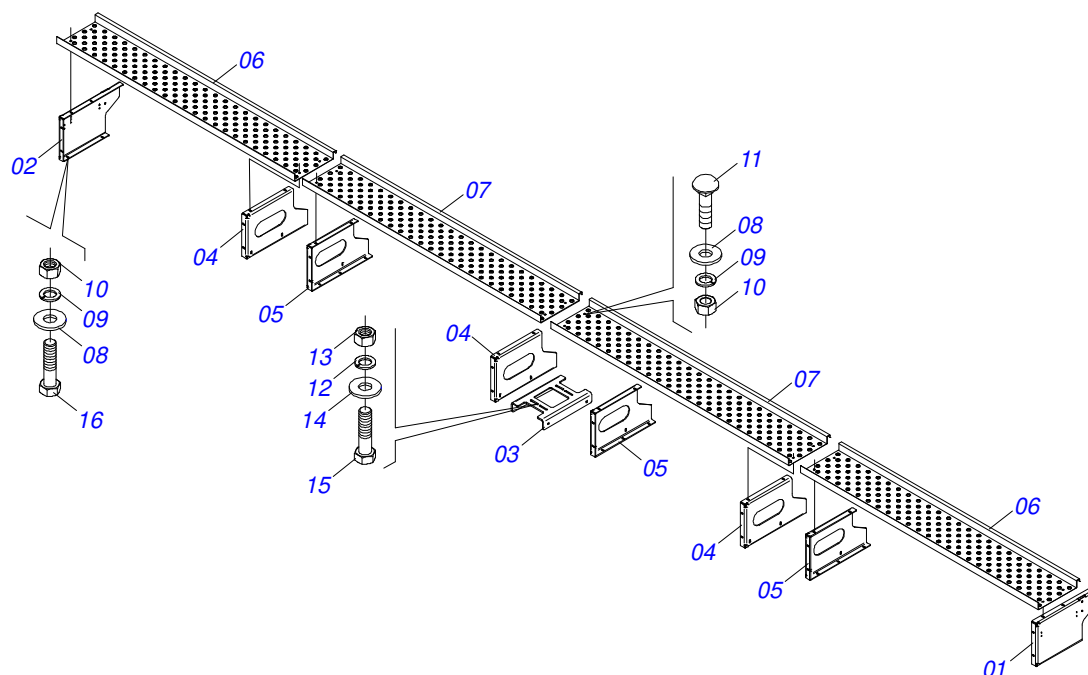


Item	Code	Description	See page	QT
001	0581019927	RIGHT SUPPORT		01
002	0581019928	LEFT SUPPORT		01
003	0581019888	CENTRAL SUPPORT		01
004	0581019929	LEFT SUPPORT		03
005	0581019991	SUPPORT RIGHT		03
006	0581019886	PLATLFORM		02
007	0581019887	PLATFORM		02
008	0501013518	FLAT WASHER		40
009	0503010025	3/8 SPRING WASHER		30
010	0503010026	3/8" NUT		30
011	0501011643	3/8 X 1"BOLT		20
012	0503010019	1/2" SPRING WASHER		02
013	0503010060	1/2 UNC G.5 ZN HEX NUT		02
014	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
015	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
016	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		10

HANDRAIL SET

0521055625

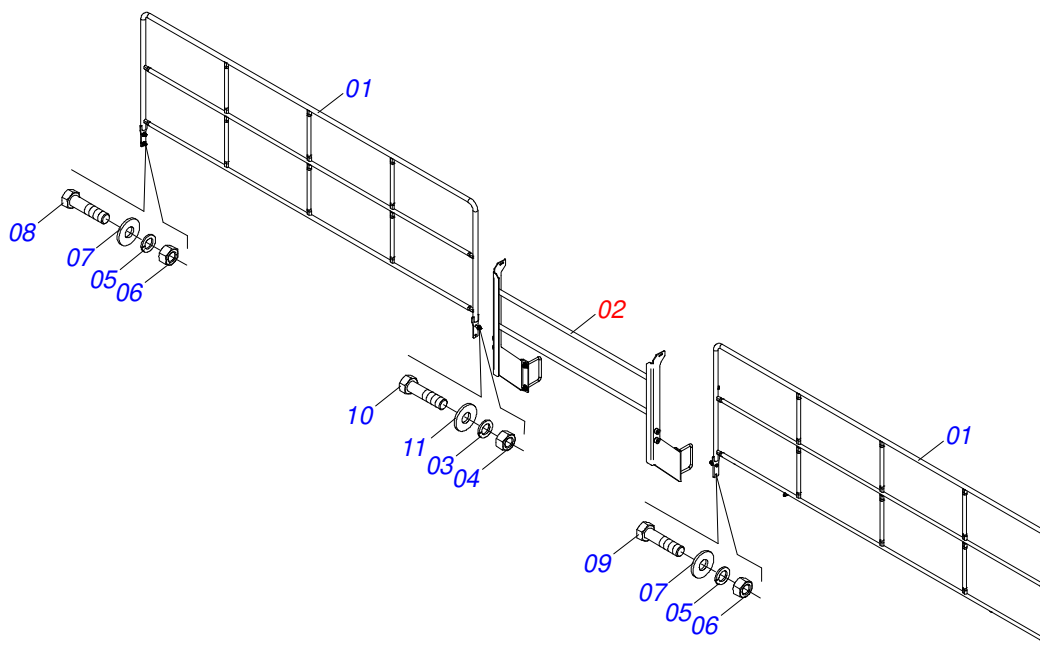


Item	Code	Description	See page	QT
001	0521069786	HANDRAIL		02
002	0521055447	CENTRAL BOX PROTECTION	75	01
003	0503010025	3/8 SPRING WASHER		02
004	0503010026	3/8" NUT		02
005	0503010019	1/2" SPRING WASHER		08
006	0503010060	1/2 UNC G.5 ZN HEX NUT		08
007	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
008	0503010905	1/2" X 2-1/4" BOLT		04
009	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
010	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
011	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04

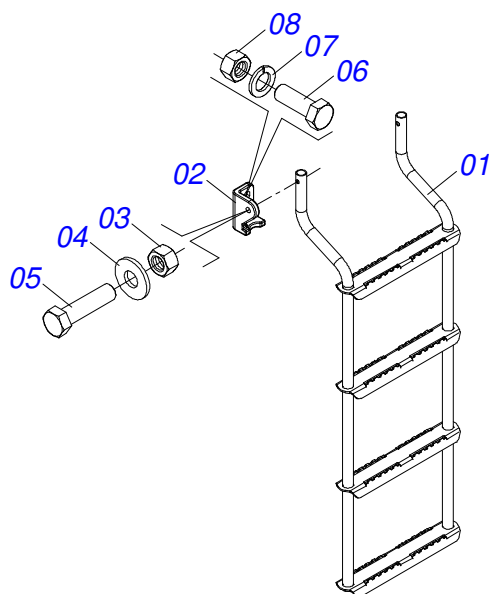

Item	Code	Description	See page	QT
01	0511069819	SIDE LADDER		01
02	0502012742	FIXER SUPPORT LADDER		02
03	0503013357	3/8 SELF-ADJUSTING NUT		02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
05	0503011179	3/8" X 2-1/4" BOLT		02
06	0503010237	3/8" X 1" BOLT		04
07	0503010025	3/8 SPRING WASHER		04
08	0503010026	3/8" NUT		04

SET FIXER HEADER


0511053482

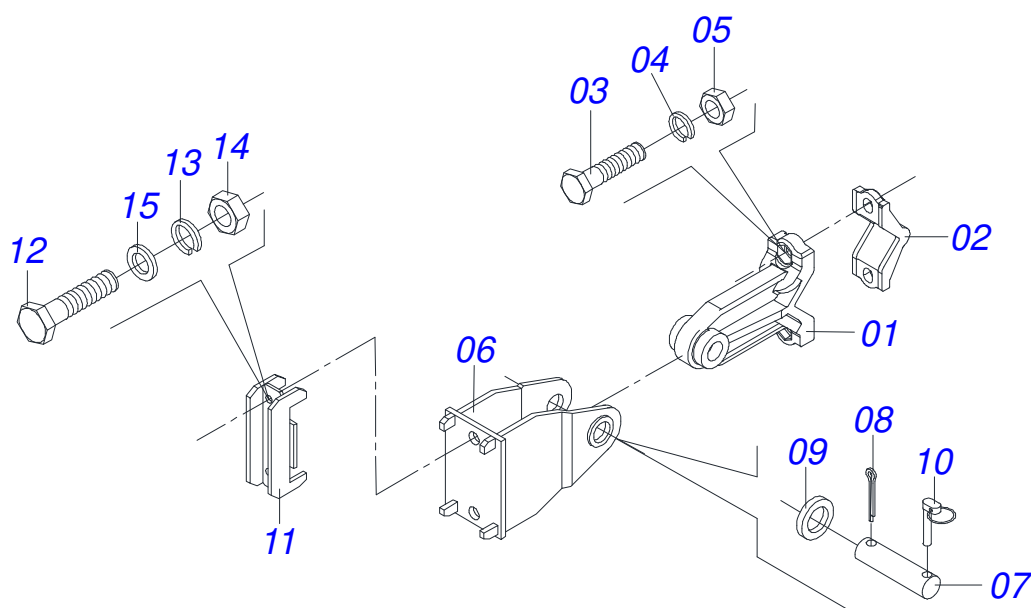


Item	Code	Description	See page	QT
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	06	
02	0502012330	SUPPORT FIXER PIVOT	06	
03	0503011084	3/4" X 5" BOLT	12	
04	0503010023	3/4" SPRING WASHER	12	
05	0503010014	3/4" HEX NUT	12	
06	0511065418	DRAWBAR SUPPORT FRONT FIXATION	06	
07	0561014393	COUPLING SHAFT	06	
08	0503010523	1/4" X 2" SPLIT PIN	06	
09	0501012916	FLAT WASHER 40 X 66 X 4,75 ZN	12	
10	0503030119	LOCK PIN	12	
11	0511065419	DRAWBAR FIXER CLAMP	06	
12	0521010066	3/4" X 8.12" BOLT	12	
13	0503010023	3/4" SPRING WASHER	12	
14	0503010014	3/4" HEX NUT	12	
15	0501010322	FLAT WASHER	12	




Item	Code	Description	See page	QT
001	0503033912	ADHESIVE LABEL	04	
002	0503033854	ADHESIVE LABEL	04	
003	0503033853	ADHESIVE LABEL	02	
004	0503034875	ADHESIVE LABEL	01	
005	0503034876	ADHESIVE LABEL	01	
006	0503034335	ADHESIVE LABEL	01	
007	0503034337	ADHESIVE LABEL	01	
008	0503034338	ADHESIVE LABEL	02	
009	0503034339	ADHESIVE LABEL	02	
010	0503031942	ADHESIVE LABEL	01	
011	0503031669	ADHESIVE LABEL	01	
012	0503031425	ADHESIVE LABEL ATTENTION	02	
013	0503031428	READ MANUAL DECAL	01	
014	0503031565	ADHESIVE LABEL CARE	02	
015	0503032930	ADHESIVE LABEL DANGER	04	
016	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING	02	
017	0503033417	ADHESIVE LABEL	02	
018	0503033422	ADHESIVE LABEL	02	
019	0503034500	ADHESIVE LABEL	01	

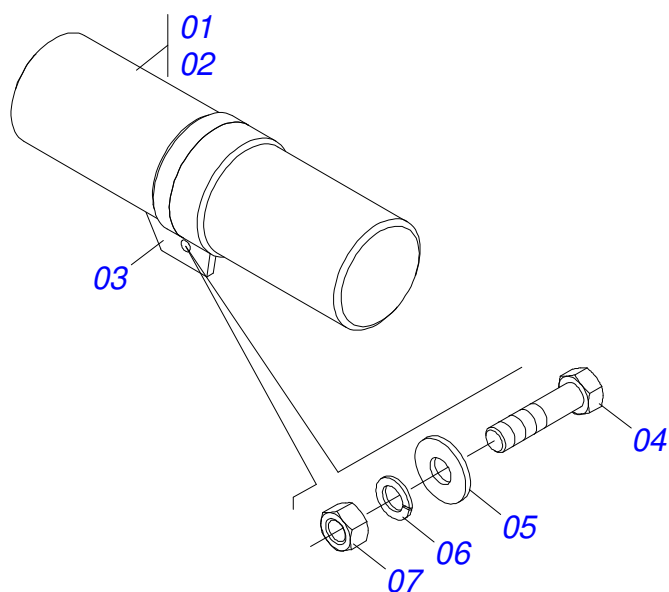

Item	Code	Description	See page	QT
01	0503060100	INSTRUCTIONS MANUAL CANISTER		01
02	0511031937	BAG WITH MANUAL CATALOG		01
03	0503010267	NYLON CLAMP		01
04	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
05	0501010694	FLAT WASHER		01
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
07	0503010337	5/16" NUT		01

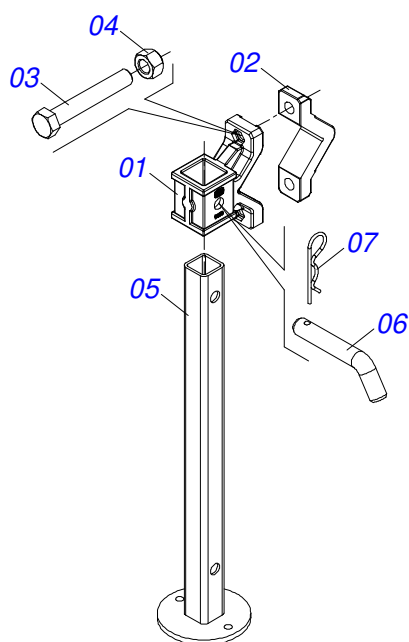


Item	Code	Description	See page	QT
01	0502011530	SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0501069951	PLOUGH SUPPORT		04
06	0501011075	PIN		02
07	0503030012	HITCH PIN CLIP		02

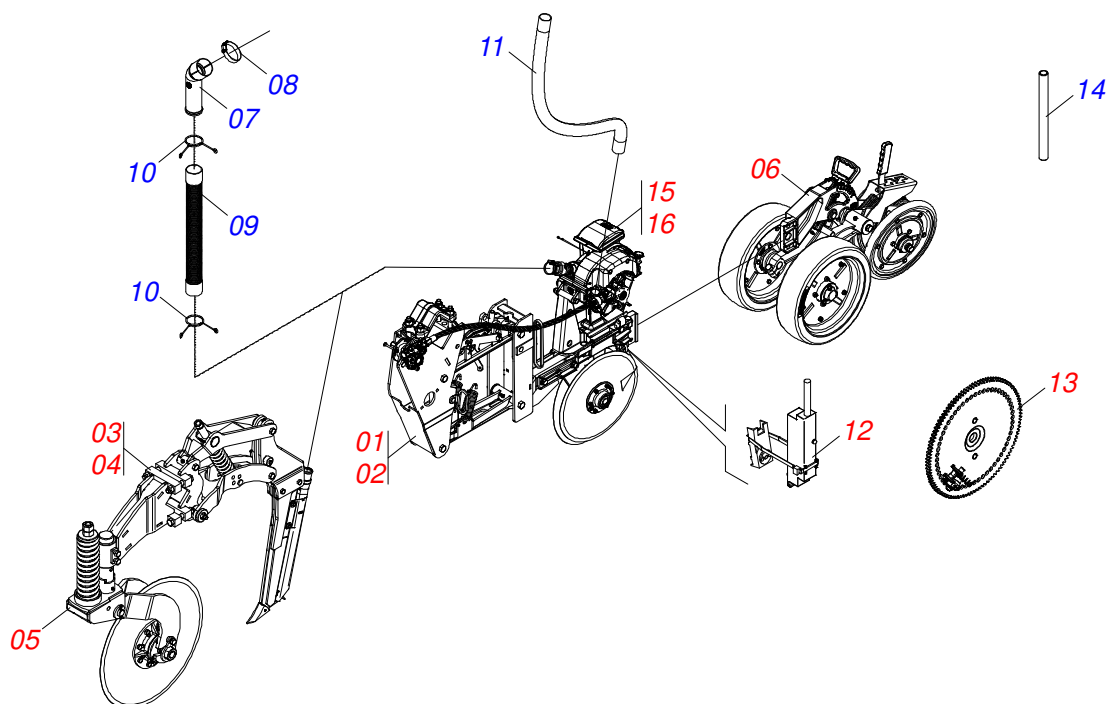


Item	Code	Description	See page	QT
01	0521053574	FRONT SEED SHORT	31	01
02	0521053575	FRONT SEED LONG	32	01
03	0511053825	SEMI-ASSEMBLED SHORT FERTILIZER ROW	34	01
04	0511053826	SEMI-ASSEMBLED LONG FERTILIZER ROW	35	01
05	0511048339	24" BLADE DISC ASSY	36	01
06	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	37	01
07	0503031050	CURVED CONDUCTOR		01
08	0503010246	CLAMP		01
09	0503031145	2" X 2" X 20" HOSE		01
10	0503031076	2" HOSE CLAMP		01
11	0581016488	AIR CONDUCTOR		01
12	0501058972	ASSEMBLY SENSOR ELECTRONIC	46	01
13	0503062763	CONVERSION ASSY FOR DISTRIBUTOR SOY / BEANS		01
14	0531013600	PRESS ADJUSTMENT LEVER		01
15	0521055628	RIGHT REAR LINE SEED	47	01
16	0521055629	LEFT REAR LINE SEED	48	01

FRONT SEED SHORT

0521053574

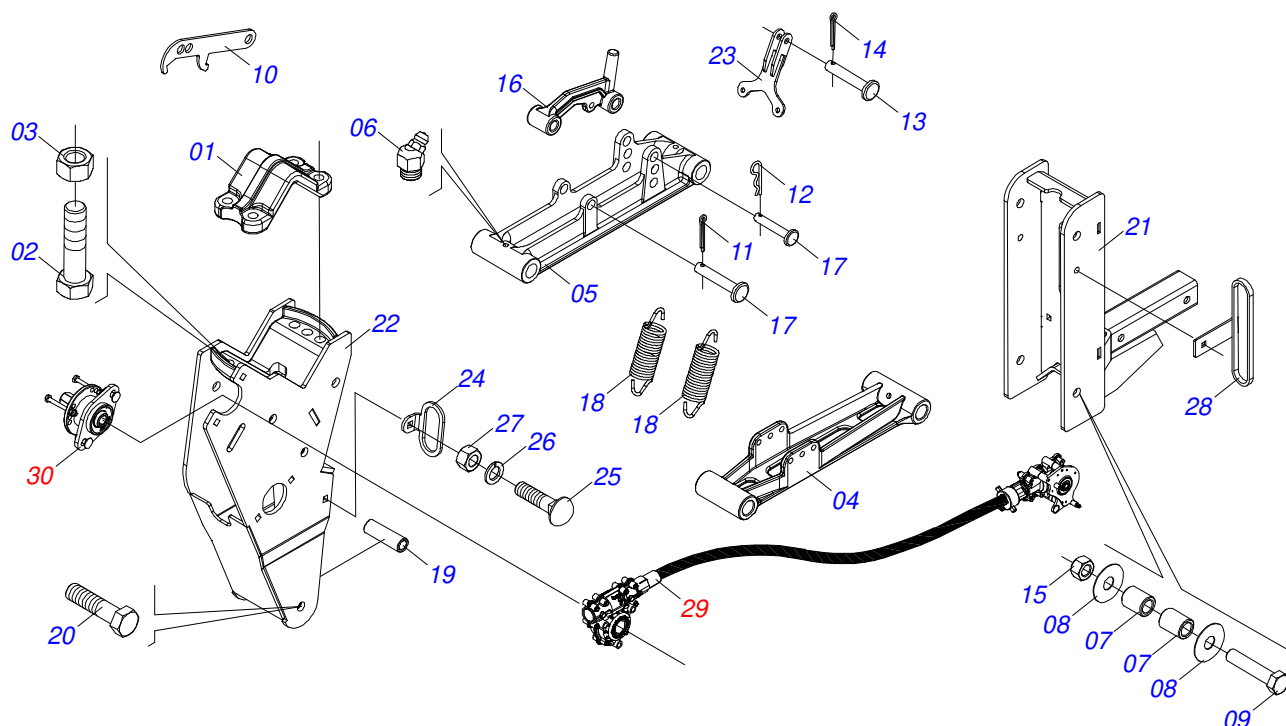


Item	Code	Description	See page	QT
001	0502012789	FIXER SUPPORT FERTILIZER ROW		01
002	0503017857	BOLT 5/8 UNF 4		04
003	0503010811	5/8" UNF SELF ADJUSTING NUT		04
004	0502012666	SEED ROW LOWER ARM		01
005	0502012350	SEED ROW UPPER ARM		01
006	0503010003	1845 GREASE FITTING		04
007	0531015151	0.6" X 1" X 2.4" SLEEVE		06
008	0531015184	FLAT WASHER		08
009	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		03
010	0561019032	SEED FERTIL ROW LOCK		01
011	0503010071	3/16" X 1" SPLIT PIN		01
012	0503030168	HITCH PIN CLIP		01
013	0521010773	0.37" X 1.18" COUPLING SHAFT		01
014	0503010140	1/8" X 3/4" SPLIT PIN		01
015	0503012412	5/8" UNC SELF LOCKING NUT		04
016	0502012568	UPPER ROCKER ARM		01
017	0501011388	COUPLING SHAFT		02
018	0503034580	TRACTION SPRING		02
019	0581017957	SLEEVE		01
020	0501013867	BOLT 5/8 UNC X 6 CS G.5 ZN		01
021	0521069029	FRAME		01
022	0521069031	SEED ROW SUPPORT FRONT		01
023	0521069027	REGULATOR ASSY		01
024	0581017955	CABLE GUIDE		01
025	0503011953	5/16" X 1" BOLT		02
026	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
027	0503010337	5/16" NUT		02
028	0521068285	PROTECTION SUPPORT		01
029	0503062983	SET TRANSMISSION P.P LC 1310MM S/E SORETTO		01
030	0521053577	BEARING BOX	33	01

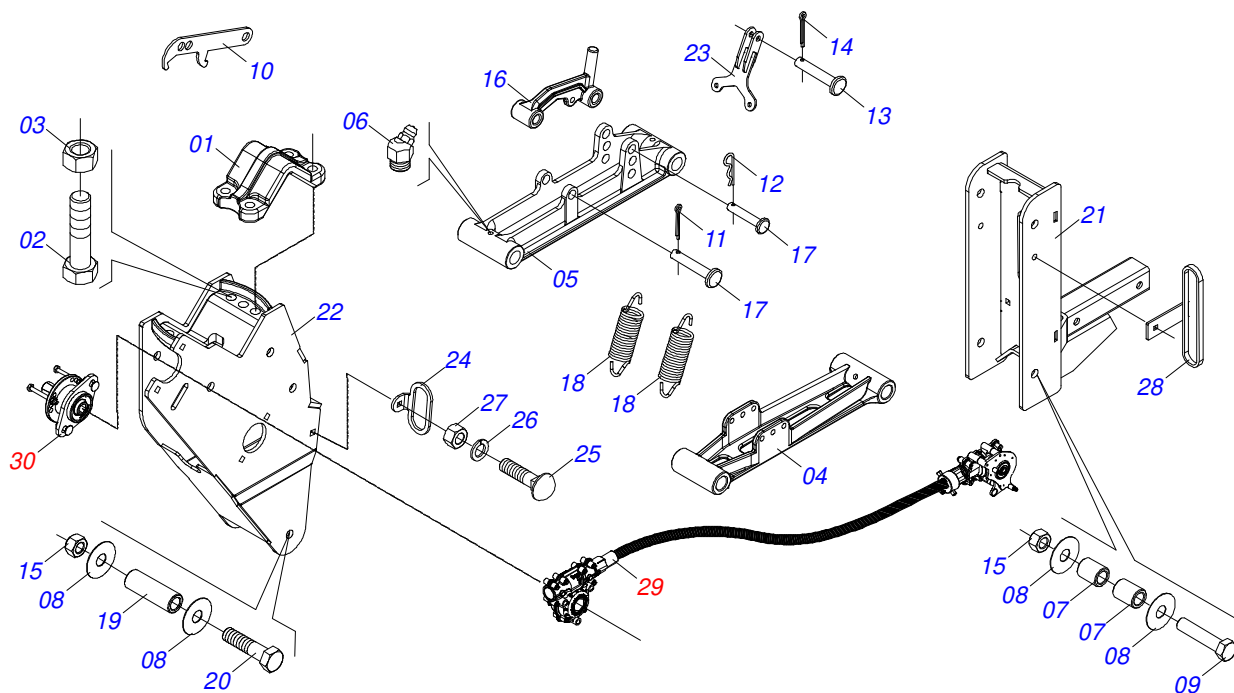


Item	Code	Description	See page	QT
001	0502012789	FIXER SUPPORT FERTILIZER ROW		01
002	0503017857	BOLT 5/8 UNF 4		04
003	0503010811	5/8" UNF SELF ADJUSTING NUT		04
004	0502012666	SEED ROW LOWER ARM		01
005	0502012350	SEED ROW UPPER ARM		01
006	0503010003	1845 GREASE FITTING		04
007	0531015151	0.6" X 1" X 2.4" SLEEVE		06
008	0531015184	FLAT WASHER		08
009	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		03
010	0561019032	SEED FERTIL ROW LOCK		01
011	0503010071	3/16" X 1" SPLIT PIN		01
012	0503030168	HITCH PIN CLIP		01
013	0521010773	0.37" X 1.18" COUPLING SHAFT		01
014	0503010140	1/8" X 3/4" SPLIT PIN		01
015	0503012412	5/8" UNC SELF LOCKING NUT		04
016	0502012568	UPPER ROCKER ARM		01
017	0501011388	COUPLING SHAFT		02
018	0503034580	TRACTION SPRING		02
019	0581017957	SLEEVE		01
020	0501013867	BOLT 5/8 UNC X 6 CS G.5 ZN		01
021	0521069029	FRAME		01
022	0521069030	SUPPORT FRONT		01
023	0521069027	REGULATOR ASSY		01
024	0581017955	CABLE GUIDE		01
025	0503011953	5/16" X 1" BOLT		02
026	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
027	0503010337	5/16" NUT		02
028	0521068285	PROTECTION SUPPORT		01
029	0503062984	TRANSMISSION ASSY PP SUPER LONG ROW 1410MM		01
030	0521053577	BEARING BOX	33	01

BEARING BOX

0521053577

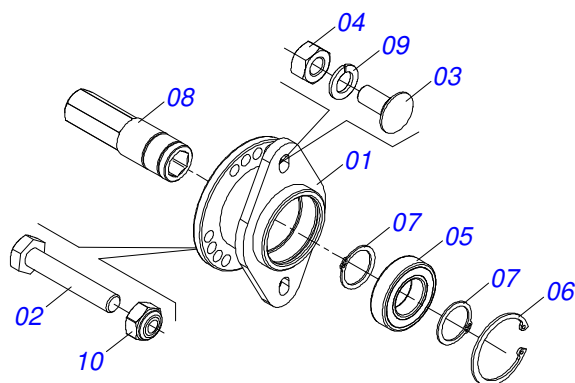


Item	Code	Description	See page	QT
01	0581014692	BEARING		01
02	0503011194	BOLT 1/4 UNC X 2.1/2 CS G.2 ZN		02
03	0503011953	5/16" X 1" BOLT		02
04	0503010337	5/16" NUT		02
05	0503011410	ROLLER BEARING		01
06	0503011105	SEAL RING		01
07	0503010406	501025 CLAMPING RING (FOR AXLE)		02
08	0581017960	SLEEVE HEX SEXTAVADA		01
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
10	0503012880	1/4" UNC SELF ADJUSTING NUT		02

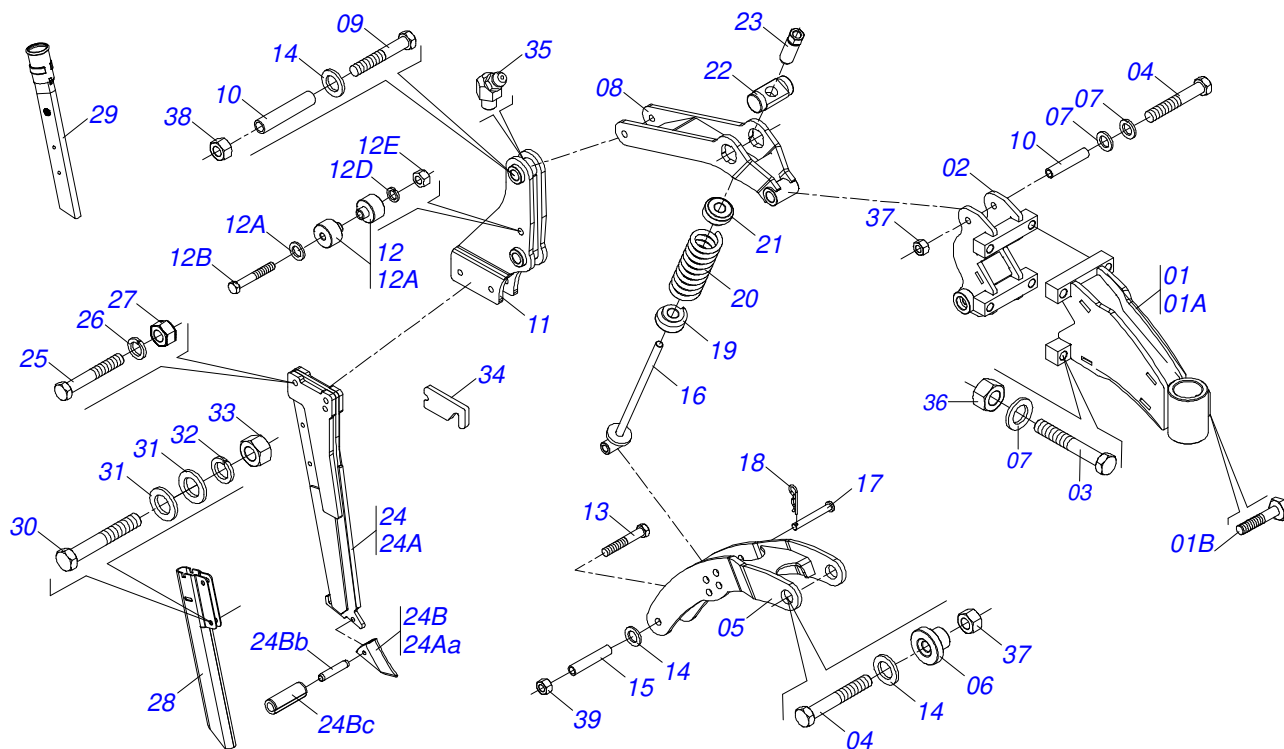

Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT		01
001A	0521061326	BLADE DISC AXLE SUPPORT		01
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
002	0521061407	ROW FERTILIZER SUPPORT		01
003	0503011084	3/4" X 5" BOLT		04
004	0501013233	5/8" X 2-3/4" BOLT		02
005	0521063504	FERTILIZER ROW LOWER SUPPORT		01
006	0531019990	BLADE D ARM ARTIC SLEEVE		02
007	0511015098	FLAT WASHER		06
008	0511063862	FERTILIZER ROW UPPER SUPPORT		01
009	0501010163	5/8" X 4-1/2" BOLT		01
010	0531016207	0.6" X 1" X 2.8" SLEEVE		01
011	0511065837	FERTILIZER ROW REAR SUPPORT		01
012	0501059640	BEATER LINE SET FERTILIZER		01
012A	0561015611	BEATER SLEEVE		02
012B	0503011123	BOLT		01
012C	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
012D	0503010025	3/8 SPRING WASHER		01
012E	0503010026	3/8" NUT		01
013	0501010452	5/8" X 5" BOLT		02
014	0531016031	1/2" SPRING WASHER		04
015	0531016207	0.6" X 1" X 2.8" SLEEVE		02
016	0521063505	GUIDE SPRING LINE FERTILIZER		01
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
018	0503030168	HITCH PIN CLIP		01
019	1902020393	SPRING UPPER SUPPORT		01
020	0503031450	2.7" X 9.2" X 0.03" SPRING		01
021	1902020393	SPRING UPPER SUPPORT		01
022	0521011158	SPRING LOCKNUT		01
023	0571012375	ROD REGULATOR SPINDLE		01
024	0501110640	SCARIFIER SPINDLE		01

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2 UNC G.5 ZN HEX NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
032	0503010025	3/8 SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8" UNC SELF LOCKING NUT		02

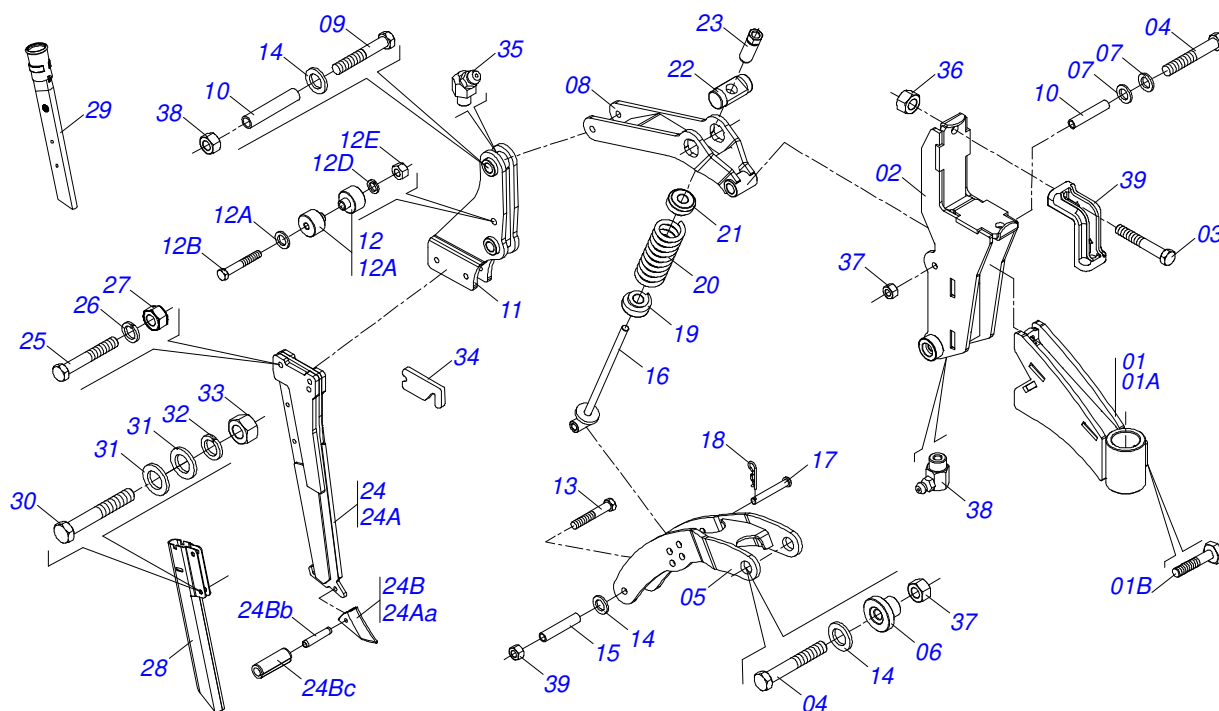


Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT		01
001A	0521061326	BLADE DISC AXLE SUPPORT		01
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
002	0521063521	ROW FERTILIZER SUPPORT		01
003	0501010125	3/4" X 2-1/2" BOLT		02
004	0501013233	5/8" X 2-3/4" BOLT		02
005	0521063504	FERTILIZER ROW LOWER SUPPORT		01
006	0531019990	BLADE D ARM ARTIC SLEEVE		02
007	0511015098	FLAT WASHER		06
008	0511063862	FERTILIZER ROW UPPER SUPPORT		01
009	0501010163	5/8" X 4-1/2" BOLT		01
010	0531016207	0.6" X 1" X 2.8" SLEEVE		01
011	0511065837	FERTILIZER ROW REAR SUPPORT		01
012	0501059640	BEATER LINE SET FERTILIZER		01
012A	0561015611	BEATER SLEEVE		02
012B	0503011123	BOLT		01
012C	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
012D	0503010025	3/8 SPRING WASHER		01
012E	0503010026	3/8" NUT		01
013	0501010452	5/8" X 5" BOLT		02
014	0531016031	1/2" SPRING WASHER		04
015	0531016207	0.6" X 1" X 2.8" SLEEVE		02
016	0521063505	GUIDE SPRING LINE FERTILIZER		01
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
018	0503030168	HITCH PIN CLIP		01
019	1902020393	SPRING UPPER SUPPORT		01
020	0503031450	2.7" X 9.2" X 0.03" SPRING		01
021	1902020393	SPRING UPPER SUPPORT		01
022	0521011158	SPRING LOCKNUT		01
023	0571012375	ROD REGULATOR SPINDLE		01
024	0501110640	SCARIFIER SPINDLE		01

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2 UNC G.5 ZN HEX NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
032	0503010025	3/8 SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8" UNC SELF LOCKING NUT		02
038	0503010004	1890 GREASE FITTING		01
039	0502012400	ROW FERTILIZER FIXER		01

24" BLADE DISC ASSY


0511048339

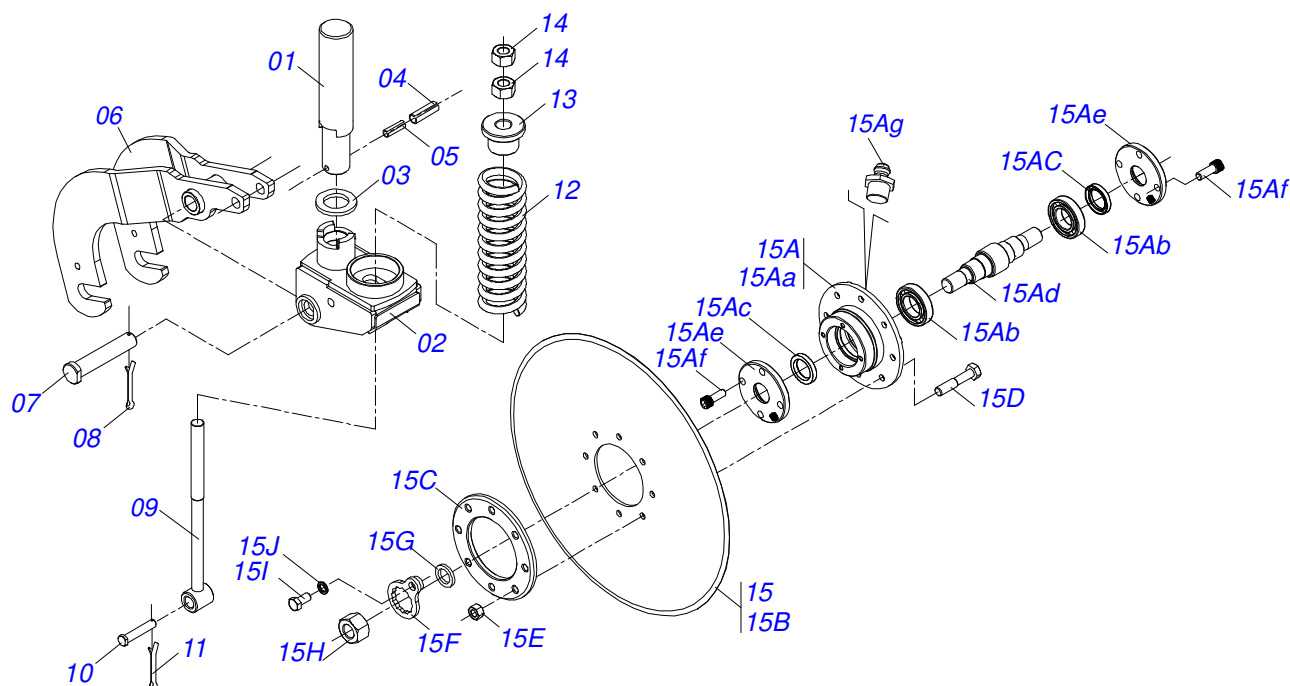


Item	Code	Description	See page	QT
01	0561015334	BLADE DISC AXLE ASSY		01
02	0521061328	SWIVEL BASE		01
03	0561015610	FLAT WASHER		01
04	0503010361	SPRING PIN		01
05	0503010756	0.2" X 2.4" SPRING PIN		01
06	0521062418	BLADE DISC FORK		01
07	0561015339	BLADE DISC AXLE ASSY		01
08	0503010010	1/4" X 2.1/2" SPLIT PIN		01
09	0501069390	SPRING ROD		01
10	0561019515	COUPLING SHAFT		01
11	0503010571	1/4" X 1.1/2" SPLIT PIN		01
12	0503031346	COMPRESSION SPRING		01
13	0561015400	BLADE DISC SPRING GUIDE		01
14	0503014018	1" NUT		01
15	0511050746	24" BLADE DISC ASSY		01
15A	0501057526	DISC HUB		01
15Aa	0502011478	DISC HUB		01
15Ab	0503011291	6209 BALL BEARING		02
15Ac	0503012106	SEAL RETAINER 00521-BR		02
15Ad	0521012661	DISC BLADE HUB AXLE		01
15Ae	0502011477	BLADE DISC HOUSIG CP		02
15Af	0503010134	3/8" X 1" BOLT		08
15Ag	0503010002	1800 GREASE FITTING		01
15B	0603030044	24" X 0.2" FLAT PLAIN DISC		01
15C	0521011824	DISC BLADE SUPPORT FLANGE		01
15D	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
15E	0503010060	1/2 UNC G.5 ZN HEX NUT		16
15F	0501069637	AXLE NUT LOCK		02
15G	0521012664	FLAT WASHER		02
15H	0501010087	1.1/4" NUT		02
15I	0503010962	5/8" X 1-1/4" BOLT		02




Item	Code	Description	See page	QT
15J	0503010027	5/8 SPRING WASHER		02

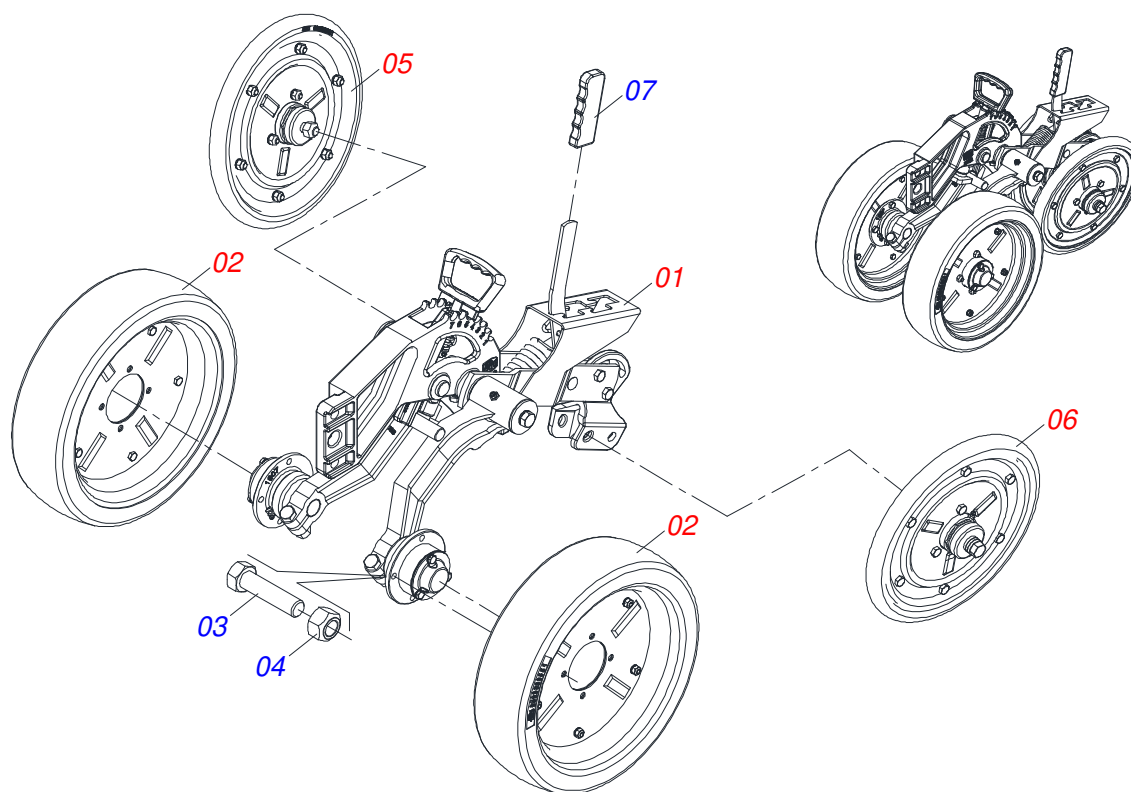


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	38	01
02	0501052538	DEPTH BAND WITH ARMS	42	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	43	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	44	01
07	0503033942	COMPACTOR WHEEL REGULATOR LID		01

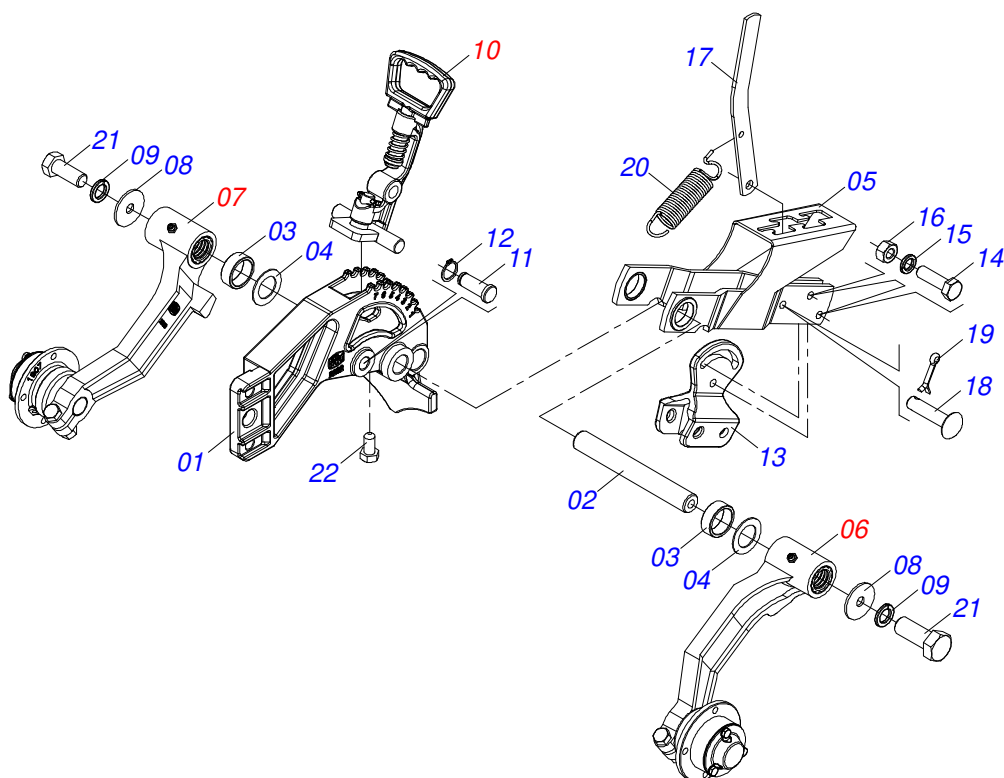


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT DEPTH WHEEL ARM WITH HUB	40	01
07	0511058651	RIGHT DEPTH WHEEL ARM WITH HUB	39	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY		01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" SPLIT PIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	3/8 UNC X 3/4 BOLT		01

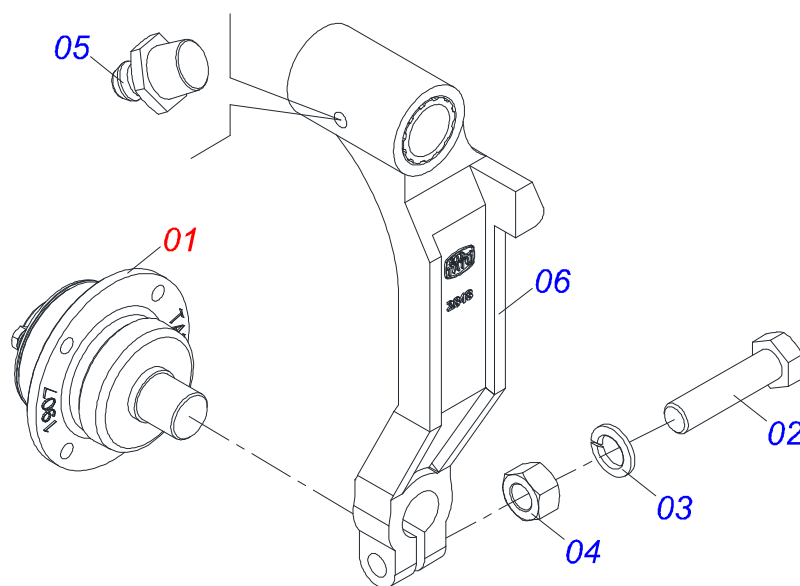


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL HUB	41	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

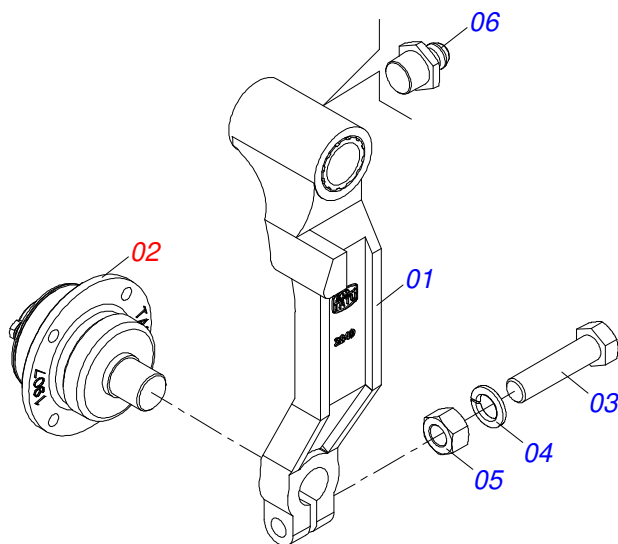


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL HUB	41	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0503010002	1800 GREASE FITTING		01

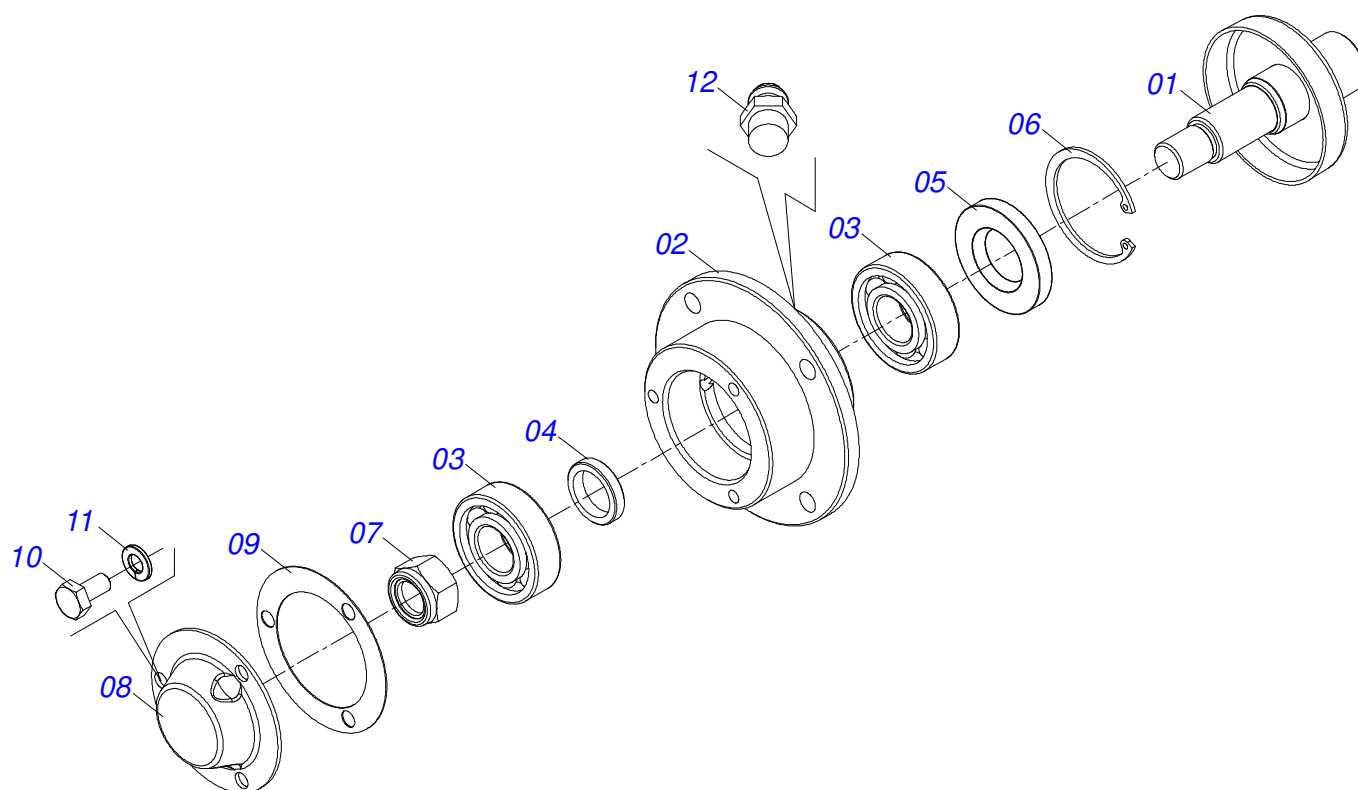


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	PROTECTION LID		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

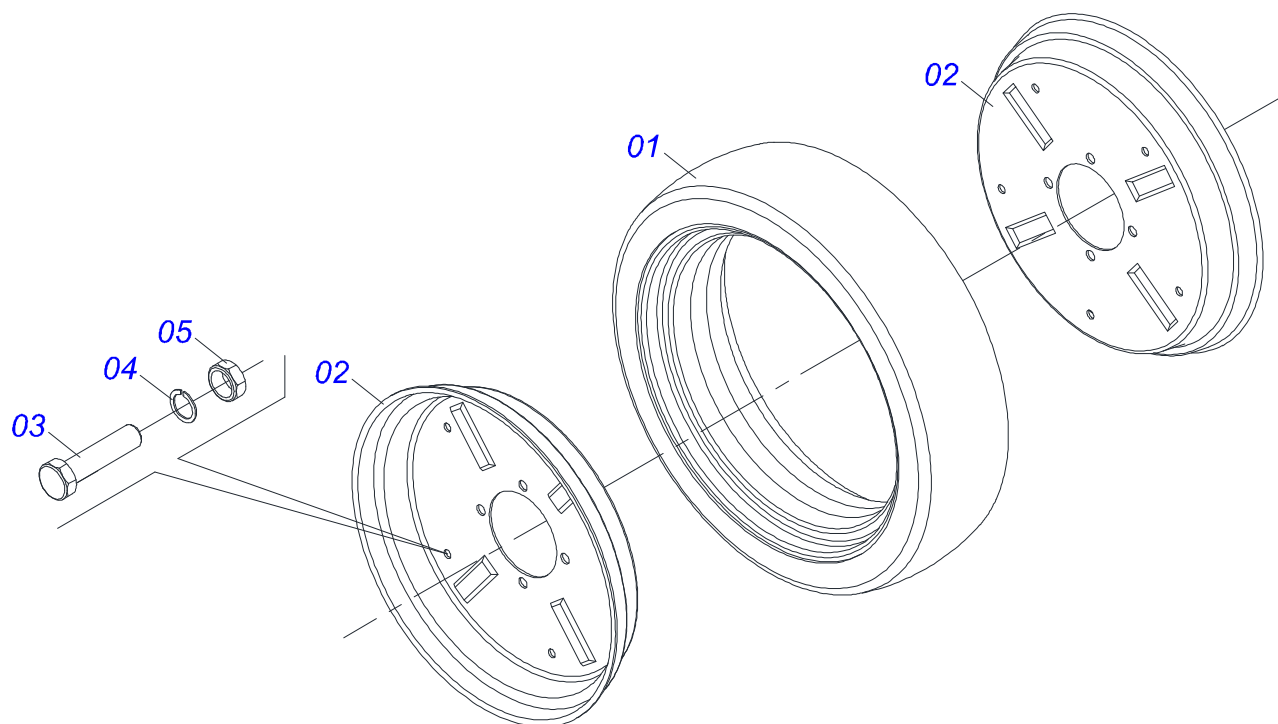


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

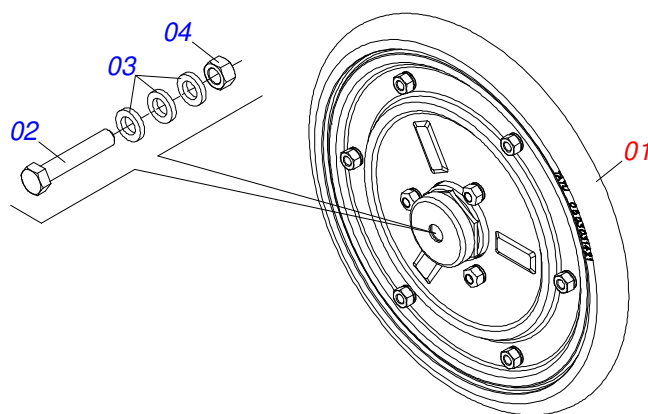


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	45	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

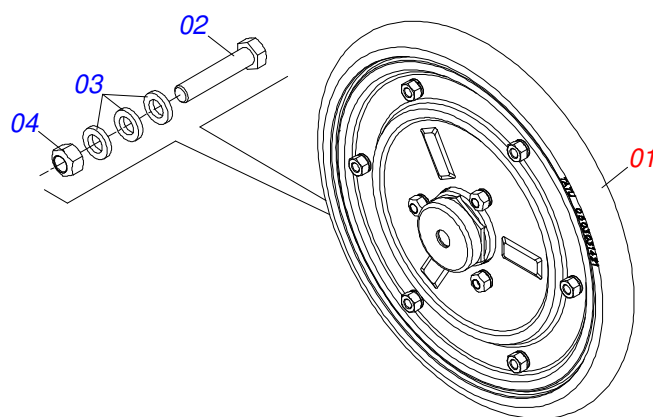


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	45	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

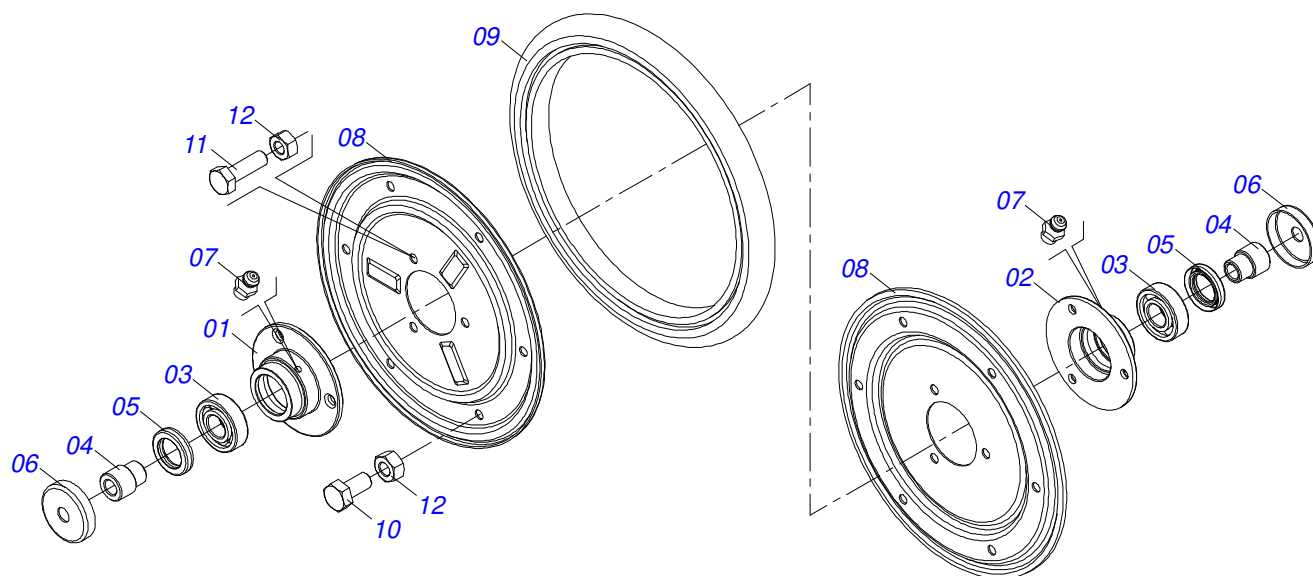


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

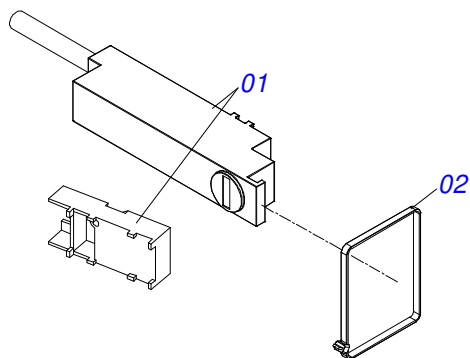


Item	Code	Description	See page	QT
01	0503015218	SENSOR FOTOELE PM 400		01
02	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03

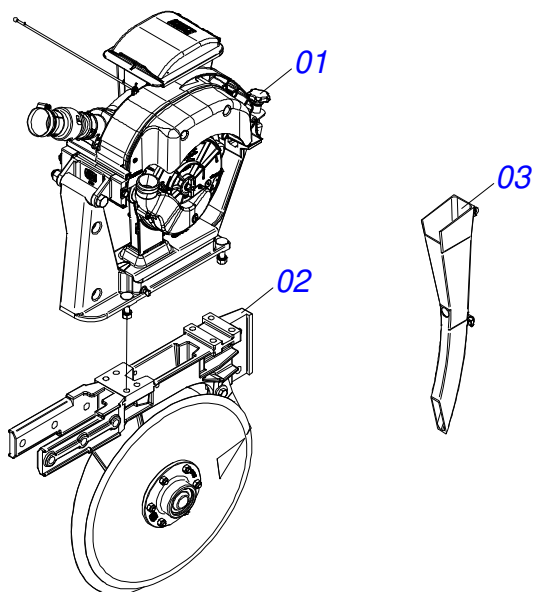


Item	Code	Description	See page	QT
001	0521054089	PPH ASSY (MINI HOPPER) STEEL CABLE	49	01
002	0511057154	RIGHT DDD	51	01
003	0503062403	TUBE SEED P.P		01

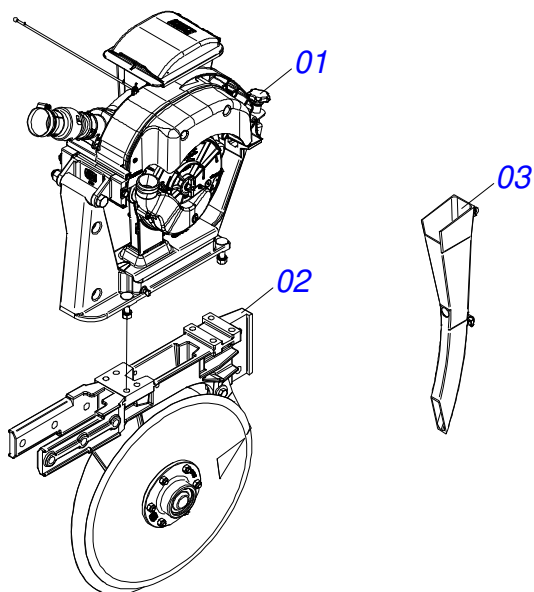


Item	Code	Description	See page	QT
001	0521054089	PPH ASSY (MINI HOPPER) STEEL CABLE	49	01
002	0511057153	DDD LEFT	52	01
003	0503062403	TUBE SEED P.P		01

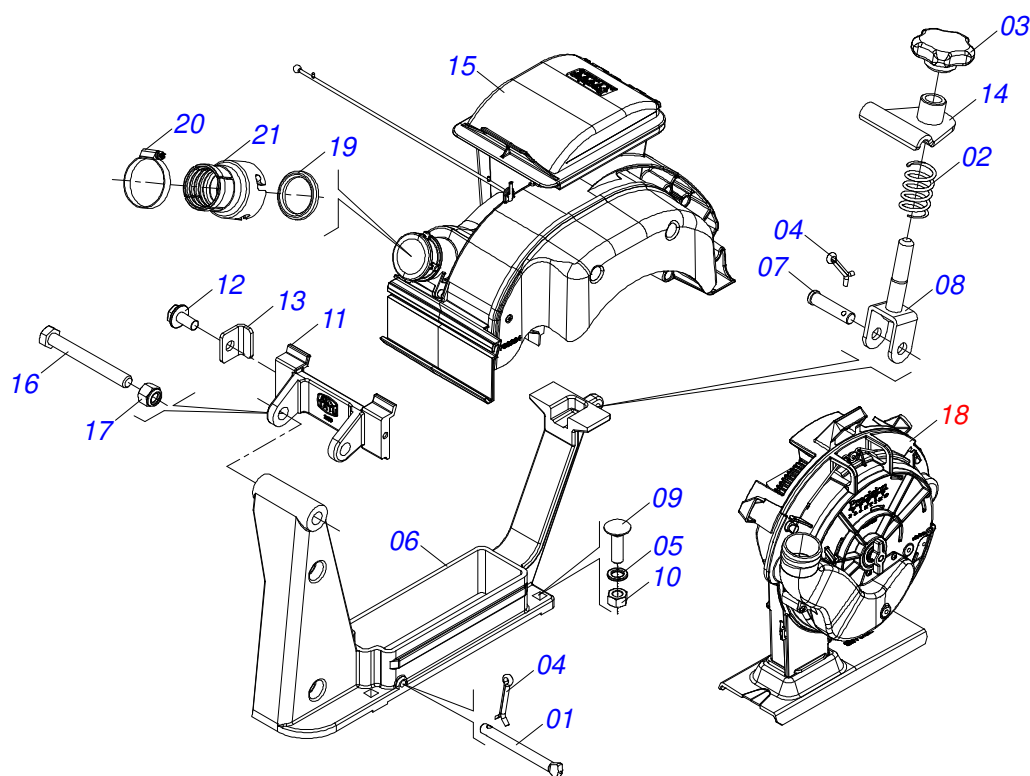


Item	Code	Description	See page	QT
01	0571017895	PIN FIXER CONDUCTOR P.P		01
02	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
03	0503010293	CLAMP KNOB		01
04	0503010140	1/8" X 3/4" SPLIT PIN		02
05	0503010025	3/8 SPRING WASHER		04
06	0502012909	BASE SUPPORT PRECISION PLANTING		01
07	0571014024	FAST BOLT GUIDE AXLE		01
08	0503034824	FIXATIVE		01
09	0503015920	3/8" UNC X 1.3/4" BOLT		04
10	0503010026	3/8" NUT		04
11	0502012800	SUPPORT ARTICULATION PNEUMATIC		01
12	0503810009	BOLT		02
13	0571018649	SUPPORT FIXER		02
14	0501110894	FIXER		01
15	0503062406	SEED HOPPER		01
16	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
17	0503010589	1/2" UNC SELF ADJUSTING NUT		01
18	0521052131	VSET2 DISTRIBUTOR WITH CORN DISC WITHOUT 50 PROTECTION		01
19	0503034204	SEALING		01
20	0503010243	CLAMP		01
21	0581017816	TERMINAL		01

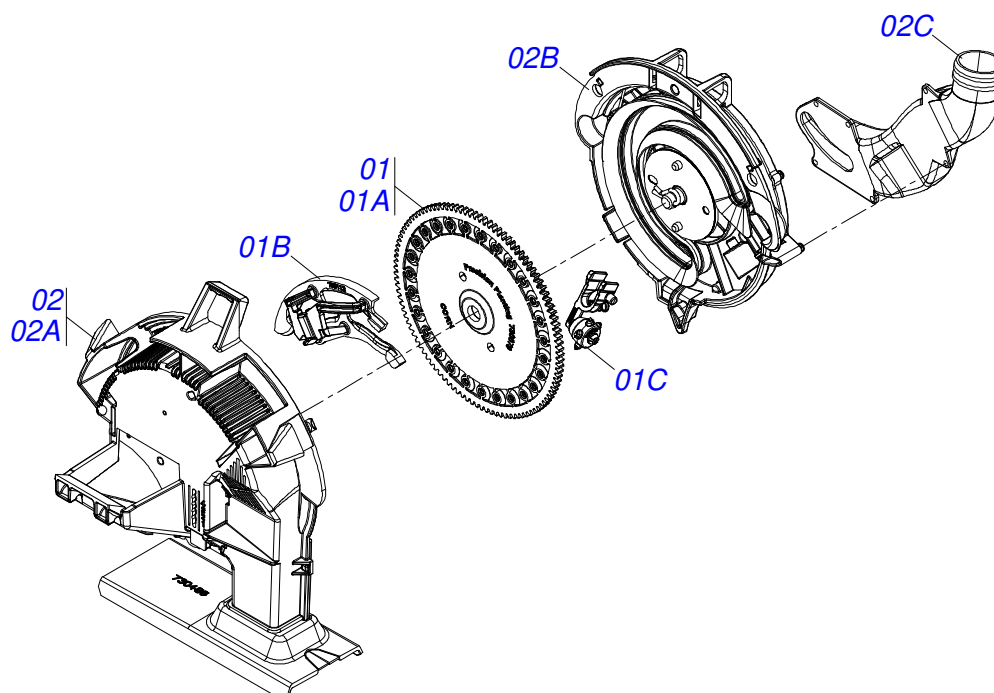


Item	Code	Description	See page	QT
01	0503062417	KIT CORN DISTRIBUTION		01
01A	0503018160	CORN PLASTIC DISC		01
01B	0503062472	SELECTOR SEED CORN		01
01C	0503062474	EJECTOR CORN SEED SET		01
02	0503062405	SEED DISTRIBUTOR		01
02A	0503062567	FIXED BASE SEEDS DISTRIBUTOR		01
02B	0503062974	MOBILE BASE WITHOUT SNORKEL		01
02C	0503062973	SNORKEL ASSY PP768718		01

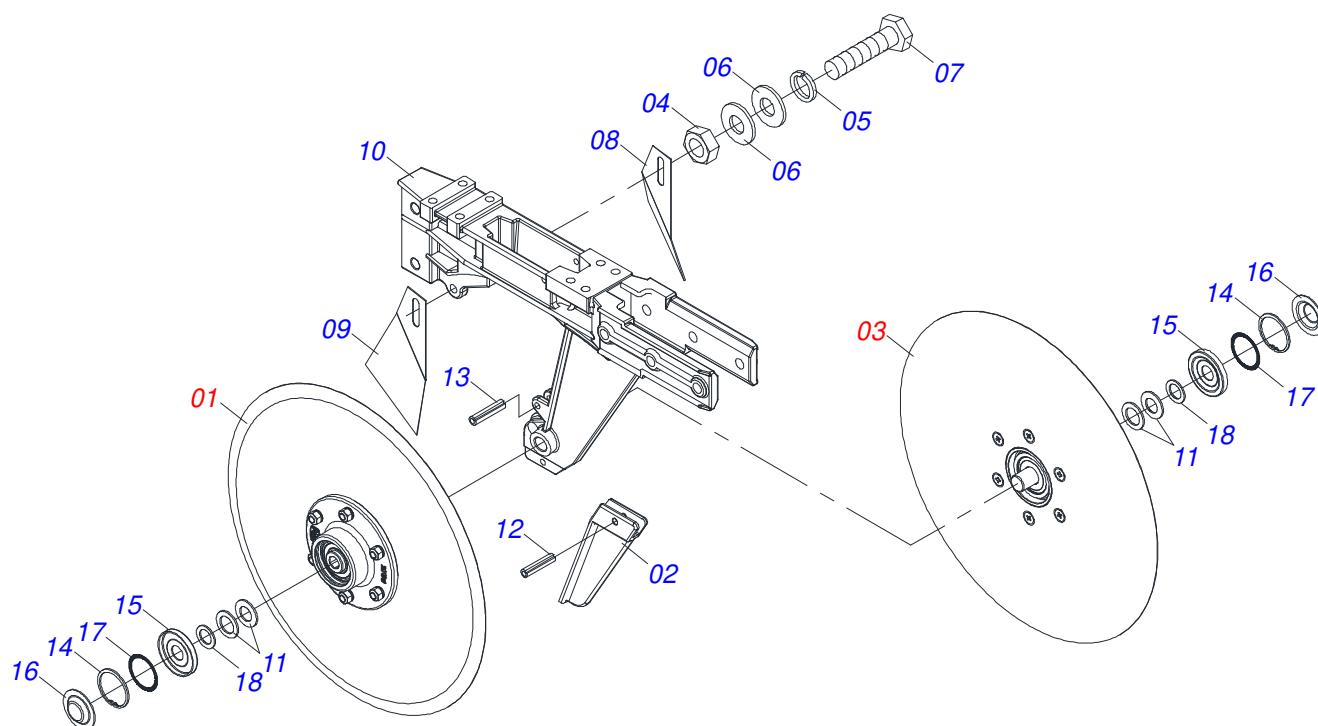

Item	Code	Description	See page	QT
01	0511053172	LEFT LOW HUB WITH 15 DISC		01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	RIGHT LOW HUB WITH 15 DISC		01
04	0503810026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501810984	FLAT WASHER		02
07	0503810751	3/8 UNC X 1.1/4 C S G.5 - SCREW		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012780	SUPPORT DDD RIGHT		01
11	0511815098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O'RING		02
18	0591014250	19 X 26 X 0,50 FLAT WASHER		02

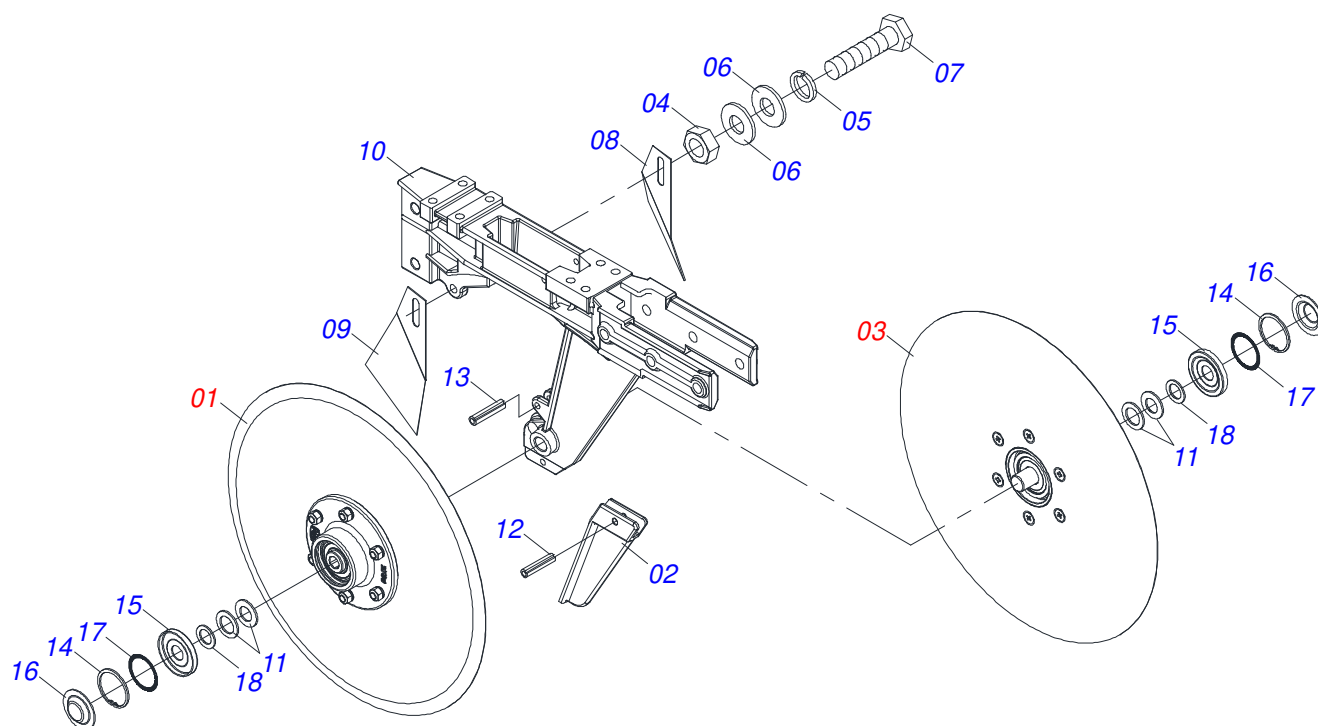


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW HUB WITH 15 DISC		01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	RIGHT LOW HUB WITH 15 DISC		01
04	0503810026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501810984	FLAT WASHER		02
07	0503810751	3/8 UNC X 1.1/4 C S G.5 - SCREW		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012781	SUPPORT DDD LEFT		01
11	0511815098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O'RING		02
18	0591014250	19 X 26 X 0,50 FLAT WASHER		02

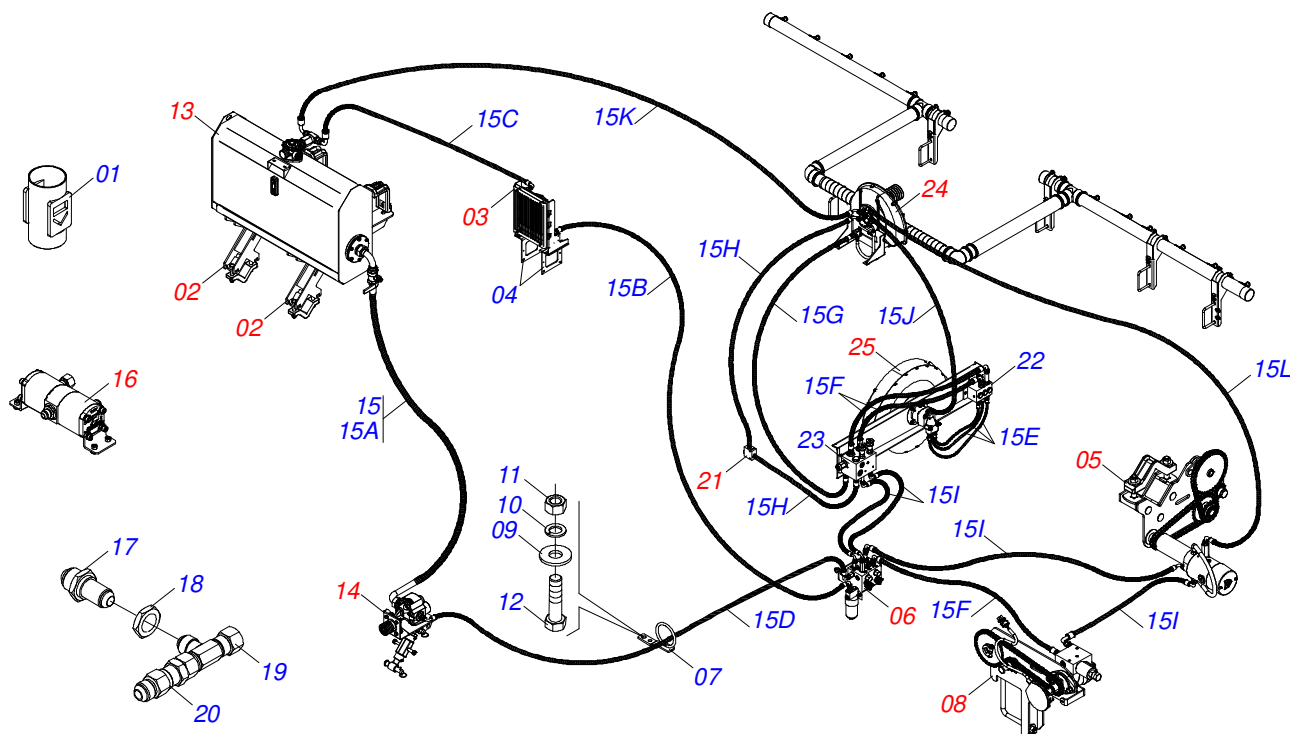

Item	Code	Description	See page	QT
01	0521063387	WITH SENSOR		01
02	0521055456	SUPPORT TANK OIL	54	02
03	0521055632	SET RADIATOR	55	01
04	0581019924	SUPPORT RADIATOR		02
05	0521055459	MOTOR SUPPORT	56	01
06	0521055633	BLOCK COMMAND	57	01
07	0511063282	HOSE HOLDER		01
08	0521055634	MOTOR SUPPORT	58	01
09	0501013518	FLAT WASHER		12
10	0503010025	3/8 SPRING WASHER		08
11	0503010026	3/8" NUT		08
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
13	0511053776	TANK 100 LITERS ASSY	61	01
14	0511053777	PUMP ASSY WITH SUPPORT	63	01
15	0521055638	HOSE KIT		01
15A	0501082227	1.1/4" X 6200 AB-AB HOSE ASSY		01
15B	0501080200	3/4 X 1600 TR-TC HOSE		01
15C	0501082122	3/4 X 5000 TC-TC HOSE		01
15D	0501081437	3/4 X 5300 TR-TC HOSE		01
15E	0501080109	1/2" X 800 TR-TR HOSE		03
15F	0501080010	1/2 X 1000 TR-TC HOSE		03
15G	0501080052	1/2" X 63" TR-TR HOSE ASSY		01
15H	0501080060	1/2" X 63" TR-TC HOSE		01
15I	0501080787	1/2 X 3500 TC-TC HOSE		04
15J	0501080461	3/8" X 70" TR-TC HOSE		01
15K	0501080579	TC-TC HOSE ASSY		01
15L	0501080978	1/4 X 1260 TC-TC HOSE		01
16	0521055640	FLOW DIVIDING VALVE	62	01
17	0541012166	NIPPLE 3/4" UNF X 7/8"		01
18	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01
19	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01


Item	Code	Description	See page	QT
20	0503012341	7/8" T ADAPTER		02
21	0503015420	CV10208TN5 ANTI-CAVITATION VALVE		01
22	0503012291	BLOCK COMMAND		01
23	0503018597	BLOCK COMMAND		01
24	0521055627	SET TURBINE	67	01
25	0521055630	FULL SET	7	01

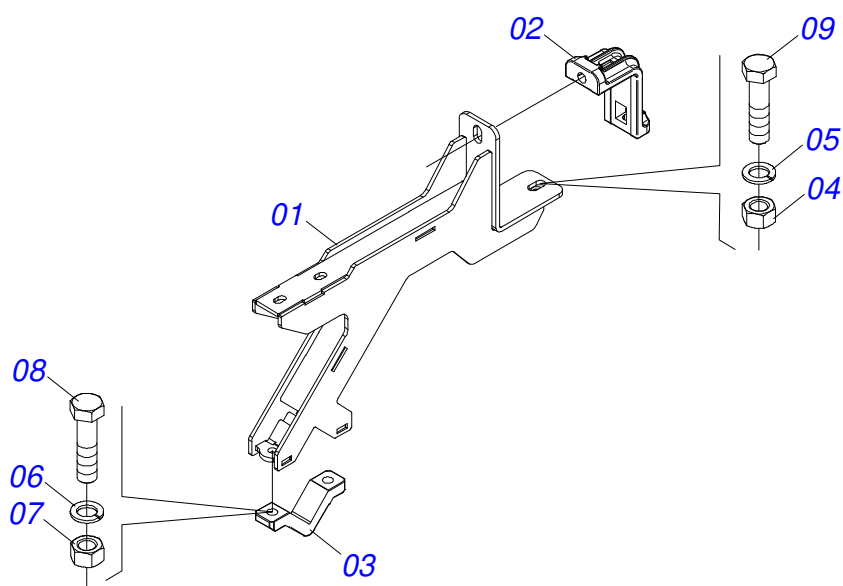


Item	Code	Description	See page	QT
001	0521069766	TANK SUPPORT		01
002	0502012400	ROW FERTILIZER FIXER		01
003	1902010175	HITCH CLAMP		01
004	0503010152	3/4" SELF LOCKING NUT		02
005	0541010763	FLAT WASHER		02
006	0501011299	FLAT WASHER		02
007	0503012412	5/8" UNC SELF LOCKING NUT		02
008	0501011543	5/8" X 4" BOLT		02
009	0501010195	3/4" X 3-1/2" BOLT		02

SET RADIATOR


0521055632

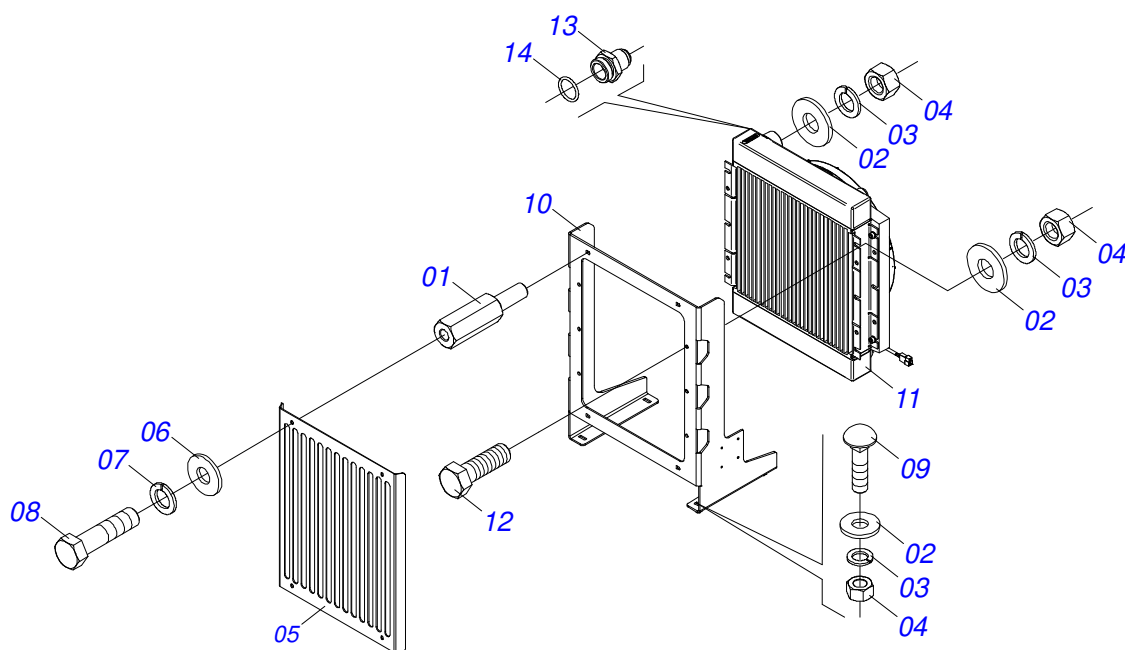


Item	Code	Description	See page	QT
001	0571016789	PRISONER 3/8 UNC X 5/16 UNC X 65		04
002	0501013518	FLAT WASHER		14
003	0503010025	3/8 SPRING WASHER		14
004	0503010026	3/8" NUT		14
005	0581019926	RADIATOR PROTECTION		01
006	0501010694	FLAT WASHER		04
007	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
008	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		04
009	0501011643	3/8 X 1"BOLT		04
010	0581019925	RADIATOR PROTECTION		01
011	0503019326	HEAT EXCHANGER		01
012	0503010237	3/8" X 1" BOLT		06
013	0571017695	NIPLE 1.1/16 UNC X G1		02
014	0503010046	2-216 N 3006-9B O'RING		02

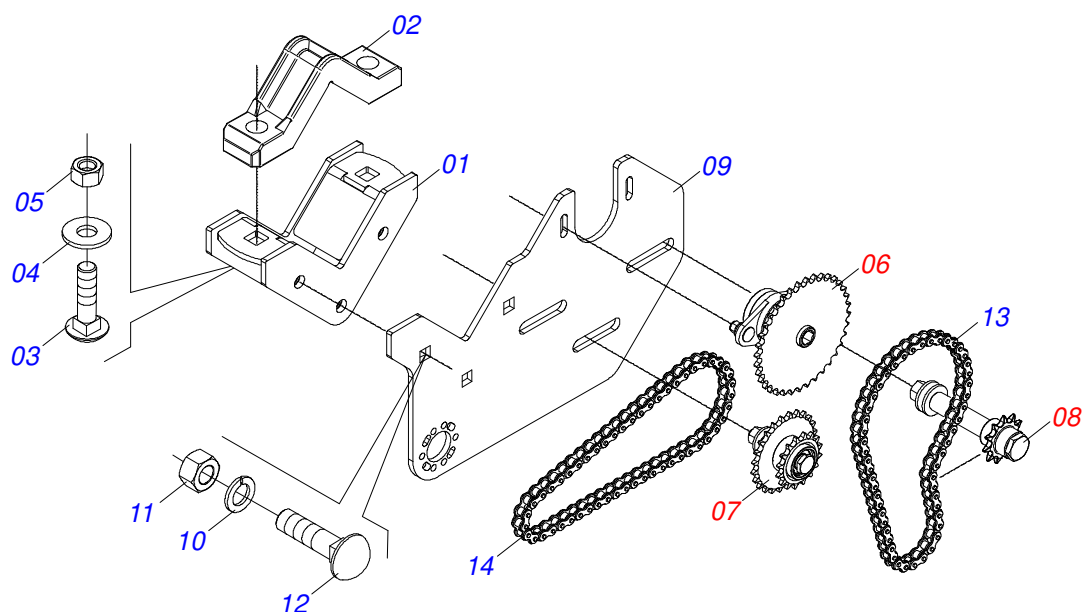


Item	Code	Description	See page	QT
001	0521069768	MOTOR SUPPORT		01
002	1902010175	HITCH CLAMP		01
003	0503015017	5/8" X BOLT		02
004	0501012140	FLAT WASHER		02
005	0503012412	5/8" UNC SELF LOCKING NUT		02
006	0511059880	BEARING WITH 36Z		01
007	0511059968	DOUBLE BEARING	59	01
008	0511059969	CHAIN TENSIONER	60	01
009	0581019896	MOTOR SUPPORT		01
010	0503010019	1/2" SPRING WASHER		03
011	0503010060	1/2 UNC G.5 ZN HEX NUT		03
012	0503014734	BOLT		03
013	0503011064	40-1 X 51 CHAIN LINK + MENDING		01
014	0503011064	40-1 X 51 CHAIN LINK + MENDING		01

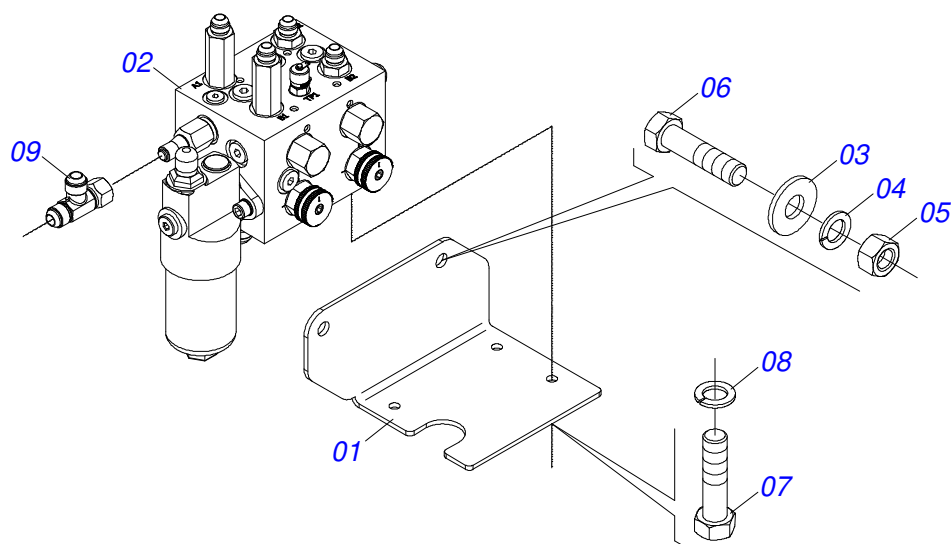


Item	Code	Description	See page	QT
001	0581019898	SUPPORT BLOCK		01
002	0503062708	BLOCK COMMAND		01
003	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
004	0503010019	1/2" SPRING WASHER		02
005	0503010060	1/2 UNC G.5 ZN HEX NUT		02
006	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
007	0503010172	M10 X 1,5 X 25 BOLT		03
008	0503015075	M10 SPRING WASHER		03
009	0503012341	7/8" T ADAPTER		02

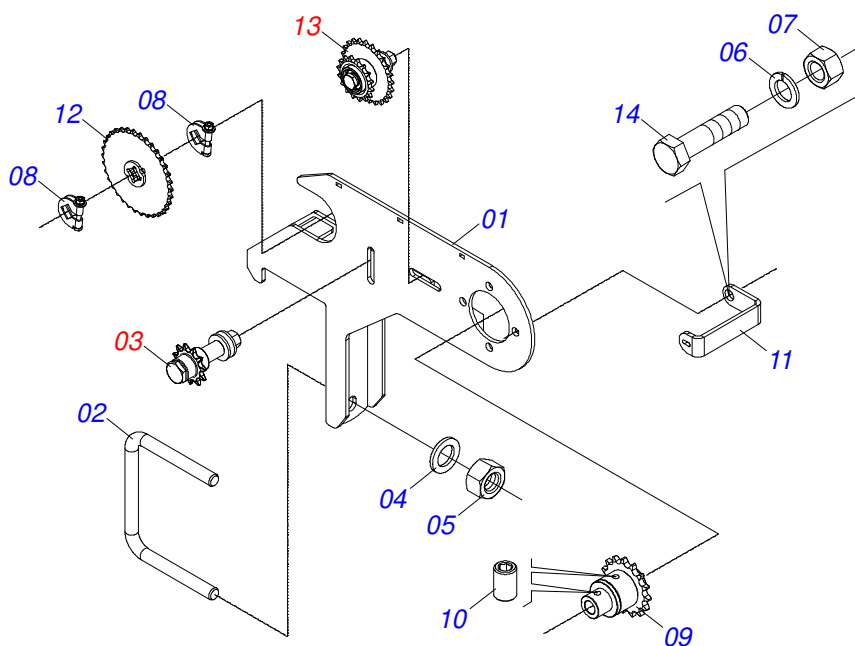


Item	Code	Description	See page	QT
001	0521069767	SUPPORT HIDRAULIC MOTOR		01
002	0521010718	5/8" U BOLT		01
003	0511059969	CHAIN TENSIONER	60	01
004	0501012140	FLAT WASHER		02
005	0503012412	5/8" UNC SELF LOCKING NUT		02
006	0503010019	1/2" SPRING WASHER		02
007	0503010060	1/2 UNC G.5 ZN HEX NUT		02
008	0501053788	3/4" SQUARE AXLE FASTENER		02
009	0521064025	TRACTOR HITCH		01
010	0503011807	SCREW M8 X 1,25X10		02
011	0571012766	SUPPORT ENCODER		01
012	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		01
013	0511059968	DOUBLE BEARING	59	01
014	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		02

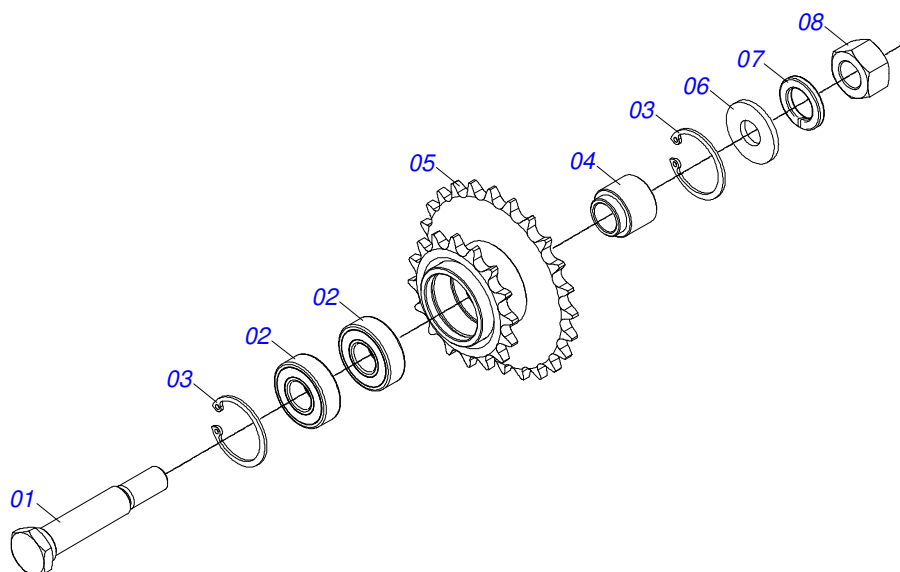


Item	Code	Description	See page	QT
001	0581012966	DOUBLE GEAR AXLE		01
002	0503012882	BEARING		02
003	0503011945	503050 CLAMPING RING (FOR AXLE)		02
004	0581012967	DOUBLE GEAR SLEEVE		01
005	0521067332	DOUBLE GEAR SLEEVE		01
006	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
007	0503010019	1/2" SPRING WASHER		01
008	0503010060	1/2 UNC G.5 ZN HEX NUT		01

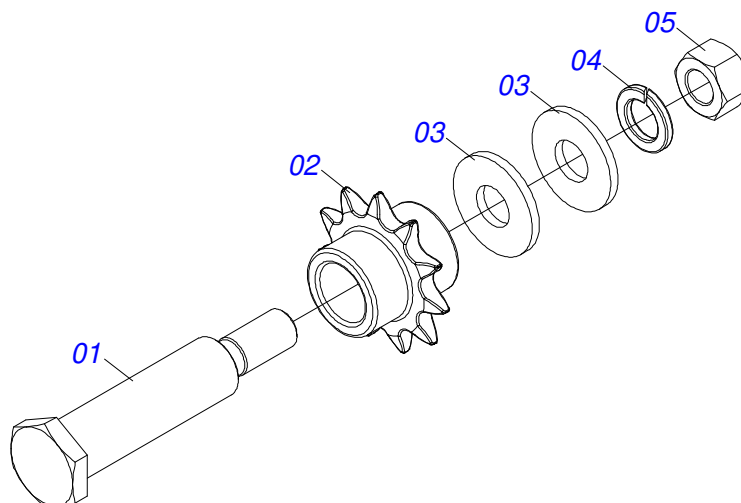


Item	Code	Description	See page	QT
01	0581012970	TIGHTENER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

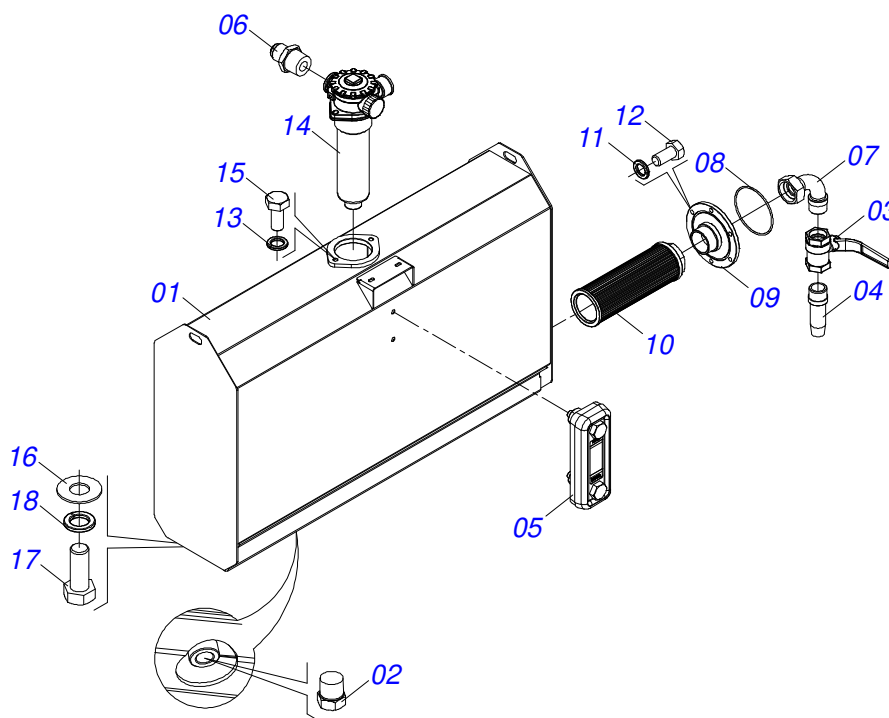


Item	Code	Description	See page	QT
01	0521064278	RESERVOIR OIL		01
02	0503031604	1/2" BSP PLUG		01
03	0503014250	BALL REGISTRATION 1. 1/4		01
04	0511068181	TUBE		01
05	0503014246	VISOR OIL LEVEL		01
06	0501010971	NIPPLE R1.1/16		01
07	0511068047	OUTER TUBE		01
08	0503012756	O'RING RING		01
09	0521069818	COVER TANK		01
10	0503015406	SUCTION FILTER		01
11	0503010025	3/8 SPRING WASHER		06
12	0503010256	3/8" X 3/4" BOLT		06
13	0503010180	7/16" SPRING WASHER		02
14	0503062707	RETURNING FILTER ASSY		01
15	0503011338	7/16" X 1" BOLT		02
16	0501013519	FLAT WASHER		04
17	0501010161	1/2" X 1.1/4" BOLT		04
18	0503010019	1/2" SPRING WASHER		04

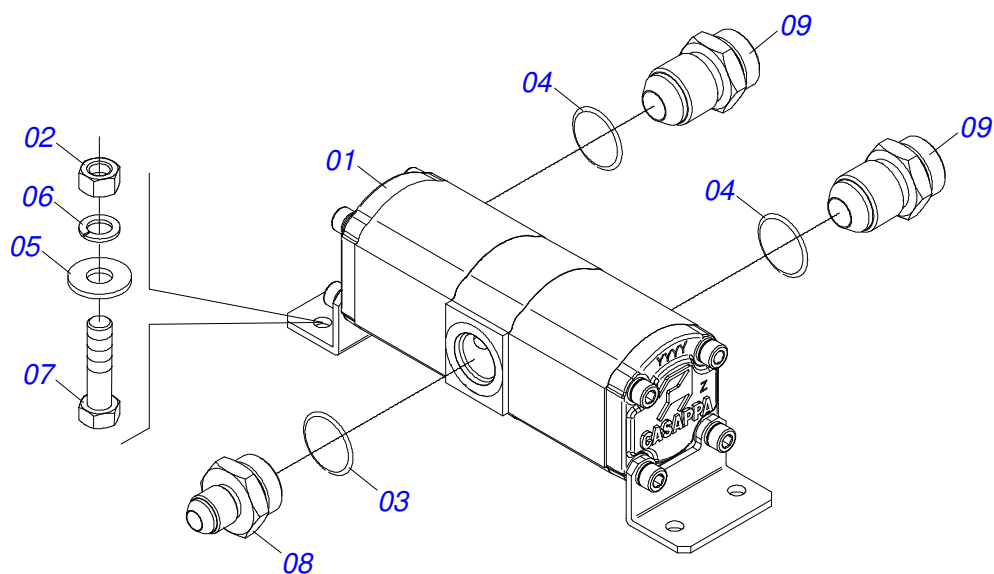


Item	Code	Description	See page	QT
001	0503018628	BLOCK FLOW DIVIDING		01
002	0503010026	3/8" NUT		04
003	0503013467	2123 29,82X2,62 O'RING		01
004	0503010045	O'RING		02
005	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
006	0503010025	3/8 SPRING WASHER		04
007	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
008	0581019535	UNF NIPPLE		01
009	0511010111	7/8" NIPPLE		02

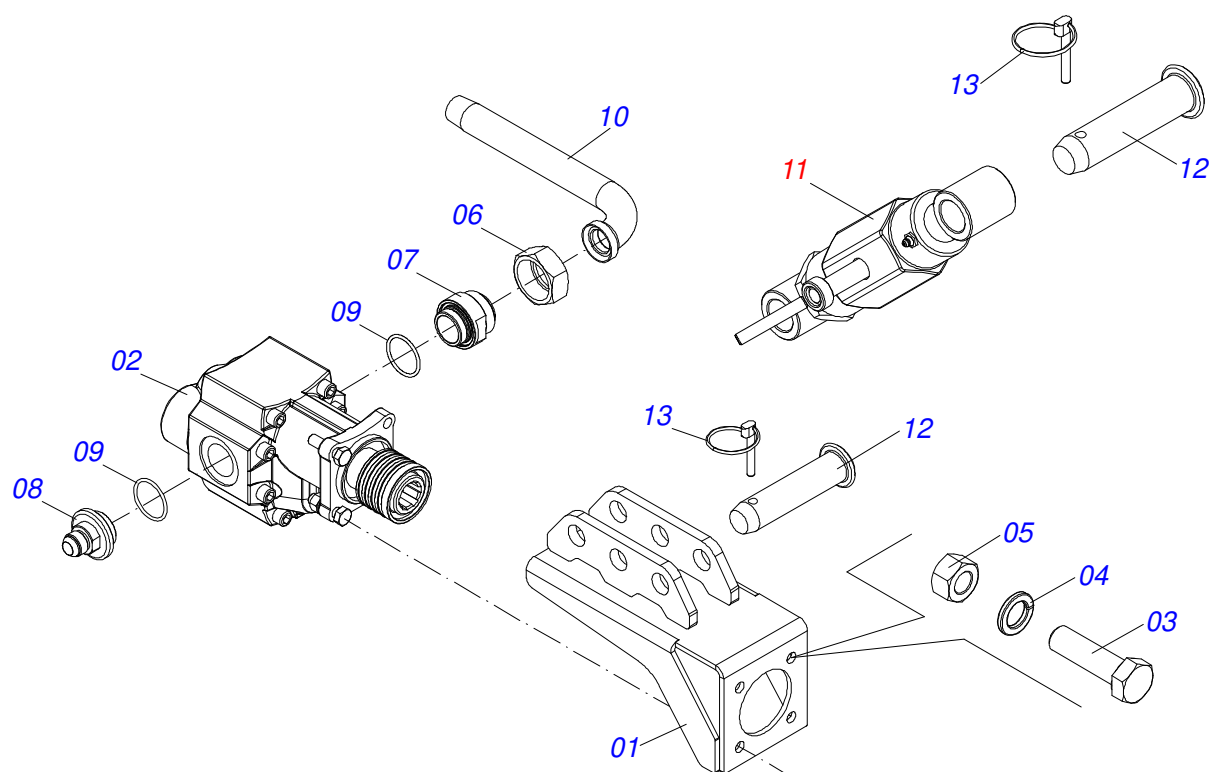


Item	Code	Description	See page	QT
01	0521064275	SUPPORT PUMP HYDRAULIC	01	
02	0503061979	HYDRAULIC PUMP	01	
03	0503011082	C1/2" X 1.3/4" SCREW	04	
04	0503010019	1/2" SPRING WASHER	04	
05	0503010060	1/2 UNC G.5 ZN HEX NUT	04	
06	0501016309	2" 1X 2.5/16" NUT	01	
07	0571016803	NIPLE 1.1/4 BSP X 2 UNC	01	
08	0571016794	NIPLE 1.1/6 UNC X 1.1/4 BSP	01	
09	0503013917	O`RING 2-224	02	
10	0511062042	TANK OUTER TUBE	01	
11	0511055824	TURNBUCKLE	01	
12	0521810577	COUPLING SHAFT	02	
13	0503030085	LOCK PIN	02	

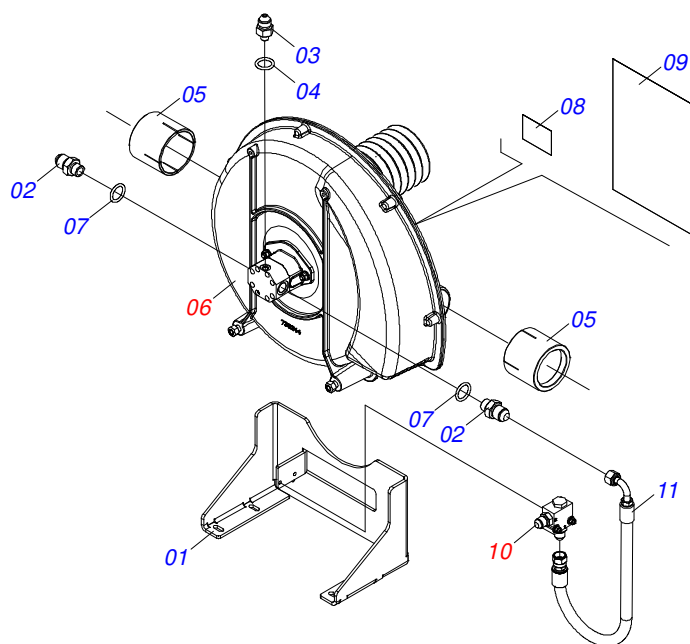


Item	Code	Description	See page	QT
001	0581019893	BODY SUPPORT TURBINE		01
002	0501011460	7/8 NF REDUCTION NIPPLE		02
003	0503034385	NIPPLE 7/16 UNF X UNF JIC		01
004	0503010392	2-046 N 3006 9B O'RING		01
005	0581012096	ROUND SLEEVE		02
006	0521050154	PRECISION PLANTING TURBINE WITH HOLE	65	01
007	0503010190	2-114 N 3006-9B O'RING		02
008	0503031426	ADHESIVE LABEL ATTENTION TURBINE		01
009	0503031087	ADHESIVE LABEL		01
010	0521052970	ASSEMBLY ANTI-CAVITATION VALVE	66	01
011	0501081235	1/2 X 650 TR- TC HOSE		01

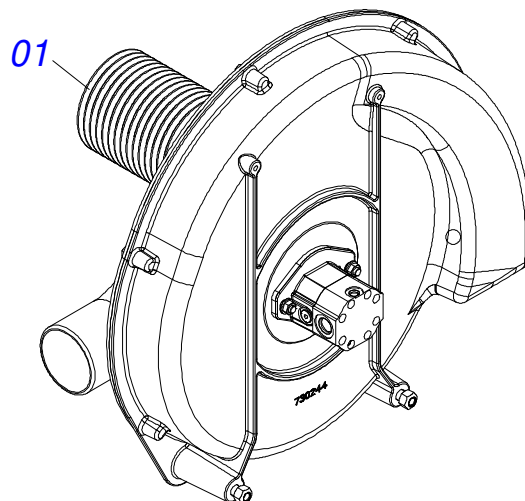


Item	Code	Description	See page	QT
01	0503062627	HYDRAULIC TURBINE ASSY		01

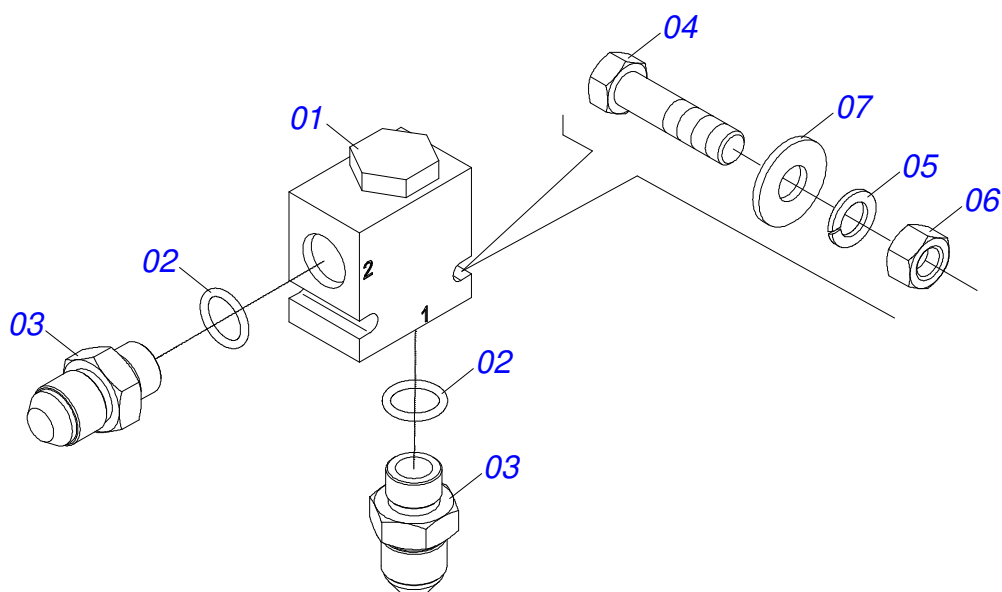

Item	Code	Description	See page	QT
001	0503015420	CV10208TN5 ANTI-CAVITATION VALVE		01
002	0503010190	2-114 N 3006-9B O'RING		02
003	0501011460	7/8 NF REDUCTION NIPPLE		02
004	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
005	0503010143	1/4" SPRING WASHER		02
006	0503010144	1/4" NUT		02
007	0503010305	FLAT WASHER		02

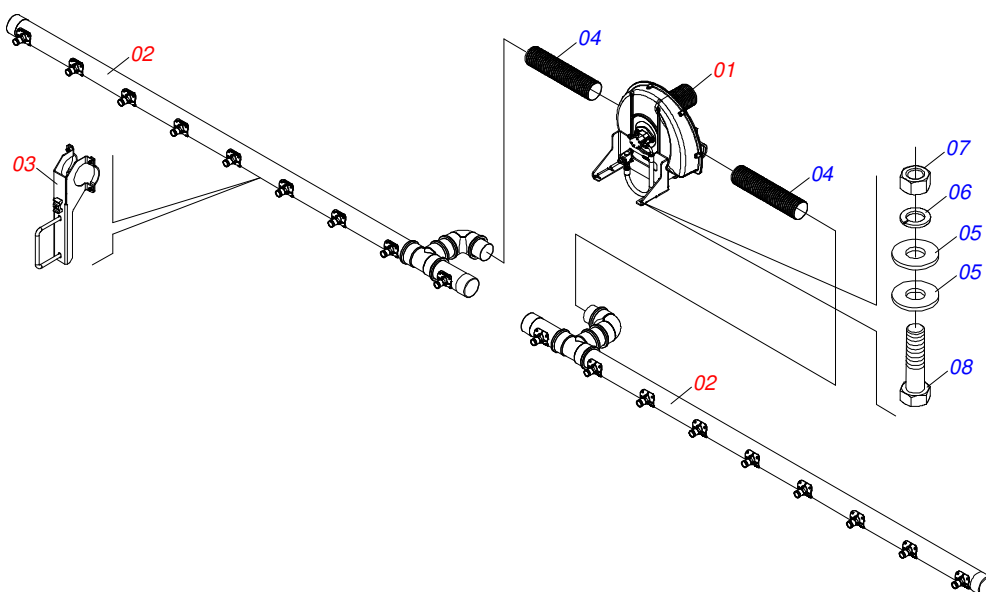


Item	Code	Description	See page	QT
001	0521055460	HIDRAULIC TURBINE	64	01
002	0521055458	DISTRIBUTOR VACUUM	68	02
003	0521055455	SUPPORT TUBE AR	69	06
004	0581011440	AIR CONDUCTOR		02
005	0501013518	FLAT WASHER		08
006	0503010025	3/8 SPRING WASHER		04
007	0503010026	3/8" NUT		04
008	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04

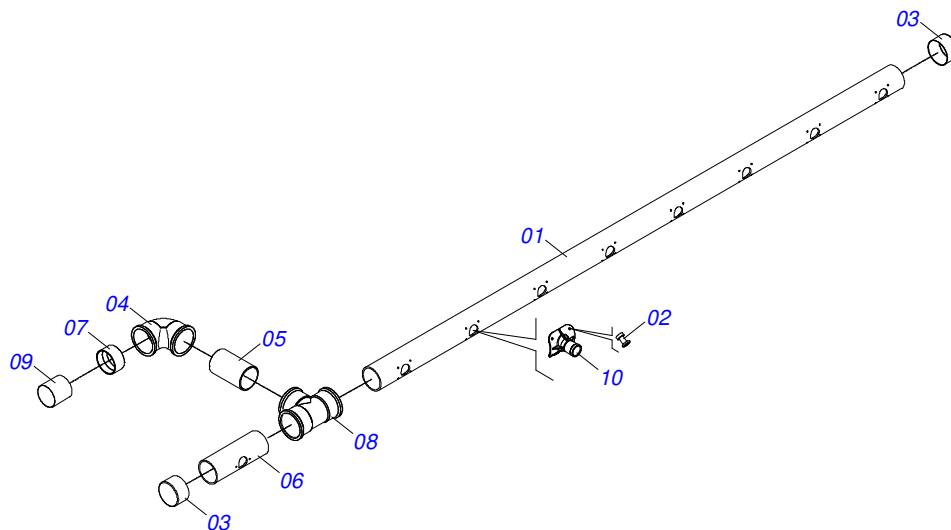


Item	Code	Description	See page	QT
001	0581019894	BODY DISTRIBUTOR VACUUM		01
002	0503012856	POP RIVET		36
003	0503012566	COVER KAP 110 YELLOW		02
004	0503017845	90 PVC KNEE		01
005	0571018559	WHITE PVC TUBE		01
006	0521015543	110 X 55 AIR DUCT		01
007	0581019895	SLEEVE		01
008	0503012567	T-JOIN FOR TUBE 110		01
009	0581012187	BODY DISTRIBUTOR AR		01
010	0503034812	SOCKET DISTRIBUTOR AR		09

SUPPORT TUBE AR


0521055455

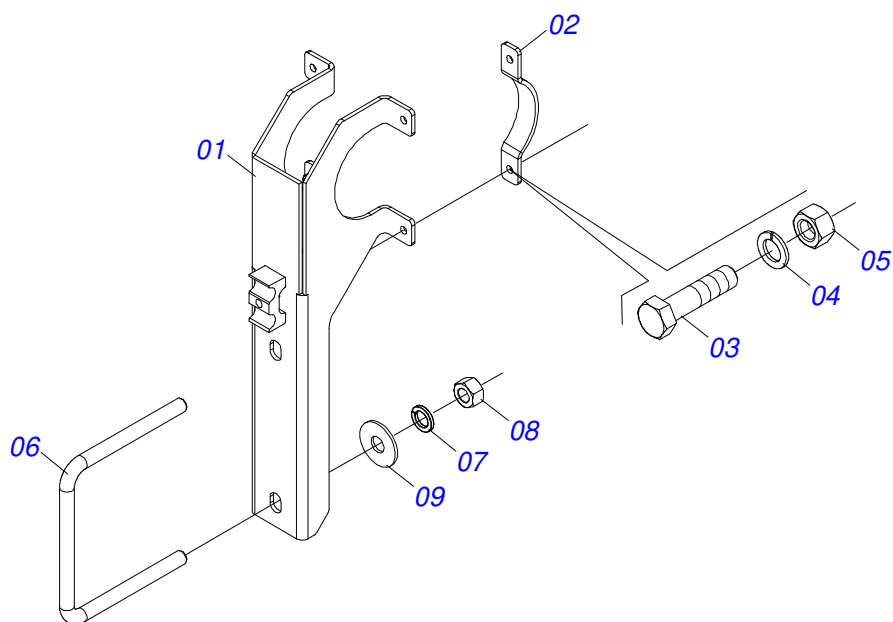


Item	Code	Description	See page	QT
001	0521069765	SUPPORT TUBE AR		01
002	0521018402	AIR CONDUCTOR CLAMP		02
003	0503010371	5/16" X 1" BOLT		04
004	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
005	0503010337	5/16" NUT		04
006	0521010718	5/8" U BOLT		01
007	0503010027	5/8 SPRING WASHER		02
008	0503010013	5/8 NUT		02
009	0501010453	FLAT WASHER		02

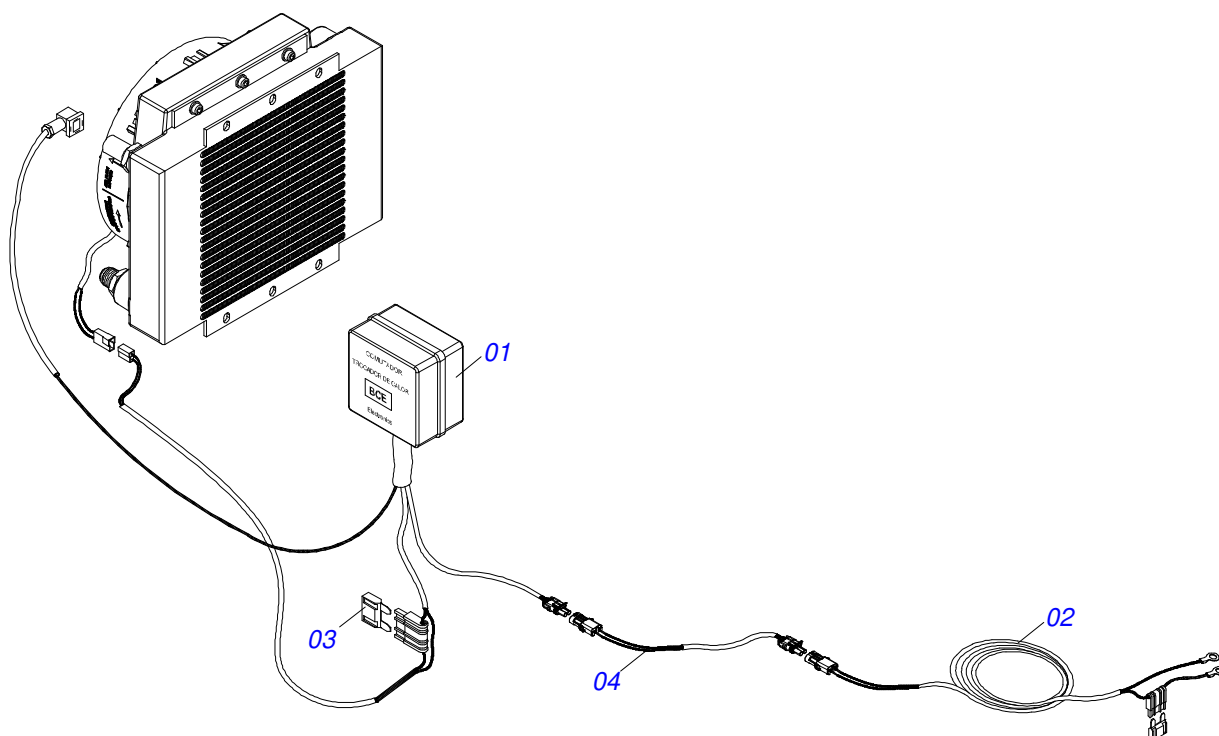

Item	Code	Description	See page	QT
01	0503016736	PANEL COMUTADOR		01
02	0503062593	SWITCH CABLE		01
03	0503018553	FUSE BLADE 20A		01
04	0503062594	IMPLEMENT SWITCH CABLE (EXTENSION)		01

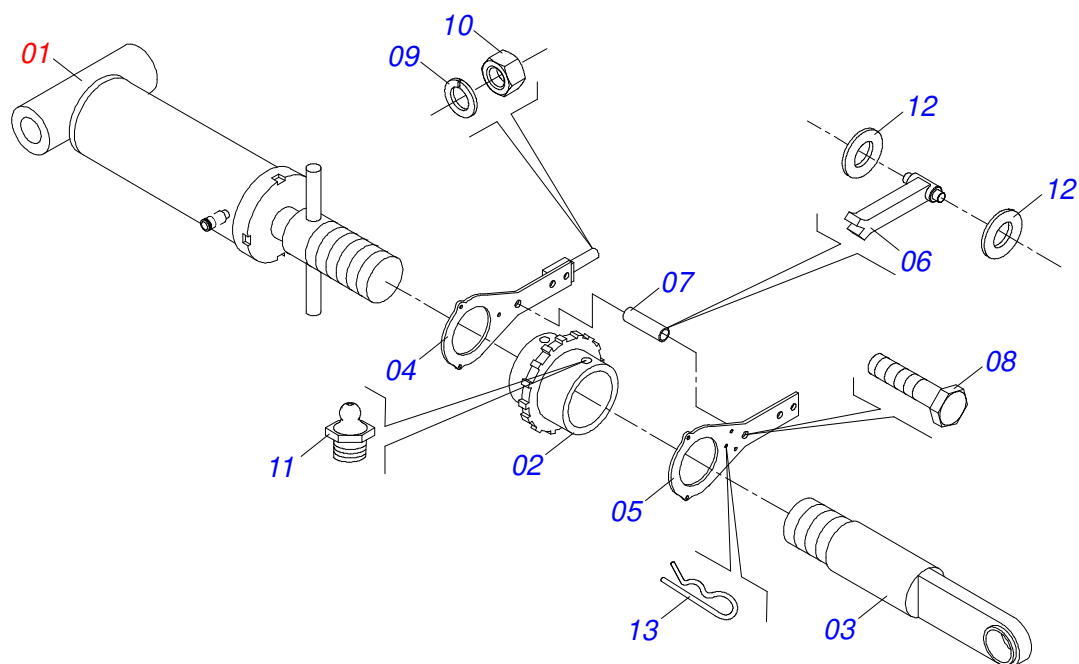


Item	Code	Description	See page	QT
01	0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER	72	01
02	0502011237	ESTABILIZER BODY		01
03	0511065467	LH SCREW ARBOR		01
04	0511061880	SIDE RIGHT RATCHET		01
05	0531010264	SIDE RATCHET		01
06	0511061881	RATCHET FOLLOWER		01
07	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
08	0503011179	3/8" X 2-1/4" BOLT		05
09	0503010025	3/8 SPRING WASHER		05
10	0503010026	3/8" NUT		05
11	0503010002	1800 GREASE FITTING		02
12	0521018517	FLAT WASHER		02
13	0503030012	HITCH PIN CLIP		01

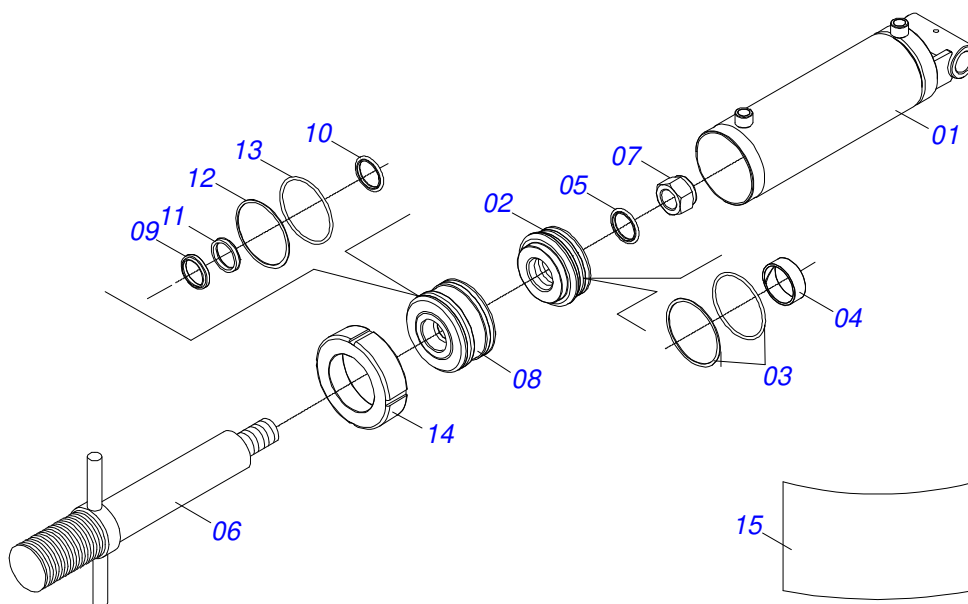


Item	Code	Description	See page	07
01	0511064908	4.5" X 25.4" CYLINDER CASE		01
02	0502011221	2.0" X 4.5" PISTON		01
03	0503011890	3750-3750 GASKET		02
04	0503011891	W2-4500-500 RING G.E		01
05	0503010345	2-218 N 3006-9B O'RING		01
06	0511064909	2" X 14.4" TURNBUCLE		01
07	0503010817	1.1/4" SELF LOCKING NUT		01
08	0502011220	2" X 4.5" RING SUPPORT		01
09	0503010952	W2-2250-500 RING		01
10	0503010991	1870-2000-375-B GASKET		01
11	0503010039	D-2000 SCRAPER RING		01
12	0503011892	O' RING, 2-346 N 3006-9B		01
13	0503011893	BACK-UP RING, 8-346		01
14	0502011222	0.56" END CAP		01
15	0501032513	HYDRAULIC CYLINDER REPAIR KIT		01

TRACTOR HITCH


0511056255

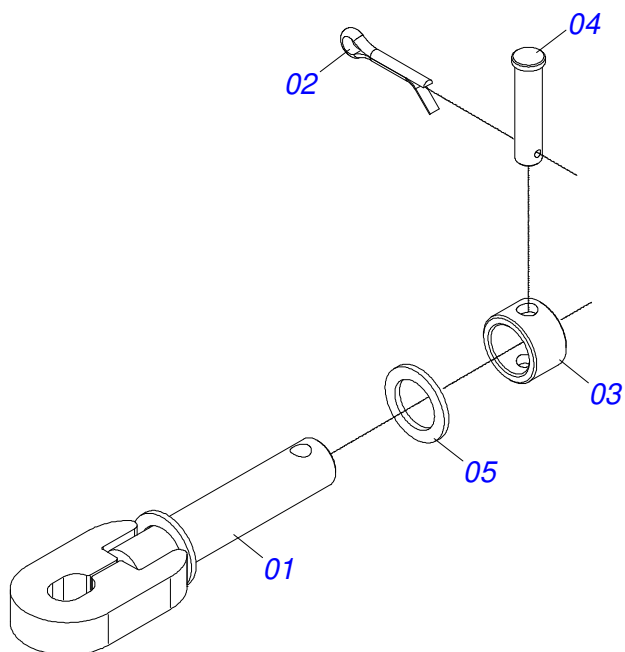


Item	Code	Description	See page	QT
001	0501069632	TRACTOR HITCH		01
002	0503010571	1/4" X 1.1/2" SPLIT PIN		01
003	0521010681	BUSHING COUPLING BODY		01
004	0521010639	COUPLING SHAFT		01
005	0501015875	FLAT WASHER		01

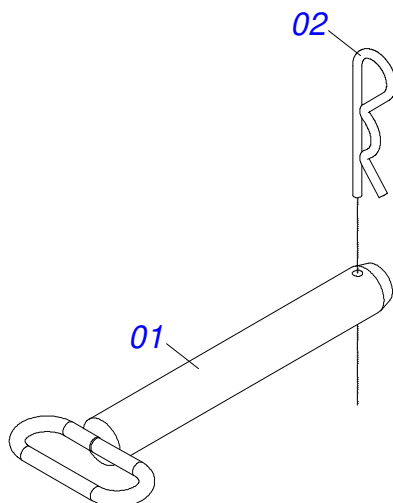

Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

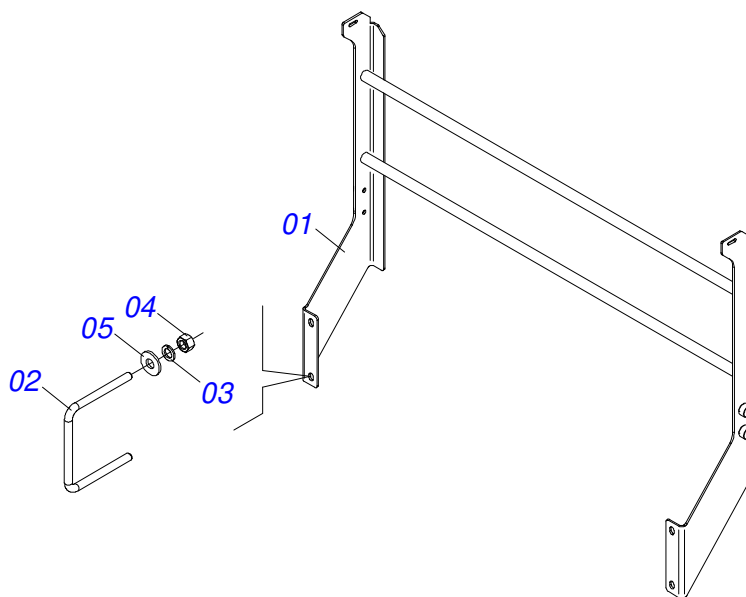

Item	Code	Description	See page	QT
001	0521069293	PROTECTION BODY		01
002	0521010718	5/8" U BOLT		02
003	0503010027	5/8 SPRING WASHER		04
004	0503010013	5/8 NUT		04
005	0501010453	FLAT WASHER		04

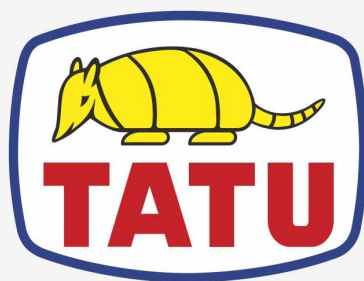

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

