

CORN HEAD

PMT 8050 - 16E500 - JOHN DEERE 9770

Code: 0501092605
Series: S-0118
Revision: 00
Date Revision: FEVEREIRO/2022

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0116011283	PMT 8050/16E500 JD 9770 ESPECIAL S-0118

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX

0521049426	FRAME ASSY	1
0521056020	SEMI MOUNTED FRAME	2
0521056013	HELICOIDAL DOUBLE STEP ASSY 8050	3
0521055834	HELICAL CONDUCTOR SIDE STRETCHER	4
0521052074	BEARING OSCILLATING	5
0521055829	ASSY TOP PROTECTION	6
0521055828	ASSY FIXER NOZZLE	7
0521055835	LEFT FIXER ASSY NOZZLE	8
0521055836	FIXER RIGHT ASSY BICO	9
0521056012	FRAME 8050 FATION REGULATOR ASSY	10
0521056014	8050 HELICAL CONDUCTOR SCRAPER ASSEMBLY	11
0521055907	ASSY LEFT LOCK	12
0521052070	LEFT LOCK	13
0521055908	ASSY RIGHT LOCK	14
0521052069	RIGHT LOCK	15
0521056010	LEFT TRANSMISSION PROTECTION COVER ASSEMBLY 8050	16
0521056009	TRANSMISSION PROTECTION COVER ASSEMBLY RIGHT 8050	17
0521055916	ASSEMBLY LEFT REAR COVER	18
0531053176	ASSEMBLY RIGHT REAR COVER	19
0521055831	ASSEMBLY LOWER LEFT PROTECTION COVER	20
0521055832	ASSEMBLY LOWER RIGHT PROTECTION COVER	21
0521055830	ASSY REST	22
0521055919	TRANSMISSION (LIM 500N)	23
0521052076	LEFT BEARING	24
0521052075	RIGHT BEARING	25
0521052456	ASSY CLOSING BEARING	26
0521052073	BEARING FIXED MOUNTED	27
0521052682	TORQUE LIMITER 500 NM	28
0521040683	CHAIN TENSIONER	29
0521055827	STRETCHER LIMITING TORQUE CURRENT	30
0521055833	TRANSMISSION SIDE PROTECTION	31
0521052077	SCREW COVER	32
0521040684	CHAIN TENSIONER	33
0521055958	CARDAN 8050 TRANSMISSION SHAFT	34
0511052825	PROTECTION SIDE FINISHING	35
0501059170	DRIVE SHAFT	36
0511052186	COUPLING (PMT JOHN DEERE 9570 STS ASSY)	37
0521052089	ASSY LINE	38
0521052645	ASSY CORN LINE	39
0521052079	TRANSMISSION BOX LINE WITH COLLECTOR ROLLER	40
0521052080	MOUNTED BOX	41
0511050109	BEARING FULL FRONTAL	42
0511050103	BEARING FULL TOP	43
0511050108	BEARING RIGHT SIDE	44
0511050107	BEARING LEFT SIDE	45
0521052641	STRETCHER LEFT ASSY CURRENT	46
0521052640	STRETCHER RIGHT ASSY CURRENT	47
0521052517	ARTICULATOR MACHETE	48
0521052646	FIXER BAR ADJUSTMENT MACHETE	49
0511057189	LEFT BOX DRIVER	50
0511057188	GRAGGER BODY	51
0521056011	EXTENDED PROTECTION ASSEMBLY (500)	52
0521056097	450 ASSY PROLONGER	53
0521055839	ASSY CARENAGE LINE SPACE 550 - 600	54
0521055838	FRONT PULLEY WITH SPACING 550-600	55




MARCHESAN

INDEX


0521052653	CARENAGE RIGHT SIDE ASSY		56
0521052084	CARENAGE LEFT SIDE ASSY		57
0511052093	SIDE DEVIATION ASSY		58
0511052142	MANUAL CANISTER ASSY		59
0521052662	(ALUMINUM) STICKERS ASSY		60
0521025680	BOX WITH COMPONENTS		61

FRAME ASSY

0521049426

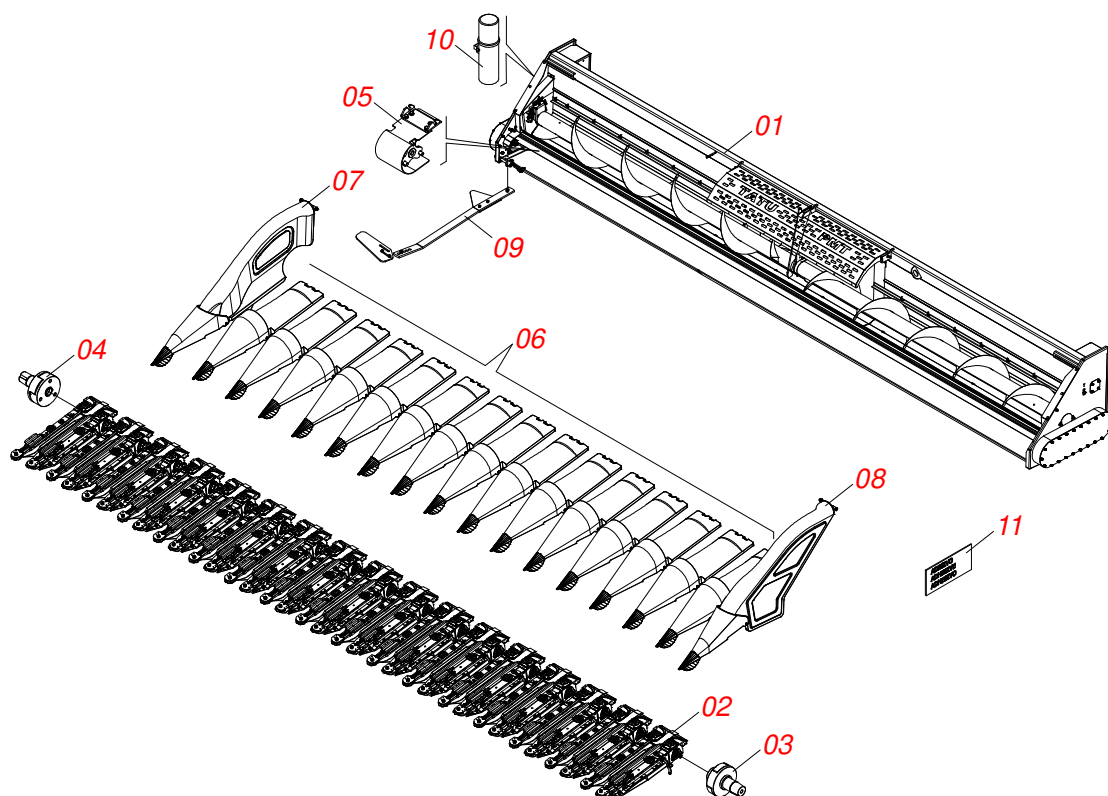

Item	Code	Description	See page	QT
01	0521056020	SEMI MOUNTED FRAME	2	01
02	0521052089	ASSY LINE	38	16
03	0511057189	LEFT BOX DRIVER	50	01
04	0511057188	GRAGGER BODY	51	01
05	0521056011	EXTENDED PROTECTION ASSEMBLY (500)	52	15
06	0521055839	ASSY CARENAGE LINE SPACE 550 - 600	54	15
07	0521052653	CARENAGE RIGHT SIDE ASSY	56	01
08	0521052084	CARENAGE LEFT SIDE ASSY	57	01
09	0511052093	SIDE DEVIATION ASSY	58	02
10	0511052142	MANUAL CANISTER ASSY	59	01
11	0521052662	(ALUMINUM) STICKERS ASSY	60	01

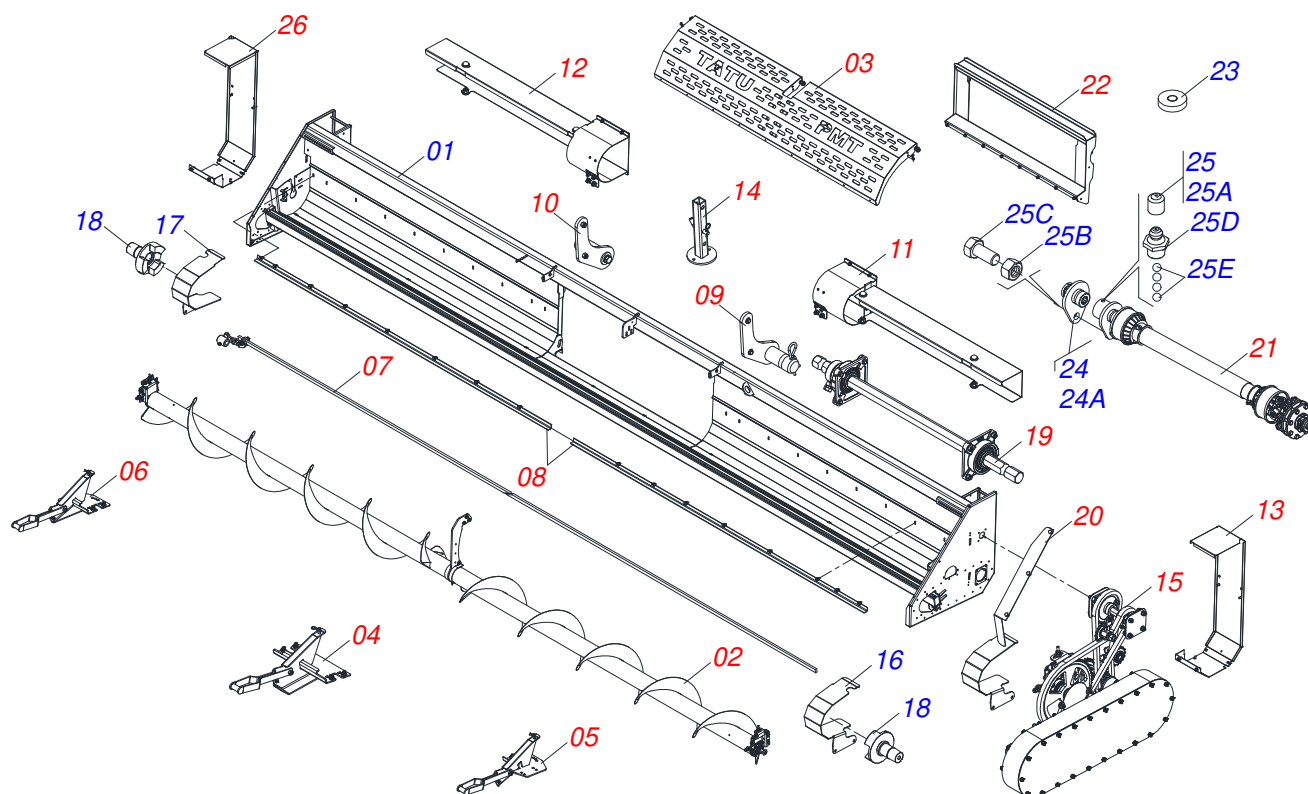


Item	Code	Description	See page	QT
01	0521068919	FRAME PMT 8050		01
02	0521056013	HELICOIDAL DOUBLE STEP ASSY 8050	3	01
03	0521055829	ASSY TOP PROTECTION	6	01
04	0521055828	ASSY FIXER NOZZLE	7	15
05	0521055835	LEFT FIXER ASSY NOZZLE	8	01
06	0521055836	FIXER RIGHT ASSY BICO	9	01
07	0521056012	FRAME 8050 FATION REGULATOR ASSY	10	01
08	0521056014	8050 HELICAL CONDUCTOR SCRAPER ASSEMBLY	11	01
09	0521055907	ASSY LEFT LOCK	12	01
10	0521055908	ASSY RIGHT LOCK	14	01
11	0521056010	LEFT TRANSMISSION PROTECTION COVER ASSEMBLY 8050	16	01
12	0521056009	TRANSMISSION PROTECTION COVER ASSEMBLY RIGHT 8050	17	01
13	0521055916	ASSEMBLY LEFT REAR COVER	18	01
14	0521055830	ASSY REST	22	04
15	0521055919	TRANSMISSION (LIM 500N)	23	02
16	0581015831	LEFT SIDE COUPLING PROTECTION 50		01
17	0581015832	RIGHT SIDE COUPLING PROTECTION 50		01
18	0521063685	50 LH SIDE FOLLOWER		02
19	0521055958	CARDAN 8050 TRANSMISSION SHAFT	34	02
20	0511052825	PROTECTION SIDE FINISHING	35	01
21	0501059170	DRIVE SHAFT	36	02
22	0511052186	COUPLING (PMT JOHN DEERE 9570 STS ASSY)	37	01
23	0503018629	PE 8 X 50 MM ADHESIVE TAPE		03
24	0501058861	POINT		02
24A	0503015372	TERMINAL STRIATED		02
25	0511047765	POINT KIT		02
25A	0503015373	COVER PROTECTION GREASE FITTING 5/16		01
25B	0503011841	M10 SELF ADJUSTING NUT		01
25C	0503015375	HEX SCREW M10 X 50		01
25D	0503015376	GREASE		01




SEMI MOUNTED FRAME

0521056020

Item	Code	Description	See page	QT
25E	0503015377	BALL BEARING 1/4		25
26	0531053176	ASSEMBLY RIGHT REAR COVER	19	01

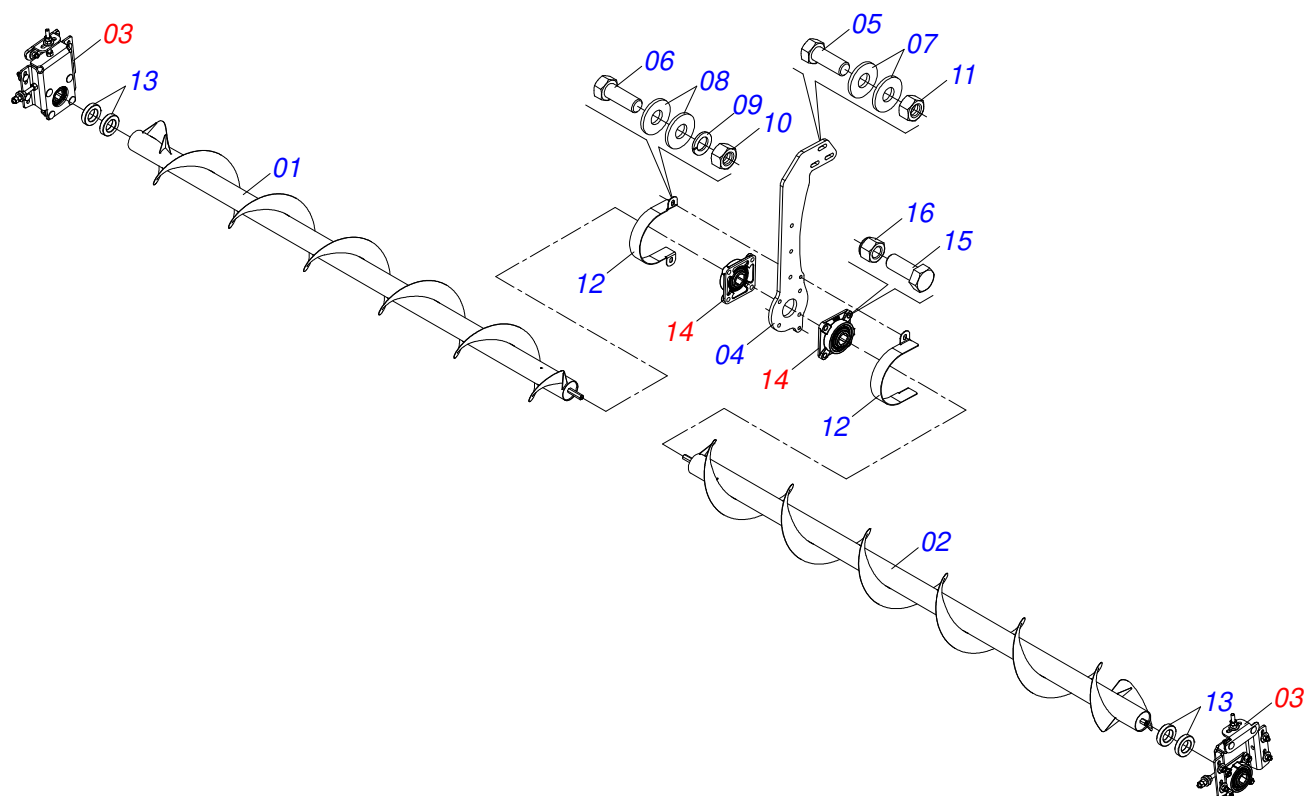


Item	Code	Description	See page	QT
01	0503062965	HELICAL CONDUCTOR 3987 LEFT		01
02	0503062966	CONDUCTOR HELICAL 3987 RIGHT		01
03	0521055834	HELICAL CONDUCTOR SIDE STRETCHER	4	02
04	0581015835	HELICAL CONDUCTOR SUPPORT		01
05	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		03
06	0503010849	3/8" X 1-1/2" BOLT		02
07	0511017302	FLAT WASHER		06
08	0501010984	FLAT WASHER		04
09	0503010025	3/8" SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0503010589	1/2" UNC SELF ADJUSTING NUT		03
12	0581015826	CENTRAL PROTECTION HELICAL CONDUCTOR 6		02
13	0561012760	CONDUTOR SUPPORT SLEEVE		04
14	0521052074	BEARING OSCILLATING	5	02
15	0503010905	1/2" X 2-1/4" BOLT		04
16	0503010589	1/2" UNC SELF ADJUSTING NUT		04

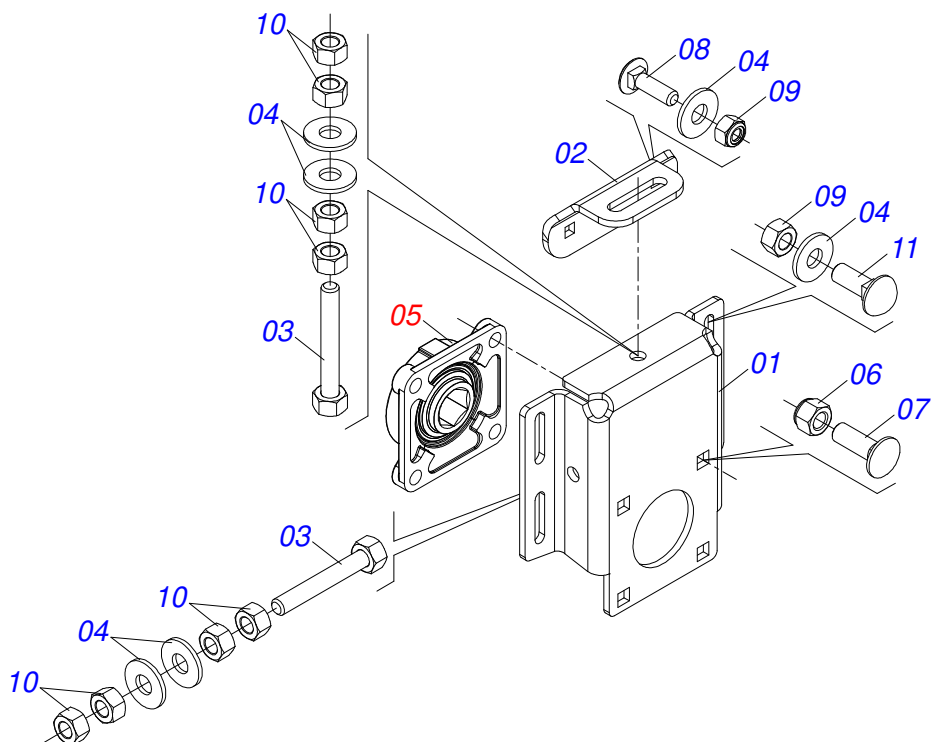


Item	Code	Description	See page	QT
01	0581015813	STRETCH SUPPORT BODY		01
02	0581015821	BEARING REGULATOR CONDUCTOR HELICOIDAL		01
03	0521060237	CHAIN TENSIONER JACK		02
04	0511017302	FLAT WASHER		06
05	0521052074	BEARING OSCILLATING	5	01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		04
07	0503014378	1/2" X 1-1/2" BOLT		04
08	0503015328	M10 X 1,5 X 35 BOLT		02
09	0503011841	M10 SELF ADJUSTING NUT		02
10	0503010060	1/2" NUT		08
11	0521052083	M10 SCREW MOUNTED		04

BEARING OSCILLATING

0521052074

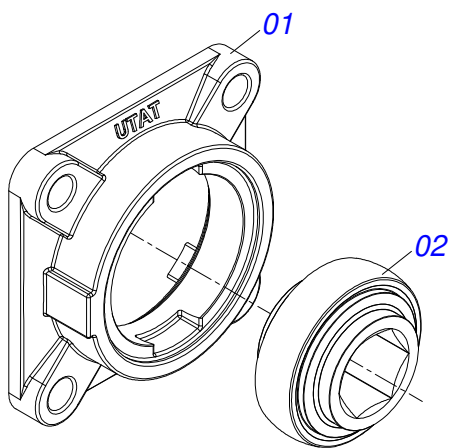


Item	Code	Description	See page	QT
01	0502012590	BEARING		01
02	0503015144	BEARING		01

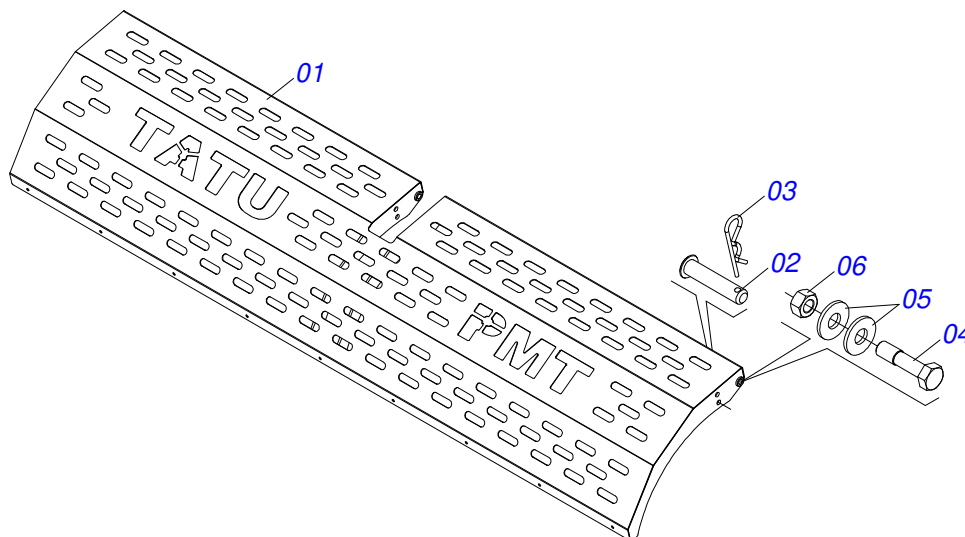

Item	Code	Description	See page	QT
01	0521068306	DEFLECTOR		01
02	0521010549	COUPLING SHAFT		02
03	0503030168	HAIR PIN		02
04	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
05	0511017302	FLAT WASHER		04
06	0503011336	1/2" HEX SELF ADJUSTING NUT		02

ASSY FIXER NOZZLE


0521055828

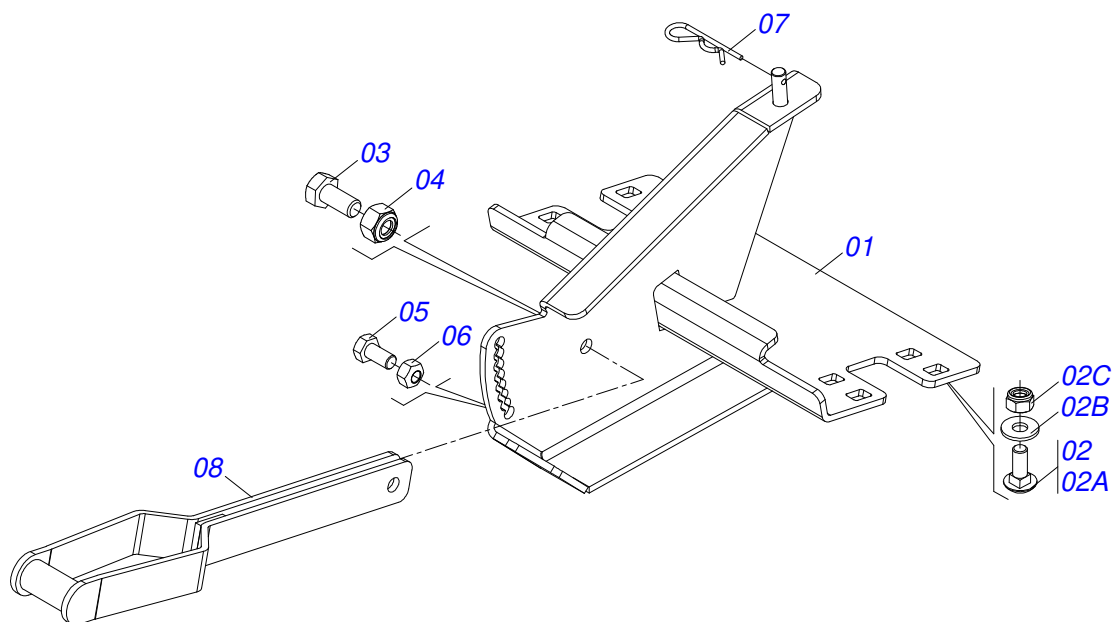


Item	Code	Description	See page	QT
01	0521063847	550/600 POINT FIXER		01
02	0521052081	SCREW MOUNTED		04
02A	0501011643	3/8 X 1" BOLT		04
02B	0501013518	FLAT WASHER		04
02C	0503013357	3/8" SELF-ADJUSTING NUT		04
03	0503015112	M10 X 1,5 X 30 BOLT		01
04	0503011841	M10 SELF ADJUSTING NUT		01
05	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		01
06	0503013816	5/16" LOCKNUT		01
07	0503030168	HAIR PIN		01
08	0521060198	POINT SUPPORT		01

LEFT FIXER ASSY NOZZLE


0521055835

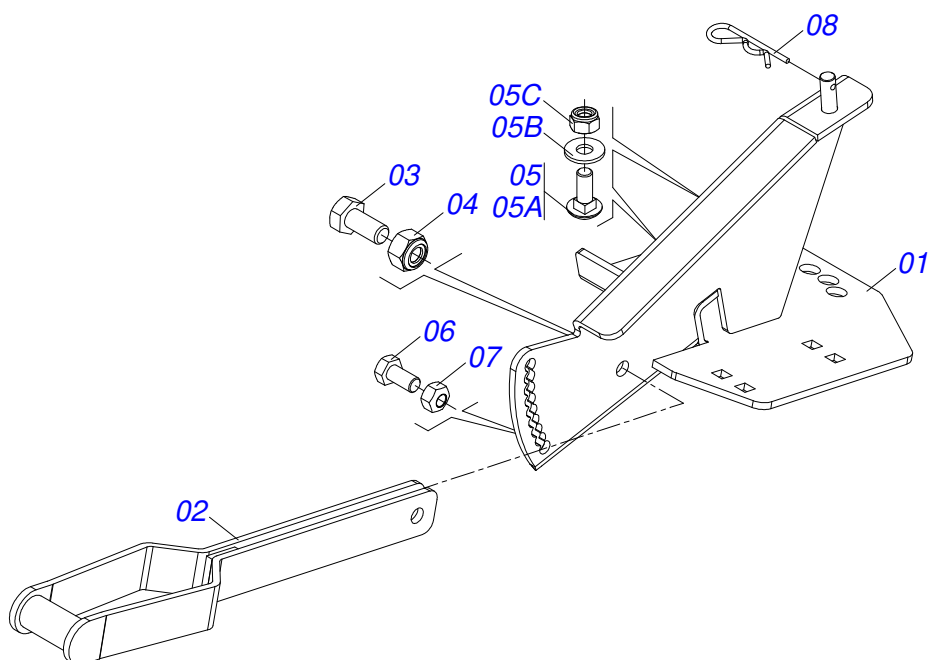


Item	Code	Description	See page	QT
01	0521060234	LH POINT FIXER		01
02	0521060198	POINT SUPPORT		01
03	0503015112	M10 X 1,5 X 30 BOLT		01
04	0503011841	M10 SELF ADJUSTING NUT		01
05	0521052081	SCREW MOUNTED		02
05A	0501011643	3/8 X 1" BOLT		02
05B	0501013518	FLAT WASHER		02
05C	0503013357	3/8" SELF-ADJUSTING NUT		02
06	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		01
07	0503013816	5/16" LOCKNUT		01
08	0503030168	HAIR PIN		01

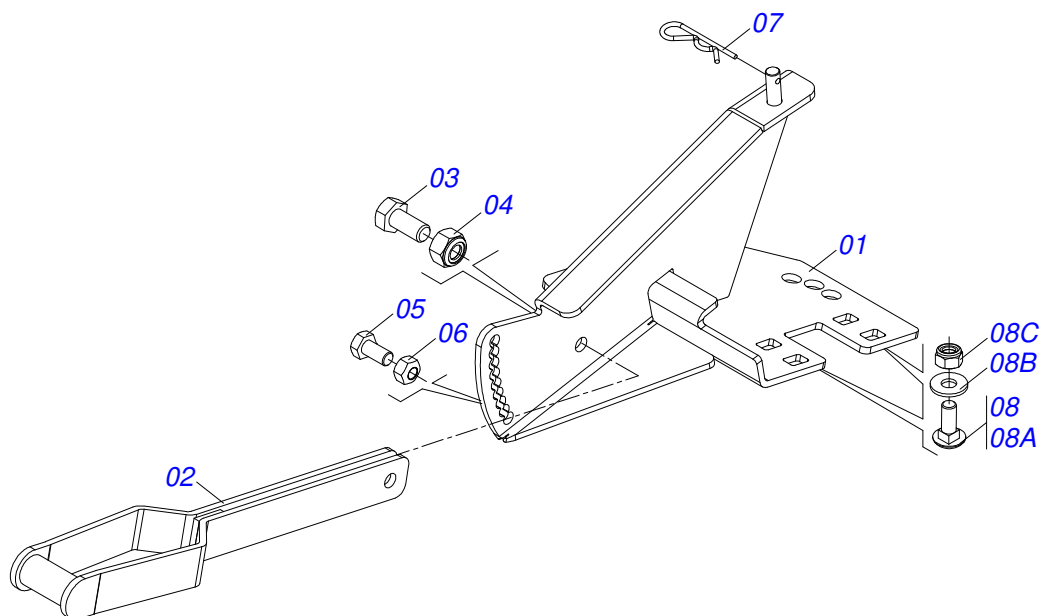

Item	Code	Description	See page	QT
01	0521060233	RIGHT POINT FIXER		01
02	0521060198	POINT SUPPORT		01
03	0503015112	M10 X 1,5 X 30 BOLT		01
04	0503011841	M10 SELF ADJUSTING NUT		01
05	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		01
06	0503013816	5/16" LOCKNUT		01
07	0503030168	HAIR PIN		01
08	0521052081	SCREW MOUNTED		02
08A	0501011643	3/8 X 1"BOLT		02
08B	0501013518	FLAT WASHER		02
08C	0503013357	3/8" SELF-ADJUSTING NUT		02

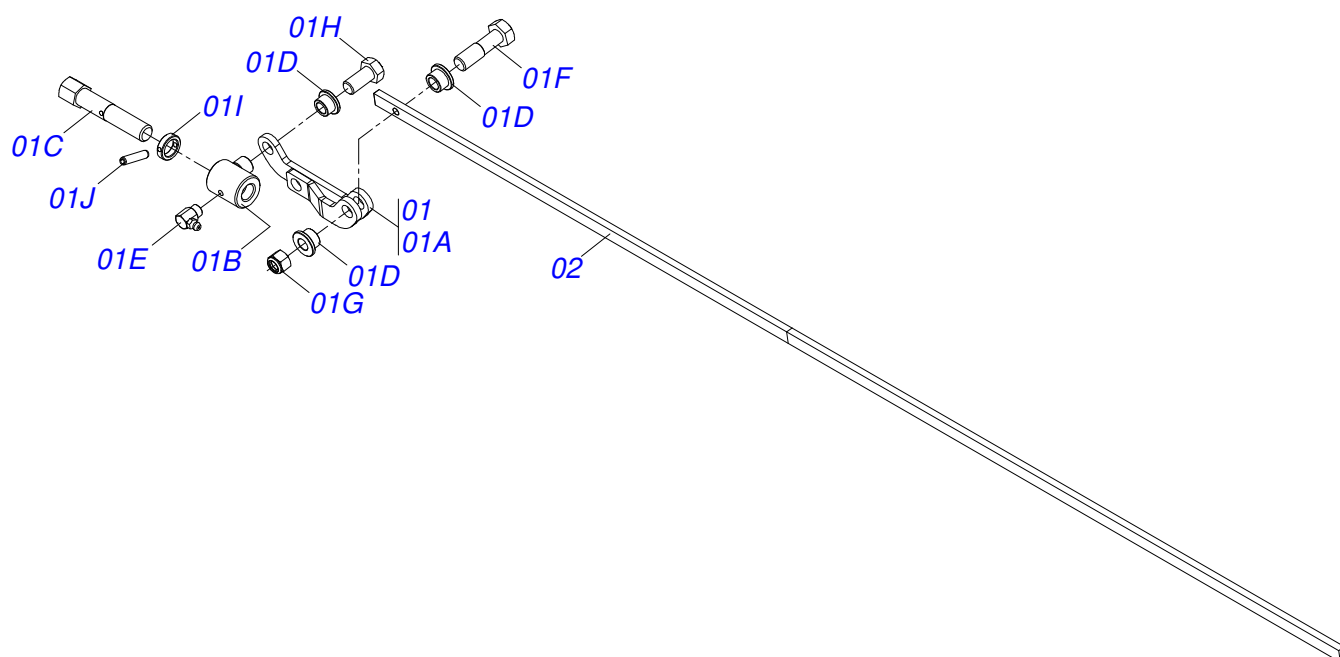


Item	Code	Description	See page	QT
01	0521055912	MACHETE REGULATOR ASSY		01
01A	0521068304	FIXER GUIDE BAR		01
01B	0521068305	ROCKER BAR GUIDE		01
01C	0581015815	STRETCH SPINDLE BAR		01
01D	0561017155	SLEEVE		03
01E	0503010004	1890 GREASE FITTING		01
01F	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		01
01G	0503010589	1/2" UNC SELF ADJUSTING NUT		01
01H	0503010920	1/2" X 1.1/2" BOLT		01
01I	0581015816	RING LOCKS AXLE		01
01J	0503010292	0.2" X 1.6" SPRING PIN		01
02	0521069857	BAR 25,40 X 12,70 X 7700 PMT 16/500		01

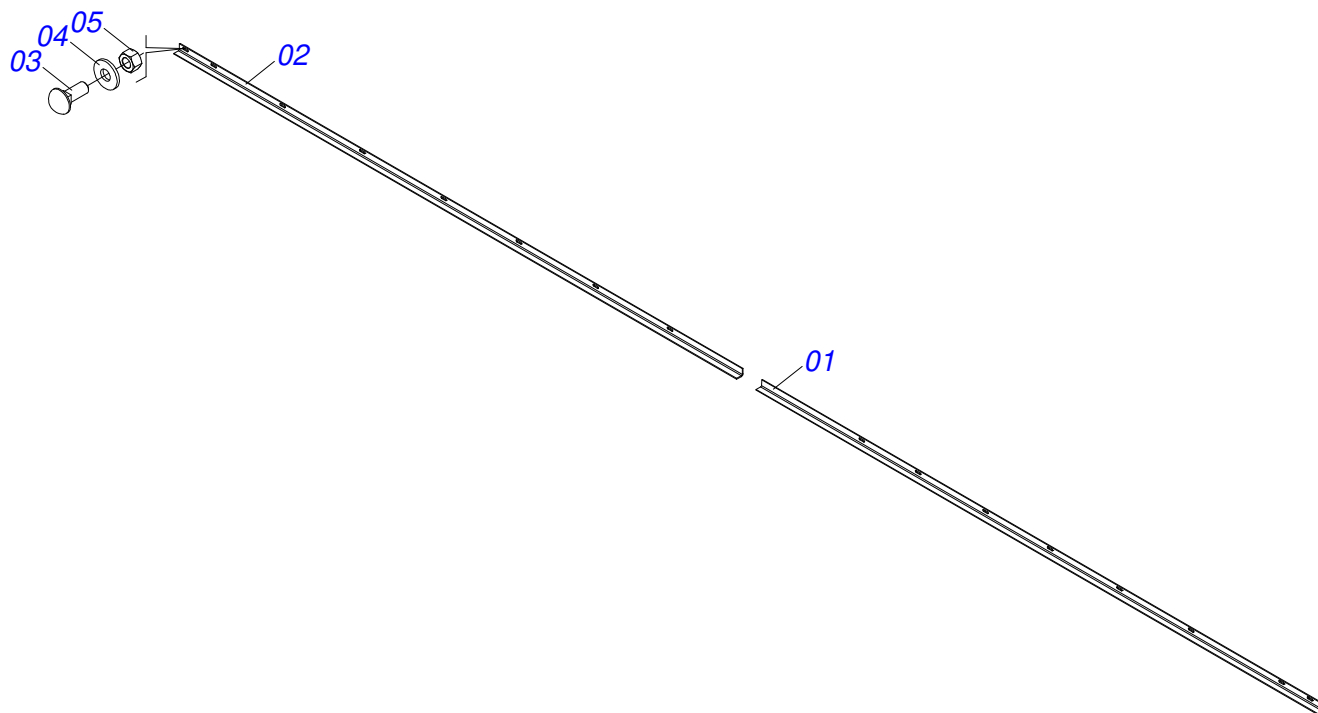

Item	Code	Description	See page	QT
01	0591010061	LEFT SCRAPER		01
02	0591010062	RIGHT SCRAPER		01
03	0501011643	3/8 X 1"BOLT		16
04	0501010984	FLAT WASHER		16
05	0503013357	3/8" SELF-ADJUSTING NUT		16

ASSY LEFT LOCK


0521055907

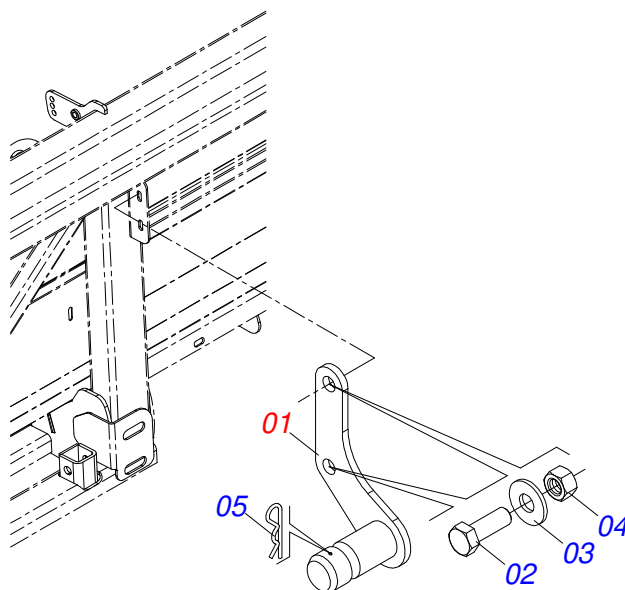

Item	Code	Description	See page	QT
01	0521052070	LEFT LOCK	13	01
02	0503014007	1/2" X 1-1/4" BOLT		02
03	0511017302	FLAT WASHER		02
04	0503011336	1/2" HEX SELF ADJUSTING NUT		02
05	0503030285	HAIR PIN		01

LEFT LOCK


0521052070

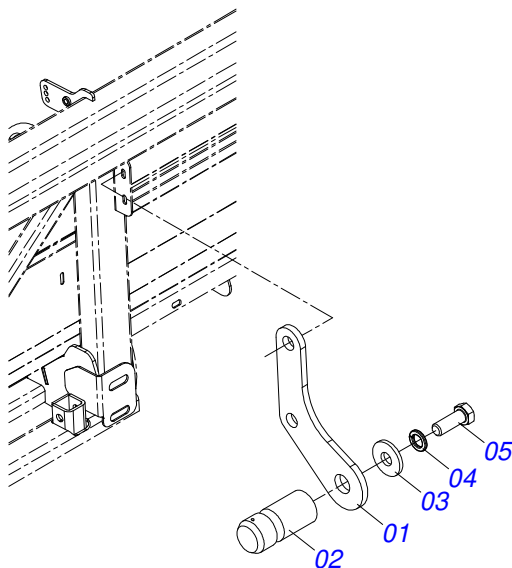

Item	Code	Description	See page	QT
01	0581015798	LATCH EAR		01
02	0581015800	EAR FIXING SHAFT		01
03	0501010984	FLAT WASHER		01
04	0503010025	3/8" SPRING WASHER		01
05	0503010237	3/8" X 1" BOLT		01

ASSY RIGHT LOCK


0521055908

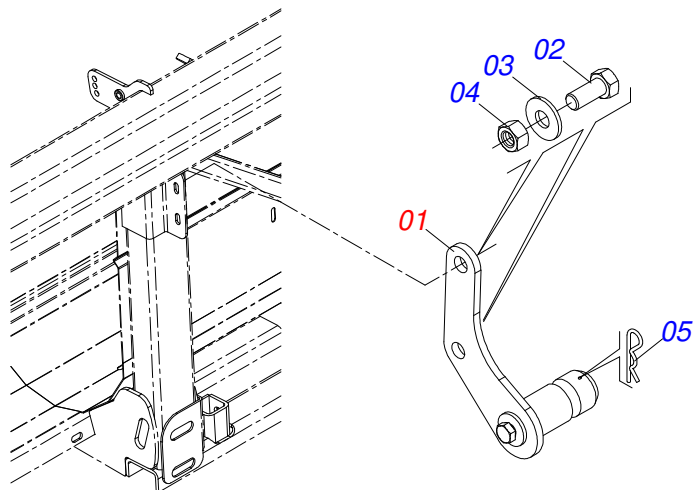


Item	Code	Description	See page	QT
01	0521052069	RIGHT LOCK	15	01
02	0503014007	1/2" X 1-1/4" BOLT		02
03	0511017302	FLAT WASHER		02
04	0503011336	1/2" HEX SELF ADJUSTING NUT		02
05	0503030285	HAIR PIN		01

RIGHT LOCK


0521052069

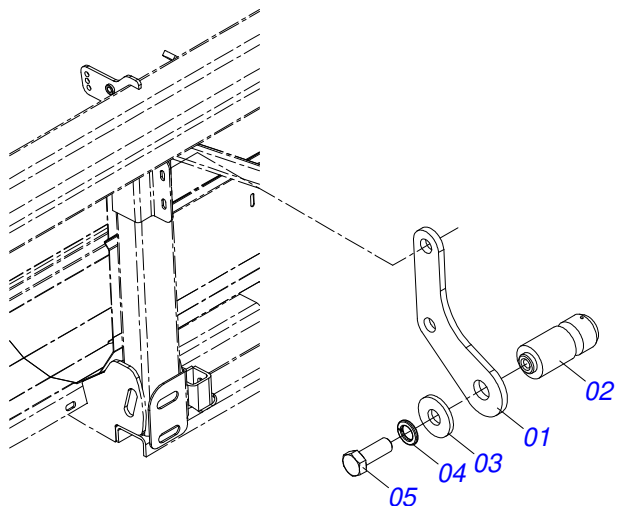

Item	Code	Description	See page	QT
01	0581015798	LATCH EAR		01
02	0581015800	EAR FIXING SHAFT		01
03	0501010984	FLAT WASHER		01
04	0503010025	3/8" SPRING WASHER		01
05	0503010237	3/8" X 1" BOLT		01

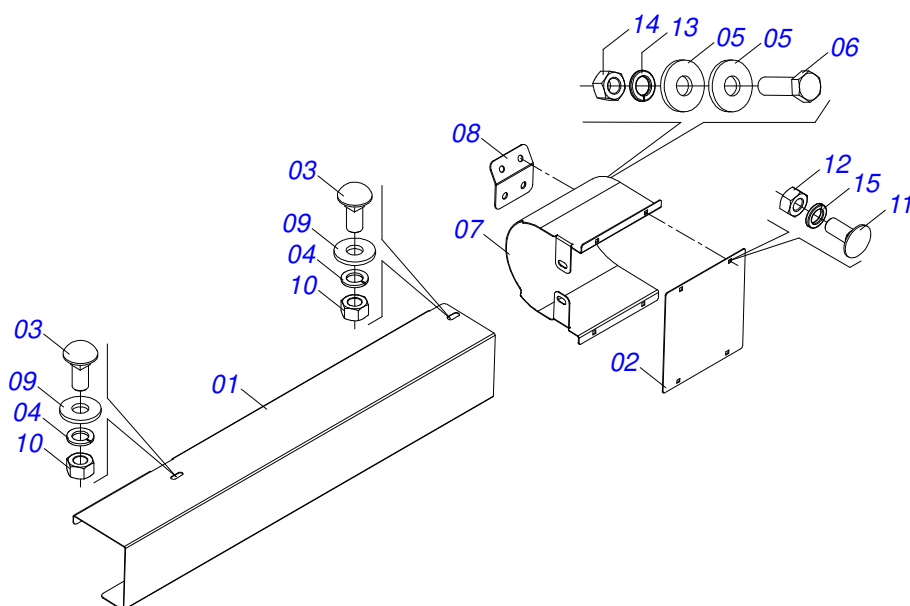


Item	Code	Description	See page	QT
01	0591010063	MOTOR SHAFT PROTECTION COVER LEFT SIDE		01
02	0561014869	PROTECTIVE COVER		01
03	0503010172	M10 X 1,5 X 25 BOLT		04
04	0503013542	M10 SPRING WASHER		04
05	0501010984	FLAT WASHER		08
06	0503010237	3/8" X 1" BOLT		04
07	0561014871	PROTECTION CARDAN PMT S-06009		01
08	0591010188	SUPPORT LOCKS CARDAN AXLE PROTECTION		01
09	0501010984	FLAT WASHER		04
10	0503011841	M10 SELF ADJUSTING NUT		04
11	0503011952	5/16" X 3/4" BOLT		04
12	0503010337	5/16" NUT		04
13	0503010025	3/8" SPRING WASHER		04
14	0503010026	3/8" NUT		04
15	0503010179	5/16" ZN SPRING WASHER		04

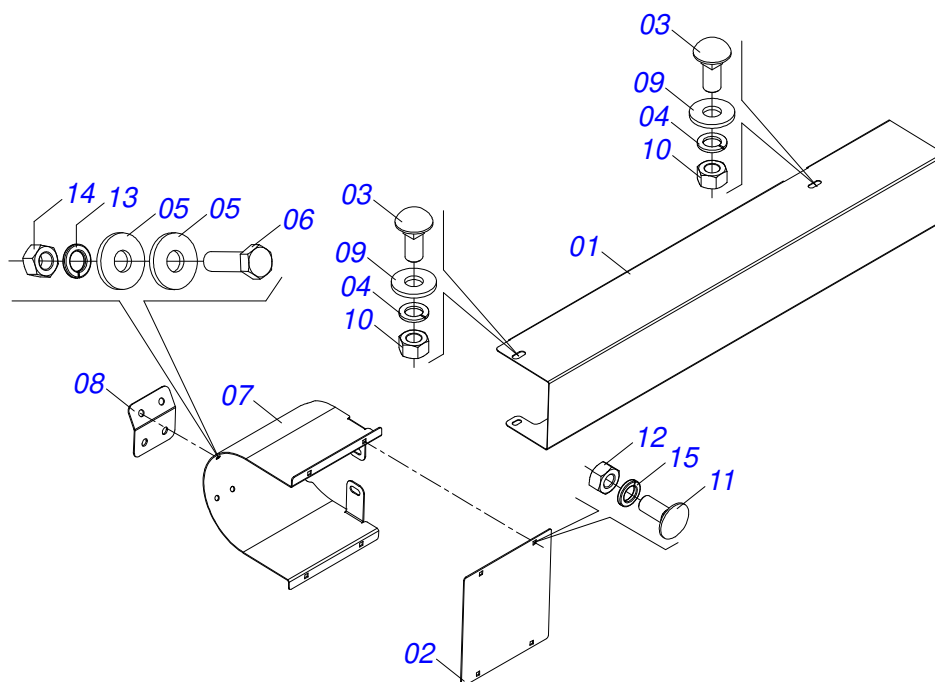


Item	Code	Description	See page	QT
01	0591010064	COVER PROTECTION SHAFT ENGINE RIGHT SIDE		01
02	0561014869	PROTECTIVE COVER		01
03	0503010172	M10 X 1,5 X 25 BOLT		04
04	0503013542	M10 SPRING WASHER		04
05	0501010984	FLAT WASHER		08
06	0503010237	3/8" X 1" BOLT		04
07	0561014871	PROTECTION CARDAN PMT S-06009		01
08	0591010188	SUPPORT LOCKS CARDAN AXLE PROTECTION		01
09	0501010984	FLAT WASHER		04
10	0503011841	M10 SELF ADJUSTING NUT		04
11	0503011952	5/16" X 3/4" BOLT		04
12	0503010337	5/16" NUT		04
13	0503010025	3/8" SPRING WASHER		04
14	0503010026	3/8" NUT		04
15	0503010179	5/16" ZN SPRING WASHER		04

ASSEMBLY LEFT REAR COVER


0521055916

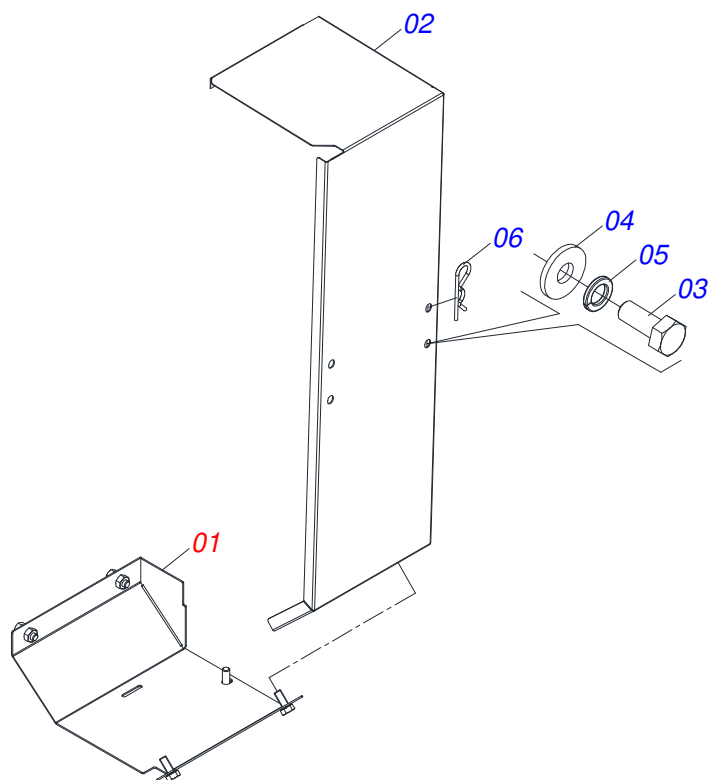


Item	Code	Description	See page	QT
01	0521055831	ASSEMBLY LOWER LEFT PROTECTION COVER	20	01
02	0581015824	LEFT REAR COVER		01
03	0503010172	M10 X 1,5 X 25 BOLT		02
04	0501010984	FLAT WASHER		02
05	0503015075	M10 SPRING WASHER		02
06	0503030168	HAIR PIN		02

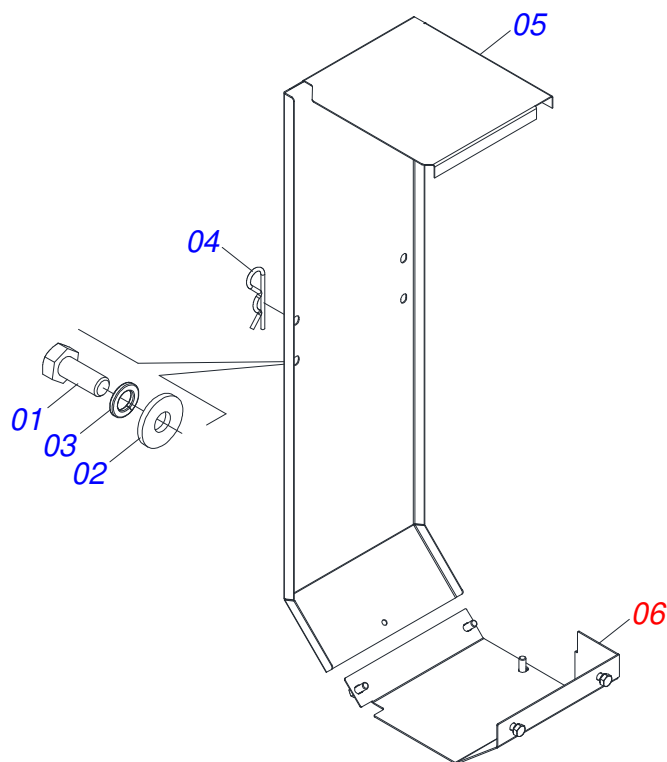


Item	Code	Description	See page	QT
01	0503010172	M10 X 1,5 X 25 BOLT		02
02	0501010984	FLAT WASHER		02
03	0503015075	M10 SPRING WASHER		02
04	0503030168	HAIR PIN		02
05	0581015825	RIGHT REAR COVER		01
06	0521055832	ASSEMBLY LOWER RIGHT PROTECTION COVER	21	01

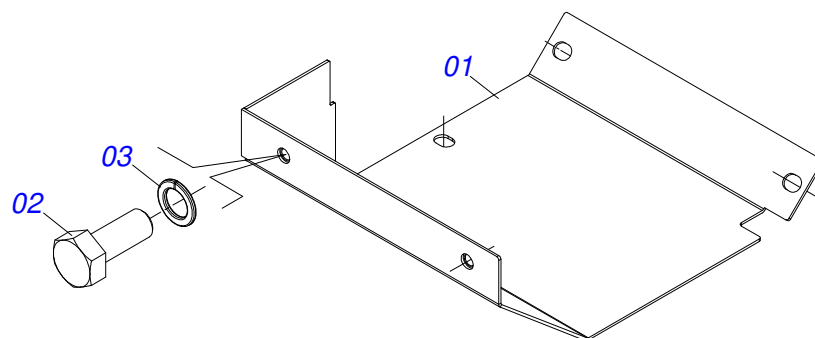


Item	Code	Description	See page	QT
01	0521069858	LEFT PROTECTION COVER		01
02	0503010172	M10 X 1,5 X 25 BOLT		05
03	0503013542	M10 SPRING WASHER		05

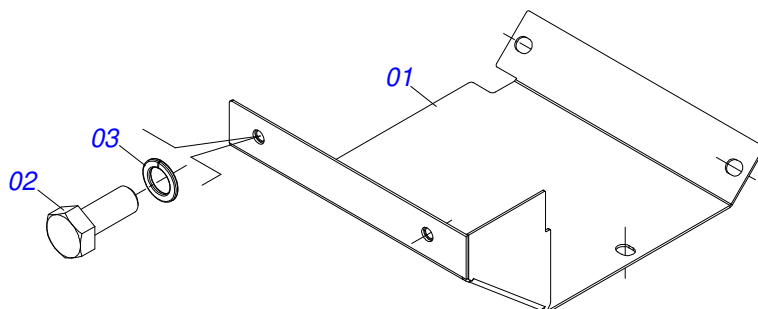

Item	Code	Description	See page	QT
01	0521069859	RIGHT PROTECTION COVER		01
02	0503010172	M10 X 1,5 X 25 BOLT		05
03	0503013542	M10 SPRING WASHER		05

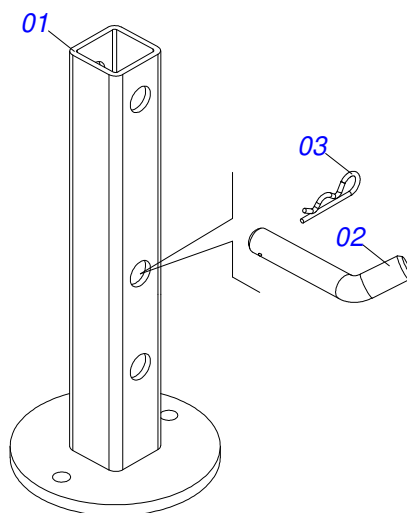

Item	Code	Description	See page	QT
01	0521061014	PLOUGH SUPPORT		01
02	0501011075	PIN		01
03	0503030285	HAIR PIN		01

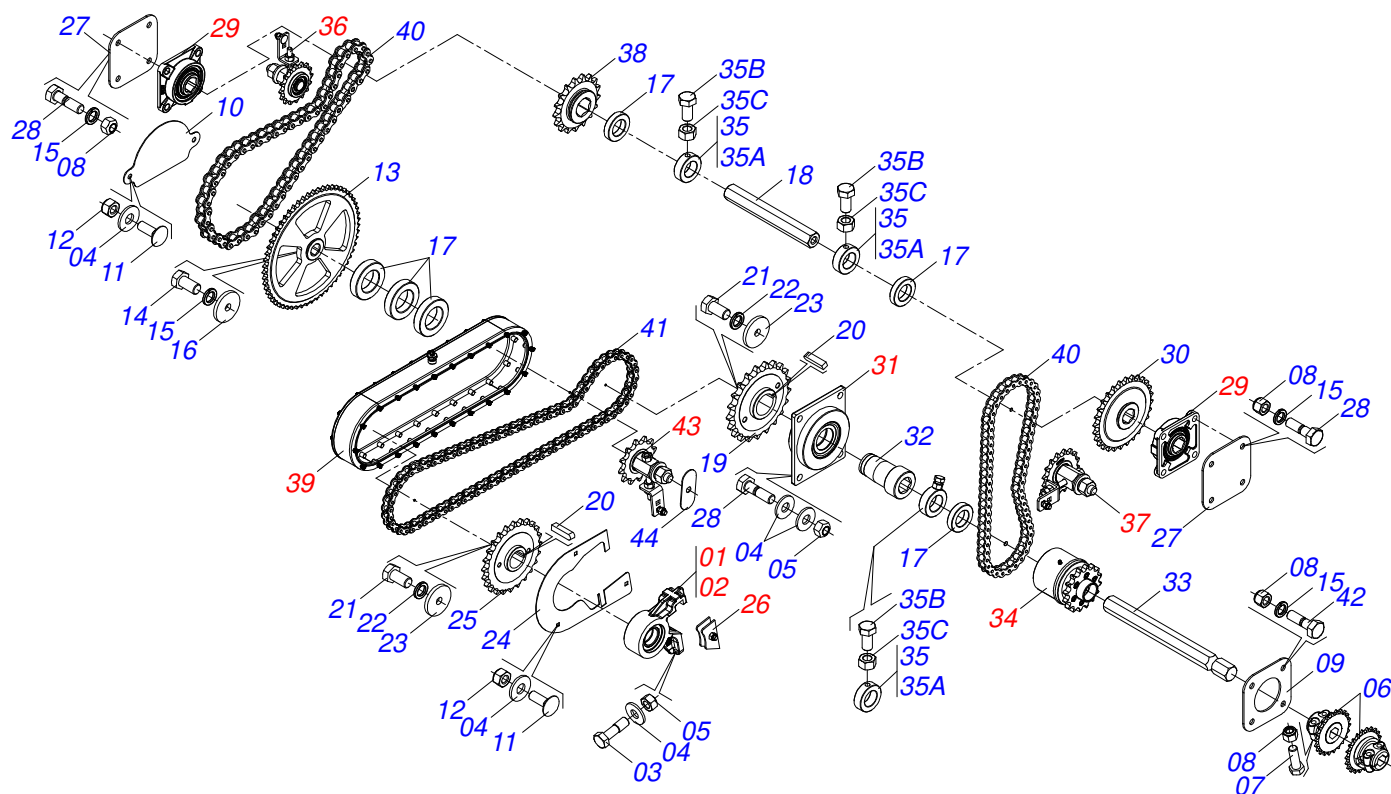


Item	Code	Description	See page	QT
01	0521052076	LEFT BEARING	24	01
02	0521052075	RIGHT BEARING	25	01
03	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
04	0511017302	FLAT WASHER		23
05	0503011336	1/2" HEX SELF ADJUSTING NUT		06
06	0521069805	TERMINAL (HEX 1.1 / 4) WITH 22Z GEAR		02
07	0503010479	BOLT		04
08	0503010589	1/2" UNC SELF ADJUSTING NUT		16
09	0561011114	BEARING SUPPORT		01
10	0581015817	COVER		01
11	0503015327	M10 X 1,5 X 30 BOLT		05
12	0503011841	M10 SELF ADJUSTING NUT		05
13	0521063365	GEAR 59Z PASSO 3/4		01
14	0503010428	M12 X 1,75 X30 BOLT		01
15	0503010019	1/2" SPRING WASHER		02
16	0561010960	FLAT WASHER		01
17	0561012760	CONDUTOR SUPPORT SLEEVE		02
18	0581015823	HEX SHAFT 31.75 X 250		01
19	0521061098	21Z GEAR		01
20	0561014481	9,53 X 41 KEYWAY SQUARE		02
21	0503011167	M16 X 2 X 30 BOLT		02
22	0503010027	5/8" SPRING WASHER		02
23	0561013946	FLAT WASHER		02
24	0581015814	TRANSMISSION PROTECTION		01
25	0521060937	24Z GEAR		01
26	0521052456	ASSY CLOSING BEARING	26	01
27	0561014068	BEARING COVER		02
28	0501019219	1/2" X 1-3/4" BOLT		04
29	0521052074	BEARING OSCILLATING	5	03
30	0521064127	GEAR 28Z (P.3/4)		01
31	0521052073	BEARING FIXED MOUNTED	27	01

Item	Code	Description	See page	QT
32	0521061443	CONICAL GEAR AXLE		01
33	0591010058	HEX SHAFT 31.75 X 400		01
34	0521052682	TORQUE LIMITER 500 NM	28	01
35	0521052072	SHAFT LOCK		03
35A	0561017251	SPRING GUIDE BUSHING LOCK		03
35B	0501010161	1/2" X 1.1/4" BOLT		03
35C	0503010060	1/2" NUT		03
36	0521040683	CHAIN TENSIONER	29	01
37	0521055827	STRETCHER LIMITING TORQUE CURRENT	30	01
38	0521064128	GEAR 26Z (P.3 / 4)		01
39	0521055833	TRANSMISSION SIDE PROTECTION	31	01
40	0503019462	CURRENT 60-1 X 97 ELOS + EM		02
41	0503019461	CURRENT 80-1 X 83 ELOS + EM		01
42	0503011082	C1/2" X 1.3/4" SCREW		16
43	0521040684	CHAIN TENSIONER	33	01
44	0581016531	SIDE STRETCHER COVER		01

LEFT BEARING


0521052076

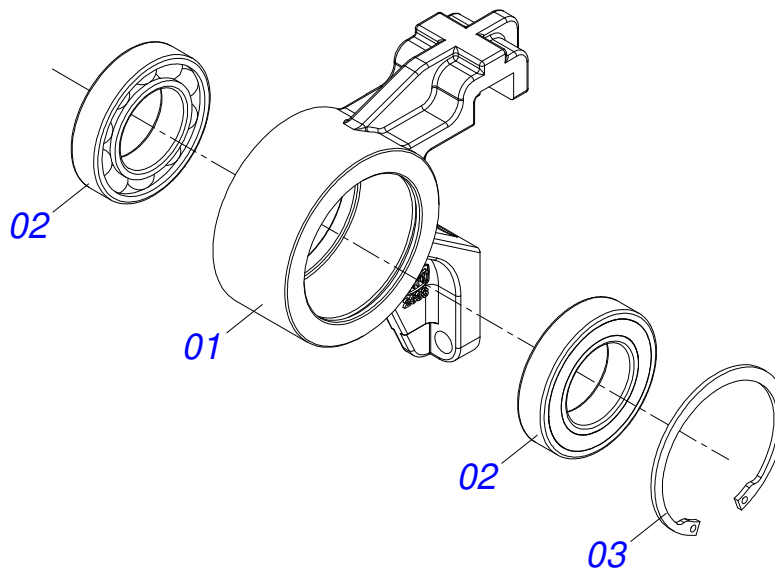

Item	Code	Description	See page	QT
01	0502012638	BEARING LEFT SIDE		01
02	0503010914	6210-RS ROLLER BEARING		02
03	0503011190	SEAL RING		01

RIGHT BEARING


0521052075

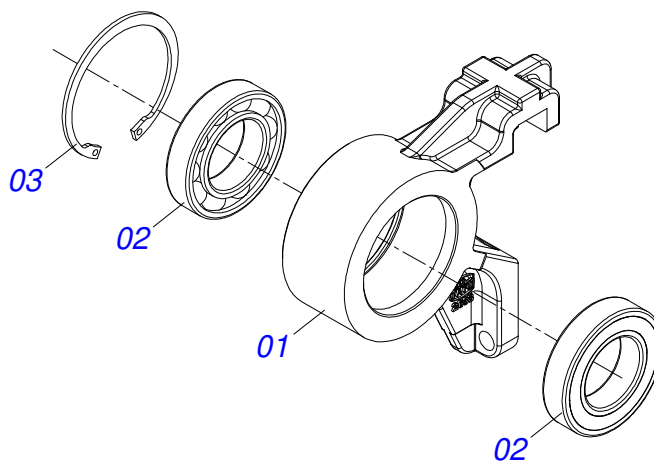


Item	Code	Description	See page	QT
01	0502012662	BEARING LEFT SIDE		01
02	0503010914	6210-RS ROLLER BEARING		02
03	0503011190	SEAL RING		01

ASSY CLOSING BEARING


0521052456

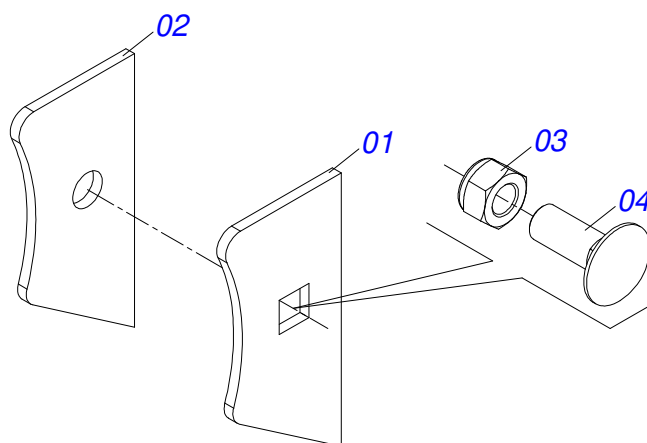

Item	Code	Description	See page	QT
01	0581016533	EXTERNAL BEARING CLOSURE		01
02	0581016532	BEARING INTERNAL CLOSURE		01
03	0503013357	3/8" SELF-ADJUSTING NUT		01
04	0501010942	3/8" X 1-1/4" BOLT		01

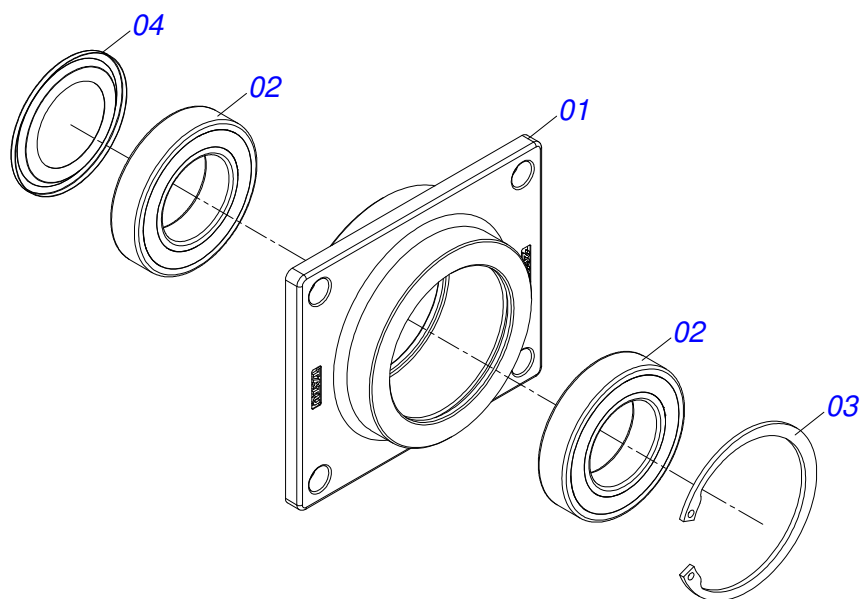


Item	Code	Description	See page	QT
01	0502012625	BEARING SIDE		01
02	0503015551	BEARING LM		02
03	0503011190	SEAL RING		01
04	0503019292	RING		01

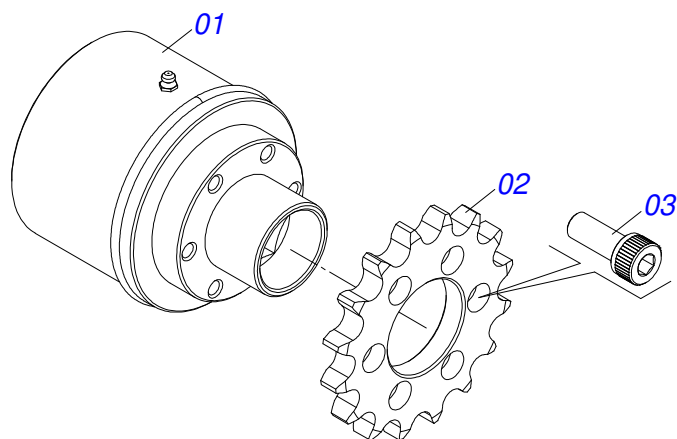


Item	Code	Description	See page	QT
01	0503016420	TORQUE LIMITER 500		01
02	0561011856	WHEEL TOOTH 16Z PASSO 3/4		01
03	0503015162	M 8 X 1,25 X 20 BOLT		06

CHAIN TENSIONER


0521040683

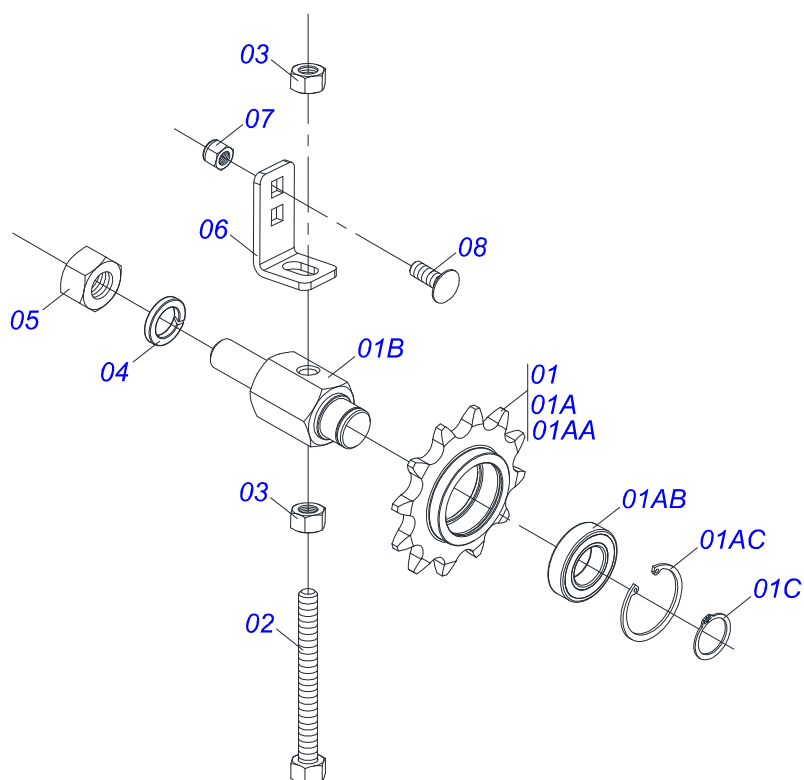

Item	Code	Description	See page	QT
01	0511051679	CHAIN TENSIONER		01
01A	0501110688	GEAR 16Z		01
01AA	0502012706	16Z GEAR		01
01AB	0503011797	BEARING 6005 DDU		01
01AC	0503011105	SEAL RING		01
01B	0571010224	AXLE BODY TENSIONER		01
01C	0503010406	501025 CLAMPING RING (FOR AXLE)		01
02	0521060237	CHAIN TENSIONER JACK		01
03	0503010060	1/2" NUT		02
04	0503010023	3/4" SPRING WASHER		01
05	0503010014	3/4" NUT		01
06	0561014066	CHAIN TENSIONER SUPPORT		01
07	0503013357	3/8" SELF-ADJUSTING NUT		01
08	0501011643	3/8 X 1" BOLT		01

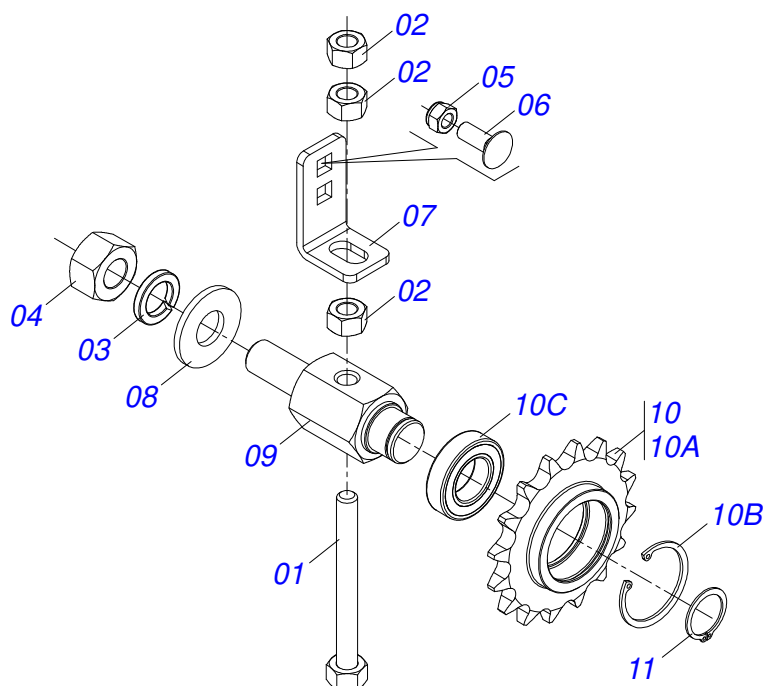


Item	Code	Description	See page	QT
01	0521060237	CHAIN TENSIONER JACK		01
02	0503010060	1/2" NUT		03
03	0503010023	3/4" SPRING WASHER		01
04	0503010014	3/4" NUT		01
05	0503013357	3/8" SELF-ADJUSTING NUT		01
06	0501011643	3/8 X 1"BOLT		01
07	0561014066	CHAIN TENSIONER SUPPORT		01
08	0501010322	FLAT WASHER		01
09	0571010224	AXLE BODY TENSIONER		01
10	0501110688	GEAR 16Z		01
10A	0502012706	16Z GEAR		01
10B	0503011105	SEAL RING		01
10C	0503011797	BEARING 6005 DDU		01
11	0503010406	501025 CLAMPING RING (FOR AXLE)		01

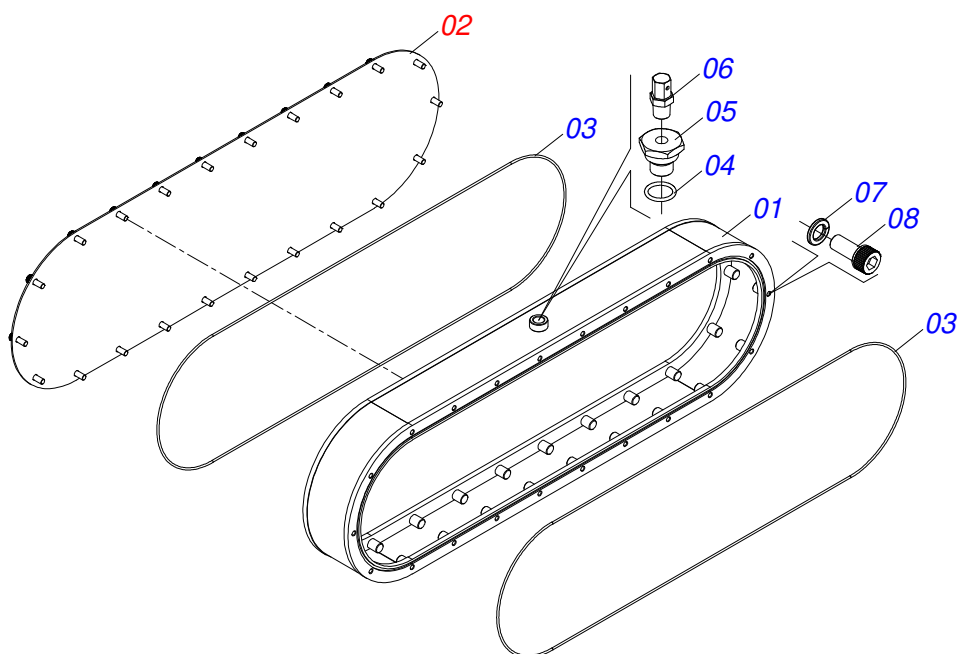

Item	Code	Description	See page	QT
01	0521068569	SIDE TRANSMISSION BOX		01
02	0521052077	SCREW COVER	32	01
03	0503019231	CORD		02
04	0503010045	O'RING		01
05	0581015282	BREATHER FIXER		01
06	0511050190	BREATHE 1/4 BSPT		01
07	0503015075	M10 SPRING WASHER		22
08	0503010728	M10 X 1.2\" BOLT		22

SCREW COVER


0521052077

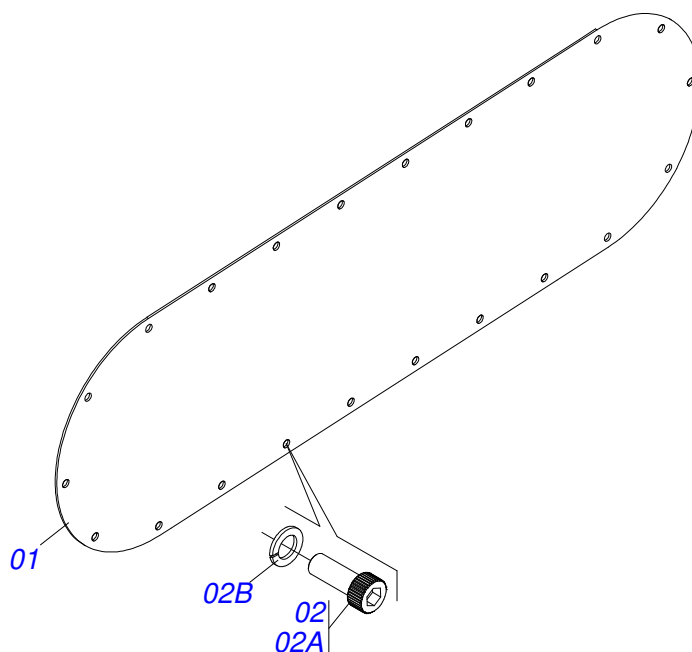


Item	Code	Description	See page	QT
01	0581015820	COVER CURRENT CASH		01
02	0521052078	SCREW WITH WASHER COVER		22
02A	0503010728	M10 X 1.2" BOLT		22
02B	0503015075	M10 SPRING WASHER		22

CHAIN TENSIONER


0521040684

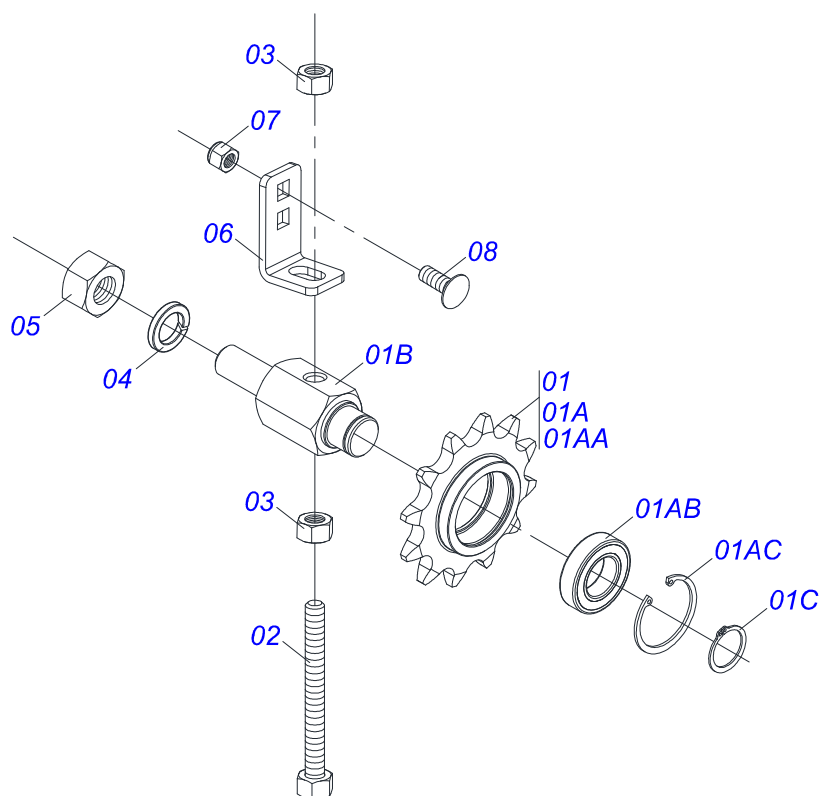

Item	Code	Description	See page	QT
01	0511051680	CHAIN TENSIONER		01
01A	0501110689	12Z GEAR		01
01AA	0502012705	GEAR 12Z STEP 25.4		01
01AB	0503011797	BEARING 6005 DDU		01
01AC	0503011105	SEAL RING		01
01B	0571010224	AXLE BODY TENSIONER		01
01C	0503010406	501025 CLAMPING RING (FOR AXLE)		01
02	0521060237	CHAIN TENSIONER JACK		01
03	0503010060	1/2" NUT		02
04	0503010023	3/4" SPRING WASHER		01
05	0503010014	3/4" NUT		01
06	0561014066	CHAIN TENSIONER SUPPORT		01
07	0503013357	3/8" SELF-ADJUSTING NUT		01
08	0501011643	3/8 X 1"BOLT		01

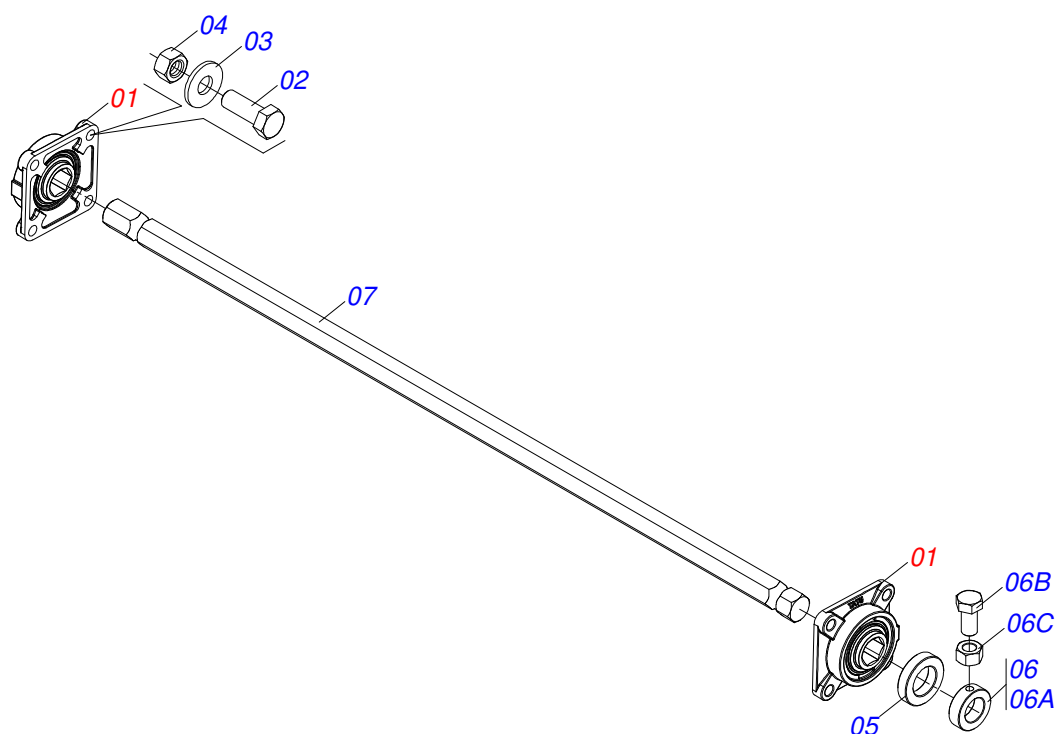


Item	Code	Description	See page	QT
01	0521052074	BEARING OSCILLATING	5	02
02	0503011082	C1/2" X 1.3/4" SCREW		08
03	0511017302	FLAT WASHER		08
04	0503010589	1/2" UNC SELF ADJUSTING NUT		08
05	0561012760	CONDUTOR SUPPORT SLEEVE		01
06	0521052072	SHAFT LOCK		01
06A	0561017251	SPRING GUIDE BUSHING LOCK		01
06B	0501010161	1/2" X 1.1/4" BOLT		01
06C	0503010060	1/2" NUT		01
07	0591010059	HEX SHAFT 31.75 X 1132		01

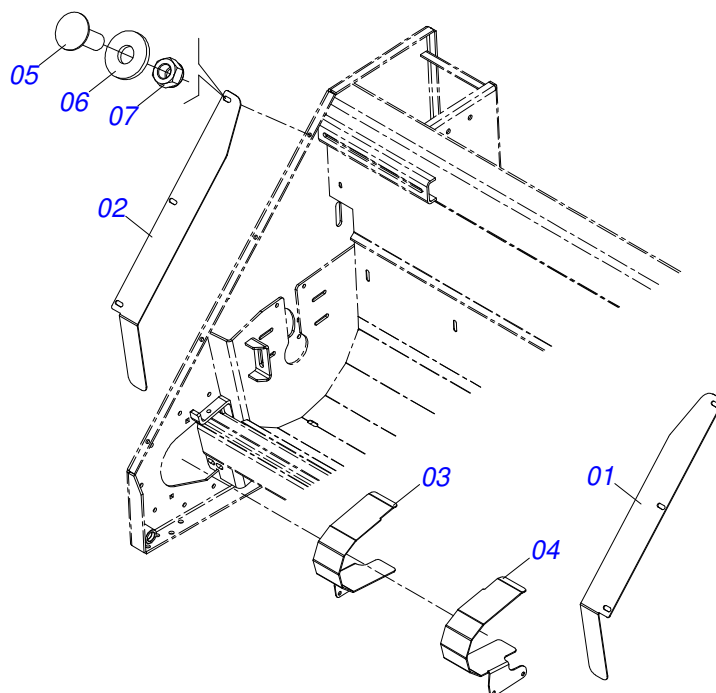


Item	Code	Description	See page	QT
01	0571013033	FINISHING THE LEFT SIDE FAIRING (50 PMT)		01
02	0571013032	FINISHING THE RIGHT SIDE FAIRING (50 PMT)		01
03	0571013251	PROTECTION COUPLING SIDE RIGHT		01
04	0571013250	PROTECTION COUPLING SIDE LEFT		01
05	0501011643	3/8 X 1" BOLT		10
06	0501010984	FLAT WASHER		10
07	0503013357	3/8" SELF-ADJUSTING NUT		10

DRIVE SHAFT


0501059170

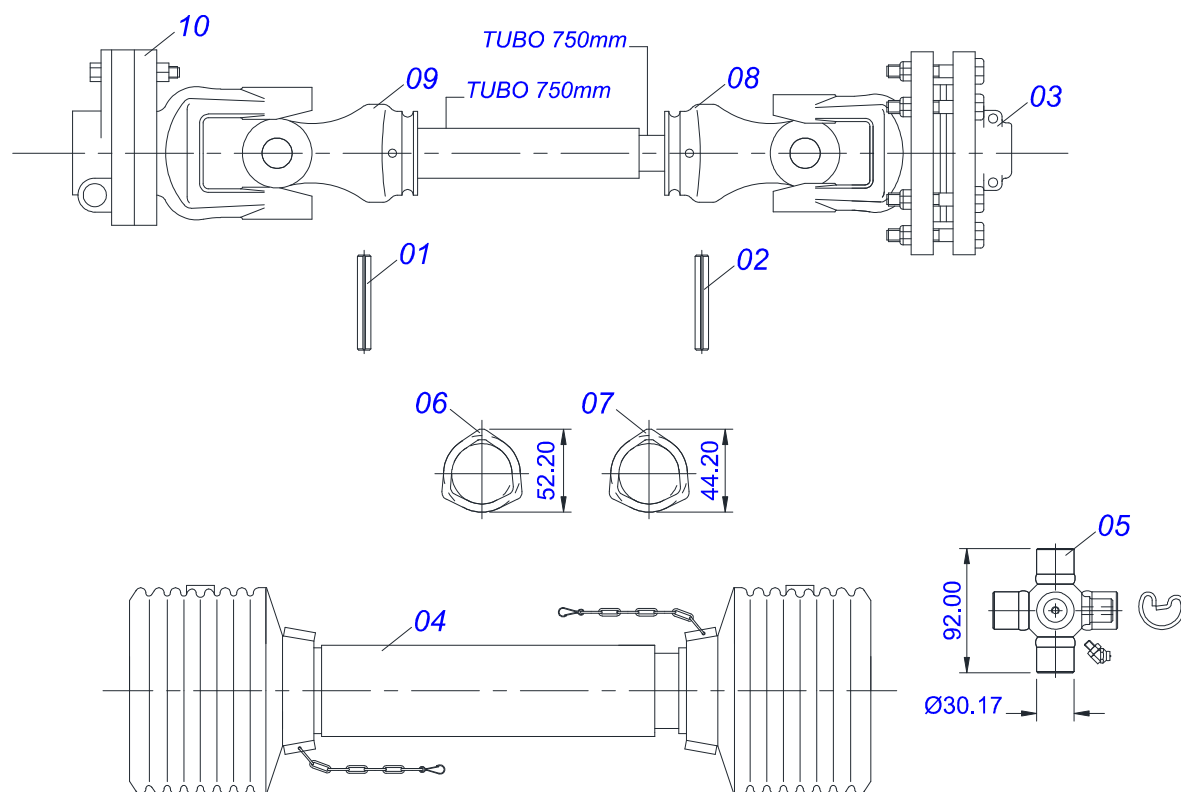

Item	Code	Description	See page	QT
01	0503015159	10 X 65 SPRING PIN		01
02	0503014073	SPRING PIN		01
03	0503015366	CLUTCH DISC ASSY		01
04	0503015371	PROTECTION ASSY		01
05	0503014059	CROSSPIECE		02
06	0503015367	FEMALE TRIANGULAR TUBE		01
07	0503016166	MALE TRIANGLE TUBE S5000/2500 CI59		11
08	0503015368	TERMINAL W/HOLE TRIAN MALE		01
09	0503015369	FEMALE TRIANGULAR TUBE		01
10	0503015370	TORQUE LIMITER		01

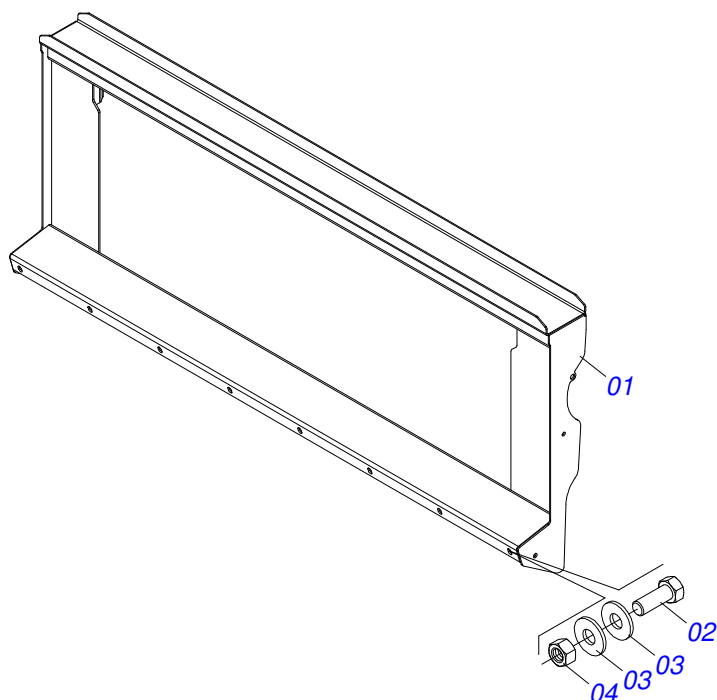


Item	Code	Description	See page	QT
01	0521060932	COUPLING (JD 9570 STS)ASSY		01
02	0501010161	1/2" X 1.1/4" BOLT		08
03	0511017302	FLAT WASHER		16
04	0503011336	1/2" HEX SELF ADJUSTING NUT		08

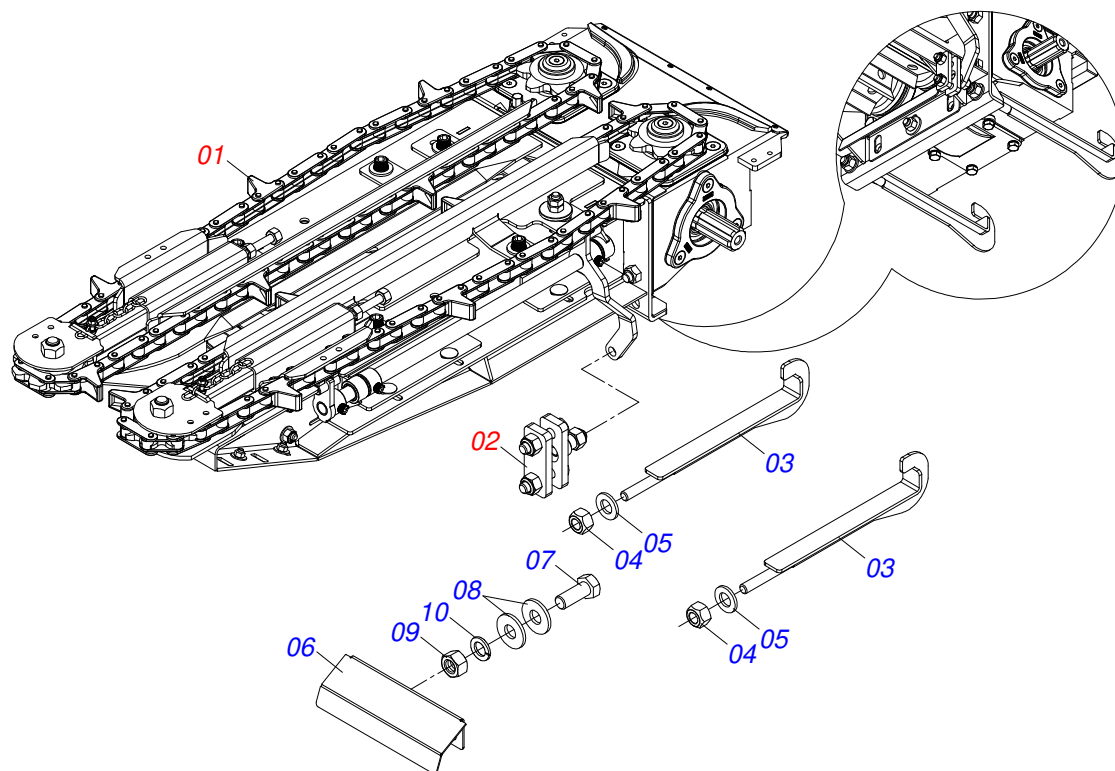

Item	Code	Description	See page	QT
01	0521052645	ASSY CORN LINE	39	01
02	0521052646	FIXER BAR ADJUSTMENT MACHETE	49	01
03	0521060120	BOX HITCH		02
04	0503015079	LOCK NUT		02
05	0501010301	FLAT WASHER		02
06	0561012492	BAR ADJUSTMENT CENTRAL PROTECTION		01
07	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		01
08	0501010937	13.5 X 28 X 3 FLAT WASHER		02
09	0503010028	1/2" NUT		01
10	0503010019	1/2" SPRING WASHER		01

ASSY CORN LINE

0521052645

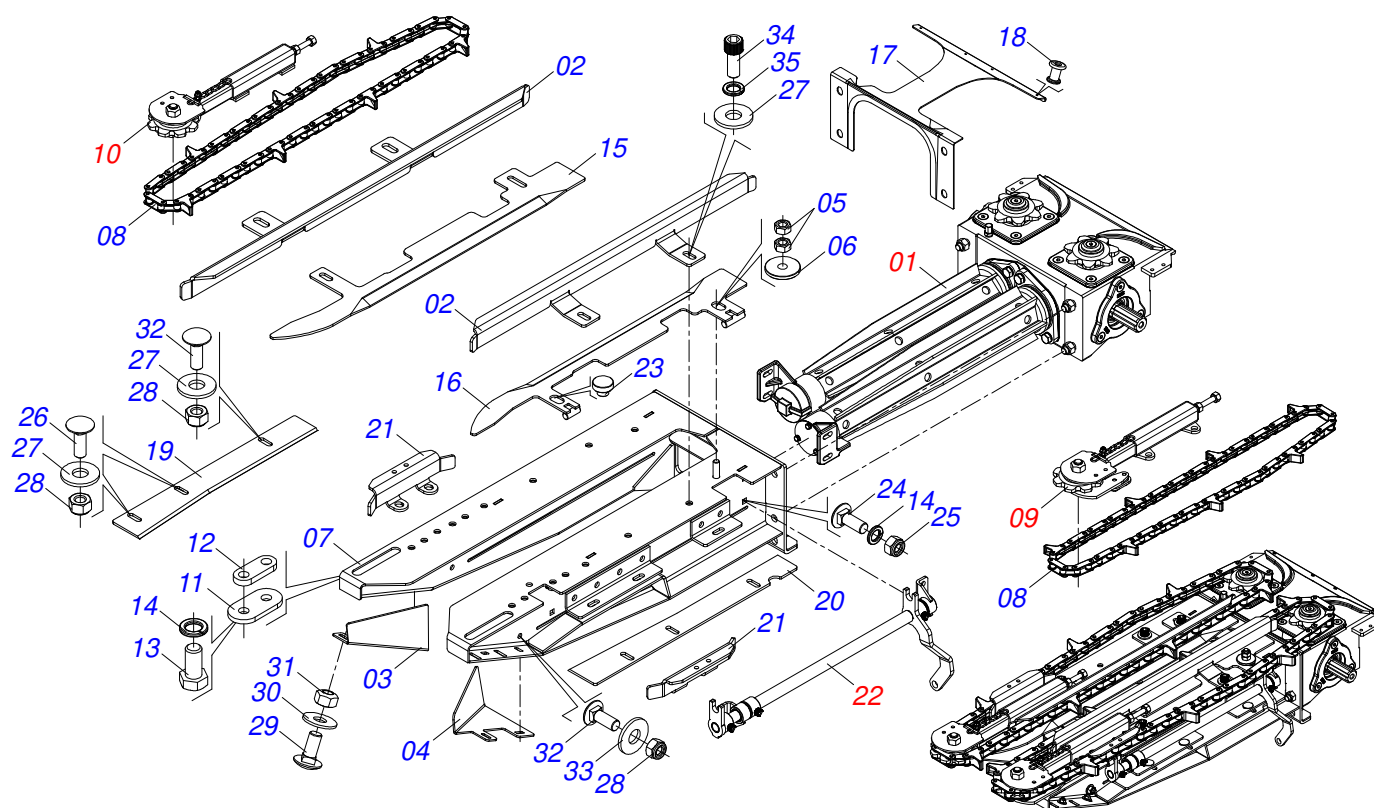


Item	Code	Description	See page	QT
01	0521052079	TRANSMISSION BOX LINE WITH COLLECTOR 40 ROLLER		01
02	0561017636	GUIDE CHAIN		02
03	0561012171	LEFT GUIDE ENTRANCE		01
04	0561010537	RIGHT GUIDE ENTRANCE		01
05	0503012254	M12 X 0.7" NUT		02
06	0571013118	WASHER GUIDE		01
07	0521060123	FRONT FAIRING SUPPORT		01
08	0503015031	CHAIN CA 2060H (7AUE) X 56 LINK		02
09	0521052641	STRETCHER LEFT ASSY CURRENT	46	01
10	0521052640	STRETCHER RIGHT ASSY CURRENT	47	01
11	0581015849	LOCK		01
12	0581015848	LOWER BODY LOCK		01
13	0503010256	3/8" X 3/4" BOLT		02
14	0503010025	3/8" SPRING WASHER		05
15	0581016534	RIGHT PLATE		01
16	0521068491	LEFT PLATE		01
17	0581016538	FRAME SUPPORT BASE		01
18	0503012722	0.16" X 0.4" BLIND RIVET		04
19	0581013107	RIGHT SCRAPER		01
20	0581016539	LEFT SCRAPER		01
21	0581015841	LOWER CURRENT GUIDE		02
22	0521052517	ARTICULATOR MACHETE	48	01
23	0581016548	WASHER LEFT GUIDE		01
24	0501011643	3/8 X 1" BOLT		03
25	0503013357	3/8" SELF-ADJUSTING NUT		03
26	0503015328	M10 X 1,5 X 35 BOLT		04
27	0511017302	FLAT WASHER		11
28	0503011841	M10 SELF ADJUSTING NUT		10
29	0503011952	5/16" X 3/4" BOLT		04
30	0521011039	FLAT WASHER		04
31	0503013816	5/16" LOCKNUT		04

ASSY CORN LINE

0521052645


Item	Code	Description	See page	QT
32	0503015327	M10 X 1,5 X 30 BOLT		06
33	0501013518	FLAT WASHER		04
34	0503012694	M12 X 1,75 X 30 BOLT		14
35	0503015076	M12 SPRING WASHER		14

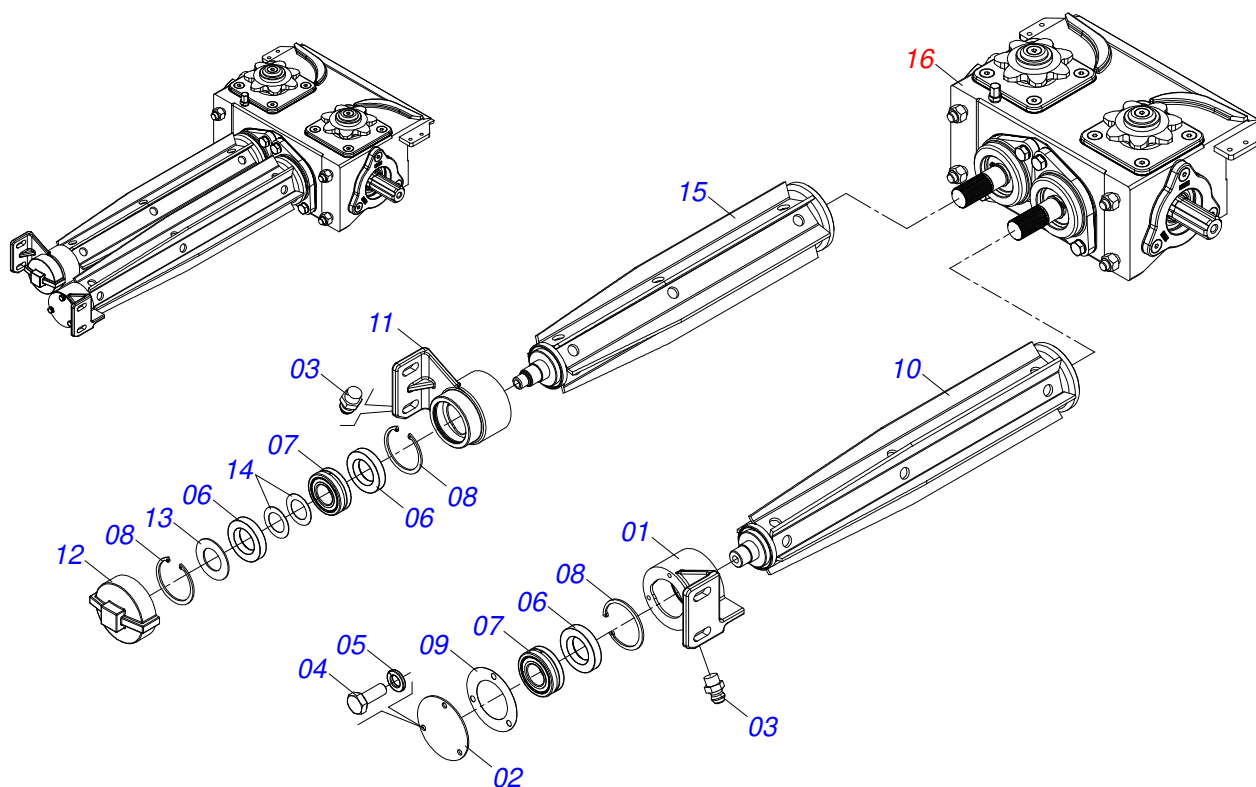


Item	Code	Description	See page	QT
01	0502012559	RH FRONT BEARING		01
02	0561010944	BEARING COVER		01
03	0503010691	1/4" GREASE FITTING		02
04	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
05	0503015110	M06 SPRING WASHER		03
06	0503015038	SEAL 00503		03
07	0503015039	BALL BEARING		02
08	0503015082	502056 CLAMPING RING (FOR AXLE)		03
09	0503033057	RH BEARING JOINT		01
10	0521061835	LEFT ROLLER ROLLER GREATER		01
11	0502012560	LH FRONT BEARING		01
12	0502040804	DIRECTOR		01
13	0561011883	FLAT WASHER		01
14	0511015098	FLAT WASHER		02
15	0521061834	ROLLER PICKUP RIGHT SMALLER		01
16	0521052080	MOUNTED BOX	41	01

MOUNTED BOX

0521052080

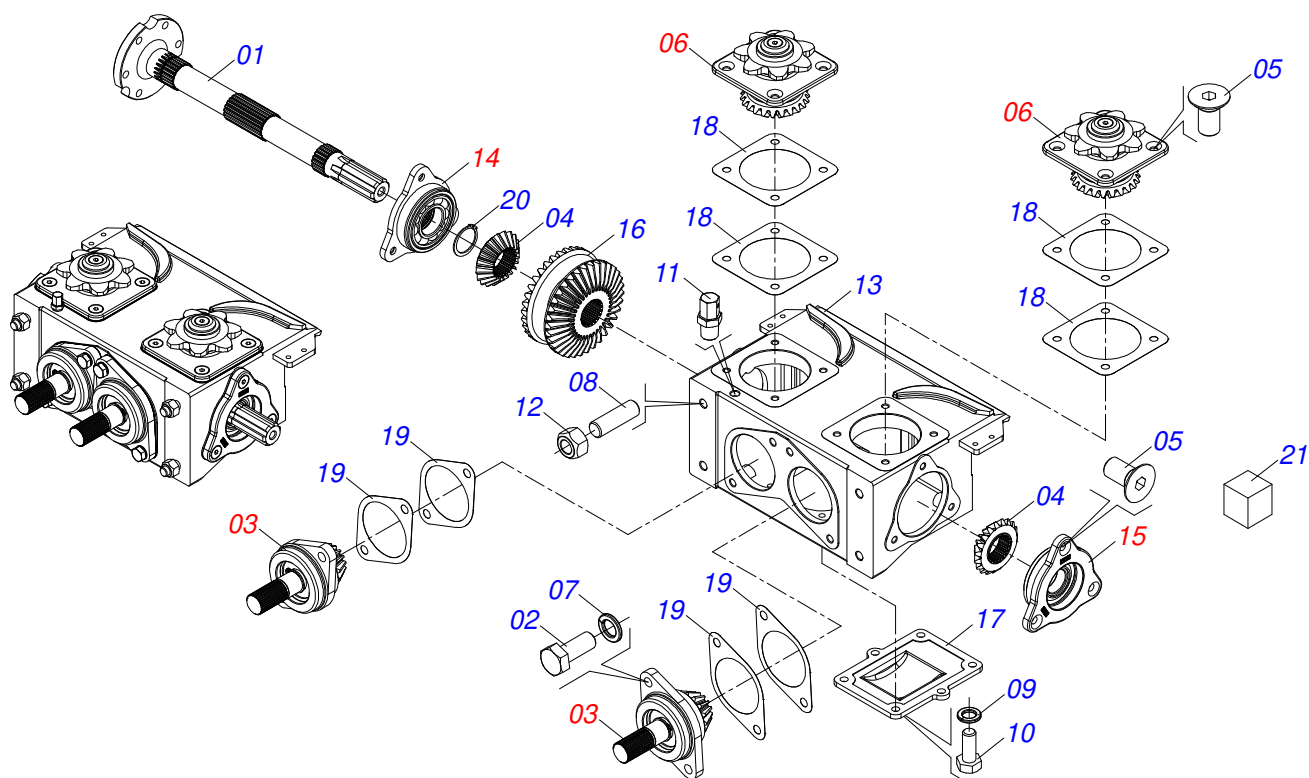


Item	Code	Description	See page	QT
01	0561016528	CENTRAL AXLE		01
02	0503010428	M12 X 1,75 X30 BOLT		04
03	0511050109	BEARING FULL FRONTAL	42	02
04	0561016784	19Z CONICAL GEAR CURRENT		02
05	0503015046	M10 X 1,50 X 20 BOLT		14
06	0511050103	BEARING FULL TOP	43	02
07	0503015076	M12 SPRING WASHER		04
08	0503033056	M14 P.2 X 45 STUD		04
09	0503015075	M10 SPRING WASHER		06
10	0503010172	M10 X 1,5 X 25 BOLT		06
11	0511050190	BREATHE 1/4 BSPT		01
12	0503015079	LOCK NUT		04
13	0502050055	ALUMINUM BOX		01
14	0511050108	BEARING RIGHT SIDE	44	01
15	0511050107	BEARING LEFT SIDE	45	01
16	0581015812	34Z DOUBLE GEAR		01
17	0502012558	COUVERTURE CASH ROW PLATEFORME CORN		01
18	0503033348	BOARD TOP BEARING		04
19	0503033347	GASKET		04
20	0503010217	501040 CLAMPING RING (FOR AXLE)		01
21	1882970004	GREASE		01

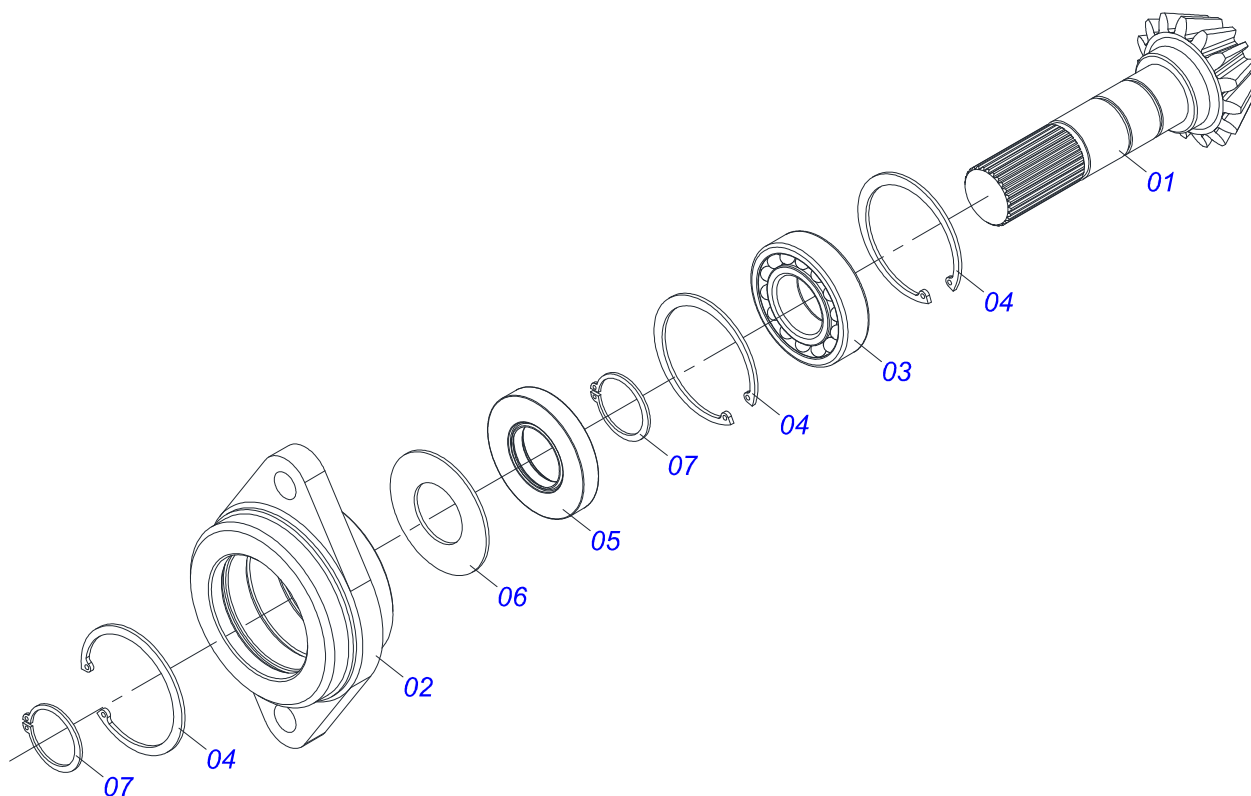


Item	Code	Description	See page	QT
01	0561016782	PINION CONICAL ROLL		01
02	0502012657	FRONT ROLLER BEARING		01
03	0503016064	BEARING		01
04	0503011800	SEAL RING		03
05	0503015903	SEAL		01
06	0561016789	FLAT WASHER		01
07	0503010707	501030 CLAMPING RING (FOR AXLE)		02

BEARING FULL TOP

0511050103

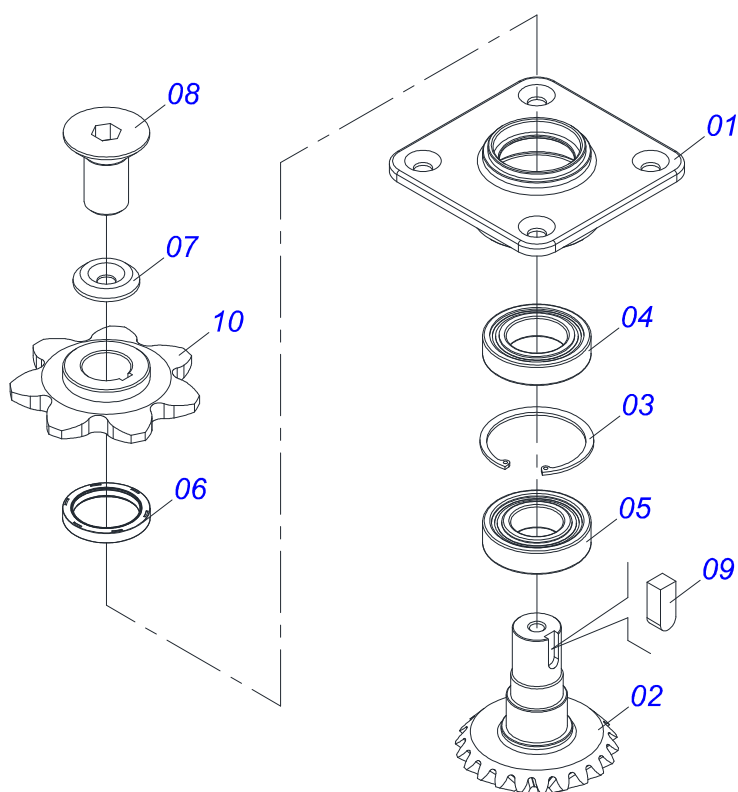


Item	Code	Description	See page	QT
01	0502012654	TOP BEARING CASE		01
02	0561016785	PINION CONICAL 22Z M4 CHAIN		01
03	0503011800	SEAL RING		01
04	0503016065	ROLLER BEARING		01
05	0503016063	ROLLER BEARING		01
06	0503015901	SEAL		01
07	0561016792	LOCK WASHER		01
08	0503015046	M10 X 1,50 X 20 BOLT		01
09	0503015902	8,0 X 7,0 X 20 KEYWAY		01
10	0571019643	GEAR 7Z P1.1/2 MOTORA		01

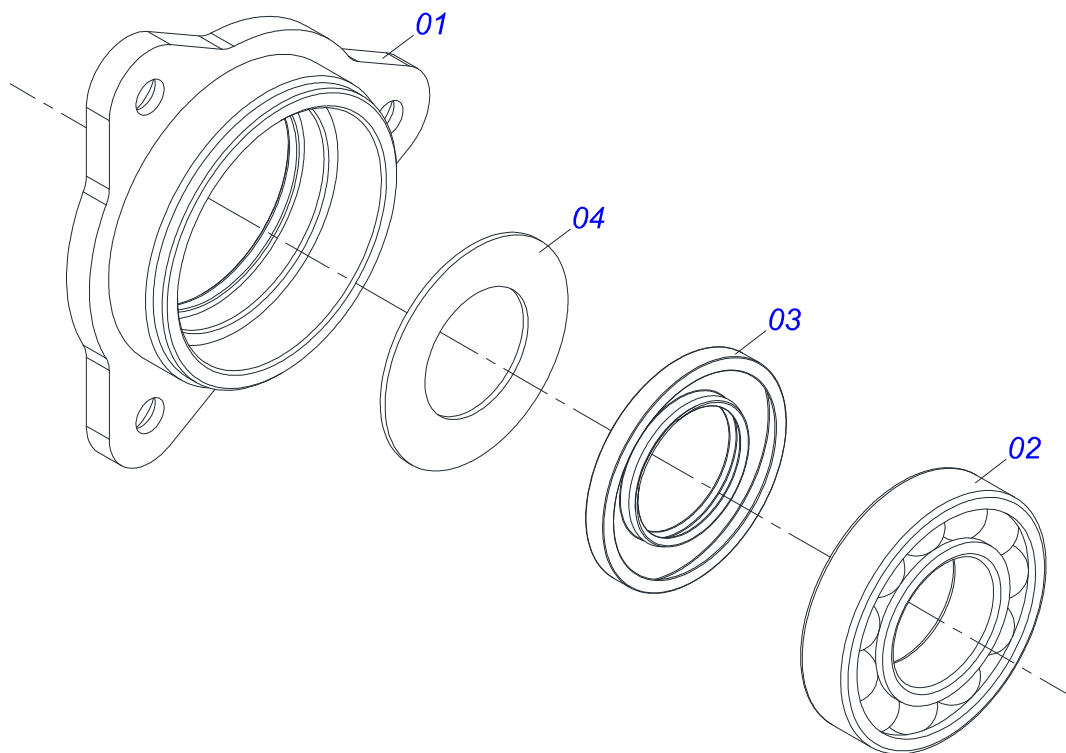

Item	Code	Description	See page	QT
01	0502012640	BEARING SIDE BOX		01
02	0503016062	BEARING		01
03	0503015900	SEAL		01
04	0561016790	FLAT WASHER		01

BEARING LEFT SIDE


0511050107

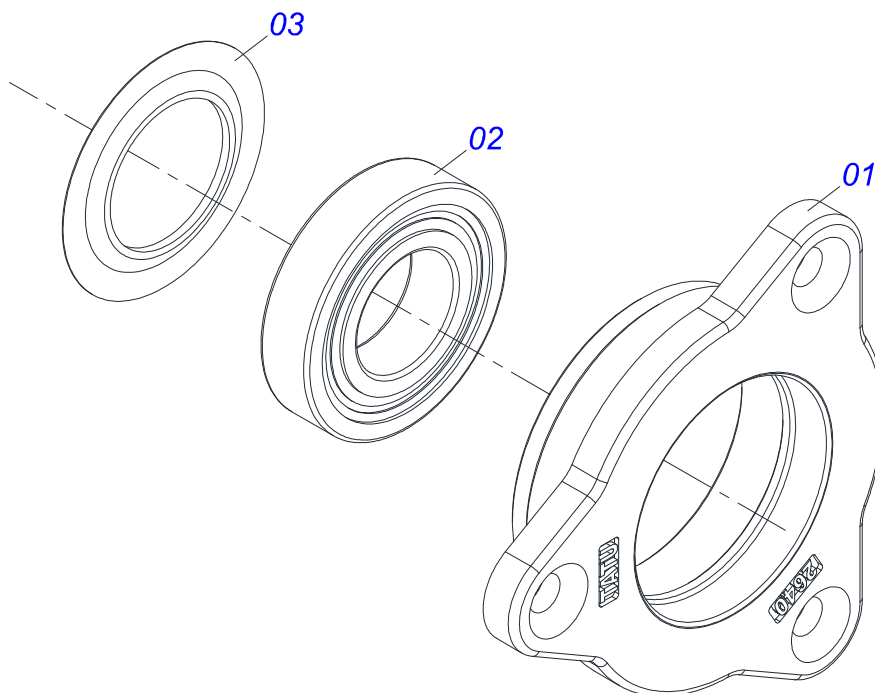


Item	Code	Description	See page	QT
01	0502012655	BEARING LEFT SIDE		01
02	0503016061	BEARING		01
03	0503016077	SEAL RING		01

STRETCHER LEFT ASSY CURRENT

0521052641

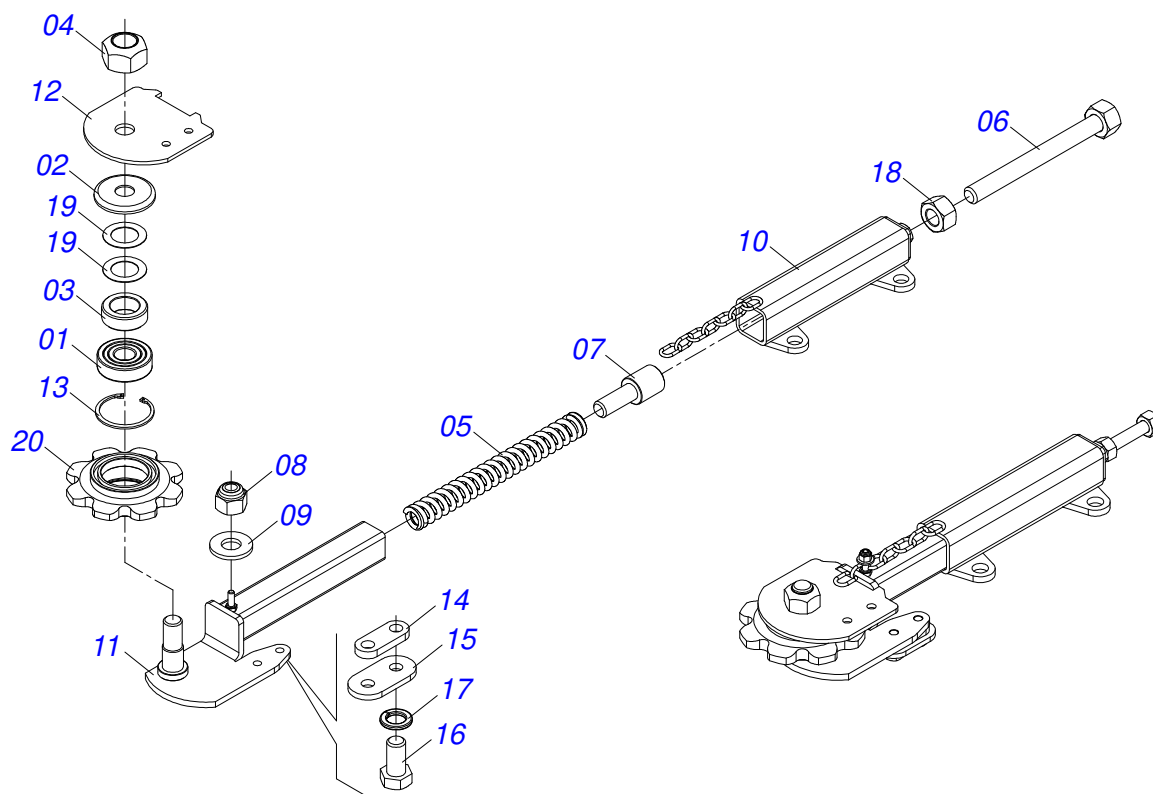


Item	Code	Description	See page	QT
01	0503015052	ROLLER BEARING 6304		01
02	0561011653	DUST CLOAK 55 X 4,5		01
03	0561010551	20 X 31,5 SLEEVE		01
04	0503011255	3/4" LOCK NUT		01
05	0503033041	COMPRESSION SPRING		01
06	0521060237	CHAIN TENSIONER JACK		01
07	0561012098	PIN 13,5 X 35 PMT		01
08	0503011776	M6 SELF ADJUSTINGNUT		01
09	0511017303	FLAT WASHER		01
10	0521068307	GUIDE LEFT STRETCHER		01
11	0521068308	FRONT LEFT STRETCHER		01
12	0581015842	CURRENT ALIGNER		01
13	0503015081	502052 CLAMPING RING (FOR AXLE)		01
14	0581015848	LOWER BODY LOCK		01
15	0581015849	LOCK		01
16	0503010256	3/8" X 3/4" BOLT		02
17	0503010025	3/8" SPRING WASHER		02
18	0503010060	1/2" NUT		01
19	0511015098	FLAT WASHER		02
20	0571019642	GEAR 8Z P1.1/2 MOVIDA PMT		01

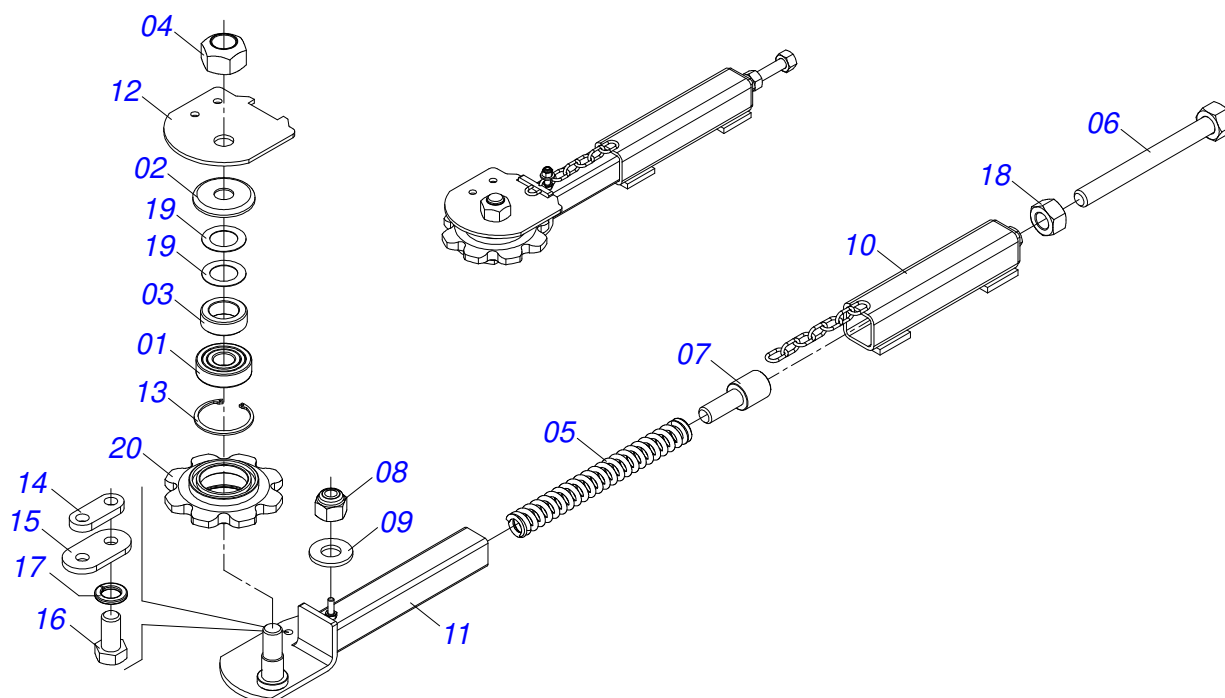


Item	Code	Description	See page	QT
01	0503015052	ROLLER BEARING 6304		01
02	0561011653	DUST CLOAK 55 X 4,5		01
03	0561010551	20 X 31,5 SLEEVE		01
04	0503011255	3/4" LOCK NUT		01
05	0503033041	COMPRESSION SPRING		01
06	0521060237	CHAIN TENSIONER JACK		01
07	0561012098	PIN 13,5 X 35 PMT		01
08	0503011776	M6 SELF ADJUSTINGNUT		01
09	0511017303	FLAT WASHER		01
10	0521068309	RIGHT STRETCH GUIDE		01
11	0521068310	FRONT RIGHT STRETCHER		01
12	0581015842	CURRENT ALIGNER		01
13	0503015081	502052 CLAMPING RING (FOR AXLE)		01
14	0581015848	LOWER BODY LOCK		01
15	0581015849	LOCK		01
16	0503010256	3/8" X 3/4" BOLT		02
17	0503010025	3/8" SPRING WASHER		02
18	0503010060	1/2" NUT		01
19	0511015098	FLAT WASHER		02
20	0571019642	GEAR 8Z P1.1/2 MOVIDA PMT		01

ARTICULATOR MACHETE


0521052517

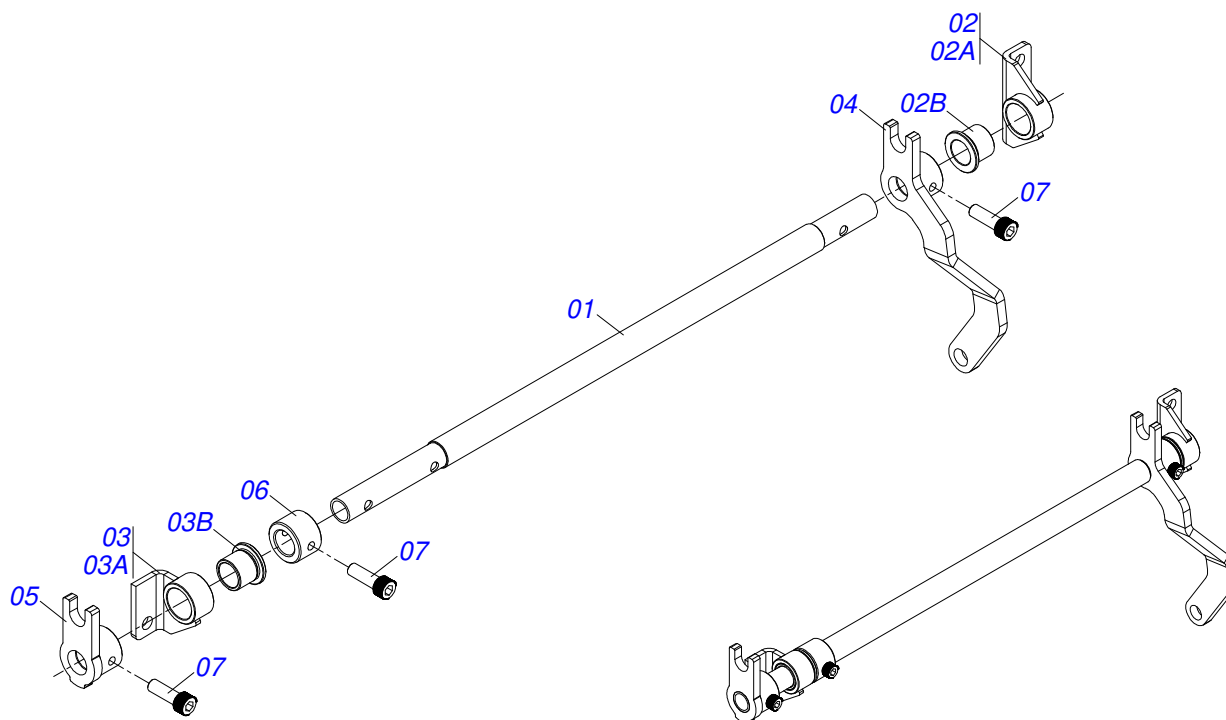


Item	Code	Description	See page	QT
01	0581013767	TUBE ARTICULATOR		01
02	0501110892	REAR BEARING WITH GLOVE		01
02A	0521068510	ARTICULATED REAR BEARING		01
02B	0581016547	GLOVE		01
03	0501110891	FRONT BEARING WITH GLOVE		01
03A	0521068508	ARTICULATED FRONT BEARING		01
03B	0581016547	GLOVE		01
04	0521068509	ARTICULATED LEVER		01
05	0521067520	GUIDE FRONT ARTICULATOR		01
06	0581016543	ARTICULATED LOCK GLOVE		01
07	0503019217	SCREW M8 X 1,25 X 35 CCSI G12.9 ZN		03

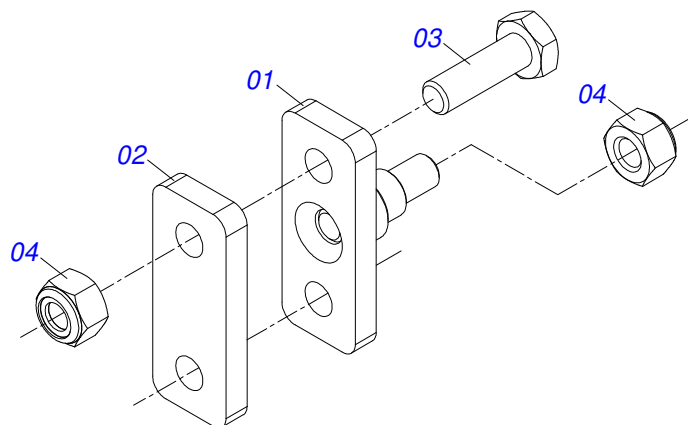


Item	Code	Description	See page	QT
01	0521060124	ADJUSTMENT BAR FIXER		01
02	0561010955	FIXER BODY CONTROL		01
03	0503015113	M10 X 1,5 X 45 BOLT		02
04	0503011841	M10 SELF ADJUSTING NUT		03

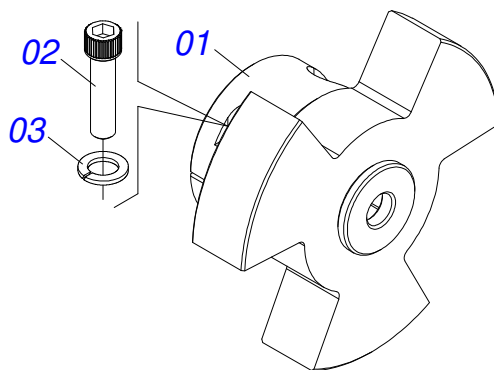


Item	Code	Description	See page	QT
01	0521063714	BOX FOLLOWER		01
02	0503015348	3/8" BOLT		02
03	0503010025	3/8" SPRING WASHER		02

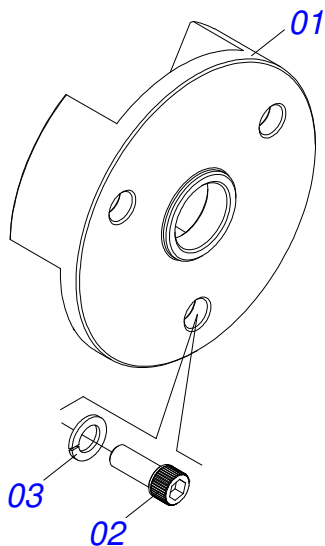


Item	Code	Description	See page	QT
01	0502040839	BODY DRAG BOX RIGHT		01
02	0503010562	1/2" X 1" BOLT		03
03	0503010019	1/2" SPRING WASHER		03

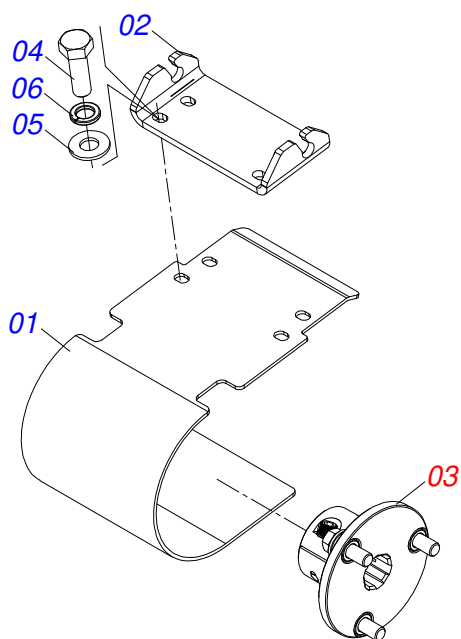


Item	Code	Description	See page	QT
01	0561014956	PROTECTION PROTRACTOR		01
02	0591010591	ARTICULATED SUPPORT CARENAGE		01
03	0521056097	450 ASSY PROLONGER	53	01
04	0503011295	M 8 X 1,25 X 25 BOLT		04
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503014371	M8 SPRING WASHER		04

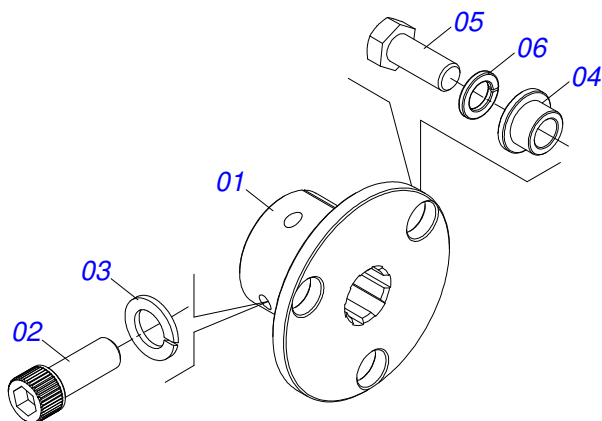

Item	Code	Description	See page	QT
01	0502040837	COUPLING FLANGE		01
02	0503015348	3/8" BOLT		02
03	0503010025	3/8" SPRING WASHER		02
04	0561017155	SLEEVE		03
05	0503010920	1/2" X 1.1/2" BOLT		03
06	0503010019	1/2" SPRING WASHER		03

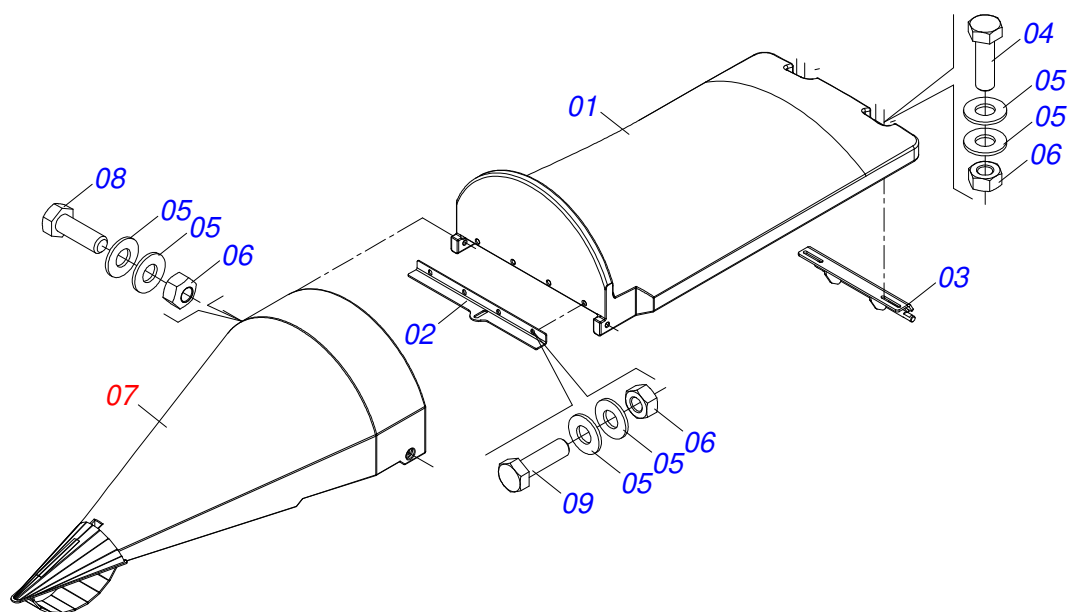


Item	Code	Description	See page	QT
01	0503033103	LEFT ROW REAR FAIRING		01
02	0561012163	FRONT FAIRING SUPPORT		01
03	0521069864	REAR SHROUD ARTICULATOR (SPACING 600)		01
04	0503010421	5/16" X 1-1/2" BOLT		04
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		20
06	0503013816	5/16" LOCKNUT		10
07	0521055838	FRONT PULLEY WITH SPACING 550-600	55	01
08	0503010882	BOLT		02
09	0503010397	5/16" X 1-3/4" BOLT		04

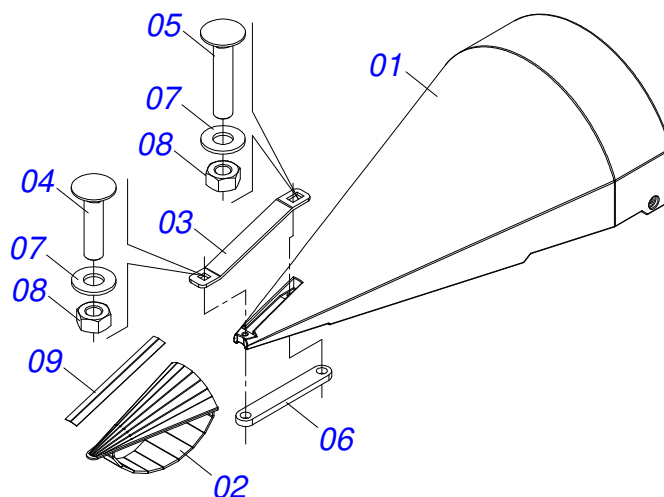

Item	Code	Description	See page	QT
01	0503033099	ROW 55-60 FRONT FAIRING		01
02	0521069865	NOZZLE 55-60		01
03	0581015783	TOP FIXER SLIDER NOZZLE		01
04	0501011753	5/16" X 1-3/4" BOLT		01
05	0501011752	5/16" X 3" BOLT		01
06	0581015786	FIXED BASE		01
07	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
08	0503013816	5/16" LOCKNUT		02
09	0503033138	LABEL ADHESIVE REFLECTIVE BICO		01

CARENAGE RIGHT SIDE ASSY


0521052653

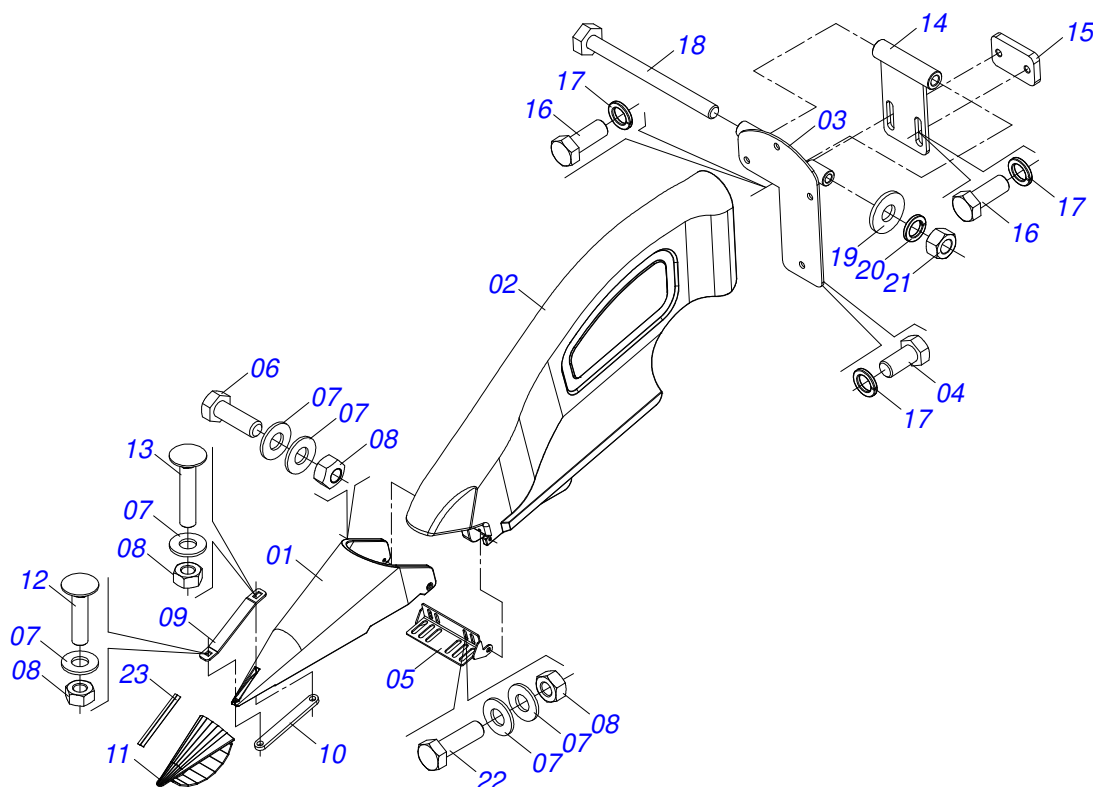

Item	Code	Description	See page	QT
01	0503033529	FRONT RIGHT FAIRING	01	
02	0503050086	FRONT SIDE FAIRING	01	
03	0521062760	ARTICULATING FAIRING	01	
04	0503012556	1/2" X 1" BOLT	04	
05	0521062990	SUPPORT SIDE FAIRING	01	
06	0503010675	5/16" X 2.1/4" BOLT	02	
07	0501010694	8.5 X 18 X 1.5 FLAT WASHER	10	
08	0503013816	5/16" LOCKNUT	06	
09	0581015783	TOP FIXER SLIDER NOZZLE	01	
10	0581015786	FIXED BASE	01	
11	0521068577	RIGHT SIDE NOZZLE	01	
12	0501011753	5/16" X 1-3/4" BOLT	01	
13	0501011752	5/16" X 3" BOLT	01	
14	0521062759	ARTICULATING FAIRING	01	
15	0571010831	FIXER SUPPORT	01	
16	0503010395	1/2" X 1-1/4" BOLT	02	
17	0503010019	1/2" SPRING WASHER	06	
18	0521062973	5/8" X 245" BOLT	01	
19	0501012140	FLAT WASHER	01	
20	0503010027	5/8" SPRING WASHER	01	
21	0503010013	5/8" NUT	01	
22	0503010882	BOLT	02	
23	0503033138	LABEL ADHESIVE REFLECTIVE BICO	01	

CARENAGE LEFT SIDE ASSY


0521052084

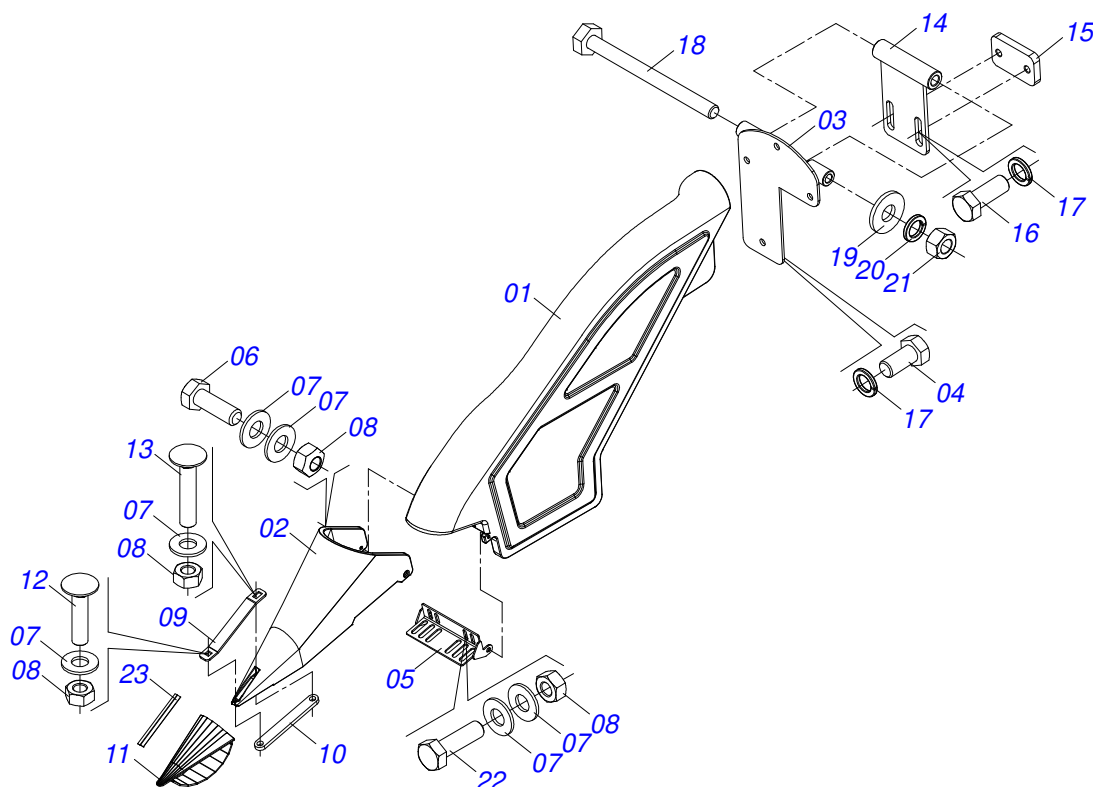


Item	Code	Description	See page	QT
01	0503050085	SIDE LEFT FAIRING	01	
02	0503033571	FRONT LEFT FAIRING	01	
03	0521062761	ARTICULATING FAIRING	01	
04	0503012556	1/2" X 1" BOLT	04	
05	0521062990	SUPPORT SIDE FAIRING	01	
06	0503010675	5/16" X 2.1/4" BOLT	02	
07	0501010694	8.5 X 18 X 1.5 FLAT WASHER	10	
08	0503013816	5/16" LOCKNUT	06	
09	0581015783	TOP FIXER SLIDER NOZZLE	01	
10	0581015786	FIXED BASE	01	
11	0521068578	LEFT SIDE NOZZLE	01	
12	0501011753	5/16" X 1-3/4" BOLT	01	
13	0501011752	5/16" X 3" BOLT	01	
14	0521062759	ARTICULATING FAIRING	01	
15	0571010831	FIXER SUPPORT	01	
16	0503010395	1/2" X 1-1/4" BOLT	02	
17	0503010019	1/2" SPRING WASHER	06	
18	0521062973	5/8" X 245" BOLT	01	
19	0501012140	FLAT WASHER	01	
20	0503010027	5/8" SPRING WASHER	01	
21	0503010013	5/8" NUT	01	
22	0503010882	BOLT	02	
23	0503033138	LABEL ADHESIVE REFLECTIVE BICO	01	

SIDE DEVIATION ASSY


0511052093

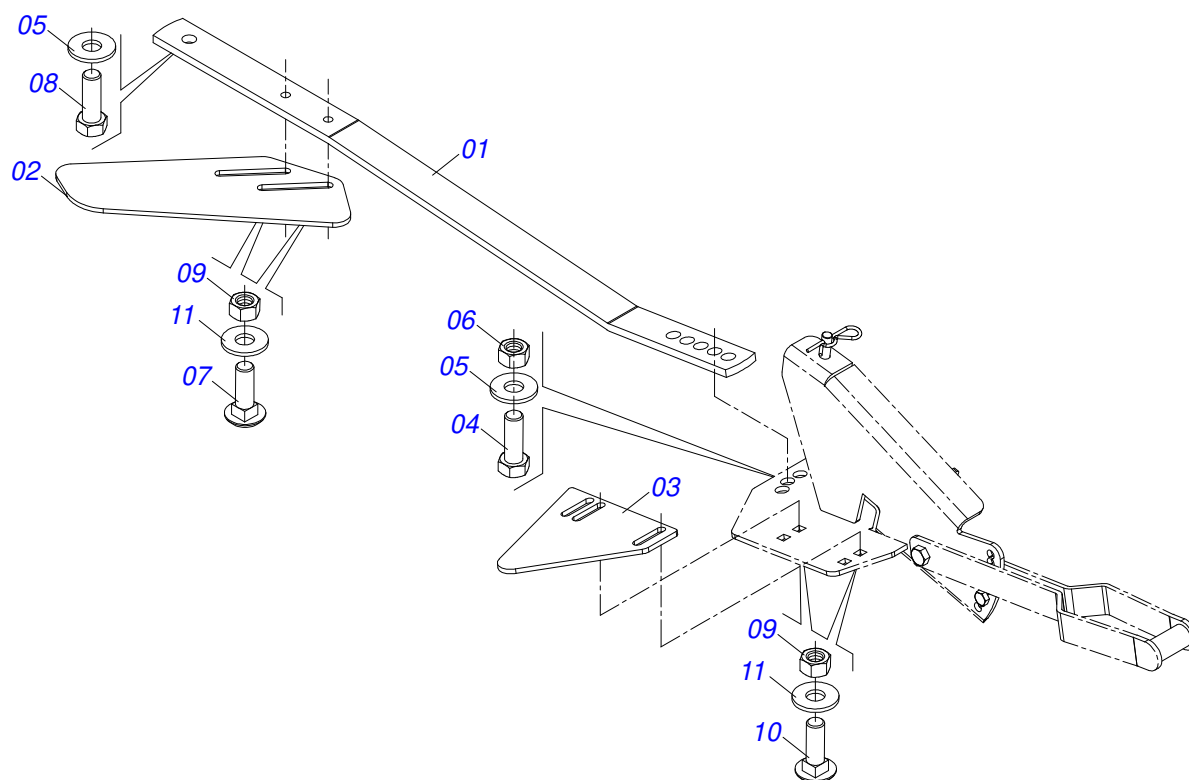


Item	Code	Description	See page	QT
01	0561012483	SIDE BAR		01
02	0561012614	PLATE REAR PMT		01
03	0561012615	FRONT PLATE		01
04	0503015112	M10 X 1,5 X 30 BOLT		01
05	0501010984	FLAT WASHER		03
06	0503011841	M10 SELF ADJUSTING NUT		02
07	0503011953	5/16" X 1" BOLT		02
08	0503015130	M10 X 1,5 X 35 BOLT		01
09	0503013816	5/16" LOCKNUT		04
10	0503011952	5/16" X 3/4" BOLT		02
11	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04

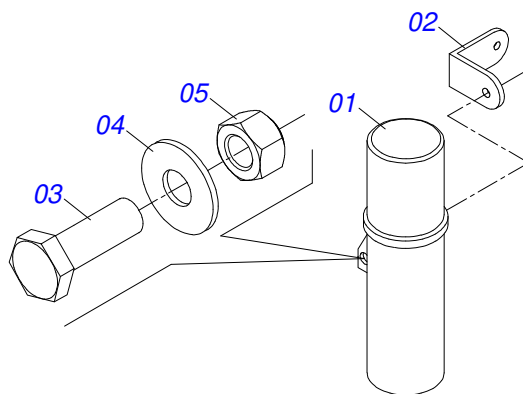


Item	Code	Description	See page	QT
01	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
02	0541016866	CLOAK MANUAL FIXER L		01
03	0503010365	NUT		02
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
05	0503010337	5/16" NUT		02
06	0501090875	INSTRUCTION MANUAL		01

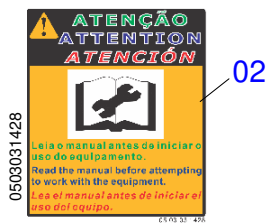

Item	Code	Description	See page	QT
01	0503062752	ASSY LABEL ADHESIVE RESINATED	01	
02	0503031428	READ MANUAL DECAL	01	
03	0503031427	ADHESIVE LABEL	02	
04	0503033130	ADHESIVE LABEL DANGER	01	
05	0503031827	LUBRICATE AND RETIGHTEN DAILY DECAL	04	
06	0503032534	ADHESIVE LABEL	02	
07	0503034665	SIDE TRANSMISSION ADHESIVE LABEL (ALUMINUM)	02	
08	0503033293	ADHESIVE LABEL AND OPENS CLOSSES	02	

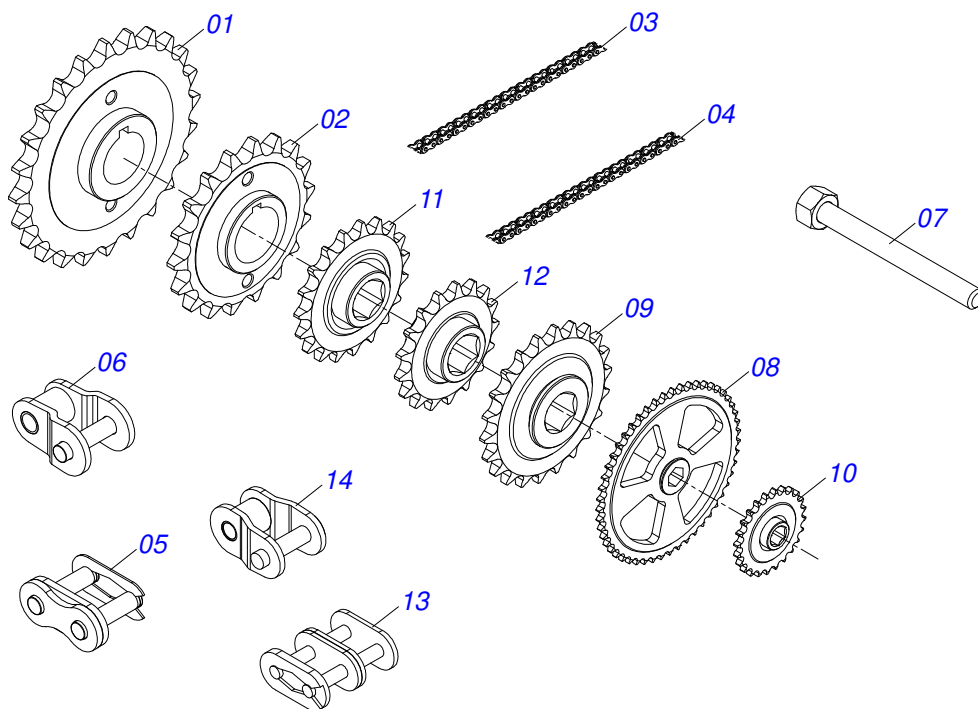

Item	Code	Description	See page	QT
01	0521060937	24Z GEAR		02
02	0521061099	GEAR		02
03	0503017050	CURRENT 60.1 8 ELOS		04
04	0503017051	CURRENT 80.1 8 ELOS		02
05	0503014083	AMENDMENT WITH LOCK		02
06	0503014084	REDUCER		02
07	0521060237	CHAIN TENSIONER JACK		02
08	0521060223	51Z GEAR		02
09	0521064129	GEAR 22Z (P.3/4")		02
10	0521064131	17Z GEAR (P.3 / 4 ")		02
11	0521068463	GEAR 24Z (P.3/4)		02
12	0521064130	GEAR 19Z (P.3/4")		02
13	0503015041	MEND WING CURRENT 60-1 60-1		04
14	0503015042	CURRENT REDUCTION WING 60-1		04

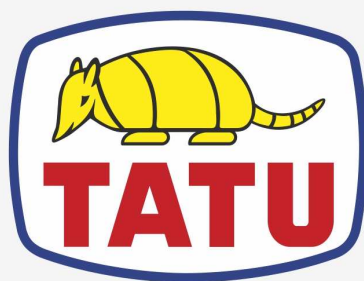

MARCHESAN

Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI

www.marchesan.com.br

