

ROW CROP PLANTERS

USAP TITANIUM - FRAME 14900 - CSU/CM/PM400

Code: 0501092662
Series: S-0419
Revision: 00
Date Revision: FEVEREIRO/2020

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111140436	USAP 14900/30E500 CSU CM TIT ESPECIAL S-0419

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.



MARCHESAN

INDEX

0909098783	FRAME ASSY	1
0909098787	CHASSI CENTRAL COMPLETO	2
0909098785	SIDE FRAME LEFT ASSY	3
0909098786	SIDE FRAME RIGHT ASSY	4
0909098788	SEED ROW ASSY	5
0521056266	TELESCOPIC FULL	6
0511058228	HYDRAULIC CYLINDER DRAWBAR HYDRAULIC	7
0521055351	PANTOGRAPHY HEADER	8
0521057492	RIGHT HAND	9
0521057523	LEFT FRENCH HAND	10
0511054713	ASSY FRENCH HAND TRANSMISSION SHAFT	11
0511051299	ROTATING RIGHT AXIS EXTENSOR	12
0521051438	HEADER 3 POINTS ASSY	13
0521055350	SUPPORT HYDRAULIC HOSE WITH FIXING	14
0511059814	TELESCOPIC LOCK ASSY	15
0511052388	REST GREATER ASSY	16
0511052052	SUPPORT WITH FIXATION	17
0521055603	FRAME CENTRAL 4686 FIXING / LATCH TELESCOPICA	18
0521050019	TIGHTENING PLATE WITH FIXING INTERNAL	19
0521052189	38,10X63,50X386X148 HYDRAULIC CYLINDER	20
0521057512	ASSY CENTRAL HEX AXLE 30E500	21
0521055329	CENTRAL WHEEL WITH TRANSMISSION	22
0521055328	CENTRAL WHEEL WITHOUT TRANSMISSION	23
0511054492	STUB SHAFT HUB	24
0511054499	TRANSMISSION OF LARGER CENTRAL EXCHANGE	25
0501053654	DOUBLE BEARING TRANSMISSION SEED 3/4	26
0511054461	STRETCHER TOP TRANSMISSION SWIRLED	27
0503060684	14 X 17.5/14L TR SK900 LEFT - WHEEL AND TIRE	28
0511054495	WHEEL WITHOUT TIRE WITHOUT TRANSMISSION	29
0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	30
0521056971	ASSY CENTRAL EXCHANGE (PAR LINE)	31
0511052432	DOUBLE BEARING WITH ASSY FLANGE	32
0511054476	RIGHT TENSIONER CENTRAL EXCHANGE	33
0501048790	AXLE WITH LINK ASSY	34
0501052778	CHAIN TENSIONER ASSY	35
0511054489	LEFT TENSIONER CENTRAL EXCHANGE	36
0511056179	CLUTCH WITH CARDAN CENTRAL	37
0511053043	DEVIATION GREATER ASSY	38
0521054288	DEVIATION ASSY	39
0511053045	TENSIONER REAR OFFSET HIGHER	40
0511053050	CHAIN TENSIONER	41
0521057527	CENTRAL SUPPORT WITH	42
0521051407	FIXER SILO FERTILIZER	43
0521050525	FIXER FERTILIZER CONDUCTOR	44
0521055365	SEED CONDUCTOR	45
0521057513	CENTRAL HANDRAIL ASSY 30E500	46
0521053222	PLATFORM ASSY CENTER FRAME 4686	47
0521057516	CENTRAL GUTTER ASSEMBLY 30E500 CH 4686	48
0521057564	CENTRAL FRAME ADHESIVE LABEL ASSY	49
0521052149	ARTICULATION ARM LEFT ASSY	50
0521052147	ARTICULATION ARM RIGHT ASSY	51
0521052353	ASSEMBLY CYLINDER ARTICULATED ARM	52
0511058241	HYDRAULIC CYLINDER	53
0521057562	SET HIDRAULICO	54
0521057561	CENTRAL DUTY CONNECTOR	55




MARCHESAN

INDEX


0521051537	CENTRAL REAR DUCT SUPPORT	56
0521057013	TRIPLE DIVISER VALVE BRP00079 WITH NIPLES	57
0521057082	HOSE KIT LEVANTE	58
0521057885	VALVE ASSEMBLY	59
0521055275	ASSY HOSE ARTICULATION	60
0521055274	HEAD HOSE ASSY	61
0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	62
0521057563	CONJ ELETR	63
0511053121	GREATER TOOL BOX ASSY	64
0521053296	AXIS ARTICULATOR	65
0521057203	ELECTRIC ASSEMBLY BCE (PACKED) MECHANICAL	66
0521057504	FRAME 4735 ASSY SIDE HEX AXLE	67
0521055327	LEFT WHEEL WITH TRANSMISSION	68
0521055325	SIDE CENTRAL WHEEL WITHOUT TRANSMISSION	69
0521056027	ASSY LEFT EXCHANGE	70
0501056444	BEARING WITH ROLLING	71
0501056271	BEARING CLOSED	72
0521057524	LEFT SUPPORT	73
0521053054	ASSY SIDE HANDLE	74
0521057505	SIDE PLATFORM FRAME 4735	75
0521057506	LEFT/RIGHT SIDE HANDRAIL	76
0511053320	ASSY SIDE LADDER	77
0521057580	SIDE RAIL ASSEMBLY 2330	78
0521057508	LEFT SIDE DUTY ASSEMBLY	79
0521057503	SIDE FRAME ADHESIVE LABEL ASSY	80
0501048783	DRIVE SHAFT	81
0521055326	RIGHT WHEEL WITH TRANSMISSION	82
0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	83
0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR	84
0511054463	WHEEL TENSIONER SUPORT CENTRAL	85
0511054464	WHEEL FORK TENSIONER	86
0511054500	TRANSMISSION EXCHANGE RIGHT	87
0521056044	ASSY RIGHT EXCHANGE	88
0521057525	DISTRIBUTOR RIGHT	89
0521051408	SHOE WITH SIDE SUPPORT SILO FIXING	90
0521057511	FRONT SIDE CORRIMAO	91
0501046805	DRIVE SHAFT	92
0521055375	LEFT LONG ROW	93
0521055376	RIGHT LONG ROW	94
0521055389	LINEA LONG IZQUIERDO	95
0521055390	RIGHT LONG ROW	96
0521055223	SEED LINE TRANSMISSION BOX	97
0521055408	BEARING WITH 17Z GEAR	98
0501055112	MICRO GRANULATED CHAIN TENSIONER	99
0521054334	BEARING ASSY WITH GEAR 20Z	100
0501058108	5/8" AXLE	101
0511052300	CONDUCTOR SUPPORT ASSY SEED	102
0521055372	ROW SEED BEARING	103
0511051693	BASE FIXING SYSTEM	104
0501059632	DDD SEED 15X15 LEFT	105
0501054167	BOX DDD ASSY DPL 15 RIGHT	106
0501054168	BOX DDD ASSY DPL 15 LEFT	107
0501058107	5/8" AXLE	108
0521053198	RIGHT REAR	109
0501059631	DDD SEED 15" X 15" RIGHT	110

INDEX

0521054342	LONG FRONT SEED ROW	111
0521055330	SHORT SEED ROW FRONT	112
0521050096	SEED DEPOSIT SYSTEM (CSU)	113
0511052058	SEED SYSTEM TITANIUM	114
0521055349	ASSY DPL20 CUTTING DISC	115
0521055348	LOWER SUPPORT WITH DPL 20 WITHOUT LUBRICATION	116
0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	117
0521053697	CUTTING DISK BOX	118
0503062066	DISC SET WITH CORN RING	119
0503062067	DISC SET / RING SOY 90F TITANIUM	120
0511057530	TRANSMISSION AXLE	121
0511052024	FAST CLOSING SET	122
0521055053	DEEP WHEEL / COMPACTOR SYSTEM	123
0521055065	ASSY DEPTH / COMPACTOR	124
0501056769	DEPTH WHEELS REGULATOR ASSY	125
0521055033	COMPACTADOR BODY	126
0521055054	LEFT ARM WITH SLEEVE	127
0521055066	RIGHT ARM WITH GLOVE	128
0521055068	RAYED WHEEL CENTER CLOSED	129
0521055055	BOX WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	130
0521054990	LEFT COMPACTOR WHEEL	131
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	132
0521055017	RIGHT COMPACTOR WHEEL	133
0521055203	PLANTING MONITORING ASSY 30L 45/50 PM400 18X18	134
0521052143	CLUTCH INDUCTIVE SENSOR ASSEMBLY	135
0521056970	ASSY ELECTRIC BOX SUPPORT	136

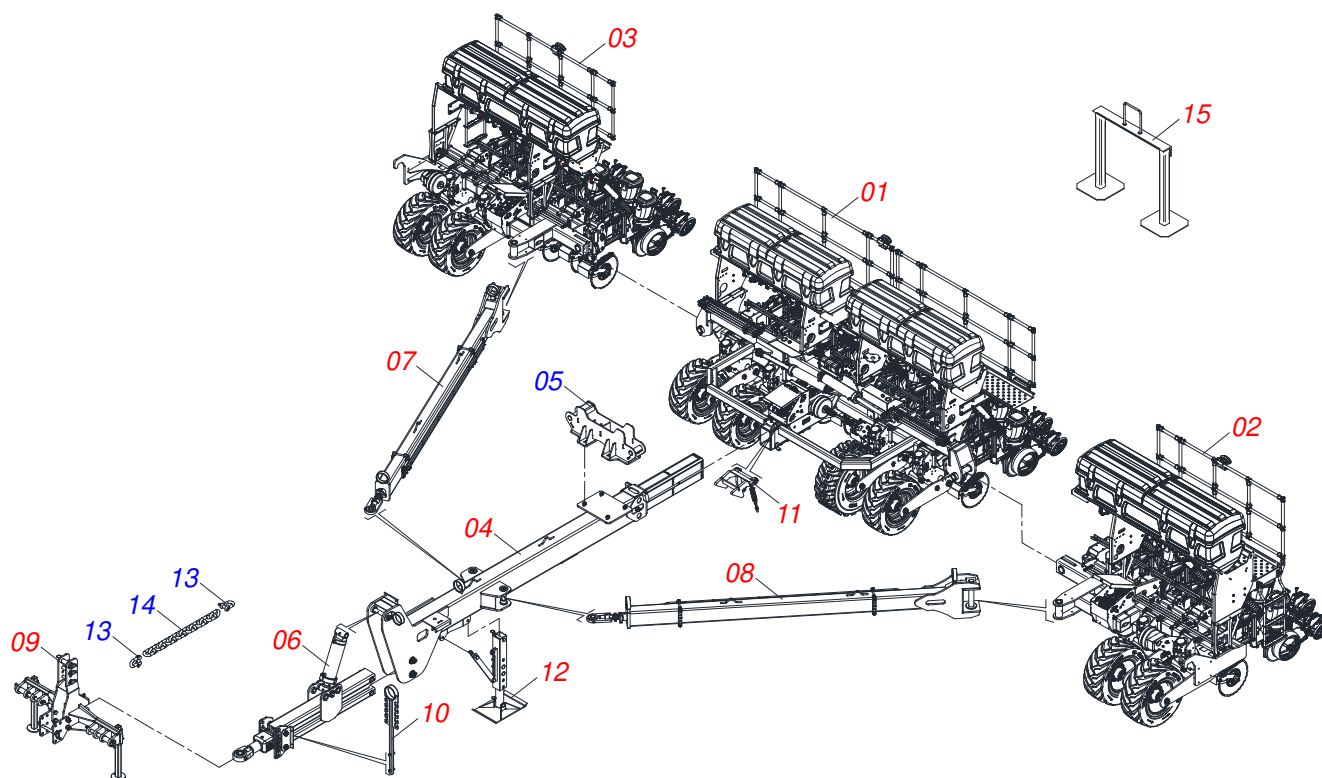

Item	Code	Description	See page	QT
01	0909098787	CHASSI CENTRAL COMPLETO	2	01
02	0909098785	SIDE FRAME LEFT ASSY	3	01
03	0909098786	SIDE FRAME RIGHT ASSY	4	01
04	0521056266	TELESCOPIC FULL	6	01
05	0521069072	TRANSPORT LOCK		01
06	0521055351	PANTOGRAPHY HEADER	8	01
07	0521057492	RIGHT HAND	9	01
08	0521057523	LEFT FRENCH HAND	10	01
09	0521051438	HEADER 3 POINTS ASSY	13	01
10	0521055350	SUPPORT HYDRAULIC HOSE WITH FIXING	14	01
11	0511059814	TELESCOPIC LOCK ASSY	15	01
12	0511052388	REST GREATER ASSY	16	01
13	0503014321	CABLE STEEL SHACKLE		02
14	0503014120	CHAIN		01
15	0511052052	SUPPORT WITH FIXATION	17	04

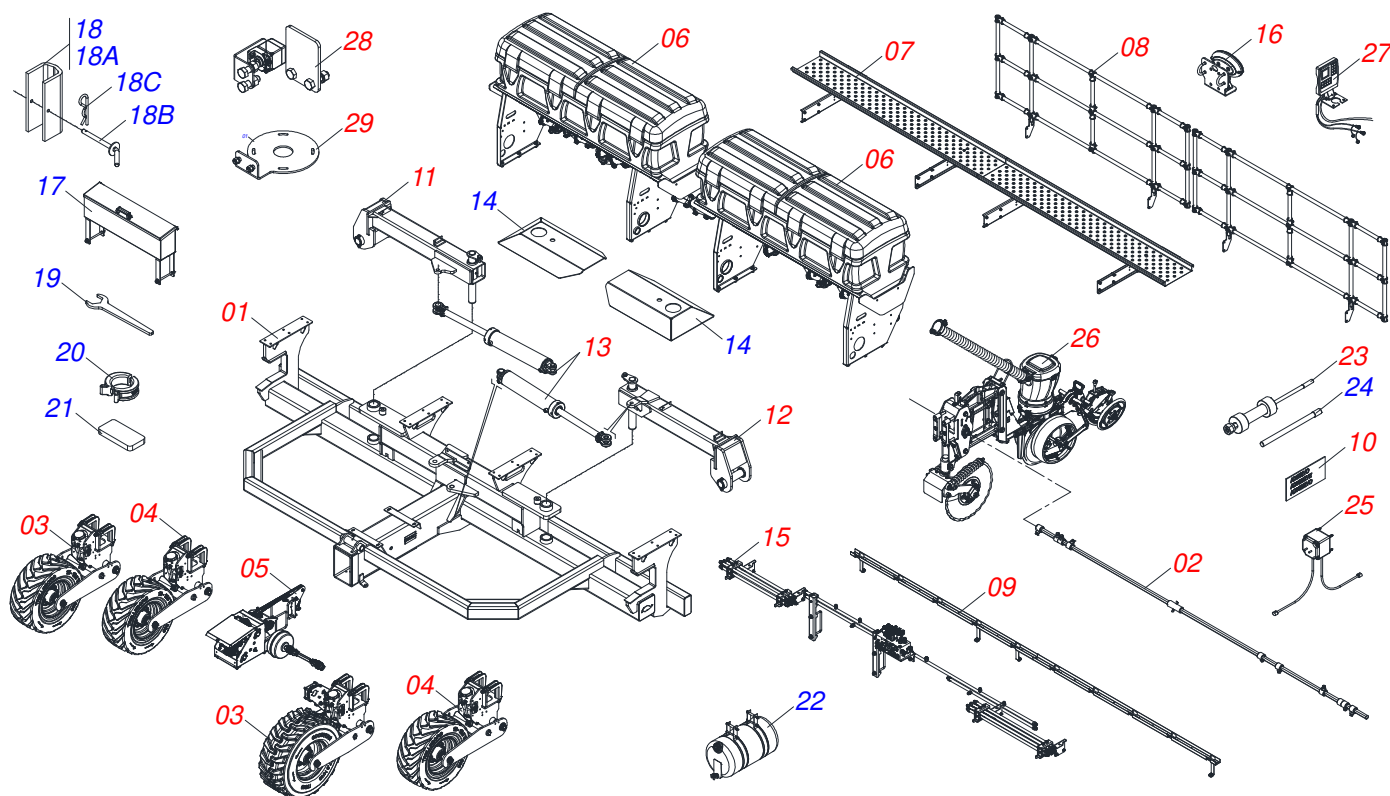

Item	Code	Description	See page	QT
01	0521055603	FRAME CENTRAL 4686 FIXING / LATCH TELESCOPICA	18	01
02	0521057512	ASSY CENTRAL HEX AXLE 30E500	21	01
03	0521055329	CENTRAL WHEEL WITH TRANSMISSION	22	01
04	0521055328	CENTRAL WHEEL WITHOUT TRANSMISSION	23	03
05	0521056971	ASSY CENTRAL EXCHANGE (PAR LINE)	31	01
06	0521057527	CENTRAL SUPPORT WITH	42	01
07	0521053222	PLATFORM ASSY CENTER FRAME 4686	47	01
08	0521057513	CENTRAL HANDRAIL ASSY 30E500	46	01
09	0521057516	CENTRAL GUTTER ASSEMBLY 30E500 CH 4686	48	01
10	0521057564	CENTRAL FRAME ADHESIVE LABEL ASSY	49	01
11	0521052149	ARTICULATION ARM LEFT ASSY	50	01
12	0521052147	ARTICULATION ARM RIGHT ASSY	51	01
13	0521052353	ASSEMBLY CYLINDER ARTICULATED ARM	52	01
14	0581018653	LESSER PROTECTION		01
15	0521057562	SET HIDRAULICO	54	01
16	0521057563	CONJ ELETR	63	01
17	0511053121	GREATER TOOL BOX ASSY	64	01
18	0521055637	ASSY TRANSPORT LOCK		01
18A	0551018312	TRANSPORT LOCK		01
18B	0501068994	0.3" X 3.1" LOCK PIN		01
18C	0503030168	HAIR PIN		01
19	0561016793	FIXED WRENCH		01
20	0501047885	ROD STOP		08
21	0561017063	HOLDER TUBE		02
22	0511054256	COROT WATER		01
23	0521053296	AXIS ARTICULATOR	65	01
24	0581019559	AXIS		01
25	0521057203	ELECTRIC ASSEMBLY MECHANICAL BCE (PACKED)	66	01
26	0909098788	SEED ROW ASSY	5	01


**CHASSI CENTRAL COMPLETO**

0909098787

Item	Code	Description	See page	QT
27	0521055203	PLANTING MONITORING ASSY 30L 45/50 PM400 134 18X18		01
28	0521052143	CLUTCH INDUCTIVE SENSOR ASSEMBLY	135	01
29	0521056970	ASSY ELECTRIC BOX SUPPORT	136	01

SIDE FRAME LEFT ASSY


0909098785

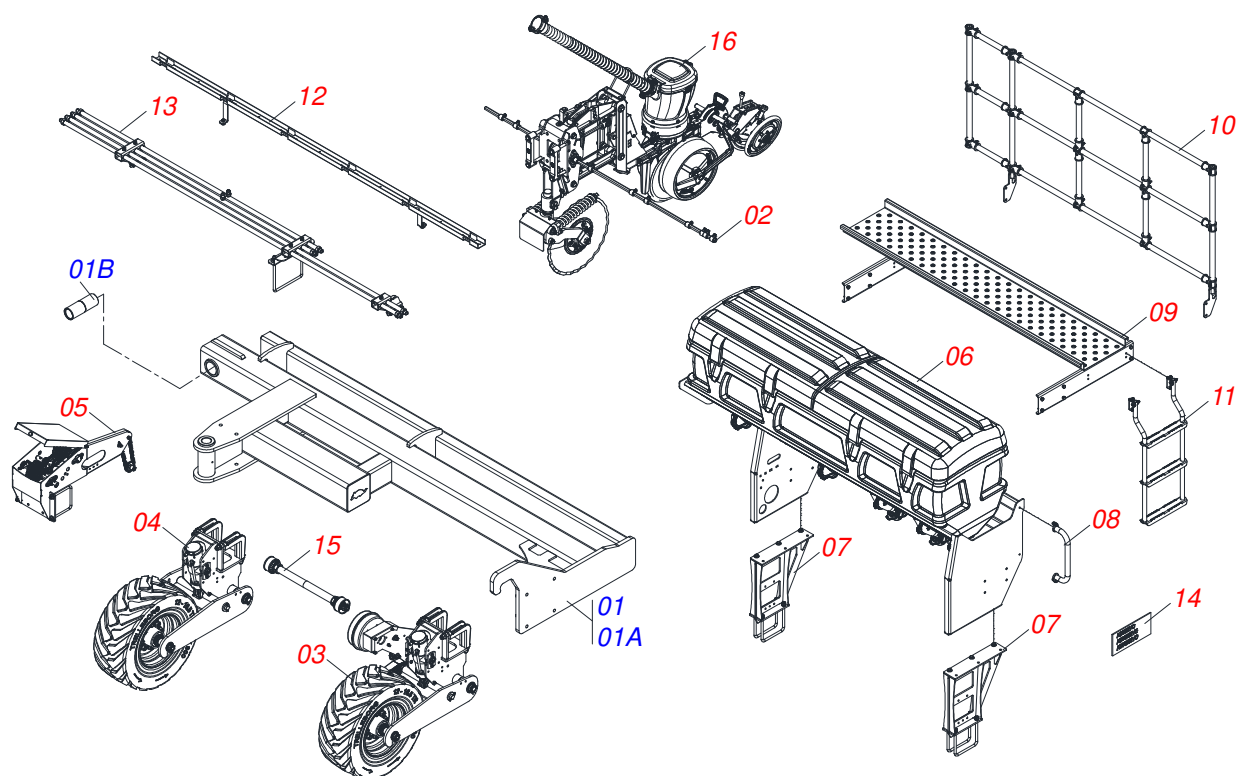


Item	Code	Description	See page	QT
01	0501110981	LEFT FRAME		01
01A	0581012179	SLEEVE		02
01B	0531060084	LEFT FRAME		01
02	0521057504	FRAME 4735 ASSY SIDE HEX AXLE	67	01
03	0521055327	LEFT WHEEL WITH TRANSMISSION	68	01
04	0521055325	SIDE CENTRAL WHEEL WITHOUT TRANSMISSION	69	01
05	0521056027	ASSY LEFT EXCHANGE	70	01
06	0521057524	LEFT SUPPORT	73	02
07	0521051408	SHOE WITH SIDE SUPPORT SILO FIXING	90	02
08	0521053054	ASSY SIDE HANDLE	74	01
09	0521057505	SIDE PLATFORM FRAME 4735	75	01
10	0521057506	LEFT/RIGHT SIDE HANDRAIL	76	01
11	0511053320	ASSY SIDE LADDER	77	01
12	0521057580	SIDE RAIL ASSEMBLY 2330	78	01
13	0521057508	LEFT SIDE DUTY ASSEMBLY	79	01
14	0521057503	SIDE FRAME ADHESIVE LABEL ASSY	80	01
15	0501048783	DRIVE SHAFT	81	01
16	0909098788	SEED ROW ASSY	5	01

SIDE FRAME RIGHT ASSY


0909098786

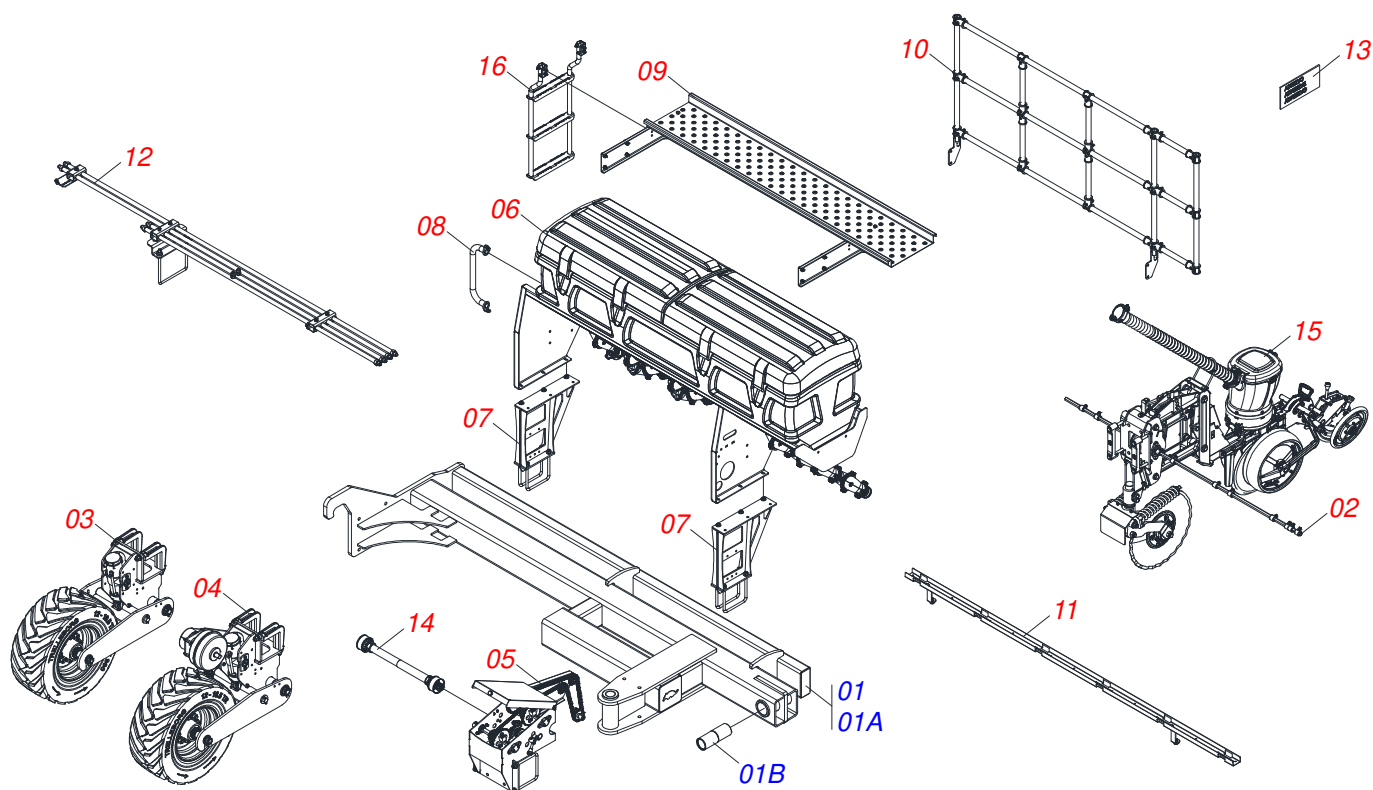


Item	Code	Description	See page	QT
01	0501110980	RIGHT FRAME		01
01A	0581012179	SLEEVE		02
01B	0531060083	LEFT FRAME		01
02	0521057504	FRAME 4735 ASSY SIDE HEX AXLE	67	01
03	0521055326	RIGHT WHEEL WITH TRANSMISSION	82	01
04	0521055325	SIDE CENTRAL WHEEL WITHOUT TRANSMISSION	69	01
05	0521056044	ASSY RIGHT EXCHANGE	88	01
06	0521057525	DISTRIBUTOR RIGHT	89	01
07	0521051408	SHOE WITH SIDE SUPPORT SILO FIXING	90	02
08	0521053054	ASSY SIDE HANDLE	74	01
09	0521057505	SIDE PLATFORM FRAME 4735	75	01
10	0521057511	FRONT SIDE CORRIMAO	91	01
11	0521057580	SIDE RAIL ASSEMBLY 2330	78	01
12	0521057508	LEFT SIDE DUTY ASSEMBLY	79	01
13	0521057503	SIDE FRAME ADHESIVE LABEL ASSY	80	01
14	0501046805	DRIVE SHAFT	92	01
15	0909093565	SEED LINE/ASSY FERTILIZER		01
16	0511053320	ASSY SIDE LADDER	77	01

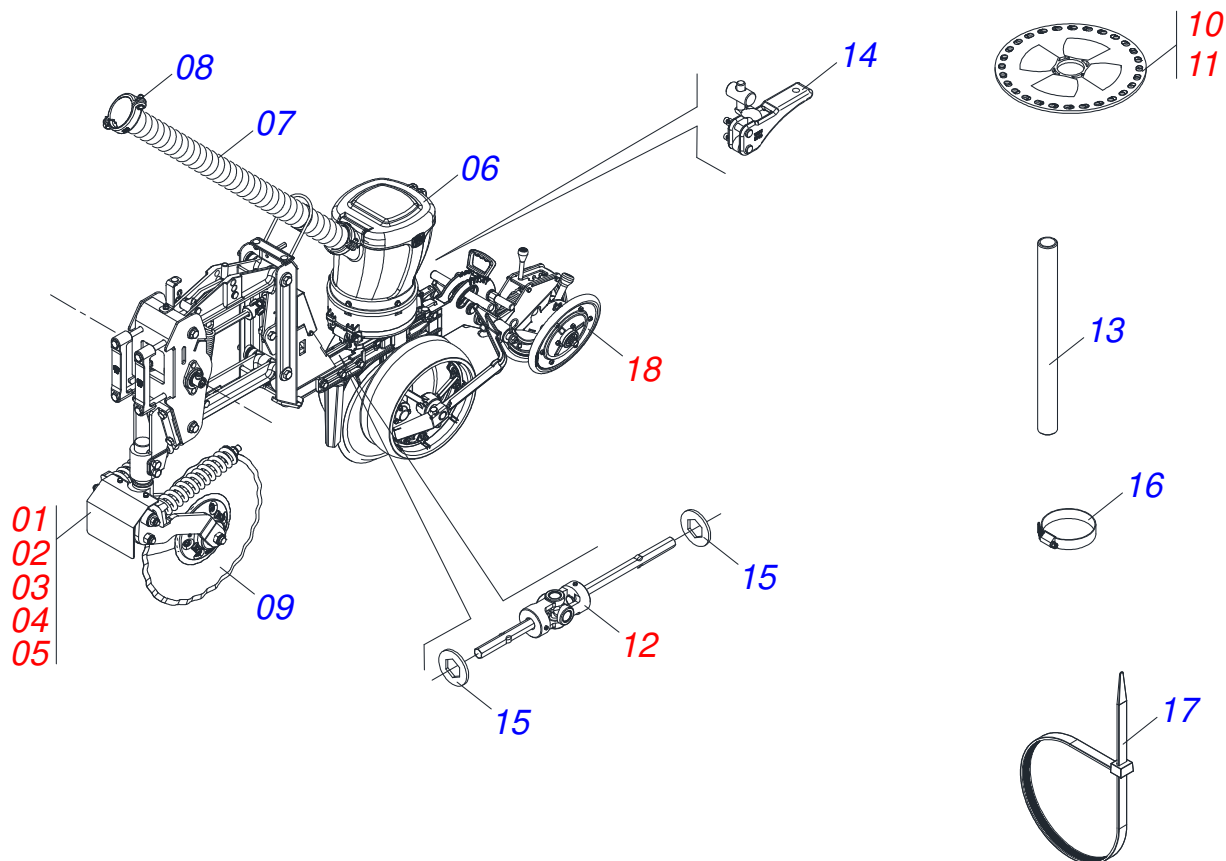

Item	Code	Description	See page	QT
01	0521055375	LEFT LONG ROW	93	01
02	0521055376	RIGHT LONG ROW	94	01
03	0521055376	RIGHT LONG ROW	94	01
04	0521055389	LINEA LONG IZQUIERDO	95	01
05	0521055390	RIGHT LONG ROW	96	01
06	0521050096	SEED DEPOSIT SYSTEM (CSU)	113	01
07	0551016144	3" X 1500 AIR CONDUCTOR		01
08	0521050525	FIXER FERTILIZER CONDUCTOR	44	01
09	0521055349	ASSY DPL20 CUTTING DISC	115	01
10	0503062066	DISC SET WITH CORN RING	119	01
11	0503062067	DISC SET / RING SOY 90F TITANIUM	120	01
12	0511057530	TRANSMISSION AXLE	121	01
13	0531013600	PRESS ADJUSTMENT LEVER		01
14	0511052024	FAST CLOSING SET	122	01
15	0501013352	FLAT WASHER		01
16	0503010246	CLAMP		01
17	0503018829	NYLON CLAMP		01
18	0521055053	DEEP WHEEL / COMPACTOR SYSTEM	123	01

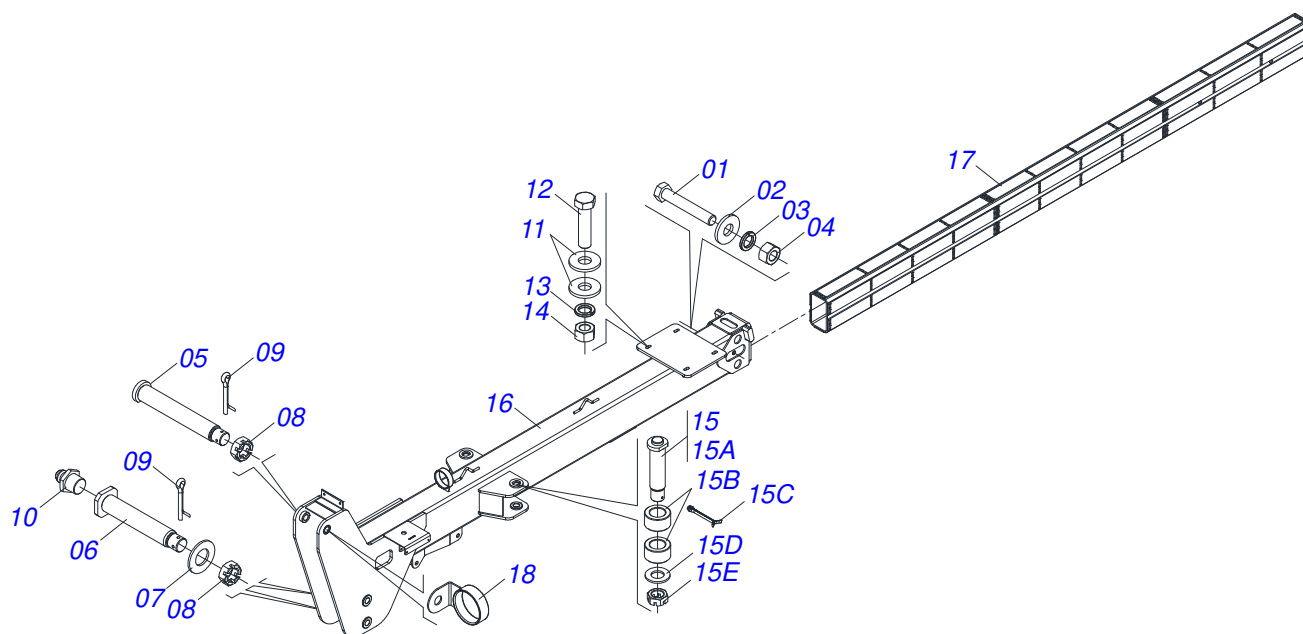


Item	Code	Description	See page	QT
001	0503015764	BOLT 7/8		01
002	0501010076	FLAT WASHER		01
003	0503010408	7/8" SPRING WASHER		01
004	0503010417	7/8" NUT		01
005	0521061436	LOCK AXLE		01
006	0521063022	AXLE LOWER		02
007	0501017779	32 X 60 X 4.75 FLAT WASHER		02
008	0503011052	1.1/4" X 0.77" CASTLE NUT		03
009	0503010038	3/16 X 2 COTTERPIN		03
010	0503010002	1800 GREASE FITTING		02
011	0501012140	FLAT WASHER		08
012	0503010233	5/8" X 2-1/2" BOLT		04
013	0503010027	5/8" SPRING WASHER		04
014	0503010013	5/8" NUT		04
015	0521051433	FRENCH HAND FRONT AXLE ASSY		02
015A	0511069442	FRENCH HAND FRONT AXLE		01
015B	0501017779	32 X 60 X 4.75 FLAT WASHER		01
015C	0503011052	1.1/4" X 0.77" CASTLE NUT		01
015D	0503010038	3/16 X 2 COTTERPIN		01
015E	0581014420	SLEEVE GUIDE		02
016	0531060086	TELESCOPIC HEADER		01
017	0521069860	INTERNAL CANUDE HEADER TELESCOPE 4986		01
018	0521069354	TELESCOPIC HOSE GUIDE		01

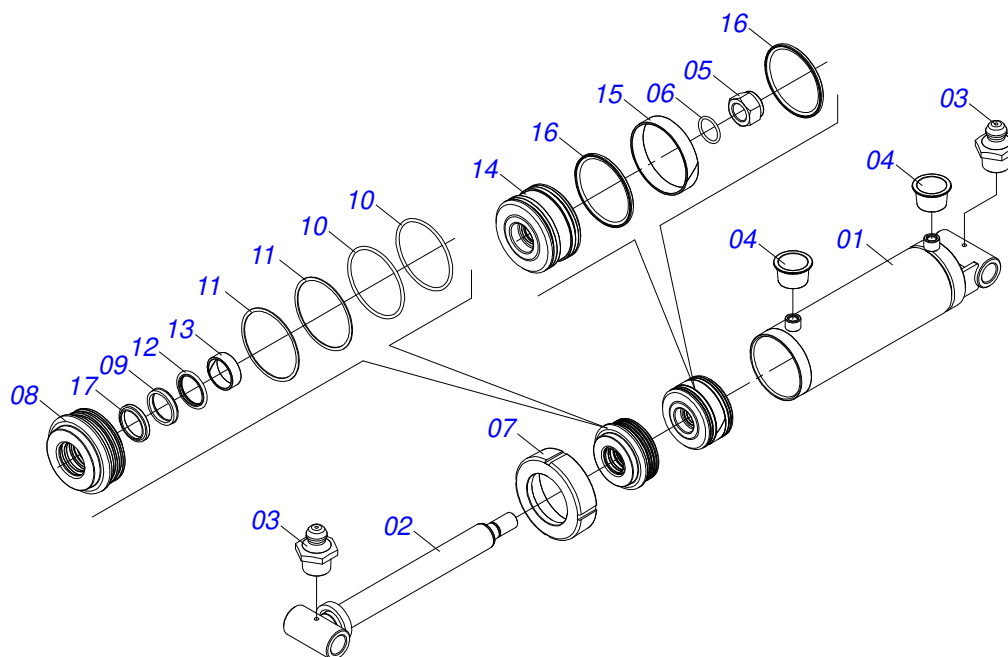


Item	Code	Description	See page	QT
01	0521062362	CYLINDER CASE		01
02	0521062361	ROD CILINDER DRAWBAR HYDRAULIC		01
03	0503010002	1800 GREASE FITTING		02
04	0503030384	CON PLUG N-001		02
05	0503010817	1.1/4" SELF LOCKING NUT		01
06	0503010345	2-218 N 3006-9B O'RING		01
07	0502010382	5" END CAP		01
08	0581010353	RING SUPPORT		01
09	0503018026	1870-2000-375 B GASKET		01
10	0503011453	O'RING		02
11	0503018152	O'RING		02
12	0503018024	RING BS		01
13	0503018025	RING GUIDE		01
14	0581010354	PISTON		01
15	0503018150	RING GUIDE		01
16	0503018151	RING BS		02
17	0503010039	D-2000 SCRAPER RING		01
18	0511032524	ASSY CYLINDER REPAIR KIT 50,8X127 USAP (0511058228)		01

PANTOGRAPHY HEADER


0521055351

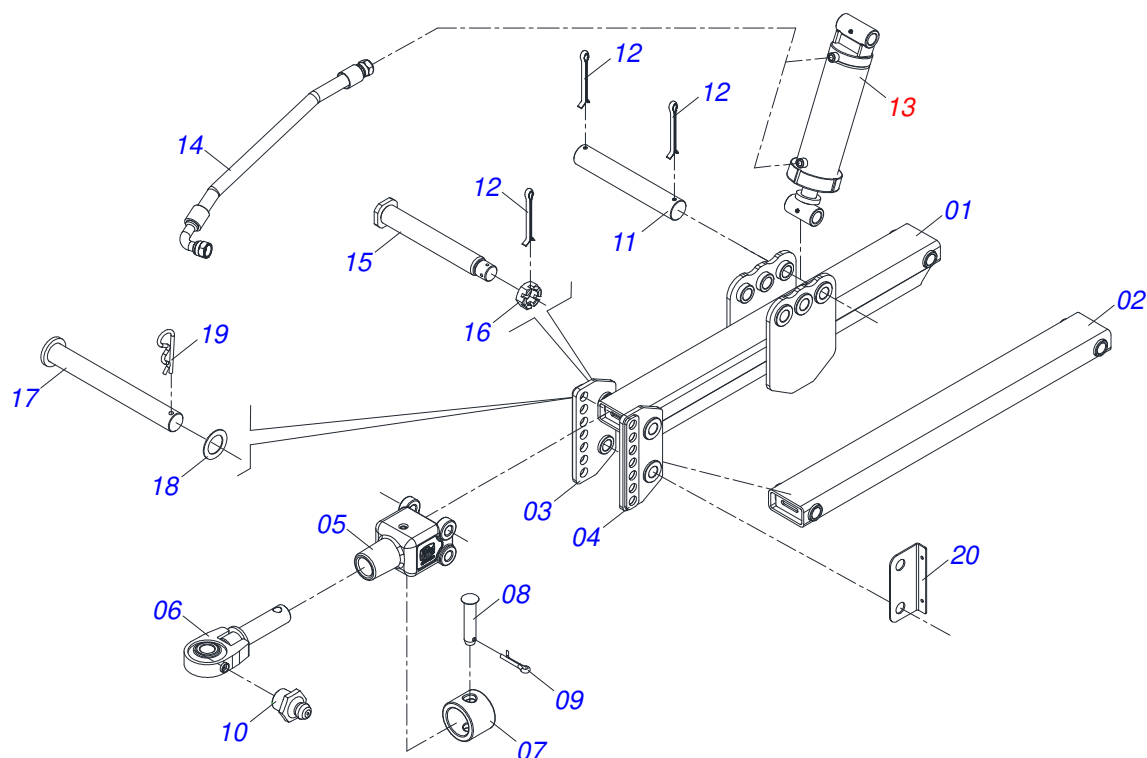


Item	Code	Description	See page	QT
01	0521062955	SEED ARM SUPPORT ROW		01
02	0501079585	ARM USAP		01
03	0521063433	EAR ARM PANTOGRAPH WITH LOOK		01
04	0521069353	EAR ARM PANTOGRAPH		01
05	0502040864	GEAR BOX WITH REGULATOR		01
06	0521068007	TRACTOR HITCH		01
07	1902040327	LOCK SLEEVE		01
08	0521810578	COUPLING SHAFT		01
09	0503010523	1/4" X 2" COTTERPIN		01
10	0503010002	1800 GREASE FITTING		03
11	0571011013	AXLE ARM		01
12	0503012198	3/16" X 2" COTTERPIN		04
13	0511058228	HYDRAULIC CYLINDER DRAWBAR HYDRAULIC	7	01
14	0501081848	HOSE 3/8 X 3200 TR-TM		02
15	0521063022	AXLE LOWER		02
16	0503011052	1.1/4" X 0.77" CASTLE NUT		02
17	0521063432	LOCK AXLE		02
18	0501019435	32 X 50 X 1.5 FLAT WASHER		02
19	0503031035	HAIR PIN		02
20	0581018694	FIXER SUPPORT		01

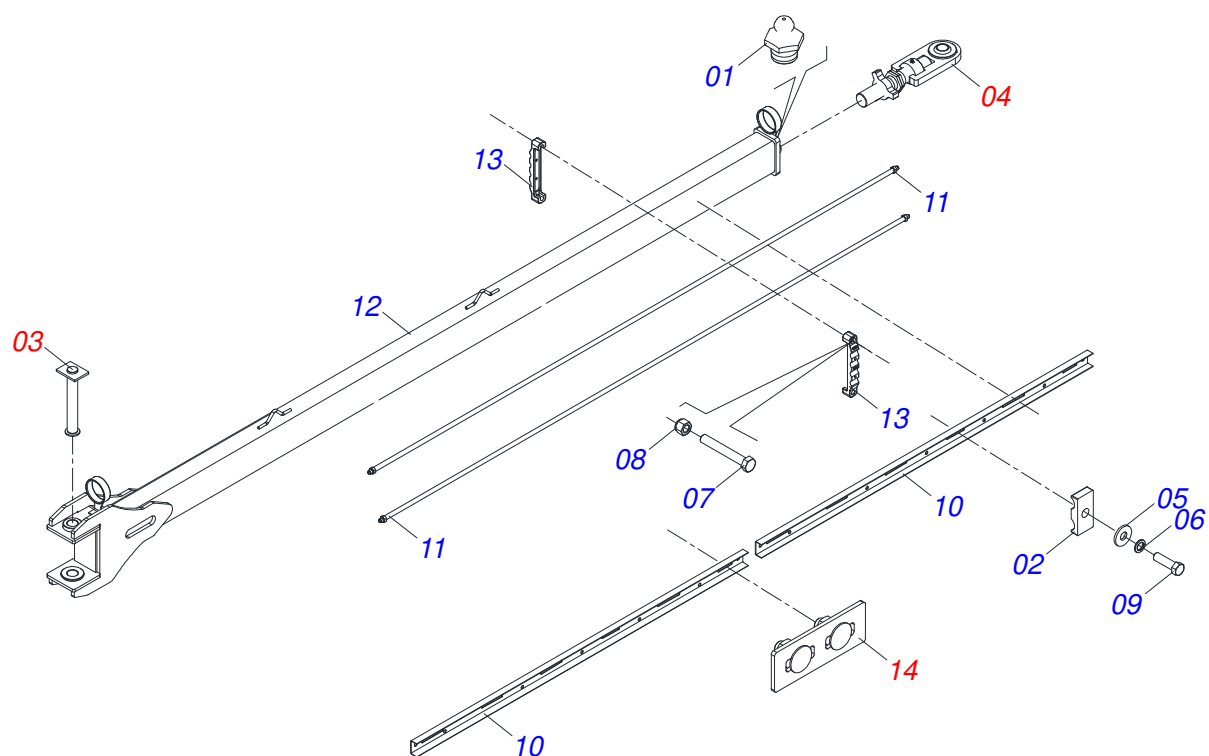


Item	Code	Description	See page	QT
001	0503010002	1800 GREASE FITTING		01
002	1902010477	UPPER CLAMP BODY		03
003	0511054713	ASSY FRENCH HAND TRANSMISSION SHAFT	11	01
004	0511051299	ROTATING RIGHT AXIS EXTENSOR	12	01
005	0501010984	FLAT WASHER		03
006	0503010025	3/8" SPRING WASHER		03
007	0503010964	BOLT		06
008	0503010589	1/2" UNC SELF ADJUSTING NUT		06
009	0503011404	BOLT		03
010	0591010925	FRENCH HAND RAIL		02
011	0521069494	DUCT OIL		02
012	0531060085	FRENCH HAND 4855		01
013	0502012907	FRENCH HAND DUCTS SUPPORT		06
014	0521053050	ASSY RAIL GUIDE		01

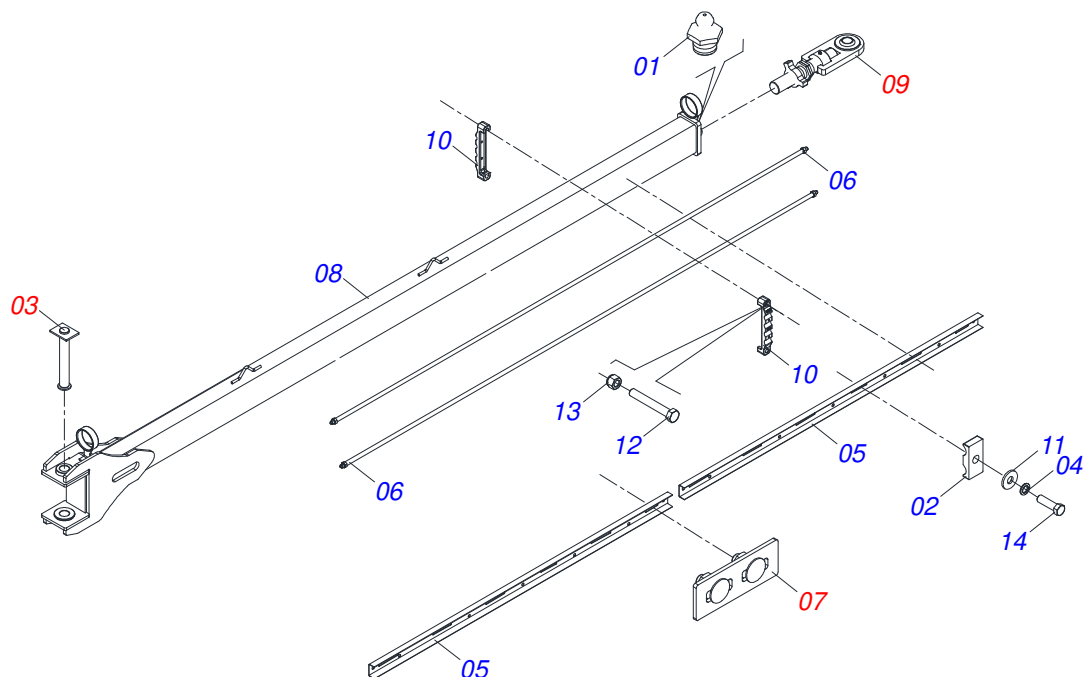

Item	Code	Description	See page	QT
001	0503010002	1800 GREASE FITTING		01
002	1902010477	UPPER CLAMP BODY		03
003	0511054713	ASSY FRENCH HAND TRANSMISSION SHAFT	11	01
004	0503010025	3/8" SPRING WASHER		03
005	0591010925	FRENCH HAND RAIL		02
006	0521069492	DUCT OIL		02
007	0521053050	ASSY RAIL GUIDE		01
008	0531060085	FRENCH HAND 4855		01
009	0501059876	ROTATING LEFT AXIS EXTENSOR		01
010	0502012907	FRENCH HAND DUCTS SUPPORT		06
011	0501010984	FLAT WASHER		03
012	0503010964	BOLT		06
013	0503010589	1/2" UNC SELF ADJUSTING NUT		06
014	0503011404	BOLT		03

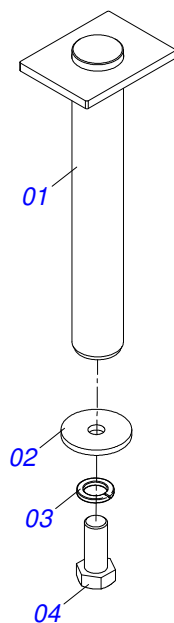


Item	Code	Description	See page	QT
01	0521062244	PIVOT SHAFT		01
02	0551019529	FLAT WASHER		01
03	0503010027	5/8" SPRING WASHER		01
04	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		01

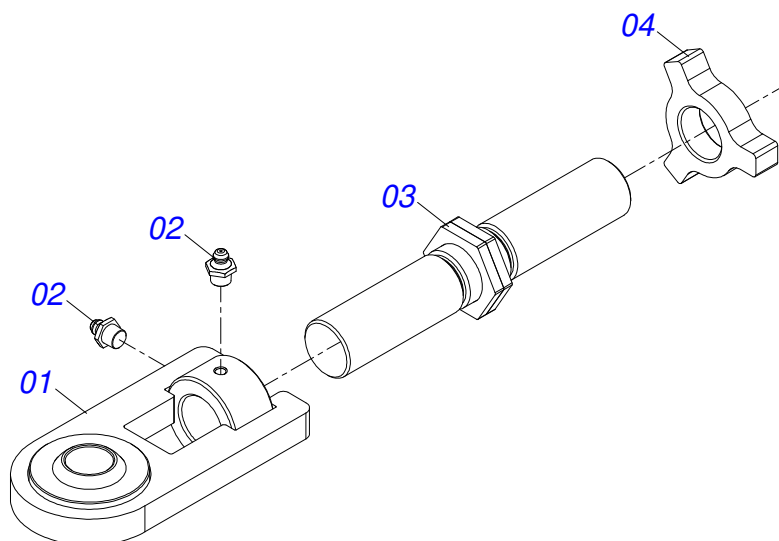


Item	Code	Description	See page	QT
01	0521062617	NUT FIXER		01
02	0503010002	1800 GREASE FITTING		02
03	0501078990	TURNBUCLE AXLE		01
04	0561019879	LOCK ATTACHMENT BAR		01

HEADER 3 POINTS ASSY

0521051438

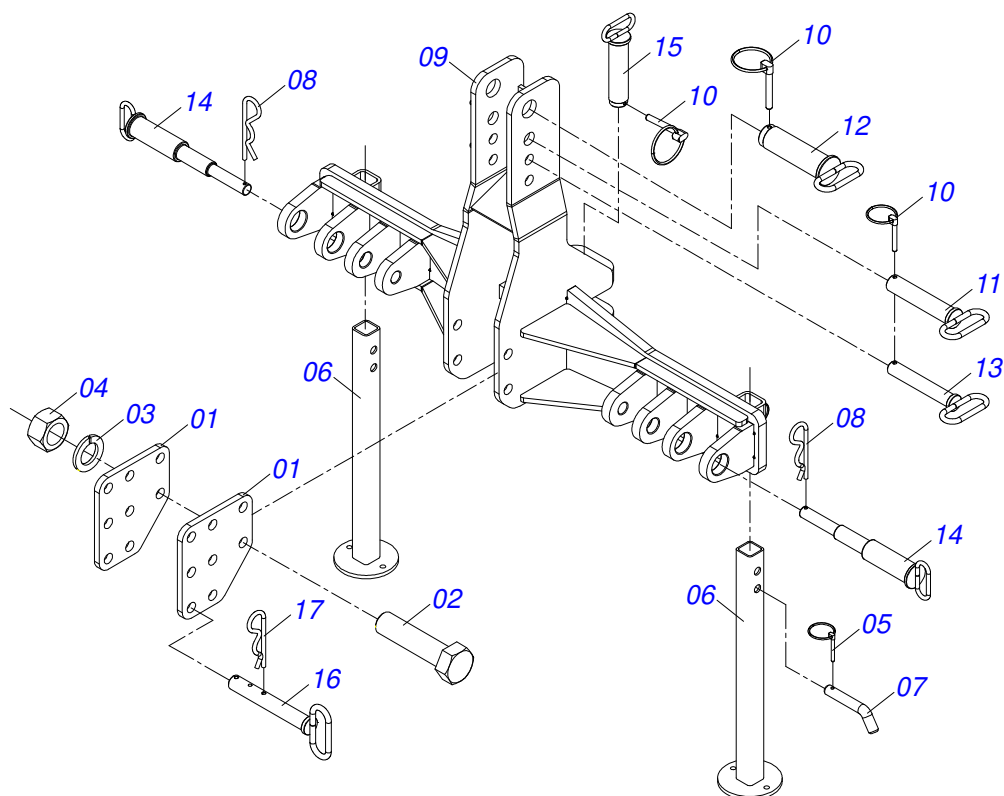


Item	Code	Description	See page	QT
01	0561013456	GUIDE DRAWBAR ASSY		02
02	0501010276	BOLT		04
03	0503010012	1" SPRING WASHER		04
04	0501010059	1.5/8 NUT		04
05	0503030119	LOCK PIN		02
06	0511069471	PLOUGH SUPPORT		02
07	0501011075	PIN		02
08	0503030285	HAIR PIN		02
09	0521068020	DRAWBAR ASSY		01
10	0503030085	LOCK PIN		04
11	0521068018	UPPER AXLE		01
12	0521068015	UPPER AXLE		01
13	0521068013	UPPER AXLE		01
14	0521068011	AXLE LOWER		02
15	0521068010	HITCH AXLE		01
16	0521068009	UPPER AXLE		01
17	0503031035	HAIR PIN		01

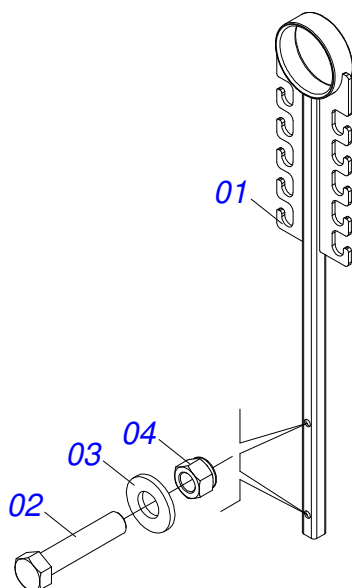


Item	Code	Description	See page	QT
01	0521069352	HYDRAULIC HOSE SUPPORT		01
02	0501010096	3/8" X 2" BOLT		02
03	0501010984	FLAT WASHER		02
04	0503013357	3/8" SELF-ADJUSTING NUT		02

TELESCOPIC LOCK ASSY


0511059814

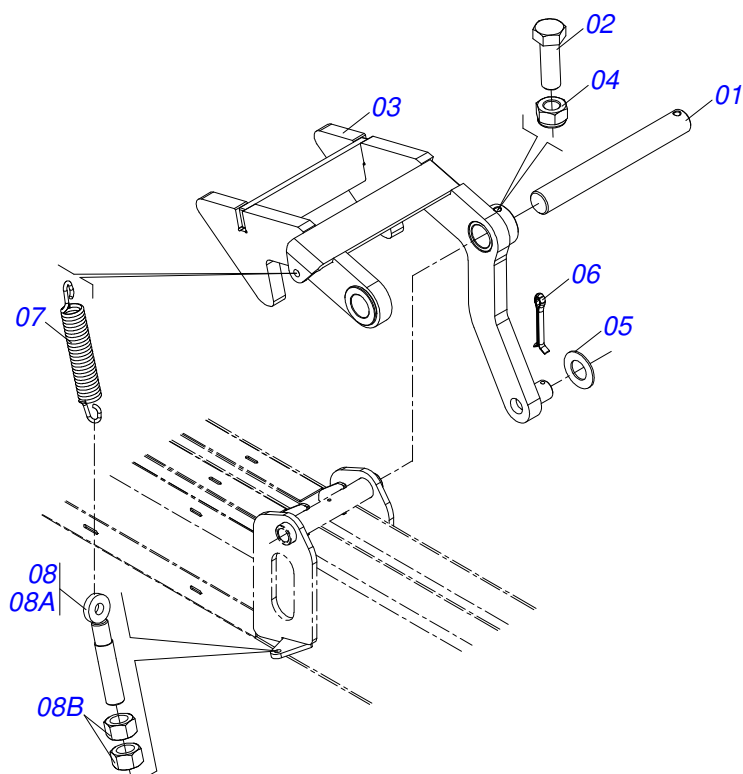


Item	Code	Description	See page	QT
01	0571015072	LOCK AXLE		01
02	0503010765	3/8" X 3" BOLT		01
03	0521064540	TELESCOPIC LOCK		01
04	0503013357	3/8" SELF-ADJUSTING NUT		01
05	0521011132	FLAT WASHER		01
06	0503010131	3/16" X 1-1/2" COTTERPIN		01
07	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
08	0511054270	TENSIONER SPRING		01
08A	0511069520	TELESC LOCK SPRING TENSIONER		01
08B	0503010013	5/8" NUT		02

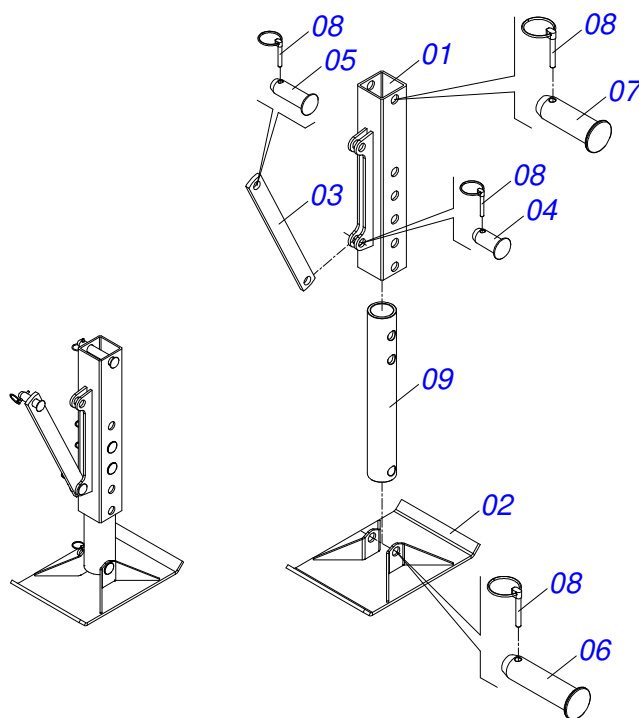


Item	Code	Description	See page	QT
01	0521063510	PLOUGH SUPPORT		01
02	0521063509	FRAME BRACKET		01
03	0571012421	FIXER ARM		01
04	0501014063	25 X 55 COUPLING SHAFT		01
05	0521010596	COUPLING SHAFT		03
06	0521010585	0.9" X 5.9" COUPLING SHAFT		01
07	0521010574	C0.9" X 3.3" COUPLING SHAFT		01
08	0503030085	LOCK PIN		06
09	0571013317	INNER TUBE		01

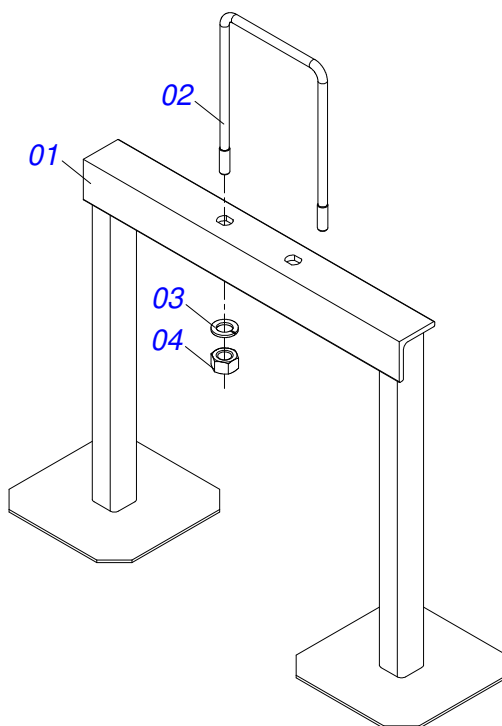


Item	Code	Description	See page	QT
01	0521063339	HIGHER		06
02	0571011070	5/8" UNC FASTENER		06
03	0503010027	5/8" SPRING WASHER		12
04	0503010013	5/8" NUT		12

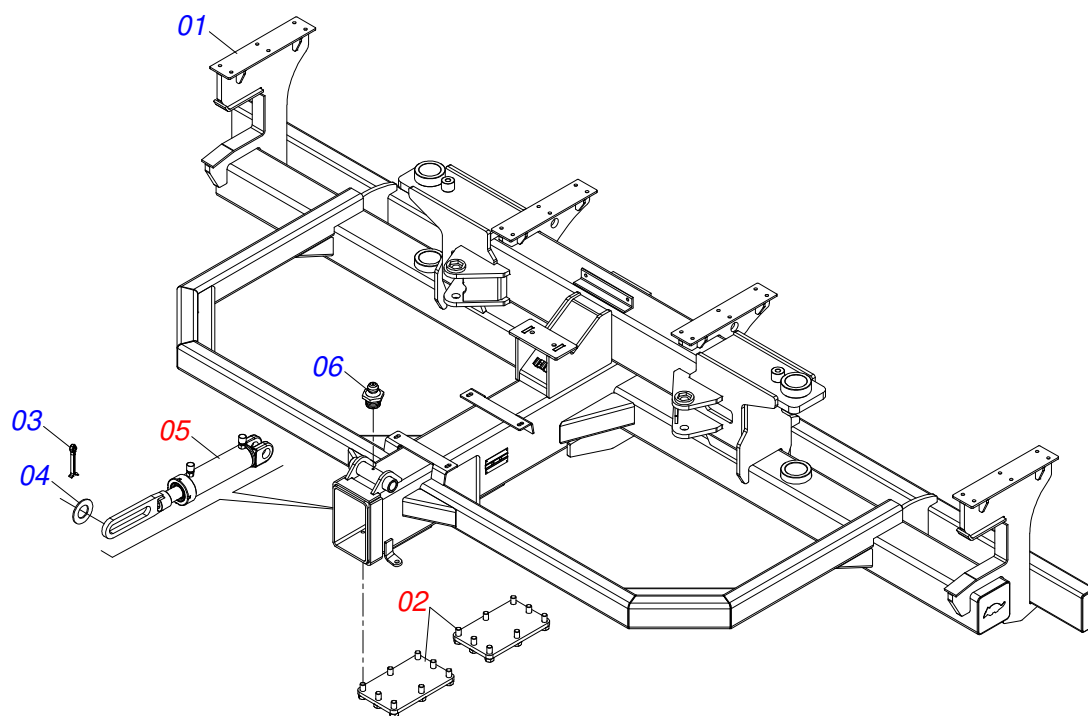


Item	Code	Description	See page	QT
01	0521069762	CENTRAL FRAME 4686		01
02	0521050019	TIGHTENING PLATE WITH FIXING INTERNAL	19	02
03	0503010131	3/16" X 1-1/2" COTTERPIN		01
04	0521011132	FLAT WASHER		01
05	0521052189	38,10X63,50X386X148 HYDRAULIC CYLINDER	20	01
06	0503010002	1800 GREASE FITTING		01

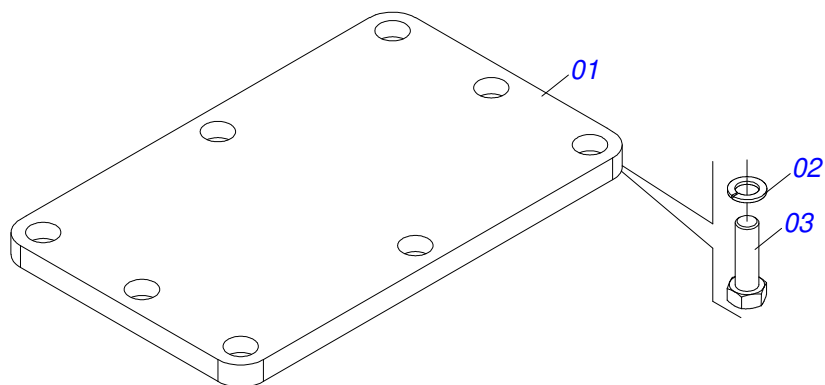

Item	Code	Description	See page	QT
01	0571015217	TUBE ADJUSTMENT PLATE		01
02	0503010027	5/8" SPRING WASHER		08
03	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		08

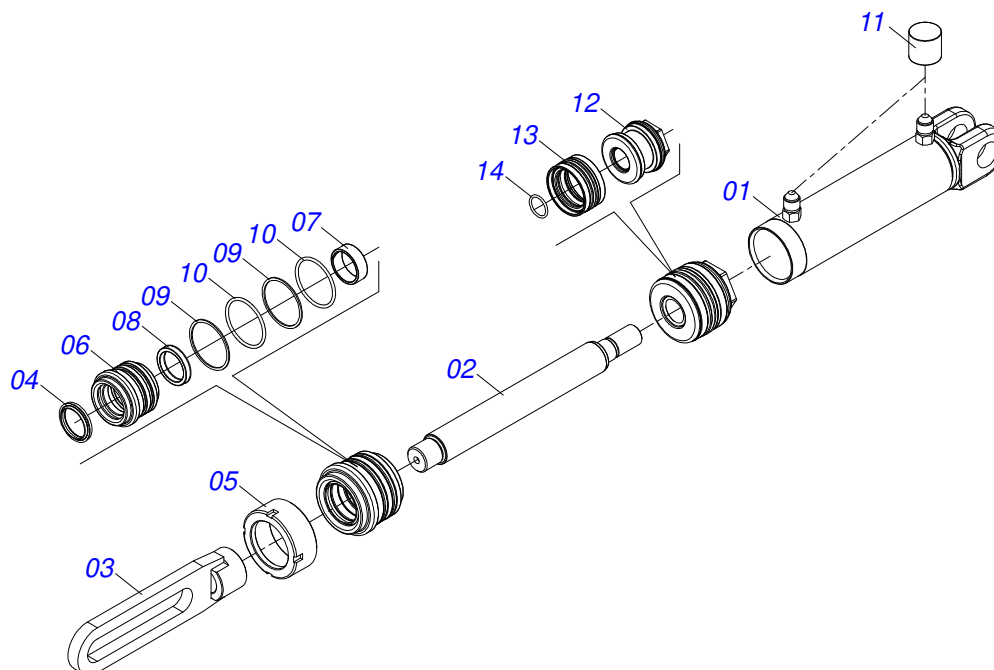


Item	Code	Description	See page	QT
01	0521068383	CYLINDER CASE		01
02	0581010670	CORPO HASTE 38,10 X 345		01
03	0511070058	GUIDE HIDRAULIC		01
04	0503010163	D-1500 SCRAPER RING		01
05	0502010471	MOBILE COVER		01
06	0581010668	RING SUPPORT		01
07	0503018004	RING		01
08	0503018003	GASKET		01
09	0503018163	BACK-UP RING		02
10	0503018162	O'RING		02
11	0503030385	CYLINDER PLUG N-002		02
12	0502012837	PISTON		01
13	0503018005	RING		01
14	0503011109	2-119 N 3006-9B O'RING		01
15	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

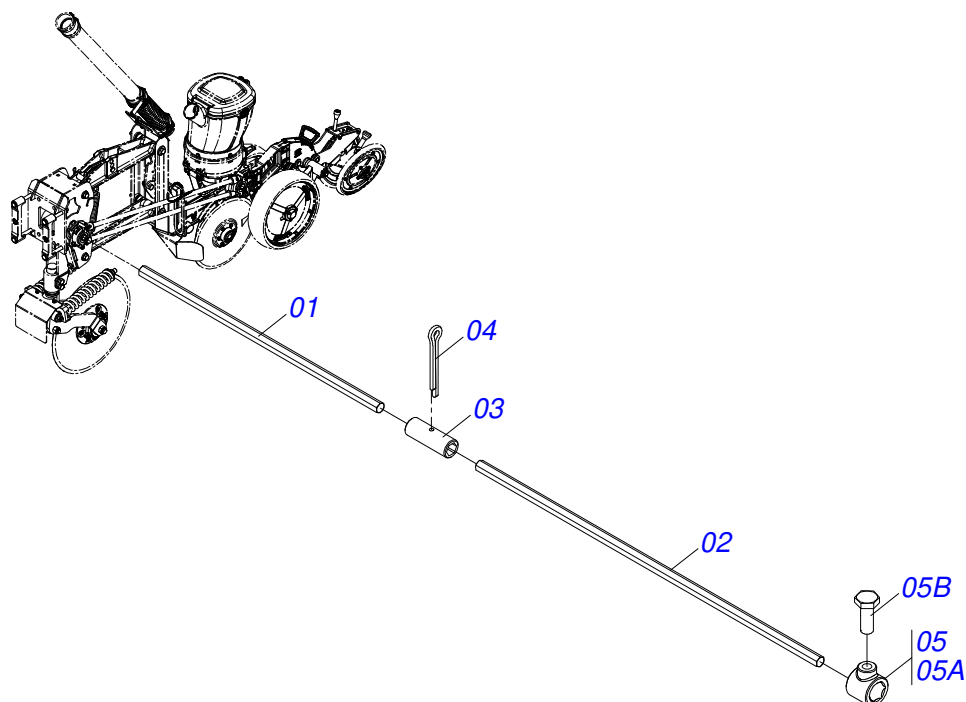

Item	Code	Description	See page	QT
01	0581019589	3/4 X 2360 HEX AXLE		01
02	0561016762	3/4 X 2390 HEX AXLE		01
03	0561015837	SLEEVE 31,75		01
04	0503010523	1/4" X 2" COTTERPIN		01
05	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		24
05A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
05B	0503010256	3/8" X 3/4" BOLT		01

CENTRAL WHEEL WITH TRANSMISSION

0521055329

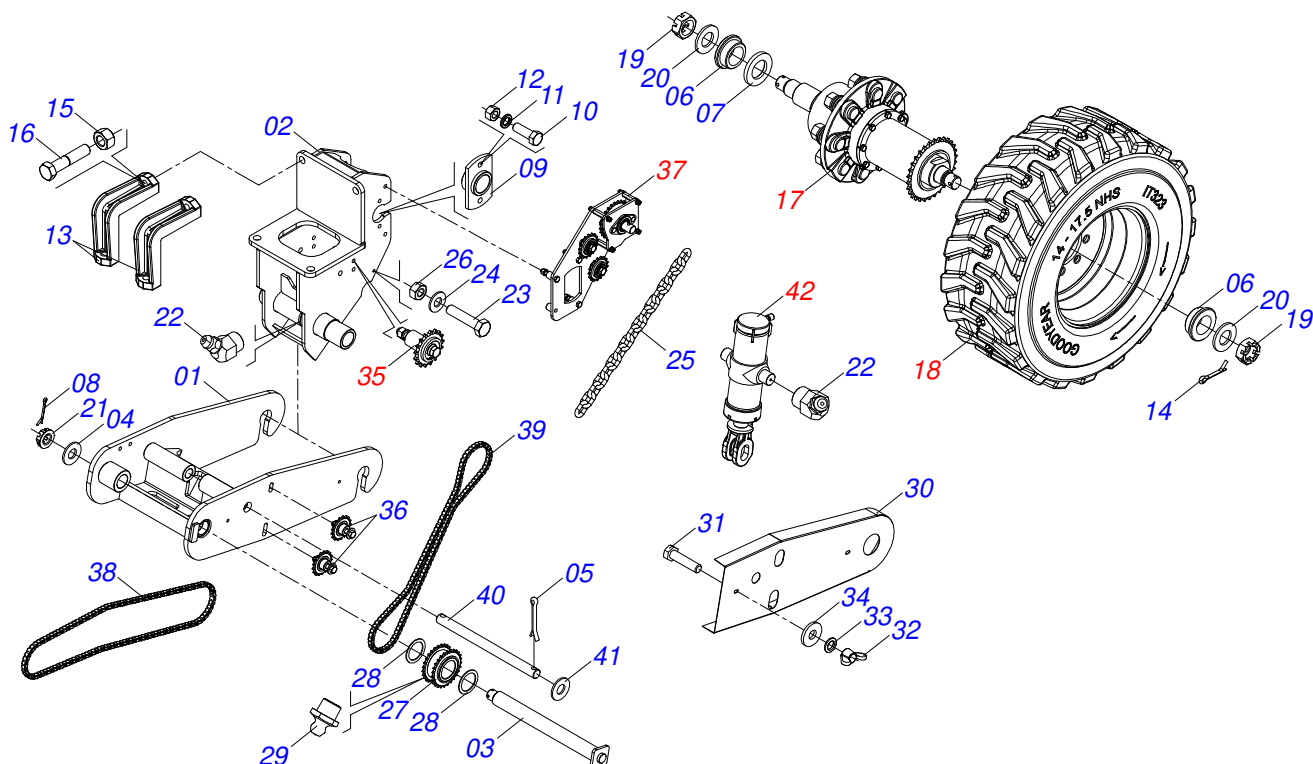

Item	Code	Description	See page	QT
01	0521064554	LEFT WHEEL FORK		01
02	0521064543	WHEEL SUPPORT		01
03	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
04	0561019929	FLAT WASHER		01
05	0503010523	1/4" X 2" COTTERPIN		02
06	0551014511	CARRYING WHEELS AXLE SLEVE GUIDES		02
07	0551014508	FLAT WASHER		01
08	0503010010	1/4" X 2.1/2" COTTERPIN		01
09	0521069575	FLANGE CYLINDER HYDRAULIC FIXER		02
10	0503010920	1/2" X 1.1/2" BOLT		04
11	0503010019	1/2" SPRING WASHER		04
12	0503010060	1/2" NUT		04
13	0502012731	WHEEL HOLDER		02
14	0503010571	1/4" X 1.1/2 COTTERPIN		02
15	0503011075	3/4" UNC NUT		04
16	0503012334	3/4" UNC X 3.1/2" BOLT		04
17	0511054492	STUB SHAFT HUB	24	01
18	0503060684	14 X 17.5/14L TR SK900 LEFT - WHEEL AND TIRE	28	01
19	0503011052	1.1/4" X 0.77" CASTLE NUT		02
20	0501017779	32 X 60 X 4.75 FLAT WASHER		02
21	0501010630	1.1/2" CASTLE NUT		01
22	0503010003	1845 GREASE FITTING		03
23	0503010882	BOLT		01
24	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
25	0503033458	CURRENT 6 X 17 ELOS		01
26	0503010337	5/16" NUT		01
27	0511068422	WHEEL GEAR DOBLE		01
28	0551018571	FLAT WASHER		02
29	0503010002	1800 GREASE FITTING		01
30	0571015153	COVER PROTECTION WHEELED LARGER		01
31	0503010849	3/8" X 1-1/2" BOLT		02


CENTRAL WHEEL WITH TRANSMISSION

0521055329

Item	Code	Description	See page	QT
32	0503010209	3/8" UNC BUTTERFLY NUT		02
33	0503010025	3/8" SPRING WASHER		02
34	0501010984	FLAT WASHER		02
35	0511054463	WHEEL TENSIONER SUPORT CENTRAL	85	01
36	0511054464	WHEEL FORK TENSIONER	86	02
37	0511054499	TRANSMISSION OF LARGER CENTRAL EXCHANGE	25	01
38	0503016419	50-1 CHAIN X 128 LINK + REDUCION		01
39	0503014507	CHAIN LINK + MENDING		01
40	0581017245	AXLE BODY		01
41	0531012874	FLAT WASHER		02
42	0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	30	01

CENTRAL WHEEL WITHOUT TRANSMISSION


0521055328

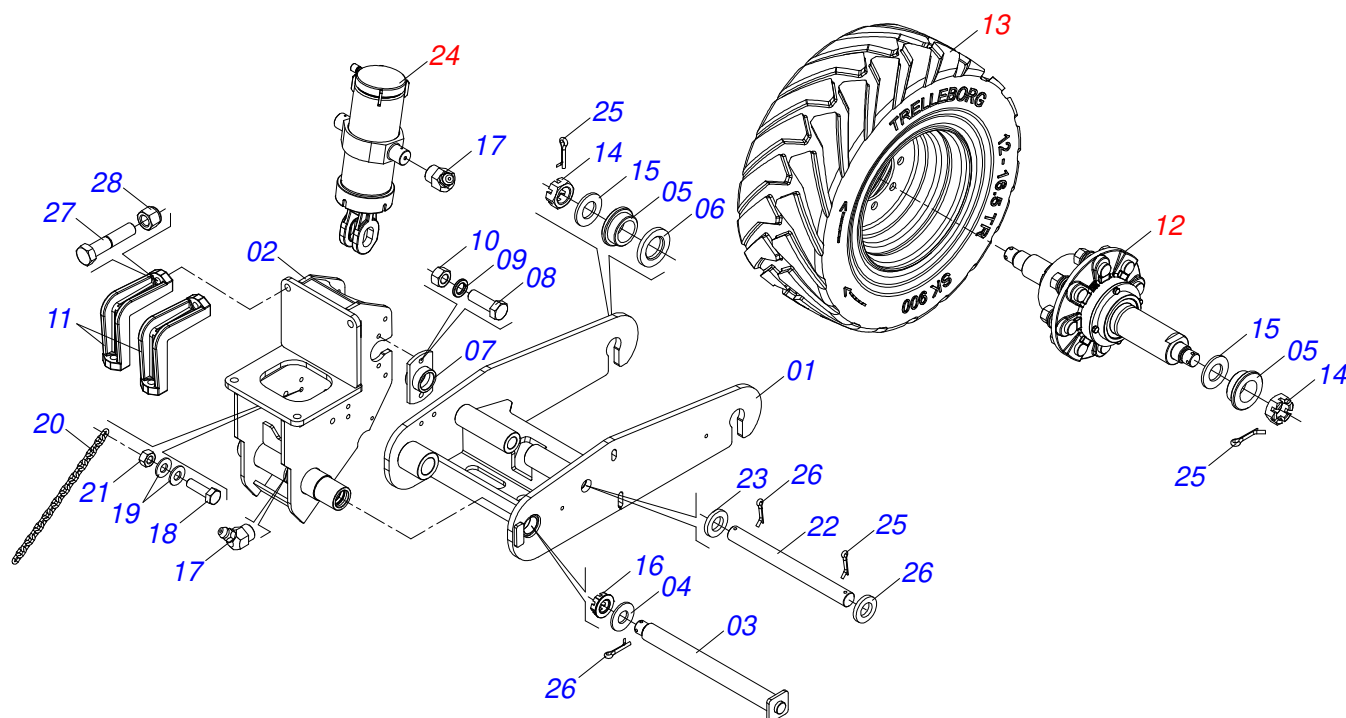


Item	Code	Description	See page	QT
01	0521064554	LEFT WHEEL FORK		01
02	0521064543	WHEEL SUPPORT		01
03	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
04	0561019929	FLAT WASHER		01
05	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
06	0551014508	FLAT WASHER		01
07	0521069575	FLANGE CYLINDER HYDRAULIC FIXER		02
08	0503010920	1/2" X 1.1/2" BOLT		04
09	0503010019	1/2" SPRING WASHER		04
10	0503010060	1/2" NUT		04
11	0502012731	WHEEL HOLDER		02
12	0511054495	WHEEL WITHOUT TIRE WITHOUT TRANSMISSION	29	01
13	0503060684	14 X 17.5/14L TR SK900 LEFT - WHEEL AND TIRE	28	01
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0501017779	32 X 60 X 4.75 FLAT WASHER		02
16	0501010630	1.1/2" CASTLE NUT		01
17	0503010003	1845 GREASE FITTING		03
18	0503010882	BOLT		01
19	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
20	0503033458	CURRENT 6 X 17 ELOS		01
21	0503010337	5/16" NUT		01
22	0581017245	AXLE BODY		01
23	0531012874	FLAT WASHER		02
24	0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	30	01
25	0503010571	1/4" X 1.1/2 COTTERPIN		02
26	0503010523	1/4" X 2" COTTERPIN		03
27	0503012334	3/4" UNC X 3.1/2" BOLT		04
28	0503011075	3/4" UNC NUT		04

STUB SHAFT HUB


0511054492

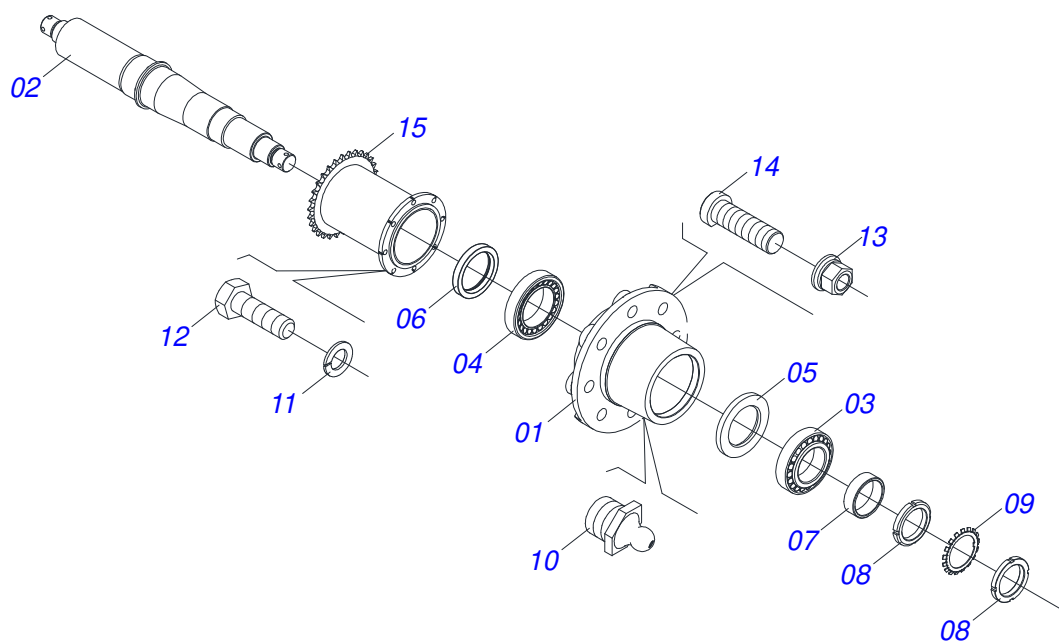


Item	Code	Description	See page	QT
01	0502040760	CARRYING WHEEL HUB		01
02	0571015180	WHEEL AXLE		01
03	0503010007	3982/3920 ROLLER BEARING		01
04	0503010059	33287/33462 ROLLER BEARING		01
05	0503010009	RETAINER 00573-B		01
06	0503010086	SEAL 0009B-B		01
07	0551014473	GLOVE		01
08	0503012702	KM-12 NUT		02
09	0503012703	LOCK WASHER		01
10	0503010002	1800 GREASE FITTING		01
11	0503011444	SPRING WASHER		08
12	0503011339	M22 X 1,5 X 72 BOLT		08
13	0503014048	22 X 1.5 HEX NUT		08
14	0503010363	5/16" X 1" BOLT		08
15	0521064564	30Z GEAR		01

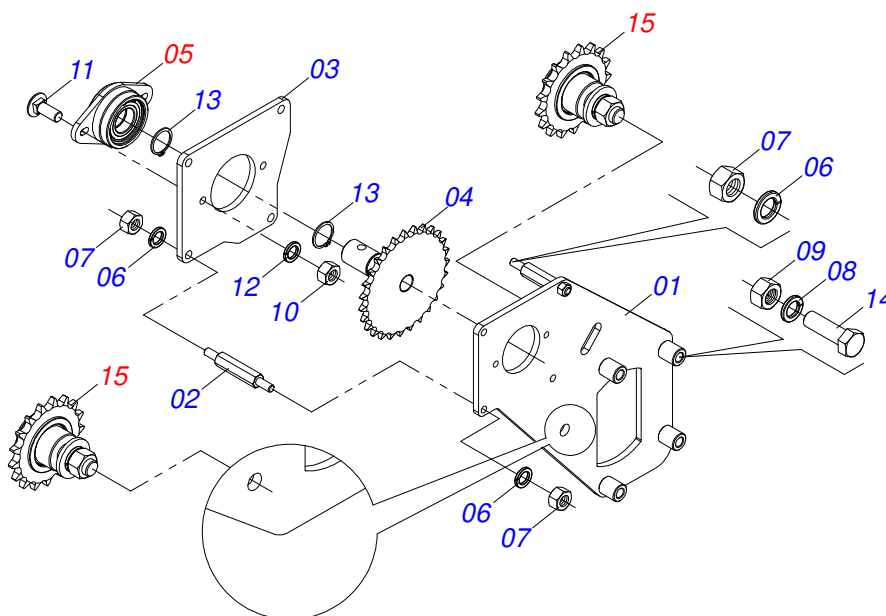


Item	Code	Description	See page	QT
01	0521064557	SUPPORT SET TRANSMISSION WHEEL SIDE		01
02	0571015141	FIXER CENTRAL TRANSMISSION		04
03	0571015151	SUPPORT BEARING		01
04	0521061795	27Z GEAR		01
05	0501053654	DOUBLE BEARING TRANSMISSION SEED 3/4	26	01
06	0503010025	3/8" SPRING WASHER		08
07	0503010026	3/8" NUT		08
08	0503010019	1/2" SPRING WASHER		03
09	0503010060	1/2" NUT		03
10	0503010337	5/16" NUT		02
11	0503011953	5/16" X 1" BOLT		02
12	0503010179	5/16" ZN SPRING WASHER		02
13	0503010707	501030 CLAMPING RING (FOR AXLE)		02
14	0503010741	1/2" X 2-3/4" BOLT		03
15	0511054461	STRETCHER TOP TRANSMISSION SWIRLED	27	02

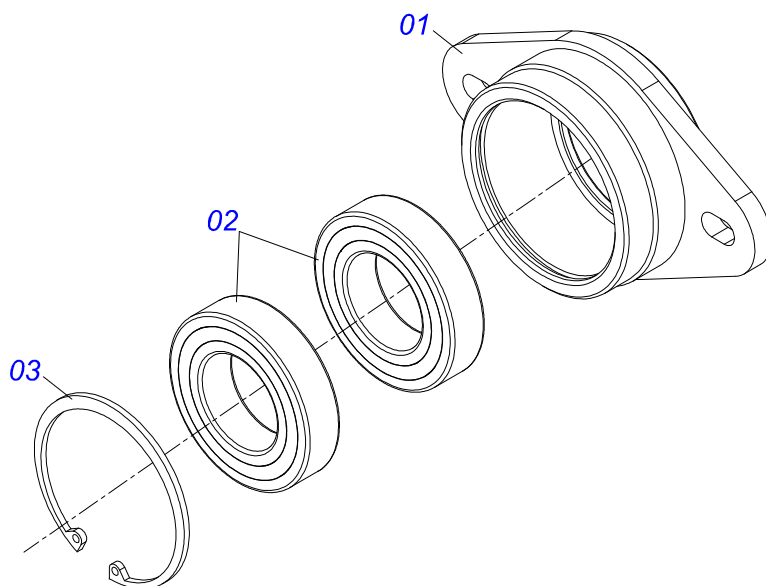


Item	Code	Description	See page	QT
01	0502012031	HOUSING BEARING		01
02	0503012861	6006 2RS BALL BEARING		02
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01

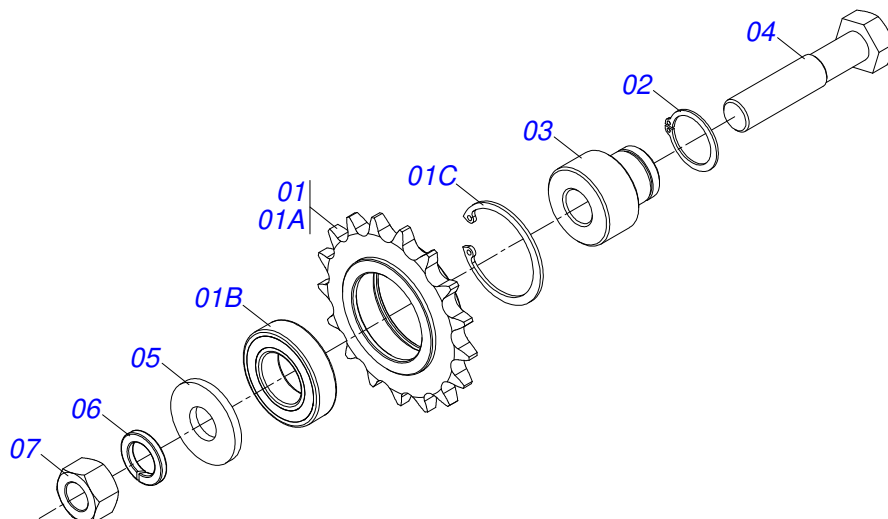


Item	Code	Description	See page	QT
01	0521055499	GEAR WITH NATIONAL BEARING		01
01A	0511061836	17Z GEAR		01
01B	0503019356	BEARING 6005 2RS1		01
01C	0503011105	SEAL RING		01
02	0571015146	TIGHTENER AXLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0501011541	5/8" X 3" BOLT		01
05	0501012140	FLAT WASHER		01
06	0503010027	5/8" SPRING WASHER		01
07	0503010013	5/8" NUT		01

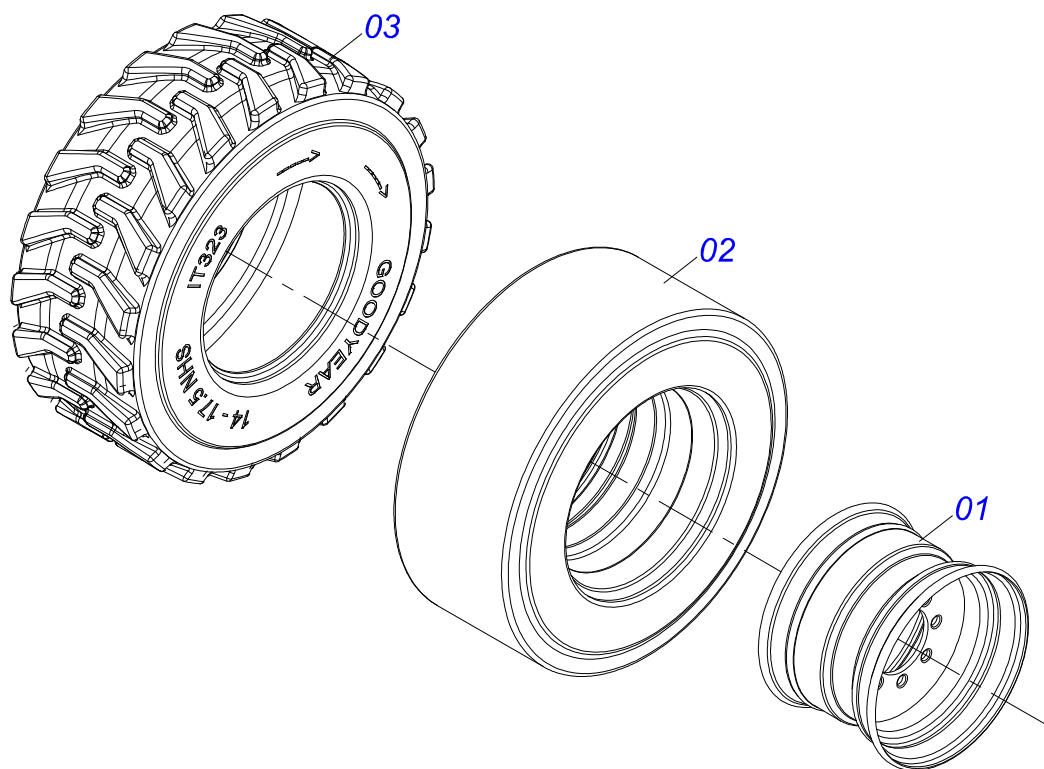


Item	Code	Description	See page	QT
01	0511065331	11.75 X 17.5 HOOP WHEEL		01
02	0503015355	INNER TIRE		01
03	0503013247	PLY TIRE		01

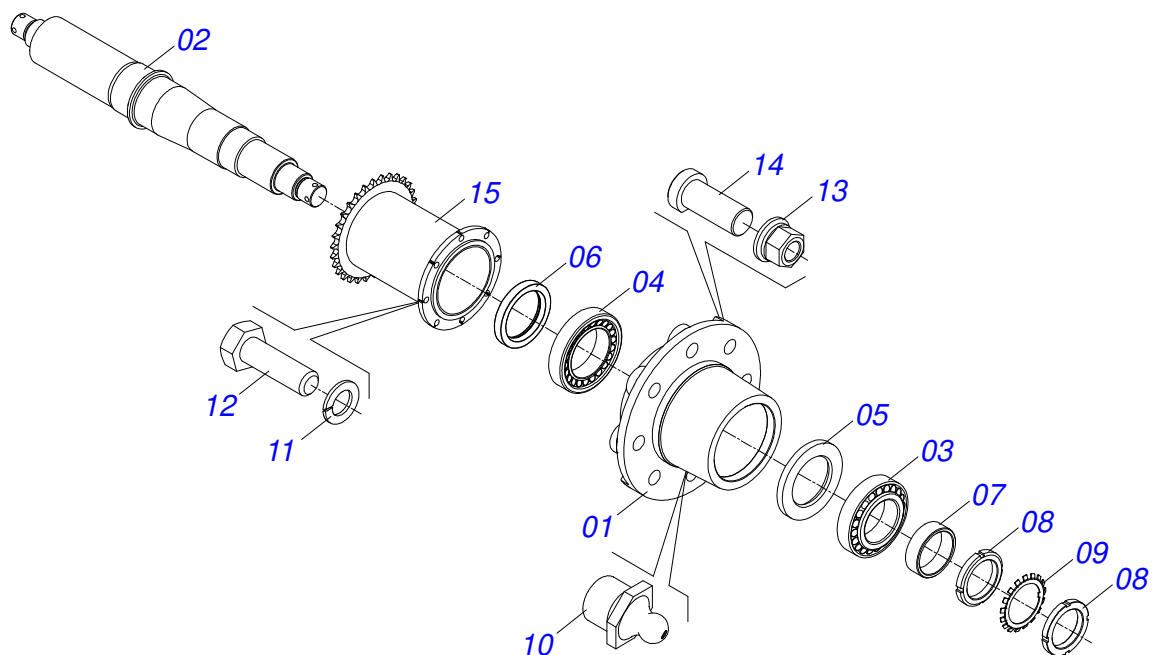

Item	Code	Description	See page	QT
01	0502040760	CARRYING WHEEL HUB		01
02	0571015180	WHEEL AXLE		01
03	0503010007	3982/3920 ROLLER BEARING		01
04	0503010059	33287/33462 ROLLER BEARING		01
05	0503010009	RETAINER 00573-B		01
06	0503010086	SEAL 0009B-B		01
07	0551014473	GLOVE		01
08	0503012702	KM-12 NUT		02
09	0503012703	LOCK WASHER		01
10	0503010002	1800 GREASE FITTING		01
11	0503011444	SPRING WASHER		04
12	0503011339	M22 X 1,5 X 72 BOLT		08
13	0503014048	22 X 1.5 HEX NUT		08
14	0503010363	5/16" X 1" BOLT		04
15	0511068415	PFFP-3770 SEAL GUIDE		01

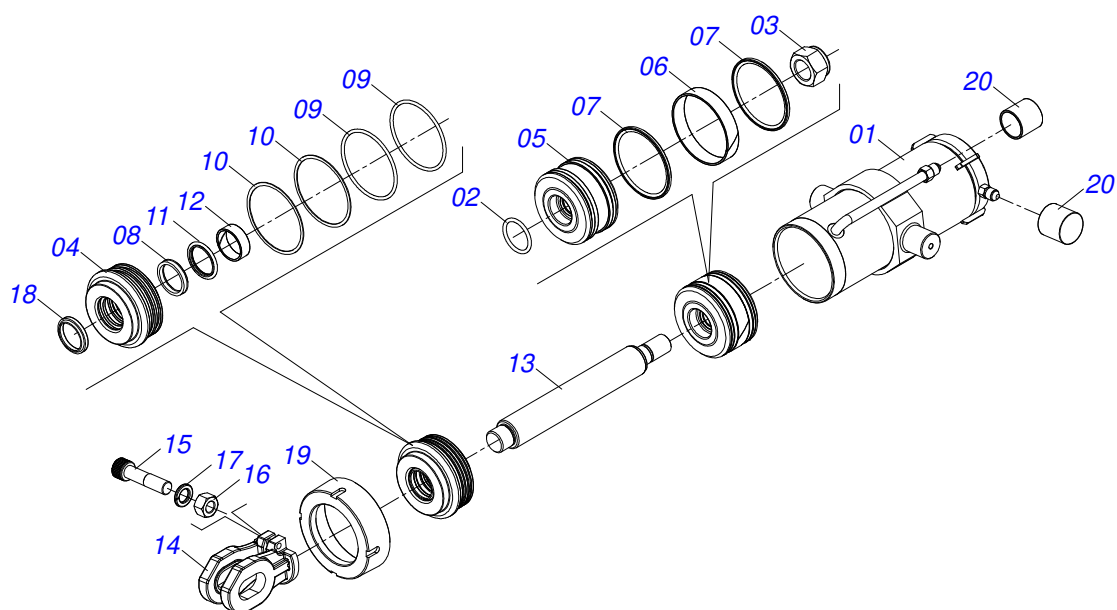

Item	Code	Description	See page	QT
01	0521069562	5" X 17" CYLINDER CASE		01
02	0503010345	2-218 N 3006-9B O'RING		01
03	0503010817	1.1/4" SELF LOCKING NUT		01
04	0581010353	RING SUPPORT		01
05	0581010354	PISTON		01
06	0503018150	RING GUIDE		01
07	0503018151	RING BS		02
08	0503018026	1870-2000-375 B GASKET		01
09	0503011453	O'RING		02
10	0503018152	O'RING		02
11	0503018024	RING BS		01
12	0503018025	RING GUIDE		01
13	0581019464	TURNBUCLE BODY		01
14	0571015629	CILINDER SPINDLE FORK		01
15	0503011094	3/8" X 2" BOLT		01
16	0503010026	3/8" NUT		01
17	0503010025	3/8" SPRING WASHER		01
18	0503010039	D-2000 SCRAPER RING		01
19	0502040876	COVER		01
20	0503030385	CYLINDER PLUG N-002		02

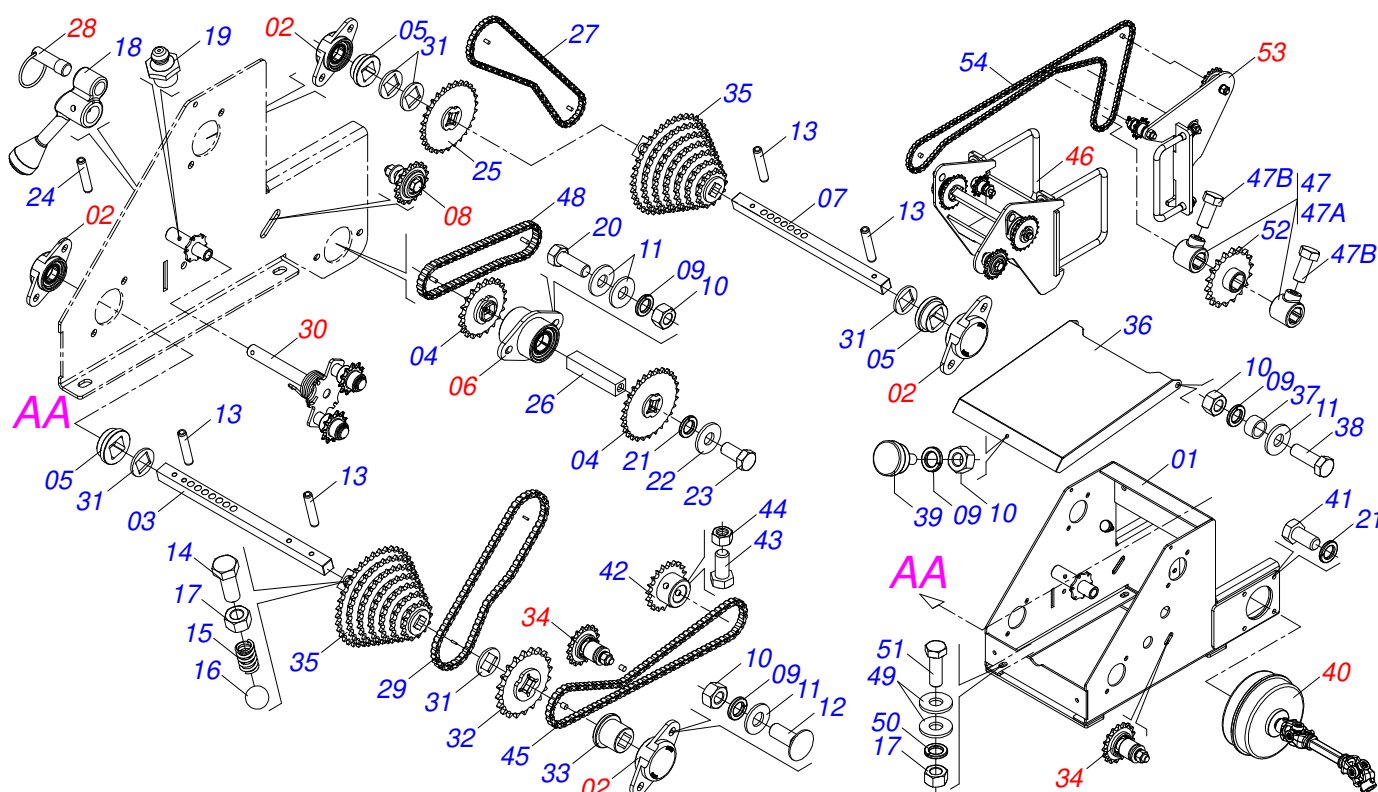


Item	Code	Description	See page	QT
01	0521064562	CENTRAL GEAR BOX SUPPORT		01
02	0501056271	BEARING CLOSED	72	04
03	0571015170	CENTRAL GEAR BOX DRIVER AXLE		01
04	0521063460	20Z GEAR		02
05	0503030303	SUPPORT WASHER		03
06	0511052432	DOUBLE BEARING WITH ASSY FLANGE	32	01
07	0571015171	CENTRAL GEAR BOX DRIVEN AXLE		01
08	0511054476	RIGHT TENSIONER CENTRAL EXCHANGE	33	01
09	0503010179	5/16" ZN SPRING WASHER		13
10	0503010337	5/16" NUT		13
11	0501010694	8.5 X 18 X 1.5 FLAT WASHER		12
12	0503011953	5/16" X 1" BOLT		08
13	0503010292	0.2" X 1.6" SPRING PIN		04
14	0503010395	1/2" X 1-1/4" BOLT		02
15	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
16	0503012389	1/2 BALL		02
17	0503010060	1/2" NUT		06
18	0502011758	REAR TENSIONER LEVER		01
19	0503010002	1800 GREASE FITTING		01
20	0503010365	NUT		02
21	0503010025	3/8" SPRING WASHER		06
22	0501010984	FLAT WASHER		04
23	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		02
24	0503010683	0.2" X 1.2" SPRING PIN		01
25	0511064536	28Z GEAR		01
26	0551011728	3770 PULLER AXLE SEED ROW		01
27	0503014852	40-1 CHAIN X 90 LINK + REDUCTION		01
28	0501048790	AXLE WITH LINK ASSY	34	01
29	0503012204	40-1 CHAIN X 82 LINK + RED		01
30	0501052778	CHAIN TENSIONER ASSY	35	01
31	0521018630	1.4" X SQUARE 0.8" WASHER		05


ASSY CENTRAL EXCHANGE (PAR LINE)

0521056971


Item	Code	Description	See page	QT
32	0511065209	20Z GEAR		01
33	0503030275	AGRICULTURAL BEARING		01
34	0511054489	LEFT TENSIONER CENTRAL EXCHANGE	36	01
35	0511060396	DRIVE/DRIVEN AXLE CONE		02
36	0571015172	CENTRAL GEAR BOX COVER		01
37	0551018585	CENTRAL GEAR BOX COVER SLEEVE		02
38	0503010371	5/16" X 1" BOLT		02
39	0503010386	CABLE		01
40	0511056179	CLUTCH WITH CARDAN CENTRAL	37	01
41	0503010172	M10 X 1,5 X 25 BOLT		04
42	0511069512	20Z GEAR		01
43	0503011268	3/8" X 2-1/2" BOLT		01
44	0503013357	3/8" SELF-ADJUSTING NUT		01
45	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
46	0511053043	DEVIATION GREATER ASSY	38	01
47	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		02
47A	0502012699	LATCH GLOVE BOX TRANSMISSION		02
47B	0503010256	3/8" X 3/4" BOLT		02
48	0503012793	2050 CHAIN X 66 LINK + REDUCTION		01
49	0511017302	FLAT WASHER		08
50	0503010019	1/2" SPRING WASHER		04
51	0503011082	C1/2" X 1.3/4" SCREW		04
52	0511069528	GEAR 18Z		01
53	0521054288	DEVIATION ASSY	39	01
54	0503019568	CURRENT 40-1 X 157		01

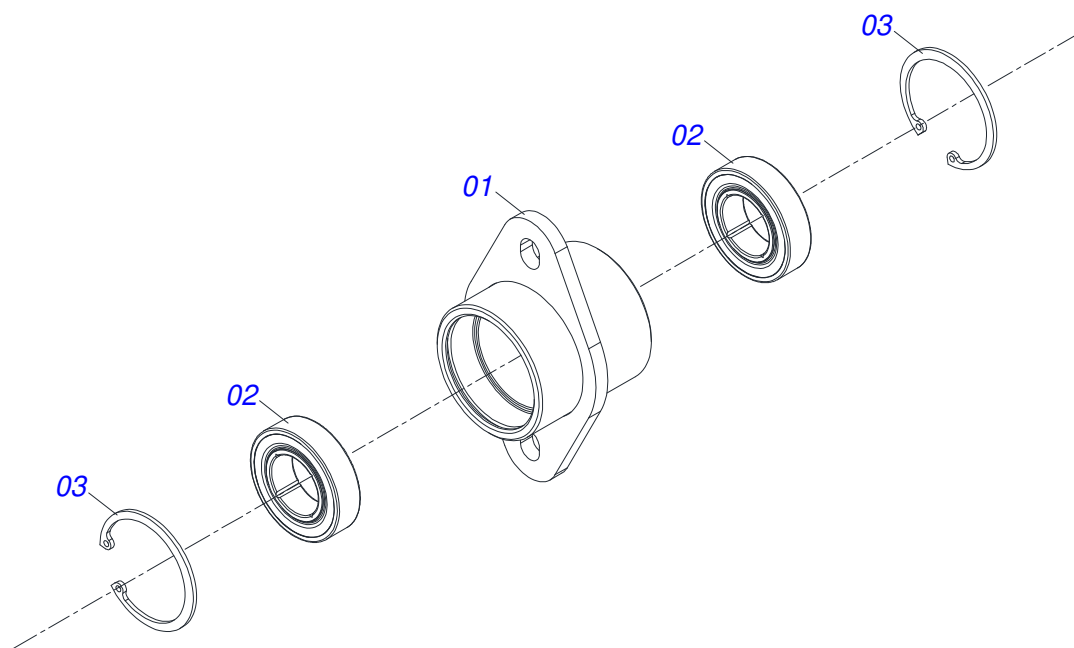

Item	Code	Description	See page	QT
01	0521063461	BEARING DOUBLE WITH FLANGE		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011105	SEAL RING		02

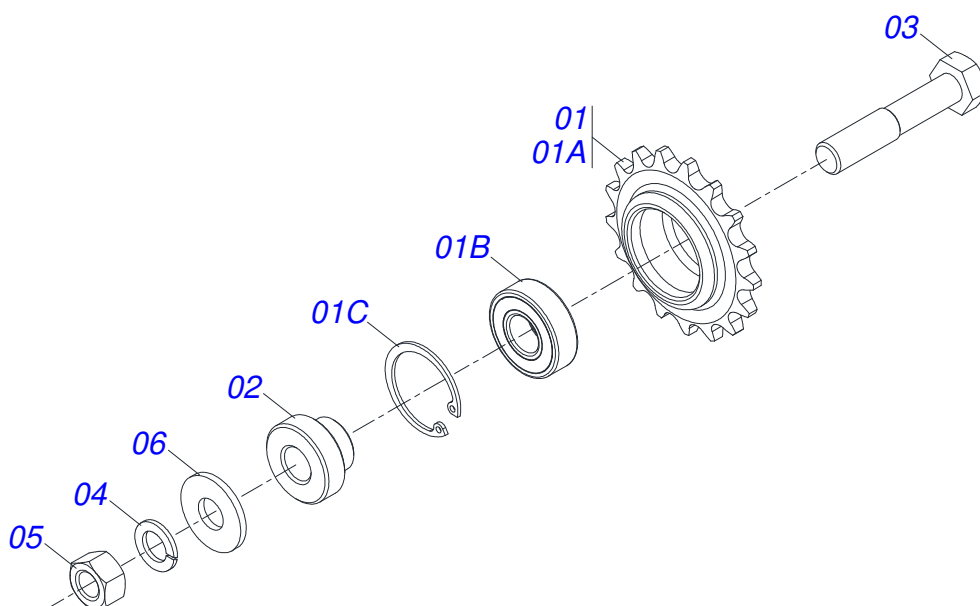


Item	Code	Description	See page	QT
01	0501056573	17Z GEAR ASSY		01
01A	0502012367	17Z X P 1/2" GEAR INTERM		01
01B	0503012882	BEARING		01
01C	0503011945	503050 CLAMPING RING (FOR AXLE)		01
02	0571015168	SLEEVE NYLON Ø21 X Ø31,75 X 20		01
03	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0511017302	FLAT WASHER		01

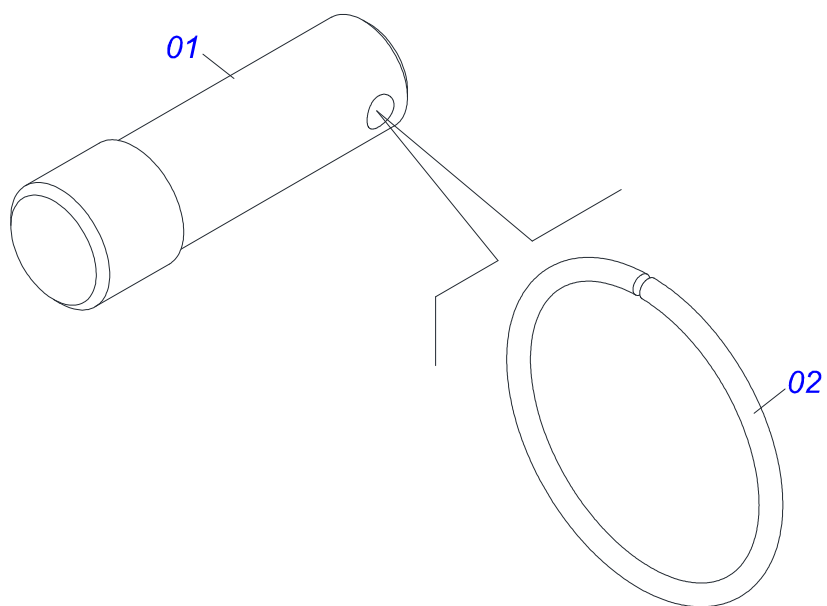


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

CHAIN TENSIONER ASSY


0501052778

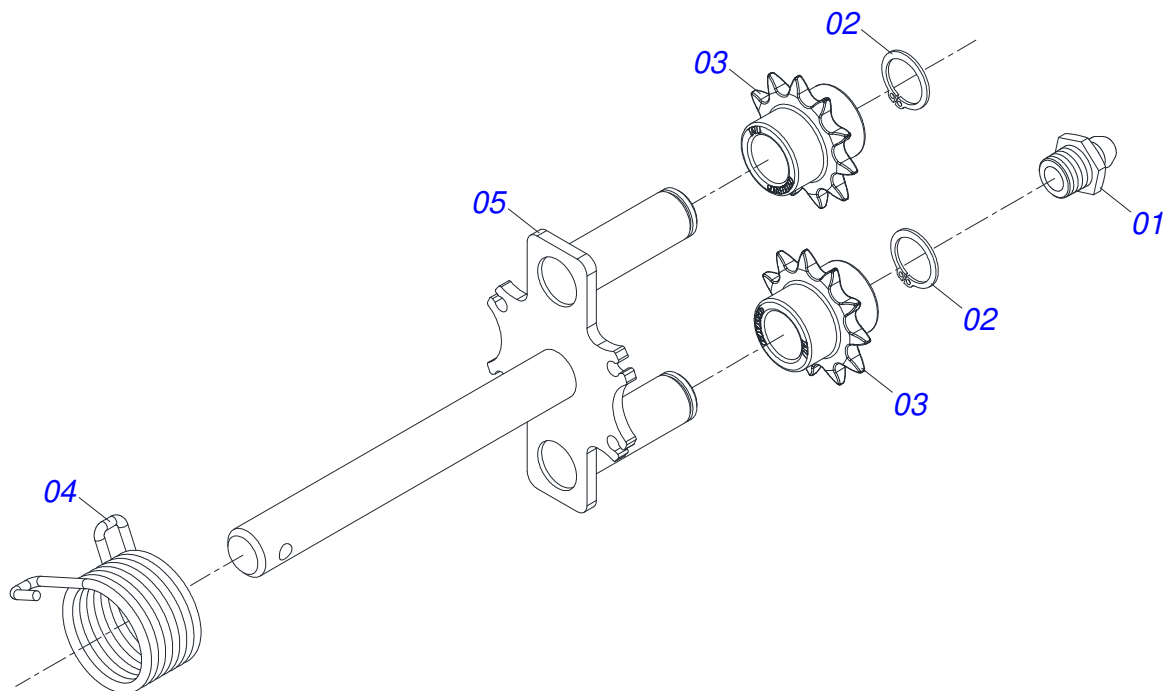


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503010302	501019 SEAL RING		02
03	0503031805	11Z 1/2" GEAR		02
04	0503031367	SPRING		01
05	0511061794	CHAIN TENSIONER		01

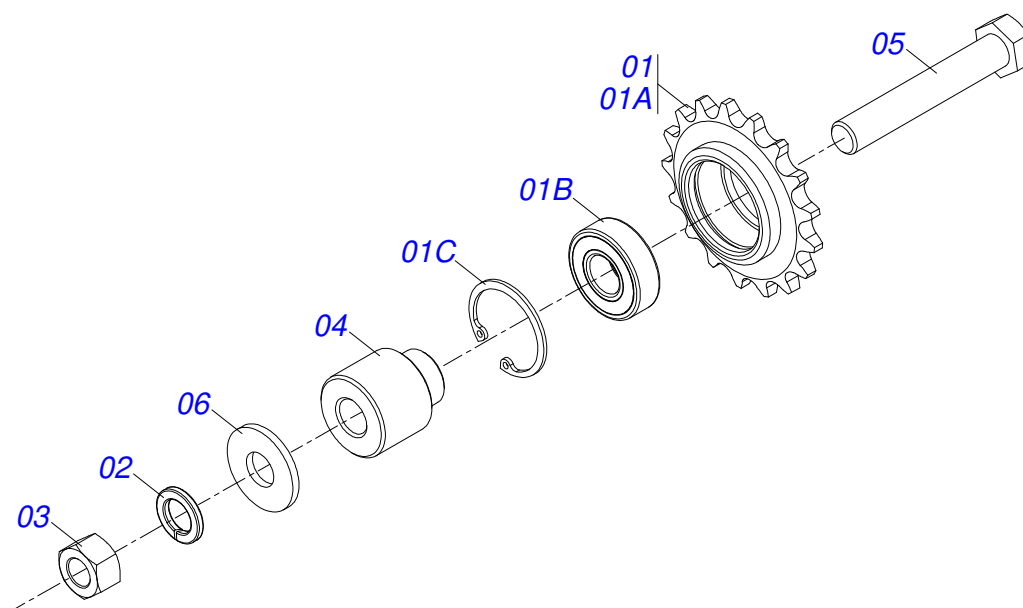


Item	Code	Description	See page	QT
01	0501056573	17Z GEAR ASSY		01
01A	0502012367	17Z X P 1/2" GEAR INTERM		01
01B	0503012882	BEARING		01
01C	0503011945	503050 CLAMPING RING (FOR AXLE)		01
02	0503010019	1/2" SPRING WASHER		01
03	0503010060	1/2" NUT		01
04	0571015167	SLEEVE NYLON Ø21 X Ø31,75 X 36,50		01
05	0503010479	BOLT		01
06	0511017302	FLAT WASHER		01

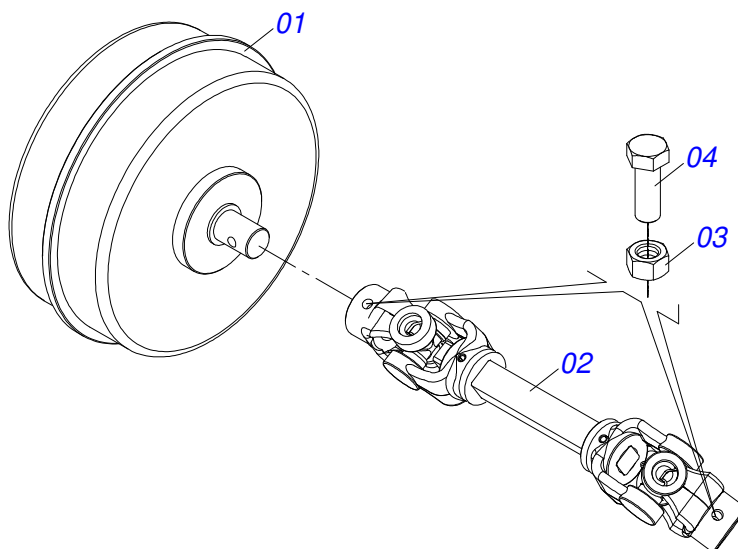


Item	Code	Description	See page	QT
01	0503062231	CLUTCH		01
02	0503062272	CARDAN WITHOUT PROTECTION		01
03	0503013357	3/8" SELF-ADJUSTING NUT		02
04	0503011268	3/8" X 2-1/2" BOLT		02

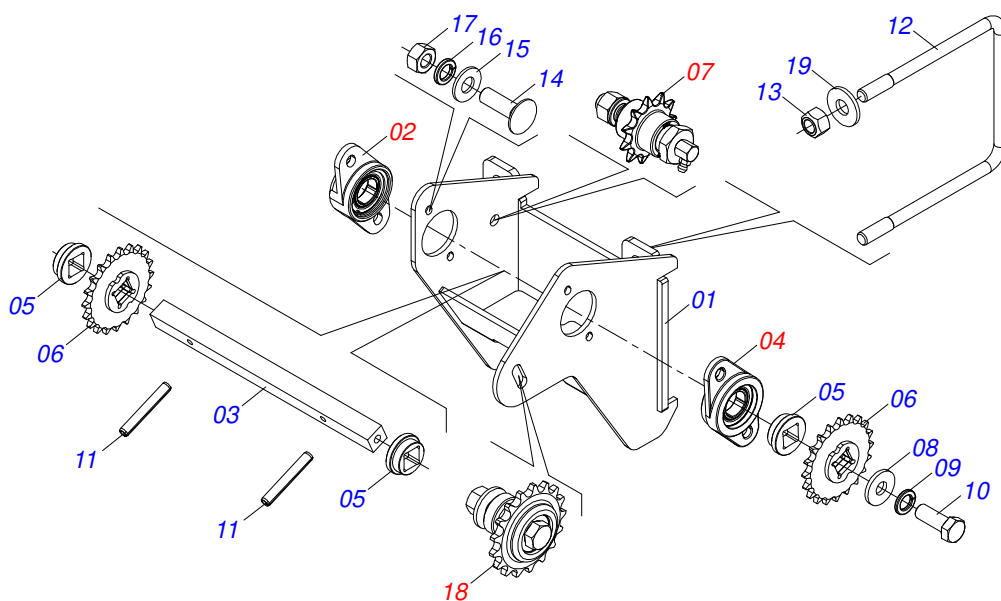


Item	Code	Description	See page	QT
01	0521063899	DEVIATION GREATER CENTRAL CHAIN		01
02	0501056271	BEARING CLOSED	72	01
03	0551018612	3/4" SQUARE SHAFT		01
04	0501056444	BEARING WITH ROLLING	71	01
05	0503030303	SUPPORT WASHER		03
06	0511065209	20Z GEAR		02
07	0511053050	CHAIN TENSIONER	41	01
08	0501010984	FLAT WASHER		01
09	0503010025	3/8" SPRING WASHER		01
10	0503010237	3/8" X 1" BOLT		01
11	0503010292	0.2" X 1.6" SPRING PIN		02
12	0551015037	5/8" UNC X 210 X 198 FASTENER		02
13	0503012412	5/8 UNC SELF LOCKING NUT		04
14	0503011953	5/16" X 1" BOLT		04
15	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
16	0503010179	5/16" ZN SPRING WASHER		04
17	0503010337	5/16" NUT		04
18	0511059854	STRETCHER OFFSET HIGHER FRONT		01
19	0501012140	FLAT WASHER		04

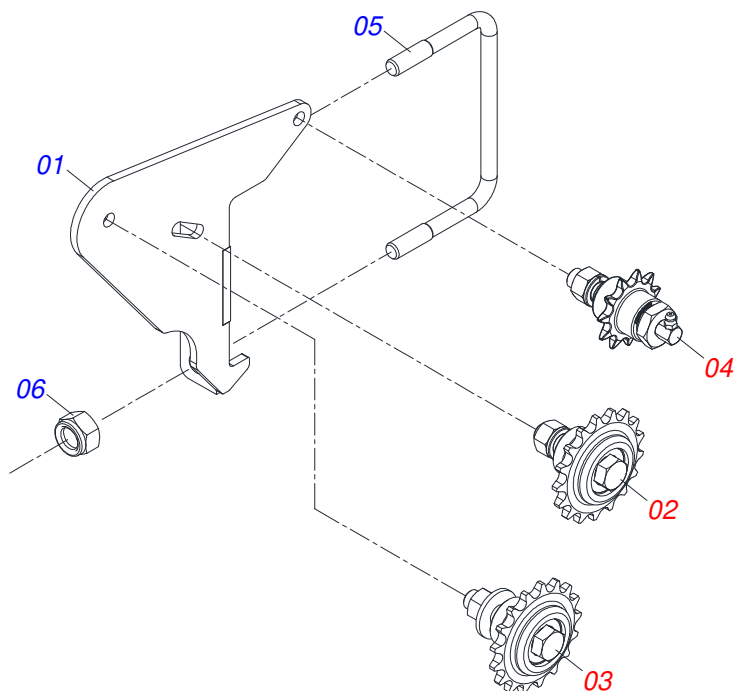


Item	Code	Description	See page	QT
01	0521069324	DEVIATION CHAIN LOWER REAR		01
02	0511053045	TENSIONER REAR OFFSET HIGHER	40	01
03	0511054476	RIGHT TENSIONER CENTRAL EXCHANGE	33	01
04	0511053050	CHAIN TENSIONER	41	01
05	0503033709	CATCH HEAD LINSEED SEEDS		01
06	0503010878	5/8" SELF ALIGNING NUT		02

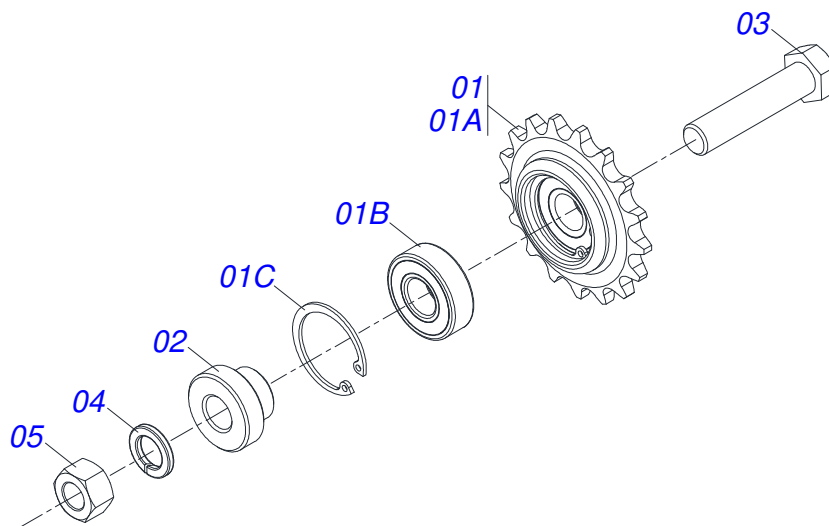


Item	Code	Description	See page	QT
01	0501056573	17Z GEAR ASSY		01
01A	0502012367	17Z X P 1/2" GEAR INTERM		01
01B	0503012882	BEARING		01
01C	0503011945	503050 CLAMPING RING (FOR AXLE)		01
02	0521010454	0.83" X 1.25" X 0.79" SLEEVE		01
03	0503010905	1/2" X 2-1/4" BOLT		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

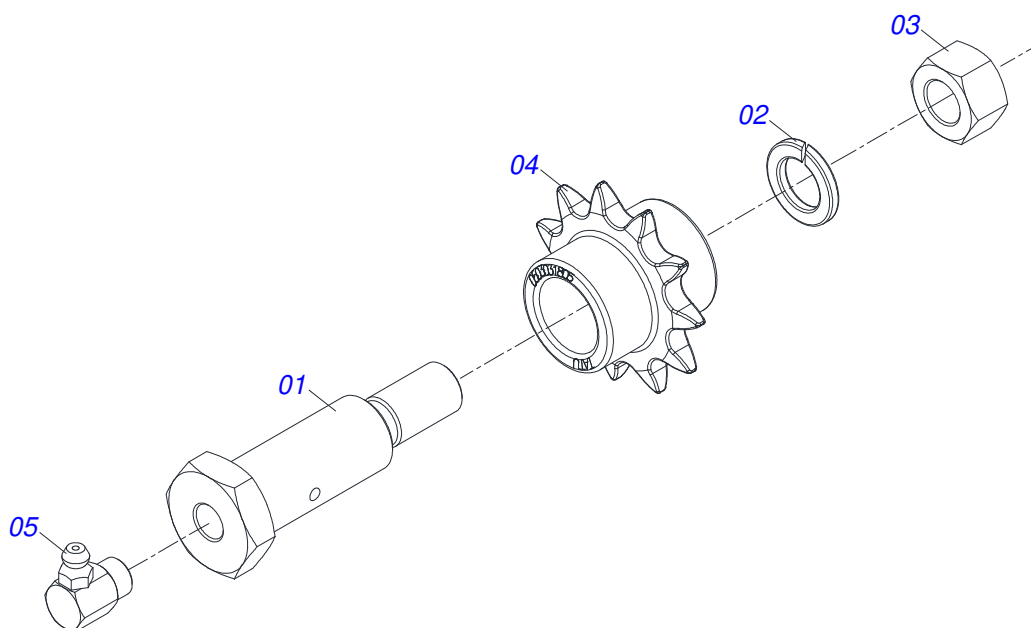


Item	Code	Description	See page	QT
01	0571013442	TIGHTENER AXLE		01
02	0503010019	1/2" SPRING WASHER		01
03	0503010060	1/2" NUT		01
04	0503031805	11Z 1/2" GEAR		01
05	0503010004	1890 GREASE FITTING		01

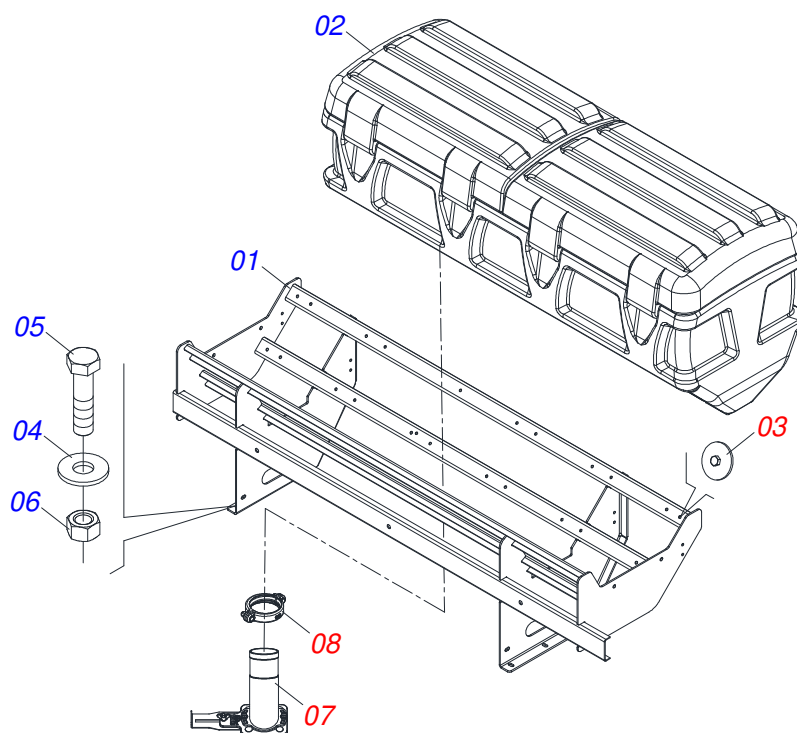

Item	Code	Description	See page	QT
001	0531060317	CENTRAL SUPPORT		01
002	0503062962	SILO SEED 05 ASSY MOUTH		01
003	0521051407	FIXER SILO FERTILIZER	43	08
004	0511017302	FLAT WASHER		06
005	0503010920	1/2" X 1.1/2" BOLT		06
006	0503010589	1/2" UNC SELF ADJUSTING NUT		06
007	0521055365	SEED CONDUCTOR	45	05
008	0521050525	FIXER FERTILIZER CONDUCTOR	44	05

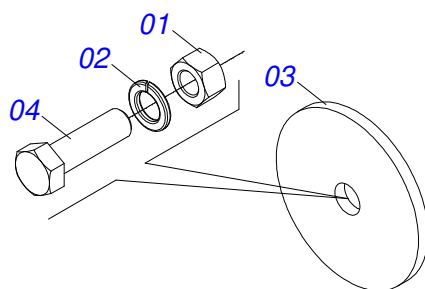


Item	Code	Description	See page	QT
01	0503012531	3/8" INOX NUT		01
02	0503012535	3/8" SPRING WASHER		01
03	0571019051	FIXER BOX WASHER		01
04	0503013751	3/8 UNC X 1.1/4 BOLT		01

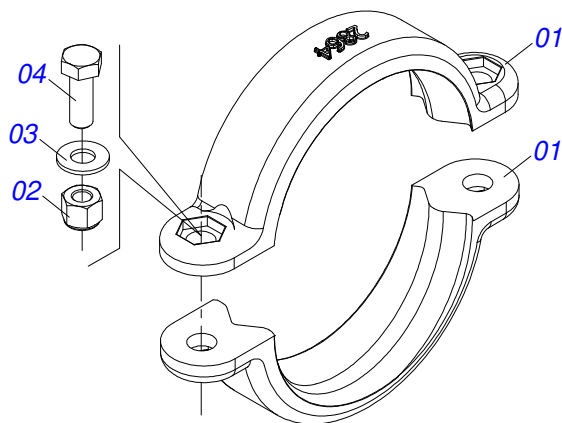


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010365	NUT		02

SEED CONDUCTOR


0521055365

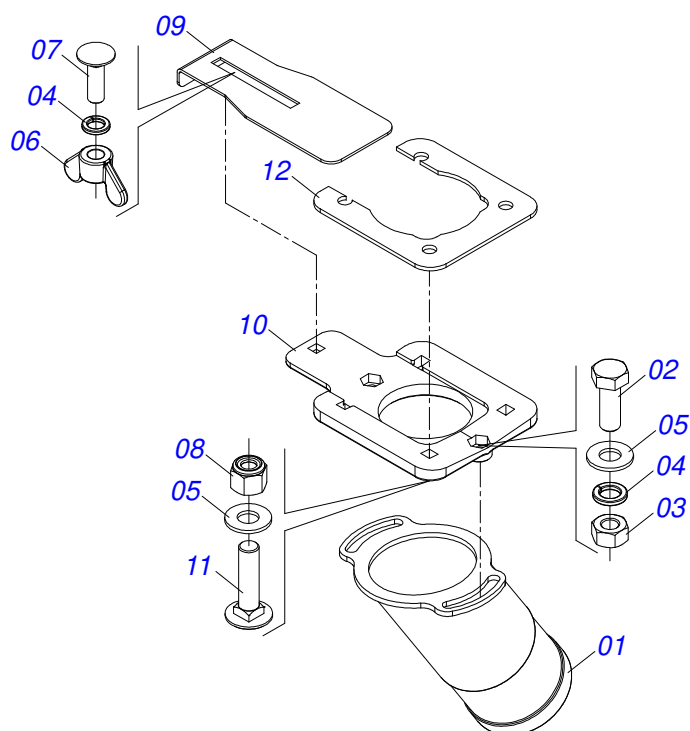


Item	Code	Description	See page	QT
01	0521069705	CONDUCTOR FIXER		01
02	0503010358	5/16" X 5/8" BOLT		02
03	0503010337	5/16" NUT		02
04	0503010179	5/16" ZN SPRING WASHER		03
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		06
06	0503010499	5/16" UNC BUTTERFLY NUT		01
07	0503011953	5/16" X 1" BOLT		01
08	0503013759	NUT		04
09	0581019780	COVER		01
10	0502012899	DUCT BODY		01
11	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		04
12	0503034859	JOIN		01

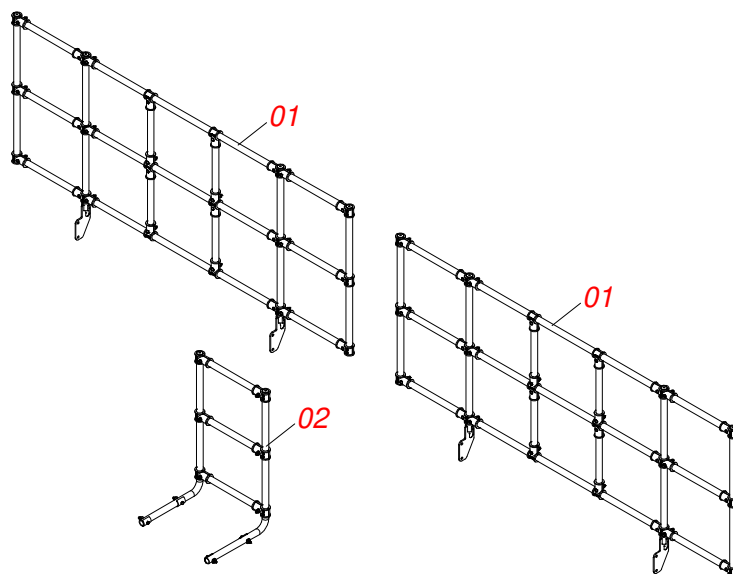

Item	Code	Description	See page	QT
01	0521056303	CENTRAL HANDRAIL 2422 X 1424		02
02	0521057493	INTERNAL HANDRAIL 463/483 SILO CENTRAL SUPPORT		01

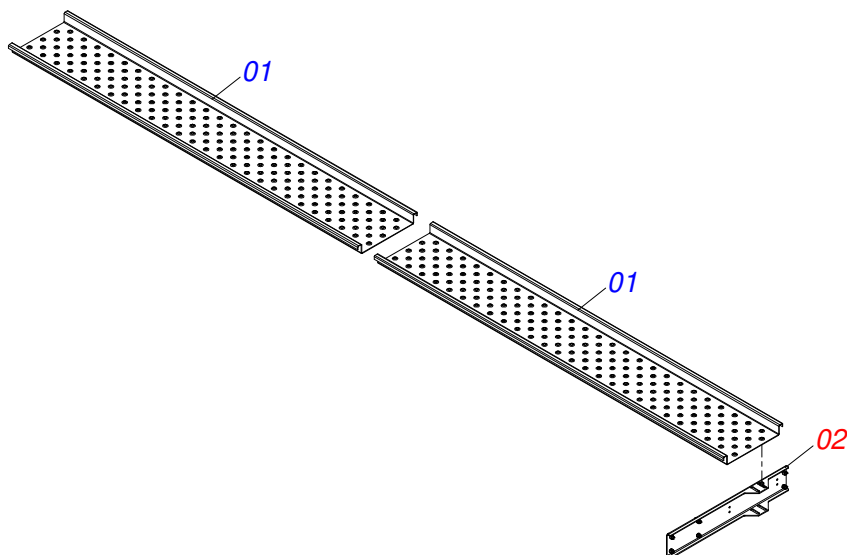

Item	Code	Description	See page	QT
01	0581017397	PLATFORM		02
02	0521053066	PLATFORM SUPPORT ASSY		04

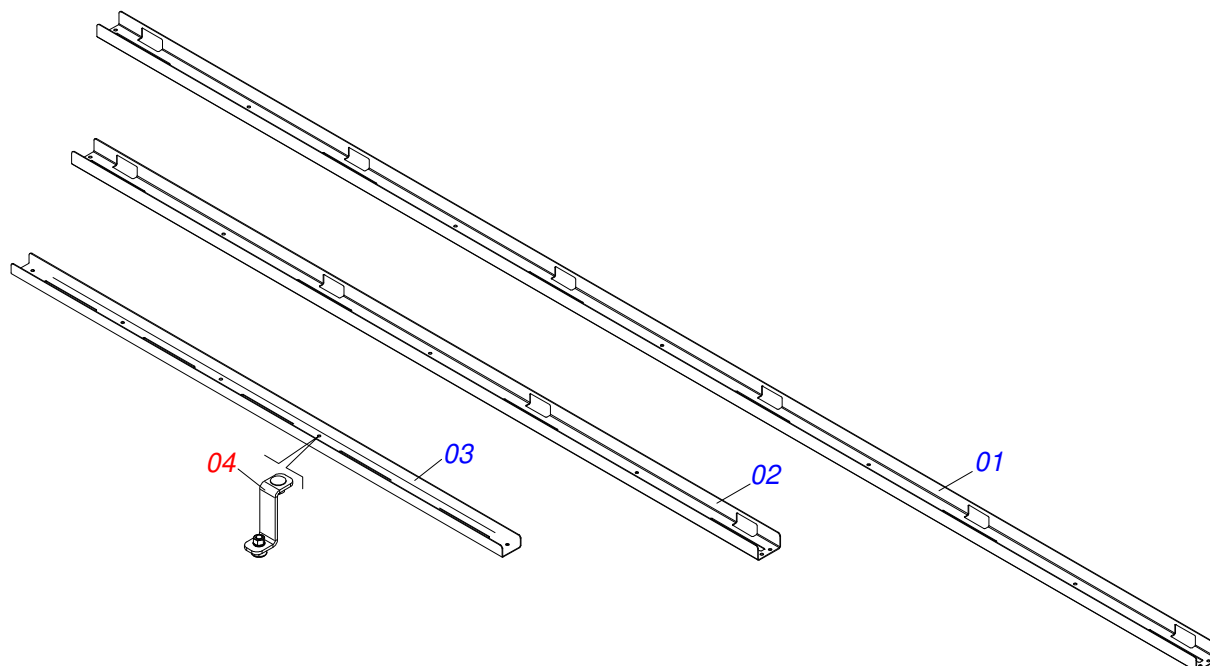

Item	Code	Description	See page	QT
01	0581017683	GUTTER 30 X 55 X 2660		01
02	0581019553	GUTTER		01
03	0581017967	GUTTER 24 X 46 X 1200		02
04	0521055102	BIGGEST FULL GUTTER SUPPORT		04



01

0503034003



02

0503010001



06

0503031425



09

0503031087



12

0503034651



03

0503034229




04

0503034563

[illegible]

07

0503032988

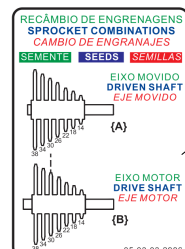

10

0503032986



13

0503034683



05

0503033853



08

0503033597



11

0503034471




14

0503034534

Item	Code	Description	See page	QT
001	0503034003	SERIAL NUMBER TAG 61 X 118		01
002	0503010001	3.2 X 5.5 RIVET		04
003	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 MOUTH)		06
004	0503034563	ADHESIVE LABEL		06
005	0503033853	ADHESIVE LABEL		02
006	0503031425	ADHESIVE LABEL ATTENTION		02
007	0503032988	ADHESIVE LABEL		01
008	0503033597	ADHESIVE		02
009	0503031087	ADHESIVE LABEL		01
010	0503032986	ADHESIVE LABEL		01
011	0503034471	ADHESIVE LABEL		01
012	0503034651	ADHESIVE LABEL		02
013	0503034683	ADHESIVE LABEL		02
014	0503034534	ADHESIVE LABEL		01

ARTICULATION ARM LEFT ASSY


0521052149

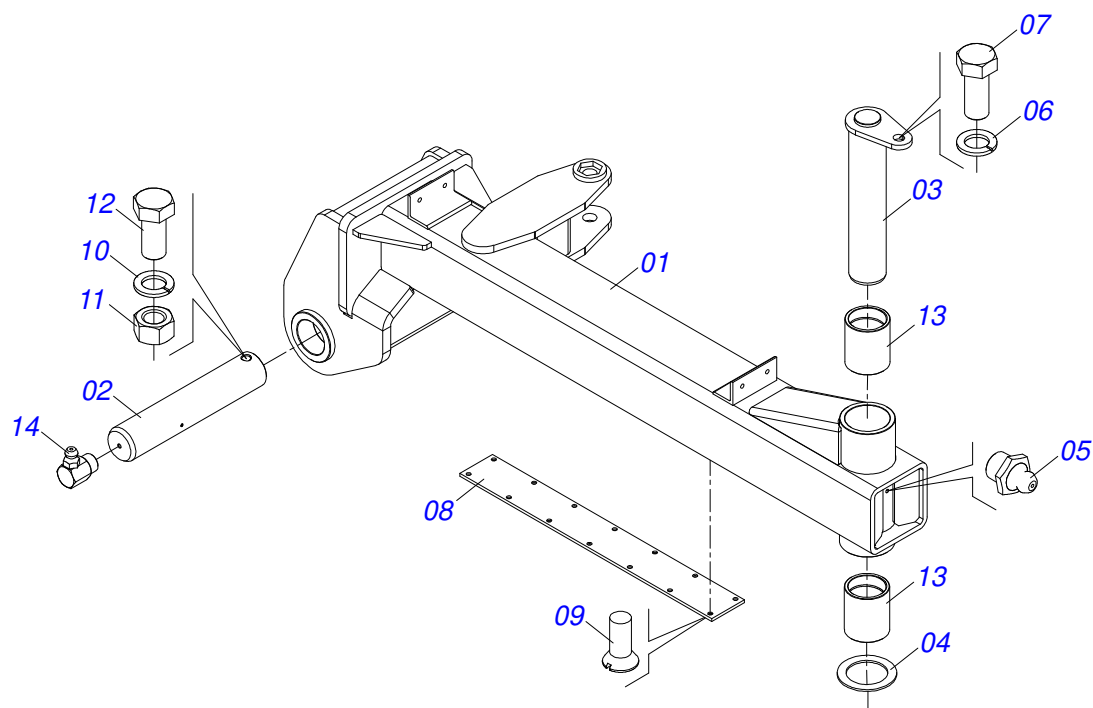


Item	Code	Description	See page	QT
01	0521068342	ARM PIVOT		01
02	0571017893	HORIZONTAL ARTICULATION SHAFT		01
03	0521063778	RELATION AVEC AXE VERTICAL LATCH		01
04	0571011767	LISA WASHER 125 X 88 X 4.76		01
05	0503010002	1800 GREASE FITTING		01
06	0503010408	7/8" SPRING WASHER		01
07	0503015322	BOLT 7/8		01
08	0503032042	SHEET POLYETHYLENE		01
09	0503010814	5/16 BOLT		14
10	0503010023	3/4" SPRING WASHER		01
11	0503010014	3/4" NUT		01
12	0503011198	C3/4" X 6" SCREW		01
13	0571011825	BUSHING		02
14	0503010004	1890 GREASE FITTING		01

ARTICULATION ARM RIGHT ASSY

0521052147

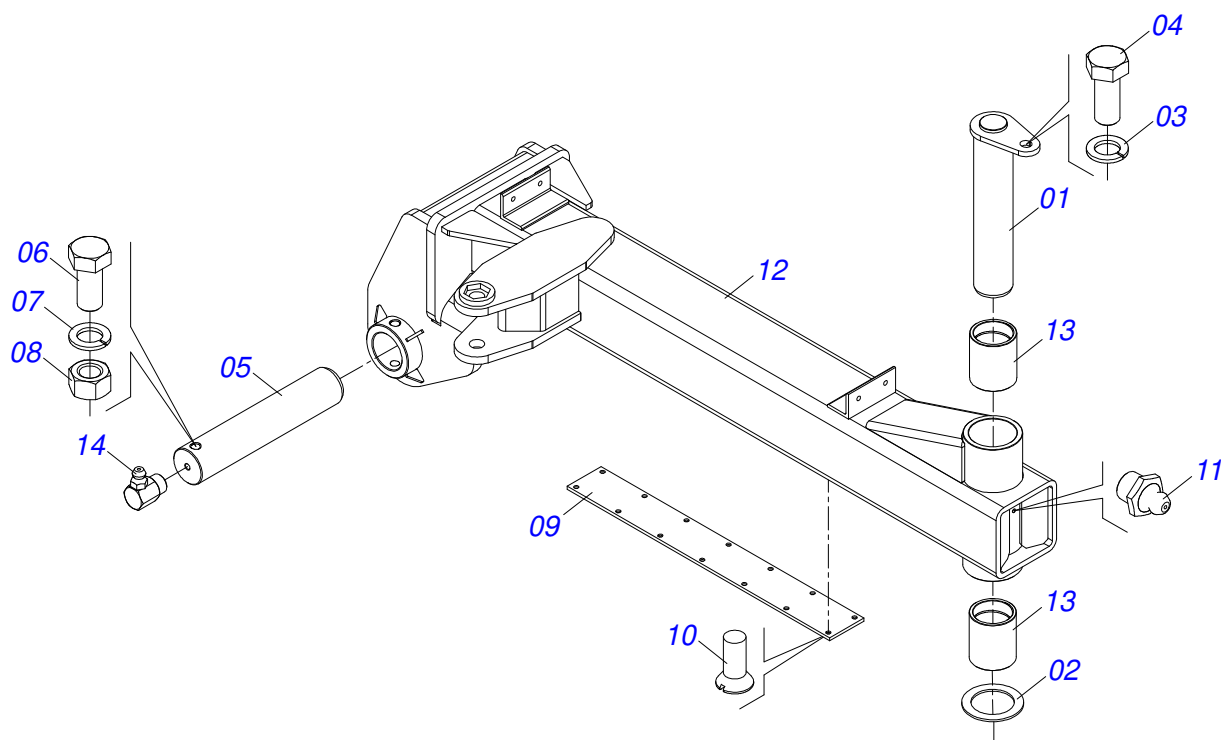


Item	Code	Description	See page	QT
01	0521063778	RELATION AVEC AXE VERTICAL LATCH	01	
02	0571011767	LISA WASHER 125 X 88 X 4.76	01	
03	0503010408	7/8" SPRING WASHER	01	
04	0503015322	BOLT 7/8	01	
05	0571017893	HORIZONTAL ARTICULATION SHAFT	01	
06	0503011198	C3/4" X 6" SCREW	01	
07	0503010023	3/4" SPRING WASHER	01	
08	0503010014	3/4" NUT	01	
09	0503032042	SHEET POLYETHYLENE	01	
10	0503010814	5/16 BOLT	14	
11	0503010002	1800 GREASE FITTING	01	
12	0521068343	ARM PIVOT	01	
13	0571011825	BUSHING	02	
14	0503010004	1890 GREASE FITTING	01	

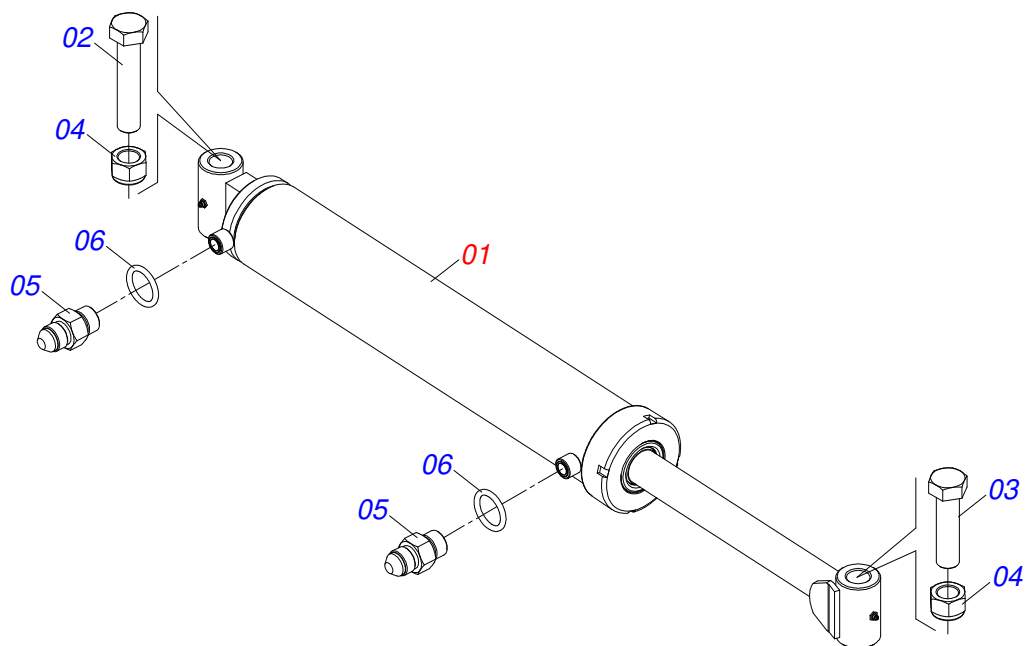


Item	Code	Description	See page	QT
01	0511058241	HYDRAULIC CYLINDER	53	02
02	0521017351	1-1/4" X 8" BOLT		02
03	0503013321	SCREW 1.1/4 UNF X 7 C S G.8 ZN		02
04	0503010817	1.1/4" SELF LOCKING NUT		04
05	0501010617	3/4" NIPPLE		04
06	0503010190	2-114 N 3006-9B O'RING		04

HYDRAULIC CYLINDER

0511058241

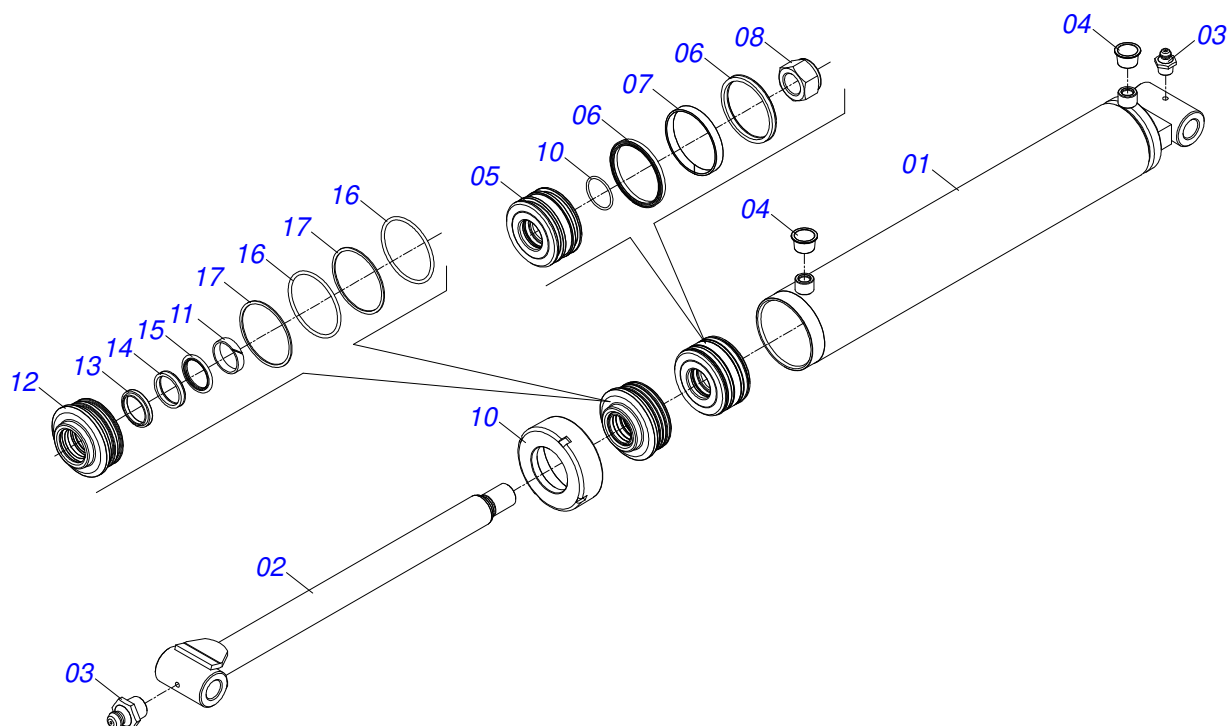


Item	Code	Description	See page	QT
01	0521066625	SHIRT 114.30 X 851		01
02	0521066559	EXTENSOR 876 X 50.80 (2)		01
03	0503010002	1800 GREASE FITTING		03
04	0503030384	CON PLUG N-001		02
05	0581010658	EMBOLO 50,80 X 114,30 USAP		01
06	0503018164	GAXETA 2500-4000-375 B (1150 AGEL)		02
07	0503018165	GUIDE RING W2-4500-590		01
08	0503010290	SELF ADJUSTING 1.1/2" UNF NUT		01
09	0503010141	2-226 N 3006-9B O'RING		01
10	0502011222	0.56" END CAP		01
11	0503010952	W2-2250-500 RING		01
12	0581010659	2" X 4" RING SUPPORT		01
13	0503010039	D-2000 SCRAPER RING		01
14	0503018026	1870-2000-375 B GASKET		01
15	0503018024	RING BS		01
16	0503011892	O' RING, 2-346 N 3006-9B		02
17	0503011893	BACK-UP RING, 8-346		02

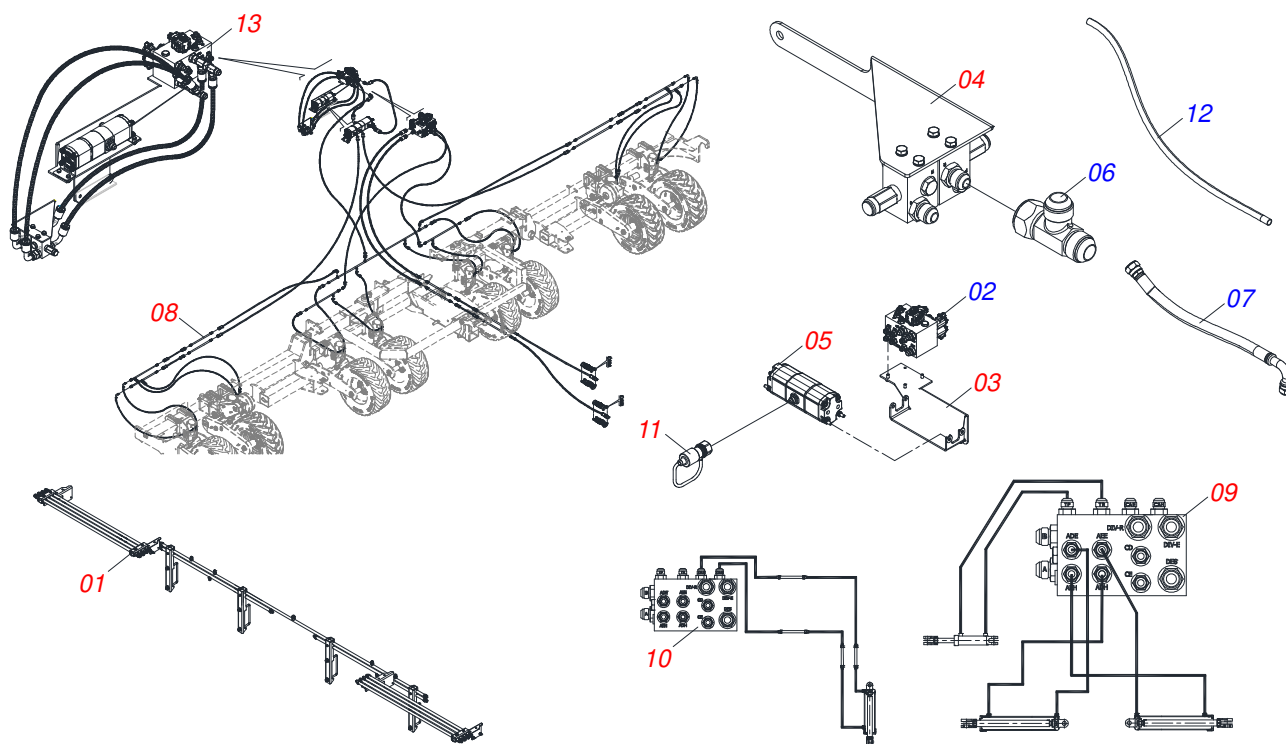

Item	Code	Description	See page	QT
001	0521057561	CENTRAL DUTY CONNECTOR	55	01
002	0503062957	BLOCK COMMAND		01
003	0521057495	SUPPORT BLOCK		01
004	0521057877	RELIEF VALVE		01
005	0521057013	TRIPLE DIVISER VALVE BRP00079 WITH NIPLES	57	01
006	0503013534	ADAPTER T TEE		04
007	0501080175	3/4 X 900 TR-TC 2T HOSE		04
008	0521057082	HOSE KIT LEVANTE	58	01
009	0521055275	ASSY HOSE ARTICULATION	60	01
010	0521055274	HEAD HOSE ASSY	61	01
011	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	62	04
012	0571017774	SPRING PROTECTION QUICK HOSE		01
013	0521057562	SET HIDRAULICO	54	01

CENTRAL DUTY CONNECTOR


0521057561

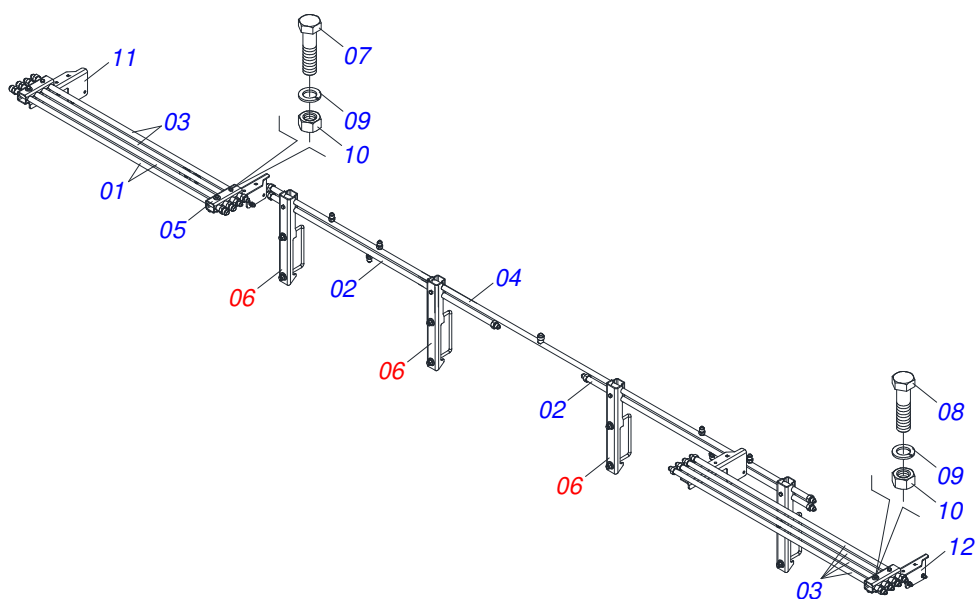


Item	Code	Description	See page	QT
001	0521069163	OIL TUBE		02
002	0521069275	OIL TUBE		02
003	0521069164	OIL PIPE R.7/8		06
004	0521069009	OIL DUCT		01
005	0581018409	FASTENER BODY		08
006	0521051537	CENTRAL REAR DUCT SUPPORT	56	04
007	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		08
008	0503011268	3/8" X 2-1/2" BOLT		08
009	0503010025	3/8" SPRING WASHER		16
010	0503010026	3/8" NUT		16
011	0591010127	SUPPORT LEFT DISTRIBUTOR		02
012	0581014867	SIDE DUTY SUPPORT		02

CENTRAL REAR DUCT SUPPORT

0521051537

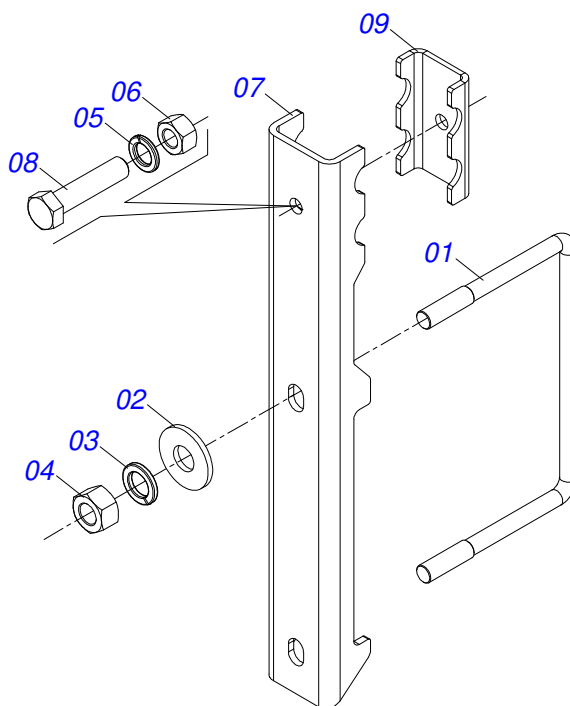


Item	Code	Description	See page	QT
01	0571019615	FITTING 1/2 UNC 130 X 198 ZN		01
02	0511017302	FLAT WASHER		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2" NUT		02
05	0503010025	3/8" SPRING WASHER		01
06	0503010026	3/8" NUT		01
07	0581014997	BODY SUPPORT DUCT REAR		01
08	0503011141	3/8" X 2-3/4" BOLT		01
09	0581014987	LOWER BODY FASTENER		01

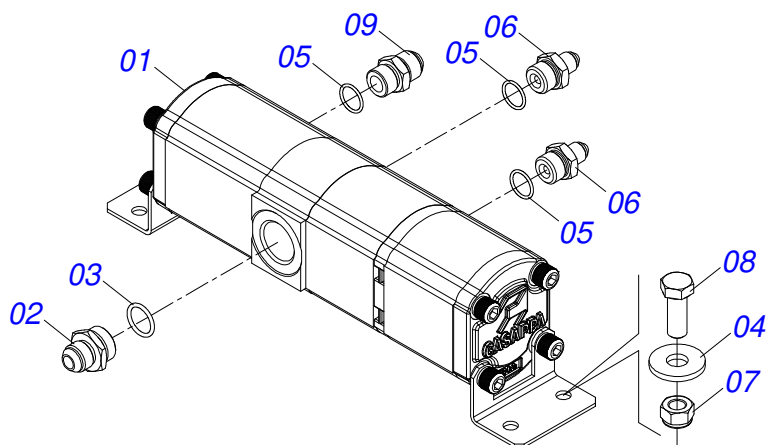

Item	Code	Description	See page	QT
01	0503019426	TRIPLE FLOW DIVISING VALVE		01
02	0581013111	NIPLE R 1.1/6 UN X 1.5/16 12 WIRES		01
03	0503014724	2-215 N 3006-9B O'RING		01
04	0501010984	FLAT WASHER		04
05	0503010045	O'RING		03
06	0511010111	7/8" NIPPLE		02
07	0503013357	3/8" SELF-ADJUSTING NUT		04
08	0503010237	3/8" X 1" BOLT		04
09	0501012520	1-1/16" X 7/8" NIPPLE		01

HOSE KIT LEVANTE


0521057082

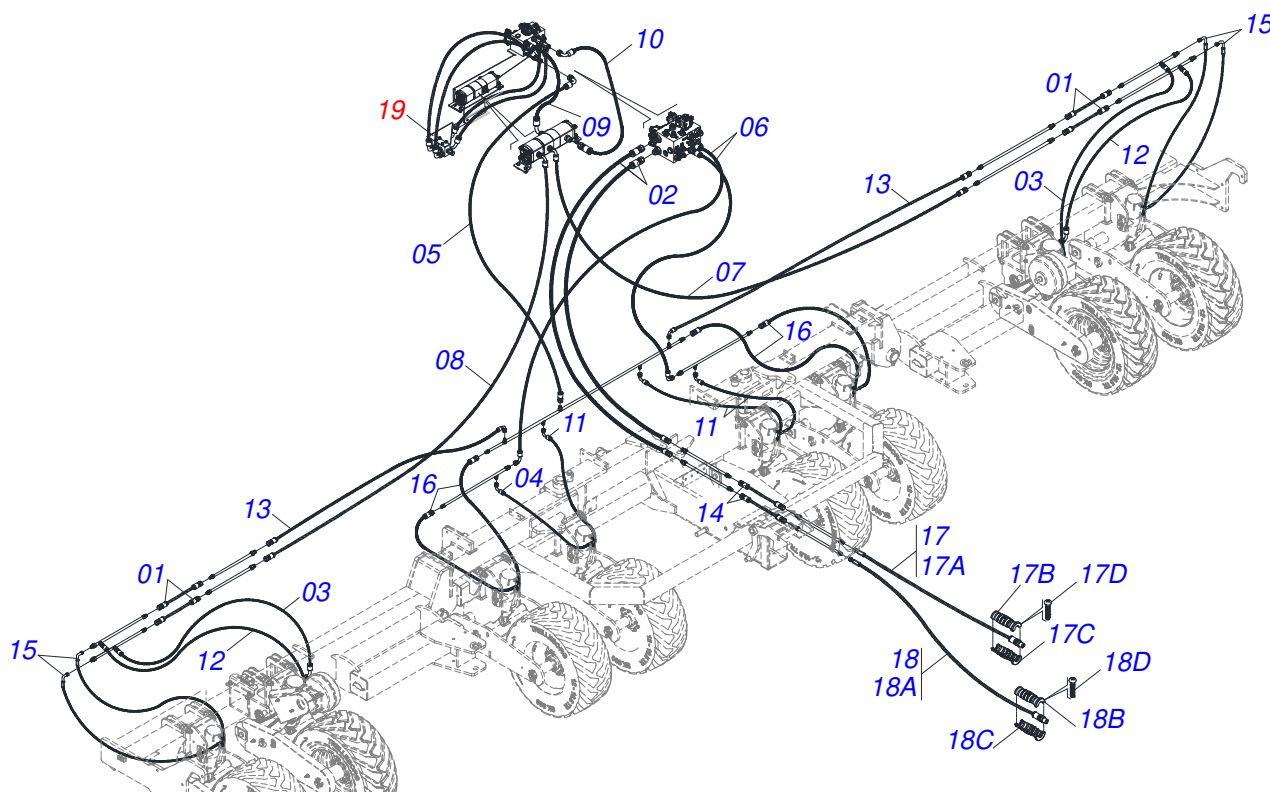

Item	Code	Description	See page	QT
01	0501080105	TR-TR HOSE ASSY		04
02	0501080232	3/4" X 1100 TR-TR HOSE		02
03	0501080599	3/8 X 650 TC-TR HOSE		02
04	0501080065	3/8 X 1200 TC-TC HOSE ASSY		01
05	0501080175	3/4 X 900 TR-TC 2T HOSE		01
06	0501080055	3/8" X 1000 TR-TC HOSE		02
07	0501080302	TR-TC HOSE ASSY		01
08	0501080714	HOSE 3/8 X 1600 TR-TC		01
09	0501081288	3/4 X 500 TR-TC HOSE		01
10	0501080019	3/4 X 1000 TR-TC HOSE		01
11	0501080675	HOSE 3/8 X 1000 TC-TC 180G		03
12	0501080700	3/8 X 650 TC-TC HOSE		02
13	0501081254	3/8" X 900 TR-TC HOSE		02
14	0501082204	3/4 X 2750 TR-TR HOSE		02
15	0501081837	HOSE 3/8 X 700 TR-TC		04
16	0501081838	HOSE		04
17	0521053712	HOSE 3/4 X 5900 TR-TM BLACK / RED		01
17A	0501082205	HOSE 1/2 X 5900 TR-TM		01
17B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
17C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
17D	0503018952	PLASTIC BOLT		06
18	0521053707	HOSE 3/4 X 5900 TR-TM BLACK / BLUE		01
18A	0501082205	HOSE 1/2 X 5900 TR-TM		01
18B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
18C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
18D	0503018952	PLASTIC BOLT		06
19	0521057885	VALVE ASSEMBLY	59	01

VALVE ASSEMBLY


0521057885

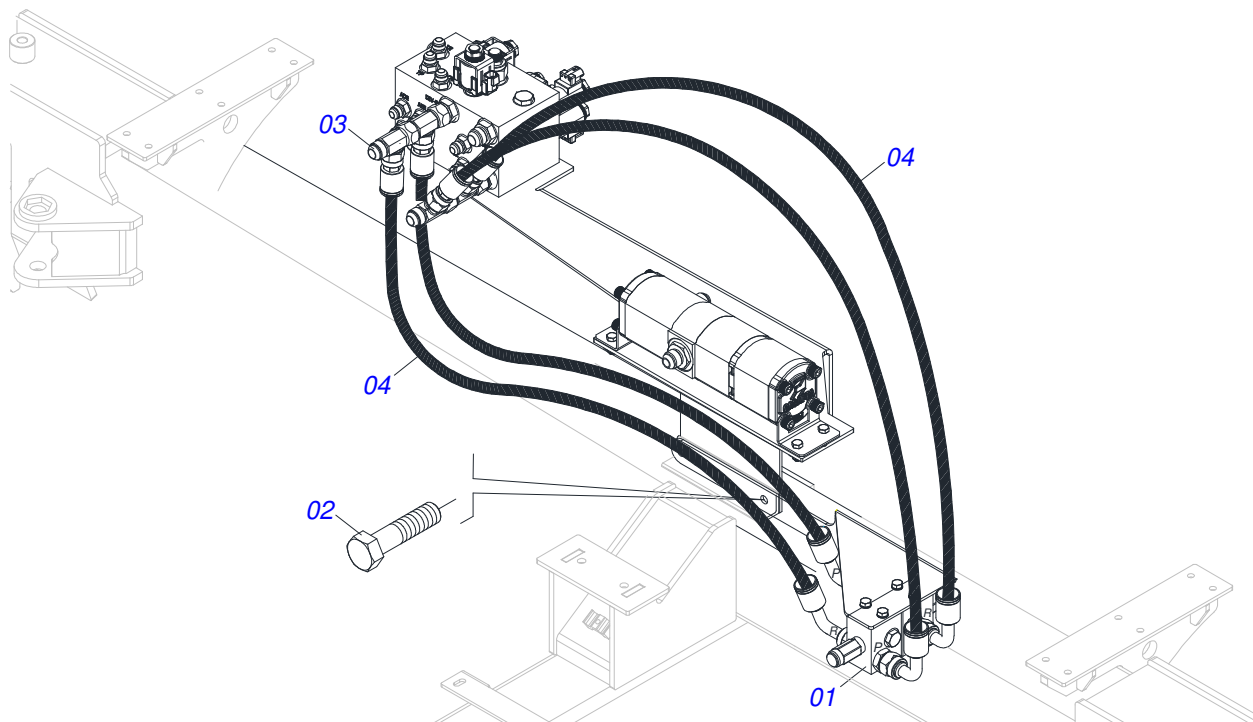


Item	Code	Description	See page	QT
01	0521057877	RELIEF VALVE		01
02	0503010920	1/2" X 1.1/2" BOLT		02
03	0503013534	ADAPTER T TEE		04
04	0501080175	3/4 X 900 TR-TC 2T HOSE		04

ASSY HOSE ARTICULATION


0521055275

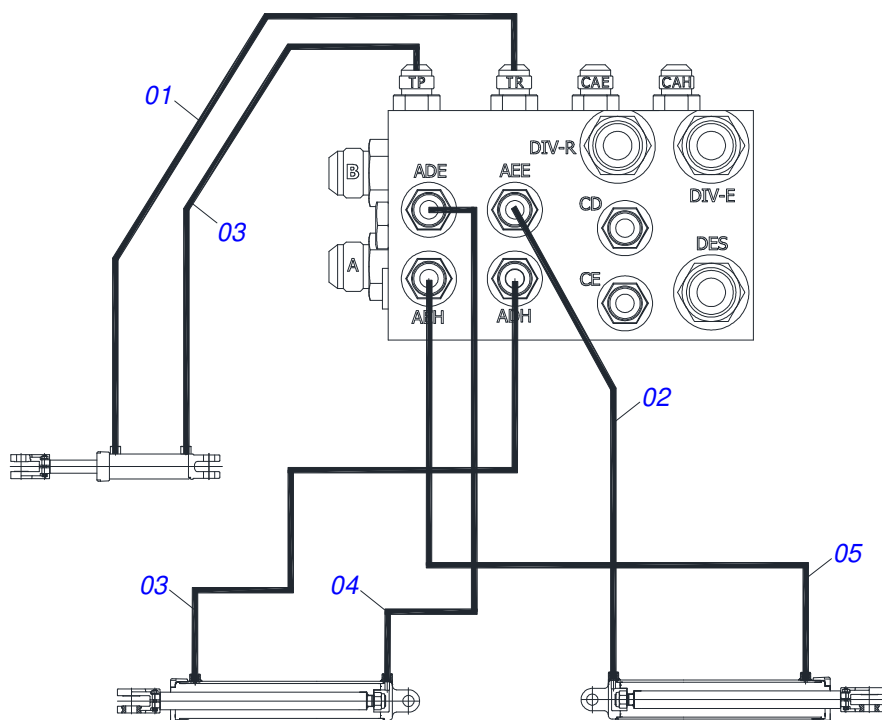


Item	Code	Description	See page	QT
01	0501080516	3/8" X 63" TR-TC HOSE ASSY	01	01
02	0501080449	3/8" X 1500 TC-TC HOSE	01	01
03	0501081108	TC-TC HOSE ASSY	02	02
04	0501080522	3/8 X 700 TC-TC HOSE ASSY	01	01
05	0501082184	HOSE 1/2 X 2100 TC-TC	01	01

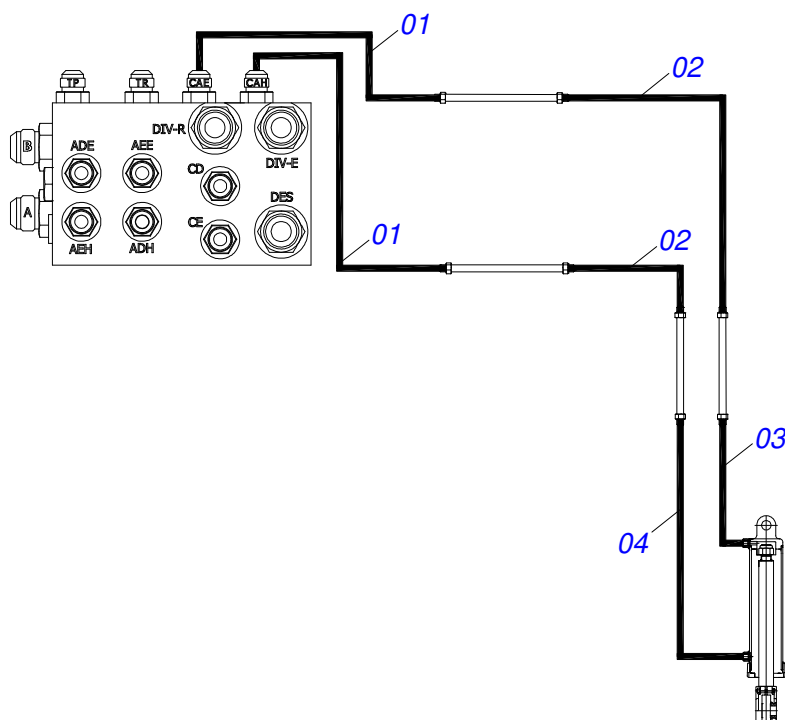


Item	Code	Description	See page	QT
01	0501080461	TR-TC HOSE ASSY		02
02	0501080297	3/8" X 2800 TR-TR HOSE		02
03	0501080526	3/8" X 114" TR-TC HOSE ASSY		01
04	0501080527	HOSE 3/8 X 3300 TR-TC		01

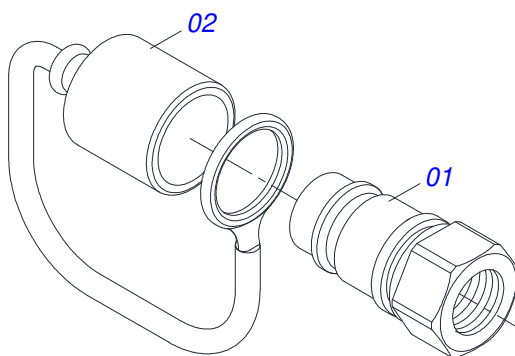


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

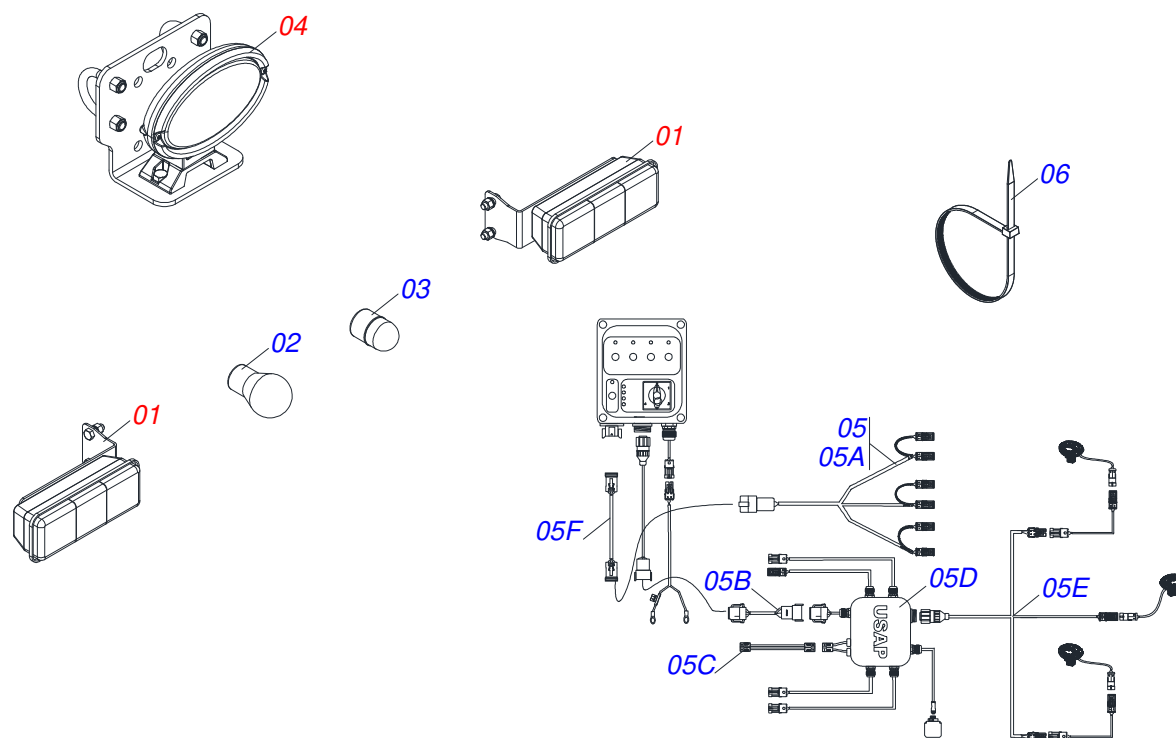


Item	Code	Description	See page	QT
001	0521054882	FLASHLIGHT WITH SUPPORT		02
002	0503032812	1141 12V LAMP		04
003	0503032813	67 12V 5W LAMP		02
004	0521053672	LIGHTHOUSE ASSY		05
005	0521057205	ELECTRIC ASSEMBLY		01
005A	0503019390	WHIP BLOCK COMMAND IMPLEMENT		01
005B	0503019061	WHIP		01
005C	0503019060	WHIP		01
005D	0503019329	COMMAND PANEL		01
005E	0503019330	WHIP		01
005F	0503019578	WHIP ELECTRIC		01
006	0503018829	NYLON CLAMP		20

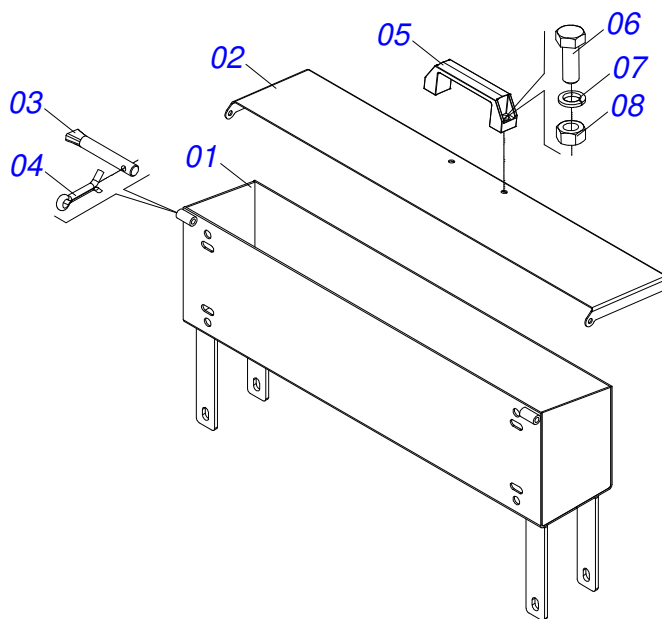


Item	Code	Description	See page	QT
01	0521063662	BOX OF TOOLS		01
02	0551018356	BOX OF TOOLS COVER ASSY		01
03	0521010528	0.3" X 1.6" COUPLING SHAFT		02
04	0503010140	1/8" X 3/4" COTTERPIN		02
05	0503011907	PMC 594-S NYLON LUG		01
06	0503010358	5/16" X 5/8" BOLT		02
07	0503010179	5/16" ZN SPRING WASHER		02
08	0503010337	5/16" NUT		02

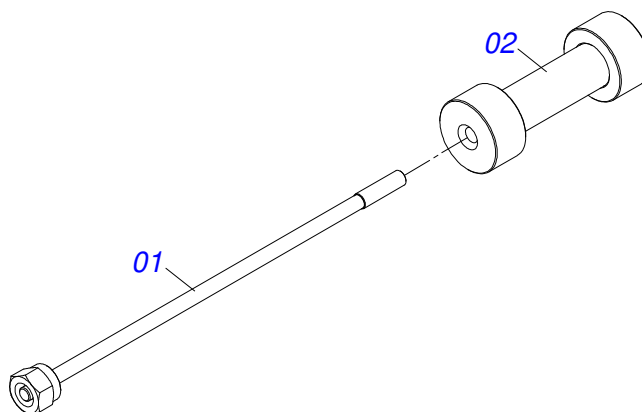

Item	Code	Description	See page	QT
01	0521068930	SACADOR AXLE		01
02	0521068931	SLEEVE SACADOR		01

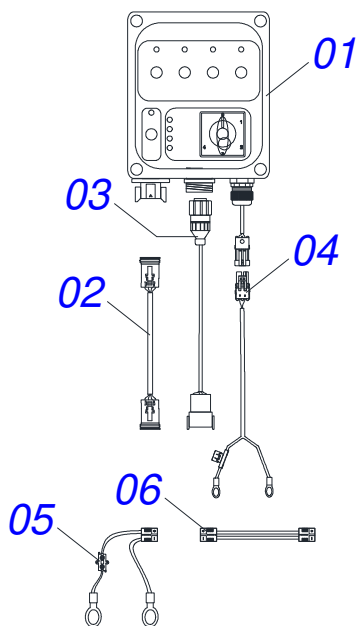


Item	Code	Description	See page	QT
01	0503019327	CONTROL PANEL		01
02	0503019054	WHIP		01
03	0503019059	WHIP		01
04	0503019052	WHIP		01
05	0503019328	WHIP		01
06	0503019057	WHIP		01

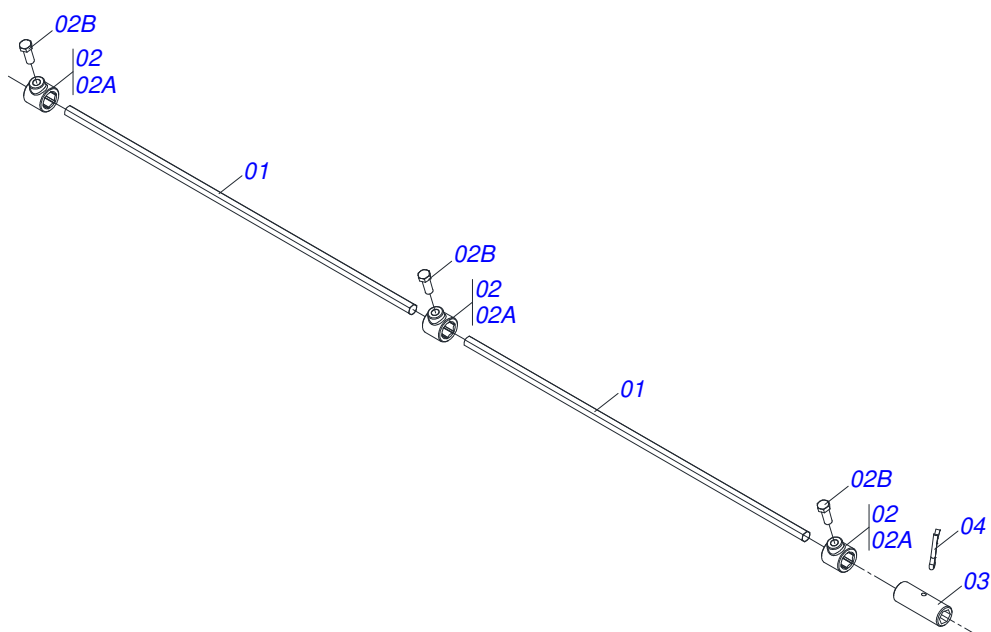

Item	Code	Description	See page	QT
01	0561016762	3/4 X 2390 HEX AXLE		02
02	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		24
02A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
02B	0503010256	3/8" X 3/4" BOLT		01
03	0561015837	SLEEVE 31,75		01
04	0503012198	3/16" X 2" COTTERPIN		01

LEFT WHEEL WITH TRANSMISSION

0521055327

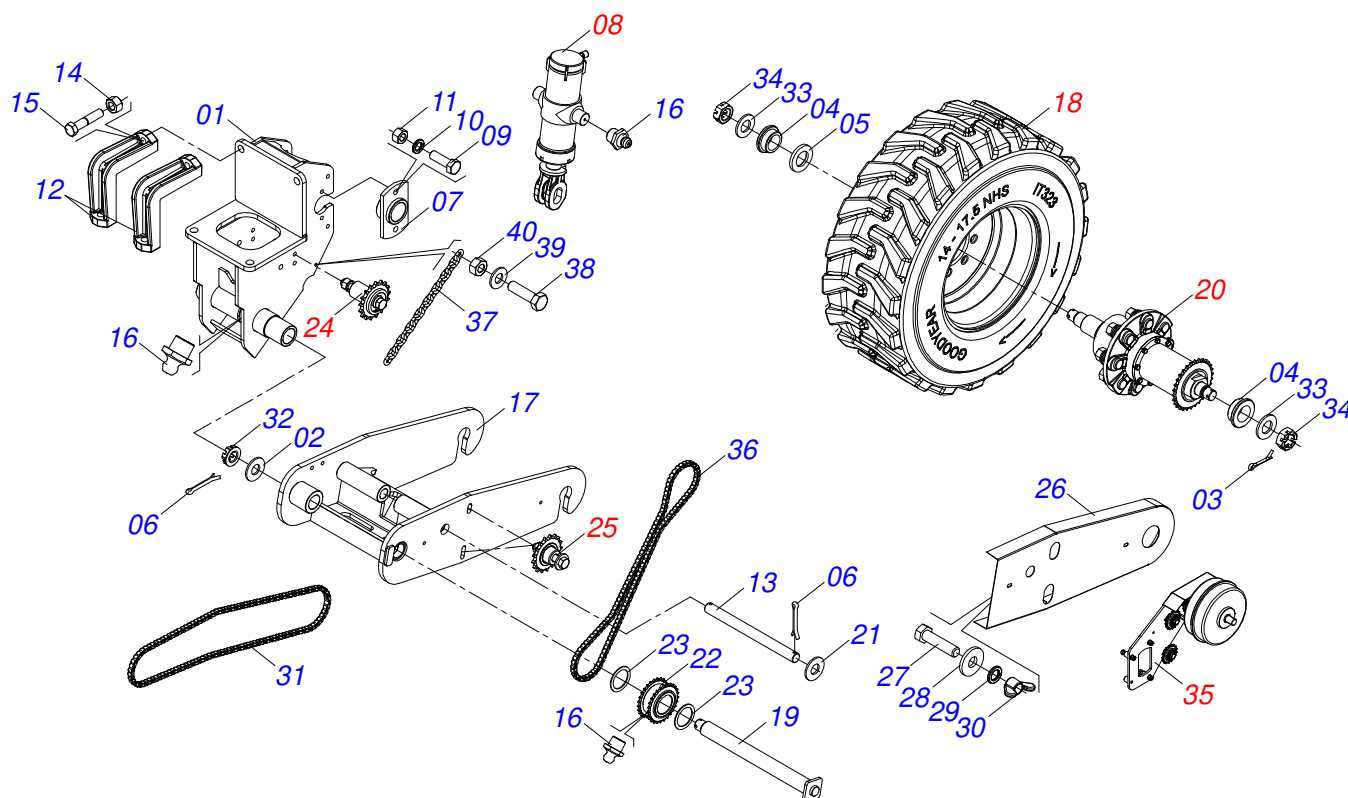


Item	Code	Description	See page	QT
01	0521064543	WHEEL SUPPORT		01
02	0561019929	FLAT WASHER		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		02
04	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
05	0551014508	FLAT WASHER		01
06	0503010523	1/4" X 2" COTTERPIN		03
07	0521069575	FLANGE CYLINDER HYDRAULIC FIXER		02
08	0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	30	01
09	0503010920	1/2" X 1.1/2" BOLT		04
10	0503010019	1/2" SPRING WASHER		04
11	0503010060	1/2" NUT		04
12	0502012731	WHEEL HOLDER		02
13	0581017245	AXLE BODY		01
14	0503011075	3/4" UNC NUT		04
15	0503012334	3/4" UNC X 3.1/2" BOLT		04
16	0503010002	1800 GREASE FITTING		04
17	0521064550	CARRYING-WHEELS FORK		01
18	0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	83	01
19	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
20	0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR	84	01
21	0531012874	FLAT WASHER		02
22	0511068422	WHEEL GEAR DOBLE		01
23	0551018571	FLAT WASHER		02
24	0511054463	WHEEL TENSIONER SUPORT CENTRAL	85	01
25	0511054464	WHEEL FORK TENSIONER	86	02
26	0561019941	RIGHT PROTECTIVE CAP WHEELS		01
27	0503010849	3/8" X 1-1/2" BOLT		02
28	0501013518	FLAT WASHER		02
29	0503010025	3/8" SPRING WASHER		02
30	0503010209	3/8" UNC BUTTERFLY NUT		02
31	0503016419	50-1 CHAIN X 128 LINK + REDUCION		01


LEFT WHEEL WITH TRANSMISSION

0521055327

Item	Code	Description	See page	QT
32	0501010630	1.1/2" CASTLE NUT		01
33	0501017779	32 X 60 X 4.75 FLAT WASHER		02
34	0503011052	1.1/4" X 0.77" CASTLE NUT		02
35	0511054501	TRANSMISSION CAMBIO LEFT		01
36	0503014857	50-1 X CHAIN X 122 LINK + REDUCION		01
37	0503033335	CURRENT 6 X 21 ELOS		01
38	0503010882	BOLT		01
39	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
40	0503010337	5/16" NUT		01

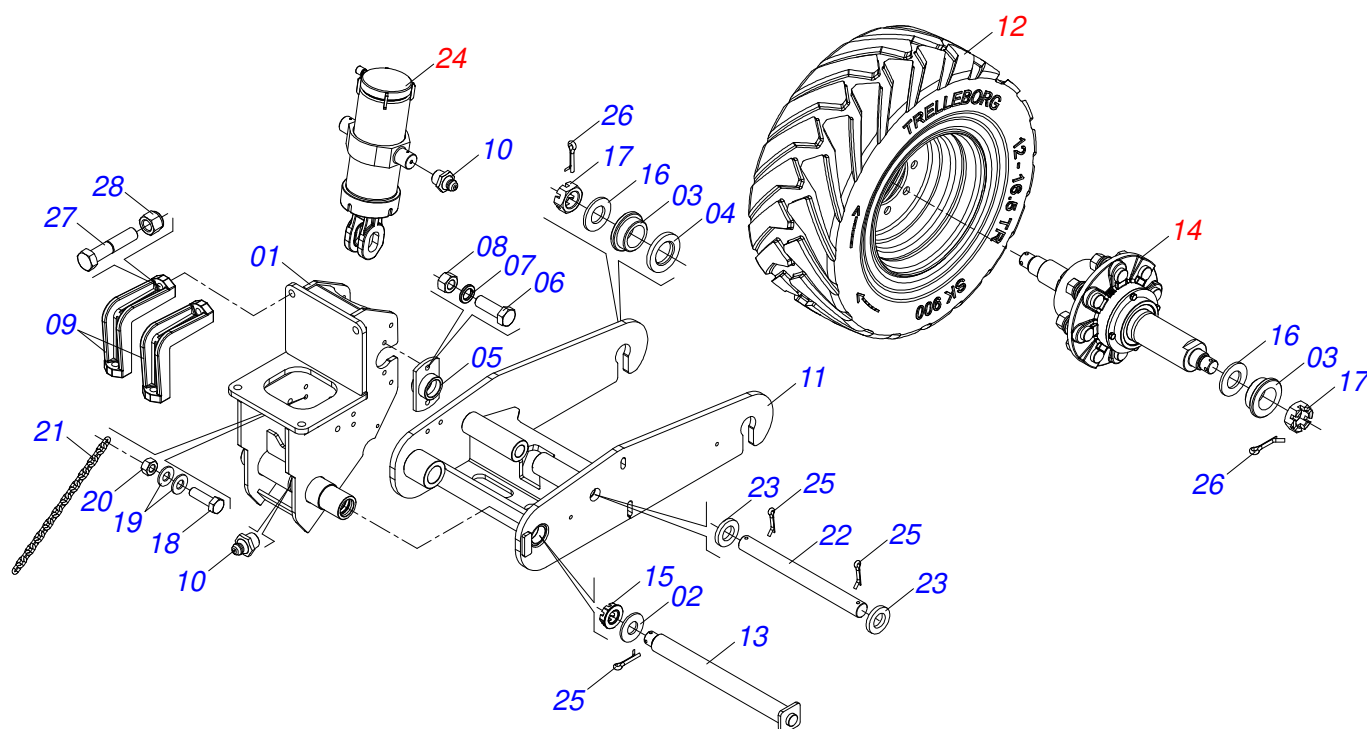

Item	Code	Description	See page	QT
01	0521064543	WHEEL SUPPORT		01
02	0561019929	FLAT WASHER		01
03	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
04	0551014508	FLAT WASHER		01
05	0521069575	FLANGE CYLINDER HYDRAULIC FIXER		02
06	0503010920	1/2" X 1.1/2" BOLT		04
07	0503010019	1/2" SPRING WASHER		04
08	0503010060	1/2" NUT		04
09	0502012731	WHEEL HOLDER		02
10	0503010002	1800 GREASE FITTING		03
11	0521064550	CARRYING-WHEELS FORK		01
12	0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	83	01
13	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
14	0511054495	WHEEL WITHOUT TIRE WITHOUT TRANSMISSION	29	01
15	0501010630	1.1/2" CASTLE NUT		01
16	0501017779	32 X 60 X 4.75 FLAT WASHER		02
17	0503011052	1.1/4" X 0.77" CASTLE NUT		02
18	0503010882	BOLT		01
19	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
20	0503010337	5/16" NUT		01
21	0503033335	CURRENT 6 X 21 ELOS		01
22	0581017245	AXLE BODY		01
23	0531012874	FLAT WASHER		02
24	0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	30	01
25	0503010523	1/4" X 2" COTTERPIN		03
26	0503010571	1/4" X 1.1/2 COTTERPIN		02
27	0503012334	3/4" UNC X 3.1/2" BOLT		04
28	0503011075	3/4" UNC NUT		04

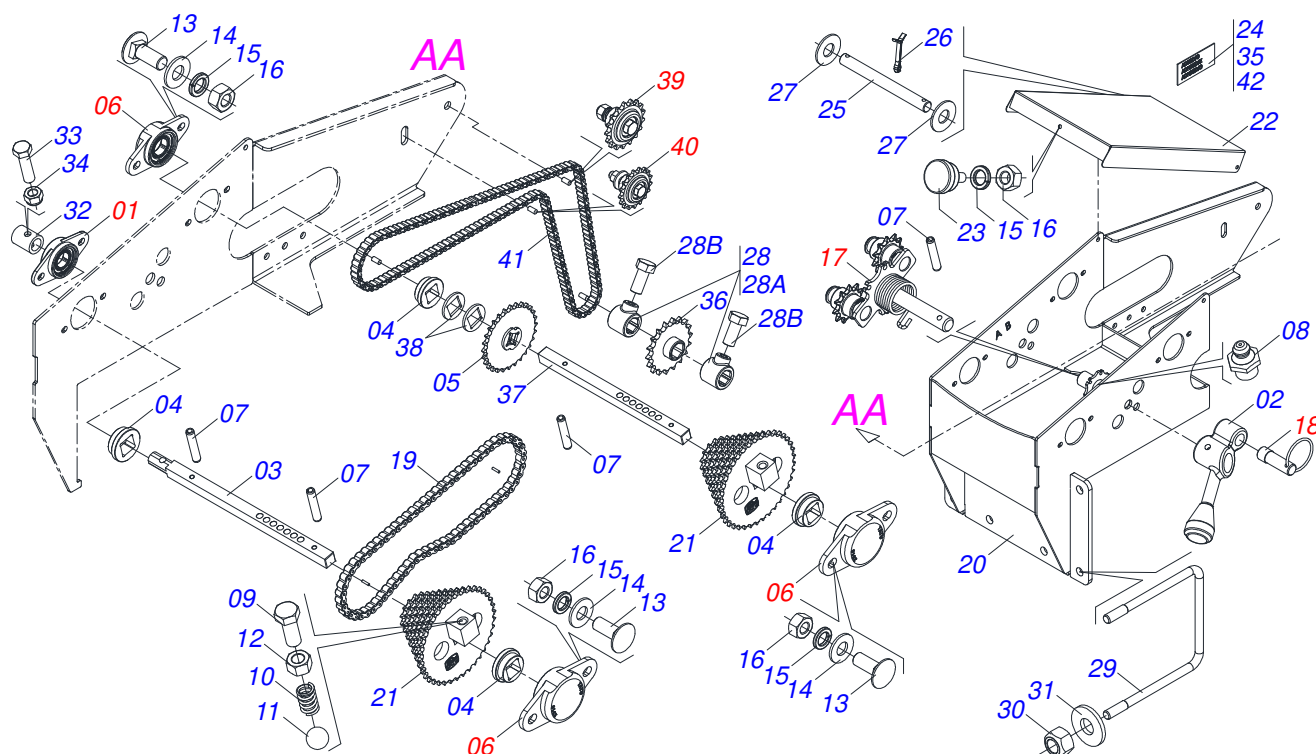


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	71	01
02	0502011758	REAR TENSIONER LEVER		01
03	0551018627	SIDE GEAR BOX DRIVER AXLE		01
04	0503030303	SUPPORT WASHER		04
05	0511064536	28Z GEAR		01
06	0501056271	BEARING CLOSED	72	03
07	0503010292	0.2" X 1.6" SPRING PIN		05
08	0503010002	1800 GREASE FITTING		01
09	0503010395	1/2" X 1-1/4" BOLT		02
10	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
11	0503012389	1/2 BALL		02
12	0503010060	1/2" NUT		02
13	0503011953	5/16" X 1" BOLT		08
14	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
15	0503010179	5/16" ZN SPRING WASHER		09
16	0503010337	5/16" NUT		09
17	0501052778	CHAIN TENSIONER ASSY	35	01
18	0501048790	AXLE WITH LINK ASSY	34	01
19	0503012204	40-1 CHAIN X 82 LINK + RED		01
20	0521068351	LEFT SIDE CHANGE SUPPORT		01
21	0511060396	DRIVE/DRIVEN AXLE CONE		02
22	0551011625	PROTECTION COVER		01
23	0503010386	CABLE		01
24	0503032986	ADHESIVE LABEL		01
25	0551018629	GEAR BOX COVER FIXER ROD		01
26	0503010257	1/8" X 1" COTTERPIN		02
27	0501013518	FLAT WASHER		02
28	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		02
28A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
28B	0503010256	3/8" X 3/4" BOLT		01
29	0551015037	5/8" UNC X 210 X 198 FASTENER		02


ASSY LEFT EXCHANGE

0521056027

Item	Code	Description	See page	QT
30	0503012412	5/8 UNC SELF LOCKING NUT		04
31	0501012140	FLAT WASHER		04
32	0551018630	CARDAN SHAFT GUIDES SLEEVE		01
33	0503011268	3/8" X 2-1/2" BOLT		01
34	0503013357	3/8" SELF-ADJUSTING NUT		01
35	0503034417	LETTER ADHESIVE LABEL		01
36	0511069528	GEAR 18Z		01
37	0551018581	CENTRAL GEAR BOX DRIVEN AXLE		01
38	0521018630	1.4" X SQUARE 0.8" WASHER		02
39	0511053045	TENSIONER REAR OFFSET HIGHER	40	01
40	0511054476	RIGHT TENSIONER CENTRAL EXCHANGE	33	01
41	0503019467	TRANSMISSION CURRENT		01
42	0503032988	ADHESIVE LABEL		01

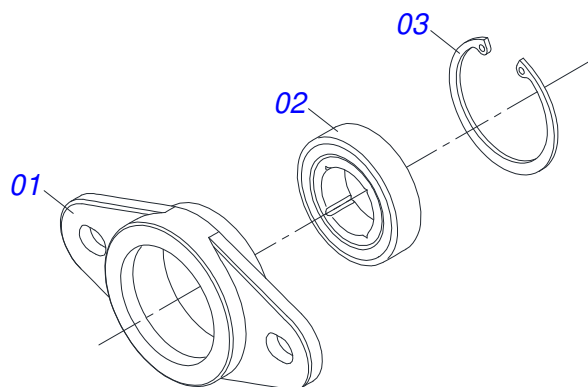


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

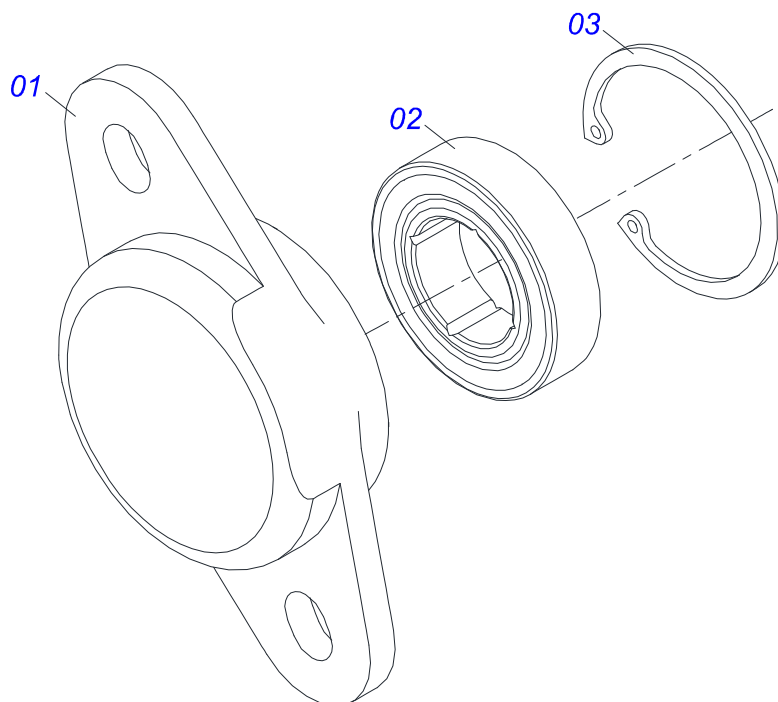


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

LEFT SUPPORT


0521057524

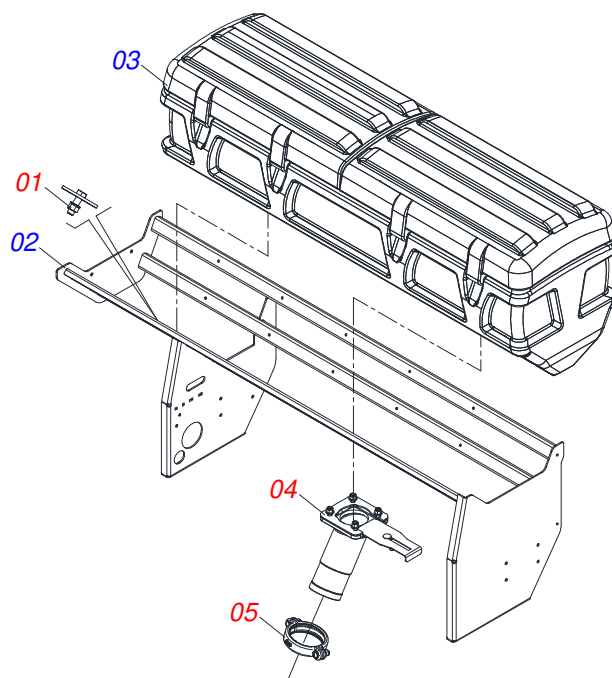


Item	Code	Description	See page	QT
001	0521051407	FIXER SILO FERTILIZER	43	08
002	0531060582	SUPORT LEFT 5 MOUTH 2033 X 1674		01
003	0503062962	SILO SEED 05 ASSY MOUTH		01
004	0521055365	SEED CONDUCTOR	45	05
005	0521050525	FIXER FERTILIZER CONDUCTOR	44	05

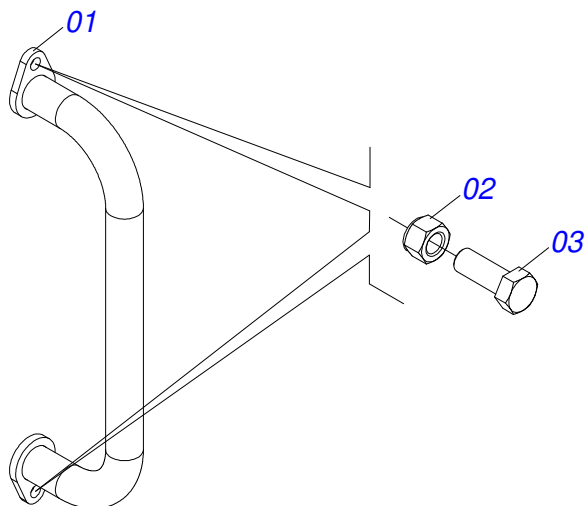

Item	Code	Description	See page	QT
01	0521068962	HANDLE		01
02	0503013357	3/8" SELF-ADJUSTING NUT		02
03	0503010237	3/8" X 1" BOLT		02

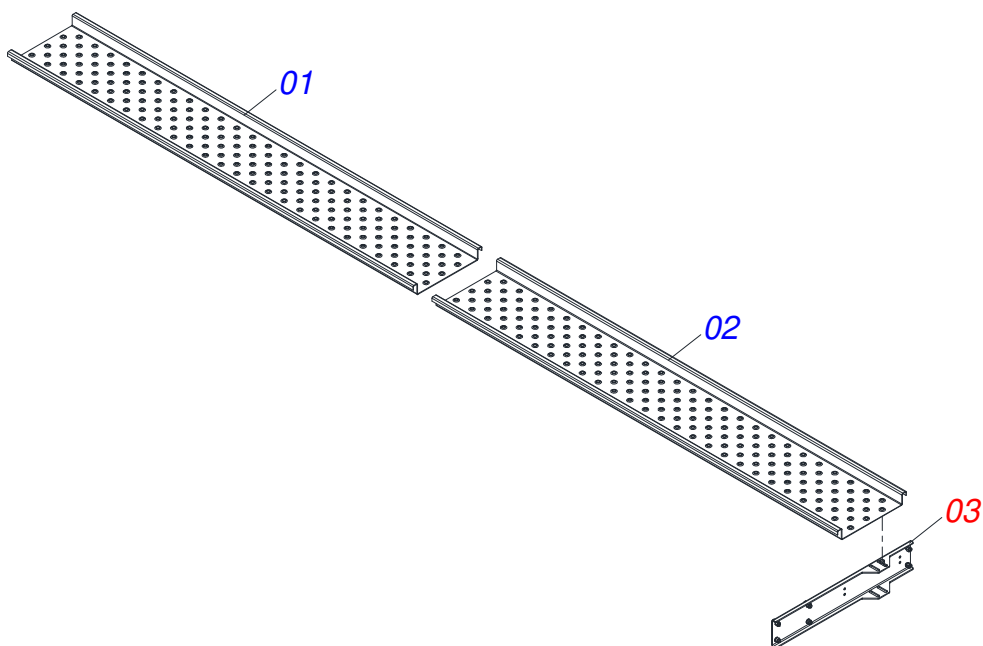


Item	Code	Description	See page	QT
001	0581017735	PLATFORM ASSY		01
002	0591011211	PLATFORM		01
003	0521053066	PLATFORM SUPPORT ASSY		04

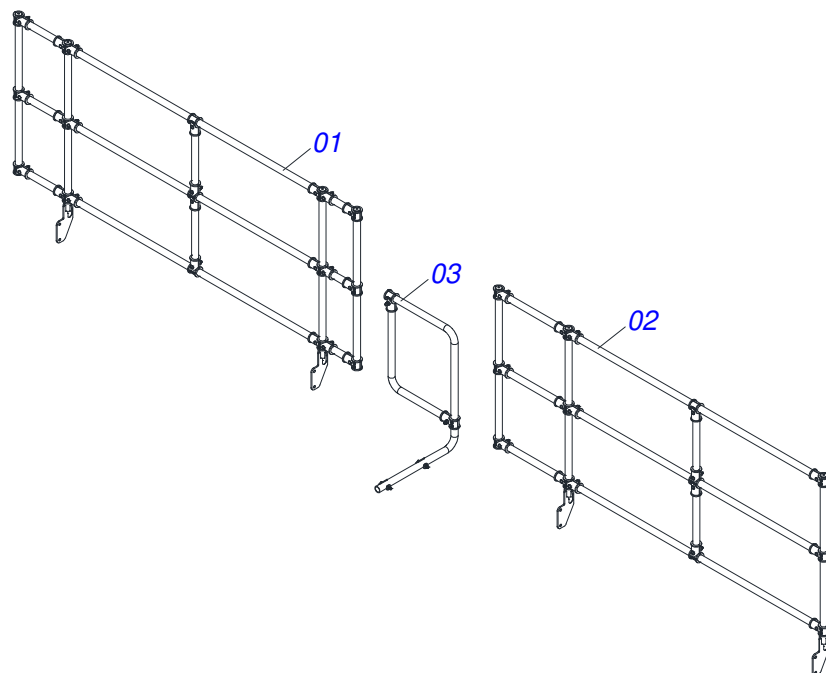


Item	Code	Description	See page	QT
001	0521054122	LEFT SIDE HANDRAIL 2282 X 1724		01
002	0521055195	LEFT SIDE HANDRAIL 2192 X 1726		01
003	0521056562	RIGHT INTERNAL HANDRAIL		01

ASSY SIDE LADDER

0511053320

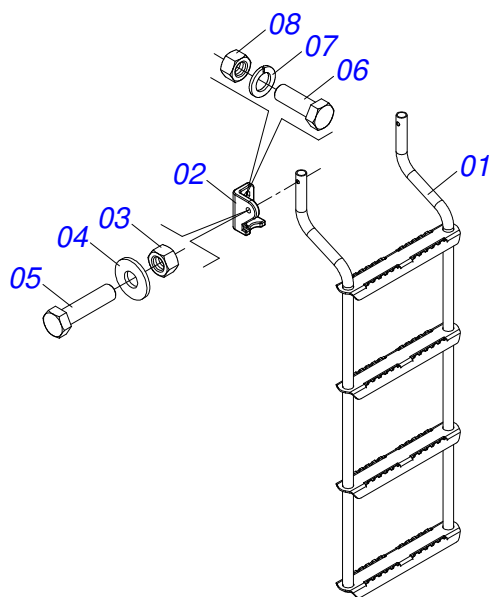


Item	Code	Description	See page	QT
01	0511069819	SIDE LADDER		01
02	0502012742	FIXER SUPPORT LADDER		02
03	0503013357	3/8" SELF-ADJUSTING NUT		02
04	0501010984	FLAT WASHER		02
05	0503011179	3/8" X 2-1/4" BOLT		02
06	0503010237	3/8" X 1" BOLT		04
07	0503010025	3/8" SPRING WASHER		04
08	0503010026	3/8" NUT		04

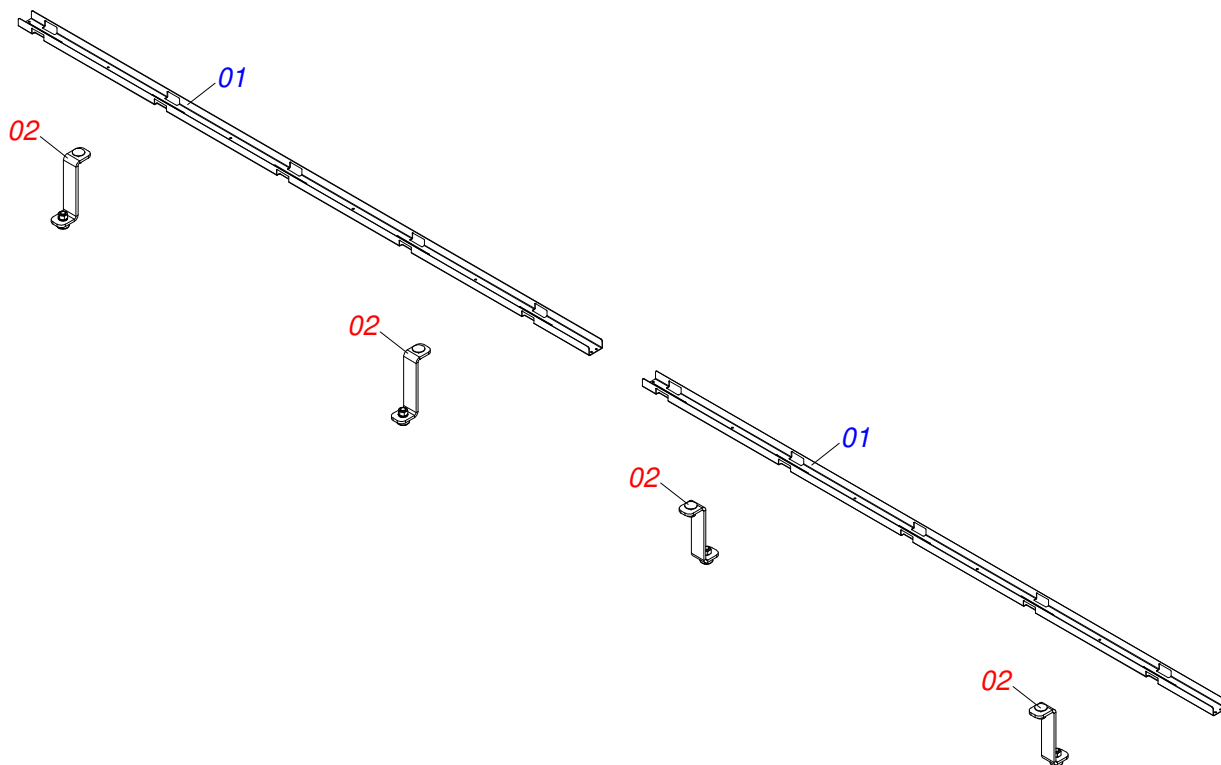

Item	Code	Description	See page	QT
01	0581017950	GUTTER		02
02	0521055102	BIGGEST FULL GUTTER SUPPORT		04

LEFT SIDE DUTY ASSEMBLY

0521057508

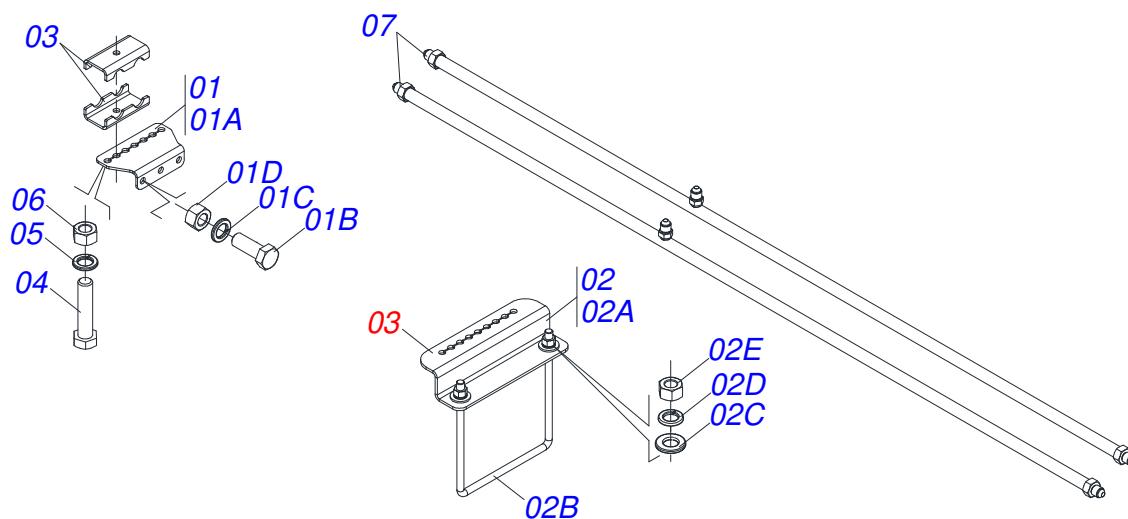


Item	Code	Description	See page	QT
001	0511059943	SUPPORT FASTENER ASSY		02
001A	0581011417	DUTO HOLDER SUPPORT		01
001B	0503010237	3/8" X 1" BOLT		02
001C	0503010025	3/8" SPRING WASHER		02
001D	0503010026	3/8" NUT		02
002	0511059928	SIDE DUTY SUPPORT		01
002A	0581013094	DUTO HOLDER SUPPORT		01
002B	0571019756	FASTENER 1/2 UNC X 220 X 198 ZN		01
002C	0511017302	FLAT WASHER		02
002D	0503010019	1/2" SPRING WASHER		02
002E	0503010060	1/2" NUT		02
003	0581018407	BODY FASTENER 2 DUCTS		06
004	0503011268	3/8" X 2-1/2" BOLT		03
005	0503010025	3/8" SPRING WASHER		03
006	0503010026	3/8" NUT		03
007	0531060081	OIL TUBE		02




Item	Code	Description	See page	QT
01	0503032988	ADHESIVE LABEL		01
02	0503032986	ADHESIVE LABEL		01
03	0503033621	ADHESIVE LABEL		01
04	0503033424	DIRECT PLANTIO ADHESIVE LABEL		01
05	0503033417	ADHESIVE LABEL		01
06	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING		01
07	0503031827	LUBRICATE AND RETIGHTEN DAILY DECAL		01
08	0503031565	ADHESIVE LABEL CARE		01

DRIVE SHAFT

0501048783

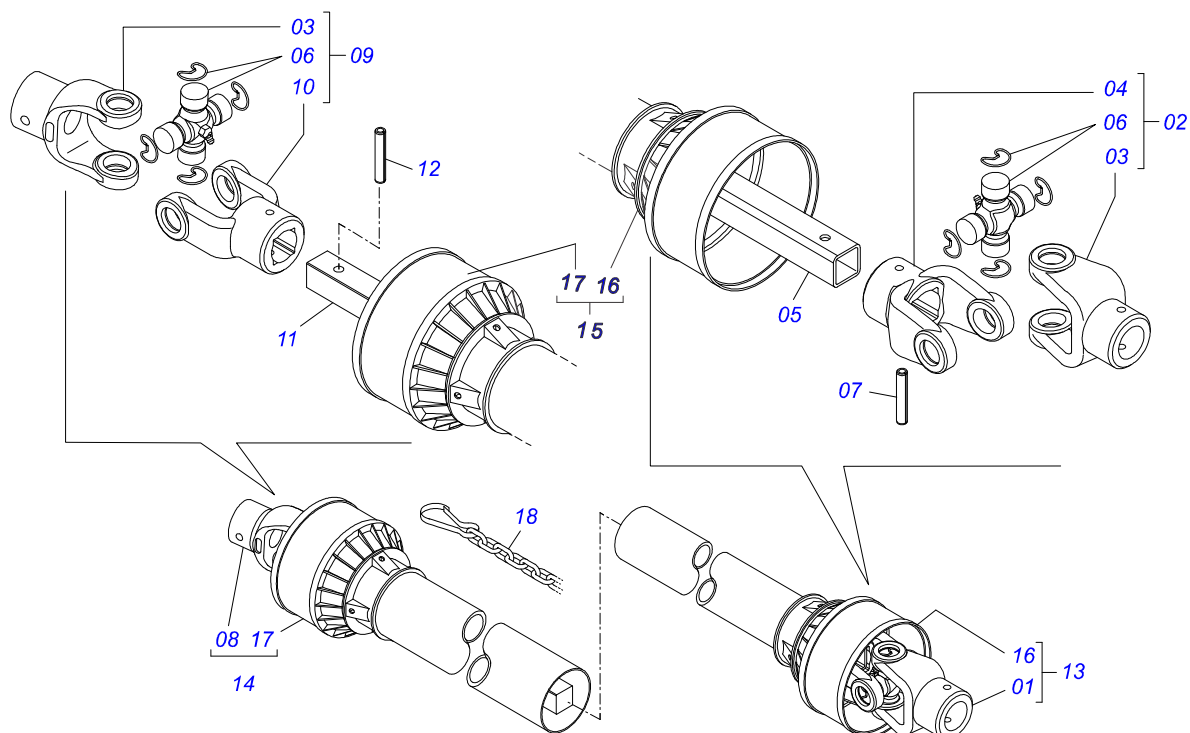

Item	Code	Description	See page	QT
01	0501052166	SLEEVE UNIVERSAL JOINT		01
02	0501051718	UNIVERSAL JOINT		01
03	0502010558	4-20 TERMINAL WITH ROLES		02
04	0502011426	2-20 TERMINAL		01
05	0521013798	0.9" X 35" SQUARE SLEEVE		01
06	0503010835	CARDAN CROSSPICE		02
07	0503010839	03"X 0.6" SPRING PIN		01
08	0501052167	AXLE UNIVERSAL JOINT		01
09	0501051720	UNIVERSAL JOINT		01
10	0502011427	3-20 TERMINAL		01
11	0521013795	0.9" X 35" SQUARE SHAFT		01
12	0503010301	0.3" X 1.8" SPRING PIN		01
13	0501052168	PROT/SLEEVE UNIVERSAL JOINT		01
14	0501052169	PROT/AXLE UNIVERSAL JOINT		01
15	0503012271	PROTECTION ASSY		01
16	0503012272	PROTECTION FOR UNIV JOINT SLEEVE		01
17	0503012273	PROTECTION FOR UNIV JOINT AND AXLE		01
18	0503012023	CHAIN FOR PROTECTION		02

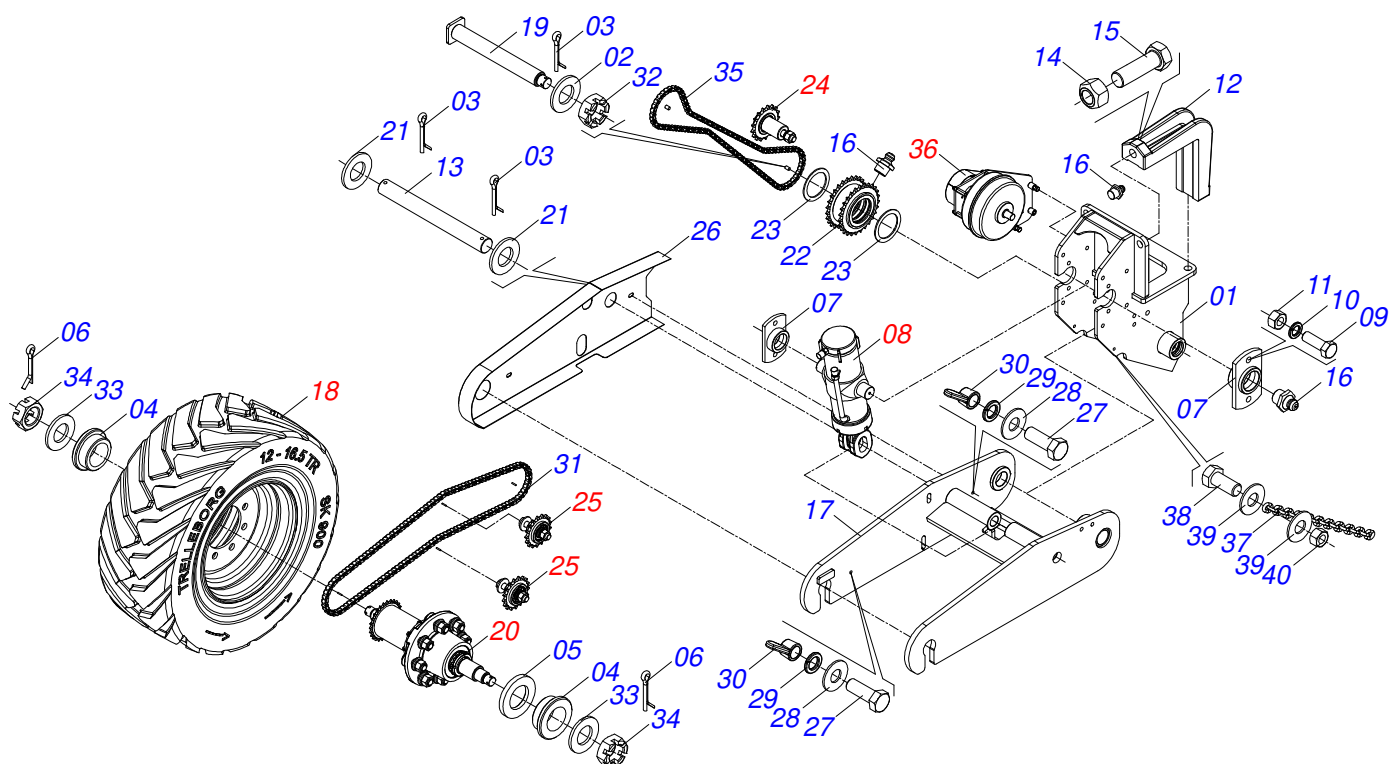


Item	Code	Description	See page	QT
01	0521064543	WHEEL SUPPORT		01
02	0561019929	FLAT WASHER		01
03	0503010523	1/4" X 2" COTTERPIN		03
04	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
05	0551014508	FLAT WASHER		01
06	0503010571	1/4" X 1.1/2 COTTERPIN		02
07	0521069575	FLANGE CYLINDER HYDRAULIC FIXER		02
08	0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	30	01
09	0503010920	1/2" X 1.1/2" BOLT		04
10	0503010019	1/2" SPRING WASHER		04
11	0503010060	1/2" NUT		04
12	0502012731	WHEEL HOLDER		02
13	0581017245	AXLE BODY		01
14	0503011075	3/4" UNC NUT		04
15	0503012334	3/4" UNC X 3.1/2" BOLT		04
16	0503010002	1800 GREASE FITTING		04
17	0521064550	CARRYING-WHEELS FORK		01
18	0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	83	01
19	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
20	0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR	84	01
21	0531012874	FLAT WASHER		02
22	0511068422	WHEEL GEAR DOBLE		01
23	0551018571	FLAT WASHER		02
24	0511054463	WHEEL TENSIONER SUPORT CENTRAL	85	01
25	0511054464	WHEEL FORK TENSIONER	86	02
26	0561019941	RIGHT PROTECTIVE CAP WHEELS		01
27	0503010849	3/8" X 1-1/2" BOLT		02
28	0501013518	FLAT WASHER		02
29	0503010025	3/8" SPRING WASHER		02
30	0503010209	3/8" UNC BUTTERFLY NUT		02
31	0503016419	50-1 CHAIN X 128 LINK + REDUCION		01


RIGHT WHEEL WITH TRANSMISSION

0521055326


Item	Code	Description	See page	QT
32	0501010630	1.1/2" CASTLE NUT		01
33	0501017779	32 X 60 X 4.75 FLAT WASHER		02
34	0503011052	1.1/4" X 0.77" CASTLE NUT		02
35	0503014857	50-1 X CHAIN X 122 LINK + REDUCION		01
36	0511054500	TRANSMISSION EXCHANGE RIGHT	87	01
37	0503033335	CURRENT 6 X 21 ELOS		01
38	0503010882	BOLT		01
39	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
40	0503010337	5/16" NUT		01

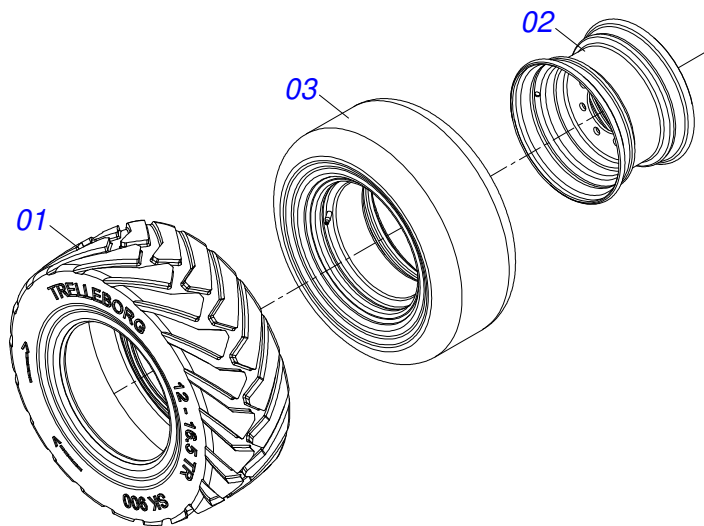


Item	Code	Description	See page	QT
01	0503033713	TIRE 12 X 16,5/12L TR SK 900		01
02	0503015029	WHEEL		01
03	0503015355	INNER TIRE		01

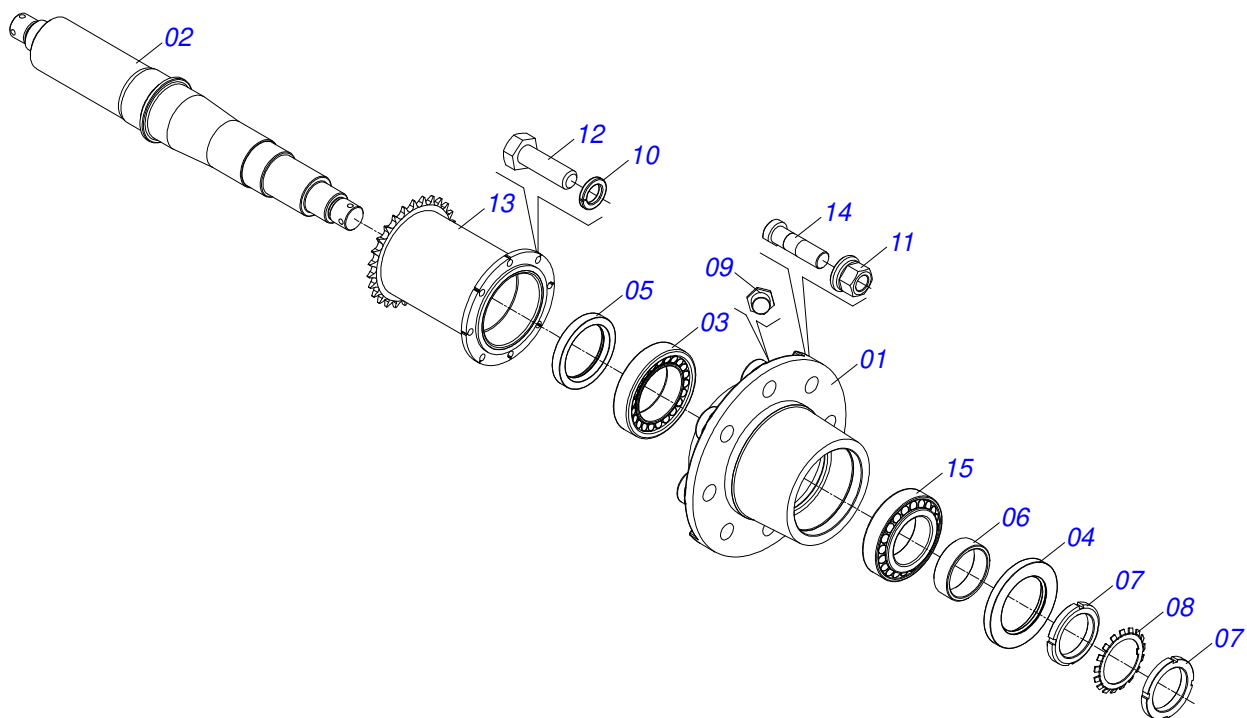


Item	Code	Description	See page	QT
01	0502040760	CARRYING WHEEL HUB		01
02	0571015180	WHEEL AXLE		01
03	0503013633	BEARING 33287/33462		01
04	0503010009	RETAINER 00573-B		01
05	0503010086	SEAL 0009B-B		01
06	0551014473	GLOVE		01
07	0503012702	KM-12 NUT		02
08	0503012703	LOCK WASHER		01
09	0503010002	1800 GREASE FITTING		01
10	0503011444	SPRING WASHER		08
11	0503014048	22 X 1.5 HEX NUT		08
12	0503010363	5/16" X 1" BOLT		08
13	0521064563	27Z GEAR		01
14	0503014050	22 X 1.5 BOLT		08
15	0503013496	3982/3920 ROLLER BEARING		01
16	1882970002	GREASE SOAP		01

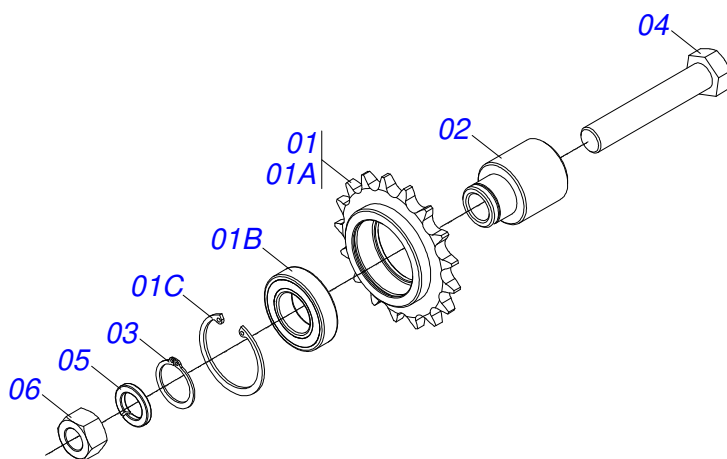


Item	Code	Description	See page	QT
01	0511054462	17Z GEAR		01
01A	0511061836	17Z GEAR		01
01B	0503011410	ROLLER BEARING		01
01C	0503011105	SEAL RING		01
02	0571015149	TIGHTENER AXLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0501010163	5/8" X 4-1/2" BOLT		01
05	0503010027	5/8" SPRING WASHER		01
06	0503010013	5/8" NUT		01

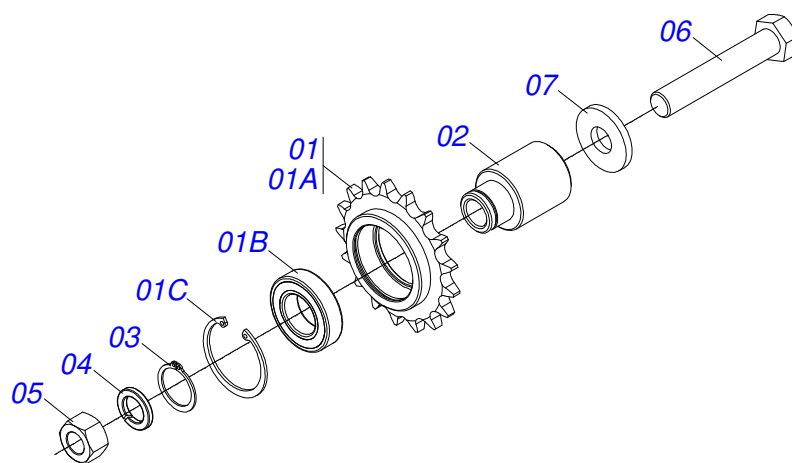

Item	Code	Description	See page	QT
01	0511054462	17Z GEAR		01
01A	0511061836	17Z GEAR		01
01B	0503011410	ROLLER BEARING		01
01C	0503011105	SEAL RING		01
02	0571015150	SLEEVE TENSIONER WHEEL		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0503010027	5/8" SPRING WASHER		01
05	0503010013	5/8" NUT		01
06	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
07	0501012140	FLAT WASHER		01

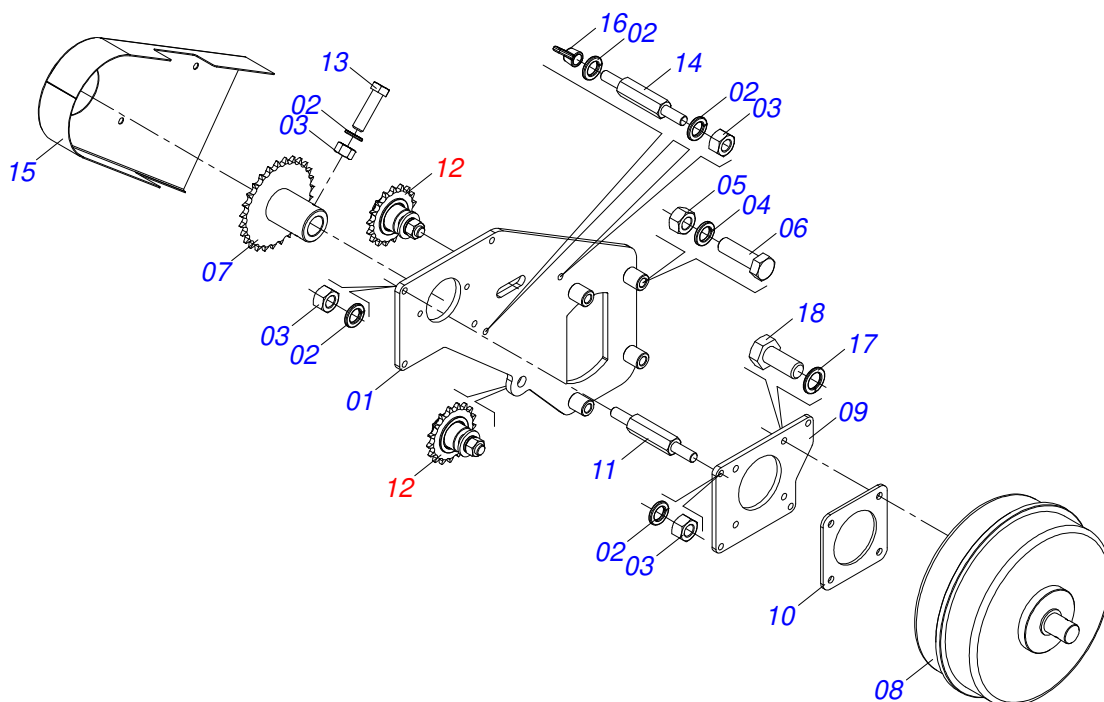

Item	Code	Description	See page	QT
01	0521064556	SUPPORT ASSY TRANSMISSION WHEEL SIDE		01
02	0503010025	3/8" SPRING WASHER		13
03	0503010026	3/8" NUT		11
04	0503010019	1/2" SPRING WASHER		03
05	0503010060	1/2" NUT		03
06	0503010741	1/2" X 2-3/4" BOLT		03
07	0521064555	27Z GEAR		01
08	0503062231	CLUTCH		01
09	0571015139	FIXER PLATE		01
10	0571015138	CHOCK FRICÇÃO		01
11	0571015141	FIXER CENTRAL TRANSMISSION		04
12	0511054461	STRETCHER TOP TRANSMISSION SWIRLED	27	02
13	0503011268	3/8" X 2-1/2" BOLT		01
14	0571015142	FIXER		02
15	0571015143	RIGHT PROTECTION SUPPORT WHEEL		01
16	0503010209	3/8" UNC BUTTERFLY NUT		02
17	0503013542	M10 SPRING WASHER		04
18	0503010188	M10 X 1,5 X 30 BOLT		04

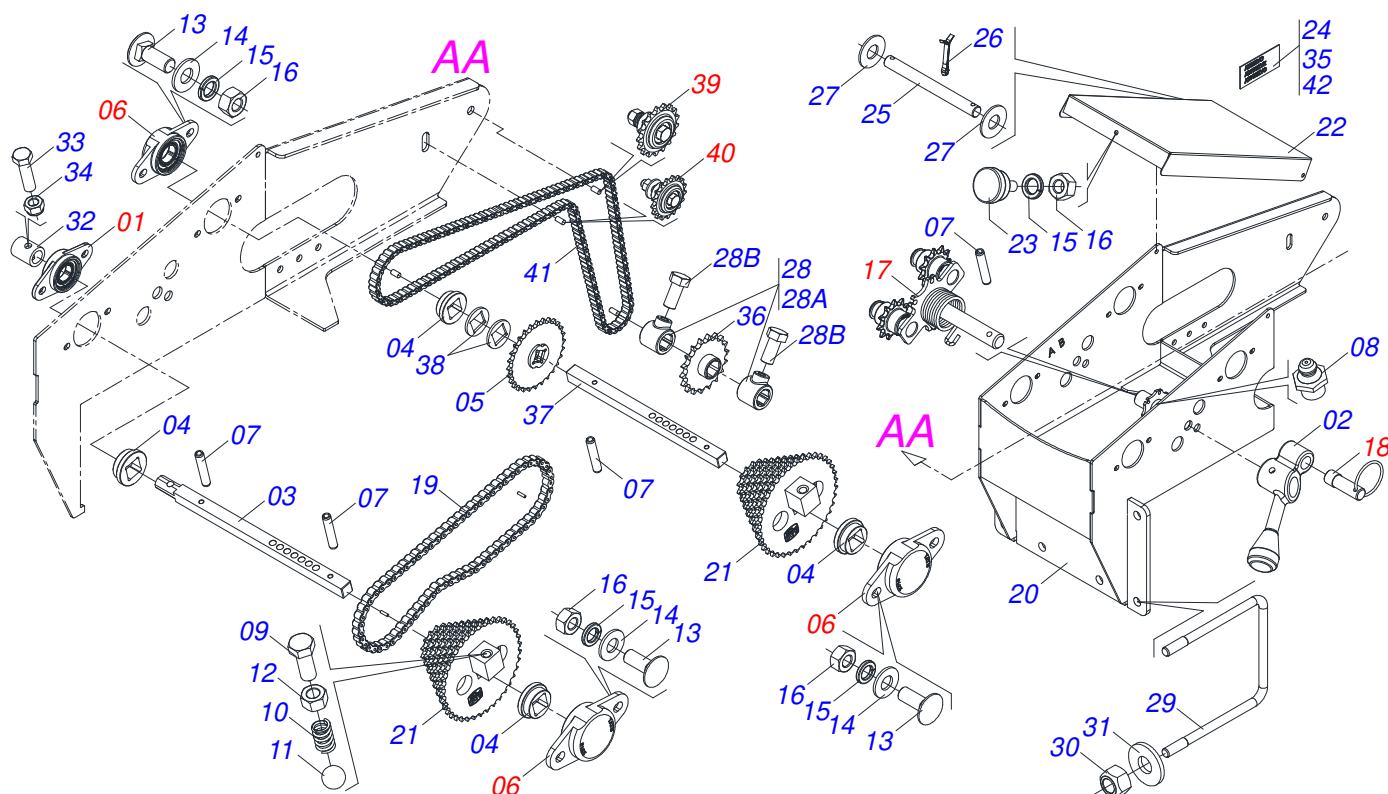


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	71	01
02	0502011758	REAR TENSIONER LEVER		01
03	0551018627	SIDE GEAR BOX DRIVER AXLE		01
04	0503030303	SUPPORT WASHER		04
05	0511064536	28Z GEAR		01
06	0501056271	BEARING CLOSED	72	03
07	0503010292	0.2" X 1.6" SPRING PIN		05
08	0503010002	1800 GREASE FITTING		01
09	0503010395	1/2" X 1-1/4" BOLT		02
10	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
11	0503012389	1/2 BALL		02
12	0503010060	1/2" NUT		02
13	0503011953	5/16" X 1" BOLT		08
14	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
15	0503010179	5/16" ZN SPRING WASHER		09
16	0503010337	5/16" NUT		09
17	0501052776	CHAIN TENSIONER RIGHT ASSY GREATEST		01
18	0501048790	AXLE WITH LINK ASSY	34	01
19	0503012204	40-1 CHAIN X 82 LINK + RED		01
20	0521068353	RIGHT SIDE EXCHANGE SUPPORT		01
21	0511060396	DRIVE/DRIVEN AXLE CONE		02
22	0551011625	PROTECTION COVER		01
23	0503010386	CABLE		01
24	0503032987	ADHESIVE LABEL		01
25	0551018629	GEAR BOX COVER FIXER ROD		01
26	0503010257	1/8" X 1" COTTERPIN		02
27	0501013518	FLAT WASHER		02
28	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		02
28A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
28B	0503010256	3/8" X 3/4" BOLT		01
29	0551015037	5/8" UNC X 210 X 198 FASTENER		02


ASSY RIGHT EXCHANGE

0521056044


Item	Code	Description	See page	QT
30	0503012412	5/8 UNC SELF LOCKING NUT		04
31	0501012140	FLAT WASHER		04
32	0551018630	CARDAN SHAFT GUIDES SLEEVE		01
33	0503011268	3/8" X 2-1/2" BOLT		01
34	0503013357	3/8" SELF-ADJUSTING NUT		01
35	0503034417	LETTER ADHESIVE LABEL		01
36	0511069528	GEAR 18Z		01
37	0551018581	CENTRAL GEAR BOX DRIVEN AXLE		01
38	0521018630	1.4" X SQUARE 0.8" WASHER		02
39	0511053045	TENSIONER REAR OFFSET HIGHER	40	01
40	0511054476	RIGHT TENSIONER CENTRAL EXCHANGE	33	01
41	0503019467	TRANSMISSION CURRENT		01
42	0503032988	ADHESIVE LABEL		01

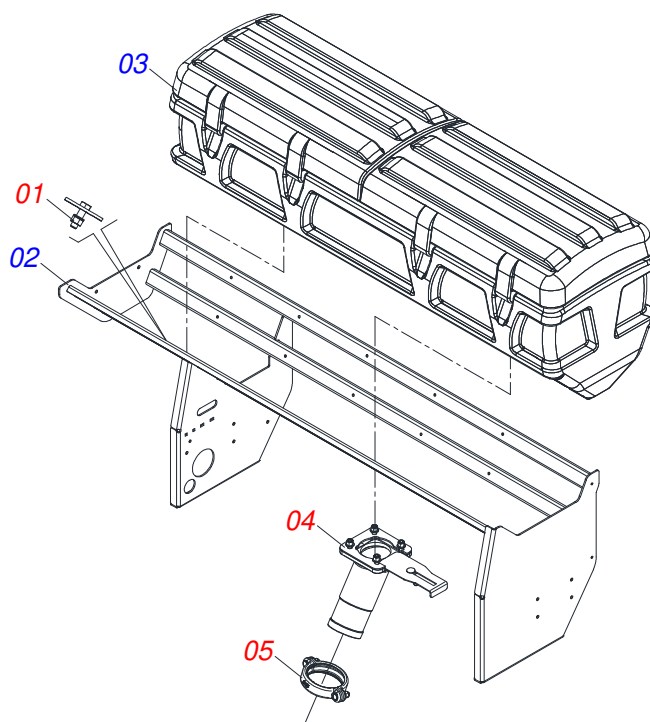

Item	Code	Description	See page	QT
001	0521051407	FIXER SILO FERTILIZER	43	08
002	0531060583	RH SUPPORT		01
003	0503062962	SILO SEED 05 ASSY MOUTH		01
004	0521055365	SEED CONDUCTOR	45	05
005	0521050525	FIXER FERTILIZER CONDUCTOR	44	05

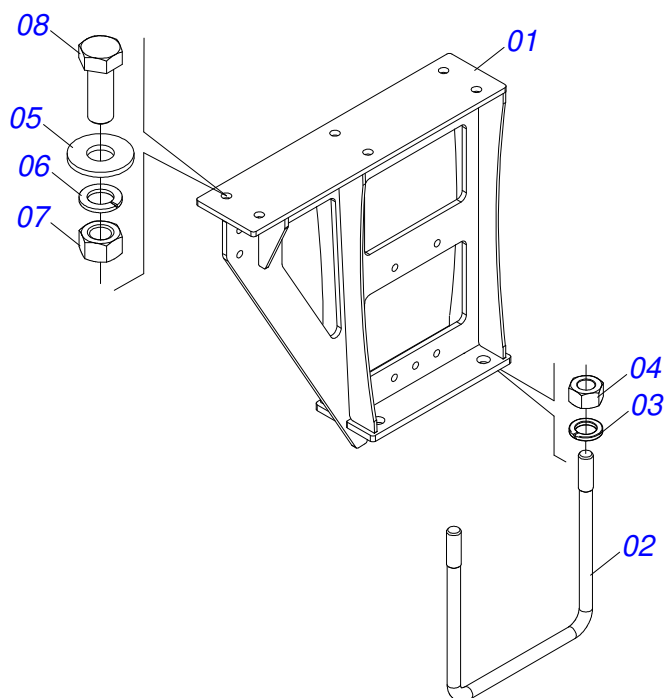


Item	Code	Description	See page	QT
01	0521068040	DEPTH SUPPORT		01
02	0551015037	5/8" UNC X 210 X 198 FASTENER		02
03	0503010027	5/8" SPRING WASHER		04
04	0503010013	5/8" NUT		04
05	0511017302	FLAT WASHER		03
06	0503010019	1/2" SPRING WASHER		03
07	0503010060	1/2" NUT		03
08	0503010920	1/2" X 1.1/2" BOLT		03

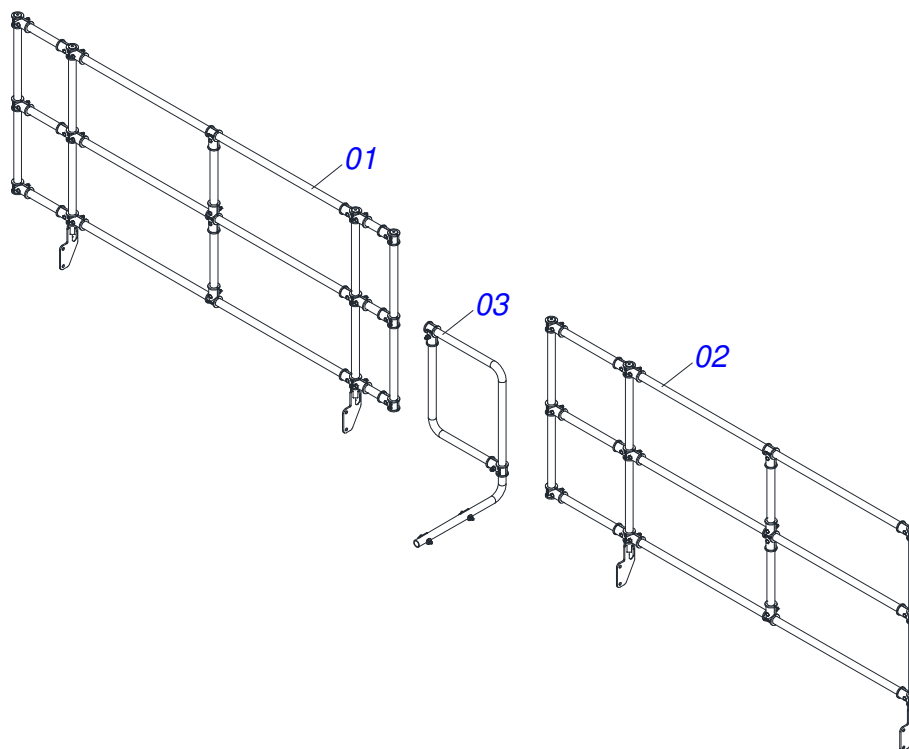


Item	Code	Description	See page	QT
001	0521055748	RIGHT SIDE HANDRAIL 2282 X 1724		01
002	0521055190	RIGHT SIDE HANDRAIL 2272 X 1808		01
003	0521056563	LEFT INTERNAL HANDRAIL		01

DRIVE SHAFT


0501046805

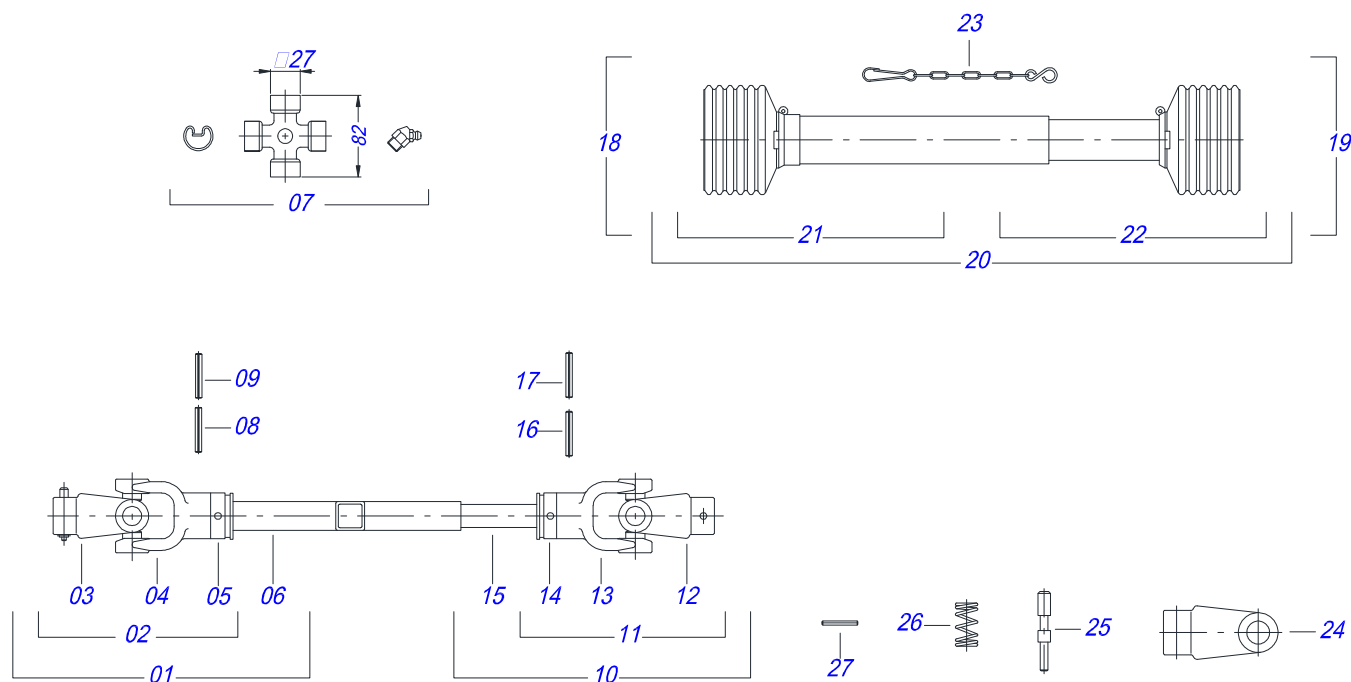


Item	Code	Description	See page	QT
01	0501051729	UNIVERSAL JOINT WITH SLEEVE/PROT		01
02	0501051727	UNIVERSAL JOINT WITH AXLE/PROT		01
03	0502010558	4-20 TERMINAL WITH ROLES		01
04	0502011426	2-20 TERMINAL		01
05	0503012069	ADAPTER FOR BUSHING PROTECT		01
06	0501017426	SLEEVE		01
07	0503010835	CARDAN CROSSPICE		01
08	0503010839	03"X 0.6" SPRING PIN		01
09	0503010301	0.3" X 1.8" SPRING PIN		01
10	0501051718	UNIVERSAL JOINT		01
11	0501051720	UNIVERSAL JOINT		01
12	0502011427	3-20 TERMINAL		01
13	0502010558	4-20 TERMINAL WITH ROLES		01
14	0503012070	ADAPTER FOR AXLE PROTECTION		01
15	0511010237	0.9" X 18" SQUARE SHAFT		01
16	0503010361	SPRING PIN		01
17	0503010756	0.2" X 2.4" SPRING PIN		01
18	0501051728	JOINT		01
19	0501051725	JOINT		01
20	0503012090	PROTECTION FOR UNIV JOINT AND SLEEV		01
21	0503012091	PROTECTION FOR UNIV JOINT AND AXLE		01
22	0503012279	PROTECTION FOR UNIV JOINT AND AXLE		01
23	0503012023	CHAIN FOR PROTECTION		01
24	0502010563	1-40 STRIATED 1.3/8" TERMINAL		01
25	0521010638	0.5" X 3.3" QUIC HITCH COUPL SHAFT		01
26	0503030518	0.5"X1.0"X 0.1" COMPRESSION SPRING		01
27	0503010838	0.1" X 0.8" SPRING PIN		01

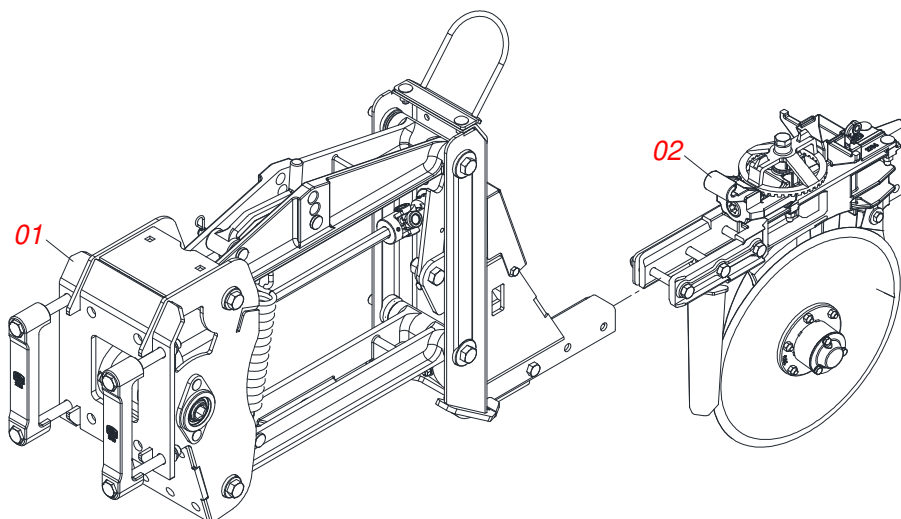


Item	Code	Description	See page	QT
01	0521055331	LONG FRONT SEED ROW		01
02	0521053199	LEFT REAR		01

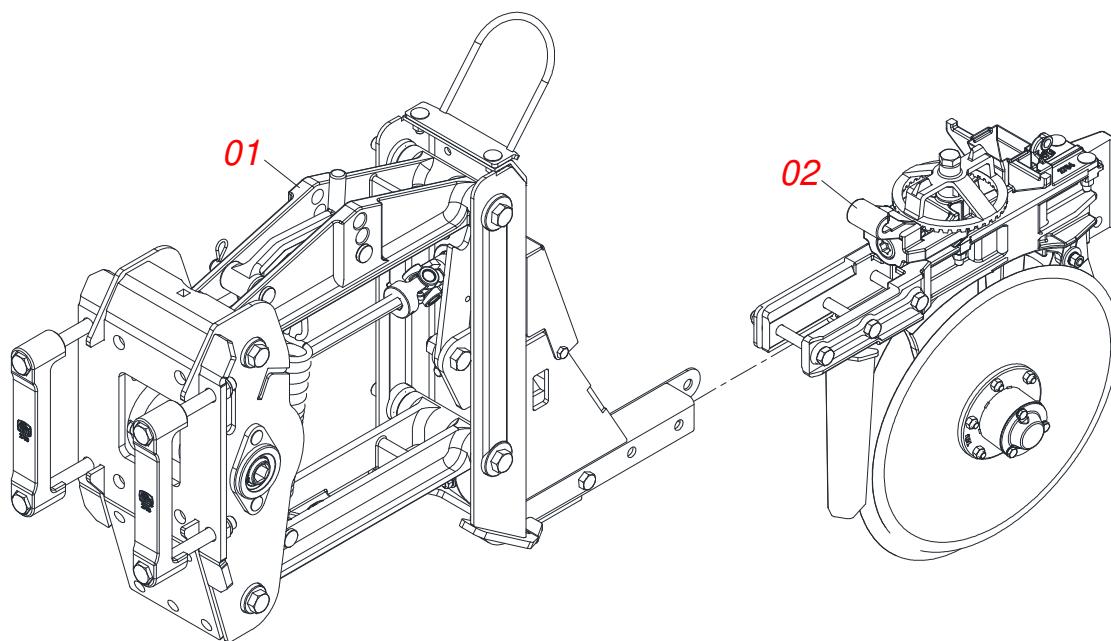


Item	Code	Description	See page	QT
01	0521055332	SHORT SEED ROW FRONT		01
02	0521053198	RIGHT REAR	109	01

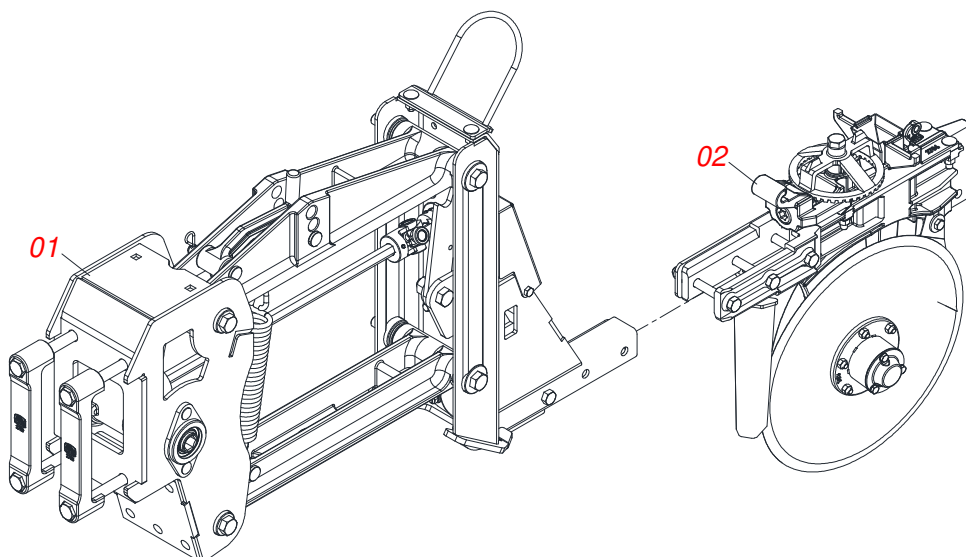


Item	Code	Description	See page	QT
01	0521054342	LONG FRONT SEED ROW	111	01
02	0521053199	LEFT REAR		01

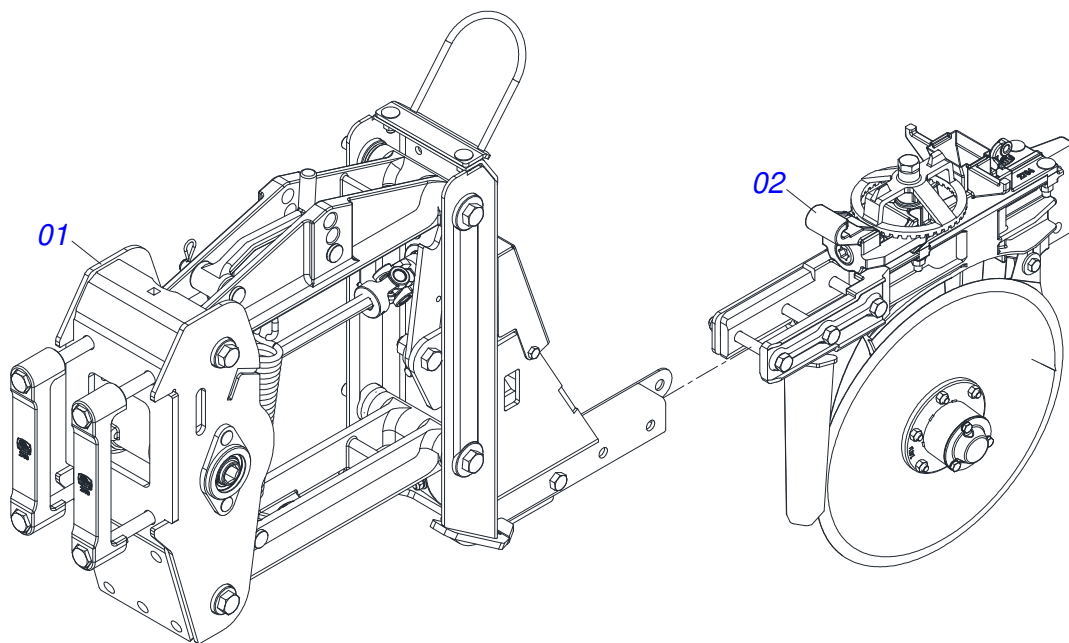


Item	Code	Description	See page	QT
01	0521055330	SHORT SEED ROW FRONT	112	01
02	0521053198	RIGHT REAR	109	01

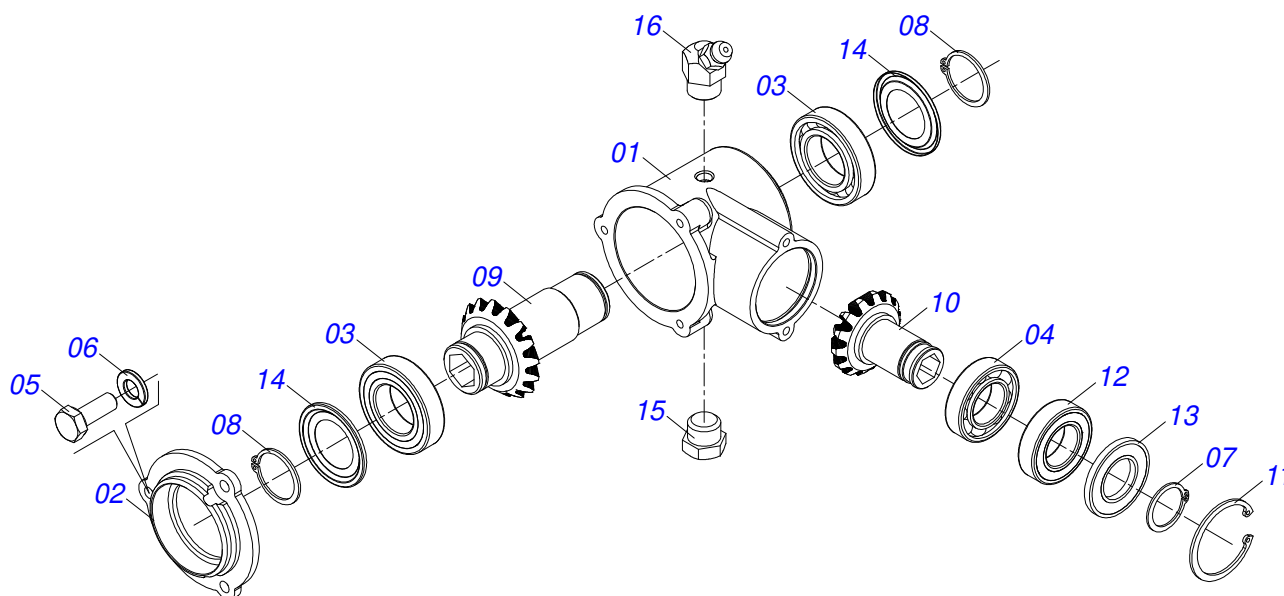


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503019361	BEARING 6006 RS1		02
04	0503019363	BEARING 6005		01
05	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
06	0503010143	1/4" SPRING WASHER		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503019362	BEARING 6005 RS1		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01

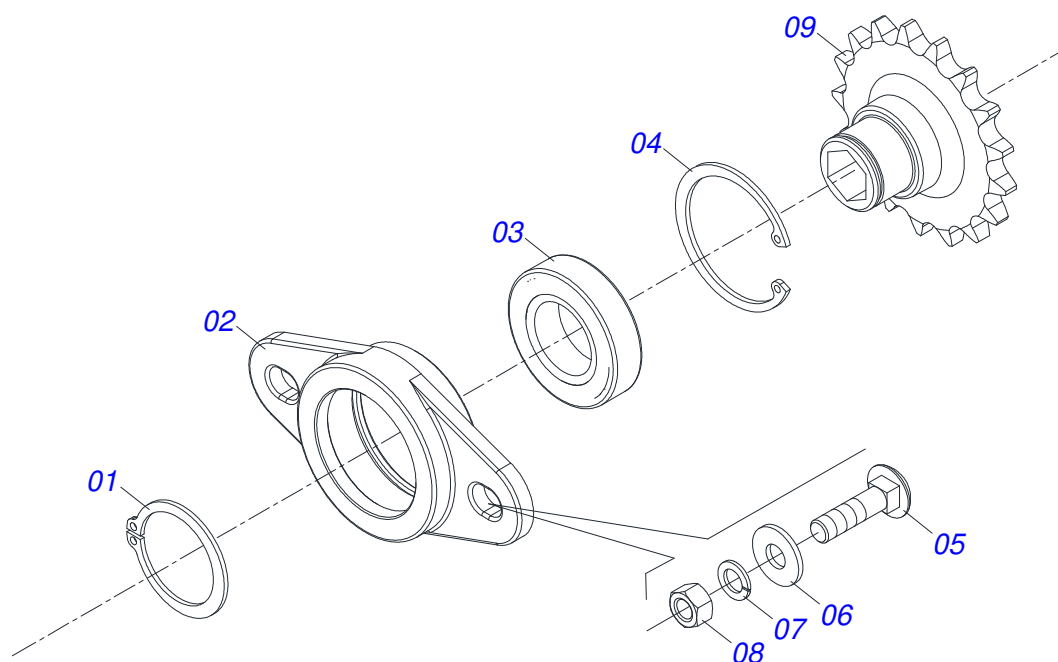


Item	Code	Description	See page	QT
01	0503010406	501025 CLAMPING RING (FOR AXLE)		01
02	0502011697	BEARING OF THE GEAR BOX		01
03	0503019356	BEARING 6005 2RS1		01
04	0503011105	SEAL RING		01
05	0503011953	5/16" X 1" BOLT		02
06	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
07	0503010179	5/16" ZN SPRING WASHER		02
08	0503010337	5/16" NUT		02
09	0502012819	17Z GEAR WITH HEX HOLE		01

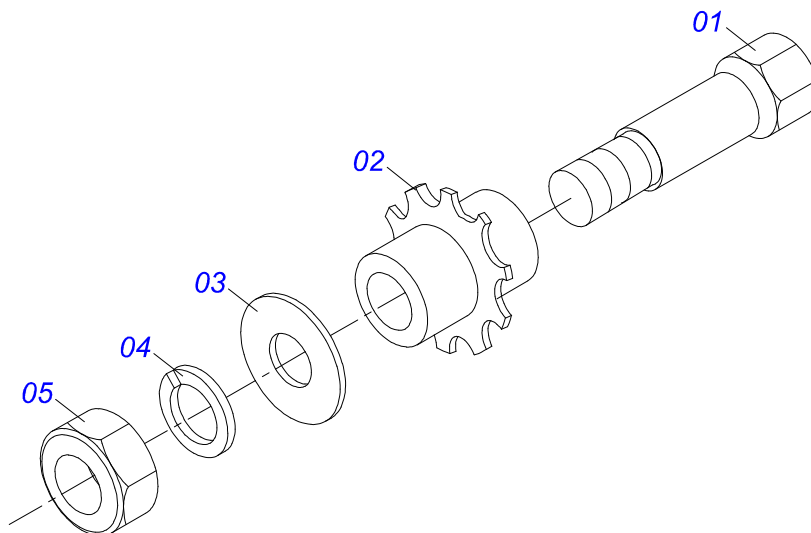


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

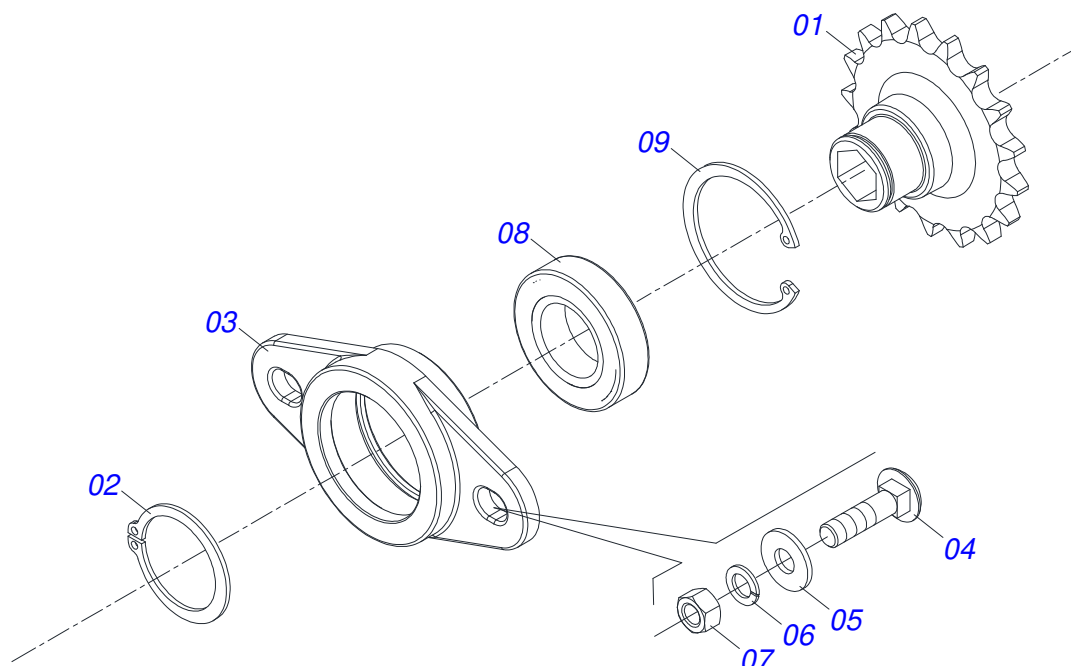


Item	Code	Description	See page	QT
01	0502012028	17Z GEAR WITH HEX HOLE AXLE, 0.5"		01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0502011697	BEARING OF THE GEAR BOX		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02
08	0503019356	BEARING 6005 2RS1		01
09	0503011105	SEAL RING		01

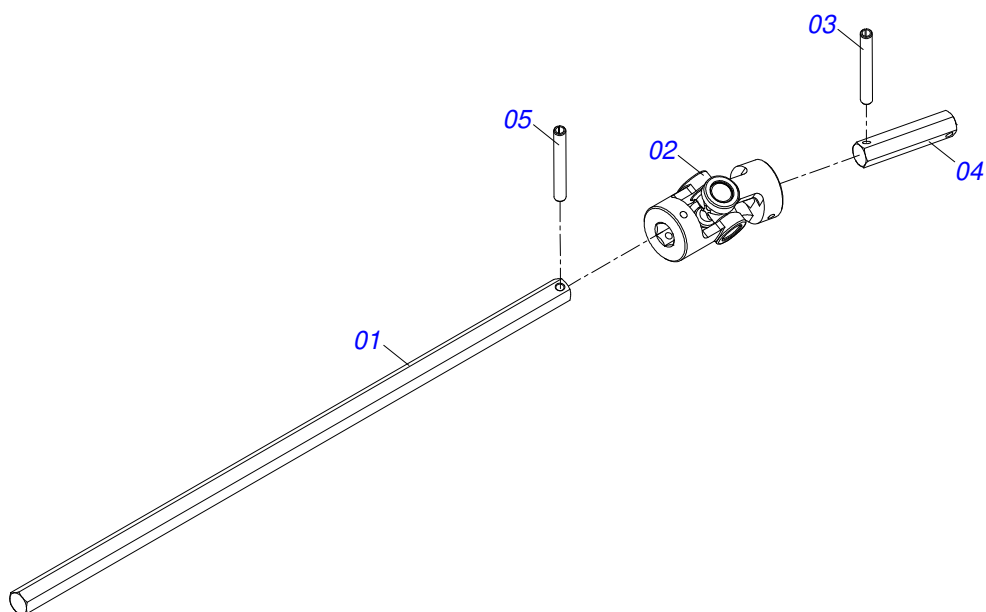

Item	Code	Description	See page	QT
01	0551018359	5/8" X 440 AXLE BODY		01
02	0501056296	UNIVERSAL JOINT		01
03	0503011855	0.2" X 1.8" SPRING PIN		01
04	0551018358	5/8" X 74 AXLE BODY		01
05	0503011855	0.2" X 1.8" SPRING PIN		01

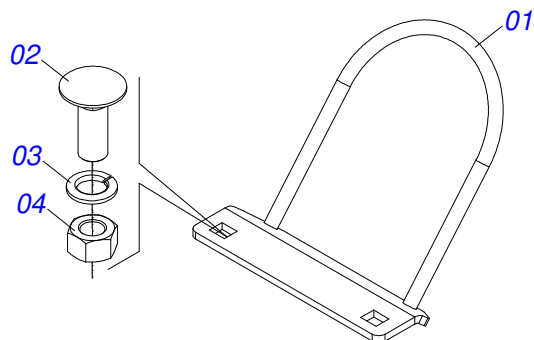


Item	Code	Description	See page	QT
01	0521063444	CONDUCTOR SUPPORT SEED		01
02	0501011643	3/8 X 1"BOLT		02
03	0503010025	3/8" SPRING WASHER		02
04	0503010026	3/8" NUT		02

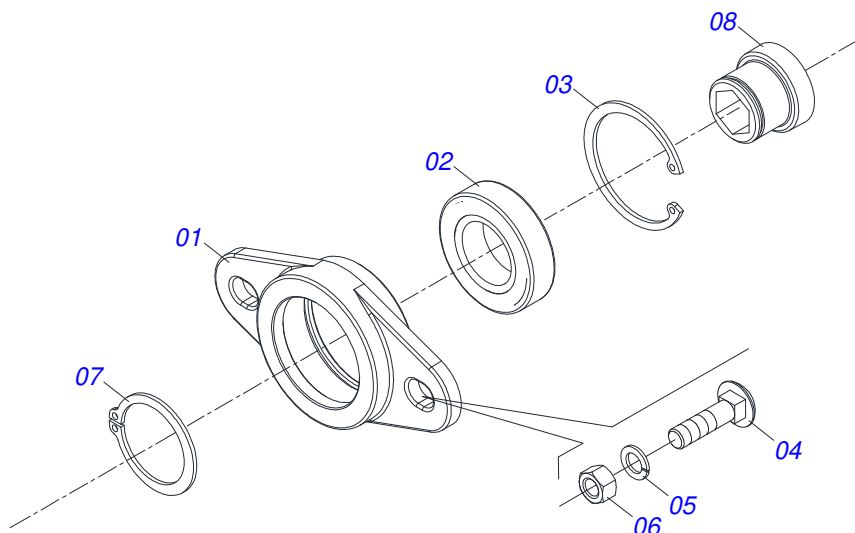


Item	Code	Description	See page	QT
01	0581017857	HOUSING BEARING		01
02	0503019361	BEARING 6006 RS1		01
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01
04	0503011953	5/16" X 1" BOLT		02
05	0503010179	5/16" ZN SPRING WASHER		02
06	0503010337	5/16" NUT		02
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01
08	0581019823	BEARING AXLE BODY WITHOUT LUBRICATION		01

BASE FIXING SYSTEM


0511051693

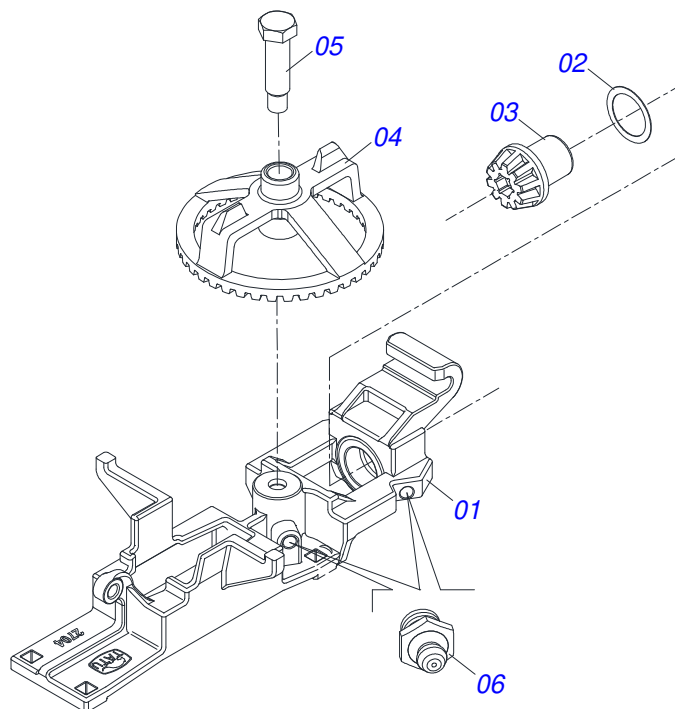


Item	Code	Description	See page	QT
01	0502012704	BASE FIXING SYSTEM		01
02	0501013354	FLAT WASHER		01
03	0502011411	10Z CONICAL GEAR		01
04	0502011418	40Z CONICAL GEAR		01
05	0511018700	AXLE		01
06	0503010002	1800 GREASE FITTING		02

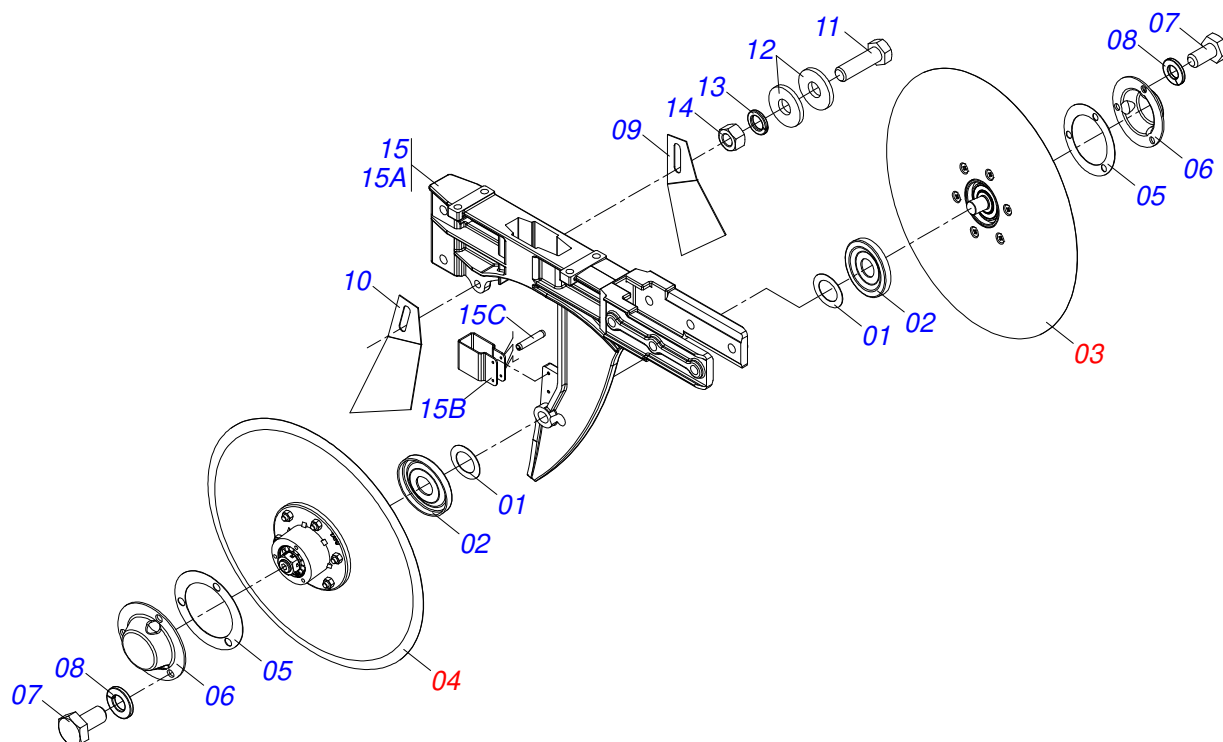


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	BOX DDD ASSY DPL 15 RIGHT	106	01
04	0501054168	BOX DDD ASSY DPL 15 LEFT	107	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052302	LH SUPPORT DDD GUIDE		01
15A	0561015592	LEFT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

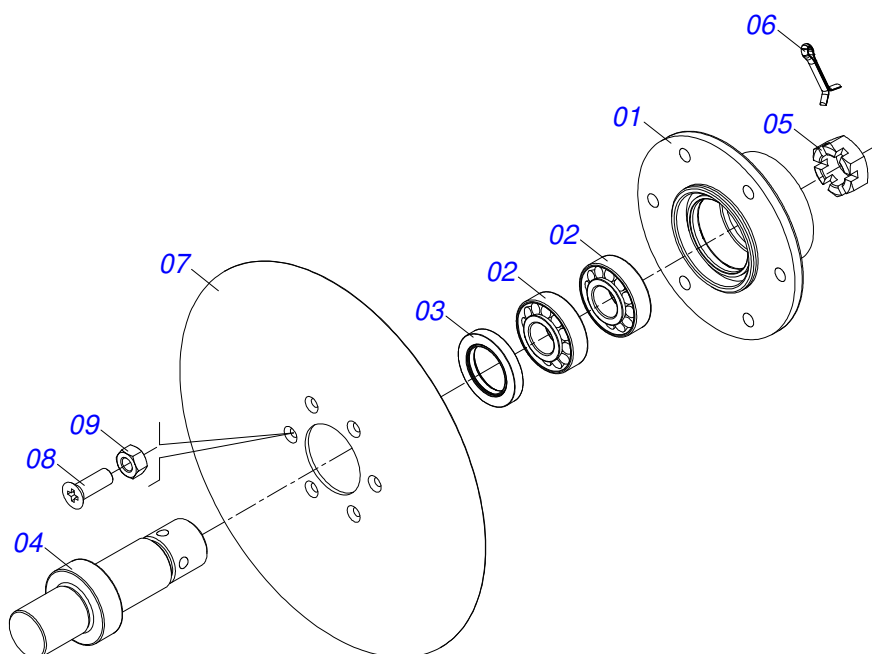


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT DOUB DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

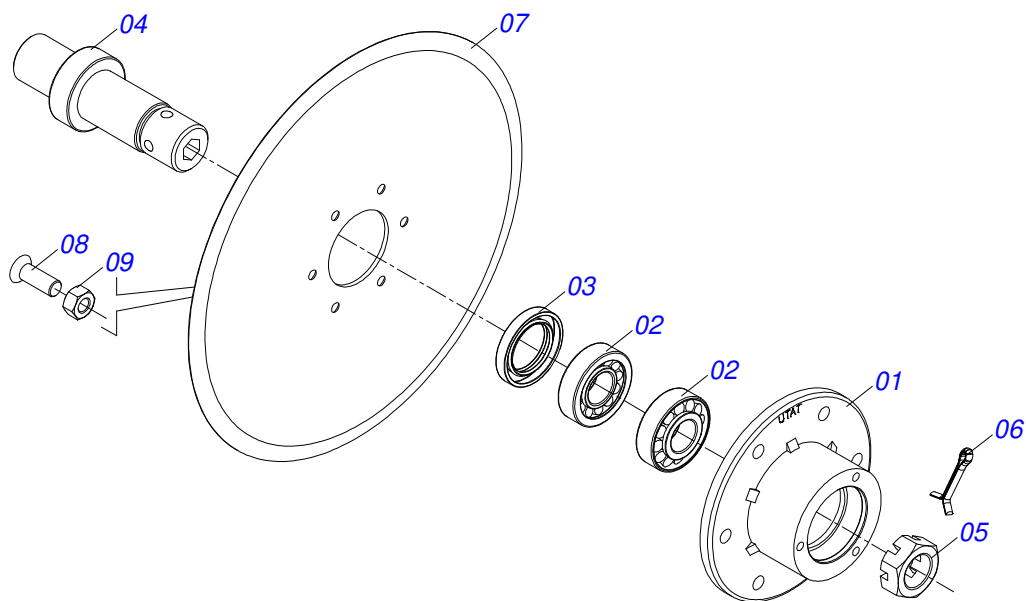


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

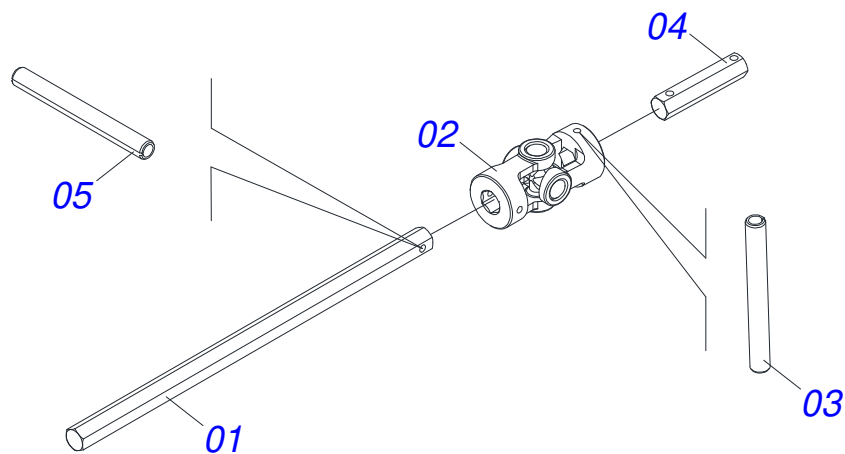


Item	Code	Description	See page	QT
01	0551018357	5/8" X 290 BODY HEX AXLE SHORT		01
02	0501056296	UNIVERSAL JOINT		01
03	0503011855	0.2" X 1.8" SPRING PIN		01
04	0551018358	5/8" X 74 AXLE BODY		01
05	0503011855	0.2" X 1.8" SPRING PIN		01

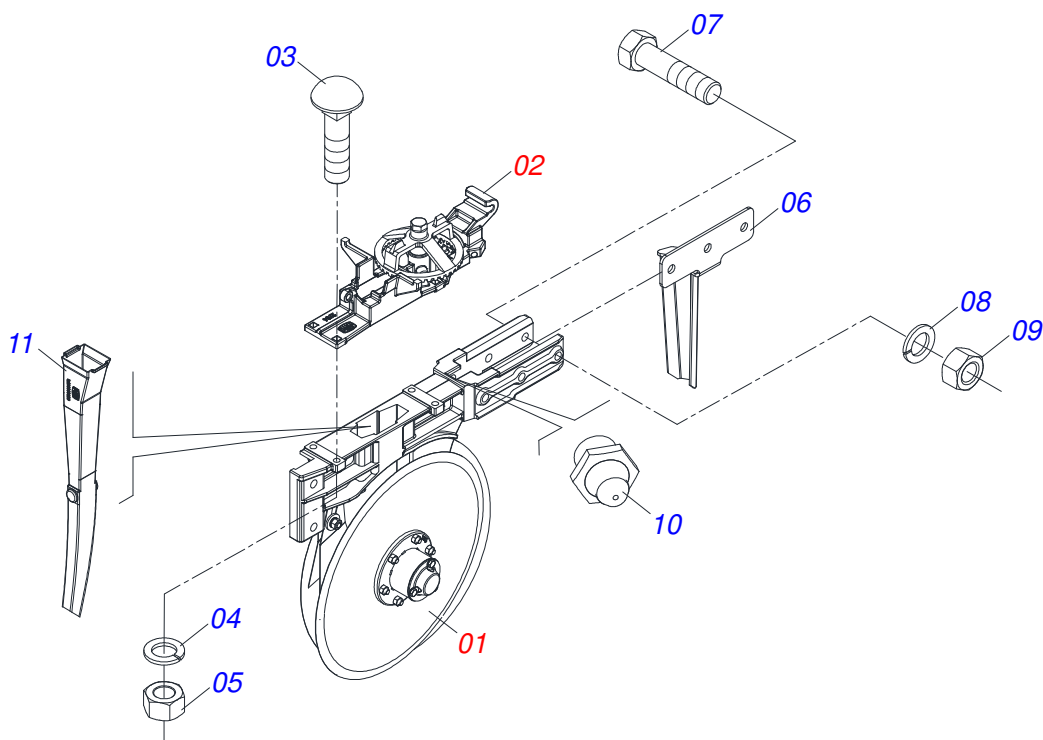

Item	Code	Description	See page	QT
001	0501059631	DDD SEED 15" X 15" RIGHT	110	01
002	0511051693	BASE FIXING SYSTEM	104	01
003	0503015920	3/8" UNC X 1.3/4" BOLT		04
004	0503010025	3/8" SPRING WASHER		04
005	0503010026	3/8" NUT		04
006	0521065999	FRONT SHIELD		01
007	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		03
008	0503010019	1/2" SPRING WASHER		03
009	0503010060	1/2" NUT		03
010	0503010002	1800 GREASE FITTING		02
011	0503033672	NOZZLE WITHOUT TITANIUM		01

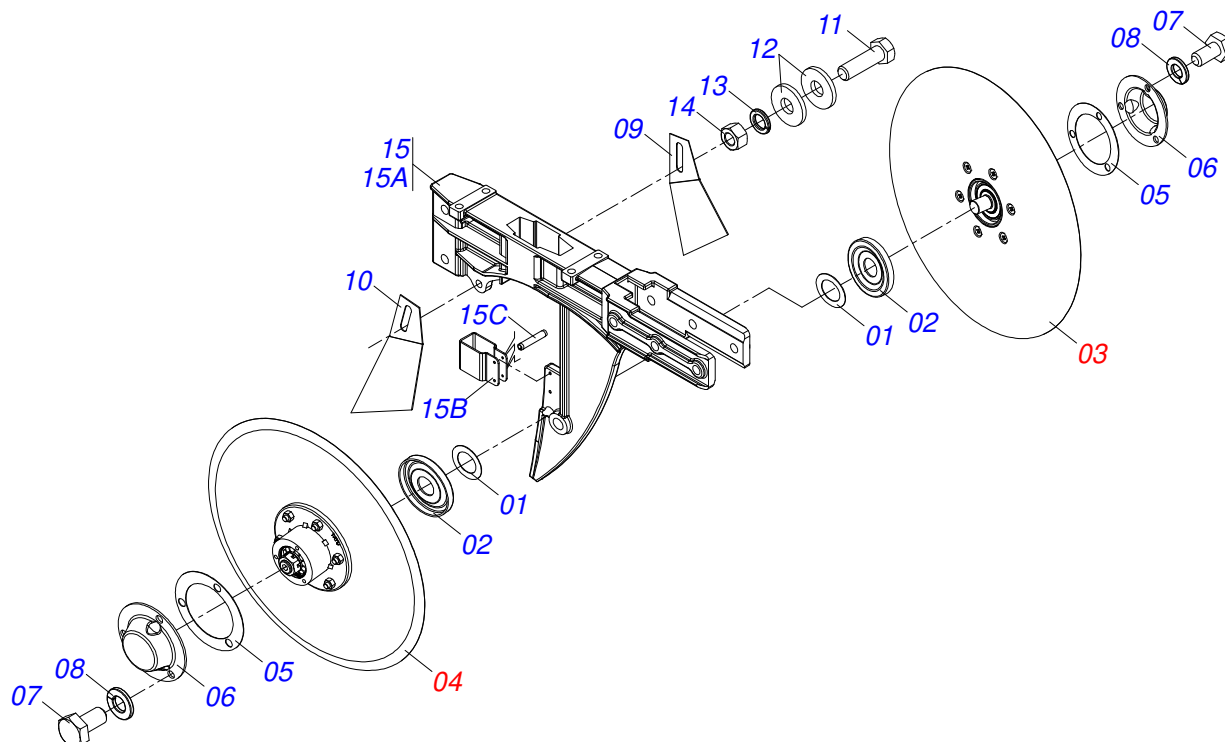

Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	BOX DDD ASSY DPL 15 RIGHT	106	01
04	0501054168	BOX DDD ASSY DPL 15 LEFT	107	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052301	SUPPORT DDD 15 RIGHT		01
15A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

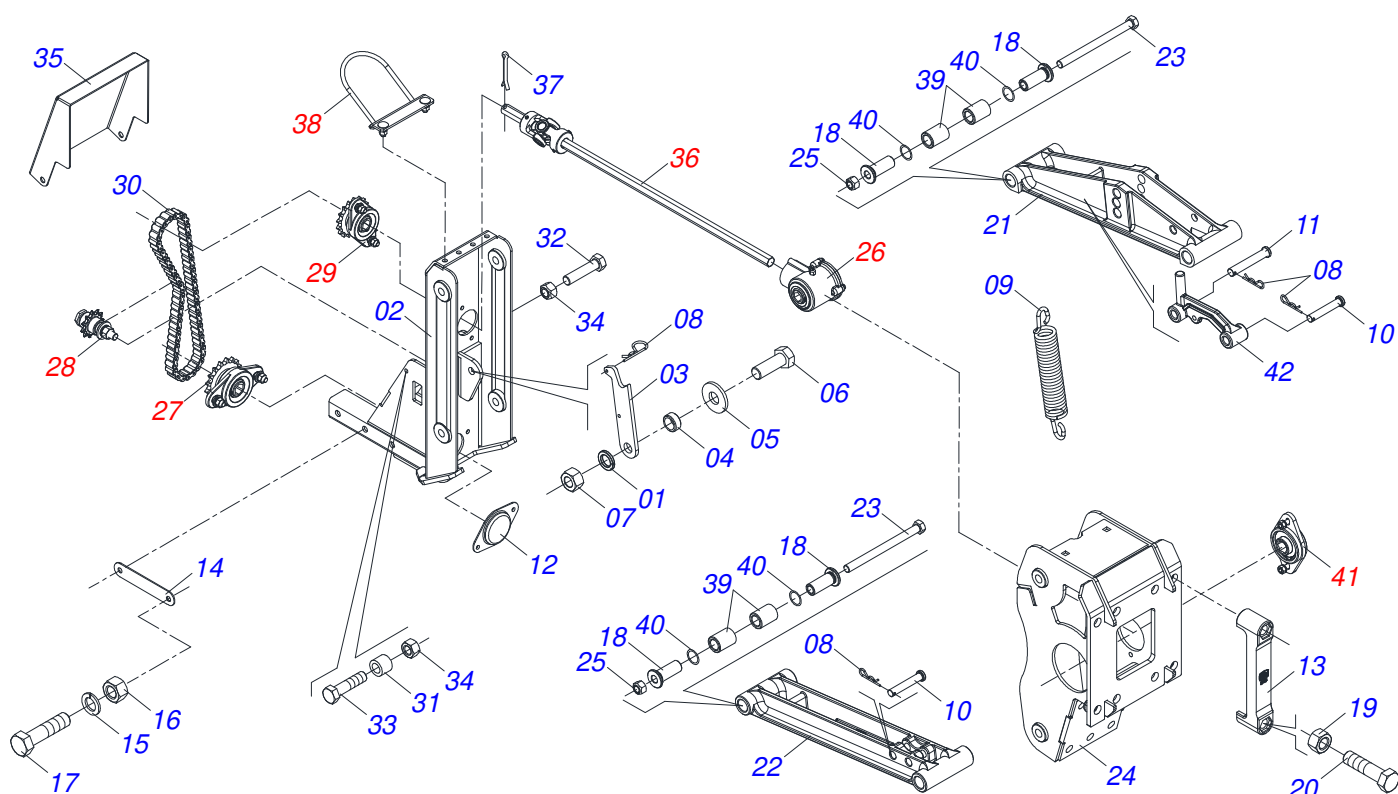


Item	Code	Description	See page	QT
01	0503010027	5/8" SPRING WASHER		01
02	0521066168	FRAME SEED LINE		01
03	0571012310	ROW LOCK BODY		01
04	0551015826	SEED ROW LOCK GUIDE SLEEVE		01
05	0501812140	FLAT WASHER		01
06	0503010232	5/8" X 1.3/4" BOLT		01
07	0503010013	5/8" NUT		01
08	0503030168	HAIR PIN		04
09	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
10	0503033728	FIXED SPRING PIN		02
11	0571014704	UPPER AXLE		01
12	0561014215	BEARING COVER LOWER ROW FRAME		01
13	0502012768	LINE SUPPORT CLAMP		02
14	0571012013	TRANSPORT LOCK		01
15	0503010019	1/2" SPRING WASHER		01
16	0503010060	1/2" NUT		01
17	0503010479	BOLT		01
18	0581018676	SLEEVE ARM LINE SEED		08
19	0503010811	5/8" UNF SELF ADJUSTING NUT		04
20	0503019024	BOLT 5/8 UNF X 5.1/2 C S RP G.5 ZN		04
21	0581019795	SEED ARM SUPPORT ROW		01
22	0581019796	LOWER ARM LARGER		01
23	0503019025	BOLT 5/8 UNF X 8 C S RP G.5 ZN		04
24	0521068453	LONG FRONT SEED ROW		01
25	0503010878	5/8" SELF ALIGNING NUT		04
26	0521055223	SEED LINE TRANSMISSION BOX	97	01
27	0521055408	BEARING WITH 17Z GEAR	98	01
28	0501055112	MICRO GRANULATED CHAIN TENSIONER	99	01
29	0521054334	BEARING ASSY WITH GEAR 20Z	100	01
30	0503013369	40-1 X 62 CHAIN LINK + REDUCTION		01
31	0561015802	13 X 10 X 14 SLEEVE		01

LONG FRONT SEED ROW

0521054342

Item	Code	Description	See page	QT
32	0503010178	5/16" X 7/8" BOLT		01
33	0503010421	5/16" X 1-1/2" BOLT		01
34	0503013759	NUT		02
35	0561015801	COVER PROTECTION FRAME		01
36	0501058108	5/8"AXLE	101	01
37	0503010071	3/16" X 1" COTTERPIN		01
38	0511052300	CONDUCTOR SUPPORT ASSY SEED	102	01
39	0503019273	SLEEVE		08
40	0503010045	O'RING		08
41	0521055372	ROW SEED BEARING	103	01
42	0502012568	UPPER ROCKER ARM		01

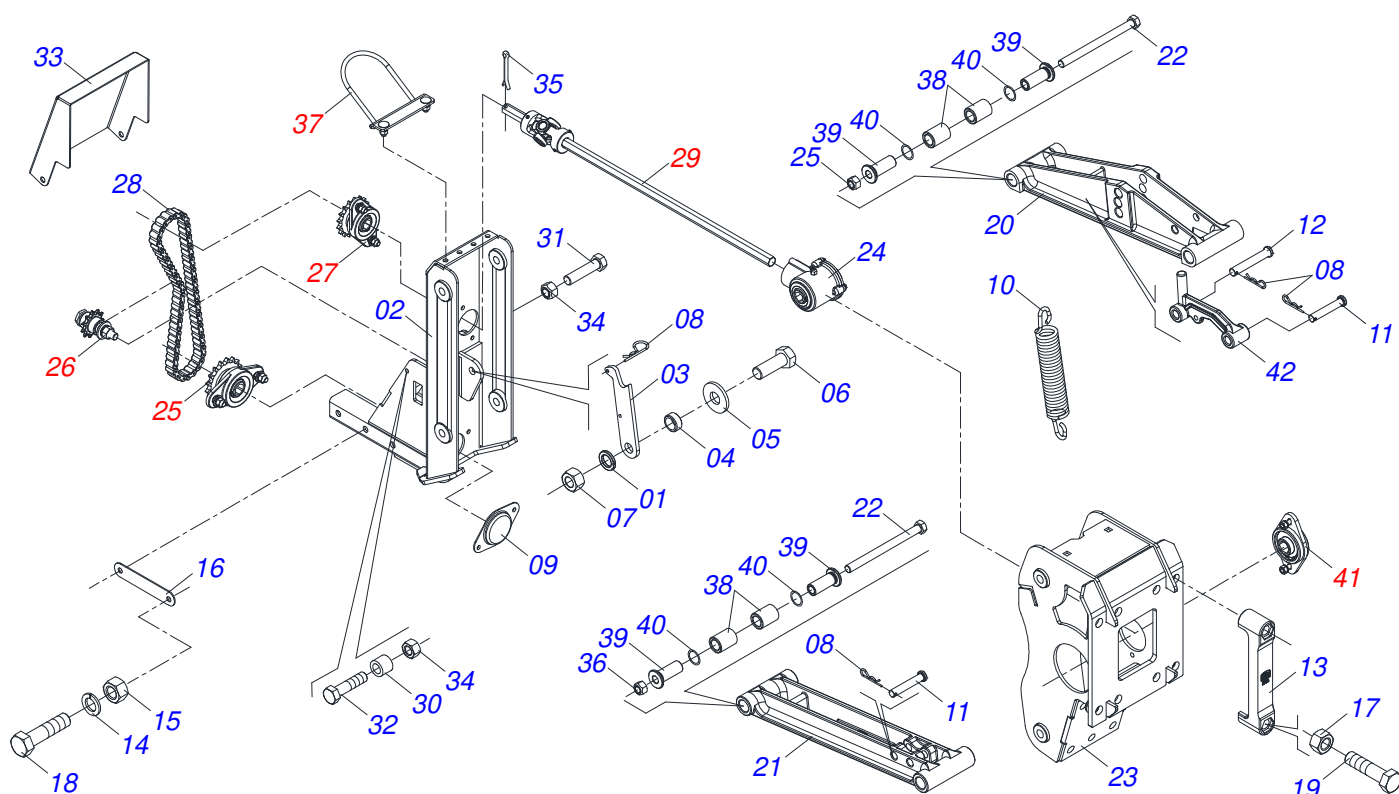


Item	Code	Description	See page	QT
01	0503010027	5/8" SPRING WASHER		01
02	0521066168	FRAME SEED LINE		01
03	0571012310	ROW LOCK BODY		01
04	0551015826	SEED ROW LOCK GUIDE SLEEVE		01
05	0501812140	FLAT WASHER		01
06	0503010232	5/8" X 1.3/4" BOLT		01
07	0503010013	5/8" NUT		01
08	0503030168	HAIR PIN		04
09	0561014215	BEARING COVER LOWER ROW FRAME		01
10	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
11	0503033728	FIXED SPRING PIN		02
12	0571014704	UPPER AXLE		01
13	0502012768	LINE SUPPORT CLAMP		02
14	0503010019	1/2" SPRING WASHER		01
15	0503010060	1/2" NUT		01
16	0571012014	TRANSPORT LOCK		01
17	0503010811	5/8" UNF SELF ADJUSTING NUT		04
18	0503010479	BOLT		01
19	0503019024	BOLT 5/8 UNF X 5.1/2 C S RP G.5 ZN		04
20	0581019793	LOWER UPPER ARM WITHOUT LUBRICATION		01
21	0581019794	LOWER LOWER ARM WITHOUT LUBRICATION		01
22	0503019025	BOLT 5/8 UNF X 8 C S RP G.5 ZN		04
23	0521068449	SHORT SEED ROW FRONT		01
24	0521055223	SEED LINE TRANSMISSION BOX	97	01
25	0521055408	BEARING WITH 17Z GEAR	98	01
26	0501055112	MICRO GRANULATED CHAIN TENSIONER	99	01
27	0521054334	BEARING ASSY WITH GEAR 20Z	100	01
28	0503013369	40-1 X 62 CHAIN LINK + REDUCTION		01
29	0501058107	5/8" AXLE	108	01
30	0561015802	13 X 10 X 14 SLEEVE		01
31	0503010178	5/16" X 7/8" BOLT		01




SHORT SEED ROW FRONT

0521055330


Item	Code	Description	See page	QT
32	0503010421	5/16" X 1-1/2" BOLT		01
33	0561015801	COVER PROTECTION FRAME		01
34	0503013759	NUT		02
35	0503010071	3/16" X 1" COTTERPIN		01
36	0503010878	5/8" SELF ALIGNING NUT		04
37	0511052300	CONDUCTOR SUPPORT ASSY SEED	102	01
38	0503019273	SLEEVE		08
39	0581018676	SLEEVE ARM LINE SEED		08
40	0503010045	O'RING		08
41	0521055372	ROW SEED BEARING	103	01
42	0502012568	UPPER ROCKER ARM		01

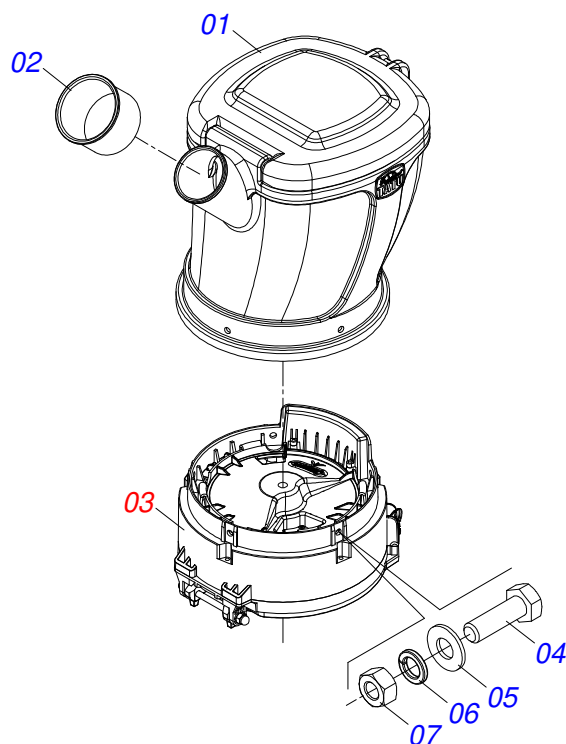


Item	Code	Description	See page	QT
01	0521050118	DEPOSIT SEED BOCAL		01
02	0581014295	FIXING GLOVE		01
03	0511052058	SEED SYSTEM TITANIUM	114	01
04	0503010358	5/16" X 5/8" BOLT		05
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		05
06	0503010179	5/16" ZN SPRING WASHER		05
07	0503010337	5/16" NUT		05

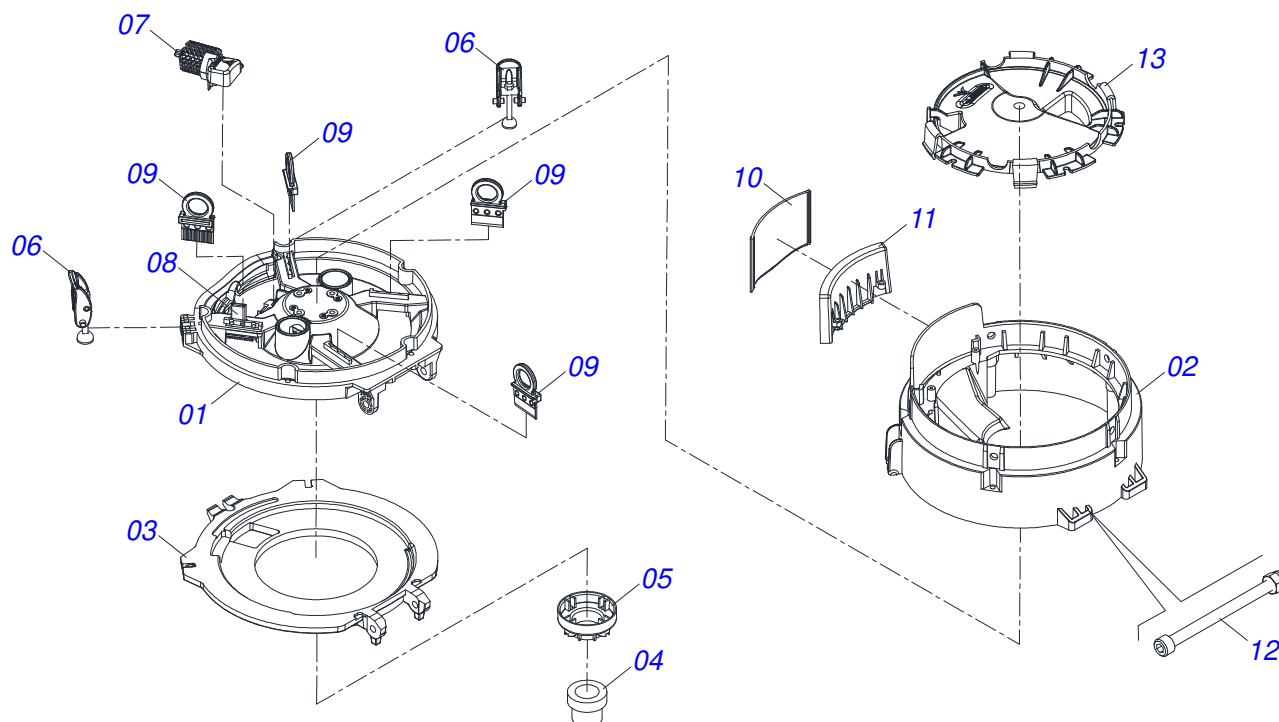


Item	Code	Description	See page	QT
01	0503062031	BASE SET		01
02	0503062032	NECK TITANIUM ASSY		01
03	0503062033	OPPOSITE BASE SET		01
04	0503062034	CENTRAL ADAPTER SET		01
05	0503062035	SET FALSE ADAPT CENTER		01
06	0503062036	SUBSET ASSY LOCK BASE		01
07	0503062037	SUBSET ESCOVAFLEX ASSY		01
08	0503062038	ASSY ANTI-LEAP		01
09	0503062039	POLIFLOW TITANIUM ASSY		01
10	0503062040	DISPLAY ASSY TITANIUM 1050010		01
11	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
12	0503062042	SET BOLT ARTICULADOR		01
13	0503062043	ASSY LIMIT WEIGHT		01

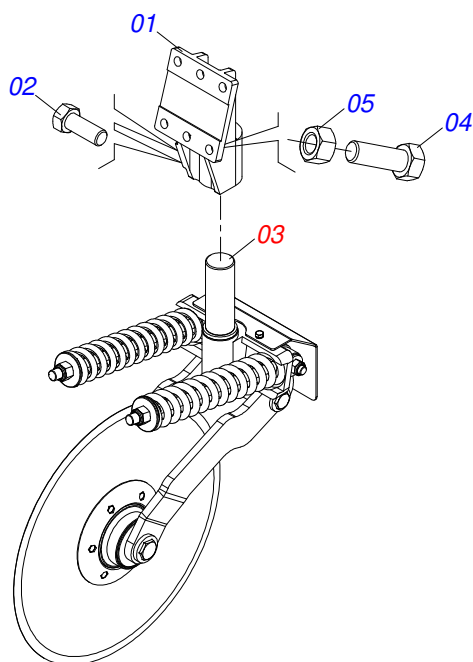

Item	Code	Description	See page	QT
01	0502012470	UPPER SUPPORT		01
02	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
03	0521055348	LOWER SUPPORT WITH DPL 20 WITHOUT 116 LUBRICATION		01
04	0503012798	5/8" X 2" BOLT		04
05	0503010878	5/8" SELF ALIGNING NUT		04

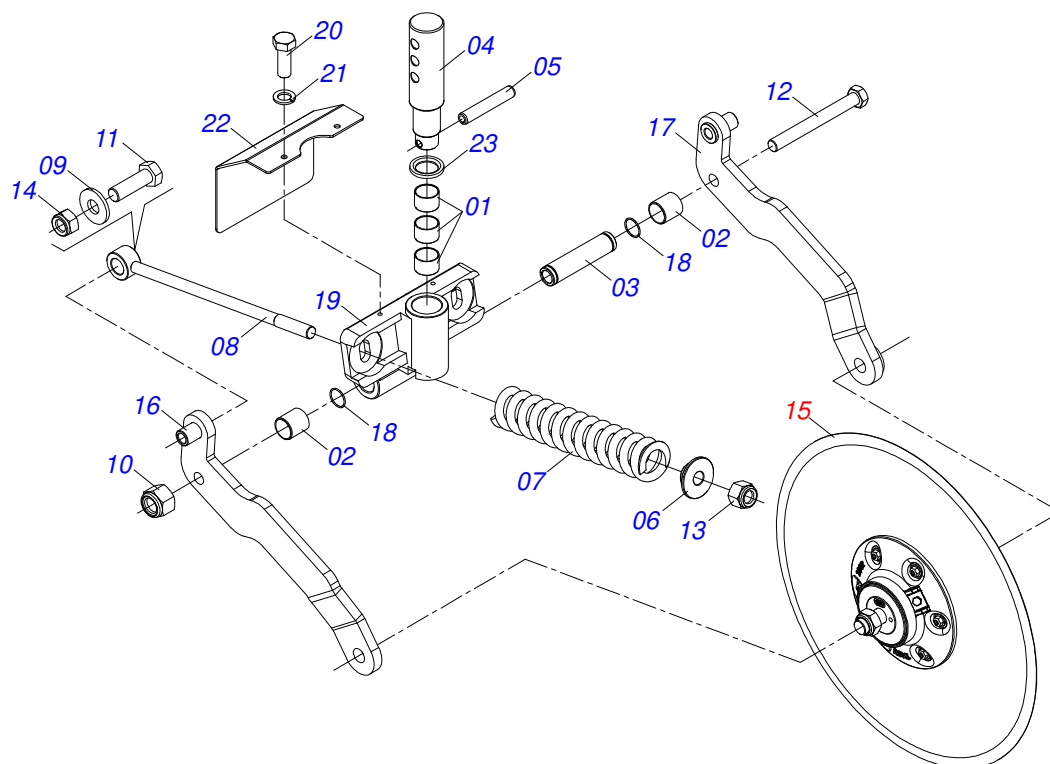


Item	Code	Description	See page	QT
01	0503019277	SLEEVE LUBRICATION SYSTEM		03
02	0503019278	LUBRICANT GLOVE		02
03	0581018679	SLEEVE		01
04	0581018677	SUPPORT DISC AXLE		01
05	0503010361	SPRING PIN		01
06	0551015883	SPRING GUIDES SLEVE		02
07	0503031575	2.5"X 12" X 0.5" COMPRESSION SPRING		02
08	0521068189	SPRING REGULACION		02
09	0501012140	FLAT WASHER		02
10	0503010152	3/4" SELF LOCKING NUT		01
11	0503010806	5/8" X 3" BOLT		02
12	0503014744	3/4 UNF X 7.1/2 C S G.7 ZN BOLT		01
13	0503011075	3/4" UNC NUT		02
14	0503010878	5/8" SELF ALIGNING NUT		02
15	0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	117	01
16	0521069351	RIGHT ARM		01
17	0521069350	LEFT ARM		01
18	0503010410	RING		02
19	0502012898	BOTTOM BRACKET		01
20	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		02
21	0503010179	5/16" ZN SPRING WASHER		02
22	0571012370	PROTECTION FRONT		01
23	0581018678	FLANGE WASHER		01

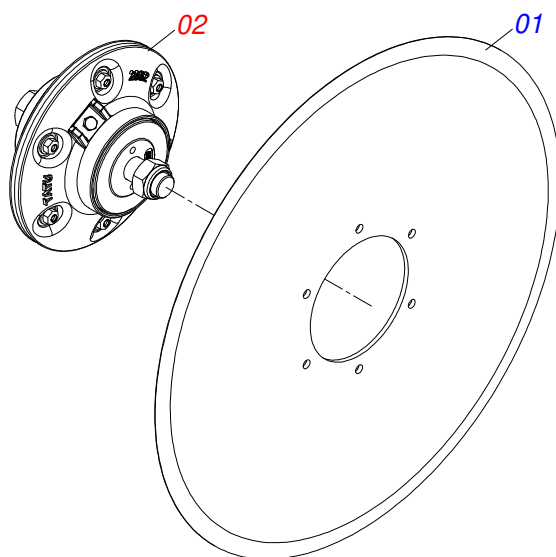


Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521053697	CUTTING DISK BOX	118	01

CUTTING DISK BOX


0521053697

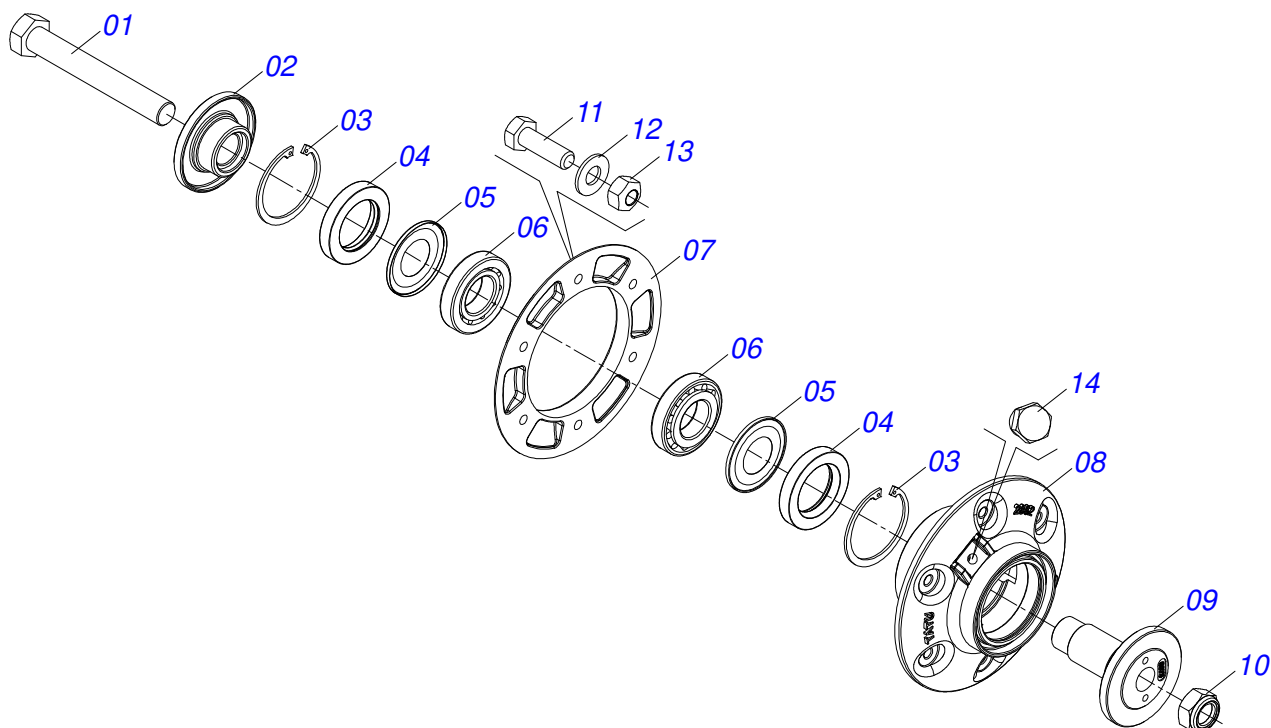


Item	Code	Description	See page	QT
01	0503019283	SCREW 7/8 UNF X 6.1/4		01
02	0502040872	REGULATORY NUT		01
03	0503010370	502072 CLAMPING RING (FOR AXLE)		02
04	0503010590	00674-B SEAL		02
05	0503019285	RING		02
06	0503012170	30207 ROLLER BEARING		02
07	0502020641	BLADE DISC FLANGE		01
08	0502012862	CUTTING DISK BOX		01
09	0502040873	CUTTING DISC AXLE		01
10	0503017755	NUT		01
11	0503018825	5/16 UNC UNC BOLT		06
12	0501010694	8.5 X 18 X 1.5 FLAT WASHER		06
13	0503013816	5/16" LOCKNUT		06
14	0511017907	1/8" BSPT X 6 PLUG		02

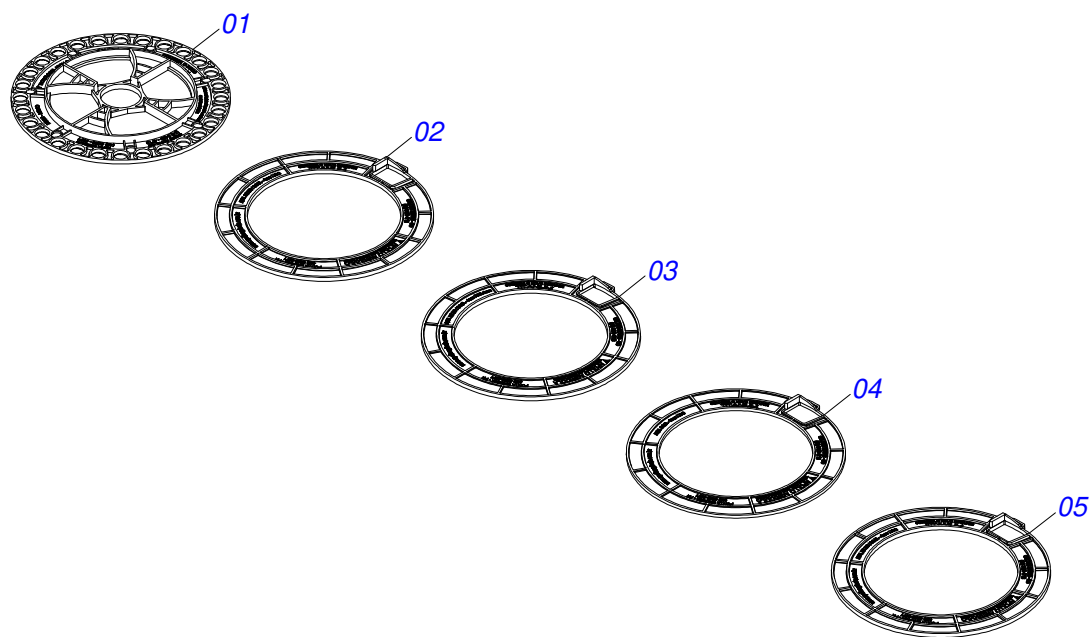

Item	Code	Description	See page	QT
01	0503016204	CORN DISK 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

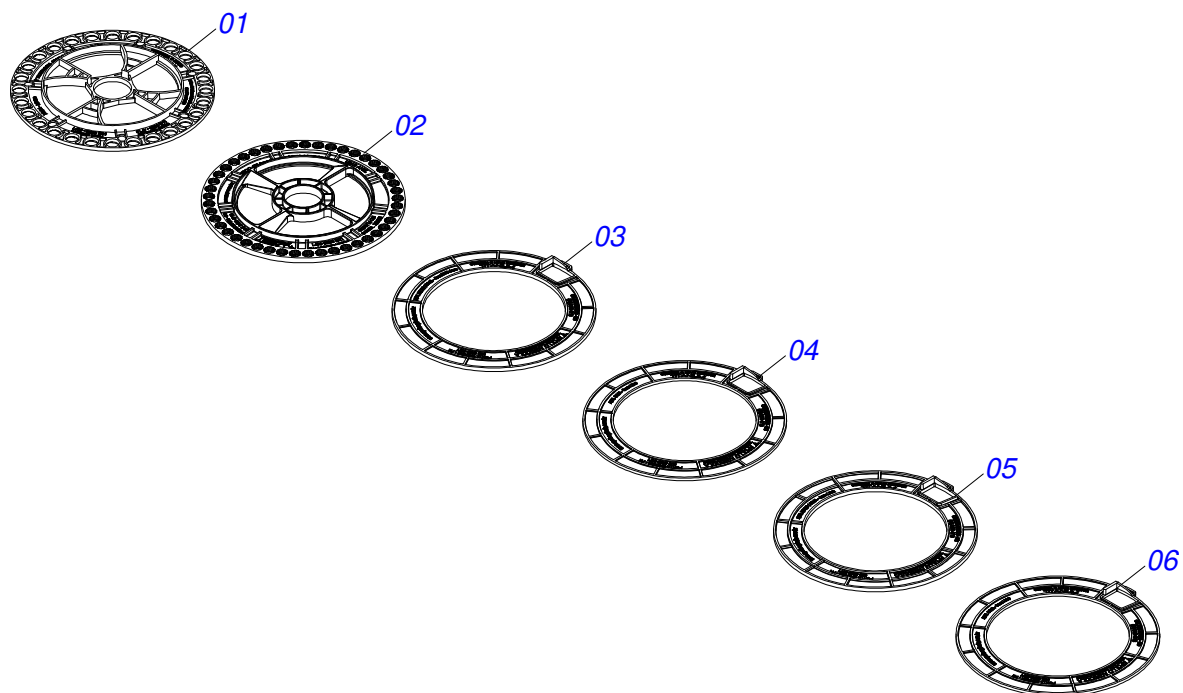


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

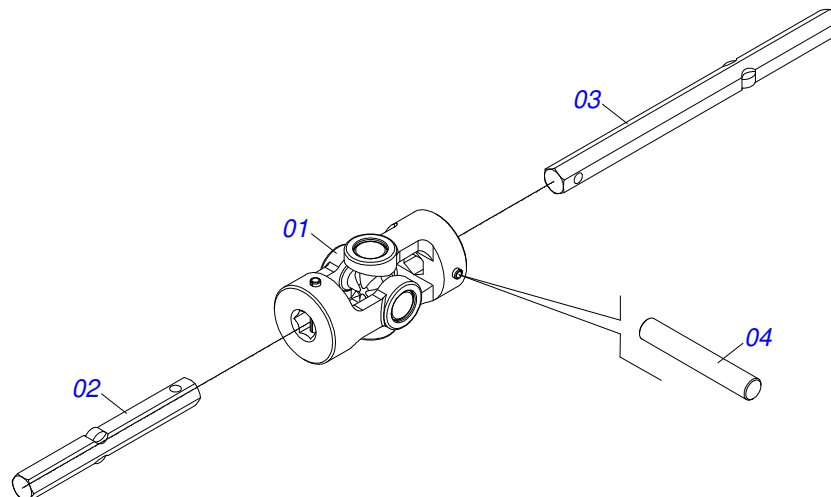


Item	Code	Description	See page	QT
01	0503062173	UNIVERSAL JOINT		01
02	0571019616	TRANSMISSION AXLE		01
03	0571013689	TRANSMISSION AXLE		01
04	0503011855	0.2" X 1.8" SPRING PIN		02

FAST CLOSING SET


0511052024

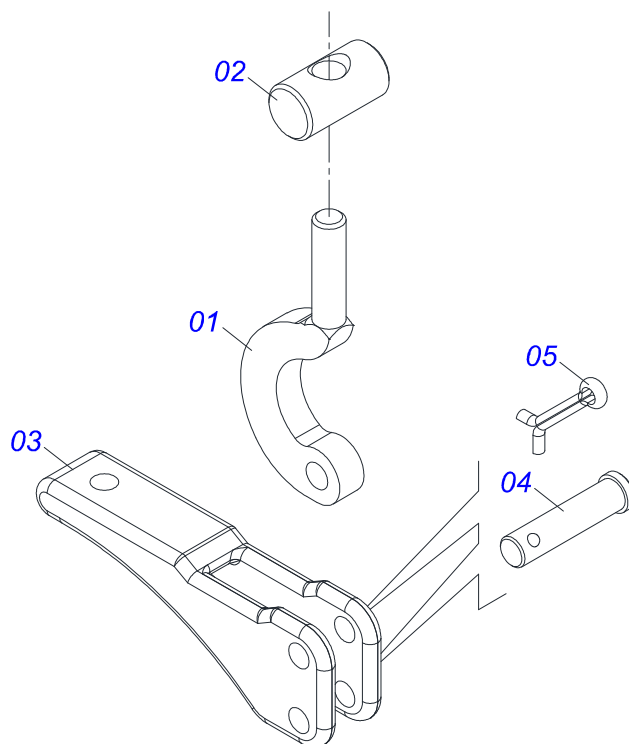

Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

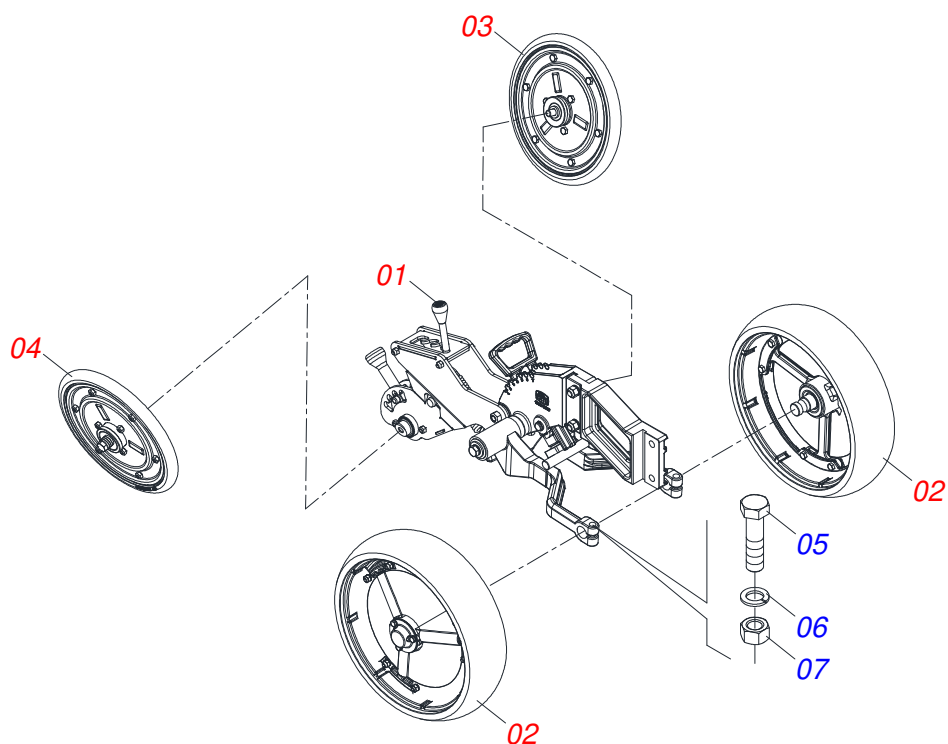


Item	Code	Description	See page	QT
01	0521055065	ASSY DEPTH / COMPACTOR	124	01
02	0521055068	RAYED WHEEL CENTER CLOSED	129	02
03	0521054990	LEFT COMPACTOR WHEEL	131	01
04	0521055017	RIGHT COMPACTOR WHEEL	133	01
05	0503016453	1/2" X 2.1/2 BOLT		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010028	1/2" NUT		02

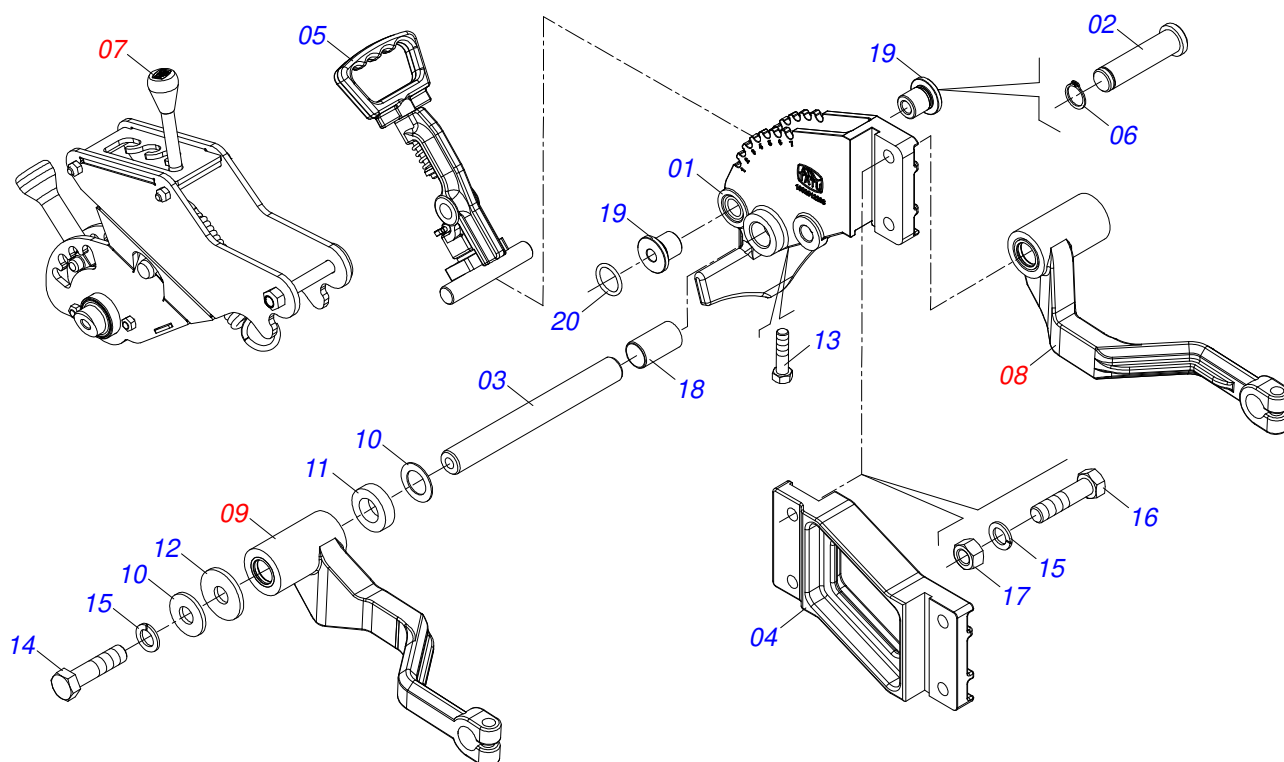


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0571013054	DEPTH CONTROL WHEEL AXLE		01
04	0502012663	EXTENSION		01
05	0501056769	DEPTH WHEELS REGULATOR ASSY	125	01
06	0503010581	RING		01
07	0521055033	COMPACTADOR BODY	126	01
08	0521055054	LEFT ARM WITH SLEEVE	127	01
09	0521055066	RIGHT ARM WITH GLOVE	128	01
10	0511015346	FLAT WASHER		04
11	0571015974	WASHER		02
12	0511017302	FLAT WASHER		02
13	0503010256	3/8" X 3/4" BOLT		01
14	0503010311	1/2" X 1-1/4" BOLT		02
15	0503010019	1/2" SPRING WASHER		04
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2" NUT		02
18	0503019275	SLEEVE LUBRICATION SYSTEM		01
19	0581019473	ARTICULATED GLOVE		02
20	0503010045	O'RING		02

DEPTH WHEELS REGULATOR ASSY

0501056769

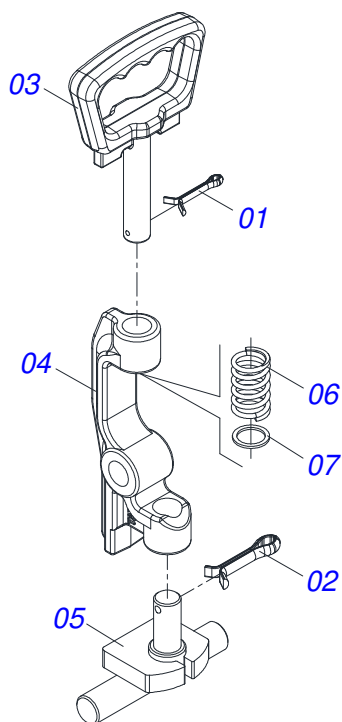


Item	Code	Description	See page	QT
01	0503010257	1/8" X 1" COTTERPIN		01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0502011689	1/8" DEPTH CONTROL LEVER		01
04	0502011688	SEED SIST CONTROL DEPTH LEVER		01
05	0511065582	DEPTH WHEEL STOP		01
06	0503030975	0.9" X 1.5" X 0.1" SPRING		01
07	0511015976	FLAT WASHER		01

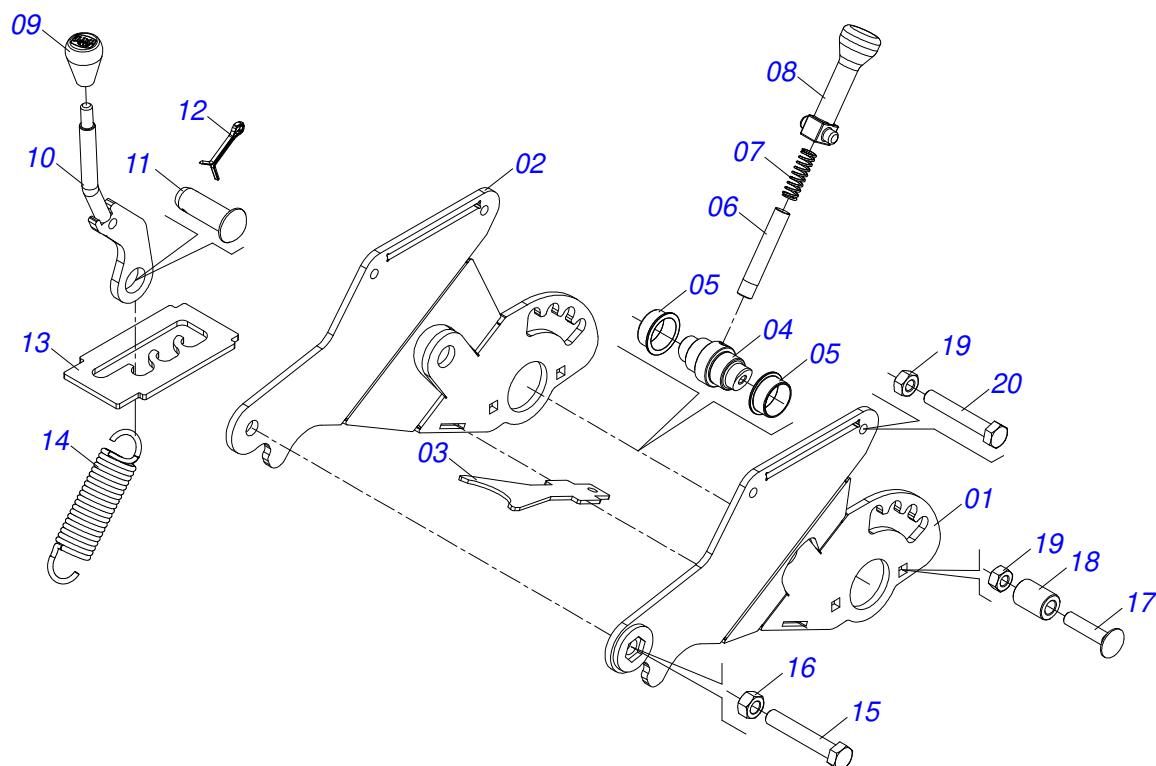


Item	Code	Description	See page	QT
01	0521069585	LEFT SIDE		01
02	0581019475	RIGHT SIDE BODY		01
03	0581019511	COVER		01
04	0581019510	AXIS		01
05	0503019351	LUBRICANT GLOVE		02
06	0581019520	AXIS		01
07	0503030190	0.5" X 1.6" X 0.05" SPRING		01
08	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
09	0503030878	LEVER CRANK		01
10	0521068661	LEVER		01
11	0571012442	COUPLING SHAFT		01
12	0503010257	1/8" X 1" COTTERPIN		01
13	0581019512	PLATE TOP		01
14	0503034817	SPRING		01
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503011336	1/2" HEX SELF ADJUSTING NUT		01
17	0501011753	5/16" X 1-3/4" BOLT		02
18	0581015855	SLEEVE		02
19	0503013816	5/16" LOCKNUT		04
20	0503010848	5/16" X 3.1/2" BOLT		02

LEFT ARM WITH SLEEVE


0521055054

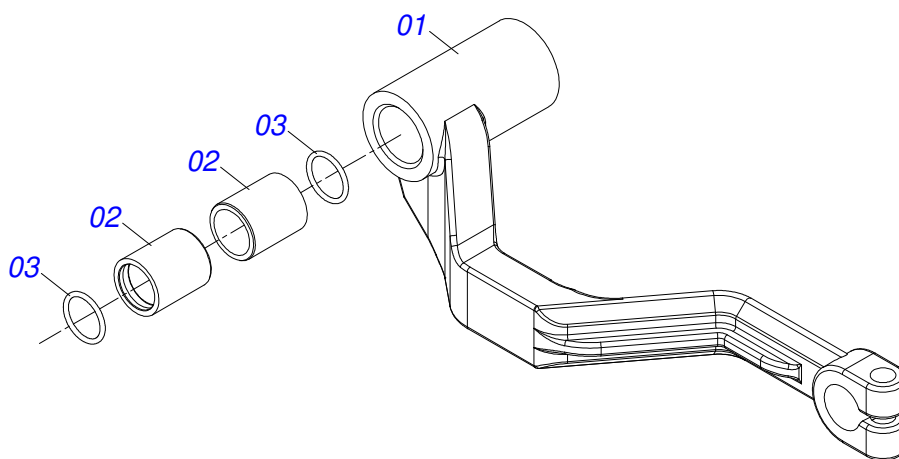


Item	Code	Description	See page	QT
01	0581019523	LEFT ARM WHEEL DEPTH		01
02	0581019514	LUBRICANT GLOVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

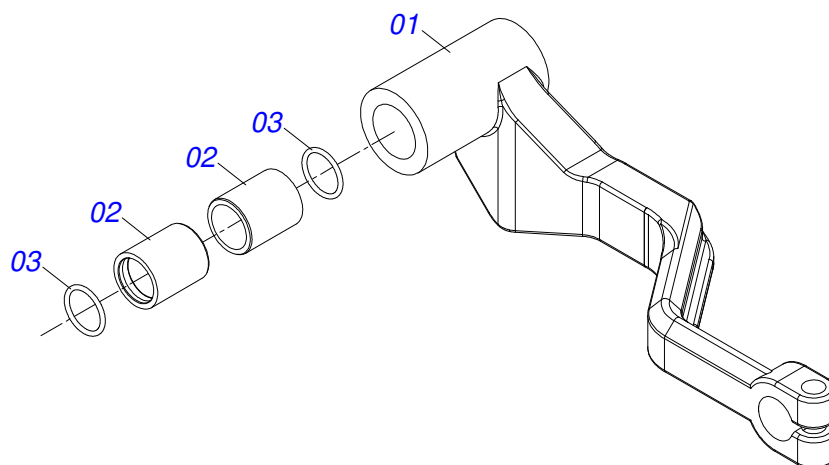

Item	Code	Description	See page	QT
01	0581019524	RIGHT ARM DEPTH		01
02	0581019514	LUBRICANT GLOVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

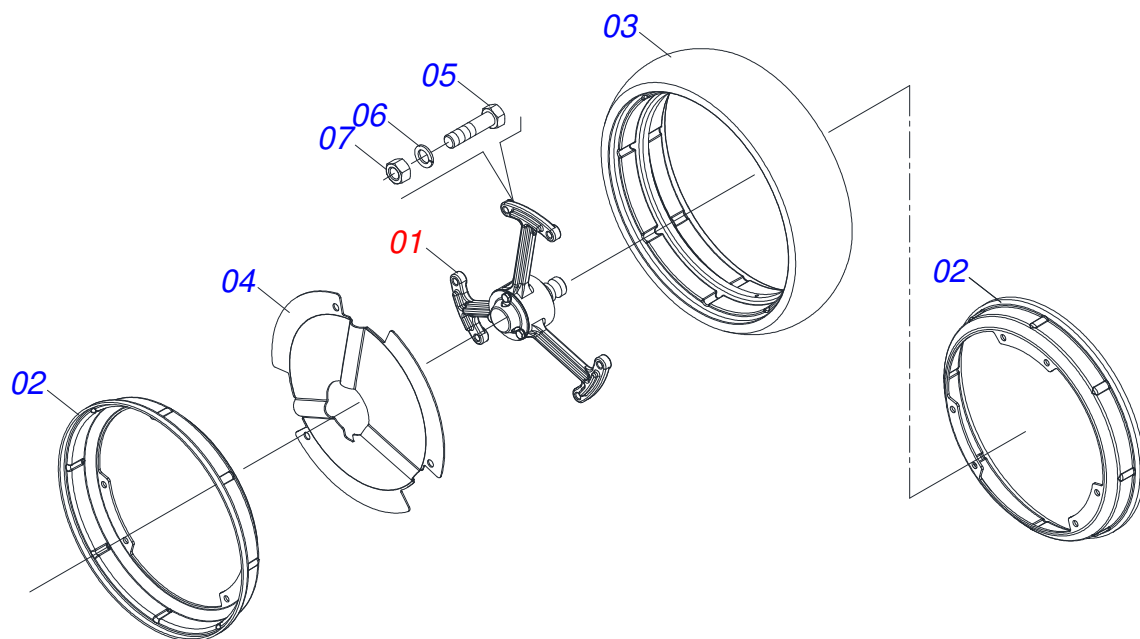


Item	Code	Description	See page	QT
01	0521055055	BOX WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	130	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	NUT		06
06	0503010179	5/16" ZN SPRING WASHER		06
07	0503010337	5/16" NUT		06

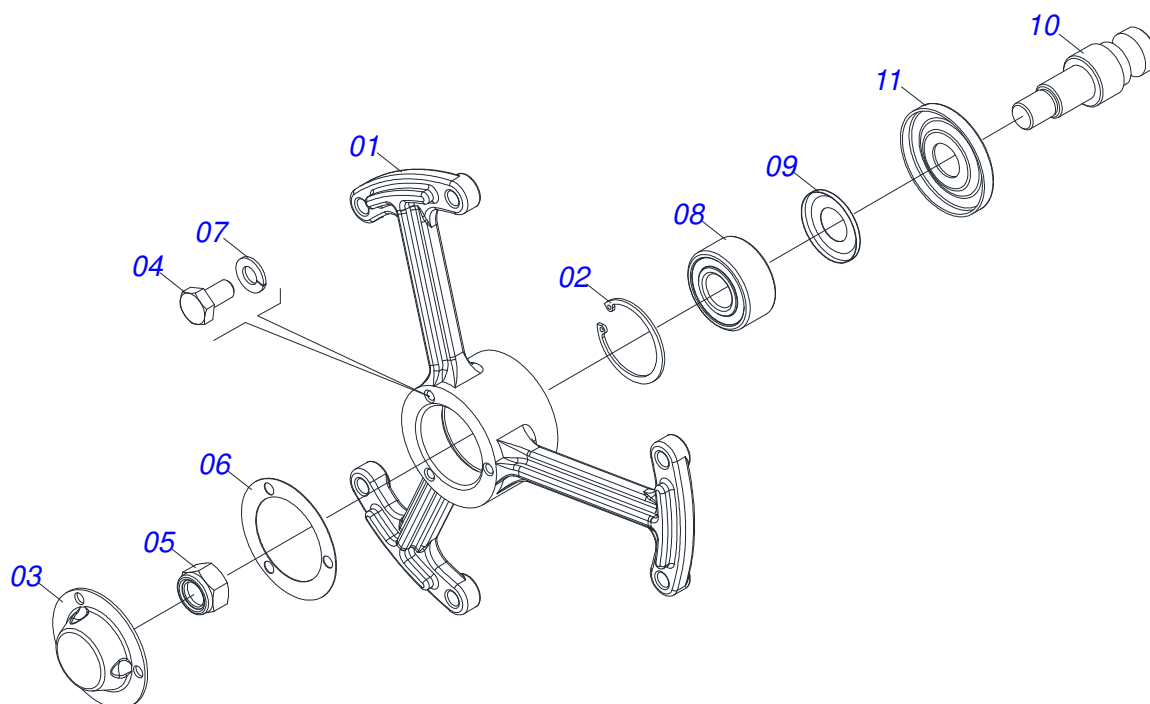


Item	Code	Description	See page	QT
01	0581019522	CASE WHEEL DEPTH WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	COVER DEPTH		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010878	5/8" SELF ALIGNING NUT		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0503010143	1/4" SPRING WASHER		03
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019529	DEPTH REGULATOR SHAFT		01
11	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01

LEFT COMPACTOR WHEEL


0521054990

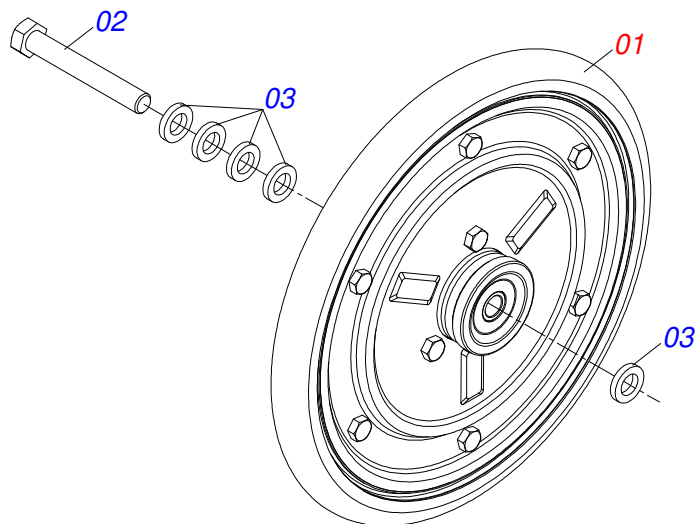


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	132	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

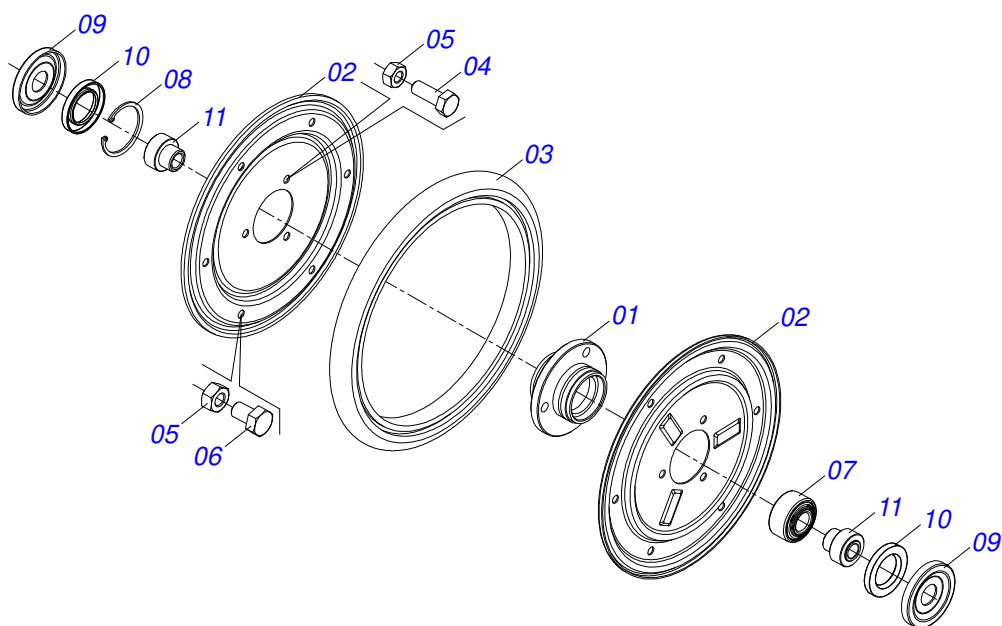

Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

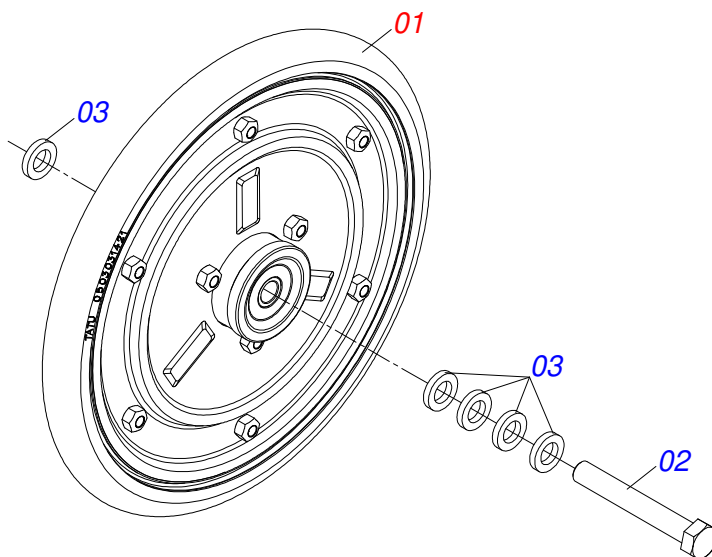


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	132	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

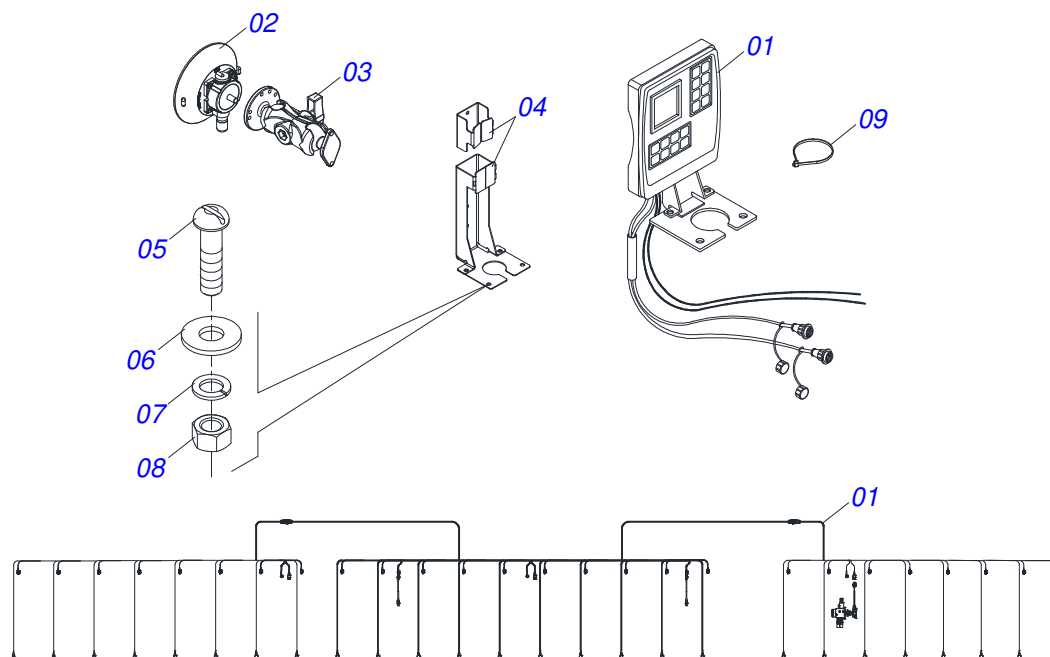


Item	Code	Description	See page	QT
001	0503062772	KIT MONITORING SEED		01
002	0503016234	TRIMBLE FIXING WINDOW		01
003	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
004	0571012196	MOUNTING BRACKET PM 400		01
005	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
006	0503010669	FLAT WASHER		02
007	0503010668	3/16" SPRING WASHER		02
008	0503010667	3/16" NUT		02
009	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		600

CLUTCH INDUCTIVE SENSOR ASSEMBLY


0521052143

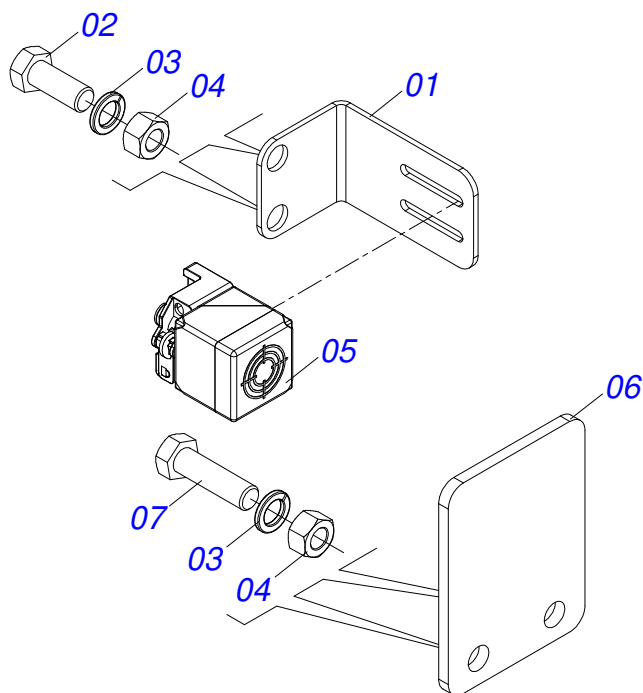

Item	Code	Description	See page	QT
01	0581016487	SENSOR SUPPORT		01
02	0501010063	1/2" X 1-1/2" BOLT		02
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2" NUT		04
05	0503019085	INDUCTIVE SENSOR		01
06	0571015148	PLATE SENSIBLES		01
07	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		02

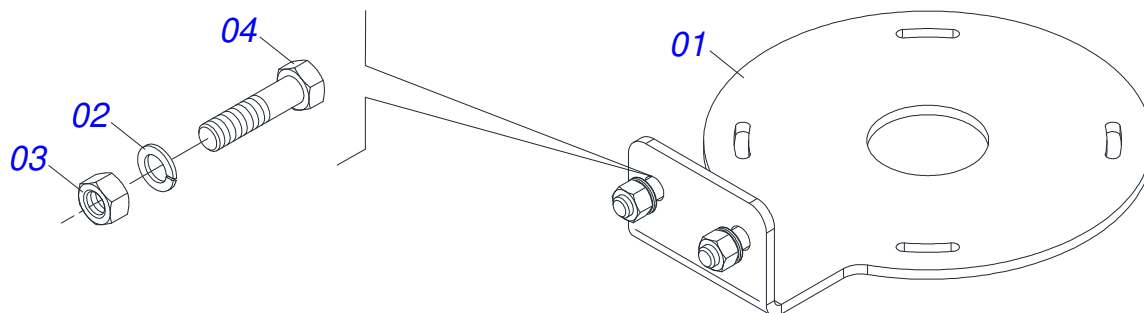

Item	Code	Description	See page	QT
01	0581010287	ELECTRICAL BOX SUPPORT		01
02	0503010025	3/8" SPRING WASHER		02
03	0503010026	3/8" NUT		02
04	0503010237	3/8" X 1" BOLT		02

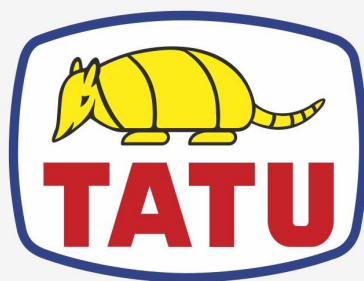

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

