

ROW CROP PLANTERS

**PST PLUS FLEX - FRAME 4395 - CSU - MH
(UP TO 03/2022)**

Code: 0501092741
Series: S-0116
Revision: 00
Date Revision: JUNHO/2022

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111380349	PST PLUS FLEX 4395/10E450 CPERA D DC20 CSU S-0116
0111380258	PST PLUS FLEX 4395/9E500 SPT CI MH DC20 CSU S-0116

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX


0909098981	FRAME ASSY	1
0511057361	FRAME WITH WHEEL AXLE - 4395	2
0511058655	CYLINDER SET - 3245/3495/4045/4395	3
0511058607	HYDRAULIC CYLINDER	4
0511058653	WHEELS WITH TRACTION SPRING	5
0511058654	WHEEL SUPPORT	6
0511052770	WHEEL WITH TIRE	7
0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	8
0501058241	WHEEL SUPPORT CHAIN TENSIONER	9
0501058240	WHEEL FASTENER WITH TENSIONER	10
0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	11
0501058244	WHEEL FIXED CHAIN TENSIONER	12
0501058242	WHEEL MOBILE CHAIN TENSIONER	13
0511058985	TRANSMISSION ASSEMBLY - 4395	14
0501052560	MOTOR AXLE SIGNAL	15
0511051434	TRANSMISSION ACTUATOR	16
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	17
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	18
0501053788	3/4 SQUARE AXLE FASTENER	19
0501056271	GEARBOX CLOSED BEARING	20
0511057265	TRANSMISSION CHAIN TENSIONER	21
0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	22
0511050652	CHAIN TENSIONER	23
0501053653	BEARING WITH GEAR 20Z 3/4 HEX SHAFT	24
0501053654	3/4 SEED TRANSMISSION DOUBLE BEARING	25
0521055335	RIGHT GEAR HOUSING SET	26
0521055337	LEFT GEAR HOUSING SET	27
0511058381	RIGHT GEAR HOUSING	28
0511058382	LEFT GEAR HOUSING	29
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	30
0501048790	AXLE WITH RING	31
0501056443	GEAR HOUSING BEARING	32
0501056444	BEARING WITH ROLLING	33
0511057258	TENSIONER WITH GEAR	34
0511054363	CHAIN TENSIONER	35
0511057360	FERTILIZER BOX ASSEMBLY - 4395	36
0511057357	BOX SUPPORT WITH DISTRIBUTOR - 4395	37
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	38
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	39
0511057266	HYDRAULIC SYSTEM ASSEMBLY - 3245/3495/4045/4395	40
0501053834	MALE QUICK COUPLER	41
0511057355	SEMI-ASSEMBLED HYDRAULIC MARKER - 4395	42
0511058449	HYDRAULIC CYLINDER	43
0501054649	HBM SEQUENTIAL VALVE	44
0511058119	VALVE SUPPORT ASSEMBLY	45
0501050633	ROW MARKER DISK ASSEMBLY	46
0511053904	ROW MARKER DISC	47
0511057358	PLATFORM ASSEMBLY - 4395	48
0511056536	LADDER ASSEMBLY	49
0511054971	JACK ASSEMBLY	50
0511059457	LABELS KIT - 4395	51
0511057333	DRAWBAR ASSEMBLY - 3495/4045/4395/4845/5345/5745	52
0511054601	HITCH ARTICULATED TRACTOR	53
0511056736	HOSE SUPPORT	54
0511057845	MANUAL CANISTER	55



MARCHESAN

INDEX

0511057359	HANDRAIL ASSEMBLY - 4395	56
0511059323	PLATFORM TRANSPORT SUPPORT	57
0511058175	SINGLE SEED BOX - 4395/9 E500	58
0511058100	2 BOXES WITH 9 CONDUCTORS ASSEMBLY	59
0511059322	LIFTING SUPPORT ASSEMBLY	60
0511057270	DRAWBAR EXTENDER	61
0909098983	HEX AXLE ASSEMBLY - 3495/4395/4845	62
0909098984	ASSY FERTILIZER/SEED ROW	63
0511057277	FRONT SHORT SEED ROW WITH RIGHT TRANSMISSION	64
0511057278	FRONT LONG SEED ROW WITH RIGHT TRANSMISSION	65
0511058766	BEARING	66
0511057269	CHAIN TENSIONER	67
0511059872	BEARING	68
0511058512	PROTECTION COVER	69
0511057159	TRANSMISSION BOX SEED ROW	70
0511056621	RIGHT REAR SEED ROW	71
0511056622	LEFT REAR SEED ROW	72
0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	73
0511056586	15 X 15 SEED DDD LEFT	74
0511052301	SUPPORT DDD 15 RIGHT	75
0511052302	LH SUPPORT DDD GUIDE	76
0511053173	CUBE LOW RIGHT WITH DISC 15	77
0511053172	LEFT LOW CUBE WITH DISC 15	78
0511059023	SEED SYSTEM ASSY	79
0501051094	ASSY SEED DISTRIBUTOR	80
0501051119	DOUBLE PULLEY ROCKER'S	81
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	82
0511058650	SEMI-MOUNTED DEPTH CONTROL	83
0521056317	DEPTH CONTROL WITH LEVER ANGLE REGULATOR AXIS CPERA	84
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	85
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	86
0501052297	DEPTH WHEELS REGULATOR ASSY	87
0501052538	DEPTH BAND WITH ARMS	88
0511054333	COMPACT WHEEL RIGHT WITH BEARING	89
0511054334	COMPACT WHEEL LEFT WITH BEARING	90
0501052908	COMPACTOR WHEEL WITH BEARING	91
0511058639	SHORT FERTILIZER ROW WITH DDD/DC20	92
0511058640	LONG FERTILIZER ROW WITH DDD/DC20	93
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	94
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	95
0511058630	20" DISC CUT	96
0521050525	FIXER FERTILIZER CONDUCTOR	97
0511052024	FAST CLOSING SET	98
0501050120	LARGER WALKING BEAM ASSY	99
0521057957	FIXED ROD EXTENSION WITH FIXATION	100
0521050560	ASSY HOSE SUPPORT 3"	101

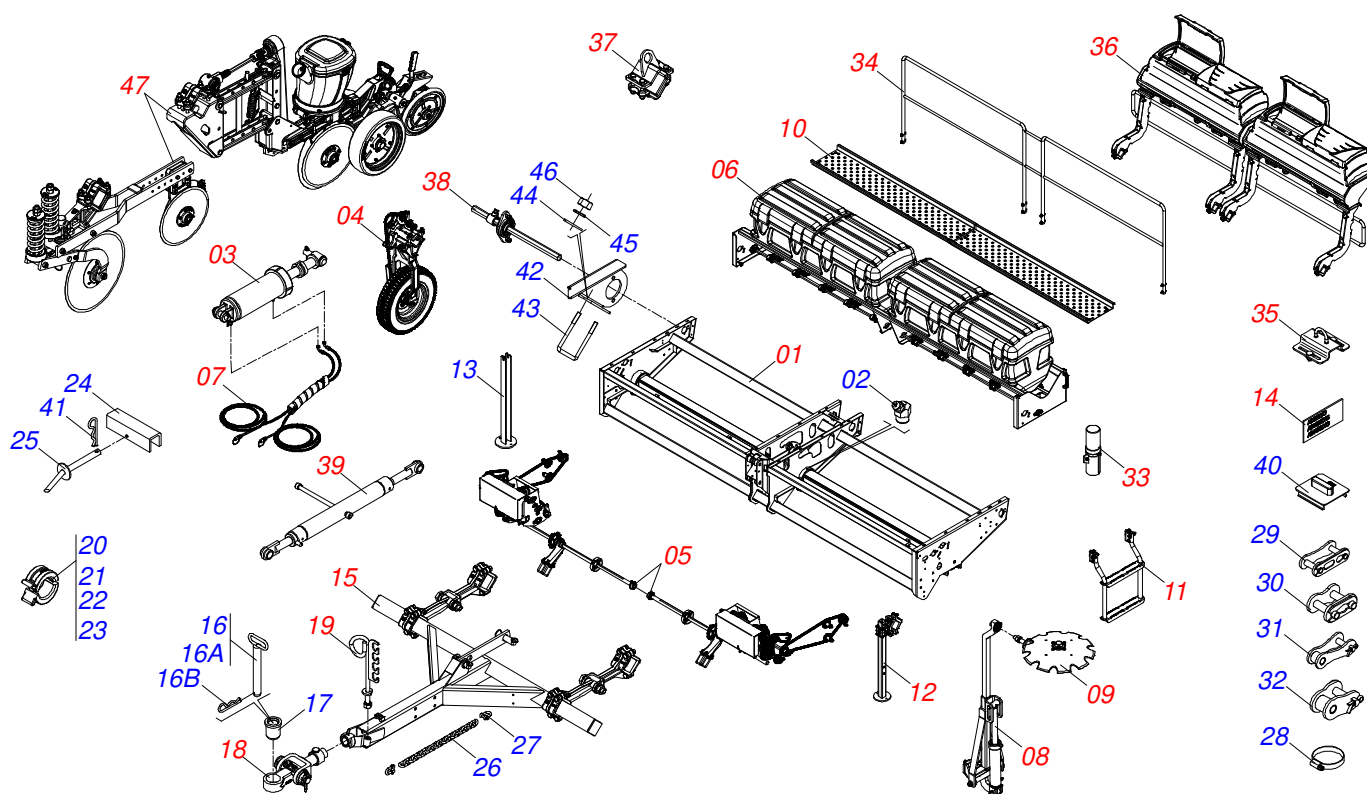


Item	Code	Description	See page	QT
01	0511057361	FRAME WITH WHEEL AXLE - 4395	2	01
02	0503010003	1845 GREASE FITTING		04
03	0511058655	CYLINDER SET - 3245/3495/4045/4395	3	01
04	0511058653	WHEELS WITH TRACTION SPRING	5	04
05	0511058985	TRANSMISSION ASSEMBLY - 4395	14	01
06	0511057360	FERTILIZER BOX ASSEMBLY - 4395	36	01
07	0511057266	HYDRAULIC SYSTEM ASSEMBLY - 3245/3495/4045/4395	40	01
08	0511057355	SEMI-ASSEMBLED HYDRAULIC MARKER - 4395	42	01
09	0501050633	ROW MARKER DISK ASSEMBLY	46	02
10	0511057358	PLATFORM ASSEMBLY - 4395	48	01
11	0511056536	LADDER ASSEMBLY	49	02
12	0511054971	JACK ASSEMBLY	50	02
13	0501065677	STRUT		02
14	0511059457	LABELS KIT - 4395	51	01
15	0511057333	DRAWBAR ASSEMBLY - 3495/4045/4395/4845/5345/5745	52	01
16	0511053179	TRACTOR COUPLING SHAFT		01
16A	0521064036	TRACTOR HITCH AXLE		01
16B	0503030012	HITCH PIN CLIP		01
17	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
18	0511054601	HITCH ARTICULATED TRACTOR	53	01
19	0511056736	HOSE SUPPORT	54	01
20	0501047895	ROD STOP		01
21	0501047885	ROD STOP		01
22	0501047886	ROD STOP		01
23	0501047887	ROD STOP		01
24	0521013022	TRANSPORT LOCK		01
25	0501068994	8,30 X 78 LOCK PIN		01
26	0503014120	CHAIN		01
27	0503014321	CABLE STEEL SHACKLE		02
28	0503010246	CLAMP		09


FRAME ASSY

0909098981


Item	Code	Description	See page	QT
29	0503010780	N-2050 AMENDMENT		02
30	0503010951	REDUCTION		04
31	0503011750	AMENDMENT WITH LOCK		06
32	0503011751	REDUCTION		06
33	0511057845	MANUAL CANISTER	55	01
34	0511057359	HANDRAIL ASSEMBLY - 4395	56	01
35	0511059323	PLATFORM TRANSPORT SUPPORT	57	04
36	0511058175	SINGLE SEED BOX - 4395/9 E500	58	01
37	0511059322	LIFTING SUPPORT ASSEMBLY	60	02
38	0909098983	HEX AXLE ASSEMBLY - 3495/4395/4845	62	01
39	0511057270	DRAWBAR EXTENDER	61	01
40	0503032624	FERTILIZER BOX GUTTER		04
41	0503030168	HITCH PIN CLIP		01
42	0571019315	BEARING SUPPORT AXLE HEX/SUPPORT PLATAFORM		02
43	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
44	0511017302	FLAT WASHER		04
45	0503010019	1/2" SPRING WASHER		04
46	0503010060	1/2" NUT		04
47	0909098984	ASSY FERTILIZER/SEED ROW	63	01

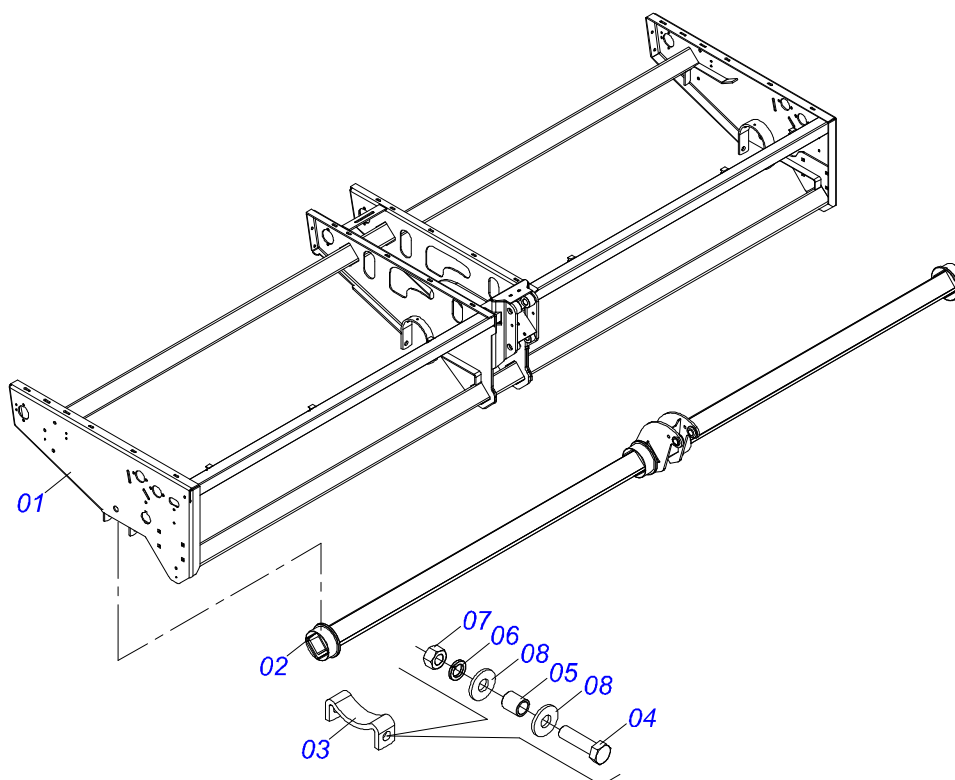


Item	Code	Description	See page	QT
01	0521065920	FRAME - 4395		01
02	0521065929	CARRYING-WHEELS PIVOT SHAFT - 4395		01
03	0521013199	LOWER BEARING SEMI		04
04	0503810899	SCREW		08
05	0531013922	0.6" X 0.8" X 1" SLEEVE		08
06	0503011445	SPRING WASHER		08
07	0503810013	NUT 5/8 NC		08
08	0501812140	FLAT WASHER		16

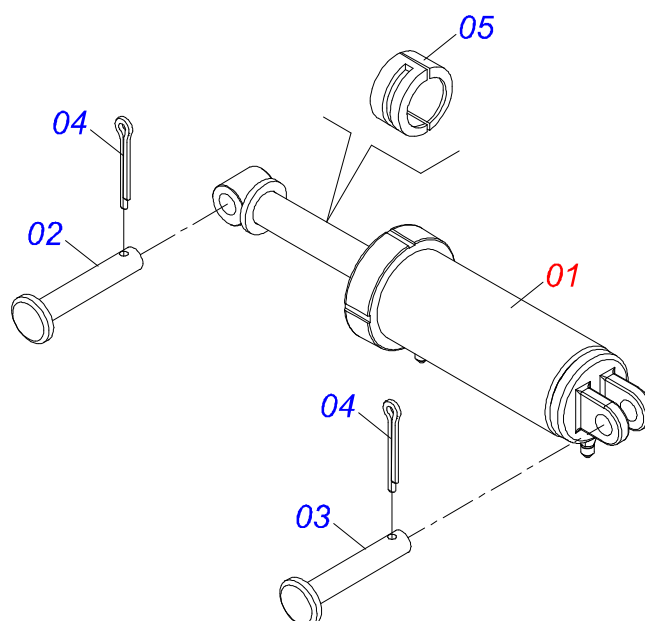

Item	Code	Description	See page	QT
01	0521045510	HYDRAULIC CYLINDER		01
02	0551014099	COUPLING SHAFT 31,75 X 185		01
03	0521010547	1.2" X 6.5" COUPLING SHAFT		01
04	0503010523	1/4" X 2" COTTERPIN		02
05	0501047888	ROD STOP		01

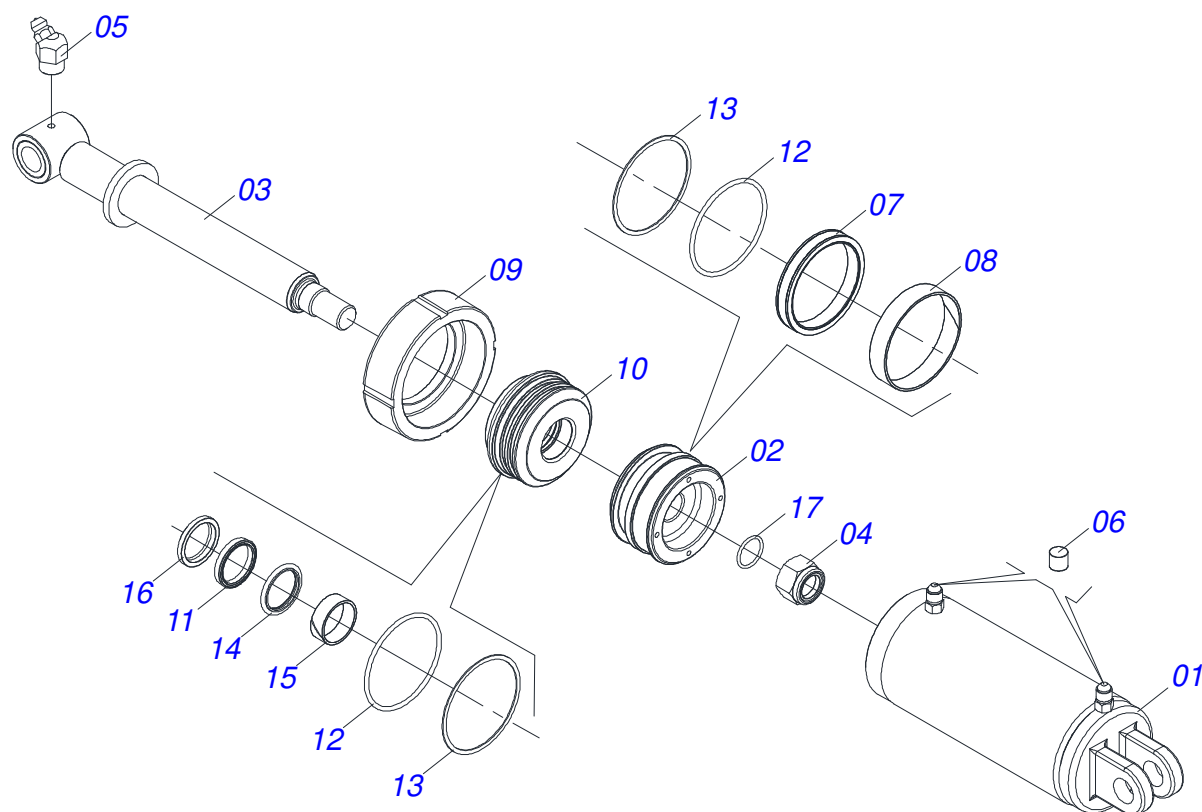


Item	Code	Description	See page	QT
01	0521066740	CYLINDER CASE		01
02	0581013698	PISTON		01
03	0521067586	TURNBUCKLE		01
04	0503010817	1.1/4" SELF LOCKING NUT		01
05	0503010003	1845 GREASE FITTING		01
06	0503030385	CYLINDER PLUG N-002		02
07	0503018439	WIPER SEAL		01
08	0503018150	RING GUIDE		01
09	0502010382	5" END CAP		01
10	0581010353	RING SUPPORT		01
11	0503018026	1870-2000-375 B GASKET		01
12	0503011453	O'RING		02
13	0503018152	O'RING		02
14	0503018024	RING BS		01
15	0503018025	RING GUIDE		01
16	0503010039	D-2000 SCRAPER RING		01
17	0503010173	2-220 N 3006-9B O'RING		01

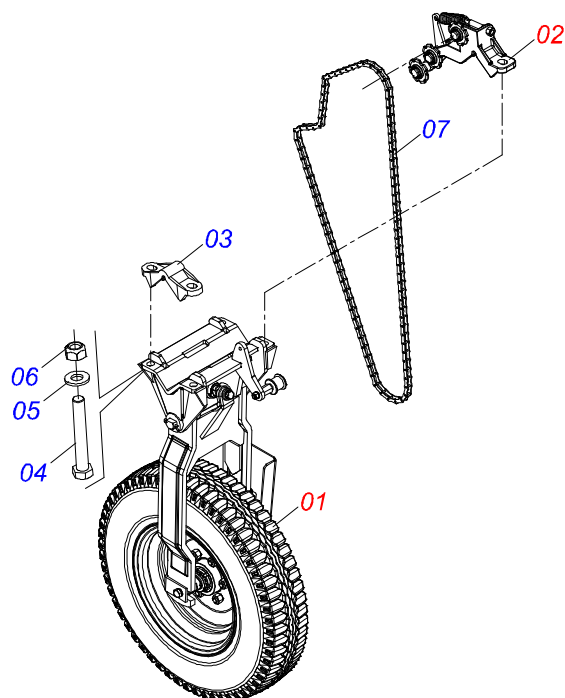


Item	Code	Description	See page	QT
01	0511058654	WHEEL SUPPORT	6	01
02	0501058240	WHEEL FASTENER WITH TENSIONER	10	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

WHEEL SUPPORT


0511058654

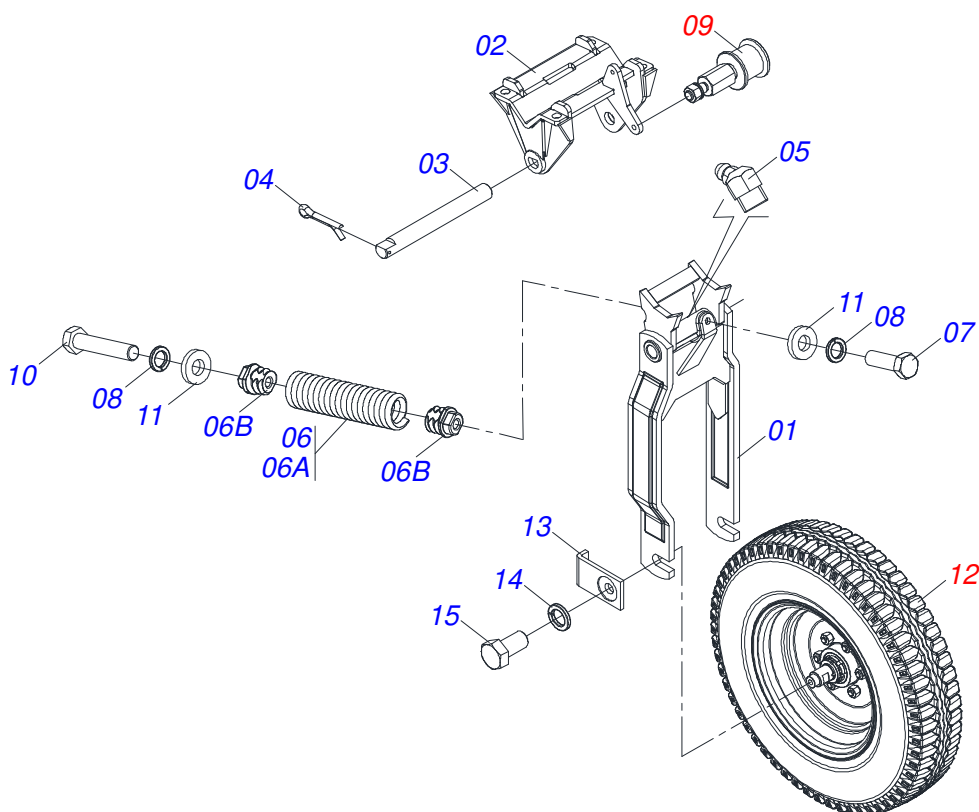


Item	Code	Description	See page	QT
01	0521066716	WHEEL ARM ASSY		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" COTTERPIN		01
05	0503010003	1845 GREASE FITTING		01
06	0511050681	TRACTION SPRING		01
06A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
06B	0561016062	SPRING HITCH		02
07	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
08	0503010027	5/8" SPRING WASHER		01
09	0501058241	WHEEL SUPPORT CHAIN TENSIONER	9	01
10	0503013030	5/8" X 3.1/4" BOLT		01
11	0551017715	FLAT WASHER		02
12	0511052770	WHEEL WITH TIRE	7	01
13	0591010589	BODY LOCK WHEEL		01
14	0503010027	5/8" SPRING WASHER		02
15	0503011167	M16 X 2 X 30 BOLT		02

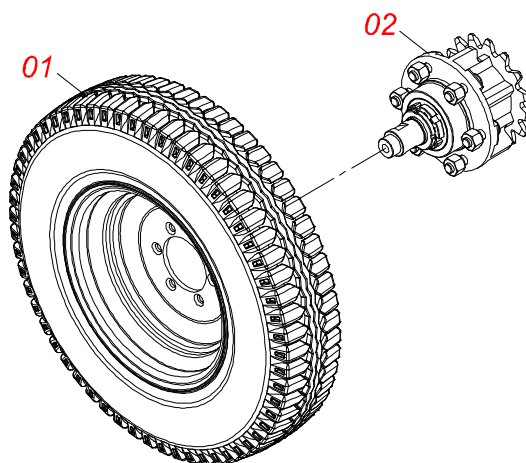

Item	Code	Description	See page	QT
01	0503062159	WHEEL WITH TIRE		01
02	0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	8	01

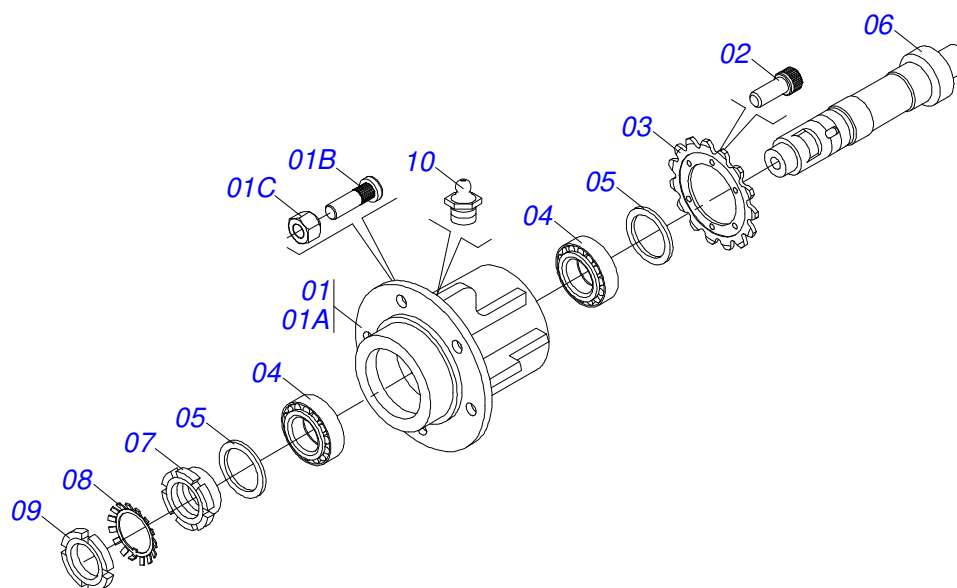


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503012550	5/16" X 3/4" BOLT		06
03	0502011339	15Z GEAR P 1.25"		01
04	0503010328	25590/25523 ROLLER BEARING		02
05	0503010804	00547-B SEAL		02
06	0521012185	TRANSMISSION WHEEL AXLE		01
07	0511015949	LOCK NUT		01
08	0503010329	LOCK WASHER		01
09	0503010330	KM 9 LOCKNUT		01
10	0503010002	1800 GREASE FITTING		01

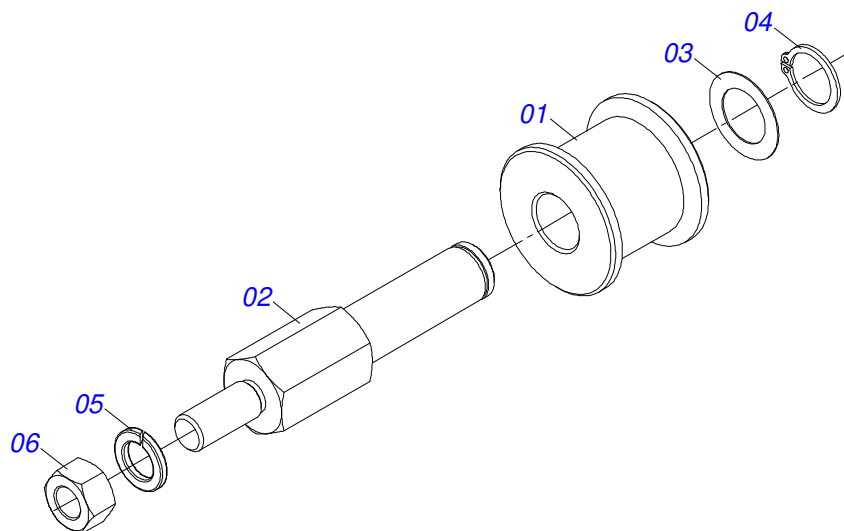


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	FERT CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

WHEEL FASTENER WITH TENSIONER


0501058240

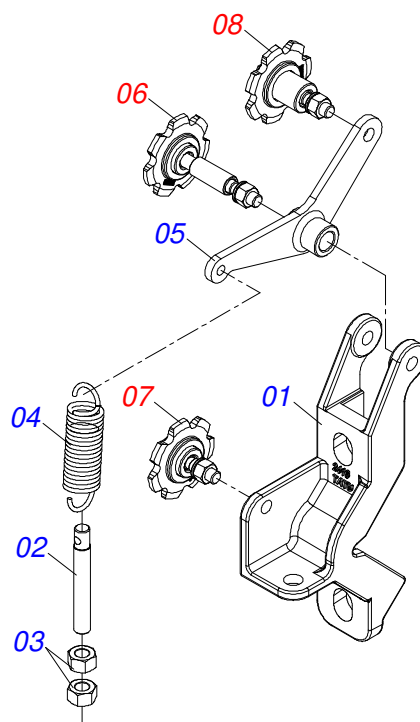


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8" NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	11	01
07	0501058244	WHEEL FIXED CHAIN TENSIONER	12	01
08	0501058242	WHEEL MOBILE CHAIN TENSIONER	13	01

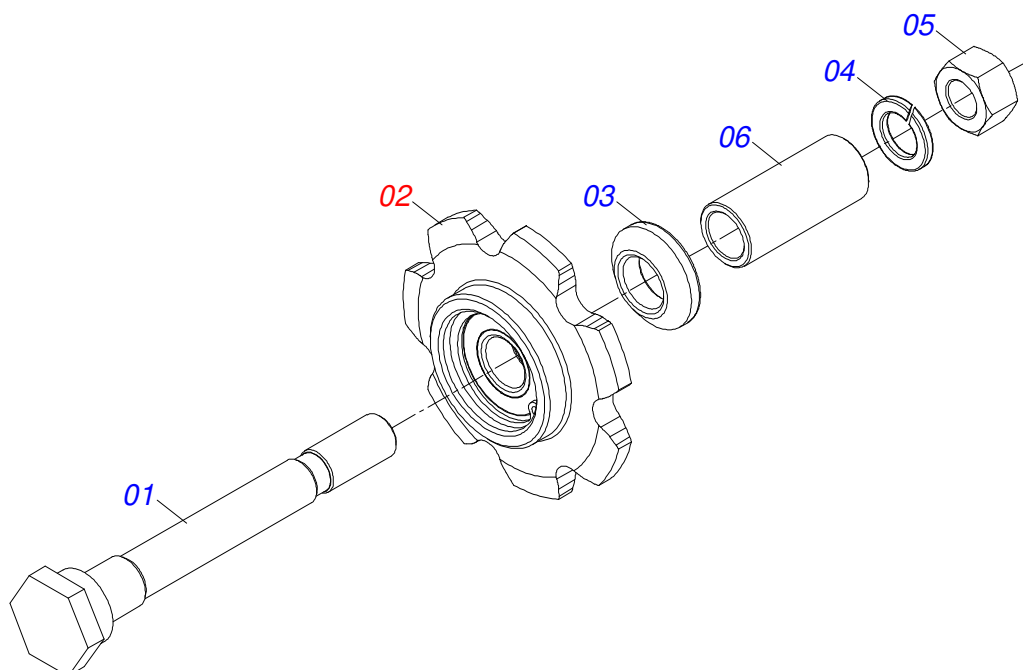


Item	Code	Description	See page	QT
01	0551018245	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0551018239	SLEEVE 19 X 13,50 X 45		01

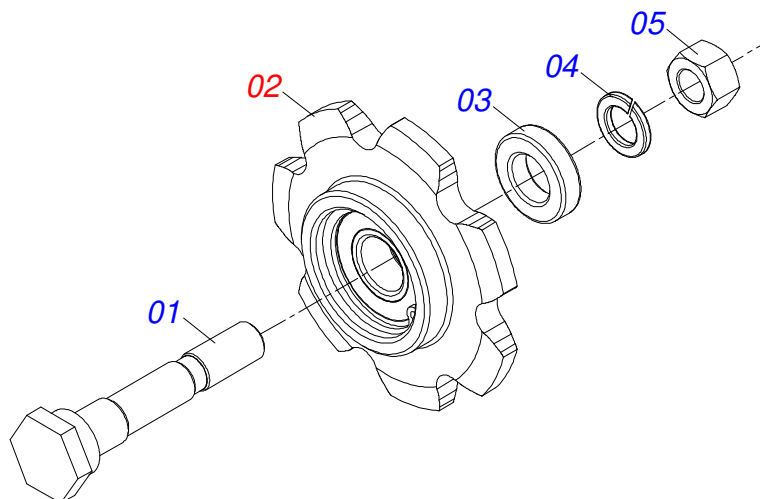

Item	Code	Description	See page	QT
01	0551018252	CHAIN TIGHTENER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

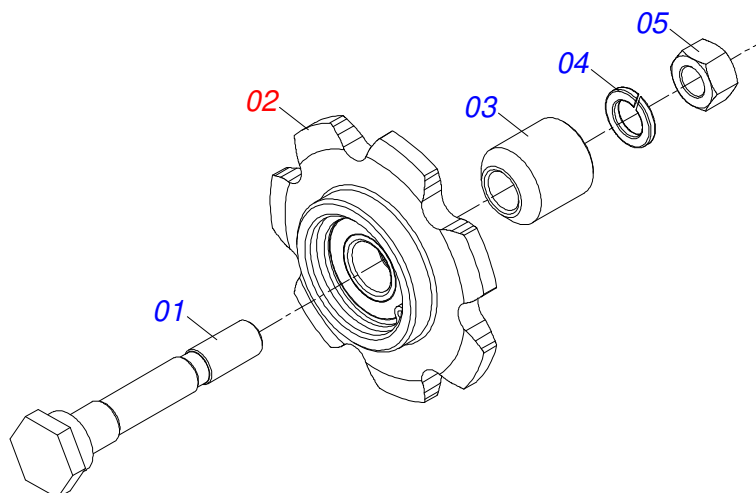


Item	Code	Description	See page	QT
01	0551018244	CHAIN UPPER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0591017923	15,30 X 30 X 32 SLEEVE		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

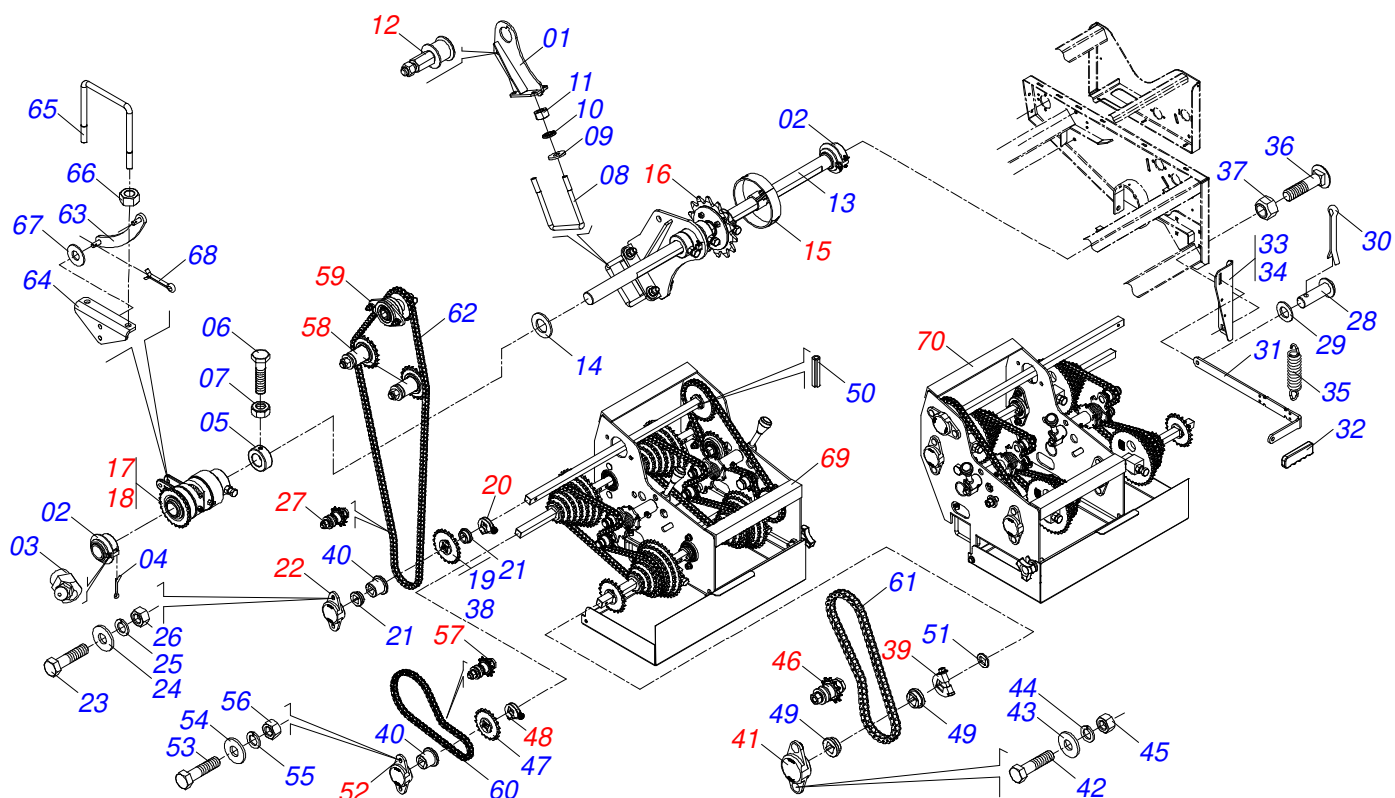


Item	Code	Description	See page	QT
01	0521065954	SUPPORT BEARING AXLE MOTOR		04
02	0501110639	BEARING		08
03	0503011099	GREASE FITTING		08
04	0503010300	5/32" X 1" COTTERPIN		08
05	0511015961	LOCK BUSHING		04
06	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
07	0503010060	1/2" NUT		04
08	0521014021	1/2" X 4.5" X 5.4" FASTENER		08
09	0511017302	FLAT WASHER		16
10	0503010019	1/2" SPRING WASHER		16
11	0503010060	1/2" NUT		16
12	0501058241	WHEEL SUPPORT CHAIN TENSIONER	9	04
13	0571018907	AXLE MOTOR 2125		02
14	0501018466	FLAT WASHER		02
15	0501052560	MOTOR AXLE SIGNAL	15	02
16	0511051434	TRANSMISSION ACTUATOR	16	04
17	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	17	01
18	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	18	01
19	0511061759	22Z P12,70 FQ 3/4" GEAR		02
20	0501053788	3/4 SQUARE AXLE FASTENER	19	02
21	0503030303	SUPPORT WASHER		04
22	0501056271	GEARBOX CLOSED BEARING	20	02
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
24	0501010984	FLAT WASHER		08
25	0503010025	3/8" SPRING WASHER		04
26	0503010026	3/8" NUT		04
27	0511057265	TRANSMISSION CHAIN TENSIONER	21	02
28	0521010773	0.37" X 1.18" COUPLING SHAFT		02
29	0501010984	FLAT WASHER		06
30	0503010140	1/8" X 3/4" COTTERPIN		02
31	0571018846	DISASSEMBLE LEVER		02

Item	Code	Description	See page	QT
32	0503033942	COVER REGULATORY WHEEL		02
33	0571018844	SUPPORT RIGHT DISASSEMBLE LEVER		01
34	0571018845	SUPPORT LEFT DISASSEMBLE LEVER		01
35	0503030093	TRACTION SPRING		02
36	0503012407	5/8" X 1-1/2" BOLT		04
37	0503012412	5/8 UNC SELF LOCKING NUT		04
38	0511061759	22Z P12,70 FQ 3/4" GEAR		02
39	0501053788	3/4 SQUARE AXLE FASTENER	19	02
40	0503030275	AGRICULTURAL BEARING		02
41	0501056271	GEARBOX CLOSED BEARING	20	02
42	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
43	0501010984	FLAT WASHER		08
44	0503010025	3/8" SPRING WASHER		04
45	0503010026	3/8" NUT		04
46	0511057265	TRANSMISSION CHAIN TENSIONER	21	02
47	0511065209	20Z GEAR		02
48	0501053788	3/4 SQUARE AXLE FASTENER	19	02
49	0503030303	SUPPORT WASHER		02
50	0503010292	0.2" X 1.6" SPRING PIN		02
51	0521018630	1.4" X SQUARE 0.8" WASHER		02
52	0501056271	GEARBOX CLOSED BEARING	20	02
53	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
54	0501010984	FLAT WASHER		08
55	0503010025	3/8" SPRING WASHER		04
56	0503010026	3/8" NUT		04
57	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	22	02
58	0511050652	CHAIN TENSIONER	23	04
59	0501053653	BEARING WITH GEAR 20Z 3/4 HEX SHAFT	24	02
60	0503015637	40-1 X 56 CHAIN LINK + REDUCTION		02
61	0503014870	40-1 X 59 CHAIN LINK + MENDING		02
62	0503015001	40-1 X 153 CHAIN LINK + MENDING		02
63	0511069678	LH LOWER LEVER		02
64	0551019159	LEVER FIXER BODY		02
65	0561016468	FASTENER		02
66	0503011336	1/2" HEX SELF ADJUSTING NUT		04
67	0501010984	FLAT WASHER		04
68	0503010140	1/8" X 3/4" COTTERPIN		04
69	0521055335	RIGHT GEAR HOUSING SET	26	01
70	0521055337	LEFT GEAR HOUSING SET	27	01

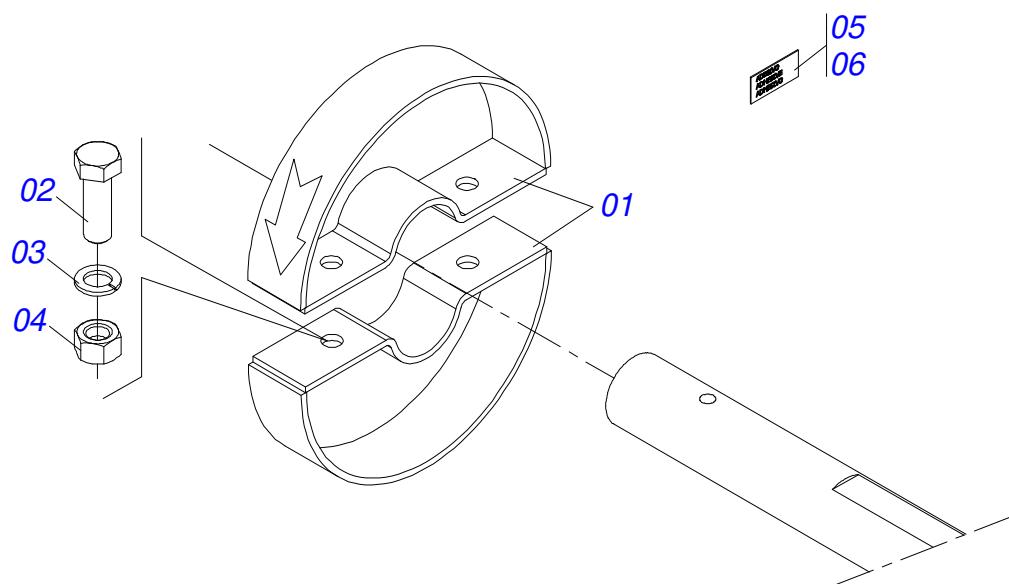


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ADHESIVE LABEL		01

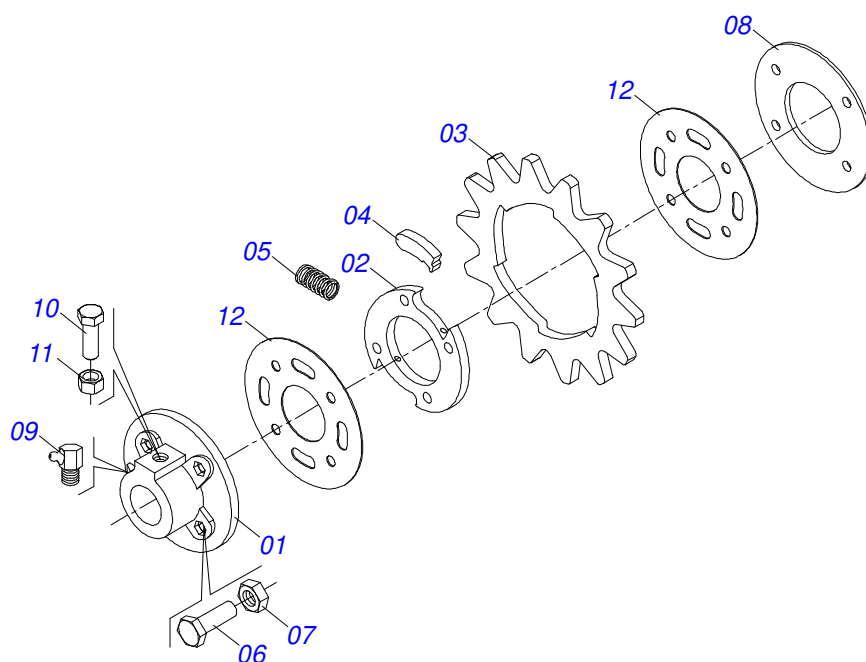

Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

RIGHT SIDE TRANSMISSION ACTUATOR


0511047069

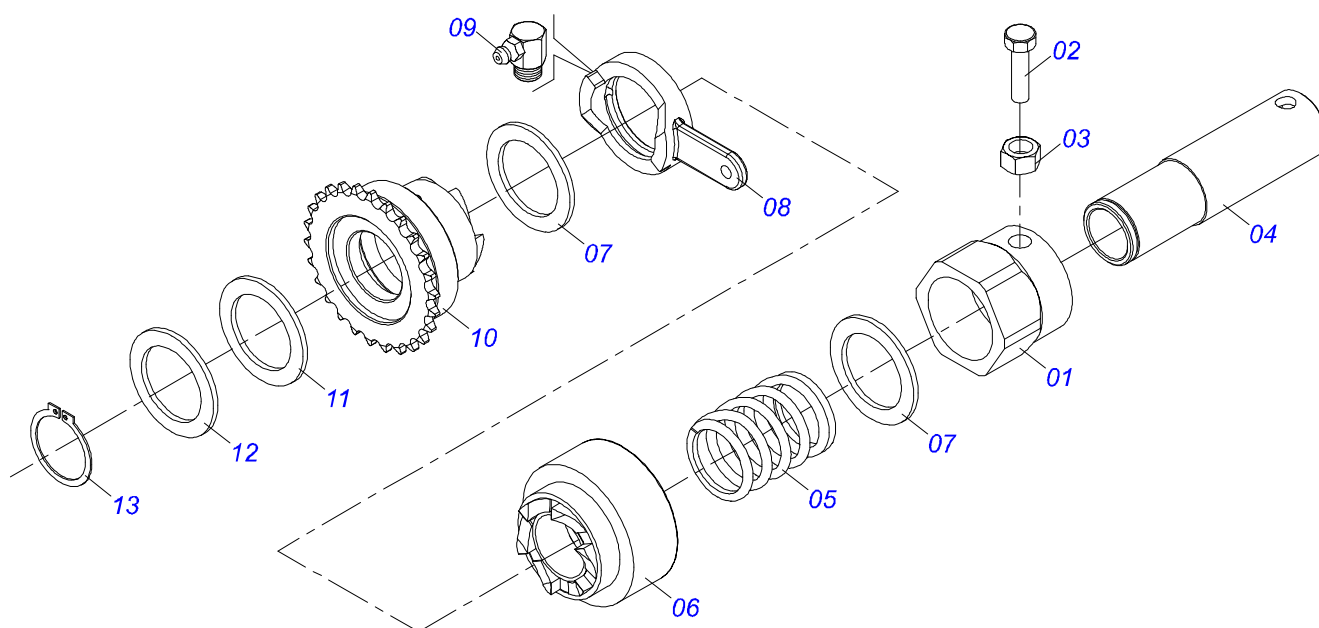


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

LEFT SIDE TRANSMISSION ACTUATOR


0511047070

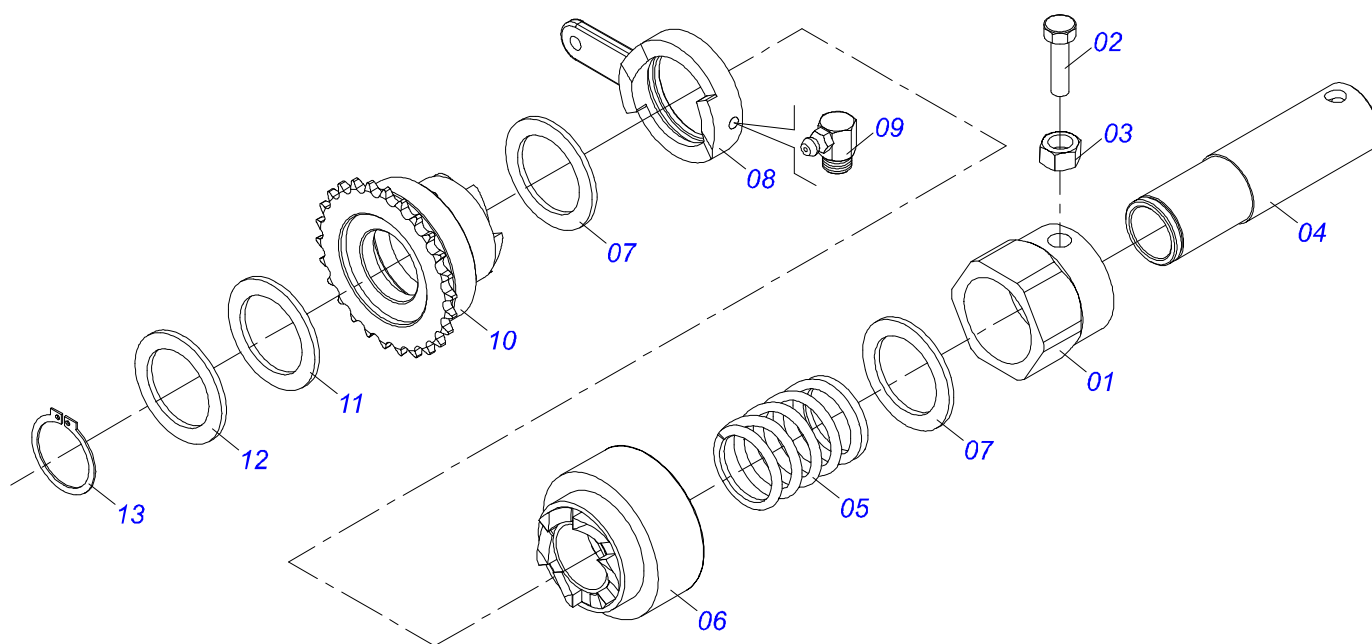


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

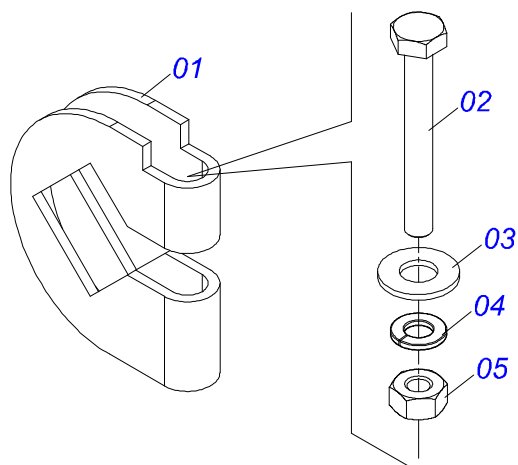


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

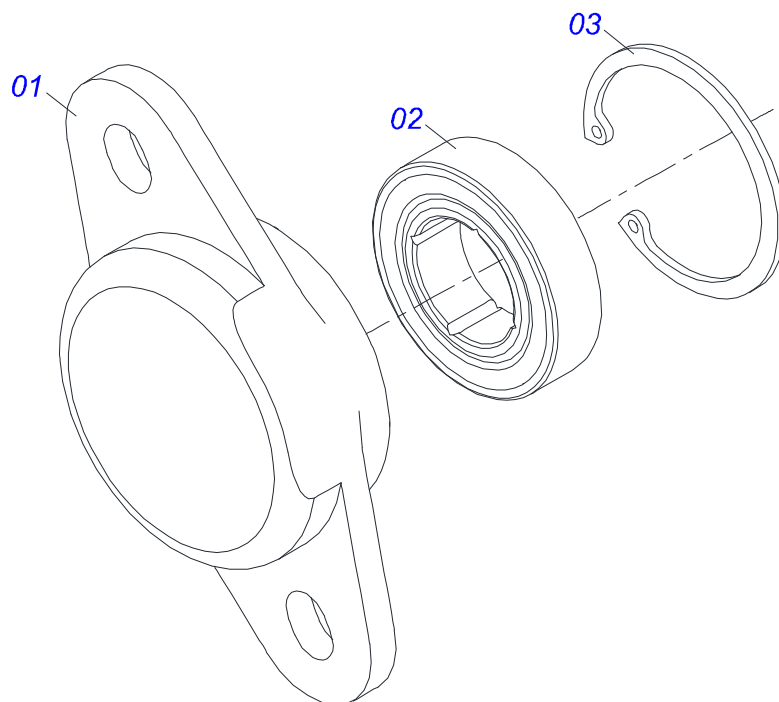


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

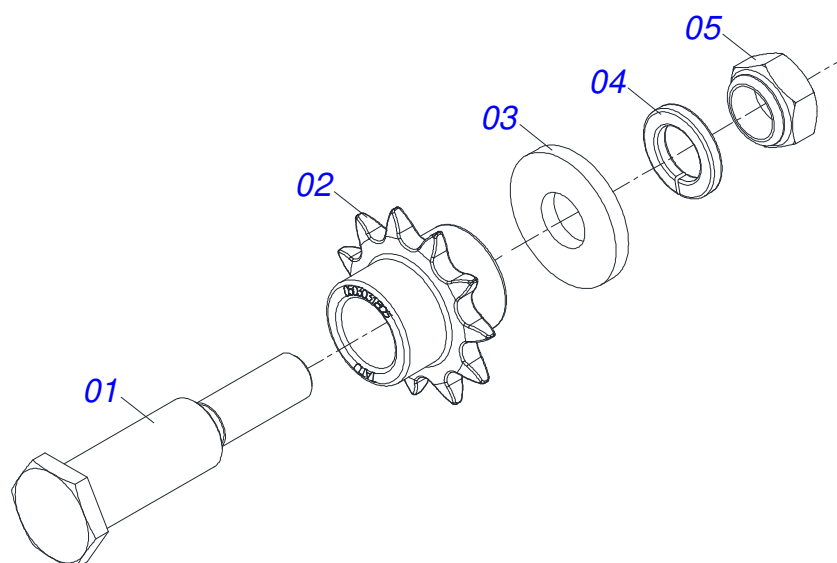


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		03
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

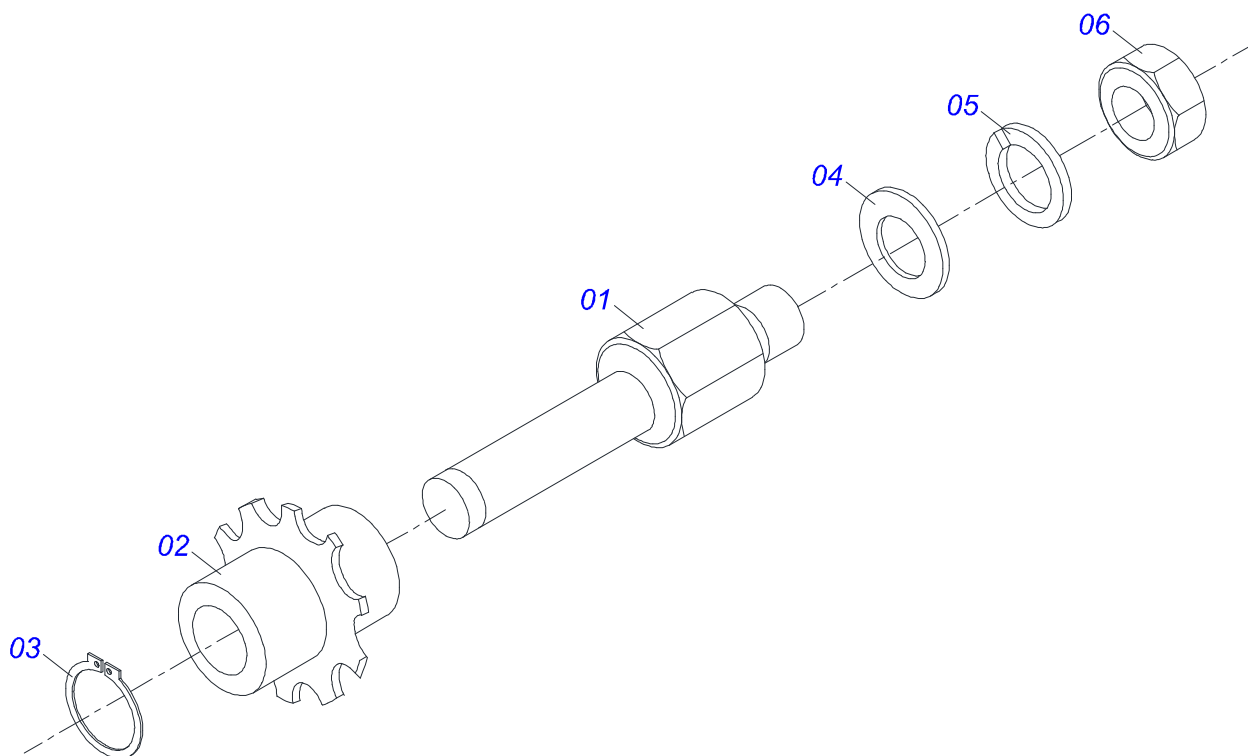


Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

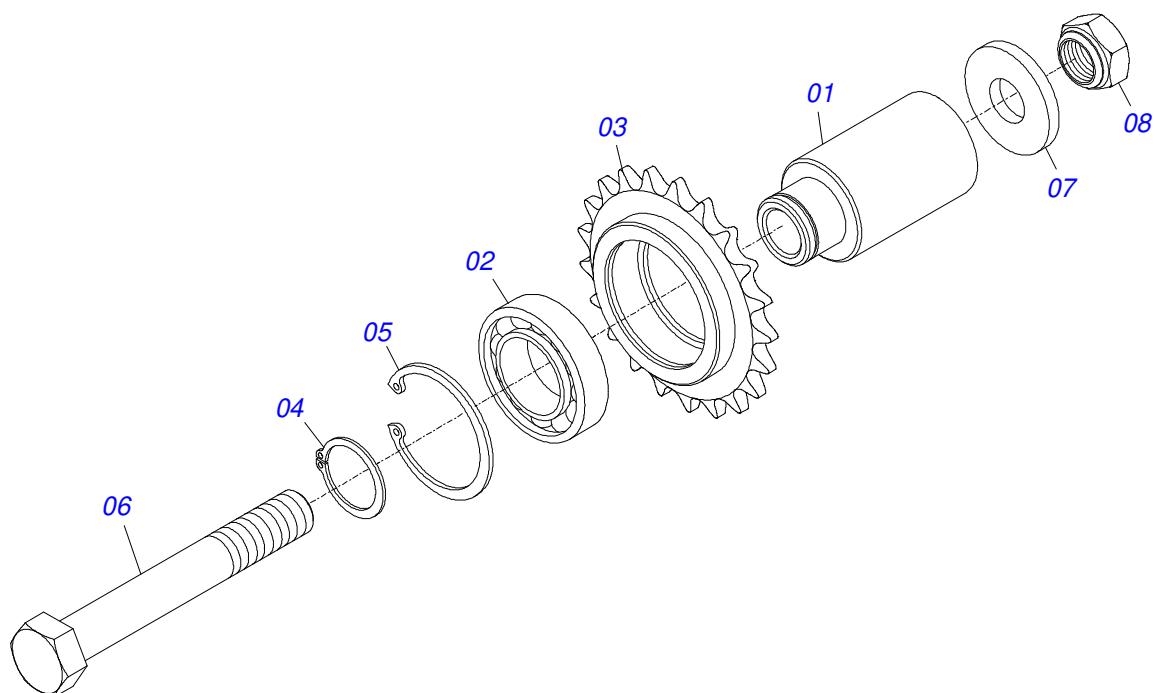

Item	Code	Description	See page	QT
01	0551019171	CHAIN TIGHTENER AXLE		01
02	0503011410	ROLLER BEARING		01
03	0511062169	21Z P 1/2" GEAR		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0503011105	SEAL RING		01
06	0501011027	5/8" X 3-3/4" BOLT		01
07	0571010265	16.5 X 40 X 3 FLAT WASHER		01
08	0503012412	5/8 UNC SELF LOCKING NUT		01

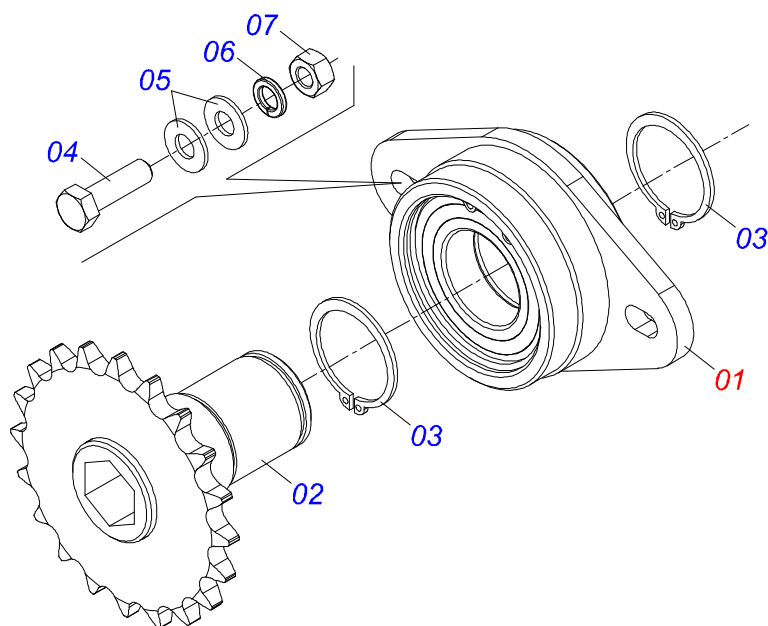


Item	Code	Description	See page	QT
01	0501053654	3/4 SEED TRANSMISSION DOUBLE BEARING	25	01
02	0511063185	20Z GEAR WITH HEX HOLE AXLE 20		01
03	0503010707	501030 CLAMPING RING (FOR AXLE)		02
04	0503010365	NUT		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

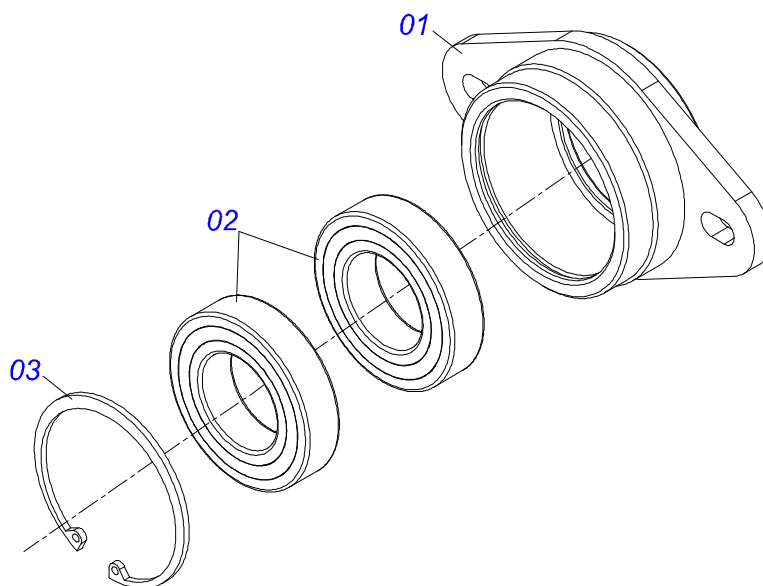

Item	Code	Description	See page	QT
01	0502012031	HOUSING BEARING		01
02	0503012861	6006 2RS BALL BEARING		02
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01

RIGHT GEAR HOUSING SET


0521055335

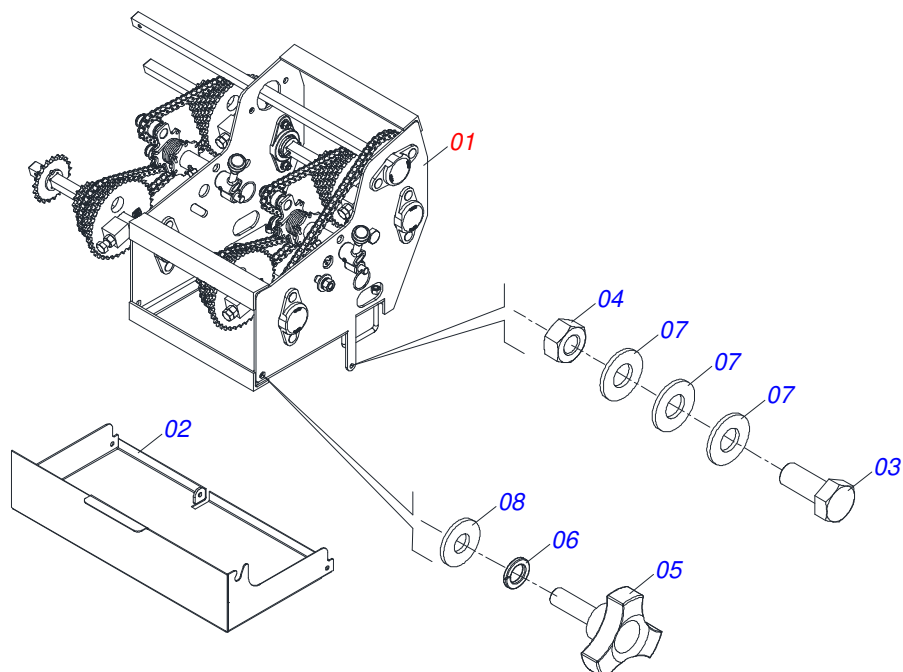

Item	Code	Description	See page	QT
01	0511058381	RIGHT GEAR HOUSING	28	01
02	0521065955	RH GEAR BOX COVER		01
03	0503010240	BOLT		02
04	0503013816	5/16" LOCKNUT		02
05	0503033682	KNOB 3P K3 60A M12 X 40		01
06	0503010019	1/2" SPRING WASHER		01
07	0501010694	FLAT WASHER		06
08	0511017302	FLAT WASHER		01

LEFT GEAR HOUSING SET


0521055337

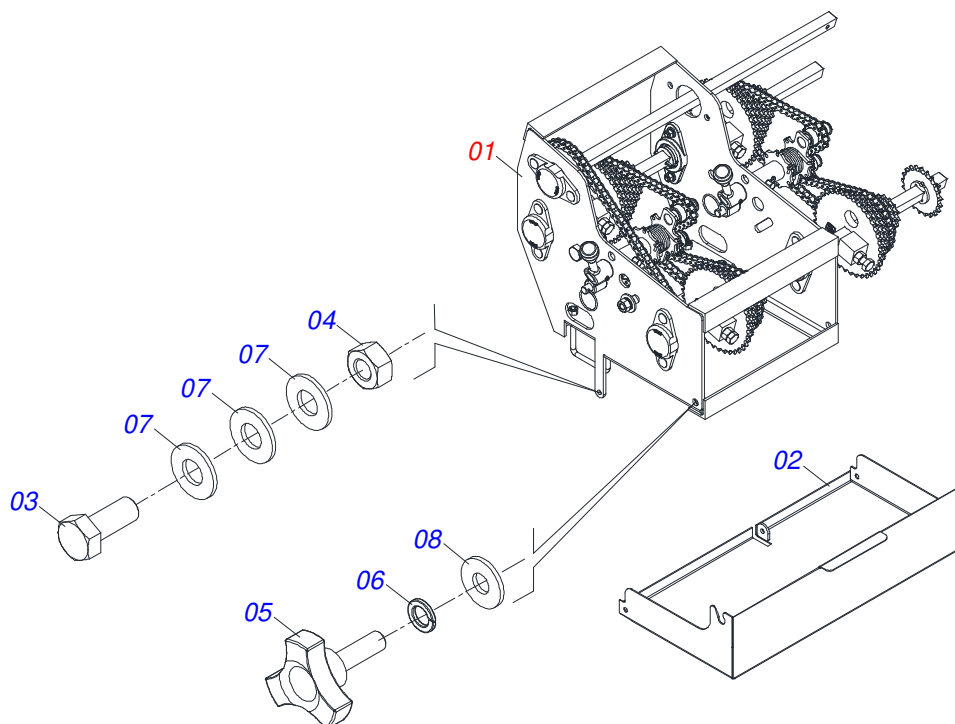

Item	Code	Description	See page	QT
01	0511058382	LEFT GEAR HOUSING	29	01
02	0521065956	LH GEAR BOX COVER		01
03	0503010240	BOLT		02
04	0503013816	5/16" LOCKNUT		02
05	0503033682	KNOB 3P K3 60A M12 X 40		01
06	0511017302	FLAT WASHER		01
07	0503010019	1/2" SPRING WASHER		01
08	0501010694	FLAT WASHER		06

RIGHT GEAR HOUSING

0511058381

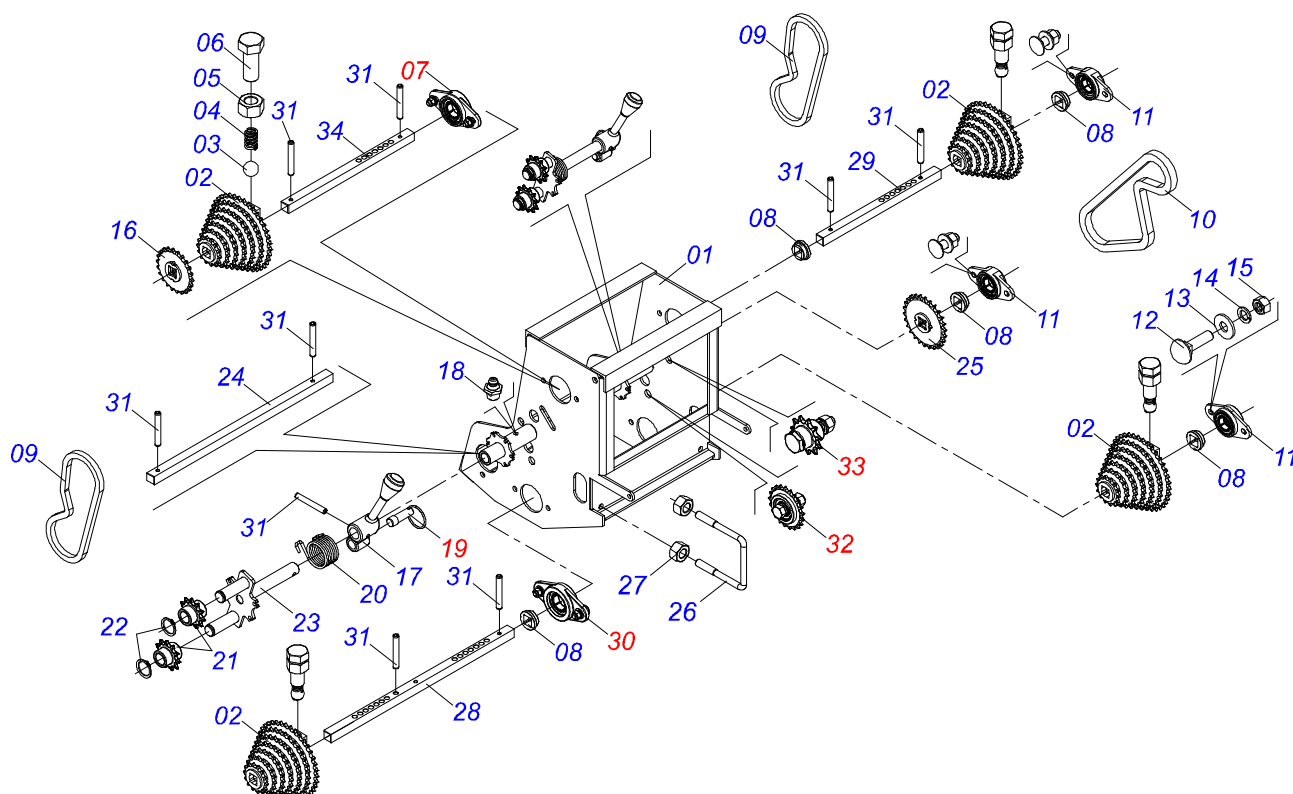

Item	Code	Description	See page	QT
01	0521065939	RIGHT GEAR BOX		01
02	0511060396	DRIVE/DRIVEN AXLE CONE		04
03	0503012389	1/2 BALL		04
04	0503031512	0.4" X 0.1"X 2" X 0.6" SPRING		04
05	0503010060	1/2" NUT		04
06	0503010395	1/2" X 1-1/4" BOLT		04
07	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	30	01
08	0503030303	SUPPORT WASHER		06
09	0503012204	40-1 CHAIN X 82 LINK + RED		02
10	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
11	0501056271	GEARBOX CLOSED BEARING	20	03
12	0503011953	5/16" X 1" BOLT		06
13	0501010694	FLAT WASHER		06
14	0503010179	LOCK WASHER		06
15	0503010337	5/16" NUT		06
16	0511061758	21Z GEAR		01
17	0502011758	REAR TENSIONER LEVER		02
18	0503010002	1800 GREASE FITTING		02
19	0501048790	AXLE WITH RING	31	02
20	0503031366	RIGHT TWISTED SPRING RECAMBIO		02
21	0503031805	11Z 1/2" GEAR		04
22	0503010302	501019 SEAL RING		04
23	0511061794	CHAIN TENSIONER		02
24	0571018903	AXLE INTERMEDIATE RECAMBIO		01
25	0511067501	26Z GEAR		01
26	0521010683	3/8 UNC FASTENER		02
27	0503010026	3/8" NUT		04
28	0571018902	GEAR BOX DRIVER AXLE		01
29	0571018900	SEED DRIVEN AXLE		01
30	0501056443	GEAR HOUSING BEARING	32	01
31	0503010292	0.2" X 1.6" SPRING PIN		08


RIGHT GEAR HOUSING

0511058381

Item	Code	Description	See page	QT
32	0511057258	TENSIONER WITH GEAR	34	01
33	0511054363	CHAIN TENSIONER	35	01
34	0571018901	DRIVEN AXLE		01

LEFT GEAR HOUSING

0511058382

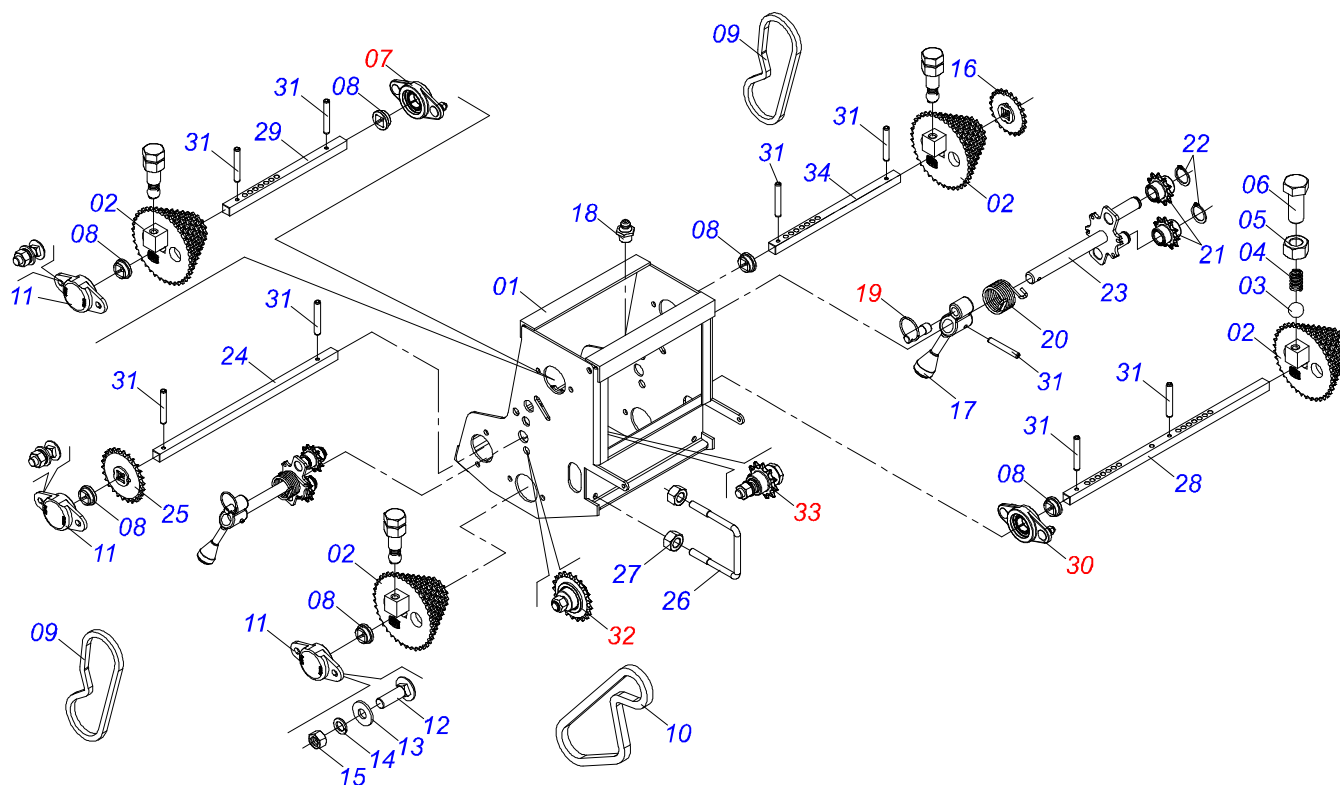

Item	Code	Description	See page	QT
01	0521065940	LEFT GEAR BOX		01
02	0511060396	DRIVE/DRIVEN AXLE CONE		04
03	0503012389	1/2 BALL		04
04	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
05	0503010060	1/2" NUT		04
06	0503010395	1/2" X 1-1/4" BOLT		04
07	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	30	01
08	0503030303	SUPPORT WASHER		06
09	0503012204	40-1 CHAIN X 82 LINK + RED		02
10	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
11	0501056271	GEARBOX CLOSED BEARING	20	03
12	0503011953	5/16" X 1" BOLT		06
13	0501010694	FLAT WASHER		06
14	0503010179	LOCK WASHER		06
15	0503010337	5/16" NUT		06
16	0511061758	21Z GEAR		01
17	0502011758	REAR TENSIONER LEVER		02
18	0503010002	1800 GREASE FITTING		02
19	0501048790	AXLE WITH RING	31	02
20	0503031367	SPRING		02
21	0503031805	11Z 1/2" GEAR		04
22	0503010302	501019 SEAL RING		04
23	0511061794	CHAIN TENSIONER		02
24	0571018903	AXLE INTERMEDIATE RECAMBIO		01
25	0511067501	26Z GEAR		01
26	0521010683	3/8 UNC FASTENER		02
27	0503010026	3/8" NUT		04
28	0571018902	GEAR BOX DRIVER AXLE		01
29	0571018900	SEED DRIVEN AXLE		01
30	0501056443	GEAR HOUSING BEARING	32	01
31	0503010292	0.2" X 1.6" SPRING PIN		08


LEFT GEAR HOUSING

0511058382


Item	Code	Description	See page	QT
32	0511057258	TENSIONER WITH GEAR	34	01
33	0511054363	CHAIN TENSIONER	35	01
34	0571018901	DRIVEN AXLE		01

CENTRAL DOUBLE GEAR HOUSING BEARING


0501056447

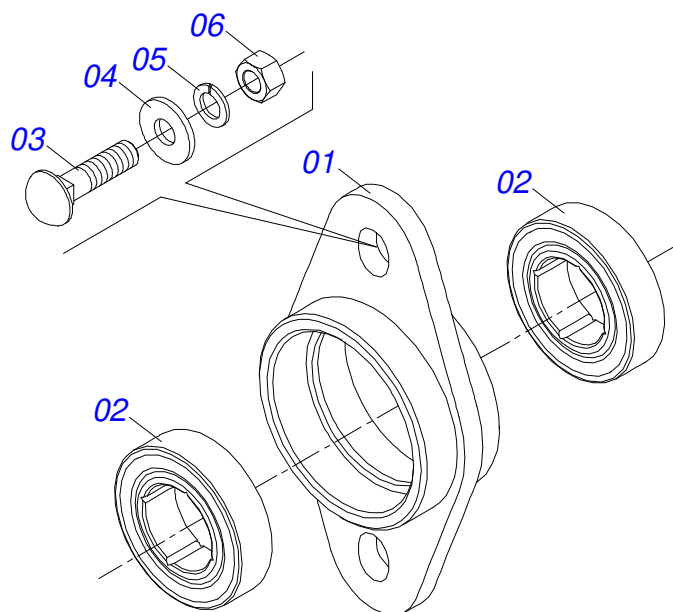


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER		02
06	0503010337	5/16" NUT		02

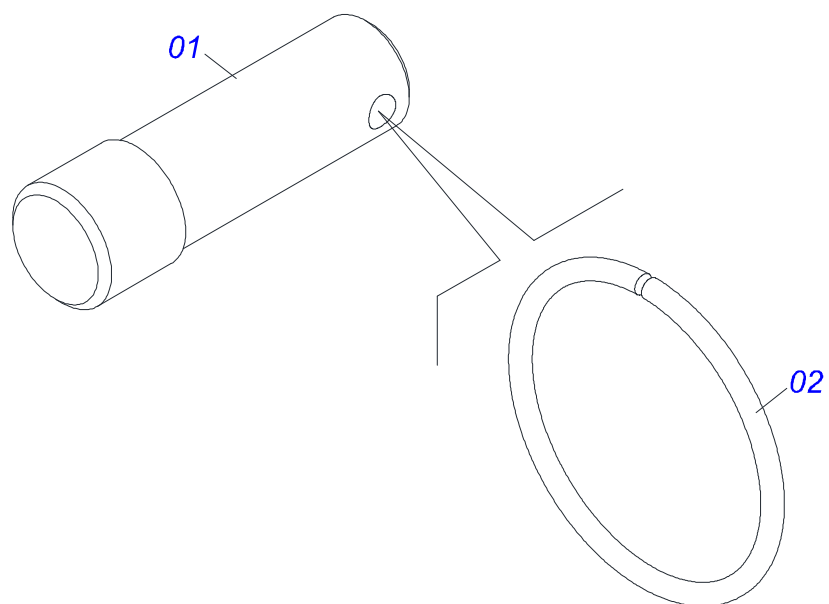

Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

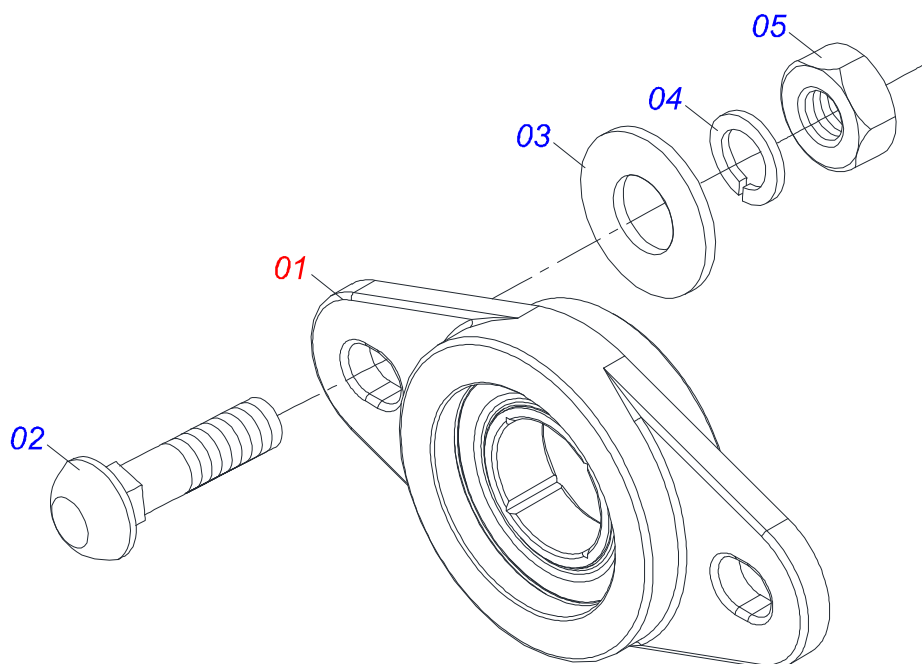


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	33	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

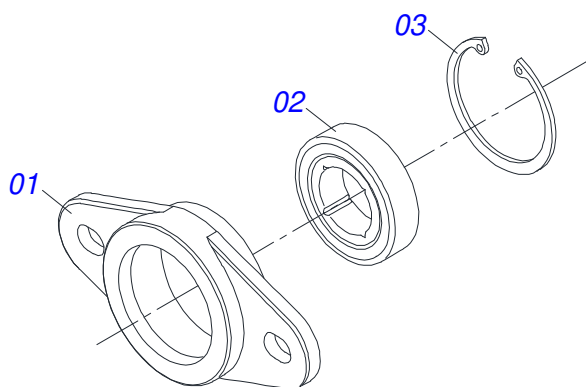


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

TENSIONER WITH GEAR


0511057258

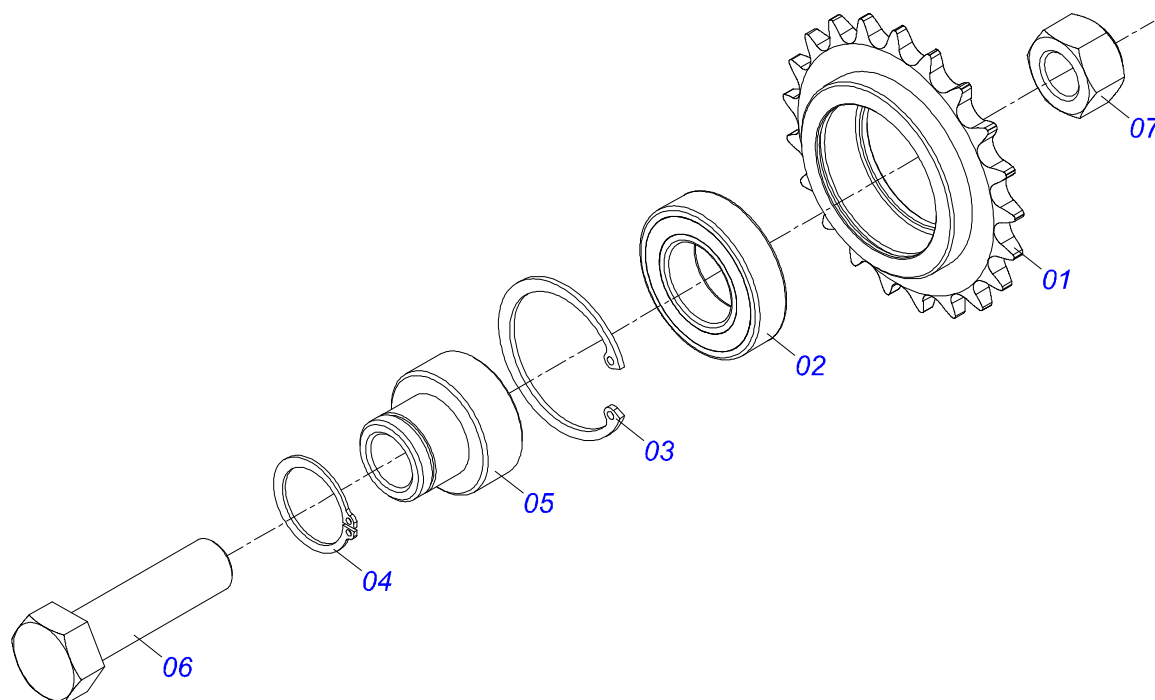


Item	Code	Description	See page	QT
01	0511062169	21Z P 1/2" GEAR		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0571019207	DEVIATION AXLE GEAR BOX		01
06	0503010899	5/8" X 2-1/4" BOLT		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01

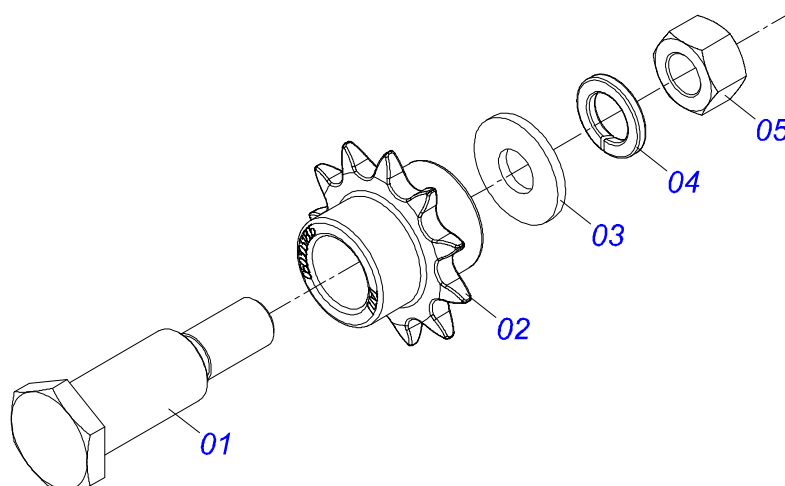

Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

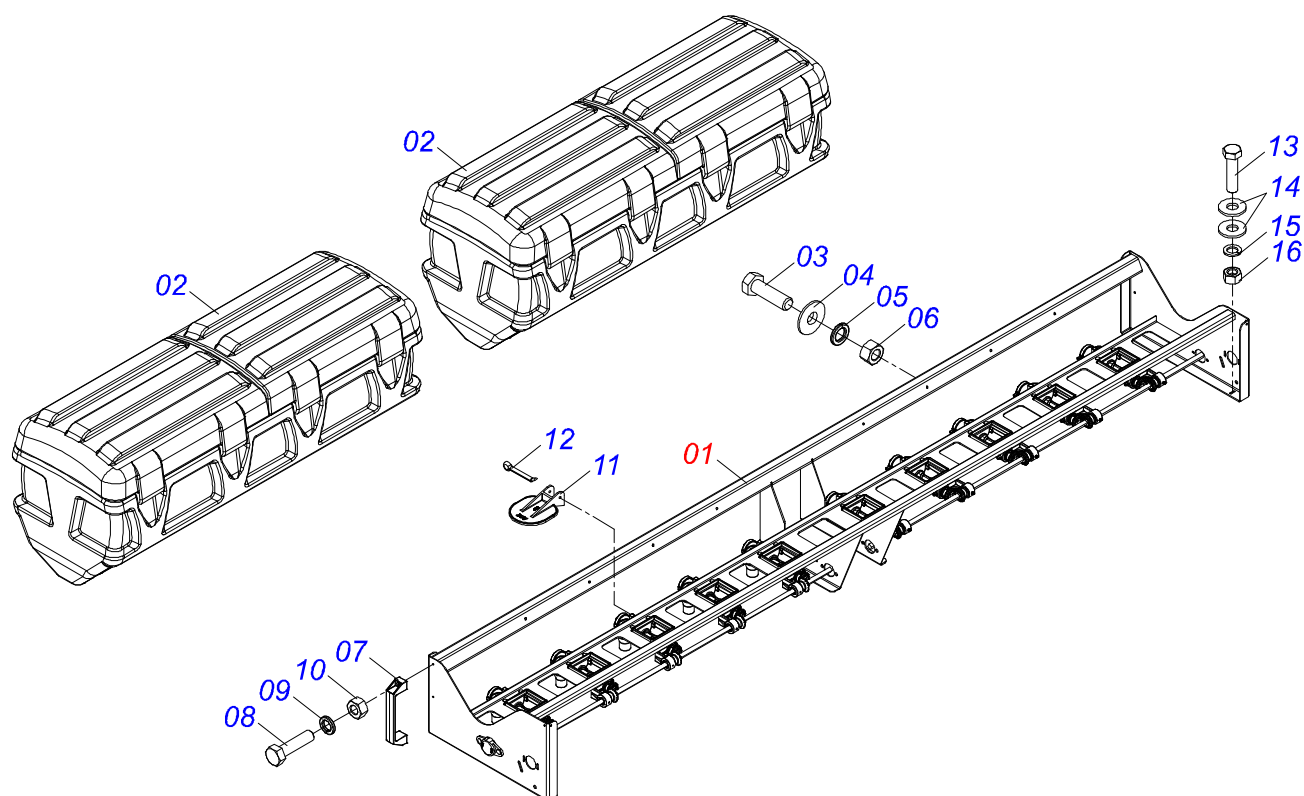


Item	Code	Description	See page	QT
01	0511057357	BOX SUPPORT WITH DISTRIBUTOR - 4395	37	01
02	0503062391	FERTILIZER BOX		02
03	0503013751	3/8 UNC X 1.1/4 BOLT		16
04	0571019051	FIXER BOX WASHER		16
05	0503012535	3/8" SPRING WASHER		16
06	0503012531	3/8" INOX NUT		16
07	0503011957	NYLON LUG		02
08	0503010371	5/16" X 1" BOLT		04
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0503034396	FERTILIZER SIDE COVER		10
12	0503010362	1/8 X 1.1/4 COTTERPIN		10
13	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		10
14	0501010984	FLAT WASHER		20
15	0503010025	3/8" SPRING WASHER		10
16	0503010026	3/8" NUT		10

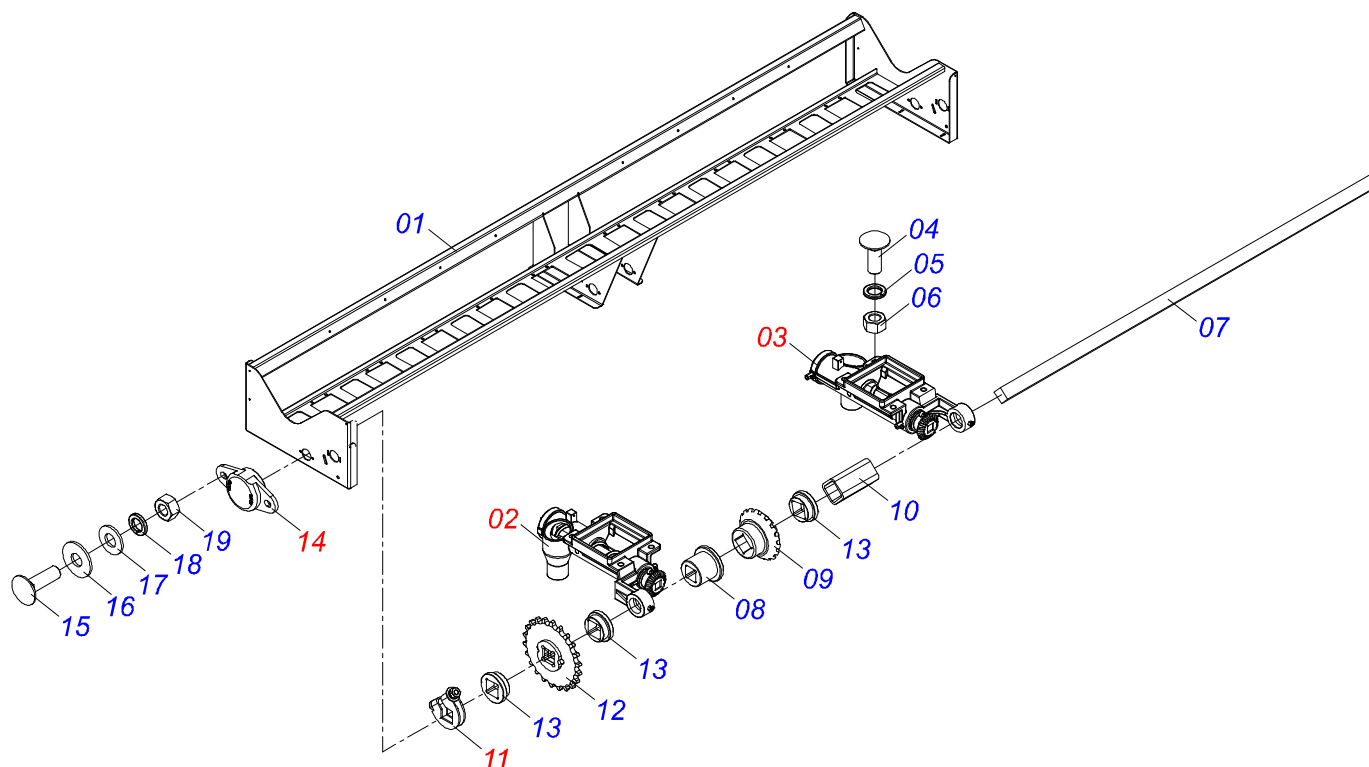

Item	Code	Description	See page	QT
01	0521065935	SUPPORT HOPPER FERTILIZER		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	38	05
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	39	05
04	0501010942	3/8" X 1-1/4" BOLT		40
05	0503011443	3/8" SPRING WASHER		40
06	0503010026	3/8" NUT		40
07	0571018897	SQUARE SHAFT 3/4 X 2090		02
08	0503030275	AGRICULTURAL BEARING		10
09	1902010685	18Z CONICAL GEAR		10
10	0551018055	22,65 X 60 SLEEVE		02
11	0501053788	3/4 SQUARE AXLE FASTENER	19	04
12	0511061759	22Z P12,70 FQ 3/4" GEAR		02
13	0503030303	SUPPORT WASHER		04
14	0501056271	GEARBOX CLOSED BEARING	20	02
15	0503011953	5/16" X 1" BOLT		04
16	0501010694	FLAT WASHER		04
17	0521011039	FLAT WASHER		04
18	0503011444	SPRING WASHER		04
19	0503010337	5/16" NUT		04

RIGHT SIDE FERTILIZER DISTRIBUTOR


0511051535

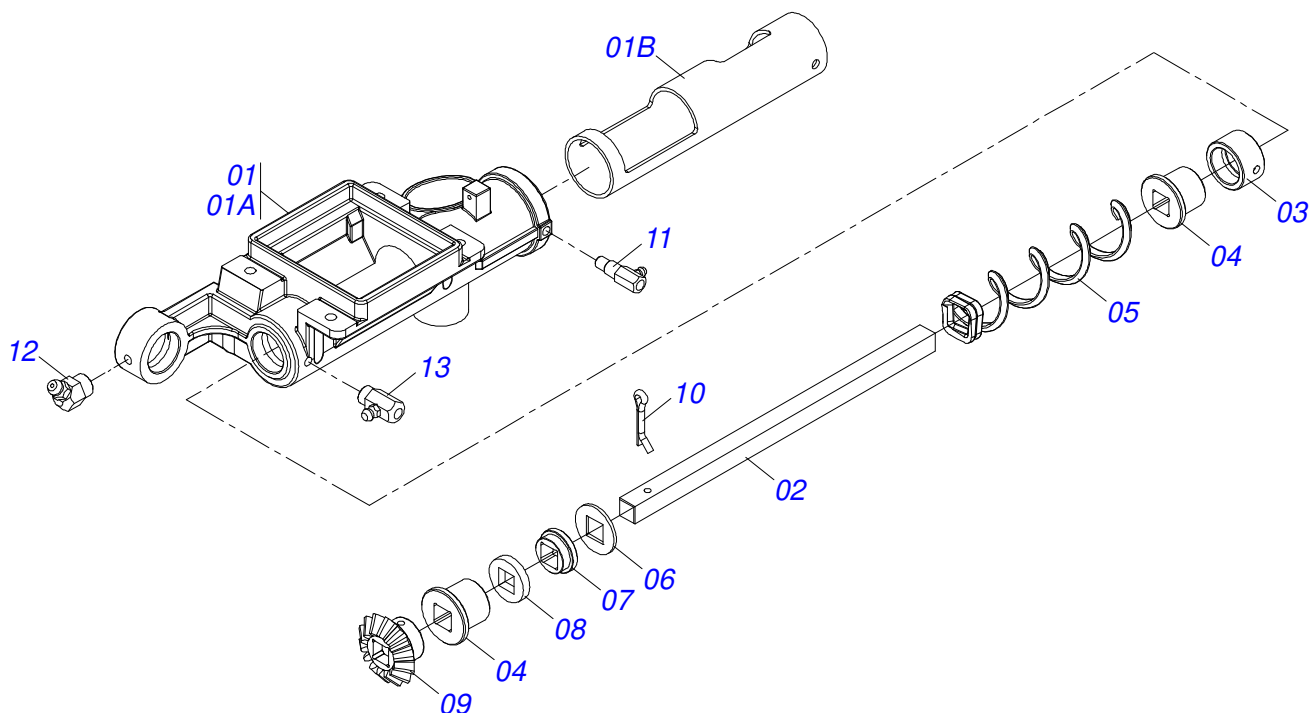


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

LEFT SIDE FERTILIZER DISTRIBUTOR


0511051558

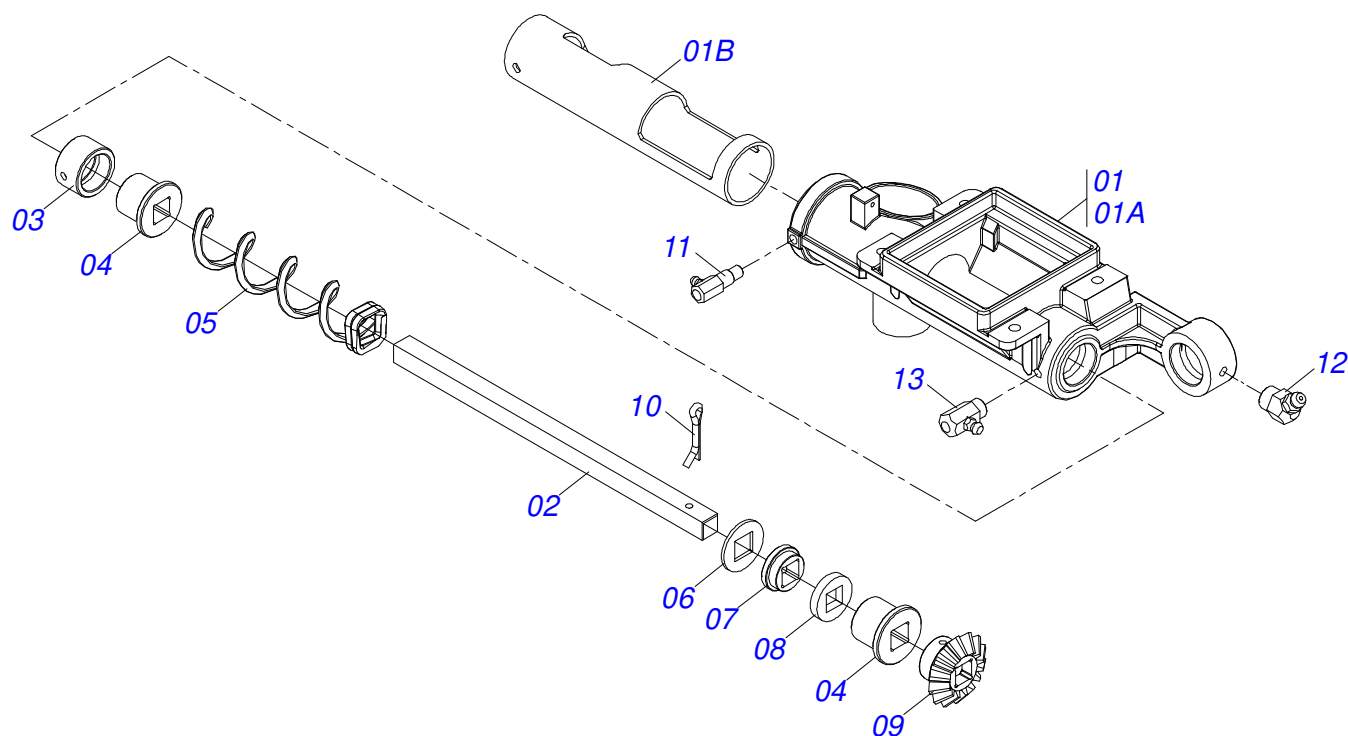


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

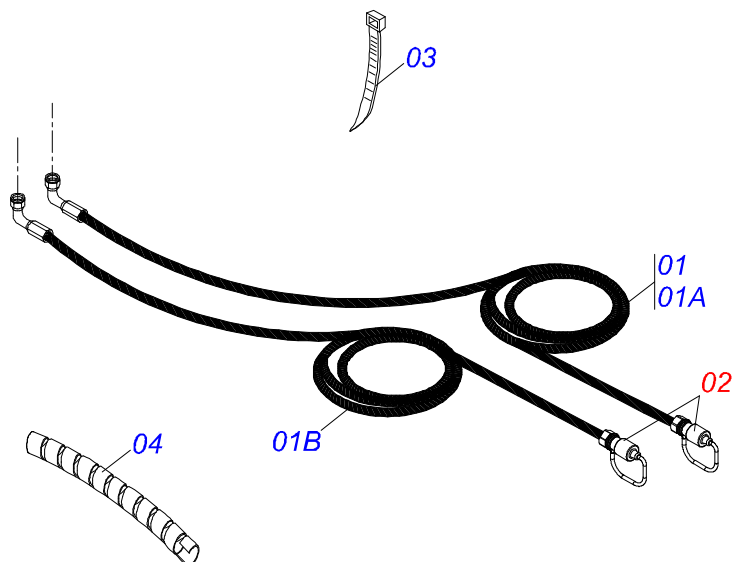

Item	Code	Description	See page	QT
01	0511057267	HOSE KIT HYDRAULIC		01
01A	0501080722	3/8 X 3300 TC-TM HOSE ASSY		01
01B	0501082023	HOSE 3/8 X 3600 TC-TM		01
02	0501053834	MALE QUICK COUPLER	41	02
03	0503013100	NYLON CLAMP		02
04	0571017774	SPRING PROTECTION QUICK HOSE		01

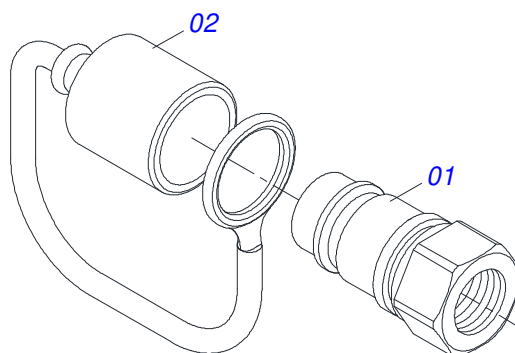

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

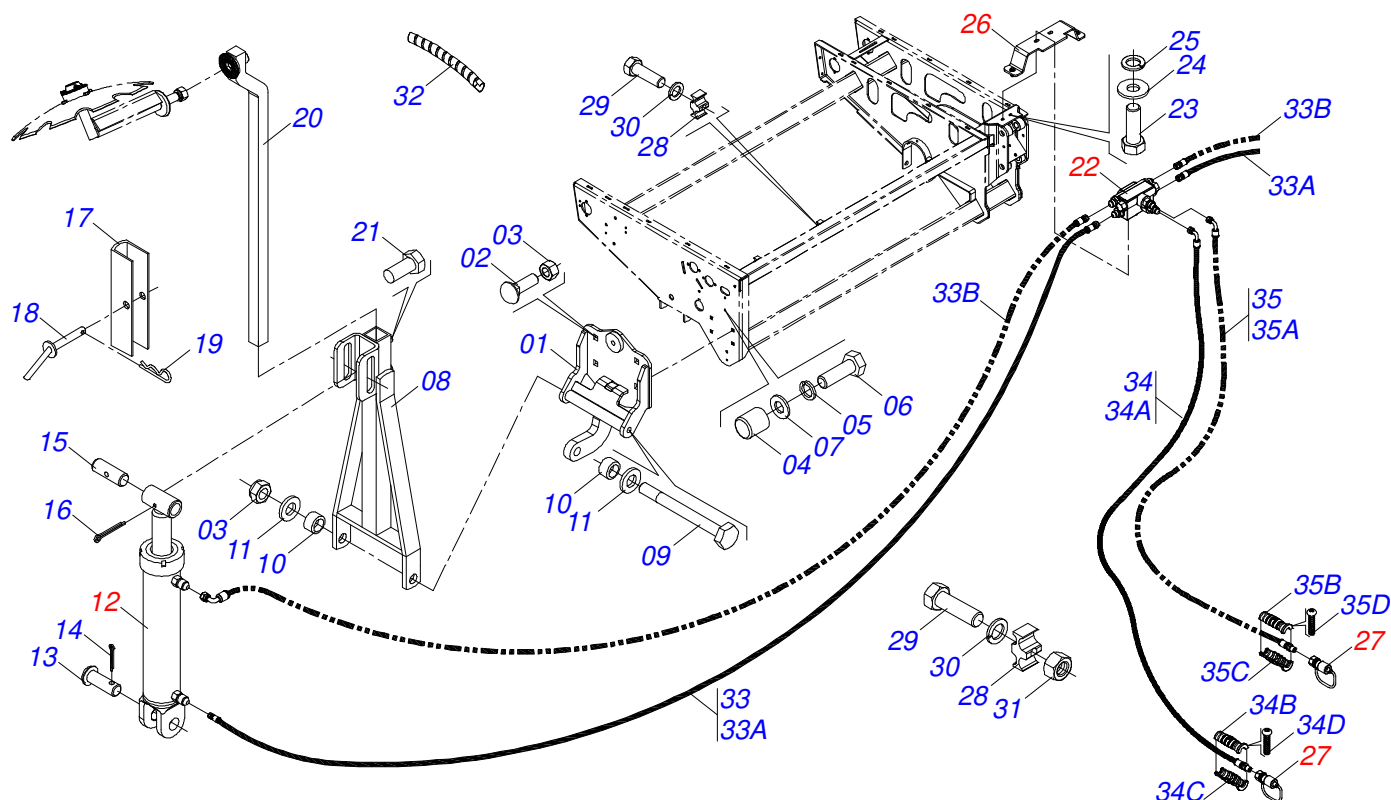


Item	Code	Description	See page	QT
01	0521066622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
03	0503012412	5/8 UNC SELF LOCKING NUT		04
04	0503011070	BEATER		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07	0551019213	FLAT WASHER		02
08	0501069470	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0501012140	FLAT WASHER		04
12	0511058449	HYDRAULIC CYLINDER	43	02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010523	1/4" X 2" COTTERPIN		02
17	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
18	0501068994	8,30 X 78 LOCK PIN		02
19	0503030168	HITCH PIN CLIP		02
20	0501069643	890 TURNBUCKLE		02
21	0503011854	5/8" X 1-1/4" BOLT		04
22	0501054649	HBM SEQUENTIAL VALVE	44	01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
24	0501010984	FLAT WASHER		02
25	0503010025	3/8" SPRING WASHER		02
26	0511058119	VALVE SUPPORT ASSEMBLY	45	01
27	0501053834	MALE QUICK COUPLER	41	02
28	0502012702	BODY SUPPORT CLAMP		08
29	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		08
30	0503010180	7/16" SPRING WASHER		08
31	0503010244	7/16" NUT		02


Item	Code	Description	See page	QT
32	0571014419	PLASTIC PROTECTION SPRING HOSE 3/4 X 700MM		04
33	0511057354	HOSE KIT MARKER HYDRAULIC 4395		01
33A	0501081728	HOSE 3/8 X 3100 TR-TR		02
33B	0501080515	HOSE 3/8 X 3400 TR-TC		02
34	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		01
34A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
34C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
34D	0503018952	PLASTIC BOLT		06
35	0521052850	3/8 X 4200 TC-TM PURPLE/BUE HOSE		01
35A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
35B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
35C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
35D	0503018952	PLASTIC BOLT		06

HYDRAULIC CYLINDER


0511058449

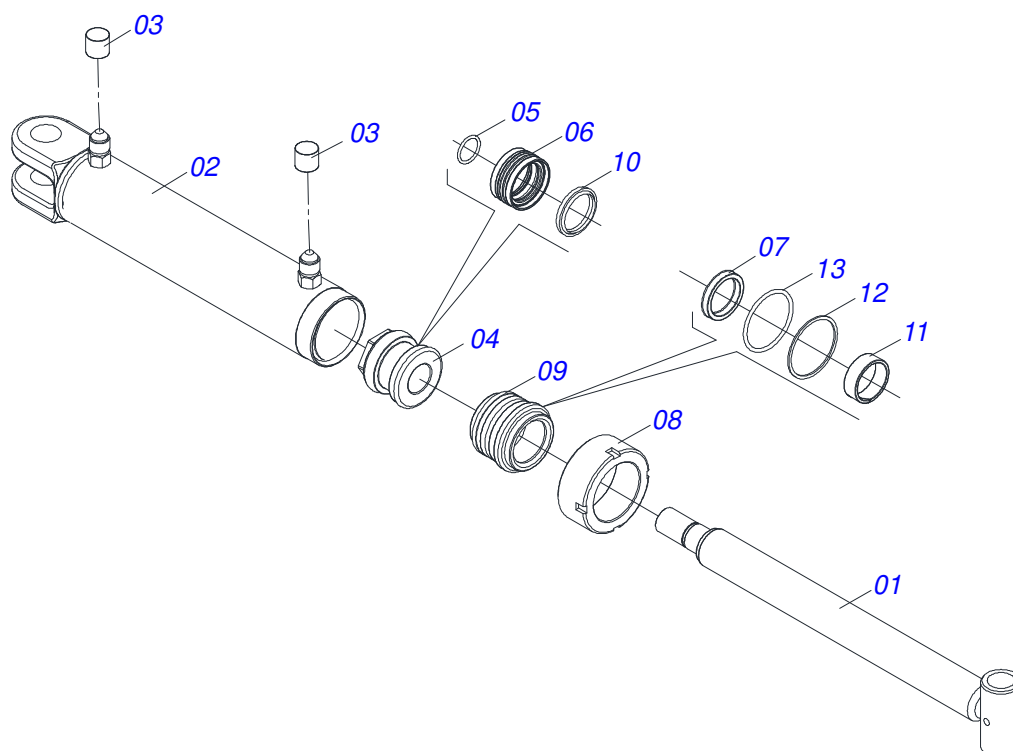

Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

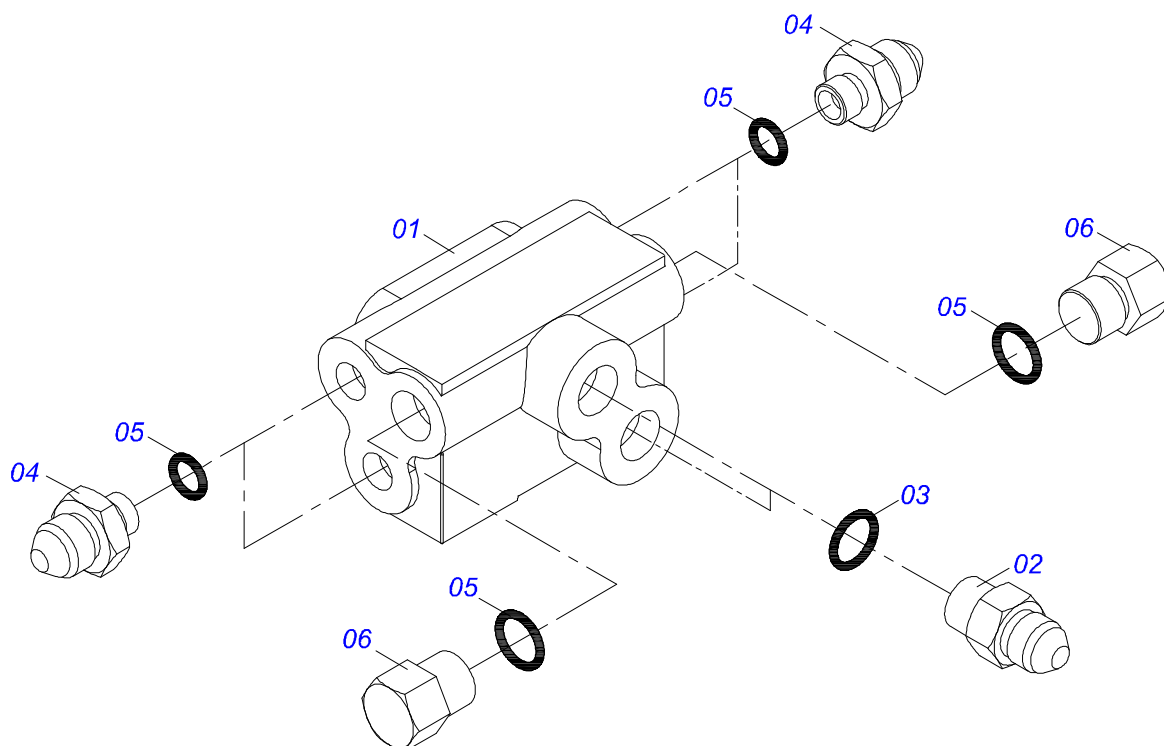


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

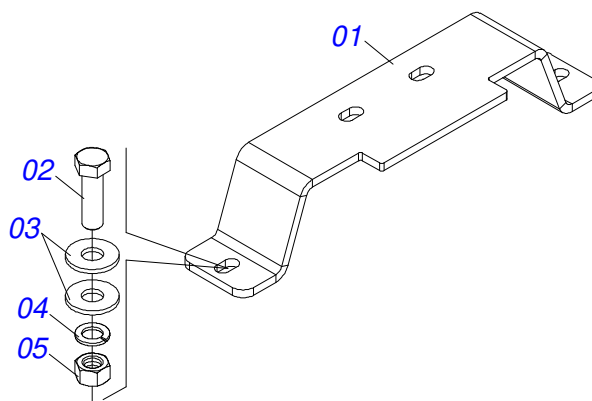

Item	Code	Description	See page	QT
01	0581010011	VALVE FIXING SUPPORT		01
02	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
03	0501010984	FLAT WASHER		04
04	0503010025	3/8" SPRING WASHER		02
05	0503010026	3/8" NUT		02

ROW MARKER DISK ASSEMBLY


0501050633

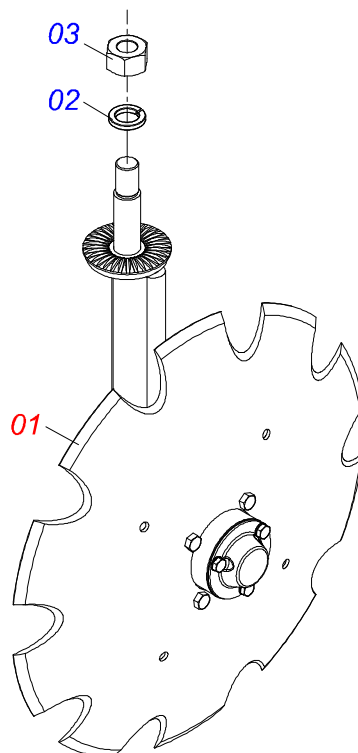


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC	47	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

ROW MARKER DISC

0511053904

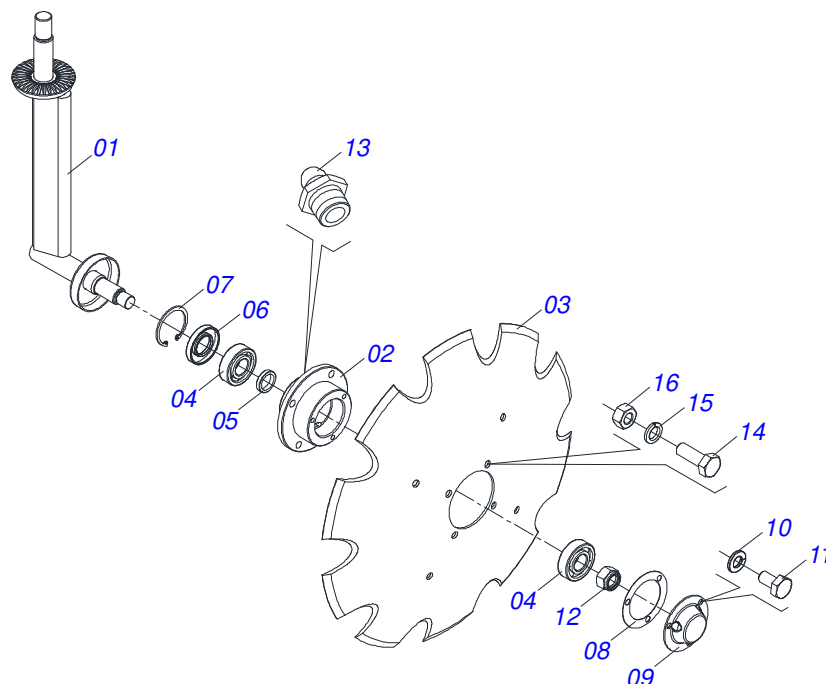


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

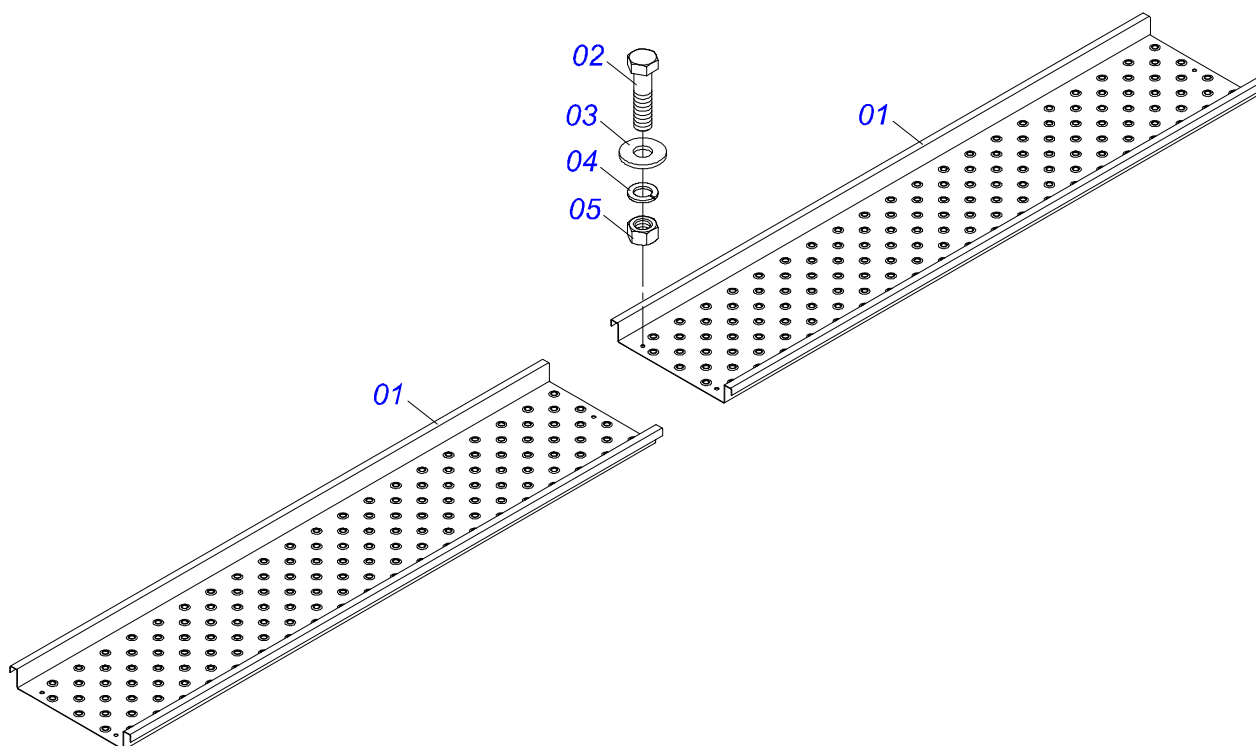

Item	Code	Description	See page	QT
01	0571018867	PLATFORM 4395		02
02	0503010237	3/8" X 1" BOLT		08
03	0501010984	FLAT WASHER		16
04	0503010025	3/8" SPRING WASHER		08
05	0503010026	3/8" NUT		08

LADDER ASSEMBLY


0511056536

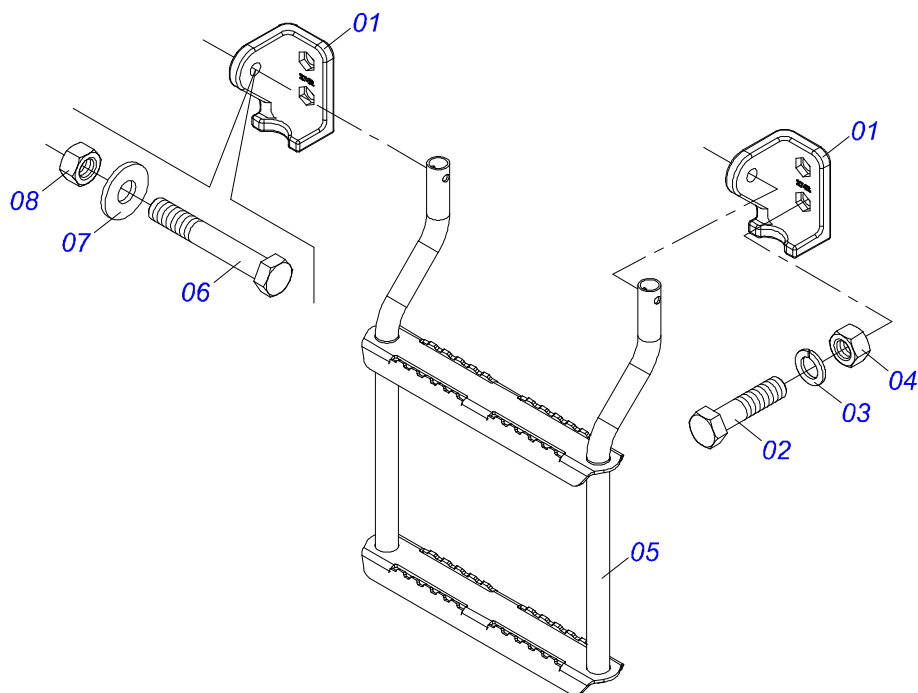


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8" SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	FLAT WASHER	02	
08	0503013357	3/8" SELF-ADJUSTING NUT	02	

JACK ASSEMBLY


0511054971

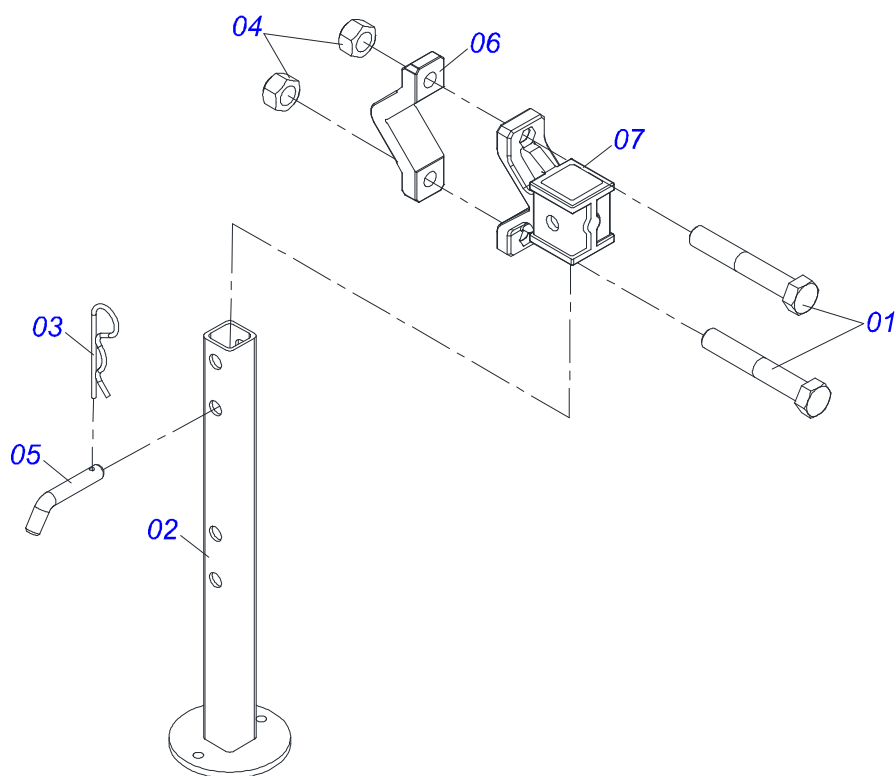


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HITCH PIN CLIP		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

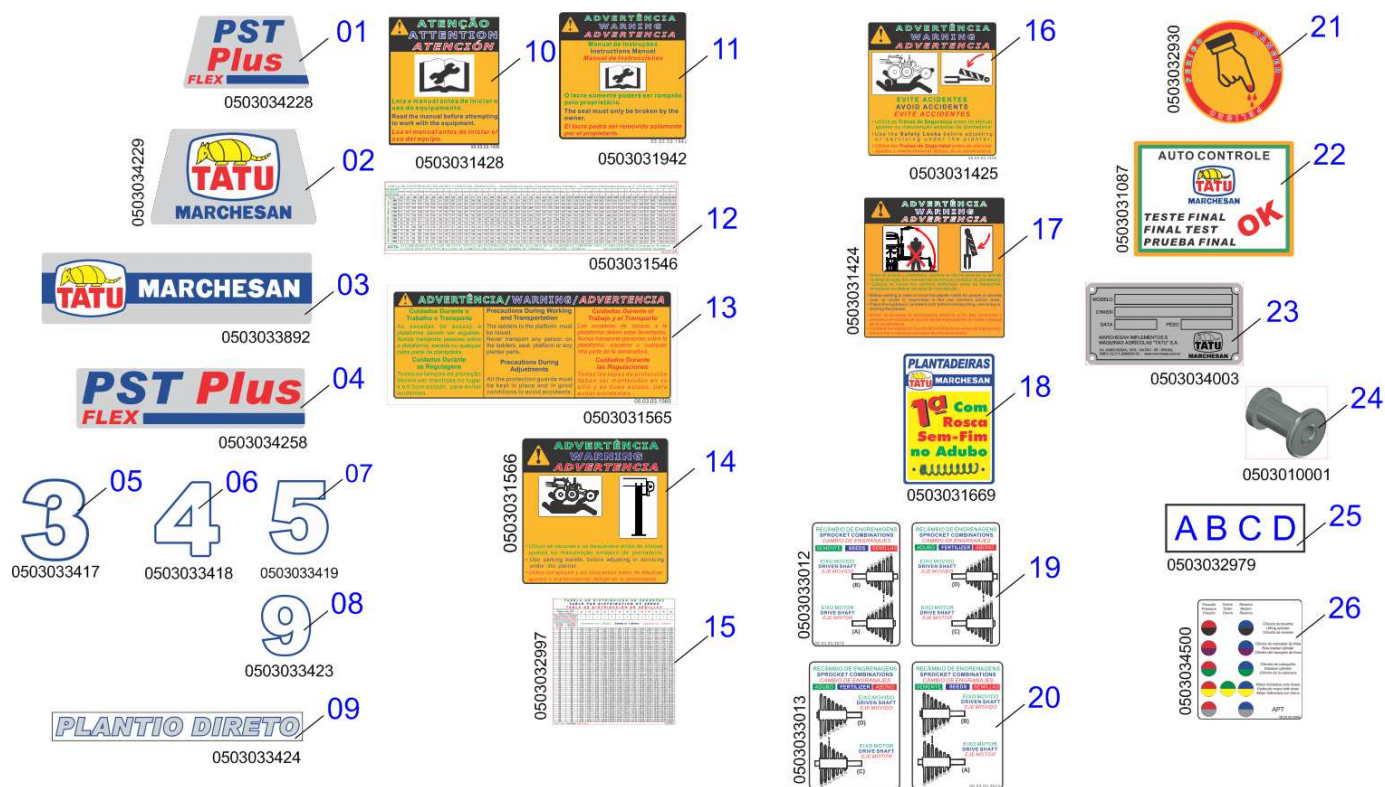


Item	Code	Description	See page	QT
01	0503034228	ADHESIVE LABEL PST FLEX PLUS LOWER (05 NOZZLES)		01
02	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 NOZZLES)		01
03	0503033892	ADHESIVE LABEL LOGO TATU BOX 190 X 720		01
04	0503034258	ADHESIVE LABEL		01
05	0503033417	ADHESIVE LABEL		02
06	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
07	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
08	0503033423	LABEL ADHESIVE NUMBER 9		02
09	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
10	0503031428	READ MANUAL DECAL		01
11	0503031942	ADHESIVE LABEL		01
12	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
13	0503031565	ADHESIVE LABEL CARE		02
14	0503031566	ADHESIVE LABEL		02
15	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
16	0503031425	ADHESIVE LABEL ATTENTION		02
17	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
18	0503031669	ADHESIVE LABEL		01
19	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
20	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
21	0503032930	ADHESIVE LABEL DANGER		05
22	0503031087	ADHESIVE LABEL		01
23	0503034003	SERIAL NUMBER TAG 61 X 118		01
24	0503010001	3.2 X 5.5 RIVET		04
25	0503032979	ADHESIVE LABEL LETTERS A B C D		02
26	0503034500	ADHESIVE LABEL		01

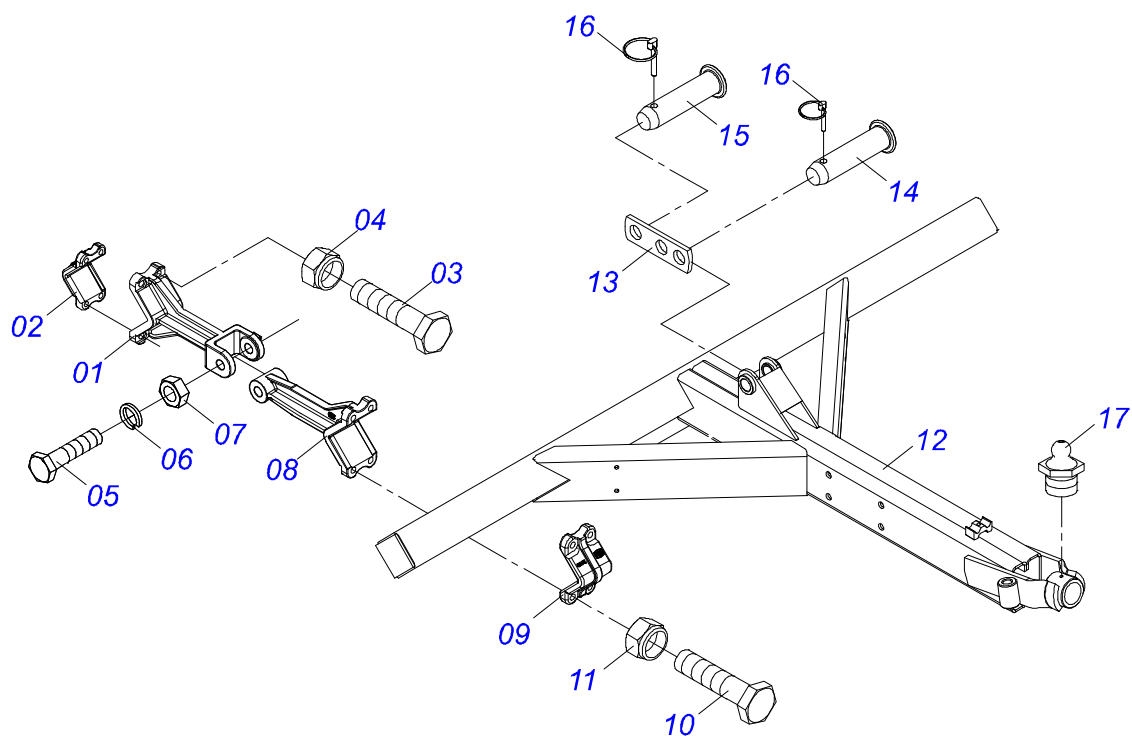


Item	Code	Description	See page	QT
01	0502012806	SUPPORT REAR FIXER DRAWBAR		04
02	0502012789	FIXER SUPPORT FERTILIZER ROW		04
03	0503017960	5/8" X 3-12" BOLT		16
04	0503010811	5/8" UNF SELF ADJUSTING NUT		16
05	0501010191	1" X 6" BOLT		04
06	0503010012	1" SPRING WASHER		04
07	0501010059	1.5/8 NUT		04
08	0502012805	SUPPORT FRONT FIXER DRAWBAR		04
09	0502012789	FIXER SUPPORT FERTILIZER ROW		04
10	0503017960	5/8" X 3-12" BOLT		16
11	0503010811	5/8" UNF SELF ADJUSTING NUT		16
12	0521065958	DRAWBAR		01
13	0561019087	DRAWBAR TRANSPORT LOCK		01
14	0551014099	COUPLING SHAFT 31,75 X 185		01
15	0521010544	1.2" X 4.9" COUPLING SHAFT		01
16	0503030085	LOCK PIN		02
17	0503010002	1800 GREASE FITTING		01

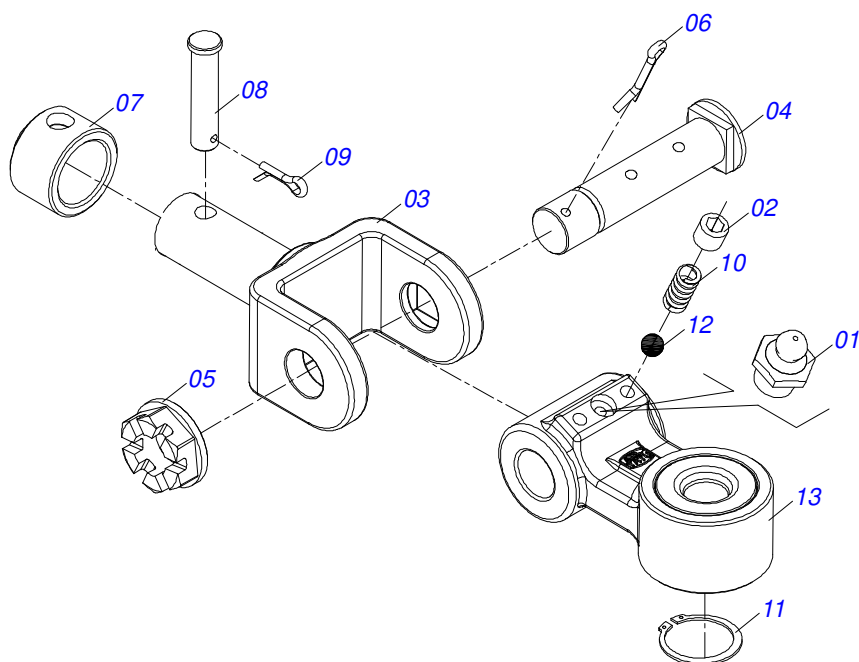


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0581019654	ASSY BOLT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2 COTTERPIN		01
10	0503033731	COMPRESSION SPRING LEFT		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

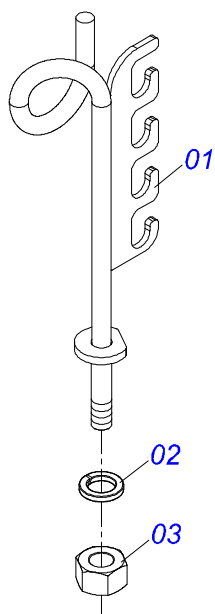


Item	Code	Description	See page	QT
01	0521065611	HOSE SUPPORT		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

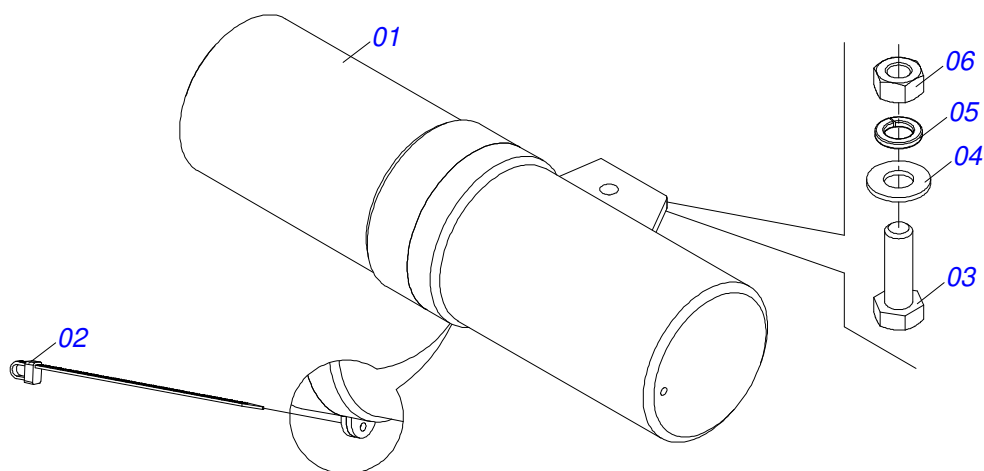


Item	Code	Description	See page	QT
01	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
02	0503010267	NYLON CLAMP		01
03	0503010363	5/16" X 1" BOLT		01
04	0501010694	FLAT WASHER		01
05	0503010179	LOCK WASHER		01
06	0503010337	5/16" NUT		01

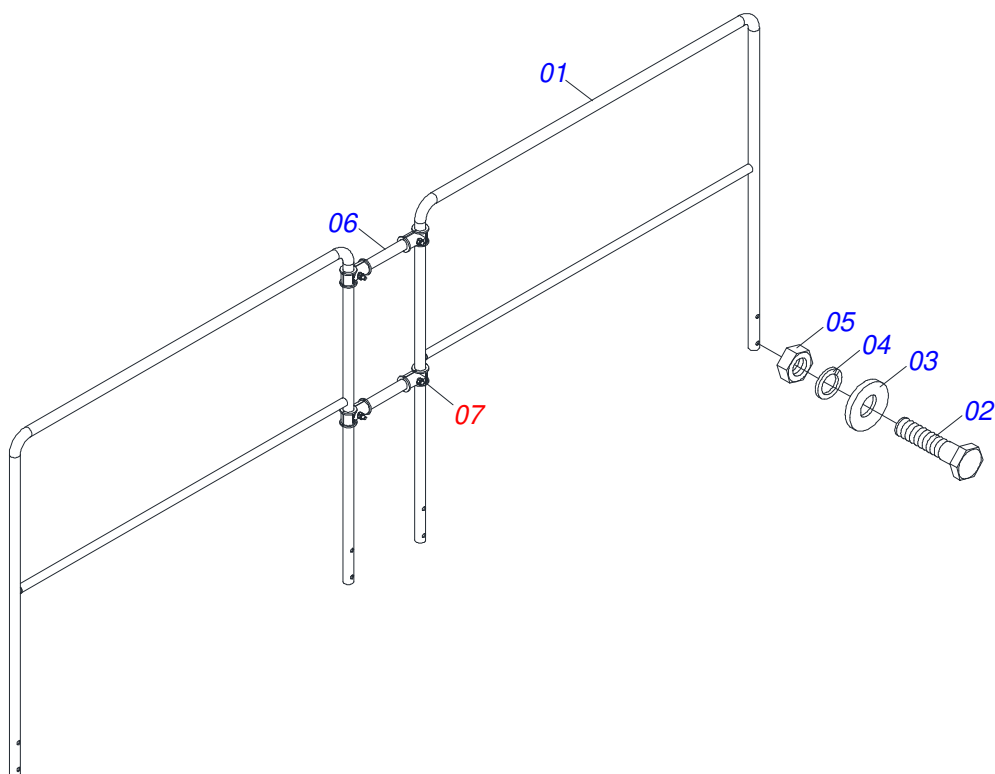


Item	Code	Description	See page	QT
01	0521065951	HANDRAIL 4395		02
02	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
03	0511017302	FLAT WASHER		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0581012916	INTERMEDIATE TUBE		02
07	0511059383	HANDRAIL INTERNAL FIXER		04

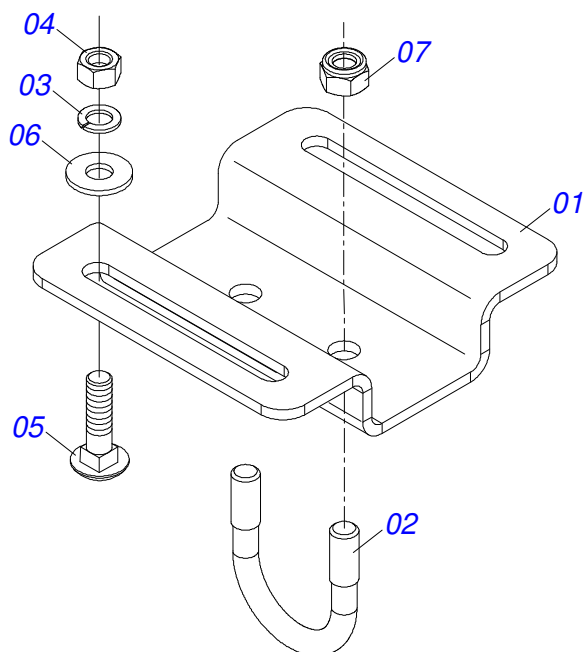


Item	Code	Description	See page	QT
01	0581011989	SIDE BODY FIXER PLATFORM		01
02	0551019884	45 X 50 X 3/8 FASTENER		01
03	0503010025	3/8" SPRING WASHER		02
04	0503010026	3/8" NUT		02
05	0501011643	3/8 X 1"BOLT		02
06	0501010984	FLAT WASHER		02
07	0503013357	3/8" SELF-ADJUSTING NUT		02

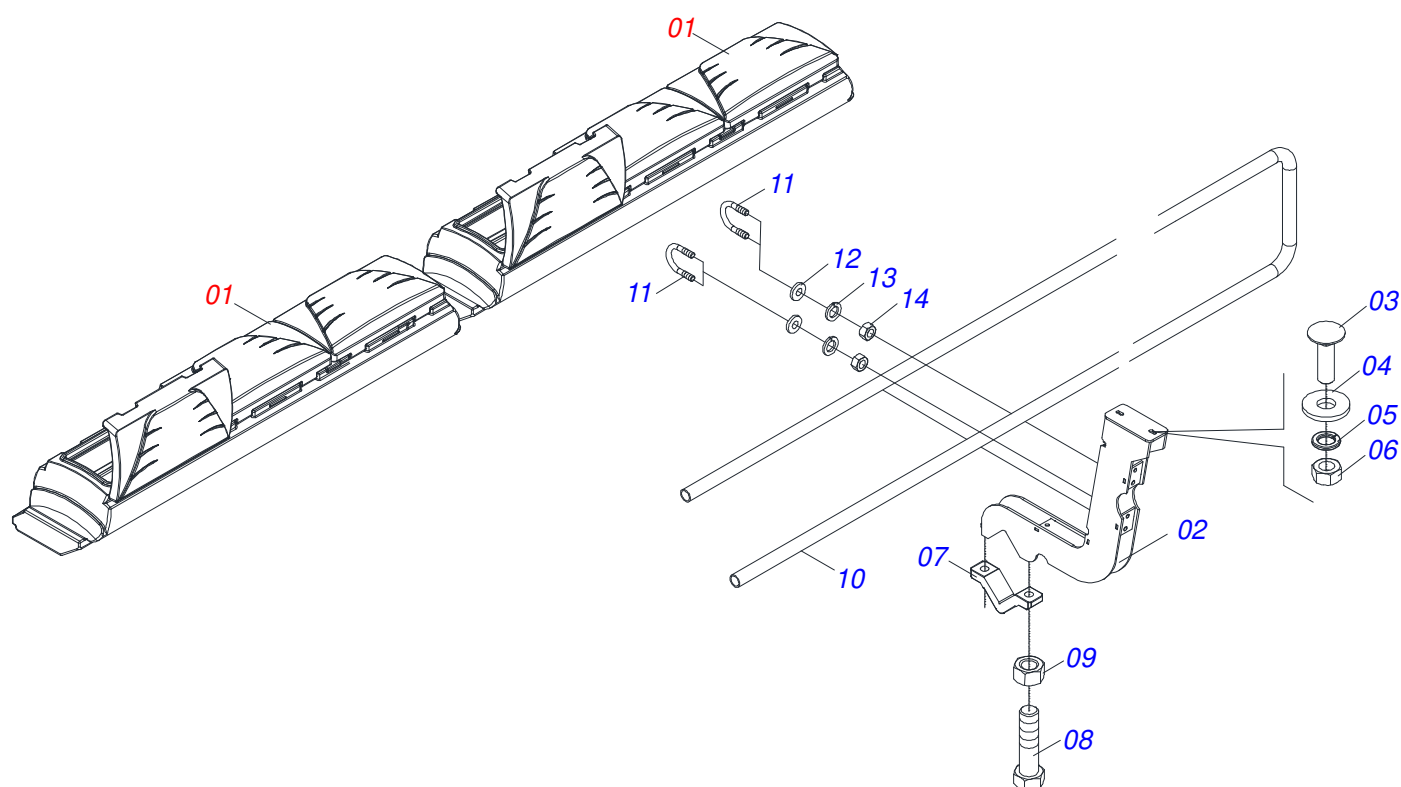


Item	Code	Description	See page	QT
01	0511058100	2 BOXES WITH 9 CONDUCTORS ASSEMBLY	59	01
02	0521066102	TOWER SUPPORT HOPPER		04
03	0501010942	3/8" X 1-1/4" BOLT		08
04	0501010984	FLAT WASHER		08
05	0503010025	3/8" SPRING WASHER		08
06	0503010026	3/8" NUT		08
07	0502010175	HITCH CLAMP		04
08	0501011543	5/8" X 4" BOLT		08
09	0503012412	5/8 UNC SELF LOCKING NUT		08
10	0571019394	PROTECTOR		02
11	0551019884	45 X 50 X 3/8 FASTENER		08
12	0501010453	FLAT WASHER		16
13	0503010025	3/8" SPRING WASHER		16
14	0503010026	3/8" NUT		16

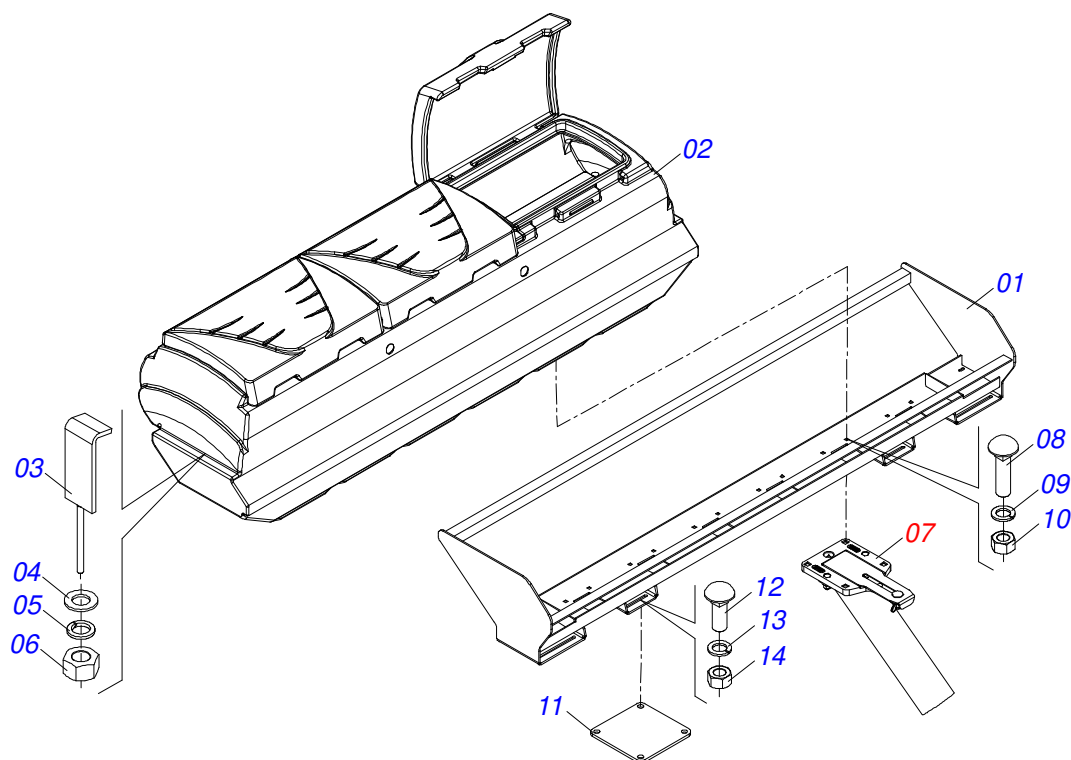


Item	Code	Description	See page	QT
01	0521064813	SINGLE SEED BOX SUPPORT - 06 NOZZLES	02	
02	0503061899	REAR BEAN FERTILIZER ASSY	02	
03	0521063401	SEED BOX ONLY FIXING LOCK	04	
04	0501010984	FLAT WASHER	04	
05	0503010025	3/8" SPRING WASHER	04	
06	0503010026	3/8" NUT	04	
07	0511057690	3" ARTICULATED SEED CONDUCTOR	09	
08	0501010942	3/8" X 1-1/4" BOLT	36	
09	0503010025	3/8" SPRING WASHER	36	
10	0503010026	3/8" NUT	36	
11	0571015773	SUPPORT SEED	03	
12	0501011643	3/8 X 1" BOLT	12	
13	0503010025	3/8" SPRING WASHER	12	
14	0503010026	3/8" NUT	12	

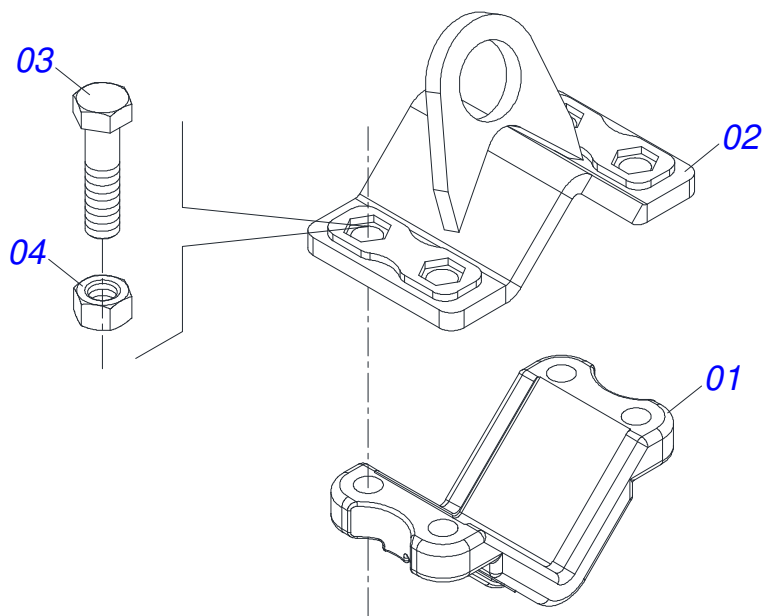


Item	Code	Description	See page	QT
01	0502012789	FIXER SUPPORT FERTILIZER ROW		01
02	0521067033	FRAME LIFTING SUPPORT		01
03	0503017960	5/8" X 3-12" BOLT		04
04	0503010811	5/8" UNF SELF ADJUSTING NUT		04

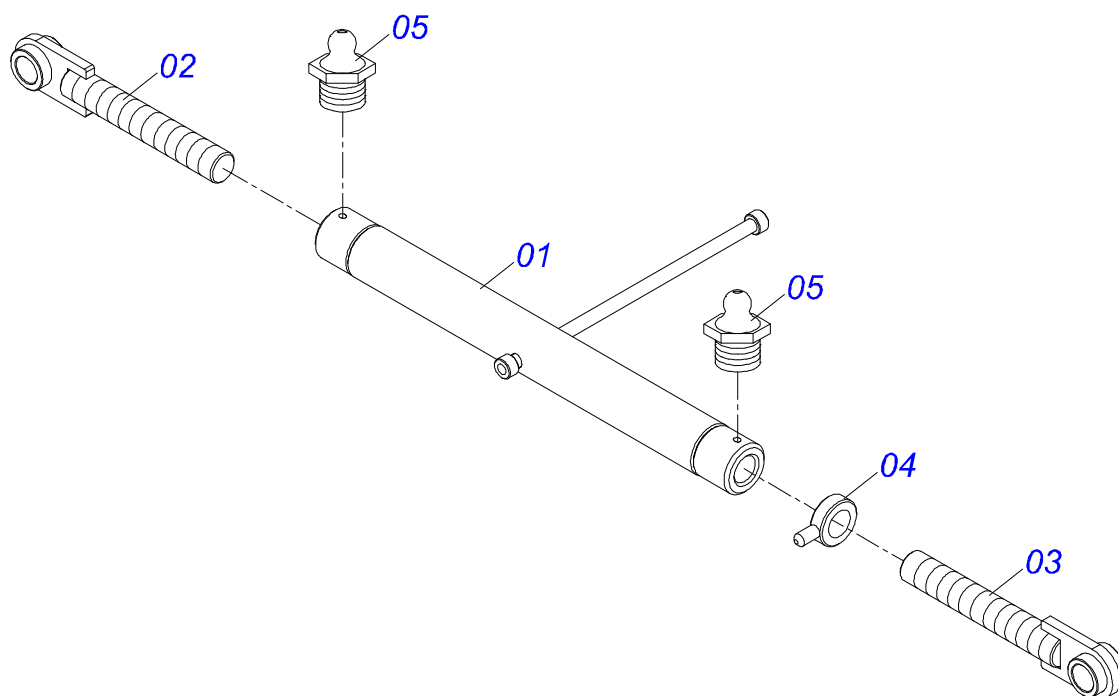

Item	Code	Description	See page	QT
01	0501069529	653 TURNBUCKLE		01
02	0521065959	JACK R.1.1/2 UNC RIGHT X 240		01
03	0521065960	JACK R.1.1/2 UNC LEFT X 240		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

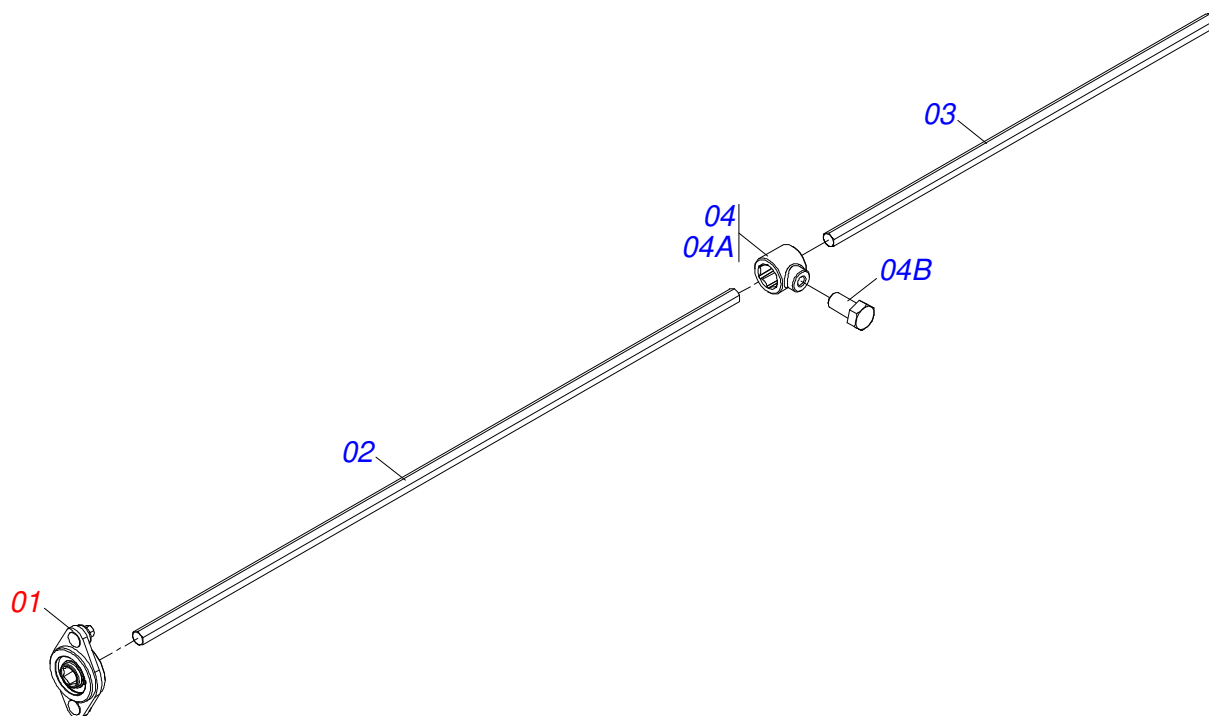

Item	Code	Description	See page	3495	4395	4845
01	0521055338	ROW SEED BEARING		04	04	04
02	0571018912	3/4 X 1630 AXLE HEX		01	00	00
02.	0571018916	3/4 X 2080 AXLE HEX		00	01	00
02..	0571018918	3/4 X 2305 AXLE HEX		00	00	01
03	0571018913	3/4 X 1815 AXLE HEX		01	00	00
03.	0571018917	3/4 X 2265 AXLE HEX		00	01	00
03...	0571018919	3/4 X 2490 AXLE HEX		00	00	01
04	0511054314	TRANSMISSION AXLE LOCK SLEEVE		22	22	22
04A	0502012699	TRANSMISSION BOX LOCK SLEEVE		01	01	01
04B	0503010256	3/8" X 3/4" BOLT		01	01	01

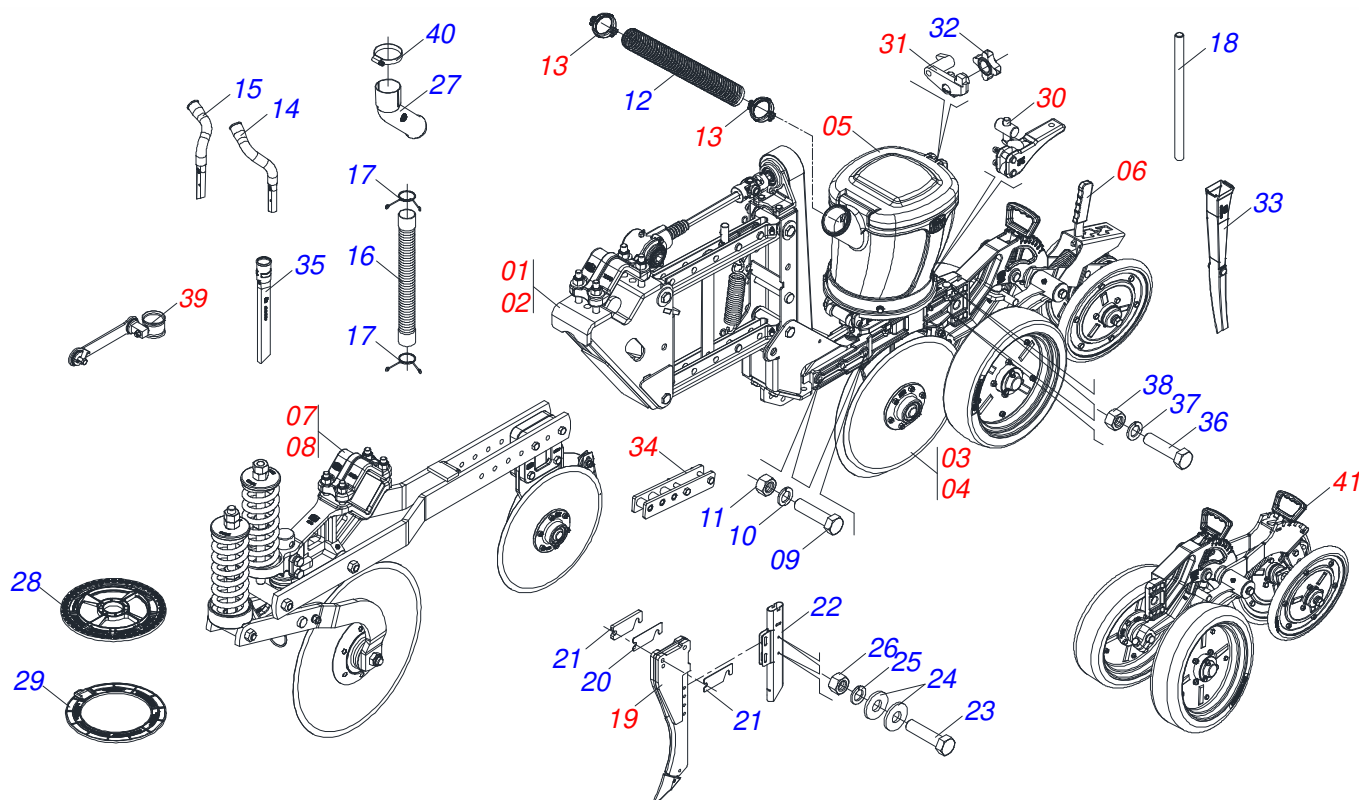


Item	Code	Description	See page	QT
01	0511057277	FRONT SHORT SEED ROW WITH RIGHT TRANSMISSION	64	01
02	0511057278	FRONT LONG SEED ROW WITH RIGHT TRANSMISSION	65	01
03	0511056621	RIGHT REAR SEED ROW	71	01
04	0511056622	LEFT REAR SEED ROW	72	01
05	0511059023	SEED SYSTEM ASSY	79	01
06	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	82	01
07	0511058639	SHORT FERTILIZER ROW WITH DDD/DC20	92	01
08	0511058640	LONG FERTILIZER ROW WITH DDD/DC20	93	01
09	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2" NUT		01
12	0571011730	SEED CONDUCTOR 3" X 1500		01
13	0521050525	FIXER FERTILIZER CONDUCTOR	97	01
14	0503030391	RIGHT FERTILIZER NOZZLE		01
15	0503030392	LEFT FERTILIZER NOZZLE		01
16	0503031145	2" X 2" X 20" HOSE		01
17	0503031076	2" HOSE CLAMP		01
18	0531013600	PRESS ADJUSTMENT LEVER		01
19	0501110804	SCARIFIER ROD WITH POINT		01
20	0511017969	0.1" SPACING PLATE		01
21	0511018662	SPACING PLATE		01
22	0521069127	BOTTOM NOZZLE FERTILIZER		01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
24	0501010984	FLAT WASHER		01
25	0503010025	3/8" SPRING WASHER		01
26	0503010026	3/8" NUT		01
27	0503031050	CURVED CONDUCTOR		01
28	0503016204	CORN DISK 12 ORANGE		01
28.	0503016218	DISC OF SOYBEAN		01
29	0503016214	RING CORN (APOLLO740)		01

ASSY FERTILIZER/SEED ROW

0909098984


Item	Code	Description	See page	QT
29.	0503016220	RING TO SOYBEANS (APOLLO 745)		01
29..	0503016221	RING TO SOYBEANS (APOLLO 571)		01
30	0511052024	FAST CLOSING SET	98	01
31	0501050120	LARGER WALKING BEAM ASSY	99	01
32	0503030558	PULLEY 4Z CORN PLASTIC		01
33	0503033672	NOZZLE WITHOUT TITANIUM		01
34	0521057957	FIXED ROD EXTENSION WITH FIXATION	100	01
35	0503030520	SEED SOCKET		01
36	0503010905	1/2" X 2-1/4" BOLT		01
37	0503010019	1/2" SPRING WASHER		01
38	0503010060	1/2" NUT		01
39	0521050560	ASSY HOSE SUPPORT 3"	101	01
40	0503010246	CLAMP		01
41	0521056317	DEPTH CONTROL WITH LEVER ANGLE 84 REGULATOR AXIS CPERA		01

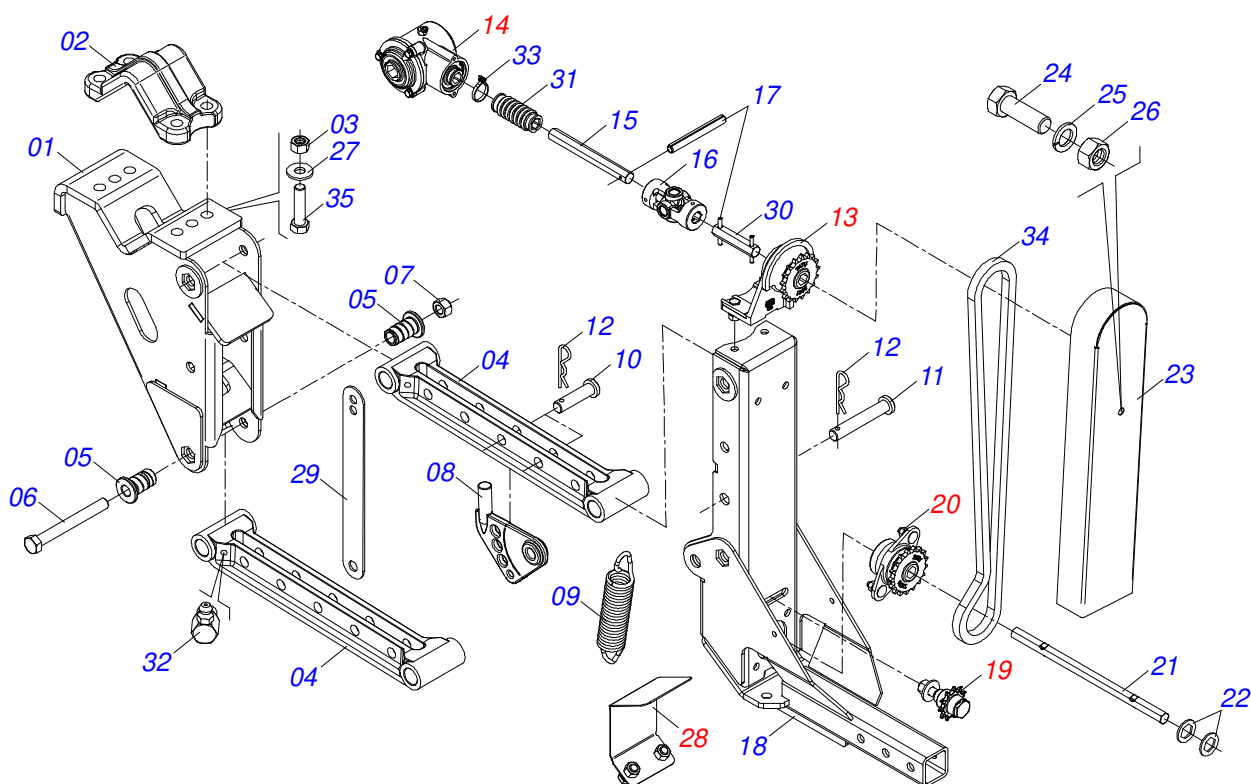

Item	Code	Description	See page	QT
01	0521065941	FRAME SEED ROW FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0502012804	PIVOT ARM SEED ROW		02
05	0571018882	SEED ROW ARM SLEEVE		08
06	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		04
07	0503012412	5/8 UNC SELF LOCKING NUT		04
08	0502012812	SEED ROW ADJUSTMENT LEVER ASSY		01
09	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
10	0571018883	PIN FIXER SPRING		03
11	0571018884	LOCK PIN ROW ARTICULAT		01
12	0503030168	HITCH PIN CLIP		04
13	0511058766	BEARING	66	01
14	0511057159	TRANSMISSION BOX SEED ROW	70	01
15	0571012492	5/8 X 330 AXLE HEX		01
16	0501056296	UNIVERSAL JOINT		01
17	0503011855	0.2" X 1.8" SPRING PIN		03
18	0521065942	FRAME REAR SHORT ROW SEED		01
19	0511057269	CHAIN TENSIONER	67	01
20	0511059872	BEARING	68	01
21	0581010239	SEED ROW AXLE TRANSMISSION		01
22	0521011859	FLAT WASHER		02
23	0581011694	PROTECTION REAR COVER SEED ROW		01
24	0503010765	3/8" X 3" BOLT		01
25	0503010025	3/8" SPRING WASHER		01
26	0503010026	3/8" NUT		01
27	0501012140	FLAT WASHER		08
28	0511058512	PROTECTION COVER	69	01
29	0581011430	DRAWBAR ASSY		01
30	0581010976	5/8" HEX AXLE		01
31	0503032984	HOOD HEX AXLE ROW		01




Item	Code	Description	See page	QT
32	0503010004	1890 GREASE FITTING		04
33	0503013100	NYLON CLAMP		01
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		01
35	0503017857	BOLT 5/8 UNF 4		04

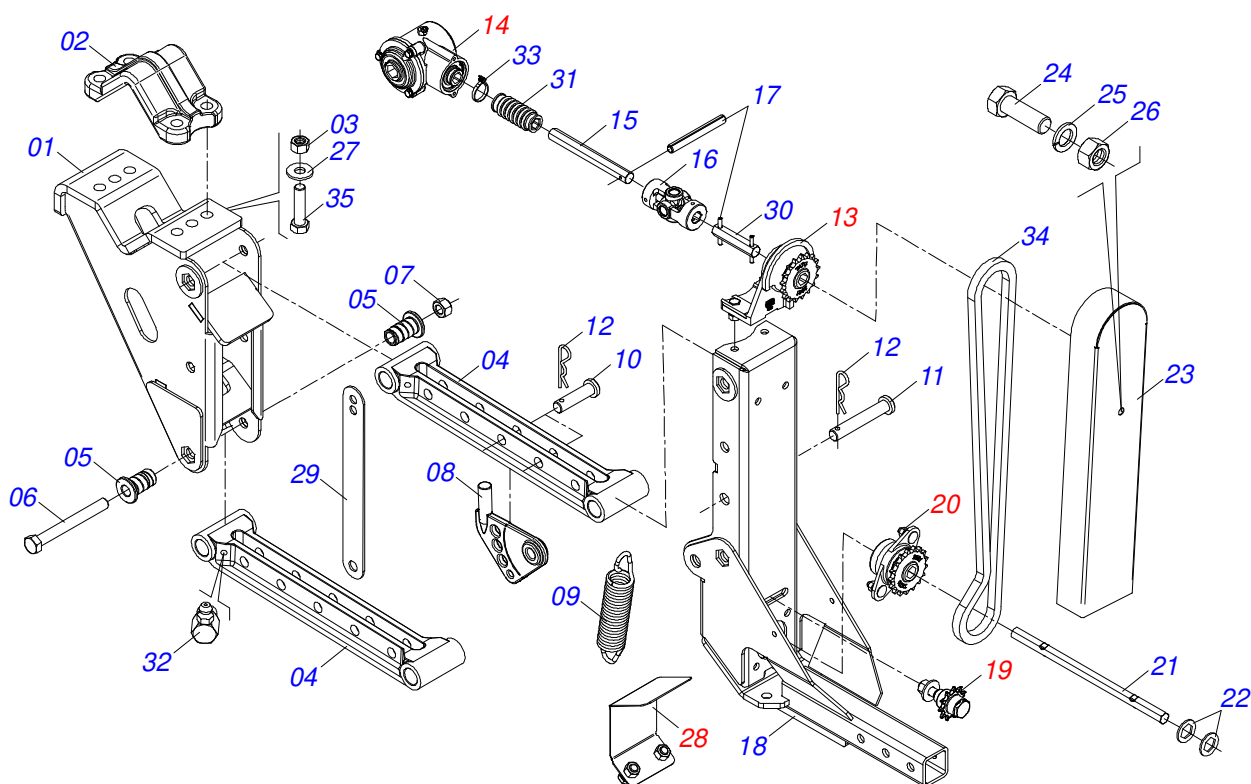


Item	Code	Description	See page	QT
01	0521065941	FRAME SEED ROW FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0502012804	PIVOT ARM SEED ROW		02
05	0571018882	SEED ROW ARM SLEEVE		08
06	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		04
07	0503012412	5/8 UNC SELF LOCKING NUT		04
08	0502012812	SEED ROW ADJUSTMENT LEVER ASSY		01
09	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
10	0571018883	PIN FIXER SPRING		03
11	0571018884	LOCK PIN ROW ARTICULAT		01
12	0503030168	HITCH PIN CLIP		04
13	0511058766	BEARING	66	01
14	0511057159	TRANSMISSION BOX SEED ROW	70	01
15	0571012492	5/8 X 330 AXLE HEX		01
16	0501056296	UNIVERSAL JOINT		01
17	0503011855	0.2" X 1.8" SPRING PIN		03
18	0521065943	REAR FRAME LONG ROW SEED		01
19	0511057269	CHAIN TENSIONER	67	01
20	0511059872	BEARING	68	01
21	0581010240	SEED ROW AXLE TRANSMISSION		01
22	0521011859	FLAT WASHER		02
23	0581011694	PROTECTION REAR COVER SEED ROW		01
24	0503010765	3/8" X 3" BOLT		01
25	0503010025	3/8" SPRING WASHER		01
26	0503010026	3/8" NUT		01
27	0501012140	FLAT WASHER		08
28	0511058512	PROTECTION COVER	69	01
29	0581011430	DRAWBAR ASSY		01
30	0581010976	5/8" HEX AXLE		01
31	0503032984	HOOD HEX AXLE ROW		01



Item	Code	Description	See page	QT
32	0503010004	1890 GREASE FITTING		04
33	0503013100	NYLON CLAMP		01
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		01
35	0503017857	BOLT 5/8 UNF 4		04

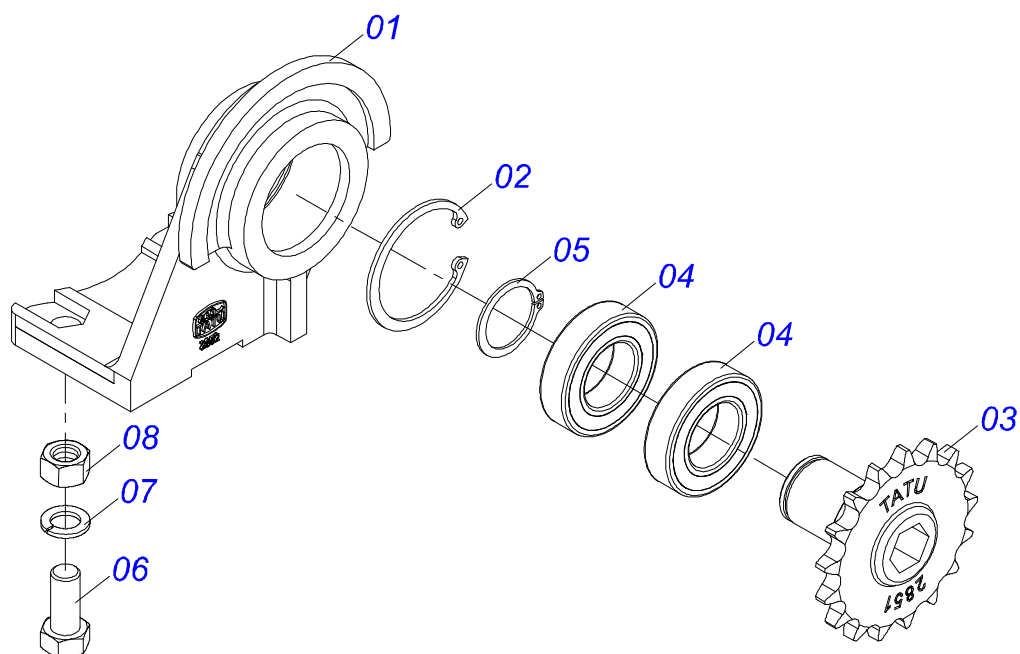


Item	Code	Description	See page	QT
01	0502012852	ROW SEED UPPER BEARING		01
02	0503011105	SEAL RING		01
03	0502012851	17Z GEAR WITH HEX HOLE		01
04	0503011410	ROLLER BEARING		02
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503010237	3/8" X 1" BOLT		02
07	0503010025	3/8" SPRING WASHER		02
08	0503010026	3/8" NUT		02

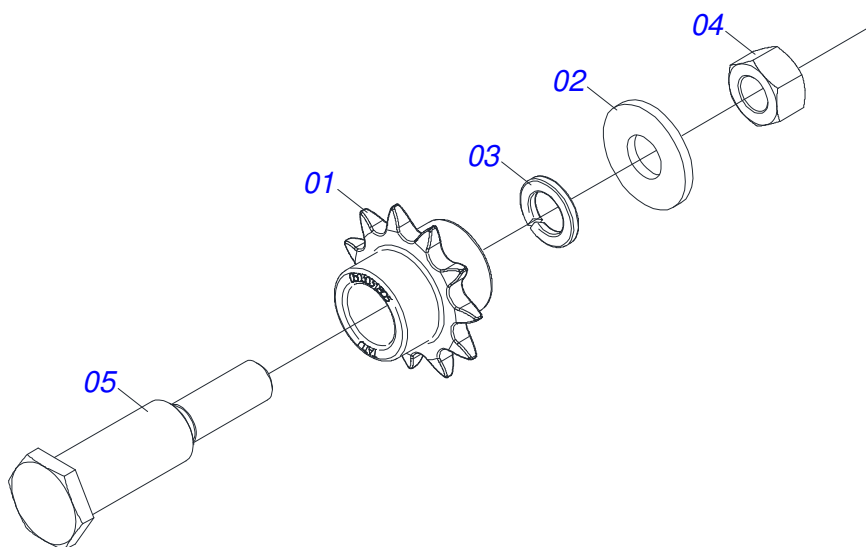


Item	Code	Description	See page	QT
01	0503031805	11Z 1/2" GEAR		01
02	0511017302	FLAT WASHER		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0531019479	AXLE CHAIN GEAR		01

BEARING


0511059872

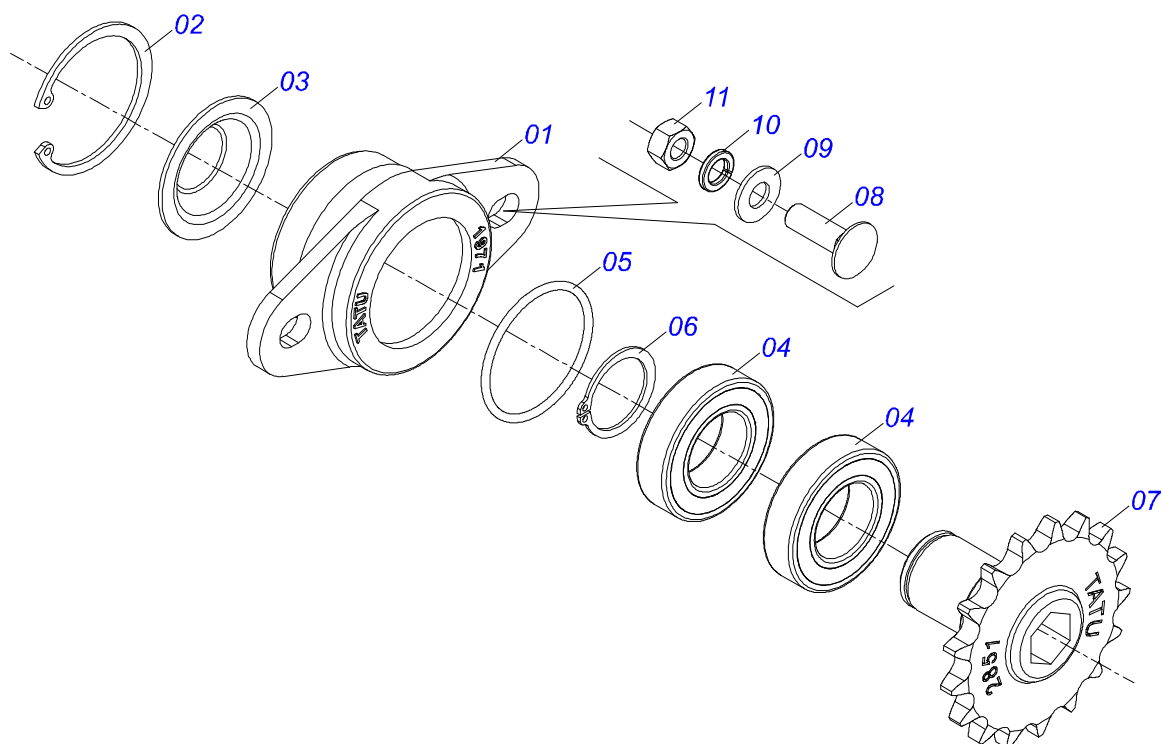


Item	Code	Description	See page	QT
01	0581012948	HOUSING BEARING		01
02	0503011105	SEAL RING		01
03	0581012949	BEARING COVER		01
04	0503011410	ROLLER BEARING		02
05	0503018045	2-130 (AGEL) O'RING		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		01
07	0502012851	17Z GEAR WITH HEX HOLE		01
08	0503011953	5/16" X 1" BOLT		02
09	0501010694	FLAT WASHER		02
10	0503010179	LOCK WASHER		02
11	0503010337	5/16" NUT		02

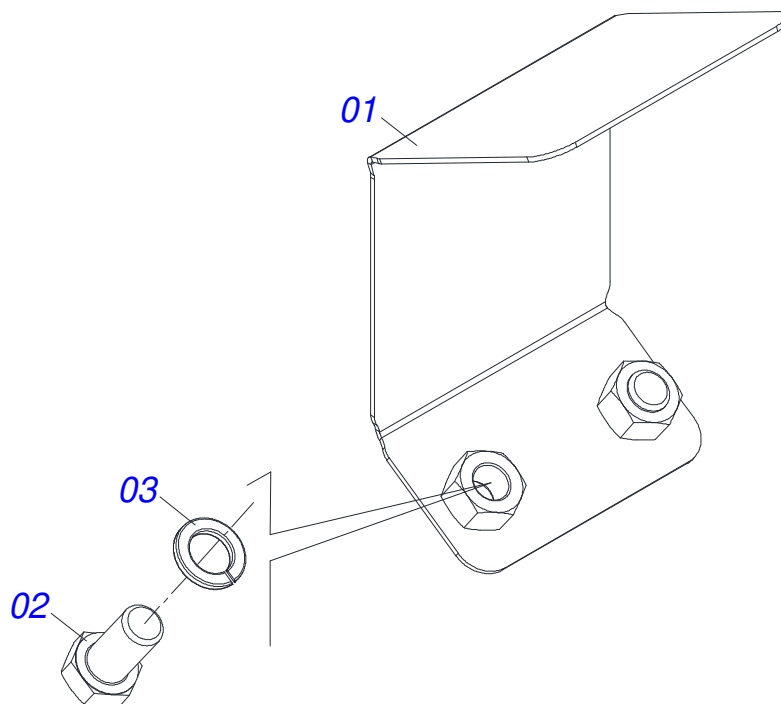


Item	Code	Description	See page	QT
01	0521066693	CAP BEARING		01
02	0503010834	1/2 X 1 BOLT		02
03	0503010019	1/2" SPRING WASHER		02

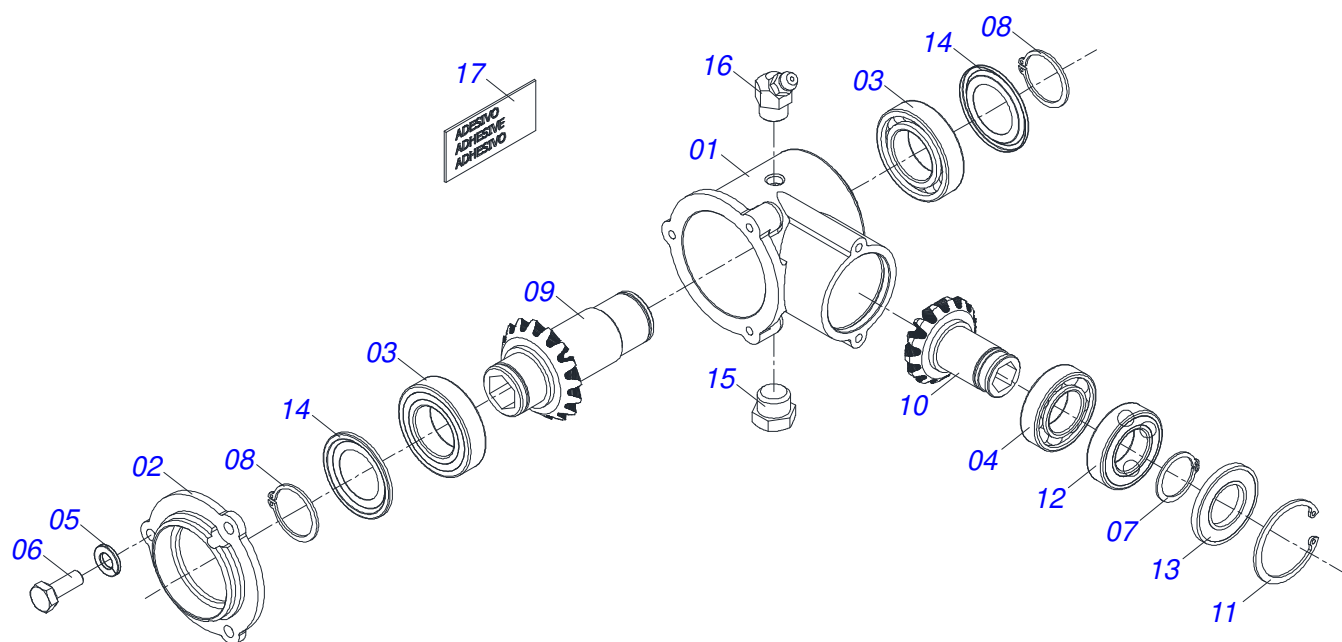


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01
17	0503035316	LUBRICATED POINTS ADHESIVE LABEL		01

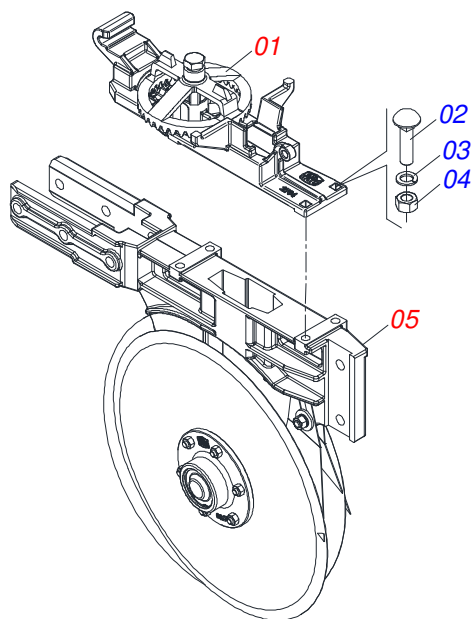


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	73	01

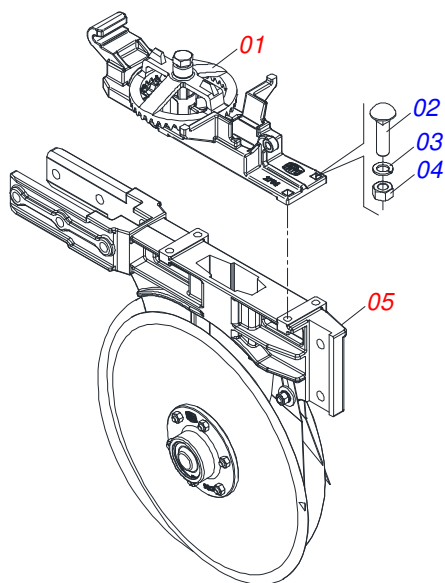


Item	Code	Description	See page	QT
01	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0511056586	15 X 15 SEED DDD LEFT	74	01

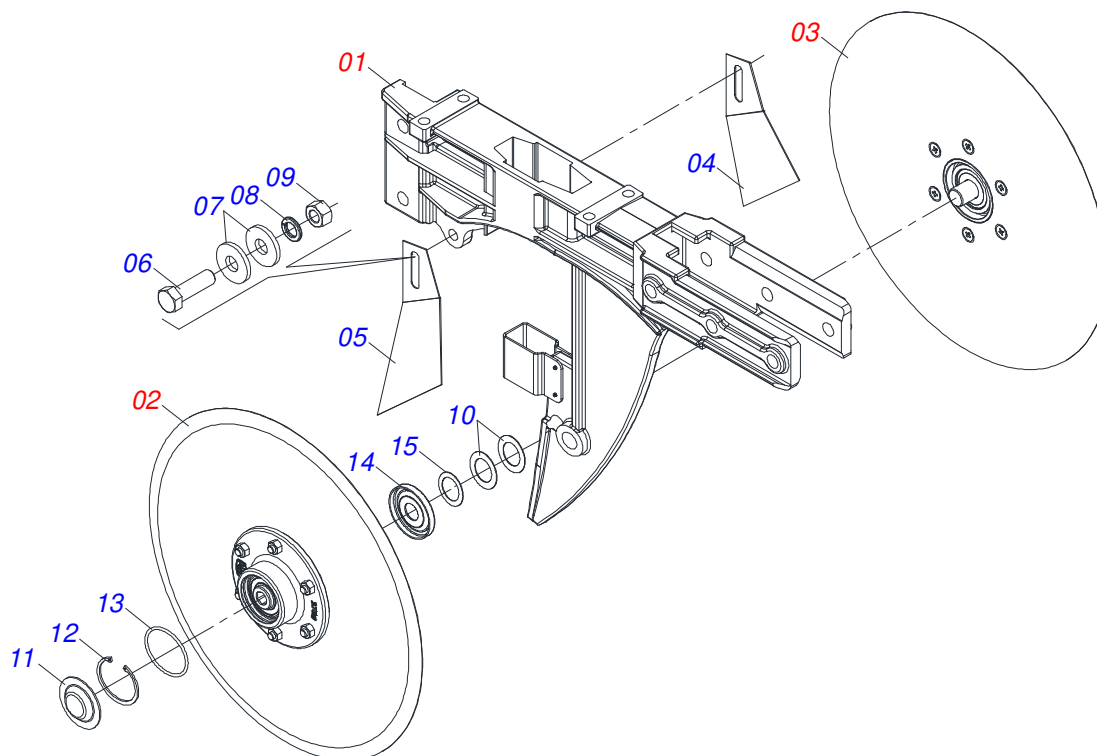


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT	75	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	77	01
03	0511053172	LEFT LOW CUBE WITH DISC 15	78	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511815098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O'RING		02
14	0511011927	DUST CLOAK		02
15	0591014250	19 X 26 X 0,50 FLAT WASHER		02

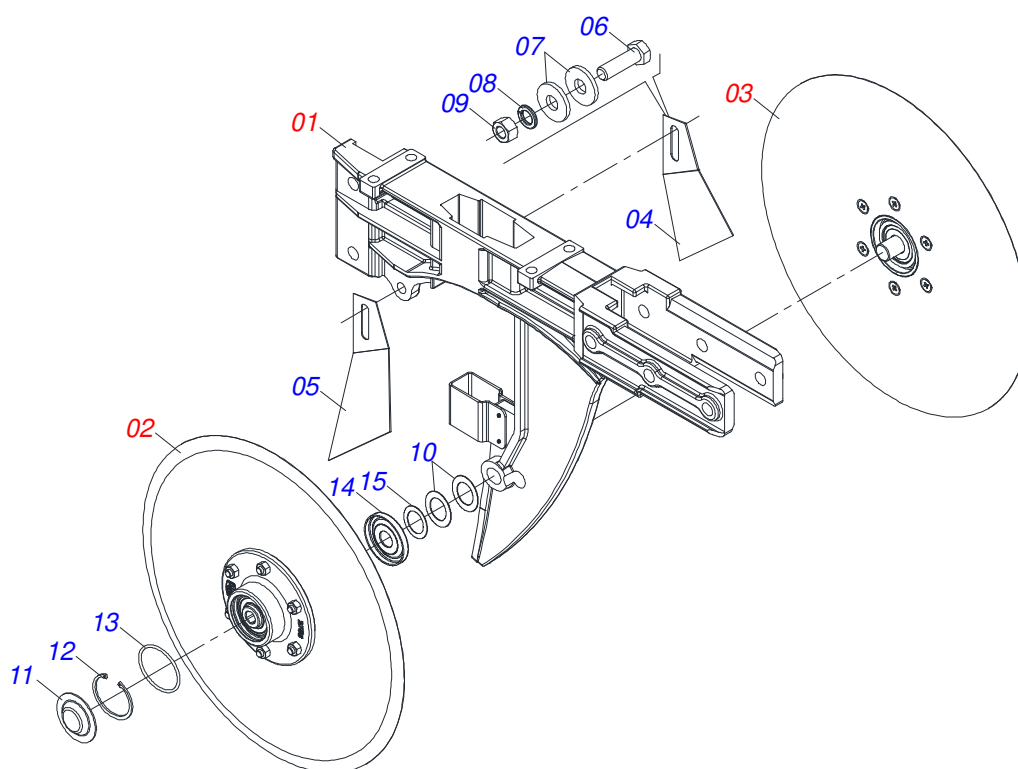


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE	76	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	77	01
03	0511053172	LEFT LOW CUBE WITH DISC 15	78	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511815098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O'RING		02
14	0511011927	DUST CLOAK		02
15	0591014250	19 X 26 X 0,50 FLAT WASHER		02

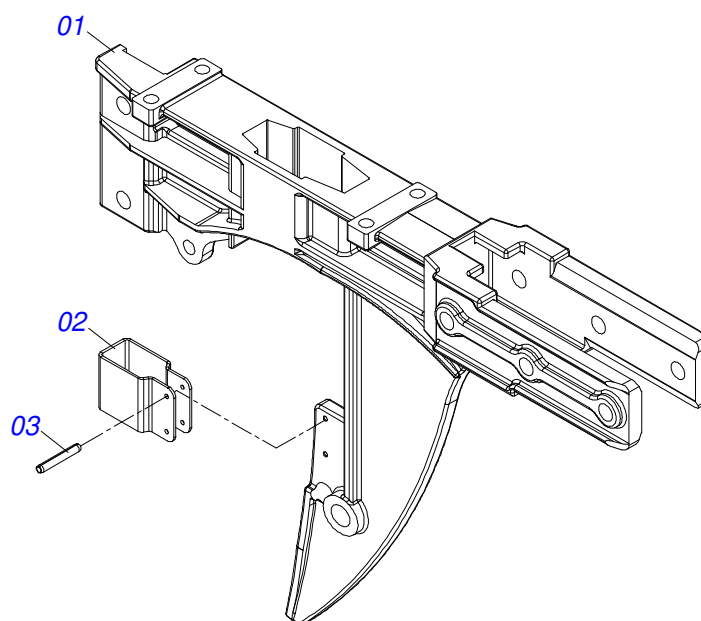


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

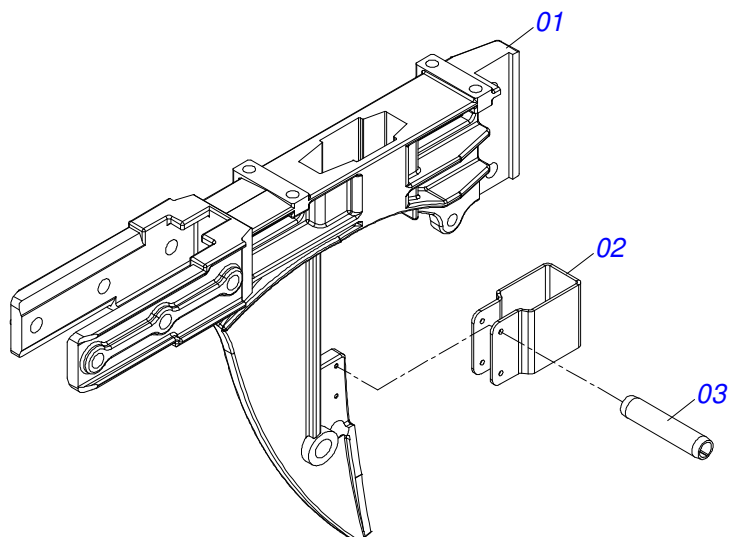


Item	Code	Description	See page	QT
01	0561015592	LEFT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

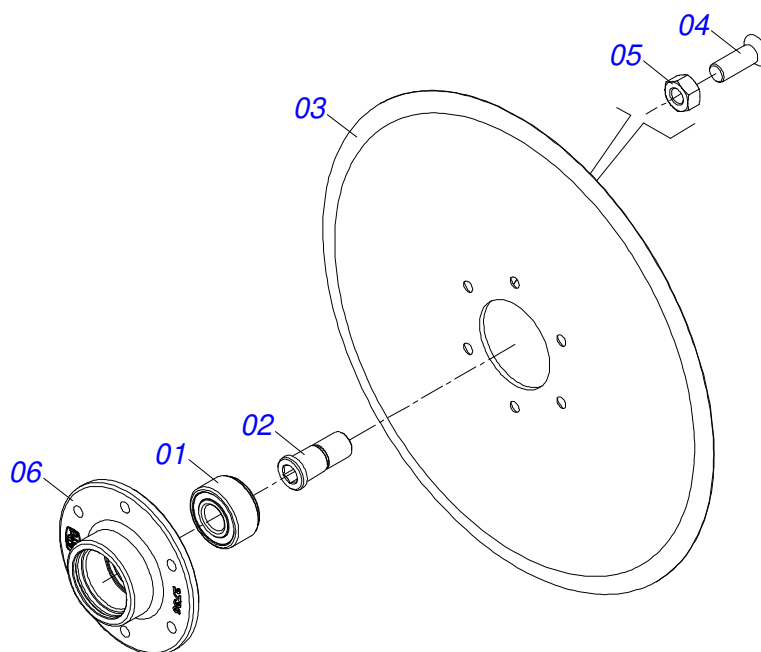

Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

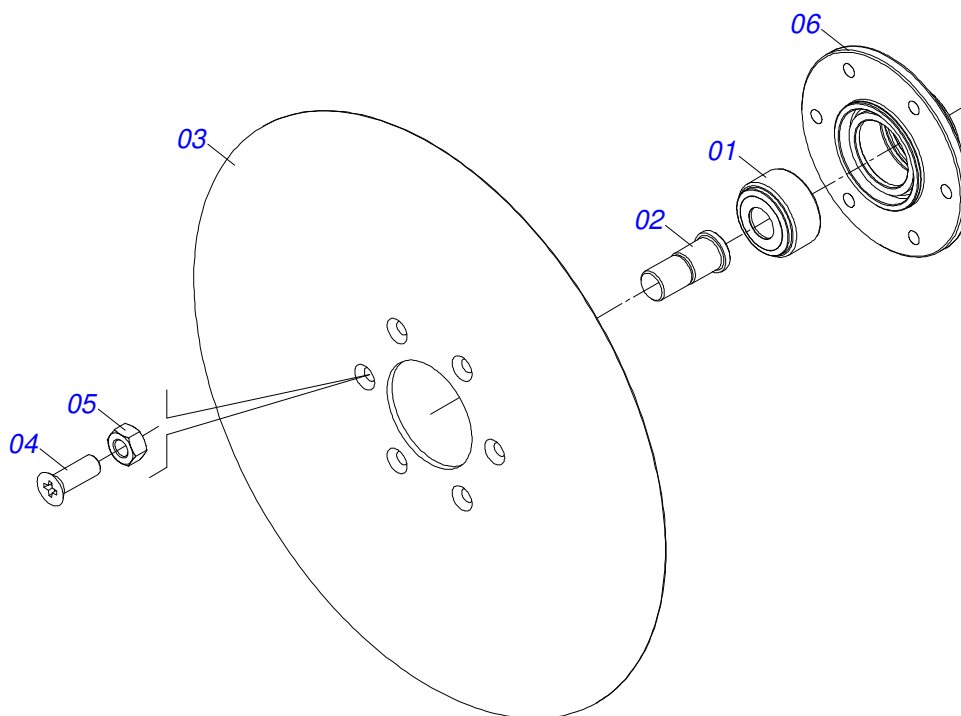


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

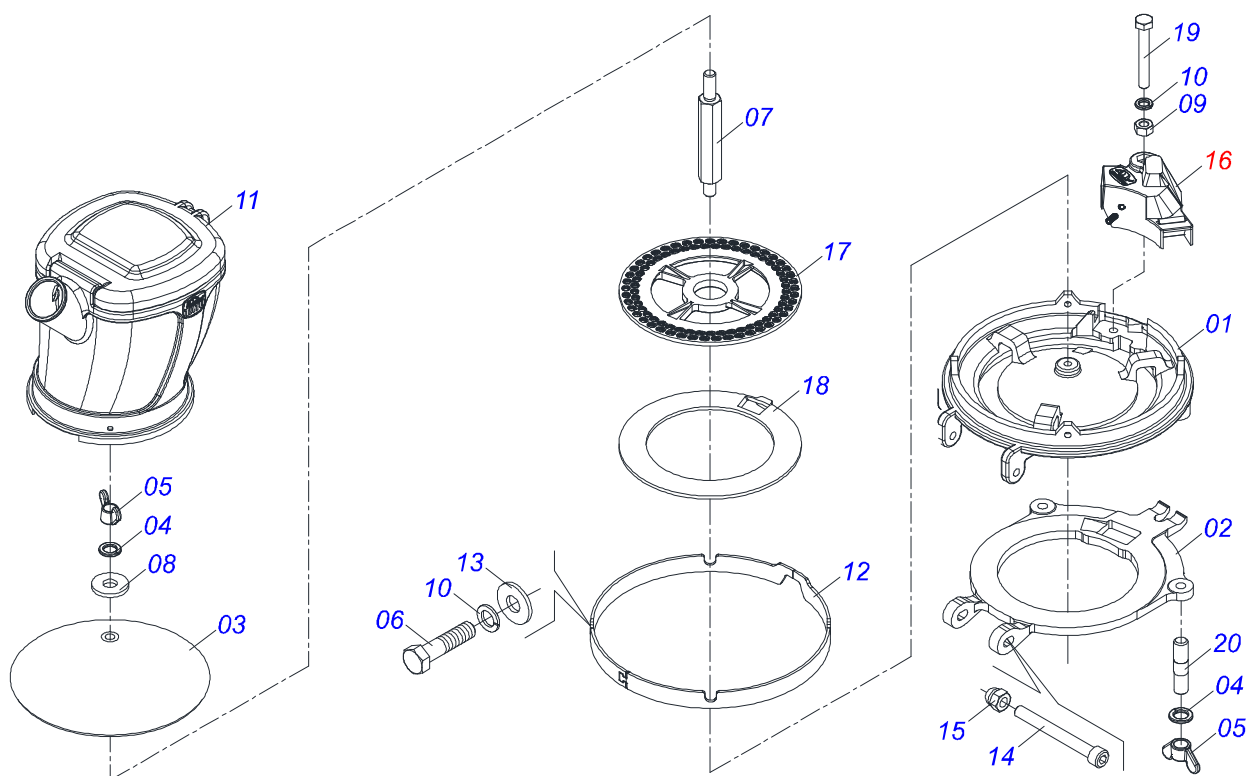

Item	Code	Description	See page	QT
01	0502020693	SUPPORT SEED BOX		01
02	0502012721	SEED DISC LOWER TRAIL		01
03	0503034131	DEFLECTOR		01
04	0503010025	3/8" SPRING WASHER		03
05	0503010209	3/8" UNC BUTTERFLY NUT		03
06	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		04
07	0571018536	HEX PRISONER		01
08	0501010984	FLAT WASHER		01
09	0503010337	5/16" NUT		01
10	0503010179	LOCK WASHER		05
11	0503062582	DEPOSIT SEED		01
12	0581011346	ADAPTER DEPOSIT		01
13	0501010694	FLAT WASHER		04
14	0503016282	ALLEN BOLT		01
15	0503016283	M8 NUT HEX		01
16	0501051094	ASSY SEED DISTRIBUTOR	80	01
17	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
18	0503016219	RING TO SOYBEANS		01
19	0503010675	5/16" X 2.1/4" BOLT		01
20	0503030083	3/8" X 3/8" X 1.6" STUD		02

ASSY SEED DISTRIBUTOR


0501051094

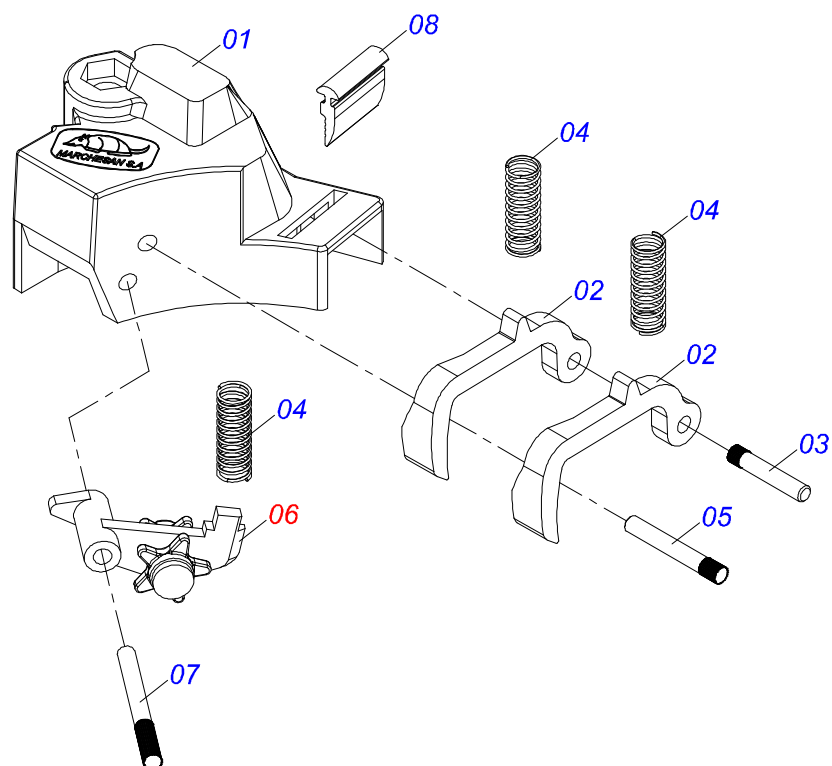


Item	Code	Description	See page	QT
01	0503030381	SEED DISTRIBUTOR BOX		01
02	0502010447	TRIGGER		02
03	0501013467	KEY AXLE		01
04	0503030378	0.4" X 1.1" X 0.03" SPRING		03
05	0501013466	KEY LIMITER AXLE		01
06	0501051119	DOUBLE PULLEY ROCKER'S	81	01
07	0501013468	ROCKER ARM AXLE, OF THE PULLEY		01
08	0503030377	SCRAPER		01

DOUBLE PULLEY ROCKER'S


0501051119

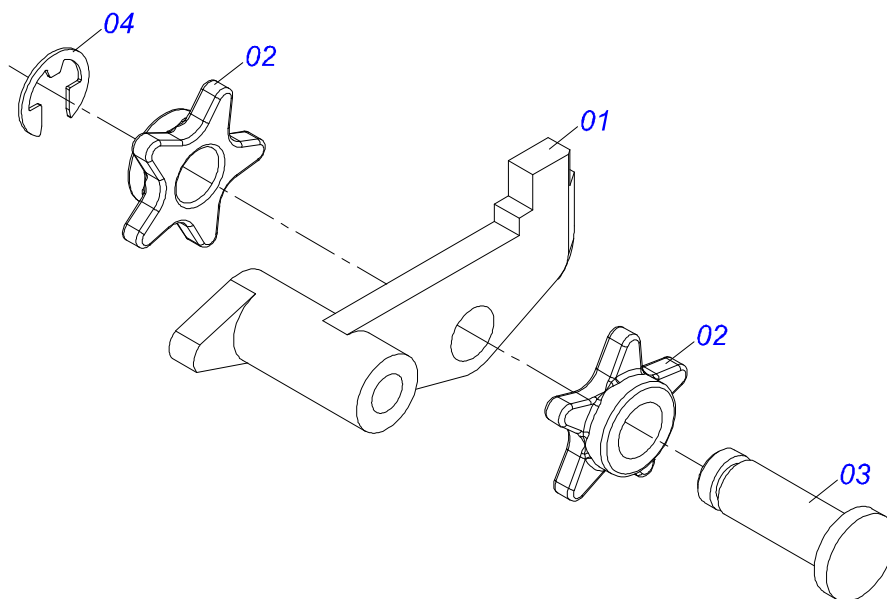


Item	Code	Description	See page	QT
01	0503031129	DOUBLE PULLEY ROCKER ARM		01
02	0503031128	5Z PLASTIC DOUB PULLEY FOR SOYBEAN		02
03	0521010649	TOOTH PULLEY COUPLING SHAFT		01
04	0503011853	503050 CLAMPING RING (FOR HOLE)		01

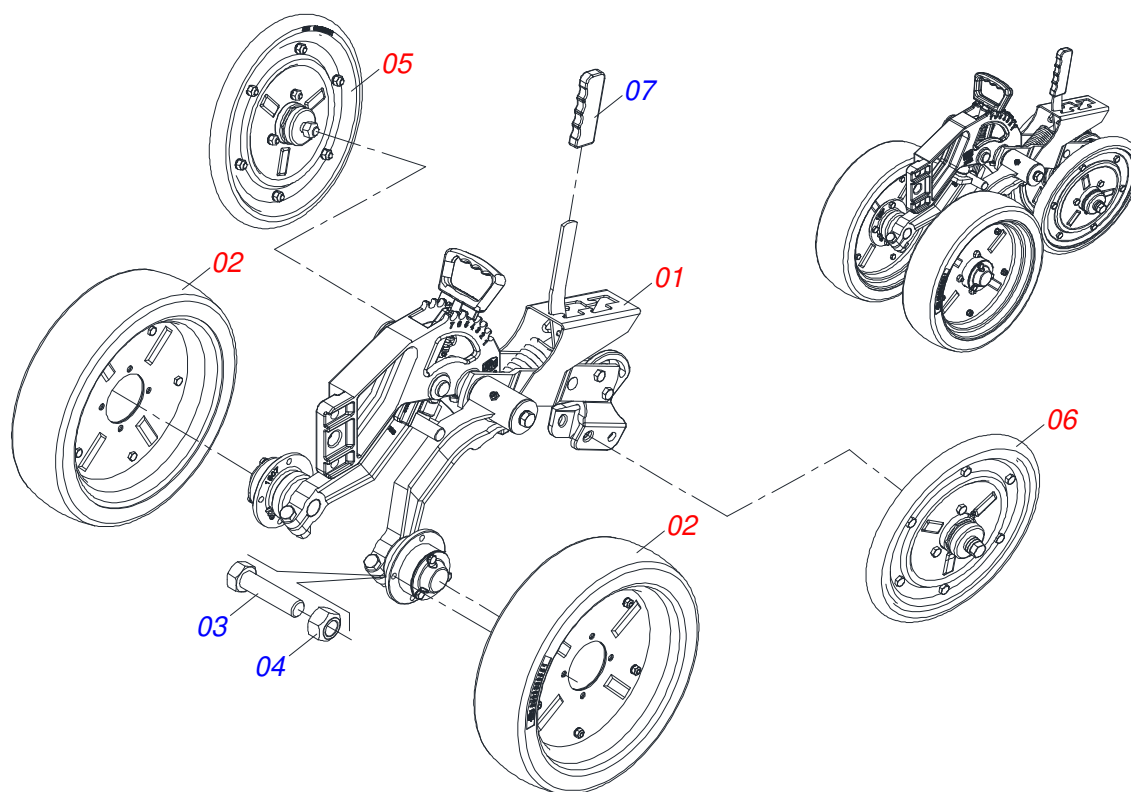

Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	83	01
02	0501052538	DEPTH BAND WITH ARMS	88	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	89	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	90	01
07	0503033942	COVER REGULATORY WHEEL		01

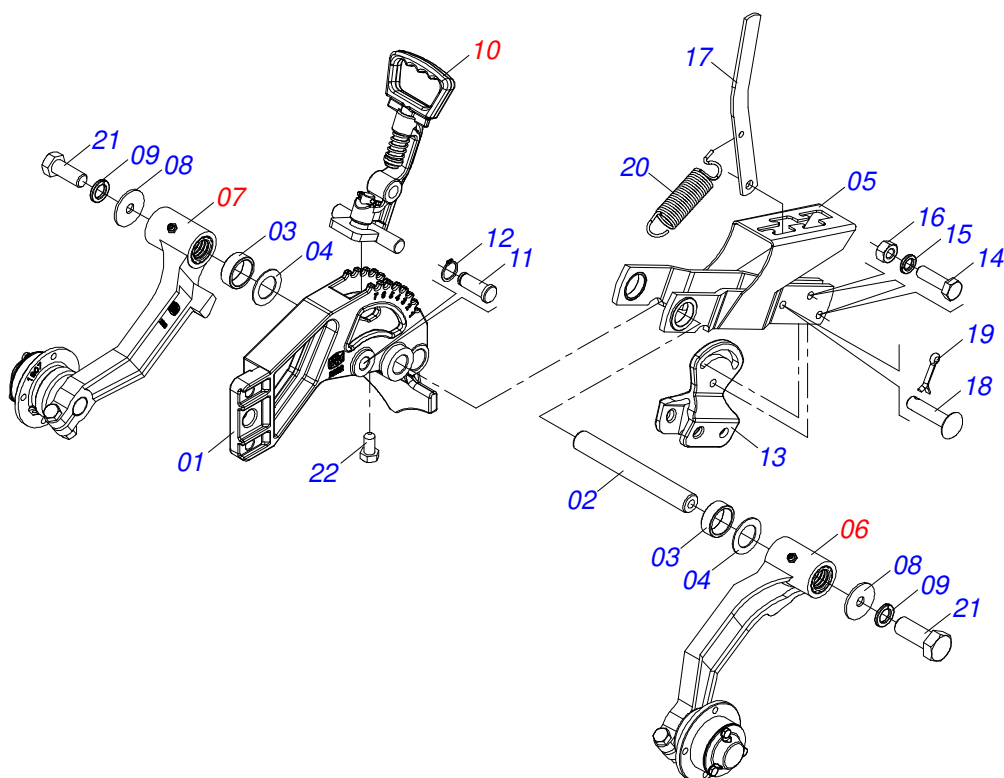


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	85	01
07	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	86	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	87	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	SCREWEW 3/8 UNC X 3/4		01

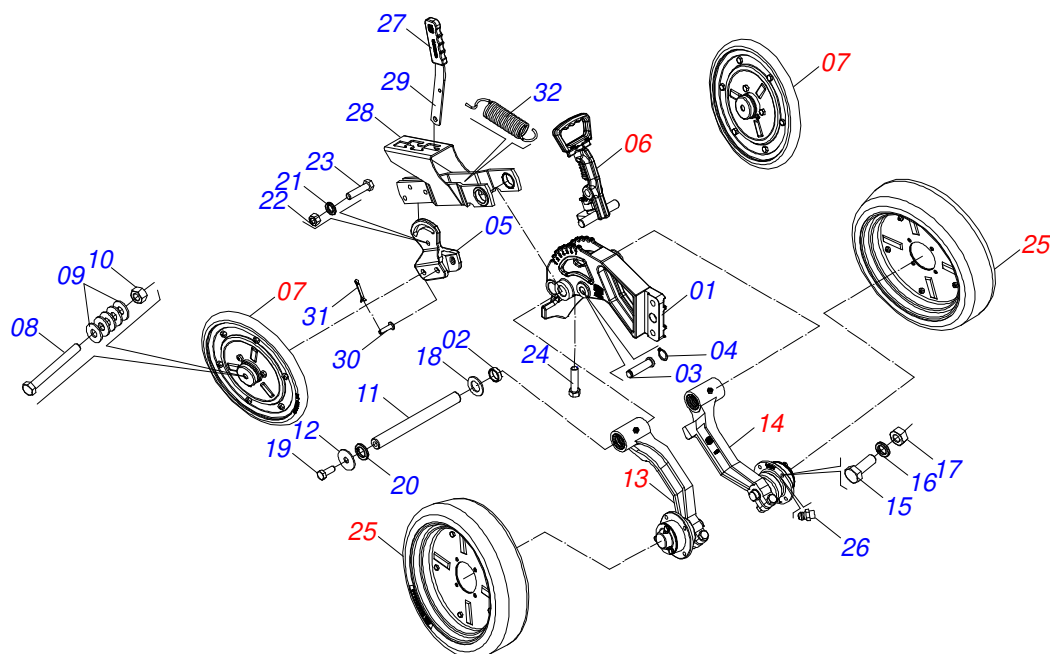


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
03	0521019093	0.6" X 2.7" PIVOT SHAFT		01
04	0503010581	RING		01
05	1902012116	PRESS WHEEL ADJUSTER		01
06	0501052297	DEPTH WHEELS REGULATOR ASSY	87	01
07	0501052908	COMPACTOR WHEEL WITH BEARING	91	02
08	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
09	0521014508	FLAT WASHER		10
10	0503011336	1/2" HEX SELF ADJUSTING NUT		02
11	0581011100	DEPTH WHEEL AXLE		01
12	0571017749	FLAT WASHER		02
13	0521056314	LEFT ARM WHEEL DEPTH WITH CUBE CPERA		01
14	0521056313	RIGHT ARM WHEEL DEPTH WITH CUBE CPERA		01
15	0503010358	5/16" X 5/8" BOLT		08
16	0503010179	LOCK WASHER		08
17	0503013816	5/16" LOCKNUT		08
18	0501011445	FLAT WASHER		02
19	0503010311	1/2" X 1-1/4" BOLT		02
20	0503010019	1/2" SPRING WASHER		02
21	0503010025	3/8" SPRING WASHER		02
22	0503010026	3/8" NUT		02
23	0503010849	3/8" X 1-1/2" BOLT		02
24	0503010256	3/8" X 3/4" BOLT		01
25	0511055819	DEPTH BAND WITH RIM		02
26	0503010691	1/4" GREASE FITTING		02
27	0503033942	COVER REGULATORY WHEEL		01
28	0521064073	REGULACION WHEEL COMPACTOR		01
29	0541016906	PRESS WHEELS REGULATOR BODY		01
30	0521010539	0.3" X 1.2" COUPLING SHAFT		01
31	0503010140	1/8" X 3/4" COTTERPIN		01




Item	Code	Description	See page	QT
32	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01

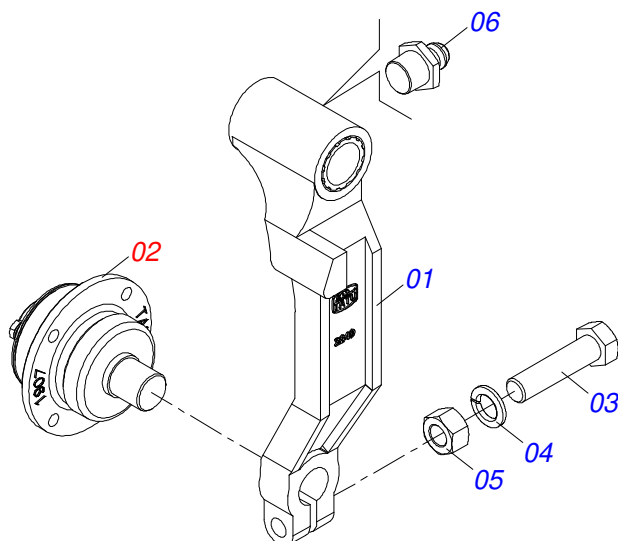


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL BOX		01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01

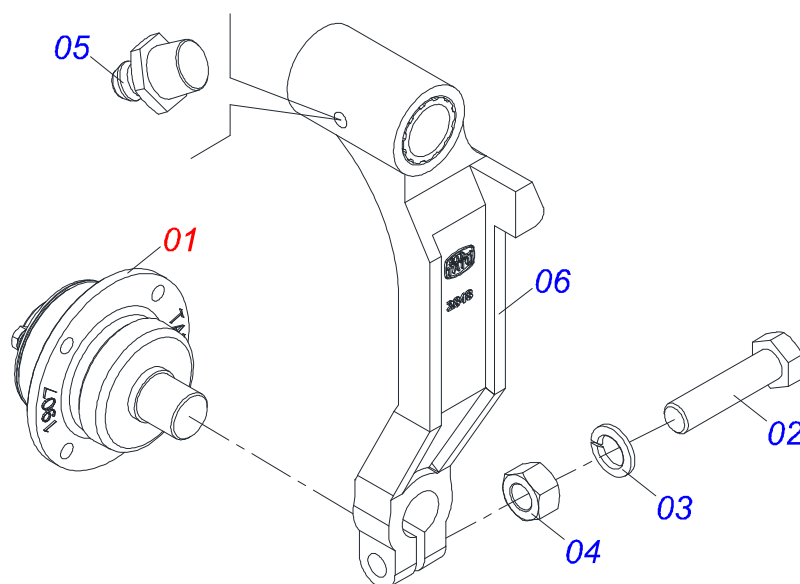


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL BOX		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

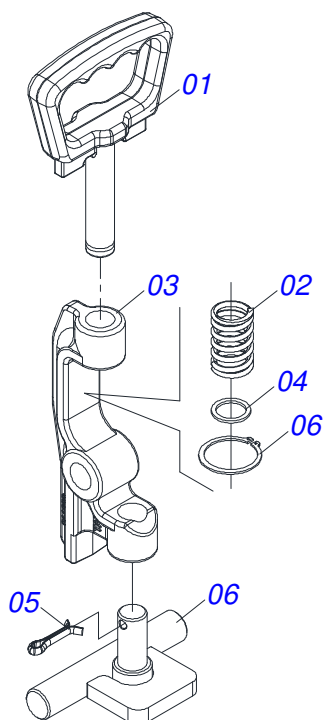


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	DEPTH CONTROL LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

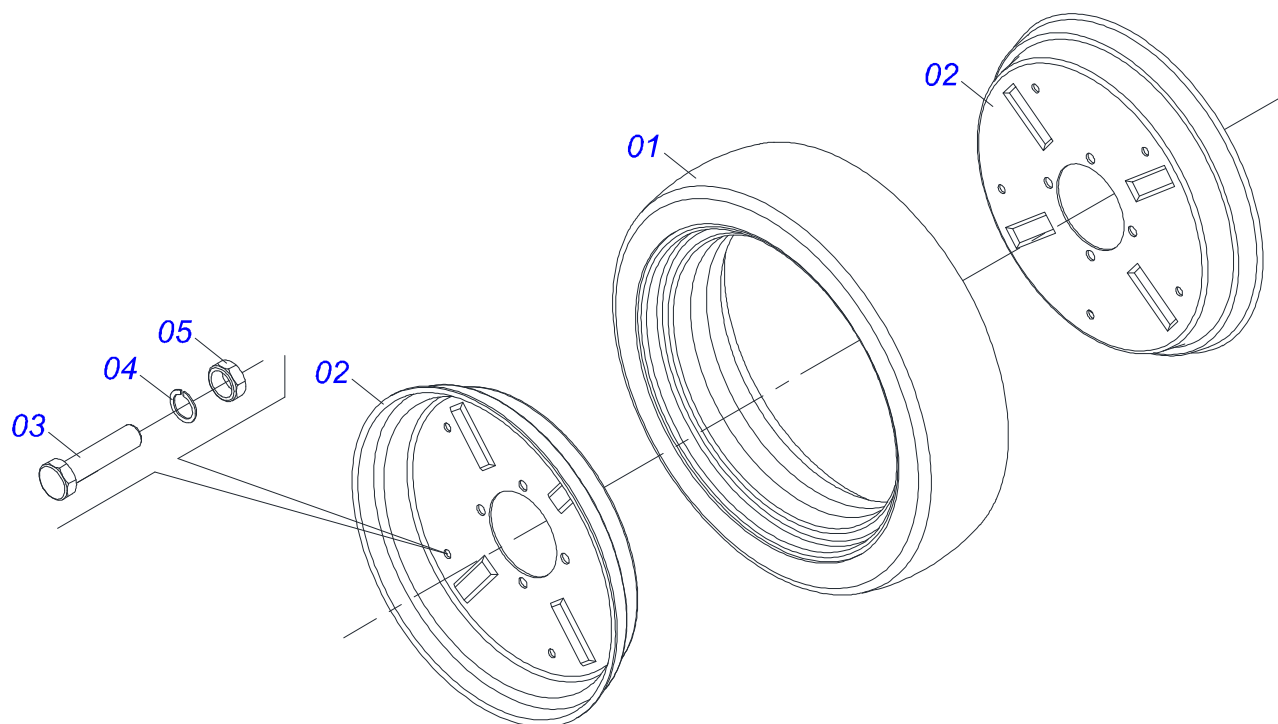


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

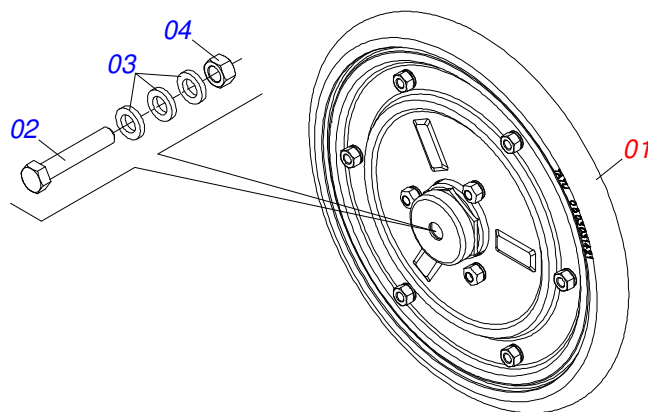


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	91	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

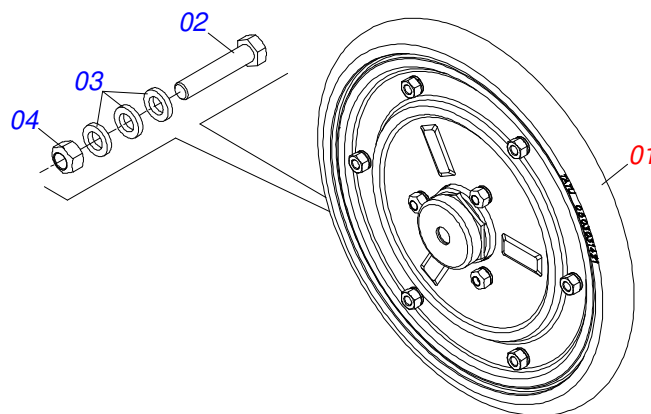


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	91	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

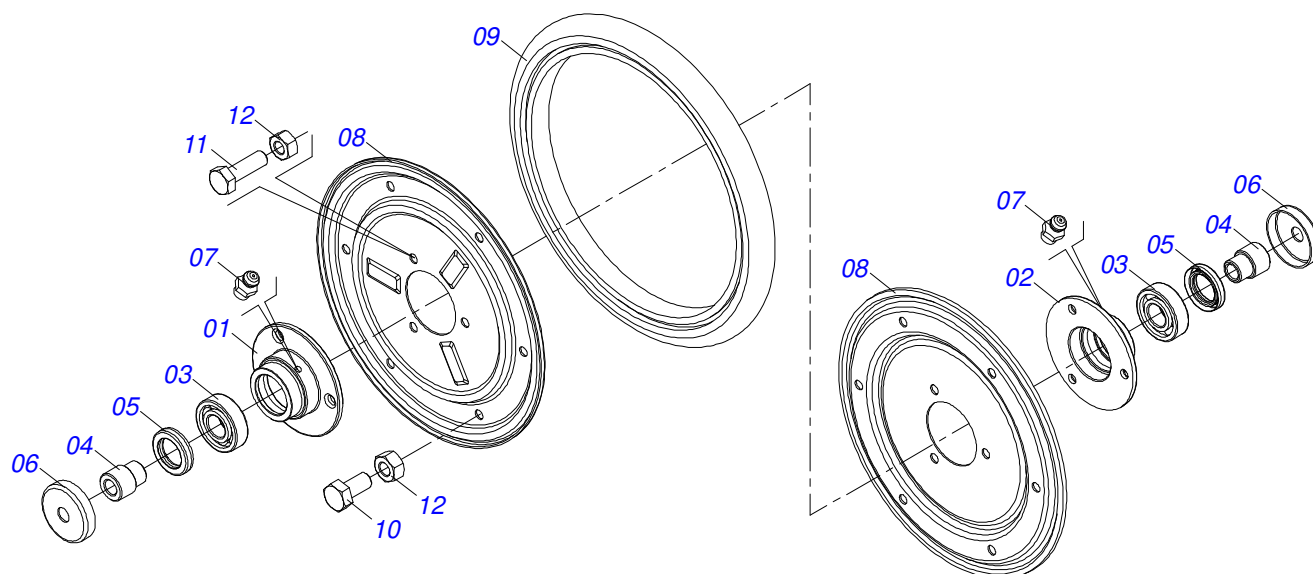


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

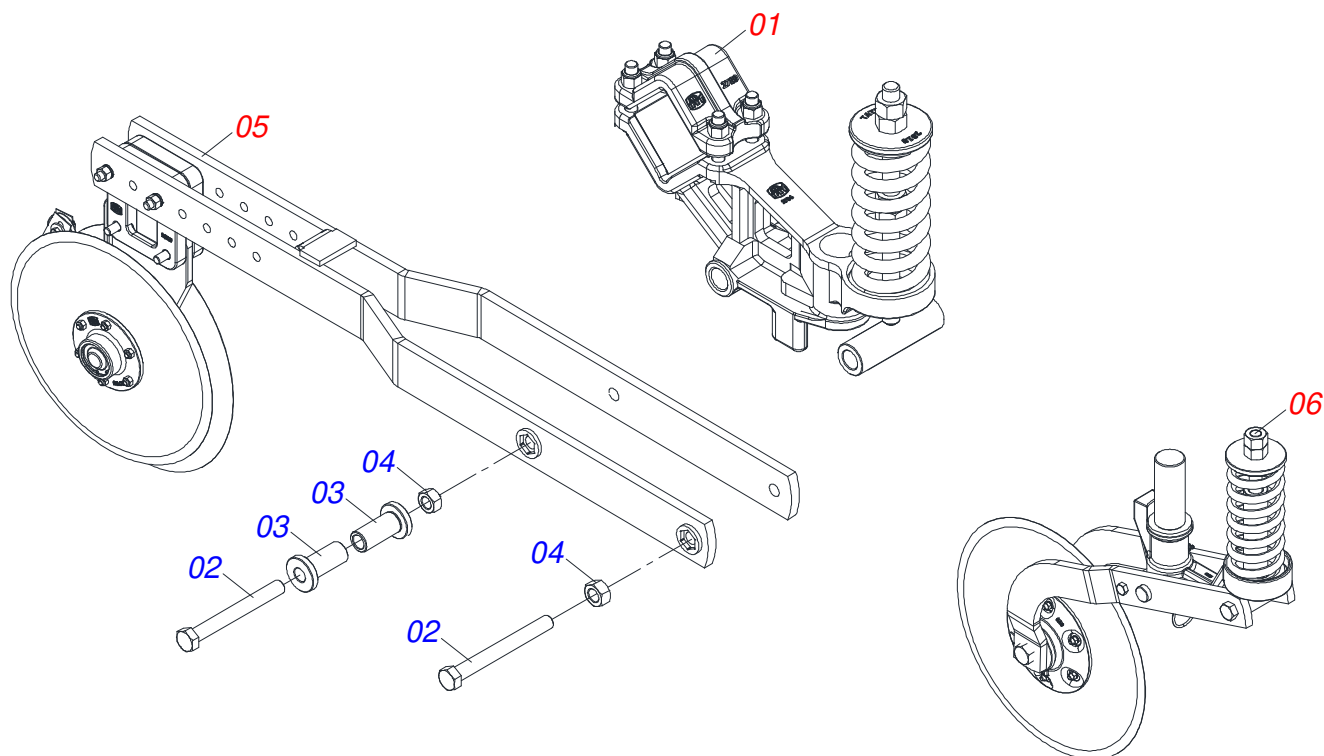


Item	Code	Description	See page	QT
01	0511058633	FIXED SHORT SUPPORT FERTILIZER ROW		01
02	0511016281	3/4" X 8" BOLT		02
03	0571019061	FERTILIZER ROW SUPPORT ARM SLEEVE		02
04	0503011255	3/4" LOCK NUT		02
05	0511057272	LH SHORT ARM ROW FERTILIZER		01
06	0511058630	20" DISC CUT	96	01

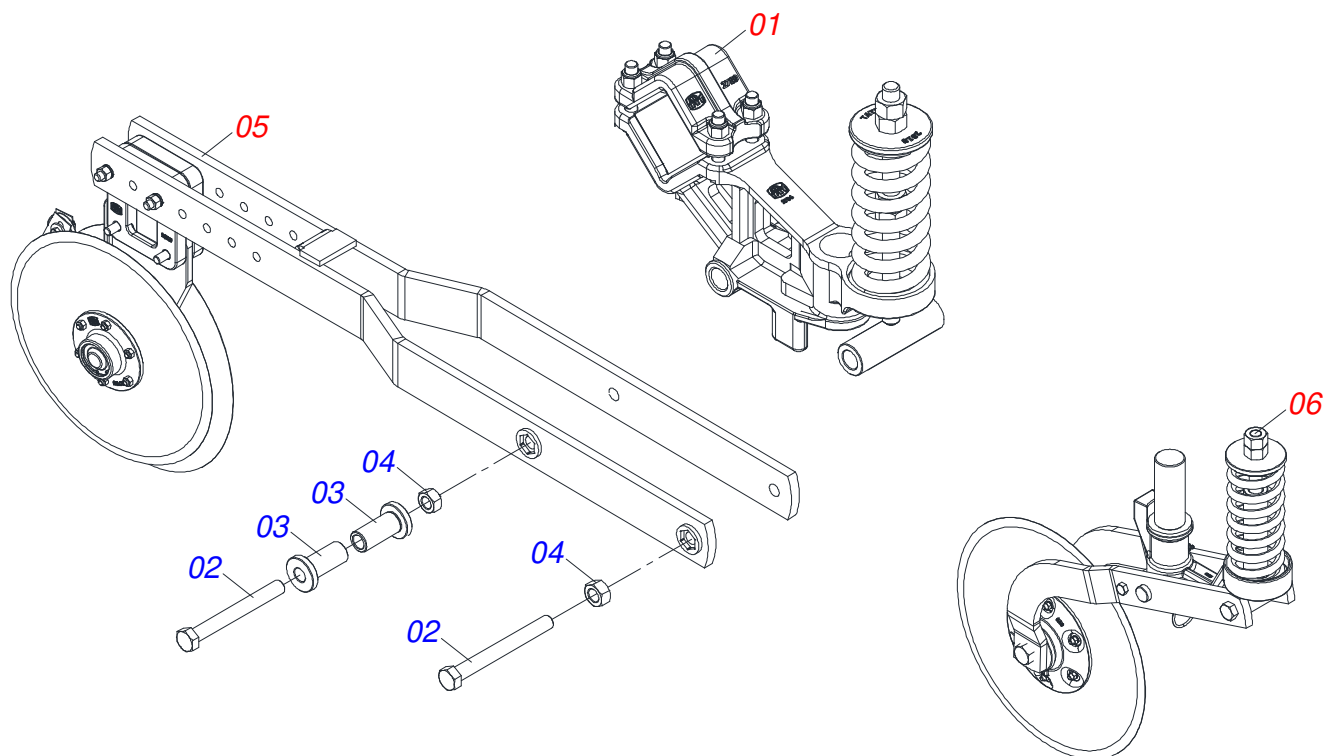


Item	Code	Description	See page	QT
01	0511058634	SUPPORT LONG		01
02	0511016281	3/4" X 8" BOLT		02
03	0571019061	FERTILIZER ROW SUPPORT ARM SLEEVE		02
04	0503011255	3/4" LOCK NUT		02
05	0511057271	RH LONG ARM ROW FERTILIZER		01
06	0511058630	20" DISC CUT	96	01

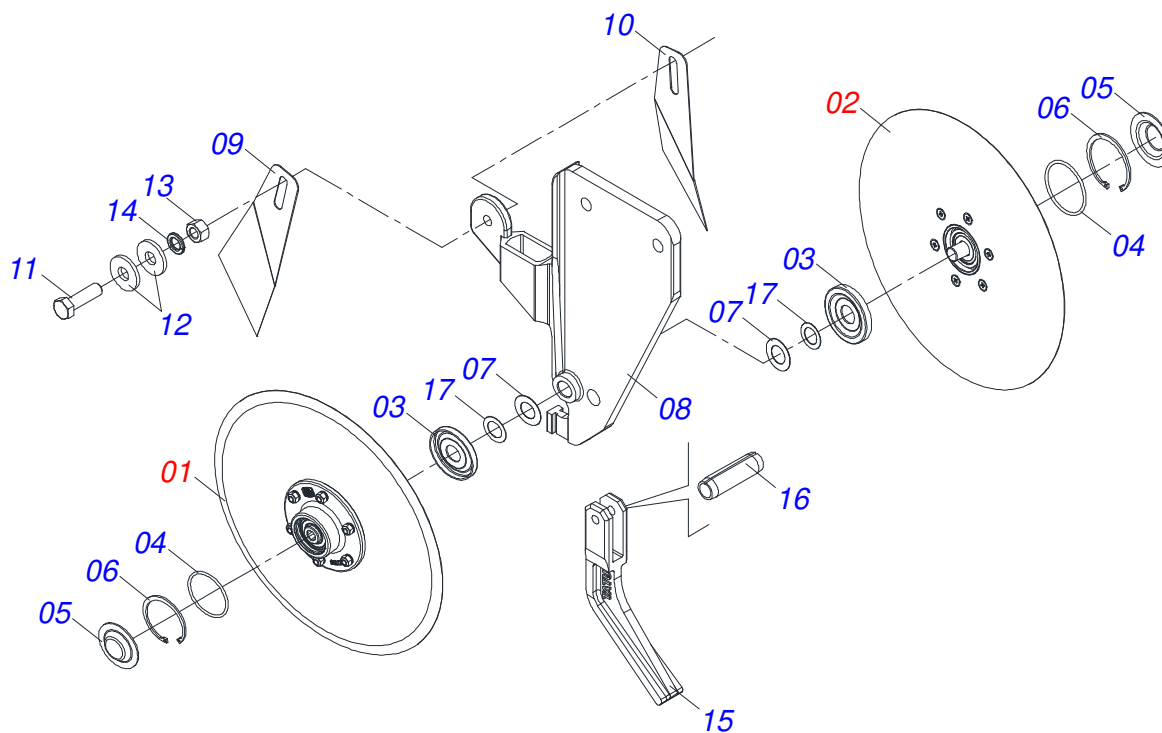


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	78	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	77	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503010025	3/8" SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

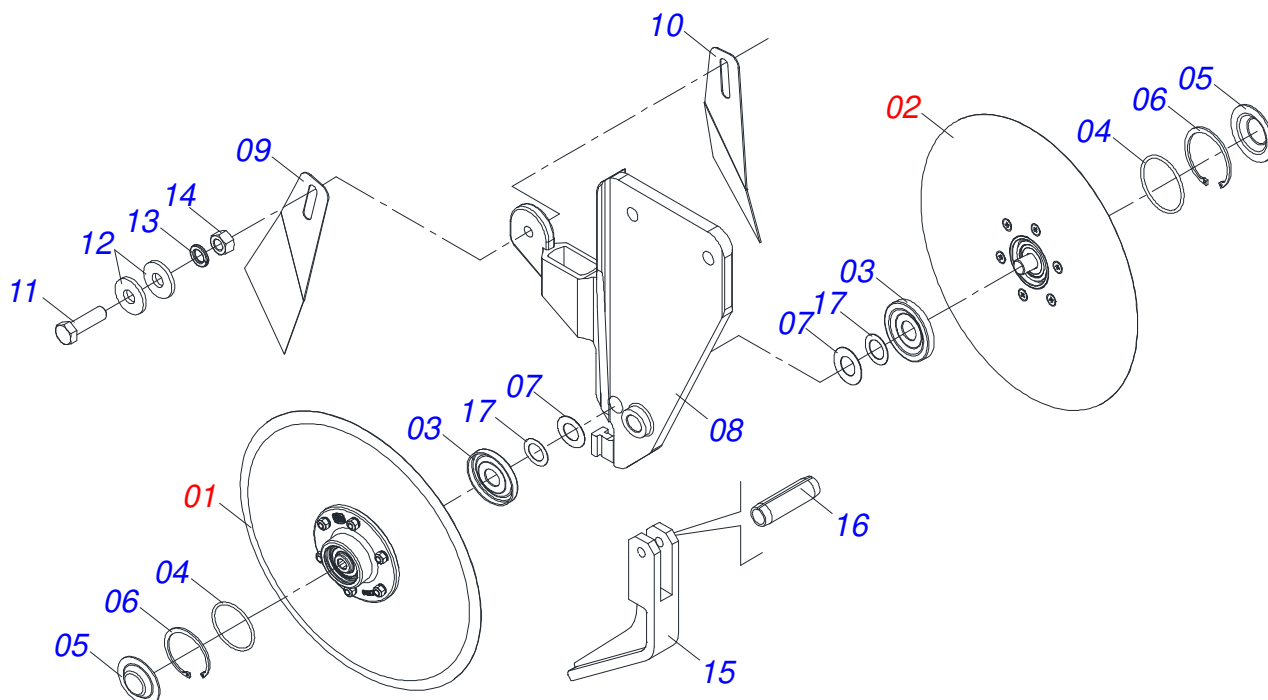


Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15	77	01
02	0511053172	LEFT LOW CUBE WITH DISC 15	78	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010025	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

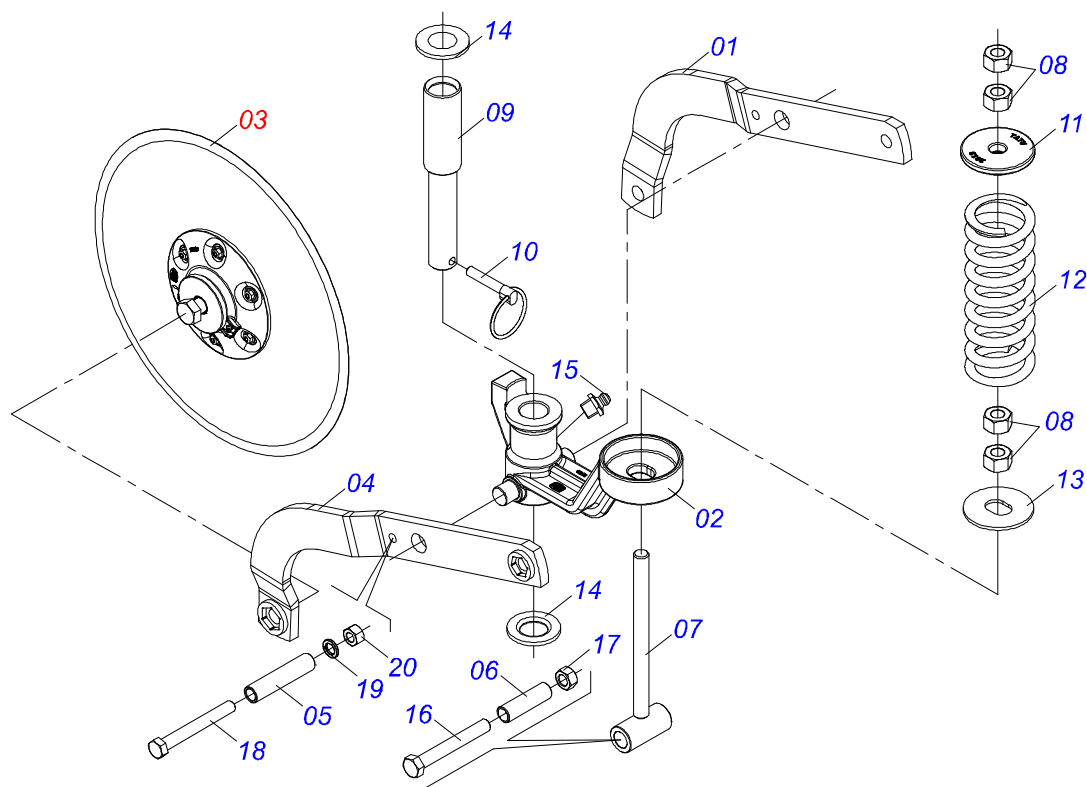


Item	Code	Description	See page	QT
01	0571018989	LH BLADE DISC ARM		01
02	0502012790	LOCK NUT		01
03	0511058648	BOX WITH DISC BLADE 20		01
04	0521065978	RIGHT ARM WITH WASHER LOCK		01
05	0571019035	SLEEVE SUPPORT ARM		01
06	0521010452	SLEEVE		01
07	0521066743	REGULACION SPRING		01
08	0503010417	7/8" NUT		04
09	0571019033	FIXATION AXLE		01
10	0503034319	LOCK PIN		01
11	0502012813	FLANGE WASHER SPRING		01
12	0503034320	COMPRESSSION SPRING		01
13	0571019032	SUPPORT WASHER		01
14	0571019034	FLANGE WASHER AXLE		02
15	0503010002	1800 GREASE FITTING		01
16	0503013185	3/4" X 5-1/2" BOLT		01
17	0503011255	3/4" LOCK NUT		01
18	0503011411	1/2" X 5-1/2" BOLT		01
19	0503011440	SPRING WASHER		01
20	0503010060	1/2" NUT		01

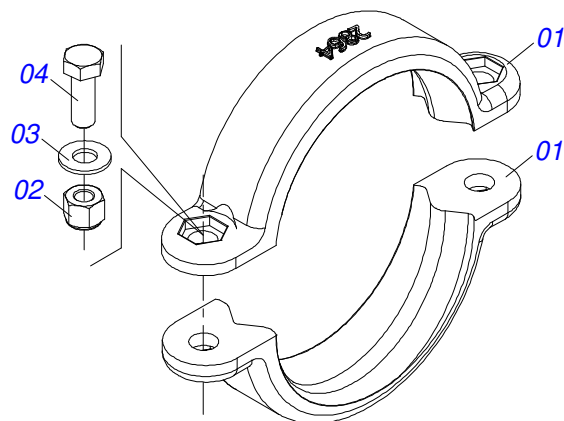


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER		02
04	0503010365	NUT		02

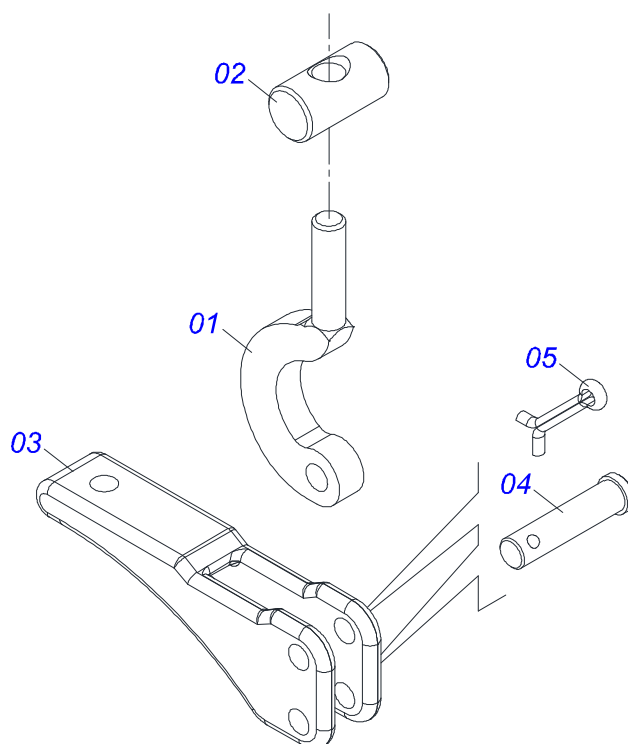


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

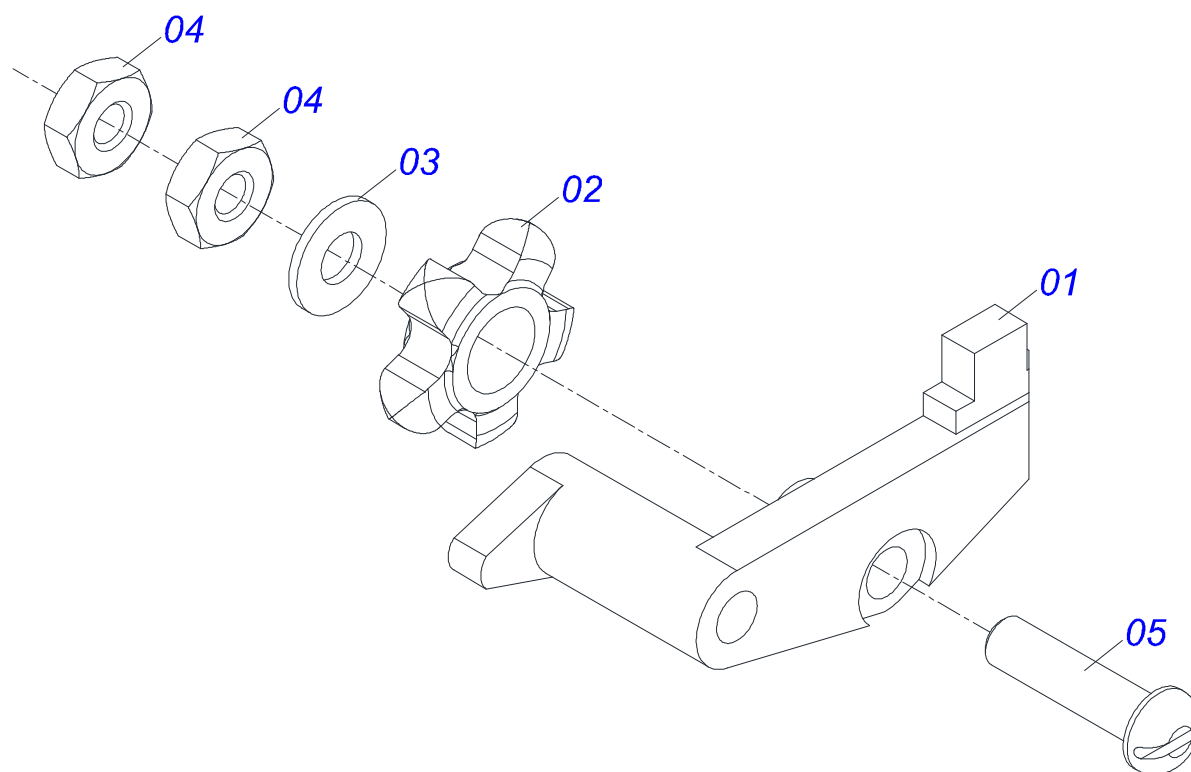


Item	Code	Description	See page	QT
01	0503030379	LARGER ROCKER ARM		01
02	0502060001	PLASTIC PULLEY FOR MAIZE		01
03	0503010669	FLAT WASHER		01
04	0503010667	3/16" NUT		02
05	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		01

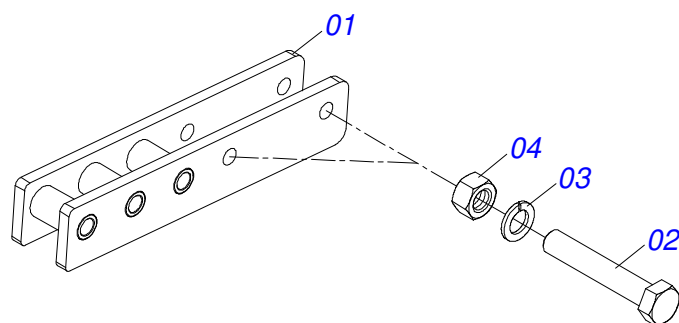

Item	Code	Description	See page	QT
01	0521068467	FIXED ROD EXTENSION		01
02	0503010479	BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2" NUT		02

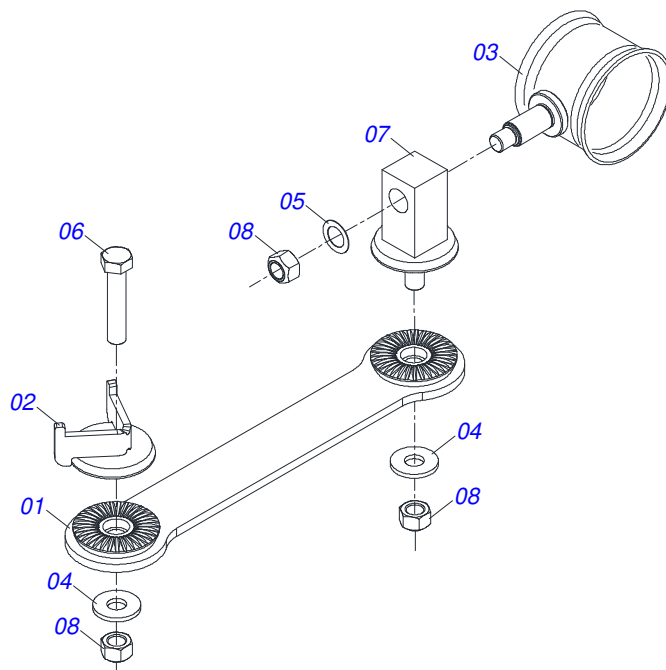

Item	Code	Description	See page	QT
01	0521067601	LH REGULATOR		01
02	0521067600	FIXER SUPPORT		01
03	0521067602	GUIDE ASSY		01
04	0501012140	FLAT WASHER		02
05	0511015098	FLAT WASHER		01
06	0503010806	5/8" X 3" BOLT		01
07	0521069693	EAR FIXATION		01
08	0503012795	5/8" HEX SELF ADJUSTING NUT		03

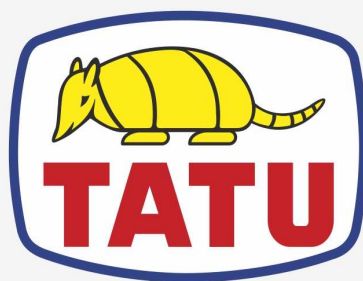

MARCHESAN

Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI

www.marchesan.com.br

