

ROW CROP PLANTERS

**PST4 - FRAME 4495 - CSU - WITH ELEVATION
(UP TO 03/2022)**

Code: 0501092754

Series: S-0116

Revision: 00

Date Revision: JULHO/2021

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111151236	PST4 4495/10E450 ESPECIAL S-0116

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.




MARCHESAN

INDEX

0909099024	FRAME ASSY	1
0511050836	WHEEL AXLE FRAME - 4495	2
0511057124	CYLINDER ASSY	3
0511041188	2" X 5" X 19.5" X 7.5" HYDRAULIC CYLINDER	4
0521043934	CARRYING WHEELS SPRING TRACTION	5
0501058240	WHEEL FASTENER WITH TENSIONER	6
0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	7
0501058244	WHEEL FIXED CHAIN TENSIONER	8
0501058242	WHEEL MOBILE CHAIN TENSIONER	9
0501059909	CARRYING WHEELS SUPPORT	10
0511052770	WHEEL WITH TIRE	11
0503062159	WHEEL WITH TIRE	12
0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	13
0501058241	WHEEL SUPPORT CHAIN TENSIONER	14
0511058970	RIGHT TRANSMISSION ASSY - 4495	15
0511058971	LEFT TRANSMISSION ASSY - 4495	16
0501052560	MOTOR AXLE SIGNAL	17
0511051434	TRANSMISSION ACTUATOR	18
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	19
0521043316	RIGHT GEAR BOX ASSY	20
0521043317	LEFT GEAR BOX ASSY	21
0501058212	SEMI MOUNTED RIGHT CHANGE	22
0501058213	LH GEAR BOX	23
0511059266	CLOSED BEARING	24
0501056443	GEAR HOUSING BEARING	25
0501056444	BEARING WITH ROLLING	26
0501048790	AXLE WITH RING	27
0501054655	CHAIN TENSIONER ASSY	28
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	29
0511054363	CHAIN TENSIONER	30
0501058234	LOWER CHAIN TENSIONER	31
0501058235	STRETCHER CURRENT TOP SEED 17Z	32
0501058236	BEARING WITH 21Z GEAR	33
0501058237	16Z GEAR BEARING	34
0501055112	MICRO GRANULATED CHAIN TENSIONER	35
0511057127	ASSY SYSTEM HYDRAULIC - 3245/3695/4045/4495	36
0501053834	MALE QUICK COUPLER	37
0511057564	SET SUPPORT RIGHT LEFT	38
0511053240	RIGHT SILO SUPPORT WITH DISTRIBUTOR 10	39
0511053241	LEFT SILO SUPPORT WITH DISTRIBUTOR 10	40
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	41
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	42
0511057565	PLATFORM ASSY - 4495	43
0511057566	HANDRAIL ASSY - 4495	44
0511056536	LADDER ASSEMBLY	45
0511054971	JACK ASSEMBLY	46
0511057142	ASSY HEADER - 3245/3695/4045/4495	47
0511057131	MANUAL CANISTER ASSY	48
0909098921	ASSY HEX AXLE	49
0501054258	DRAWBAR ESTABILIZER ASSY	50
0511054601	HITCH ARTICULATED TRACTOR	51
0511053179	TRACTOR COUPLING SHAFT	52
0511056736	HOSE SUPPORT	53
0511058368	EAR MOVABLE	54
0909099023	SEED/FERTILIZER ROW ASSY	56

INDEX

0521053324	HIGH SHORT SEED ROW		57
0521052840	SHORT PIVOTING HIGH LINE		58
0511059244	ROD SPRING LINE SEED		59
0511059243	ASSEMBLY GUIDE VARIUM SPRING SEED		60
0511059350	SUPPORT LINE SUPPORT LINE WITH SCREW NUT		61
0521053325	HIGH LONG SEED ROW		62
0521052841	LONG PIVOTANT HIGH LINE		63
0511051693	BASE FIXING SYSTEM		64
0511056586	15 X 15 SEED DDD LEFT		65
0511052302	LH SUPPORT DDD GUIDE		66
0511053173	CUBE LOW RIGHT WITH DISC 15		67
0511053172	LEFT LOW CUBE WITH DISC 15		68
0521058872	FERTILIZER SHORT HIGH ROW WITH DAOC/20" DC		69
0521058870	SUPORT RIGHT BOX		70
0521058868	BOX ASSY		71
0521050168	MOUNTED FERTILIZER CONDUCTOR		72
0511058619	DISC CUT 20 SHORT LINE		73
0511058648	BOX WITH DISC BLADE 20		74
0511056909	DISC BOX CUT WITHOUT THE DISC		75
0521052644	TIGHT ELEVATION SPRING FULL FERTILIZER		76
0521058873	FERTILIZER LONG HIGH ROW WITH DAOC/20" DC		77
0521058871	RIGHT SUPPORT		78
0521058869	BOX ASSY		79
0511058620	DISC CUT 20 LONG LINE		80
0521056317	DEPTH CONTROL WITH LEVER ANGLE REGULATOR AXIS CPERA		81
0501050120	LARGER WALKING BEAM ASSY		82

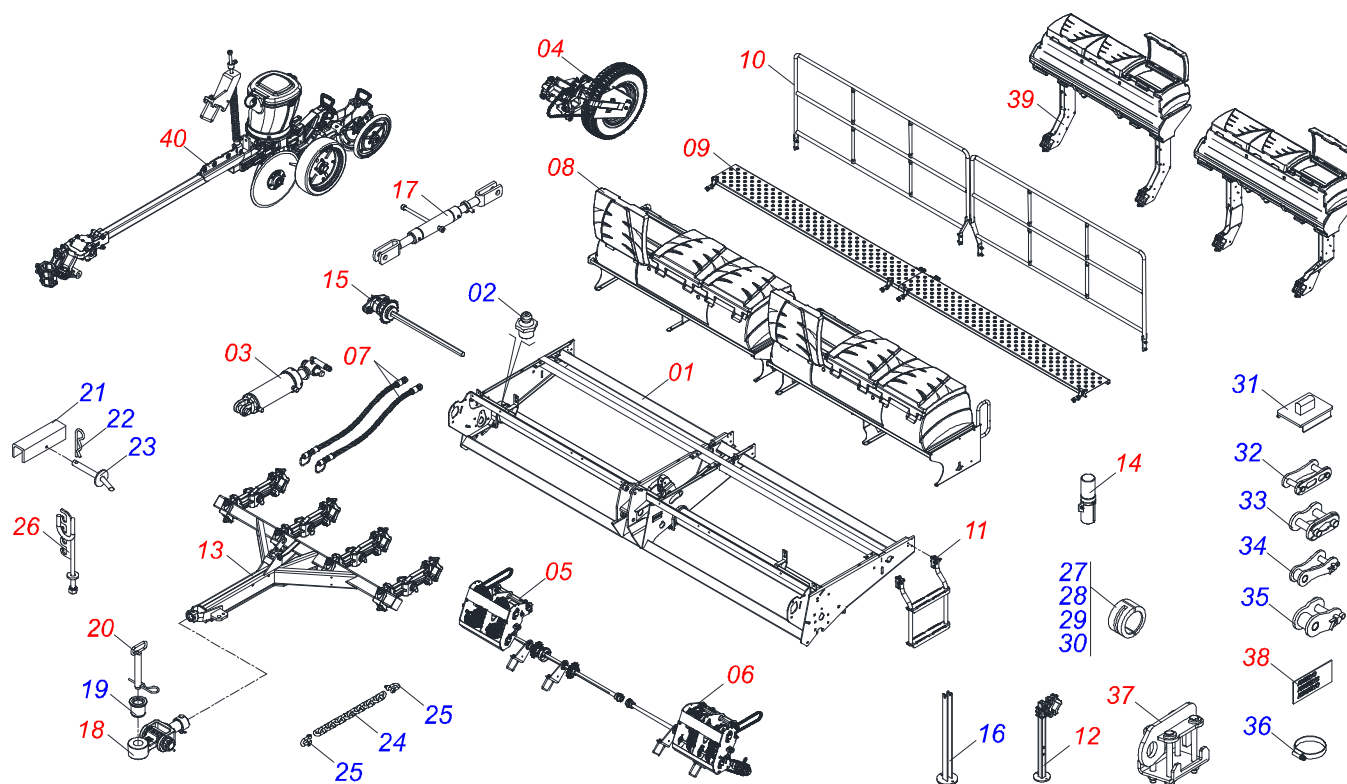


Item	Code	Description	See page	QT
01	0511050836	WHEEL AXLE FRAME - 4495	2	01
02	0503010003	1845 GREASE FITTING		02
03	0511057124	CYLINDER ASSY	3	01
04	0521043934	CARRYING WHEELS SPRING TRACTION	5	04
05	0511058970	RIGHT TRANSMISSION ASSY - 4495	15	01
06	0511058971	LEFT TRANSMISSION ASSY - 4495	16	01
07	0511057127	ASSY SYSTEM HYDRAULIC - 3245/3695/4045/4495	36	01
08	0511057564	SET SUPPORT RIGHT LEFT	38	01
09	0511057565	PLATFORM ASSY - 4495	43	01
10	0511057566	HANDRAIL ASSY - 4495	44	01
11	0511056536	LADDER ASSEMBLY	45	02
12	0511054971	JACK ASSEMBLY	46	02
13	0511057142	ASSY HEADER - 3245/3695/4045/4495	47	01
14	0511057131	MANUAL CANISTER ASSY	48	02
15	0909098921	ASSY HEX AXLE	49	01
16	0501065677	STRUT		02
17	0501054258	DRAWBAR ESTABILIZER ASSY	50	01
18	0511054601	HITCH ARTICULATED TRACTOR	51	01
19	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
20	0511053179	TRACTOR COUPLING SHAFT	52	01
21	0521013022	TRANSPORT LOCK		01
22	0501068994	0.3" X 3.1" LOCK PIN		01
23	0503030168	CUPILLA		01
24	0503014120	CHAIN		01
25	0503014321	CABLE STEEL SHACKLE		02
26	0511056736	HOSE SUPPORT	53	01
27	0501047895	ROD STOP		01
28	0501047885	ROD STOP		01
29	0501047886	ROD STOP		01
30	0501047887	ROD STOP		01
31	0503032624	SILLO FERTILIZER GUTTER		05




**PST4 - FRAME 4495 - CSU - WITH ELEVATION (UP TO
FRAME ASSY**

Page 1
0909099024


Item	Code	Description	See page	QT
32	0503010780	N-2050 AMENDMENT		02
33	0503011750	AMENDMENT WITH LOCK		06
34	0503010951	REDUCTION		04
35	0503011751	REDUCTION		06
36	0503010246	CLAMP		03
37	0511058368	EAR MOVABLE	54	02
38	0511058969	LABEL ASSY - 4495		01
39	0511059585	ASSEMBLY CSU C3 SEMI MOUNTED 4880		01
40	0909099023	SEED/FERTILIZER ROW ASSY	56	10

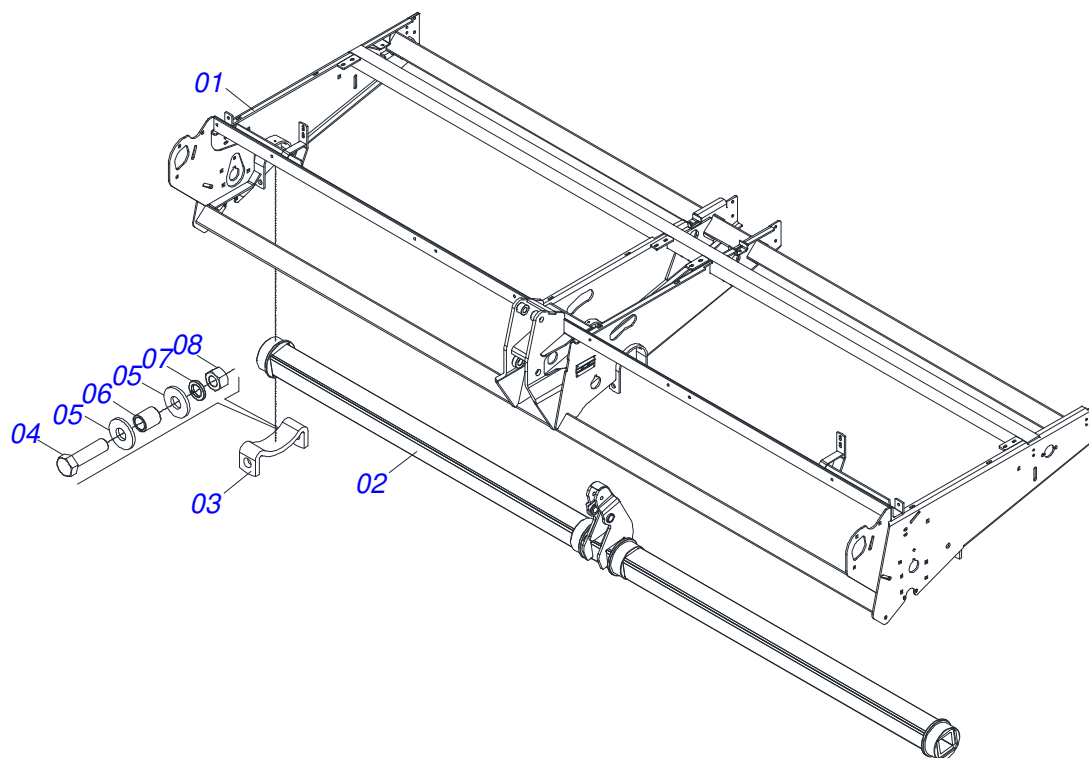


Item	Code	Description	See page	QT
01	0521062243	FRAME		01
02	0521062242	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		04
04	0503010899	5/8" X 2-1/4" BOLT		08
05	0501012140	FLAT WASHER		16
06	0531013922	0.6" X 0.8" X 1" SLEEVE		08
07	0503011445	SPRING WASHER		08
08	0503010013	5/8" NUT		08

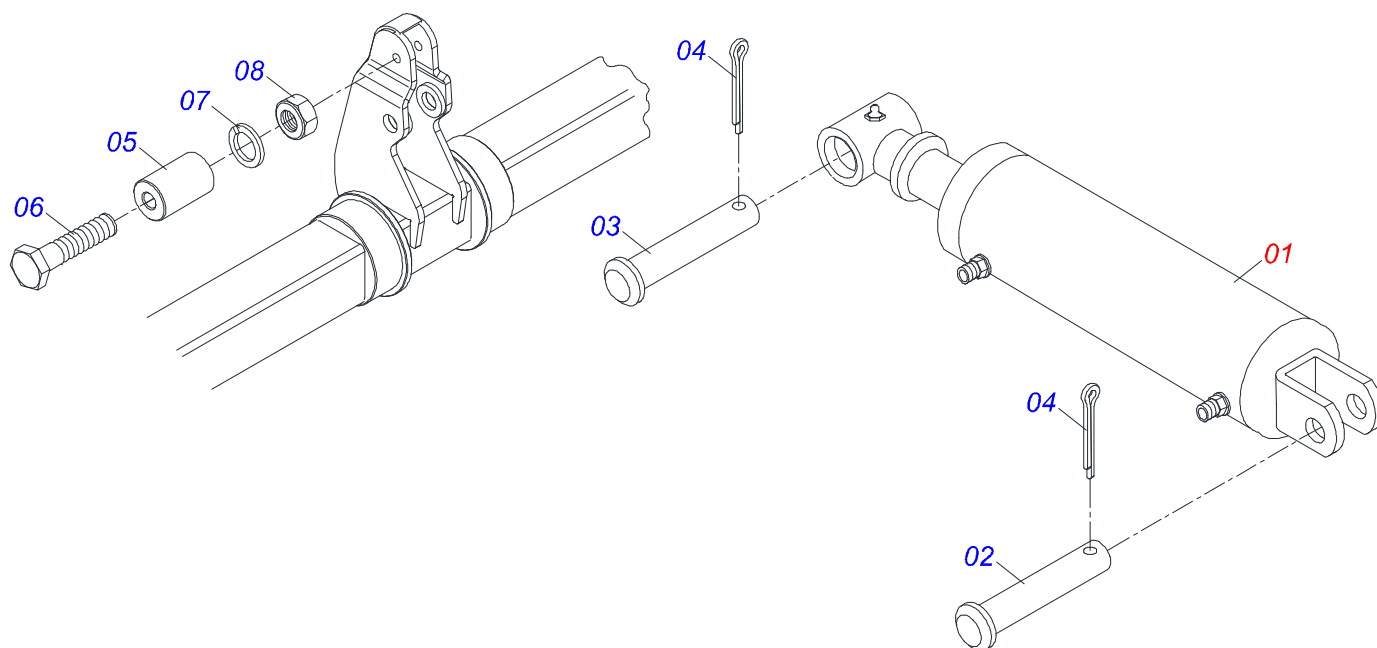


Item	Code	Description	See page	QT
01	0511041188	2" X 5" X 19.5" X 7.5" HYDRAULIC CYLINDER	4	01
02	0531019171	1.25" X 7" COUPLING SHAFT		01
03	0521012536	COUPLING SHAFT		01
04	0503010523	1/4" X 2" COTTERPIN		02
05	0531012565	SLEEVE 16,3X 30 X 88		02
06	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02
07	0503010027	5/8" SPRING WASHER		02
08	0503010013	5/8" NUT		02

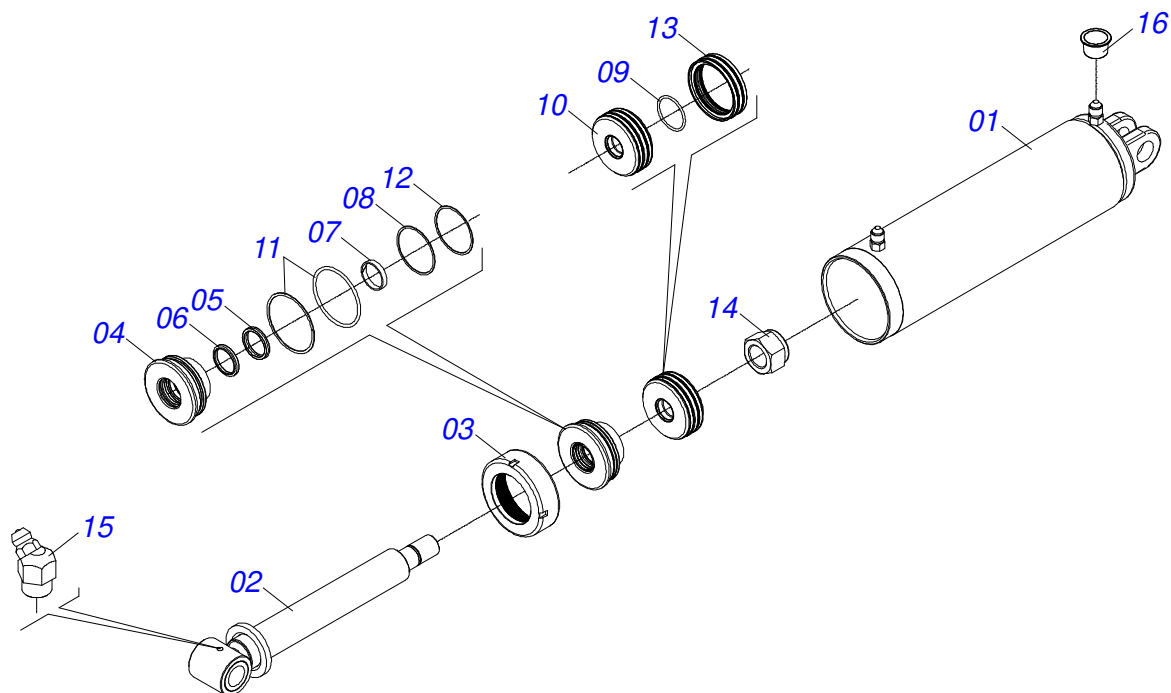


Item	Code	Description	See page	QT
01	0511064055	5" X 15" CYLINDER CASE		01
02	0511064056	BUSHING 2" X 14" TURNBUCLE		01
03	0502010382	5" END CAP		01
04	0502012227	50.80 X 127 RING SUPPORT		01
05	0503010039	D-2000 SCRAPER RING		01
06	0503010991	1870-2000-375-B GASKET		01
07	0503010952	W2-2250-500 RING		01
08	0503010351	2-425 N 3006-9B O'RING		01
09	0503011062	8-425 BACK-UP RING		01
10	0502010963	2.0" X 5.0" PISTON		01
11	0503010552	PACKING 3750-4250-625-B		02
12	0503010345	2-218 N 3006-9B O'RING		01
13	0503010974	W2-5000-500 RING		01
14	0503010817	1.1/4" SELF LOCKING NUT		01
15	0503010003	1845 GREASE FITTING		01
16	0503030385	CYLINDER PLUG N-002		02

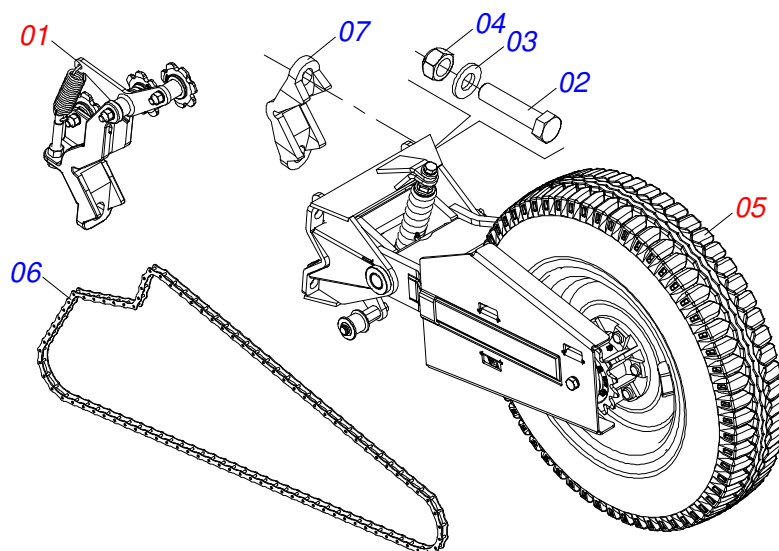


Item	Code	Description	See page	QT
01	0501058240	WHEEL FASTENER WITH TENSIONER	6	01
02	0503011119	7/8" X 6" BOLT		04
03	0501014251	FLAT WASHER		04
04	0503011254	7/8" HEX SELF ADJUSTING NUT		04
05	0501059909	CARRYING WHEELS SUPPORT	10	01
06	0503014887	2050 CHAIN X 80 LINK + REDUCTION		01
07	0502010584	CARRYING-WHEELS SUPPORT FIXER		01

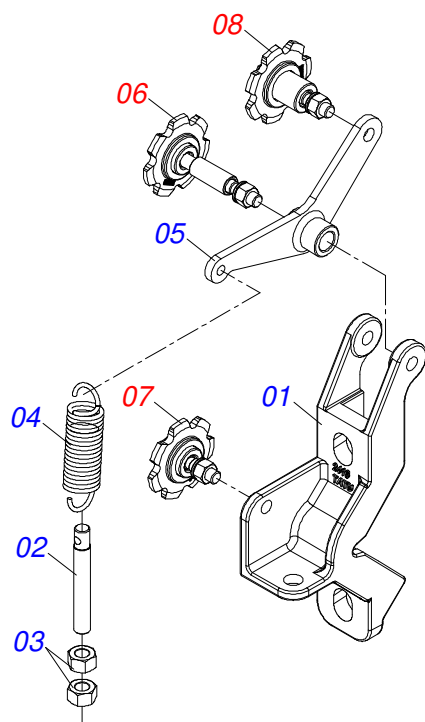


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8" NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	7	01
07	0501058244	WHEEL FIXED CHAIN TENSIONER	8	01
08	0501058242	WHEEL MOBILE CHAIN TENSIONER	9	01

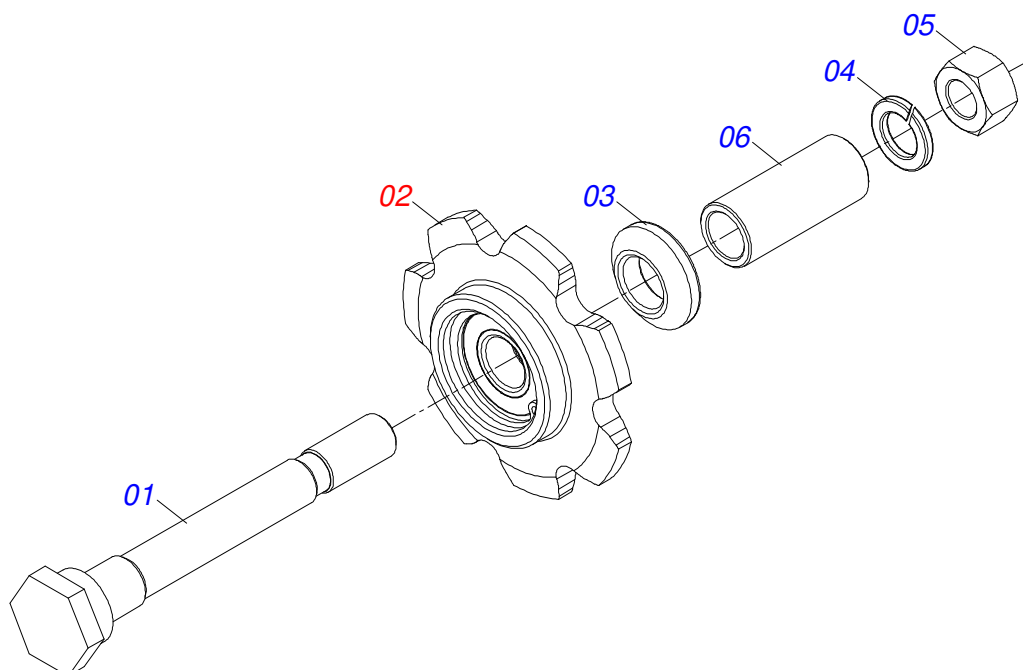


Item	Code	Description	See page	QT
01	0551018245	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0551018239	SLEEVE 19 X 13,50 X 45		01

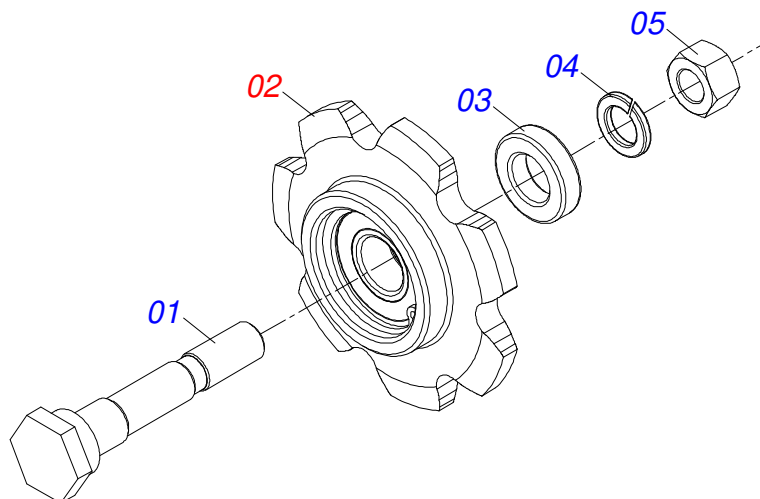


Item	Code	Description	See page	QT
01	0551018252	CHAIN TIGHTENER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

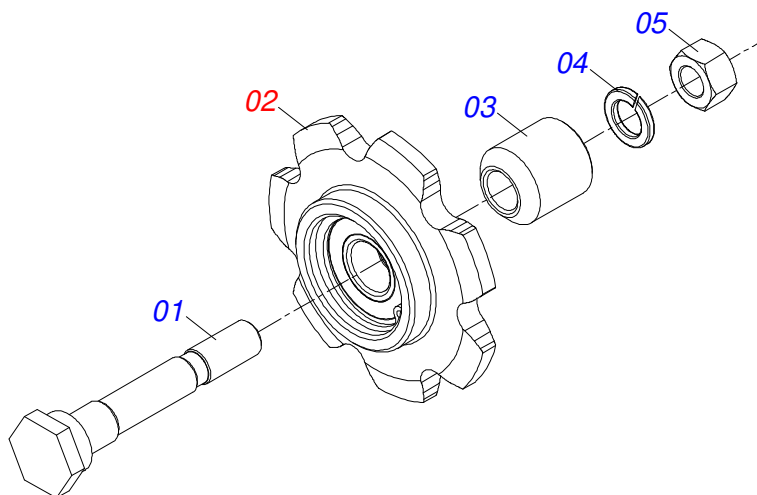


Item	Code	Description	See page	QT
01	0551018244	CHAIN UPPER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0591017923	GLOVE 15.30 X 30 X 32		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

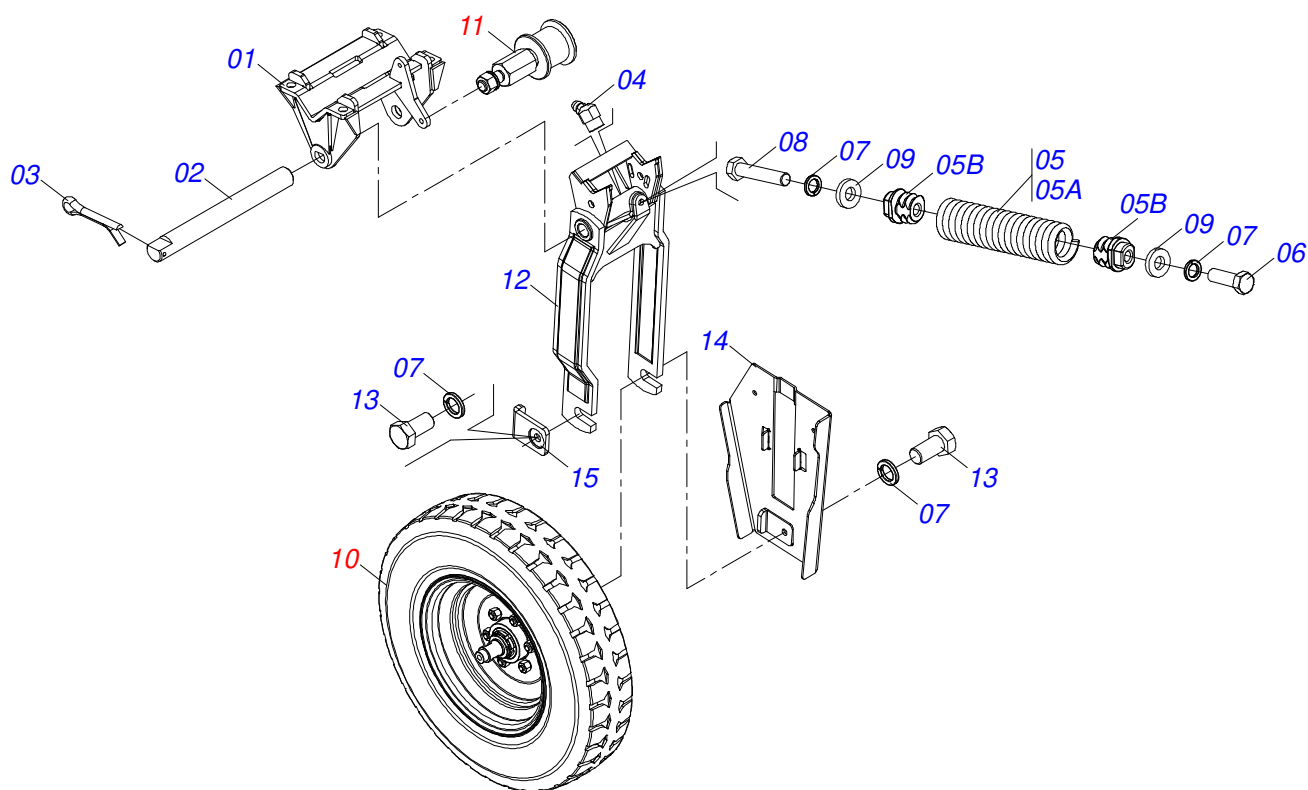


Item	Code	Description	See page	QT
01	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
02	0531016887	CARRYING WHEEL AXLE ARM		01
03	0503010523	1/4" X 2" COTTERPIN		01
04	0503010003	1845 GREASE FITTING		01
05	0511050681	TRACTION SPRING		01
05A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
05B	0561016062	SPRING HITCH		02
06	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
07	0503010027	5/8" SPRING WASHER		04
08	0503013030	5/8" X 3.1/4" BOLT		01
09	0551017715	FLAT WASHER		02
10	0511052770	WHEEL WITH TIRE	11	01
11	0501058241	WHEEL SUPPORT CHAIN TENSIONER	14	01
12	0521061565	WHEEL SUPPORT ARM		01
13	0503018981	BOLT		02
14	0521069983	WHEEL COVER		01
15	0591010589	BODY LOCK WHEEL		01

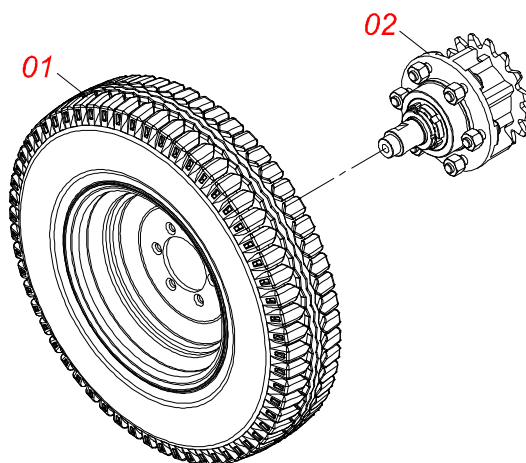


Item	Code	Description	See page	QT
01	0503062159	WHEEL WITH TIRE	12	01
02	0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	13	01

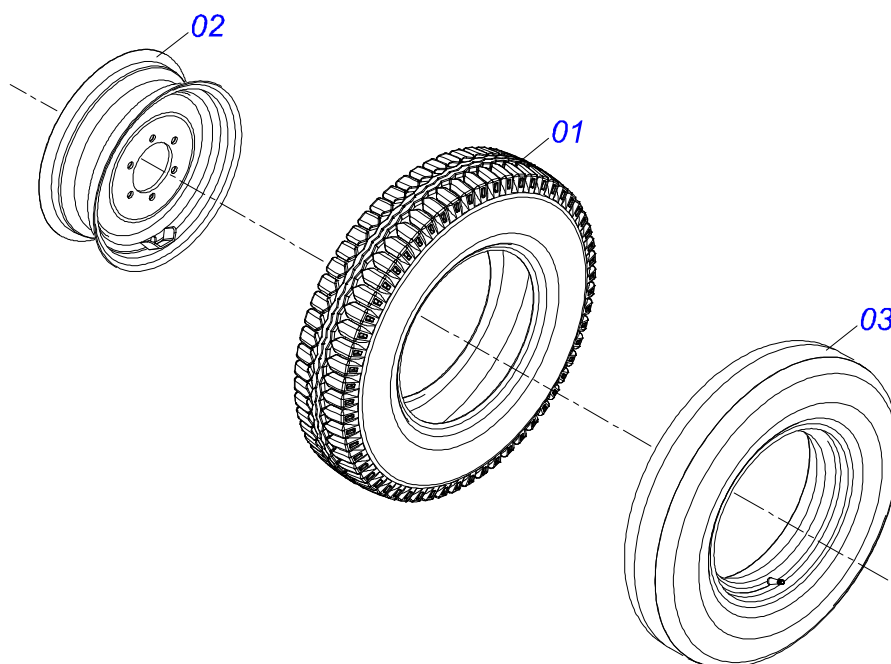


Item	Code	Description	See page	QT
01	0503012113	PLY TIRE		01
02	0503016517	WHEEL EI		01
03	0503010033	7.50 X 16 INNER TIRE		01

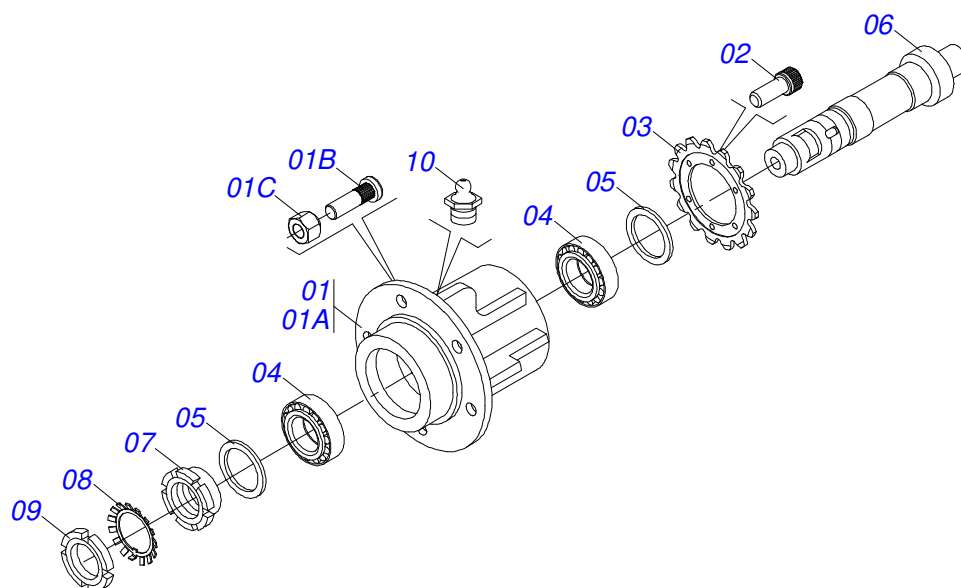

Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503012550	5/16" X 3/4" BOLT		06
03	0502011339	15Z GEAR P 1.25"		01
04	0503010328	25590/25523 ROLLER BEARING		02
05	0503010804	00547-B SEAL		02
06	0521012185	TRANSM AXLE CARRYING-WHEEL		01
07	0511015949	LOCK NUT		01
08	0503010329	LOCK WASHER		01
09	0503010330	KM 9 LOCKNUT		01
10	0503010002	1800 GREASE FITTING		01

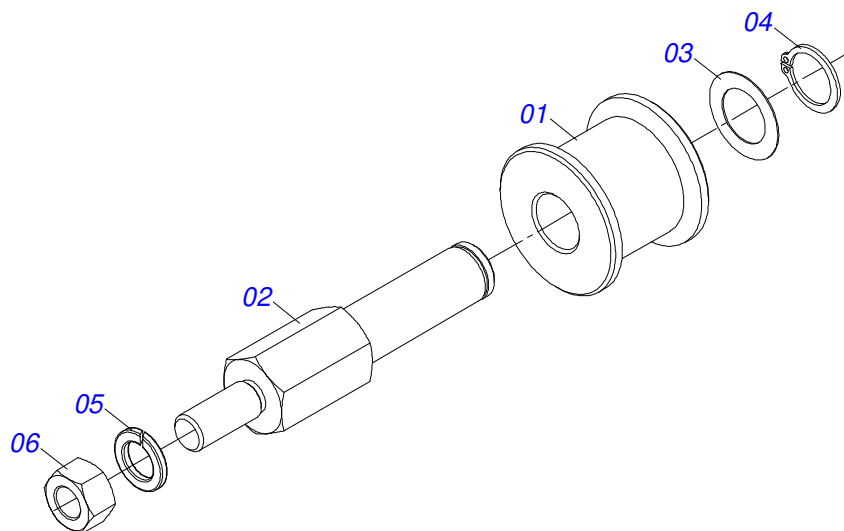

Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	FERT CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

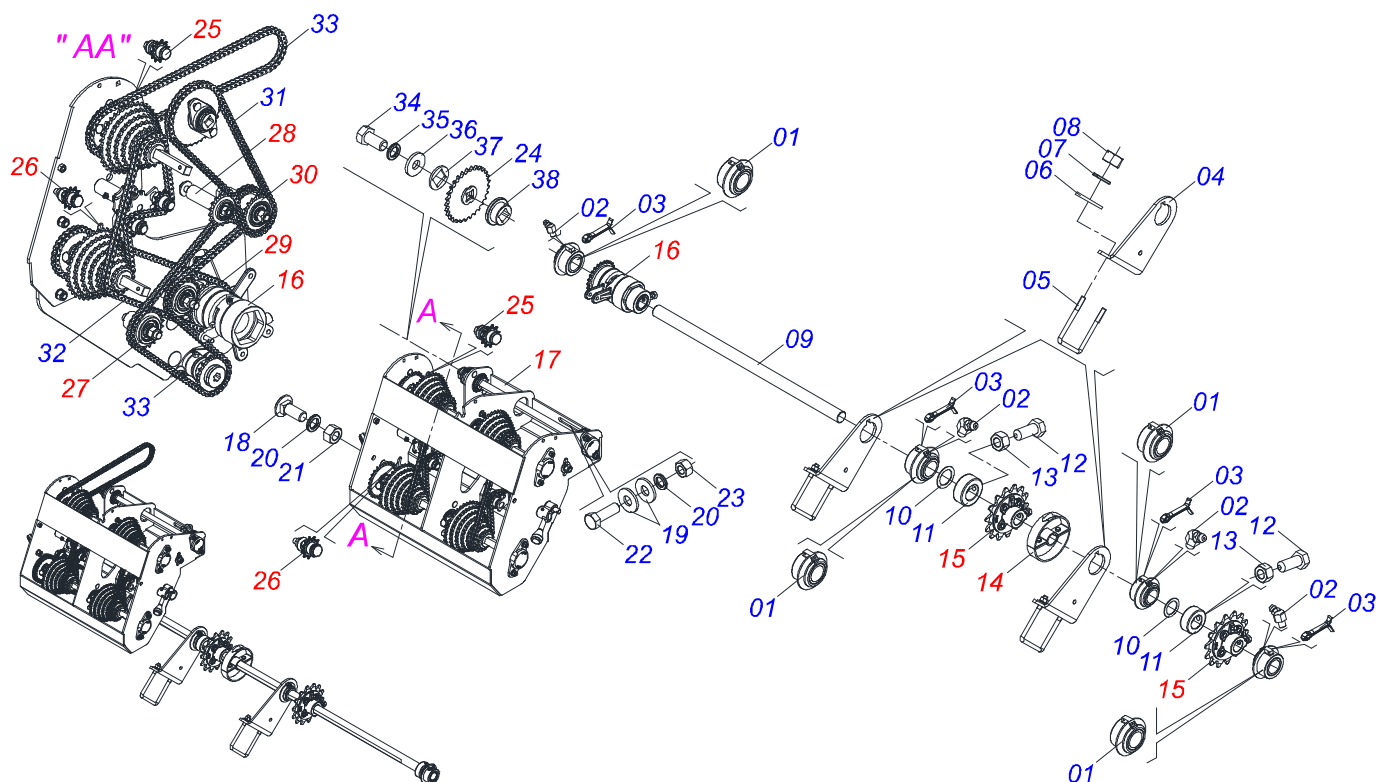


Item	Code	Description	See page	QT
01	0501110639	BEARING		04
02	0503011099	GREASE FITTING		04
03	0503010300	5/32" X 1" COTTERPIN		04
04	0551019114	MOTOR BEARING AXLE SUPPORT		02
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
06	0511017302	FLAT WASHER		04
07	0503010019	1/2" SPRING WASHER		04
08	0503010060	1/2" NUT		04
09	0561018351	2155 MOTOR SHAFT		01
10	0501018466	FLAT WASHER		02
11	0511015961	LOCK BUSHING		02
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		02
13	0503010060	1/2" NUT		02
14	0501052560	MOTOR AXLE SIGNAL	17	01
15	0511051434	TRANSMISSION ACTUATOR	18	02
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	19	01
17	0521043316	RIGHT GEAR BOX ASSY	20	01
18	0501010243	1/2" X 1-1/2" BOLT		03
19	0511017302	FLAT WASHER		04
20	0503010019	1/2" SPRING WASHER		05
21	0503012682	1/2" BSW NUT		03
22	0503010920	1/2" X 1.1/2" BOLT		02
23	0503010060	1/2" NUT		02
24	0521062072	33Z GEAR		01
25	0511054363	CHAIN TENSIONER	30	01
26	0501058234	LOWER CHAIN TENSIONER	31	01
27	0501058235	STRETCHER CURRENT TOP SEED 17Z	32	01
28	0501058236	BEARING WITH 21Z GEAR	33	01
29	0501058237	16Z GEAR BEARING	34	01
30	0501055112	MICRO GRANULATED CHAIN TENSIONER	35	01
31	0503012522	40-1 CHAIN X 85 LINK + MENDING		01



**PST4 - FRAME 4495 - CSU - WITH ELEVATION (UP TO
RIGHT TRANSMISSION ASSY - 4495**

Page 15
0511058970

Item	Code	Description	See page	QT
32	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
33	0503012718	40-1 CHAIN X 111 LINK + MENDING		02
34	0503010256	3/8" X 3/4" BOLT		01
35	0503010025	3/8" SPRING WASHER		01
36	0501010984	FLAT WASHER		01
37	0501010637	FLAT WASHER		01
38	0503030303	SUPPORT WASHER		02

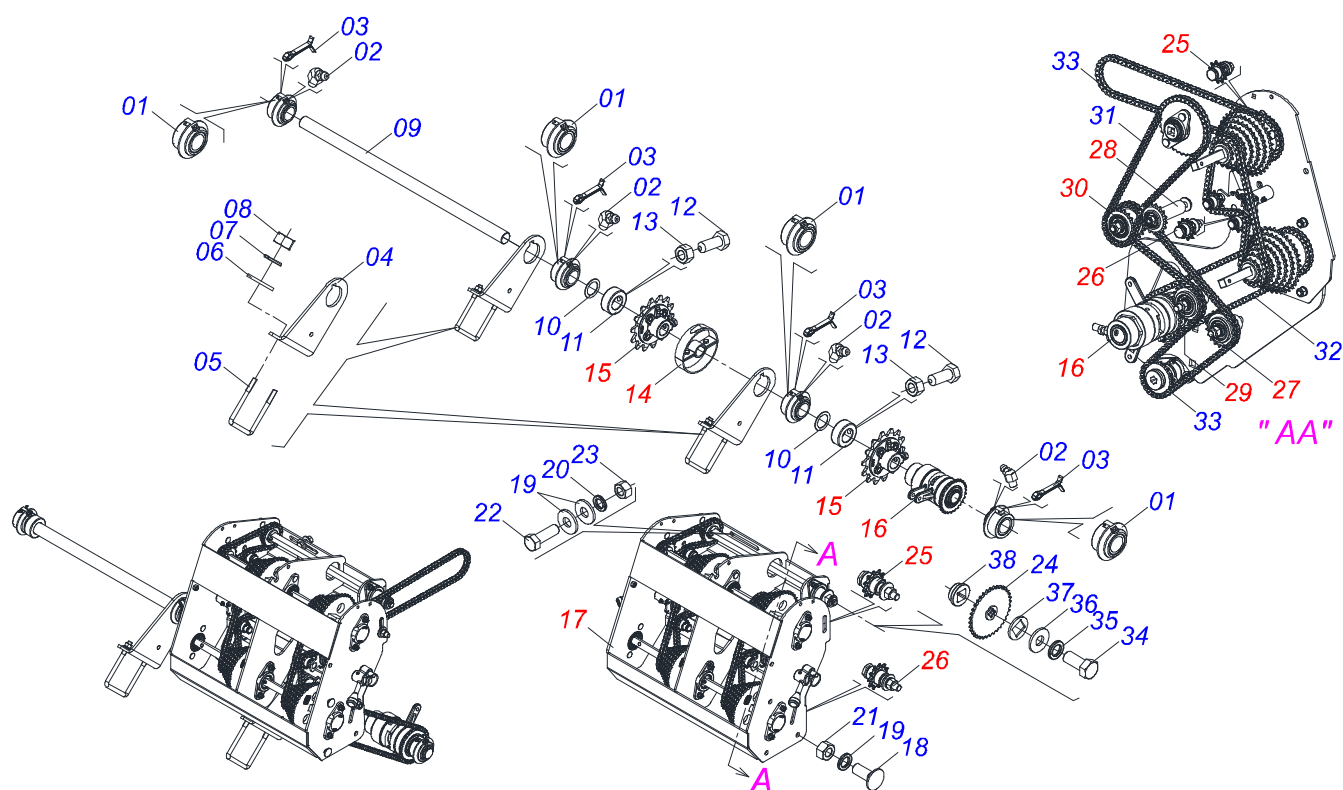


Item	Code	Description	See page	QT
01	0501110639	BEARING		04
02	0503011099	GREASE FITTING		04
03	0503010300	5/32" X 1" COTTERPIN		04
04	0551019114	MOTOR BEARING AXLE SUPPORT		02
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
06	0511017302	FLAT WASHER		04
07	0503010019	1/2" SPRING WASHER		04
08	0503010060	1/2" NUT		04
09	0561018351	2155 MOTOR SHAFT		01
10	0501018466	FLAT WASHER		02
11	0511015961	LOCK BUSHING		02
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		02
13	0503010060	1/2" NUT		02
14	0501052560	MOTOR AXLE SIGNAL	17	01
15	0511051434	TRANSMISSION ACTUATOR	18	02
16	0511047070	LEFT SIDE TRANSMISSION ACTUATOR		01
17	0521043317	LEFT GEAR BOX ASSY	21	01
18	0501010243	1/2" X 1-1/2" BOLT		03
19	0511017302	FLAT WASHER		04
20	0503010019	1/2" SPRING WASHER		05
21	0503012682	1/2" BSW NUT		03
22	0503010920	1/2" X 1.1/2" BOLT		02
23	0503010060	1/2" NUT		02
24	0521062072	33Z GEAR		01
25	0511054363	CHAIN TENSIONER	30	01
26	0501058234	LOWER CHAIN TENSIONER	31	01
27	0501058235	STRETCHER CURRENT TOP SEED 17Z	32	01
28	0501058236	BEARING WITH 21Z GEAR	33	01
29	0501058237	16Z GEAR BEARING	34	01
30	0501055112	MICRO GRANULATED CHAIN TENSIONER	35	01
31	0503012522	40-1 CHAIN X 85 LINK + MENDING		01




**PST4 - FRAME 4495 - CSU - WITH ELEVATION (UP TO
LEFT TRANSMISSION ASSY - 4495**

Page 16
0511058971


Item	Code	Description	See page	QT
32	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
33	0503012718	40-1 CHAIN X 111 LINK + MENDING		02
34	0503010256	3/8" X 3/4" BOLT		01
35	0503010025	3/8" SPRING WASHER		01
36	0501010984	FLAT WASHER		01
37	0501010637	FLAT WASHER		01
38	0503030303	SUPPORT WASHER		02

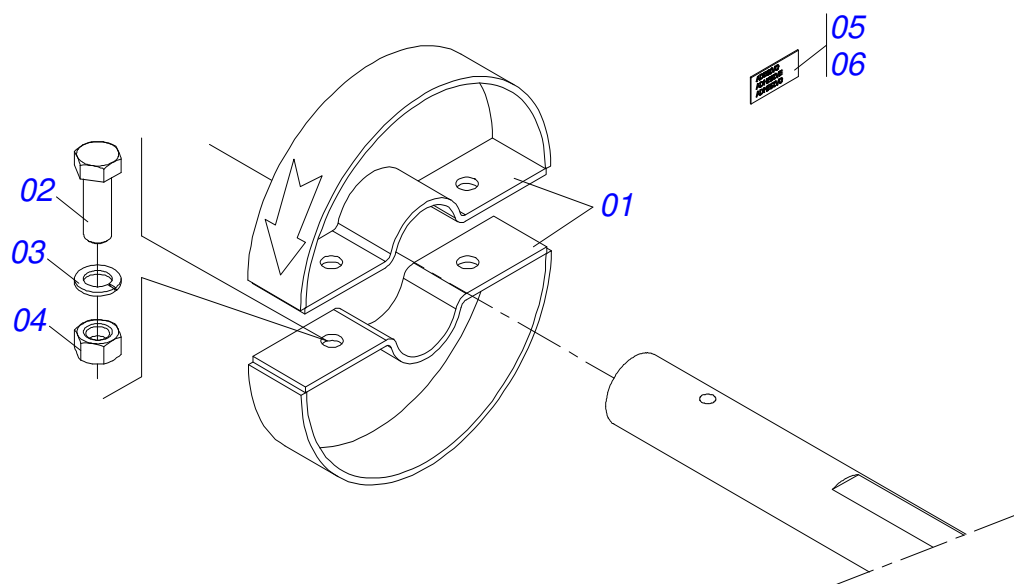


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ADHESIVE LABEL		01

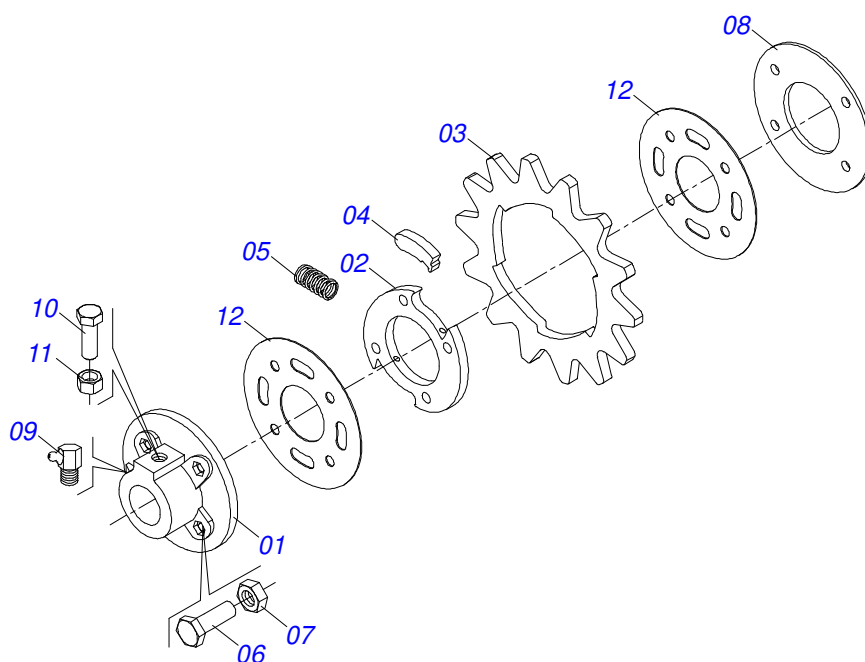


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

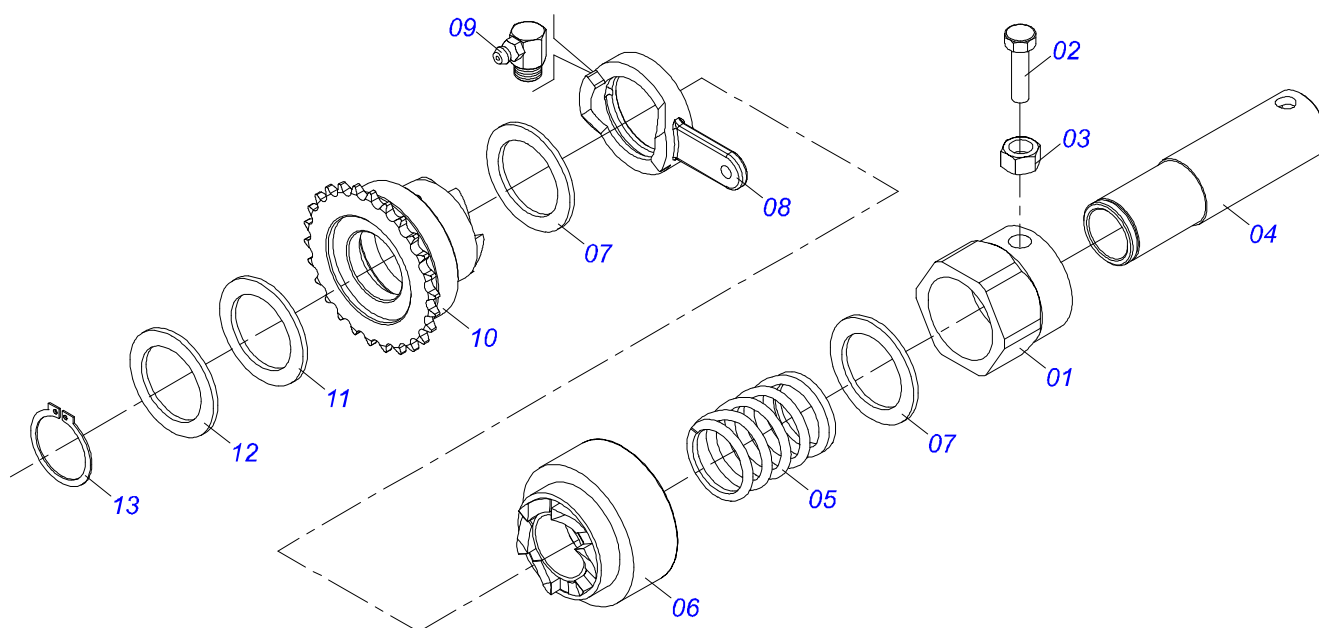


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

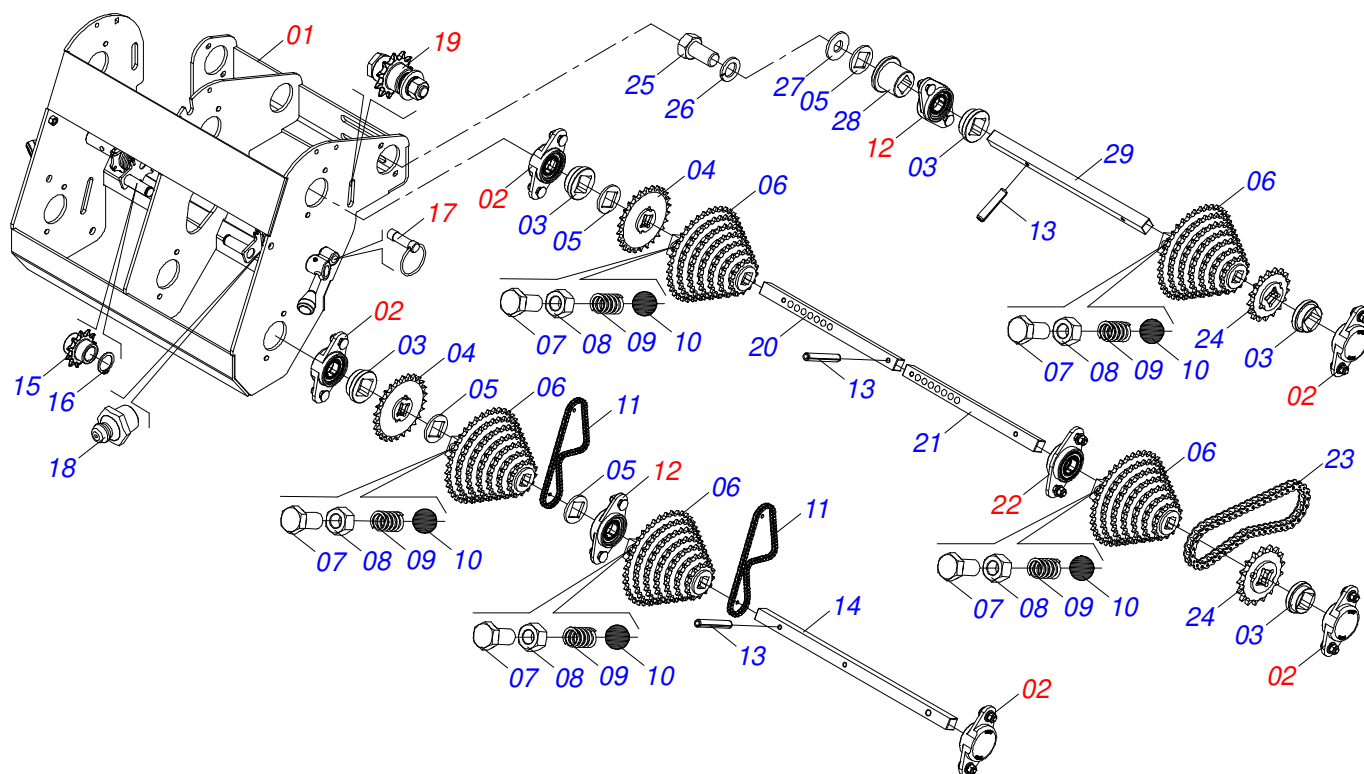


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	22	01
02	0511059266	CLOSED BEARING	24	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN AXLE CONE		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2" NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	25	02
13	0503010292	0.2" X 1.6" SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	27	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	28	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	29	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8" SPRING WASHER		01
27	0501010984	FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

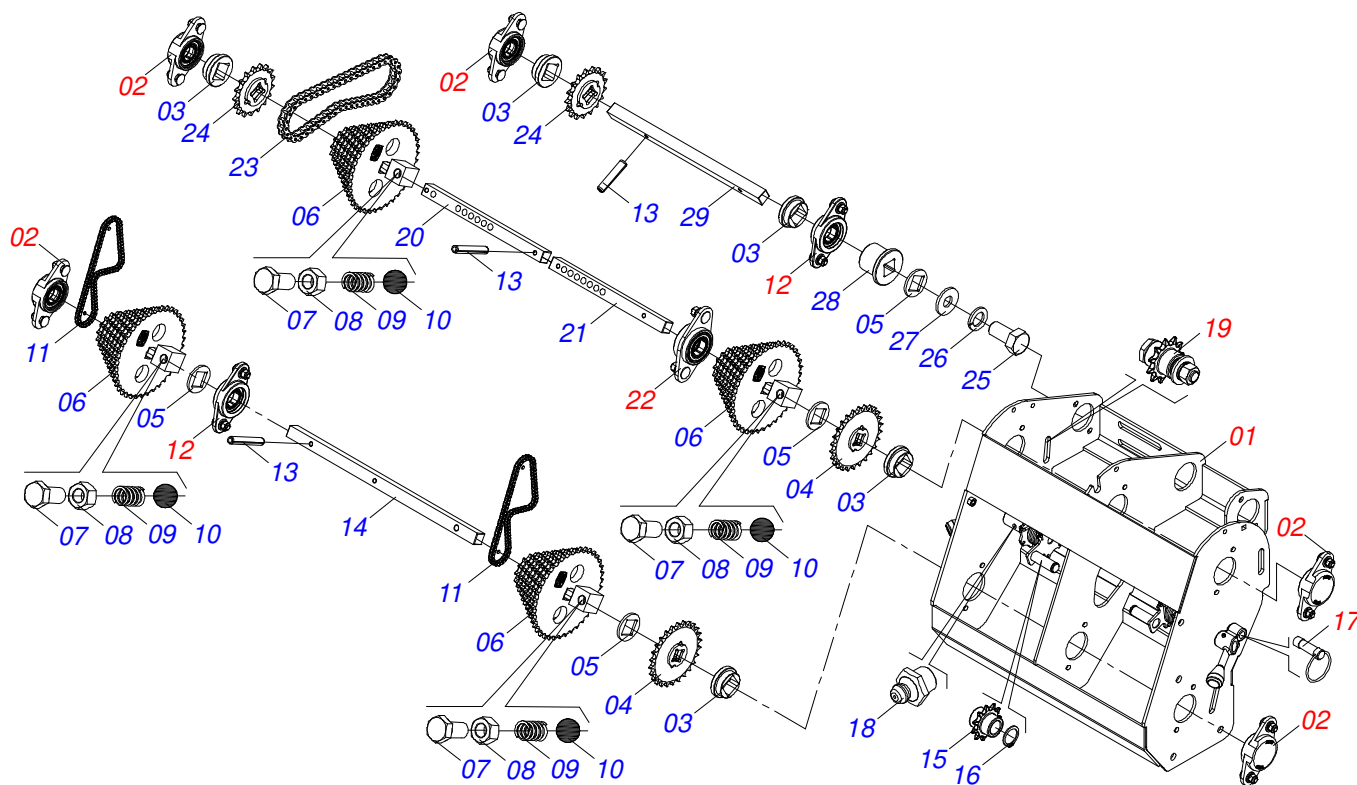


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	23	01
02	0511059266	CLOSED BEARING	24	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN AXLE CONE		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2" NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	25	02
13	0503010292	0.2" X 1.6" SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	27	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	28	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	29	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8" SPRING WASHER		01
27	0501010984	FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

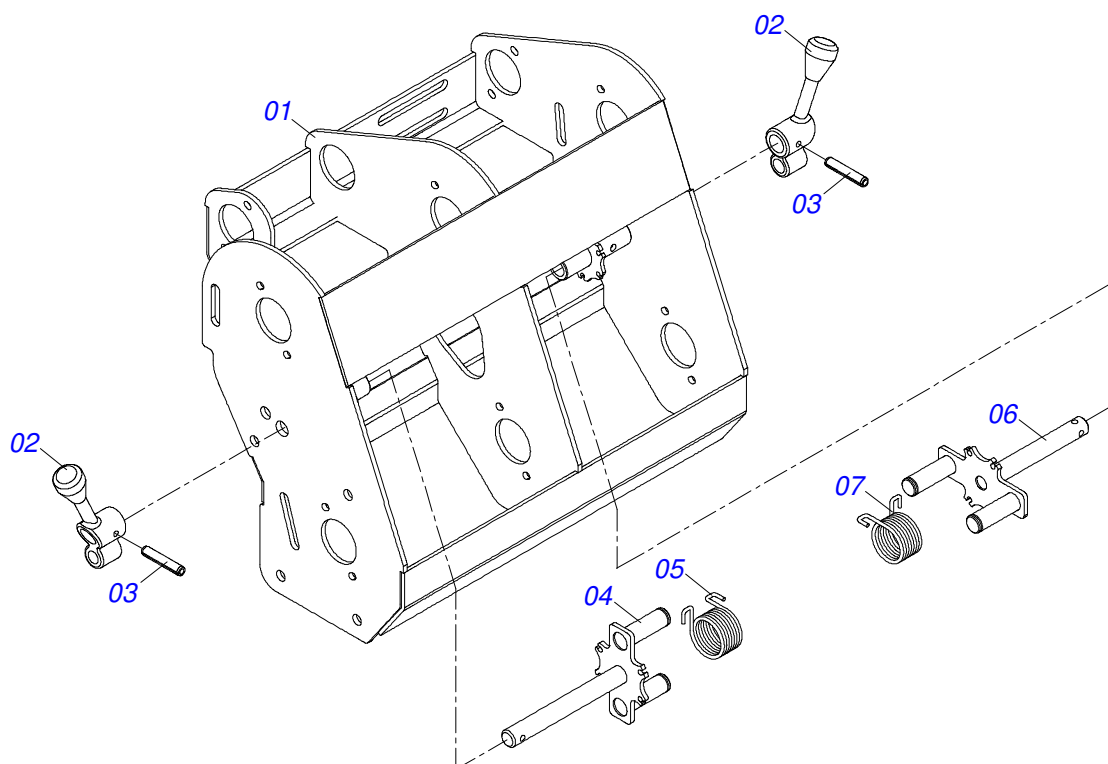


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

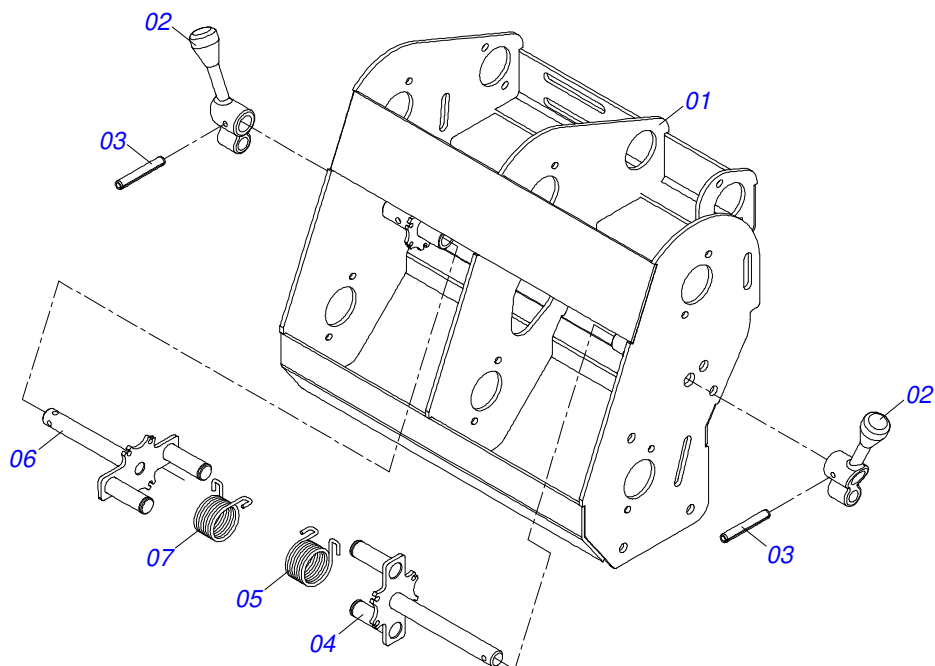


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

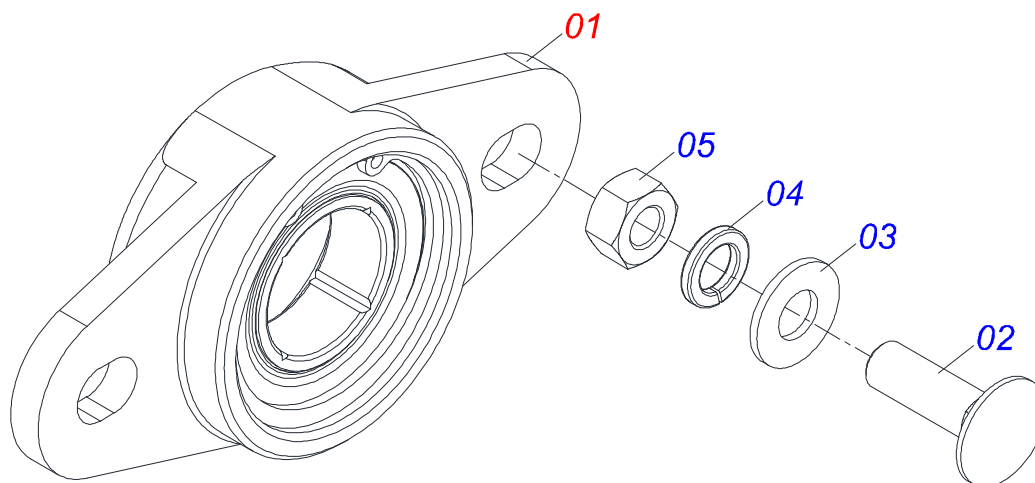


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING		01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

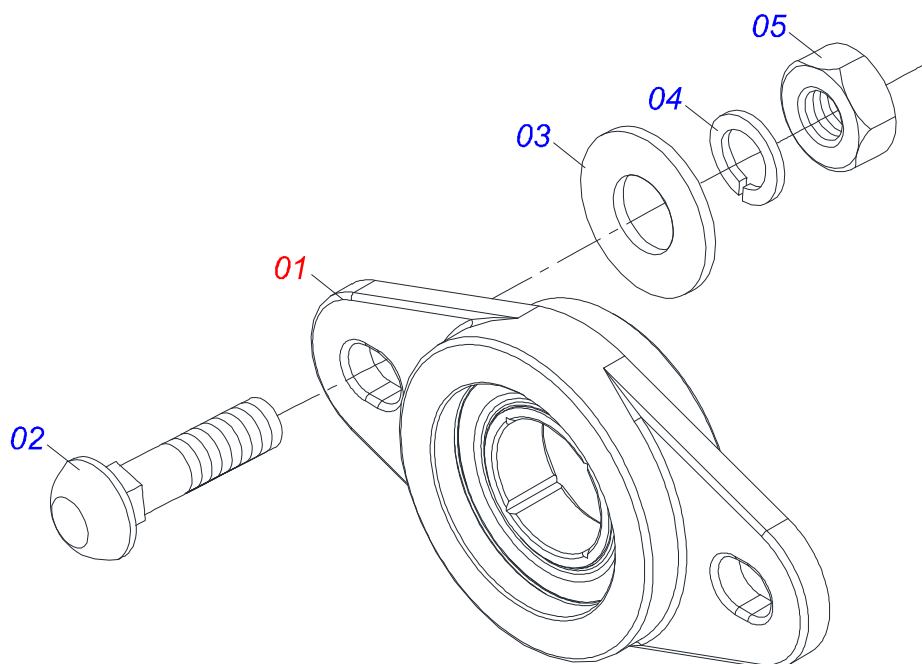


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	26	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

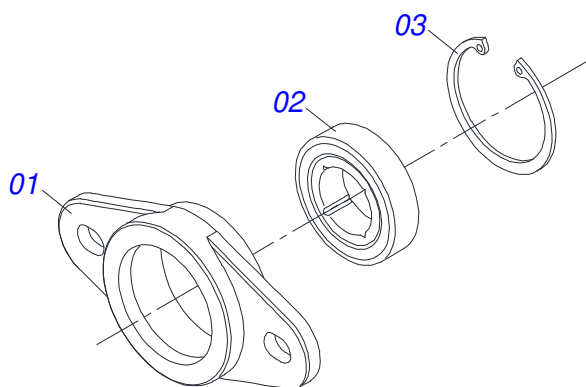


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

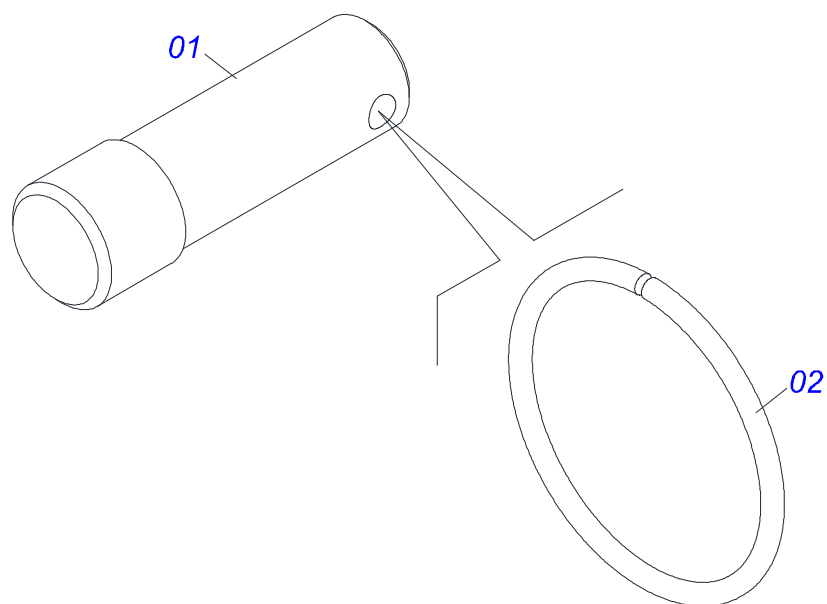


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

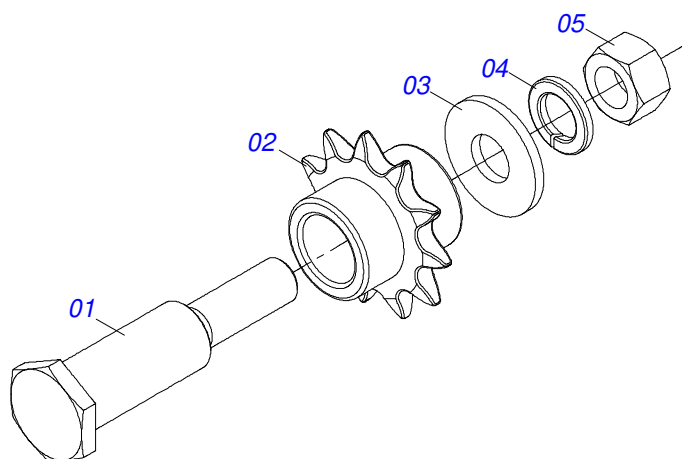


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

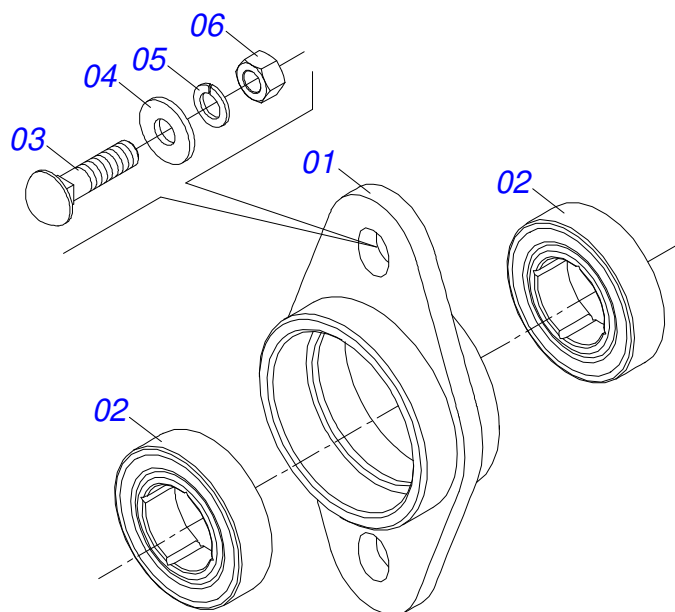


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER		02
06	0503010337	5/16" NUT		02

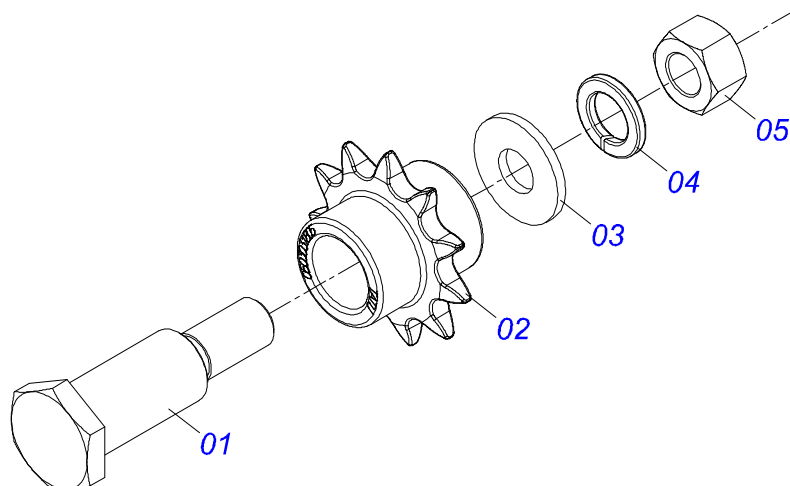


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

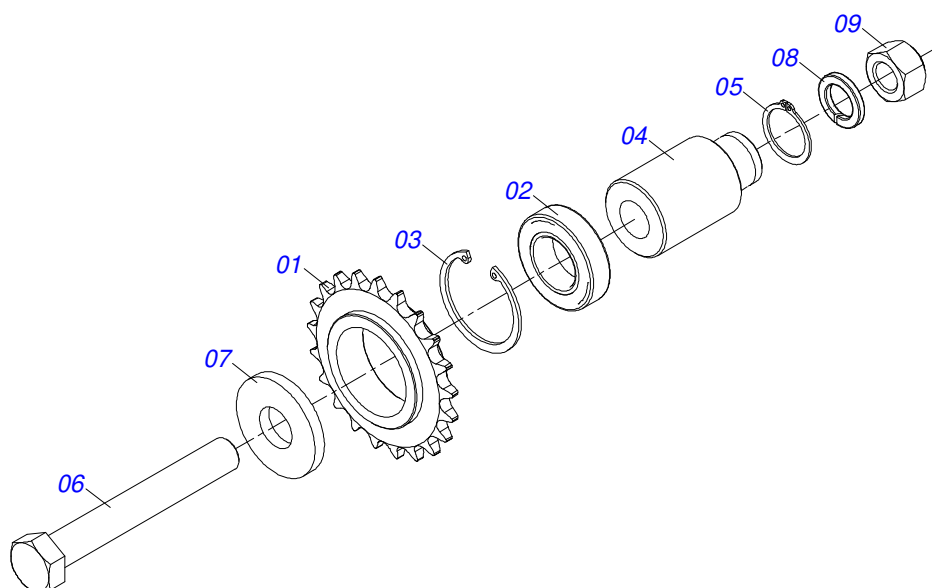


Item	Code	Description	See page	QT
01	0511062169	21Z P 1/2" GEAR		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0551019171	CHAIN TIGHTENER AXLE		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0501010163	5/8" X 4-1/2" BOLT		01
07	0501012140	FLAT WASHER		01
08	0503010027	5/8" SPRING WASHER		01
09	0503010013	5/8" NUT		01

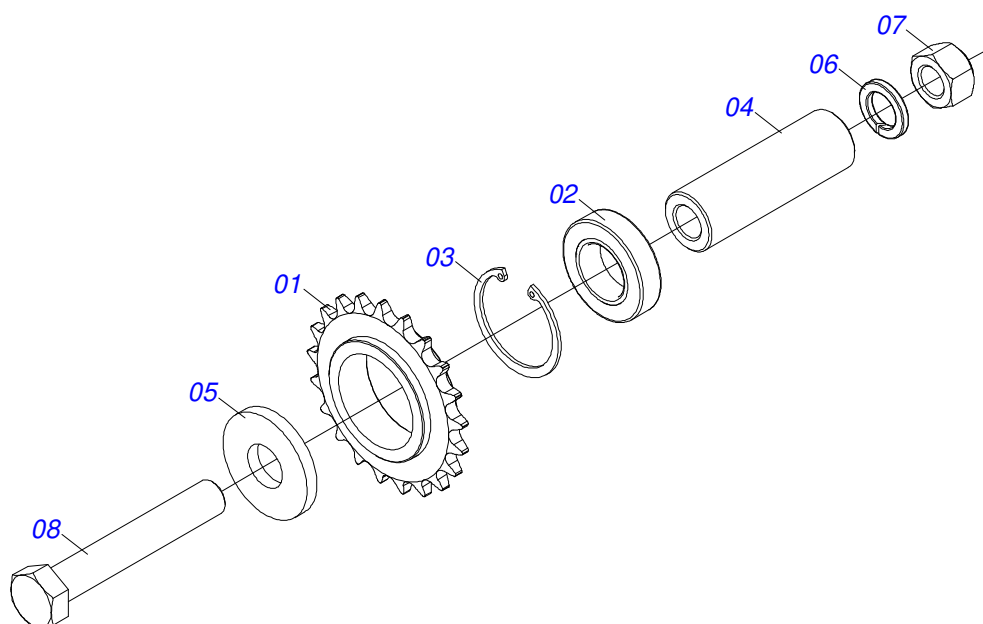


Item	Code	Description	See page	QT
01	0502012367	17Z X P 1/2" GEAR INTERM		01
02	0503012882	BEARING		01
03	0503011945	503050 CLAMPING RING (FOR AXLE)		01
04	0551019173	CHAIN SLEEVE TENSIONER		01
05	0511017302	FLAT WASHER		01
06	0503010019	1/2" SPRING WASHER		01
07	0503010060	1/2" NUT		01
08	0503011411	1/2" X 5-1/2" BOLT		01

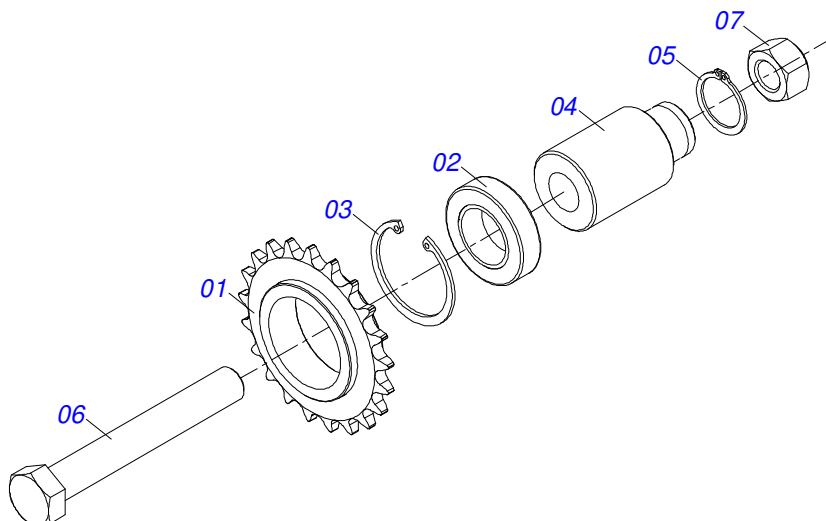


Item	Code	Description	See page	QT
01	0511062169	21Z P 1/2" GEAR		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0551019171	CHAIN TIGHTENER AXLE		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0501010163	5/8" X 4-1/2" BOLT		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01

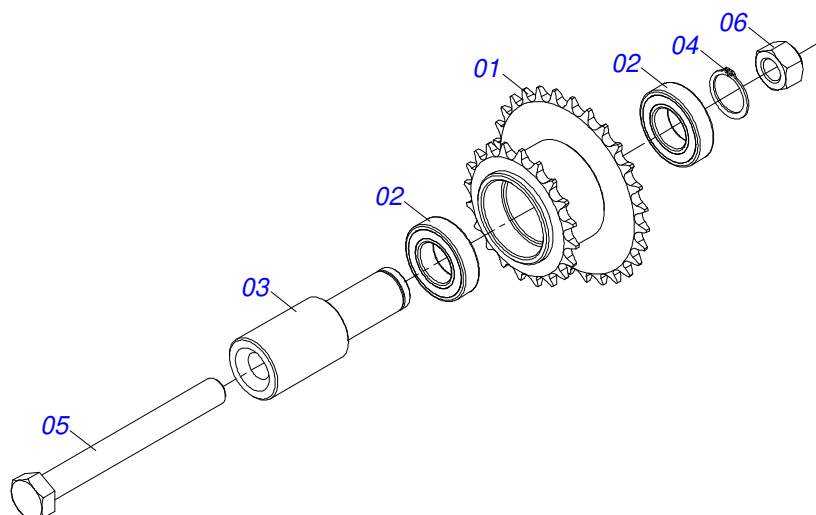


Item	Code	Description	See page	QT
01	0511069680	20Z X 28Z DOBLE GEAR		01
02	0503011410	ROLLER BEARING		02
03	0551019174	DOBLE GEAR AXLE		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		01
06	0503012412	5/8 UNC SELF LOCKING NUT		01

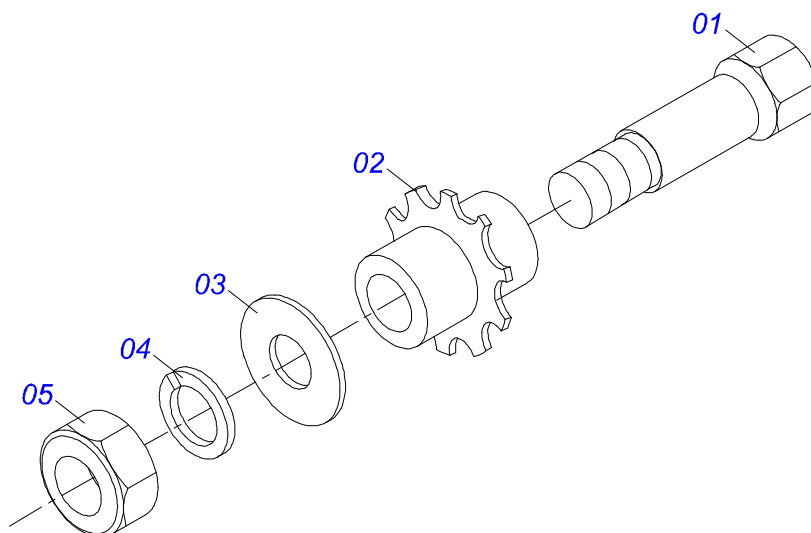


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

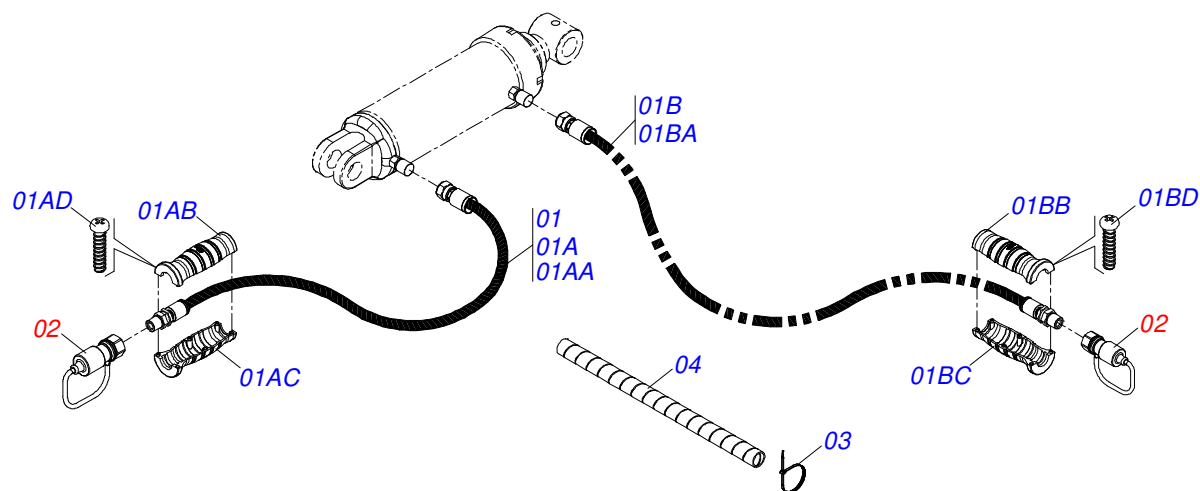

Item	Code	Description	See page	QT
01	0511057070	HOSE KIT HYDRAULIC		01
01A	0521052285	TC-TM HOSE ASSY		01
01AA	0501080422	HOSE 3/8 X 4000 TC-TM		01
01AB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
01AC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
01AD	0503018952	PLASTIC BOLT		06
01B	0521052287	TC-TM HOSE ASSY		01
01BA	0501080446	3/8 X" 169" TC-TM HOSE ASSY		01
01BB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
01BC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
01BD	0503018952	PLASTIC BOLT		06
02	0501053834	MALE QUICK COUPLER	37	02
03	0503013100	NYLON CLAMP		02
04	0581010091	SPRING PROTECTION PLASTIC HOSE		01

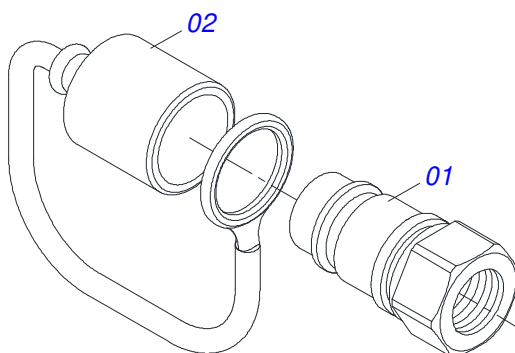

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

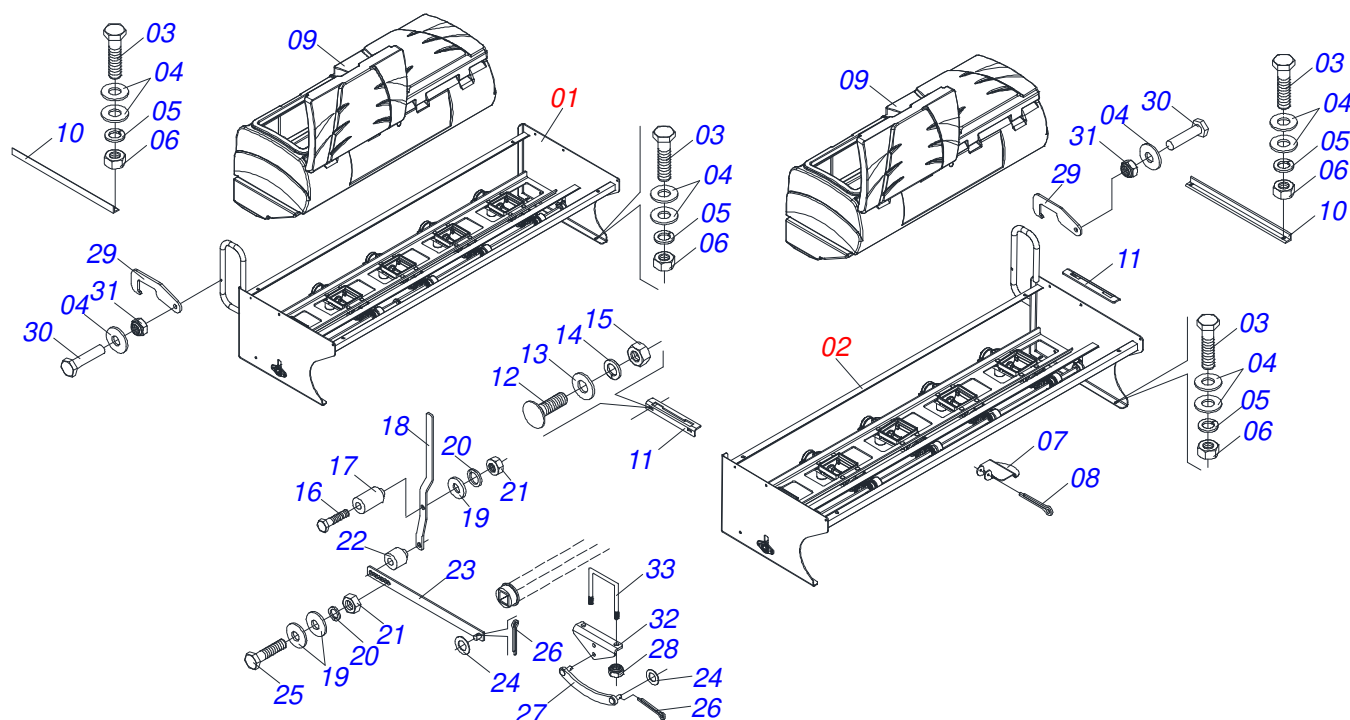


Item	Code	Description	See page	DIR	ESQ
01	0511053240	RIGHT SILO SUPPORT WITH DISTRIBUTOR 10	39	01	00
02	0511053241	LEFT SILO SUPPORT WITH DISTRIBUTOR 10	40	00	01
03	0503010849	3/8" X 1-1/2" BOLT		08	08
04	0501010984	FLAT WASHER		17	17
05	0503010025	3/8" SPRING WASHER		08	08
06	0503010026	3/8" NUT		08	08
07	0571010590	FERTILIZER SIDE COVER		05	05
08	0503010362	1/8" X 1.1/4" COTTERPIN		05	05
09	0503061985	FERTILIZER HOPPER WITH 5 TRUNNELS		01	01
10	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		02	02
11	0551019156	GEAR BOX LEVER LOCK		01	01
12	0503011953	5/16" X 1" BOLT		02	02
13	0501010694	FLAT WASHER		02	02
14	0503010179	LOCK WASHER		02	02
15	0503010337	5/16" NUT		02	02
16	0503010847	1/2" X 3.1/4" BOLT		01	01
17	0551019168	SLEEVE		01	01
18	0551019160	LEVER		01	01
19	0511017302	FLAT WASHER		03	03
20	0503010019	1/2" SPRING WASHER		02	02
21	0503010060	1/2" NUT		02	02
22	0551019167	SLEEVE UNION		01	01
23	0511069676	INNER LEVER		01	01
24	0501013518	FLAT WASHER		02	02
25	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		01	01
26	0503010140	1/8" X 3/4" COTTERPIN		03	03
27	0511069678	LH LOWER LEVER		02	02
28	0503011336	1/2" HEX SELF ADJUSTING NUT		02	02
29	0551019115	LOCKING PLATFORM FIXATION		01	01
30	0501010096	3/8" X 2" BOLT		01	01
31	0503013357	3/8" SELF-ADJUSTING NUT		01	01




**PST4 - FRAME 4495 - CSU - WITH ELEVATION (UP TO
SET SUPPORT RIGHT LEFT**

Page 38
0511057564


Item	Code	Description	See page	DIR	ESQ
32	0551019159	LEVER FIXER BODY		01	01
33	0561016468	FASTENER		01	01

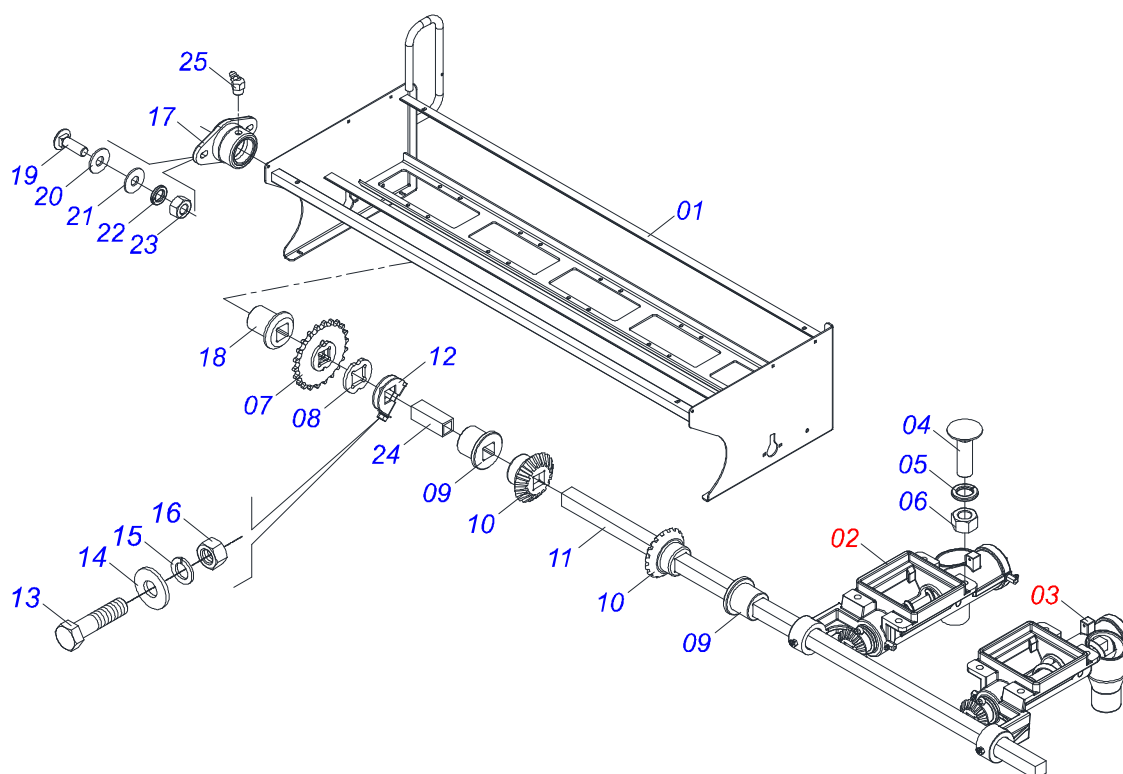


Item	Code	Description	See page	QT
01	0521064058	FERTILIZER BEAN RIGHT SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	41	03
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	42	02
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0521014167	CONE LOCK		01
09	0503030275	AGRICULTURAL BEARING		05
10	1902010685	18Z CONICAL GEAR		05
11	0571013830	SQUARE SHAFT		01
12	0521010691	AXLE FASTENER		02
13	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
14	0501010694	FLAT WASHER		02
15	0503011441	SPRING WASHER		02
16	0503010144	1/4" NUT		02
17	0501110392	SILO SUPPORT BEARING		01
18	0521012485	GEAR BOX BEARING AGRICUTURAL		01
19	0503011953	5/16" X 1" BOLT		02
20	0501010694	FLAT WASHER		02
21	0521011039	FLAT WASHER		02
22	0503011444	SPRING WASHER		02
23	0503010337	5/16" NUT		02
24	0551018055	22,65 X 60 SLEEVE		01
25	0503010003	1845 GREASE FITTING		01

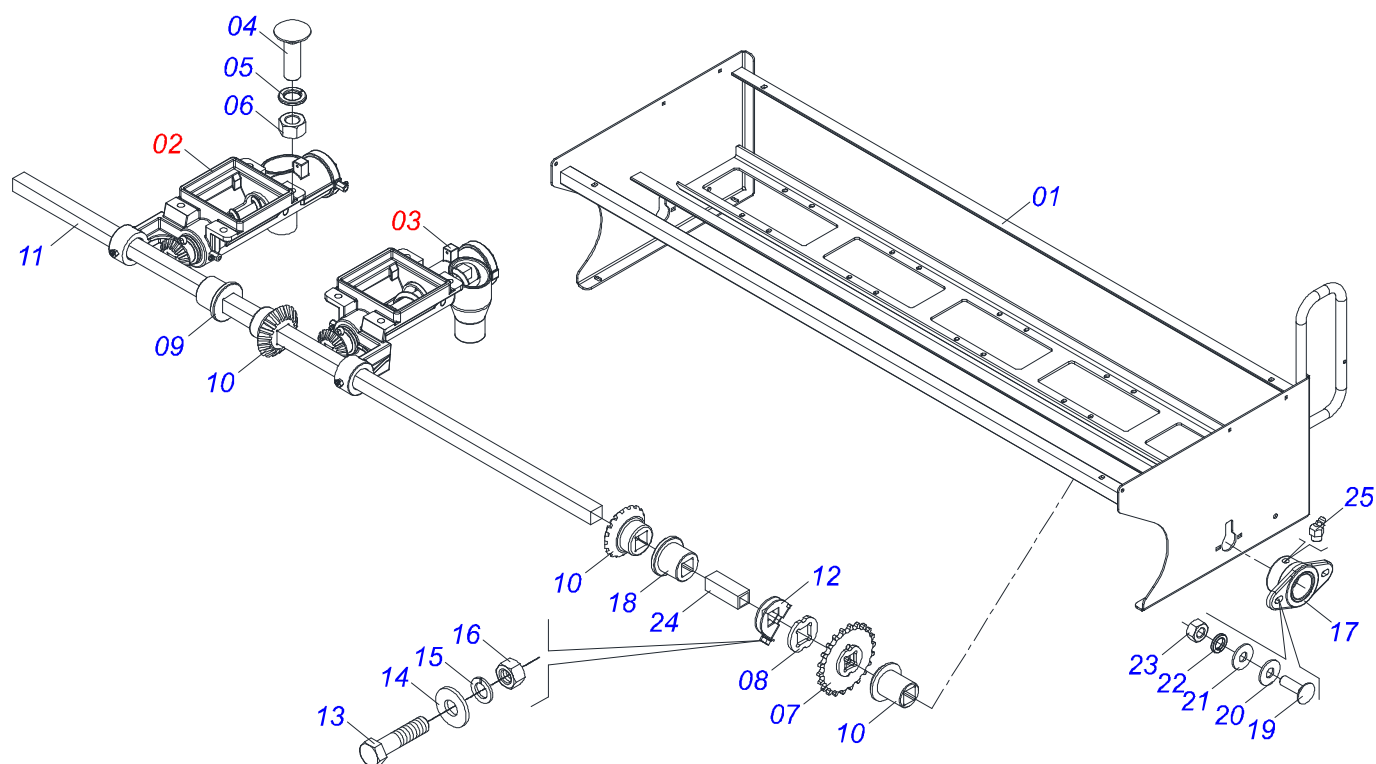


Item	Code	Description	See page	QT
01	0521064059	FERTILIZER BEAN LEFT SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	41	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	42	03
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0521014167	CONE LOCK		01
09	0503030275	AGRICULTURAL BEARING		05
10	1902010685	18Z CONICAL GEAR		05
11	0571013830	SQUARE SHAFT		01
12	0521010691	AXLE FASTENER		02
13	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
14	0501010694	FLAT WASHER		02
15	0503011441	SPRING WASHER		02
16	0503010144	1/4" NUT		02
17	0501110392	SILO SUPPORT BEARING		01
18	0521012485	GEAR BOX BEARING AGRICUTURAL		01
19	0503011953	5/16" X 1" BOLT		02
20	0501010694	FLAT WASHER		02
21	0521011039	FLAT WASHER		02
22	0503011444	SPRING WASHER		02
23	0503010337	5/16" NUT		02
24	0551018055	22,65 X 60 SLEEVE		01
25	0503010003	1845 GREASE FITTING		01

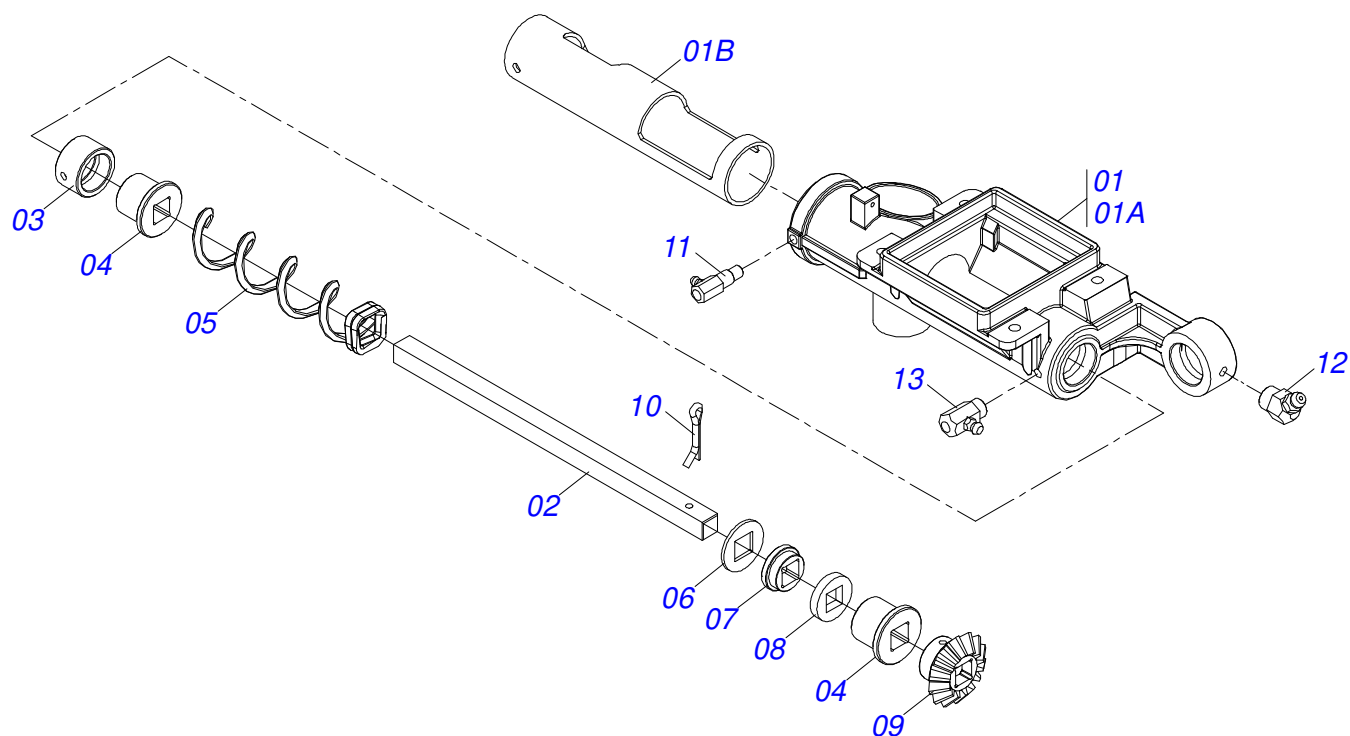


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

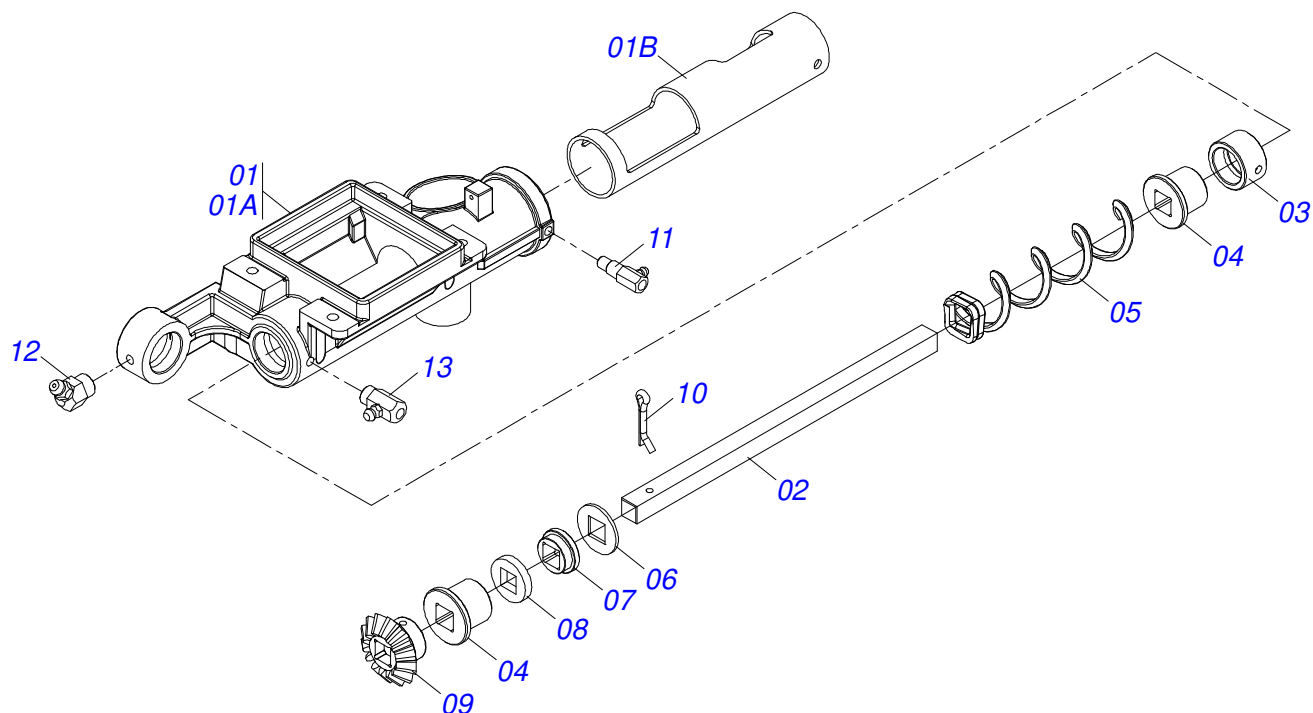


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

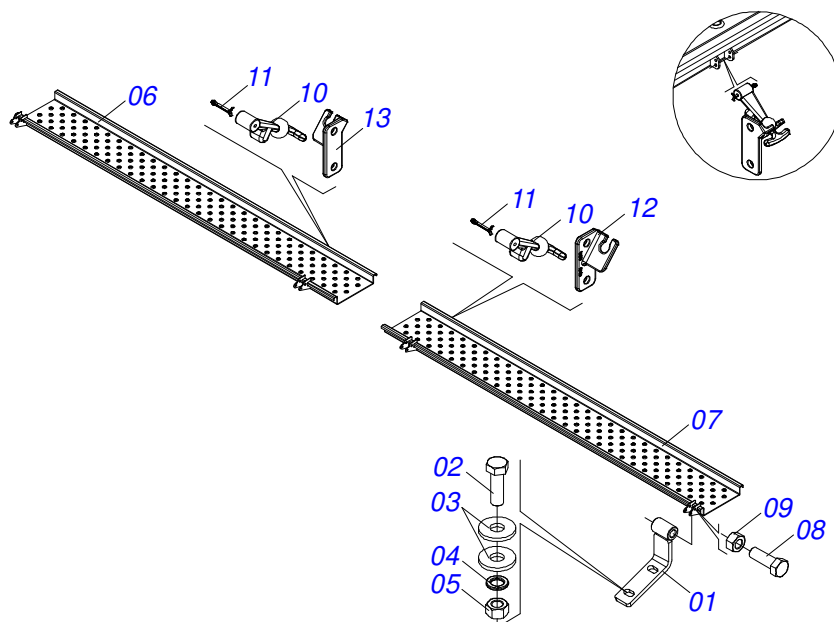


Item	Code	Description	See page	QT
01	0511069661	PLATFORM SUPPORT PIVOT	04	
02	0503010849	3/8" X 1-1/2" BOLT	08	
03	0501010984	FLAT WASHER	16	
04	0503010025	3/8" SPRING WASHER	08	
05	0503010026	3/8" NUT	08	
06	0521062237	RIGHT PLATAFORM	01	
07	0521062238	LEFT PLATAFORM	01	
08	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	04	
09	0503011336	1/2" HEX SELF ADJUSTING NUT	04	
10	0503011333	COVER FIXER	02	
11	0503010274	5/32"X 2" COTTERPIN	02	
12	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
13	0502012739	PLATFORM LEFT FIXER SUPPORT	01	

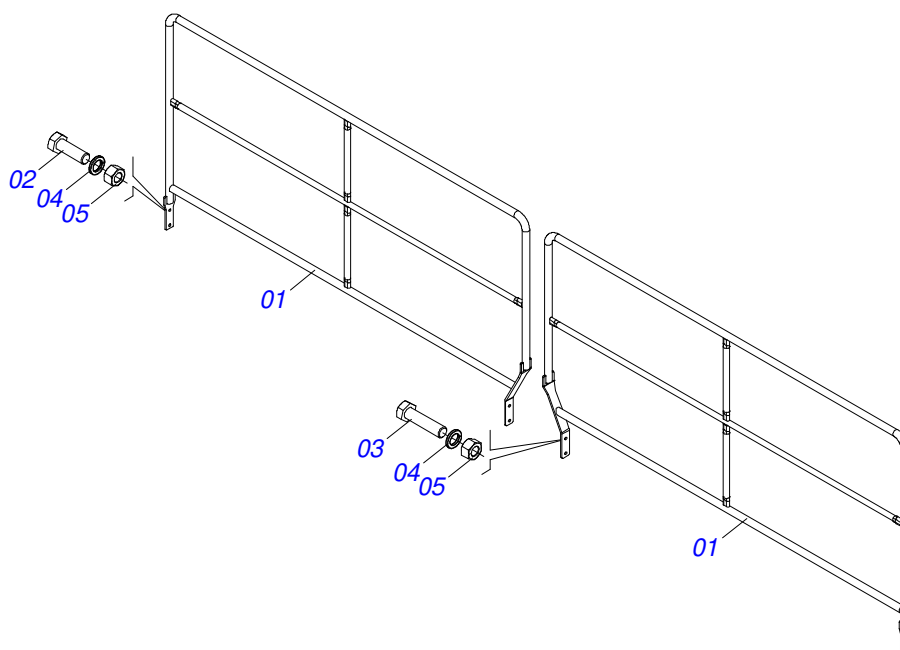


Item	Code	Description	See page	QT
01	0521062239	HANDRAIL		02
02	0503010395	1/2" X 1-1/4" BOLT		04
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08

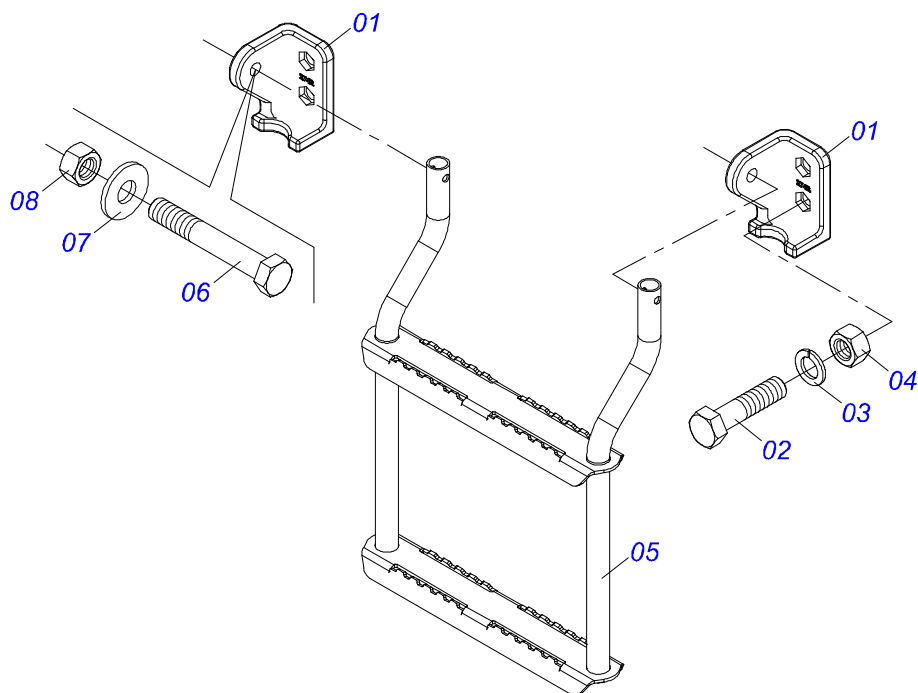


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8" SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	FLAT WASHER	02	
08	0503013357	3/8" SELF-ADJUSTING NUT	02	

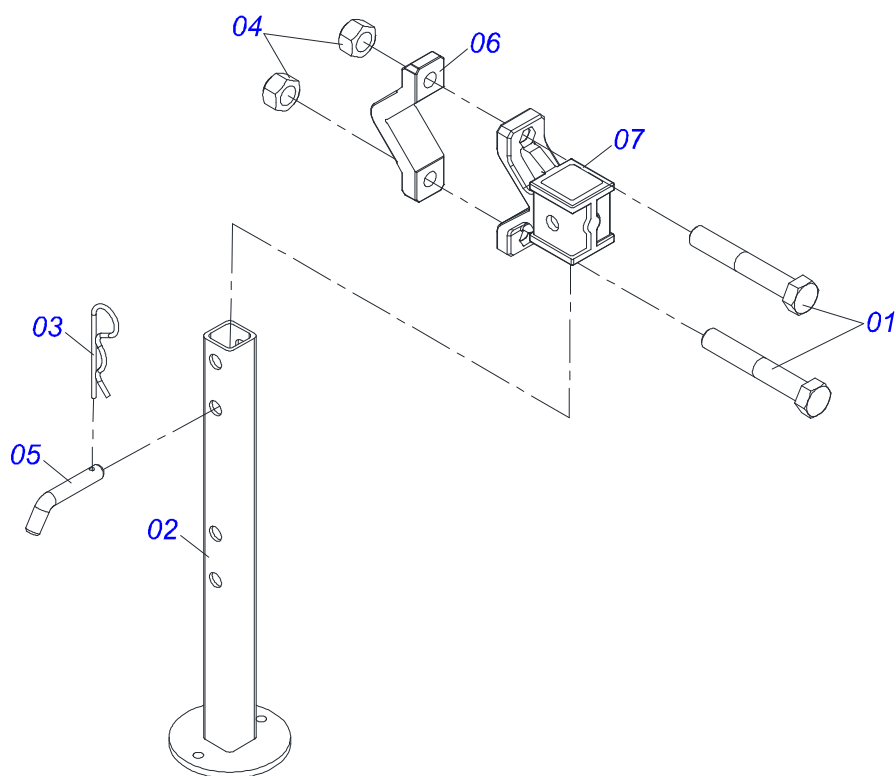


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

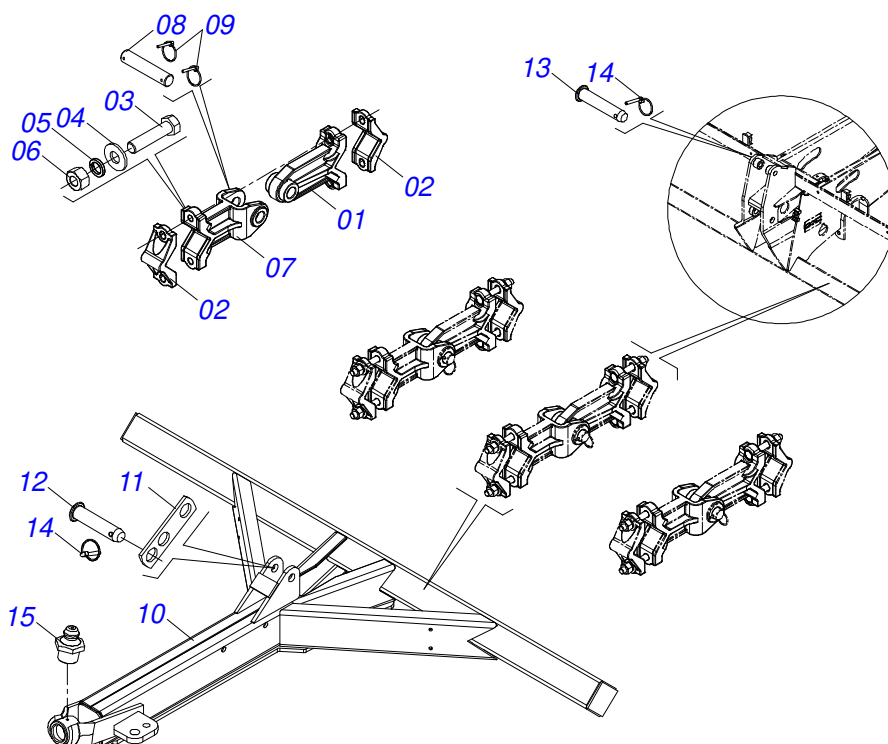


Item	Code	Description	See page	QT
01	0502012329	DRAWBAR FIXATION REAR SUPPORT		02
02	0502012330	SUPPORT FIXER PIVOT		04
03	0503011084	3/4" X 5" BOLT		08
04	0501010322	FLAT WASHER		08
05	0503010023	3/4" SPRING WASHER		08
06	0503010014	3/4" NUT		08
07	0502012328	DRAWBAR SUPPORT FRONT FIXATION		02
08	0561014393	COUPLING SHAFT		02
09	0503030119	LOCK PIN		04
10	0531063130	HEADER		01
11	0561019087	DRAWBAR TRANSPORT LOCK		01
12	0521010578	COUPLING SHAFT		01
13	0521010588	0.9" X 7.0" COUPLING SHAFT		01
14	0503030085	LOCK PIN		02
15	0503010002	1800 GREASE FITTING		01

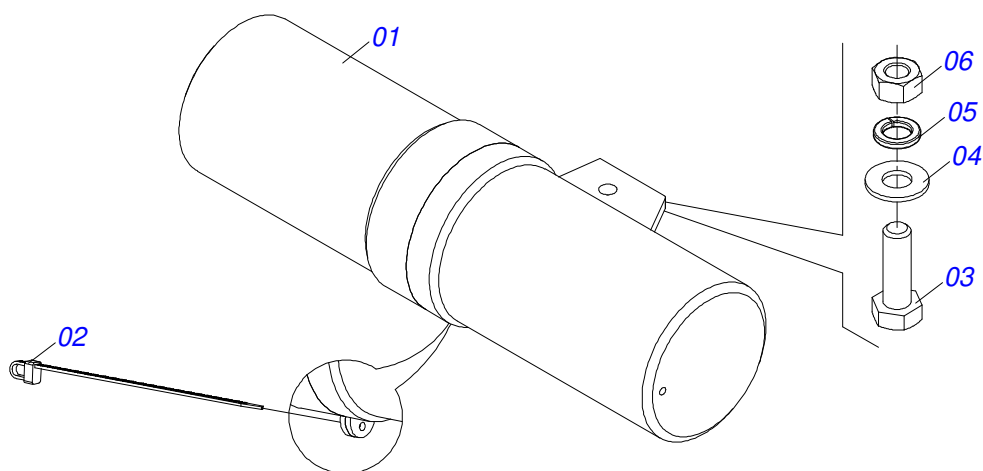


Item	Code	Description	See page	QT
01	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
02	0503010267	NYLON CLAMP		01
03	0503010363	5/16" X 1" BOLT		01
04	0501010694	FLAT WASHER		01
05	0503010179	LOCK WASHER		01
06	0503010337	5/16" NUT		01

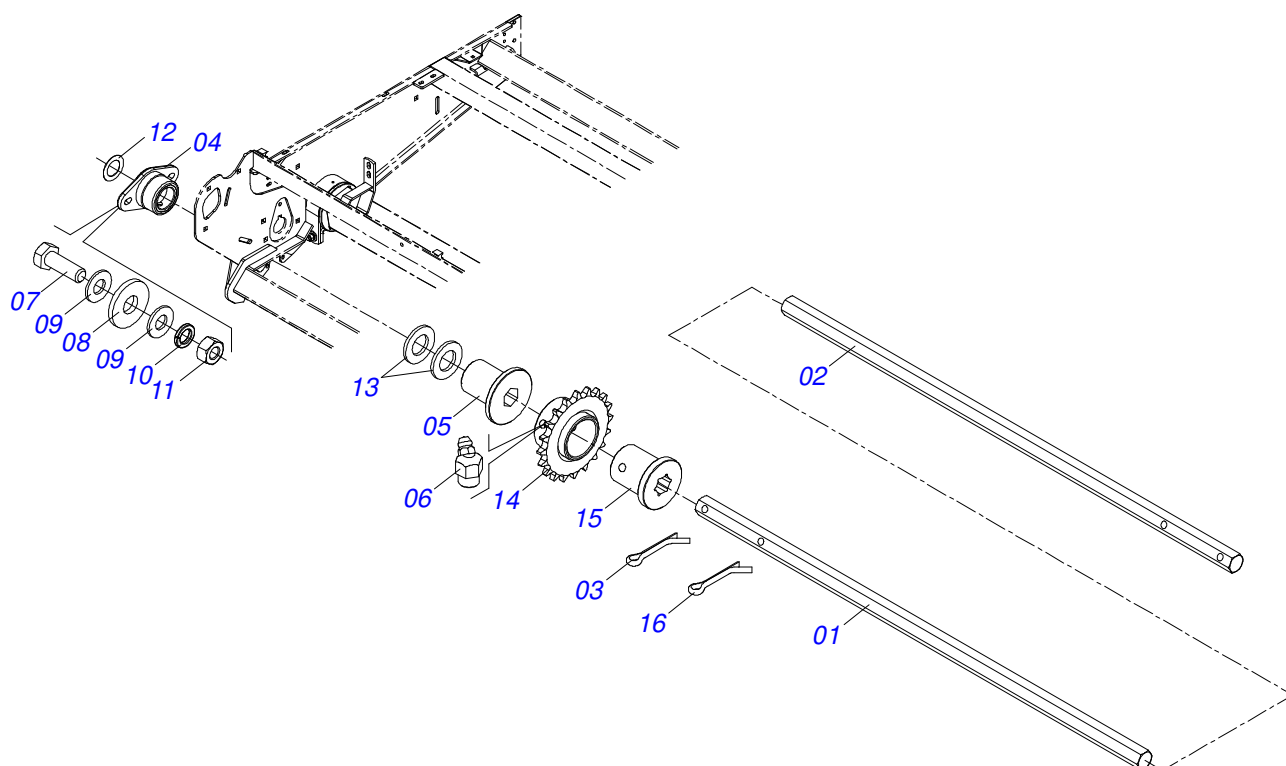


Item	Code	Description	See page	3695	4045	4495	4845	5345
01	0571011601	SEXT AXIS 5/8 X 2005 PST4 8 S-0812	01	00	00	00	00	00
01.	0521013429	AXLE HEX 5/8 X 2180	00	01	00	00	00	00
01..	0561018352	RIGHT HEX SHAFT 5/8 X 2375	00	00	01	00	00	00
01...	0521013430	HEX AXLE 5/8 X 2580	00	00	00	01	00	00
01....	0561019214	HEX AXLE 5/8 X 2805 RIGHT	00	00	00	00	00	01
02	0571011600	SIXTH AXIS 5/8 X 1725	01	00	00	00	00	00
02.	0521013433	5/8" X 75" AXLE HEX	00	01	00	00	00	00
02..	0561018353	5/8 X 2150 LEFT HEX AXLE	00	00	01	00	00	00
02...	0521013434	HEX AXLE 5/8 X 2300	00	00	00	01	00	00
02....	0561019215	HEX AXLE 5/8 X 2555 LEFT	00	00	00	00	00	01
03	0503010571	1/4" X 1.1/2 COTTERPIN	02	02	02	02	02	02
04	0501110037	AGRICULTURAL BEARING HEX SHAFT 5/8"	02	02	02	02	02	02
05	0502040723	5/8 HEX AXLE BEARING SLEEVE 5/8	02	02	02	02	02	02
06	0503010003	1845 GREASE FITTING	02	02	02	02	02	02
07	0503010365	NUT	04	04	04	04	04	04
08	0501010984	FLAT WASHER	04	04	04	04	04	04
09	0501010694	FLAT WASHER	08	08	08	08	08	08
10	0503010179	LOCK WASHER	04	04	04	04	04	04
11	0503010337	5/16" NUT	04	04	04	04	04	04
12	0511015098	FLAT WASHER	02	02	02	02	02	02
13	0511017305	FLAT WASHER	04	04	04	04	04	04
14	0511065562	20Z GEAR	02	02	02	02	02	02
15	0502011299	BUSHING GEAR	02	02	02	02	02	02
16	0503010010	1/4" X 2.1/2" COTTERPIN	02	02	02	02	02	02

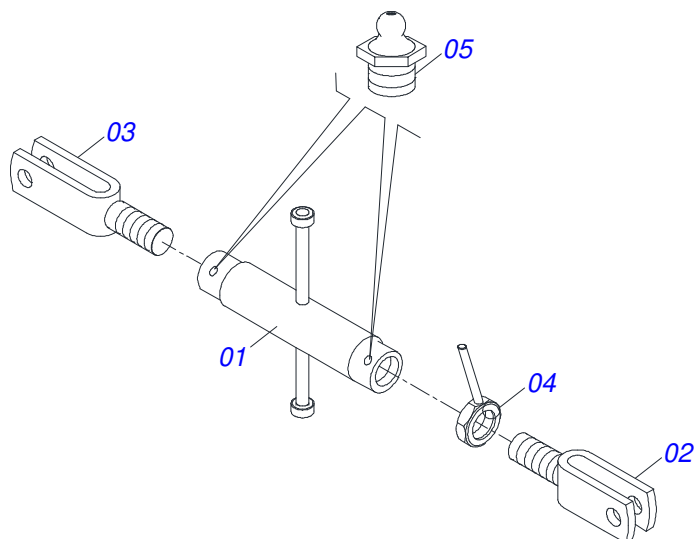


Item	Code	Description	See page	QT
01	0501069529	653 TURNBUCKLE		01
02	0511062887	RIGHT TURNBUCKLE		01
03	0511062888	LH TURNBUCKLE		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

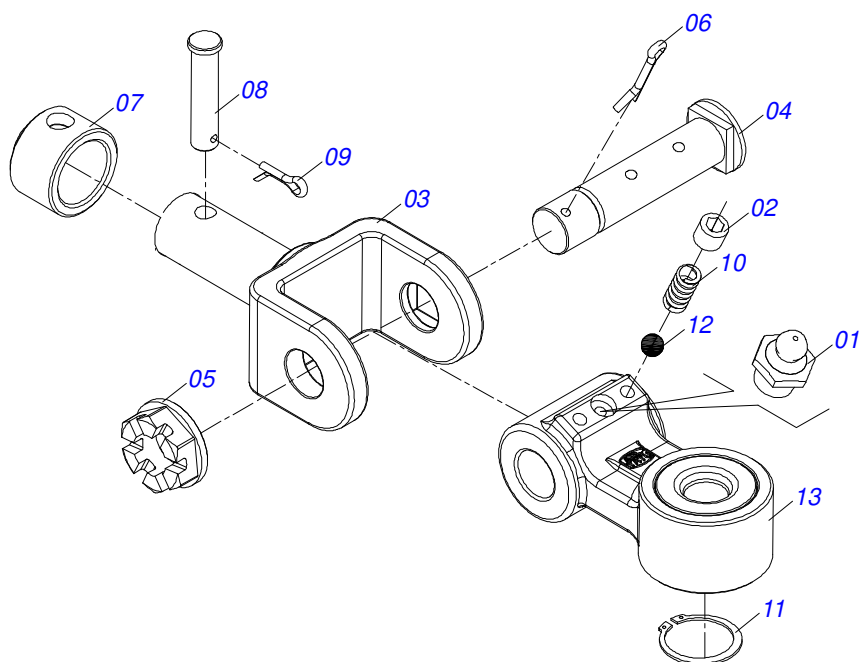


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0581019654	ASSY BOLT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2 COTTERPIN		01
10	0503033731	COMPRESSION SPRING LEFT		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

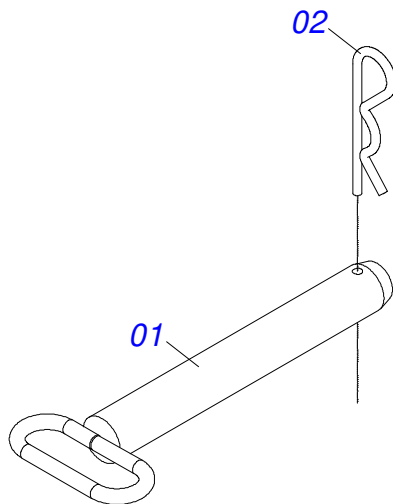


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HAIR PIN		01

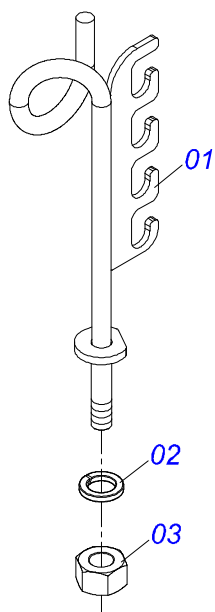

Item	Code	Description	See page	QT
01	0521065611	HOSE SUPPORT		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

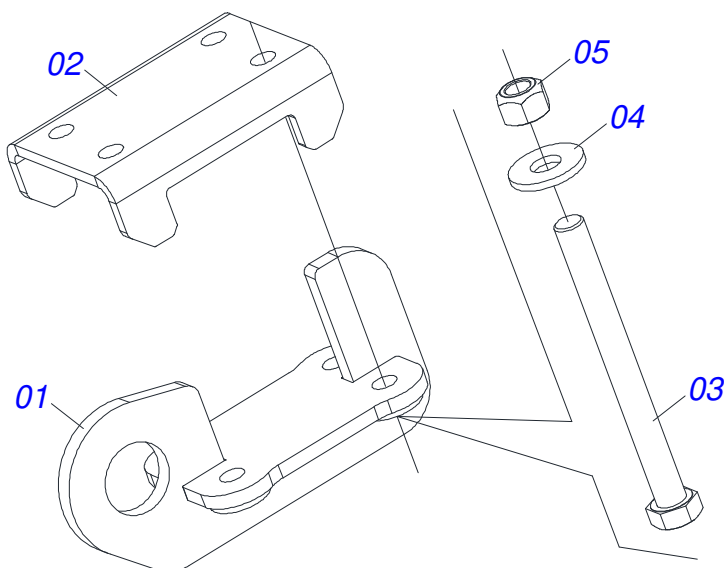

Item	Code	Description	See page	QT
01	0521066608	LIFTING HOOK		01
02	0581019707	FIXATION SUPPORT SUPPORT		01
03	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
04	0501012140	FLAT WASHER		04
05	0503012412	5/8 UNC SELF LOCKING NUT		04

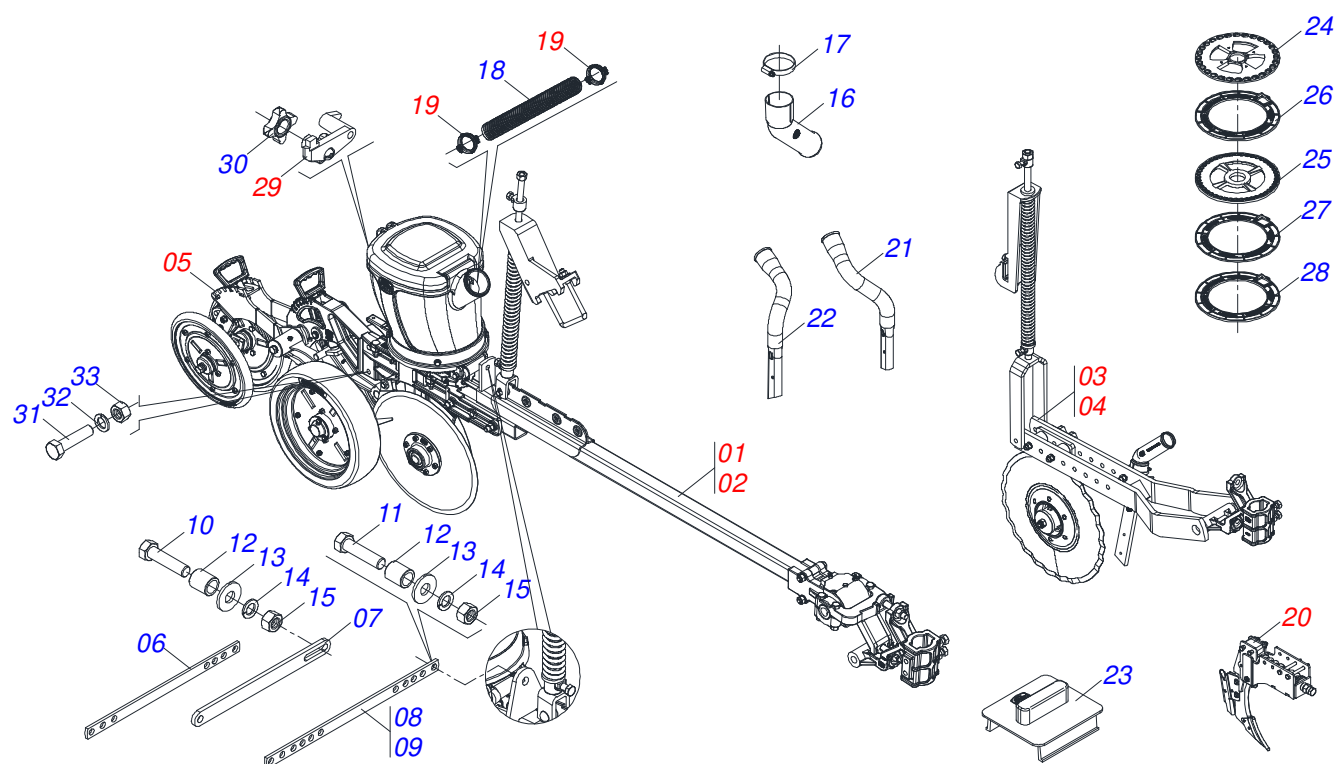


Item	Code	Description	See page	QT
01	0521053324	HIGH SHORT SEED ROW	57	05
02	0521053325	HIGH LONG SEED ROW	62	05
03	0521058872	FERTILIZER SHORT HIGH ROW WITH DAOC/20" DC	69	05
04	0521058873	FERTILIZER LONG HIGH ROW WITH DAOC/20" DC	77	05
05	0521056317	DEPTH CONTROL WITH LEVER ANGLE REGULATOR AXIS CPERA	81	10
06	0501013714	STABILIZER BAR		08
07	0581015213	STABILIZER BAR E450		01
08	0501018652	CORN STABILIZER BAR		04
09	0581015215	STABILIZER BAR E500 PIVOTED HIGH LINE		01
10	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		08
11	0503010479	BOLT		02
12	0521010505	13,50 X 19,00 X 21,50 SLEEVE		12
13	0511017302	FLAT WASHER		12
14	0503010019	1/2" SPRING WASHER		10
15	0503010060	1/2" NUT		10
16	0503031050	CURVED CONDUCTOR		03
17	0503010246	CLAMP		03
18	0571011730	SEED CONDUCTOR 3" X 1500		10
19	0521050525	FIXER FERTILIZER CONDUCTOR		20
20	0521052631	HDA HIGH AUTOMATIC DISARM		10
21	0581010082	FERTILIZER SOCKET RIGHT		05
22	0581010083	FERTILIZER SOCKET LEFT		05
23	0503032624	SIL0 FERTILIZER GUTTER		05
24	0503016204	CORN DISK 12 ORANGE		10
25	0503016218	DISC OF SOYBEAN		10
26	0503016214	RING CORN (APOLLO740)		10
27	0503016220	RING TO SOYBEANS (APOLLO 745)		10
28	0503016221	RING TO SOYBEANS (APOLLO 571)		10
29	0501050120	LARGER WALKING BEAM ASSY	82	10
30	0503030558	PULLEY 4Z CORN PLASTIC		10




**PST4 - FRAME 4495 - CSU - WITH ELEVATION (UP TO
SEED/FERTILIZER ROW ASSY**

Page 56
0909099023


Item	Code	Description	See page	QT
31	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		20
32	0503010019	1/2" SPRING WASHER		20
33	0503010060	1/2" NUT		20

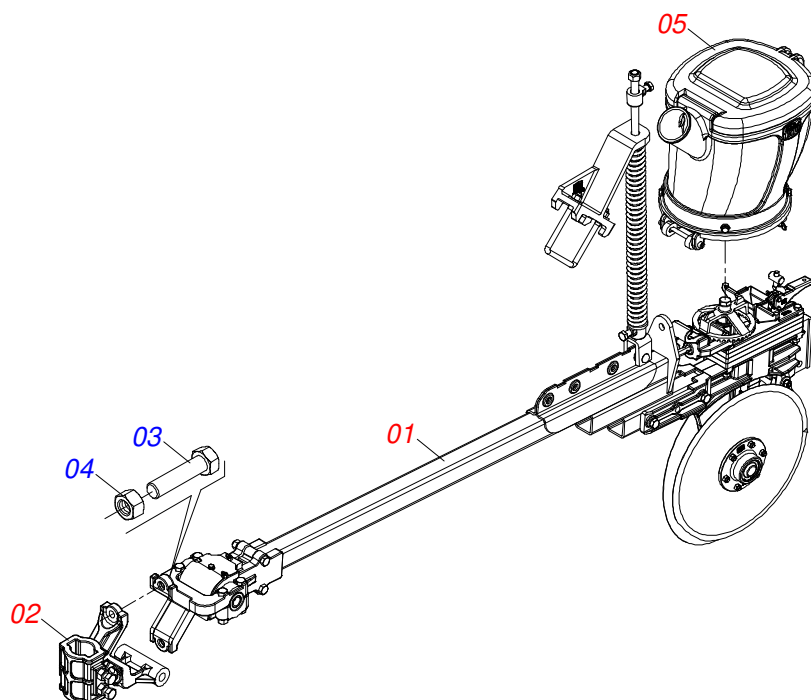


Item	Code	Description	See page	QT
01	0521052840	SHORT PIVOTING HIGH LINE	58	01
02	0511059350	SUPPORT LINE SUPPORT LINE WITH SCREW NUT	61	01
03	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		02
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0511059023	SEED SYSTEM ASSY		01

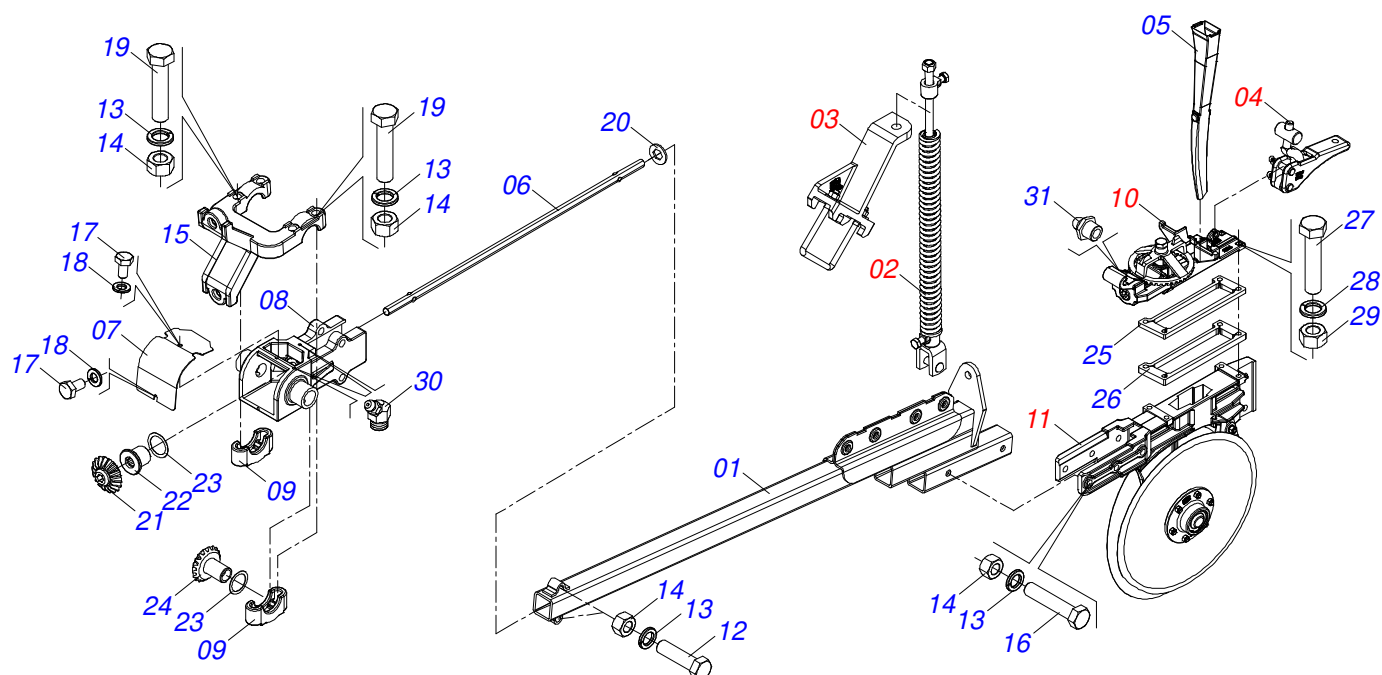


Item	Code	Description	See page	QT
01	0521068663	SHORT SEED LINE ARM		01
02	0511059244	ROD SPRING LINE SEED	59	01
03	0511059243	ASSEMBLY GUIDE VARIUM SPRING SEED	60	01
04	0511052024	FAST CLOSING SET		01
05	0503034575	BOCAL SEED LINE HIGH TITANIUM		01
06	0521018077	1/2" X 58.6" HEX AXLE		01
07	0521018079	SEEP ROW DRAWBAR COVER		01
08	0502011830	ARTICULACCION SUPPORT		01
09	1902010426	UPPER BEARING SEMI		02
10	0511051693	BASE FIXING SYSTEM	64	01
11	0511056585	RIGHT 15" X 15" DOUBLE DISC SEED		01
12	0503010752	1/2" X 3.1/2" BOLT		02
13	0503011440	SPRING WASHER		08
14	0503010060	1/2" NUT		08
15	1902011561	BEARING SEMI		01
16	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
17	0503014729	1/4" UNF X 1/2" BOLT		02
18	0503011441	SPRING WASHER		02
19	0503010479	BOLT		04
20	0501013352	FLAT WASHER		01
21	0502011505	18Z CONICAL GEAR		01
22	0502011296	1/2 HEX AXLE BEARING SLEEVE		01
23	0501013354	FLAT WASHER		02
24	0502011400	18Z CONICAL GEAR		01
25	0581014526	ELEVATION PLATE 3/8		01
26	0581014527	ELEVATION PLATE 12,5		03
27	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		04
28	0503010025	3/8" SPRING WASHER		04
29	0503010026	3/8" NUT		04
30	0503011099	GREASE FITTING		02
31	0503010002	1800 GREASE FITTING		02

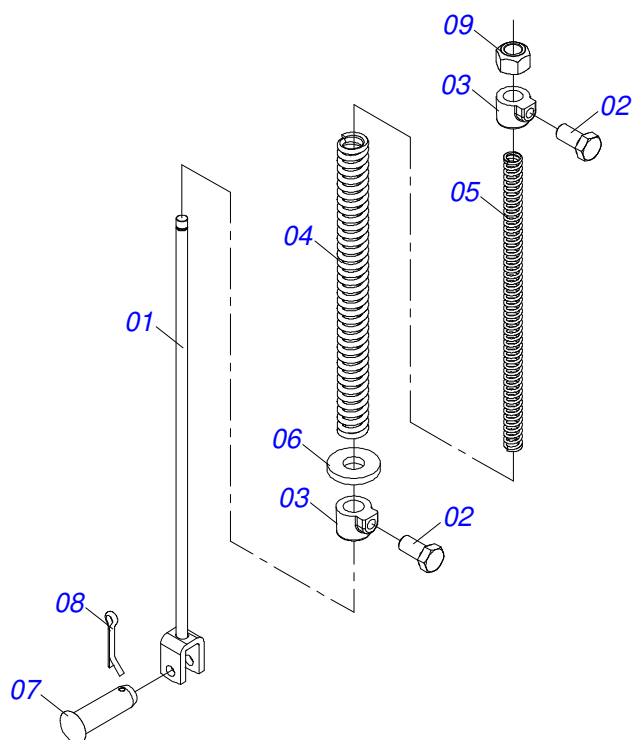


Item	Code	Description	See page	QT
01	0511060376	SEEP SPRING GUIDE		01
02	0503010834	1/2 X 1 BOLT		02
03	0502040534	SPRING GUIDE BUSHING LOCK		02
04	0503031340	1.7"X 19" X 0.3" COMPRESSION SPRING		01
05	0503031339	1" X 19" X 0.1" COMPRESSION SPRING		01
06	0501013753	FLAT WASHER		01
07	0521010542	COUPLING SHAFT		01
08	0503010257	1/8" X 1" COTTERPIN		01
09	0503012412	5/8 UNC SELF LOCKING NUT		01

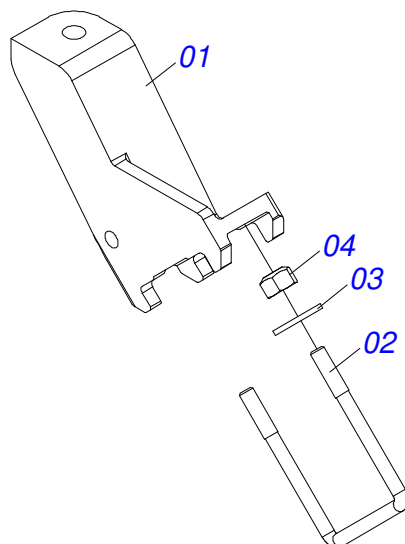


Item	Code	Description	See page	QT
01	0502012538	SPRING VARON SUPPORT		01
02	0521014021	1/2" X 4.5" X 5.4" FASTENER		01
03	0511017302	FLAT WASHER		02
04	0503011336	1/2" HEX SELF ADJUSTING NUT		02

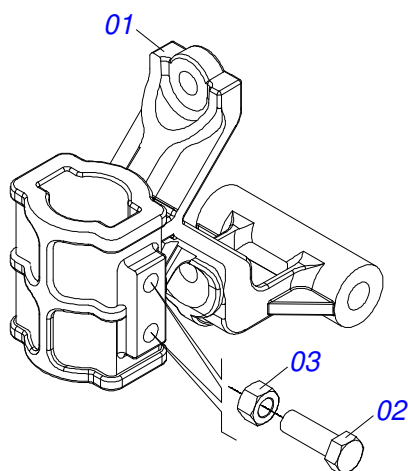


Item	Code	Description	See page	QT
01	0502012823	CUTTING DISC SUPPORT		01
02	0503034318	5/8 UNC X 2 BOLT		02
03	0503010013	5/8" NUT		02

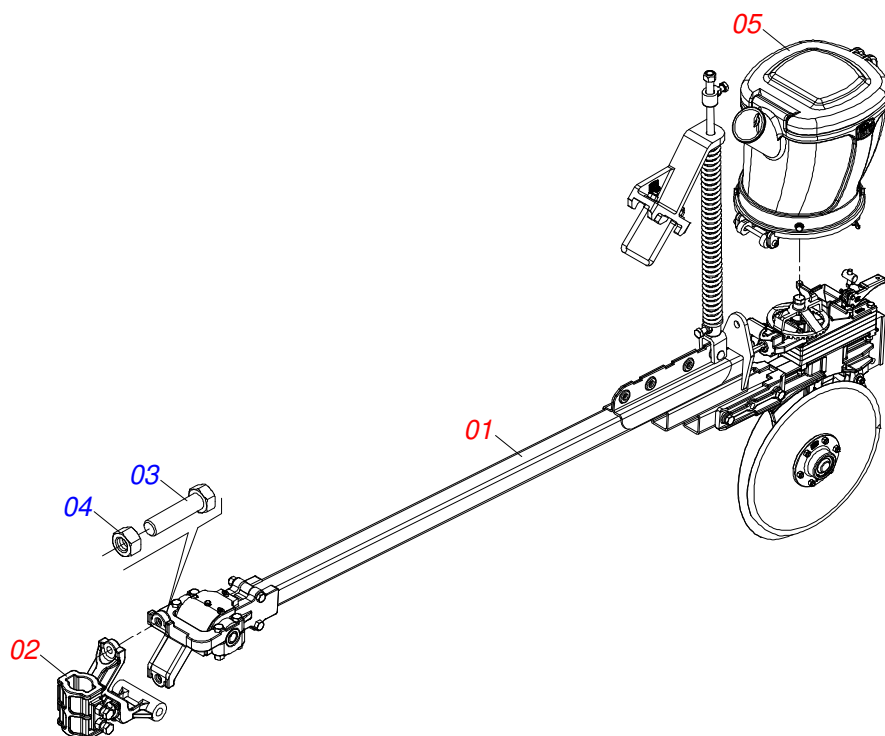


Item	Code	Description	See page	QT
01	0521052841	LONG PIVOTANT HIGH LINE	63	01
02	0511059350	SUPPORT LINE SUPPORT LINE WITH SCREW NUT	61	01
03	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		02
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0511059023	SEED SYSTEM ASSY		01

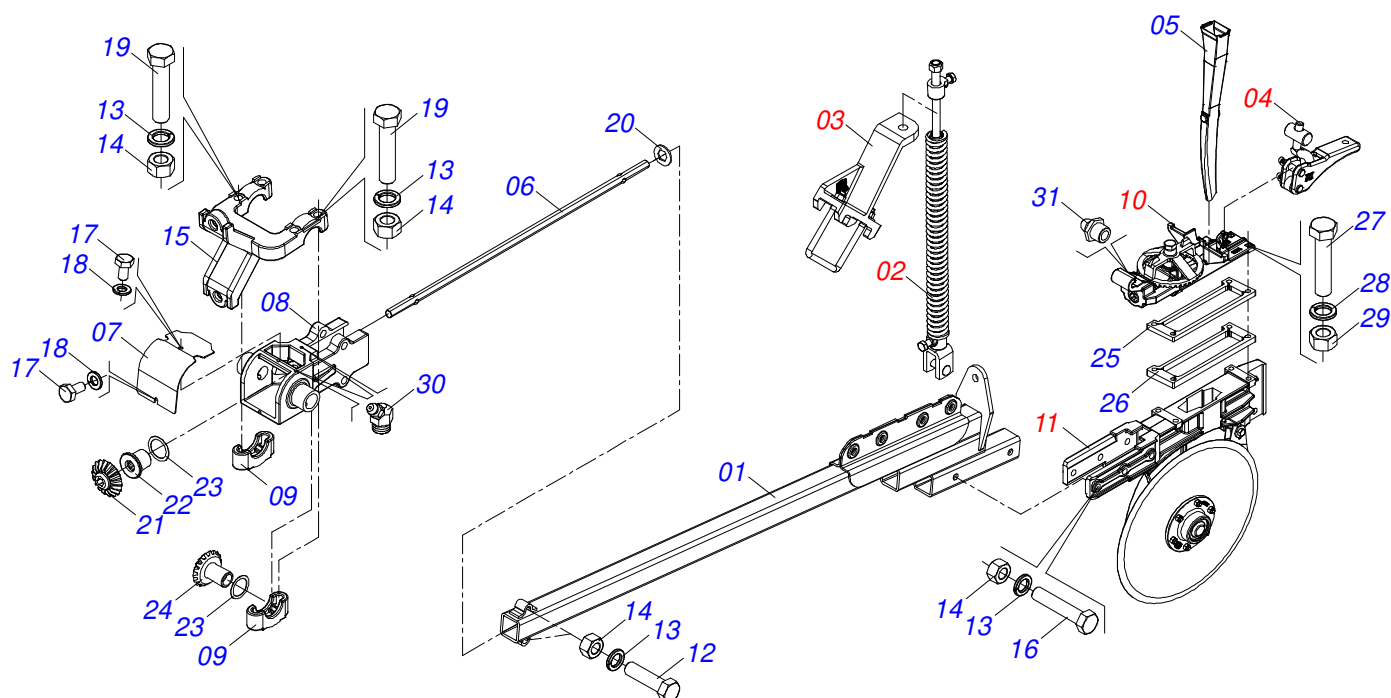


Item	Code	Description	See page	QT
01	0521068664	LONG SEED LINE ARM		01
02	0511059244	ROD SPRING LINE SEED	59	01
03	0511059243	ASSEMBLY GUIDE VARIUM SPRING SEED	60	01
04	0511052024	FAST CLOSING SET		01
05	0503034575	BOCAL SEED LINE HIGH TITANIUM		01
06	0521018078	1/2" X 66.5" HEX AXLE		01
07	0521018079	SEEP ROW DRAWBAR COVER		01
08	0502011830	ARTICULACCION SUPPORT		01
09	1902010426	UPPER BEARING SEMI		02
10	0511051693	BASE FIXING SYSTEM	64	01
11	0511056586	15 X 15 SEED DDD LEFT	65	01
12	0503010752	1/2" X 3.1/2" BOLT		02
13	0503011440	SPRING WASHER		08
14	0503010060	1/2" NUT		08
15	1902011561	BEARING SEMI		01
16	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
17	0503014729	1/4" UNF X 1/2" BOLT		02
18	0503011441	SPRING WASHER		02
19	0503010479	BOLT		04
20	0501013352	FLAT WASHER		01
21	0502011505	18Z CONICAL GEAR		01
22	0502011296	1/2 HEX AXLE BEARING SLEEVE		01
23	0501013354	FLAT WASHER		02
24	0502011400	18Z CONICAL GEAR		01
25	0581014526	ELEVATION PLATE 3/8		01
26	0581014527	ELEVATION PLATE 12,5		03
27	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		04
28	0503010025	3/8" SPRING WASHER		04
29	0503010026	3/8" NUT		04
30	0503011099	GREASE FITTING		02
31	0503010002	1800 GREASE FITTING		02

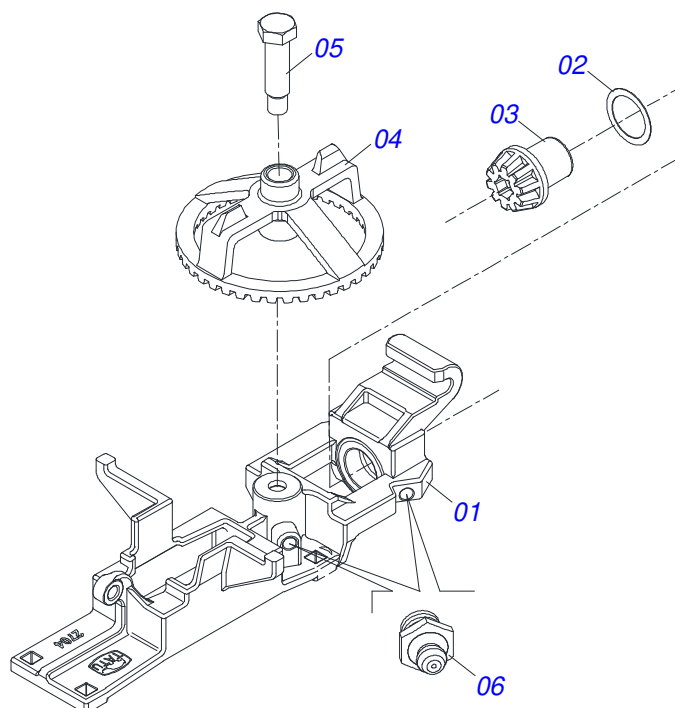


Item	Code	Description	See page	QT
01	0502012704	BASE FIXING SYSTEM		01
02	0501013354	FLAT WASHER		01
03	0502011411	10Z CONICAL GEAR		01
04	0502011418	40Z CONICAL GEAR		01
05	0511018700	AXLE		01
06	0503010002	1800 GREASE FITTING		02

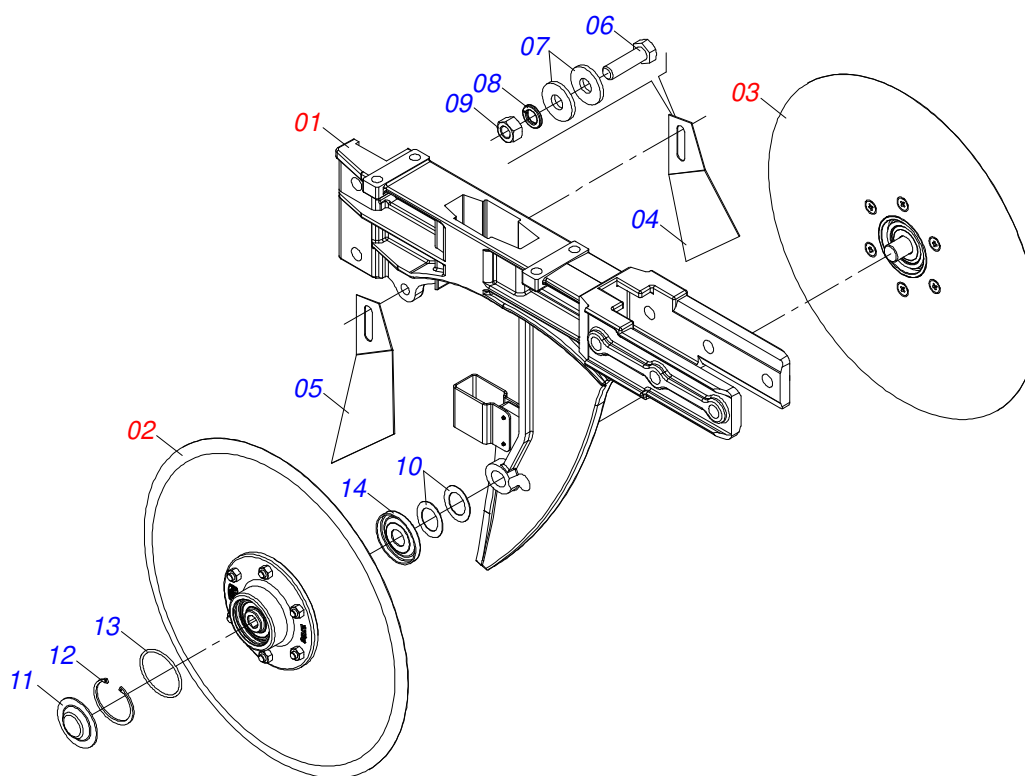


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE	66	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	67	01
03	0511053172	LEFT LOW CUBE WITH DISC 15	68	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511015098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O'RING		02
14	0511011927	DUST CLOAK		02

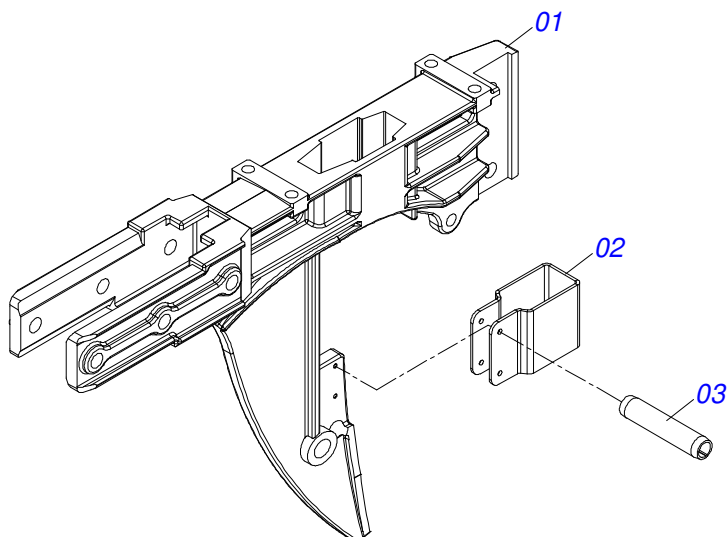


Item	Code	Description	See page	QT
01	0561015592	LEFT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

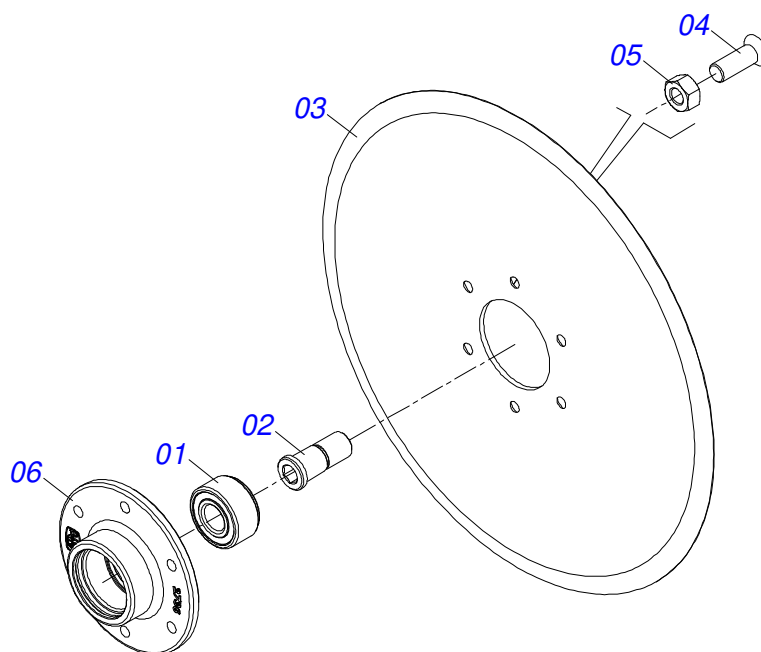


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

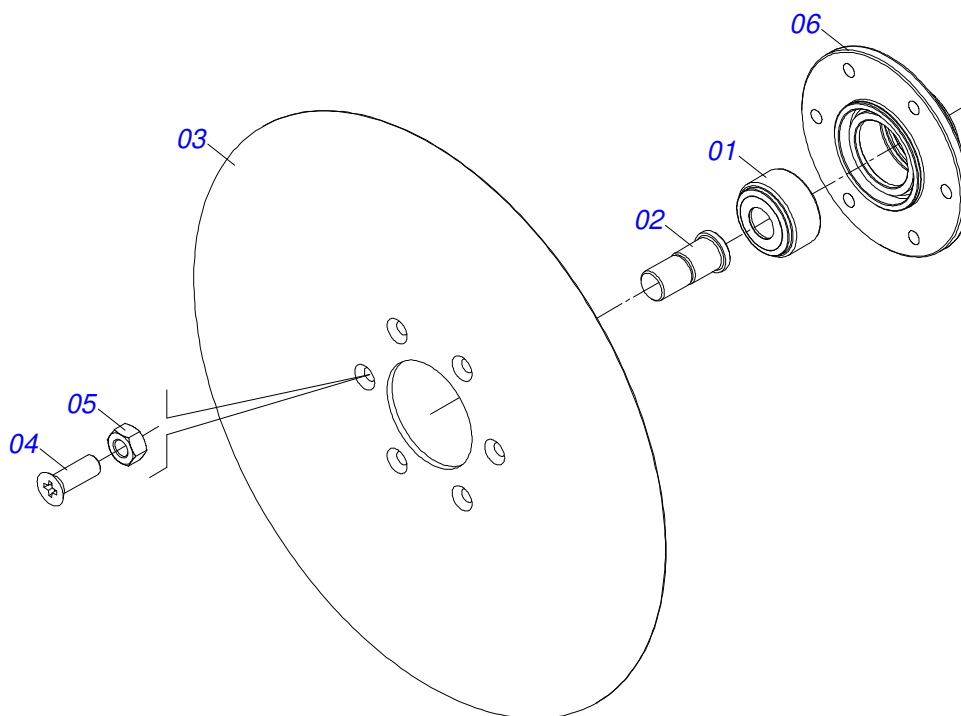


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

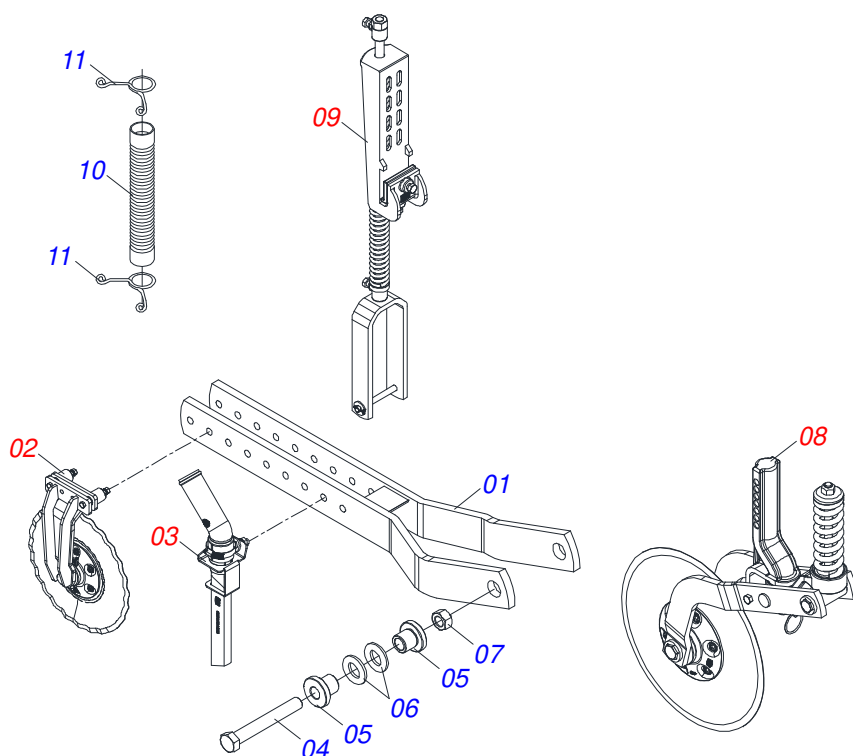


Item	Code	Description	See page	QT
01	0521068566	SHORT FERTILIZER LINE ARM		01
02	0521058870	SUPORT RIGHT BOX	70	01
03	0521050168	MOUNTED FERTILIZER CONDUCTOR	72	01
04	0501010066	3/4" X 9" BOLT		01
05	0521017831	SUPPORT SLEEVE SPACER		02
06	0511017232	FLAT WASHER		02
07	0503011255	3/4" LOCK NUT		01
08	0511058619	DISC CUT 20 SHORT LINE	73	01
09	0521052644	TIGHT ELEVATION SPRING FULL FERTILIZER	76	01
10	0503031145	2" X 2" X 20" HOSE		01
11	0503031076	2" HOSE CLAMP		02

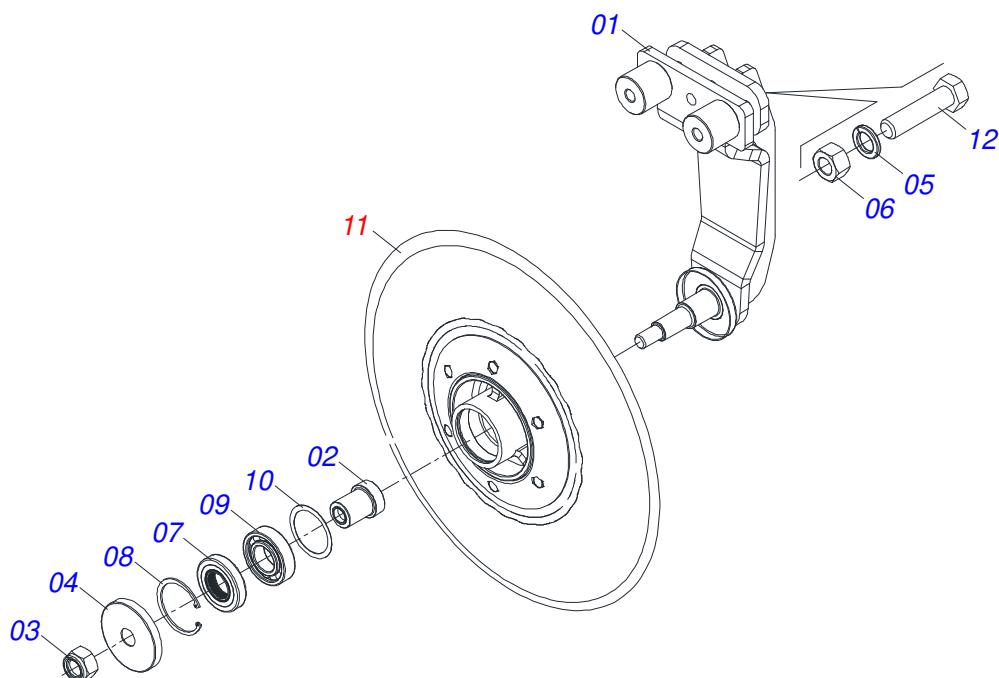


Item	Code	Description	See page	QT
01	0521068662	DOC SHORT ARM		01
02	0581011838	SLEVE GUIDES		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0521015376	DUST CLOAK		01
05	0503010019	1/2" SPRING WASHER		02
06	0503010060	1/2" NUT		02
07	0503012417	SEAL		01
08	0503011800	SEAL RING		01
09	0503010276	6206 BALL BEARING		01
10	0503030832	FLAT WASHER		01
11	0521058868	BOX ASSY	71	01
12	0503010384	1/2" X 5" BOLT		02

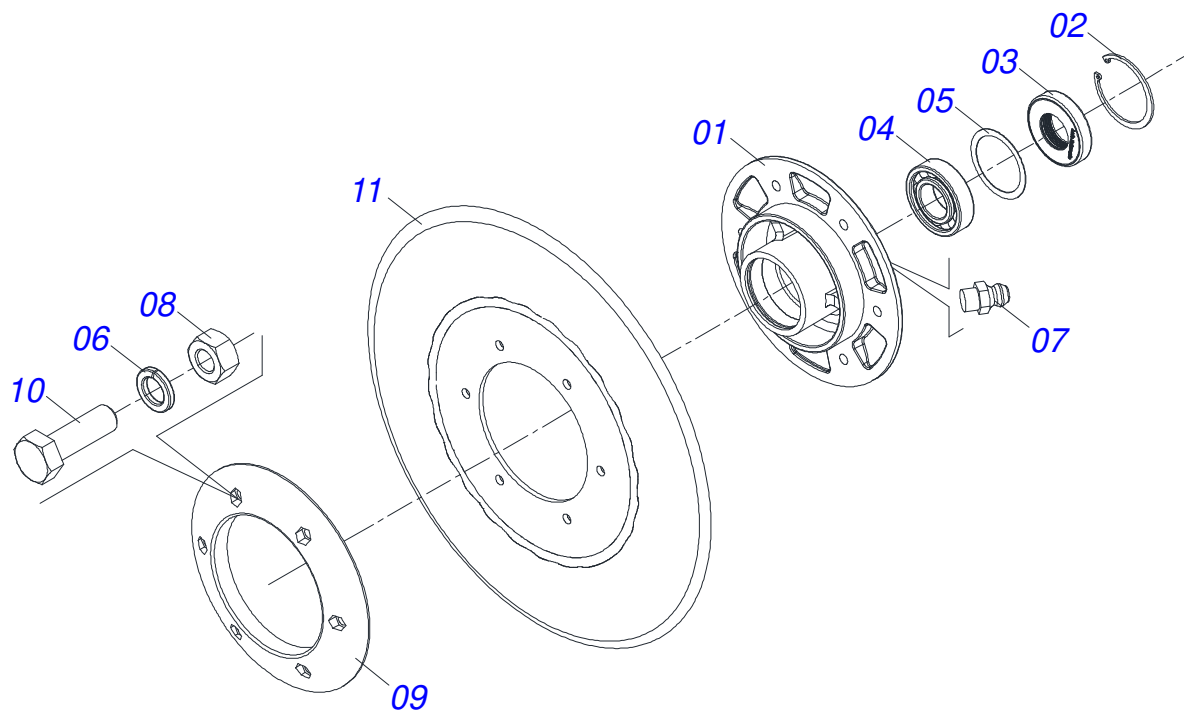


Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503011800	SEAL RING		01
03	0503012417	SEAL		01
04	0503010276	6206 BALL BEARING		01
05	0503030832	FLAT WASHER		01
06	0503011444	SPRING WASHER		06
07	0503010691	1/4" GREASE FITTING		01
08	0503010337	5/16" NUT		06
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0603026013	PLAIN COULTER BLADE		01

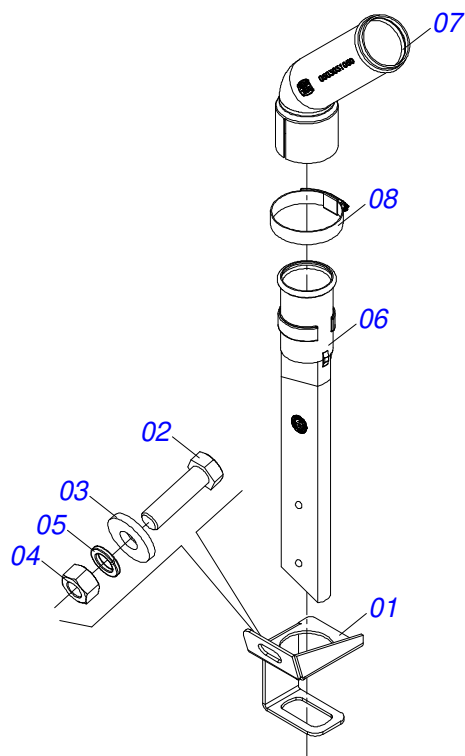


Item	Code	Description	See page	QT
01	0581013298	SUPPORT		01
02	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		01
03	0521018517	FLAT WASHER		01
04	0503010060	1/2" NUT		01
05	0503010019	1/2" SPRING WASHER		01
06	0503030483	FERTILIZER SOCKET		01
07	0503031050	CURVED CONDUCTOR		01
08	0503010246	CLAMP		01

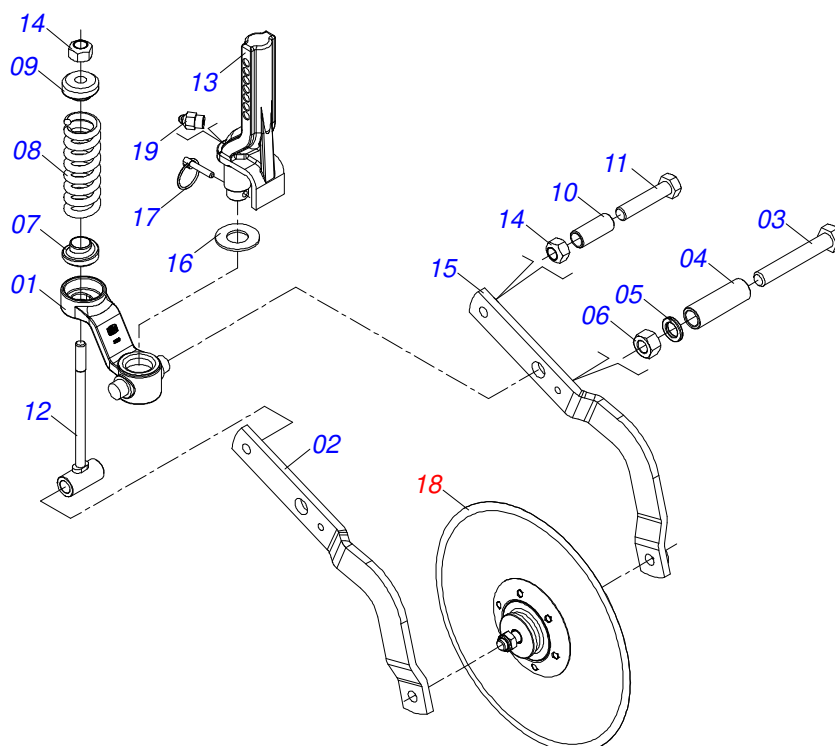


Item	Code	Description	See page	QT
01	0502012816	CUTTING DISC SUPPORT		01
02	0571019976	LEFT BRACELET CUTTING DISC		01
03	0503011411	1/2" X 5-1/2" BOLT		01
04	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
05	0503011440	SPRING WASHER		01
06	0503010060	1/2" NUT		01
07	1902020394	SPRING SUPPORT		01
08	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
09	1902020393	SPRING UPPER SUPPORT		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0501067323	SPRING REGULATOR		01
13	0502012825	SHAFT FIXING SHAFT CUT LINE SHORT		01
14	0503011255	3/4" LOCK NUT		02
15	0521066738	BRACO RIGHT DISC CUT WITH WASHER LOCK PST		01
16	0581011111	WASHER BRACKET AXIS DC PST		01
17	0503034319	LOCK PIN		01
18	0511058648	BOX WITH DISC BLADE 20	74	01
19	0503010003	1845 GREASE FITTING		01

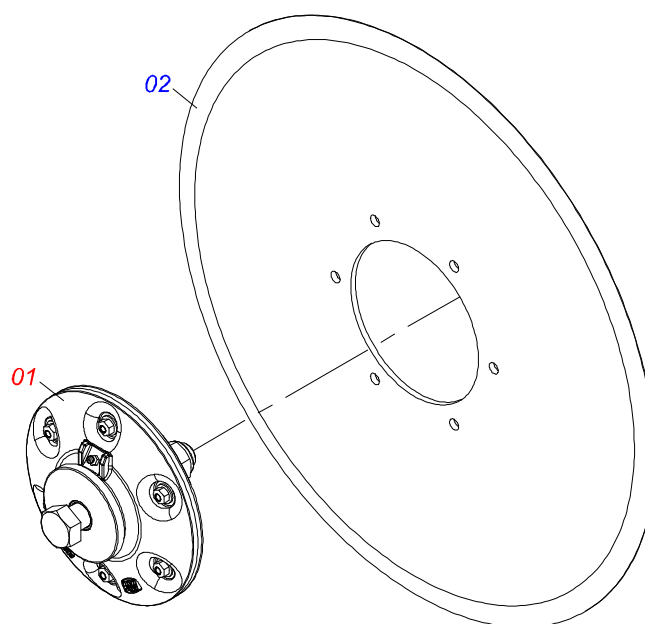


Item	Code	Description	See page	QT
01	0511056909	DISC BOX CUT WITHOUT THE DISC	75	01
02	0603027851	20" X 0.2" FLAT PLAIN DISC		01

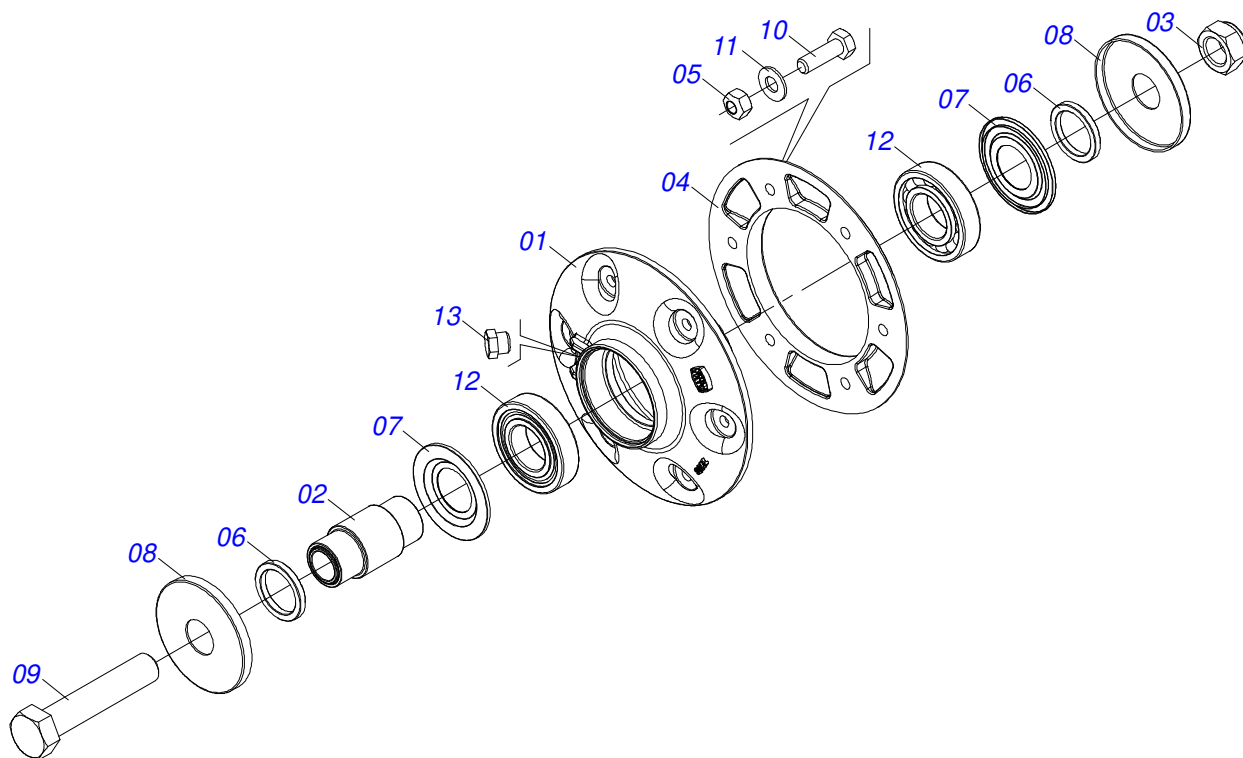


Item	Code	Description	See page	QT
01	0502012793	DC PST		01
02	0571018047	CUTTING DISC BOX SHAFT		01
03	0503017755	NUT		01
04	0502020641	BLADE DISC FLANGE		01
05	0503013816	5/16" LOCKNUT		06
06	0571018048	BACKREST WASHER		02
07	0521065882	NILOS SEALING RING		02
08	0571018049	DOOR DUST		02
09	0581010575	7/8" X 145 BOLT		01
10	0503018825	5/16 UNC UNC BOLT		06
11	0501010694	FLAT WASHER		06
12	0503016061	BEARING		02
13	0511017907	1/8" BSPT X 6 PLUG		01

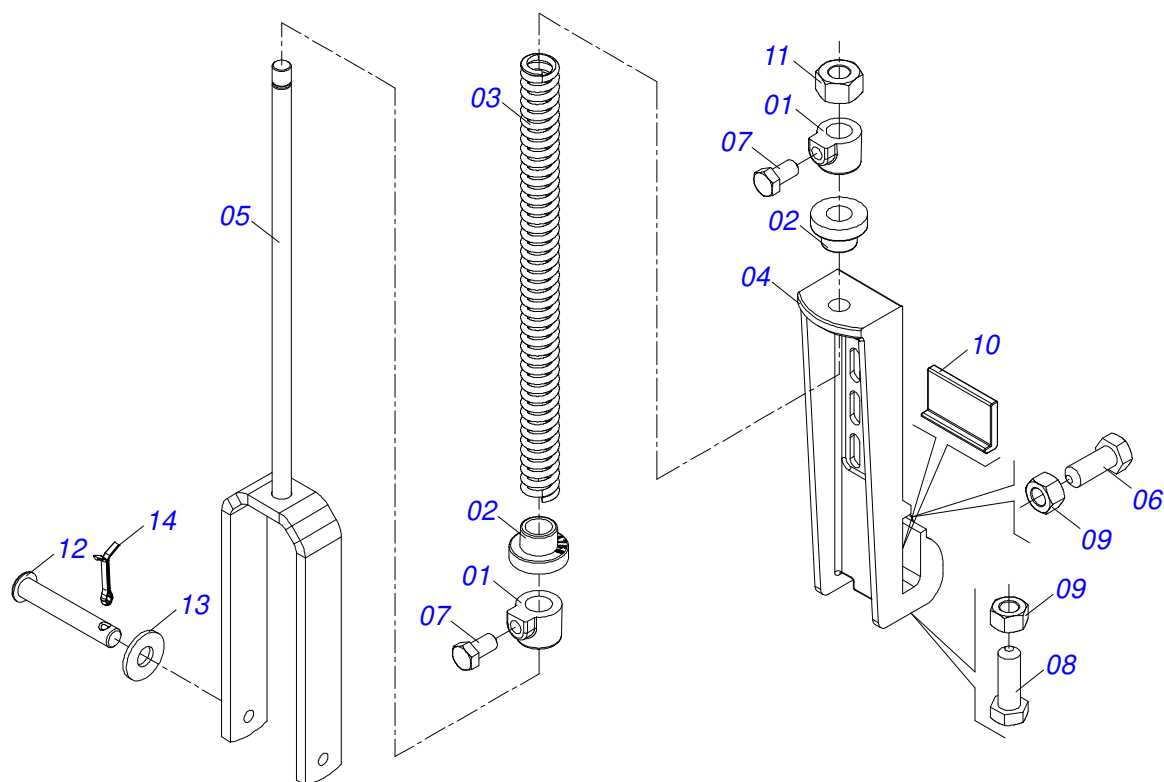


Item	Code	Description	See page	QT
01	0502040534	SPRING GUIDE BUSHING LOCK	02	
02	0502012184	FERTILIZER SPRING GUIDE	02	
03	0503031910	1.7" X 22.8" X 0.3" SPRING	01	
04	0502012510	SPRING ROD SUPPORT	01	
05	0521068568	LARGE ELEVATION SPRING FERTILIZER	01	
06	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN	01	
07	0501018535	1/2 X 1 BOLT	02	
08	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN	01	
09	0503010060	1/2" NUT	02	
10	0502010891	SPRING CHOCK SUPPORT VARON	01	
11	0503010014	3/4" NUT	01	
12	0561014471	COUPLING SHAFT	01	
13	0511017302	FLAT WASHER	01	
14	0503010257	1/8" X 1" COTTERPIN	01	

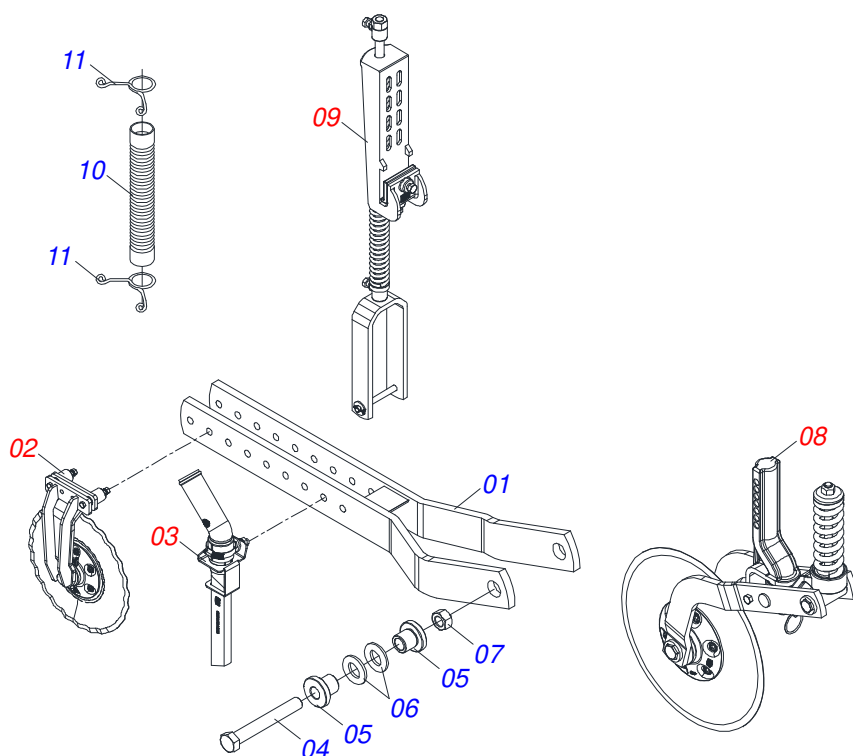


Item	Code	Description	See page	QT
01	0521068565	LONG FERTILIZER LINE ARM		01
02	0521058871	RIGHT SUPPORT	78	01
03	0521050168	MOUNTED FERTILIZER CONDUCTOR	72	01
04	0501010066	3/4" X 9" BOLT		01
05	0521017831	SUPPORT SLEEVE SPACER		02
06	0511017232	FLAT WASHER		02
07	0503011255	3/4" LOCK NUT		01
08	0511058620	DISC CUT 20 LONG LINE	80	01
09	0521052644	TIGHT ELEVATION SPRING FULL FERTILIZER	76	01
10	0503031145	2" X 2" X 20" HOSE		01
11	0503031076	2" HOSE CLAMP		02

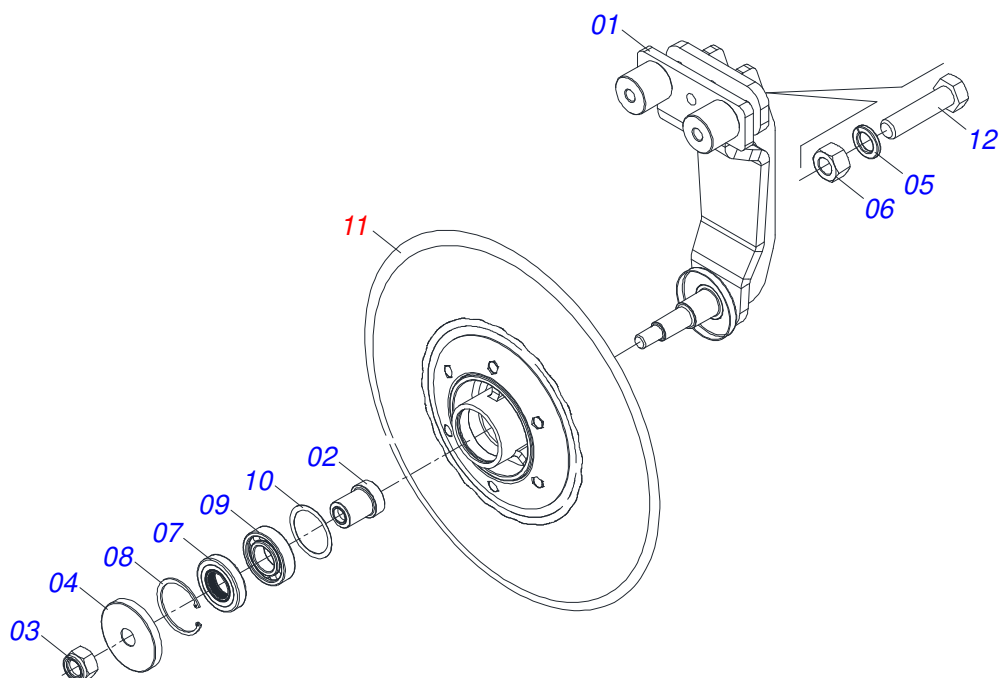


Item	Code	Description	See page	QT
01	0521068662	DOC SHORT ARM		01
02	0581011838	SLEVE GUIDES		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0521015376	DUST CLOAK		01
05	0503010019	1/2" SPRING WASHER		02
06	0503010060	1/2" NUT		02
07	0503012417	SEAL		01
08	0503011800	SEAL RING		01
09	0503010276	6206 BALL BEARING		01
10	0503030832	FLAT WASHER		01
11	0521058869	BOX ASSY	79	01
12	0503010384	1/2" X 5" BOLT		02

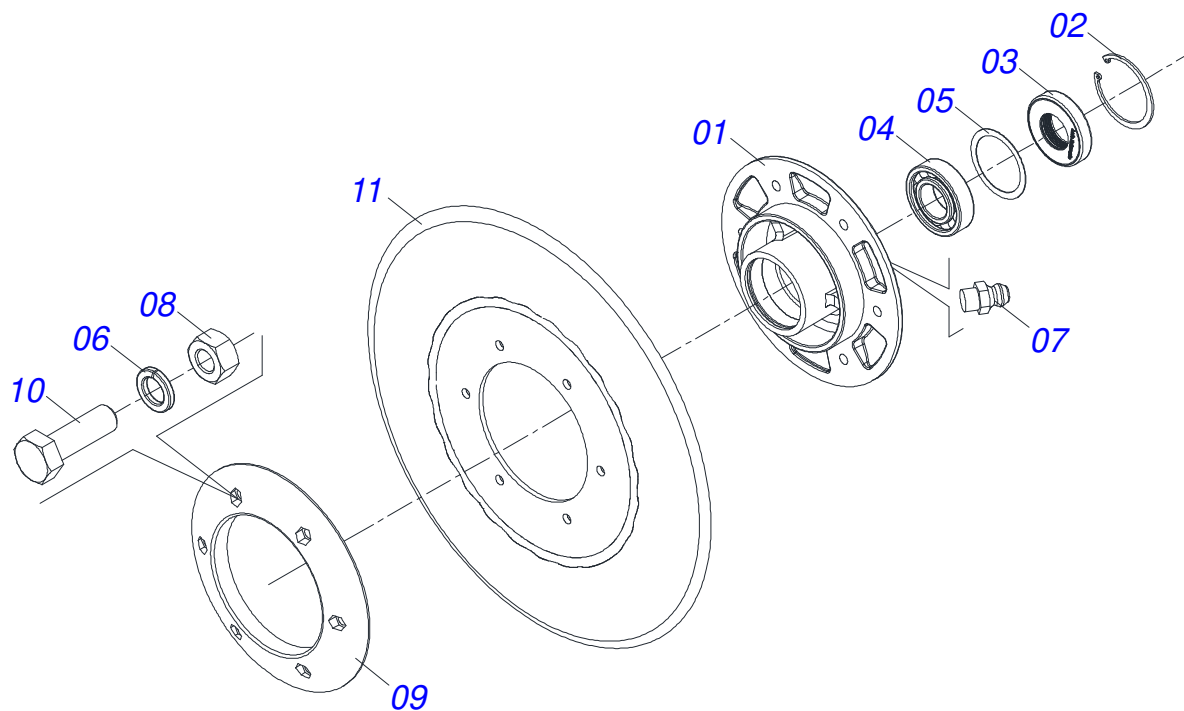

Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503011800	SEAL RING		01
03	0503012417	SEAL		01
04	0503010276	6206 BALL BEARING		01
05	0503030832	FLAT WASHER		01
06	0503011444	SPRING WASHER		06
07	0503010691	1/4" GREASE FITTING		01
08	0503010337	5/16" NUT		06
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0603026013	PLAIN COULTER BLADE		01

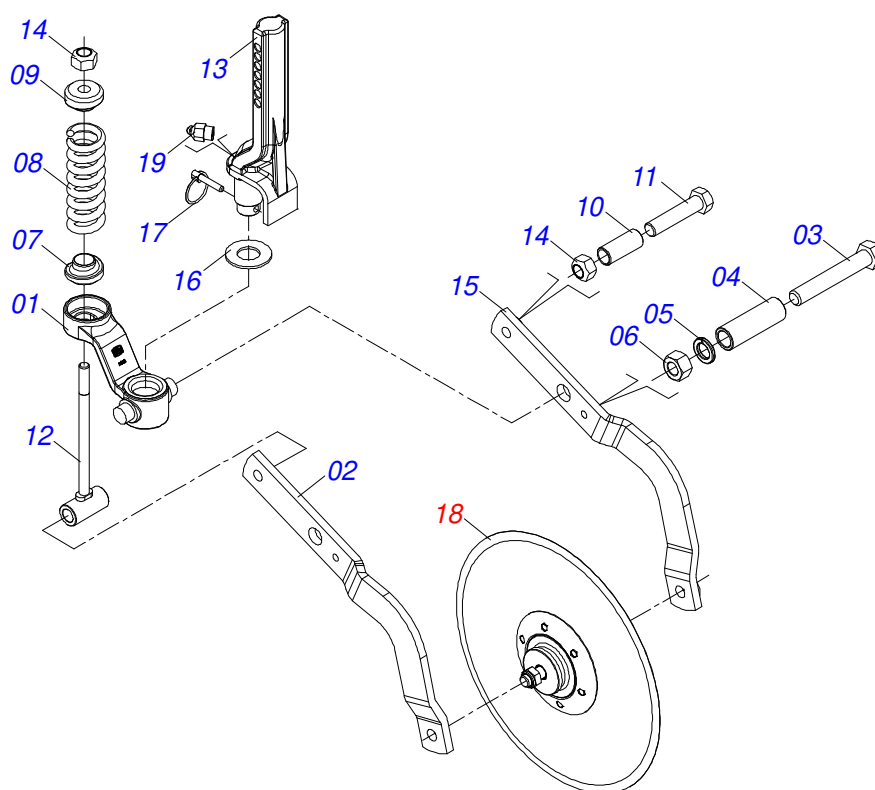

Item	Code	Description	See page	QT
01	0502012816	CUTTING DISC SUPPORT		01
02	0571019976	LEFT BRACELET CUTTING DISC		01
03	0503011411	1/2" X 5-1/2" BOLT		01
04	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
05	0503011440	SPRING WASHER		01
06	0503010060	1/2" NUT		01
07	1902020394	SPRING SUPPORT		01
08	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
09	1902020393	SPRING UPPER SUPPORT		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0501067323	SPRING REGULATOR		01
13	0502012824	FIXING SHAFT DISC CUT LINE		01
14	0503011255	3/4" LOCK NUT		02
15	0521066738	BRACO RIGHT DISC CUT WITH WASHER LOCK PST		01
16	0581011111	WASHER BRACKET AXIS DC PST		01
17	0503034319	LOCK PIN		01
18	0511058648	BOX WITH DISC BLADE 20	74	01
19	0503010003	1845 GREASE FITTING		01

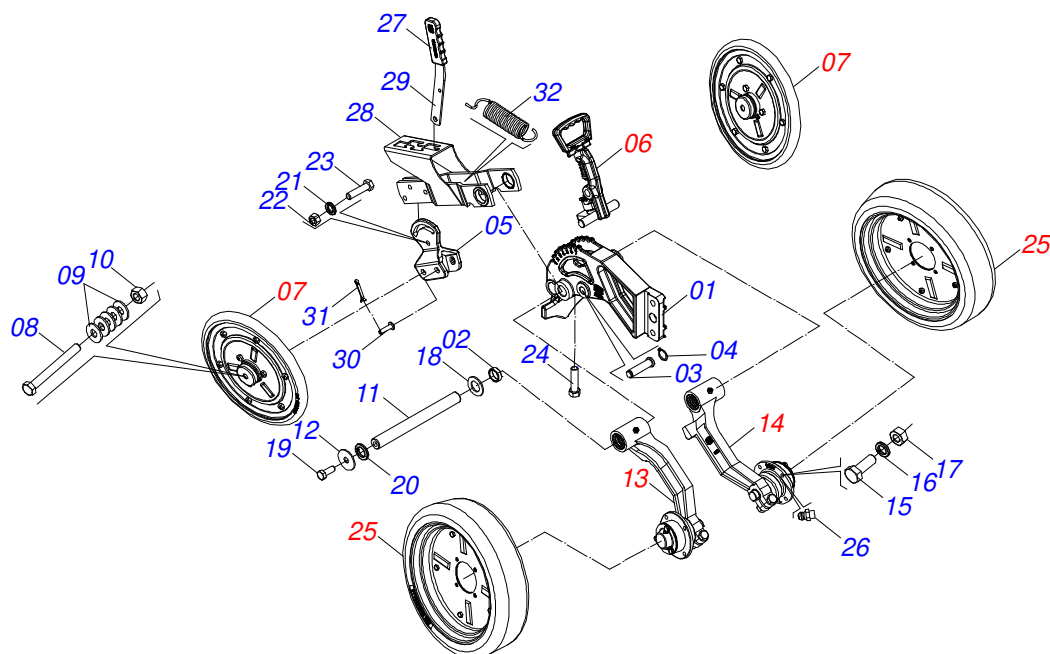


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT	01	
02	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE	02	
03	0521019093	0.6" X 2.7" PIVOT SHAFT	01	
04	0503010581	RING	01	
05	1902012116	PRESS WHEEL ADJUSTER	01	
06	0501052297	DEPTH WHEELS REGULATOR ASSY	01	
07	0501052908	COMPACTOR WHEEL WITH BEARING	02	
08	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN	02	
09	0521014508	FLAT WASHER	10	
10	0503011336	1/2" HEX SELF ADJUSTING NUT	02	
11	0581011100	DEPTH WHEEL AXLE	01	
12	0571017749	FLAT WASHER	02	
13	0521056314	LEFT ARM WHEEL DEPTH WITH CUBE CPERA	01	
14	0521056313	RIGHT ARM WHEEL DEPTH WITH CUBE CPERA	01	
15	0503010358	5/16" X 5/8" BOLT	08	
16	0503010179	LOCK WASHER	08	
17	0503013816	5/16" LOCKNUT	08	
18	0501011445	FLAT WASHER	02	
19	0503010311	1/2" X 1-1/4" BOLT	02	
20	0503010019	1/2" SPRING WASHER	02	
21	0503010025	3/8" SPRING WASHER	02	
22	0503010026	3/8" NUT	02	
23	0503010849	3/8" X 1-1/2" BOLT	02	
24	0503010256	3/8" X 3/4" BOLT	01	
25	0511055819	DEPTH WHIT AROS BAND	02	
26	0503010691	1/4" GREASE FITTING	02	
27	0503033942	COVER REGULATORY WHEEL	01	
28	0521064073	REGULACION WHEEL COMPACTOR	01	
29	0541016906	PRESS WHEELS REGULATOR BODY	01	
30	0521010539	0.3" X 1.2" COUPLING SHAFT	01	
31	0503010140	1/8" X 3/4" COTTERPIN	01	




**PST4 - FRAME 4495 - CSU - WITH ELEVATION (UP TO
DEPTH CONTROL WITH LEVER ANGLE REGULATOR AXIS**

Page 81
0521056317

Item	Code	Description	See page	QT
32	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01

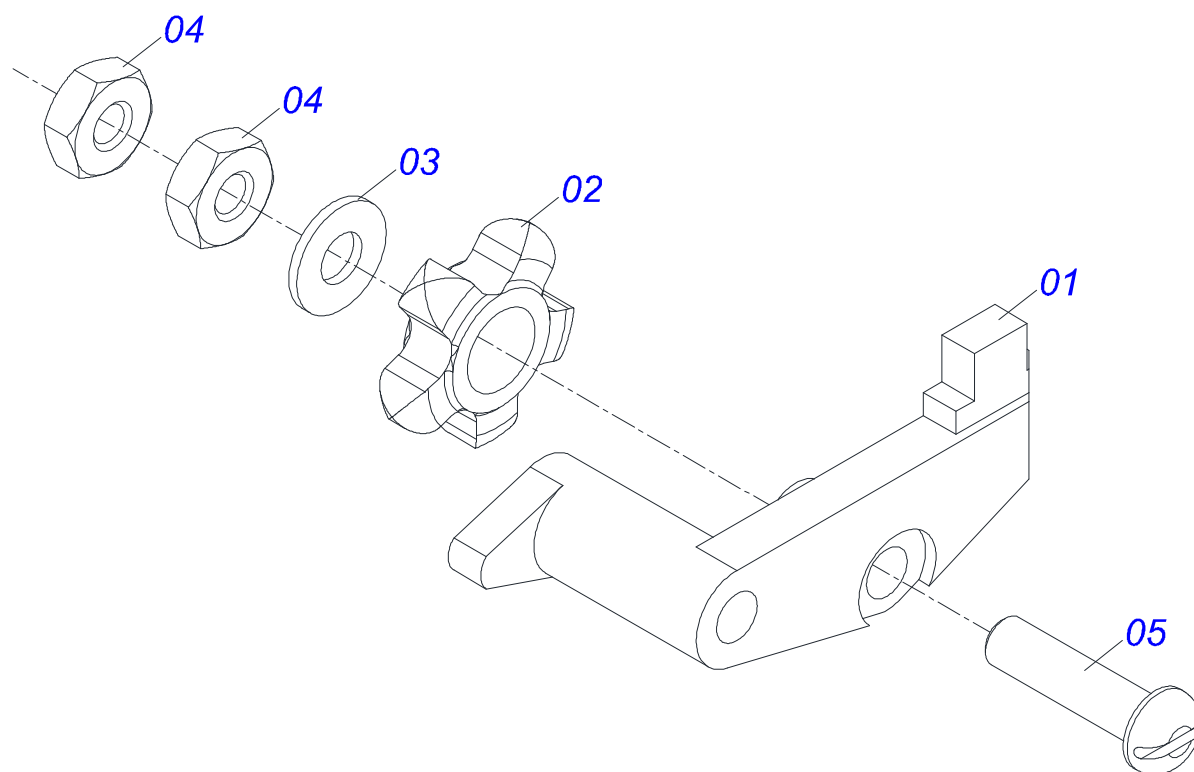

Item	Code	Description	See page	QT
01	0503030379	LARGER ROCKER ARM		01
02	0502060001	PLASTIC PULLEY FOR MAIZE		01
03	0503010669	FLAT WASHER		01
04	0503010667	3/16" NUT		02
05	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		01

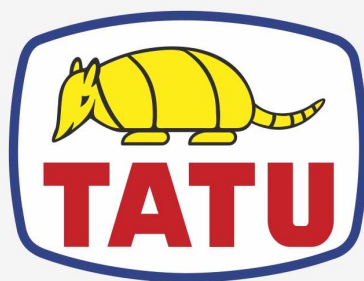

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

