

ROW CROP PLANTERS

COP FLEX 600 - FRAME

**4045/4395/4845/5345/5745/6645/7545/8845 -
CSU - (UP TO 03/2022)**

Code:	0501092770
Series:	S-0115
Revision:	00
Date Revision:	OUTUBRO/2021

PARTS CATALOGUE



MARCHESAN

PRODUCTS

Code	Description
0111111212	COP FLEX 600 4045/9 5LG/4CT IAP CSU C/SENS S-0115
0111111211	COP FLEX 600 4045/9E450 IAPAR CSU C/SENS S-0115
0111111140	COP FLEX 600 4045/9E450 MH CSU S-0115
0111111218	COP FLEX 600 4395/9E500 MH DC20 SPCRR CSU S-0115
0111111269	COP FLEX 600 4845/10E500 CI MH DC20 CSU CBR S-0115
0111111273	COP FLEX 600 4845/11E450 CI MH DC20 CSU CPRA S0115
0111111146	COP FLEX 600 4845/11E450 MH CSU S-0115
0111110686	COP FLEX 600 4845/11E450 MH DC20 CSU S-0115
0111111248	COP FLEX 600 5345/11E500 CI IAP MH DC20 CSU S-0115
0111111301	COP FLEX 600 5345/11E500 ESPECIAL S-0115
0111111173	COP FLEX 600 5345/11E500 H MH DC20 CSU 4ROD S-0115
0111111220	COP FLEX 600 5345/9E600 ESPECIAL S-0115
0111111167	COP FLEX 600 5745/11E500 H MH DC20 CSU S-0115
0111111234	COP FLEX 600 5745/12E500 ESPECIAL S-0115
0111111235	COP FLEX 600 5745/12E500 ESPECIAL S-0115
0111111180	COP FLEX 600 5745/13E450 ESPECIAL S-0115
0111111238	COP FLEX 600 5745/13E450 ESPECIAL S-0115
0111111152	COP FLEX 600 5745/13E450 MH CSU S-0115
0111111156	COP FLEX 600 6645/15E450 MH CSU S-0115
0111111163	COP FLEX 600 7545/15E450 MH DC20 CBRF CSU S-0115
0111111209	COP FLEX 600 7545/15E500 ESPECIAL S-0115
0111111161	COP FLEX 600 7545/17E450 MH CSU S-0115
0111111241	COP FLEX 600 8445/19E450 MH CSU S-0115
0111111138	COP FLEX 600 8845/19E450 MH CSU S-0115

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX

0909092100	ASSY FRAME	1
0511053436	DRAWBAR ASSY	2
0511053393	DRAWBAR	3
0511053289	ASSY DRAWBAR	4
0511050644	DRAWBAR ASSY	5
0511053085	ASSY FIXER HEADER	6
0511053482	SET FIXER HEADER	7
0511054601	HITCH ARTICULATED TRACTOR	8
0511055096	TRACTOR HITCH	9
0511053179	TRACTOR COUPLING SHAFT	10
0511050439	RIGHT WHEEL ASSY	11
0511050440	WHITH LEFT WHEEL ASSY	12
0501110625	BEARING ARTICULATION WHEEL	13
0501054284	STRETCHER CURRENT TRANSMISSION SIDE	14
0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED BOX	15
0511052766	CARRYING WHEEL HUB ASSY	16
0503062158	EEE WHEEL WITH TIRE 700 X 16-10L ASSY	17
0501053522	WHEEL CHAIN TENSIONER	18
0511053375	CURRENT DEVIATION ASSY WHEEL	19
0501058239	WHEEL CHAIN TENSIONER BEARING	20
0511050443	WHITH RIGHT WHEEL ASSY WITHOUT TRANSMISSION	21
0511050444	WHITH LEFT WHEEL ASSY WITHOUT TRANSMISSION	22
0511053428	COMPLETE HYDRAULIC ASSEMBLY WITHOUT HYDRAULIC MARKER	23
0511053358	VALVE FIXING ASSEMBLY	24
0511056277	HYDRAULIC HOSE FIXING ASSEMBLY	25
0511053384	HYDRAULIC CYLINDER ASSEMBLY	26
0511053425	HOSE KIT	27
0501053834	MALE QUICK COUPLER	28
0511054293	SET HIDRAULICO	29
0511053386	SET HIDRAULICO	30
0511053382	FIXER HYDRAULIC HOSE ASSEMBLY	31
0511054290	HOSE KIT	32
0511053373	SET HIDRAULICO	33
0511053368	HYDRAULIC CYLINDER ASSEMBLY	34
0511058411	HYDRAULIC CYLINDER	35
0511053350	FIXER HYDRAULIC HOSE ASSEMBLY	36
0511053290	HOSE KIT	37
0511054305	SET HIDRAULICO	38
0511056278	FIXER HYDRAULIC HOSE ASSEMBLY	39
0511054302	HOSE KIT	40
0511053469	SET HIDRAULICO	41
0511053457	FIXING ASSEMBLY HOSE HYDRAULIC	42
0511053697	HOSE KIT	43
0511053479	SET HIDRAULICO	44
0511053474	HYDRAULIC ASSEMBLY FOR MARKER	45
0501054649	HBM SEQUENTIAL VALVE	46
0511058430	HYDRAULIC CYLINDER	47
0511053948	FIXER HYDRAULIC HOSE ASSEMBLY	48
0511053475	HYDRAULIC CYLINDER ASSEMBLY 8 WHEEL	49
0511053316	HOSE KIT	50
0511053493	SET HIDRAULICO	51
0511053481	FIXING ASSEMBLY HOSE HYDRAULIC	52
0511050905	HOSE KIT	53
0511048939	ASSY RIGHT EXCHANGE	54



MARCHESAN

INDEX

0501058212	SEMI MOUNTED RIGHT CHANGE	55
0501048790	AXLE WITH RING	56
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	57
0501056443	GEAR HOUSING BEARING	58
0501056444	BEARING WITH ROLLING	59
0501056271	GEARBOX CLOSED BEARING	60
0501054655	CHAIN TENSIONER ASSY	61
0511048940	LEFT ASSY EXCHANGE	62
0501058213	LH GEAR BOX	63
0511053429	COMPLETE RIGHT/LEFT FERTILIZER BOX ASSY	64
0511054296	ASSEMBLY FERTILIZER BOX RIGHT/LEFT	65
0511053352	SET BOX FERTILIZER	66
0511054307	SET BOX FERTILIZER	67
0511053374	SET BOX FERTILIZER COP F 600 13	68
0511053455	COMPLETE RIGHT/LEFT FERTILIZER BOX ASSY	69
0511053478	SET BOX FERTILIZER RIGHT LEFT ASSY	70
0511053494	COMPLETE RIGHT/LEFT FERTILIZER BOX ASSY	71
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	72
0511053364	SET TRANSMISSION LEFT ASSY	73
0511053357	SET TRANSMISSION RIGHT ASSY	74
0511053430	PLATFORM ASSY	75
0511054297	PLATFORM ASSEMBLY	76
0511053353	PLATFORM SET	77
0511054308	PLATFORM SET	78
0511053339	PLATFORM SET	79
0511053453	PLATFORM SET	80
0511053477	PLATFORM SET	81
0511053496	PLATFORM SET	82
0511053356	ASSY LADDER	83
0511053431	HANDRAIL ASSY	84
0511054298	HANDRAIL ASSY	85
0511053388	JOINT HANDRAIL SET	86
0511054309	JOINT HANDRAIL SET	87
0511053376	JOINT HANDRAIL SET	88
0511053476	JOINT HANDRAIL SET	89
0511053454	JOINT HANDRAILSET	90
0511053495	JOINT HANDRAIL SET	91
0511053426	MARKER HIDRAULICO	92
0511054295	MARKER HIDRAULICO	93
0511053306	MARKER HIDRAULICO	94
0511053287	MARKER HIDRAULICO	95
0511053450	MARKER HIDRAULICO	96
0909094627	MARKER HIDRAULICO	97
0909094617	CIRCUIT MARKER HIDRAULICO	98
0909094628	CIRCUIT MARKER HIDRAULICO	99
0501050633	ROW MARKER DISK ASSEMBLY	100
0511053904	ROW MARKER DISC	101
0511054971	JACK ASSEMBLY	102
0511053423	MOTOR SHAFT ASSEMBLY	103
0511054292	MOTOR SHAFT ASSEMBLY	104
0511053380	MOTOR SHAFT ASSEMBLY	105
0511054304	MOTOR SHAFT ASSEMBLY	106
0511053341	MOTOR SHAFT ASSEMBLY	107
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	108
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	109




MARCHESAN

INDEX

0511051434	TRANSMISSION ACTUATOR	110
0511053424	HEX AXLE ASSEMBLY	111
0511054291	HEX AXLE ASSEMBLY	112
0511053381	HEX AXLE ASSEMBLY	113
0511054303	HEX AXLE ASSEMBLY	114
0511053361	HEX AXLE ASSEMBLY	115
0511053456	HEX AXLE ASSEMBLY	116
0511053480	HEX AXLE ASSEMBLY	117
0511053492	HEX AXLE ASSEMBLY	118
0511056597	ASSY PORT MANUAL INSTRUCCION	119
0511053342	SQUARE AXLE ASSEMBLY	120
0511053434	SQUARE SHAFT SET	121
0511050906	DRAWBAR TURNBUCKLE	122
0521050783	ASSEMBLY CSU	123
0511058100	2 BOXES WITH 9 CONDUCTORS ASSEMBLY	124
0511057690	3" ARTICULATED SEED CONDUCTOR	125
0511058841	ASSEMBLY CSU	126
0511057919	2 BOXES WITH 11 CONDUCTORS ASSEMBLY	127
0521050884	ASSEMBLY CSU	128
0521050886	ASSEMBLY CSU	129
0521050710	ASSEMBLY CSU	130
0511058880	ASSEMBLY CSU	131
0511058434	ASSEMBLY CSU	132
0511057780	ASSEMBLY CSU	133
0521050780	ASSEMBLY CSU	134
0511057755	ASSEMBLY CSU 6850	135
0521050779	ASSEMBLY CSU	136
0511058364	ENSEMBLE BOX UNIQUE SEED C3 2CX 5B + 2CX 6B C/17 C	137
0511053432	SET LABEL ADHESIVE	138
0511059796	SET LABEL ADHESIVE	139
0511054858	ASSY STICKER	140
0511053354	HYDRAULIC MARKER LABEL ASSY 13	141
0511053451	SET LABEL ADHESIVE	142
0511053483	SET LABEL ADHESIVE	143
0511053497	ASSY LABEL ADHESIVE	144
0511052332	ASSY SUPPORT RIGHT FIXER CHANGE	145
0511052333	ASSEMBLY SUPPORT LEFT FIXER CHANGE	146
0909093547	FERTILIZER LINE AND FULL SEED	147
0511052411	FRONT SEED LONG ROW WITH CARDAN	148
0511052410	FRONT SEED SHORT ROW WITH CARDAN	149
0511054884	TRANSMISSION BOX	150
0909093546	REAR SEED LINE	151
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	152
0511058650	SEMI-MOUNTED DEPTH CONTROL	153
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	154
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	155
0501052627	ASSY DEPTH WHEEL BOX	156
0501052297	DEPTH WHEELS REGULATOR ASSY	157
0501052908	COMPACTOR WHEEL WITH BEARING	158
0511054333	COMPACT WHEEL RIGHT WITH BEARING	159
0511054334	COMPACT WHEEL LEFT WITH BEARING	160
0501059631	DDD SEED 15 X 15 RIGHT	161
0501054167	BOX DDD ASSY DPL 15 RIGHT	162
0501054168	BOX DDD ASSY DPL 15 LEFT	163
0501059632	DDD SEED 15X15 LEFT	164

INDEX

0501052538	DEPTH BAND WITH ARMS		165
0501052234	ASSY SEED SYSTEM		166
0501051094	ASSY SEED DISTRIBUTOR		167
0501051119	DOUBLE PULLEY ROCKER'S		168
0511053023	LONG FERTILIZER LINE		169
0511053223	FERTILIZER ROW SUPPORT WITH SCREW		170
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR		171
0511053173	CUBE LOW RIGHT WITH DISC 15		172
0511053172	LEFT LOW CUBE WITH DISC 15		173
0511053024	FERTILIZER SHORT LINE		174
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR		175
0511051818	DISC CUT 18 SEMI MOUNTED		176
0501052139	ASSY CUTTING DISK DPL18		177
0511051819	DC 20 SEMI MOUNTED		178
0501054887	20 BLADE DISC WITH FLAT PLAN DISC		179
0501052976	RIGHT FERTILIZER DOUBLE DISC		180
0501052977	LEFT FERTILIZER DOUBLE DISC		181
0909092088	FERTILIZER AND SEED LINE		182
0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL		183
0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL		184
0501054482	DEPTH CONTROL LEFT ARM WITH TIRE		185
0501056435	LEFT CONTROL ARM DEPTH WITHOUT WHEEL		186

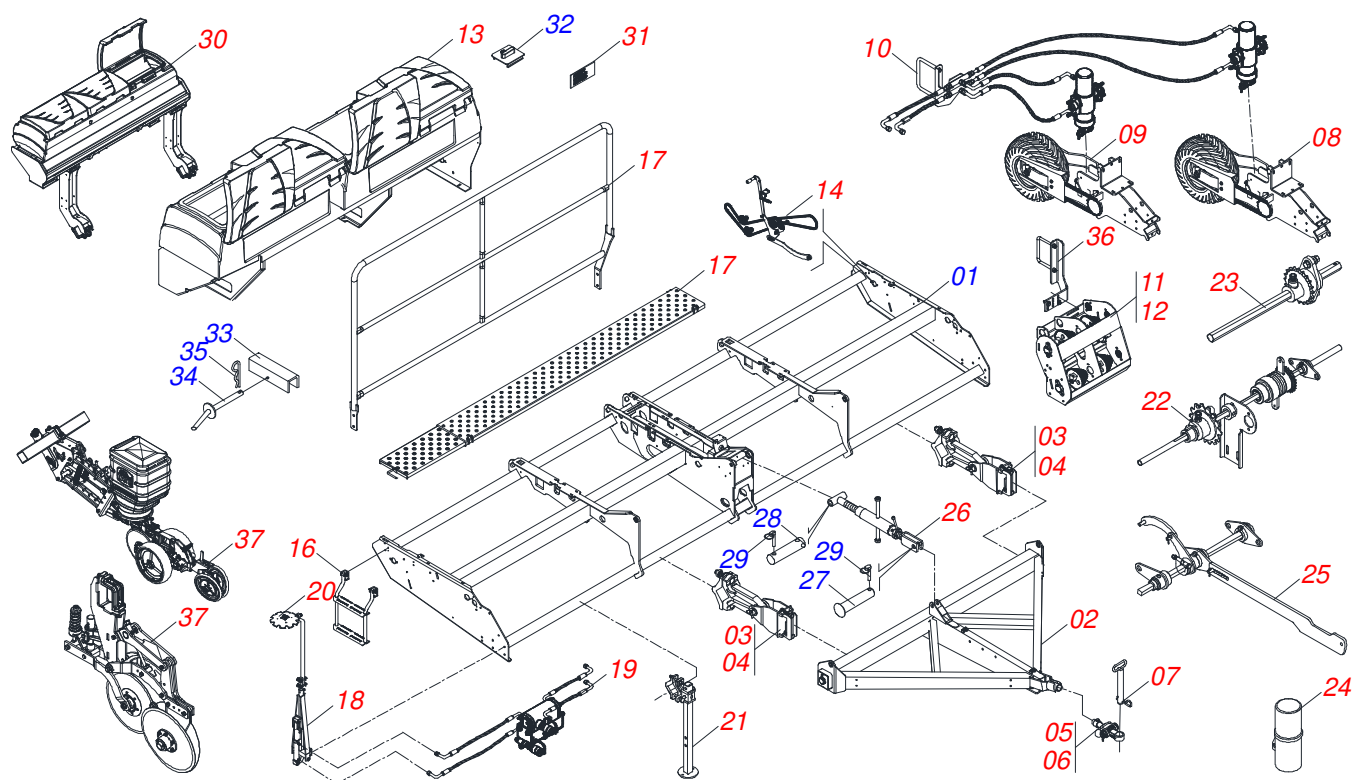

Item	Code	Description	See page	4045	4395	4845	5345	5745	6645	7545	8845
01	0521061932	FRAME (4045)		01	00	00	00	00	00	00	00
01.	0521063941	FREME (4395)		00	01	00	00	00	00	00	00
01..	0521061841	FRAME (4845)		00	00	01	00	00	00	00	00
01...	0521063953	FRAME (5345)		00	00	00	01	00	00	00	00
01....	0521061933	FRAME (5745)		00	00	00	00	01	00	00	00
01.....	0521061934	FRAME (6645)		00	00	00	00	00	01	00	00
01.....	0521061935	FRAME (7545)		00	00	00	00	00	00	01	00
01.....	0521061936	FRAME (8445)		00	00	00	00	00	00	00	01
02	0511053436	DRAWBAR ASSY	2	01	01	01	00	00	00	00	00
02.	0511053393	DRAWBAR	3	00	00	00	01	00	00	00	00
02..	0511053289	ASSY DRAWBAR	4	00	00	00	00	01	00	00	00
02...	0511050644	DRAWBAR ASSY	5	00	00	00	00	00	00	01	01
03	0511053085	ASSY FIXER HEADER	6	00	00	00	00	00	01	00	00
04	0511053482	SET FIXER HEADER	7	00	00	00	00	00	00	01	01
05	0511054601	HITCH ARTICULATED TRACTOR	8	01	01	01	01	01	00	00	00
06	0511055096	TRACTOR HITCH	9	00	00	00	00	00	01	01	01
07	0511053179	TRACTOR COUPLING SHAFT	10	01	01	01	01	01	01	01	01
08	0511050439	RIGHT WHEEL ASSY	11	02	02	02	02	02	02	02	02
08.	0511050440	WHITH LEFT WHEEL ASSY	12	02	02	02	02	02	02	02	02
09	0511050443	WHITH RIGHT WHEEL ASSY WITHOUT TRANSMISSION	21	00	00	00	00	02	02	02	02
09.	0511050444	WHITH LEFT WHEEL ASSY WITHOUT TRANSMISSION	22	00	00	00	00	02	02	02	02
10	0511053428	COMPLETE HYDRAULIC ASSEMBLY WITHOUT HYDRAULIC MARKER	23	01	00	00	00	00	00	00	00
10.	0511054293	SET HIDRAULICO	29	00	01	00	00	00	00	00	00
10..	0511053386	SET HIDRAULICO	30	00	00	01	00	00	00	00	00
10...	0511053373	SET HIDRAULICO	33	00	00	00	01	00	00	00	00
10....	0511054305	SET HIDRAULICO	38	00	00	00	00	01	00	00	00
10.....	0511053469	SET HIDRAULICO	41	00	01	00	00	00	01	00	00
10.....	0511053479	SET HIDRAULICO	44	00	00	00	00	00	00	01	00
10.....	0511053493	SET HIDRAULICO	51	00	00	00	00	00	00	00	01

ASSY FRAME


0909092100

Item	Code	Description	See page	4045	4395	4845	5345	5745	6645	7545	8845
11	0511048939	ASSY RIGHT EXCHANGE	54	01	01	01	01	01	01	01	01
12	0511048940	LEFT ASSY EXCHANGE	62	01	01	01	01	01	01	01	01
13	0511053429	COMPLETE RIGHT/LEFT FERTILIZER BOX ASSY	64	01	00	00	00	00	00	00	00
13.	0511054296	ASSEMBLY FERTILIZER BOX RIGHT/LEFT	65	00	01	00	00	00	00	00	00
13..	0511053352	SET BOX FERTILIZER	66	00	00	01	00	00	00	00	00
13...	0511054307	SET BOX FERTILIZER	67	00	00	00	01	00	00	00	00
13....	0511053374	SET BOX FERTILIZER COP F 600 13	68	00	00	00	00	01	00	00	00
13.....	0511053455	COMPLETE RIGHT/LEFT FERTILIZER BOX ASSY	69	00	00	00	00	00	01	00	00
13.....	0511053478	SET BOX FERTILIZER RIGHT LEFT ASSY	70	00	00	00	00	00	00	01	00
13.....	0511053494	COMPLETE RIGHT/LEFT FERTILIZER BOX ASSY	71	00	00	00	00	00	00	00	01
14	0511053364	SET TRANSMISSION LEFT ASSY	73	01	01	01	01	01	01	01	01
14.	0511053357	SET TRANSMISSION RIGHT ASSY	74	01	01	01	01	01	01	01	01
15	0511053430	PLATFORM ASSY	75	01	00	00	00	00	00	00	00
15.	0511054297	PLATFORM ASSEMBLY	76	00	01	00	00	00	00	00	00
15..	0511053353	PLATFORM SET	77	00	00	01	00	00	00	00	00
15...	0511054308	PLATFORM SET	78	00	00	00	01	00	00	00	00
15....	0511053339	PLATFORM SET	79	00	00	00	00	01	00	00	00
15.....	0511053453	PLATFORM SET	80	00	00	00	00	00	01	00	00
15.....	0511053477	PLATFORM SET	81	00	00	00	00	00	00	01	00
15.....	0511053496	PLATFORM SET	82	00	00	00	00	00	00	00	01
16	0511053356	ASSY LADDER	83	02	02	02	02	02	02	02	02
17	0511053431	HANDRAIL ASSY	84	01	00	00	00	00	00	00	00
17.	0511054298	HANDRAIL ASSY	85	00	01	00	00	00	00	00	00
17..	0511053388	JOINT HANDRAIL SET	86	00	00	01	00	00	00	00	00
17...	0511054309	JOINT HANDRAIL SET	87	00	00	00	01	00	00	00	00
17....	0511053376	JOINT HANDRAIL SET	88	00	00	00	00	01	00	00	00
17.....	0511053454	JOINT HANDRAILSET	90	00	00	00	00	00	01	00	00
17.....	0511053476	JOINT HANDRAIL SET	89	00	00	00	00	00	00	01	00
17.....	0511053495	JOINT HANDRAIL SET	91	00	00	00	00	00	00	00	01
18	0511053426	MARKER HIDRAULICO	92	01	00	00	00	00	00	00	00
18.	0511054295	MARKER HIDRAULICO	93	00	01	00	00	00	00	00	00
18..	0511053306	MARKER HIDRAULICO	94	00	00	01	00	00	00	00	00
18...	0511053287	MARKER HIDRAULICO	95	00	00	00	01	00	00	00	00
18....	0511053450	MARKER HIDRAULICO	96	00	00	00	00	00	01	00	00
18.....	0909094627	MARKER HIDRAULICO	97	00	00	00	00	00	00	01	01
19	0909094617	CIRCUIT MARKER HIDRAULICO	98	01	01	01	01	01	00	00	00
19.	0909094628	CIRCUIT MARKER HIDRAULICO	99	00	00	00	00	00	01	01	01
20	0501050633	ROW MARKER DISK ASSEMBLY	100	02	02	02	02	02	02	02	02
21	0511054971	JACK ASSEMBLY	102	02	02	02	02	02	02	02	02
22	0511053423	MOTOR SHAFT ASSEMBLY	103	01	00	00	00	00	01	01	01
22.	0511054292	MOTOR SHAFT ASSEMBLY	104	00	01	00	00	00	00	00	00
22..	0511053380	MOTOR SHAFT ASSEMBLY	105	00	00	01	00	00	00	00	00
22...	0511054304	MOTOR SHAFT ASSEMBLY	106	00	00	00	01	00	00	00	00
22....	0511053341	MOTOR SHAFT ASSEMBLY	107	00	00	00	00	01	00	00	00
23	0511053424	HEX AXLE ASSEMBLY	111	01	00	00	00	00	00	00	00
23.	0511054291	HEX AXLE ASSEMBLY	112	00	01	00	00	00	00	00	00
23..	0511053381	HEX AXLE ASSEMBLY	113	00	00	01	00	00	00	00	00
23...	0511054303	HEX AXLE ASSEMBLY	114	00	00	00	01	00	00	00	00
23....	0511053361	HEX AXLE ASSEMBLY	115	00	00	00	00	01	00	00	00
23.....	0511053456	HEX AXLE ASSEMBLY	116	00	00	00	00	00	01	00	00
23.....	0511053480	HEX AXLE ASSEMBLY	117	00	00	00	00	00	00	01	00
23.....	0511053492	HEX AXLE ASSEMBLY	118	00	00	00	00	00	00	00	01
24	0511056597	ASSY PORT MANUAL INSTRUCCION	119	01	01	01	01	01	01	01	01
25	0511053342	SQUARE AXLE ASSEMBLY	120	01	01	01	01	01	01	01	01
25.	0511053434	SQUARE SHAFT SET	121	01	01	01	01	01	01	01	01
26	0511050906	DRAWBAR TURNBUCKLE	122	01	01	01	01	01	01	01	01
27	0521018532	1.4" X 12" COUPLING SHAFT		01	01	01	01	01	01	01	01
28	0521010578	COUPLING SHAFT		01	01	01	01	01	01	01	01
29	0503030085	LOCK PIN		02	02	02	02	02	02	02	02


ASSY FRAME

0909092100


Item	Code	Description	See page	4045	4395	4845	5345	5745	6645	7545	8845
30	0521050783	ASSEMBLY CSU	123	01	01	00	00	00	00	00	00
30.	0511058841	ASSEMBLY CSU	126	00	00	01	00	00	00	00	00
30..	0521050884	ASSEMBLY CSU	128	00	00	00	01	00	00	00	00
30...	0521050710	ASSEMBLY CSU	130	00	00	00	00	01	00	00	00
30....	0521050780	ASSEMBLY CSU	134	00	00	00	00	00	01	00	00
30.....	0511058434	ASSEMBLY CSU	132	00	00	00	00	00	00	01	00
30.....	0521050779	ASSEMBLY CSU	136	00	00	00	00	00	00	00	01
31	0511053432	SET LABEL ADHESIVE	138	01	00	00	00	00	00	00	00
31.	0511059796	SET LABEL ADHESIVE	139	00	01	00	00	00	00	00	00
31..	0531050619	ASSY STICKER		00	00	01	00	00	00	00	00
31...	0511054858	ASSY STICKER	140	00	00	00	01	00	00	00	00
31....	0511053354	HYDRAULIC MARKER LABEL ASSY 13	141	00	00	00	00	01	00	00	00
31.....	0511053451	SET LABEL ADHESIVE	142	00	00	00	00	00	01	00	00
31.....	0511053483	SET LABEL ADHESIVE	143	00	00	00	00	00	00	01	00
31.....	0511053497	ASSY LABEL ADHESIVE	144	00	00	00	00	00	00	00	01
32	0503032624	SILO FERTILIZER GUTTER		00	00	07	00	00	00	00	00
33	0521013022	TRANSPORT LOCK		04	04	04	04	04	04	04	04
34	0501068994	0.3" X 3.1"LOCK PIN		04	04	04	04	04	04	04	04
35	0503030168	CUPILLA		04	04	04	04	04	04	04	04
36	0511052332	ASSY SUPPORT RIGHT FIXER CHANGE	145	01	01	01	01	01	01	01	01
36.	0511052333	ASSEMBLY SUPPORT LEFT FIXER CHANGE	146	01	01	01	01	01	01	01	01
37	0909093547	FERTILIZER LINE AND FULL SEED	147	09	09	10	11	13	15	17	19
37.	0909092088	FERTILIZER AND SEED LINE	182	09	09	10	11	13	15	17	19

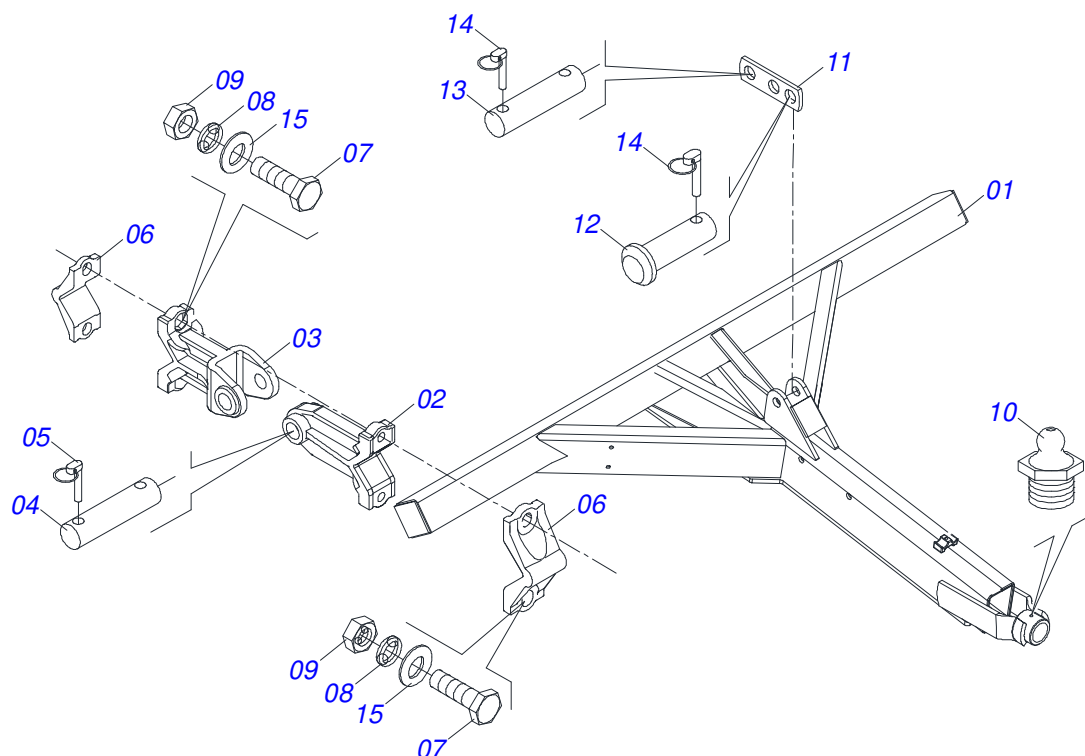


Item	Code	Description	See page	QT
01	0531063130	HEADER	01	
02	0502012328	DRAWBAR SUPPORT FRONT FIXATION	02	
03	0502012329	DRAWBAR FIXATION REAR SUPPORT	02	
04	0561014393	COUPLING SHAFT	02	
05	0503030119	LOCK PIN	02	
06	0502012330	SUPPORT FIXER PIVOT	04	
07	0503011084	3/4" X 5" BOLT	08	
08	0503010023	3/4" SPRING WASHER	04	
09	0503010014	3/4" NUT	04	
10	0503010002	1800 GREASE FITTING	01	
11	0561019087	DRAWBAR TRANSPORT LOCK	01	
12	0521018532	1.4" X 12" COUPLING SHAFT	01	
13	0521010578	COUPLING SHAFT	01	
14	0503030085	LOCK PIN	03	
15	0501010322	FLAT WASHER	04	

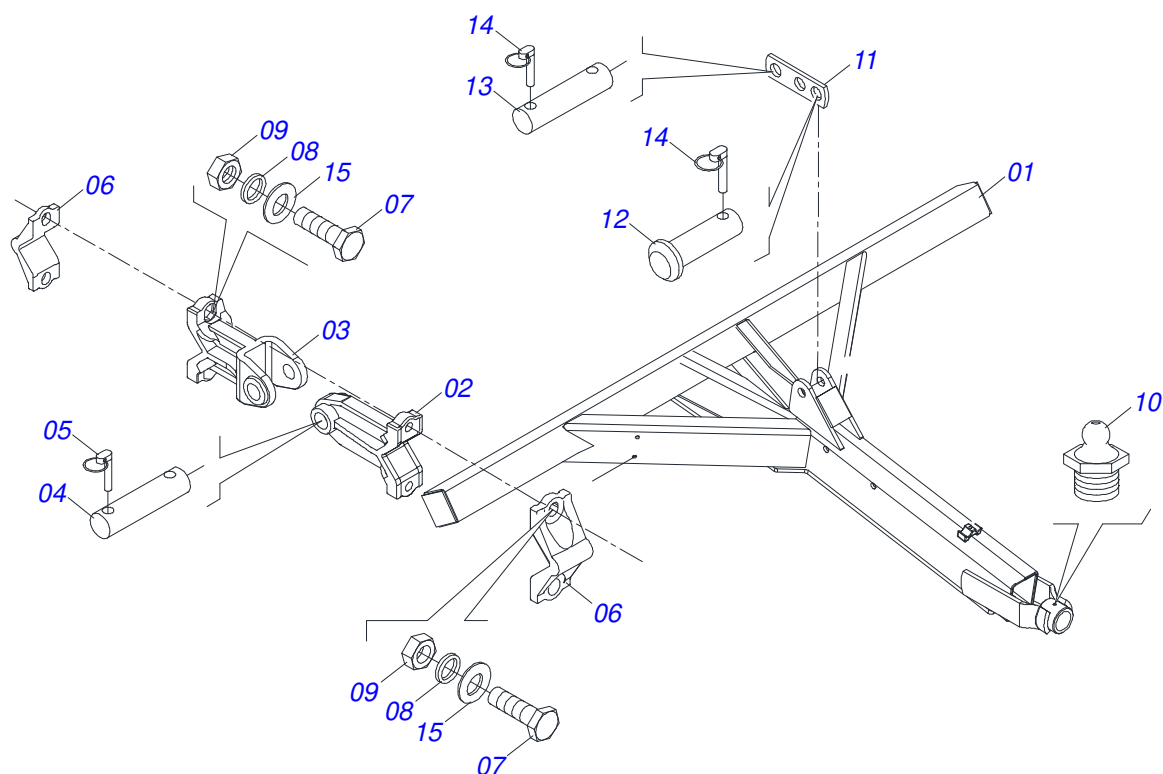


Item	Code	Description	See page	QT
01	0511064808	DRAWBAR		01
02	0502012328	DRAWBAR SUPPORT FRONT FIXATION		04
03	0502012329	DRAWBAR FIXATION REAR SUPPORT		04
04	0561014393	COUPLING SHAFT		04
05	0503030119	LOCK PIN		04
06	0502012330	SUPPORT FIXER PIVOT		08
07	0503011084	3/4" X 5" BOLT		16
08	0503010023	3/4" SPRING WASHER		08
09	0503010014	3/4" NUT		08
10	0503010002	1800 GREASE FITTING		01
11	0561019087	DRAWBAR TRANSPORT LOCK		01
12	0521018532	1.4" X 12" COUPLING SHAFT		01
13	0521010578	COUPLING SHAFT		01
14	0503030085	LOCK PIN		03
15	0501010322	FLAT WASHER		08

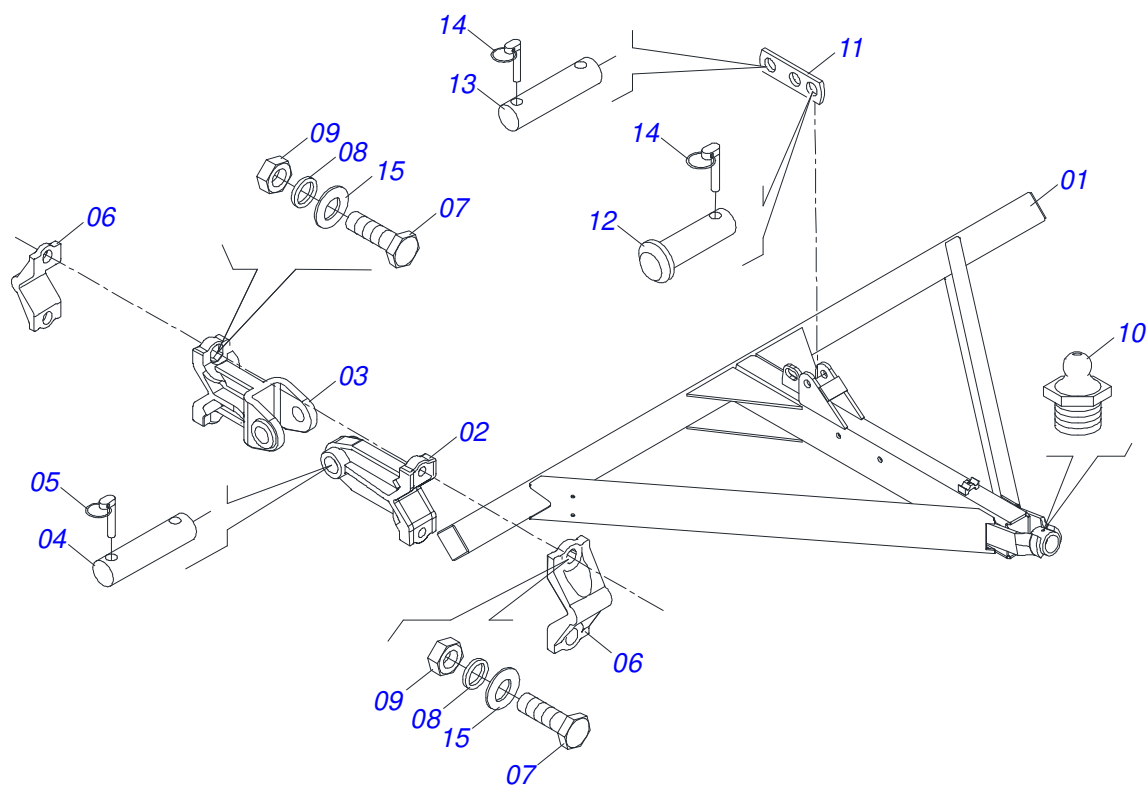


Item	Code	Description	See page	QT
01	0511062824	DRAWBAR		00
02	0502012328	DRAWBAR SUPPORT FRONT FIXATION		04
03	0502012329	DRAWBAR FIXATION REAR SUPPORT		04
04	0561014393	COUPLING SHAFT		04
05	0503030119	LOCK PIN		04
06	0502012330	SUPPORT FIXER PIVOT		08
07	0503011084	3/4" X 5" BOLT		16
08	0503010023	3/4" SPRING WASHER		08
09	0503010014	3/4" NUT		08
10	0503010002	1800 GREASE FITTING		01
11	0561019087	DRAWBAR TRANSPORT LOCK		01
12	0521018532	1.4" X 12" COUPLING SHAFT		01
13	0521010578	COUPLING SHAFT		01
14	0503030085	LOCK PIN		03
15	0501010322	FLAT WASHER		08

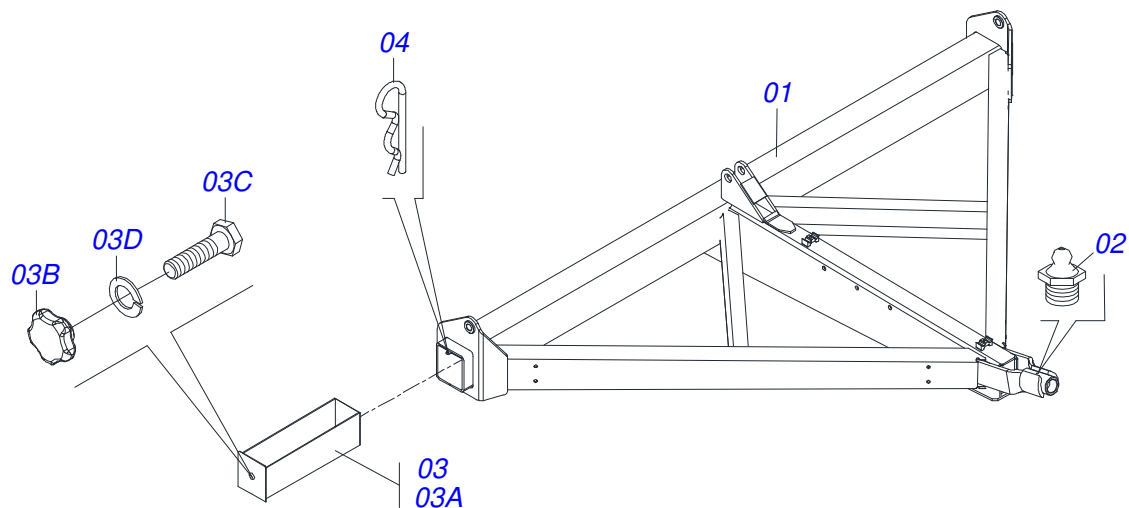


Item	Code	Description	See page	QT
01	0521062074	DRAWBAR		01
02	0503010002	1800 GREASE FITTING		01
03	0511043137	TOOLS BOX ASSY		02
03A	0511065471	BOX OF TOOLS		01
03B	0503010293	BAQUELITE MANIPULACION		01
03C	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
03D	0503011443	3/8" SPRING WASHER		01
04	0503030012	HAIR PIN		02

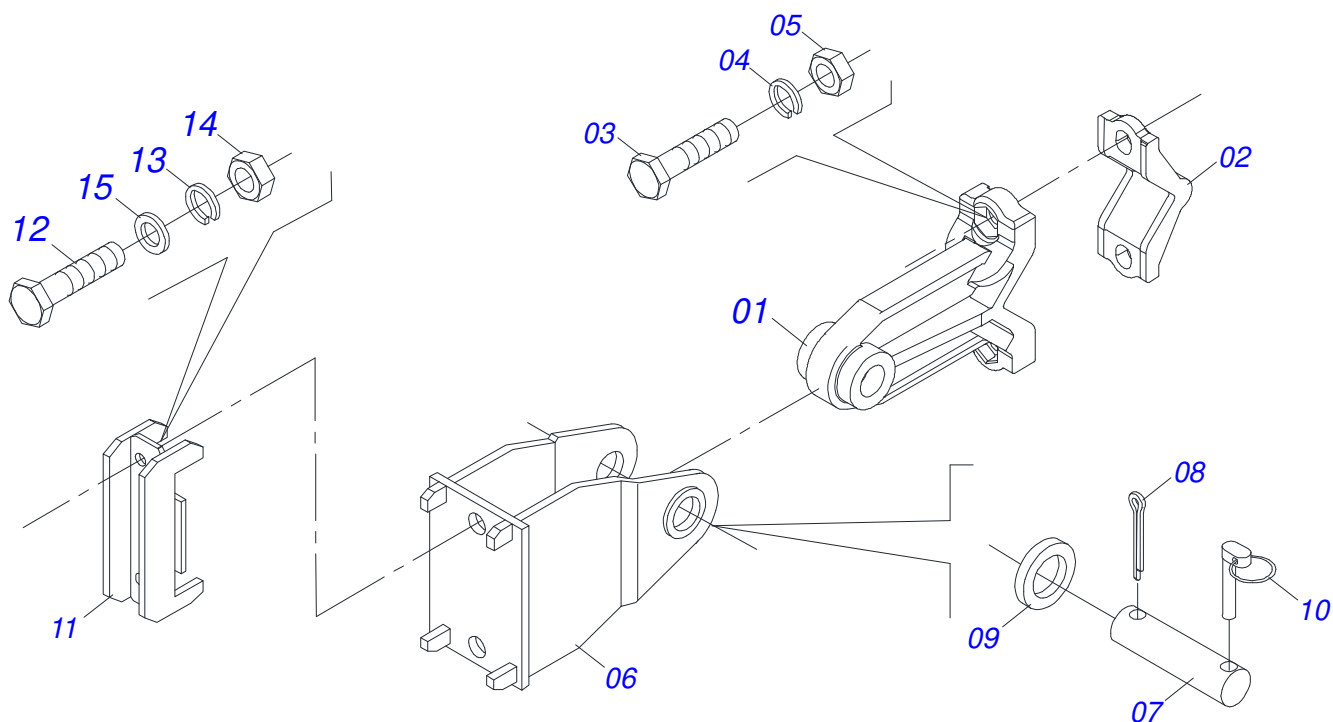


Item	Code	Description	See page	QT
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	04	
02	0502012330	SUPPORT FIXER PIVOT	04	
03	0503011084	3/4" X 5" BOLT	08	
04	0503010023	3/4" SPRING WASHER	08	
05	0503010014	3/4" NUT	08	
06	0511065418	DRAWBAR SUPPORT FRONT FIXATION	04	
07	0561014393	COUPLING SHAFT	04	
08	0503010523	1/4" X 2" COTTERPIN	04	
09	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN	08	
10	0503030119	LOCK PIN	04	
11	0511065419	DRAWBAR FIXER CLAMP	04	
12	0521010066	3/4" X 8.12" BOLT	08	
13	0503010023	3/4" SPRING WASHER	08	
14	0503010014	3/4" NUT	08	
15	0501010322	FLAT WASHER	08	

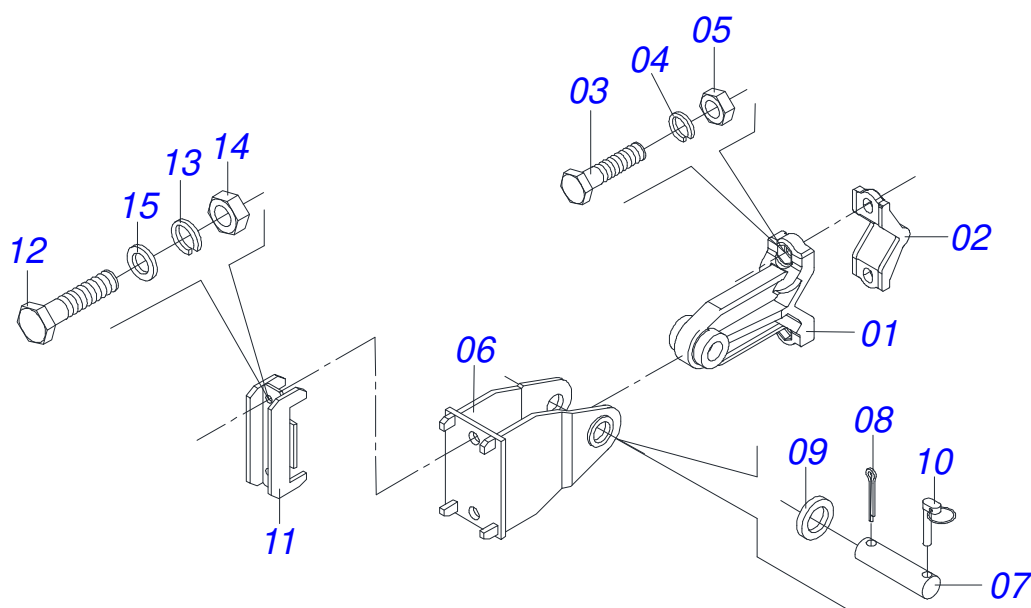


Item	Code	Description	See page	QT
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	06	
02	0502012330	SUPPORT FIXER PIVOT	06	
03	0503011084	3/4" X 5" BOLT	12	
04	0503010023	3/4" SPRING WASHER	12	
05	0503010014	3/4" NUT	12	
06	0511065418	DRAWBAR SUPPORT FRONT FIXATION	06	
07	0561014393	COUPLING SHAFT	06	
08	0503010523	1/4" X 2" COTTERPIN	06	
09	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN	12	
10	0503030119	LOCK PIN	12	
11	0511065419	DRAWBAR FIXER CLAMP	06	
12	0521010066	3/4" X 8.12" BOLT	12	
13	0503010023	3/4" SPRING WASHER	12	
14	0503010014	3/4" NUT	12	
15	0501010322	FLAT WASHER	12	

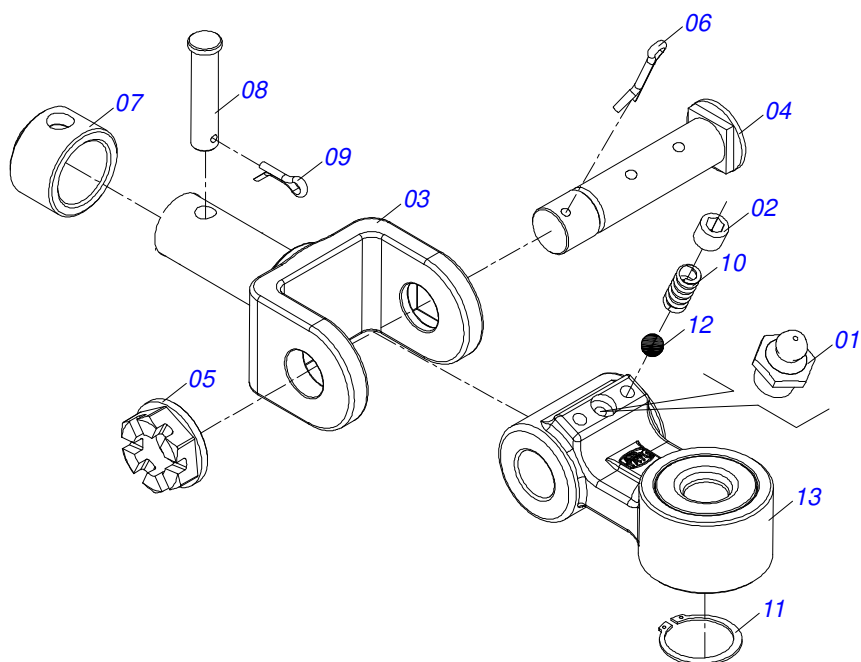


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0581019654	ASSY BOLT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2 COTTERPIN		01
10	0503033731	COMPRESSION SPRING LEFT		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

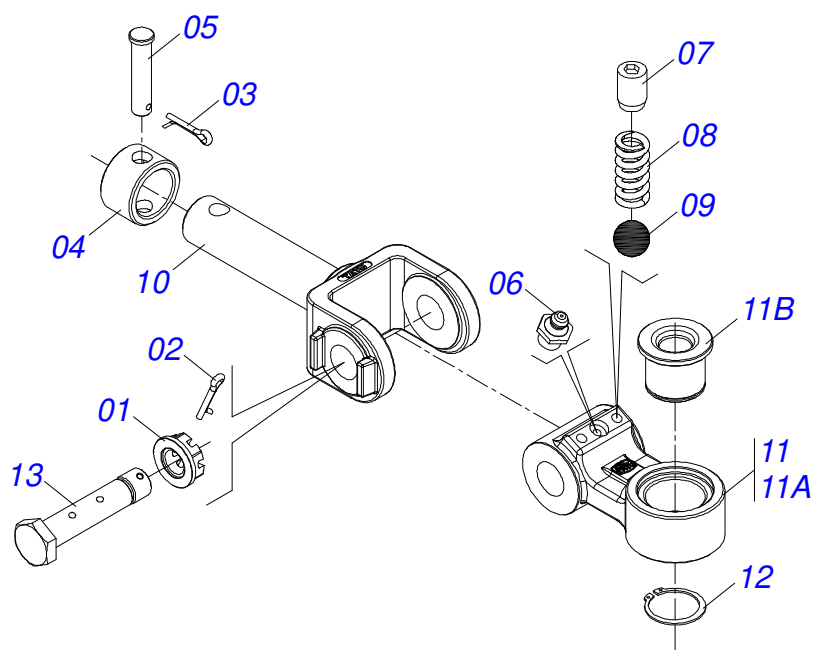

Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	COMPRESSION SPRING LEFT		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

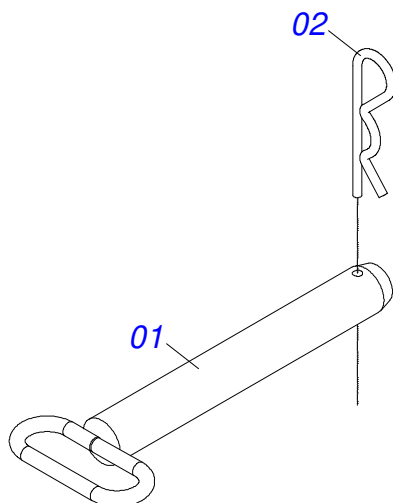


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HAIR PIN		01

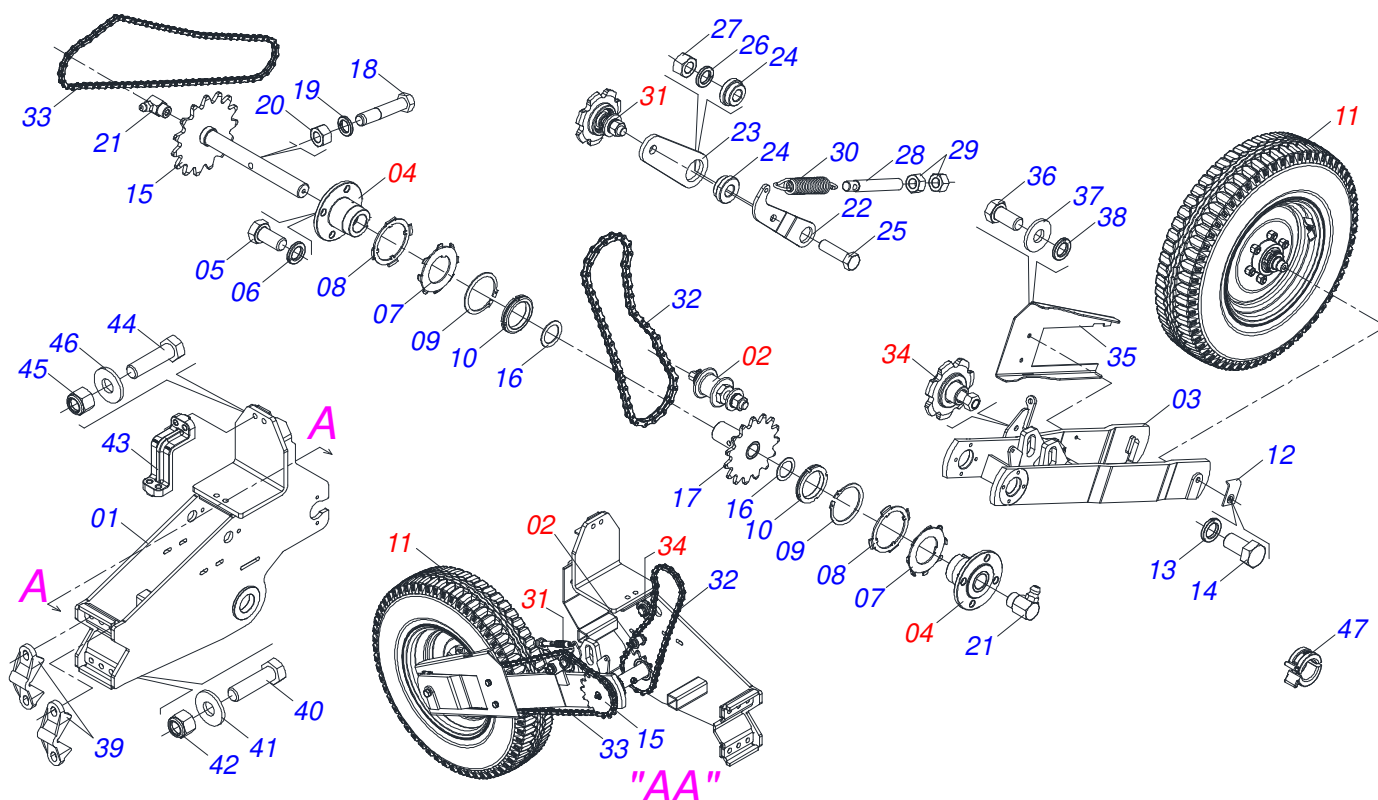


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0501054284	STRETCHER CURRENT TRANSMISSION SIDE	14	01
03	0511064744	WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	13	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 15 BOX		01
12	0591010589	BODY LOCK WHEEL		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011167	M16 X 2 X 30 BOLT		02
15	0511061808	15Z GEAR WITH AXLE,		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0531016916	SLEEVE BEARING SUPPORT		02
25	0503010899	5/8" X 2-1/4" BOLT		01
26	0503010027	5/8" SPRING WASHER		01
27	0503010013	5/8" NUT		01
28	0501013491	5/8" TENSIONER SPRING		01
29	0503010013	5/8" NUT		02
30	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
31	0501053522	WHEEL CHAIN TENSIONER	18	01

Item	Code	Description	See page	QT
32	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
33	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
34	0511053375	CURRENT DEVIATION ASSY WHEEL	19	01
35	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
36	0503010834	1/2 X 1 BOLT		02
37	0511017302	FLAT WASHER		02
38	0503010019	1/2" SPRING WASHER		02
39	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
40	0503016485	BOLT 3/4		04
41	0501010322	FLAT WASHER		04
42	0503010152	3/4" SELF LOCKING NUT		04
43	0502012720	WHEEL SUPPORT FIXER		01
44	0503017857	BOLT 5/8 UNF 4		04
45	0503010811	5/8" UNF SELF ADJUSTING NUT		04
46	0501012140	FLAT WASHER		04
47	0501047888	ROD STOP		01

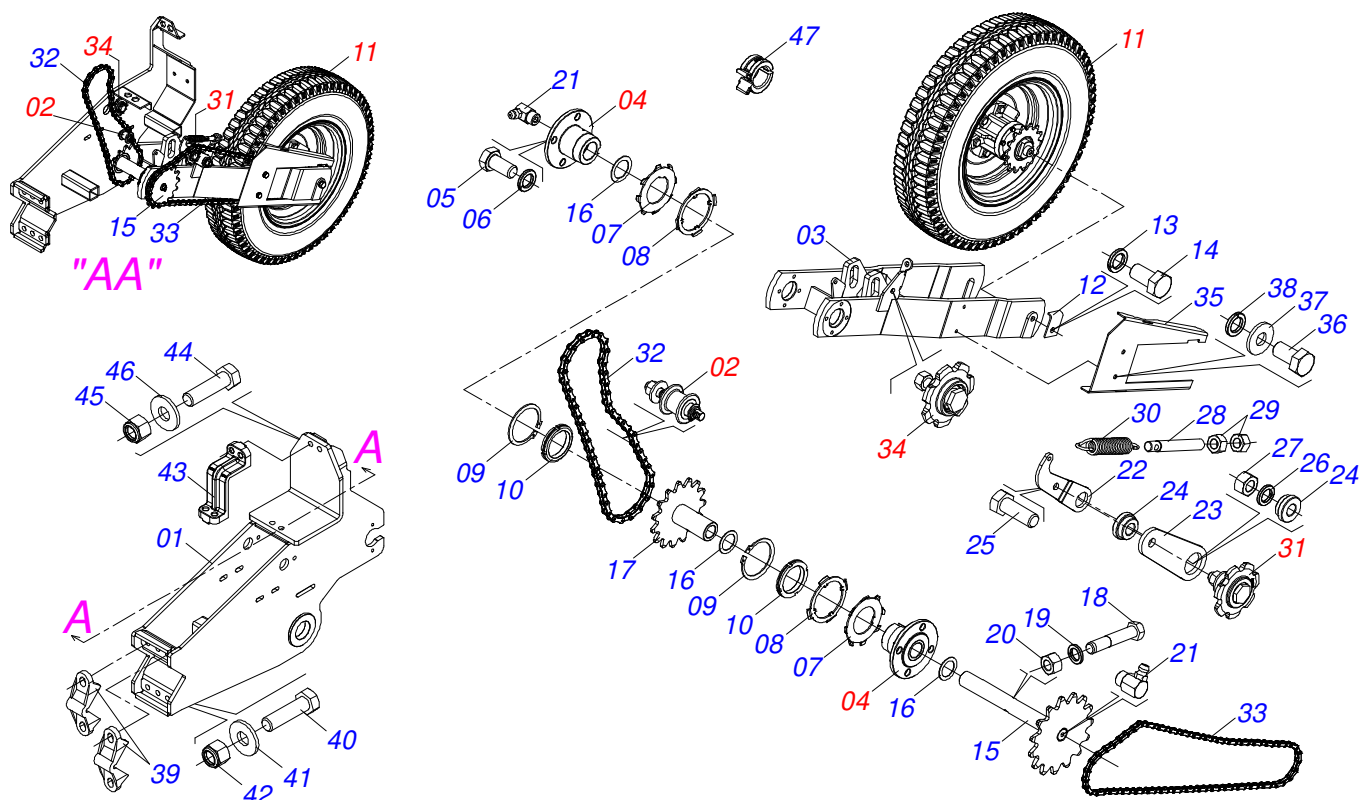


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0501054284	STRETCHER CURRENT TRANSMISSION SIDE	14	01
03	0511065842	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	13	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED 15 BOX		01
12	0591010589	BODY LOCK WHEEL		02
13	0503010027	5/8" SPRING WASHER		02
14	0503011167	M16 X 2 X 30 BOLT		02
15	0511061808	15Z GEAR WITH AXLE,		01
16	0501018466	FLAT WASHER		01
17	0511061809	15Z GEAR WITH COUPLING		01
18	0503011103	7/16" X 2-1/2" BOLT		01
19	0503010180	7/16" SPRING WASHER		01
20	0503010244	7/16" NUT		01
21	0503010004	1890 GREASE FITTING		02
22	0531018654	CHAIN TIGHTENER SUPPORT		01
23	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
24	0531016916	SLEEVE BEARING SUPPORT		02
25	0503010899	5/8" X 2-1/4" BOLT		01
26	0503010027	5/8" SPRING WASHER		01
27	0503010013	5/8" NUT		01
28	0501013491	5/8" TENSIONER SPRING		01
29	0503010013	5/8" NUT		02
30	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
31	0501053522	WHEEL CHAIN TENSIONER	18	01


Item	Code	Description	See page	QT
32	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
33	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
34	0511053375	CURRENT DEVIATION ASSY WHEEL	19	01
35	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
36	0503010834	1/2 X 1 BOLT		02
37	0511017302	FLAT WASHER		02
38	0503010019	1/2" SPRING WASHER		02
39	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
40	0503016485	BOLT 3/4		04
41	0501010322	FLAT WASHER		04
42	0503010152	3/4" SELF LOCKING NUT		04
43	0502012720	WHEEL SUPPORT FIXER		01
44	0503017857	BOLT 5/8 UNF 4		04
45	0503010811	5/8" UNF SELF ADJUSTING NUT		04
46	0501012140	FLAT WASHER		04
47	0501047888	ROD STOP		01

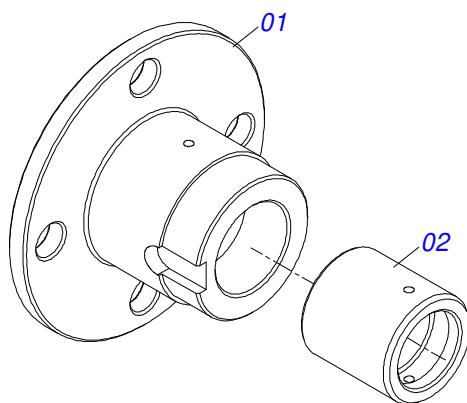


Item	Code	Description	See page	QT
01	0561015879	WHEELED JOINT BEARING		01
02	0561012895	GLOVE 30,16 X 45,32/45,28 X 47		01

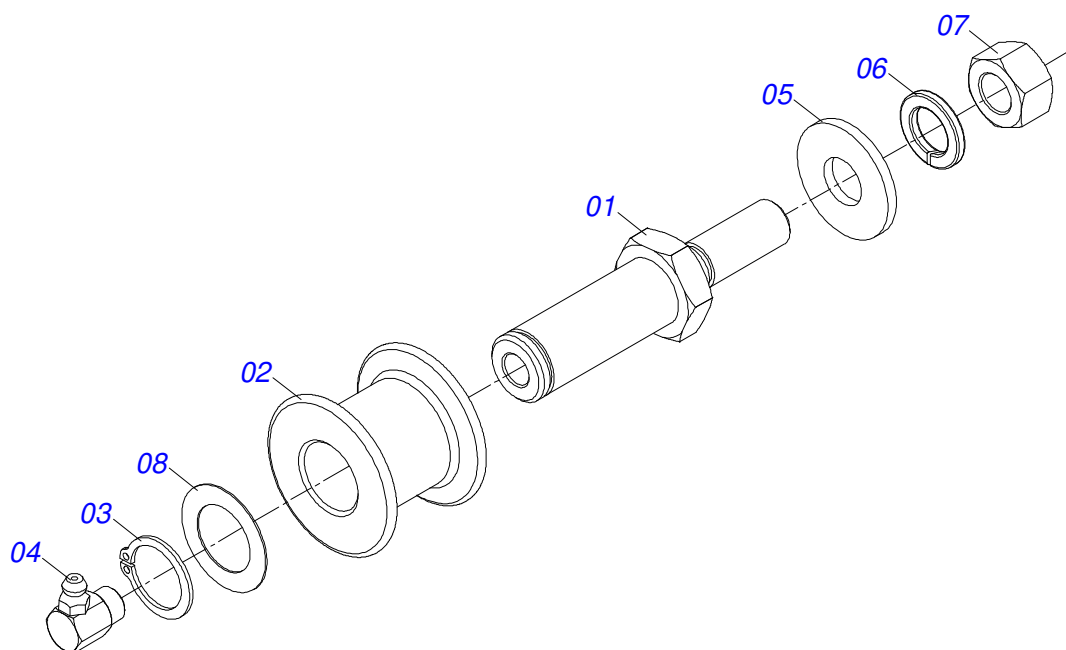


Item	Code	Description	See page	QT
01	0531017202	AXLE CHAIN TIGHTENER		01
02	0503030402	PULLEY		01
03	0503010302	501019 SEAL RING		01
04	0503010004	1890 GREASE FITTING		01
05	0511017302	FLAT WASHER		01
06	0503010019	1/2" SPRING WASHER		01
07	0503010060	1/2" NUT		01
08	0511015098	FLAT WASHER		01

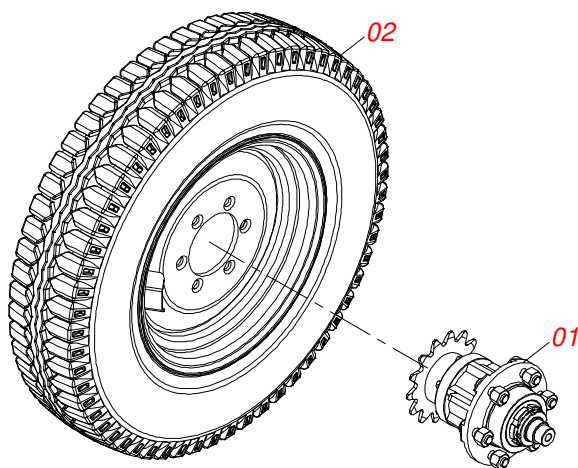


Item	Code	Description	See page	QT
01	0511052766	CARRYING WHEEL HUB ASSY	16	01
02	0503062158	EEE WHEEL WITH TIRE 700 X 16-10L ASSY	17	01

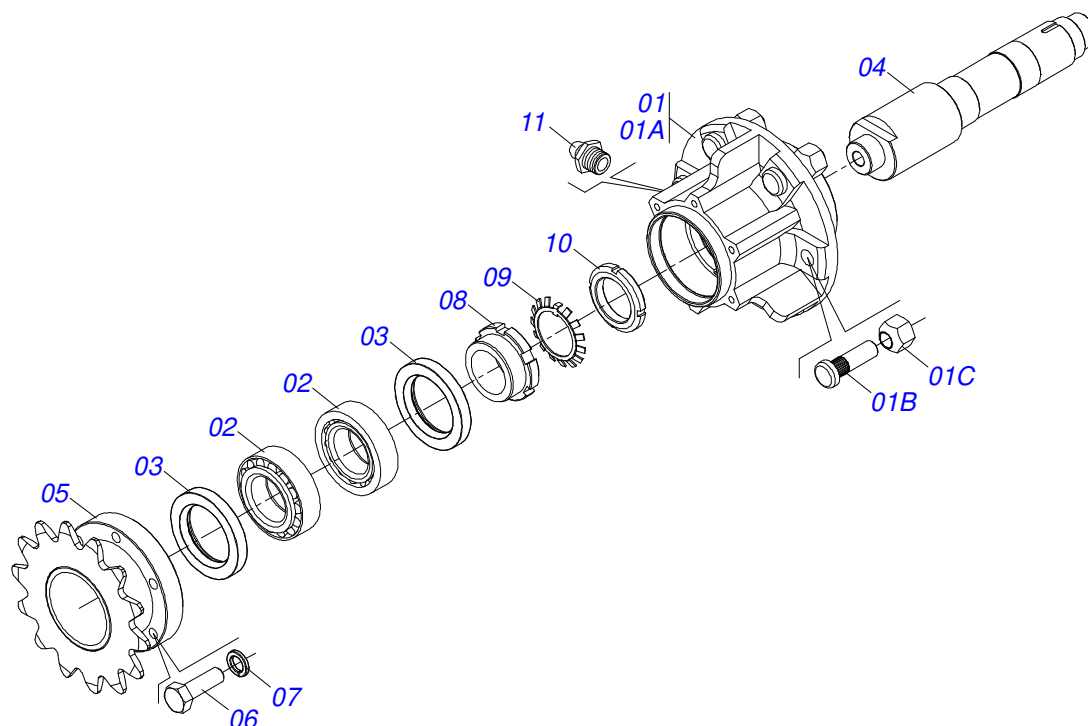


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503010328	25590/25523 ROLLER BEARING		02
03	0503010804	00547-B SEAL		02
04	0521018363	00547-B SEAL		01
05	0511062015	14Z GEAR WITH FLANGE		01
06	0503010421	5/16" X 1-1/2" BOLT		06
07	0503011444	SPRING WASHER		06
08	0511015949	LOCK NUT		01
09	0503010329	LOCK WASHER		01
10	0503010330	KM 9 LOCKNUT		01
11	0503010002	1800 GREASE FITTING		01

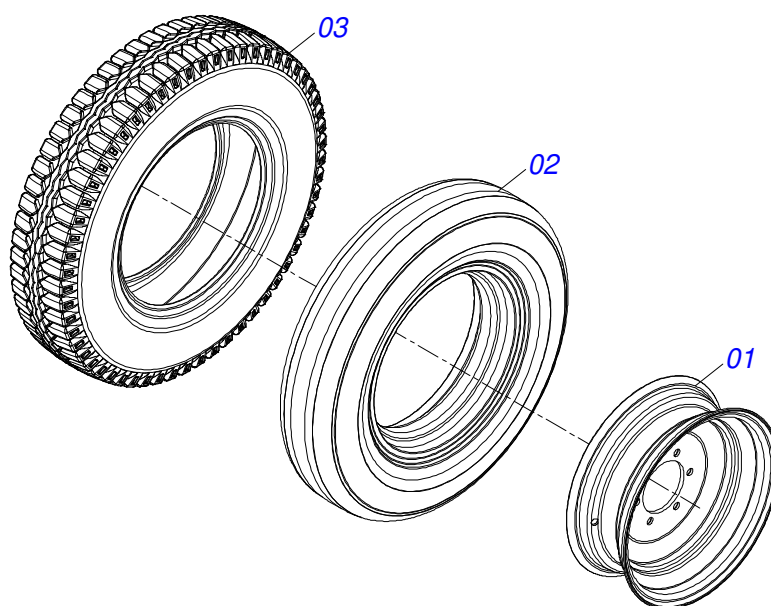


Item	Code	Description	See page	QT
01	0503016518	RUEDA		01
02	0503012114	7.00 X 16 INNER TIRE		01
03	0503012113	PLY TIRE		01

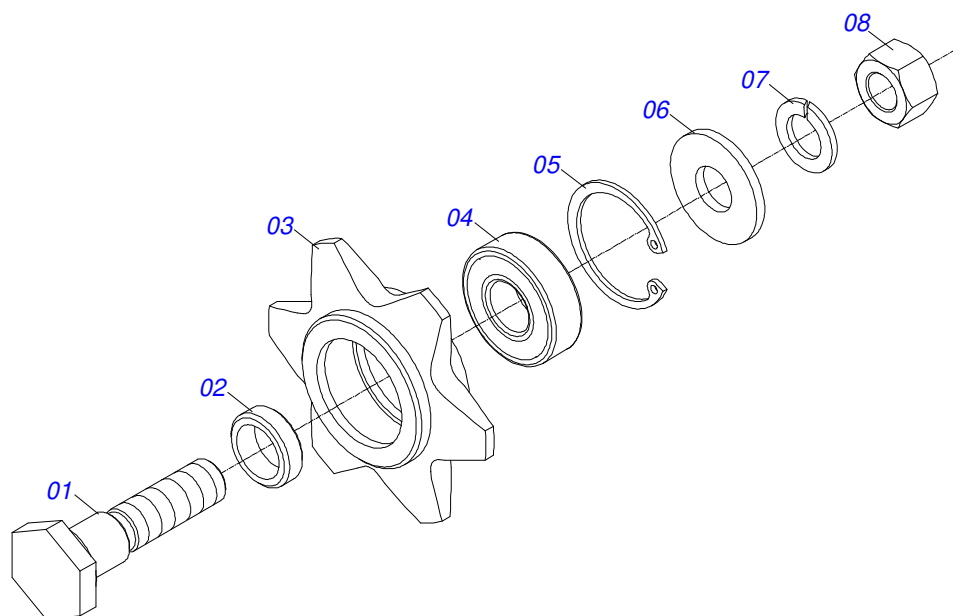


Item	Code	Description	See page	QT
01	0531012640	AXLE CHAIN TIGHTENER		01
02	0531012678	4.5" X 0.9" X 0.2" SLEEVE		01
03	0502012853	GEAR		01
04	0503012882	BEARING		01
05	0503011945	503050 CLAMPING RING (FOR AXLE)		01
06	0511017302	FLAT WASHER		01
07	0503010019	1/2" SPRING WASHER		01
08	0503010060	1/2" NUT		01

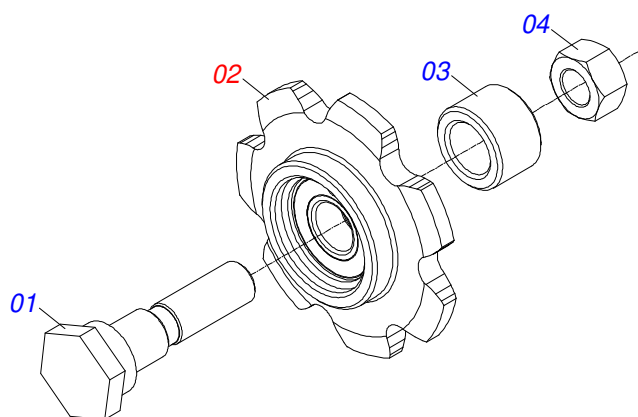

Item	Code	Description	See page	QT
01	0551018252	CHAIN TIGHTENER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	20	01
03	0521010479	SLEEVE ARTICULATION		01
04	0503011336	1/2" HEX SELF ADJUSTING NUT		01

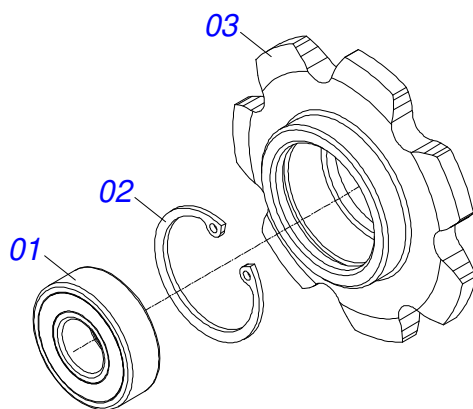


Item	Code	Description	See page	QT
01	0503012882	BEARING		01
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012853	GEAR		01

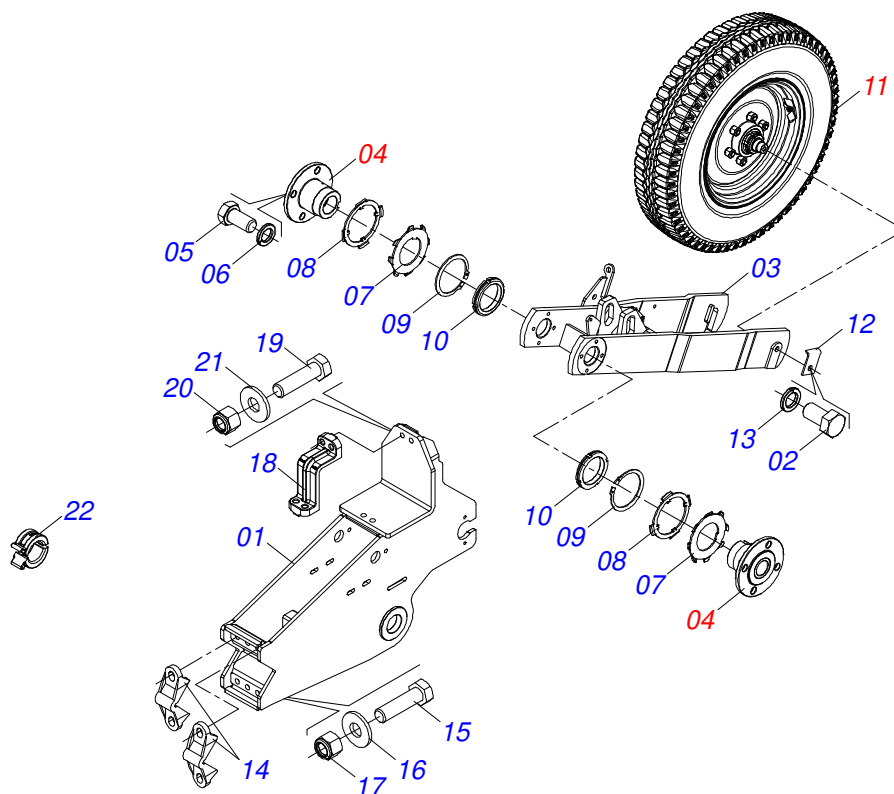


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0503011167	M16 X 2 X 30 BOLT		02
03	0511064744	WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	13	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED BOX	15	01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
15	0511010736	5/8" X 5-1/4" BOLT		04
16	0501013753	FLAT WASHER		04
17	0503010811	5/8" UNF SELF ADJUSTING NUT		04
18	0502012720	WHEEL SUPPORT FIXER		01
19	0503017857	BOLT 5/8 UNF 4		04
20	0503010811	5/8" UNF SELF ADJUSTING NUT		04
21	0501012140	FLAT WASHER		04
22	0501047888	ROD STOP		01

WHITH LEFT WHEEL ASSY WITHOUT TRANSMISSION


0511050444

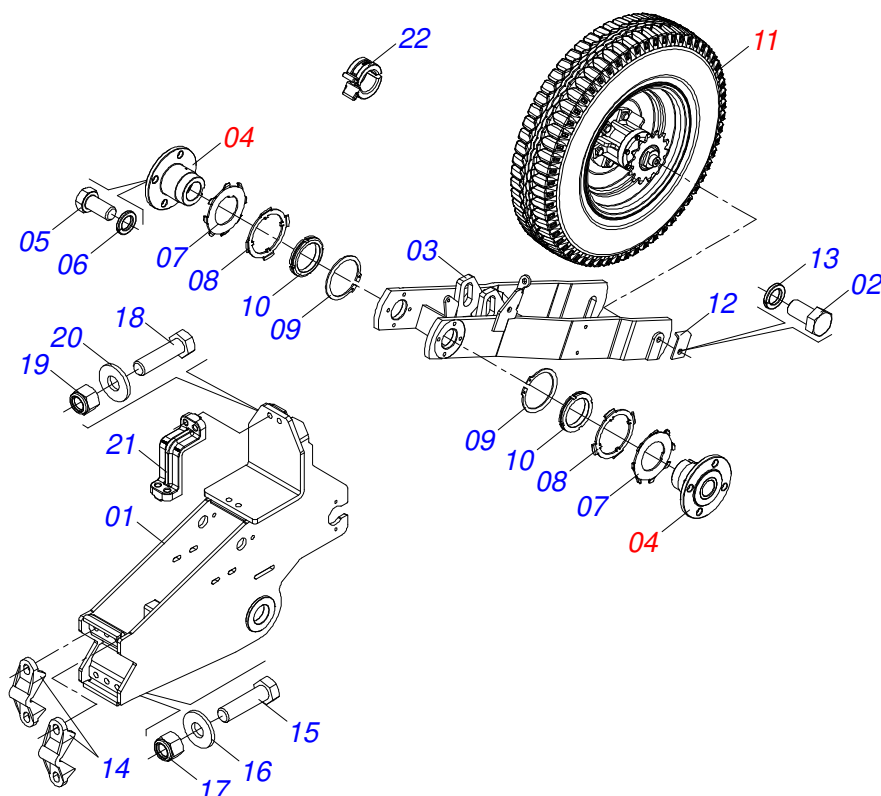


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0503011167	M16 X 2 X 30 BOLT		02
03	0511065842	LEFT WHEEL FORK		01
04	0501110625	BEARING ARTICULATION WHEEL	13	02
05	0503013232	1/2" BOLT		08
06	0503010019	1/2" SPRING WASHER		08
07	0561013021	BEARING INNER LOK		02
08	0561013022	BEARING EXTERNAL LOCK		02
09	0503010398	501082 CLAMPING RING (FOR AXLE)		02
10	0561013020	KM 12 NUT		02
11	0511052768	EEE WHEEL WITH 7.00X16 TIRE / ASSY WHEELED BOX	15	01
12	0521012190	AXLE LOCK		02
13	0503010027	5/8" SPRING WASHER		02
14	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
15	0511010736	5/8" X 5-1/4" BOLT		04
16	0501013753	FLAT WASHER		04
17	0503010811	5/8" UNF SELF ADJUSTING NUT		04
18	0503017857	BOLT 5/8 UNF 4		04
19	0503010811	5/8" UNF SELF ADJUSTING NUT		04
20	0501012140	FLAT WASHER		04
21	0502012720	WHEEL SUPPORT FIXER		01
22	0501047888	ROD STOP		01

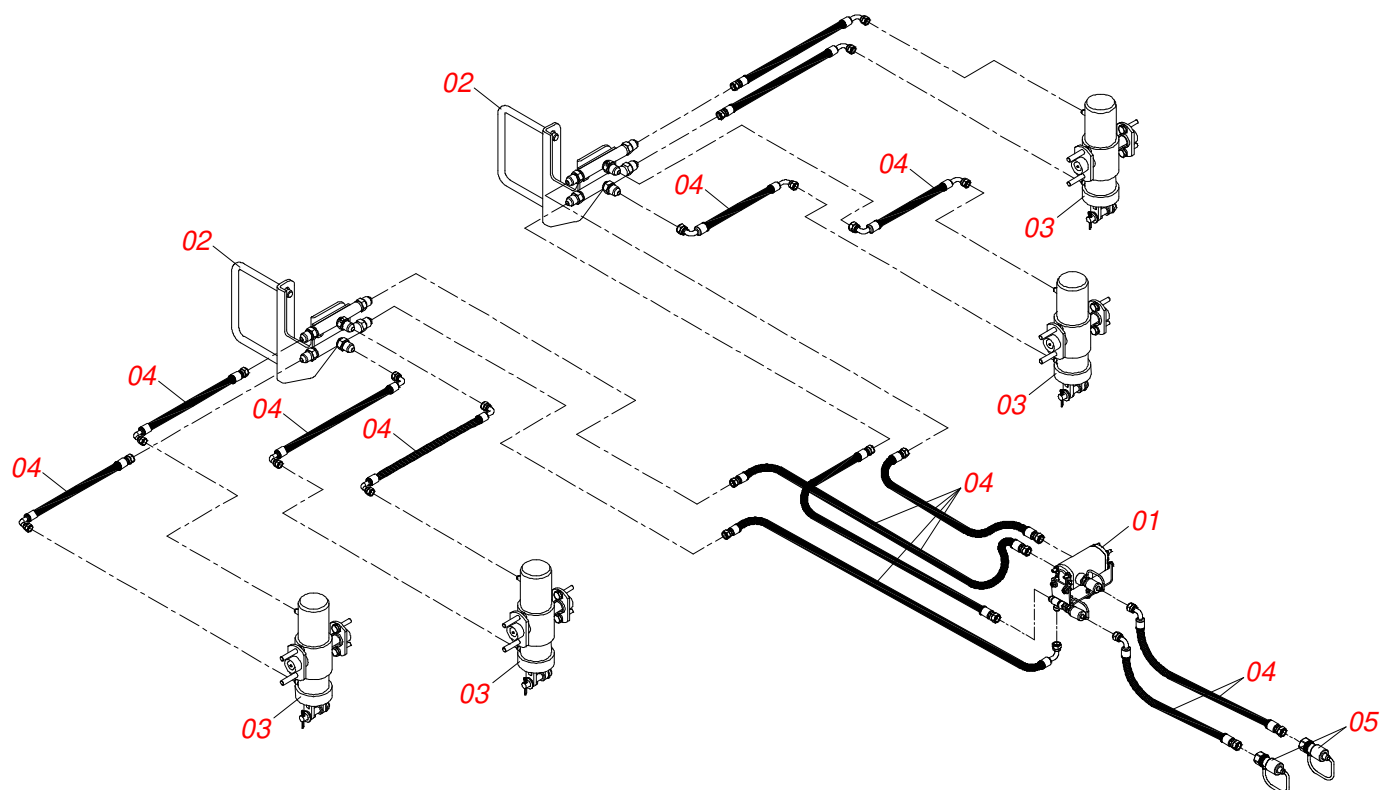


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	24	01
02	0511056277	HYDRAULIC HOSE FIXING ASSEMBLY	25	01
03	0511053384	HYDRAULIC CYLINDER ASSEMBLY	26	01
04	0511053425	HOSE KIT	27	01
05	0501053834	MALE QUICK COUPLER	28	02

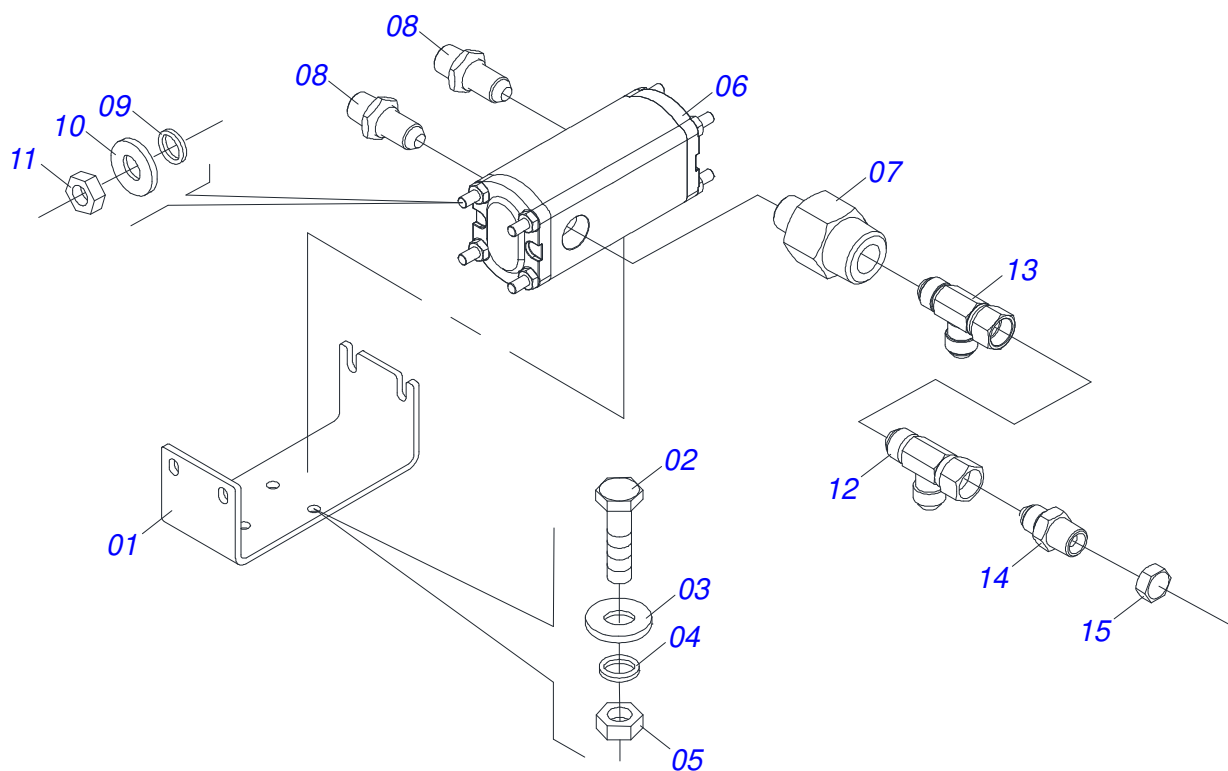


Item	Code	Description	See page	QT
01	0571010596	SUPPORT VALVE 50/50		01
02	0503010371	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02
06	0503013791	DOUBLE MOTOR		01
07	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE		01
08	0551012463	1/2" BSPT X 3/4" UNF X 51 NIPPLE		02
09	0503015075	M10 SPRING WASHER		04
10	0501010984	FLAT WASHER		04
11	0503011051	M10 X 0.6" NUT		04
12	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
13	0503012341	T 7/8" ADAPOR GIRAT NUT		02
14	0541012166	NIPPLE 3/4" UNF X 7/8"		01
15	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01

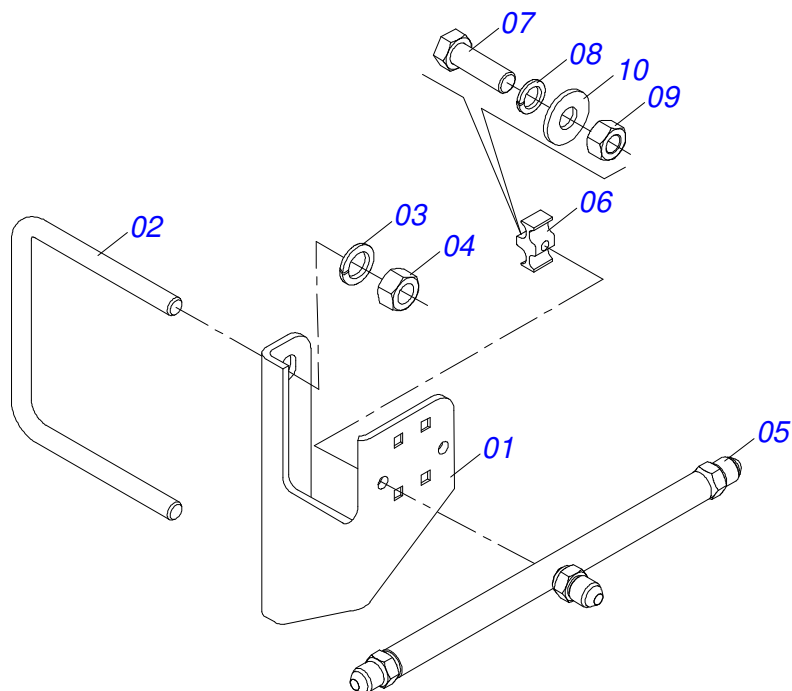


Item	Code	Description	See page	QT
01	0561017277	OIL CONDUCTOR FIXER PLATE		04
02	0521010718	5/8" U BOLT		04
03	0503010027	5/8" SPRING WASHER		08
04	0503010013	5/8" NUT		08
05	0521065265	OIL CONDUCTOR		04
06	0502012702	BODY SUPPORT CLAMP		04
07	0503011268	3/8" X 2-1/2" BOLT		04
08	0503010025	3/8" SPRING WASHER		04
09	0503010026	3/8" NUT		04
10	0501012140	FLAT WASHER		08

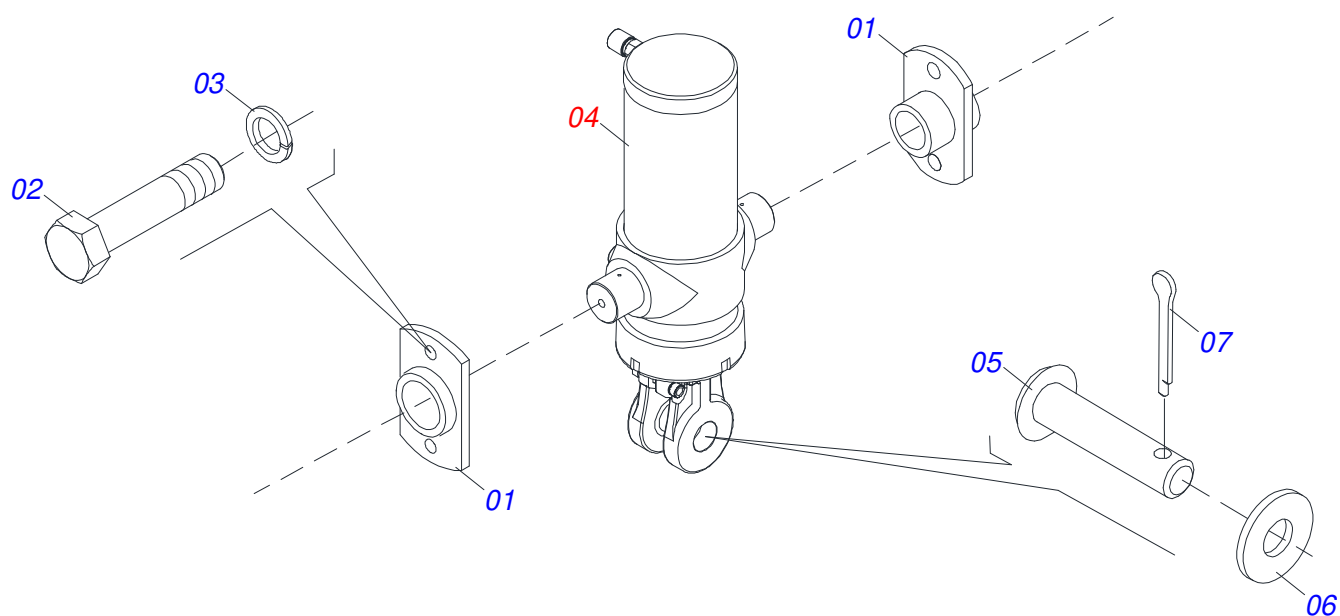


Item	Code	Description	See page	QT
01	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		08
02	0503010834	1/2 X 1 BOLT		16
03	0503010019	1/2" SPRING WASHER		16
04	0511058411	HYDRAULIC CYLINDER	35	04
05	0521010546	1.2" X 5.7" COUPLING SHAFT		04
06	0501017779	32 X 60 X 4.75 FLAT WASHER		08
07	0503010523	1/4" X 2" COTTERPIN		04

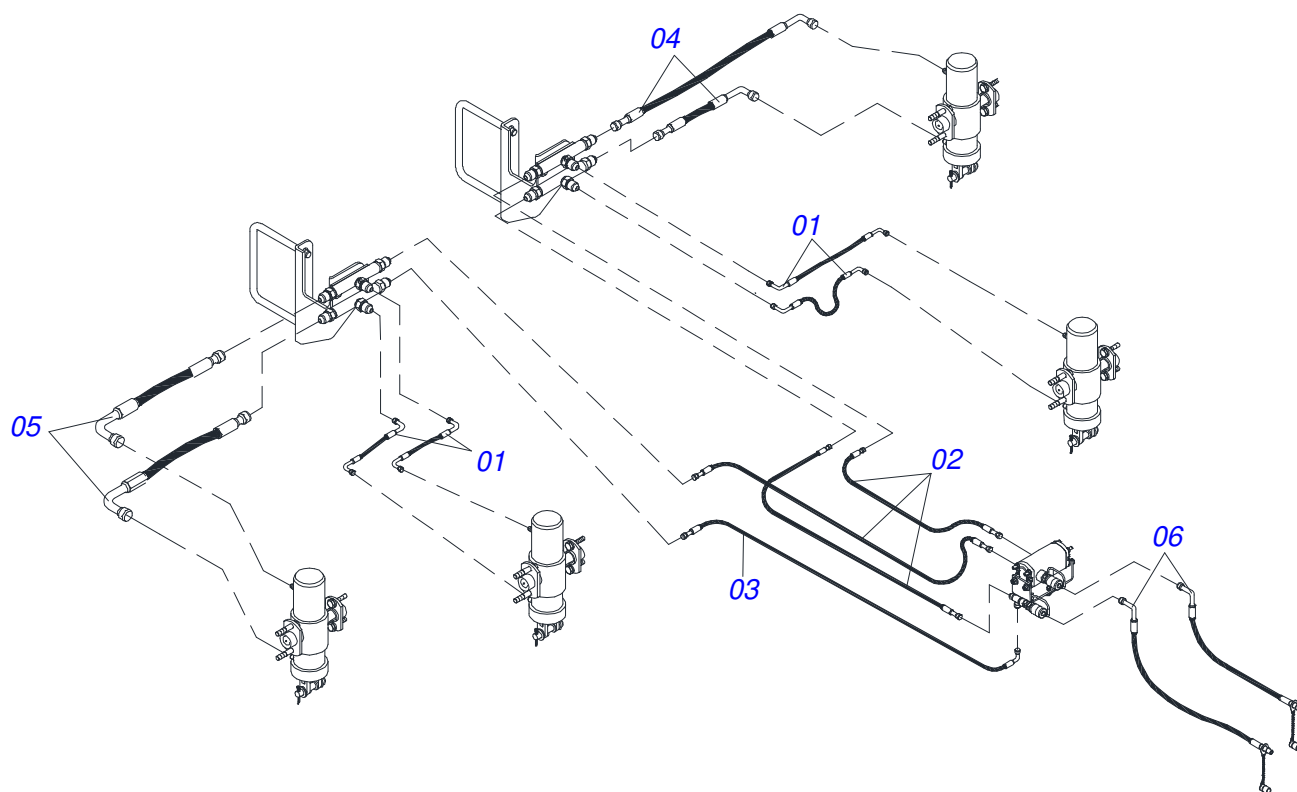


Item	Code	Description	See page	QT
01	0501080760	3/8" X 500 TC-TC HOSE		04
02	0501080027	3/8" X 39,3" TR-TR HOSE ASSY		03
03	0501080055	3/8 X 1000 TR-TC HOSE		01
04	0501080150	3/8 X 800 TR-TC HOSE		02
05	0501080055	3/8 X 1000 TR-TC HOSE		02
06	0501081073	HOSE 1/2 X 4200 TC-TM		02

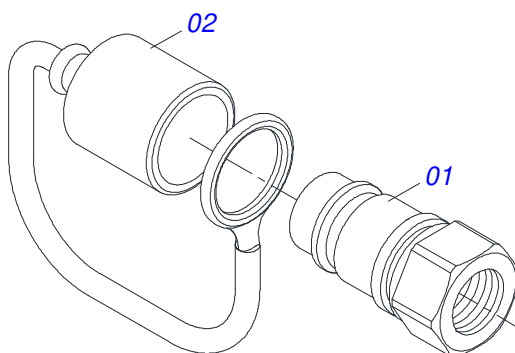


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

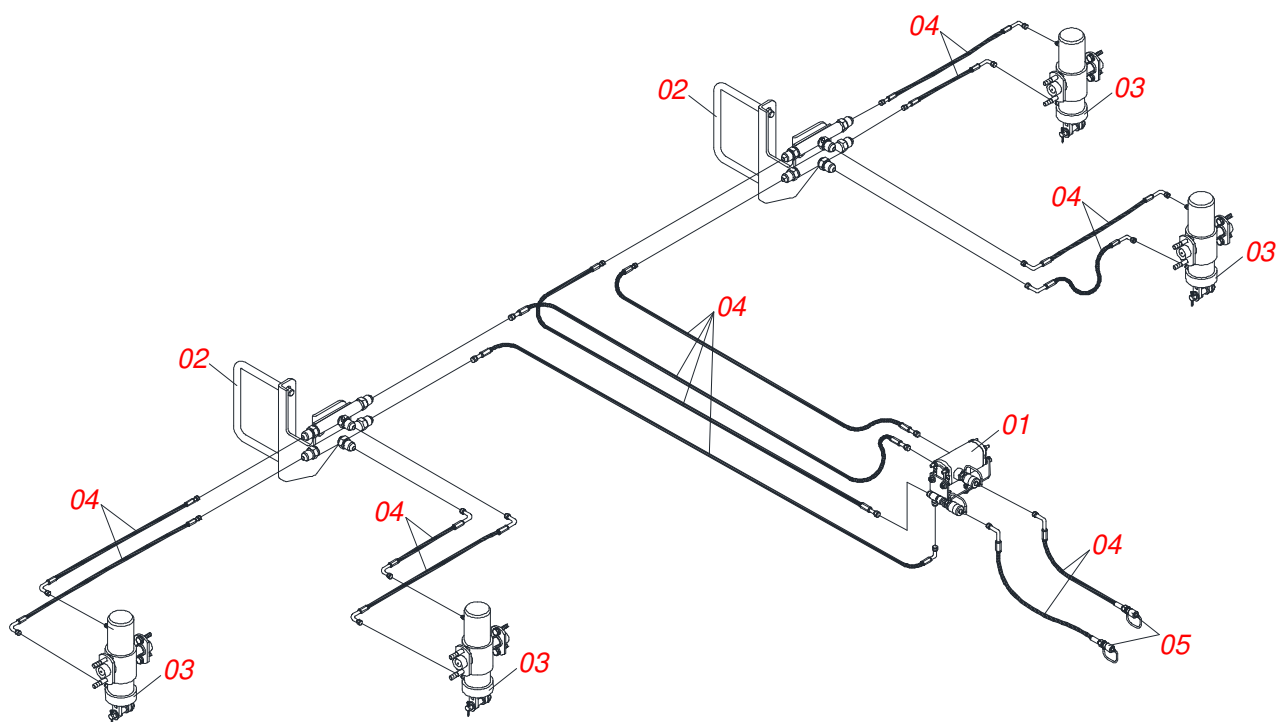


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	24	01
02	0511053382	FIXER HYDRAULIC HOSE ASSEMBLY	31	01
03	0511053384	HYDRAULIC CYLINDER ASSEMBLY	26	01
04	0511054290	HOSE KIT	32	01
05	0501053834	MALE QUICK COUPLER	28	01

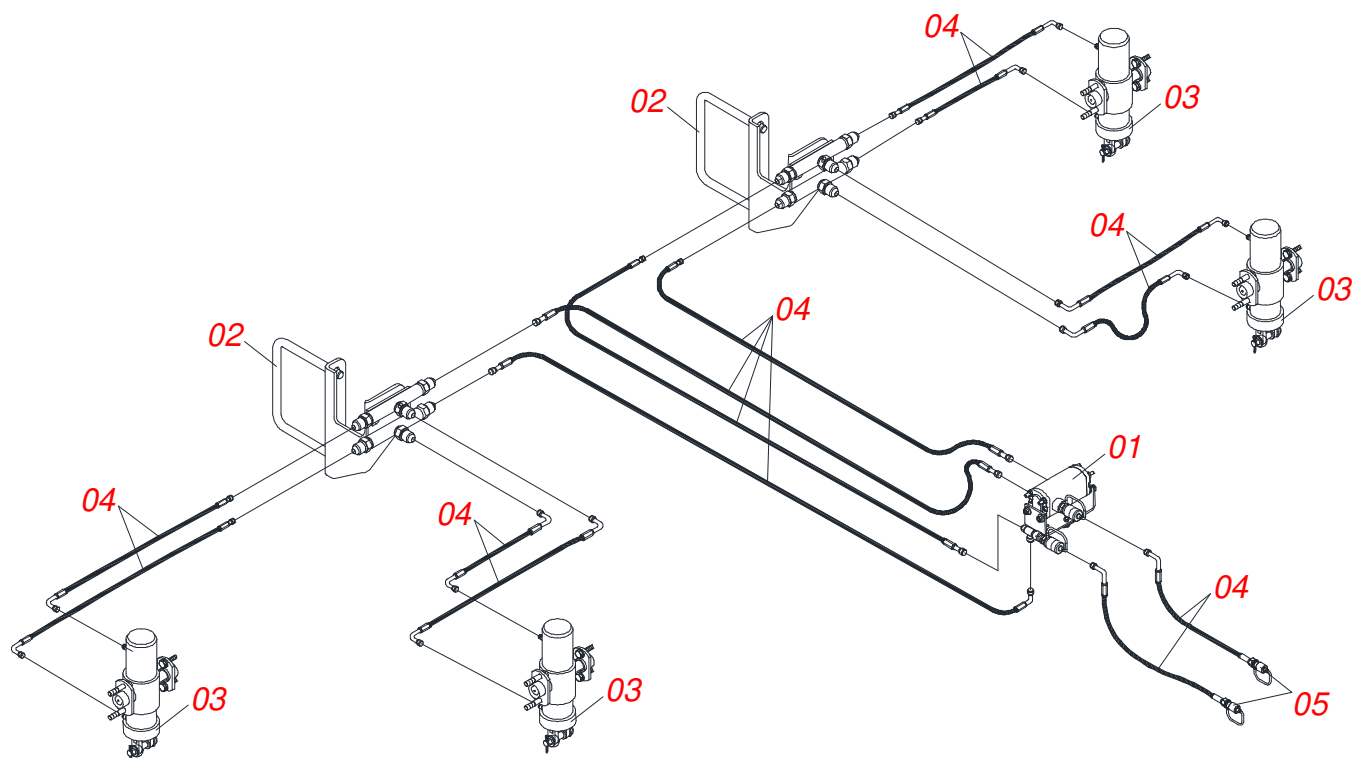


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	24	01
02	0511053382	FIXER HYDRAULIC HOSE ASSEMBLY	31	01
03	0511053384	HYDRAULIC CYLINDER ASSEMBLY	26	01
04	0511053309	HOSE KIT		01
05	0501053834	MALE QUICK COUPLER	28	02

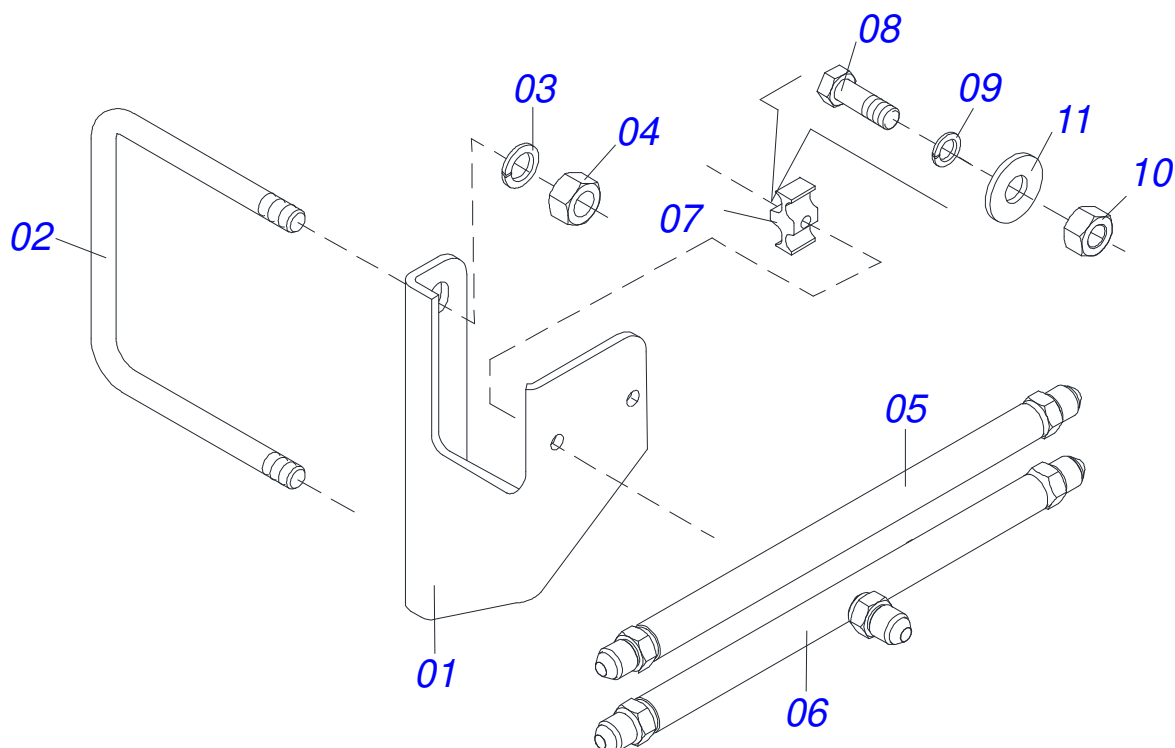


Item	Code	Description	See page	QT
01	0561017277	OIL CONDUCTOR FIXER PLATE	04	
02	0521010718	5/8" U BOLT	04	
03	0503010027	5/8" SPRING WASHER	08	
04	0503010013	5/8" NUT	08	
05	0521065260	MH 11/450 OIL CONDUCTOR	04	
06	0521065265	OIL CONDUCTOR	04	
07	0502012702	BODY SUPPORT CLAMP	10	
08	0503011268	3/8" X 2-1/2" BOLT	10	
09	0503010025	3/8" SPRING WASHER	10	
10	0503010026	3/8" NUT	10	
11	0501012140	FLAT WASHER	08	

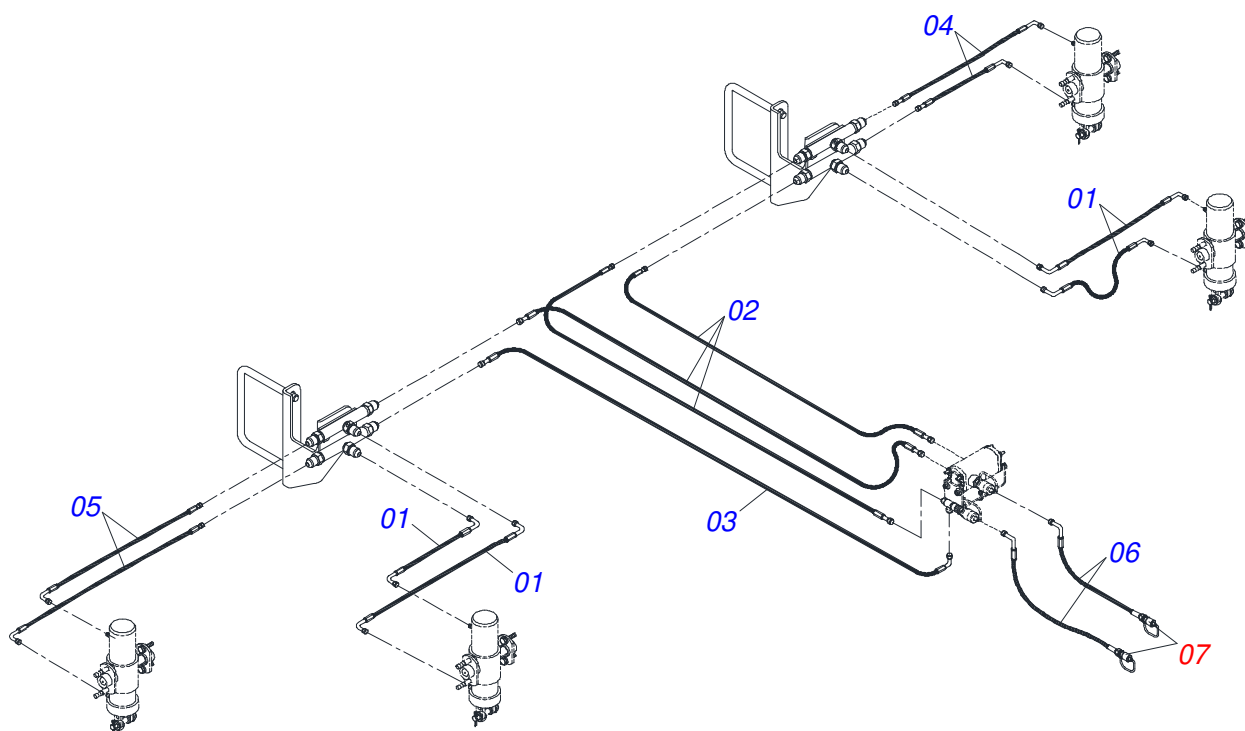


Item	Code	Description	See page	QT
01	0501080760	3/8" X 500 TC-TC HOSE		04
02	0501080321	3/8" X 47" TR-TR HOSE ASSY		03
03	0501080348	3/8 X 1200 TR-TC HOSE		01
04	0501080436	3/8 X 1500 TR-TC HOSE		02
05	0501080714	3/8 X 1600 TR-TC HOSE		02
06	0501081073	HOSE 1/2 X 4200 TC-TM		02
07	0501053834	MALE QUICK COUPLER	28	02

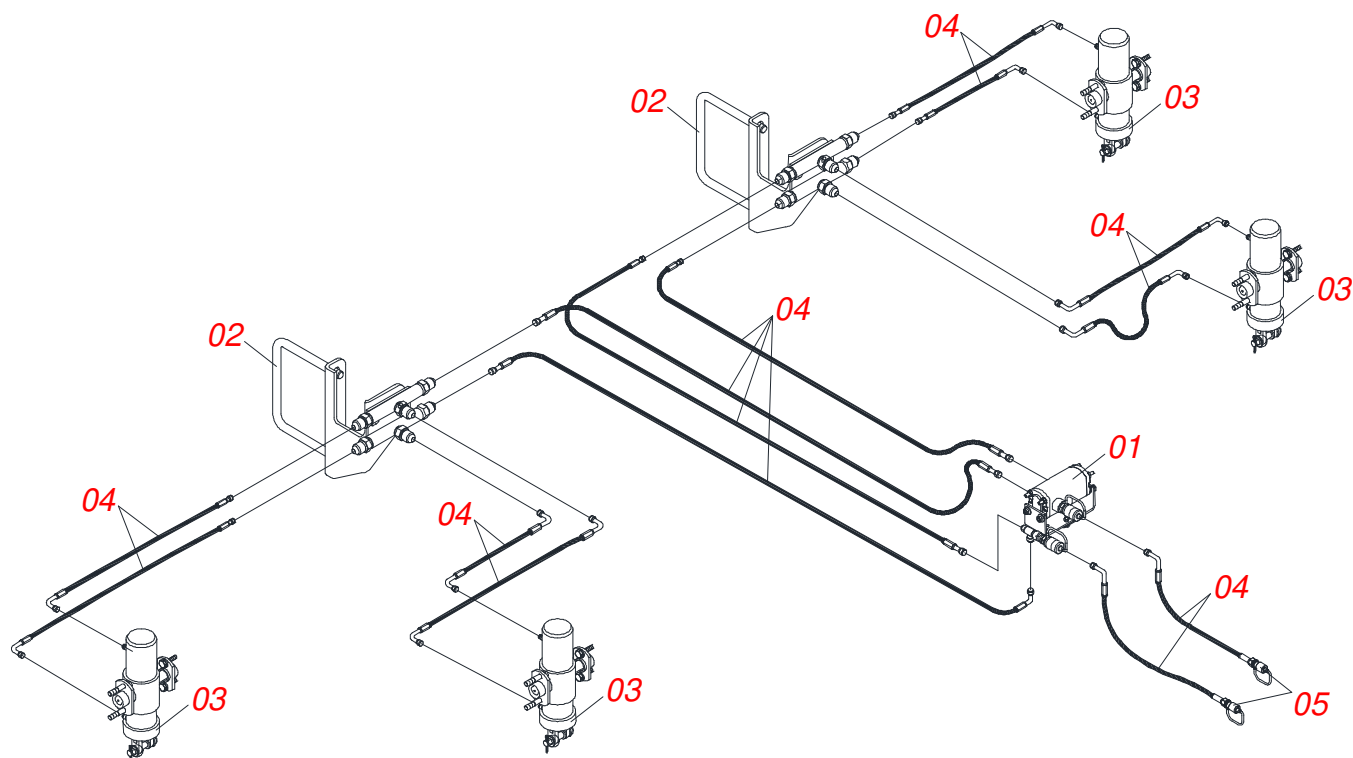


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	24	01
02	0511053350	FIXER HYDRAULIC HOSE ASSEMBLY	36	01
03	0511053368	HYDRAULIC CYLINDER ASSEMBLY	34	01
04	0511053290	HOSE KIT	37	01
05	0501053834	MALE QUICK COUPLER	28	02

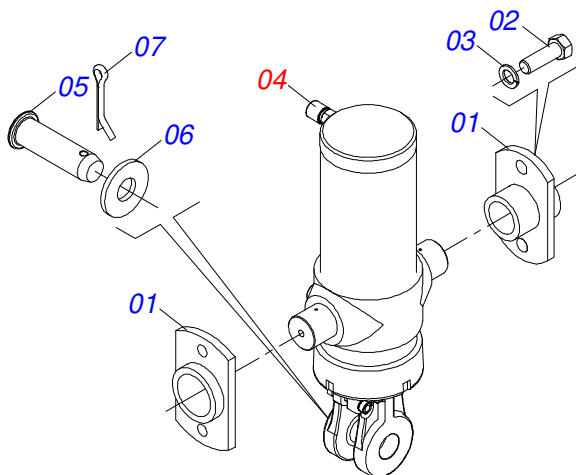


Item	Code	Description	See page	QT
01	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		12
02	0503010834	1/2 X 1 BOLT		24
03	0503010019	1/2" SPRING WASHER		24
04	0511058411	HYDRAULIC CYLINDER	35	06
05	0521010546	1.2" X 5.7" COUPLING SHAFT		06
06	0501017779	32 X 60 X 4.75 FLAT WASHER		12
07	0503010523	1/4" X 2" COTTERPIN		06

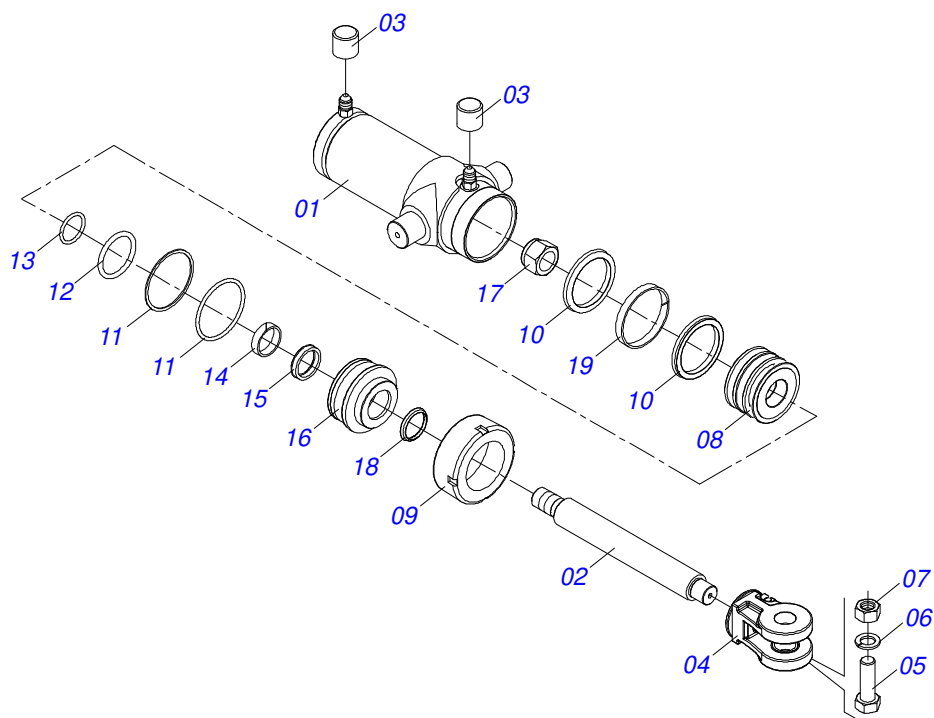


Item	Code	Description	See page	QT
01	0511066774	2.5" X 28" CYLINDER CASE		01
02	0541017674	TURNBUCLE BODY		01
03	0503030385	CYLINDER PLUG N-002		02
04	0511064408	FORK		01
05	0503011094	3/8" X 2" BOLT		01
06	0503010025	3/8" SPRING WASHER		01
07	0503010026	3/8" NUT		01
08	0581010302	RING OF SUPPORT		01
09	0502012822	101.60 END CAP		01
10	0503011061	8-342 BACK-UP RING		02
11	0503010338	2-342 N 3006-9B O'RING		02
12	0503017936	RING		01
13	0503017938	RING GUIDE		01
14	0503017937	GASKET		01
15	0503010761	D-1750 SCRAPER RING		01
16	0581010837	PISTON		01
17	0503010817	1.1/4" SELF LOCKING NUT		01
18	0503015633	SELEMASTER SEALING		01
19	0503018029	2-217 O'RING		01

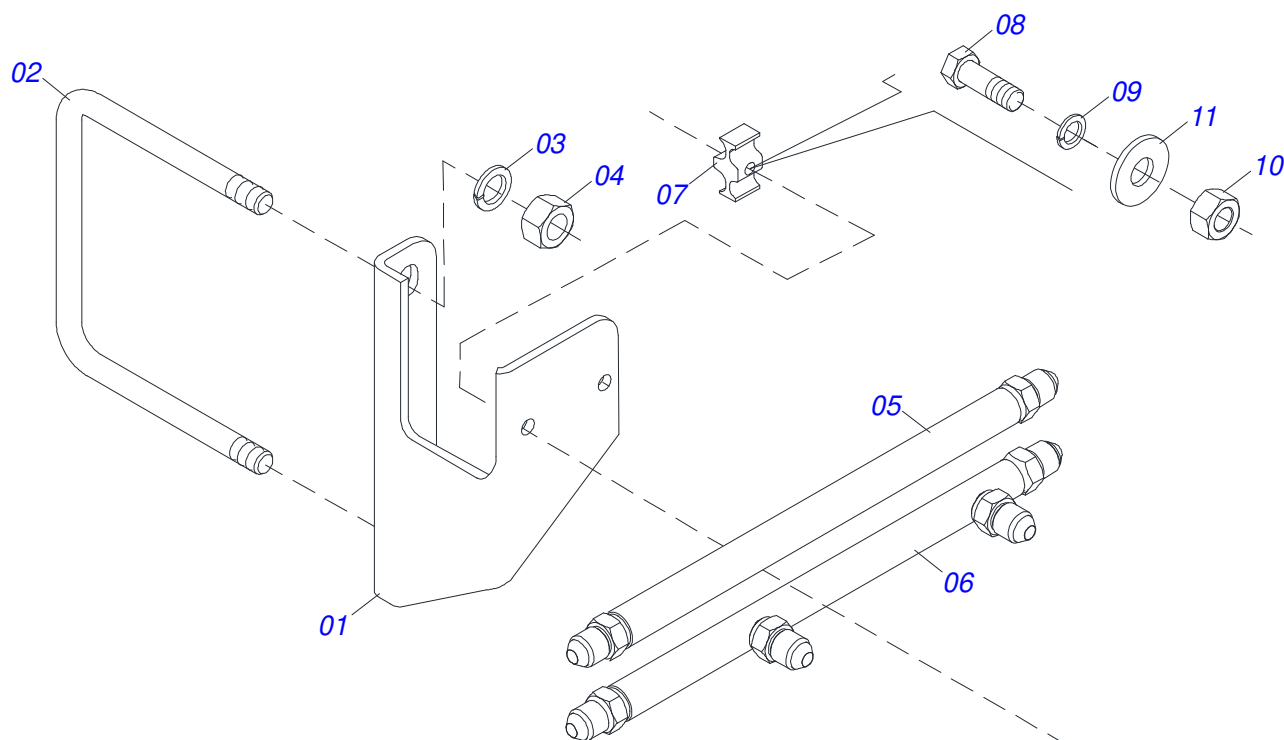


Item	Code	Description	See page	QT
01	0561017277	OIL CONDUCTOR FIXER PLATE		04
02	0521010718	5/8" U BOLT		04
03	0503010027	5/8" SPRING WASHER		08
04	0503010013	5/8" NUT		08
05	0521065261	MH OIL CONDUCTOR		04
06	0521064673	OIL CONDUCTOR		04
07	0502012702	BODY SUPPORT CLAMP		10
08	0503011268	3/8" X 2-1/2" BOLT		10
09	0503010025	3/8" SPRING WASHER		10
10	0503010026	3/8" NUT		10
11	0501012140	FLAT WASHER		08

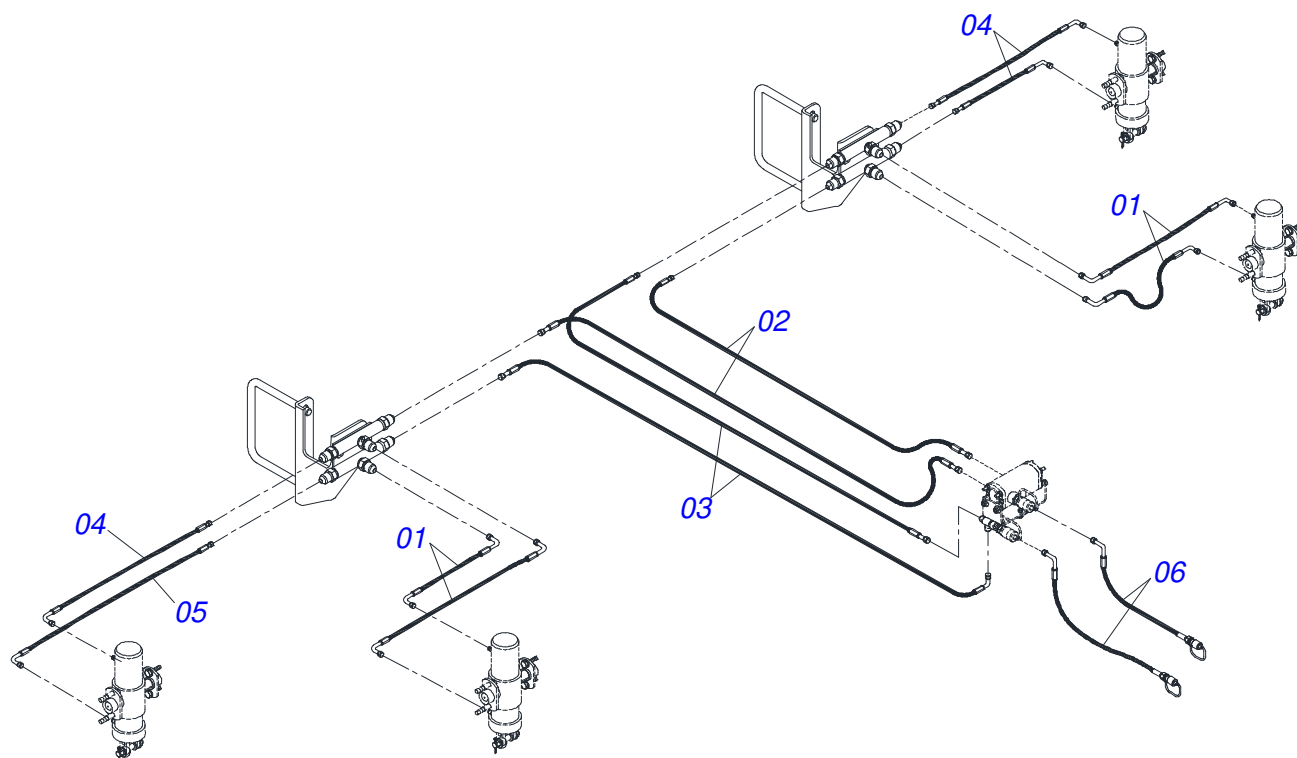


Item	Code	Description	See page	QT
01	0501080760	3/8" X 500 TC-TC HOSE		08
02	0501080413	3/8" X 27" TR-TC HOSE		02
03	0501080055	3/8 X 1000 TR-TC HOSE		02
04	0501080352	3/8 X 1400 TR-TR HOSE		03
05	0501080025	3/8 X 1400 TR-TC HOSE		01
06	0501081073	HOSE 1/2 X 4200 TC-TM		02

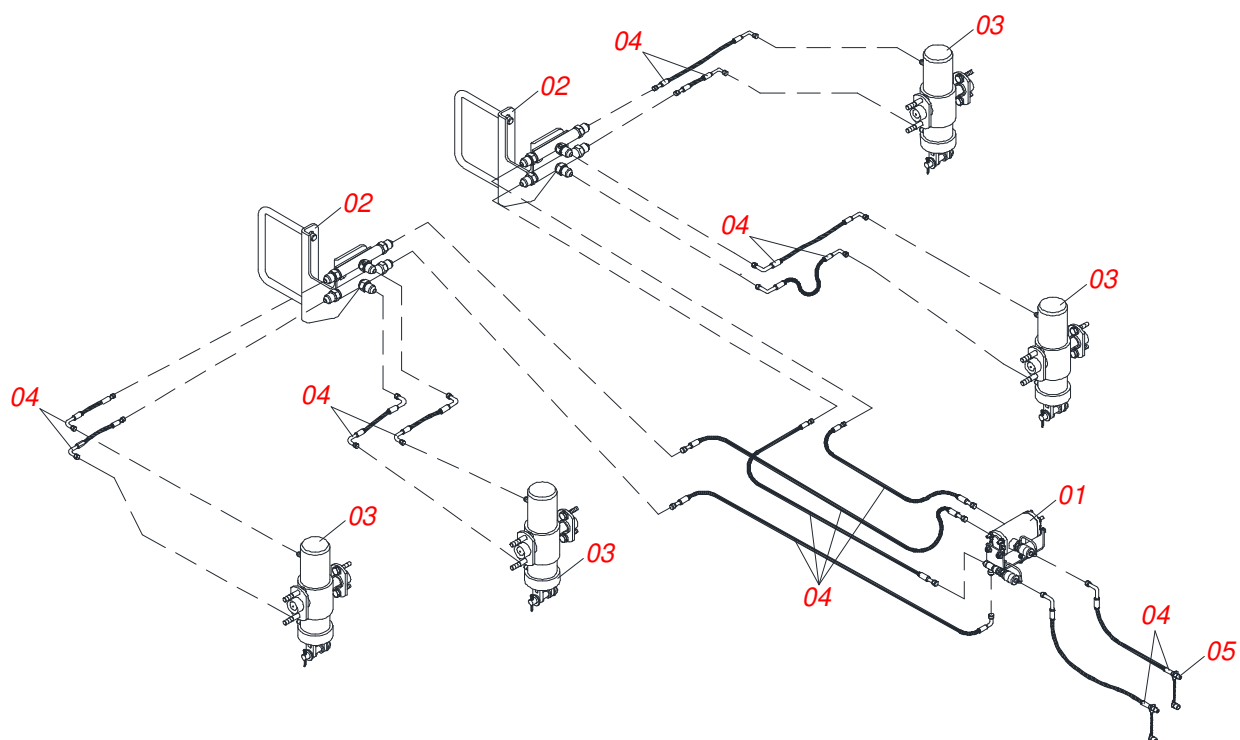


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	24	01
02	0511056278	FIXER HYDRAULIC HOSE ASSEMBLY	39	01
03	0511053384	HYDRAULIC CYLINDER ASSEMBLY	26	01
04	0511054302	HOSE KIT	40	01
05	0501053834	MALE QUICK COUPLER	28	02

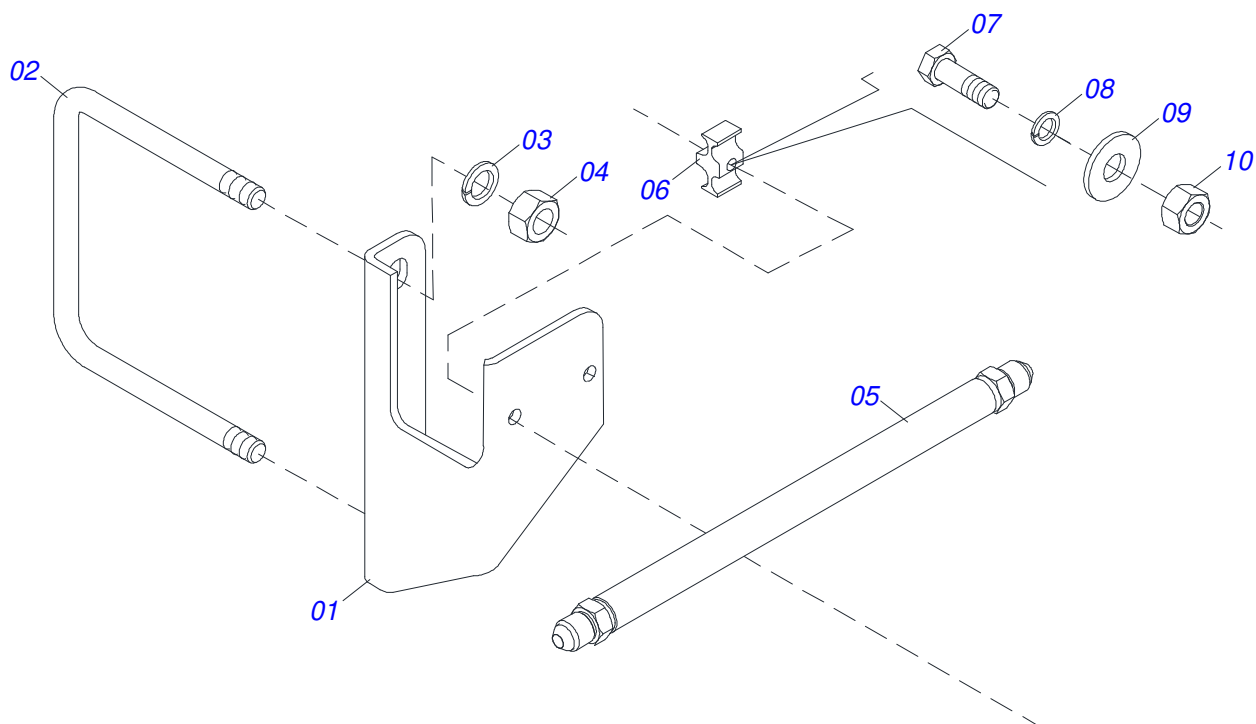


Item	Code	Description	See page	QT
01	0561017277	OIL CONDUCTOR FIXER PLATE		04
02	0521010718	5/8" U BOLT		04
03	0503010027	5/8" SPRING WASHER		08
04	0503010013	5/8" NUT		08
05	0521065274	OIL CONDUCTOR		04
06	0502012702	BODY SUPPORT CLAMP		04
07	0503011268	3/8" X 2-1/2" BOLT		04
08	0503010025	3/8" SPRING WASHER		04
09	0501012140	FLAT WASHER		08
10	0503010026	3/8" NUT		04

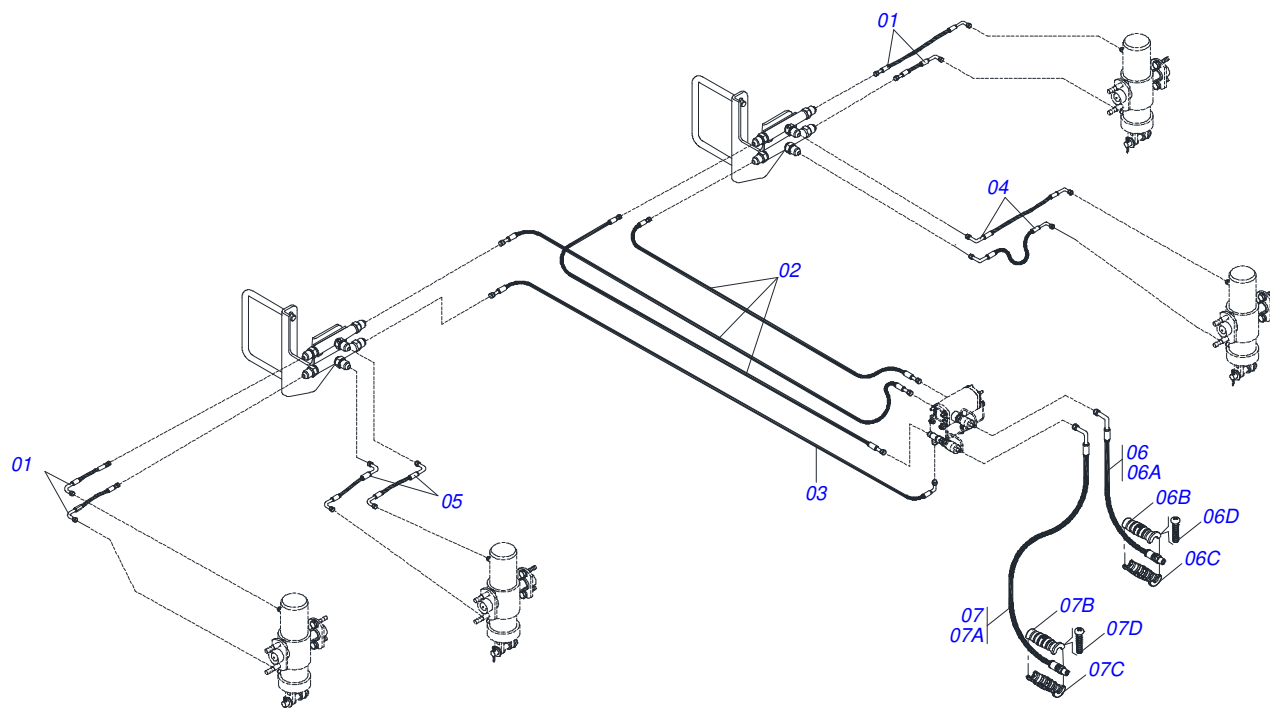


Item	Code	Description	See page	QT
01	0501080760	3/8" X 500 TC-TC HOSE	04	
02	0501080321	3/8" X 47" TR-TR HOSE ASSY	03	
03	0501080348	3/8 X 1200 TR-TC HOSE	01	
04	0501080436	3/8 X 1500 TR-TC HOSE	02	
05	0501080714	3/8 X 1600 TR-TC HOSE	02	
06	0521052275	HOSE	01	
06A	0501081073	HOSE 1/2 X 4200 TC-TM	01	
06B	0503034492	HYDRAULIC HOSE GRIP (BLACK)	01	
06C	0503034495	HYDRAULIC HOSE GRIP (RED)	01	
06D	0503018952	PLASTIC BOLT	06	
07	0521052276	HOSE	01	
07A	0501081073	HOSE 1/2 X 4200 TC-TM	01	
07B	0503034492	HYDRAULIC HOSE GRIP (BLACK)	01	
07C	0503034494	HYDRAULIC HOSE GRIP (BLUE)	01	
07D	0503018952	PLASTIC BOLT	06	

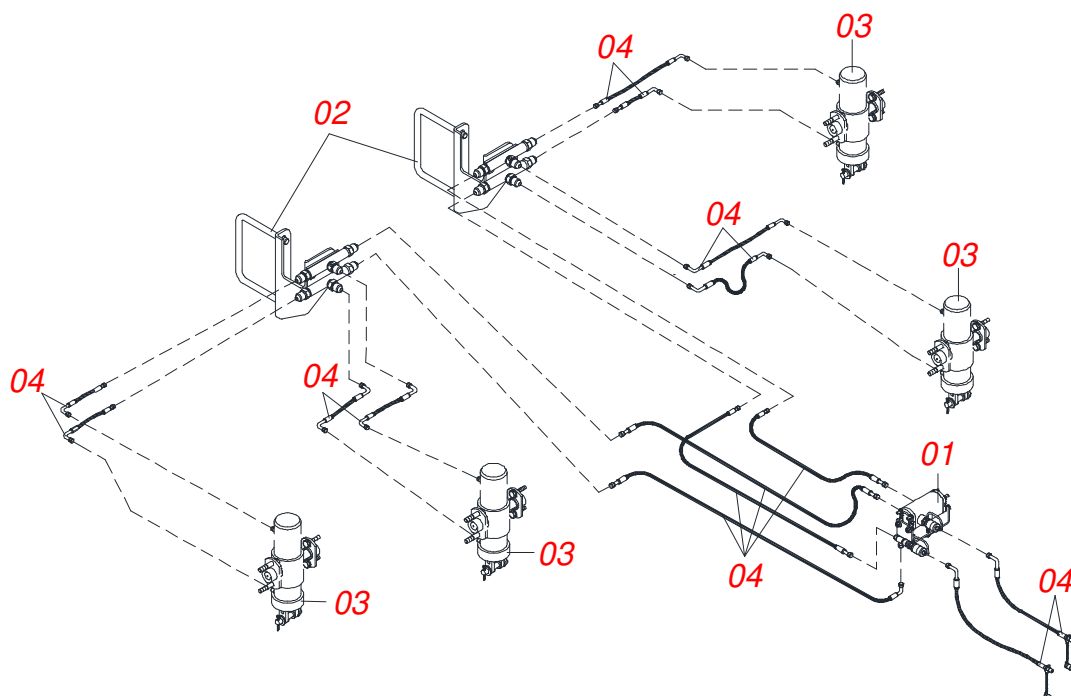


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	24	01
02	0511053457	FIXING ASSEMBLY HOSE HYDRAULIC	42	01
03	0511053384	HYDRAULIC CYLINDER ASSEMBLY	26	01
04	0511053697	HOSE KIT	43	01

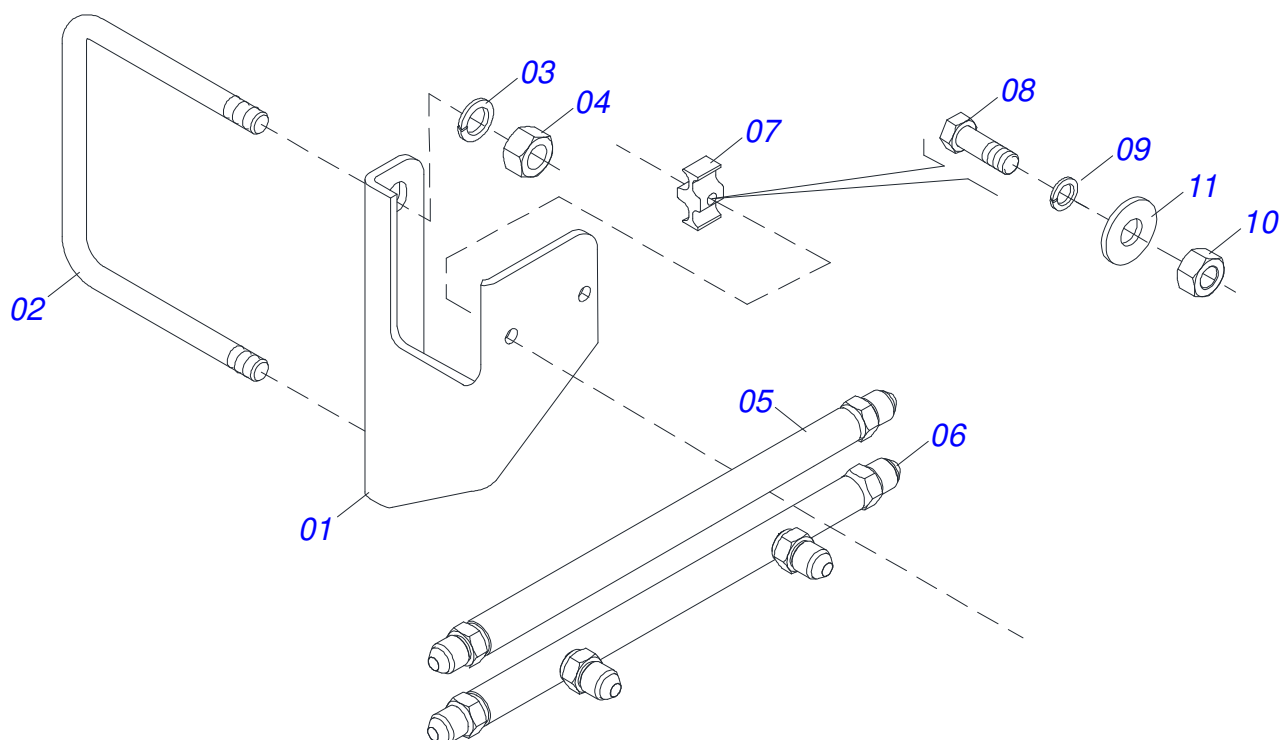


Item	Code	Description	See page	QT
01	0561017277	OIL CONDUCTOR FIXER PLATE		04
02	0521010718	5/8" U BOLT		04
03	0503010027	5/8" SPRING WASHER		08
04	0503010013	5/8" NUT		08
05	0521065262	MH OIL CONDUCTOR		04
06	0521064749	OIL CONDUCTOR		04
07	0502012702	BODY SUPPORT CLAMP		10
08	0503011268	3/8" X 2-1/2" BOLT		10
09	0503010025	3/8" SPRING WASHER		10
10	0503010026	3/8" NUT		10
11	0501012140	FLAT WASHER		08

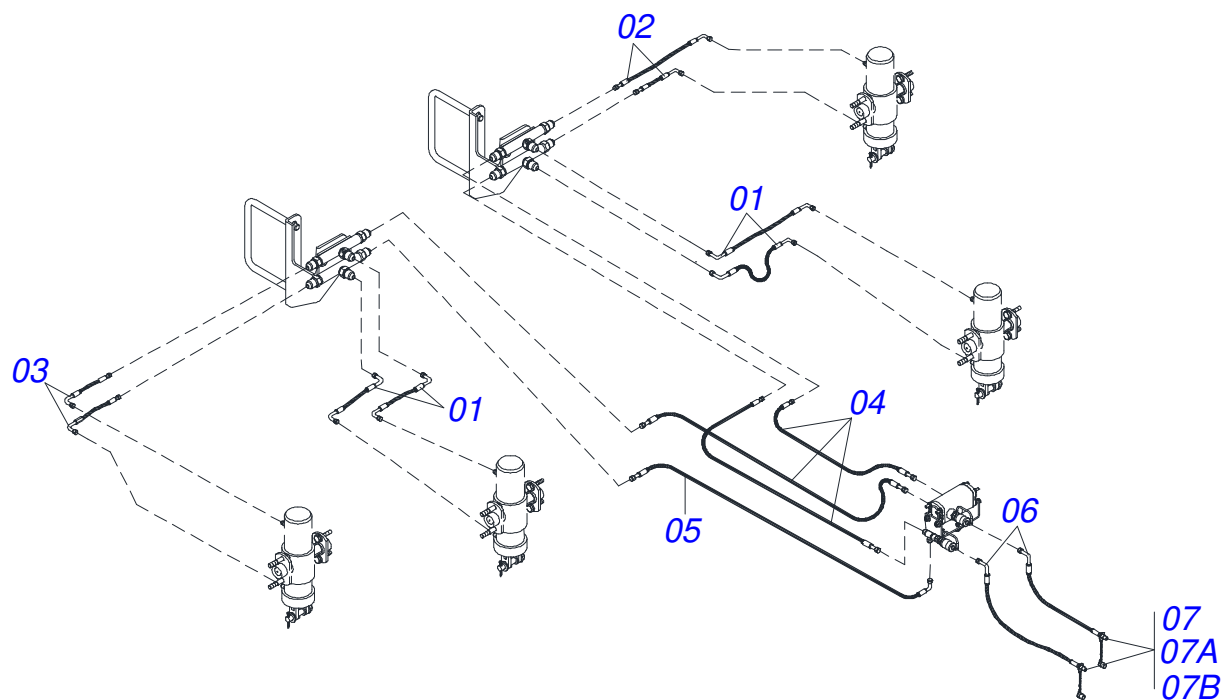


Item	Code	Description	See page	15 L
01	0501080760	3/8" X 500 TC-TC HOSE		08
02	0501080599	3/8 X 650 TR-TC HOSE		02
03	0501080328	3/8" X 29" TR-TC HOSE		02
04	0501080352	3/8 X 1400 TR-TR HOSE		03
05	0501080025	3/8 X 1400 TR-TC HOSE		01
06	0501081073	HOSE 1/2 X 4200 TC-TM		02
07	0501053834	MALE QUICK COUPLER	28	02
07A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
07B	0503011882	MALE QUICK COUPLER CAP		01

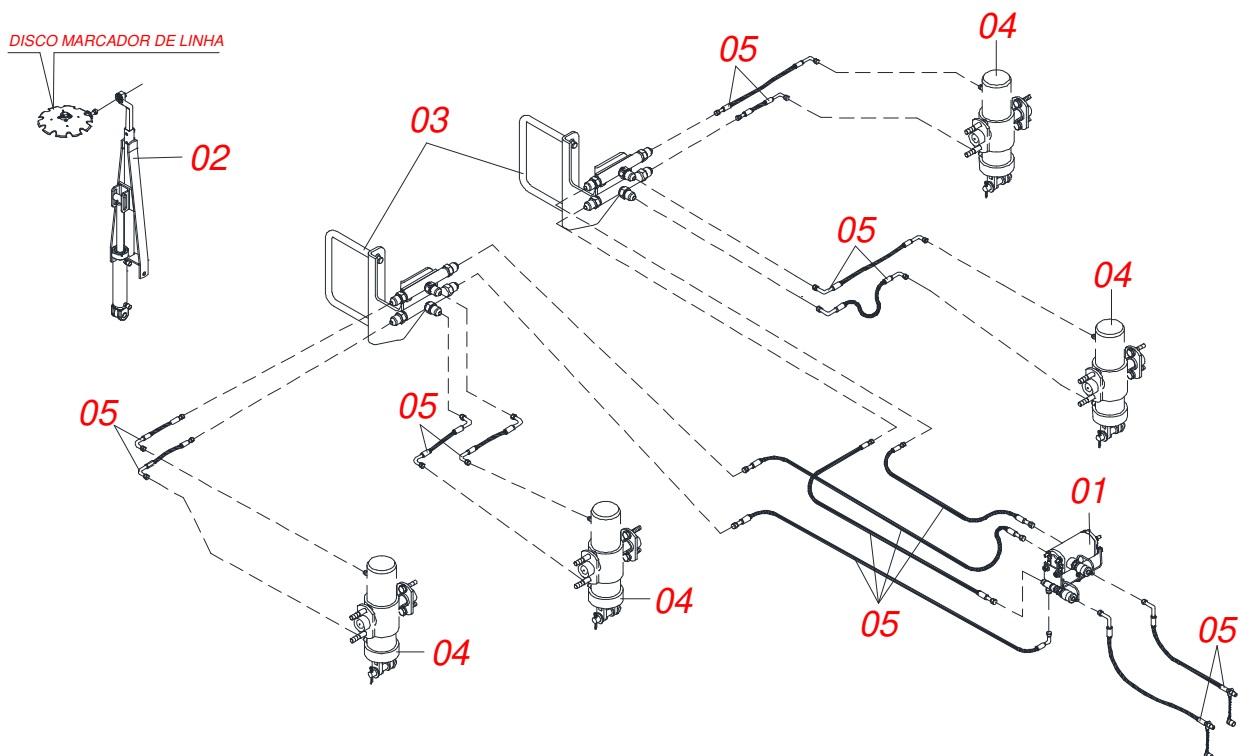


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	24	01
02	0511053474	HYDRAULIC ASSEMBLY FOR MARKER	45	01
03	0511053948	FIXER HYDRAULIC HOSE ASSEMBLY	48	01
04	0511053475	HYDRAULIC CYLINDER ASSEMBLY 8 WHEEL	49	01
05	0511053316	HOSE KIT	50	01

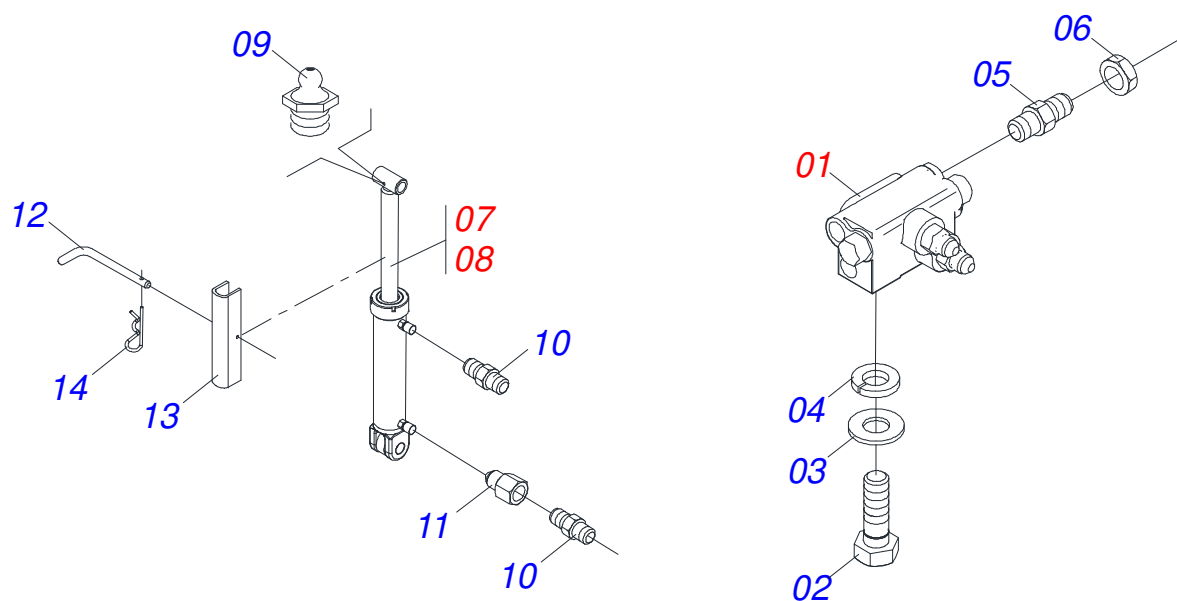


Item	Code	Description	See page	QT
01	0501054649	HBM SEQUENTIAL VALVE	46	01
02	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
03	0501010984	FLAT WASHER		02
04	0503010025	3/8" SPRING WASHER		02
05	0541012165	3/4" NIPPLE		04
06	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		04
07	0511058430	HYDRAULIC CYLINDER	47	01
08	0511058431	HYDRAULIC CYLINDER		01
09	0503010002	1800 GREASE FITTING		04
10	0501010617	3/4" NIPPLE		04
11	0551016274	HYDRAULIC CYLINDER ADAPTER		02
12	0501068994	0.3" X 3.1" LOCK PIN		02
13	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
14	0503030168	CUPILLA		02

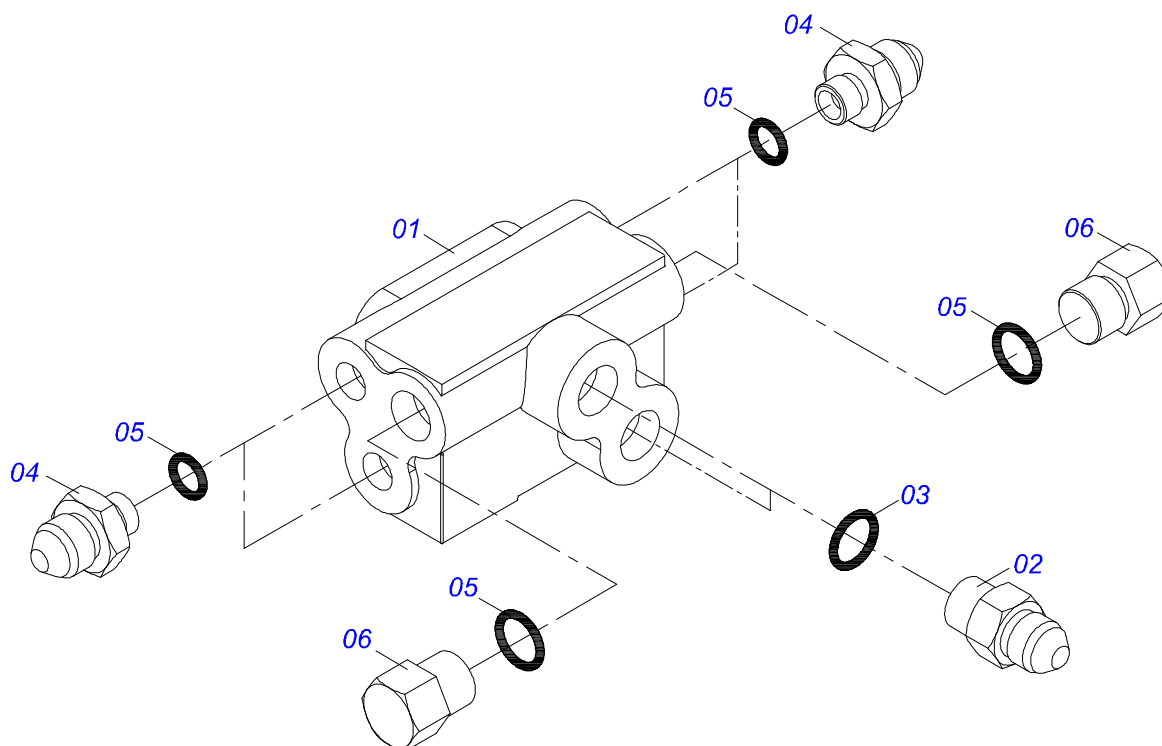


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCIAL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

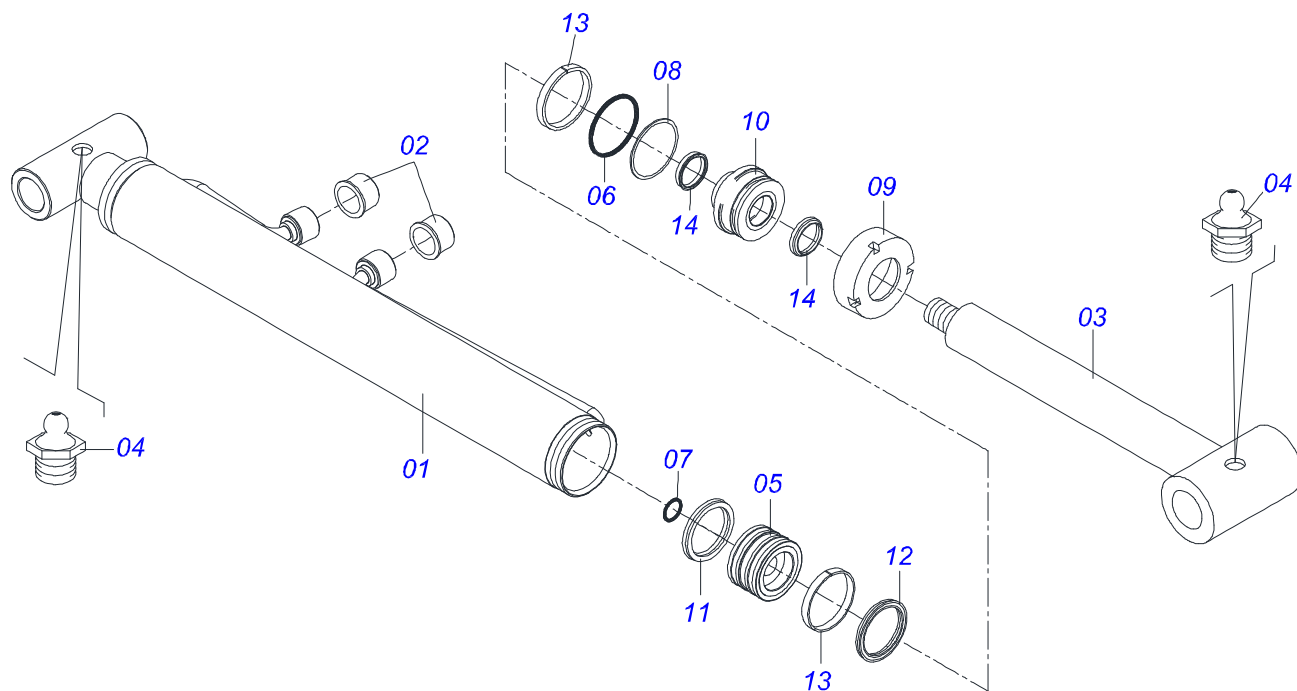


Item	Code	Description	See page	QT
01	0501067104	2.5" X 25" CYLINDER CASE		01
02	0503030384	CON PLUG N-001		02
03	0521066632	EXTENDER		01
04	0503010002	1800 GREASE FITTING		02
05	0502012837	PISTON		01
06	0503018005	RING		01
07	0503011109	2-119 N 3006-9B O'RING		01
08	0503010163	D-1500 SCRAPER RING		01
09	0502010471	MOBILE COVER		01
10	0581010668	RING SUPPORT		01
11	0503018004	RING		01
12	0503018003	GASKET		01
13	0503018163	BACK-UP RING		02
14	0503018162	O'RING		02

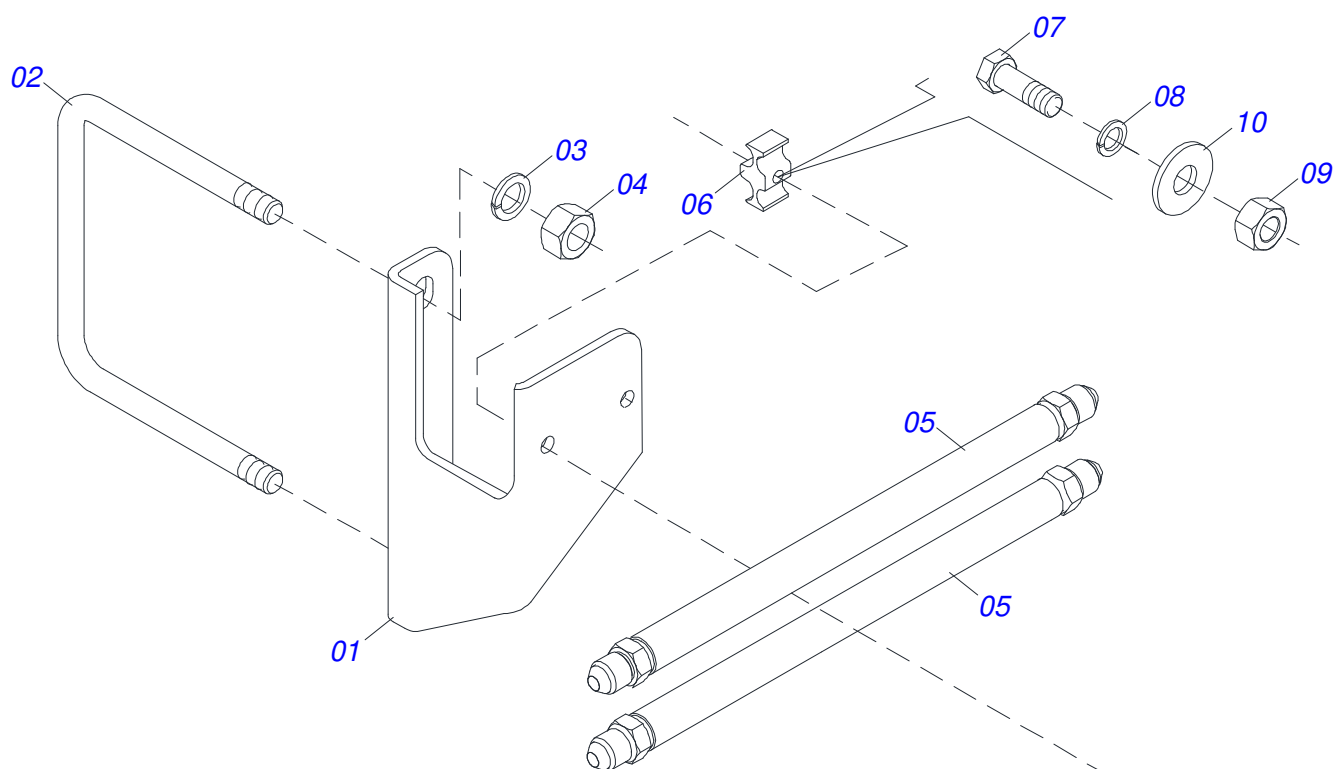


Item	Code	Description	See page	QT
01	0561017277	OIL CONDUCTOR FIXER PLATE		04
02	0521010718	5/8" U BOLT		04
03	0503010027	5/8" SPRING WASHER		08
04	0503010013	5/8" NUT		08
05	0521065263	MH OIL CONDUCTOR		04
06	0502012702	BODY SUPPORT CLAMP		04
07	0503011268	3/8" X 2-1/2" BOLT		04
08	0503010025	3/8" SPRING WASHER		04
09	0503010026	3/8" NUT		04
10	0501012140	FLAT WASHER		08

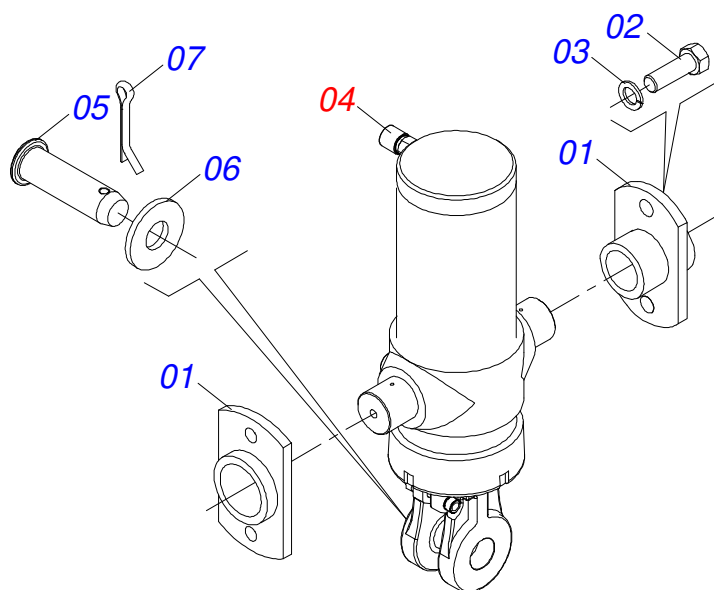


Item	Code	Description	See page	QT
01	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		16
02	0503010834	1/2 X 1 BOLT		32
03	0503010019	1/2" SPRING WASHER		32
04	0511058411	HYDRAULIC CYLINDER	35	08
05	0521010546	1.2" X 5.7" COUPLING SHAFT		08
06	0501017779	32 X 60 X 4.75 FLAT WASHER		16
07	0503010523	1/4" X 2" COTTERPIN		08

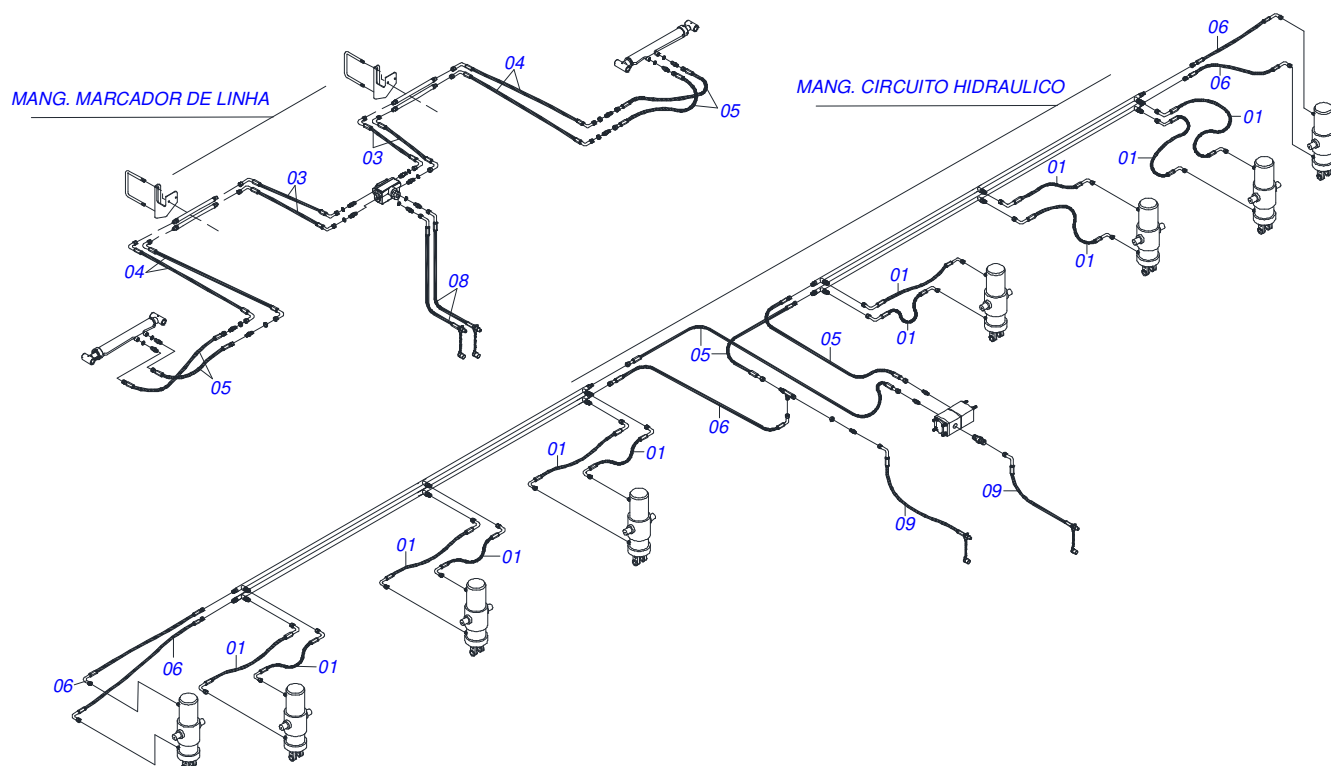

Item	Code	Description	See page	QT
01	0501080760	3/8" X 500 TC-TC HOSE		12
02	0501080193	HOSE		02
03	0501080124	HOSE 3/8 X 900 TR-TC		04
04	0501080675	3/8 X 1000 TC-TC 180G HOSE		04
05	0501080352	3/8 X 1400 TR-TR HOSE		03
06	0501080025	3/8 X 1400 TR-TC HOSE		05
07	0501080714	3/8 X 1600 TR-TC HOSE		04
08	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
09	0501081073	HOSE 1/2 X 4200 TC-TM		02

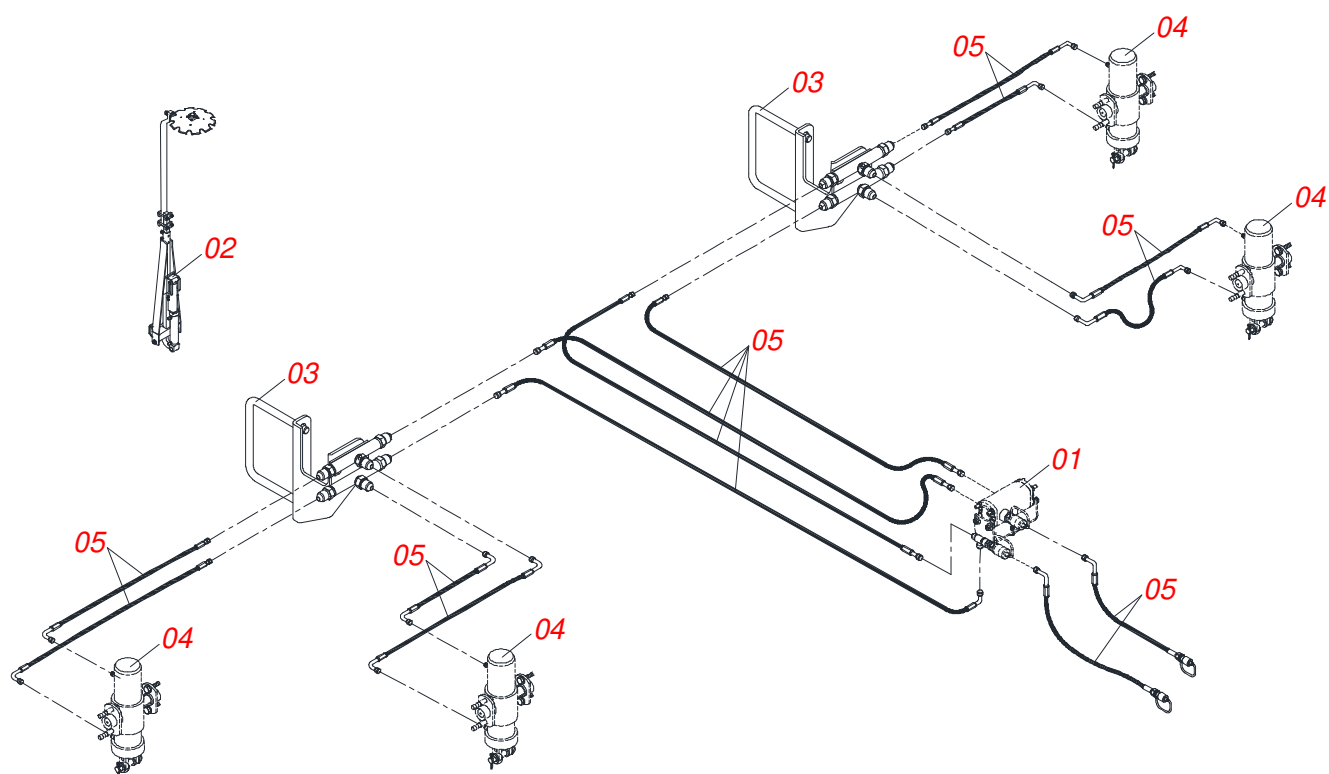


Item	Code	Description	See page	QT
01	0511053358	VALVE FIXING ASSEMBLY	24	01
02	0511053474	HYDRAULIC ASSEMBLY FOR MARKER	45	01
03	0511053481	FIXING ASSEMBLY HOSE HYDRAULIC	52	01
04	0511053475	HYDRAULIC CYLINDER ASSEMBLY 8 WHEEL	49	01
05	0511050905	HOSE KIT	53	01

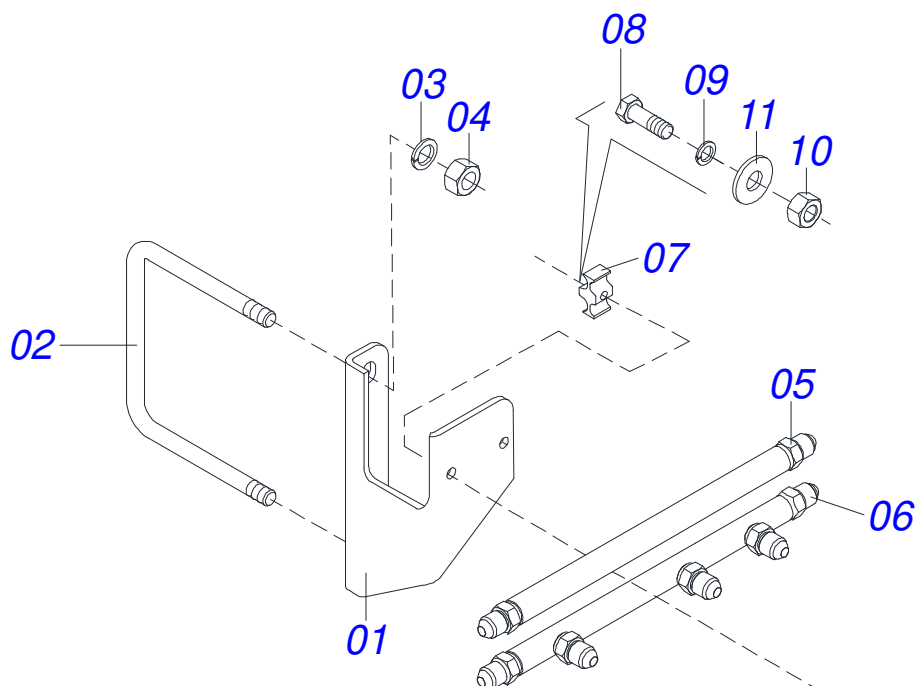


Item	Code	Description	See page	QT
01	0561017277	OIL CONDUCTOR FIXER PLATE		04
02	0521010718	5/8" U BOLT		04
03	0503010027	5/8" SPRING WASHER		08
04	0503010013	5/8" NUT		08
05	0521065264	MH OIL CONDUCTOR		04
06	0521064745	OIL CONDUCTOR		04
07	0502012702	BODY SUPPORT CLAMP		10
08	0503011268	3/8" X 2-1/2" BOLT		10
09	0503010025	3/8" SPRING WASHER		10
10	0503010026	3/8" NUT		10
11	0501012140	FLAT WASHER		08

MANGUEIRAS MARCADOR DE LINHA

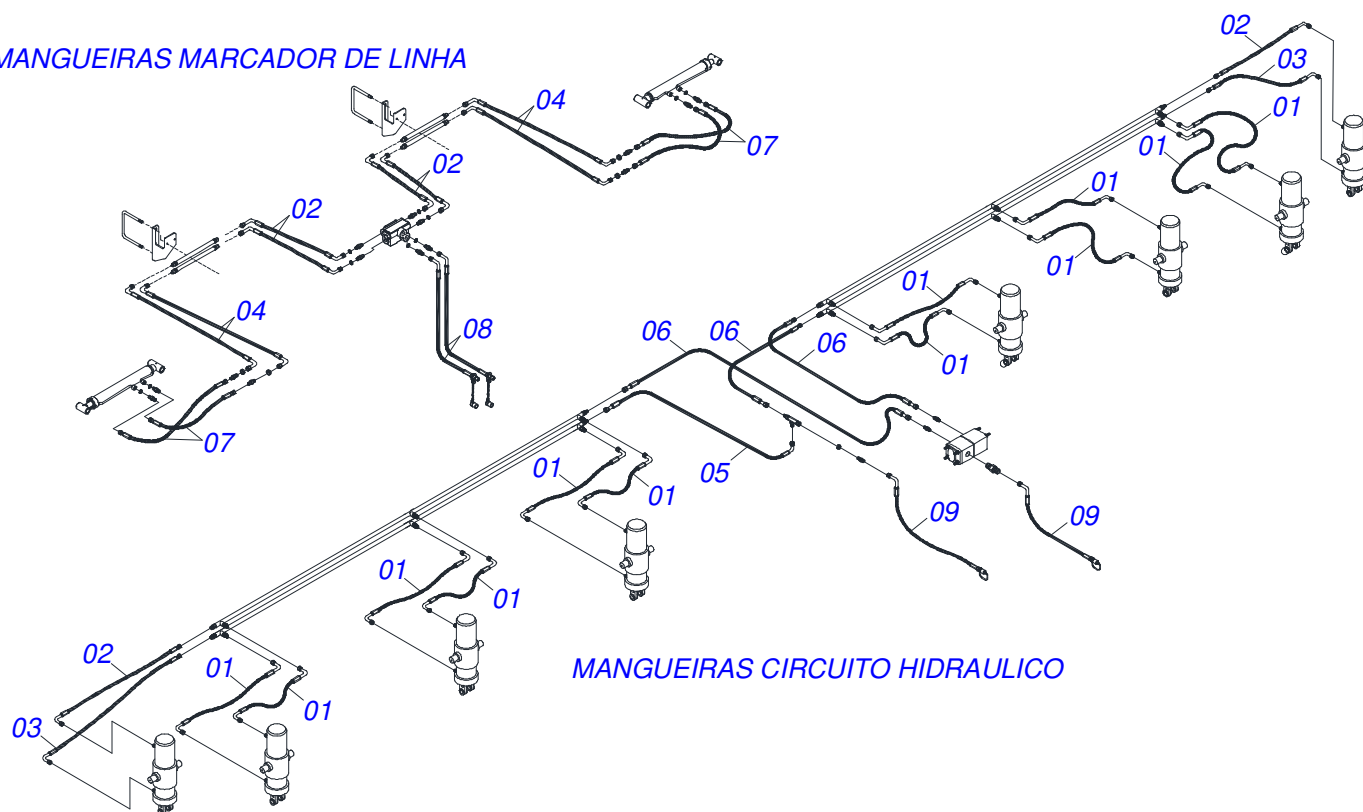

MANGUEIRAS CIRCUITO HIDRAULICO

Item	Code	Description	See page	QT
01	0501080760	3/8" X 500 TC-TC HOSE		12
02	0501080124	HOSE 3/8 X 900 TR-TC		06
03	0501080055	3/8 X 1000 TR-TC HOSE		02
04	0501080675	3/8 X 1000 TC-TC 180G HOSE		04
05	0501080348	3/8 X 1200 TR-TC HOSE		01
06	0501080321	3/8" X 47" TR-TR HOSE ASSY		03
07	0501080056	3/8" X 1700 TR-TC HOSE ASSY		04
08	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
09	0501081073	HOSE 1/2 X 4200 TC-TM		02

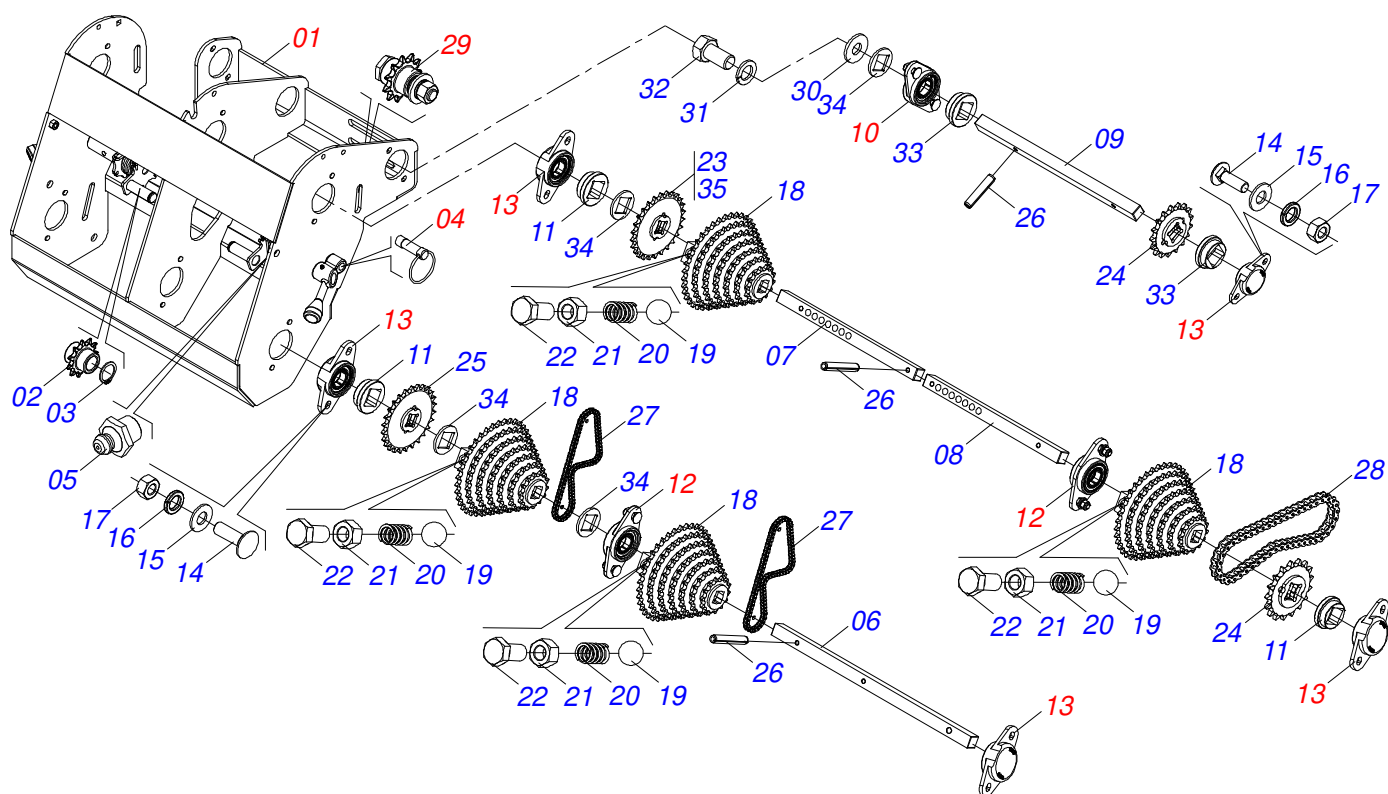


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	55	01
02	0503031805	11Z 1/2" GEAR		04
03	0503010302	501019 SEAL RING		04
04	0501048790	AXLE WITH RING	56	02
05	0503010002	1800 GREASE FITTING		02
06	0551018209	DRIVING AXLE		01
07	0521018259	DRIVEN AXLE		01
08	0551018210	DRIVEN AXLE		01
09	0551018211	INTERM SHAFT		01
10	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	57	01
11	0503030303	SUPPORT WASHER		05
12	0501056443	GEAR HOUSING BEARING	58	02
13	0501056271	GEARBOX CLOSED BEARING	60	05
14	0503011953	5/16" X 1" BOLT		10
15	0501010694	FLAT WASHER		10
16	0503010179	LOCK WASHER		10
17	0503010337	5/16" NUT		10
18	0511060396	DRIVE/DRIVEN AXLE CONE		04
19	0503012389	1/2 BALL		04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
21	0503010060	1/2" NUT		04
22	0503010395	1/2" X 1-1/4" BOLT		04
23	0511061759	22Z P12,70 FQ 3/4" GEAR		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0511067501	26Z GEAR		01
26	0503010292	0.2" X 1.6" SPRING PIN		07
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0501054655	CHAIN TENSIONER ASSY	61	02
30	0501010984	FLAT WASHER		01
31	0503010025	3/8" SPRING WASHER		01




COP FLEX 600 - FRAME
ASSY RIGHT EXCHANGE

Page 54
0511048939


Item	Code	Description	See page	QT
32	0503010256	3/8" X 3/4" BOLT		01
33	0503030303	SUPPORT WASHER		03
34	0521018630	1.4" X SQUARE 0.8" WASHER		06
35	0511061822	25Z P0.5" GEAR SQUARE HOL		01

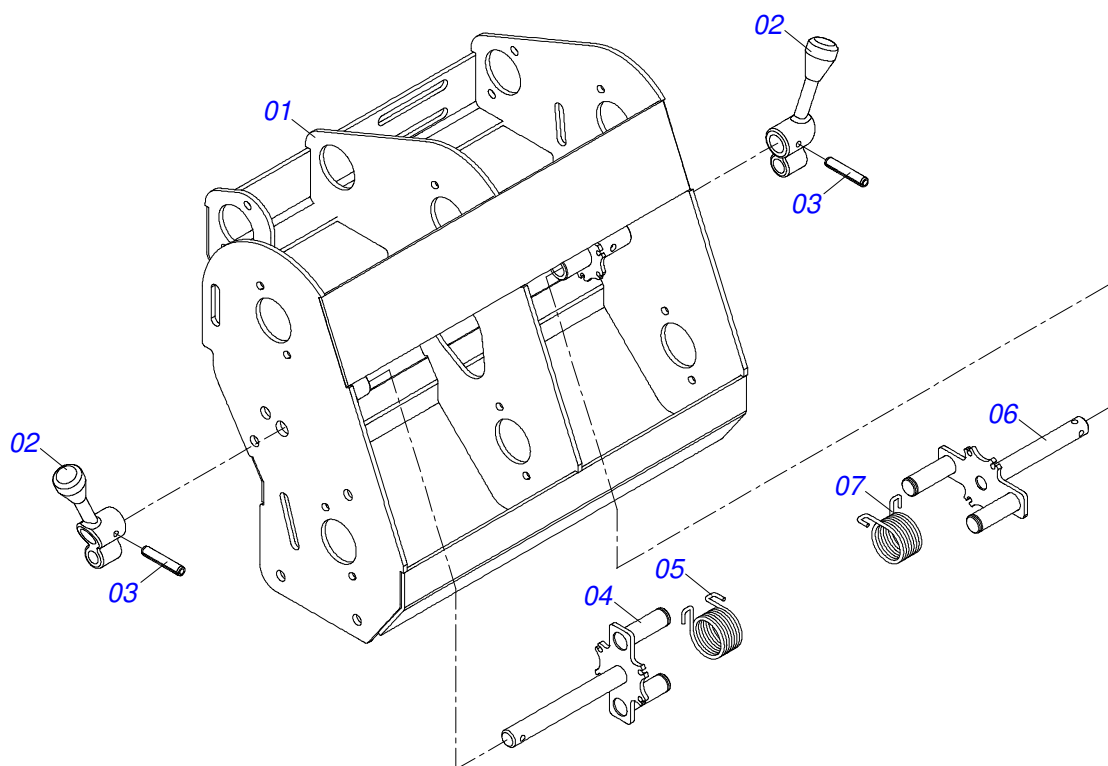


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

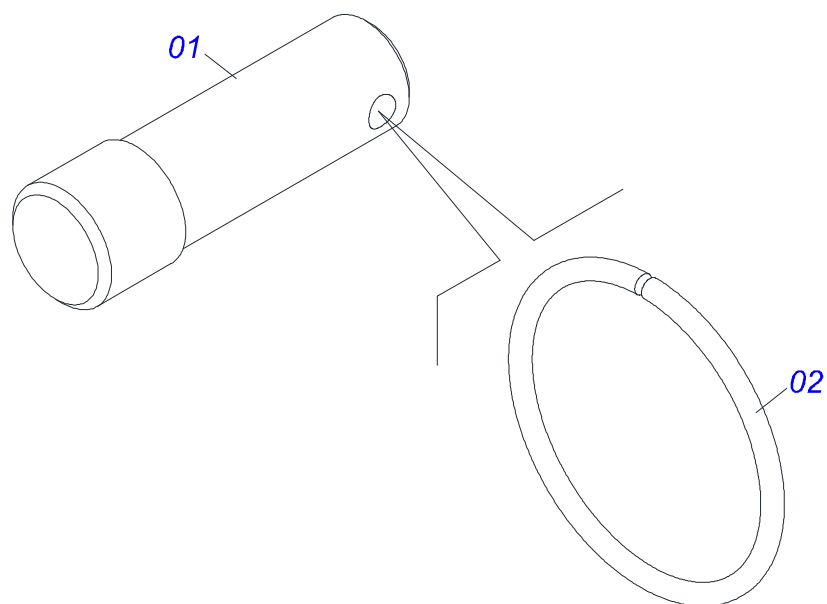


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

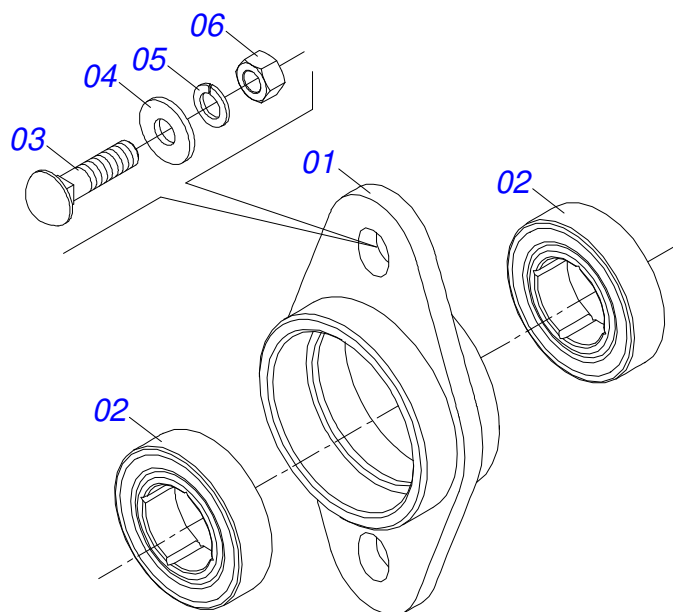


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER		02
06	0503010337	5/16" NUT		02

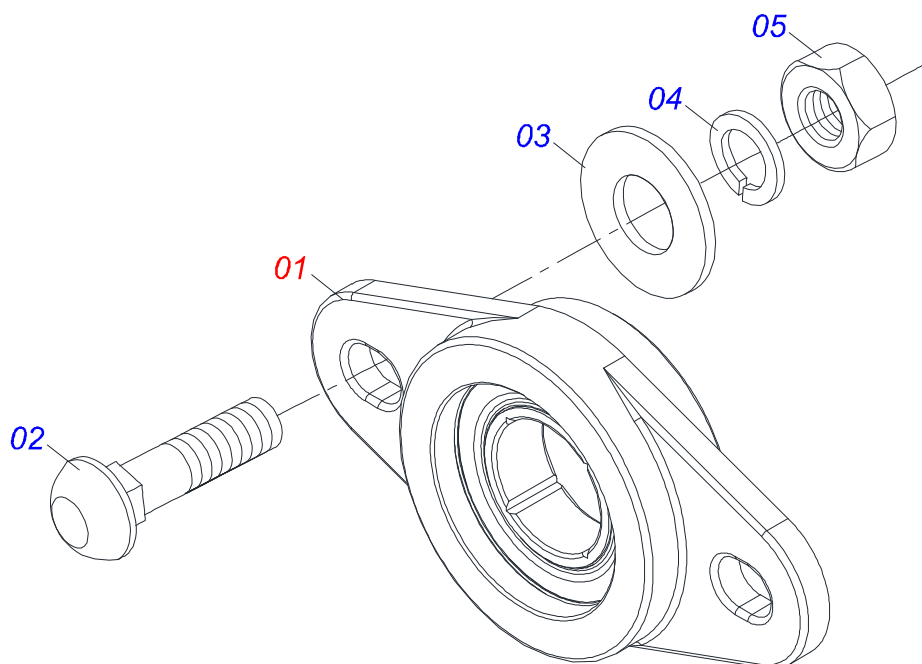


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	59	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

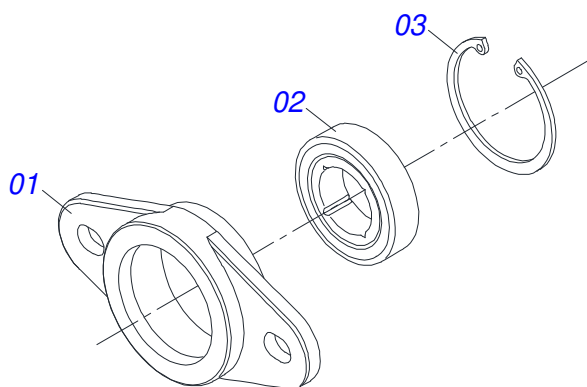


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

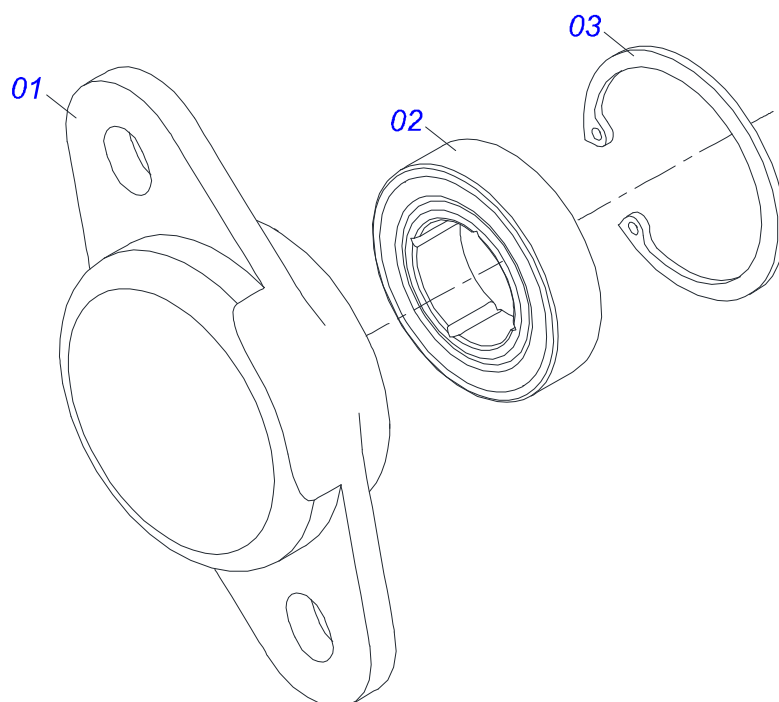

Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

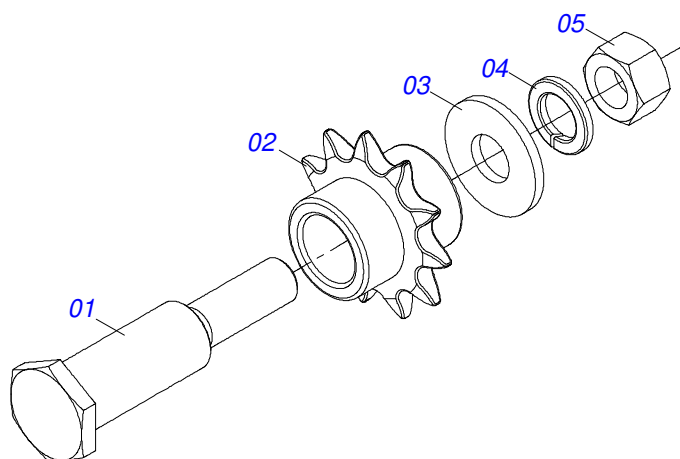

Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	1 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

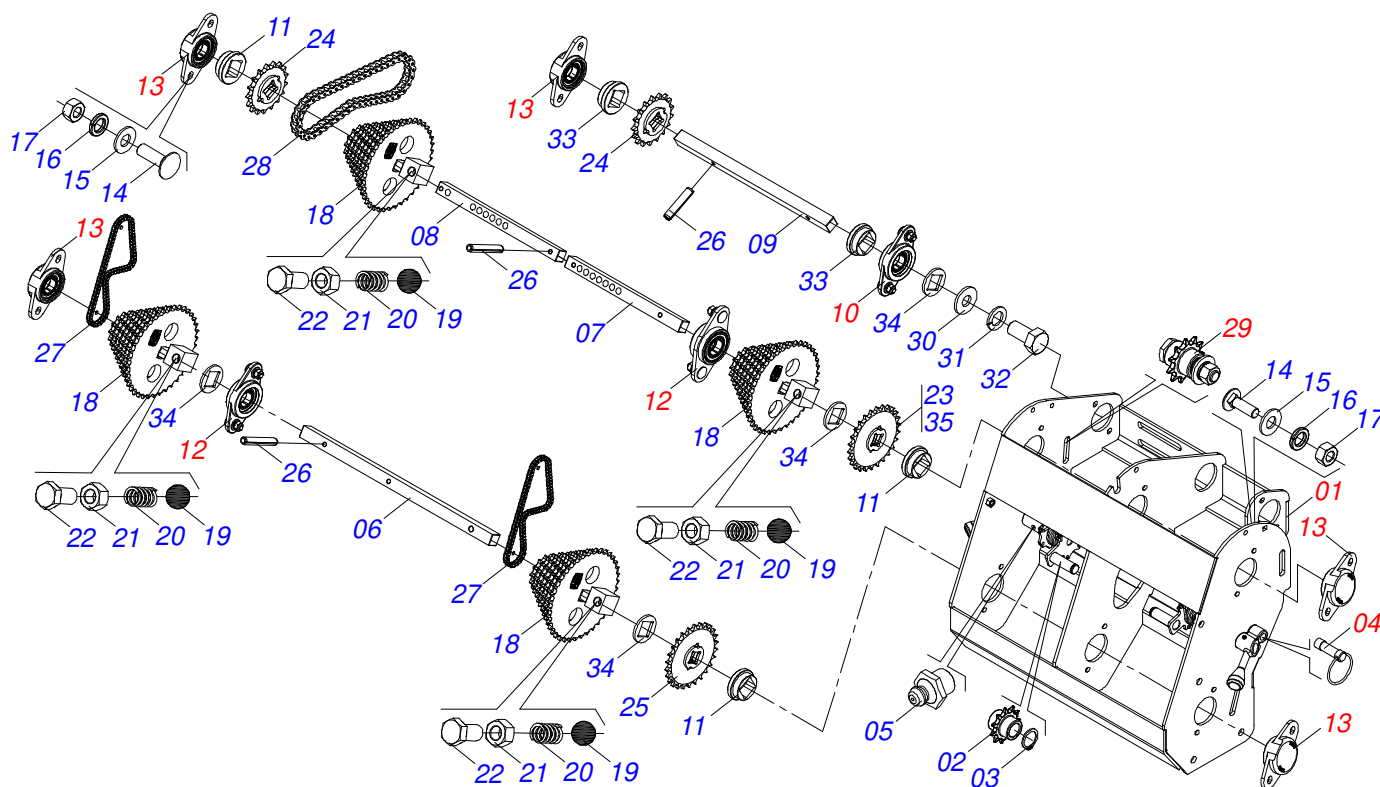


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	63	01
02	0503031805	11Z 1/2" GEAR		04
03	0503010302	501019 SEAL RING		04
04	0501048790	AXLE WITH RING	56	02
05	0503010002	1800 GREASE FITTING		02
06	0551018209	DRIVING AXLE		01
07	0521018259	DRIVEN AXLE		01
08	0551018210	DRIVEN AXLE		01
09	0551018211	INTERM SHAFT		01
10	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	57	01
11	0503030303	SUPPORT WASHER		05
12	0501056443	GEAR HOUSING BEARING	58	02
13	0501056271	GEARBOX CLOSED BEARING	60	05
14	0503011953	5/16" X 1" BOLT		10
15	0501010694	FLAT WASHER		10
16	0503010179	LOCK WASHER		10
17	0503010337	5/16" NUT		10
18	0511060396	DRIVE/DRIVEN AXLE CONE		04
19	0503012389	1/2 BALL		04
20	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
21	0503010060	1/2" NUT		04
22	0503010395	1/2" X 1-1/4" BOLT		04
23	0511061759	22Z P12,70 FQ 3/4" GEAR		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0511067501	26Z GEAR		01
26	0503010292	0.2" X 1.6" SPRING PIN		07
27	0503012204	40-1 CHAIN X 82 LINK + RED		02
28	0503012713	40-1 CHAIN X 45 LINK + MEN		01
29	0501054655	CHAIN TENSIONER ASSY	61	02
30	0501010984	FLAT WASHER		01
31	0503010025	3/8" SPRING WASHER		01




COP FLEX 600 - FRAME
LEFT ASSY EXCHANGE

Page 62
0511048940


Item	Code	Description	See page	QT
32	0503010256	3/8" X 3/4" BOLT		01
33	0503030303	SUPPORT WASHER		03
34	0521018630	1.4" X SQUARE 0.8" WASHER		06
35	0511061822	25Z P0.5" GEAR SQUARE HOL		01

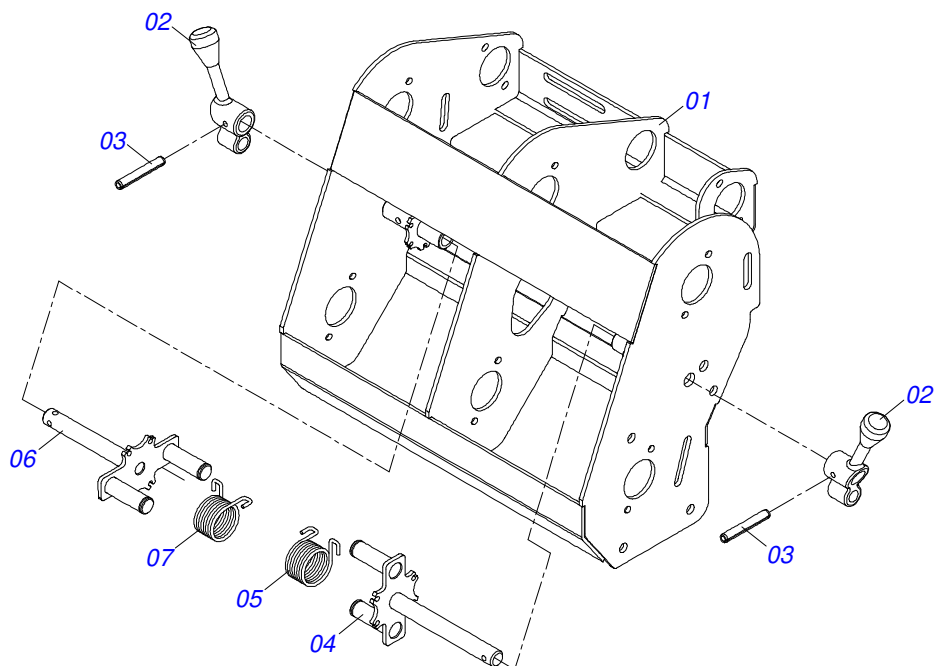


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

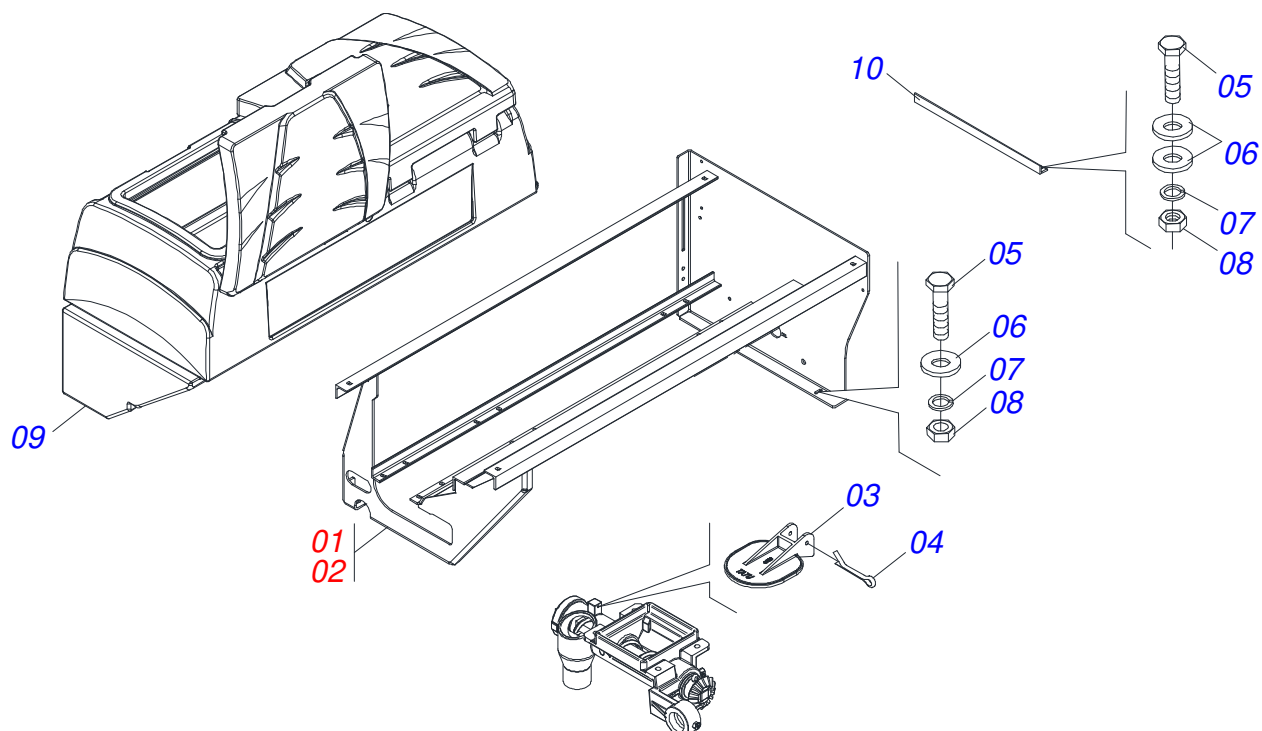


Item	Code	Description	See page	QT
01	0511050936	BOX SUPPORT RIGHT FERTILIZER		01
02	0511050935	FERTILIZER LEFT BOX SUPPORT		01
03	0503034396	FERTILIZER SIDE COVER		10
04	0503010362	1/8" X 1.1/4" COTTERPIN		10
05	0503010849	3/8" X 1-1/2" BOLT		16
06	0501010984	FLAT WASHER		24
07	0503010025	3/8" SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		02
10	0571013223	ANGLE BAR		04

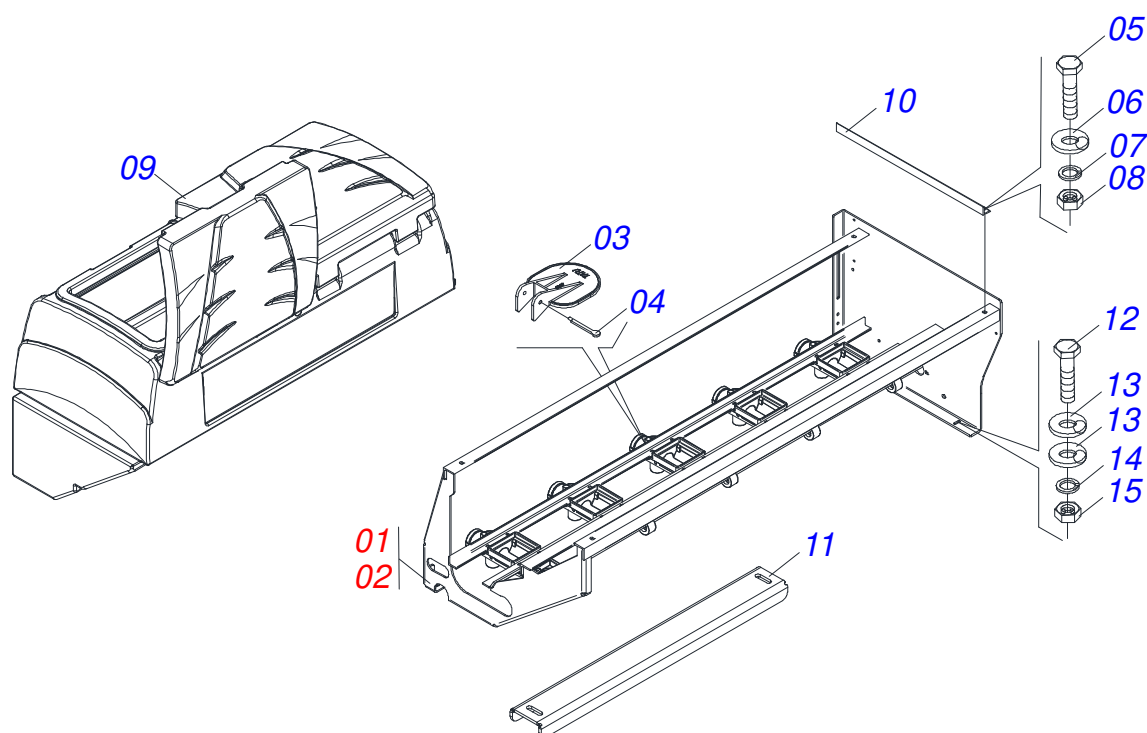


Item	Code	Description	See page	QT
01	0511053111	LH FERTILIZER BOX SUPPORT		01
02	0511053112	LEFT FERTILIZER BOX SUPPORT		01
03	0503034396	FERTILIZER SIDE COVER		10
04	0503010362	1/8" X 1.1/4" COTTERPIN		10
05	0503010849	3/8" X 1-1/2" BOLT		08
06	0501010984	FLAT WASHER		08
07	0503010025	3/8" SPRING WASHER		08
08	0503010026	3/8" NUT		08
09	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		02
10	0571013223	ANGLE BAR		02
11	0571013224	STRINGER FIXING CASH FERTILIZER		02
12	0503010849	3/8" X 1-1/2" BOLT		08
13	0501010984	FLAT WASHER		16
14	0503010025	3/8" SPRING WASHER		08
15	0503010026	3/8" NUT		08

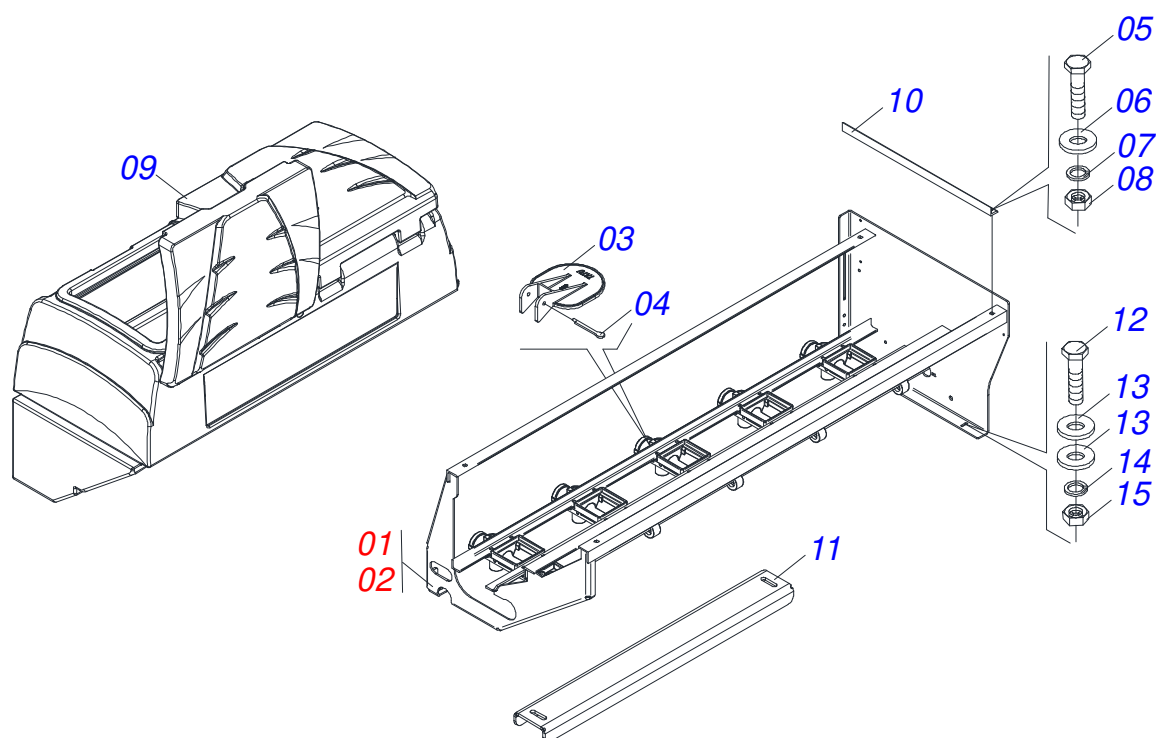


Item	Code	Description	See page	QT
01	0511050392	BOX SUPPORT RIGHT FERTILIZER		01
02	0511050391	FERTILIZER LEFT BOX SUPPORT		01
03	0503034396	FERTILIZER SIDE COVER		12
04	0503010362	1/8" X 1.1/4" COTTERPIN		12
05	0503010849	3/8" X 1-1/2" BOLT		12
06	0501010984	FLAT WASHER		12
07	0503010025	3/8" SPRING WASHER		12
08	0503010026	3/8" NUT		12
09	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		03
10	0571013223	ANGLE BAR		02
11	0571013224	STRINGER FIXING CASH FERTILIZER		02
12	0503010849	3/8" X 1-1/2" BOLT		08
13	0501010984	FLAT WASHER		16
14	0503010025	3/8" SPRING WASHER		08
15	0503010026	3/8" NUT		08

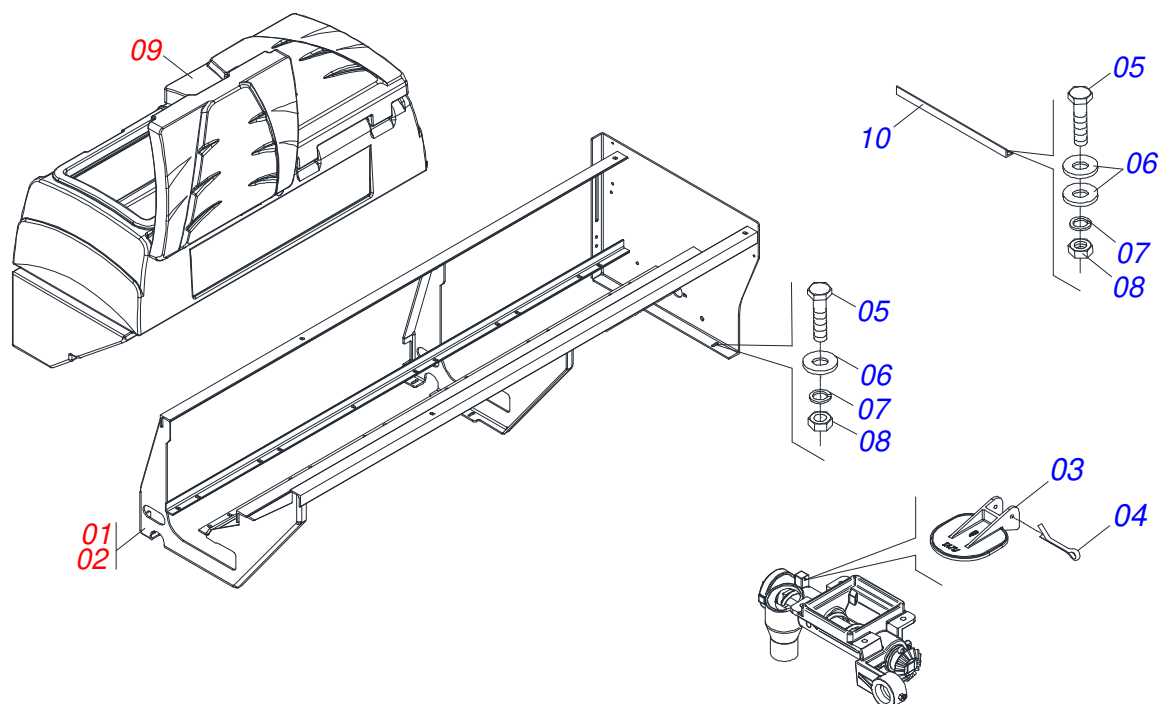


Item	Code	Description	See page	QT
01	0511053115	LH FERTILIZER BOX SUPPORT		01
02	0511053116	LEFT FERTILIZER BOX SUPPORT		01
03	0503034396	FERTILIZER SIDE COVER		10
04	0503010362	1/8" X 1.1/4" COTTERPIN		08
05	0503010849	3/8" X 1-1/2" BOLT		16
06	0501010984	FLAT WASHER		24
07	0503010025	3/8" SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		03
10	0571013223	ANGLE BAR		04

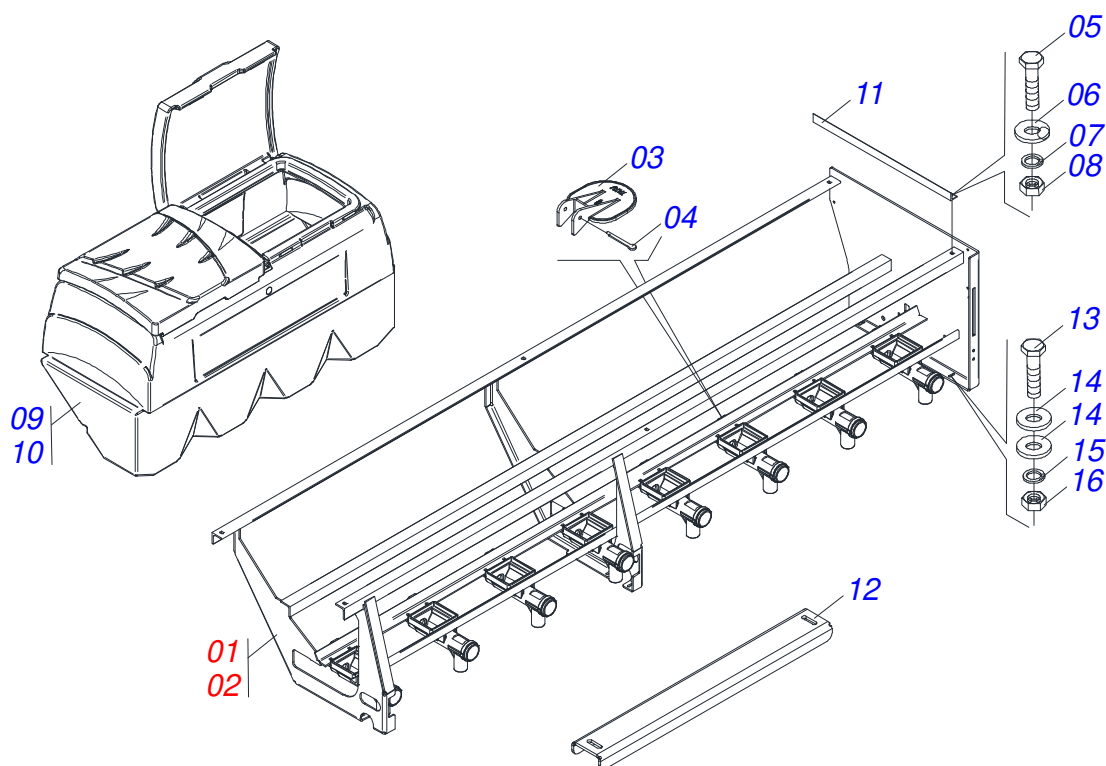


Item	Code	Description	See page	QT
01	0511050891	BOX SUPPORT RIGHT FERTILIZER		01
02	0511050892	FERTILIZER LEFT BOX SUPPORT		01
03	0503034396	FERTILIZER SIDE COVER		14
04	0503010362	1/8" X 1.1/4" COTTERPIN		14
05	0503010849	3/8" X 1-1/2" BOLT		08
06	0501010984	FLAT WASHER		08
07	0503010025	3/8" SPRING WASHER		08
08	0503010026	3/8" NUT		08
09	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		02
10	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		01
11	0571013223	ANGLE BAR		02
12	0571013225	STRINGER FIXING CASH FERTILIZER		02
13	0503010849	3/8" X 1-1/2" BOLT		08
14	0501010984	FLAT WASHER		16
15	0503010025	3/8" SPRING WASHER		08
16	0503010026	3/8" NUT		08

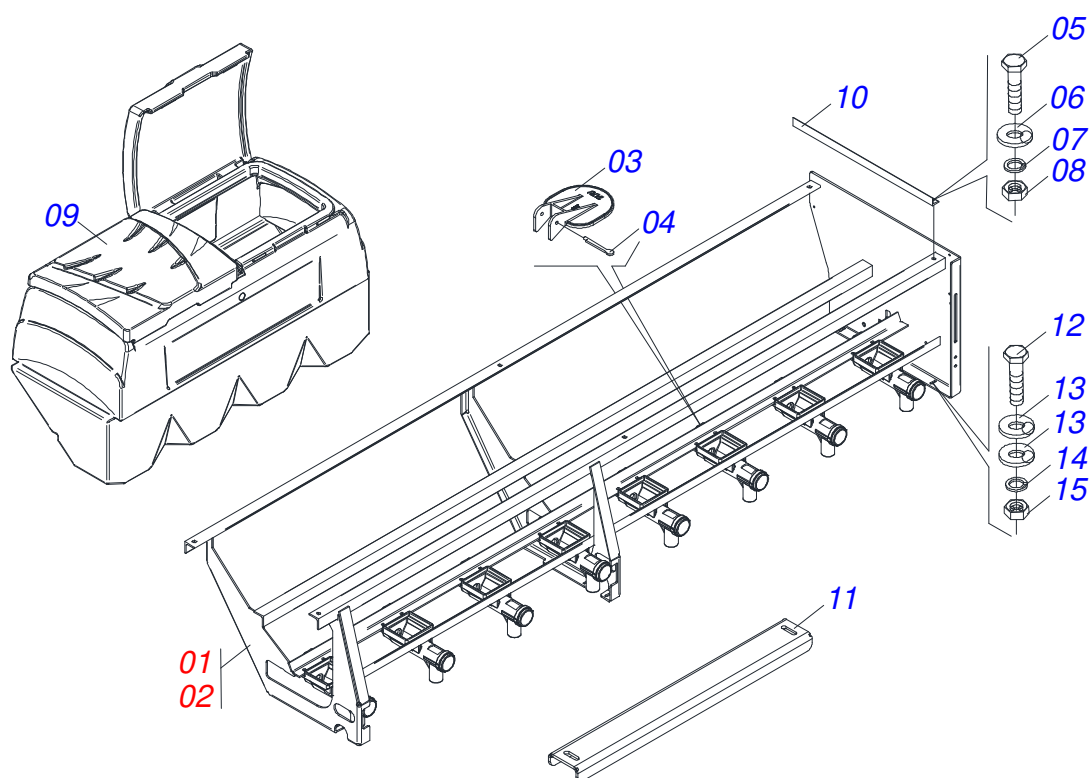


Item	Code	Description	See page	QT
01	0511050641	RH FERTILIZER BOX SUPPORT		01
02	0511050642	LEFT FERTILIZER BOX SUPPORT		01
03	0503034396	FERTILIZER SIDE COVER		15
04	0503010362	1/8" X 1.1/4" COTTERPIN		15
05	0503010849	3/8" X 1-1/2" BOLT		12
06	0501010984	FLAT WASHER		12
07	0503010025	3/8" SPRING WASHER		12
08	0503010026	3/8" NUT		12
09	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		04
10	0571013224	STRINGER FIXING CASH FERTILIZER		04
11	0571016020	STRINGER FIXING CASH FERTILIZER		02
12	0503010849	3/8" X 1-1/2" BOLT		12
13	0501010984	FLAT WASHER		24
14	0503010025	3/8" SPRING WASHER		12
15	0503010026	3/8" NUT		12

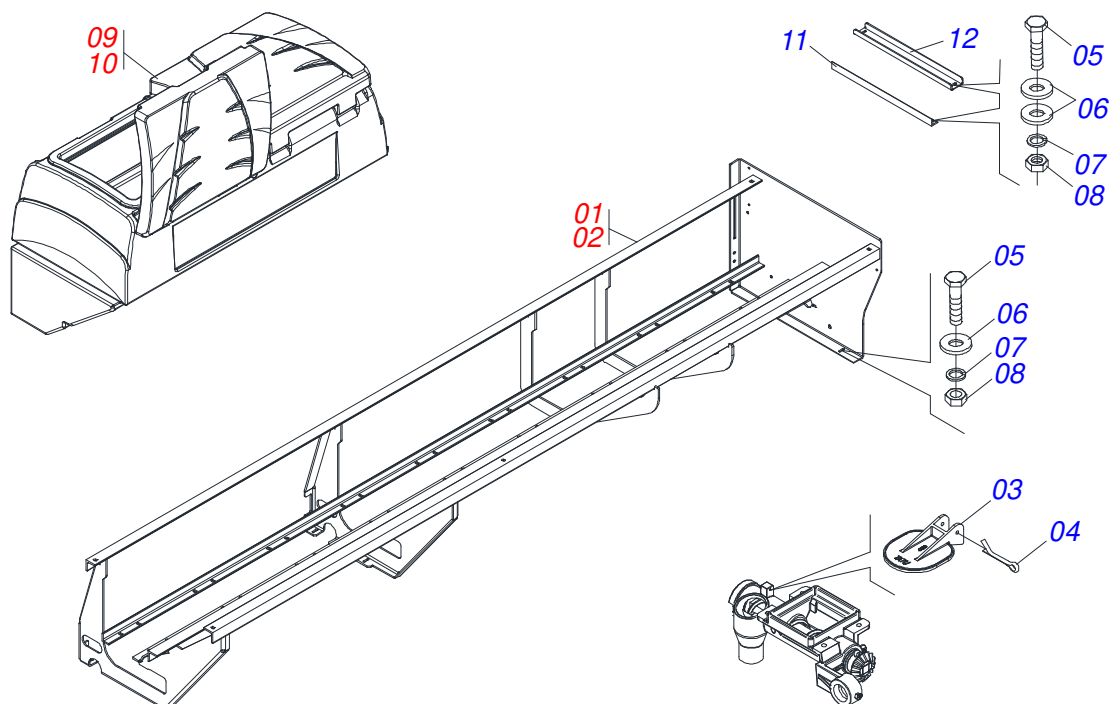


Item	Code	Description	See page	QT
01	0511050896	LEFT FERTILIZER BEAM SUPPORT		01
02	0511050897	FERTILIZER BEAM SUPPORT		01
03	0503034396	FERTILIZER SIDE COVER		18
04	0503010362	1/8" X 1.1/4" COTTERPIN		18
05	0503010849	3/8" X 1-1/2" BOLT		24
06	0501010984	FLAT WASHER		48
07	0503010025	3/8" SPRING WASHER		24
08	0503010026	3/8" NUT		24
09	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		02
10	0503060663	FERTILIZER HOPPER WITH 4 TRUNNELS		02
11	0571013223	ANGLE BAR		04
12	0571013225	STRINGER FIXING CASH FERTILIZER		02

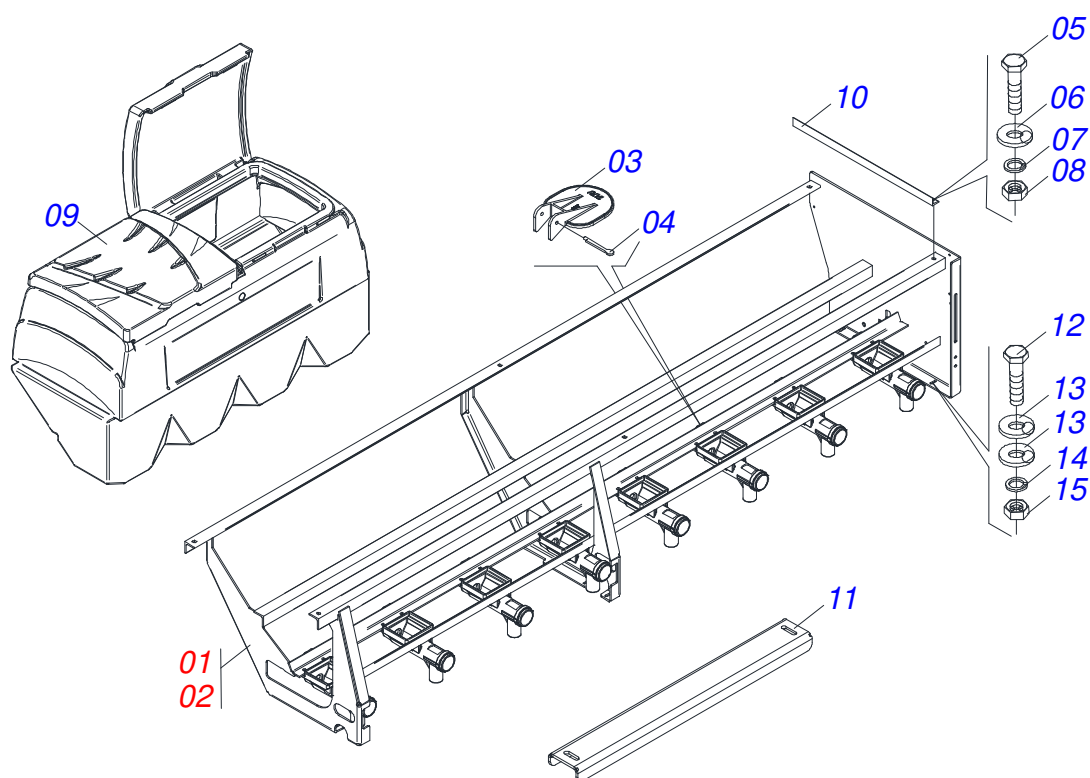

Item	Code	Description	See page	QT
01	0511050903	RH FERTILIZER BOX SUPPORT		01
02	0511050904	FERTILIZER BOX SUPPORT		01
03	0503034396	FERTILIZER SIDE COVER		20
04	0503010362	1/8" X 1.1/4" COTTERPIN		20
05	0503010849	3/8" X 1-1/2" BOLT		12
06	0501010984	FLAT WASHER		24
07	0503010025	3/8" SPRING WASHER		12
08	0503010026	3/8" NUT		12
09	0503060664	FERTILIZER HOPPER WITH 5 TRUNNELS		04
10	0571013224	STRINGER FIXING CASH FERTILIZER		04
11	0571016020	STRINGER FIXING CASH FERTILIZER		02
12	0503010849	3/8" X 1-1/2" BOLT		12
13	0501010984	FLAT WASHER		24
14	0503010025	3/8" SPRING WASHER		12
15	0503010026	3/8" NUT		12

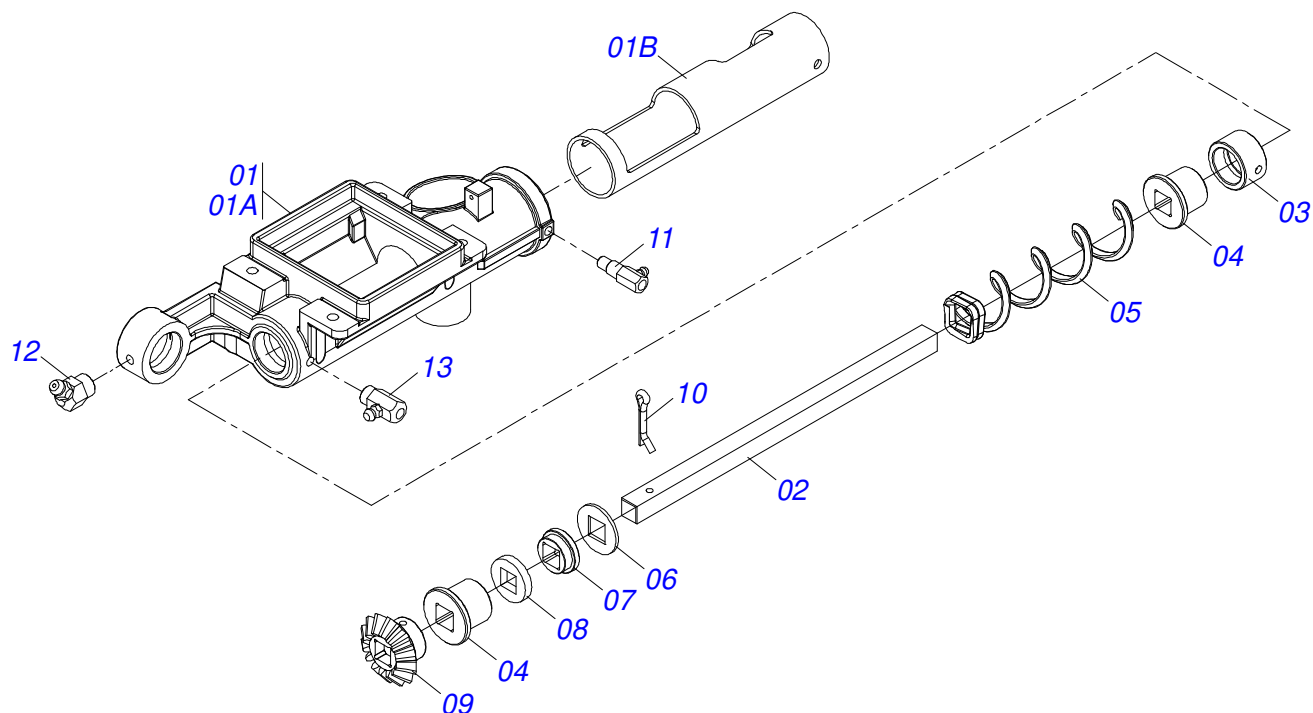


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

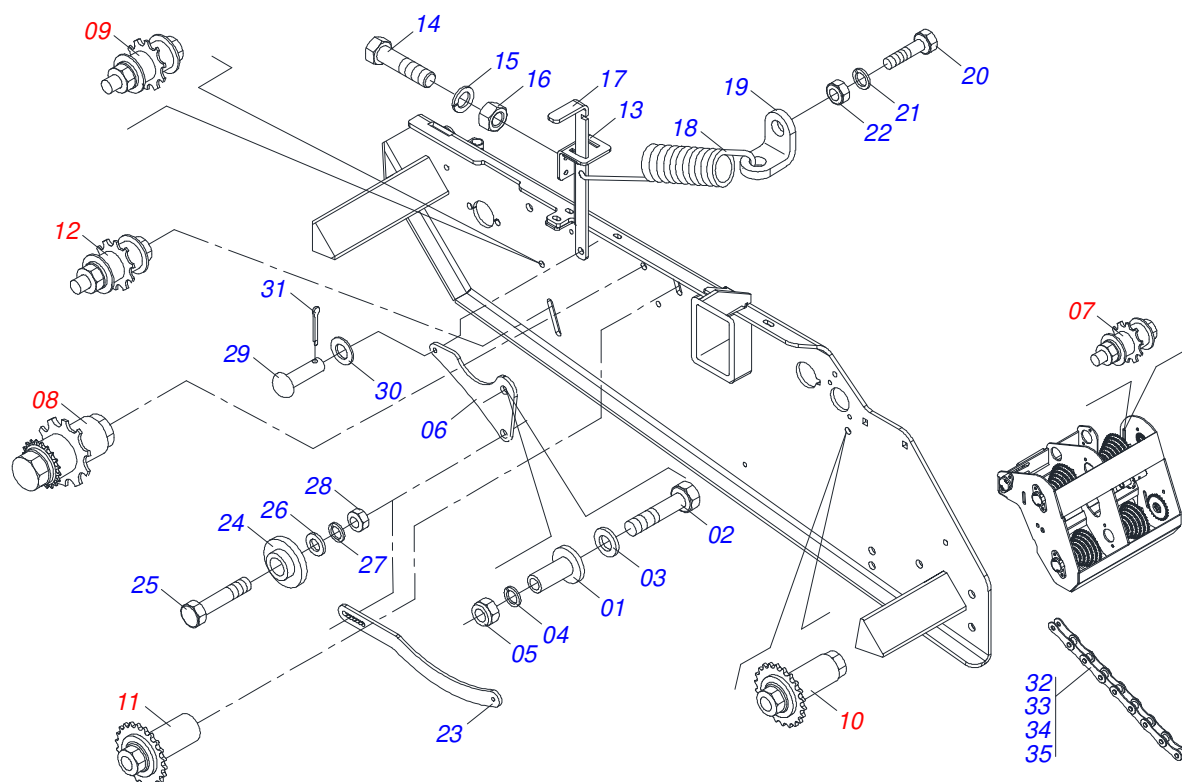


Item	Code	Description	See page	QT
001	0561018212	ARTICULAT SLEEVE	01	
002	0503010547	1/2" X 4" BOLT	01	
003	0511017302	FLAT WASHER	01	
004	0503010019	1/2" SPRING WASHER	01	
005	0503010060	1/2" NUT	01	
006	0561017281	ARTICULACION ARM	01	
007	0511053366	CHAIN TENSIONER EXCHANGE	01	
008	0511050385	BEARING DOUBLE GEAR	01	
009	0501058265	STRETCHER LOWER CURRENT 21Z SEED	01	
010	0511056387	INTERMEDIATE BEARING SEED WITH GEAR 21Z	01	
011	0511050127	CHAIN TENSIONER SUPPORT	01	
012	0501053126	FERTILIZER CHAIN TENSIONER ASSY	01	
013	0561017275	LEVER FIXER	01	
014	0503010237	3/8" X 1" BOLT	02	
015	0503010025	3/8" SPRING WASHER	02	
016	0503010026	3/8" NUT	02	
017	0561017280	LH LEVER DISASSEMBLE (COP 11)	01	
018	0503030093	TRACTION SPRING	01	
019	0561017273	FIXER SPRING	01	
020	0503010237	3/8" X 1" BOLT	01	
021	0503010025	3/8" SPRING WASHER	01	
022	0503010026	3/8" NUT	01	
023	0561017282	LOWER LEVER	01	
024	0561016797	SLEEVE UNION LEVER	01	
025	0503011082	C1/2" X 1.3/4" SCREW	01	
026	0511017302	FLAT WASHER	02	
027	0503010019	1/2" SPRING WASHER	01	
028	0503010060	1/2" NUT	01	
029	0521010773	0.37" X 1.18" COUPLING SHAFT	02	
030	0501010984	FLAT WASHER	01	
031	0503010140	1/8" X 3/4" COTTERPIN	02	

Item	Code	Description	See page	QT
032	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
033	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
034	0503016737	40-1 X 114 CHAIN LINK + REDUCION		01
035	0503011721	40-1 CHAIN X 122 LINK + REDUCTION		01

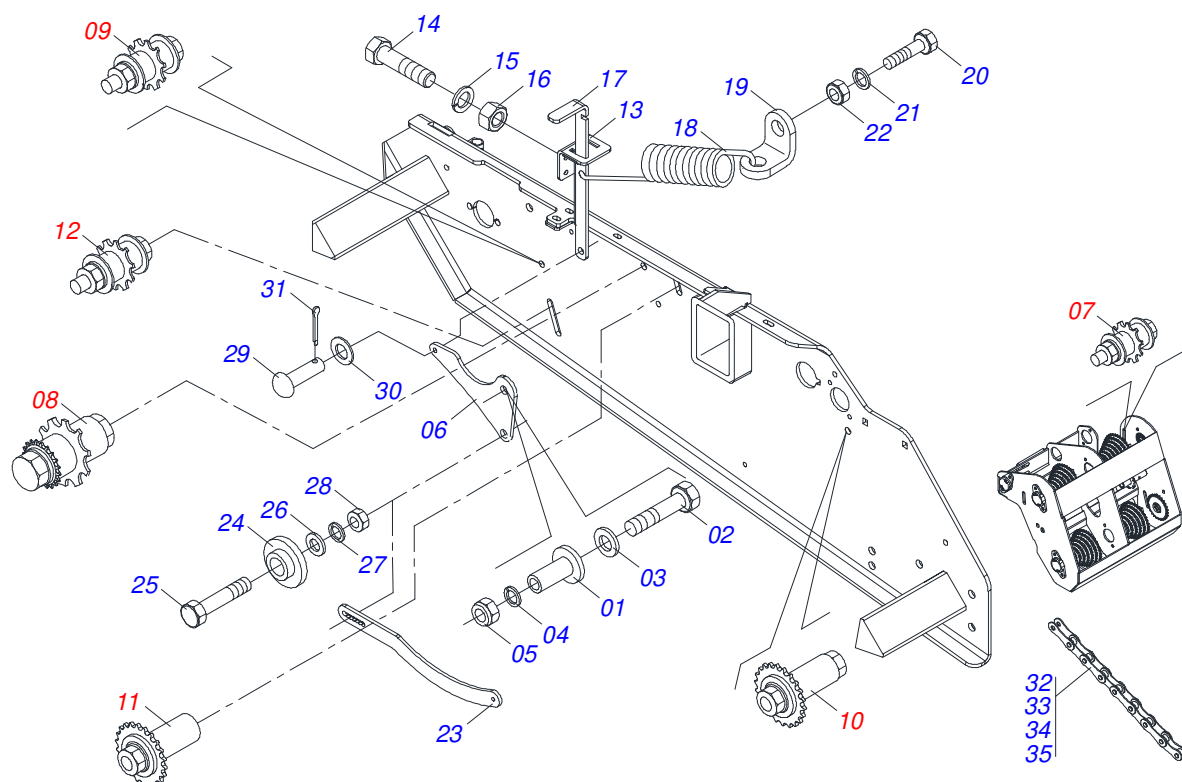


Item	Code	Description	See page	QT
001	0561018212	ARTICULAT SLEEVE	01	
002	0503010547	1/2" X 4" BOLT	01	
003	0511017302	FLAT WASHER	01	
004	0503010019	1/2" SPRING WASHER	01	
005	0503010060	1/2" NUT	01	
006	0561017281	ARTICULACION ARM	01	
007	0511053366	CHAIN TENSIONER EXCHANGE	01	
008	0511050385	BEARING DOUBLE GEAR	01	
009	0501058265	STRETCHER LOWER CURRENT 21Z SEED	01	
010	0511056387	INTERMEDIATE BEARING SEED WITH GEAR 21Z	01	
011	0511050127	CHAIN TENSIONER SUPPORT	01	
012	0501053126	FERTILIZER CHAIN TENSIONER ASSY	01	
013	0561017275	LEVER FIXER	01	
014	0503010237	3/8" X 1" BOLT	02	
015	0503010025	3/8" SPRING WASHER	02	
016	0503010026	3/8" NUT	02	
017	0561017279	RH LEVER DISASSEMBLE (COP 11)	01	
018	0503030093	TRACTION SPRING	01	
019	0561017273	FIXER SPRING	01	
020	0503010237	3/8" X 1" BOLT	01	
021	0503010025	3/8" SPRING WASHER	01	
022	0503010026	3/8" NUT	01	
023	0561017282	LOWER LEVER	01	
024	0561016797	SLEEVE UNION LEVER	01	
025	0503011082	C1/2" X 1.3/4" SCREW	01	
026	0511017302	FLAT WASHER	02	
027	0503010019	1/2" SPRING WASHER	01	
028	0503010060	1/2" NUT	01	
029	0521010773	0.37" X 1.18" COUPLING SHAFT	02	
030	0501010984	FLAT WASHER	01	
031	0503010140	1/8" X 3/4" COTTERPIN	02	


Item	Code	Description	See page	QT
032	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
033	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
034	0503016737	40-1 X 114 CHAIN LINK + REDUCION		01
035	0503011721	40-1 CHAIN X 122 LINK + REDUCTION		01

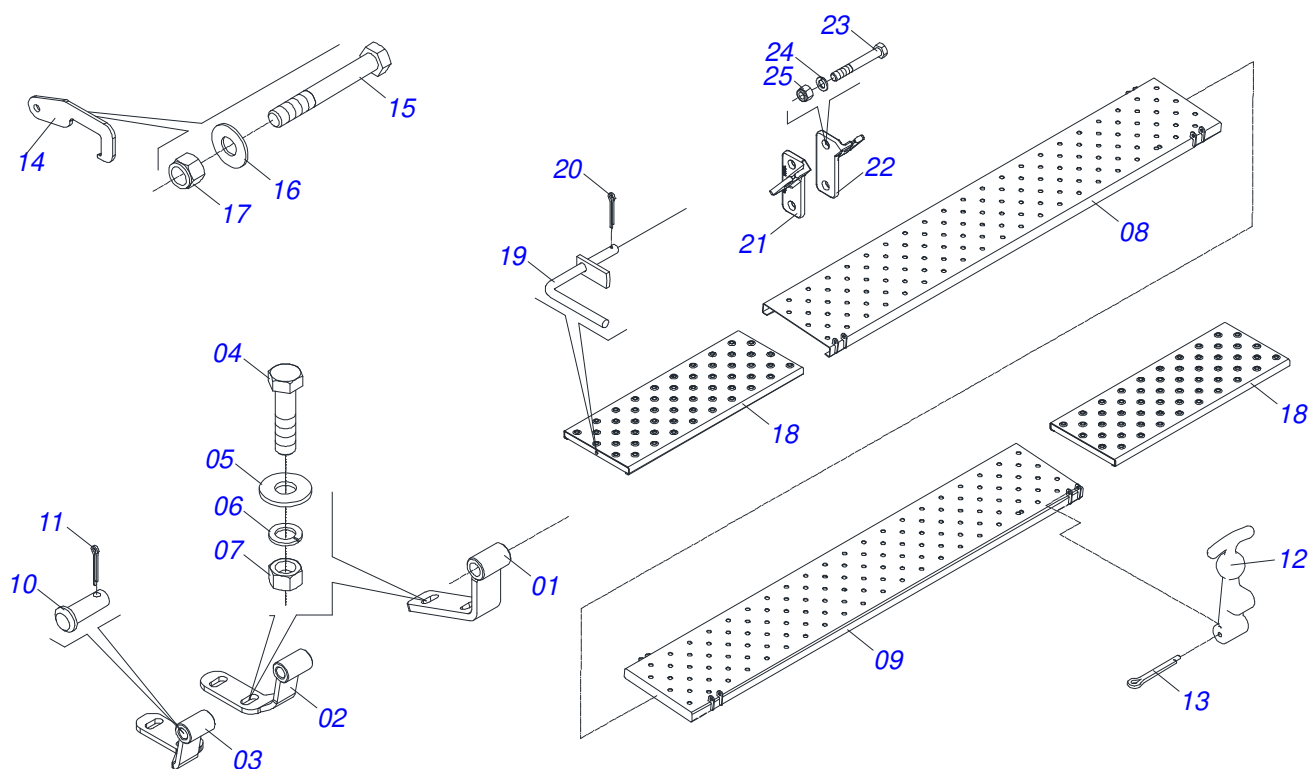


Item	Code	Description	See page	QT
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0511069665	PLATFORM RIGHT	01	
09	0521062323	PLATFORM LEFT	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

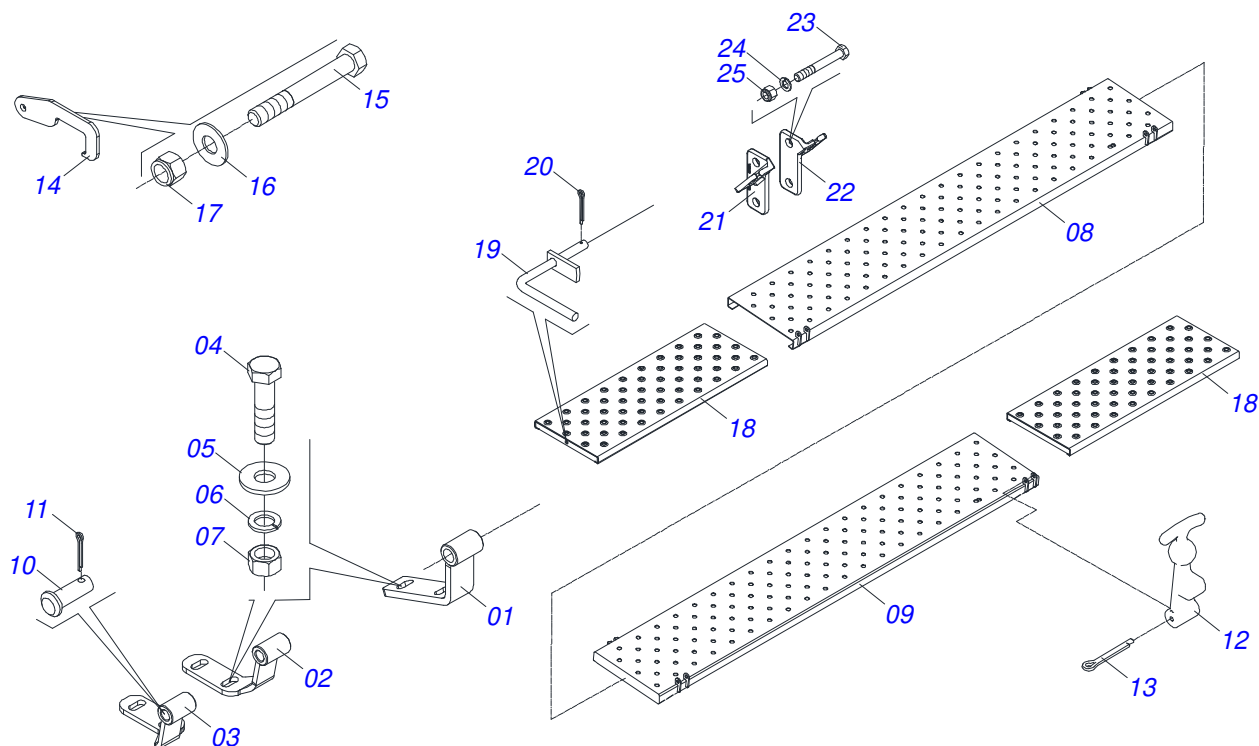


Item	Code	Description	See page	QT
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0521063947	PLATFORM RIGHT	01	
09	0521063944	LEFT PLATFORM	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503014007	1/2" X 1-1/4" BOLT	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

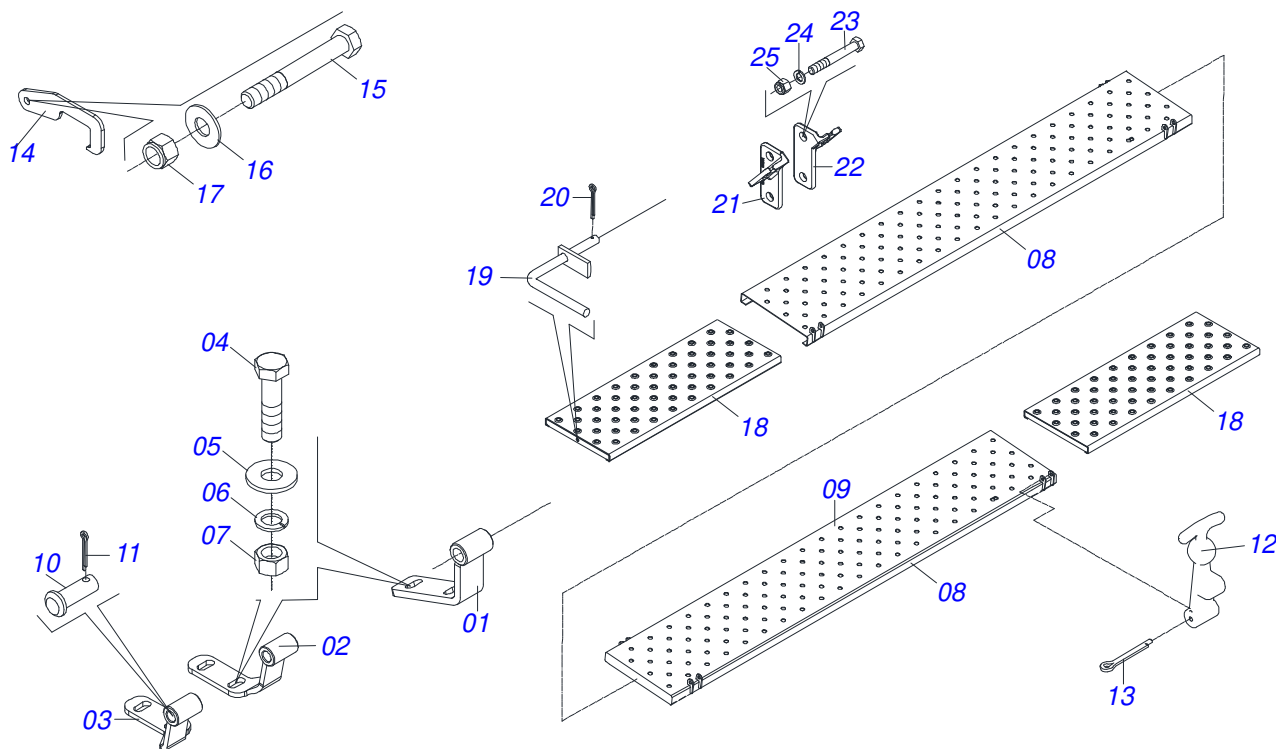


Item	Code	Description	See page	QT
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0511069718	PLATFORM RIGHT	01	
09	0521062324	PLATFORM LEFT	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503014007	1/2" X 1-1/4" BOLT	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

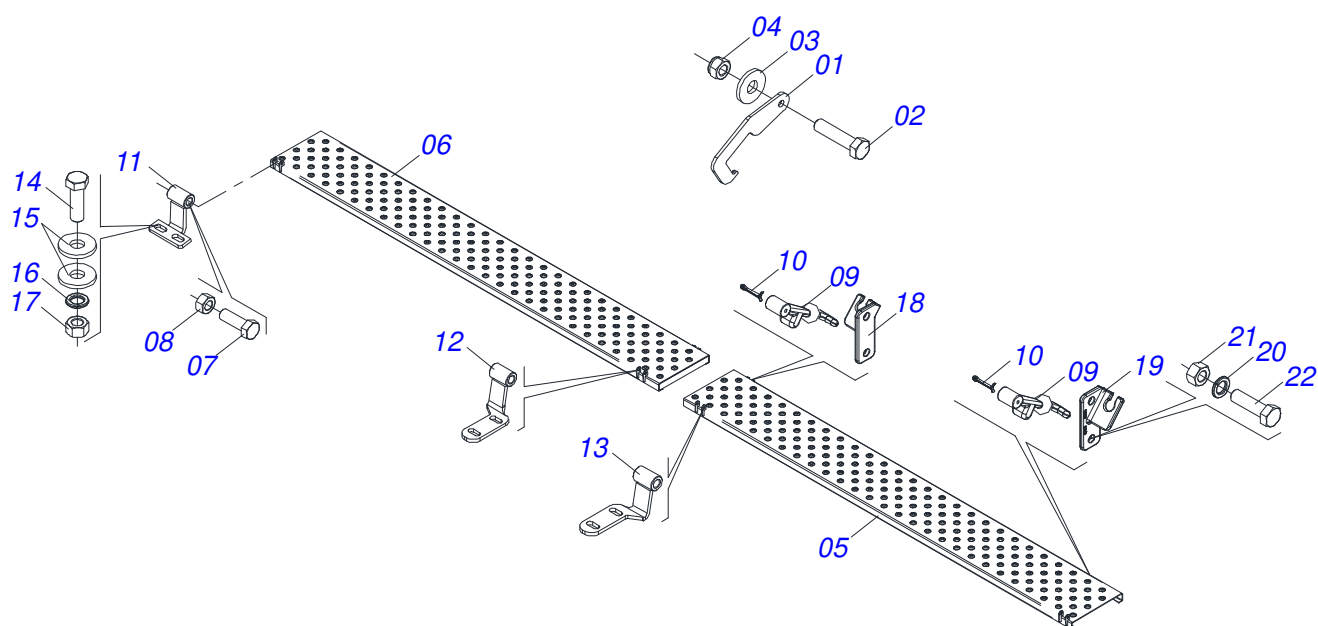


Item	Code	Description	See page	QT
01	0551019115	LOCKING PLATFORM FIXATION	02	
02	0501010096	3/8" X 2" BOLT	02	
03	0501010984	FLAT WASHER	02	
04	0503013357	3/8" SELF-ADJUSTING NUT	02	
05	0521062451	LEFT PLATFORM	01	
06	0521062450	RIGHT PLATFORM	01	
07	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	04	
08	0503011336	1/2" HEX SELF ADJUSTING NUT	04	
09	0503011333	COVER FIXER	02	
10	0503010274	5/32"X 2" COTTERPIN	02	
11	0521061861	PLATFORM FIXER	02	
12	0521062061	CENTRAL ARTICULACION	01	
13	0521062062	CENTRAL ARTICULACION	01	
14	0503010849	3/8" X 1-1/2" BOLT	08	
15	0501010984	FLAT WASHER	16	
16	0503010025	3/8" SPRING WASHER	08	
17	0503010026	3/8" NUT	08	
18	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
19	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
20	0503010019	1/2" SPRING WASHER	04	
21	0503010060	1/2" NUT	04	
22	0503010395	1/2" X 1-1/4" BOLT	04	

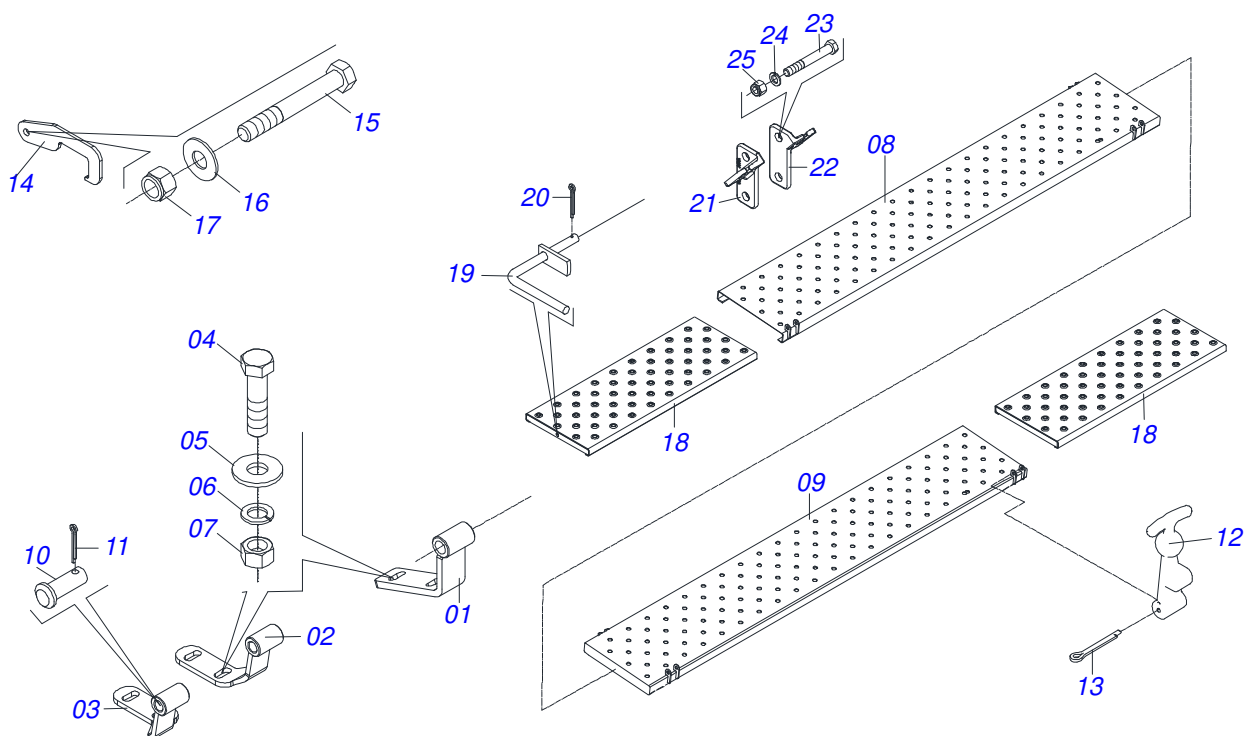


Item	Code	Description	See page	QT
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0521062091	PLATFORM LEFT COP FLEX 13	01	
09	0521062092	PLATFORM RIGHT	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

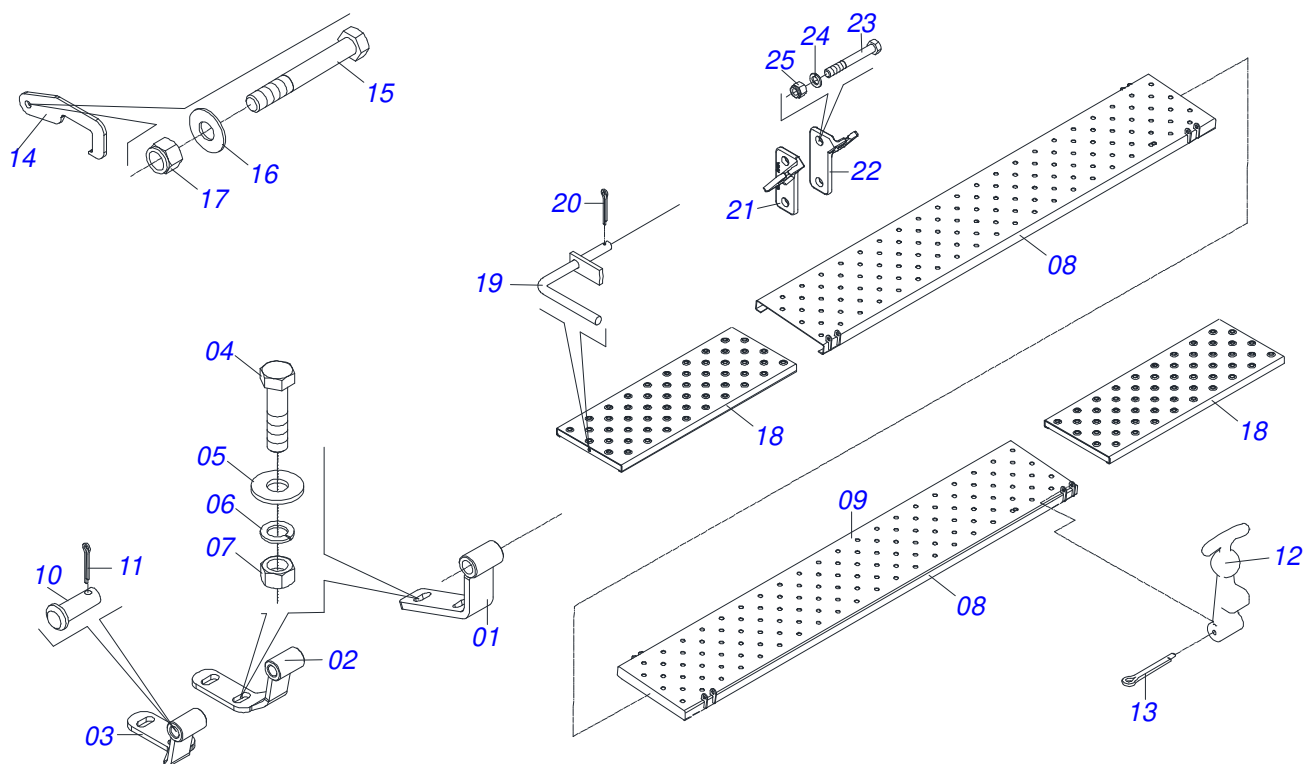


Item	Code	Description	See page	QT
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0521062059	LEFT PLATFORM COP FLEX 15	01	
09	0521062058	RIGHT PLATFORM COP FLEX 15	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

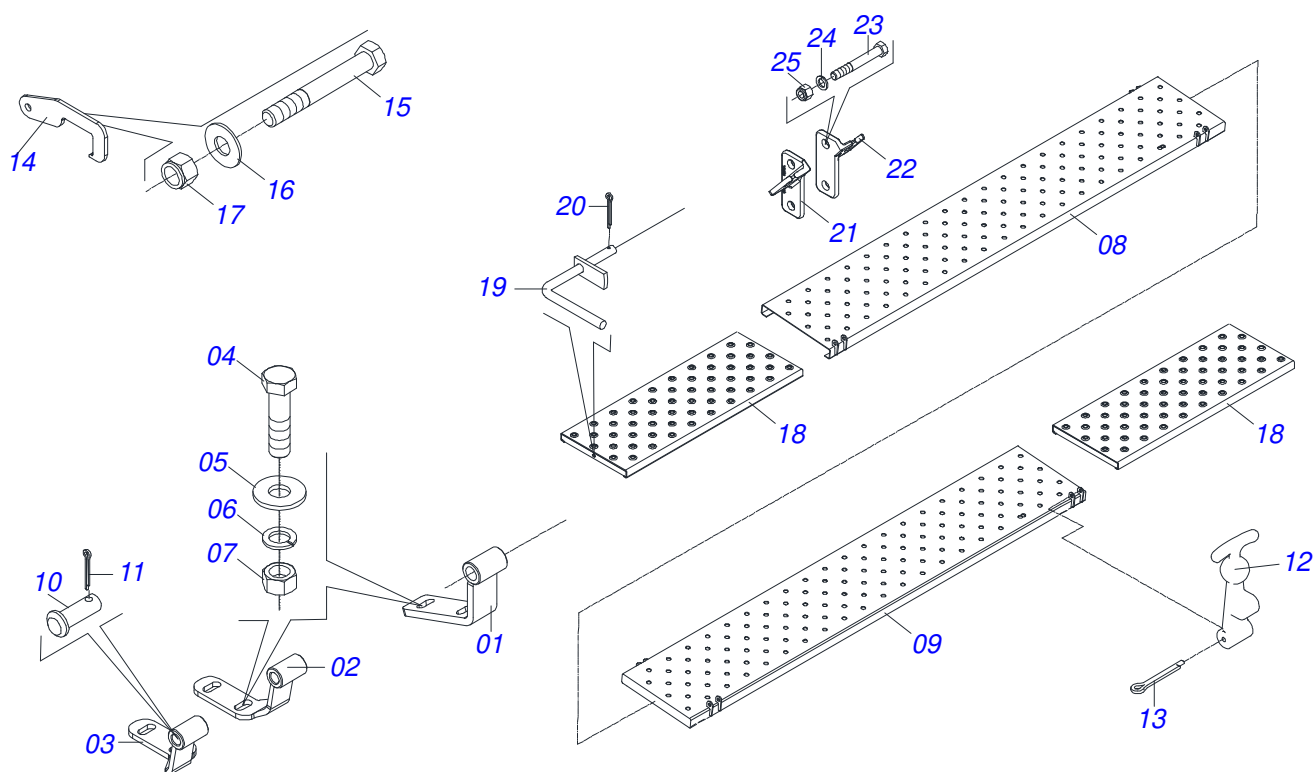


Item	Code	Description	See page	QT
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0521062089	LEFT PLATFORM	01	
09	0521062087	RIGHT PLATFORM	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

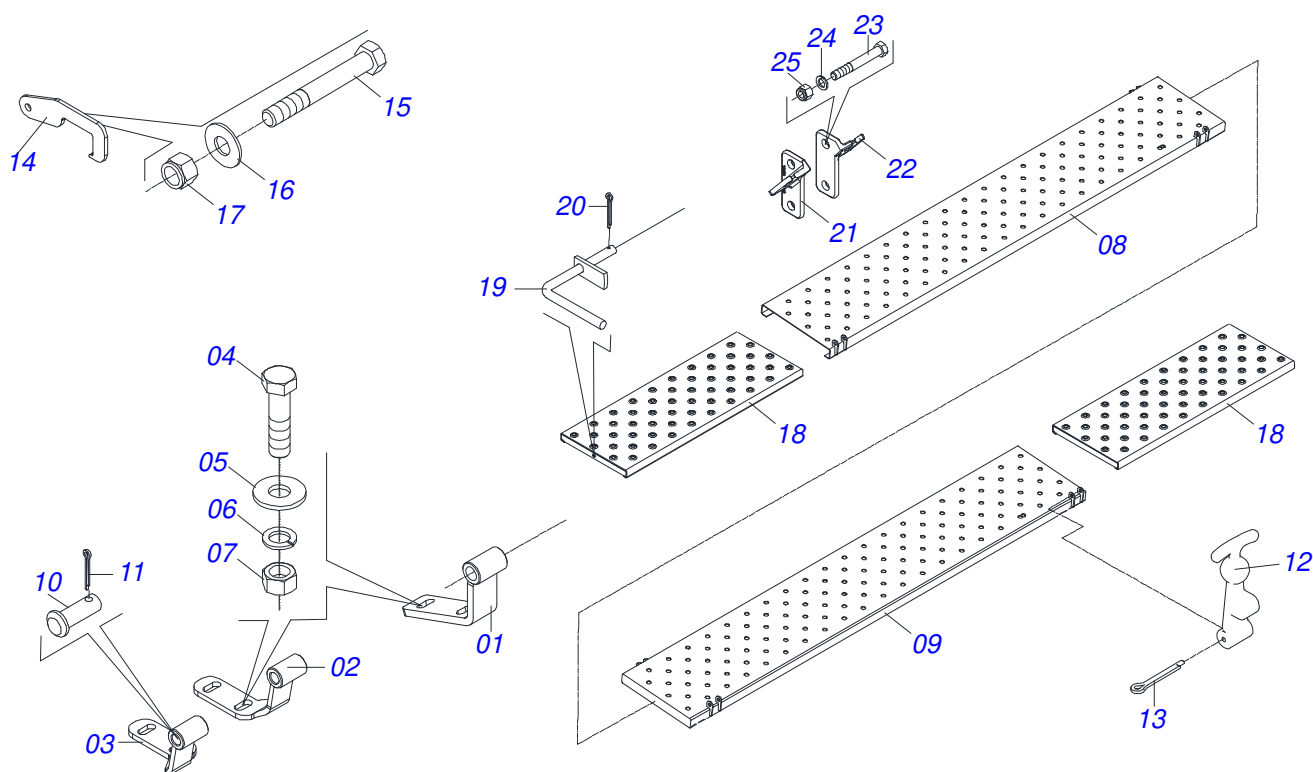


Item	Code	Description	See page	QT
01	0521061861	PLATFORM FIXER	02	
02	0521062061	CENTRAL ARTICULACION	01	
03	0521062062	CENTRAL ARTICULACION	01	
04	0503010849	3/8" X 1-1/2" BOLT	08	
05	0501010984	FLAT WASHER	16	
06	0503010025	3/8" SPRING WASHER	08	
07	0503010026	3/8" NUT	08	
08	0521062090	LEFT PLATFORM	01	
09	0521062088	RIGHT PLATFORM	01	
10	0521010549	COUPLING SHAFT	04	
11	0503010300	5/32" X 1" COTTERPIN	04	
12	0503011333	COVER FIXER	02	
13	0503010274	5/32"X 2" COTTERPIN	02	
14	0551019115	LOCKING PLATFORM FIXATION	02	
15	0501010096	3/8" X 2" BOLT	02	
16	0501010984	FLAT WASHER	02	
17	0503013357	3/8" SELF-ADJUSTING NUT	02	
18	0521061676	PLATFORM PROLONG	02	
19	0511069664	PLATFORM EXTENSION LOCK	02	
20	0503010257	1/8" X 1" COTTERPIN	02	
21	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
22	0502012739	PLATFORM LEFT FIXER SUPPORT	01	
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
24	0503010019	1/2" SPRING WASHER	04	
25	0503010060	1/2" NUT	04	

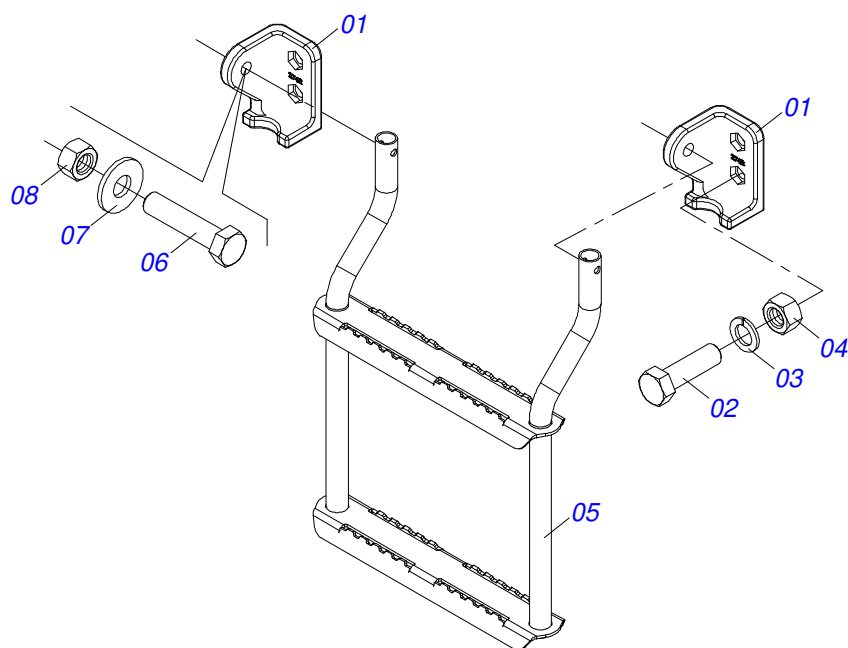


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER		04
02	0503010237	3/8" X 1" BOLT		08
03	0503010025	3/8" SPRING WASHER		08
04	0503010026	3/8" NUT		08
05	0511069636	LADDER		02
06	0503011179	3/8" X 2-1/4" BOLT		04
07	0501010984	FLAT WASHER		04
08	0503013357	3/8" SELF-ADJUSTING NUT		04

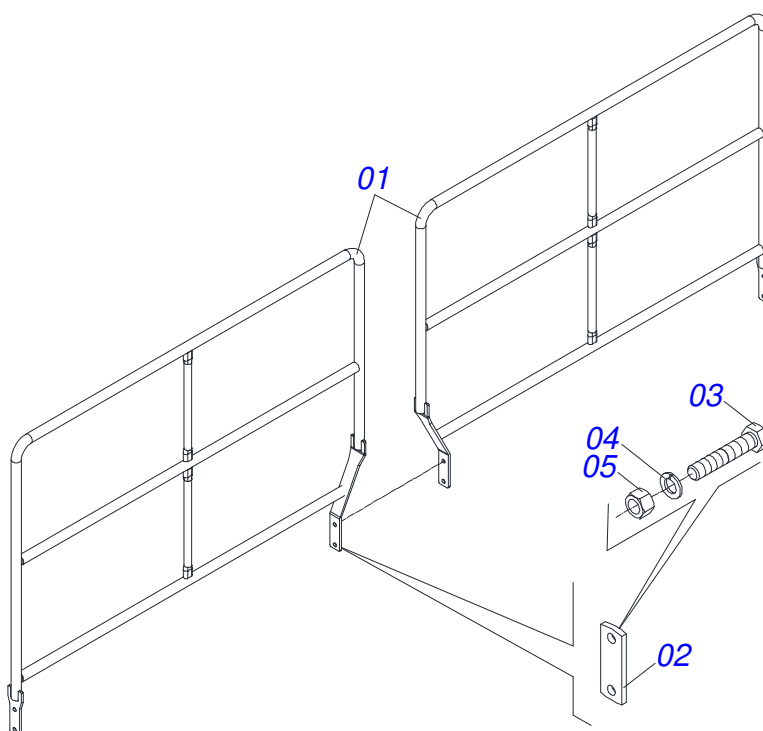


Item	Code	Description	See page	QT
01	0511069656	HANDRAIL		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

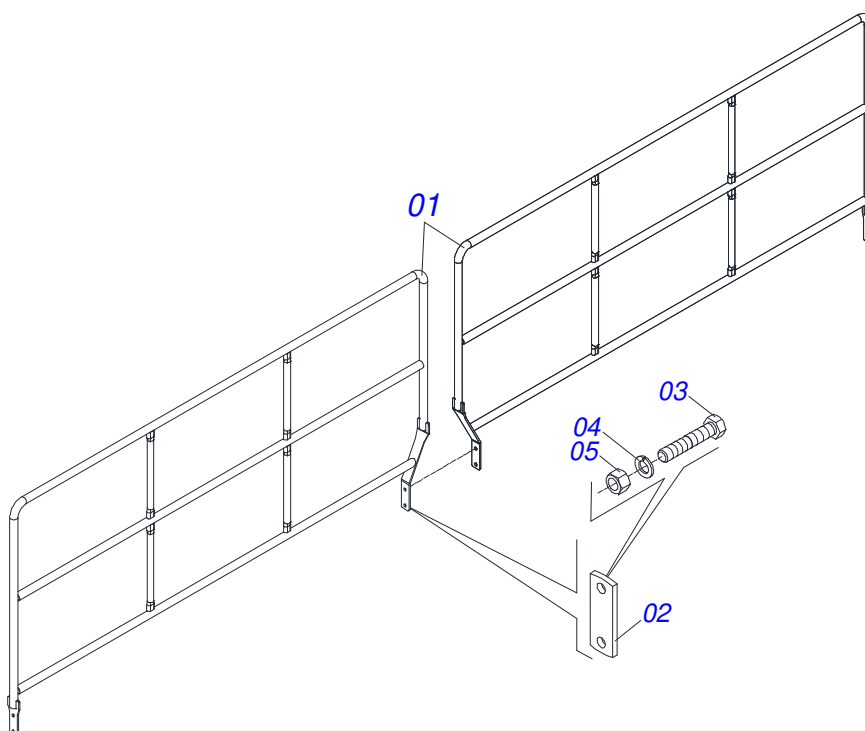


Item	Code	Description	See page	QT
01	0521063948	JOINT HANDRAIL SET		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

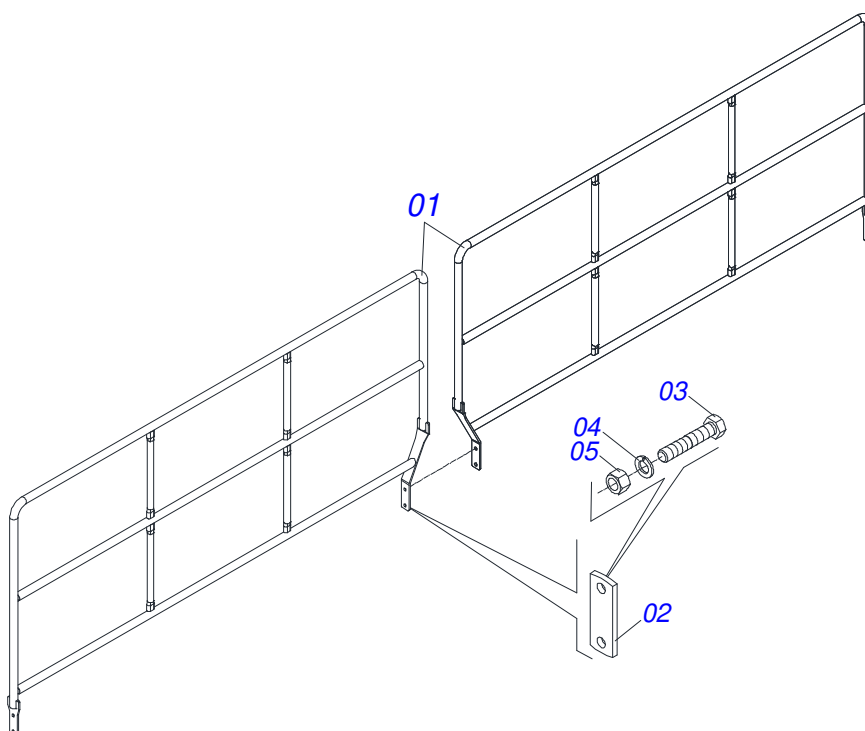


Item	Code	Description	See page	QT
01	0511069660	HANDRAIL		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

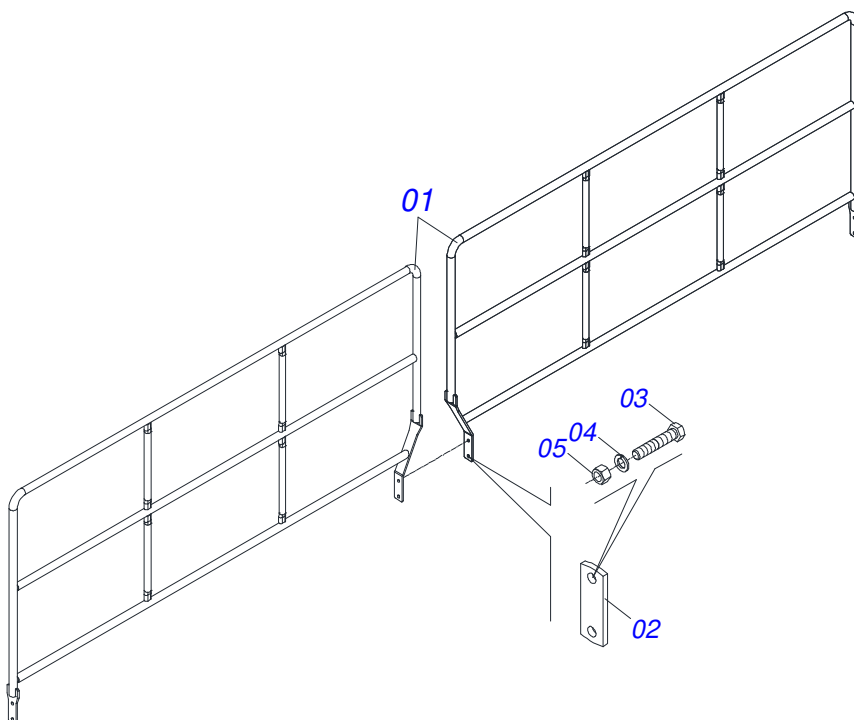


Item	Code	Description	See page	QT
01	0521062449	HANDRAIL		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

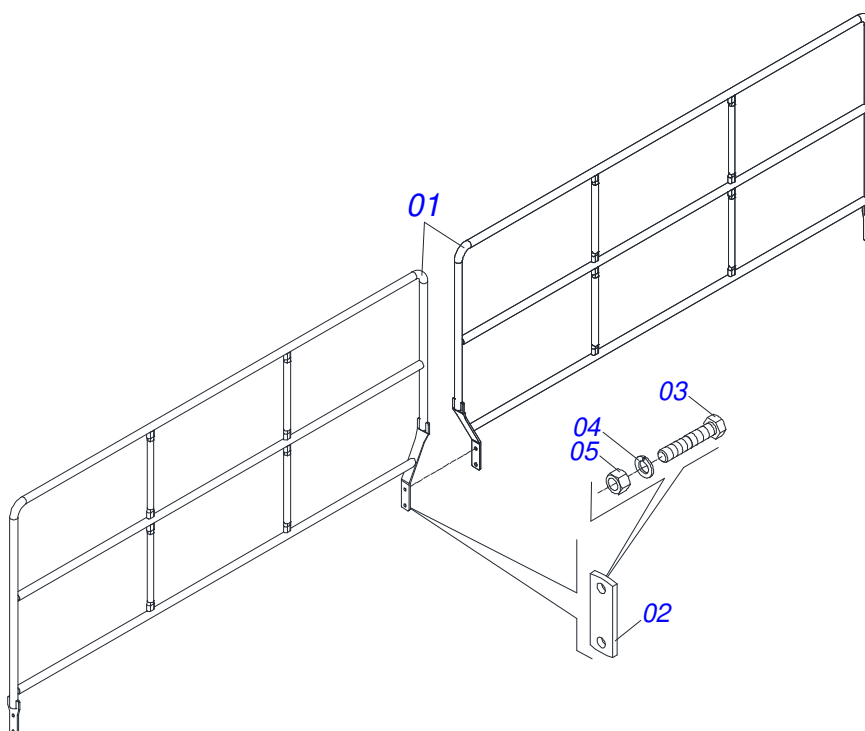


Item	Code	Description	See page	QT
01	0521061171	HANDRAIL		02
02	0521018290	RANDRAIL HOLDER		02
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2" NUT		04

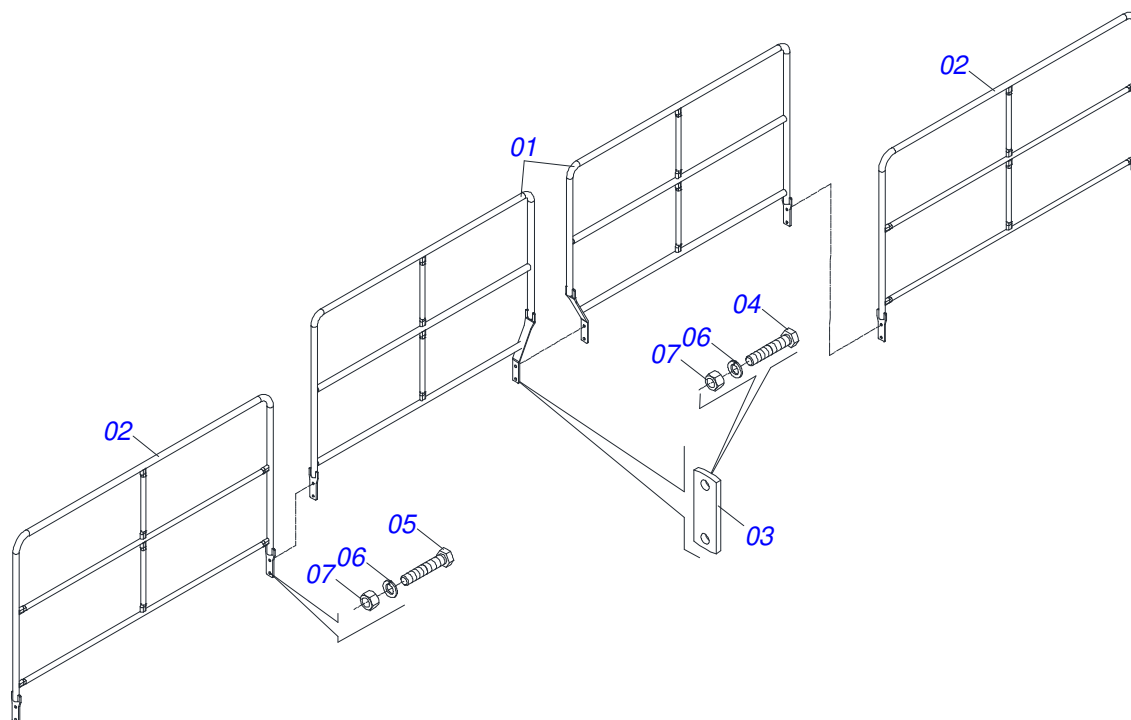


Item	Code	Description	See page	QT
01	0521064080	CENTRAL CHAIN		02
02	0521064079	SIDE HANDRAIL		02
03	0521018290	RANDRAIL HOLDER		06
04	0503010395	1/2" X 1-1/4" BOLT		04
05	0503010734	1/2" X 2-1/2" BOLT		04
06	0503010019	1/2" SPRING WASHER		08
07	0503010060	1/2" NUT		08

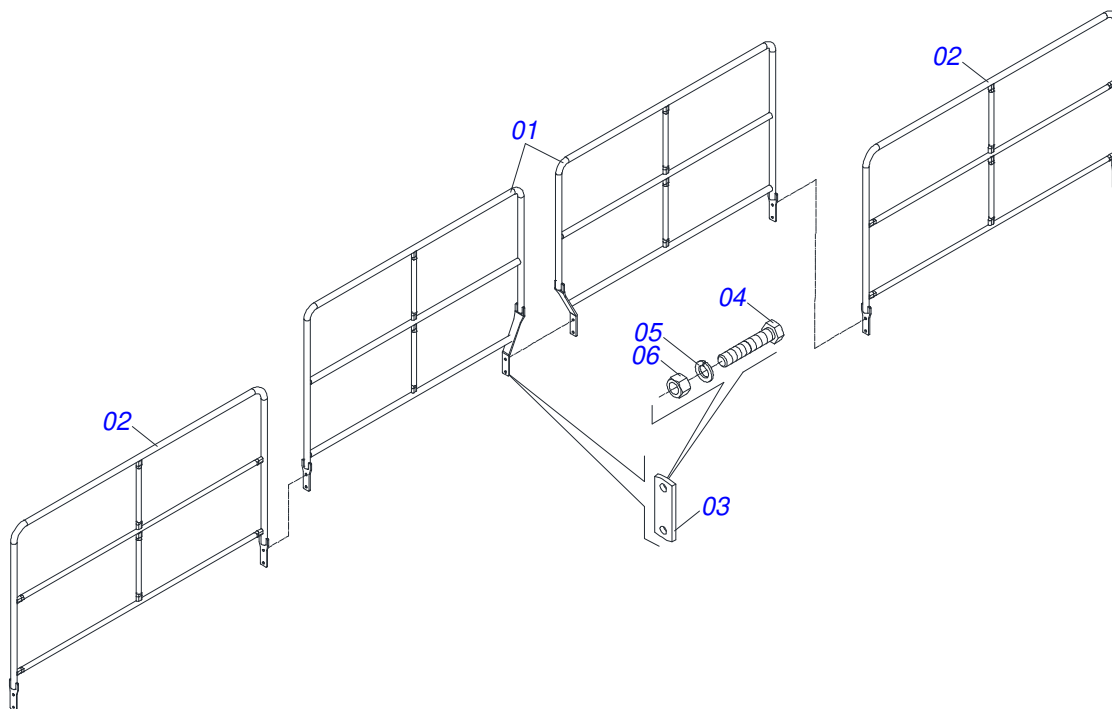

Item	Code	Description	See page	QT
01	0521064080	CENTRAL CHAIN		02
02	0521064101	SIDE CHAIN (1850)		02
03	0521018290	RANDRAIL HOLDER		06
04	0503010395	1/2" X 1-1/4" BOLT		08
05	0503010019	1/2" SPRING WASHER		08
06	0503010060	1/2" NUT		08

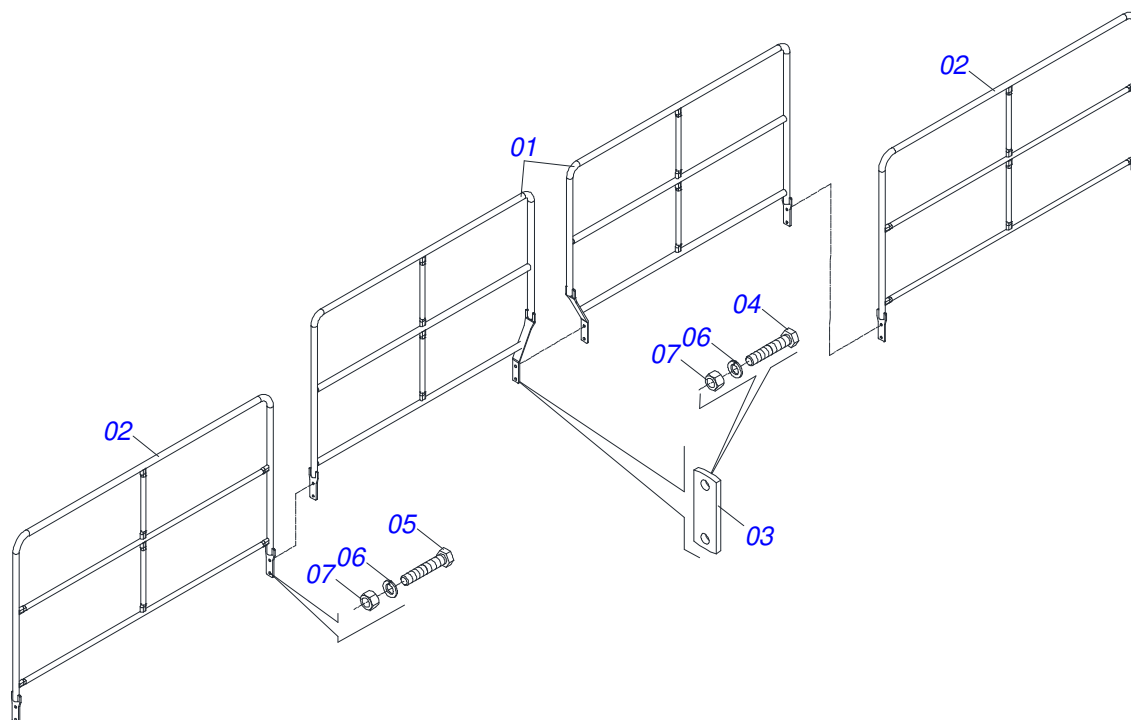


Item	Code	Description	See page	QT
01	0521064080	CENTRAL CHAIN		02
02	0521064100	SIDE CHAIN (2750)		02
03	0521018290	RANDRAIL HOLDER		06
04	0503010395	1/2" X 1-1/4" BOLT		04
05	0503010734	1/2" X 2-1/2" BOLT		04
06	0503010019	1/2" SPRING WASHER		08
07	0503010060	1/2" NUT		08

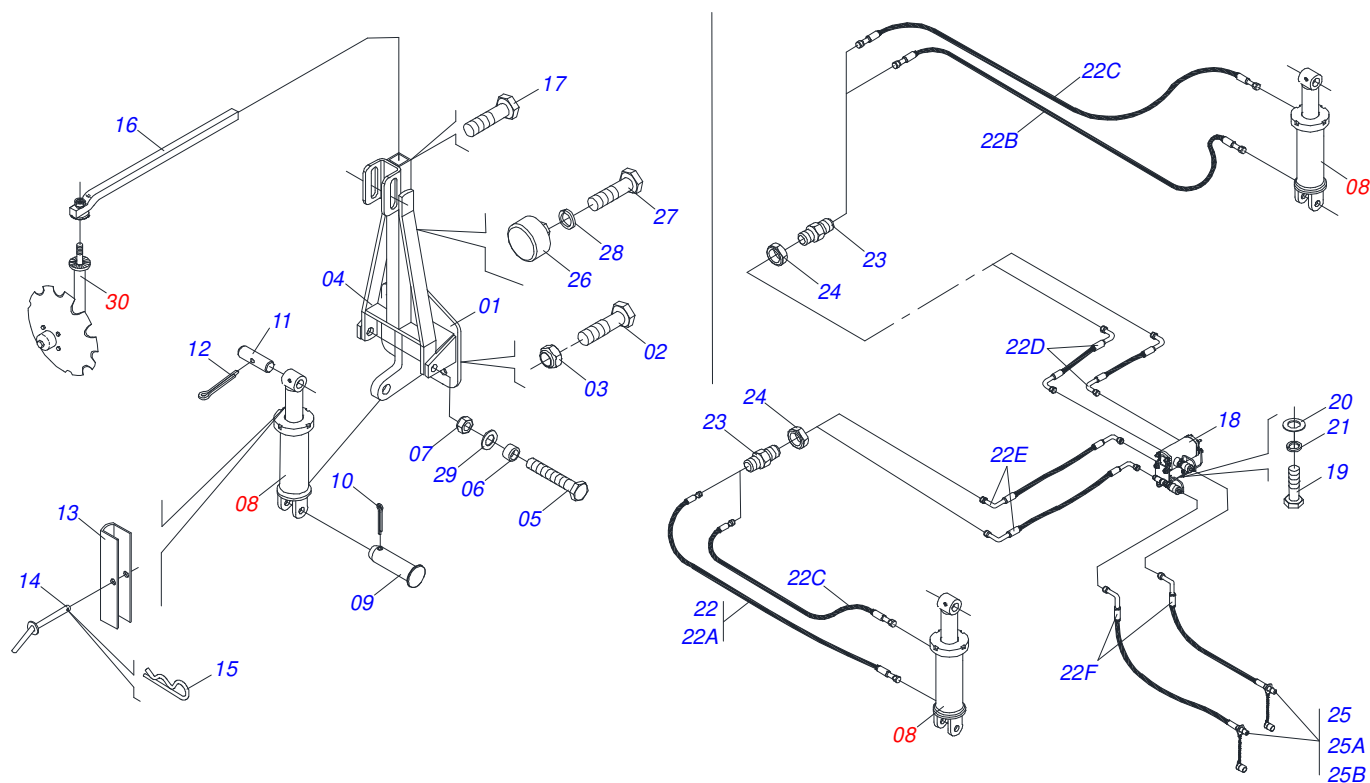


Item	Code	Description	See page	QT
01	0511065449	ROW MARKER ARM SUPPORT		02
02	0501018059	3/4" X 2-1/4" BOLT		08
03	0503011255	3/4" LOCK NUT		08
04	0501069470	ROW MARKER ARM		02
05	0503011067	5/8" X 2-1/2" BOLT		04
06	0521010479	SLEEVE ARTICULATION		04
07	0503012795	5/8" HEX SELF ADJUSTING NUT		04
08	0511058449	HYDRAULIC CYLINDER		02
09	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
10	0503010571	1/4" X 1.1/2 COTTERPIN		02
11	0511015779	1" X 4.2" AXLE		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
14	0501068994	0.3" X 3.1" LOCK PIN		02
15	0503030168	CUPILLA		02
16	0501069643	890 TURNBUCKLE		02
17	0503010962	5/8" X 1-1/4" BOLT		04
18	0501054649	HBM SEQUENTIAL VALVE	46	01
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0501010984	FLAT WASHER		02
21	0503010025	3/8" SPRING WASHER		02
22	0511057082	HOSE KIT SYSTEM HYDRAULIC		01
22A	0501080635	3/8" X 19" TR-TR HOSE		02
22B	0501080124	HOSE 3/8 X 900 TR-TC		04
22C	0501080105	3/8 X 700 TR-TR HOSE		02
22D	0501080675	3/8 X 1000 TC-TC 180G HOSE		02
22E	0501080301	HOSE 3/8 X 1300 TC-TC		02
22F	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
23	0541012165	3/4" NIPPLE		04
24	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		04
25	0501053834	MALE QUICK COUPLER	28	02

Item	Code	Description	See page	QT
25A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
25B	0503011882	MALE QUICK COUPLER CAP		01
26	0503011070	BEATER		02
27	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
28	0503010019	1/2" SPRING WASHER		02
29	0501012140	FLAT WASHER		04
30	0501050633	ROW MARKER DISK ASSEMBLY	100	01

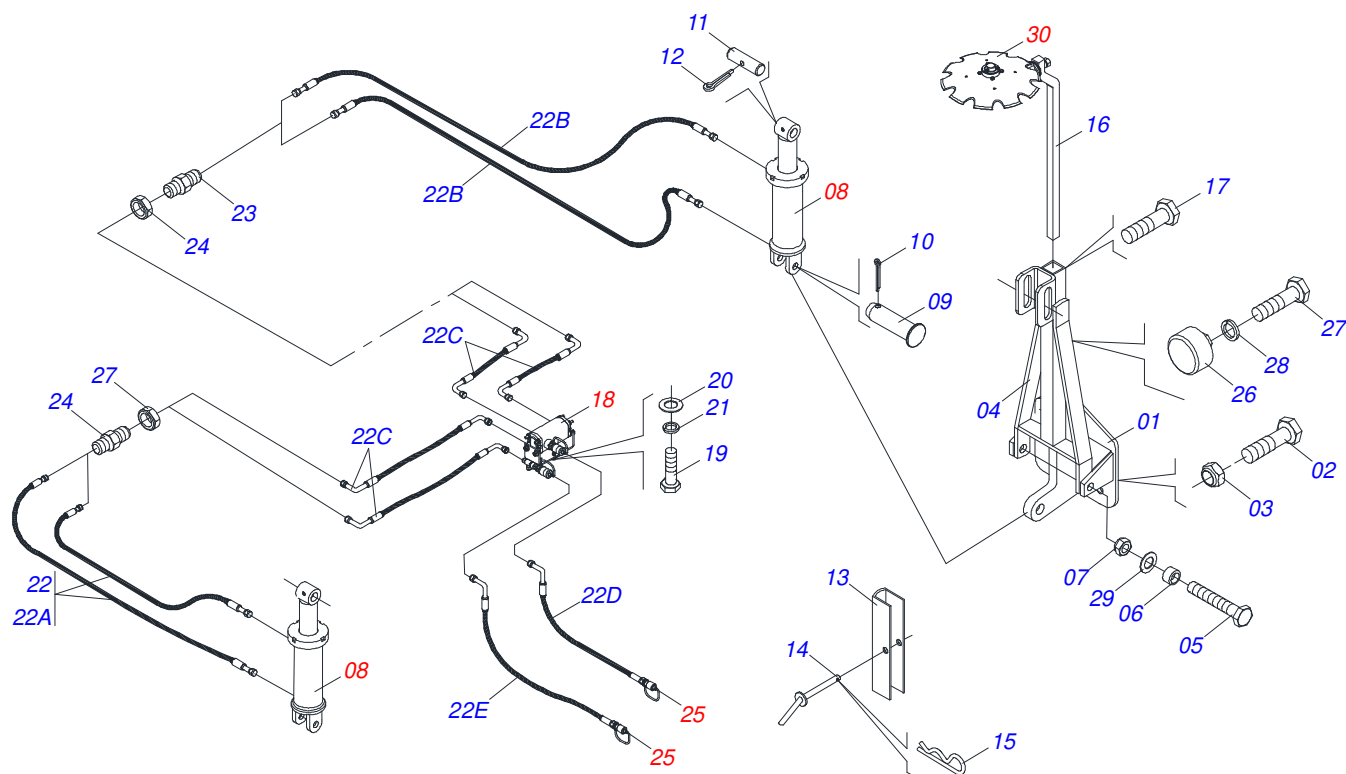


Item	Code	Description	See page	QT
01	0511065449	ROW MARKER ARM SUPPORT		02
02	0501018059	3/4" X 2-1/4" BOLT		08
03	0503011255	3/4" LOCK NUT		08
04	0501069470	ROW MARKER ARM		02
05	0503011067	5/8" X 2-1/2" BOLT		04
06	0521010479	SLEEVE ARTICULATION		04
07	0503012795	5/8" HEX SELF ADJUSTING NUT		04
08	0511058449	HYDRAULIC CYLINDER		02
09	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
10	0503010571	1/4" X 1.1/2 COTTERPIN		02
11	0511015779	1" X 4.2" AXLE		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
14	0501068994	0.3" X 3.1" LOCK PIN		02
15	0503030168	CUPILLA		02
16	0501069643	890 TURNBUCKLE		02
17	0503010962	5/8" X 1-1/4" BOLT		04
18	0501054649	HBM SEQUENTIAL VALVE	46	01
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0501010984	FLAT WASHER		02
21	0503010025	3/8" SPRING WASHER		02
22	0521052279	HYDRAULIC MARKER HOSE SET		01
22A	0501080635	3/8" X 19" TR-TR HOSE		02
22B	0501080105	3/8 X 700 TR-TR HOSE		02
22C	0501080750	3/8" X 149" TC-TC HOSE ASSY		04
22D	0521052277	HOSE 3/8 X 4212 TC-TM PURPLE / RED		01
22E	0521052278	HOSE 3/8 X 4212 TC-TM PURPLE / BLUE		01
23	0541012165	3/4" NIPPLE		04
24	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		04
25	0501053834	MALE QUICK COUPLER	28	02
26	0503011070	BEATER		02

Item	Code	Description	See page	QT
27	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
28	0503010019	1/2" SPRING WASHER		02
29	0501012140	FLAT WASHER		04
30	0501050633	ROW MARKER DISK ASSEMBLY	100	01

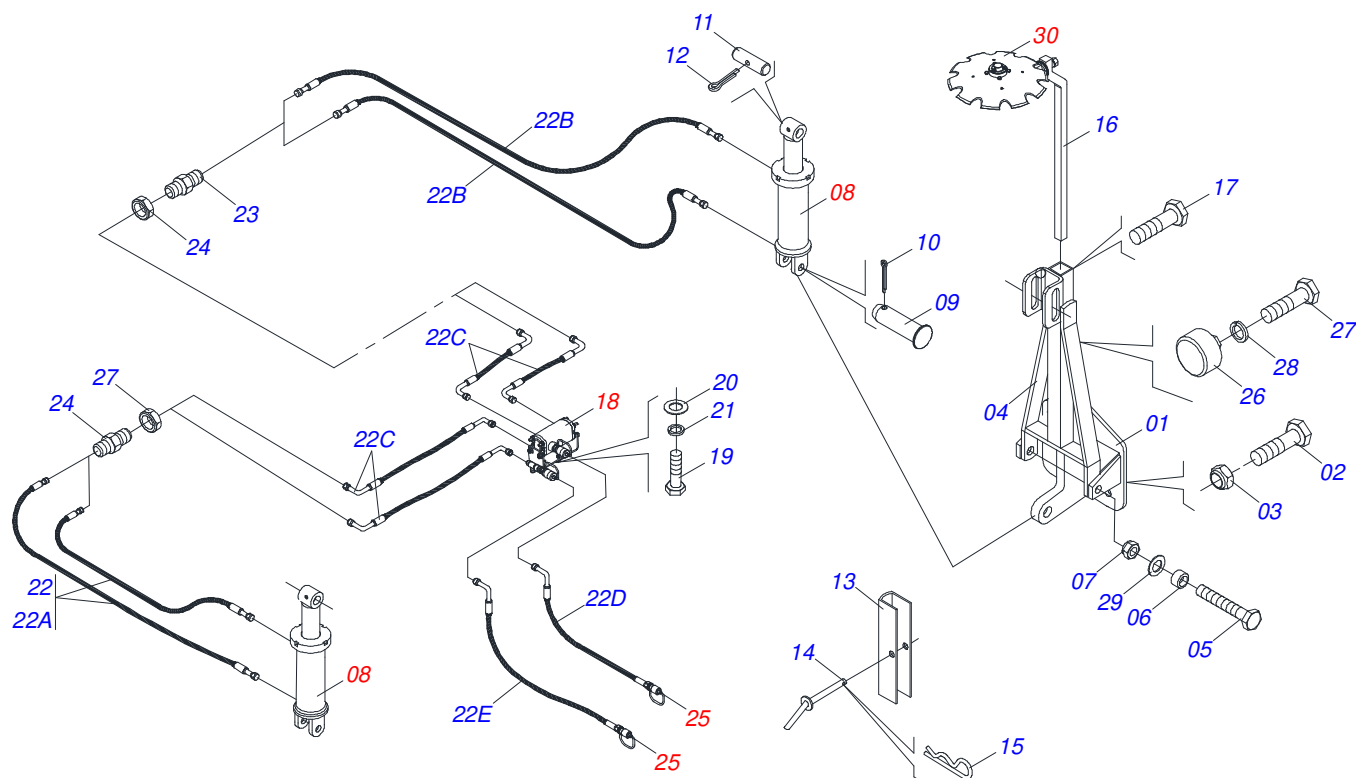


Item	Code	Description	See page	QT
01	0511065449	ROW MARKER ARM SUPPORT		02
02	0501010098	3/4" UNC BOLT		08
03	0503011255	3/4" LOCK NUT		08
04	0501069470	ROW MARKER ARM		02
05	0503011067	5/8" X 2-1/2" BOLT		04
06	0521010479	SLEEVE ARTICULATION		04
07	0503012795	5/8" HEX SELF ADJUSTING NUT		04
08	0511058449	HYDRAULIC CYLINDER		02
09	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
10	0503010571	1/4" X 1.1/2 COTTERPIN		02
11	0511015779	1" X 4.2" AXLE		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
14	0501068994	0.3" X 3.1" LOCK PIN		02
15	0503030168	CUPILLA		02
16	0501069643	890 TURNBUCKLE		02
17	0503010962	5/8" X 1-1/4" BOLT		04
18	0501054649	HBM SEQUENTIAL VALVE	46	01
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0501010984	FLAT WASHER		02
21	0503010025	3/8" SPRING WASHER		02
22	0511057082	HOSE KIT SYSTEM HYDRAULIC		01
22A	0501080635	3/8" X 19" TR-TR HOSE		02
22B	0501080124	HOSE 3/8 X 900 TR-TC		04
22C	0501080105	3/8 X 700 TR-TR HOSE		02
22D	0501080675	3/8 X 1000 TC-TC 180G HOSE		02
22E	0501080301	HOSE 3/8 X 1300 TC-TC		02
22F	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
23	0541012165	3/4" NIPPLE		04
24	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		04
25	0501053834	MALE QUICK COUPLER	28	02

Item	Code	Description	See page	QT
26	0503011070	BEATER		02
27	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
28	0503010019	1/2" SPRING WASHER		02
29	0501012140	FLAT WASHER		04
30	0501050633	ROW MARKER DISK ASSEMBLY	100	01

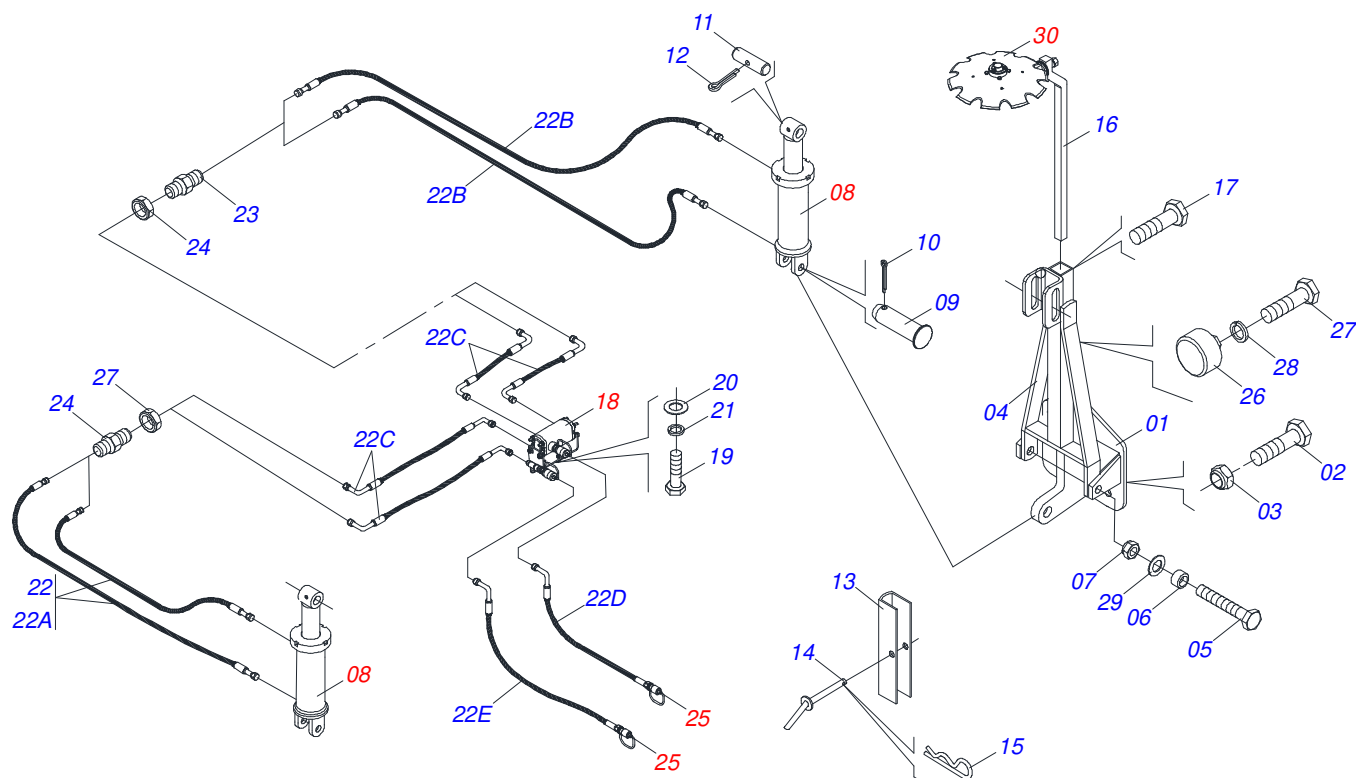


Item	Code	Description	See page	QT
01	0511065449	ROW MARKER ARM SUPPORT		02
02	0501010098	3/4" UNC BOLT		08
03	0503011255	3/4" LOCK NUT		08
04	0511061811	ROW MARKER ARM		02
05	0503011067	5/8" X 2-1/2" BOLT		04
06	0521010479	SLEEVE ARTICULATION		04
07	0503012795	5/8" HEX SELF ADJUSTING NUT		04
08	0511058449	HYDRAULIC CYLINDER		02
09	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
10	0503010571	1/4" X 1.1/2 COTTERPIN		02
11	0511015779	1" X 4.2" AXLE		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
14	0501068994	0.3" X 3.1" LOCK PIN		02
15	0503030168	CUPILLA		02
16	0501066949	1235 TURNBUCKLE		02
17	0503010962	5/8" X 1-1/4" BOLT		04
18	0501054649	HBM SEQUENTIAL VALVE	46	01
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0501010984	FLAT WASHER		02
21	0503010025	3/8" SPRING WASHER		02
22	0511057082	HOSE KIT SYSTEM HYDRAULIC		01
22A	0501080635	3/8" X 19" TR-TR HOSE		02
22B	0501080124	HOSE 3/8 X 900 TR-TC		04
22C	0501080105	3/8 X 700 TR-TR HOSE		02
22D	0501080675	3/8 X 1000 TC-TC 180G HOSE		02
22E	0501080301	HOSE 3/8 X 1300 TC-TC		02
22F	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
23	0541012165	3/4" NIPPLE		04
24	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		04
25	0501053834	MALE QUICK COUPLER	28	02

Item	Code	Description	See page	QT
26	0503011070	BEATER		02
27	0503010019	1/2" SPRING WASHER		02
28	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
29	0501012140	FLAT WASHER		04
30	0501050633	ROW MARKER DISK ASSEMBLY	100	01

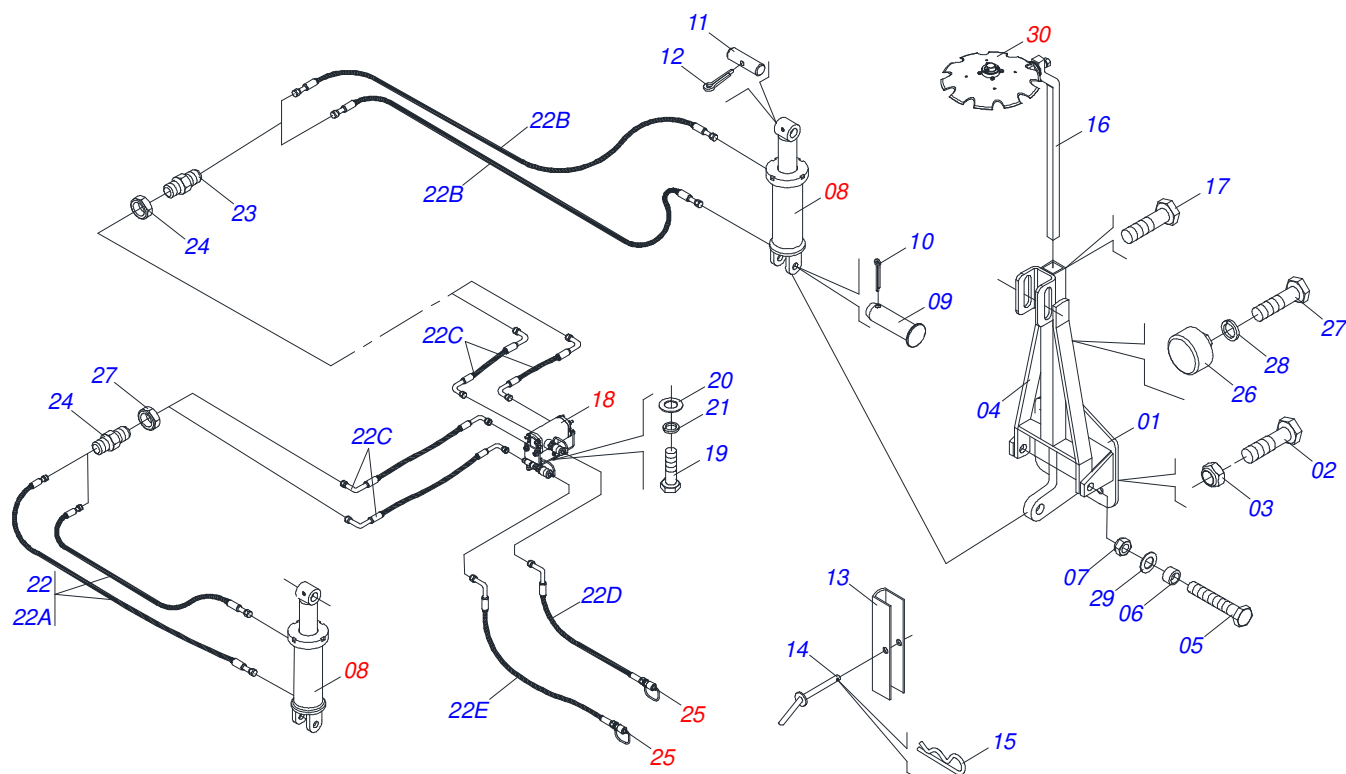


Item	Code	Description	See page	QT
01	0511065449	ROW MARKER ARM SUPPORT		02
02	0501010098	3/4" UNC BOLT		08
03	0503011255	3/4" LOCK NUT		08
04	0511061811	ROW MARKER ARM		02
05	0503011067	5/8" X 2-1/2" BOLT		04
06	0521010479	SLEEVE ARTICULATION		04
07	0503012795	5/8" HEX SELF ADJUSTING NUT		04
08	0511058449	HYDRAULIC CYLINDER		02
09	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
10	0503010571	1/4" X 1.1/2 COTTERPIN		02
11	0511015779	1" X 4.2" AXLE		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
14	0501068994	0.3" X 3.1" LOCK PIN		02
15	0503030168	CUPILLA		02
16	0501066949	1235 TURNBUCKLE		02
17	0503010962	5/8" X 1-1/4" BOLT		04
18	0501054649	HBM SEQUENTIAL VALVE	46	01
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0501010984	FLAT WASHER		02
21	0503010025	3/8" SPRING WASHER		02
22	0511057082	HOSE KIT SYSTEM HYDRAULIC		01
22A	0501080635	3/8" X 19" TR-TR HOSE		02
22B	0501080124	HOSE 3/8 X 900 TR-TC		04
22C	0501080105	3/8 X 700 TR-TR HOSE		02
22D	0501080675	3/8 X 1000 TC-TC 180G HOSE		02
22E	0501080301	HOSE 3/8 X 1300 TC-TC		02
22F	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
23	0541012165	3/4" NIPPLE		04
24	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		04
25	0501053834	MALE QUICK COUPLER	28	02

Item	Code	Description	See page	QT
26	0503011070	BEATER		02
27	0503010019	1/2" SPRING WASHER		02
28	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
29	0501012140	FLAT WASHER		04
30	0501050633	ROW MARKER DISK ASSEMBLY	100	02

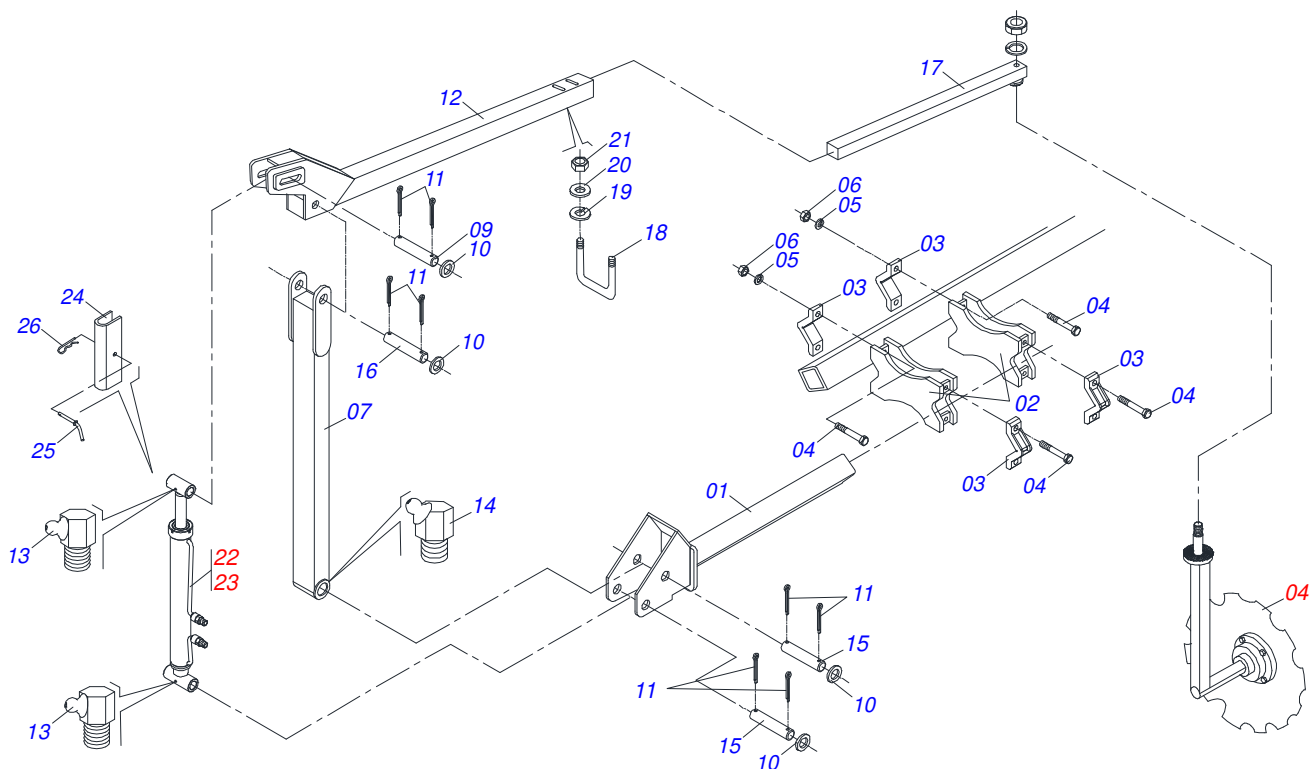

Item	Code	Description	See page	QT
01	0511061022	ROW MARKER SUPPORT		02
02	0511066119	MARKER SUPP FIXER FASTENER		04
03	0502010175	HITCH CLAMP		08
04	0501010216	3/4" X 4-1/2" BOLT		16
05	0503010023	3/4" SPRING WASHER		16
06	0503010014	3/4" NUT		16
07	0511060013	ROW MARKER ARM		02
08	0501050633	ROW MARKER DISK ASSEMBLY	100	02
09	0521013347	1.1/4" X 8.4" AXLE		02
10	0501019435	32 X 50 X 1.5 FLAT WASHER		04
11	0503010523	1/4" X 2" COTTERPIN		16
12	0511060014	ROW MARKER ARM		02
13	0503010004	1890 GREASE FITTING		04
14	0503010003	1845 GREASE FITTING		02
15	0521011142	1.1/4" X 7.5" AXLE		04
16	0521011141	1.1/4" X 6.5" AXLE		02
17	0511060010	1400 TURNBUCKLE		02
18	0521012324	1/2" X 3.2" X 2.54" FASTENER		04
19	0511017302	FLAT WASHER		08
20	0503010019	1/2" SPRING WASHER		08
21	0503010060	1/2" NUT		08
22	0501045149	1.5"X2.5"X30"X18"RH HYDRAULICCYLINDER		01
23	0501046485	1.5"X 2.5"X 30"X 18"LEFT HYDRAULIC CYLINDER		01
24	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
25	0501068994	0.3" X 3.1"LOCK PIN		02
26	0503030168	CUPILLA		02

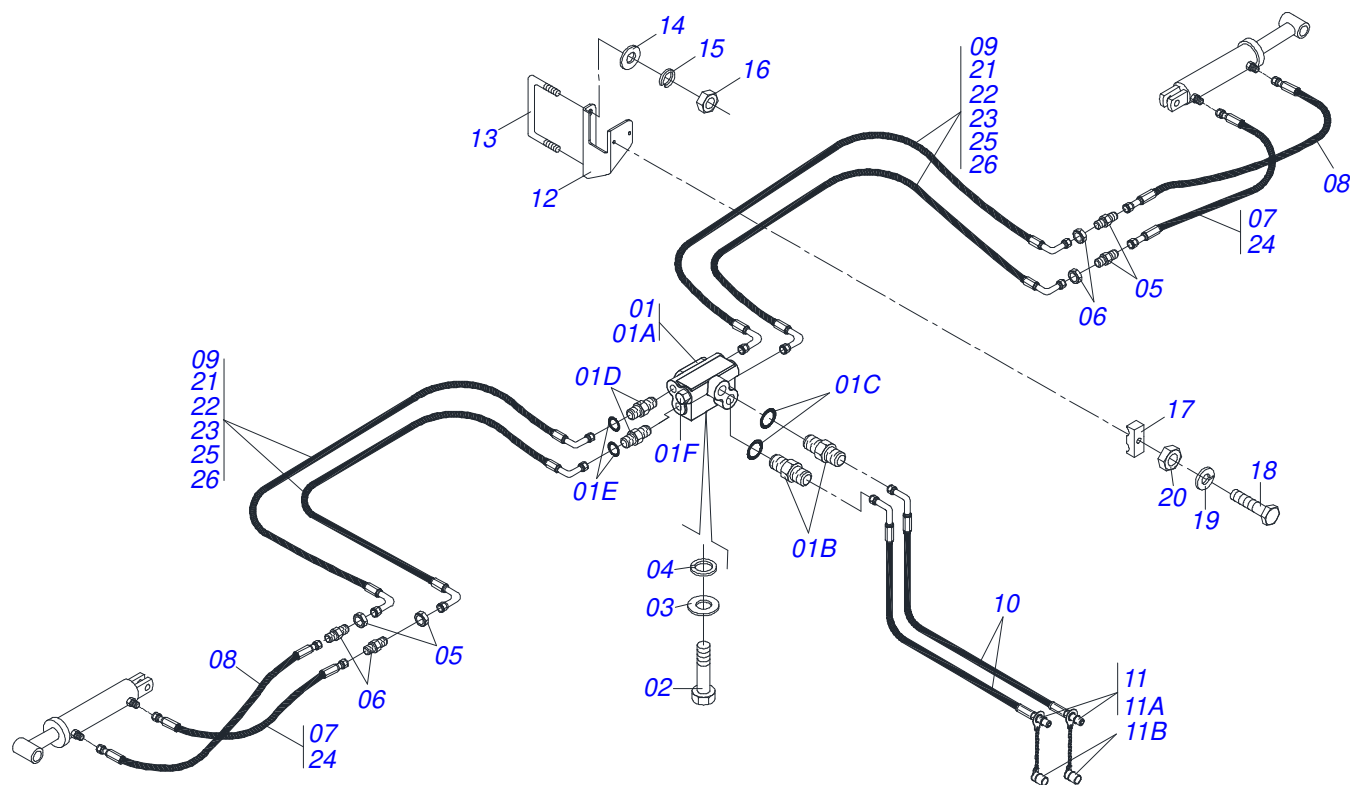


Item	Code	Description	See page	07 09 10 11 13 15 L
01	0501054649	HBM SEQUENTIAL VALVE	46	01 01 01 01 01 01
01A	0503060132	VDFS-002 T SEQUENCCEL VALVE		01 01 01 01 01 01
01B	0501010617	3/4" NIPPLE		02 02 02 02 02 02
01C	0503010190	2-114 N 3006-9B O'RING		02 02 02 02 02 02
01D	0501012109	3/4" X 9/16" NIPPLE		04 04 04 04 04 04
01E	0503011036	2-111 N 3006-9B O'RING		06 06 06 06 06 06
01F	0531019339	9/16" UNF X 12 PUMP		02 02 02 02 02 02
02	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02 02 02 02 02 02
03	0501010984	FLAT WASHER		02 02 02 02 02 02
04	0503010025	3/8" SPRING WASHER		02 02 02 02 02 02
05	0541012165	3/4" NIPPLE		04 04 04 04 04 04
06	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		04 04 04 04 04 04
07	0501080635	3/8" X 19" TR-TR HOSE		02 02 02 02 02 02
08	0501080105	3/8 X 700 TR-TR HOSE		02 02 02 02 02 02
09	0501080750	3/8" X 149" TC-TC HOSE ASSY		00 04 00 00 00 00
10	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02 02 02 02 02 02
11	0501053834	MALE QUICK COUPLER	28	02 02 02 02 02 02
11A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		02 02 02 02 02 02
11B	0503011882	MALE QUICK COUPLER CAP		02 02 02 02 02 02
12	0561017277	OIL CONDUCTOR FIXER PLATE		02 02 02 02 02 02
13	0521010718	5/8" U BOLT		02 02 02 02 02 02
14	0501012140	FLAT WASHER		04 04 04 04 04 04
15	0503010027	5/8" SPRING WASHER		04 04 04 04 04 04
16	0503010013	5/8" NUT		04 04 04 04 04 04
17	0502012702	BODY SUPPORT CLAMP		04 04 04 04 04 04
18	0503011103	7/16" X 2-1/2" BOLT		04 04 04 04 04 04
19	0503010180	7/16" SPRING WASHER		04 04 04 04 04 04
20	0503010244	7/16" NUT		04 04 04 04 04 04
21	0501081646	TC-TC HOSE ASSY		04 00 00 00 00 00
22	0501081644	HOSE 3/8 X 3350 TC-TC USAP		00 04 00 00 00 00
23	0501080750	3/8" X 149" TC-TC HOSE ASSY		00 00 04 00 00 00




COP FLEX 600 - FRAME
CIRCUIT MARKER HIDRAULICO

Page 98
0909094617


Item	Code	Description	See page	07	09	10	11	13	15	L
24	0501081639	HOSE		00	00	00	04	00	00	
25	0501080611	3/8" X 17.8" TR-TR HOSE ASSY		00	00	00	00	04	00	
26	0501080753	HOSE 3/8 X 4700 TC-TC		00	00	00	00	00	04	

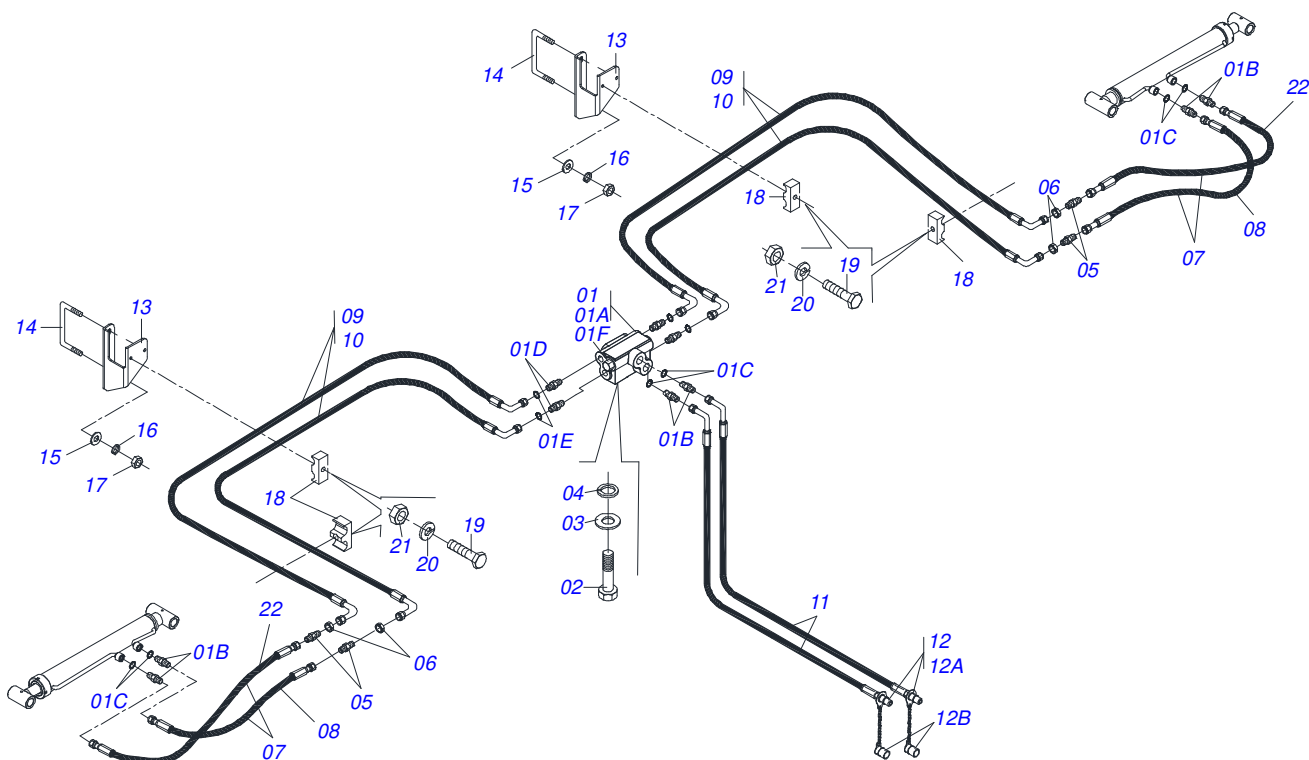


Item	Code	Description	See page	QT
01	0501054649	HBM SEQUENTIAL VALVE	46	01
01A	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
01B	0501010617	3/4" NIPPLE		06
01C	0503010190	2-114 N 3006-9B O'RING		06
01D	0501012109	3/4" X 9/16" NIPPLE		04
01E	0503011036	2-111 N 3006-9B O'RING		06
01F	0531019339	9/16" UNF X 12 PUMP		02
02	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
03	0501010984	FLAT WASHER		02
04	0503010025	3/8" SPRING WASHER		02
05	0541012165	3/4" NIPPLE		04
06	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		04
07	0501080056	3/8" X 1700 TR-TC HOSE ASSY		04
08	0501080025	3/8 X 1400 TR-TC HOSE		02
09	0501081642	HOSE 3/8 X 5600 TC-TC USAP		04
10	0501081653	HOSE 3/8 X 5150 TC-TC USAP		04
11	0501080878	3/8 X 4200 TC-TM HOSE ASSY		02
12	0501053834	MALE QUICK COUPLER	28	02
12A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		02
12B	0503011882	MALE QUICK COUPLER CAP		02
13	0561017277	OIL CONDUCTOR FIXER PLATE		02
14	0521010718	5/8" U BOLT		02
15	0501012140	FLAT WASHER		04
16	0503010027	5/8" SPRING WASHER		04
17	0503010013	5/8" NUT		04
18	0502012702	BODY SUPPORT CLAMP		04
19	0503011103	7/16" X 2-1/2" BOLT		04
20	0503010180	7/16" SPRING WASHER		04
21	0503010244	7/16" NUT		04
22	0501080714	3/8 X 1600 TR-TC HOSE		02

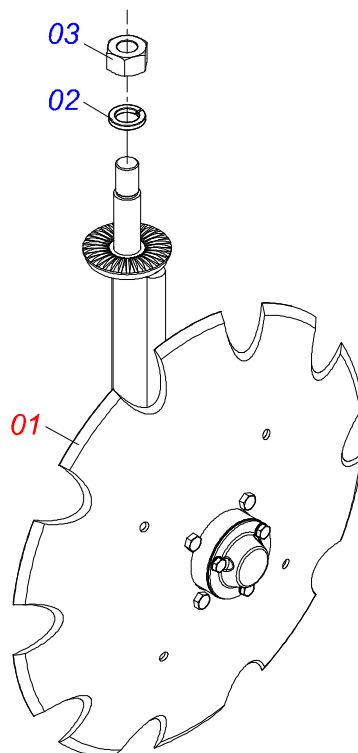


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC	101	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

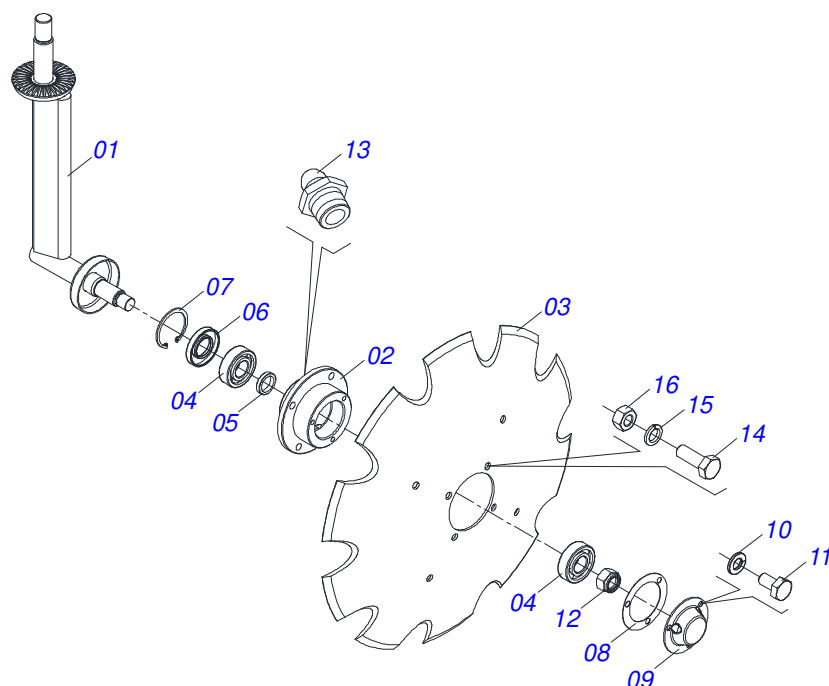


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

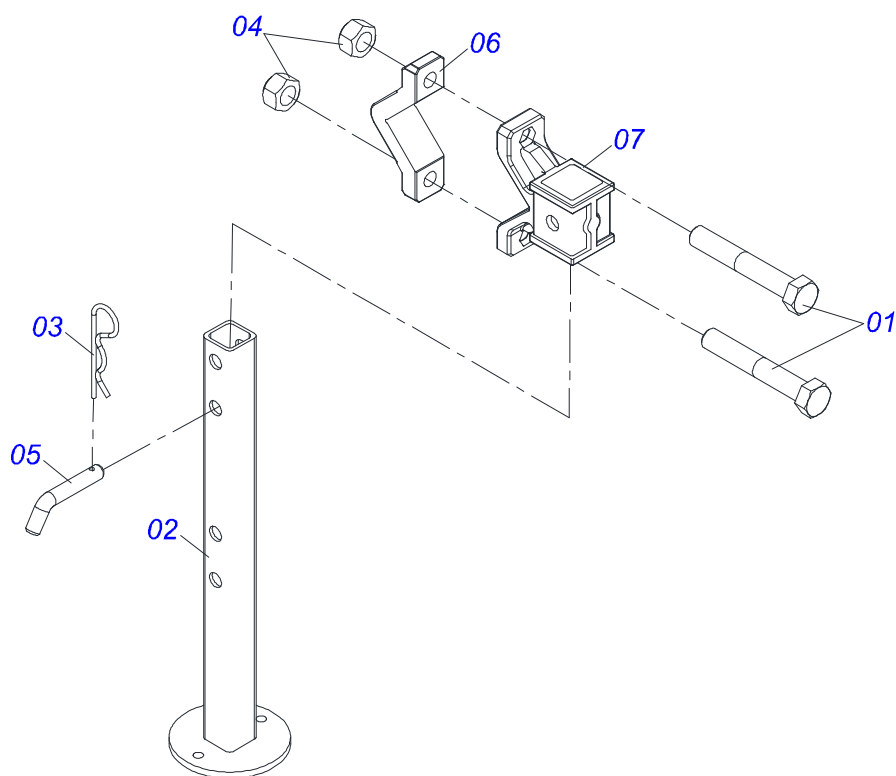


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

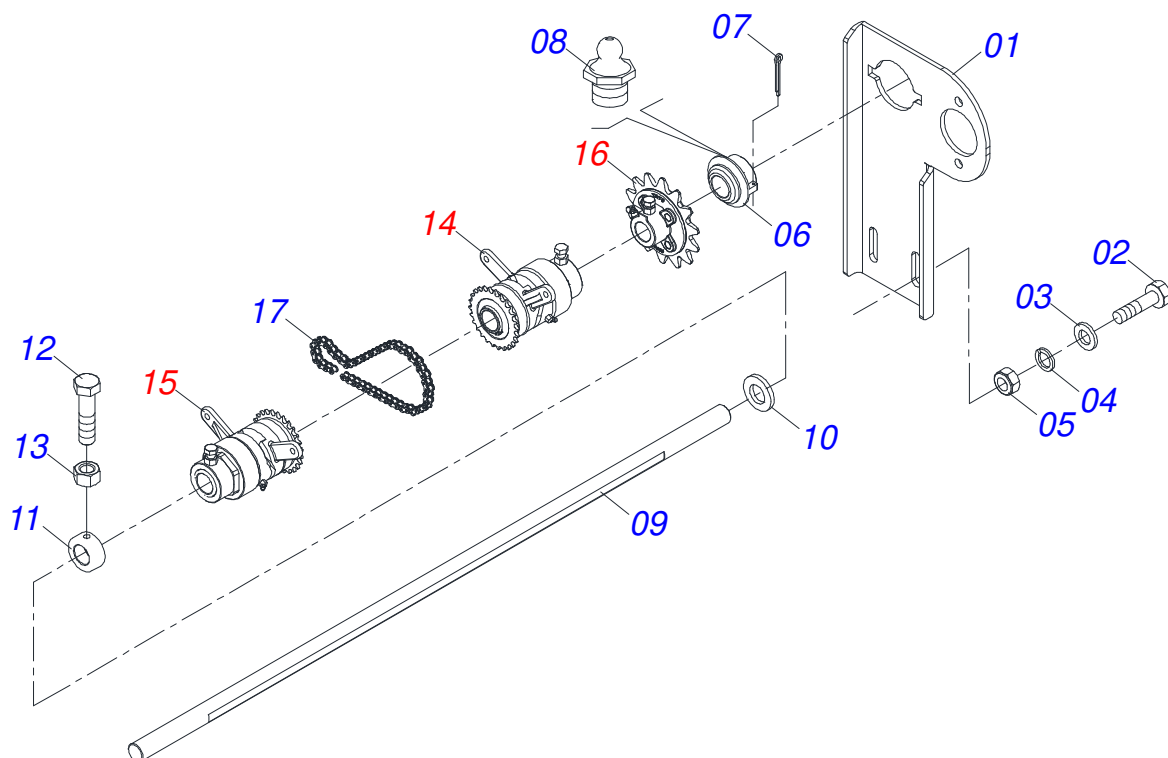


Item	Code	Description	See page	QT
01	0561017269	MOTOR AXLE BEARING SUPPORT		04
02	0503011082	C1/2" X 1.3/4" SCREW		08
03	0511017302	FLAT WASHER		16
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0501110639	BEARING		08
07	0503010300	5/32" X 1" COTTERPIN		08
08	0503011099	GREASE FITTING		08
09	0561016881	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	108	01
15	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	109	01
16	0511051434	TRANSMISSION ACTUATOR	110	04
17	0503012958	2050 CHAIN X 42 LINK + REDUCTION		04

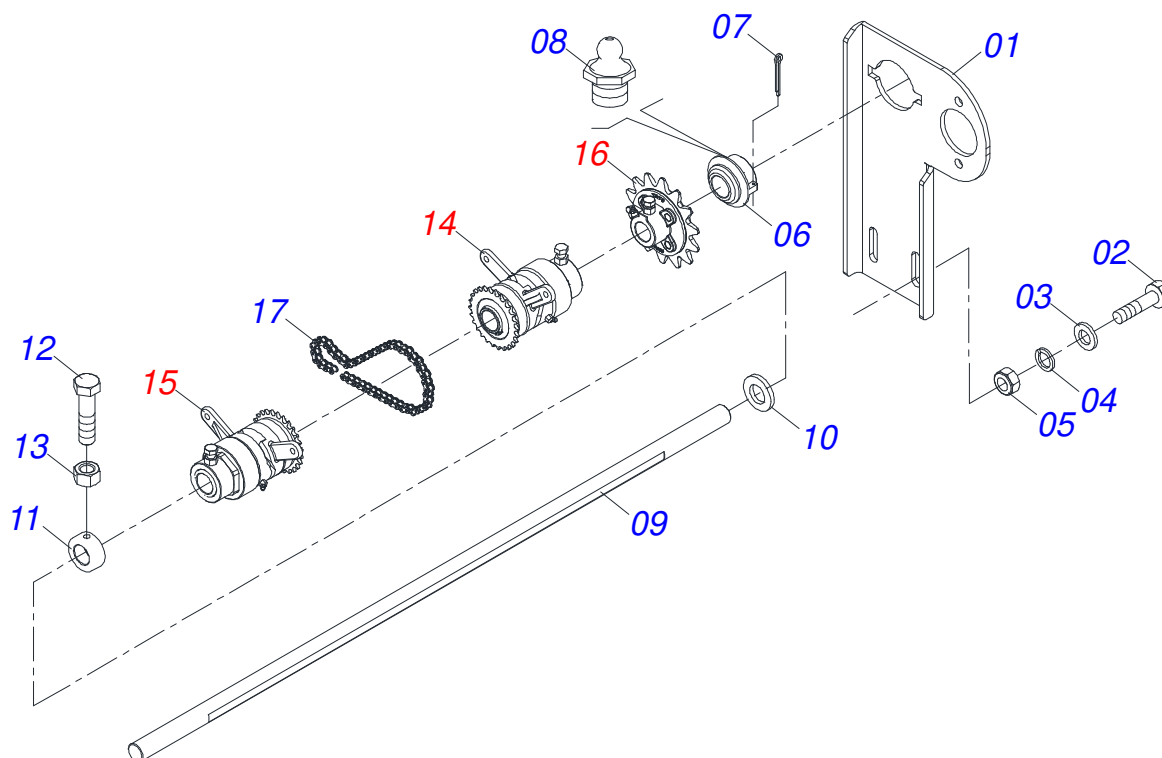


Item	Code	Description	See page	QT
01	0561017269	MOTOR AXLE BEARING SUPPORT		04
02	0503011082	C1/2" X 1.3/4" SCREW		08
03	0511017302	FLAT WASHER		16
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0501110639	BEARING		08
07	0503010300	5/32" X 1" COTTERPIN		08
08	0503011099	GREASE FITTING		08
09	0571013539	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	108	01
15	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	109	01
16	0511051434	TRANSMISSION ACTUATOR	110	04
17	0503012958	2050 CHAIN X 42 LINK + REDUCTION		04

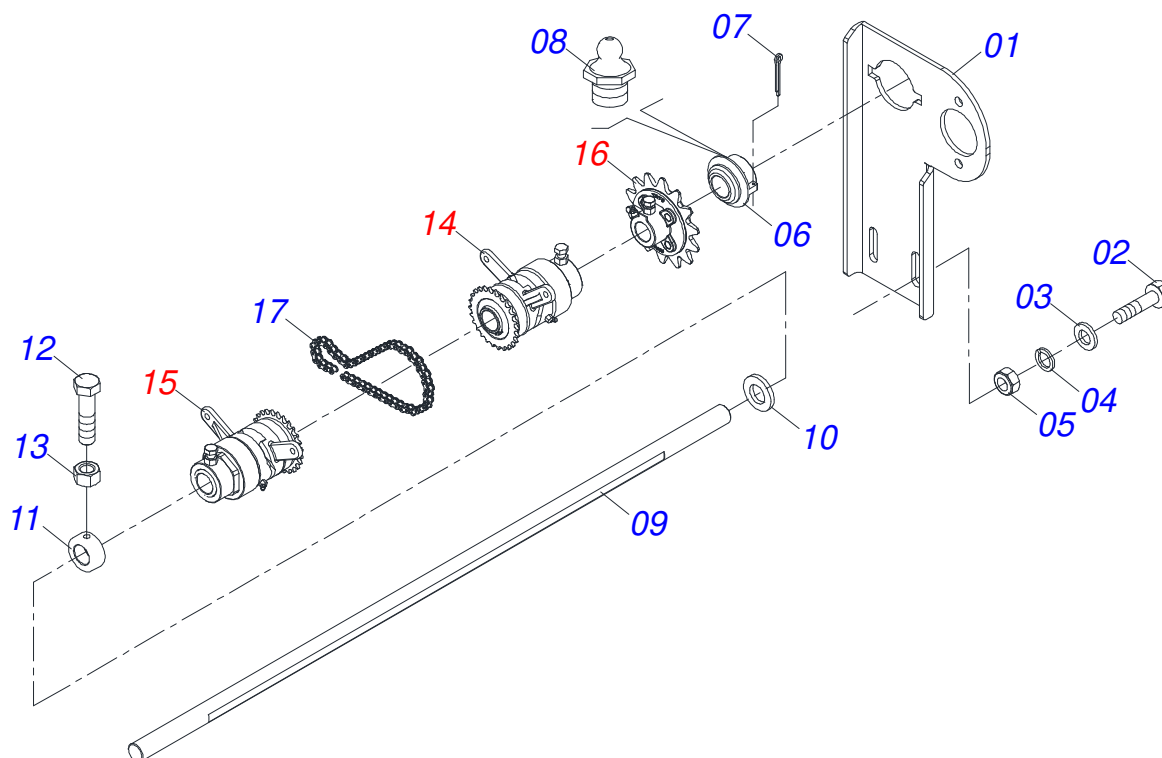


Item	Code	Description	See page	QT
01	0561017269	MOTOR AXLE BEARING SUPPORT		04
02	0503011082	C1/2" X 1.3/4" SCREW		08
03	0511017302	FLAT WASHER		16
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0501110639	BEARING		08
07	0503010300	5/32" X 1" COTTERPIN		08
08	0503011099	GREASE FITTING		08
09	0561016876	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	108	01
15	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	109	01
16	0511051434	TRANSMISSION ACTUATOR	110	04
17	0503012958	2050 CHAIN X 42 LINK + REDUCTION		04

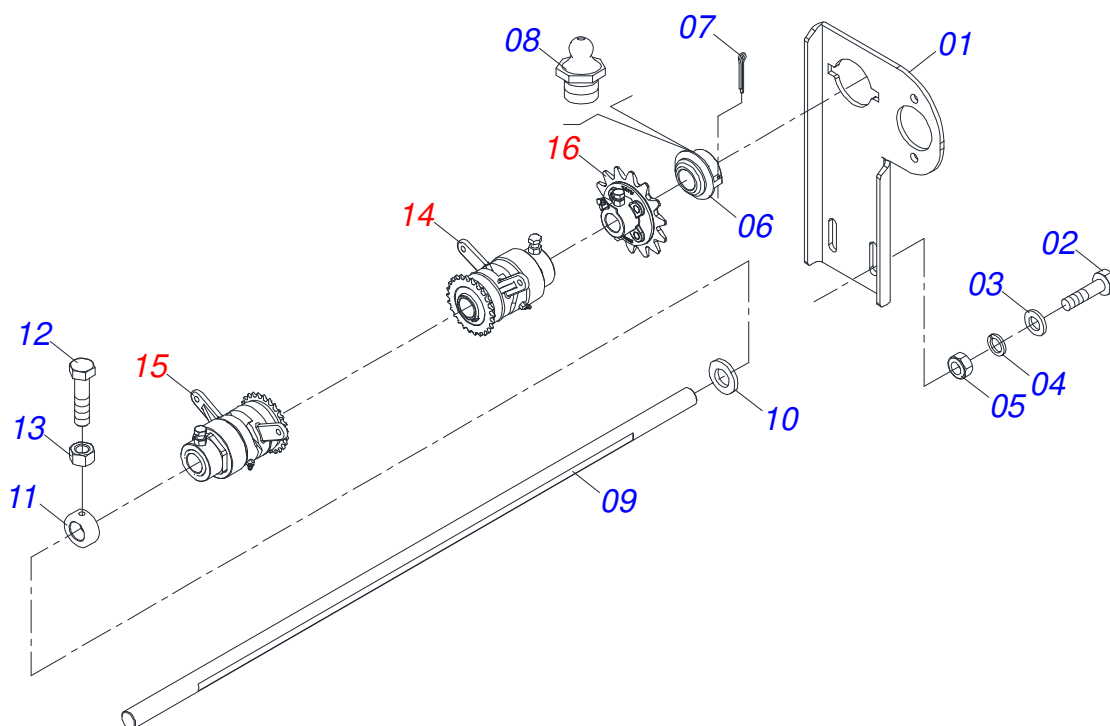


Item	Code	Description	See page	QT
001	0561017269	MOTOR AXLE BEARING SUPPORT		04
002	0503011082	C1/2" X 1.3/4" SCREW		08
003	0511017302	FLAT WASHER		16
004	0503010019	1/2" SPRING WASHER		08
005	0503010060	1/2" NUT		08
006	0501110639	BEARING		08
007	0503010300	5/32" X 1" COTTERPIN		08
008	0503011099	GREASE FITTING		08
009	0561019204	MOTOR SHAFT		02
010	0501018466	FLAT WASHER		04
011	0511015961	LOCK BUSHING		04
012	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
013	0503010060	1/2" NUT		04
014	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	108	01
015	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	109	01
016	0511051434	TRANSMISSION ACTUATOR	110	04

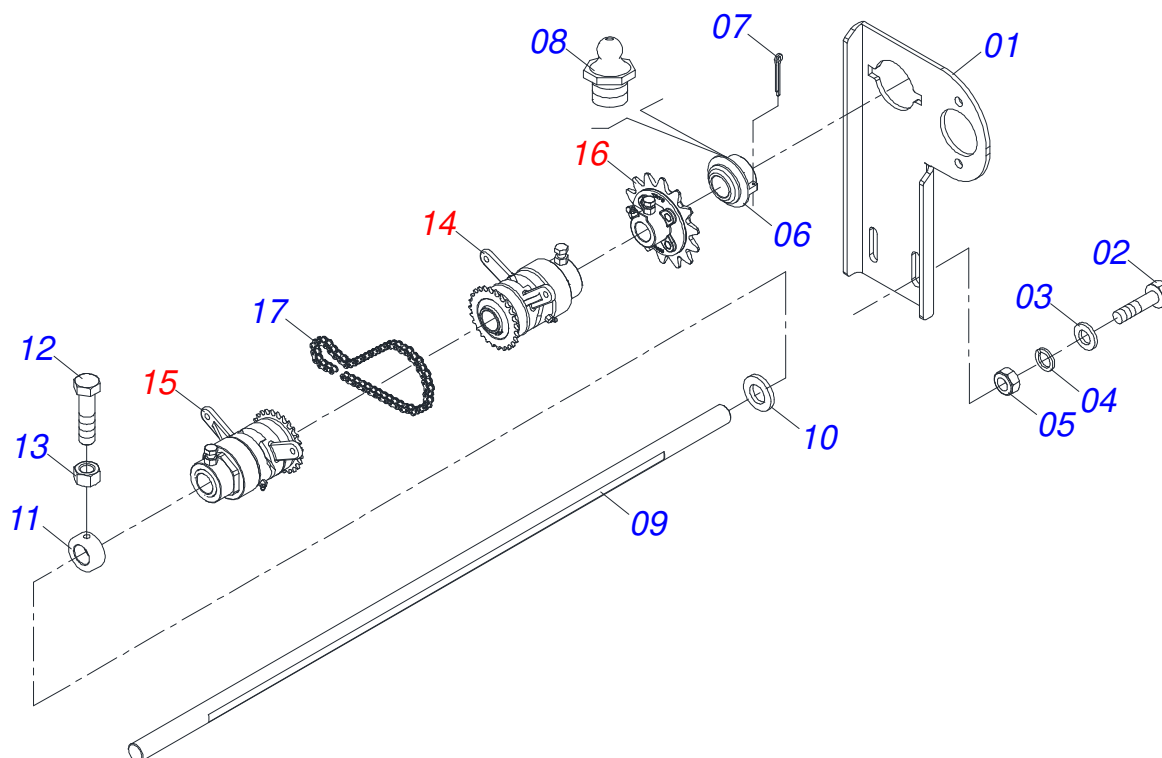


Item	Code	Description	See page	QT
01	0561017269	MOTOR AXLE BEARING SUPPORT		04
02	0503011082	C1/2" X 1.3/4" SCREW		08
03	0511017302	FLAT WASHER		16
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0501110639	BEARING		08
07	0503010300	5/32" X 1" COTTERPIN		08
08	0503011099	GREASE FITTING		08
09	0561016795	2775 MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	108	01
15	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	109	01
16	0511051434	TRANSMISSION ACTUATOR	110	04
17	0503012958	2050 CHAIN X 42 LINK + REDUCTION		04

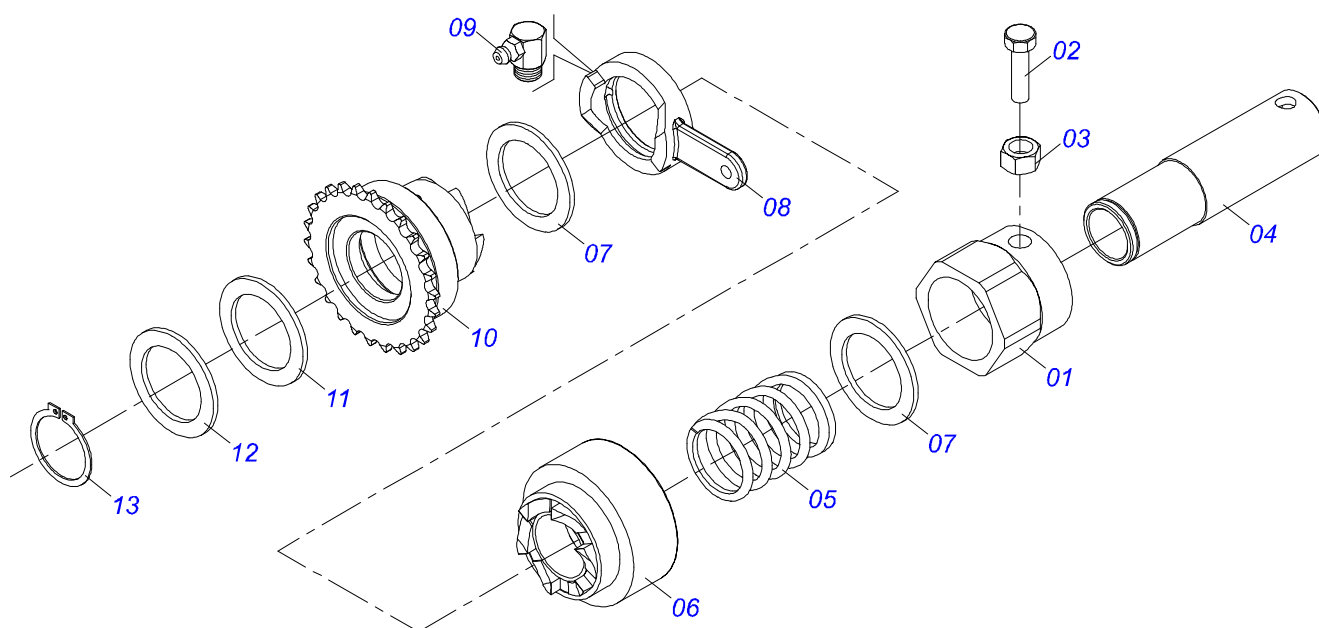


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

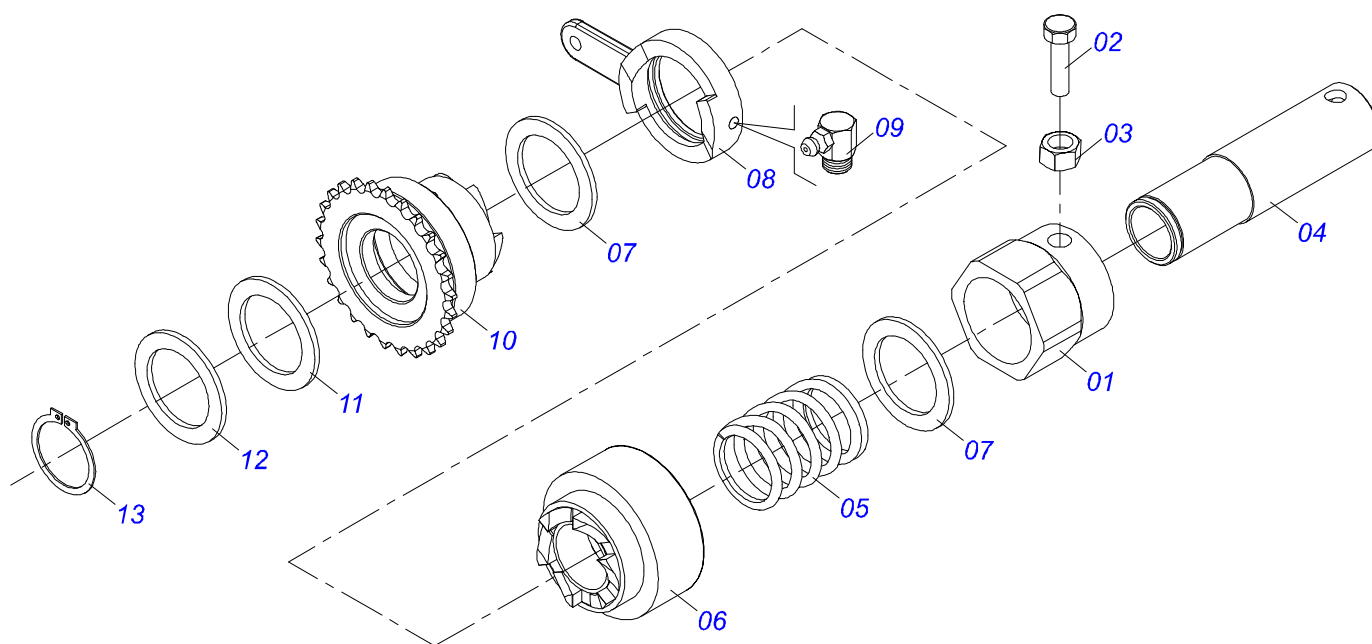


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

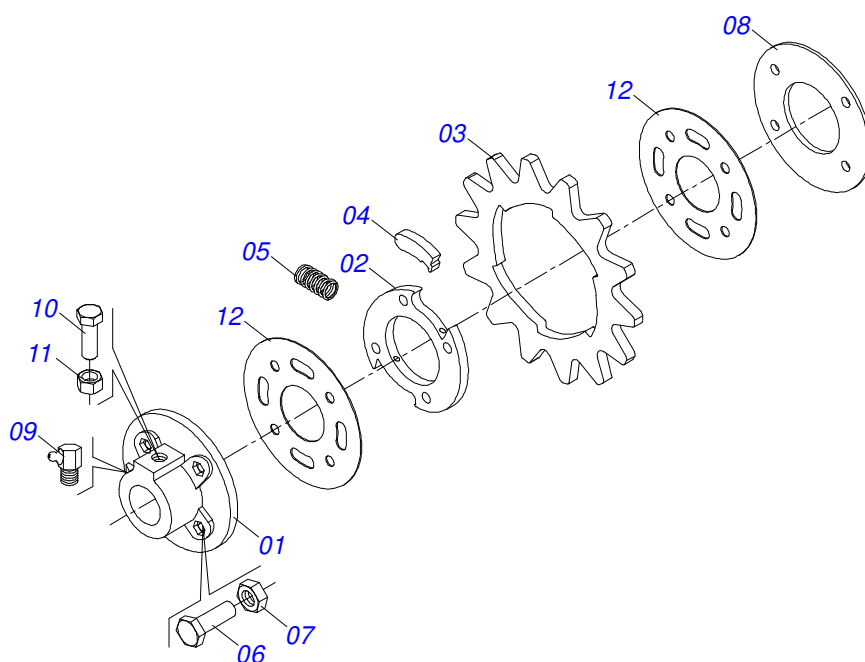


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

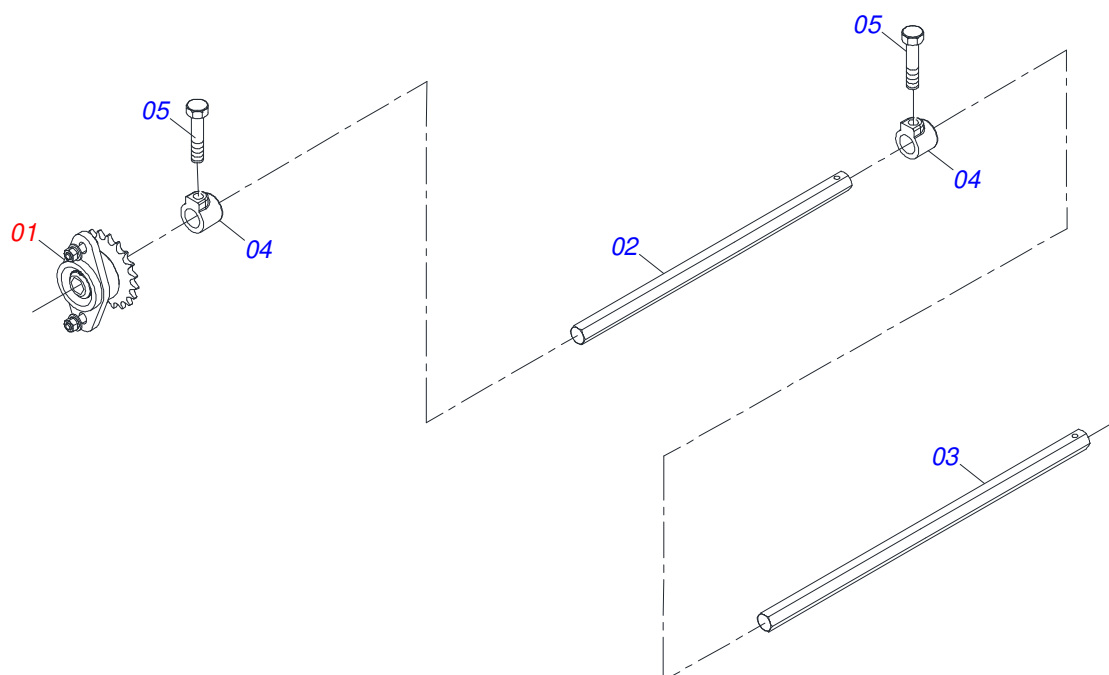


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		02
02	0531016942	RIGHT HEX AXLE 5/8 X 2050		01
03	0531016943	LEFT HEX AXLE 5/8 X 1900		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

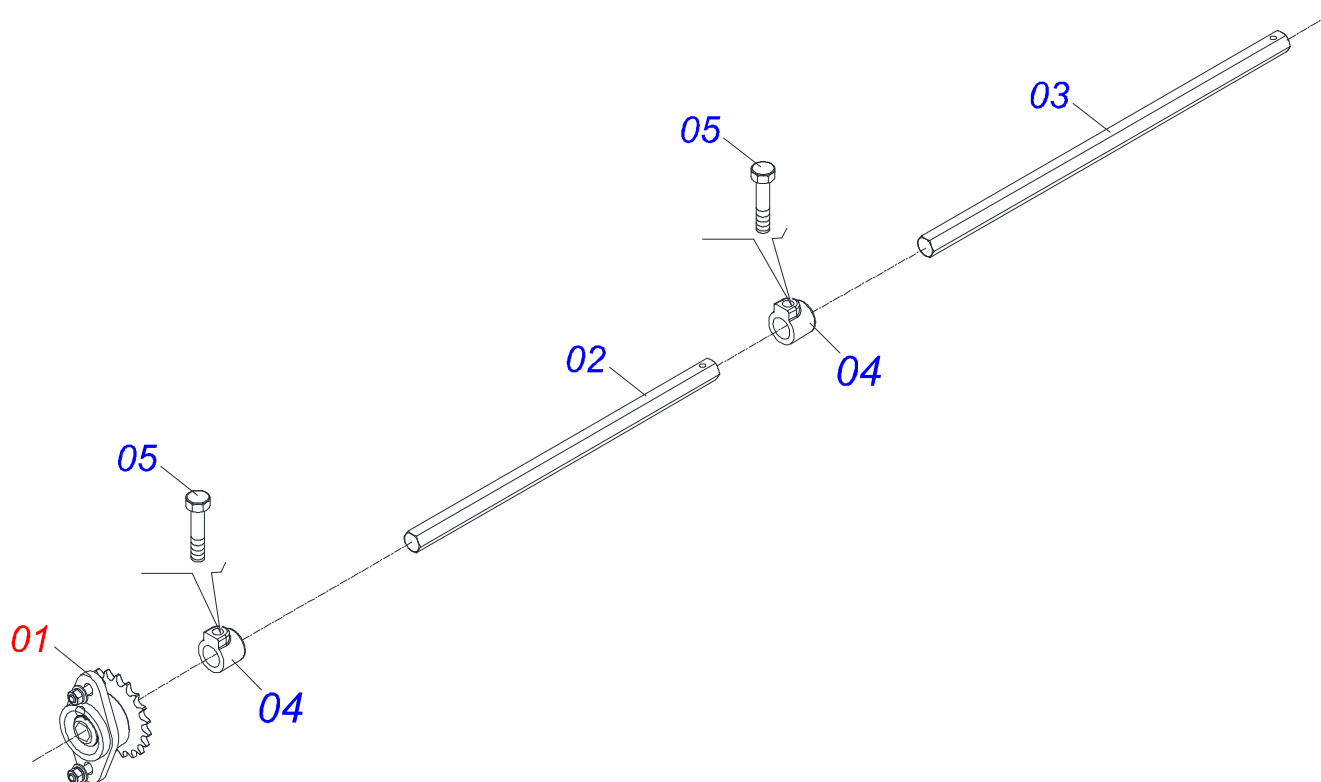


Item	Code	Description	See page	QT
01	0501053610	BEARING WITH 17Z GEAR INNER AXLE		02
02	0571013540	5/8" X 85" HEX AXLE		01
03	0571013538	5/8" X 2075 AXLE BODY		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

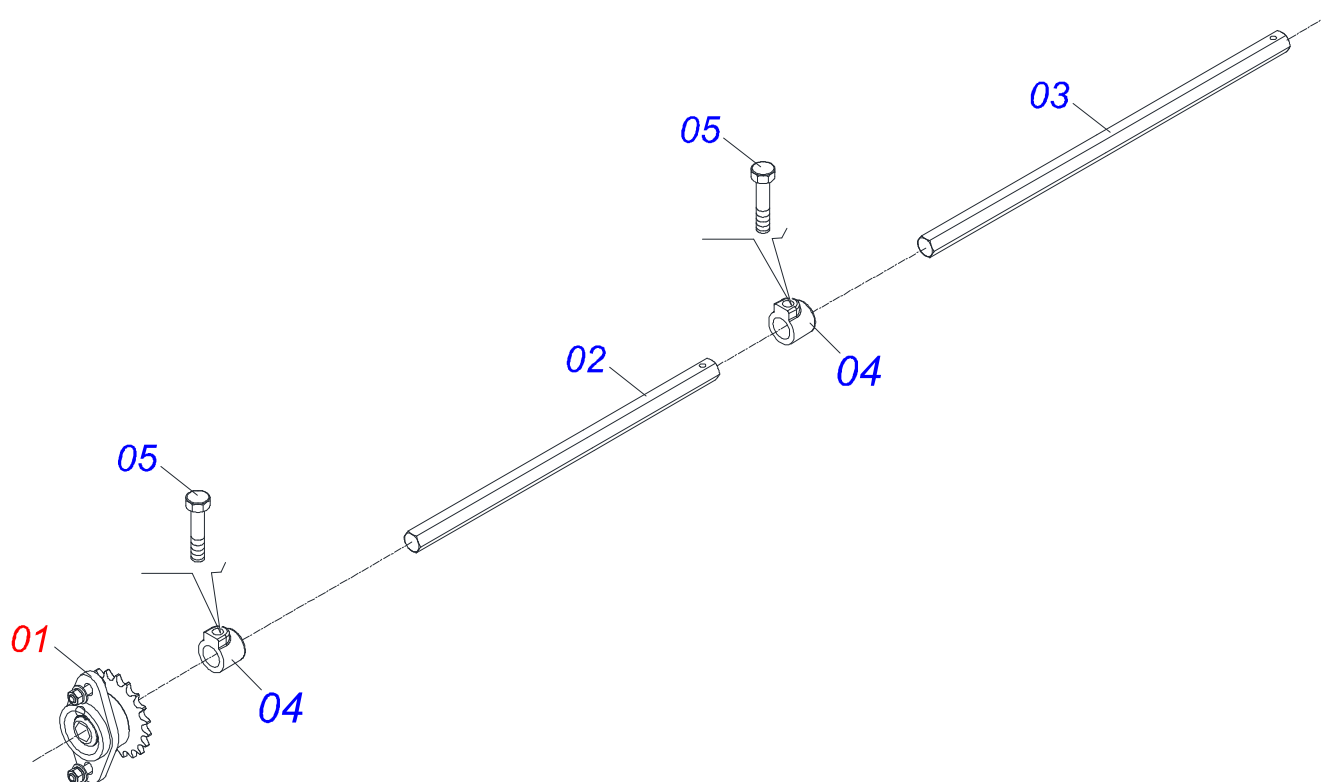


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		02
02	0531016944	RIGHT 5/8" X 96" HEX AXLE		01
03	0531016945	LEFT 5/8" X 90" HEX AXLE		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

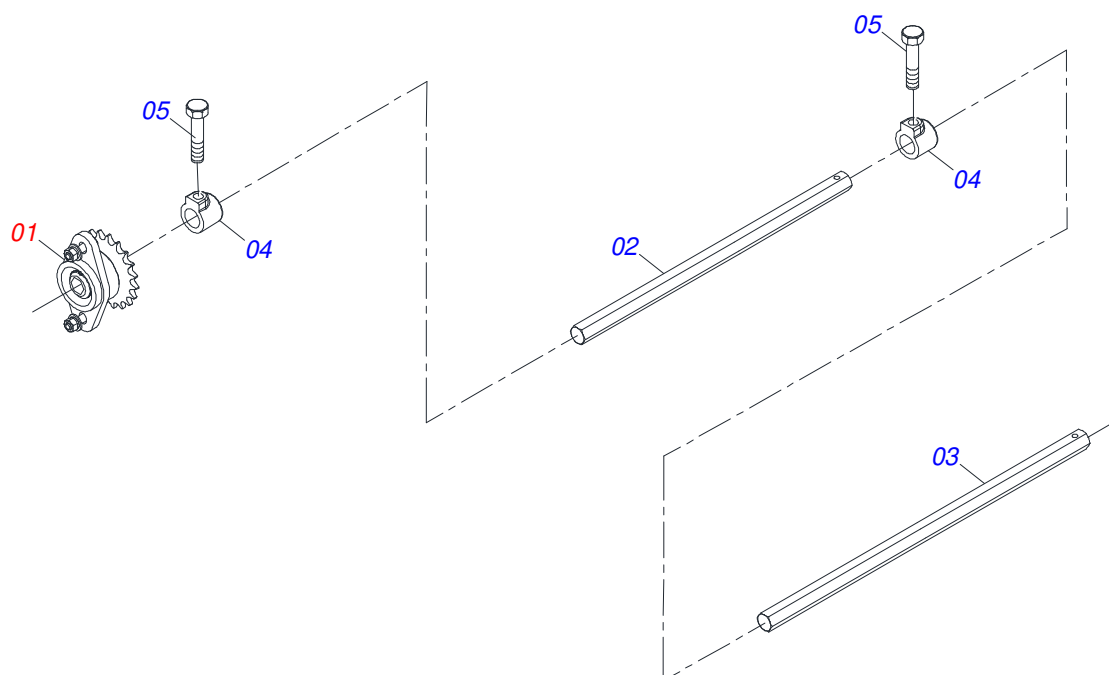


Item	Code	Description	See page	QT
01	0501053610	BEARING WITH 17Z GEAR INNER AXLE		02
02	0561019203	HEX AXLE 5/8 X 2525 LEFT		01
03	0561019202	HEX AXLE RIGHT		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

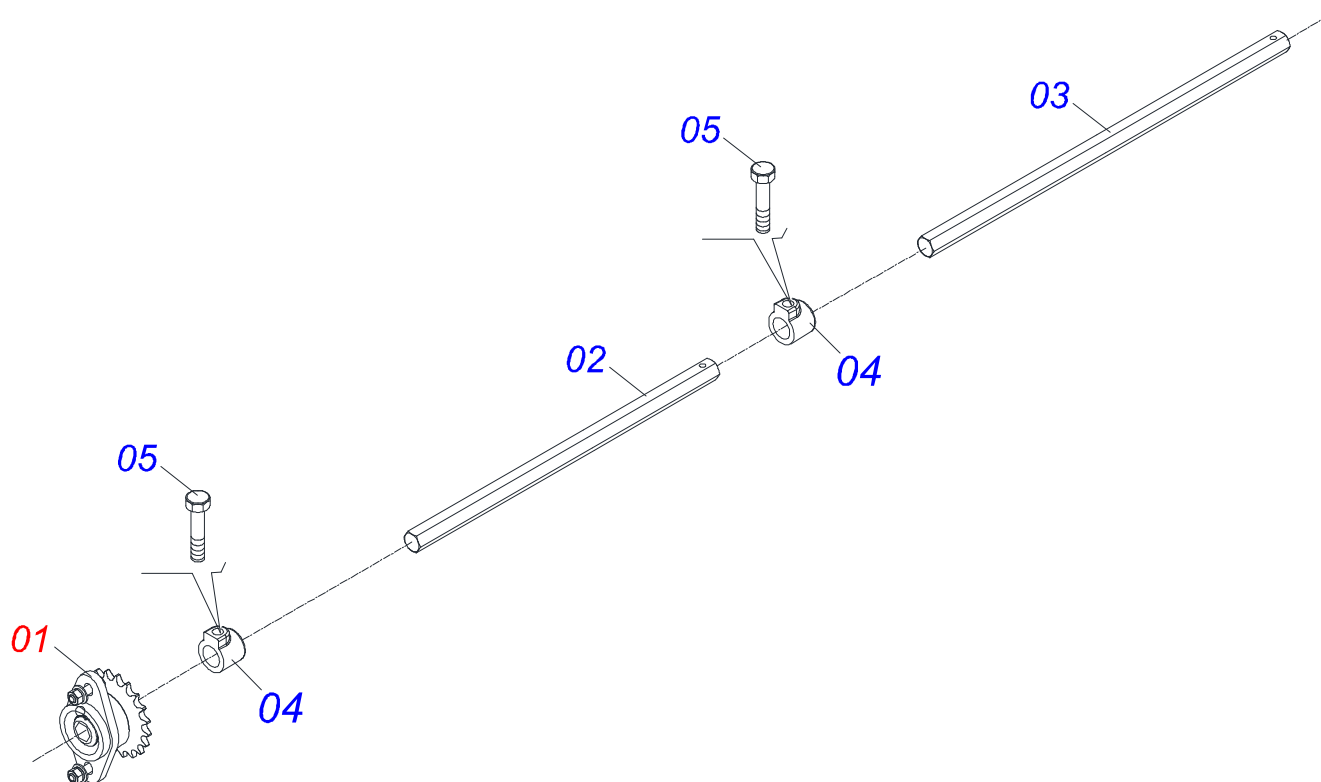


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		02
02	0531016946	5/8" X 114" AXLE HEX		01
03	0531016947	LEFT 5/8" X 108" AXLE HEX		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

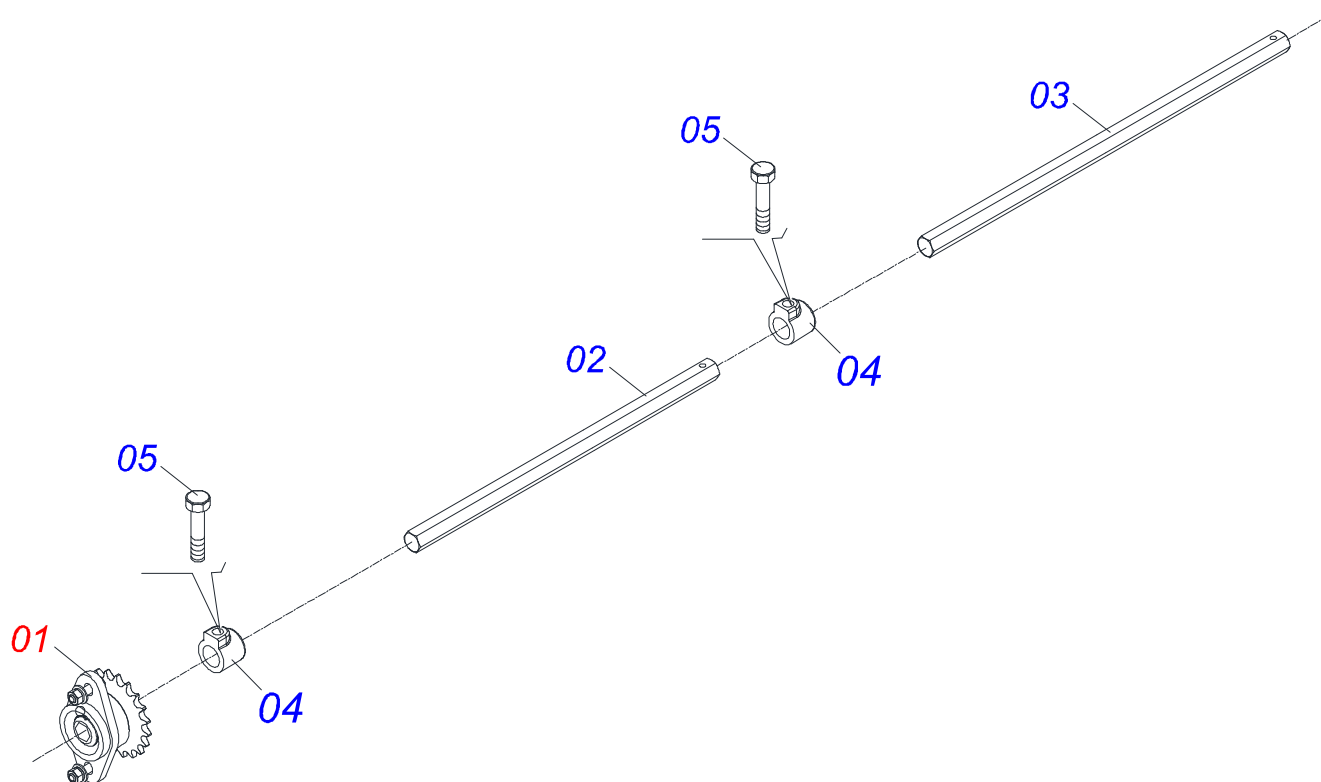


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		02
02	0531016948	RIGHT 5/8" X 131" AXLE HEX		01
03	0531016949	LEFT 5/8" X 125" AXLE HEX		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

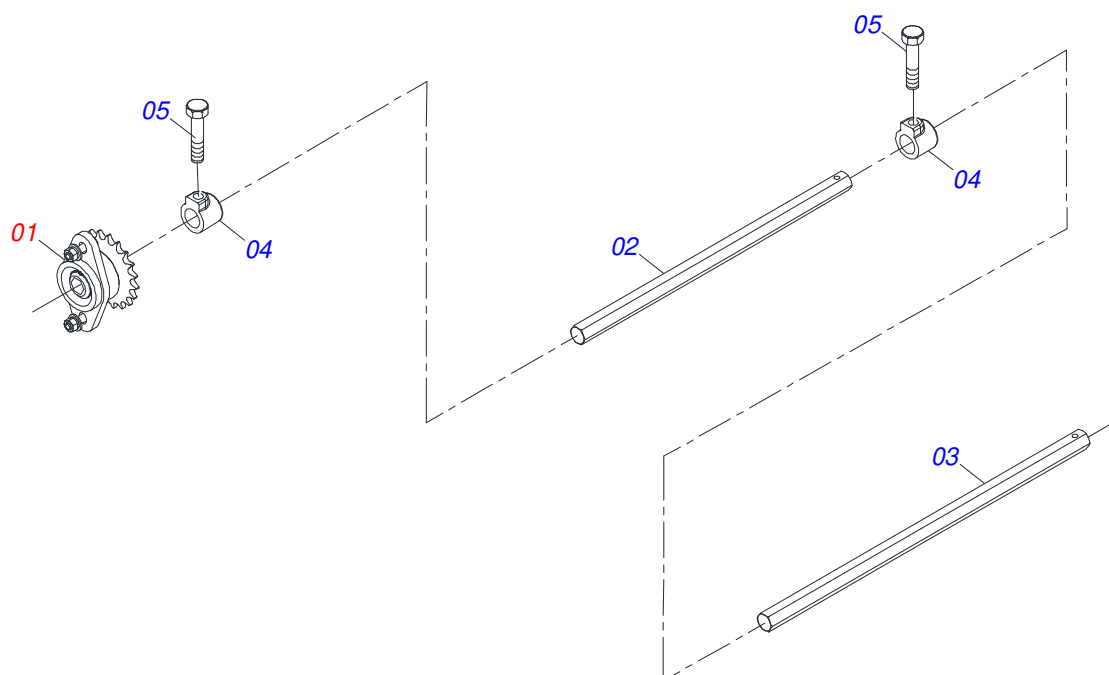


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		02
02	0541012845	5/8" X 3800 AXLE HEX		01
03	0541012846	5/8" X 3650 AXLE HEX		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

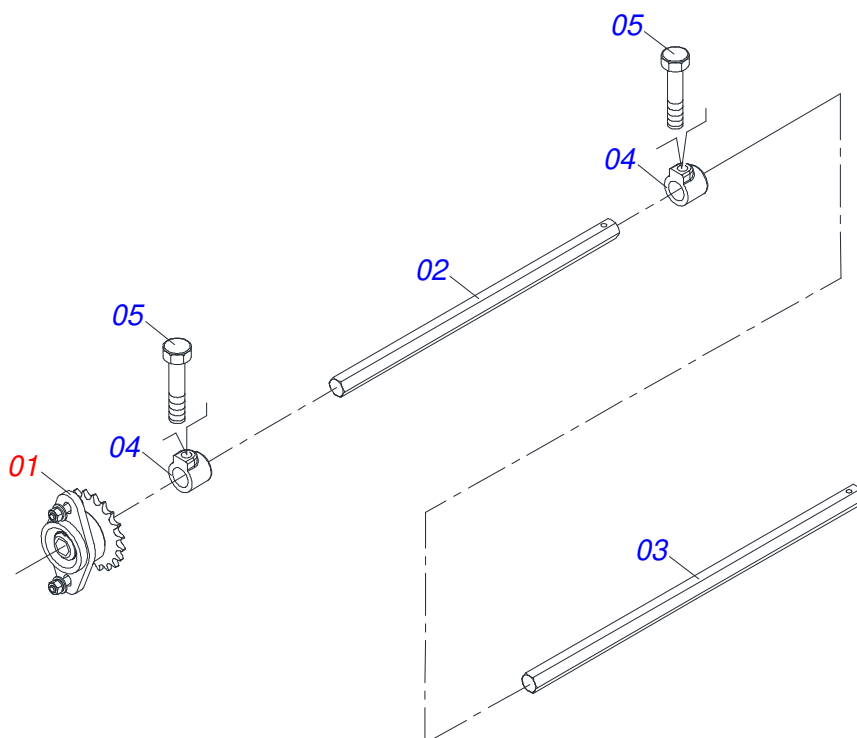


Item	Code	Description	See page	QT
01	0501053608	BEARING ASSY WITH GEAR 20Z 5/8" HEX AXLE		01
02	0561018617	5/8" X 4250 AXLE HEX		01
03	0561018616	5/8" X 4100 AXLE HEX		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

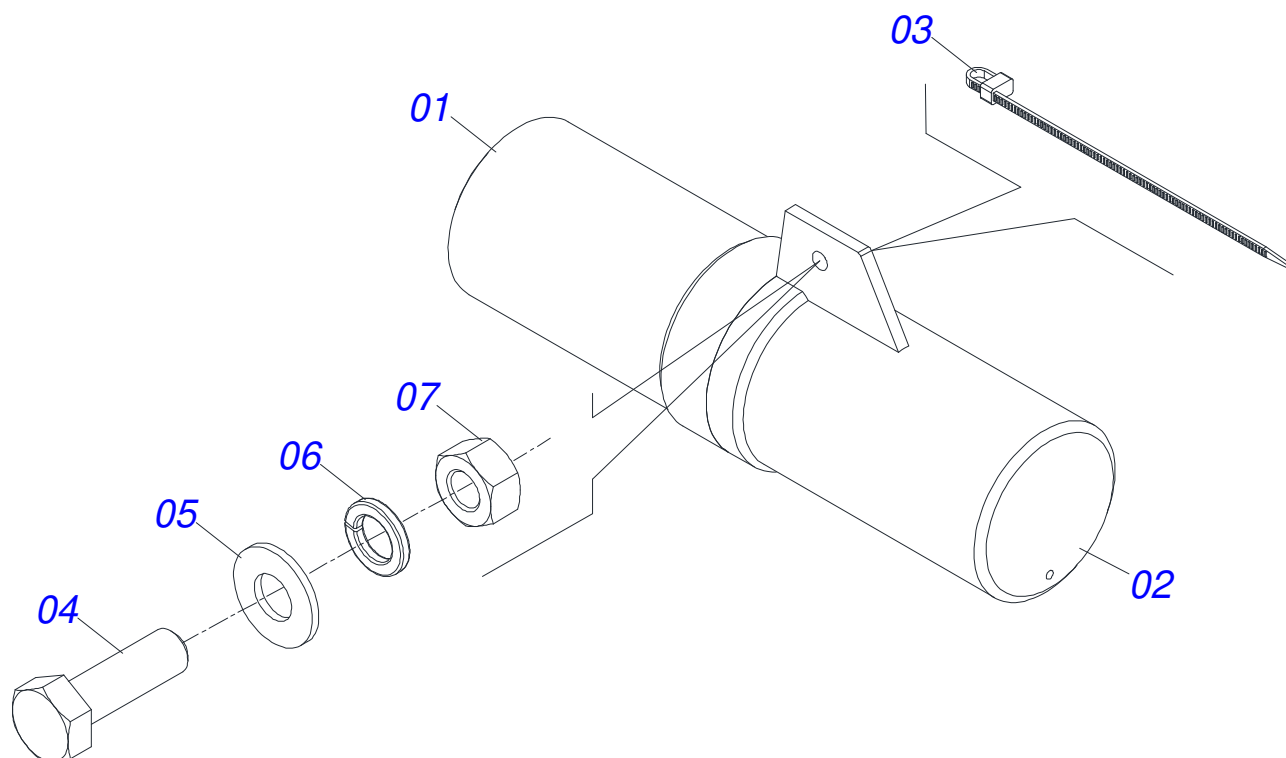


Item	Code	Description	See page	QT
01	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
02	0511031562	BAG WITH MANUAL		01
03	0503010267	NYLON CLAMP		01
04	0503010363	5/16" X 1" BOLT		01
05	0501010694	FLAT WASHER		01
06	0503010179	LOCK WASHER		01
07	0503010337	5/16" NUT		01

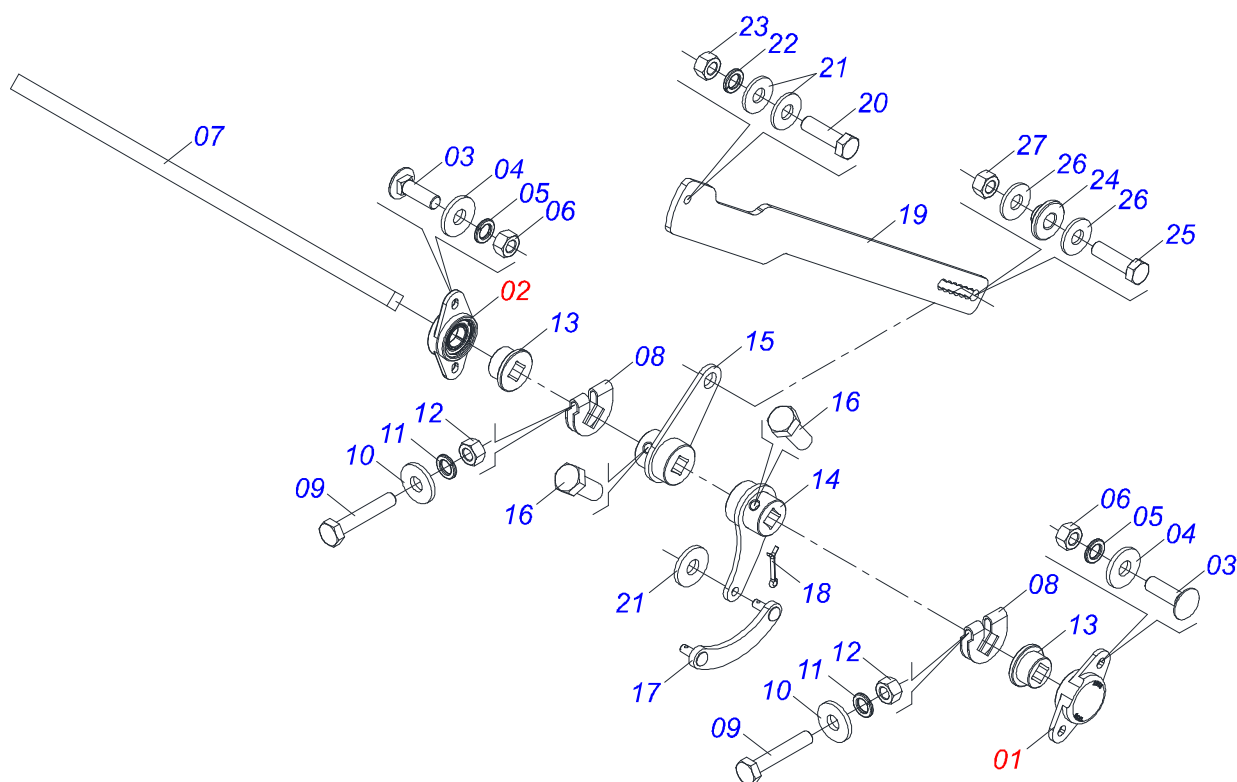


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	60	02
02	0501056444	BEARING WITH ROLLING	59	02
03	0503011953	5/16" X 1" BOLT		08
04	0501010694	FLAT WASHER		08
05	0503010179	LOCK WASHER		08
06	0503010337	5/16" NUT		08
07	0511014218	3/4" X 28.7" SQUARE SHAFT		02
08	0521010691	AXLE FASTENER		04
09	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		04
10	0511017303	FLAT WASHER		04
11	0503010143	1/4" SPRING WASHER		04
12	0503010144	1/4" NUT		04
13	0503030303	SUPPORT WASHER		04
14	0521061852	LEVER RATCHET		02
15	0521061847	AXLE ADRIVING ASSY		02
16	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
17	0521061849	DISASSEMBLE LEVER		02
18	0503010140	1/8" X 3/4" COTTERPIN		04
19	0571012792	LOWER LEVER		02
20	0503011082	C1/2" X 1.3/4" SCREW		02
21	0511017302	FLAT WASHER		04
22	0503010019	1/2" SPRING WASHER		02
23	0503010060	1/2" NUT		02
24	0561016797	SLEEVE UNION LEVER		02
25	0501010096	3/8" X 2" BOLT		02
26	0501010984	FLAT WASHER		04
27	0503010026	3/8" NUT		04

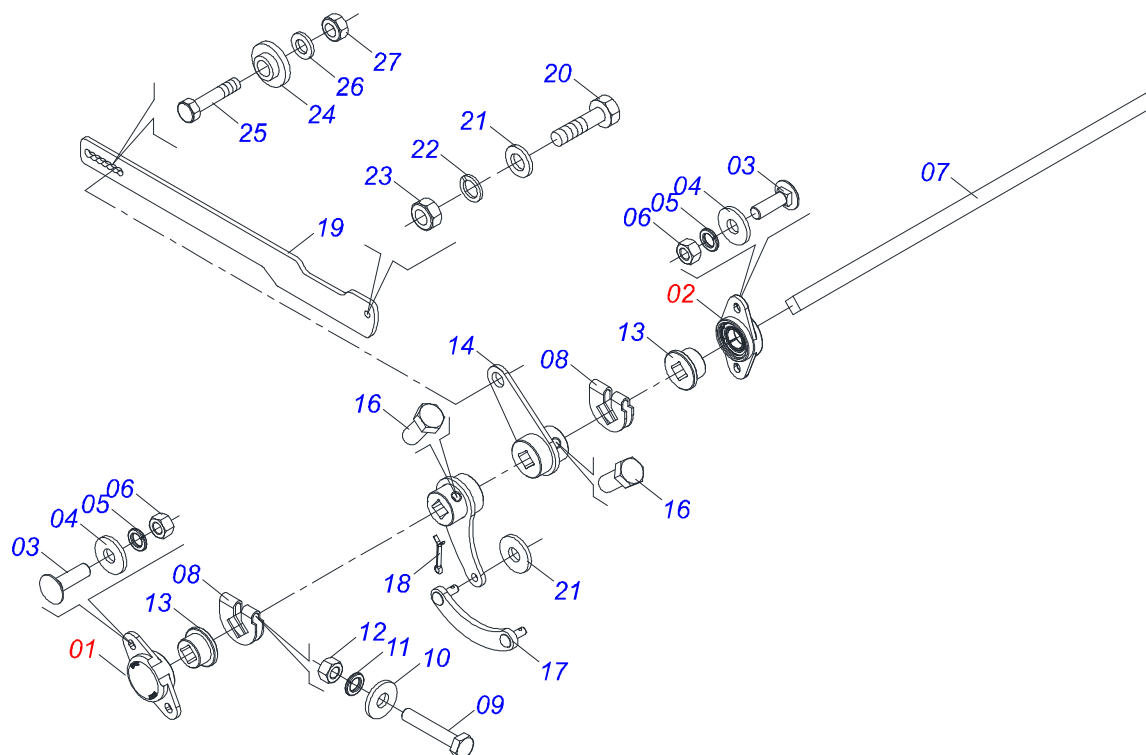


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	60	02
02	0501056444	BEARING WITH ROLLING	59	02
03	0503011953	5/16" X 1" BOLT		08
04	0501010694	FLAT WASHER		08
05	0503010179	LOCK WASHER		08
06	0503010337	5/16" NUT		08
07	0501018653	3/4" X 46" SQUARE SHAFT		02
08	0521010691	AXLE FASTENER		04
09	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		04
10	0511017303	FLAT WASHER		04
11	0503010143	1/4" SPRING WASHER		04
12	0503010144	1/4" NUT		04
13	0503030303	SUPPORT WASHER		04
14	0521061852	LEVER RATCHET		02
15	0521061847	AXLE ADRIVING ASSY		02
16	0503030679	BOLT 1/2 UNC X 1.1/4 C50 G.5 ZN		04
17	0521061849	DISASSEMBLE LEVER		02
18	0503010140	1/8" X 3/4" COTTERPIN		04
19	0571012792	LOWER LEVER		02
20	0503011082	C1/2" X 1.3/4" SCREW		02
21	0511017302	FLAT WASHER		04
22	0503010019	1/2" SPRING WASHER		02
23	0503010060	1/2" NUT		02
24	0561016797	SLEEVE UNION LEVER		02
25	0501010096	3/8" X 2" BOLT		02
26	0501010984	FLAT WASHER		04
27	0503010026	3/8" NUT		04

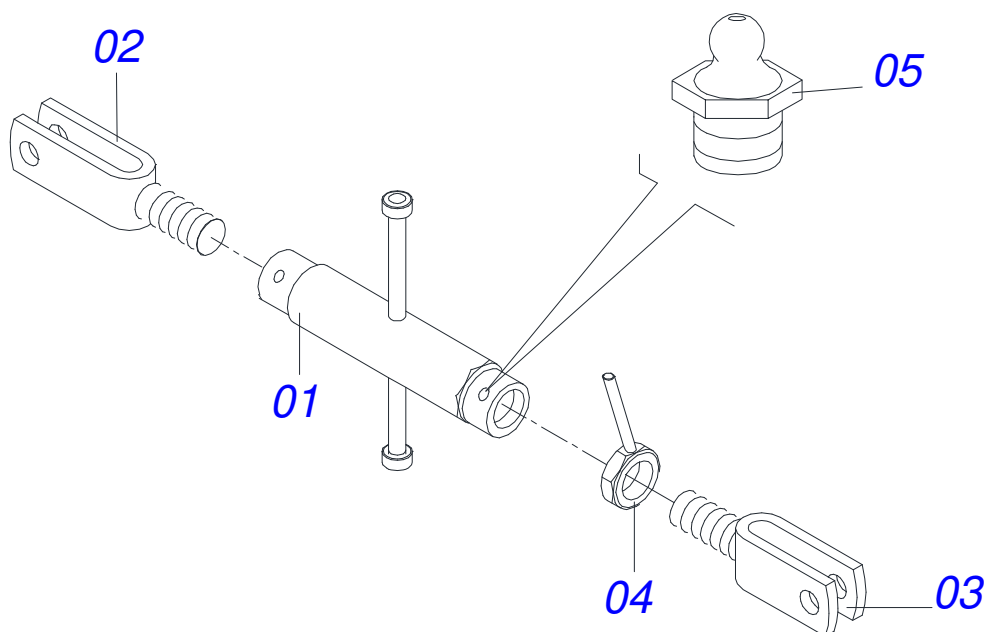


Item	Code	Description	See page	QT
01	0501069529	653 TURNBUCKLE		01
02	0521062278	RIGHT TURNBUCKLE		01
03	0511062888	LH TURNBUCKLE		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

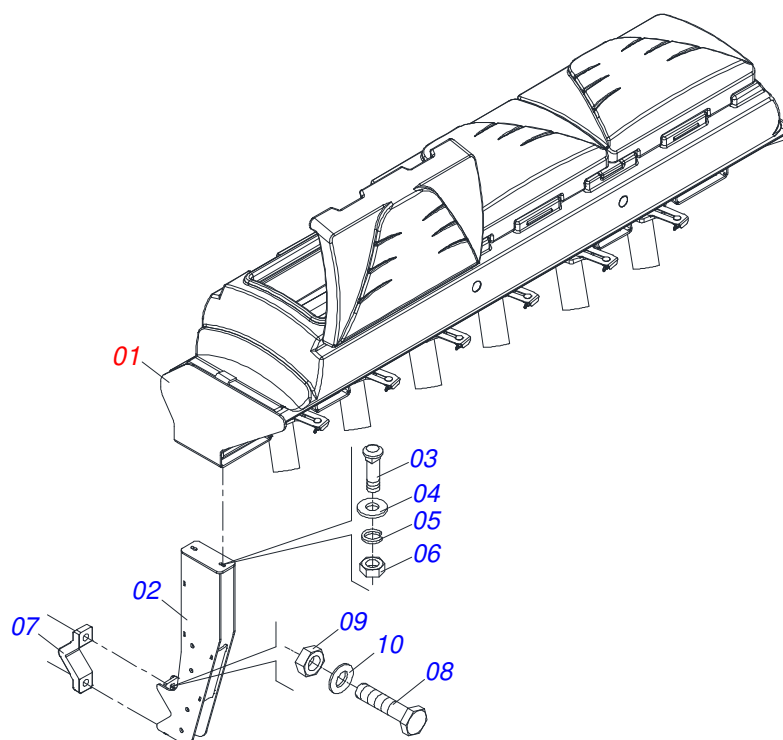


Item	Code	Description	See page	QT
01	0511058100	2 BOXES WITH 9 CONDUCTORS ASSEMBLY	124	01
02	0521063064	SUPPORT TOWER SILO SEED CSU		04
03	0501010942	3/8" X 1-1/4" BOLT		08
04	0501010984	FLAT WASHER		08
05	0503010025	3/8" SPRING WASHER		08
06	0503010026	3/8" NUT		08
07	0502010175	HITCH CLAMP		04
08	0501011543	5/8" X 4" BOLT		08
09	0503012412	5/8 UNC SELF LOCKING NUT		08
10	0501012140	FLAT WASHER		08

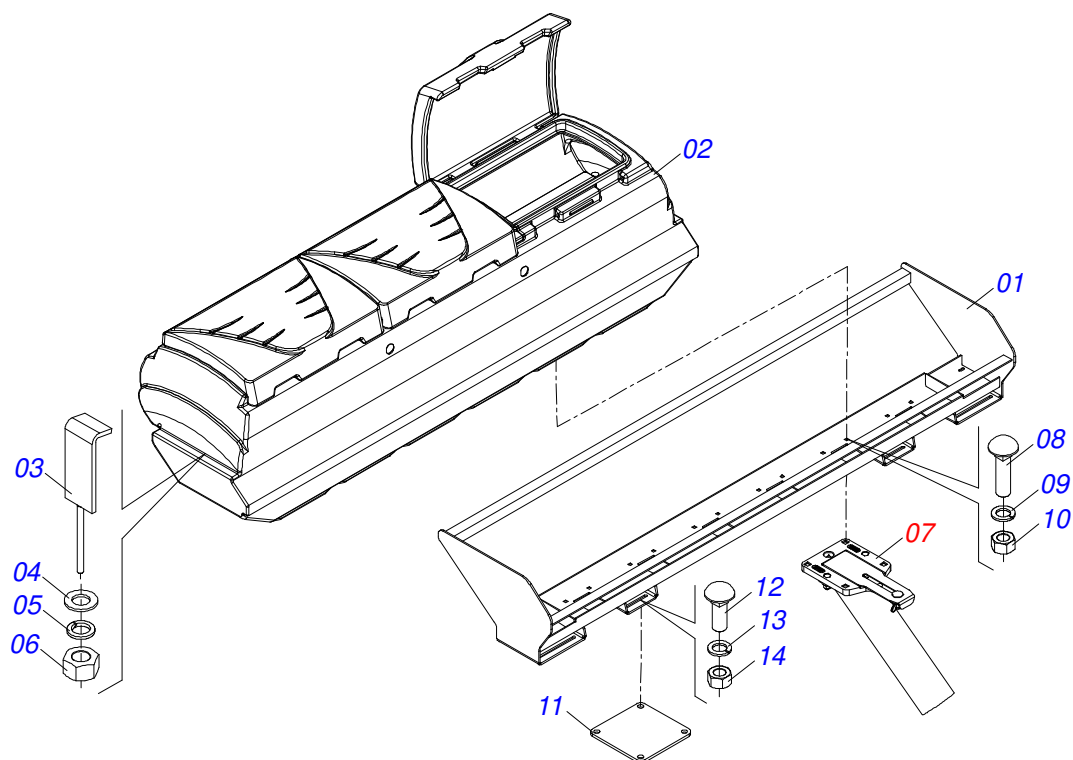


Item	Code	Description	See page	QT
01	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS		02
02	0503061899	REAR BEAN FERTILIZER ASSY		02
03	0521063401	SEED BOX ONLY FIXING LOCK		04
04	0501010984	FLAT WASHER		04
05	0503010025	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0511057690	3" ARTICULATED SEED CONDUCTOR	125	09
08	0501010942	3/8" X 1-1/4" BOLT		36
09	0503010025	3/8" SPRING WASHER		36
10	0503010026	3/8" NUT		36
11	0571015773	SUPPORT SEED		03
12	0501011643	3/8 X 1"BOLT		12
13	0503010025	3/8" SPRING WASHER		12
14	0503010026	3/8" NUT		12

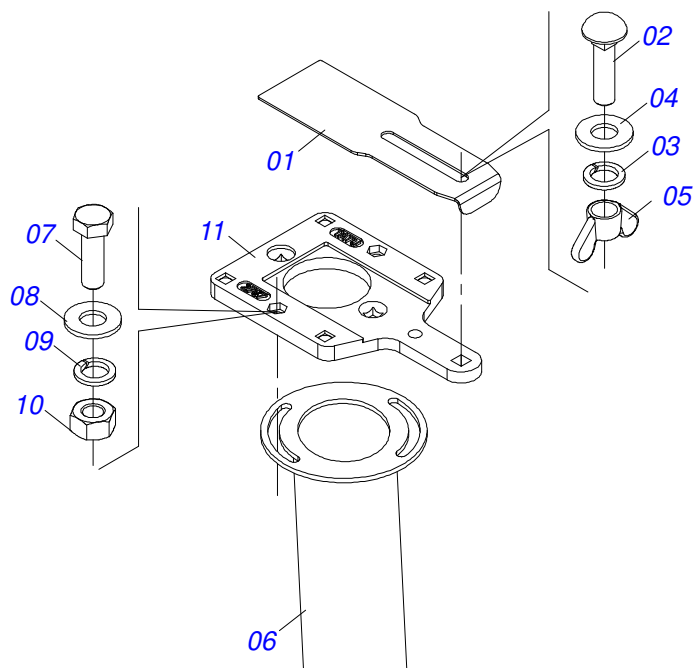


Item	Code	Description	See page	QT
01	0571015779	COVER SUPPORT CONDUCTOR ARTICULATION		01
02	0501010942	3/8" X 1-1/4" BOLT		01
03	0503010025	3/8" SPRING WASHER		01
04	0501010984	FLAT WASHER		01
05	0503010209	3/8" UNC BUTTERFLY NUT		01
06	0521066332	CONDUCTOR WITH FLANGE		01
07	0503010371	5/16" X 1" BOLT		02
08	0501010694	FLAT WASHER		02
09	0503010179	LOCK WASHER		02
10	0503010337	5/16" NUT		02
11	0502012767	FIXER CONDUCTOR SEED CSU SUPPORT		01

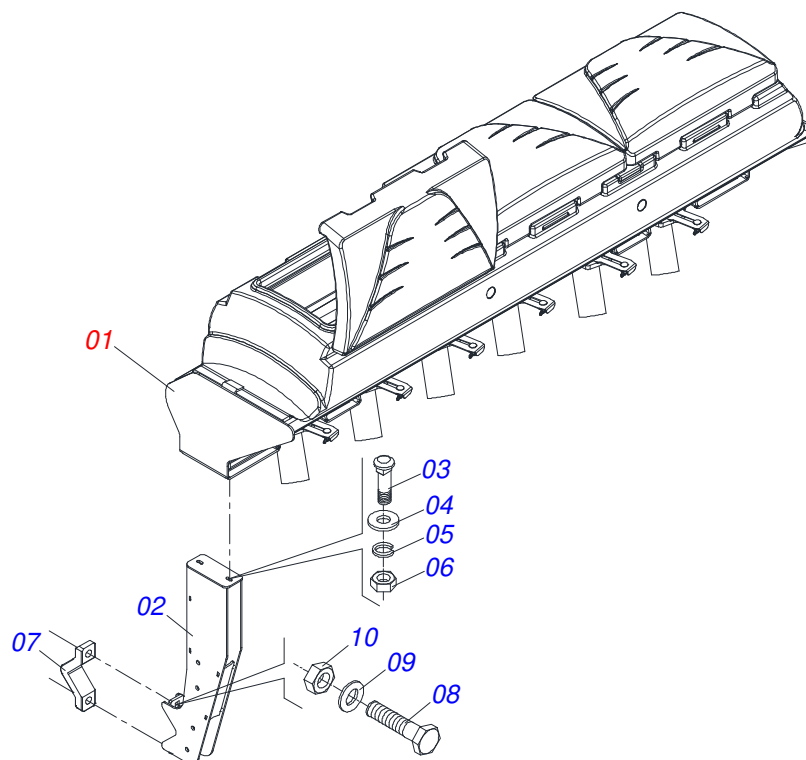


Item	Code	Description	See page	QT
01	0511057919	2 BOXES WITH 11 CONDUCTORS ASSEMBLY	127	01
02	0521063064	SUPPORT TOWER SILO SEED CSU		04
03	0501010942	3/8" X 1-1/4" BOLT		08
04	0501010984	FLAT WASHER		08
05	0503010025	3/8" SPRING WASHER		08
06	0503010026	3/8" NUT		08
07	0502010175	HITCH CLAMP		04
08	0501011543	5/8" X 4" BOLT		08
09	0503012412	5/8 UNC SELF LOCKING NUT		08
10	0501010453	FLAT WASHER		08

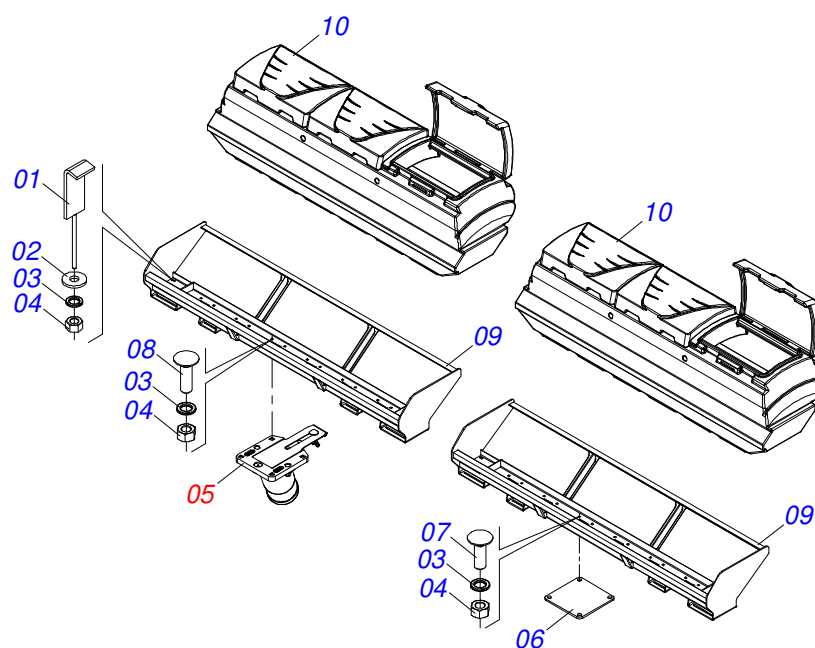


Item	Code	Description	See page	QT
01	0521063401	SEED BOX ONLY FIXING LOCK		04
02	0501010984	FLAT WASHER		04
03	0503010025	3/8" SPRING WASHER		60
04	0503010026	3/8" NUT		60
05	0511057690	3" ARTICULATED SEED CONDUCTOR	125	11
06	0571015773	SUPPORT SEED		03
07	0501011643	3/8 X 1"BOLT		12
08	0501010942	3/8" X 1-1/4" BOLT		44
09	0521064874	07 MOUTHS SUPPORT BOX SEED ONLY		02
10	0503062165	HOPPER FERTILIZER 07 MOUTHS FRONT		02

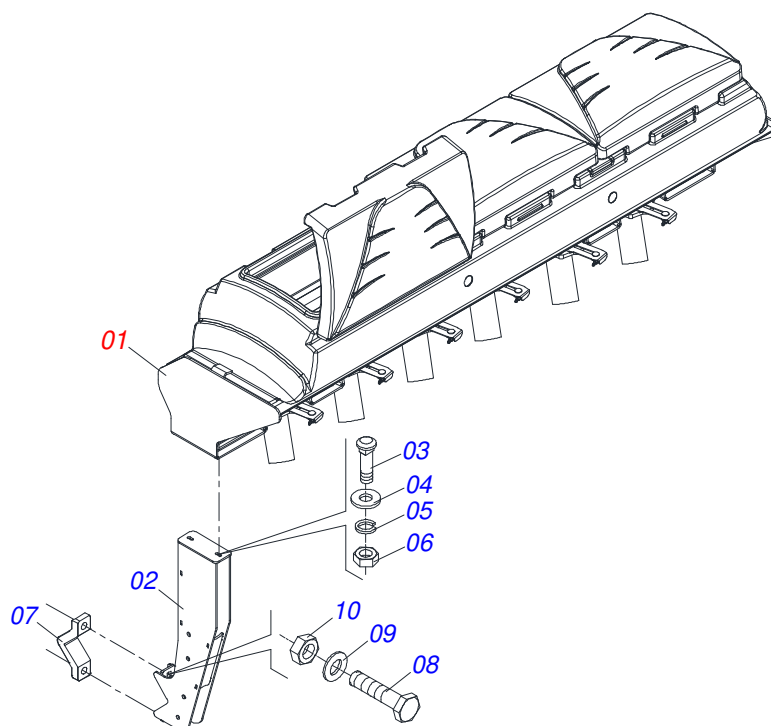


Item	Code	Description	See page	QT
01	0521050886	ASSEMBLY CSU	129	01
02	0521063064	SUPPORT TOWER SILO SEED CSU		06
03	0501010942	3/8" X 1-1/4" BOLT		12
04	0501010984	FLAT WASHER		12
05	0503010025	3/8" SPRING WASHER		12
06	0503010026	3/8" NUT		12
07	0502010175	HITCH CLAMP		06
08	0501011543	5/8" X 4" BOLT		12
09	0501010453	FLAT WASHER		12
10	0503012412	5/8 UNC SELF LOCKING NUT		12

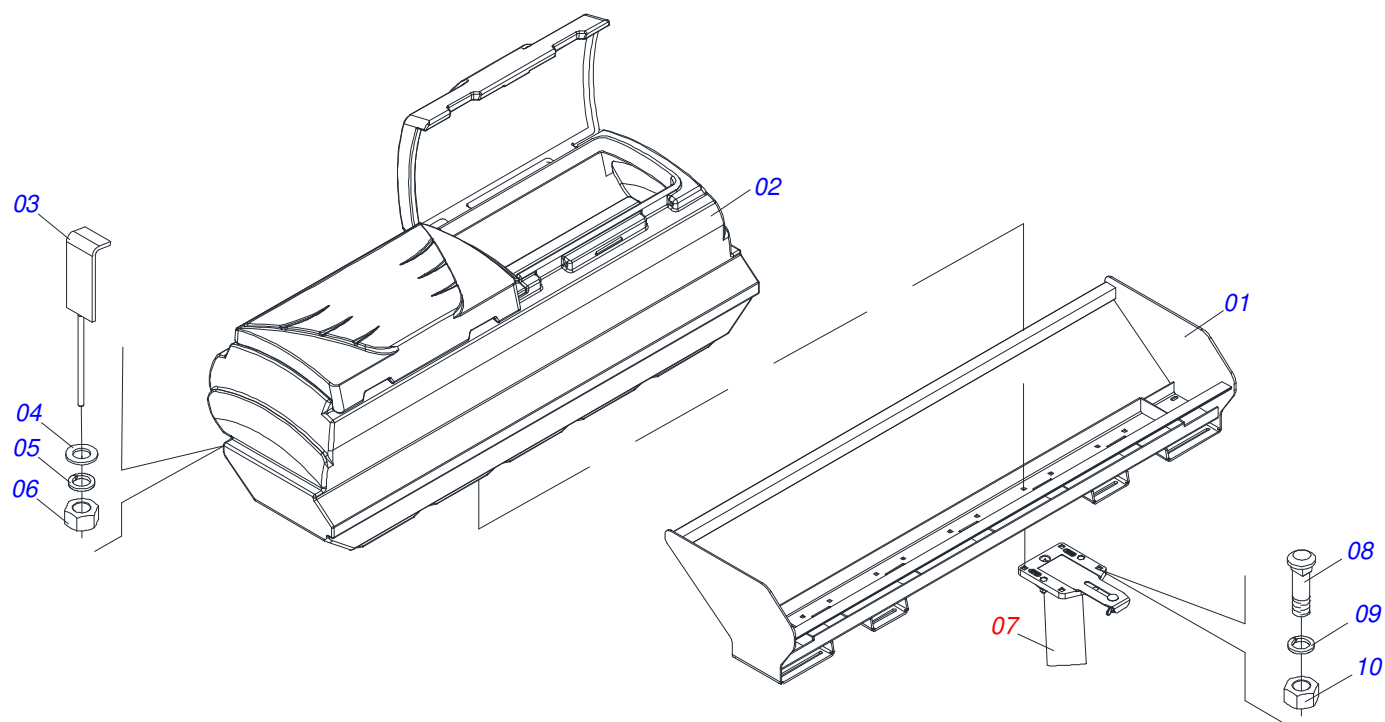


Item	Code	Description	See page	QT
01	0521064748	05 MOUTHS CSU SUPPORT		03
02	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED		03
03	0521063401	SEED BOX ONLY FIXING LOCK		06
04	0501010984	FLAT WASHER		06
05	0503010025	3/8" SPRING WASHER		06
06	0503010026	3/8" NUT		06
07	0511057690	3" ARTICULATED SEED CONDUCTOR	125	11
08	0501010942	3/8" X 1-1/4" BOLT		44
09	0503010025	3/8" SPRING WASHER		44
10	0503010026	3/8" NUT		44

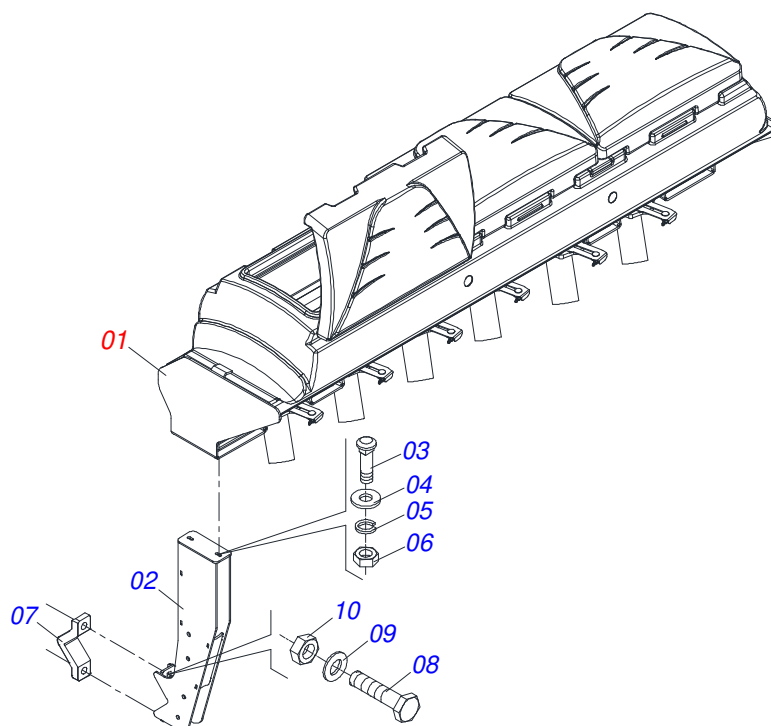


Item	Code	Description	See page	QT
01	0511058880	ASSEMBLY CSU	131	01
02	0521063064	SUPPORT TOWER SILO SEED CSU		06
03	0501010942	3/8" X 1-1/4" BOLT		12
04	0501010984	FLAT WASHER		12
05	0503010025	3/8" SPRING WASHER		12
06	0503010026	3/8" NUT		12
07	0502010175	HITCH CLAMP		06
08	0501011543	5/8" X 4" BOLT		12
09	0501010453	FLAT WASHER		12
10	0503012412	5/8 UNC SELF LOCKING NUT		12

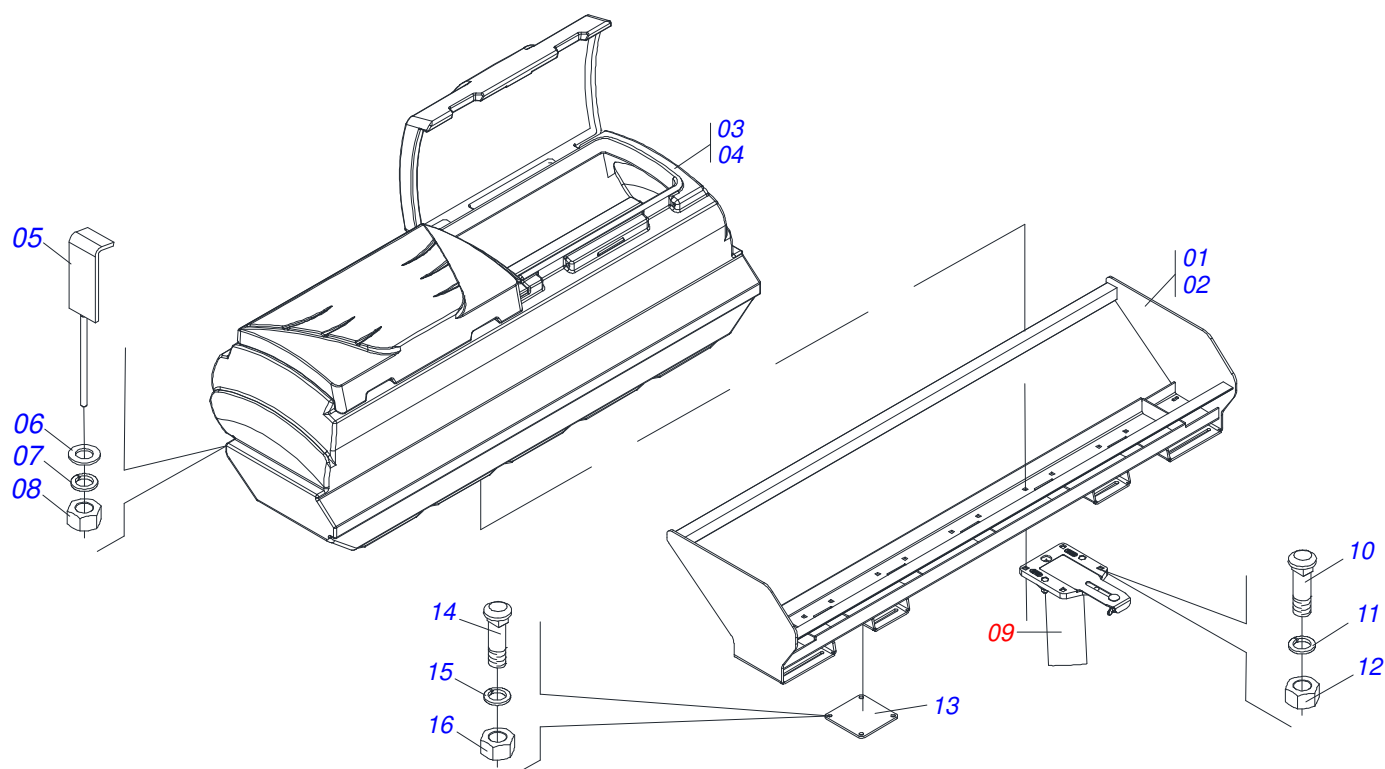


Item	Code	Description	See page	QT
01	0521064748	05 MOUTHS CSU SUPPORT		02
02	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS		01
03	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED		02
04	0503061899	REAR BEAN FERTILIZER ASSY		01
05	0521063401	SEED BOX ONLY FIXING LOCK		06
06	0501010984	FLAT WASHER		06
07	0503010025	3/8" SPRING WASHER		06
08	0503010026	3/8" NUT		06
09	0511057690	3" ARTICULATED SEED CONDUCTOR	125	12
10	0501010942	3/8" X 1-1/4" BOLT		48
11	0503010025	3/8" SPRING WASHER		48
12	0503010026	3/8" NUT		48
13	0571015773	SUPPORT SEED		04
14	0501011643	3/8 X 1"BOLT		16
15	0503010025	3/8" SPRING WASHER		16
16	0503010026	3/8" NUT		16

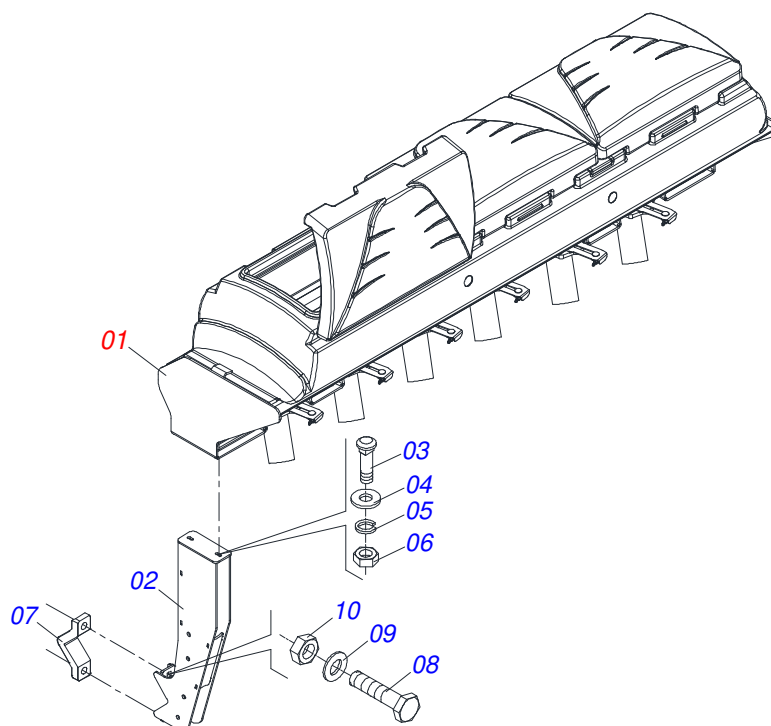


Item	Code	Description	See page	QT
01	0511057780	ASSEMBLY CSU	133	01
02	0521063064	SUPPORT TOWER SILO SEED CSU		08
03	0501010942	3/8" X 1-1/4" BOLT		16
04	0501010984	FLAT WASHER		16
05	0503010025	3/8" SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0502010175	HITCH CLAMP		08
08	0501011543	5/8" X 4" BOLT		16
09	0503012412	5/8 UNC SELF LOCKING NUT		16
10	0501010453	FLAT WASHER		16

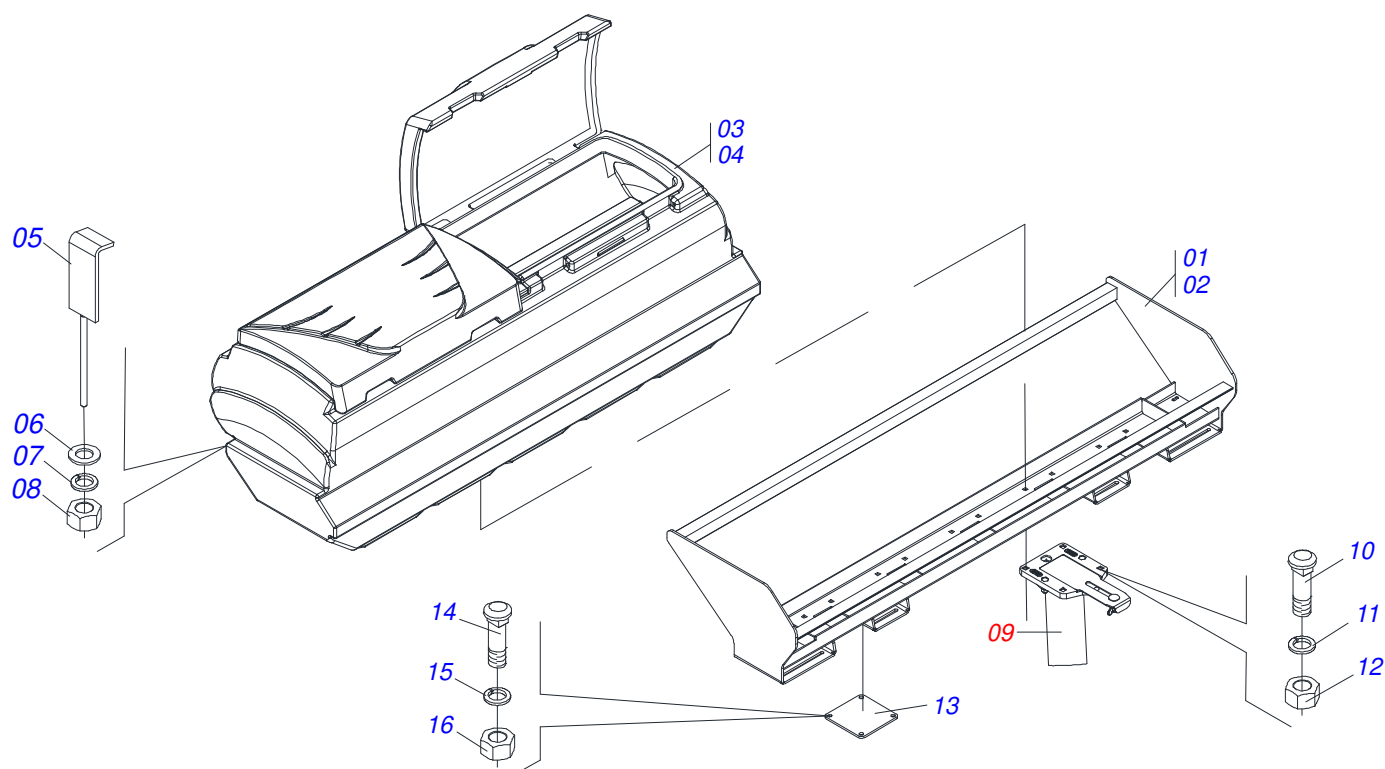


Item	Code	Description	See page	QT
001	0521064748	05 MOUTHS CSU SUPPORT		02
002	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS		02
003	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED		02
004	0503061899	REAR BEAN FERTILIZER ASSY		02
005	0521063401	SEED BOX ONLY FIXING LOCK		08
006	0501010984	FLAT WASHER		08
007	0503010025	3/8" SPRING WASHER		08
008	0503010026	3/8" NUT		08
009	0511057690	3" ARTICULATED SEED CONDUCTOR	125	15
010	0501010942	3/8" X 1-1/4" BOLT		60
011	0503010025	3/8" SPRING WASHER		60
012	0503010026	3/8" NUT		60
013	0571015773	SUPPORT SEED		07
014	0501011643	3/8 X 1"BOLT		28
015	0503010025	3/8" SPRING WASHER		28
016	0503010026	3/8" NUT		28

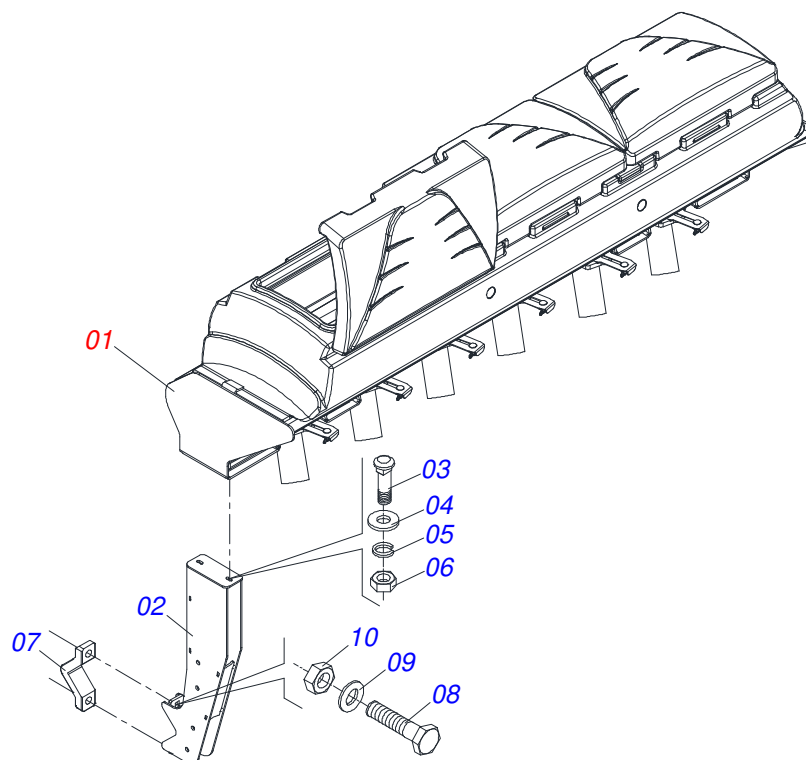


Item	Code	Description	See page	QT
01	0511057755	ASSEMBLY CSU 6850	135	01
02	0521063064	SUPPORT TOWER SILO SEED CSU		06
03	0501010942	3/8" X 1-1/4" BOLT		12
04	0501010984	FLAT WASHER		12
05	0503010025	3/8" SPRING WASHER		12
06	0503010026	3/8" NUT		12
07	0502010175	HITCH CLAMP		06
08	0501011543	5/8" X 4" BOLT		12
09	0503012412	5/8 UNC SELF LOCKING NUT		12
10	0501012140	FLAT WASHER		12

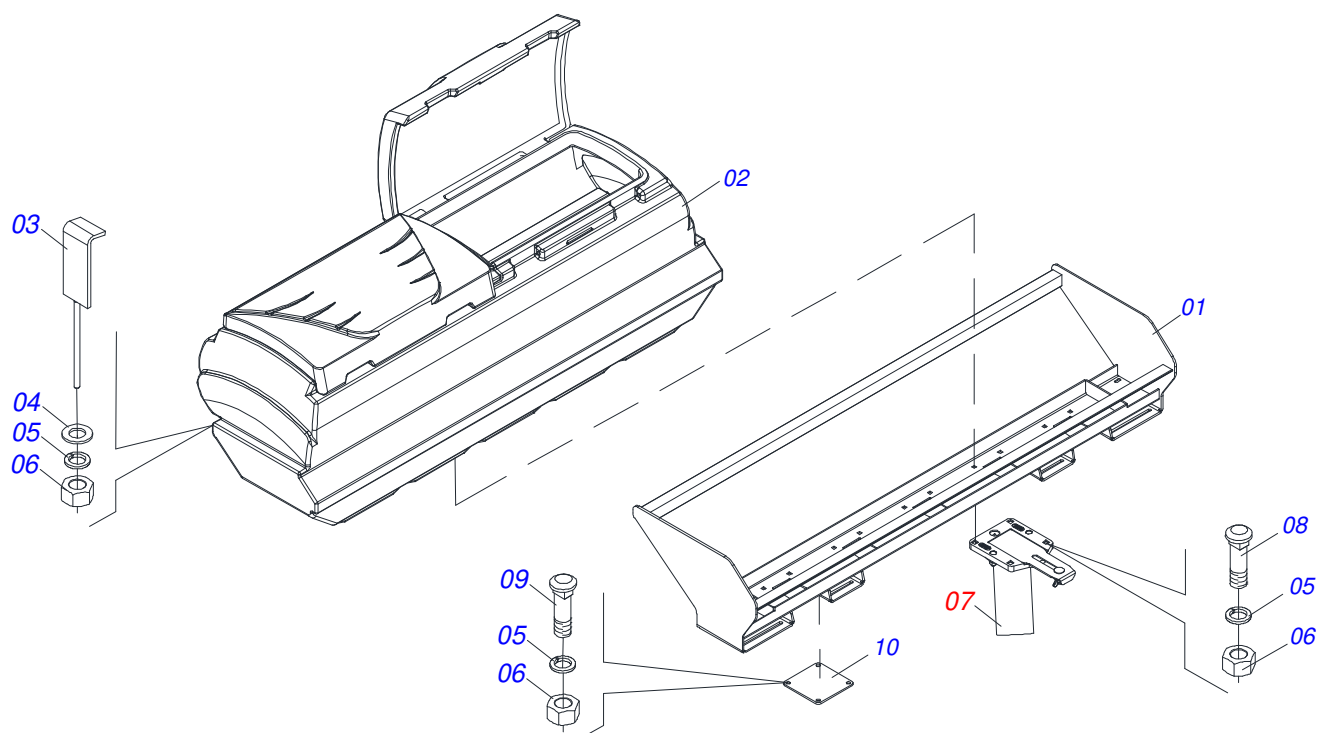


Item	Code	Description	See page	QT
01	0503061899	REAR BEAN FERTILIZER ASSY		03
02	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS		03
03	0521063401	SEED BOX ONLY FIXING LOCK		06
04	0501010984	FLAT WASHER		06
05	0503010025	3/8" SPRING WASHER		78
06	0503010026	3/8" NUT		78
07	0511057690	3" ARTICULATED SEED CONDUCTOR	125	15
08	0501010942	3/8" X 1-1/4" BOLT		60
09	0501011643	3/8 X 1" BOLT		12
10	0571015773	SUPPORT SEED		03

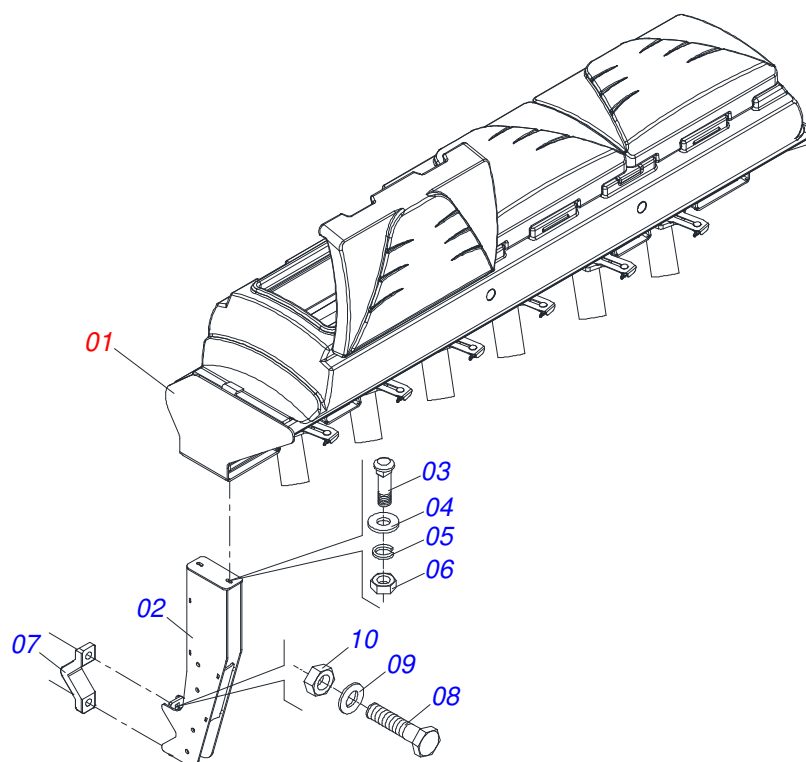


Item	Code	Description	See page	QT
01	0511058364	ENSEMBLE BOX UNIQUE SEED C3 2CX 5B + 2CX 137 6B C/17 C		01
02	0521063064	SUPPORT TOWER SILO SEED CSU		08
03	0501010942	3/8" X 1-1/4" BOLT		16
04	0501010984	FLAT WASHER		16
05	0503010025	3/8" SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0502010175	HITCH CLAMP		08
08	0501011543	5/8" X 4" BOLT		16
09	0501012140	FLAT WASHER		16
10	0503012412	5/8 UNC SELF LOCKING NUT		16

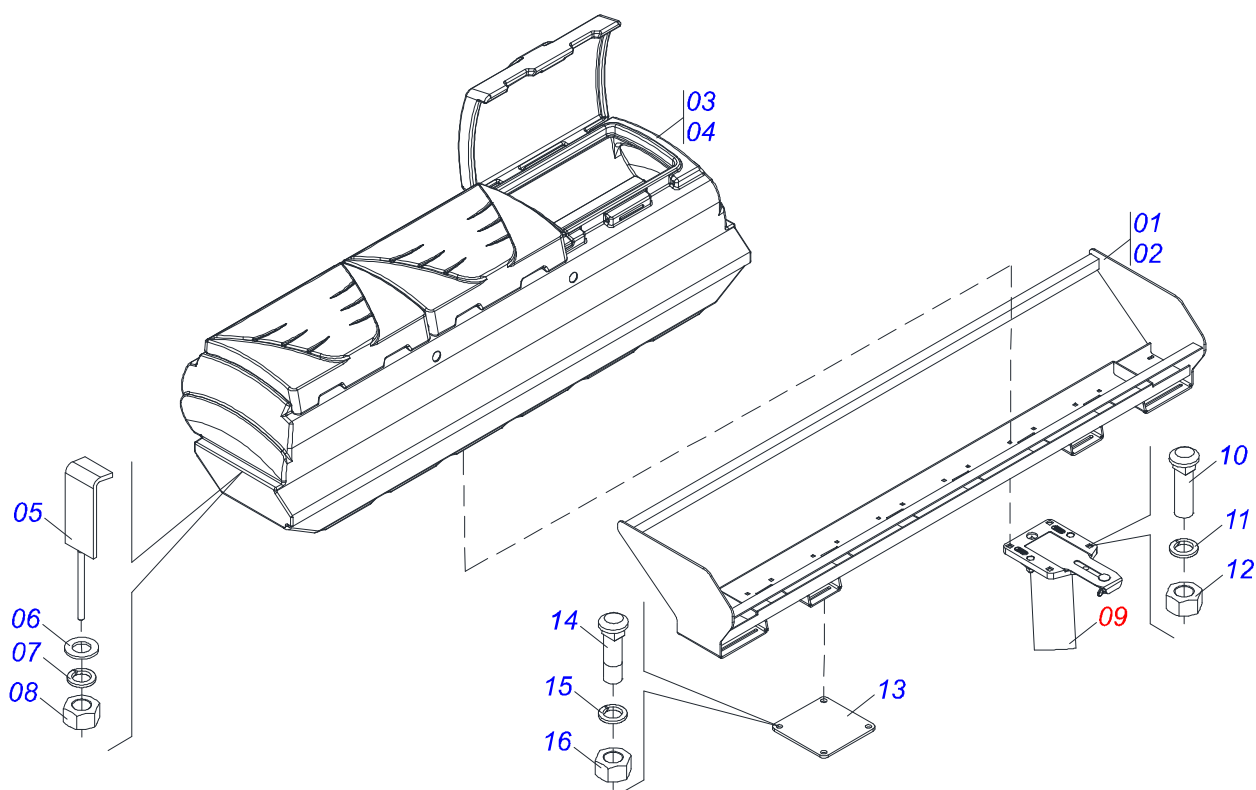


Item	Code	Description	See page	QT
01	0521064748	05 MOUTHS CSU SUPPORT		02
02	0521064813	SUPPORT SEED BOX ONLY 06 MOUTHS		02
03	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED		02
04	0503061899	REAR BEAN FERTILIZER ASSY		02
05	0521063401	SEED BOX ONLY FIXING LOCK		08
06	0501010984	FLAT WASHER		08
07	0503010025	3/8" SPRING WASHER		08
08	0503010026	3/8" NUT		08
09	0511057690	3" ARTICULATED SEED CONDUCTOR	125	17
10	0501010942	3/8" X 1-1/4" BOLT		68
11	0503010025	3/8" SPRING WASHER		68
12	0503010026	3/8" NUT		68
13	0571015773	SUPPORT SEED		05
14	0501011643	3/8 X 1"BOLT		20
15	0503010025	3/8" SPRING WASHER		20
16	0503010026	3/8" NUT		20

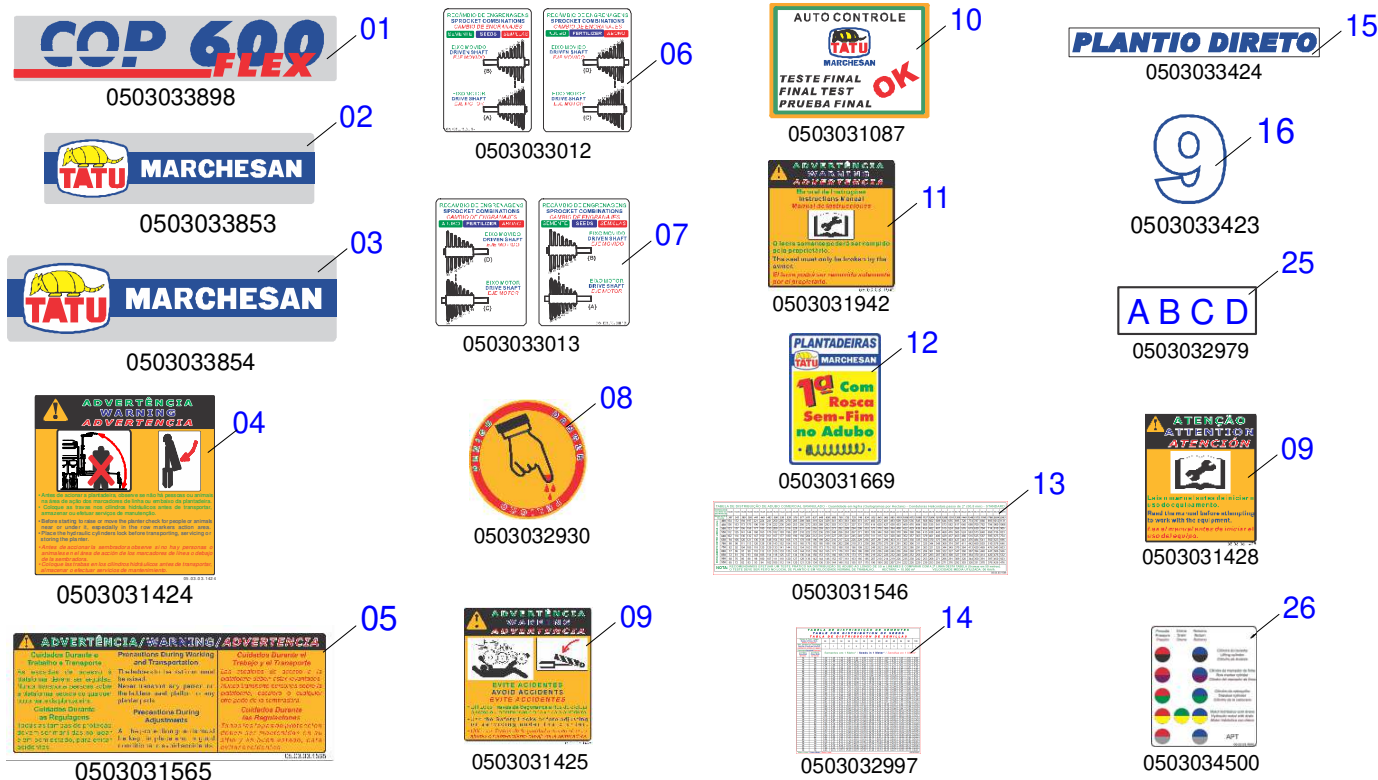


Item	Code	Description	See page	QT
01	0503033898	ADHESIVE LABEL		02
02	0503033853	ADHESIVE LABEL		02
03	0503033854	ADHESIVE LABEL		02
04	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
05	0503031565	ADHESIVE LABEL CARE		02
06	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
07	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
08	0503032930	ADHESIVE LABEL DANGER		04
09	0503031425	ADHESIVE LABEL ATTENTION		02
10	0503031087	ADHESIVE LABEL		01
11	0503031942	ADHESIVE LABEL		01
12	0503031669	ADHESIVE LABEL		01
13	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
15	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
16	0503033423	LABEL ADHESIVE NUMBER 9		02
17	0503032979	ADHESIVE LABEL LETTERS A B C D		02
18	0503031428	READ MANUAL DECAL		01
19	0503034500	ADHESIVE LABEL		01

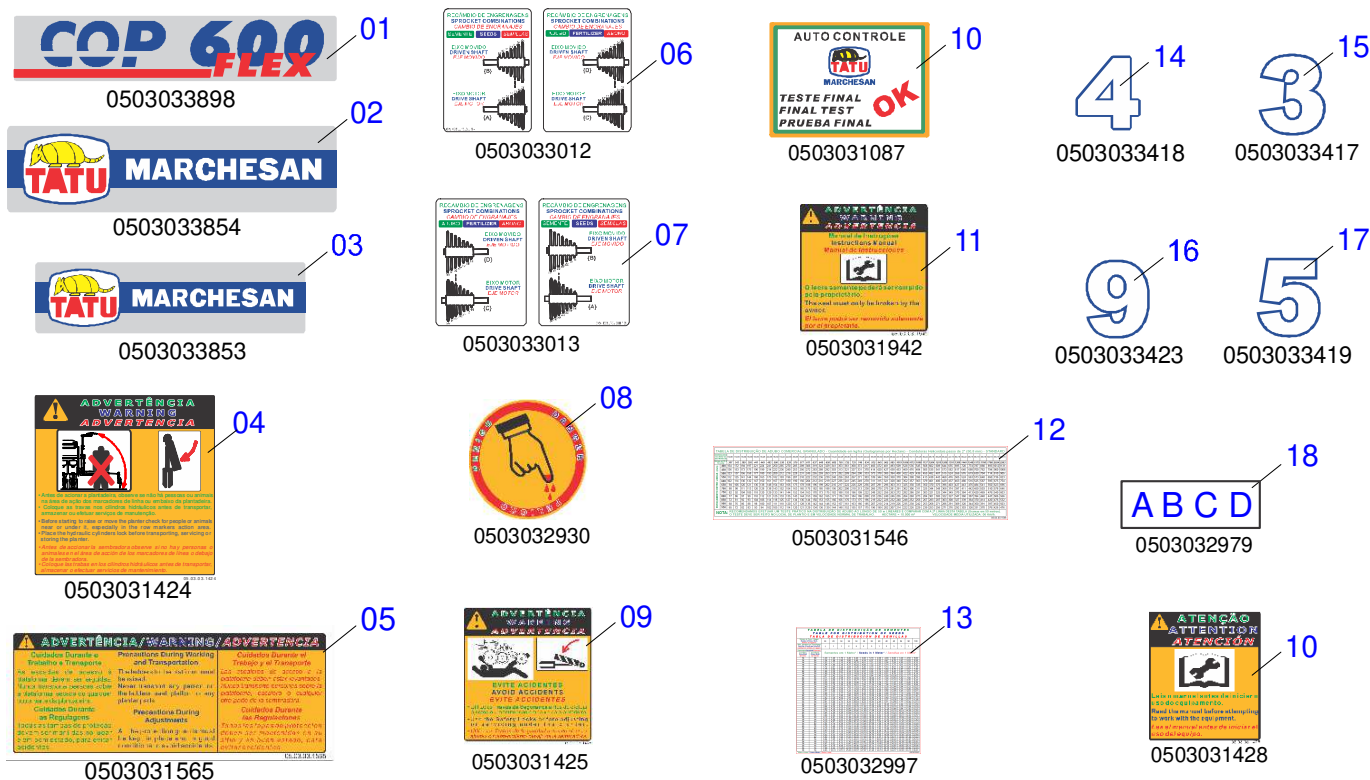


Item	Code	Description	See page	QT
01	0503033898	ADHESIVE LABEL		02
02	0503033854	ADHESIVE LABEL		02
03	0503033853	ADHESIVE LABEL		02
04	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
05	0503031565	ADHESIVE LABEL CARE		02
06	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
07	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
08	0503032930	ADHESIVE LABEL DANGER		04
09	0503031425	ADHESIVE LABEL ATTENTION		02
10	0503031087	ADHESIVE LABEL		01
11	0503031942	ADHESIVE LABEL		01
12	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
13	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
14	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
15	0503033417	ADHESIVE LABEL		02
16	0503033423	LABEL ADHESIVE NUMBER 9		02
17	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
18	0503032979	ADHESIVE LABEL LETTERS A B C D		02
19	0503031428	READ MANUAL DECAL		01

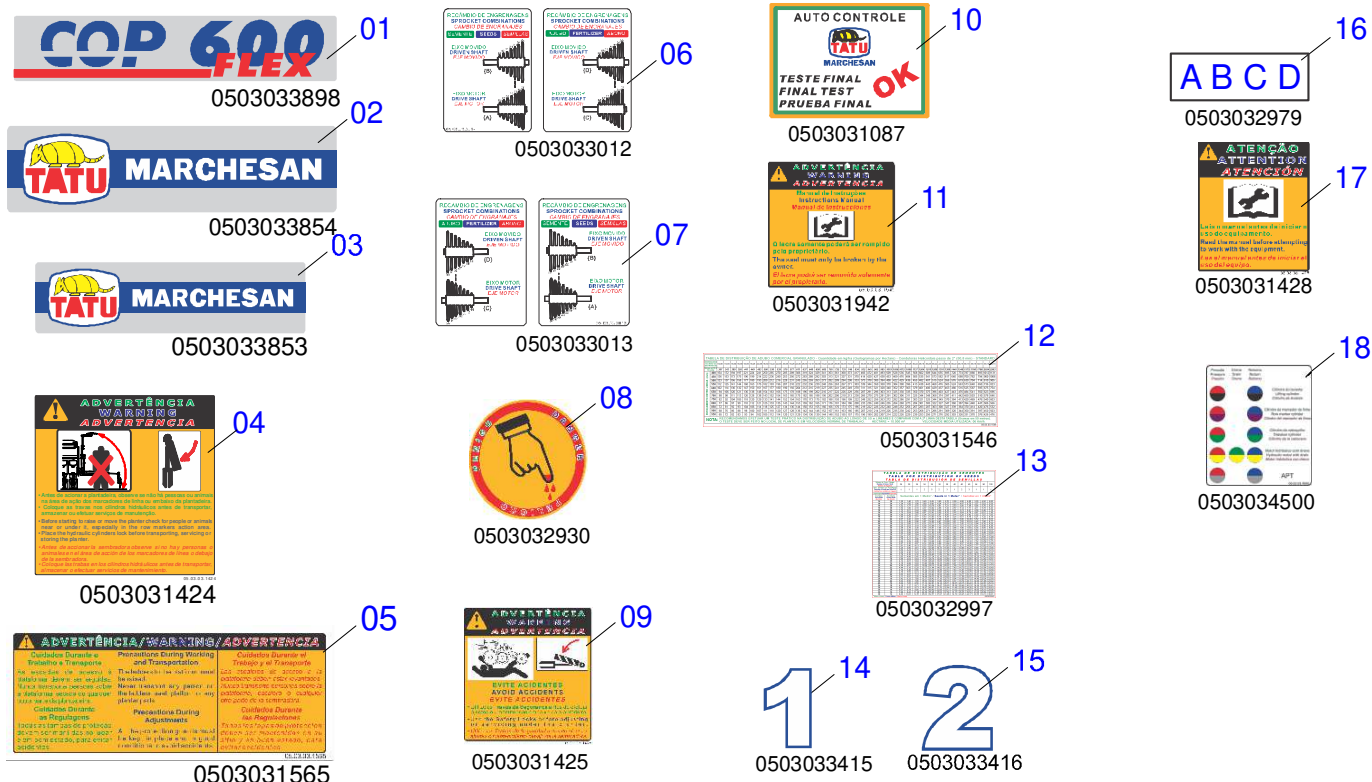


Item	Code	Description	See page	QT
01	0503033898	ADHESIVE LABEL		03
02	0503033854	ADHESIVE LABEL		03
03	0503033853	ADHESIVE LABEL		02
04	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
05	0503031565	ADHESIVE LABEL CARE		02
06	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
07	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
08	0503032930	ADHESIVE LABEL DANGER		04
09	0503031425	ADHESIVE LABEL ATTENTION		02
10	0503031087	ADHESIVE LABEL		01
11	0503031942	ADHESIVE LABEL		01
12	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
13	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
14	0503033415	ADHESIVE LABEL		02
15	0503033416	ADHESIVE LABEL		02
16	0503032979	ADHESIVE LABEL LETTERS A B C D		02
17	0503031428	READ MANUAL DECAL		01
18	0503034500	ADHESIVE LABEL		01

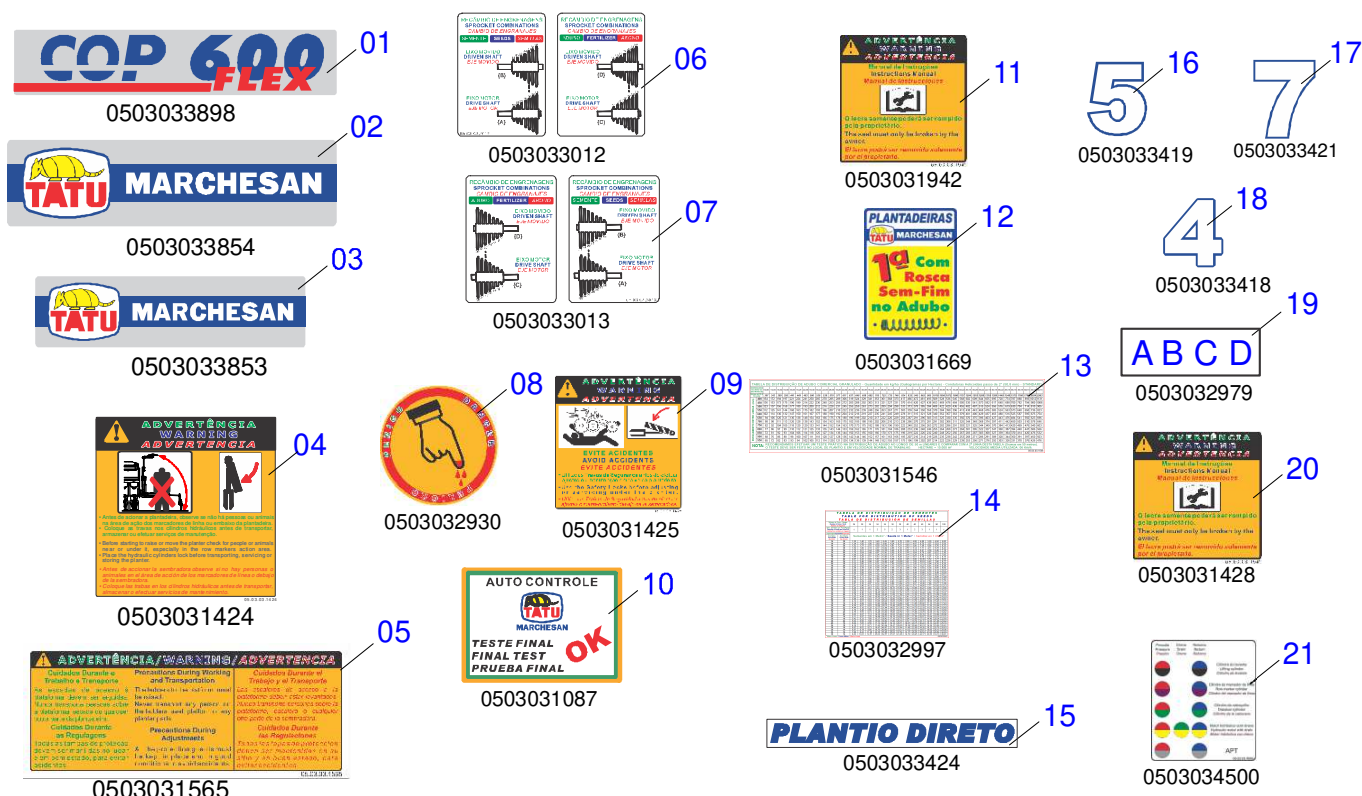


Item	Code	Description	See page	QT
01	0503033898	ADHESIVE LABEL		03
02	0503033854	ADHESIVE LABEL		03
03	0503033853	ADHESIVE LABEL		02
04	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
05	0503031565	ADHESIVE LABEL CARE		02
06	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
07	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
08	0503032930	ADHESIVE LABEL DANGER		04
09	0503031425	ADHESIVE LABEL ATTENTION		02
10	0503031087	ADHESIVE LABEL		01
11	0503031942	ADHESIVE LABEL		01
12	0503031669	ADHESIVE LABEL		01
13	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
15	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
16	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		04
17	0503033421	ADHESIVE LABEL 7 NUMBER FOR PLANTING		02
18	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
19	0503032979	ADHESIVE LABEL LETTERS A B C D		02
20	0503031428	READ MANUAL DECAL		01
21	0503034500	ADHESIVE LABEL		01

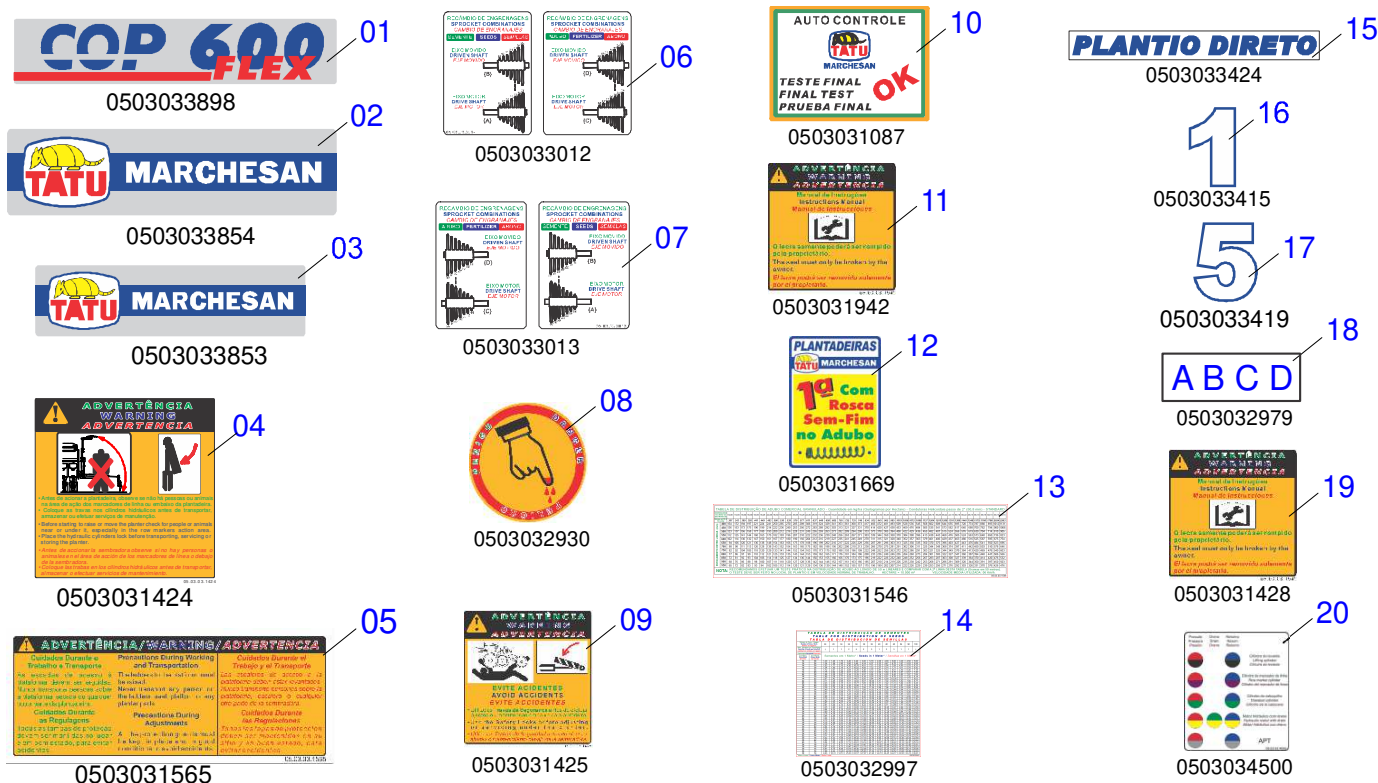


Item	Code	Description	See page	QT
01	0503033898	ADHESIVE LABEL		04
02	0503033854	ADHESIVE LABEL		04
03	0503033853	ADHESIVE LABEL		02
04	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
05	0503031565	ADHESIVE LABEL CARE		02
06	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
07	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
08	0503032930	ADHESIVE LABEL DANGER		04
09	0503031425	ADHESIVE LABEL ATTENTION		02
10	0503031087	ADHESIVE LABEL		01
11	0503031942	ADHESIVE LABEL		01
12	0503031669	ADHESIVE LABEL		01
13	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
15	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
16	0503033415	ADHESIVE LABEL		02
17	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
18	0503032979	ADHESIVE LABEL LETTERS A B C D		02
19	0503031428	READ MANUAL DECAL		01
20	0503034500	ADHESIVE LABEL		01

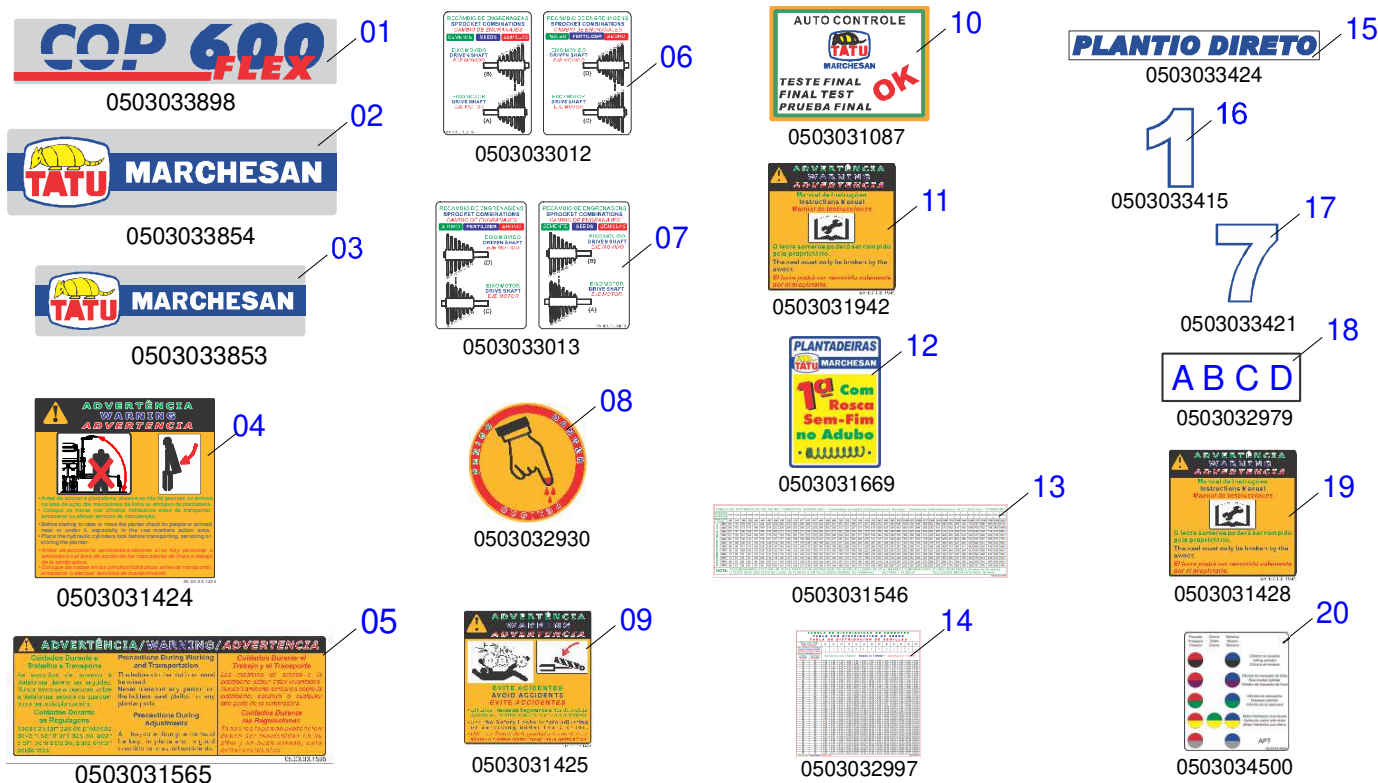


Item	Code	Description	See page	QT
01	0503033898	ADHESIVE LABEL		04
02	0503033854	ADHESIVE LABEL		04
03	0503033853	ADHESIVE LABEL		02
04	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
05	0503031565	ADHESIVE LABEL CARE		02
06	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
07	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
08	0503032930	ADHESIVE LABEL DANGER		04
09	0503031425	ADHESIVE LABEL ATTENTION		02
10	0503031087	ADHESIVE LABEL		01
11	0503031942	ADHESIVE LABEL		01
12	0503031669	ADHESIVE LABEL		01
13	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
15	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
16	0503033415	ADHESIVE LABEL		02
17	0503033421	ADHESIVE LABEL 7 NUMBER FOR PLANTING		02
18	0503032979	ADHESIVE LABEL LETTERS A B C D		02
19	0503031428	READ MANUAL DECAL		01
20	0503034500	ADHESIVE LABEL		01

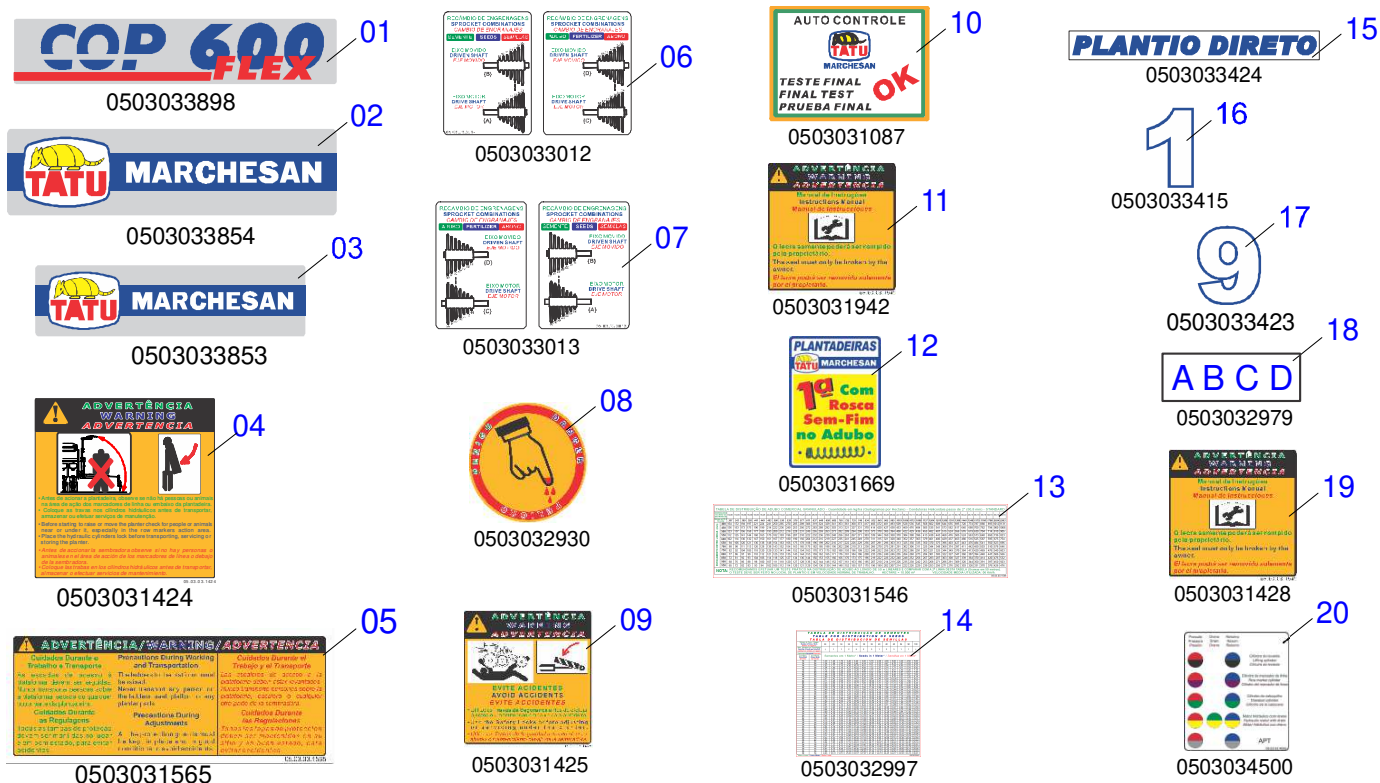


Item	Code	Description	See page	QT
01	0503033898	ADHESIVE LABEL		04
02	0503033854	ADHESIVE LABEL		04
03	0503033853	ADHESIVE LABEL		02
04	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
05	0503031565	ADHESIVE LABEL CARE		02
06	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
07	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
08	0503032930	ADHESIVE LABEL DANGER		04
09	0503031425	ADHESIVE LABEL ATTENTION		02
10	0503031087	ADHESIVE LABEL		01
11	0503031942	ADHESIVE LABEL		01
12	0503031669	ADHESIVE LABEL		01
13	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
15	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
16	0503033415	ADHESIVE LABEL		02
17	0503033423	LABEL ADHESIVE NUMBER 9		02
18	0503032979	ADHESIVE LABEL LETTERS A B C D		02
19	0503031428	READ MANUAL DECAL		01
20	0503034500	ADHESIVE LABEL		01

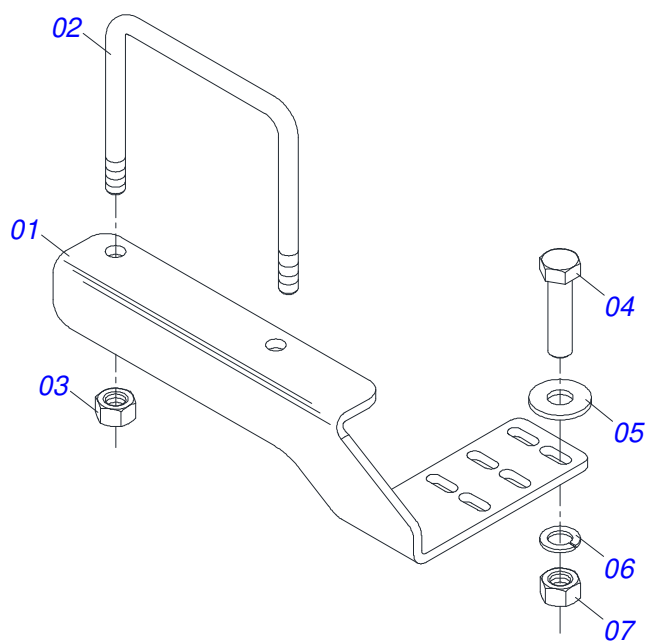


Item	Code	Description	See page	QT
01	0561019899	RIGHT SUPPORT FIXER RECAMBIO		01
02	0521010718	5/8" U BOLT		01
03	0503012412	5/8 UNC SELF LOCKING NUT		02
04	0503011082	C1/2" X 1.3/4" SCREW		02
05	0511017302	FLAT WASHER		04
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2" NUT		02

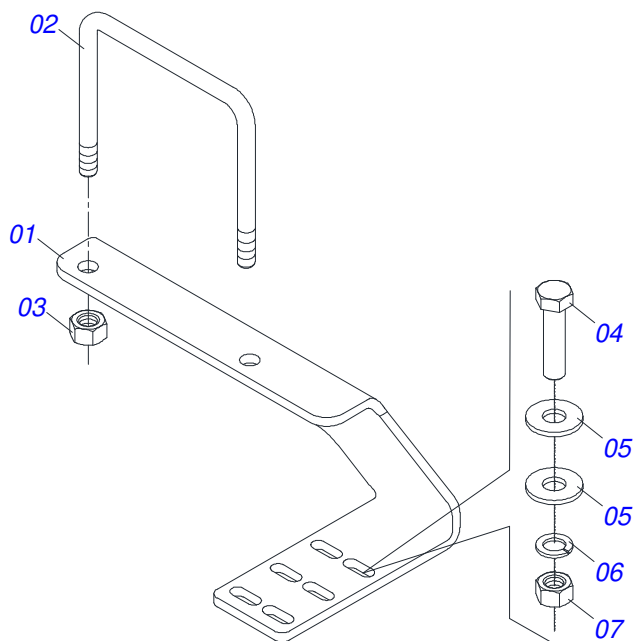

Item	Code	Description	See page	QT
01	0561019898	LEFT SUPPORT FIXER RECAMBIO		01
02	0521010718	5/8" U BOLT		01
03	0503012412	5/8 UNC SELF LOCKING NUT		02
04	0503011082	C1/2" X 1.3/4" SCREW		02
05	0511017302	FLAT WASHER		04
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2" NUT		02

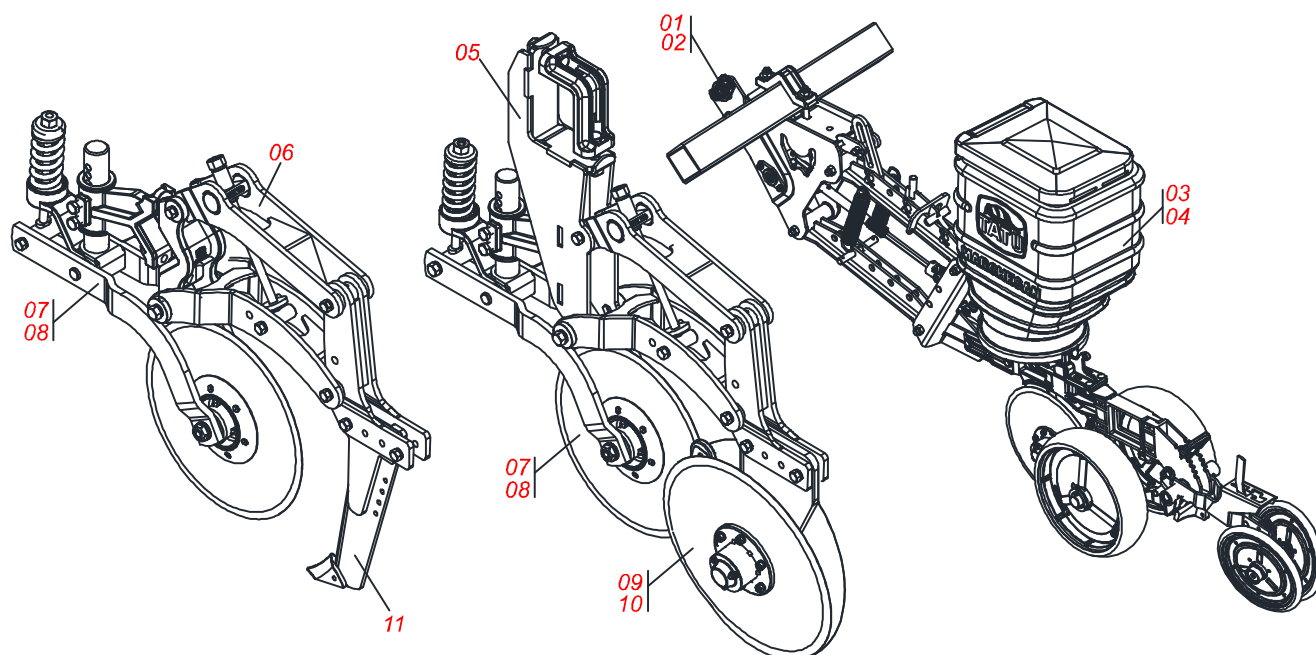


Item	Code	Description	See page	07 09 11 13 15 17 19
01	0511052411	FRONT SEED LONG ROW WITH CARDAN	148	03 04 05 06 05 08 09
02	0511052410	FRONT SEED SHORT ROW WITH CARDAN	149	04 05 06 07 06 09 10
03	0909093546	REAR SEED LINE	151	04 05 06 07 08 09 10
05	0511053023	LONG FERTILIZER LINE	169	03 04 05 06 07 08 09
06	0511053024	FERTILIZER SHORT LINE	174	04 05 06 07 08 09 10
07	0511051818	DISC CUT 18 SEMI MOUNTED	176	07 09 11 13 15 17 19
08	0511051819	DC 20 SEMI MOUNTED	178	07 09 11 13 15 17 19
09	0501052976	RIGHT FERTILIZER DOUBLE DISC	180	03 04 05 06 07 08 09
10	0501052977	LEFT FERTILIZER DOUBLE DISC	181	04 05 06 07 08 09 10
11	0501110231	SCARIFIER HEAD WITH SPIKE 0061		07 09 11 13 15 17 19

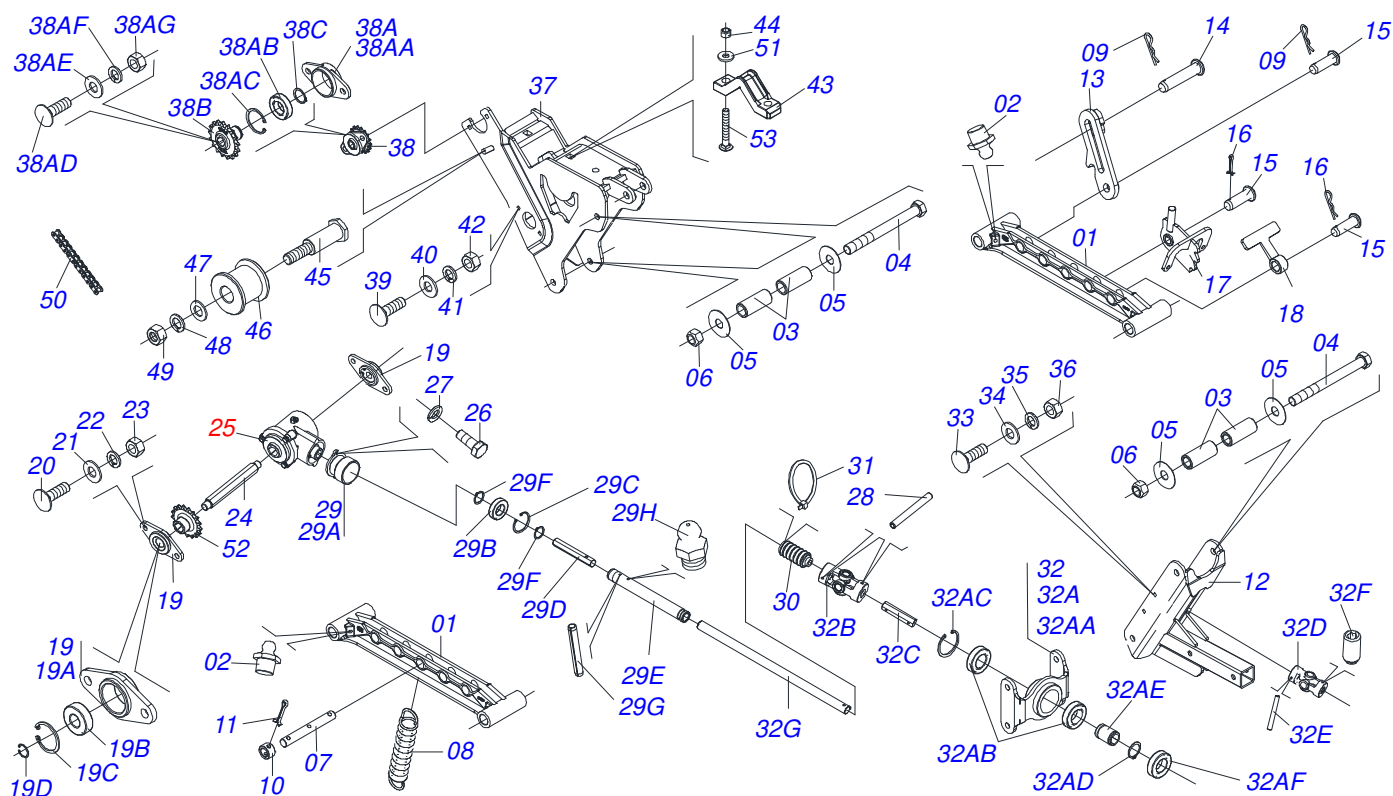


Item	Code	Description	See page	QT
001	0502012784	DRIVER PIVOT		02
002	0503010002	1800 GREASE FITTING		04
003	0531015151	0.6" X 1" X 2.4" SLEEVE		08
004	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
005	0531015184	FLAT WASHER		08
006	0503012412	5/8 UNC SELF LOCKING NUT		04
007	0571012449	CONTROL AXLE		01
008	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING		02
009	0503030168	CUPILLA		02
010	0571012448	LOCK SLEEVE AXLE REGULATION		01
011	0503010131	3/16" X 1-1/2" COTTERPIN		01
012	0521063526	SEED LINE REAR FRAME		01
013	0521065677	LIMITER		01
014	0571012443	COUPLING SHAFT		01
015	0571012442	COUPLING SHAFT		03
016	0503010131	3/16" X 1-1/2" COTTERPIN		02
017	0502012785	SEED ROW ADJUSTMENT LEVER ASSY		01
018	0502012814	BOX LEVER LOCK		01
019	0511054635	BEARING AXLE BODY		02
019A	0502012718	BEARIN BODY		01
019B	0503012882	BEARING		01
019C	0503017011	SEAL RING		01
019D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
020	0503011953	5/16" X 1" BOLT		04
021	0501010694	FLAT WASHER		04
022	0503010179	LOCK WASHER		04
023	0503010337	5/16" NUT		04
024	0571012441	TRANSMISSION AXLE		01
025	0511054884	TRANSMISSION BOX	150	01
026	0503011378	M6X1X16 C S 8.8 ZN BOLT		02
027	0503015110	M06 SPRING WASHER		02

Item	Code	Description	See page	QT
028	0503011855	0.2" X 1.8" SPRING PIN		01
029	0511052393	BEARING FOLLOWER ROW ASSY		01
029A	0521063532	BEARING FOLLOWER ROW ASSY		01
029B	0503011410	ROLLER BEARING		01
029C	0503011105	SEAL RING		01
029D	0571012450	COP FLEX AXLE		01
029E	0571012459	COP FLEX AXLE		01
029F	0503010406	501025 CLAMPING RING (FOR AXLE)		02
029G	0503015356	SPRING PIN		01
029H	0503010691	1/4" GREASE FITTING		01
030	0503032984	HOOD HEX AXLE ROW		01
031	0503013100	NYLON CLAMP		01
032	0521041482	BEARING ROW SEED ASSY		01
032A	0511052413	ROW SEED BEARING		01
032AA	0521063530	ROW BEARING		01
032AB	0503011410	ROLLER BEARING		02
032AC	0503011105	SEAL RING		01
032AD	0503010406	501025 CLAMPING RING (FOR AXLE)		02
032AE	0571017815	BEARING AXLE BODY		01
032AF	0503017008	SEAL RING		01
032B	0501056296	UNIVERSAL JOINT		01
032C	0571017900	5/8" X 77" HEX AXLE		01
032D	0561014778	HEX UNIVERSAL JOINT		01
032E	0503011855	0.2" X 1.8" SPRING PIN		03
032F	0503013958	1/4" X 1" BOLT		01
032G	0571012452	HEX AXLE		01
033	0503011953	5/16" X 1" BOLT		04
034	0501010694	FLAT WASHER		04
035	0503010179	LOCK WASHER		04
036	0503010337	5/16" NUT		04
037	0521063524	FRAME FRONT LINE SEED		01
038	0511050609	BEARING WITH 17Z GEAR ASSY		01
038A	0511050617	FRONT SEED ROW BEARING		01
038AA	0502011697	BEARING OF THE GEAR BOX		01
038AB	0503011410	ROLLER BEARING		01
038AC	0503011105	SEAL RING		01
038AD	0503011953	5/16" X 1" BOLT		02
038AE	0501010694	FLAT WASHER		02
038AF	0503010179	LOCK WASHER		02
038AG	0503010337	5/16" NUT		02
038B	0561017909	17Z GEAR WITH HEX HOLE		01
038C	0503010406	501025 CLAMPING RING (FOR AXLE)		01
039	0503011953	5/16" X 1" BOLT		02
040	0501010694	FLAT WASHER		02
041	0503010179	LOCK WASHER		02
042	0503010337	5/16" NUT		02
043	1902010175	HITCH CLAMP		01
044	0503010811	5/8" UNF SELF ADJUSTING NUT		02
045	0531019479	AXLE CHAIN GEAR		01
046	0541016454	PULLEY		01
047	0503011828	FLAT WASHER		01
048	0503010019	1/2" SPRING WASHER		01
049	0503010060	1/2" NUT		01
050	0503012142	40-1 CHAIN X 61 LINK + MENDING		01
051	0501012140	FLAT WASHER		02
052	0502012782	17Z GEAR WITH HEX HOLE		01
053	0503817859	5/8" X 4.3/4" BOLT		02

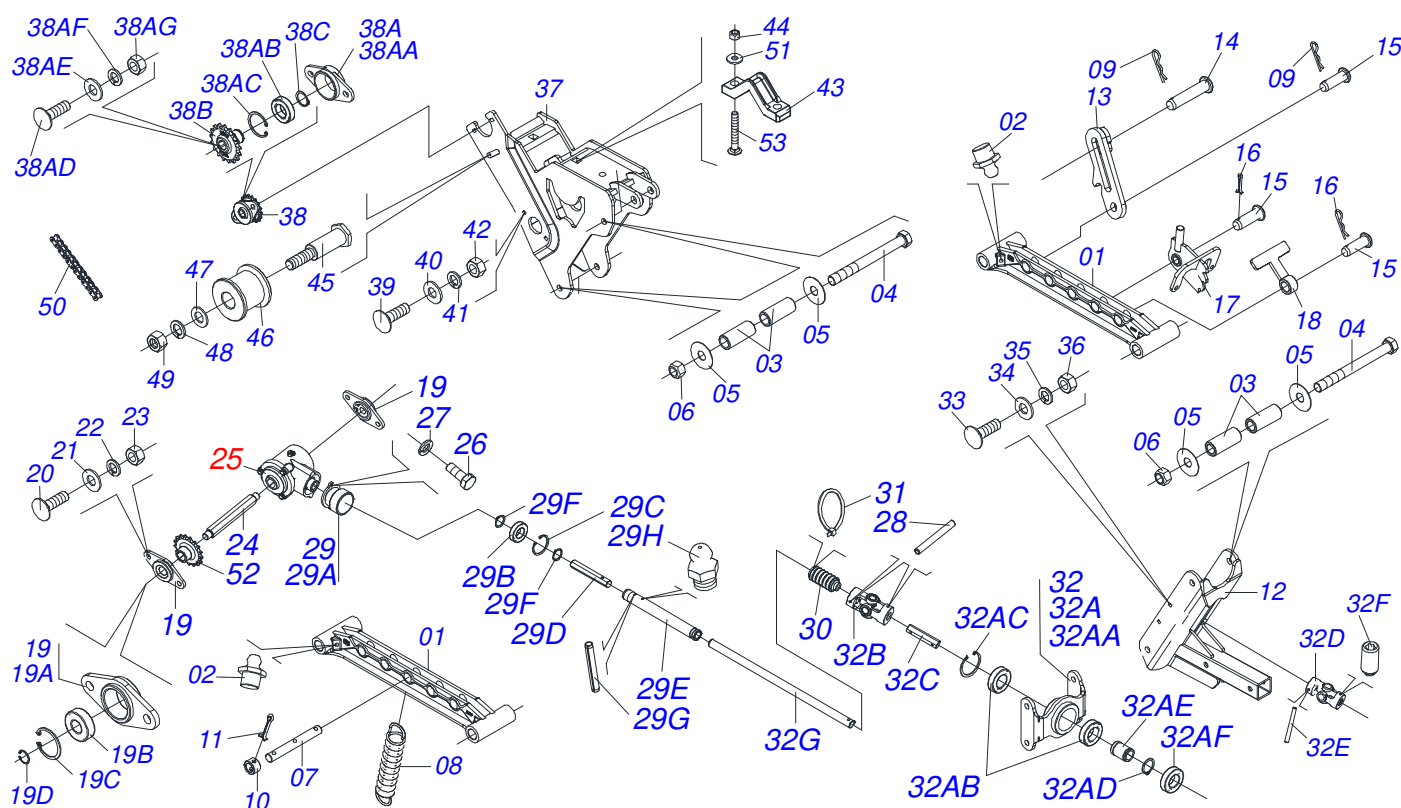


Item	Code	Description	See page	QT
001	0502012784	DRIVER PIVOT		02
002	0503010002	1800 GREASE FITTING		04
003	0531015151	0.6" X 1" X 2.4" SLEEVE		08
004	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
005	0531015184	FLAT WASHER		08
006	0503012412	5/8 UNC SELF LOCKING NUT		04
007	0571012449	CONTROL AXLE		01
008	0503030024	1.7" X10.2" X 0.2" EXTENSION SPRING		02
009	0503030168	CUPILLA		02
010	0571012448	LOCK SLEEVE AXLE REGULATION		01
011	0503010131	3/16" X 1-1/2" COTTERPIN		01
012	0521063526	SEED LINE REAR FRAME		01
013	0521065677	LIMITER		01
014	0571012443	COUPLING SHAFT		01
015	0571012442	COUPLING SHAFT		03
016	0503010131	3/16" X 1-1/2" COTTERPIN		02
017	0502012785	SEED ROW ADJUSTMENT LEVER ASSY		01
018	0502012814	BOX LEVER LOCK		01
019	0511054635	BEARING AXLE BODY		02
019A	0502012718	BEARIN BODY		01
019B	0503012882	BEARING		01
019C	0503017011	SEAL RING		01
019D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
020	0503011953	5/16" X 1" BOLT		04
021	0501010694	FLAT WASHER		04
022	0503010179	LOCK WASHER		04
023	0503010337	5/16" NUT		04
024	0571012441	TRANSMISSION AXLE		01
025	0511054884	TRANSMISSION BOX	150	01
026	0503011378	M6X1X16 C S 8.8 ZN BOLT		02
027	0503015110	M06 SPRING WASHER		02

Item	Code	Description	See page	QT
028	0503011855	0.2" X 1.8" SPRING PIN		01
029	0511052393	BEARING FOLLOWER ROW ASSY		01
029A	0521063532	BEARING FOLLOWER ROW ASSY		01
029B	0503011410	ROLLER BEARING		01
029C	0503011105	SEAL RING		01
029D	0571012450	COP FLEX AXLE		01
029E	0571012459	COP FLEX AXLE		01
029F	0503010406	501025 CLAMPING RING (FOR AXLE)		02
029G	0503015356	SPRING PIN		01
029H	0503010691	1/4" GREASE FITTING		01
030	0503032984	HOOD HEX AXLE ROW		01
031	0503013100	NYLON CLAMP		01
032	0521041482	BEARING ROW SEED ASSY		01
032A	0511052413	ROW SEED BEARING		01
032AA	0521063530	ROW BEARING		01
032AB	0503011410	ROLLER BEARING		02
032AC	0503011105	SEAL RING		01
032AD	0503010406	501025 CLAMPING RING (FOR AXLE)		02
032AE	0571017815	BEARING AXLE BODY		01
032AF	0503017008	SEAL RING		01
032B	0501056296	UNIVERSAL JOINT		01
032C	0571017900	5/8" X 77" HEX AXLE		01
032D	0561014778	HEX UNIVERSAL JOINT		01
032E	0503011855	0.2" X 1.8" SPRING PIN		03
032F	0503013958	1/4" X 1" BOLT		01
032G	0571012452	HEX AXLE		01
033	0503011953	5/16" X 1" BOLT		04
034	0501010694	FLAT WASHER		04
035	0503010179	LOCK WASHER		04
036	0503010337	5/16" NUT		04
037	0521063525	SHORT SEED ROW FRONT		01
038	0511050609	BEARING WITH 17Z GEAR ASSY		01
038A	0511050617	FRONT SEED ROW BEARING		01
038AA	0502011697	BEARING OF THE GEAR BOX		01
038AB	0503011410	ROLLER BEARING		01
038AC	0503011105	SEAL RING		01
038AD	0503011953	5/16" X 1" BOLT		02
038AE	0501010694	FLAT WASHER		02
038AF	0503010179	LOCK WASHER		02
038AG	0503010337	5/16" NUT		02
038B	0561017909	17Z GEAR WITH HEX HOLE		01
038C	0503010406	501025 CLAMPING RING (FOR AXLE)		01
039	0503011953	5/16" X 1" BOLT		02
040	0501010694	FLAT WASHER		02
041	0503010179	LOCK WASHER		02
042	0503010337	5/16" NUT		02
043	1902010175	HITCH CLAMP		01
044	0503010811	5/8" UNF SELF ADJUSTING NUT		02
045	0531019479	AXLE CHAIN GEAR		01
046	0541016454	PULLEY		01
047	0503011828	FLAT WASHER		01
048	0503010019	1/2" SPRING WASHER		01
049	0503010060	1/2" NUT		01
050	0503016501	40-1 X 49 CHAIN LINK + MENDING		01
051	0501012140	FLAT WASHER		02
052	0502012782	17Z GEAR WITH HEX HOLE		01
053	0503817859	5/8" X 4.3/4" BOLT		02

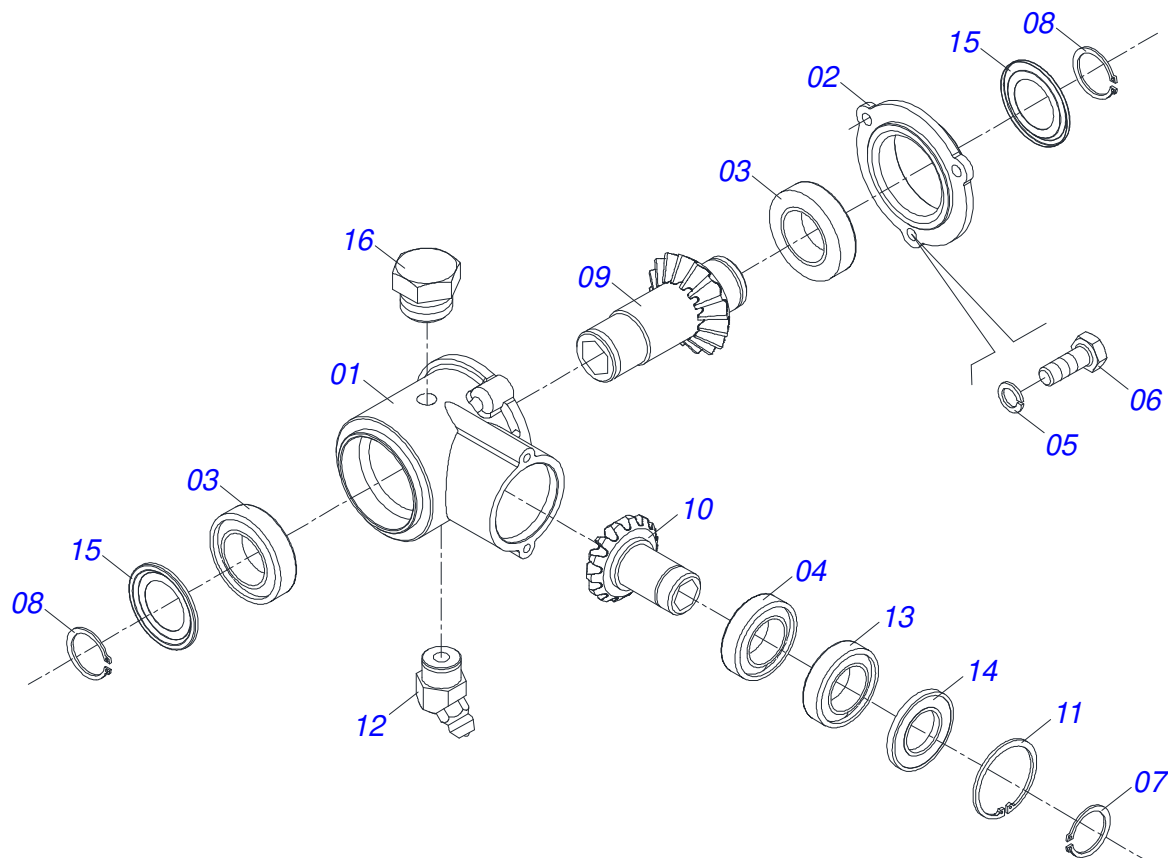


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0502040857	CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503010003	1845 GREASE FITTING		01
13	0503011409	6005 Z BALL BEARING		01
14	0503017008	SEAL RING		01
15	0503017007	SEAL RING		02
16	0511017907	1/8" BSPT X 6 PLUG		01

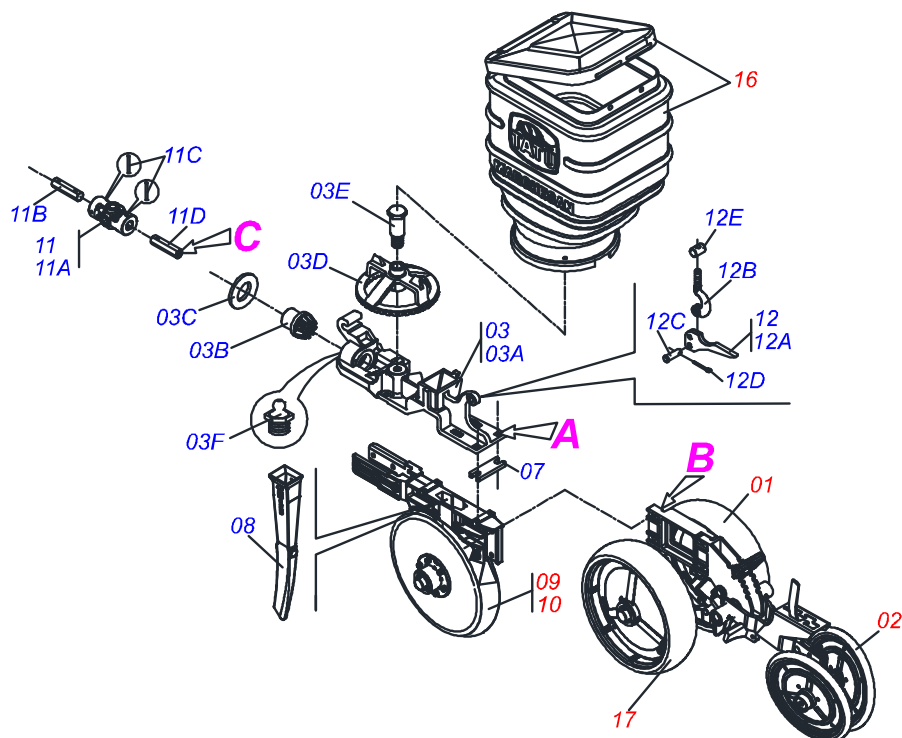


Item	Code	Description	See page	QT
000	0521041848	REAR RIGHT SEED ROW		01
000A	0521041849	REAR LEFT SEED ROW		01
001	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	152	01
002	0501052908	COMPACTOR WHEEL WITH BEARING	158	01
003	0501059648	SEED BOX FIXING BASE		01
003A	0502012624	SEED BOX FIXING BASE		01
003B	0502012639	12Z LOWER CONICAL GEAR		01
003C	0501013354	FLAT WASHER		01
003D	0502011418	40Z CONICAL GEAR		01
003E	0511018700	AXLE		01
003F	0503010002	1800 GREASE FITTING		01
004	0503015920	3/8" UNC X 1.3/4" BOLT		01
005	0503011443	3/8" SPRING WASHER		01
006	0503010026	3/8" NUT		01
007	0571012451	CHOCK		01
008	0503033124	SOCKET SEED		01
009	0501059631	DDD SEED 15 X 15 RIGHT	161	01
010	0501059632	DDD SEED 15X15 LEFT	164	01
011	0511053284	UNIVERSAL JOINT WITH HEX AXLE		01
011A	0501056296	UNIVERSAL JOINT		01
011B	0551017540	5/8" X 73 AXLE HEX		01
011C	0503011855	0.2" X 1.8" SPRING PIN		01
011D	0571012447	TRANSMISSION AXLE		01
011E	0503010237	3/8" X 1" BOLT		01
011F	0501010984	FLAT WASHER		01
011G	0503010025	3/8" SPRING WASHER		01
012	0511050809	SEMIFINISHED FAST CLOSING SET		01
012A	0541016855	SPEED ??LOCK LEVER ASSY		01
012B	0561019318	PRISONER CLOSING FAST		01
012C	0551018050	FAST BOLT GUIDE AXLE		01
012D	0503010257	1/8" X 1" COTTERPIN		01


Item	Code	Description	See page	QT
012E	0561019270	FAST BOLT ADJUSTMENT		01
013	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
014	0503011440	SPRING WASHER		01
015	0503010060	1/2" NUT		01
016	0501052234	ASSY SEED SYSTEM	166	01
017	0501052538	DEPTH BAND WITH ARMS	165	01

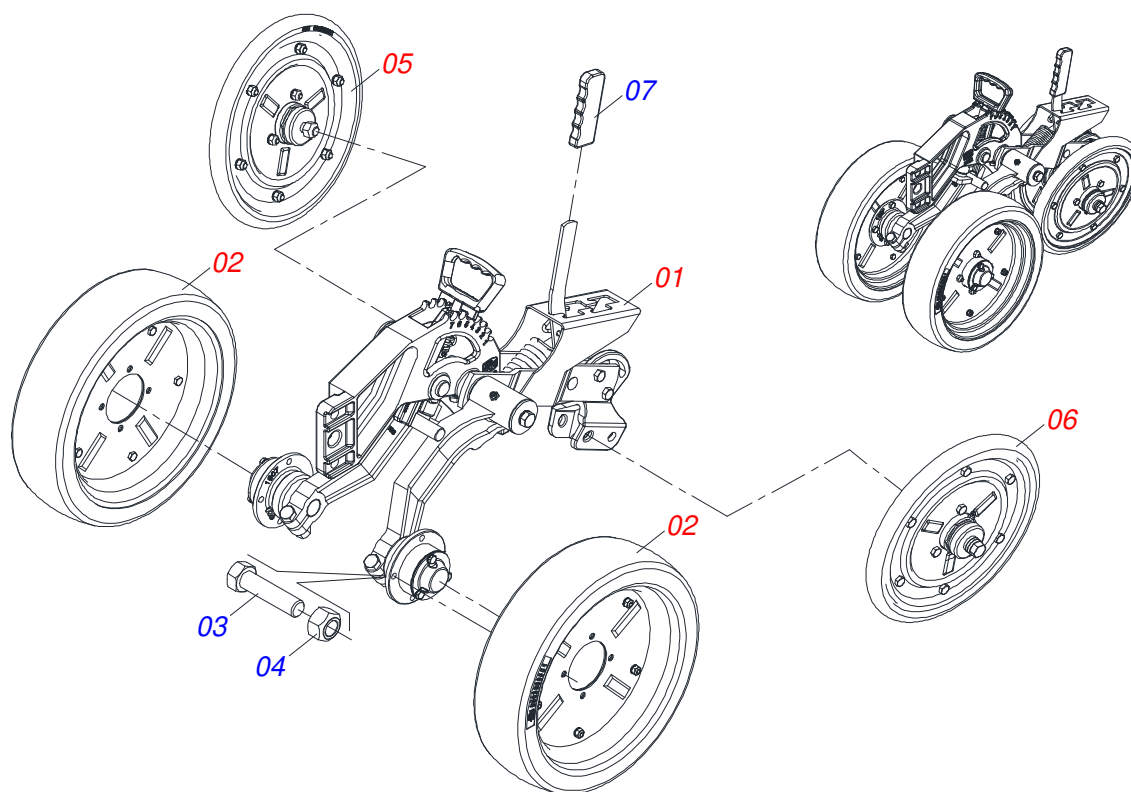


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	153	01
02	0501052538	DEPTH BAND WITH ARMS	165	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	159	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	160	01
07	0503033942	COVER REGULATORY WHEEL		01

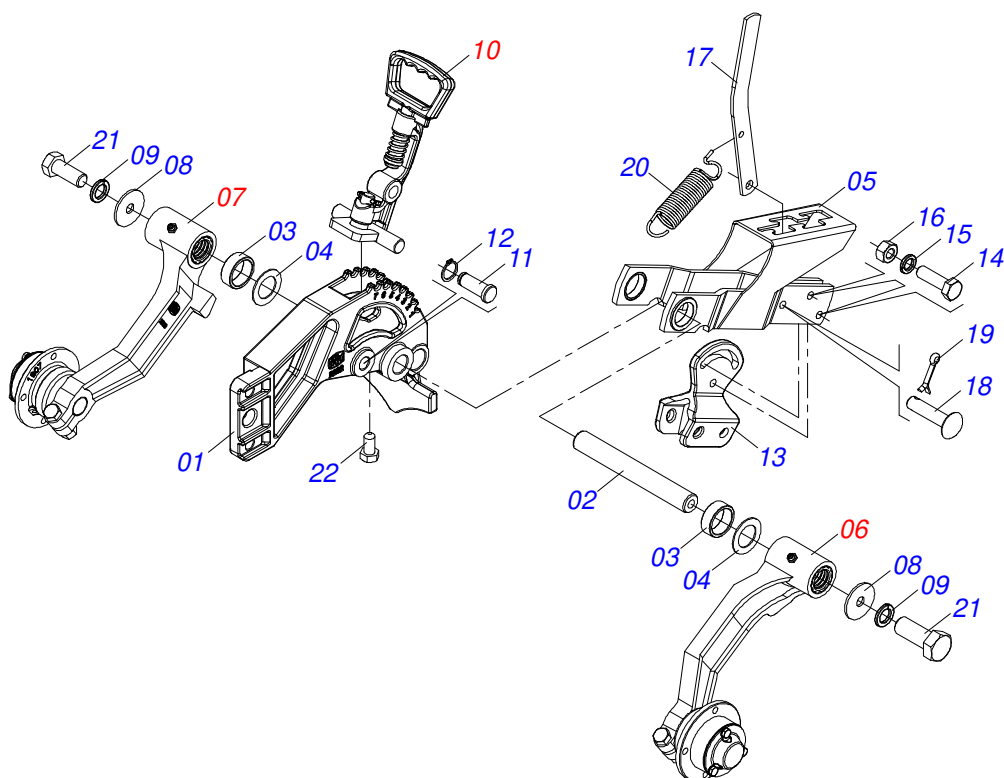


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	154	01
07	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	155	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	157	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	SCREWEW 3/8 UNC X 3/4		01

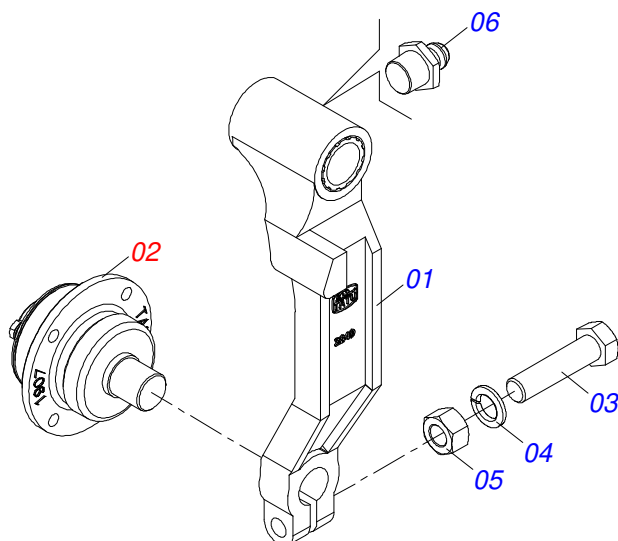


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL BOX	156	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01

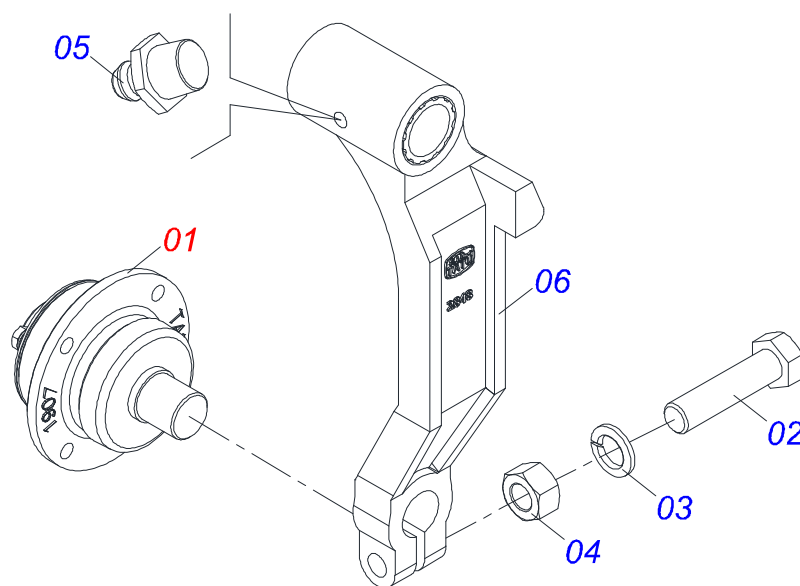


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL BOX	156	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

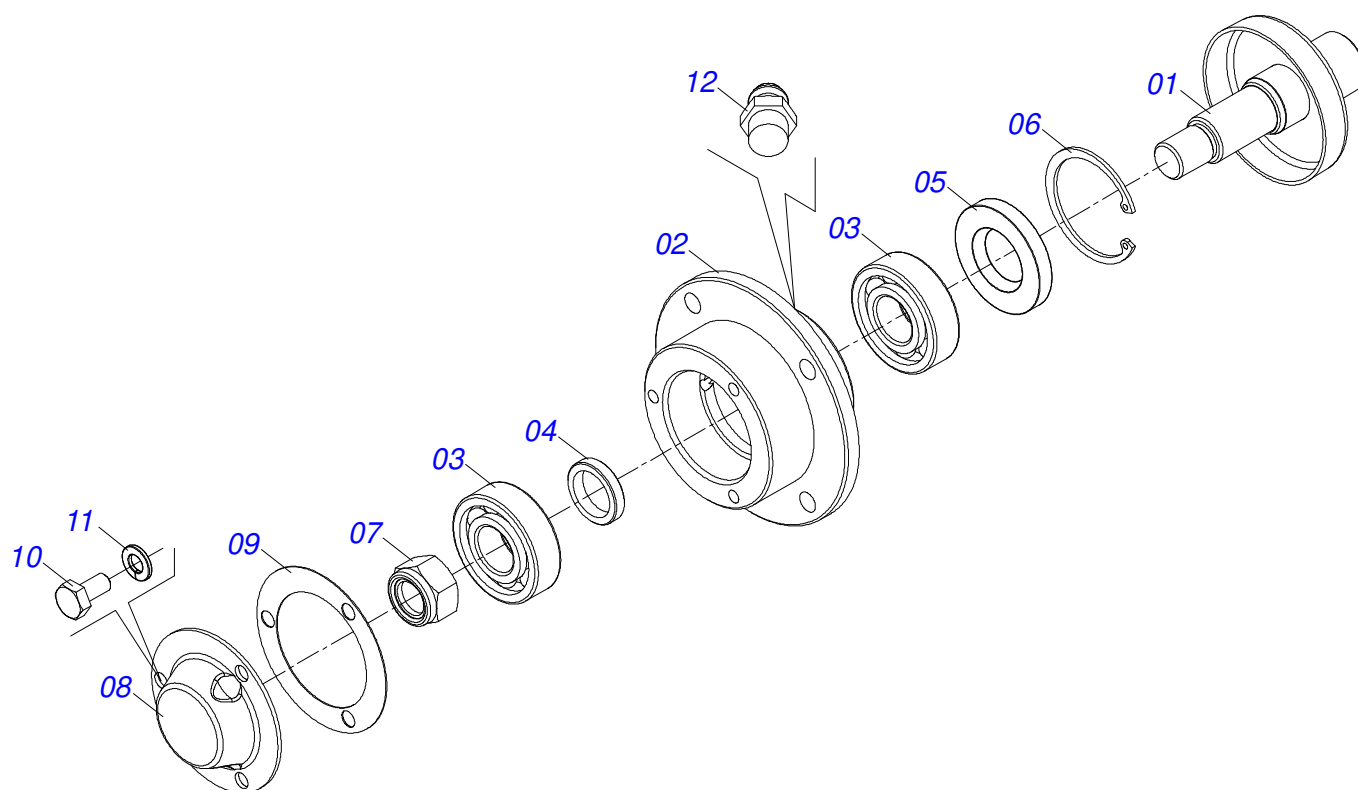


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	COVER DEPTH		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

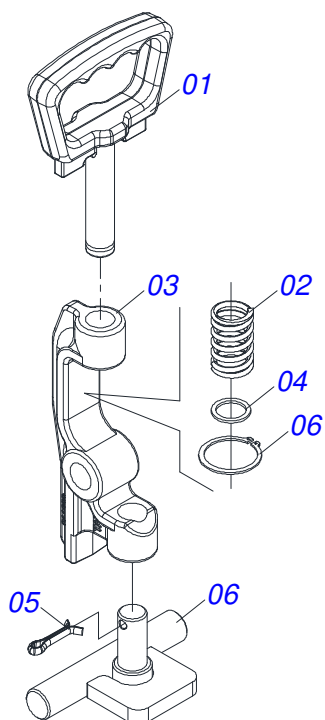


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	SEED SIST CONTROL DEPTH LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

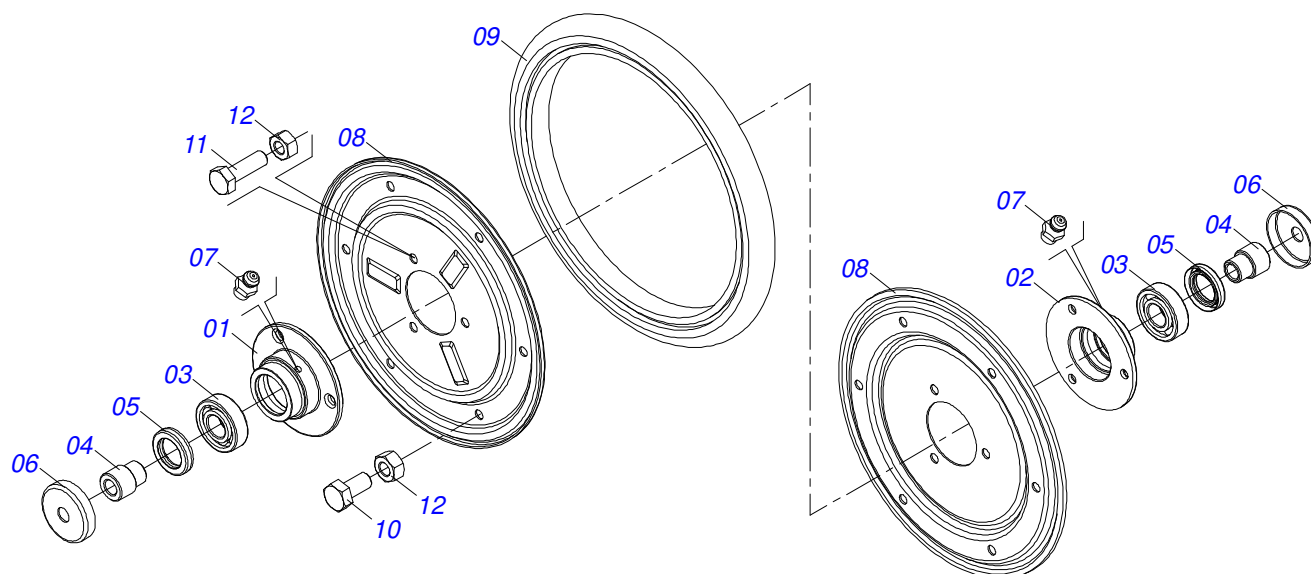


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

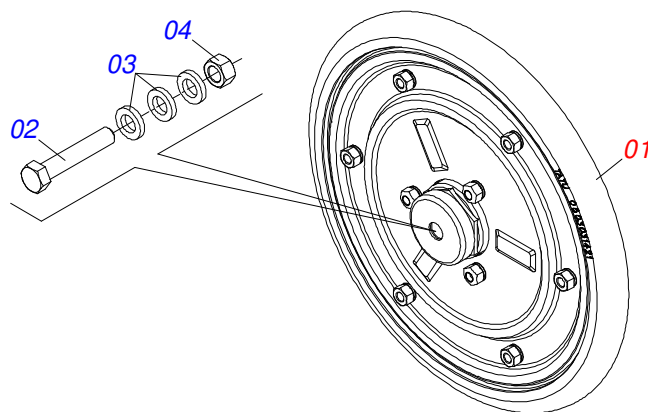


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	158	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

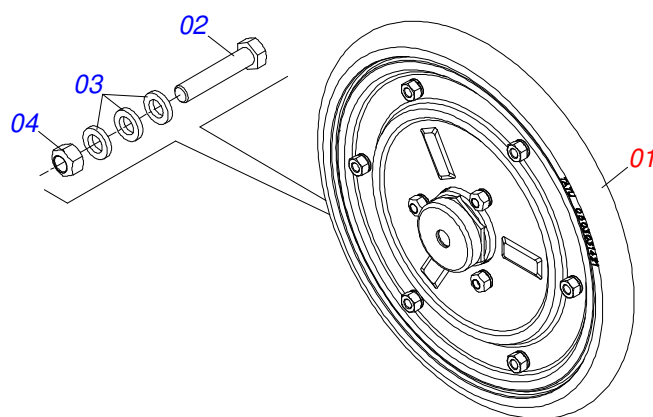


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	158	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

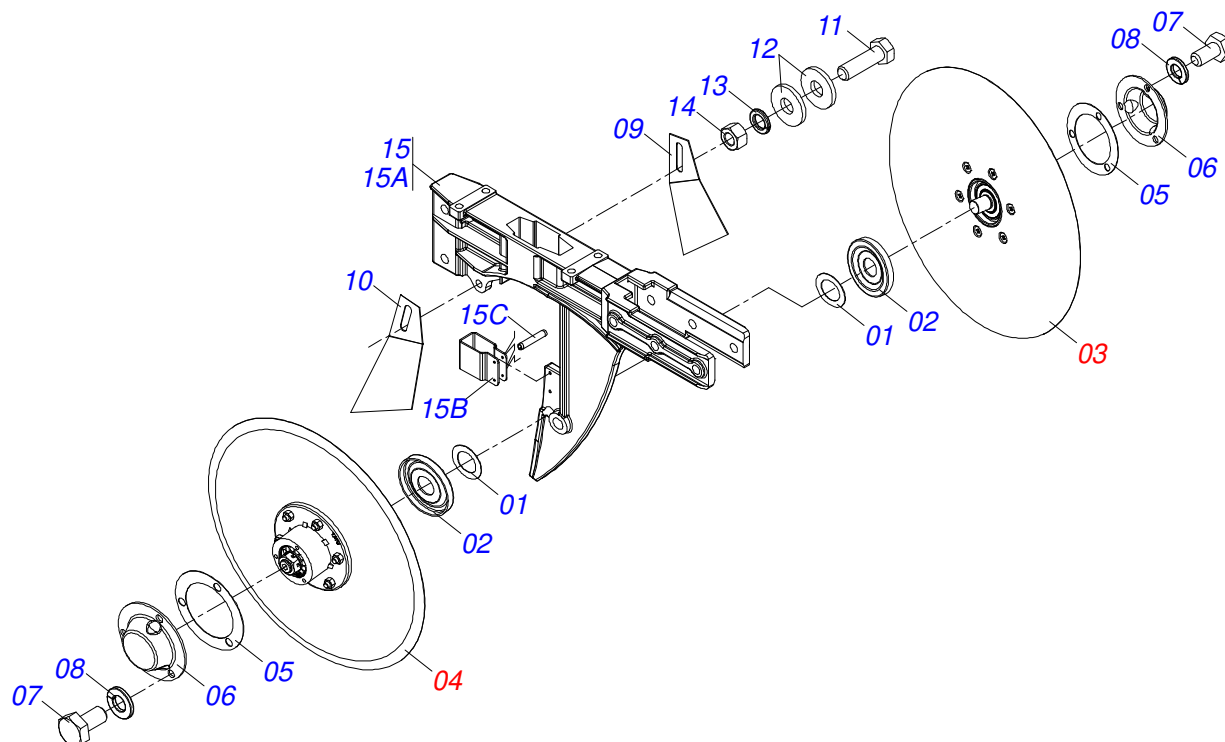


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	BOX DDD ASSY DPL 15 RIGHT	162	01
04	0501054168	BOX DDD ASSY DPL 15 LEFT	163	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052301	SUPPORT DDD 15 RIGHT		01
15A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

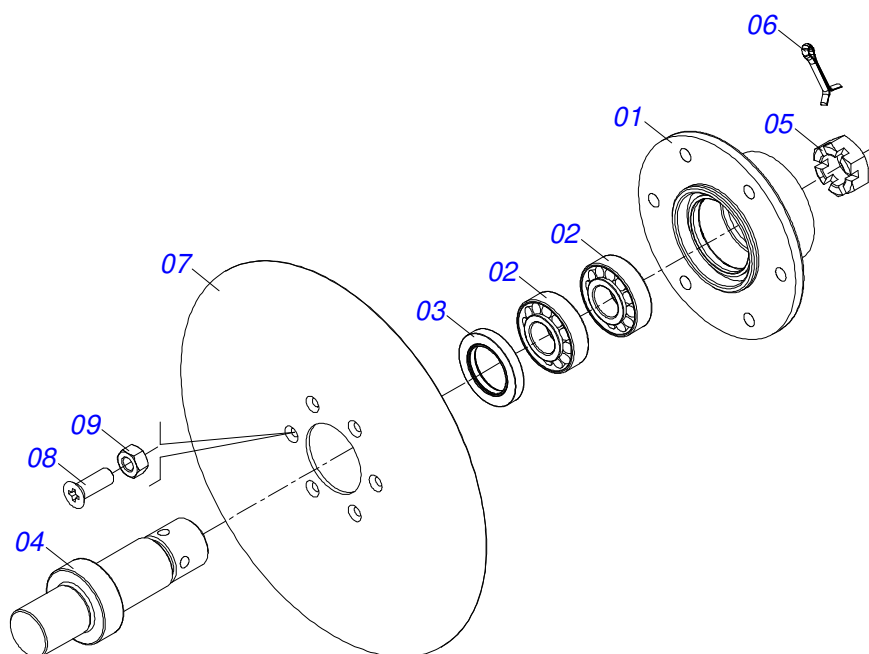


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT DOUB DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

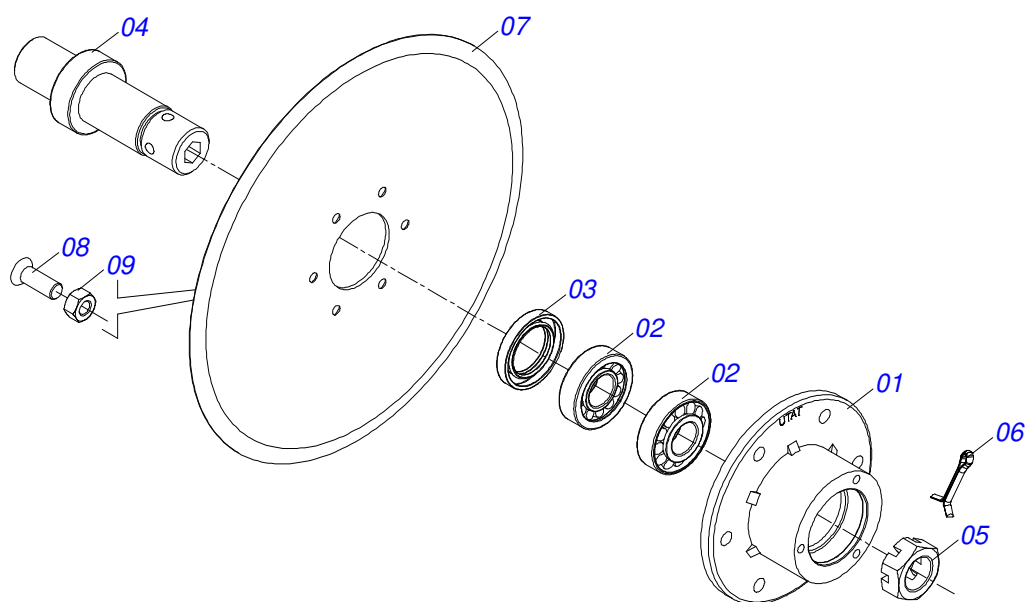


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

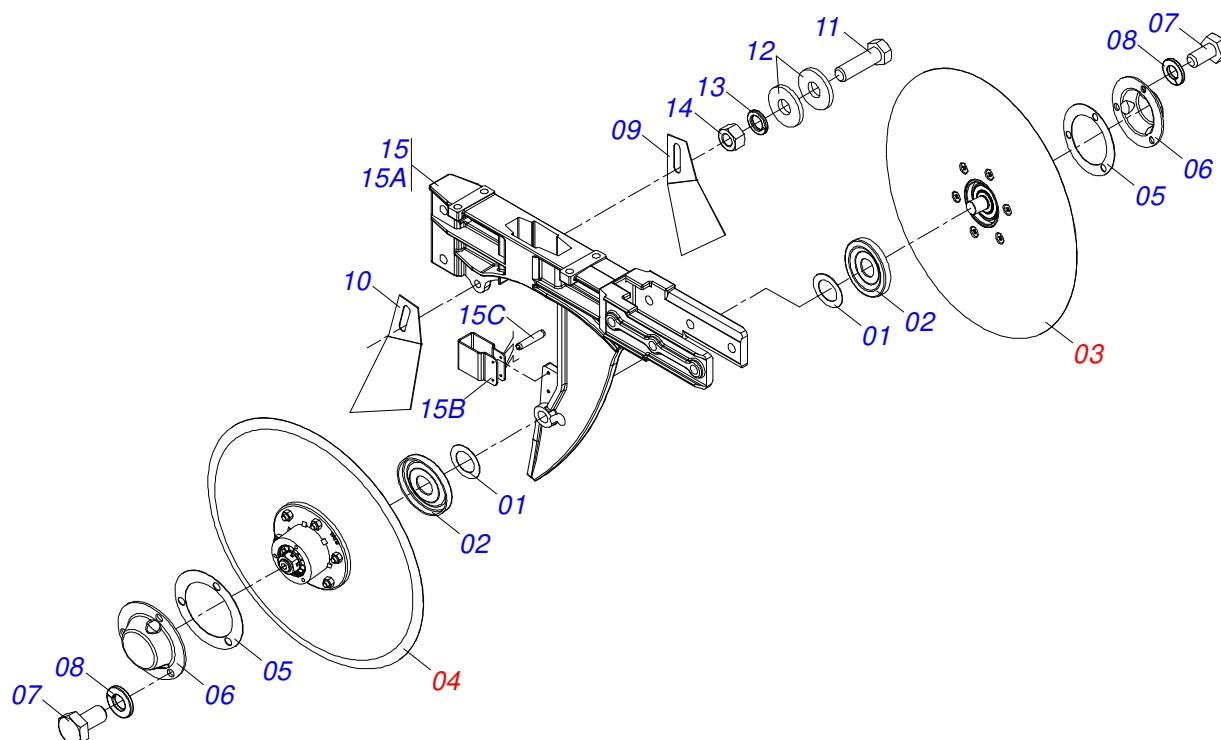


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	BOX DDD ASSY DPL 15 RIGHT	162	01
04	0501054168	BOX DDD ASSY DPL 15 LEFT	163	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052302	LH SUPPORT DDD GUIDE		01
15A	0561015592	LEFT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

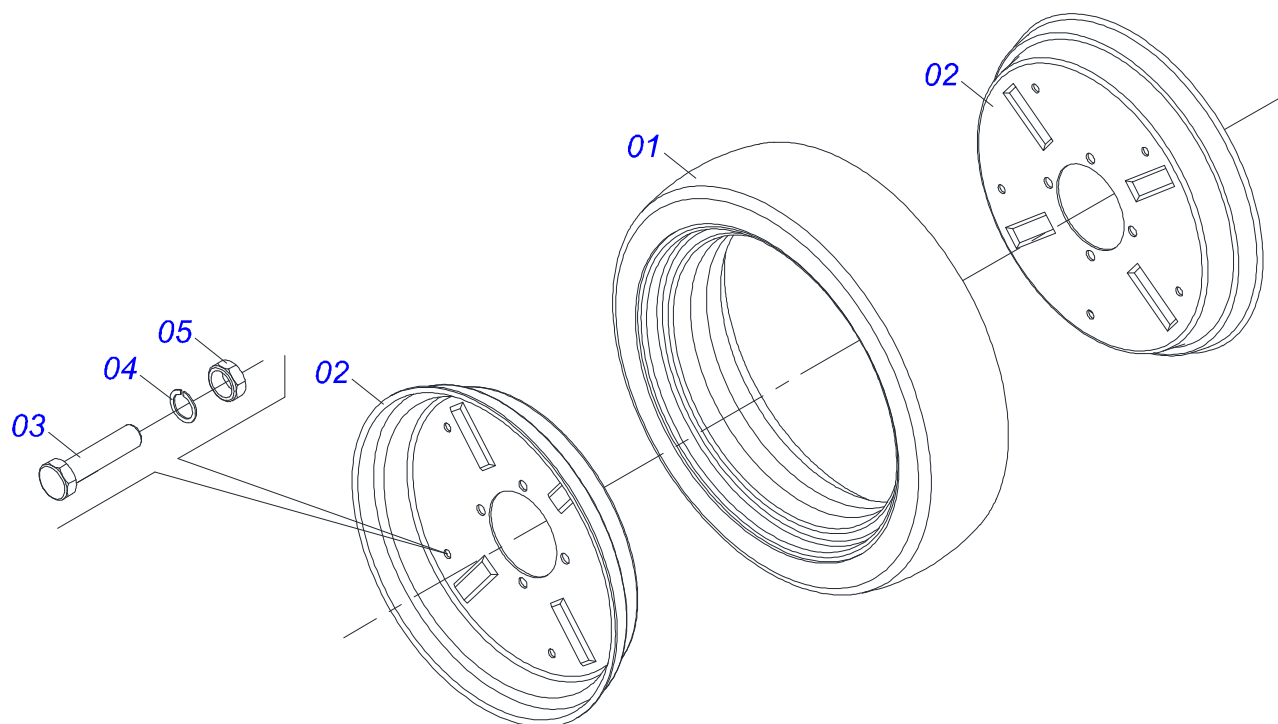


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

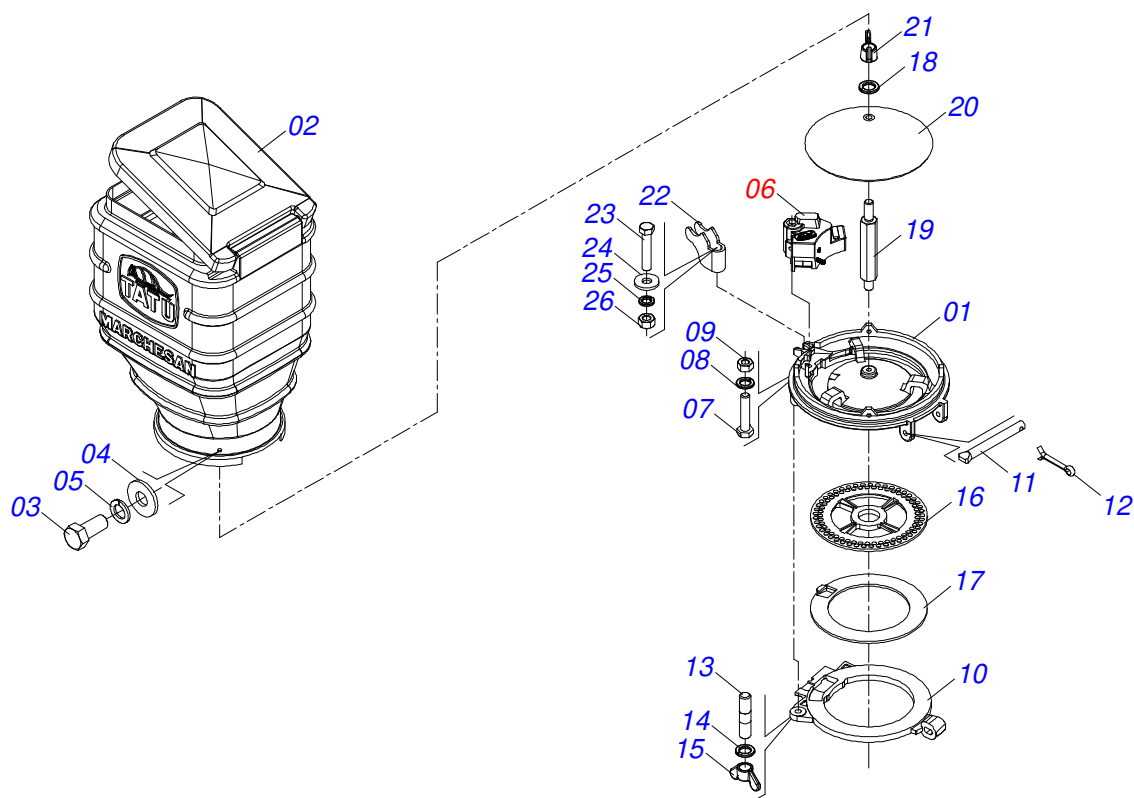


Item	Code	Description	See page	QT
01	0502020324	SEED BOX SUPPORT		01
02	0503031508	COVER GREEN BEAM SEED YELLOW		01
03	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		04
04	0501010694	FLAT WASHER		04
05	0503010179	LOCK WASHER		04
06	0501051094	ASSY SEED DISTRIBUTOR	167	01
07	0503010675	5/16" X 2.1/4" BOLT		01
08	0503010179	LOCK WASHER		01
09	0503010337	5/16" NUT		01
10	0502010408	SEED DISC LOWER TRAIL		01
11	0521010536	0.3" X 3.8" COUPLING SHAFT		01
12	0503010140	1/8" X 3/4" COTTERPIN		01
13	0503030083	3/8" X 3/8" X 1.6" STUD		01
14	0503010025	3/8" SPRING WASHER		01
15	0503010209	3/8" UNC BUTTERFLY NUT		01
16	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
17	0503016219	RING TO SOYBEANS		01
18	0503010025	3/8" SPRING WASHER		01
19	0571018536	HEX PRISONER		01
20	0503034131	DEFLECTOR		01
21	0503010209	3/8" UNC BUTTERFLY NUT		01
22	0531018622	BOLT FAST SUPPORT UPPER		01
23	0501010096	3/8" X 2" BOLT		01
24	0501010984	FLAT WASHER		01
25	0503010025	3/8" SPRING WASHER		01
26	0503010026	3/8" NUT		01

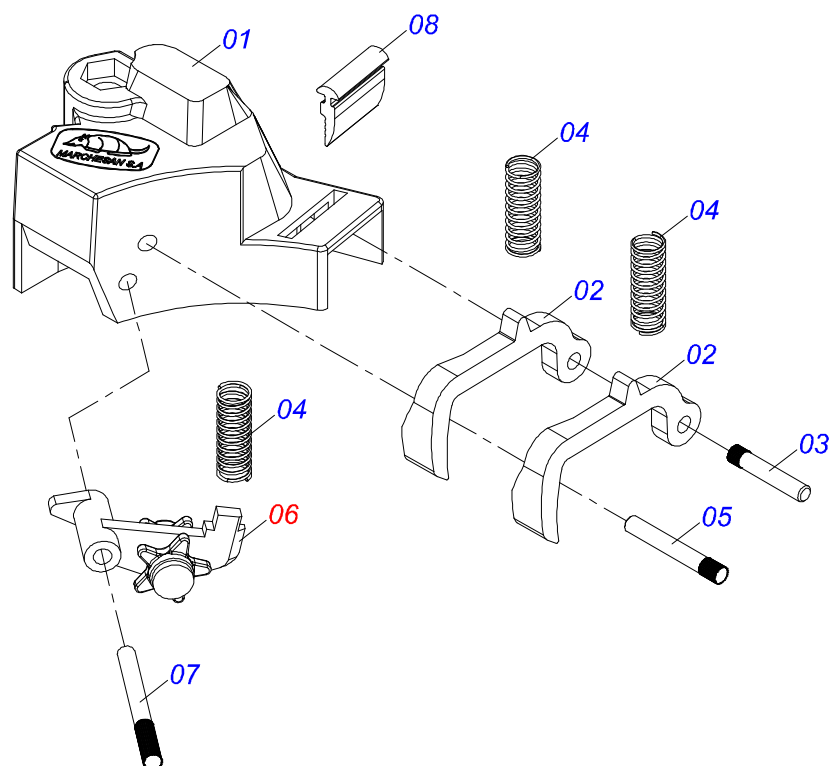

Item	Code	Description	See page	QT
01	0503030381	SEED DISTRIBUTOR BOX		01
02	0502010447	TRIGGER		02
03	0501013467	KEY AXLE		01
04	0503030378	0.4" X 1.1" X 0.03" SPRING		03
05	0501013466	KEY LIMITER AXLE		01
06	0501051119	DOUBLE PULLEY ROCKER'S	168	01
07	0501013468	ROCKER ARM AXLE, OF THE PULLEY		01
08	0503030377	SCRAPER		01

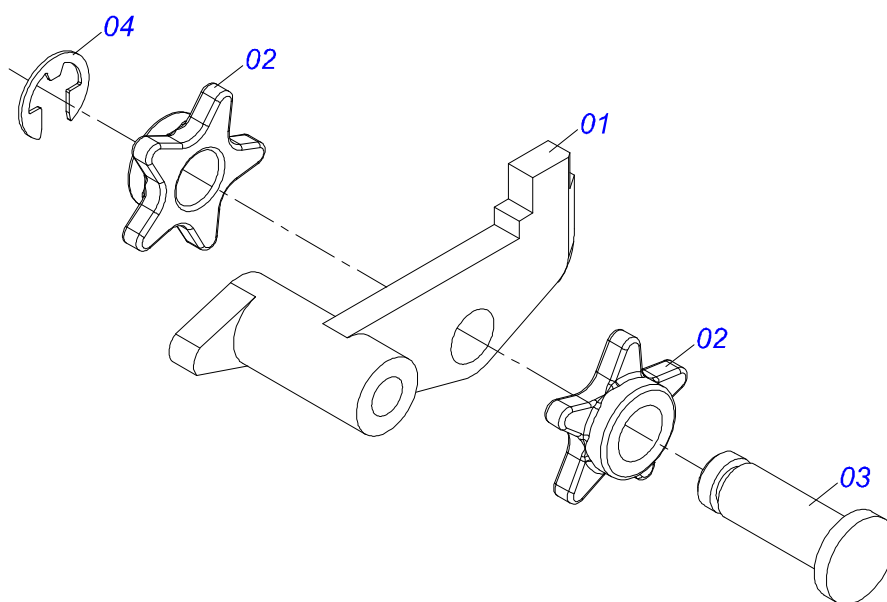


Item	Code	Description	See page	QT
01	0503031129	DOUBLE PULLEY ROCKER ARM		01
02	0503031128	5Z PLASTIC DOUB PULLEY FOR SOYBEAN		02
03	0521010649	TOOTH PULLEY COUPLING SHAFT		01
04	0503011853	503050 CLAMPING RING (FOR HOLE)		01

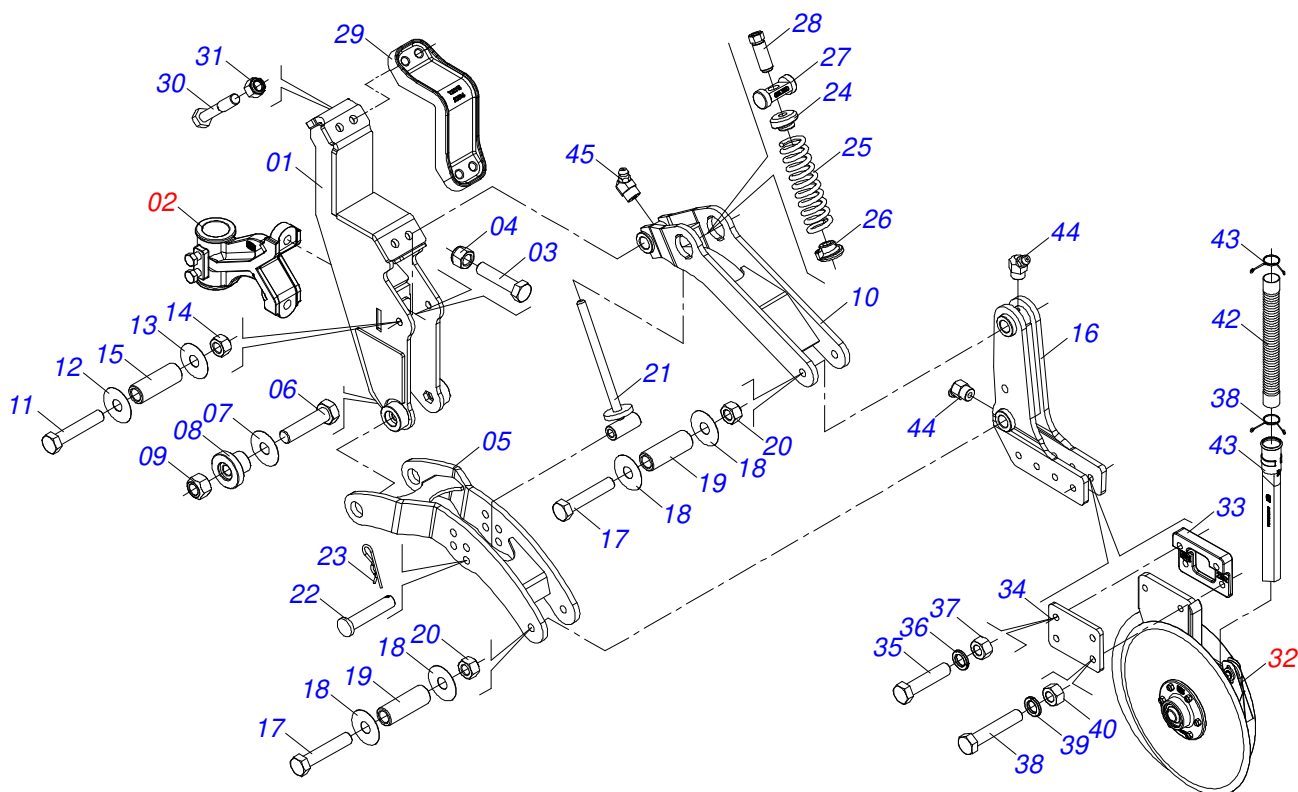


Item	Code	Description	See page	QT
01	0521063759	ROW FERTILIZER SUPPORT		01
02	0511053223	FERTILIZER ROW SUPPORT WITH SCREW	170	01
03	0503017855	3/4" BOLT		02
04	0503010152	3/4" SELF LOCKING NUT		02
05	0521063504	FERTILIZER ROW LOWER SUPPORT		01
06	0503010233	5/8" X 2-1/2" BOLT		02
07	0511015098	FLAT WASHER		06
08	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
09	0503012412	5/8 UNC SELF LOCKING NUT		02
10	0511063862	FERTILIZER ROW UPPER SUPPORT		01
11	0501010163	5/8" X 4-1/2" BOLT		01
12	0531015184	FLAT WASHER		01
13	0531016031	1/2" SPRING WASHER		01
14	0503012412	5/8 UNC SELF LOCKING NUT		01
15	0531016207	0.6" X 1" X 2.8" SLEEVE		01
16	0521061855	FERTILIZER ROW REAR SUPPORT		01
17	0501010452	5/8" X 5" BOLT		02
18	0531016031	1/2" SPRING WASHER		04
19	0531016207	0.6" X 1" X 2.8" SLEEVE		02
20	0503012412	5/8 UNC SELF LOCKING NUT		02
21	0521062073	SPRING GUIDE		01
22	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
23	0503030168	CUPILLA		01
24	1902020393	SPRING UPPER SUPPORT		01
25	0503031450	2.7" X 9.2" X 0.03" SPRING		01
26	1902020393	SPRING UPPER SUPPORT		01
27	0521011158	SPRING LOCKNUT		01
28	0521018575	REGULATOR SPINDLE 100		01
29	0502012724	FERTILIZER ROW FIXER		01
30	0503017960	5/8" X 3-12" BOLT		04
31	0503010811	5/8" UNF SELF ADJUSTING NUT		04


Item	Code	Description	See page	QT
32	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	171	01
33	0502012352	DOUBLE-DISC SPACING PLATE		01
34	0541013035	5.55" X 4.0" X 0.38" PLATE		01
35	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
36	0503010019	1/2" SPRING WASHER		02
37	0503010060	1/2" NUT		02
38	0503010752	1/2" X 3.1/2" BOLT		02
39	0503010019	1/2" SPRING WASHER		02
40	0503010060	1/2" NUT		02
41	0503030520	SEED SOCKET		01
42	0503031145	2" X 2" X 20" HOSE		01
43	0503031076	2" HOSE CLAMP		02
44	0503010003	1845 GREASE FITTING		02
45	0503010004	1890 GREASE FITTING		01

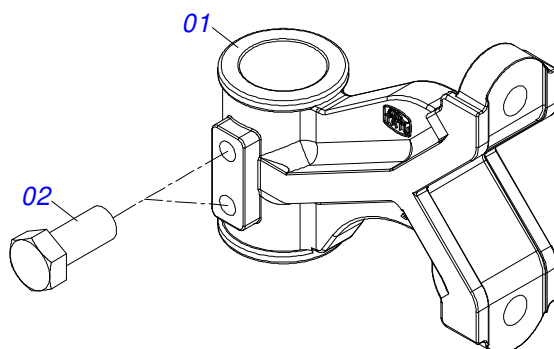


Item	Code	Description	See page	QT
01	0502012727	BLADE DISC SUPPORT		01
02	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02

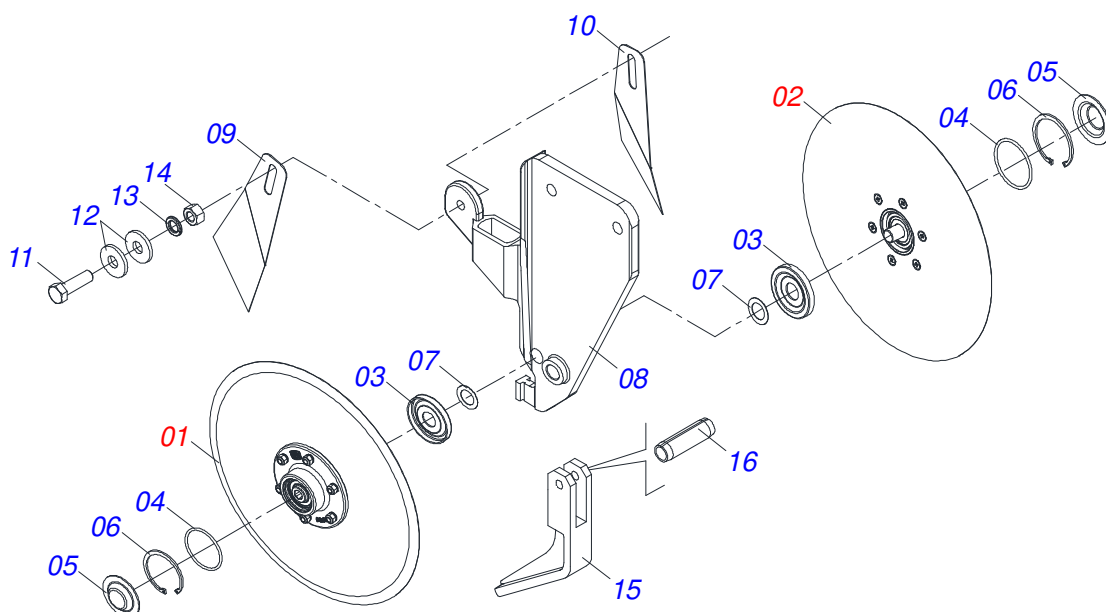


Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15	172	01
02	0511053172	LEFT LOW CUBE WITH DISC 15	173	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010025	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

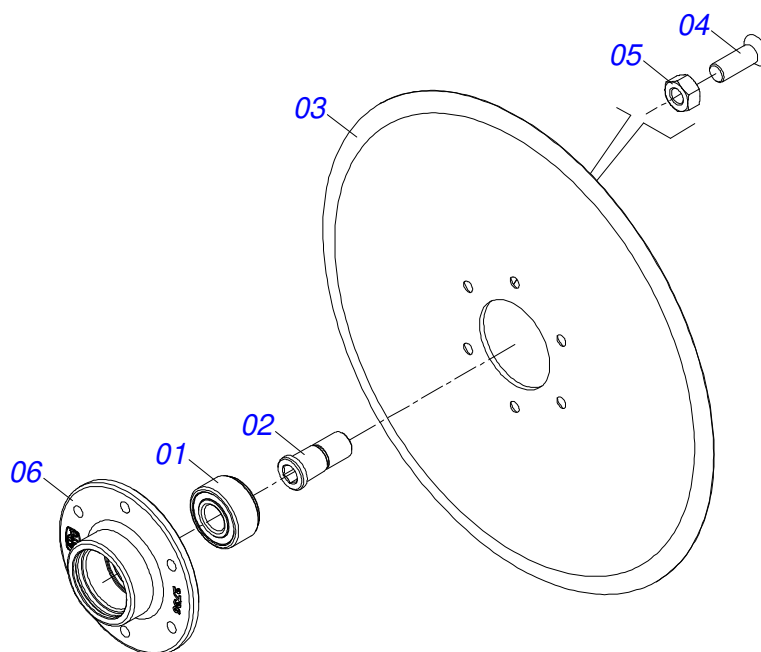

Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

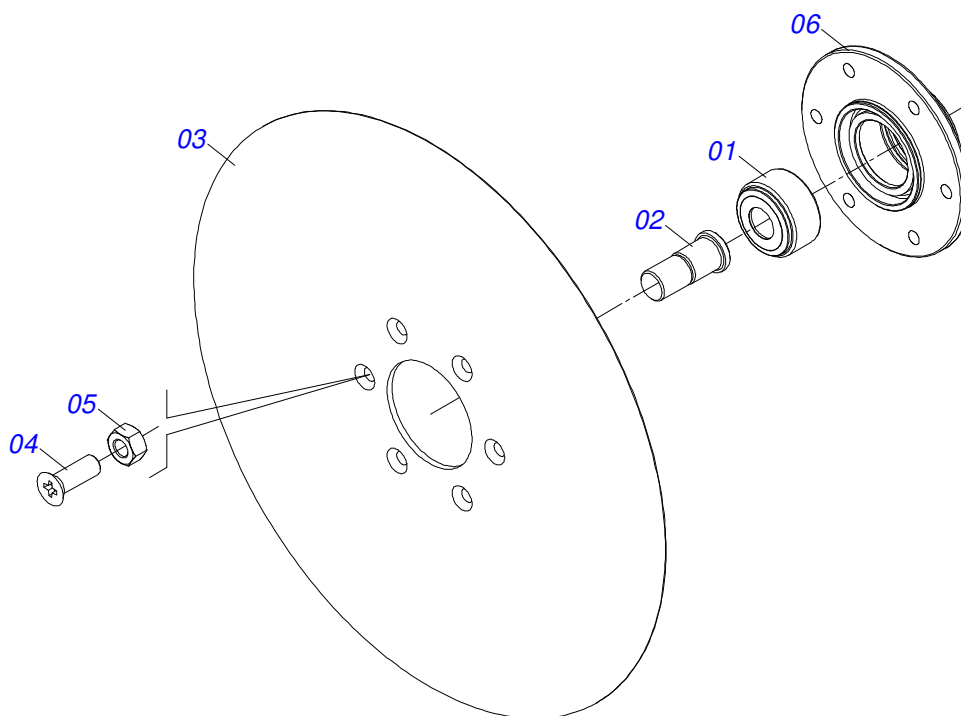

Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

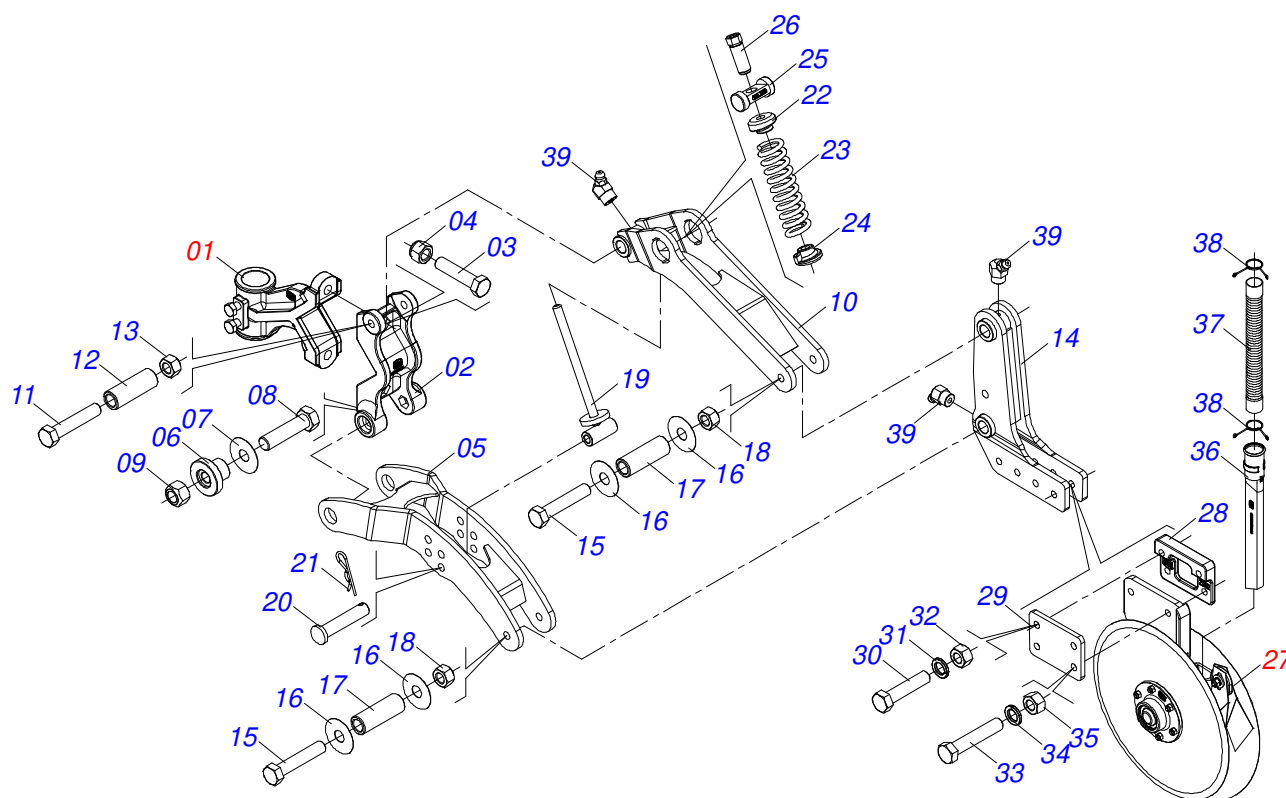


Item	Code	Description	See page	QT
01	0511053223	FERTILIZER ROW SUPPORT WITH SCREW	170	01
02	0502012728	ROW FERTILIZER SUPPORT		01
03	0503017856	BOLT 3/4		02
04	0503010152	3/4" SELF LOCKING NUT		02
05	0521063504	FERTILIZER ROW LOWER SUPPORT		01
06	0561017928	FERTILIZER ROW ARTICULAT SLEEVE		02
07	0511015098	FLAT WASHER		06
08	0503010233	5/8" X 2-1/2" BOLT		02
09	0503012412	5/8 UNC SELF LOCKING NUT		02
10	0511063862	FERTILIZER ROW UPPER SUPPORT		01
11	0501010452	5/8" X 5" BOLT		01
12	0531016207	0.6" X 1" X 2.8" SLEEVE		01
13	0503012412	5/8 UNC SELF LOCKING NUT		01
14	0521061855	FERTILIZER ROW REAR SUPPORT		01
15	0501010452	5/8" X 5" BOLT		02
16	0531016031	1/2" SPRING WASHER		04
17	0531016207	0.6" X 1" X 2.8" SLEEVE		02
18	0503012412	5/8 UNC SELF LOCKING NUT		02
19	0521062073	SPRING GUIDE		01
20	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
21	0503030168	CUPILLA		01
22	1902020393	SPRING UPPER SUPPORT		01
23	0503031450	2.7" X 9.2" X 0.03" SPRING		01
24	1902020393	SPRING UPPER SUPPORT		01
25	0521011158	SPRING LOCKNUT		01
26	0521018575	REGULATOR SPINDLE 100		01
27	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	175	01
28	0502012352	DOUBLE-DISC SPACING PLATE		01
29	0541013035	5.55" X 4.0" X 0.38" PLATE		01
30	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
31	0503010019	1/2" SPRING WASHER		02




COP FLEX 600 - FRAME
FERTILIZER SHORT LINE

Page 174
0511053024


Item	Code	Description	See page	QT
32	0503010060	1/2" NUT		02
33	0503010752	1/2" X 3.1/2" BOLT		02
34	0503010019	1/2" SPRING WASHER		02
35	0503010060	1/2" NUT		02
36	0503030520	SEED SOCKET		01
37	0503031145	2" X 2" X 20" HOSE		01
38	0503031076	2" HOSE CLAMP		02
39	0503010003	1845 GREASE FITTING		03

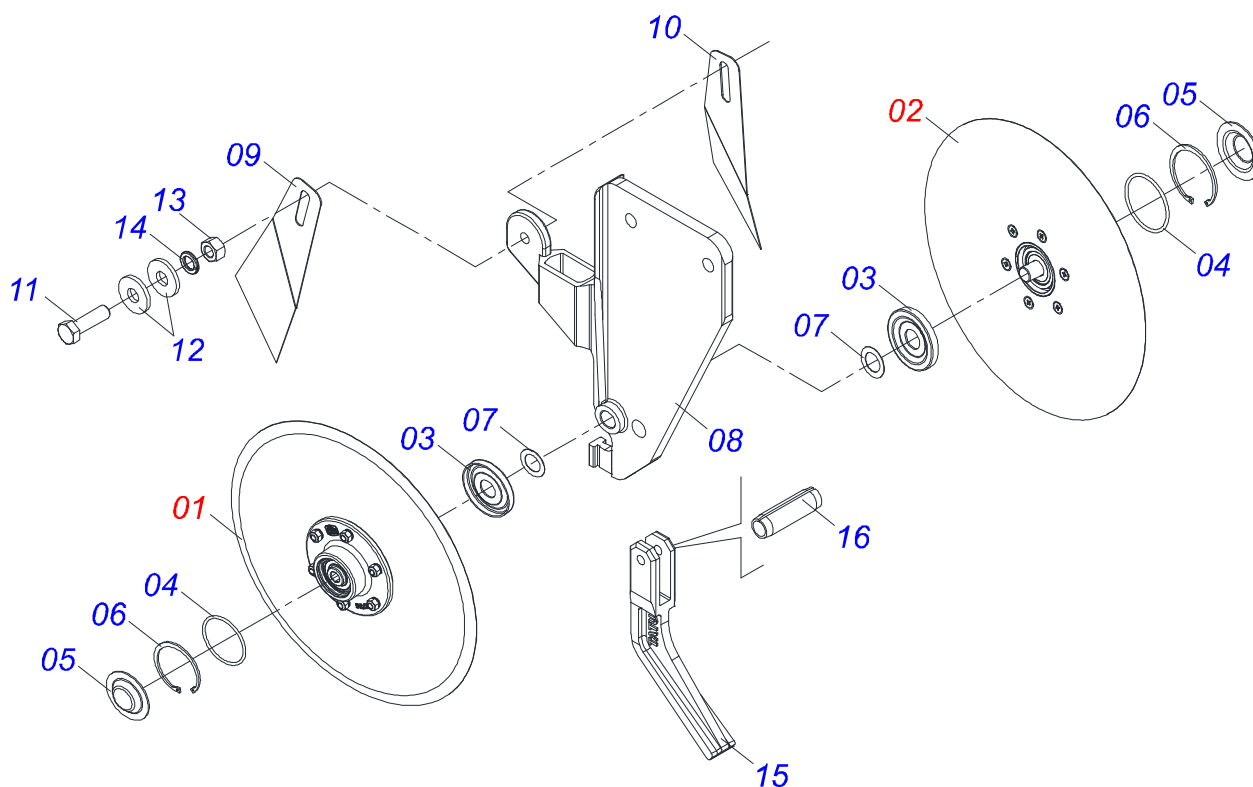


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	173	01
02	0511053173	CUBE LOW RIGHT WITH DISC 15	172	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511015098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503010025	3/8" SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01

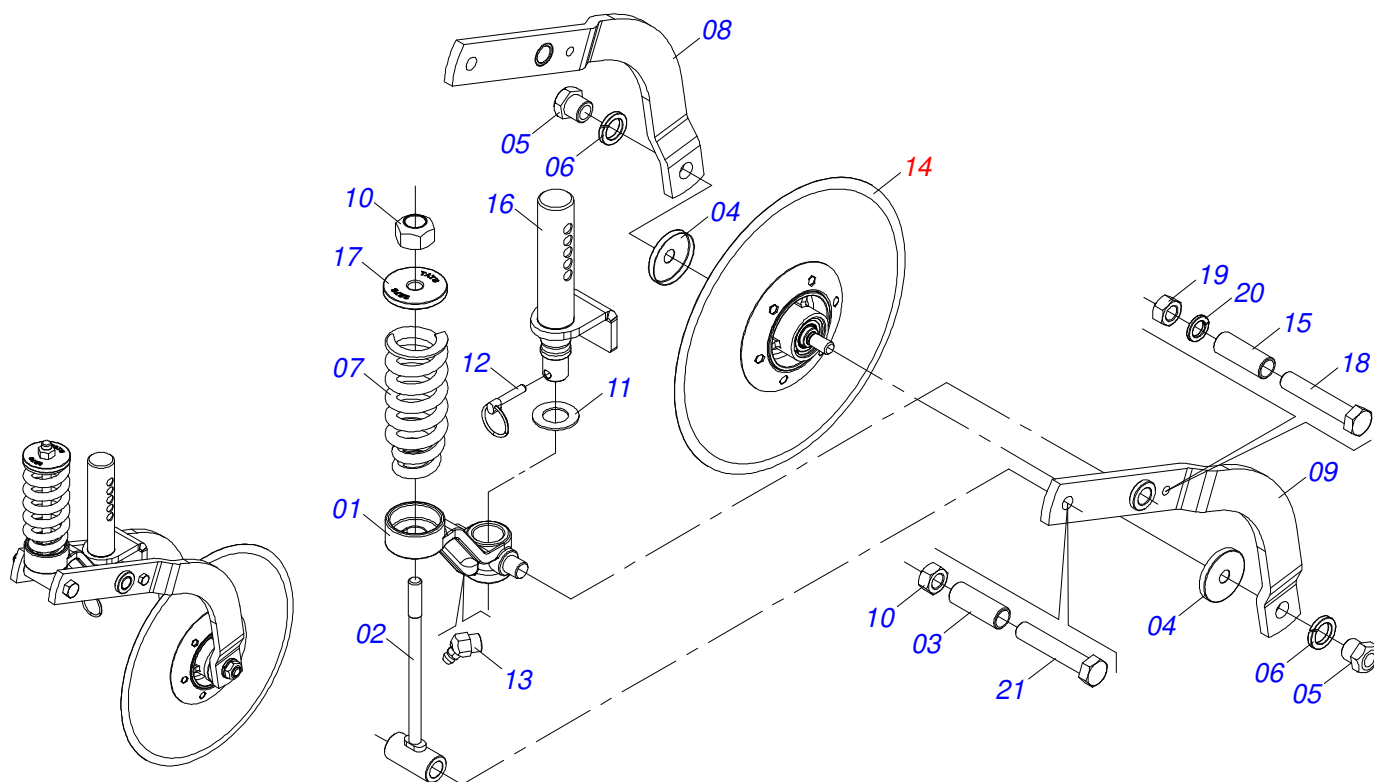


Item	Code	Description	See page	QT
01	0502012369	BLADE DISC SUPPORT		01
02	0501067323	SPRING REGULATOR		01
03	0521010452	SLEEVE		01
04	0521015376	DUST CLOAK		02
05	0521013510	3/4" NUT		02
06	0503011438	SPRING WASHER		02
07	0503034498	SPRING		01
08	0521067844	RIGHT ARM		01
09	0521067843	LEFT ARM		01
10	0503011255	3/4" LOCK NUT		02
11	0581014407	FLAT WASHER 36.5 X 65.00 X 3.00		01
12	0503030430	7/16 X 2" PIN LOCK		01
13	0503010003	1845 GREASE FITTING		01
14	0501052139	ASSY CUTTING DISK DPL18	177	01
15	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
16	0521062962	BLADE DISC AXLE		01
17	0581014524	SPRING SUPPORT WASHER		01
18	0503011411	1/2" X 5-1/2" BOLT		01
19	0503010060	1/2" NUT		01
20	0503011440	SPRING WASHER		01
21	0503013185	3/4" X 5-1/2" BOLT		01

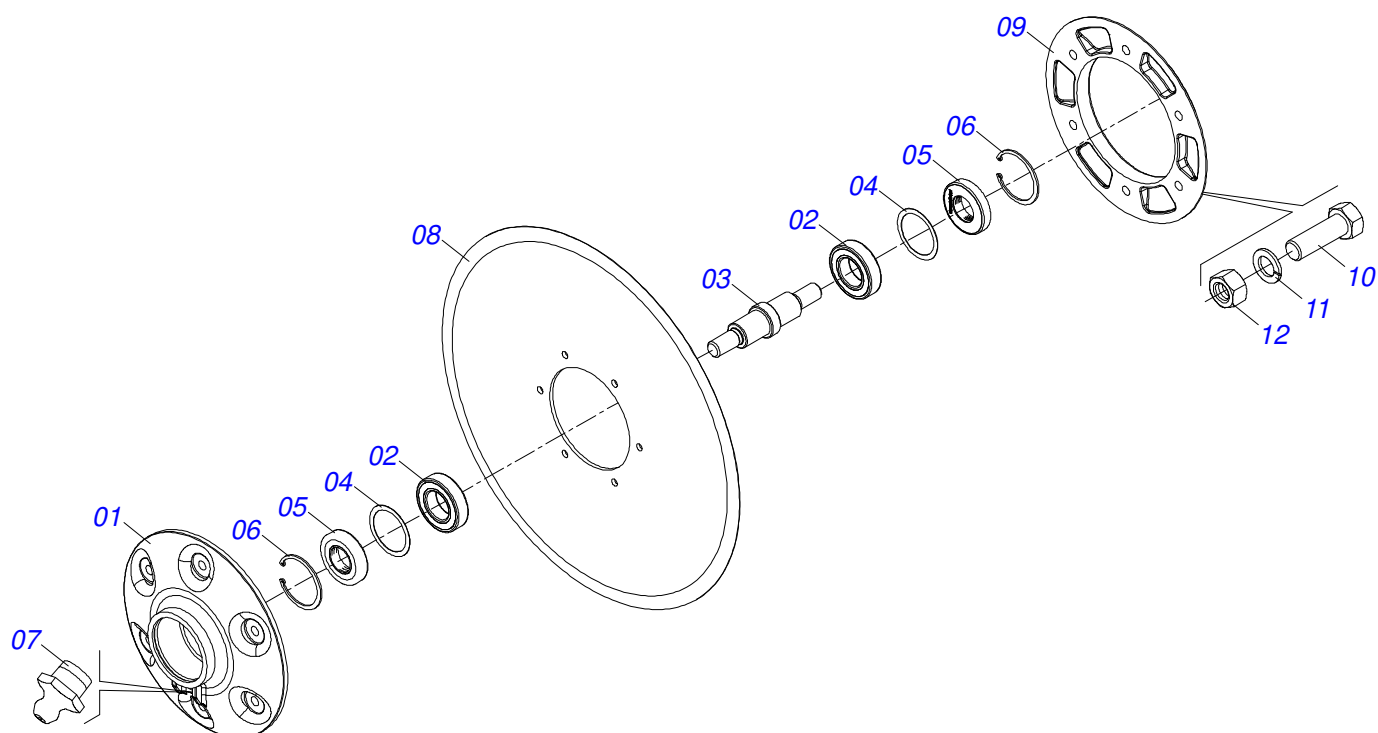


Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503010276	6206 BALL BEARING		02
03	0521013610	BLADE DISC HUB AXLE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0603026013	PLAIN COULTER BLADE		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

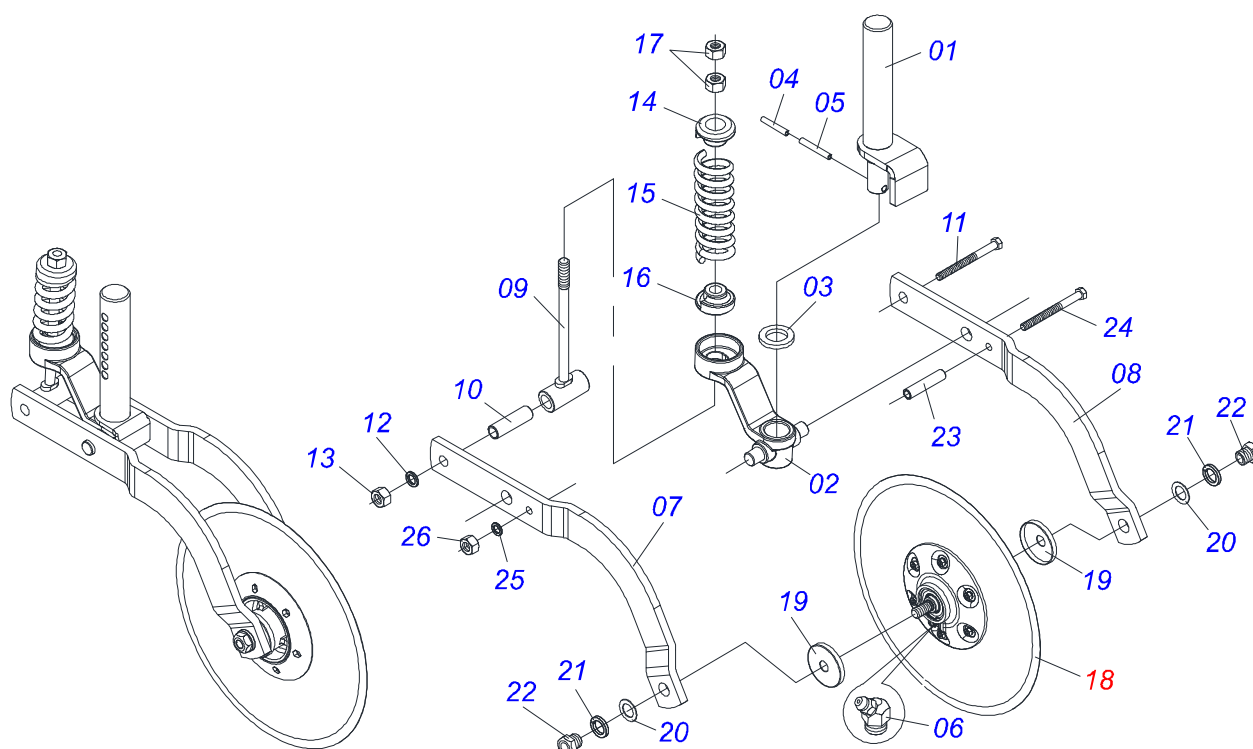


Item	Code	Description	See page	QT
01	0521062962	BLADE DISC AXLE		01
02	0502012369	BLADE DISC SUPPORT		01
03	0541018684	FLAT WASHER		01
04	0503010361	SPRING PIN		01
05	0503010756	0.2" X 2.4" SPRING PIN		01
06	0503010003	1845 GREASE FITTING		01
07	0521018935	RIGHT ARM OF THE BLADE DISC		01
08	0521018936	LEFT ARM OF THE BLADE DISC		01
09	0501067323	SPRING REGULATOR		01
10	0521010452	SLEEVE		01
11	0503016525	3/4" X 6" BOLT		01
12	0503011442	3/4" SPRING WASHER		01
13	0503010014	3/4" NUT		01
14	0502020393	SPRING UPPER SUPPORT		01
15	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
16	0502020394	SPRING SUPPORT		01
17	0503010014	3/4" NUT		02
18	0501054887	20 BLADE DISC WITH FLAT PLAN DISC	179	01
19	0521015376	DUST CLOAK		02
20	0511015346	FLAT WASHER		02
21	0503011438	SPRING WASHER		02
22	0521013510	3/4" NUT		02
23	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
24	0503011411	1/2" X 5-1/2" BOLT		01
25	0503011440	SPRING WASHER		01
26	0503010060	1/2" NUT		01

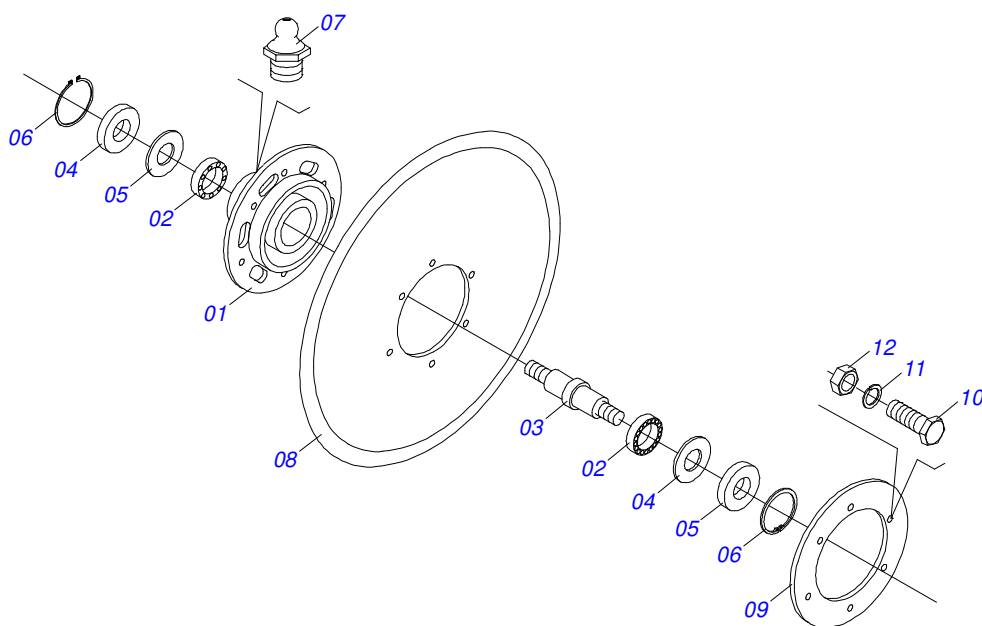


Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503010276	6206 BALL BEARING		02
03	0521013610	BLADE DISC HUB AXLE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0603027851	20" X 0.2" FLAT PLAIN DISC		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

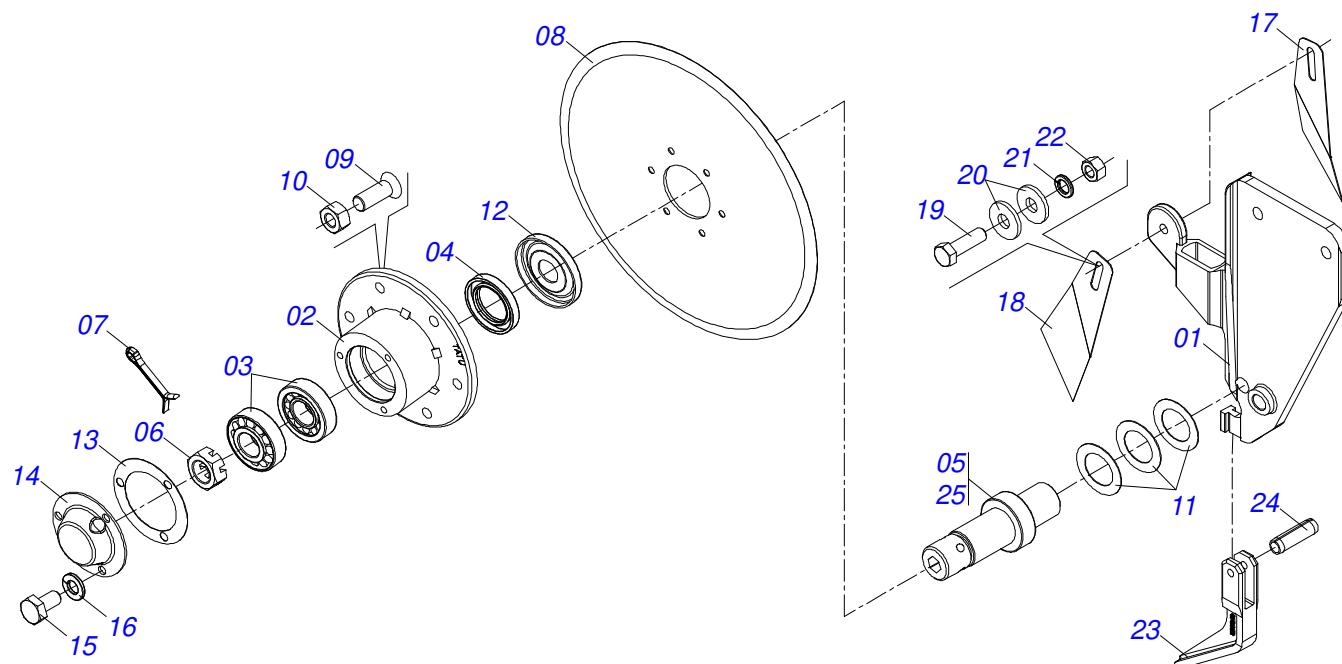


Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT	01	
02	0502011930	DOUBLE DISC COULTER BOX	02	
03	0503010598	30204 BALL BEARING	04	
04	0503011112	SEAL 02376-BRG	02	
05	0521019148	LEFT DOUBLE DISC HUB	01	
06	0503030282	3/4" CASTLE NUT	02	
07	0503010257	1/8" X 1" COTTERPIN	02	
08	0603022042	13" X 0.12" PLAIN COULTER BLADE	02	
09	0503010546	5/16" X 7/8" BOLT	12	
10	0503010337	5/16" NUT	12	
11	0511015098	FLAT WASHER	06	
12	0511011927	DUST CLOAK	02	
13	0503030757	2.9" X 2" X 0.02" JOINT	02	
14	0521019178	COVER DEPTH	02	
15	0503014729	1/4" UNF X 1/2" BOLT	06	
16	0503011441	SPRING WASHER	06	
17	0501017542	LH DOUBLE DISC SCRAPER	01	
18	0501017541	RIGHT DOUBLE DISC SCRAPER	01	
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
20	0501010984	FLAT WASHER	02	
21	0503011443	3/8" SPRING WASHER	01	
22	0503010026	3/8" NUT	01	
23	0502070062	SCRAPER	01	
24	0503011402	0.2" X 0.8" SPRING PIN	01	
25	0521019154	RIGHT DOUB DISC HUB	01	

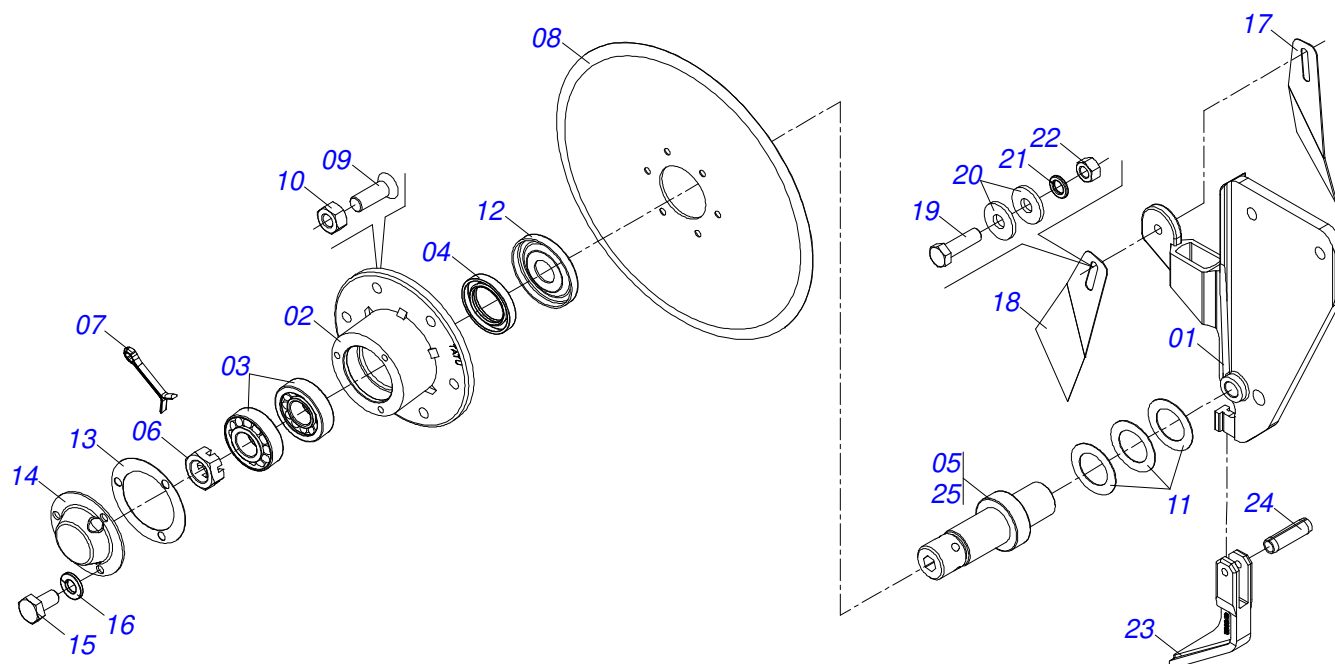


Item	Code	Description	See page	QT
01	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT	01	
02	0502011930	DOUBLE DISC COULTER BOX	02	
03	0503010598	30204 BALL BEARING	04	
04	0503011112	SEAL 02376-BRG	02	
05	0521019148	LEFT DOUBLE DISC HUB	01	
06	0503030282	3/4" CASTLE NUT	02	
07	0503010257	1/8" X 1" COTTERPIN	02	
08	0603022042	13" X 0.12" PLAIN COULTER BLADE	02	
09	0503010546	5/16" X 7/8" BOLT	12	
10	0503010337	5/16" NUT	12	
11	0511015098	FLAT WASHER	06	
12	0511011927	DUST CLOAK	02	
13	0503030757	2.9" X 2" X 0.02" JOINT	02	
14	0521019178	COVER DEPTH	02	
15	0503014729	1/4" UNF X 1/2" BOLT	06	
16	0503011441	SPRING WASHER	06	
17	0501017542	LH DOUBLE DISC SCRAPER	01	
18	0501017541	RIGHT DOUBLE DISC SCRAPER	01	
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
20	0501010984	FLAT WASHER	02	
21	0503011443	3/8" SPRING WASHER	01	
22	0503010026	3/8" NUT	01	
23	0502070062	SCRAPER	01	
24	0503011402	0.2" X 0.8" SPRING PIN	01	
25	0521019154	RIGHT DOUB DISC HUB	01	

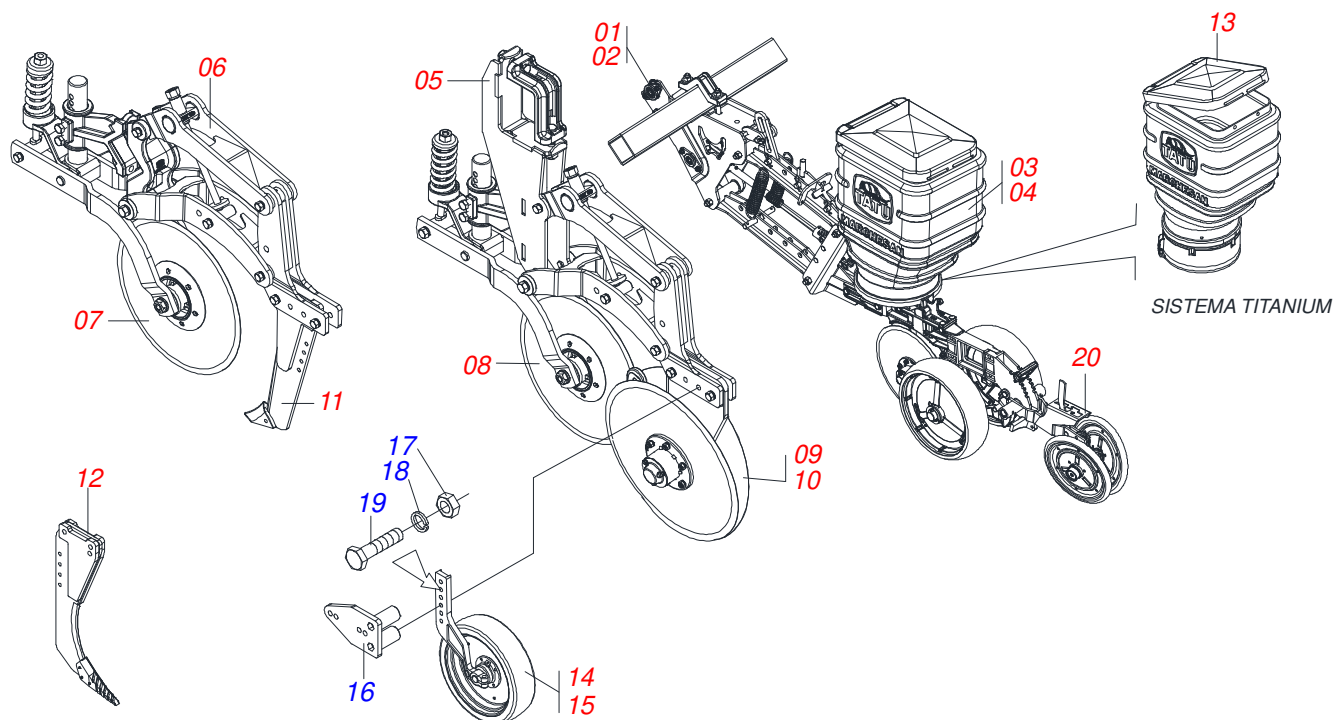


Item	Code	Description	See page	07 09 10 11 13 15 17 19 L
01	0511052411	FRONT SEED LONG ROW WITH CARDAN	148	03 04 04 05 06 07 08 09
02	0511052410	FRONT SEED SHORT ROW WITH CARDAN	149	04 05 06 06 07 08 09 10
03	0909093546	REAR SEED LINE	151	04 05 06 06 07 08 09 10
05	0511053023	LONG FERTILIZER LINE	169	03 04 04 05 06 07 08 09
06	0511053024	FERTILIZER SHORT LINE	174	04 05 06 06 07 08 09 10
07	0511051818	DISC CUT 18 SEMI MOUNTED	176	07 09 10 11 13 15 17 19
08	0511051819	DC 20 SEMI MOUNTED	178	07 09 10 11 13 15 17 19
09	0501052976	RIGHT FERTILIZER DOUBLE DISC	180	03 04 04 05 06 07 08 09
10	0501052977	LEFT FERTILIZER DOUBLE DISC	181	04 05 06 06 07 08 09 10
11	0501110231	SCARIFIER HEAD WITH SPIKE 0061		07 09 10 11 13 15 17 19
12	0501110723	SCARIFIER ROD		07 09 10 11 13 15 17 19
13	0511051720	SEED SYSTEM TITANIUM ASSY		07 09 10 11 13 15 17 19
14	0501054481	RIGHT ARM DEPTH CONTROL WITH WHEEL	183	03 04 04 05 06 07 08 09
15	0501054482	DEPTH CONTROL LEFT ARM WITH TIRE	185	04 05 06 06 07 08 09 10
16	0511065909	DEPTH FIXER BASE		07 09 10 11 13 15 17 19
17	0503010060	1/2" NUT		14 18 20 22 26 30 34 38
18	0503010019	1/2" SPRING WASHER		14 18 20 22 26 30 34 38
19	0503010547	1/2" X 4" BOLT		14 18 20 22 26 30 34 38
20	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	152	07 09 10 11 13 15 17 19

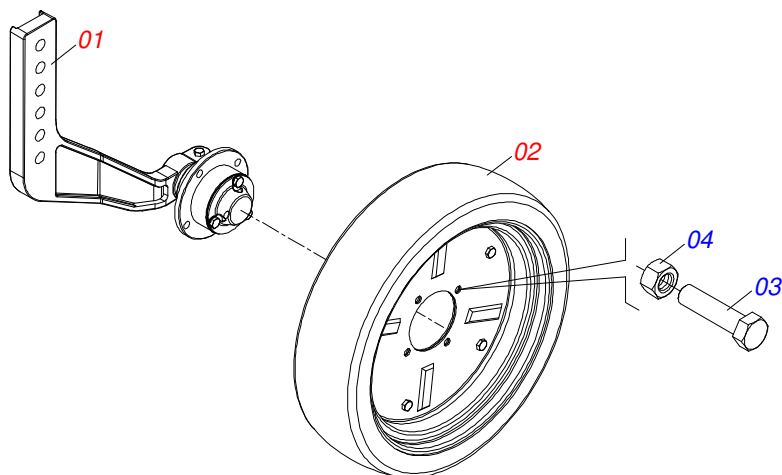


Item	Code	Description	See page	QT
01	0501056430	ARM RIGHT CONTROL DEPTH WITHOUT WHEEL	184	01
02	0501052538	DEPTH BAND WITH ARMS	165	01
03	0503010358	5/16" X 5/8" BOLT		04
04	0503013816	5/16" LOCKNUT		04

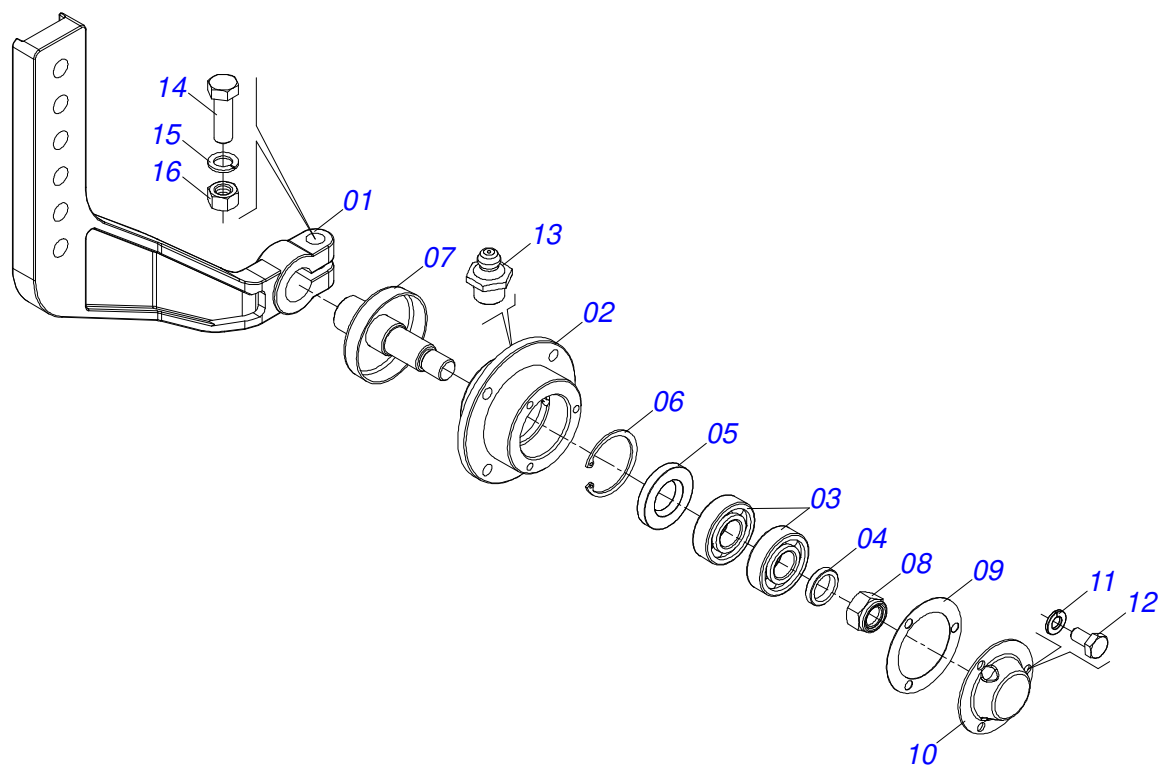


Item	Code	Description	See page	QT
01	0502012090	DEPTH CONTROL RIGHT ARM		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
08	0503010878	5/8" SELF ALIGNING NUT		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0521019178	COVER DEPTH		01
11	0503011441	SPRING WASHER		03
12	0503014729	1/4" UNF X 1/2" BOLT		03
13	0503010691	1/4" GREASE FITTING		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
15	0503011440	SPRING WASHER		01
16	0503010060	1/2" NUT		01

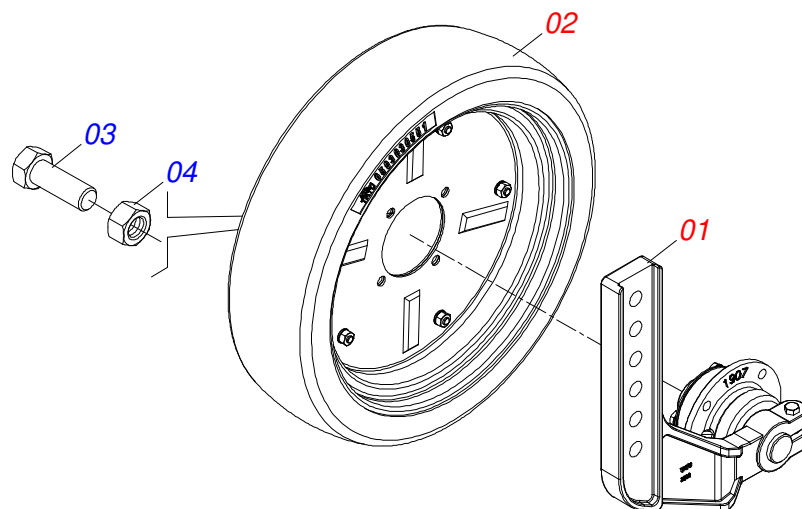

Item	Code	Description	See page	QT
01	0501056435	LEFT CONTROL ARM DEPTH WITHOUT WHEEL	186	01
02	0501052538	DEPTH BAND WITH ARMS	165	01
03	0503010358	5/16" X 5/8" BOLT		04
04	0503013816	5/16" LOCKNUT		04

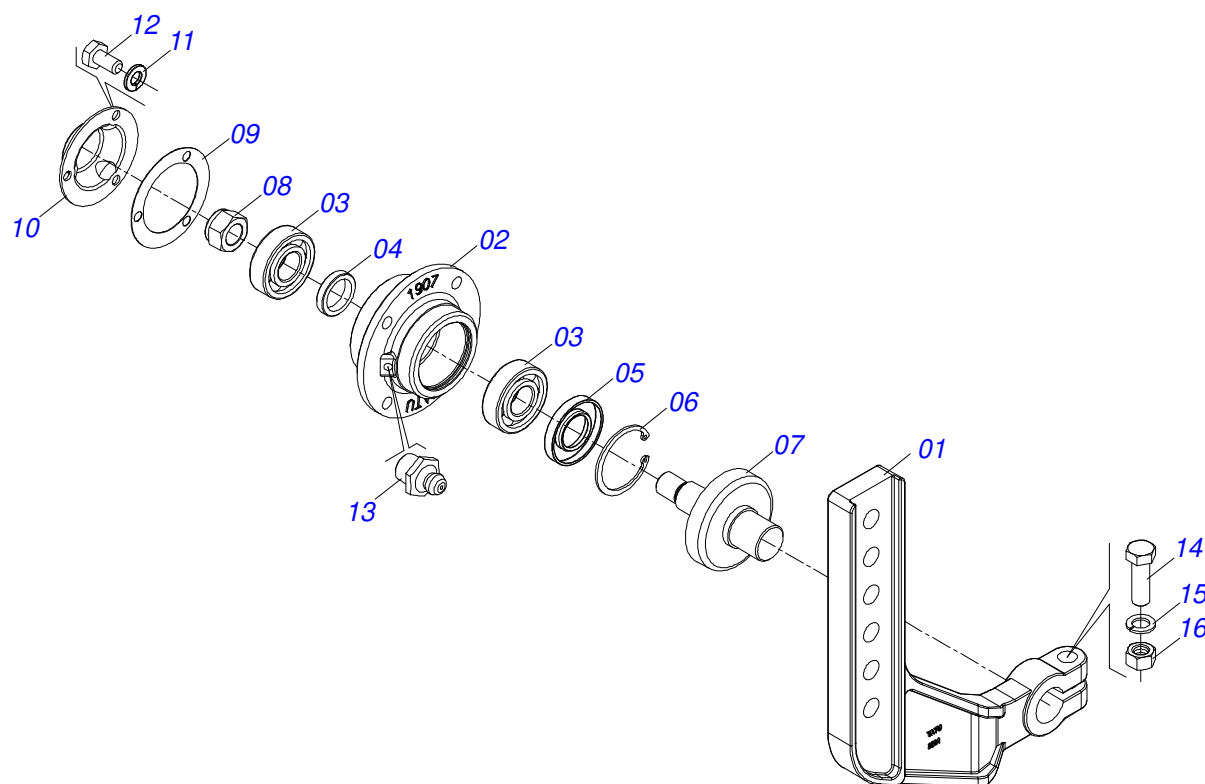

Item	Code	Description	See page	QT
01	0502012091	DEPTH CONTROL LEFT ARM	01	
02	0502011907	DEPTH CONTROL WHEEL HUB	01	
03	0503010269	6204 BALL BEARING	02	
04	0501013636	SPACING SLEEVE	01	
05	0503010689	SEAL 00763-BR	01	
06	0503011105	SEAL RING	01	
07	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK	01	
08	0503010878	5/8" SELF ALIGNING NUT	01	
09	0503030757	2.9" X 2" X 0.02" JOINT	01	
10	0521019178	COVER DEPTH	01	
11	0503011441	SPRING WASHER	03	
12	0503014729	1/4" UNF X 1/2" BOLT	03	
13	0503010691	1/4" GREASE FITTING	01	
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	01	
15	0503011440	SPRING WASHER	01	
16	0503010060	1/2" NUT	01	

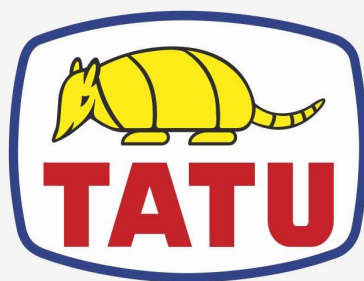

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

