

ROW CROP PLANTERS

COP CA - 09 LINES - APT (UP TO 03/2022)

Code: 0501092797
Series: S-0913
Revision: 00
Date Revision: AGOSTO/2020

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111300002	COP CA 9/9 APT-TR MS S-0913

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX


0909099210	FRAME ASSY	1
0511053887	WHEEL FIXING ASSY	2
0511051682	SPEC HUB AND SPINDLE WITHOUT TRANSM	3
0511051683	NO TRANSMISSION WHEELED LEFT SET	4
0501059655	HUB CARRYING-WHEELS	5
0511051577	CONJ APT ASSY	6
0511056972	FILTER HYDAC	7
0511055638	BLOCK FLOW LIMITER	8
0511056973	PARKER OMP 80 HYDRAULIC MOTOR WITH VALVE	9
0511056974	MOTOR	10
0511053892	FERTILIZER BOX ASSEMBLY	11
0501059656	FERTILIZER SUPORT RIGHT BOX	12
0501059657	FERTILIZER SUPORT LEFT BOX	13
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	14
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	15
0511053911	SET HIDRAULICO	16
0511053894	HYDRAULIC CYLINDER ASSEMBLY	17
0511058411	HYDRAULIC CYLINDER	18
0511053910	DUTY ASSEMBLY	19
0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	20
0511052197	WHEELS HOSE ASSEMBLY	21
0501053834	MALE QUICK COUPLER	22
0511053891	PLATFORM ASSEMBLY	23
0511053889	HANDRAIL ASSEMBLE	24
0511053890	HANDRAIL ASSEMBLE	25
0511053085	ASSY FIXER HEADER	26
0511043100	DRAWBAR ASSY	27
0511058191	REST ASSY	28
0909099211	SEED/FERTILIZER ROW ASSEMBLE	29
0501059362	LONG SEED ROW FRONT	30
0501059350	LONG FRONT SEED ROW	31
0501059349	SHORT SEED ROW FRONT	32
0501059361	SHORT SEED ROW FRONT	33
0511054884	TRANSMISSION BOX	34
0501052769	BEARING WITH 17Z GEAR	35
0511052319	RIGHT REAR SEED ROW	36
0511051783	RIGHT REAR SEED ROW TITANIUM	37
0511052320	REAR LEFT ROW SEED TITANIUM	38
0511051782	LEFT REAR SEED ROW	39
0501059631	DDD SEED 15 X 15 RIGHT	40
0501059632	DDD SEED 15X15 LEFT	41
0501054168	15" LEFT OPENING DISC HUB	42
0501054167	15" RIGHT OPENING DISC HUB	43
0501052234	ASSY SEED SYSTEM	44
0501051094	ASSY SEED DISTRIBUTOR	45
0501051119	DOUBLE PULLEY ROCKER'S	46
0521045198	PRESS WHEELS	47
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	48
0501052297	DEPTH WHEELS REGULATOR ASSY	49
0501052538	DEPTH BAND WITH ARMS	50
0511054333	COMPACT WHEEL RIGHT WITH BEARING	51
0501052908	COMPACTOR WHEEL WITH BEARING	52
0511054334	COMPACT WHEEL LEFT WITH BEARING	53
0511058650	SEMI-MOUNTED DEPTH CONTROL	54
0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	55

INDEX

0501052627	ASSY DEPTH WHEEL HUB		56
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE		57
0511053825	SEMI-ASSEMBLED SHORT FERTILIZER LINE		58
0511053826	SEMI-ASSEMBLED LONG FERTILIZER LINE		59
0511048339	24" BLADE DISC ASSY		60
0521050525	FIXER FERTILIZER CONDUCTOR		61
0503062066	DISC SET WITH CORN RING		62
0503062067	DISC SET / RING SOY 90F TITANIUM		63
0511052024	FAST CLOSING SET		64
0501055579	DRAWBAR ESTABILIZER		65
0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER		66
0501058978	ISOBUS USAP SET		67
0511059709	SUPPOT BASE		68
0511053938	SET LABEL ADHESIVE		69
0511058368	EAR MOVABLE		70
0511059323	PLATFORM TRANSPORT SUPPORT		71
0511053179	TRACTOR COUPLING SHAFT		72

FRAME ASSY

0909099210

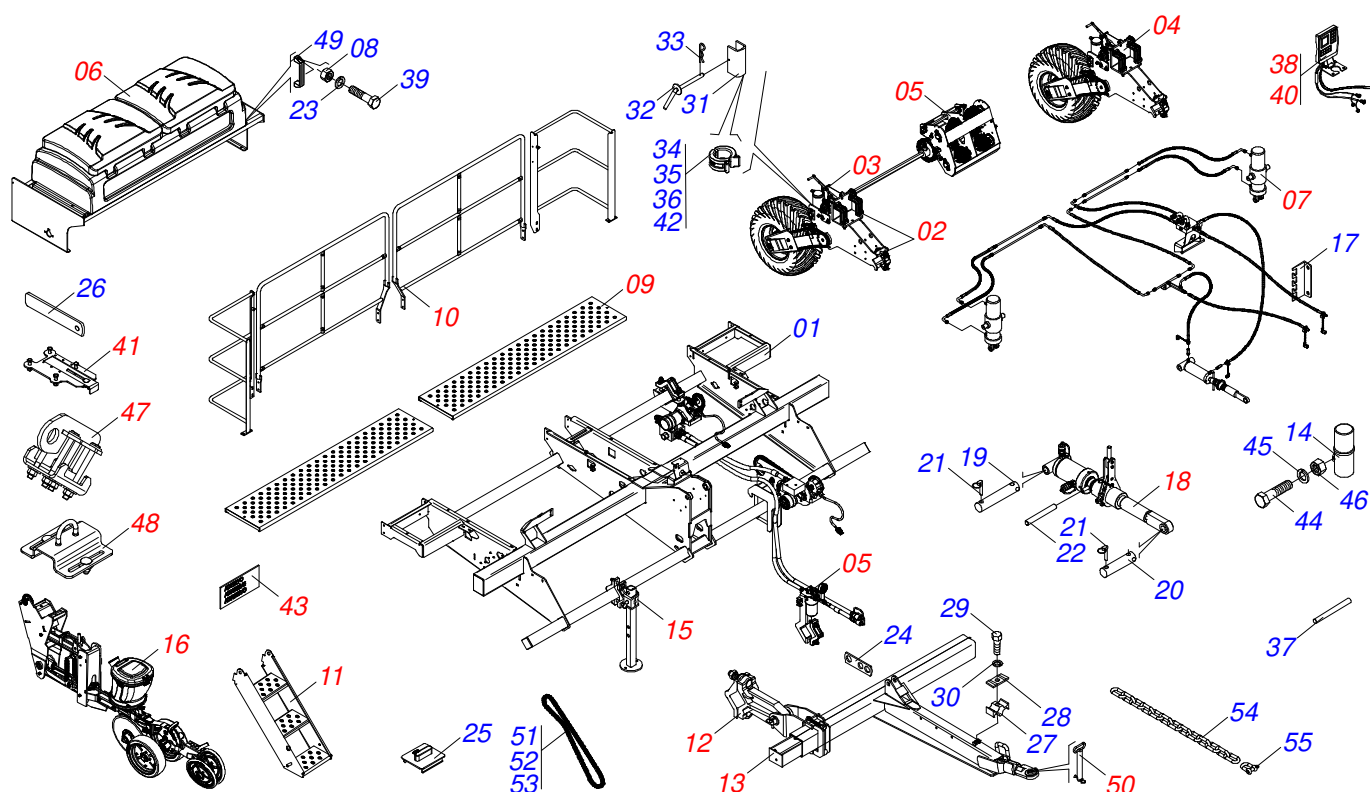


Item	Code	Description	See page	QT
01	0521061323	FRAME		01
02	0511053887	WHEEL FIXING ASSY	2	01
03	0511051682	SPEC HUB AND SPINDLE WITHOUT TRANSM	3	01
04	0511051683	NO TRANSMISSION WHEELED LEFT SET	4	01
05	0511051577	CONJ APT ASSY	6	01
06	0511053892	FERTILIZER BOX ASSEMBLY	11	01
07	0511053911	SET HIDRAULICO	16	01
08	0503010337	5/16" NUT		04
09	0511053891	PLATFORM ASSEMBLY	23	01
10	0511053889	HANDRAIL ASSEMBLE	24	01
11	0511053890	HANDRAIL ASSEMBLE	25	01
12	0511053085	ASSY FIXER HEADER	26	01
13	0511043100	DRAWBAR ASSY	27	01
14	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
15	0511058191	REST ASSY	28	02
16	0909099211	SEED/FERTILIZER ROW ASSEMBLE	29	09
17	0541014576	HOSE FIXER ASSY		01
18	0501055579	DRAWBAR ESTABILIZER	65	01
19	0521018532	1.4" X 12" COUPLING SHAFT		01
20	0521018531	1.4" X 4.5" COUPLING SHAFT		01
21	0503030085	LOCK PIN		02
22	0521018501	TURNBUCKLE LEVER		01
23	0503010179	LOCK WASHER		04
24	0561019087	DRAWBAR TRANSPORT LOCK		01
25	0503032624	FERTILIZER HOPPER GUTTER		06
26	0511015627	SEED DISC LEVER		01
27	0502012702	BODY SUPPORT CLAMP		03
28	0531011180	UPPER BODY CLIP		01
29	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
30	0503010180	7/16" SPRING WASHER		04
31	0521013022	TRANSPORT LOCK		02


Item	Code	Description	See page	QT
32	0501068994	8,30 X 78 LOCK PIN		02
33	0503030168	HITCH PIN CLIP		02
34	0501047885	ROD STOP		03
35	0501047886	ROD STOP		03
36	0501047887	ROD STOP		03
37	0531013600	PRESS ADJUSTMENT LEVER		01
38	0501058978	ISOBUS USAP SET	67	01
39	0503010371	5/16" X 1" BOLT		04
40	0501058978	ISOBUS USAP SET	67	01
41	0511059709	SUPPOT BASE	68	06
42	0501047895	ROD STOP		03
43	0511053938	SET LABEL ADHESIVE	69	01
44	0503010358	5/16" X 5/8" BOLT		01
45	0503010179	LOCK WASHER		01
46	0503010337	5/16" NUT		01
47	0511058368	EAR MOVABLE	70	02
48	0511059323	PLATFORM TRANSPORT SUPPORT	71	04
49	0503011957	NYLON LUG		02
50	0511053179	TRACTOR COUPLING SHAFT	72	01
51	0503016852	50-1 X 85 CHAIN LINK + MENDING		02
52	0503015364	40-1 X 51 CHAIN LINK + MENDING		02
53	0503010578	2050 CHAIN X 39 LINK + MENDING		02
54	0503014120	CHAIN		01
55	0503014321	CABLE STEEL SHACKLE		02

WHEEL FIXING ASSY


0511053887

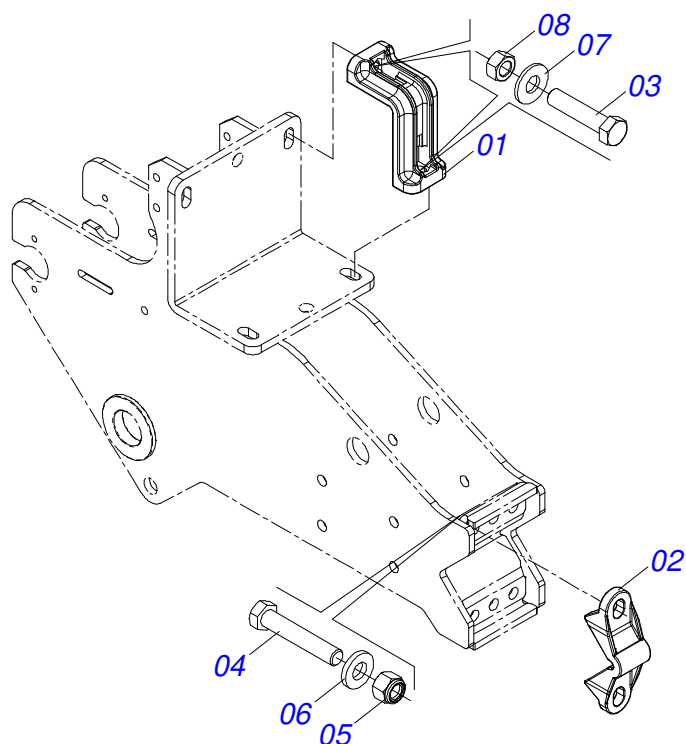

Item	Code	Description	See page	QT
01	0502012400	ROW FERTILIZER FIXER		04
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		04
03	0503010797	3/4" X 4" BOLT		08
04	0503016485	BOLT 3/4		08
05	0503010152	3/4" SELF LOCKING NUT		08
06	0541010763	FLAT WASHER		08
07	0501010322	FLAT WASHER		08
08	0503011255	3/4" LOCK NUT		08

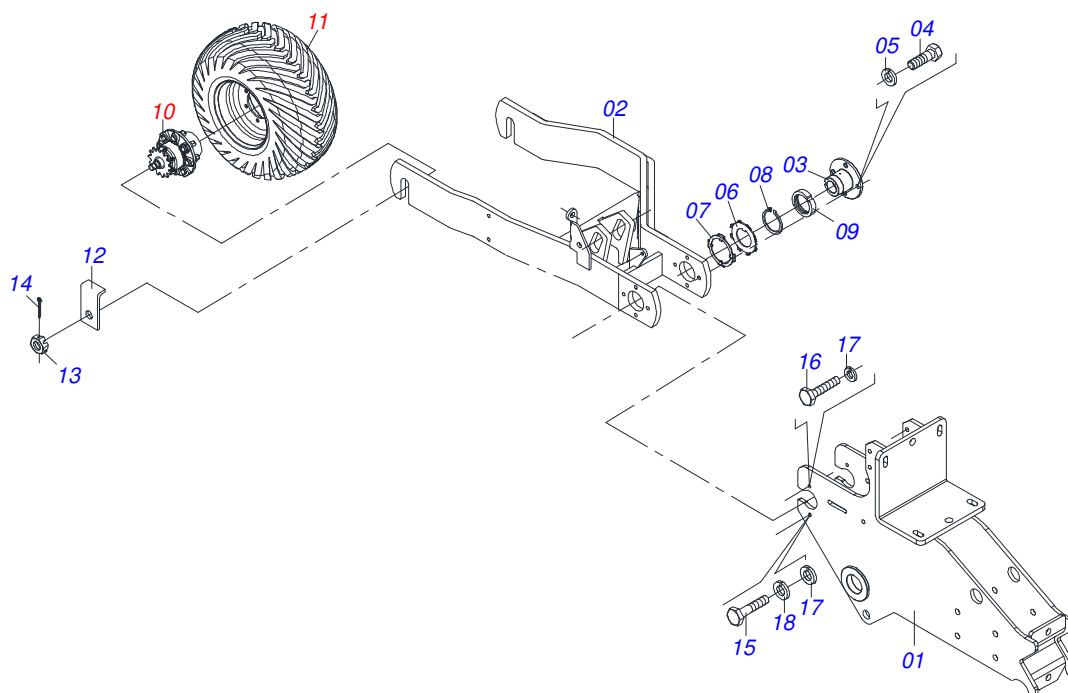


Item	Code	Description	See page	QT
001	0511065423	WHEEL SUPPORT		01
002	0521061337	RIGHT WHEEL FORK		01
003	0501110625	BEARING ARTICULATION WHEEL		02
004	0503013232	1/2" BOLT		08
005	0503010019	1/2" SPRING WASHER		08
006	0561013021	BEARING INNER LOK		02
007	0561013022	BEARING EXTERNAL LOCK		02
008	0503010398	501082 CLAMPING RING (FOR AXLE)		02
009	0561013020	KM 12 NUT		02
010	0501059655	HUB CARRYING-WHEELS	5	01
011	0521052339	400/60 X 15,5-14L RODA		01
012	0531015109	WHEEL AXLE LOCK		02
013	0503011052	1.1/4" X 0.77" CASTLE NUT		02
014	0503010523	1/4" X 2" COTTERPIN		02
015	0503010834	1/2 X 1 BOLT		03
016	0503010395	1/2" X 1-1/4" BOLT		01
017	0503010019	1/2" SPRING WASHER		04
018	0503010180	7/16" SPRING WASHER		01

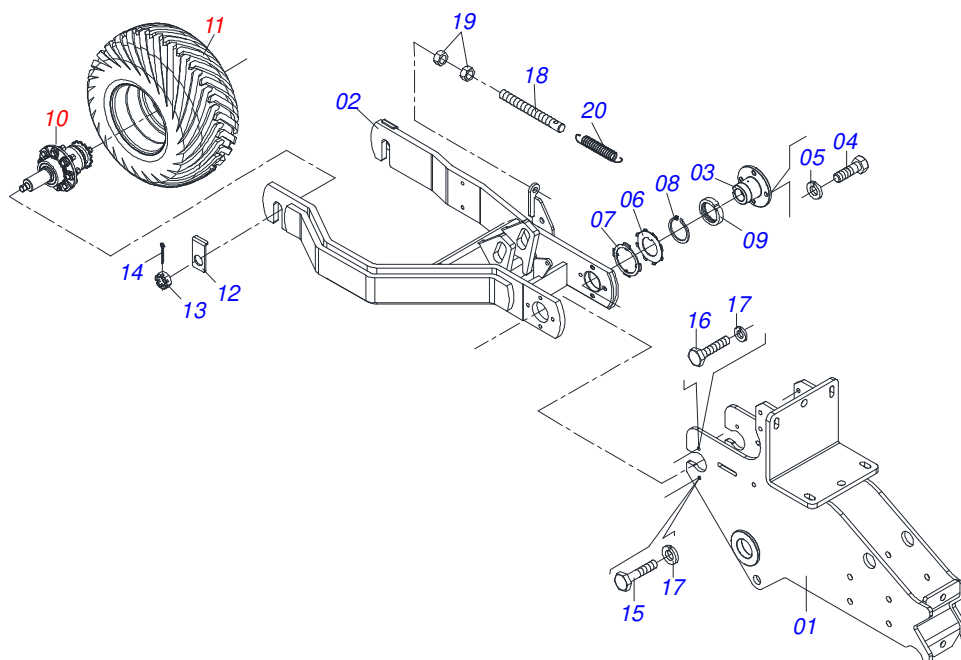


Item	Code	Description	See page	QT
001	0511065423	WHEEL SUPPORT		01
002	0521061338	LEFT WHEEL FORK		01
003	0501110625	BEARING ARTICULATION WHEEL		02
004	0503013232	1/2" BOLT		08
005	0503010019	1/2" SPRING WASHER		08
006	0561013021	BEARING INNER LOK		02
007	0561013022	BEARING EXTERNAL LOCK		02
008	0503010398	501082 CLAMPING RING (FOR AXLE)		02
009	0561013020	KM 12 NUT		02
010	0501059655	HUB CARRYING-WHEELS	5	01
011	0521052340	WHEEL AND TIRE ASSY		01
012	0531015109	WHEEL AXLE LOCK		02
013	0503011052	1.1/4" X 0.77" CASTLE NUT		02
014	0503010523	1/4" X 2" COTTERPIN		02
015	0503010834	1/2 X 1 BOLT		03
016	0503010395	1/2" X 1-1/4" BOLT		01
017	0503010019	1/2" SPRING WASHER		04
018	0501013491	5/8" TENSIONER SPRING		01
019	0503010013	5/8" NUT		02
020	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01

HUB CARRYING-WHEELS


0501059655

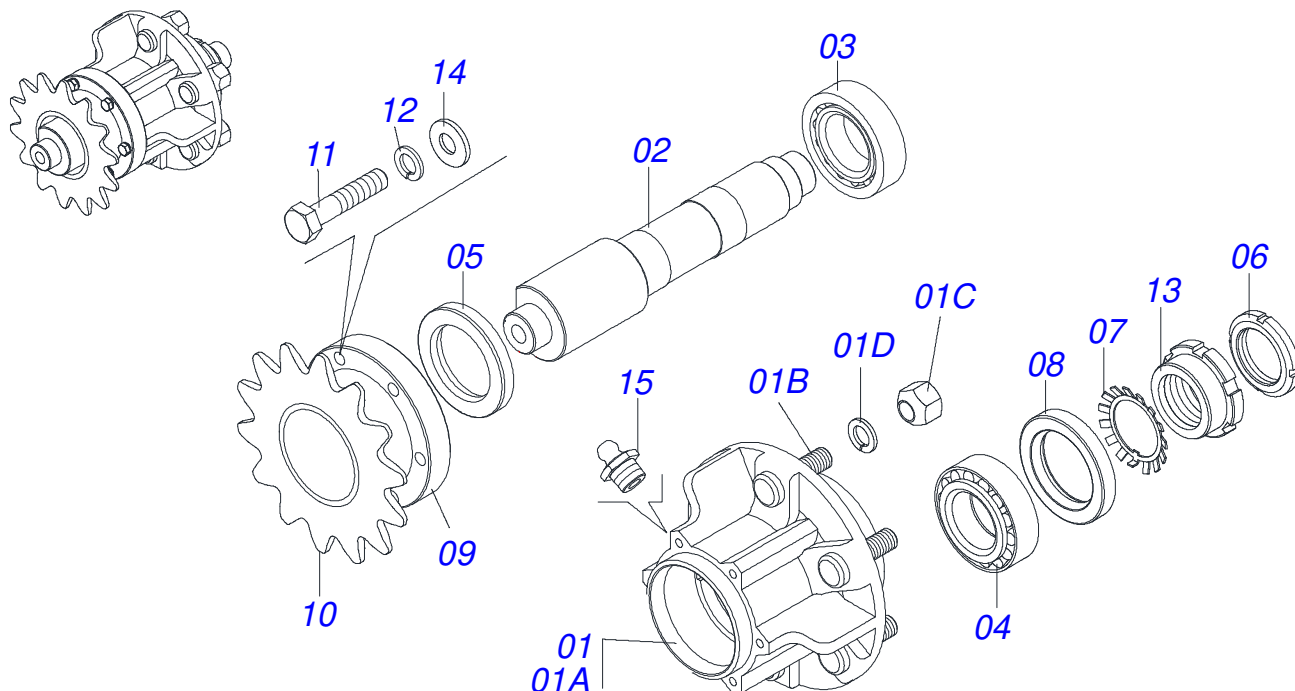

Item	Code	Description	See page	QT
01	0501110751	HUB AND SPINDLE WITH BOLT		01
01A	0502040522	HUB CARRYING-WHEELS		01
01B	0503011339	M22 X 1,5 X 72 BOLT		08
01C	0503011341	M22 X 0.6" NUT GR8		08
01D	0503011340	SPHERICAL SPRING WASHER		08
02	0561015609	WHEEL AXLE		01
03	0503010059	33287/33462 ROLLER BEARING		01
04	0503010007	3982/3920 ROLLER BEARING		01
05	0503010050	SEAL 00085-B		01
06	0503012702	KM-12 NUT		02
07	0503012703	LOCK WASHER		01
08	0503010528	SEAL # 00838-B		01
09	0551017794	PROTRACTOR GEAR		01
10	0502012177	14Z FLANG GEAR		01
11	0503010397	5/16" X 1-3/4" BOLT		06
12	0503011444	SPRING WASHER		06
13	0503011052	1.1/4" X 0.77" CASTLE NUT		02
14	0501010694	FLAT WASHER		06
15	0503010002	1800 GREASE FITTING		01

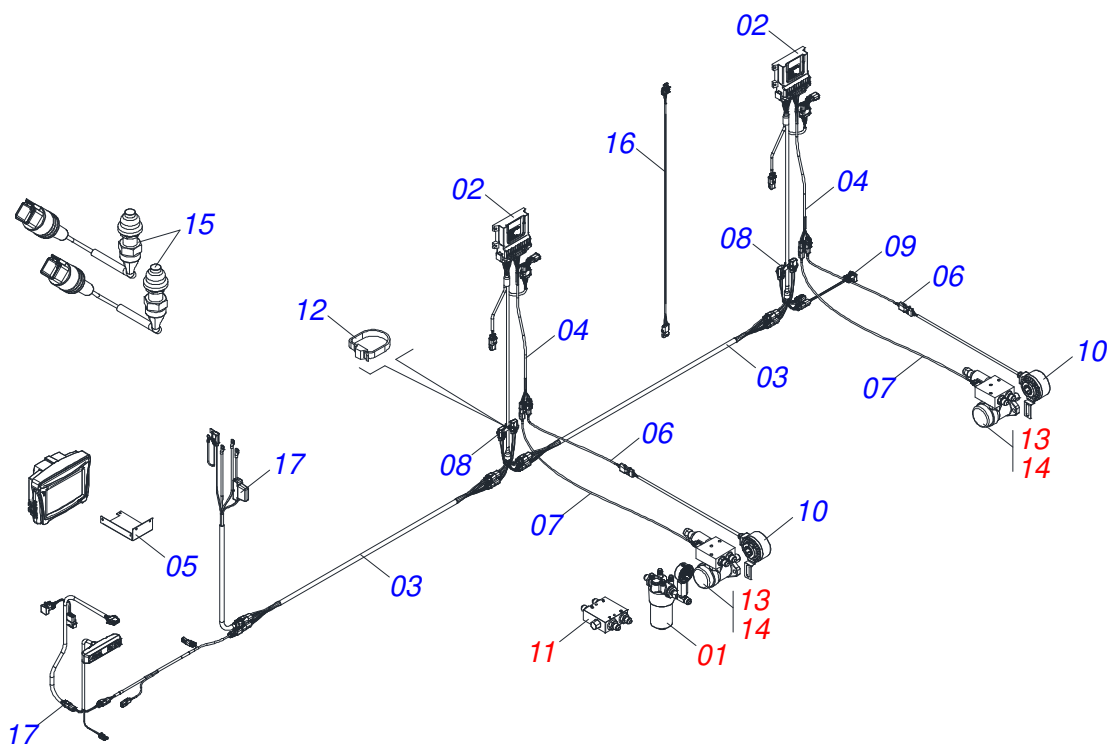


Item	Code	Description	See page	QT
001	0511056972	FILTER HYDAC	7	01
002	0503016240	MODULE		02
003	0503016241	CABLE EXTENSION		01
004	0503016242	SINGLE CABLE		02
005	0503016243	SUPPORT		02
006	0503016244	CABLE FIELD		02
007	0503016245	VALVE CABLE		02
008	0503016246	MODULE CABLE		02
009	0503016344	ADAPTER CABLE		01
010	0503016451	SENSOR		02
011	0511055638	BLOCK FLOW LIMITER	8	01
012	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		**
013	0511056973	PARKER OMP 80 HYDRAULIC MOTOR WITH 9 VALVE		01
014	0511056974	MOTOR	10	01
015	0511057245	SENSOR DE LEVANTE LÍNEA		01
016	0503016348	IMPLEMENT EXTENSION CABLE		01
017	0503062048	CABIN ASSY		01

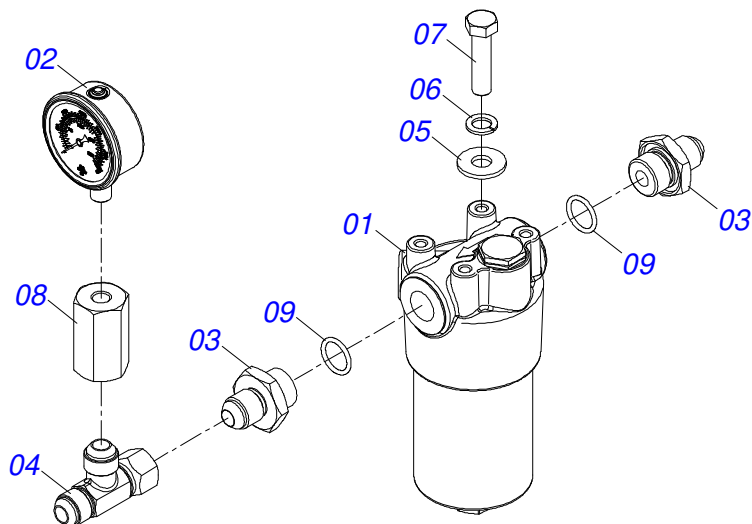


Item	Code	Description	See page	QT
01	0503016376	FILTER SPRING		01
02	0503016336	PRESSURE GAUGE		01
03	0581011416	7/8"NF UNF NIPPLE		02
04	0503012341	T 7/8" ADAPOR GIRAT NUT		01
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		04
07	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
08	0571016236	HIDRAULIC ADAPTER		01
09	0503014724	2-215 N 3006-9B O'RING		02

BLOCK FLOW LIMITER


0511055638

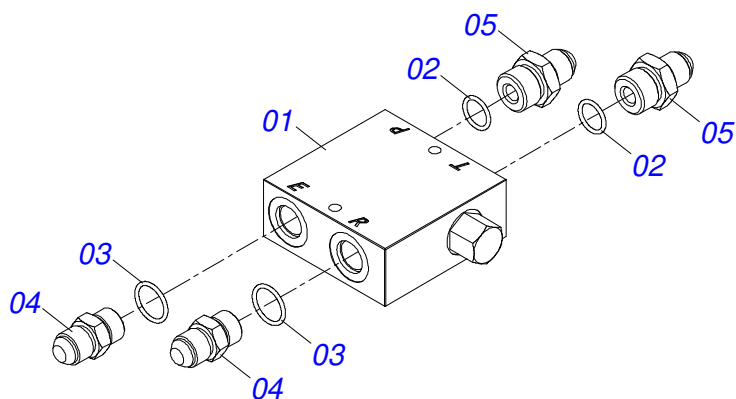

Item	Code	Description	See page	QT
01	0503014953	LIMITING FLOW PACK		01
02	0503010045	O'RING		02
03	0503011109	2-119 N 3006-9B O'RING		02
04	0501010590	NIPPLE		02
05	0571013917	7/8"NF X 1.1/16 UNF NIPPLE		02

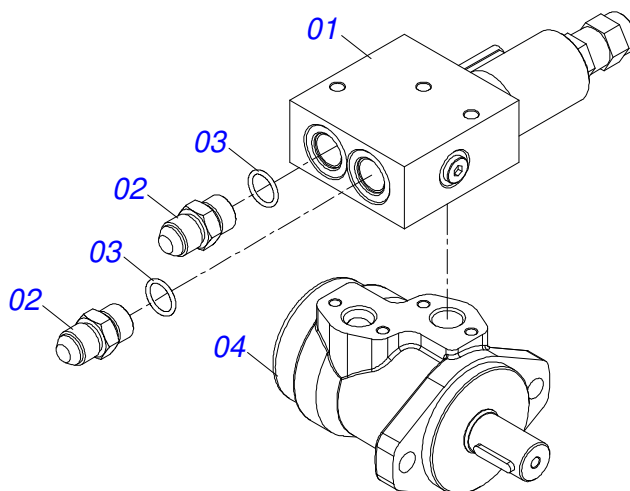


Item	Code	Description	See page	QT
01	0503016037	VALVE		01
02	0501010590	NIPPLE		02
03	0503010045	O'RING		02
04	0503016055	MOTOR HYDRAULIC PARKER OMP 80 ISOBUS		01

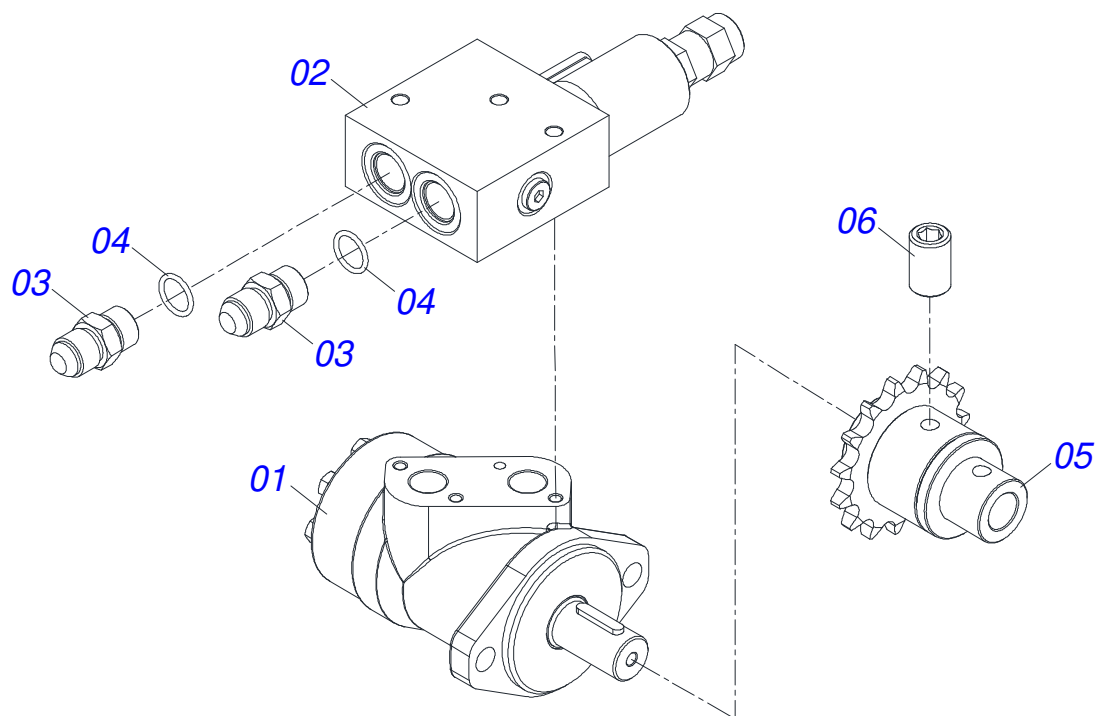


Item	Code	Description	See page	QT
01	0503014364	MOTOR W/ AXLE		01
02	0503016037	VALVE		01
03	0501010590	NIPPLE		02
04	0503010045	O'RING		02
05	0521064025	TRACTOR HITCH		01
06	0503011807	SCREW M8 X 1,25X10		02

FERTILIZER BOX ASSEMBLY


0511053892

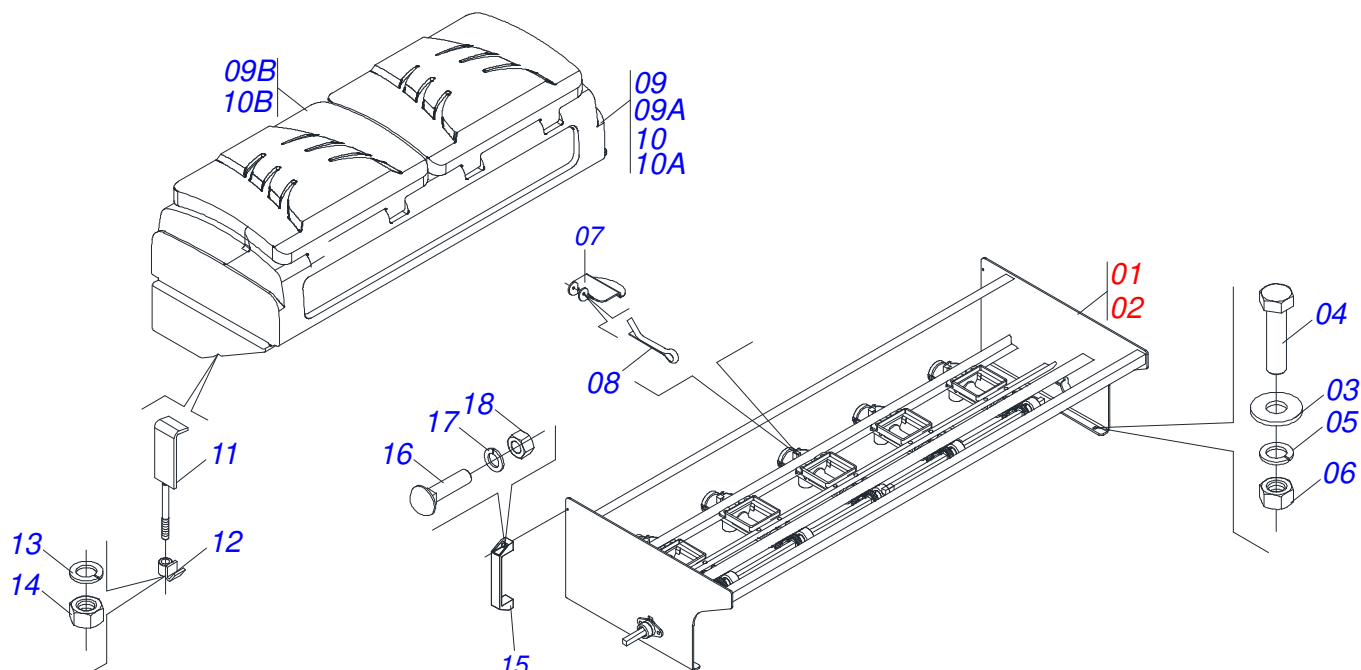


Item	Code	Description	See page	QT
001	0501059656	FERTILIZER SUPORT RIGHT BOX	12	01
002	0501059657	FERTILIZER SUPORT LEFT BOX	13	01
003	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		16
004	0503010849	3/8" X 1-1/2" BOLT		08
005	0503010025	3/8" SPRING WASHER		08
006	0503010026	3/8" NUT		08
007	0571010590	FERTILIZER SIDE COVER		10
008	0503010362	1/8 X 1.1/4 COTTERPIN		10
009	0503060640	COVER BOX RIGHT FERTILIZER		01
009A	0503031954	SILO RIGHT FERTILIZER		01
009B	0503031956	FERTILIZER HOPPER LID		02
010	0503060641	LEFT FERTILIZER HOPPER WITH LID		01
010A	0503031955	LEFT FERTILIZER HOPPER		01
010B	0503031956	FERTILIZER HOPPER LID		02
011	0511062099	FERTILIZER BEAM CLAMP		04
012	0511061886	FERTILIZER BEAM LOCK		04
013	0503010019	1/2" SPRING WASHER		04
014	0503010060	1/2" NUT		04
015	0503011957	NYLON LUG		02
016	0503010371	5/16" X 1" BOLT		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04

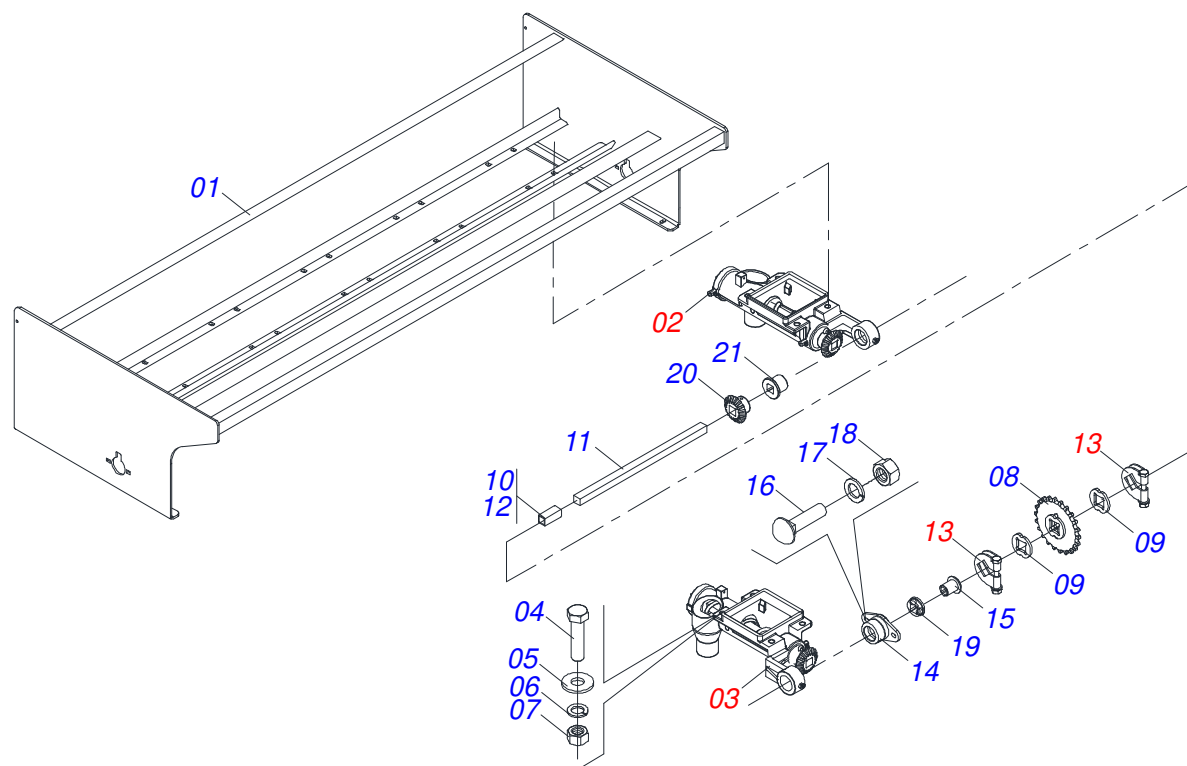


Item	Code	Description	See page	QT
01	0521061324	BOX FERTILIZER SUPPORT		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	14	02
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	15	03
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		20
05	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		20
06	0503011443	3/8" SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0511010866	RIGHT AXLE		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER		02
14	0501110392	HOPPER SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01
20	0502012990	CONICA 14Z SQUARE GEAR		05
21	0503030275	AGRICULTURAL BEARING		05

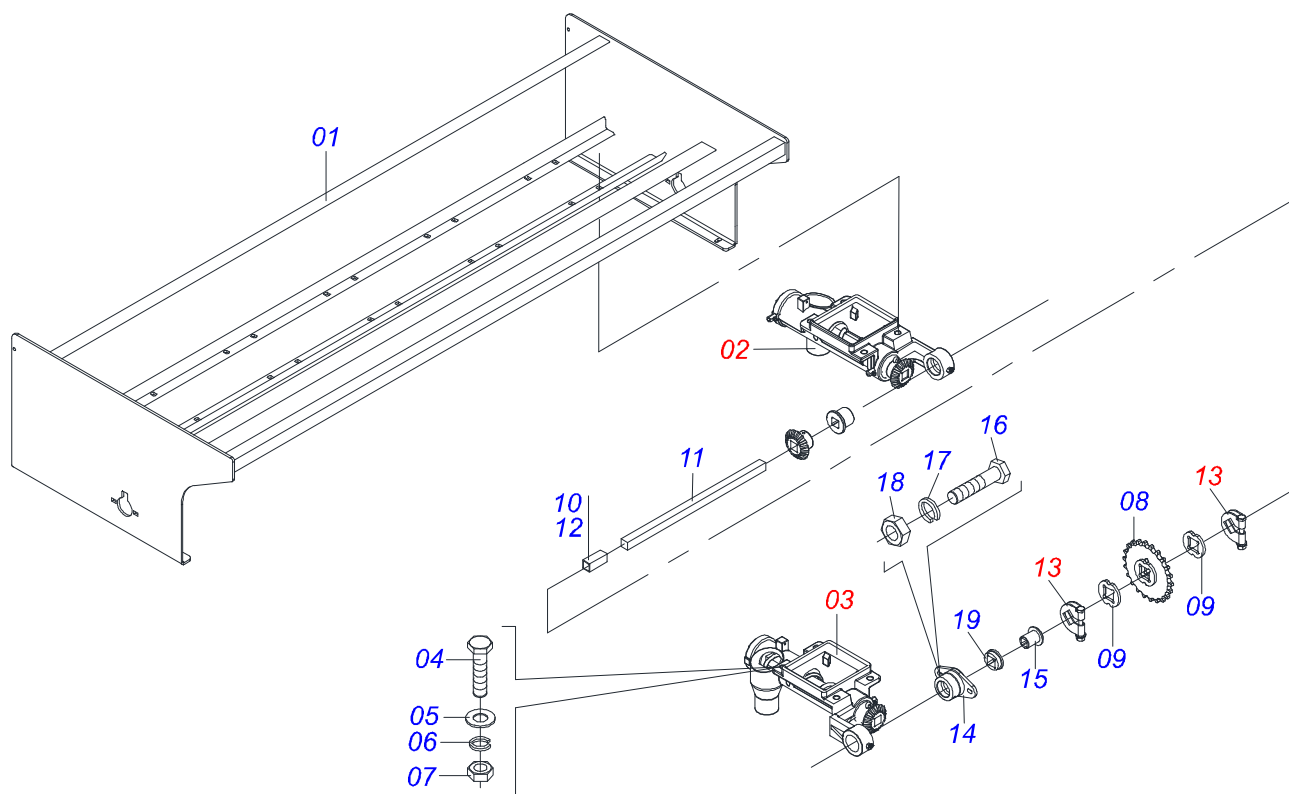


Item	Code	Description	See page	QT
01	0521061325	FERTILIZER SUPORT LEFT BOX		01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	14	03
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	15	02
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		20
05	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		20
06	0503011443	3/8" SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0521014167	CONE LOCK		02
10	0551018055	22,65 X 60 SLEEVE		01
11	0511010866	RIGHT AXLE		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0501053788	3/4 SQUARE AXLE FASTENER		02
14	0501110392	HOPPER SUPPORT BEARING		01
15	0521012485	GEAR BOX BEARING AGRICUTURAL		01
16	0503010363	5/16" X 1" BOLT		02
17	0503011444	SPRING WASHER		02
18	0503010337	5/16" NUT		02
19	0503030303	SUPPORT WASHER		01

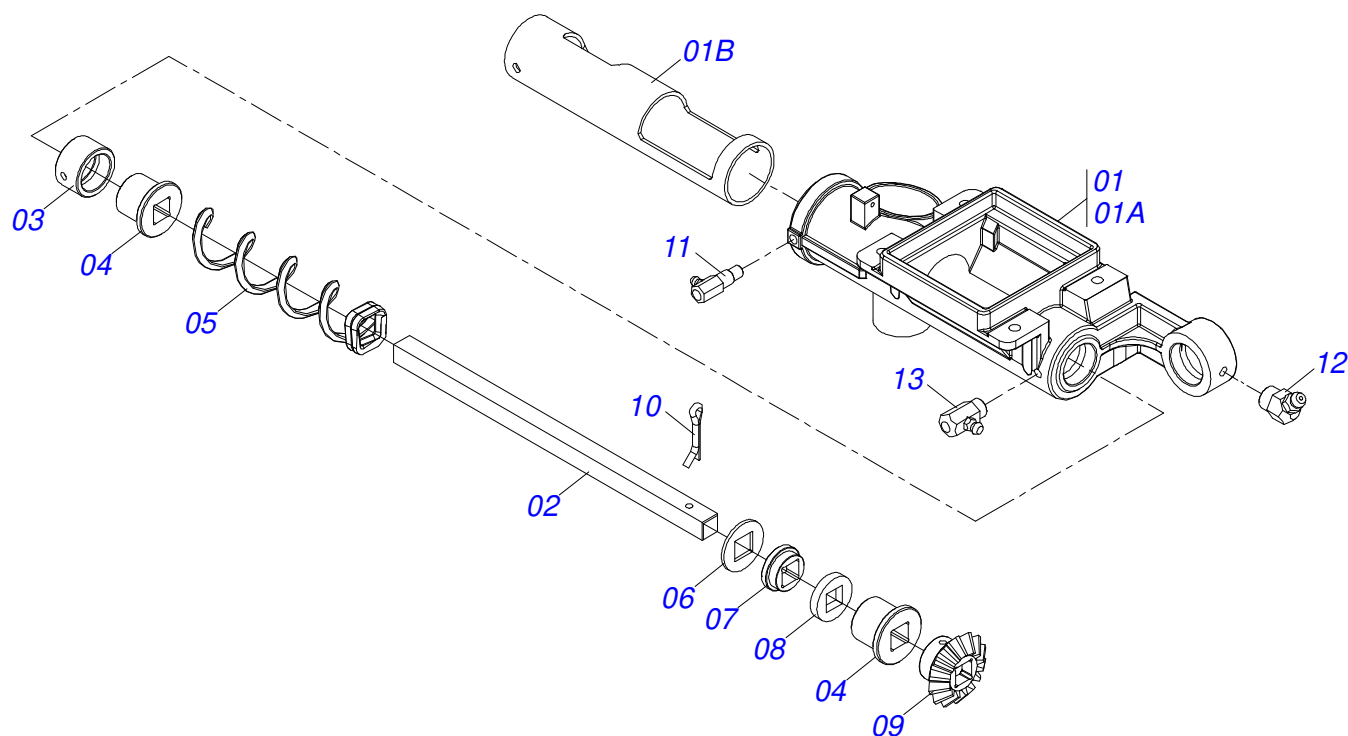


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

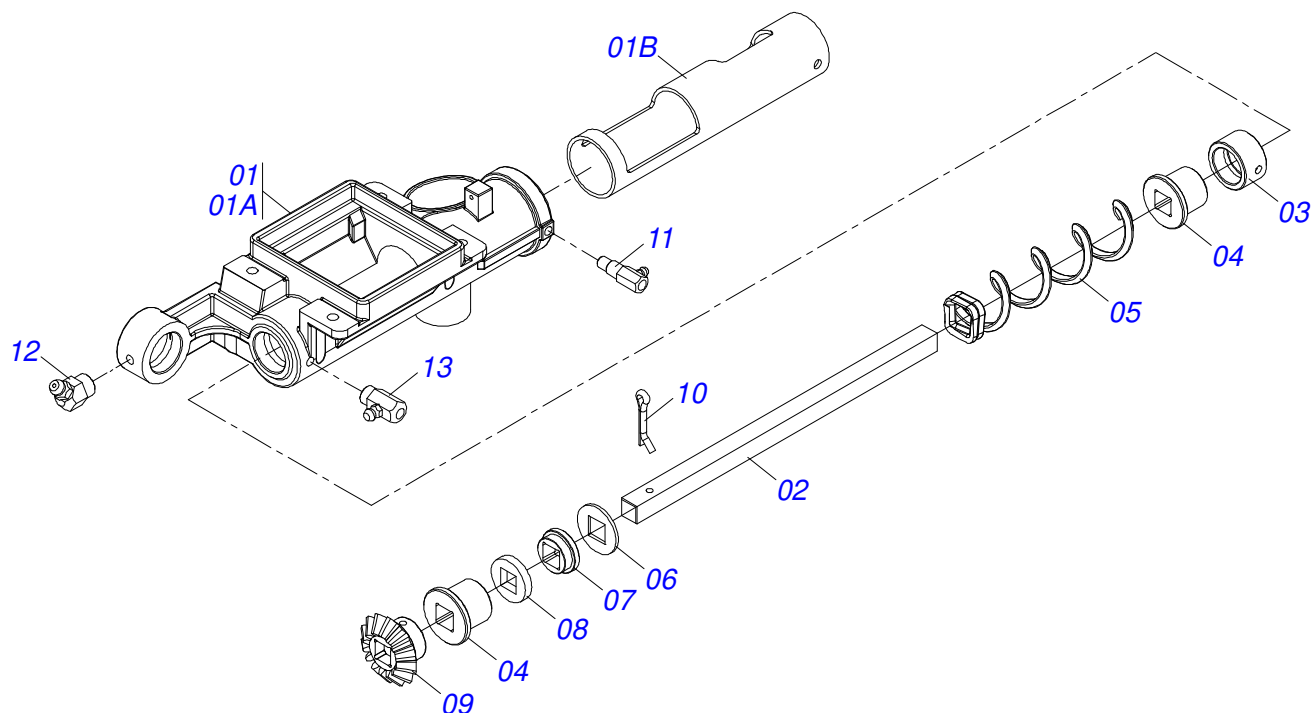

Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

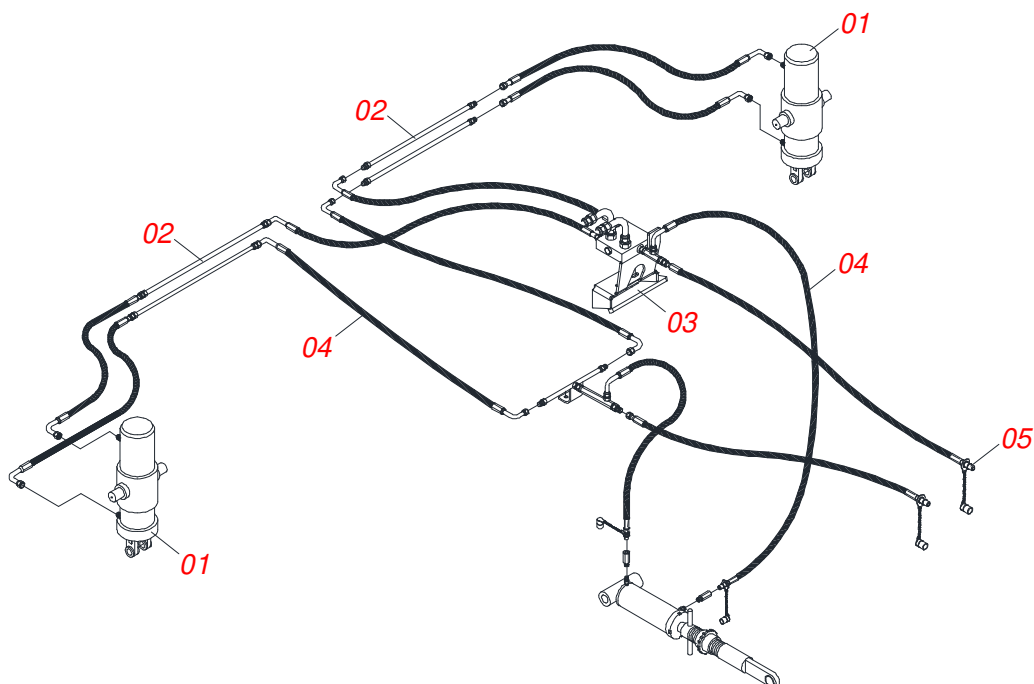


Item	Code	Description	See page	QT
001	0511053894	HYDRAULIC CYLINDER ASSEMBLY	17	01
002	0511053910	DUTY ASSEMBLY	19	01
003	0511053896	FLUXO DIVIDER VALVE FIXING ASSEMBLY	20	01
004	0511052197	WHEELS HOSE ASSEMBLY	21	01
005	0501053834	MALE QUICK COUPLER	22	02

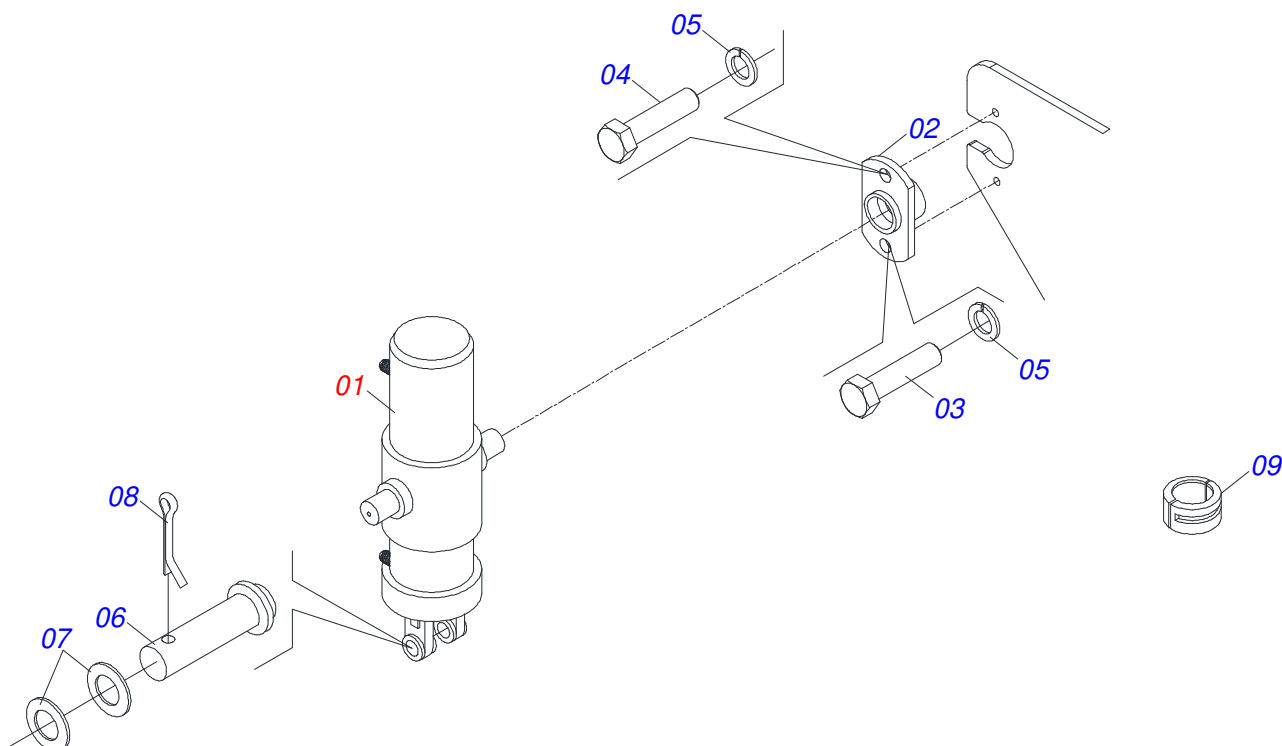


Item	Code	Description	See page	QT
001	0511058411	HYDRAULIC CYLINDER	18	02
002	0511066351	FLANGE CYLINDER HYDRAULIC FIXER		04
003	0503010834	1/2 X 1 BOLT		06
004	0503010395	1/2" X 1-1/4" BOLT		02
005	0503010019	1/2" SPRING WASHER		08
006	0521010546	1.2" X 5.7" COUPLING SHAFT		02
007	0501017779	32 X 60 X 4.75 FLAT WASHER		04
008	0503010523	1/4" X 2" COTTERPIN		02
009	0501047887	ROD STOP		02

HYDRAULIC CYLINDER


0511058411

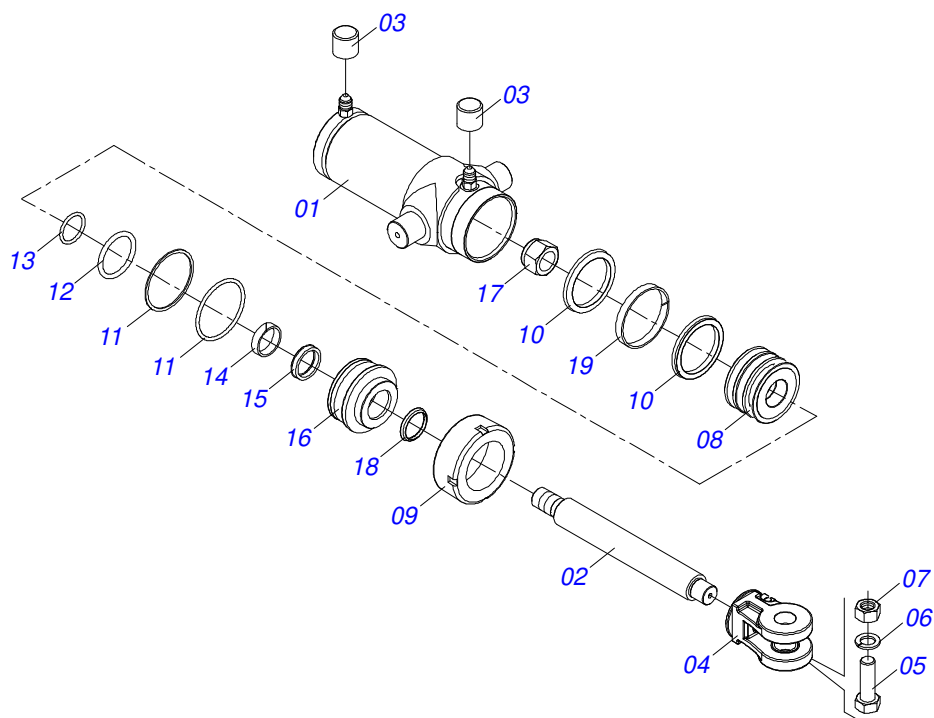

Item	Code	Description	See page	QT
01	0511066774	2.5" X 28" CYLINDER CASE		01
02	0541017674	TURNBUCLE BODY		01
03	0503030385	CYLINDER PLUG N-002		02
04	0511064408	FORK		01
05	0503011094	3/8" X 2" BOLT		01
06	0503010025	3/8" SPRING WASHER		01
07	0503010026	3/8" NUT		01
08	0581010302	RING OF SUPPORT		01
09	0502012822	101.60 END CAP		01
10	0503011061	8-342 BACK-UP RING		02
11	0503010338	2-342 N 3006-9B O'RING		02
12	0503017936	RING		01
13	0503017938	RING GUIDE		01
14	0503017937	GASKET		01
15	0503010761	D-1750 SCRAPER RING		01
16	0581010837	PISTON		01
17	0503010817	1.1/4" SELF LOCKING NUT		01
18	0503015633	SELEMASTER SEALING		01
19	0503018029	2-217 O'RING		01

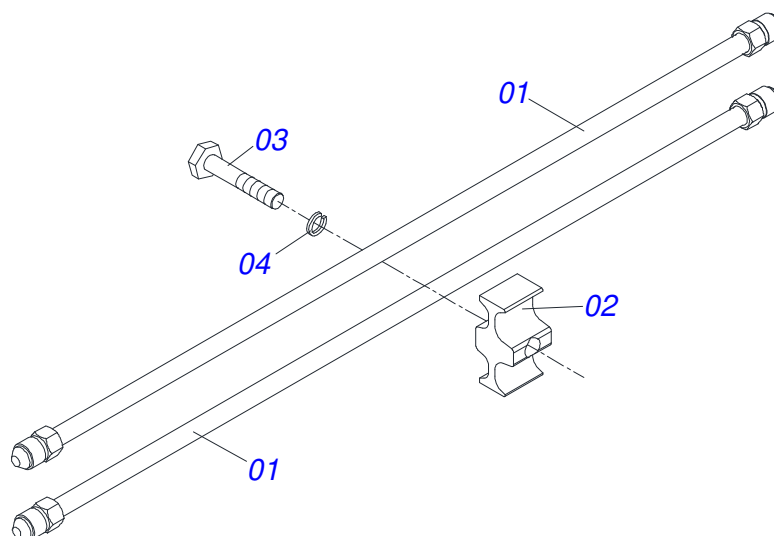


Item	Code	Description	See page	QT
001	0521061340	OIL TUBE		04
002	0502012702	BODY SUPPORT CLAMP		04
003	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
004	0503010180	7/16" SPRING WASHER		04

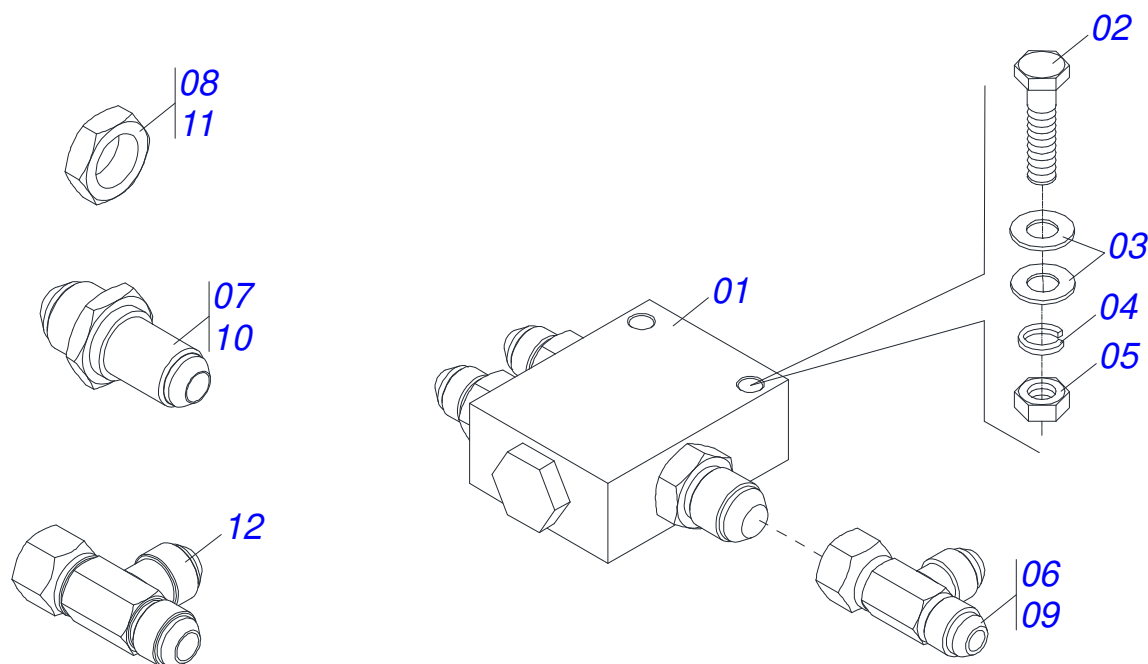


Item	Code	Description	See page	QT
001	0501054452	FLOW DIVIDING VALVE	01	
002	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN	02	
003	0501010694	FLAT WASHER	04	
004	0503010143	1/4" SPRING WASHER	02	
005	0503010144	1/4" NUT	02	
006	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT	01	
007	0541012166	NIPPLE 3/4" UNF X 7/8"	01	
008	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	01	
009	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT	01	
010	0541012166	NIPPLE 3/4" UNF X 7/8"	01	
011	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT	01	
012	0503012341	T 7/8" ADAPOR GIRAT NUT	01	

WHEELS HOSE ASSEMBLY


0511052197

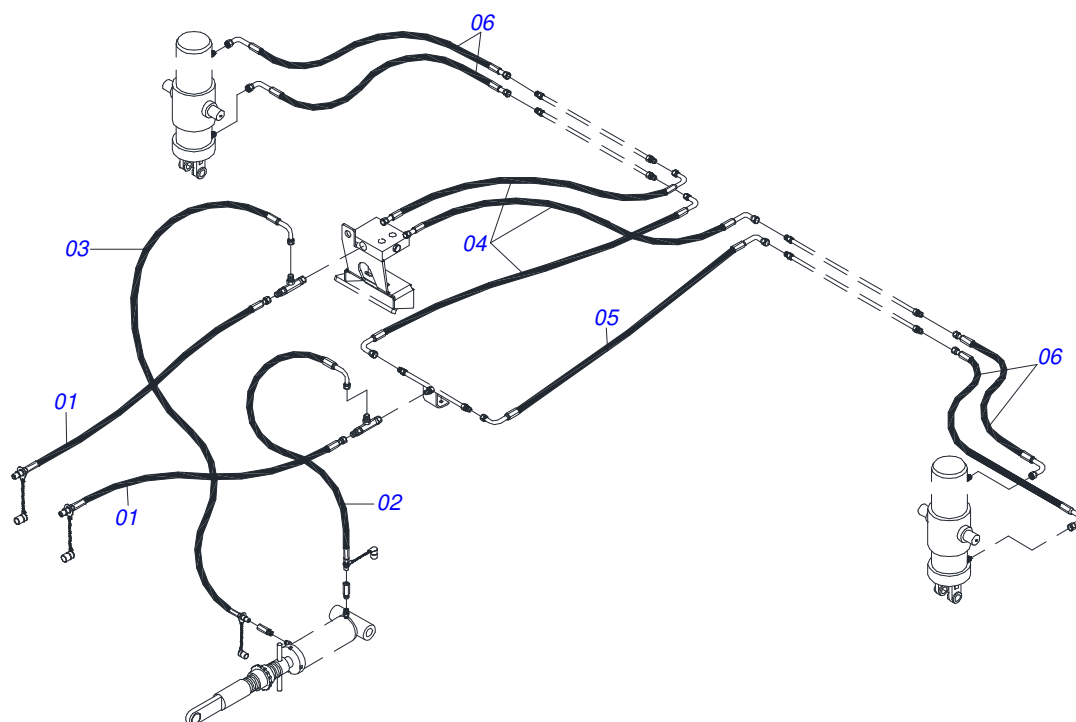

Item	Code	Description	See page	QT
01	0501080933	HOSE 1/2 X 4200 TR-TM		02
02	0501080116	TR-TM HOSE ASSY		01
03	0501080182	1/2" X 850 TR-TM HOSE ASSY		01
04	0501080396	3/8" X 45" HOSE		03
05	0501080687	3/8 X 1150 TC-TC HOSE ASSY		01
06	0501080054	3/8" X 17" TR-TC HOSE ASSY		04

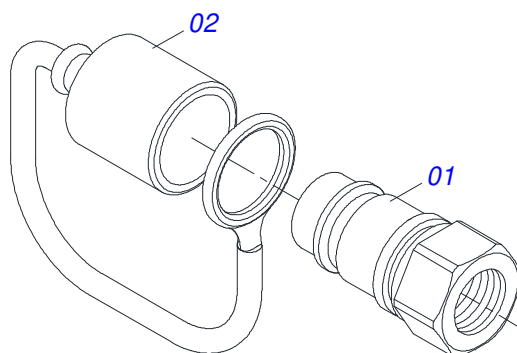


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

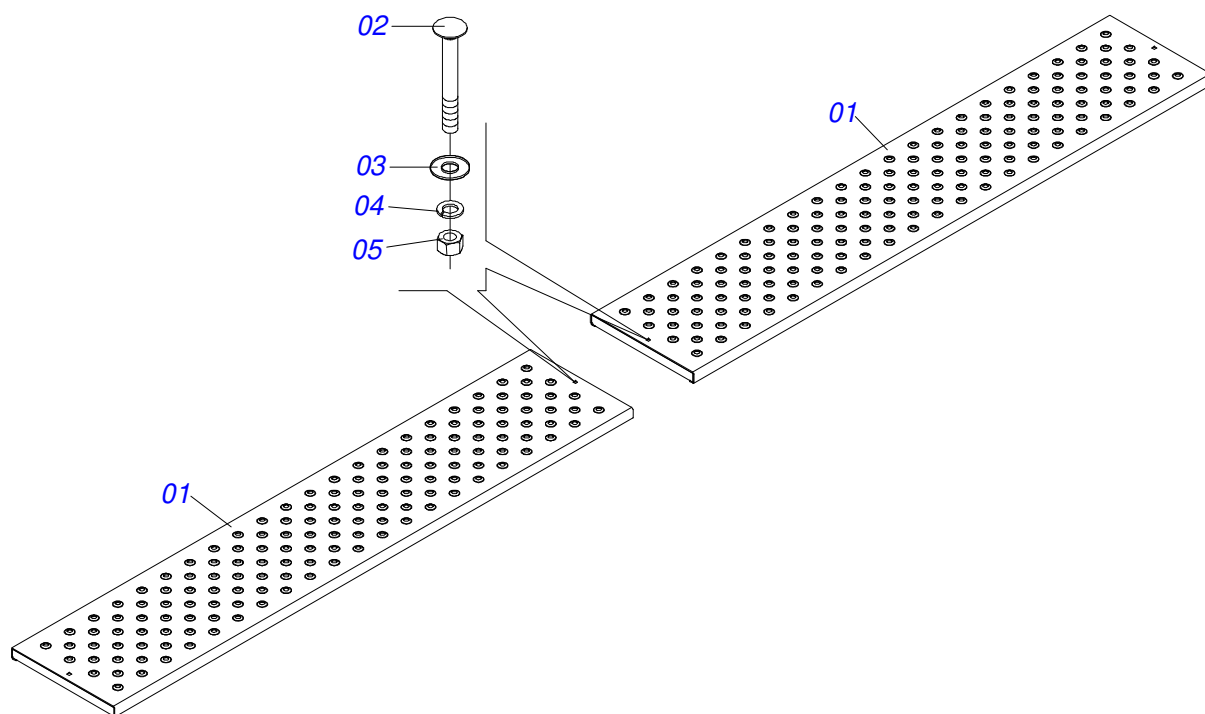

Item	Code	Description	See page	QT
01	0521061333	PLATFORM		02
02	0501011755	3/8" X 3" BOLT		04
03	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04

HANDRAIL ASSEMBLE


0511053889

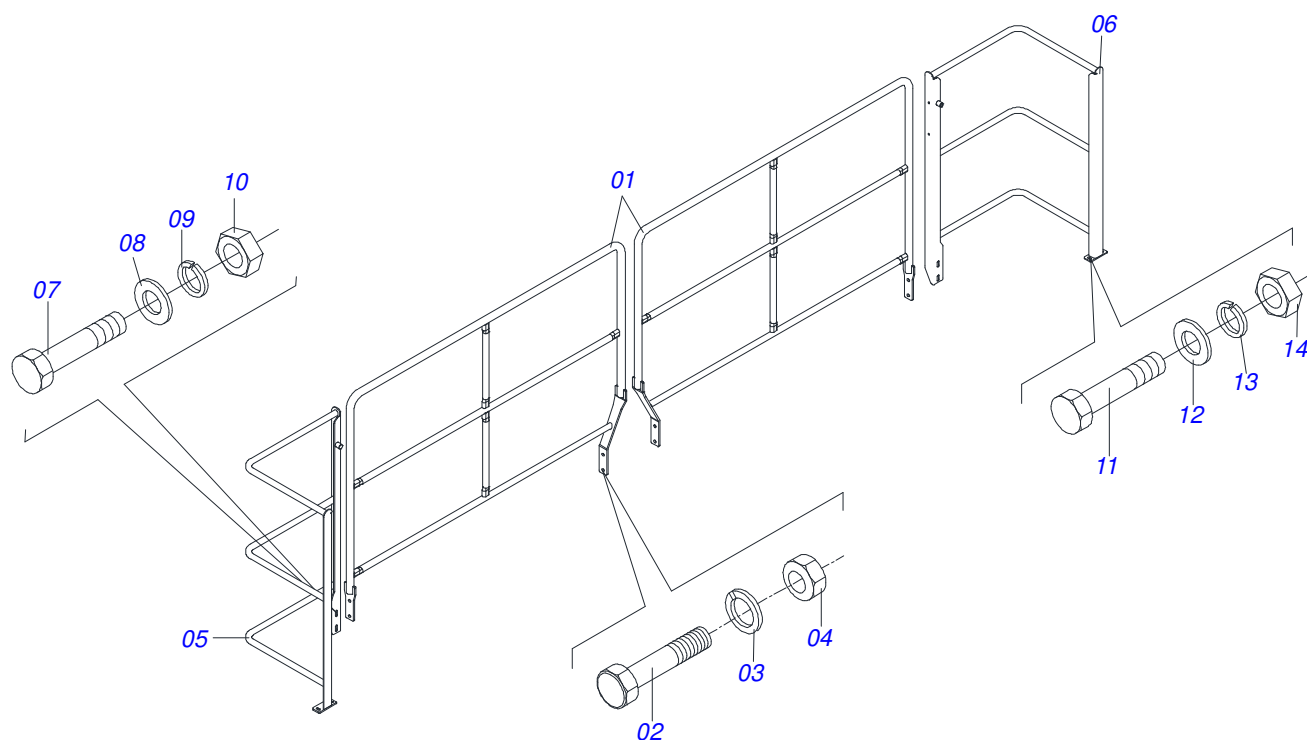


Item	Code	Description	See page	QT
01	0521061334	HANDRAIL	02	
02	0503010920	1/2" X 1.1/2" BOLT	08	
03	0503010019	1/2" SPRING WASHER	08	
04	0503010060	1/2" NUT	08	
05	0521061335	RIGHT SIDE HANDRAIL	01	
06	0521061336	LH SIDE HANDRAIL	01	
07	0503011088	3/8" X 1-1/4" BOLT	04	
08	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN	08	
09	0503010025	3/8" SPRING WASHER	04	
10	0503010026	3/8" NUT	04	
11	0501010161	1/2" X 1.1/4" BOLT	04	
12	0511017302	FLAT WASHER	04	
13	0503010019	1/2" SPRING WASHER	04	
14	0503010060	1/2" NUT	04	

HANDRAIL ASSEMBLE

0511053890

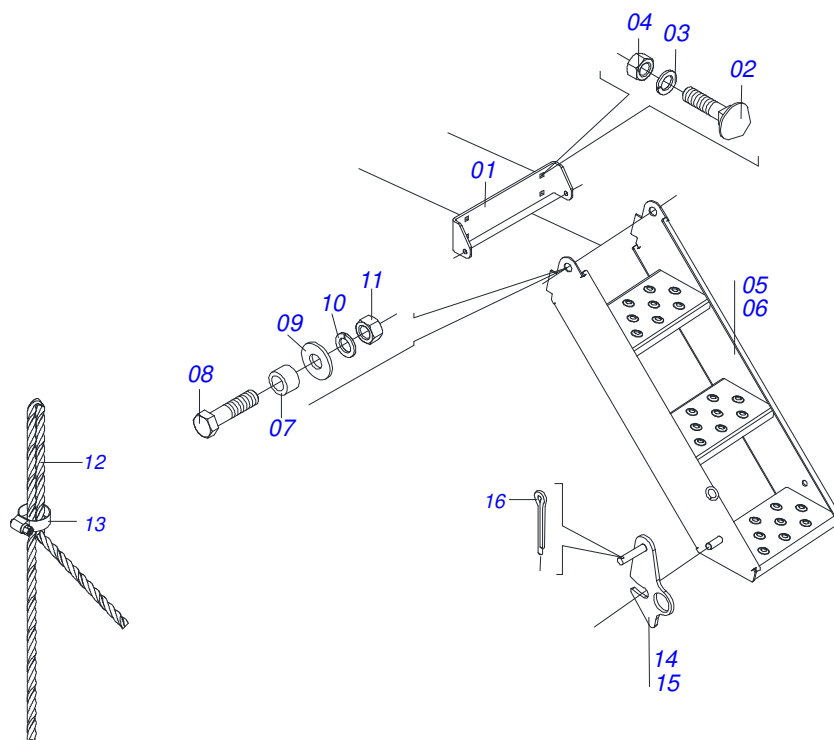


Item	Code	Description	See page	QT
001	0561015343	ARTICULACION SUPPORT		02
002	0501010243	1/2" X 1-1/2" BOLT		08
003	0503010019	1/2" SPRING WASHER		08
004	0503010060	1/2" NUT		08
005	0521061331	RIGHT LADDER		01
006	0521061332	LEFT LADDER		01
007	0531018627	0.5" X 1" X 0.2" SLEEVE		04
008	0503010920	1/2" X 1.1/2" BOLT		04
009	0511017302	FLAT WASHER		04
010	0503010019	1/2" SPRING WASHER		04
011	0503010060	1/2" NUT		04
012	0511010369	3/8" X 74.80" LEVER ROPE		02
013	0503010296	CLAMP		04
014	0511065678	STAIR RIGHT LOCK		01
015	0511065679	STAIR RIGHT LOCK		01
016	0503010257	1/8" X 1" COTTERPIN		02

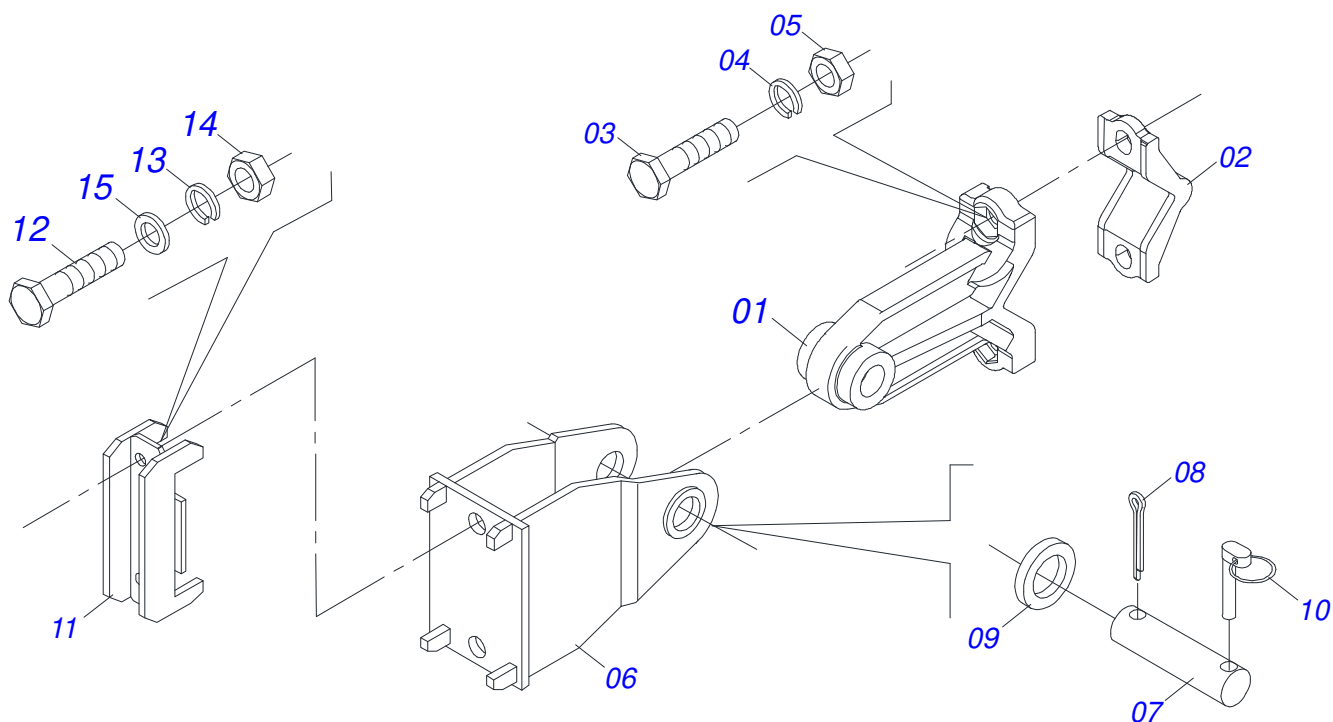


Item	Code	Description	See page	QT
01	0502012329	DRAWBAR FIXATION REAR SUPPORT	04	
02	0502012330	SUPPORT FIXER PIVOT	04	
03	0503011084	3/4" X 5" BOLT	08	
04	0503010023	3/4" SPRING WASHER	08	
05	0503010014	3/4" NUT	08	
06	0511065418	DRAWBAR SUPPORT FRONT FIXATION	04	
07	0561014393	COUPLING SHAFT	04	
08	0503010523	1/4" X 2" COTTERPIN	04	
09	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN	08	
10	0503030119	LOCK PIN	04	
11	0511065419	DRAWBAR FIXER CLAMP	04	
12	0521010066	3/4" X 8.12" BOLT	08	
13	0503010023	3/4" SPRING WASHER	08	
14	0503010014	3/4" NUT	08	
15	0501010322	FLAT WASHER	08	

DRAWBAR ASSY


0511043100

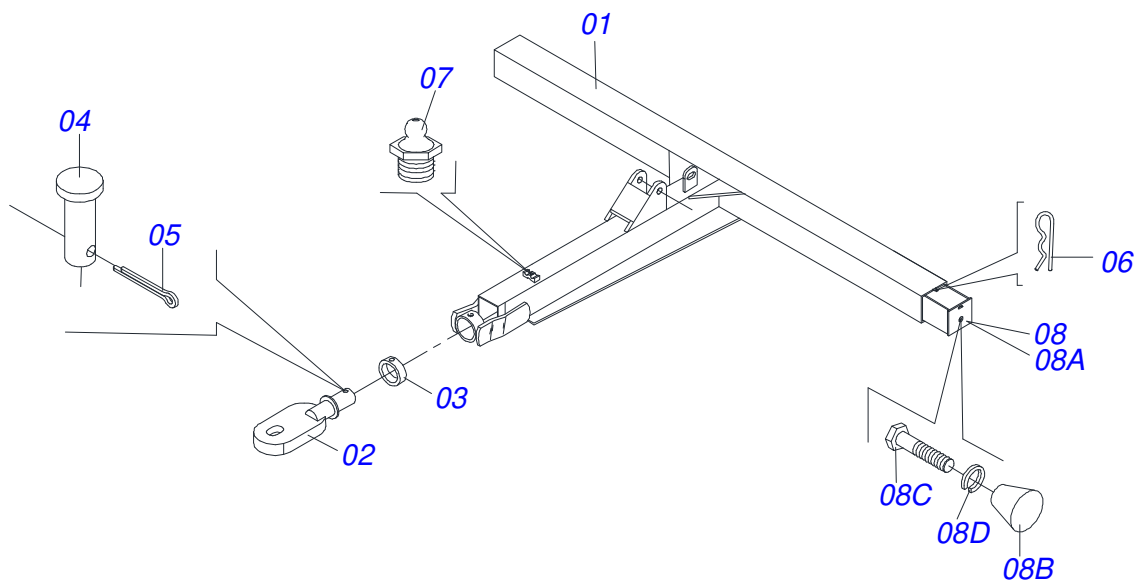


Item	Code	Description	See page	QT
001	0511065905	DRAWBAR COP-CE		01
002	0501069632	TRACTOR HITCH		01
003	0521010681	BUSHING COUPLING BODY		01
004	0521010639	COUPLING SHAFT		01
005	0503010571	1/4" X 1.1/2 COTTERPIN		01
006	0503030012	HITCH PIN CLIP		02
007	0503010002	1800 GREASE FITTING		01
008	0511043137	TOOLS BOX ASSY		02
008A	0511065471	BOX OF TOOLS		01
008B	0503010293	CLAMP KNOB		01
008C	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
008D	0503011443	3/8" SPRING WASHER		01

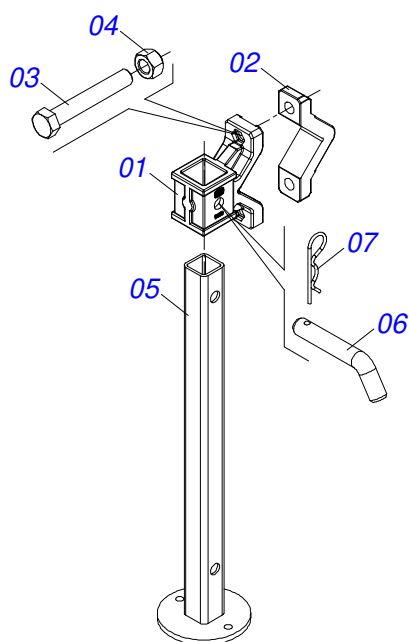

Item	Code	Description	See page	QT
01	0502011530	SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	5/8 UNC SELF LOCKING NUT		04
05	0501069951	PLOUGH SUPPORT		04
06	0501011075	PIN		02
07	0503030012	HITCH PIN CLIP		02

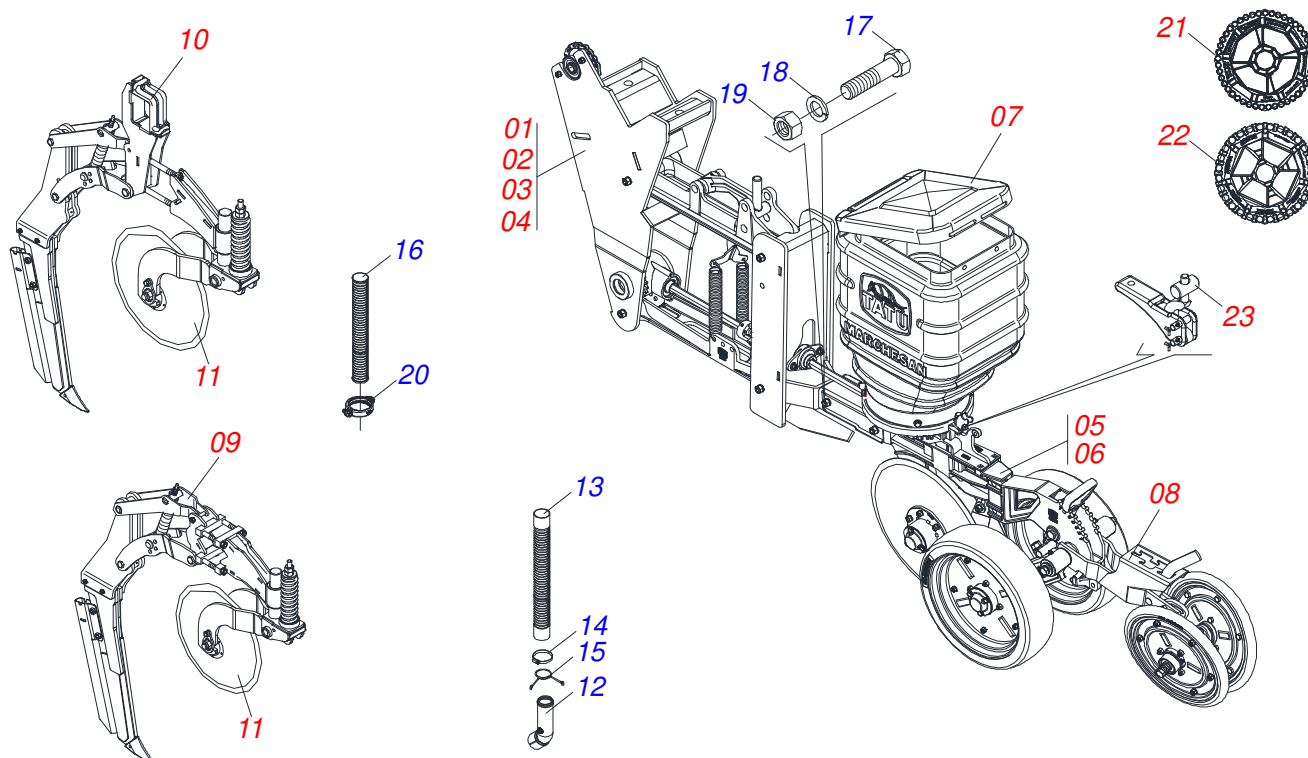

Item	Code	Description	See page	QT
01	0501059362	LONG SEED ROW FRONT	30	01
02	0501059350	LONG FRONT SEED ROW	31	01
03	0501059349	SHORT SEED ROW FRONT	32	01
04	0501059361	SHORT SEED ROW FRONT	33	01
05	0511052319	RIGHT REAR SEED ROW	36	01
05.	0511051783	RIGHT REAR SEED ROW TITANIUM	37	05
06	0511052320	REAR LEFT ROW SEED TITANIUM	38	01
06.	0511051782	LEFT REAR SEED ROW	39	04
07	0501052234	ASSY SEED SYSTEM	44	01
08	0521045198	PRESS WHEELS	47	01
08.	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	48	09
09	0511053825	SEMI-ASSEMBLED SHORT FERTILIZER LINE	58	01
10	0511053826	SEMI-ASSEMBLED LONG FERTILIZER LINE	59	01
11	0511048339	24" BLADE DISC ASSY	60	01
12	0503031050	CURVED CONDUCTOR		07
13	0503031145	2" X 2" X 20" HOSE		07
14	0503010246	CLAMP		07
15	0503031076	2" HOSE CLAMP		14
16	0571011730	SEED CONDUCTOR 3" X 1500		07
17	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		14
18	0503010019	1/2" SPRING WASHER		14
19	0503010060	1/2" NUT		14
20	0521050525	FIXER FERTILIZER CONDUCTOR	61	14
21	0503062066	DISC SET WITH CORN RING	62	07
22	0503062067	DISC SET / RING SOY 90F TITANIUM	63	07
23	0511052024	FAST CLOSING SET	64	07

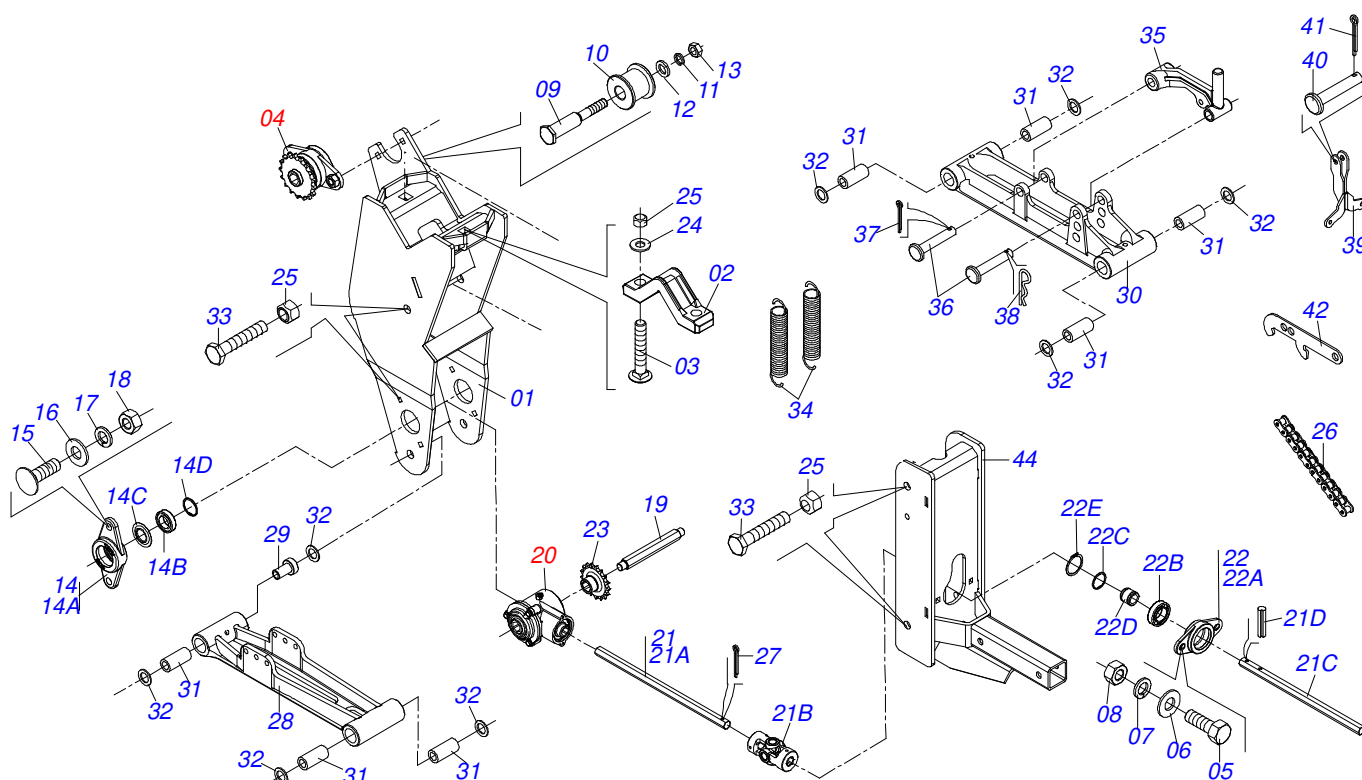


Item	Code	Description	See page	QT
001	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	35	01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
014A	0502012718	BEARIN BODY		01
014B	0503012882	BEARING		01
014C	0503017011	SEAL RING		01
014D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	34	01
021	0501059327	UNIVERSAL JOINT AXLE		01
021A	0561014794	350 AXLE HEX		01
021B	0501056296	UNIVERSAL JOINT		01
021C	0561016631	HEX AXLE		01
021D	0503011855	0.2" X 1.8" SPRING PIN		02
022	0501059363	5/8" HEX AXLE BEARING		01
022A	0502011697	BEARING OF THE GEAR BOX		01

LONG SEED ROW FRONT

0501059362

Item	Code	Description	See page	QT
022B	0503011410	ROLLER BEARING		01
022C	0503011105	SEAL RING		01
022D	0561014911	AXLE SLEEVE GUIDES HEX		01
022E	0503010406	501025 CLAMPING RING (FOR AXLE)		02
023	0502012782	17Z GEAR WITH HEX HOLE		01
024	0501012140	FLAT WASHER		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02
026	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
027	0503010362	1/8 X 1.1/4 COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HITCH PIN CLIP		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0503010013	5/8" NUT		02
044	0521061428	CC TIRE ROW FRAME		01

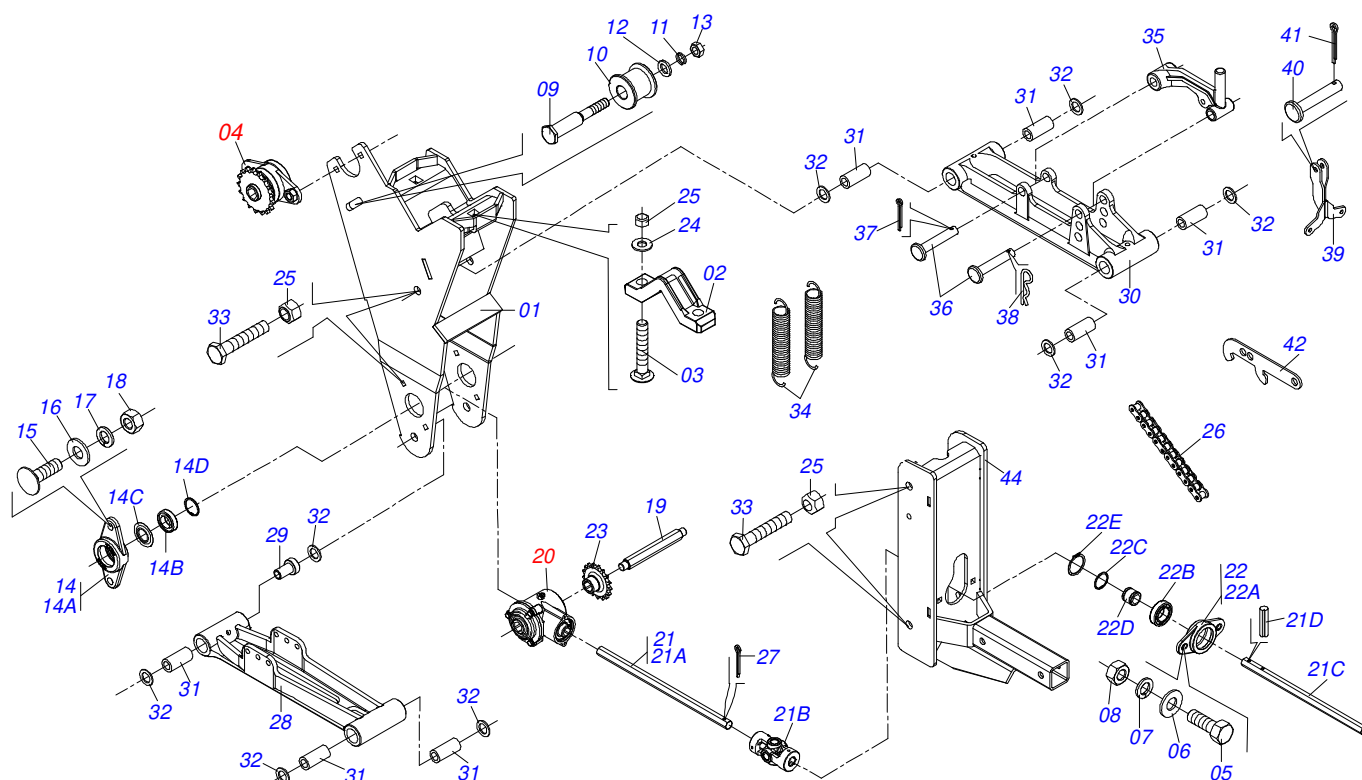


Item	Code	Description	See page	QT
001	0521064651	LEFT SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	35	01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	34	01
021	0501059327	UNIVERSAL JOINT AXLE		01
022	0501059363	5/8" HEX AXLE BEARING		01
022A	0502011697	BEARING OF THE GEAR BOX		01
022B	0503011410	ROLLER BEARING		01
022C	0503011105	SEAL RING		01
022D	0561014911	AXLE SLEVE GUIDES HEX		01
022E	0503010406	501025 CLAMPING RING (FOR AXLE)		02
023	0502012782	17Z GEAR WITH HEX HOLE		01
024	0501012140	FLAT WASHER		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02
026	0503013114	40-1 CHAIN X 89 LINK + MENDING		01



LONG FRONT SEED ROW

0501059350

Item	Code	Description	See page	QT
027	0503010362	1/8 X 1.1/4 COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HITCH PIN CLIP		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0503010013	5/8" NUT		02
044	0521061428	CC TIRE ROW FRAME		01

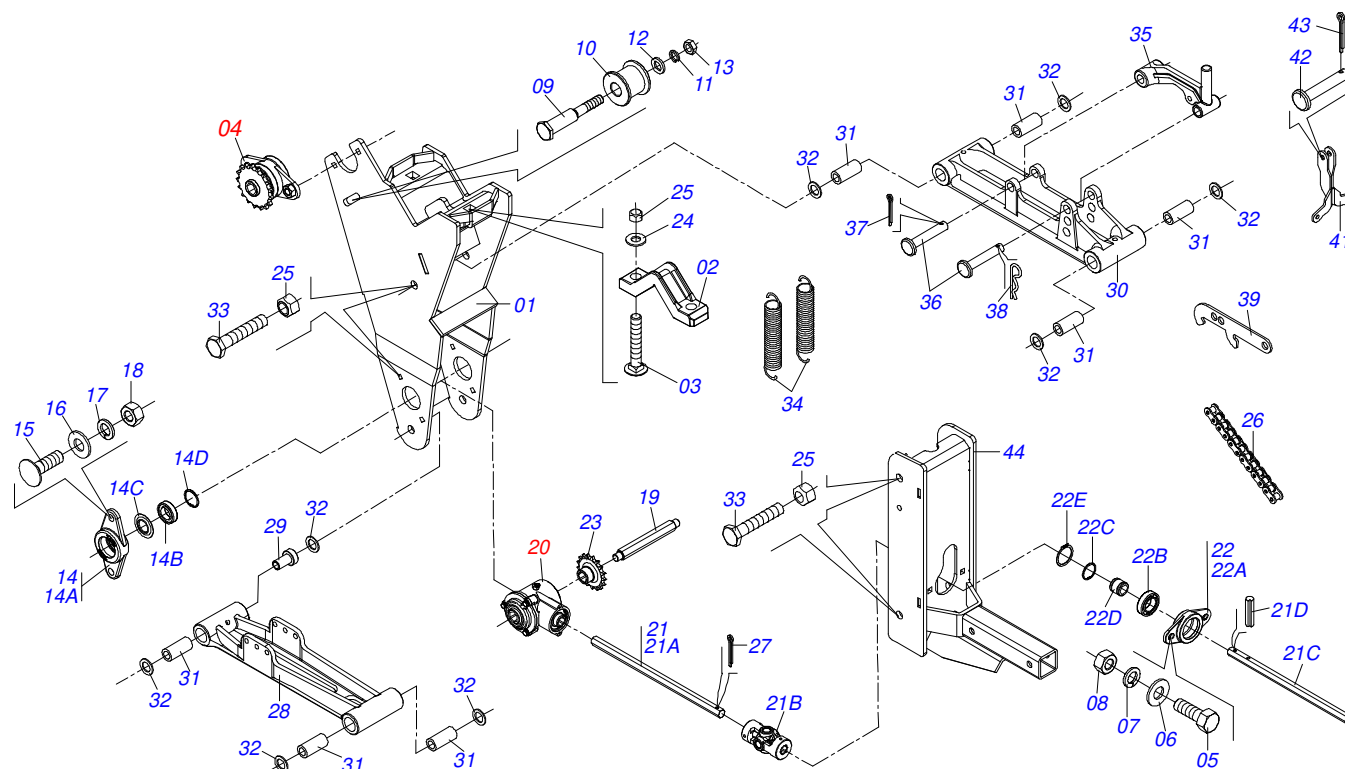

Item	Code	Description	See page	QT
001	0521064651	LEFT SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	35	01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
014A	0502012718	BEARIN BODY		01
014B	0503012882	BEARING		01
014C	0503017011	SEAL RING		01
014D	0503011945	503050 CLAMPING RING (FOR AXLE)		01
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	34	01
021	0501059326	UNIVERSAL JOINT AXLE		01
021A	0561014794	350 AXLE HEX		01
021B	0501056296	UNIVERSAL JOINT		01
021C	0561016322	5/8" HEX AXLE		01
021D	0503011855	0.2" X 1.8" SPRING PIN		02
022	0501059363	5/8" HEX AXLE BEARING		01
023	0502012782	17Z GEAR WITH HEX HOLE		01




SHORT SEED ROW FRONT

0501059349

Item	Code	Description	See page	QT
024	0501012140	FLAT WASHER		02
027	0503010362	1/8 X 1.1/4 COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HITCH PIN CLIP		01
039	0561019032	SEED FERTIL ROW LOCK		01
040	0503010013	5/8" NUT		02
041	0521061850	SPRING UPPER FIXER		01
042	0521010773	0.37" X 1.18" COUPLING SHAFT		01
043	0503010140	1/8" X 3/4" COTTERPIN		01
044	0521061427	SHORT SEED ROW FRAME		01
045	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
046	0503012412	5/8 UNC SELF LOCKING NUT		02
047	0503012412	5/8 UNC SELF LOCKING NUT		04

SHORT SEED ROW FRONT

0501059361

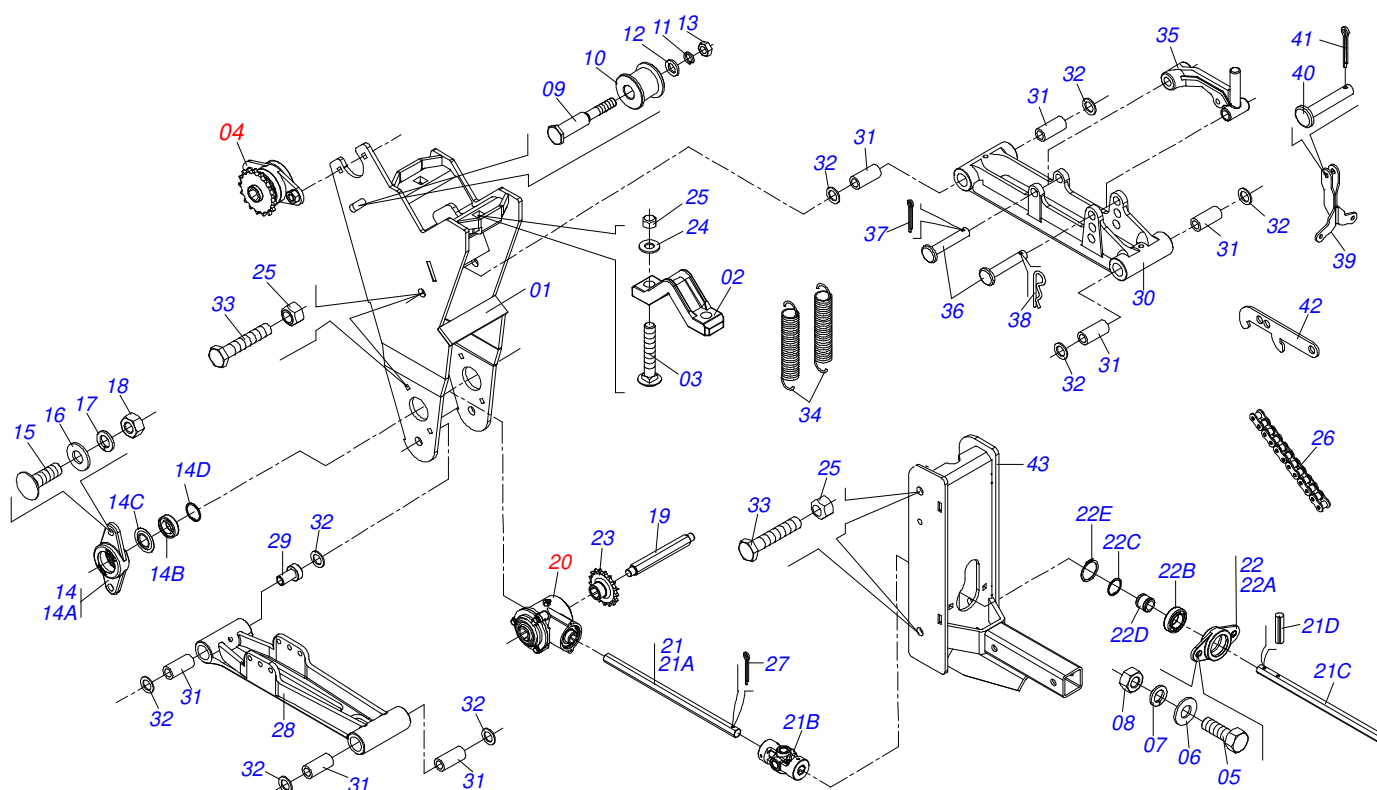

Item	Code	Description	See page	QT
001	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
002	0502010175	HITCH CLAMP		01
003	0503016460	5/8" X 4.1/2" BOLT		02
004	0501052769	BEARING WITH 17Z GEAR	35	01
005	0503010365	NUT		02
006	0501010694	FLAT WASHER		02
007	0503010179	LOCK WASHER		02
008	0503010337	5/16" NUT		02
009	0531019479	AXLE CHAIN GEAR		01
010	0541016454	PULLEY		01
011	0503010019	1/2" SPRING WASHER		01
012	0521014188	FLAT WASHER		02
013	0503010060	1/2" NUT		01
014	0511054635	BEARING AXLE BODY		02
015	0503011953	5/16" X 1" BOLT		04
016	0501010694	FLAT WASHER		04
017	0503010179	LOCK WASHER		04
018	0503010337	5/16" NUT		04
019	0561014904	TRANSMISSION AXLE FRAME LINE		01
020	0511054884	TRANSMISSION BOX	34	01
021	0501059326	UNIVERSAL JOINT AXLE		01
022	0501059363	5/8" HEX AXLE BEARING		01
023	0503010365	NUT		02
024	0501010694	FLAT WASHER		02
025	0503010179	LOCK WASHER		02
026	0503010337	5/16" NUT		02
027	0503010362	1/8 X 1.1/4 COTTERPIN		01
028	0502012666	SEED ROW LOWER ARM		01
029	0561015858	SPACER LOWER SLEEVE		01
030	0502012350	SEED ROW UPPER ARM		01
031	0531015151	0.6" X 1" X 2.4" SLEEVE		08


SHORT SEED ROW FRONT

0501059361


Item	Code	Description	See page	QT
032	0531015184	FLAT WASHER		08
033	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
034	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		02
035	0502012568	UPPER ROCKER ARM		01
036	0501011388	COUPLING SHAFT		02
037	0503010577	3/16" X 1-1/4" COTTERPIN		01
038	0503030168	HITCH PIN CLIP		01
039	0521061850	SPRING UPPER FIXER		01
040	0521010773	0.37" X 1.18" COUPLING SHAFT		01
041	0503010140	1/8" X 3/4" COTTERPIN		01
042	0561019032	SEED FERTIL ROW LOCK		01
043	0521061427	SHORT SEED ROW FRAME		01
044	0503010013	5/8" NUT		02
045	0503013114	40-1 CHAIN X 89 LINK + MENDING		01
046	0503012412	5/8 UNC SELF LOCKING NUT		02
047	0503012412	5/8 UNC SELF LOCKING NUT		04
048	0501012140	FLAT WASHER		02
049	0502012782	17Z GEAR WITH HEX HOLE		01

TRANSMISSION BOX


0511054884

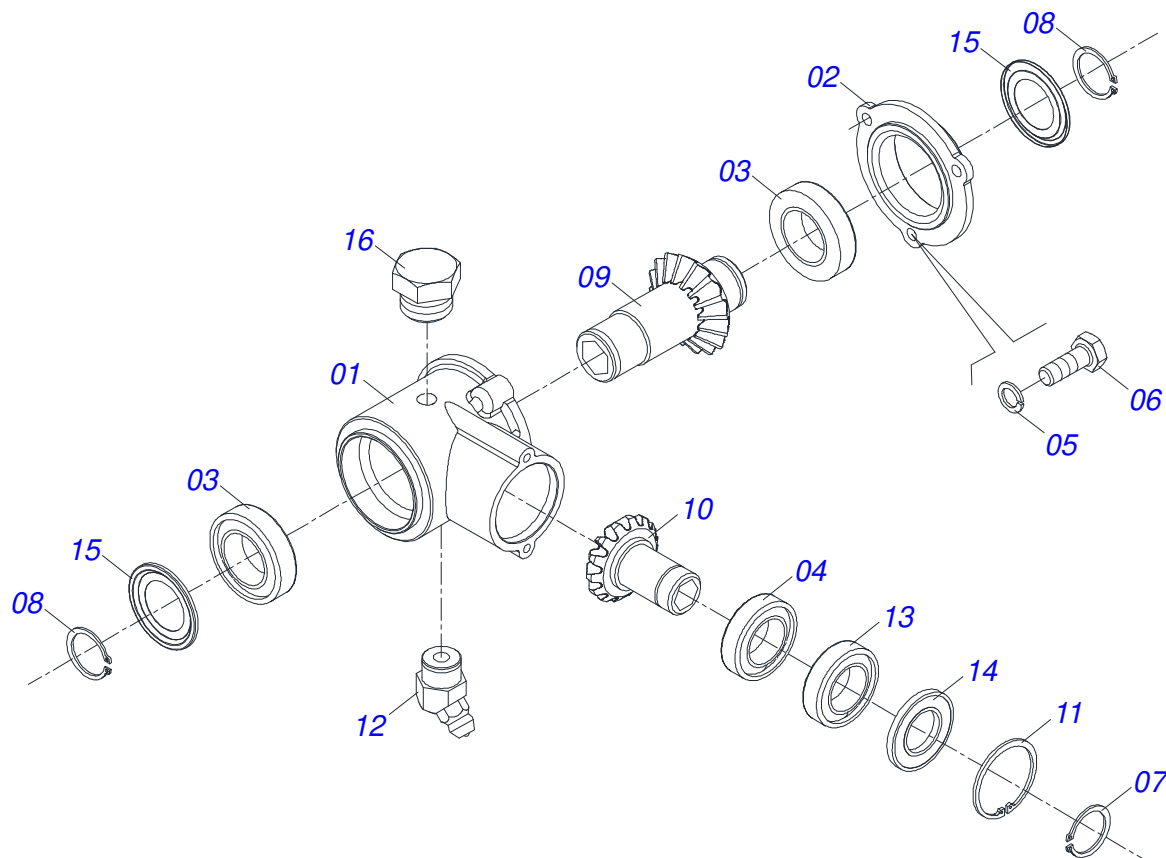


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB	01	
02	0502012464	HOPPER TRANSMISSION COVER	01	
03	0503016995	6006 BALL BEARING	02	
04	0503015895	6005 Z BALL BEARING	01	
05	0503010143	1/4" SPRING WASHER	03	
06	0503011378	M6X1X16 C S 8.8 ZN BOLT	03	
07	0503010406	501025 CLAMPING RING (FOR AXLE)	01	
08	0503010707	501030 CLAMPING RING (FOR AXLE)	02	
09	0502040856	CONICAL GEAR	01	
10	0502040857	CONICAL GEAR	01	
11	0503011105	SEAL RING	01	
12	0503010003	1845 GREASE FITTING	01	
13	0503011409	6005 Z BALL BEARING	01	
14	0503017008	SEAL RING	01	
15	0503017007	SEAL RING	02	
16	0511017907	1/8" BSPT X 6 PLUG	01	

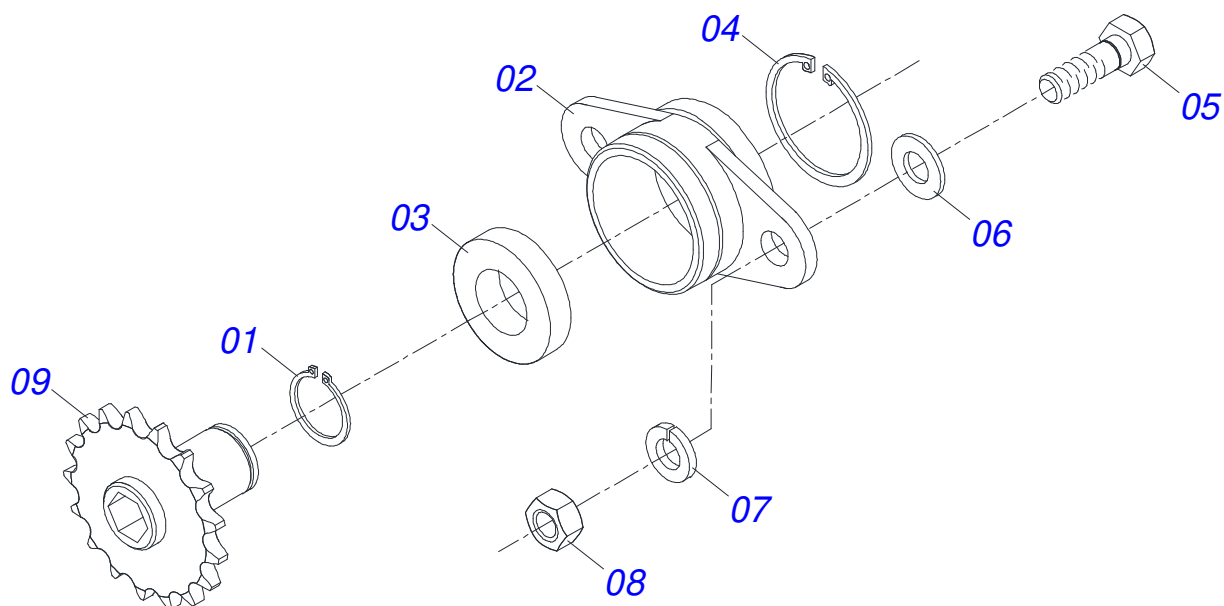


Item	Code	Description	See page	QT
01	0503010406	501025 CLAMPING RING (FOR AXLE)		01
02	0502011697	BEARING OF THE GEAR BOX		01
03	0503011410	ROLLER BEARING		01
04	0503011105	SEAL RING		01
05	0503011953	5/16" X 1" BOLT		02
06	0501010694	FLAT WASHER		02
07	0503010179	LOCK WASHER		02
08	0503010337	5/16" NUT		02
09	0502012819	17Z GEAR WITH HEX HOLE		01

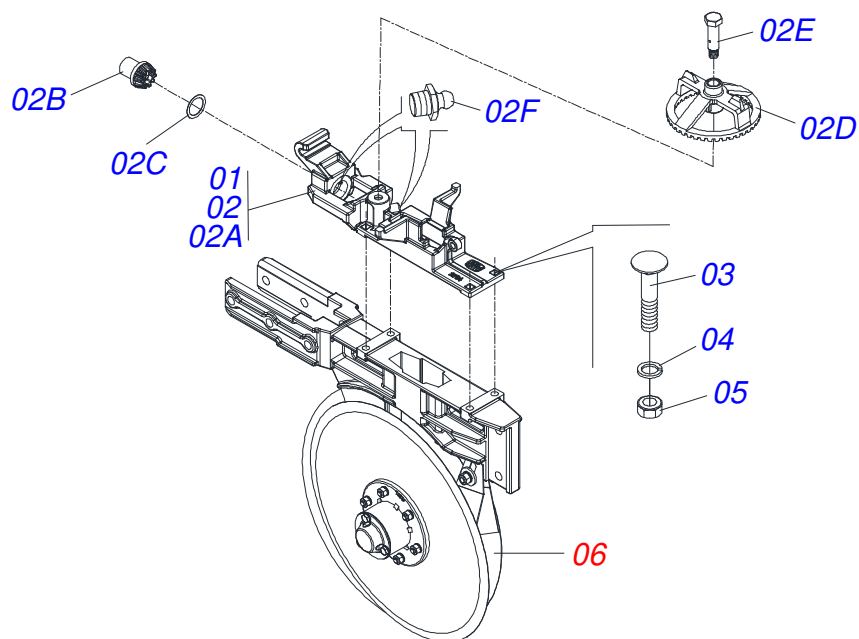


Item	Code	Description	See page	QT
01	0511052319	RIGHT REAR SEED ROW	36	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059631	DDD SEED 15 X 15 RIGHT	40	01

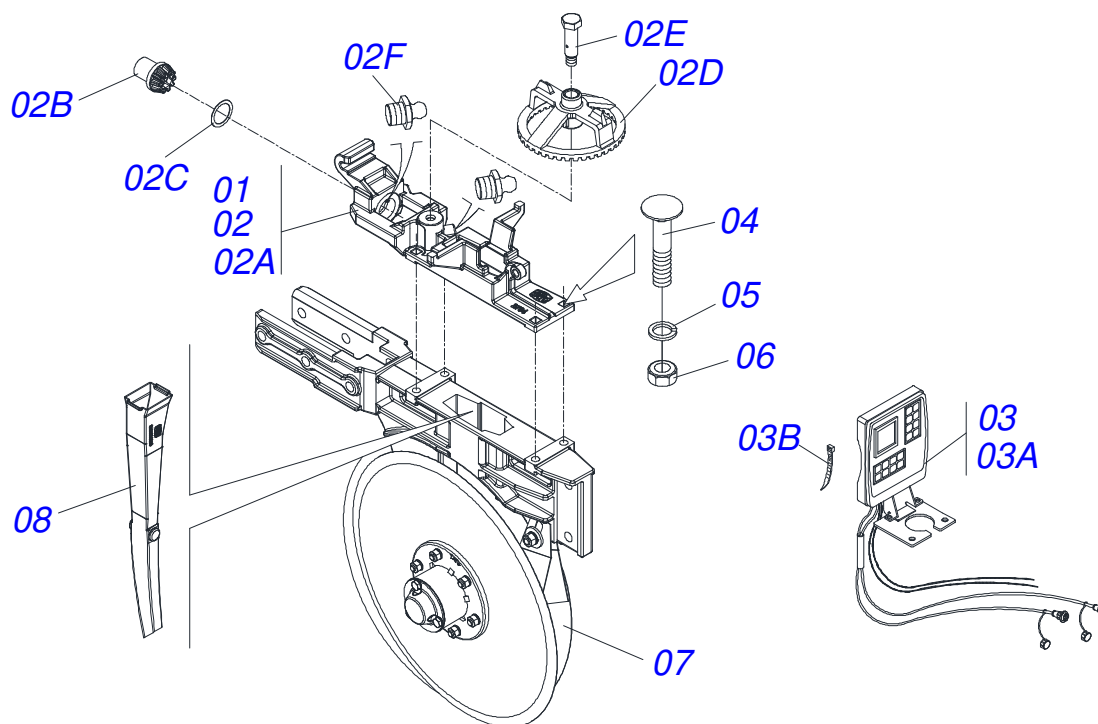


Item	Code	Description	See page	QT
01	0511051783	RIGHT REAR SEED ROW TITANIUM	37	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0501058972	ASSEMBLY SENSOR ELECTRONIC		01
03A	0503015218	SENSOR FOTOELE PM 400		01
03B	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03
04	0503015920	3/8" UNC X 1.3/4" BOLT		04
05	0503011443	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0501059631	DDD SEED 15 X 15 RIGHT	40	01
08	0503033672	NOZZLE WITHOUT TITANIUM		01

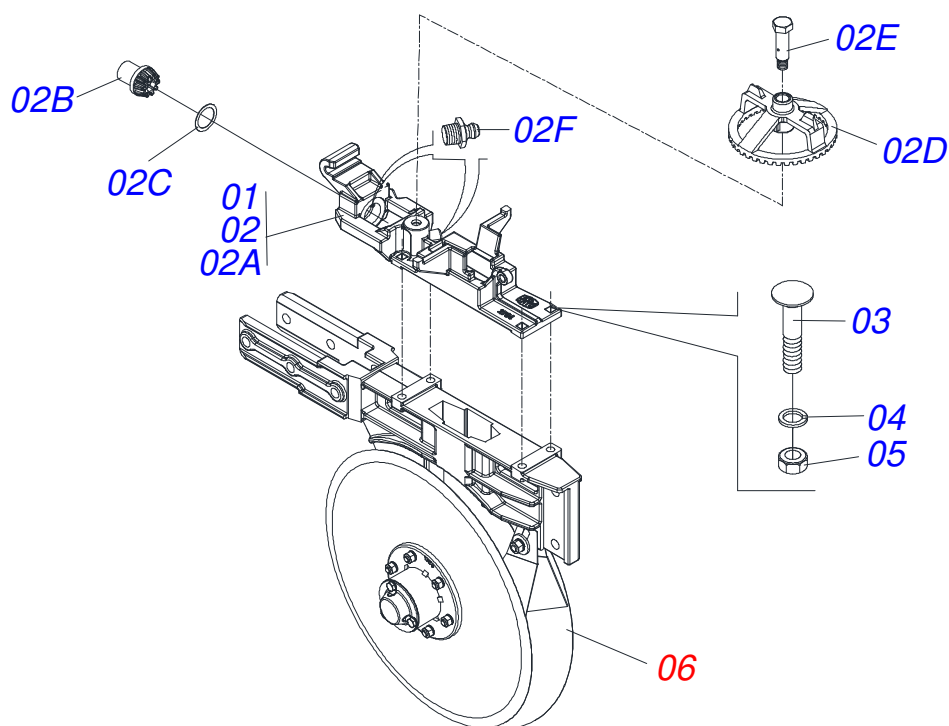


Item	Code	Description	See page	QT
01	0511052320	REAR LEFT ROW SEED TITANIUM	38	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0502012639	12Z LOWER CONICAL GEAR		01
02C	0501013354	FLAT WASHER		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0503015920	3/8" UNC X 1.3/4" BOLT		04
04	0503011443	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501059632	DDD SEED 15X15 LEFT	41	01

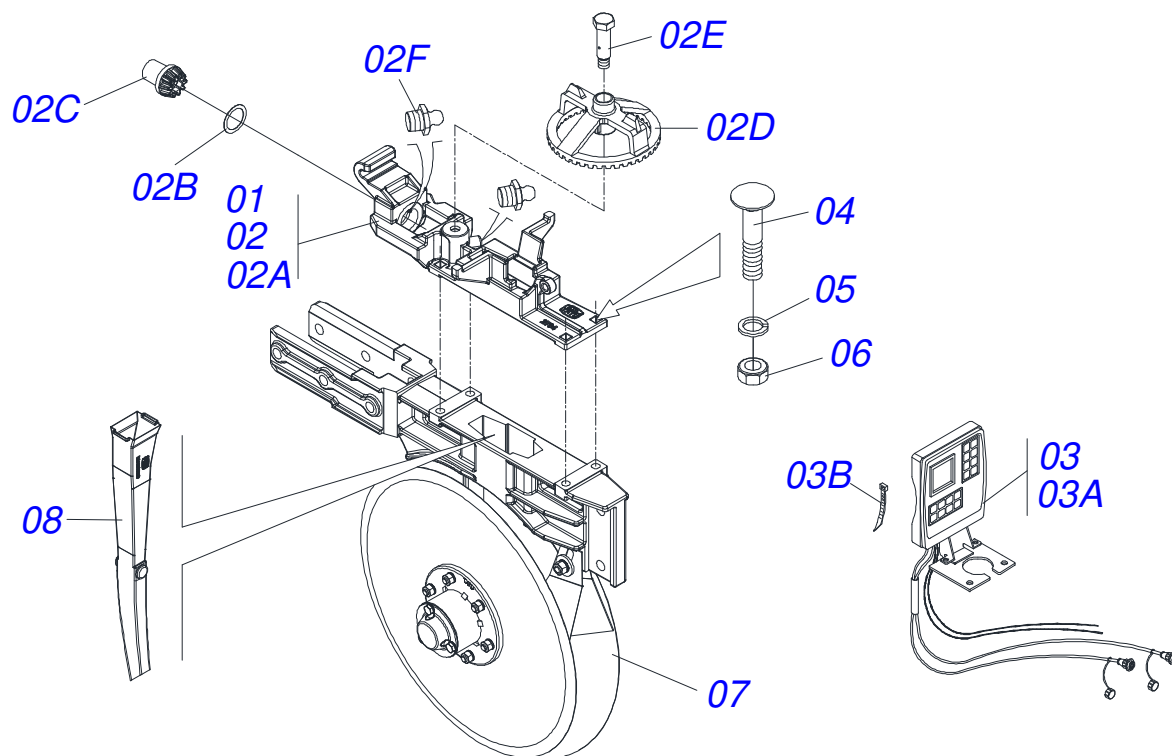


Item	Code	Description	See page	QT
01	0511051782	LEFT REAR SEED ROW	39	01
02	0511051888	FIXING BASE SYSTEM SYSTEM TITANIUM ASSY 5/8		01
02A	0502012704	BASE FIXING SYSTEM		01
02B	0501013354	FLAT WASHER		01
02C	0502012639	12Z LOWER CONICAL GEAR		01
02D	0502011418	40Z CONICAL GEAR		01
02E	0511018700	AXLE		01
02F	0503010002	1800 GREASE FITTING		02
03	0501058972	ASSEMBLY SENSOR ELECTRONIC		01
03A	0503015218	SENSOR FOTOELE PM 400		01
03B	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		03
04	0503015920	3/8" UNC X 1.3/4" BOLT		04
05	0503011443	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0501059632	DDD SEED 15X15 LEFT	41	01
08	0503033672	NOZZLE WITHOUT TITANIUM		01

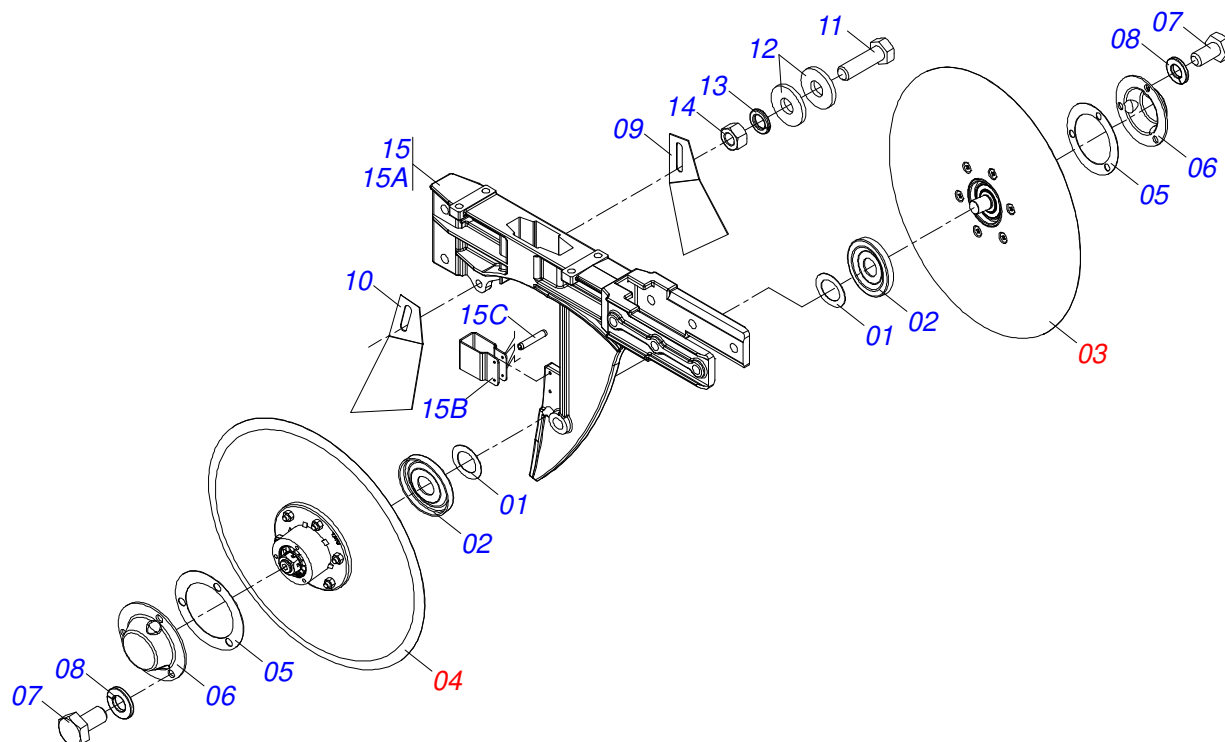


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	15" RIGHT OPENING DISC HUB	43	01
04	0501054168	15" LEFT OPENING DISC HUB	42	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052301	SUPPORT DDD 15 RIGHT		01
15A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

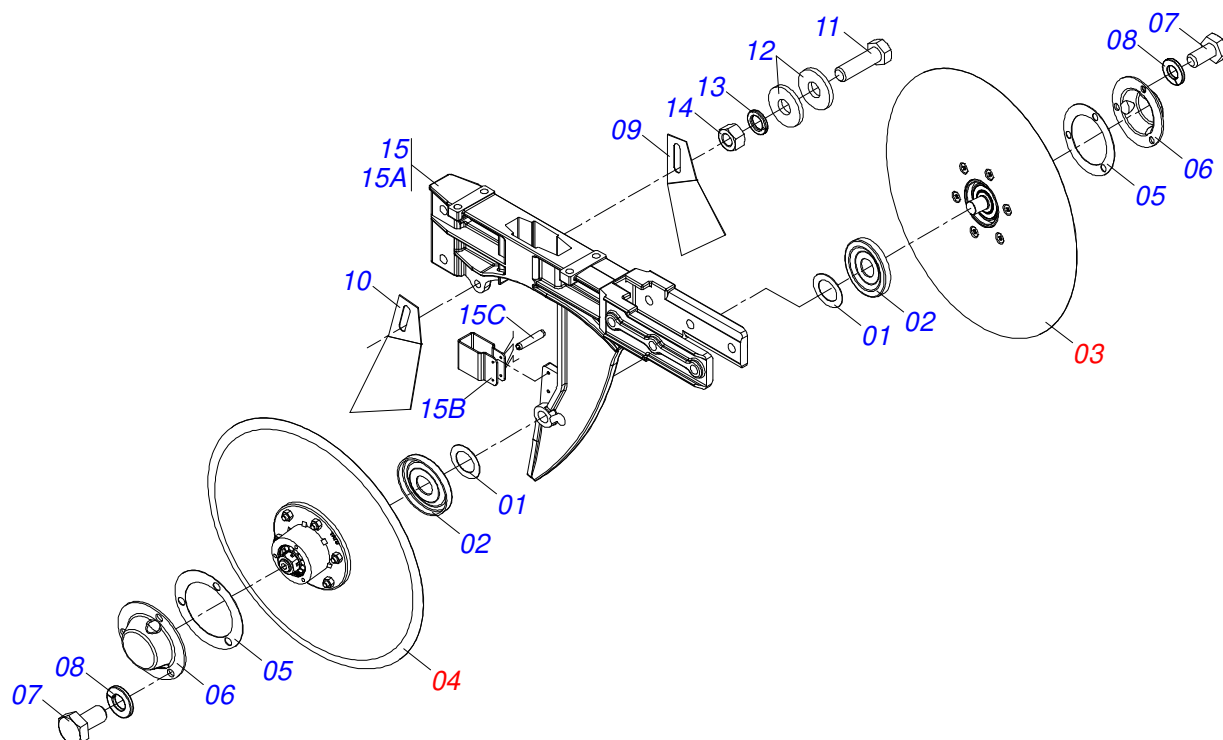


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	15" RIGHT OPENING DISC HUB	43	01
04	0501054168	15" LEFT OPENING DISC HUB	42	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052302	LH SUPPORT DDD GUIDE		01
15A	0561015592	LEFT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

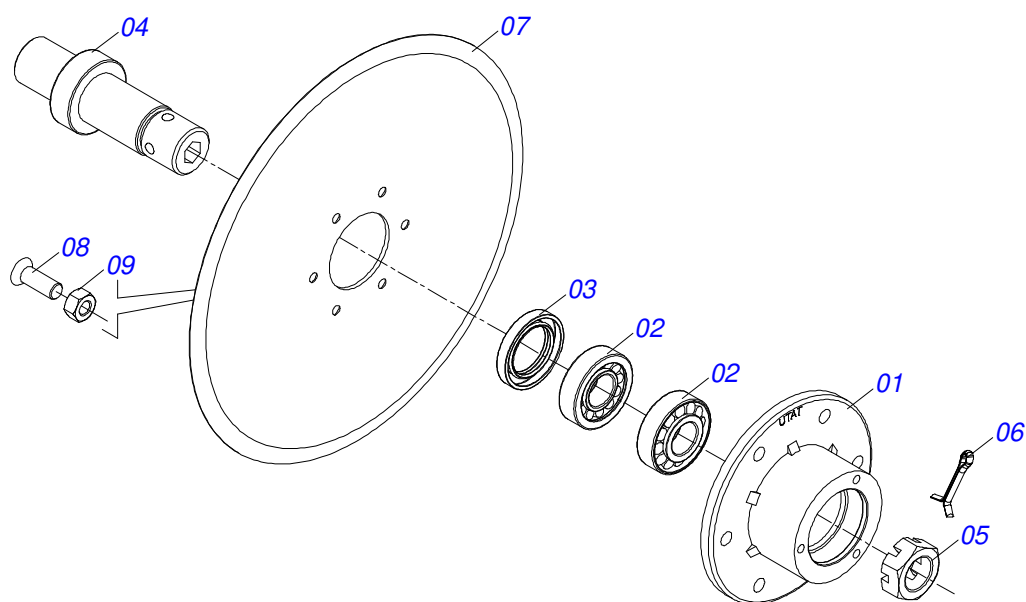


Item	Code	Description	See page	QT
01	0502011930	OPENING DISCS HUB		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

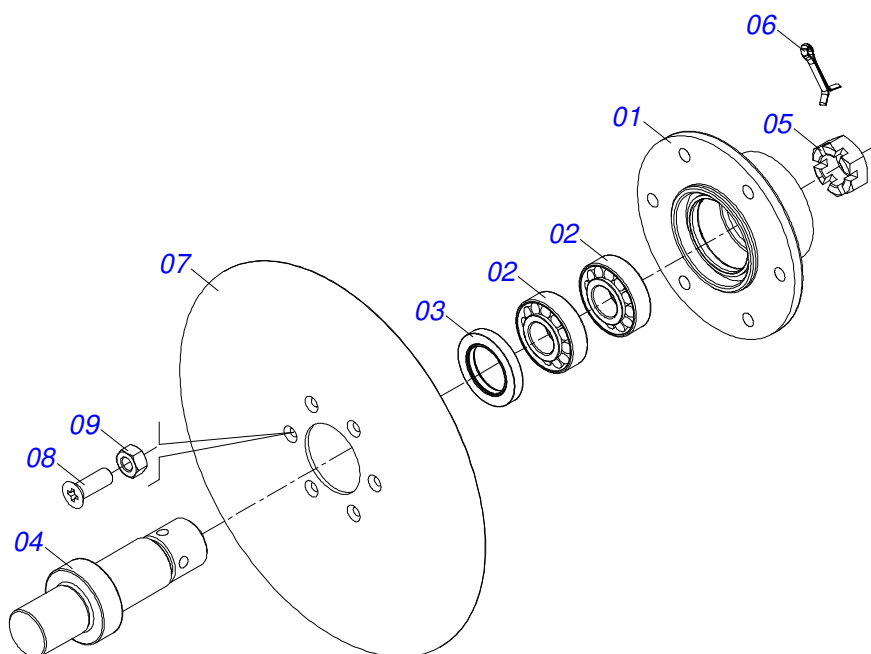

Item	Code	Description	See page	QT
01	0502011930	OPENING DISCS HUB		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT DOUB DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

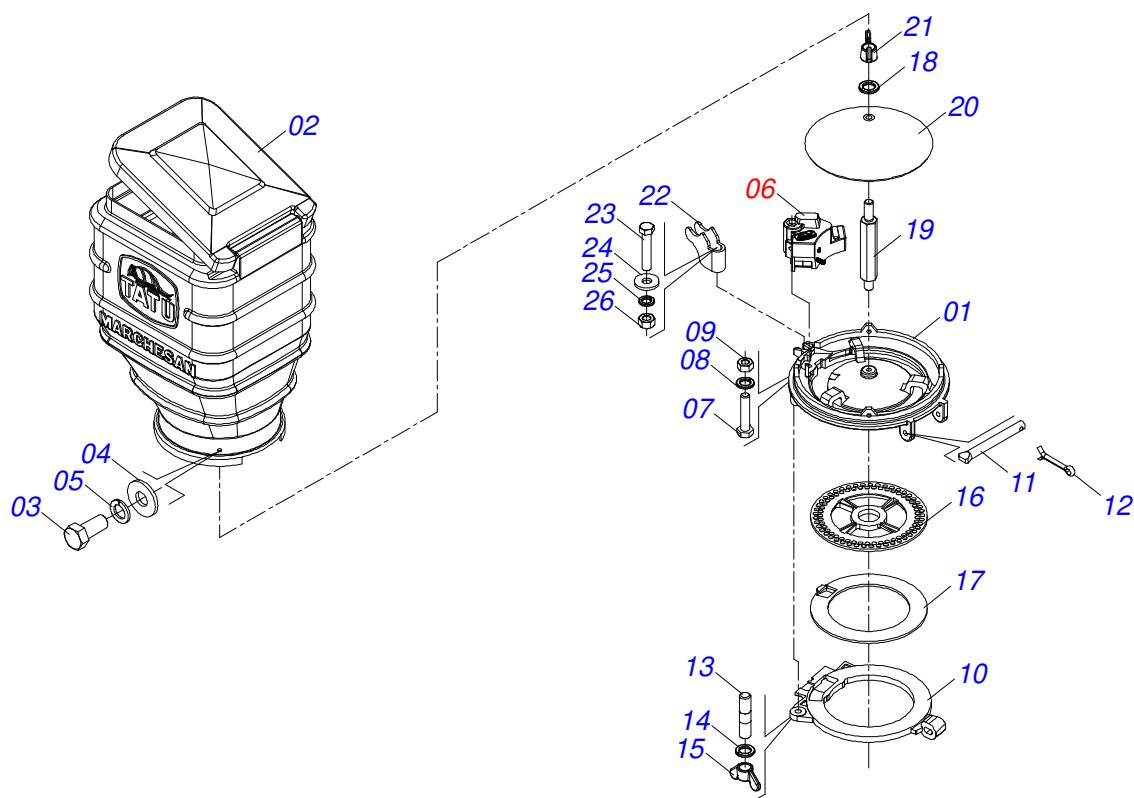


Item	Code	Description	See page	QT
01	0502020324	SEED BOX SUPPORT		01
02	0503031508	COVER GREEN BEAM SEED YELLOW		01
03	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		04
04	0501010694	FLAT WASHER		04
05	0503010179	LOCK WASHER		04
06	0501051094	ASSY SEED DISTRIBUTOR	45	01
07	0503010675	5/16" X 2.1/4" BOLT		01
08	0503010179	LOCK WASHER		01
09	0503010337	5/16" NUT		01
10	0502010408	SEED DISC LOWER TRAIL		01
11	0521010536	0.3" X 3.8" COUPLING SHAFT		01
12	0503010140	1/8" X 3/4" COTTERPIN		01
13	0503030083	3/8" X 3/8" X 1.6" STUD		01
14	0503010025	3/8" SPRING WASHER		01
15	0503010209	3/8" UNC BUTTERFLY NUT		01
16	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
17	0503016219	RING TO SOYBEANS		01
18	0503010025	3/8" SPRING WASHER		01
19	0571018536	HEX PRISONER		01
20	0503034131	DEFLECTOR		01
21	0503010209	3/8" UNC BUTTERFLY NUT		01
22	0531018622	BOLT FAST SUPPORT UPPER		01
23	0501010096	3/8" X 2" BOLT		01
24	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		01
25	0503010025	3/8" SPRING WASHER		01
26	0503010026	3/8" NUT		01

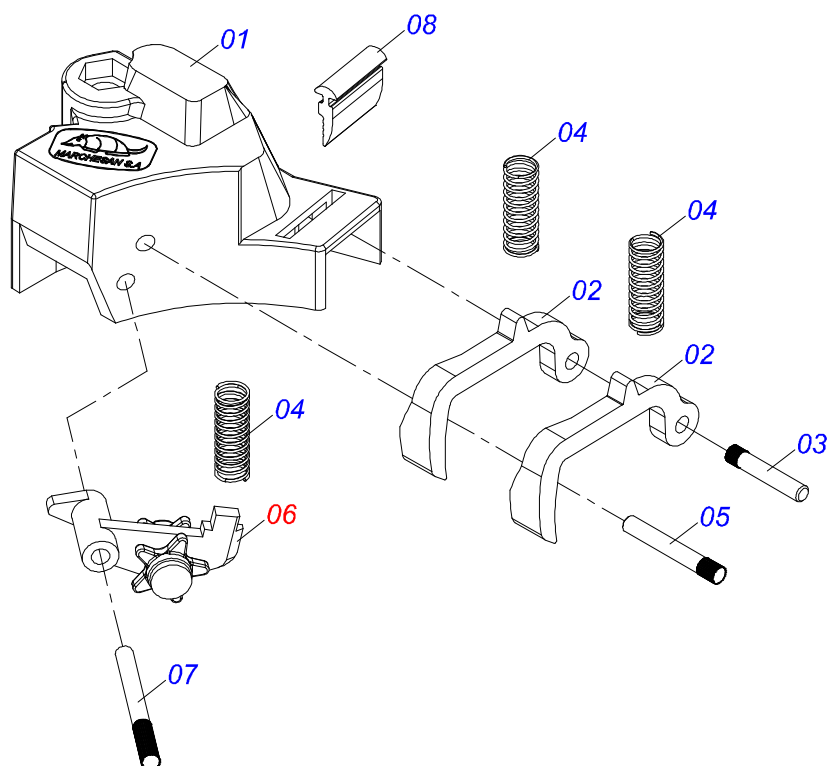


Item	Code	Description	See page	QT
01	0503030381	SEED DISTRIBUTOR BOX		01
02	0502010447	TRIGGER		02
03	0501013467	KEY AXLE		01
04	0503030378	0.4" X 1.1" X 0.03" SPRING		03
05	0501013466	KEY LIMITER AXLE		01
06	0501051119	DOUBLE PULLEY ROCKER'S	46	01
07	0501013468	ROCKER ARM AXLE, OF THE PULLEY		01
08	0503030377	SCRAPER		01

DOUBLE PULLEY ROCKER'S

0501051119

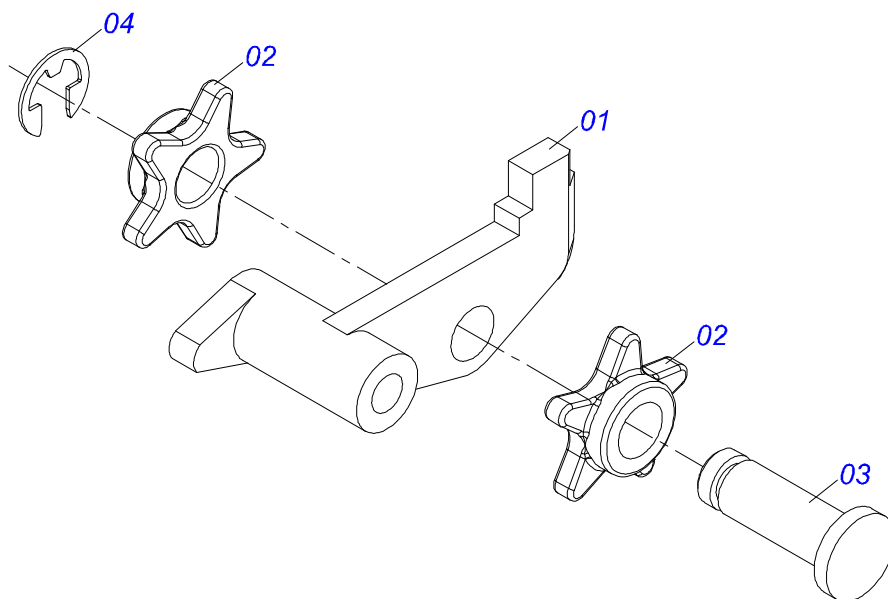

Item	Code	Description	See page	QT
01	0503031129	DOUBLE PULLEY ROCKER ARM		01
02	0503031128	5Z PLASTIC DOUB PULLEY FOR SOYBEAN		02
03	0521010649	TOOTH PULLEY COUPLING SHAFT		01
04	0503011853	503050 CLAMPING RING (FOR HOLE)		01

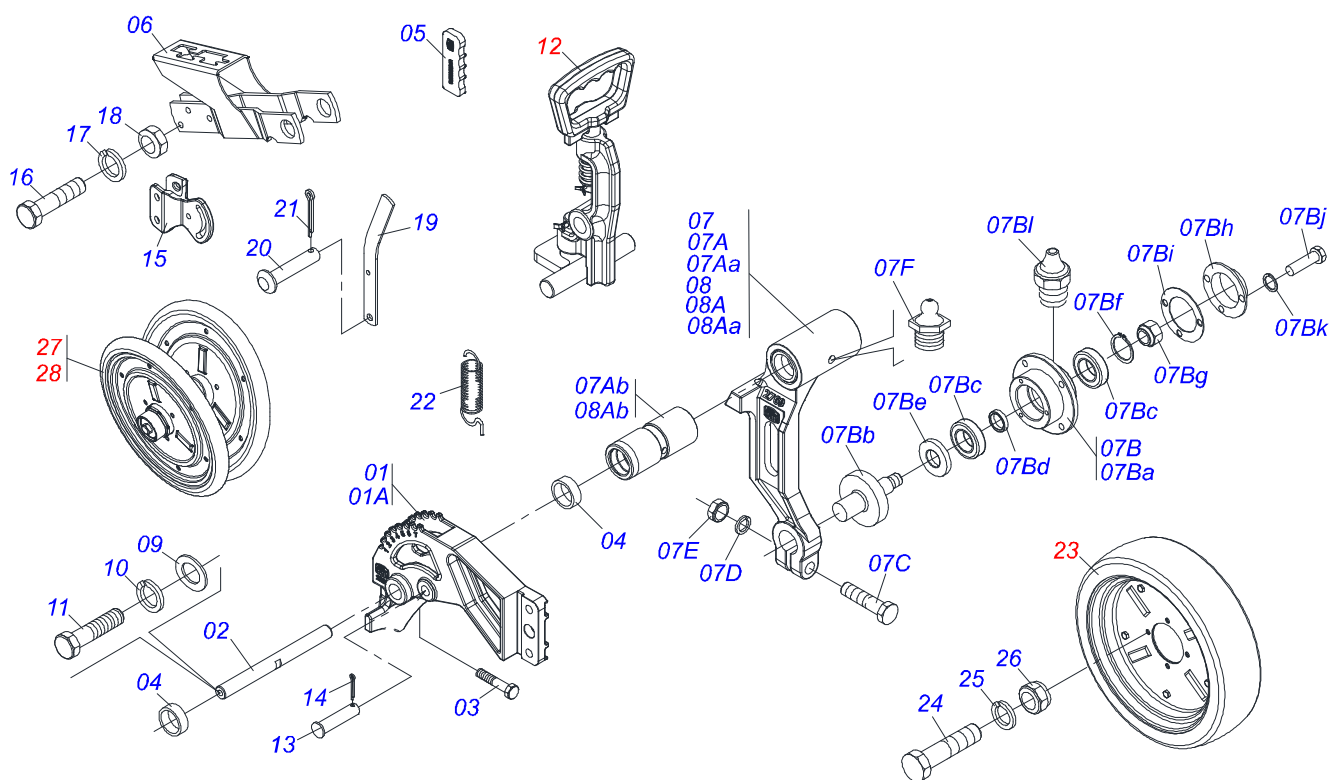


Item	Code	Description	See page	QT
01	0511056691	CONTROL DEPTH SUPPORT		01
01A	0502012282	DEPTH CONTROL SUPPORT		01
02	0571016886	DEPTH WHEEL AXLE		01
03	0503810256	SCREW		01
04	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
05	0503033942	COVER REGULATORY WHEEL		01
06	0521064073	REGULACION WHEEL COMPACTOR		01
07	0511056692	DEPTH WHEEL RIGHT ARM		01
07A	0501110796	DEPTH CONTROL RIGHT ARM		01
07Aa	0502012769	DEPTH WHEEL RIGHT ARM		01
07Ab	0571016883	36,04 X 25,62 X 85 NYLON SLEEVE		01
07B	0501052627	ASSY DEPTH WHEEL HUB	56	02
07Ba	0502011907	DEPTH CONTROL WHEEL HUB		02
07Bb	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		02
07Bc	0503010269	6204 BALL BEARING		04
07Bd	0501013636	SPACING SLEEVE		02
07Be	0503010689	SEAL 00763-BR		02
07Bf	0503011105	SEAL RING		02
07Bg	0503010878	5/8" SELF ALIGNING NUT		02
07Bh	0521019178	COVER DEPTH		02
07bi	0503030757	2.9" X 2" X 0.02" JOINT		02
07Bj	0503014729	1/4" UNF X 1/2" BOLT		06
07Bk	0503011441	SPRING WASHER		06
07Bl	0503010691	1/4" GREASE FITTING		02
07C	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07D	0503011440	SPRING WASHER		02
07E	0503010060	1/2" NUT		02
07F	0503010002	1800 GREASE FITTING		02
08	0511056693	LH ARM DEPTH CONTROL WHEEL		01
08A	0501110797	LEFT ARM WITH SLEEVE		01
08Aa	0502012770	DEPTH WHEEL LEFT ARM		01


PRESS WHEELS

0521045198


Item	Code	Description	See page	QT
08Ab	0571016883	36,04 X 25,62 X 85 NYLON SLEEVE		01
09	0571017749	FLAT WASHER		02
10	0503011440	SPRING WASHER		02
11	0503010311	1/2" X 1-1/4" BOLT		02
12	0501052297	DEPTH WHEELS REGULATOR ASSY	49	01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010257	1/8" X 1" COTTERPIN		01
15	0502012116	PRESS WHEEL ADJUSTER		01
16	0503010849	3/8" X 1-1/2" BOLT		02
17	0503011443	3/8" SPRING WASHER		02
18	0503010026	3/8" NUT		02
19	0541016906	PRESS WHEELS REGULATOR BODY		01
20	0521010539	0.3" X 1.2" COUPLING SHAFT		01
21	0503010140	1/8" X 3/4" COTTERPIN		01
22	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
23	0501052538	DEPTH BAND WITH ARMS	50	02
24	0503010358	5/16" X 5/8" BOLT		08
25	0503010179	LOCK WASHER		08
26	0503013816	5/16" LOCKNUT		08
27	0511054333	COMPACT WHEEL RIGHT WITH BEARING	51	01
28	0511054334	COMPACT WHEEL LEFT WITH BEARING	53	01

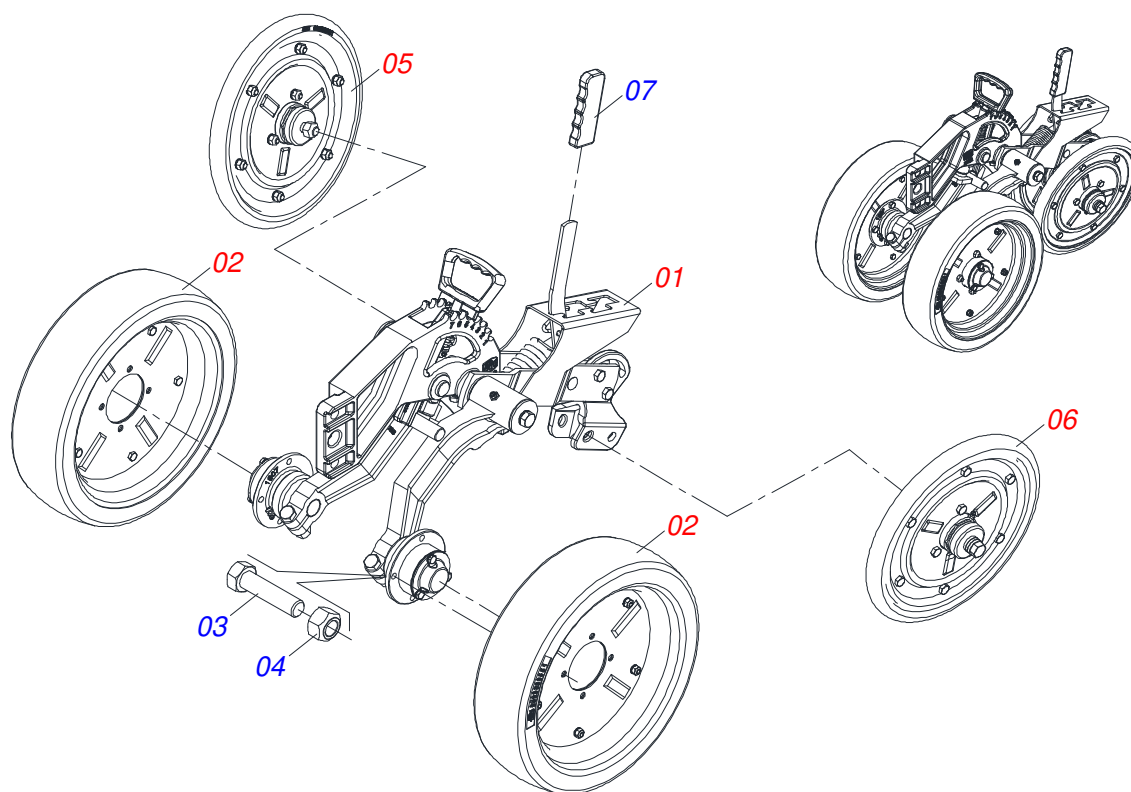


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	54	01
02	0501052538	DEPTH BAND WITH ARMS	50	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	51	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	53	01
07	0503033942	COVER REGULATORY WHEEL		01

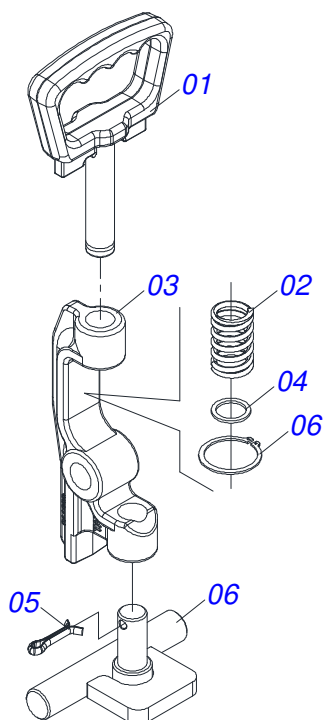


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	DEPTH CONTROL LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

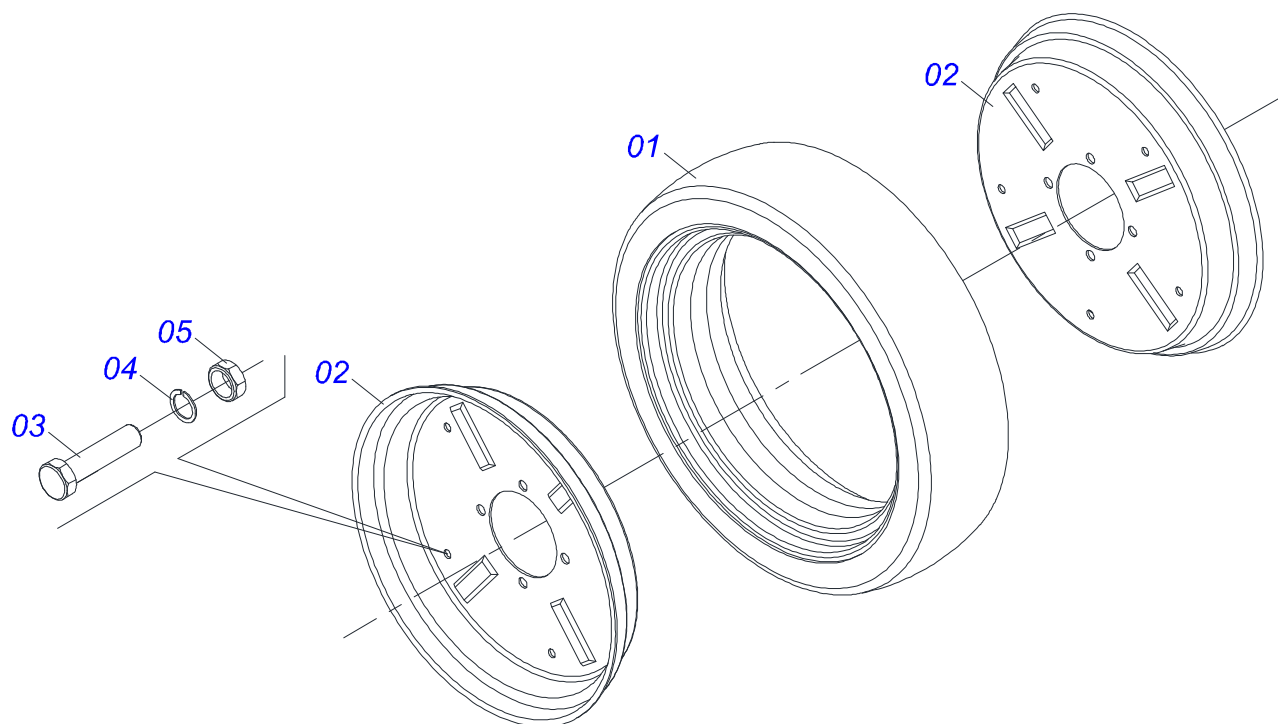


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

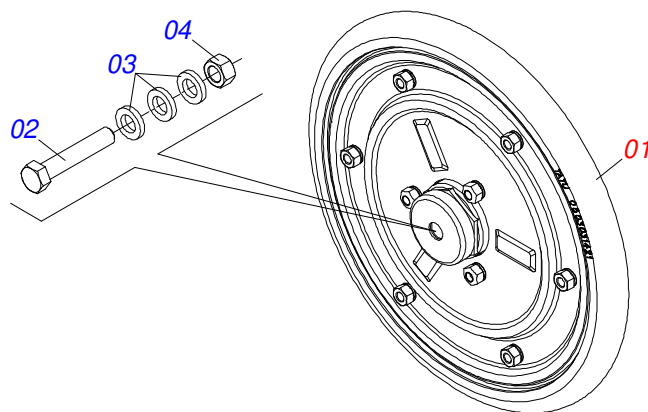


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	52	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

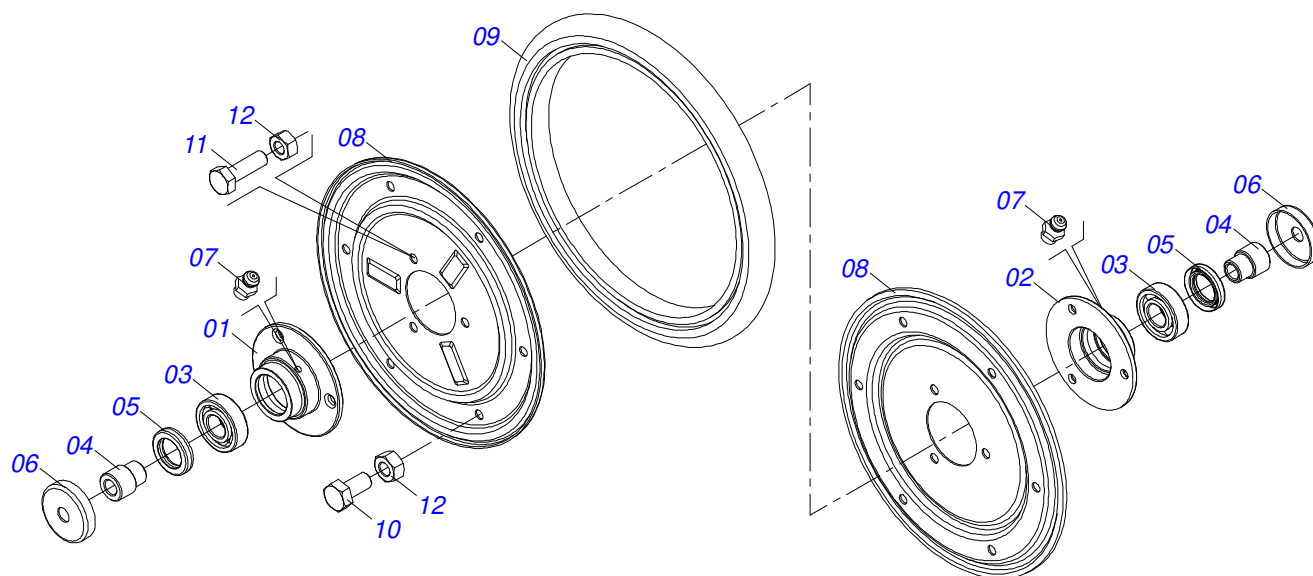


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

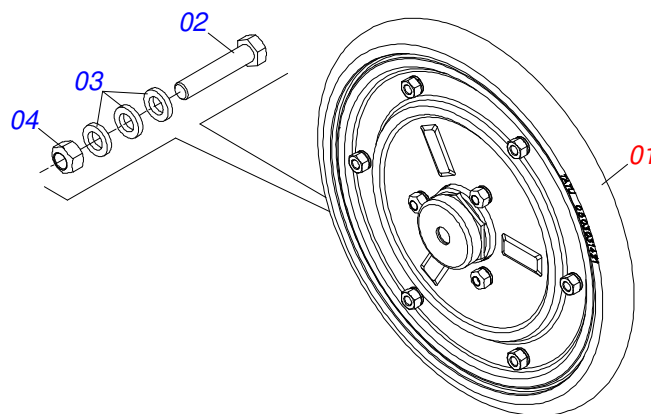


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	52	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

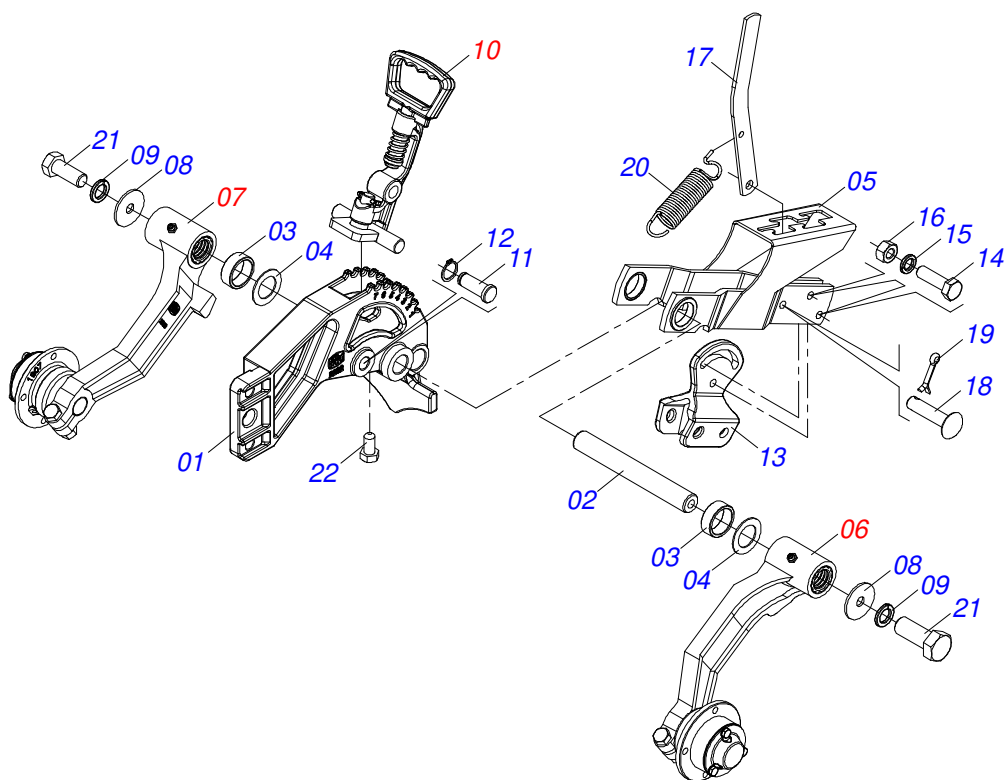


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE	55	01
07	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	57	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	49	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	SCREWEW 3/8 UNC X 3/4		01

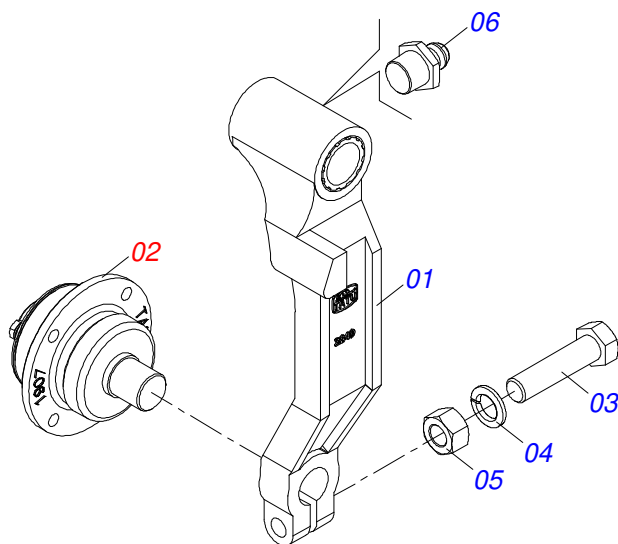


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL HUB	56	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0503010002	1800 GREASE FITTING		01

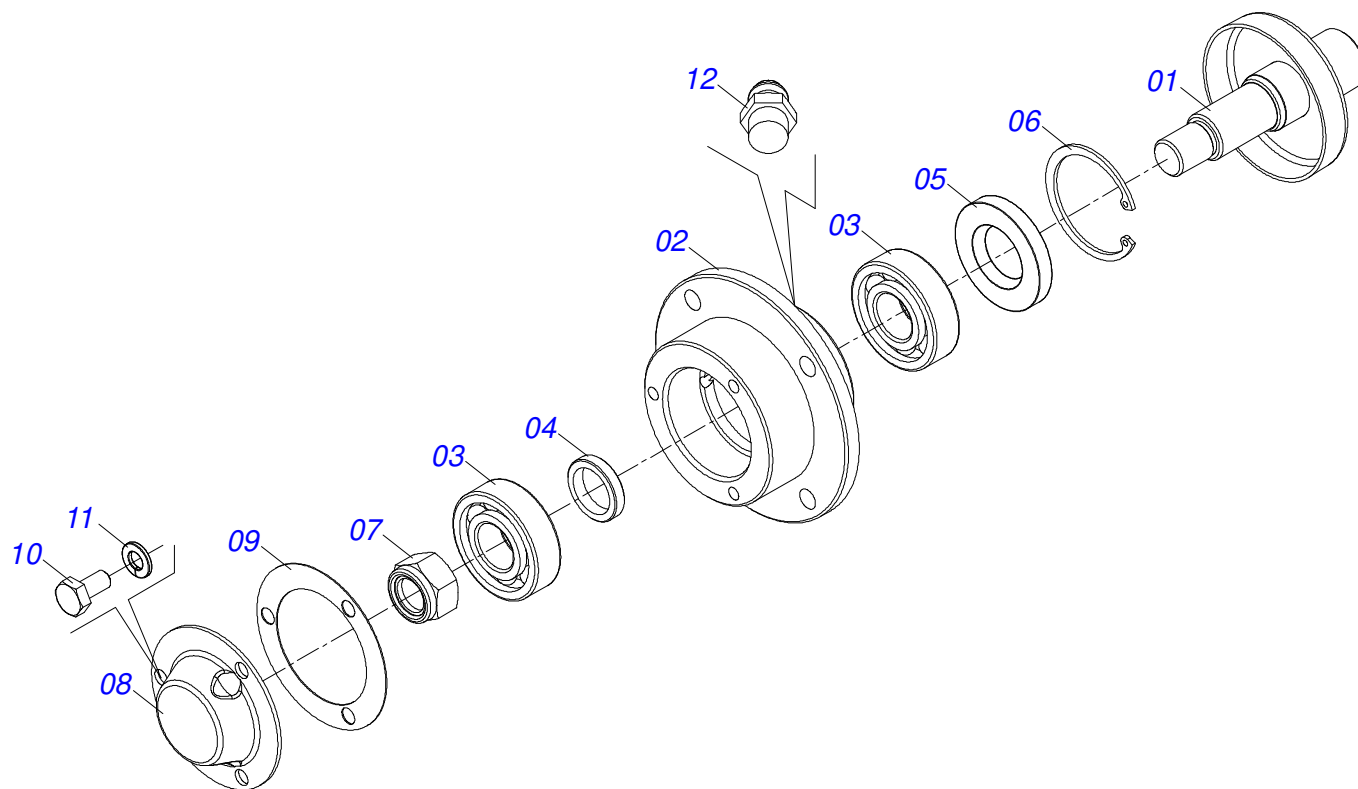

Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	COVER DEPTH		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

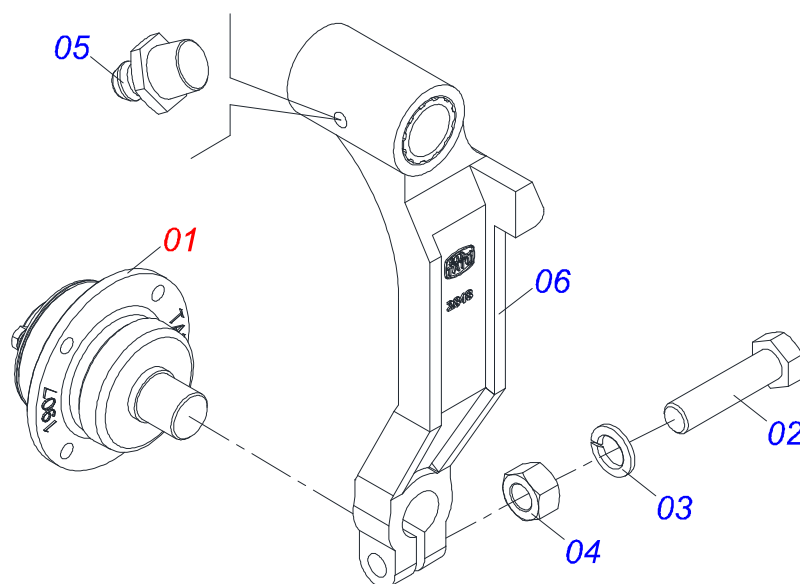

Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL HUB	56	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

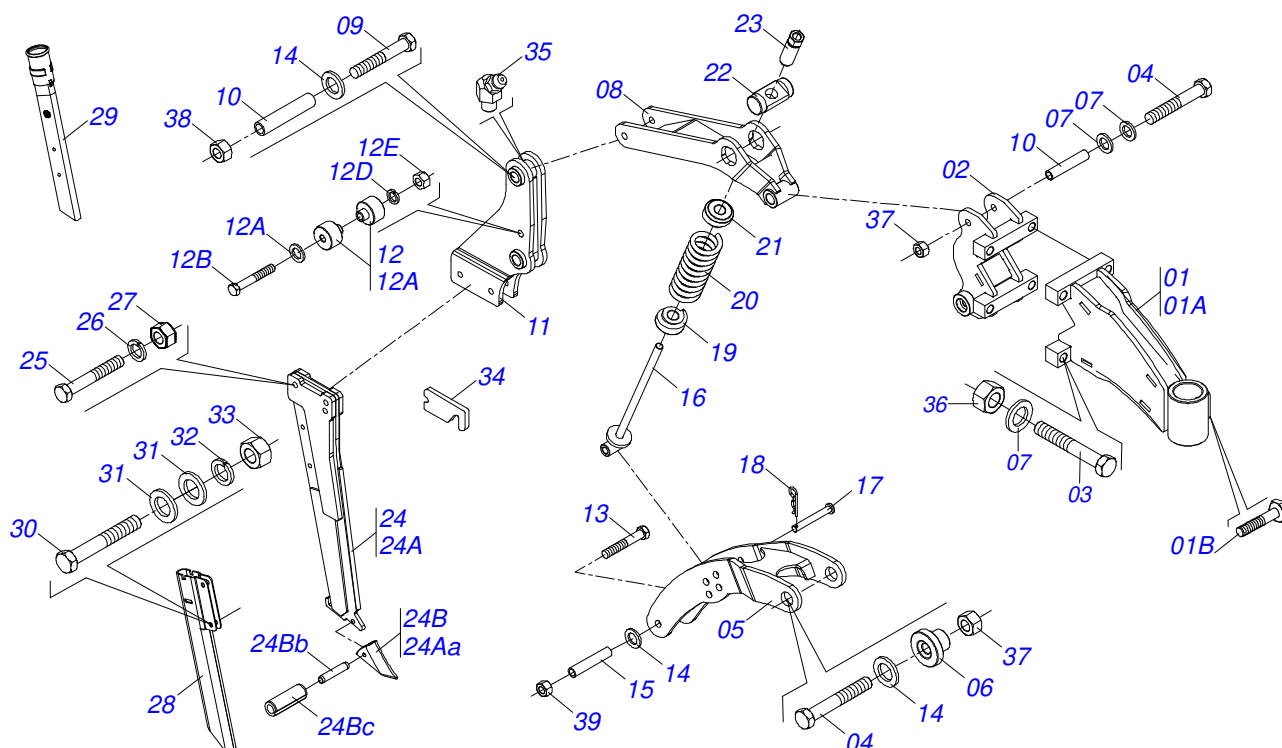


Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT		01
001A	0521061326	BLADE DISC AXLE SUPPORT		01
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
002	0521061407	ROW FERTILIZER SUPPORT		01
003	0503011084	3/4" X 5" BOLT		04
004	0501013233	5/8" X 2-3/4" BOLT		02
005	0521063504	FERTILIZER ROW LOWER SUPPORT		01
006	0531019990	BLADE D ARM ARTIC SLEEVE		02
007	0511015098	FLAT WASHER		06
008	0511063862	FERTILIZER ROW UPPER SUPPORT		01
009	0501010163	5/8" X 4-1/2" BOLT		01
010	0531016207	0.6" X 1" X 2.8" SLEEVE		01
011	0511065837	FERTILIZER ROW REAR SUPPORT		01
012	0501059640	BEATER LINE SET FERTILIZER		01
012A	0561015611	BEATER SLEEVE		02
012B	0503011123	BOLT		01
012C	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
012D	0503010025	3/8" SPRING WASHER		01
012E	0503010026	3/8" NUT		01
013	0501010452	5/8" X 5" BOLT		02
014	0531016031	1/2" SPRING WASHER		04
015	0531016207	0.6" X 1" X 2.8" SLEEVE		02
016	0521063505	GUIDE SPRING LINE FERTILIZER		01
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
018	0503030168	HITCH PIN CLIP		01
019	1902020393	SPRING UPPER SUPPORT		01
020	0503031450	2.7" X 9.2" X 0.03" SPRING		01
021	1902020393	SPRING UPPER SUPPORT		01
022	0521011158	SPRING LOCKNUT		01
023	0571012375	VARON REGULATOR SPINDLE		01
024	0501110640	SCARIFIER SPINDLE		01

SEMI-ASSEMBLED SHORT FERTILIZER LINE

0511053825

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2" NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
032	0503010025	3/8" SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8 UNC SELF LOCKING NUT		02

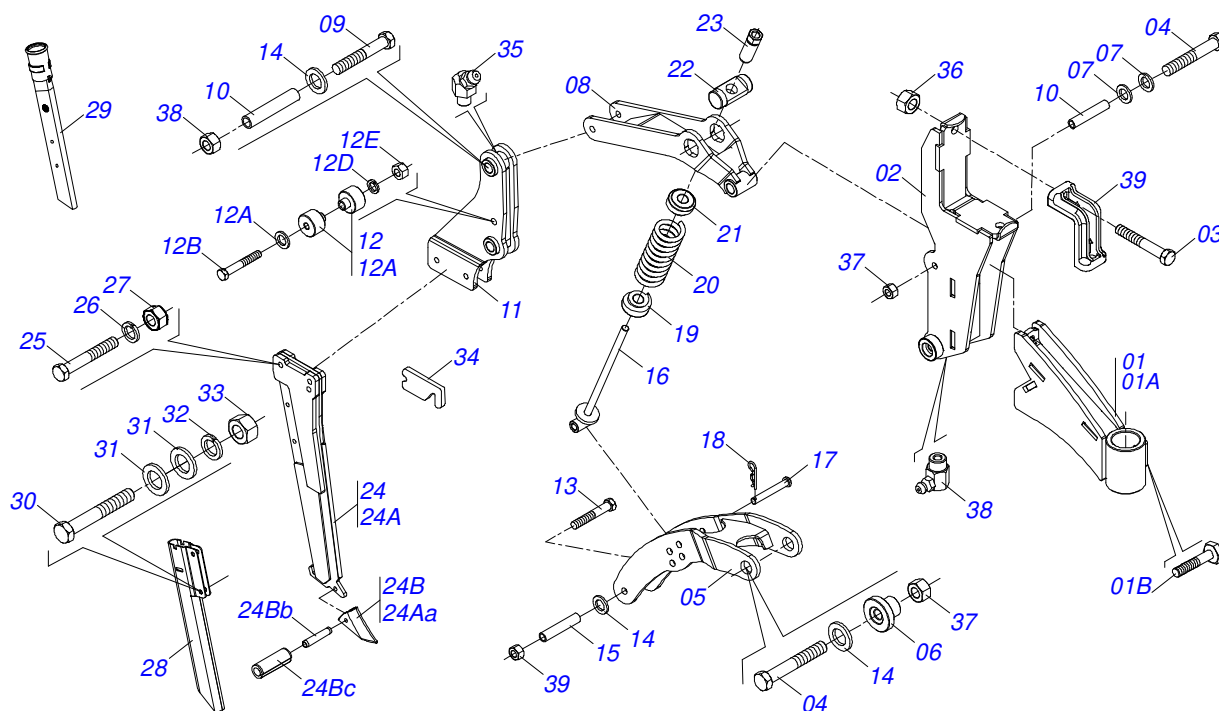


Item	Code	Description	See page	QT
001	0501059651	ROW SUPPORT SHORT		01
001A	0521061326	BLADE DISC AXLE SUPPORT		01
001B	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
002	0521063521	ROW FERTILIZER SUPPORT		01
003	0501010125	3/4" X 2-1/2" BOLT		02
004	0501013233	5/8" X 2-3/4" BOLT		02
005	0521063504	FERTILIZER ROW LOWER SUPPORT		01
006	0531019990	BLADE D ARM ARTIC SLEEVE		02
007	0511015098	FLAT WASHER		06
008	0511063862	FERTILIZER ROW UPPER SUPPORT		01
009	0501010163	5/8" X 4-1/2" BOLT		01
010	0531016207	0.6" X 1" X 2.8" SLEEVE		01
011	0511065837	FERTILIZER ROW REAR SUPPORT		01
012	0501059640	BEATER LINE SET FERTILIZER		01
012A	0561015611	BEATER SLEEVE		02
012B	0503011123	BOLT		01
012C	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
012D	0503010025	3/8" SPRING WASHER		01
012E	0503010026	3/8" NUT		01
013	0501010452	5/8" X 5" BOLT		02
014	0531016031	1/2" SPRING WASHER		04
015	0531016207	0.6" X 1" X 2.8" SLEEVE		02
016	0521063505	GUIDE SPRING LINE FERTILIZER		01
017	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
018	0503030168	HITCH PIN CLIP		01
019	1902020393	SPRING UPPER SUPPORT		01
020	0503031450	2.7" X 9.2" X 0.03" SPRING		01
021	1902020393	SPRING UPPER SUPPORT		01
022	0521011158	SPRING LOCKNUT		01
023	0571012375	VARON REGULATOR SPINDLE		01
024	0501110640	SCARIFIER SPINDLE		01

Item	Code	Description	See page	QT
024A	0521061339	SCARING ROD		01
024B	0511053528	POINT SUBSOILER		01
024BA	0502070079	POINT SUBSOILER		01
024BB	0503010585	0,24" X 1.18" SPRING PIN		01
024BC	0503011373	0.4" X 1.1" SPRING PIN		01
025	0503010752	1/2" X 3.1/2" BOLT		02
026	0503010019	1/2" SPRING WASHER		02
027	0503010060	1/2" NUT		02
028	0501110713	INNER SOCKET FASTENER		01
029	0503030483	FERTILIZER SOCKET		01
030	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
031	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
032	0503010025	3/8" SPRING WASHER		02
033	0503010026	3/8" NUT		02
034	0511017969	0.1" SPACING PLATE		02
035	0503010003	1845 GREASE FITTING		03
036	0503011255	3/4" LOCK NUT		04
037	0503012412	5/8 UNC SELF LOCKING NUT		02
038	0503010004	1890 GREASE FITTING		01
039	0502012400	ROW FERTILIZER FIXER		01

24" BLADE DISC ASSY

0511048339

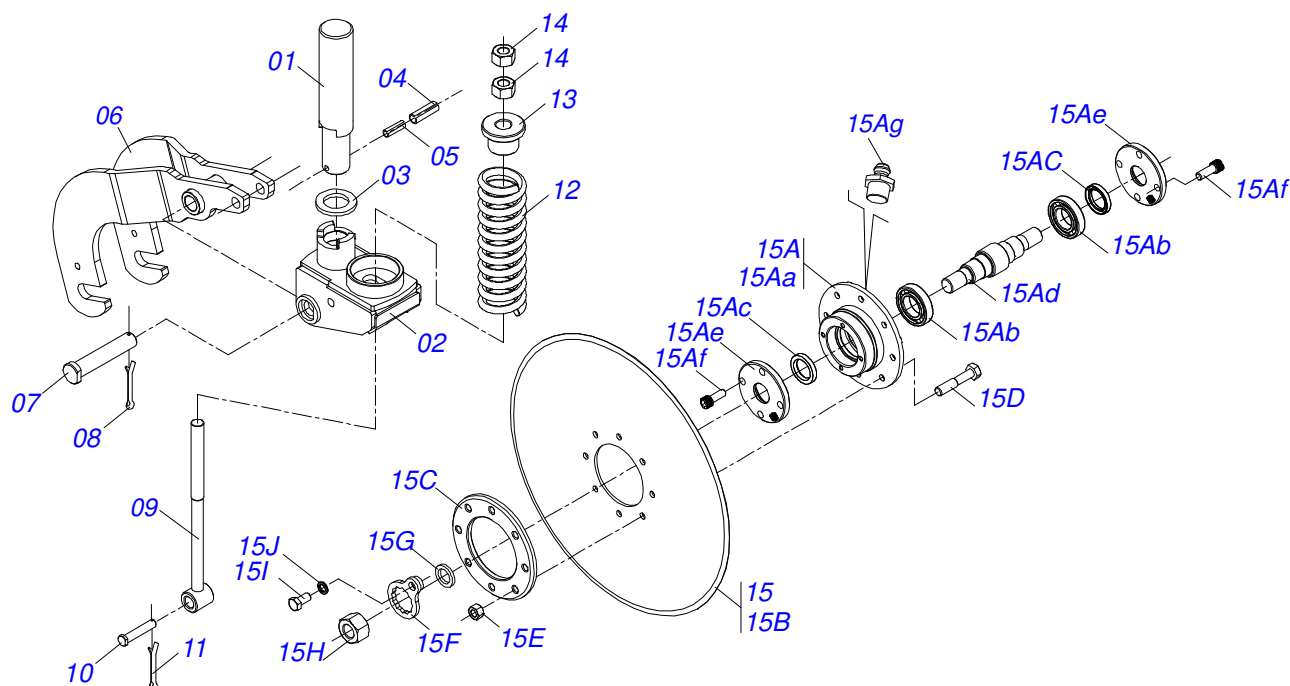

Item	Code	Description	See page	QT
01	0561015334	BLADE DISC AXLE ASSY	01	
02	0521061328	SWIVEL BASE	01	
03	0561015610	FLAT WASHER	01	
04	0503010361	SPRING PIN	01	
05	0503010756	0.2" X 2.4" SPRING PIN	01	
06	0521062418	BLADE DISC FORK	01	
07	0561015339	BLADE DISC AXLE ASSY	01	
08	0503010010	1/4" X 2.1/2" COTTERPIN	01	
09	0501069390	SPRING ROD	01	
10	0561019515	COUPLING SHAFT	01	
11	0503010571	1/4" X 1.1/2 COTTERPIN	01	
12	0503031346	COMPRESSION SPRING	01	
13	0561015400	BLADE DISC SPRING GUIDE	01	
14	0503014018	1" NUT	01	
15	0511050746	24" BLADE DISC ASSY	01	
15A	0501057526	DISC HUB	01	
15Aa	0502011478	DISC HUB	01	
15Ab	0503011291	6209 BALL BEARING	02	
15Ac	0503012106	00521-BR RETAINER	02	
15Ad	0521012661	BLADE DISC AXLE HUB	01	
15Ae	0502011477	BLADE DISC HOUSIG CP	02	
15Af	0503010134	3/8" X 1" BOLT	08	
15Ag	0503010002	1800 GREASE FITTING	01	
15B	0603030044	24" X 0.2" FLAT PLAIN DISC	01	
15C	0521011824	BLADE DISC FLANGE OUTER	01	
15D	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	08	
15E	0503010060	1/2" NUT	16	
15F	0501069637	AXLE NUT LOCK	02	
15G	0521012664	FLAT WASHER	02	
15H	0501010087	1.1/4" NUT	02	
15I	0503010962	5/8" X 1-1/4" BOLT	02	



COP CA - 09 LINES - APT


(UP TO 03/2022)

Page 60


24" BLADE DISC ASSY

0511048339


Item	Code	Description	See page	QT
15J	0503010027	5/8" SPRING WASHER		02

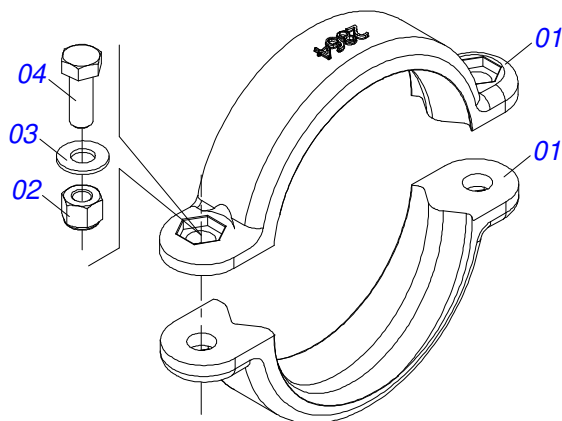


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER		02
04	0503010365	NUT		02

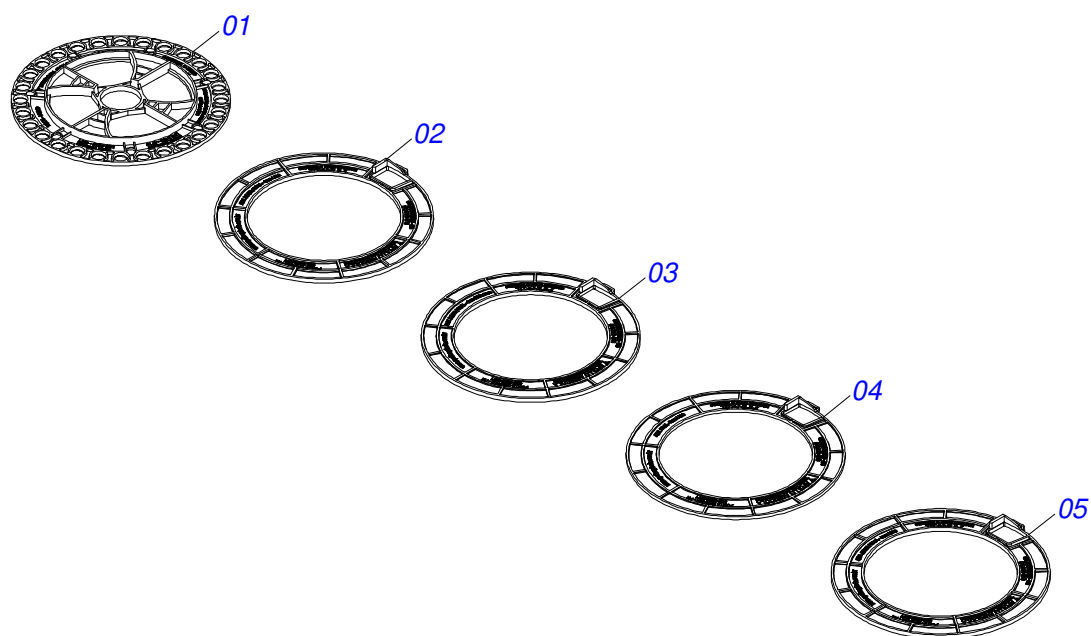

Item	Code	Description	See page	QT
01	0503016204	CORN DISK 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

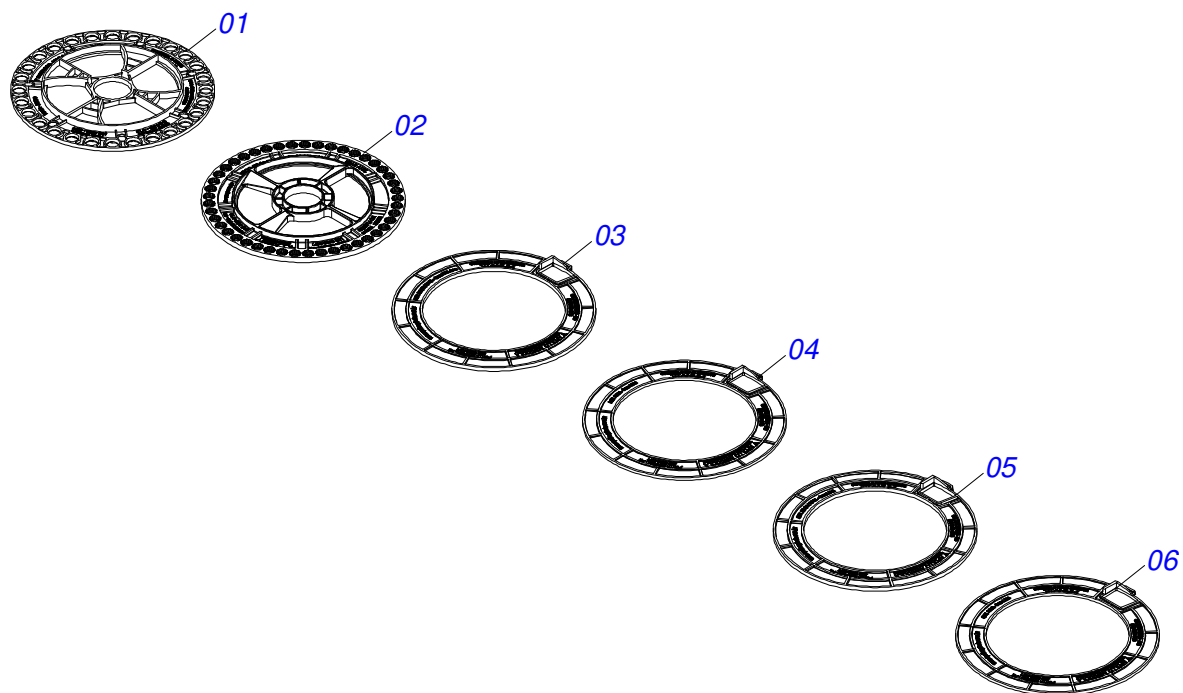


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

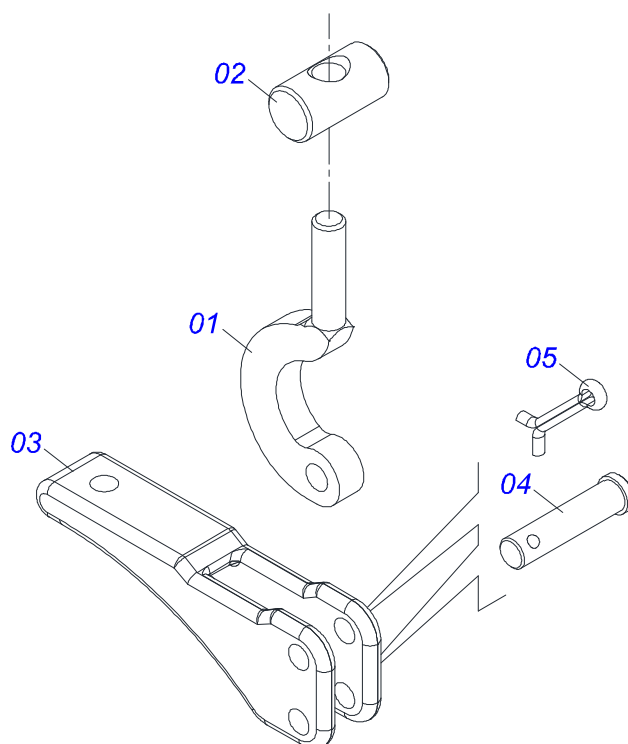


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

DRAWBAR ESTABILIZER


0501055579

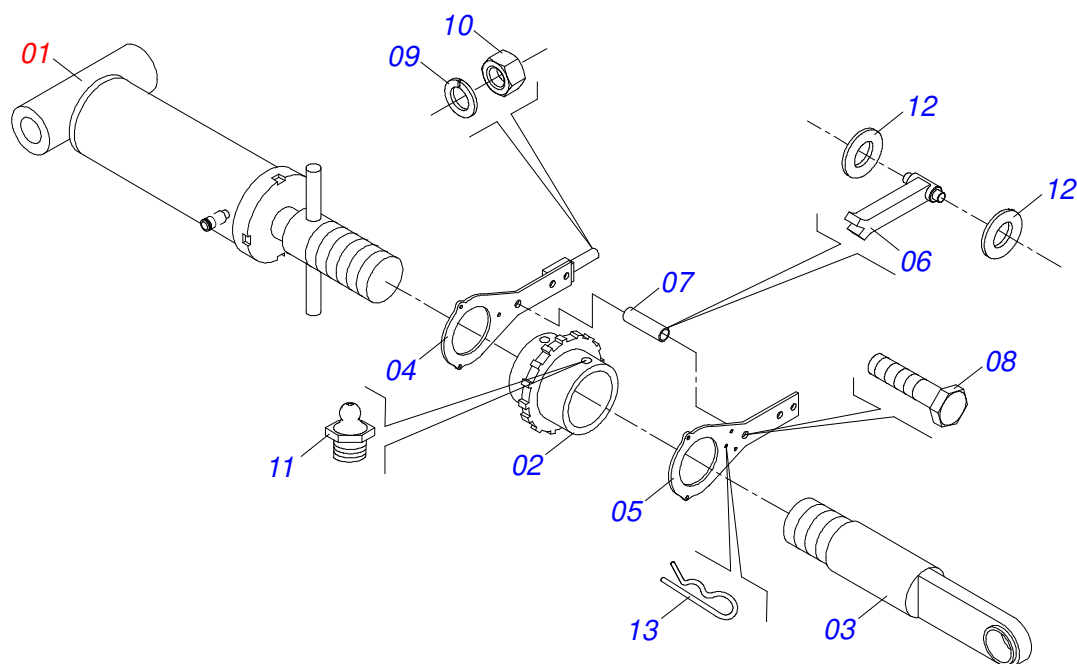


Item	Code	Description	See page	QT
001	0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER	66	01
002	0502011237	ESTABILIZER BODY		01
003	0511065467	LH SCREW ARBOR		01
004	0511061880	SIDE RIGHT RATCHET		01
005	0531010264	SIDE RATCHET		01
006	0511061881	RATCHET FOLLOWER		01
007	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
008	0503011179	3/8" X 2-1/4" BOLT		05
009	0503010025	3/8" SPRING WASHER		05
010	0503010026	3/8" NUT		05
011	0503010002	1800 GREASE FITTING		02
012	0521018517	FLAT WASHER		02
013	0503030012	HITCH PIN CLIP		01

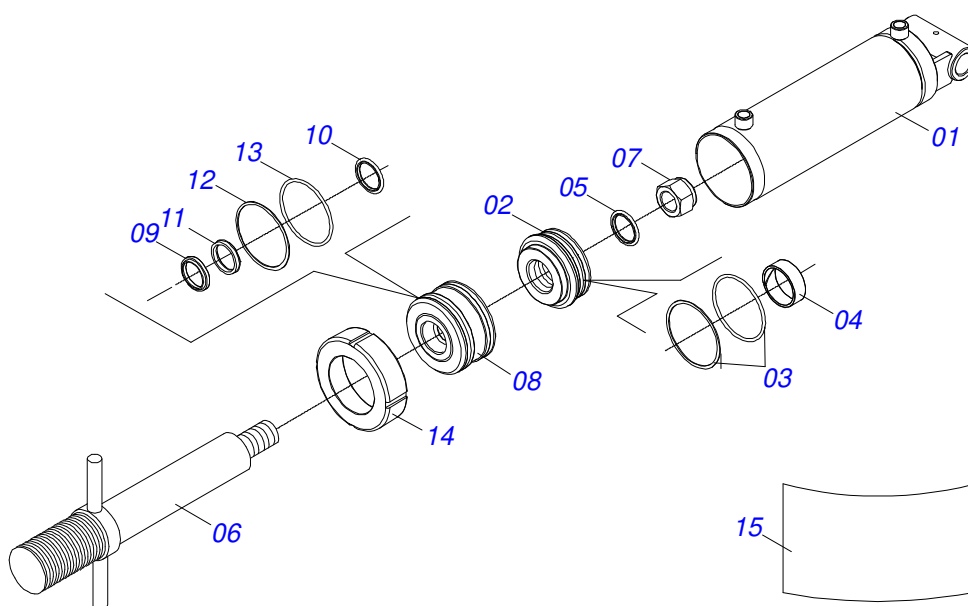

Item	Code	Description	See page	07
01	0511064908	4.5" X 25.4" CYLINDER CASE		01
02	0502011221	2.0" X 4.5" PISTON		01
03	0503011890	3750-3750 GASKET		02
04	0503011891	W2-4500-500 RING G.E		01
05	0503010345	2-218 N 3006-9B O'RING		01
06	0511064909	2" X 14.4" TURNBUCLE		01
07	0503010817	1.1/4" SELF LOCKING NUT		01
08	0502011220	2" X 4.5" RING SUPPORT		01
09	0503010952	W2-2250-500 RING		01
10	0503010991	1870-2000-375-B GASKET		01
11	0503010039	D-2000 SCRAPER RING		01
12	0503011892	O' RING, 2-346 N 3006-9B		01
13	0503011893	BACK-UP RING, 8-346		01
14	0502011222	0.56" END CAP		01
15	0501032513	HYDRAULIC CYLINDER REPAIR KIT		01

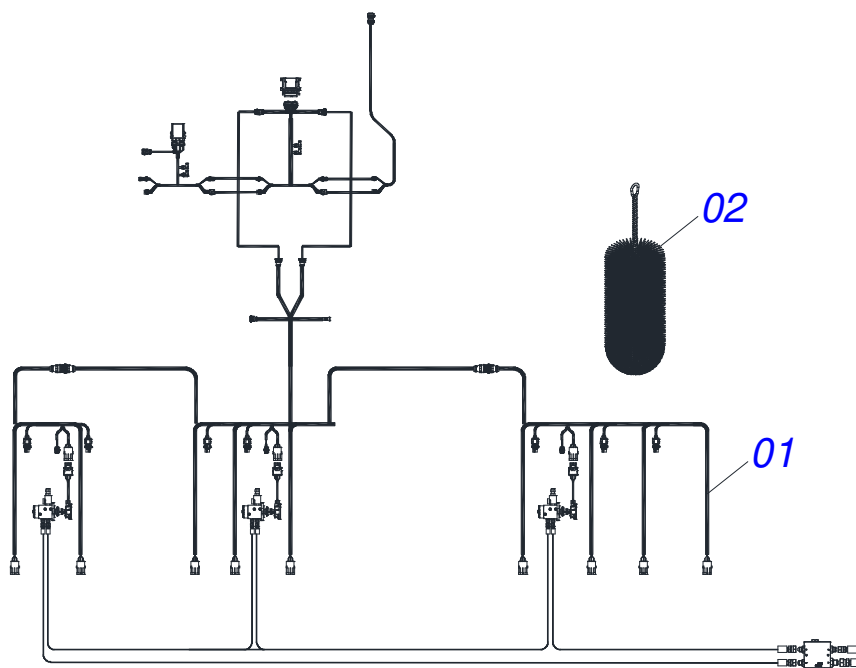


Item	Code	Description	See page	QT
001	0503016528	SIMPLE CABLE MONITORING		01
002	0503017031	CLEANING BRUSH		01

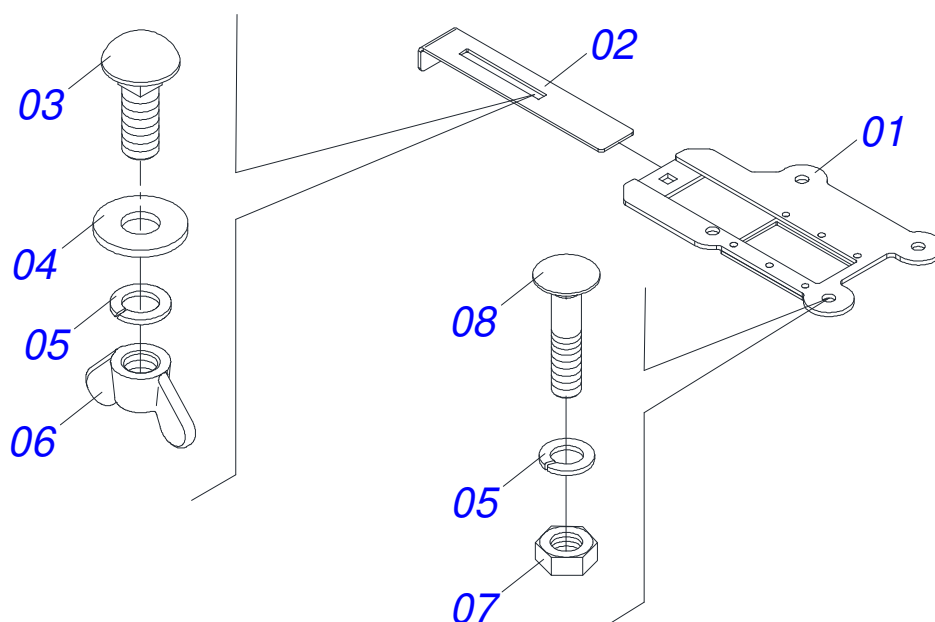

Item	Code	Description	See page	QT
001	0521067215	BASE SUPPORT PRECISION PLANTING		01
002	0581012522	SEED DISTRIBUTOR BOX SWITCH		01
003	0501011643	3/8 X 1"BOLT		01
004	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		01
005	0503010025	3/8" SPRING WASHER		05
006	0503010209	3/8" UNC BUTTERFLY NUT		01
007	0503010026	3/8" NUT		04
008	0503010849	3/8" X 1-1/2" BOLT		04



0503033911



0503033591



0503031428



0503033423



0503033854



0503031425



0503031565



0503033765




0503033853



0503033764




0503031669



0503031546




0503032930




0503034500


Item	Code	Description	See page	QT
001	0503033911	ADHESIVE LABEL		02
002	0503033854	ADHESIVE LABEL		02
003	0503033853	ADHESIVE LABEL		02
004	0503031669	ADHESIVE LABEL		01
005	0503033591	ADHESIVE LABEL		01
006	0503031425	ADHESIVE LABEL ATTENTION		02
007	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
008	0503031428	READ MANUAL DECAL		01
009	0503031565	ADHESIVE LABEL CARE		02
010	0503032930	ADHESIVE LABEL DANGER		04
011	0503033423	LABEL ADHESIVE NUMBER 9		02
012	0503033765	ADHESIVE LABEL APT MARCHESAN LARGER		02
013	0503033764	ADHESIVE LABEL APT MARCHESAN LOWER		03
014	0503034500	ADHESIVE LABEL		01

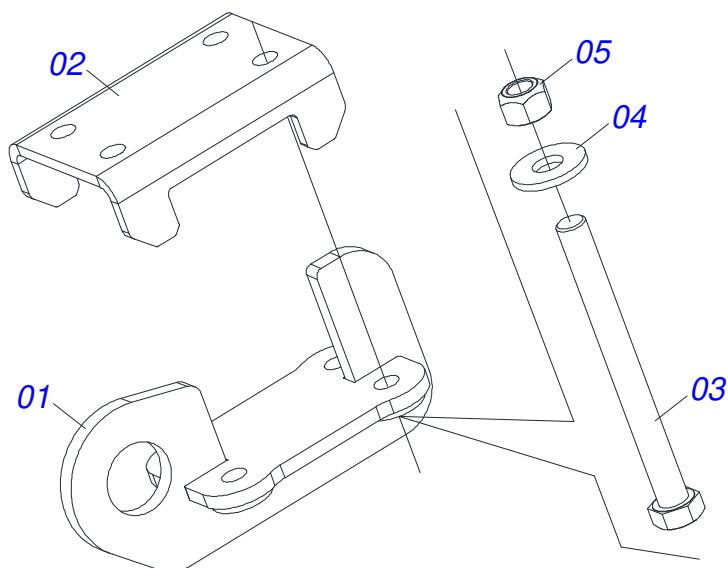


Item	Code	Description	See page	QT
01	0521066608	LIFTING HOOK		01
02	0581019707	FIXATION SUPPORT SUPPORT		01
03	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
04	0501012140	FLAT WASHER		04
05	0503012412	5/8 UNC SELF LOCKING NUT		04

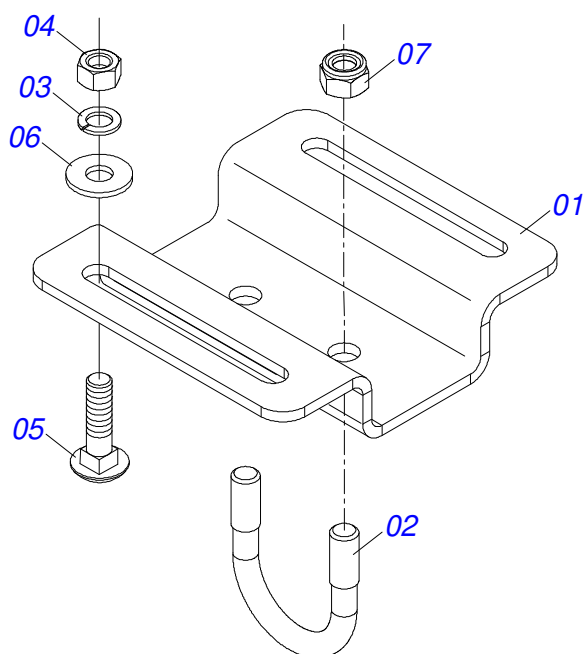

Item	Code	Description	See page	QT
01	0581011989	SIDE BODY FIXER PLATFORM		01
02	0551019884	45 X 50 X 3/8 FASTENER		01
03	0503010025	3/8" SPRING WASHER		02
04	0503010026	3/8" NUT		02
05	0501011643	3/8 X 1"BOLT		02
06	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
07	0503013357	3/8" SELF-ADJUSTING NUT		02

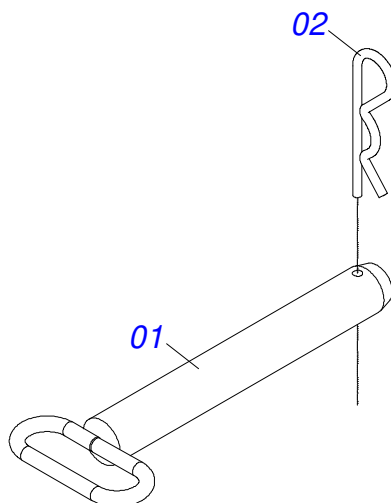

Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

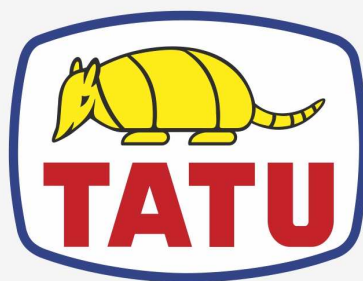

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

