

PARTS CATALOGUE




SEEDERS

Code:

0501092869

Product:

STM - FRAME 7400

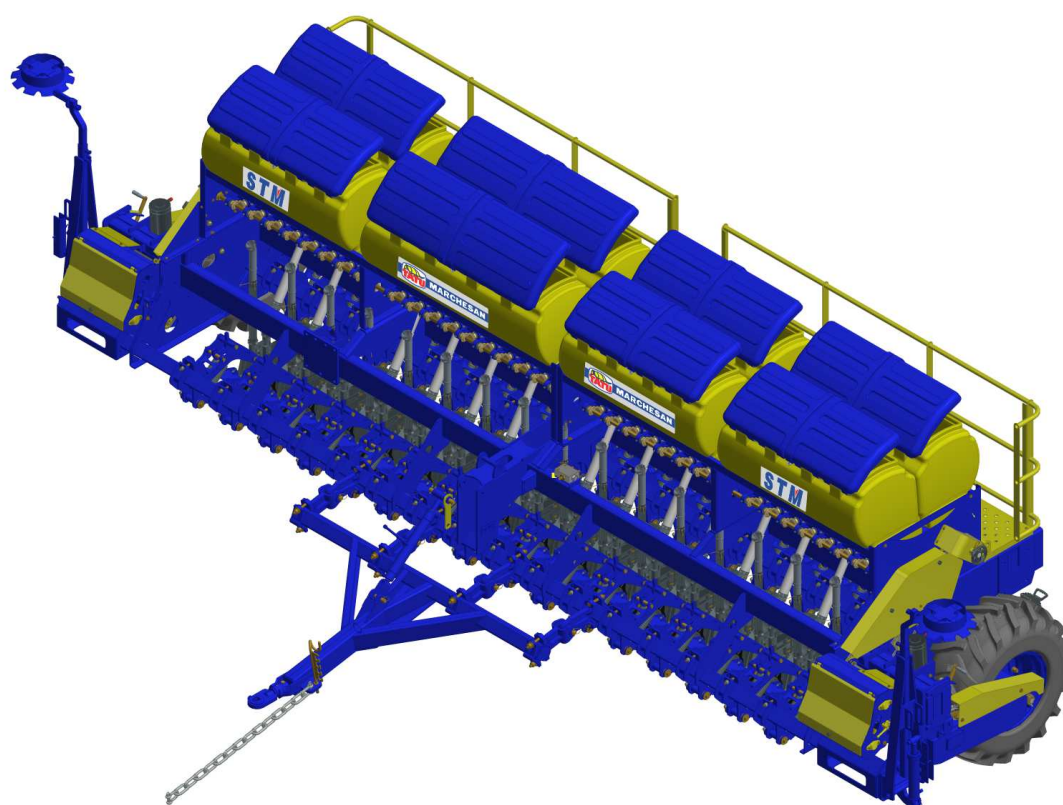

Series:

S-0216

Revision:

00

Date Revision:

DEZEMBRO/2020

PRODUCTS



Code	Description
0112100027	STM 7400/33/23E250 MH 11G S-0216

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.




MARCHESAN

INDEX


0909095505	ASSY FRAME	1
0521059111	SILO MOUNTED SUPPORT	2
0521059109	SILO RIGHT SUPPORT	3
0521059110	LEFT SUPPORT SILO	4
0511057944	21Z GEAR BEARING ASSY FERTILIZER	5
0511057866	39Z ASSY GEAR BEARING	6
0511057930	DISTRIBUTOR FERTILIZER	7
0521052244	ASSY RIGHT WHEEL	8
0521052245	ASSY LEFT WHEEL	9
0521052229	RIGHT MOUNTED RIGHT	10
0521052230	MOUNTED LEFT WHEEL	11
0521052225	WHEEL CURRENT STRETCHER	12
0511050684	ASSY LEFT TRANSMISSION DRIVER	13
0511050683	ASSY RIGHT TRANSMISSION DRIVER	14
0521052226	WHEEL WITH TIRE 16.0 / 70-20 10L ASSEMBLED	15
0521052227	ASSY WHEEL BOX	16
0521052224	WHEEL WITH TIRE 16.0 / 70-20 10L	17
0521052228	HYDRAULIC CYLINDER 50.80 X 127.00 X 262 X 244	18
0521059113	ASSY RIGHT / LEFT TRANSMISSION (THICK)	19
0531050203	RIGHT EXCHANGE MOUNTED DOUBLE BEARING	20
0531050204	LEFT EXCHANGED MOUNTED DOUBLE BEARING	21
0531050189	BEARING DOUBLE EXCHANGE MOUNTED	22
0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	23
0501056443	BEARING ASSY GEAR BOX	24
0531050191	MOUNTED EXCHANGE COVER	25
0511059803	RIGHT / LEFT SIDE COVER	26
0521052238	HYDRAULIC ASSY	27
0521051478	BLOCK WITH ASSY FLOW DIVIDER VALVE	28
0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	29
0521052240	PLATFORM ASSY	30
0521052239	ASSY RIGHT/LEFT HANDRAIL	31
0511059806	LADDER ASSY	32
0521052213	DRAWBAR ASSY	33
0511057875	ASSY HEADER EXTENSOR	34
0511059855	MANUAL CANISTER ASSY	35
0521052241	ASSY STICKER	36
0511050129	SUPPORT ASSEMBLE	37
0521059131	ASSY HYDRAULIC MARKER	38
0511058449	HYDRAULIC CYLINDER	39
0501054886	ROW MARKER DISC	40
0501054649	SEQUENTIAL VALVE ASSY	41
0909095506	ASSY SEED LINE	42
0531050535	RIGHT FRONT LINE SEED	43
0521056470	LEFT BACK LINE	44
0511057874	DDD 13 X 15 RIGHT HUB LOW	45
0511057873	DDD 13 X 15 LEFT HUB LOW	46
0511056612	LOW LEFT HUB WITH DISK 13	47
0511056611	RIGHT LOW CUBE WITH DISK 15	48
0521058229	CONTROL DEPTH	49
0521058230	CONTROL DEPTH	50
0521058231	HANDLE MOUNTED	51
0501055187	DEPTH WHEEL WITHOUT CUBE	52
0511059658	SEED ROW OPTIONAL	53
0521040111	DEP CONT WHEELS PRESS WHEELS ASSY	54
0511051447	CONTROL DEPTH ASSY	55

INDEX


0501058576	RIGHT WHEEL ARM	56
0501058577	RIGHT ARM DEPTH CONTROL WHEEL	57
0501052627	ASSY DEPTH WHEEL BOX	58
0501052538	DEPTH BAND WITH ARMS	59
0511054333	COMPACT WHEEL RIGHT WITH BEARING	60
0511054334	COMPACT WHEEL LEFT WITH BEARING	61
0501052908	COMPACTOR WHEEL WITH BEARING	62
0511058472	SEED SYSTEM	63
0511058473	SEED SYSTEM	64
0511058474	BOX COVER	65
0511053857	FAST CLOSING SET	66
0501059631	DDD SEED 15" X 15" RIGHT	67
0501054167	BOX DDD ASSY DPL 15 RIGHT	68
0501054168	BOX DDD ASSY DPL 15 LEFT	69
0511054884	TRANSMISSION BOX	70
0511059190	BEARING DOBLE	71
0511059191	FRONT BEARING DOBLE	72
0521059096	CUTTING DISC ASSY	73
0521059098	DISC CUTTING DPL 18 ASSY	74
0521059099	ASSY CUTTING DISC 18	75
0501050120	LARGER WALKING BEAM ASSY	76
0521059102	DRIVER GUIDE SEED 2	77
0909095507	REAR TRANSMISSION ASSY	78
0511059651	TRANSMISSION SIDE BEARING	79
0501057684	SIDE BEARING FRONT SUPPORT SEED LINE	80
0501053566	BEARING SEED LINE	81
0511059652	SEED CHAIN STRETCHER	82
0511058470	DOBLE GEAR	83
0501053653	BEARING WITH 20Z GEAR	84
0501053654	DOUBLE BEARING TRANSMISSION SEED 3/4	85
0511050652	CHAIN TENSIONER	86
0511058471	BELT TENSIONER ASSY	87

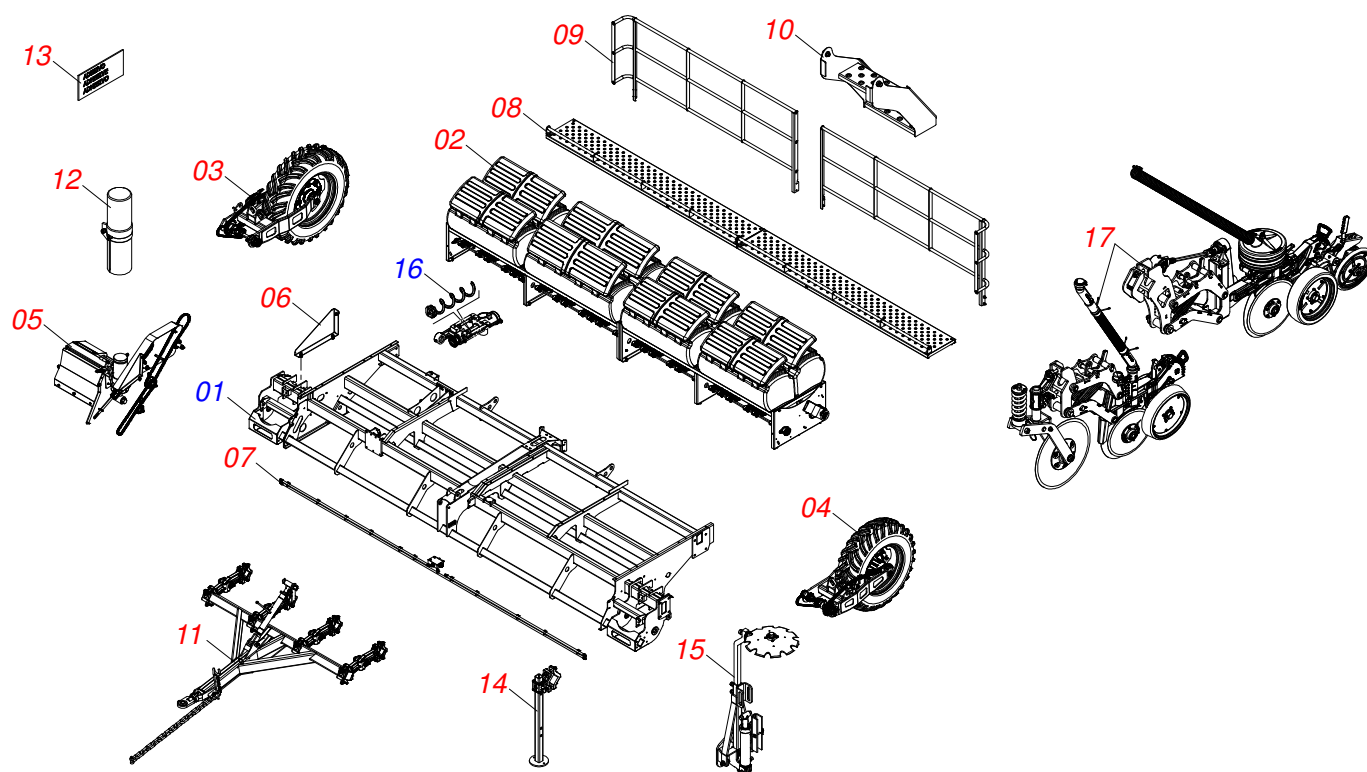

Item	Code	Description	See page	QT
01	0521068419	FRAME		01
02	0521059111	SILO MOUNTED SUPPORT	2	01
03	0521052244	ASSY RIGHT WHEEL	8	01
04	0521052245	ASSY LEFT WHEEL	9	01
05	0521059113	ASSY RIGHT / LEFT TRANSMISSION (THICK)	19	01
06	0511059803	RIGHT / LEFT SIDE COVER	26	01
07	0521052238	HYDRAULIC ASSY	27	01
08	0521052240	PLATFORM ASSY	30	01
09	0521052239	ASSY RIGHT/LEFT HANDRAIL	31	01
10	0511059806	LADDER ASSY	32	01
11	0521052213	DRAWBAR ASSY	33	01
12	0511059855	MANUAL CANISTER ASSY	35	01
13	0521052241	ASSY STICKER	36	01
14	0511050129	SUPPORT ASSEMBLE	37	01
15	0521059131	ASSY HYDRAULIC MARKER	38	01
16	0503031165	LEFT HELICAL CONDUTOR		11
17	0909095506	ASSY SEED LINE	42	33

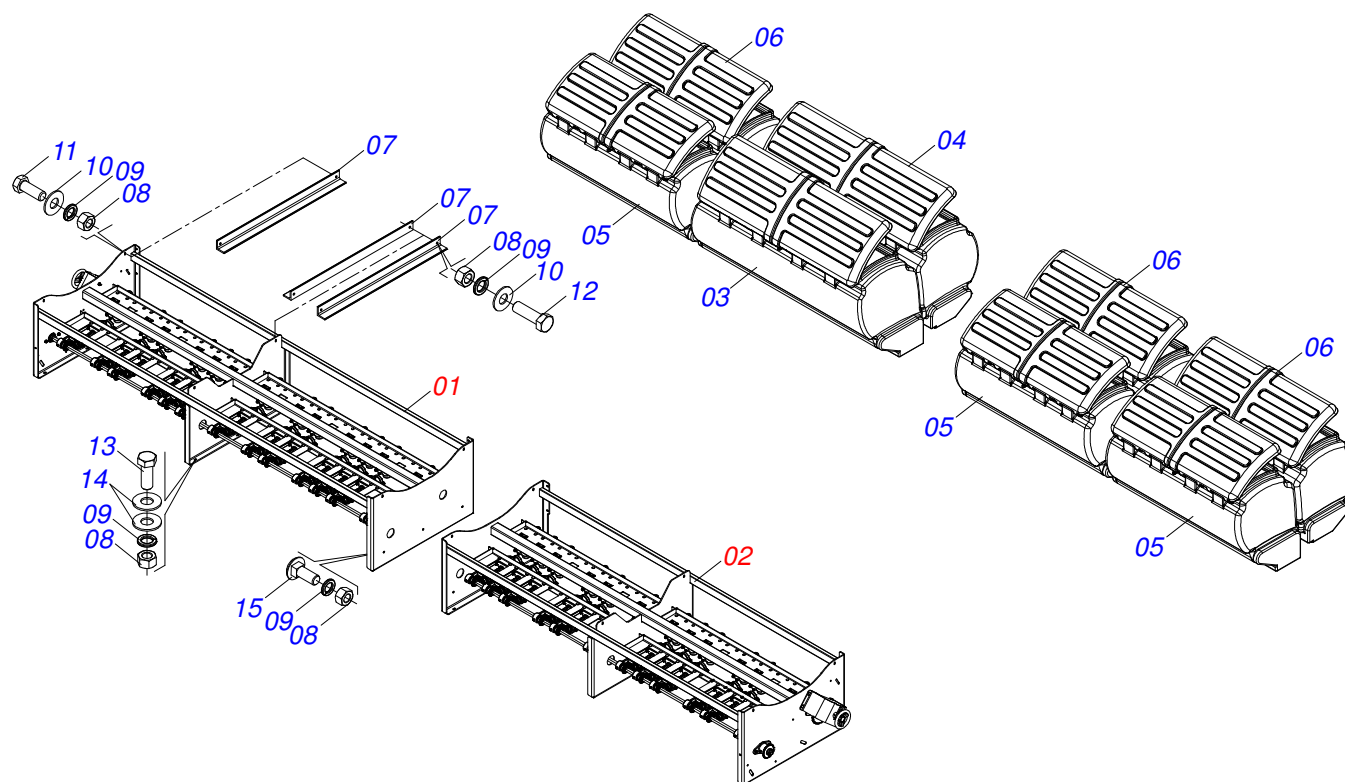


Item	Code	Description	See page	QT
01	0521059109	SILO RIGHT SUPPORT	3	01
02	0521059110	LEFT SUPPORT SILO	4	01
03	0503062587	FERTILIZER SILO ASSY		01
04	0503062588	ASSY SEED SILO		01
05	0503062464	ASSY FERTILIZER SILO		03
06	0503062463	ASSY SEED SILO		03
07	0581010154	CORNER 2 X 2 X 1/4 X 810		08
08	0503010026	3/8" NUT		31
09	0503010025	3/8" SPRING WASHER		31
10	0501013518	FLAT WASHER		10
11	0503011087	3/8" X 1" BOLT		04
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
13	0503010849	3/8" X 1-1/2" BOLT		20
14	0501010984	FLAT WASHER		36
15	0501011643	3/8 X 1"BOLT		03

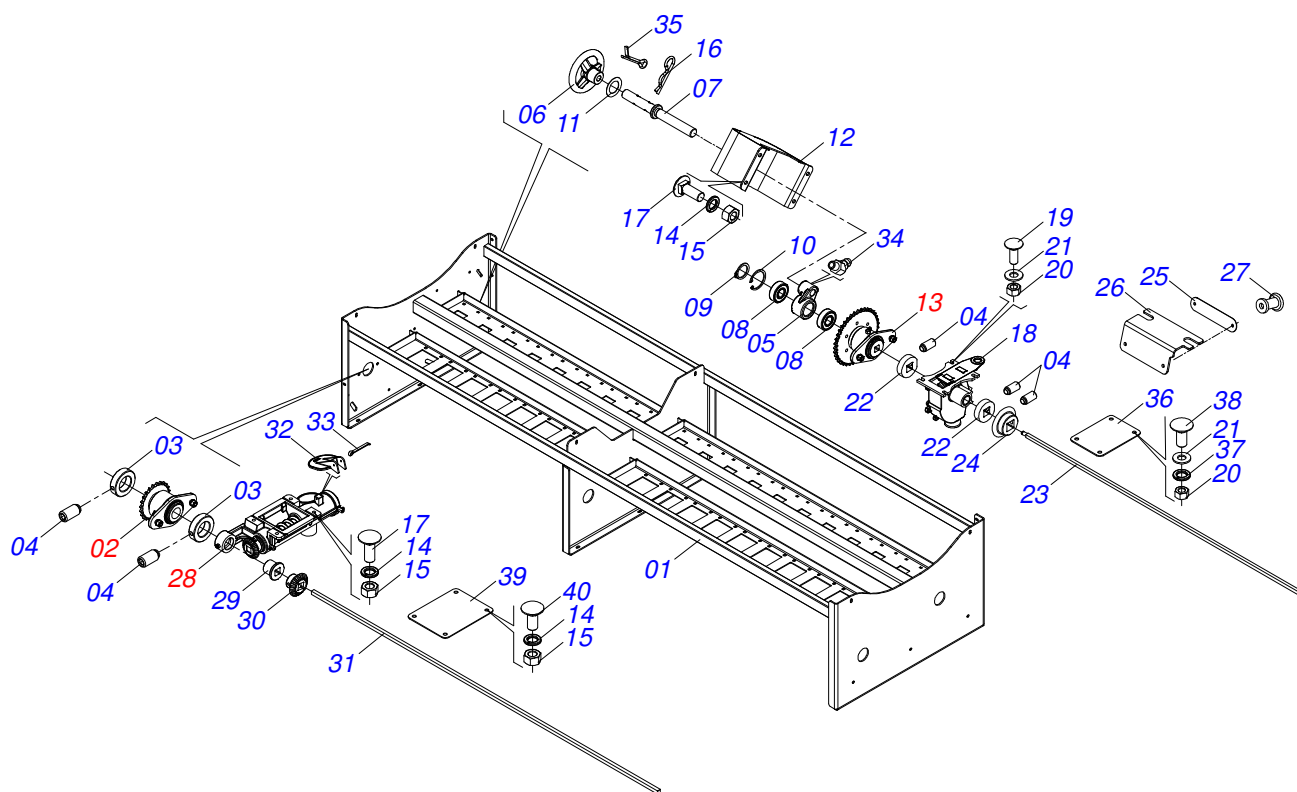


Item	Code	Description	See page	QT
01	0521068425	SILO RIGHT SUPPORT		01
02	0511057944	21Z GEAR BEARING ASSY FERTILIZER	5	01
03	0571017643	AXLE FERTILIZER LOCK SLEVE		02
04	0503017021	M8 X 0.5" BOLT		29
05	0502012325	SEED REG BEARING		01
06	0551019597	SEED REGULACION HANDLE		01
07	0571015340	AXIS		01
08	0503012882	BEARING		02
09	0503012104	501015 CLAMPING RING (FOR AXLE)		01
10	0503011945	503050 CLAMPING RING (FOR AXLE)		01
11	0511015098	FLAT WASHER		01
12	0521066464	ADJUSTING SEED SUPPORT		01
13	0511057866	39Z ASSY GEAR BEARING	6	01
14	0503010025	3/8" SPRING WASHER		76
15	0503010026	3/8" NUT		76
16	0503031035	HAIR PIN		01
17	0501011643	3/8 X 1" BOLT		56
18	0503032990	SEED DISTRIBUTOR BOX ASSY		13
19	0503011953	5/16" X 1" BOLT		52
20	0503010337	5/16" NUT		72
21	0501010694	8.5 X 18 X 1.5 FLAT WASHER		72
22	0571017642	LATCH GLOVE BOX		26
23	0581016282	SQUARE SEED AXIS 15,88 X 3200		01
24	0571017641	LARGER DOSER		01
25	0503030886	SCALE DOSER		01
26	0581010116	SUPPORT SCALE SEED		01
27	0503010001	3.2 X 5.5 RIVET		02
28	0511057930	DISTRIBUTOR FERTILIZER	7	13
29	0503030275	AGRICULTURAL BEARING		13
30	0502011412	18Z CONICAL GEAR		13
31	0581016283	SQUARE FERTILIZER AXLE 19,05 X 3130		01

Item	Code	Description	See page	QT
32	0503034396	FERTILIZER SIDE COVER		13
33	0503010362	1/8" X 1.1/4" COTTERPIN		13
34	0503011099	GREASE FITTING		01
35	0503010010	1/4" X 2.1/2" COTTERPIN		01
36	0591015114	SILO SEED SUPPORT COVER		05
37	0503010179	5/16" ZN SPRING WASHER		20
38	0503011952	5/16" X 3/4" BOLT		20
39	0591015113	SILO FERTILIZER COVER		05
40	0503013029	3/8" X 3/4" BOLT		20

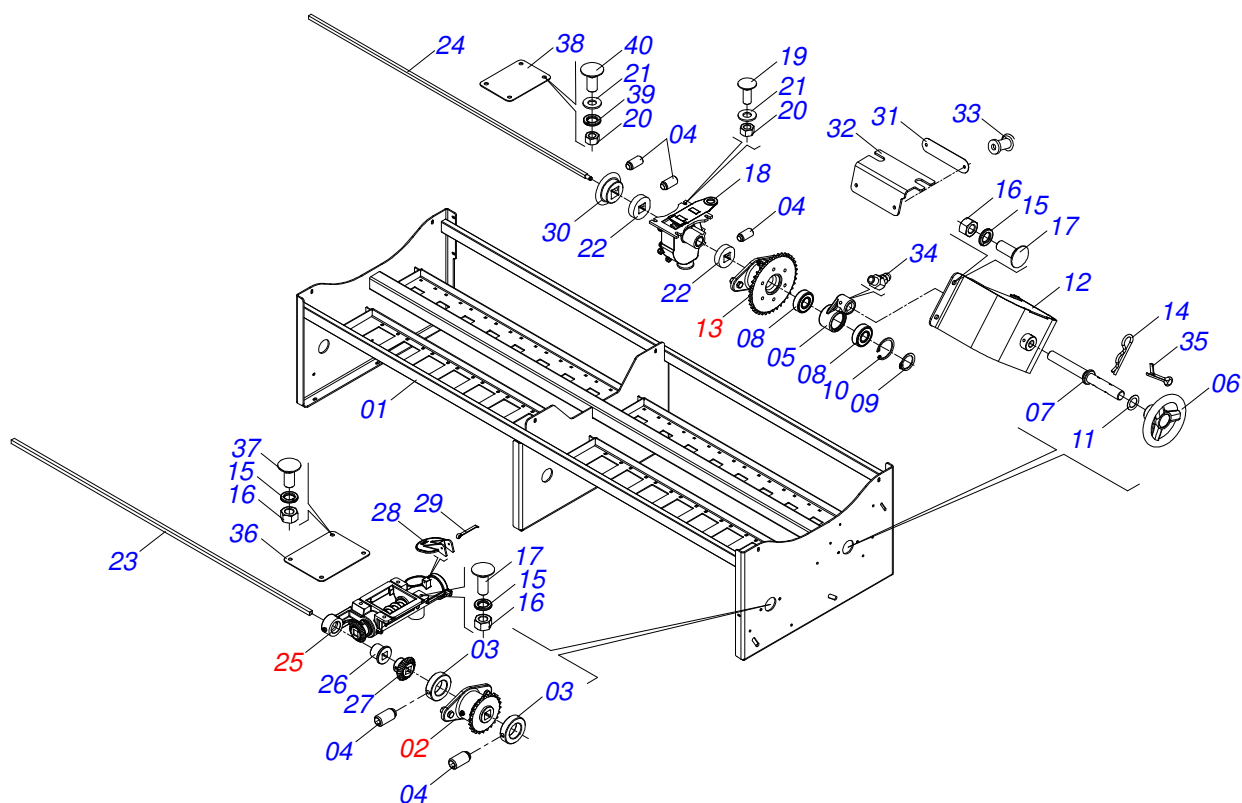


Item	Code	Description	See page	QT
01	0521068426	LEFT SUPPORT SILO		01
02	0511057944	21Z GEAR BEARING ASSY FERTILIZER	5	01
03	0571017643	AXLE FERTILIZER LOCK SLEEVE		02
04	0503017021	M8 X 0.5" BOLT		27
05	0502012325	SEED REG BEARING		01
06	0551019597	SEED REGULACION HANDLE		01
07	0571015340	AXIS		01
08	0503012882	BEARING		02
09	0503012104	501015 CLAMPING RING (FOR AXLE)		01
10	0503011945	503050 CLAMPING RING (FOR AXLE)		01
11	0511015098	FLAT WASHER		01
12	0521066464	ADJUSTING SEED SUPPORT		01
13	0511057866	39Z ASSY GEAR BEARING	6	01
14	0503031035	HAIR PIN		01
15	0503010025	3/8" SPRING WASHER		68
16	0503010026	3/8" NUT		68
17	0501011643	3/8 X 1" BOLT		52
18	0503032990	SEED DISTRIBUTOR BOX ASSY		12
19	0503011953	5/16" X 1" BOLT		48
20	0503010337	5/16" NUT		64
21	0501010694	8.5 X 18 X 1.5 FLAT WASHER		64
22	0571017642	LATCH GLOVE BOX		24
23	0581016279	SQUARE FERTILIZER AXLE 19,05 X 2880		01
24	0581016278	SQUARE SEED AXIS 15,88 X 2950		01
25	0511057930	DISTRIBUTOR FERTILIZER	7	12
26	0503030275	AGRICULTURAL BEARING		12
27	0502011412	18Z CONICAL GEAR		12
28	0503034396	FERTILIZER SIDE COVER		12
29	0503010362	1/8" X 1.1/4" COTTERPIN		12
30	0571017641	LARGER DOSER		01
31	0503030886	SCALE DOSER		01


Item	Code	Description	See page	QT
32	0581010116	SUPPORT SCALE SEED		01
33	0503010001	3.2 X 5.5 RIVET		02
34	0503011099	GREASE FITTING		01
35	0503010010	1/4" X 2.1/2" COTTERPIN		01
36	0591015113	SILO FERTILIZER COVER		04
37	0503013029	3/8" X 3/4" BOLT		16
38	0591015114	SILO SEED SUPPORT COVER		04
39	0503010179	5/16" ZN SPRING WASHER		16
40	0503011952	5/16" X 3/4" BOLT		16

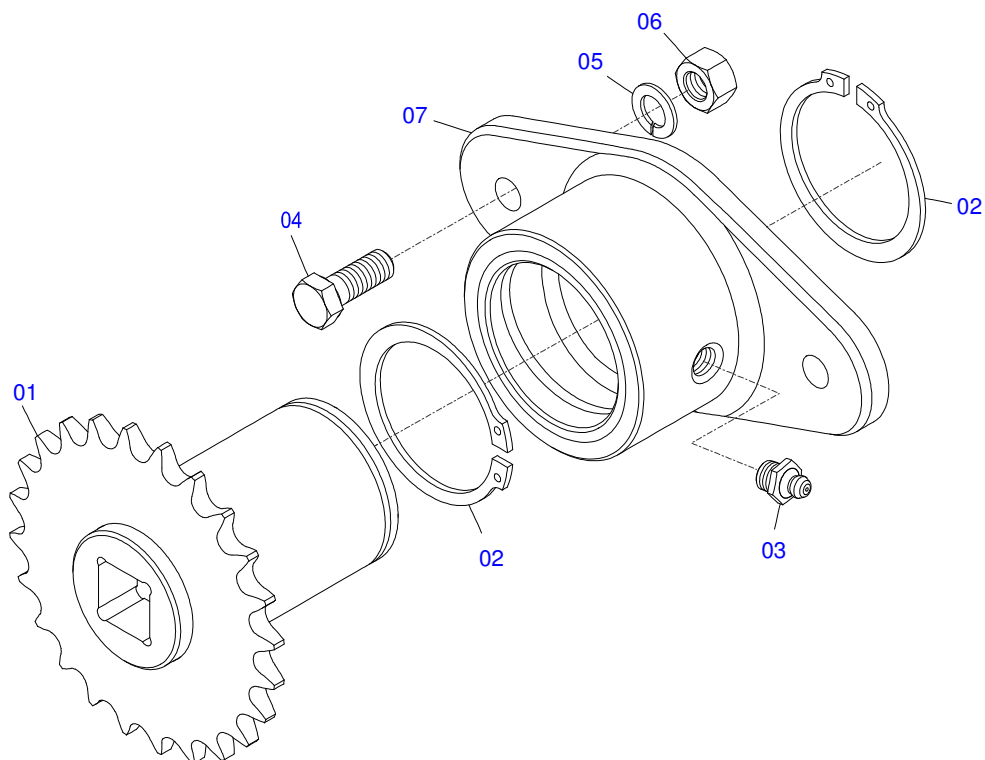


Item	Code	Description	See page	QT
01	0521066389	WHEEL TOOTH		01
02	0503010372	501050 CLAMPING RING (FOR AXLE)		02
03	0503010002	1800 GREASE FITTING		01
04	0503010237	3/8" X 1" BOLT		02
05	0503010025	3/8" SPRING WASHER		02
06	0503010026	3/8" NUT		02
07	0501110582	FERTILIZER/SEED BOX BEARING		01

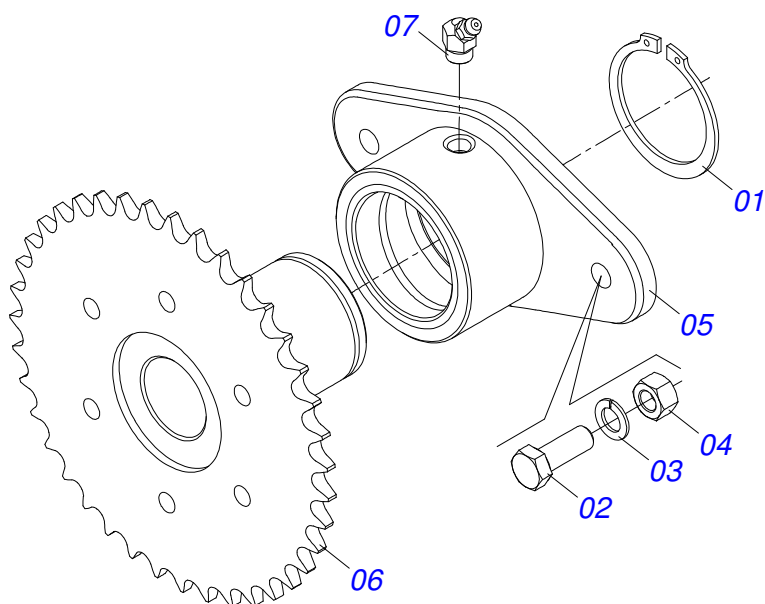


Item	Code	Description	See page	QT
01	0503010372	501050 CLAMPING RING (FOR AXLE)		01
02	0503010237	3/8" X 1" BOLT		02
03	0503010025	3/8" SPRING WASHER		02
04	0503010026	3/8" NUT		02
05	0501110250	BEARING BOX		01
06	0521066388	39Z GEAR SEED		01
07	0503010003	1845 GREASE FITTING		01

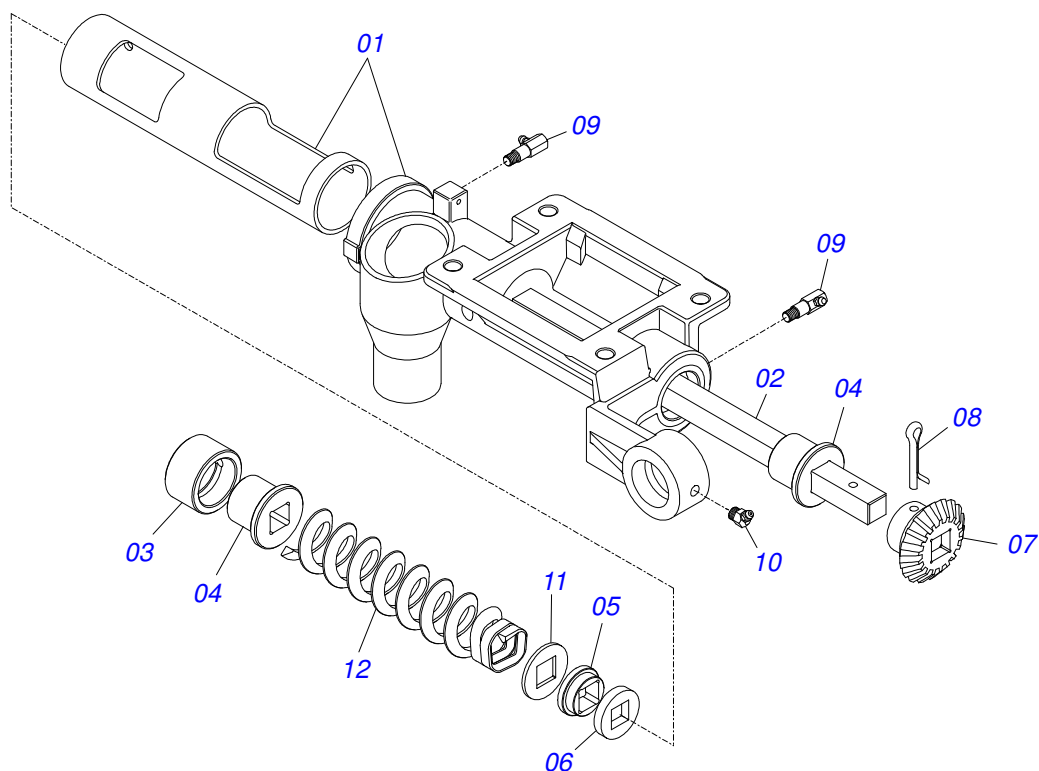


Item	Code	Description	See page	QT
01	0501110691	DISTRIBUTOR FERTILIZER WITH SIDE OUTPUT	01	
02	0501019851	DISTRIBUTOR FERTILIZER AXLE	01	
03	0521010309	SLEEVE INTER	01	
04	0503030275	AGRICULTURAL BEARING	02	
05	0503030303	SUPPORT WASHER	01	
06	0501013774	GREASE SEAL	01	
07	0502011412	18Z CONICAL GEAR	01	
08	0503010523	1/4" X 2" COTTERPIN	01	
09	0503011962	GREASE FITTING	01	
10	0503010003	1845 GREASE FITTING	01	
11	0501010637	FLAT WASHER	01	
12	0503031166	LEFT CONDUTOR	01	

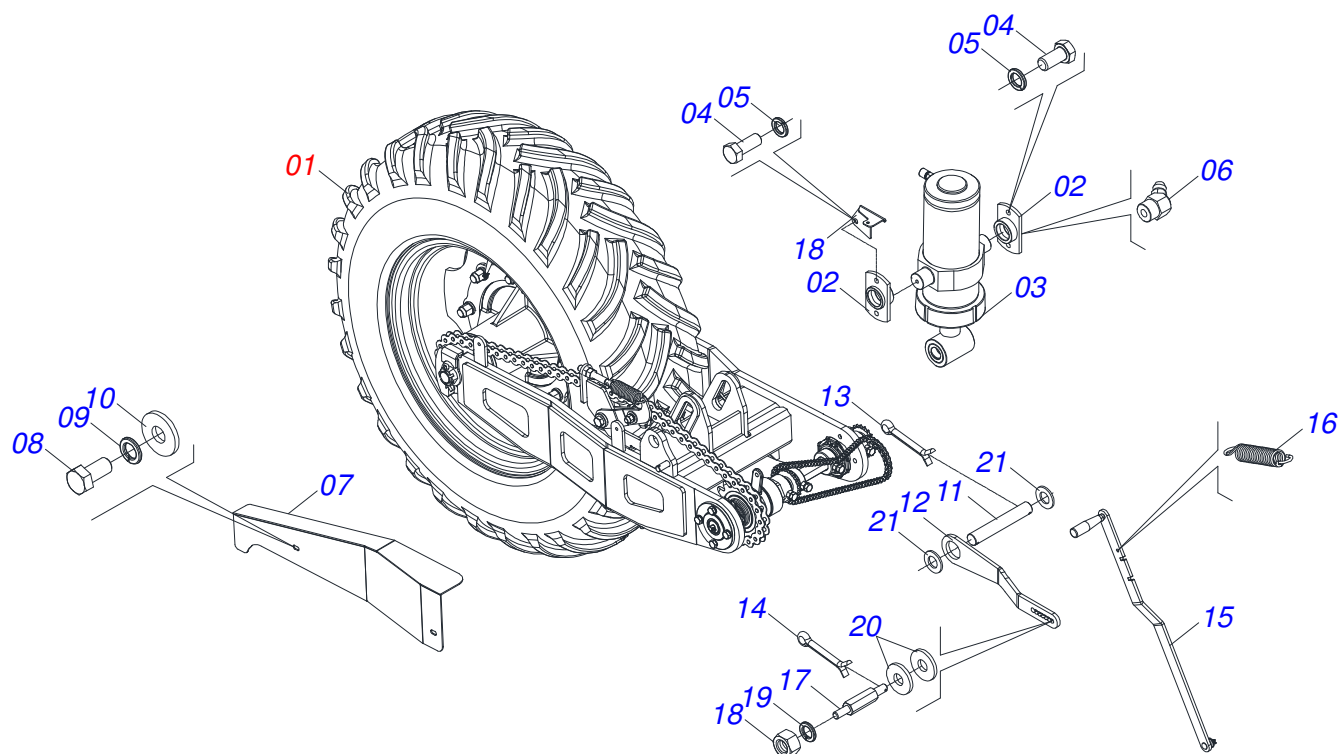

Item	Code	Description	See page	QT
001	0521052229	RIGHT MOUNTED RIGHT	10	01
002	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
003	0521052228	HYDRAULIC CYLINDER 50.80 X 127.00 X 262 X 244	18	01
004	0503010834	1/2 X 1 BOLT		04
005	0503010019	1/2" SPRING WASHER		04
006	0503010003	1845 GREASE FITTING		02
007	0521068459	RIGHT ROUND CHAIN COVER		01
008	0503010256	3/8" X 3/4" BOLT		02
009	0503010025	3/8" SPRING WASHER		02
010	0501010984	FLAT WASHER		02
011	0581016177	COUPLING SHAFT		01
012	0581016175	REGULATING LEVER		01
013	0503010010	1/4" X 2.1/2" COTTERPIN		01
014	0503010140	1/8" X 3/4" COTTERPIN		01
015	0511059655	LEVER RIGHT RATCHET		01
016	0503030093	TRACTION SPRING		01
017	0571015063	LOCK AXIS		01
018	0503010026	3/8" NUT		01
019	0503010025	3/8" SPRING WASHER		01
020	0501013518	FLAT WASHER		02
021	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN		02

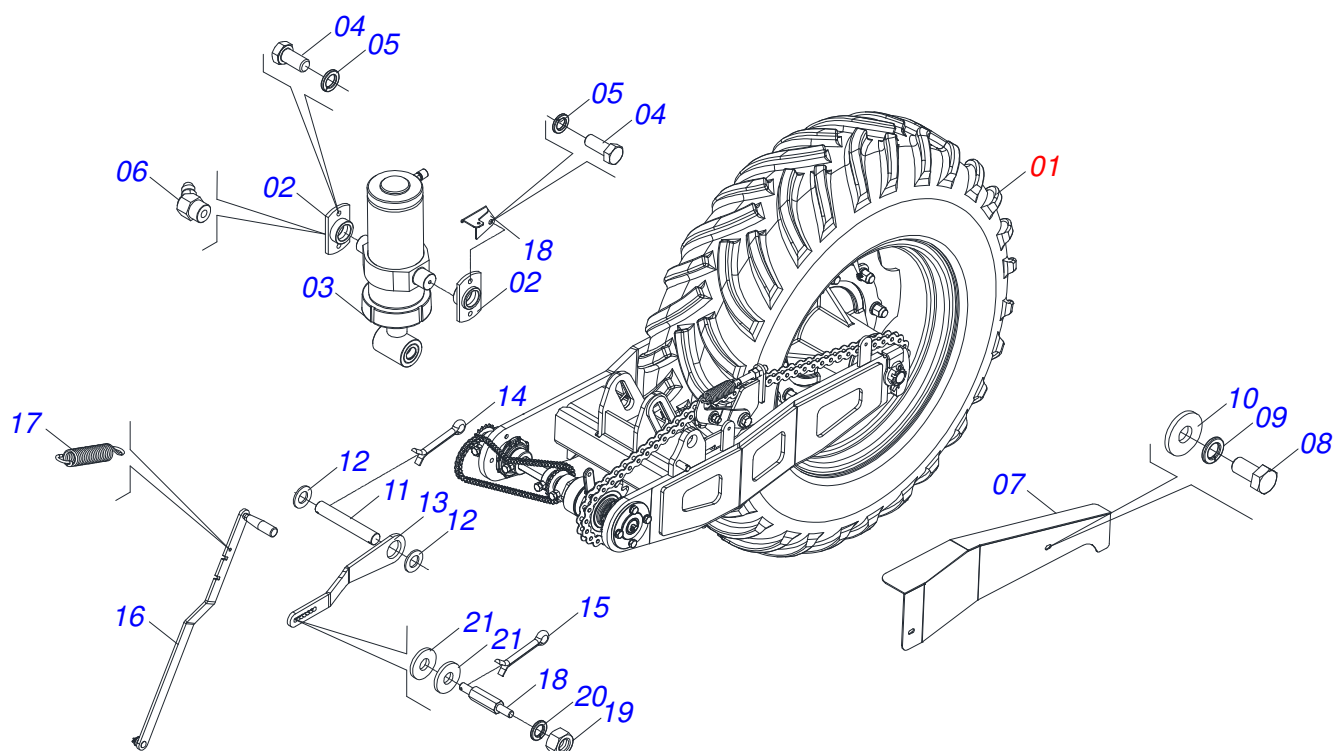

Item	Code	Description	See page	QT
001	0521052230	MOUNTED LEFT WHEEL	11	01
002	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
003	0521052228	HYDRAULIC CYLINDER 50.80 X 127.00 X 262 X 244	18	01
004	0503010834	1/2 X 1 BOLT		04
005	0503010019	1/2" SPRING WASHER		04
006	0503010003	1845 GREASE FITTING		02
007	0521068460	COVER CURRENT WHEEL LEFT		01
008	0503010256	3/8" X 3/4" BOLT		02
009	0503010025	3/8" SPRING WASHER		02
010	0501010984	FLAT WASHER		02
011	0581016177	COUPLING SHAFT		01
012	0501012916	FLAT WASHER 38,50 X 66 X 4,75 ZN		01
013	0581016175	REGULATING LEVER		01
014	0503010010	1/4" X 2.1/2" COTTERPIN		01
015	0503010140	1/8" X 3/4" COTTERPIN		01
016	0511059654	LEVER LEFT RATCHET		01
017	0503030093	TRACTION SPRING		01
018	0571015063	LOCK AXIS		01
019	0503010026	3/8" NUT		01
020	0503010025	3/8" SPRING WASHER		01
021	0501013518	FLAT WASHER		02

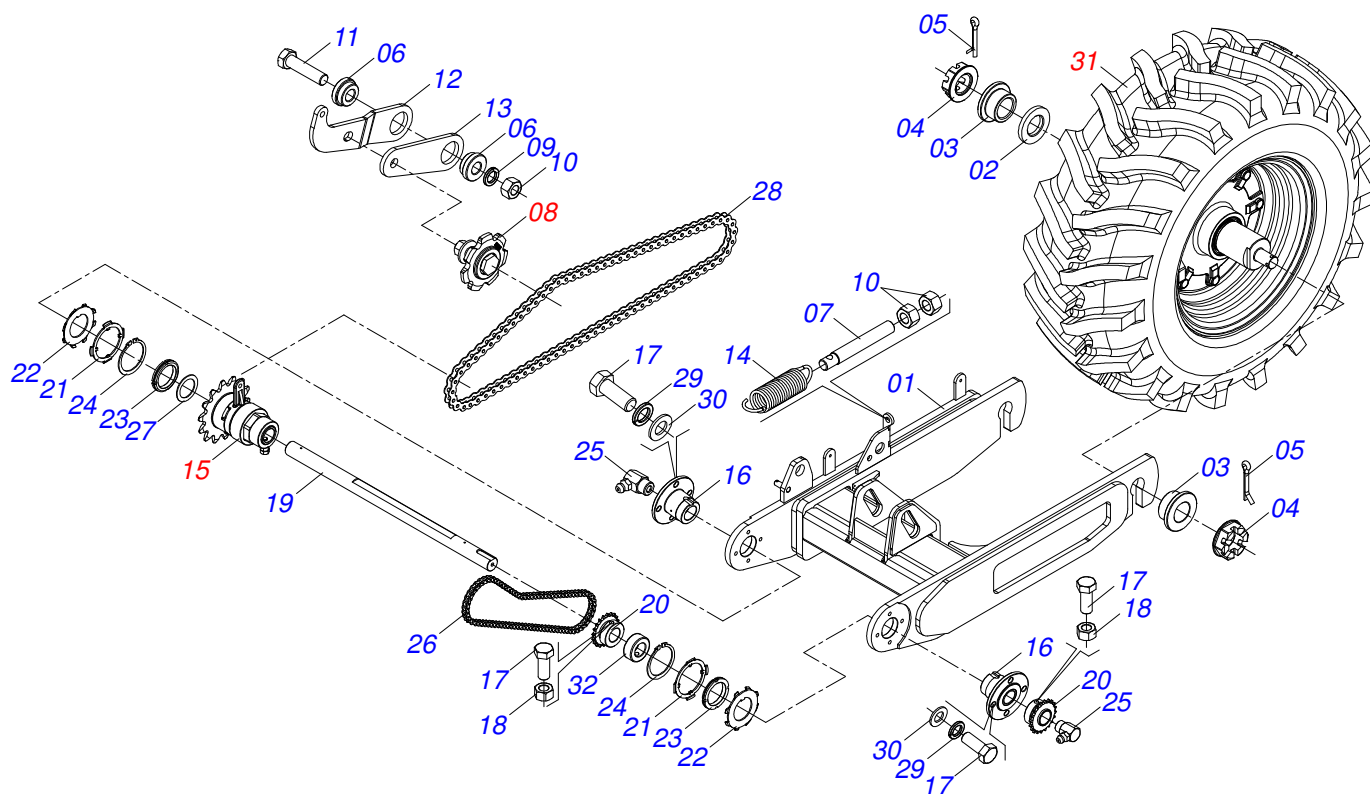


Item	Code	Description	See page	QT
01	0521068431	RIGHT WHEEL FORK		01
02	0581012527	FLAT WASHER 38.3 X 70 X 8.00		01
03	0581016226	GLOVE LOCK WHEEL		02
04	0501010630	1.1/2" CASTLE NUT		02
05	0503012267	5/16" X 3" COTTER PIN		02
06	0531016916	SLEEVE BEARING SUPPORT		02
07	0501013491	5/8" TENSIONER SPRING		01
08	0521052225	WHEEL CURRENT STRETCHER	12	01
09	0503010027	5/8" SPRING WASHER		01
10	0503010013	5/8" NUT		03
11	0503010233	5/8" X 2-1/2" BOLT		01
12	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
13	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPORT		01
14	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
15	0511050684	ASSY LEFT TRANSMISSION DRIVER	13	01
16	0501110627	WHEEL PIVOT BEARING		02
17	0503010395	1/2" X 1-1/4" BOLT		11
18	0503010060	1/2" NUT		03
19	0581016229	MOTOR AXLE 34.93 X 678		01
20	0521064521	MOTOR GEAR 20Z P12,7		02
21	0561013022	BEARING EXTERNAL LOCK		02
22	0561013021	BEARING INNER LOK		02
23	0561013020	KM 12 NUT		02
24	0503010398	501082 CLAMPING RING (FOR AXLE)		02
25	0503010004	1890 GREASE FITTING		02
26	0503013352	86 CHAIN X 40-1 LINK + REDUCTION		01
27	0501018466	FLAT WASHER		01
28	0503012469	CHAIN 2050 X 77		01
29	0503010019	1/2" SPRING WASHER		08
30	0503011828	FLAT WASHER		08
31	0521052226	WHEEL WITH TIRE 16.0 / 70-20 10L ASSEMBLED	15	01



STM - FRAME 7400
RIGHT MOUNTED RIGHT

Page 10
0521052229

Item	Code	Description	See page	QT
32	0511015961	LOCK BUSHING		01

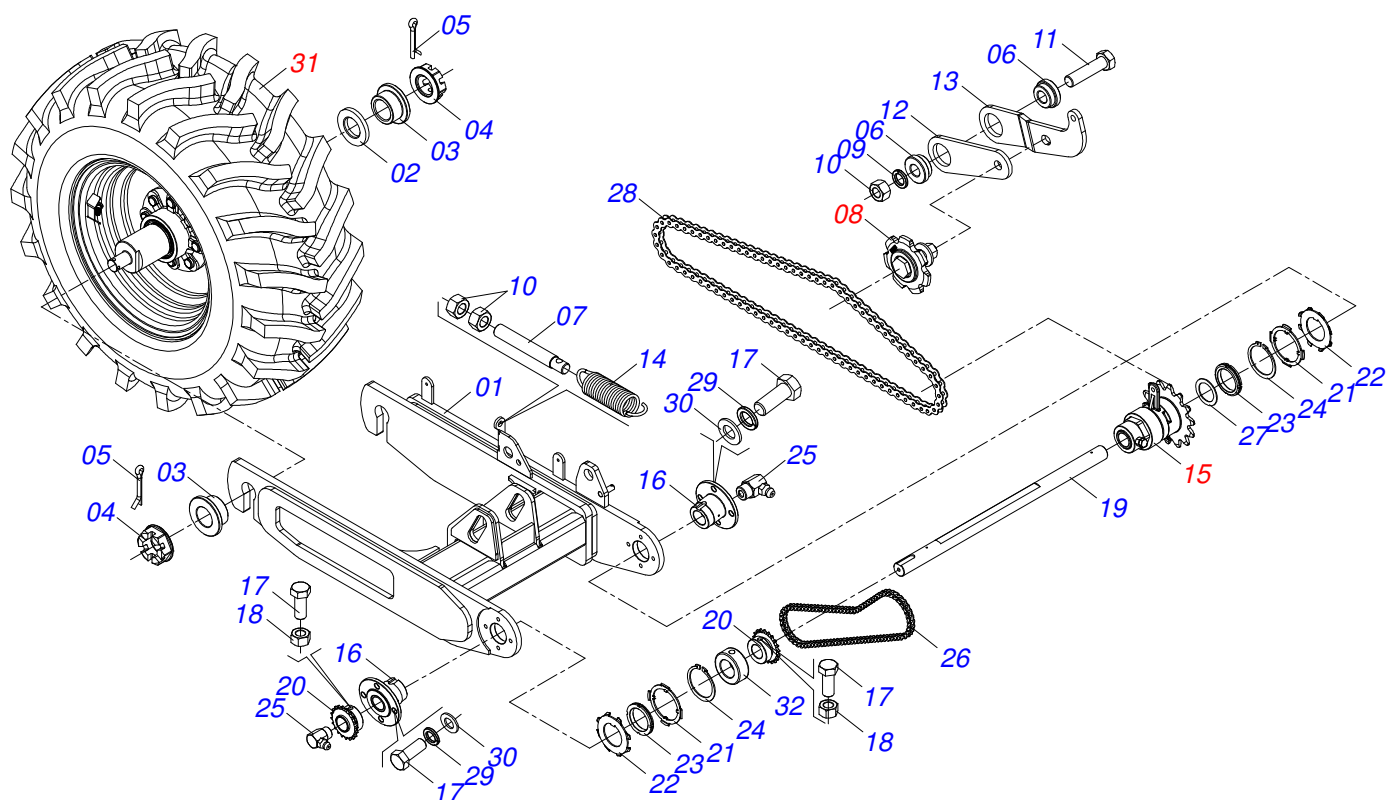


Item	Code	Description	See page	QT
01	0521068430	LEFT WHEEL FORK		01
02	0581012527	FLAT WASHER 38.3 X 70 X 8.00		01
03	0581016226	GLOVE LOCK WHEEL		02
04	0501010630	1.1/2" CASTLE NUT		02
05	0503012267	5/16" X 3" COTTER PIN		02
06	0531016916	SLEEVE BEARING SUPPORT		02
07	0501013491	5/8" TENSIONER SPRING		01
08	0521052225	WHEEL CURRENT STRETCHER	12	01
09	0503010027	5/8" SPRING WASHER		01
10	0503010013	5/8" NUT		03
11	0503010233	5/8" X 2-1/2" BOLT		01
12	0531018653	CHAIN TIGHTENER MINOR SUPPORT		01
13	0531018654	CHAIN TIGHTENER SUPPORT		01
14	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
15	0511050683	ASSY RIGHT TRANSMISSION DRIVER	14	01
16	0501110627	WHEEL PIVOT BEARING		02
17	0503010395	1/2" X 1-1/4" BOLT		11
18	0503010060	1/2" NUT		03
19	0581016229	MOTOR AXLE 34.93 X 678		01
20	0521064521	MOTOR GEAR 20Z P12,7		02
21	0561013022	BEARING EXTERNAL LOCK		02
22	0561013021	BEARING INNER LOK		02
23	0561013020	KM 12 NUT		02
24	0503010398	501082 CLAMPING RING (FOR AXLE)		02
25	0503010004	1890 GREASE FITTING		02
26	0503013352	86 CHAIN X 40-1 LINK + REDUCTION		01
27	0501018466	FLAT WASHER		01
28	0503012469	CHAIN 2050 X 77		01
29	0503010019	1/2" SPRING WASHER		08
30	0503011828	FLAT WASHER		08
31	0521052226	WHEEL WITH TIRE 16.0 / 70-20 10L ASSEMBLED	15	01




STM - FRAME 7400
MOUNTED LEFT WHEEL

Page 11
0521052230


Item	Code	Description	See page	QT
32	0511015961	LOCK BUSHING		01

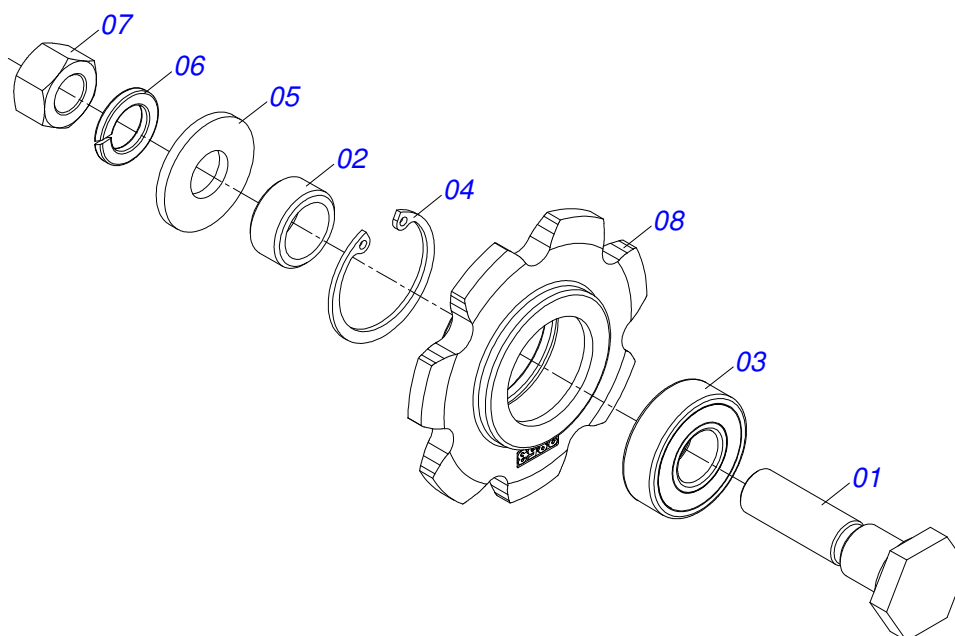


Item	Code	Description	See page	QT
01	0531012640	AXLE CHAIN TIGHTENER		01
02	0581016232	GLOVE 16 X 22 X 10.5		01
03	0503012882	BEARING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01
05	0511017302	FLAT WASHER		01
06	0503010019	1/2" SPRING WASHER		01
07	0503010060	1/2" NUT		01
08	0502012853	GEAR		01

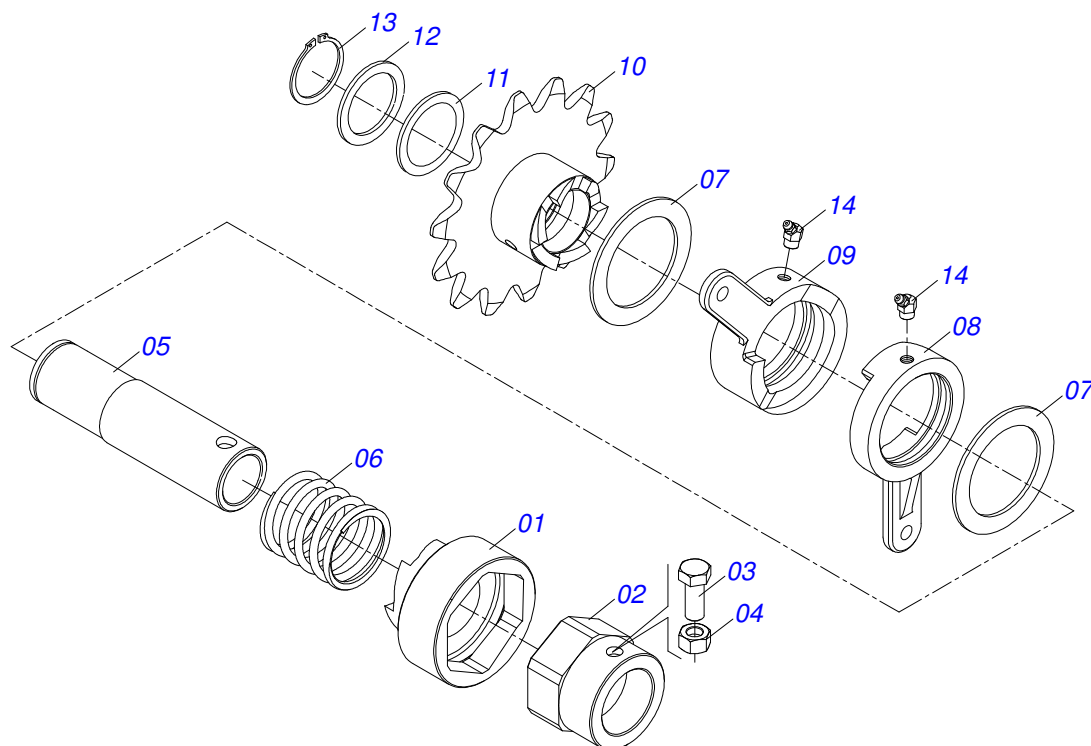


Item	Code	Description	See page	QT
01	0502011995	LH DRIVING AXLE FOLLOWER		01
02	0502011996	SLLEVE FIXER		01
03	0503010395	1/2" X 1-1/4" BOLT		01
04	0503010060	1/2" NUT		01
05	0521017590	GUIDE AXLE		01
06	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		01
09	0502010711	RIGHT CAM,LARGER		01
10	0502011331	LH 14Z P 1.25" GEAR WITH DRAGGER		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01
14	0503010003	1845 GREASE FITTING		02

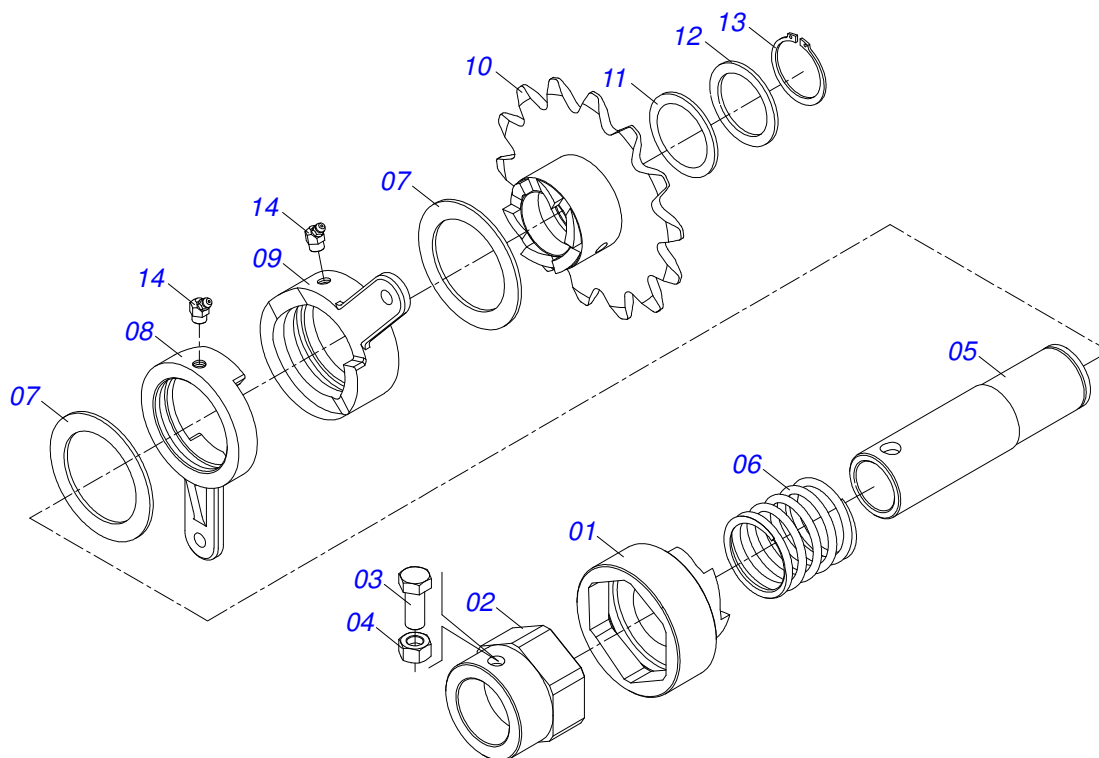


Item	Code	Description	See page	QT
01	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
02	0502011996	SLLEVE FIXER		01
03	0503010395	1/2" X 1-1/4" BOLT		01
04	0503010060	1/2" NUT		01
05	0521017590	GUIDE AXLE		01
06	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		01
09	0502010721	LEFT CAM,LARGER		01
10	0502011329	14Z GEAR WITH RIGHT DRAGGER		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01
14	0503010003	1845 GREASE FITTING		02

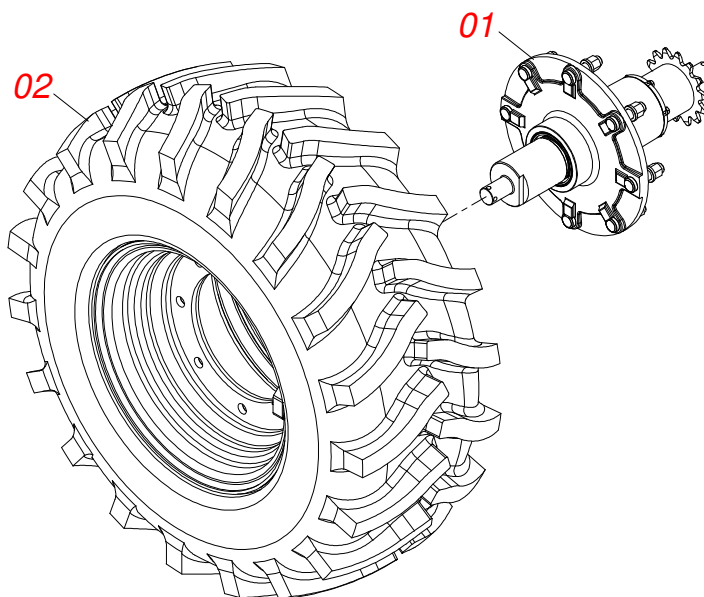


Item	Code	Description	See page	QT
01	0521052227	ASSY WHEEL BOX	16	01
02	0521052224	WHEEL WITH TIRE 16.0 / 70-20 10L	17	01

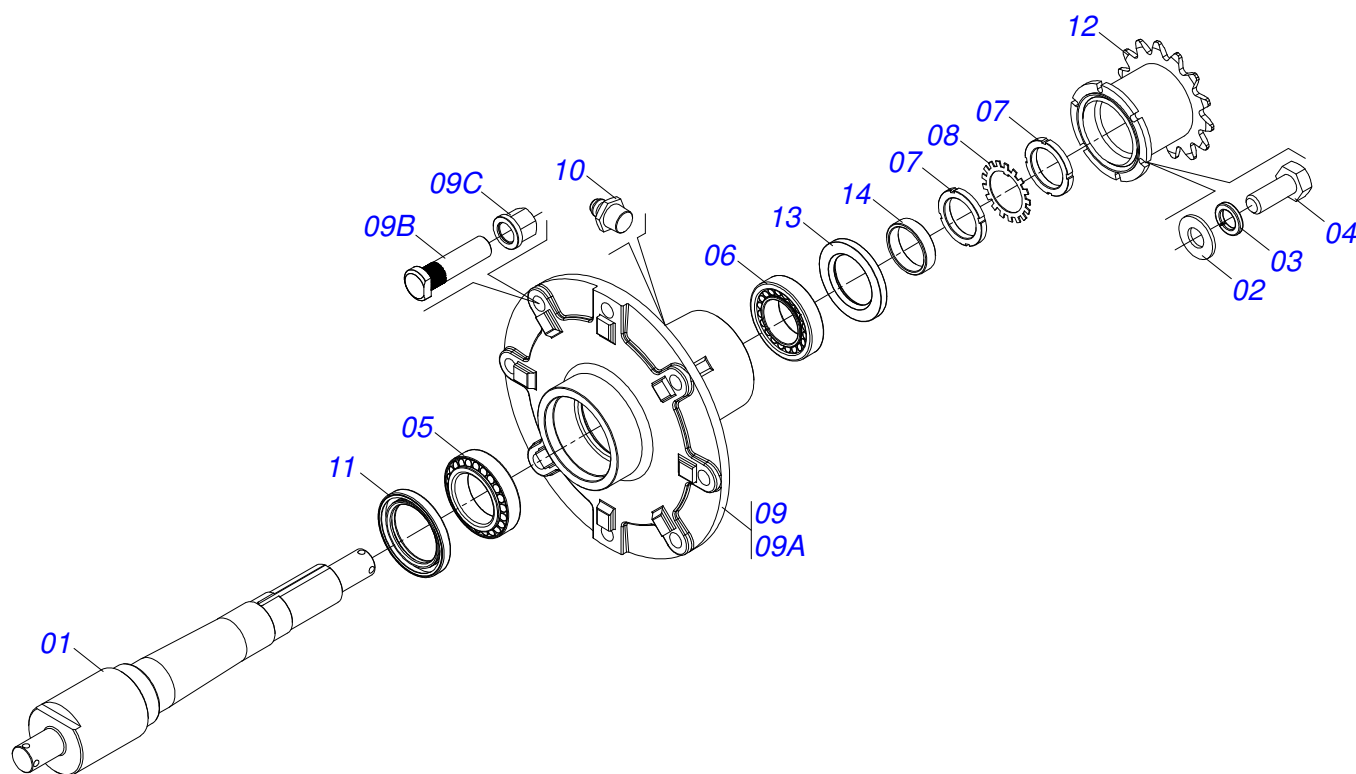


Item	Code	Description	See page	QT
01	0581016228	632 WHEEL AXLE		01
02	0501010694	8.5 X 18 X 1.5 FLAT WASHER		06
03	0503010179	5/16" ZN SPRING WASHER		06
04	0503010365	NUT		06
05	0503010059	33287/33462 ROLLER BEARING		01
06	0503010007	3982/3920 ROLLER BEARING		01
07	0503012702	KM-12 NUT		02
08	0503012703	LOCK WASHER		01
09	0501110792	ROLLED BOX WITH SCREW		01
09A	0502040865	WHEEL BOX		01
09B	0503010007	3982/3920 ROLLER BEARING		08
09C	0503011341	M22 X 0.6" NUT GR8 NUT		08
10	0503010002	1800 GREASE FITTING		01
11	0503013106	SEAL 00085-B		01
12	0521068423	14Z GEAR		01
13	0503010009	RETAINER 00573-B		01
14	0581016237	GLOVE		01

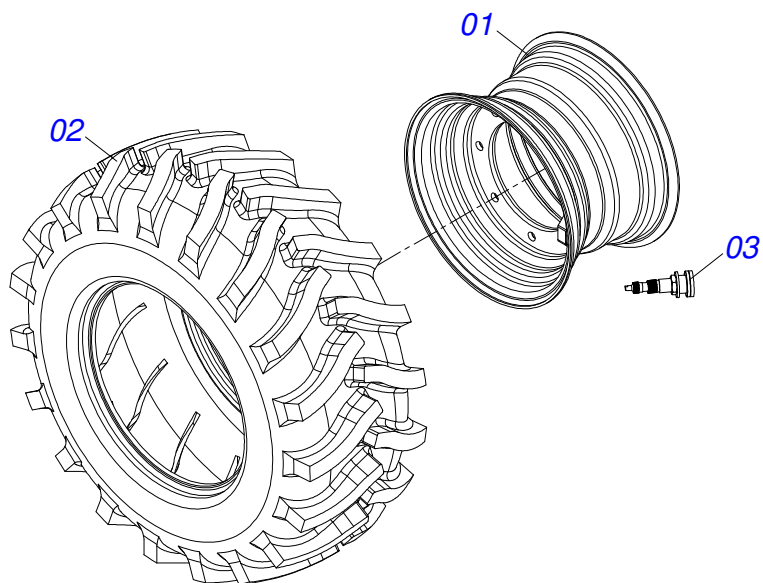

Item	Code	Description	See page	QT
01	0503062716	WHEEL		01
02	0503019109	TIRE 16.0 / 70-20		01
03	0503013999	VALVE		01

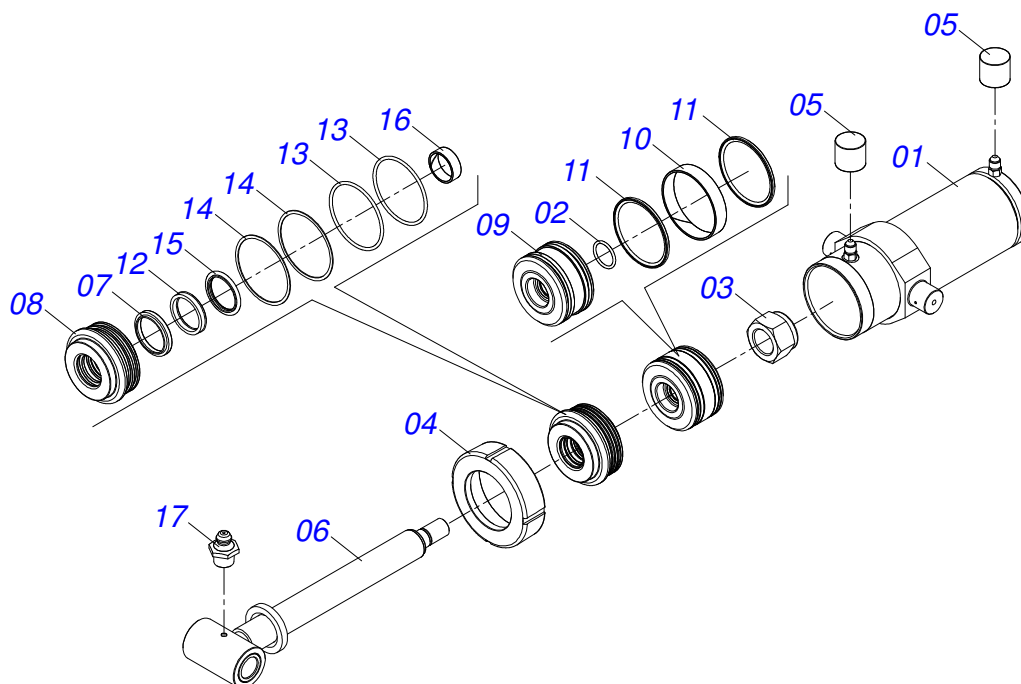


Item	Code	Description	See page	QT
01	0521068420	CASE 127,00 X 370		01
02	0503010345	2-218 N 3006-9B O'RING		01
03	0503010817	1.1/4" SELF LOCKING NUT		01
04	0502010382	5" END CAP		01
05	0503030385	CYLINDER PLUG N-002		02
06	0521068422	HYDRAULIC CYLINDER EXTENSOR 50.80 X 513.5		01
07	0503010319	D-2125 SCRAPER		01
08	0581010353	RING SUPPORT		01
09	0581010354	PISTON		01
10	0503018150	RING GUIDE		01
11	0503018151	RING BS		02
12	0503018026	1870-2000-375 B GASKET		01
13	0503011453	O'RING		02
14	0503018152	O'RING		02
15	0503018024	RING BS		01
16	0503018025	RING GUIDE		01
17	0503010002	1800 GREASE FITTING		01

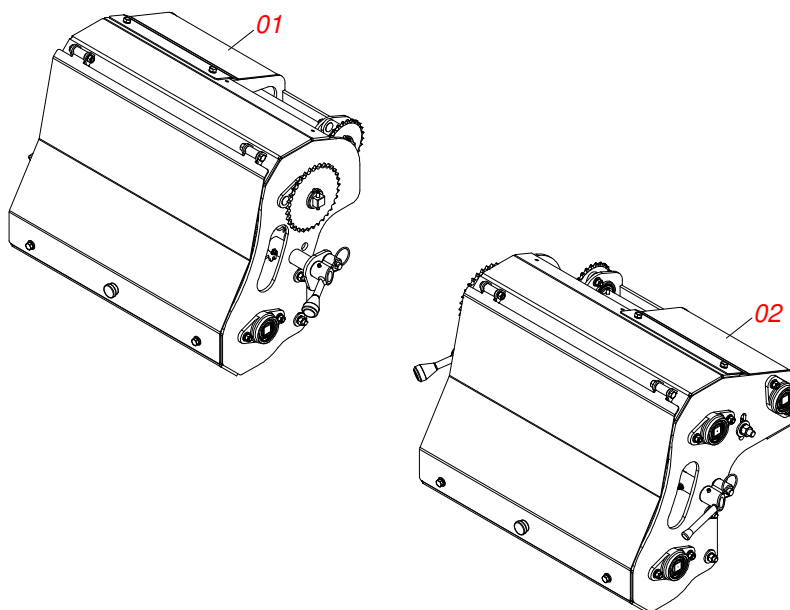

Item	Code	Description	See page	QT
01	0531050203	RIGHT EXCHANGE MOUNTED DOUBLE BEARING	20	01
02	0531050204	LEFT EXCHANGED MOUNTED DOUBLE BEARING	21	01

RIGHT EXCHANGE MOUNTED DOUBLE BEARING

0531050203

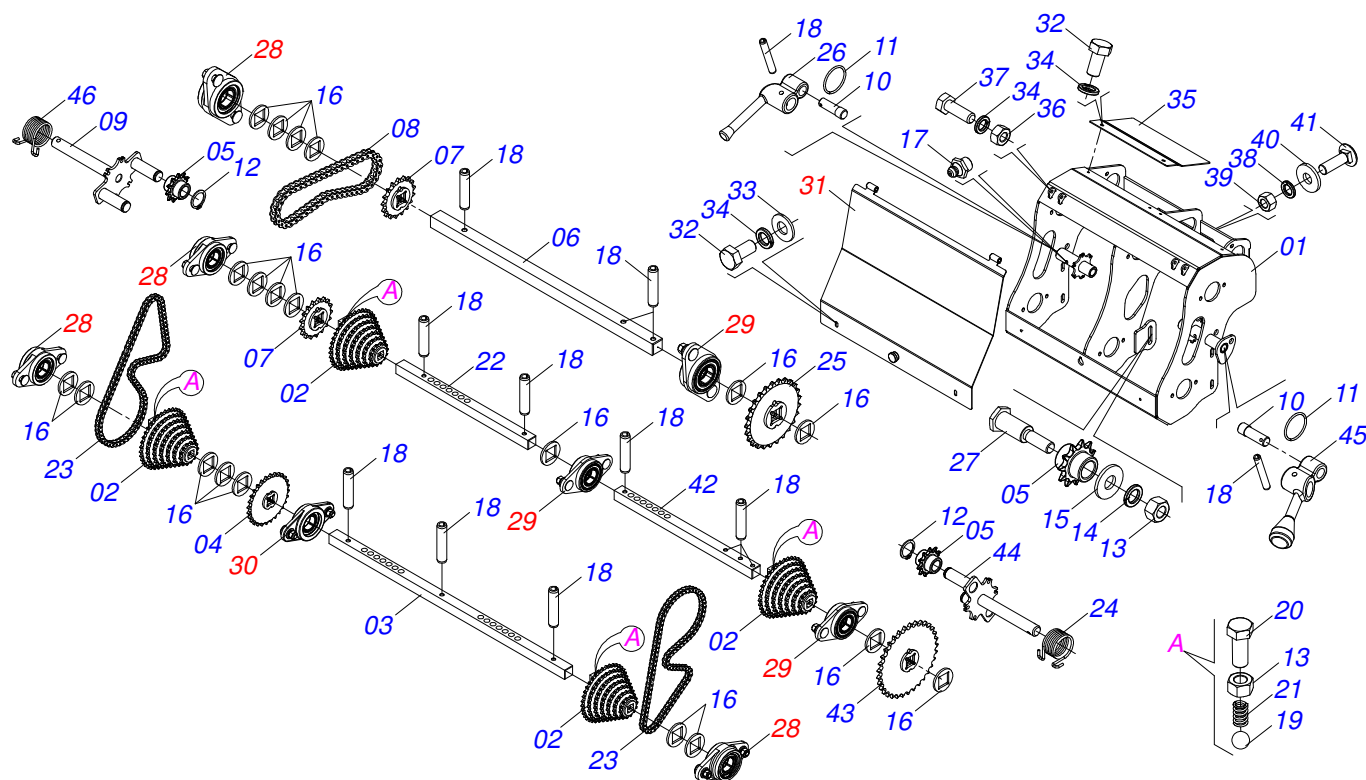

Item	Code	Description	See page	QT
01	0521066391	RIGHT EXCHANGE BOX		01
02	0511060396	DRIVE/DRIVEN AXLE CONE		04
03	0591016530	MOVED AXIS		01
04	0511064536	28Z GEAR		01
05	0503031805	11Z 1/2" GEAR		06
06	0591016529	INTERMEDIATE AXLE FERTILIZER		01
07	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
08	0503012713	40-1 CHAIN X 45 LINK + MEN		01
09	0511061794	CHAIN TENSIONER		01
10	0521012476	GEAR BOX LEVER AXLE		02
11	0503031369	LINK		02
12	0503010302	501019 SEAL RING		04
13	0503010060	1/2" NUT		06
14	0503010019	1/2" SPRING WASHER		02
15	0511017302	FLAT WASHER		02
16	0521018630	1.4" X SQUARE 0.8" WASHER		21
17	0503010002	1800 GREASE FITTING		02
18	0503010292	0.2" X 1.6" SPRING PIN		14
19	0503012389	1/2 BALL		04
20	0503010395	1/2" X 1-1/4" BOLT		04
21	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		03
22	0591016571	FERTILIZER MOVED AXLE		01
23	0503012204	40-1 CHAIN X 82 LINK + RED		02
24	0503031366	RIGHT TWISTED SPRING RECAMBIO		01
25	0511061822	25Z P0.5" GEAR SQUARE HOL		01
26	0502012669	LEVER TENSIONER REAR		01
27	0531019479	AXLE CHAIN GEAR		02
28	0531050189	BEARING DOUBLE EXCHANGE MOUNTED	22	04
29	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	23	03
30	0501056443	BEARING ASSY GEAR BOX	24	01
31	0531050191	MOUNTED EXCHANGE COVER	25	01


RIGHT EXCHANGE MOUNTED DOUBLE BEARING

0531050203

Item	Code	Description	See page	QT
32	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		04
33	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
34	0503010179	5/16" ZN SPRING WASHER		06
35	0581012407	SUPERIOR PROTECTION COVER		01
36	0503010337	5/16" NUT		02
37	0503010882	BOLT		02
38	0503010025	3/8" SPRING WASHER		06
39	0503010026	3/8" NUT		06
40	0501010984	FLAT WASHER		06
41	0501010942	3/8" X 1-1/4" BOLT		06
42	0581010938	DRIVEN AXLE SEED		01
43	0521062072	33Z GEAR		01
44	0521067191	CURRENT EXCHANGE STRETCHER		01
45	0502011758	REAR TENSIONER LEVER		01
46	0503031367	SPRING		01

LEFT EXCHANGED MOUNTED DOUBLE BEARING

0531050204

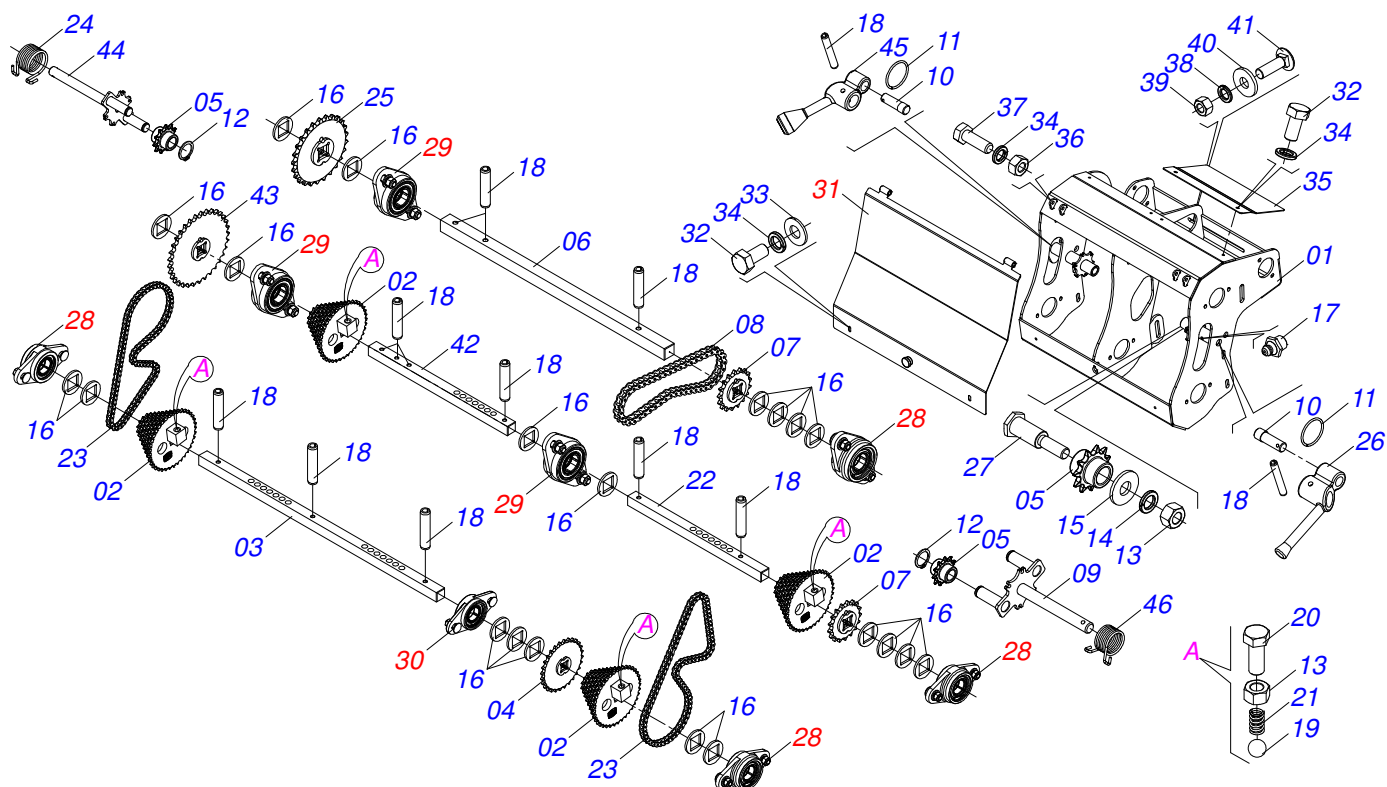


Item	Code	Description	See page	QT
01	0521066392	GEAR BOX LEFT		01
02	0511060396	DRIVE/DRIVEN AXLE CONE		04
03	0591016530	MOVED AXIS		01
04	0511064536	28Z GEAR		01
05	0503031805	11Z 1/2" GEAR		06
06	0591016529	INTERMEDIATE AXLE FERTILIZER		01
07	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
08	0503012713	40-1 CHAIN X 45 LINK + MEN		01
09	0511061794	CHAIN TENSIONER		01
10	0521012476	GEAR BOX LEVER AXLE		02
11	0503031369	LINK		02
12	0503010302	501019 SEAL RING		04
13	0503010060	1/2" NUT		06
14	0503010019	1/2" SPRING WASHER		02
15	0511017302	FLAT WASHER		02
16	0521018630	1.4" X SQUARE 0.8" WASHER		21
17	0503010002	1800 GREASE FITTING		02
18	0503010292	0.2" X 1.6" SPRING PIN		14
19	0503012389	1/2 BALL		04
20	0503010395	1/2" X 1-1/4" BOLT		04
21	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		03
22	0591016571	FERTILIZER MOVED AXLE		01
23	0503012204	40-1 CHAIN X 82 LINK + RED		02
24	0503031366	RIGHT TWISTED SPRING RECAMBIO		01
25	0511061822	25Z P0.5" GEAR SQUARE HOL		01
26	0502012669	LEVER TENSIONER REAR		01
27	0531019479	AXLE CHAIN GEAR		02
28	0531050189	BEARING DOUBLE EXCHANGE MOUNTED	22	04
29	0501056447	BEARING DOUBLE CENTRAL ASSY EXCHANGE	23	03
30	0501056443	BEARING ASSY GEAR BOX	24	01
31	0531050191	MOUNTED EXCHANGE COVER	25	01


LEFT EXCHANGED MOUNTED DOUBLE BEARING

0531050204


Item	Code	Description	See page	QT
32	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		04
33	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
34	0503010179	5/16" ZN SPRING WASHER		06
35	0581012407	SUPERIOR PROTECTION COVER		01
36	0503010337	5/16" NUT		02
37	0503010882	BOLT		02
38	0503010025	3/8" SPRING WASHER		06
39	0503010026	3/8" NUT		06
40	0501010984	FLAT WASHER		06
41	0501010942	3/8" X 1-1/4" BOLT		06
42	0581010938	DRIVEN AXLE SEED		01
43	0521062072	33Z GEAR		01
44	0521067191	CURRENT EXCHANGE STRETCHER		01
45	0502011758	REAR TENSIONER LEVER		01
46	0503031367	SPRING		01

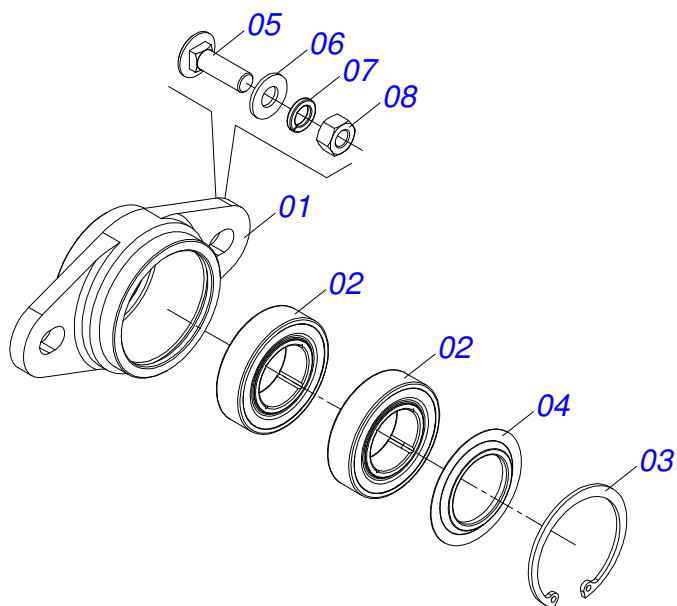


Item	Code	Description	See page	QT
01	0591016531	DOUBLE FERTILIZER BEARING BOX		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011105	SEAL RING		01
04	0503017022	RING		01
05	0503011953	5/16" X 1" BOLT		02
06	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
07	0503010179	5/16" ZN SPRING WASHER		02
08	0503010337	5/16" NUT		02

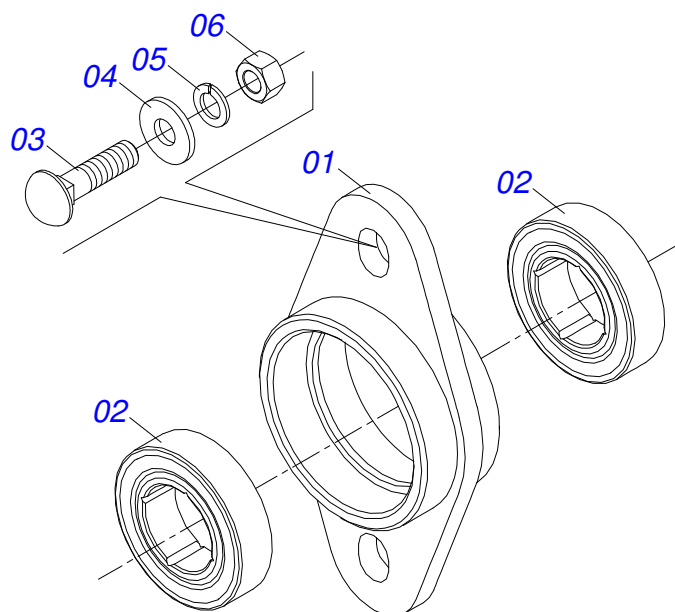


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
05	0503010179	5/16" ZN SPRING WASHER		02
06	0503010337	5/16" NUT		02

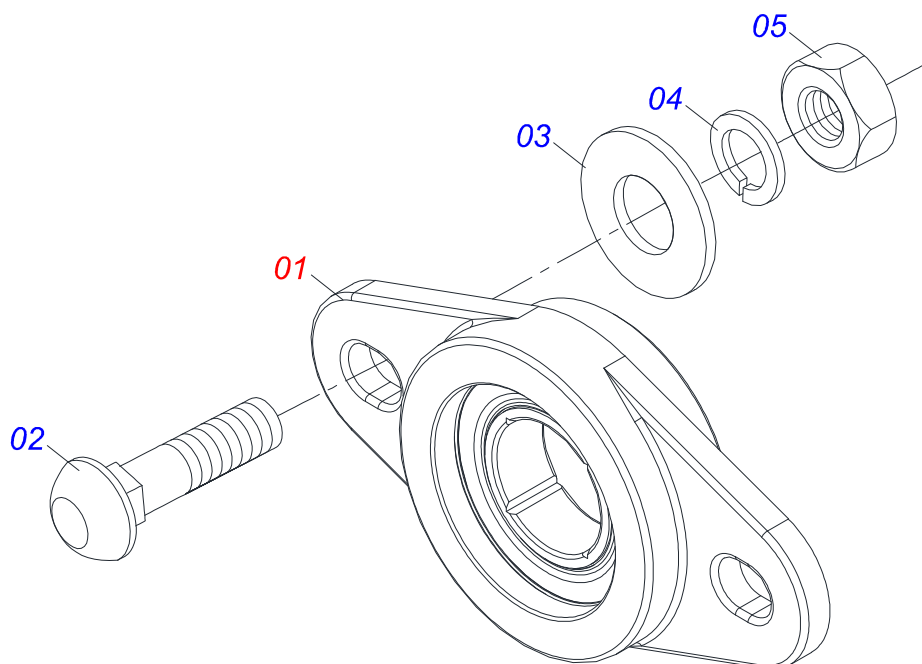


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH BALL BEARING		01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

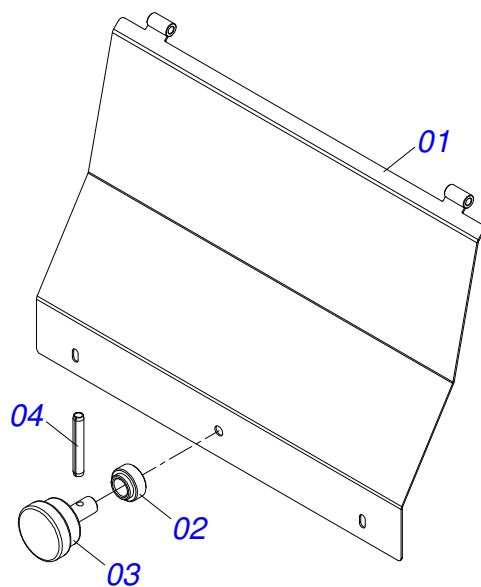


Item	Code	Description	See page	QT
01	0531061562	EXCHANGE COVER		01
02	0591016538	CHANGE COVER GLOVE		01
03	0591016537	CABLE		01
04	0503010838	0.1" X 0.8" SPRING PIN		01

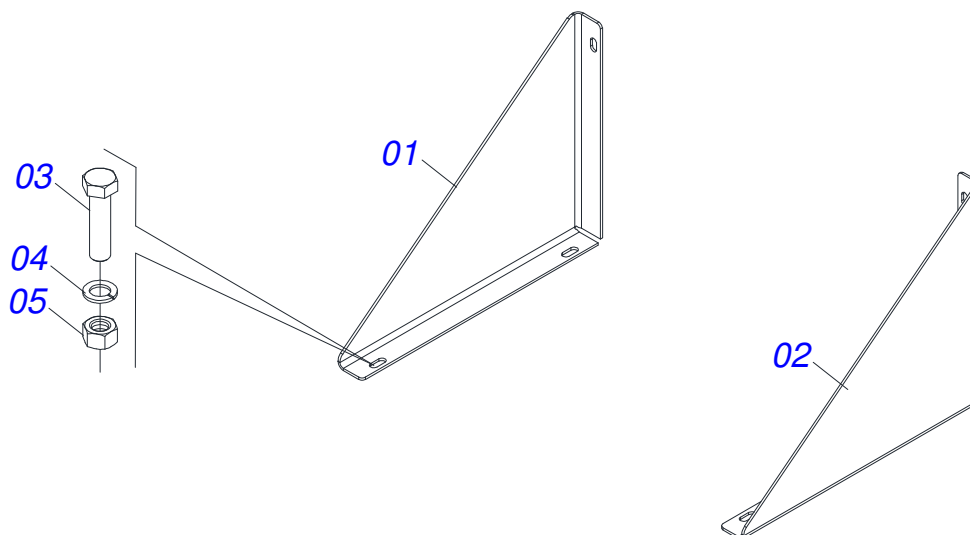


Item	Code	Description	See page	QT
001	0581012360	RIGHT SIDE COVER		01
002	0581012362	LEFT SIDE COVER		01
003	0503010363	5/16" X 1" BOLT		06
004	0501010694	8.5 X 18 X 1.5 FLAT WASHER		06
005	0503013816	5/16" LOCKNUT		06

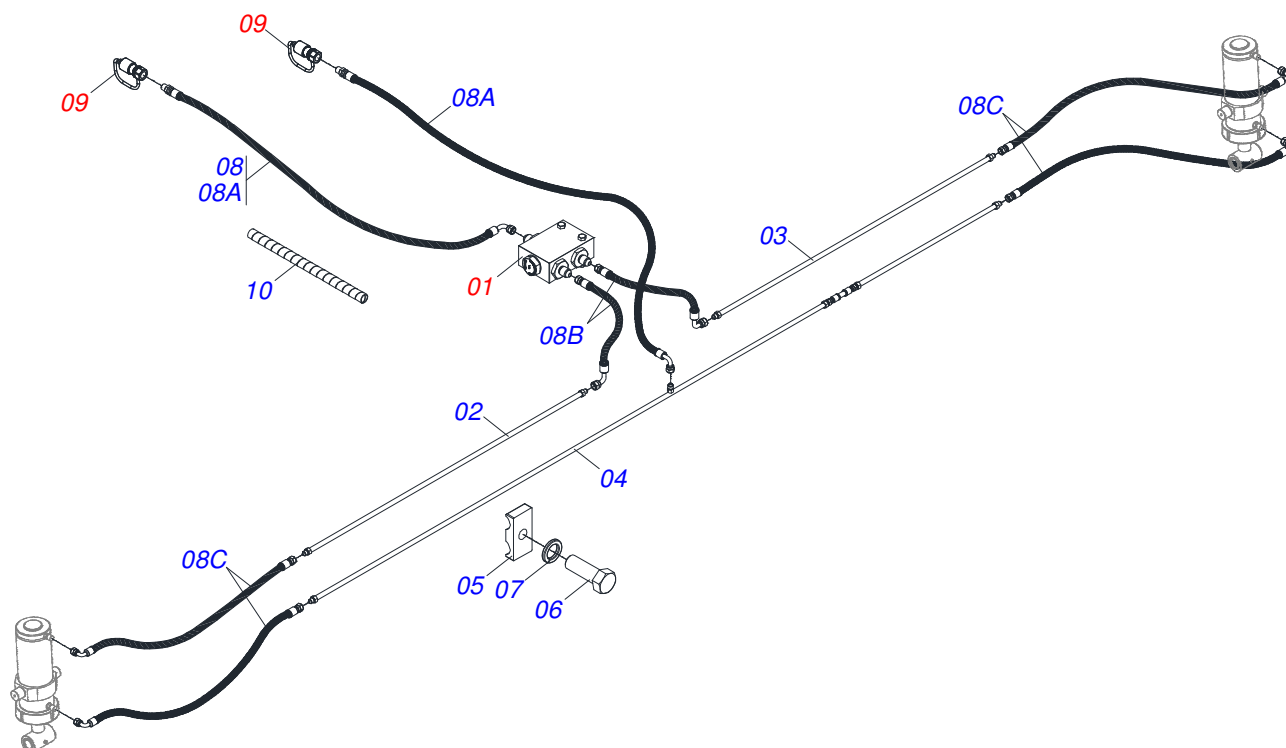


Item	Code	Description	See page	QT
001	0521051478	BLOCK WITH ASSY FLOW DIVIDER VALVE	28	01
002	0521068409	DUCT OIL DISTRIBUTOR 2614		01
003	0521068414	DUCT OIL DISTRIBUTOR 3344		01
004	0521068424	DUCT OIL DISTRIBUTOR 6174		01
005	0502010477	HOSE CLAMP		07
006	0503011102	BOLT 7/16 UNC X 1.1/4 C S G.5 ZN		07
007	0503010180	7/16" SPRING WASHER		07
008	0521052237	HOSE KIT		01
008A	0501080933	HOSE 1/2 X 4200 TR-TM		02
008B	0501080054	3/8" X 17" TR-TC HOSE ASSY		02
008C	0501081874	HOSE		04
009	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	29	02
010	0581010091	SPRING PROTECTION PLASTIC HOSE		01

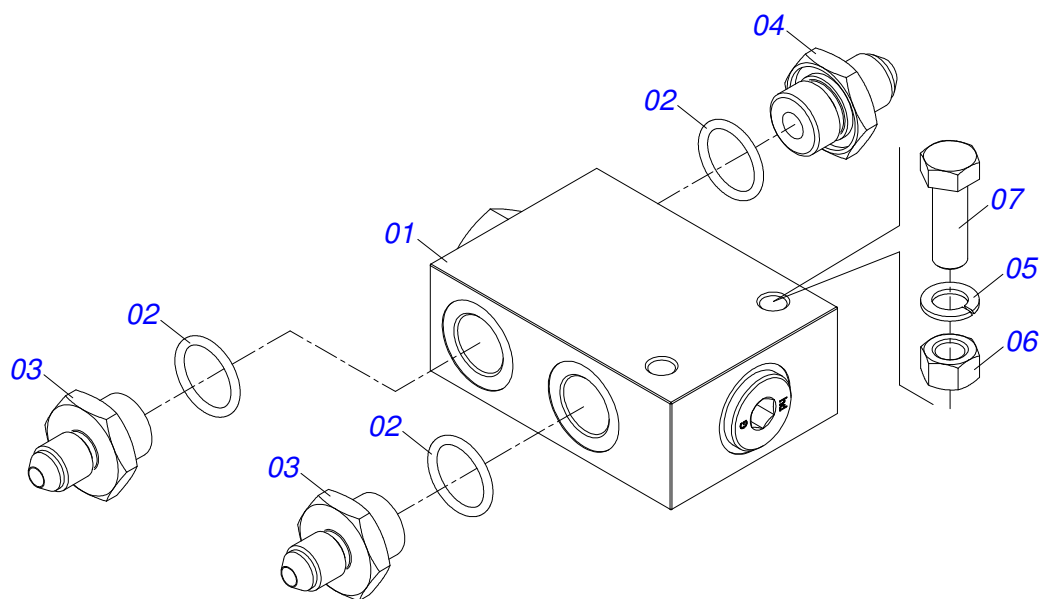


Item	Code	Description	See page	QT
01	0503062673	BLOCK FLOW DIVIDING VALVE ASSY		01
02	0503014724	2-215 N 3006-9B O'RING		03
03	0581014988	NIPLE R.3/4"UNF X		02
04	0581011416	7/8"NF UNF NIPPLE		01
05	0503010025	3/8" SPRING WASHER		02
06	0503010026	3/8" NUT		02
07	0503011141	3/8" X 2-3/4" BOLT		02

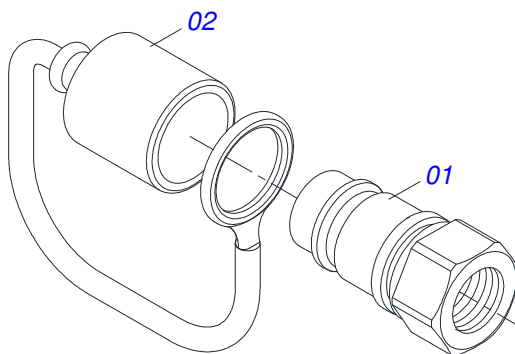


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

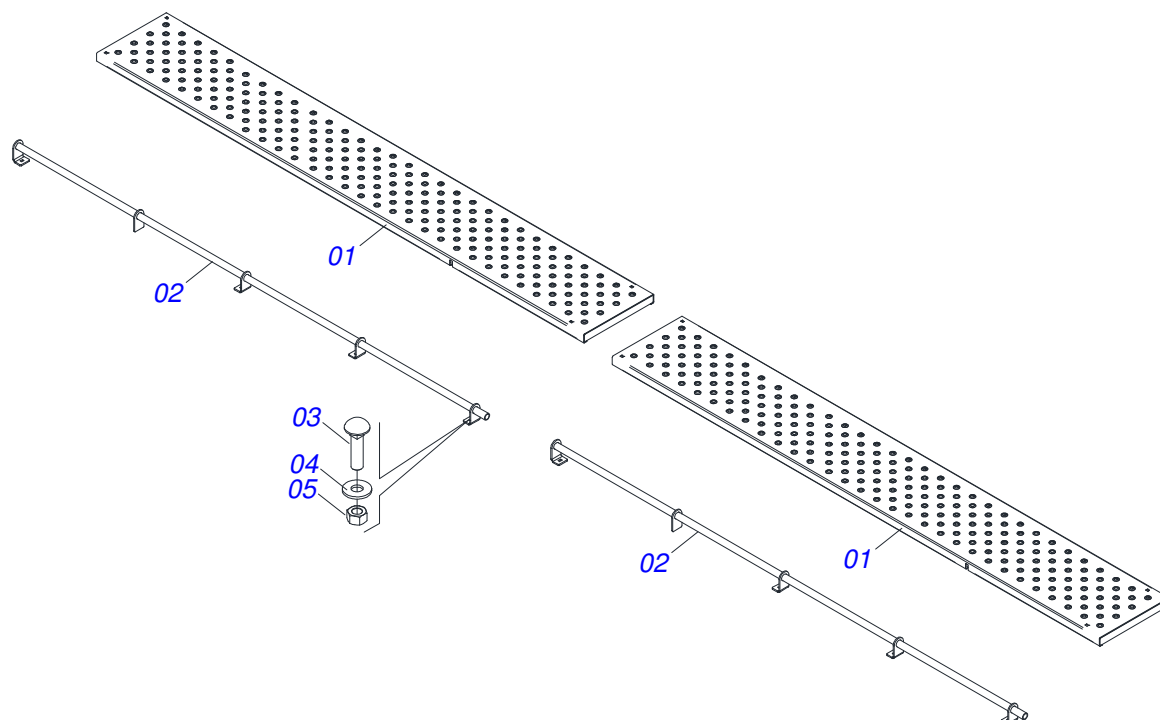


Item	Code	Description	See page	QT
001	0521068429	REAR PLATFORM		02
002	0521068405	INTERNAL PROTECTION PLATFORM		02
003	0501011755	3/8" X 3" BOLT		08
004	0501010984	FLAT WASHER		08
005	0503010026	3/8" NUT		08

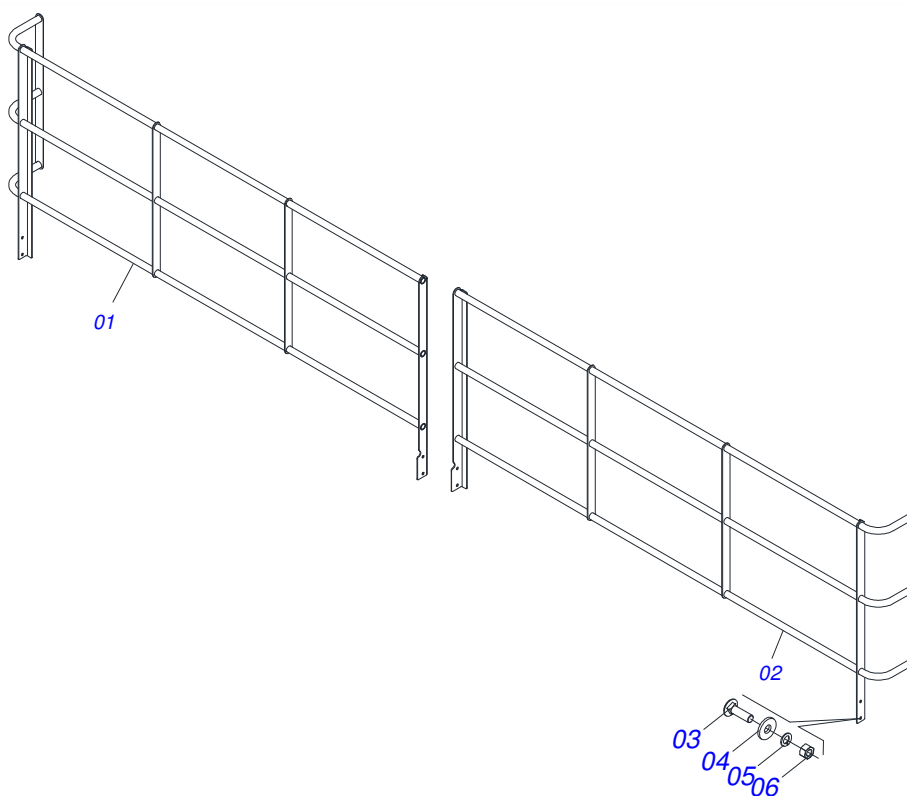


Item	Code	Description	See page	QT
001	0521068428	LEFT HANDRAIL		01
002	0521068427	RIGHT HANDRAIL		01
003	0501010942	3/8" X 1-1/4" BOLT		08
004	0501010984	FLAT WASHER		08
005	0503010025	3/8" SPRING WASHER		08
006	0503010026	3/8" NUT		08

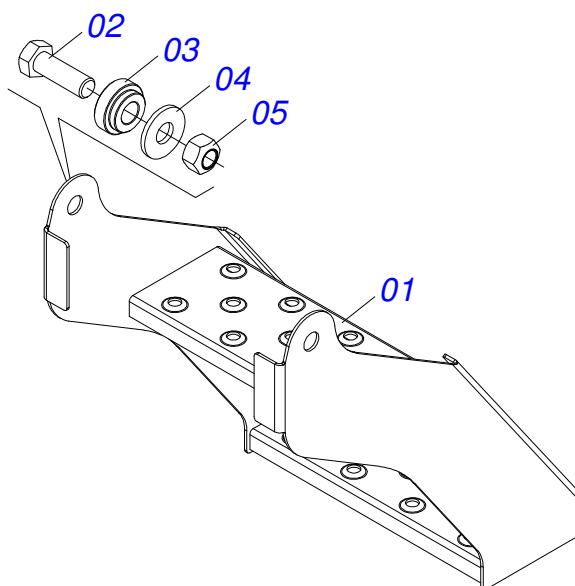


Item	Code	Description	See page	QT
01	0521066399	REAR LADDER		01
02	0503010920	1/2" X 1.1/2" BOLT		02
03	0581012361	LADDER GLOVE		02
04	0511017302	FLAT WASHER		02
05	0503011336	1/2" HEX SELF ADJUSTING NUT		02

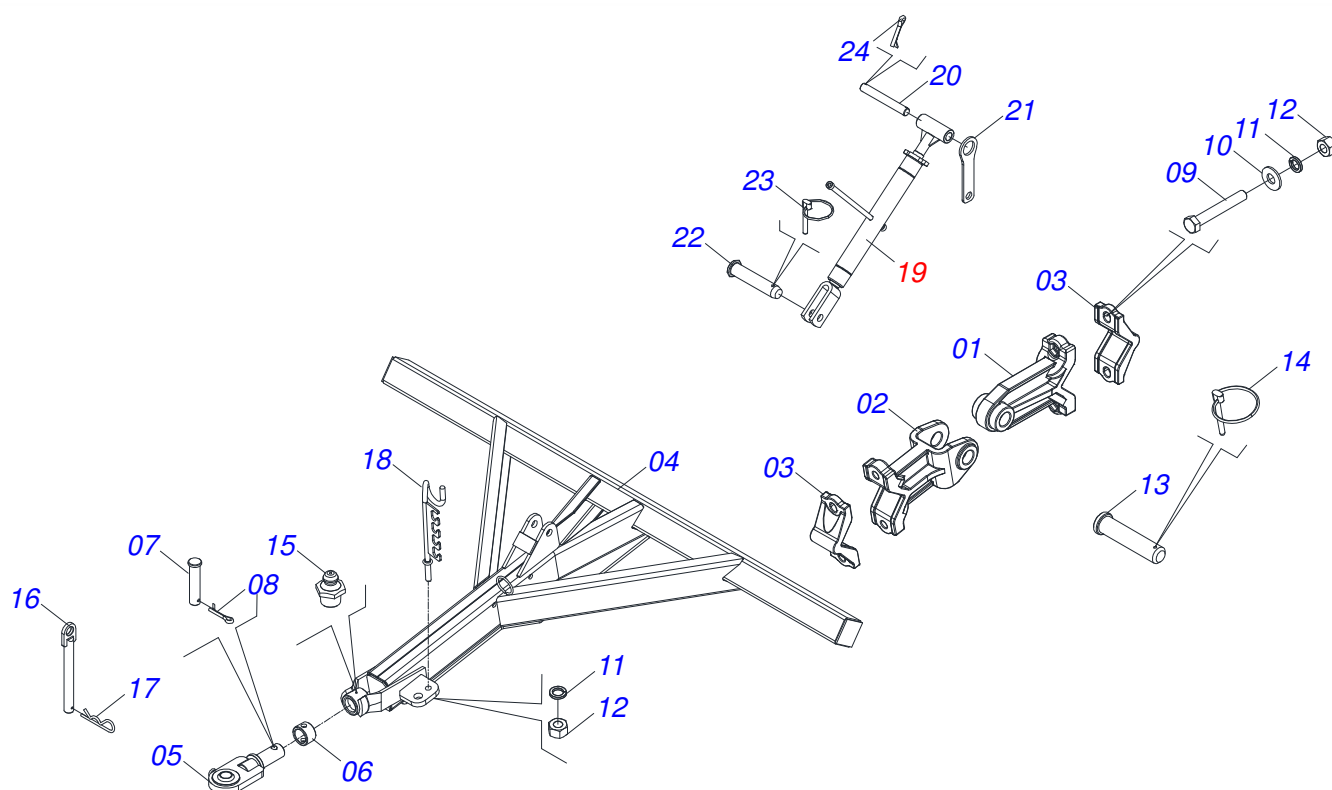


Item	Code	Description	See page	QT
001	1902012329	REAR SUPPORT FIXING HEADER		04
002	1902012328	FIXED FRONT SUPPORT HEADER		04
003	1902012330	FIXER SUPPORT ARTICULATED		08
004	0521068415	DRAWBAR		01
005	0502040556	HITCH TURNER		01
006	0521010681	BUSHING COUPLING BODY		01
007	0521010639	COUPLING SHAFT		01
008	0503010571	1/4" X 1.1/2 COTTERPIN		01
009	0503011084	3/4" X 5" BOLT		16
010	0501010322	FLAT WASHER		16
011	0503010023	3/4" SPRING WASHER		17
012	0503010014	3/4" NUT		17
013	0531012336	1.4" X 5.35" COUPLING SHAFT		04
014	0503030119	LOCK PIN		04
015	0503010002	1800 GREASE FITTING		01
016	0501068989	COUPLING SHAFT		01
017	0503031035	HAIR PIN		01
018	0501060409	HOSE SOPPORT ASSY		01
019	0511057875	ASSY HEADER EXTENSOR	34	01
020	0521017366	1.1" X 7.7" AXLE		01
021	0581010096	EXTERNAL LOCK DRAWBAR		01
022	0521010580	COUPLING SHAFT		01
023	0503030085	LOCK PIN		01
024	0503010523	1/4" X 2" COTTERPIN		02

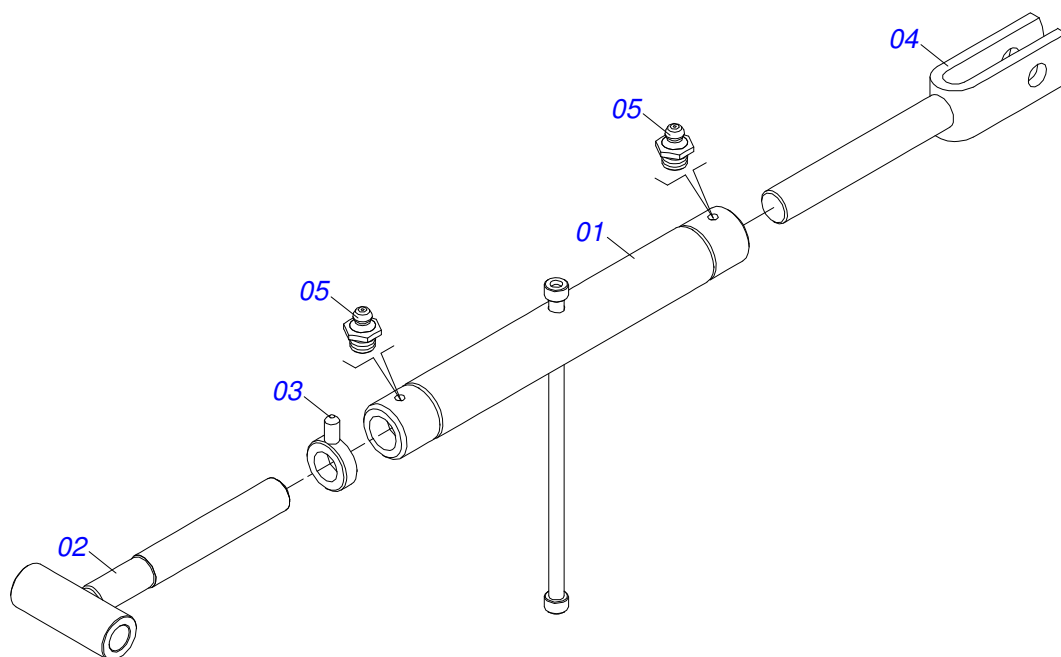


Item	Code	Description	See page	QT
01	0501067353	508 PST3 TURNBUCKLE		01
02	0511064525	RIGHT TURNBUCKLE		01
03	0501061056	RH LOCKNUT WITH HANDLER		01
04	0511062888	LH TURNBUCKLE		01
05	0503010002	1800 GREASE FITTING		02

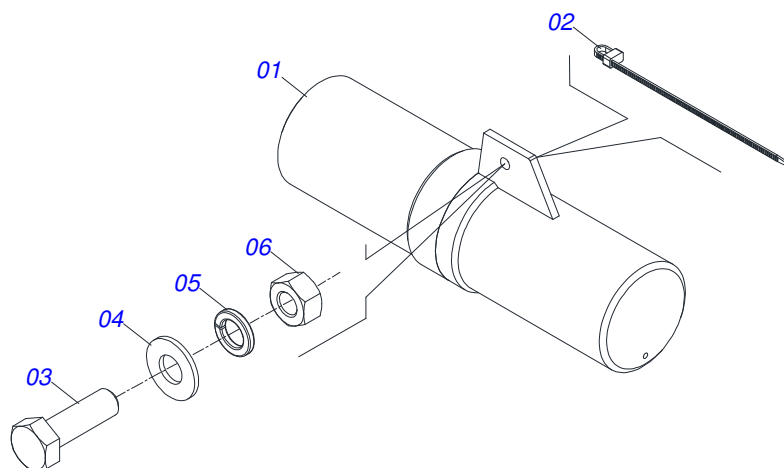


Item	Code	Description	See page	QT
01	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
02	0503010267	NYLON CLAMP		01
03	0503010363	5/16" X 1" BOLT		01
04	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
05	0503010179	5/16" ZN SPRING WASHER		01
06	0503010337	5/16" NUT		01

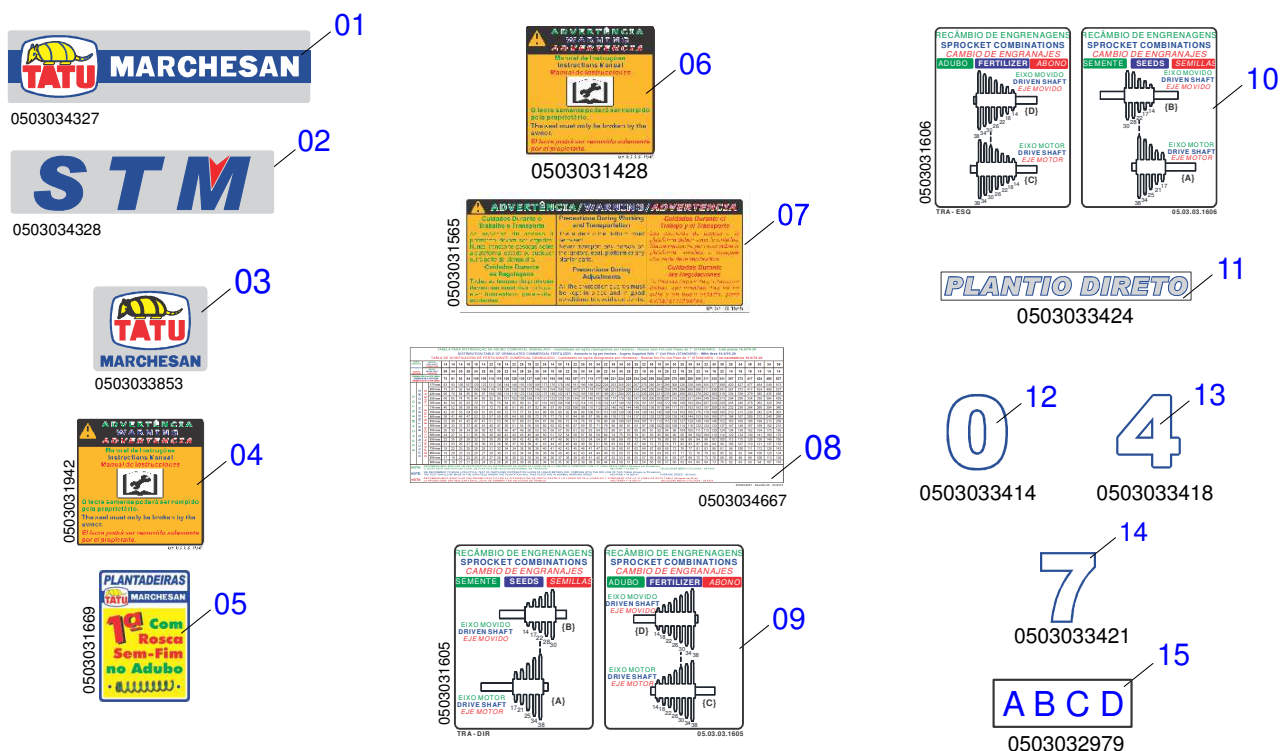

Item	Code	Description	See page	QT
001	0503034327	ADHESIVE LABEL		04
002	0503034328	ADHESIVE LABEL		04
003	0503033853	ADHESIVE LABEL		02
004	0503031942	ADHESIVE LABEL		01
005	0503031669	ADHESIVE LABEL		01
006	0503031428	READ MANUAL DECAL		01
007	0503031565	ADHESIVE LABEL CARE		02
008	0503034667	ADHESIVE LABEL TABLE FERTILIZER		02
009	0503031605	ADHESIVE LABEL		01
010	0503031606	ADHESIVE LABEL		01
011	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
012	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING		04
013	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
014	0503033421	ADHESIVE LABEL 7 NUMBER FOR PLANTING		02
015	0503032979	ADHESIVE LABEL LETTERS A B C D		02

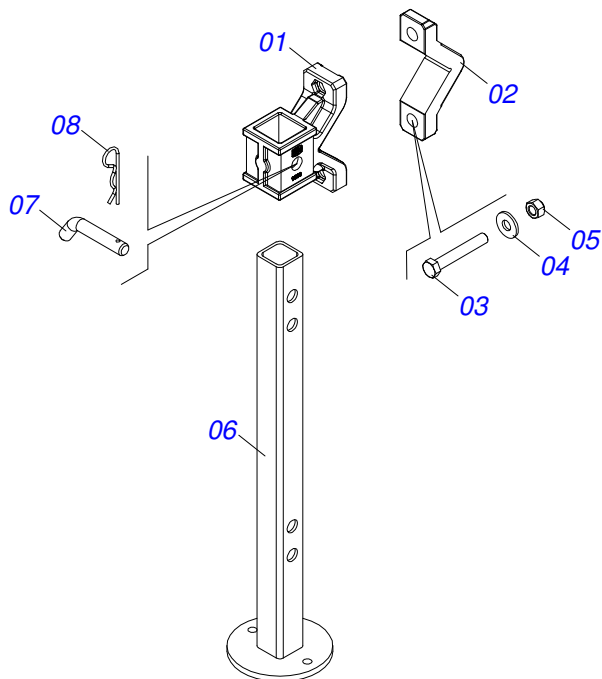


Item	Code	Description	See page	QT
001	0502011530	SUPPORT		02
002	0502010175	HITCH CLAMP		02
003	0501011543	5/8" X 4" BOLT		04
004	0503010027	5/8" SPRING WASHER		04
005	0503010013	5/8" NUT		04
006	0521069978	PLOUGH SUPPORT 815		02
007	0501011075	PIN		02
008	0503030012	HAIR PIN		02

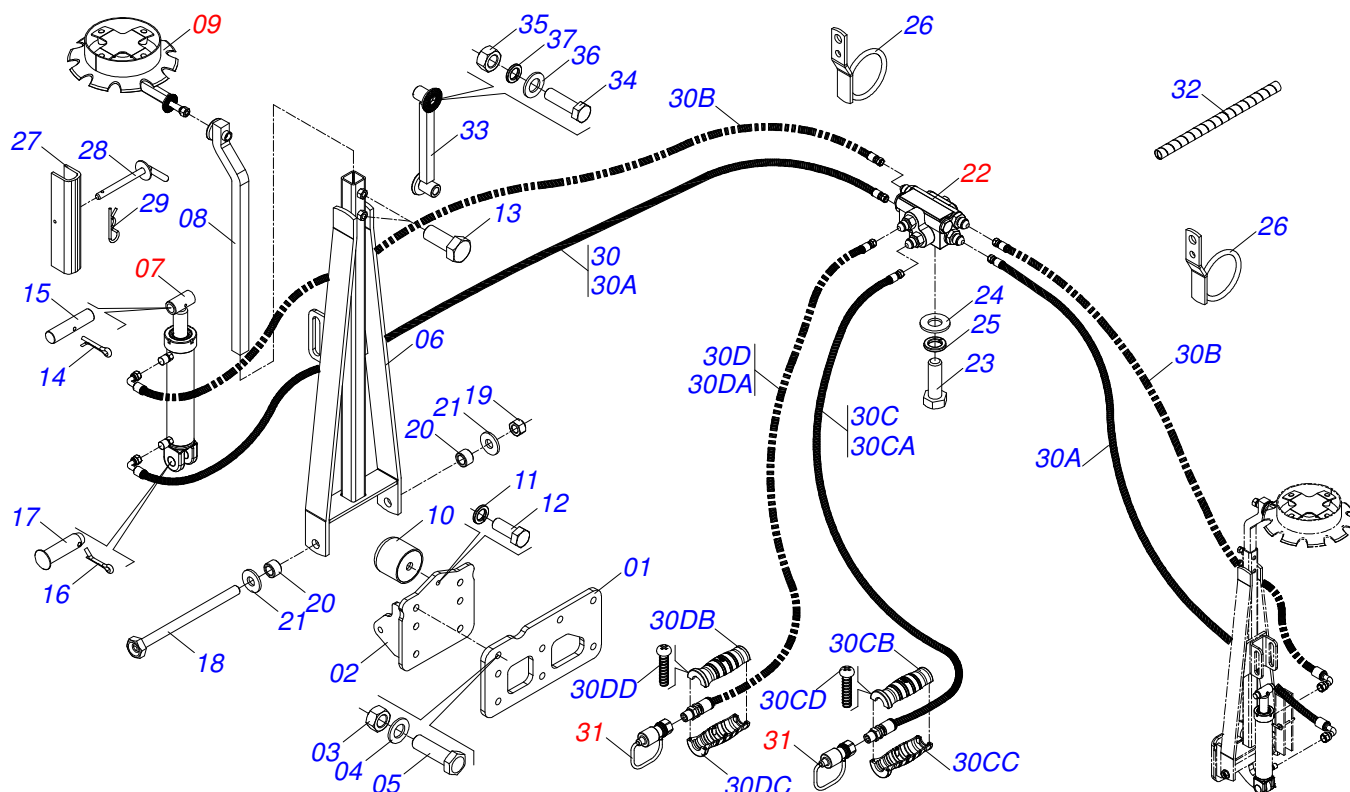


Item	Code	Description	See page	QT
01	0591015055	FIXING LINE MARKER PLATE		02
02	0531061272	ARM MARKER LINE SUPPORT		02
03	0503011255	3/4" LOCK NUT		15
04	0511017305	FLAT WASHER		15
05	0501010125	3/4" X 2-1/2" BOLT		15
06	0511061811	ROW MARKER ARM		02
07	0511058449	HYDRAULIC CYLINDER	39	02
08	0501066949	1235 TURNBUCKLE		02
09	0501054886	ROW MARKER DISC	40	02
10	0503011070	BEATER		02
11	0503010019	1/2" SPRING WASHER		02
12	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
13	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		04
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010571	1/4" X 1.1/2 COTTERPIN		02
17	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
18	0521061655	BOLT 5/8 UNC X 320 MM		02
19	0503012412	5/8 UNC SELF LOCKING NUT		02
20	0521010479	SLEEVE ARTICULATION		04
21	0501012140	FLAT WASHER		04
22	0501054649	SEQUENTIAL VALVE ASSY	41	01
23	0503010371	5/16" X 1" BOLT		02
24	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
25	0503010179	5/16" ZN SPRING WASHER		02
26	0511063282	HOSE HOLDER		02
27	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
28	0501068994	0.3" X 3.1" LOCK PIN		02
29	0503030168	HAIR PIN		02
30	0521059132	HOSE MARKER HYDRAULIC KIT		01
30A	0501081748	HOSE		02


Item	Code	Description	See page	QT
30B	0501081726	HOSE		02
30C	0521052602	3/8 X 3700 TR-TM HOSE (PURPLE / RED)		01
30CA	0501080528	3/8 X 3700 TR-TM HOSE		01
30CB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
30CC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
30CD	0503018952	PLASTIC BOLT		06
30D	0521052603	3/8 X 3700 TR-TM HOSE (PURPLE / BLUE)		01
30DA	0501080528	3/8 X 3700 TR-TM HOSE		01
30DB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
30DC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
30DD	0503018952	PLASTIC BOLT		06
31	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	29	02
32	0571017773	SPRING PROTECTION PLASTIC HOSE 3/4		02
33	0521063905	EXTENSOR 300		02
34	0503011198	C3/4" X 6" SCREW		02
35	0503010014	3/4" NUT		02
36	0501010322	FLAT WASHER		02
37	0503010023	3/4" SPRING WASHER		02

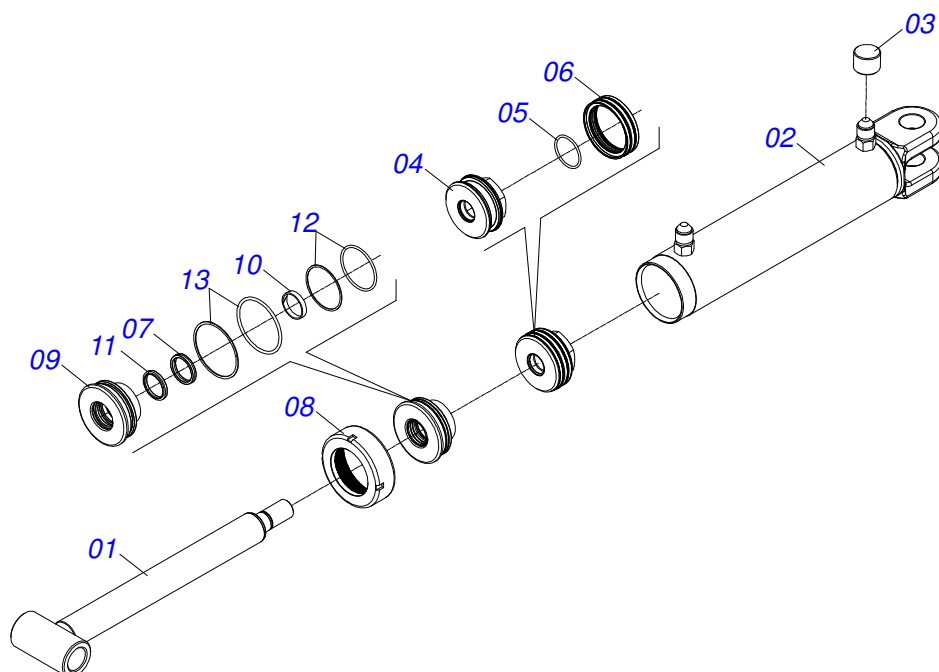


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02

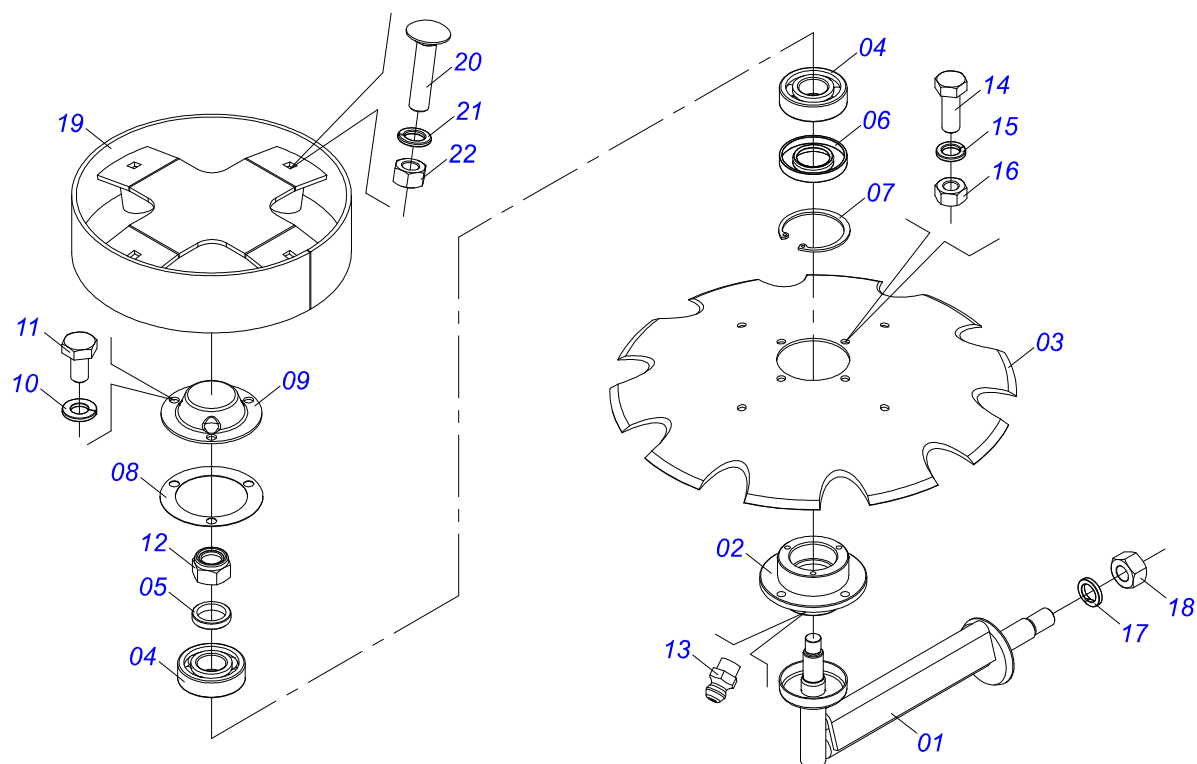


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023094	DR16X3 C36AFPAFR73+4FR+4FR D474 10R		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04
17	0503810023	PRESSURE WASHER		01
18	0503010014	3/4" NUT		01
19	0501069226	ROW MARKER ROD STOP		01
20	0501011778	3/8" X 2-1/2" BOLT		04
21	0503011443	3/8" SPRING WASHER		04
22	0503010026	3/8" NUT		04

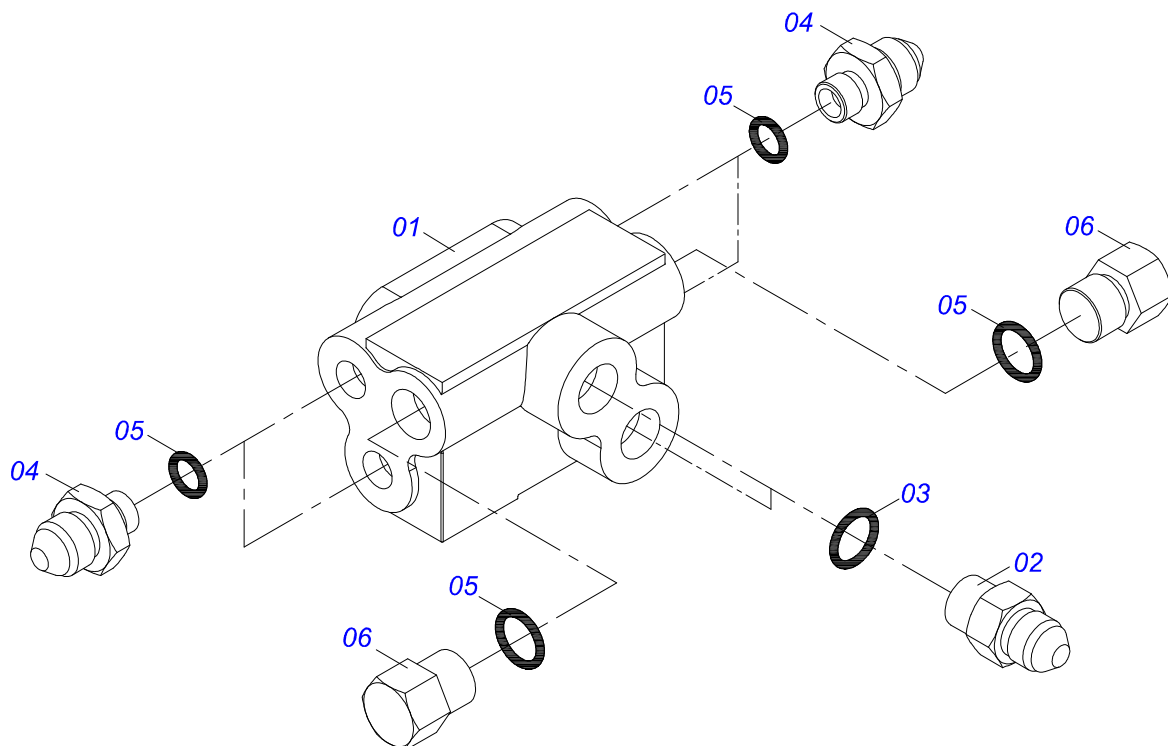

Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

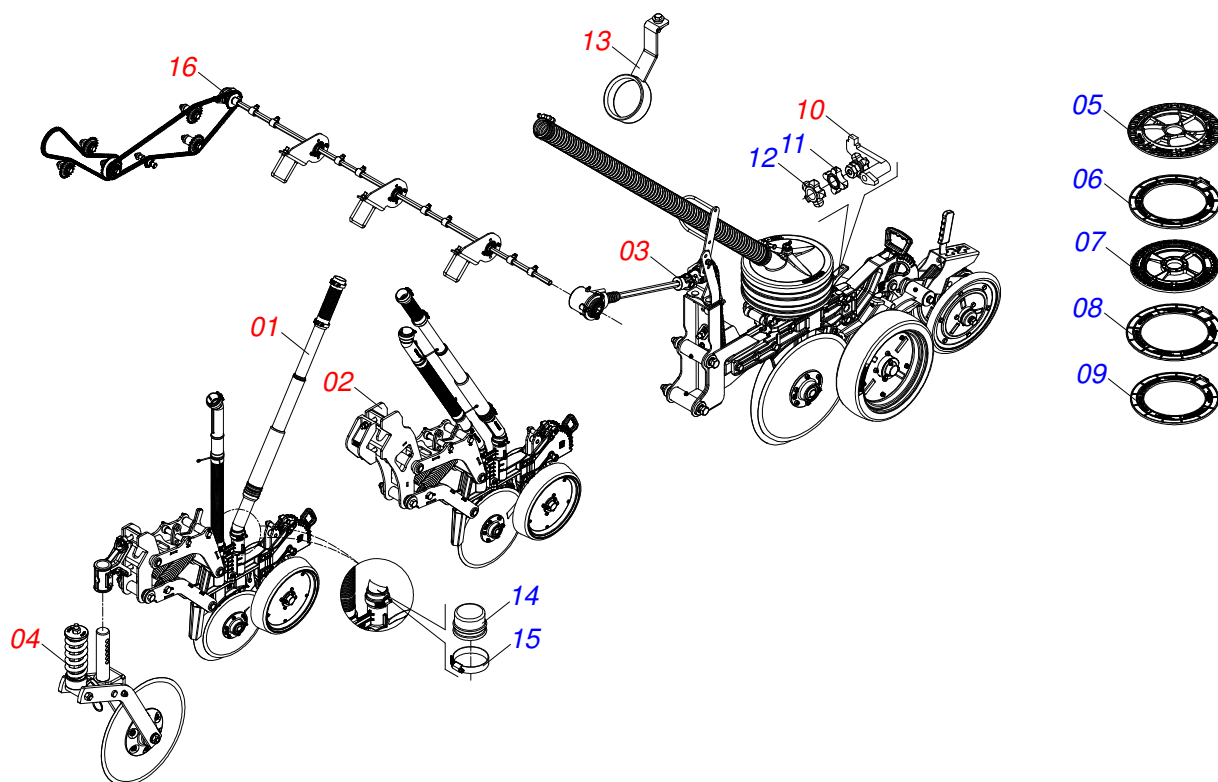


Item	Code	Description	See page	QT
01	0531050535	RIGHT FRONT LINE SEED	43	11
02	0521056470	LEFT BACK LINE	44	12
03	0511059658	SEED ROW OPTIONAL	53	01
04	0521059096	CUTTING DISC ASSY	73	01
05	0503016204	CORN DISK 12 ORANGE		01
06	0503016214	RING CORN (APOLLO740)		01
07	0503016218	DISC OF SOYBEAN		01
08	0503016220	RING TO SOYBEANS (APOLLO 745)		01
09	0503016221	RING TO SOYBEANS (APOLLO 571)		01
10	0501050120	LARGER WALKING BEAM ASSY	76	01
11	0503030558	PULLEY 4Z CORN PLASTIC		01
12	0503033672	NOZZLE WITHOUT TITANIUM		01
13	0521059102	DRIVER GUIDE SEED 2	77	01
14	0503031436	AIR DITRIBUTOR PUMP		23
15	0503010246	CLAMP		23
16	0909095507	REAR TRANSMISSION ASSY	78	01

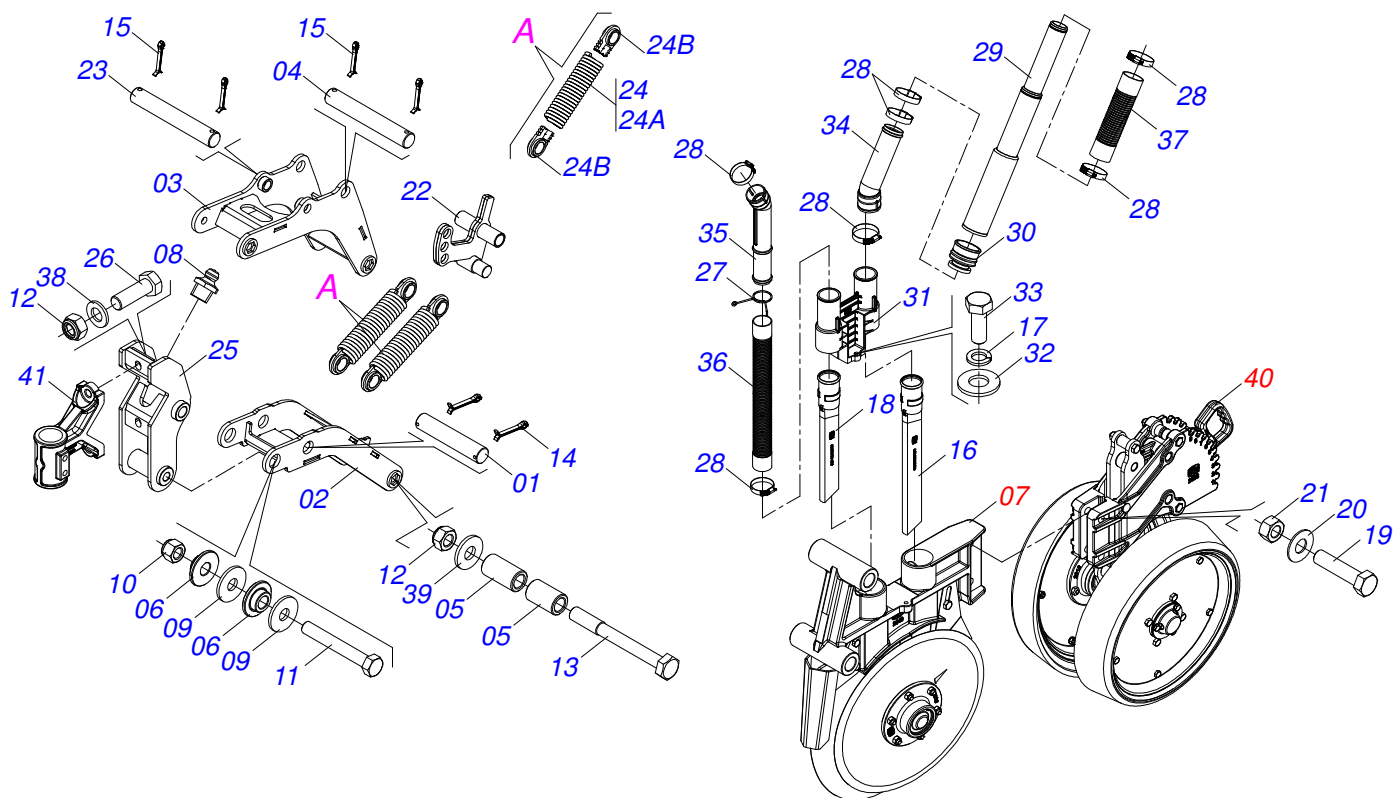


Item	Code	Description	See page	QT
01	0581012349	PIVOT SHAFT		01
02	0521066396	PANTOGRAPH LOWER FRONT		01
03	0521066395	PANTOGRAPHY		01
04	0581010136	AXLE		01
05	0581010135	SLEEVE		06
06	0571013598	SLEEVE SPACER		02
07	0511057874	DDD 13 X 15 RIGHT HUB LOW	45	01
08	0503010002	1800 GREASE FITTING		01
09	0511017232	FLAT WASHER		02
10	0503011075	3/4" UNC NUT		01
11	0501013475	3/4 UNC X 7.1/2 C S G.5 ZNBOLT		01
12	0503013389	5/8" SELF LOCKING NUT		05
13	0503010795	5/8" X 7" BOLT		03
14	0503010131	3/16" X 1-1/2" COTTERPIN		02
15	0503010577	3/16" X 1-1/4" COTTERPIN		04
16	0503030520	SEED SOCKET		01
17	0503010179	5/16" ZN SPRING WASHER		02
18	0503030483	FERTILIZER SOCKET		01
19	0503010479	1/2" X 3" BOLT		02
20	0501013519	FLAT WASHER		02
21	0503011336	1/2" HEX SELF ADJUSTING NUT		02
22	0521067184	ROCKER		01
23	0581012348	AXLE		01
24	0511059653	SPRING		02
24A	0503034397	TRACTION SPRING		01
24B	0521067185	EAR GEAR SPRING		02
25	0521067161	PANTOGRAPHIC SUPPORT		01
26	0501011027	5/8" X 3-3/4" BOLT		02
27	0503031076	2" HOSE CLAMP		01
28	0503010246	CLAMP		07
29	0503061799	TELESCOPIC		01

Item	Code	Description	See page	QT
30	0503015268	BALANCING FERTILIZER / SEED		01
31	0503034469	NOZZLE SUPPORT		01
32	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
33	0503010365	NUT		02
34	0581014102	CURVE DRIVER 160		01
35	0503034470	CURVE DRIVER 260		01
36	0503031145	2" X 2" X 20" HOSE		01
37	0503030645	7 X 2 X 225 HOSE		01
38	0501010301	FLAT WASHER		02
39	0501012140	FLAT WASHER		03
40	0521058229	CONTROL DEPTH	49	01
41	0502012719	FIXER SUPPORT BUSHING		01

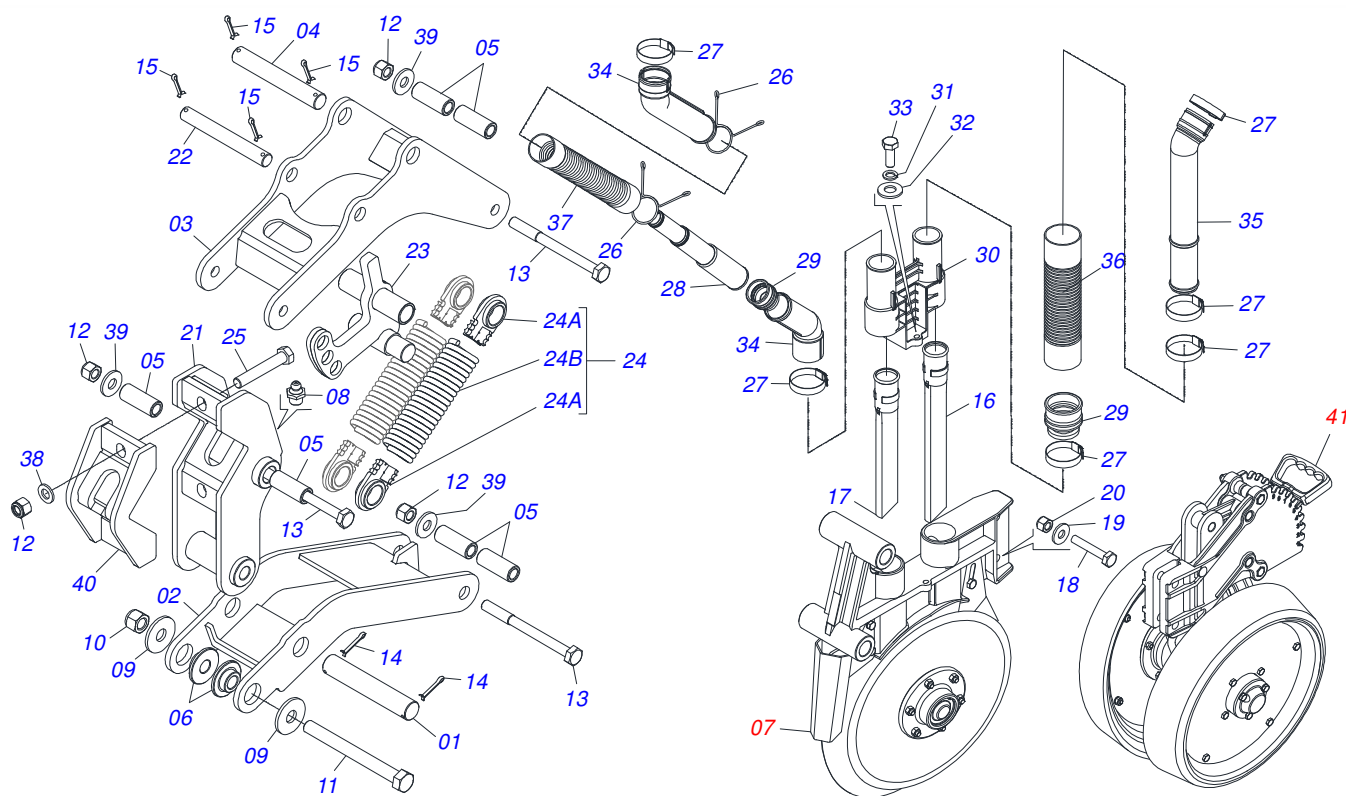


Item	Code	Description	See page	QT
001	0581012349	PIVOT SHAFT		01
002	0521066396	PANTOGRAPH LOWER FRONT		01
003	0521066395	PANTOGRAPHY		01
004	0581010136	AXLE		01
005	0581010135	SLEEVE		06
006	0571013598	SLEEVE SPACER		02
007	0511057873	DDD 13 X 15 LEFT HUB LOW	46	01
008	0503010002	1800 GREASE FITTING		01
009	0511017232	FLAT WASHER		02
010	0503011075	3/4" UNC NUT		01
011	0501013475	3/4 UNC X 7.1/2 C S G.5 ZNBOLT		01
012	0503013389	5/8" SELF LOCKING NUT		05
013	0503010795	5/8" X 7" BOLT		03
014	0503010131	3/16" X 1-1/2" COTTERPIN		02
015	0503010577	3/16" X 1-1/4" COTTERPIN		04
016	0503030520	SEED SOCKET		01
017	0503030483	FERTILIZER SOCKET		01
018	0503010479	1/2" X 3" BOLT		02
019	0501013519	FLAT WASHER		02
020	0503011336	1/2" HEX SELF ADJUSTING NUT		02
021	0521067160	REAR PANTOGRAPHIC SUPPORT		01
022	0581012348	AXLE		01
023	0521067184	ROCKER		01
024	0511059653	SPRING		02
024A	0503034397	TRACTION SPRING		01
024B	0521067185	EAR GEAR SPRING		02
025	0501011027	5/8" X 3-3/4" BOLT		02
026	0503031076	2" HOSE CLAMP		02
027	0503010246	CLAMP		07
028	0503061799	TELESCOPIC		01
029	0503015268	BALANCING FERTILIZER / SEED		01


Item	Code	Description	See page	QT
030	0503034469	NOZZLE SUPPORT		01
031	0503010179	5/16" ZN SPRING WASHER		02
032	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
033	0503010365	NUT		02
034	0581014102	CURVE DRIVER 160		02
035	0503034470	CURVE DRIVER 260		01
036	0503031145	2" X 2" X 20" HOSE		01
037	0503030645	7 X 2 X 225 HOSE		01
038	0501010301	FLAT WASHER		02
039	0501012140	FLAT WASHER		03
040	0502012889	FIXER LOCK LINE		01
041	0521058229	CONTROL DEPTH	49	01

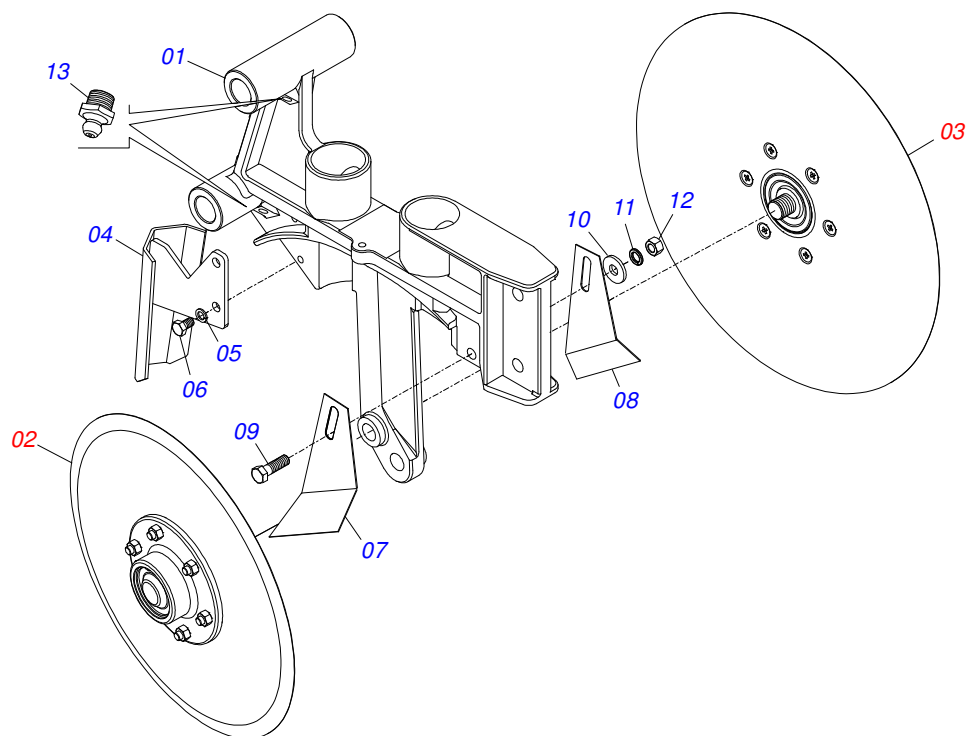


Item	Code	Description	See page	QT
01	0502012840	SUPPORT DDD RIGHT		01
02	0511056612	LOW LEFT HUB WITH DISK 13	47	01
03	0511056611	RIGHT LOW CUBE WITH DISK 15	48	01
04	0521065163	FRONT PROTECTION DDD RIGHT		01
05	0503010179	5/16" ZN SPRING WASHER		02
06	0503010011	5/16" X 1/2" BOLT		02
07	0531013569	LEFT DOUBLE-DISC SCRAPER		01
08	0531013568	RIGHT DOUBLE DISC SCRAPER		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0501010984	FLAT WASHER		01
11	0503011443	3/8" SPRING WASHER		01
12	0503010026	3/8" NUT		01
13	0503010002	1800 GREASE FITTING		02

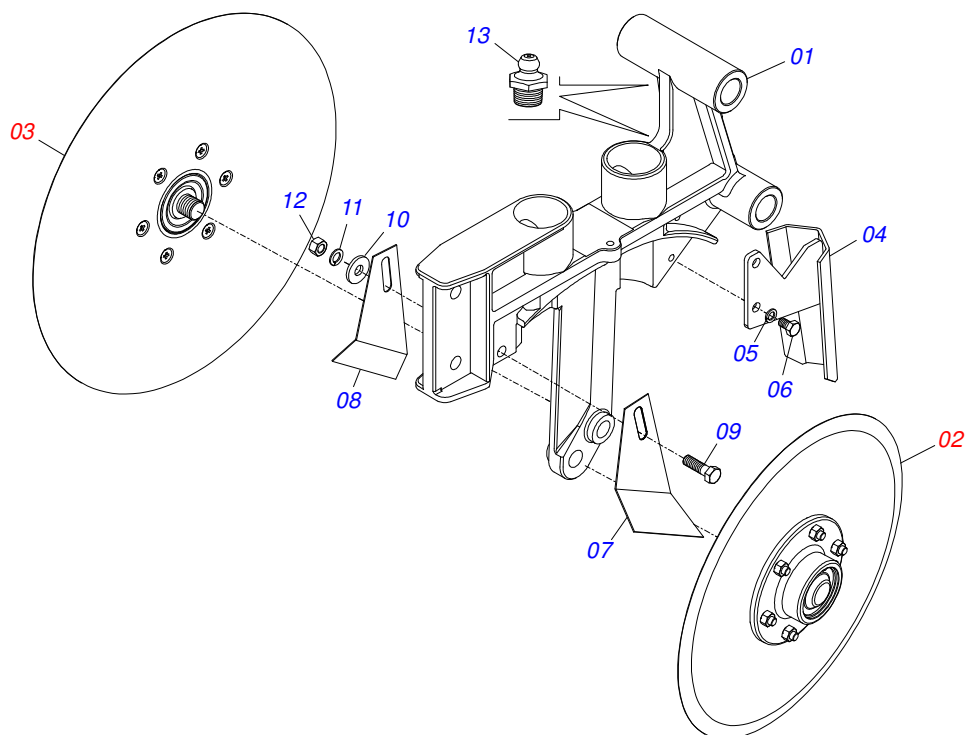


Item	Code	Description	See page	QT
01	0502012841	SUPPORT DDD LEFT		01
02	0511056612	LOW LEFT HUB WITH DISK 13	47	01
03	0511056611	RIGHT LOW CUBE WITH DISK 15	48	01
04	0521065162	FRONT PROTECTION DDD LEFT		01
05	0503010179	5/16" ZN SPRING WASHER		02
06	0503010011	5/16" X 1/2" BOLT		02
07	0531013569	LEFT DOUBLE-DISK SCRAPER		01
08	0531013568	RIGHT DOUBLE DISC SCRAPER		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0501010984	FLAT WASHER		01
11	0503011443	3/8" SPRING WASHER		01
12	0503010026	3/8" NUT		01
13	0503010002	1800 GREASE FITTING		02

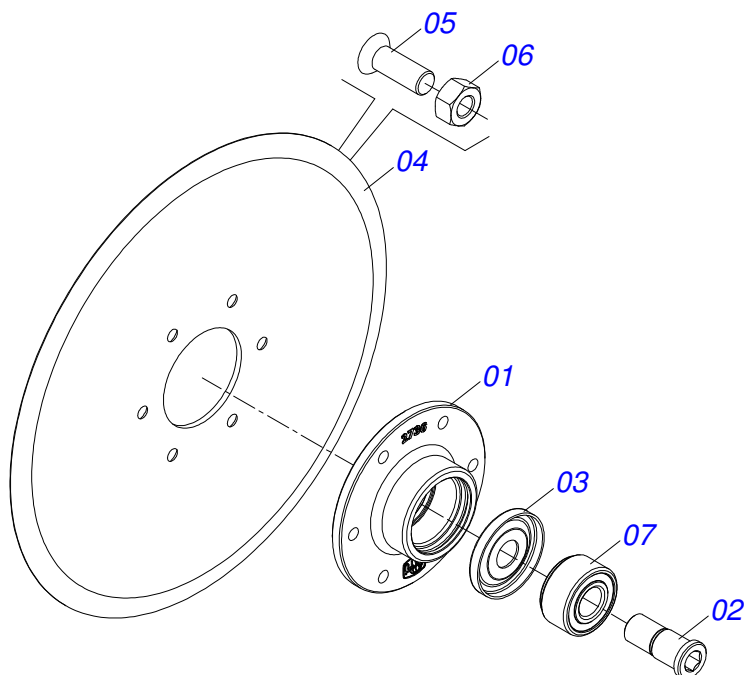


Item	Code	Description	See page	QT
01	0502012736	HUB LOWR DDD		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0511011927	DUST CLOAK		01
04	0603020117	FLAT PALIN DISC		01
05	0503010546	5/16" X 7/8" BOLT		06
06	0503010337	5/16" NUT		06
07	0503062300	EVA-F8 ESF2CARR BALL BEARING		01

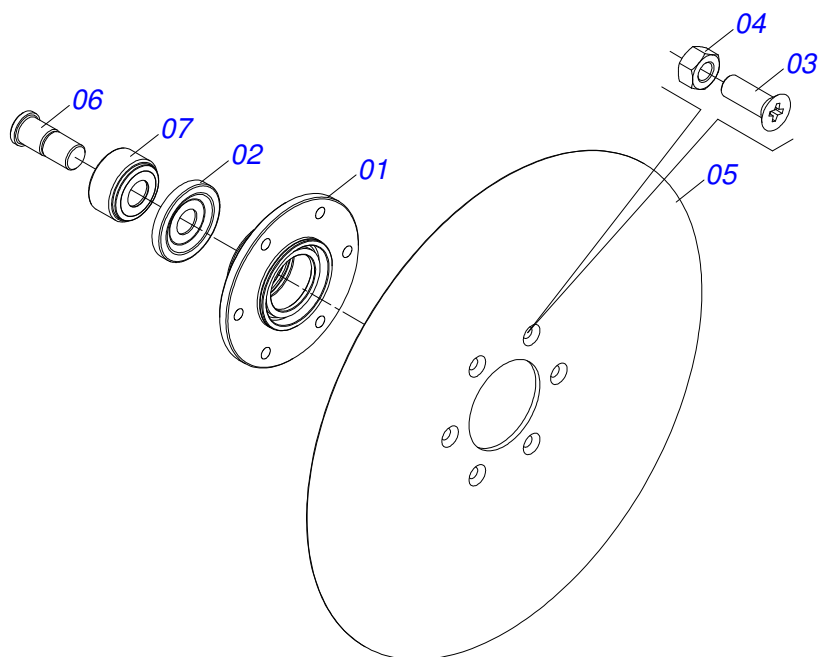

Item	Code	Description	See page	QT
01	0502012736	HUB LOWR DDD		01
02	0511011927	DUST CLOAK		01
03	0503010546	5/16" X 7/8" BOLT		06
04	0503010337	5/16" NUT		06
05	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
06	0571011150	RIGHT DOUB DISC - HUB		01
07	0503062300	EVA-F8 ESF2CARR BALL BEARING		01

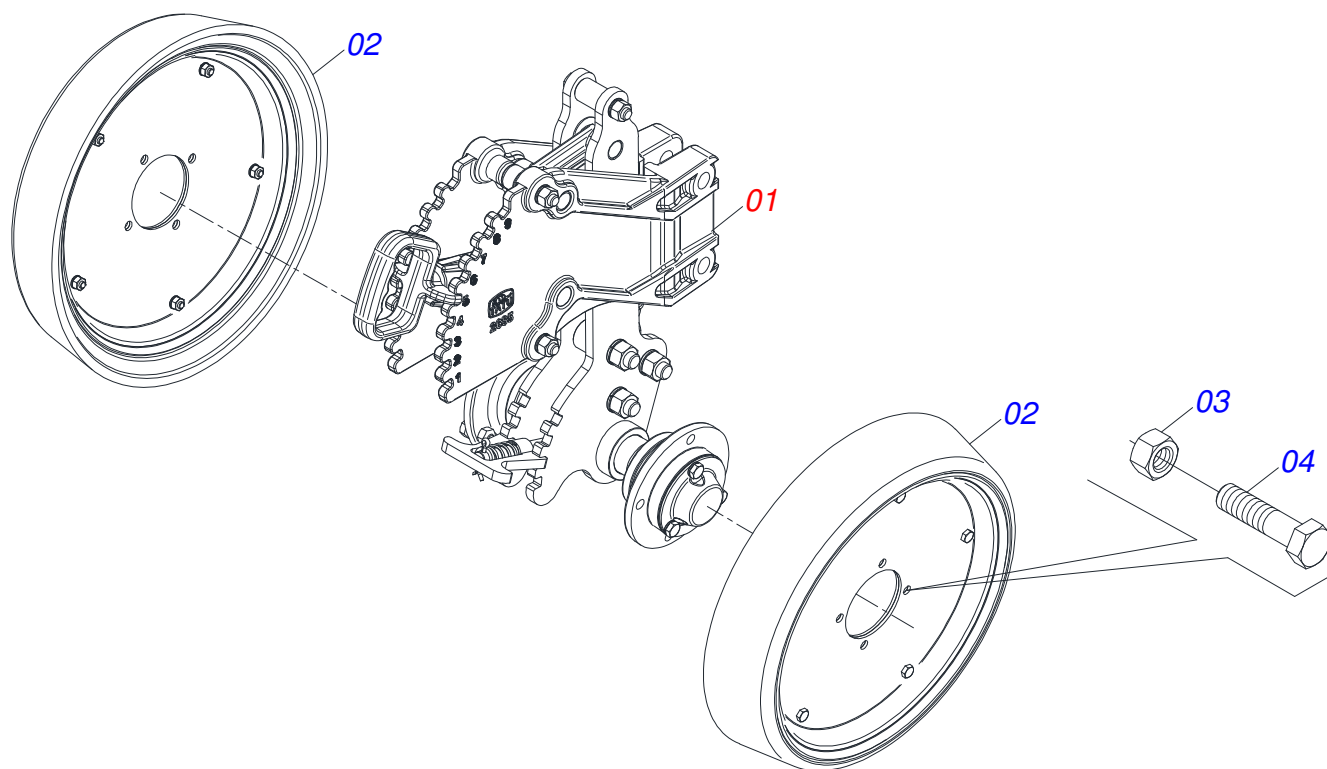


Item	Code	Description	See page	QT
01	0521058230	CONTROL DEPTH	50	01
02	0501055187	DEPTH WHEEL WITHOUT CUBE	52	02
03	0503013816	5/16" LOCKNUT		08
04	0503010358	5/16" X 5/8" BOLT		08

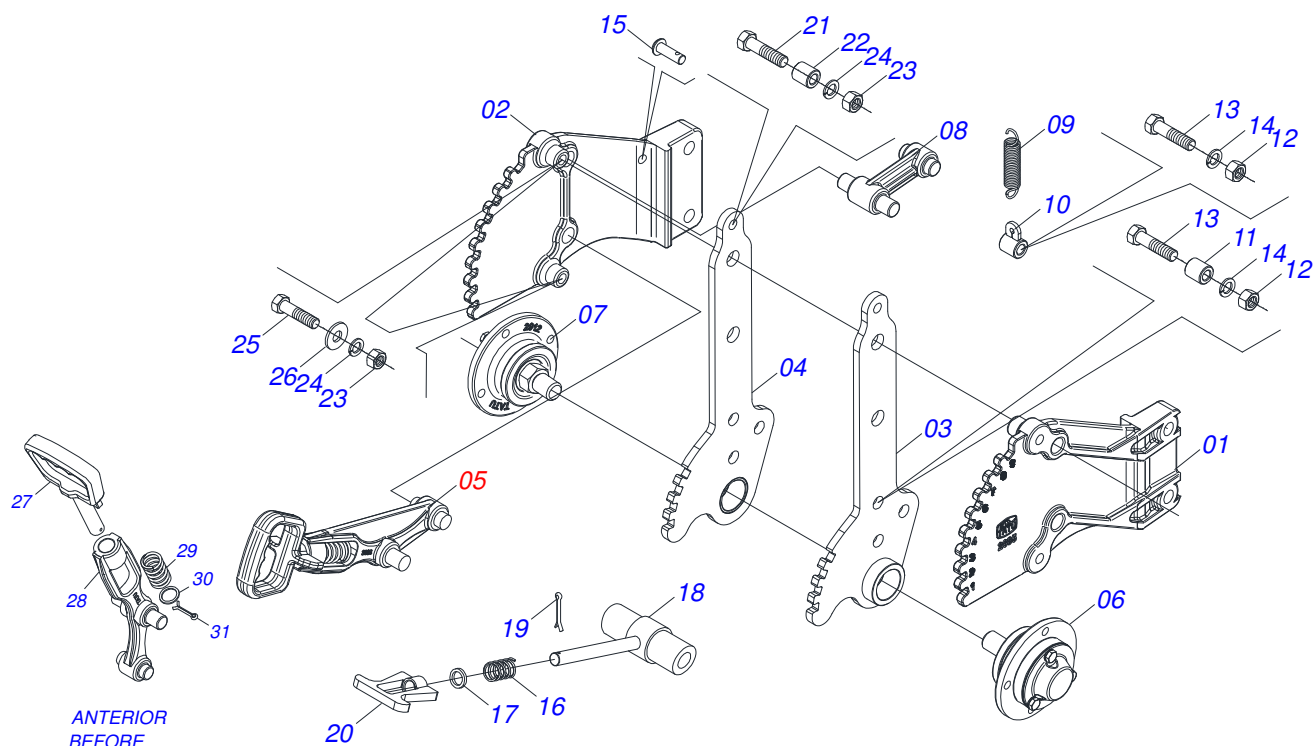


Item	Code	Description	See page	QT
01	0502012685	RH SIDE DEPTH CONTROL		01
02	0502012686	LH SIDE DEPTH CONTROL		01
03	0521068668	ARTICULATION RIGHT DEPTH CONTROL		01
04	0521068667	ARTICULATION LEFT DEPTH CONTROL		01
05	0521058231	HANDLE MOUNTED	51	01
06	0521056711	CUBE CONTROL DEPTH RIGHT WITHOUT LUBRICATION		01
07	0521056710	CUBE CONTROL DEPTH LEFT WITHOUT LUBRICATION		01
08	1902012683	DEPTH CONTROL UPPER ARM		01
09	0503030093	TRACTION SPRING		01
10	0521062714	SLLEEVE FIXER SPRING		01
11	0571810115	SLLEEVE DEPTH CONTROL		01
12	0503010028	1/2" NUT		03
13	0503016453	1/2" X 2.1/2 BOLT		03
14	0503010019	1/2" SPRING WASHER		03
15	0521010773	0.37" X 1.18" COUPLING SHAFT		01
16	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
17	0541011627	FLAT WASHER		01
18	0521068666	ADJUSTMENT AXLE		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0521062602	LOK DEPTH CONTROL		01
21	0503011179	3/8" X 2-1/4" BOLT		01
22	0581017093	SLEEVE		01
23	0503010026	3/8" NUT		03
24	0503010025	3/8" SPRING WASHER		03
25	0503013665	SCREW 3/8 UNC X 3.1/4 C S RP G.2 ZN		02
26	0541011627	FLAT WASHER		02
27	0502011689	1/8" DEPTH CONTROL LEVER		01
28	0502012684	DEPTH CONTROL LOWER ARM		01
29	0503030975	0.9" X 1.5" X 0.1" SPRING		01
30	0511015976	FLAT WASHER		01




Item	Code	Description	See page	QT
31	0503010140	1/8" X 3/4" COTTERPIN		01

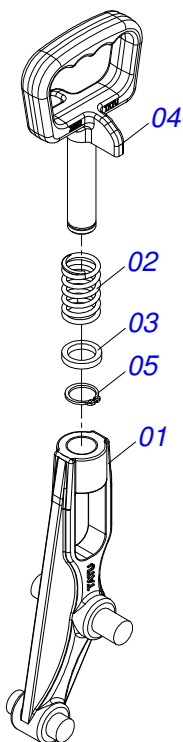

Item	Code	Description	See page	QT
01	0502012684	DEPTH CONTROL LOWER ARM		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0581019519	FLAT WASHER		01
04	0502012892	DEPTH CONTROL HANDLE		01
05	0503019398	AXLE RETAINER RING		01

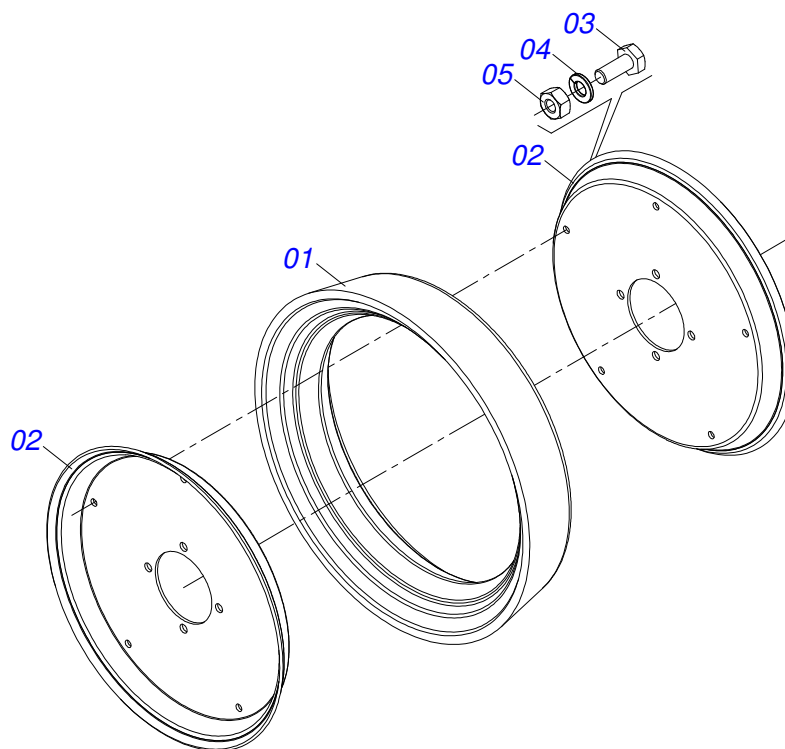

Item	Code	Description	See page	QT
01	0503032005	RUBBER BAND		01
02	0541011628	DEPTH WHEEL RIM SEMI		02
03	0503010519	1/4" X 5/8" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

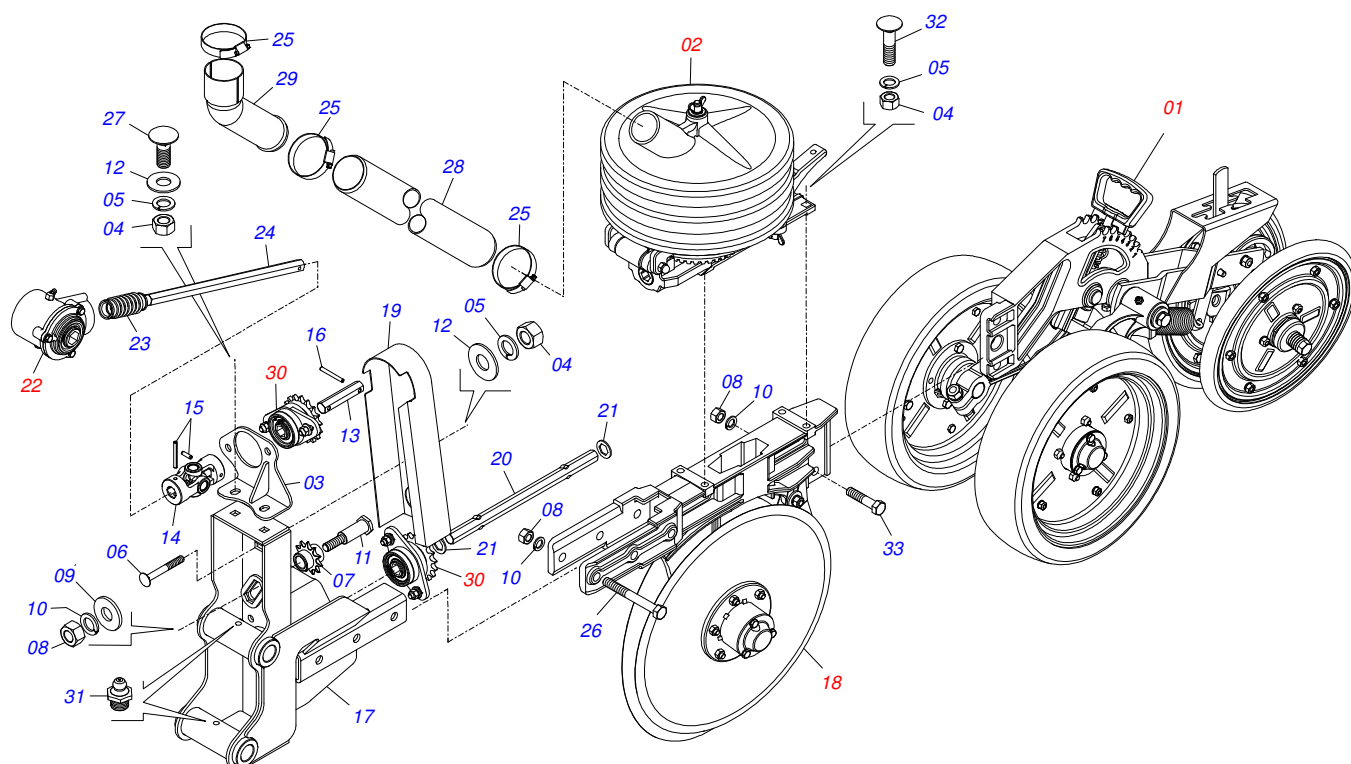


Item	Code	Description	See page	QT
01	0521040111	DEP CONT WHEELS PRESS WHEELS ASSY	54	01
02	0511058472	SEED SYSTEM	63	01
03	0521066724	TRANSM BEARING SUPPORT		01
04	0503010026	3/8" NUT		03
05	0503010025	3/8" SPRING WASHER		03
06	0501011755	3/8" X 3" BOLT		01
07	0503031805	11Z 1/2" GEAR		01
08	0503010060	1/2" NUT		03
09	0511017302	FLAT WASHER		01
10	0503010019	1/2" SPRING WASHER		03
11	0531019479	AXLE CHAIN GEAR		01
12	0501013518	FLAT WASHER		03
13	0581010976	5/8" HEX AXLE		01
14	0501056296	UNIVERSAL JOINT		01
15	0503011855	0.2" X 1.8" SPRING PIN		02
16	0503010686	0.2" X 0.7" SPRING PIN		01
17	0521067158	SEED LINE REAR FRAME		01
18	0501059631	DDD SEED 15" X 15" RIGHT	67	01
19	0581012335	PROTECTION COVER		01
20	0581010239	SEED ROW AXLE TRANSMISSION		01
21	0521011859	FLAT WASHER		02
22	0511054884	TRANSMISSION BOX	70	01
23	0503032984	HOOD HEX AXLE ROW		01
24	0571012492	HEX AXLE 5/8" X 330		01
25	0503010246	CLAMP		03
26	0503017874	BOLT 1/2 UNC		02
27	0501011643	3/8 X 1" BOLT		02
28	0571019713	AIR CONDUCTION		01
29	0503033340	PINION		01
30	0511059190	BEARING DOBLE	71	02
31	0503010002	1800 GREASE FITTING		02




STM - FRAME 7400
SEED ROW OPTIONAL

Page 53
0511059658


Item	Code	Description	See page	QT
32	0503011404	BOLT		04
33	0503010905	1/2" X 2-1/4" BOLT		02

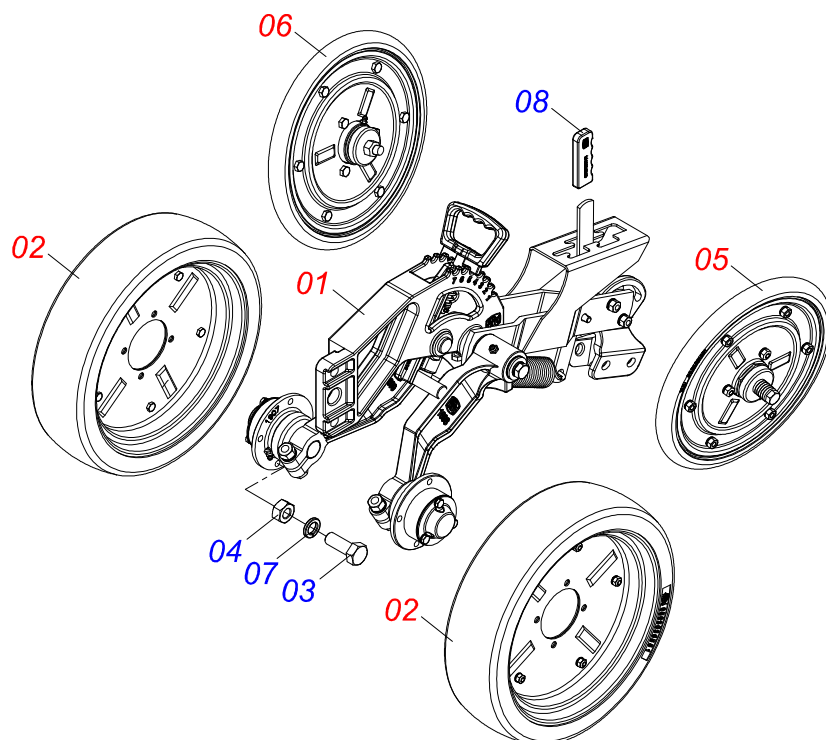


Item	Code	Description	See page	QT
001	0511051447	CONTROL DEPTH ASSY	55	01
002	0501052538	DEPTH BAND WITH ARMS	59	02
003	0503010358	5/16" X 5/8" BOLT		08
004	0503013816	5/16" LOCKNUT		08
005	0511054333	COMPACT WHEEL RIGHT WITH BEARING	60	01
006	0511054334	COMPACT WHEEL LEFT WITH BEARING	61	01
007	0503010179	5/16" ZN SPRING WASHER		08
008	0503033942	COVER REGULATORY WHEEL		01

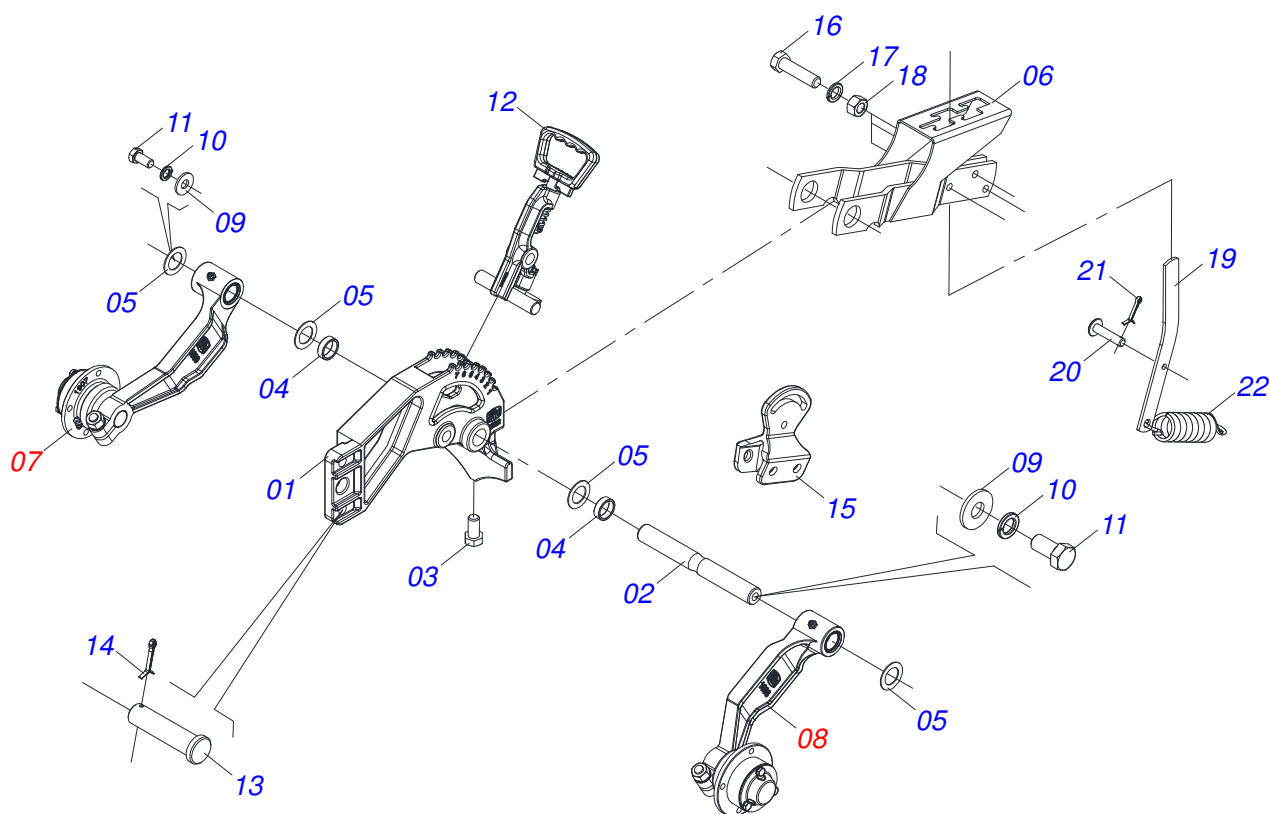


Item	Code	Description	See page	QT
001	0502012282	DEPTH CONTROL SUPPORT		01
002	0531010765	DEPTH WHEEL AXLE		01
003	0503010256	3/8" X 3/4" BOLT		01
004	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
005	0511015346	FLAT WASHER		04
006	0521064073	REGULACION WHEEL COMPACTOR		01
007	0501058576	RIGHT WHEEL ARM	56	01
008	0501058577	RIGHT ARM DEPTH CONTROL WHEEL	57	01
009	0511017302	FLAT WASHER		02
010	0503011440	SPRING WASHER		02
011	0503010311	1/2" X 1-1/4" BOLT		02
012	0501052297	DEPTH WHEELS REGULATOR ASSY		01
013	0521019093	0.6" X 2.7" PIVOT SHAFT		01
014	0503010257	1/8" X 1" COTTERPIN		01
015	0502012116	PRESS WHEEL ADJUSTER		01
016	0503010849	3/8" X 1-1/2" BOLT		02
017	0503011443	3/8" SPRING WASHER		02
018	0503010026	3/8" NUT		02
019	0541016906	PRESS WHEELS REGULATOR BODY		01
020	0521010539	0.3" X 1.2" COUPLING SHAFT		01
021	0503010140	1/8" X 3/4" COTTERPIN		01
022	0503030805	1.6" X 6" X 0.2" TRACTION SPRING		01

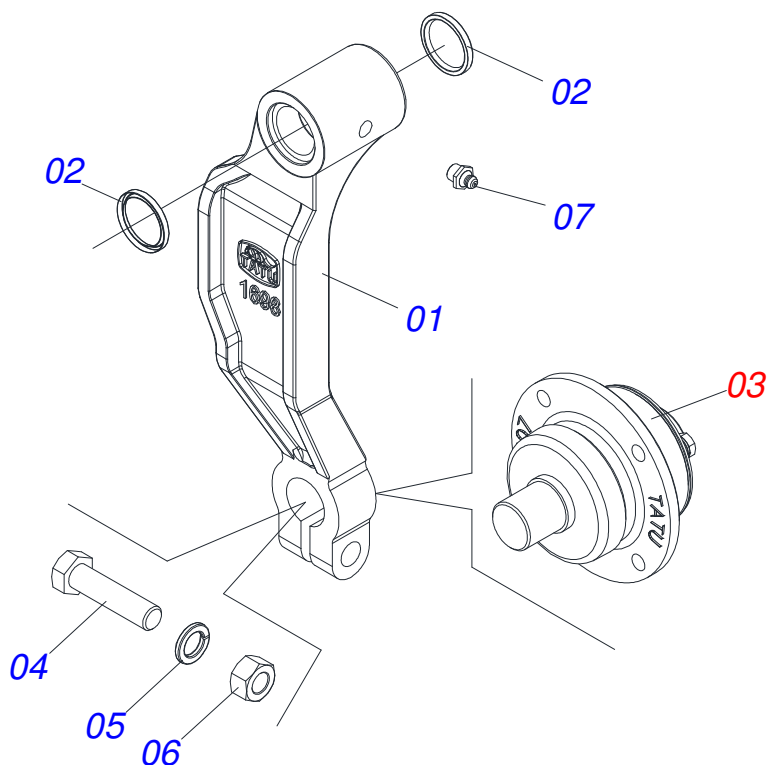


Item	Code	Description	See page	QT
001	0502012553	DEPTH WHEEL RIGHT ARM		01
002	0503015021	6871-GA SEAL RING		02
003	0501052627	ASSY DEPTH WHEEL BOX	58	01
004	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
005	0503011440	SPRING WASHER		01
006	0503010060	1/2" NUT		01
007	0503010002	1800 GREASE FITTING		01

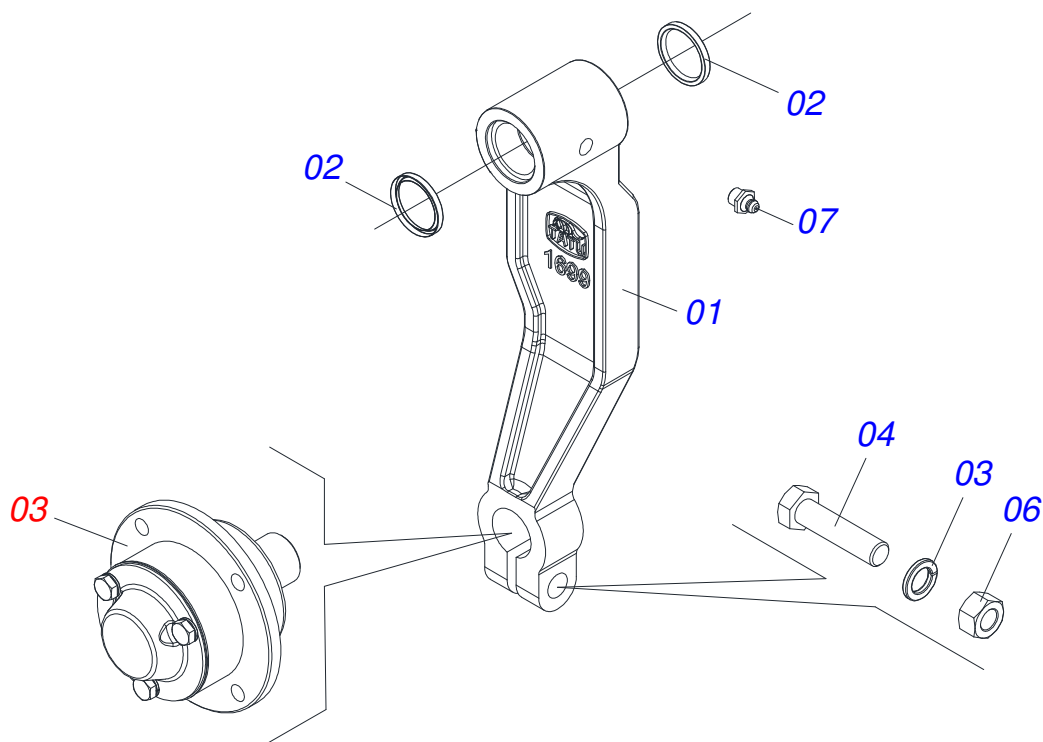


Item	Code	Description	See page	QT
001	0502012552	LH ARM DEPTH CONTROL WHEEL		01
002	0503015021	6871-GA SEAL RING		02
003	0501052627	ASSY DEPTH WHEEL BOX	58	01
004	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
005	0503011440	SPRING WASHER		01
006	0503010060	1/2" NUT		01
007	0503010002	1800 GREASE FITTING		01

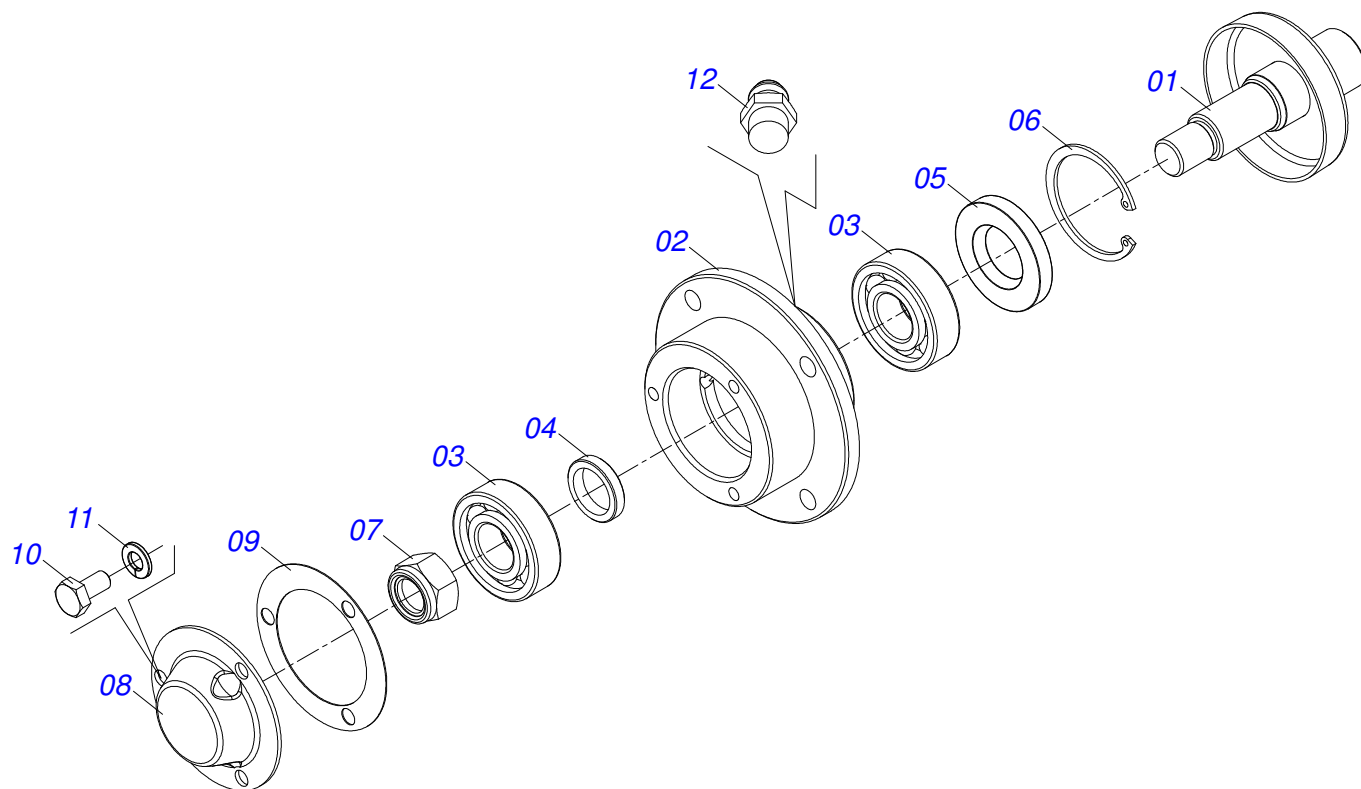


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	COVER DEPTH		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

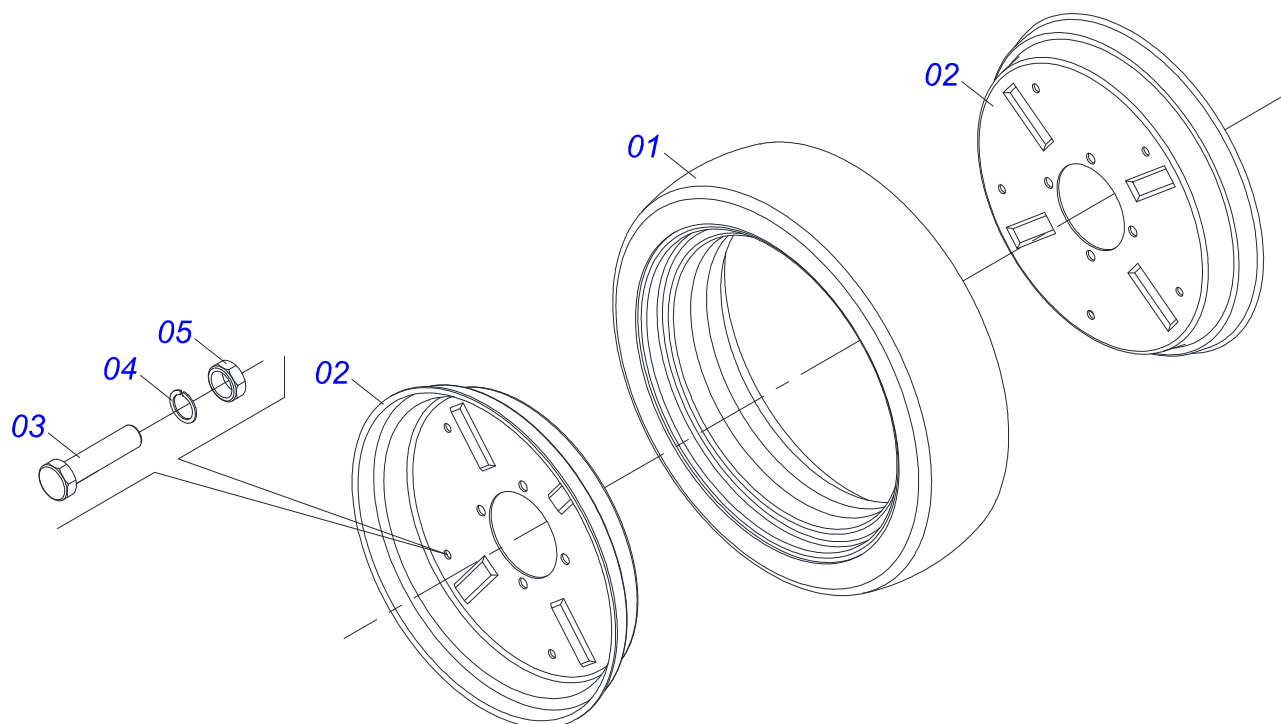


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

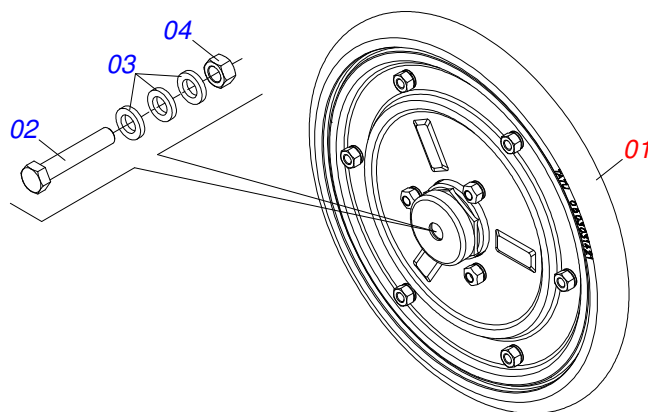


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	62	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

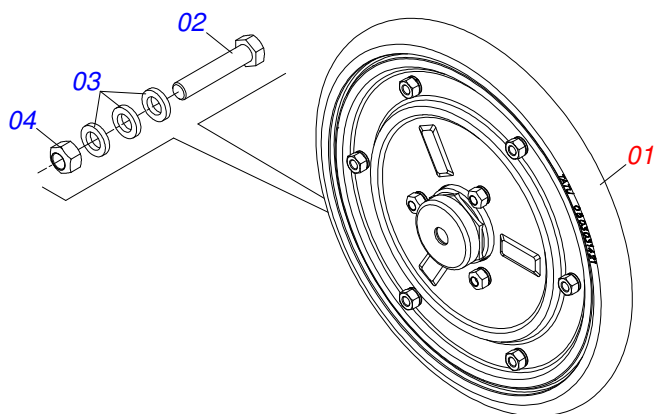


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	62	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

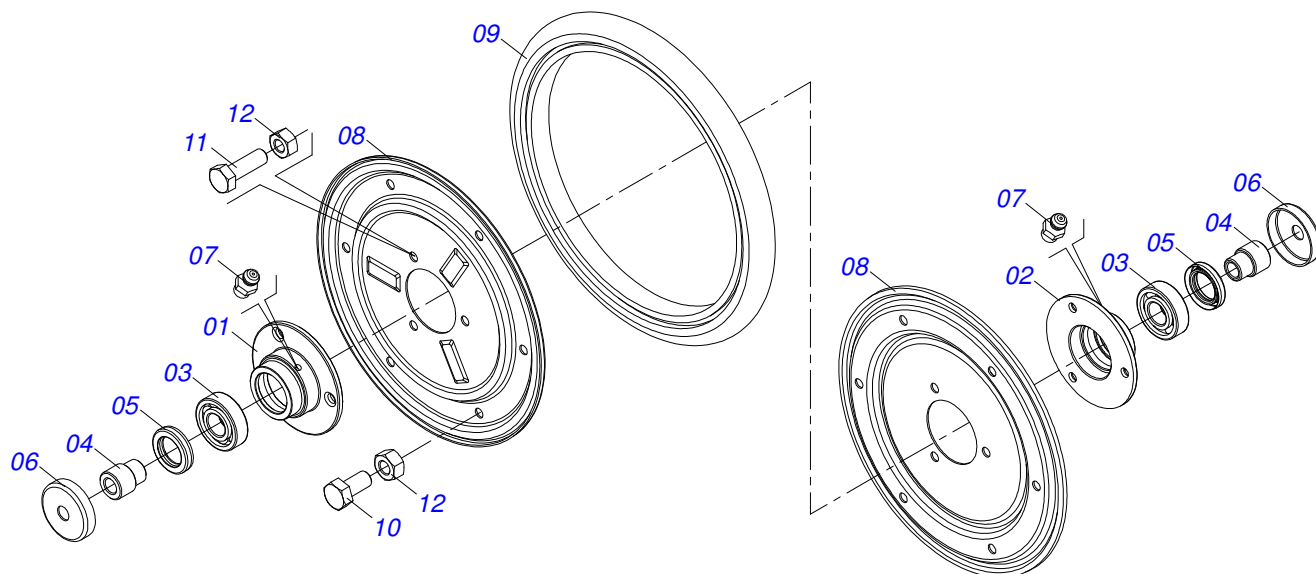


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

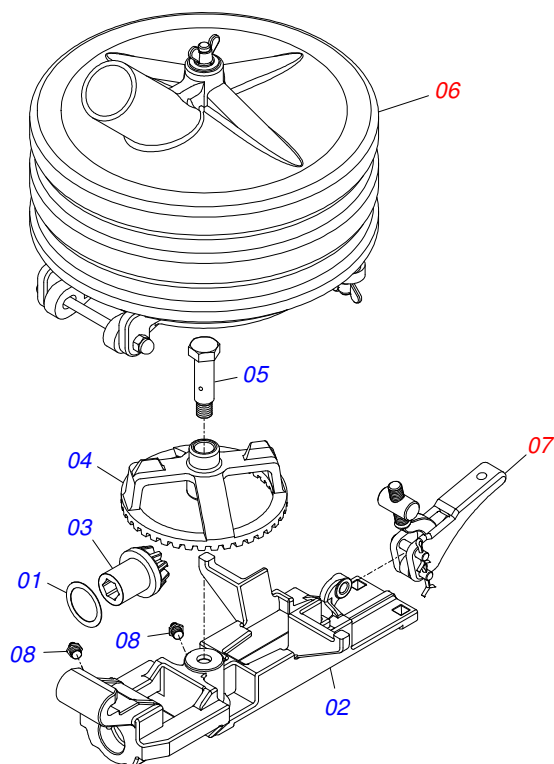


Item	Code	Description	See page	QT
01	0501013354	FLAT WASHER		01
02	0502012704	BASE FIXING SYSTEM		01
03	0502012639	12Z LOWER CONICAL GEAR		01
04	0502011418	40Z CONICAL GEAR		01
05	0511018700	AXLE		01
06	0511058473	SEED SYSTEM	64	01
07	0511053857	FAST CLOSING SET	66	01
08	0503010002	1800 GREASE FITTING		02

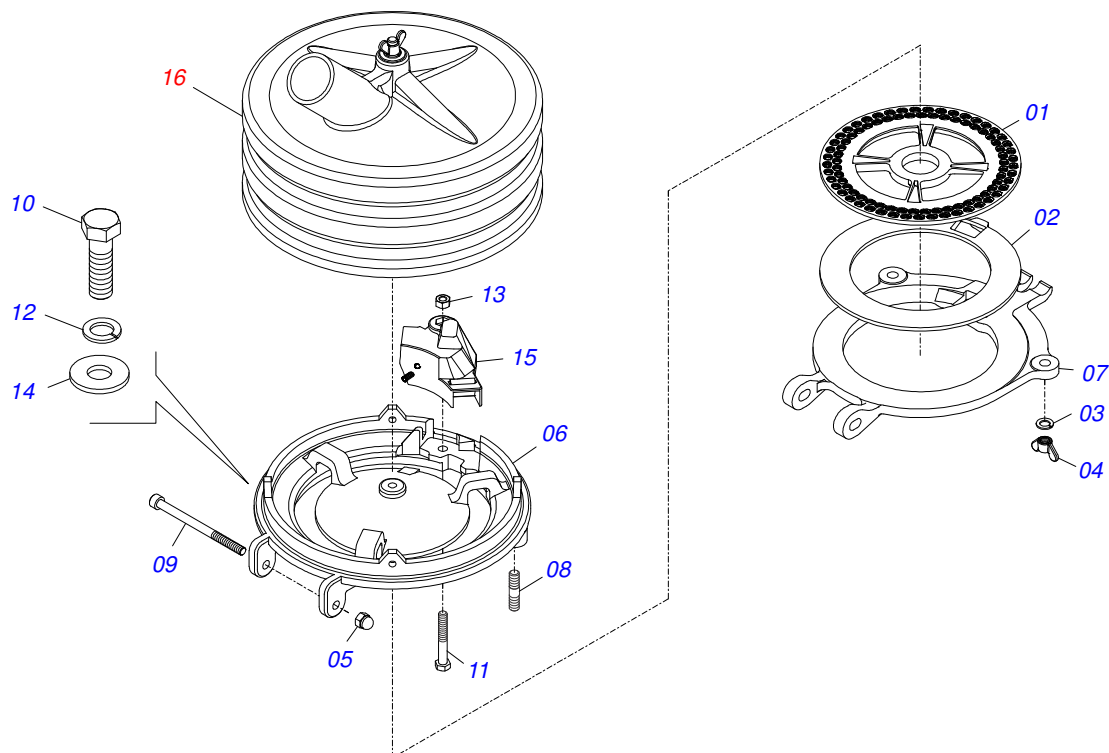


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016219	RING TO SOYBEANS		01
03	0503010025	3/8" SPRING WASHER		02
04	0503010209	3/8" UNC BUTTERFLY NUT		02
05	0503016283	M8 NUT HEX		01
06	0502020693	SUPPORT SEED BOX		01
07	0502012721	SEED DISC LOWER TRAIL		01
08	0503030083	3/8" X 3/8" X 1.6" STUD		02
09	0503016282	ALLEN BOLT		01
10	0503010240	5/16" X 3/4" BOLT		04
11	0503010675	5/16" X 2.1/4" BOLT		01
12	0503010179	5/16" ZN SPRING WASHER		05
13	0503010337	5/16" NUT		01
14	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
15	0501051094	SEED DISTRIB ASSY WITH DOUB PULLEY		01
16	0511058474	BOX COVER	65	01

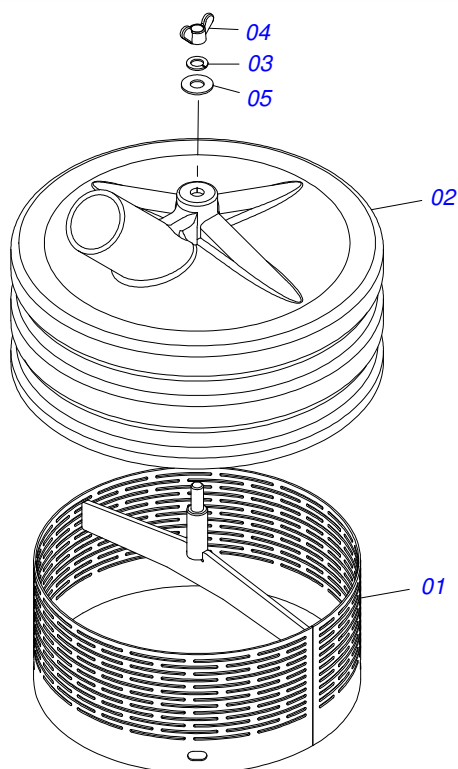


Item	Code	Description	See page	QT
01	0521066409	USAP CSC SEED TANK		01
02	0503034298	SEED SILO		01
03	0503010025	3/8" SPRING WASHER		01
04	0503010209	3/8" UNC BUTTERFLY NUT		01
05	0501013518	FLAT WASHER		01

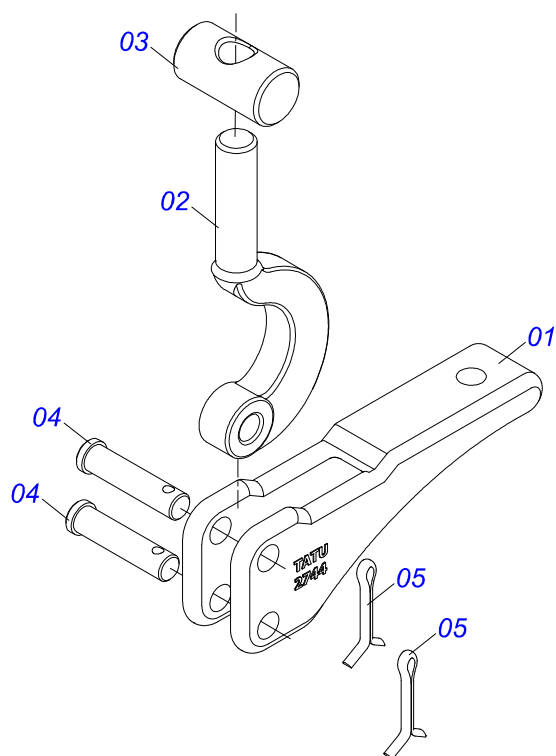


Item	Code	Description	See page	QT
01	0502012744	SPEED LOCK LEVER ASSY		01
02	0502012743	FAST BOLT ASSY		01
03	0571014534	FAST BOLT ADJUSTMENT		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010257	1/8" X 1" COTTERPIN		02

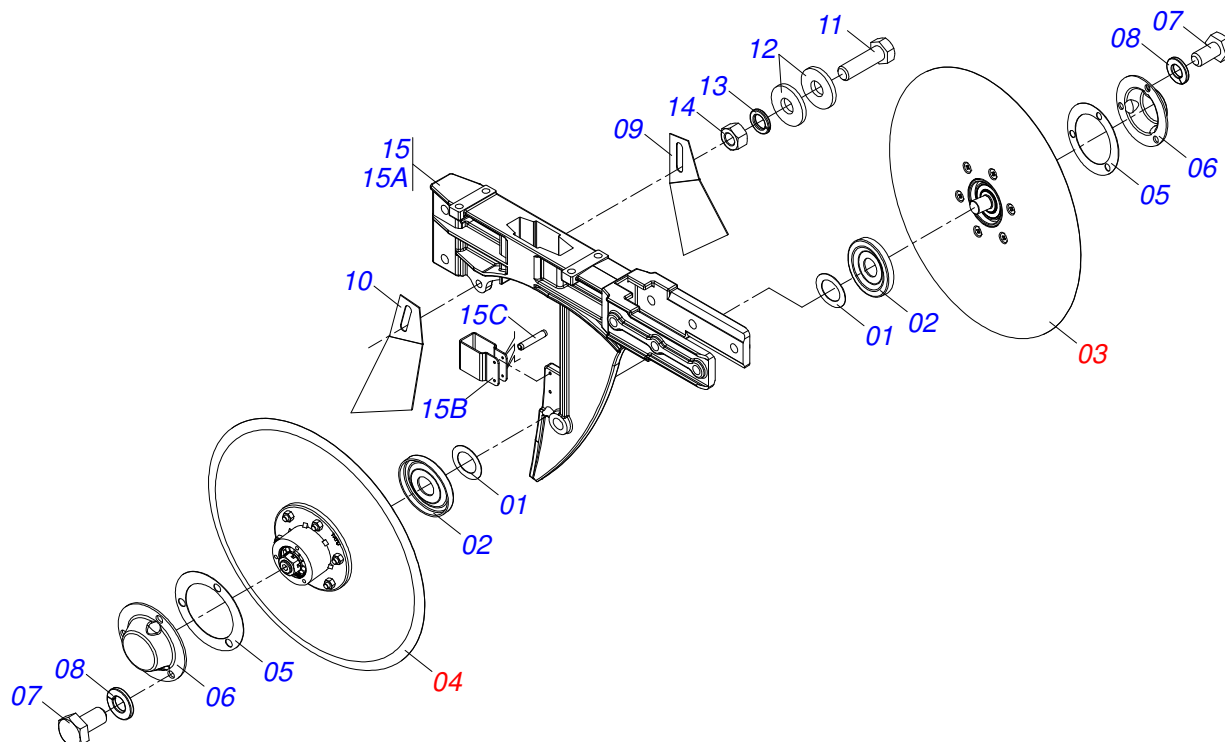


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	BOX DDD ASSY DPL 15 RIGHT	68	01
04	0501054168	BOX DDD ASSY DPL 15 LEFT	69	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	COVER DEPTH		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052301	SUPPORT DDD 15 RIGHT		01
15A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

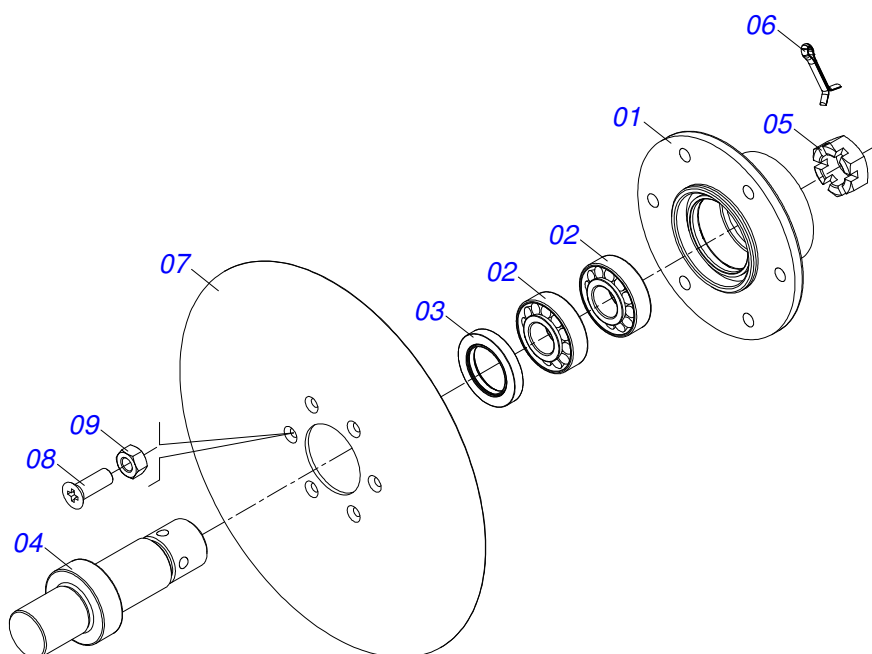


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT DOUB DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

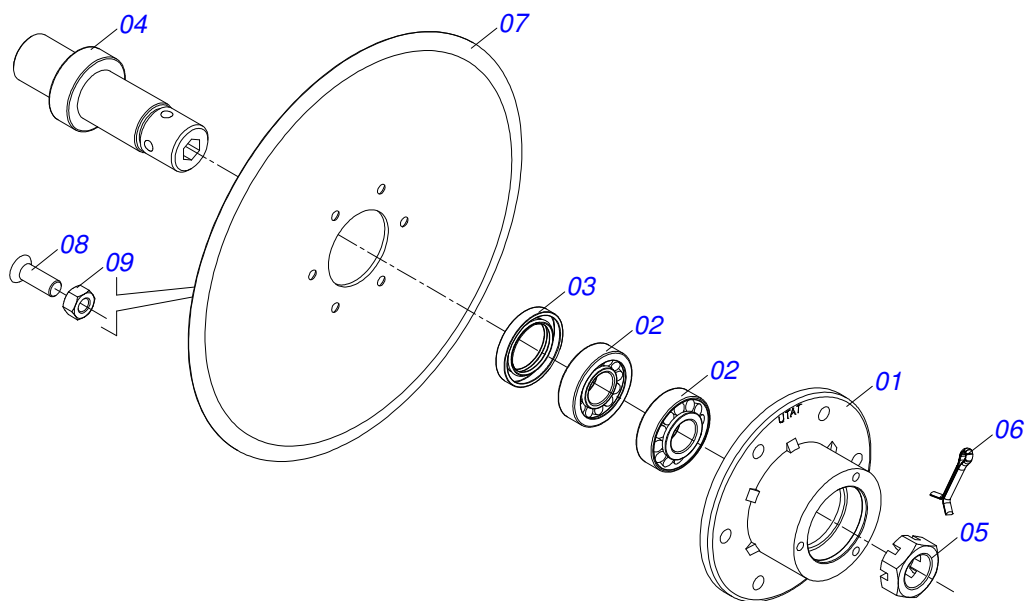


Item	Code	Description	See page	QT
01	0502011930	DOUBLE DISC COULTER BOX		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

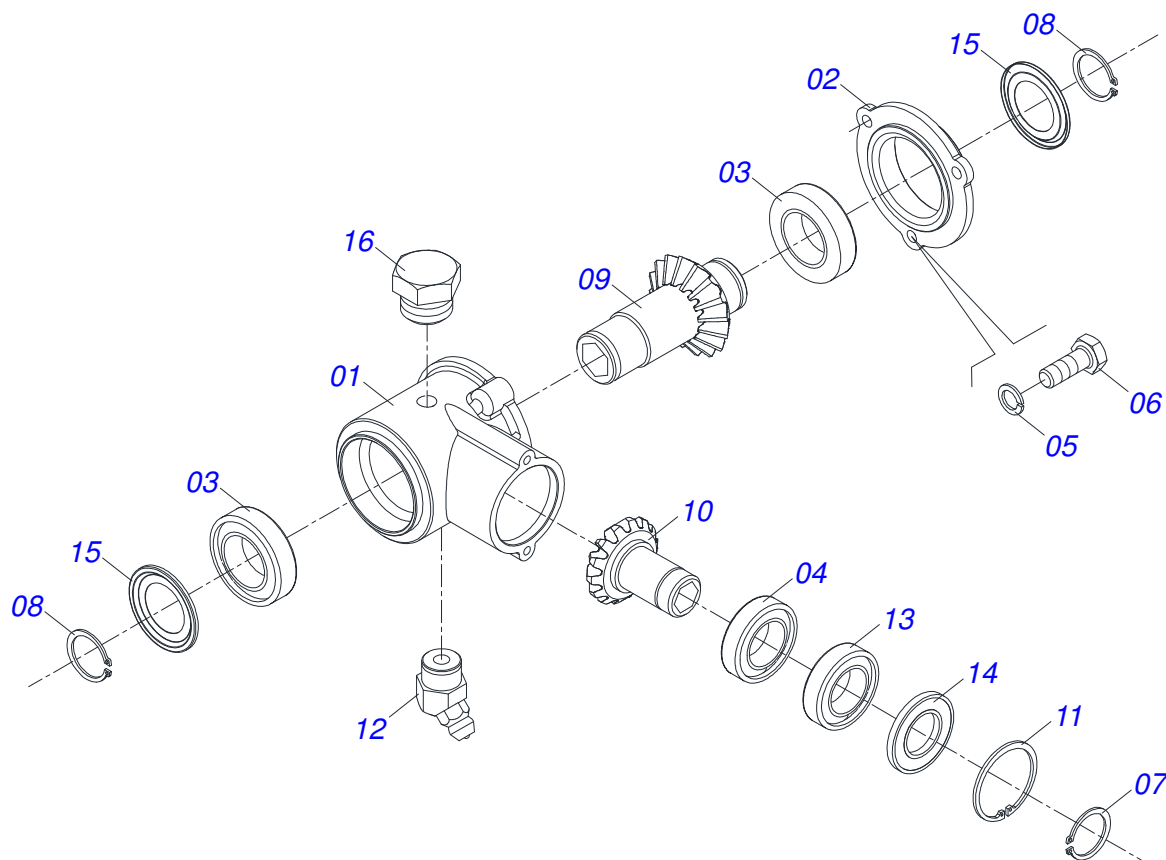


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0502040857	CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503010003	1845 GREASE FITTING		01
13	0503011409	6005 Z BALL BEARING		01
14	0503017008	SEAL RING		01
15	0503017007	SEAL RING		02
16	0511017907	1/8" BSPT X 6 PLUG		01

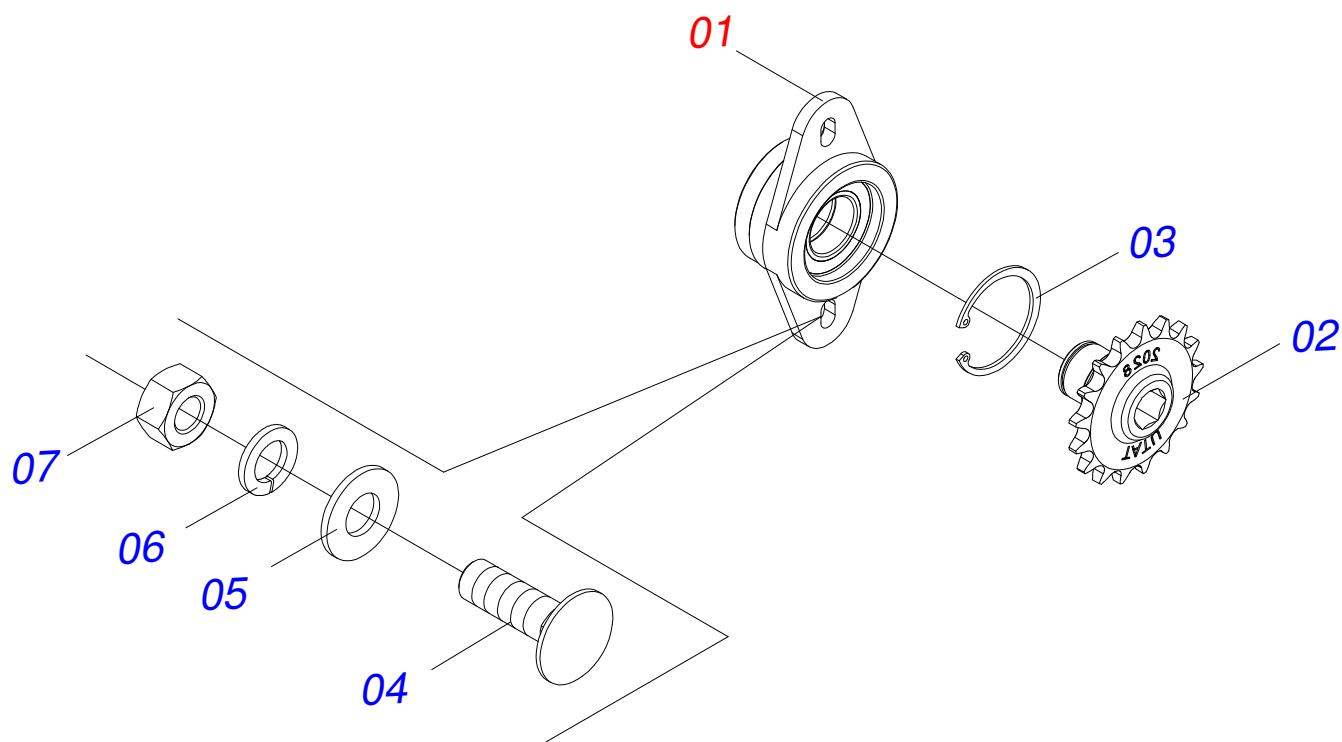


Item	Code	Description	See page	QT
001	0511059191	FRONT BEARING DOBLE	72	01
002	0502012851	17Z GEAR WITH HEX HOLE		01
003	0503010406	501025 CLAMPING RING (FOR AXLE)		01
004	0503011953	5/16" X 1" BOLT		02
005	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
006	0503010179	5/16" ZN SPRING WASHER		02
007	0503010337	5/16" NUT		02

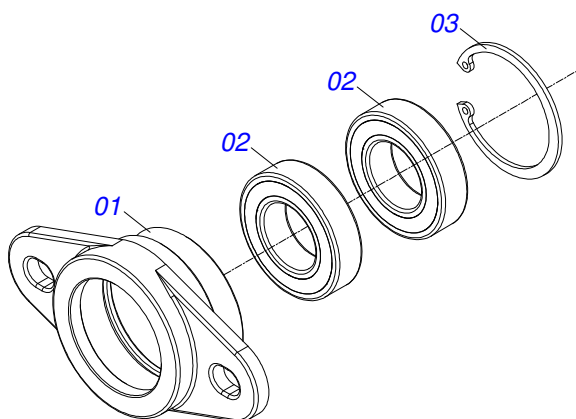


Item	Code	Description	See page	QT
01	0502011971	HOUSING WITH DOUBLE BEARING		01
02	0503011410	ROLLER BEARING		02
03	0503011105	SEAL RING		01

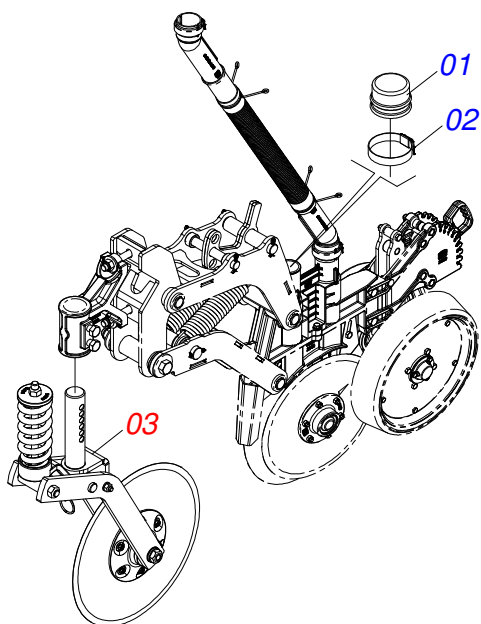


Item	Code	Description	See page	QT
01	0503031436	AIR DITRIBUTOR PUMP		01
02	0503010246	CLAMP		01
03	0521059098	DISC CUTTING DPL 18 ASSY	74	01

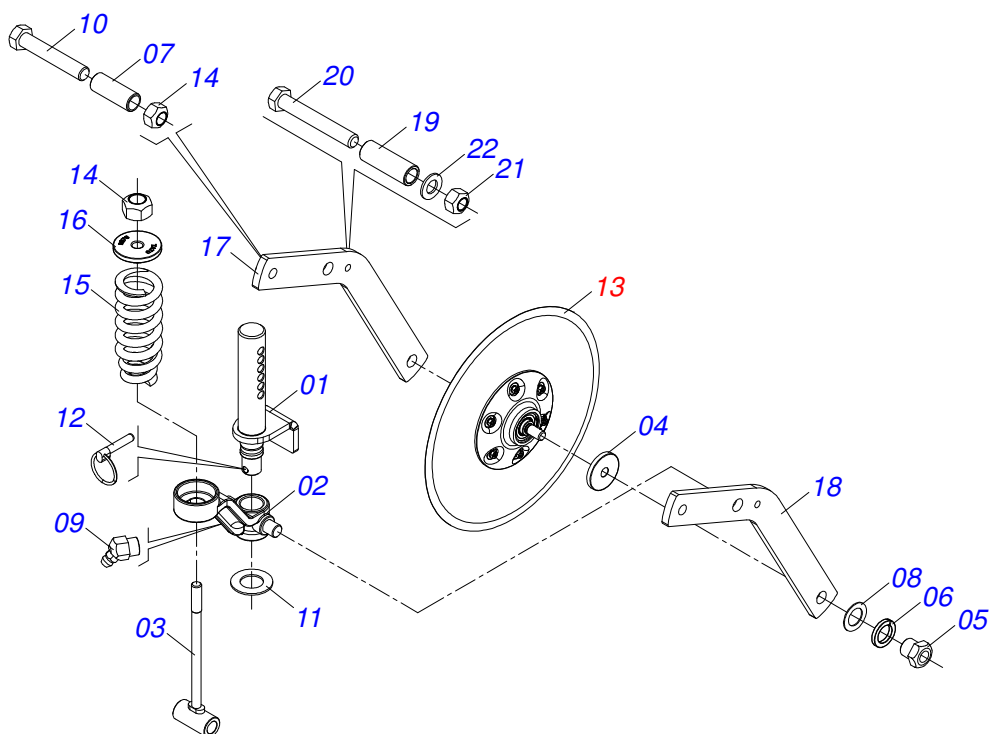


Item	Code	Description	See page	QT
01	0521067882	CUTTING DISC AXLE		01
02	0502012369	BLADE DISC SUPPORT		01
03	0501067323	SPRING REGULATOR		01
04	0521015376	DUST CLOAK		02
05	0521013510	3/4" NUT		02
06	0503011438	SPRING WASHER		02
07	0521010452	SLEEVE		01
08	0511015346	FLAT WASHER		02
09	0503010003	1845 GREASE FITTING		01
10	0503013185	3/4" X 5-1/2" BOLT		01
11	0581014407	FLAT WASHER 36.5 X 65.00 X 3.00		01
12	0503030430	7/16 X 2" PIN LOCK		01
13	0521059099	ASSY CUTTING DISC 18	75	01
14	0503011255	3/4" LOCK NUT		02
15	0503034498	SPRING		01
16	0502012878	WASHER		01
17	0591015107	DISC ARM CUT		01
18	0531061320	DISC ARM CUT WITH SCREW LOCK		01
19	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
20	0503011411	1/2" X 5-1/2" BOLT		01
21	0503011336	1/2" HEX SELF ADJUSTING NUT		01
22	0503011828	FLAT WASHER		01

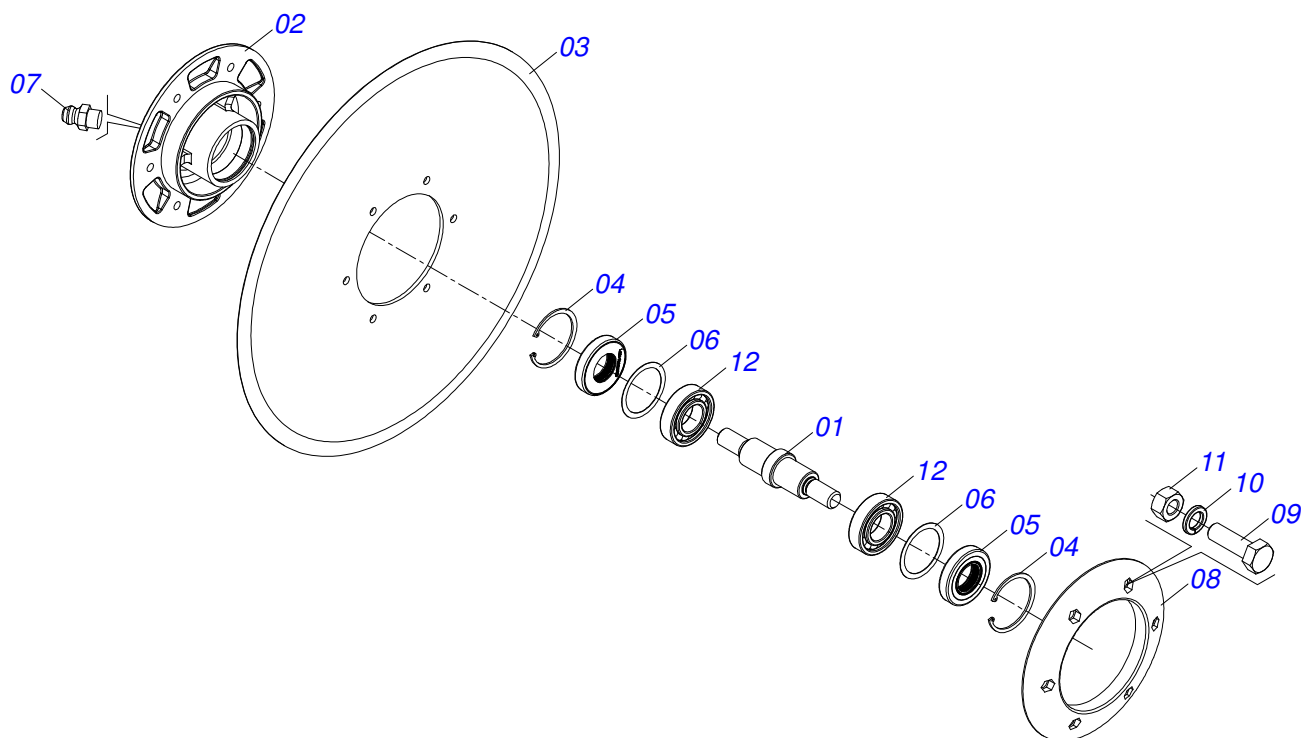


Item	Code	Description	See page	QT
01	0521013610	BLADE DISC HUB AXLE		01
02	0502011562	DC PST ACT/ULTR BOX		01
03	0603026013	PLAIN COULTER BLADE		01
04	0503011800	SEAL RING		02
05	0503012417	SEAL		02
06	0503030832	FLAT WASHER		02
07	0503010691	1/4" GREASE FITTING		01
08	0502020641	BLADE DISC FLANGE		01
09	0503018825	5/16 UNC UNC BOLT		06
10	0503010179	5/16" ZN SPRING WASHER		06
11	0503010337	5/16" NUT		06
12	0503013427	BEARING 6206		02

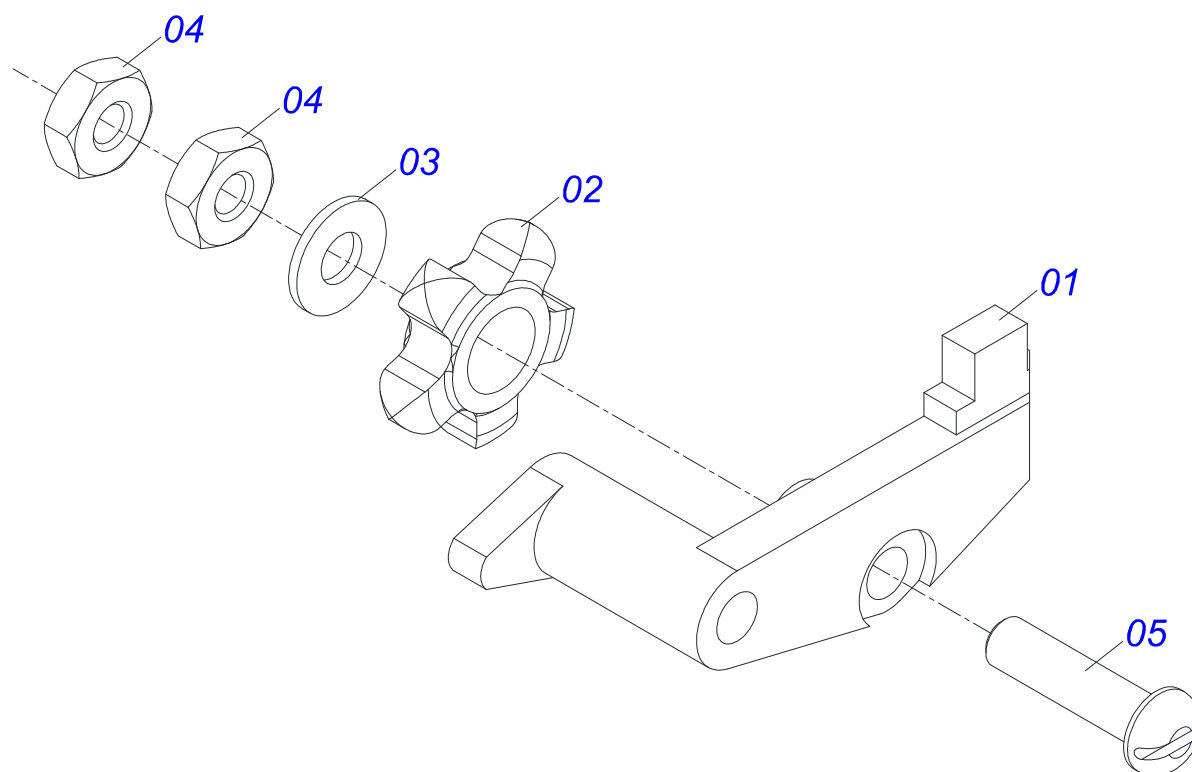


Item	Code	Description	See page	QT
01	0503030379	LARGER ROCKER ARM		01
02	0502060001	PLASTIC PULLEY FOR MAIZE		01
03	0503010669	FLAT WASHER		01
04	0503010667	3/16" NUT		02
05	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		01

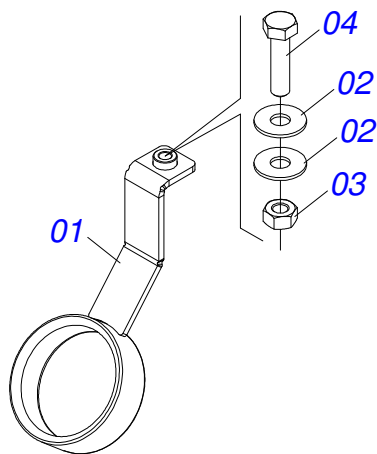


Item	Code	Description	See page	QT
01	0531061321	HOSE GUIDE		01
02	0521011039	FLAT WASHER		02
03	0503013816	5/16" LOCKNUT		01
04	0503010365	NUT		01

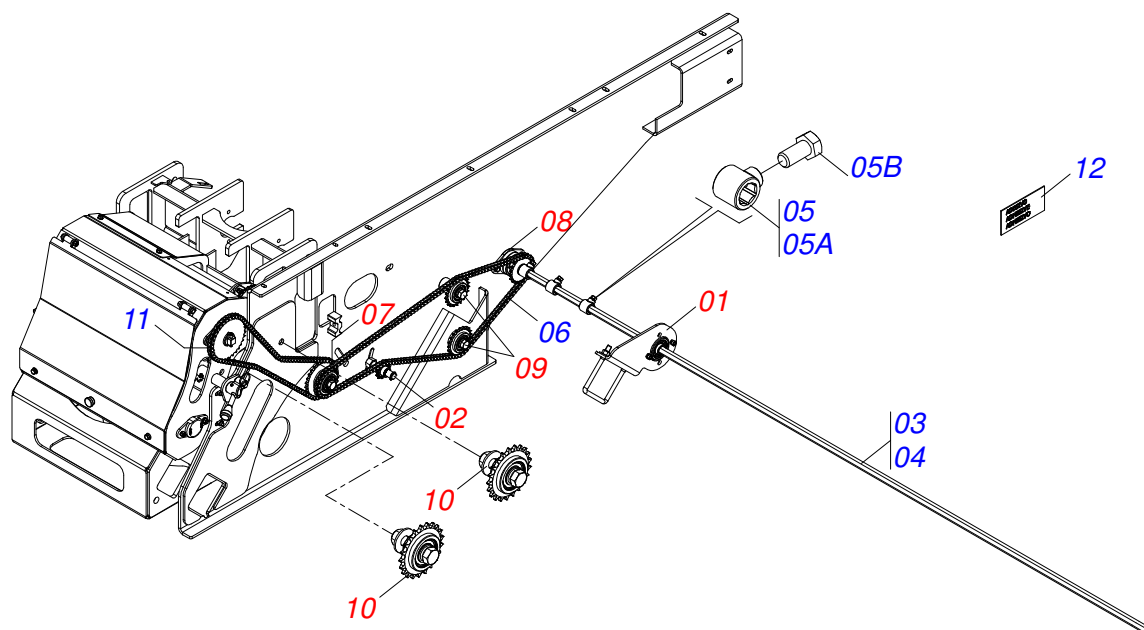


Item	Code	Description	See page	QT
00	0521059129	ASSEMBLY PARTS SET		00
01	0511059651	TRANSMISSION SIDE BEARING	79	11
02	0511059652	SEED CHAIN STRETCHER	82	02
03	0581012908	SQUARE SHAFT		01
04	0561010022	3/4 X 3250 HEX AXLE		01
05	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		26
05A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
05B	0503010256	3/8" X 3/4" BOLT		01
06	0503013582	40-1 X CHAIN X 146 LINK + REDUCION		02
07	0511058470	DOBLE GEAR	83	02
08	0501053653	BEARING WITH 20Z GEAR	84	02
09	0511050652	CHAIN TENSIONER	86	24
10	0511058471	BELT TENSIONER ASSY	87	04
11	0503012528	40-1 CHAIN X 108 LINK + REDUCTION		02
12	0503034294	ADHESIVE LABEL TABLE FERTILIZER STEP 2		01

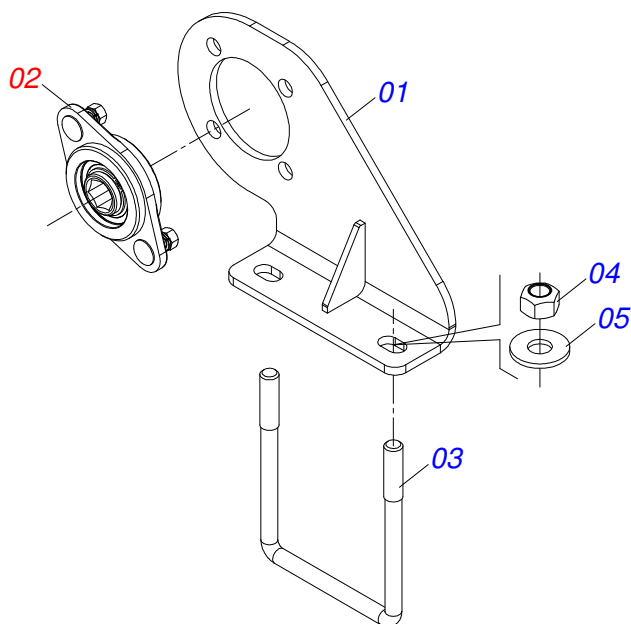


Item	Code	Description	See page	QT
01	0521067169	TRANSMISSION SIDE BEARING SUPPORT		01
02	0501057684	SIDE BEARING FRONT SUPPORT SEED LINE	80	01
03	0521014021	1/2" X 4.5" X 5.4" FASTENER		01
04	0503011336	1/2" HEX SELF ADJUSTING NUT		02
05	0511017302	FLAT WASHER		02

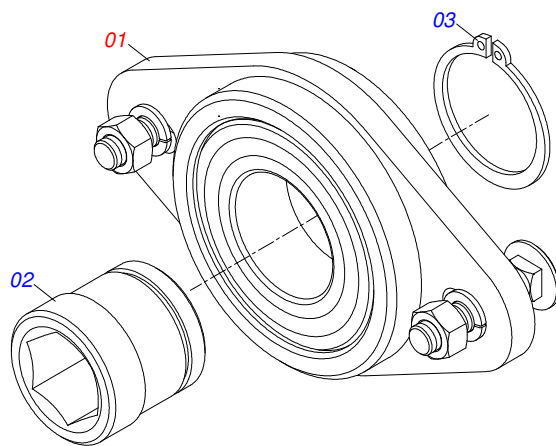


Item	Code	Description	See page	QT
01	0501053566	BEARING SEED LINE	81	01
02	0551015804	BEARING AXLE BODY		01
03	0503010707	501030 CLAMPING RING (FOR AXLE)		01

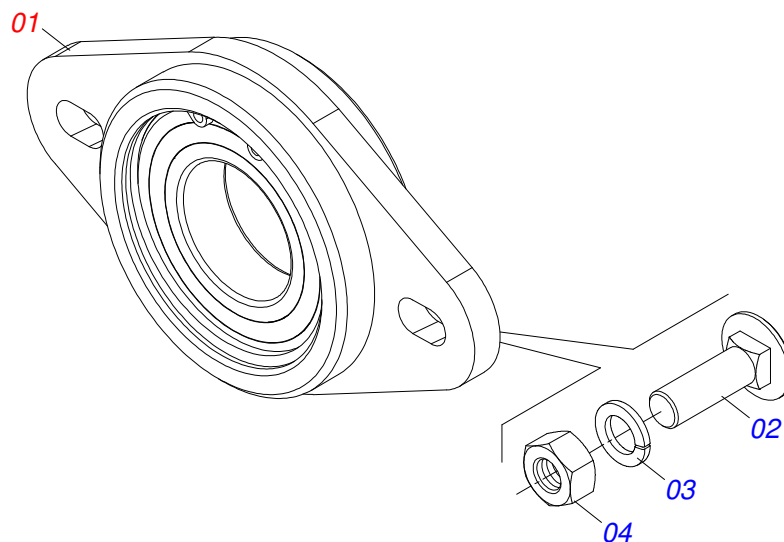


Item	Code	Description	See page	QT
01	0511059312	BEARING TRANSMISSION SEED		01
02	0503011953	5/16" X 1" BOLT		02
03	0503010179	5/16" ZN SPRING WASHER		02
04	0503010337	5/16" NUT		02

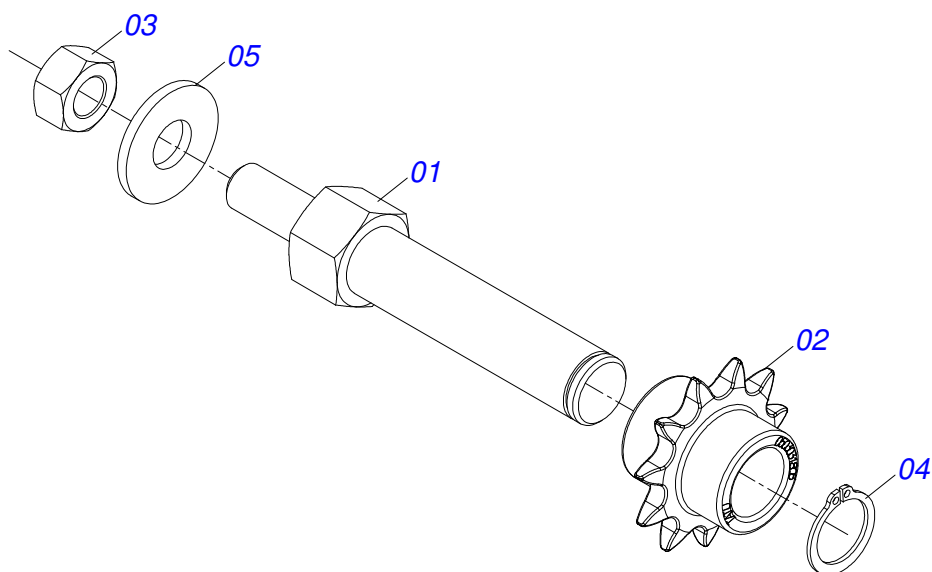


Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503011336	1/2" HEX SELF ADJUSTING NUT		01
04	0503010302	501019 SEAL RING		01
05	0511017302	FLAT WASHER		01

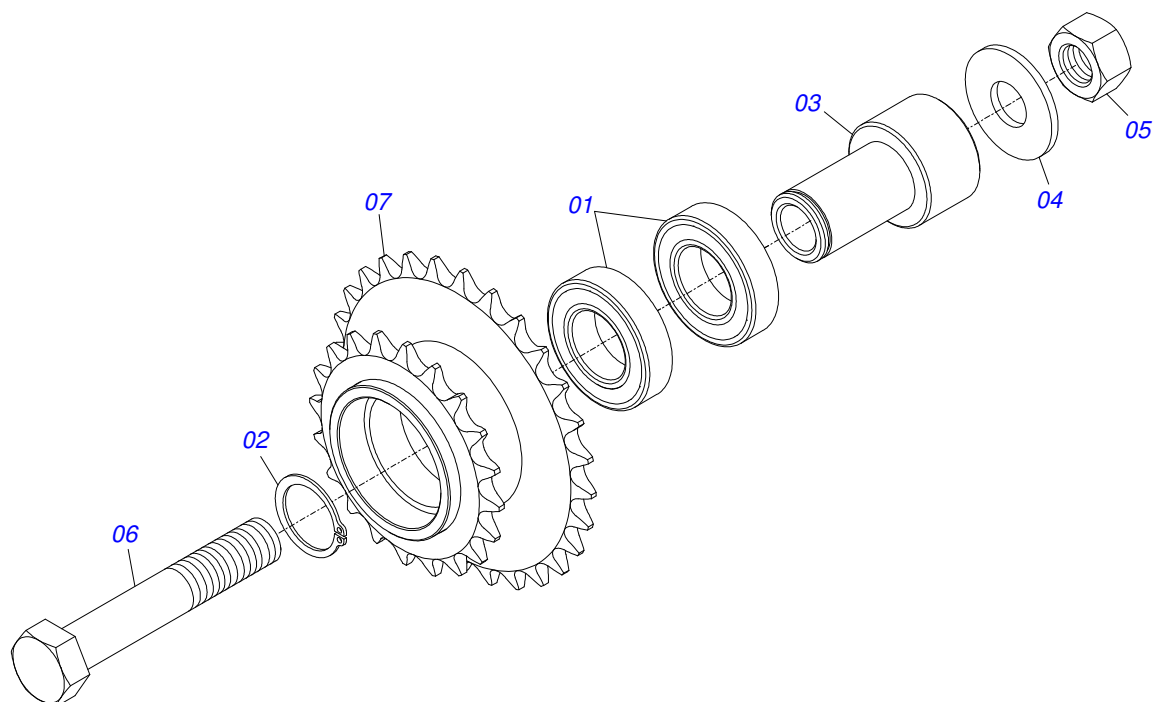


Item	Code	Description	See page	QT
01	0503011410	ROLLER BEARING		02
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0571015064	DOUBLE GEAR AXLE		01
04	0571010265	16.5 X 40 X 3 FLAT WASHER		01
05	0503012412	5/8 UNC SELF LOCKING NUT		01
06	0501011027	5/8" X 3-3/4" BOLT		01
07	0521066666	DOUBLE GEAR		01

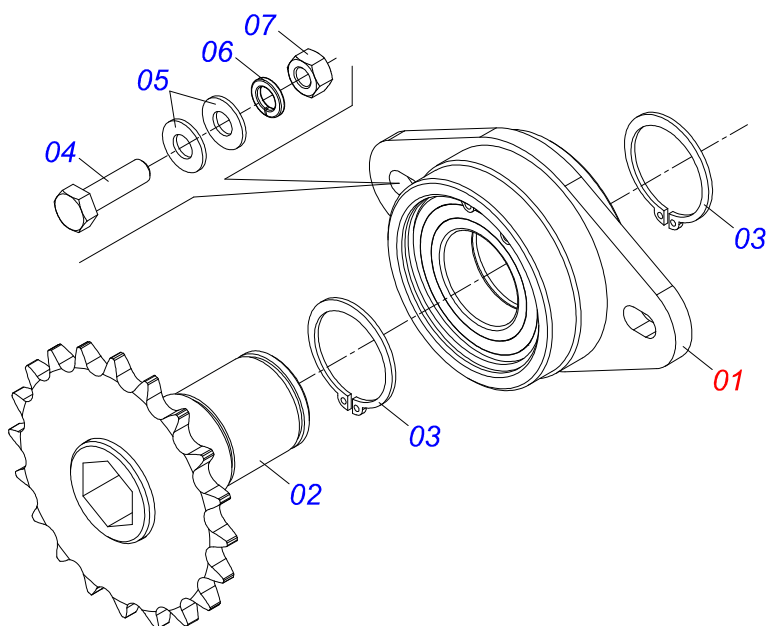


Item	Code	Description	See page	QT
01	0501053654	DOUBLE BEARING TRANSMISSION SEED 3/4	85	01
02	0511063185	20Z GEAR WITH HEX HOLE AXLE 20		01
03	0503010707	501030 CLAMPING RING (FOR AXLE)		02
04	0503010365	NUT		02
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		02
07	0503010337	5/16" NUT		02

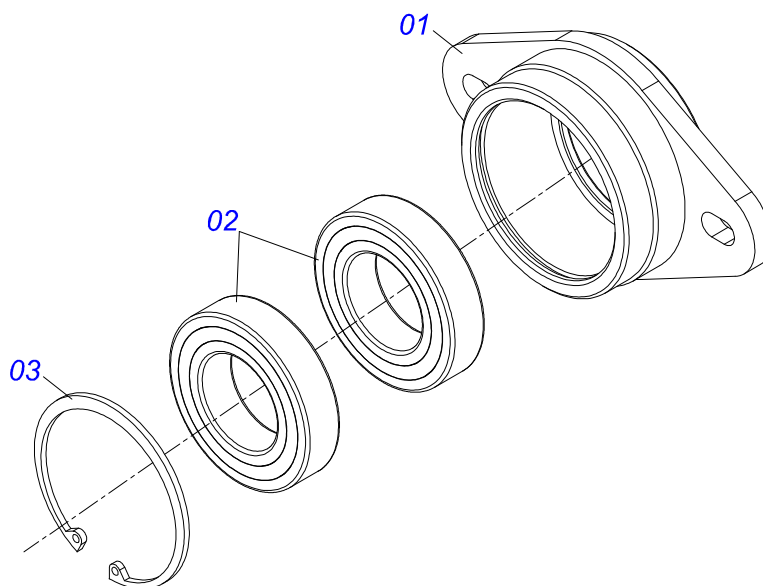

Item	Code	Description	See page	QT
01	0502012031	HOUSING BEARING		01
02	0503012861	6006 2RS BALL BEARING		02
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01

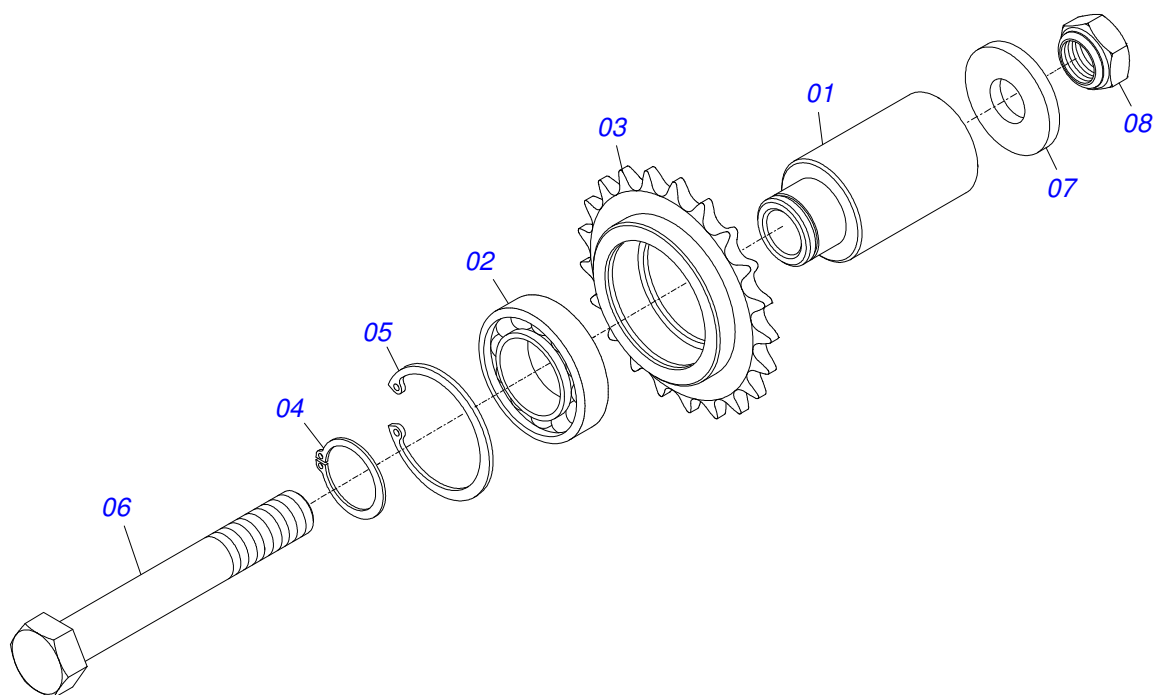

Item	Code	Description	See page	QT
01	0551019171	CHAIN TIGHTENER AXLE		01
02	0503011410	ROLLER BEARING		01
03	0511062169	21Z P 1/2" GEAR		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0503011105	SEAL RING		01
06	0501011027	5/8" X 3-3/4" BOLT		01
07	0571010265	16.5 X 40 X 3 FLAT WASHER		01
08	0503012412	5/8 UNC SELF LOCKING NUT		01

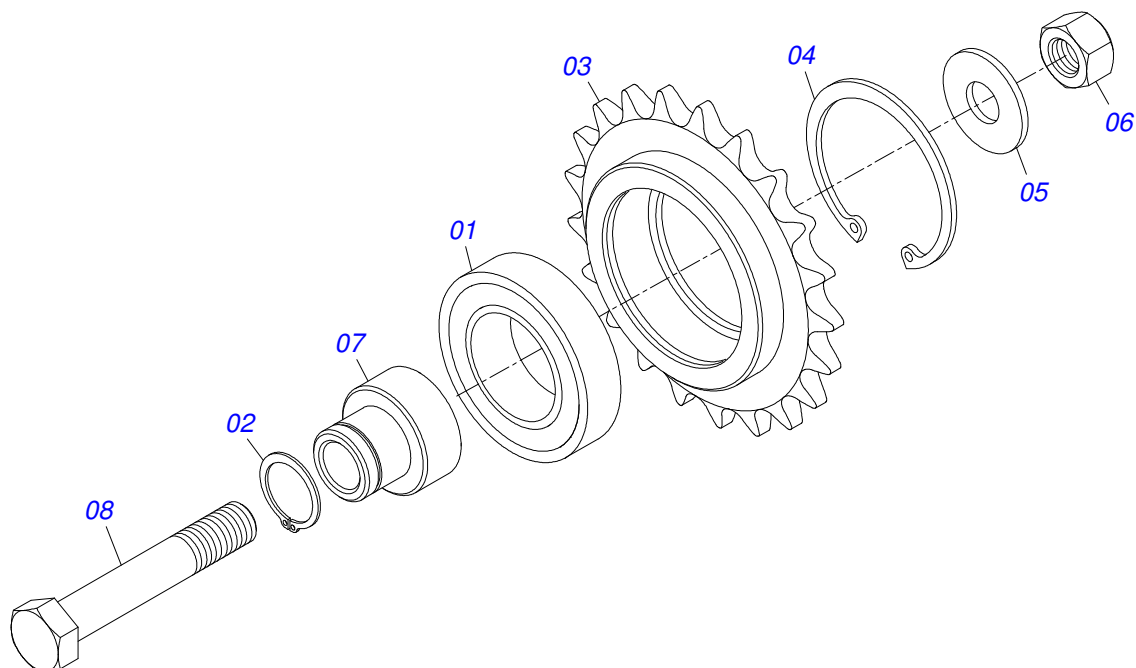

Item	Code	Description	See page	QT
01	0503011410	ROLLER BEARING		01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0511062169	21Z P 1/2" GEAR		01
04	0503011105	SEAL RING		01
05	0571010265	16.5 X 40 X 3 FLAT WASHER		01
06	0503012412	5/8 UNC SELF LOCKING NUT		06
07	0581010936	AXLE TIGHTENER		01
08	0501013233	5/8" X 2-3/4" BOLT		01



www.marchesan.com.br



Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI