

ROW CROP PLANTERS

PST PLUS TITANIUM MAX - FRAME 3870

Code: 0501092876
Series: S-0314
Revision: 00
Date Revision: DEZEMBRO/2020

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111370120	PST PLUS 8/7 CI MH TIT MAX S-0314

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX


0909095528	FRAME ASSY	1
0511051759	FRAME WITH WHEEL 3870	2
0909091619	HEADER ASSY	3
0909094763	08 ROWS PLATFORM SET	4
0909094753	08 ROWS HANDRAIL SET	5
0909092875	GUARD BRACKET	6
0909092133	08 ROWS TRANSMISSION SET	7
0511040424	RH TRANSMISSION DRIVING ASSY	8
0909091622	SEED GEAR BOX (RIGHT)	9
0909092134	SEED GEAR BOX (LEFT)	10
0501058212	SEMI MOUNTED RIGHT CHANGE	11
0501058213	LH GEAR BOX	12
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	13
0501056443	GEAR HOUSING BEARING	14
0501056271	GEARBOX CLOSED BEARING	15
0501054655	CHAIN TENSIONER ASSY	16
0909091623	07/08 ROWS CARRYNG-WHEELS ASSY	17
0511053174	STUB SHAFT HUB ASSY	18
0501058240	WHEEL FASTENER WITH TENSIONER	19
0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	20
0501058244	WHEEL FIXED CHAIN TENSIONER	21
0501058242	WHEEL MOBILE CHAIN TENSIONER	22
0501054428	ASSY HEADER EXTENSOR	23
0909092127	CYLINDER SET	24
0511042474	2.0" X 4" X 18.31" HYDRAULIC CYLINDER	25
0501053834	MALE QUICK COUPLER	26
0511054971	JACK ASSEMBLY	27
0511056598	MANUAL STORAGE TUBE ASSY	28
0909091627	BEAN 08 LINES ASSEMBLY	29
0511055891	HYDRAULIC MARKER ASSY	30
0511058449	HYDRAULIC CYLINDER	31
0501054649	HBM SEQUENTIAL VALVE	32
0501050633	ROW MARKER DISC ASSEMBLY	33
0511053904	ROW MARKER DISC	34
0531050220	SUPPORT FILTER	35
0909095532	SET LABEL ADHESIVE	36
0909095529	SEED FERTILIZER ROW ASSY	37
0531050231	FRONT LINE SEED SHORT RIGHT	38
0531050232	FRONT LINE SEED LONG RIGHT	39
0531050230	SEED SISTEM	40
0511052024	FAST CLOSING SET	41
0501059631	DDD SEED 15 X 15 RIGHT	42
0501059632	DDD SEED 15X15 LEFT	43
0501054167	15" RIGHT OPENING DISC HUB	44
0501054168	15" LEFT DOUBLE DISC HUB	45
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	46
0511058650	SEMI-MOUNTED DEPTH CONTROL	47
0501052627	ASSY DEPTH WHEEL HUB	48
0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	49
0501052297	DEPTH WHEELS REGULATOR ASSY	50
0501052538	DEPTH BAND WITH ARMS	51
0511054333	COMPACT WHEEL RIGHT WITH BEARING	52
0511054334	COMPACT WHEEL LEFT WITH BEARING	53
0501052908	COMPACTOR WHEEL WITH BEARING	54
0511053252	FERTILIZER SHORT ROW WITH LEFT DDD/18" DC	55



MARCHESAN


INDEX

0511053253	FERTILIZER LONG ROW WITH RIGHT DDD/18" DC		56
0511053251	LONG ARM FERTILIZER ROW WITH RIGHT DOUBLE DISC		57
0511053250	SHORT ARM FERTILIZER ROW WITH LEFT DOUBLE DISC		58
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR		59
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR		60
0511044549	18" COULTER BLADE ASSY FOR SHORT ROW		61
0511044573	18" COULTER BLADE ASSY FOR LONG ROW		62
0501058423	FERTILIZER ROD SPRING ROW		63
0503062066	DISC SET WITH CORN RING		64
0503062067	DISC SET / RING SOY 90F TITANIUM		65
0501110231	SCARIFIER HEAD WITH SPIKE 0061		66

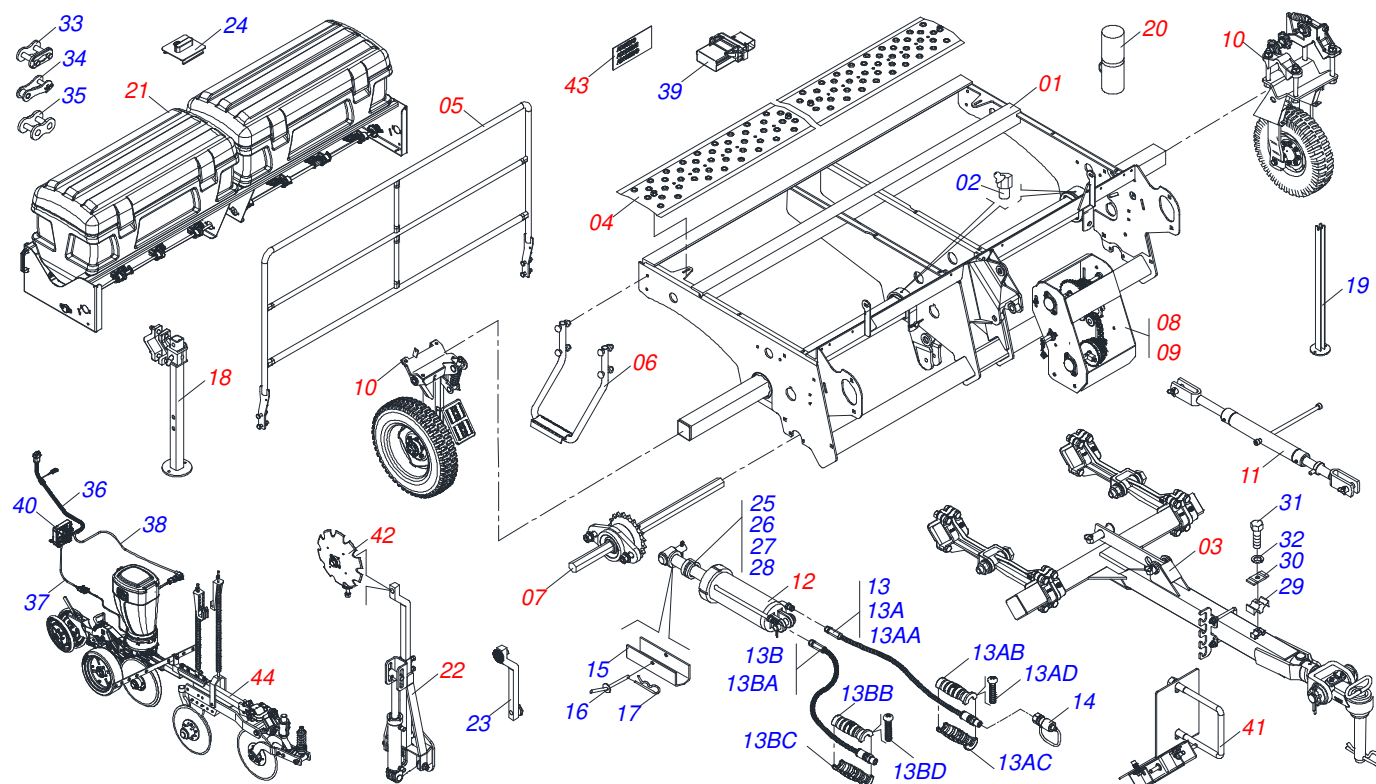

Item	Code	Description	See page	QT
01	0511051759	FRAME WITH WHEEL 3870	2	01
02	0503010003	1845 GREASE FITTING		04
03	0909091619	HEADER ASSY	3	01
04	0909094763	08 ROWS PLATFORM SET	4	01
05	0909094753	08 ROWS HANDRAIL SET	5	01
06	0909092875	GUARD BRACKET	6	02
07	0909092133	08 ROWS TRANSMISSION SET	7	01
08	0909091622	SEED GEAR BOX (RIGHT)	9	01
09	0909092134	SEED GEAR BOX (LEFT)	10	01
10	0909091623	07/08 ROWS CARRYNG-WHEELS ASSY	17	01
11	0501054428	ASSY HEADER EXTENSOR	23	01
12	0909092127	CYLINDER SET	24	01
13	0511059395	HOSE KIT HYDRAULIC		01
13A	0521056046	3/8" X 23.6" TR-TR HOSE ASSY		01
13AA	0501081660	HOSE		01
13AB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
13AC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
13AD	0503018952	PLASTIC BOLT		06
13B	0521056047	3/8" X 23.6" TR-TR HOSE ASSY		01
13BA	0501081660	HOSE		01
13BB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
13BC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
13BD	0503018952	PLASTIC BOLT		06
14	0501053834	MALE QUICK COUPLER	26	02
15	0521013022	TRANSPORT LOCK		01
16	0501068994	8,30 X 78 LOCK PIN		01
17	0503030168	HITCH PIN CLIP		01
18	0511054971	JACK ASSEMBLY	27	02
19	0501065677	STRUT		02
20	0511056598	MANUAL STORAGE TUBE ASSY	28	01
21	0909091627	BEAN 08 LINES ASSEMBLY	29	01


Item	Code	Description	See page	QT
22	0511055891	HYDRAULIC MARKER ASSY	30	01
23	0511066652	400 TURNBUCKLE		02
24	0503032624	FERTILIZER HOPPER GUTTER		04
25	0501047895	ROD STOP		01
26	0501047885	ROD STOP		01
27	0501047886	ROD STOP		01
28	0501047887	ROD STOP		01
29	0502012702	BODY SUPPORT CLAMP		01
30	0531011180	UPPER BODY CLIP		01
31	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		01
32	0503010180	7/16" SPRING WASHER		01
33	0503011751	REDUCTION		04
34	0503010780	N-2050 AMENDMENT		02
35	0503010951	REDUCTION		02
36	0503019958	IMPLEMENT EXTENSION CABLE		01
37	0503019962	MASTER WHIP		01
38	0503019961	MASTER WHIP		03
39	0503017945	CENTRAL VISUM 1040002		01
40	0503063275	ELECTRICAL ASSEMBLY		01
41	0531050220	SUPPORT FILTER	35	01
42	0501050633	ROW MARKER DISC ASSEMBLY	33	02
43	0909095532	SET LABEL ADHESIVE	36	01
44	0909095529	SEED FERTILIZER ROW ASSY	37	08

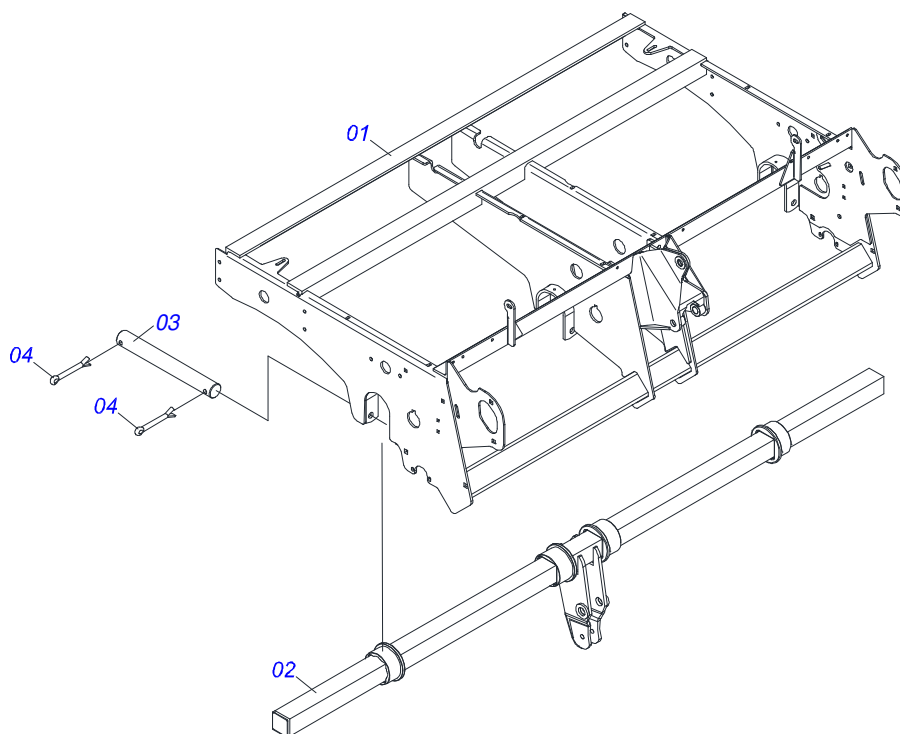


Item	Code	Description	See page	QT
01	0521063032	FRAME		01
02	0521063048	PIVOT SHAFT CARRYING WHEELS		01
03	0521010569	COUPLING SHAFT		04
04	0503010571	1/4" X 1.1/2 COTTERPIN		08

HEADER ASSY


0909091619

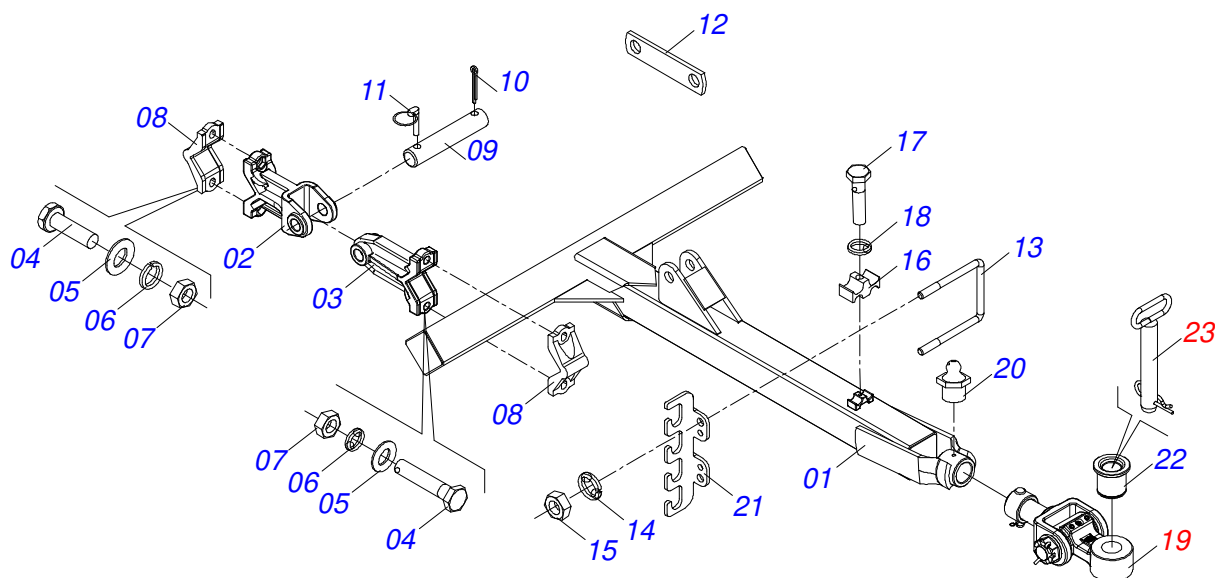


Item	Code	Description	See page	QT
01	0511065581	DRAWBAR	01	
02	0502012328	DRAWBAR SUPPORT FRONT FIXATION	02	
03	0502012329	DRAWBAR FIXATION REAR SUPPORT	02	
04	0503011084	3/4" X 5" BOLT	08	
05	0501010322	FLAT WASHER	08	
06	0503010023	3/4" SPRING WASHER	08	
07	0503010014	3/4" HEX NUT	08	
08	0502012330	SUPPORT FIXER PIVOT	04	
09	0561014393	COUPLING SHAFT	02	
10	0503010523	1/4" X 2" COTTERPIN	02	
11	0503030119	LOCK PIN	02	
12	0531015979	DRAWBAR LOCK	01	
13	0521014021	1/2" X 4.5" X 5.4" FASTENER	01	
14	0503010019	1/2" SPRING WASHER	02	
15	0503010060	1/2 UNC G.5 ZN HEX NUT	02	
16	0502012702	BODY SUPPORT CLAMP	01	
17	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN	01	
18	0503010180	7/16" SPRING WASHER	01	
19	0511054601	HITCH ARTICULATED TRACTOR	01	
20	0503010002	1800 GREASE FITTING	01	
21	0541011767	HOSE FIXATION	01	
22	0571014769	SLEEVE HITCH ARTICULATION 1.1/2	01	
23	0511053179	TRACTOR COUPLING SHAFT	01	

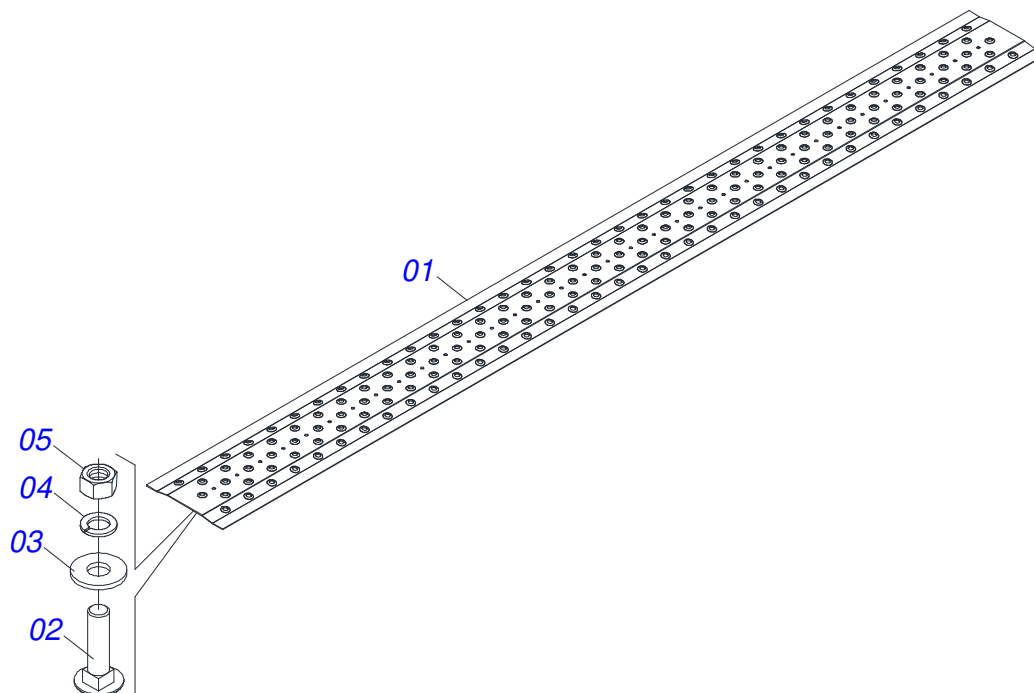


Item	Code	Description	See page	QT
01	0571011103	PLATAFORM 3550		02
02	0501010096	3/8" X 2" BOLT		02
03	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
04	0503010025	3/8" SPRING WASHER		02
05	0503010026	3/8" NUT		02

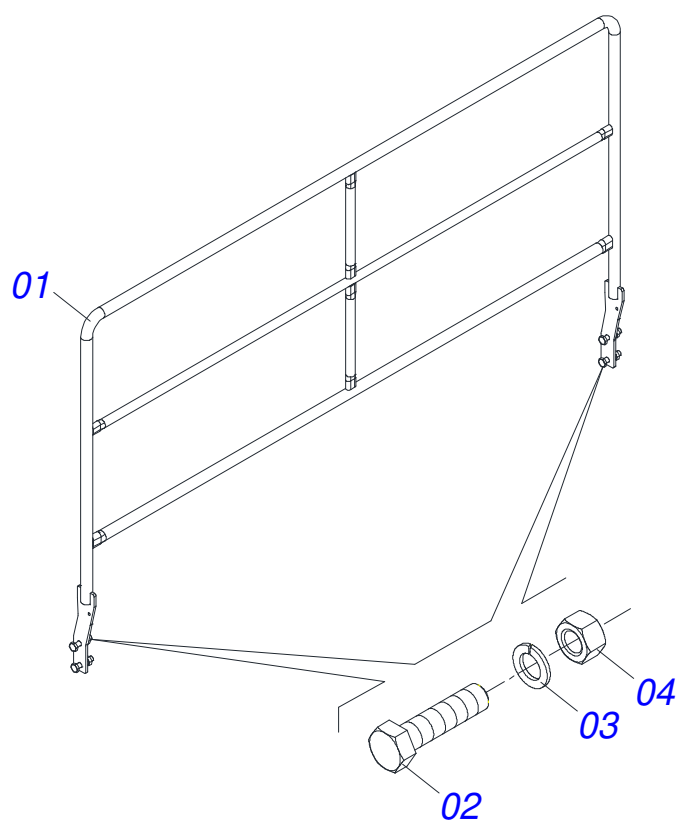

Item	Code	Description	See page	QT
01	0521063059	HANDRAIL		01
02	0503010395	1/2" X 1-1/4" BOLT		04
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2 UNC G.5 ZN HEX NUT		04

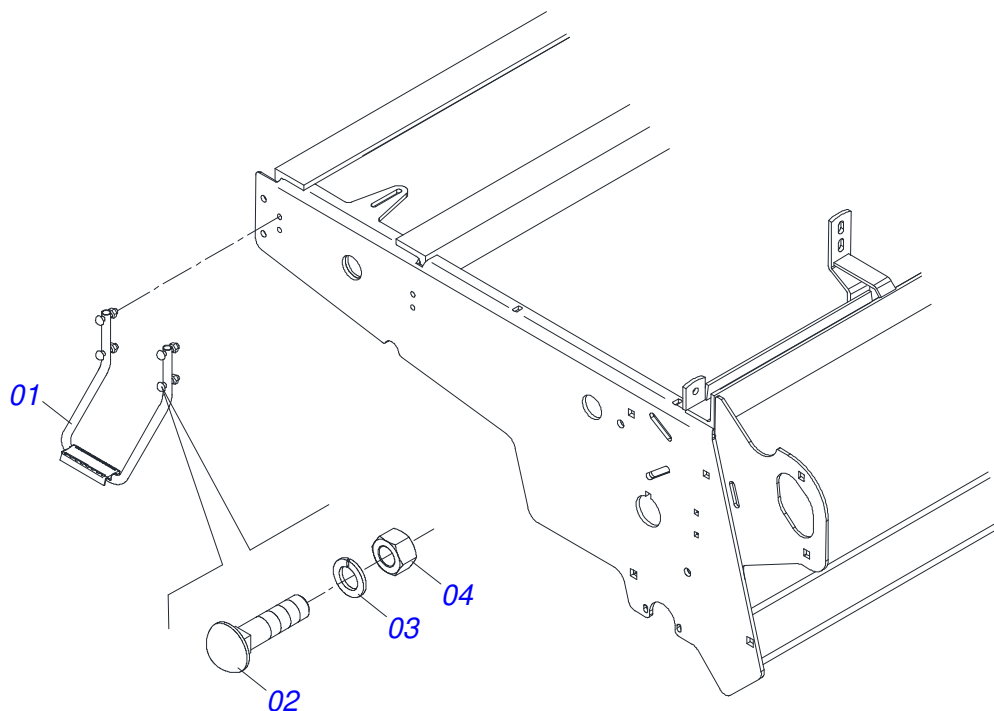


Item	Code	Description	See page	QT
01	0511064807	STIRRUP		02
02	0501018526	3/8" X 2" BOLT		08
03	0503010025	3/8" SPRING WASHER		08
04	0503010026	3/8" NUT		08

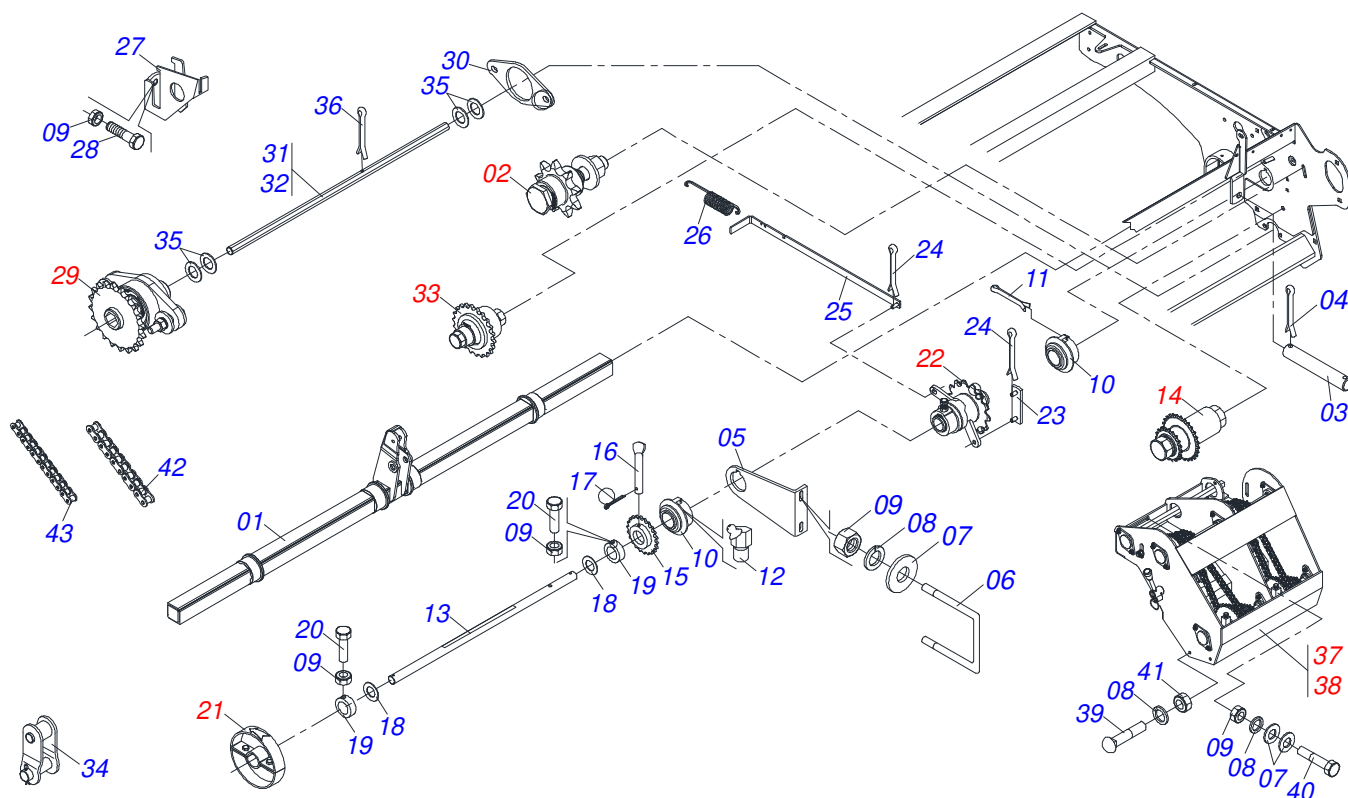

Item	Code	Description	See page	QT
01	0521063048	PIVOT SHAFT CARRYING WHEELS		01
02	0501055112	MICRO GRANULATED CHAIN TENSIONER		02
02..	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY		02
02..	0501058254	UPPER SEED CHAIN TENSIONER		02
03	0521010569	COUPLING SHAFT		04
04	0503010571	1/4" X 1.1/2 COTTERPIN		08
05	0511065606	MOTOR CHOCK SUPPORT BEARING AXLE		02
06	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
07	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		14
08	0503010019	1/2" SPRING WASHER		12
09	0503010060	1/2 UNC G.5 ZN HEX NUT		14
10	0501110639	BEARING		06
11	0503010300	5/32" X 1" COTTERPIN		06
12	0503011099	GREASE FITTING		06
13	0571011102	MOTOR SHAFT		02
14	0511051757	DOUBLE GEAR		02
15	0511065562	20Z GEAR		02
16	0521010530	JUNCTION AXLE 6,80 X 60		02
17	0503010140	1/8" X 3/4" COTTERPIN		02
18	0501018466	FLAT WASHER		04
19	0511015961	LOCK BUSHING		04
20	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
21	0501052560	MOTOR AXLE SIGNAL		02
22	0511040424	RH TRANSMISSION DRIVING ASSY	8	02
23	0501065167	RATCHET PIVOT ARM		02
24	0503010140	1/8" X 3/4" COTTERPIN		06
25	0521062245	DISASSEMBLE RATCHET		02
26	0503030198	0.6" X 2.4" X 0.1" EXTENSION SPRING		02
27	0501069850	RATCHET BAR DES.		02
28	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		02
29	0511051980	DOUBLE BEARING		02


Item	Code	Description	See page	QT
30	0541010568	CHOCK BEARING		02
31	0571011100	5/8 X 1905 HEX AXLE		01
32	0571011101	5/8 X 1675 HEX AXLE		01
33	0501058236	BEARING WITH 21Z GEAR		02
34	0503011751	REDUCTION		04
35	0511017305	FLAT WASHER		06
36	0503010018	5/32 X 1-1/2 COTTERPIN		04
37	0511048701	CHANGE FULL RIGHT		01
38	0511048702	CHANGE FULL LEFT		01
39	0501010243	1/2" X 1-1/2" BOLT		04
40	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
41	0503012682	1/2" BSW NUT		04
42	0503012772	40-1 CHAIN X 80 LINK + REDECTION		02
43	0503013252	40-1 X CHAIN X 87 LINK + MENDING		04

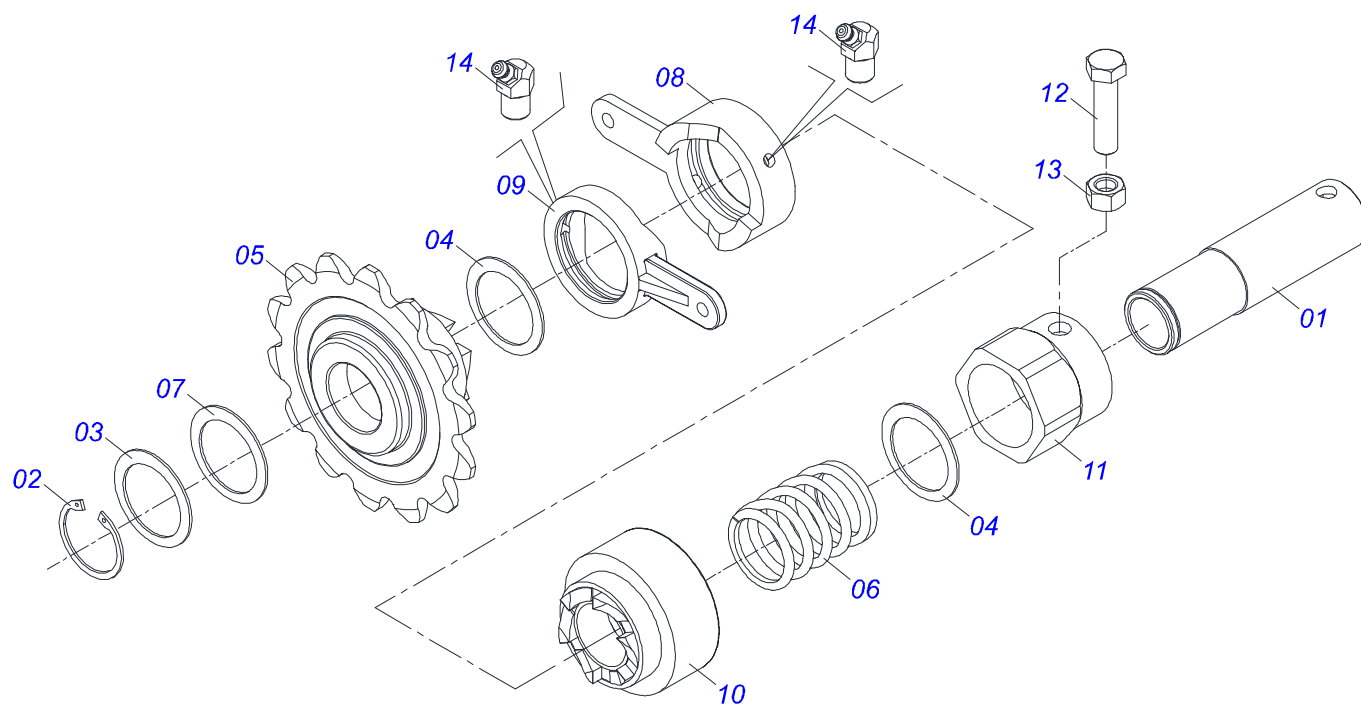

Item	Code	Description	See page	QT
01	0521017590	GUIDE AXLE		01
02	0503010542	501045 CLAMPING RING (FOR AXLE)		01
03	0521017593	FLAT WASHER		01
04	0501019734	FLAT WASHER		02
05	0502011329	14Z GEAR WITH RIGHT DRAGGER		01
06	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
07	0501019735	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		01
09	0502010711	RIGHT CAM,LARGER		01
10	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
11	0502011996	SLEEVE FIXER		01
12	0503030678	BOLT 1/2 UNC X 1.1/2 C508 G.5 ZN		01
13	0503010060	1/2 UNC G.5 ZN HEX NUT		01
14	0503010003	1845 GREASE FITTING		02

SEED GEAR BOX (RIGHT)


0909091622

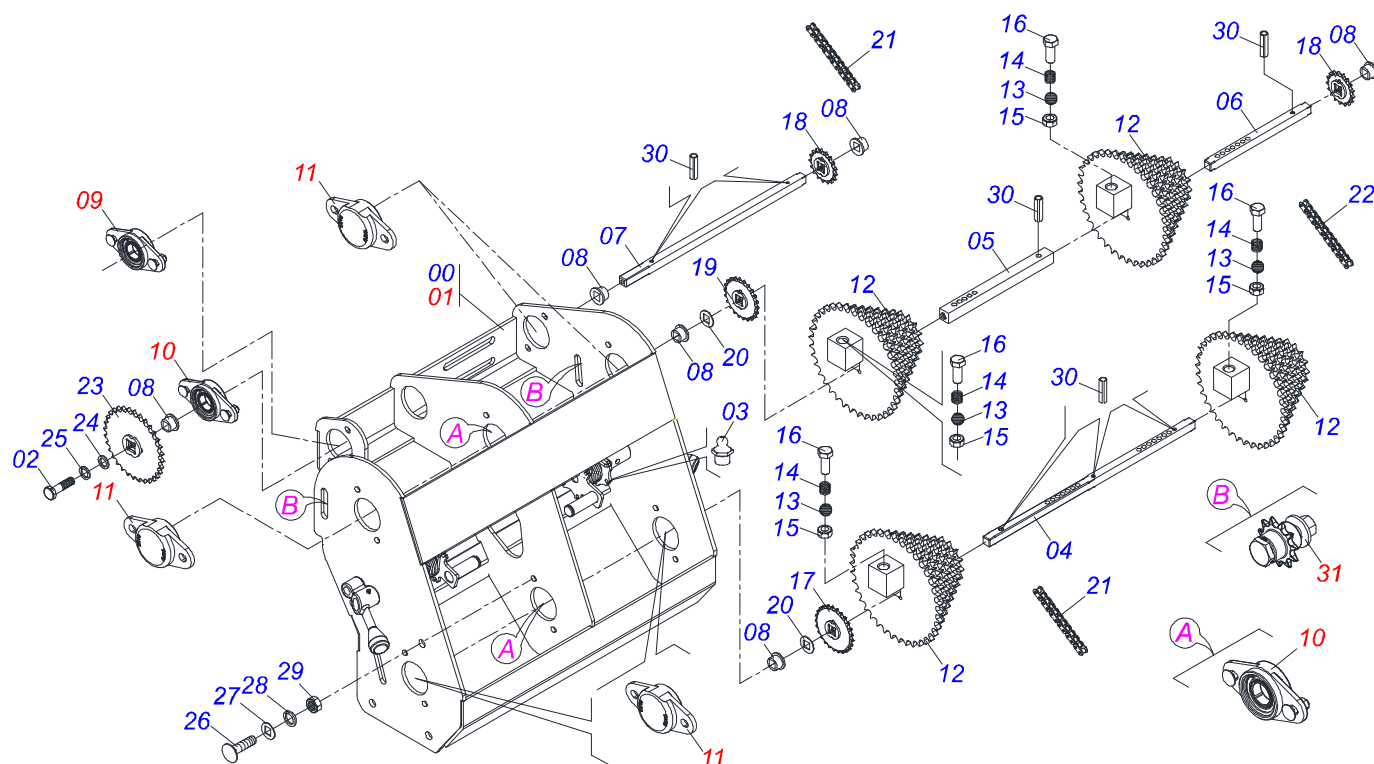

Item	Code	Description	See page	QT
00	0511048701	CHANGE FULL RIGHT		01
01	0501058212	SEMI MOUNTED RIGHT CHANGE	11	01
02	0503010256	3/8" X 3/4" BOLT		01
03	0503010002	1800 GREASE FITTING		02
04	0551018209	DRIVING AXLE		01
05	0521018259	DRIVEN AXLE		01
06	0551018210	DRIVEN AXLE		01
07	0551018211	INTERM SHAFT		01
08	0503030303	SUPPORT WASHER		05
09	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	13	01
10	0501056443	GEAR HOUSING BEARING	14	02
11	0501056271	GEARBOX CLOSED BEARING	15	05
12	0502040868	GEAR CONE REPLACEMENT		04
13	0503012389	1/2 BALL		04
14	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
15	0503010060	1/2 UNC G.5 ZN HEX NUT		06
16	0503010395	1/2" X 1-1/4" BOLT		04
17	0511061822	25Z P0.5" GEAR SQUARE HOL		01
18	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
19	0511061759	22Z P12,70 FQ 3/4" GEAR		01
20	0521018630	1.4" X SQUARE 0.8" WASHER		02
21	0503012204	40-1 CHAIN X 82 LINK + RED		02
22	0503012713	40-1 CHAIN X 45 LINK + MEN		01
23	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		01
24	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		01
25	0503010025	3/8" SPRING WASHER		01
26	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		08
27	0501010694	FLAT WASHER		08
28	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
29	0503010337	5/16" NUT		08
30	0503010292	701164 6 X 40 SPRING PIN		02




Item	Code	Description	See page	QT
31	0501054655	CHAIN TENSIONER ASSY	16	02

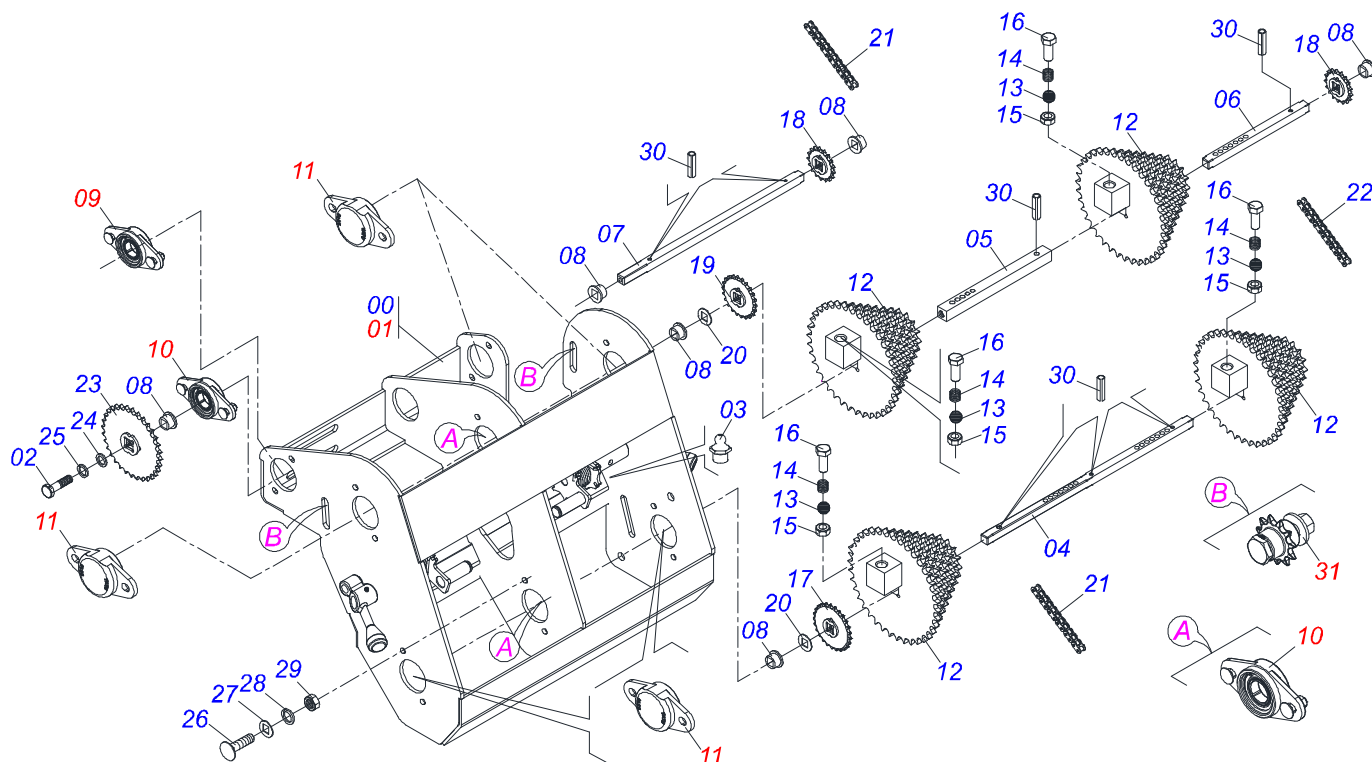


Item	Code	Description	See page	QT
00	0511048702	CHANGE FULL LEFT		01
01	0501058213	LH GEAR BOX	12	01
02	0503010256	3/8" X 3/4" BOLT		01
03	0503010002	1800 GREASE FITTING		02
04	0551018209	DRIVING AXLE		01
05	0521018259	DRIVEN AXLE		01
06	0551018210	DRIVEN AXLE		01
07	0551018211	INTERM SHAFT		01
08	0503030303	SUPPORT WASHER		05
09	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	13	01
10	0501056443	GEAR HOUSING BEARING	14	02
11	0501056271	GEARBOX CLOSED BEARING	15	05
12	0502040868	GEAR CONE REPLACEMENT		04
13	0503012389	1/2 BALL		04
14	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
15	0503010060	1/2 UNC G.5 ZN HEX NUT		06
16	0503010395	1/2" X 1-1/4" BOLT		04
17	0511061822	25Z P0.5" GEAR SQUARE HOL		01
18	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
19	0511061759	22Z P12,70 FQ 3/4" GEAR		01
20	0521018630	1.4" X SQUARE 0.8" WASHER		02
21	0503012204	40-1 CHAIN X 82 LINK + RED		02
22	0503012713	40-1 CHAIN X 45 LINK + MEN		01
23	0511063105	34Z P 1/2" GEAR SQUARE HOLE 3/4"		01
24	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		01
25	0503010025	3/8" SPRING WASHER		01
26	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		08
27	0501010694	FLAT WASHER		08
28	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
29	0503010337	5/16" NUT		08
30	0503010292	701164 6 X 40 SPRING PIN		02




Item	Code	Description	See page	QT
31	0501054655	CHAIN TENSIONER ASSY	16	02

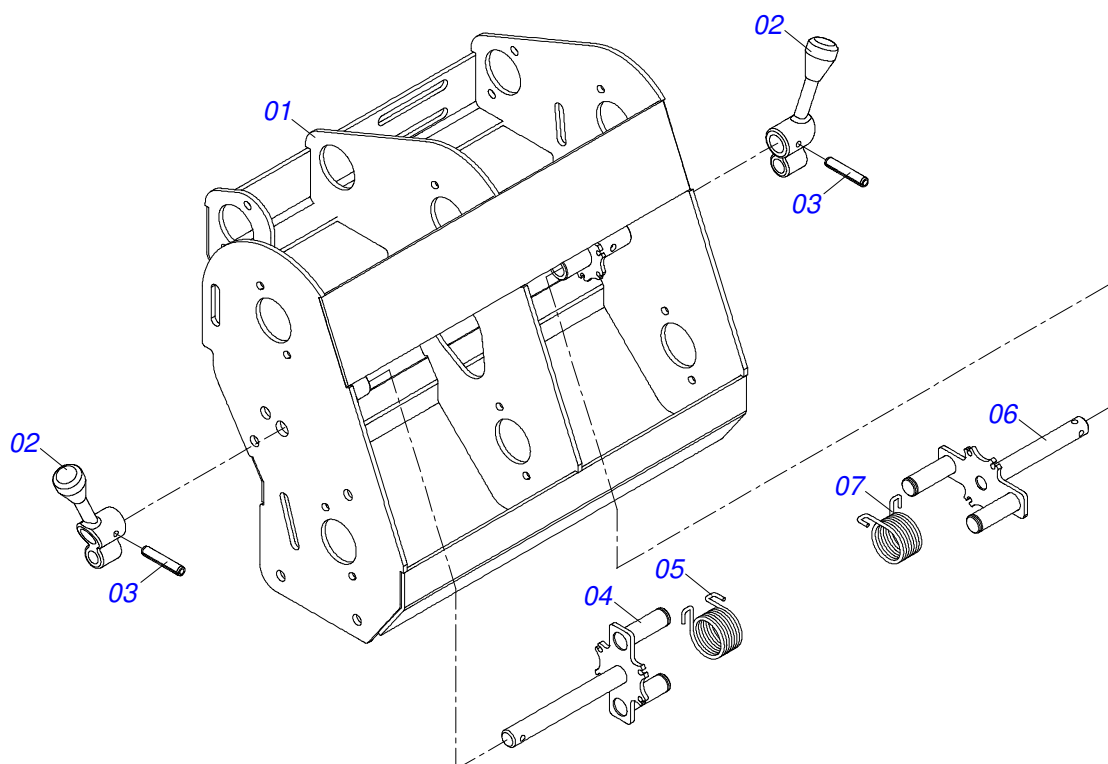


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TIGHTENER LEVER		02
03	0503010292	701164 6 X 40 SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING		01

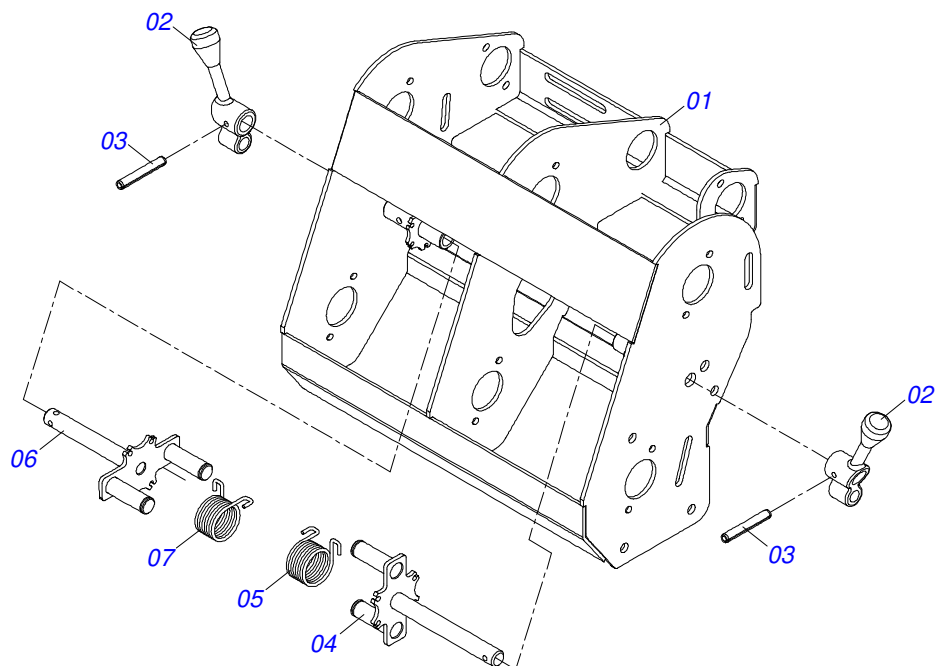


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TIGHTENER LEVER		02
03	0503010292	701164 6 X 40 SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING		01

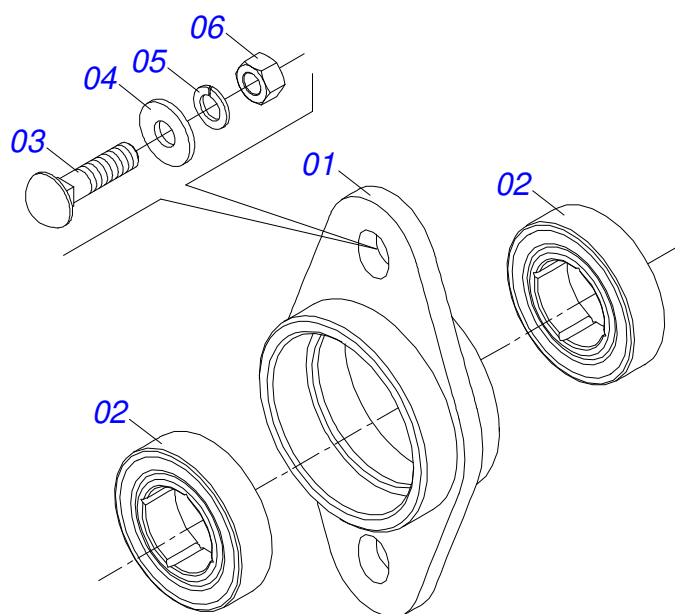


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

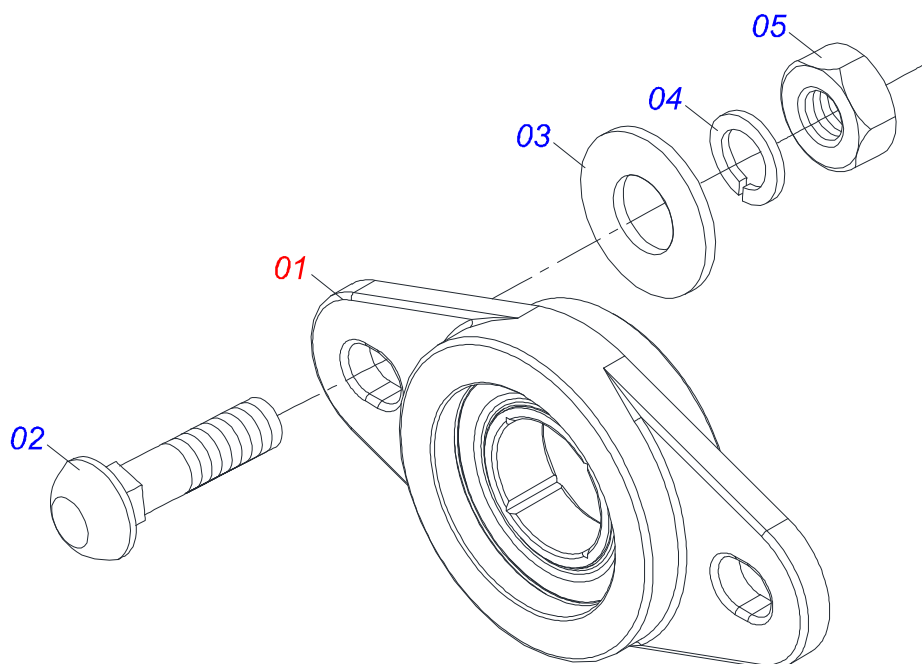


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLER		01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

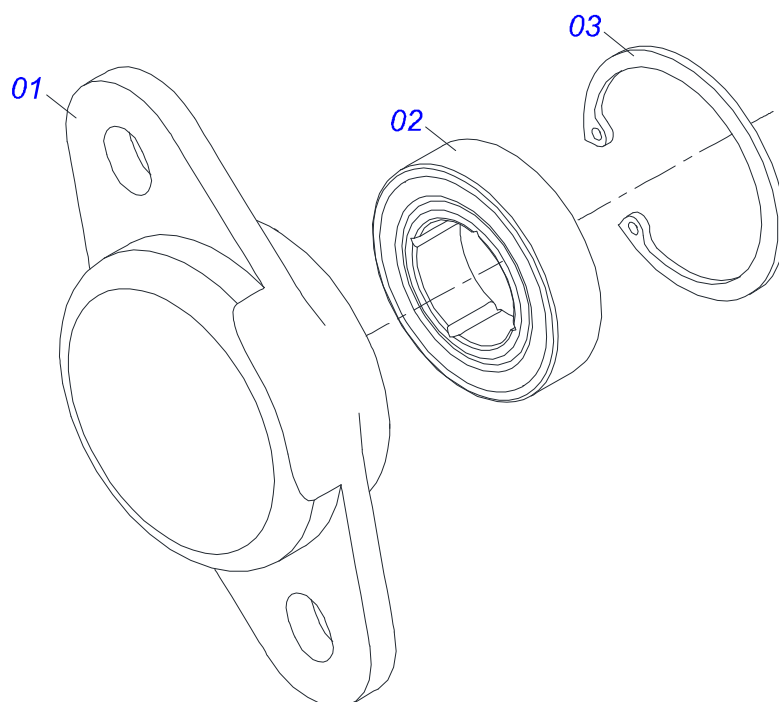


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

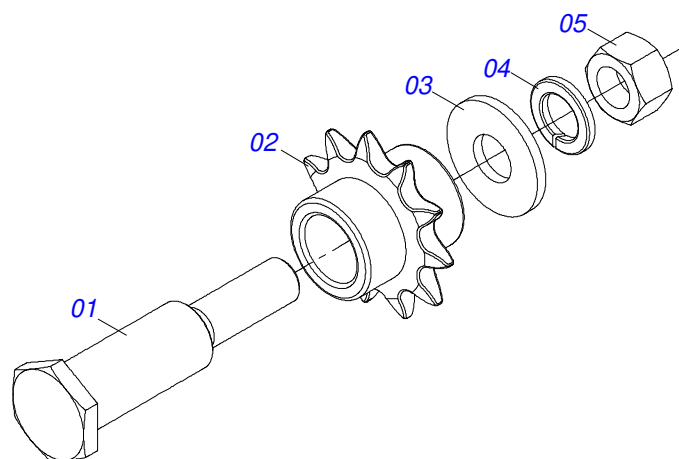


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

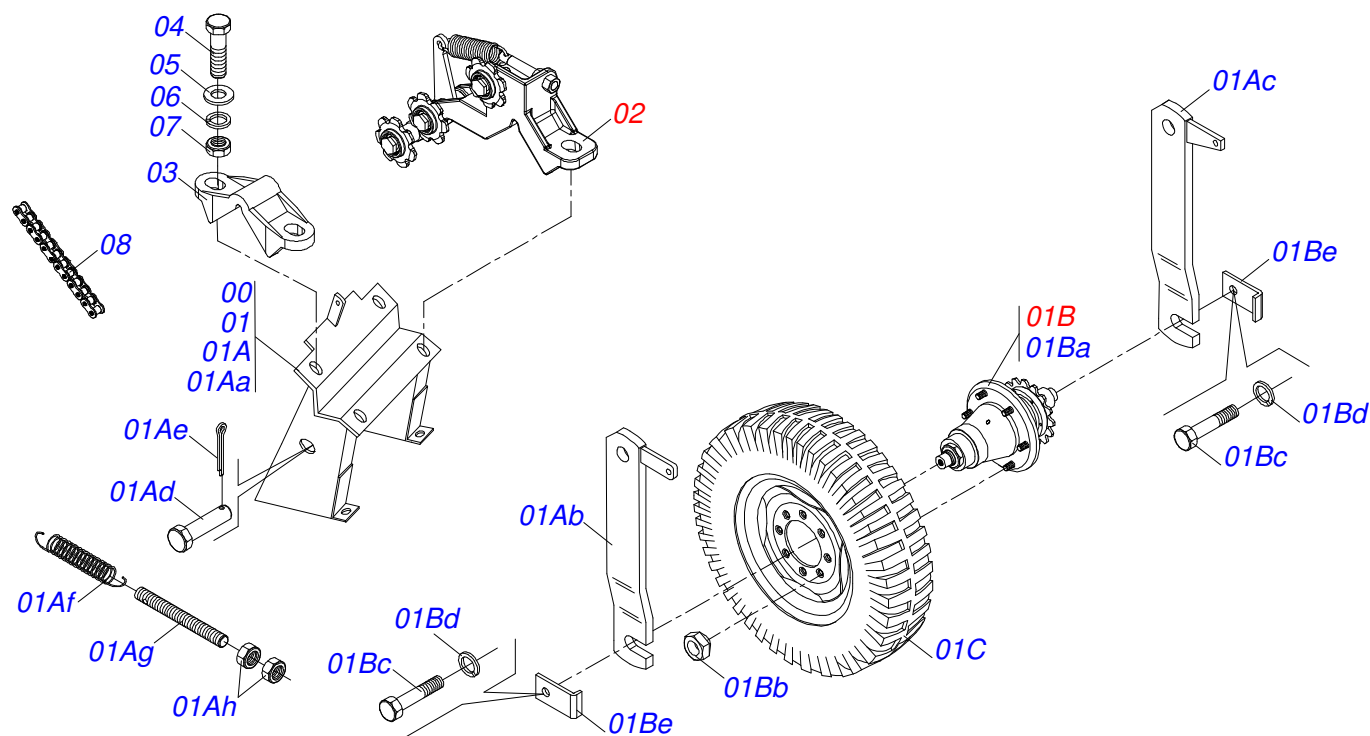


Item	Code	Description	See page	QT
00	0511049139	CARRYNG-WHEELS ASSY		01
01	0501055479	WHEEL ARM ASSY		01
01A	0501055389	WHEEL ARM ASSY		01
01Aa	0501067549	WHEEL SUPPORT		01
01Ab	0511065547	WHEEL RIGHT ARM		01
01Ac	0511065548	WHEEL LEFT ARM		01
01Ad	0521010648	1.2" X 2.2" COUPLING SHAFT		02
01Ae	0503010523	1/4" X 2" COTTERPIN		02
01Af	0503030425	1" X 6" X 0.2" TRACTION SPRING		02
01Ag	0501013491	5/8" TENSIONER SPRING		03
01Ah	0503010013	5/8" NUT		06
01B	0511053174	STUB SHAFT HUB ASSY	18	01
01Ba	0511053874	WITHOUT WHEELS TIRE		01
01Bb	0503013001	9/16" CONICAL NUT		06
01Bc	0503011167	M16 X 2 X 30 BOLT		02
01Bd	0503010027	5/8" SPRING WASHER		02
01Be	0521012190	AXLE LOCK		03
01C	0503060112	WHEEL AND TIRE ASSY - 16-10 L		01
02	0501058240	WHEEL FASTENER WITH TENSIONER	19	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503010797	3/4" X 4" BOLT		04
05	0501010322	FLAT WASHER		04
06	0503010023	3/4" SPRING WASHER		04
07	0503010014	3/4" HEX NUT		04
08	0503015345	CHAIN		01

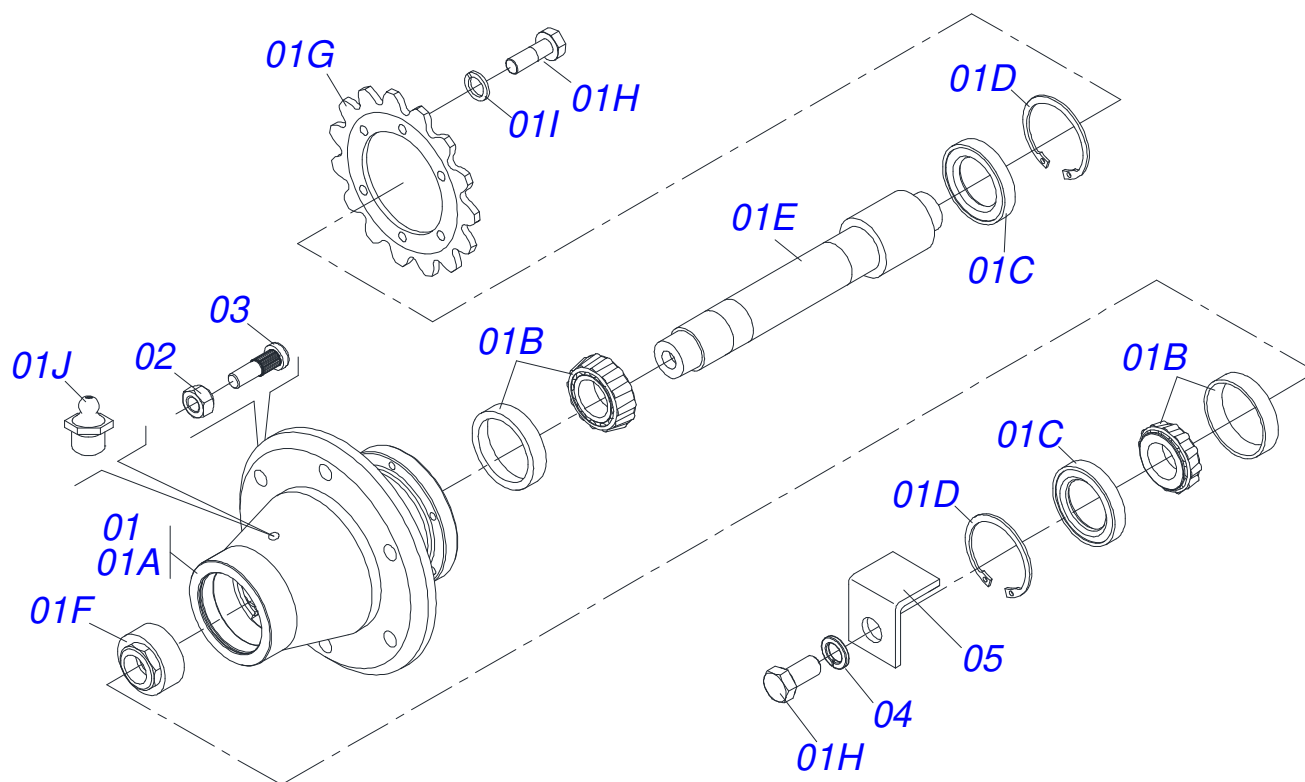


Item	Code	Description	See page	QT
01	0511053874	WITHOUT WHEELS TIRE		01
01A	0501110737	CARRYING WHEEL HUB		01
01B	0503010037	30207 ROLLER BEARING		02
01C	0503010590	00674-B SEAL		02
01D	0503010370	502072 CLAMPING RING (FOR AXLE)		02
01E	0511015300	WHEELS AXLE		01
01F	0502040663	ADJUSTMENT NUT		01
01G	0502011339	15Z GEAR P 1.25"		01
01H	0503010240	BOLT		06
01I	0503011444	SPRING WASHER		06
01J	0503010002	1800 GREASE FITTING		01
01K	1882970002	GREASE SOAP		01
02	0503013001	9/16" CONICAL NUT		06
03	0503011167	M16 X 2 X 30 BOLT		02
04	0503010027	5/8" SPRING WASHER		02
05	0521012190	AXLE LOCK		02

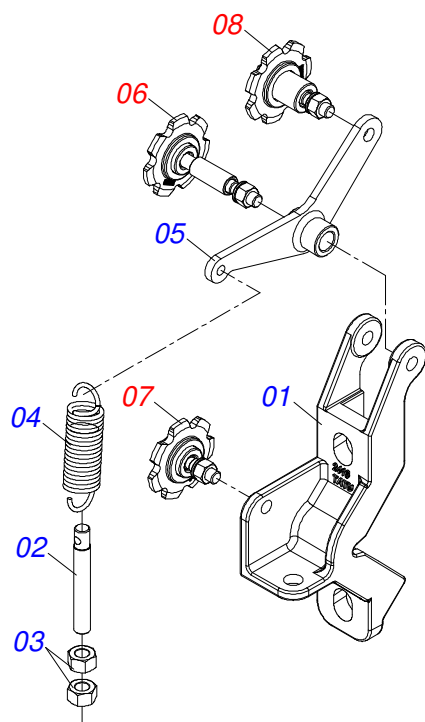


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8" NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	20	01
07	0501058244	WHEEL FIXED CHAIN TENSIONER	21	01
08	0501058242	WHEEL MOBILE CHAIN TENSIONER	22	01

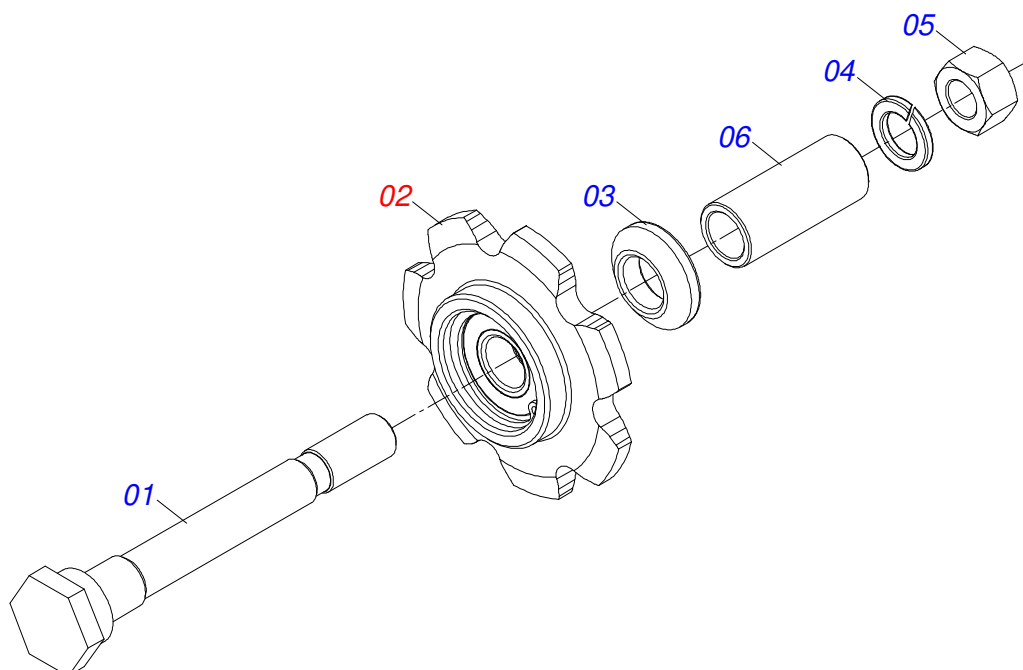


Item	Code	Description	See page	QT
01	0551018245	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0551018239	SLEEVE 19 X 13,50 X 45		01

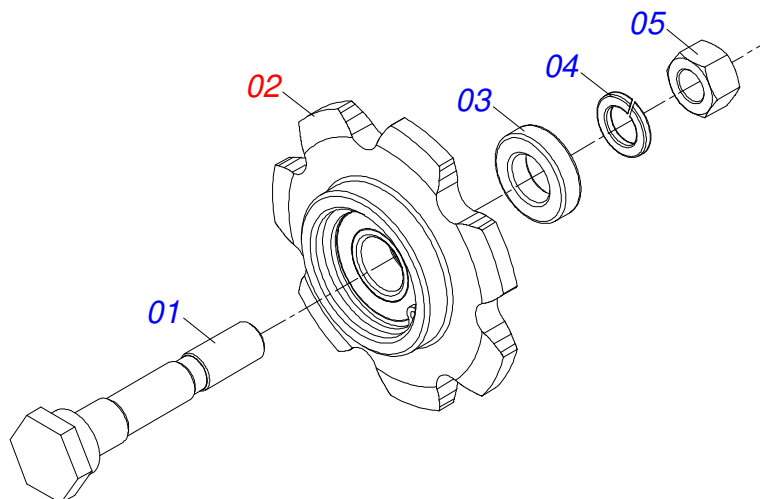


Item	Code	Description	See page	QT
01	0551018252	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

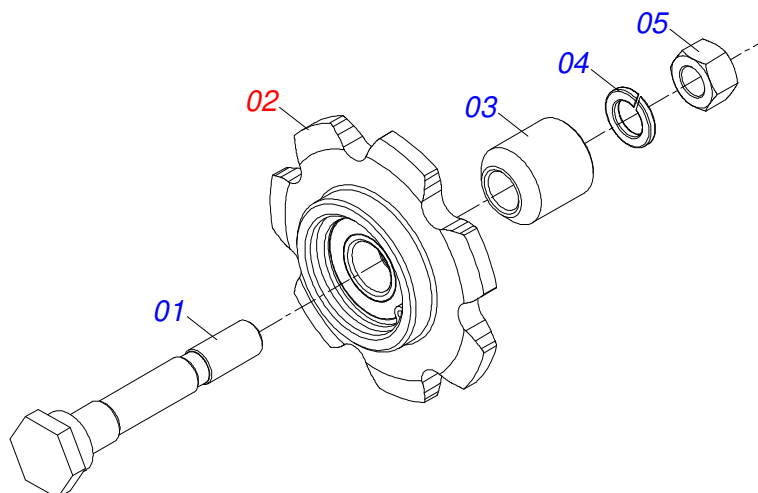


Item	Code	Description	See page	QT
01	0551018244	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0591017923	15,30 X 30 X 32 SLEEVE		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

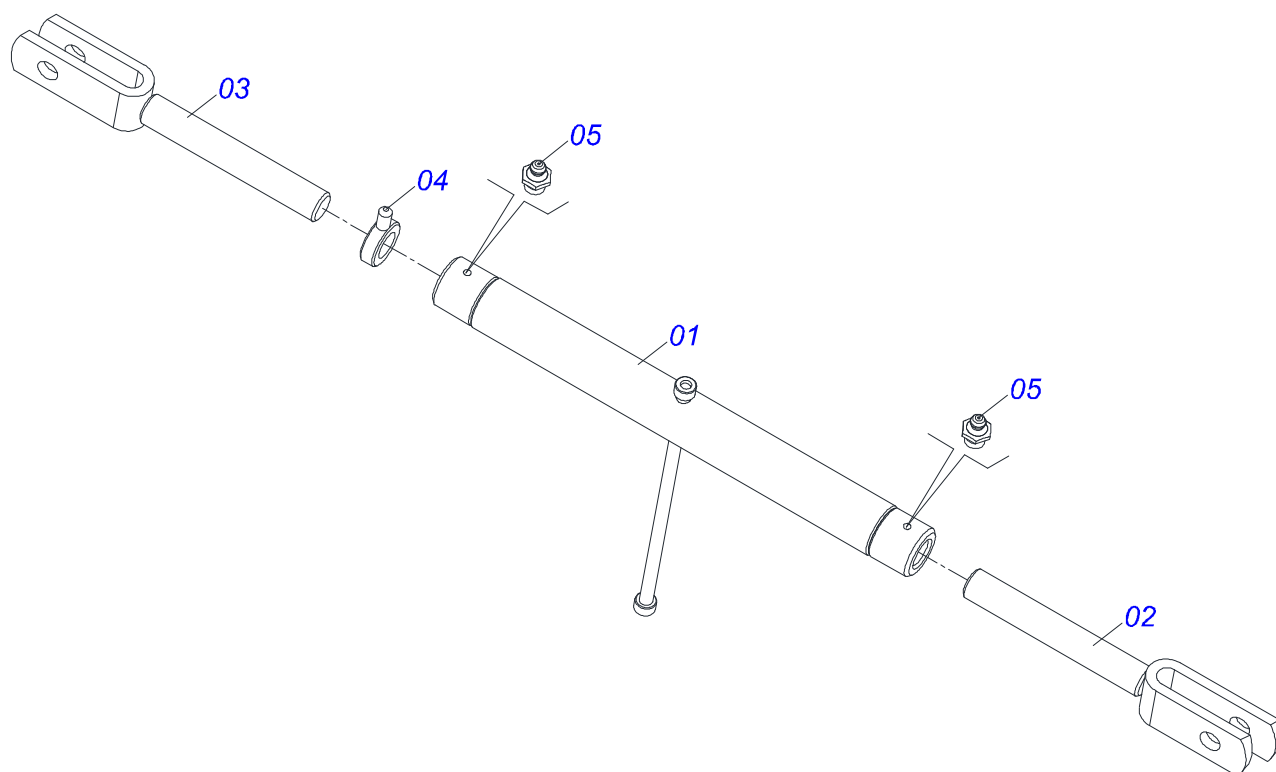


Item	Code	Description	See page	QT
01	0501067353	508 TURNBUCKLE		01
02	0511062887	RIGHT TURNBUCKLE		01
03	0511062888	LH TURNBUCKLE		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

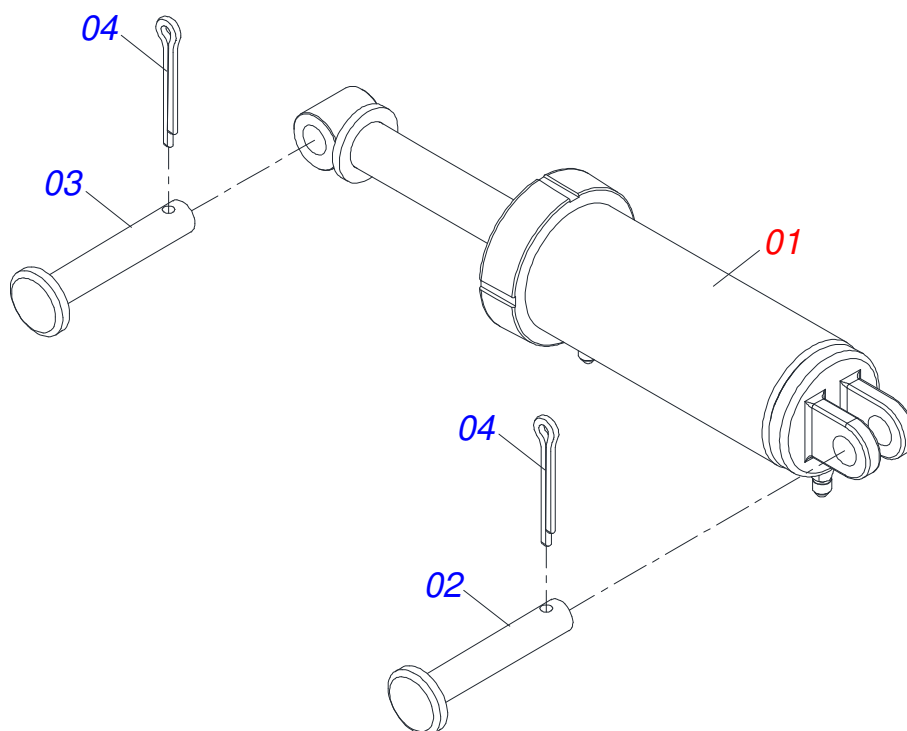


Item	Code	Description	See page	QT
01	0511042474	2.0" X 4" X 18.31" HYDRAULIC CYLINDER	25	01
02	0521010588	0.9" X 7.0" COUPLING SHAFT		01
03	0521012536	COUPLING SHAFT		01
04	0503010523	1/4" X 2" COTTERPIN		02

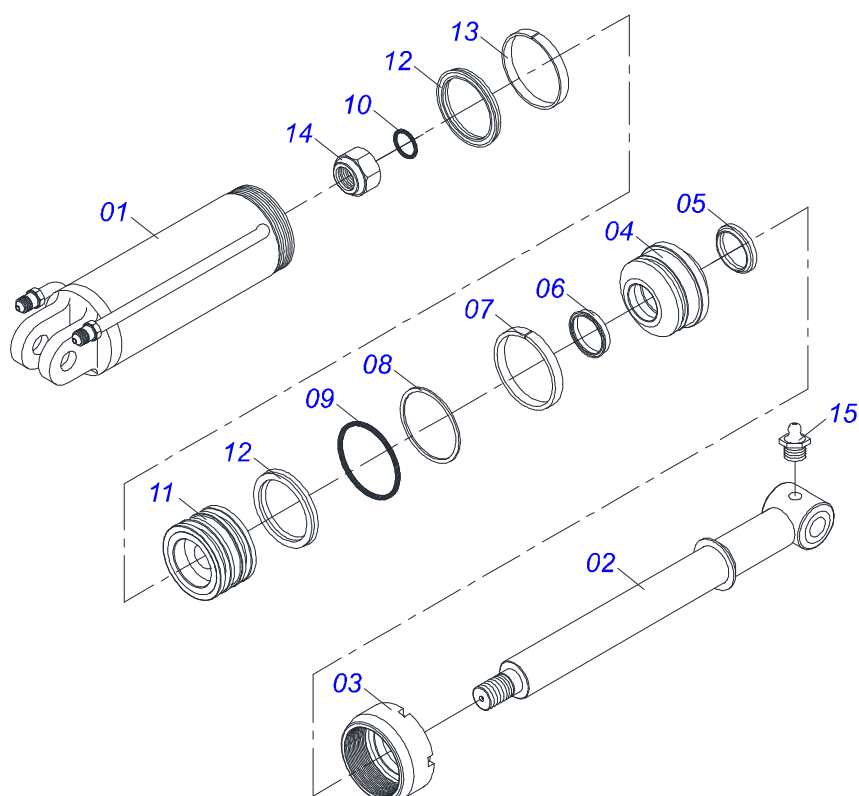


Item	Code	Description	See page	QT
01	0511065439	4" X 6.3" CYLINDER CASE		01
02	0511062164	2" X 13.35" TURNBUCLE WITH BUSHING		01
03	0502010017	4" HEAD		01
04	0502010778	2" X 4.2" RING SUPPORT		01
05	0503010039	D-2000 SCRAPER RING		01
06	0503010991	1870-2000-375-B GASKET		01
07	0503010952	W2-2250-500 RING		01
08	0503011061	8-342 BACK-UP RING		01
09	0503010338	2-342 N 3006-9B O'RING		01
10	0503010345	2-218 N 3006-9B O'RING		01
11	0502010992	2.0" X 4.0" PISTON		01
12	0503010043	PACKING 3750-3250		02
13	0503010994	W2-4000-500 PK RING G.E		01
14	0503010817	1.1/4" SELF LOCKING NUT		01
15	0503010002	1800 GREASE FITTING		01

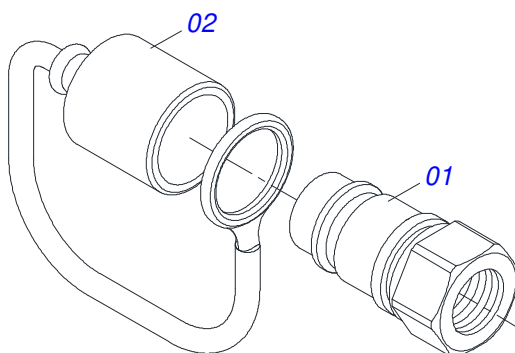


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

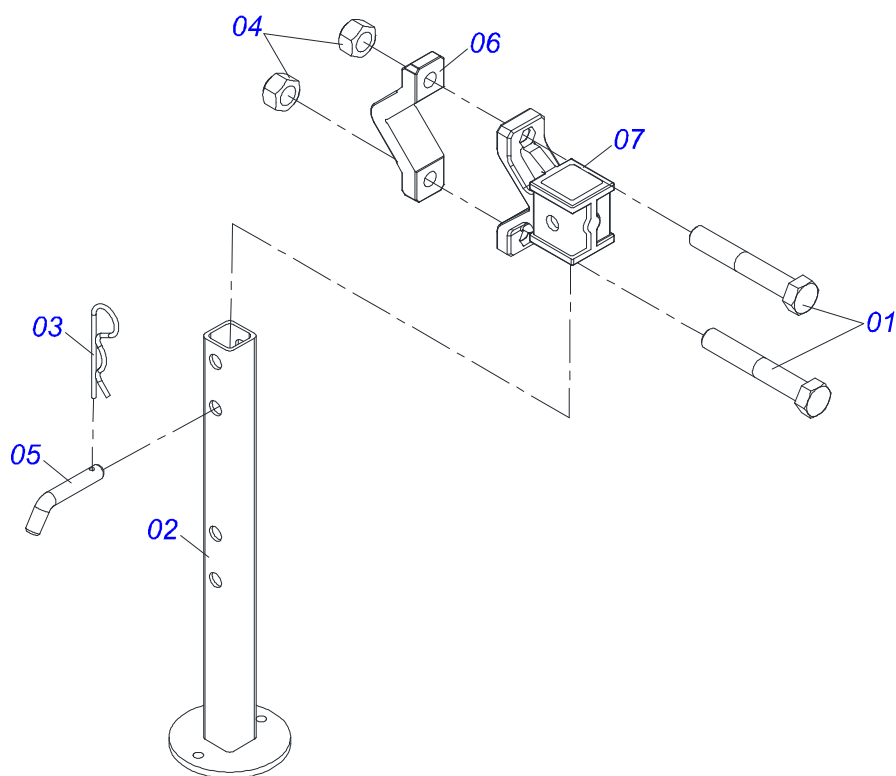


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HITCH PIN CLIP		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

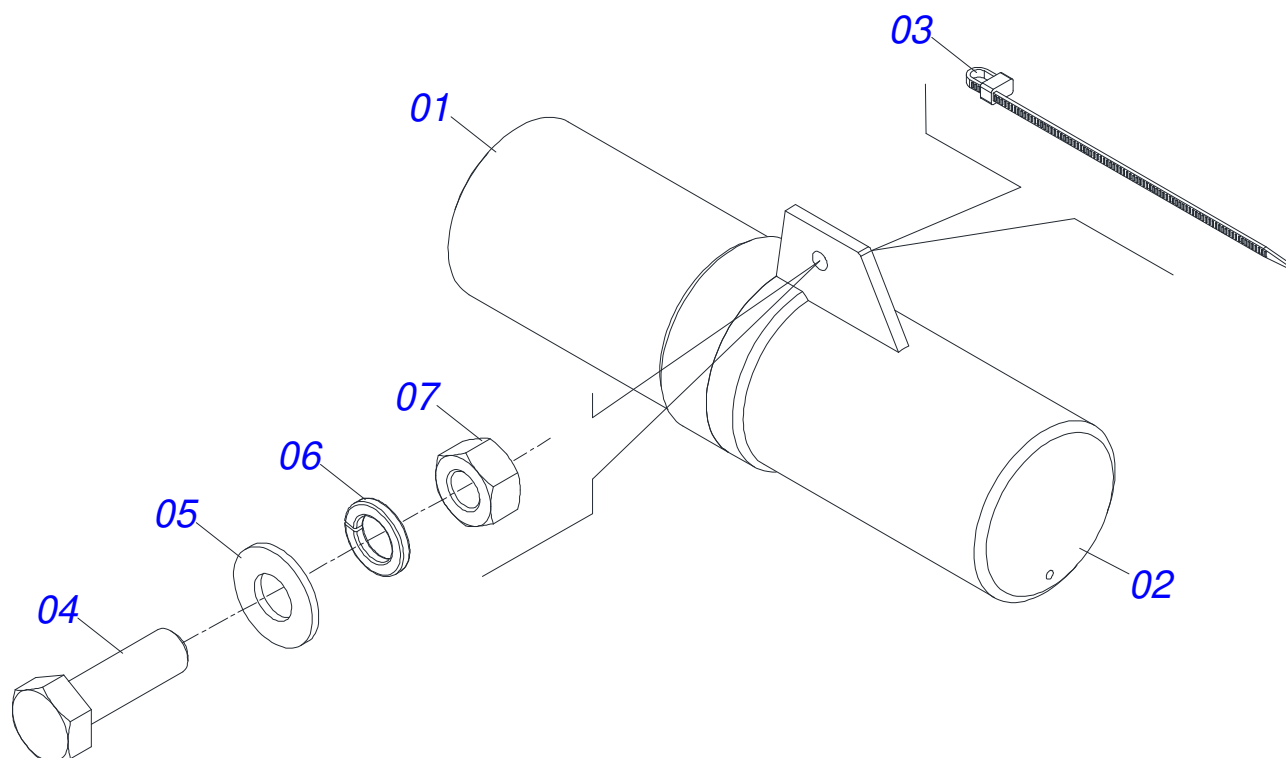

Item	Code	Description	See page	QT
01	0503060100	INSTRUCTIONS MANUAL CANISTER		01
02	0511031563	BAG WITH MANUAL		01
03	0503010267	NYLON CLAMP		01
04	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
05	0501010694	FLAT WASHER		01
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
07	0503010337	5/16" NUT		01

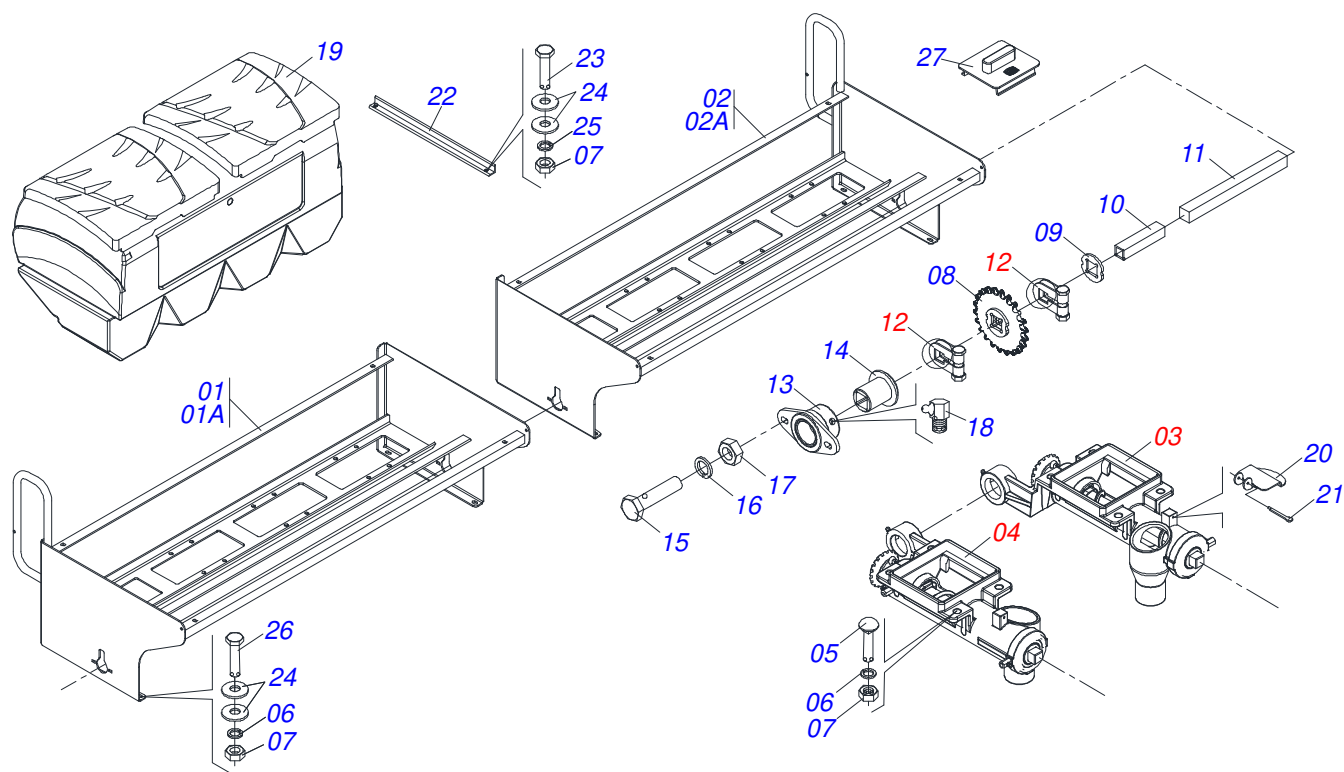

Item	Code	Description	See page	QT
01	0511051784	FERTILIZER SUPORT RIGHT BOX	01	
01A	0521063053	RH SUPPORT BEAN FERTILIZER	01	
02	0511051785	LH SUPPORT BOX FERTILIZER	01	
02A	0521064690	LH SUPPORT FERTILIZER BEAN	01	
03	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	04	
04	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	04	
05	0501010942	3/8" X 1-1/4" BOLT	32	
06	0503011443	3/8" SPRING WASHER	32	
07	0503010026	3/8" NUT	40	
08	0511061759	22Z P12,70 FQ 3/4" GEAR	02	
09	0521014167	CONE LOCK	02	
10	0551018055	22,65 X 60 SLEEVE	04	
11	0571011104	AXLE	02	
12	0501053788	3/4 SQUARE AXLE FASTENER	04	
13	0501110392	HOPPER SUPPORT BEARING	02	
14	0521012485	GEAR BOX BEARING AGRICUTURAL	02	
15	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN	04	
16	0503011444	SPRING WASHER	04	
17	0503010337	5/16" NUT	04	
18	0503010004	1890 GREASE FITTING	02	
19	0503061984	FERTILIZER HOPPER WITH 4 TRUNNELS	02	
20	0571010590	FERTILIZER SIDE COVER	08	
21	0503010362	1/8 X 1.1/4 COTTERPIN	08	
22	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE	04	
23	0503010849	3/8" X 1-1/2" BOLT	08	
24	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN	32	
25	0503010025	3/8" SPRING WASHER	08	
26	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	08	
27	0503032624	FERTILIZER HOPPER GUTTER	04	

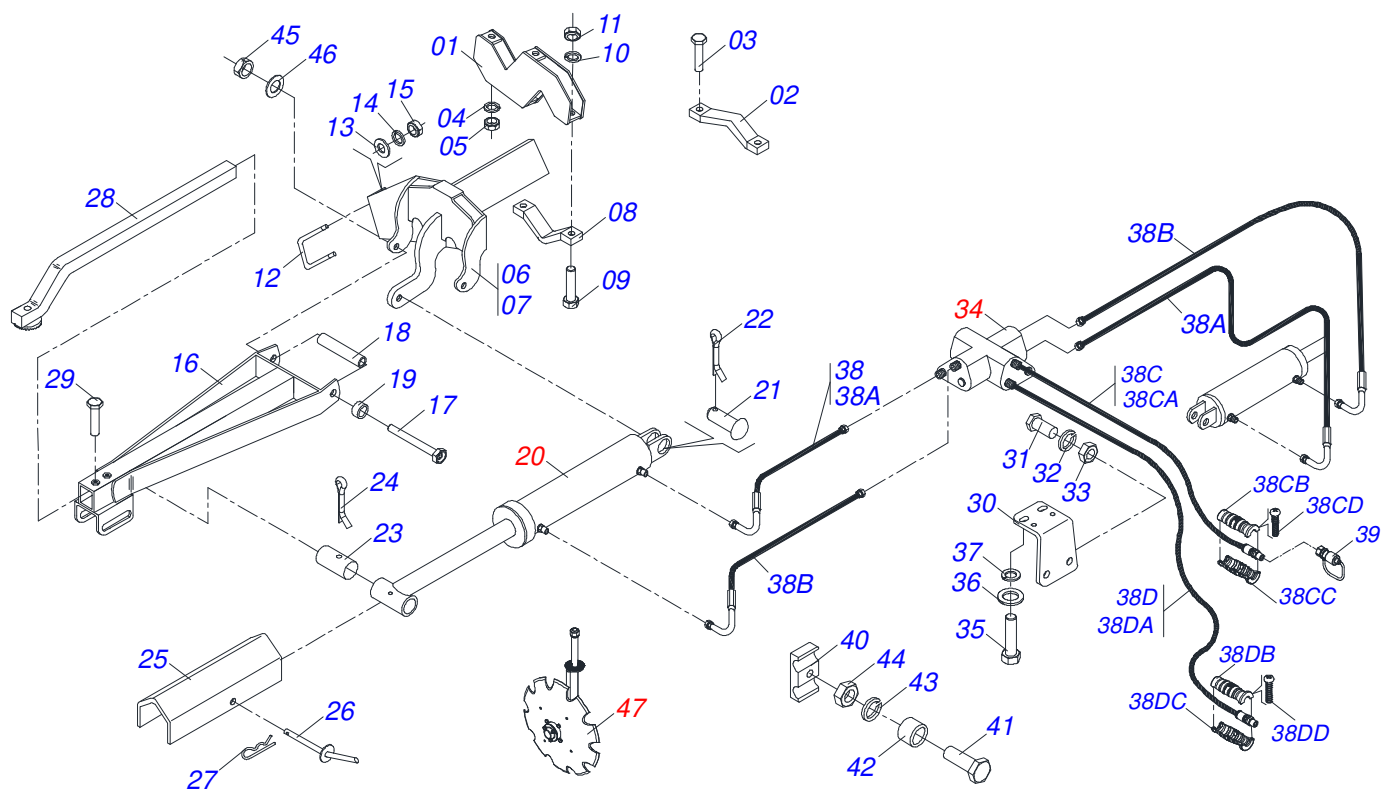


Item	Code	Description	See page	QT
01	0511062984	ROW MARKER SMALLER SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501010216	3/4 UNC X 4.1/2 C S G.5 ZN BOLT		04
04	0503010023	3/4" SPRING WASHER		04
05	0503010014	3/4" HEX NUT		04
06	0511062982	RH LARGER SUPPORT		01
07	0511062983	LH LARGER SUPPORT		01
08	0502010175	HITCH CLAMP		02
09	0501010216	3/4 UNC X 4.1/2 C S G.5 ZN BOLT		04
10	0503010023	3/4" SPRING WASHER		04
11	0503010014	3/4" HEX NUT		04
12	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
13	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
14	0503010019	1/2" SPRING WASHER		04
15	0503010060	1/2 UNC G.5 ZN HEX NUT		04
16	0501069470	ROW MARKER ARM		02
17	0521061655	BOLT 5/8 UNC X 320 MM		02
18	0521017687	SPACING SLEEVE		02
19	0521010479	SLEEVE ARTICULATION		04
20	0511058449	HYDRAULIC CYLINDER	31	02
21	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
22	0503010571	1/4" X 1.1/2 COTTERPIN		02
23	0511015779	1" X 4.2" AXLE		02
24	0503010523	1/4" X 2" COTTERPIN		02
25	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
26	0501068994	8,30 X 78 LOCK PIN		02
27	0503030168	HITCH PIN CLIP		02
28	0511062755	740 TURNBUCKLE		02
29	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
30	0511011311	VALVE SUPPORT		01
31	0503010232	5/8" X 1.3/4" BOLT		02


HYDRAULIC MARKER ASSY

0511055891


Item	Code	Description	See page	QT
32	0503010027	5/8" SPRING WASHER		02
33	0503010013	5/8" NUT		02
34	0501054649	HBM SEQUENTIAL VALVE	32	01
35	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
36	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
37	0503010025	3/8" SPRING WASHER		02
38	0511057709	HYDRAULIC MARKER HAND SET		01
38A	0501080447	3/8" X 122" TR-TC HOSE ASSY		02
38B	0501080515	HOSE 3/8 X 3400 TR-TC		02
38C	0521052286	HOSE 3/8 X 4000 TC-TM PURPLE / RED		01
38CA	0501080422	HOSE 3/8 X 4000 TC-TM		01
38CB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
38CC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
38CD	0503018952	PLASTIC BOLT		06
38D	0521052288	3/8 X 4000 TC-TM HOSE PURPLE / BLUE		01
38DA	0501080422	HOSE 3/8 X 4000 TC-TM		01
38DB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
38DC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
38DD	0503018952	PLASTIC BOLT		06
39	0501053834	MALE QUICK COUPLER	26	02
40	0502012702	BODY SUPPORT CLAMP		04
41	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
42	0521010445	0.53" X 0.75" X 0.45" SLEEVE		04
43	0503010180	7/16" SPRING WASHER		04
44	0503010244	7/16" NUT		04
45	0503012412	5/8 UNC SELF LOCKING NUT		02
46	0501012140	FLAT WASHER		04
47	0501050633	ROW MARKER DISC ASSEMBLY	33	02

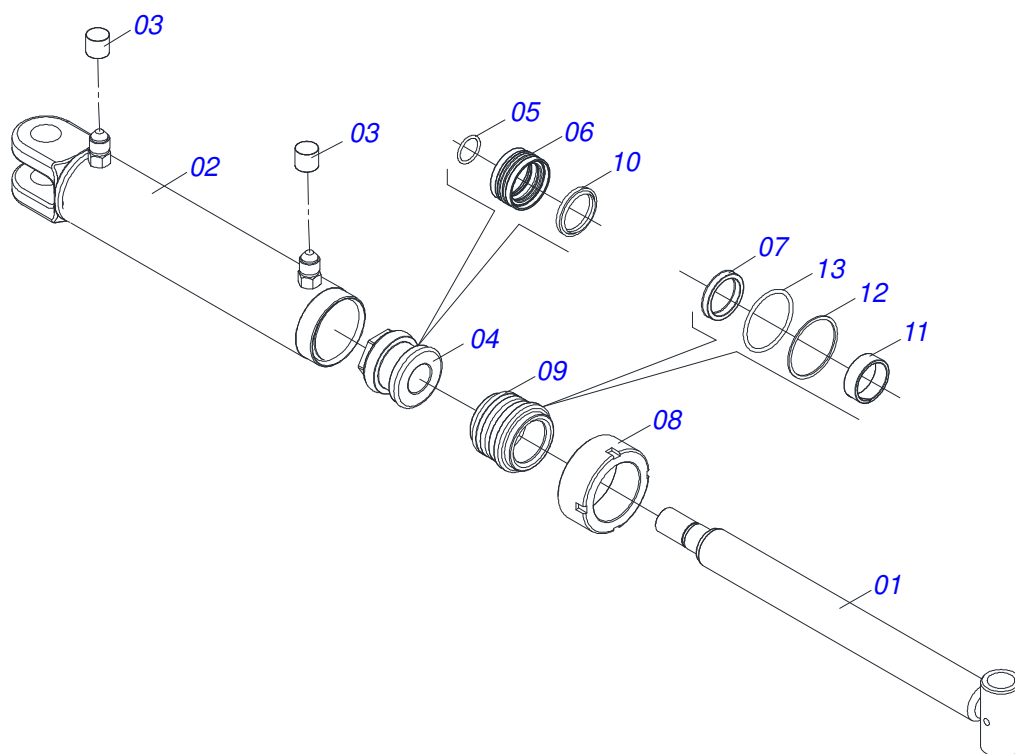


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

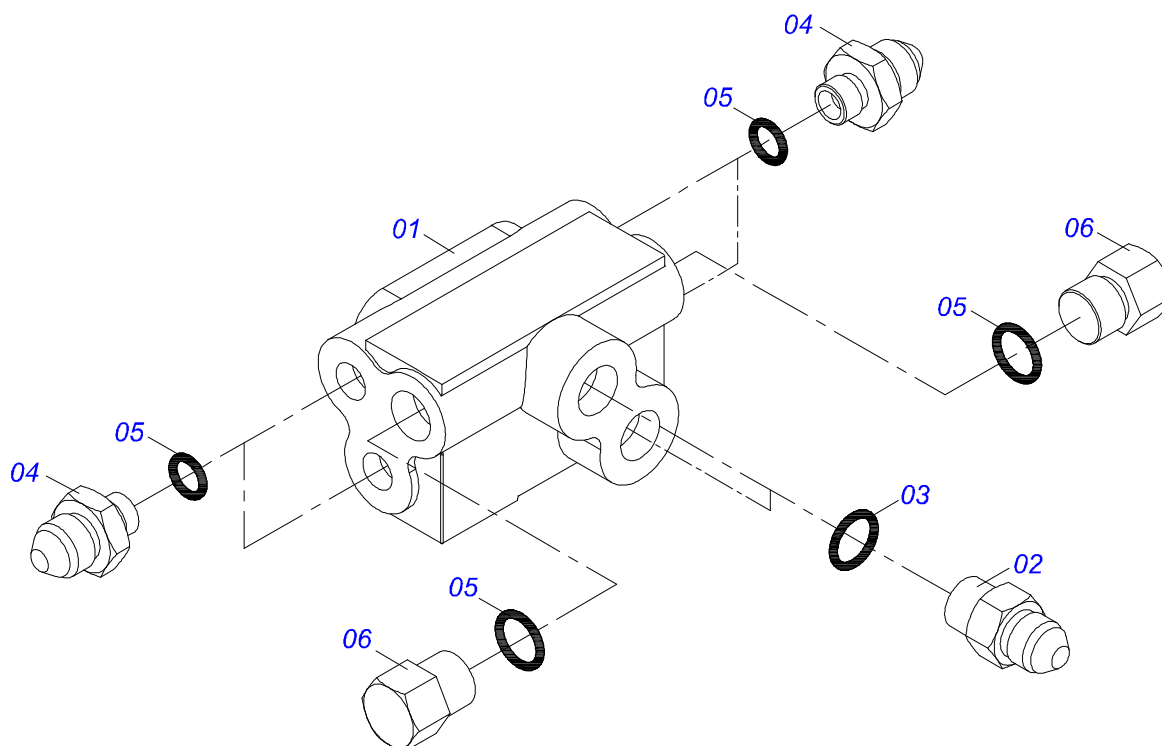


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

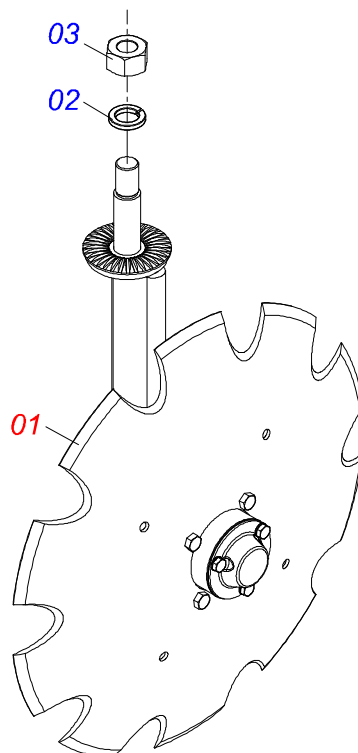


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC	34	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

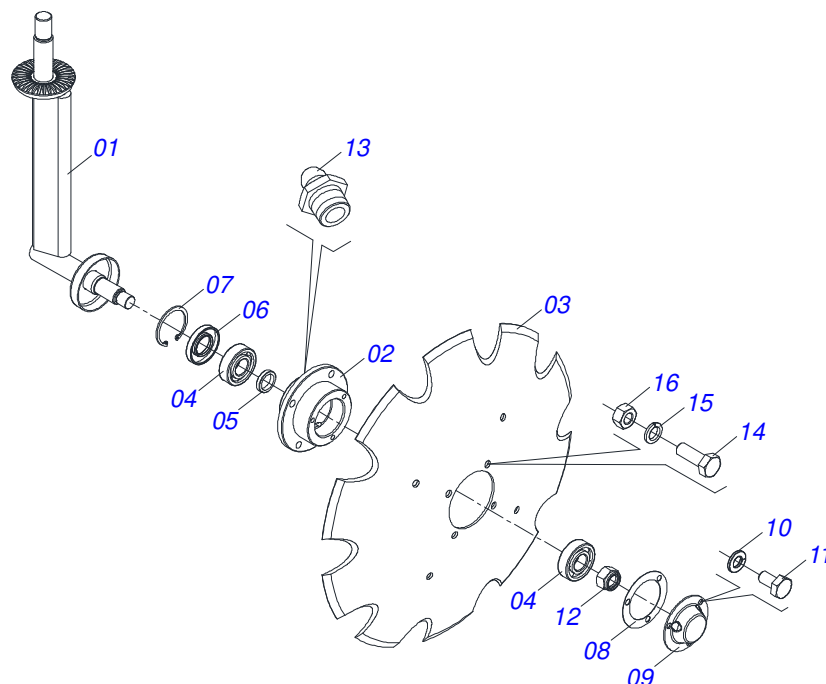


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	PROTECTION LID		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

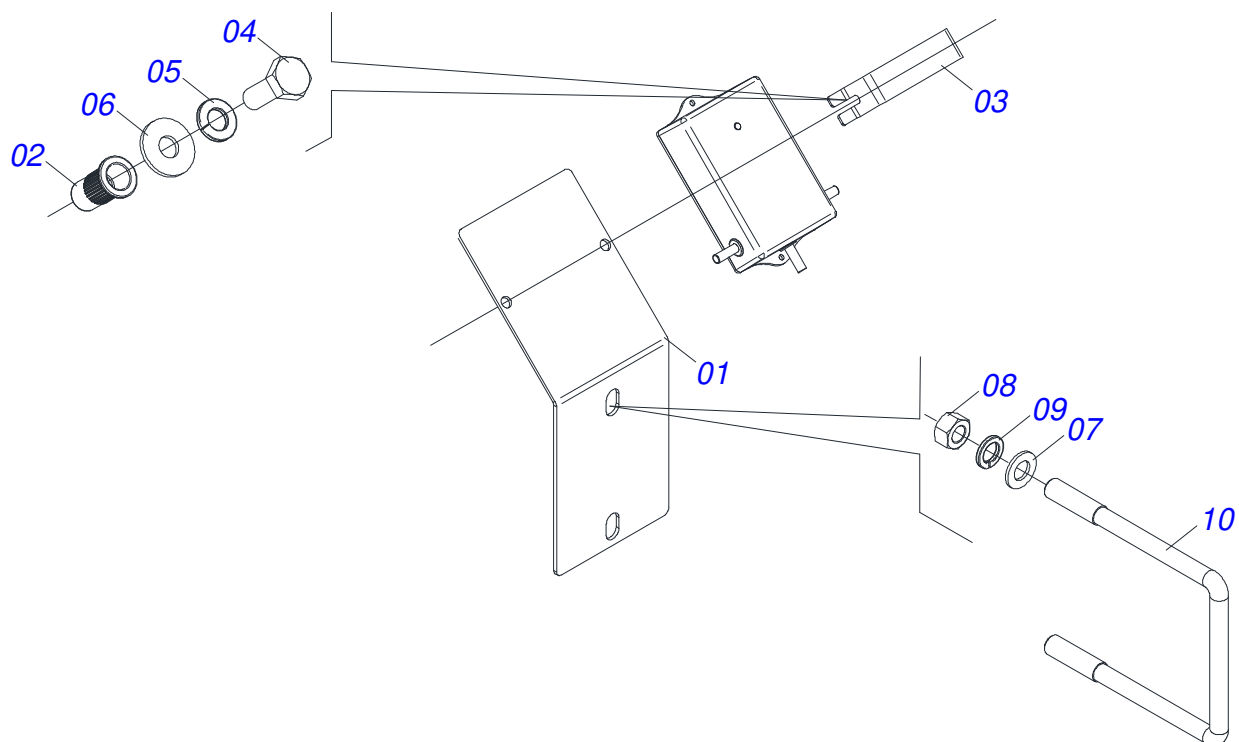

Item	Code	Description	See page	QT
01	0591016603	SUPPORT FILTER		01
02	0503019412	RIVET SCREW INTERNAL		02
03	0591016604	CLAMP		01
04	0503013849	1/4" UNC X 3/4" BOLT		02
05	0503010143	1/4" SPRING WASHER		02
06	0503010305	FLAT WASHER		02
07	0503011828	FLAT WASHER		02
08	0503010060	1/2 UNC G.5 ZN HEX NUT		02
09	0503010019	1/2" SPRING WASHER		02
10	0521014021	1/2" X 4.5" X 5.4" FASTENER		01

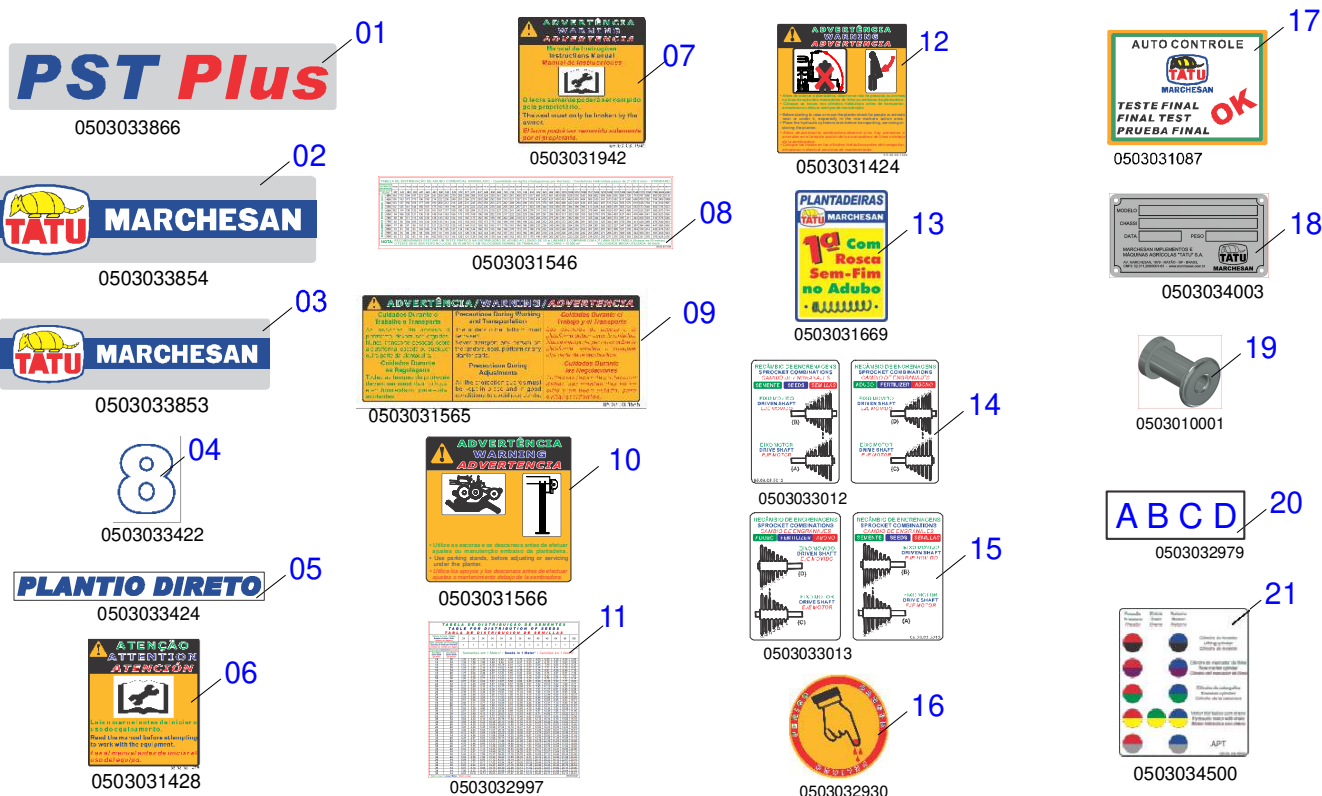


Item	Code	Description	See page	QT
01	0503033866	ADHESIVE LABEL	02	
02	0503033854	ADHESIVE LABEL	02	
03	0503033853	ADHESIVE LABEL	02	
04	0503033422	ADHESIVE LABEL	02	
05	0503033424	DIRECT PLANTIO ADHESIVE LABEL	02	
06	0503031428	READ MANUAL DECAL	01	
07	0503031942	ADHESIVE LABEL	01	
08	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2	02	
09	0503031565	ADHESIVE LABEL CARE	02	
10	0503031566	ADHESIVE LABEL	02	
11	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE	02	
12	0503031424	ADHESIVE LABEL ATTENTION ROW HYDRAULIC MARKER	02	
13	0503031669	ADHESIVE LABEL	01	
14	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT	01	
15	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT	01	
16	0503032930	ADHESIVE LABEL DANGER	04	
17	0503031087	ADHESIVE LABEL	01	
18	0503034003	SERIAL NUMBER TAG 61 X 118	01	
19	0503010001	3.2 X 5.5 RIVET	04	
20	0503032979	ADHESIVE LABEL LETTERS A B C D	02	
21	0503034500	ADHESIVE LABEL	01	

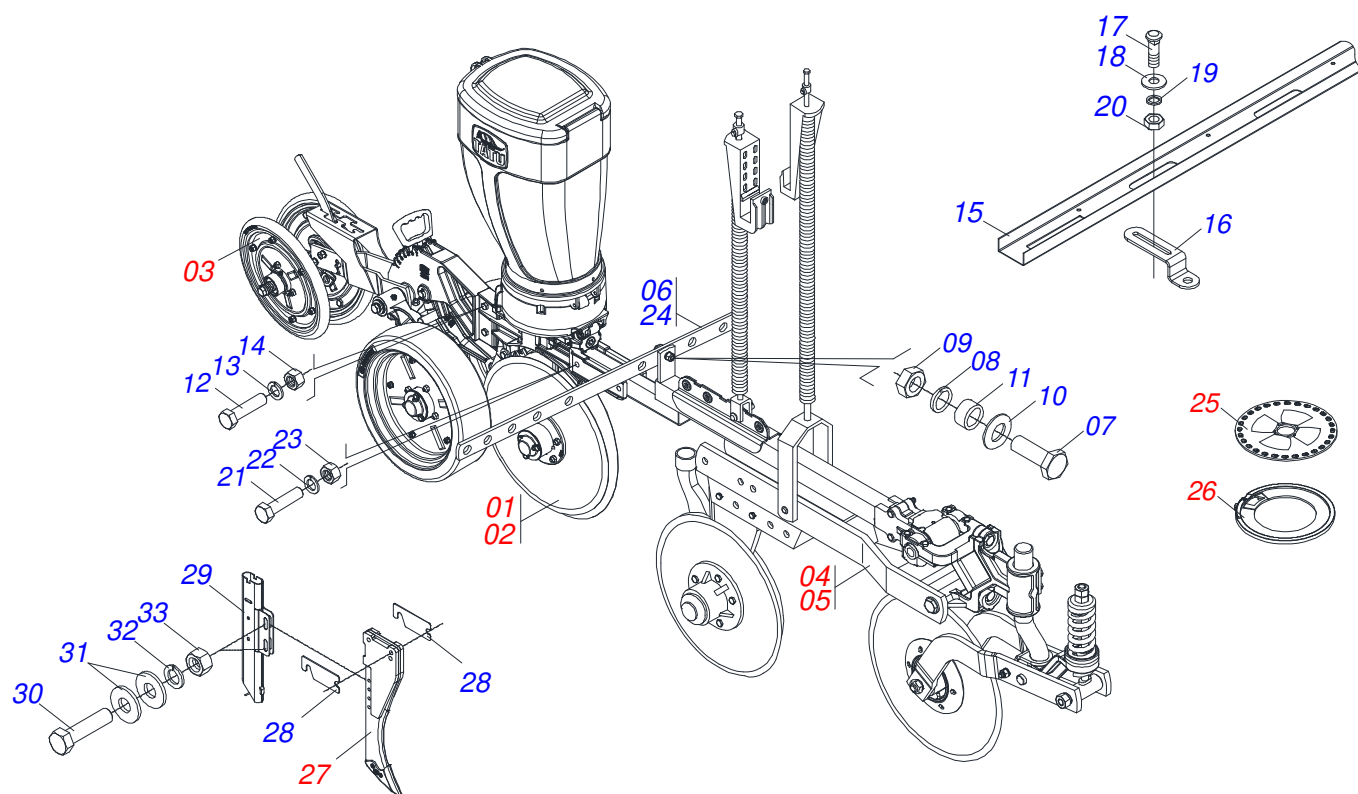

Item	Code	Description	See page	QT
01	0531050231	FRONT LINE SEED SHORT RIGHT	38	04
02	0531050232	FRONT LINE SEED LONG RIGHT	39	03
03	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	46	07
04	0511053252	FERTILIZER SHORT ROW WITH LEFT DDD/18" DC	55	04
05	0511053253	FERTILIZER LONG ROW WITH RIGHT DDD/18" DC	56	03
06	0501013714	STABILIZER BAR		06
07	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		10
08	0503010019	1/2" SPRING WASHER		10
09	0503010060	1/2 UNC G.5 ZN HEX NUT		10
10	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
11	0521010505	13,50 X 19,00 X 21,50 SLEEVE		10
12	0503010905	1/2" X 2-1/4" BOLT		16
13	0503010019	1/2" SPRING WASHER		16
14	0503010060	1/2 UNC G.5 ZN HEX NUT		16
15	0571013314	GUTTER 25 X 58 X 1500		02
16	0571017368	SUPPORT GUTTER		04
17	0501011643	3/8 X 1" BOLT		04
18	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
19	0503010025	3/8" SPRING WASHER		04
20	0503010026	3/8" NUT		04
21	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		16
22	0503011440	SPRING WASHER		16
23	0503010060	1/2 UNC G.5 ZN HEX NUT		16
24	0501018652	CORN STABILIZER BAR		03
25	0503062066	DISC SET WITH CORN RING	64	07
26	0503062067	DISC SET / RING SOY 90F TITANIUM	65	07
27	0501110231	SCARIFIER HEAD WITH SPIKE 0061	66	07
28	0511017969	0.1" SPACING PLATE		14
29	0521069124	PIVOTED FERTILIZER ROW NOZZLE		07
30	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		14
31	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		14




Item	Code	Description	See page	QT
32	0503010025	3/8" SPRING WASHER		14
33	0503010026	3/8" NUT		14

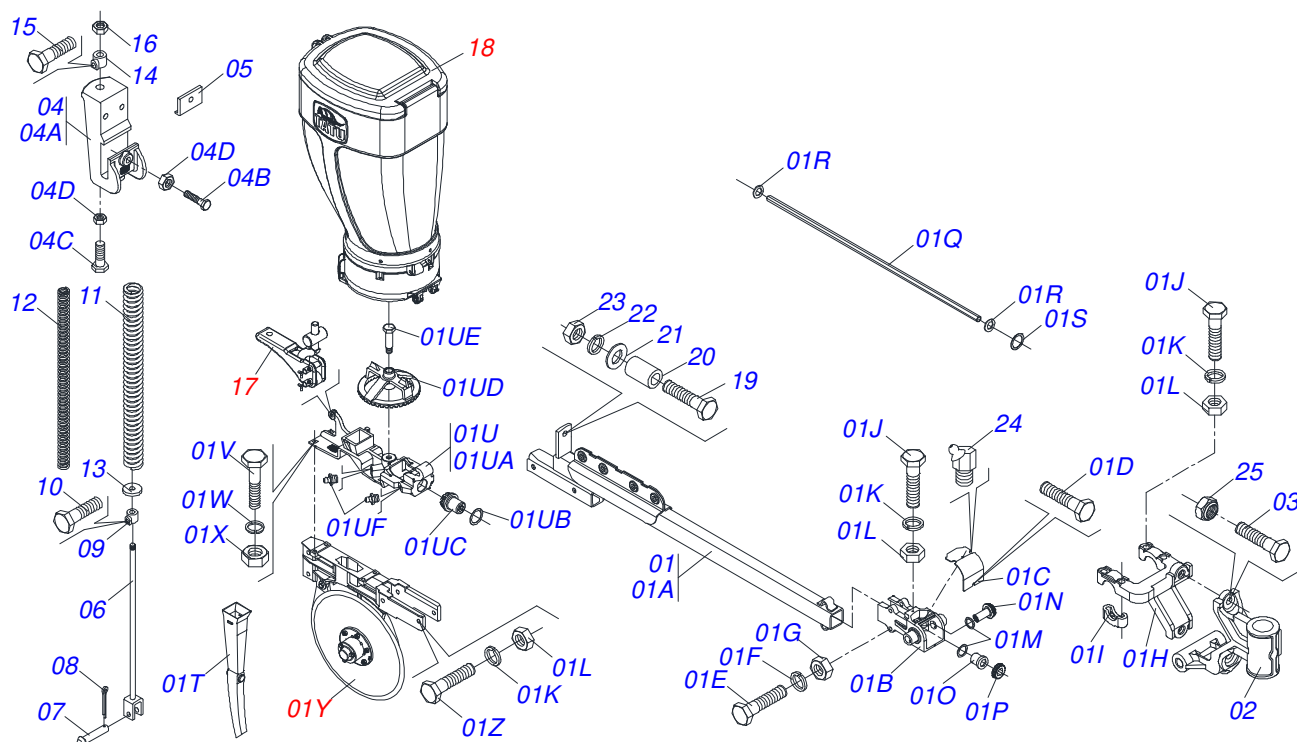


Item	Code	Description	See page	QT
001	0511056128	RIGHT DDD SHORT SEED ROW		01
001A	0521062183	SHORT SEED ROW ARM		01
001B	0502011830	ARTICULACCION SUPPORT		01
001C	0521018079	SEED ROW DRAWBAR LID		01
001D	0503014729	1/4" UNF X 1/2" BOLT		02
001E	0503010752	1/2" X 3.1/2" BOLT		02
001F	0503011440	SPRING WASHER		02
001G	0503010060	1/2 UNC G.5 ZN HEX NUT		02
001H	0502011561	BEARING SEMI		01
001I	0502010426	UPPER BEARING SEMI		02
001J	0503010479	BOLT		04
001K	0503011440	SPRING WASHER		04
001L	0503010060	1/2 UNC G.5 ZN HEX NUT		04
001M	0501013354	FLAT WASHER		01
001N	0502011400	18Z CONICAL GEAR		01
001O	0502011296	1/2 HEX AXLE BEARING SLEEVE		01
001P	0502011505	18Z CONICAL GEAR		01
001Q	0521018077	1/2" X 58.6" HEX AXLE		01
001R	0501013352	FLAT WASHER		04
001S	0501013354	FLAT WASHER		01
001T	0503033672	NOZZLE WITHOUT TITANIUM		01
001U	0511051693	BASE FIXING SYSTEM		01
001UA	0502012704	BASE FIXING SYSTEM		01
001UB	0501013354	FLAT WASHER		01
001UC	0502011411	10Z CONICAL GEAR		01
001UD	0502011418	40Z CONICAL GEAR		01
001UE	0511018700	AXLE		01
001UF	0503010002	1800 GREASE FITTING		02
001V	0503015920	3/8" UNC X 1.3/4" BOLT		04
001W	0503011443	3/8" SPRING WASHER		04
001X	0503010026	3/8" NUT		04

Item	Code	Description	See page	QT
001Y	0501059631	DDD SEED 15 X 15 RIGHT	42	01
001Z	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
002	0511058212	FERTILIZER ROW SUPPORT ASSY		01
003	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		02
004	0501057261	SPRING ROD SUPPORT		01
004A	0502010890	SPRING ROD SUPPORT		01
004B	0503030679	BOLT 1/2 UNC X 1.1/4 CS PC G.5 ZN		01
004C	0503030678	BOLT 1/2 UNC X 1.1/2 CS PC G.5 ZN		01
004D	0503010060	1/2 UNC G.5 ZN HEX NUT		02
005	0502010891	SPRING CHOCK SUPPORT VARON		01
006	0511060376	SEED SPRING GUIDE		01
007	0521010542	COUPLING SHAFT		01
008	0503010257	1/8" X 1" COTTERPIN		01
009	0502040534	SPRING GUIDE BUSHING LOCK		01
010	0501018535	1/2 X 1 BOLT		01
011	0503031340	1.7"X 19" X 0.3" COMPRESSION SPRING		01
012	0503031339	1" X 19" X 0.1" COMPRESSION SPRING		01
013	0501013753	FLAT WASHER		01
014	0502040534	SPRING GUIDE BUSHING LOCK		01
015	0501018535	1/2 X 1 BOLT		01
016	0503010013	5/8" NUT		01
017	0511052024	FAST CLOSING SET	41	01
018	0531050230	SEED SISTEM	40	01
019	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
020	0521010505	13,50 X 19,00 X 21,50 SLEEVE		01
021	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
022	0503010019	1/2" SPRING WASHER		01
023	0503010060	1/2 UNC G.5 ZN HEX NUT		01
024	0503011099	GREASE FITTING		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02

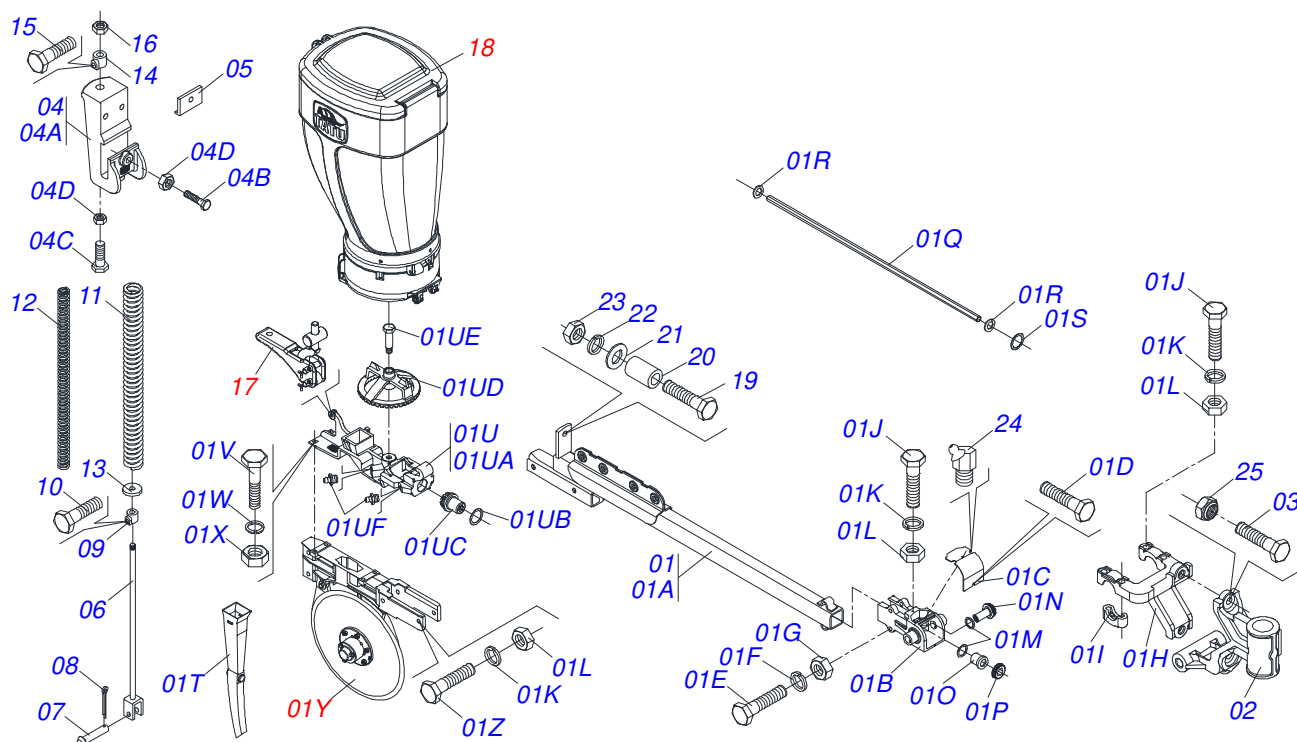


Item	Code	Description	See page	QT
001	0511056129	LEFT DDD LONG SEED ROW		01
001A	0521062184	LONG SEED ROW ARM		01
001B	0502011830	ARTICULACCION SUPPORT		01
001C	0521018079	SEED ROW DRAWBAR LID		01
001D	0503014729	1/4" UNF X 1/2" BOLT		02
001E	0503010752	1/2" X 3.1/2" BOLT		02
001F	0503011440	SPRING WASHER		02
001G	0503010060	1/2 UNC G.5 ZN HEX NUT		02
001H	0502011561	BEARING SEMI		01
001I	0502010426	UPPER BEARING SEMI		02
001J	0503010479	BOLT		04
001K	0503011440	SPRING WASHER		04
001L	0503010060	1/2 UNC G.5 ZN HEX NUT		04
001M	0501013354	FLAT WASHER		01
001N	0502011400	18Z CONICAL GEAR		01
001O	0502011296	1/2 HEX AXLE BEARING SLEEVE		01
001P	0502011505	18Z CONICAL GEAR		01
001Q	0521018078	1/2" X 66.5" HEX AXLE		01
001R	0501013352	FLAT WASHER		04
001S	0501013354	FLAT WASHER		01
001T	0503033672	NOZZLE WITHOUT TITANIUM		01
001U	0511051693	BASE FIXING SYSTEM		01
001UA	0502012704	BASE FIXING SYSTEM		01
001UB	0501013354	FLAT WASHER		01
001UC	0502011411	10Z CONICAL GEAR		01
001UD	0502011418	40Z CONICAL GEAR		01
001UE	0511018700	AXLE		01
001UF	0503010002	1800 GREASE FITTING		02
001V	0503015920	3/8" UNC X 1.3/4" BOLT		04
001W	0503011443	3/8" SPRING WASHER		04
001X	0503010026	3/8" NUT		04


Item	Code	Description	See page	QT
001Y	0501059632	DDD SEED 15X15 LEFT	43	01
001Z	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
002	0511058212	FERTILIZER ROW SUPPORT ASSY		01
003	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		02
004	0501057261	SPRING ROD SUPPORT		01
004A	0502010890	SPRING ROD SUPPORT		01
004B	0503030679	BOLT 1/2 UNC X 1.1/4 CS PC G.5 ZN		01
004C	0503030678	BOLT 1/2 UNC X 1.1/2 CS PC G.5 ZN		01
004D	0503010060	1/2 UNC G.5 ZN HEX NUT		02
005	0502010891	SPRING CHOCK SUPPORT VARON		01
006	0511060376	SEED SPRING GUIDE		01
007	0521010542	COUPLING SHAFT		01
008	0503010257	1/8" X 1" COTTERPIN		01
009	0502040534	SPRING GUIDE BUSHING LOCK		01
010	0501018535	1/2 X 1 BOLT		01
011	0503031340	1.7"X 19" X 0.3" COMPRESSION SPRING		01
012	0503031339	1" X 19" X 0.1" COMPRESSION SPRING		01
013	0501013753	FLAT WASHER		01
014	0502040534	SPRING GUIDE BUSHING LOCK		01
015	0501018535	1/2 X 1 BOLT		01
016	0503010013	5/8" NUT		01
017	0511052024	FAST CLOSING SET	41	01
018	0531050230	SEED SISTEM	40	01
019	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
020	0521010505	13,50 X 19,00 X 21,50 SLEEVE		01
021	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
022	0503010019	1/2" SPRING WASHER		01
023	0503010060	1/2 UNC G.5 ZN HEX NUT		01
024	0503011099	GREASE FITTING		02
025	0503012412	5/8 UNC SELF LOCKING NUT		02

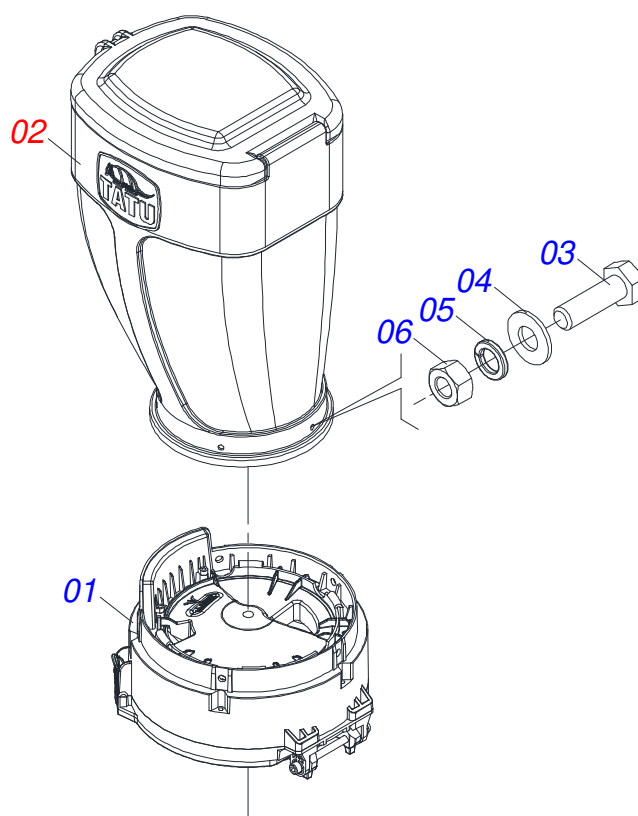


Item	Code	Description	See page	QT
01	0503063274	ASSY TITANIUM		01
02	0503062276	ASSY SEED DEPOSIT		01
03	0503010371	5/16" X 1" BOLT		05
04	0501010694	FLAT WASHER		05
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		05
06	0503010337	5/16" NUT		05

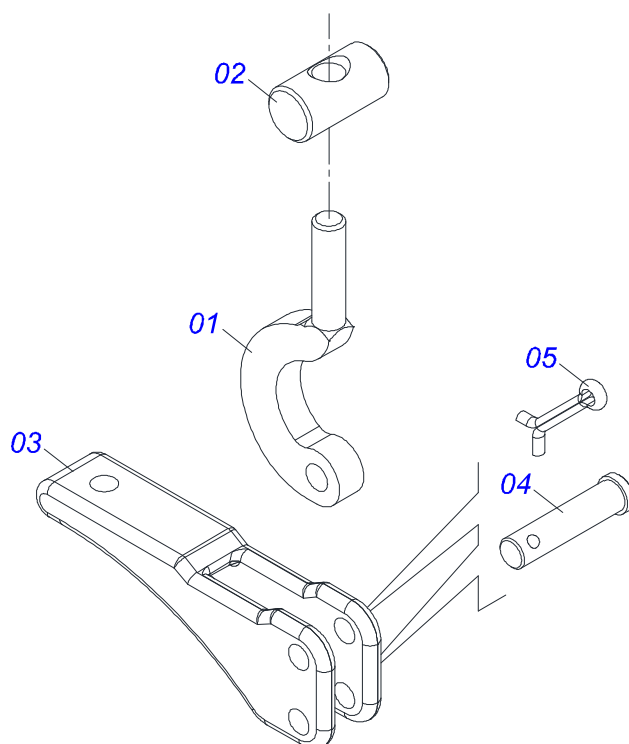


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

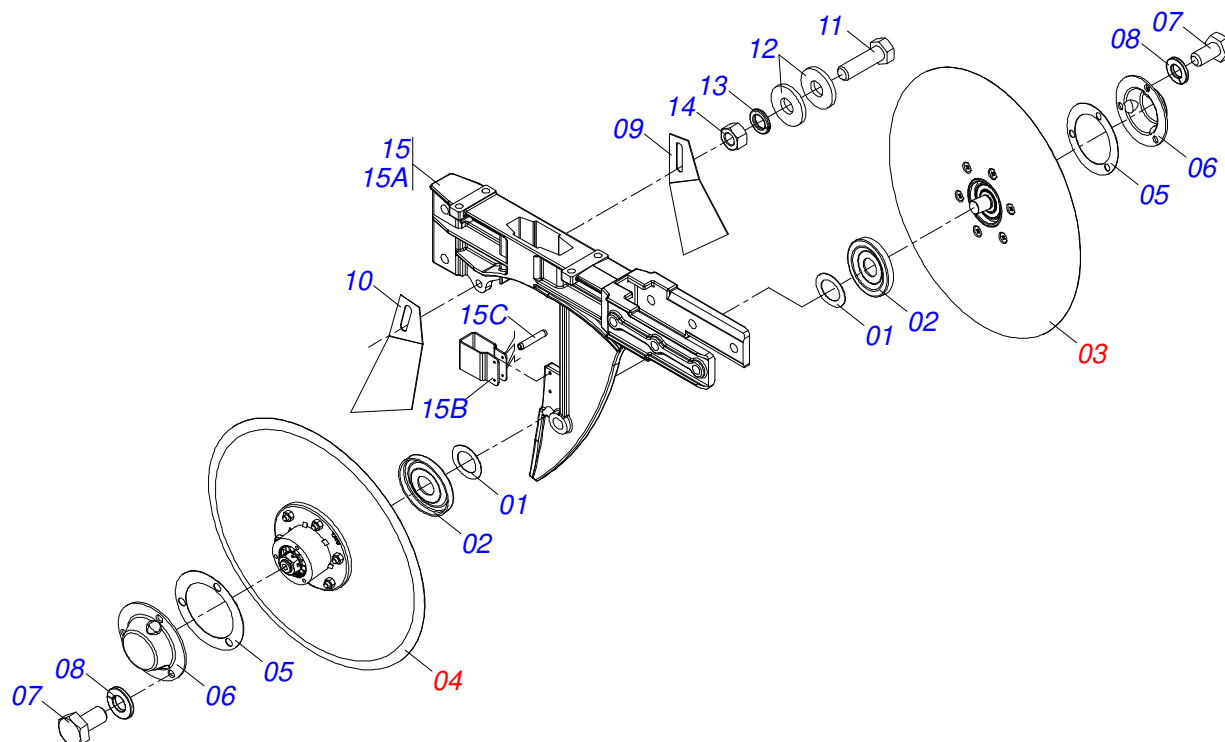


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	15" RIGHT OPENING DISC HUB	44	01
04	0501054168	15" LEFT DOUBLE DISC HUB	45	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	PROTECTION LID		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052301	SUPPORT DDD 15 RIGHT		01
15A	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

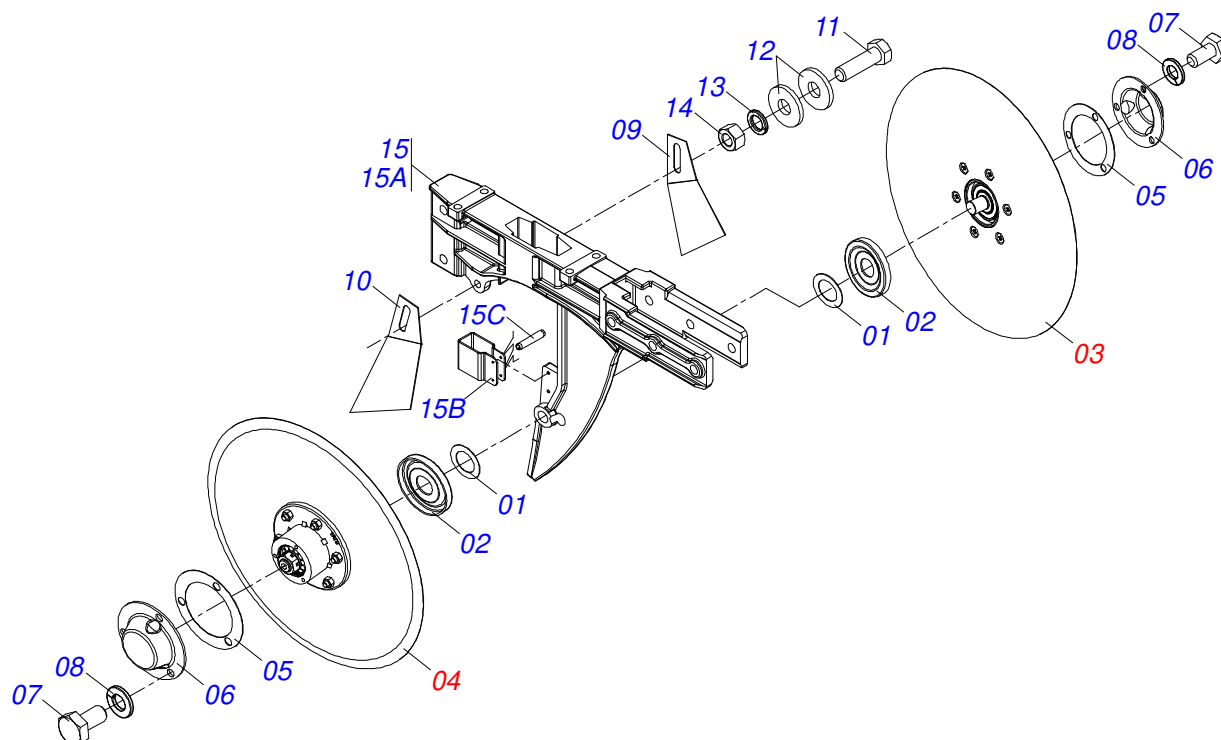


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		02
02	0511011927	DUST CLOAK		02
03	0501054167	15" RIGHT OPENING DISC HUB	44	01
04	0501054168	15" LEFT DOUBLE DISC HUB	45	01
05	0503030757	2.9" X 2" X 0.02" JOINT		02
06	0521019178	PROTECTION LID		02
07	0503014729	1/4" UNF X 1/2" BOLT		06
08	0503011441	SPRING WASHER		06
09	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
13	0503011443	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0511052302	LH SUPPORT DDD GUIDE		01
15A	0561015592	LEFT DOUBLE DISC SUPPORT		01
15B	0571012491	SOCKET SEED GUIDE		01
15C	0503010838	0.1" X 0.8" SPRING PIN		02

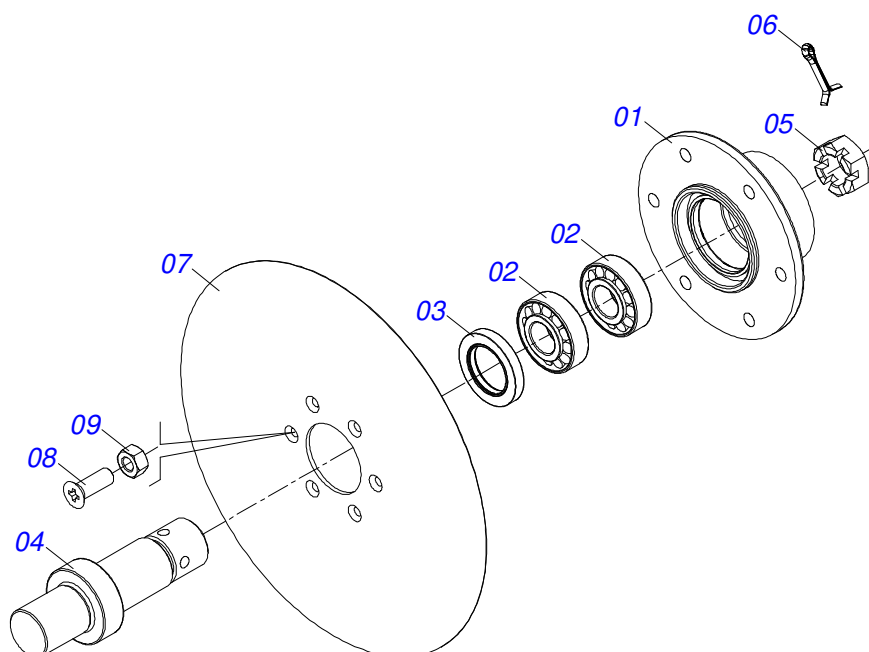


Item	Code	Description	See page	QT
01	0502011930	OPENING DISCS HUB		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT DOUB DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

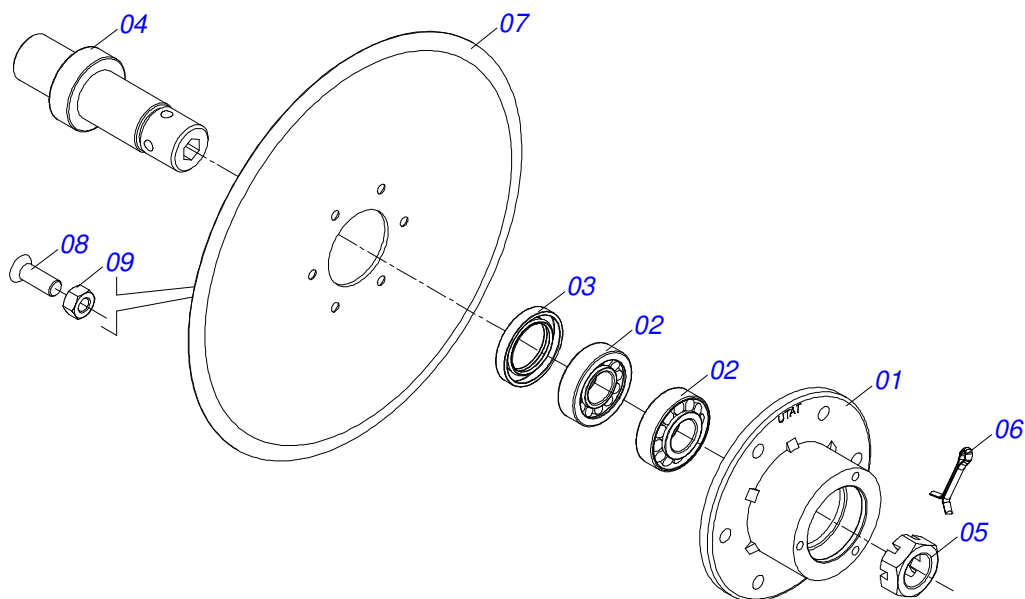


Item	Code	Description	See page	QT
01	0502011930	OPENING DISCS HUB		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019148	LEFT DOUBLE DISC HUB		01
05	0503030282	3/4" CASTLE NUT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
08	0503010546	5/16" X 7/8" BOLT		06
09	0503010337	5/16" NUT		06

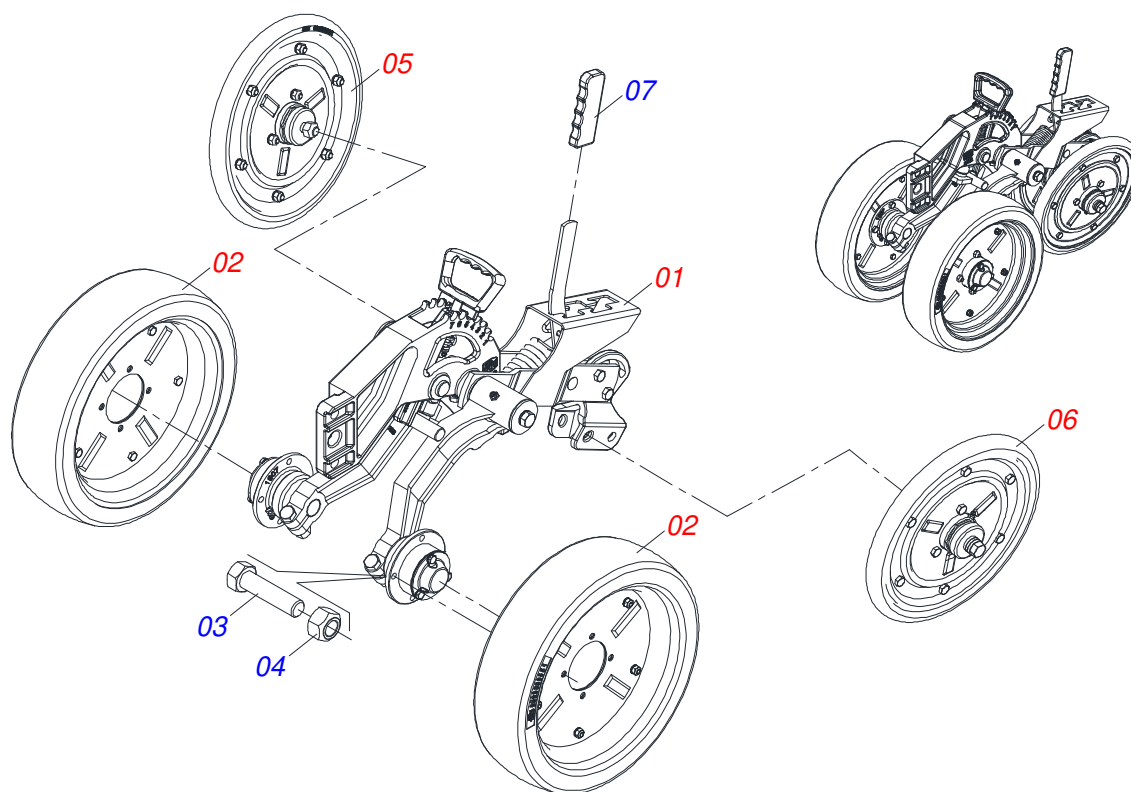


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	47	01
02	0501052538	DEPTH BAND WITH ARMS	51	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	52	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	53	01
07	0503033942	COMPACTOR WHEEL REGULATOR LID		01

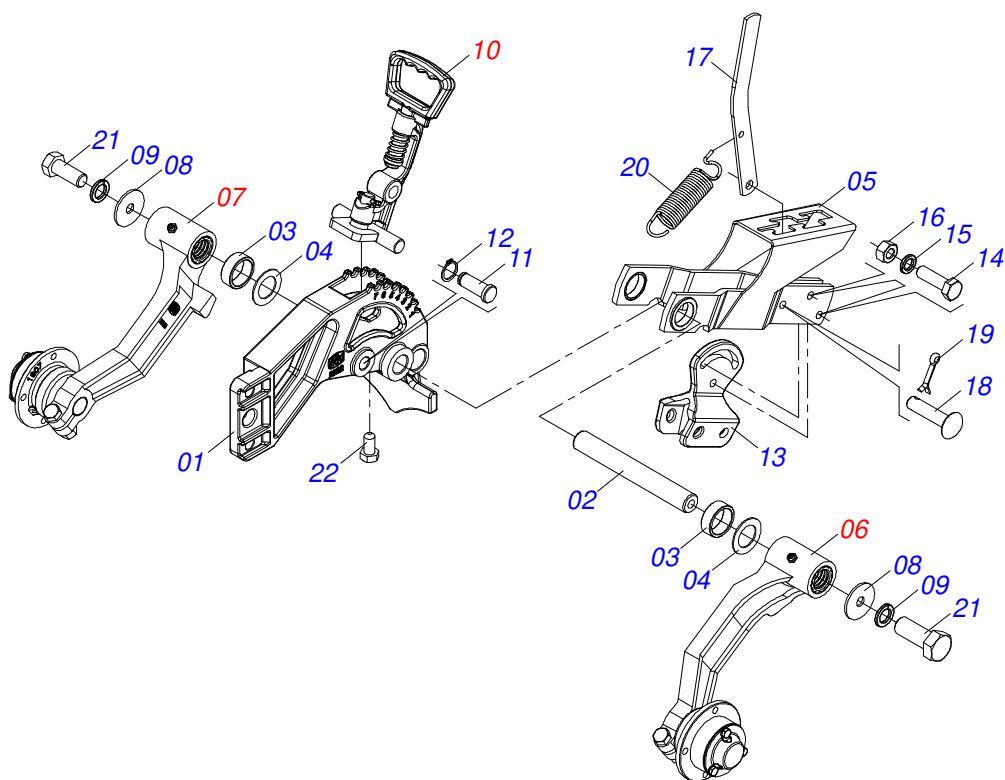


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT ARM WHEEL DEPTH WITH CUBE		01
07	0511058651	RIGHT ARM WHEEL DEPTH WITH CUBE	49	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	50	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" COTTERPIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	3/8 UNC X 3/4 BOLT		01

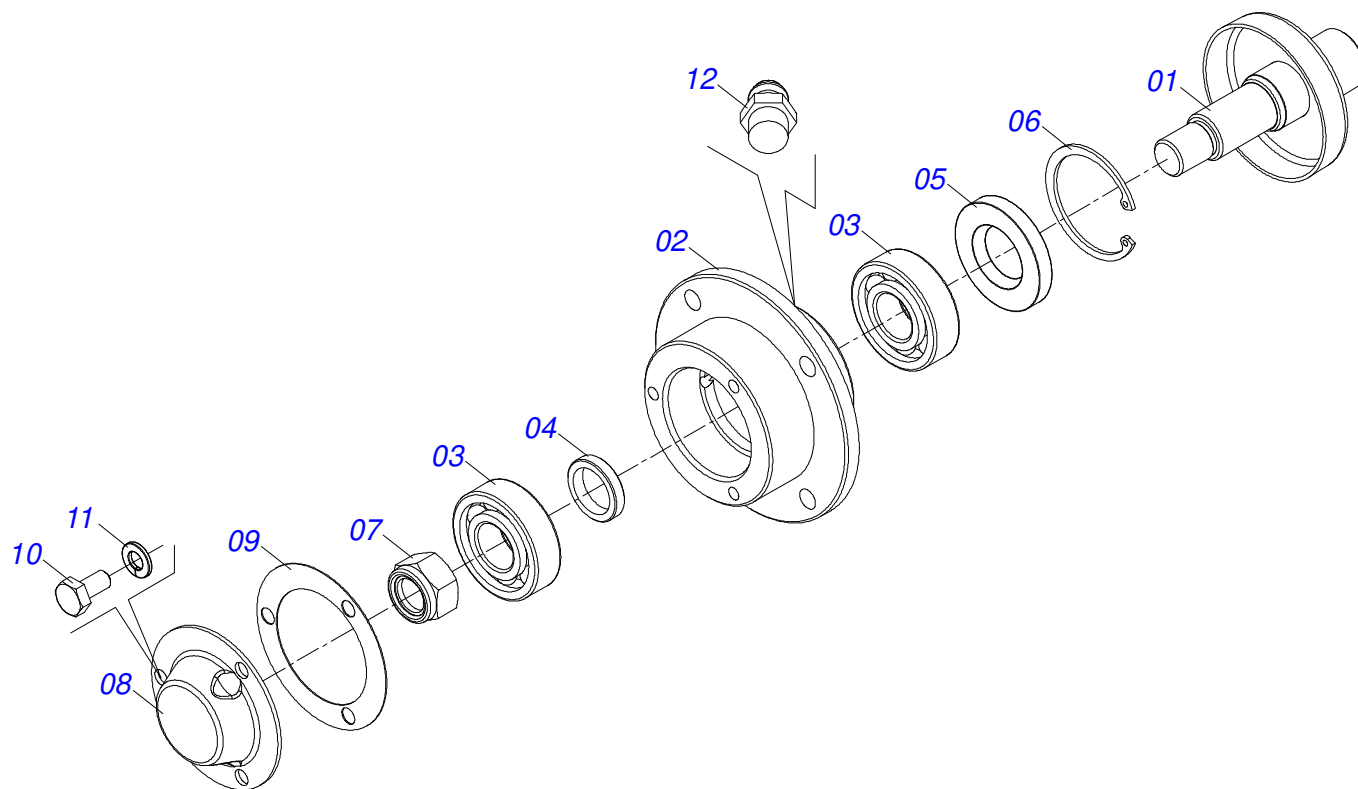


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	PROTECTION LID		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

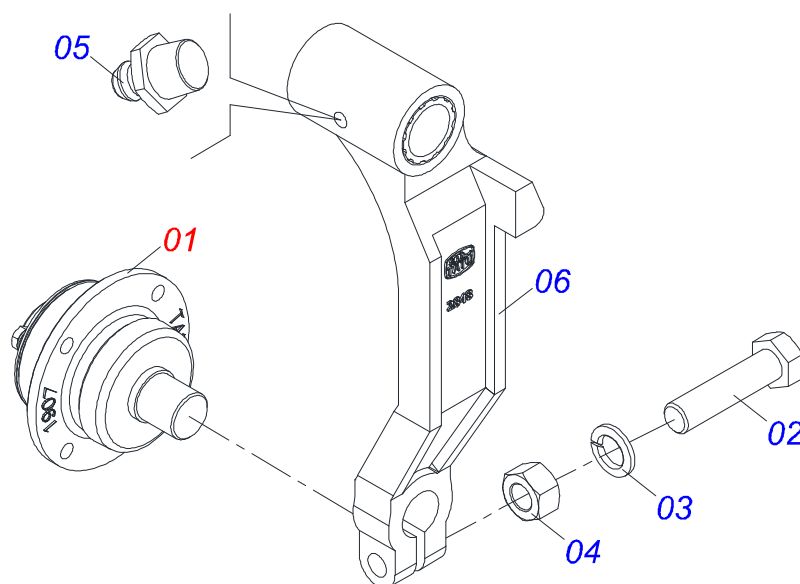


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL HUB	48	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

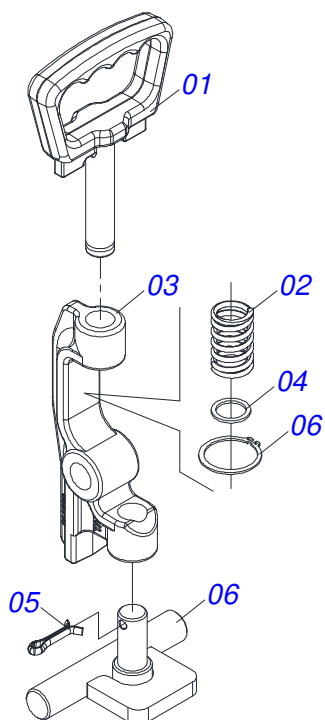


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	DEPTH CONTROL LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

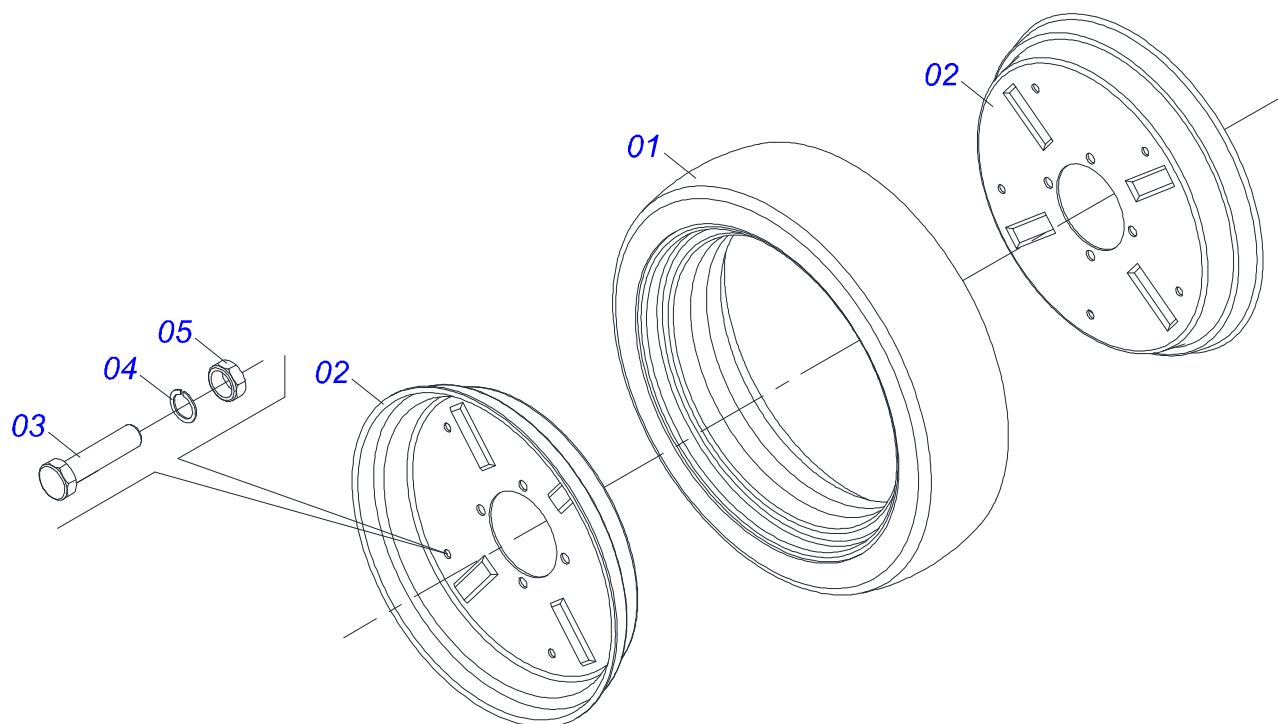


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

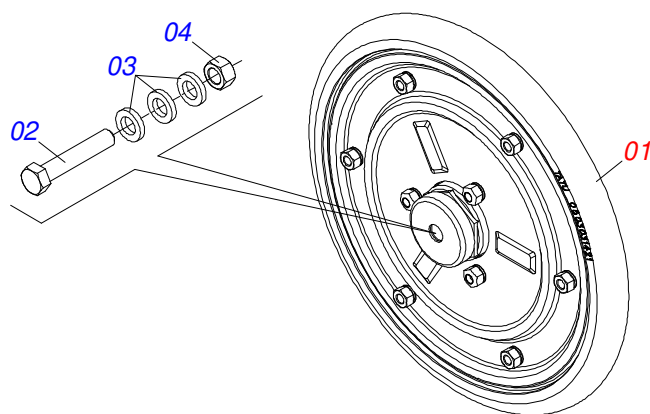


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	54	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

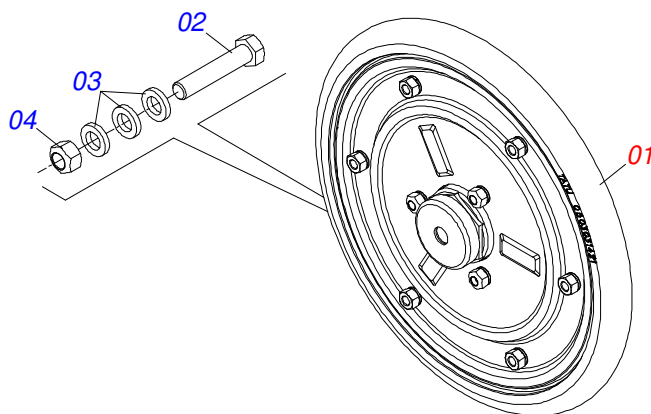


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	54	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

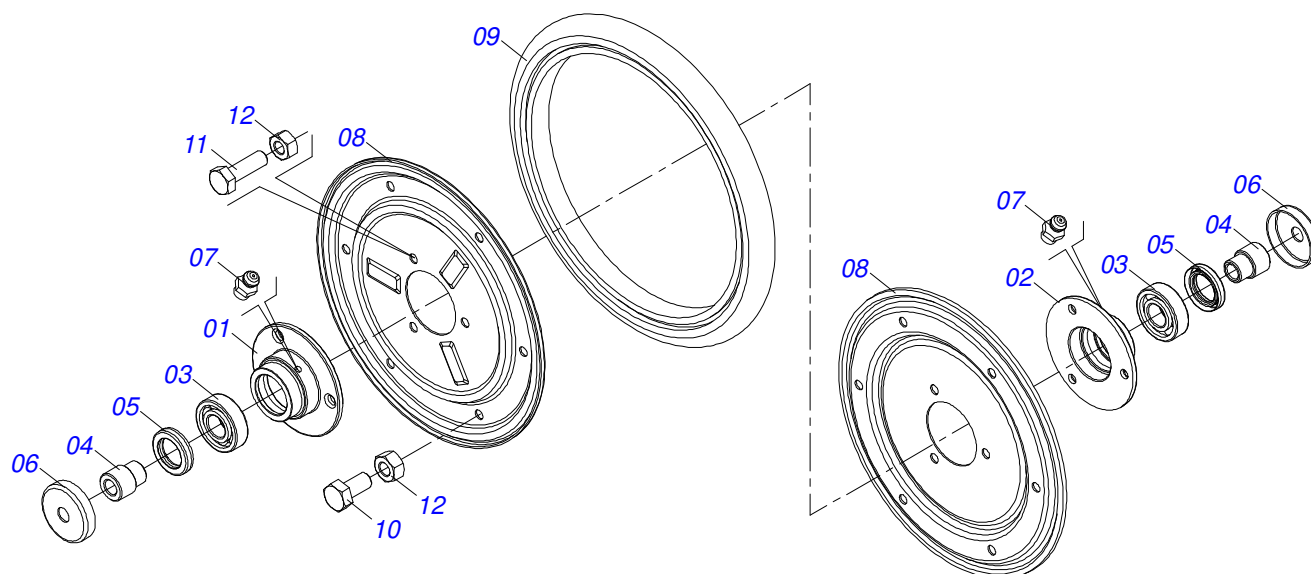


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

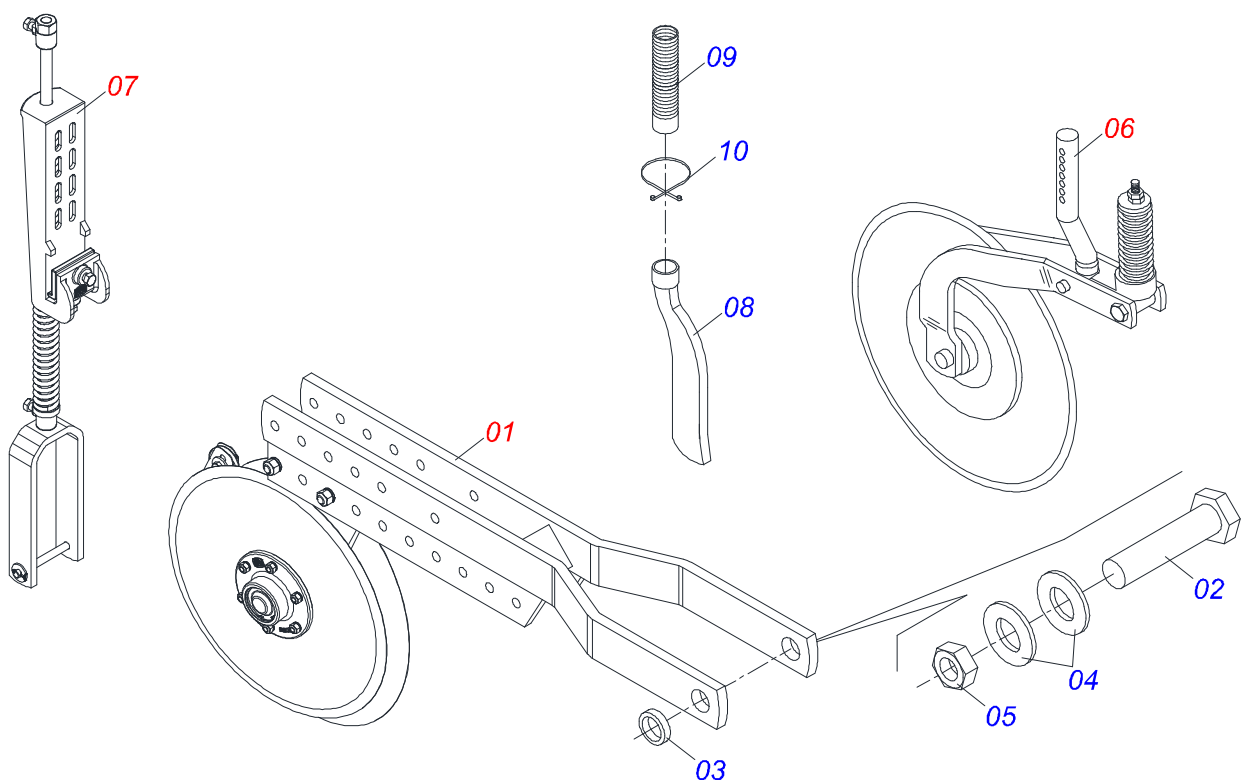


Item	Code	Description	See page	QT
01	0511053250	SHORT ARM FERTILIZER ROW WITH LEFT 58 DOUBLE DISC		01
02	0501010066	3/4" X 9" BOLT		01
03	0521017831	SUPPORT SLEEVE SPACER		02
04	0511017232	FLAT WASHER		02
05	0503011255	3/4" LOCK NUT		01
06	0511044549	18" COULTER BLADE ASSY FOR SHORT ROW	61	01
07	0501058423	FERTILIZER ROD SPRING ROW	63	01
08	0503030391	RIGHT FERTILIZER NOZZLE		01
09	0503031145	2" X 2" X 20" HOSE		01
10	0503031076	2" HOSE CLAMP		02

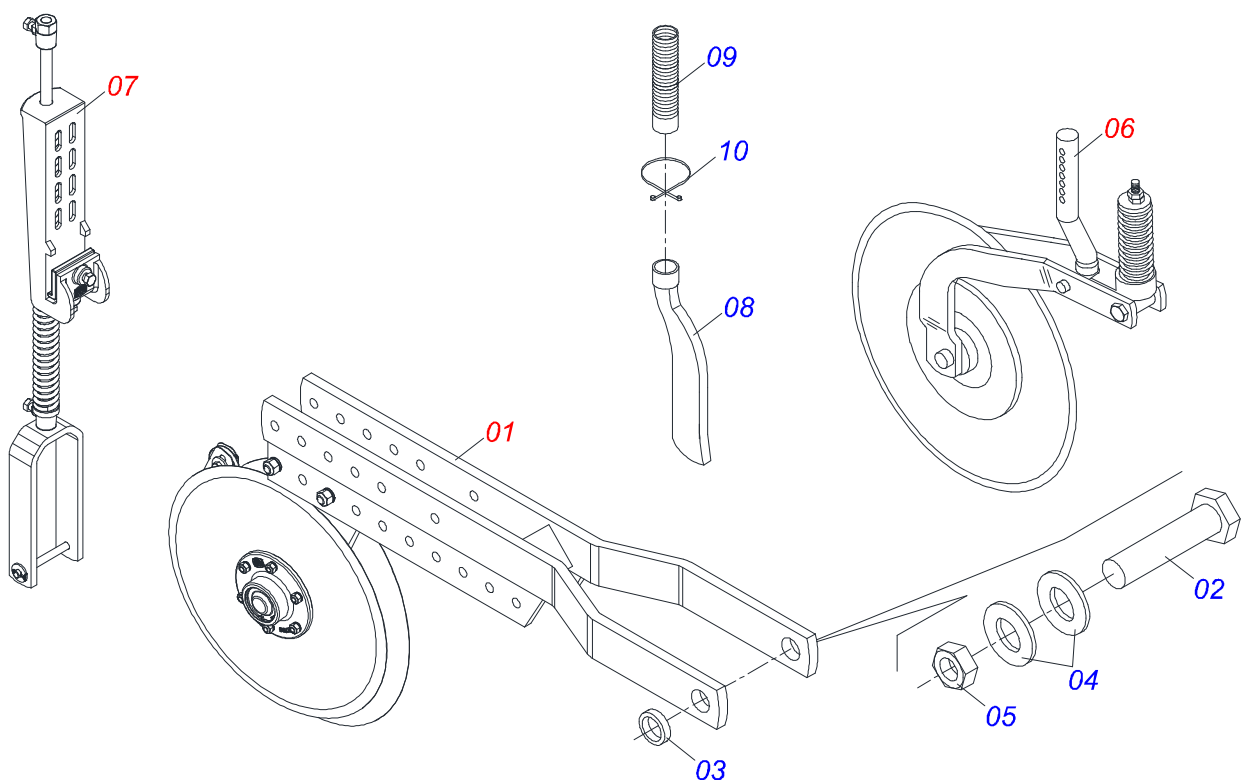


Item	Code	Description	See page	QT
01	0511053251	LONG ARM FERTILIZER ROW WITH RIGHT 57		01
		DOUBLE DISC		
02	0501010066	3/4" X 9" BOLT		01
03	0521017831	SUPPORT SLEEVE SPACER		02
04	0511017232	FLAT WASHER		02
05	0503011255	3/4" LOCK NUT		01
06	0511044573	18" COULTER BLADE ASSY FOR LONG ROW	62	01
07	0501058423	FERTILIZER ROD SPRING ROW	63	01
08	0503030392	LEFT FERTILIZER NOZZLE		01
09	0503031145	2" X 2" X 20" HOSE		01
10	0503031076	2" HOSE CLAMP		02

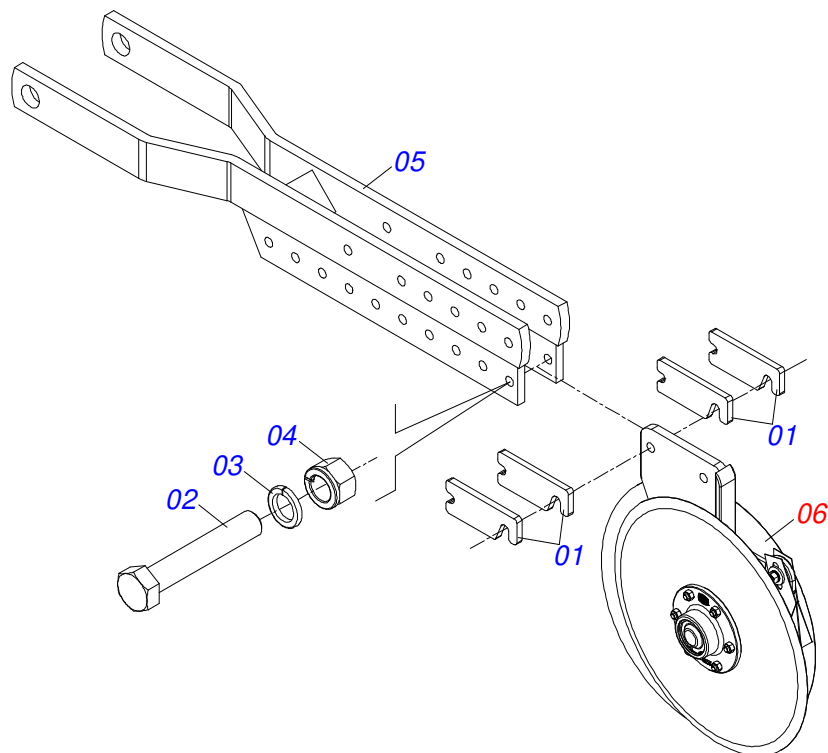


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0521061153	FERTILIZER ROW LONG ARM		01
06	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	59	01

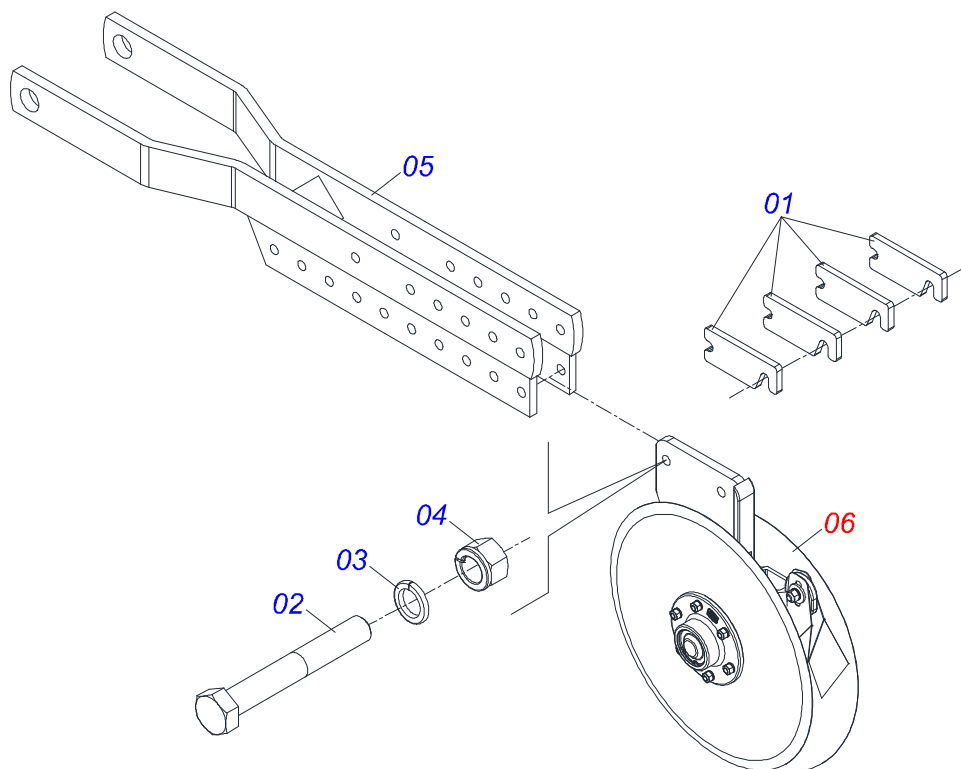


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0521061121	SHORT FERTILIZER ROW ARM		01
06	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	60	01

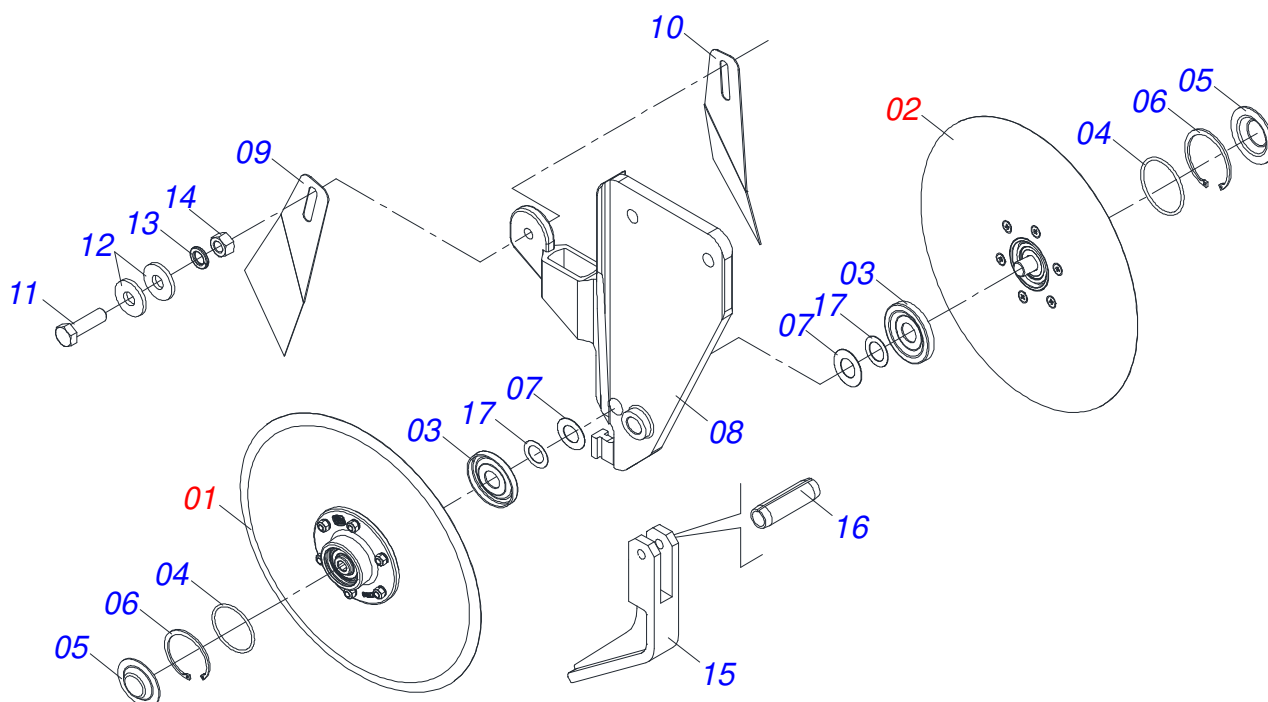


Item	Code	Description	See page	QT
01	0511053173	CUBE LOW RIGHT WITH DISC 15		01
02	0511053172	LEFT LOW CUBE WITH DISC 15		01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
13	0503010025	3/8" SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

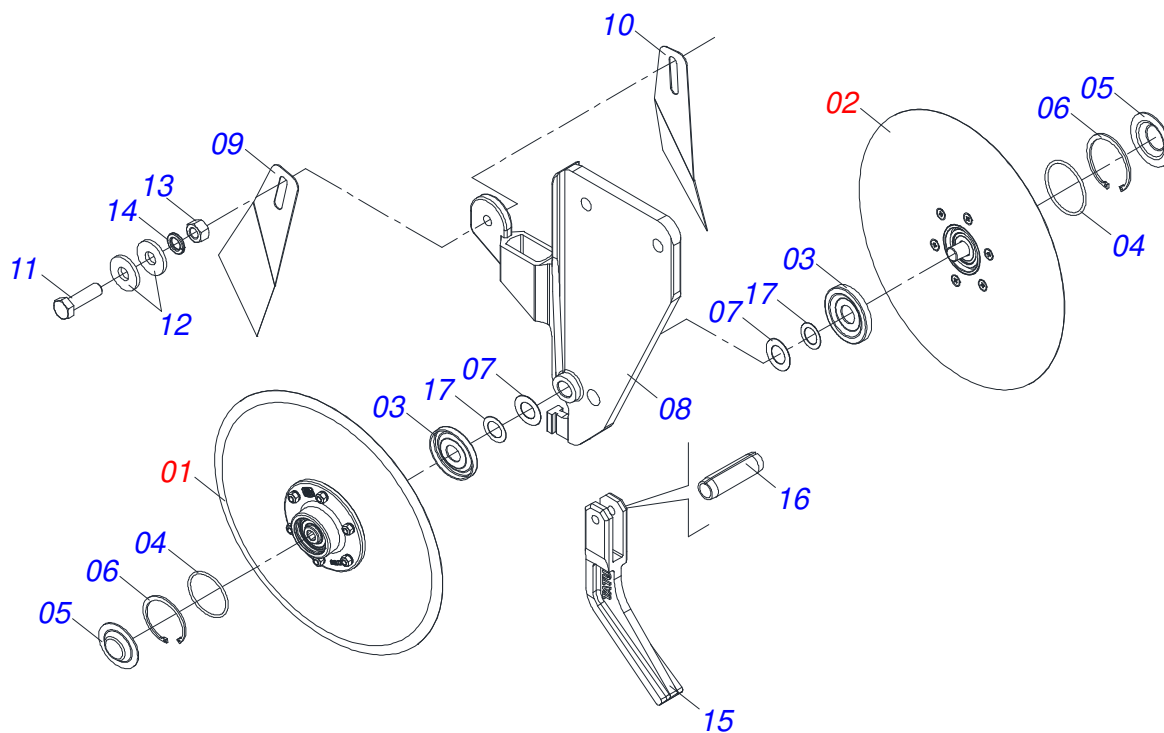


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15		01
02	0511053173	CUBE LOW RIGHT WITH DISC 15		01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
13	0503010026	3/8" NUT		01
14	0503010025	3/8" SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

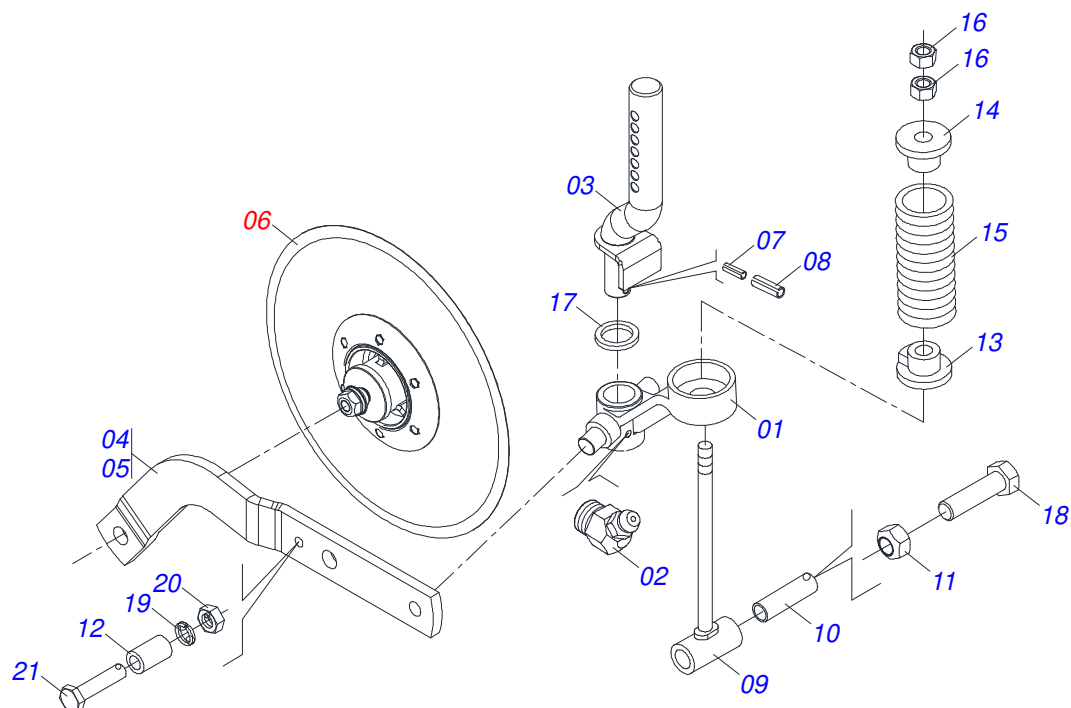


Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE	01	
02	0503010003	1845 GREASE FITTING	01	
03	0511067045	SHORT WHIT BEATER BLADE DISC FIX AXLE	01	
04	0521014137	RIGHT ARM BLADE DISC	01	
05	0521014138	SUPPORT ARM LEFT BALDE DISC	01	
06	0521054686	18" DISC BLADE HUB	01	
07	0503010756	0.2" X 2.4" SPRING PIN	01	
08	0503010361	SPRING PIN	01	
09	0501067323	SPRING REGULATOR	01	
10	0521010452	SLEEVE	01	
11	0503011255	3/4" LOCK NUT	01	
12	0571010188	13,50 X 19 X 86,30/86 SLEEVE	01	
13	1902020394	SPRING SUPPORT	01	
14	1902020393	SPRING UPPER SUPPORT	01	
15	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING	01	
16	0503010014	3/4" HEX NUT	02	
17	0541018684	FLAT WASHER	01	
18	0503013185	3/4" X 5-1/2" BOLT	01	
19	0503010019	1/2" SPRING WASHER	01	
20	0503010060	1/2 UNC G.5 ZN HEX NUT	01	
21	0503011411	1/2" X 5-1/2" BOLT	01	

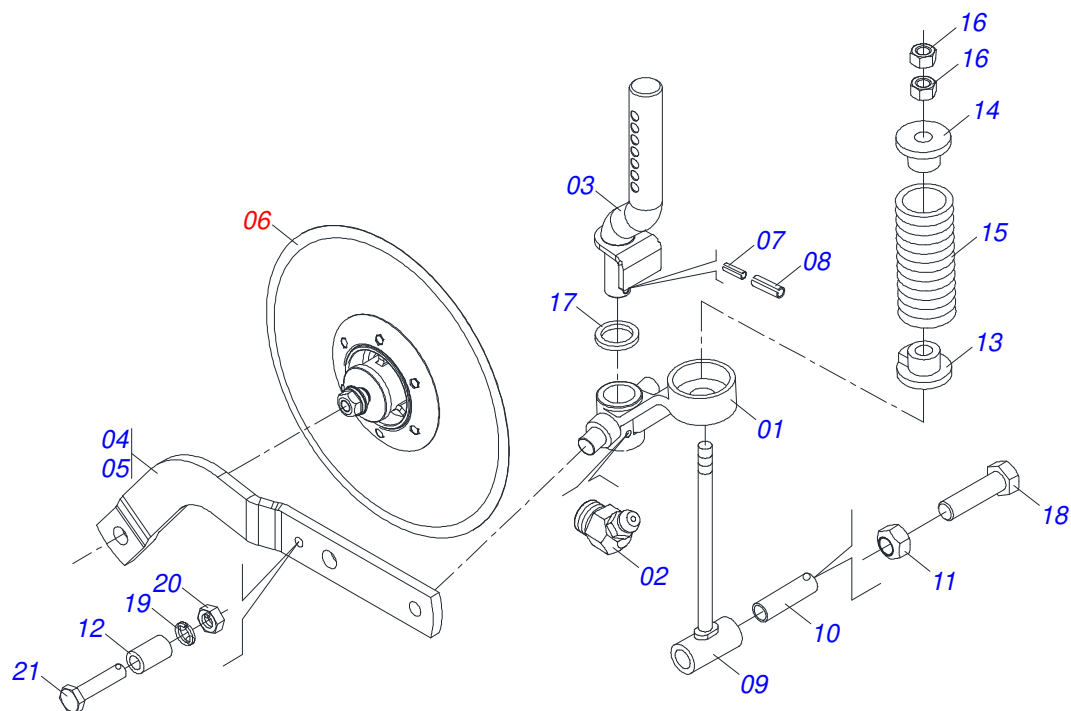


Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE	01	
02	0503010003	1845 GREASE FITTING	01	
03	0511067044	LONG WHIT BEATER BLADE DISC FIX AXLE	01	
04	0521014137	RIGHT ARM BLADE DISC	01	
05	0521014138	SUPPORT ARM LEFT BALDE DISC	01	
06	0521054686	18" DISC BLADE HUB	01	
07	0503010756	0.2" X 2.4" SPRING PIN	01	
08	0503010361	SPRING PIN	01	
09	0501067323	SPRING REGULATOR	01	
10	0521010452	SLEEVE	01	
11	0503011255	3/4" LOCK NUT	01	
12	0571010188	13,50 X 19 X 86,30/86 SLEEVE	01	
13	1902020394	SPRING SUPPORT	01	
14	1902020393	SPRING UPPER SUPPORT	01	
15	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING	01	
16	0503010014	3/4" HEX NUT	02	
17	0541018684	FLAT WASHER	01	
18	0503013185	3/4" X 5-1/2" BOLT	01	
19	0503010019	1/2" SPRING WASHER	01	
20	0503010060	1/2 UNC G.5 ZN HEX NUT	01	
21	0503011411	1/2" X 5-1/2" BOLT	01	

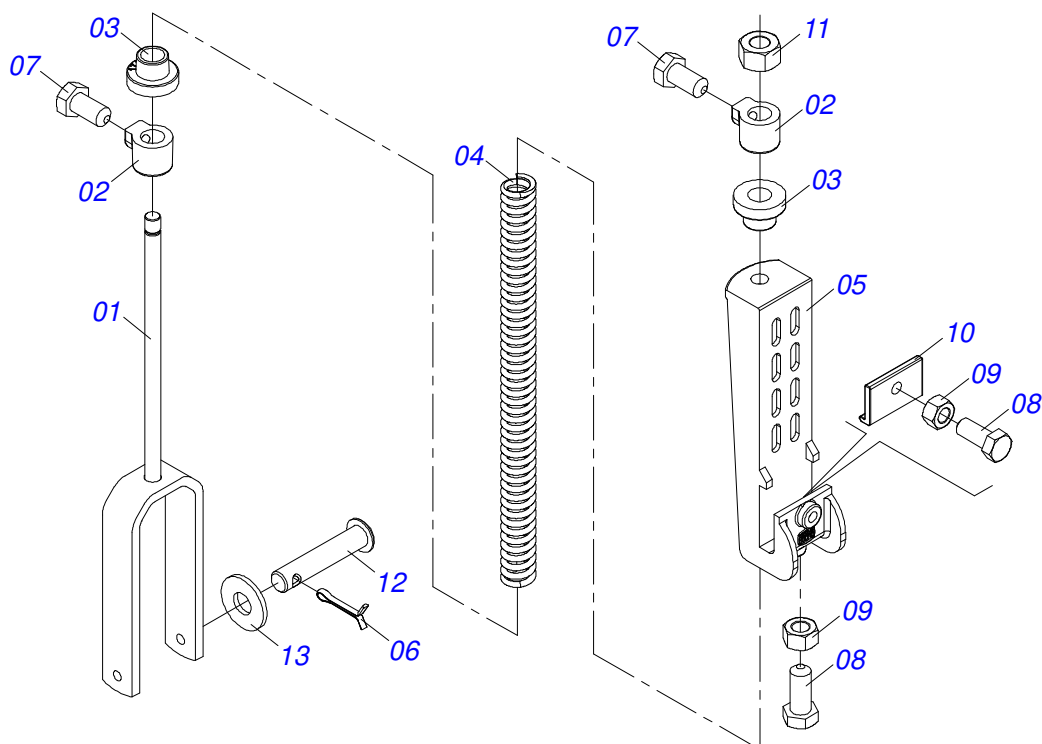


Item	Code	Description	See page	QT
01	0511069645	FERTILIZER SPRING ROD		01
02	0502040534	SPRING GUIDE BUSHING LOCK		02
03	0502012184	FERTILIZER SPRING GUIDE		02
04	0503031910	1.7" X 22.8" X 0.3" SPRING		01
05	0502012510	SPRING ROD SUPPORT		01
06	0503010257	1/8" X 1" COTTERPIN		01
07	0501018535	1/2 X 1 BOLT		02
08	0503030678	BOLT 1/2 UNC X 1.1/2 C50P G.5 ZN		02
09	0503010060	1/2 UNC G.5 ZN HEX NUT		02
10	1902010891	SPRING CHOCK SUPPORT VARON		01
11	0503010014	3/4" HEX NUT		01
12	0561014471	COUPLING SHAFT		01
13	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01

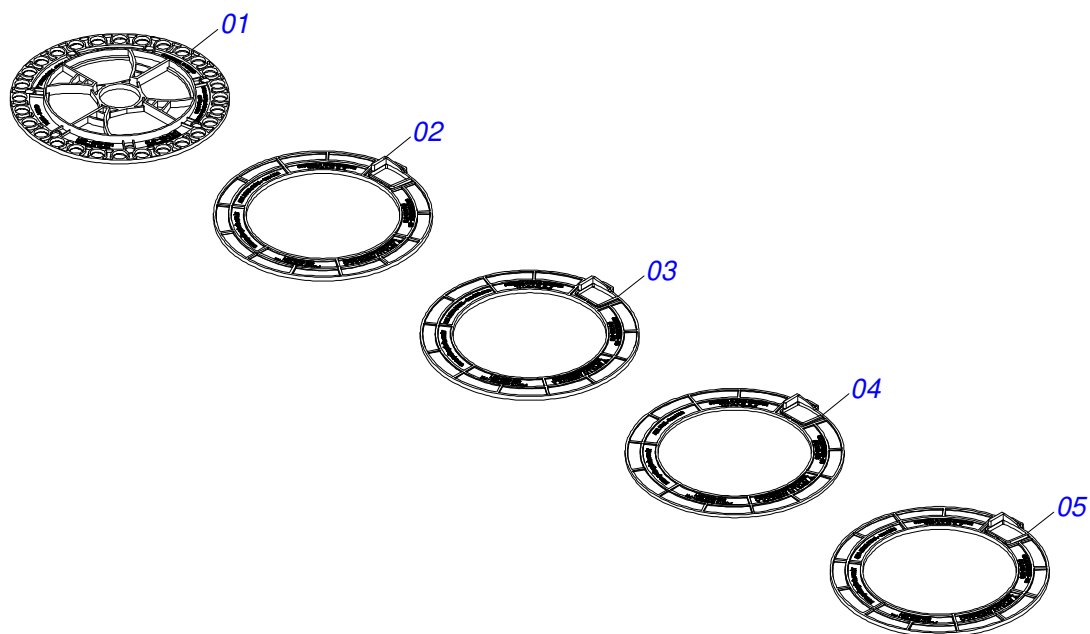


Item	Code	Description	See page	QT
01	0503016204	CORN DISC 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

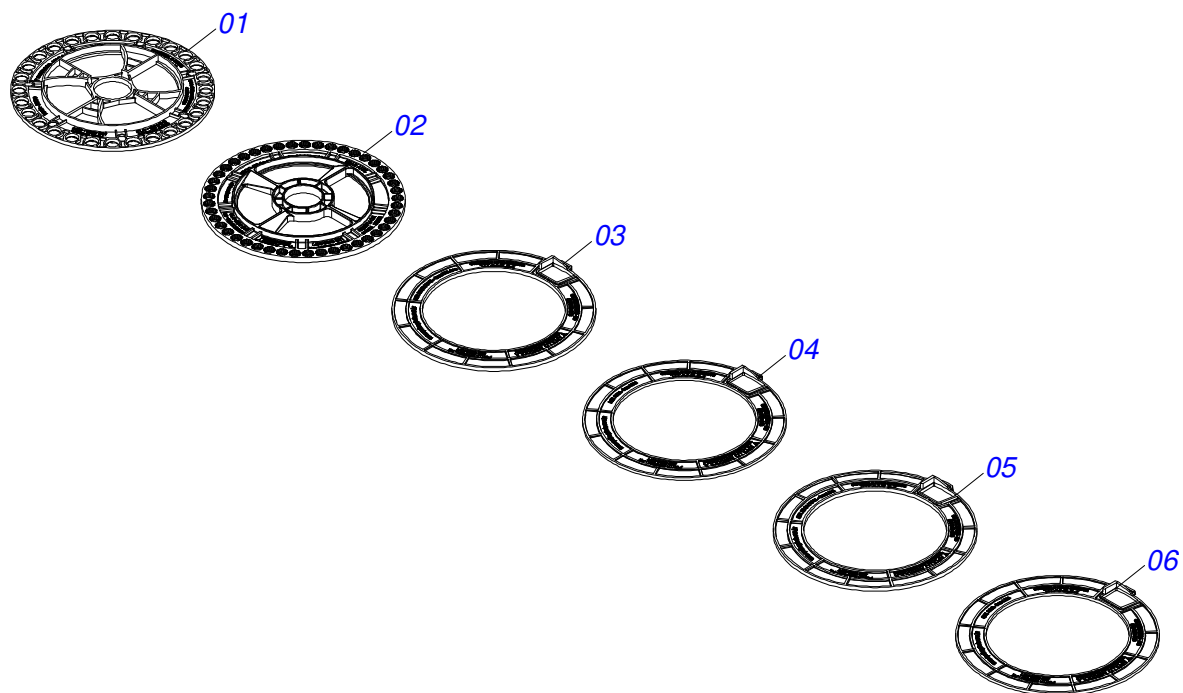

Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

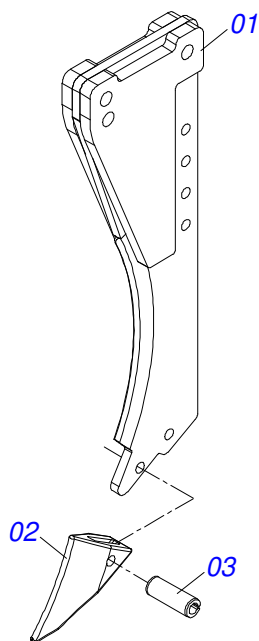

Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER ROD		01
02	1902070061	POINT SUBSOILER		01
03	0503011373	0.4" X 1.1" SPRING PIN		01

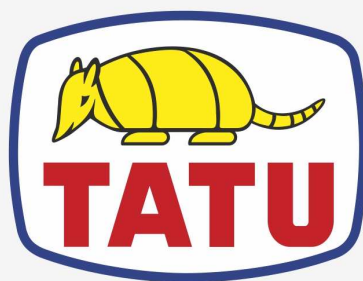

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

