

ROW CROP PLANTERS

USAP TITANIUM - FRAME 9810 - FERTILIZER/SEED/CSU/TCE

Code: 0501092911
Series: S-0419
Revision: 00
Date Revision: FEVEREIRO/2022

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111140474	USAP 9810/20E500 CSU CM TIT DT ESPECIAL S-0419

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX

0909095574	FRAME ASSY	1
0909095575	FRAME RIGHT SIDE ASSY	2
0909095576	ASSY CENTRAL FRAME	3
0909095577	LEFT SIDE FRAME ASSY	4
0909095578	SEED LINE/ASSY FERTILIZER	5
0531050595	TELESCOPE WITH INTERNAL STRAW 770/2482 ASSY	6
0521057792	PANTOGRAPHY HEADER	7
0521057786	HYDRAULIC CYLINDER HEAD PANTOGRAPH	8
0521058831	FRENCH HAND ASSY RIGHT 3593	9
0521058832	FRENCH HAND ASSY LEFT 3593	10
0511054713	ASSY FRENCH HAND TRANSMISSION SHAFT	11
0521058088	ROTULA WITH EXTENSOR AXIS 2	12
0511052052	SUPPORT WITH FIXATION	13
0521051438	HEADER 3 POINTS ASSY	14
0521057773	SEMI-ASSEMBLED REST	15
0511053121	GREATER TOOL BOX ASSY	16
0521058344	WATER RESERVOIR WITH SOAP	17
0521057815	HYDRAULIC HOSE SUPPORT WITH FIXATION	18
0511059814	TELESCOPIC LOCK ASSY	19
0531050078	SIDE HEX SHAFT TCE/APT/SEED	20
0521055326	RIGHT WHEEL WITH TRANSMISSION	21
0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	22
0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	23
0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR	24
0511054463	WHEEL TENSIONER SUPORT CENTRAL	25
0511054464	WHEEL FORK TENSIONER	26
0511054500	TRANSMISSION EXCHANGE RIGHT	27
0511054461	STRETCHER TOP TRANSMISSION SWIRLED	28
0521057490	CHAIN STRETCHER WITH ASSY HOLE 13	29
0521056865	EXCHANGE RIGHT ASSY FERTILIZER	30
0521056866	RIGHT SEMI-ASSEMBLED EXCHANGE	31
0501056444	BEARING WITH ROLLING	32
0501056271	BEARING CLOSED	33
0501052776	CHAIN TENSIONER RIGHT ASSY GREATEST	34
0501048790	AXLE WITH LINK ASSY	35
0501047300	DRIVE SHAFT	36
0521053068	MOTOR SUPPORT APT ASSY	37
0511052600	STRETCHER HYDRAULIC MOTOR SUPPORT	38
0531050587	RIGHT SUPPORT 6 MOUTH 2433 X 2035 ASSY	39
0531050588	RIGHT FERTILIZER SUPPORT 6 MOUTH 2433 X 2035 MOUNTED	40
0521054313	CLOSED BEARING	41
0511059491	AXLE HOLDER	42
0521054282	BEARING	43
0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	44
0521055365	SEED CONDUCTOR	45
0521050525	FIXER FERTILIZER CONDUCTOR	46
0521051407	FIXER SILO FERTILIZER	47
0521054290	ASSY SIDE SUPPORT	48
0521053054	ASSY SIDE HANDLE	49
0521057279	SIDE PLATFORM	50
0521054279	PLATFORM FIXER	51
0521059476	INTERNAL RIGHT HANDRAIL 228	52
0521059475	INTERNAL LEFT HANDRAIL 228	53
0511059383	INTERNAL FIXER ASSY HANDLE	54



MARCHESAN

INDEX

0521054272	LADDER ASSY	55
0531050609	SIDE ADHESIVE LABEL ASSY	56
0531050607	SIDE GUTTER ASSEMBLY	57
0521055102	BIGGEST FULL GUTTER SUPPORT	58
0531050608	SIDE DUCT ASSEMBLY	59
0511059943	SUPPORT FASTENER ASSY	60
0511059928	SIDE DUTY SUPPORT	61
0521058534	FRONT LINE SEED LONG TCE/CM	62
0521058533	FRONT SEED SHORT LINE TCE/CM	63
0521059045	BEARING WITH CURRENT ENCAPSULATED	64
0521050096	SEED DEPOSIT SYSTEM (CSU)	65
0511052058	SEED SYSTEM TITANIUM	66
0521055349	ASSY DPL20 CUTTING DISC	67
0521055348	LOWER SUPPORT WITH DPL 20 WITHOUT LUBRICATION	68
0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	69
0521053697	CUTTING DISK BOX	70
0521058084	REAR WITH RIGHT DDD SPICRR	71
0521058085	REAR WITH DDD LEFT SPICRR	72
0521056635	RIGHT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	73
0521056634	LEFT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	74
0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	75
0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	76
0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	77
0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	78
0521056632	DEPTH CONTROL	79
0521056633	MOUNTED RIGHT ARM	80
0521056631	MOUNTED LEFT ARM	81
0521055059	WHEEL RAYED ASSY SPA WITHOUT LUBRICATION	82
0521055093	BODY COMPACTOR	83
0521054990	LEFT COMPACTOR WHEEL	84
0521055017	RIGHT COMPACTOR WHEEL	85
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	86
0531050193	DOSING ASSY TITANIUM/TATU	87
0521056639	SEED ROW TRANSMISSION	88
0511052024	FAST CLOSING SET	89
0521054263	LEFT FERTILIZER CONDUCTOR ASSY	90
0521054262	RIGHT FERTILIZER CONDUCTOR	91
0521056854	ASSY LONG FERTILIZER CONDUCTOR	92
0521056855	ASSY SHORT FERTILIZER CONDUCTOR	93
0503062066	DISC SET WITH CORN RING	94
0503062067	DISC SET / RING SOY 90F TITANIUM	95
0521057293	CENTRAL FRAME 3900 FIXATION / TELESCOPIC LATCH	96
0521050019	TIGHTENING PLATE WITH FIXING INTERNAL	97
0521052189	38,10 X 63,50 X 386 X 148 HYDRAULIC CYLINDER	98
0531050611	ASSY CENTRAL HEX AXLE APT	99
0521043437	CENTRAL / SIDE WHEEL WITHOUT TRANSMISSION	100
0521044028	CENTRAL WHEEL WITH TRANSMISSION 8940	101
0511058240	HYDRAULIC CYLINDER 50,80 X 101,60 X 483 X 276	102
0511054495	WHEEL WITHOUT TIRE WITHOUT TRANSMISSION	103
0511054499	TRANSMISSION OF LARGER CENTRAL EXCHANGE	104
0501053654	DOUBLE BEARING TRANSMISSION SEED 3/4	105
0521057222	ASSY CENTRAL FERTILIZER EXCHANGE	106
0511054489	LEFT TENSIONER CENTRAL EXCHANGE	107
0511056179	CLUTCH WITH CARDAN CENTRAL	108
0501056443	BEARING ASSY GEAR BOX	109




MARCHESAN

INDEX

0521056856	ECU BOX WITH ASSY SUPPORT	110
0521056857	ECU APT / TVT BOX WITH EXCHANGE	111
0521057295	CENTRAL SUPPORT SILO 8 MOUTH	112
0521057226	CENTRAL SEED SUPPORT 3790 ASSY	113
0521057227	CENTRAL SUPPORT FERTILIZER 8 MOUTH 3790 MOUNTED	114
0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	115
0521059187	CENTRAL PLATFORM ASSY	116
0511054515	ASSY LEFT ARTICULATION ARM	117
0511054516	ASSY RIGHT ARTICULATION ARM	118
0521055949	LOWER ARTICULATED ARM CYLINDER ASSY	119
0511058226	HYDRAULIC CYLINDER 50,80 X 114,30 X 810 X 1300	120
0531050615	APT HYDRAULIC ASSEMBLY	121
0531050614	APT CENTRAL DUCT ASSY	122
0521053537	CENTRAL REAR DUCT SUPPORT	123
0531050586	CASAPPA TRIPLE FLOW DIVIDER VALVE 0201001Z WITH NIPLES	124
0531050058	SUPPORT ASSY BLOCK/VALVES	125
0531050351	ARTICULATED FERTILIZER / SEED HOSE ASSY	126
0521055274	HEAD HOSE ASSY	127
0531050617	LIFT HOSE SET FERTILIZER / SEED 1 SIDE WHEEL	128
0531051058	SET FERTILIZER AND SEED HOSE	129
0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	130
0531050612	APT CENTRAL GUTTER ASSEMBLY	131
0521058651	ELECTRICAL ASSY 15MT / 3F MECHANICAL LED	132
0521054283	HEADLIGHT WITH SUPPORT	133
0521059393	LED FLASHLIGHT WITH FIXATION SUPPORT	134
0521055426	ASSY ELECTRICAL BOX SUPPORT	135
0521052143	CLUTCH INDUCTIVE SENSOR ASSEMBLY	136
0531050610	ASSY ISO 3C 6-8-6 20L 45/50 C/MS/E	137
0521056496	MOTOR EMD 80 WITH BLOCK BLFP2618	138
0511056972	FILTER HYDAC	139
0531050613	CENTRAL CHASSIS ADHESIVE LABEL ASSY	140
0521059368	SUPPORT/SENSOR ASSY PSS-X1005B 87780-000 TE	141
0521058330	SENSOR SUPPORT	142
0521058331	DRIVE HYDRAULIC ASSEMBLY	143
0521057203	ELECTRIC ASSEMBLY BCE (PACKED) MECHANICAL	144
0521055327	LEFT WHEEL WITH TRANSMISSION	145
0511054501	TRANSMISSION CAMBIO LEFT	146
0521056864	ASSY LEFT EXCHANGE FERTILIZER	147
0521056867	SEMI-ASSEMBLED LEFT EXCHANGE	148
0501052778	CHAIN TENSIONER ASSY	149
0521054349	FILTER SUPPORT	150
0531050589	6 MOUTH LEFT SUPPORT 2433 X 2035 ASSY	151
0531050590	LEFT SUPPORT FERTILIZER 6 MOUTH 2433 X 2035 MOUNTED	152

FRAME ASSY


0909095574

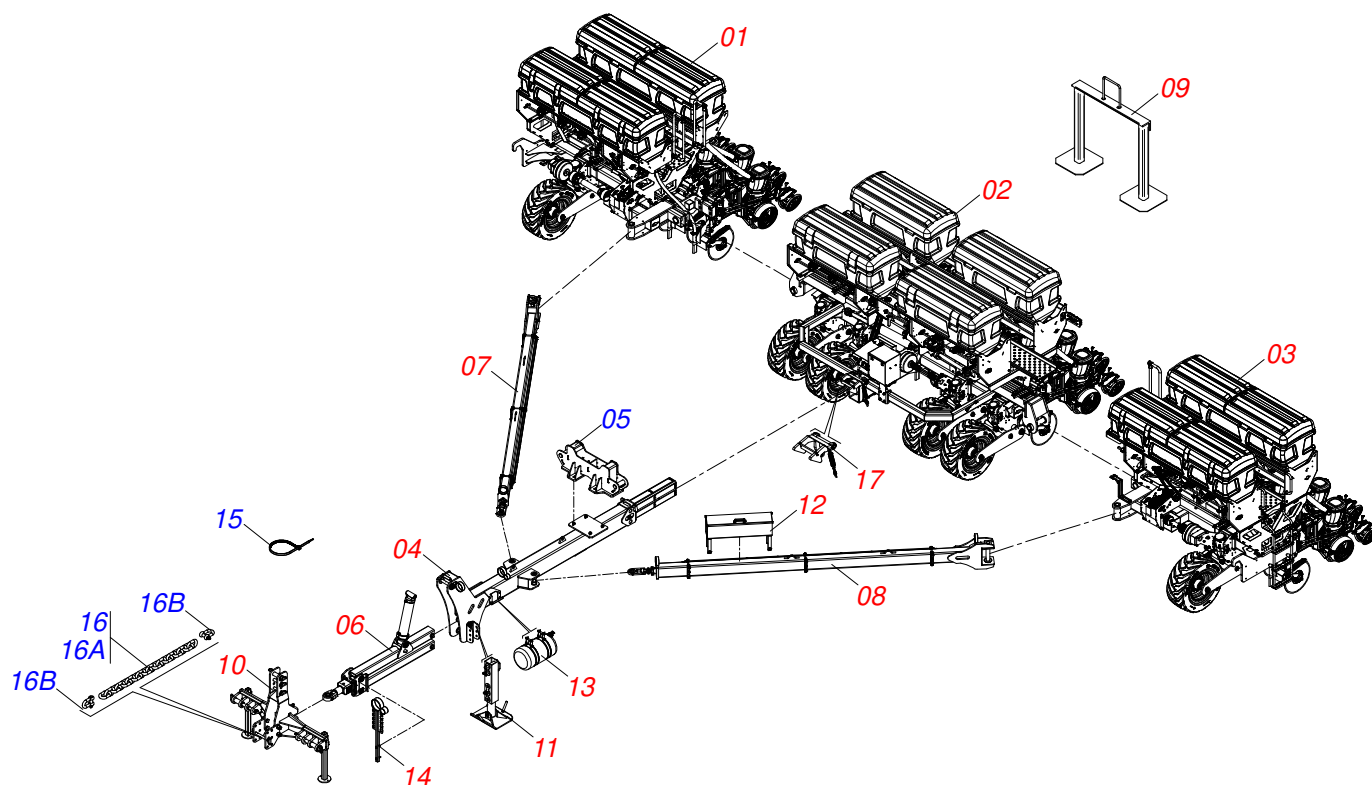

Item	Code	Description	See page	QT
01	0909095575	FRAME RIGHT SIDE ASSY	2	01
02	0909095576	ASSY CENTRAL FRAME	3	01
03	0909095577	LEFT SIDE FRAME ASSY	4	01
04	0531050595	TELESCOPE WITH INTERNAL STRAW 770/2482 ASSY	6	01
05	0521069072	TRANSPORT LOCK		01
06	0521057792	PANTOGRAPHY HEADER	7	01
07	0521058831	FRENCH HAND ASSY RIGHT 3593	9	01
08	0521058832	FRENCH HAND ASSY LEFT 3593	10	01
09	0511052052	SUPPORT WITH FIXATION	13	04
10	0521051438	HEADER 3 POINTS ASSY	14	01
11	0521057773	SEMI-ASSEMBLED REST	15	01
12	0511053121	GREATER TOOL BOX ASSY	16	01
13	0521058344	WATER RESERVOIR WITH SOAP	17	01
14	0521057815	HYDRAULIC HOSE SUPPORT WITH FIXATION	18	01
15	0503018829	NYLON CLAMP		12
16	0521058345	SAFETY CHAIN WITH SHACKLE		01
16A	0503014120	CHAIN		01
16B	0503014321	CABLE STEEL SHACKLE		02
17	0511059814	TELESCOPIC LOCK ASSY	19	01

FRAME RIGHT SIDE ASSY


0909095575

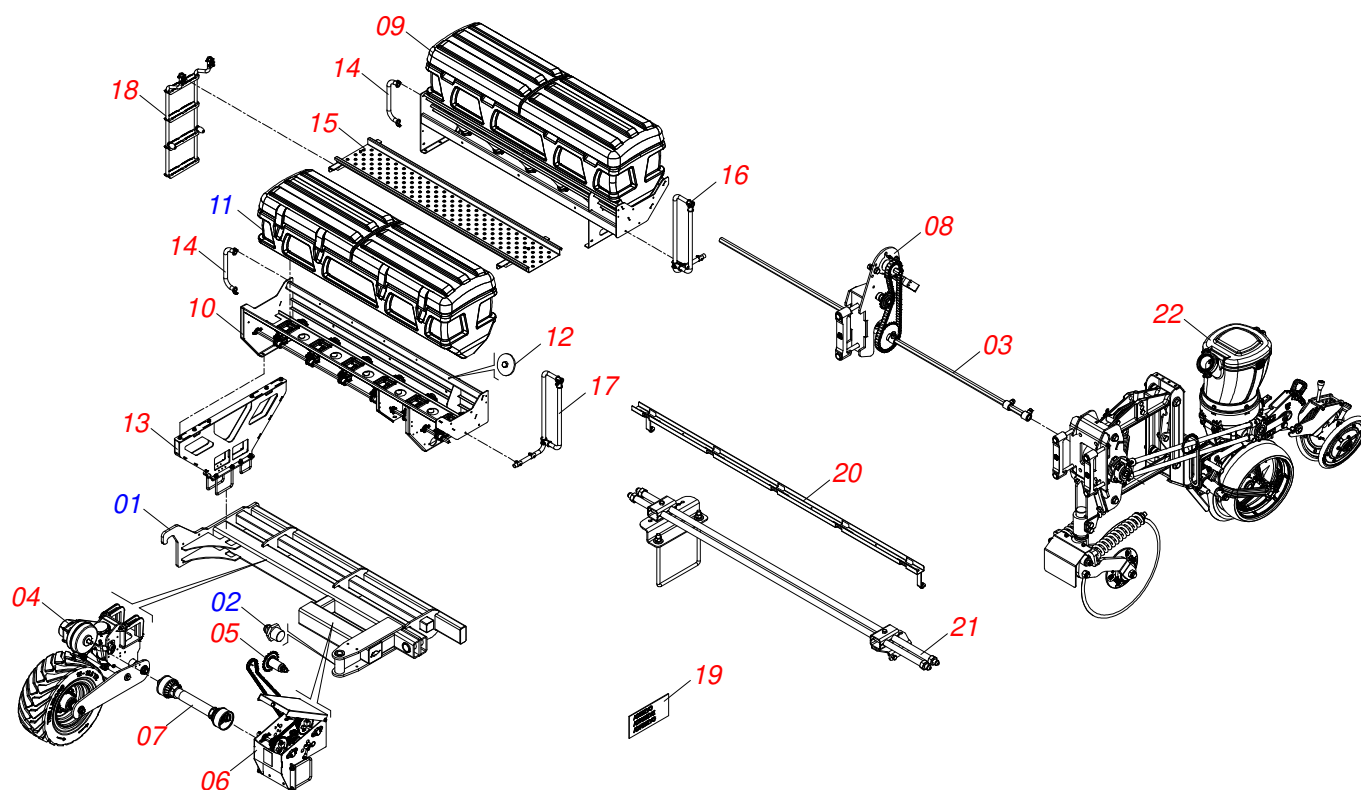

Item	Code	Description	See page	QT
01	0531060504	RIGHT SIDE FRAME 2760		01
02	0503010002	1800 GREASE FITTING		01
03	0531050078	SIDE HEX SHAFT TCE/APT/SEED	20	01
04	0521055326	RIGHT WHEEL WITH TRANSMISSION	21	01
05	0521057490	CHAIN STRETCHER WITH ASSY HOLE 13	29	01
06	0521056865	EXCHANGE RIGHT ASSY FERTILIZER	30	01
07	0501047300	DRIVE SHAFT	36	01
08	0521053068	MOTOR SUPPORT APT ASSY	37	01
09	0531050587	RIGHT SUPPORT 6 MOUTH 2433 X 2035 ASSY	39	01
10	0531050588	RIGHT FERTILIZER SUPPORT 6 MOUTH 2433 X 40 2035 MOUNTED		01
11	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED		01
12	0521051407	FIXER SILO FERTILIZER	47	10
13	0521054290	ASSY SIDE SUPPORT	48	02
14	0521053054	ASSY SIDE HANDLE	49	02
15	0521057279	SIDE PLATFORM	50	01
16	0521059476	INTERNAL RIGHT HANDRAIL 228	52	01
17	0521059475	INTERNAL LEFT HANDRAIL 228	53	01
18	0521054272	LADDER ASSY	55	01
19	0531050609	SIDE ADHESIVE LABEL ASSY	56	01
20	0531050607	SIDE GUTTER ASSEMBLY	57	01
21	0531050608	SIDE DUCT ASSEMBLY	59	01
22	0909095578	SEED LINE/ASSY FERTILIZER	5	06

ASSY CENTRAL FRAME

0909095576

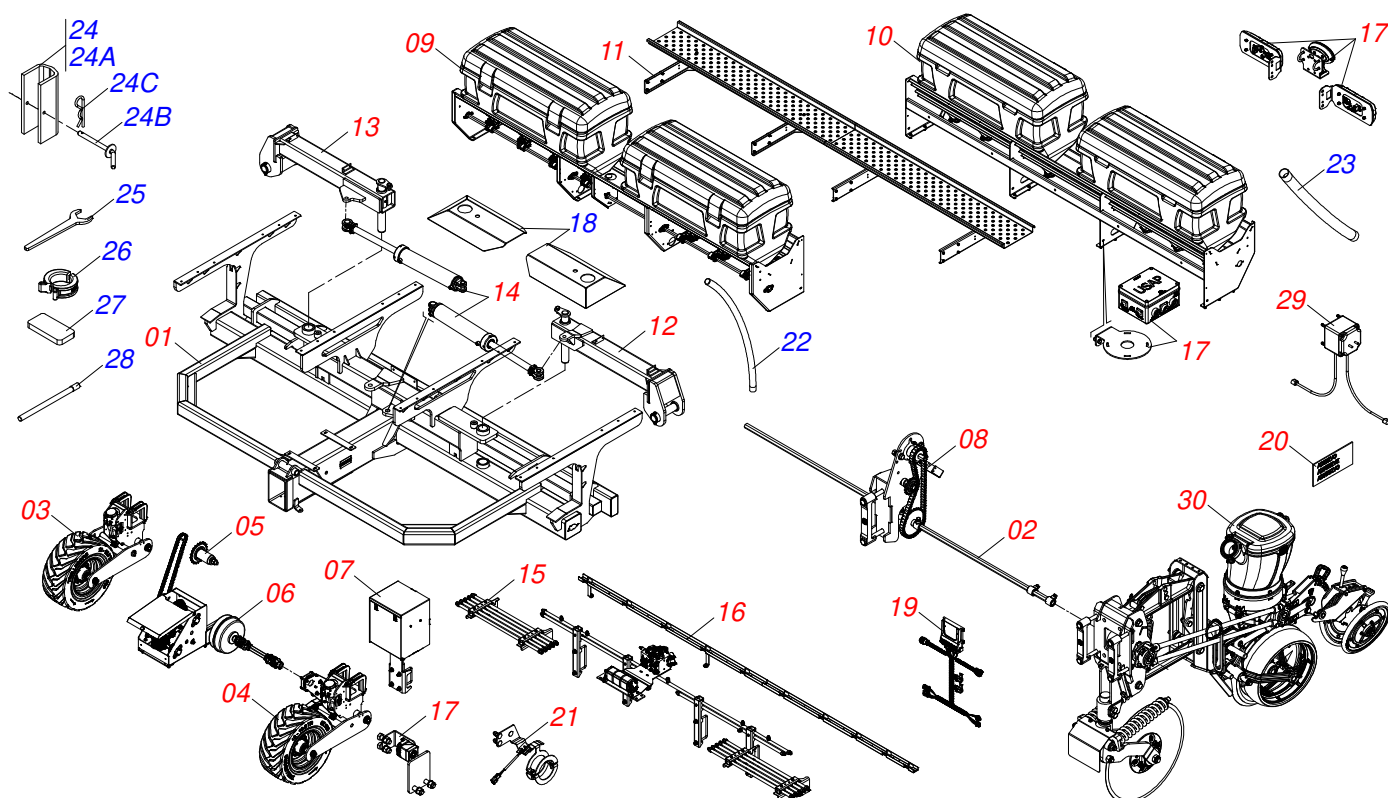

Item	Code	Description	See page	QT
01	0521057293	CENTRAL FRAME 3900 FIXATION / TELESCOPIC LATCH	96	01
02	0531050611	ASSY CENTRAL HEX AXLE APT	99	01
03	0521043437	CENTRAL / SIDE WHEEL WITHOUT TRANSMISSION	100	03
04	0521044028	CENTRAL WHEEL WITH TRANSMISSION 8940	101	01
05	0521057490	CHAIN STRETCHER WITH ASSY HOLE 13	29	01
06	0521057222	ASSY CENTRAL FERTILIZER EXCHANGE	106	01
07	0521056856	ECU BOX WITH ASSY SUPPORT	110	01
08	0521053068	MOTOR SUPPORT APT ASSY	37	01
09	0521057295	CENTRAL SUPPORT SILO 8 MOUTH	112	01
10	0521057226	CENTRAL SEED SUPPORT 3790 ASSY	113	01
11	0521059187	CENTRAL PLATFORM ASSY	116	01
12	0511054515	ASSY LEFT ARTICULATION ARM	117	01
13	0511054516	ASSY RIGHT ARTICULATION ARM	118	01
14	0521055949	LOWER ARTICULATED ARM CYLINDER ASSY	119	01
15	0531050615	APT HYDRAULIC ASSEMBLY	121	01
16	0531050612	APT CENTRAL GUTTER ASSEMBLY	131	01
17	0521058651	ELECTRICAL ASSY 15MT / 3F MECHANICAL LED	132	01
18	0581018653	LESSER PROTECTION		02
19	0531050610	ASSY ISO 3C 6-8-6 20L 45/50 C/MS/E	137	01
20	0531050613	CENTRAL CHASSIS ADHESIVE LABEL ASSY	140	01
21	0521059368	SUPPORT/SENSOR ASSY PSS-X1005B 87780-000 TE	141	01
22	1164920006	BLACK LIGHT SUCTION HOSE		23
23	1164920013	FLEX HOSE SPIRAL		01
24	0521055637	ASSY TRANSPORT LOCK		04
24A	0551018312	TRANSPORT LOCK		01
24B	0501068994	0.3" X 3.1" LOCK PIN		01
24C	0503030168	HAIR PIN		01
25	0561016793	FIXED WRENCH		01
26	0501047885	ROD STOP		08




ASSY CENTRAL FRAME

0909095576


Item	Code	Description	See page	QT
27	0561017063	HOLDER TUBE		02
28	0581019559	AXIS		01
29	0521057203	ELECTRIC ASSEMBLY BCE (PACKED)	144	01
30	0909095578	MECHANICAL SEED LINE/ASSY FERTILIZER	5	08

LEFT SIDE FRAME ASSY


0909095577

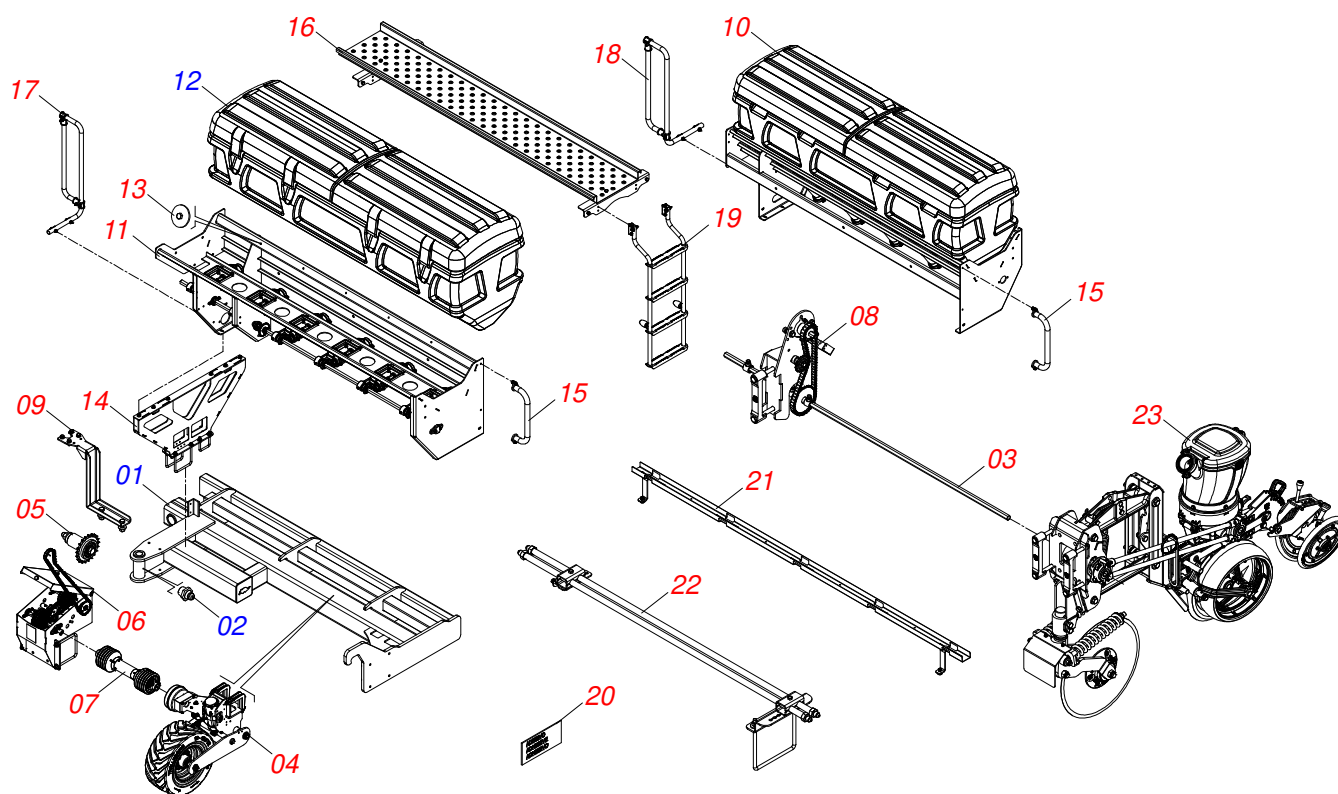

Item	Code	Description	See page	QT
01	0531060505	2760 LEFT SIDE FRAME		01
02	0503010002	1800 GREASE FITTING		01
03	0531050078	SIDE HEX SHAFT TCE/APT/SEED	20	01
04	0521055327	LEFT WHEEL WITH TRANSMISSION	145	01
05	0521057490	CHAIN STRETCHER WITH ASSY HOLE 13	29	01
06	0521056864	ASSY LEFT EXCHANGE FERTILIZER	147	01
07	0503062272	CARDAN WITHOUT PROTECTION		01
08	0521053068	MOTOR SUPPORT APT ASSY	37	01
09	0521054349	FILTER SUPPORT	150	01
10	0531050589	6 MOUTH LEFT SUPPORT 2433 X 2035 ASSY	151	01
11	0531050590	LEFT SUPPORT FERTILIZER 6 MOUTH 2433 X 2035 MOUNTED	152	01
12	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED		01
13	0521051407	FIXER SILO FERTILIZER	47	10
14	0521054290	ASSY SIDE SUPPORT	48	02
15	0521053054	ASSY SIDE HANDLE	49	02
16	0521057279	SIDE PLATFORM	50	01
17	0521059476	INTERNAL RIGHT HANDRAIL 228	52	01
18	0521059475	INTERNAL LEFT HANDRAIL 228	53	01
19	0521054272	LADDER ASSY	55	01
20	0531050609	SIDE ADHESIVE LABEL ASSY	56	01
21	0531050607	SIDE GUTTER ASSEMBLY	57	01
22	0531050608	SIDE DUCT ASSEMBLY	59	01
23	0909095578	SEED LINE/ASSY FERTILIZER	5	06

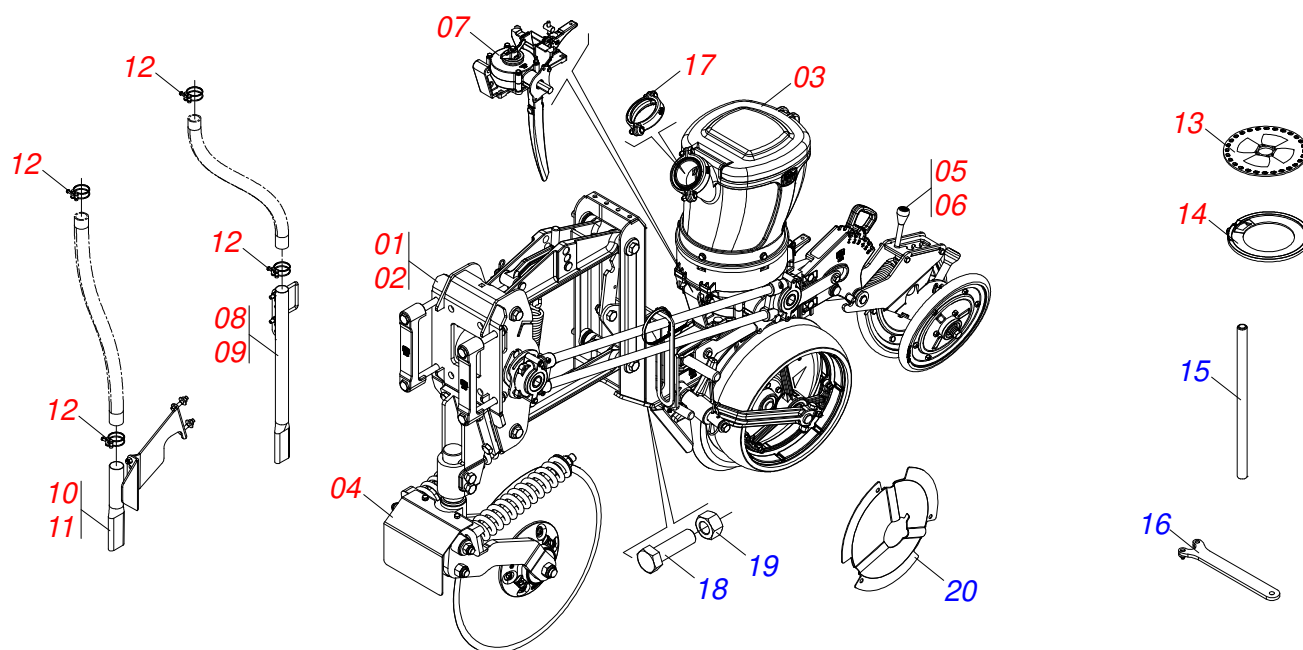


Item	Code	Description	See page	QT
01	0521058534	FRONT LINE SEED LONG TCE/CM	62	01
02	0521058533	FRONT SEED SHORT LINE TCE/CM	63	01
03	0521050096	SEED DEPOSIT SYSTEM (CSU)	65	01
04	0521055349	ASSY DPL20 CUTTING DISC	67	01
05	0521058084	REAR WITH RIGHT DDD SPICRR	71	01
06	0521058085	REAR WITH DDD LEFT SPICRR	72	01
07	0531050193	DOSING ASSY TITANIUM/TATU	87	01
08	0521054263	LEFT FERTILIZER CONDUCTOR ASSY	90	01
09	0521054262	RIGHT FERTILIZER CONDUCTOR	91	01
10	0521056854	ASSY LONG FERTILIZER CONDUCTOR	92	01
11	0521056855	ASSY SHORT FERTILIZER CONDUCTOR	93	01
12	0503019222	BRACELET TYPE WIRE 3.2MM X 48 X 63 MM		01
13	0503062066	DISC SET WITH CORN RING	94	01
14	0503062067	DISC SET / RING SOY 90F TITANIUM	95	01
15	0531013600	PRESS ADJUSTMENT LEVER		01
16	0521068982	KEY CASH DISC CUTTING		01
17	0521050525	FIXER FERTILIZER CONDUCTOR	46	01
18	0503014234	BOLT 1/2 UNF X 1.3/4 CS G.5 ZN		01
19	0503012136	NUT 1/2 NF		01
20	0561016889	STRIPED CAP WHEEL DEPTH		01

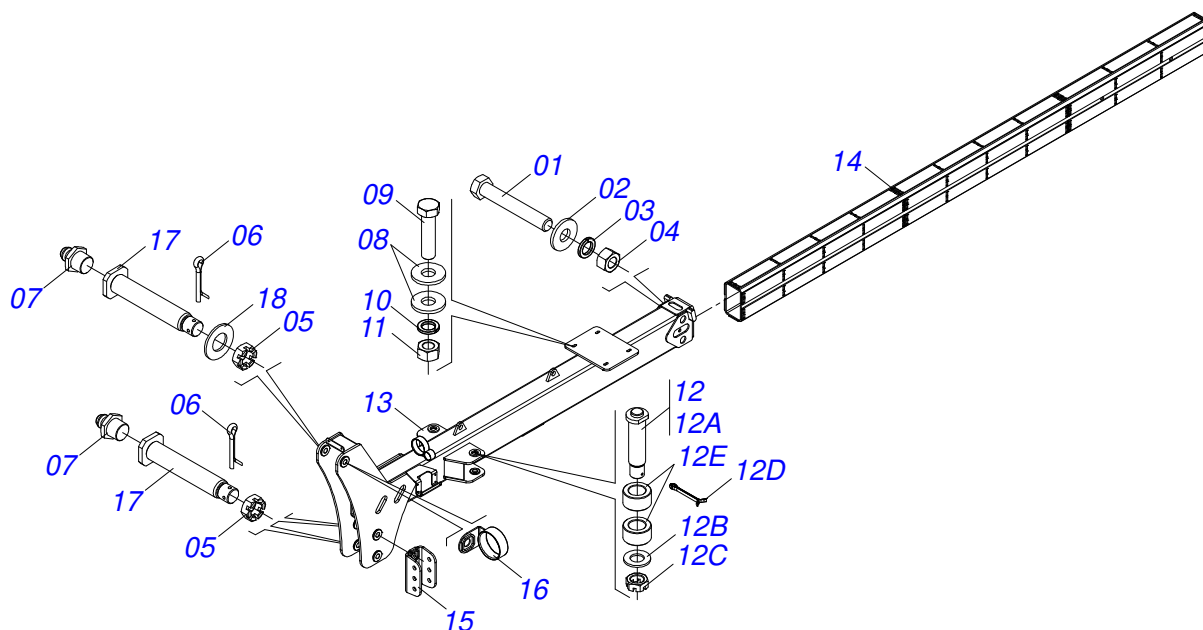


Item	Code	Description	See page	QT
01	0503015764	BOLT 7/8		01
02	0501010076	FLAT WASHER		01
03	0503010408	7/8" SPRING WASHER		01
04	0503010417	7/8" NUT		01
05	0503011052	1.1/4" X 0.77" CASTLE NUT		03
06	0503010038	3/16 X 2 COTTERPIN		03
07	0503010002	1800 GREASE FITTING		03
08	0501012140	FLAT WASHER		08
09	0503010233	5/8" X 2-1/2" BOLT		04
10	0503010027	5/8" SPRING WASHER		04
11	0503010013	5/8" NUT		04
12	0521051433	FRENCH HAND FRONT AXLE ASSY		02
12A	0511069442	FRENCH HAND FRONT AXLE		01
12B	0501017779	32 X 60 X 4.75 FLAT WASHER		01
12C	0503011052	1.1/4" X 0.77" CASTLE NUT		01
12D	0503010038	3/16 X 2 COTTERPIN		01
12E	0581014420	SLEEVE GUIDE		02
13	0531061928	TELESCOPIC HEADER 770/2482		01
14	0521069928	INTERNAL CANUDO 4286/4290		01
15	0531060748	REST SUPPORT		01
16	0531060747	TELESCOPIC HOSE GUIDE		01
17	0531060746	AXIS 278 TELESCOPIC HEADER		03
18	0591013764	FLAT WASHER 39 X 65 X 8,00 ZN		01

PANTOGRAPHY HEADER


0521057792

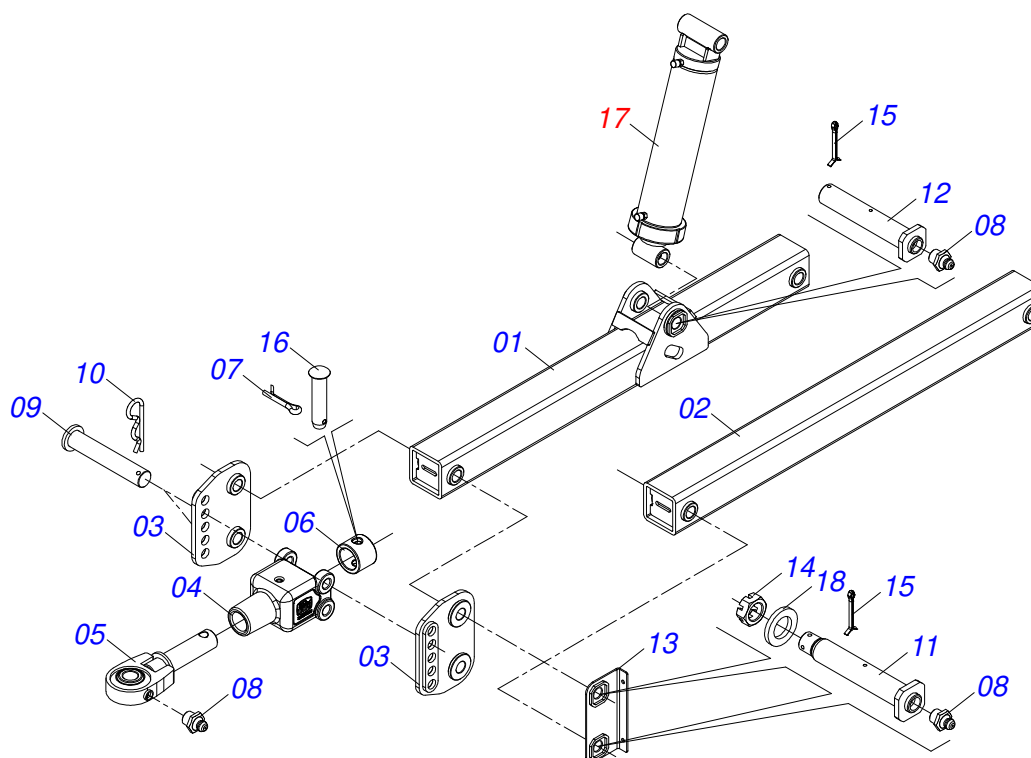


Item	Code	Description	See page	QT
01	0531060744	UPPER ARM PANTOGRAPHIC HEADER		01
02	0531060743	LOWER ARM PANTOGRAPHIC HEADER		01
03	0531060745	PANTOGRAPHIC ARM EAR		02
04	0502040864	GEAR BOX WITH REGULATOR		01
05	0521068007	TRACTOR HITCH		01
06	1902040327	LOCK SLEEVE		01
07	0503010523	1/4" X 2" COTTERPIN		01
08	0503010002	1800 GREASE FITTING		04
09	0521063432	LOCK AXLE		02
10	0503031035	HAIR PIN		02
11	0531060746	AXIS 278 TELESCOPIC HEADER		02
12	0531060792	AXIS 200 TELESCOPIC HEADER		01
13	0531060776	HYDRAULIC HOSE SUPPORT FIXER		01
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010038	3/16 X 2 COTTERPIN		03
16	0521010578	COUPLING SHAFT		01
17	0521057786	HYDRAULIC CYLINDER HEAD PANTOGRAPH	8	01
18	0591013764	FLAT WASHER 39 X 65 X 8,00 ZN		02

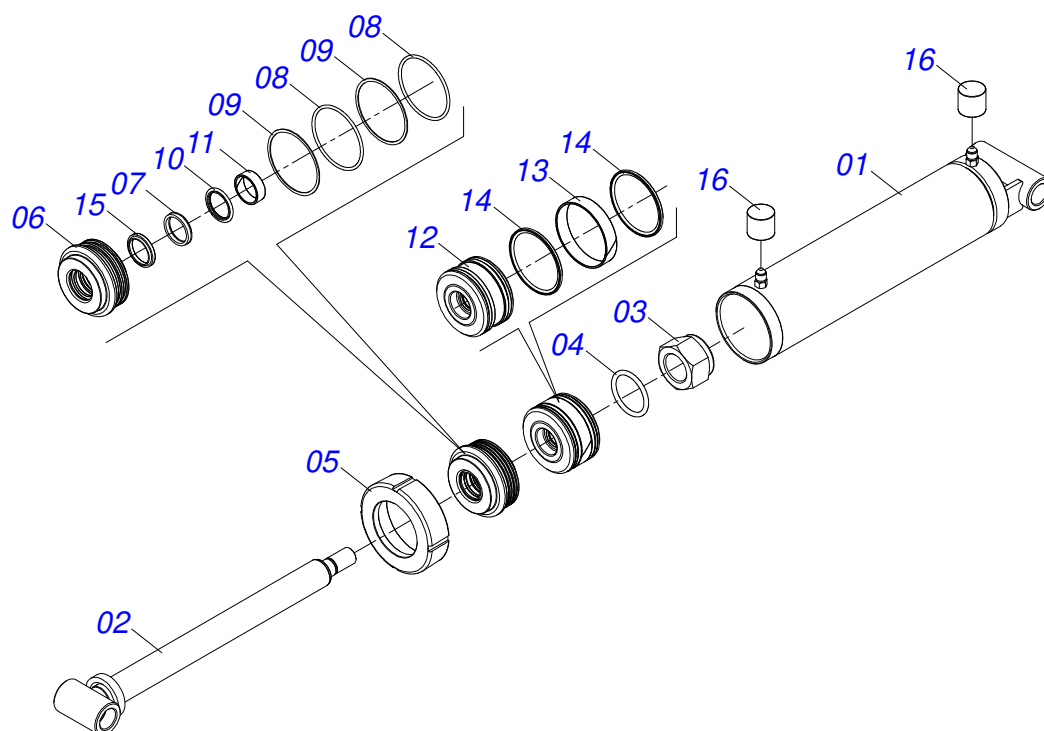


Item	Code	Description	See page	QT
01	0531060769	PANTOGRAPHIC HEAD CYLINDER CASE		01
02	0531060770	PANTOGRAPHIC HEAD CYLINDER ROD		01
03	0503010817	1.1/4" SELF LOCKING NUT		01
04	0503010345	2-218 N 3006-9B O'RING		01
05	0502010382	5" END CAP		01
06	0581010353	RING SUPPORT		01
07	0503018026	1870-2000-375 B GASKET		01
08	0503011453	O'RING		02
09	0503018152	O'RING		02
10	0503018024	RING BS		01
11	0503018025	RING GUIDE		01
12	0581010354	PISTON		01
13	0503018150	RING GUIDE		01
14	0503018151	RING BS		02
15	0503010039	D-2000 SCRAPER RING		01
16	0503030385	CYLINDER PLUG N-002		02

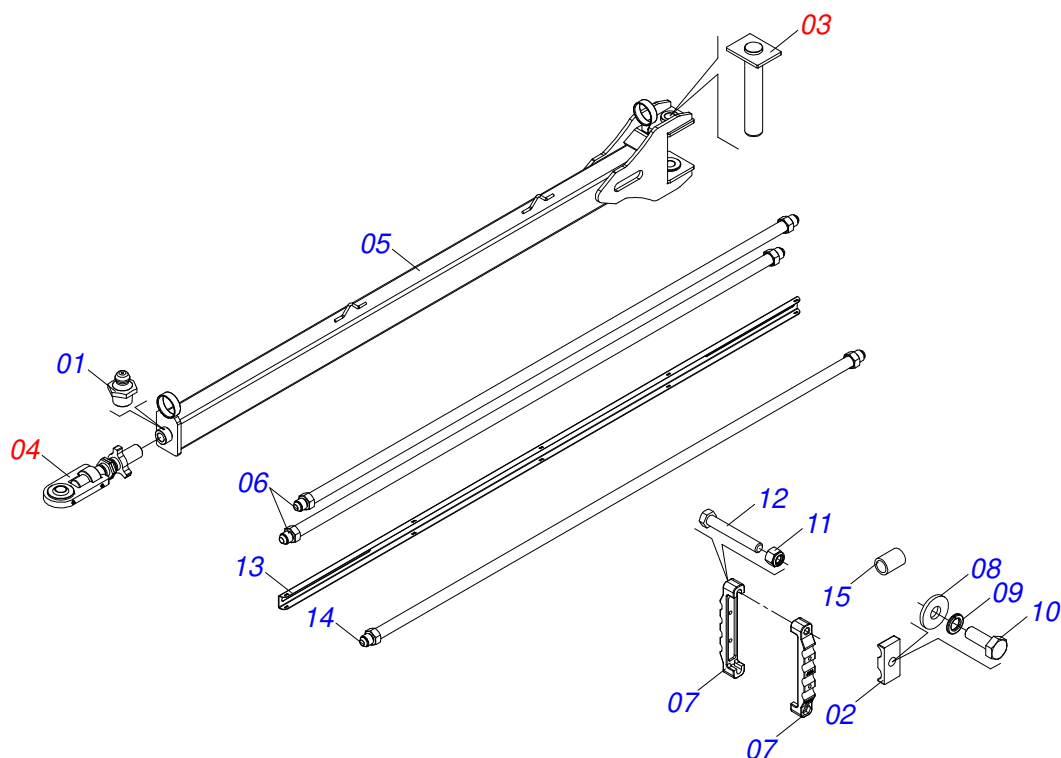


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	1902010477	UPPER CLAMP BODY		04
03	0511054713	ASSY FRENCH HAND TRANSMISSION SHAFT	11	01
04	0521058088	ROTULA WITH EXTENSOR AXIS 2	12	01
05	0521069927	FRENCH HAND 3593		01
06	0521069926	OIL DUCT R1.1 / 16 X 2460		02
07	0502012907	FRENCH HAND DUCTS SUPPORT		04
08	0501010984	FLAT WASHER		04
09	0503010025	3/8" SPRING WASHER		04
10	0503010964	BOLT		04
11	0503010589	1/2" UNC SELF ADJUSTING NUT		04
12	0503011404	BOLT		04
13	0591010529	FRENCH HAND RAIL 20 X38 X 2380		01
14	0521069925	OIL DUCT R7/8 X 2460		01
15	0581018419	SUPPORT		02

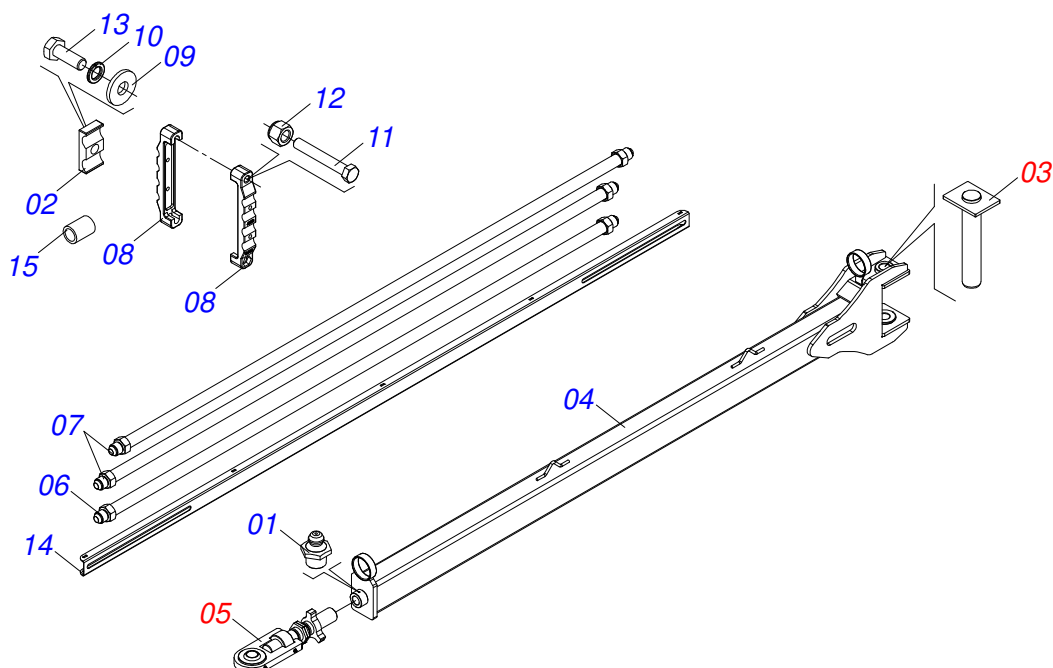


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	1902010477	UPPER CLAMP BODY		04
03	0511054713	ASSY FRENCH HAND TRANSMISSION SHAFT	11	01
04	0521069927	FRENCH HAND 3593		01
05	0521058088	ROTULA WITH EXTENSOR AXIS 2	12	01
06	0521069925	OIL DUCT R7/8 X 2460		01
07	0521069924	OIL DUTO R3/4 X 2460		02
08	0502012907	FRENCH HAND DUCTS SUPPORT		04
09	0501010984	FLAT WASHER		04
10	0503010025	3/8" SPRING WASHER		04
11	0503010964	BOLT		04
12	0503010589	1/2" UNC SELF ADJUSTING NUT		04
13	0503011404	BOLT		04
14	0591010529	FRENCH HAND RAIL 20 X38 X 2380		01
15	0581018419	SUPPORT		02

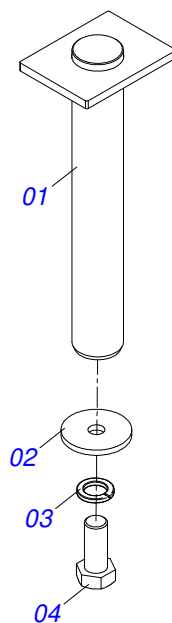

Item	Code	Description	See page	QT
01	0521062244	PIVOT SHAFT		01
02	0551019529	FLAT WASHER		01
03	0503010027	5/8" SPRING WASHER		01
04	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		01

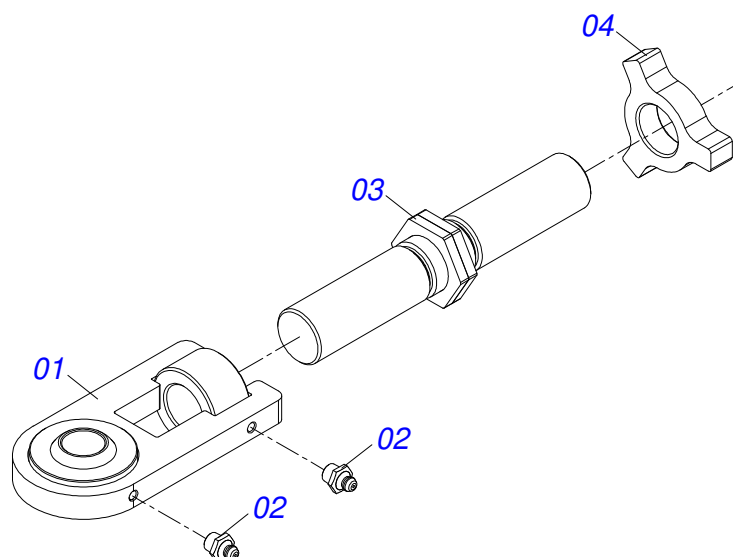


Item	Code	Description	See page	QT
01	0531061046	ROTULA WITH R2 LEFT NUT		01
02	0503010002	1800 GREASE FITTING		02
03	0501078990	TURNBUCLE AXLE		01
04	0561019879	LOCK ATTACHMENT BAR		01

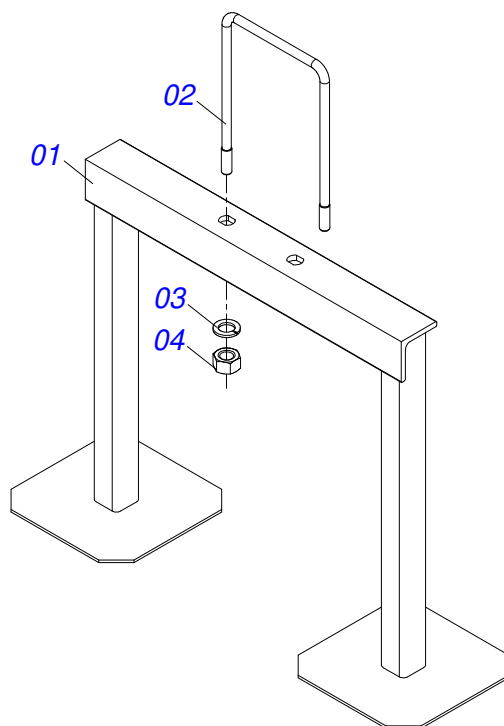


Item	Code	Description	See page	QT
01	0521063339	HIGHER		06
02	0571011070	5/8" UNC FASTENER		06
03	0503010027	5/8" SPRING WASHER		12
04	0503010013	5/8" NUT		12

HEADER 3 POINTS ASSY

0521051438

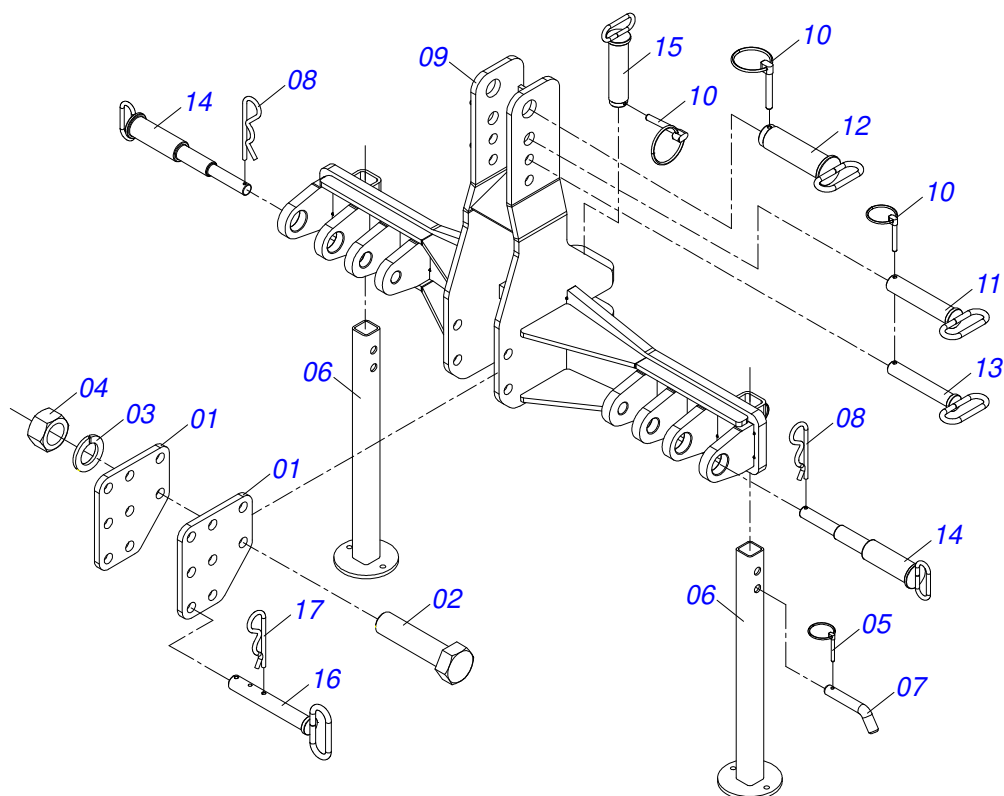


Item	Code	Description	See page	QT
01	0561013456	GUIDE DRAWBAR ASSY		02
02	0501010276	BOLT		04
03	0503010012	1" SPRING WASHER		04
04	0501010059	1.5/8 NUT		04
05	0503030119	LOCK PIN		02
06	0511069471	PLOUGH SUPPORT		02
07	0501011075	PIN		02
08	0503030285	HAIR PIN		02
09	0521068020	DRAWBAR ASSY		01
10	0503030085	LOCK PIN		04
11	0521068018	UPPER AXLE		01
12	0521068015	UPPER AXLE		01
13	0521068013	UPPER AXLE		01
14	0521068011	AXLE LOWER		02
15	0521068010	HITCH AXLE		01
16	0521068009	UPPER AXLE		01
17	0503031035	HAIR PIN		01

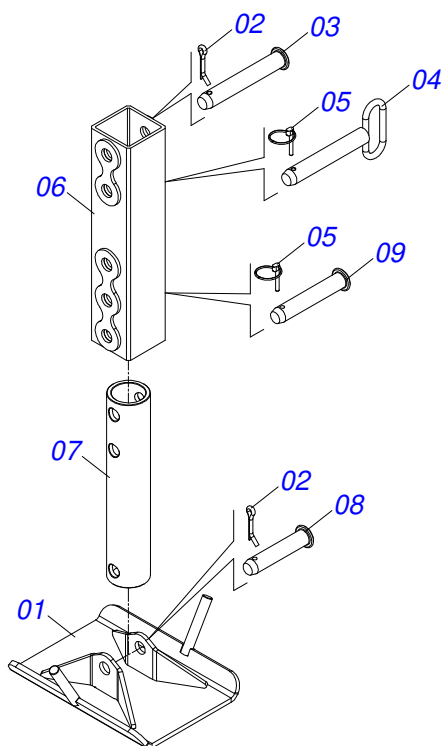


Item	Code	Description	See page	QT
01	0531060668	REST SUPPORT		01
02	0503010571	1/4" X 1.1/2 COTTERPIN		02
03	0521010784	COUPLING SHAFT		01
04	0531060758	AXLE JUNCTION 25.4 X 150 WITH HANDLE		01
05	0503030085	LOCK PIN		02
06	0531060667	REST		01
07	0591013219	INTERNAL TUBE REST		01
08	0521010580	COUPLING SHAFT		01
09	0521012533	COUPLING SHAFT		01

GREATER TOOL BOX ASSY


0511053121

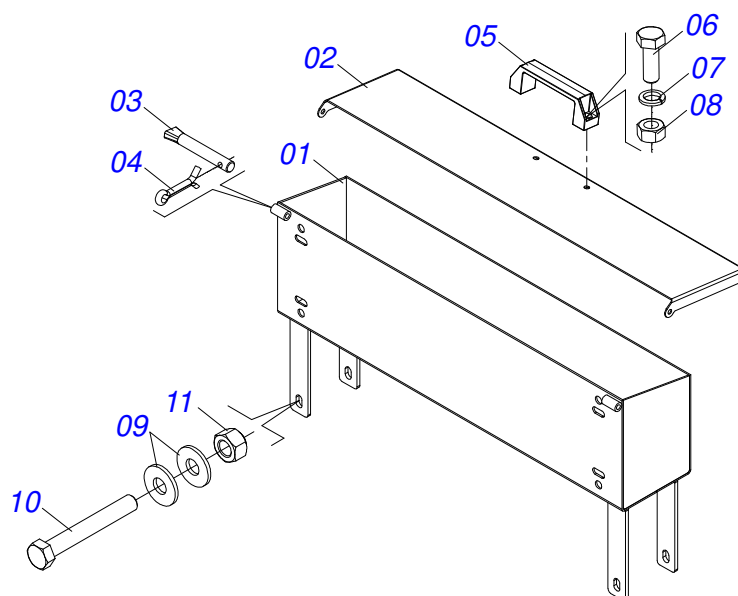

Item	Code	Description	See page	QT
01	0521063662	BOX OF TOOLS		01
02	0551018356	BOX OF TOOLS COVER ASSY		01
03	0521010528	0.3" X 1.6" COUPLING SHAFT		02
04	0503010140	1/8" X 3/4" COTTERPIN		02
05	0503011907	PMC 594-S NYLON LUG		01
06	0503010358	5/16" X 5/8" BOLT		02
07	0503010179	5/16" ZN SPRING WASHER		02
08	0503010337	5/16" NUT		02
09	0511017302	FLAT WASHER		04
10	0503010964	BOLT		02
11	0503010589	1/2" UNC SELF ADJUSTING NUT		02

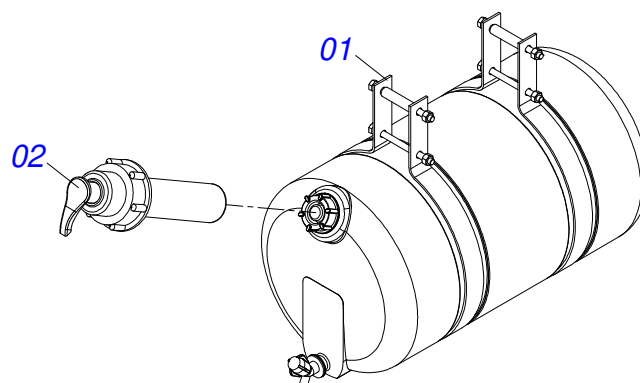


Item	Code	Description	See page	QT
01	0503014820	COROTE BLACK WATER		01
02	0503019262	SOAP DISH VACUUM		01

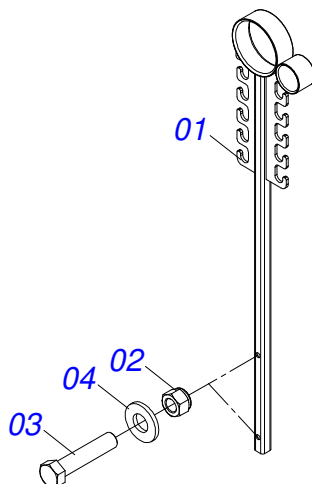


Item	Code	Description	See page	QT
01	0531060794	HYDRAULIC HOSE SUPPORT		01
02	0503015490	SELF-LOCKING NUT 7/16		02
03	0503011173	7/16" X 2" BOLT		02
04	0501010937	13.5 X 28 X 3 FLAT WASHER		02

TELESCOPIC LOCK ASSY

0511059814

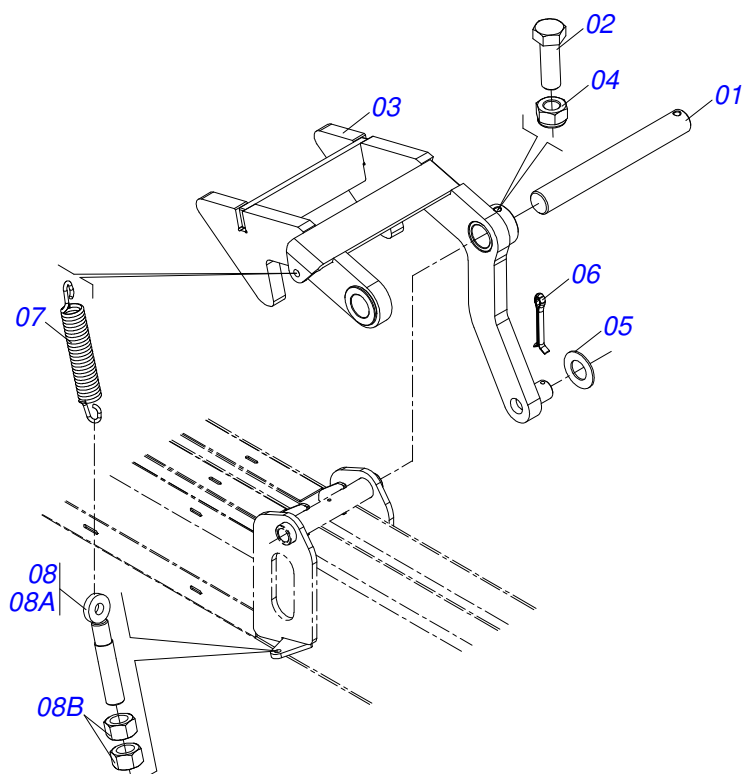


Item	Code	Description	See page	QT
01	0571015072	LOCK AXLE		01
02	0503010765	3/8" X 3" BOLT		01
03	0521064540	TELESCOPIC LOCK		01
04	0503013357	3/8" SELF-ADJUSTING NUT		01
05	0521011132	FLAT WASHER		01
06	0503010131	3/16" X 1-1/2" COTTERPIN		01
07	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
08	0511054270	TENSIONER SPRING		01
08A	0511069520	TELESC LOCK SPRING TENSIONER		01
08B	0503010013	5/8" NUT		02

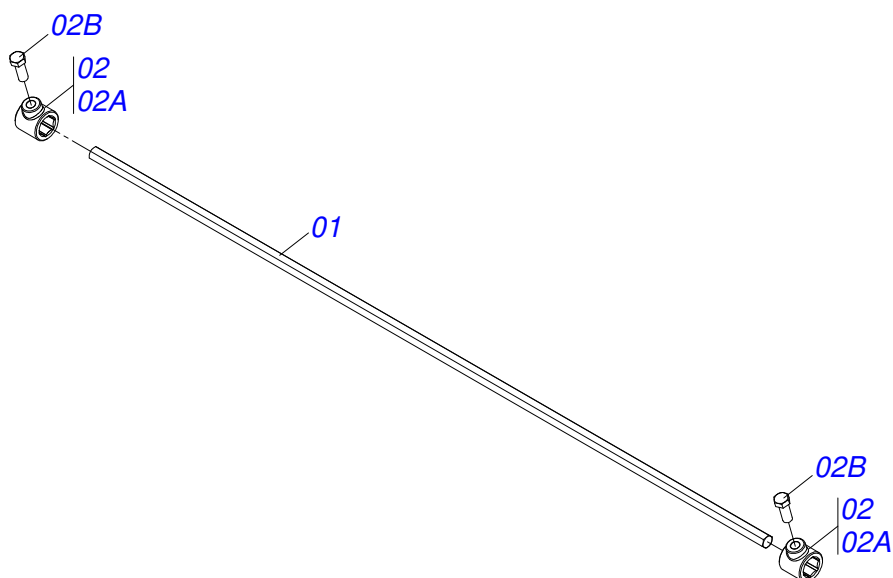

Item	Code	Description	See page	QT
01	0581018254	HEX AXLE 3/4 X 2700 STM 29 USG		01
02	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		02
02A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
02B	0503010256	3/8" X 3/4" BOLT		01

RIGHT WHEEL WITH TRANSMISSION

0521055326

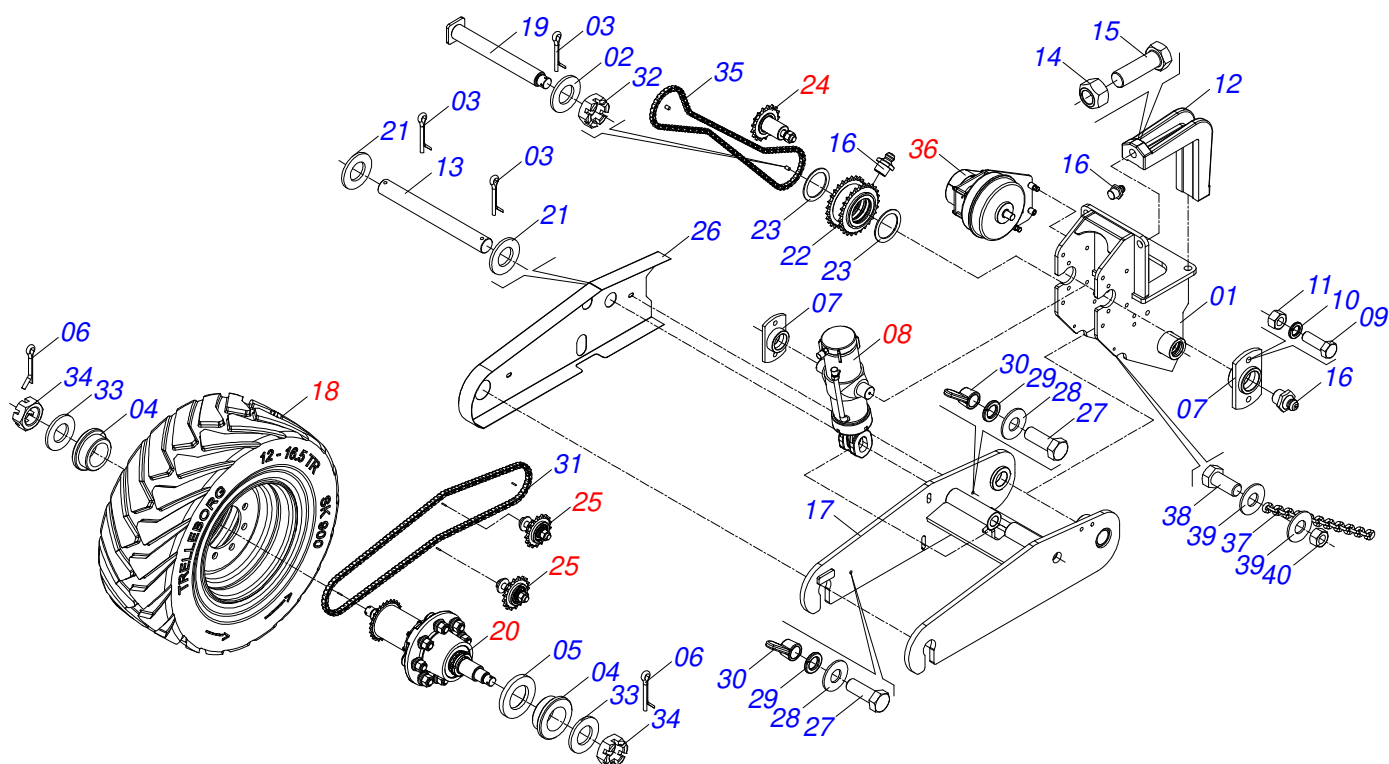


Item	Code	Description	See page	QT
01	0521064543	WHEEL SUPPORT		01
02	0561019929	FLAT WASHER		01
03	0503010523	1/4" X 2" COTTERPIN		03
04	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
05	0551014508	FLAT WASHER		01
06	0503010571	1/4" X 1.1/2 COTTERPIN		02
07	0521069575	FLANGE CYLINDER HYDRAULIC FIXER		02
08	0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	22	01
09	0503010920	1/2" X 1.1/2" BOLT		04
10	0503010019	1/2" SPRING WASHER		04
11	0503010060	1/2" NUT		04
12	0502012731	WHEEL HOLDER		02
13	0581017245	AXLE BODY		01
14	0503011075	3/4" UNC NUT		04
15	0503012334	3/4" UNC X 3.1/2" BOLT		04
16	0503010002	1800 GREASE FITTING		04
17	0521064550	CARRYING-WHEELS FORK		01
18	0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	23	01
19	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
20	0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR	24	01
21	0531012874	FLAT WASHER		02
22	0511068422	WHEEL GEAR DOBLE		01
23	0551018571	FLAT WASHER		02
24	0511054463	WHEEL TENSIONER SUPORT CENTRAL	25	01
25	0511054464	WHEEL FORK TENSIONER	26	02
26	0561019941	RIGHT PROTECTIVE CAP WHEELS		01
27	0503010849	3/8" X 1-1/2" BOLT		02
28	0501013518	FLAT WASHER		02
29	0503010025	3/8" SPRING WASHER		02
30	0503010209	3/8" UNC BUTTERFLY NUT		02
31	0503016419	50-1 CHAIN X 128 LINK + REDUCION		01


RIGHT WHEEL WITH TRANSMISSION

0521055326


Item	Code	Description	See page	QT
32	0501010630	1.1/2" CASTLE NUT		01
33	0501017779	32 X 60 X 4.75 FLAT WASHER		02
34	0503011052	1.1/4" X 0.77" CASTLE NUT		02
35	0503014857	50-1 X CHAIN X 122 LINK + REDUCION		01
36	0511054500	TRANSMISSION EXCHANGE RIGHT	27	01
37	0503033335	CURRENT 6 X 21 ELOS		01
38	0503010882	BOLT		01
39	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
40	0503010337	5/16" NUT		01

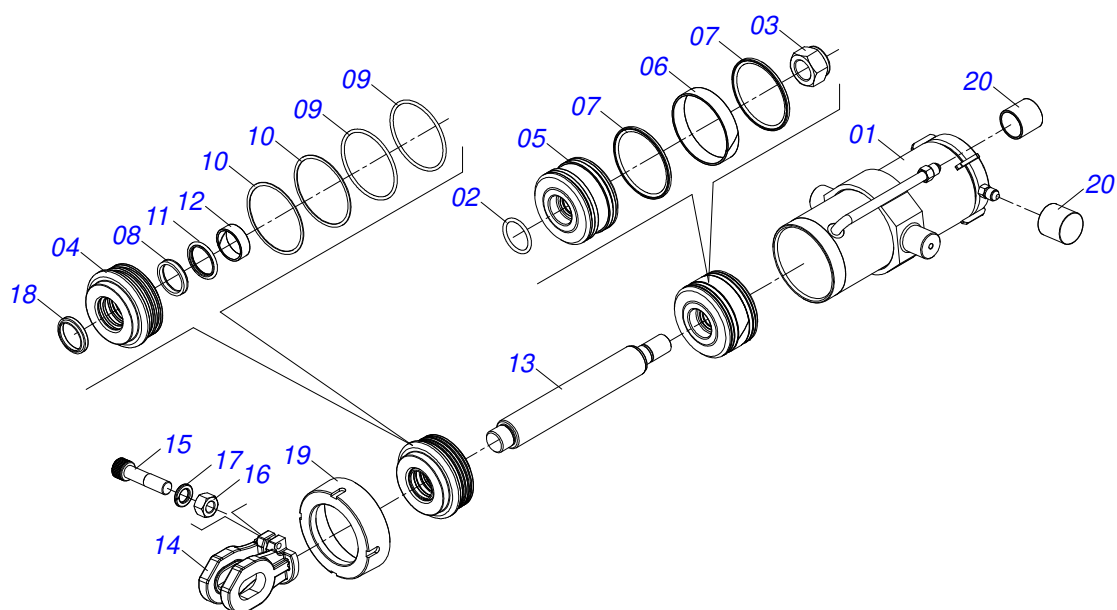


Item	Code	Description	See page	QT
01	0521069562	5" X 17" CYLINDER CASE		01
02	0503010345	2-218 N 3006-9B O'RING		01
03	0503010817	1.1/4" SELF LOCKING NUT		01
04	0581010353	RING SUPPORT		01
05	0581010354	PISTON		01
06	0503018150	RING GUIDE		01
07	0503018151	RING BS		02
08	0503018026	1870-2000-375 B GASKET		01
09	0503011453	O'RING		02
10	0503018152	O'RING		02
11	0503018024	RING BS		01
12	0503018025	RING GUIDE		01
13	0581019464	TURNBUCLE BODY		01
14	0571015629	CILINDER SPINDLE FORK		01
15	0503011094	3/8" X 2" BOLT		01
16	0503010026	3/8" NUT		01
17	0503010025	3/8" SPRING WASHER		01
18	0503010039	D-2000 SCRAPER RING		01
19	0502040876	COVER		01
20	0503030385	CYLINDER PLUG N-002		02

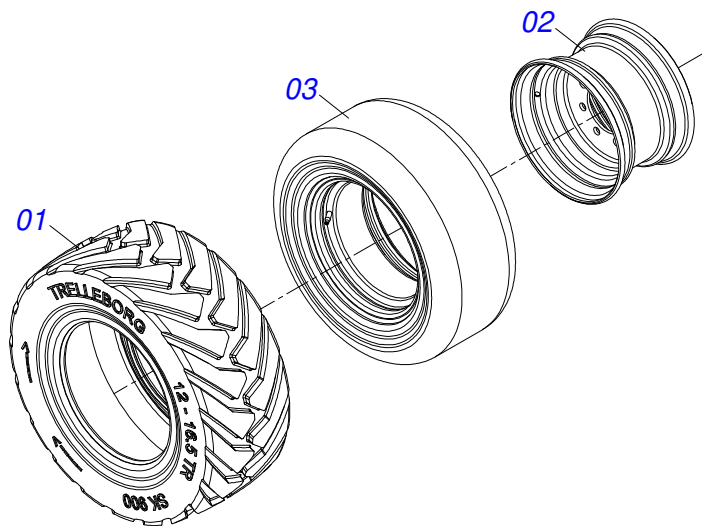

Item	Code	Description	See page	QT
01	0503033713	TIRE 12 X 16,5/12L TR SK 900		01
02	0503015029	WHEEL		01
03	0503015355	INNER TIRE		01

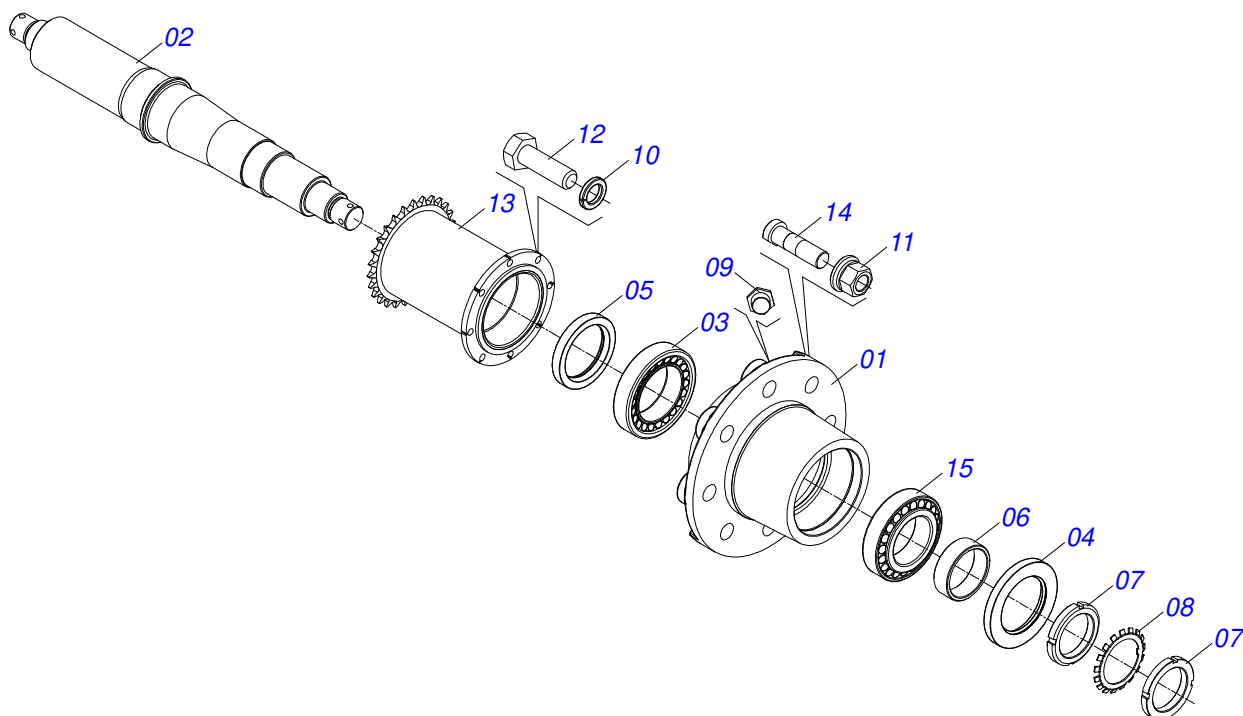


Item	Code	Description	See page	QT
01	0502040760	CARRYING WHEEL HUB		01
02	0571015180	WHEEL AXLE		01
03	0503013633	BEARING 33287/33462		01
04	0503010009	RETAINER 00573-B		01
05	0503010086	SEAL 0009B-B		01
06	0551014473	GLOVE		01
07	0503012702	KM-12 NUT		02
08	0503012703	LOCK WASHER		01
09	0503010002	1800 GREASE FITTING		01
10	0503011444	SPRING WASHER		08
11	0503014048	22 X 1.5 HEX NUT		08
12	0503010363	5/16" X 1" BOLT		08
13	0521064563	27Z GEAR		01
14	0503014050	22 X 1.5 BOLT		08
15	0503013496	3982/3920 ROLLER BEARING		01
16	1882970002	GREASE SOAP		01

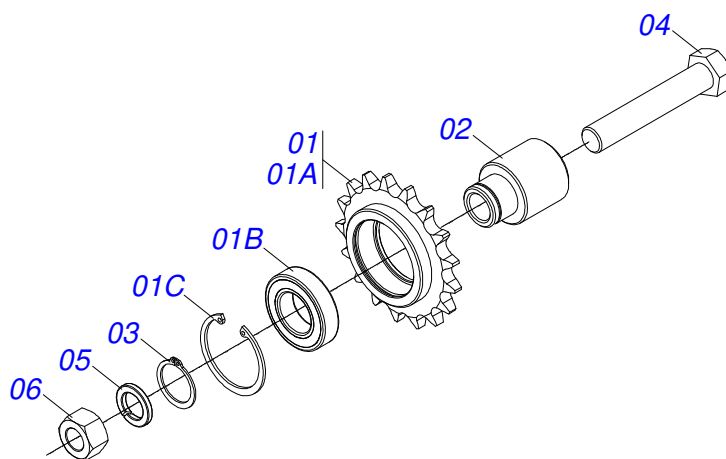


Item	Code	Description	See page	QT
01	0511054462	17Z GEAR		01
01A	0511061836	17Z GEAR		01
01B	0503011410	ROLLER BEARING		01
01C	0503011105	SEAL RING		01
02	0571015149	TIGHTENER AXLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0501010163	5/8" X 4-1/2" BOLT		01
05	0503010027	5/8" SPRING WASHER		01
06	0503010013	5/8" NUT		01

WHEEL FORK TENSIONER


0511054464

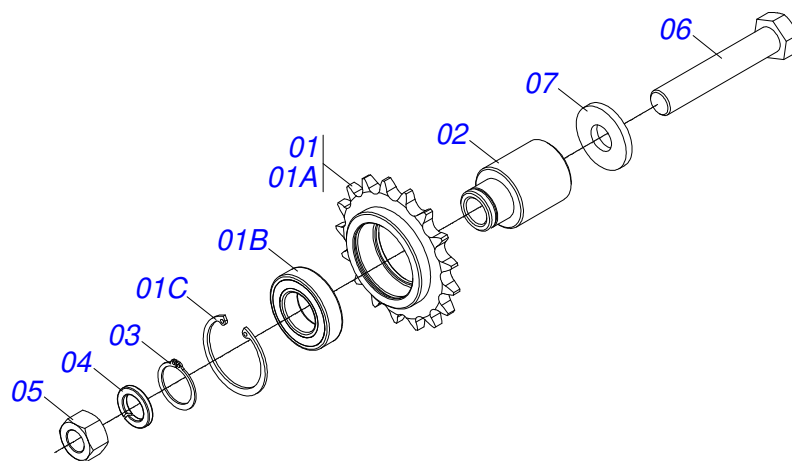

Item	Code	Description	See page	QT
01	0511054462	17Z GEAR		01
01A	0511061836	17Z GEAR		01
01B	0503011410	ROLLER BEARING		01
01C	0503011105	SEAL RING		01
02	0571015150	SLEEVE TENSIONER WHEEL		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0503010027	5/8" SPRING WASHER		01
05	0503010013	5/8" NUT		01
06	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
07	0501012140	FLAT WASHER		01

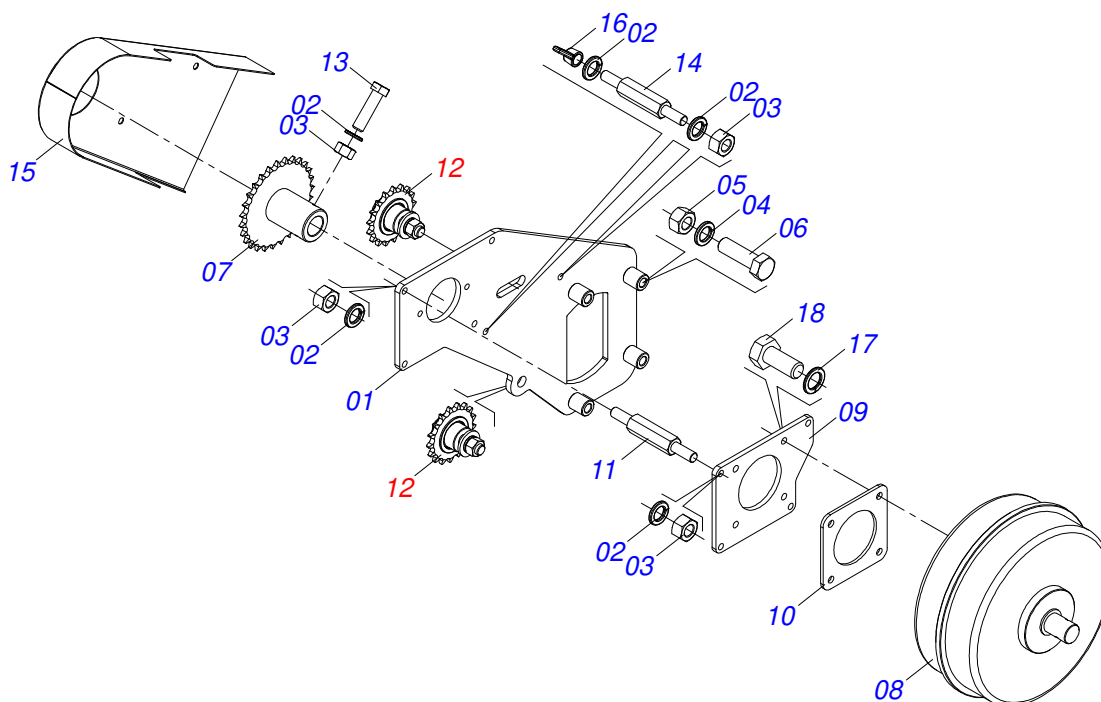


Item	Code	Description	See page	QT
01	0521064556	SUPPORT ASSY TRANSMISSION WHEEL SIDE		01
02	0503010025	3/8" SPRING WASHER		13
03	0503010026	3/8" NUT		11
04	0503010019	1/2" SPRING WASHER		03
05	0503010060	1/2" NUT		03
06	0503010741	1/2" X 2-3/4" BOLT		03
07	0521064555	27Z GEAR		01
08	0503062231	CLUTCH		01
09	0571015139	FIXER PLATE		01
10	0571015138	CHOCK FRICÇÃO		01
11	0571015141	FIXER CENTRAL TRANSMISSION		04
12	0511054461	STRETCHER TOP TRANSMISSION SWIRLED	28	02
13	0503011268	3/8" X 2-1/2" BOLT		01
14	0571015142	FIXER		02
15	0571015143	RIGHT PROTECTION SUPPORT WHEEL		01
16	0503010209	3/8" UNC BUTTERFLY NUT		02
17	0503013542	M10 SPRING WASHER		04
18	0503010188	M10 X 1,5 X 30 BOLT		04

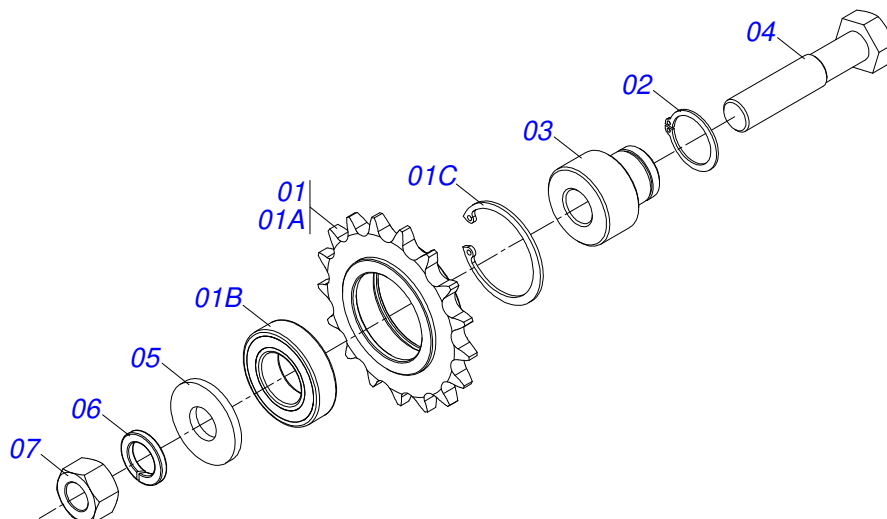


Item	Code	Description	See page	QT
01	0521055499	GEAR WITH NATIONAL BEARING		01
01A	0511061836	17Z GEAR		01
01B	0503019356	BEARING 6005 2RS1		01
01C	0503011105	SEAL RING		01
02	0571015146	TIGHTENER AXLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0501011541	5/8" X 3" BOLT		01
05	0501012140	FLAT WASHER		01
06	0503010027	5/8" SPRING WASHER		01
07	0503010013	5/8" NUT		01

CHAIN STRETCHER WITH ASSY HOLE 13


0521057490

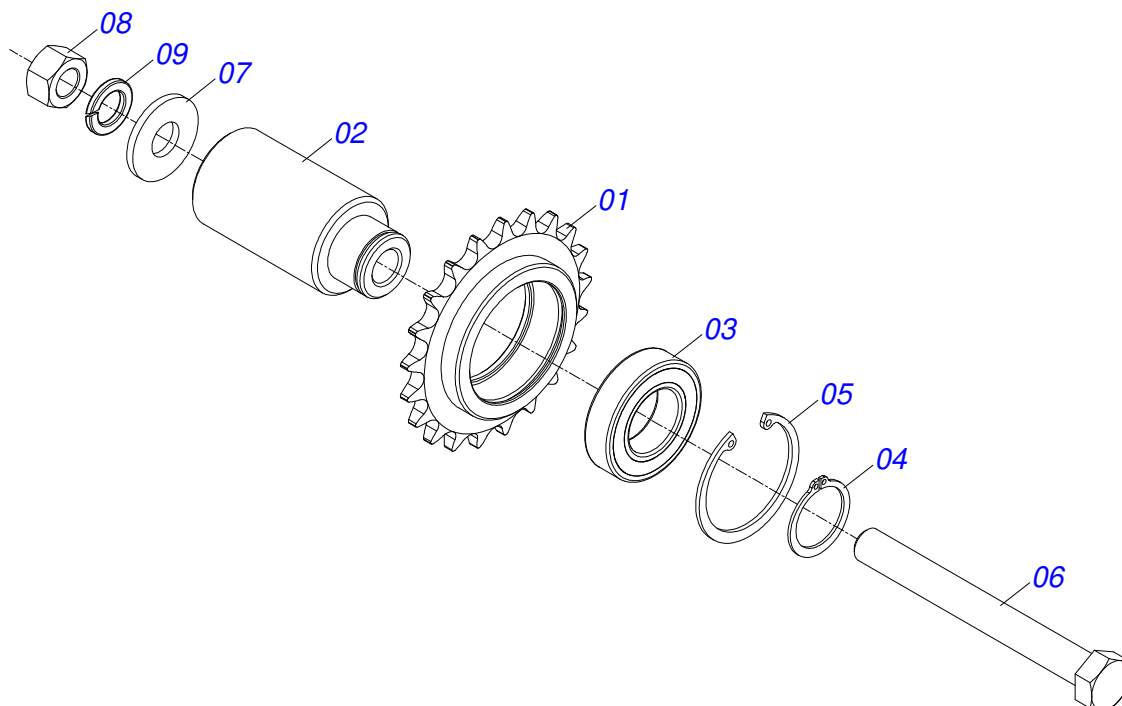


Item	Code	Description	See page	QT
01	0521069698	GEAR 21Z P 1/2		01
02	0591012478	HOLE TRANSMISSION STRETCHER AXLE 13		01
03	0503011410	ROLLER BEARING		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0503011105	SEAL RING		01
06	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		01
07	0511017302	FLAT WASHER		01
08	0503010060	1/2" NUT		01
09	0503010019	1/2" SPRING WASHER		01

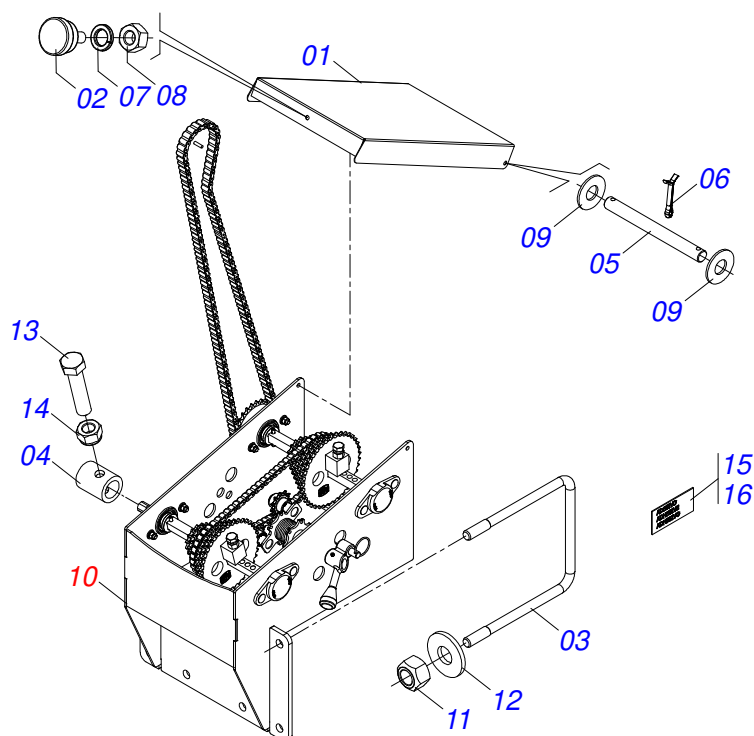


Item	Code	Description	See page	QT
01	0551011625	PROTECTION COVER		01
02	0503010386	CABLE		01
03	0551015037	5/8" UNC X 210 X 198 FASTENER		02
04	0551018630	CARDAN SHAFT GUIDES SLEEVE		01
05	0551018629	GEAR BOX COVER FIXER ROD		01
06	0503010257	1/8" X 1" COTTERPIN		02
07	0503010179	5/16" ZN SPRING WASHER		01
08	0503010337	5/16" NUT		01
09	0501013518	FLAT WASHER		02
10	0521056866	RIGHT SEMI-ASSEMBLED EXCHANGE	31	01
11	0503012412	5/8 UNC SELF LOCKING NUT		04
12	0501012140	FLAT WASHER		04
13	0503011268	3/8" X 2-1/2" BOLT		01
14	0503013357	3/8" SELF-ADJUSTING NUT		01
15	0503034417	LETTER ADHESIVE LABEL		01
16	0503032987	ADHESIVE LABEL		01

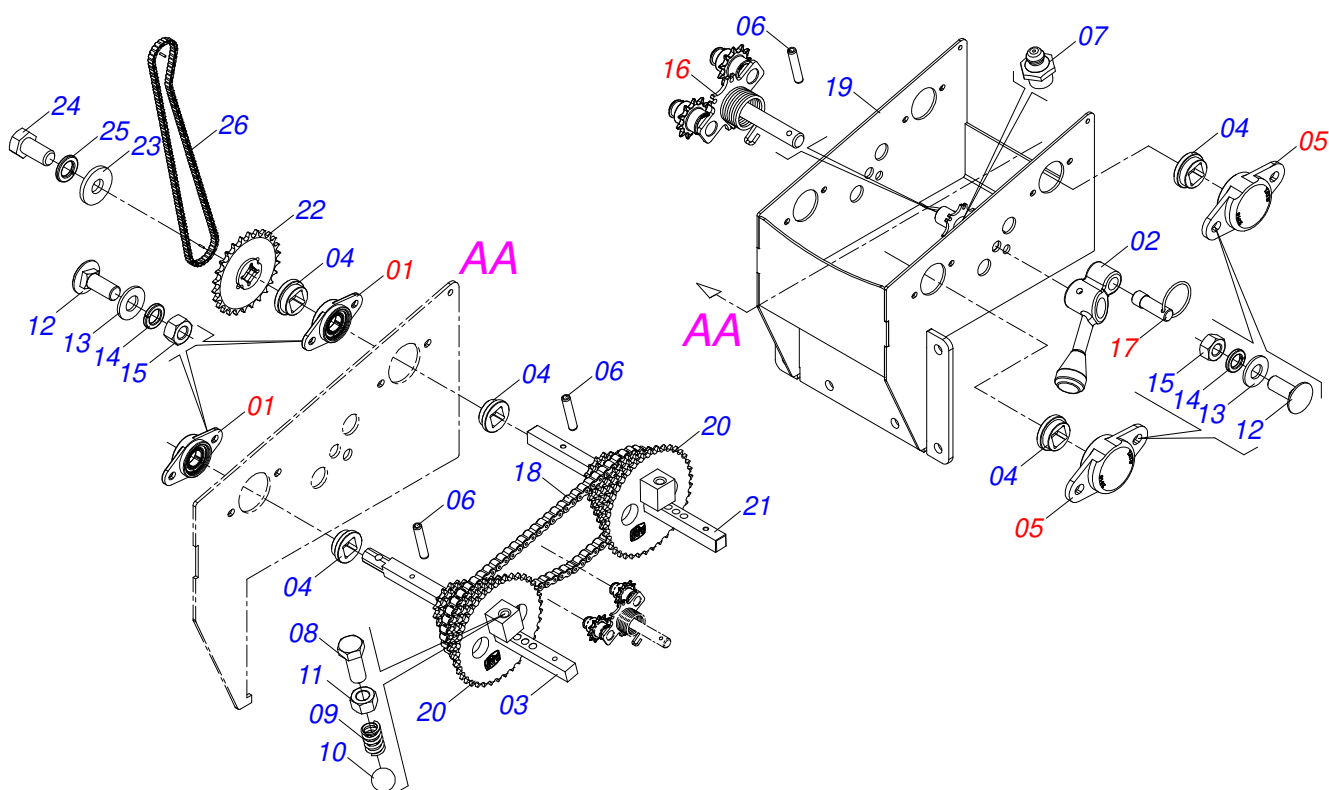

Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	32	02
02	0502011758	REAR TENSIONER LEVER		01
03	0551018627	SIDE GEAR BOX DRIVER AXLE		01
04	0503030303	SUPPORT WASHER		05
05	0501056271	BEARING CLOSED	33	02
06	0503010292	0.2" X 1.6" SPRING PIN		05
07	0503010002	1800 GREASE FITTING		01
08	0503010395	1/2" X 1-1/4" BOLT		02
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
10	0503012389	1/2 BALL		02
11	0503010060	1/2" NUT		02
12	0503011953	5/16" X 1" BOLT		08
13	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
14	0503010179	5/16" ZN SPRING WASHER		08
15	0503010337	5/16" NUT		08
16	0501052776	CHAIN TENSIONER RIGHT ASSY GREATEST	34	01
17	0501048790	AXLE WITH LINK ASSY	35	01
18	0503012204	40-1 CHAIN X 82 LINK + RED		01
19	0531060361	RIGHT SIDE EXCHANGE SUPPORT		01
20	0511060396	DRIVE/DRIVEN AXLE CONE		02
21	0591011683	MOVED AXIS		01
22	0511067501	26Z GEAR		01
23	0501010984	FLAT WASHER		01
24	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
25	0503010025	3/8" SPRING WASHER		01
26	0503019312	40-1 X 51 CHAIN LINK + MENDING		01

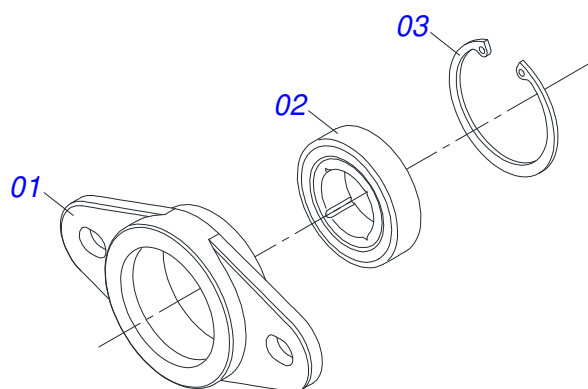


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

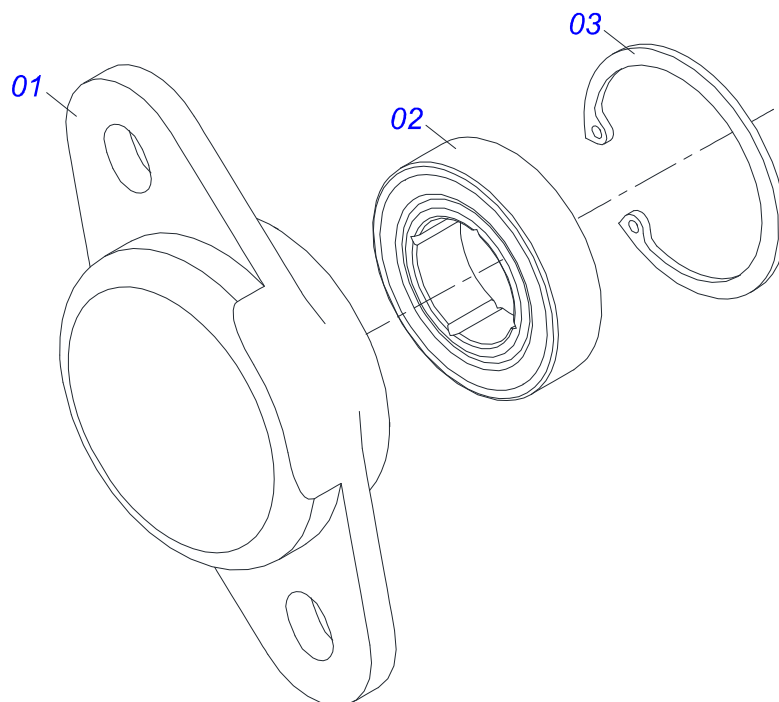


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

CHAIN TENSIONER RIGHT ASSY GREATEST

0501052776

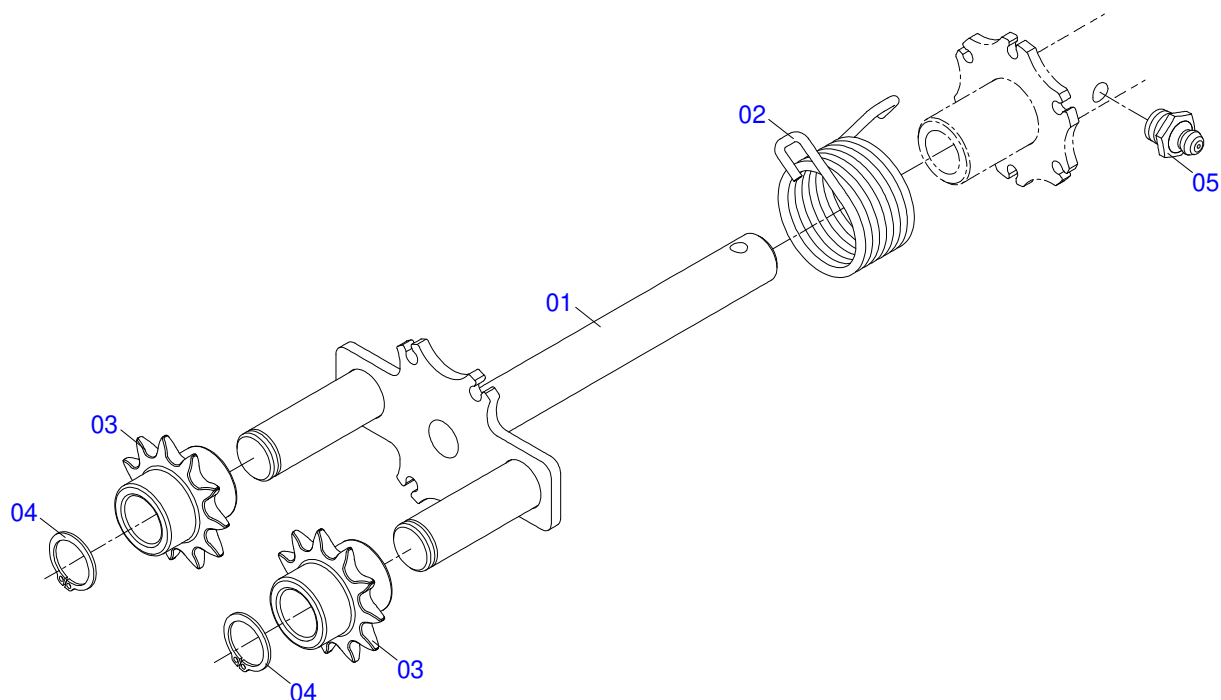


Item	Code	Description	See page	QT
01	0511061794	CHAIN TENSIONER		01
02	0503031367	SPRING		01
03	0503031805	11Z 1/2" GEAR		02
04	0503010302	501019 SEAL RING		02
05	0503010002	1800 GREASE FITTING		01

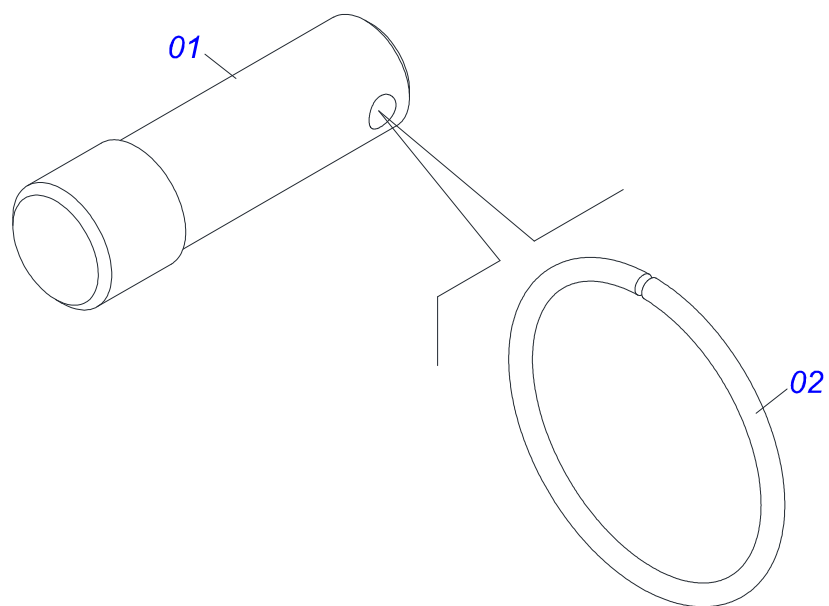

Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

DRIVE SHAFT


0501047300

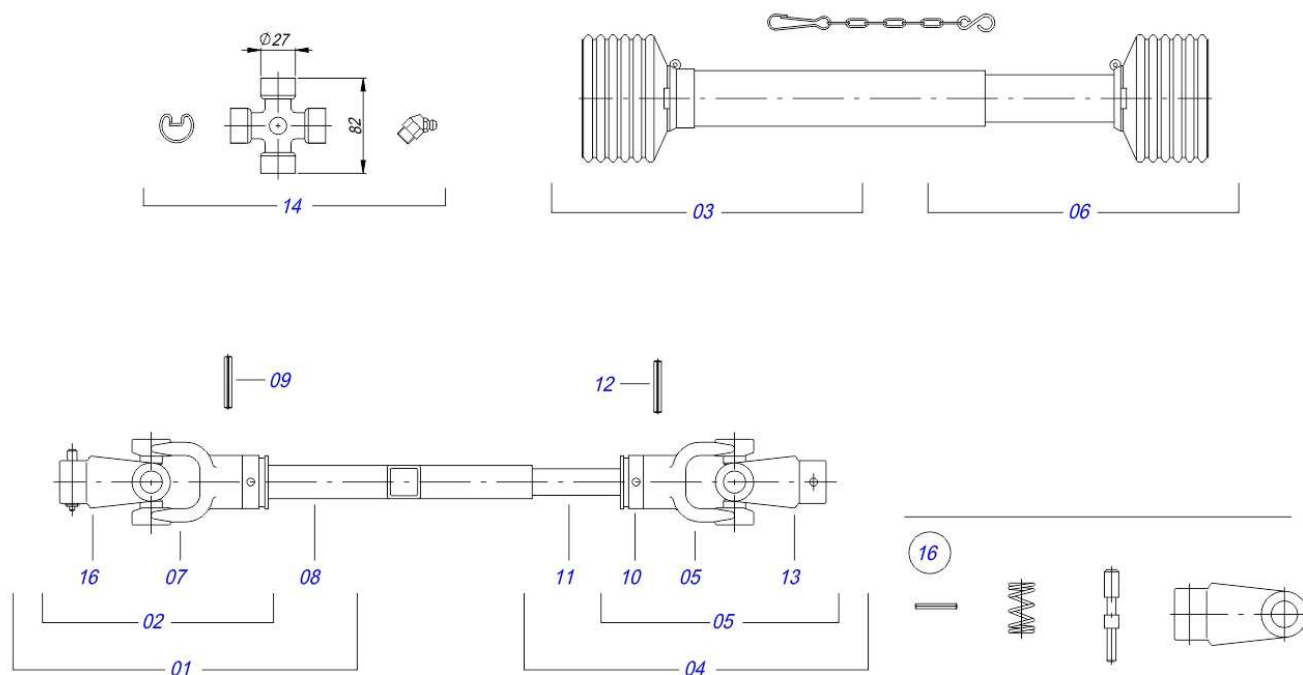


Item	Code	Description	See page	QT
01	0501051721	UNIVERSAL JOINT		01
02	0501051717	UNIVERSAL JOINT		01
03	0503012087	PROTECTION FOR UNIV JOINT AND SLEEVE		01
04	0501051722	PROTECTION FOR UNIV JOINT AND AXLE		01
05	0501051719	UNIVERSAL JOINT		01
06	0503012088	PROTECTION FOR UNIV JOINT AND AXLE		01
07	0501051718	UNIVERSAL JOINT		01
08	0511012101	0.9" X 15.75" SQUARE SLEEVE		01
09	0503010839	03"X 0.6" SPRING PIN		01
10	0501051720	UNIVERSAL JOINT		01
11	0511012100	0.9" X 15.75" SQUARE SHAFT		01
12	0503010301	0.3" X 1.8" SPRING PIN		01
13	0502010558	4-20 TERMINAL WITH ROLES		01
14	0503010835	CARDAN CROSSPIECE		01
15	0502011426	2-20 TERMINAL		01
16	0502011427	3-20 TERMINAL		01

MOTOR SUPPORT APT ASSY


0521053068

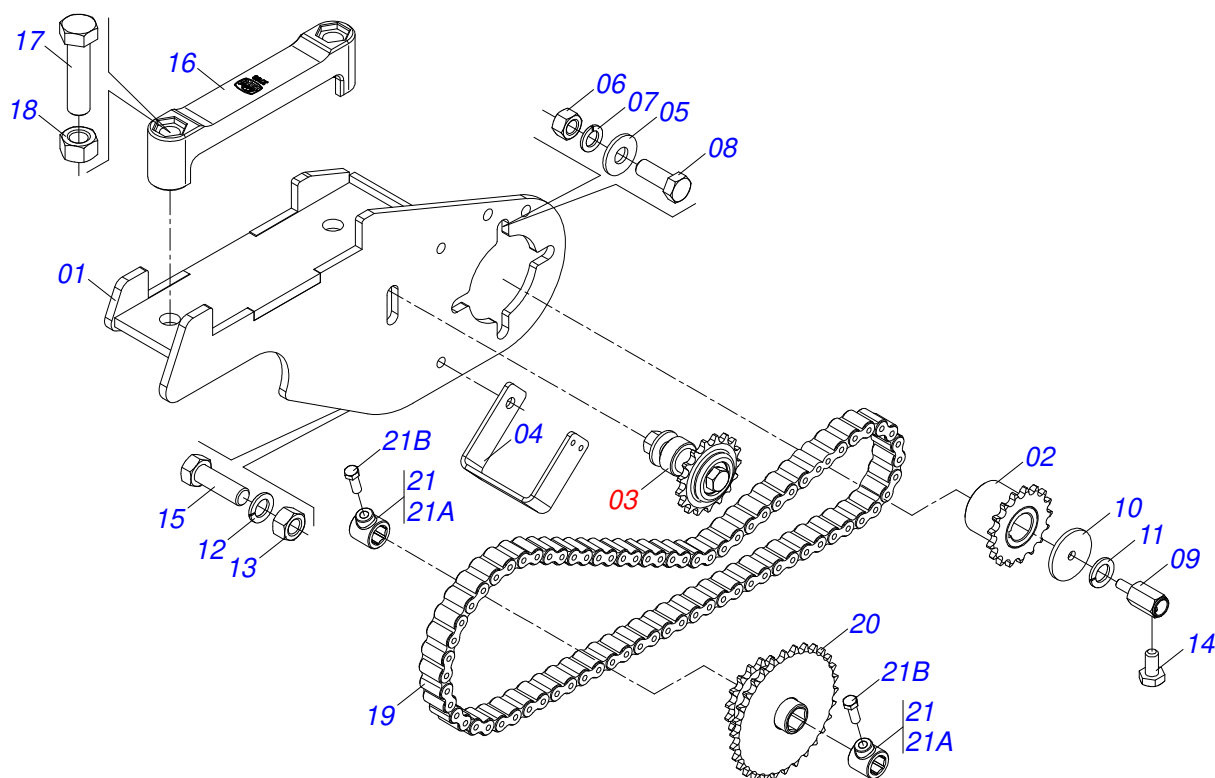


Item	Code	Description	See page	QT
01	0521063601	SUPPORT HYDRAULIC MOTOR		01
02	0521062807	17Z GEAR WITH SLEEVE		01
03	0511052600	STRETCHER HYDRAULIC MOTOR SUPPORT	38	01
04	0571012677	WASHER GUIDE		01
05	0501010937	13.5 X 28 X 3 FLAT WASHER		02
06	0503010060	1/2" NUT		02
07	0503010019	1/2" SPRING WASHER		02
08	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		02
09	0571012684	FIXING SHAFT		01
10	0571012680	FLAT WASHER		01
11	0503010179	5/16" ZN SPRING WASHER		01
12	0503010025	3/8" SPRING WASHER		01
13	0503010026	3/8" NUT		01
14	0503013758	1/4" X 1-1/2" BOLT		01
15	0503010237	3/8" X 1" BOLT		01
16	0502012768	LINE SUPPORT CLAMP		01
17	0503019024	BOLT 5/8 UNF X 5.1/2 C S RP G.5 ZN		02
18	0503010811	5/8" UNF SELF ADJUSTING NUT		02
19	0503017392	40-1 X 67 CHAIN LINK + MENDING		01
20	0521063774	GEAR ASSY		01
21	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		02
21A	0502012699	LATCH GLOVE BOX TRANSMISSION		02
21B	0503010256	3/8" X 3/4" BOLT		02

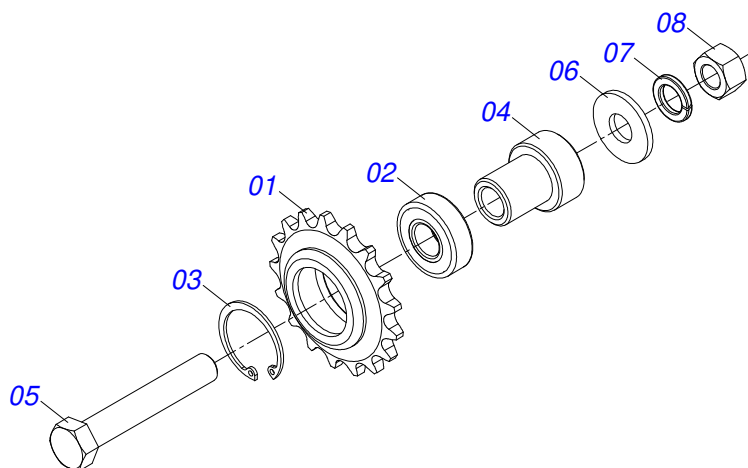

Item	Code	Description	See page	QT
01	0502012367	17Z X P 1/2" GEAR INTERM		01
02	0503012882	BEARING		01
03	0503011945	503050 CLAMPING RING (FOR AXLE)		01
04	0571012703	SLEEVE FLANGE		01
05	0503010479	BOLT		01
06	0511017302	FLAT WASHER		01
07	0503010019	1/2" SPRING WASHER		01
08	0503010060	1/2" NUT		01

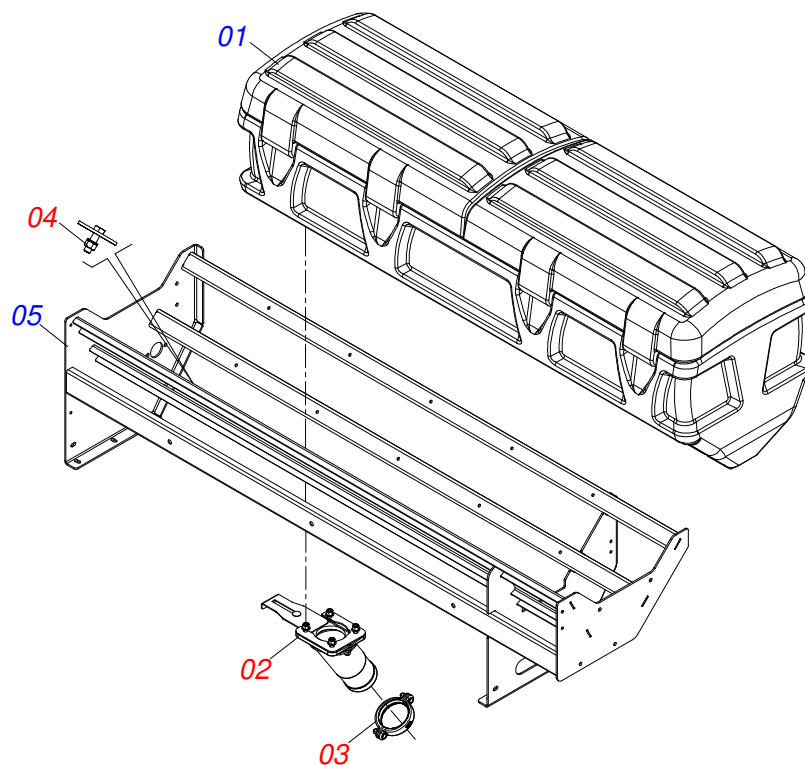


Item	Code	Description	See page	QT
01	0503062963	SILO FERTILIZER 06 MOUTHS		01
02	0521055365	SEED CONDUCTOR	45	06
03	0521050525	FIXER FERTILIZER CONDUCTOR	46	06
04	0521051407	FIXER SILO FERTILIZER	47	10
05	0531060509	RIGHT SUPPORT 6 MOUTH 2433 X 2035		01

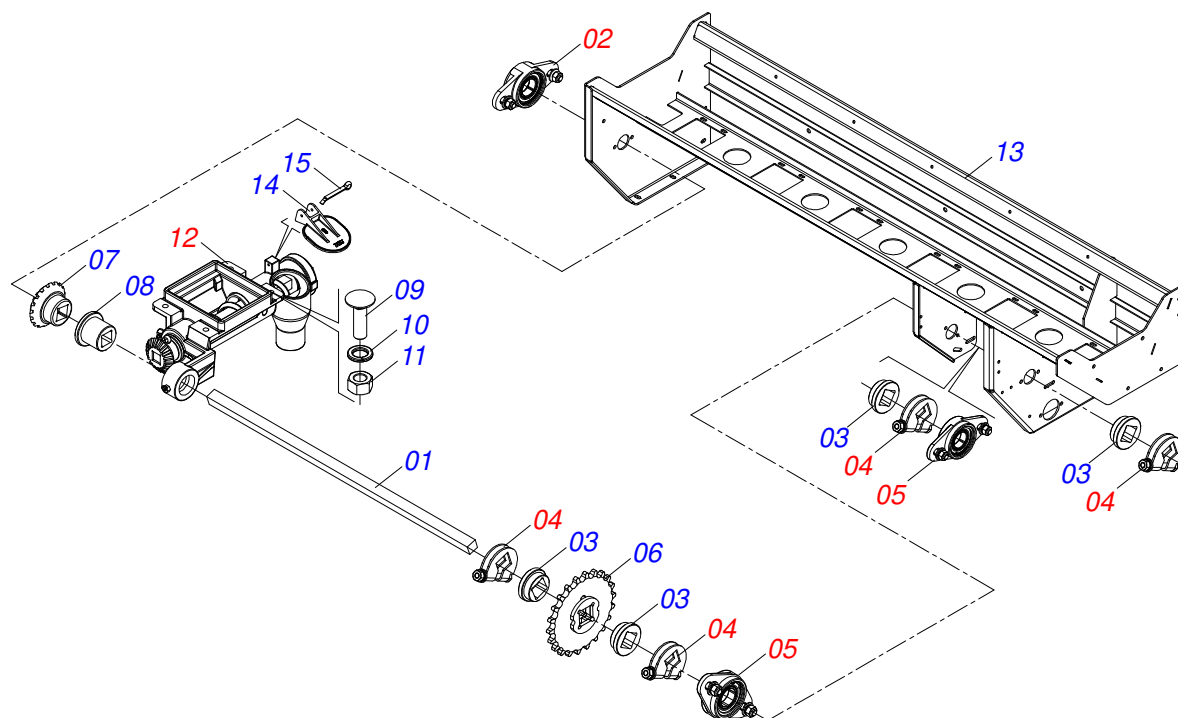

Item	Code	Description	See page	QT
01	0511017230	3/4" X 94" SQUARE SHAFT		01
02	0521054313	CLOSED BEARING	41	01
03	0503030303	SUPPORT WASHER		04
04	0511059491	AXLE HOLDER	42	04
05	0521054282	BEARING	43	02
06	0511061759	22Z P12,70 FQ 3/4" GEAR		01
07	1902010685	18Z CONICAL GEAR		06
08	0503030275	AGRICULTURAL BEARING		06
09	0501010942	3/8" X 1-1/4" BOLT		24
10	0503010025	3/8" SPRING WASHER		24
11	0503010026	3/8" NUT		24
12	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	44	06
13	0531060507	RIGHT FERTILIZER SUPPORT 06 MOUTH 2433 X 2035		01
14	0503034396	FERTILIZER SIDE COVER		06
15	0503010362	1/8" X 1.1/4" COTTERPIN		06

CLOSED BEARING


0521054313

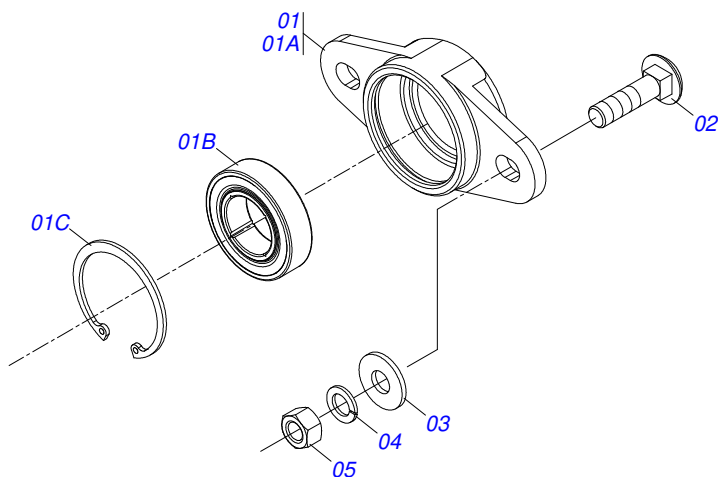

Item	Code	Description	See page	QT
01	0501056271	BEARING CLOSED	33	01
01A	0502012310	GEAR BOX CLOSE BEARING		01
01B	0503013462	BEARING WITH BALL BEARING		01
01C	0503011105	SEAL RING		01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

AXLE HOLDER


0511059491

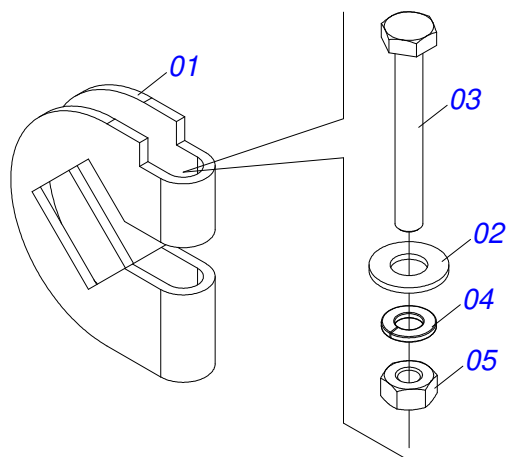

Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0501010694	8.5 X 18 X 1.5 FLAT WASHER		01
03	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
04	0503011441	SPRING WASHER		01
05	0503010144	1/4" NUT		01

BEARING


0521054282

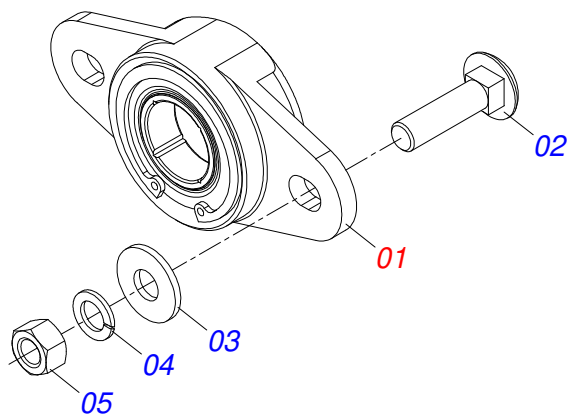

Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	32	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2


0511051558

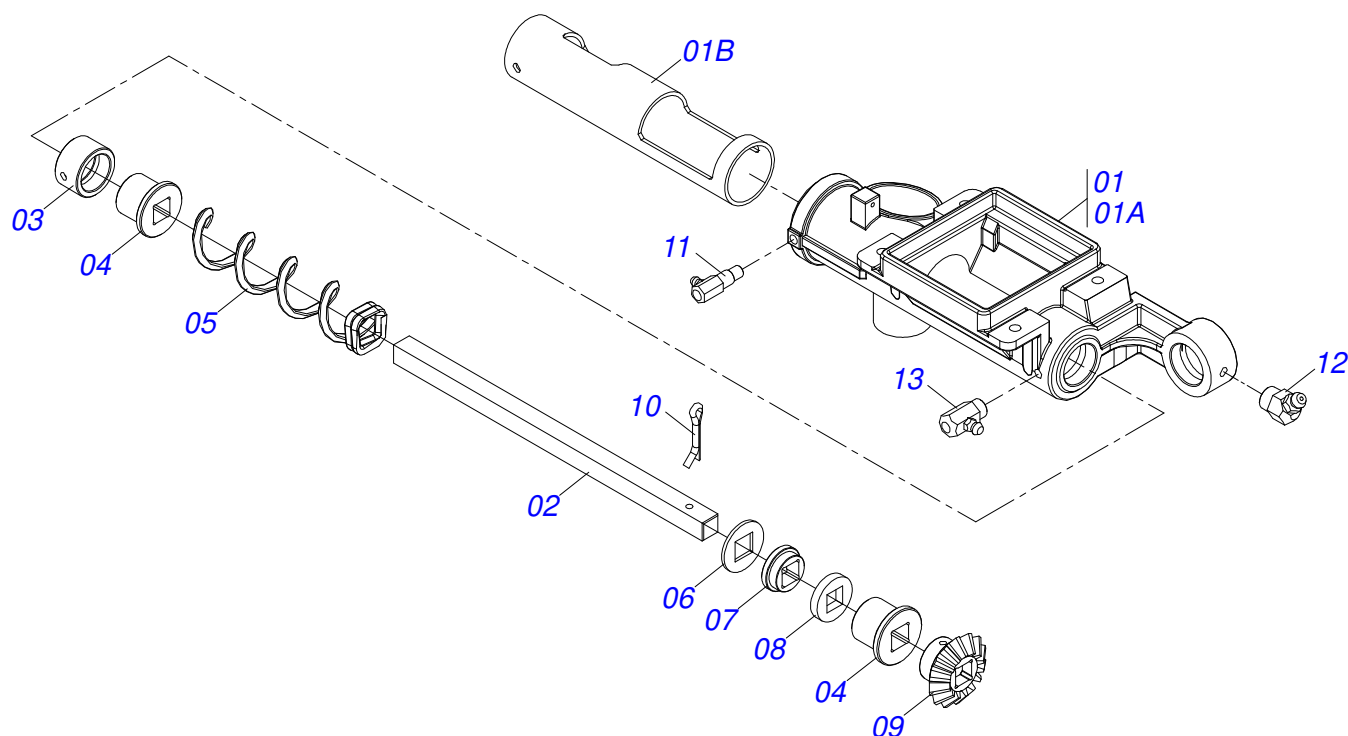


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

SEED CONDUCTOR


0521055365

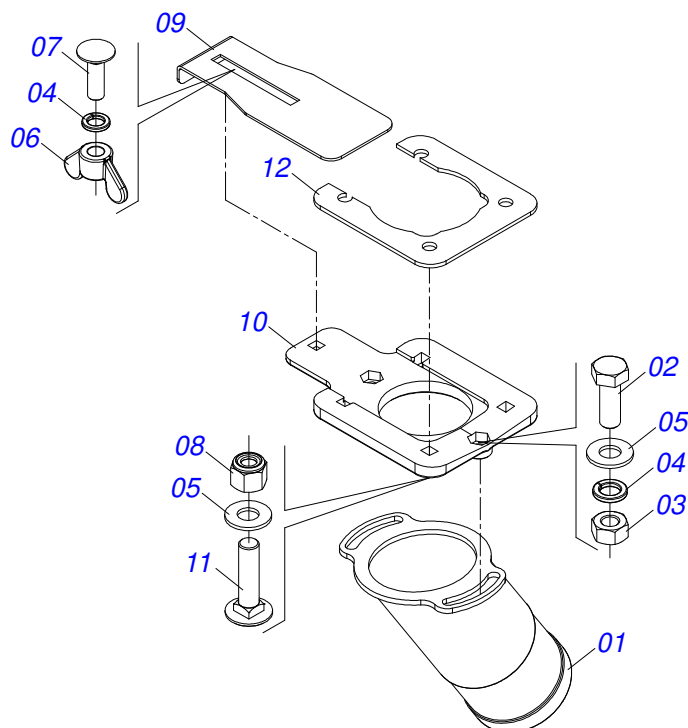

Item	Code	Description	See page	QT
01	0521069705	CONDUCTOR FIXER		01
02	0503010358	5/16" X 5/8" BOLT		02
03	0503010337	5/16" NUT		02
04	0503010179	5/16" ZN SPRING WASHER		03
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		06
06	0503010499	5/16" UNC BUTTERFLY NUT		01
07	0503011953	5/16" X 1" BOLT		01
08	0503013759	NUT		04
09	0581019780	COVER		01
10	0502012899	DUCT BODY		01
11	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		04
12	0503034859	JOIN		01

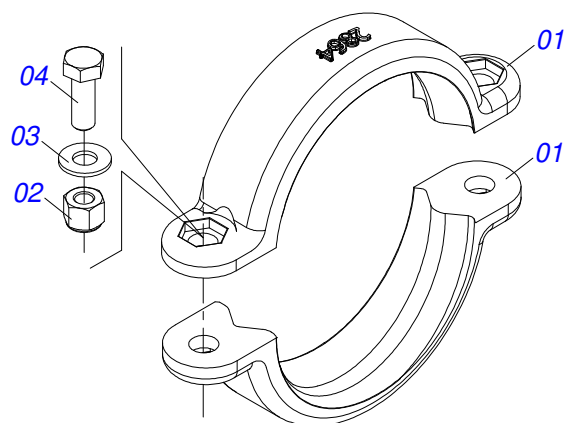


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010365	NUT		02

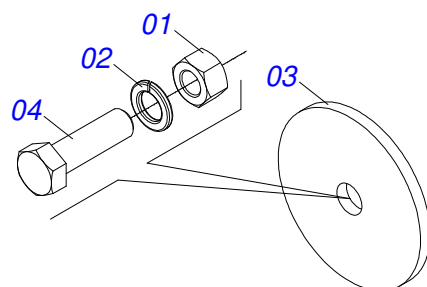

Item	Code	Description	See page	QT
01	0503012531	3/8" INOX NUT		01
02	0503012535	3/8" SPRING WASHER		01
03	0571019051	FIXER BOX WASHER		01
04	0503013751	3/8 UNC X 1.1/4 BOLT		01

ASSY SIDE SUPPORT


0521054290

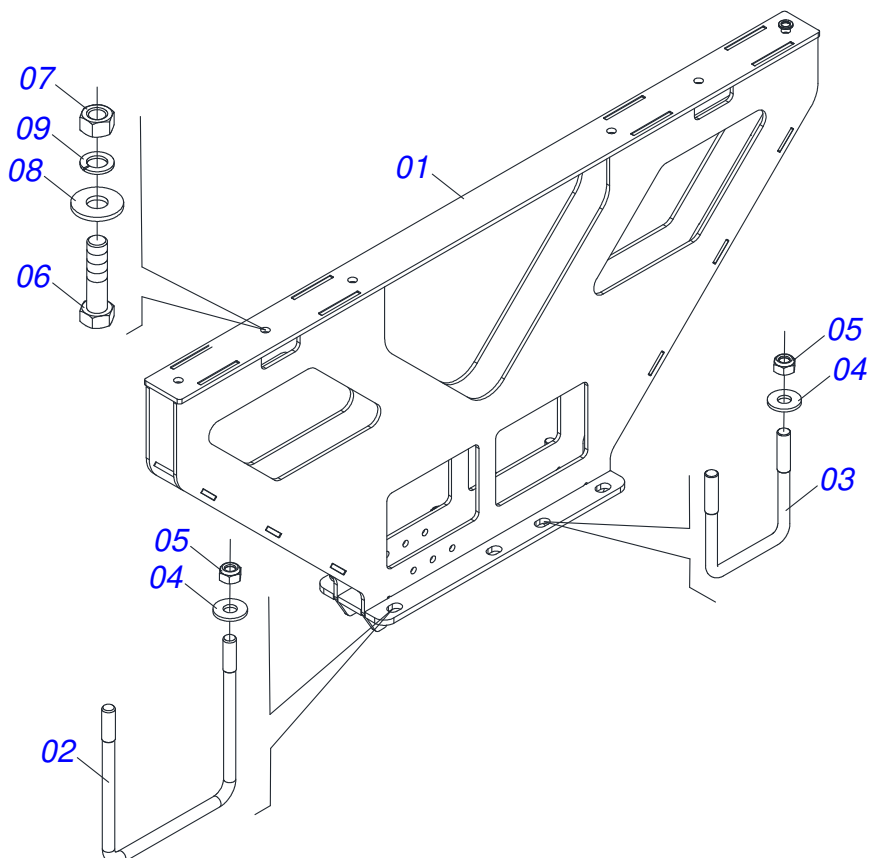


Item	Code	Description	See page	QT
01	0521069333	DEPTH SUPPORT		01
02	0551015037	5/8" UNC X 210 X 198 FASTENER		02
03	0541012939	5/8 UNC X 141 X 120 FASTENER		02
04	0501012140	FLAT WASHER		08
05	0503013389	5/8" SELF LOCKING NUT		08
06	0503010920	1/2" X 1.1/2" BOLT		06
07	0503010060	1/2" NUT		06
08	0511017302	FLAT WASHER		12
09	0503010019	1/2" SPRING WASHER		06

ASSY SIDE HANDLE


0521053054

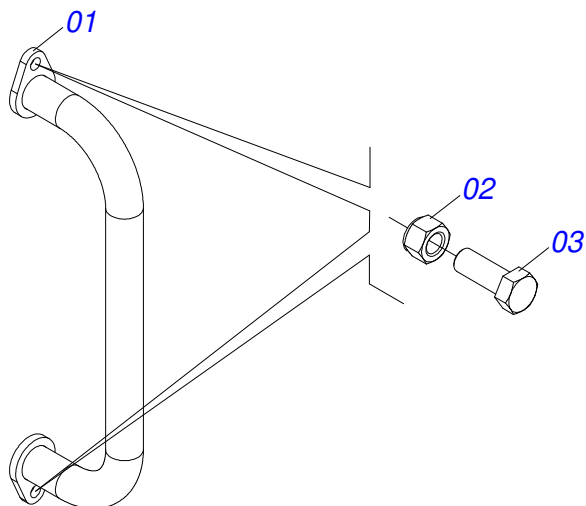


Item	Code	Description	See page	QT
01	0521068962	HANDLE		01
02	0503013357	3/8" SELF-ADJUSTING NUT		02
03	0503010237	3/8" X 1" BOLT		02

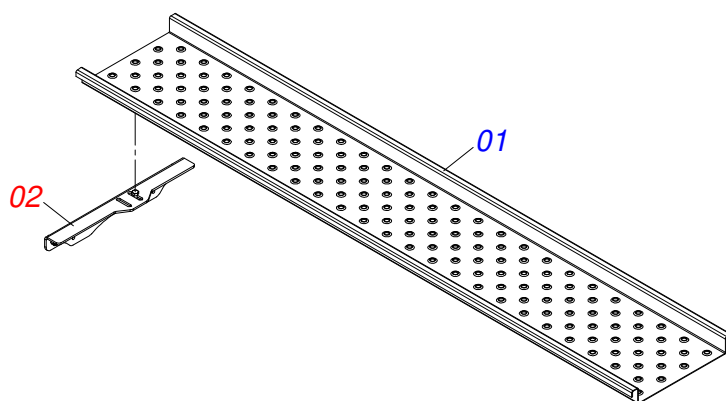


Item	Code	Description	See page	QT
01	0581019588	PLATFORM 2380		01
02	0521054279	PLATFORM FIXER	51	02

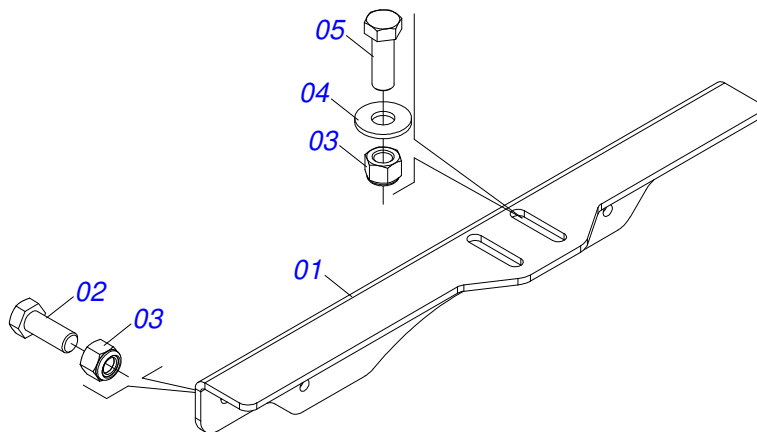


Item	Code	Description	See page	QT
01	0581018560	PLATFORM SUPPORT		01
02	0503010395	1/2" X 1-1/4" BOLT		02
03	0503010589	1/2" UNC SELF ADJUSTING NUT		03
04	0511017302	FLAT WASHER		01
05	0501010063	1/2" X 1-1/2" BOLT		01

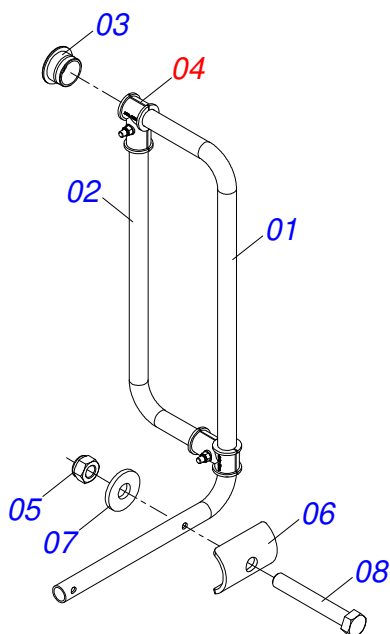

Item	Code	Description	See page	QT
01	0591015465	RIGHT BODY INTERNAL HANDRAIL 237		01
02	0591015466	BODY L INTERNAL HANDRAIL 170 X 727		01
03	0581012718	HANDRAIL		01
04	0511059383	INTERNAL FIXER ASSY HANDLE	54	02
05	0503013357	3/8" SELF-ADJUSTING NUT		02
06	0591011198	50MM HANDRAIL SUPPORT		02
07	0501010984	FLAT WASHER		02
08	0503011268	3/8" X 2-1/2" BOLT		02

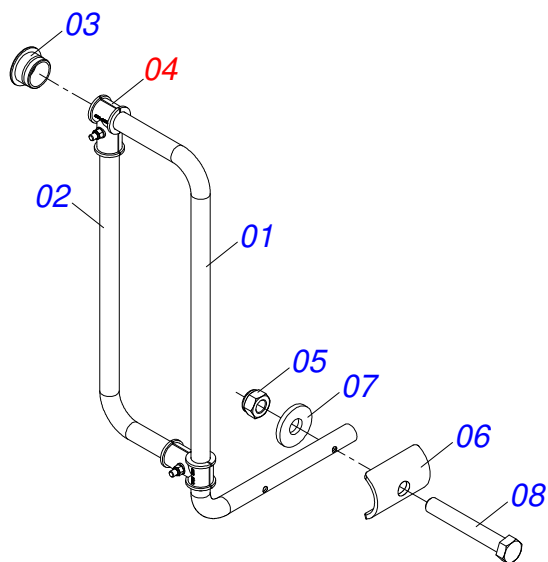


Item	Code	Description	See page	QT
01	0591015464	LEFT BODY INTERNAL HANDRAIL 237		01
02	0591015466	BODY L INTERNAL HANDRAIL 170 X 727		01
03	0581012718	HANDRAIL		01
04	0511059383	INTERNAL FIXER ASSY HANDLE	54	02
05	0503013357	3/8" SELF-ADJUSTING NUT		02
06	0591011198	50MM HANDRAIL SUPPORT		02
07	0501010984	FLAT WASHER		02
08	0503011268	3/8" X 2-1/2" BOLT		02

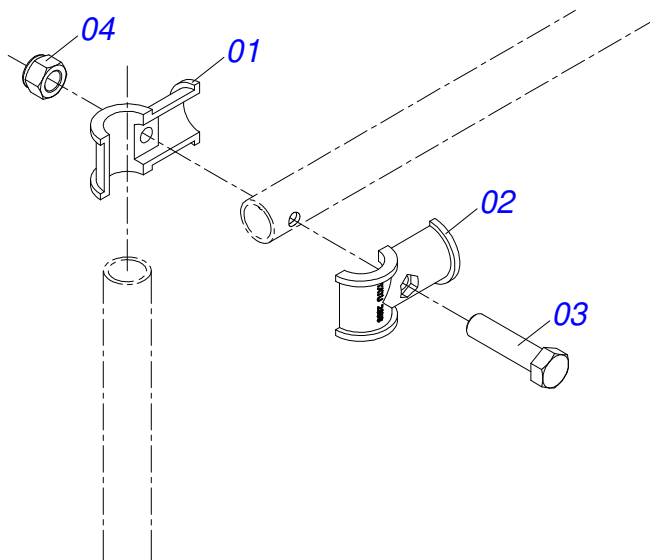


Item	Code	Description	See page	QT
01	0502012857	EXTERNAL FIXER HANDRAIL		01
02	0502012858	INTERNAL FIXER HANDRAIL		01
03	0503019083	7/16 UNC X 2.1/4 C S R P G.5 ZN BOLT		01
04	0503015490	SELF-LOCKING NUT 7/16		01

LADDER ASSY

0521054272

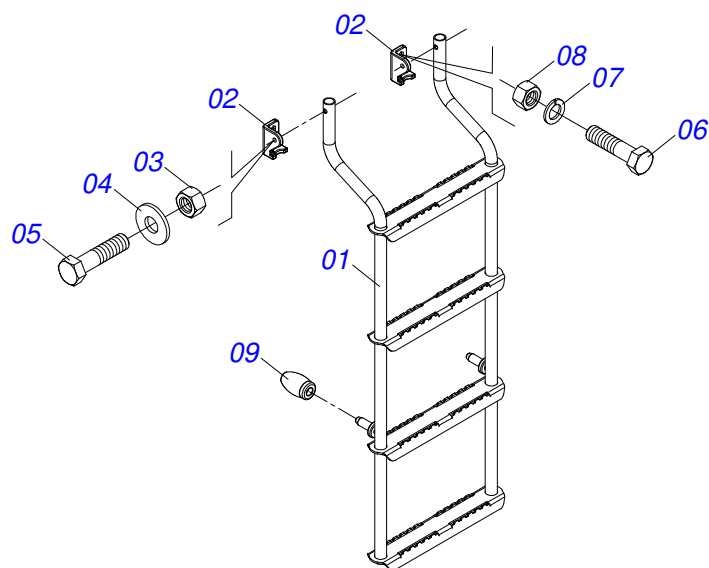


Item	Code	Description	See page	QT
01	0521069329	ASSY SIDE LADDER		01
02	0502012742	FIXER SUPPORT LADDER		02
03	0503013357	3/8" SELF-ADJUSTING NUT		02
04	0501010984	FLAT WASHER		02
05	0503011179	3/8" X 2-1/4" BOLT		02
06	0503010237	3/8" X 1" BOLT		04
07	0503010025	3/8" SPRING WASHER		04
08	0503010026	3/8" NUT		04
09	0503030403	1.85" X 2.87" BEATER		02

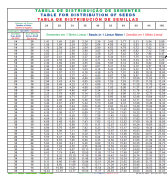

01

0503034679

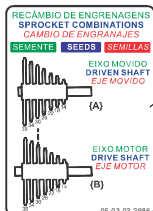

02

0503032986



03

0503033621



04

0503033424



05

0503033416



06

0503033414



07


0503031827




08

0503031565

Item	Code	Description	See page	QT
01	0503034679	ADHESIVE LABEL		01
02	0503032986	ADHESIVE LABEL		01
03	0503033621	ADHESIVE LABEL		01
04	0503033424	DIRECT PLANTIO ADHESIVE LABEL		01
05	0503033416	ADHESIVE LABEL		01
06	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING		01
07	0503031827	LUBRICATE AND RETIGHTEN DAILY DECAL		01
08	0503031565	ADHESIVE LABEL CARE		01

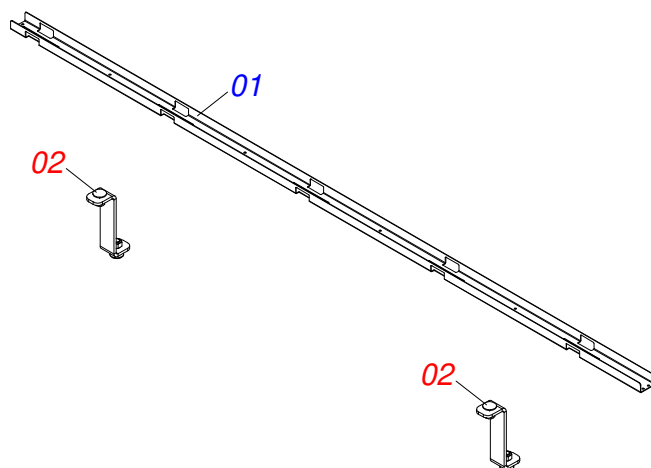


Item	Code	Description	See page	QT
01	0591016424	GUTTER 30 X 55 X 2220		01
02	0521055102	BIGGEST FULL GUTTER SUPPORT	58	02

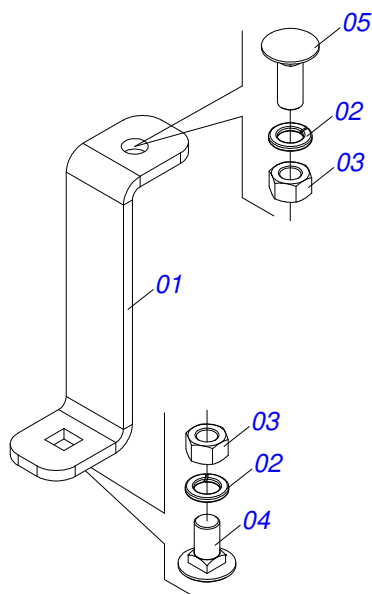


Item	Code	Description	See page	QT
01	0581019560	SOPORTE CONDUCTOR		01
02	0503010025	3/8" SPRING WASHER		02
03	0503010026	3/8" NUT		02
04	0503013029	3/8" X 3/4" BOLT		01
05	0501011643	3/8 X 1"BOLT		01

SIDE DUCT ASSEMBLY


0531050608

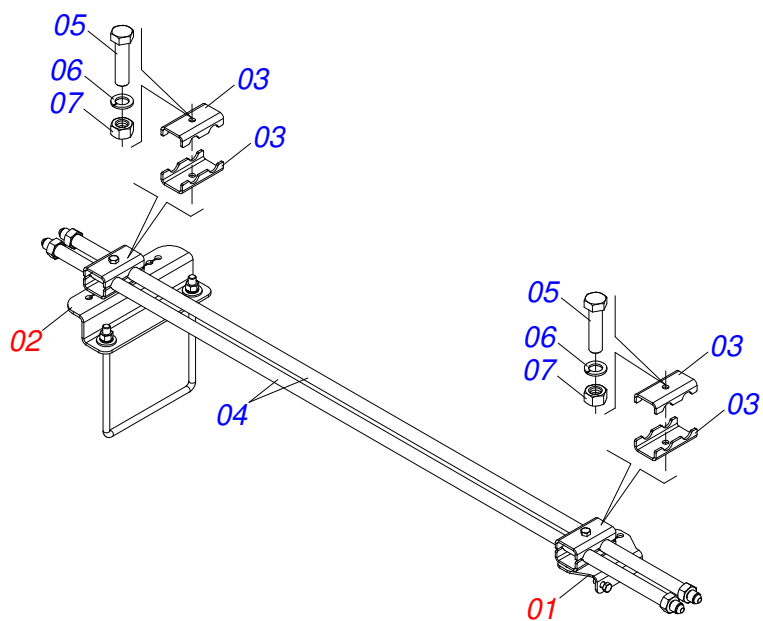


Item	Code	Description	See page	QT
01	0511059943	SUPPORT FASTENER ASSY	60	01
02	0511059928	SIDE DUTY SUPPORT	61	01
03	0581018407	BODY FASTENER 2 DUCTS		04
04	0521069756	OIL DUCT R.3 / 4 X 1475		02
05	0503011268	3/8" X 2-1/2" BOLT		02
06	0503010025	3/8" SPRING WASHER		02
07	0503010026	3/8" NUT		02

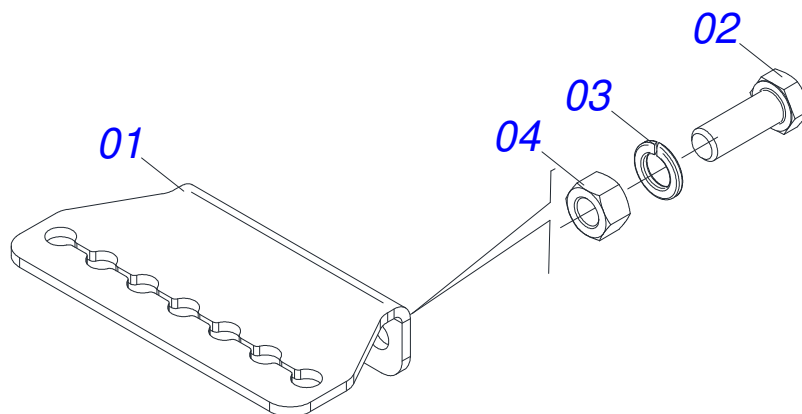


Item	Code	Description	See page	QT
01	0581011417	DUTO HOLDER SUPPORT		01
02	0503010237	3/8" X 1" BOLT		02
03	0503010025	3/8" SPRING WASHER		02
04	0503010026	3/8" NUT		02

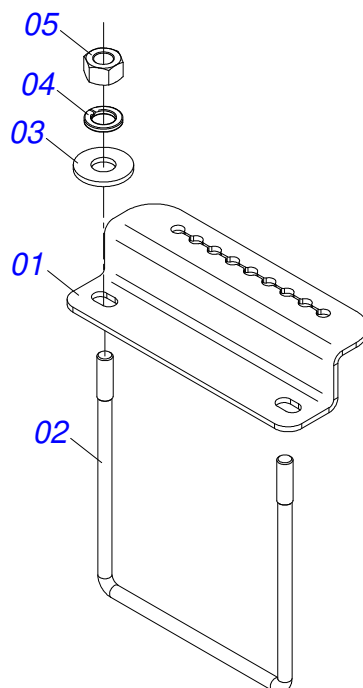


Item	Code	Description	See page	QT
01	0581013094	DUTO HOLDER SUPPORT		01
02	0571019756	FASTENER 1/2 UNC X 220 X 198 ZN		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		02
05	0503010060	1/2" NUT		02

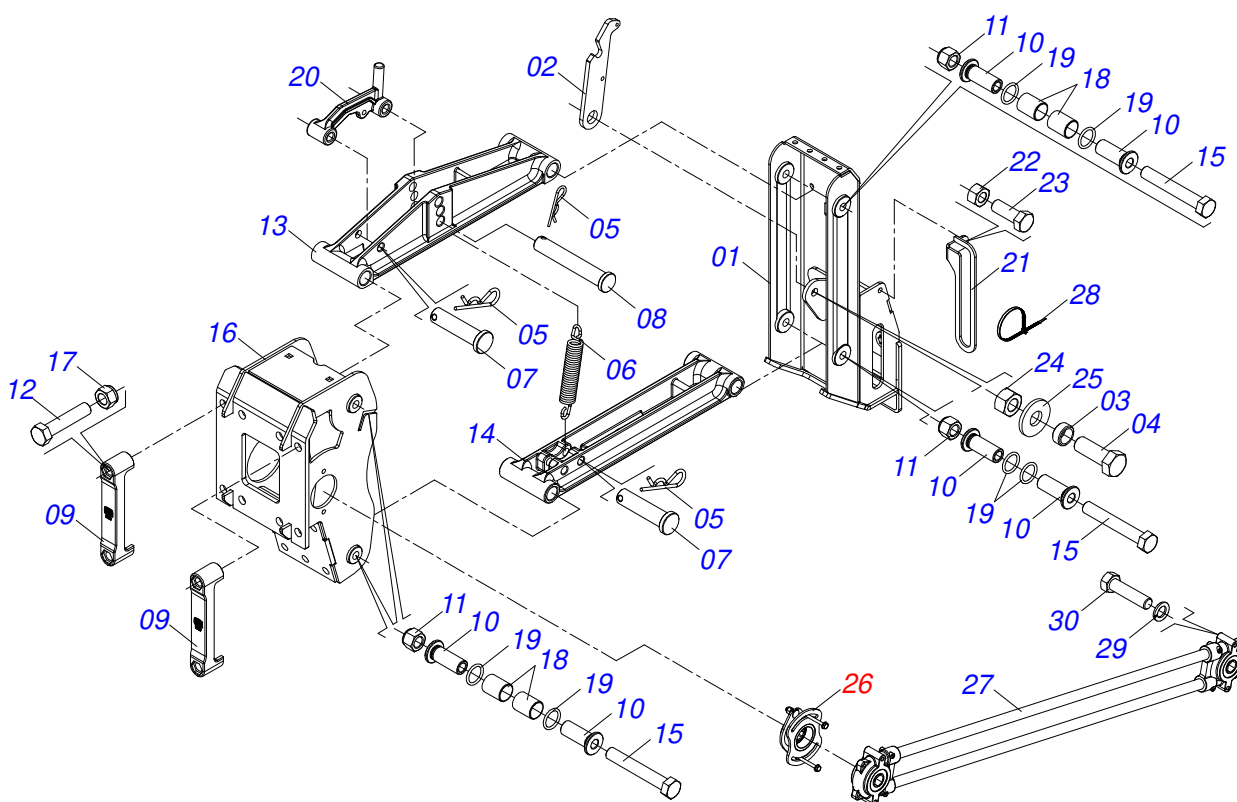


Item	Code	Description	See page	QT
01	0531060948	SEED LINE FRAME		01
02	0571012310	ROW LOCK BODY		01
03	0551015826	SEED ROW LOCK GUIDE SLEEVE		01
04	0503010232	5/8" X 1.3/4" BOLT		01
05	0503030168	HAIR PIN		04
06	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
07	0503033728	FIXED SPRING PIN		02
08	0571014704	UPPER AXLE		01
09	0502012768	LINE SUPPORT CLAMP		02
10	0581018676	SLEEVE ARM LINE SEED		08
11	0503010811	5/8" UNF SELF ADJUSTING NUT		04
12	0503019024	BOLT 5/8 UNF X 5.1/2 C S RP G.5 ZN		04
13	0581019795	SEED ARM SUPPORT ROW		01
14	0581019796	LOWER ARM LARGER		01
15	0503019025	BOLT 5/8 UNF X 8 C S RP G.5 ZN		04
16	0521068452	UP SUPPORT		01
17	0503010878	5/8" SELF ALIGNING NUT		04
18	0503019273	SLEEVE		06
19	0503010045	O-RING		08
20	0502012568	UPPER ROCKER ARM		01
21	0591014726	ENCAPSULATED CURRENT GUIDE		01
22	0503013357	3/8" SELF-ADJUSTING NUT		01
23	0503010237	3/8" X 1" BOLT		01
24	0503013389	5/8" SELF LOCKING NUT		01
25	0501012140	FLAT WASHER		01
26	0521059045	BEARING WITH CURRENT ENCAPSULATED	64	01
27	0503063190	ENCAPSULATED CURRENT MAHM LONG 1060		01
28	0503018829	NYLON CLAMP		01
29	0503010179	5/16" ZN SPRING WASHER		02
30	0503019284	M8 X BOLT		02

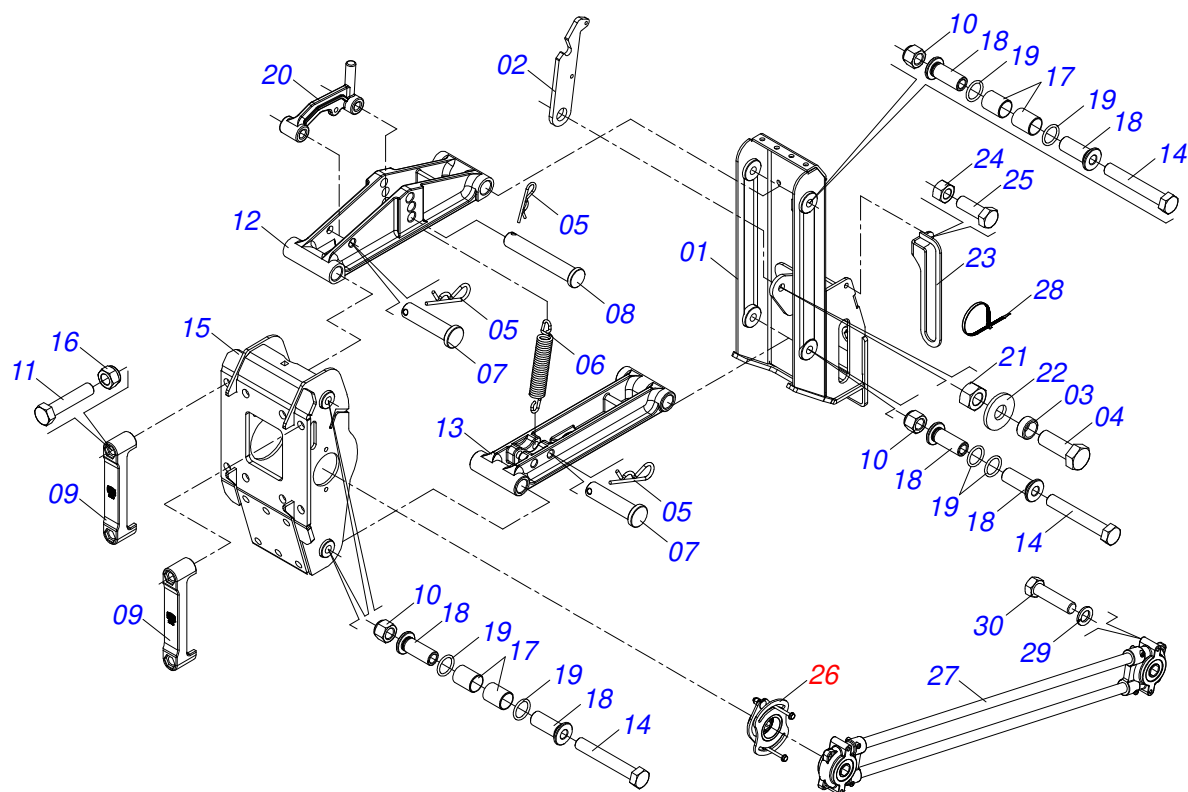

Item	Code	Description	See page	QT
01	0531060948	SEED LINE FRAME		01
02	0571012310	ROW LOCK BODY		01
03	0551015826	SEED ROW LOCK GUIDE SLEEVE		01
04	0503010232	5/8" X 1.3/4" BOLT		01
05	0503030168	HAIR PIN		04
06	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
07	0503033728	FIXED SPRING PIN		02
08	0571014704	UPPER AXLE		01
09	0502012768	LINE SUPPORT CLAMP		02
10	0503010811	5/8" UNF SELF ADJUSTING NUT		04
11	0503019024	BOLT 5/8 UNF X 5.1/2 C S RP G.5 ZN		04
12	0581019793	LOWER UPPER ARM WITHOUT LUBRICATION		01
13	0581019794	LOWER LOWER ARM WITHOUT LUBRICATION		01
14	0503019025	BOLT 5/8 UNF X 8 C S RP G.5 ZN		04
15	0521068448	FRONT SUPPORT SHORT SEED LINE		01
16	0503010878	5/8" SELF ALIGNING NUT		04
17	0503019273	SLEEVE		08
18	0581018676	SLEEVE ARM LINE SEED		08
19	0503010045	O'RING		08
20	0502012568	UPPER ROCKER ARM		01
21	0503013389	5/8" SELF LOCKING NUT		01
22	0501012140	FLAT WASHER		01
23	0591014726	ENCAPSULATED CURRENT GUIDE		01
24	0503013357	3/8" SELF-ADJUSTING NUT		01
25	0503010237	3/8" X 1" BOLT		01
26	0521059045	BEARING WITH CURRENT ENCAPSULATED	64	01
27	0503063191	ENCAPSULATED CURRENT MAHM SHORT 895		01
28	0503018829	NYLON CLAMP		01
29	0503010179	5/16" ZN SPRING WASHER		02
30	0503019284	M8 X BOLT		02

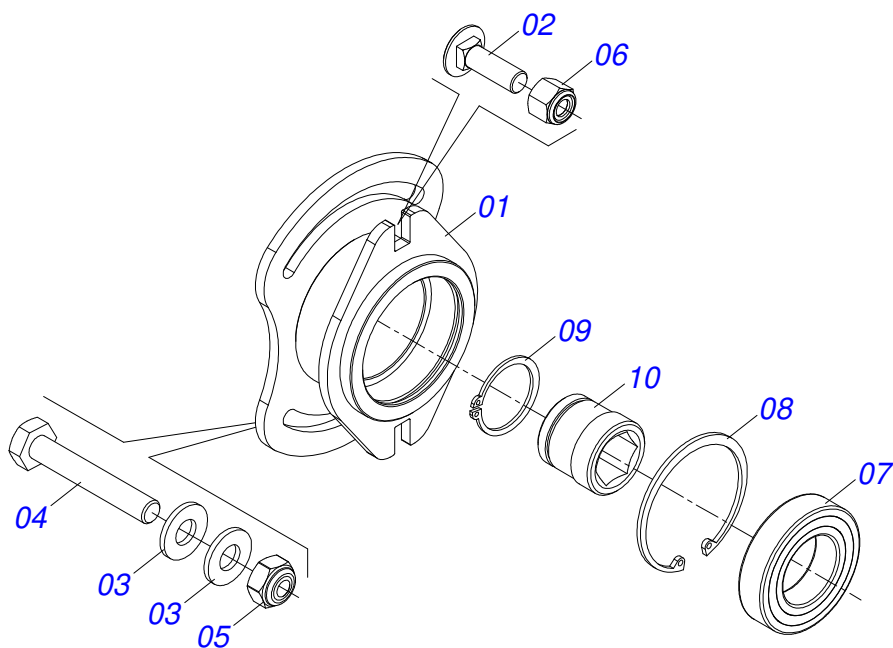


Item	Code	Description	See page	QT
01	0531061301	ENCAPSULATED CURRENT BEARING		01
02	0503011953	5/16" X 1" BOLT		02
03	0511017303	FLAT WASHER		04
04	0503011194	BOLT 1/4 UNC X 2.1/2 CS G.2 ZN		02
05	0503012880	1/4" UNC SELF ADJUSTING NUT		02
06	0503013759	NUT		02
07	0503019373	6006 2RS1 NATIONAL BEARING		01
08	0503012858	502075 CLAMPING RING (FOR HOLE)		01
09	0503010707	501030 CLAMPING RING (FOR AXLE)		01
10	0581019823	BEARING AXLE BODY WITHOUT LUBRICATION		01

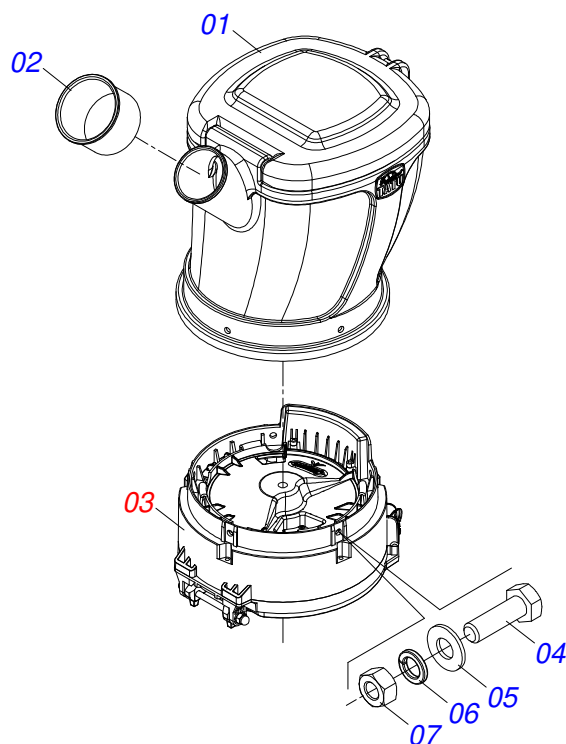

Item	Code	Description	See page	QT
01	0521050118	DEPOSIT SEED BOCAL		01
02	0581014295	FIXING GLOVE		01
03	0511052058	SEED SYSTEM TITANIUM	66	01
04	0503010358	5/16" X 5/8" BOLT		05
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		05
06	0503010179	5/16" ZN SPRING WASHER		05
07	0503010337	5/16" NUT		05

SEED SYSTEM TITANIUM


0511052058

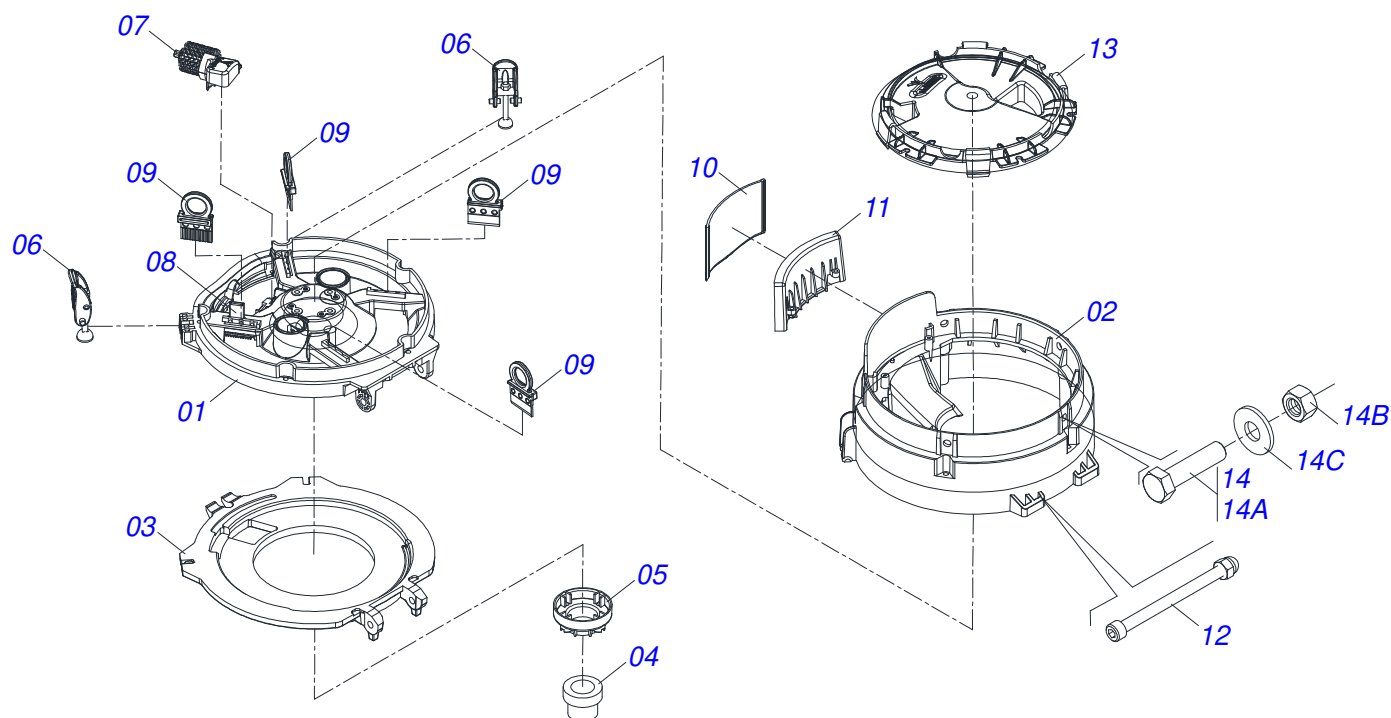


Item	Code	Description	See page	QT
01	0503062031	BASE SET		01
02	0503062032	NECK TITANIUM ASSY		01
03	0503062033	OPPOSITE BASE SET		01
04	0503062034	CENTRAL ADAPTER SET		01
05	0503062035	SET FALSE ADAPT CENTER		01
06	0503062036	SUBSET ASSY LOCK BASE		01
07	0503062037	SUBSET ESCOVAFLEX ASSY		01
08	0503062038	ASSY ANTI-LEAP		01
09	0503062039	POLIFLOW TITANIUM ASSY		01
09.	0503016279	POLIFLOW TITANIUM ASSY		01
10	0503062040	DISPLAY ASSY TITANIUM 1050010		01
11	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
12	0503062042	SET BOLT ARTICULADOR		01
13	0503062043	ASSY LIMIT WEIGHT		01
14	0503062044	ASSY MOUNT BOX FOR SEED		01
14A	0503016285	BOLT		05
14B	0503016286	HEX NUT		05
14C	0503016287	FLAT WASHER		05

ASSY DPL20 CUTTING DISC


0521055349

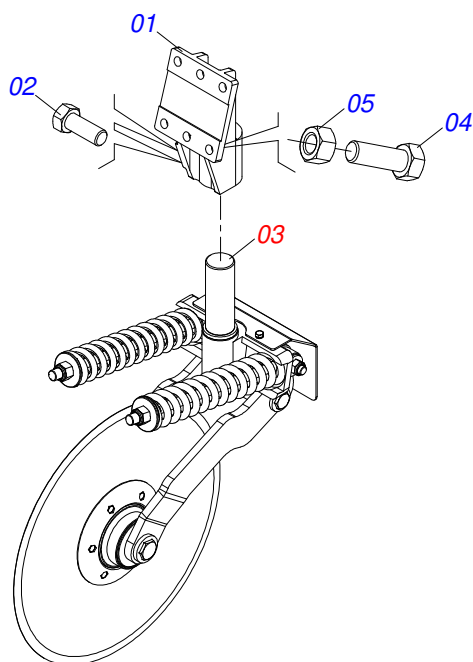

Item	Code	Description	See page	QT
01	0502012470	UPPER SUPPORT		01
02	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02
03	0521055348	LOWER SUPPORT WITH DPL 20 WITHOUT 68 LUBRICATION		01
04	0503012798	5/8" X 2" BOLT		04
05	0503010878	5/8" SELF ALIGNING NUT		04

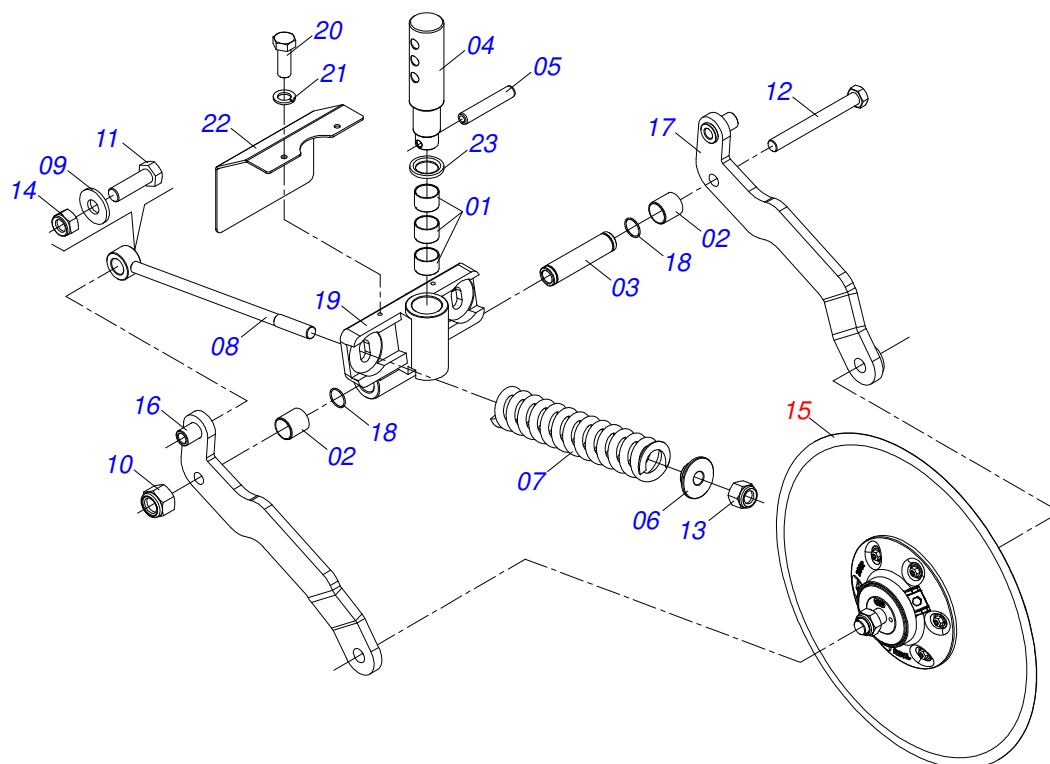


Item	Code	Description	See page	QT
01	0503019277	SLEEVE LUBRICATION SYSTEM		03
02	0503019278	LUBRICANT GLOVE		02
03	0581018679	SLEEVE		01
04	0581018677	SUPPORT DISC AXLE		01
05	0503010361	SPRING PIN		01
06	0551015883	SPRING GUIDES SLEVE		02
07	0503031575	2.5"X 12" X 0.5" COMPRESSION SPRING		02
08	0521068189	SPRING REGULACION		02
09	0501012140	FLAT WASHER		02
10	0503010152	3/4" SELF LOCKING NUT		01
11	0503010806	5/8" X 3" BOLT		02
12	0503014744	3/4 UNF X 7.1/2 C S G.7 ZN BOLT		01
13	0503011075	3/4" UNC NUT		02
14	0503010878	5/8" SELF ALIGNING NUT		02
15	0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	69	01
16	0521069351	RIGHT ARM		01
17	0521069350	LEFT ARM		01
18	0503010410	RING		02
19	0502012898	BOTTOM BRACKET		01
20	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		02
21	0503010179	5/16" ZN SPRING WASHER		02
22	0571012370	PROTECTION FRONT		01
23	0581018678	FLANGE WASHER		01

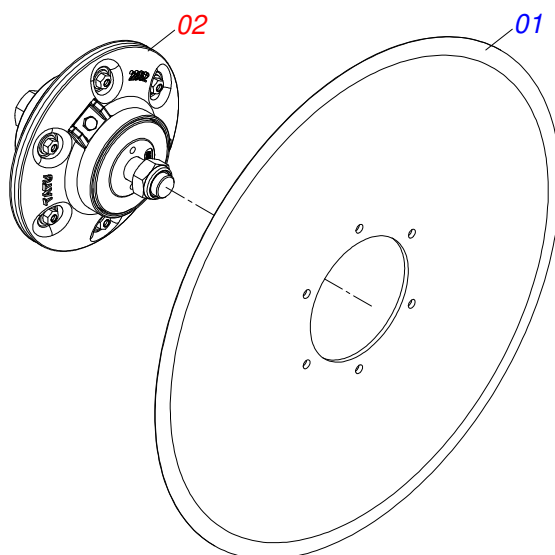


Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521053697	CUTTING DISK BOX	70	01

CUTTING DISK BOX


0521053697

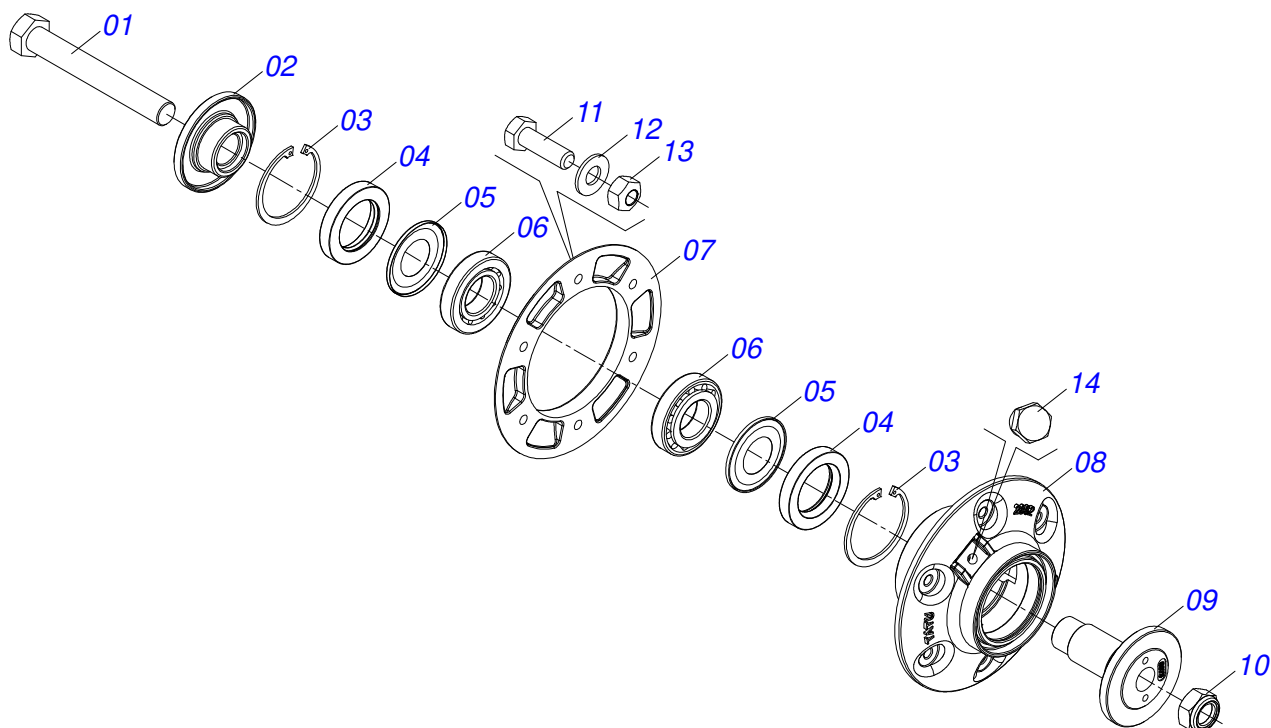


Item	Code	Description	See page	QT
01	0503019283	SCREW 7/8 UNF X 6.1/4	01	
02	0502040872	REGULATORY NUT	01	
03	0503010370	502072 CLAMPING RING (FOR AXLE)	02	
04	0503010590	00674-B SEAL	02	
05	0503019285	RING	02	
06	0503012170	30207 ROLLER BEARING	02	
07	0502020641	BLADE DISC FLANGE	01	
08	0502012862	CUTTING DISK BOX	01	
09	0502040873	CUTTING DISC AXLE	01	
10	0503017755	NUT	01	
11	0503018825	5/16 UNC UNC BOLT	06	
12	0501010694	8.5 X 18 X 1.5 FLAT WASHER	06	
13	0503013816	5/16" LOCKNUT	06	
14	0511017907	1/8" BSPT X 6 PLUG	02	

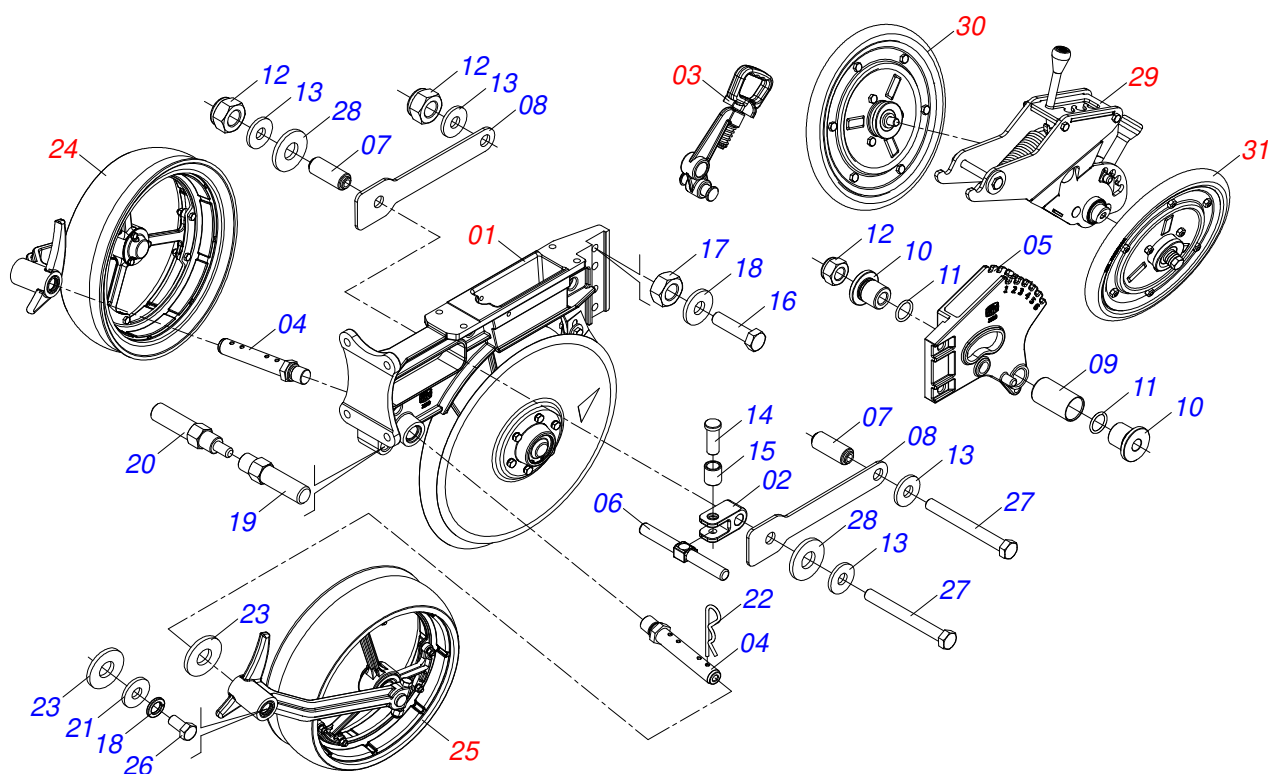


Item	Code	Description	See page	QT
01	0521056635	RIGHT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	73	01
02	0502012923	BEATER		01
03	0521056632	DEPTH CONTROL	79	01
04	0591011323	AXLE ARTICULATION WHEEL DEPTH		02
05	0502012920	SUPPORT ADJUSTING		01
06	0502012611	DEPTH CONTROL AXLE		01
07	0591011309	ADJUSTMENT BUSHING		02
08	0591011310	ADJUSTMENT BAR		02
09	0503019275	SLEEVE LUBRICATION SYSTEM		01
10	0581019473	ARTICULATED GLOVE		02
11	0503010045	O'RING		02
12	0503013357	3/8" SELF-ADJUSTING NUT		02
13	0501010984	FLAT WASHER		04
14	0591011326	LOCK PIN		01
15	0571015326	ARTICULATION SLEEVE HANDLE		01
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2" NUT		02
18	0503010019	1/2" SPRING WASHER		04
19	0591011324	SMALLER AXLE		01
20	0591011325	LARGER AXLE		01
21	0511017302	FLAT WASHER		02
22	0503030012	HAIR PIN		02
23	0501011445	FLAT WASHER		04
24	0521056633	MOUNTED RIGHT ARM	80	01
25	0521056631	MOUNTED LEFT ARM	81	01
26	0503012556	1/2" X 1" BOLT		02
27	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		02
28	0591011306	ADJUSTMENT LOCK		02
29	0521055093	BODY COMPACTOR	83	01
30	0521054990	LEFT COMPACTOR WHEEL	84	01
31	0521055017	RIGHT COMPACTOR WHEEL	85	01

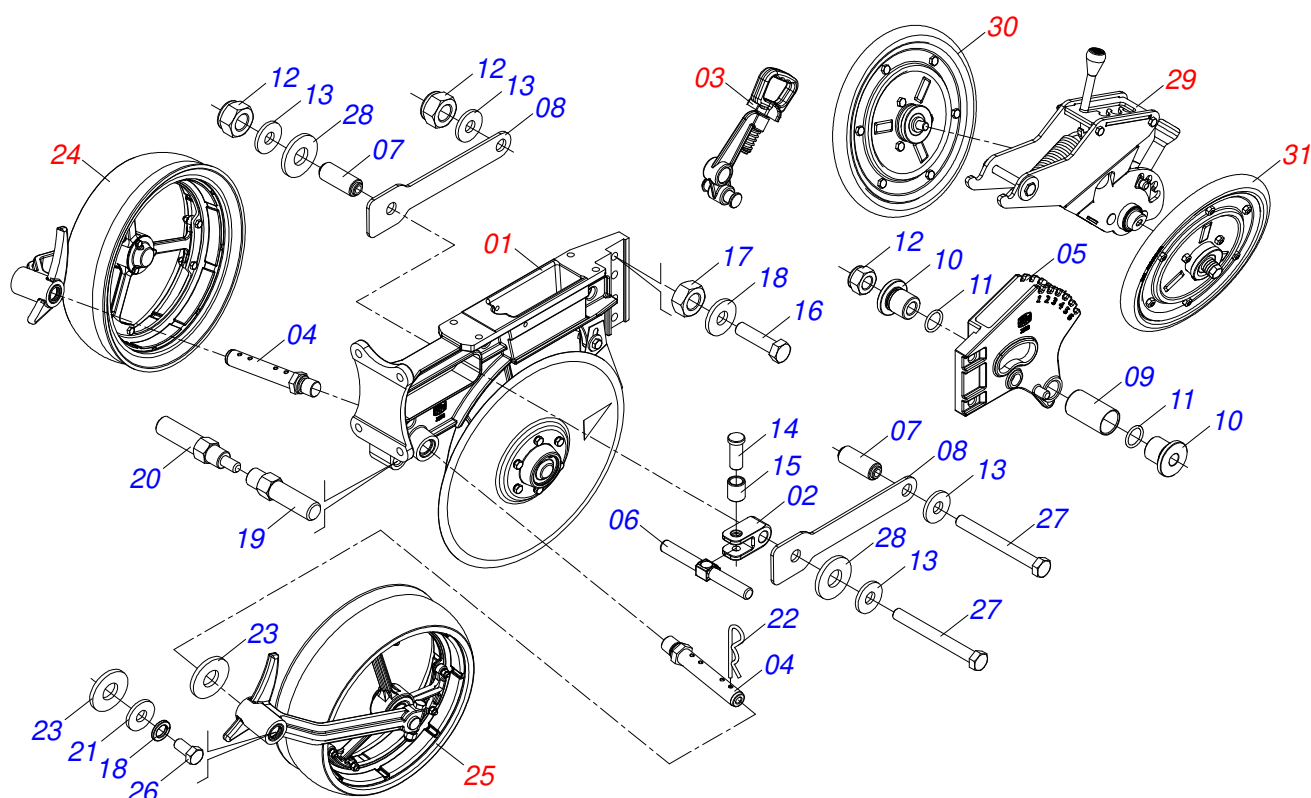


Item	Code	Description	See page	QT
01	0521056634	LEFT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	74	01
02	0502012923	BEATER		01
03	0521056632	DEPTH CONTROL	79	01
04	0591011323	AXLE ARTICULATION WHEEL DEPTH		02
05	0502012920	SUPPORT ADJUSTING		01
06	0502012611	DEPTH CONTROL AXLE		01
07	0591011309	ADJUSTMENT BUSHING		02
08	0591011310	ADJUSTMENT BAR		02
09	0503019275	SLEEVE LUBRICATION SYSTEM		01
10	0581019473	ARTICULATED GLOVE		02
11	0503010045	O'RING		02
12	0503013357	3/8" SELF-ADJUSTING NUT		02
13	0501010984	FLAT WASHER		04
14	0591011326	LOCK PIN		01
15	0571015326	ARTICULATION SLEEVE HANDLE		01
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2" NUT		02
18	0503010019	1/2" SPRING WASHER		04
19	0591011324	SMALLER AXLE		01
20	0591011325	LARGER AXLE		01
21	0511017302	FLAT WASHER		02
22	0503030012	HAIR PIN		02
23	0501011445	FLAT WASHER		04
24	0521056633	MOUNTED RIGHT ARM	80	01
25	0521056631	MOUNTED LEFT ARM	81	01
26	0503012556	1/2" X 1" BOLT		02
27	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		02
28	0591011306	ADJUSTMENT LOCK		02
29	0521055093	BODY COMPACTOR	83	01
30	0521054990	LEFT COMPACTOR WHEEL	84	01
31	0521055017	RIGHT COMPACTOR WHEEL	85	01

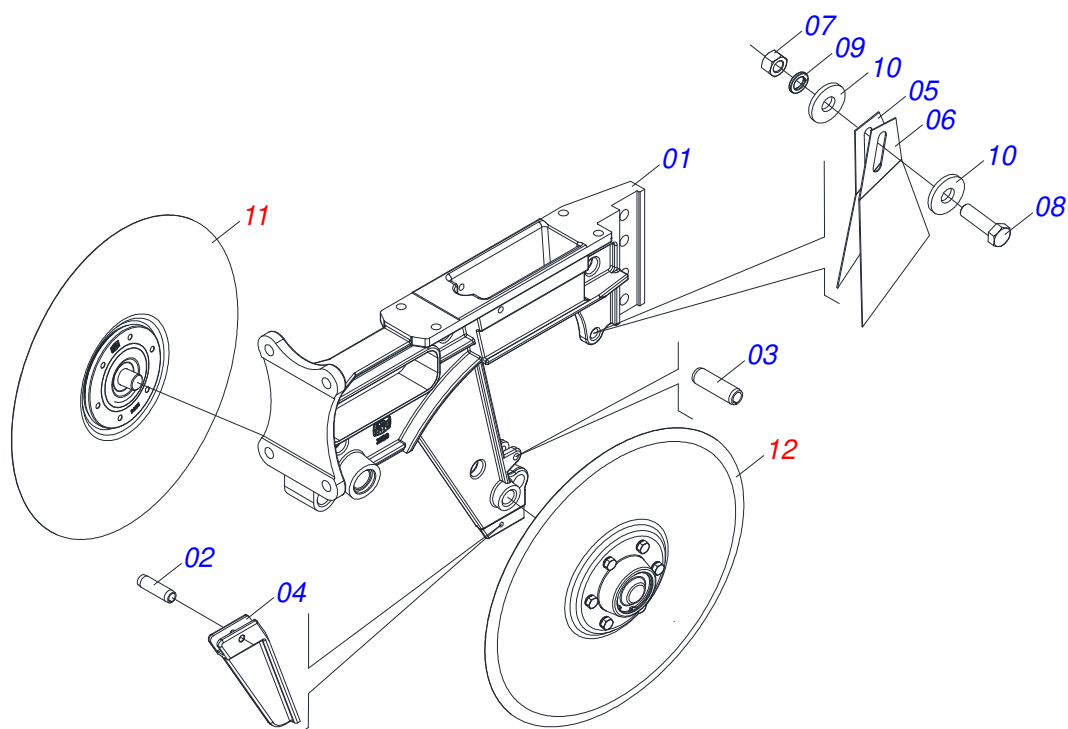


Item	Code	Description	See page	QT
01	0502012929	BODY RIGHT		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8" SPRING WASHER		01
10	0501010984	FLAT WASHER		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 75 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 76 FERTILIZER / SEED		01

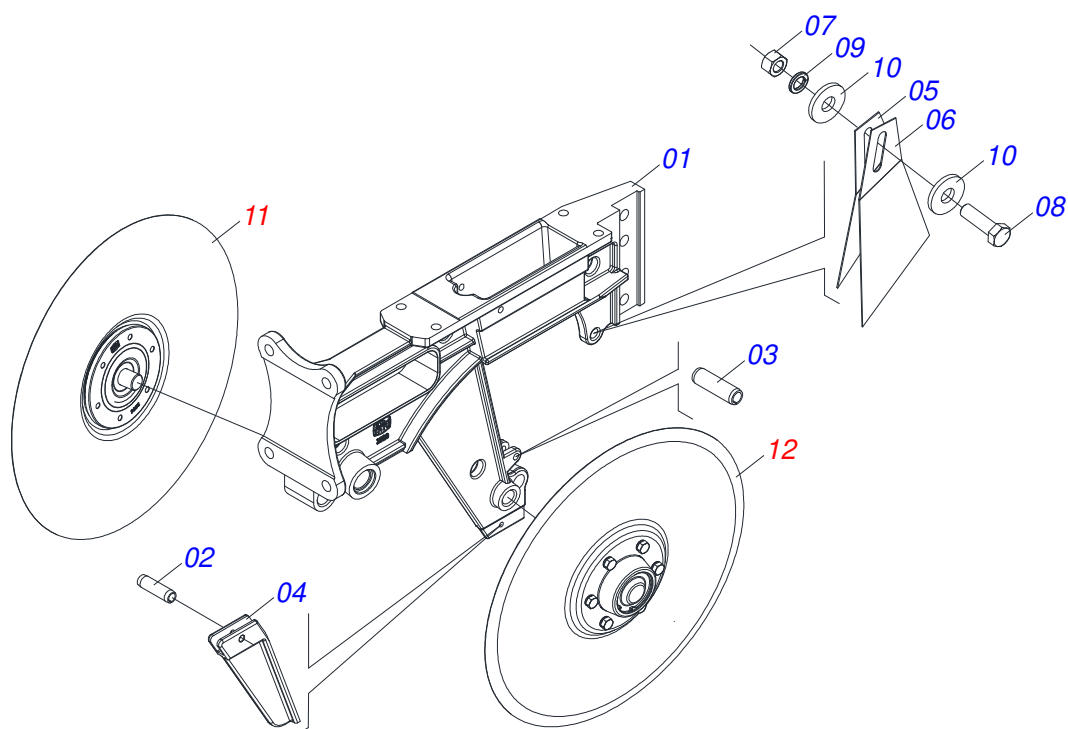


Item	Code	Description	See page	QT
01	0502012928	LEFT EXTENSOR		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8" SPRING WASHER		01
10	0501010984	FLAT WASHER		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 75 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 76 FERTILIZER / SEED		01

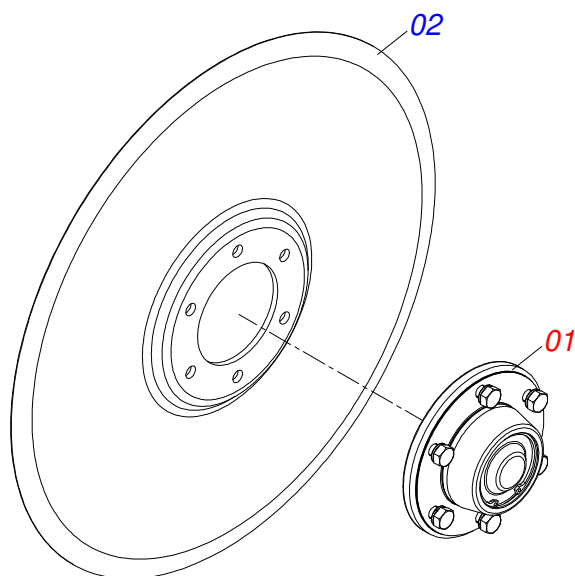


Item	Code	Description	See page	QT
01	0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	77	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

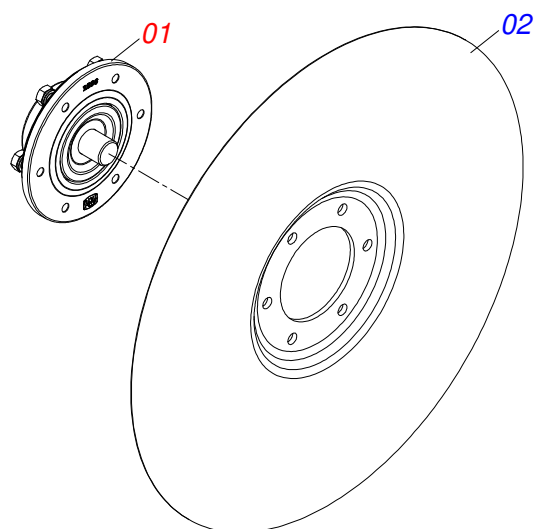


Item	Code	Description	See page	QT
01	0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	78	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

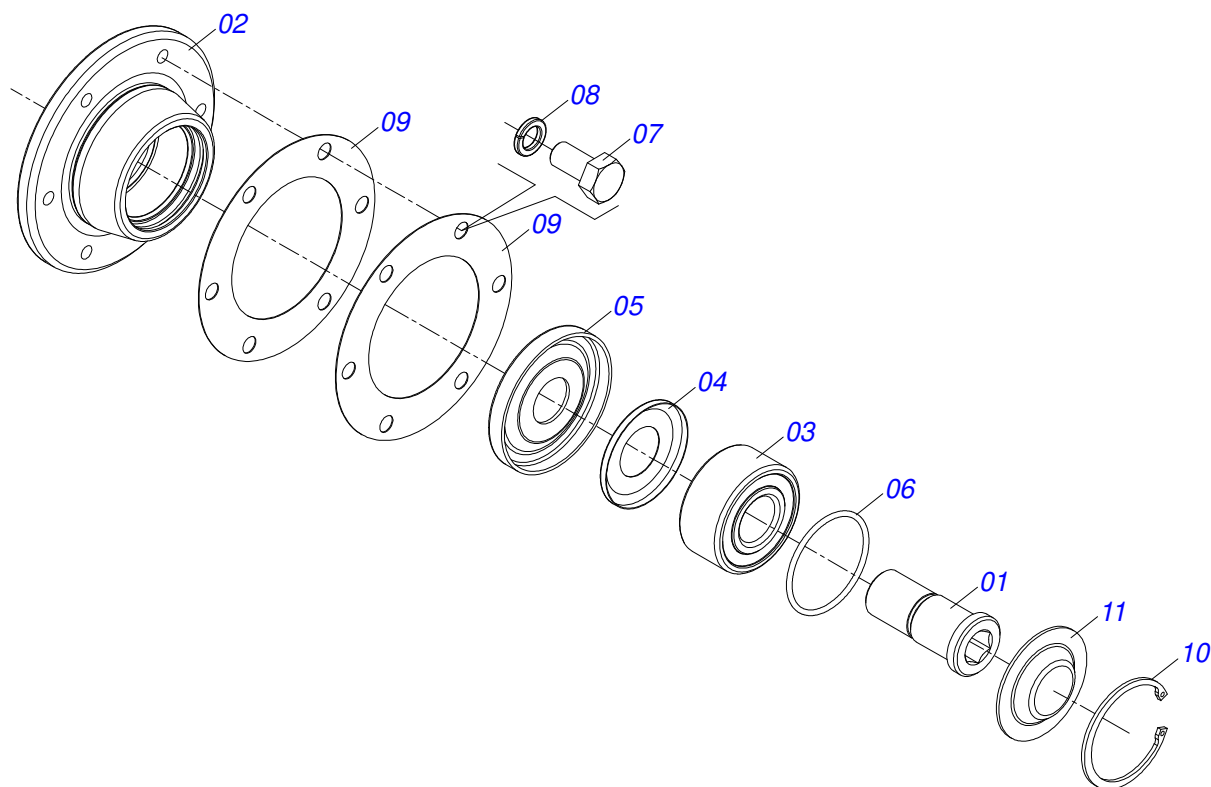

Item	Code	Description	See page	QT
01	0571011151	LEFT DOUBLE DISC HUB		01
02	0502012896	LOW CUBE FERTILIZER / SEED BOX		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	5/16" ZN SPRING WASHER		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

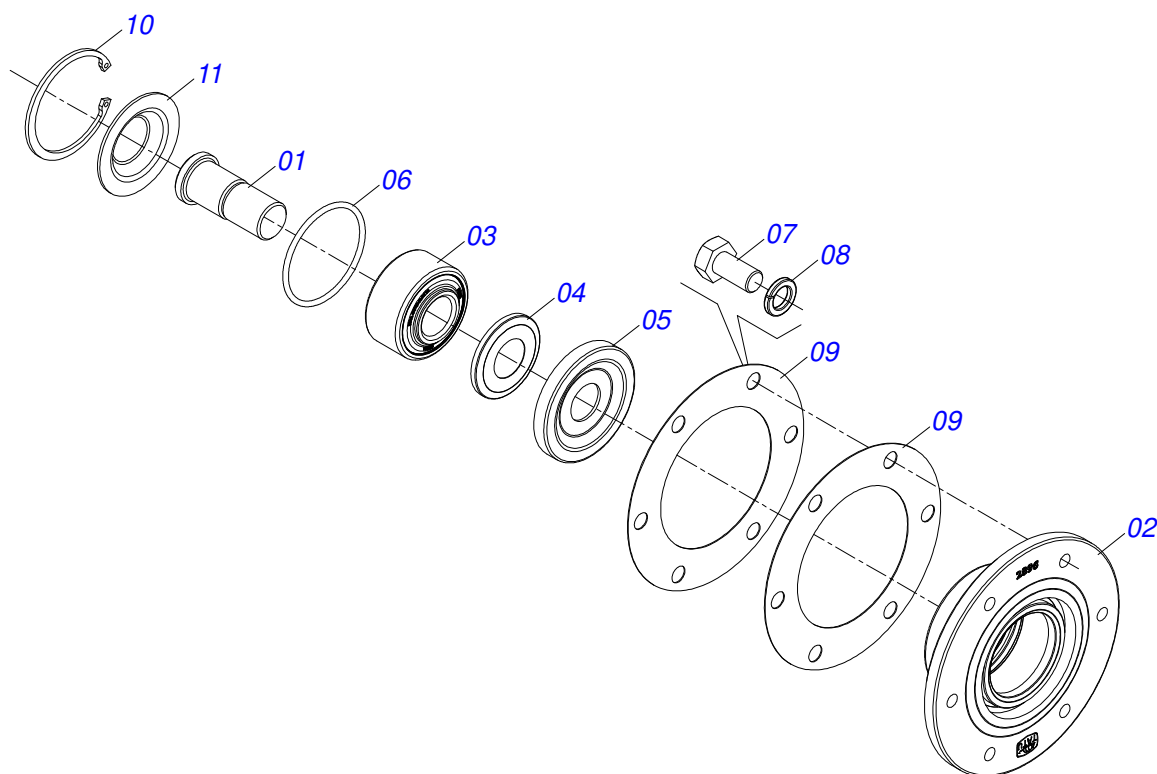


Item	Code	Description	See page	QT
01	0571011150	RIGHT DOUB DISC - HUB		01
02	0502012896	LOW CUBE FERTILIZER / SEED BOX		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	5/16" ZN SPRING WASHER		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

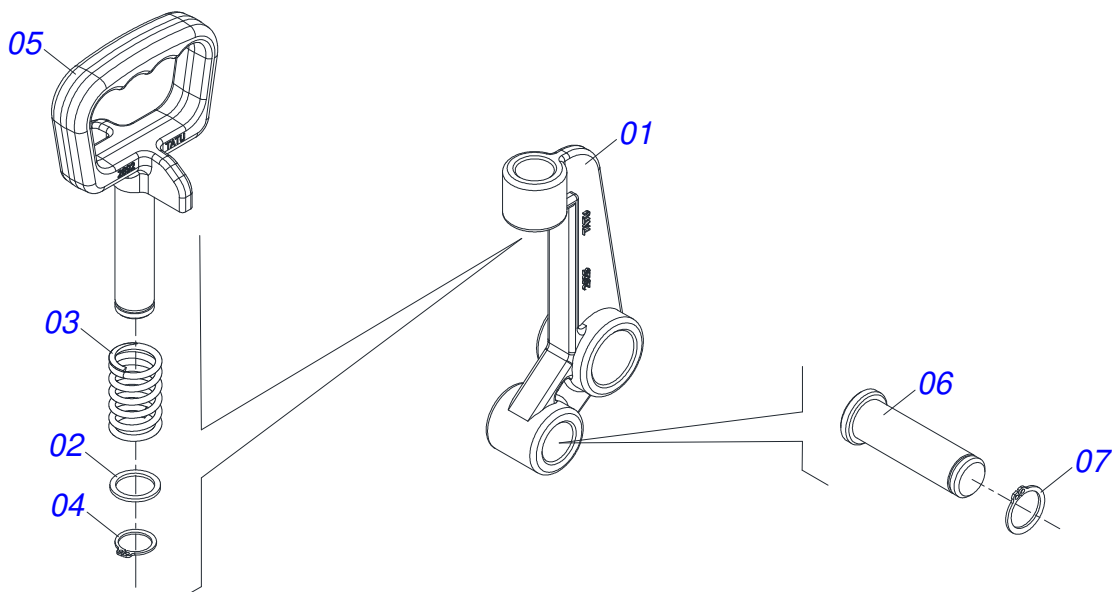

Item	Code	Description	See page	QT
01	0502012925	ADJUSTMENT BODY		01
02	0511015976	FLAT WASHER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0503010581	RING		01
05	0502012892	DEPTH CONTROL HANDLE		01
06	0581019526	ARTICULATED AXLE LEVER DEPTH		01
07	0503010302	501019 SEAL RING		01

MOUNTED RIGHT ARM


0521056633

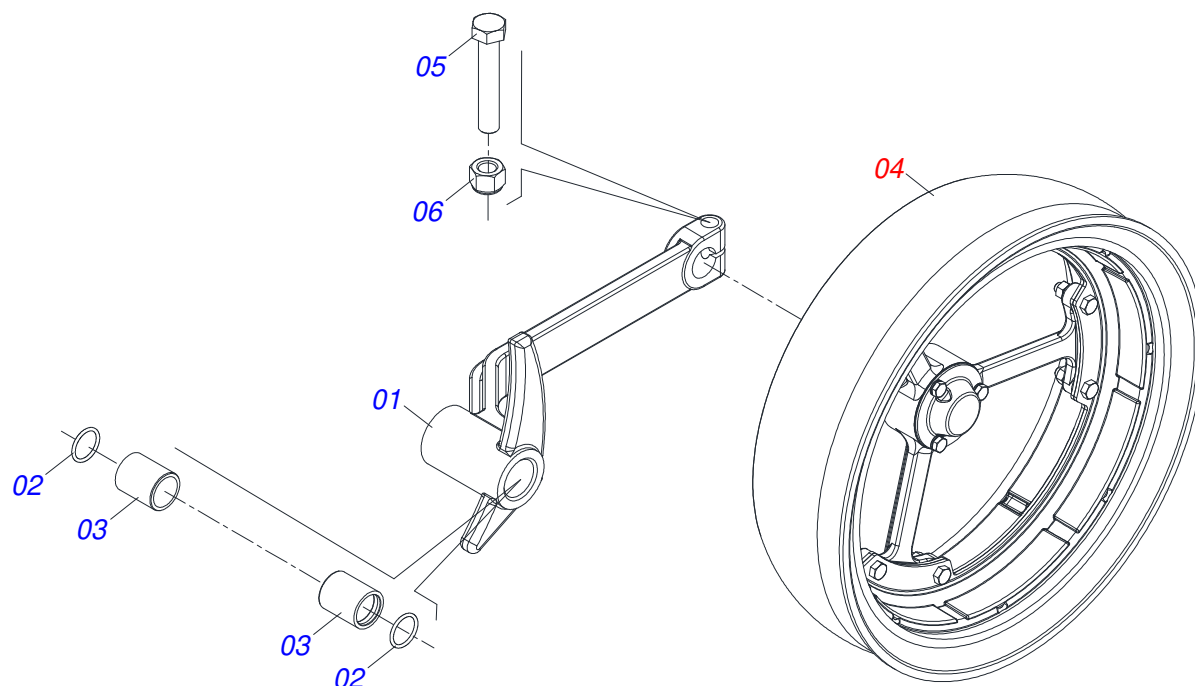


Item	Code	Description	See page	QT
01	0502012926	RIGHT ARM		01
02	0503011109	2-119 N 3006-9B O'RING		02
03	0581019514	LUBRICANT GLOVE		02
04	0521055059	WHEEL RAYED ASSY SPA WITHOUT 82 LUBRICATION		01
05	0503010741	1/2" X 2-3/4" BOLT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01

MOUNTED LEFT ARM


0521056631

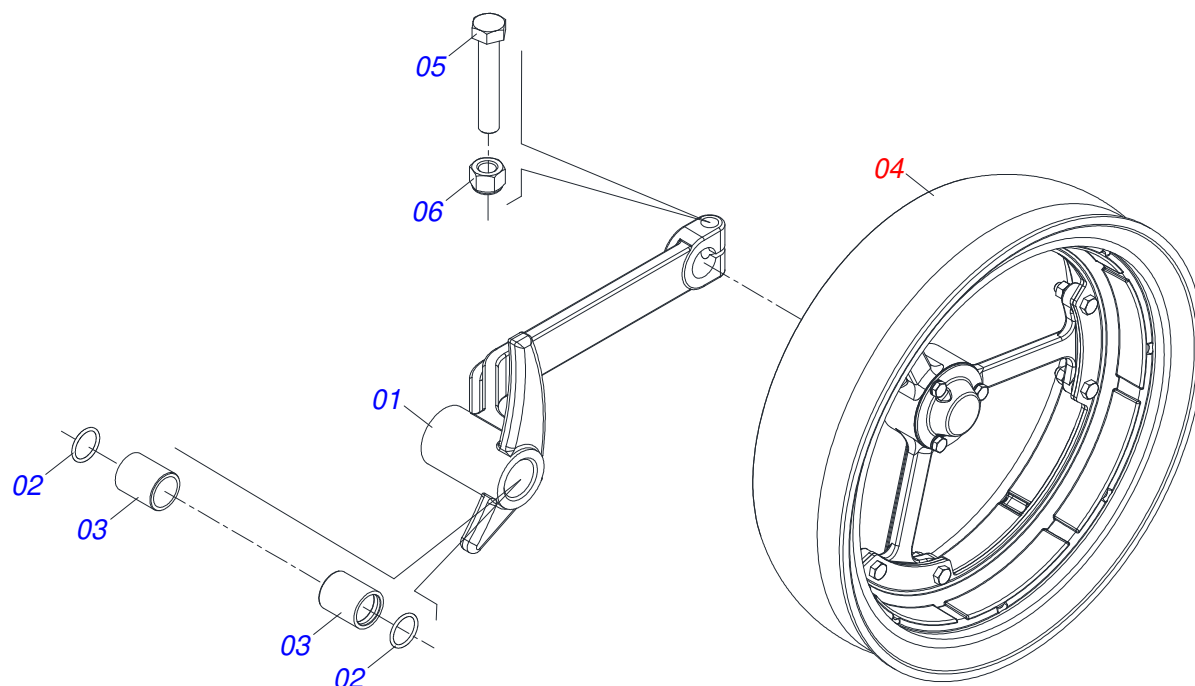

Item	Code	Description	See page	QT
01	0502012927	LEFT ARM		01
02	0503011109	2-119 N 3006-9B O'RING		02
03	0581019514	LUBRICANT GLOVE		02
04	0521055059	WHEEL RAYED ASSY SPA WITHOUT 82 LUBRICATION		01
05	0503010741	1/2" X 2-3/4" BOLT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01

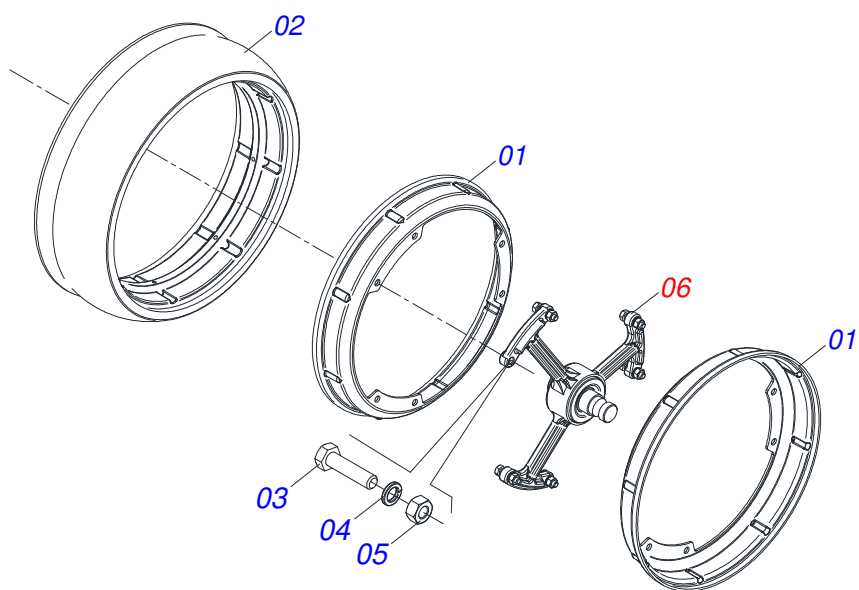


Item	Code	Description	See page	QT
01	0551019904	PRESS WHEEL RIM		02
02	0503030891	RUBBER BAND		01
03	0503010365	NUT		06
04	0503010179	5/16" ZN SPRING WASHER		06
05	0503010337	5/16" NUT		06
06	0521055073	ASSEMBLY DEPTH WHEEL BOX		01

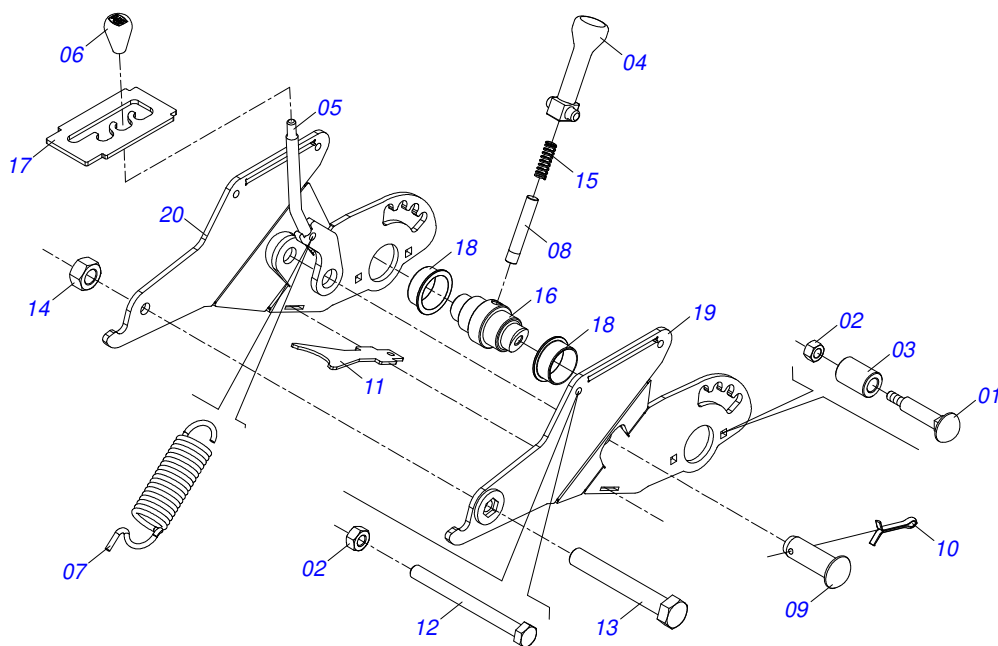

Item	Code	Description	See page	QT
01	0501011753	5/16" X 1-3/4" BOLT	02	
02	0503013816	5/16" LOCKNUT	04	
03	0581015855	SLEEVE	02	
04	0502012877	PRESS WHEEL ADJUSTMENT LEVER	01	
05	0521068661	LEVER	01	
06	0503030878	LEVER CRANK	01	
07	0503031393	1.57" X 5.98" X 0.2"TRACTION SPRING	01	
08	0581019520	AXIS	01	
09	0571812442	COUPLING SHAFT	01	
10	0503010257	1/8" X 1" COTTERPIN	01	
11	0581019511	COVER	01	
12	0503010848	5/16" X 3.1/2" BOLT	02	
13	0503010752	1/2" X 3.1/2" BOLT	01	
14	0503011336	1/2" HEX SELF ADJUSTING NUT	01	
15	0503030190	0.5" X 1.6" X 0.05" SPRING	01	
16	0581019510	AXIS	01	
17	0581019512	PLATE TOP	01	
18	0503019351	LUBRICANT GLOVE	02	
19	0521069591	LEFT SIDE	01	
20	0581019548	RIGHT SIDE BODY	01	

LEFT COMPACTOR WHEEL


0521054990

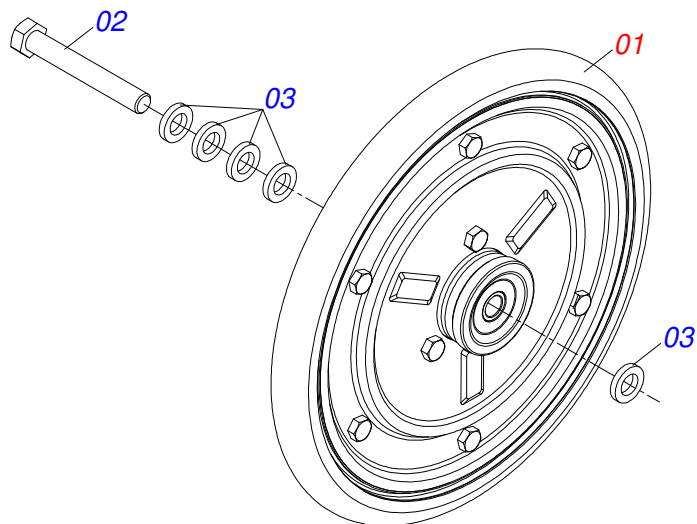


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	86	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

RIGHT COMPACTOR WHEEL


0521055017

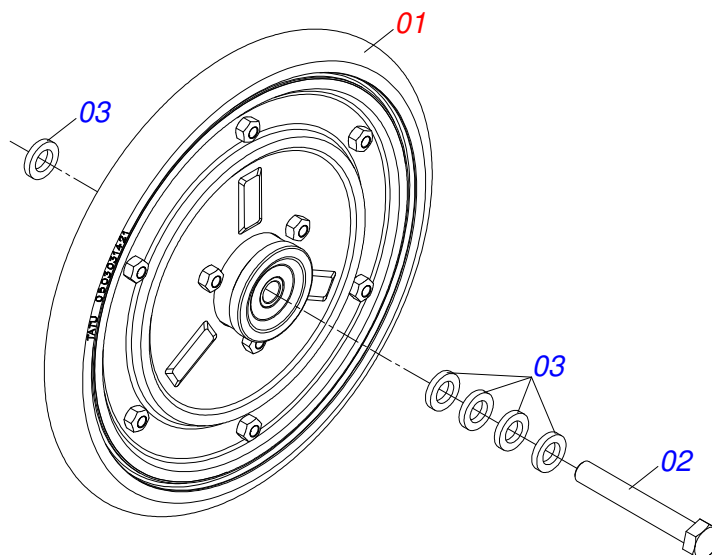

Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	86	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

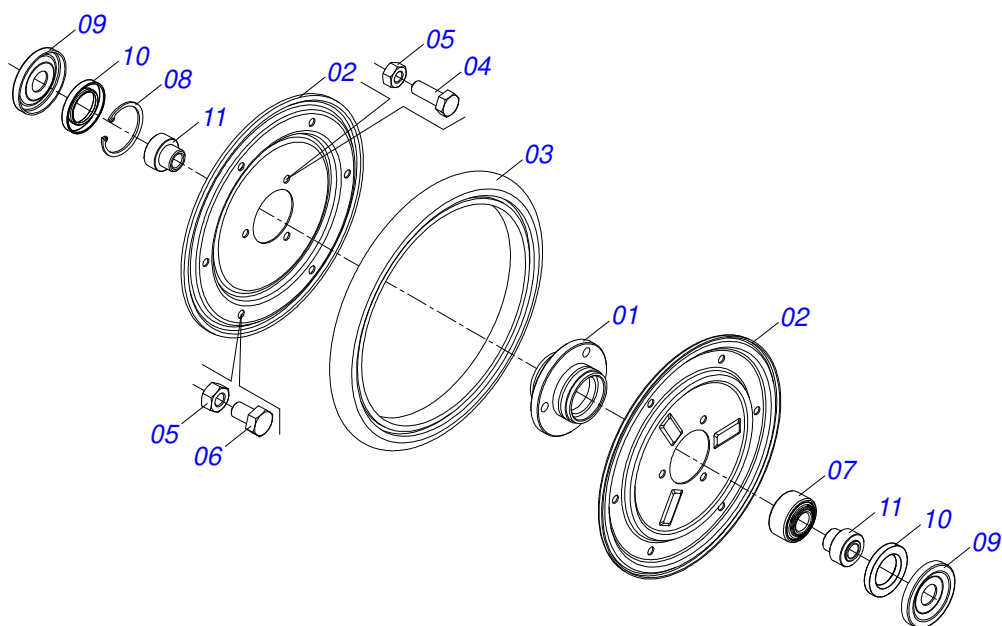


Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

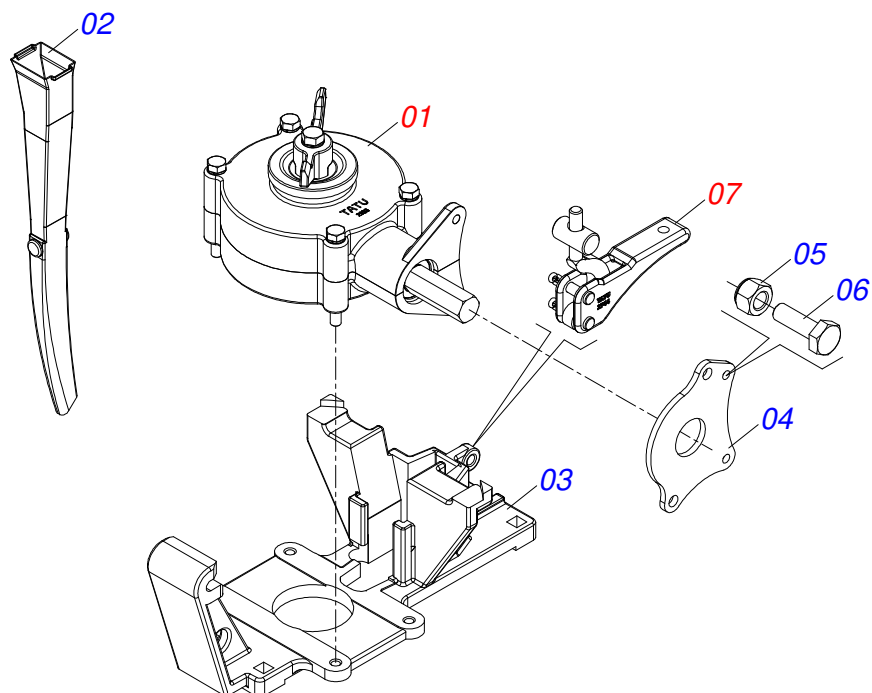

Item	Code	Description	See page	QT
01	0521056639	SEED ROW TRANSMISSION	88	01
02	0503034575	BOCAL SEED LINE HIGH TITANIUM		01
03	0502012921	BASE FIXING SYSTEM		01
04	0591014600	ENCAPSULATED CURRENT FIXER		01
05	0503014876	NUT PARLOCK 1/4"		02
06	0503010461	1/4" X 1" BOLT		02
07	0511052024	FAST CLOSING SET	89	01

SEED ROW TRANSMISSION


0521056639

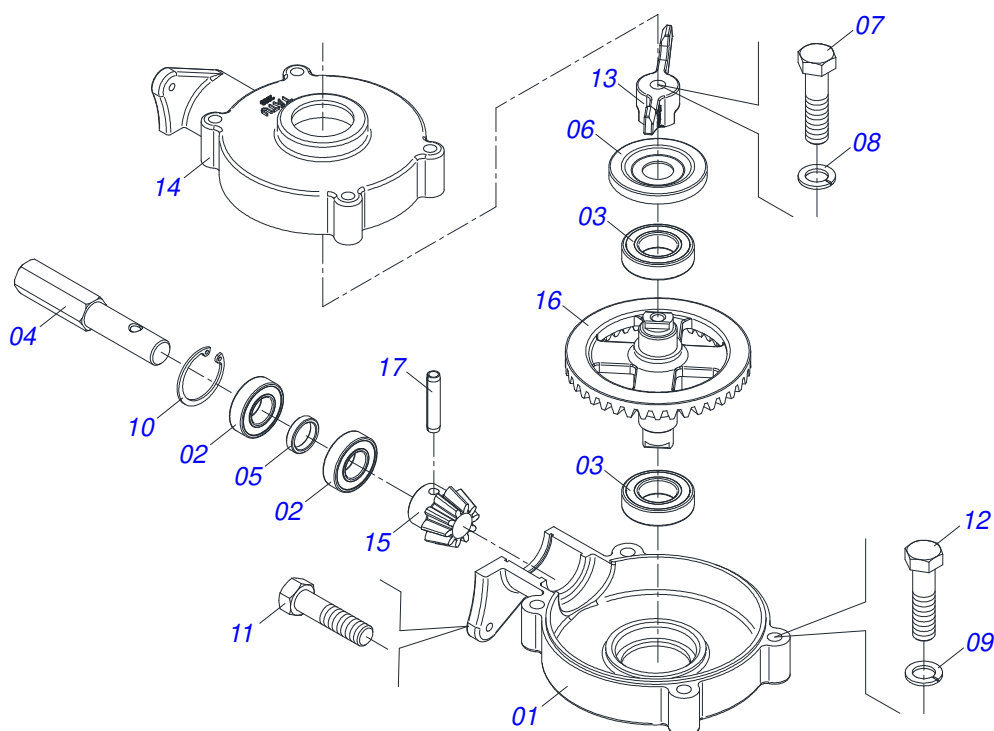

Item	Code	Description	See page	QT
01	0502012932	MINOR SIDE	01	
02	0503017046	BEARING	02	
03	0503011410	ROLLER BEARING	02	
04	0591011321	AXLE GEAR	01	
05	0591011322	SPACER	01	
06	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50	01	
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
08	0503010025	3/8" SPRING WASHER	01	
09	0503010179	5/16" ZN SPRING WASHER	04	
10	0503011945	503050 CLAMPING RING (FOR AXLE)	01	
11	0503010420	BOLT	02	
12	0503011053	5/16" X 3" C S 6.5 ZN BOLT	04	
13	0502012919	GRAGGER	01	
14	0502012933	LARGER SIDE	01	
15	0502012930	CONICAL GEAR	01	
16	0502012931	CONICAL GEAR	01	
17	0503010585	0,24" X 1.18" SPRING PIN	01	

FAST CLOSING SET


0511052024

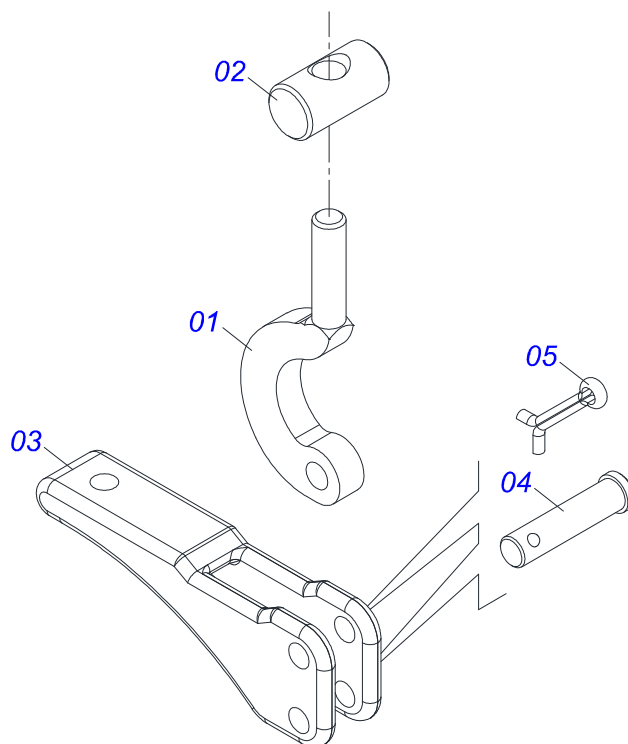


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

LEFT FERTILIZER CONDUCTOR ASSY

0521054263

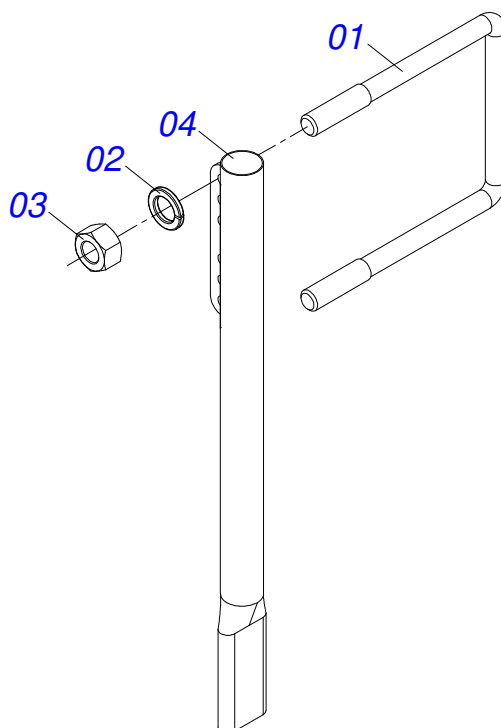


Item	Code	Description	See page	QT
01	0521014021	1/2" X 4.5" X 5.4" FASTENER		01
02	0503010019	1/2" SPRING WASHER		02
03	0503010060	1/2" NUT		02
04	0521069319	LEFT FERTILIZER CONDUCTOR		01

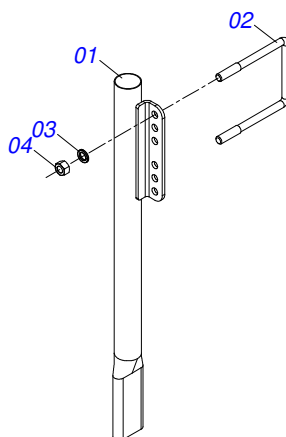

Item	Code	Description	See page	QT
01	0521069328	RIGHT FERTILIZER CONDUCTOR		01
02	0521014021	1/2" X 4.5" X 5.4" FASTENER		01
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2" NUT		02

ASSY LONG FERTILIZER CONDUCTOR


0521056854

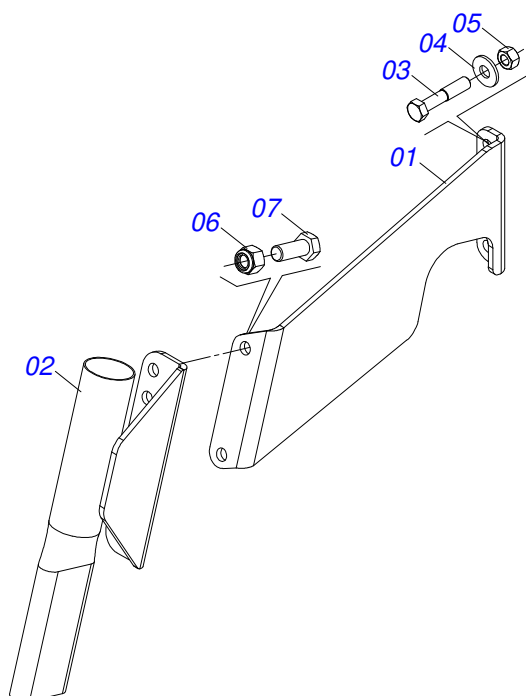


Item	Code	Description	See page	QT
01	0591011676	BODY LONG CONDUCTOR FERTILIZER		01
02	0531060359	FERTILIZER CONDUCTOR		01
03	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
04	0511017302	FLAT WASHER		02
05	0503011336	1/2" HEX SELF ADJUSTING NUT		02
06	0503010589	1/2" UNC SELF ADJUSTING NUT		02
07	0503014007	1/2" X 1-1/4" BOLT		02

ASSY SHORT FERTILIZER CONDUCTOR


0521056855

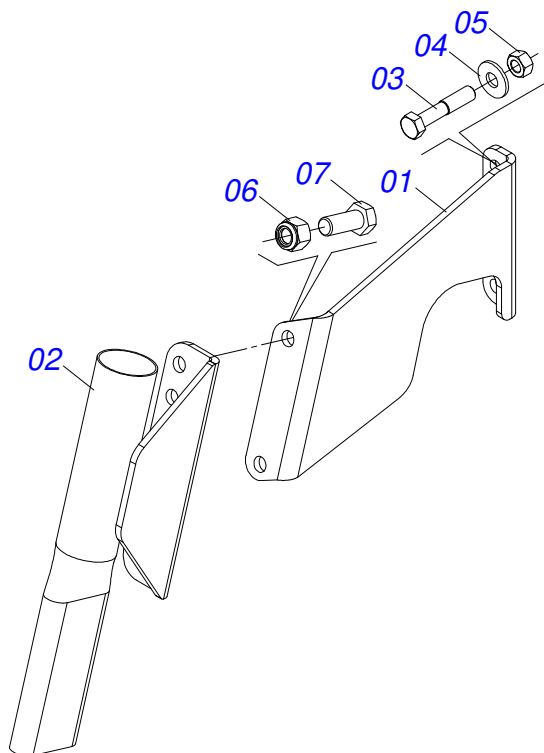


Item	Code	Description	See page	QT
01	0591011713	SHORT SUPPORT BODY CONDUCTOR FERTILIZER		01
02	0531060359	FERTILIZER CONDUCTOR		01
03	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
04	0511017302	FLAT WASHER		02
05	0503011336	1/2" HEX SELF ADJUSTING NUT		02
06	0503010589	1/2" UNC SELF ADJUSTING NUT		02
07	0503014007	1/2" X 1-1/4" BOLT		02

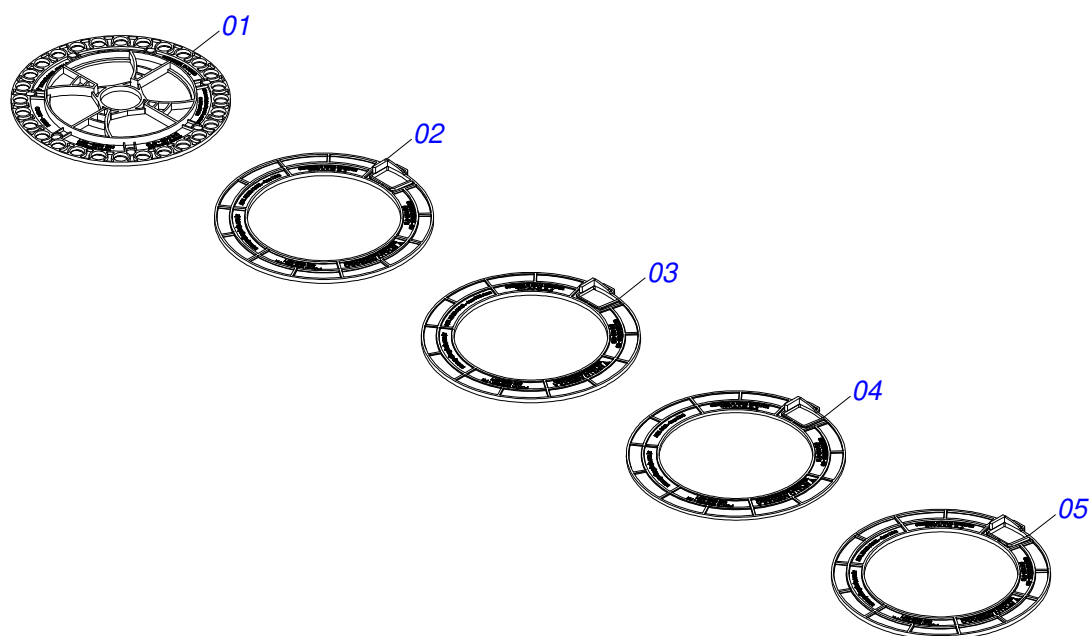


Item	Code	Description	See page	QT
01	0503016204	CORN DISK 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

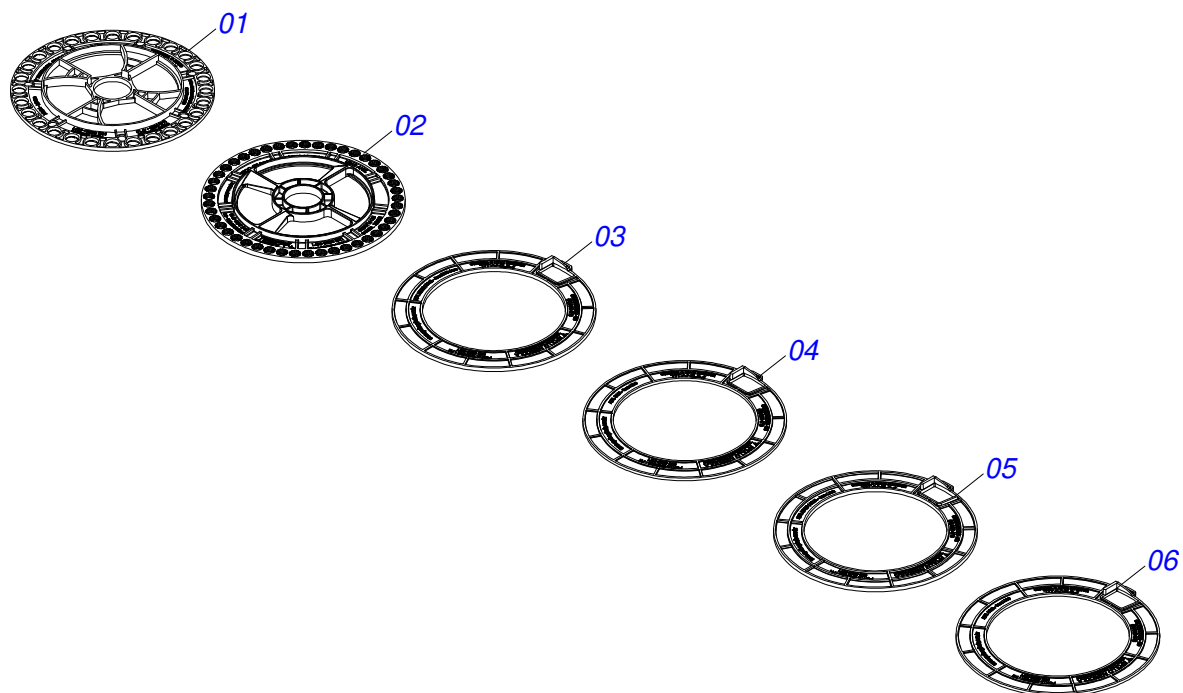


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

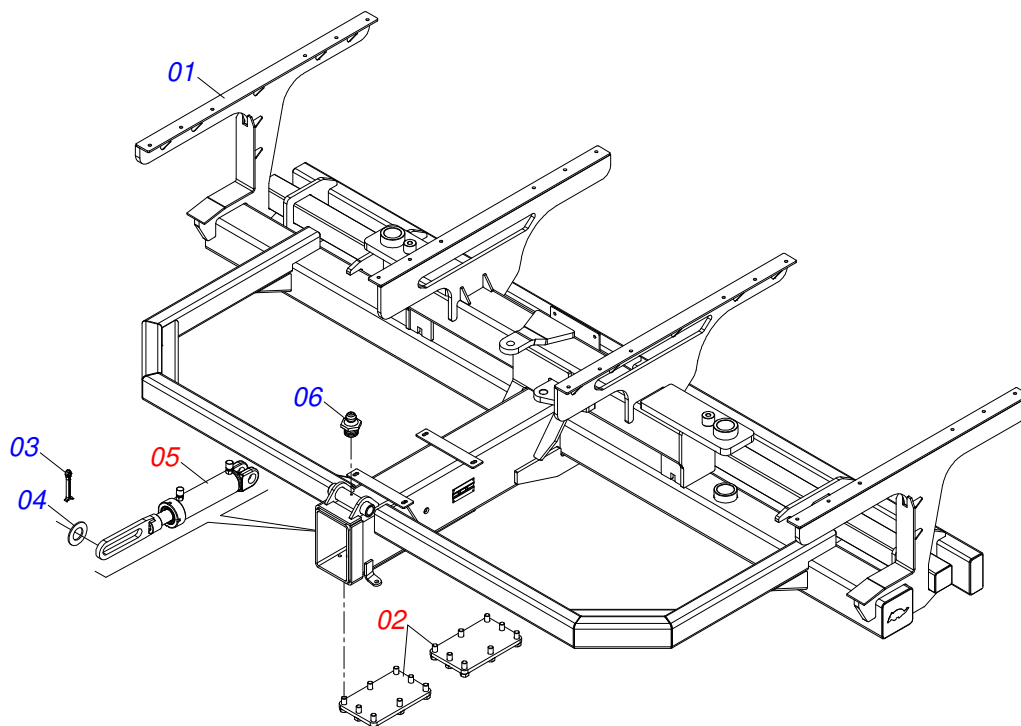


Item	Code	Description	See page	QT
01	0531060503	CENTRAL FRAME 3900		01
02	0521050019	TIGHTENING PLATE WITH FIXING INTERNAL	97	02
03	0503010523	1/4" X 2" COTTERPIN		01
04	0521011132	FLAT WASHER		01
05	0521052189	38,10 X 63,50 X 386 X 148 HYDRAULIC CYLINDER	98	01
06	0503010002	1800 GREASE FITTING		01

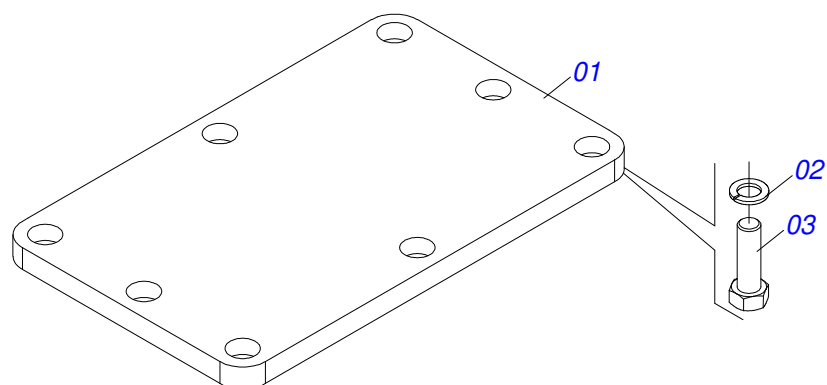


Item	Code	Description	See page	QT
01	0571015217	TUBE ADJUSTMENT PLATE		01
02	0503010027	5/8" SPRING WASHER		08
03	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		08

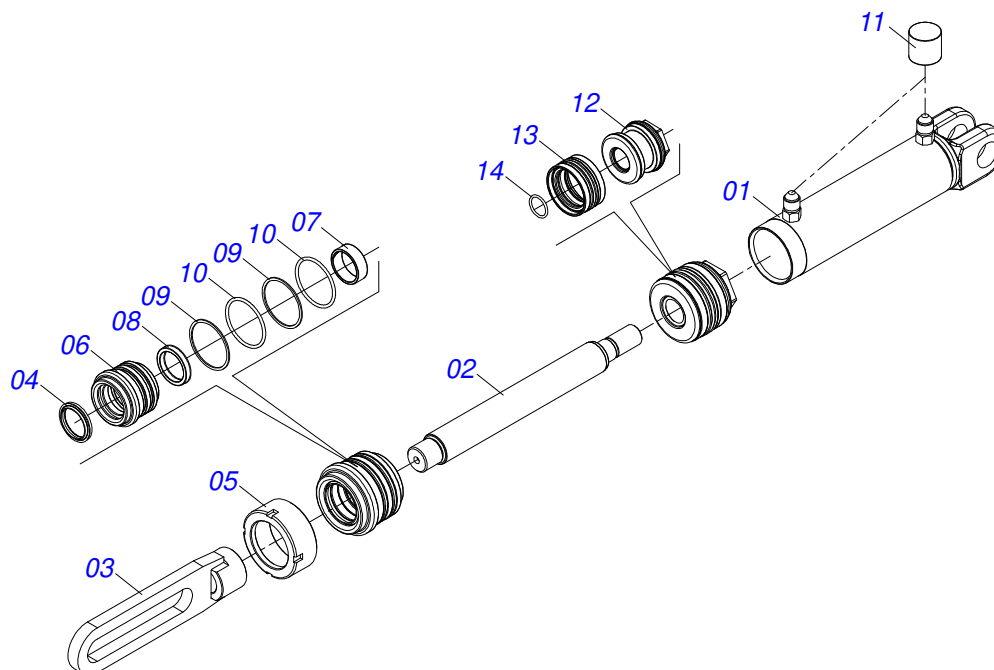


Item	Code	Description	See page	QT
01	0521068383	CYLINDER CASE		01
02	0581010670	CORPO HASTE 38,10 X 345		01
03	0511070058	GUIDE HIDRAULIC		01
04	0503010163	D-1500 SCRAPER RING		01
05	0502010471	MOBILE COVER		01
06	0581010668	RING SUPPORT		01
07	0503018004	RING		01
08	0503018003	GASKET		01
09	0503018163	BACK-UP RING		02
10	0503018162	O'RING		02
11	0503030385	CYLINDER PLUG N-002		02
12	0502012837	PISTON		01
13	0503018005	RING		01
14	0503011109	2-119 N 3006-9B O'RING		01
15	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

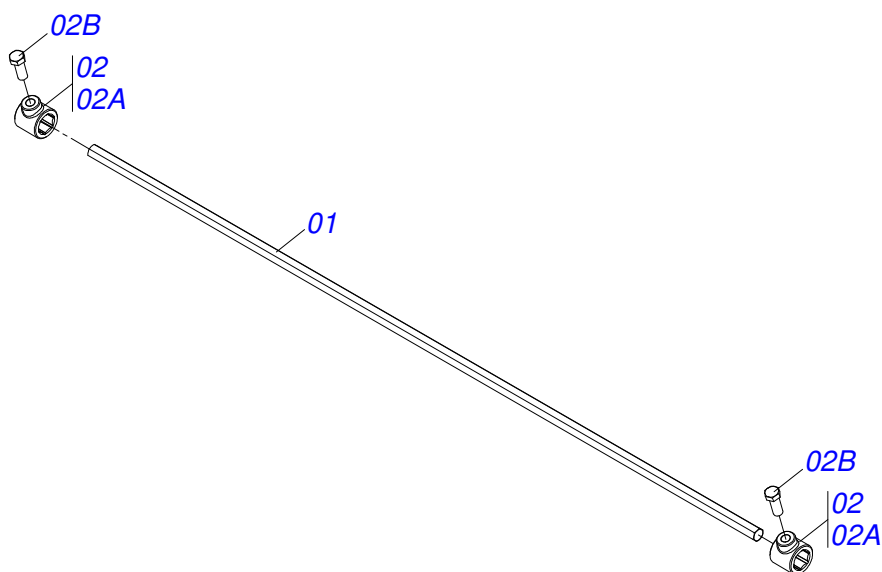

Item	Code	Description	See page	QT
01	0591012191	HEX AXLE 3/4 X 3654		01
02	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		02
02A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
02B	0503010256	3/8" X 3/4" BOLT		01

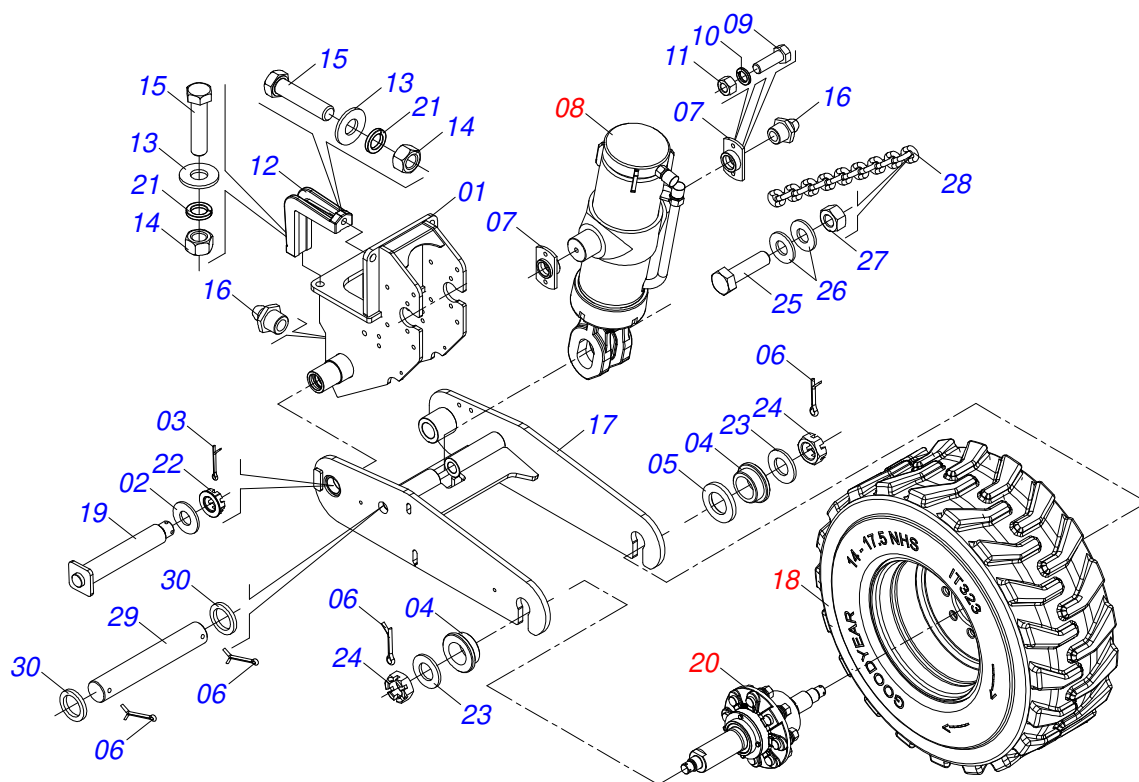

Item	Code	Description	See page	QT
01	0521064543	WHEEL SUPPORT		01
02	0561019929	FLAT WASHER		01
03	0503011345	1/4" X 3-1/2" COTTERPIN		01
04	0551014511	CARRYING WEELS AXLE SLEEVE GUIDES		02
05	0551014508	FLAT WASHER		01
06	0503010010	1/4" X 2.1/2" COTTERPIN		04
07	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
08	0511058240	HYDRAULIC CYLINDER 50,80 X 101,60 X 483 X 276	102	01
09	0503010920	1/2" X 1.1/2" BOLT		04
10	0503010019	1/2" SPRING WASHER		04
11	0503010060	1/2" NUT		04
12	0502012731	WHEEL HOLDER		02
13	0501010322	FLAT WASHER		04
14	0503010014	3/4" NUT		04
15	0501010195	3/4" X 3-1/2" BOLT		04
16	0503010002	1800 GREASE FITTING		03
17	0521064550	CARRYING-WHEELS FORK		01
18	0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	23	01
19	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
20	0511054495	WHEEL WITHOUT TIRE WITHOUT TRANSMISSION	103	01
21	0503010023	3/4" SPRING WASHER		04
22	0501010630	1.1/2" CASTLE NUT		01
23	0501017779	32 X 60 X 4.75 FLAT WASHER		02
24	0503011052	1.1/4" X 0.77" CASTLE NUT		02
25	0503010882	BOLT		01
26	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
27	0503010337	5/16" NUT		01
28	0503033335	CURRENT 6 X 21 ELOS		01
29	0581017245	AXLE BODY		01
30	0531012874	FLAT WASHER		02

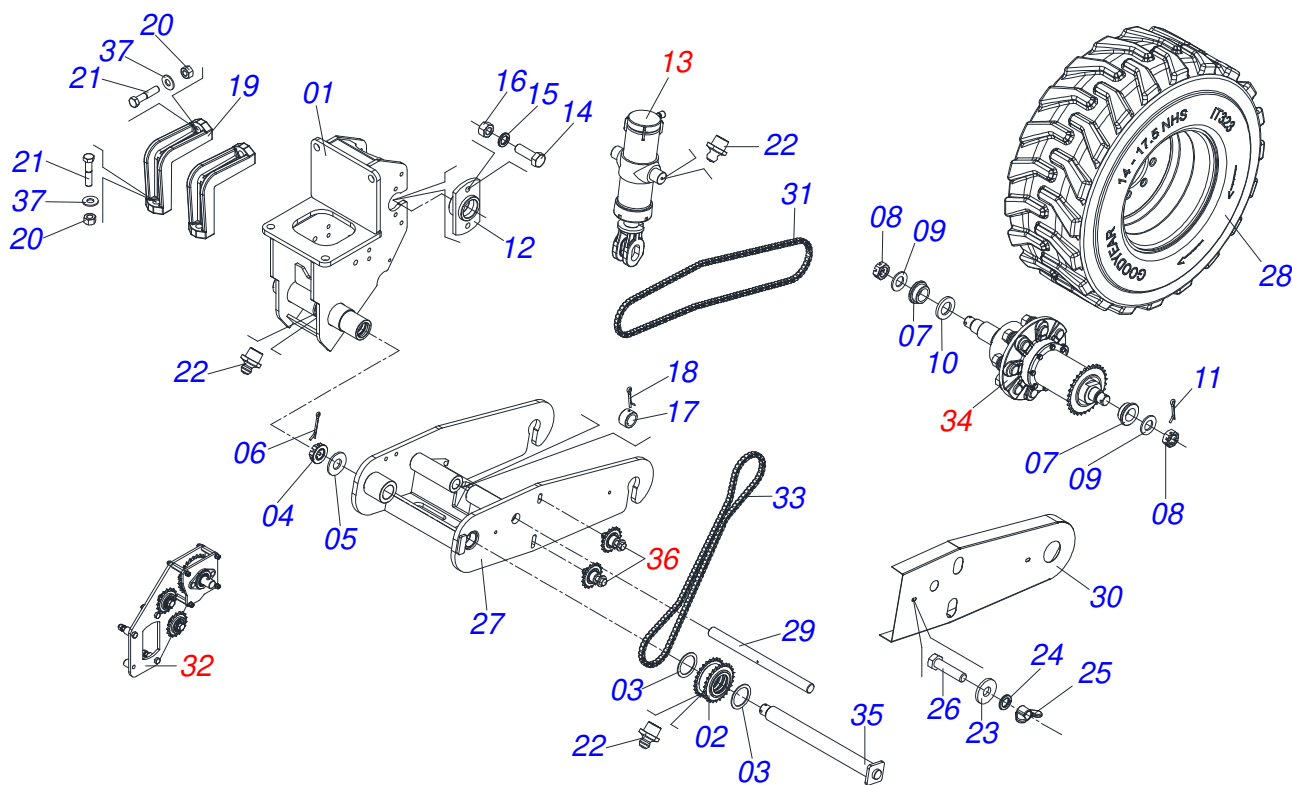


Item	Code	Description	See page	QT
01	0521064543	WHEEL SUPPORT		01
02	0511068422	WHEEL GEAR DOBLE		01
03	0551018571	FLAT WASHER		02
04	0501010630	1.1/2" CASTLE NUT		01
05	0561019929	FLAT WASHER		01
06	0503011345	1/4" X 3-1/2" COTTERPIN		01
07	0551014511	CARRYING WEELS AXLE SLEEVE GUIDES		02
08	0503011052	1.1/4" X 0.77" CASTLE NUT		02
09	0501017779	32 X 60 X 4.75 FLAT WASHER		02
10	0551014508	FLAT WASHER		01
11	0503010010	1/4" X 2.1/2" COTTERPIN		02
12	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
13	0511058240	HYDRAULIC CYLINDER 50,80 X 101,60 X 483 X 276	102	01
14	0503010920	1/2" X 1.1/2" BOLT		04
15	0503010019	1/2" SPRING WASHER		04
16	0503010060	1/2" NUT		04
17	0551014565	CILINDER FORK SLEEVE GUIDES		01
18	0503010067	3/16" X 2.1/2" COTTER PIN		01
19	0502012731	WHEEL HOLDER		02
20	0503010014	3/4" NUT		04
21	0501010195	3/4" X 3-1/2" BOLT		04
22	0503010002	1800 GREASE FITTING		03
23	0501013518	FLAT WASHER		02
24	0503010025	3/8" SPRING WASHER		02
25	0503010209	3/8" UNC BUTTERFLY NUT		02
26	0503010849	3/8" X 1-1/2" BOLT		02
27	0521064550	CARRYING-WHEELS FORK		01
28	0503061624	WHEEL AND TIRE ASSY 13.0/55-16/12LO		01
29	0571015194	Ø34,93 X 490 USAP AXLE		01
30	0561019941	RIGHT PROTECTIVE CAP WHEELS		01
31	0503014857	50-1 X CHAIN X 122 LINK + REDUCION		01




CENTRAL WHEEL WITH TRANSMISSION 8940

0521044028

Item	Code	Description	See page	QT
32	0511054499	TRANSMISSION OF LARGER CENTRAL EXCHANGE	104	01
33	0503014086	50-1 X 123 CHAIN LINK + MENDING		01
34	0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR	24	01
35	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
36	0511054464	WHEEL FORK TENSIONER	26	02
37	0501010322	FLAT WASHER		04

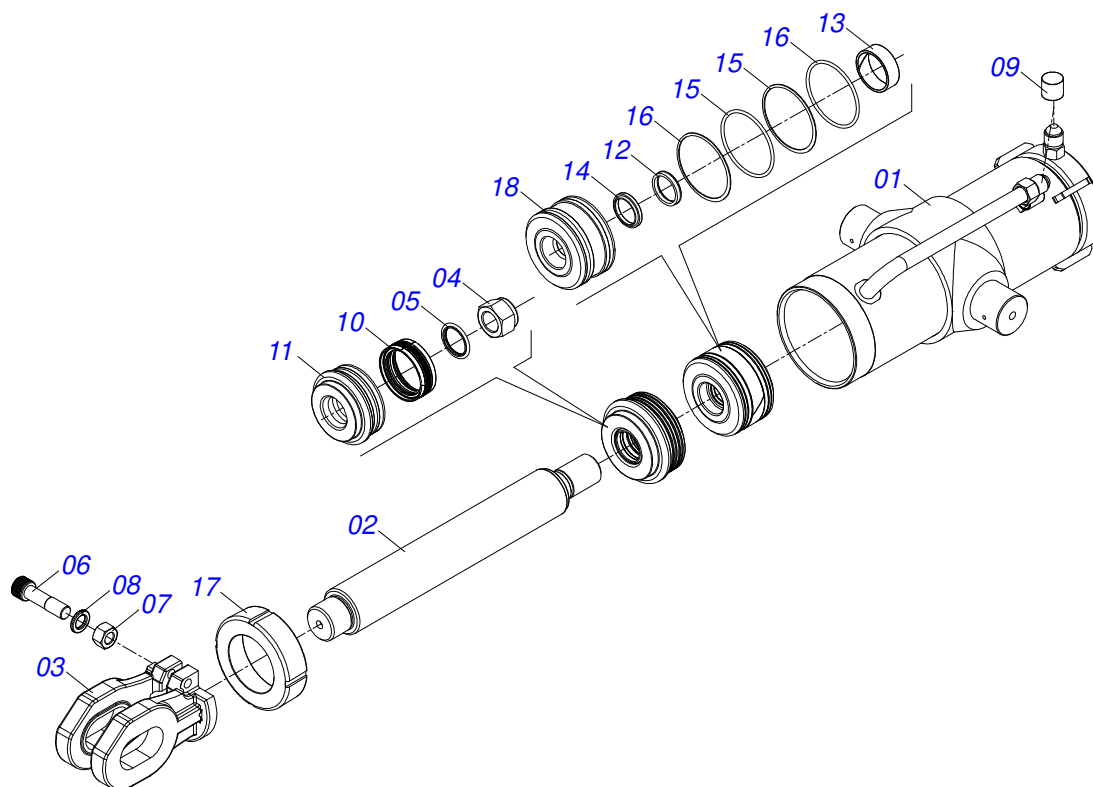


Item	Code	Description	See page	QT
01	0521066557	CYLINDER CASE 101,60 X 352		01
02	0581010680	TURNBUCKLE 50,80 X 386		01
03	0571015629	CILINDER SPINDLE FORK		01
04	0503010817	1.1/4" SELF LOCKING NUT		01
05	0503010345	2-218 N 3006-9B O'RING		01
06	0503011094	3/8" X 2" BOLT		01
07	0503010026	3/8" NUT		01
08	0503010025	3/8" SPRING WASHER		01
09	0503030385	CYLINDER PLUG N-002		02
10	0503015633	SELEMASTER SEALING		01
11	0581010678	50,80 X 101 RING SUPPORT		01
12	0503015636	SCRAPER SEAL		01
13	0503018025	RING GUIDE		01
14	0503018026	1870-2000-375 B GASKET		01
15	0503010338	2-342 N 3006-9B O'RING		02
16	0503011061	8-342 BACK-UP RING		02
17	0502012822	101.60 END CAP		01
18	0502012820	50.80 X 101.60 PISTON		01
19	0511032511	ASSY CYLINDER REPAIR KIT 50.8X101.6		01

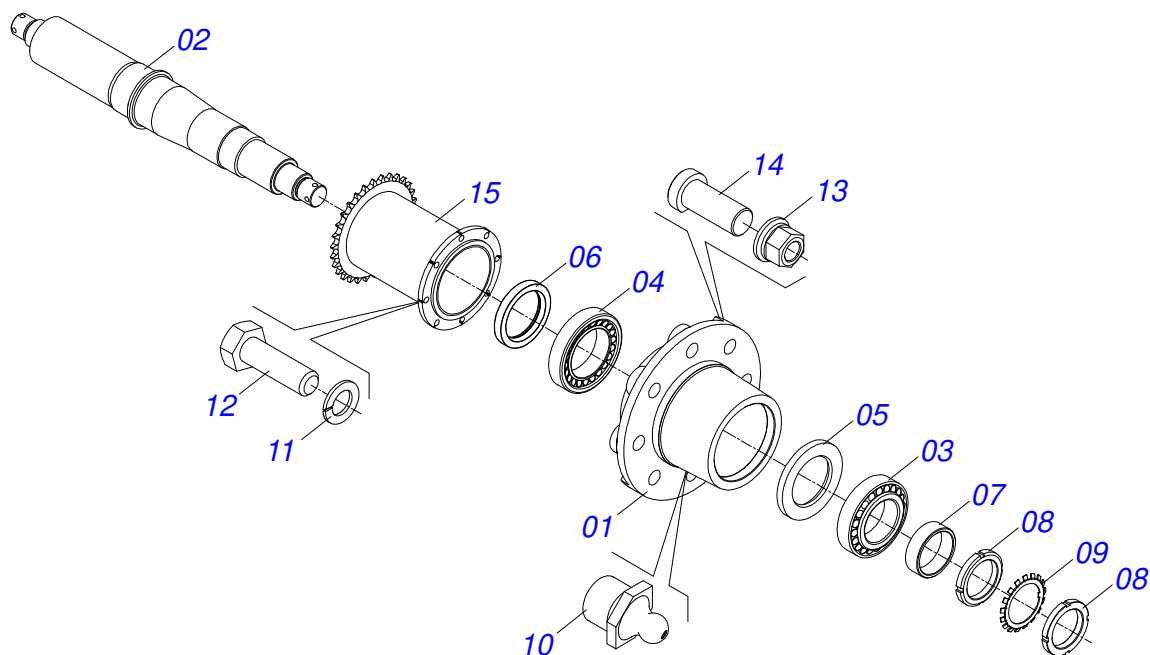


Item	Code	Description	See page	QT
01	0502040760	CARRYING WHEEL HUB		01
02	0571015180	WHEEL AXLE		01
03	0503010007	3982/3920 ROLLER BEARING		01
04	0503010059	33287/33462 ROLLER BEARING		01
05	0503010009	RETAINER 00573-B		01
06	0503010086	SEAL 0009B-B		01
07	0551014473	GLOVE		01
08	0503012702	KM-12 NUT		02
09	0503012703	LOCK WASHER		01
10	0503010002	1800 GREASE FITTING		01
11	0503011444	SPRING WASHER		04
12	0503010363	5/16" X 1" BOLT		04
13	0503014048	22 X 1.5 HEX NUT		08
14	0503014050	22 X 1.5 BOLT		08
15	0511068415	PFFP-3770 SEAL GUIDE		01

TRANSMISSION OF LARGER CENTRAL EXCHANGE

0511054499

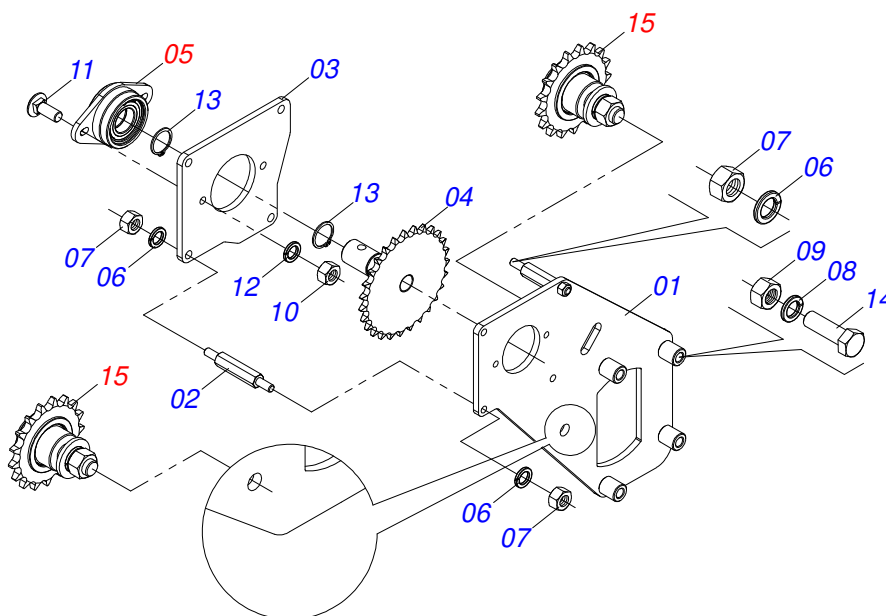


Item	Code	Description	See page	QT
01	0521064557	SUPPORT SET TRANSMISSION WHEEL SIDE		01
02	0571015141	FIXER CENTRAL TRANSMISSION		04
03	0571015151	SUPPORT BEARING		01
04	0521061795	27Z GEAR		01
05	0501053654	DOUBLE BEARING TRANSMISSION SEED 3/4	105	01
06	0503010025	3/8" SPRING WASHER		08
07	0503010026	3/8" NUT		08
08	0503010019	1/2" SPRING WASHER		03
09	0503010060	1/2" NUT		03
10	0503010337	5/16" NUT		02
11	0503011953	5/16" X 1" BOLT		02
12	0503010179	5/16" ZN SPRING WASHER		02
13	0503010707	501030 CLAMPING RING (FOR AXLE)		02
14	0503010741	1/2" X 2-3/4" BOLT		03
15	0511054461	STRETCHER TOP TRANSMISSION SWIRLED	28	02

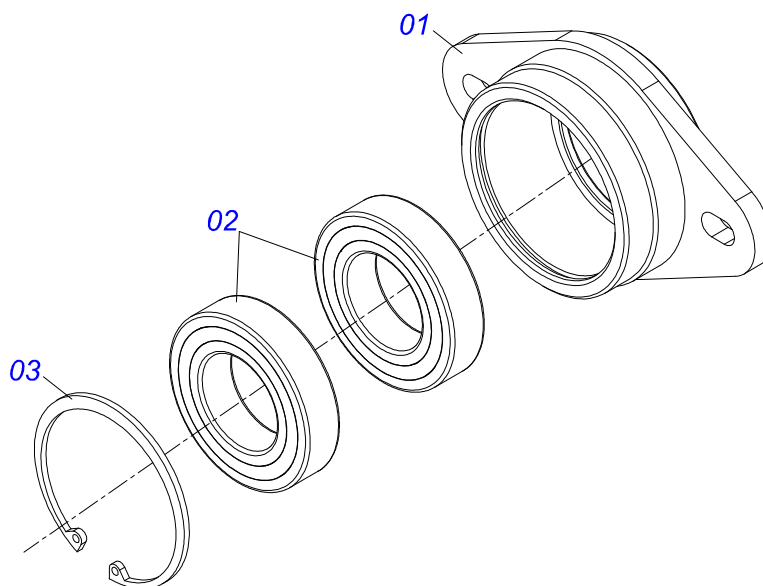

Item	Code	Description	See page	QT
01	0502012031	HOUSING BEARING		01
02	0503012861	6006 2RS BALL BEARING		02
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01

ASSY CENTRAL FERTILIZER EXCHANGE

0521057222

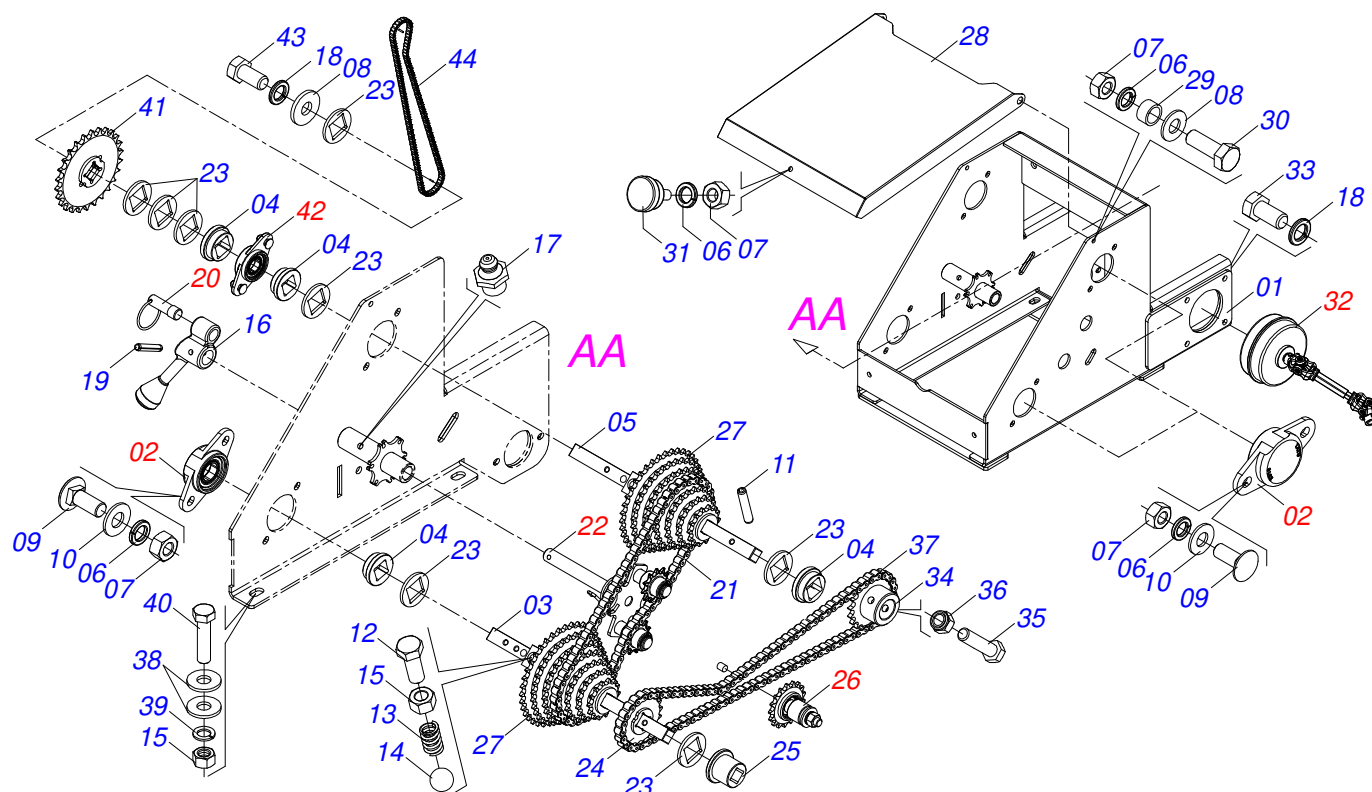


Item	Code	Description	See page	QT
01	0521064562	CENTRAL GEAR BOX SUPPORT		01
02	0501056271	BEARING CLOSED	33	03
03	0571015170	CENTRAL GEAR BOX DRIVER AXLE		01
04	0503030303	SUPPORT WASHER		04
05	0591011682	CENTRAL EXCHANGE MOVED AXIS		01
06	0503010179	5/16" ZN SPRING WASHER		09
07	0503010337	5/16" NUT		09
08	0501010984	FLAT WASHER		03
09	0503011953	5/16" X 1" BOLT		06
10	0501010694	8.5 X 18 X 1.5 FLAT WASHER		06
11	0503010292	0.2" X 1.6" SPRING PIN		04
12	0503010395	1/2" X 1-1/4" BOLT		02
13	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
14	0503012389	1/2 BALL		02
15	0503010060	1/2" NUT		06
16	0502011758	REAR TENSIONER LEVER		01
17	0503010002	1800 GREASE FITTING		01
18	0503010025	3/8" SPRING WASHER		05
19	0503010683	0.2" X 1.2" SPRING PIN		01
20	0501048790	AXLE WITH LINK ASSY	35	01
21	0503012204	40-1 CHAIN X 82 LINK + RED		01
22	0501052778	CHAIN TENSIONER ASSY	149	01
23	0521018630	1.4" X SQUARE 0.8" WASHER		08
24	0511065209	20Z GEAR		01
25	0503030275	AGRICULTURAL BEARING		01
26	0511054489	LEFT TENSIONER CENTRAL EXCHANGE	107	01
27	0511060396	DRIVE/DRIVEN AXLE CONE		02
28	0571015172	CENTRAL GEAR BOX COVER		01
29	0551018585	CENTRAL GEAR BOX COVER SLEEVE		02
30	0503010371	5/16" X 1" BOLT		02
31	0503010386	CABLE		01


Item	Code	Description	See page	QT
32	0511056179	CLUTCH WITH CARDAN CENTRAL	108	01
33	0503010172	M10 X 1,5 X 25 BOLT		04
34	0511069512	20Z GEAR		01
35	0503011268	3/8" X 2-1/2" BOLT		01
36	0503013357	3/8" SELF-ADJUSTING NUT		01
37	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
38	0511017302	FLAT WASHER		08
39	0503010019	1/2" SPRING WASHER		04
40	0503011082	C1/2" X 1.3/4" SCREW		04
41	0511067501	26Z GEAR		01
42	0501056443	BEARING ASSY GEAR BOX	109	01
43	0503010256	3/8" X 3/4" BOLT		01
44	0503013215	40-1 CHAIN X 89 LINK + MENDING		01

LEFT TENSIONER CENTRAL EXCHANGE


0511054489

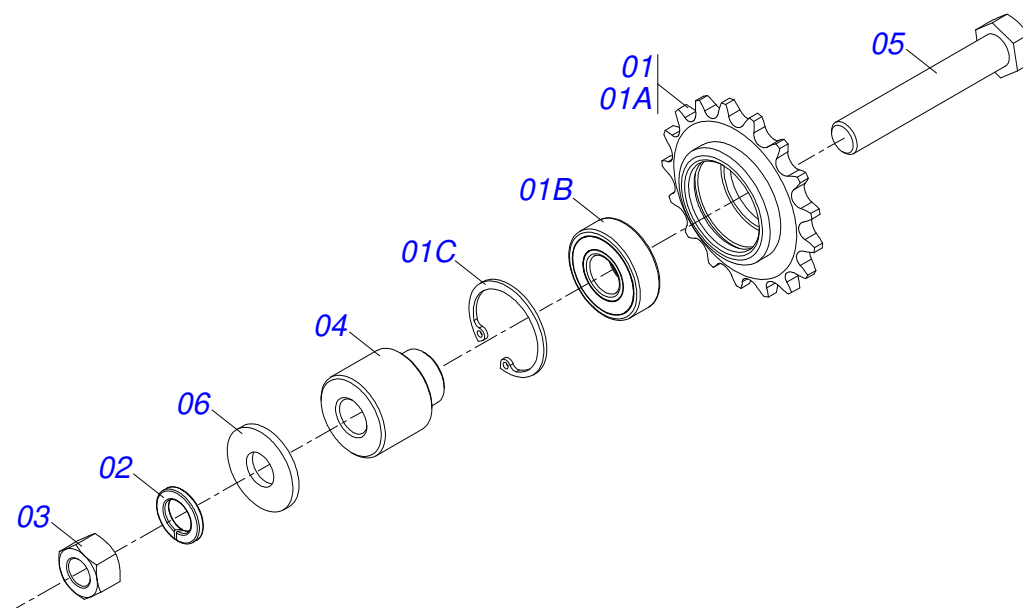


Item	Code	Description	See page	QT
01	0501056573	17Z GEAR ASSY		01
01A	0502012367	17Z X P 1/2" GEAR INTERM		01
01B	0503012882	BEARING		01
01C	0503011945	503050 CLAMPING RING (FOR AXLE)		01
02	0503010019	1/2" SPRING WASHER		01
03	0503010060	1/2" NUT		01
04	0571015167	SLEEVE NYLON Ø21 X Ø31,75 X 36,50		01
05	0503010479	BOLT		01
06	0511017302	FLAT WASHER		01

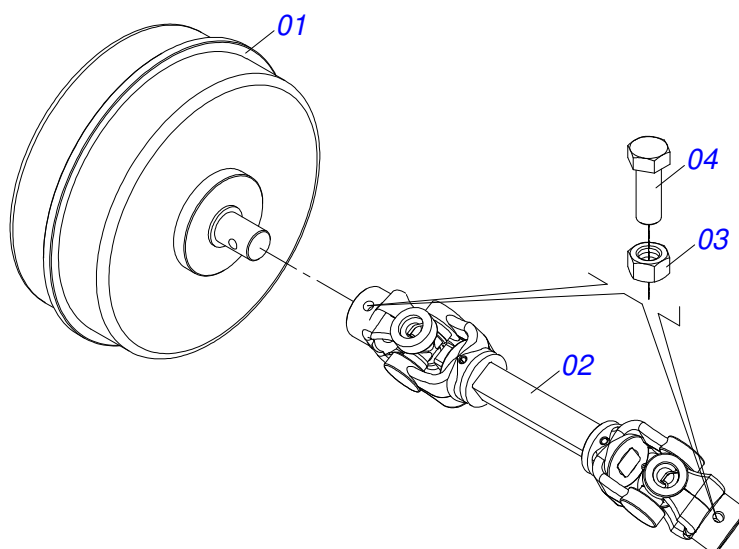


Item	Code	Description	See page	QT
01	0503062231	CLUTCH		01
02	0503062272	CARDAN WITHOUT PROTECTION		01
03	0503013357	3/8" SELF-ADJUSTING NUT		02
04	0503011268	3/8" X 2-1/2" BOLT		02

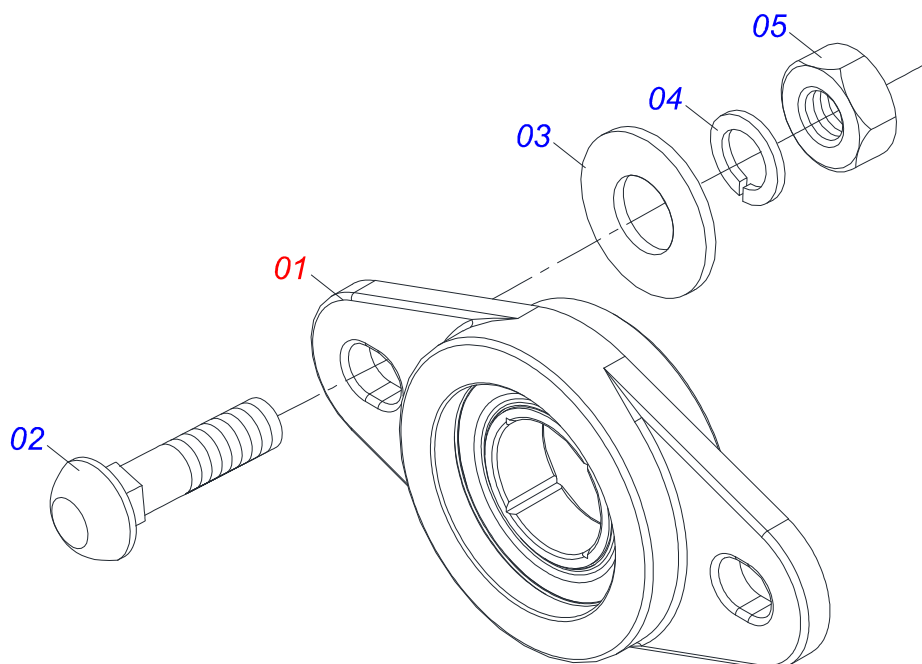


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	32	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010179	5/16" ZN SPRING WASHER		02
05	0503010337	5/16" NUT		02

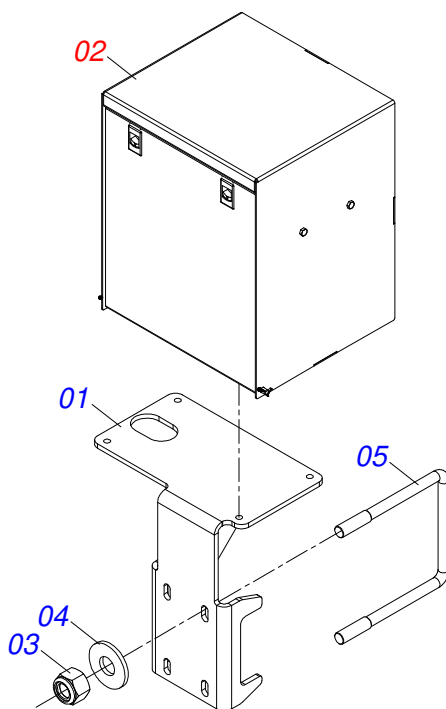


Item	Code	Description	See page	QT
01	0531060360	BOX SUPPORT		01
02	0521056857	ECU APT / TVT BOX WITH EXCHANGE	111	01
03	0503010589	1/2" UNC SELF ADJUSTING NUT		04
04	0511017302	FLAT WASHER		04
05	0561016468	FASTENER		02

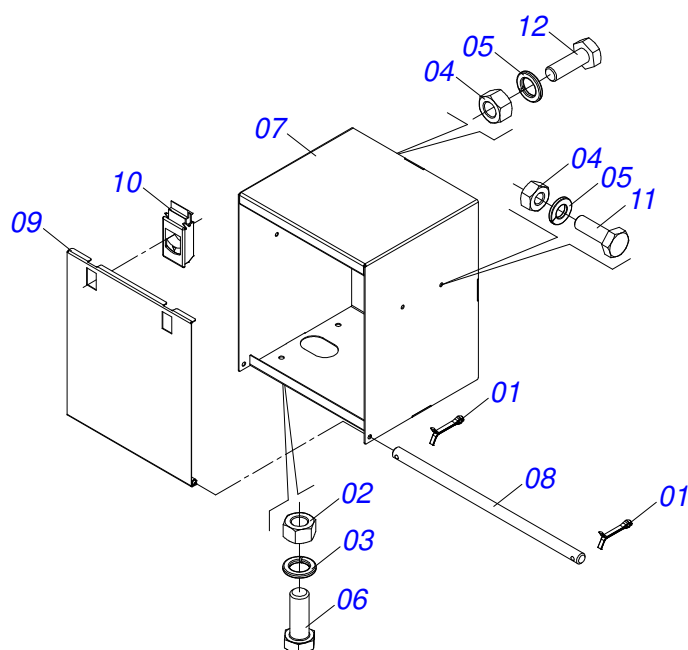


Item	Code	Description	See page	QT
01	0503010257	1/8" X 1" COTTERPIN		02
02	0503010026	3/8" NUT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010144	1/4" NUT		08
05	0503010143	1/4" SPRING WASHER		08
06	0503010237	3/8" X 1" BOLT		04
07	0521068017	BOX BODY APT/TVT		01
08	0571017090	ROD BOX		01
09	0521068016	BOX COVER		01
10	0503018171	FAST LOCK ASSY		02
11	0503010461	1/4" X 1" BOLT		04
12	0503010282	1/4" X 3/4" BOLT		04

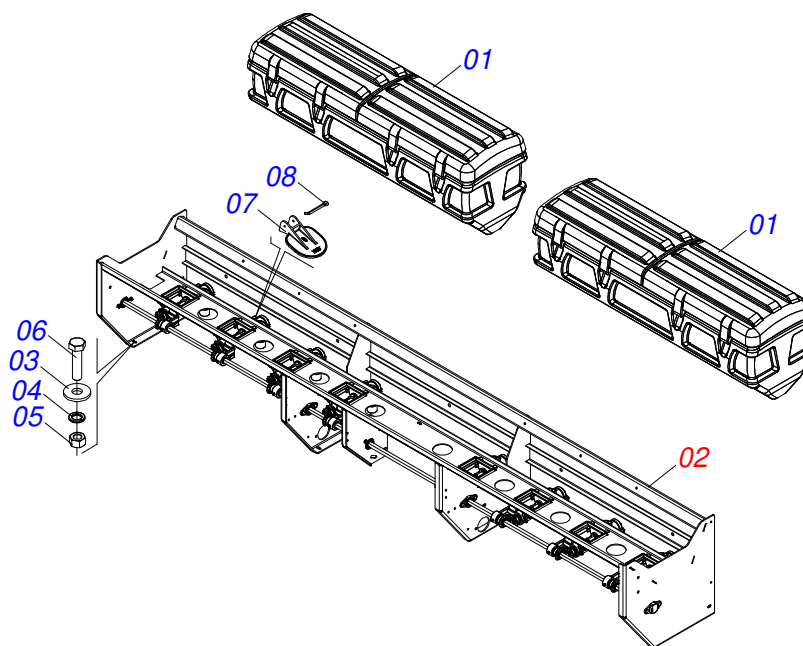


Item	Code	Description	See page	QT
01	0503062362	SILO FERTILIZER 04 MOUTH		02
02	0521057227	CENTRAL SUPPORT FERTILIZER 8 MOUTH 3790 114 MOUNTED		01
03	0511017302	FLAT WASHER		12
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2" NUT		12
06	0503010920	1/2" X 1.1/2" BOLT		12
07	0503034396	FERTILIZER SIDE COVER		08
08	0503010362	1/8" X 1.1/4" COTTERPIN		08

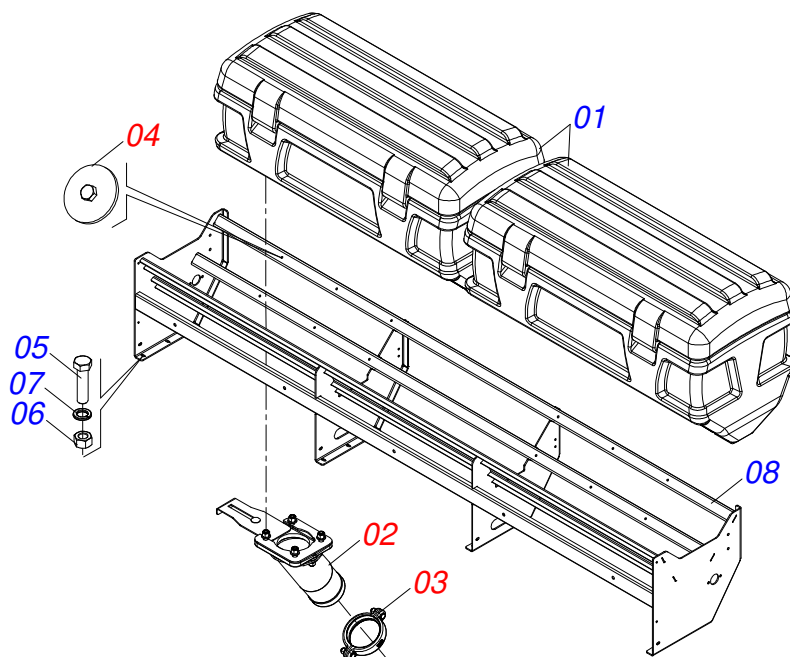


Item	Code	Description	See page	QT
01	0503062961	FERTILIZER BEAM ASSY		02
02	0521055365	SEED CONDUCTOR	45	08
03	0521050525	FIXER FERTILIZER CONDUCTOR	46	08
04	0521051407	FIXER SILO FERTILIZER	47	12
05	0503010920	1/2" X 1.1/2" BOLT		12
06	0503010060	1/2" NUT		12
07	0503010019	1/2" SPRING WASHER		12
08	0531060506	CENTRAL SEED SUPPORT 3790		01

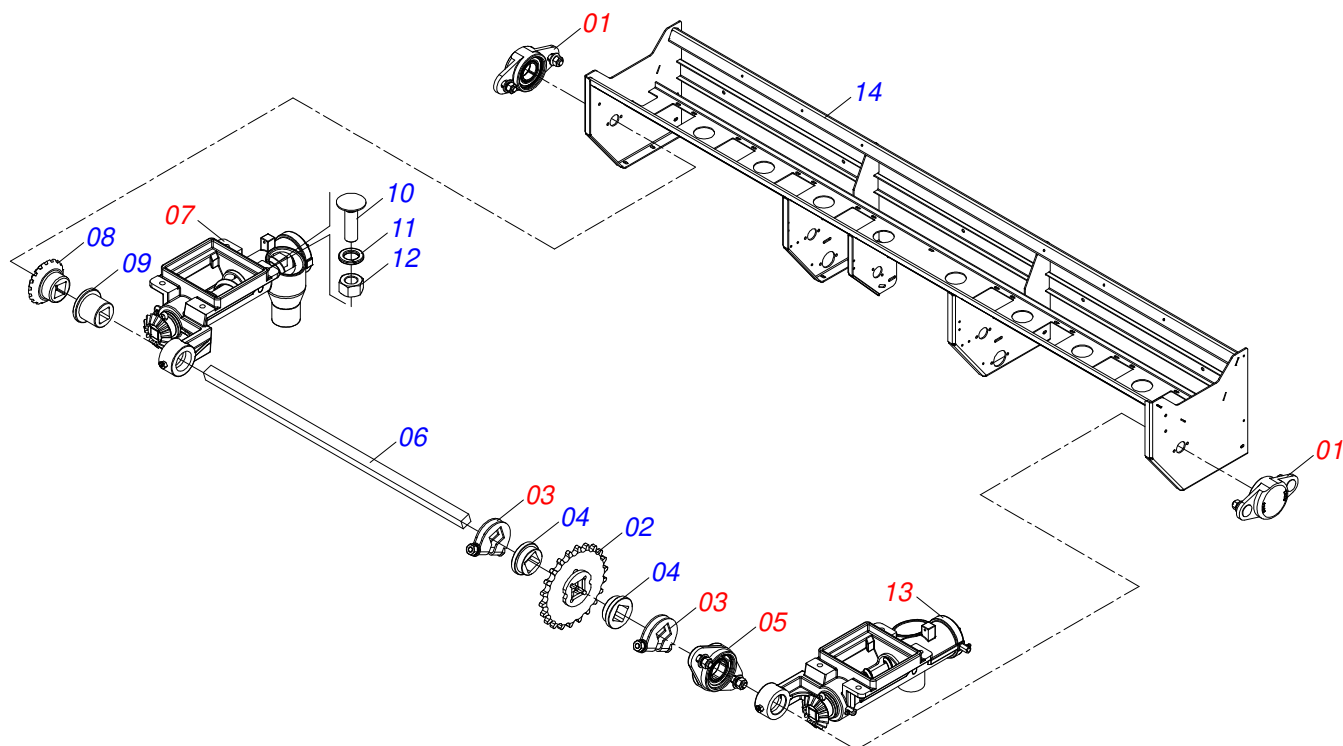

Item	Code	Description	See page	QT
01	0521054313	CLOSED BEARING	41	02
02	0511061759	22Z P12,70 FQ 3/4" GEAR		01
03	0511059491	AXLE HOLDER	42	04
04	0503030303	SUPPORT WASHER		04
05	0521054282	BEARING	43	03
06	0591012206	SQUARE SHAFT 3/4 X 3806		01
07	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	115	04
08	1902010685	18Z CONICAL GEAR		08
09	0503030275	AGRICULTURAL BEARING		08
10	0501010942	3/8" X 1-1/4" BOLT		32
11	0503010025	3/8" SPRING WASHER		32
12	0503010026	3/8" NUT		32
13	0511051558	DISTRIBUTOR FERTILIZER SIDE LEFT STEP 2	44	04
14	0531060508	CENTRAL SUPPORT FERTILIZER 08 MOUTH 3790		01

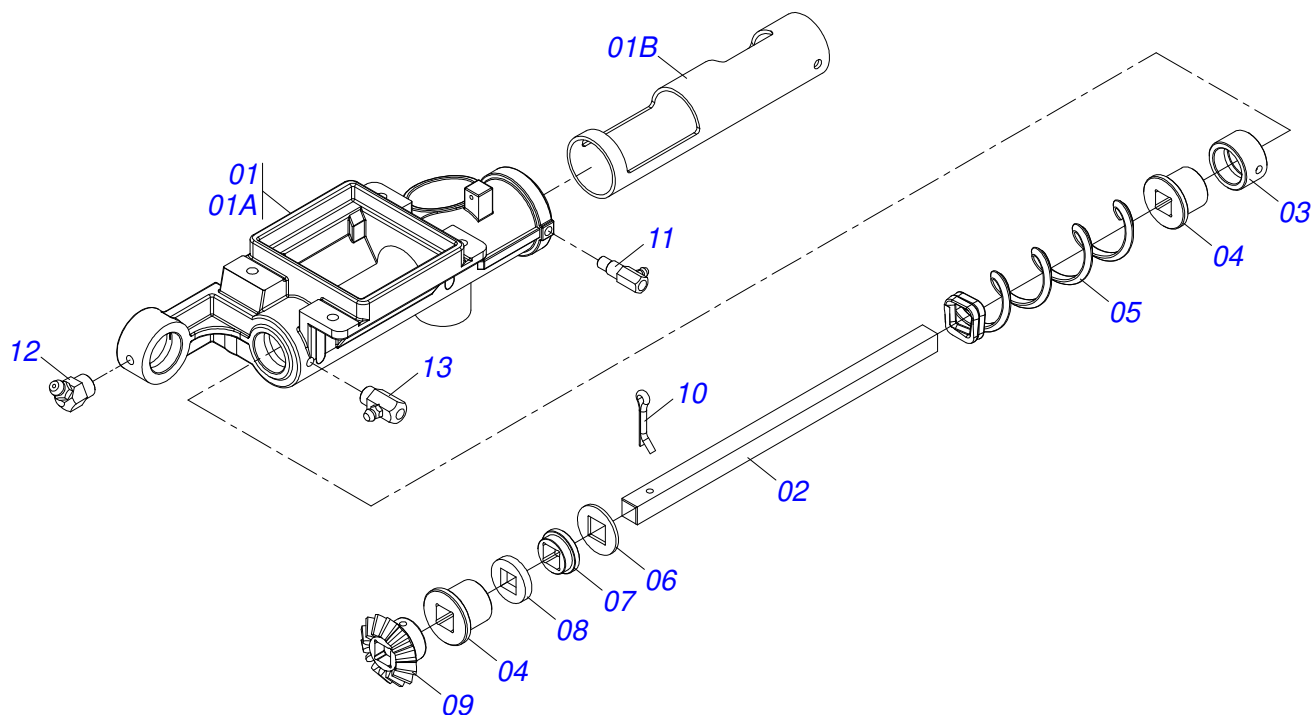


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICAL CONDUTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

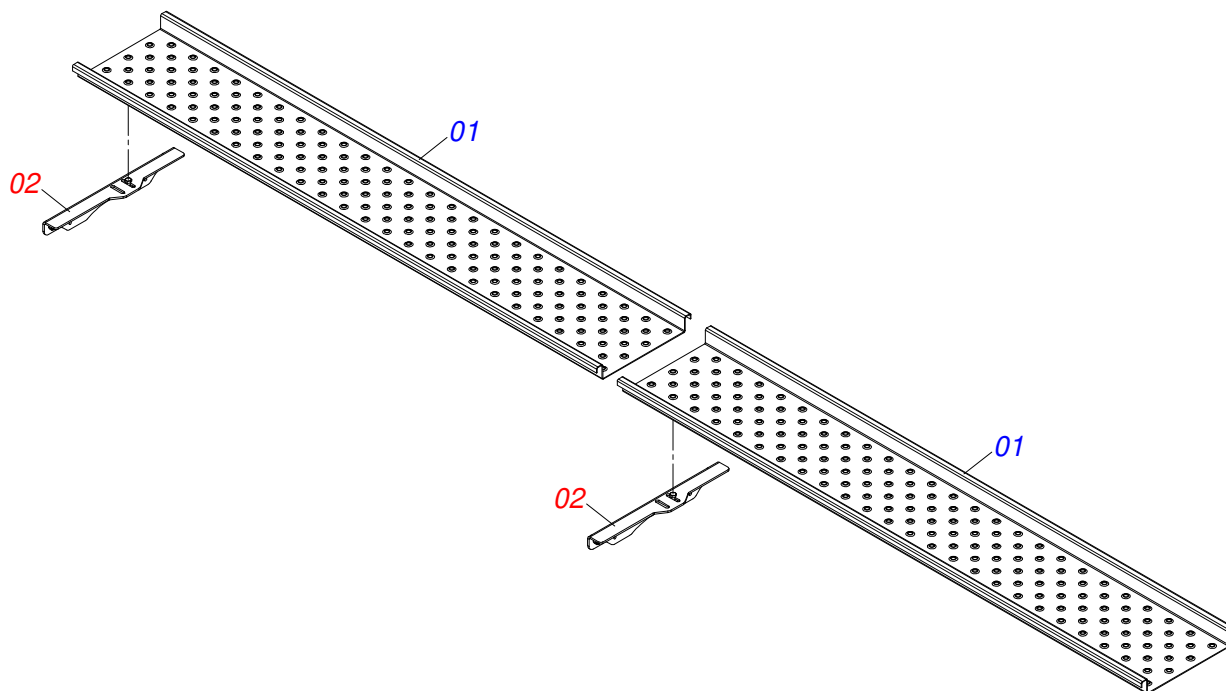

Item	Code	Description	See page	QT
01	0581019588	PLATFORM 2380		02
02	0521054279	PLATFORM FIXER	51	04

ASSY LEFT ARTICULATION ARM


0511054515

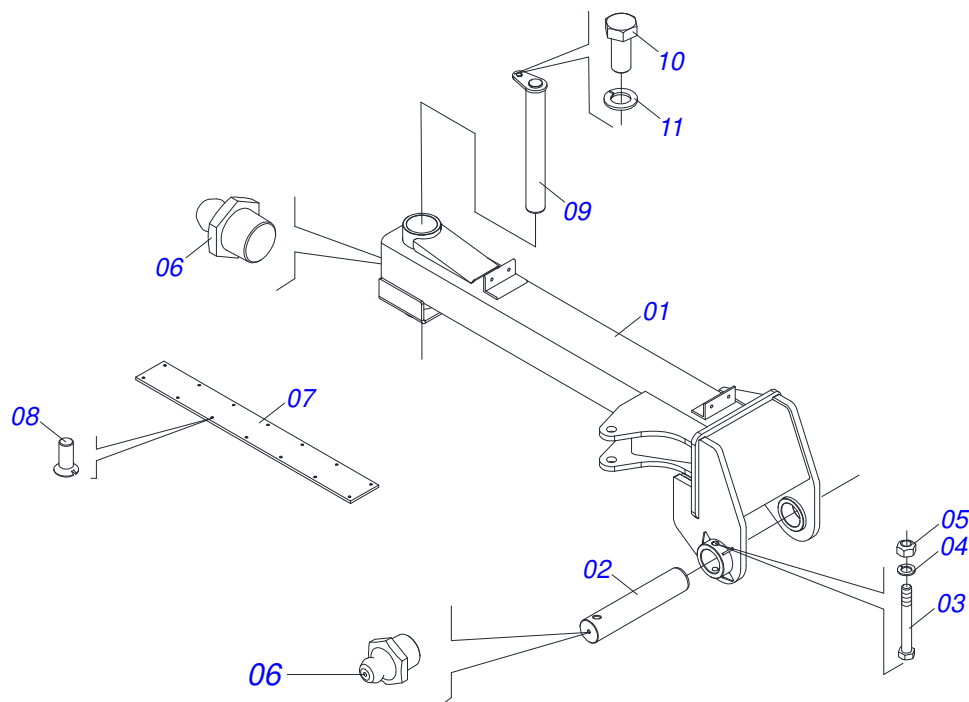

Item	Code	Description	See page	QT
01	0521064536	LH PIVOT ARM	01	
02	0561015688	PIVOT SMALLE AXLE	01	
03	0501010452	5/8" X 5" BOLT	01	
04	0503010027	5/8" SPRING WASHER	01	
05	0503010013	5/8" NUT	01	
06	0503010002	1800 GREASE FITTING	02	
07	0503032042	SHEET POLYETHYLENE	01	
08	0503010814	5/16 BOLT	14	
09	0521063779	PIVOT SHAFT	01	
10	0503015322	BOLT 7/8	01	
11	0503010408	7/8" SPRING WASHER	01	

ASSY RIGHT ARTICULATION ARM


0511054516

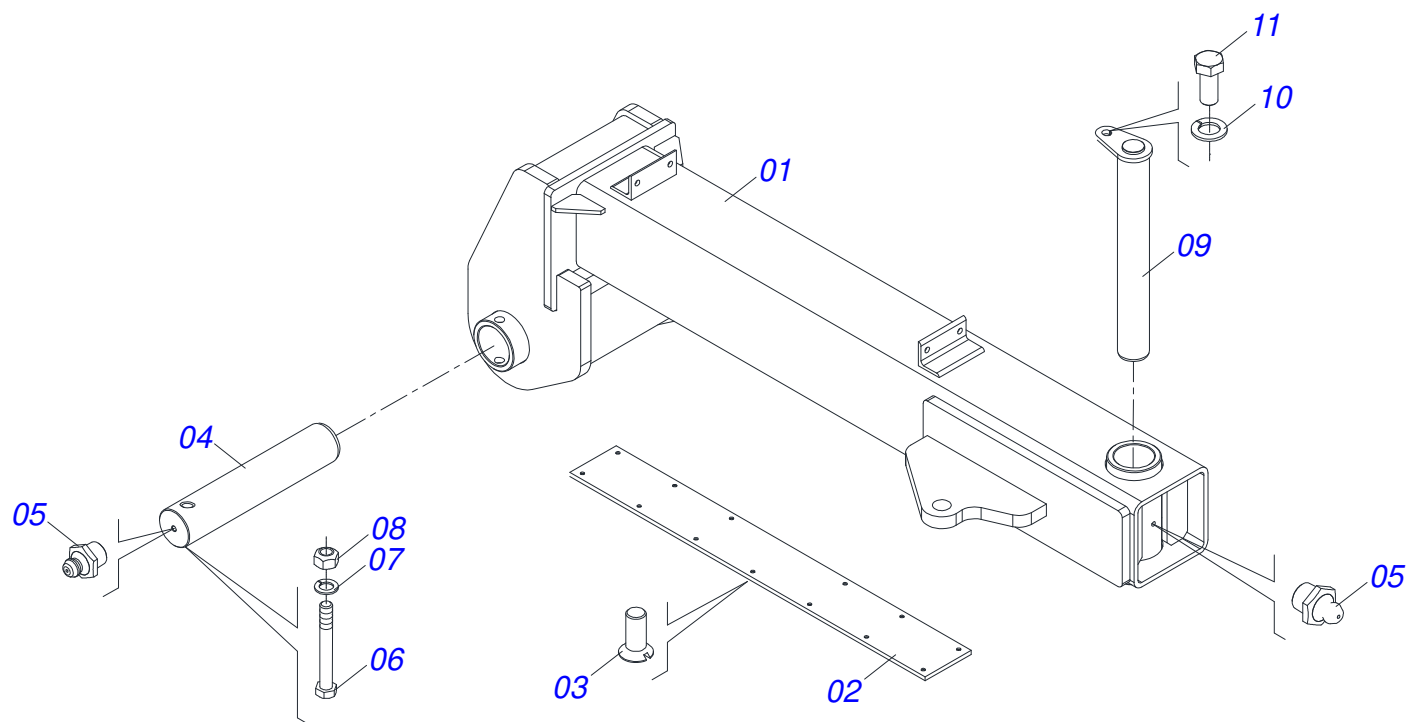


Item	Code	Description	See page	QT
01	0521064551	RH PIVOT ARM		01
02	0503032042	SHEET POLYETHYLENE		01
03	0503010814	5/16 BOLT		14
04	0561015688	PIVOT SMALLE AXLE		01
05	0503010002	1800 GREASE FITTING		02
06	0501010452	5/8" X 5" BOLT		01
07	0503010027	5/8" SPRING WASHER		01
08	0503010013	5/8" NUT		01
09	0521063779	PIVOT SHAFT		01
10	0503010408	7/8" SPRING WASHER		01
11	0503015322	BOLT 7/8		01

LOWER ARTICULATED ARM CYLINDER ASSY


0521055949

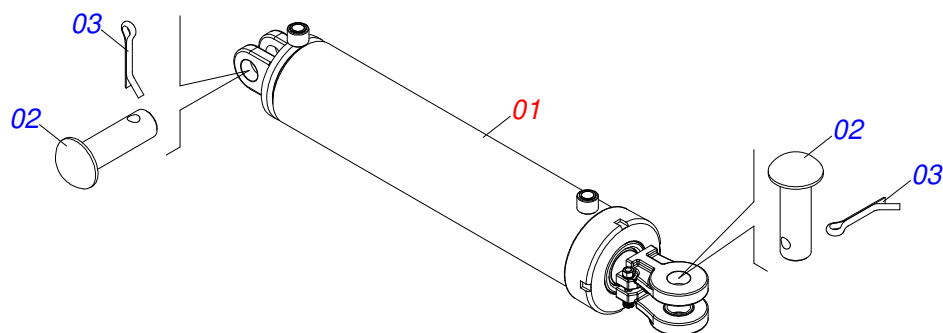


Item	Code	Description	See page	QT
01	0511058226	HYDRAULIC CYLINDER 50,80 X 114,30 X 810 X 1300	120	02
02	0521012538	1.2" X 3.5" COUPLING SHAFT		04
03	0503010523	1/4" X 2" COTTERPIN		02

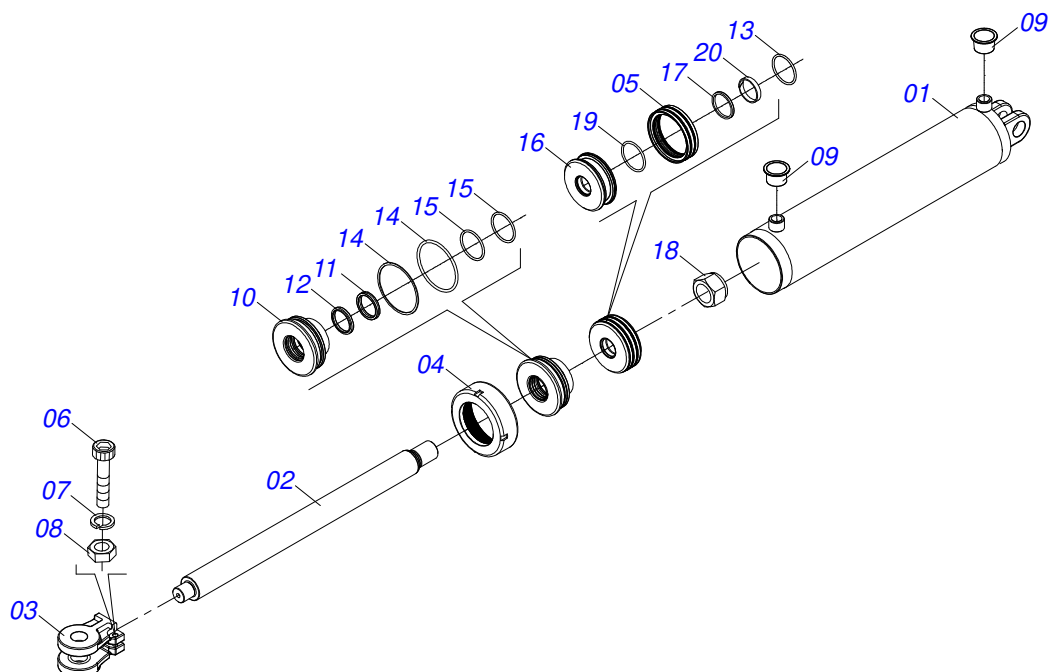

Item	Code	Description	See page	QT
01	0521066553	SHIRT 114.30 X 679 USAP		01
02	0581010657	ROD 50.80 X 695 USAP		01
03	0502040747	32.54 CLEVIS CLAMP		01
04	0502011222	0.56" END CAP		01
05	0503010952	W2-2250-500 RING		01
06	0503011094	3/8" X 2" BOLT		01
07	0503010025	3/8" SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503030384	CON PLUG N-001		02
10	0581010659	2" X 4" RING SUPPORT		01
11	0503010039	D-2000 SCRAPER RING		01
12	0503018026	1870-2000-375 B GASKET		01
13	0503018024	RING BS		01
14	0503011892	O' RING, 2-346 N 3006-9B		02
15	0503011893	BACK-UP RING, 8-346		02
16	0581010658	EMBOLO 50,80 X 114,30 USAP		01
17	0503018164	GAXETA 2500-4000-375 B (1150 AGEL)		02
18	0503010290	SELF ADJUSTING 1.1/2" UNF NUT		01
19	0503010141	2-226 N 3006-9B O'RING		01
20	0503018165	GUIDE RING W2-4500-590		01
21	0511032868	ASSY CYLINDER REPAIR KIT 50,8 X 114,3 (0511058401)		01

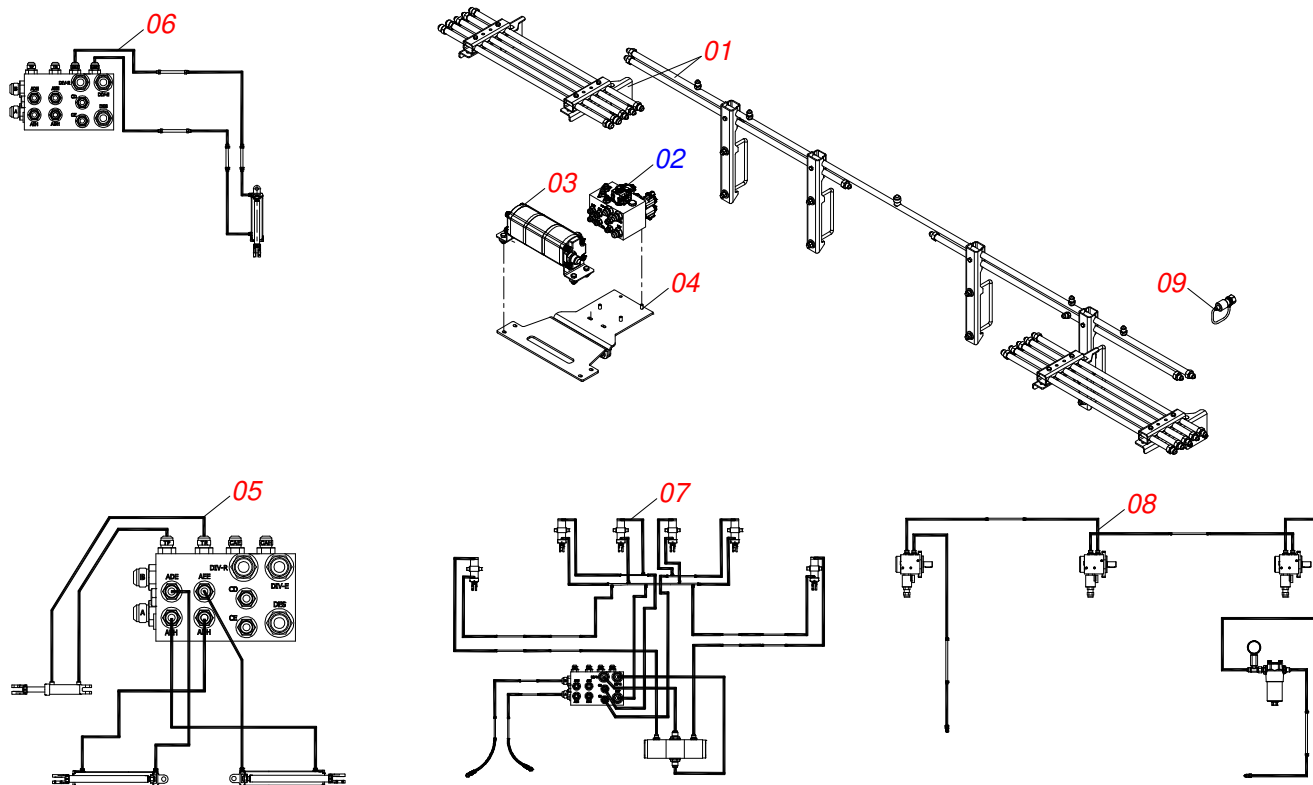


Item	Code	Description	See page	QT
01	0531050614	APT CENTRAL DUCT ASSY	122	01
02	0503063242	COMMAND BLOCK		01
03	0531050586	CASAPPA TRIPLE FLOW DIVIDER VALVE 0201001Z WITH NIPLES	124	01
04	0531050058	SUPPORT ASSY BLOCK/VALVES	125	01
05	0531050351	ARTICULATED FERTILIZER / SEED HOSE ASSY	126	01
06	0521055274	HEAD HOSE ASSY	127	01
07	0531050617	LIFT HOSE SET FERTILIZER / SEED 1 SIDE WHEEL	128	01
08	0531051058	SET FERTILIZER AND SEED HOSE	129	01
09	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	130	04

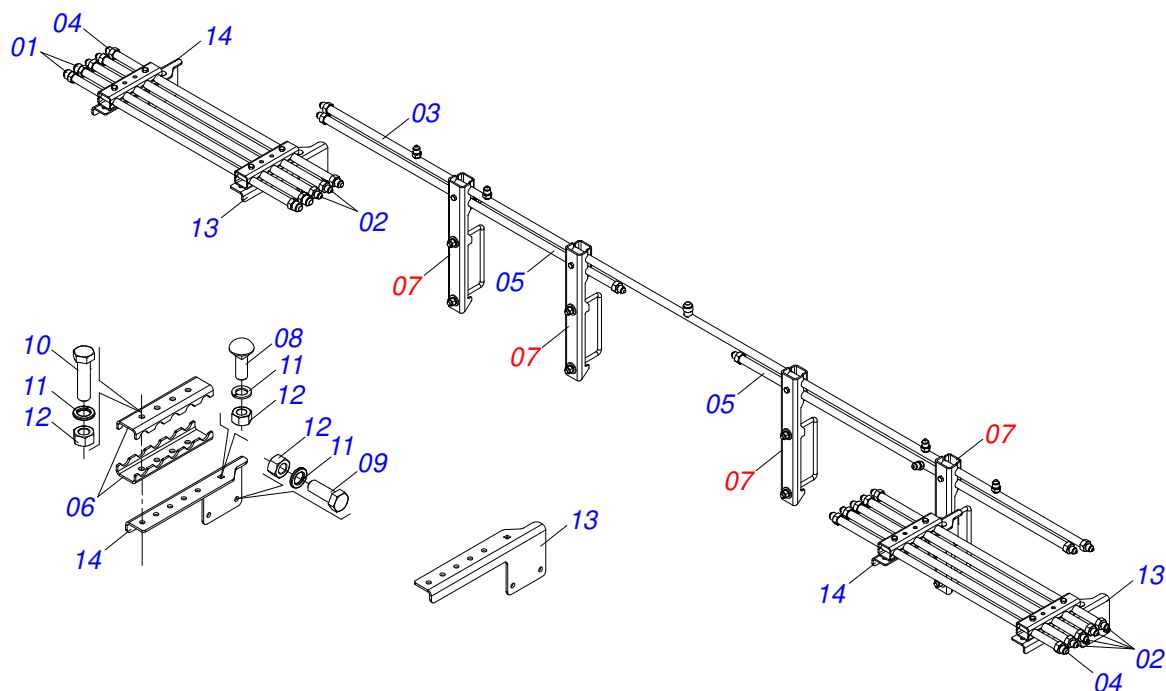


Item	Code	Description	See page	QT
01	0521069338	OIL TUBE		02
02	0521069341	OIL DUCT R.3/4 X 1050		06
03	0521069009	OIL DUCT		01
04	0521069339	OIL TUBE		02
05	0521069275	OIL TUBE		02
06	0581018415	PROTECTION BODY		08
07	0521053537	CENTRAL REAR DUCT SUPPORT	123	04
08	0503013029	3/8" X 3/4" BOLT		04
09	0503010237	3/8" X 1" BOLT		08
10	0503011268	3/8" X 2-1/2" BOLT		08
11	0503010025	3/8" SPRING WASHER		20
12	0503010026	3/8" NUT		20
13	0591010127	SUPPORT LEFT DISTRIBUTOR		02
14	0581014867	SIDE DUTY SUPPORT		02

CENTRAL REAR DUCT SUPPORT


0521053537

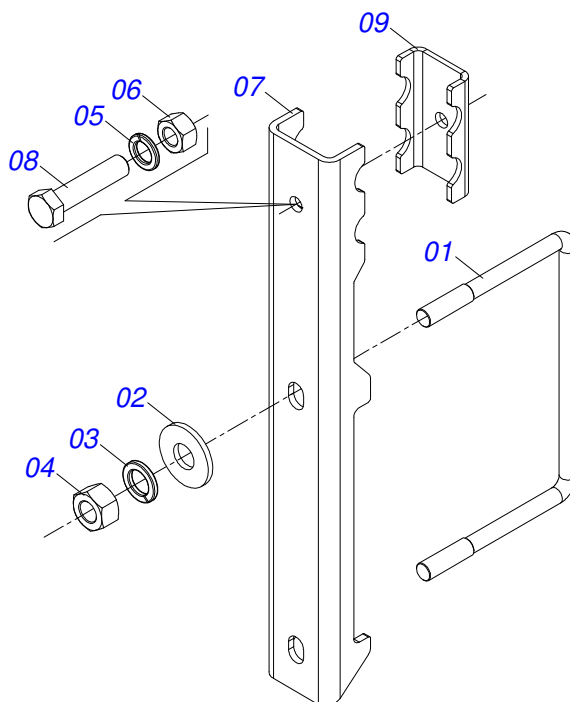


Item	Code	Description	See page	QT
01	0571019615	FITTING 1/2 UNC 130 X 198 ZN		01
02	0511017302	FLAT WASHER		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2" NUT		02
05	0503010025	3/8" SPRING WASHER		01
06	0503010026	3/8" NUT		01
07	0581017885	SUPPORT BODY		01
08	0503011141	3/8" X 2-3/4" BOLT		01
09	0581018407	BODY FASTENER 2 DUCTS		01

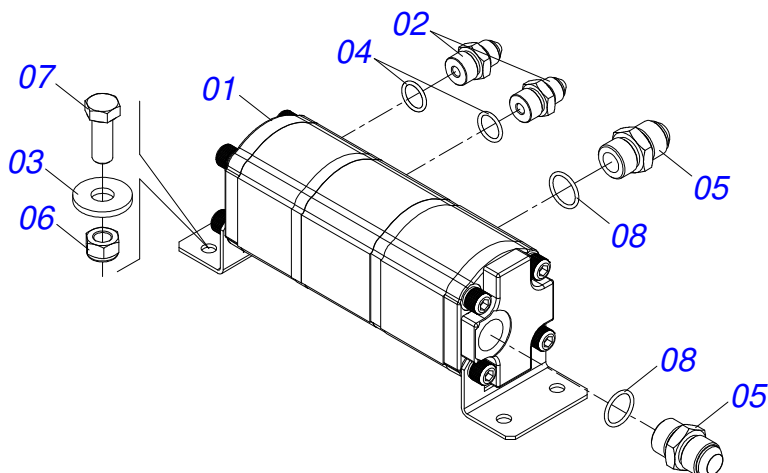

Item	Code	Description	See page	QT
01	0503019995	TRIPLE FLOW DIVIDER VALVE		01
02	0501010589	R. 1.1/16UN SEXT 1.1/4 X 52 NIPPLE		02
03	0501010984	FLAT WASHER		04
04	0503010045	O'RING		02
05	0511010111	7/8" NIPPLE		02
06	0503013357	3/8" SELF-ADJUSTING NUT		04
07	0503010237	3/8" X 1" BOLT		04
08	0503011109	2-119 N 3006-9B O'RING		02

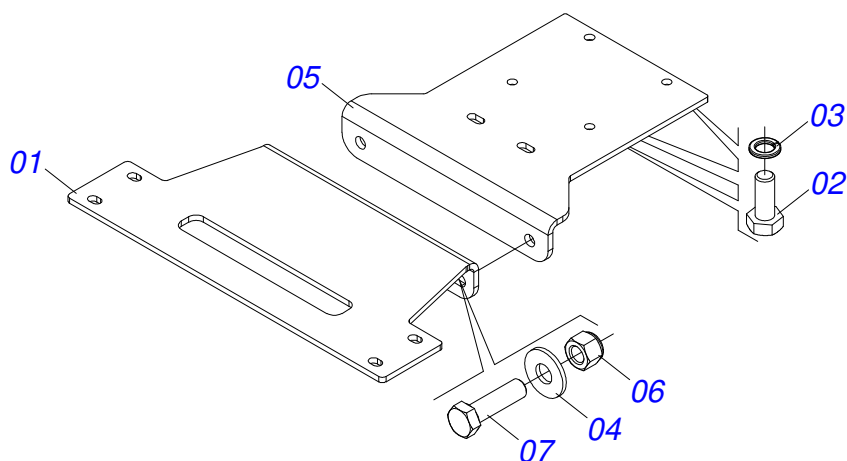


Item	Code	Description	See page	QT
01	0591016376	VALVE SUPPORT		01
02	0503010172	M10 X 1,5 X 25 BOLT		03
03	0503010025	3/8" SPRING WASHER		03
04	0511017302	FLAT WASHER		02
05	0591016360	BLOCK SUPPORT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		02
07	0503011082	C1/2" X 1.3/4" SCREW		02

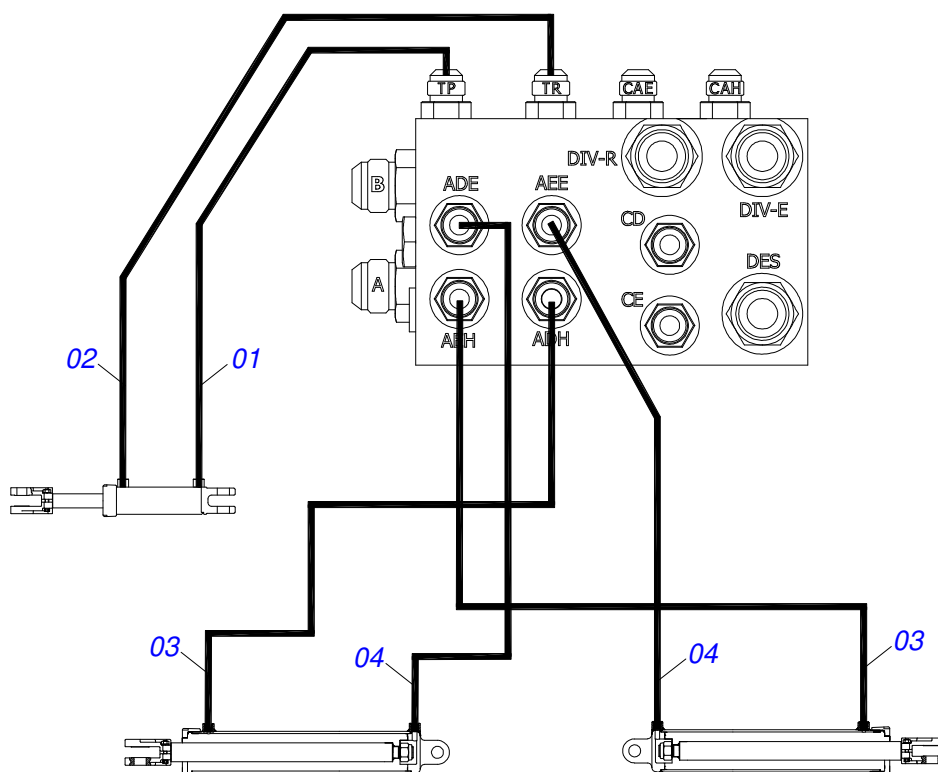


Item	Code	Description	See page	QT
01	0501081108	3/8 X 1400 TC-TC HOSE		01
02	0501080514	3/8 X 1700 TC-TC HOSE		01
03	0501080055	3/8 X 1000 TR-TC HOSE		02
04	0501080150	3/8 X 800 TR-TC HOSE		02

HEAD HOSE ASSY

0521055274

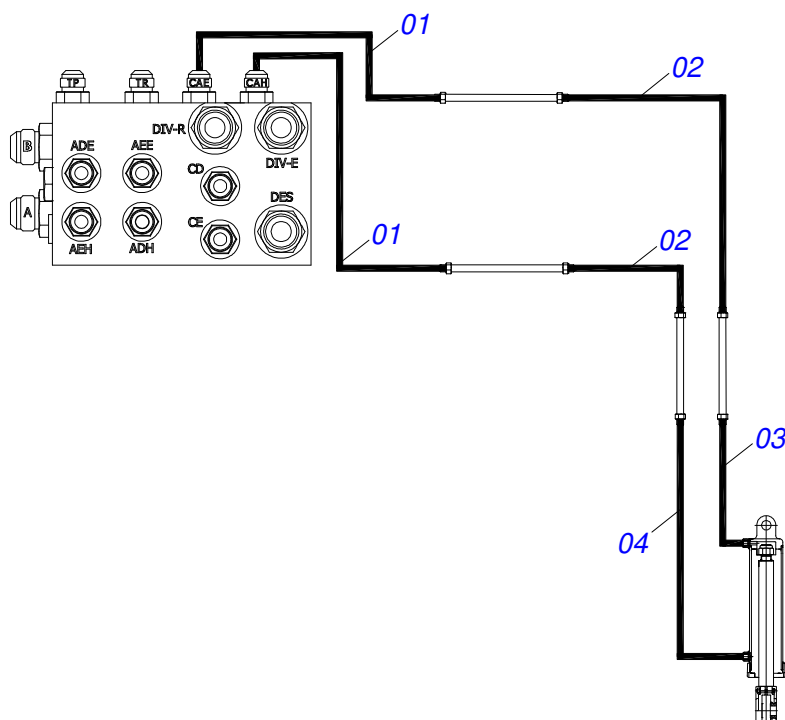


Item	Code	Description	See page	QT
01	0501080461	3/8 X 1800 TR-TC HOSE		02
02	0501080297	3/8 X 2800 TR-TR HOSE		02
03	0501080526	3/8 X 2900 TR-TC HOSE		01
04	0501080527	3/8 X 3300 TR-TC HOSE		01

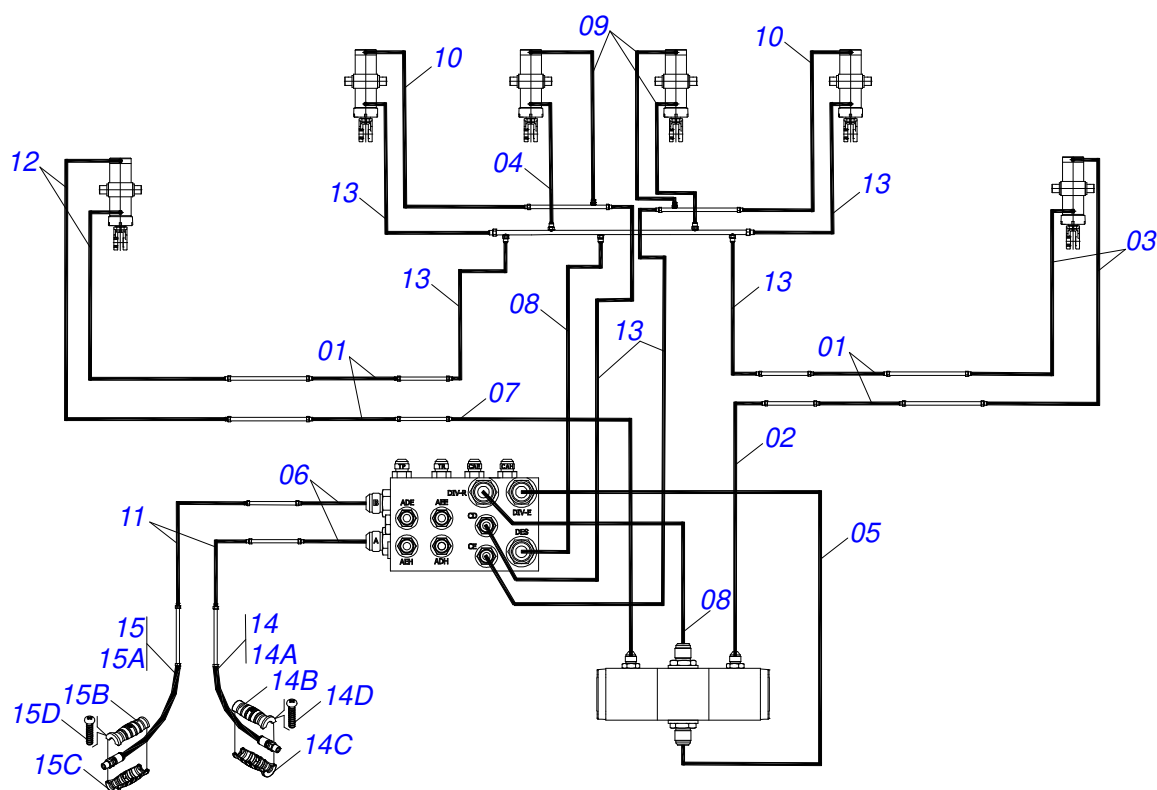


Item	Code	Description	See page	QT
01	0501080105	3/8 X 700 TR-TR HOSE	04	
02	0501080025	3/8 X 1400 TR-TC HOSE	01	
03	0501080599	3/8 X 650 TR-TC HOSE	02	
04	0501080065	3/8 X 1200 TC-TC HOSE	01	
05	0501081292	3/4 X 650 TR-TC HOSE	01	
06	0501080196	3/4 X 1400 TR-TR HOSE	02	
07	0501080714	3/8 X 1600 TR-TC HOSE	01	
08	0501080175	3/4 X 900 TR-TC HOSE	02	
09	0501080675	3/8 X 1000 TC-TC 180G HOSE	03	
10	0501080485	3/8 X 1100 TR-TC HOSE	02	
11	0501082204	3/4 X 2750 TR-TR HOSE	02	
12	0501081837	3/8 X 700 TR-TC HOSE	02	
13	0501081838	3/8 X 1000 TR-TC HOSE	06	
14	0521053712	3/4 X 5900 TR-TM BLACK/RED HOSE	01	
14A	0501082205	3/4 X 5900 TR-TM HOSE	01	
14B	0503034492	HYDRAULIC HOSE GRIP (BLACK)	01	
14C	0503034495	HYDRAULIC HOSE GRIP (RED)	01	
14D	0503018952	PLASTIC BOLT	06	
15	0521053707	3/4 X 5900 TR-TM BLACK/BLUE HOSE	01	
15A	0501082205	3/4 X 5900 TR-TM HOSE	01	
15B	0503034492	HYDRAULIC HOSE GRIP (BLACK)	01	
15C	0503034494	HYDRAULIC HOSE GRIP (BLUE)	01	
15D	0503018952	PLASTIC BOLT	06	

SET FERTILIZER AND SEED HOSE


0531051058

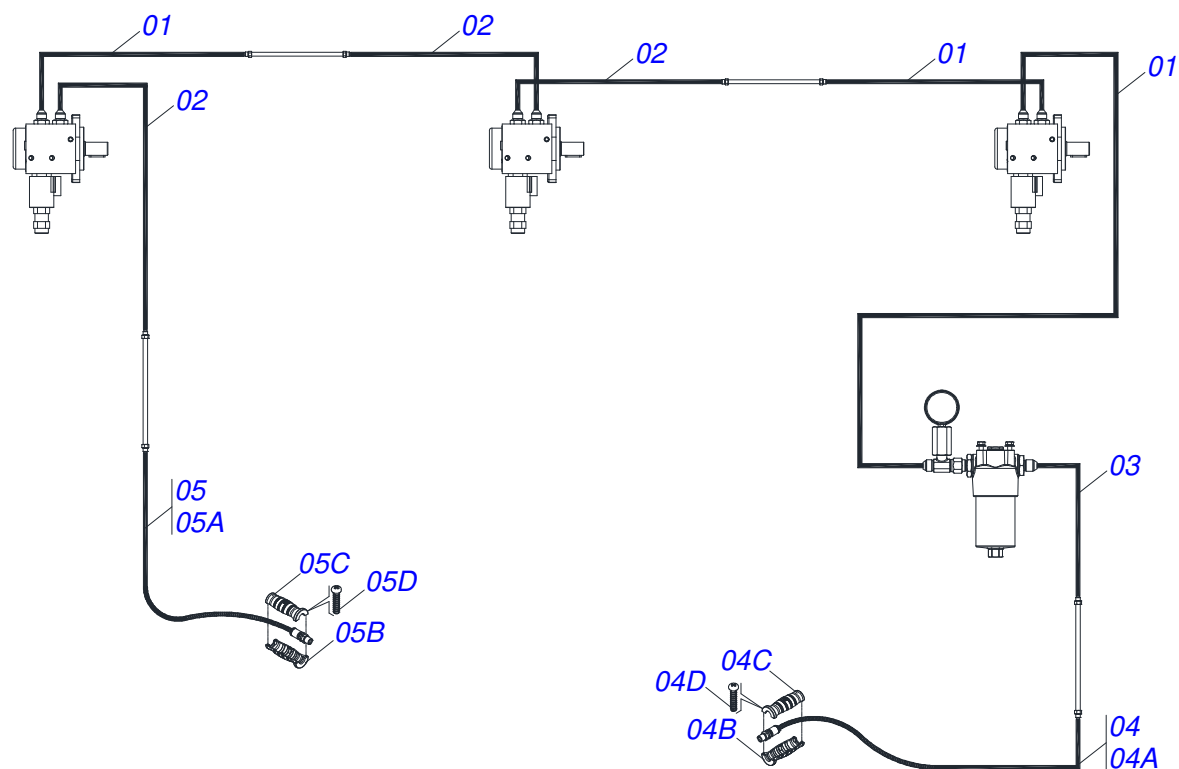


Item	Code	Description	See page	QT
01	0501081834	1/2 X 1500 TR-TC HOSE		03
02	0501081041	1/2 X 2400 TR-TC HOSE		03
03	0501080060	1/2 X 1600 TR-TC HOSE		01
04	0521052567	1/2 X 5900 TR-TM GRAY/RED HOSE		01
04A	0501081841	1/2 X 5900 TR-TM HOSE		01
04B	0503034489	HYDRAULIC HOSE GAUNTLET (GRAY)		01
04C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
04D	0503018952	PLASTIC BOLT		06
05	0521052566	1/2 X 5900 TR-TM GRAY/BLUE HOSE		01
05A	0501081841	1/2 X 5900 TR-TM HOSE		01
05B	0503034489	HYDRAULIC HOSE GAUNTLET (GRAY)		01
05C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
05D	0503018952	PLASTIC BOLT		06

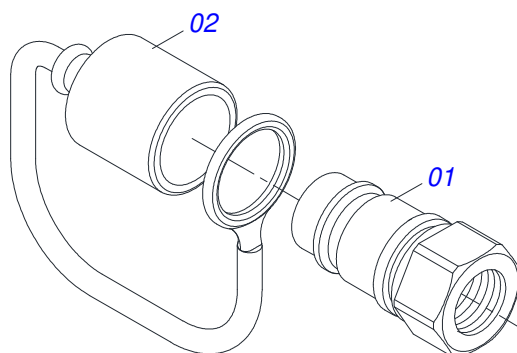

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

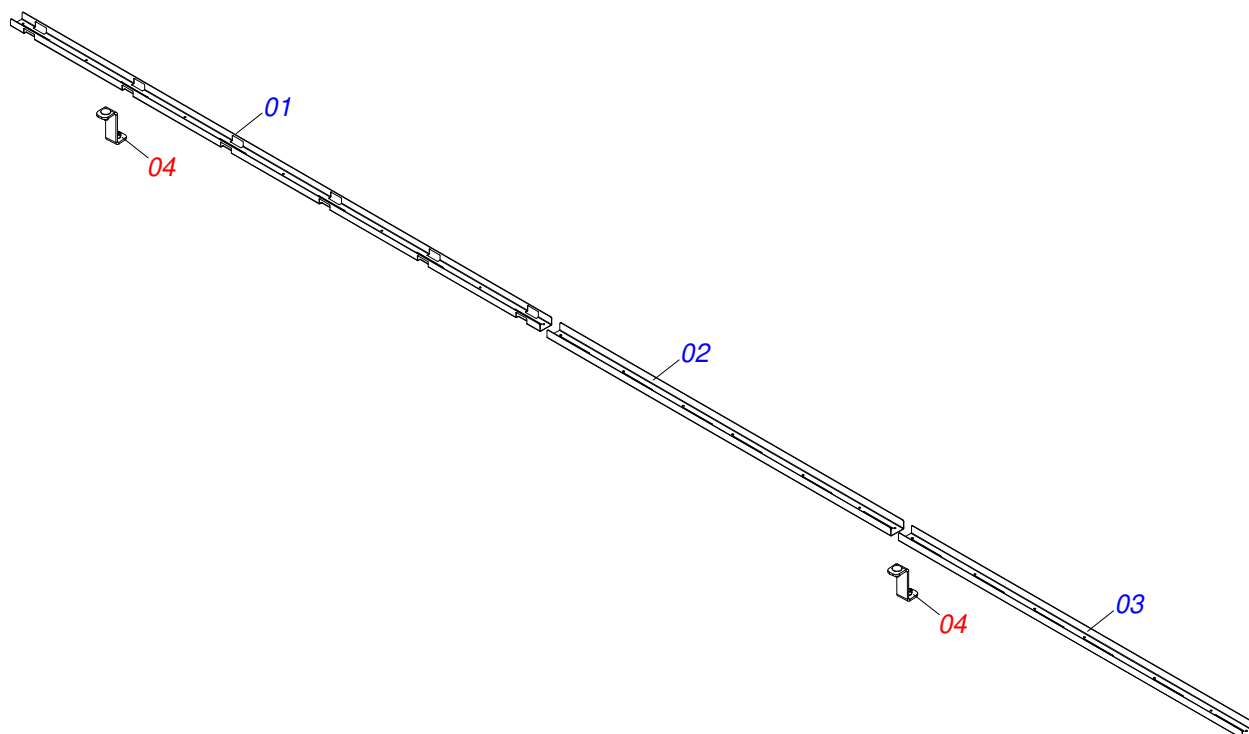


Item	Code	Description	See page	QT
01	0581017698	TROUGH 30 X 55 X 2180		01
02	0581017951	GUTTER 30 X 55 X 1200		01
03	0581018654	GUTTER 24 X 46 X 1000		01
04	0521055102	BIGGEST FULL GUTTER SUPPORT	58	02

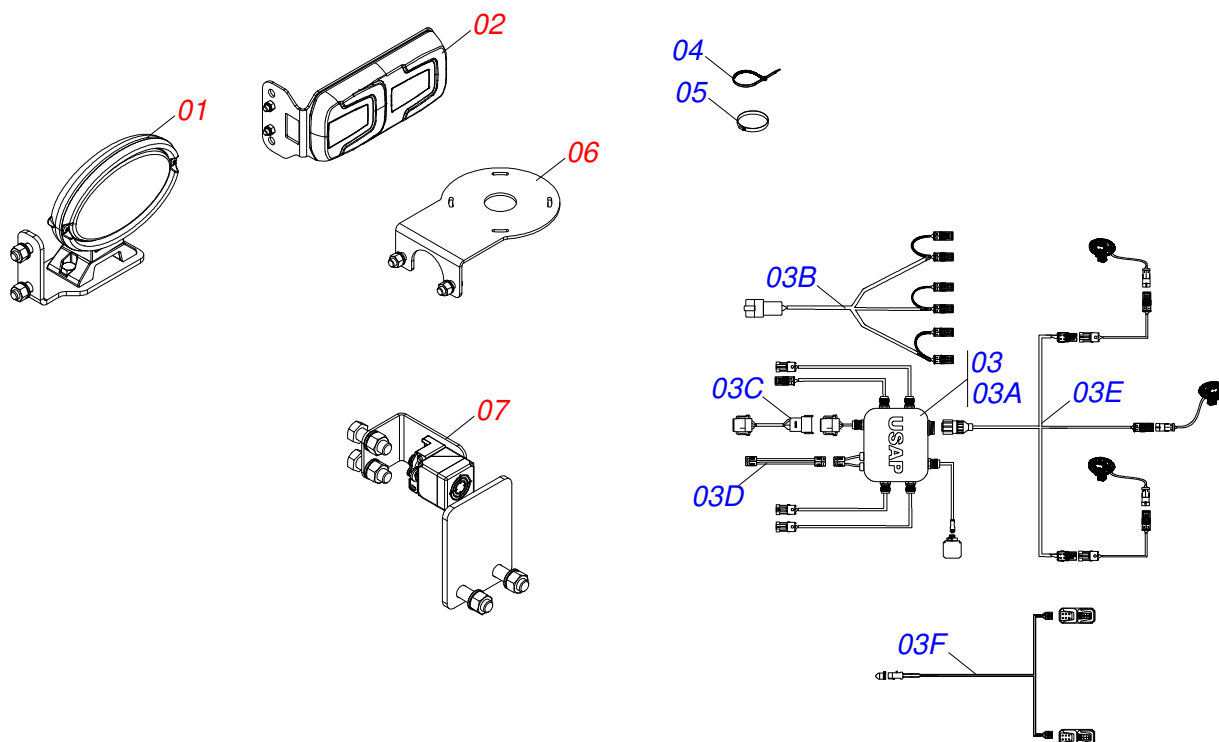


Item	Code	Description	See page	QT
01	0521054283	HEADLIGHT WITH SUPPORT	133	03
02	0521059393	LED FLASHLIGHT WITH FIXATION SUPPORT	134	02
03	0521057879	ECB ELECTRIC ASSEMBLY (ASSEMBLED)		01
03A	0503019329	COMMAND PANEL		01
03B	0503019061	WHIP		01
03C	0503019060	WHIP		01
03D	0503019390	WHIP BLOCK COMMAND IMPLEMENT		01
03E	0503019572	WHIP 3 HEADLIGHTS		01
03F	0503019694	LED LANTERN EXTENSOR WHIP 15M 4320.8 BCE		01
04	0503018829	NYLON CLAMP		20
05	0503019902	NYLON CLAMP 7,8X1,8X225 MM		80
06	0521055426	ASSY ELECTRICAL BOX SUPPORT	135	01
07	0521052143	CLUTCH INDUCTIVE SENSOR ASSEMBLY	136	01

HEADLIGHT WITH SUPPORT

0521054283

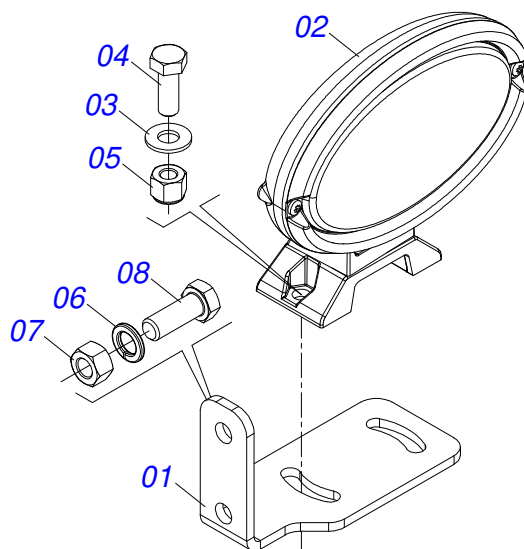


Item	Code	Description	See page	QT
01	0581018571	REAR HEADLIGHT SUPPORT		01
02	0503018738	LIGHTHOUSE		01
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010358	5/16" X 5/8" BOLT		02
05	0503013759	NUT		02
06	0503010025	3/8" SPRING WASHER		02
07	0503010026	3/8" NUT		02
08	0503010237	3/8" X 1" BOLT		02

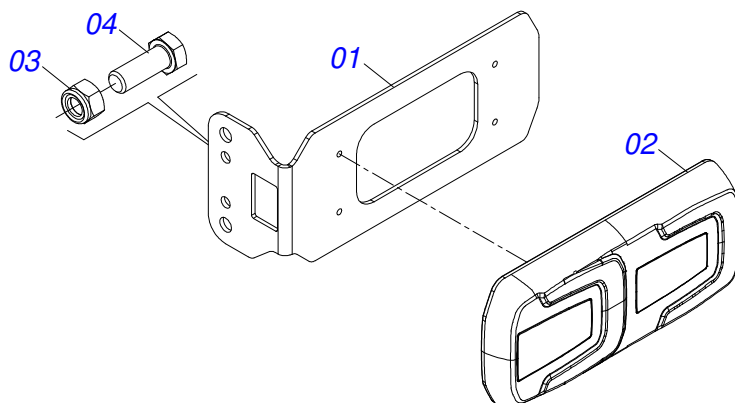

Item	Code	Description	See page	QT
01	0591013259	LED FLASHLIGHT SUPPORT		01
02	0503019579	LED LANTERN		01
03	0503013357	3/8" SELF-ADJUSTING NUT		02
04	0503010237	3/8" X 1" BOLT		02

ASSY ELECTRICAL BOX SUPPORT


0521055426

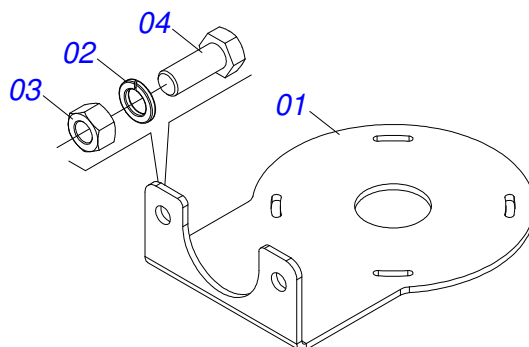


Item	Code	Description	See page	QT
01	0581014432	ELECTRIC BOX SUPPORT		01
02	0503010019	1/2" SPRING WASHER		02
03	0503010060	1/2" NUT		02
04	0503014007	1/2" X 1-1/4" BOLT		02

CLUTCH INDUCTIVE SENSOR ASSEMBLY


0521052143

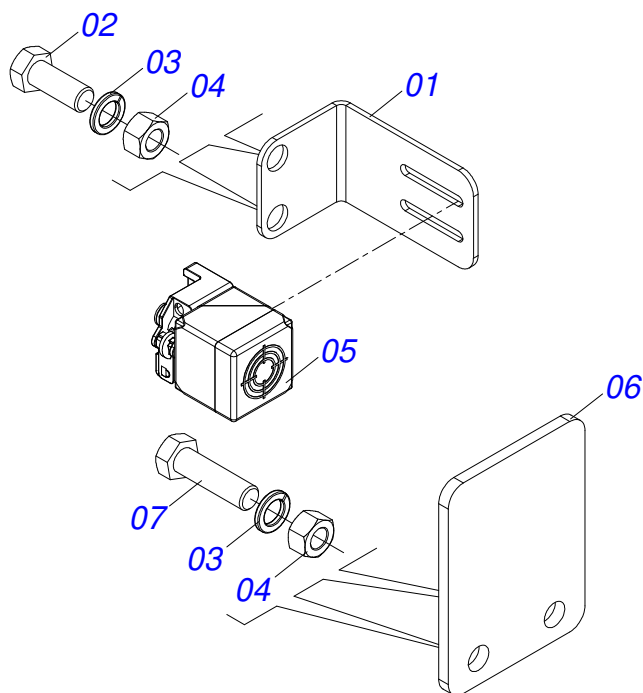

Item	Code	Description	See page	QT
01	0581016487	SENSOR SUPPORT		01
02	0501010063	1/2" X 1-1/2" BOLT		02
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2" NUT		04
05	0503019085	INDUCTIVE SENSOR		01
06	0571015148	PLATE SENSIBLES		01
07	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		02

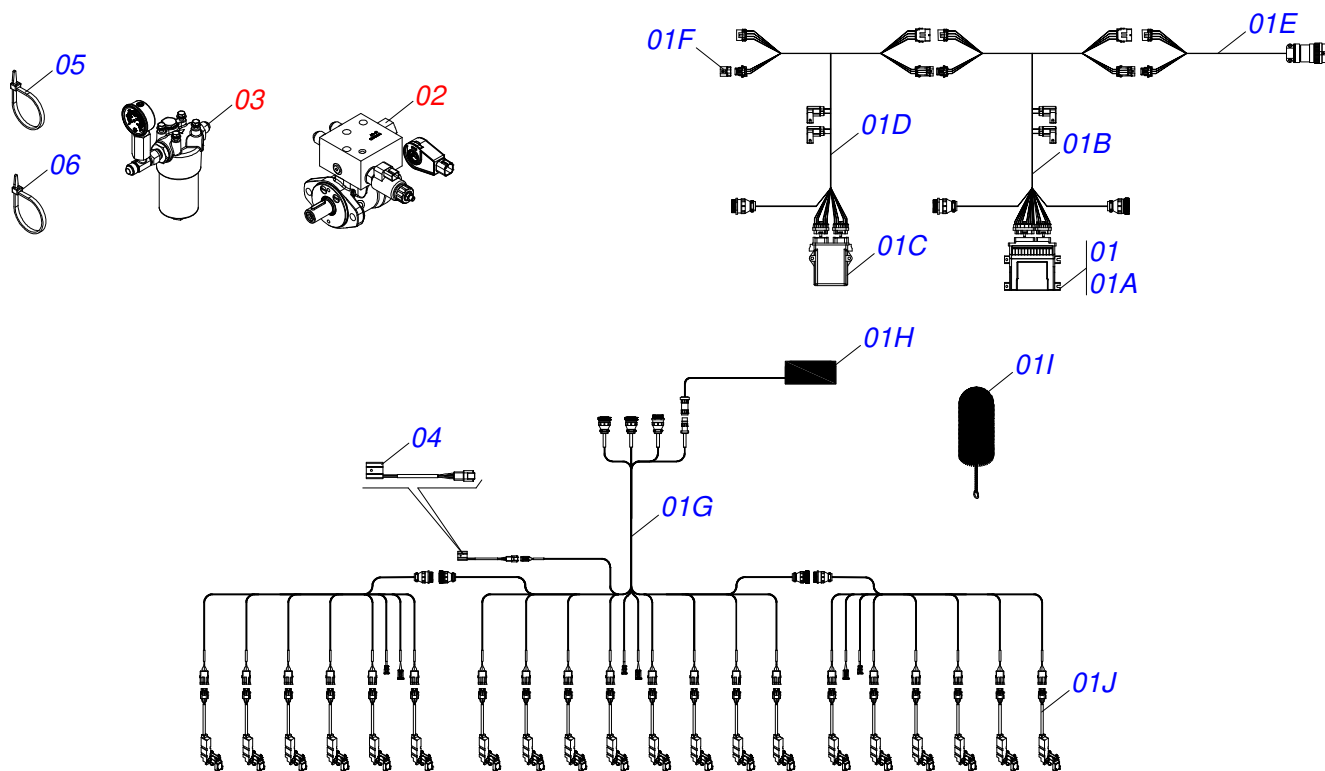


Item	Code	Description	See page	QT
01	0503063362	KIT INTELLIAG 20L 6-8-6 45/50 C/MS/E		01
01A	0503015065	MASTER CONTROL MODULE		01
01B	0503015066	CABLE CONTROL MASTER MODULE		01
01C	0503015209	MODULES WSMB 18L ISOBUS 4679811100S1		01
01D	0503015210	CABLE MODULO WSMB ISOBUS 467981200		01
01E	0503016321	ISOBUS CONNECTION CABLE		01
01F	0503015071	CONCTOR		01
01G	0513010021	CABLE ISO 3C 20L 6-8-6 45/50 MS		01
01H	0503017443	ANTENNA GPS PM 400		01
01I	0503017031	CLEANING BRUSH		01
01J	0503015218	SENSOR FOTOELE PM 400		20
02	0521056496	MOTOR EMD 80 WITH BLOCK BLFP2618	138	03
03	0511056972	FILTER HYDAC	139	01
04	0503019291	SUPPORT SENSOR		01
05	0503013100	NYLON CLAMP		100
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		300

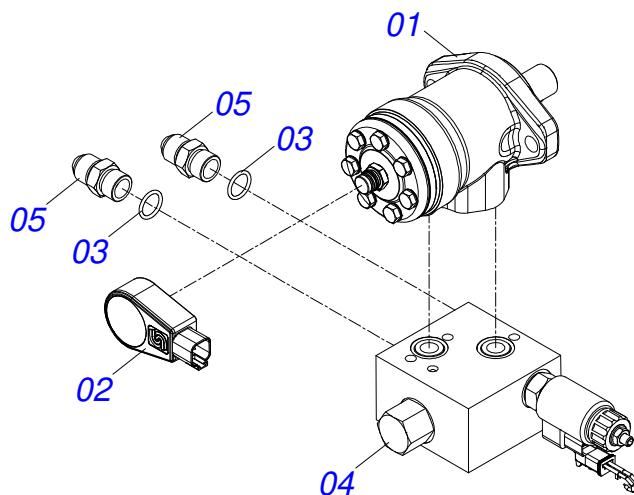

Item	Code	Description	See page	QT
01	0503018768	MOTOR OMP 80		01
02	0503018769	MOTOR SPEED SENSOR		01
03	0503010045	O'RING		02
04	0503019320	VALVE		01
05	0501010590	NIPPLE		02

FILTER HYDAC

0511056972

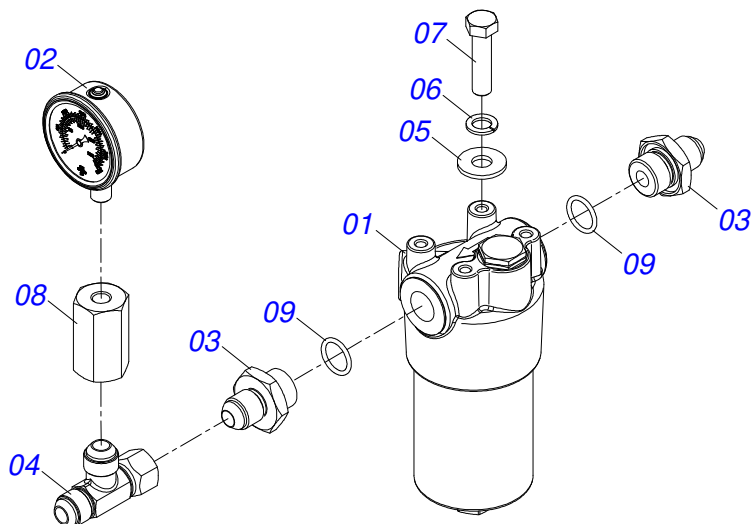

Item	Code	Description	See page	QT
01	0503016376	FILTER SPRING		01
02	0503016336	PRESSURE GAUGE		01
03	0581011416	7/8"NF UNF NIPPLE		02
04	0503012341	T 7/8" ADAPOR GIRAT NUT		01
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
06	0503010179	5/16" ZN SPRING WASHER		04
07	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
08	0571016236	HIDRAULIC ADAPTER		01
09	0503014724	2-215 N 3006-9B O'RING		02



0503034003



0503010001



0503031425



0503033021



0503034471



0503034566



0503034114




0503033853



0503033597



0503031087

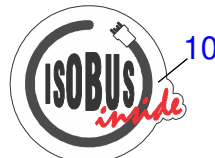

0503033022



0503033765



0503033764



0503034651




0503034683




0503034534


Item	Code	Description	See page	QT
01	0503034003	SERIAL NUMBER TAG 61 X 118		01
02	0503010001	3.2 X 5.5 RIVET		04
03	0503034566	ADHESIVE LABEL		04
04	0503034114	ADHESIVE LABEL LOGO TATU BOX 190 X 530		04
05	0503033853	ADHESIVE LABEL		02
06	0503031425	ADHESIVE LABEL ATTENTION		02
07	0503033597	ADHESIVE		02
08	0503031087	ADHESIVE LABEL		01
09	0503033021	ADHESIVE LABEL ISOBUS INSIDE 200MM		02
10	0503033022	ADHESIVE LABEL ISOBUS INSIDE 400MM		02
11	0503033765	ADHESIVE LABEL APT MARCHESAN LARGER		04
12	0503033764	ADHESIVE LABEL APT MARCHESAN LOWER		01
13	0503034471	ADHESIVE LABEL		01
14	0503034651	ADHESIVE LABEL		02
15	0503034683	ADHESIVE LABEL		02
16	0503034534	ADHESIVE LABEL		01

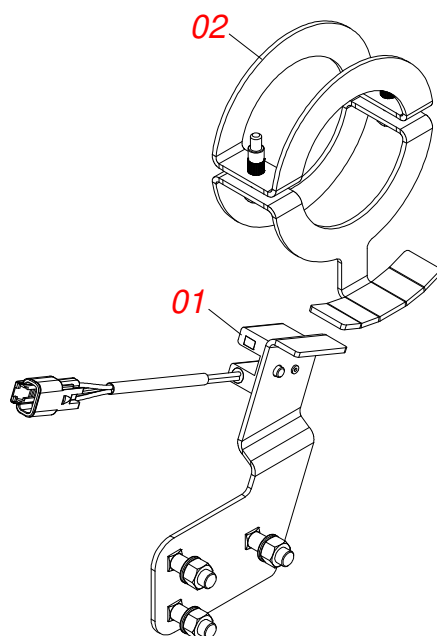


Item	Code	Description	See page	QT
01	0521058330	SENSOR SUPPORT	142	01
02	0521058331	DRIVE HYDRAULIC ASSEMBLY	143	01

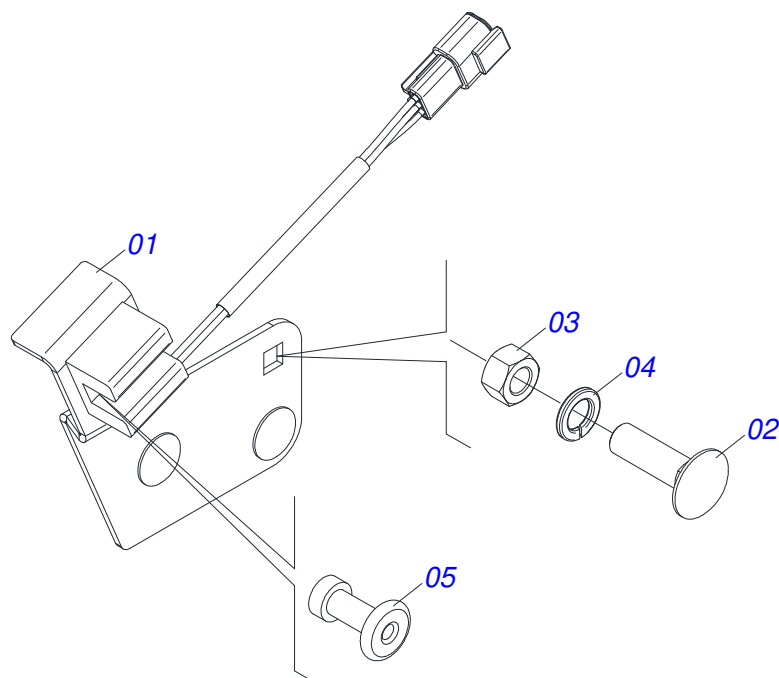

Item	Code	Description	See page	QT
01	0591014387	SENSOR SUPPORT		01
02	0501010942	3/8" X 1-1/4" BOLT		03
03	0503010026	3/8" NUT		03
04	0503010025	3/8" SPRING WASHER		03
05	0503013356	RIVET POP 3,2 X 10,0		01

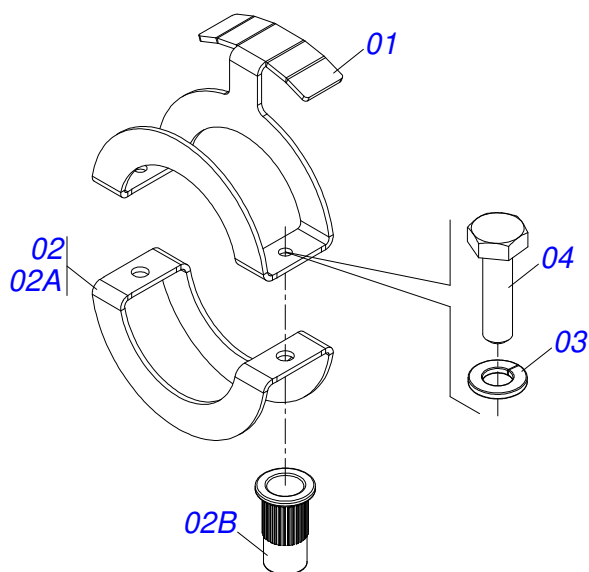


Item	Code	Description	See page	QT
01	0591014389	LIFTING SENSOR DRIVING BODY		01
02	0521058332	FIXER BODY CONTROL		01
02A	0591014388	LIFT ACTUATOR FIXER		01
02B	0503019412	RIVET SCREW INTERNAL		02
03	0503010143	1/4" SPRING WASHER		02
04	0503010420	BOLT		02

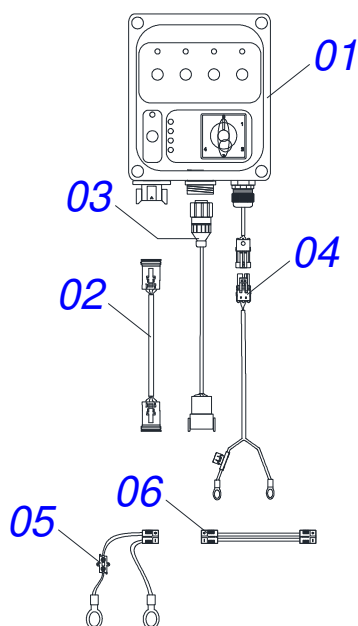

Item	Code	Description	See page	QT
01	0503019327	CONTROL PANEL		01
02	0503019054	WHIP		01
03	0503019059	WHIP		01
04	0503019052	WHIP		01
05	0503019328	WHIP		01
06	0503019057	WHIP		01

LEFT WHEEL WITH TRANSMISSION

0521055327

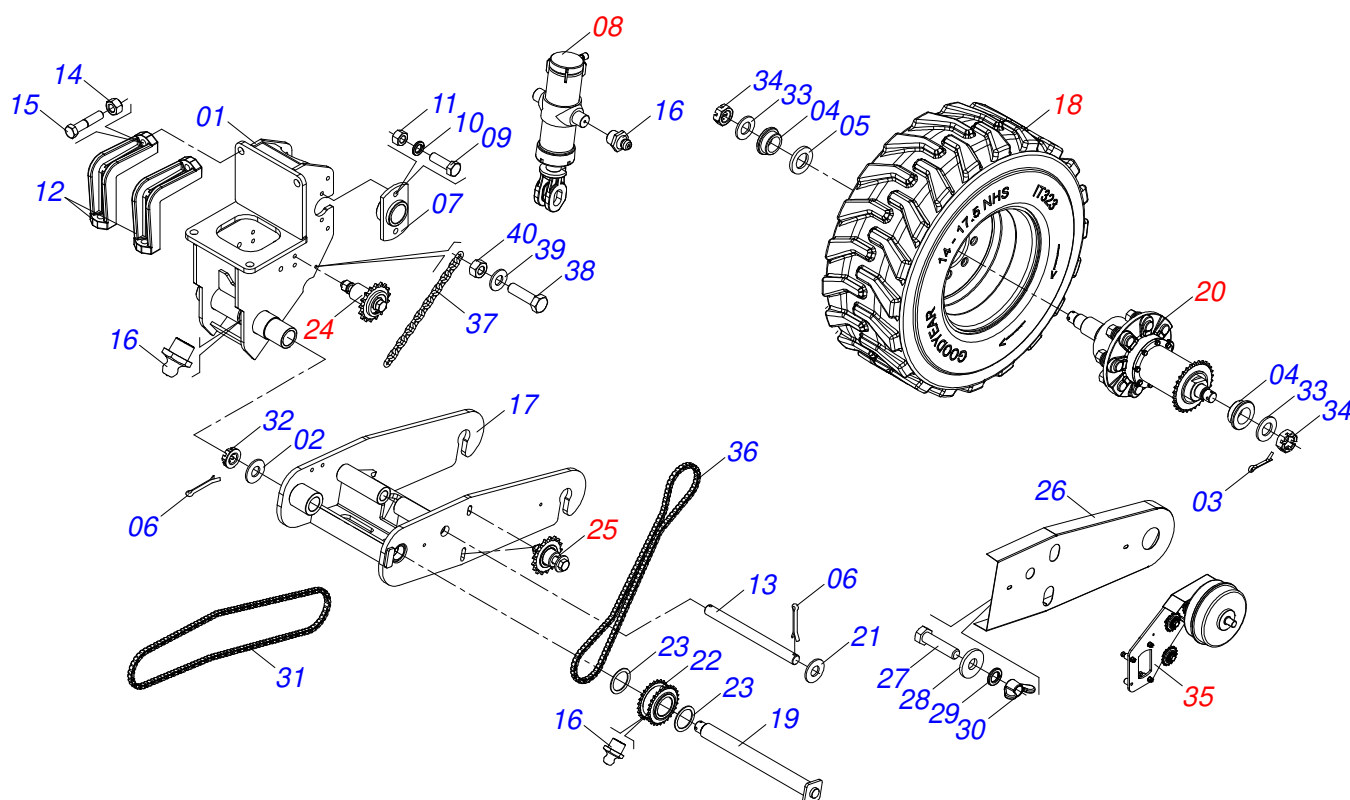

Item	Code	Description	See page	QT
01	0521064543	WHEEL SUPPORT		01
02	0561019929	FLAT WASHER		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		02
04	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
05	0551014508	FLAT WASHER		01
06	0503010523	1/4" X 2" COTTERPIN		03
07	0521069575	FLANGE CYLINDER HYDRAULIC FIXER		02
08	0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	22	01
09	0503010920	1/2" X 1.1/2" BOLT		04
10	0503010019	1/2" SPRING WASHER		04
11	0503010060	1/2" NUT		04
12	0502012731	WHEEL HOLDER		02
13	0581017245	AXLE BODY		01
14	0503011075	3/4" UNC NUT		04
15	0503012334	3/4" UNC X 3.1/2" BOLT		04
16	0503010002	1800 GREASE FITTING		04
17	0521064550	CARRYING-WHEELS FORK		01
18	0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	23	01
19	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
20	0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR	24	01
21	0531012874	FLAT WASHER		02
22	0511068422	WHEEL GEAR DOBLE		01
23	0551018571	FLAT WASHER		02
24	0511054463	WHEEL TENSIONER SUPORT CENTRAL	25	01
25	0511054464	WHEEL FORK TENSIONER	26	02
26	0561019941	RIGHT PROTECTIVE CAP WHEELS		01
27	0503010849	3/8" X 1-1/2" BOLT		02
28	0501013518	FLAT WASHER		02
29	0503010025	3/8" SPRING WASHER		02
30	0503010209	3/8" UNC BUTTERFLY NUT		02
31	0503016419	50-1 CHAIN X 128 LINK + REDUCION		01


LEFT WHEEL WITH TRANSMISSION

0521055327


Item	Code	Description	See page	QT
32	0501010630	1.1/2" CASTLE NUT		01
33	0501017779	32 X 60 X 4.75 FLAT WASHER		02
34	0503011052	1.1/4" X 0.77" CASTLE NUT		02
35	0511054501	TRANSMISSION CAMBIO LEFT	146	01
36	0503014857	50-1 X CHAIN X 122 LINK + REDUCION		01
37	0503033335	CURRENT 6 X 21 ELOS		01
38	0503010882	BOLT		01
39	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
40	0503010337	5/16" NUT		01

TRANSMISSION CAMBIO LEFT


0511054501

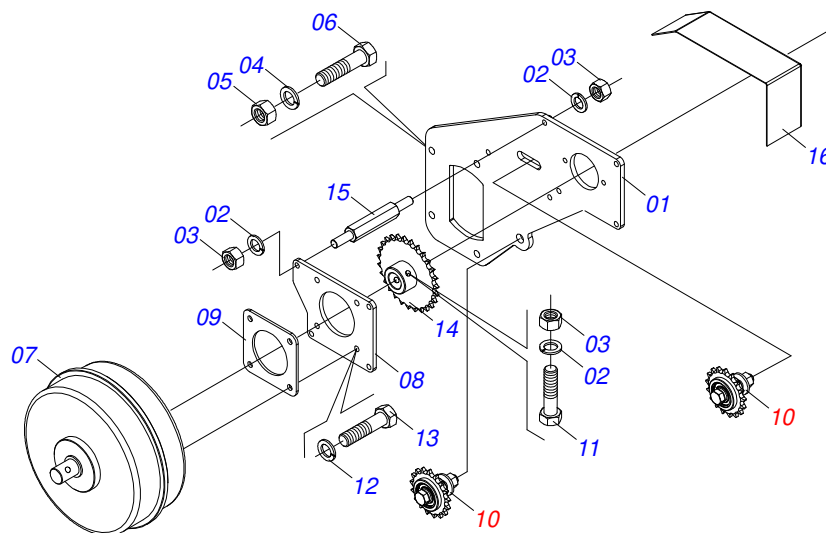

Item	Code	Description	See page	QT
01	0521064556	SUPPORT ASSY TRANSMISSION WHEEL SIDE		01
02	0503010025	3/8" SPRING WASHER		13
03	0503010026	3/8" NUT		11
04	0503010019	1/2" SPRING WASHER		03
05	0503010060	1/2" NUT		03
06	0503010741	1/2" X 2-3/4" BOLT		03
07	0503062231	CLUTCH		01
08	0571015139	FIXER PLATE		01
09	0571015138	CHOCK FRICÇÃO		01
10	0511054461	STRETCHER TOP TRANSMISSION SWIRLED	28	02
11	0503011268	3/8" X 2-1/2" BOLT		01
12	0503013542	M10 SPRING WASHER		04
13	0503010188	M10 X 1,5 X 30 BOLT		01
14	0511069511	27Z GEAR		02
15	0571015152	FIXER TRANSMISSION SIDE LEFT		04
16	0571015154	PROTECTION TRANSMISSION LEFT		04

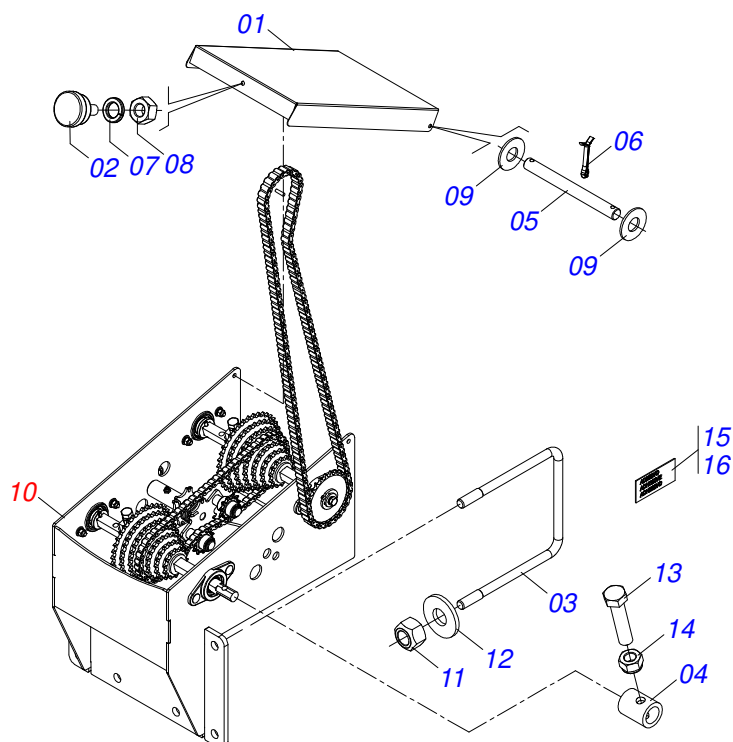


Item	Code	Description	See page	QT
01	0551011625	PROTECTION COVER		01
02	0503010386	CABLE		01
03	0551015037	5/8" UNC X 210 X 198 FASTENER		02
04	0551018630	CARDAN SHAFT GUIDES SLEEVE		01
05	0551018629	GEAR BOX COVER FIXER ROD		01
06	0503010257	1/8" X 1" COTTERPIN		02
07	0503010179	5/16" ZN SPRING WASHER		01
08	0503010337	5/16" NUT		01
09	0501013518	FLAT WASHER		02
10	0521056867	SEMI-ASSEMBLED LEFT EXCHANGE	148	01
11	0503012412	5/8 UNC SELF LOCKING NUT		04
12	0501012140	FLAT WASHER		04
13	0503011268	3/8" X 2-1/2" BOLT		01
14	0503013357	3/8" SELF-ADJUSTING NUT		01
15	0503034417	LETTER ADHESIVE LABEL		01
16	0503032986	ADHESIVE LABEL		01

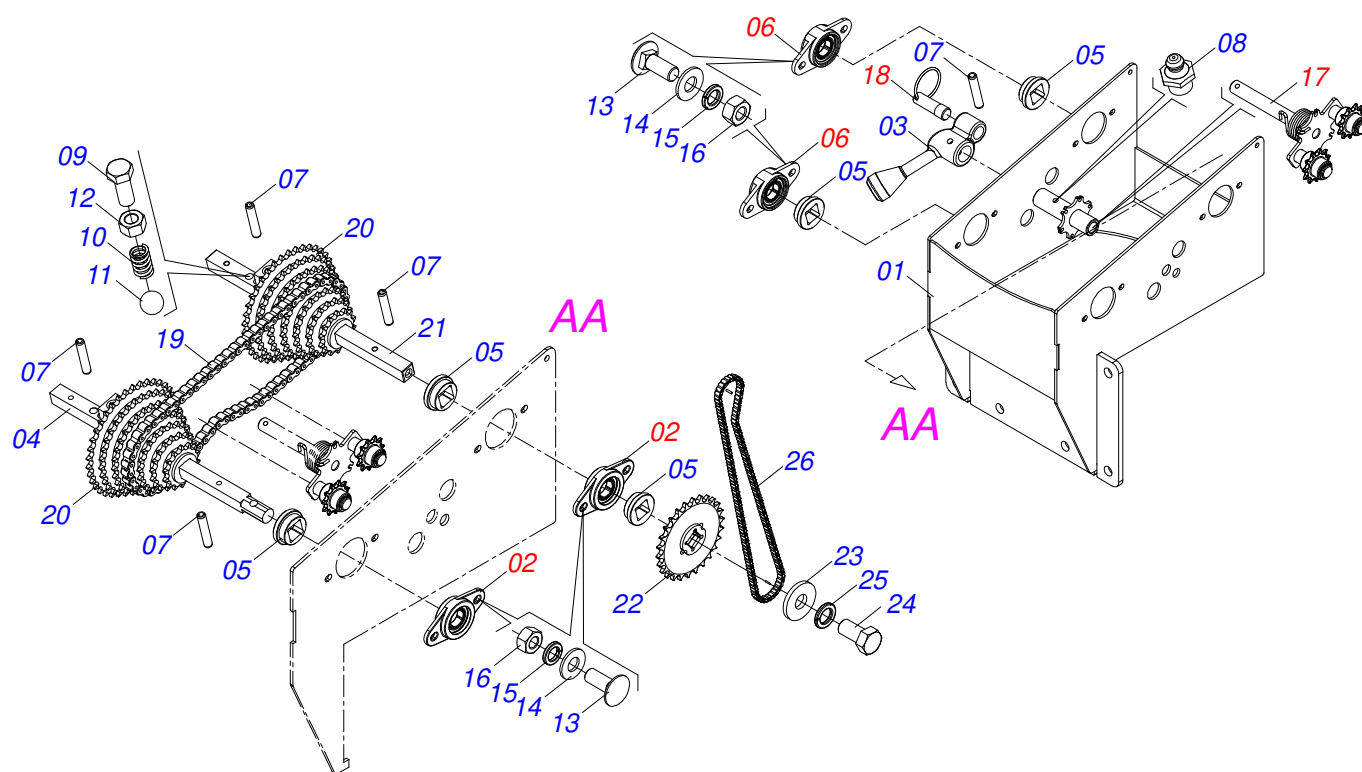

Item	Code	Description	See page	QT
01	0531060362	LEFT SIDE EXCHANGE FERTILIZER SUPPORT		01
02	0501056444	BEARING WITH ROLLING	32	02
03	0502011758	REAR TENSIONER LEVER		01
04	0551018627	SIDE GEAR BOX DRIVER AXLE		01
05	0503030303	SUPPORT WASHER		05
06	0501056271	BEARING CLOSED	33	02
07	0503010292	0.2" X 1.6" SPRING PIN		05
08	0503010002	1800 GREASE FITTING		01
09	0503010395	1/2" X 1-1/4" BOLT		02
10	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
11	0503012389	1/2 BALL		02
12	0503010060	1/2" NUT		02
13	0503011953	5/16" X 1" BOLT		08
14	0501010694	8.5 X 18 X 1.5 FLAT WASHER		08
15	0503010179	5/16" ZN SPRING WASHER		08
16	0503010337	5/16" NUT		08
17	0501052778	CHAIN TENSIONER ASSY	149	01
18	0501048790	AXLE WITH LINK ASSY	35	01
19	0503012204	40-1 CHAIN X 82 LINK + RED		01
20	0511060396	DRIVE/DRIVEN AXLE CONE		02
21	0591011683	MOVED AXIS		01
22	0511067501	26Z GEAR		01
23	0501010984	FLAT WASHER		01
24	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
25	0503010025	3/8" SPRING WASHER		01
26	0503019312	40-1 X 51 CHAIN LINK + MENDING		01

CHAIN TENSIONER ASSY


0501052778

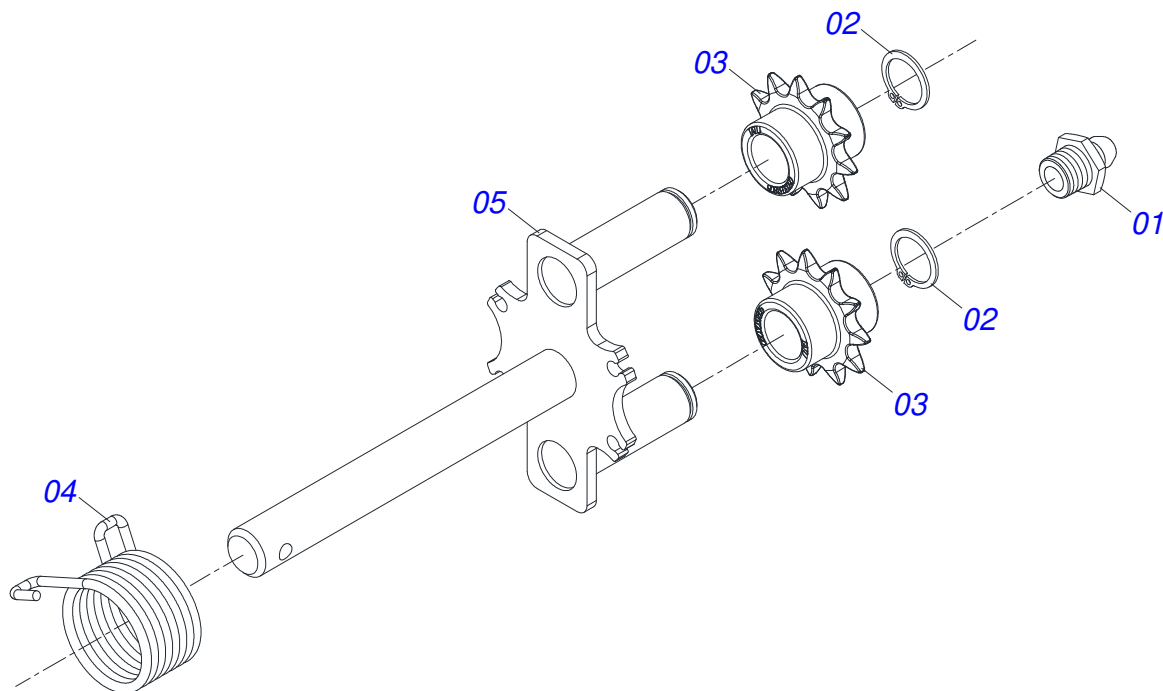


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503010302	501019 SEAL RING		02
03	0503031805	11Z 1/2" GEAR		02
04	0503031367	SPRING		01
05	0511061794	CHAIN TENSIONER		01

FILTER SUPPORT


0521054349

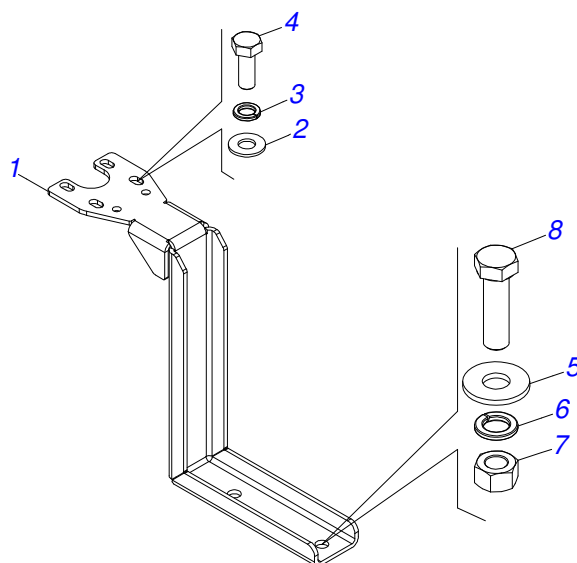


Item	Code	Description	See page	QT
001	0581018644	FILTER SUPPORT		01
002	0501010694	8.5 X 18 X 1.5 FLAT WASHER		04
003	0503010179	5/16" ZN SPRING WASHER		04
004	0503015114	BOLT		04
005	0511017302	FLAT WASHER		02
006	0503010019	1/2" SPRING WASHER		02
007	0503010060	1/2" NUT		02
008	0503011082	C1/2" X 1.3/4" SCREW		02

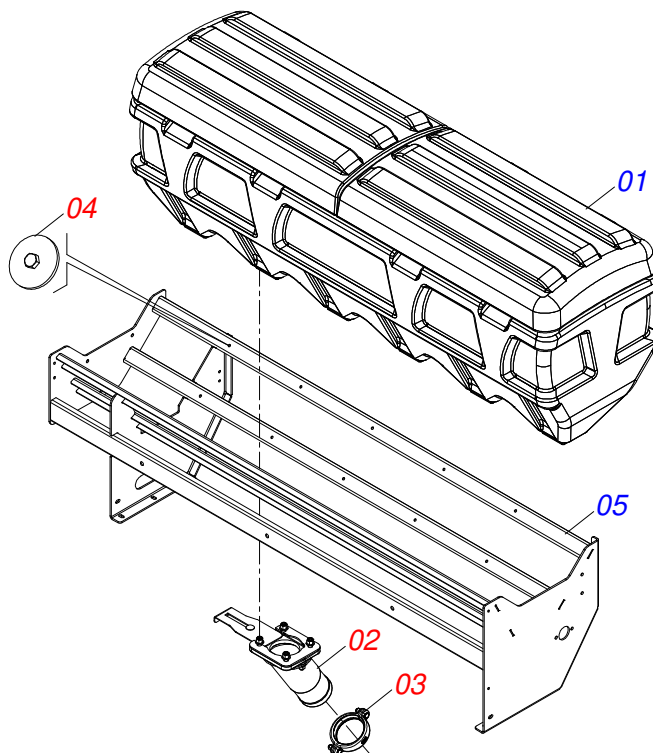

Item	Code	Description	See page	QT
01	0503062963	SILO FERTILIZER 06 MOUTHS		01
02	0521055365	SEED CONDUCTOR	45	06
03	0521050525	FIXER FERTILIZER CONDUCTOR	46	06
04	0521051407	FIXER SILO FERTILIZER	47	10
05	0531060511	LEFT SUPPORT 6 MOUTH 2433 X 2035		01

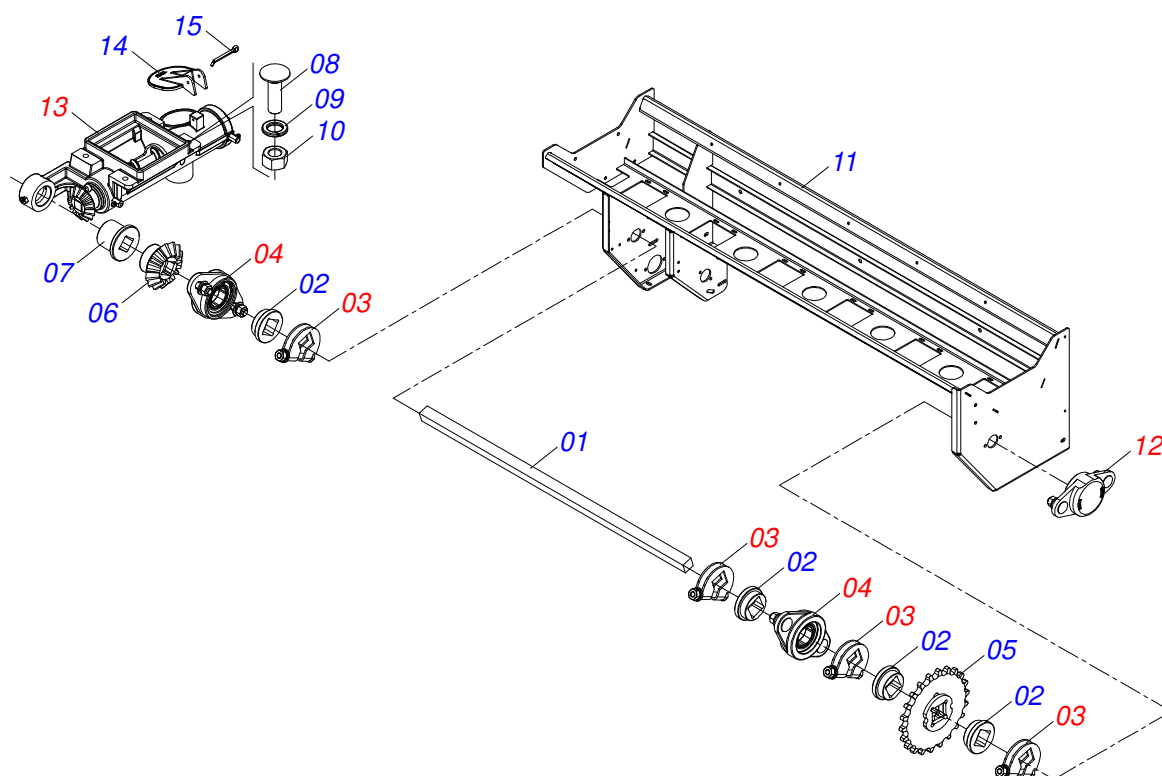

Item	Code	Description	See page	QT
01	0511017230	3/4" X 94" SQUARE SHAFT		01
02	0503030303	SUPPORT WASHER		04
03	0511059491	AXLE HOLDER	42	04
04	0521054282	BEARING	43	02
05	0511061759	22Z P12,70 FQ 3/4" GEAR		01
06	1902010685	18Z CONICAL GEAR		06
07	0503030275	AGRICULTURAL BEARING		06
08	0501010942	3/8" X 1-1/4" BOLT		24
09	0503010025	3/8" SPRING WASHER		24
10	0503010026	3/8" NUT		24
11	0531060513	LEFT SUPPORT FERTILIZER 6 MOUTH 2433 X 2035		01
12	0521054313	CLOSED BEARING	41	01
13	0511051535	FERTILIZER DISTRIBUTOR RIGHT SIDE STEP 2	115	06
14	0503034396	FERTILIZER SIDE COVER		06
15	0503010362	1/8" X 1.1/4" COTTERPIN		06

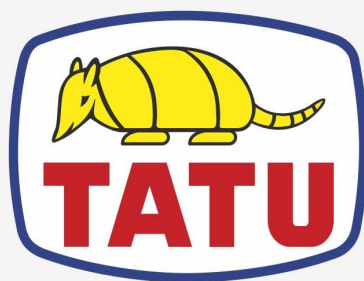

MARCHESAN

Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI

www.marchesan.com.br

