

ROW CROP PLANTERS

USAP 3200 MECHANICAL TITANIUM - FRAME 7670/8470 - CSC/TCE/MS

Code: 0501092933
Series: S-0120
Revision: 00
Date Revision: FEVEREIRO/2023

PARTS CATALOGUE



MARCHESAN

PRODUCTS

Code	Description
0111500005	USAP 3200 MEC 7670/14E500 CSC TIT DT ESP S-0120
0111500003	USAP 3200 MEC 7670/15E450 CSC TIT DT ESP S-0120
0111500006	USAP 3200 MEC 7670/15E500 CSC TIT DT ESP S-0120
0111500008	USAP 3200 MEC 7670/15E500 CSC TIT DT ESP S-0120
0111500007	USAP 3200 MEC 8470/16E500 CSC TIT DT ESP S-0120
0111500004	USAP 3200 MEC 8470/17E450 CSC TIT DT ESP S-0120

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX

0909095623	FRAME ASSY	1
0909095624	ASSY RIGHT FRAME	2
0909095625	ASSY CENTRAL FRAME	3
0909095626	ASSY LEFT FRAME	4
0531050969	ASSY HEADER	5
0531041074	ASSY HEADER	6
0521059468	REAR HEADER	7
0531051207	REAR HEADER 2770	8
0521059454	SIDE ARM LOCK ASSY	9
0531050017	HYDRAULIC CYLINDER 44,45 X 85,7 X 397 X 93MM	10
0531050962	SEMI-ASSEMBLED FRONT HEADER	11
0521059465	MOUNTED PANTOGRAPHIC HEADER	12
0531040499	HYDRAULIC CYLINDER 50.8 X 127 X 682 X 285	13
0521057815	HYDRAULIC HOSE SUPPORT WITH FIXATION	14
0521057739	HYDRAULIC CYLINDER 38,10 X 63,50 X 397 X 126	15
0521059886	SEMI-ASSEMBLED REST	16
0531051182	TRACK ASSEMBLY	17
0531050970	PANEL NIPLES	18
0521059467	ASSY FRENCH HAND	19
0531051206	ASSY FRENCH HAND	20
0521057793	KNEECAP WITH RIGHT EXTENSION AXLE	21
0531050875	COMPLETE HYDRAULIC ASSY	22
0531051275	COMPLETE HYDRAULIC ASSY	23
0531050904	1750 MOUNTED SIDE HANDRAIL	24
0531050966	2150 MOUNTED SIDE HANDRAIL	25
0531050908	ASSY RIGHT LADDER	26
0531050938	SILO 04 MOUTH RIGHT ASSEMBLED	27
0531051177	SILO 05 MOUTH RIGHT ASSEMBLED	28
0521051407	FERTILIZER HOPPER FIXER	29
0531050939	RIGHT SIDE SUPPORT 4B WITH DISTRIBUTORS	30
0531050918	TOP SUPPORT MOUNTED LIFT EXTENSOR	31
0521054282	BEARING	32
0501056444	BEARING WITH ROLLER	33
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	34
0501053788	3/4 SQUARE AXLE FASTENER	35
0531050940	RIGHT MONO ARM WHEEL	36
0531050023	HYDRAULIC CYLINDER 2 X 5 X 599 X 336	37
0531050941	MONO WHEEL	38
0521059946	WHEEL ASSY WITH TIRE	39
0521059728	WHEEL WITH TIRE	40
0521059947	MOUNTED CUBE	41
0531050902	MOUNTED SIDE SUPPORT	42
0531050903	SIDE ARTICULATED CYLINDER 44.45X85.70X291X657	43
0501057684	SIDE BEARING FRONT SUPPORT SEED ROW	44
0501053566	ROW SEED BEARING	45
0531050901	ASSY STABILIZER	46
0521059837	RIGHT MOUNTED TRANSMISSION BOX	47
0521059882	20Z TRANSMISSION GEAR	48
0521059881	TRANSMISSION GEAR	49
0531050967	RIGHT SIDE SUPPORT FERTILIZER	50
0531051179	RIGHT SUPPORT WITH FERTILIZER GUTTER 16/17 LINES	51
0531050968	RIGHT PLUMBING ASSY	52
0521059839	ASSY REAR HEADLIGHT	53
0511057159	TRANSMISSION HOPPER SEED ROW	54
0521059838	LOCK PIN ASSY	55



MARCHESAN

INDEX

0531051002	VALVE	56
0531050002	HYDRAULIC CYLINDER 101,55X466,5X312 COURSE WITHOUT LUBRICATION	57
0531051517	RIGHT ARM TRANSMISSION ASSY	58
0531050982	SIDE BODY BEARING	59
0521059948	ASSY LOCK AXLE	60
0909095627	SEED LINE/ASSY FERTILIZER	61
0521059919	SHORT FERTILIZER LINE DC20 WITHOUT ROD LUBRICATION	62
0531051559	SHORT FERTILIZER LINE DC20 WITHOUT ROD LUBRICATION	63
0531050380	SHORT FERTILIZER LINE LONG SUPPORT	64
0521059920	LONGER FERTILIZER LINE SMALLER DC20 ROD	65
0531051560	LONG FERTILIZER LINE WITHOUT STEM LUBRICATION	66
0521053946	SCARING ROD	67
0501110814	SCARIFIER ROD WITH IAPAR NOZZLE	68
0521053673	SCARIFIER ROD WITH NOZZLE	69
0501110723	SCARIFIER ROD	70
0521057679	ASSY CUTTING DISK 20	71
0521057681	BOX WITH DISC CUTTING 20 BEARING CONICO	72
0521057680	DISC CUTTING BOX	73
0531050905	SUPER LONG TITANIUM LINE (CPRA)	74
0531051400	LONG LEFT SUPPORT LINE	75
0531050906	TITANIUM LONG LINE (CPRA)	76
0531051401	TITANIUM LONG LINE (SPICRR)	77
0531050907	TITANIUM SHORT LINE (CPRA)	78
0531051402	TITANIUM SHORT LINE (SPICRR)	79
0521059626	FRONT LINE	80
0521056945	REAR FRAME	81
0521056944	REAR FRAME	82
0521056954	LEFT DDD ASSY	83
0521056955	RIGHT DDD ASSY	84
0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	85
0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	86
0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	87
0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	88
0521056582	TITANIUM SEED METER SET	89
0521059466	TITANIUM SEED DISTRIBUTOR	90
0511052058	SEED SYSTEM TITANIUM	91
0521059627	UNIVERSAL CURRENT / CABLE BEARING	92
0521054758	CONTROL DEPTH WITH REGULATOR	93
0521054751	DEPTH CONTROL WITH THREAD	94
0521053245	LEFT ARM WHEELS	95
0521053244	COVERING WHEEL RIGHT ARM ASSEMBLED	96
0521054744	CUBE RIGHT CONTROL DEPTH	97
0521054745	HUB LEFT CONTROL DEPTH	98
0511055819	DEPTH BAND WITH RIM	99
0521054752	V COMPACTING SYSTEM	100
0521054753	DRIVE WHEEL V RUBBER RIGHT	101
0521054754	DRIVE WHEEL V LEFT RUBBER	102
0531051094	MOUNTED HOSE GUIDE ASSEMBLY	103
0531051404	LEFT REAR SPICRR TITANIUM TIRE WITHOUT TAB	104
0531051403	RIGHT REAR SPICRR TITANIUM TIRE WITHOUT TAB	105
0531050193	DOSING ASSY TITANIUM/TATU	106
0531050537	REAR SPI LEFT TIRE WITHOUT TAB	107
0531050536	REAR RIGHT SPI TIRE WITHOUT FLAP	108
0521056632	DEPTH CONTROL	109



MARCHESAN

INDEX


0521056634	LEFT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	110
0521056635	RIGHT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	111
0521055093	BODY COMPACTOR	112
0521055017	RIGHT COMPACTOR WHEEL	113
0521054990	LEFT COMPACTOR WHEEL	114
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	115
0531050538	MOUNTED LEFT ARM	116
0531050539	MOUNTED LEFT ARM	117
0521055056	WHEEL RAYED ASSY BAND	118
0521055073	ASSEMBLY DEPTH WHEEL HUB	119
0503062066	DISC SET WITH CORN RING	120
0503062067	DISC SET / RING SOY 90F TITANIUM	121
0521055868	RIGHT DUAL FERTILIZER DISC	122
0511052024	FAST CLOSING SET	123
0521056639	SEED ROW TRANSMISSION	124
0521059909	CSC 15 MOUTH ASSEMBLY	125
0521053173	CENTRAL SEED HOPPER 15 OUTPUTS	126
0521053175	BASE CSC HOPPER 15 OUTPUTS	127
0531051092	ASSY HOSE SUPPORT	128
0521045392	HYDRAULIC TURBINE WITH SCREEN	129
0501054983	NIPPLE HIDRAULIC MOTOR	130
0501054577	BLOCK COMMAND WITH NIPLES HYDRAULIC TURBINE	131
0531050964	MOUNTED CENTRAL SUPPORT	132
0531051360	FULL LEFT WHEEL	133
0531051359	COMPLETE RIGHT ROADWAY	134
0521059737	CENTRAL FORK RODEIRO	135
0521056085	PLATE BEARING ASSY	136
0521059727	WHEEL ASSY WITH TIRE	137
0521059723	WHEEL ASSY WITH TIRE	138
0521059729	MOUNTED CUBE	139
0521059724	ASSEMBLED CUBE WITHOUT TRANSMISSION	140
0521059599	WHEEL TRANSMISSION BOX	141
0521059736	RIGHT SIDE TRANSMISSION DRIVER	142
0521059735	LEFT SIDE TRANSMISSION DRIVER	143
0531051355	LEFT WHEEL TRANSMISSION ASSY	144
0531051358	WHEEL TRANSMISSION STRETCHER	145
0531051356	STARTER TRANSMISSION ASSY LEFT 29Z	146
0531051372	RIGHT / LEFT WHEEL TRANSMISSION BOX	147
0521057782	SILO 8 MOUTH CENTRAL MOUNTED	148
0531051660	SILO 07 CENTRAL MOUTH MOUNTED	149
0521057783	CENTRAL SUPPORT 8 MOUTH	150
0531051661	07 MOUTH CENTRAL SUPPORT	151
0531051054	RIGHT TRANSMISSION SUPPORT	152
0531051055	HUB GREATER TRANSMISSION	153
0531051365	6 LINES RIGHT CENTRAL TRANSPORT SUPPORT	154
0531051063	LEFT TRANSMISSION SUPPORT	155
0531051364	6 LINES CENTRAL TRANSPORT SUPPORT	156
0531051113	HUGE TRANSMISSION	157
0531051061	LEFT EXCHANGE SEED/FERTILIZER MECHANICAL DISTRIBUTOR	158
0531051060	RIGHT CHANGE SEED / FERTILIZER MECHANICAL DISTRIBUTOR	159
0501048790	AXLE WITH RING	160
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	161
0501056443	GEAR HOUSING BEARING	162



MARCHESAN

INDEX


0511059266	CLOSED BEARING	163
0501056271	GEARBOX CLOSED BEARING	164
0521059533	MOUNTED 21Z P 1/2 GEAR	165
0501054655	CHAIN TENSIONER ASSY	166
0531051516	CENTRAL RIGHT TRANSMISSION	167
0531051050	CENTRAL FERTILIZER SUPPORT	168
0531051200	FERTILIZER CENTRAL SUPPORT	169
0531051736	SHORT LINE FERTILIZER CONDUCTOR ARTICULATOR	170
0531050168	ASSY CENTRAL PLATFORM 2797	171
0531050950	ASSY RIGHT ARTICULATION ARM	172
0531050935	ASSY LEFT ARTICULATION ARM	173
0531051056	HITCH ASSY	174
0531051515	CENTRAL LEFT TRANSMISSION	175
0531051861	BEARING/TRANSMISSION SUPPORT WITH LOCK	176
0531051062	LEFT HITCH ASSEMBLY	177
0531051057	HITCH MOUNTED TRANSMISSION	178
0531050963	HYDRAULIC CYLINDER 50.8X127X760X464	179
0531051768	MOUNTED HYDRAULIC SUPPORT	180
0521059704	CASAPPA TRIPLE VALVE WITH FIXING NIPLES	181
0501054694	FLOW DIVIDING VALVE ASSY	182
0531051455	LABEL SET	183
0531051097	USAP MECANICA 3200 LABEL ASSY	184
0531051769	MOUNTED DUCT SUPPORT	185
0521058587	PLANTING MONITORING ASSY 15L 45/50 PM400 18X18	186
0521059596	PLANTING MONITORING ASSY 16 LINES	187
0531050329	MOUNTED SINGLE VACUOMETER ASSY	188
0531052114	ASSY PORT MANUAL INSTRUCCION	189
0531050896	LEFT ARM MONO WHEEL WHEEL	190
0531050897	MONO WHEEL LEFT	191
0531050943	LEFT PLUMBING ASSY	192
0531050898	SILO 04 MOUTH LEFT MOUNTED	193
0531051167	SILO 5 MOUTHS LEFT MOUNTED	194
0531051168	LEFT SIDE SUPPORT 05 MOUTH WITH DISTRIBUTOR	195
0531050899	RIGHT SIDE SUPPORT 04 MOUTH WITH DISTRIBUTOR	196
0531050909	ASSEMBLY LADDER LEFT	197
0521059893	LEFT MOUNTED TRANSMISSION BOX	198
0531050981	LEFT ARM TRANSMISSION ASSY	199
0531051518	LEFT ARM ENCAPSULATED CURRENT TRANSMISSION ASSY	200
0531050942	SUPPORT WITH FERTILIZER GUTTER	201
0531051169	RIGHT SUPPORT WITH FERTILIZER GUTTER	202

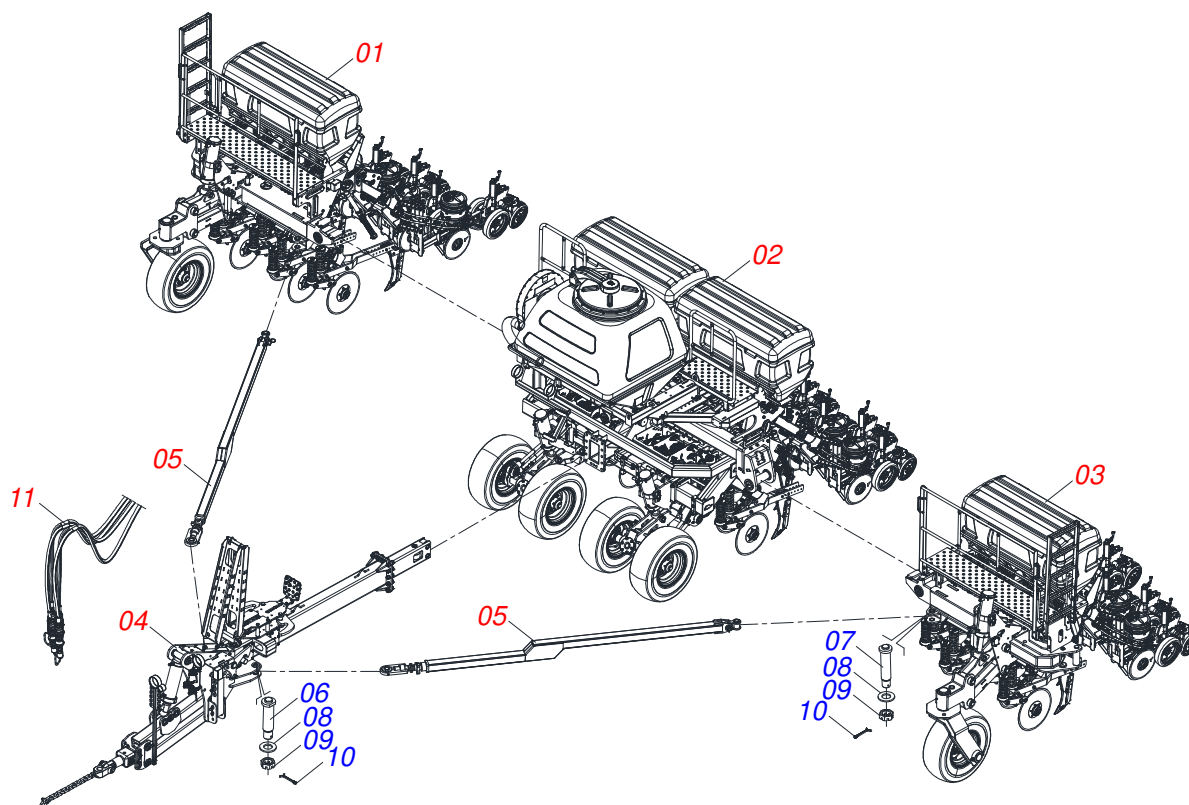

Item	Code	Description	See page	7670	8470
01	0909095624	ASSY RIGHT FRAME	2	001	001
02	0909095625	ASSY CENTRAL FRAME	3	001	001
03	0909095626	ASSY LEFT FRAME	4	001	001
04	0531050969	ASSY HEADER	5	001	000
04.	0531041074	ASSY HEADER	6	000	001
05	0521059467	ASSY FRENCH HAND	19	002	000
05.	0531051206	ASSY FRENCH HAND	20	000	002
06	0531061650	FRONT HAND FRENCH AXLE		002	002
07	0531061069	FRONT HAND FRENCH AXLE		002	002
08	0501017779	32 X 60 X 4.75 FLAT WASHER		004	004
09	0503011052	1.1/4" X 0.77" CASTLE NUT		004	004
10	0503010038	3/16 X 2 COTTERPIN		004	004
11	0531050875	COMPLETE HYDRAULIC ASSY	22	001	000
11.	0531051275	COMPLETE HYDRAULIC ASSY	23	000	001

ASSY RIGHT FRAME

0909095624

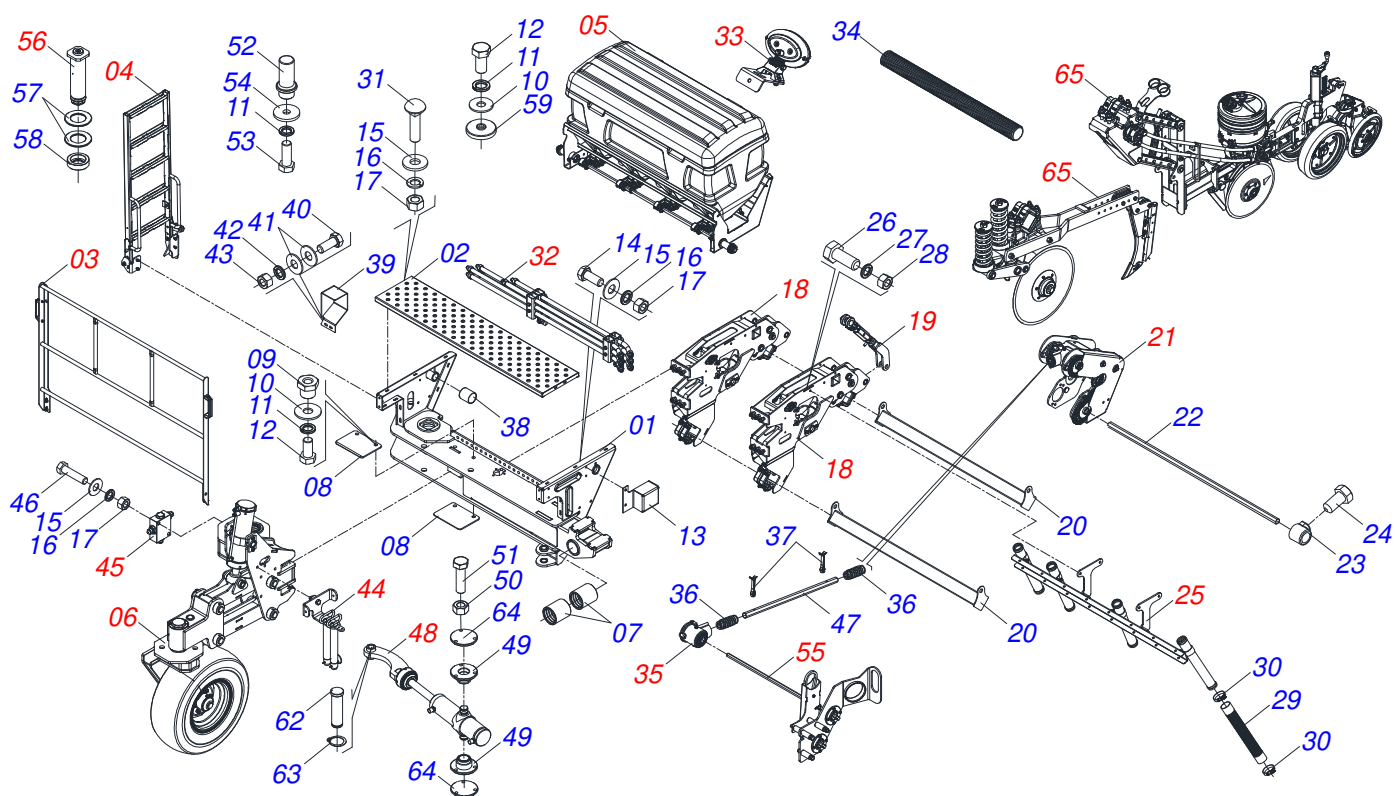

Item	Code	Description	See page	7670	8470
01	0531062178	RIGHT SIDE FRAME		001	000
01.	0531062298	RIGHT SIDE FRAME 2485		000	001
02	0531062140	SIDE PLATFORM 1780		001	000
02.	0531061865	SIDE PLATFORM 2180		000	001
03	0531050904	1750 MOUNTED SIDE HANDRAIL	24	001	000
03.	0531050966	2150 MOUNTED SIDE HANDRAIL	25	000	001
04	0531050908	ASSY RIGHT LADDER	26	001	001
05	0531050938	SILO 04 MOUTH RIGHT ASSEMBLED	27	001	000
05.	0531051177	SILO 05 MOUTH RIGHT ASSEMBLED	28	000	001
06	0531050940	RIGHT MONO ARM WHEEL	36	001	001
07	0591016192	GLOVE 102 X 85.50 X 111		002	002
08	0591018042	FRICTION PLATE		002	002
09	0591015962	SEPARATOR GLOVE		004	004
10	0501010453	FLAT WASHER		006	006
11	0503010027	5/8 SPRING WASHER		007	007
12	0503010962	5/8" X 1-1/4" BOLT		006	006
13	0591018049	RIGHT COVER AXLE DEPOSIT		001	001
14	0503010237	3/8" X 1" BOLT		002	002
15	0501013518	FLAT WASHER		003	003
16	0503010025	3/8 SPRING WASHER		003	003
17	0503010026	3/8" NUT		003	003
18	0531050902	MOUNTED SIDE SUPPORT	42	002	002
19	0531050901	ASSY STABILIZER	46	001	001
20	0531061670	FIXING TUBE SEED/FERTILIZER LINES		002	000
20.	0531061654	SEED LINES / FERTILIZER TUBE 2200		000	002
21	0521059837	RIGHT MOUNTED TRANSMISSION BOX	47	001	001
22	0591015959	HEX SHAFT 3/4 X 1700		001	000
22.	0591016282	HEX SHAFT 3/4 X 2200 SIDE TRANSMISSION		000	001
23	0511063123	BUSHING WITH NUT		004	004
24	0501018535	1/2 X 1 BOLT		004	004
25	0531050967	RIGHT SIDE SUPPORT FERTILIZER	50	001	000


ASSY RIGHT FRAME

0909095624

Item	Code	Description	See page	7670	8470
25.	0531051179	RIGHT SUPPORT WITH FERTILIZER GUTTER 16/17 LINES	51	000	001
26	0503014007	1/2" X 1-1/4" BOLT		004	004
27	0503010019	1/2" SPRING WASHER		004	004
28	0503010060	1/2 UNC G.5 ZN HEX NUT		004	004
29	0503030195	2" X 2" X 12.2" HOSE		008	010
30	0503010246	CLAMP		016	020
31	0501010942	3/8" X 1-1/4" BOLT		004	005
32	0531050968	RIGHT PLUMBING ASSY	52	001	001
33	0521059839	ASSY REAR HEADLIGHT	53	001	001
34	1164920015	BLACK SUCTION HOSE		025	031
35	0511057159	TRANSMISSION HOPPER SEED ROW	54	001	001
36	0503032984	HOOD HEX AXLE ROW		002	002
37	0503010071	3/16" X 1" COTTERPIN		002	002
38	0503019271	SELF LUBRICATING BUSHING		002	002
39	0591018050	EXTERNAL RIGHT COVER		001	001
40	0503010371	5/16" X 1" BOLT		002	002
41	0501010694	FLAT WASHER		004	004
42	0503010179	LOCK WASHER 5/16 ZN 1K01528		002	002
43	0503010337	5/16" NUT		002	002
44	0521059838	LOCK PIN ASSY	55	001	001
45	0531051002	VALVE	56	001	001
46	0503011141	3/8" X 2-3/4" BOLT		001	001
47	0591018046	HEX SHAFT BODY TR SEED 5/8 X 585		001	001
48	0531050002	HYDRAULIC CYLINDER 101,55X466,5X312 COURSE WITHOUT LUBRICATION	57	001	001
49	0501111058	ASSY FIXING GLOVE		002	002
50	0503011336	1/2" HEX SELF ADJUSTING NUT		006	006
51	0503011082	C1/2" X 1.3/4" SCREW		006	006
52	0591015374	HITCH AXIS		001	001
53	0503010232	5/8" X 1.3/4" BOLT		001	001
54	0511010721	FLAT WASHER		001	001
55	0531051517	RIGHT ARM TRANSMISSION ASSY	58	001	001
56	0521059948	ASSY LOCK AXLE	60	001	001
57	0591018045	FRICTION TRACK		002	002
58	0591018044	WASHER 65 X 130 X 20		001	001
59	0591018043	BODY SUPPORT		002	002
60	0591018041	AXIS 40 X 290		001	001
61	0503019302	NUT		001	001
62	0591015332	AXLE JUNCTION LOCK		001	001
63	0503010880	501032 CLAMPING RING (FOR AXLE)		001	001
64	0591018541	SWIVEL CYLINDER COVER		002	002
65	0909095627	SEED LINE/ASSY FERTILIZER	61	008	010

ASSY CENTRAL FRAME

0909095625

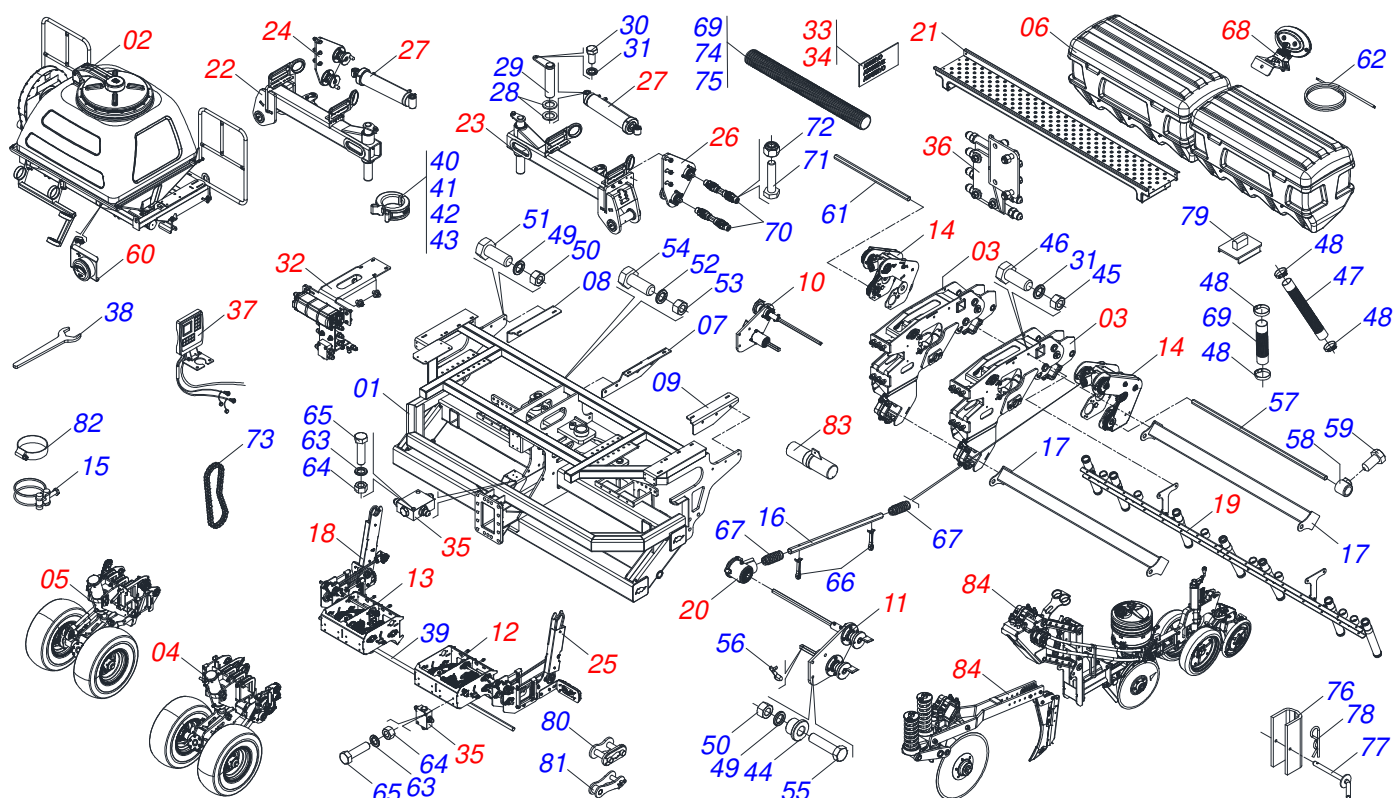

Item	Code	Description	See page	7670	8470
01	0531062146	CENTRAL FRAME 7 LINES 450		01	01
02	0521059909	CSC 15 MOUTH ASSEMBLY	125	01	01
03	0531050964	MOUNTED CENTRAL SUPPORT	132	02	02
04	0531051360	FULL LEFT WHEEL	133	01	01
05	0531051359	COMPLETE RIGHT ROADWAY	134	01	01
06	0521057782	SILO 8 MOUTH CENTRAL MOUNTED	148	01	01
06.	0531051660	SILO 07 CENTRAL MOUTH MOUNTED	149	00	01
07	0531062221	CENTRAL SUPPORT SILO		01	01
08	0531062223	RIGHT CENTRAL SILO SUPPORT		01	01
09	0531062222	RIGHT CENTRAL SILO SUPPORT		01	01
10	0531051054	RIGHT TRANSMISSION SUPPORT	152	01	01
10.	0531051365	6 LINES RIGHT CENTRAL TRANSPORT SUPPORT	154	00	01
11	0531051063	LEFT TRANSMISSION SUPPORT	155	01	01
11.	0531051364	6 LINES CENTRAL TRANSPORT SUPPORT	156	00	01
12	0531051061	LEFT EXCHANGE SEED/FERTILIZER MECHANICAL DISTRIBUTOR	158	01	01
13	0531051060	RIGHT CHANGE SEED / FERTILIZER MECHANICAL DISTRIBUTOR	159	01	01
14	0521059837	RIGHT MOUNTED TRANSMISSION BOX	47	02	02
15	0503019222	BRACELET TYPE WIRE 3.2MM X 48 X 63 MM		05	05
16	0591018046	HEX SHAFT BODY TR SEED 5/8 X 585		02	02
17	0531061647	FIXING TUBE SEED/FERTILIZER LINES		02	00
17.	0531061847	FIXING TUBE SEED/FERTILIZER LINES		00	02
18	0531051516	CENTRAL RIGHT TRANSMISSION	167	01	01
19	0531051050	CENTRAL FERTILIZER SUPPORT	168	01	00
19.	0531051200	FERTILIZER CENTRAL SUPPORT	169	00	01
20	0511057159	TRANSMISSION HOPPER SEED ROW	54	02	02
21	0531050168	ASSY CENTRAL PLATFORM 2797	171	01	01
22	0531050950	ASSY RIGHT ARTICULATION ARM	172	01	01
23	0531050935	ASSY LEFT ARTICULATION ARM	173	01	01
24	0531051056	HITCH ASSY	174	01	01
25	0531051515	CENTRAL LEFT TRANSMISSION	175	01	01

ASSY CENTRAL FRAME

0909095625

Item	Code	Description	See page	7670	8470
26	0531051062	LEFT HITCH ASSEMBLY	177	01	01
27	0531050963	HYDRAULIC CYLINDER 50.8X127X760X464	179	02	02
28	0521011100	FLAT WASHER		04	04
29	0531062245	233 CYLINDER JOINT AXIS		02	02
30	0503010834	1/2 X 1 BOLT		02	02
31	0503010019	1/2" SPRING WASHER		06	06
32	0531051768	MOUNTED HYDRAULIC SUPPORT	180	01	01
33	0531051455	LABEL SET	183	01	00
34	0531051097	USAP MECANICA 3200 LABEL ASSY	184	00	01
35	0531051002	VALVE	56	02	02
36	0531051769	MOUNTED DUCT SUPPORT	185	01	01
37	0521058587	PLANTING MONITORING ASSY 15L 45/50 PM400 18X18	186	01	00
37.	0521059596	PLANTING MONITORING ASSY 16 LINES	187	00	01
38	0541015451	FIXED KEY 2.3/8 X 2.3/4		01	01
39	0591015906	MOTOR AXLE		01	01
40	0501047895	25 ROD STOP		04	04
41	0501047885	30 ROD STOP		08	08
42	0501047886	35 ROD STOP		04	04
43	0501047887	40 ROD STOP		08	08
44	0591018162	GLOVE 17 X 28 X 24		06	06
45	0503010060	1/2 UNC G.5 ZN HEX NUT		04	04
46	0503014007	1/2" X 1-1/4" BOLT		04	04
47	0503030195	2" X 2" X 12.2" HOSE		12	14
48	0503010246	CLAMP		36	38
49	0503010027	5/8 SPRING WASHER		12	12
50	0503010013	5/8 NUT		12	12
51	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		06	06
52	0503010023	3/4" SPRING WASHER		02	02
53	0503010014	3/4" HEX NUT		02	02
54	0501010098	3/4" UNC BOLT		02	02
55	0503010233	5/8" X 2-1/2" BOLT		06	06
56	0503010584	1/4" X 1" COTTERPIN		02	02
57	0591015959	HEX SHAFT 3/4 X 1700		01	01
57.	0591010721	HEX AXLE 3/4 X 1250		00	02
58	0511063123	BUSHING WITH NUT		06	12
59	0503010237	3/8" X 1" BOLT		06	12
60	0531050329	MOUNTED SINGLE VACUOMETER ASSY	188	01	01
61	0591010682	HEX AXLE 3/4 X 1120		01	00
62	0513010044	CORD LIGHTHOUSE LANTERN		01	01
63	0503010025	3/8 SPRING WASHER		03	03
64	0503010026	3/8" NUT		03	03
65	0503011179	3/8" X 2-1/4" BOLT		03	03
66	0503010071	3/16" X 1" COTTERPIN		04	04
67	0503032984	HOOD HEX AXLE ROW		04	04
68	0521059839	ASSY REAR HEADLIGHT	53	01	01
69	1164920017	BLUE PVC FLAT HOSE		02	02
70	0503063384	SEED / FERTILIZER TRANSMISSION SHAFT		04	04
71	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		08	08
72	0503014876	NUT PARLOCK 1/4"		08	08
73	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		02	02
74	1164920015	BLACK SUCTION HOSE		20	25
75	1163920004	BLACK LIGHT SUCTION HOSE		01	01
76	0581012482	TRANSPORT LATCH		04	04
77	0501068994	8,30 X 78 LOCK PIN		04	04
78	0503030168	HITCH PIN CLIP		04	04
79	0503032624	FERTILIZER HOPPER GUTTER		06	06
80	0503011750	AMENDMENT WITH LOCK		06	06
81	0503011751	REDUCTION		06	06




ASSY CENTRAL FRAME

0909095625

Item	Code	Description	See page	7670	8470
82	0503019869	CLAMP		05	05
83	0531052114	ASSY PORT MANUAL INSTRUCCION	189	01	01
84	0909095627	SEED LINE/ASSY FERTILIZER	61	15	16

ASSY LEFT FRAME

0909095626

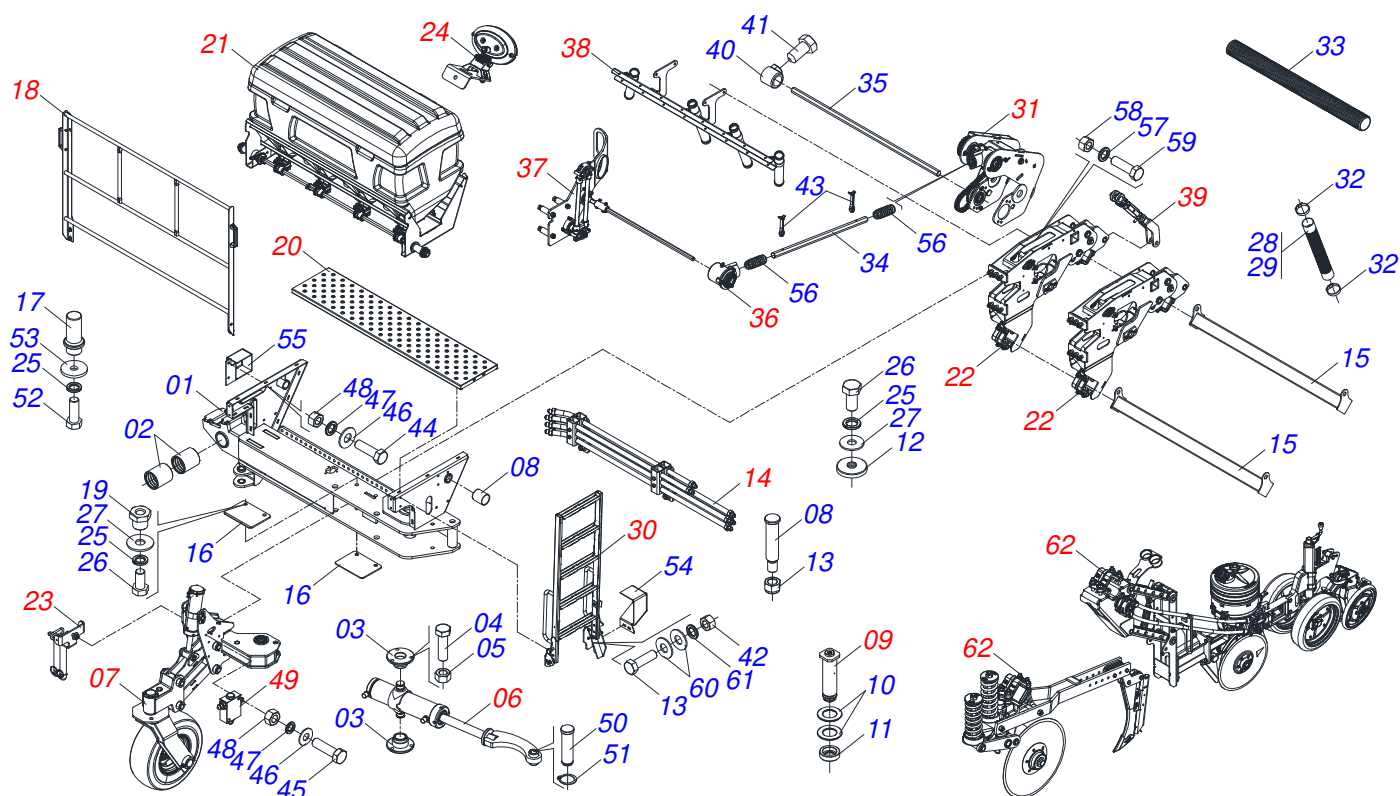

Item	Code	Description	See page	7670	8470
01	0531062136	LEFT SIDE FRAME		001	000
01.	0531061862	LEFT SIDE FRAME		000	001
02	0591016192	GLOVE 102 X 85.50 X 111		002	002
03	0501111058	ASSY FIXING GLOVE		002	002
04	0503011239	1/2" X 2" BOLT		006	006
05	0503011336	1/2" HEX SELF ADJUSTING NUT		006	006
06	0531050002	HYDRAULIC CYLINDER 101,55X466,5X312 COURSE 57 WITHOUT LUBRICATION		001	001
07	0531050896	LEFT ARM MONO WHEEL WHEEL	190	001	001
08	0503019271	SELF LUBRICATING BUSHING		002	002
09	0521059948	ASSY LOCK AXLE	60	001	001
10	0591018045	FRICTION TRACK		002	002
11	0591018044	WASHER 65 X 130 X 20		001	001
12	0591018043	BODY SUPPORT		002	002
13	0503010371	5/16" X 1" BOLT		002	002
14	0531050943	LEFT PLUMBING ASSY	192	001	001
15	0531061670	FIXING TUBE SEED/FERTILIZER LINES		000	002
15.	0531061654	SEED LINES / FERTILIZER TUBE 2200		002	000
16	0591018042	FRICTION PLATE		002	002
17	0591015374	HITCH AXIS		001	001
18	0531050904	1750 MOUNTED SIDE HANDRAIL	24	001	000
18.	0531050966	2150 MOUNTED SIDE HANDRAIL	25	000	001
19	0591015962	SEPARATOR GLOVE		004	004
20	0531062140	SIDE PLATFORM 1780		001	000
20.	0531061865	SIDE PLATFORM 2180		000	001
21	0531050898	SILO 04 MOUTH LEFT MOUNTED	193	001	000
21.	0531051167	SILO 5 MOUTHS LEFT MOUNTED	194	000	001
22	0531050902	MOUNTED SIDE SUPPORT	42	002	002
23	0521059838	LOCK PIN ASSY	55	001	001
24	0521059839	ASSY REAR HEADLIGHT	53	001	001
25	0503010027	5/8 SPRING WASHER		007	007
26	0503010962	5/8" X 1-1/4" BOLT		006	006


ASSY LEFT FRAME

0909095626

Item	Code	Description	See page	7670	8470
27	0501010453	FLAT WASHER		006	006
28	0503030195	2" X 2" X 12.2" HOSE		008	010
29	0503030645	2 X 2 X 225 HOSE		000	001
30	0531050909	ASSEMBLY LADDER LEFT	197	001	001
31	0521059893	LEFT MOUNTED TRANSMISSION BOX	198	001	000
31.	0521059837	RIGHT MOUNTED TRANSMISSION BOX	47	000	001
32	0503010246	CLAMP		016	020
33	1164920015	BLACK SUCTION HOSE		025	031
34	0591018046	HEX SHAFT BODY TR SEED 5/8 X 585		001	001
35	0571018910	3/4 X 1505 AXLE HEX		001	000
35.	0591015959	HEX SHAFT 3/4 X 1700		001	000
35..	0591014453	HEX AXLE 3/4 X 2000		000	001
35...	0591016282	HEX SHAFT 3/4 X 2200 SIDE TRANSMISSION		000	001
36	0511057159	TRANSMISSION HOPPER SEED ROW	54	001	001
37	0531050981	LEFT ARM TRANSMISSION ASSY	199	001	001
37.	0531051518	LEFT ARM ENCAPSULATED CURRENT TRANSMISSION ASSY	200	001	001
38	0531050942	SUPPORT WITH FERTILIZER GUTTER	201	001	000
38.	0531051169	RIGHT SUPPORT WITH FERTILIZER GUTTER	202	000	001
39	0531050901	ASSY STABILIZER	46	002	002
40	0511063123	BUSHING WITH NUT		004	004
41	0501018535	1/2 X 1 BOLT		004	004
42	0503010337	5/16" NUT		002	002
43	0503010071	3/16" X 1" COTTERPIN		002	002
44	0503010237	3/8" X 1" BOLT		002	002
45	0503011141	3/8" X 2-3/4" BOLT		001	001
46	0501013518	FLAT WASHER		003	003
47	0503010025	3/8 SPRING WASHER		003	003
48	0503010026	3/8" NUT		003	003
49	0531051002	VALVE	56	001	001
50	0591015332	AXLE JUNCTION LOCK		001	001
51	0503010880	501032 CLAMPING RING (FOR AXLE)		001	001
52	0503010232	5/8" X 1.3/4" BOLT		001	001
53	0511010721	FLAT WASHER		001	001
54	0591018052	EXTERNAL LEFT COVER		001	001
55	0591018051	LEFT COVER AXLE DEPOSIT		001	001
56	0503032984	HOOD HEX AXLE ROW		002	002
57	0503010019	1/2" SPRING WASHER		004	004
58	0503010060	1/2 UNC G.5 ZN HEX NUT		004	004
59	0503014007	1/2" X 1-1/4" BOLT		004	004
60	0501010694	FLAT WASHER		004	004
61	0503010179	LOCK WASHER 5/16 ZN 1K01528		002	002
62	0909095627	SEED LINE/ASSY FERTILIZER	61	008	010

ASSY HEADER


0531050969

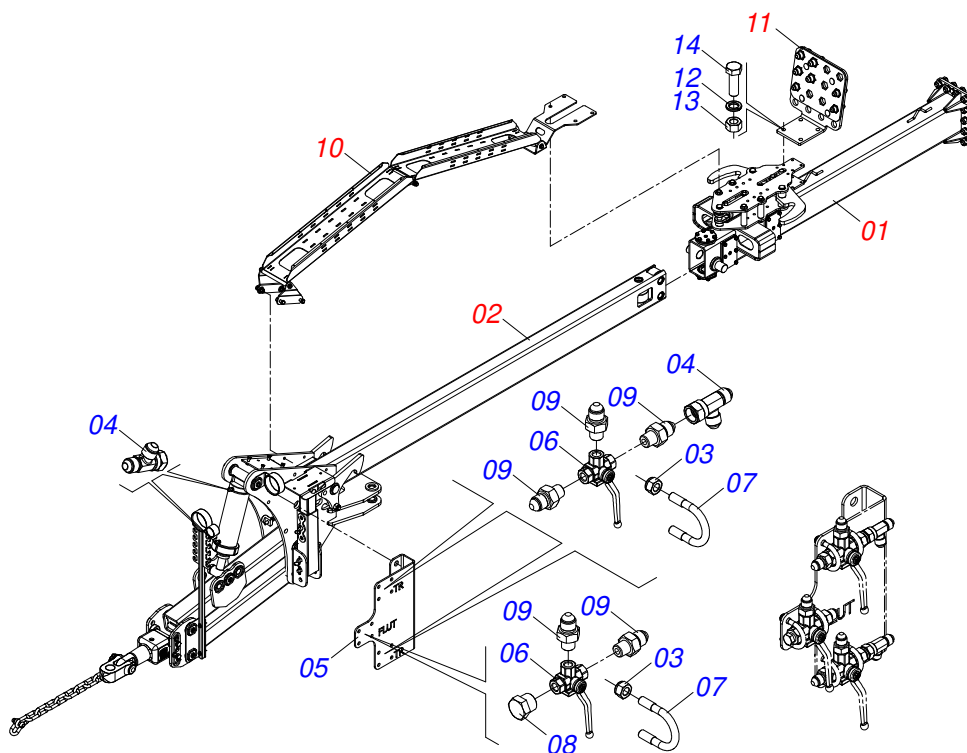

Item	Code	Description	See page	QT
01	0521059468	REAR HEADER	7	01
02	0531050962	SEMI-ASSEMBLED FRONT HEADER	11	01
03	0503013357	3/8 SELF-ADJUSTING NUT		12
04	0503062180	T ADAPTER WITH ROTATING NUT		04
05	0591018009	REGISTRATION PLATE		01
06	0503016612	VALVE		03
07	0551019884	45 X 50 X 3/8 FASTENER		06
08	0591010871	PLUG R3/8 BSPT		01
09	0571013798	3/4" UNF X 3/8 NPT NIPPLE		08
10	0531051182	TRACK ASSEMBLY	17	01
11	0531050970	PANEL NIPLES	18	01
12	0503010019	1/2" SPRING WASHER		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04

ASSY HEADER


0531041074

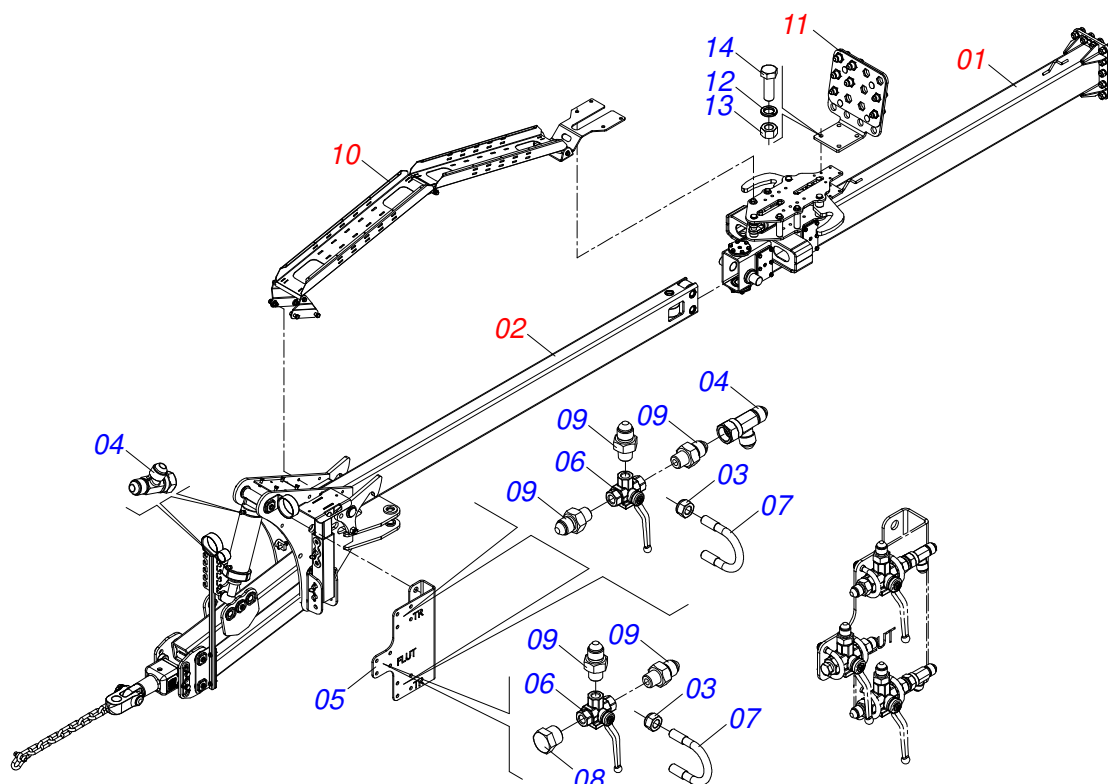


Item	Code	Description	See page	QT
01	0531051207	REAR HEADER 2770	8	01
02	0531050962	SEMI-ASSEMBLED FRONT HEADER	11	01
03	0503013357	3/8 SELF-ADJUSTING NUT		12
04	0503062180	T ADAPTER WITH ROTATING NUT		04
05	0591018009	REGISTRATION PLATE		01
06	0503016612	VALVE		03
07	0551019884	45 X 50 X 3/8 FASTENER		06
08	0591010871	PLUG R3/8 BSPT		01
09	0571013798	3/4" UNF X 3/8 NPT NIPPLE		08
10	0531051182	TRACK ASSEMBLY	17	01
11	0531050970	PANEL NIPLES	18	01
12	0503010019	1/2" SPRING WASHER		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04

REAR HEADER

0521059468

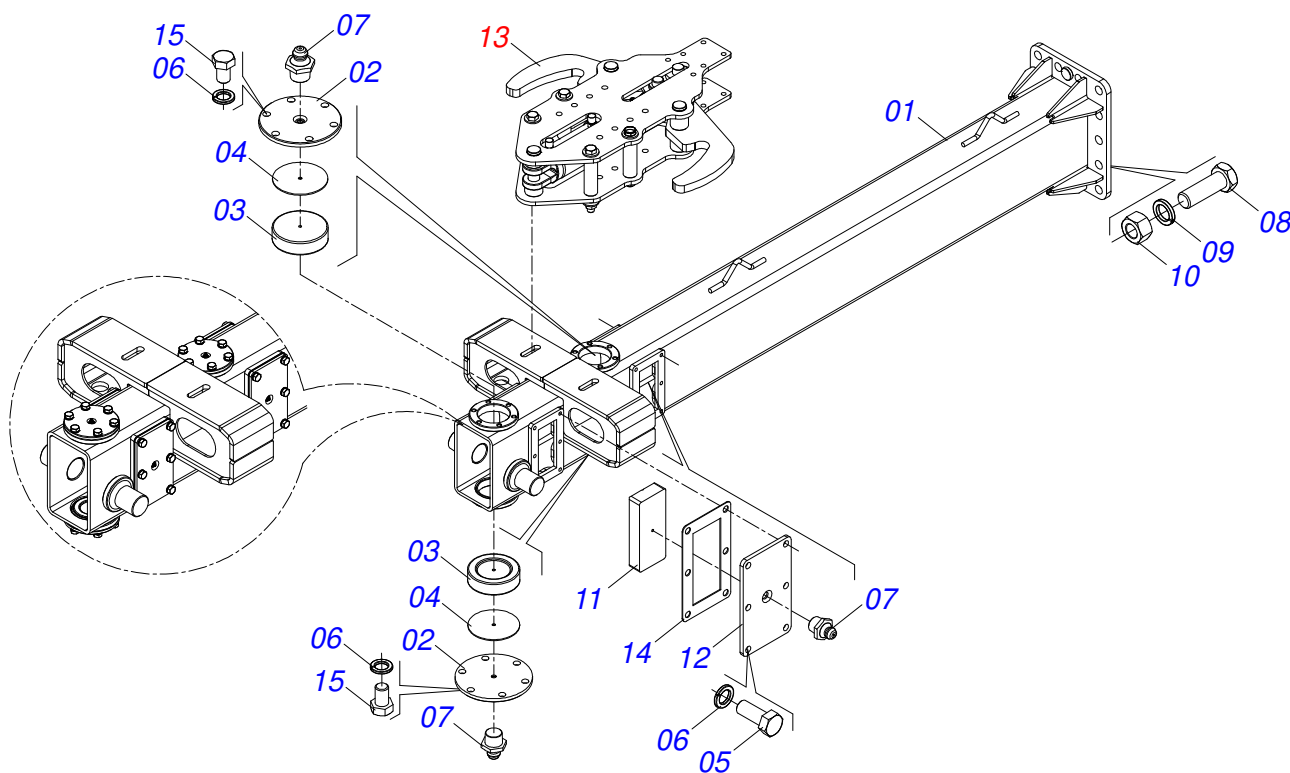


Item	Code	Description	See page	QT
01	0531061435	REAR HEAD BODY		01
02	0591015434	NYLON ADJUSTABLE BACK HEAD		04
03	0591015433	HEADER SUPPORT		04
04	0591015533	ADJUSTMENT SUPPORT		04
05	0503014007	1/2" X 1-1/4" BOLT		24
06	0503010019	1/2" SPRING WASHER		48
07	0503010002	1800 GREASE FITTING		08
08	0501010276	BOLT		14
09	0503010012	1" SPRING WASHER		14
10	0503012182	1" NUT		14
11	0591015435	NYLON ADJUSTMENT REGULATOR GUIDE		04
12	0591015432	HEAD ADJUSTMENT SUPPORT PLATE		04
13	0521059454	SIDE ARM LOCK ASSY	9	01
14	0591015431	HEADER ADJUSTMENT SUPPORT		04
15	0503011401	1/2" X 3/4" BOLT		24

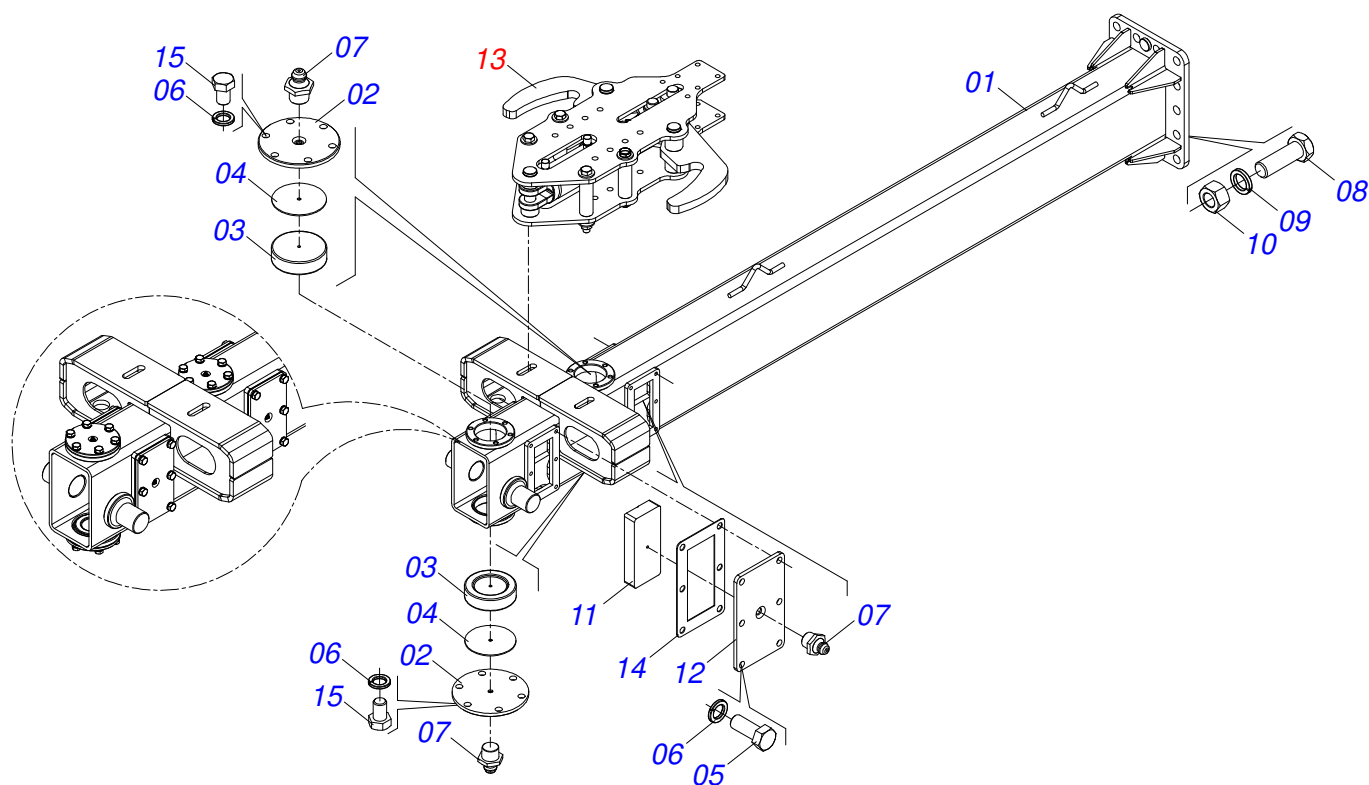


Item	Code	Description	See page	QT
01	0531062310	REAR HEAD BODY		01
02	0591015434	NYLON ADJUSTABLE BACK HEAD		04
03	0591015433	HEADER SUPPORT		04
04	0591015533	ADJUSTMENT SUPPORT		04
05	0503014007	1/2" X 1-1/4" BOLT		24
06	0503010019	1/2" SPRING WASHER		48
07	0503010002	1800 GREASE FITTING		08
08	0501010276	BOLT		14
09	0503010012	1" SPRING WASHER		14
10	0503012182	1" NUT		14
11	0591015435	NYLON ADJUSTMENT REGULATOR GUIDE		04
12	0591015432	HEAD ADJUSTMENT SUPPORT PLATE		04
13	0521059454	SIDE ARM LOCK ASSY	9	01
14	0591015431	HEADER ADJUSTMENT SUPPORT		04
15	0503011401	1/2" X 3/4" BOLT		24

SIDE ARM LOCK ASSY


0521059454

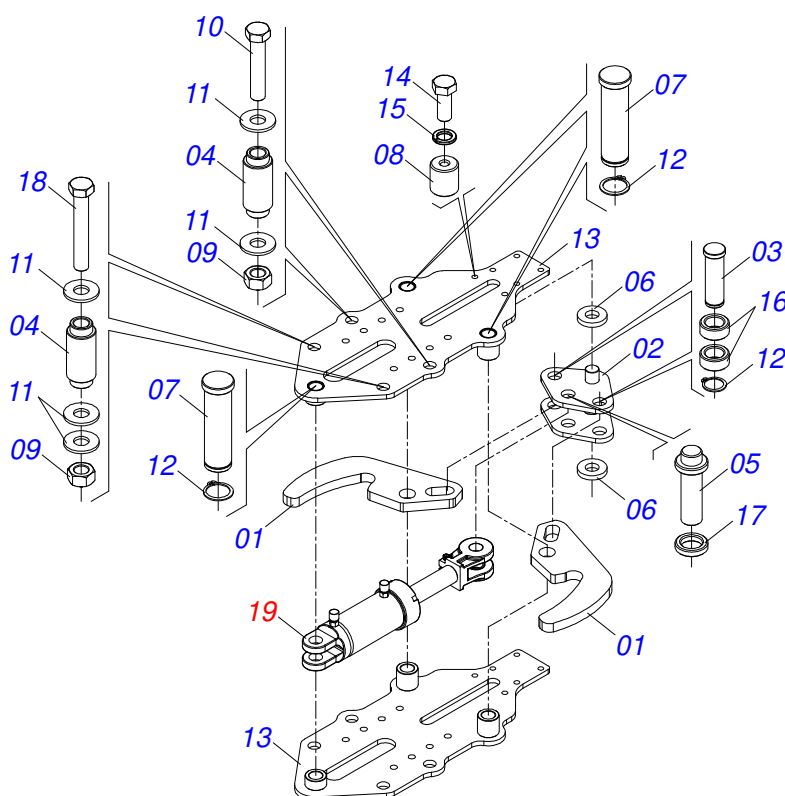

Item	Code	Description	See page	QT
01	0591015326	LATERAL FRAME LOCK		02
02	0531061411	STABILIZER ASSY LOCK ARM		01
03	0591015327	AXLE JUNCTION		02
04	0591015328	SPACING GLOVE		04
05	0591015329	CYLINDER GUIDE AXLE		01
06	0591015330	WASHER SUPPORT		02
07	0591015332	AXLE JUNCTION LOCK		03
08	0591015333	SUPPORT GLOVE		02
09	0503019522	HEX NUT		04
10	0501010164	3/4" X 7 BOLT		02
11	0501010322	FLAT WASHER		10
12	0503010880	501032 CLAMPING RING (FOR AXLE)		05
13	0531061445	TOP PLATE WITH GLOVE		02
14	0503014007	1/2" X 1-1/4" BOLT		02
15	0503010019	1/2" SPRING WASHER		02
16	0591015341	GLOVE SUPPORT		04
17	0591015340	WASHER SUPPORT GUIDE AXIS		01
18	0511016281	3/4" X 8" BOLT		02
19	0531050017	HYDRAULIC CYLINDER 44,45 X 85,7 X 397 X 93MM	10	01

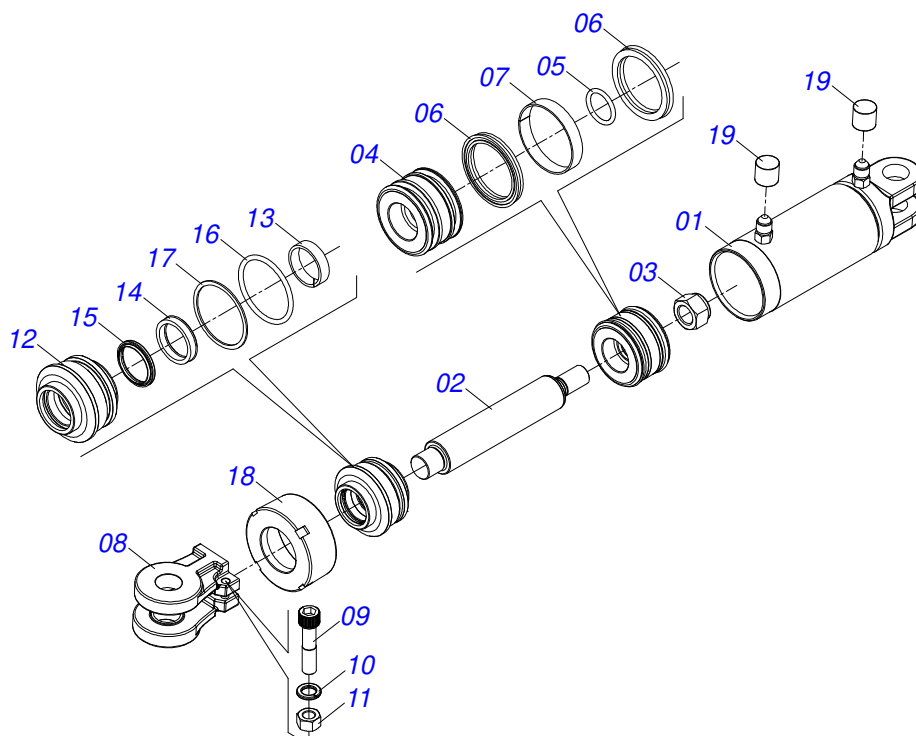

Item	Code	Description	See page	QT
01	0531061421	CASE 85,7 X 272		01
02	0591015343	EXTENSOR 44,45 X 280MM		01
03	0503010063	1" SELF-ALIGNING NUT		01
04	0502010843	1.8" X 3.4" PISTON		01
05	0503010042	2-214 N 3006-9B O'RING		01
06	0503010170	PACKING 3120 2750		02
07	0503010948	W4-3346-590 PK RING G.E		01
08	0502040747	32.54 CLEVIS CLAMP		01
09	0503011094	3/8" X 2" BOLT		01
10	0503010025	3/8 SPRING WASHER		01
11	0503010026	3/8" NUT		01
12	0502010781	RING SUPPORT		01
13	0503010949	W2-2000-500 PK RING G.E		01
14	0503010990	GASKET		01
15	0503010761	D-1750 SCRAPER RING		01
16	0503010976	2-336 N 3006-9B O'RING		01
17	0503011060	8-336 BACK-UP RING		01
18	0502010993	DETACHABLE COVER		01
19	0503030385	CYLINDER PLUG N-002		02

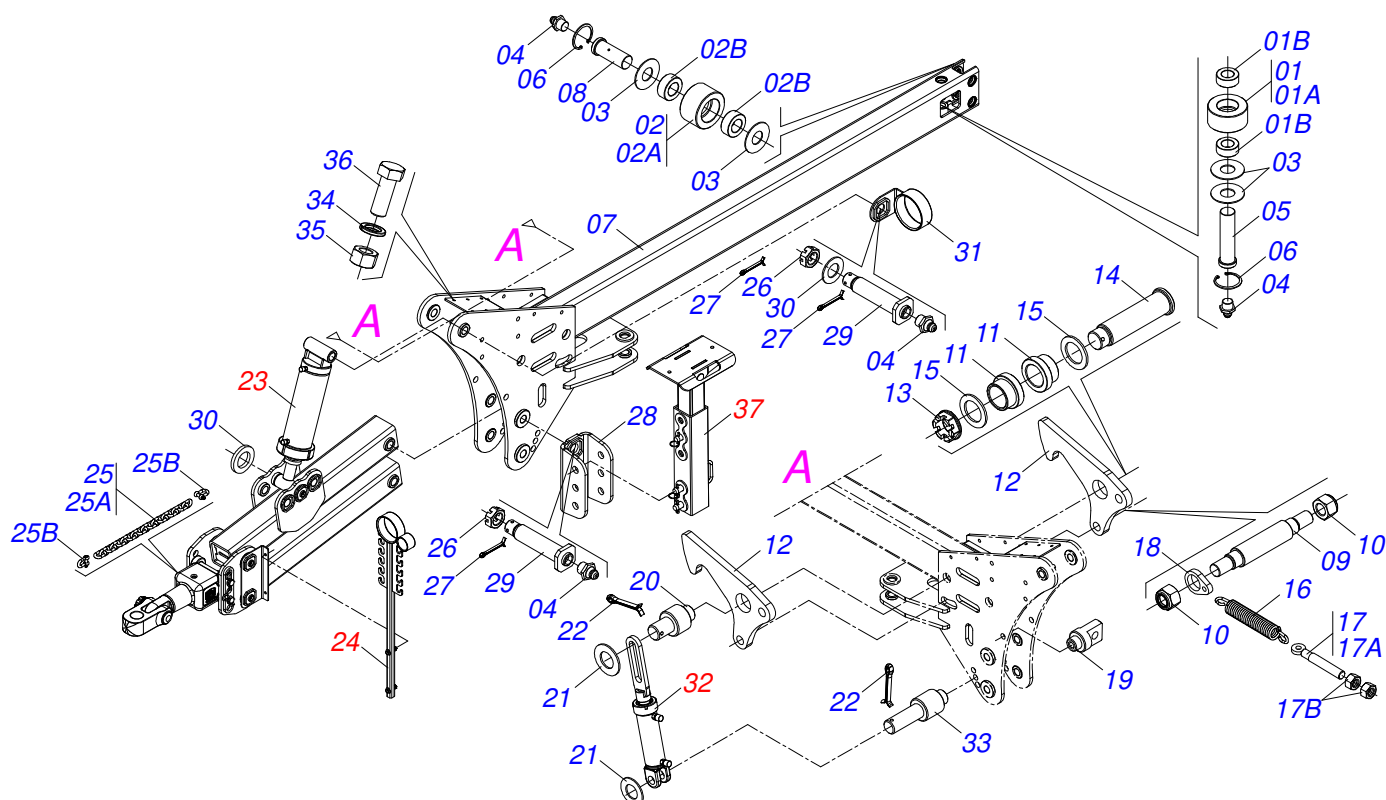


Item	Code	Description	See page	QT
01	0521059470	ROLLER HEADER		01
01A	0591015445	HEAD ROLLER BODY		01
01B	0551014862	NYLON PULLEY		02
02	0521059471	INTERNAL PULLEY HEADER		02
02A	0591015446	INTERNAL PULLEY BODY HEADER		01
02B	0551014862	NYLON PULLEY		02
03	0551014871	FLAT WASHER		06
04	0503010002	1800 GREASE FITTING		06
05	0591015447	INTERNAL PULLEY AXIS		01
06	0503011105	SEAL RING		03
07	0531061443	FRONT TELESCOPIC HEADER		01
08	0591015448	SIDE ROLLER AXLE HEADER		02
09	0591015449	AXLE LOCK HEADER		01
10	0503018754	1-8 UNC NUT		02
11	0591015450	LOCK BODY GLOVE		02
12	0591015451	BODY LOCK		02
13	0501010888	1.3/4\" 2.5/16\" CASTLE NUT		01
14	0591015452	BODY AXLE LOCK		01
15	0591015453	BACK WASHER		02
16	0503031741	1.8\" X 11.4\" 0.3\" TRACTION SPRING		01
17	0511054270	TENSIONER SPRING		01
17A	0511069520	TELESC LOCK SPRING TENSIONER		01
17B	0503010013	5/8 NUT		02
18	0591015454	SPRING HITCH LOCK		01
19	0591015455	CYLINDER GUIDE AXLE		01
20	0591015456	CYLINDER GUIDE AXLE		01
21	0521011132	FLAT WASHER		02
22	0503010131	3/16\" X 1-1/2\" COTTERPIN		02
23	0521059465	MOUNTED PANTOGRAPHIC HEADER	12	01
24	0521057815	HYDRAULIC HOSE SUPPORT WITH FIXATION	14	01
25	0521058345	SAFETY CHAIN WITH SHACKLE		01


SEMI-ASSEMBLED FRONT HEADER

0531050962


Item	Code	Description	See page	QT
25A	0503014120	CHAIN		01
25B	0503014321	CABLE STEEL SHACKLE		02
26	0503011052	1.1/4" X 0.77" CASTLE NUT		03
27	0503010038	3/16 X 2 COTTERPIN		03
28	0531060748	REST SUPPORT		01
29	0531060746	AXIS 278 TELESCOPIC HEADER		03
30	0591013764	FLAT WASHER 39 X 65 X 8,00 ZN		02
31	0531060747	TELESCOPIC HOSE GUIDE		01
32	0521057739	HYDRAULIC CYLINDER 38,10 X 63,50 X 397 X 126	15	01
33	0591015457	CYLINDER GUIDE AXLE		01
34	0503010019	1/2" SPRING WASHER		04
35	0503010060	1/2 UNC G.5 ZN HEX NUT		04
36	0503018701	SCREW 1/2 UNC X 1.3/4 CS G.5 ZN		04
37	0521059886	SEMI-ASSEMBLED REST	16	01

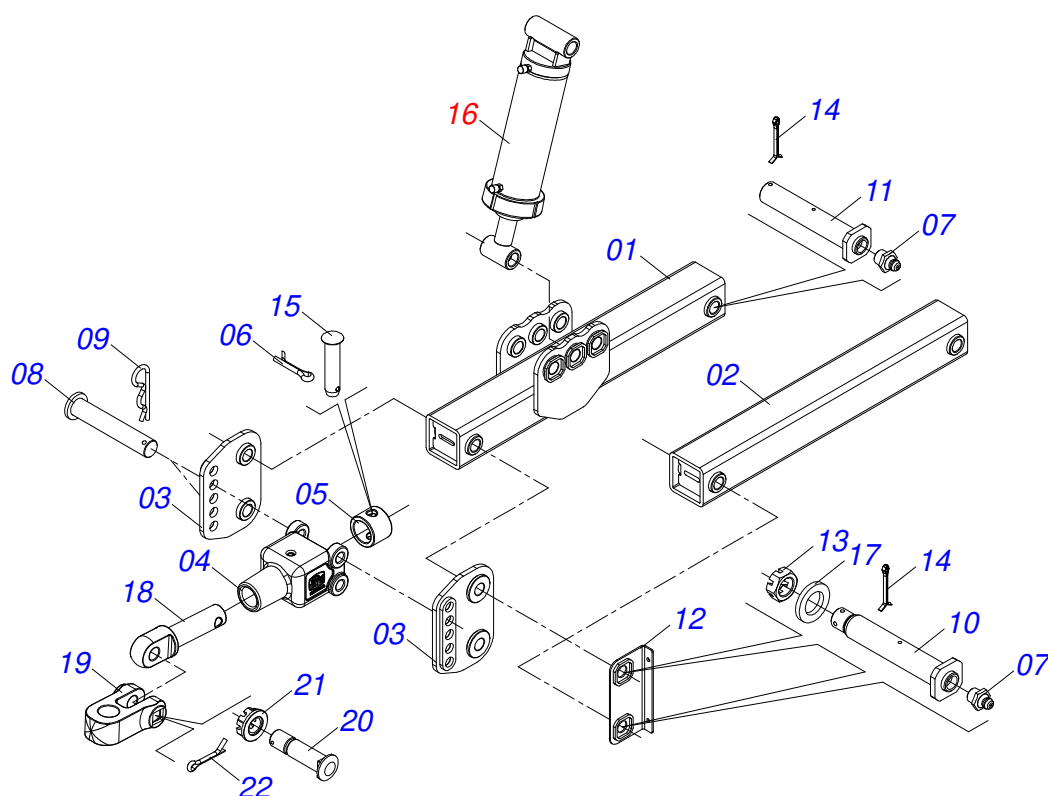


Item	Code	Description	See page	QT
01	0531061422	SUPERIOR ARM PANTOGRAPHIC HEADER		01
02	0531061759	LOWER ARM PANTOGRAPHIC HEADER		01
03	0531060745	PANTOGRAPHIC ARM EAR		02
04	0502040864	GEAR BOX WITH REGULATOR		01
05	1902040327	LOCK SLEEVE		01
06	0503010523	1/4" X 2" COTTERPIN		01
07	0503010002	1800 GREASE FITTING		03
08	0521063432	LOCK AXLE		02
09	0503031035	HITCH PIN CLIP		02
10	0531060746	AXIS 278 TELESCOPIC HEADER		02
11	0531060792	AXIS 200 TELESCOPIC HEADER		01
12	0531060776	HYDRAULIC HOSE SUPPORT FIXER		01
13	0503011052	1.1/4" X 0.77" CASTLE NUT		02
14	0503010038	3/16 X 2 COTTERPIN		03
15	0521010578	COUPLING SHAFT		01
16	0531040499	HYDRAULIC CYLINDER 50.8 X 127 X 682 X 285	13	01
17	0591013764	FLAT WASHER 39 X 65 X 8,00 ZN		02
18	0502040223	DRAWBOLT		01
19	1902040733	U COUPLING HOOK		01
20	0521012545	COUPLING SHAFT		01
21	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
22	0503010010	1/4" X 2.1/2" COTTERPIN		01

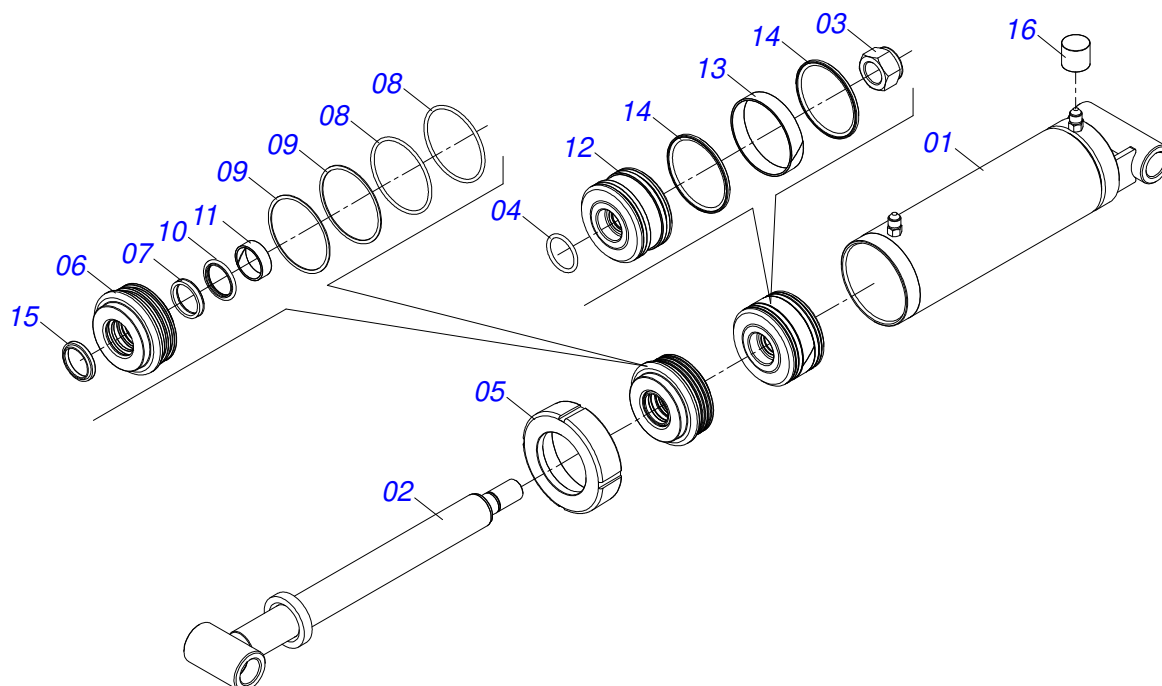


Item	Code	Description	See page	QT
01	0531061425	PANTOGRAPHIC HEAD CYLINDER CASE		01
02	0531061424	PANTOGRAPHIC HEAD CYLINDER ROD		01
03	0503010817	1.1/4" SELF LOCKING NUT		01
04	0503010345	2-218 N 3006-9B O'RING		01
05	0502010382	5" END CAP		01
06	0581010353	RING SUPPORT		01
07	0503018026	1870-2000-375 B GASKET		01
08	0503011453	O'RING		02
09	0503018152	O'RING		02
10	0503018024	RING BS		01
11	0503018025	RING GUIDE		01
12	0581010354	PISTON		01
13	0503018150	RING GUIDE		01
14	0503018151	RING BS		02
15	0503010039	D-2000 SCRAPER RING		01
16	0503030385	CYLINDER PLUG N-002		02

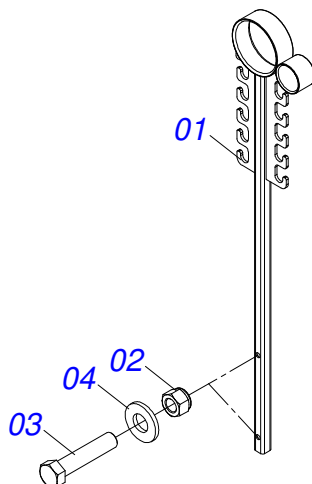


Item	Code	Description	See page	QT
01	0531060794	HYDRAULIC HOSE SUPPORT		01
02	0503015490	SELF-LOCKING NUT 7/16		02
03	0503011173	7/16" X 2" BOLT		02
04	0501010937	13,50 X 28 X 3,00 FLAT WASHER		02

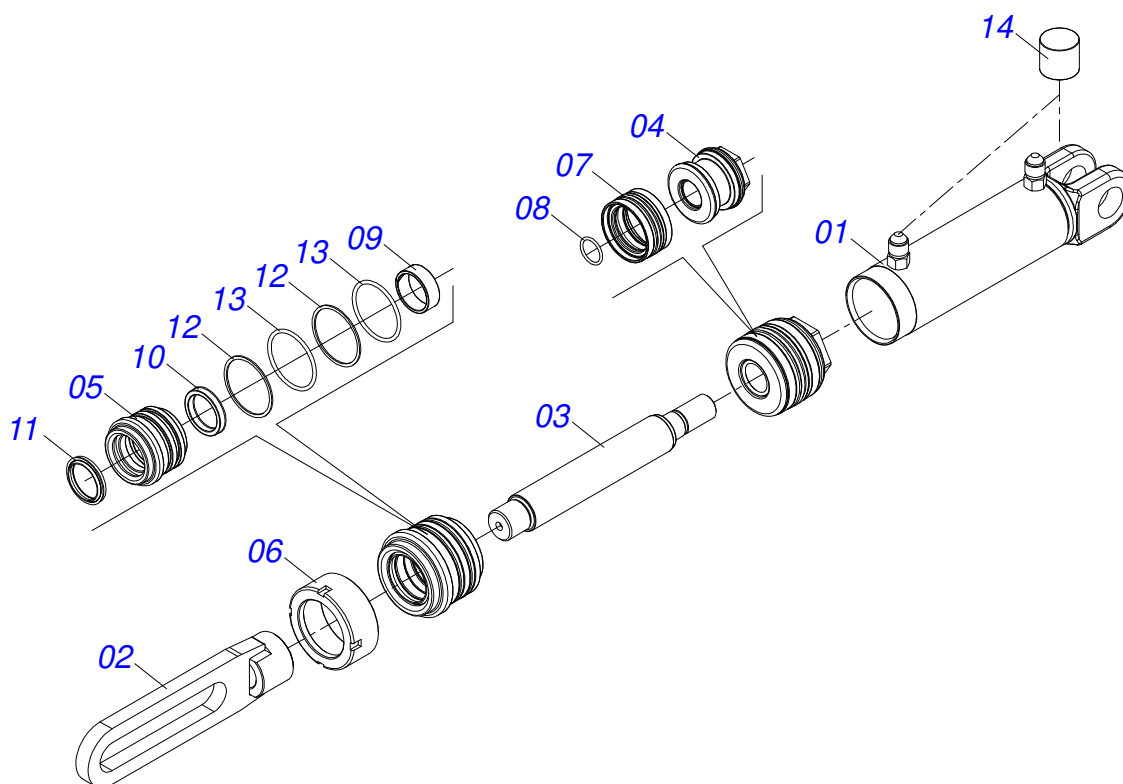

Item	Code	Description	See page	QT
01	0531060718	CASE 63,50 X 285MM		01
02	0531060719	GUIA CILINDRO		01
03	0591013120	BODY STEM 38.10 X 280		01
04	0502012837	PISTON		01
05	0581010668	RING SUPPORT		01
06	0502010471	63,50 MOBILE CAP		01
07	0503018005	RING		01
08	0503011109	2-119 N 3006-9B O'RING		01
09	0503018004	RING		01
10	0503018003	GASKET		01
11	0503010163	D-1500 SCRAPER RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0503030385	CYLINDER PLUG N-002		02

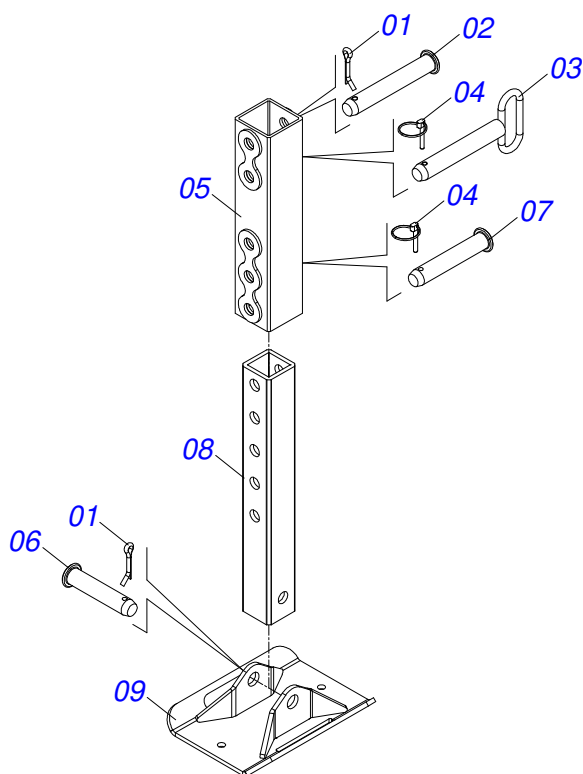


Item	Code	Description	See page	QT
01	0503010571	1/4" X 1.1/2 COTTERPIN		02
02	0521010784	COUPLING SHAFT		01
03	0531060758	AXLE JUNCTION 25.4 X 150 WITH HANDLE		01
04	0503030085	LOCK PIN		02
05	0531060667	REST		01
06	0521010580	COUPLING SHAFT		01
07	0521012533	COUPLING SHAFT		01
08	0591016111	TUBE 80 X 80 X 9,52 X 600MM		01
09	0531061640	REST		01

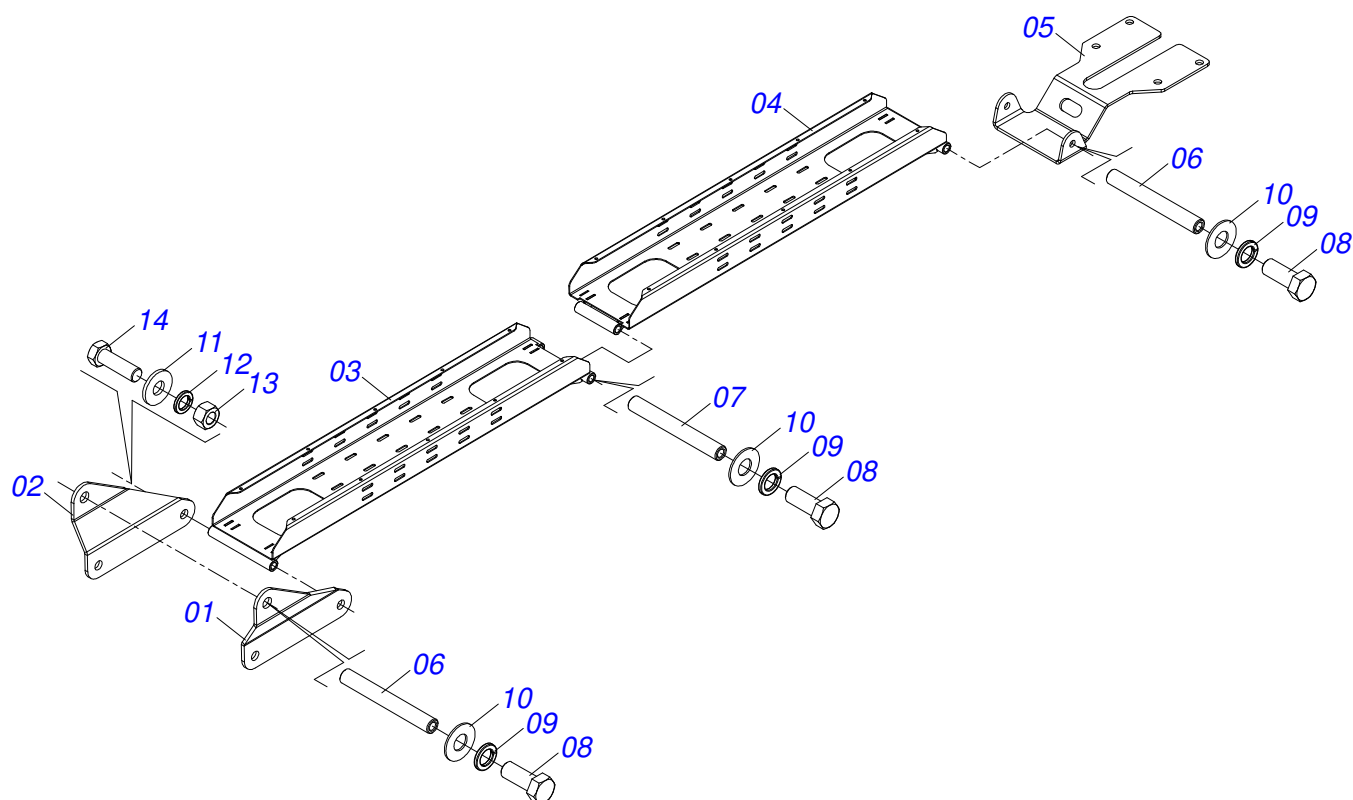


Item	Code	Description	See page	QT
01	0591018020	RIGHT SIDE SUPPORT		01
02	0591018021	LEFT SIDE SUPPORT		01
03	0531062201	REAR RAIL		01
04	0531062202	FRONT GUTTER		01
05	0591018022	GUTTER SUPPORT		01
06	0591018018	ARTICULATOR AXIS		02
07	0591018019	ARTICULATOR AXIS		01
08	0503014007	1/2" X 1-1/4" BOLT		06
09	0503010019	1/2" SPRING WASHER		06
10	0501013519	FLAT WASHER		06
11	0501012140	FLAT WASHER		04
12	0503010027	5/8 SPRING WASHER		04
13	0503010013	5/8 NUT		04
14	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		04

PANEL NIPLES


0531050970

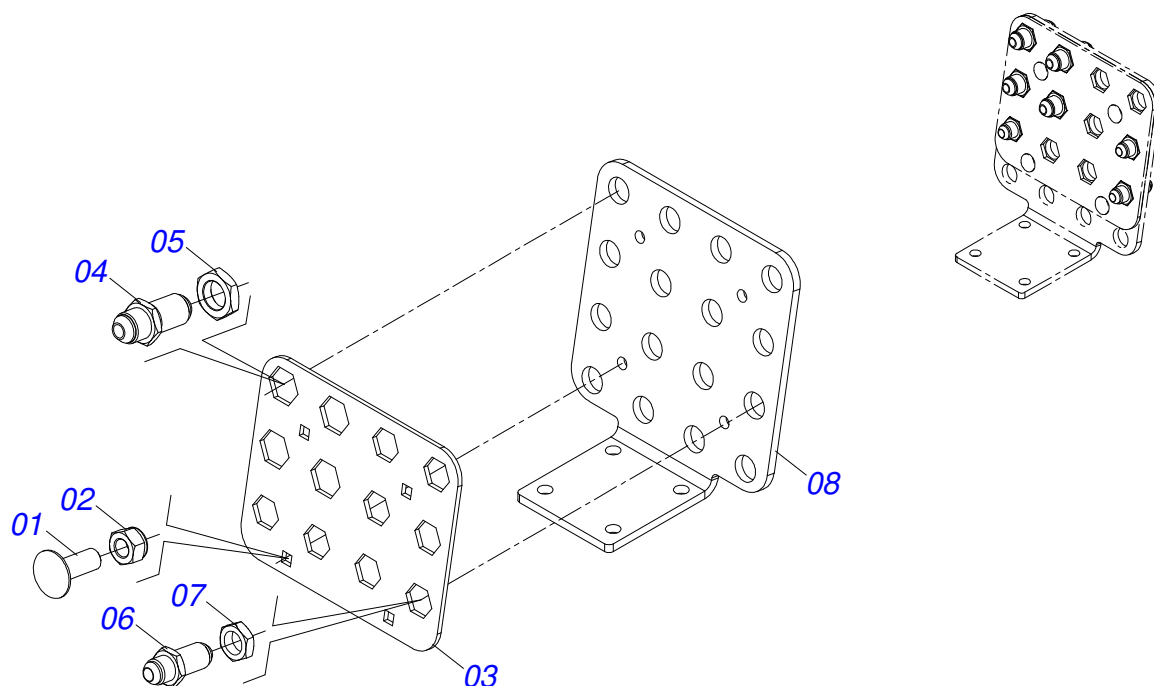


Item	Code	Description	See page	QT
01	0501011643	3/8 X 1" BOLT		04
02	0503013357	3/8 SELF-ADJUSTING NUT		04
03	0591015908	NIPLES PLATE		01
04	0591018028	NIPPLES 7/8 UNF X 7/8 UNF X 65 HEXAGONAL 1.1/8		04
05	0591018027	NIPPLE FIXING NUT R.7 / 8 UNF X 14		04
06	0541012165	3/4" NIPPLE		03
07	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		03
08	0591018026	GUTTER SUPPORT		01

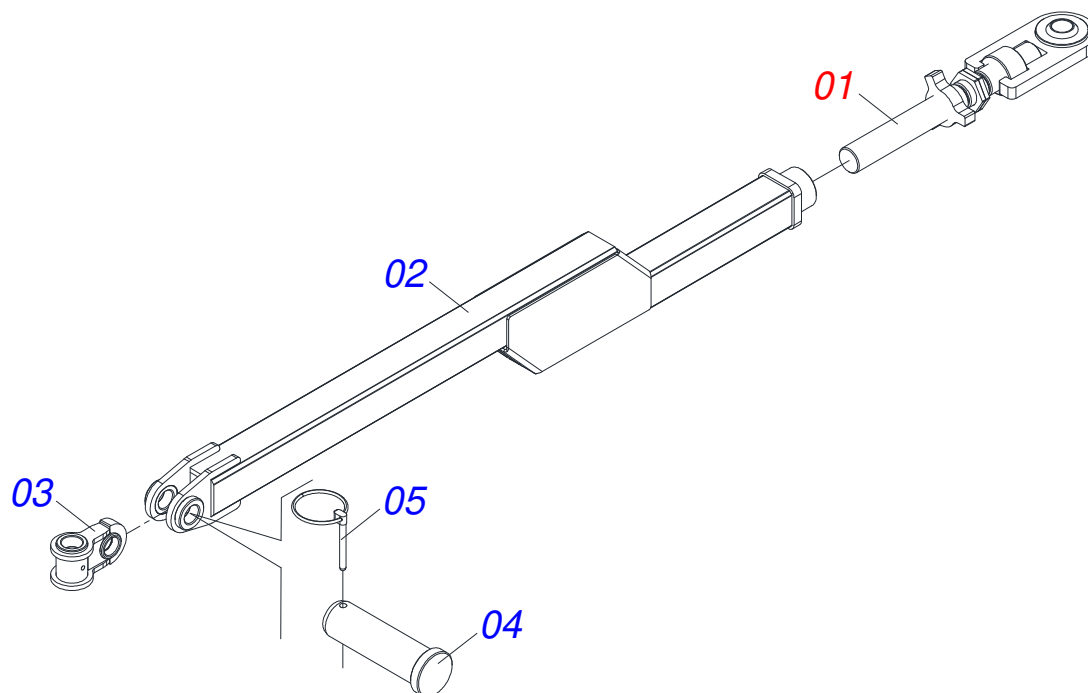


Item	Code	Description	See page	QT
01	0521057793	KNEECAP WITH RIGHT EXTENSION AXLE	21	01
02	0531061433	FRENCH HAND		01
03	0531061434	SIDE EXTENSOR EAR		01
04	0571019949	JUNCTION SHAFT		01
05	0503030119	LOCK PIN		01

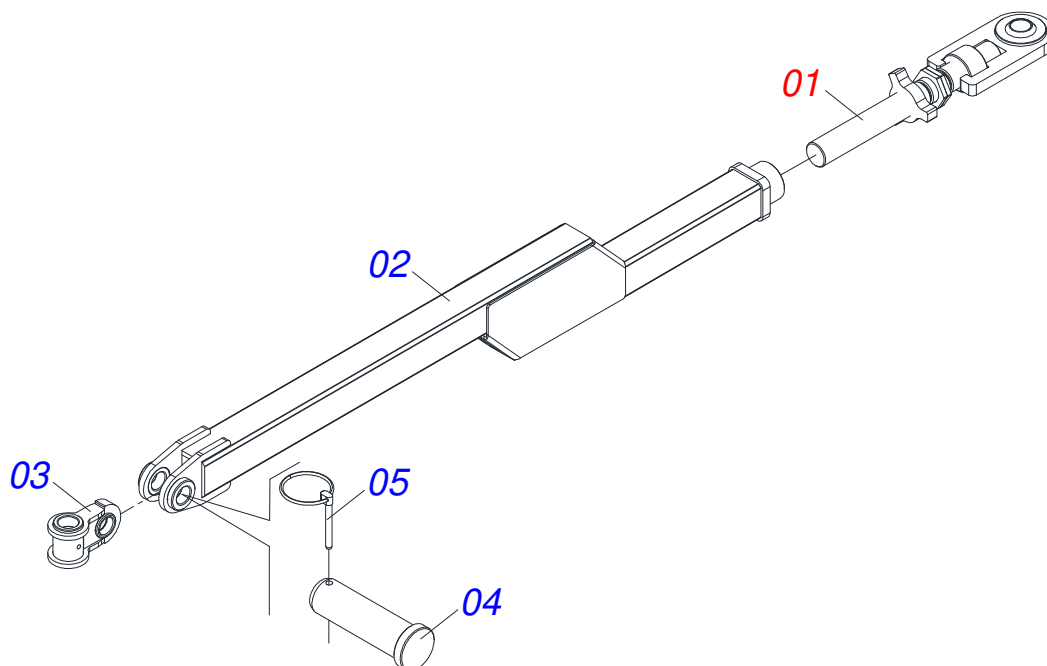

Item	Code	Description	See page	QT
01	0521057793	KNEECAP WITH RIGHT EXTENSION AXLE	21	01
02	0531062309	FRENCH HAND 3267		01
03	0531061434	SIDE EXTENSOR EAR		01
04	0571019949	JUNCTION SHAFT		01
05	0503030119	LOCK PIN		01

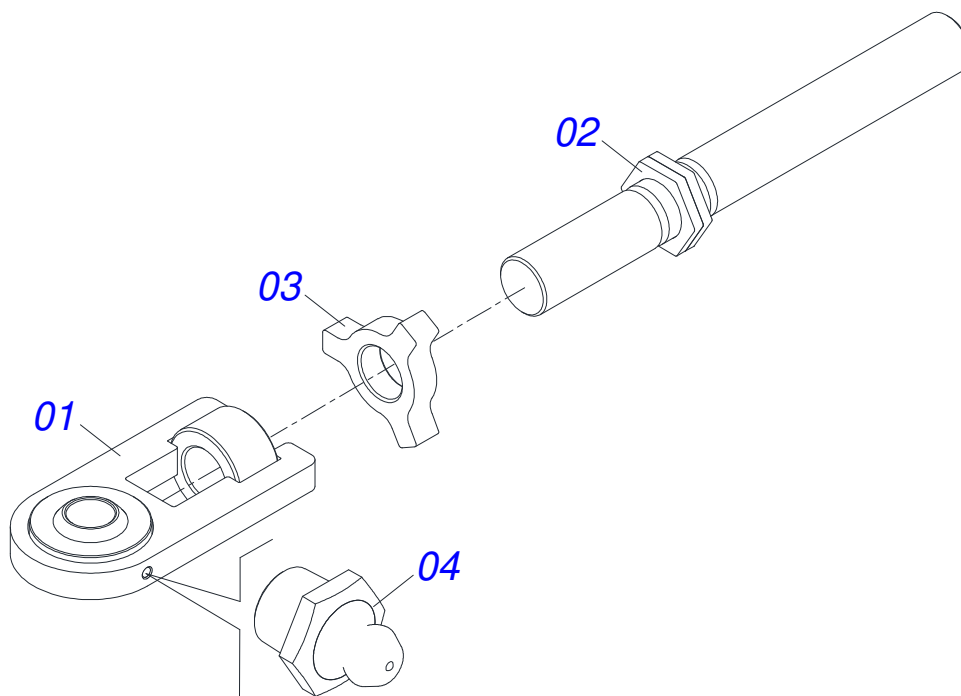


Item	Code	Description	See page	QT
01	0521062617	NUT FIXER		01
02	0531060778	EXTENSION AXLE 466 WITH DRAG		01
03	0561019879	LOCK ATTACHMENT BAR		01
04	0503010002	1800 GREASE FITTING		02

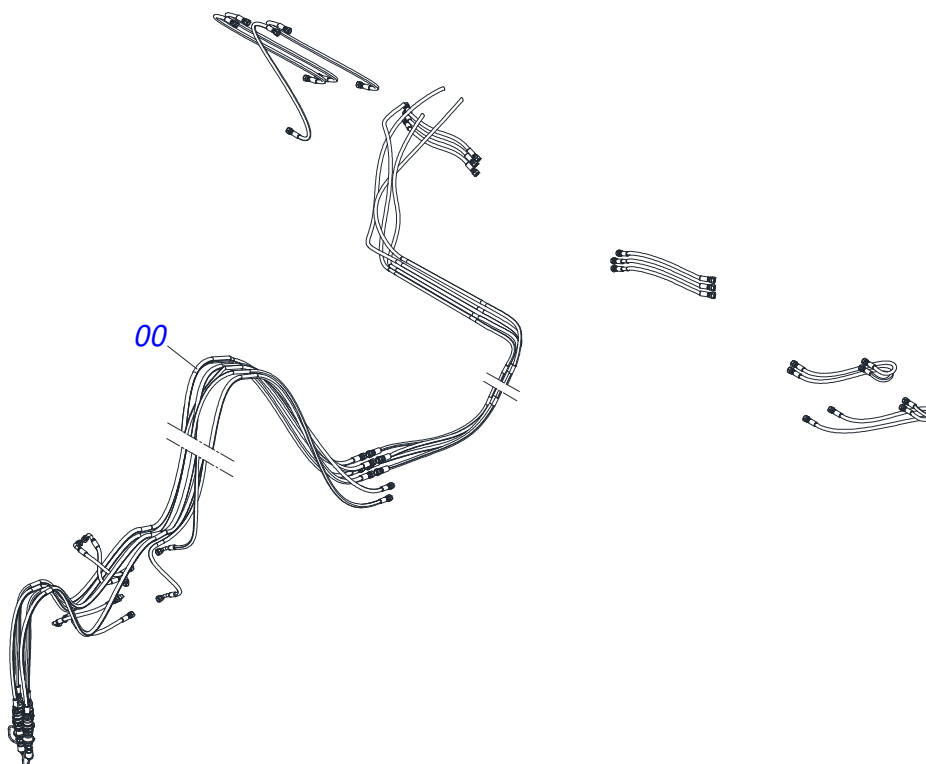


Item	Code	Description	See page	QT
01	0531051800	FULL LIFT HOSE ASSY		01
01A	0501080451	3/8" X 94.5" TR-TC HOSE ASSY		02
01B	0501080453	3/8" X 102" TR-TR HOSE ASSY		02
01C	0501080445	TR-TM HOSE ASSY		01
01D	0501080321	3/8" X 47" TR-TR HOSE ASSY		02
01E	0501080150	3/8 X 800 TR-TC HOSE		02
01F	0501080359	3/8" X 78.7" TR-TC HOSE ASSY		02
01G	0501080427	3/8" X 60" TR-TR HOSE ASSY		02
01H	0501080413	3/8" X 27" TR-TC HOSE		02
01I	0501080507	3/8" X 21.6" TR-TC HOSE ASSY		02
01J	0501080700	3/8 X 650 TC-TC HOSE		04
01K	0501080842	HOSE 1/2 X 4500 TR-TC		02
01L	0501080016	1/2 X 2800 TR-TC HOSE		01
01M	0501081041	1/2 X 2400 TR-TC HOSE		01
01N	0501080740	1/2" X 12" TC-TM HOSE ASSY		02
02	0531051801	HOSE JOINT FULL CLOSURE SET		01
02A	0501080413	3/8" X 27" TR-TC HOSE		02
02B	0501080150	3/8 X 800 TR-TC HOSE		02
02C	0501080388	3/8 X 4300 TR-TC HOSE ASSY		02
02D	0501080720	HOSE 3/8 X 3500 TR-TC		02
02E	0501080473	3/8" X 120" TC-TM HOSE		02
03	0531051802	FULL SWING HOSE ASSY		01
03A	0501080451	3/8" X 94.5" TR-TC HOSE ASSY		04
03B	0501080413	3/8" X 27" TR-TC HOSE		02
03C	0501080348	3/8 X 1200 TR-TC HOSE		02
03D	0501080715	3/8" X 177" TR-TC HOSE ASSY		02
03E	0501080453	3/8" X 102" TR-TR HOSE ASSY		02
03F	0501080473	3/8" X 120" TC-TM HOSE		02
04	0531052024	HOSE SET 01 TURBINE COMPLETE		01
04A	0501080633	1/2 X 3500 TR-TC HOSE		02
04B	0501080720	HOSE 3/8 X 3500 TR-TC		01

Item	Code	Description	See page	QT
04C	0501080286	HOSE 1/2 X 6200 TR-TM		02
04D	0501080733	HOSE 3/8 X 6200 TR-TM		01
05	0531051812	FULL HOSES LINES		01
05A	0501082041	3/8 X 500 TR-TC HOSE		04
05B	0501080524	3/8 X 1100 TC-TC HOSE ASSY		04
05C	0501080451	3/8" X 94.5" TR-TC HOSE ASSY		04
05D	0501080348	3/8 X 1200 TR-TC HOSE		02
05E	0501081254	3/8" X 900 TR-TC HOSE		04
05F	0501080715	3/8" X 177" TR-TC HOSE ASSY		02
05G	0501080469	3/8" X 98.42" TR-TR HOSE ASSY		02
06	0531051803	FULL HOSE LOCKS ASSY		01
06A	0501080720	HOSE 3/8 X 3500 TR-TC		02
06B	0501080301	3/8 X 1300 TC-TC HOSE		02
06C	0501080465	3/8 X 400 TR-TC HOSE ASSY		01
06D	0501080445	TR-TM HOSE ASSY		01
06E	0501080150	3/8 X 800 TR-TC HOSE		01
07	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		06
08	0503034494	HYDRAULIC HOSE GRIP (BLUE)		04
09	0503034495	HYDRAULIC HOSE GRIP (RED)		04
10	0503034492	HYDRAULIC HOSE GRIP (BLACK)		04
11	0503018952	PLASTIC BOLT		54

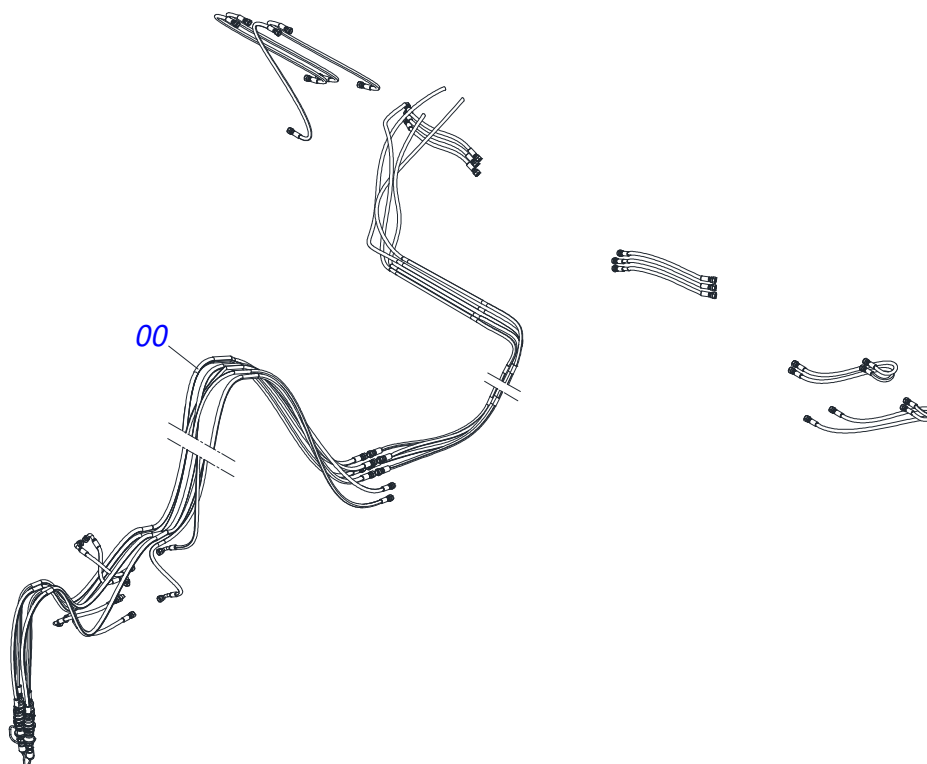


Item	Code	Description	See page	QT
01	0531051800	FULL LIFT HOSE ASSY		01
01A	0501080451	3/8" X 94.5" TR-TC HOSE ASSY		02
01B	0501080453	3/8" X 102" TR-TR HOSE ASSY		02
01C	0501080445	TR-TM HOSE ASSY		01
01D	0501080321	3/8" X 47" TR-TR HOSE ASSY		02
01E	0501080150	3/8 X 800 TR-TC HOSE		02
01F	0501080359	3/8" X 78.7" TR-TC HOSE ASSY		02
01G	0501080427	3/8" X 60" TR-TR HOSE ASSY		02
01H	0501080413	3/8" X 27" TR-TC HOSE		02
01I	0501080507	3/8" X 21.6" TR-TC HOSE ASSY		02
01J	0501080700	3/8 X 650 TC-TC HOSE		04
01K	0501080842	HOSE 1/2 X 4500 TR-TC		02
01L	0501080016	1/2 X 2800 TR-TC HOSE		01
01M	0501081041	1/2 X 2400 TR-TC HOSE		01
01N	0501080740	1/2" X 12" TC-TM HOSE ASSY		02
02	0531051801	HOSE JOINT FULL CLOSURE SET		01
02A	0501080413	3/8" X 27" TR-TC HOSE		02
02B	0501080150	3/8 X 800 TR-TC HOSE		02
02C	0501080388	3/8 X 4300 TR-TC HOSE ASSY		02
02D	0501080720	HOSE 3/8 X 3500 TR-TC		02
02E	0501080473	3/8" X 120" TC-TM HOSE		02
03	0531051802	FULL SWING HOSE ASSY		01
03A	0501080451	3/8" X 94.5" TR-TC HOSE ASSY		04
03B	0501080413	3/8" X 27" TR-TC HOSE		02
03C	0501080348	3/8 X 1200 TR-TC HOSE		02
03D	0501080715	3/8" X 177" TR-TC HOSE ASSY		02
03E	0501080453	3/8" X 102" TR-TR HOSE ASSY		02
03F	0501080473	3/8" X 120" TC-TM HOSE		02
04	0531051803	FULL HOSE LOCKS ASSY		01
04A	0501080720	HOSE 3/8 X 3500 TR-TC		02
04B	0501080301	3/8 X 1300 TC-TC HOSE		02

Item	Code	Description	See page	QT
04C	0501080465	3/8 X 400 TR-TC HOSE ASSY		01
04D	0501080445	TR-TM HOSE ASSY		01
04E	0501080150	3/8 X 800 TR-TC HOSE		01
05	0531051804	HOSE LINES ASSY KIT		01
05A	0501080451	3/8" X 94.5" TR-TC HOSE ASSY		04
05B	0501080055	3/8 X 1000 TR-TC HOSE		04
05C	0501080302	3/8 X 1400 TR-TC HOSE		02
05D	0501080485	3/8 X 1100 TR-TC HOSE		04
05E	0501080065	3/8 X 1200 TC-TC HOSE		04
05F	0501080715	3/8" X 177" TR-TC HOSE ASSY		02
05G	0501080469	3/8" X 98.42" TR-TR HOSE ASSY		02
06	0531052024	HOSE SET 01 TURBINE COMPLETE		01
06A	0501080633	1/2 X 3500 TR-TC HOSE		02
06B	0501080720	HOSE 3/8 X 3500 TR-TC		01
06C	0501080286	HOSE 1/2 X 6200 TR-TM		02
06D	0501080733	HOSE 3/8 X 6200 TR-TM		01
07	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		06
08	0503034494	HYDRAULIC HOSE GRIP (BLUE)		04
09	0503034495	HYDRAULIC HOSE GRIP (RED)		04
10	0503034492	HYDRAULIC HOSE GRIP (BLACK)		04
11	0503018952	PLASTIC BOLT		54

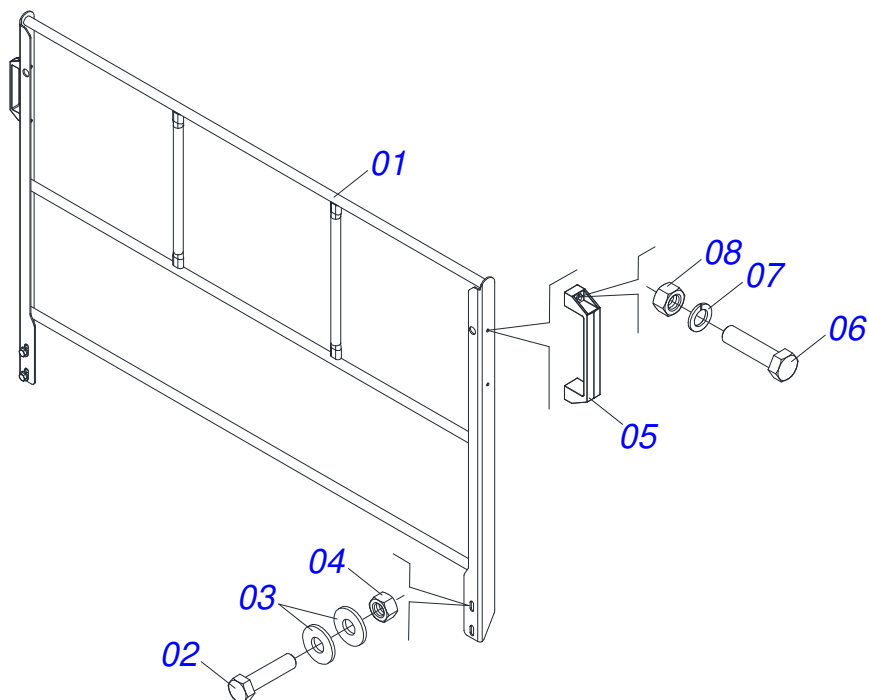


Item	Code	Description	See page	QT
01	0531062139	SIDE HANDRAIL 1800		01
02	0503014007	1/2" X 1-1/4" BOLT		04
03	0501010937	13,50 X 28 X 3,00 FLAT WASHER		08
04	0503011336	1/2" HEX SELF ADJUSTING NUT		04
05	0503011957	NYLON LUG		02
06	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04

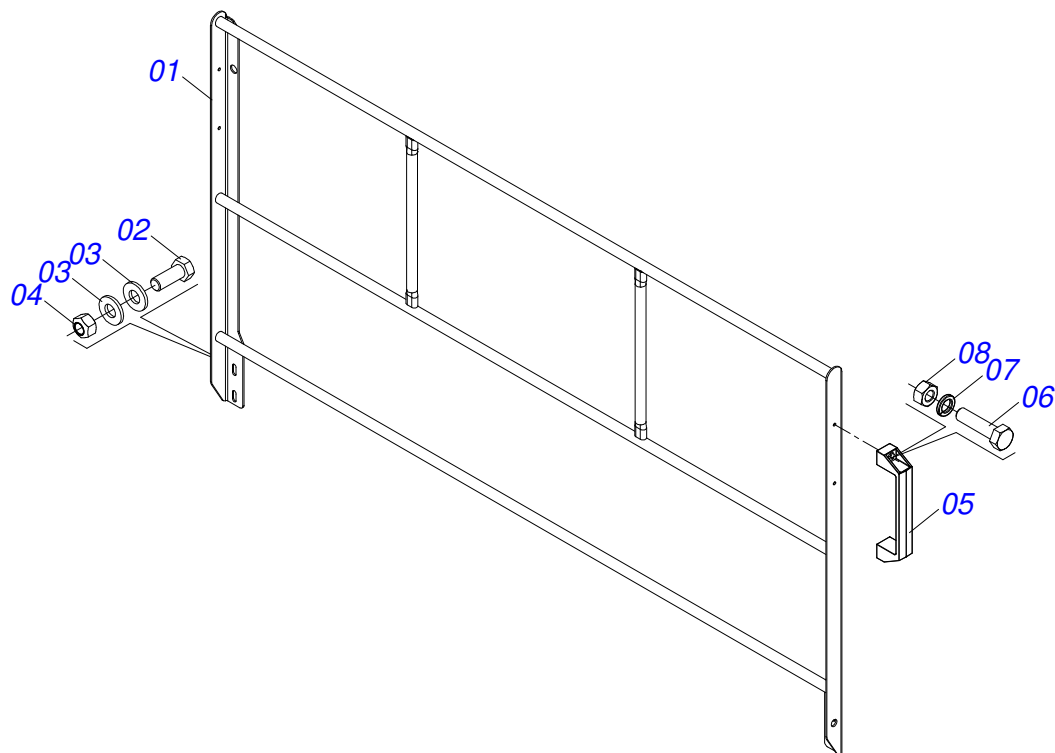


Item	Code	Description	See page	QT
01	0531061863	SIDE HANDRAIL 2150		01
02	0503014007	1/2" X 1-1/4" BOLT		04
03	0501010937	13,50 X 28 X 3,00 FLAT WASHER		08
04	0503011336	1/2" HEX SELF ADJUSTING NUT		04
05	0503011957	NYLON LUG		02
06	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04

ASSY RIGHT LADDER


0531050908

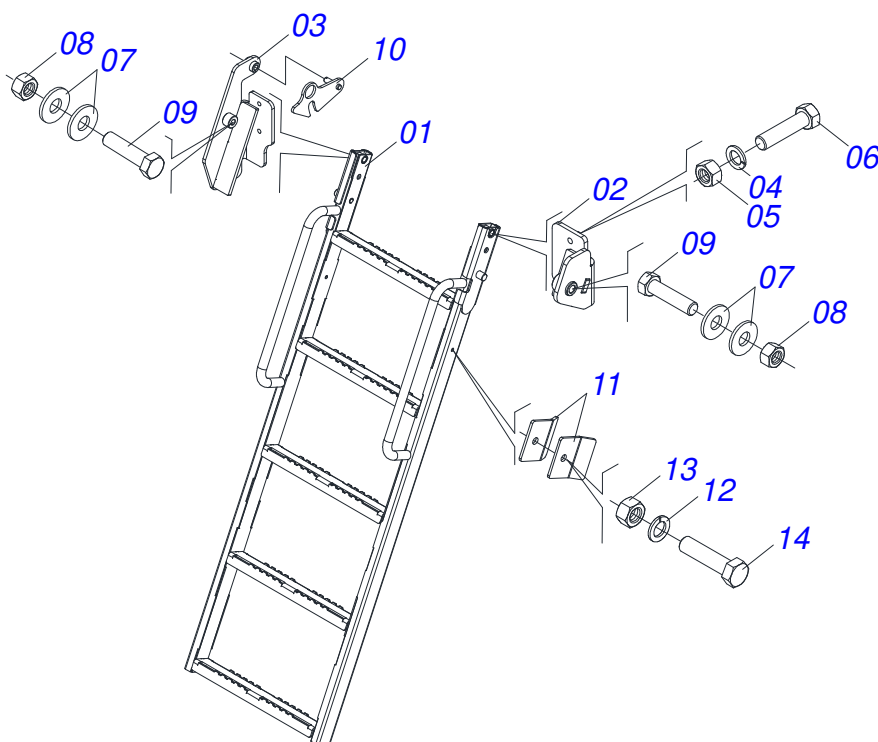


Item	Code	Description	See page	QT
01	0531061615	MOBILE LADDER		01
02	0531062142	LOWER RIGHT LADDER SUPPORT		01
03	0531062143	HIGHER LEFT STAIRCASE SUPPORT		01
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0501010937	13,50 X 28 X 3,00 FLAT WASHER		04
08	0503010589	1/2" UNC SELF ADJUSTING NUT		02
09	0503010752	1/2" X 3.1/2" BOLT		02
10	0511065678	STAIR RIGHT LOCK		01
11	0591016037	SENSOR LOCK ROD		02
12	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
13	0503010337	5/16" NUT		01
14	0503010397	5/16" X 1-3/4" BOLT		01

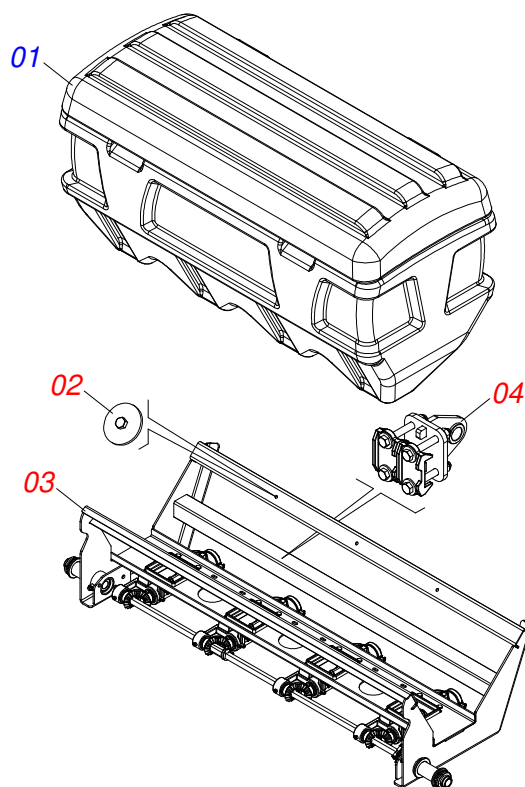


Item	Code	Description	See page	QT
01	0503062362	FERTILIZER HOPPER		01
02	0521051407	FERTILIZER HOPPER FIXER	29	06
03	0531050939	RIGHT SIDE SUPPORT 4B WITH DISTRIBUTORS	30	01
04	0531050918	TOP SUPPORT MOUNTED LIFT EXTENSOR	31	01

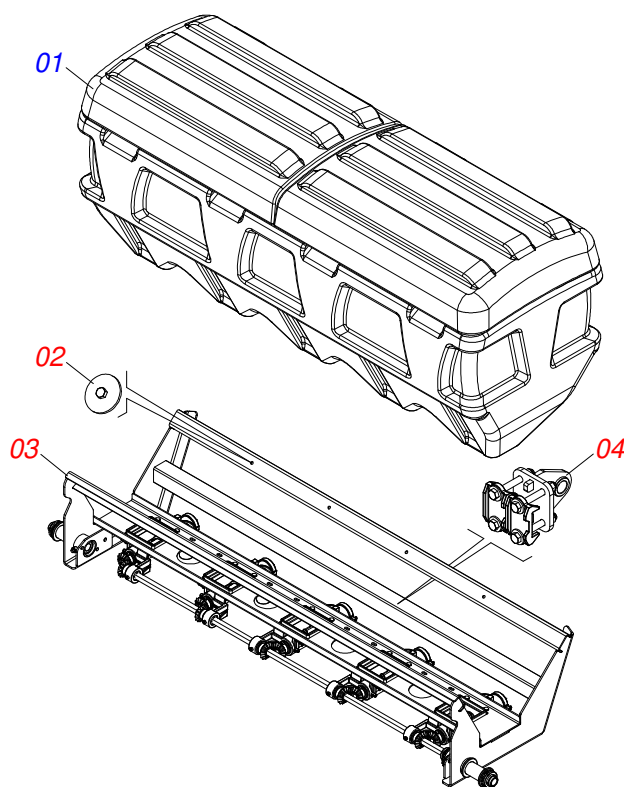


Item	Code	Description	See page	QT
01	0503062391	FERTILIZER HOPPER		01
02	0521051407	FERTILIZER HOPPER FIXER	29	08
03	0531051178	RIGHT SIDE SUPPORT 5B WITH DISTRIBUTORS		01
04	0531050918	TOP SUPPORT MOUNTED LIFT EXTENSOR	31	02

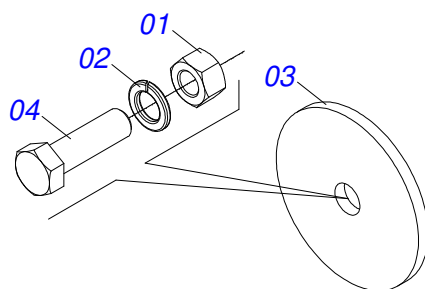

Item	Code	Description	See page	QT
01	0503012531	3/8" INOX NUT		01
02	0503012535	3/8" SPRING WASHER		01
03	0571019051	FIXER HOPPER WASHER		01
04	0503013751	3/8 UNC X 1.1/4 BOLT		01

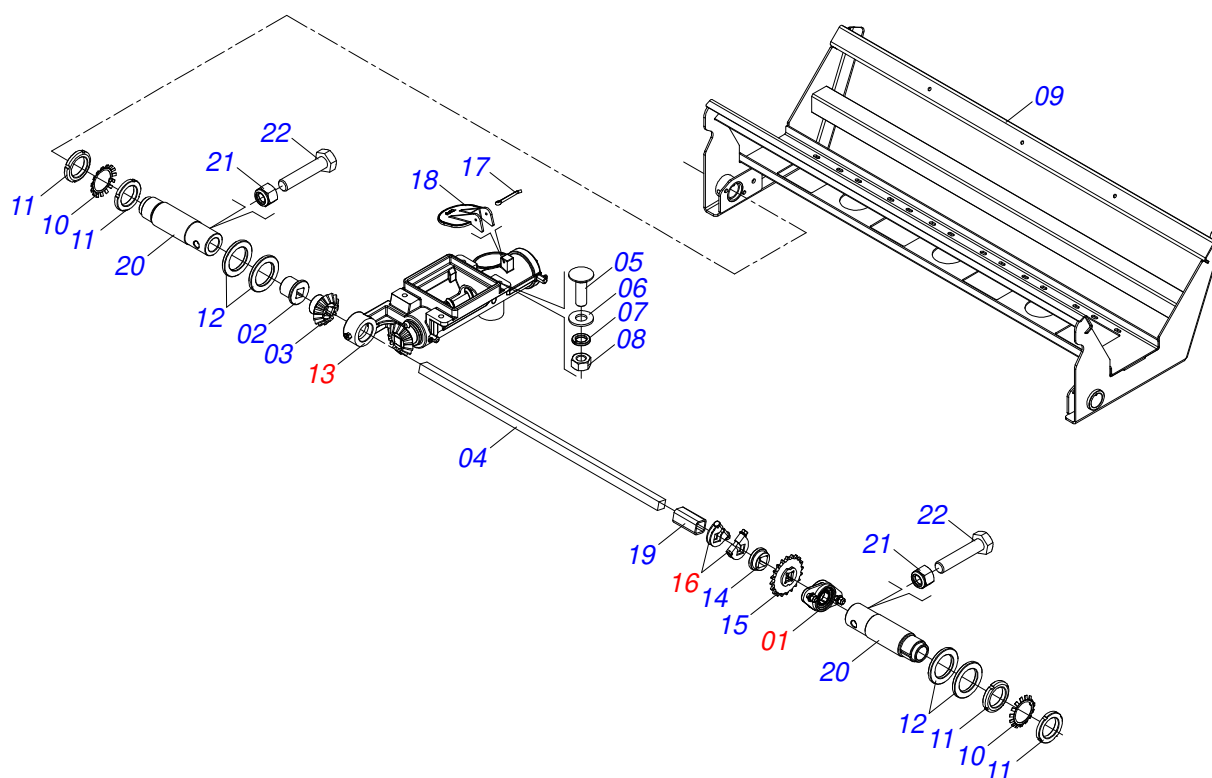


Item	Code	Description	See page	QT
01	0521054282	BEARING	32	01
02	0503030275	AGRICULTURAL BEARING		04
03	0502012990	CONICA 14Z SQUARE GEAR		04
04	0591013305	SQUARE SHAFT 3/4 X 1530		01
05	0503011953	5/16" X 1" BOLT		16
06	0501010694	FLAT WASHER		13
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		13
08	0503010337	5/16" NUT		13
09	0531062133	SUPPORT SILO 04 MOUTH		01
10	0503010329	LOCK WASHER		02
11	0503010330	KM 9 LOCKNUT		04
12	0591015365	RING		04
13	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	34	04
14	0503030303	SUPPORT WASHER		01
15	0511065209	20Z GEAR		01
16	0501053788	3/4 SQUARE AXLE FASTENER	35	02
17	0503010362	1/8 X 1.1/4 COTTERPIN		04
18	0503034396	FERTILIZER SIDE COVER		04
19	0551018055	22,65 X 60 SLEEVE		01
20	0591017775	ARTICULATION AXIS		02
21	0503010589	1/2" UNC SELF ADJUSTING NUT		02
22	0503011140	1/2" X 3-3/4" BOLT		02

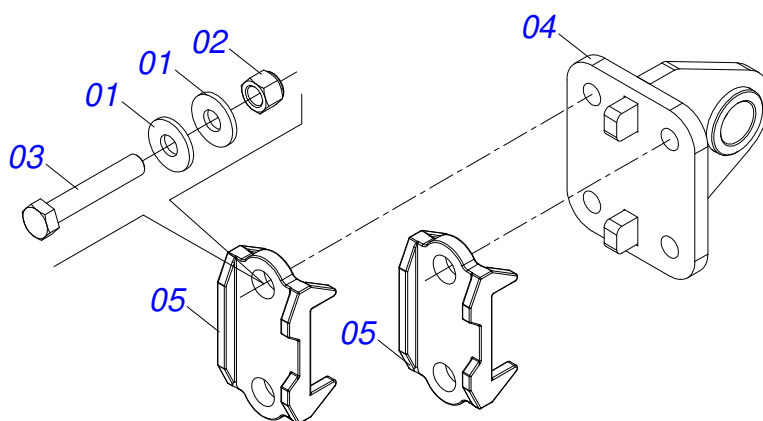


Item	Code	Description	See page	QT
01	0501012140	FLAT WASHER		08
02	0503010811	5/8" UNF SELF ADJUSTING NUT		04
03	0503018814	SCREW 5/8 UNF X 5" G.5 CS ZN		04
04	0531062173	LIFT EXTENSOR TOP SUPPORT		01
05	1902011170	FIXER		02

BEARING


0521054282

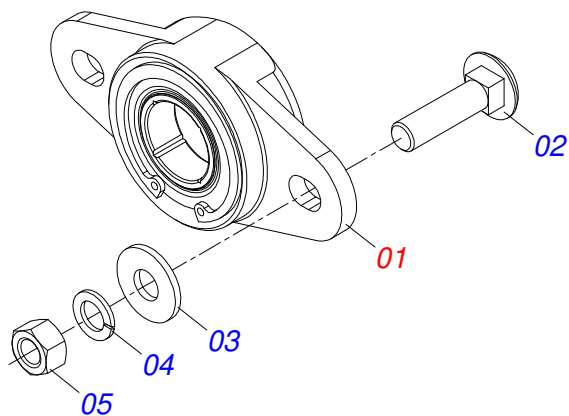


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLER	33	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

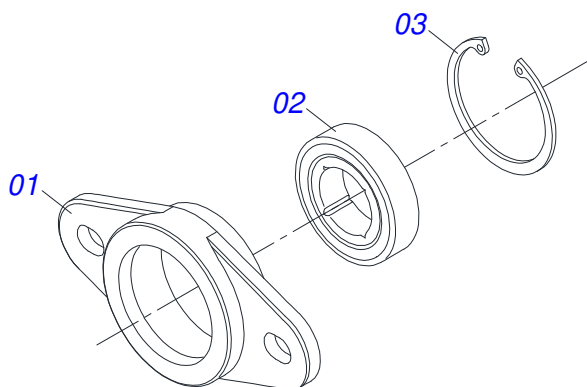

Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

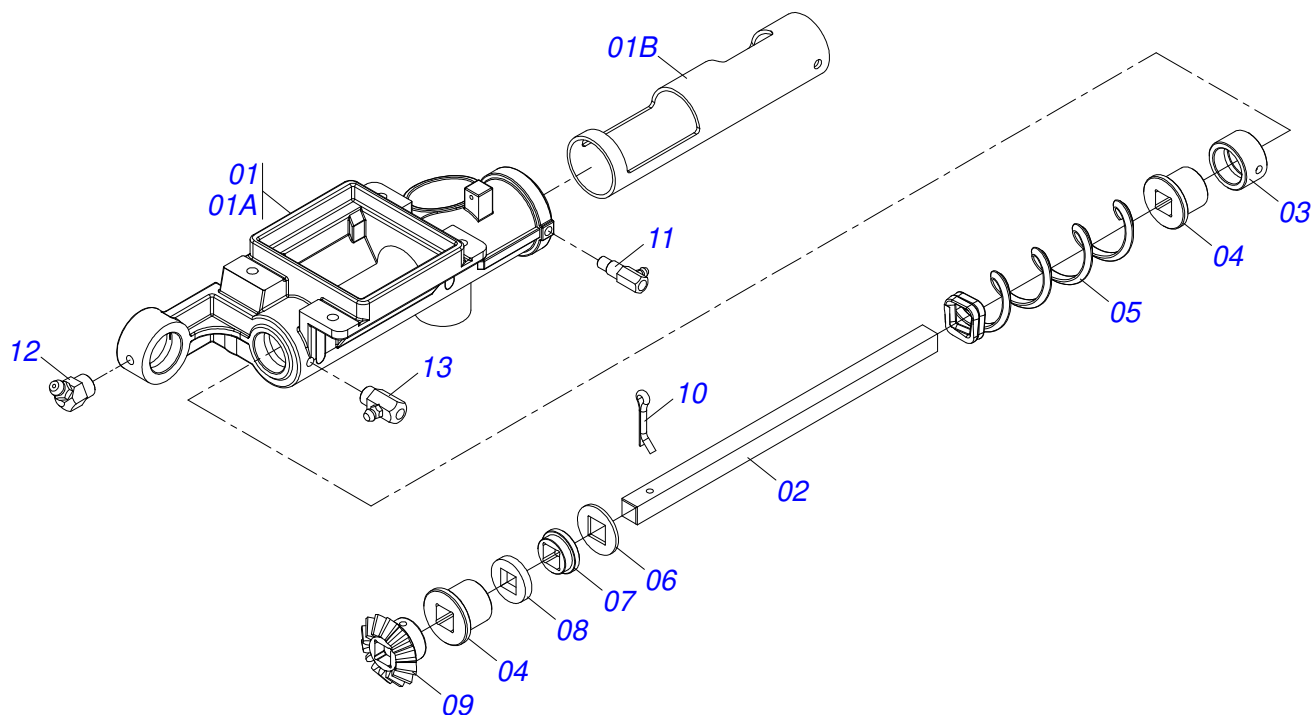


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

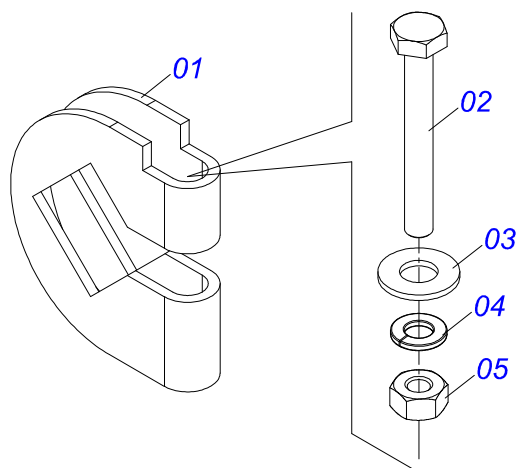


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

RIGHT MONO ARM WHEEL


0531050940

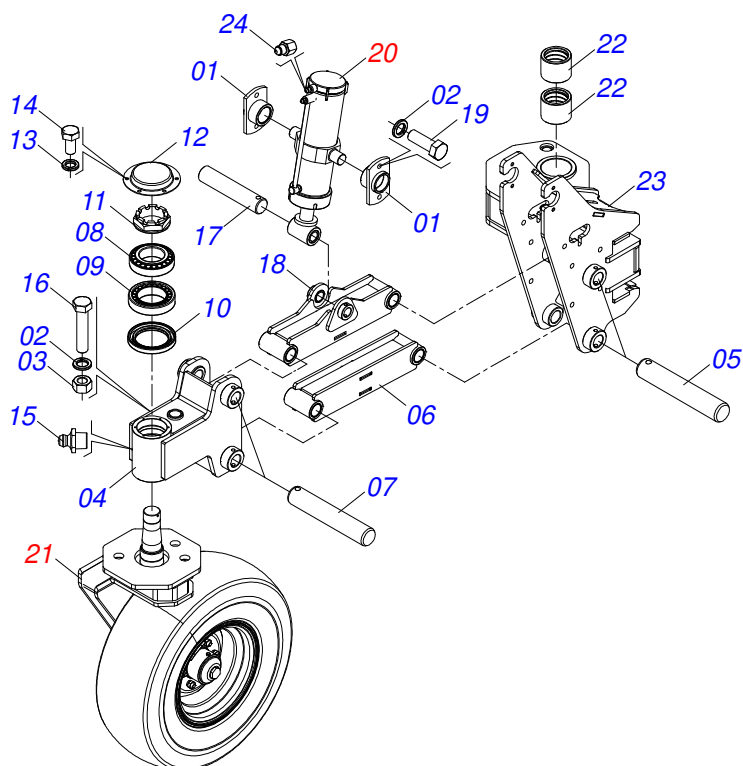


Item	Code	Description	See page	QT
01	0501111056	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		02
02	0503010019	1/2" SPRING WASHER		08
03	0503010060	1/2 UNC G.5 ZN HEX NUT		04
04	0531061431	REAR MONO WHEEL SUPPORT		01
05	0591015907	LARGER JUNCTION AXIS		02
06	0501111051	ARTICULATOR ARM		01
07	0591016194	AXLE JUNCTION		02
08	0503010007	3982/3920 ROLLER BEARING		01
09	0503010059	33287/33462 ROLLER BEARING		01
10	0503013106	SEAL 00085-B		01
11	0502040080	FLANGE NUT R.2.1/2 UN		01
12	0541013225	WHEEL BOX COVER		01
13	0503011444	SPRING WASHER		06
14	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		06
15	0503010002	1800 GREASE FITTING		01
16	0503017874	BOLT 1/2 UNC		04
17	0591016198	PIN 37,8 X 186		01
18	0501111050	REAR LIFT ARM		01
19	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
20	0531050023	HYDRAULIC CYLINDER 2 X 5 X 599 X 336	37	01
21	0531050941	MONO WHEEL	38	01
22	0591017921	BRONZE GLOVE 90.5 X 115 X 91		02
23	0531062180	RIGHT SIDE FRAME		01
24	0551016274	HYDRAULIC CYLINDER ADAPTER		01

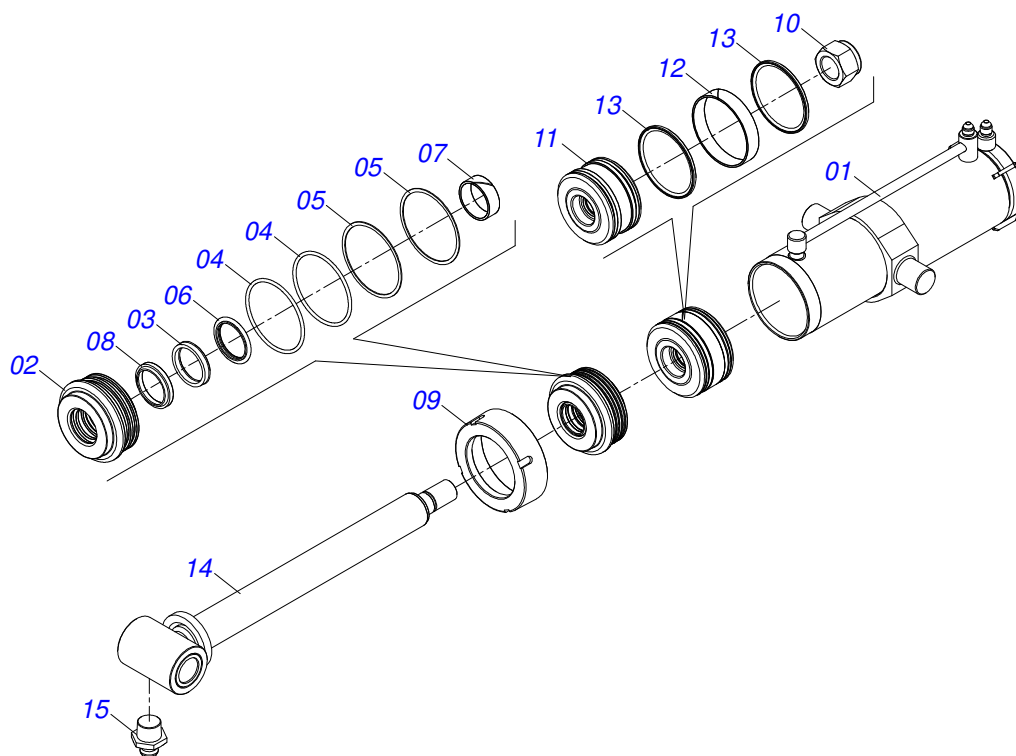


Item	Code	Description	See page	QT
01	0531061565	CASE WITH TERMINAL 127 X 490		01
02	0581010353	RING SUPPORT		01
03	0503018026	1870-2000-375 B GASKET		01
04	0503011453	O'RING		02
05	0503018152	O'RING		02
06	0503018024	RING BS		01
07	0503018025	RING GUIDE		01
08	0503010039	D-2000 SCRAPER RING		01
09	0502040876	COVER		01
10	0503010817	1.1/4" SELF LOCKING NUT		01
11	0581010354	PISTON		01
12	0503018150	RING GUIDE		01
13	0503018151	RING BS		02
14	0531061566	HYDRAULIC CYLINDER ROD 50.8 X 570.5		01
15	0503010002	1800 GREASE FITTING		01

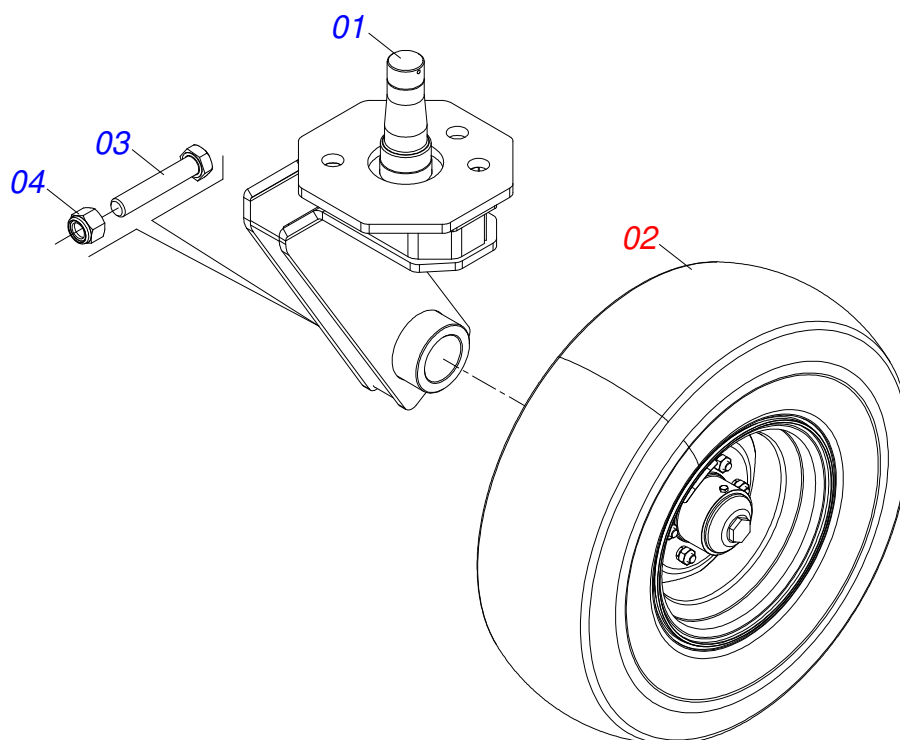


Item	Code	Description	See page	QT
01	0531062179	RIGHT MONO WHEEL		01
02	0521059946	WHEEL ASSY WITH TIRE	39	01
03	0503019246	BOLT		01
04	0503011075	3/4" UNC NUT		01

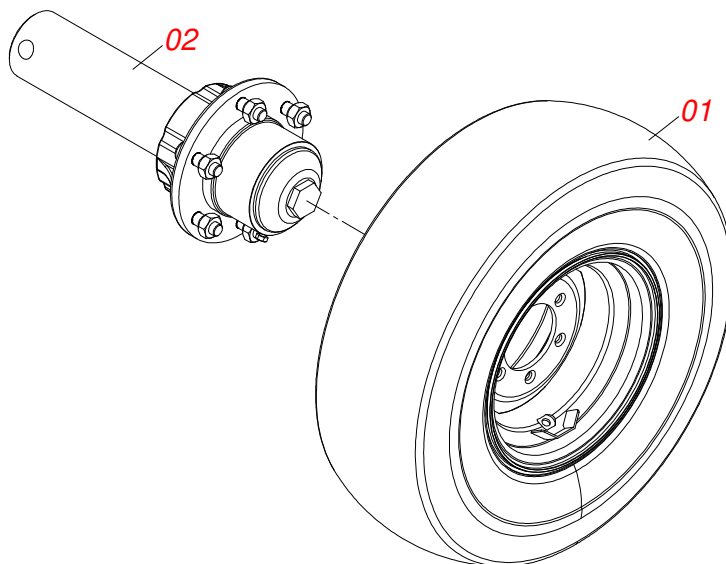


Item	Code	Description	See page	QT
01	0521059728	WHEEL WITH TIRE	40	01
02	0521059947	MOUNTED CUBE	41	01

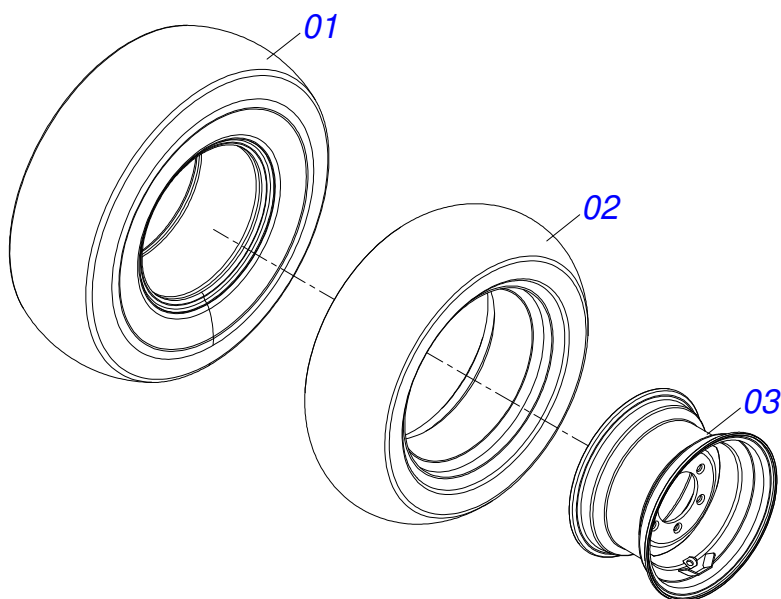


Item	Code	Description	See page	QT
01	0503019598	TIRE 11.5 / 80 -15.3 16PR REINF IM-04 TT MI		01
02	0503019599	AIR CAMERA 11.5 / 80 -15.3 TR 15		01
03	0503035060	WHEEL 9.00 X 15.3		01

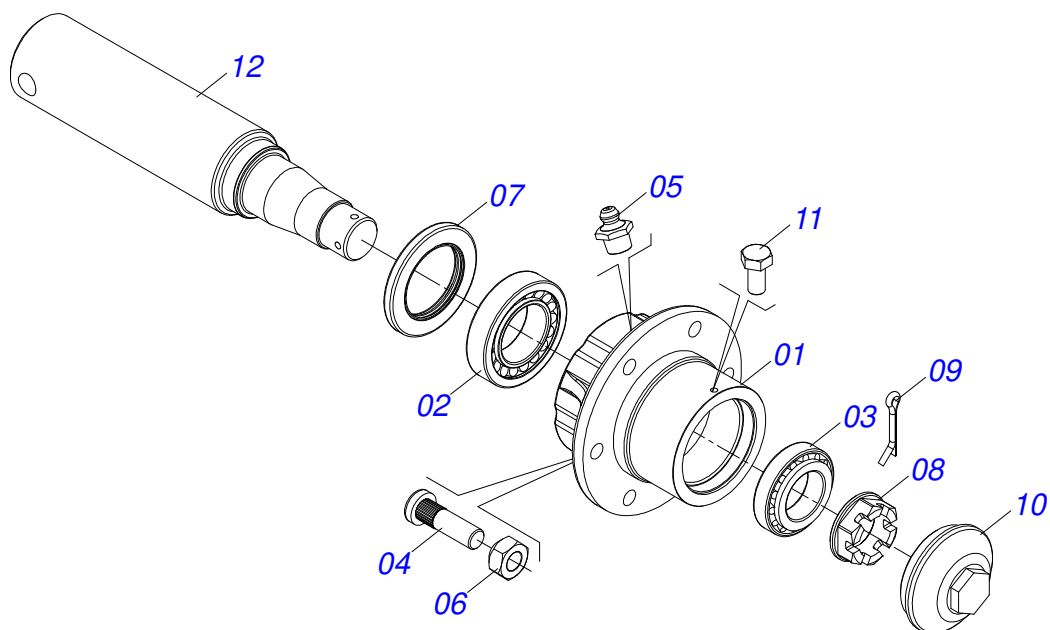


Item	Code	Description	See page	QT
01	0502011389	BOX		01
02	0503010006	32210 ROLLER BEARING		01
03	0503010005	32212 ROLLER BEARING		01
04	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
05	0503010002	1800 GREASE FITTING		01
06	0503010064	5/8 UNF CONIC NUT		06
07	0503011866	SEAL 00573-B WITH HOLE		01
08	0501010888	1.3/4" 2.5/16" CASTLE NUT		01
09	0503010010	1/4" X 2.1/2" COTTERPIN		01
10	0502020593	COVER		01
11	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		01
12	0591016195	WHEEL AXIS		01

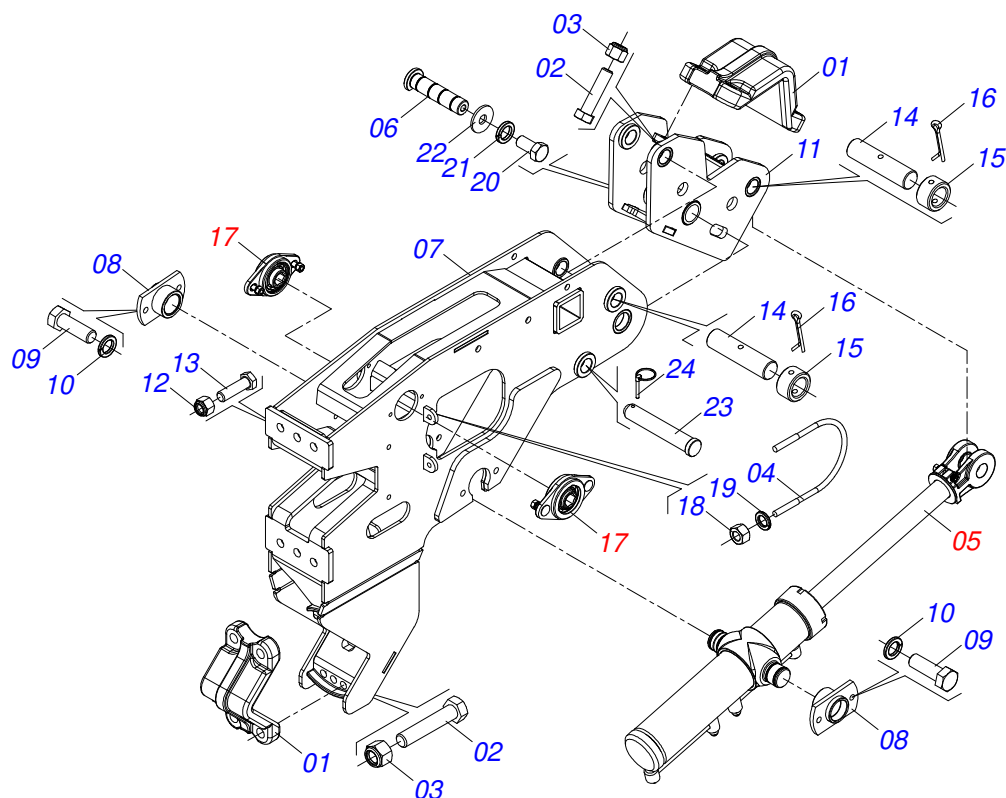


Item	Code	Description	See page	QT
01	0502012789	FIXER SUPPORT FERTILIZER ROW		02
02	0503017857	BOLT 5/8 UNF 4		08
03	0503010811	5/8" UNF SELF ADJUSTING NUT		08
04	0551019514	3/8 FASTENER		02
05	0531050903	SIDE ARTICULATED CYLINDER 43 44.45X85.70X291X657		01
06	0591017796	ARTICULATION AXIS 222 R.1.1 / 4 UNF		01
07	0531062134	UNIVERSAL SUPPORT		01
08	0501111056	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		02
09	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
10	0503010019	1/2" SPRING WASHER		04
11	0501111070	SIDE SUPPORT ARTICULATOR		01
12	0503011075	3/4" UNC NUT		06
13	0501010125	3/4" X 2-1/2" BOLT		06
14	0591013172	31.75 X126 AXLE WITH 8 HOLE		02
15	0591013173	CYLINDER INTERMEDIATE BUSHING		02
16	0503012231	1/4" X 3" COTTERPIN		02
17	0501057684	SIDE BEARING FRONT SUPPORT SEED ROW	44	02
18	0503010026	3/8" NUT		04
19	0503010025	3/8 SPRING WASHER		04
20	0501011544	3/4" X 1-1/2" BOLT		01
21	0503010023	3/4" SPRING WASHER		01
22	0511017232	FLAT WASHER		01
23	0591018408	PIN LOCK LINES		01
24	0503030085	LOCK PIN		01

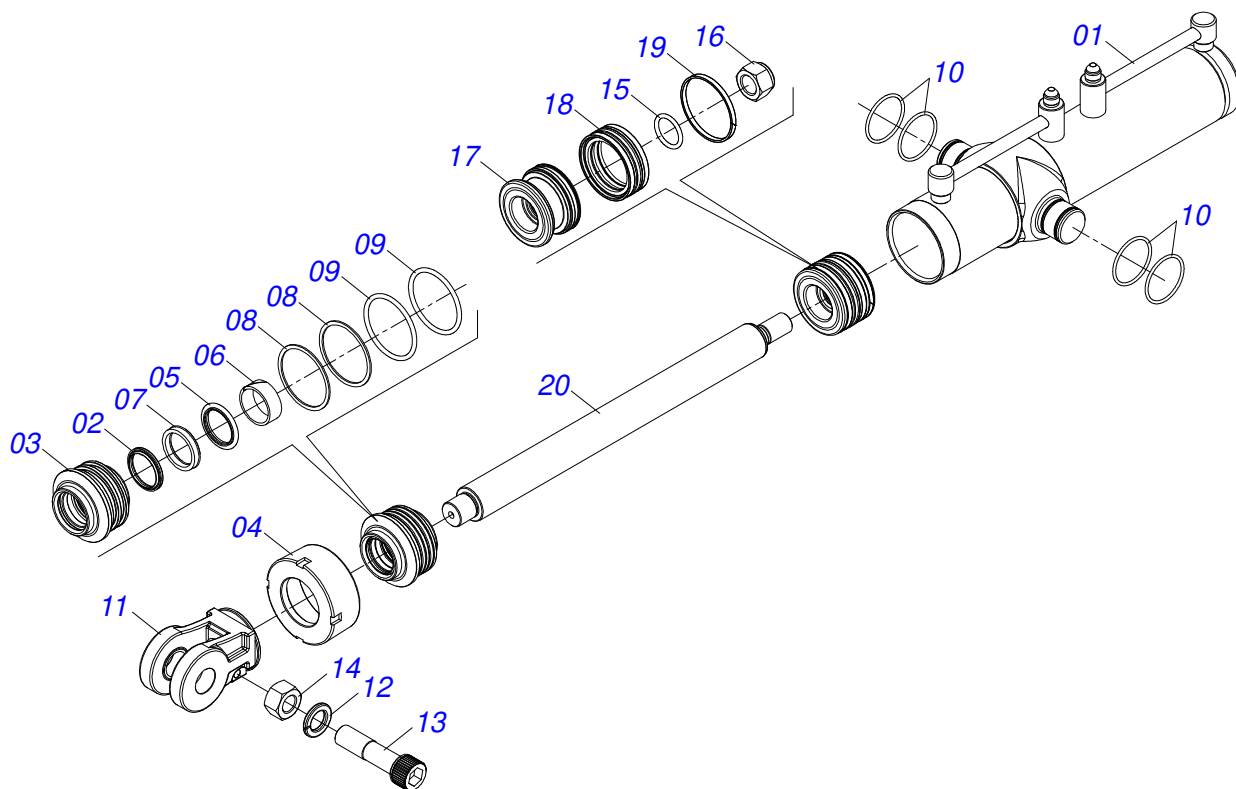


Item	Code	Description	See page	QT
01	0531062138	CASE 85,7 X 486 WITH COVER		01
02	0503010761	D-1750 SCRAPER RING		01
03	0571019711	RING SUPPORT		01
04	0571019709	DETACHABLE COVER		01
05	0503017936	RING		01
06	0503017938	RING GUIDE		01
07	0503017937	GASKET		01
08	0503017940	8-337 BACK-UP RING		02
09	0503017939	2-337 N 3006-9B O' RING		02
10	0503018045	2-130 (AGEL) O'RING		04
11	0511064408	FORK		01
12	0503010025	3/8 SPRING WASHER		01
13	0503011094	3/8" X 2" BOLT		01
14	0503010026	3/8" NUT		01
15	0503010042	2-214 N 3006-9B O'RING		01
16	0503010063	1" SELF-ALIGNING NUT		01
17	0571019710	1.7" X 3.4" PISTON		01
18	0503017935	RING		01
19	0503018144	RING		01
20	0591017818	EXTENSOR 44,45 X 550		01

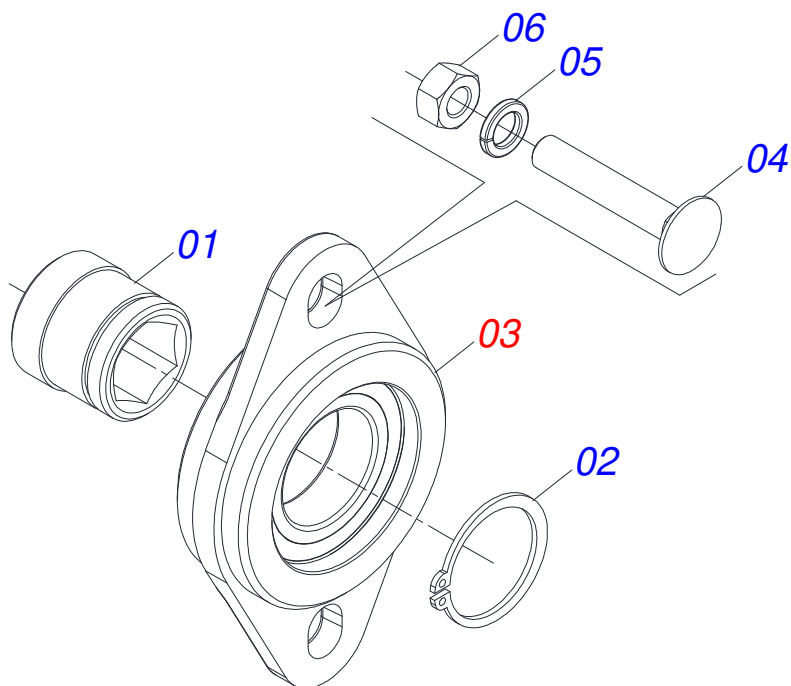


Item	Code	Description	See page	QT
01	0551015804	BEARING AXLE BODY		01
02	0503010707	501030 CLAMPING RING (FOR AXLE)		01
03	0501053566	ROW SEED BEARING	45	01
04	0503011953	5/16" X 1" BOLT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

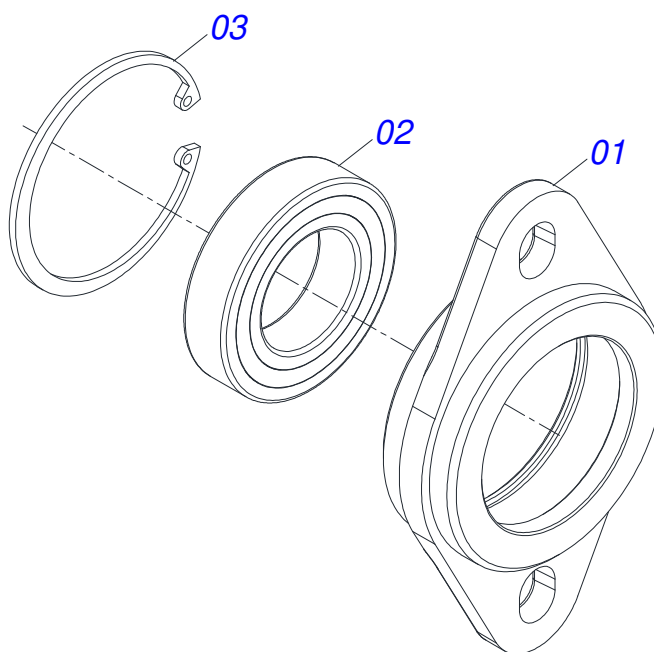


Item	Code	Description	See page	QT
01	0502012030	HOUSING BEARING		01
02	0503012861	6006 2RS BALL BEARING		01
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01

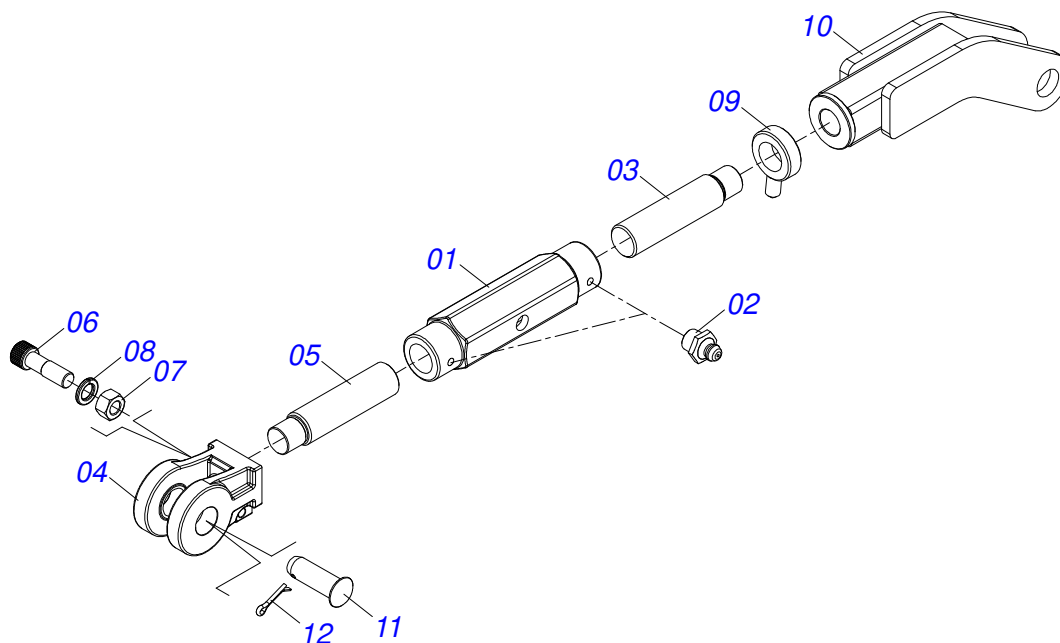


Item	Code	Description	See page	QT
01	0502011195	ADJUSTMENT NUT BODY		01
02	0503010002	1800 GREASE FITTING		02
03	0551013654	SPINDLE R.1.1 / 4 X R.1.1 / 2 RIGHT X 165		01
04	0502040747	32.54 CLEVIS CLAMP		01
05	0551013653	SPINDLE R.1.1 / 4 X LEFT X.1.1 / 2 X 165		01
06	0503011094	3/8" X 2" BOLT		01
07	0503010026	3/8" NUT		01
08	0503011443	3/8" SPRING WASHER		01
09	0501061056	RH LOCKNUT WITH HANDLER		01
10	0531062137	SIDE FERTILIZER BOX EXTENSOR		01
11	0521010779	31.75 X 95 COUPLING SHAFT		01
12	0503010571	1/4" X 1.1/2 COTTERPIN		01

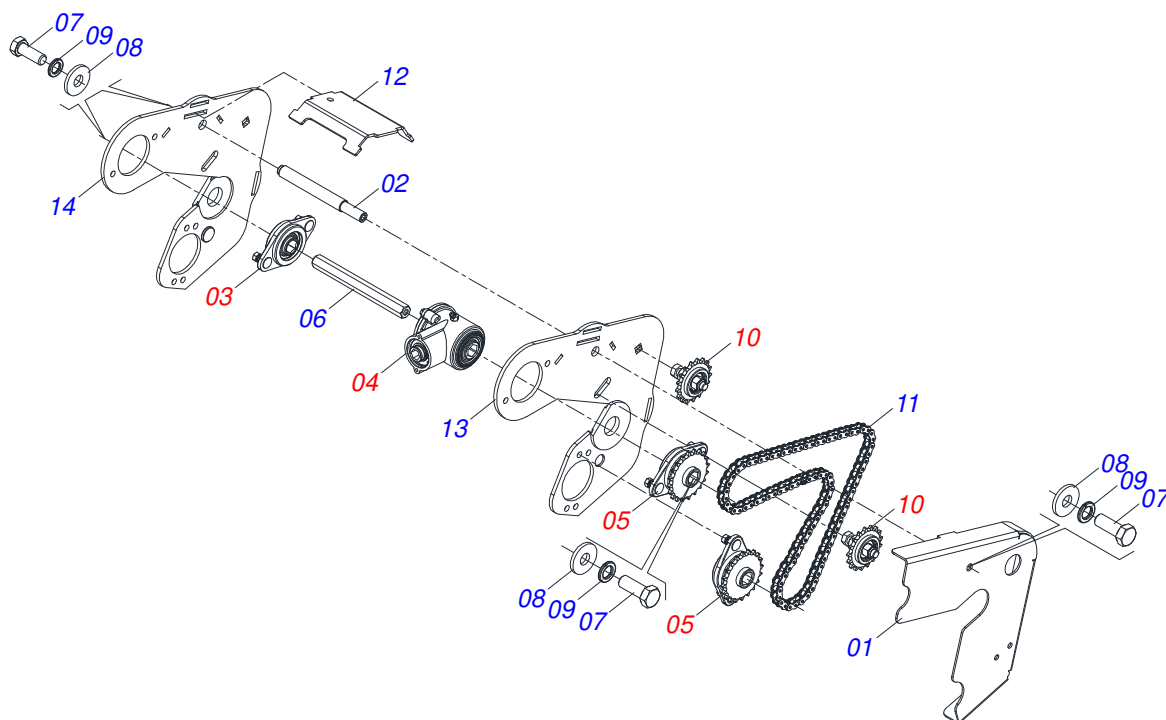


Item	Code	Description	See page	QT
01	0591016052	RIGHT CURRENT COVER		01
02	0591016050	TRANSMISSION SHAFT		01
03	0501057684	SIDE BEARING FRONT SUPPORT SEED ROW	44	01
04	0511057159	TRANSMISSION HOPPER SEED ROW	54	01
05	0521059882	20Z TRANSMISSION GEAR	48	02
06	0591015357	HEX SHAFTED GUIDE 3/4 X 195		01
07	0503010237	3/8" X 1" BOLT		04
08	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
09	0503010025	3/8 SPRING WASHER		04
10	0521059881	TRANSMISSION GEAR	49	02
11	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
12	0591016053	SUPPORT PLATE		01
13	0531061625	TRANSMISSION RIGHT SIDE		01
14	0531061624	TRANSMISSION LEFT SIDE		01

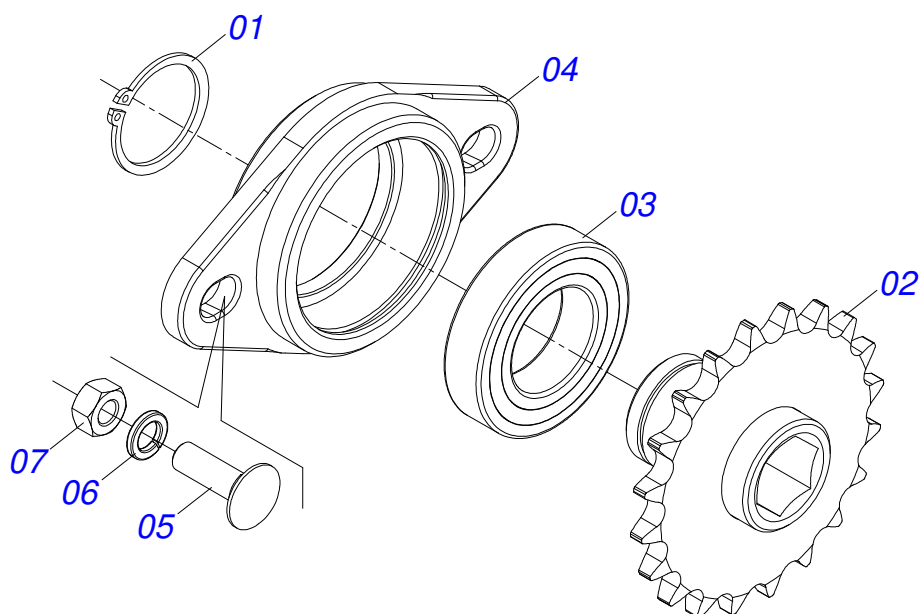


Item	Code	Description	See page	QT
01	0503010707	501030 CLAMPING RING (FOR AXLE)		01
02	0531061415	GEAR 20Z X 45 HEX HOLE 19.80 / 20		01
03	0503012861	6006 2RS BALL BEARING		01
04	0502012030	HOUSING BEARING		01
05	0503011953	5/16" X 1" BOLT		02
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

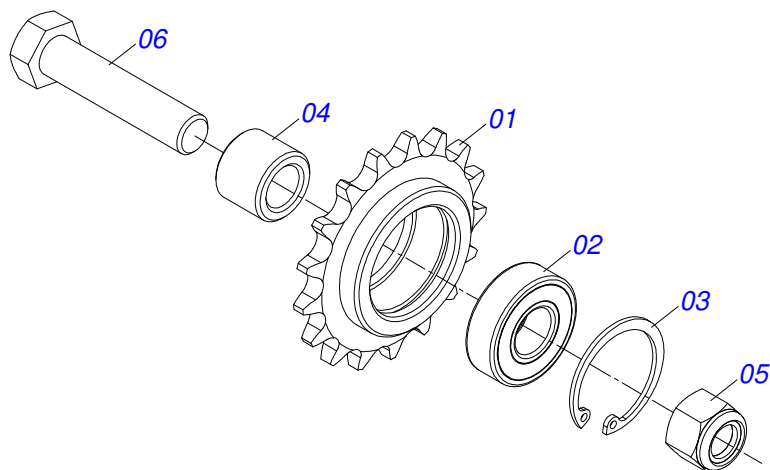


Item	Code	Description	See page	QT
01	0511068760	CHAIN TIGHTENER BODY		01
02	0503012882	BEARING		01
03	0503011945	503050 CLAMPING RING (FOR AXLE)		01
04	0591015954	SLEEVE 13,5 X 7/8 X 18		01
05	0503010589	1/2" UNC SELF ADJUSTING NUT		01
06	0503010905	1/2" X 2-1/4" BOLT		01

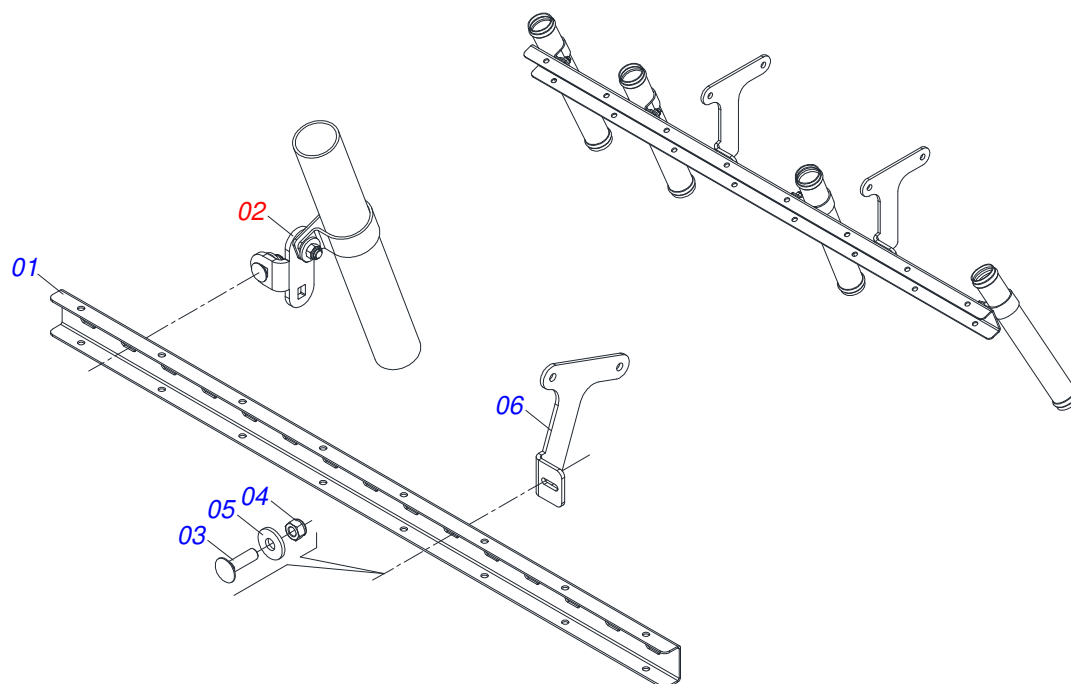


Item	Code	Description	See page	QT
01	0591017995	FERTILIZER CONDUCTOR GUTTER		01
02	0531051736	SHORT LINE FERTILIZER CONDUCTOR 170 ARTICULATOR		04
03	0501010942	3/8" X 1-1/4" BOLT		06
04	0503013357	3/8 SELF-ADJUSTING NUT		06
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
06	0591018014	LEFT SUPPORT		02

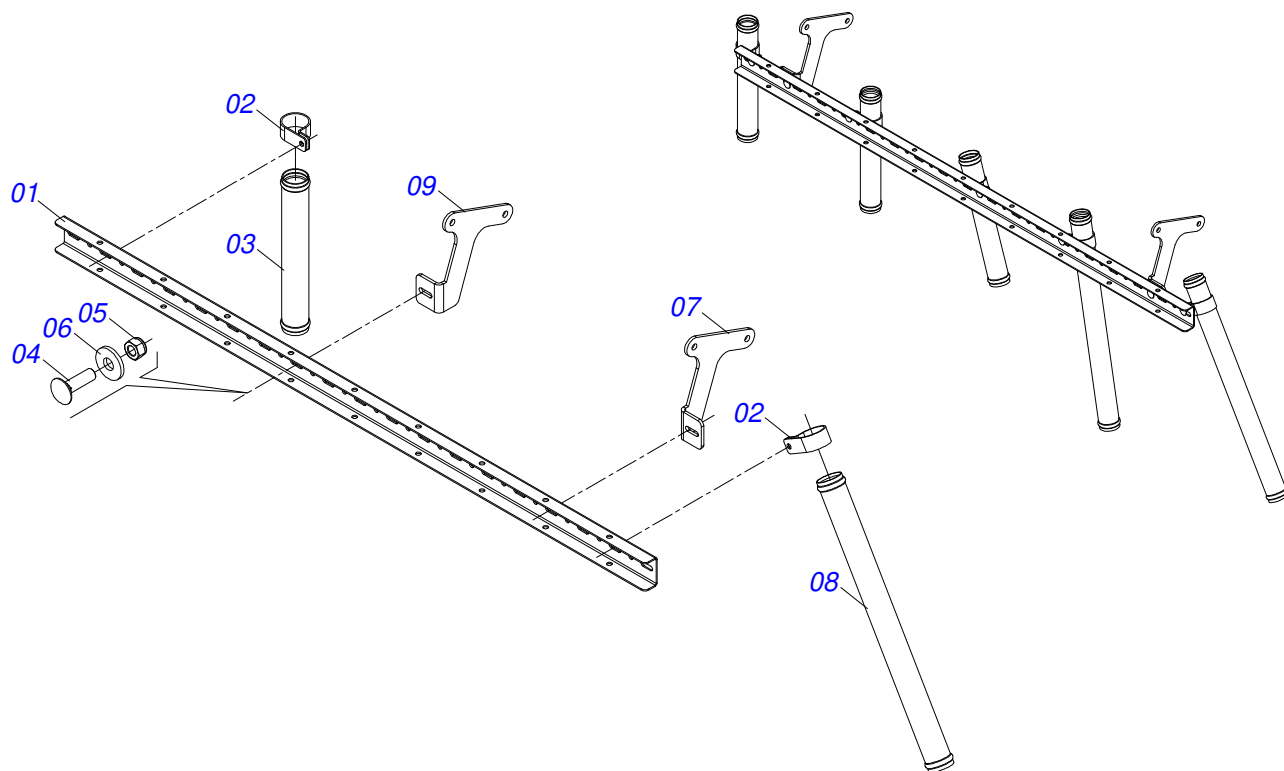


Item	Code	Description	See page	QT
01	0591018304	FERTILIZER CONDUCTOR GUTTER	01	
02	0591015578	CLAMP	05	
03	0591015577	CONDUCTING TUBE	03	
04	0501010942	3/8" X 1-1/4" BOLT	07	
05	0503013357	3/8 SELF-ADJUSTING NUT	07	
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER	07	
07	0591018014	LEFT SUPPORT	01	
08	0591016338	CONDUCTING TUBE	02	
09	0591017994	SUPPORT RIGHT	01	

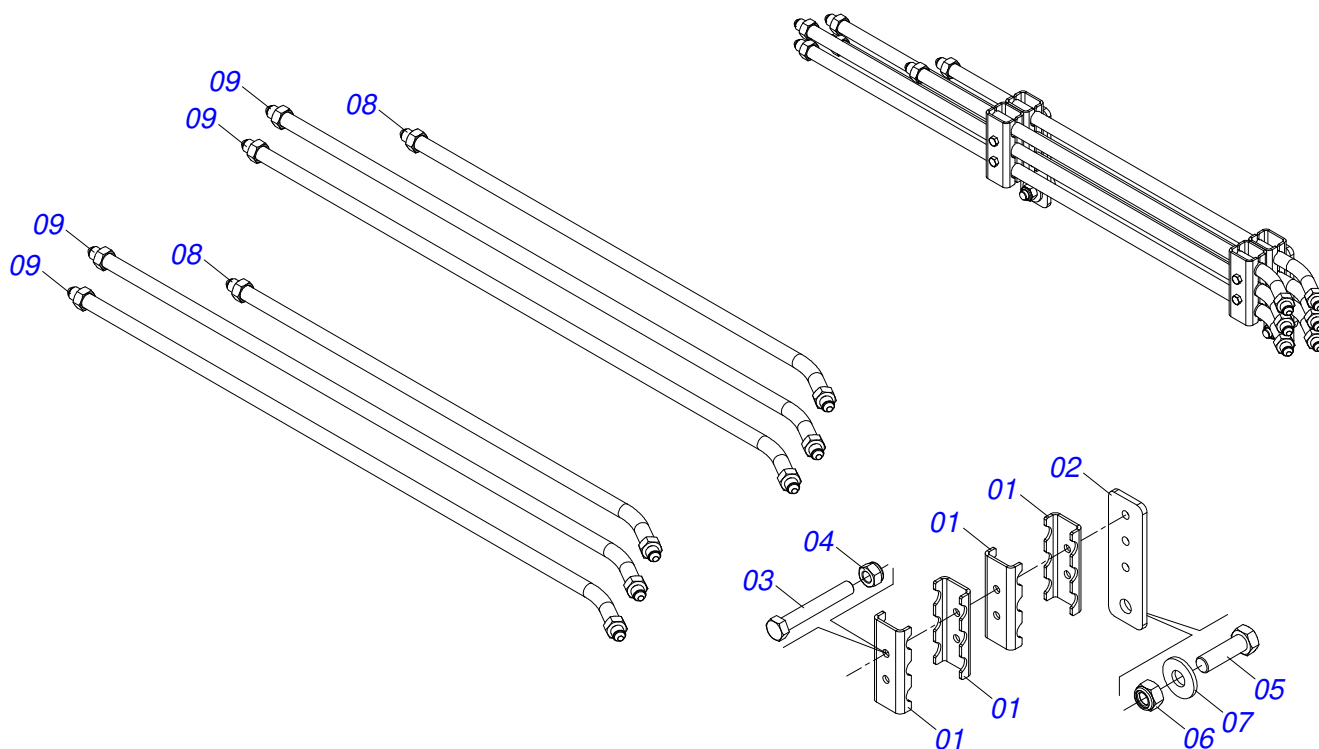

Item	Code	Description	See page	QT
01	0581018408	SUPPORT SCALE		08
02	0591016226	SHORT SUPPORT		02
03	0503011123	BOLT		04
04	0503013357	3/8 SELF-ADJUSTING NUT		04
05	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		02
06	0503013389	5/8" SELF LOCKING NUT		02
07	0501012140	FLAT WASHER		02
08	0531062186	SIDE FRAME DUCT		02
09	0531062185	SIDE FRAME DUCT		04

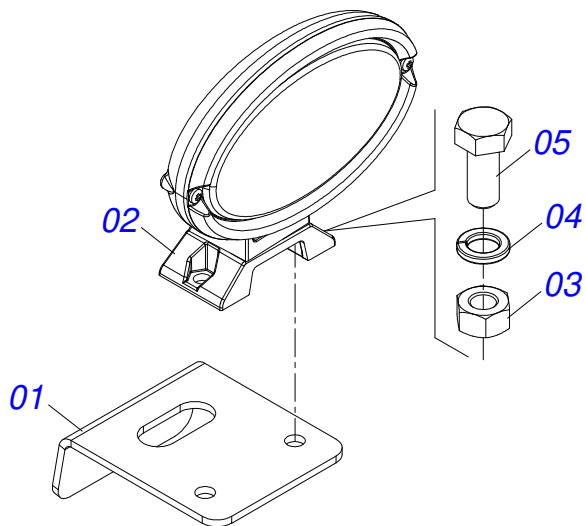


Item	Code	Description	See page	QT
01	0591016055	REAR HEADLIGHT SUPPORT		01
02	0503018738	HEADLIGHT		01
03	0503010337	5/16" NUT		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		02

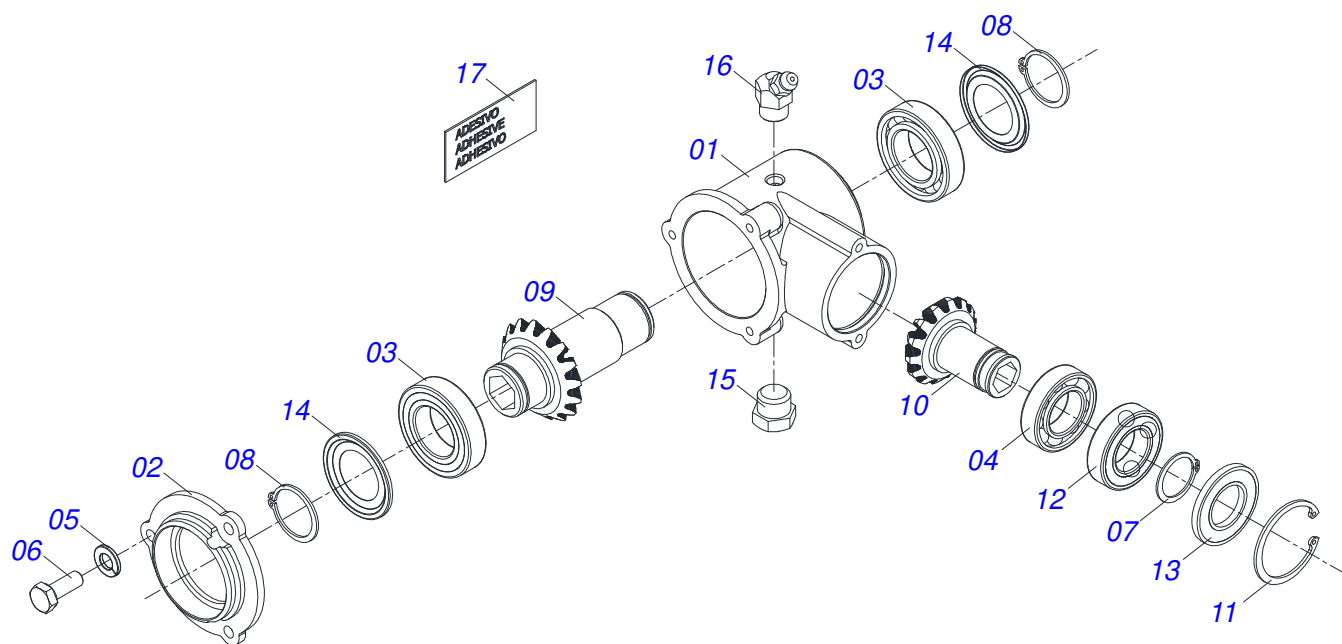


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01
17	0503035316	LUBRICATED POINTS ADHESIVE LABEL		01

LOCK PIN ASSY


0521059838

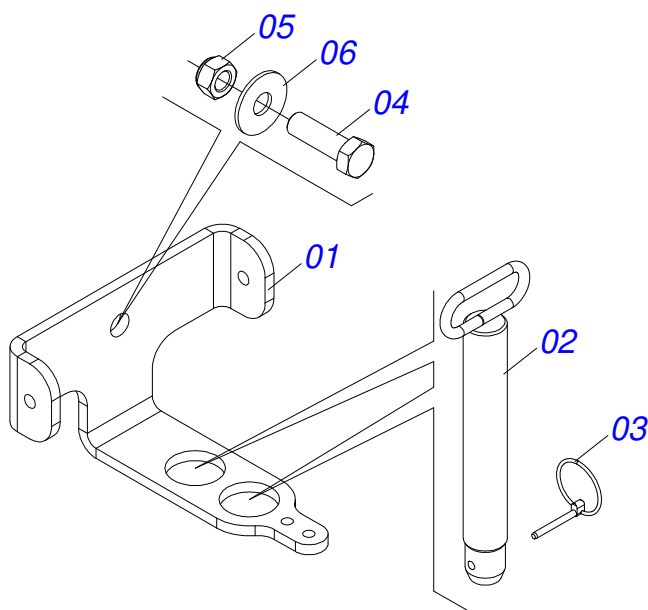


Item	Code	Description	See page	QT
01	0591016056	LOCK AXLE SUPPORT		01
02	0531061626	38 X 308 JUNCTION AXLE WITH HANDLE		02
03	0503030119	LOCK PIN		02
04	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
05	0503013389	5/8" SELF LOCKING NUT		01
06	0501010453	FLAT WASHER		01

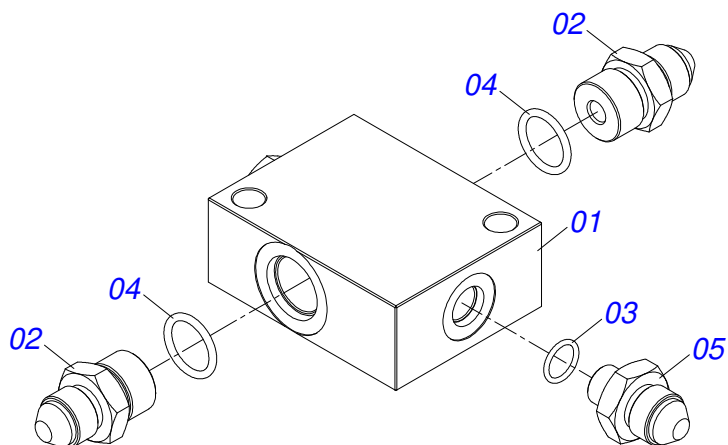

Item	Code	Description	See page	QT
01	0503013622	VALVE ASSY		01
02	0511010111	7/8" NIPPLE		02
03	0503011030	2-014 N 3006-9B O'RING		01
04	0503010045	O'RING		02
05	0501012109	3/4" X 9/16" NIPPLE FITTING		01

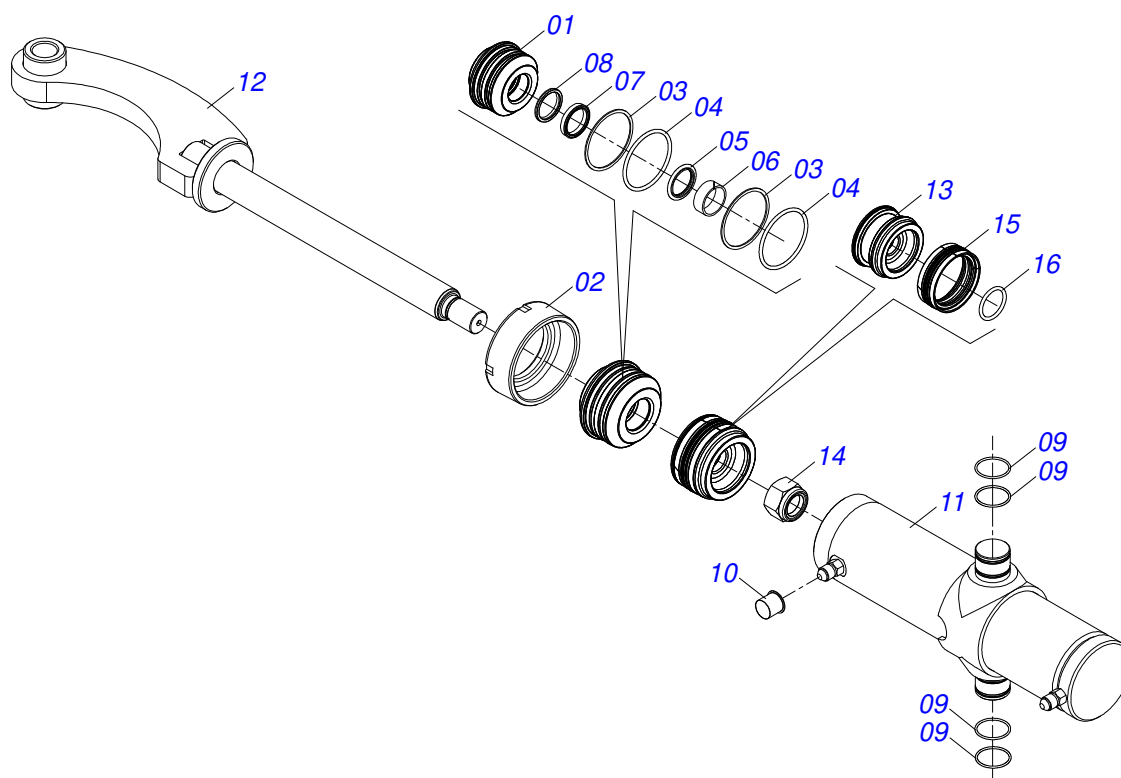


Item	Code	Description	See page	QT
01	0581010302	RING OF SUPPORT		01
02	0502012822	101.60 END CAP		01
03	0503011061	8-342 BACK-UP RING		02
04	0503010338	2-342 N 3006-9B O'RING		02
05	0503017936	RING		01
06	0503017938	RING GUIDE		01
07	0503017937	GASKET		01
08	0503010761	D-1750 SCRAPER RING		01
09	0503018045	2-130 (AGEL) O'RING		04
10	0503030387	PLUG		02
11	0531061461	CASE 101.6 X 466.5 WITHOUT LUBRICATION		01
12	0531061460	ROTATING CYLINDER ROD		01
13	0581010837	PISTON		01
14	0503010817	1.1/4" SELF LOCKING NUT		01
15	0503015633	SELEMASTER SEALING		01
16	0503018029	2-217 O'RING		01

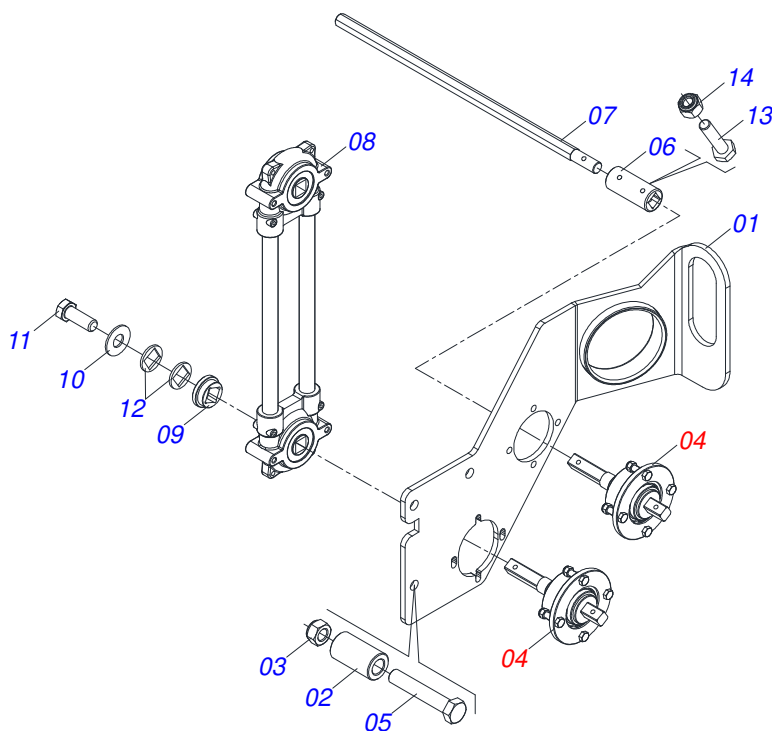


Item	Code	Description	See page	QT
01	0531062208	TRANSMISSION RIGHT SUPPORT		01
02	0591018040	SEPARATING GLOVE 16.5 X 32 X 70		03
03	0503013389	5/8" SELF LOCKING NUT		03
04	0531050982	SIDE BODY BEARING	59	02
05	0501010163	5/8" X 4-1/2" BOLT		03
06	0591018038	DRAGGLE GLOVE		01
07	0591018039	HEX SHAFT 3/4 X 750 CENTRAL AND SIDE		01
08	0503063380	SIDE ENCAPSULATED CHAIN		01
09	0503030303	SUPPORT WASHER		01
10	0501013518	FLAT WASHER		01
11	0503010237	3/8" X 1" BOLT		01
12	0511017406	FLAT WASHER Q20 X 33 X 3.00		02
13	0503010882	BOLT		02
14	0503013759	NUT		02

SIDE BODY BEARING


0531050982

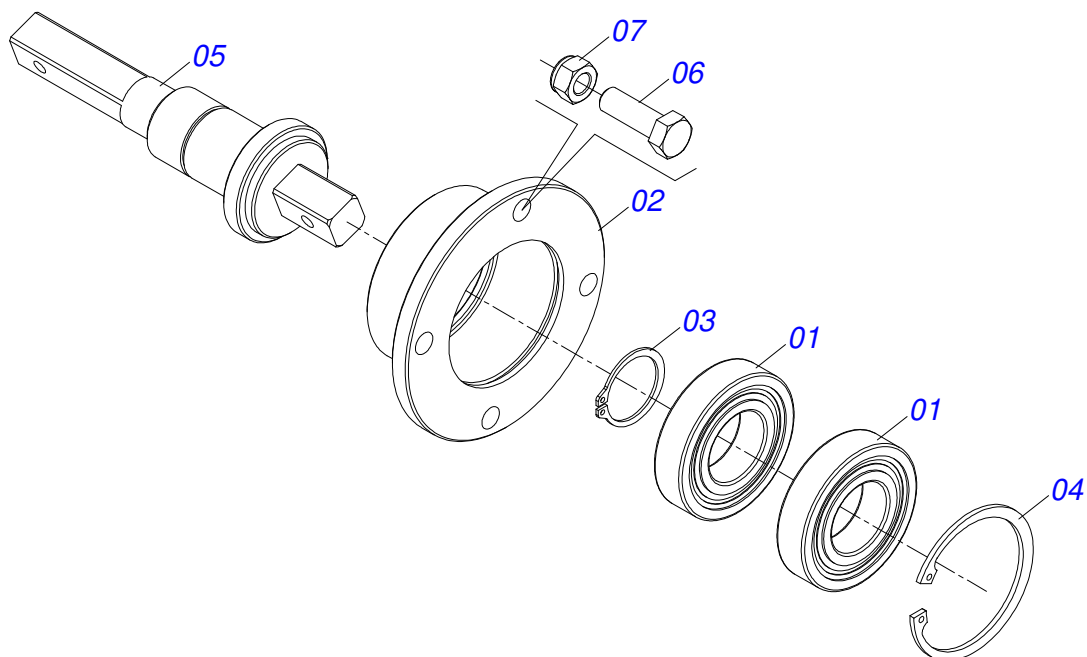

Item	Code	Description	See page	QT
01	0503011081	6207 2RS BEARING		02
02	0591018034	SHAFT BEARING GUIDE HITCH		01
03	0503010845	501035 CLAMPING RING (FOR AXLE)		01
04	0503010370	502072 CLAMPING RING (FOR AXLE)		01
05	0591018033	SIDE TRANSMISSION AXIS		01
06	0503010849	3/8" X 1-1/2" BOLT		04
07	0503013357	3/8 SELF-ADJUSTING NUT		04

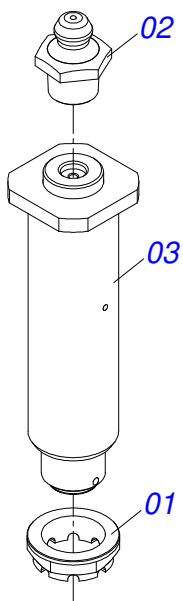


Item	Code	Description	See page	QT
01	0502040080	FLANGE NUT R.2.1/2 UN		01
02	0503010002	1800 GREASE FITTING		01
03	0531061664	LOCK AXIS		01

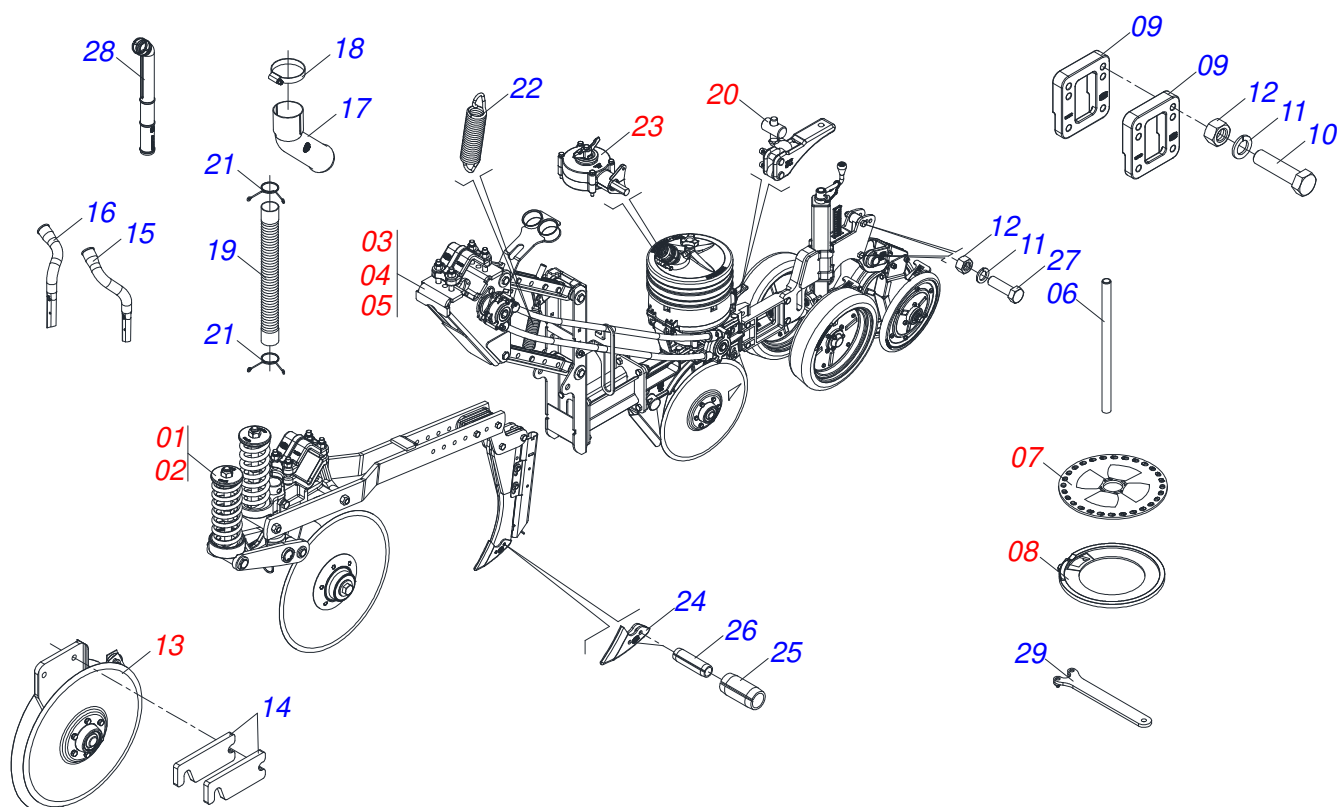


Item	Code	Description	See page	QT
01	0521059919	SHORT FERTILIZER LINE DC20 WITHOUT ROD 62	01	01
		LUBRICATION		
01.	0531051559	SHORT FERTILIZER LINE DC20 WITHOUT ROD 63	01	01
		LUBRICATION		
01..	0531050380	SHORT FERTILIZER LINE LONG SUPPORT 64	01	01
02	0521059920	LONGER FERTILIZER LINE SMALLER DC20 ROD 65	01	01
02.	0531051560	LONG FERTILIZER LINE WITHOUT STEM 66	01	01
		LUBRICATION		
03	0531050905	SUPER LONG TITANIUM LINE (CPRA) 74	01	01
03.	0531051400	LONG LEFT SUPPORT LINE 75	01	01
04	0531050906	TITANIUM LONG LINE (CPRA) 76	01	01
04.	0531051401	TITANIUM LONG LINE (SPICRR) 77	01	01
05	0531050907	TITANIUM SHORT LINE (CPRA) 78	01	01
05.	0531051402	TITANIUM SHORT LINE (SPICRR) 79	01	01
06	0531013600	PRESS ADJUSTMENT LEVER		01
07	0503062066	DISC SET WITH CORN RING 120	01	01
08	0503062067	DISC SET / RING SOY 90F TITANIUM 121	01	01
09	0502012815	DOUBLE-DISC SPACING PLATE		01
10	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
11	0503010019	1/2" SPRING WASHER		01
12	0503010060	1/2 UNC G.5 ZN HEX NUT		01
13	0521055868	RIGHT DUAL FERTILIZER DISC 122	01	01
14	0511018662	SPACING PLATE		01
15	0503030391	RIGHT FERTILIZER NOZZLE		01
16	0503030392	LEFT FERTILIZER NOZZLE		01
17	0503031050	CURVED CONDUCTOR		01
18	0503010246	CLAMP		01
19	0503031145	2" X 2" X 20" HOSE		01
20	0511052024	FAST CLOSING SET 123	01	01
21	0503031076	2" HOSE CLAMP		01
22	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
23	0521056639	SEED ROW TRANSMISSION 124	01	01



Item	Code	Description	See page	QT
24	0502070085	FIXED ROD BEARING		01
25	0503016853	SPRING PIN		01
26	0503011402	0.2" X 0.8" SPRING PIN		01
27	0503010479	BOLT		01
28	0503031826	CURVED CONDUCTOR		01
29	0521068982	DISC BLADE HUB KEY		01

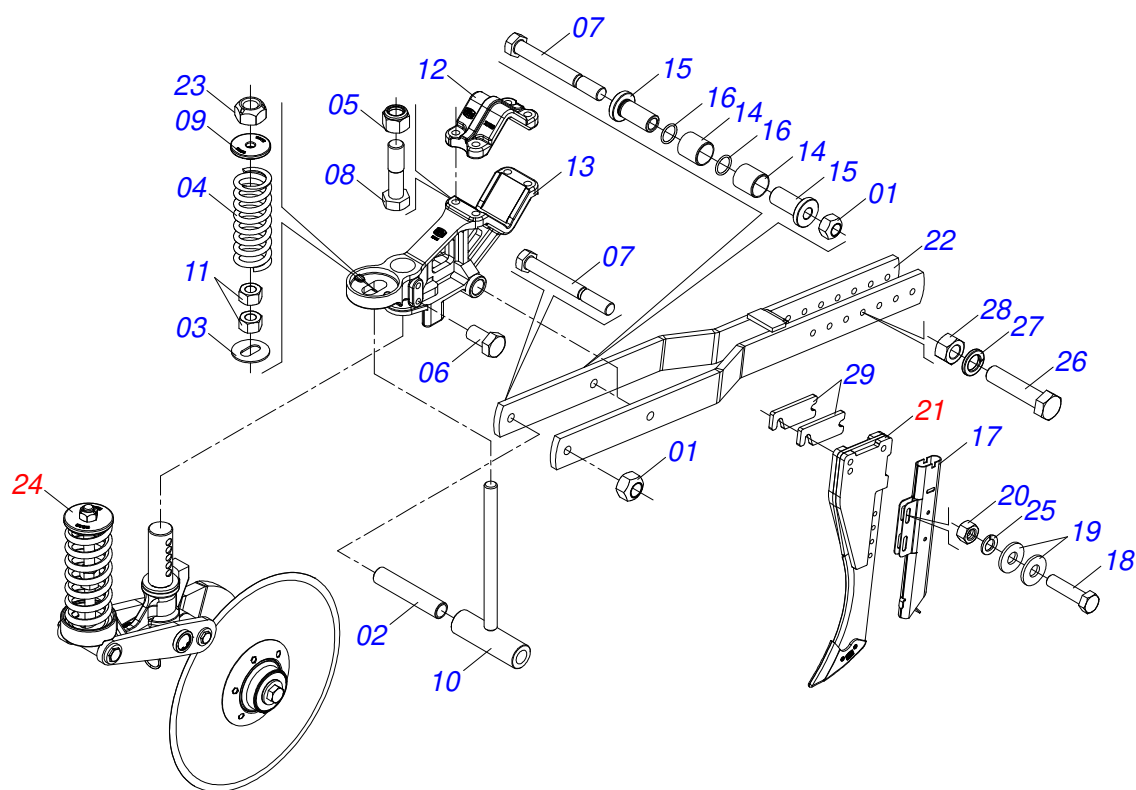


Item	Code	Description	See page	QT
01	0503011255	3/4" LOCK NUT		02
02	0571019062	SLEEVE		01
03	0571019059	SUPPORT WASHER		01
04	0503034320	COMPRESSSION SPRING		01
05	0503010811	5/8" UNF SELF ADJUSTING NUT		04
06	0503011854	5/8" X 1-1/4" BOLT		02
07	0521010066	3/4" X 8.12" BOLT		02
08	0503017960	5/8" X 3-12" BOLT		04
09	0502012813	FLANGE WASHER SPRING		01
10	0531062203	REGULATOR SPRING LINE FERTILIZER		01
11	0503010417	7/8" NUT		02
12	0502012789	FIXER SUPPORT FERTILIZER ROW		01
13	0591011145	FERTILIZER ROW SUPPORT		01
14	0503019278	LUBRICANT SLEEVE		02
15	0591011147	SLEEVE ARM ROW		02
16	0503011109	2-119 N 3006-9B O'RING		02
17	0581014070	FERTILIZER NOZZLE		01
18	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
19	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
20	0503010026	3/8" NUT		02
21	0521053946	SCARING ROD	67	01
22	0521065972	LH SHORT ARM ROW FERTILIZER		01
23	0503011254	7/8" HEX SELF ADJUSTING NUT		01
24	0521057679	ASSY CUTTING DISK 20	71	01
25	0503010025	3/8 SPRING WASHER		02
26	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
27	0503010019	1/2" SPRING WASHER		02
28	0503010060	1/2 UNC G.5 ZN HEX NUT		02
29	0511018662	SPACING PLATE		02

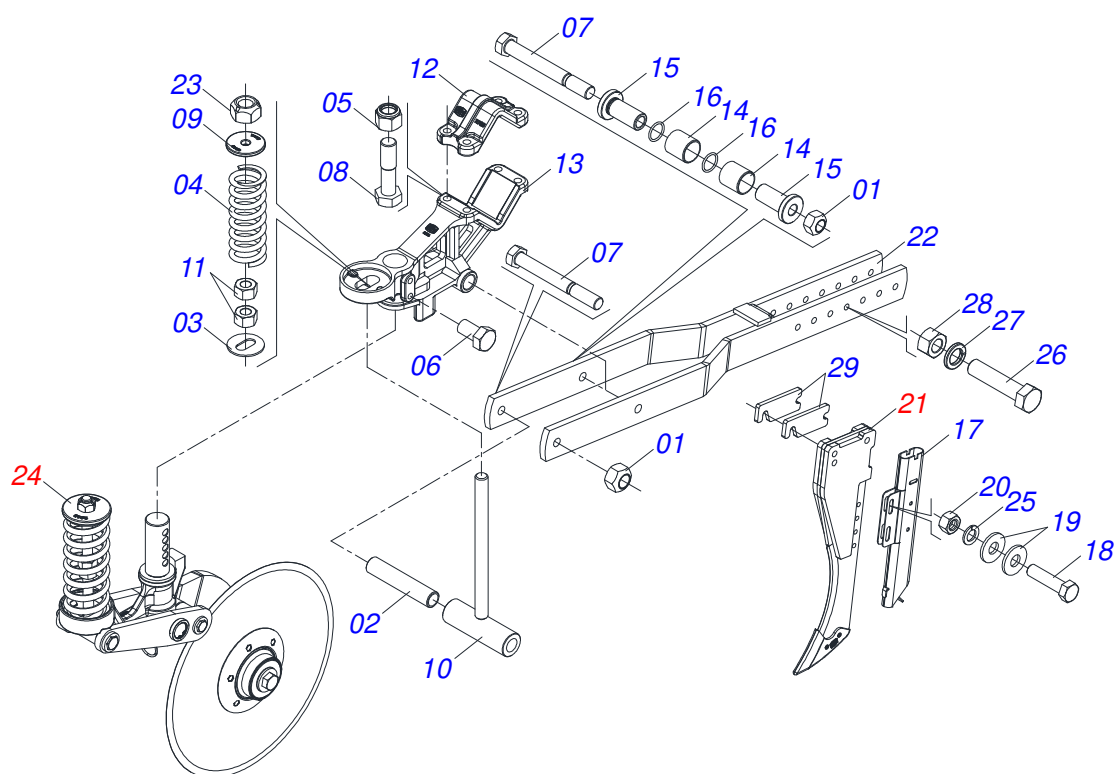


Item	Code	Description	See page	QT
01	0503011255	3/4" LOCK NUT		02
02	0571019062	SLEEVE		01
03	0571019059	SUPPORT WASHER		01
04	0503034320	COMPRESSSION SPRING		01
05	0503010811	5/8" UNF SELF ADJUSTING NUT		04
06	0521010066	3/4" X 8.12" BOLT		02
07	0511016281	3/4" X 8" BOLT		02
08	0503017960	5/8" X 3-12" BOLT		04
09	0502012813	FLANGE WASHER SPRING		01
10	0531062203	REGULATOR SPRING LINE FERTILIZER		01
11	0503010417	7/8" NUT		02
12	0502012789	FIXER SUPPORT FERTILIZER ROW		01
13	0591011145	FERTILIZER ROW SUPPORT		01
14	0503019278	LUBRICANT SLEEVE		02
15	0591011147	SLEEVE ARM ROW		02
16	0503011109	2-119 N 3006-9B O'RING		02
17	0581014070	FERTILIZER NOZZLE		01
18	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
19	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
20	0503010026	3/8" NUT		02
21	0501110814	SCARIFIER ROD WITH IAPAR NOZZLE	68	01
22	0521065972	LH SHORT ARM ROW FERTILIZER		01
23	0503011254	7/8" HEX SELF ADJUSTING NUT		01
24	0521057679	ASSY CUTTING DISK 20	71	01
25	0503010025	3/8 SPRING WASHER		02
26	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
27	0503010019	1/2" SPRING WASHER		02
28	0503010060	1/2 UNC G.5 ZN HEX NUT		02
29	0511018662	SPACING PLATE		02

SHORT FERTILIZER LINE LONG SUPPORT


0531050380

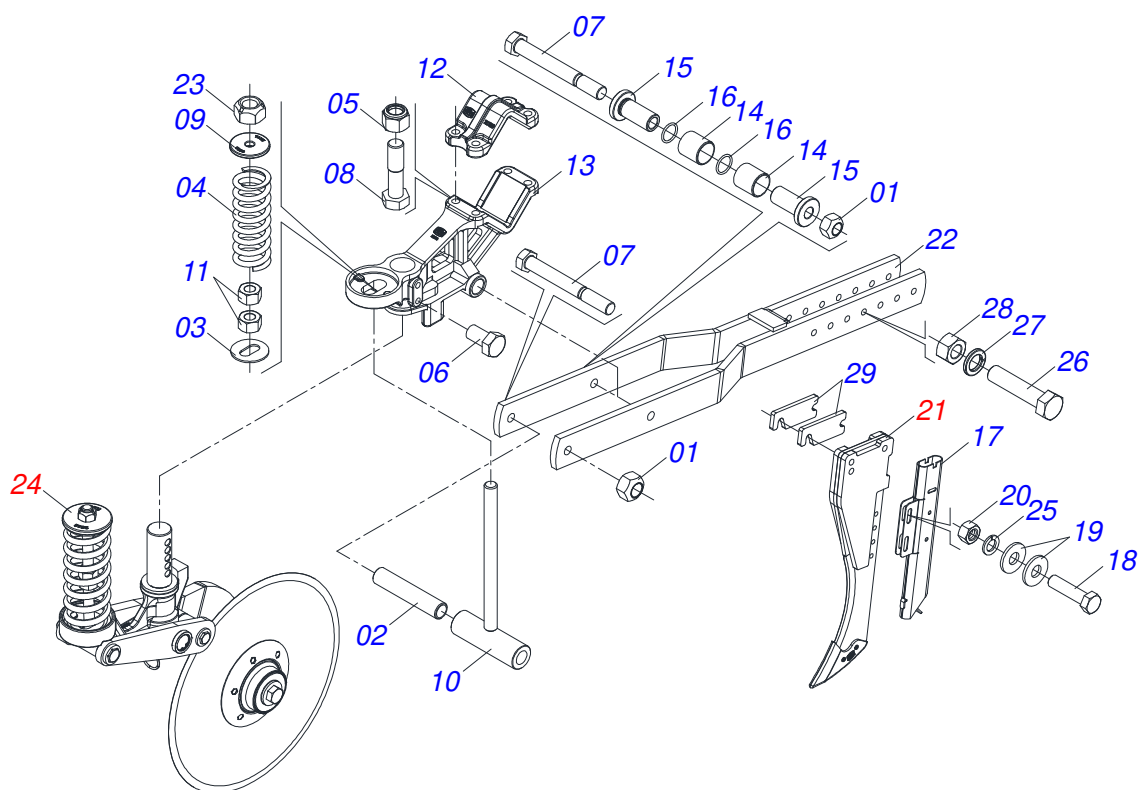

Item	Code	Description	See page	QT
01	0503011255	3/4" LOCK NUT		02
02	0571019062	SLEEVE		01
03	0571019059	SUPPORT WASHER		01
04	0503034320	COMPRESSSION SPRING		01
05	0503010811	5/8" UNF SELF ADJUSTING NUT		04
06	0503011854	5/8" X 1-1/4" BOLT		02
07	0521010066	3/4" X 8.12" BOLT		02
08	0503017960	5/8" X 3-12" BOLT		04
09	0502012813	FLANGE WASHER SPRING		01
10	0531062203	REGULATOR SPRING LINE FERTILIZER		01
11	0503010417	7/8" NUT		02
12	0502012789	FIXER SUPPORT FERTILIZER ROW		01
13	0591011146	SUPPORT LONG		01
14	0503019278	LUBRICANT SLEEVE		02
15	0591011147	SLEEVE ARM ROW		02
16	0503011109	2-119 N 3006-9B O'RING		02
17	0581014070	FERTILIZER NOZZLE		01
18	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
19	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
20	0503010026	3/8" NUT		02
21	0521053946	SCARING ROD	67	01
22	0531061648	LONG ARM LOWER FERTILIZER LINE		01
23	0503011254	7/8" HEX SELF ADJUSTING NUT		01
24	0521057679	ASSY CUTTING DISK 20	71	01
25	0503010025	3/8 SPRING WASHER		02
26	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
27	0503010019	1/2" SPRING WASHER		02
28	0503010060	1/2 UNC G.5 ZN HEX NUT		02
29	0511018662	SPACING PLATE		02

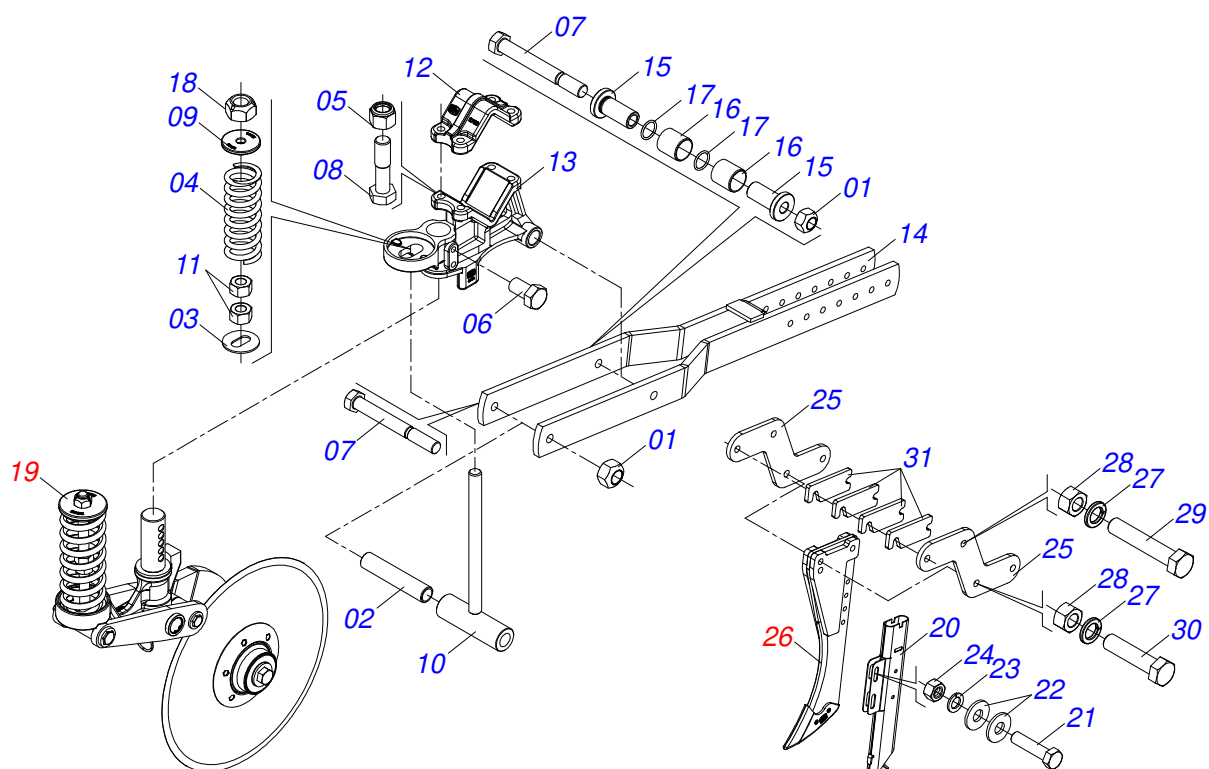


Item	Code	Description	See page	QT
01	0503011255	3/4" LOCK NUT		02
02	0571019062	SLEEVE		01
03	0571019059	SUPPORT WASHER		01
04	0503034320	COMPRESSSSION SPRING		01
05	0503010811	5/8" UNF SELF ADJUSTING NUT		04
06	0503011854	5/8" X 1-1/4" BOLT		02
07	0521010066	3/4" X 8.12" BOLT		02
08	0503017960	5/8" X 3-12" BOLT		04
09	0502012813	FLANGE WASHER SPRING		01
10	0531062203	REGULATOR SPRING LINE FERTILIZER		01
11	0503010417	7/8" NUT		02
12	0502012789	FIXER SUPPORT FERTILIZER ROW		01
13	0591011146	SUPPORT LONG		01
14	0531061648	LONG ARM LOWER FERTILIZER LINE		01
15	0591011147	SLEEVE ARM ROW		02
16	0503019278	LUBRICANT SLEEVE		02
17	0503011109	2-119 N 3006-9B O'RING		02
18	0503011254	7/8" HEX SELF ADJUSTING NUT		01
19	0521057679	ASSY CUTTING DISK 20	71	01
20	0581014070	FERTILIZER NOZZLE		01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
22	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
23	0503010025	3/8 SPRING WASHER		02
24	0503010026	3/8" NUT		02
25	0591016141	LONG LINE COMPLEMENT		02
26	0521053673	SCARIFIER ROD WITH NOZZLE	69	01
27	0503010019	1/2" SPRING WASHER		04
28	0503010060	1/2 UNC G.5 ZN HEX NUT		04
29	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
30	0503010479	BOLT		02
31	0511018662	SPACING PLATE		04

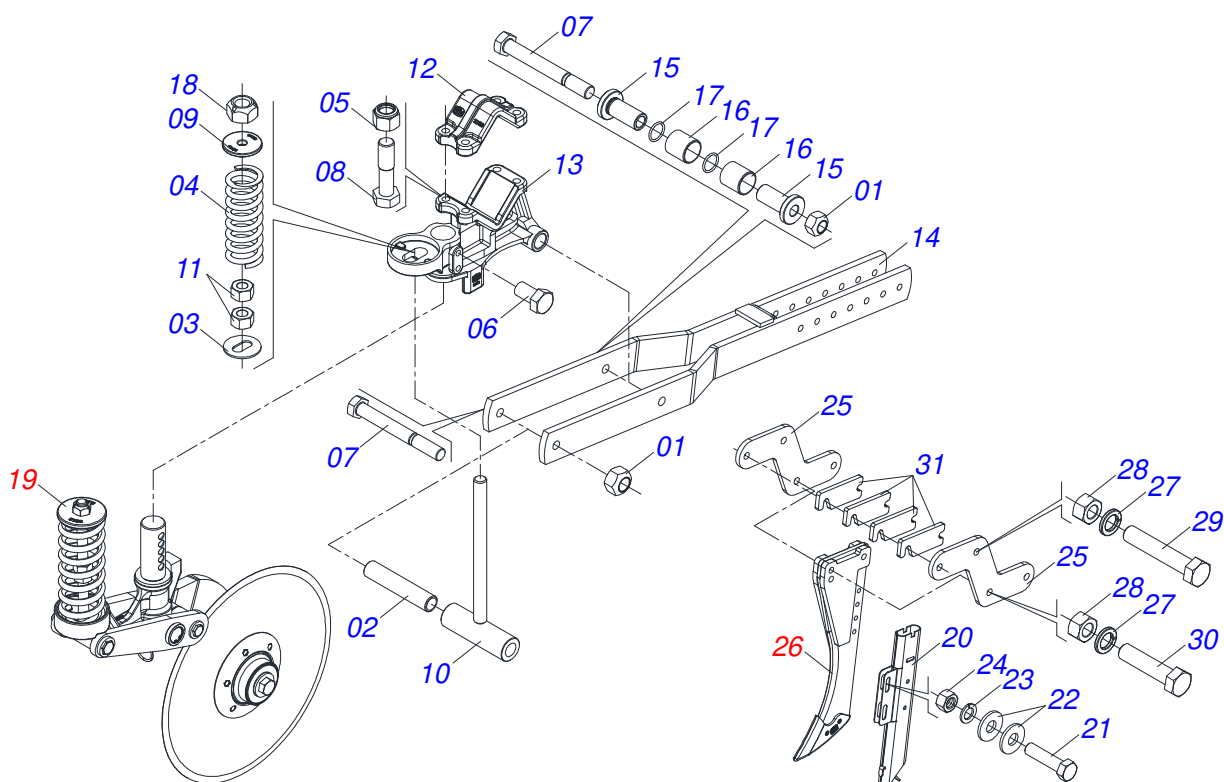


Item	Code	Description	See page	QT
01	0503011255	3/4" LOCK NUT		02
02	0571019062	SLEEVE		01
03	0571019059	SUPPORT WASHER		01
04	0503034320	COMPRESSSSION SPRING		01
05	0503010811	5/8" UNF SELF ADJUSTING NUT		04
06	0503011854	5/8" X 1-1/4" BOLT		02
07	0521010066	3/4" X 8.12" BOLT		02
08	0503017960	5/8" X 3-12" BOLT		04
09	0502012813	FLANGE WASHER SPRING		01
10	0531062203	REGULATOR SPRING LINE FERTILIZER		01
11	0503010417	7/8" NUT		02
12	0502012789	FIXER SUPPORT FERTILIZER ROW		01
13	0591011146	SUPPORT LONG		01
14	0531061648	LONG ARM LOWER FERTILIZER LINE		01
15	0591011147	SLEEVE ARM ROW		02
16	0503019278	LUBRICANT SLEEVE		02
17	0503011109	2-119 N 3006-9B O'RING		02
18	0503011254	7/8" HEX SELF ADJUSTING NUT		01
19	0521057679	ASSY CUTTING DISK 20	71	01
20	0581014070	FERTILIZER NOZZLE		01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
22	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
23	0503010025	3/8 SPRING WASHER		02
24	0503010026	3/8" NUT		02
25	0591016141	LONG LINE COMPLEMENT		02
26	0501110723	SCARIFIER ROD	70	01
27	0503010019	1/2" SPRING WASHER		04
28	0503010060	1/2 UNC G.5 ZN HEX NUT		04
29	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
30	0503010479	BOLT		02
31	0511018662	SPACING PLATE		04

SCARING ROD

0521053946

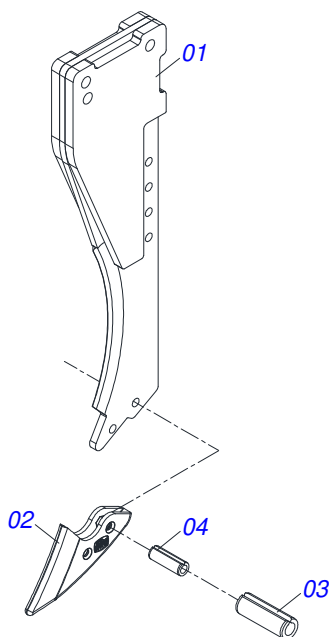


Item	Code	Description	See page	QT
01	0521065998	SCARIFIER SPINDLE		01
02	0502070085	FIXED ROD BEARING		01
03	0513010288	ELASTIC PIN 701211 10 X 24		02
04	0513010289	ELASTIC PIN 701211 10 X 24		02

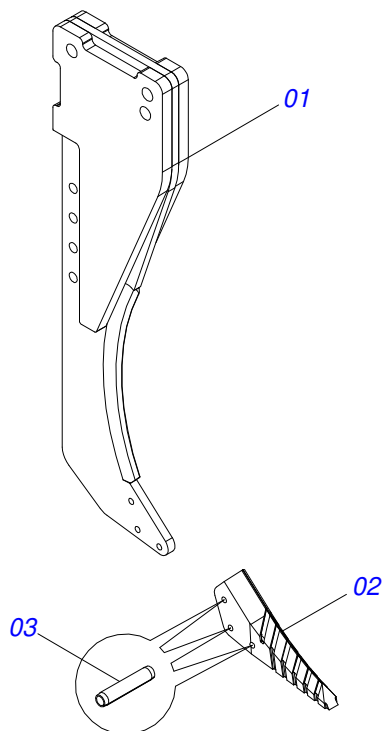

Item	Code	Description	See page	QT
01	0521066350	ROD SCARIFIER SPINDLE		01
02	1902070082	POINT SUBSOILER		01
03	0503010585	0,24" X 1.18" SPRING PIN		03

SCARIFIER ROD WITH NOZZLE


0521053673

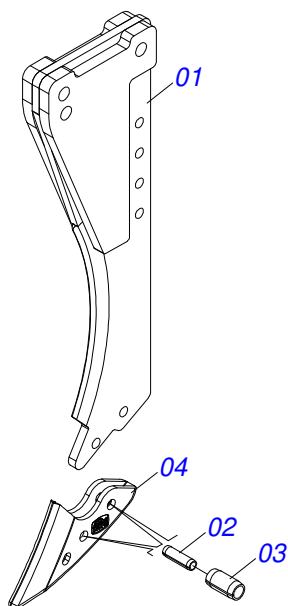

Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER ROD		01
02	0503011402	0.2" X 0.8" SPRING PIN		02
03	0503016853	SPRING PIN		02
04	0502040869	FIXED ROD BEARING		01

SCARIFIER ROD


0501110723

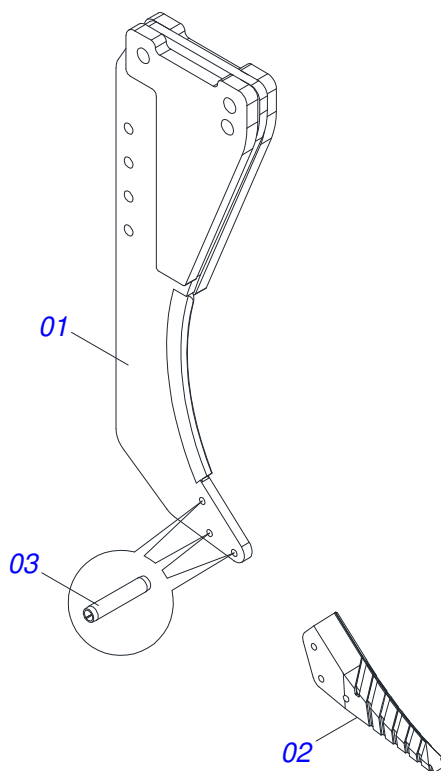


Item	Code	Description	See page	QT
01	0521063867	SCARIFIER ROD		01
02	0502070082	POINT SUBSOILER		01
03	0503010585	0,24" X 1.18" SPRING PIN		03

ASSY CUTTING DISK 20

0521057679

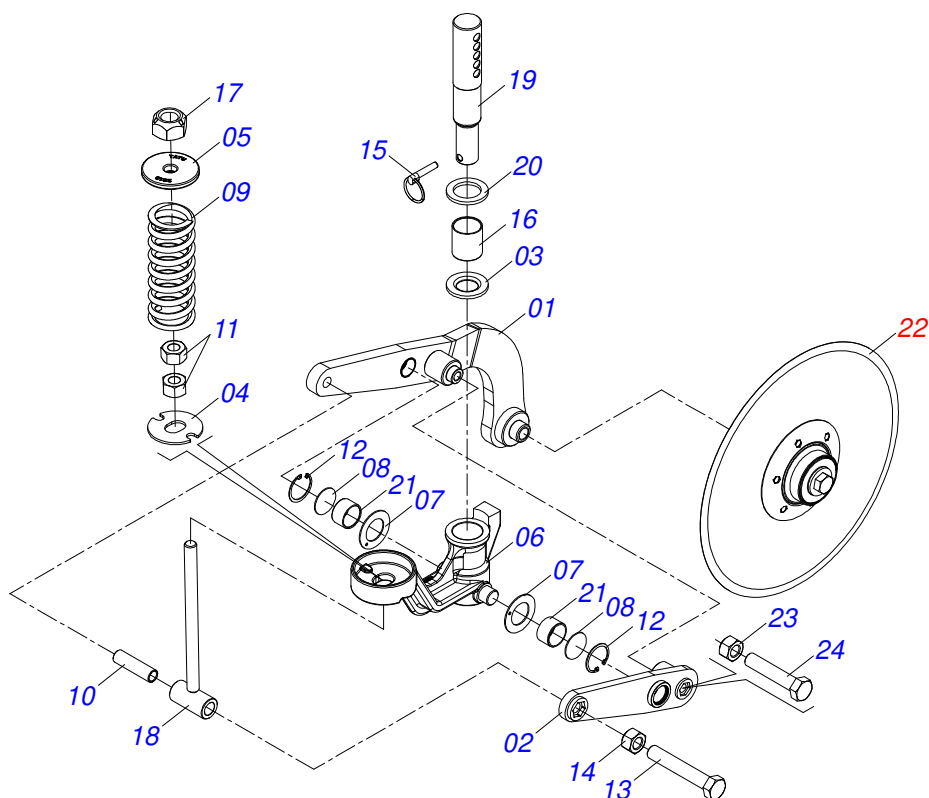


Item	Code	Description	See page	QT
01	0531060662	MONO ARM DISC CUTTING		01
02	0531060661	ARM SUPPORT		01
03	0571019034	FLANGE WASHER AXLE		01
04	0571019032	SUPPORT WASHER		01
05	0502012813	FLANGE WASHER SPRING		01
06	0591010619	DC SPRING SUPPORT		01
07	0503019274	WASHER		02
08	0581017628	LID		02
09	0503034320	COMPRESSION SPRING		01
10	0591010625	19,50 X 25 X 91,50/91,30 SLEEVE		01
11	0503010417	7/8" NUT		02
12	0503010390	SEAL RING		02
13	0503011198	C3/4" X 6" SCREW		01
14	0503011255	3/4" LOCK NUT		01
15	0503030430	7/16 X 2" PIN LOCK		01
16	0503019271	SELF LUBRICATING BUSHING		01
17	0503011254	7/8" HEX SELF ADJUSTING NUT		01
18	0531061481	MONO SPRING DISC CUTTING REGULATOR		01
19	0591011144	FIXATION AXLE		01
20	0591010628	DC AXIS BACKREST WASHER		01
21	0503019272	LUBRICANT SLEEVE		02
22	0521057681	BOX WITH DISC CUTTING 20 BEARING CONICO	72	01
23	0503012412	5/8 UNC SELF LOCKING NUT		01
24	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		01

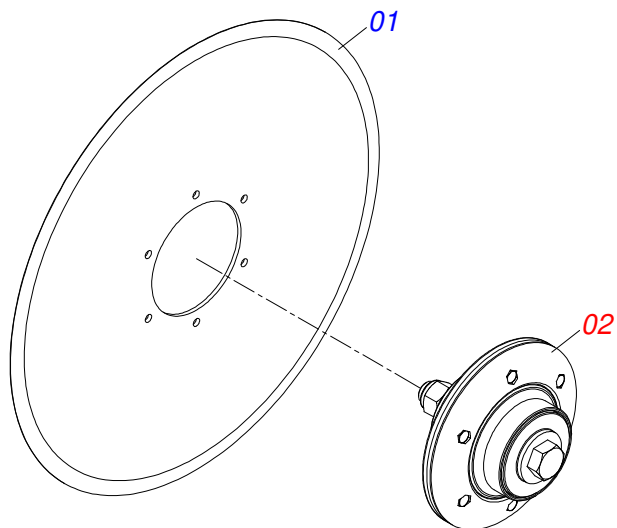


Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521057680	DISC CUTTING BOX	73	01

DISC CUTTING BOX


0521057680

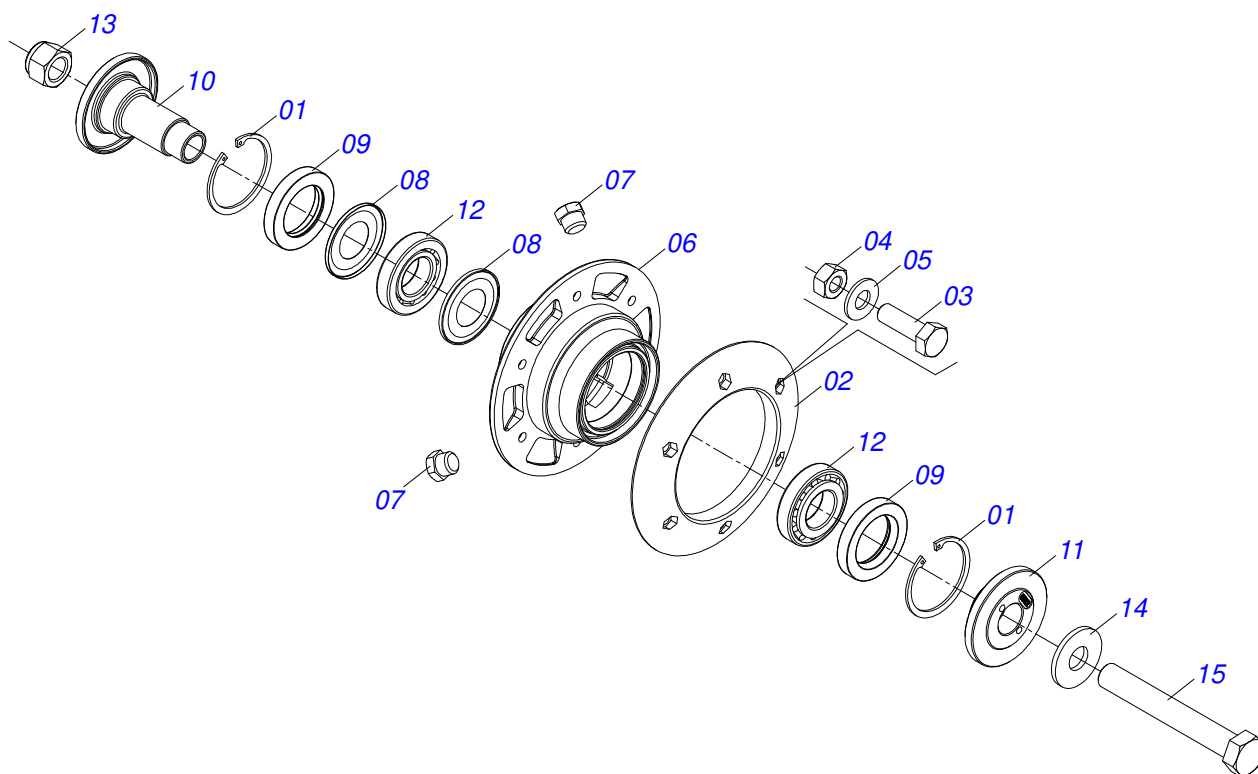


Item	Code	Description	See page	QT
01	0503010370	502072 CLAMPING RING (FOR AXLE)	02	
02	0502020641	BLADE DISC FLANGE	01	
03	0503018825	5/16 UNC UNC BOLT	06	
04	0503013816	5/16" LOCKNUT	06	
05	0501010694	FLAT WASHER	06	
06	0502012862	DISC BLADE HUB	01	
07	0511017907	1/8" BSPT X 6 PLUG	02	
08	0503019285	RING	02	
09	0503010590	00674-B SEAL	02	
10	0591012836	CUTTING DISC AXLE	01	
11	0502040872	REGULATORY NUT	01	
12	0503012170	30207 ROLLER BEARING	02	
13	0503010812	7/8" UNF SELF LOCKING NUT	01	
14	0501010067	22.5 X 56 X 4.75 FLAT WASHER	01	
15	0503019283	SCREW 7/8 UNF X 6.1/4	01	

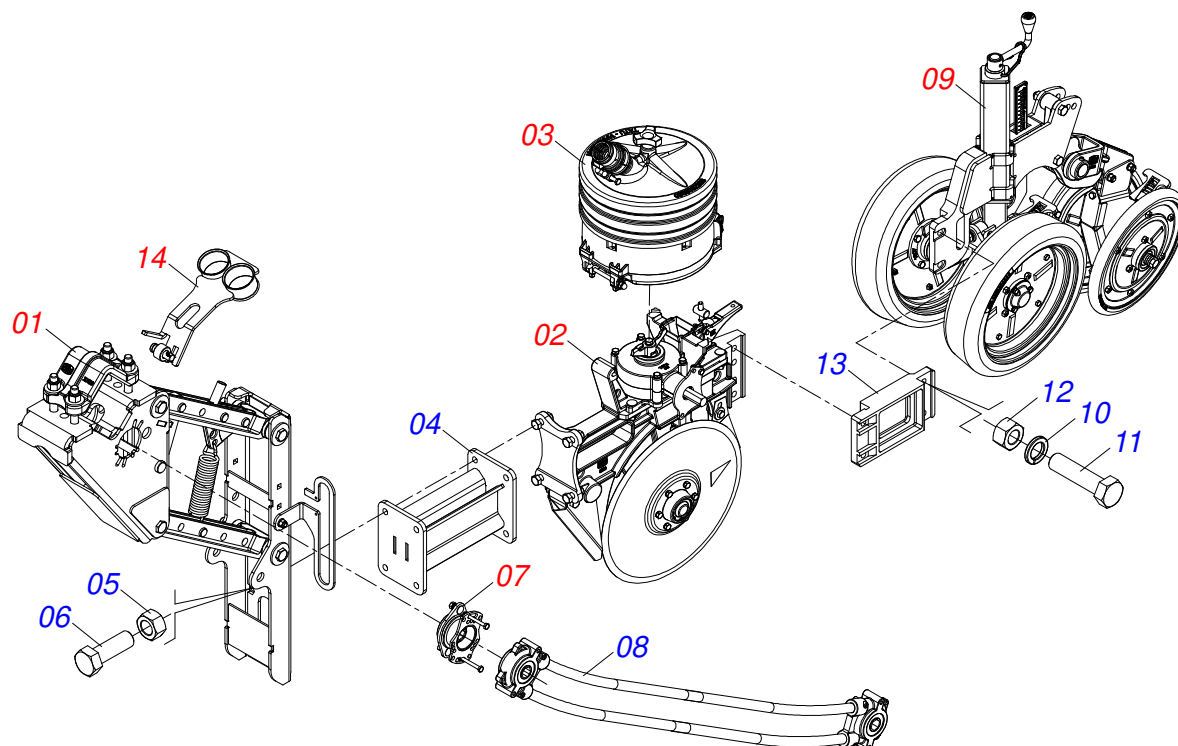


Item	Code	Description	See page	QT
01	0521059626	FRONT LINE	80	01
02	0521056945	REAR FRAME	81	01
03	0521059466	TITANIUM SEED DISTRIBUTOR	90	01
04	0531060405	EXTENSION		01
05	0503012136	NUT 1/2 NF		04
06	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
07	0521059627	UNIVERSAL CURRENT / CABLE BEARING	92	01
08	0503063180	SUPER / LONG 1200 ENCAPSULATED CHAIN		01
09	0521054758	CONTROL DEPTH WITH REGULATOR	93	01
10	0503010019	1/2" SPRING WASHER		04
11	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
12	0503010060	1/2 UNC G.5 ZN HEX NUT		04
13	0502012284	EXTENSION		01
14	0531051094	MOUNTED HOSE GUIDE ASSEMBLY	103	01

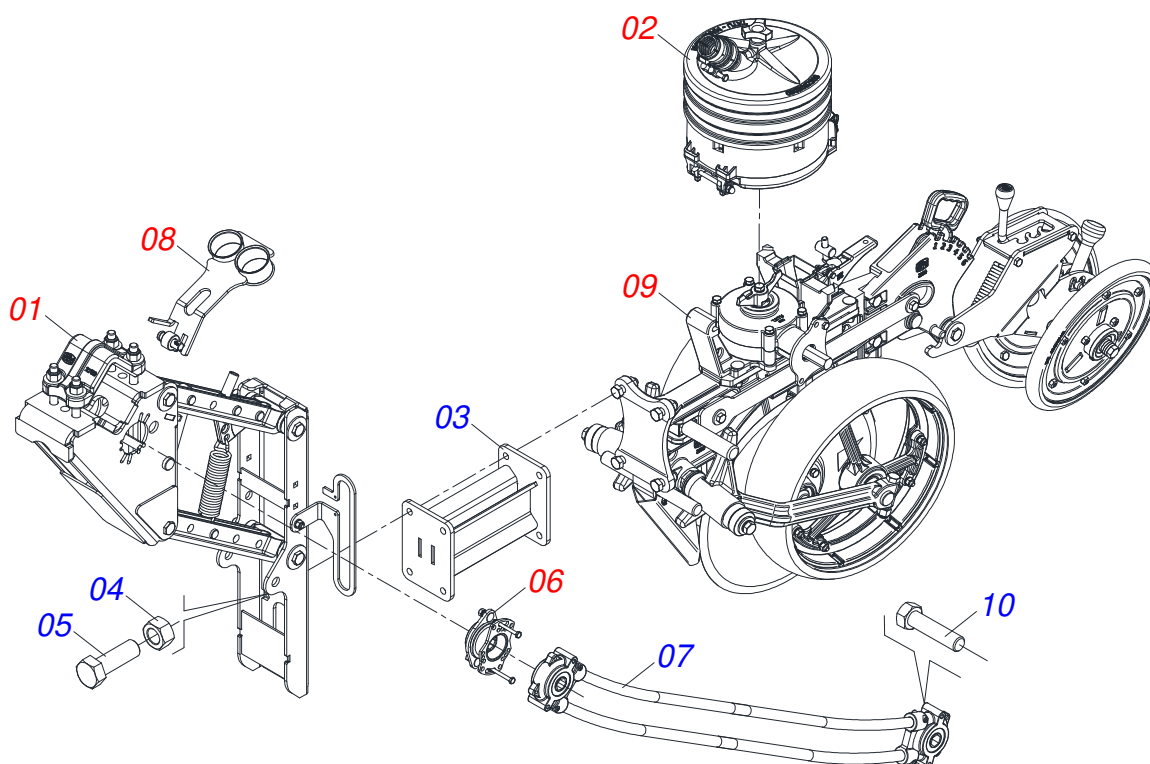


Item	Code	Description	See page	QT
001	0521059626	FRONT LINE	80	01
002	0521059466	TITANIUM SEED DISTRIBUTOR	90	01
003	0531060405	EXTENSION		01
004	0503012136	NUT 1/2 NF		04
005	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
006	0521059627	UNIVERSAL CURRENT / CABLE BEARING	92	01
007	0503063180	SUPER / LONG 1200 ENCAPSULATED CHAIN		01
008	0531051094	MOUNTED HOSE GUIDE ASSEMBLY	103	01
009	0531051404	LEFT REAR SPICRR TITANIUM TIRE WITHOUT TAB	104	01
010	0503011295	M 8 X 1,25 X 25 BOLT		02

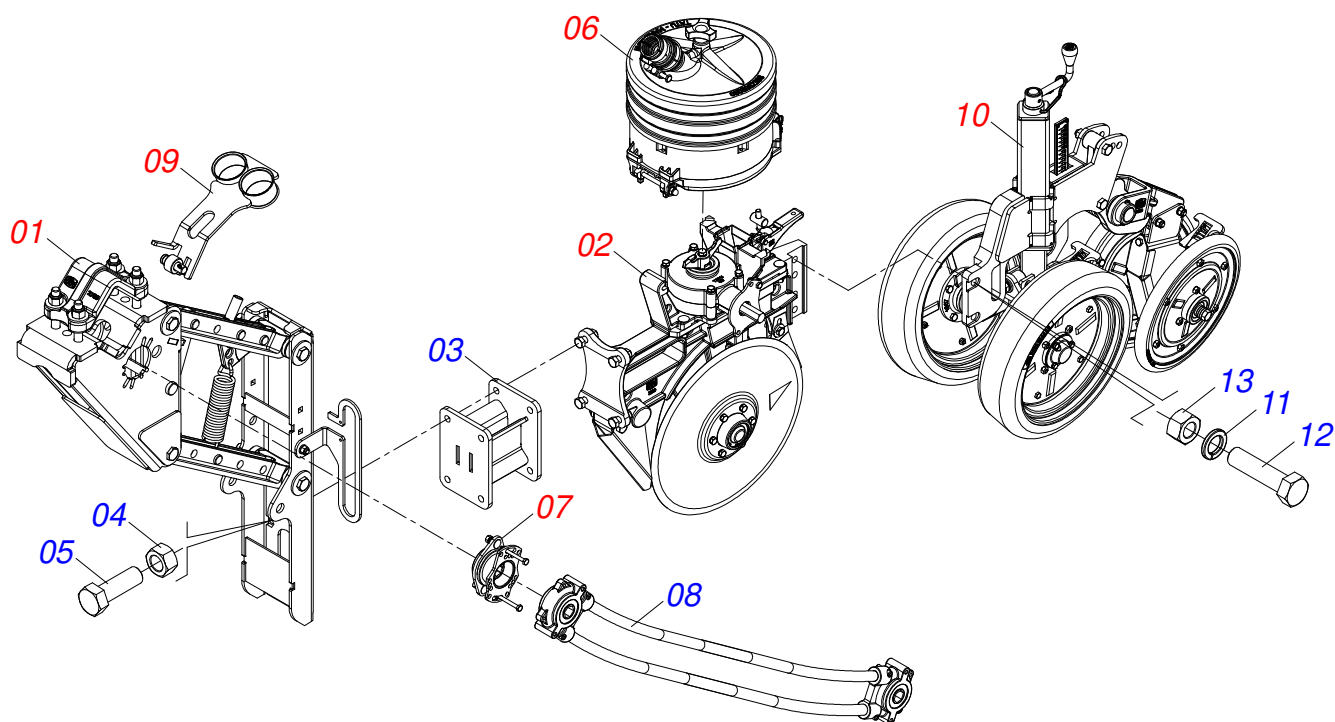


Item	Code	Description	See page	QT
01	0521059626	FRONT LINE	80	01
02	0521056945	REAR FRAME	81	01
03	0531061136	EXTENSION		01
04	0503012136	NUT 1/2 NF		04
05	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
06	0521059466	TITANIUM SEED DISTRIBUTOR	90	01
07	0521059627	UNIVERSAL CURRENT / CABLE BEARING	92	01
08	0503063179	LONG LINE ENCAPSULATED CHAIN		01
09	0531051094	MOUNTED HOSE GUIDE ASSEMBLY	103	01
10	0521054758	CONTROL DEPTH WITH REGULATOR	93	01
11	0503010019	1/2" SPRING WASHER		02
12	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
13	0503010060	1/2 UNC G.5 ZN HEX NUT		02

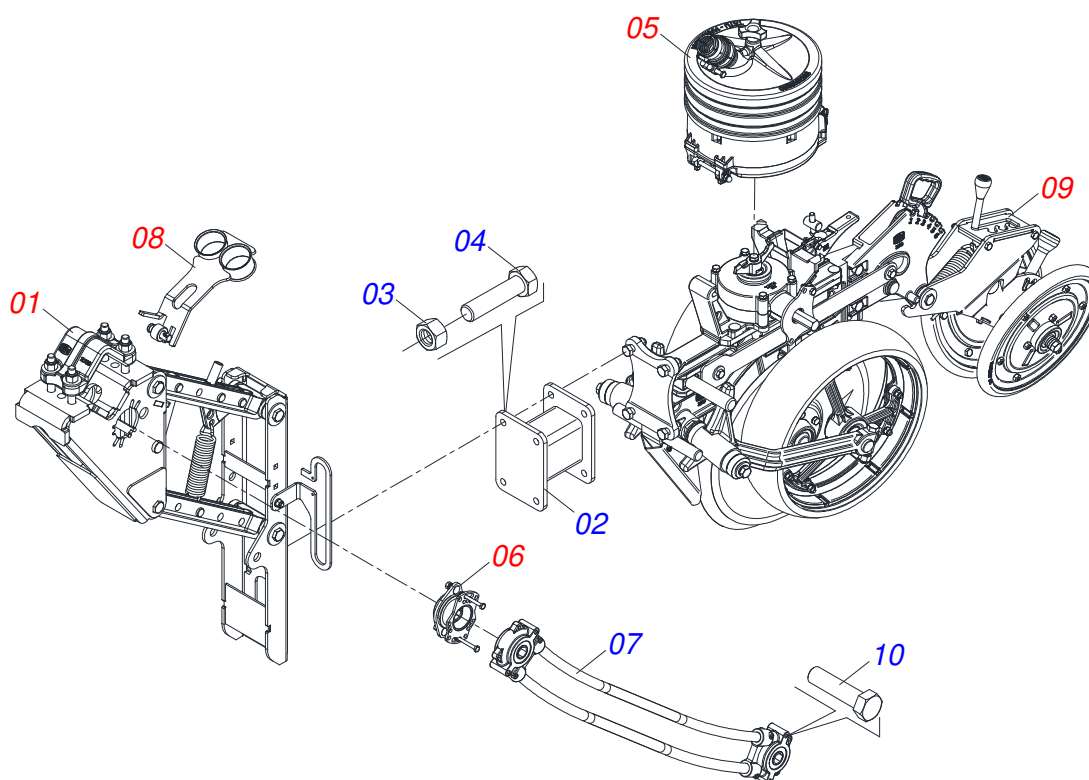


Item	Code	Description	See page	QT
01	0521059626	FRONT LINE	80	01
02	0531061136	EXTENSION		01
03	0503012136	NUT 1/2 NF		04
04	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
05	0521059466	TITANIUM SEED DISTRIBUTOR	90	01
06	0521059627	UNIVERSAL CURRENT / CABLE BEARING	92	01
07	0503063179	LONG LINE ENCAPSULATED CHAIN		01
08	0531051094	MOUNTED HOSE GUIDE ASSEMBLY	103	01
09	0531051404	LEFT REAR SPICRR TITANIUM TIRE WITHOUT TAB	104	01
10	0503011295	M 8 X 1,25 X 25 BOLT		02

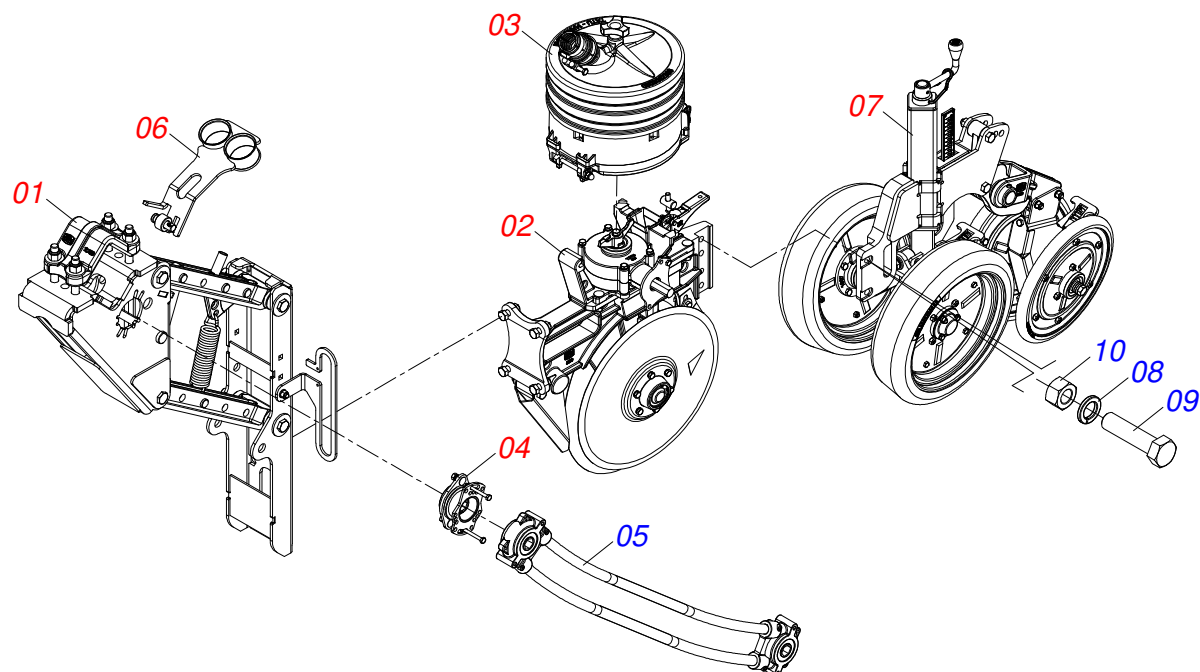


Item	Code	Description	See page	QT
01	0521059626	FRONT LINE	80	01
02	0521056944	REAR FRAME	82	01
03	0521059466	TITANIUM SEED DISTRIBUTOR	90	01
04	0521059627	UNIVERSAL CURRENT / CABLE BEARING	92	01
05	0503063178	SHORT LINE ENCAPSULATED CHAIN		01
06	0531051094	MOUNTED HOSE GUIDE ASSEMBLY	103	01
07	0521054758	CONTROL DEPTH WITH REGULATOR	93	01
08	0503010019	1/2" SPRING WASHER		02
09	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
10	0503010060	1/2 UNC G.5 ZN HEX NUT		02

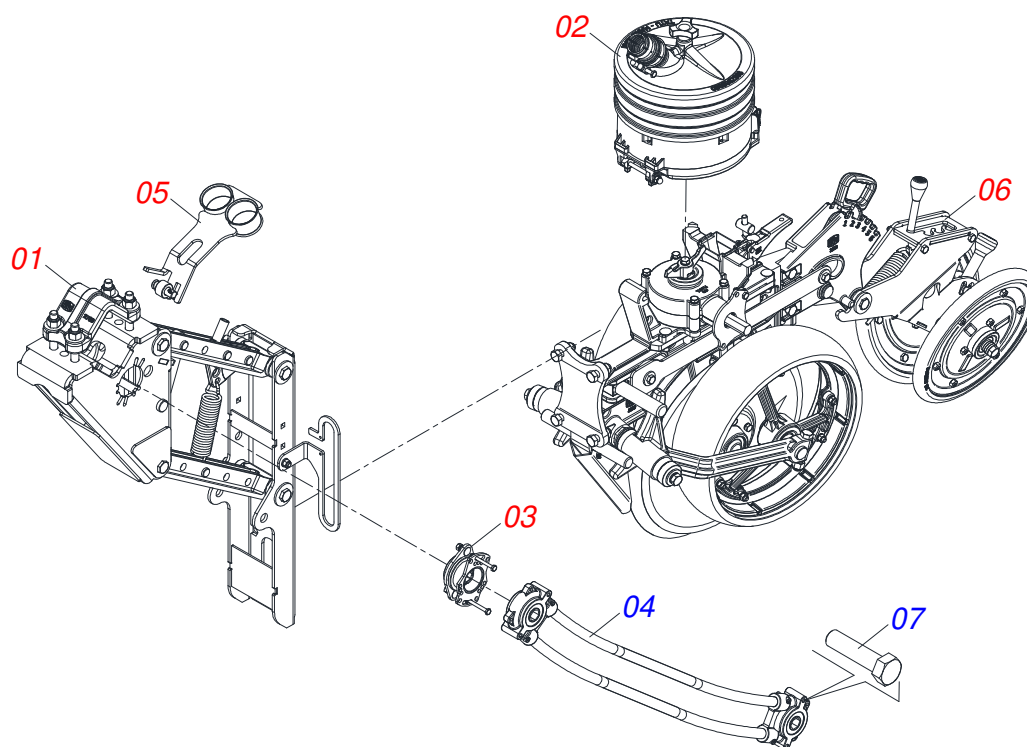


Item	Code	Description	See page	QT
01	0521059626	FRONT LINE	80	01
02	0521059466	TITANIUM SEED DISTRIBUTOR	90	01
03	0521059627	UNIVERSAL CURRENT / CABLE BEARING	92	01
04	0503063178	SHORT LINE ENCAPSULATED CHAIN		01
05	0531051094	MOUNTED HOSE GUIDE ASSEMBLY	103	01
06	0531051403	RIGHT REAR SPICRR TITANIUM TIRE WITHOUT TAB	105	01
07	0503011295	M 8 X 1,25 X 25 BOLT		02

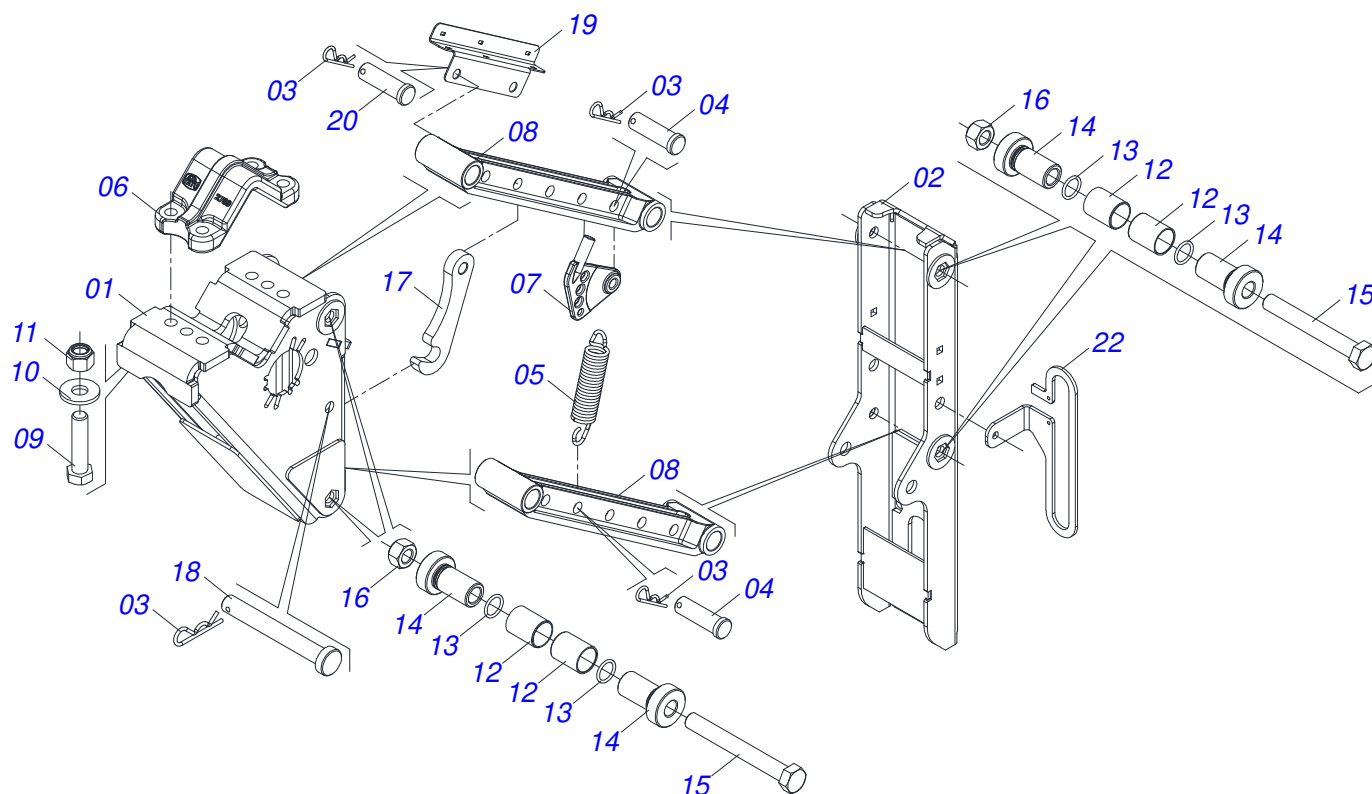

Item	Code	Description	See page	QT
01	0531060663	FRONT FRAME SEED LINE	01	
02	0531061428	REAR LINE	01	
03	0503030168	HITCH PIN CLIP	05	
04	0571018883	PIN FIXER SPRING	02	
05	0503034198	SPRING TRACTION 40 X 198 X 5,5	01	
06	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
07	0502012812	SEED ROW ADJUSTMENT LEVER ASSY	01	
08	0591011156	PIVOT ARM SEED ROW	02	
09	0503017857	BOLT 5/8 UNF 4	04	
10	0501012140	FLAT WASHER	04	
11	0503010811	5/8\" UNF SELF ADJUSTING NUT	04	
12	0503019273	AUTO LUBRICANT SLEEVE	08	
13	0503010045	O'RING	08	
14	0591012829	SPACER LOWER SLEEVE	08	
15	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN	04	
16	0503012412	5/8 UNC SELF LOCKING NUT	04	
17	0591012827	FRONT PENDULUM LINE	01	
18	0591012828	LOCK PIN ROW ARTICULAT	01	
19	0501219536	LINE GUTTER	01	
20	0501310623	SPRING FIXING PIN	02	

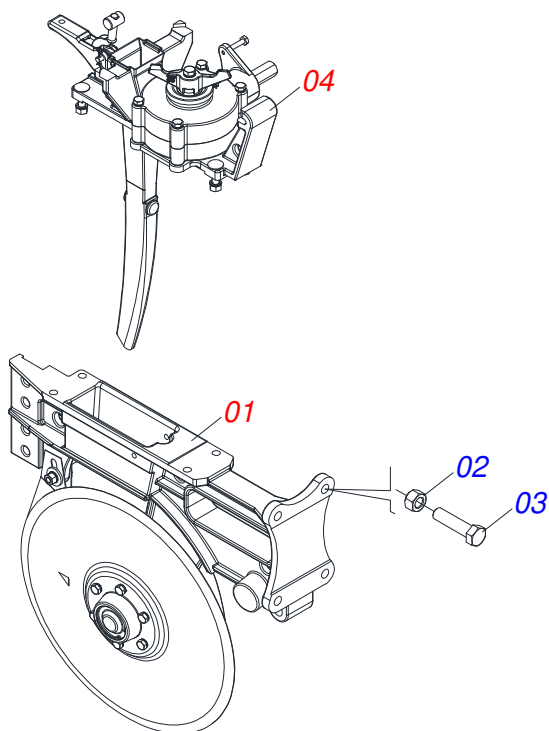


Item	Code	Description	See page	QT
01	0521056954	LEFT DDD ASSY	83	01
02	0503012136	NUT 1/2 NF		04
03	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
04	0521056582	TITANIUM SEED METER SET	89	01

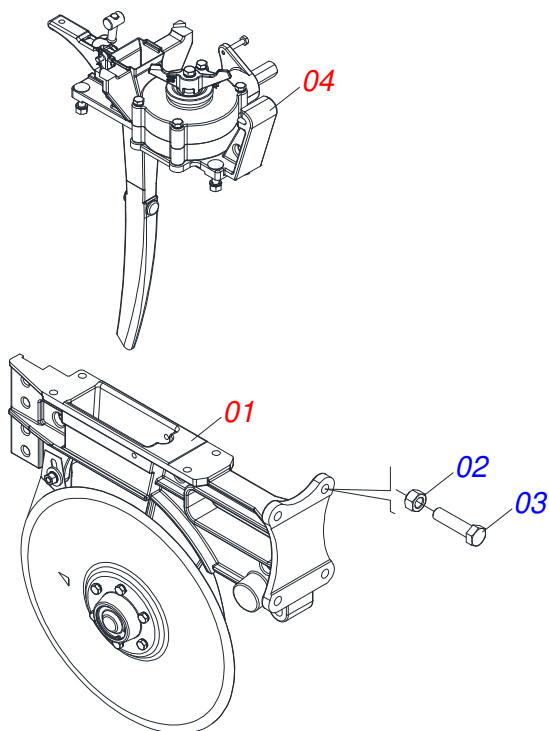


Item	Code	Description	See page	QT
01	0521056955	RIGHT DDD ASSY	84	01
02	0503012136	NUT 1/2 NF		04
03	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
04	0521056582	TITANIUM SEED METER SET	89	01

LEFT DDD ASSY


0521056954

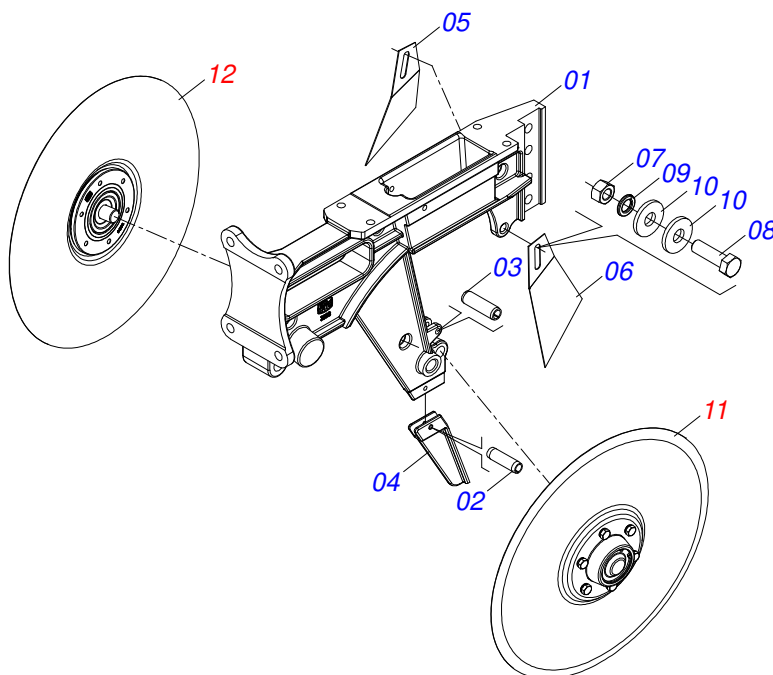


Item	Code	Description	See page	QT
01	0591011772	LEFT DDD BODY		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 85 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 86 FERTILIZER / SEED		01

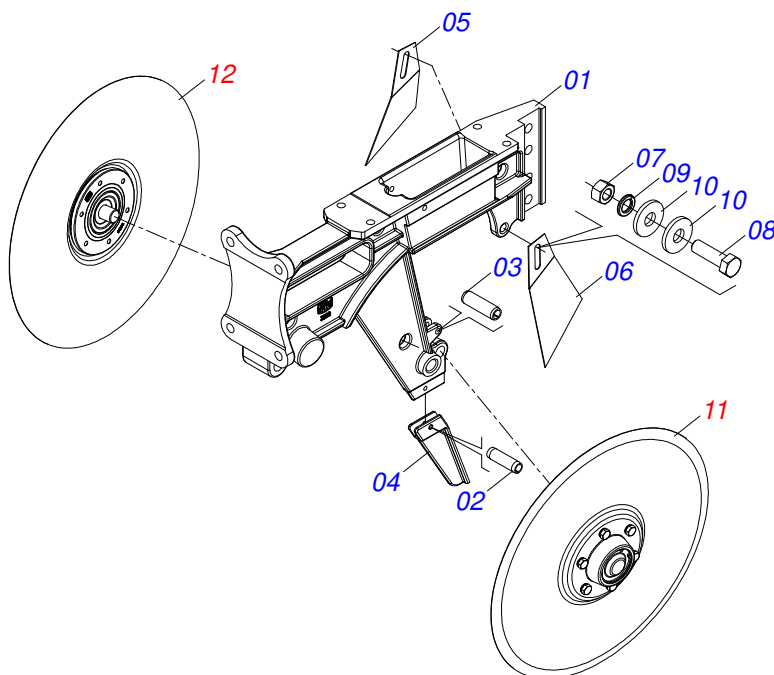


Item	Code	Description	See page	QT
01	0591011773	RIGHT DDD BODY		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 85 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 86 FERTILIZER / SEED		01

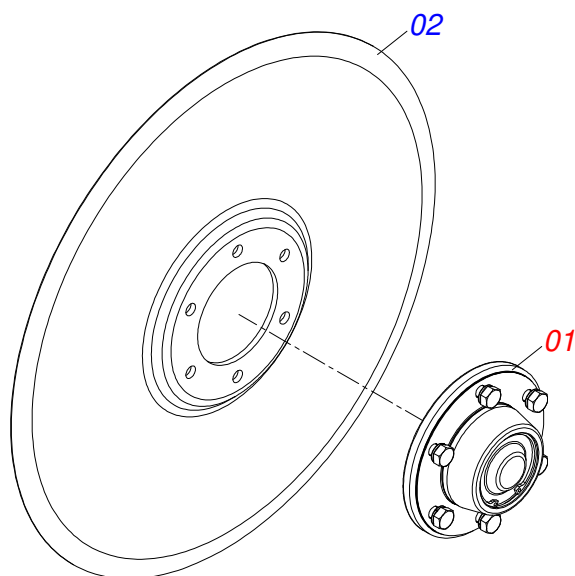


Item	Code	Description	See page	QT
01	0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	87	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

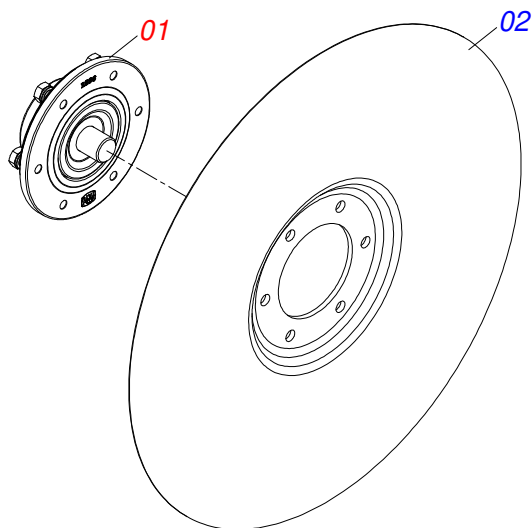


Item	Code	Description	See page	QT
01	0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	88	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

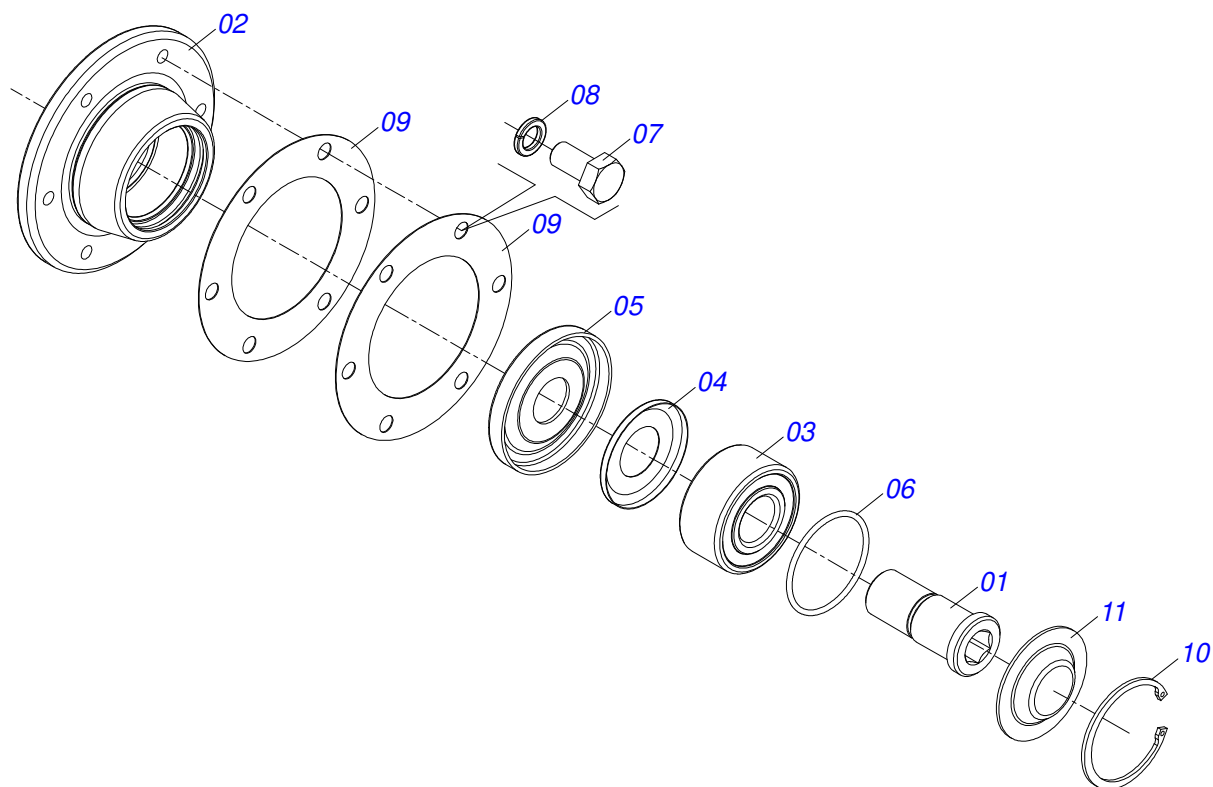

Item	Code	Description	See page	QT
01	0571011151	LEFT DOUBLE DISC HUB		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

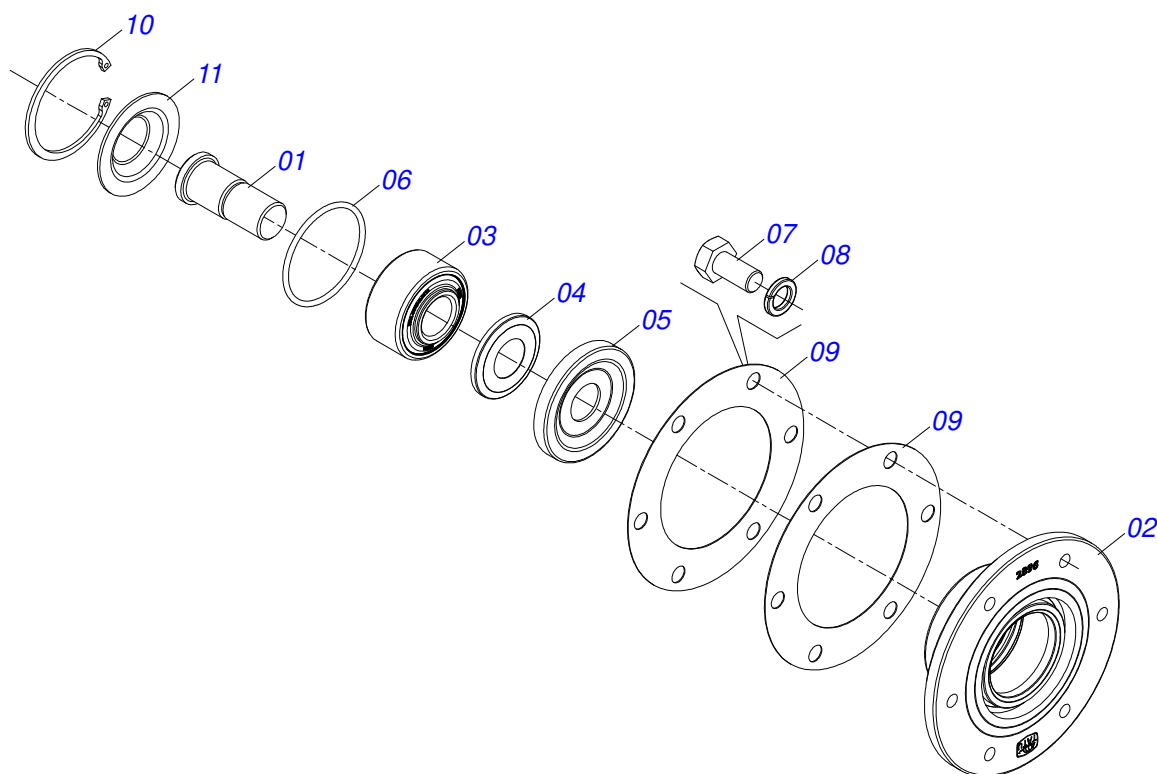


Item	Code	Description	See page	QT
01	0571011150	RIGHT DOUB DISC - HUB		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

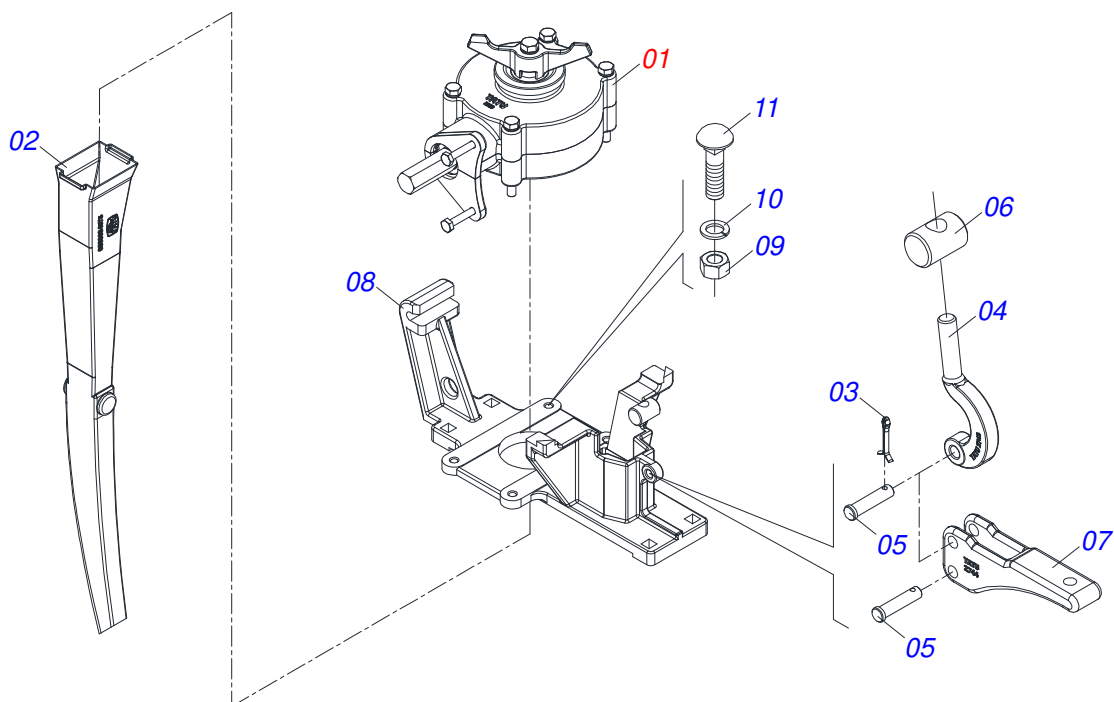


Item	Code	Description	See page	QT
01	0521056639	SEED ROW TRANSMISSION	124	01
02	0503034575	TITANIUM HIGH ROW SEED NOZZLE		01
03	0503010257	1/8" X 1" COTTERPIN		01
04	0502012743	FAST BOLT ASSY		01
05	0571014024	FAST BOLT GUIDE AXLE		02
06	0561019270	FAST BOLT ADJUSTMENT		01
07	0502012744	SPEED LOCK LEVER ASSY		01
08	0502012921	BASE FIXING SYSTEM		01
09	0503010026	3/8" NUT		04
10	0503010025	3/8 SPRING WASHER		04
11	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04

TITANIUM SEED DISTRIBUTOR


0521059466

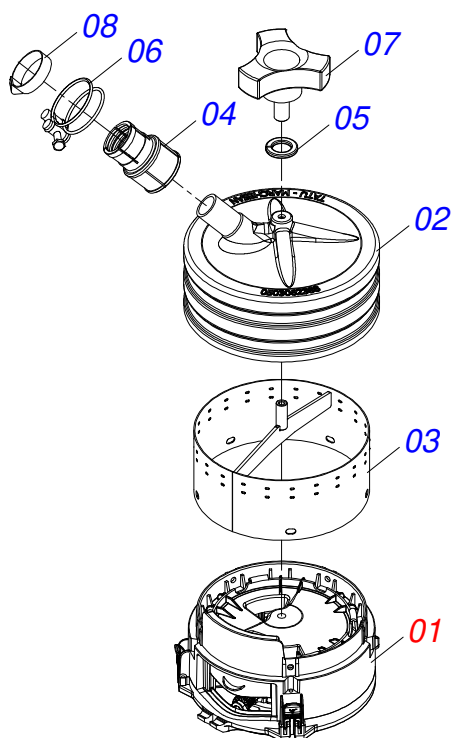


Item	Code	Description	See page	QT
01	0511052058	SEED SYSTEM TITANIUM	91	01
02	0503033771	SILO SEED AIR POSITIVE		01
03	0531061432	SEED SIEVE		01
04	0591014774	TERMINAL COUPLING HOSE		01
05	0503010025	3/8 SPRING WASHER		01
06	0503019222	BRACELET TYPE WIRE 3.2MM X 48 X 63 MM		01
07	0503035257	KNOB 3 POINTS K3 60 A 3/8 UNC X 20		01
08	0503019869	CLAMP		01

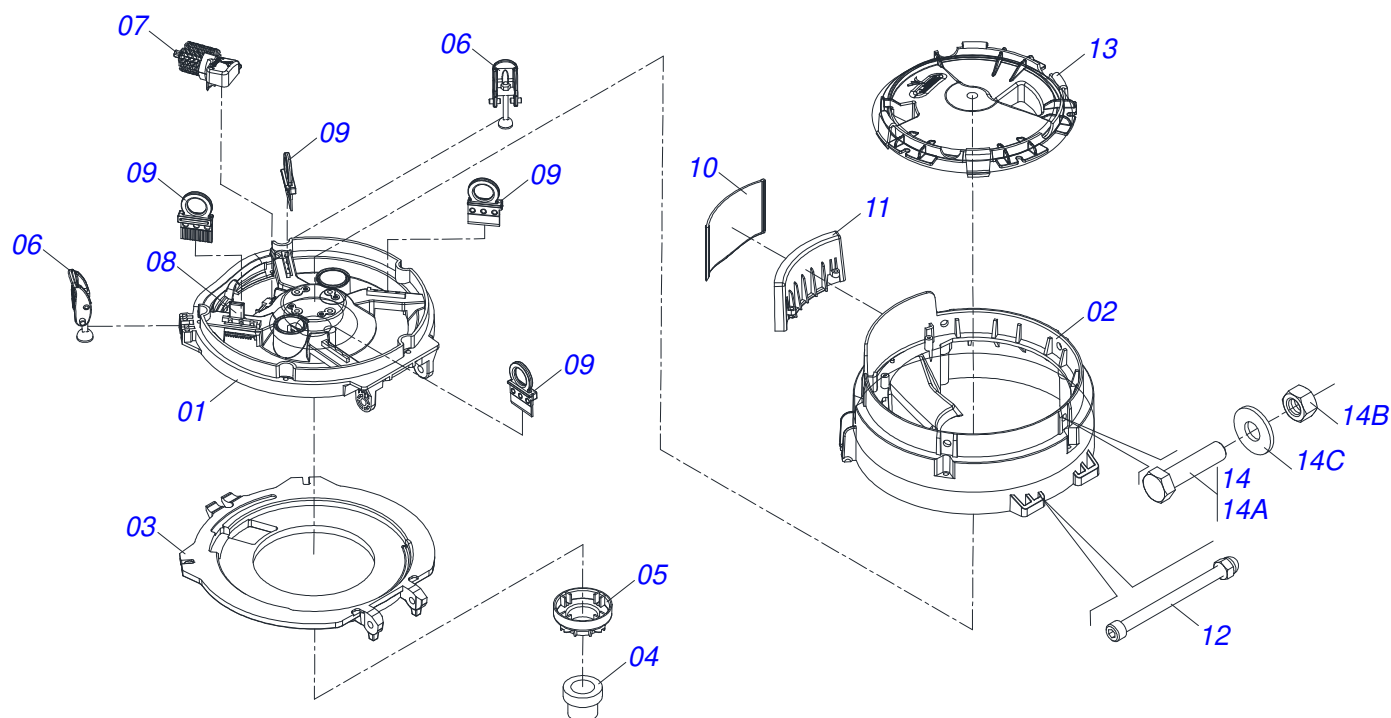


Item	Code	Description	See page	QT
01	0503062031	BASE SET		01
02	0503062032	NECK TITANIUM ASSY		01
03	0503062033	OPPOSITE BASE SET		01
04	0503062034	CENTRAL ADAPTER SET		01
05	0503062035	SET FALSE ADAPT CENTER		01
06	0503062036	SUBSET ASSY LOCK BASE		01
07	0503062037	SUBSET ESCOVAFLEX ASSY		01
08	0503062038	ASSY ANTI-LEAP		01
09	0503062039	POLIFLOW TITANIUM ASSY		01
09.	0503016279	POLIFLOW TITANIUM ASSY		01
10	0503062040	DISPLAY ASSY TITANIUM 1050010		01
11	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
12	0503062042	SET BOLT ARTICULADOR		01
13	0503062043	ASSY LIMIT WEIGHT		01
14	0503062044	ASSEMBLY SEED HOPPER SET		01
14A	0503016285	BOLT		05
14B	0503016286	HEX NUT		05
14C	0503016287	FLAT WASHER		05

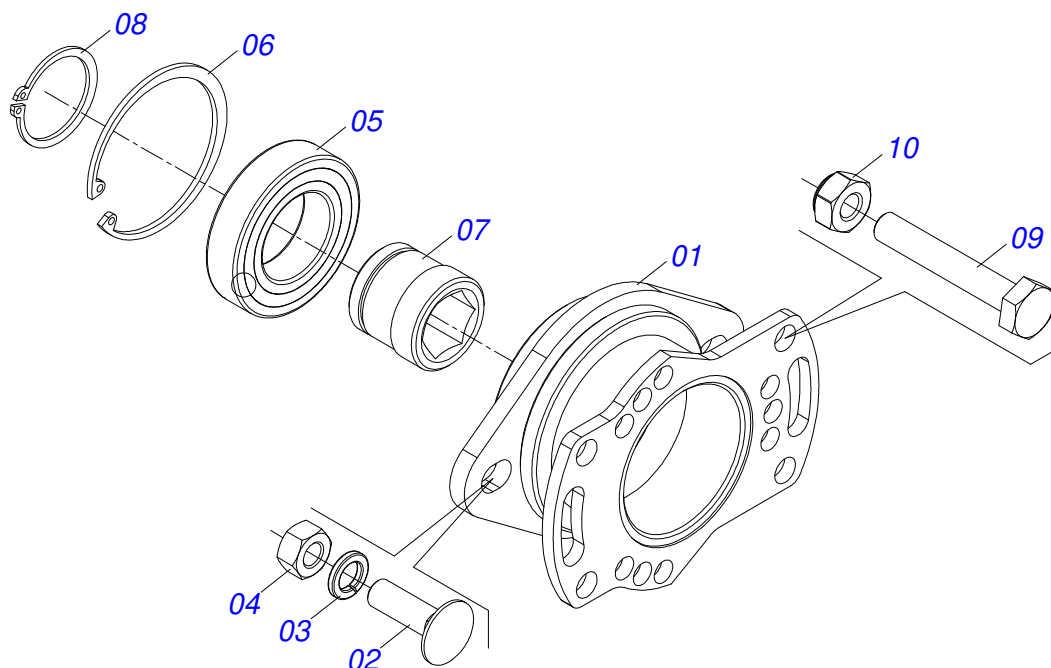

Item	Code	Description	See page	QT
01	0531061496	BEARING		01
02	0503011953	5/16" X 1" BOLT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	5/16" NUT		02
05	0503019373	6006 2RS1 NATIONAL BEARING		01
06	0503012858	502075 CLAMPING RING (FOR HOLE)		01
07	0581019823	BEARING AXLE BODY WITHOUT LUBRICATION		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		01
09	0503011194	BOLT 1/4 UNC X 2.1/2 CS G.2 ZN		02
10	0503012880	1/4" UNC SELF ADJUSTING NUT		02

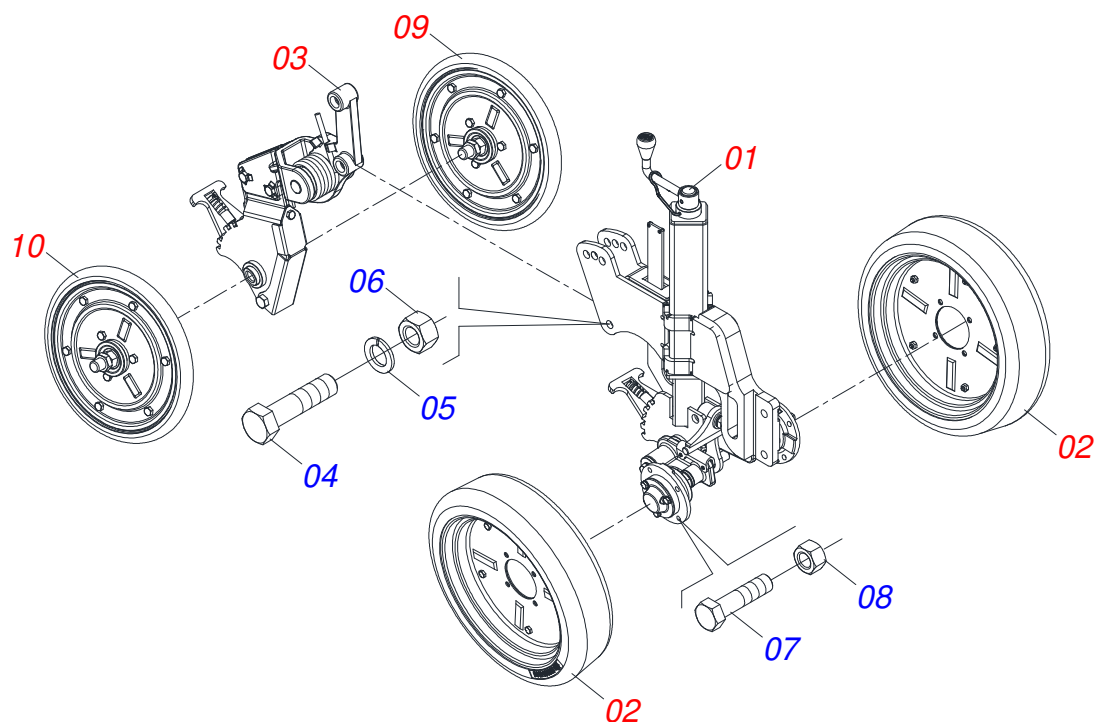

Item	Code	Description	See page	QT
01	0521054751	DEPTH CONTROL WITH THREAD	94	01
02	0511055819	DEPTH BAND WITH RIM	99	02
03	0521054752	V COMPACTING SYSTEM	100	01
04	0503010479	BOLT		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010060	1/2 UNC G.5 ZN HEX NUT		02
07	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		08
08	0503013816	5/16" LOCKNUT		08
09	0521054753	DRIVE WHEEL V RUBBER RIGHT	101	01
10	0521054754	DRIVE WHEEL V LEFT RUBBER	102	01

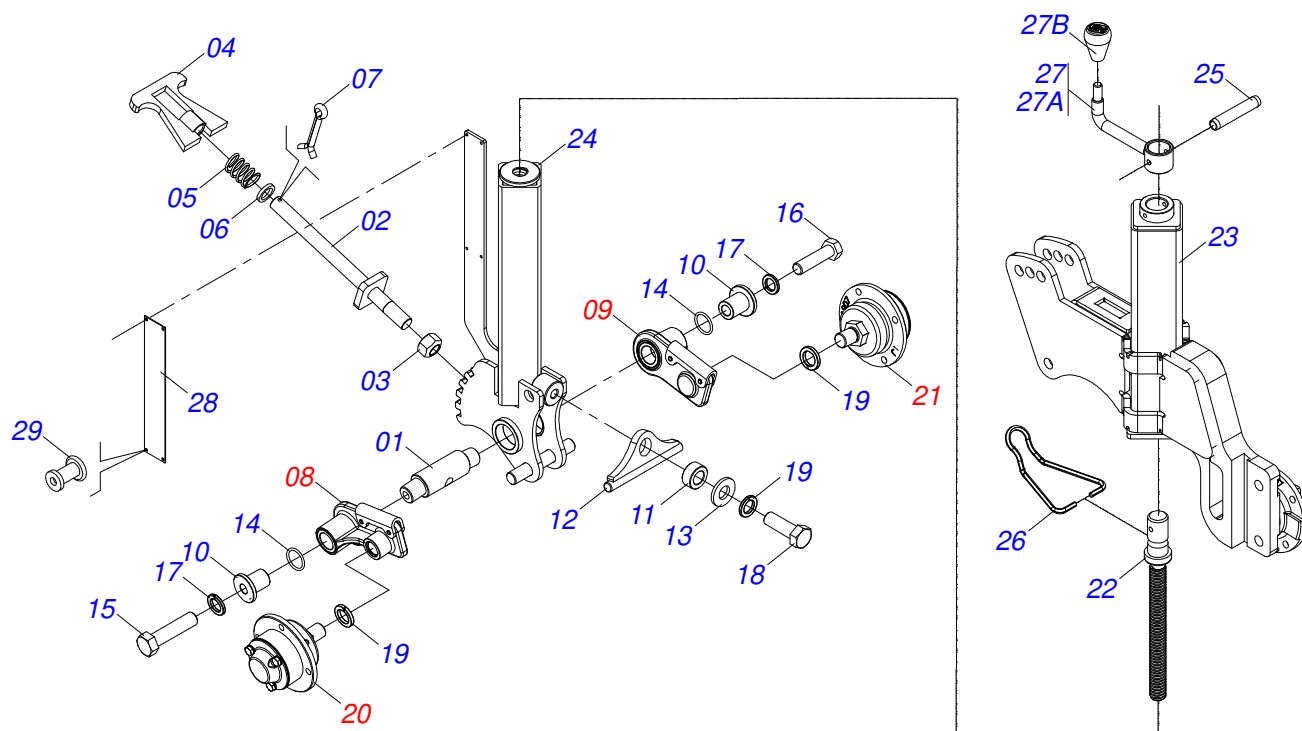


Item	Code	Description	See page	QT
01	0581017621	CONTROL AXLE		01
02	0521063812	REGULATOR LEVER ALXE		01
03	0503011336	1/2" HEX SELF ADJUSTING NUT		01
04	0511065308	LOCK REGULATOR		01
05	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
06	0541011627	FLAT WASHER		01
07	0503010140	1/8" X 3/4" COTTERPIN		01
08	0521053245	LEFT ARM WHEELS	95	01
09	0521053244	COVERING WHEEL RIGHT ARM ASSEMBLED	96	01
10	0581017646	SLEEVE LOCK CONTROL ARM		02
11	0571013189	SLEEVE SUPPORT BEATER		01
12	0521063813	WHEEL PRESS BEATER		01
13	0501010937	13,50 X 28 X 3,00 FLAT WASHER		01
14	0503010045	O'RING		04
15	0503017375	1/2" X 1-1/4" BOLT		01
16	0503014007	1/2" X 1-1/4" BOLT		01
17	0503010019	1/2" SPRING WASHER		03
18	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		01
19	0503010023	3/4" SPRING WASHER		04
20	0521053483	CPRA RIGHT DEPTH CONTROL CUBE WITHOUT LUBRICATION		01
21	0521053484	CPRA LEFT DEPTH CONTROL CUBE WITHOUT LUBRICATION		01
22	0581019171	REGULATOR		01
23	0521069476	EXTERNAL COLUMN CONTROL DEPTH		01
24	0521069475	INTERNAL COLUMN CHECK DEPTH		01
25	0503010683	0,2" X 1,2" SPRING PIN		01
26	0503034830	REGULATION LANCHE		01
27	0521054750	CRANK ASSEMBLY		01
27A	0521069477	HAND CRANK		01
27B	0503030878	LEVER CRANK		01
28	0503030751	REGULATOR PLATE		01




**USAP 3200 MECHANICAL TITANIUM - FRAME 7670/8470 -
DEPTH CONTROL WITH THREAD**

Page 94
0521054751


Item	Code	Description	See page	QT
29	0503010001	3.2 X 5.5 RIVET		04

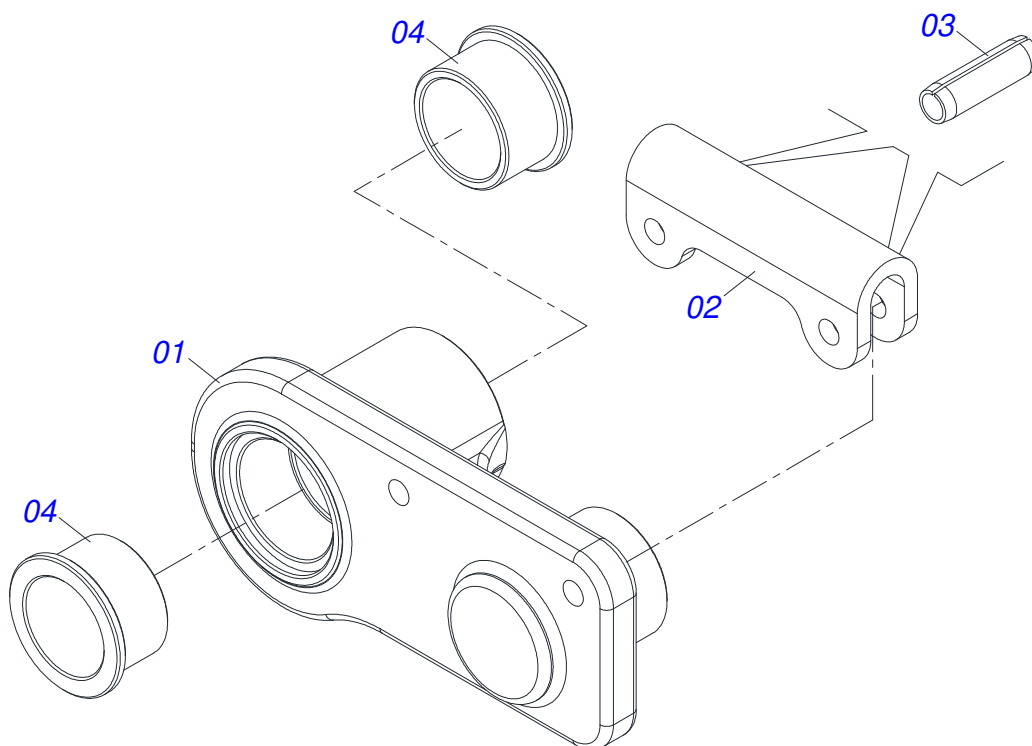


Item	Code	Description	See page	QT
01	0581017620	LEFT ARM WHEELS		01
02	0581011340	ARM CASE		01
03	0503011402	0.2" X 0.8" SPRING PIN		02
04	0503019275	SLEEVE LUBRICATION SYSTEM		01

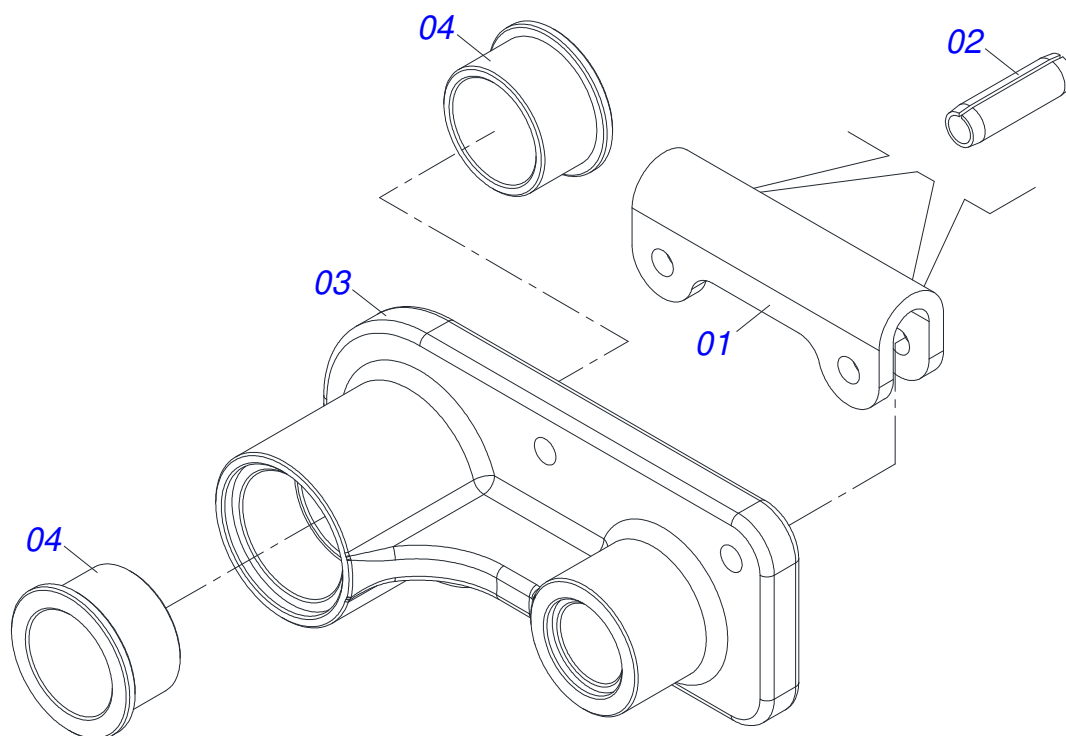


Item	Code	Description	See page	QT
01	0581011340	ARM CASE		01
02	0503011402	0.2" X 0.8" SPRING PIN		02
03	0581017645	WHEEL RIGHT ARM		01
04	0503019275	SLEEVE LUBRICATION SYSTEM		01

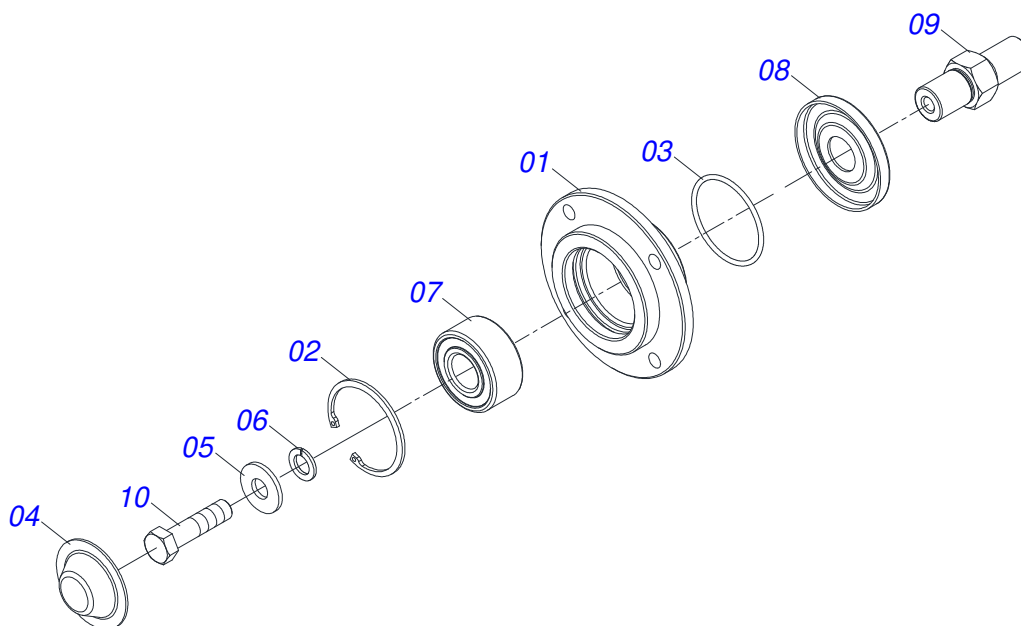


Item	Code	Description	See page	QT
01	0581019165	CASE WHEEL DEPTH WITHOUT GREASE FITTING		01
02	0503015081	502052 CLAMPING RING (FOR AXLE)		01
03	0503014679	2-134 O'RING		01
04	0581019170	CUBE COVER		01
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
06	0503010025	3/8 SPRING WASHER		01
07	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
08	0581019168	DUST CLOAK		01
09	0581019166	RIGHT AXIS		01
10	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01

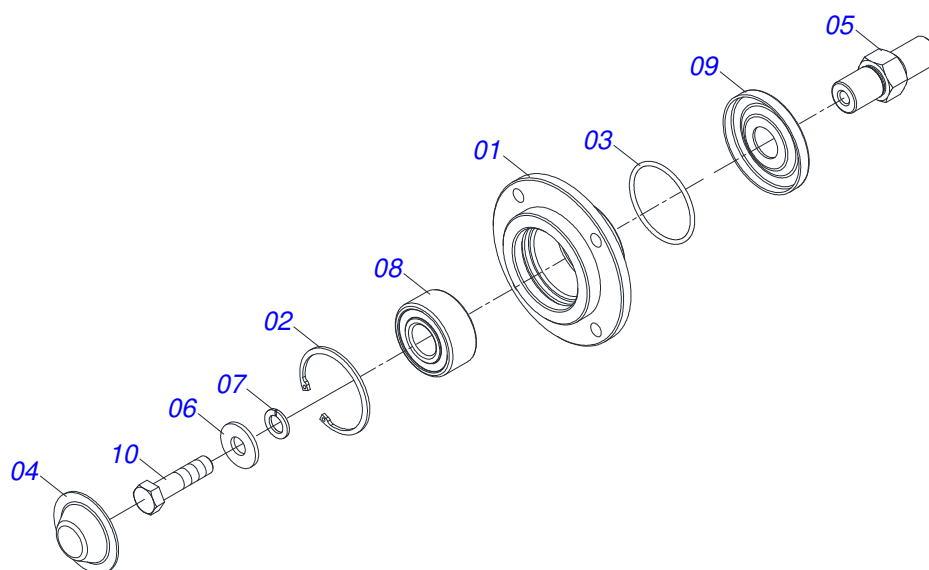


Item	Code	Description	See page	QT
01	0581019165	CASE WHEEL DEPTH WITHOUT GREASE FITTING		01
02	0503015081	502052 CLAMPING RING (FOR AXLE)		01
03	0503014679	2-134 O'RING		01
04	0581019170	CUBE COVER		01
05	0581019167	LEFT AXLE		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
07	0503010025	3/8 SPRING WASHER		01
08	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
09	0581019168	DUST CLOAK		01
10	0503019348	SCREW 3/8 UNC X 3/4		01

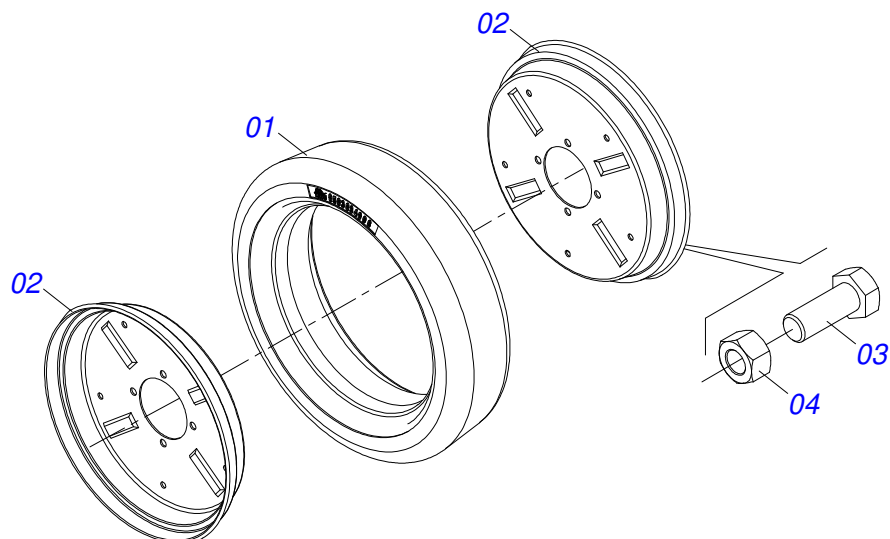


Item	Code	Description	See page	QT
01	0503034008	DEPTH CONTROL		01
02	0521010832	RIM FLANGE		02
03	0503013758	1/4" X 1-1/2" BOLT		05
04	0503013814	1/4" NC LOCKNUT		05

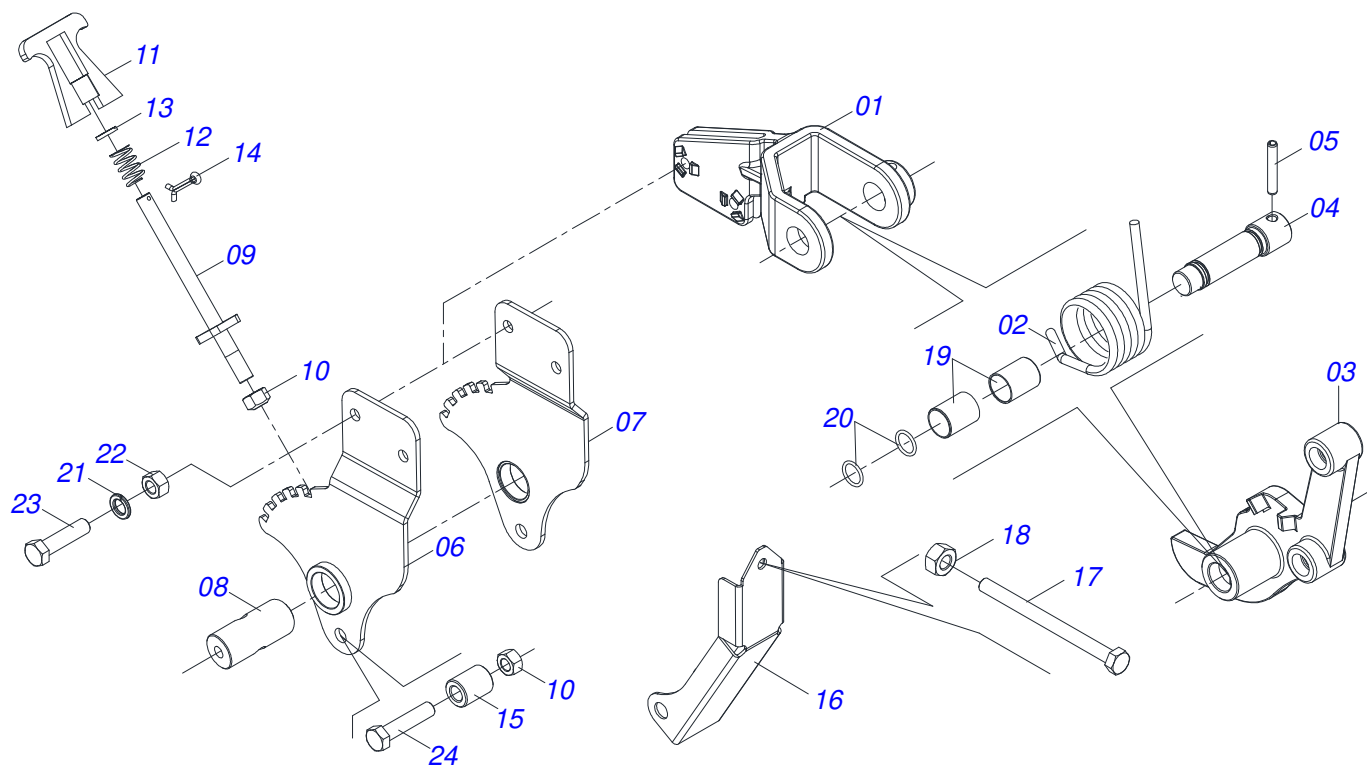


Item	Code	Description	See page	QT
01	0581017647	PRESS WHEELS ARM		01
02	0503030883	RIGHT TORSION SPRING		01
03	0581017622	SEAT SUPPORT		01
04	0581017648	PIVOT SHAFT		01
05	0503010839	03"X 0.6" SPRING PIN		01
06	0521069490	RIGHT REGULATOR		01
07	0521069491	LEFT REGULATOR		01
08	0581017817	ADJUSTMENT SHAFT COMPACTOR 1/2 THREAD WITHOUT LUBRICATION		01
09	0521063812	REGULATOR LEVER ALXE		01
10	0503011336	1/2" HEX SELF ADJUSTING NUT		02
11	0511065308	LOCK REGULATOR		01
12	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
13	0541011627	FLAT WASHER		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0571013293	SLEEVE LOCK COMPACTOR V CONTROL WITH SCREW		01
16	0581013744	PROTECTION CASE		01
17	0503013096	5/16" X 4" BOLT		01
18	0503013816	5/16" LOCKNUT		01
19	0503019273	AUTO LUBRICANT SLEEVE		02
20	0503010045	O'RING		02
21	0503010025	3/8 SPRING WASHER		02
22	0503010026	3/8" NUT		02
23	0503011404	BOLT		02
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		01

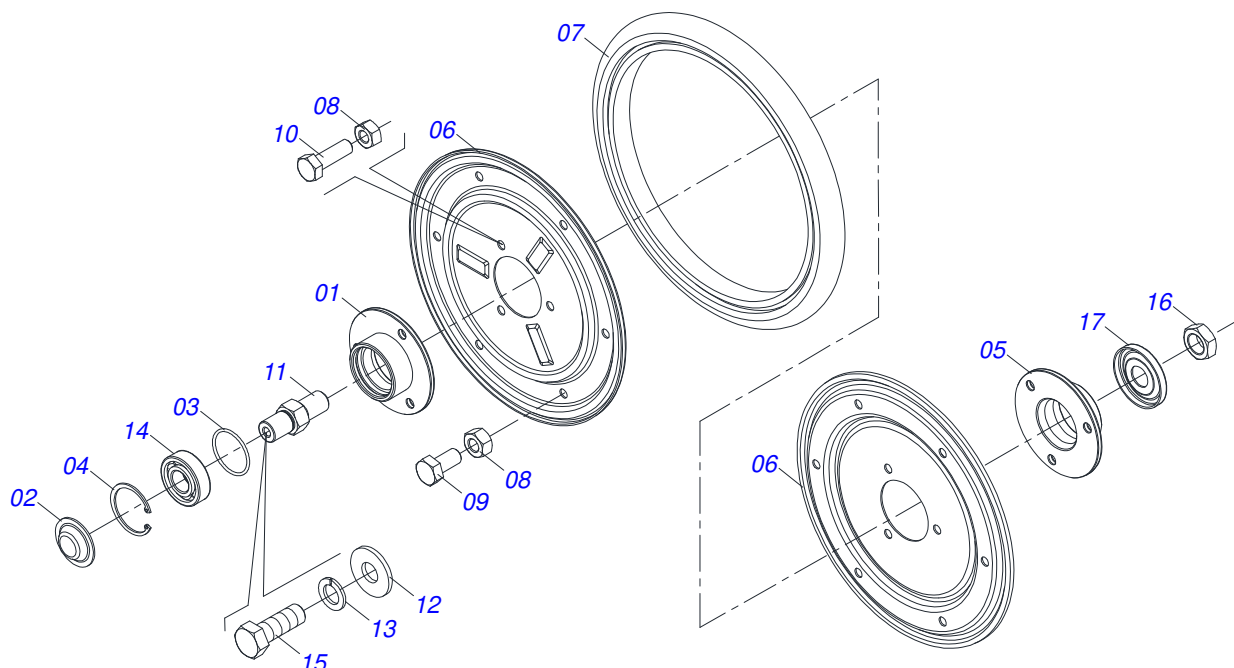


Item	Code	Description	See page	QT
01	0581019097	BOX LOWER WHEEL		01
02	0581012949	BEARING COVER		01
03	0503018045	2-130 (AGEL) O'RING		01
04	0503011105	SEAL RING		01
05	0502012893	WHEEL BOX		01
06	0521018928	PRESS WHEEL RIM		02
07	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
08	0503013816	5/16" LOCKNUT		09
09	0503010011	5/16" X 1/2" BOLT		06
10	0503010358	5/16" X 5/8" BOLT		03
11	0581019166	RIGHT AXIS		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
13	0503010025	3/8 SPRING WASHER		01
14	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
15	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
16	0503033787	NUT 3/4 UNF		01
17	0581019215	DUST CLOAK		01

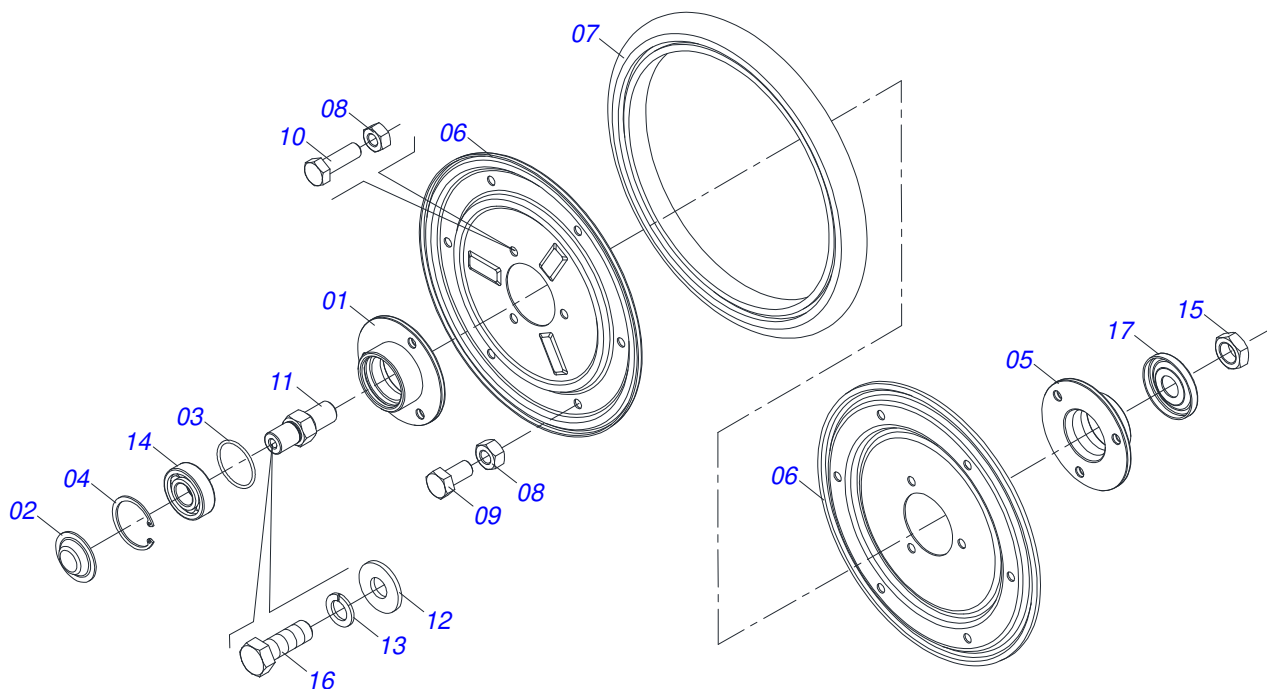


Item	Code	Description	See page	QT
01	0581019097	BOX LOWER WHEEL		01
02	0581012949	BEARING COVER		01
03	0503018045	2-130 (AGEL) O'RING		01
04	0503011105	SEAL RING		01
05	0502012893	WHEEL BOX		01
06	0521018928	PRESS WHEEL RIM		02
07	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
08	0503013816	5/16" LOCKNUT		09
09	0503010011	5/16" X 1/2" BOLT		06
10	0503010358	5/16" X 5/8" BOLT		03
11	0581019167	LEFT AXLE		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
13	0503010025	3/8 SPRING WASHER		01
14	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
15	0503033788	NUT 3/4		01
16	0503019348	SCREW 3/8 UNC X 3/4		01
17	0581019215	DUST CLOAK		01

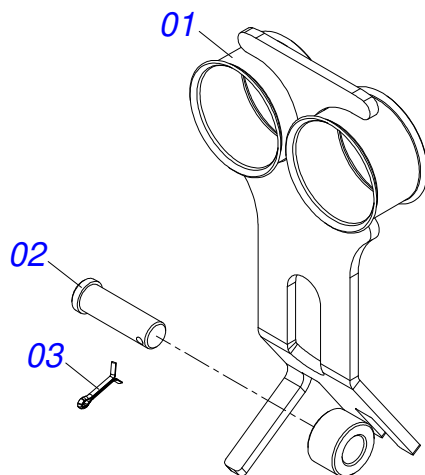


Item	Code	Description	See page	QT
01	0531062260	GUIDE HOSE L / TRANSMISSION		01
02	0571018883	PIN FIXER SPRING		01
03	0503010257	1/8" X 1" COTTERPIN		01

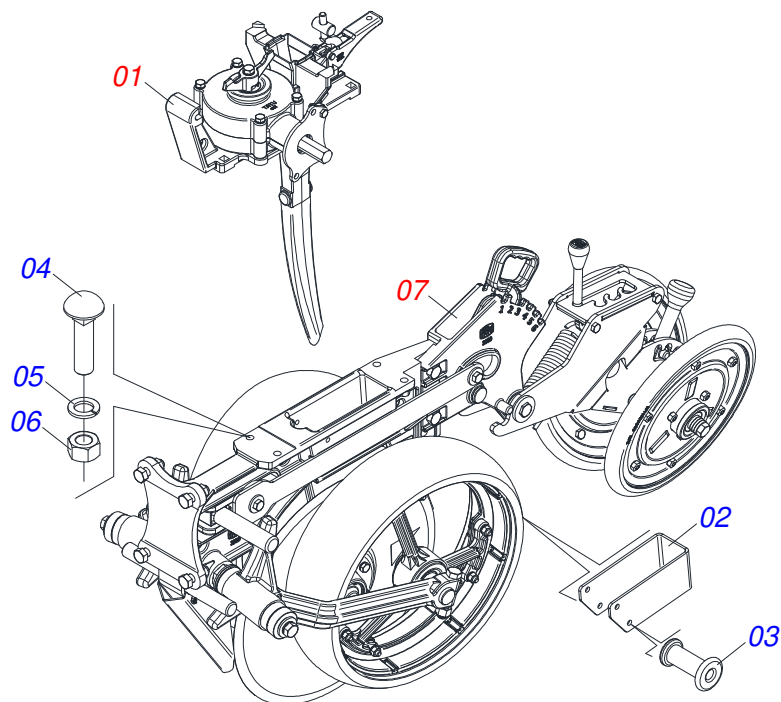


Item	Code	Description	See page	QT
01	0531050193	DOSING ASSY TITANIUM/TATU	106	01
02	0591017564	TITANIUM SEED DRIVER GUIDE		01
03	0503015341	POP RIVET		02
04	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04
05	0503010025	3/8 SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0531050537	REAR SPI LEFT TIRE WITHOUT TAB	107	01

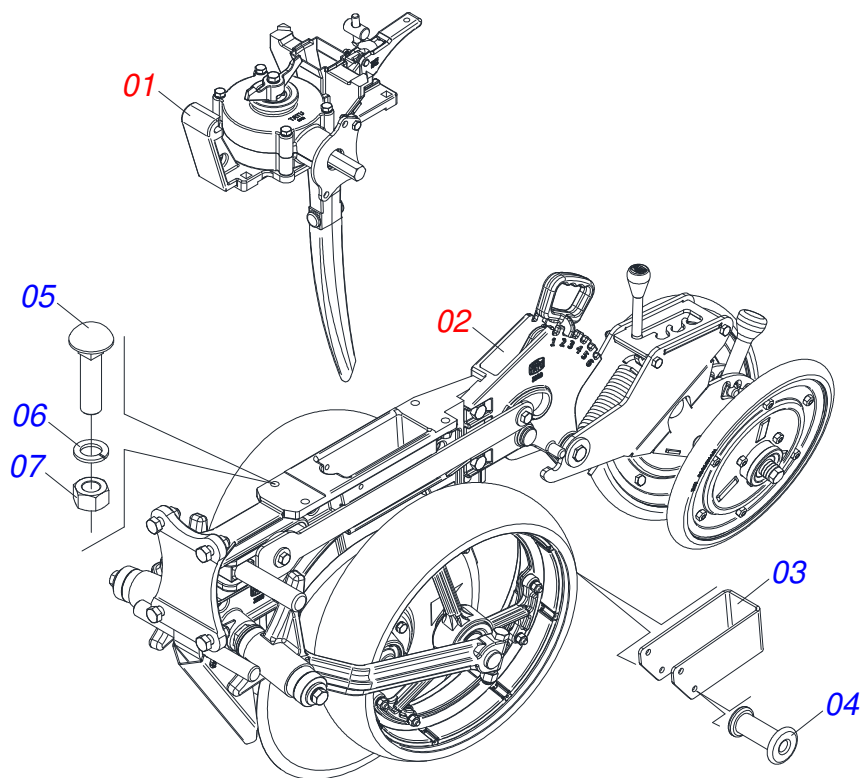

Item	Code	Description	See page	QT
01	0531050193	DOSING ASSY TITANIUM/TATU	106	01
02	0531050536	REAR RIGHT SPI TIRE WITHOUT FLAP	108	01
03	0591017564	TITANIUM SEED DRIVER GUIDE		01
04	0503015341	POP RIVET		02
05	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04
06	0503010025	3/8 SPRING WASHER		04
07	0503010026	3/8" NUT		04

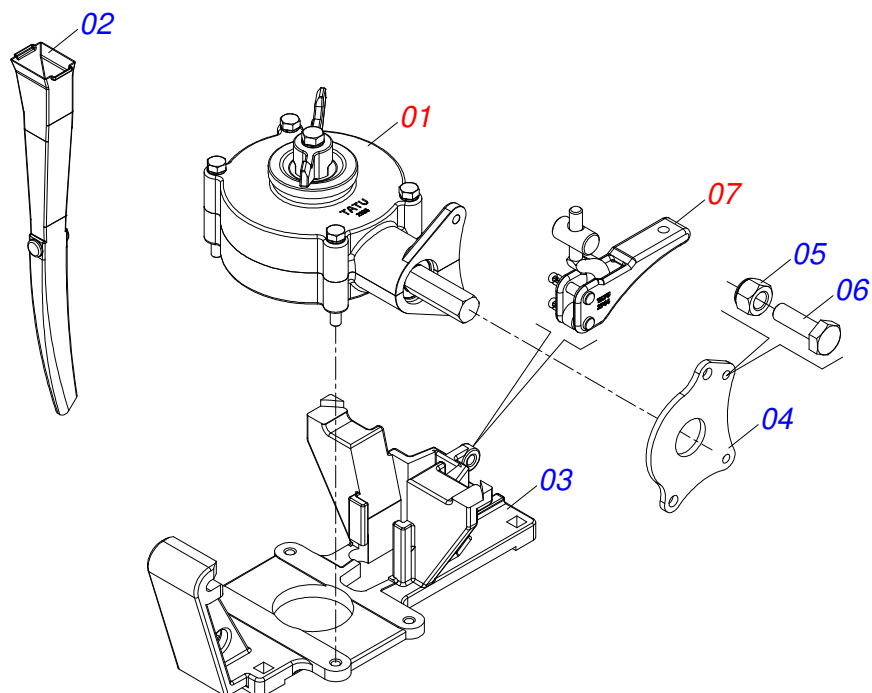


Item	Code	Description	See page	QT
01	0521056639	SEED ROW TRANSMISSION	124	01
02	0503035402	HIGHER LINE HIGH SEED		01
03	0502012921	BASE FIXING SYSTEM		01
04	0591014600	ENCAPSULATED CURRENT FIXER		01
05	0503014876	NUT PARLOCK 1/4"		02
06	0503010461	1/4" X 1" BOLT		02
07	0511052024	FAST CLOSING SET	123	01

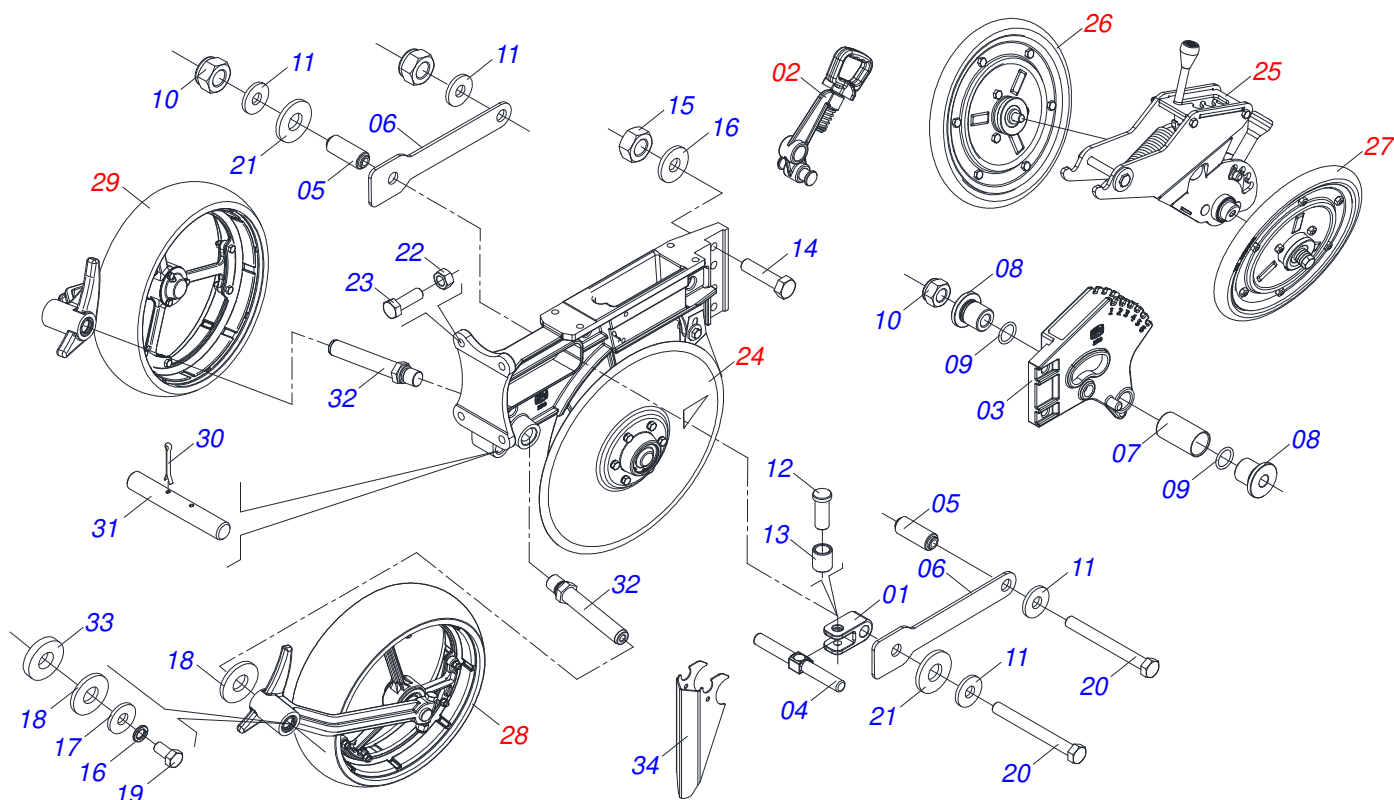

Item	Code	Description	See page	QT
01	0502012923	BEATER		01
02	0521056632	DEPTH CONTROL	109	01
03	0502012920	SUPPORT ADJUSTING		01
04	0502012611	DEPTH CONTROL AXLE		01
05	0591011309	ADJUSTMENT BUSHING		02
06	0591011310	ADJUSTMENT BAR		02
07	0503019275	SLEEVE LUBRICATION SYSTEM		01
08	0581019473	ARTICULATED SLEEVE		02
09	0503010045	O'RING		02
10	0503013357	3/8 SELF-ADJUSTING NUT		02
11	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
12	0591011326	LOCK PIN		01
13	0571015326	ARTICULATION SLEEVE HANDLE		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
15	0503010060	1/2 UNC G.5 ZN HEX NUT		02
16	0503010019	1/2" SPRING WASHER		04
17	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
18	0501011445	FLAT WASHER		04
19	0503012556	1/2" X 1" BOLT		02
20	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		02
21	0591011306	ADJUSTMENT LOCK		02
22	0503012136	NUT 1/2 NF		04
23	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
24	0521056634	LEFT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	110	01
25	0521055093	BODY COMPACTOR	112	01
26	0521055017	RIGHT COMPACTOR WHEEL	113	01
27	0521054990	LEFT COMPACTOR WHEEL	114	01
28	0531050538	MOUNTED LEFT ARM	116	01
29	0531050539	MOUNTED LEFT ARM	117	01
30	0503010131	3/16" X 1-1/2" COTTERPIN		02
31	0591016900	BEATING AXLE		01




Item	Code	Description	See page	QT
32	0591016905	DEPTH WHEEL JOINT AXLE		02
33	0591016907	SPACER GLOVE 14MM		06
34	0591016988	SPICER PROTECTOR		01

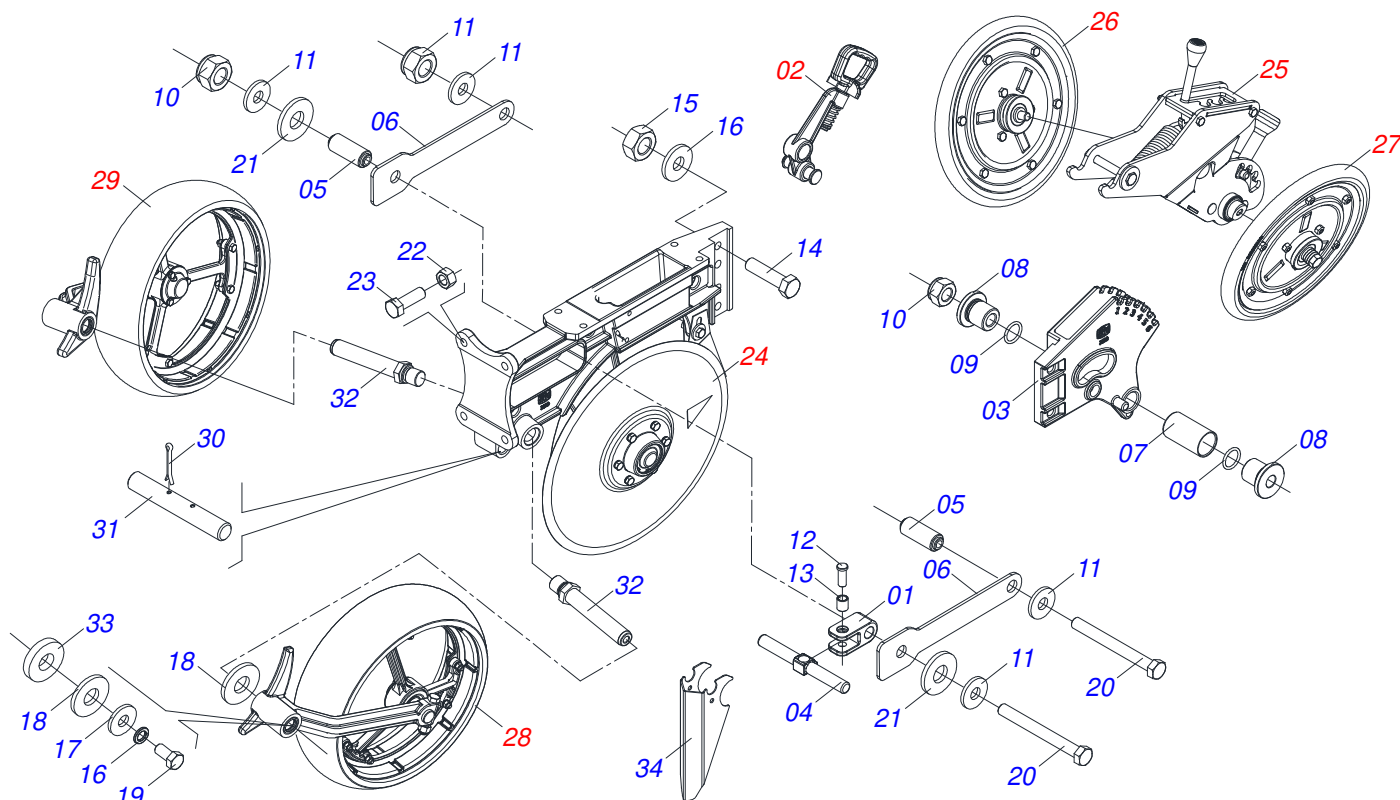


Item	Code	Description	See page	QT
01	0502012923	BEATER		01
02	0521056632	DEPTH CONTROL	109	01
03	0502012920	SUPPORT ADJUSTING		01
04	0502012611	DEPTH CONTROL AXLE		01
05	0591011309	ADJUSTMENT BUSHING		02
06	0591011310	ADJUSTMENT BAR		02
07	0503019275	SLEEVE LUBRICATION SYSTEM		01
08	0581019473	ARTICULATED SLEEVE		02
09	0503010045	O'RING		02
10	0503013357	3/8 SELF-ADJUSTING NUT		02
11	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
12	0591011326	LOCK PIN		01
13	0571015326	ARTICULATION SLEEVE HANDLE		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
15	0503010060	1/2 UNC G.5 ZN HEX NUT		02
16	0503010019	1/2" SPRING WASHER		04
17	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
18	0501011445	FLAT WASHER		04
19	0503012556	1/2" X 1" BOLT		02
20	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		02
21	0591011306	ADJUSTMENT LOCK		02
22	0503012136	NUT 1/2 NF		04
23	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
24	0521056635	RIGHT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	111	01
25	0521055093	BODY COMPACTOR	112	01
26	0521055017	RIGHT COMPACTOR WHEEL	113	01
27	0521054990	LEFT COMPACTOR WHEEL	114	01
28	0531050538	MOUNTED LEFT ARM	116	01
29	0531050539	MOUNTED LEFT ARM	117	01
30	0503010131	3/16" X 1-1/2" COTTERPIN		02
31	0591016900	BEATING AXLE		01


Item	Code	Description	See page	QT
32	0591016905	DEPTH WHEEL JOINT AXLE		02
33	0591016907	SPACER GLOVE 14MM		06
34	0591016988	SPICER PROTECTOR		01

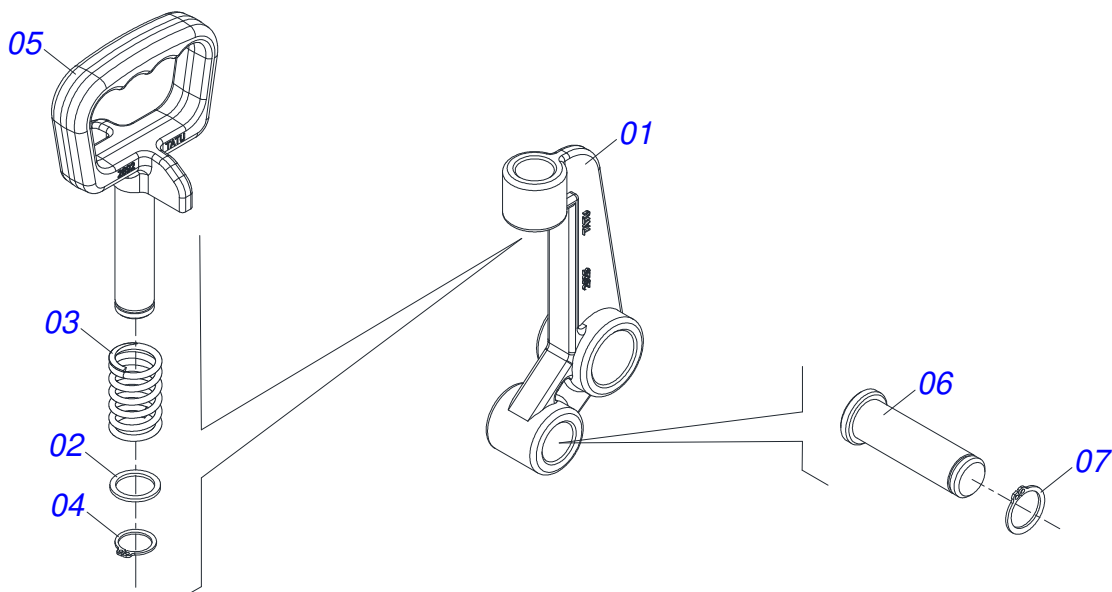


Item	Code	Description	See page	QT
01	0502012925	ADJUSTMENT BODY		01
02	0511015976	FLAT WASHER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0503010581	RING		01
05	0502012892	DEPTH CONTROL HANDLE		01
06	0581019526	ARTICULATED AXLE LEVER DEPTH		01
07	0503010302	501019 SEAL RING		01

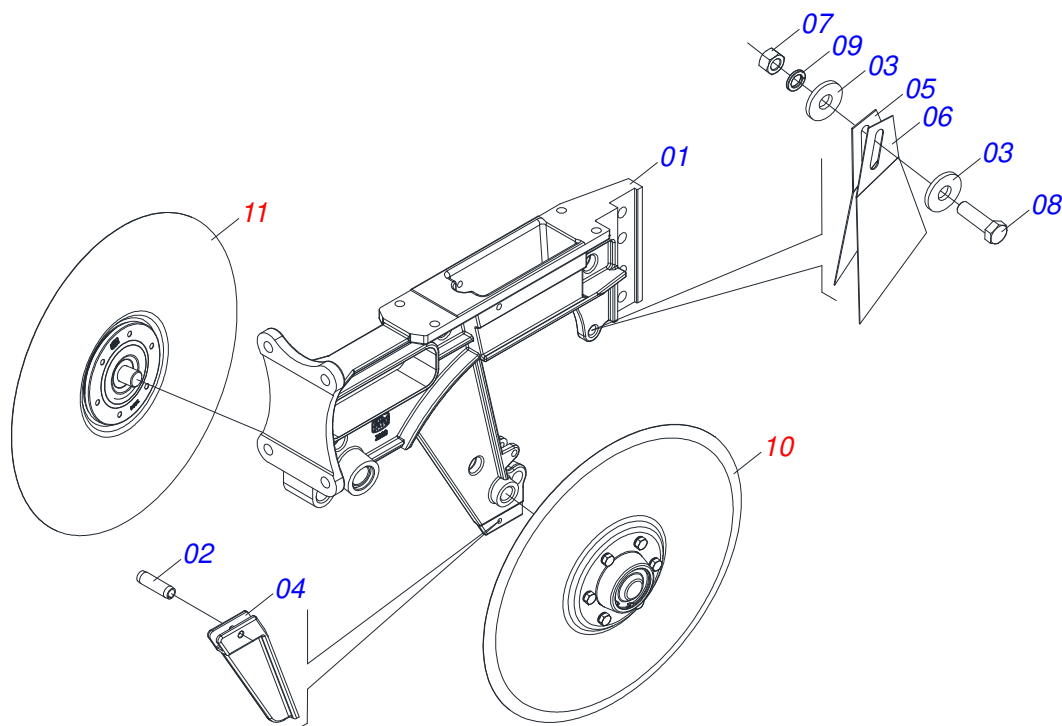


Item	Code	Description	See page	QT
01	0502012928	LEFT EXTENSOR		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 85 FERTILIZER / SEED		01
11	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 86 FERTILIZER / SEED		01

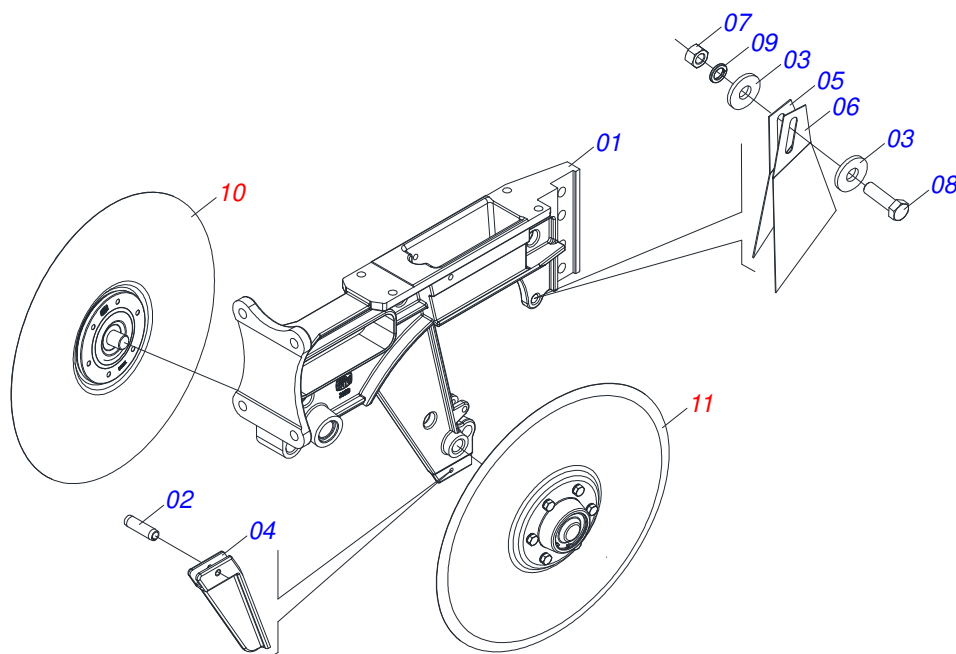


Item	Code	Description	See page	QT
01	0502012929	BODY RIGHT		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 86 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 85 FERTILIZER / SEED		01

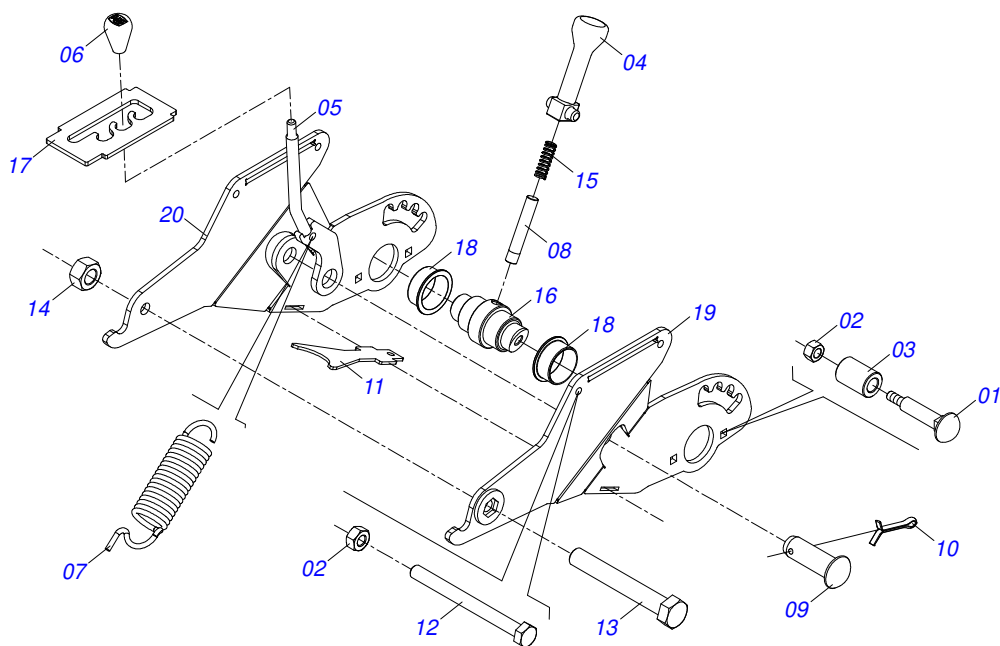


Item	Code	Description	See page	QT
01	0501011753	5/16" X 1-3/4" BOLT	02	
02	0503013816	5/16" LOCKNUT	04	
03	0581015855	SLEEVE	02	
04	0502012877	PRESS WHEEL ADJUSTMENT LEVER	01	
05	0521068661	LEVER	01	
06	0503030878	LEVER CRANK	01	
07	0503031393	1.57" X 5.98" X 0.2"TRACTION SPRING	01	
08	0581019520	AXIS	01	
09	0571812442	COUPLING SHAFT	01	
10	0503010257	1/8" X 1" COTTERPIN	01	
11	0581019511	COVER	01	
12	0503010848	5/16" X 3.1/2" BOLT	02	
13	0503010752	1/2" X 3.1/2" BOLT	01	
14	0503011336	1/2" HEX SELF ADJUSTING NUT	01	
15	0503030190	0.5" X 1.6" X 0.05" SPRING	01	
16	0581019510	AXIS	01	
17	0581019512	PLATE TOP	01	
18	0503019351	LUBRICANT SLEEVE	02	
19	0521069591	LEFT SIDE	01	
20	0581019548	RIGHT SIDE BODY	01	

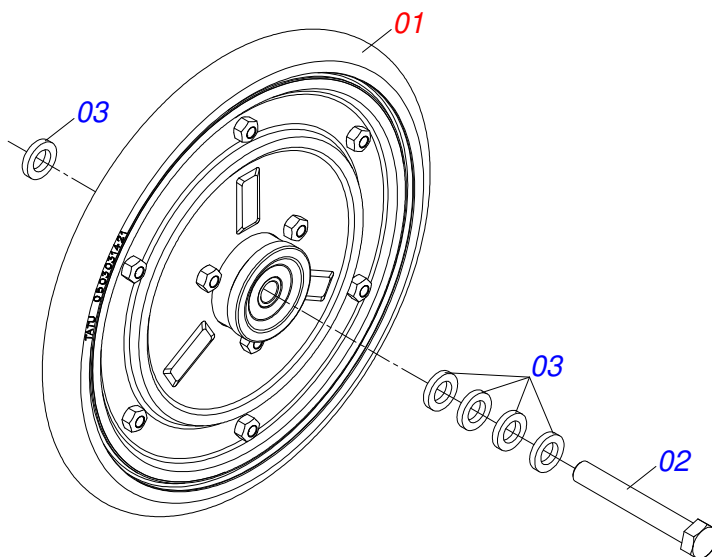


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	115	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

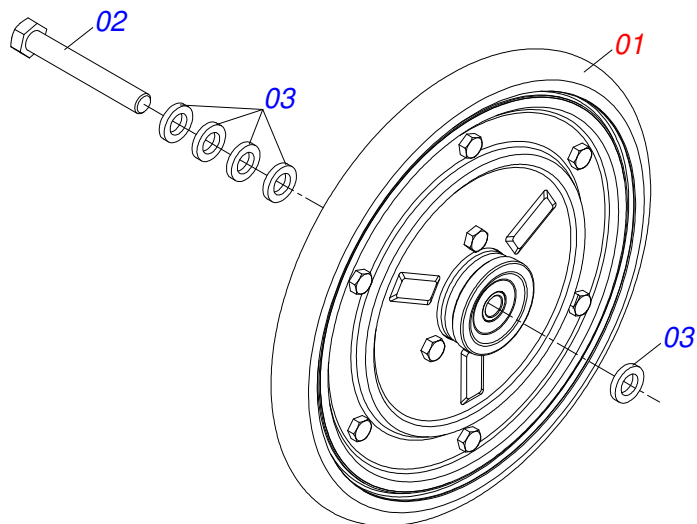


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	115	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

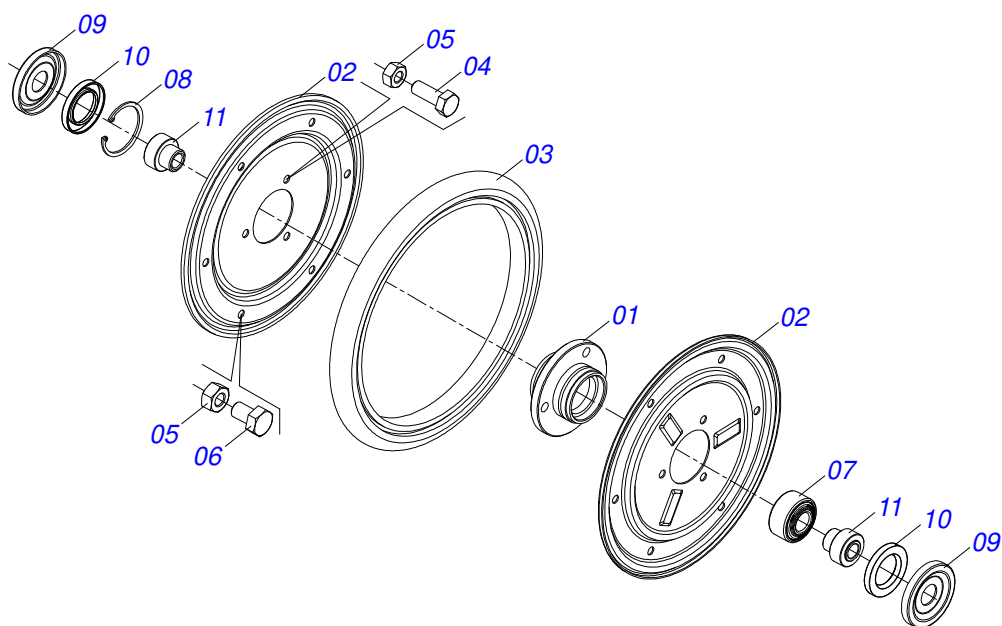


Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

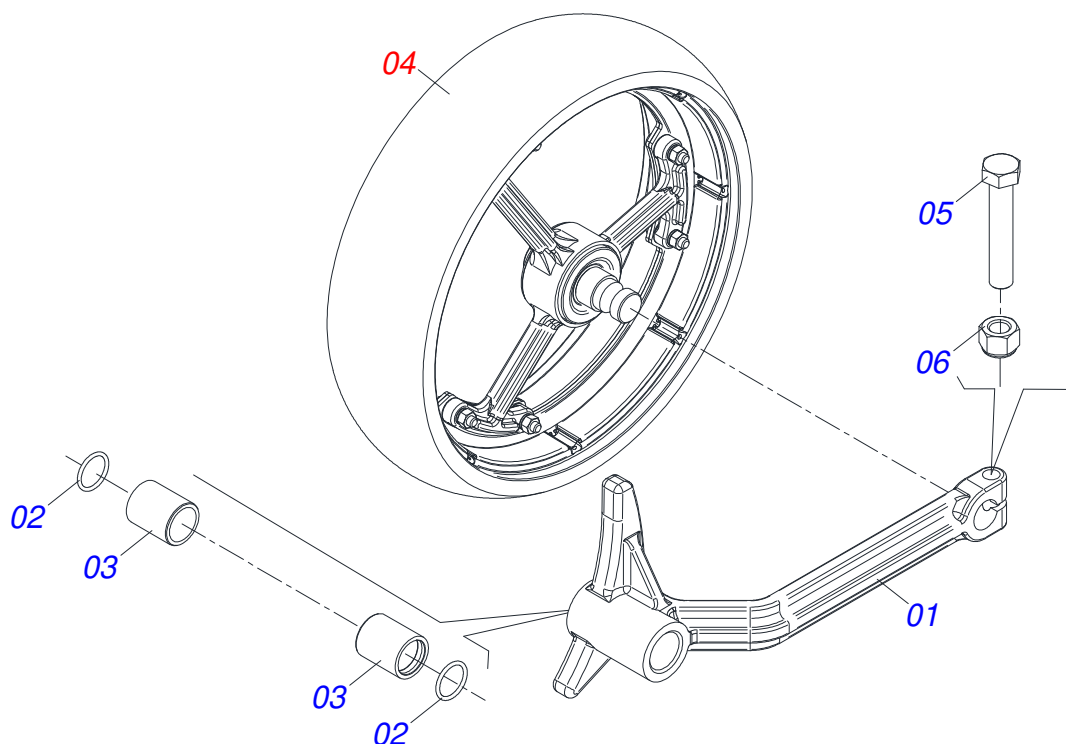


Item	Code	Description	See page	QT
01	0502012927	LEFT ARM		01
02	0503011109	2-119 N 3006-9B O'RING		02
03	0581019514	LUBRICANT SLEEVE		02
04	0521055056	WHEEL RAYED ASSY BAND	118	01
05	0503010741	1/2" X 2-3/4" BOLT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01

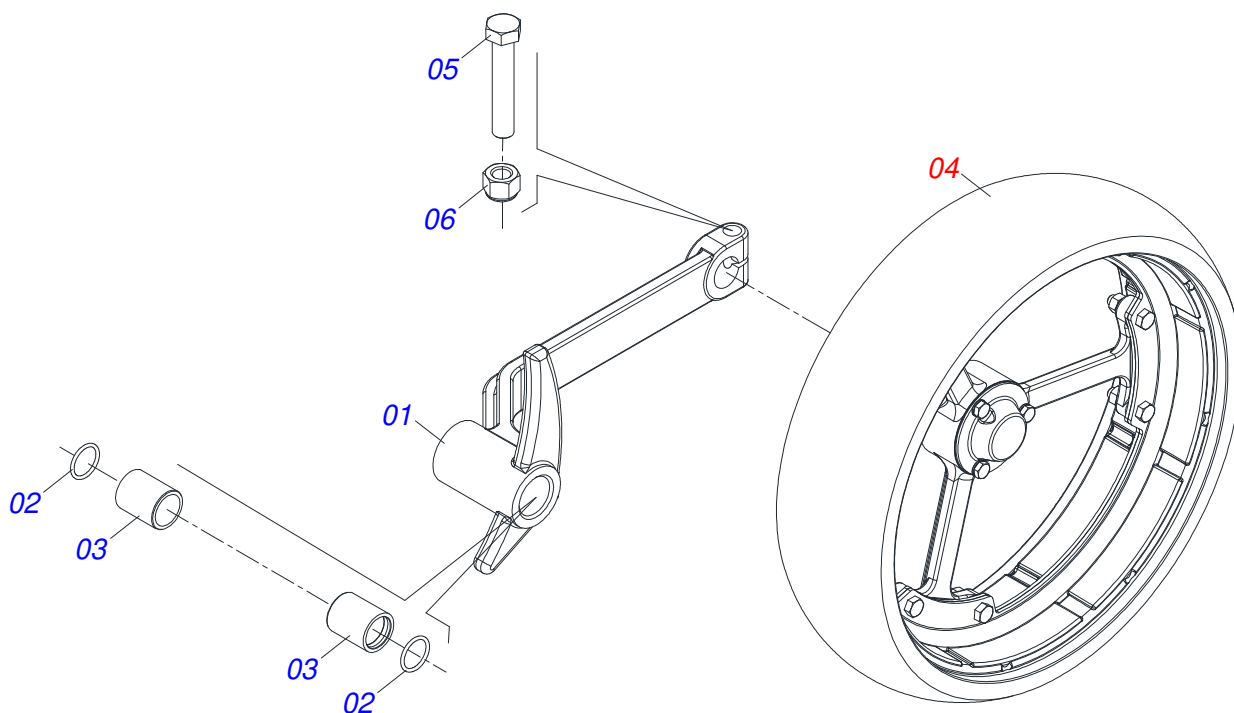


Item	Code	Description	See page	QT
01	0502012926	RIGHT ARM		01
02	0503011109	2-119 N 3006-9B O'RING		02
03	0581019514	LUBRICANT SLEEVE		02
04	0521055056	WHEEL RAYED ASSY BAND	118	01
05	0503010741	1/2" X 2-3/4" BOLT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01

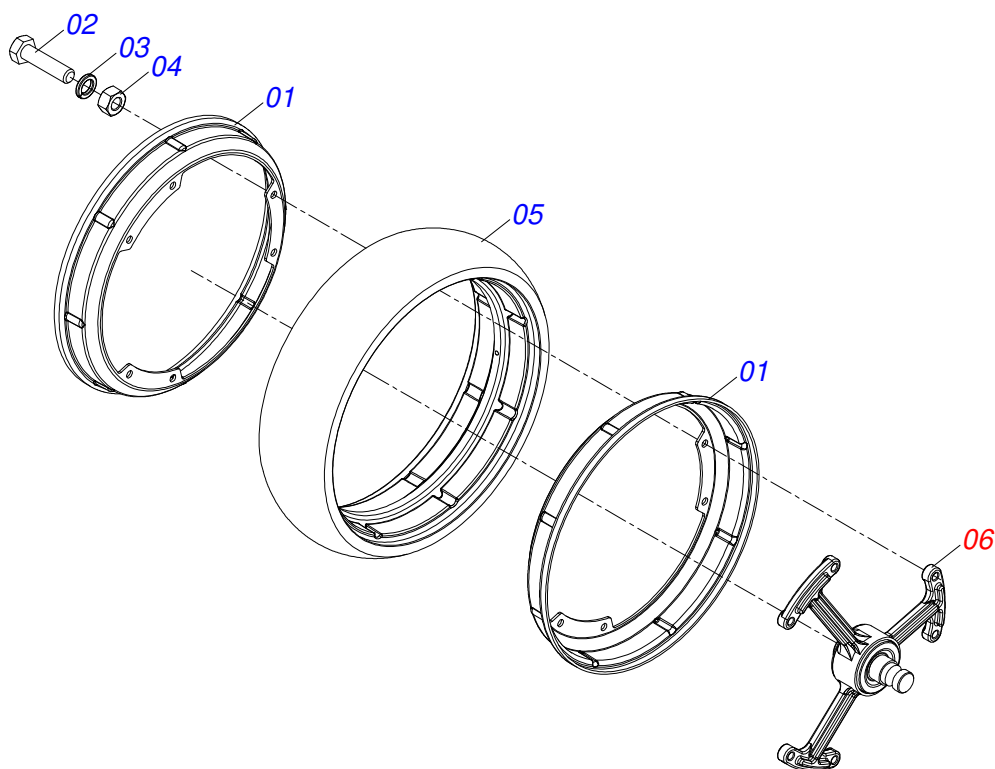


Item	Code	Description	See page	QT
01	0551019904	PRESS WHEEL RIM		02
02	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
04	0503010337	5/16" NUT		06
05	0503032970	RUBBER BAND		01
06	0521055073	ASSEMBLY DEPTH WHEEL HUB	119	01

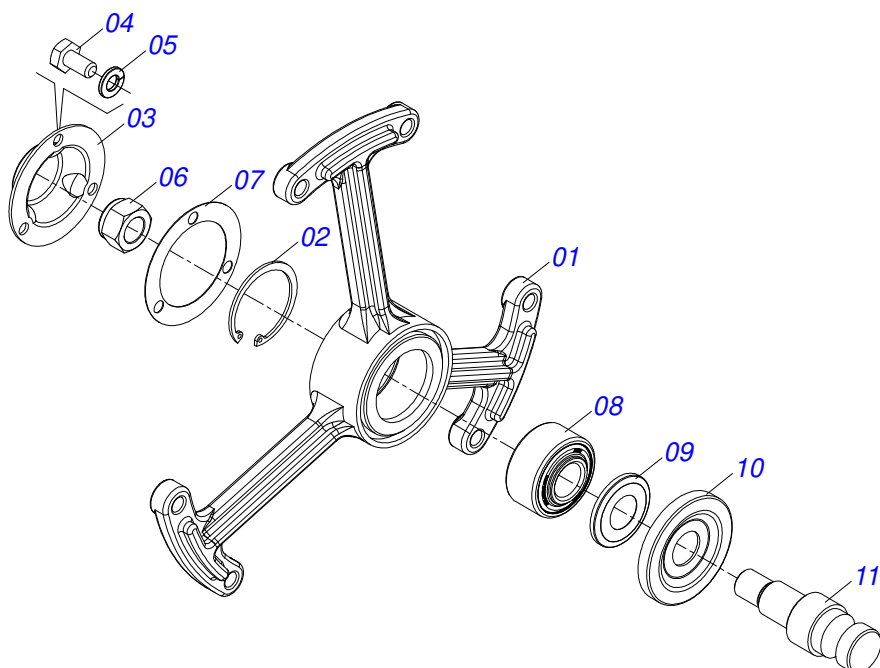


Item	Code	Description	See page	QT
01	0581019528	WHEEL DEPTH SPA HUB WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503010878	5/8" SELF ALIGNING NUT		01
07	0503030757	2.9" X 2" X 0.02" JOINT		01
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019168	DUST CLOAK		01
11	0581019529	DEPTH REGULATOR SHAFT		01

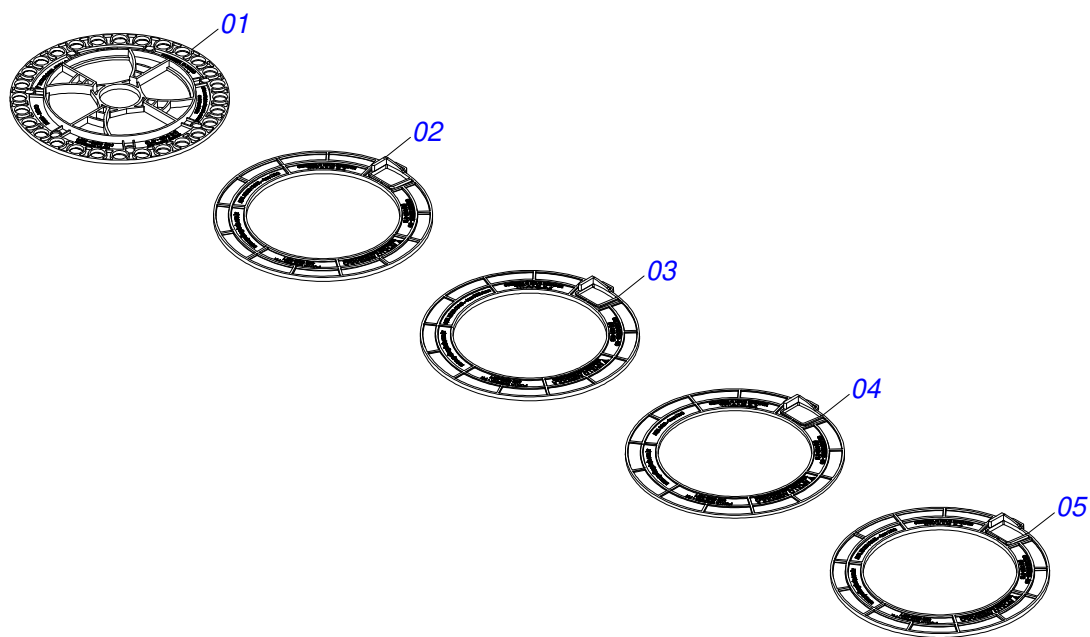


Item	Code	Description	See page	QT
01	0503016204	CORN DISC 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

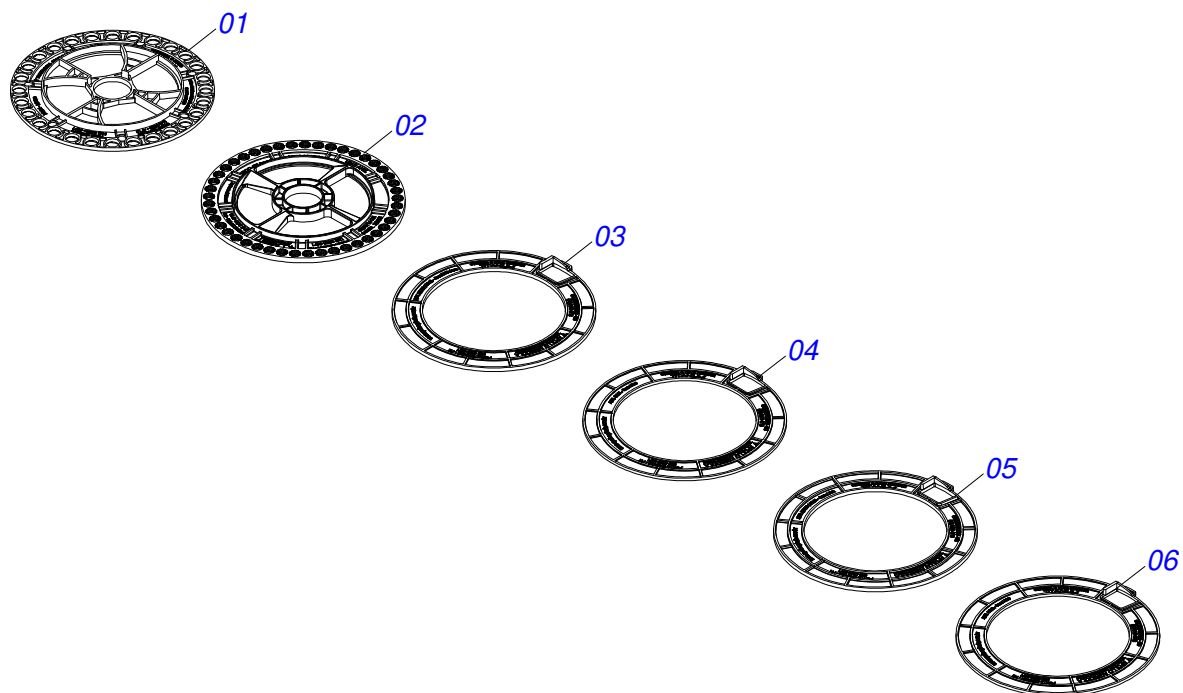


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

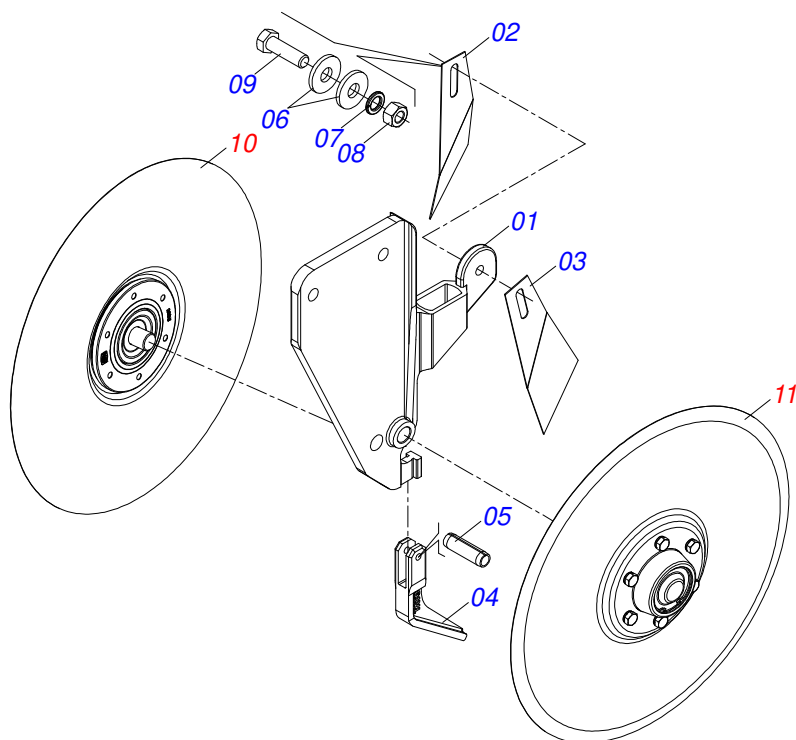


Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503010025	3/8 SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 86 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 85 FERTILIZER / SEED		01

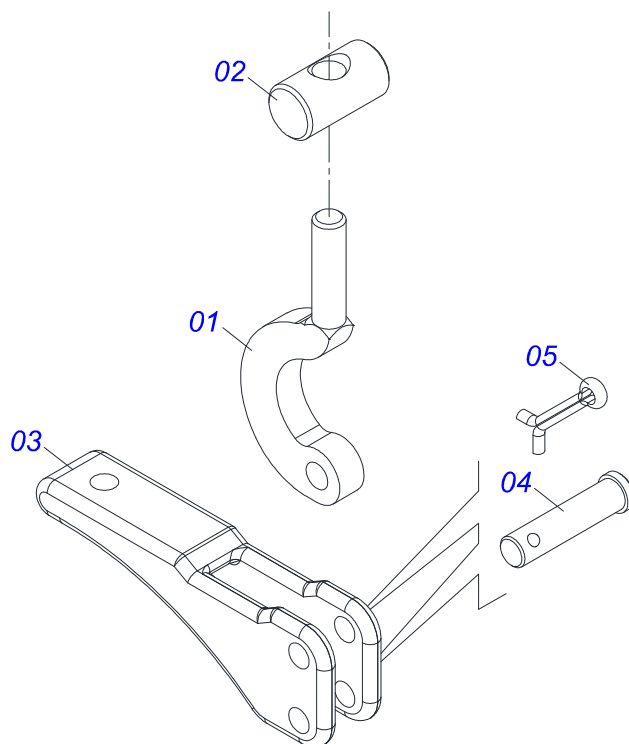


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

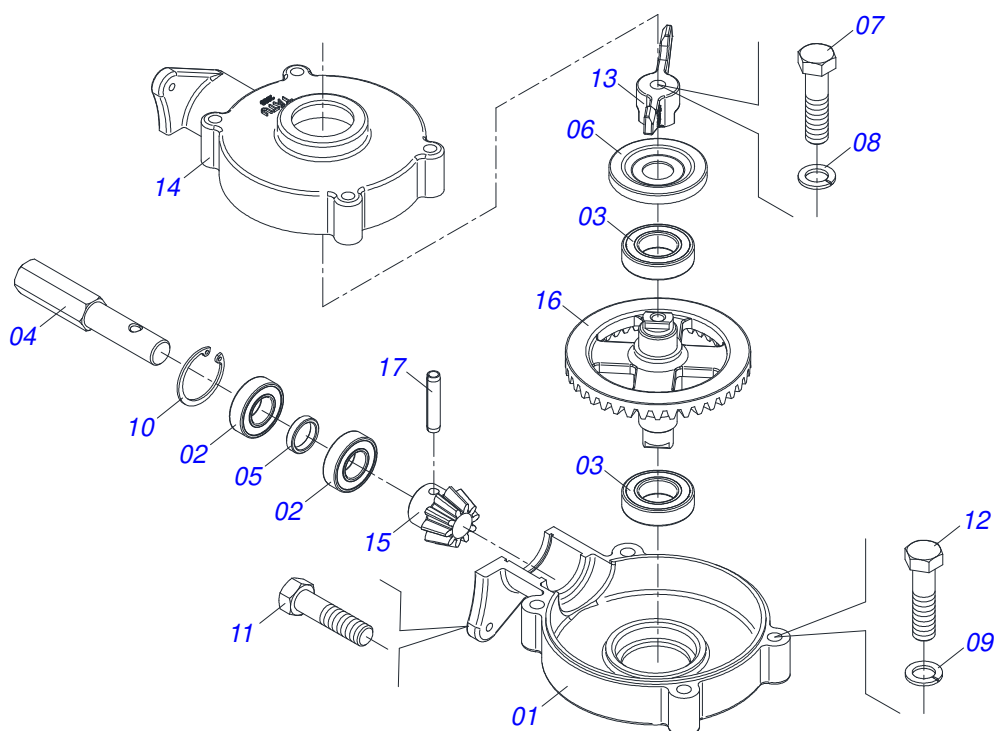


Item	Code	Description	See page	QT
01	0502012932	MINOR SIDE	01	
02	0503017046	BEARING	02	
03	0503011410	ROLLER BEARING	02	
04	0591011321	AXLE GEAR	01	
05	0591011322	SPACER	01	
06	0581019168	DUST CLOAK	01	
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
08	0503010025	3/8 SPRING WASHER	01	
09	0503010179	LOCK WASHER 5/16 ZN 1K01528	04	
10	0503011945	503050 CLAMPING RING (FOR AXLE)	01	
11	0503010420	BOLT	02	
12	0503011053	5/16" X 3" C S 6.5 ZN BOLT	04	
13	0502012919	GRAGGER	01	
14	0502012933	LARGER SIDE	01	
15	0502012930	CONICAL GEAR	01	
16	0502012931	CONICAL GEAR	01	
17	0503010585	0,24" X 1.18" SPRING PIN	01	

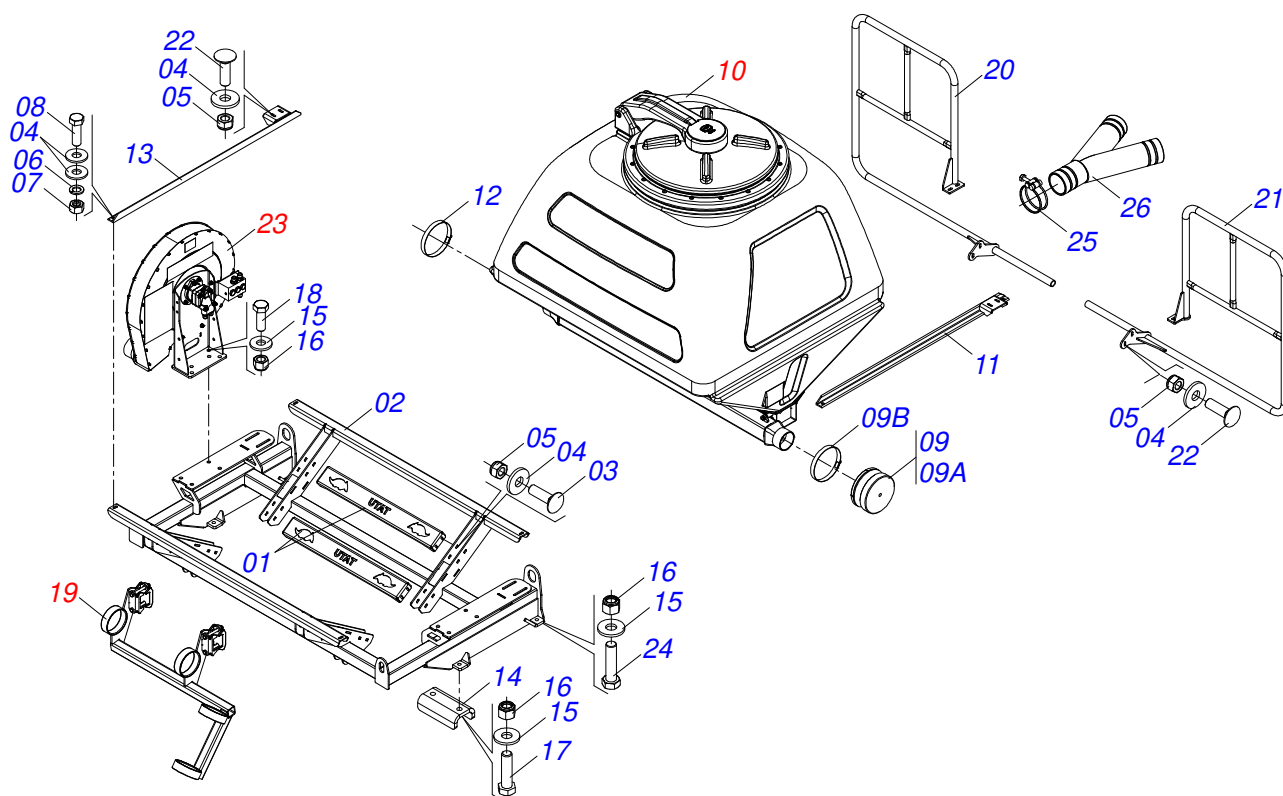

Item	Code	Description	See page	QT
01	0581012238	SEED HOPPER SUPPORT		04
02	0531061644	CENTRAL SEED SILO FIXATION BASE		01
03	0501011643	3/8 X 1" BOLT		16
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		32
05	0503013357	3/8 SELF-ADJUSTING NUT		24
06	0503010025	3/8 SPRING WASHER		04
07	0503010026	3/8" NUT		04
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
09	0521053176	COVER KAP		01
09A	0581017528	15 OUTPUT TUBE COVER		01
09B	0503011372	102 TO 121 CLAMP		01
10	0521053173	CENTRAL SEED HOPPER 15 OUTPUTS	126	01
11	0531060166	LEFT LOCKING SUPPORT		01
12	0503011372	102 TO 121 CLAMP		01
13	0531060165	RIGHT LOCKING SUPPORT		01
14	0531060781	BOX FIXING CLAMP		02
15	0501012140	FLAT WASHER		16
16	0503010811	5/8" UNF SELF ADJUSTING NUT		16
17	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		04
18	0503010232	5/8" X 1.3/4" BOLT		08
19	0531051092	ASSY HOSE SUPPORT	128	01
20	0531060723	RIGHT CENTRAL HANDRAIL		01
21	0531060724	LEFT CENTRAL HANDRAIL		01
22	0501010942	3/8" X 1-1/4" BOLT		08
23	0521045392	HYDRAULIC TURBINE WITH SCREEN	129	01
24	0503010233	5/8" X 2-1/2" BOLT		04
25	0503019221	WIRE TYPE CLAMP 3,2MM X 35 X 41 MM AWAARC041		19
26	0531061755	NOZZLE Y SEED		02

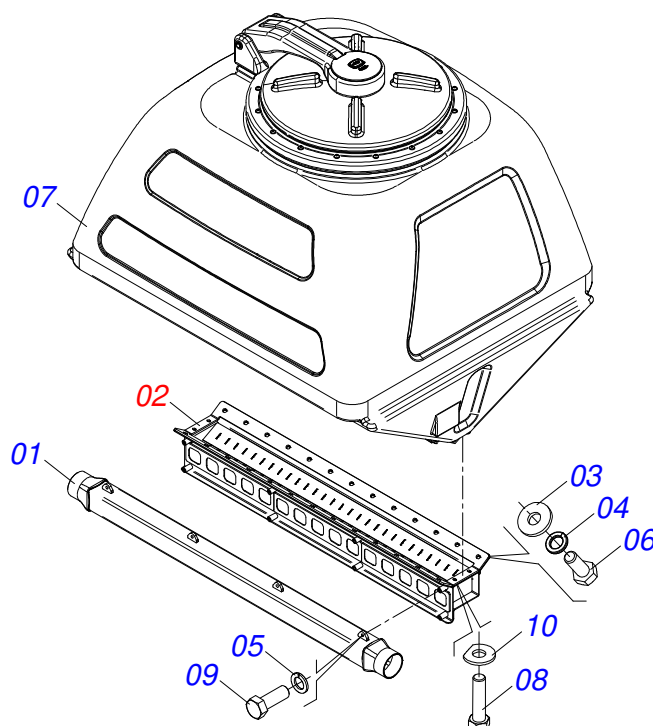


Item	Code	Description	See page	QT
01	0521068977	15 OUTPUTS AIR TUBE		01
02	0521053175	BASE CSC HOPPER 15 OUTPUTS	127	01
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		26
04	0503015075	M10 SPRING WASHER		26
05	0503010025	3/8 SPRING WASHER		08
06	0503010172	M10 X 1,5 X 25 BOLT		26
07	0503062687	SEED HOPPER		01
08	0503019284	M8 X BOLT		04
09	0503010849	3/8" X 1-1/2" BOLT		08
10	0581017922	WASHER		04

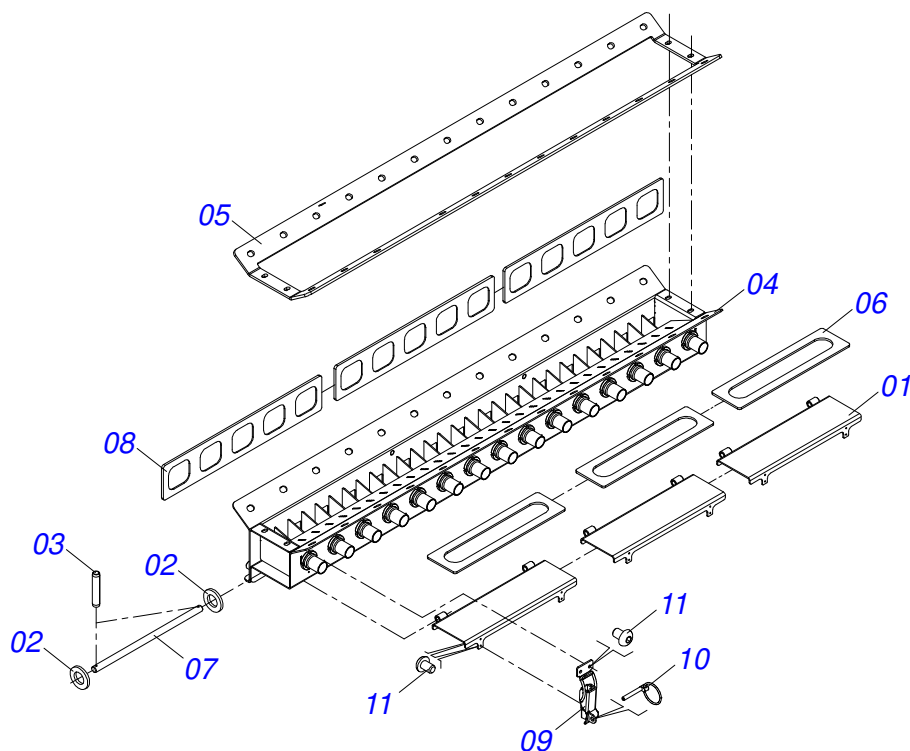


Item	Code	Description	See page	QT
01	0521068978	CASH FUND COVER		03
02	0503015135	FLAT WASHER 10 X 18 X 2		06
03	0503011823	0.1" X 0.6" SPRING PIN		06
04	0521068851	SYSTEM ASSY		01
05	0503034571	SEALING		01
06	0503034573	SEALING		03
07	0581017529	ROD 9,53		03
08	0503062759	SEALING		03
09	0503034692	FAST LOCK ASSY		06
10	0503030085	LOCK PIN		06
11	0503019290	BOLT		24

ASSY HOSE SUPPORT

0531051092

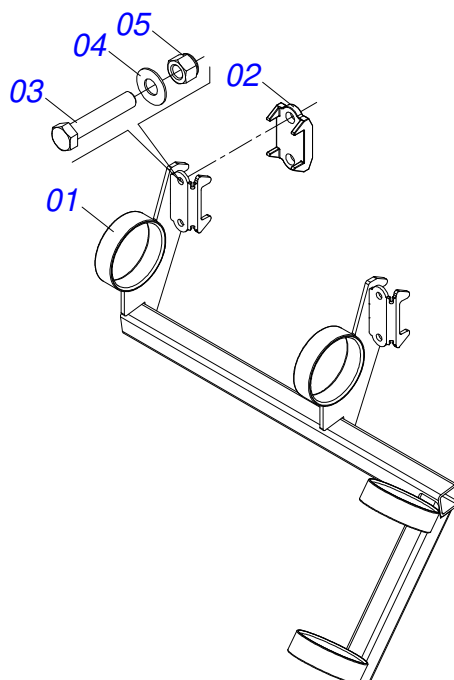


Item	Code	Description	See page	QT
01	0531062259	HOSE SUPPORT		01
02	1902011170	FIXER		02
03	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		04
04	0501013519	FLAT WASHER		04
05	0503010589	1/2" UNC SELF ADJUSTING NUT		04

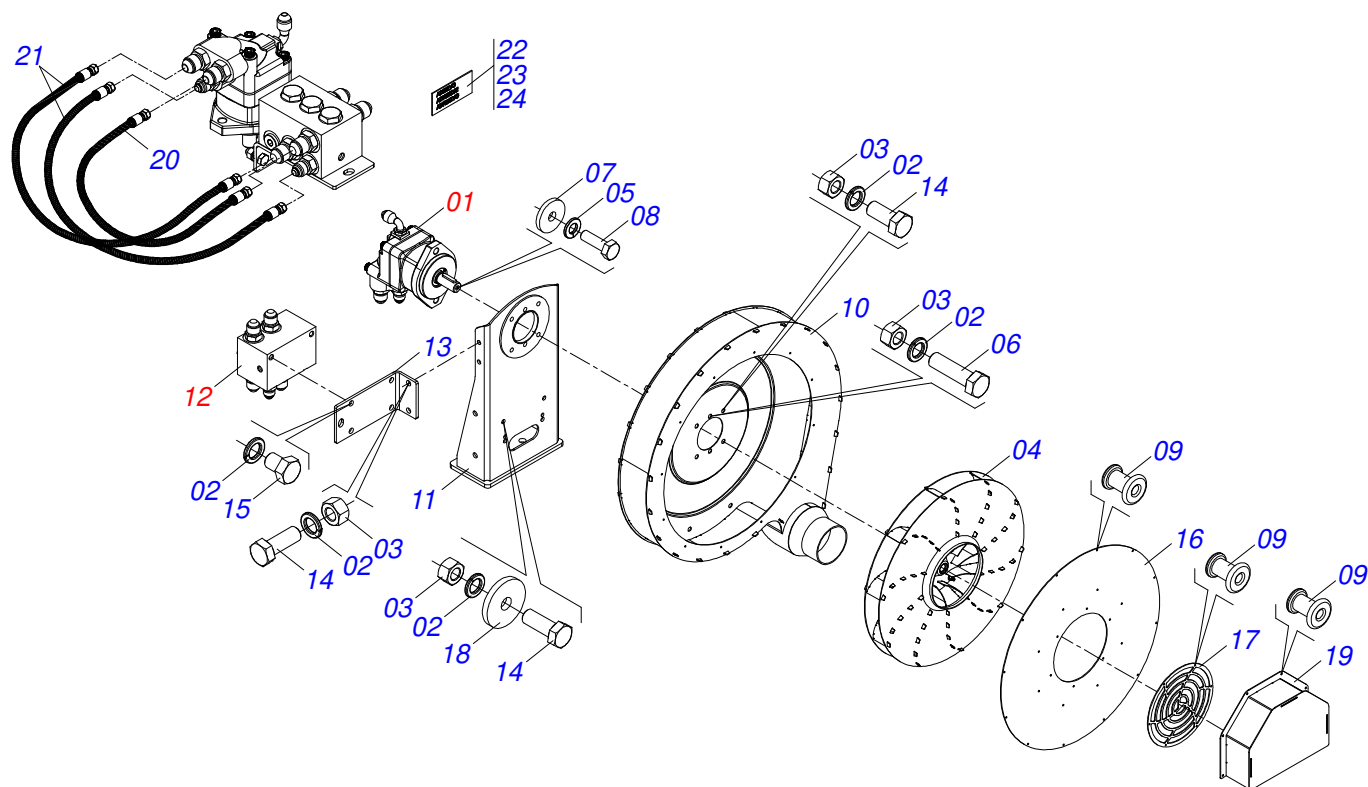


Item	Code	Description	See page	QT
01	0501054983	NIPPLE HIDRAULIC MOTOR	130	01
02	0503010025	3/8 SPRING WASHER		12
03	0503010026	3/8" NUT		10
04	0521044613	FAN 480X50 (HIDRAULIC)		01
05	0503010143	1/4" SPRING WASHER		01
06	0503010849	3/8" X 1-1/2" BOLT		02
07	0531018764	FLAT WASHER		01
08	0503011104	M6 X 1" BOLT		01
09	0503012722	0.16" X 0.4" BLIND RIVET		24
10	0521065857	CARACOL MECHANICAL TURBINE S MEC		01
11	0521065858	TURBIN SUPPORT		01
12	0501054577	BLOCK COMMAND WITH NIPLES HYDRAULIC 131 TURBINE		01
13	0561010634	VALVE SUPPORT ASSY		01
14	0503010237	3/8" X 1" BOLT		08
15	0503010206	3/8 X 1/2 BOLT		02
16	0571018577	COVER SNAIL TURBINE		01
17	0571018578	TURBINE PROTECTIVE SCREEN		01
18	0541013274	LISA WASHER 10 X 38 X 4.75		02
19	0521069167	FRONT PROTECTION		01
20	0501080709	3/8" X 21.6" TR-TR HOSE		01
21	0501080091	1/2" X 550 TR-TR HOSE		02
22	0503031087	ADHESIVE LABEL		01
23	0503031426	ADHESIVE LABEL ATTENTION TURBINE		01
24	0503033981	ADHESIVE LABEL		01

NIPPLE HIDRAULIC MOTOR


0501054983

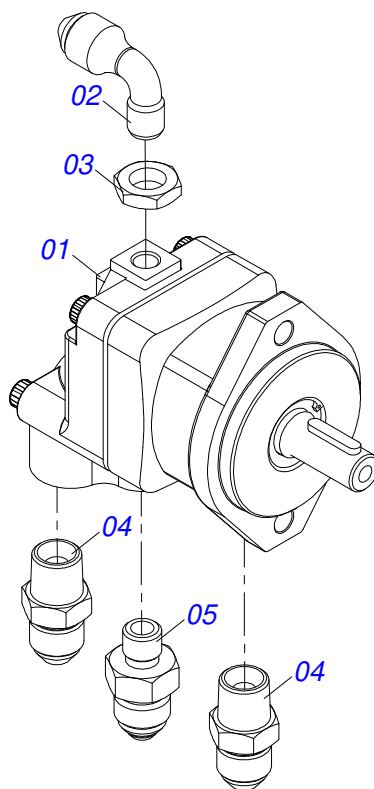

Item	Code	Description	See page	QT
01	0503012871	HYDRAULIC MOTOR		01
02	0531018770	R 3/4"UNF X R 1/4"BSP ELBOW		01
03	0561016941	3/4" NUT		01
04	0511014065	7/8" NF X R1/2NPT X 52 NIPPLE		02
05	0541011065	3/4"UNF X R1/4BSP19FPP X43.5 NIPPLE		01
06	3914103037	TEFLON		0,001RI

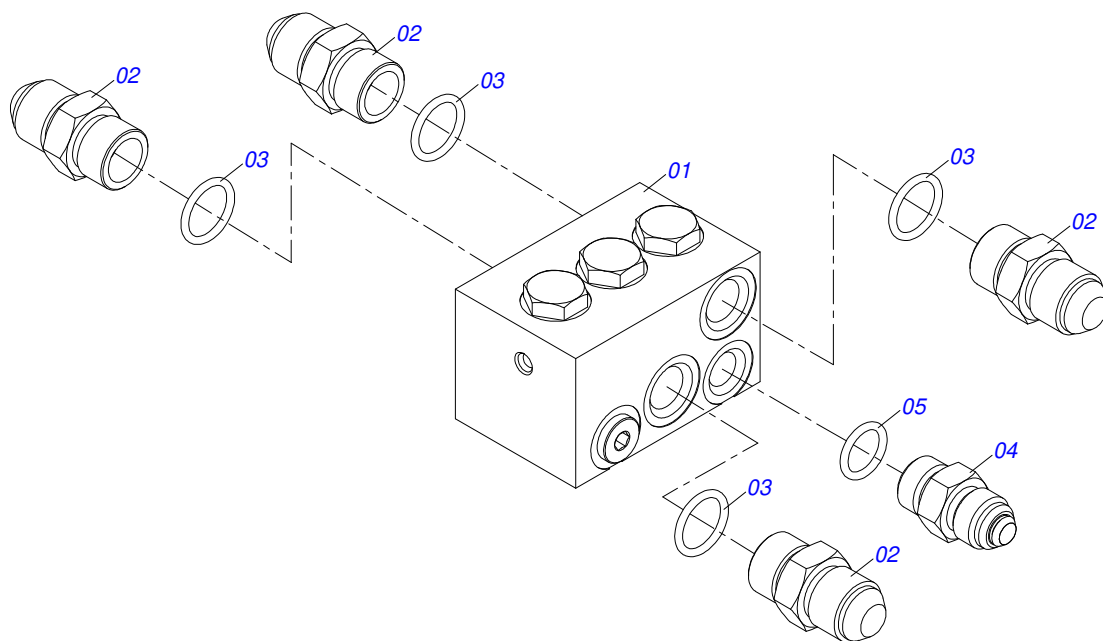


Item	Code	Description	See page	QT
01	0503012291	BLOCK COMMAND		01
02	0501010590	NIPPLE		04
03	0503010045	O'RING		04
04	0541011066	3/4" UNF X 43.5 NIPPLE		01
05	0503010190	2-114 N 3006-9B O'RING		01

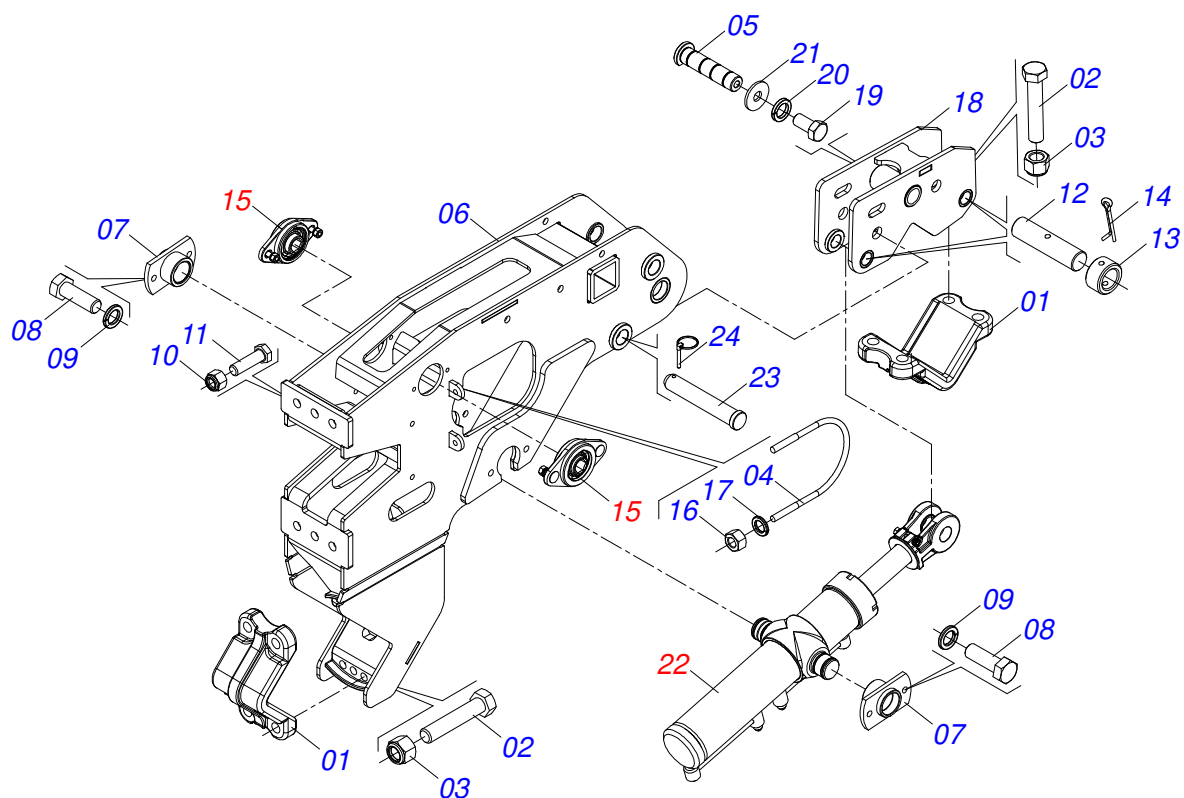

Item	Code	Description	See page	QT
01	0502012789	FIXER SUPPORT FERTILIZER ROW		02
02	0503017857	BOLT 5/8 UNF 4		08
03	0503010811	5/8" UNF SELF ADJUSTING NUT		08
04	0551019514	3/8 FASTENER		02
05	0591017796	ARTICULATION AXIS 222 R.1.1 / 4 UNF		01
06	0531062134	UNIVERSAL SUPPORT		01
07	0501111056	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		02
08	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
09	0503010019	1/2" SPRING WASHER		04
10	0503011075	3/4" UNC NUT		06
11	0501010125	3/4" X 2-1/2" BOLT		06
12	0591013172	31.75 X126 AXLE WITH 8 HOLE		02
13	0591013173	CYLINDER INTERMEDIATE BUSHING		02
14	0503012231	1/4" X 3" COTTERPIN		02
15	0501057684	SIDE BEARING FRONT SUPPORT SEED ROW	44	02
16	0503010026	3/8" NUT		04
17	0503010025	3/8 SPRING WASHER		04
18	0501111072	SIDE SUPPORT ARTICULATOR		01
19	0501011544	3/4" X 1-1/2" BOLT		01
20	0503010023	3/4" SPRING WASHER		01
21	0511017232	FLAT WASHER		01
22	0531050903	SIDE ARTICULATED CYLINDER 44.45X85.70X291X657	43	01
23	0591018408	PIN LOCK LINES		01
24	0503030085	LOCK PIN		01

FULL LEFT WHEEL

0531051360

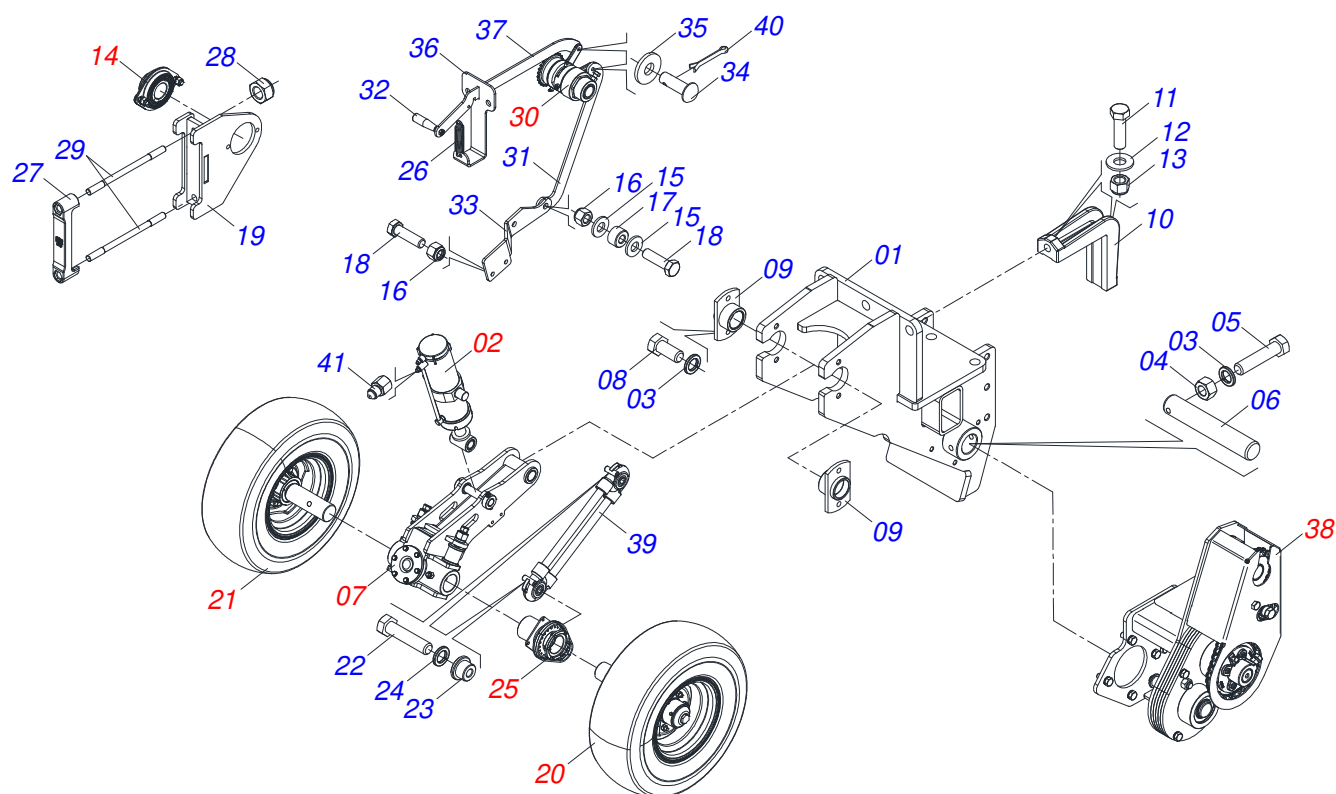


Item	Code	Description	See page	QT
01	0531061579	CENTRAL WHEEL SUPPORT		01
02	0531050023	HYDRAULIC CYLINDER 2 X 5 X 599 X 336	37	01
03	0503010019	1/2" SPRING WASHER		05
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0503017874	BOLT 1/2 UNC		01
06	0591015907	LARGER JUNCTION AXIS		01
07	0521059737	CENTRAL FORK RODEIRO	135	01
08	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
09	0501111056	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		02
10	0502012731	WHEEL HOLDER		03
11	0503014441	BOLT 3/4		06
12	0501010322	FLAT WASHER		06
13	0503010152	3/4" SELF LOCKING NUT		06
14	0521056085	PLATE BEARING ASSY	136	01
15	0501010937	13,50 X 28 X 3,00 FLAT WASHER		02
16	0503010589	1/2" UNC SELF ADJUSTING NUT		03
17	0591016136	GLOVE 13.5 X 18.5 X 18		01
18	0503011082	C1/2" X 1.3/4" SCREW		03
19	0531061577	FIXING SUPPORT LEFT		01
20	0521059727	WHEEL ASSY WITH TIRE	137	01
21	0521059723	WHEEL ASSY WITH TIRE	138	01
22	0503011404	BOLT		01
23	0591016044	FIXING GLOVE 11 X 35 X 20		01
24	0503010025	3/8 SPRING WASHER		01
25	0521059599	WHEEL TRANSMISSION BOX	141	01
26	0503030179	TRACTION SPRING 26 X 3.5 X 105		01
27	0502012768	LINE SUPPORT CLAMP		01
28	0503013389	5/8" SELF LOCKING NUT		04
29	0501017334	5/8"X 5/8" X 10.24" STUD		02
30	0521059736	RIGHT SIDE TRANSMISSION DRIVER	142	01
31	0591015920	DISARMING LEVER		01

FULL LEFT WHEEL

0531051360

Item	Code	Description	See page	QT
32	0503011312	ROTATIVE CABLE		01
33	0591015996	LEFT PLATE ACTIVATION		01
34	0521010773	0.37" X 1.18" COUPLING SHAFT		02
35	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
36	0591016621	LEFT PLATE SUPPORT LEVER		01
37	0591016620	RATCHET LEVER		01
38	0531051355	LEFT WHEEL TRANSMISSION ASSY	144	01
39	0503063177	5/8 WHEEL ENCAPSULATED CHAIN		01
40	0503010257	1/8" X 1" COTTERPIN		02
41	0551016274	HYDRAULIC CYLINDER ADAPTER		01

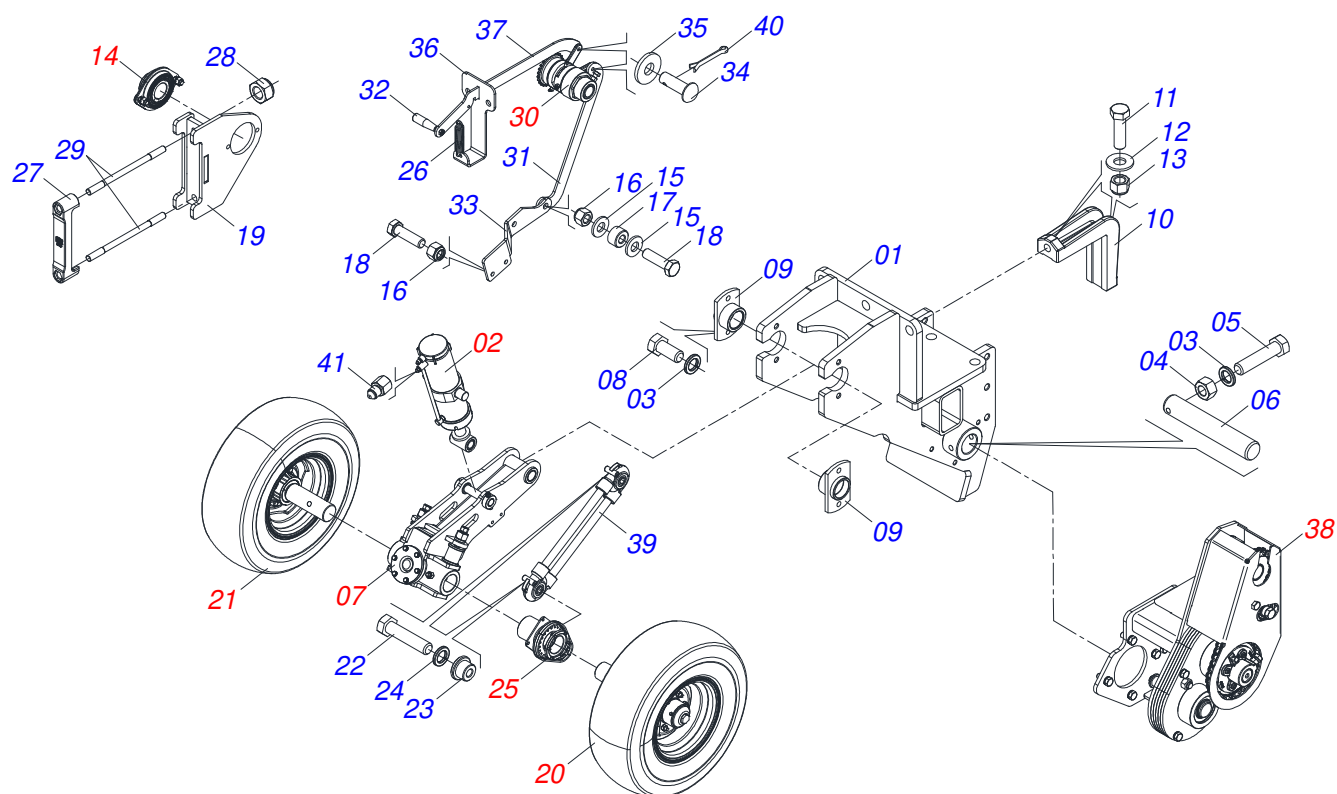


Item	Code	Description	See page	QT
01	0531061579	CENTRAL WHEEL SUPPORT		01
02	0531050023	HYDRAULIC CYLINDER 2 X 5 X 599 X 336	37	01
03	0503010019	1/2" SPRING WASHER		05
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0503017874	BOLT 1/2 UNC		01
06	0591015907	LARGER JUNCTION AXIS		01
07	0521059737	CENTRAL FORK RODEIRO	135	01
08	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
09	0501111056	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		02
10	0502012731	WHEEL HOLDER		03
11	0503014441	BOLT 3/4		06
12	0501010322	FLAT WASHER		06
13	0503010152	3/4" SELF LOCKING NUT		06
14	0521056085	PLATE BEARING ASSY	136	01
15	0501010937	13,50 X 28 X 3,00 FLAT WASHER		02
16	0503010589	1/2" UNC SELF ADJUSTING NUT		03
17	0591016136	GLOVE 13.5 X 18.5 X 18		01
18	0503011082	C1/2" X 1.3/4" SCREW		03
19	0531061576	RIGHT FIXING SUPPORT		01
20	0521059727	WHEEL ASSY WITH TIRE	137	01
21	0521059723	WHEEL ASSY WITH TIRE	138	01
22	0503011404	BOLT		01
23	0591016044	FIXING GLOVE 11 X 35 X 20		01
24	0503010025	3/8 SPRING WASHER		01
25	0521059599	WHEEL TRANSMISSION BOX	141	01
26	0503030179	TRACTION SPRING 26 X 3.5 X 105		01
27	0502012768	LINE SUPPORT CLAMP		01
28	0503013389	5/8" SELF LOCKING NUT		04
29	0501017334	5/8"X 5/8" X 10.24" STUD		02
30	0521059735	LEFT SIDE TRANSMISSION DRIVER	143	01
31	0591015920	DISARMING LEVER		01


Item	Code	Description	See page	QT
32	0503011312	ROTATIVE CABLE		01
33	0591015996	LEFT PLATE ACTIVATION		01
34	0521010773	0.37" X 1.18" COUPLING SHAFT		02
35	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
36	0591016621	LEFT PLATE SUPPORT LEVER		01
37	0591016620	RATCHET LEVER		01
38	0531051354	RIGHT WHEEL TRANSMISSION ASSY		01
39	0503063177	5/8 WHEEL ENCAPSULATED CHAIN		01
40	0503010257	1/8" X 1" COTTERPIN		02
41	0551016274	HYDRAULIC CYLINDER ADAPTER		01

CENTRAL FORK RODEIRO


0521059737

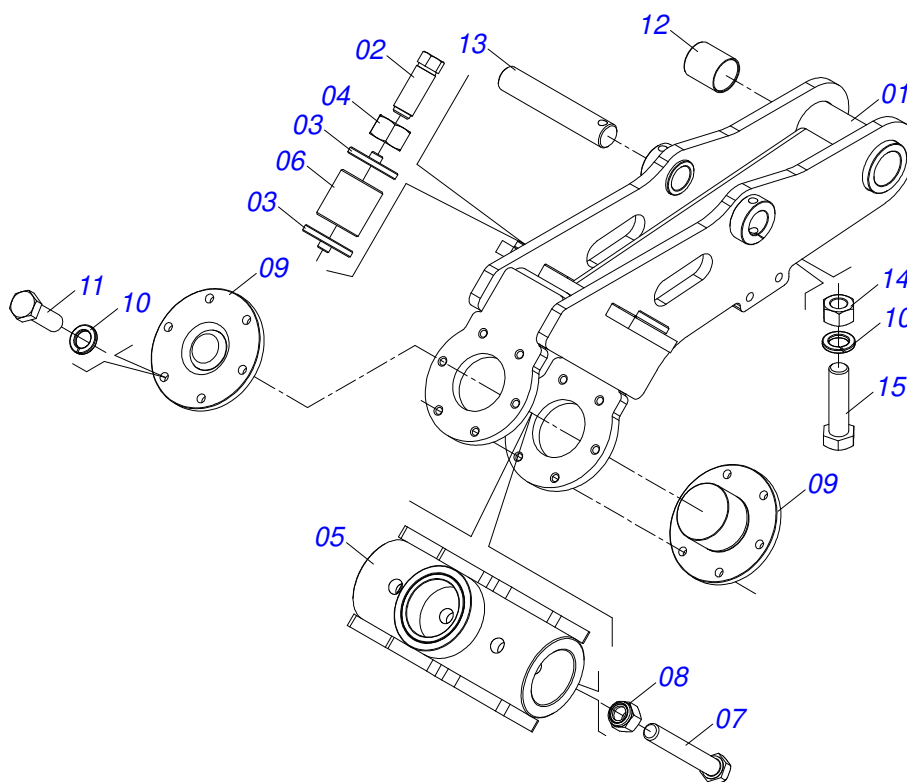


Item	Code	Description	See page	QT
01	0531061573	WHEEL BODY		01
02	0521018575	REGULATOR SPINDLE 100		02
03	0591015950	SUPPORT		04
04	0501010087	1.1/4" NUT		02
05	0521059738	CROSSHEAD MOUNTED		01
06	0591016434	PLASTIPRENE		02
07	0503019246	BOLT		02
08	0503011075	3/4" UNC NUT		02
09	0531061575	BEARING		02
10	0503010019	1/2" SPRING WASHER		13
11	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		12
12	0503019271	SELF LUBRICATING BUSHING		02
13	0591015935	CENTRAL WHEEL CYLINDER AXLE		01
14	0503010060	1/2 UNC G.5 ZN HEX NUT		01
15	0503010752	1/2" X 3.1/2" BOLT		01

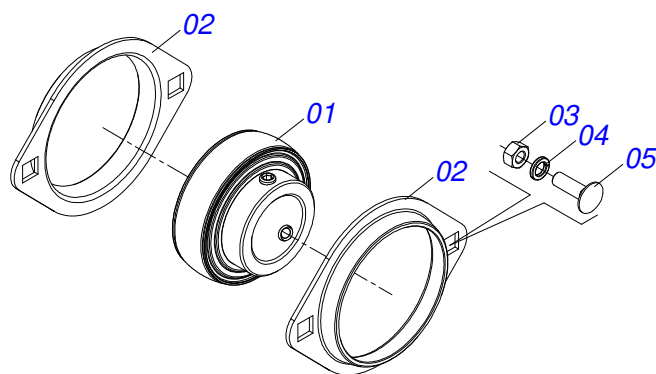


Item	Code	Description	See page	QT
01	0503019402	BEARING B207-22 V22 FRM		01
02	0503019403	PFL 207 FRM BEARING PLATE		02
03	0503010026	3/8" NUT		02
04	0503010025	3/8 SPRING WASHER		02
05	0501011643	3/8 X 1"BOLT		02

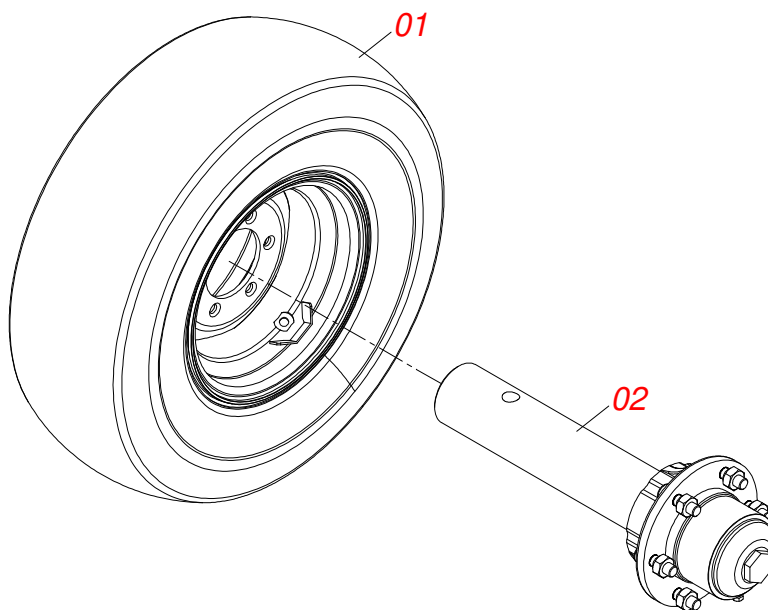


Item	Code	Description	See page	QT
01	0521059728	WHEEL WITH TIRE	40	01
02	0521059729	MOUNTED CUBE	139	01

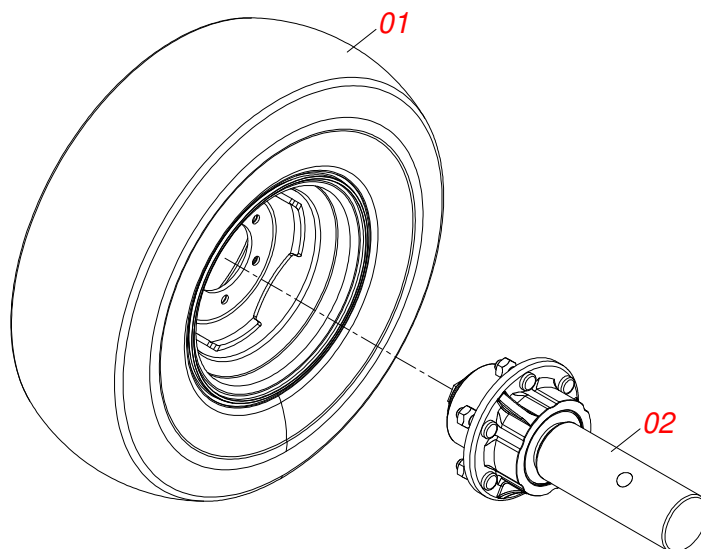


Item	Code	Description	See page	QT
01	0521059728	WHEEL WITH TIRE	40	01
02	0521059724	ASSEMBLED CUBE WITHOUT TRANSMISSION	140	01

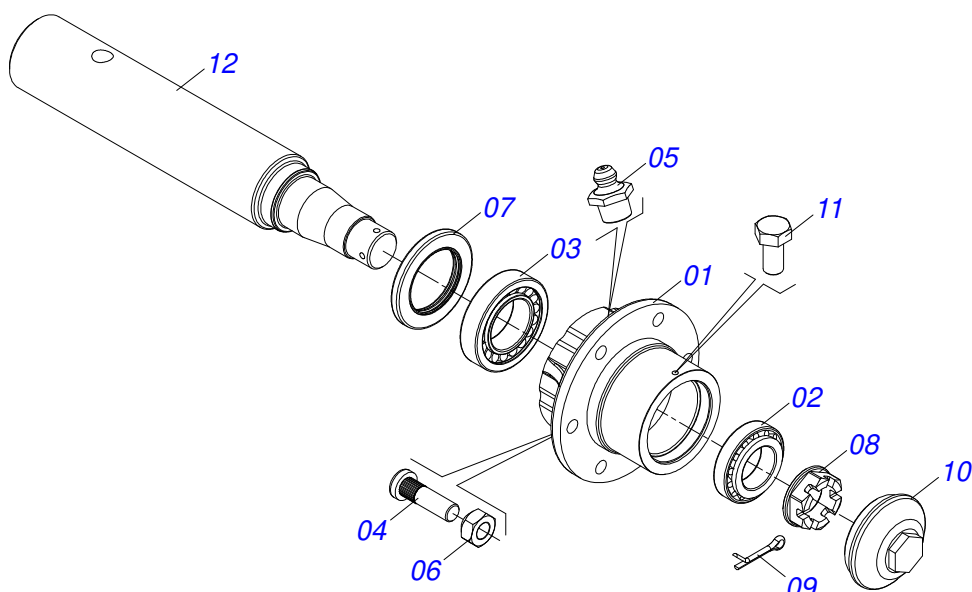


Item	Code	Description	See page	QT
01	0591016025	BOX MM		01
02	0503010006	32210 ROLLER BEARING		01
03	0503010005	32212 ROLLER BEARING		01
04	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
05	0503010002	1800 GREASE FITTING		01
06	0503010064	5/8 UNF CONIC NUT		06
07	0503011866	SEAL 00573-B WITH HOLE		01
08	0501010888	1.3/4" 2.5/16" CASTLE NUT		01
09	0503010010	1/4" X 2.1/2" COTTERPIN		01
10	0502020593	COVER		01
11	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		01
12	0591015896	WHEEL AXIS		01

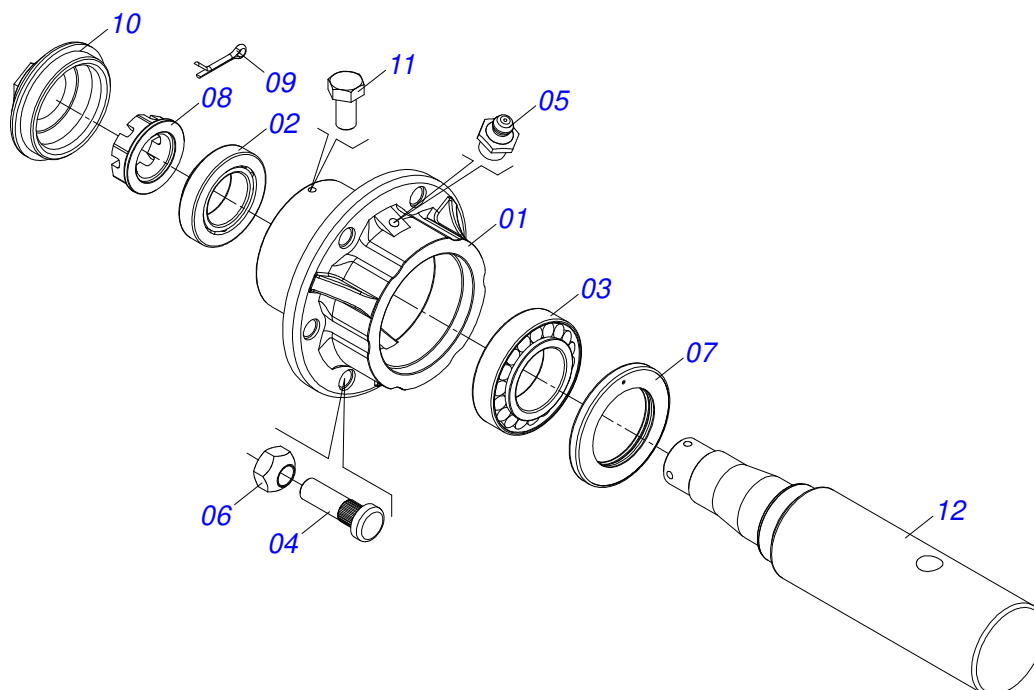


Item	Code	Description	See page	QT
01	0502011389	BOX		01
02	0503010006	32210 ROLLER BEARING		01
03	0503010005	32212 ROLLER BEARING		01
04	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
05	0503010002	1800 GREASE FITTING		01
06	0503010064	5/8 UNF CONIC NUT		06
07	0503011866	SEAL 00573-B WITH HOLE		01
08	0501010888	1.3/4" 2.5/16" CASTLE NUT		01
09	0503010010	1/4" X 2.1/2" COTTERPIN		01
10	0502020593	COVER		01
11	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		01
12	0591015895	WHEEL AXIS		01

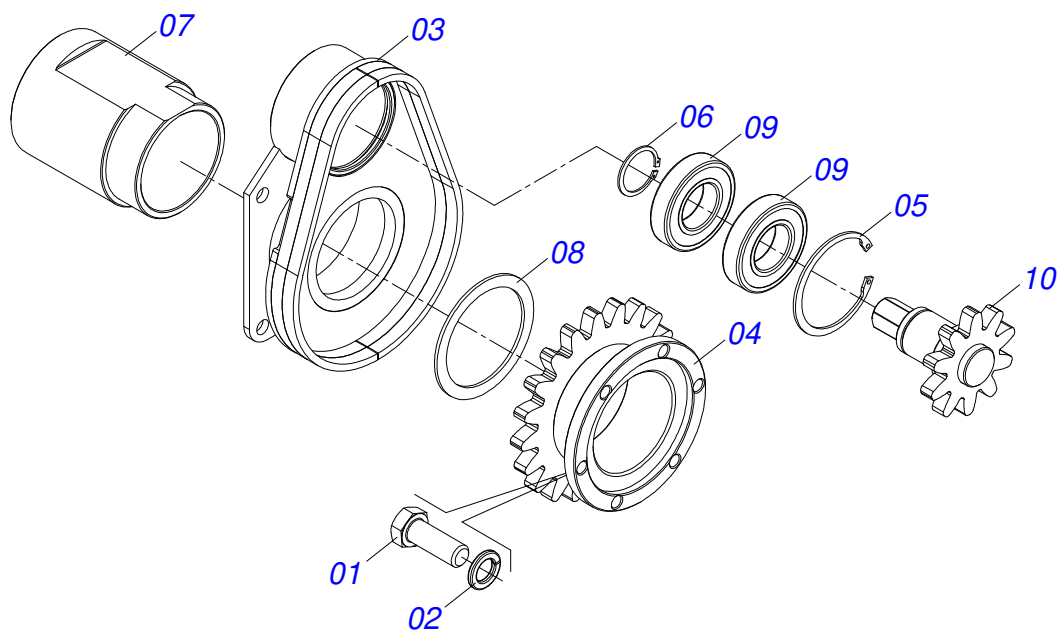

Item	Code	Description	See page	QT
01	0503010237	3/8" X 1" BOLT		06
02	0503010025	3/8 SPRING WASHER		06
03	0531061478	TRANSMISSION BOX		01
04	0531061479	CUBE WITH GEAR 20Z		01
05	0503011100	502080 CLAMPING RING (FOR AXLE)		01
06	0503010217	501040 CLAMPING RING (FOR AXLE)		01
07	0591015634	NYLON GLOVE		01
08	0591015635	WASHER		01
09	0503019922	BEARING 6208		02
10	0531061480	10Z GEAR AXLE		01

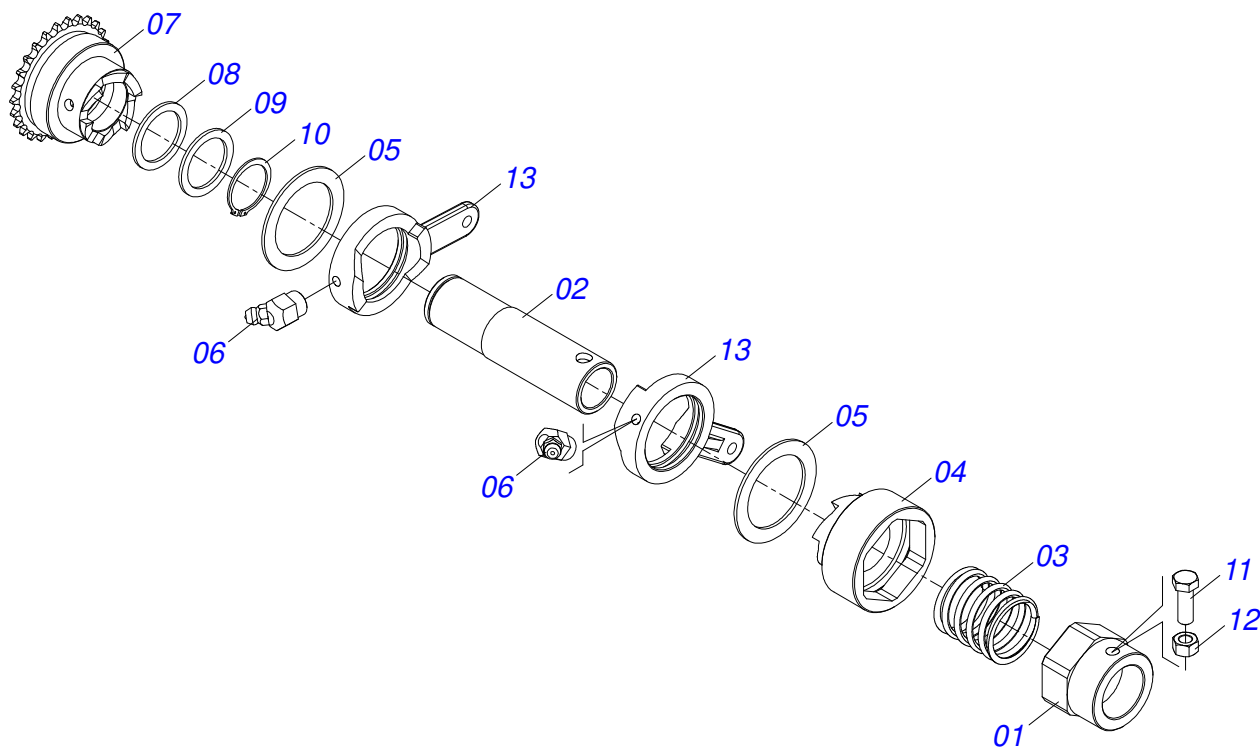


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0521017590	GUIDE AXLE		01
03	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
04	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
05	0501019734	FLAT WASHER		02
06	0503010003	1845 GREASE FITTING		02
07	0502012539	26Z P12,7 GEAR		01
08	0501019735	FLAT WASHER		01
09	0521017593	FLAT WASHER		01
10	0503010542	501045 CLAMPING RING (FOR AXLE)		01
11	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
12	0503010060	1/2 UNC G.5 ZN HEX NUT		01
13	0502010720	RIGHT CAM, SMALLER		02

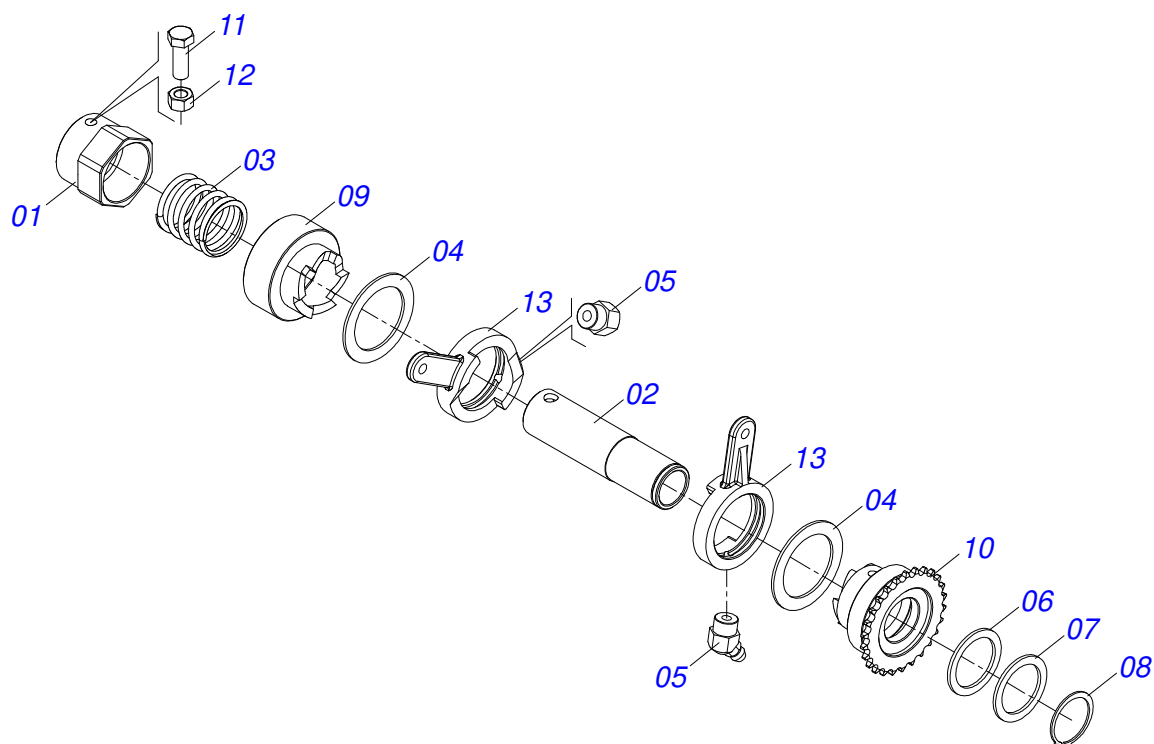


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0521017590	GUIDE AXLE		01
03	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
04	0501019734	FLAT WASHER		02
05	0503010003	1845 GREASE FITTING		02
06	0501019735	FLAT WASHER		01
07	0521017593	FLAT WASHER		01
08	0503010542	501045 CLAMPING RING (FOR AXLE)		01
09	0502011995	LH DRIVING AXLE FOLLOWER		01
10	0502012540	26Z P12,7 GEAR		01
11	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
12	0503010060	1/2 UNC G.5 ZN HEX NUT		01
13	0502010710	RIGHT CAM, SMALLER		02

LEFT WHEEL TRANSMISSION ASSY


0531051355

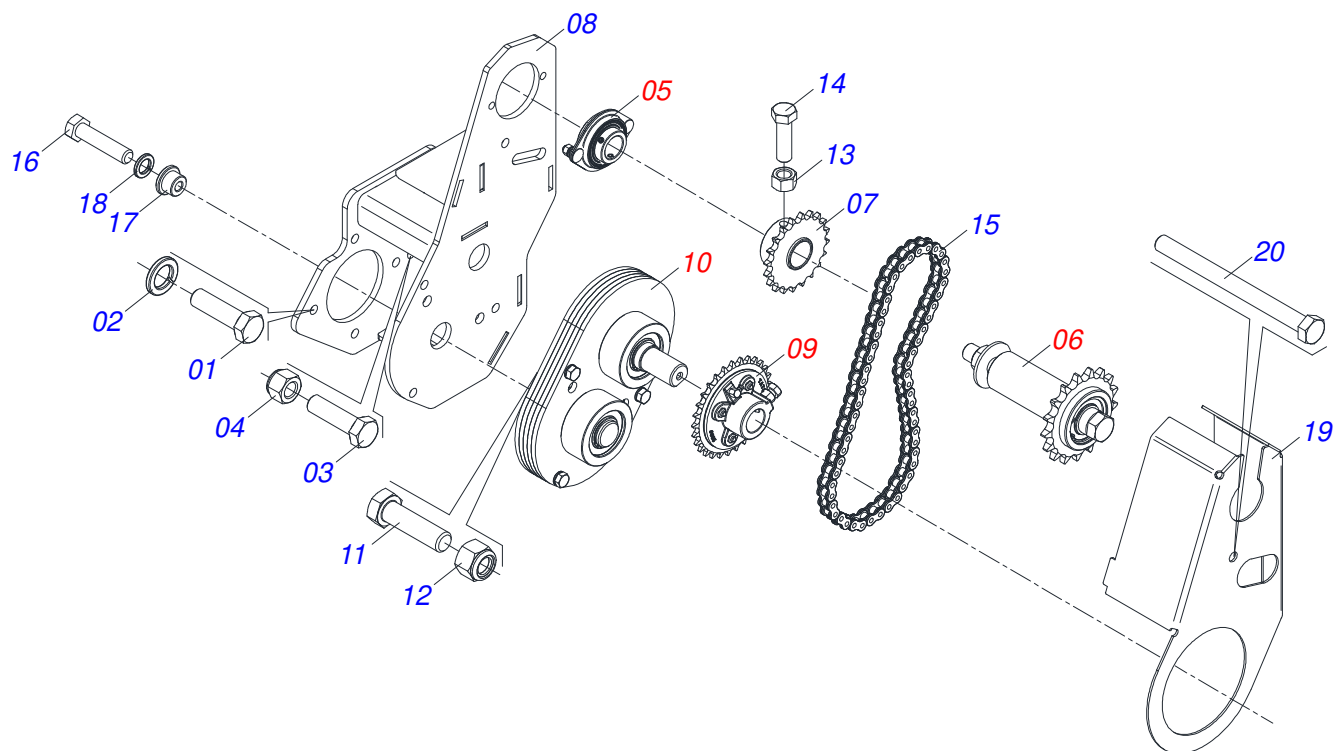


Item	Code	Description	See page	QT
01	0503014007	1/2" X 1-1/4" BOLT		04
02	0503010019	1/2" SPRING WASHER		04
03	0503010905	1/2" X 2-1/4" BOLT		02
04	0503010589	1/2" UNC SELF ADJUSTING NUT		03
05	0521056085	PLATE BEARING ASSY	136	01
06	0531051358	WHEEL TRANSMISSION STRETCHER	145	01
07	0531062355	MOTOR GEAR 20Z P5/8		01
08	0531062354	LEFT WHEEL TRANSMISSION SUPPORT		01
09	0531051356	STARTER TRANSMISSION ASSY LEFT 29Z	146	01
10	0531051372	RIGHT / LEFT WHEEL TRANSMISSION BOX	147	01
11	0501013233	5/8" X 2-3/4" BOLT		02
12	0503012412	5/8 UNC SELF LOCKING NUT		02
13	0503010060	1/2 UNC G.5 ZN HEX NUT		01
14	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
15	0503012463	CHAIN		01
16	0503011404	BOLT		01
17	0591016044	FIXING GLOVE 11 X 35 X 20		01
18	0503010025	3/8 SPRING WASHER		01
19	0591018543	LEFT PROTECTIVE COVER		01
20	0503016023	1/2 X 6 BOLT		01

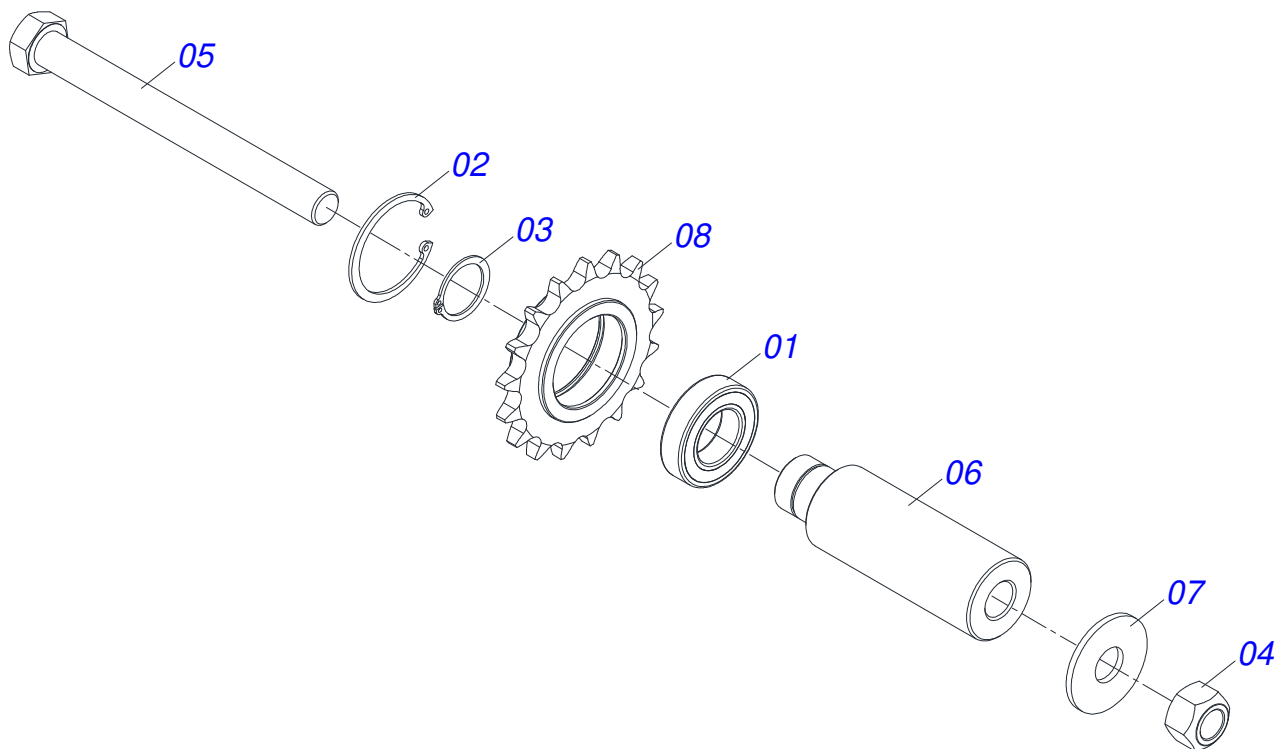


Item	Code	Description	See page	QT
01	0503011410	ROLLER BEARING		01
02	0503011105	SEAL RING		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0503012412	5/8 UNC SELF LOCKING NUT		01
05	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		01
06	0591015905	STRETCHER AXIS		01
07	0501010453	FLAT WASHER		01
08	0511061836	17Z GEAR		01

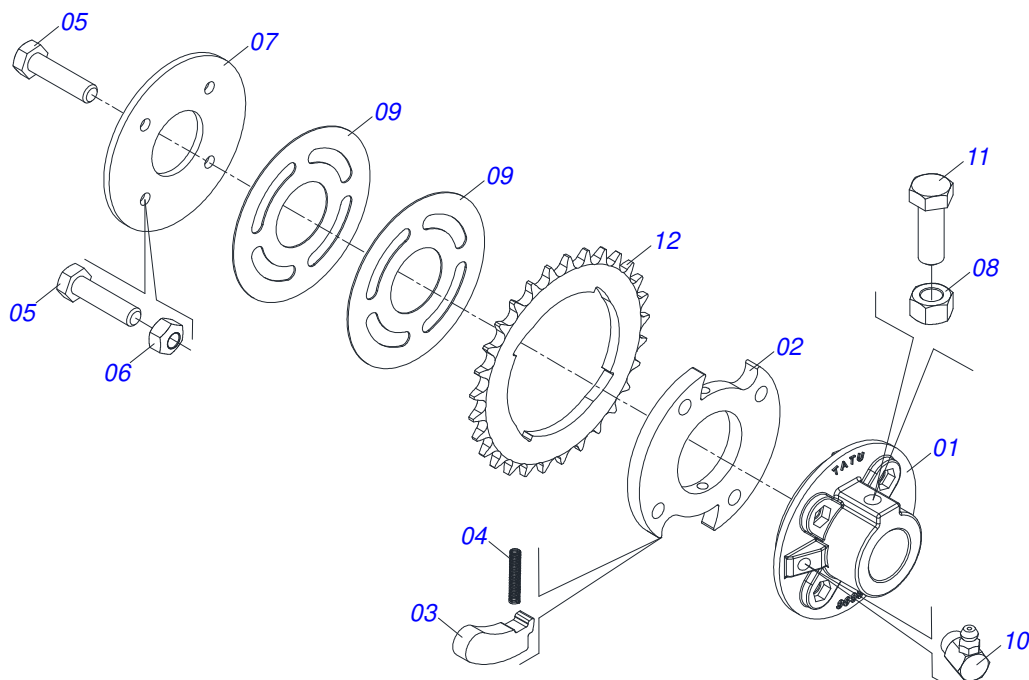


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY	01	
02	0571010151	GRAGGER RATCHET BODY	01	
03	0551019100	LOCK RATCHET	02	
04	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING	02	
05	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN	04	
06	0503013816	5/16" LOCKNUT	04	
07	0571010164	SEAT SIDE OF RATCHET	01	
08	0503010060	1/2 UNC G.5 ZN HEX NUT	01	
09	0571010763	FLANGE WASHER	02	
10	0503010004	1890 GREASE FITTING	01	
11	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN	01	
12	0591018545	GEAR BODY	01	

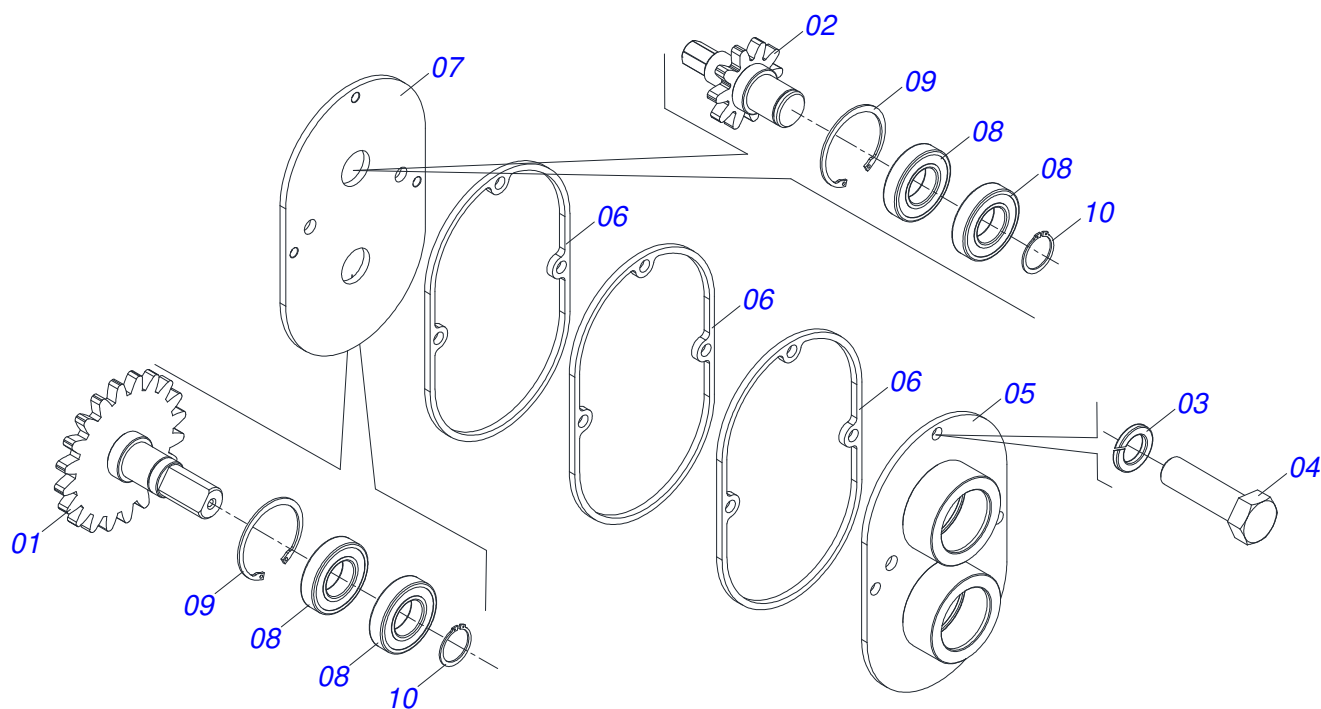


Item	Code	Description	See page	QT
01	0531061493	20Z GEAR AXLE		01
02	0531061494	SMALLER GEAR		01
03	0503010019	1/2" SPRING WASHER		03
04	0503018701	SCREW 1/2 UNC X 1.3/4 CS G.5 ZN		03
05	0531062356	FRONT BEARING		01
06	0591018554	SEPARATOR		03
07	0591018555	TRANSMISSION BOX BODY		01
08	0503019922	BEARING 6208		04
09	0503011100	502080 CLAMPING RING (FOR AXLE)		02
10	0503010217	501040 CLAMPING RING (FOR AXLE)		02

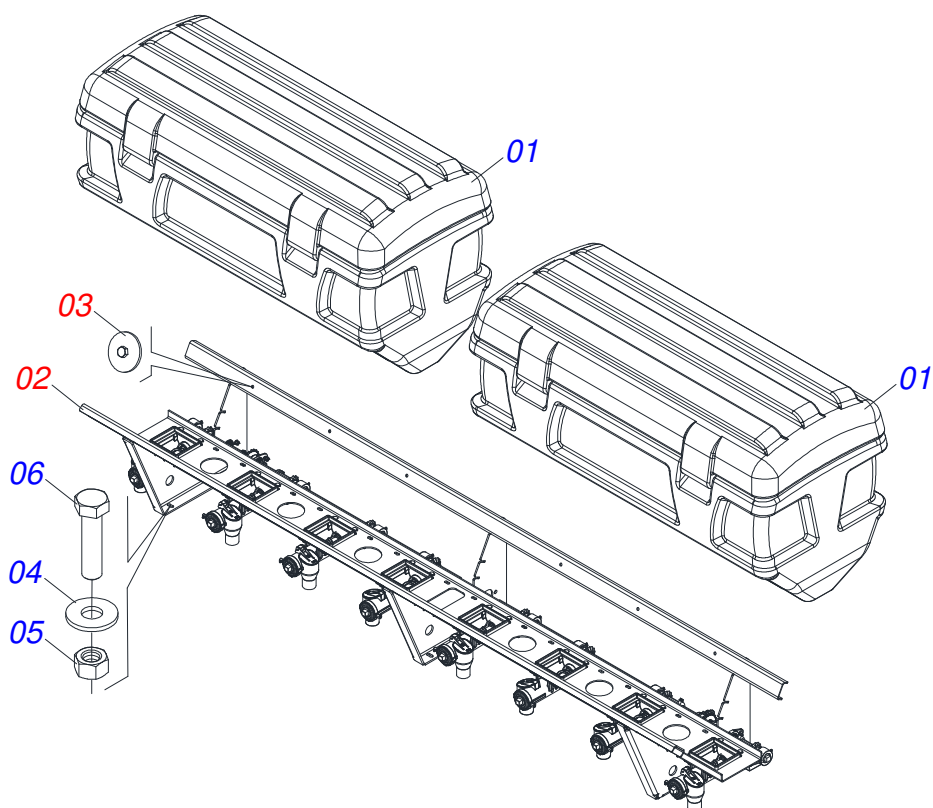


Item	Code	Description	See page	QT
01	0503062362	FERTILIZER HOPPER		02
02	0521057783	CENTRAL SUPPORT 8 MOUTH	150	01
03	0521051407	FERTILIZER HOPPER FIXER	29	12
04	0501013519	FLAT WASHER		06
05	0503010589	1/2" UNC SELF ADJUSTING NUT		06
06	0503014378	1/2" X 1-1/2" BOLT		06

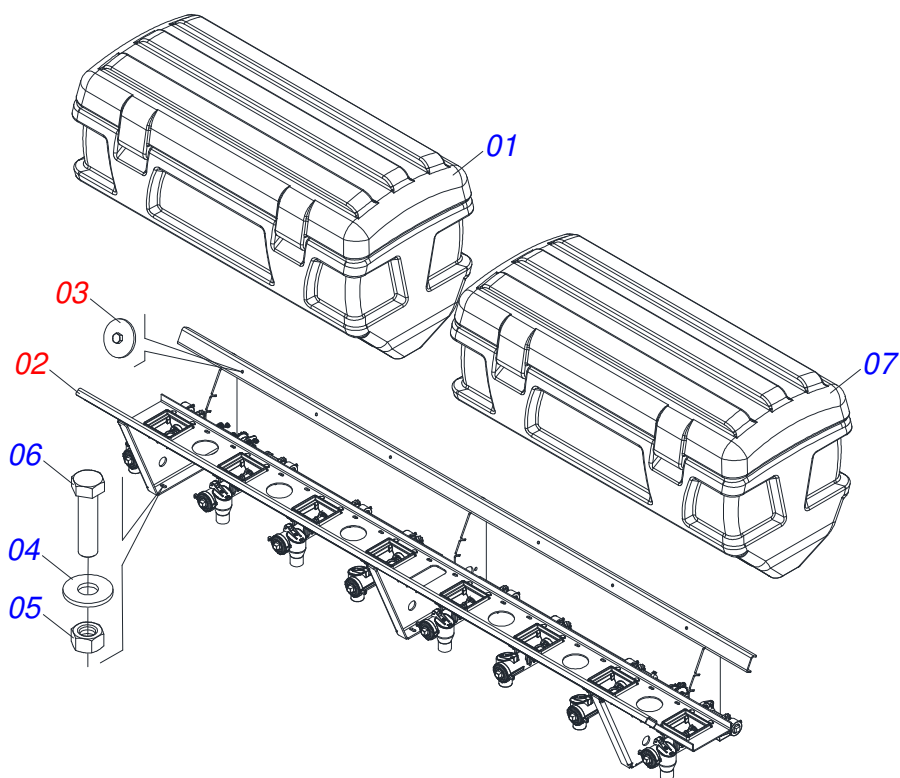


Item	Code	Description	See page	QT
001	0503062362	FERTILIZER HOPPER		01
002	0531051661	07 MOUTH CENTRAL SUPPORT	151	01
003	0521051407	FERTILIZER HOPPER FIXER	29	10
004	0501013519	FLAT WASHER		06
005	0503010589	1/2" UNC SELF ADJUSTING NUT		06
006	0503014378	1/2" X 1-1/2" BOLT		06
007	0503062927	FERTILIZER HOPPER		01

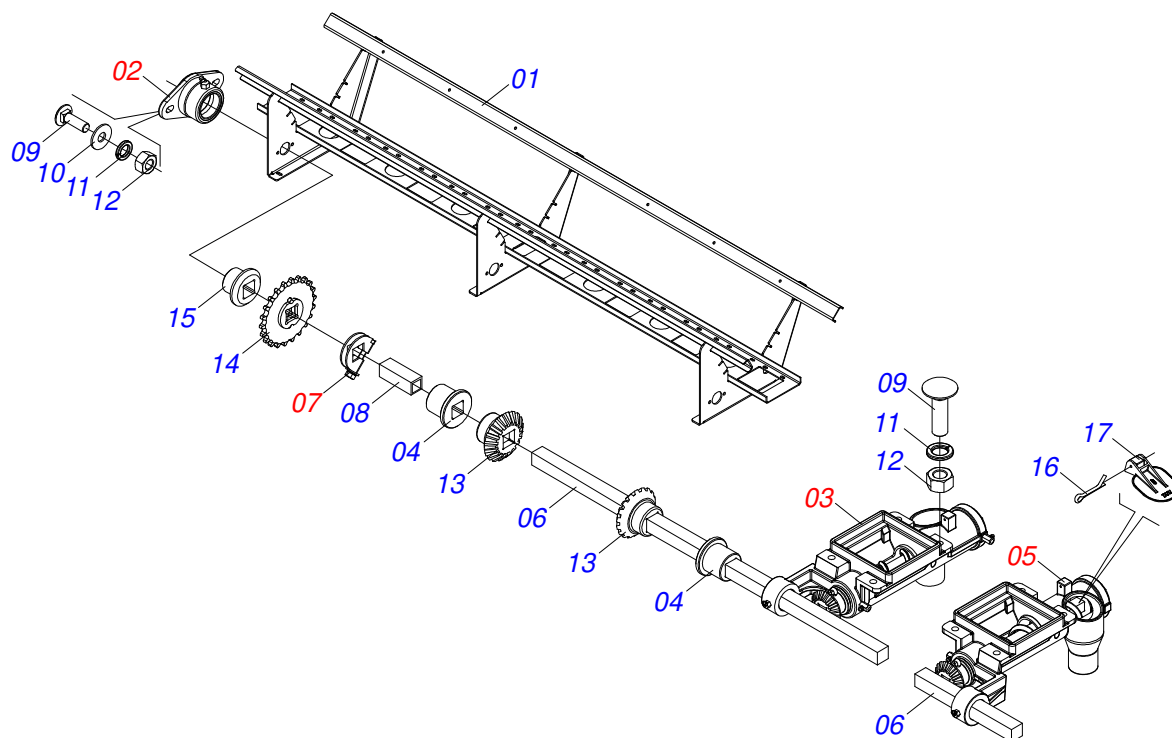


Item	Code	Description	See page	QT
01	0531060766	SUPPORT SILO 08 MOUTH		01
02	0521054282	BEARING	32	04
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR		04
04	0503030275	AGRICULTURAL BEARING		08
05	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	34	04
06	0561018362	SQUARE SHAFT		02
07	0501053788	3/4 SQUARE AXLE FASTENER	35	08
08	0551018055	22,65 X 60 SLEEVE		04
09	0503011953	5/16" X 1" BOLT		32
10	0501010694	FLAT WASHER		32
11	0503010179	LOCK WASHER 5/16 ZN 1K01528		32
12	0503010337	5/16" NUT		32
13	0502012990	CONICA 14Z SQUARE GEAR		08
14	0511065209	20Z GEAR		02
15	0503030303	SUPPORT WASHER		06
16	0503010362	1/8 X 1.1/4 COTTERPIN		08
17	0503034396	FERTILIZER SIDE COVER		08

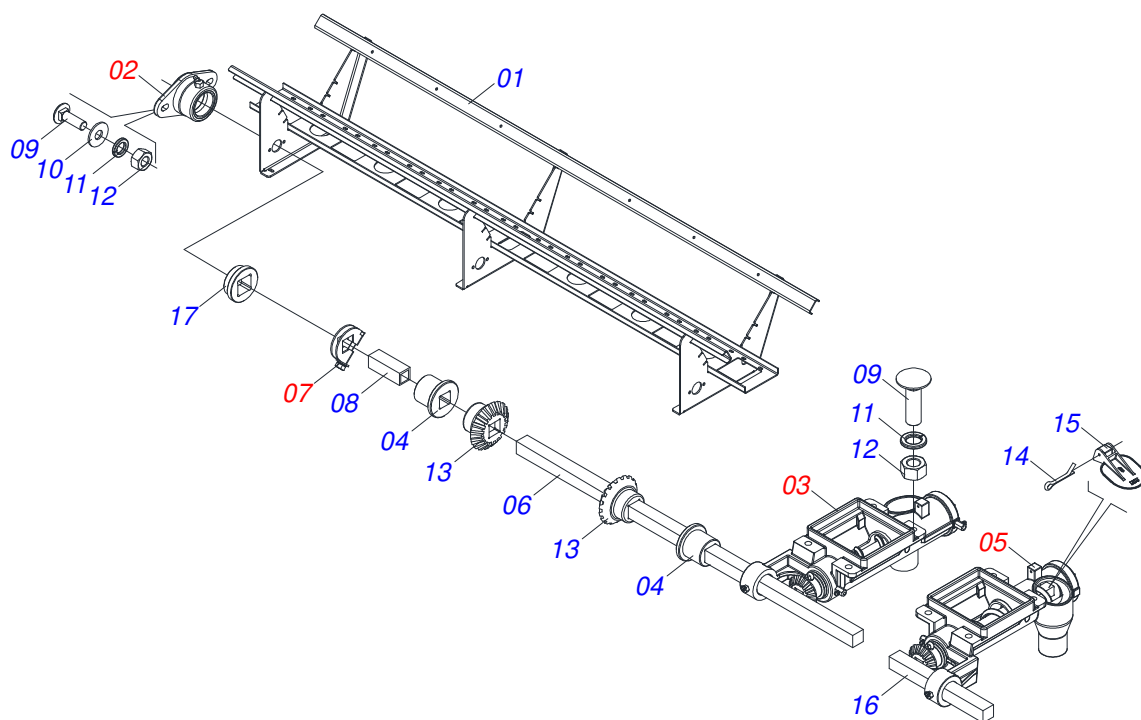


Item	Code	Description	See page	QT
001	0531062465	07 MOUTH SILO SUPPORT		01
002	0521054282	BEARING	32	02
003	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR		04
004	0503030275	AGRICULTURAL BEARING		07
005	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	34	03
006	0561018362	SQUARE SHAFT		01
007	0501053788	3/4 SQUARE AXLE FASTENER	35	08
008	0551018055	22,65 X 60 SLEEVE		04
009	0503011953	5/16" X 1" BOLT		28
010	0501010694	FLAT WASHER		28
011	0503010179	LOCK WASHER 5/16 ZN 1K01528		28
012	0503010337	5/16" NUT		28
013	0502012990	CONICA 14Z SQUARE GEAR		07
014	0503010362	1/8 X 1.1/4 COTTERPIN		07
015	0503034396	FERTILIZER SIDE COVER		07
016	0591018927	SQUARE AXLE 3/4 X 995		01
017	0503030303	SUPPORT WASHER		04

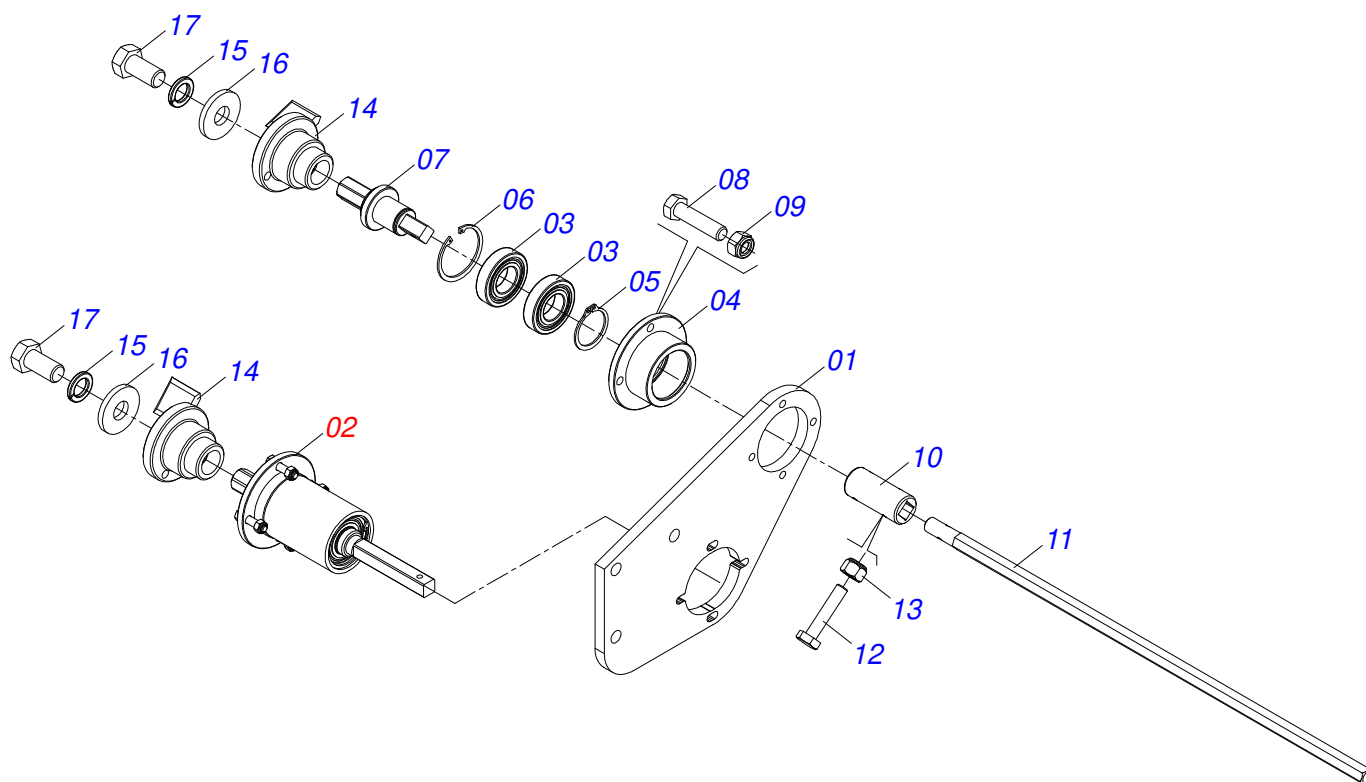

Item	Code	Description	See page	QT
01	0591018114	RIGHT PLATE BEARING		01
02	0531051055	HUB GREATER TRANSMISSION	153	01
03	0503011081	6207 2RS BEARING		02
04	0591018034	SHAFT BEARING GUIDE HITCH		01
05	0503010845	501035 CLAMPING RING (FOR AXLE)		01
06	0503010370	502072 CLAMPING RING (FOR AXLE)		01
07	0591018115	SMALLER TRANSMISSION AXIS		01
08	0503010849	3/8" X 1-1/2" BOLT		04
09	0503013357	3/8 SELF-ADJUSTING NUT		04
10	0591018038	DRAGGLE GLOVE		01
11	0591018039	HEX SHAFT 3/4 X 750 CENTRAL AND SIDE		01
12	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
13	0503014876	NUT PARLOCK 1/4"		02
14	0531062224	TRANSMISSION COUPLING WITH PLATE		02
15	0503010019	1/2" SPRING WASHER		02
16	0591018113	WASHER SUPPORT AXLE 13.50 X 34 X 4.00		02
17	0503012556	1/2" X 1" BOLT		02

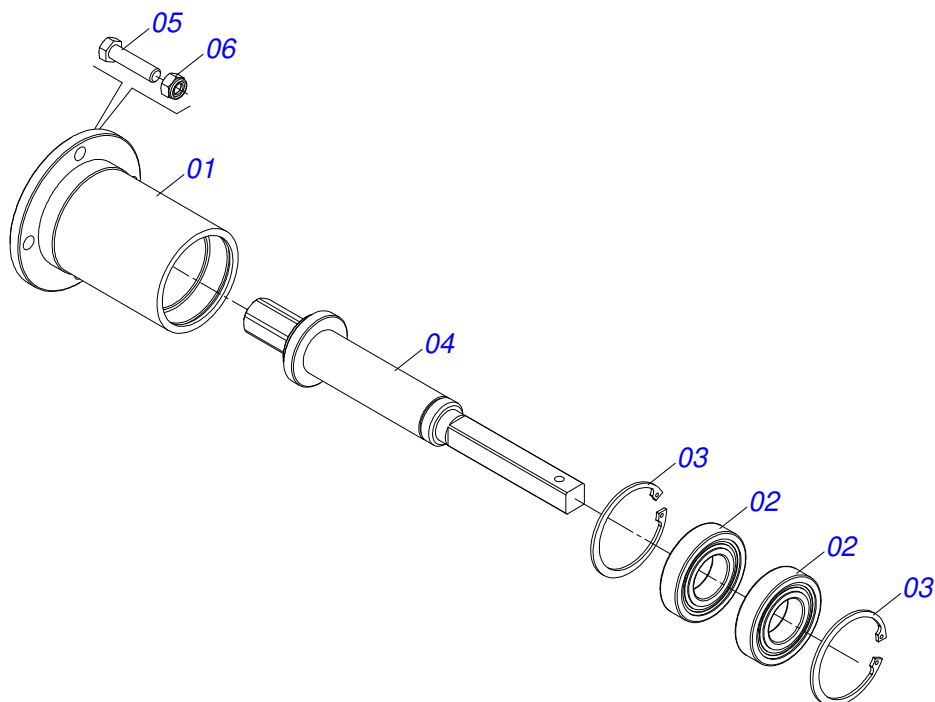


Item	Code	Description	See page	QT
01	0591018112	HIGHER TRANSMISSION BEARING		01
02	0503011081	6207 2RS BEARING		02
03	0503010370	502072 CLAMPING RING (FOR AXLE)		02
04	0591018111	LARGER TRANSMISSION AXIS		01
05	0503010849	3/8" X 1-1/2" BOLT		04
06	0503013357	3/8 SELF-ADJUSTING NUT		04

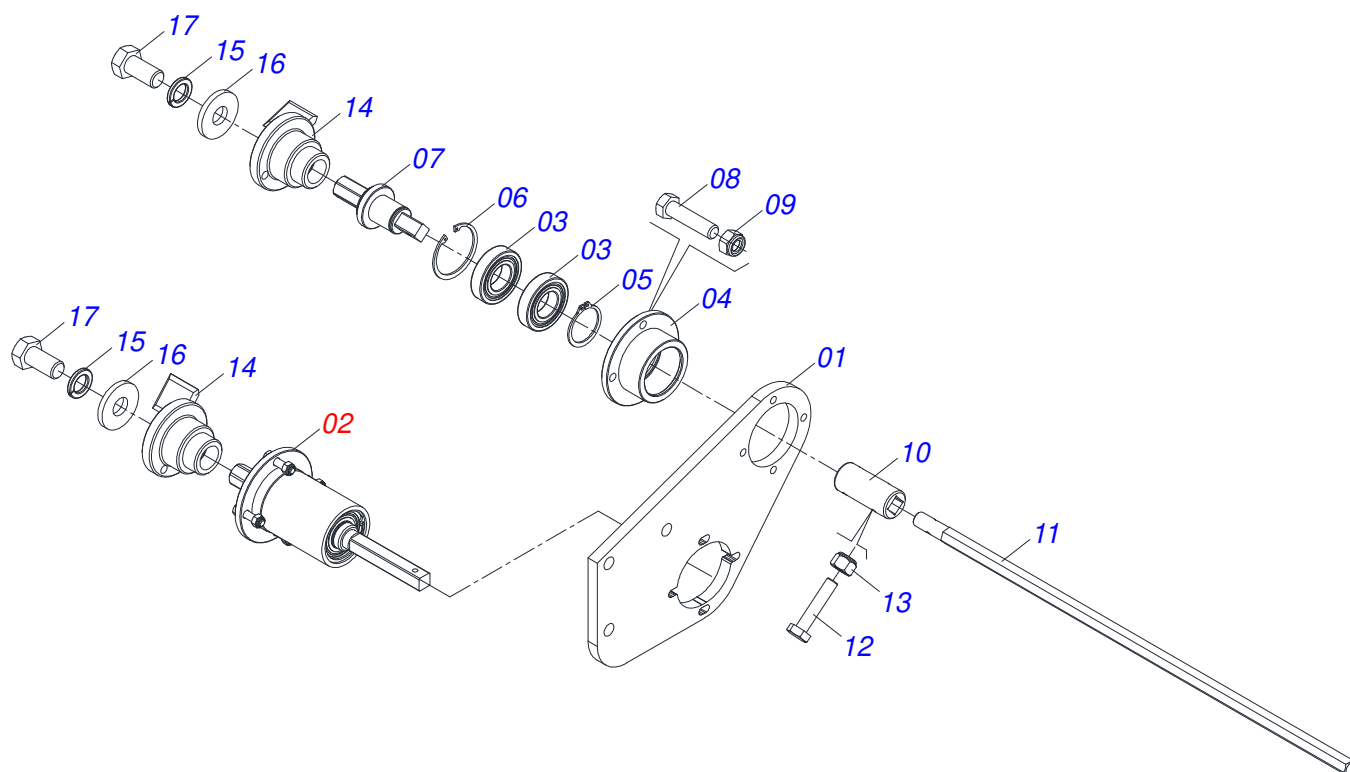


Item	Code	Description	See page	QT
01	0591018114	RIGHT PLATE BEARING		01
02	0531051113	HUGE TRANSMISSION	157	01
03	0503016061	BEARING		02
04	0591018034	SHAFT BEARING GUIDE HITCH		01
05	0503010845	501035 CLAMPING RING (FOR AXLE)		01
06	0503010370	502072 CLAMPING RING (FOR AXLE)		01
07	0591018115	SMALLER TRANSMISSION AXIS		01
08	0503010849	3/8" X 1-1/2" BOLT		04
09	0503013357	3/8 SELF-ADJUSTING NUT		04
10	0591018038	DRAGGLE GLOVE		01
11	0591018552	HEXAGONAL AXLE 3/4 X 1150 CENTRAL		01
12	0503010882	BOLT		02
13	0503013759	NUT		02
14	0531062224	TRANSMISSION COUPLING WITH PLATE		02
15	0503010019	1/2" SPRING WASHER		02
16	0591018113	WASHER SUPPORT AXLE 13.50 X 34 X 4.00		02
17	0503012556	1/2" X 1" BOLT		02

LEFT TRANSMISSION SUPPORT


0531051063

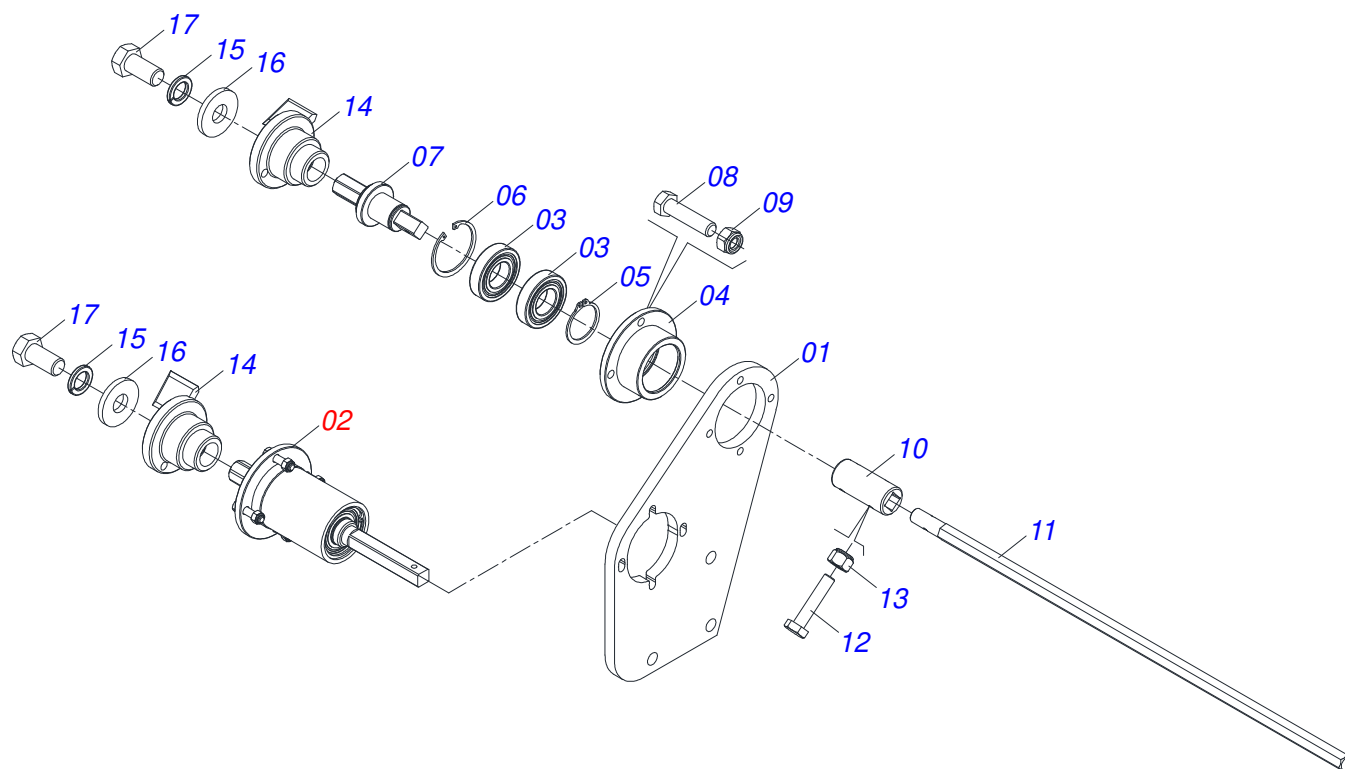


Item	Code	Description	See page	QT
01	0591018114	RIGHT PLATE BEARING		01
02	0531051055	HUB GREATER TRANSMISSION	153	01
03	0503011081	6207 2RS BEARING		02
04	0591018034	SHAFT BEARING GUIDE HITCH		01
05	0503010845	501035 CLAMPING RING (FOR AXLE)		01
06	0503010370	502072 CLAMPING RING (FOR AXLE)		01
07	0591018115	SMALLER TRANSMISSION AXIS		01
08	0503010849	3/8" X 1-1/2" BOLT		04
09	0503013357	3/8 SELF-ADJUSTING NUT		04
10	0591018038	DRAGGLE GLOVE		01
11	0591018039	HEX SHAFT 3/4 X 750 CENTRAL AND SIDE		01
12	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
13	0503014876	NUT PARLOCK 1/4"		02
14	0531062224	TRANSMISSION COUPLING WITH PLATE		02
15	0503010019	1/2" SPRING WASHER		02
16	0591018113	WASHER SUPPORT AXLE 13.50 X 34 X 4.00		02
17	0503012556	1/2" X 1" BOLT		02

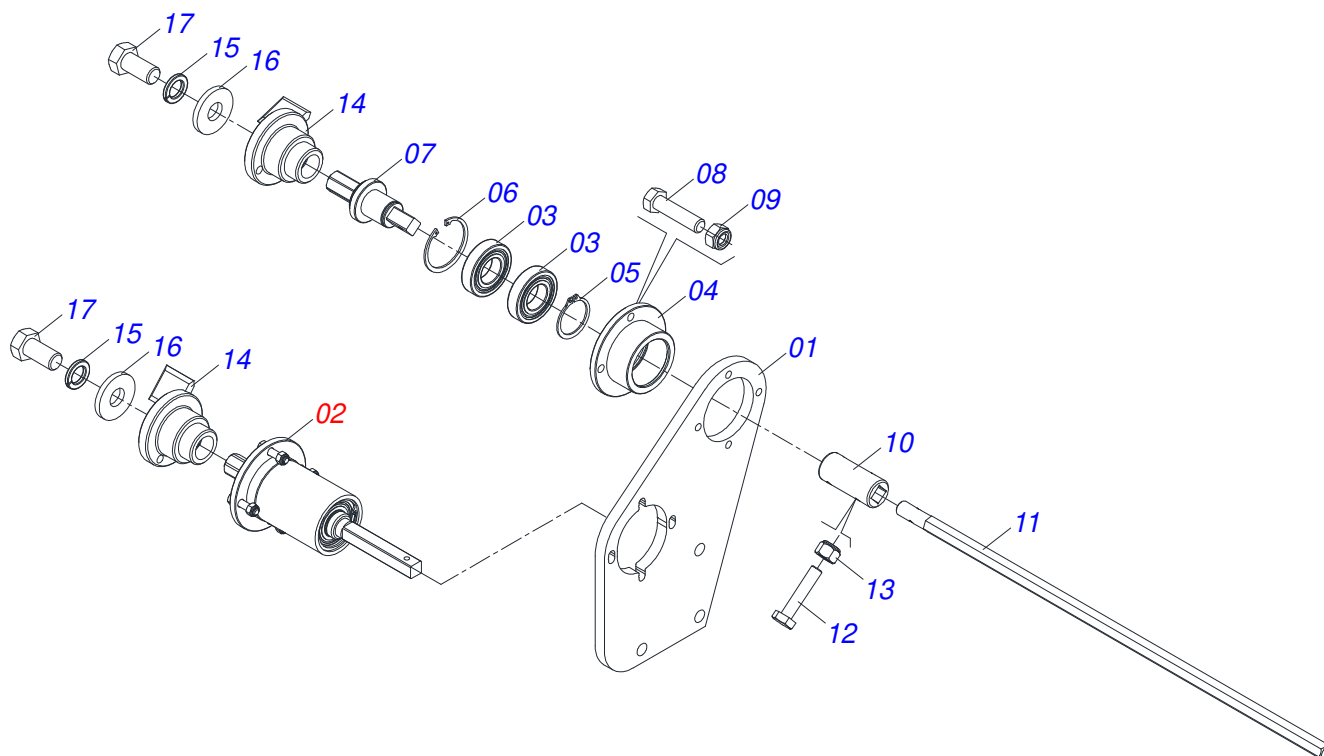


Item	Code	Description	See page	QT
01	0591018114	RIGHT PLATE BEARING		01
02	0531051113	HUGE TRANSMISSION	157	01
03	0503016061	BEARING		02
04	0591018034	SHAFT BEARING GUIDE HITCH		01
05	0503010845	501035 CLAMPING RING (FOR AXLE)		01
06	0503010370	502072 CLAMPING RING (FOR AXLE)		01
07	0591018115	SMALLER TRANSMISSION AXIS		01
08	0503010849	3/8" X 1-1/2" BOLT		04
09	0503013357	3/8 SELF-ADJUSTING NUT		04
10	0591018038	DRAGGLE GLOVE		01
11	0591018552	HEXAGONAL AXLE 3/4 X 1150 CENTRAL		01
12	0503010882	BOLT		02
13	0503013759	NUT		02
14	0531062224	TRANSMISSION COUPLING WITH PLATE		02
15	0503010019	1/2" SPRING WASHER		02
16	0591018113	WASHER SUPPORT AXLE 13.50 X 34 X 4.00		02
17	0503012556	1/2" X 1" BOLT		02

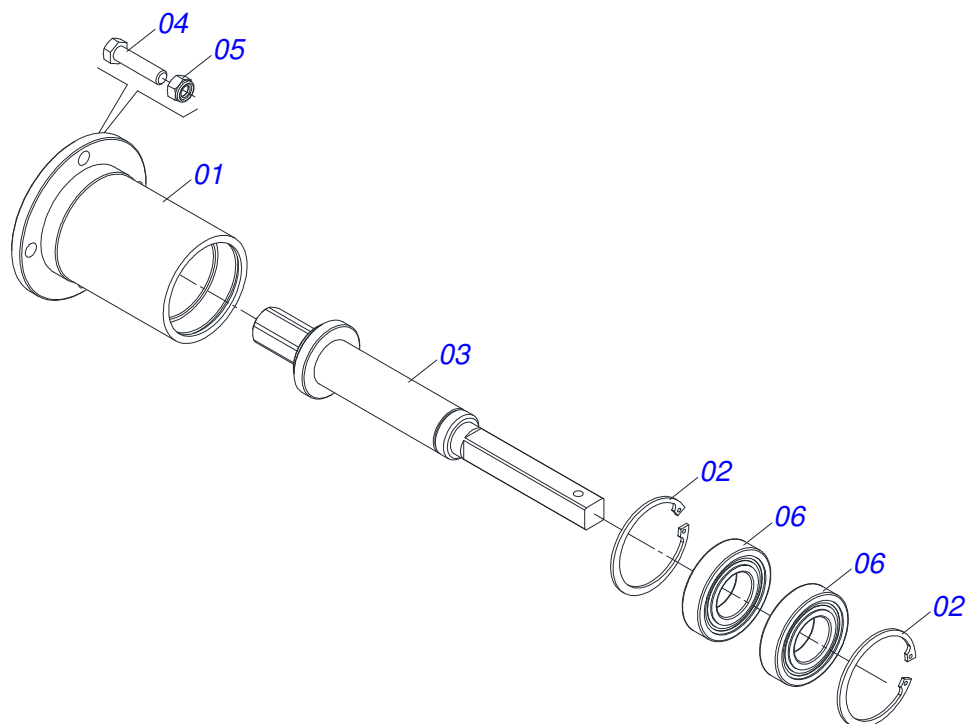


Item	Code	Description	See page	QT
001	0591018112	HIGHER TRANSMISSION BEARING		01
002	0503010370	502072 CLAMPING RING (FOR AXLE)		02
003	0591018929	TRANSMISSION SHAFT 385		01
004	0503010849	3/8" X 1-1/2" BOLT		04
005	0503013357	3/8 SELF-ADJUSTING NUT		04
006	0503016061	BEARING		02

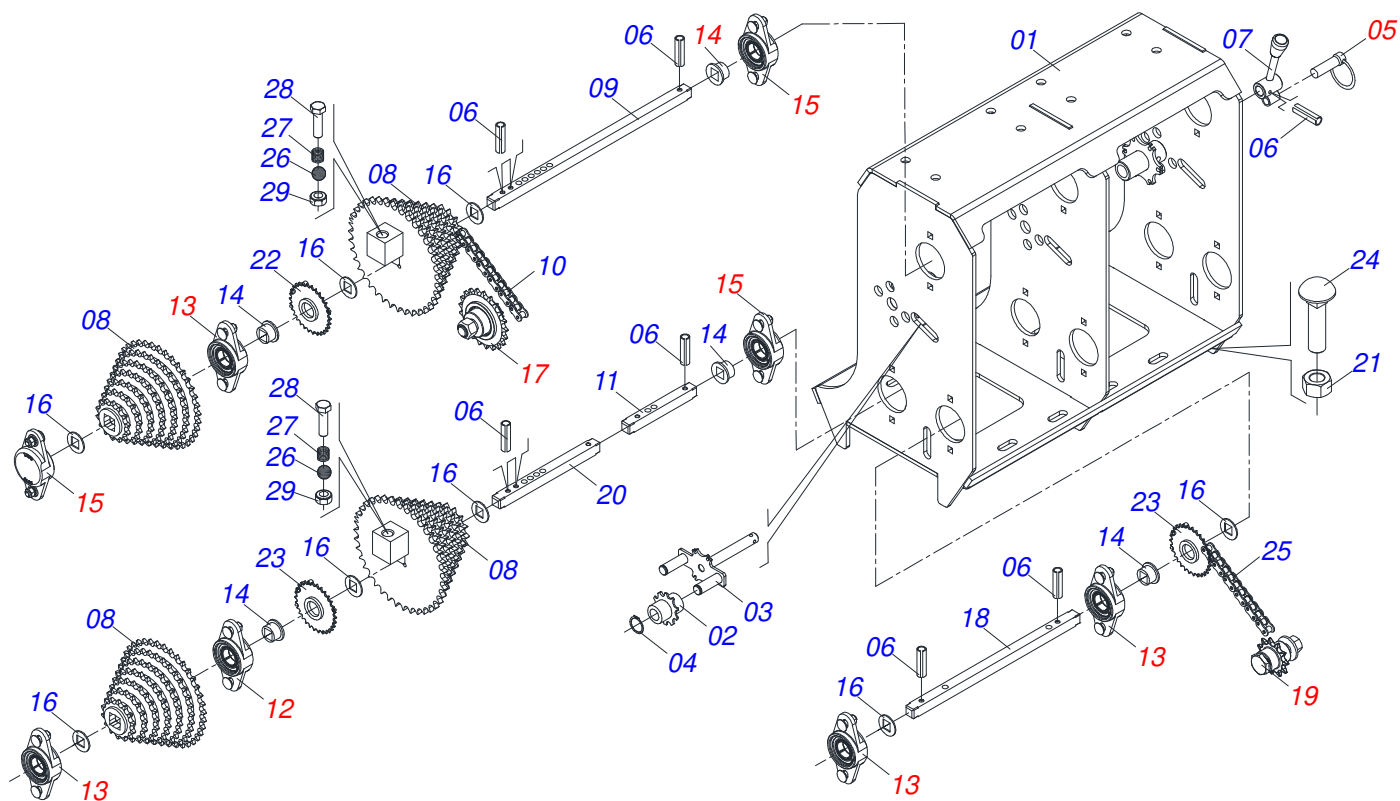


Item	Code	Description	See page	QT
001	0531062226	EXCHANGE BOX		01
002	0503031805	11Z 1/2" GEAR		04
003	0511061795	CHAIN TENSIONER		02
004	0503010302	501019 SEAL RING		04
005	0501048790	AXLE WITH RING	160	02
006	0503010292	701164 6 X 40 SPRING PIN		10
007	0502012669	LEVER TENSIONER REAR		02
008	0511060396	DRIVE/DRIVEN SHAFT		04
009	0591015347	EXCHANGE MOTOR AXLE		01
010	0503012204	40-1 CHAIN X 82 LINK + RED		02
011	0591015346	LOWER MOVED AXLE		01
012	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	161	01
013	0501056443	GEAR HOUSING BEARING	162	04
014	0503030303	SUPPORT WASHER		03
015	0511059266	CLOSED BEARING	163	03
016	0521018630	1.4" X SQUARE 0.8" WASHER		05
017	0521059533	MOUNTED 21Z P 1/2 GEAR	165	01
018	0591015345	TOP SIDE AXLE		01
019	0501054655	CHAIN TENSIONER ASSY	166	01
020	0591015344	LOWER SIDE AXLE		01
021	0503010589	1/2" UNC SELF ADJUSTING NUT		04
022	0511067501	26Z GEAR		01
023	0511065209	20Z GEAR		02
024	0503012110	1/2" X 3-3/4" BOLT		04
025	0503017052	40-1 X CHAIN X 37 LINK MENDING		01
026	0503012389	1/2 BALL		04
027	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
028	0503010834	1/2 X 1 BOLT		04
029	0503010060	1/2 UNC G.5 ZN HEX NUT		04

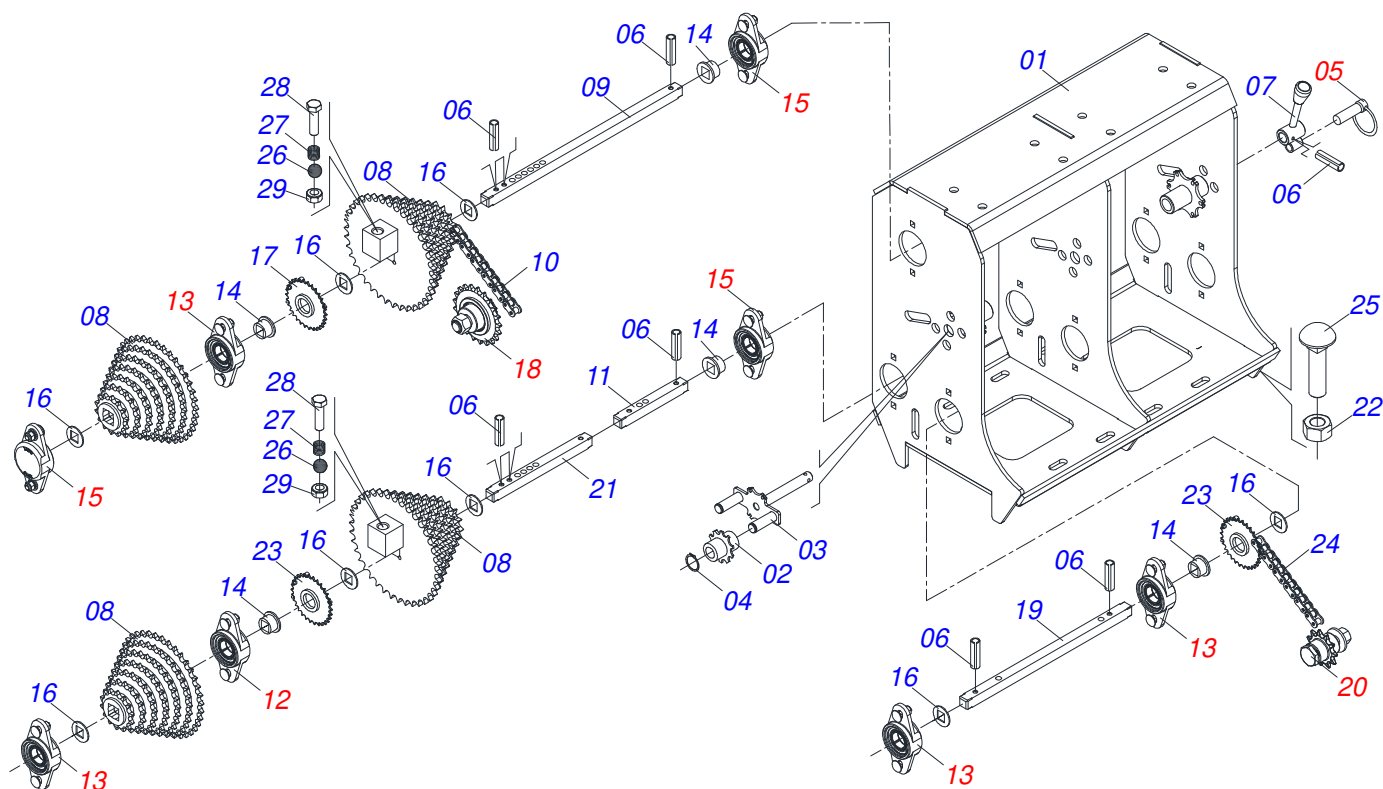


Item	Code	Description	See page	QT
001	0531062226	EXCHANGE BOX		01
002	0503031805	11Z 1/2" GEAR		04
003	0511061795	CHAIN TENSIONER		02
004	0503010302	501019 SEAL RING		04
005	0501048790	AXLE WITH RING	160	02
006	0503010292	701164 6 X 40 SPRING PIN		10
007	0502012669	LEVER TENSIONER REAR		02
008	0511060396	DRIVE/DRIVEN SHAFT		04
009	0591015347	EXCHANGE MOTOR AXLE		01
010	0503012204	40-1 CHAIN X 82 LINK + RED		02
011	0591015346	LOWER MOVED AXLE		01
012	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	161	01
013	0501056443	GEAR HOUSING BEARING	162	04
014	0503030303	SUPPORT WASHER		03
015	0511059266	CLOSED BEARING	163	03
016	0521018630	1.4" X SQUARE 0.8" WASHER		07
017	0511067501	26Z GEAR		01
018	0521059533	MOUNTED 21Z P 1/2 GEAR	165	01
019	0591015345	TOP SIDE AXLE		01
020	0501054655	CHAIN TENSIONER ASSY	166	01
021	0591015344	LOWER SIDE AXLE		01
022	0503010589	1/2" UNC SELF ADJUSTING NUT		04
023	0511065209	20Z GEAR		02
024	0503017052	40-1 X CHAIN X 37 LINK MENDING		01
025	0503012110	1/2" X 3-3/4" BOLT		04
026	0503012389	1/2 BALL		04
027	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
028	0503010834	1/2 X 1 BOLT		04
029	0503010060	1/2 UNC G.5 ZN HEX NUT		04

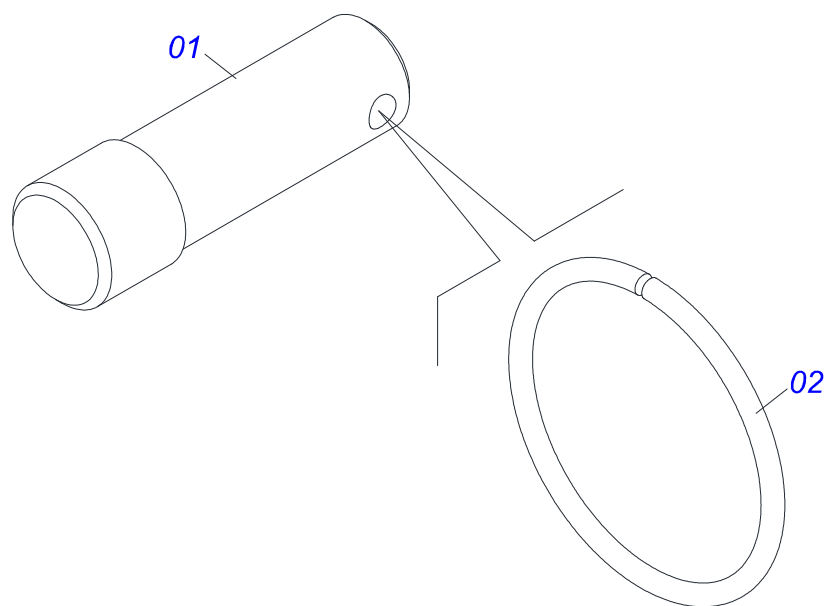


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

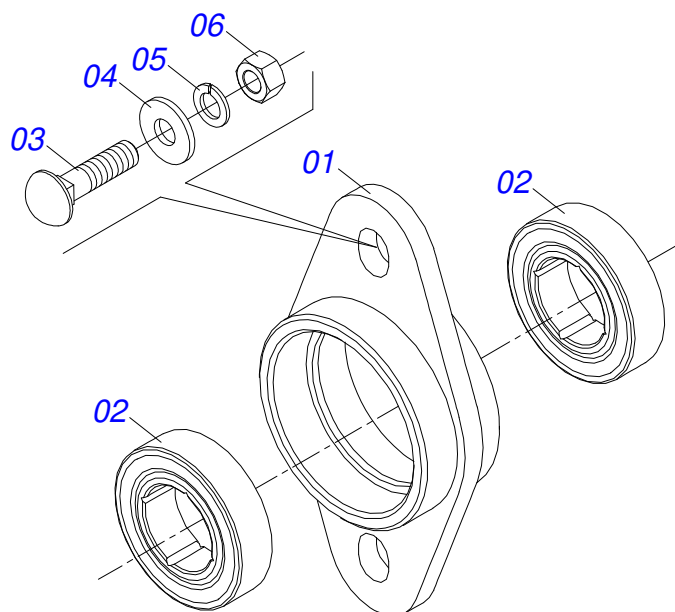


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

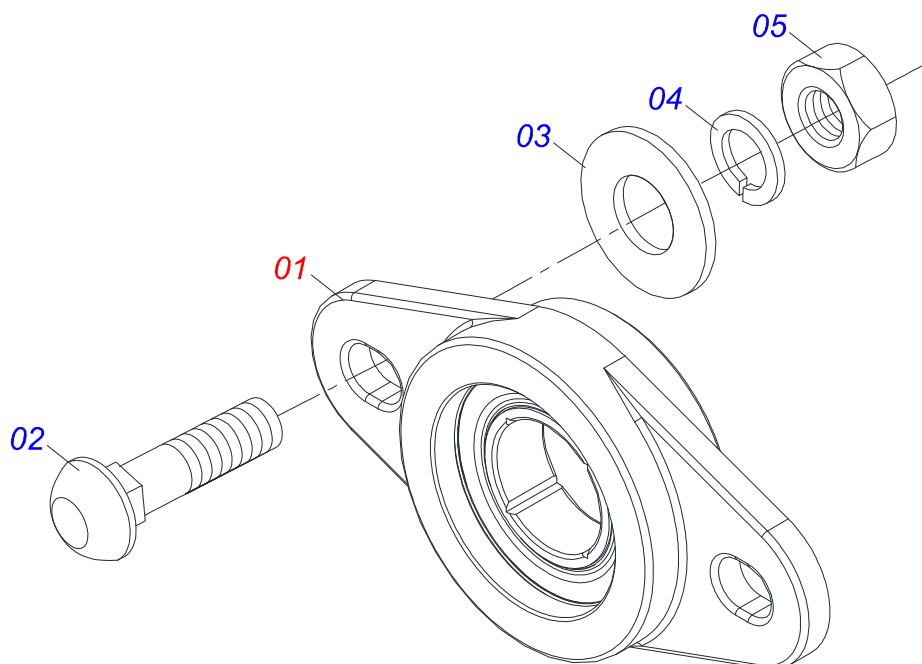


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLER	33	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

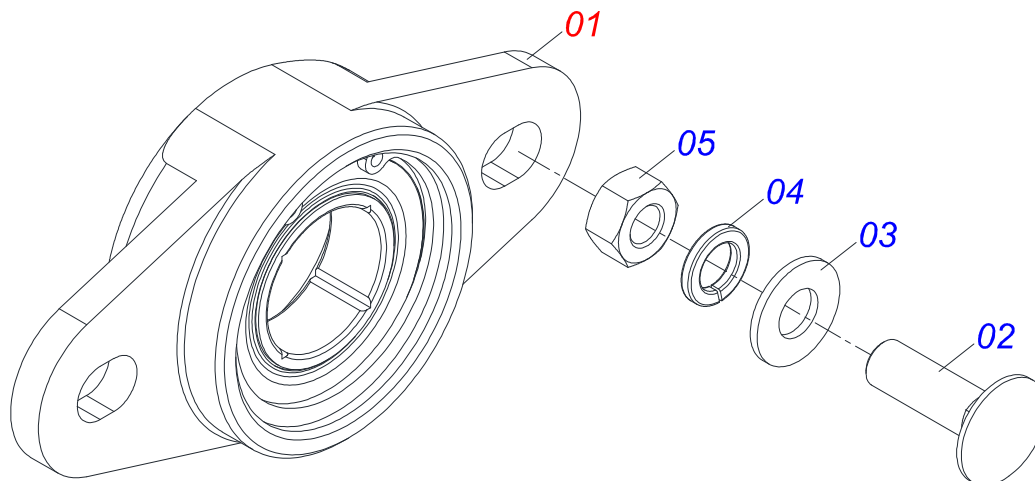


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	164	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

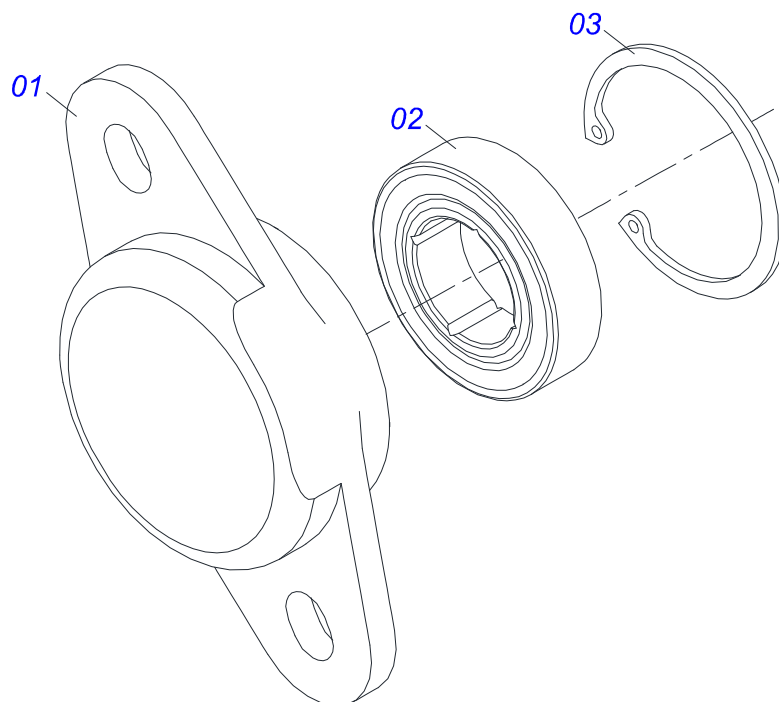


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

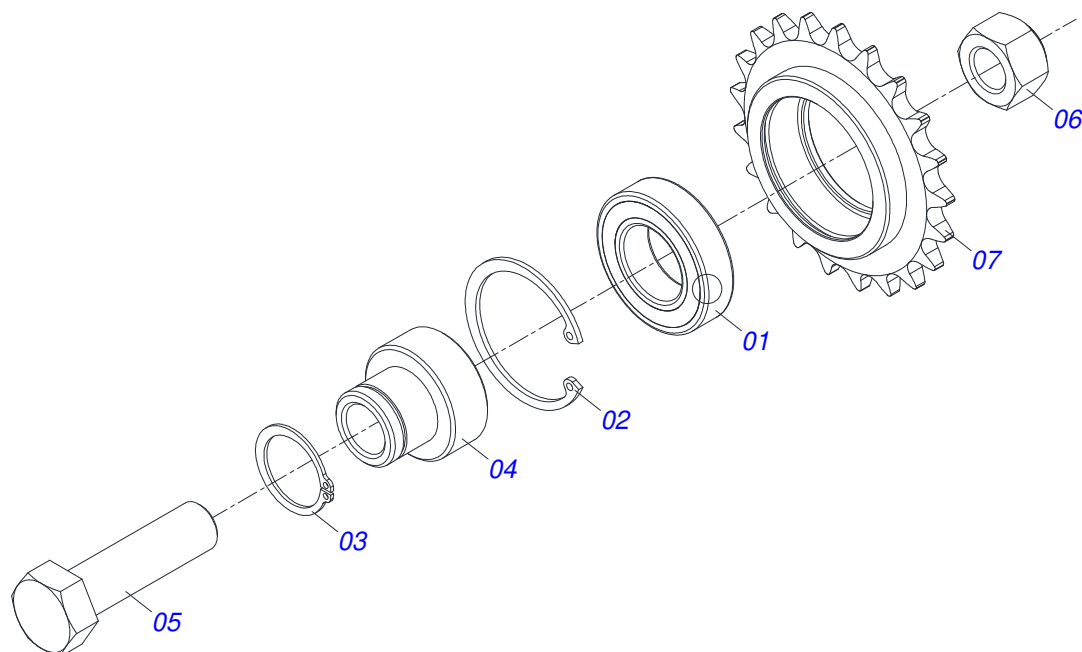


Item	Code	Description	See page	QT
01	0503011410	ROLLER BEARING		01
02	0503011105	SEAL RING		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0571019207	DEVIATION AXLE GEAR BOX		01
05	0503010899	5/8 UNC X 2.1/4 BOLT		01
06	0503012412	5/8 UNC SELF LOCKING NUT		01
07	0521069698	GEAR 21Z P 1/2		01

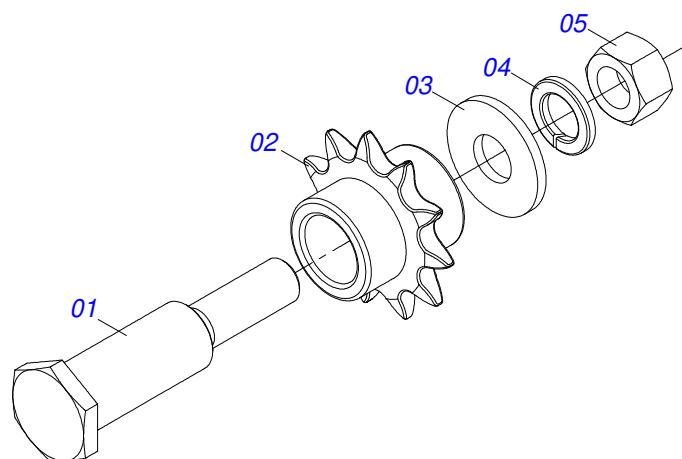


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

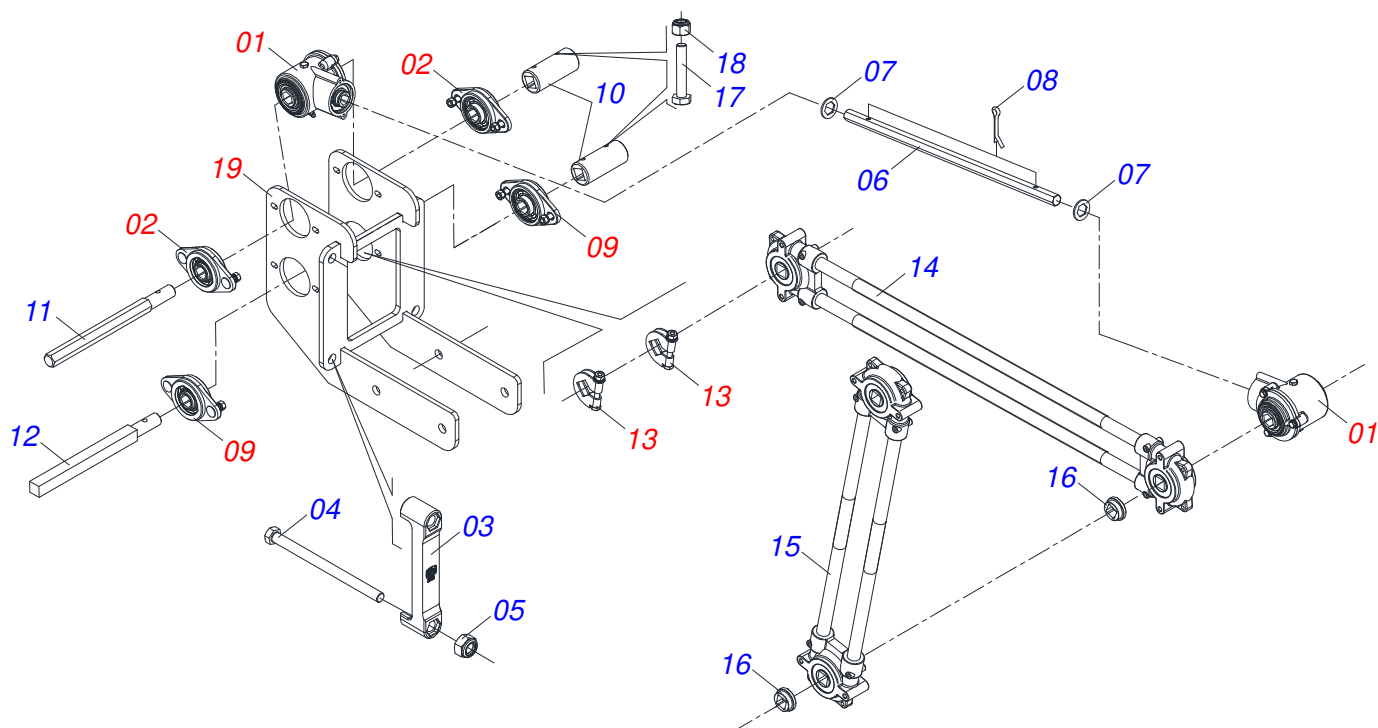


Item	Code	Description	See page	QT
01	0511057159	TRANSMISSION HOPPER SEED ROW	54	02
02	0501057684	SIDE BEARING FRONT SUPPORT SEED ROW	44	02
03	0502012768	LINE SUPPORT CLAMP		02
04	0503014636	5/8" UNC X 9 BOLT		04
05	0503013389	5/8" SELF LOCKING NUT		04
06	0591018103	HEX AXLE BODY SEED TRANSMISSION 5/8 X 565		01
07	0521011859	FLAT WASHER		02
08	0503010257	1/8" X 1" COTTERPIN		02
09	0521054282	BEARING	32	02
10	0591018038	DRAGGLE GLOVE		02
11	0591018102	HEX SHAFT 3/4 X 250		01
12	0591018101	SQUARE SHAFT 3/4 X 250 CENTRAL		01
13	0501053788	3/4 SQUARE AXLE FASTENER	35	02
14	0503063381	ENCAPSULATED CHAIN		01
15	0503063382	CENTRAL ENCAPSULATED CHAIN		01
16	0503030303	SUPPORT WASHER		04
17	0503010882	BOLT		04
18	0503013759	NUT		04
19	0531051861	BEARING/TRANSMISSION SUPPORT WITH LOCK	176	01

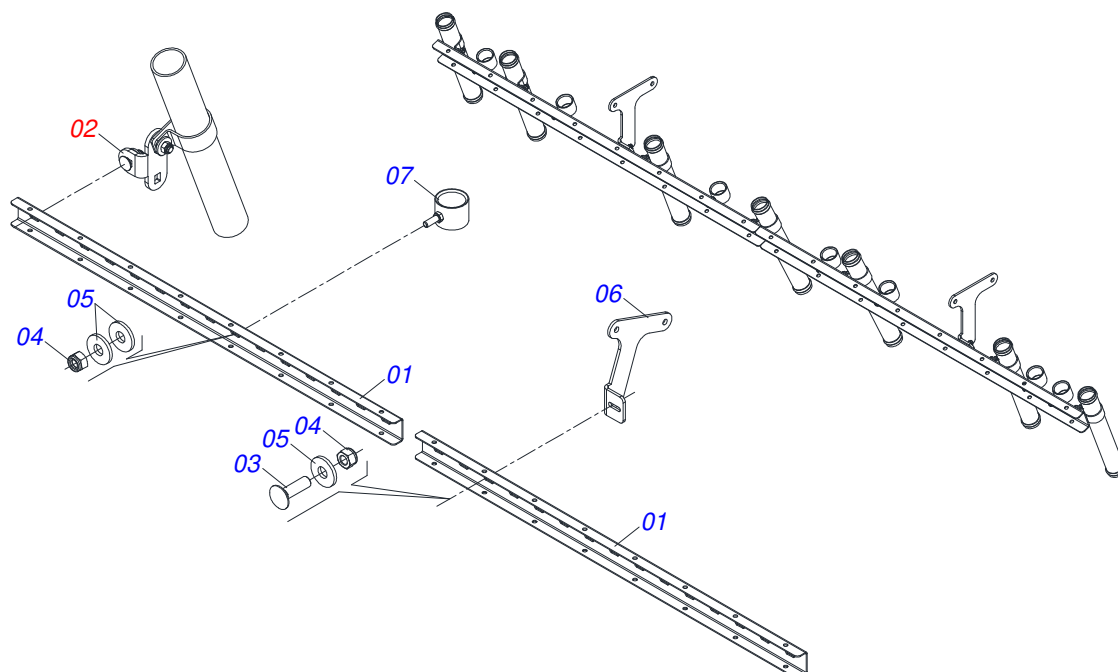


Item	Code	Description	See page	QT
01	0591017995	FERTILIZER CONDUCTOR GUTTER		02
02	0531051736	SHORT LINE FERTILIZER CONDUCTOR 170 ARTICULATOR		07
03	0501010942	3/8" X 1-1/4" BOLT		09
04	0503013357	3/8 SELF-ADJUSTING NUT		16
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		23
06	0591018014	LEFT SUPPORT		02
07	0531061465	GUIDE		07

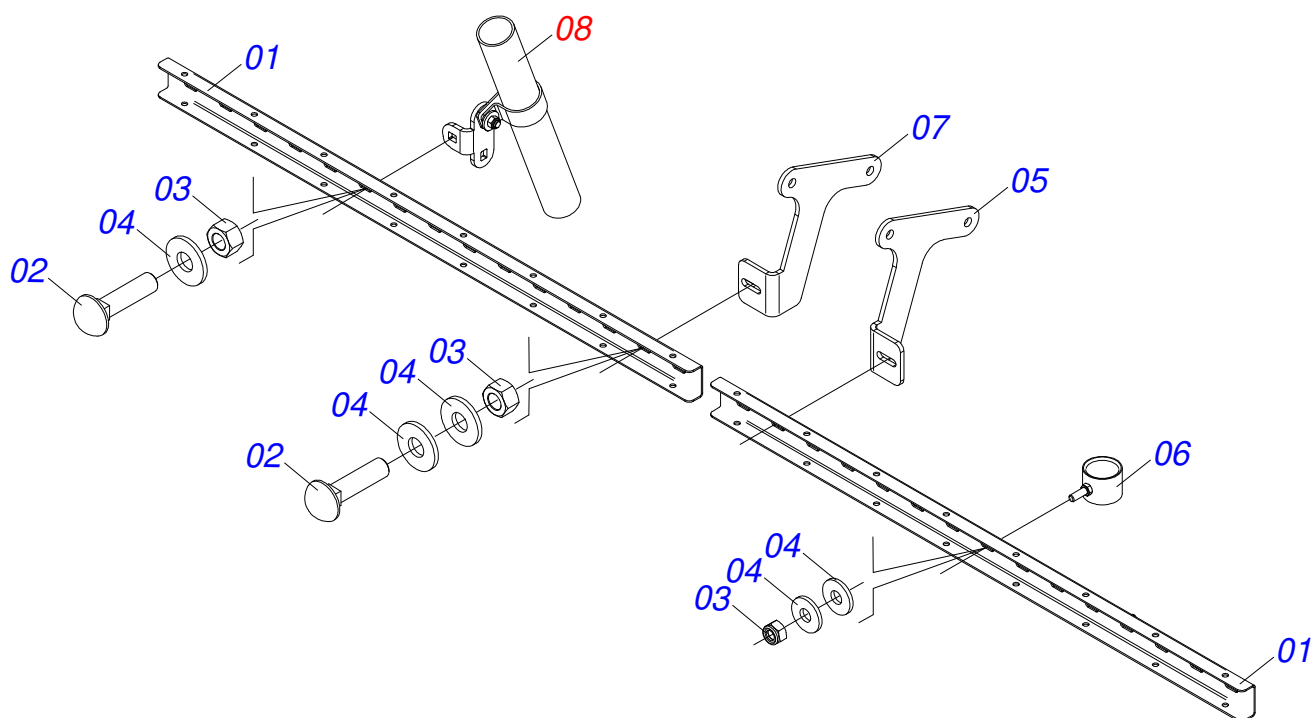


Item	Code	Description	See page	QT
01	0591017995	FERTILIZER CONDUCTOR GUTTER		02
02	0501010942	3/8" X 1-1/4" BOLT		02
03	0503013357	3/8 SELF-ADJUSTING NUT		08
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		14
05	0591018014	LEFT SUPPORT		01
06	0531061465	GUIDE		06
07	0591017994	SUPPORT RIGHT		01
08	0531051736	SHORT LINE FERTILIZER CONDUCTOR 170 ARTICULATOR		06

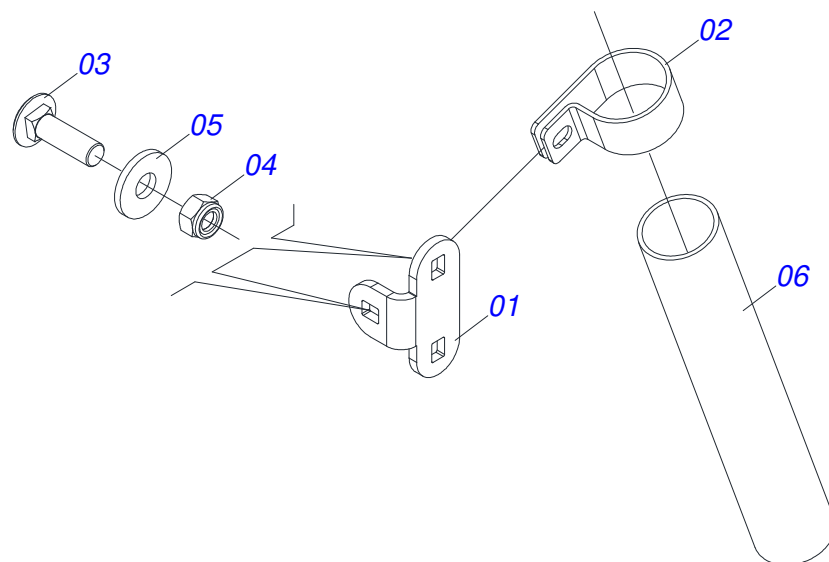


Item	Code	Description	See page	QT
01	0591019048	GLOVE BODY		01
02	0591015578	CLAMP		01
03	0501010942	3/8" X 1-1/4" BOLT		02
04	0503013357	3/8 SELF-ADJUSTING NUT		02
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
06	0591018876	SHORT FERTILIZER DISTRIBUTOR TUBE		01

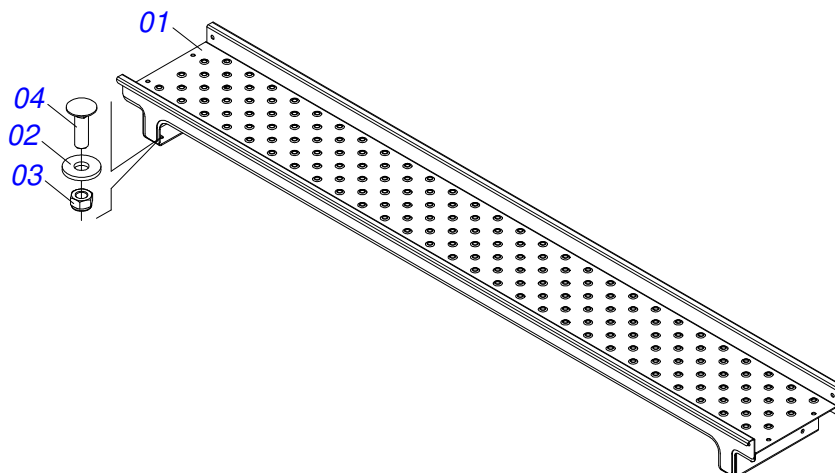

Item	Code	Description	See page	QT
01	0531061658	CENTRAL PLATFORM 2797		01
02	0501013519	FLAT WASHER		04
03	0503010589	1/2" UNC SELF ADJUSTING NUT		04
04	0503014378	1/2" X 1-1/2" BOLT		04

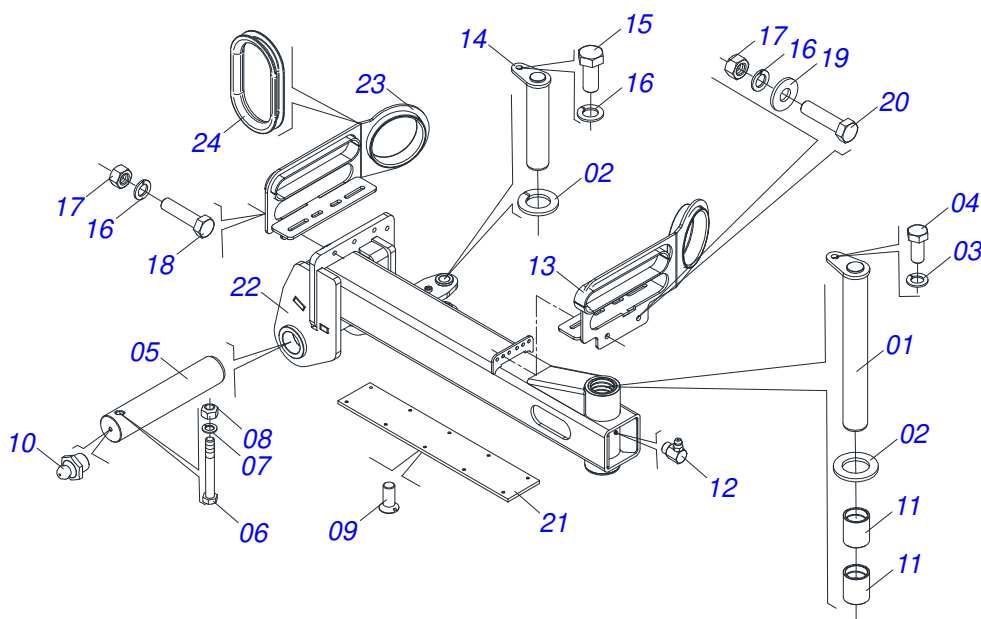


Item	Code	Description	See page	QT
01	0521063778	RELATION AVEC AXE VERTICAL LATCH	01	
02	0571011767	LISA WASHER 125 X 88 X 4.76	01	
03	0503010408	7/8" SPRING WASHER	01	
04	0503015322	BOLT 7/8	01	
05	0591012527	HORIZONTAL JOINT AXIS	01	
06	0503011198	C3/4" X 6" SCREW	01	
07	0503010023	3/4" SPRING WASHER	01	
08	0503010014	3/4" HEX NUT	01	
09	0503010814	5/16 BOLT	10	
10	0503010002	1800 GREASE FITTING	01	
11	0571011825	BUSHING	02	
12	0503010004	1890 GREASE FITTING	01	
13	0531062167	RIGHT HOSE SUPPORT	01	
14	0531062168	CYLINDER JOINT AXIS	01	
15	0503010834	1/2 X 1 BOLT	01	
16	0503010019	1/2" SPRING WASHER	05	
17	0503010060	1/2 UNC G.5 ZN HEX NUT	04	
18	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	02	
19	0501013519	FLAT WASHER	04	
20	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT	02	
21	0591012948	700 X 130 X 10 PLATE	01	
22	0531062196	LEFT ARTICULATION ARM	01	
23	0531062166	LEFT SUPPORT HOSES	01	
24	0503035505	HOSE PROTECTOR	01	

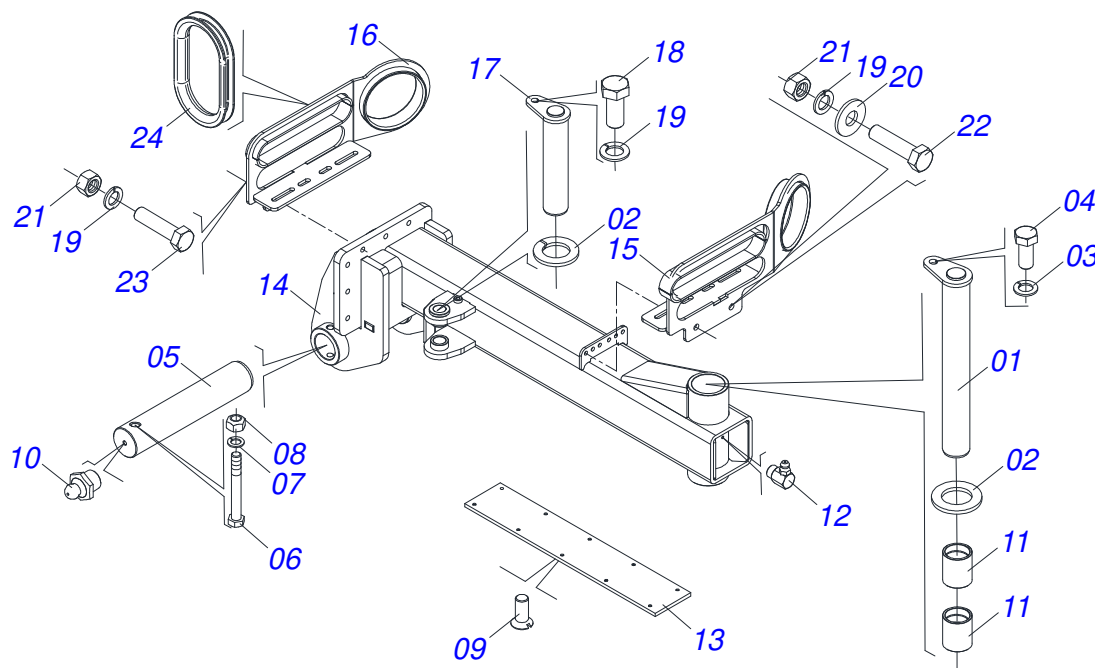


Item	Code	Description	See page	QT
01	0521063778	RELATION AVEC AXE VERTICAL LATCH		01
02	0571011767	LISA WASHER 125 X 88 X 4.76		01
03	0503010408	7/8" SPRING WASHER		01
04	0503015322	BOLT 7/8		01
05	0591012527	HORIZONTAL JOINT AXIS		01
06	0503011198	C3/4" X 6" SCREW		01
07	0503010023	3/4" SPRING WASHER		01
08	0503010014	3/4" HEX NUT		01
09	0503010814	5/16 BOLT		10
10	0503010002	1800 GREASE FITTING		01
11	0571011825	BUSHING		02
12	0503010004	1890 GREASE FITTING		01
13	0591012948	700 X 130 X 10 PLATE		01
14	0531062149	RIGHT ARTICULATION ARM		01
15	0531062167	RIGHT HOSE SUPPORT		01
16	0531062166	LEFT SUPPORT HOSES		01
17	0531062168	CYLINDER JOINT AXIS		01
18	0503010834	1/2 X 1 BOLT		01
19	0503010019	1/2" SPRING WASHER		05
20	0501013519	FLAT WASHER		04
21	0503010060	1/2 UNC G.5 ZN HEX NUT		04
22	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
23	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
24	0503035505	HOSE PROTECTOR		01

HITCH ASSY


0531051056

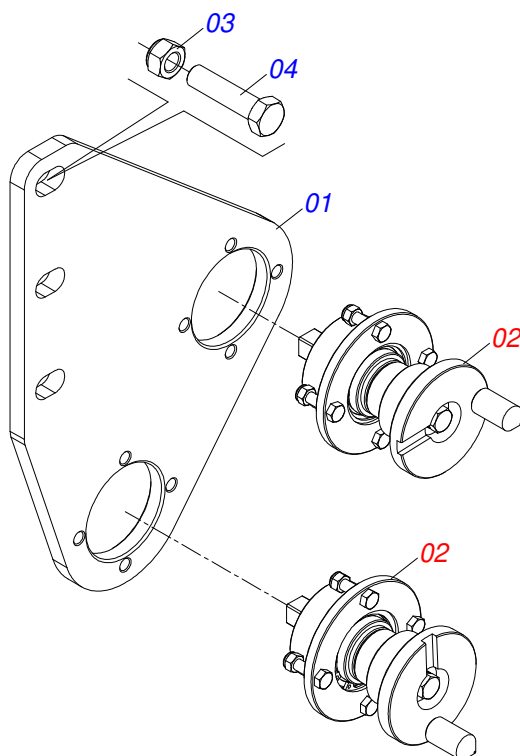

Item	Code	Description	See page	QT
01	0591018116	BODY FIXING HITCH TRANSMISSION		01
02	0531051057	HITCH MOUNTED TRANSMISSION	178	02
03	0503013389	5/8" SELF LOCKING NUT		03
04	0503010233	5/8" X 2-1/2" BOLT		03

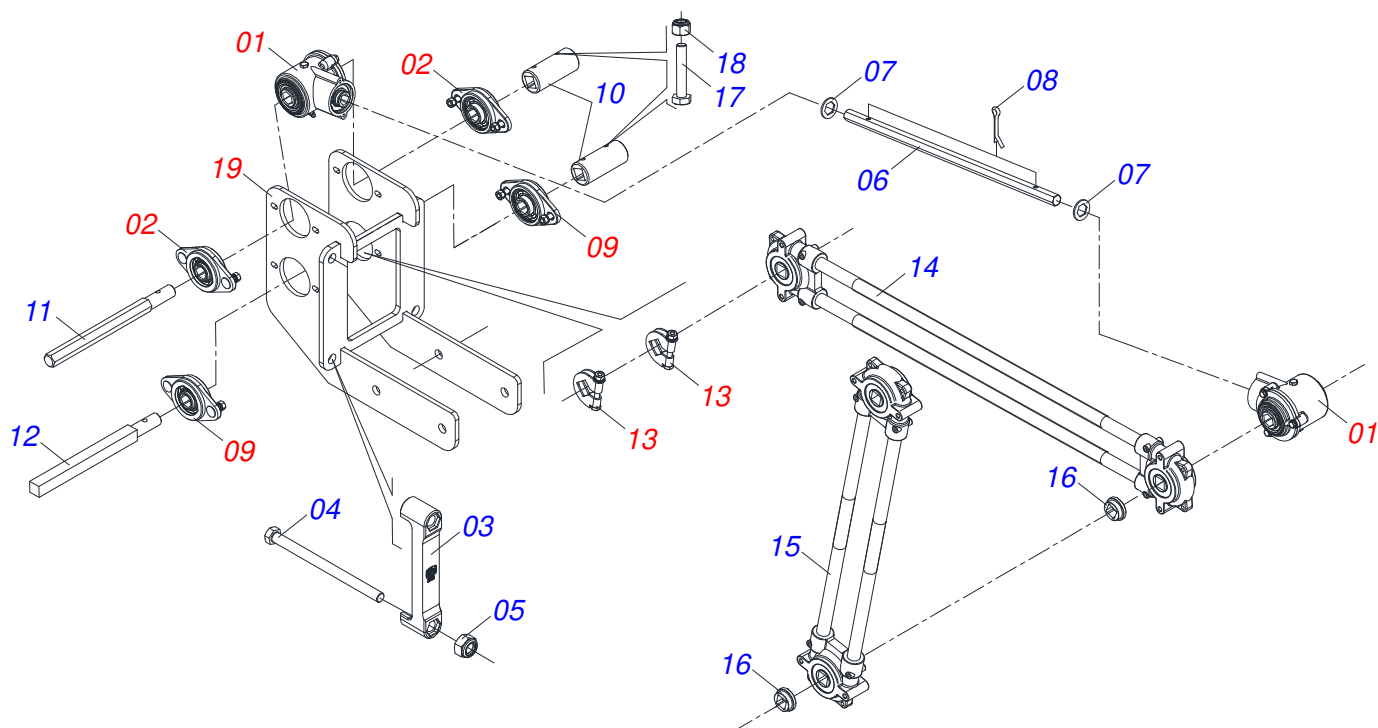


Item	Code	Description	See page	QT
01	0511057159	TRANSMISSION HOPPER SEED ROW	54	02
02	0501057684	SIDE BEARING FRONT SUPPORT SEED ROW	44	02
03	0502012768	LINE SUPPORT CLAMP		02
04	0503014636	5/8" UNC X 9 BOLT		04
05	0503013389	5/8" SELF LOCKING NUT		04
06	0591018103	HEX AXLE BODY SEED TRANSMISSION 5/8 X 565		01
07	0521011859	FLAT WASHER		02
08	0503010257	1/8" X 1" COTTERPIN		02
09	0521054282	BEARING	32	02
10	0591018038	DRAGGLE GLOVE		02
11	0591018102	HEX SHAFT 3/4 X 250		01
12	0591018101	SQUARE SHAFT 3/4 X 250 CENTRAL		01
13	0501053788	3/4 SQUARE AXLE FASTENER	35	02
14	0503063381	ENCAPSULATED CHAIN		01
15	0503063382	CENTRAL ENCAPSULATED CHAIN		01
16	0503030303	SUPPORT WASHER		04
17	0503010882	BOLT		04
18	0503013759	NUT		04
19	0531051861	BEARING/TRANSMISSION SUPPORT WITH LOCK	176	01

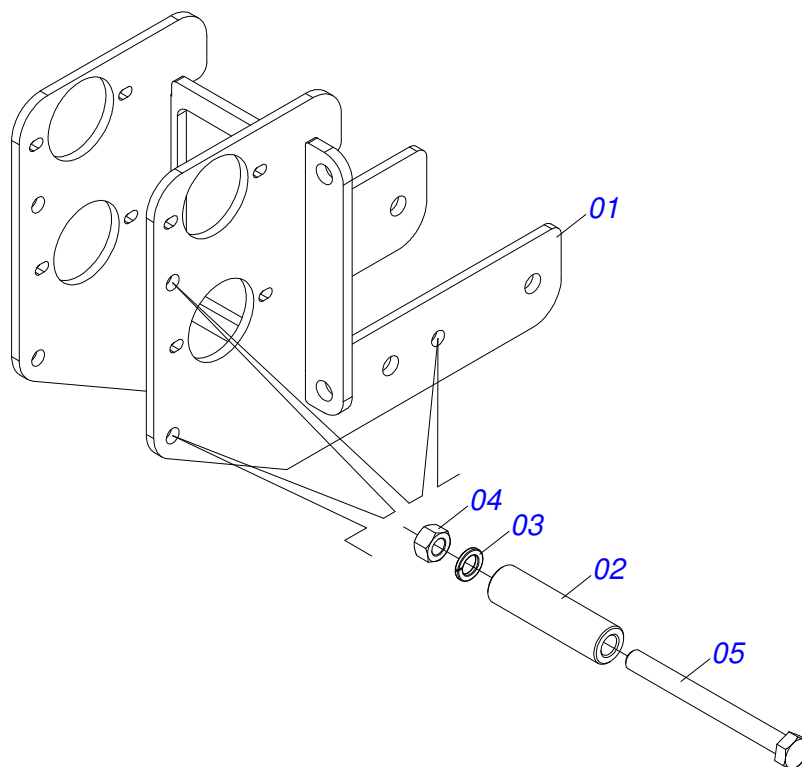


Item	Code	Description	See page	QT
01	0531062220	BEARING SUPPORT / TRANSMISSION		01
02	0591019298	LOCK GLOVE 13,5 X 25,40 X 134		03
03	0503010019	1/2" SPRING WASHER		03
04	0503010060	1/2 UNC G.5 ZN HEX NUT		03
05	0503010964	BOLT		03

LEFT HITCH ASSEMBLY


0531051062

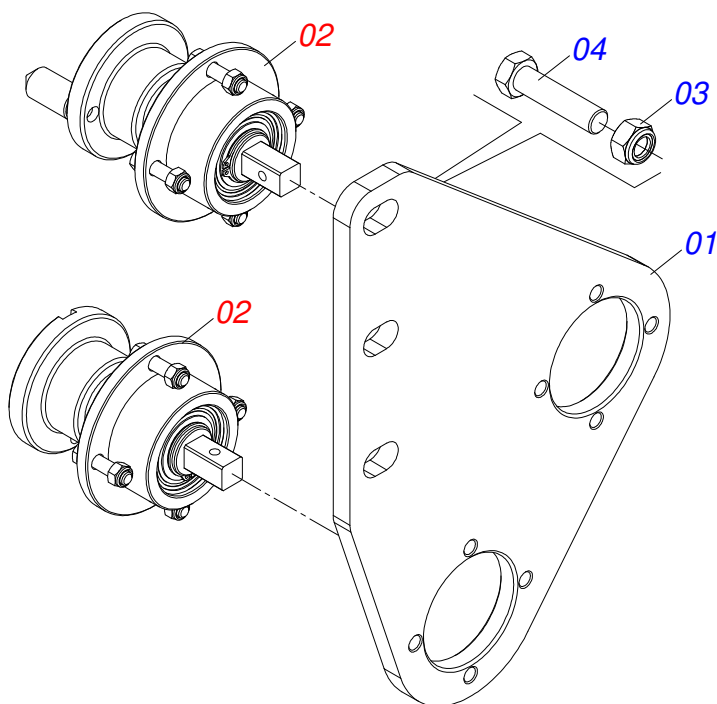


Item	Code	Description	See page	QT
01	0591018116	BODY FIXING HITCH TRANSMISSION		01
02	0531051057	HITCH MOUNTED TRANSMISSION	178	02
03	0503013389	5/8" SELF LOCKING NUT		03
04	0503010233	5/8" X 2-1/2" BOLT		03

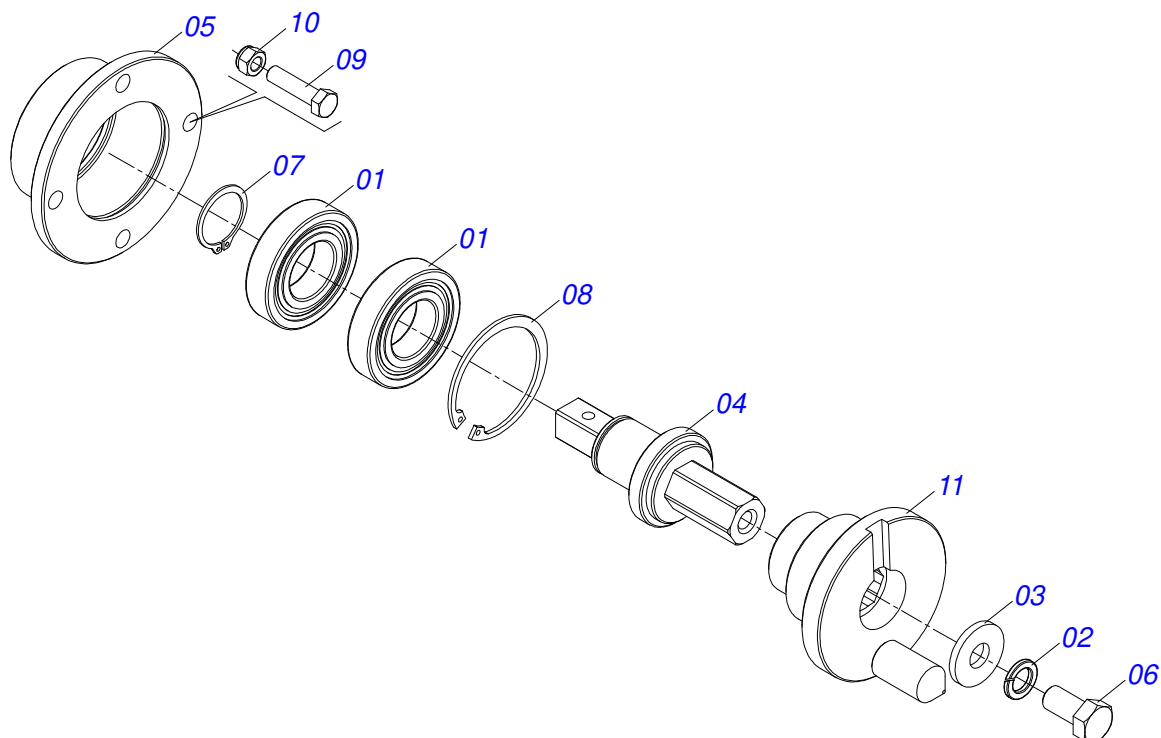


Item	Code	Description	See page	QT
01	0503011081	6207 2RS BEARING		02
02	0503010019	1/2" SPRING WASHER		01
03	0591018113	WASHER SUPPORT AXLE 13.50 X 34 X 4.00		01
04	0591018115	SMALLER TRANSMISSION AXIS		01
05	0591018034	SHAFT BEARING GUIDE HITCH		01
06	0503012556	1/2" X 1" BOLT		01
07	0503010845	501035 CLAMPING RING (FOR AXLE)		01
08	0503010370	502072 CLAMPING RING (FOR AXLE)		01
09	0503010849	3/8" X 1-1/2" BOLT		04
10	0503013357	3/8 SELF-ADJUSTING NUT		04
11	0531062225	TRANSMISSION COUPLING WITH POINTER		01

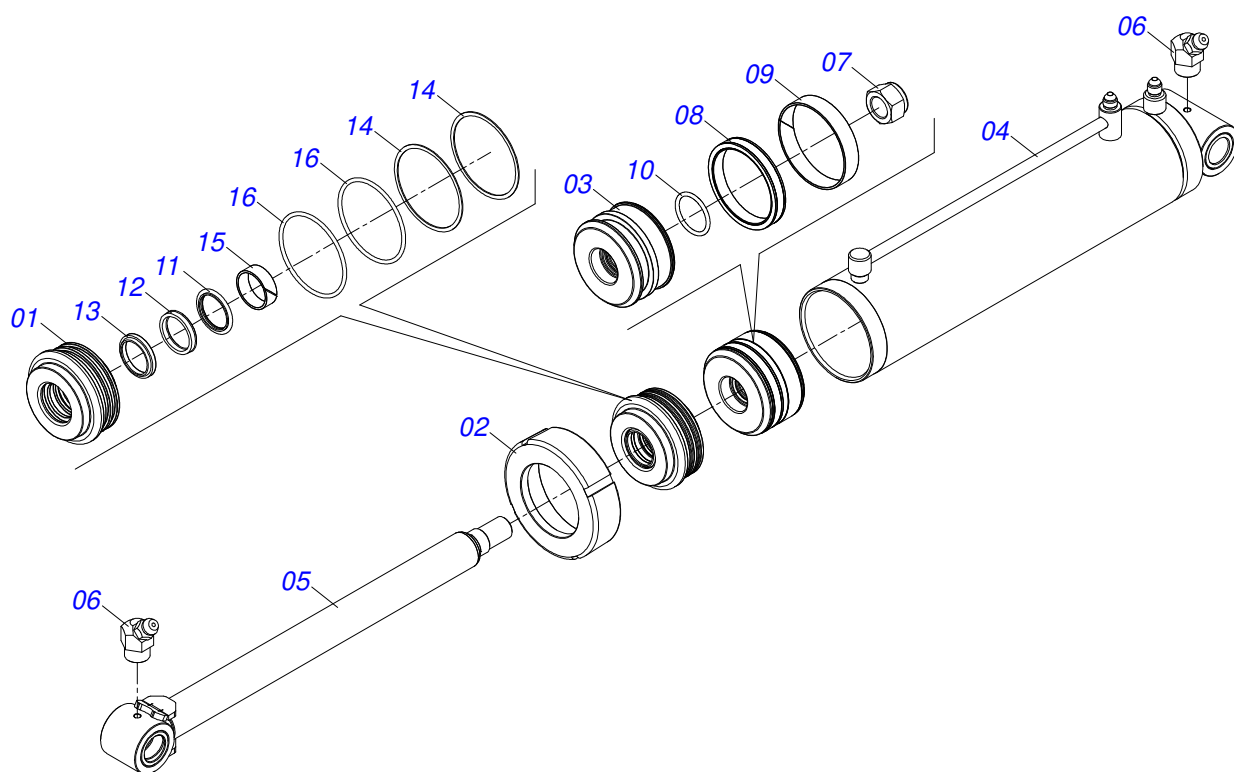


Item	Code	Description	See page	QT
01	0581010353	RING SUPPORT		01
02	0502010382	5" END CAP		01
03	0581013698	PISTON		01
04	0531062199	CASE 127 X 662		01
05	0531062198	EXTENSOR 50,80 X 692		01
06	0503010003	1845 GREASE FITTING		02
07	0503010817	1.1/4" SELF LOCKING NUT		01
08	0503018439	WIPER SEAL		01
09	0503018150	RING GUIDE		01
10	0503010173	2-220 N 3006-9B O'RING		01
11	0503018024	RING BS		01
12	0503018026	1870-2000-375 B GASKET		01
13	0503010039	D-2000 SCRAPER RING		01
14	0503018152	O'RING		02
15	0503018025	RING GUIDE		01
16	0503011453	O'RING		02

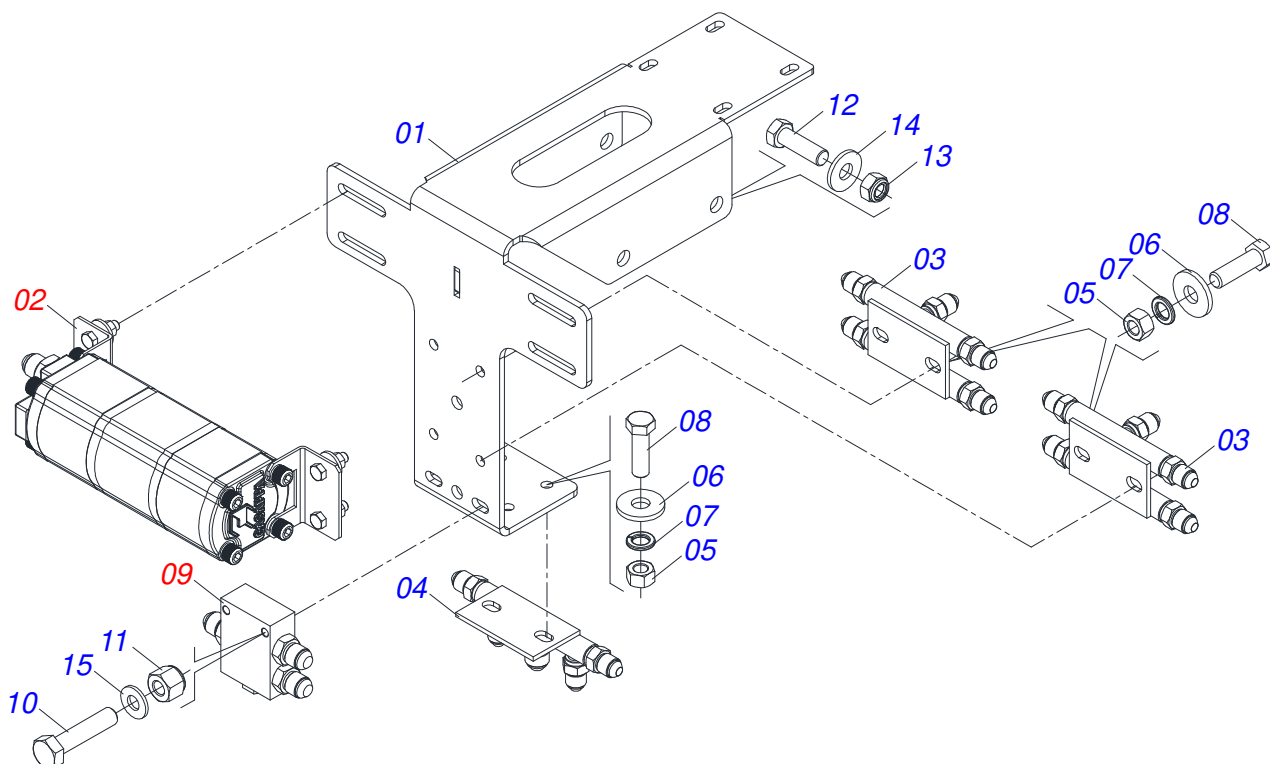


Item	Code	Description	See page	QT
01	0531062350	VALVE SUPPORT		01
02	0521059704	CASAPPA TRIPLE VALVE WITH FIXING NIPLES	181	01
03	0501068706	DOUBLE CONNECTION		02
04	0531062352	SIMPLE OIL DISTRIBUTOR		01
05	0503010026	3/8" NUT		06
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
07	0503010025	3/8 SPRING WASHER		06
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		06
09	0501054694	FLOW DIVIDING VALVE ASSY	182	01
10	0503010882	BOLT		02
11	0503013759	NUT		02
12	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		04
13	0503013389	5/8" SELF LOCKING NUT		04
14	0501012140	FLAT WASHER		04
15	0511017303	FLAT WASHER		02

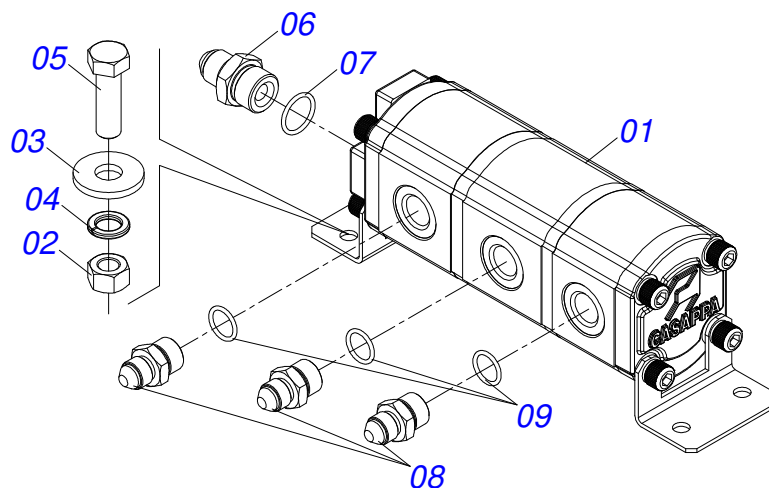


Item	Code	Description	See page	QT
01	0503019571	DIVIDER VALVE TRI-DIREC PLD20 CASAPPA BRP00095		01
02	0503010026	3/8" NUT		04
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
04	0503010025	3/8 SPRING WASHER		04
05	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
06	0511018014	7/8"NF X 1.1/16 UN NIPPLE		01
07	0503011109	2-119 N 3006-9B O'RING		01
08	0511010111	7/8" NIPPLE		03
09	0503010045	O'RING		03

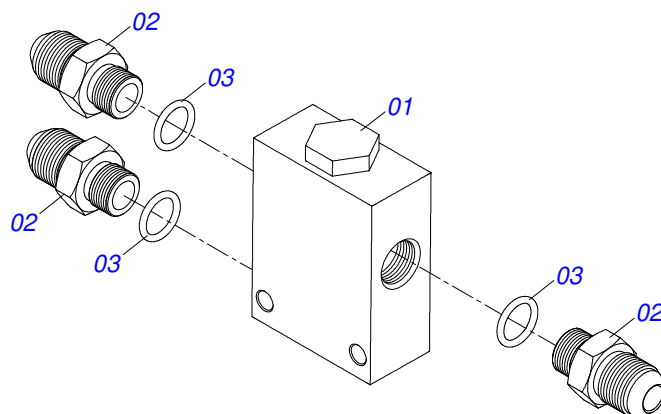


Item	Code	Description	See page	QT
01	0503012481	FLOW DIVIDING VALVE		01
02	0503030923	3/4" UNF X 13/16UN OFS X 40 NIPPLE		03
03	0503010190	2-114 N 3006-9B O'RING		03

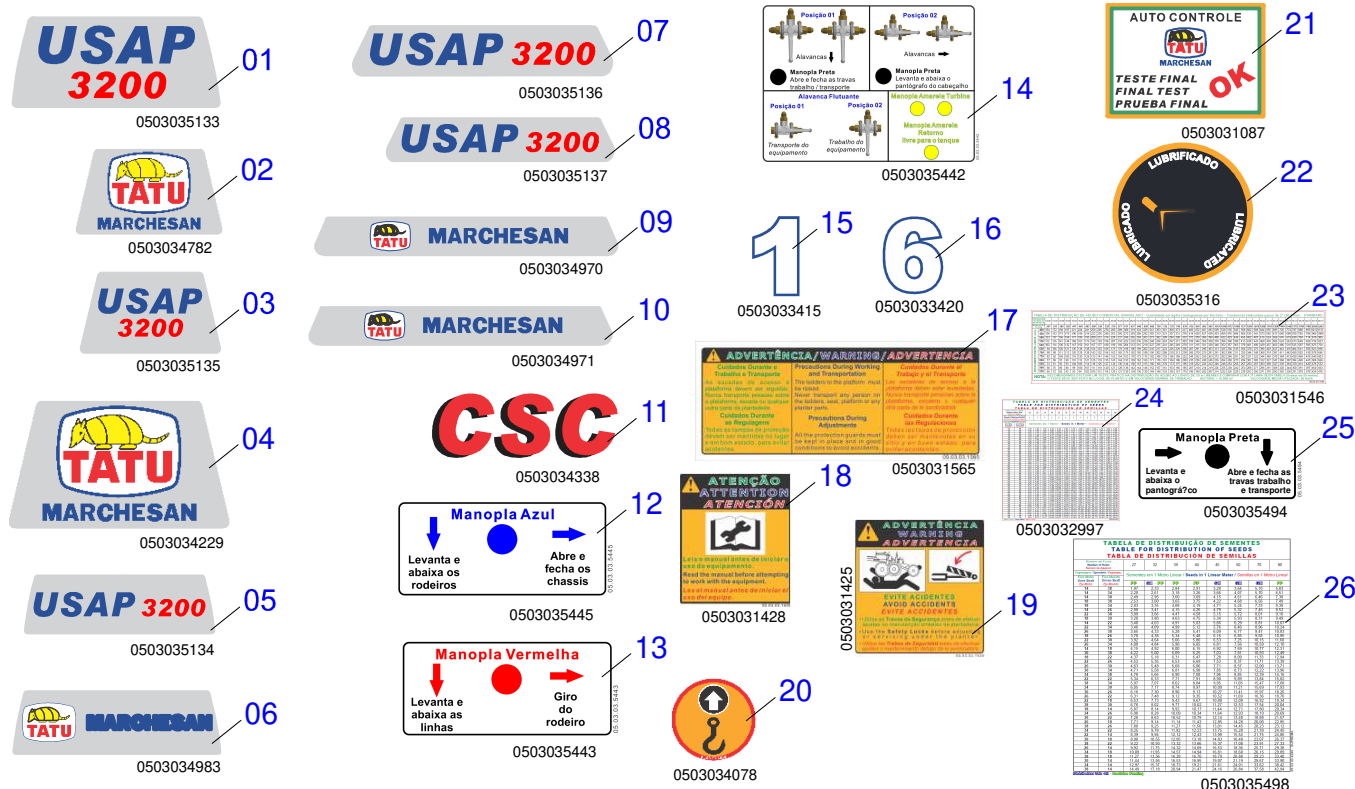


Item	Code	Description	See page	QT
01	0503035133	ADHESIVE LABEL USAP 3200 (192 X 437)		08
02	0503034782	LABEL ADHESIVE LOGO SMALLER TATU (03 MOUTHS)		08
03	0503035135	ADHESIVE LABEL USAP 3200 (185 X 320)		04
04	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 NOZZLES)		04
05	0503035134	ADHESIVE LABEL USAP 3200 (190 X 613)		02
06	0503034983	LOGO TATU MARCHESAN ADHESIVE LABEL 190 X 613		08
07	0503035136	ADHESIVE LABEL USAP 3200 (170 X 820)		03
08	0503035137	ADHESIVE LABEL USAP 3200 (165 X 850)		03
09	0503034970	LOGO TATU MARCHESAN (CSC) 155 X 1120		03
10	0503034971	ADHESIVE LABEL LOGO TATU MARCHESAN (CSC) 150 X 1130		03
11	0503034338	ADHESIVE LABEL		02
12	0503035445	ADHESIVE LABEL LEVER BLUE HANDLE		01
13	0503035443	ADHESIVE LABEL LEVER RED HANDLE		01
14	0503035442	ADHESIVE LABEL FLOATING LEVER		01
15	0503033415	ADHESIVE LABEL		02
16	0503033420	ADHESIVE LABEL 6 NUMBER FOR PLANTING		02
17	0503031565	ADHESIVE LABEL CARE		02
18	0503031428	READ MANUAL DECAL		01
19	0503031425	ADHESIVE LABEL ATTENTION		02
20	0503034078	LIFTING POINTS DECAL		02
21	0503031087	ADHESIVE LABEL		01
22	0503035316	LUBRICATED POINTS ADHESIVE LABEL		04
23	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
24	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
25	0503035494	ADHESIVE LABEL LEVER BLACK HANDLE		01
26	0503035498	ADHESIVE LABEL		01

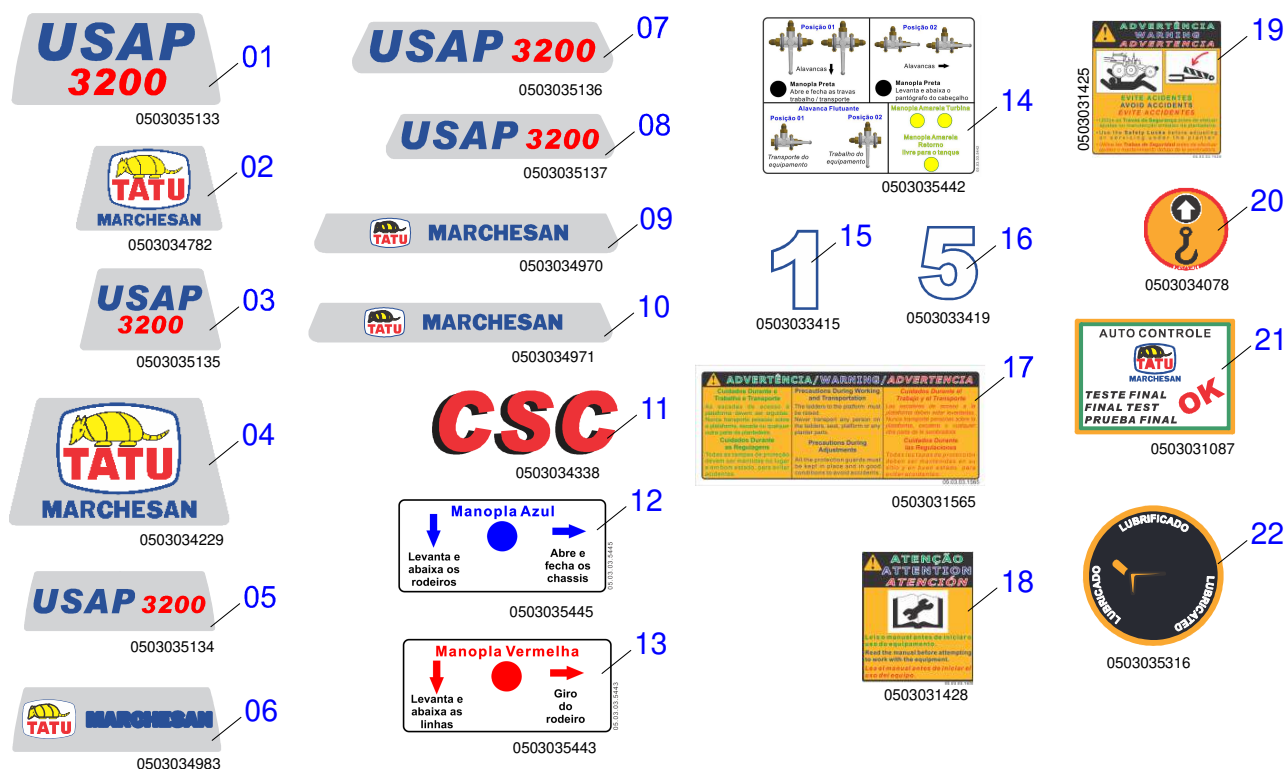


Item	Code	Description	See page	QT
01	0503035133	ADHESIVE LABEL USAP 3200 (192 X 437)		08
02	0503034782	LABEL ADHESIVE LOGO SMALLER TATU (03 MOUTHS)		08
03	0503035135	ADHESIVE LABEL USAP 3200 (185 X 320)		04
04	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 NOZZLES)		04
05	0503035134	ADHESIVE LABEL USAP 3200 (190 X 613)		02
06	0503034983	LOGO TATU MARCHESAN ADHESIVE LABEL 190 X 613		08
07	0503035136	ADHESIVE LABEL USAP 3200 (170 X 820)		03
08	0503035137	ADHESIVE LABEL USAP 3200 (165 X 850)		03
09	0503034970	LOGO TATU MARCHESAN (CSC) 155 X 1120		03
10	0503034971	ADHESIVE LABEL LOGO TATU MARCHESAN (CSC) 150 X 1130		03
11	0503034338	ADHESIVE LABEL		02
12	0503035445	ADHESIVE LABEL LEVER BLUE HANDLE		01
13	0503035443	ADHESIVE LABEL LEVER RED HANDLE		01
14	0503035442	ADHESIVE LABEL FLOATING LEVER		01
15	0503033415	ADHESIVE LABEL		02
16	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
17	0503031565	ADHESIVE LABEL CARE		02
18	0503031428	READ MANUAL DECAL		01
19	0503031425	ADHESIVE LABEL ATTENTION		02
20	0503034078	LIFTING POINTS DECAL		02
21	0503031087	ADHESIVE LABEL		01
22	0503035316	LUBRICATED POINTS ADHESIVE LABEL		04

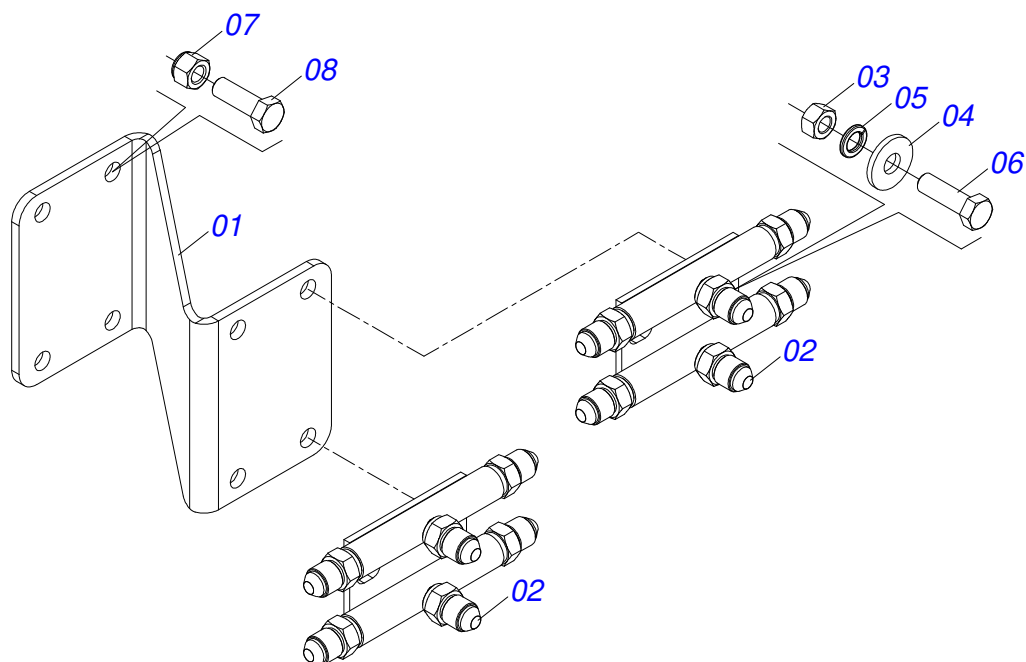


Item	Code	Description	See page	QT
01	0591018537	DOUBLE CONNECTION SUPPORT		01
02	0501068706	DOUBLE CONNECTION		02
03	0503010026	3/8" NUT		04
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0503010025	3/8 SPRING WASHER		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0503010589	1/2" UNC SELF ADJUSTING NUT		02
08	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02

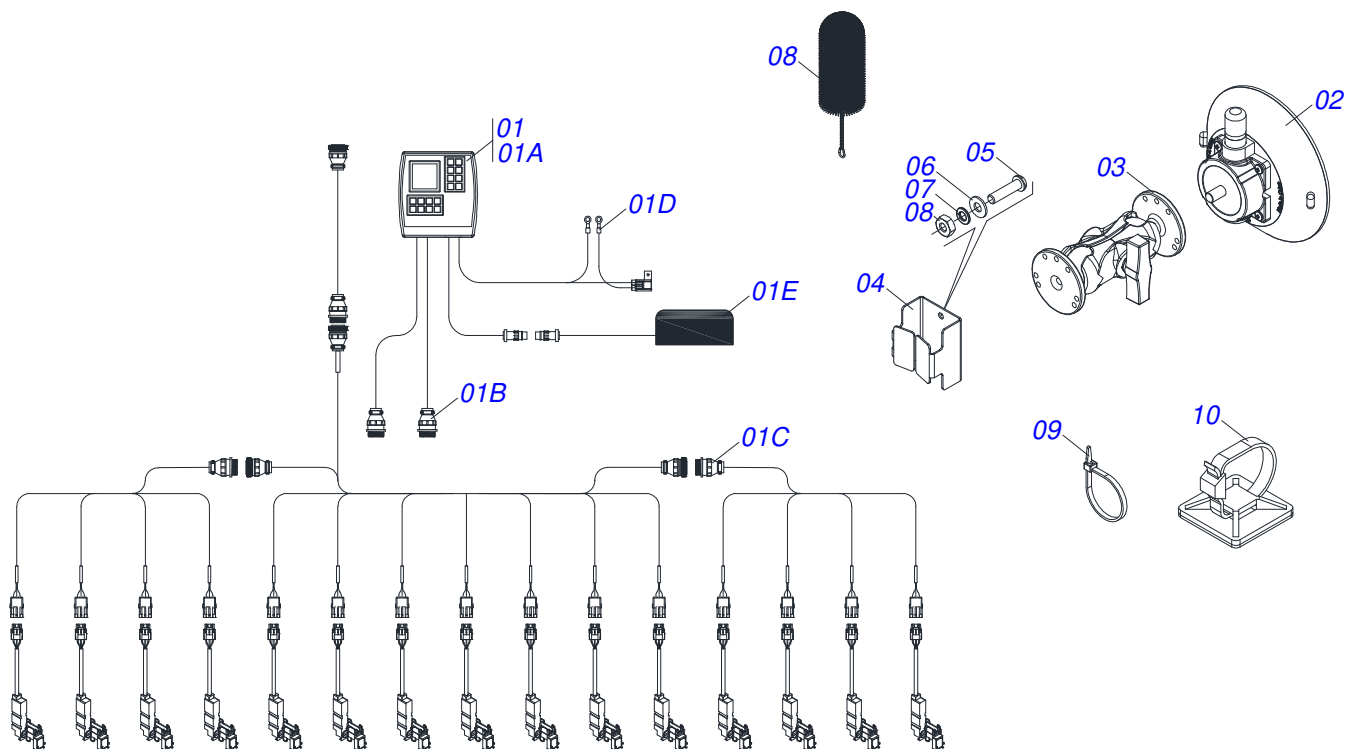


Item	Code	Description	See page	QT
001	0503063201	USAP 3200 MONITORING KIT 15LPM400 18X18-45 / 50 010072825		01
001A	0503017602	MONITOR PLANT PM400		01
001B	0503017578	SINGLE CABLE PM400		01
001C	0503063202	MONITOR CABLE PM400 15L USAP 18X18 020012635		01
001D	0503017443	ANTENNA GPS PM 400		01
001E	0503015218	SENSOR FOTOELE PM 400		15
002	0503016234	TRIMBLE FIXING WINDOW		01
003	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
004	0571012196	MOUNTING BRACKET PM 400		01
005	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
006	0503010669	FLAT WASHER		02
007	0503010668	3/16" SPRING WASHER		02
008	0503010667	3/16" NUT		02
009	0503013100	NYLON CLAMP		95
010	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		300

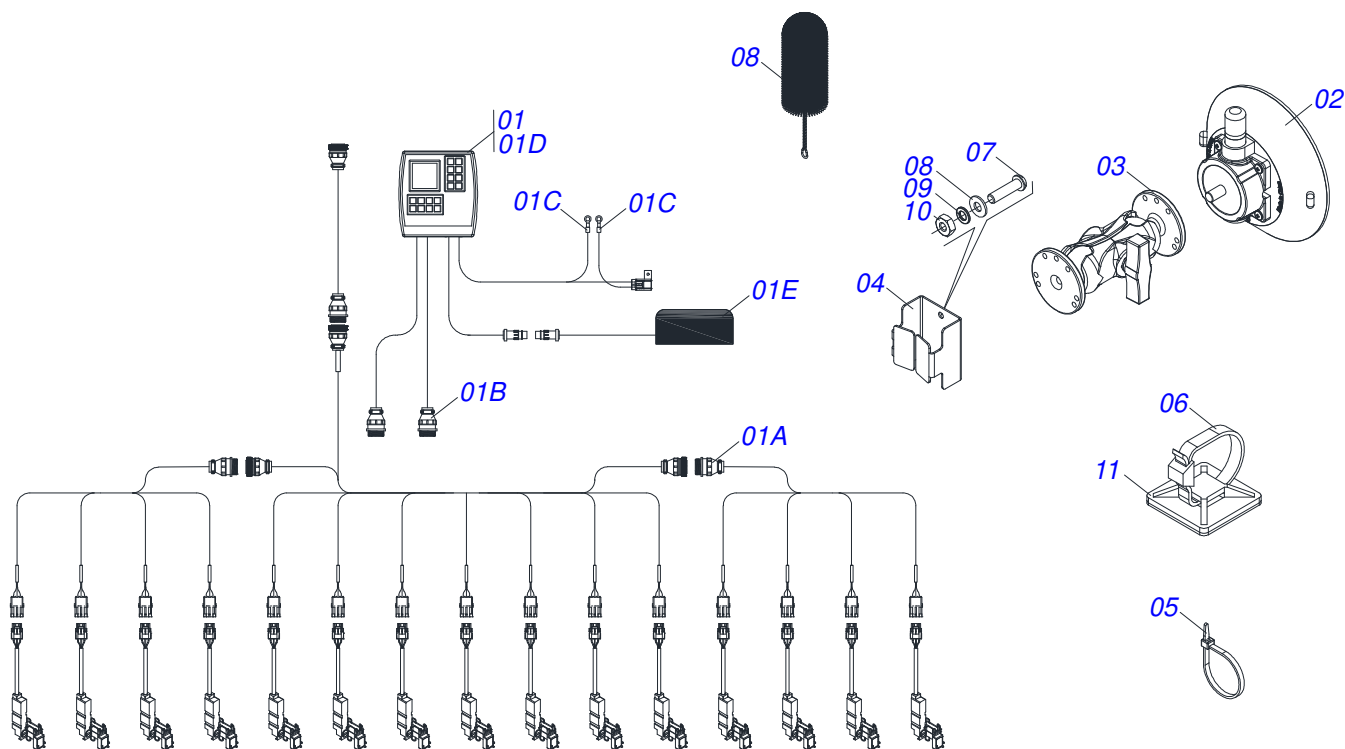

Item	Code	Description	See page	QT
01	0503063251	16-LINE MONITORING KIT		01
01A	0503063252	SIMPLE CABLE MONITORING 16 LINES		01
01B	0503016380	SINGLE CABLE 12 METERS		01
01C	0503019100	SENSOR		16
01D	0503017602	MONITOR PLANT PM400		01
01E	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		130
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		240
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02
11	0503017702	FIXER		50

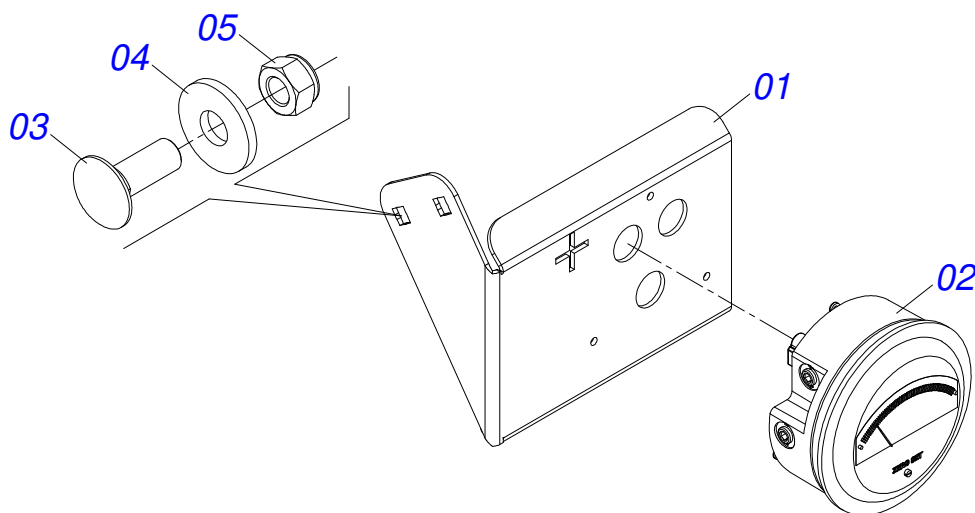


Item	Code	Description	See page	QT
01	0591016660	UNIQUE VACUOMETER SUPPORT		01
02	0503013584	VACUUM GAUGE		01
03	0501011643	3/8 X 1" BOLT		02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
05	0503013357	3/8 SELF-ADJUSTING NUT		02

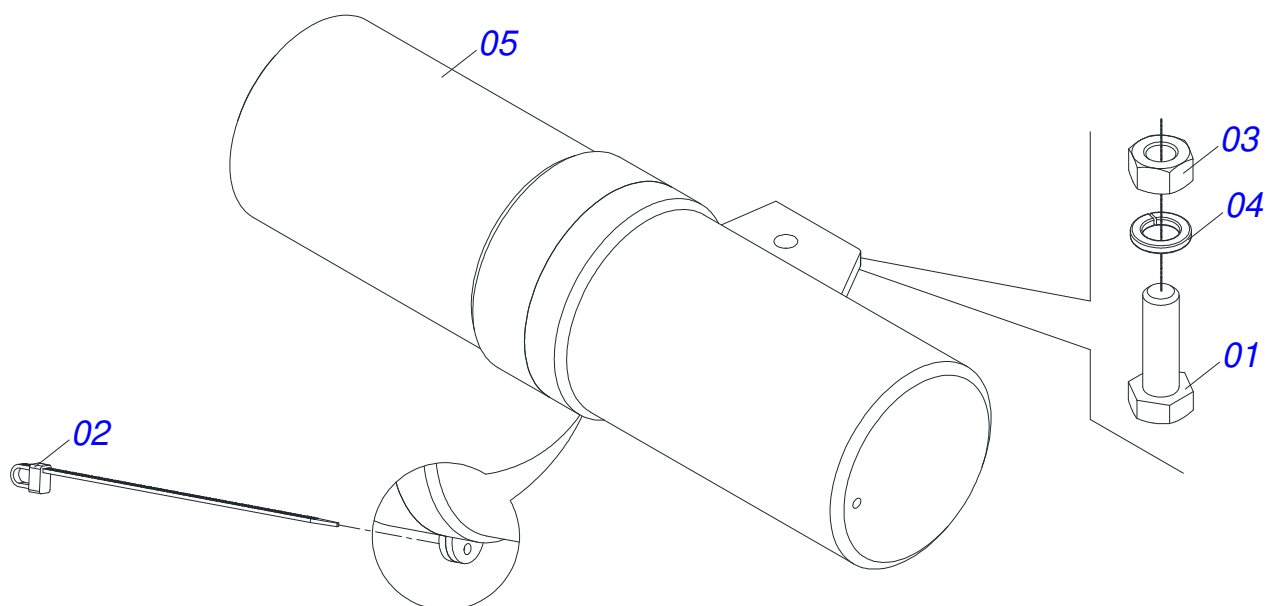


Item	Code	Description	See page	QT
01	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
02	0503010267	NYLON CLAMP		01
03	0503010337	5/16" NUT		01
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
05	0503060100	INSTRUCTIONS MANUAL CANISTER		01
06	0511034152	BAG WITH INSTRUCTION MANUAL		01

LEFT ARM MONO WHEEL WHEEL


0531050896

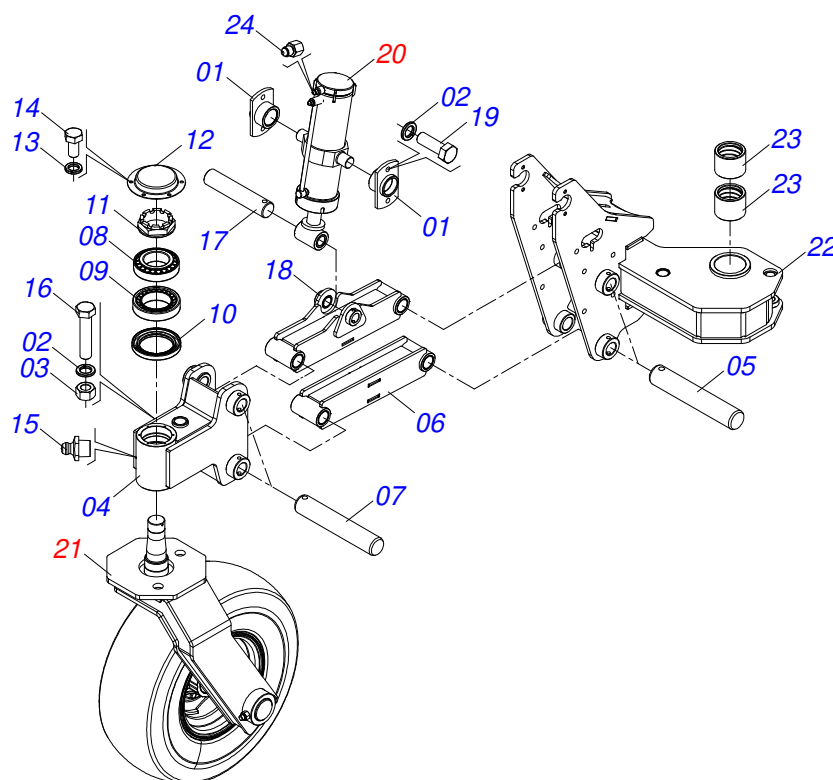


Item	Code	Description	See page	QT
01	0501111056	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		02
02	0503010019	1/2" SPRING WASHER		08
03	0503010060	1/2 UNC G.5 ZN HEX NUT		04
04	0531061431	REAR MONO WHEEL SUPPORT		01
05	0591015907	LARGER JUNCTION AXIS		02
06	0501111051	ARTICULATOR ARM		01
07	0591016194	AXLE JUNCTION		02
08	0503010007	3982/3920 ROLLER BEARING		01
09	0503010059	33287/33462 ROLLER BEARING		01
10	0503013106	SEAL 00085-B		01
11	0502040080	FLANGE NUT R.2.1/2 UN		01
12	0541013225	WHEEL BOX COVER		01
13	0503011444	SPRING WASHER		01
14	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		01
15	0503010002	1800 GREASE FITTING		01
16	0503017874	BOLT 1/2 UNC		04
17	0591016198	PIN 37,8 X 186		01
18	0501111050	REAR LIFT ARM		01
19	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
20	0531050023	HYDRAULIC CYLINDER 2 X 5 X 599 X 336	37	01
21	0531050897	MONO WHEEL LEFT	191	01
22	0531062131	LEFT SIDE FRAME		01
23	0591017921	BRONZE GLOVE 90.5 X 115 X 91		02
24	0551016274	HYDRAULIC CYLINDER ADAPTER		01

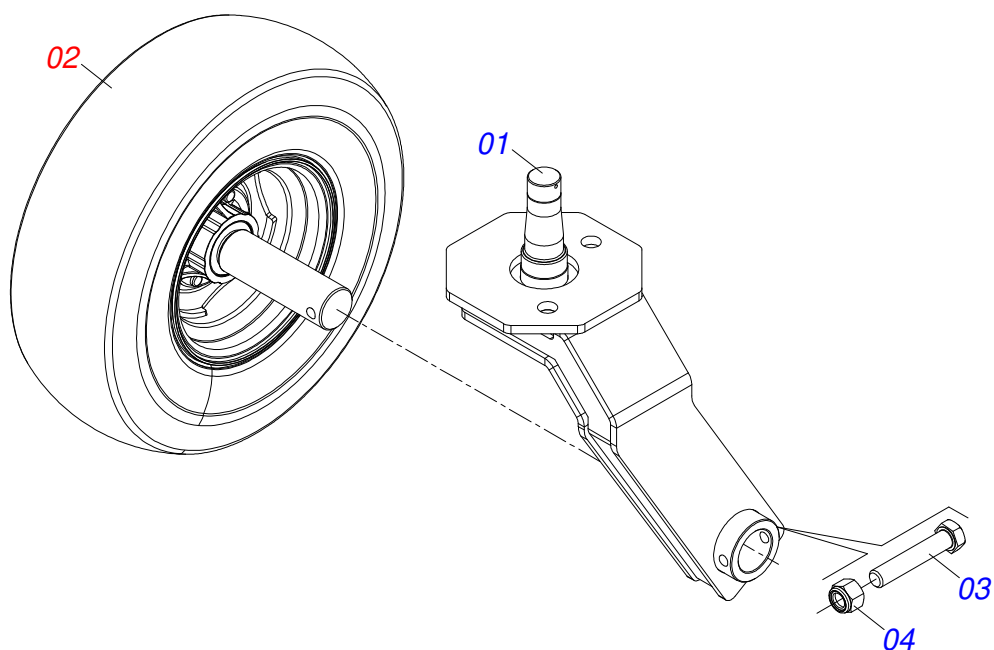


Item	Code	Description	See page	QT
01	0531062130	LEFT MONO WHEEL		01
02	0521059946	WHEEL ASSY WITH TIRE	39	01
03	0503019246	BOLT		01
04	0503011075	3/4" UNC NUT		01

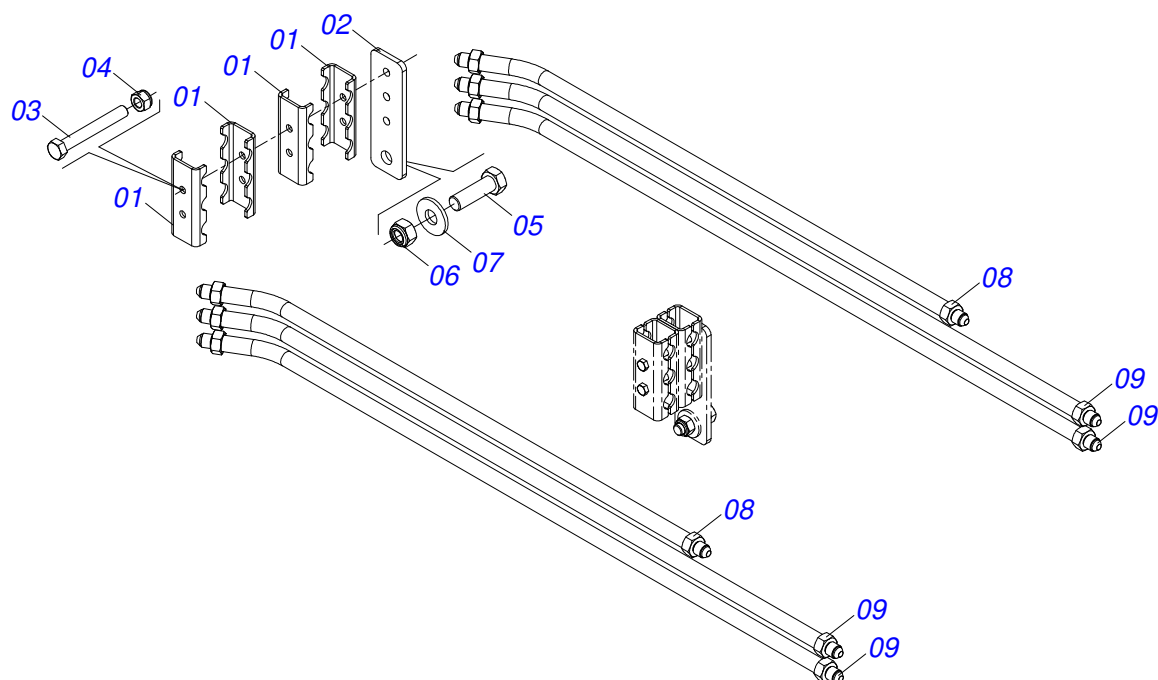


Item	Code	Description	See page	QT
01	0581018408	SUPPORT SCALE		08
02	0591016226	SHORT SUPPORT		02
03	0503011123	BOLT		04
04	0503013357	3/8 SELF-ADJUSTING NUT		04
05	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		02
06	0503013389	5/8\" SELF LOCKING NUT		02
07	0501012140	FLAT WASHER		02
08	0531062186	SIDE FRAME DUCT		02
09	0531062185	SIDE FRAME DUCT		04

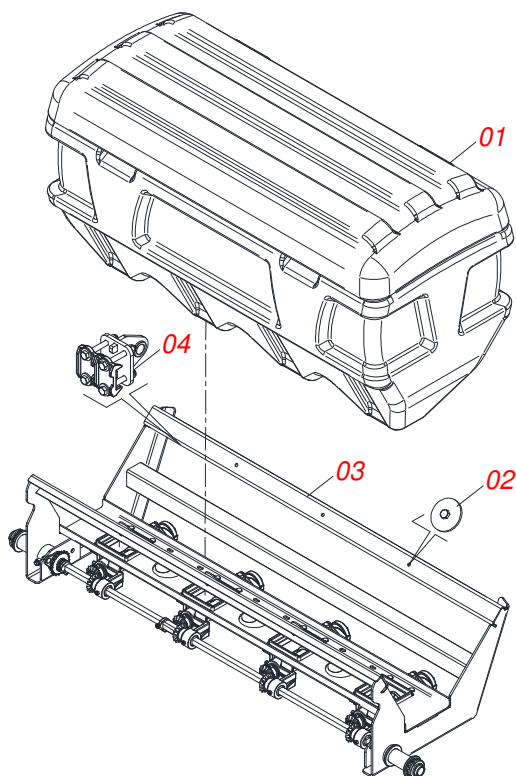


Item	Code	Description	See page	QT
01	0503062362	FERTILIZER HOPPER		01
02	0521051407	FERTILIZER HOPPER FIXER	29	06
03	0531050899	RIGHT SIDE SUPPORT 04 MOUTH WITH DISTRIBUTOR	196	01
04	0531050918	TOP SUPPORT MOUNTED LIFT EXTENSOR	31	01

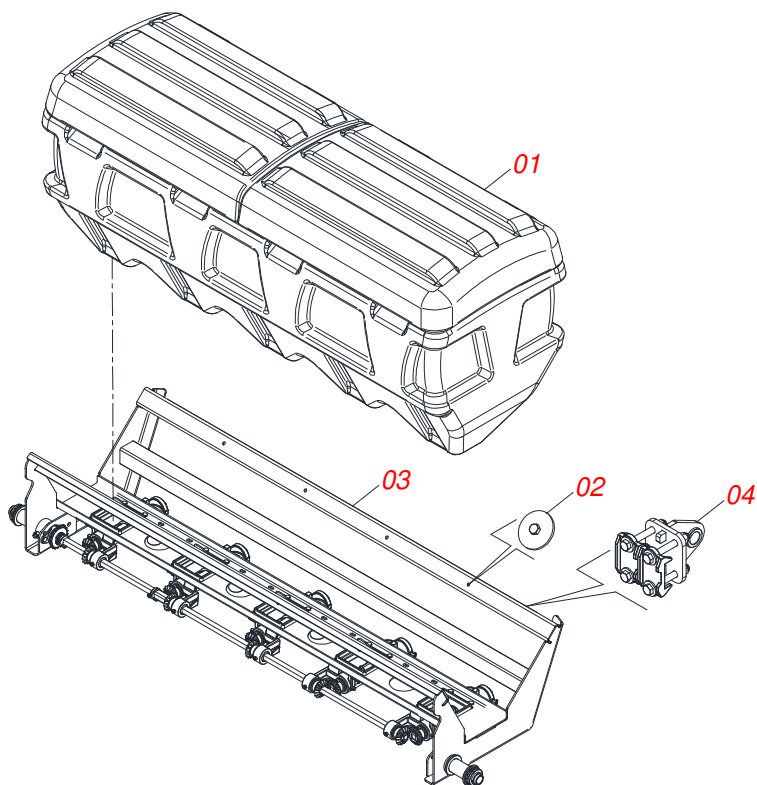

Item	Code	Description	See page	QT
01	0503062391	FERTILIZER HOPPER		01
02	0521051407	FERTILIZER HOPPER FIXER	29	08
03	0531051168	LEFT SIDE SUPPORT 05 MOUTH WITH DISTRIBUTOR	195	01
04	0531050918	TOP SUPPORT MOUNTED LIFT EXTENSOR	31	02

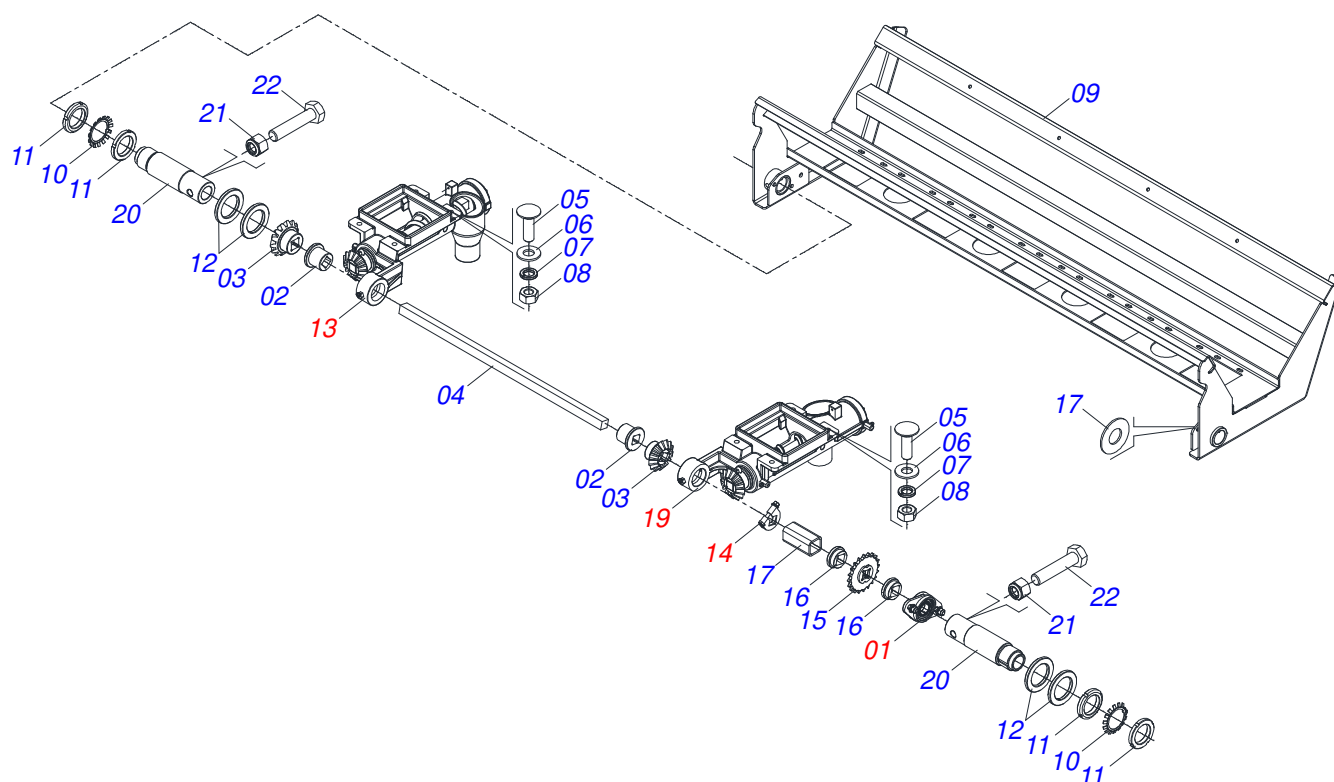


Item	Code	Description	See page	QT
01	0521054282	BEARING	32	01
02	0503030275	AGRICULTURAL BEARING		05
03	0502012990	CONICA 14Z SQUARE GEAR		05
04	0591018303	SQUARE SHAFT 3/4 X 1740		01
05	0503011953	5/16" X 1" BOLT		20
06	0501010694	FLAT WASHER		20
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		20
08	0503010337	5/16" NUT		20
09	0531061864	SUPPORT SILO 05 MOUTH		01
10	0503010329	LOCK WASHER		02
11	0503010330	KM 9 LOCKNUT		04
12	0591015365	RING		04
13	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR		03
14	0501053788	3/4 SQUARE AXLE FASTENER	35	02
15	0511065209	20Z GEAR		01
16	0503030303	SUPPORT WASHER		02
17	0551018055	22,65 X 60 SLEEVE		01
18	0501013519	FLAT WASHER		01
19	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	34	02
20	0591017775	ARTICULATION AXIS		02
21	0503010589	1/2" UNC SELF ADJUSTING NUT		02
22	0503011140	1/2" X 3-3/4" BOLT		02

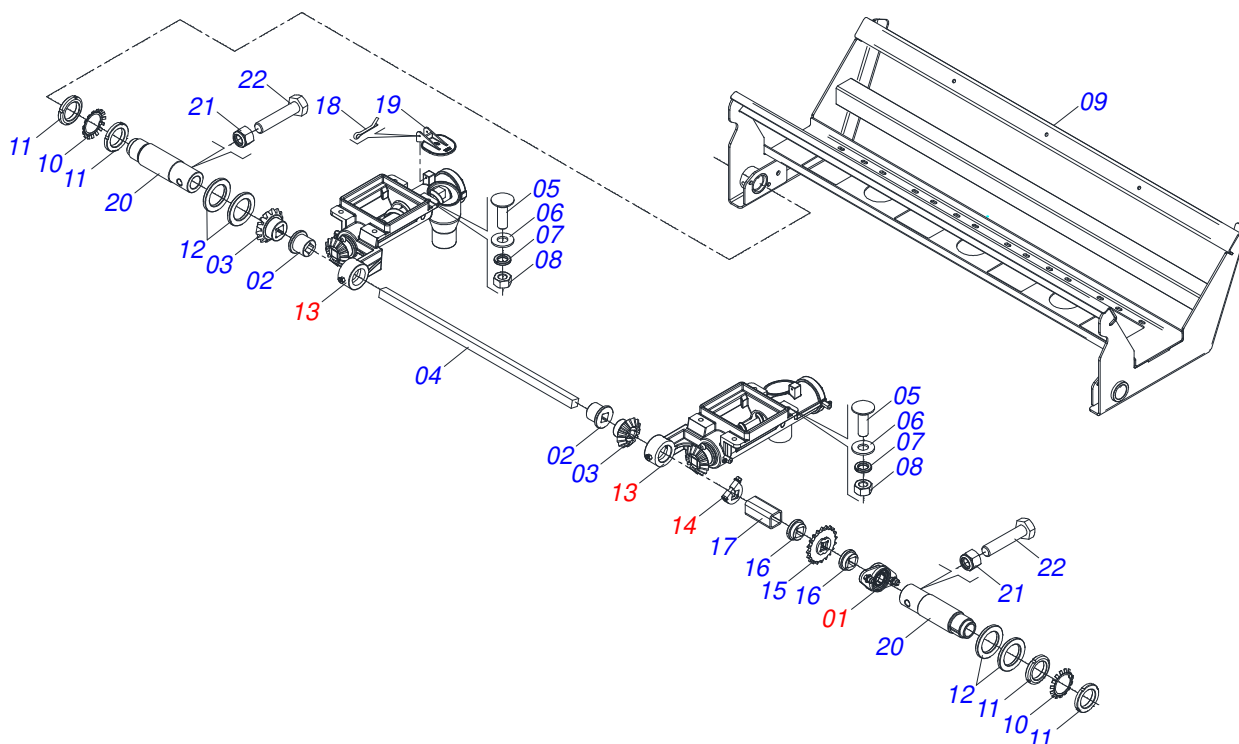

Item	Code	Description	See page	QT
01	0521054282	BEARING	32	01
02	0503030275	AGRICULTURAL BEARING		04
03	0502012990	CONICA 14Z SQUARE GEAR		04
04	0591013305	SQUARE SHAFT 3/4 X 1530		01
05	0503011953	5/16" X 1" BOLT		16
06	0501010694	FLAT WASHER		16
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		16
08	0503010337	5/16" NUT		16
09	0531062133	SUPPORT SILO 04 MOUTH		01
10	0503010329	LOCK WASHER		02
11	0503010330	KM 9 LOCKNUT		04
12	0591015365	RING		04
13	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR		04
14	0501053788	3/4 SQUARE AXLE FASTENER	35	02
15	0511065209	20Z GEAR		01
16	0503030303	SUPPORT WASHER		01
17	0551018055	22,65 X 60 SLEEVE		01
18	0503010362	1/8 X 1.1/4 COTTERPIN		04
19	0503034396	FERTILIZER SIDE COVER		04
20	0591017775	ARTICULATION AXIS		02
21	0503010589	1/2" UNC SELF ADJUSTING NUT		02
22	0503011140	1/2" X 3-3/4" BOLT		02

ASSEMBLY LADDER LEFT


0531050909

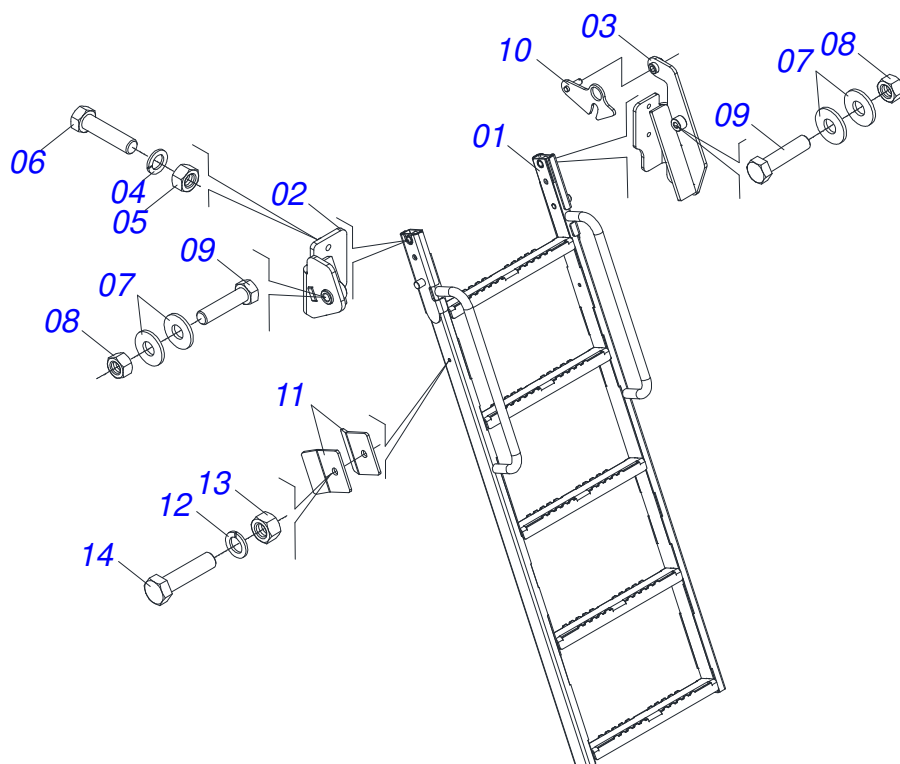


Item	Code	Description	See page	QT
01	0531061615	MOBILE LADDER		01
02	0531062145	LADDER GREATER RIGHT SUPPORT		01
03	0531062144	LADDER LARGER SUPPORT LEFT		01
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0501010937	13,50 X 28 X 3,00 FLAT WASHER		04
08	0503010589	1/2" UNC SELF ADJUSTING NUT		02
09	0503010752	1/2" X 3.1/2" BOLT		02
10	0511065679	STAIR RIGHT LOCK		01
11	0591016037	SENSOR LOCK ROD		02
12	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
13	0503010337	5/16" NUT		01
14	0503010397	5/16" X 1-3/4" BOLT		01

LEFT MOUNTED TRANSMISSION BOX


0521059893

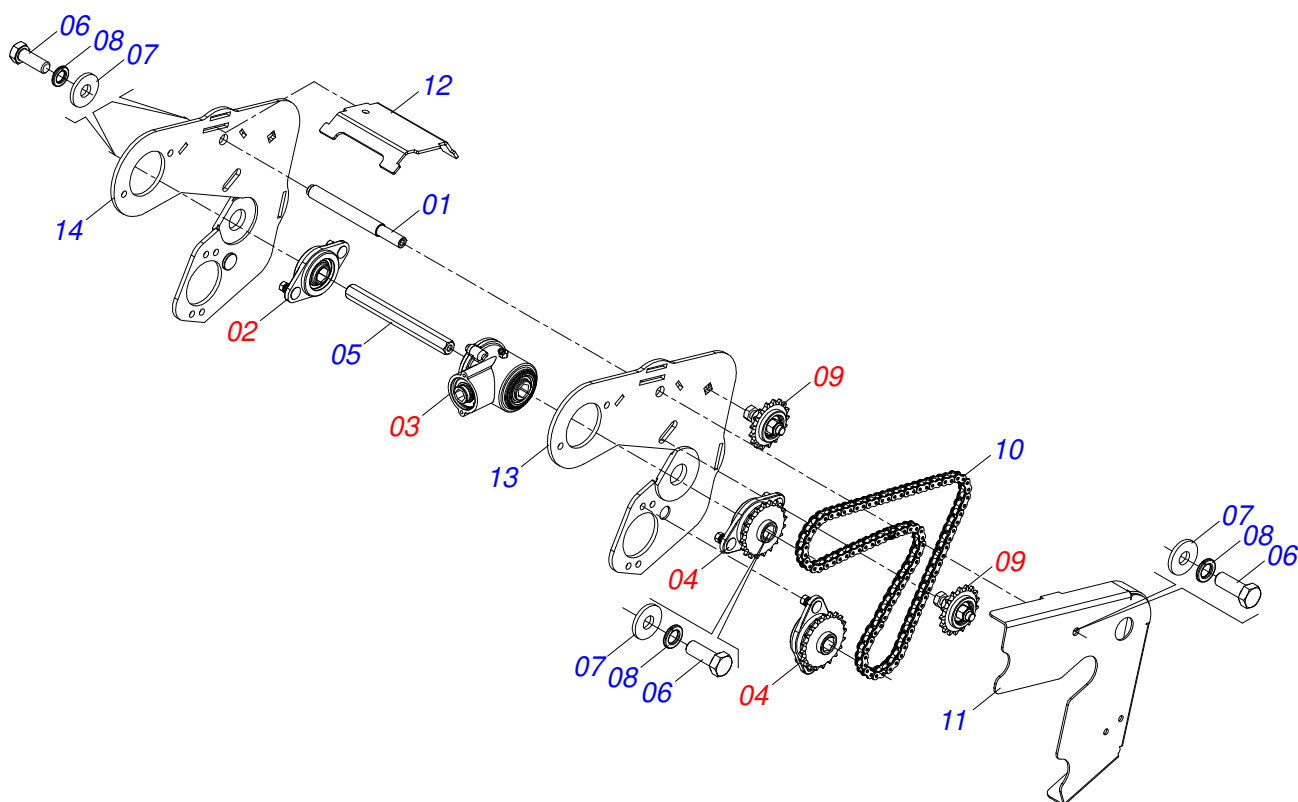


Item	Code	Description	See page	QT
01	0591016050	TRANSMISSION SHAFT		01
02	0501057684	SIDE BEARING FRONT SUPPORT SEED ROW	44	01
03	0511057159	TRANSMISSION HOPPER SEED ROW	54	01
04	0521059882	20Z TRANSMISSION GEAR	48	02
05	0591015357	HEX SHAFTED GUIDE 3/4 X 195		01
06	0503010237	3/8" X 1" BOLT		04
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
08	0503010025	3/8 SPRING WASHER		04
09	0521059881	TRANSMISSION GEAR	49	02
10	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
11	0591016051	LEFT CHAIN COVER		01
12	0591016053	SUPPORT PLATE		01
13	0531061625	TRANSMISSION RIGHT SIDE		01
14	0531061624	TRANSMISSION LEFT SIDE		01

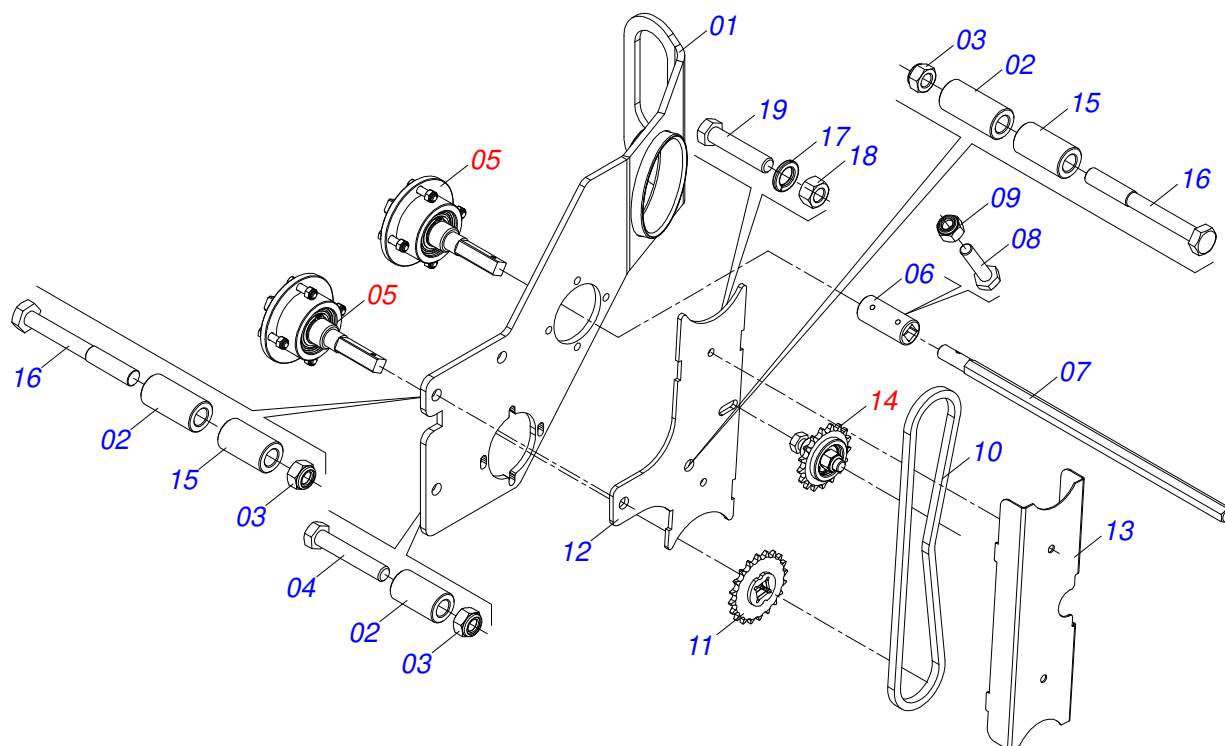


Item	Code	Description	See page	QT
01	0531062207	TRANSMISSION LEFT SUPPORT		01
02	0591018040	SEPARATING GLOVE 16.5 X 32 X 70		03
03	0503013389	5/8" SELF LOCKING NUT		03
04	0501011543	5/8" X 4" BOLT		01
05	0531050982	SIDE BODY BEARING	59	02
06	0591018038	DRAGGLE GLOVE		01
07	0591018039	HEX SHAFT 3/4 X 750 CENTRAL AND SIDE		01
08	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
09	0503014876	NUT PARLOCK 1/4"		02
10	0503011954	40-1 X 3.58 CHAIN LINK + MENDING		01
11	0511065209	20Z GEAR		01
12	0591018037	SIDE TRANSMISSION PLATE		01
13	0591018036	LEFT COVER TRANSMISSION LEFT MODULE		01
14	0521059881	TRANSMISSION GEAR	49	01
15	0591018035	SUPPORT GLOVE 17.5 X 32 X 57		02
16	0503010795	5/8" X 7" BOLT		02
17	0503010025	3/8 SPRING WASHER		02
18	0503010026	3/8" NUT		02
19	0503011268	3/8" X 2-1/2" BOLT		02

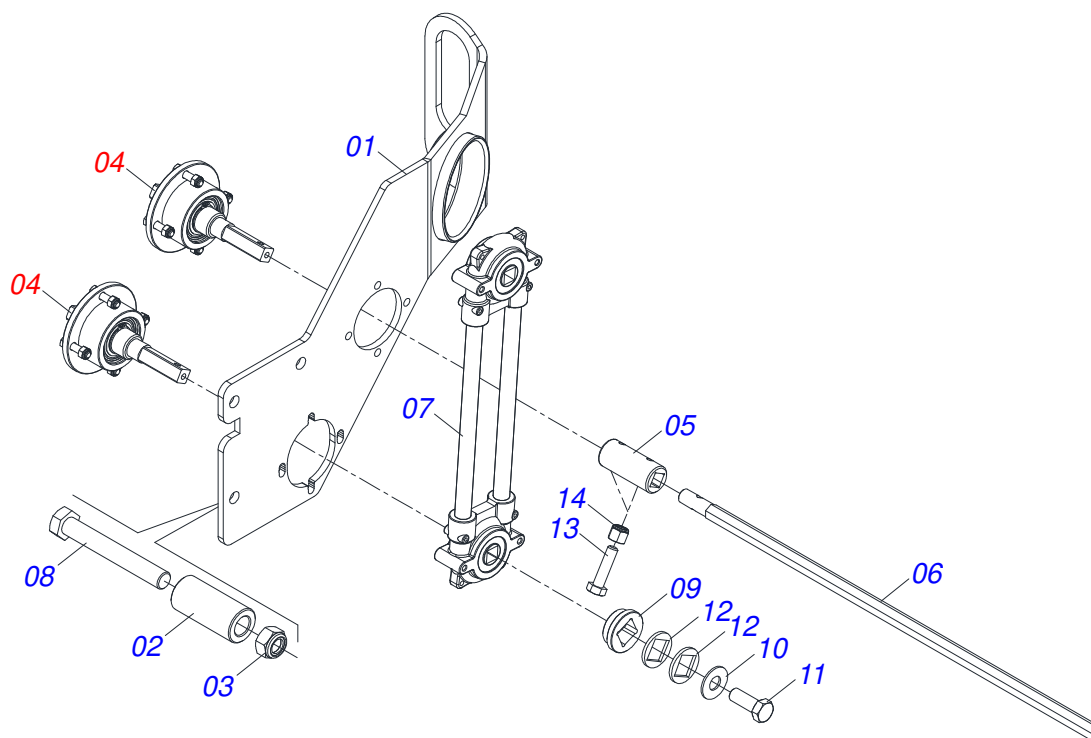


Item	Code	Description	See page	QT
01	0531062207	TRANSMISSION LEFT SUPPORT		01
02	0591018040	SEPARATING GLOVE 16.5 X 32 X 70		03
03	0503013389	5/8" SELF LOCKING NUT		03
04	0531050982	SIDE BODY BEARING	59	02
05	0591018038	DRAGGLE GLOVE		01
06	0591018039	HEX SHAFT 3/4 X 750 CENTRAL AND SIDE		01
07	0503063380	SIDE ENCAPSULATED CHAIN		01
08	0501010163	5/8" X 4-1/2" BOLT		03
09	0503030303	SUPPORT WASHER		01
10	0501013518	FLAT WASHER		01
11	0503010237	3/8" X 1" BOLT		01
12	0511017406	FLAT WASHER Q20 X 33 X 3.00		02
13	0503010882	BOLT		02
14	0503013759	NUT		02

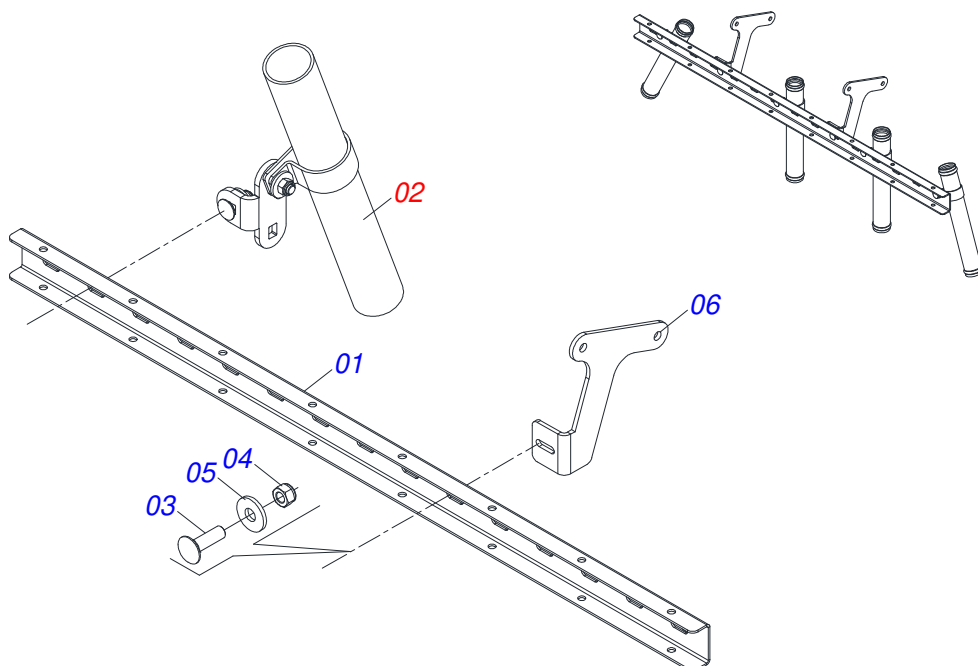

Item	Code	Description	See page	QT
01	0591017995	FERTILIZER CONDUCTOR GUTTER		01
02	0531051736	SHORT LINE FERTILIZER CONDUCTOR 170 ARTICULATOR		04
03	0501010942	3/8" X 1-1/4" BOLT		06
04	0503013357	3/8 SELF-ADJUSTING NUT		06
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
06	0591017994	SUPORT RIGHT		02

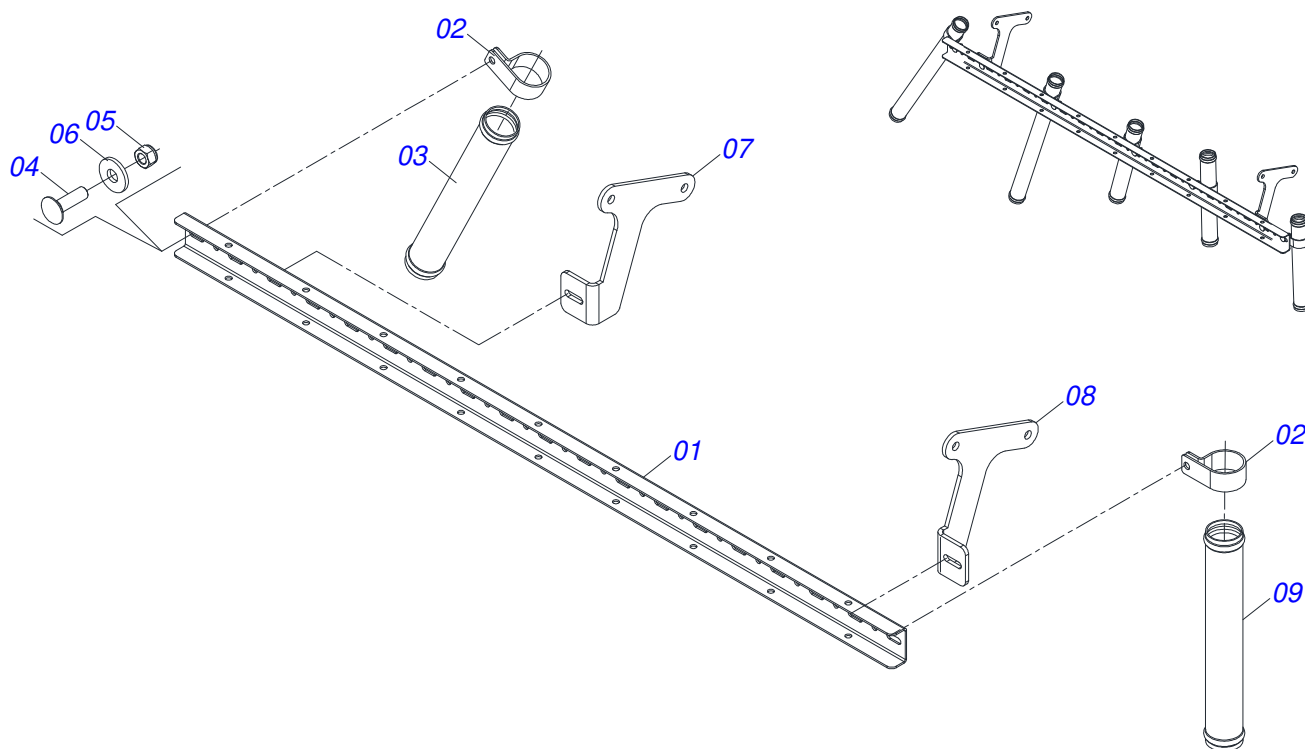

Item	Code	Description	See page	QT
01	0591018304	FERTILIZER CONDUCTOR GUTTER		01
02	0591015578	CLAMP		05
03	0591015577	CONDUCTING TUBE		03
04	0501010942	3/8" X 1-1/4" BOLT		07
05	0503013357	3/8 SELF-ADJUSTING NUT		07
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		07
07	0591017994	SUPPORT RIGHT		01
08	0591018014	LEFT SUPPORT		01
09	0591016338	CONDUCTING TUBE		02

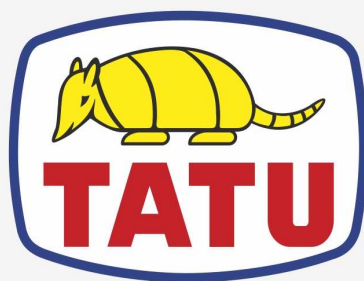

MARCHESAN

Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI

www.marchesan.com.br

