

ROW CROP PLANTERS

USAP SUPREMA P.P - 46 LINES/SPACE 450 - MTH

Code: 0501092967

Series: S-0114

Revision: 00

Date Revision: ABRIL/2021

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111440066	USAP SUP PP 46E450 MTH PP S-0114

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and / or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer.



MARCHESAN

INDEX


0909095739	FRAME ASSY	1
0909095740	FRAME RIGHT SIDE ASSY	2
0909095741	ASSY CENTRAL FRAME	3
0909095742	LEFT SIDE FRAME ASSY	4
0909095743	SEED LINE/ASSY FERTILIZER	5
0511053654	COMPLETE TELESCOPIC HEADER	6
0511058416	HYDRAULIC CYLINDER	7
0511053634	PANTOGRAPHY HEADER	8
0511053758	LEFT FRENCH HAND	9
0511053759	FRENCH HAND	10
0511052794	HITCH ASSY	11
0511052052	SUPPORT WITH FIXATION	12
0511052388	REST GREATER ASSY	13
0511054277	ATTACHMENT BAR REAR AXLE	14
0511054713	ASSY FRENCH HAND TRANSMISSION SHAFT	15
0511053121	GREATER TOOL BOX ASSY	16
0511054256	COROT WATER	17
0511051299	ROTATING RIGHT AXIS EXTENSOR	18
0501059964	RH SEED BOX LATERAL SUPPORT ASSY	19
0511051063	SUPPORT WITH DISTRIBUTOR	20
0511053377	COVER ASSY	21
0511053323	NYLON LUG ASSY	22
0511053320	ASSY SIDE LADDER	23
0521043452	WHEELS RIGHT TRANSMISSION	24
0521043454	CARRYING WHEELS SIDE S/TRANSMISSION	25
0511051754	RIGHT GEAR BOX ASSY	26
0511053616	DRIVE SHAFT	27
0511055151	DRIVER AIR	28
0511053652	SET HIDRAULICO	29
0511057528	FRONT LINE SHORT SEED	30
0511057529	FRONT LONG WITHOUT LINE	31
0501057684	SIDE BEARING FRONT SUPPORT SEED LINE	32
0501053566	BEARING SEED LINE	33
0511059312	BEARING TRANSMISSION SEED	34
0511054884	TRANSMISSION BOX	35
0511052300	CONDUCTOR SUPPORT ASSY SEED	36
0511047164	DISC BLADE ASSY	37
0511052299	BLADE DISC	38
0511058150	SET PRECISION PLANTING	39
0511057572	PRECISION PLANTING V-SET2 USAP SUP	40
0511057503	CAJA DE TRANSMISIÓN DERECHA PRECISION PLANTING	41
0511057741	REAR LEFT	42
0511057153	DDD LEFT SUPREMA PRECISION PLANTING	43
0511053172	LEFT LOW CUBE WITH DISC 15	44
0511053173	CUBE LOW RIGHT WITH DISC 15	45
0511057740	RIGHT REAR	46
0511057154	DDD RITGH SUPREMA PRECISION PLANTING	47
0521051424	WHEEL SYSTEM DEPTH / COMPACTOR QUICK ADJUSTMENT	48
0501056769	DEPTH WHEELS REGULATOR ASSY	49
0521051423	COMPACTOR SUPPORT	50
0501052908	COMPACTOR WHEEL WITH BEARING	51
0511050077	WHEEL STRIPED	52
0511052287	DEPTH WHEEL HUB ASSY	53
0521050825	SEED CONDUCTOR FULL TOP	54
0521050525	FIXER FERTILIZER CONDUCTOR	55



MARCHESAN

INDEX


0511053857	FAST CLOSING SET	56
0511053335	LEFT JOINT ARM	57
0511053336	RIGHT ARTICULATION ARM	58
0511058241	HYDRAULIC CYLINDER	59
0511051453	RIGHT CENTRAL BOX FERTILIZER	60
0511051454	LH CENTRAL BOX FERTILIZER	61
0521043436	WHEELS CENTER TRANSMISSION	62
0511054495	WHEEL WITHOUT TIRE WITHOUT TRANSMISSION	63
0503060684	14 X 17.5/14L TR SK900 LEFT - WHEEL AND TIRE	64
0511058240	HYDRAULIC CYLINDER	65
0521043440	WHEELS CENTER AND TRANSMISSION	66
0511054492	STUB SHAFT HUB	67
0511054463	WHEEL TENSIONER SUPORT CENTRAL	68
0511054499	TRANSMISSION OF LARGER CENTRAL EXCHANGE	69
0511054461	STRETCHER TOP TRANSMISSION SWIRLED	70
0511053044	TENSIONER USAP	71
0511053762	SET HIDRAULICO	72
0511053760	HOSE KIT	73
0511053761	HOSE KIT	74
0511053307	LIFT HOSE GAME	75
0511053313	BLOCK COMMAND	76
0501058101	DOUBLE MOTOR ASSY	77
0501058100	ARTICULATE VALVE	78
0511053345	ELECTRIC ASSEMBLY C MAIOR	79
0511050979	OF THE AIR CENTRAL TUBE	80
0511059406	TURBINE P.P MOUNTED	81
0521052549	CLAMP	82
0511052767	GREATER FULL CENTRAL CHANGE	83
0511053349	ELECTRICAL SYSTEM KIT	84
0501059876	ROTATING LEFT AXIS EXTENSOR	85
0511053870	HOSE ASSEMBLY	86
0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	87
0511053724	VACUOMETER WITH SUPPORT	88
0501059963	LH SEED BOX SIDE SUPPORT ASSY	89
0511051064	SUPPORT WITH DISTRIBUTOR	90
0521043453	WHEELED LEFT SET OF TRANSMISSION	91
0511051755	LEFT GEAR BOX ASSY	92
0511051807	HOSE HOLDER ASSY	93

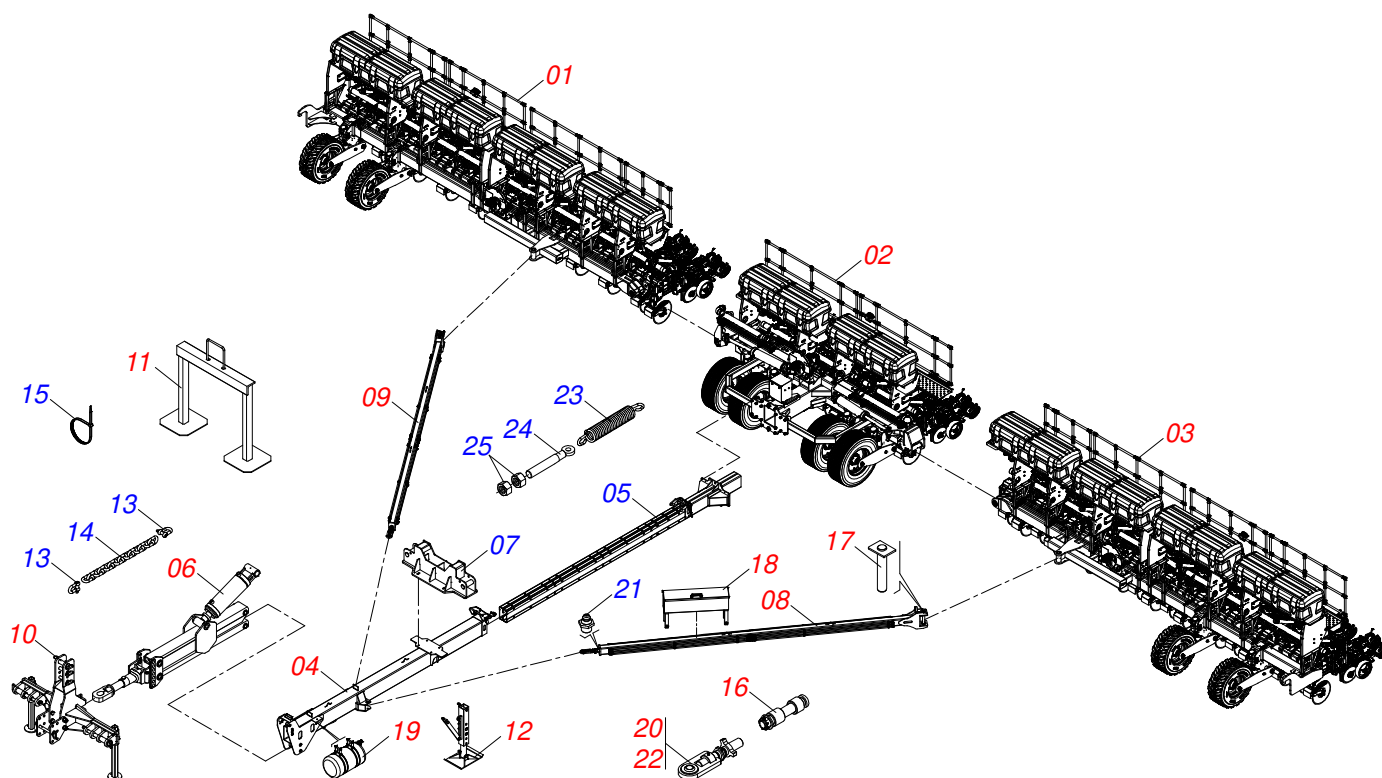

Item	Code	Description	See page	QT
01	0909095740	FRAME RIGHT SIDE ASSY	2	01
02	0909095741	ASSY CENTRAL FRAME	3	01
03	0909095742	LEFT SIDE FRAME ASSY	4	01
04	0511053654	COMPLETE TELESCOPIC HEADER	6	01
05	0521063723	INNER ARM TUBE		01
06	0511053634	PANTOGRAPHY HEADER	8	01
07	0521063739	TRANSPORT LOCK		01
08	0511053758	LEFT FRENCH HAND	9	01
09	0511053759	FRENCH HAND	10	01
10	0511052794	HITCH ASSY	11	01
11	0511052052	SUPPORT WITH FIXATION	12	01
12	0511052388	REST GREATER ASSY	13	01
13	0503014321	CABLE STEEL SHACKLE		02
14	0503014120	CHAIN		01
15	0503011372	102 TO 121 CLAMP		06
16	0511054277	ATTACHMENT BAR REAR AXLE	14	01
17	0511054713	ASSY FRENCH HAND TRANSMISSION SHAFT	15	02
18	0511053121	GREATER TOOL BOX ASSY	16	01
19	0511054256	COROT WATER	17	01
20	0511051299	ROTATING RIGHT AXIS EXTENSOR	18	01
21	0503010002	1800 GREASE FITTING		01
22	0501059876	ROTATING LEFT AXIS EXTENSOR	85	01
23	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
24	0511069520	TELESC LOCK SPRING TENSIONER		01
25	0503010013	5/8" NUT		08

FRAME RIGHT SIDE ASSY

0909095740

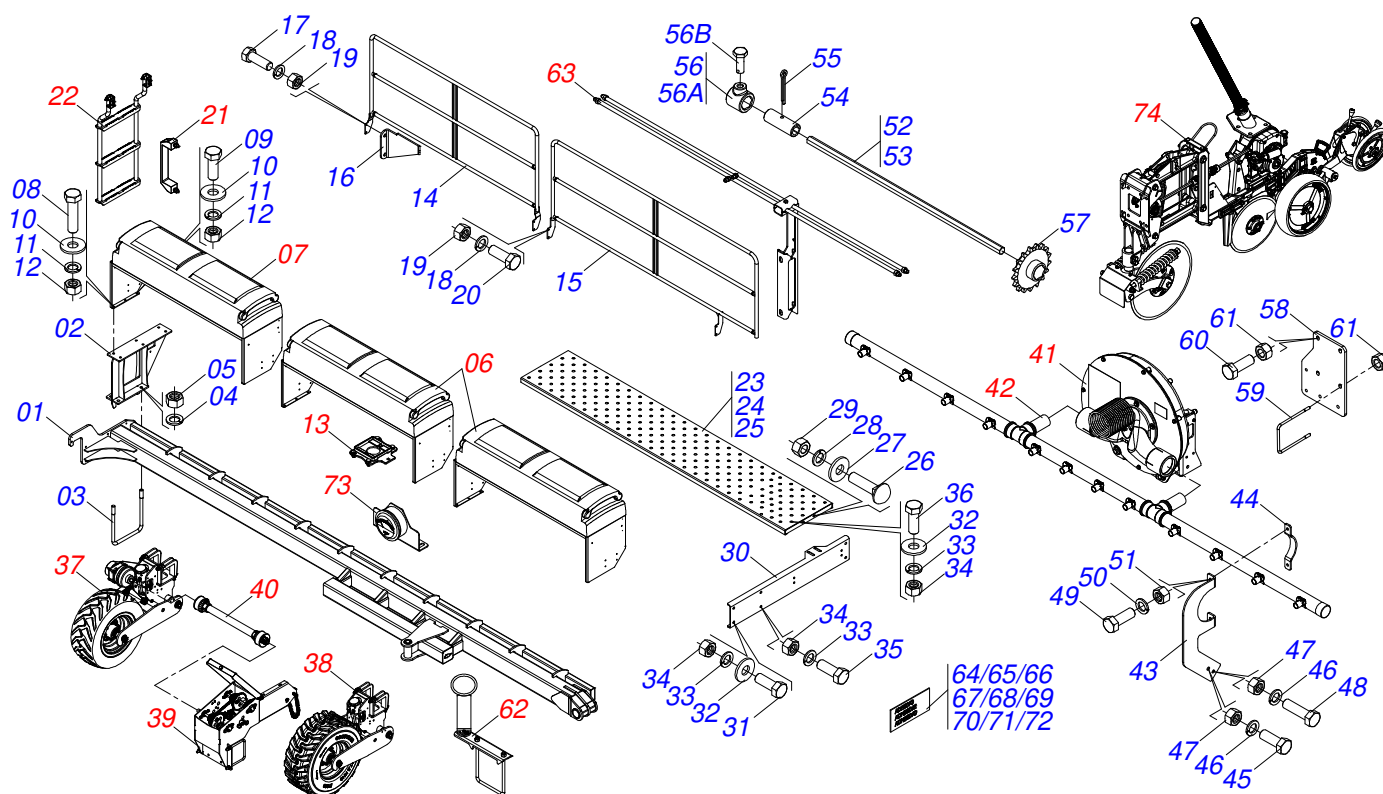

Item	Code	Description	See page	QT
01	0521063836	RIGHT SIDE FRAME		01
02	0521063052	LOWER FIXER		04
03	0571011070	5/8" UNC FASTENER		08
04	0503010027	5/8" SPRING WASHER		16
05	0503010013	5/8" NUT		16
06	0501059964	RH SEED BOX LATERAL SUPPORT ASSY	19	02
07	0511051063	SUPPORT WITH DISTRIBUTOR	20	01
08	0501010161	1/2" X 1.1/4" BOLT		04
09	0503010920	1/2" X 1.1/2" BOLT		18
10	0501013518	FLAT WASHER		18
11	0503010019	1/2" SPRING WASHER		22
12	0503010060	1/2" NUT		22
13	0511053377	COVER ASSY	21	04
14	0521064096	LEFT HANDRAIL		02
15	0521062403	HANDRAIL INTERMEDIARY		01
16	0561014688	RH PLATFORM SUPPORT		01
17	0501010161	1/2" X 1.1/4" BOLT		04
18	0503010019	1/2" SPRING WASHER		08
19	0503010060	1/2" NUT		08
20	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		04
21	0511053323	NYLON LUG ASSY	22	01
22	0511053320	ASSY SIDE LADDER	23	01
23	0511069820	PLATFORM 2380 USAP		01
24	0521062333	PLATFORM SIDE		01
25	0521062334	PLATFORM CENTER		01
26	0501010942	3/8" X 1-1/4" BOLT		04
27	0501013518	FLAT WASHER		04
28	0503010025	3/8" SPRING WASHER		04
29	0503010026	3/8" NUT		04
30	0551019056	SIDE PLATFORM SUPPORT		06
31	0501010161	1/2" X 1.1/4" BOLT		08


FRAME RIGHT SIDE ASSY

0909095740

Item	Code	Description	See page	QT
32	0501013519	FLAT WASHER		12
33	0503010019	1/2" SPRING WASHER		22
34	0503010060	1/2" NUT		22
35	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		08
36	0501010160	BOLT 1/2 UNC X 3 C S G.2 ZN		06
37	0521043452	WHEELS RIGHT TRANSMISSION	24	01
38	0521043454	CARRYING WHEELS SIDE S/TRANSMISSION	25	01
39	0511051754	RIGHT GEAR BOX ASSY	26	01
40	0511053616	DRIVE SHAFT	27	01
41	0511059406	TURBINE P.P MOUNTED	81	01
42	0511055151	DRIVER AIR	28	01
43	0571012770	CONDUCTOR OF AIR LAW		04
44	0521018402	AIR CONDUCTOR CLAMP		04
45	0503011087	3/8" X 1" BOLT		06
46	0503010025	3/8" SPRING WASHER		08
47	0503010026	3/8" NUT		08
48	0503010849	3/8" X 1-1/2" BOLT		02
49	0503010371	5/16" X 1" BOLT		08
50	0503010179	5/16" ZN SPRING WASHER		08
51	0503010337	5/16" NUT		08
52	0571013243	HEX AXLE		01
53	0571013244	HEX AXLE		01
54	0561015837	SLEEVE 31,75		01
55	0503010523	1/4" X 2" COTTERPIN		01
56	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		40
56A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
56B	0503010256	3/8" X 3/4" BOLT		01
57	0521060142	17Z GEAR		01
58	0571012406	FIXER MOVE TURBINE		01
59	0571011070	5/8" UNC FASTENER		02
60	0503010232	5/8" X 1.3/4" BOLT		02
61	0503012412	5/8 UNC SELF LOCKING NUT		06
62	0511051807	HOSE HOLDER ASSY	93	02
63	0511053652	SET HIDRAULICO	29	01
64	0503033621	ADHESIVE LABEL		01
65	0503033424	DIRECT PLANTIO ADHESIVE LABEL		01
66	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		01
67	0503033420	ADHESIVE LABEL 6 NUMBER FOR PLANTING		01
68	0503031425	ADHESIVE LABEL ATTENTION		01
69	0503032986	ADHESIVE LABEL		01
70	0503034249	ADHESIVE LABEL TABLE PLANTS		01
71	0503031827	LUBRICATE AND RETIGHTEN DAILY DECAL		01
72	0503031565	ADHESIVE LABEL CARE		01
73	0511053696	SUPPORT VACUUM		01
74	0909095743	SEED LINE/ASSY FERTILIZER	5	17

ASSY CENTRAL FRAME

0909095741

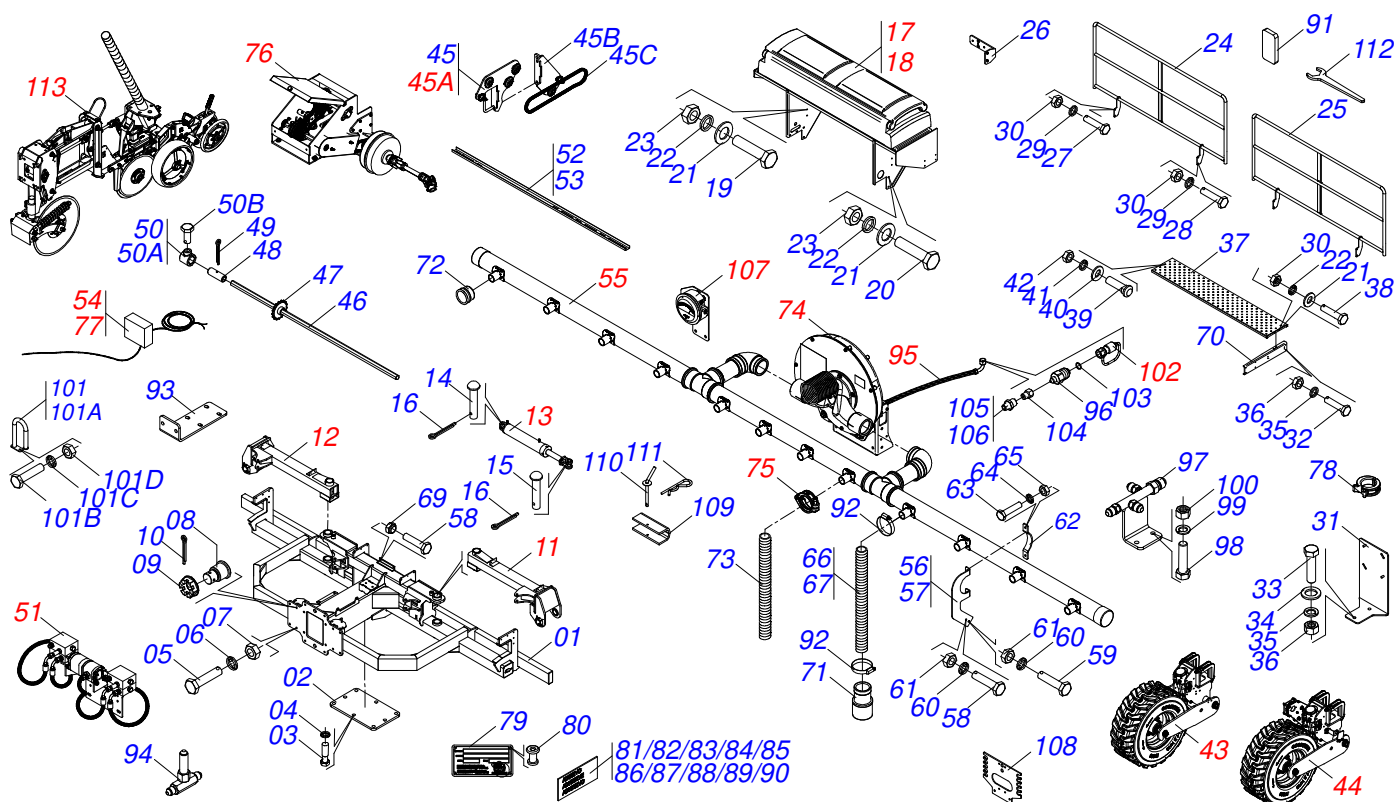

Item	Code	Description	See page	QT
001	0521063760	CENTRAL FRAME		01
002	0561017061	TUBE ADJUSTMENT PLATE		01
003	0501010161	1/2" X 1.1/4" BOLT		08
004	0503010019	1/2" SPRING WASHER		08
005	0501010276	BOLT		16
006	0503010012	1" SPRING WASHER		16
007	0503012182	1" NUT		16
008	0571012964	AXLE BODY WHEELS PIVOT		02
009	0501010630	1.1/2" CASTLE NUT		02
010	0503010523	1/4" X 2" COTTERPIN		02
011	0511053335	LEFT JOINT ARM	57	01
012	0511053336	RIGHT ARTICULATION ARM	58	01
013	0511058241	HYDRAULIC CYLINDER	59	02
014	0521010547	1.2" X 6.5" COUPLING SHAFT		02
015	0531013655	1.2" X 6.9" COUPLING SHAFT		02
016	0503010523	1/4" X 2" COTTERPIN		04
017	0511051453	RIGHT CENTRAL BOX FERTILIZER	60	01
018	0511051454	LH CENTRAL BOX FERTILIZER	61	01
019	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		08
020	0503010905	1/2" X 2-1/4" BOLT		10
021	0511017302	FLAT WASHER		18
022	0503010019	1/2" SPRING WASHER		18
023	0503011336	1/2" HEX SELF ADJUSTING NUT		18
024	0521063735	RIGHT HANDRAIL		01
025	0521063736	LH HANDRAIL CENTRAL FRAME		01
026	0551019557	FLASHLIGHT SUPPORT		02
027	0503010920	1/2" X 1.1/2" BOLT		04
028	0503010395	1/2" X 1-1/4" BOLT		04
029	0503010019	1/2" SPRING WASHER		08
030	0503010060	1/2" NUT		08
031	0571012531	BOX SUPPORT RELE		01

ASSY CENTRAL FRAME

0909095741

Item	Code	Description	See page	QT
032	0503010395	1/2" X 1-1/4" BOLT		14
033	0503010920	1/2" X 1.1/2" BOLT		02
034	0511017302	FLAT WASHER		04
035	0503010019	1/2" SPRING WASHER		16
036	0503010060	1/2" NUT		16
037	0521062402	COMPLETE PLATFORM		02
038	0501010160	BOLT 1/2 UNC X 3 C S G.2 ZN		04
039	0501010942	3/8" X 1-1/4" BOLT		02
040	0501013518	FLAT WASHER		02
041	0503010025	3/8" SPRING WASHER		02
042	0503010026	3/8" NUT		02
043	0521043436	WHEELS CENTER TRANSMISSION	62	03
044	0521043440	WHEELS CENTER AND TRANSMISSION	66	01
045	0511053842	CHAIN DEVIATION		01
045A	0511053824	CHAIN DEVIATION		01
045B	0511053044	TENSIONER USAP	71	01
045C	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
046	0571013241	HEX AXLE		02
047	0521060142	17Z GEAR		01
048	0561015837	SLEEVE 31,75		01
049	0503010523	1/4" X 2" COTTERPIN		01
050	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		30
050A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
050B	0503010256	3/8" X 3/4" BOLT		01
051	0511053762	SET HIDRAULICO	72	01
052	0571014383	GUTTER		01
053	0571014668	GUTTER		01
054	0511053345	ELECTRIC ASSEMBLY C MAIOR	79	01
055	0511050979	OF THE AIR CENTRAL TUBE	80	01
056	0571012769	DRIVER AIR LEFT		02
057	0571012770	CONDUCTOR OF AIR LAW		02
058	0503011087	3/8" X 1" BOLT		06
059	0503010849	3/8" X 1-1/2" BOLT		02
060	0503010025	3/8" SPRING WASHER		08
061	0503010026	3/8" NUT		08
062	0521018402	AIR CONDUCTOR CLAMP		04
063	0503010371	5/16" X 1" BOLT		08
064	0503010179	5/16" ZN SPRING WASHER		08
065	0503010337	5/16" NUT		08
066	0561016728	AIR CONDUCTOR		02
067	0561016733	AIR CONDUCTOR		02
068	0503010232	5/8" X 1.3/4" BOLT		02
069	0503012412	5/8 UNC SELF LOCKING NUT		02
070	0551019056	SIDE PLATFORM SUPPORT		04
071	0571019716	ADAPTER		46
072	0503031436	AIR DITRIBUTOR PUMP		04
073	0581010572	AIR CONDUCTOR 1.1/2 X 1300		46
074	0511059406	TURBINE P.P MOUNTED	81	01
075	0521052549	CLAMP	82	92
076	0511052767	GREATER FULL CENTRAL CHANGE	83	01
077	0511053349	ELECTRICAL SYSTEM KIT	84	01
078	0501047885	ROD STOP		08
079	0503034003	SERIAL NUMBER TAG 61 X 118		01
080	0503010001	3.2 X 5.5 RIVET		04
081	0503033854	ADHESIVE LABEL		08
082	0503033888	ADHESIVE LABEL		08
083	0503033853	ADHESIVE LABEL		02
084	0503031425	ADHESIVE LABEL ATTENTION		02


ASSY CENTRAL FRAME

0909095741

Item	Code	Description	See page	QT
085	0503034249	ADHESIVE LABEL TABLE PLANTS		01
086	0503033597	ADHESIVE		02
087	0503031087	ADHESIVE LABEL		01
088	0503032986	ADHESIVE LABEL		01
089	0503034471	ADHESIVE LABEL		01
090	0503034534	ADHESIVE LABEL		01
091	0561017063	HOLDER TUBE		02
092	0503011372	102 TO 121 CLAMP		06
093	0561016781	SEQUENTIAL VALVE SUPPORT ASSY		01
094	0521060118	"T" TERMINAL		01
095	0511053870	HOSE ASSEMBLY	86	01
096	0561016720	MALE TERMINAL		01
097	0521063346	FLOW DIVIDING		02
098	0503011087	3/8" X 1" BOLT		04
099	0503010025	3/8" SPRING WASHER		04
100	0503010026	3/8" NUT		04
101	0511053659	HOSE HOLDER		46
101A	0521064230	HOSE HOLDER		01
101B	0503010920	1/2" X 1.1/2" BOLT		01
101C	0503010019	1/2" SPRING WASHER		01
101D	0503010060	1/2" NUT		01
102	0501053834	MALE QUICK COUPLER WITH CAP - 1/2 NPT	87	03
103	0503010045	O'RING		03
104	0541010080	TERMINAL R.1 / 2 NPT		03
105	0571015343	NIPLE 1 / 2NPT X 3 / 4NPT		03
106	0581013729	NIPLE 1 / 2NPT		03
107	0511053724	VACUOMETER WITH SUPPORT	88	01
108	0571011596	FIXER HOSE		01
109	0521055637	ASSY TRANSPORT LOCK		04
110	0501068994	0.3" X 3.1" LOCK PIN		04
111	0503030168	HAIR PIN		04
112	0561016793	FIXED WRENCH		01
113	0909095743	SEED LINE/ASSY FERTILIZER	5	12

LEFT SIDE FRAME ASSY

0909095742

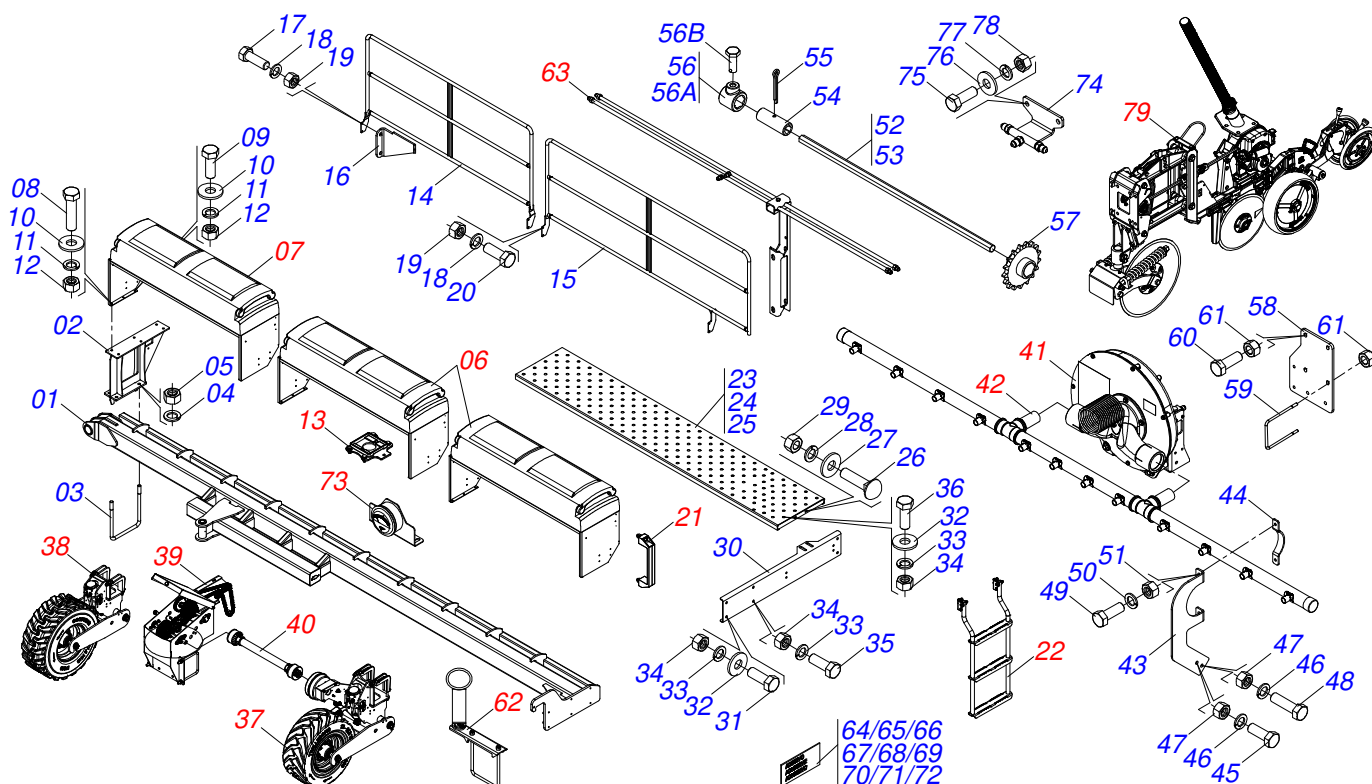


Item	Code	Description	See page	QT
01	0521063837	LEFT SIDE FRAME		01
02	0521063052	LOWER FIXER		04
03	0571011070	5/8" UNC FASTENER		08
04	0503010027	5/8" SPRING WASHER		16
05	0503010013	5/8" NUT		16
06	0501059963	LH SEED BOX SIDE SUPPORT ASSY	89	02
07	0511051064	SUPPORT WITH DISTRIBUTOR	90	01
08	0501010161	1/2" X 1.1/4" BOLT		04
09	0503010920	1/2" X 1.1/2" BOLT		18
10	0501013519	FLAT WASHER		18
11	0503010019	1/2" SPRING WASHER		22
12	0503010060	1/2" NUT		22
13	0511053377	COVER ASSY	21	04
14	0521064096	LEFT HANDRAIL		02
15	0521062392	HANDRAIL INTERMEDIARY		01
16	0561014687	LH PLATFORM SUPPORT		01
17	0501010161	1/2" X 1.1/4" BOLT		04
18	0503010019	1/2" SPRING WASHER		08
19	0503010060	1/2" NUT		08
20	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		04
21	0511053323	NYLON LUG ASSY	22	01
22	0511053320	ASSY SIDE LADDER	23	01
23	0511069820	PLATFORM 2380 USAP		01
24	0521062333	PLATFORM SIDE		01
25	0521062334	PLATFORM CENTER		01
26	0501010942	3/8" X 1-1/4" BOLT		04
27	0501013518	FLAT WASHER		04
28	0503010025	3/8" SPRING WASHER		04
29	0503010026	3/8" NUT		04
30	0551019056	SIDE PLATFORM SUPPORT		06
31	0501010161	1/2" X 1.1/4" BOLT		08


LEFT SIDE FRAME ASSY

0909095742

Item	Code	Description	See page	QT
33	0503010019	1/2" SPRING WASHER		22
34	0503010060	1/2" NUT		22
35	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		08
36	0501010160	BOLT 1/2 UNC X 3 C S G.2 ZN		06
37	0521043453	WHEELED LEFT SET OF TRANSMISSION	91	01
38	0521043454	CARRYING WHEELS SIDE S/TRANSMISSION	25	01
39	0511051755	LEFT GEAR BOX ASSY	92	01
40	0511053616	DRIVE SHAFT	27	01
41	0511059406	TURBINE P.P MOUNTED	81	01
42	0511055151	DRIVER AIR	28	01
43	0571012769	DRIVER AIR LEFT		04
44	0521018402	AIR CONDUCTOR CLAMP		04
45	0503011087	3/8" X 1" BOLT		06
46	0503010025	3/8" SPRING WASHER		08
47	0503010026	3/8" NUT		08
48	0503010849	3/8" X 1-1/2" BOLT		02
49	0503010371	5/16" X 1" BOLT		08
50	0503010179	5/16" ZN SPRING WASHER		08
51	0503010337	5/16" NUT		08
52	0571013243	HEX AXLE		01
53	0571013244	HEX AXLE		01
54	0561015837	SLEEVE 31,75		01
55	0503010523	1/4" X 2" COTTERPIN		01
56	0511054314	TRANSMISSION AXLE ASSY TRANSMISSION GLOVE		40
56A	0502012699	LATCH GLOVE BOX TRANSMISSION		01
56B	0503010256	3/8" X 3/4" BOLT		01
57	0521060142	17Z GEAR		01
58	0571012406	FIXER MOVE TURBINE		01
59	0571011070	5/8" UNC FASTENER		02
60	0503010232	5/8" X 1.3/4" BOLT		02
61	0503012412	5/8 UNC SELF LOCKING NUT		06
62	0511051807	HOSE HOLDER ASSY	93	02
63	0511053652	SET HIDRAULICO	29	01
64	0503033621	ADHESIVE LABEL		01
65	0503033424	DIRECT PLANTIO ADHESIVE LABEL		01
66	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		01
67	0503033420	ADHESIVE LABEL 6 NUMBER FOR PLANTING		01
68	0503031425	ADHESIVE LABEL ATTENTION		01
69	0503032986	ADHESIVE LABEL		01
70	0503034249	ADHESIVE LABEL TABLE PLANTS		01
71	0503031827	LUBRICATE AND RETIGHTEN DAILY DECAL		01
72	0503031565	ADHESIVE LABEL CARE		01
73	0511053696	SUPPORT VACUUM		01
74	0521063347	T 3/4 USAP TERMINAL		01
75	0503010920	1/2" X 1.1/2" BOLT		02
76	0501013519	FLAT WASHER		02
77	0503010019	1/2" SPRING WASHER		02
78	0503010060	1/2" NUT		02
79	0909095743	SEED LINE/ASSY FERTILIZER	5	17

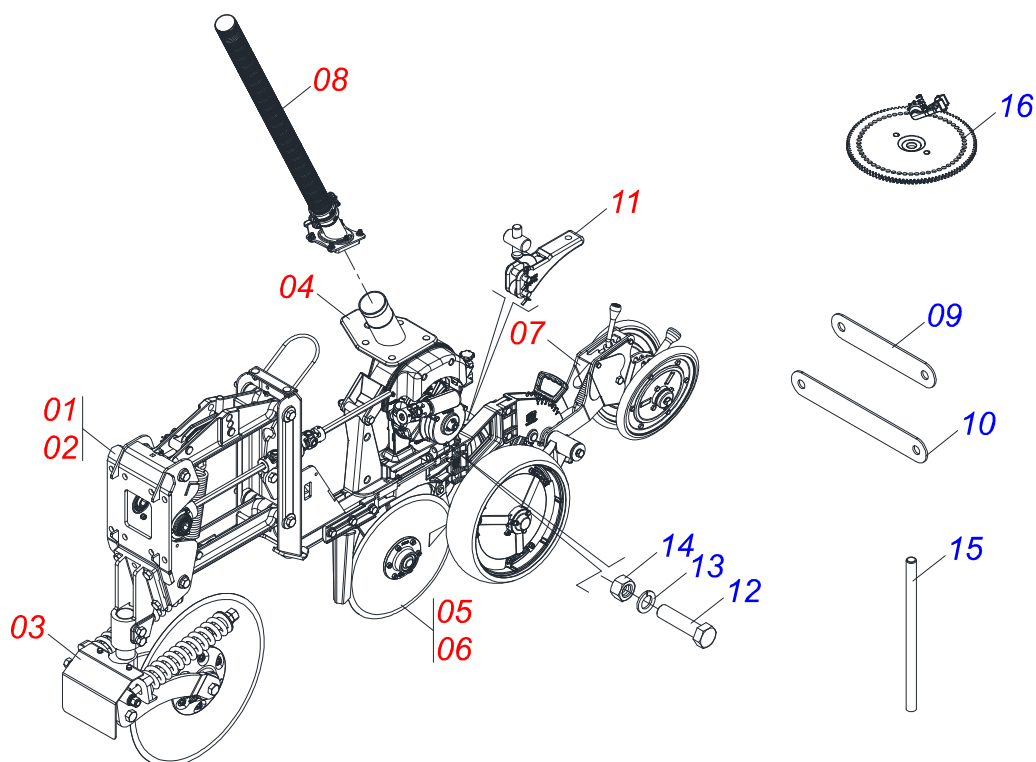


Item	Code	Description	See page	QT
01	0511057528	FRONT LINE SHORT SEED	30	01
02	0511057529	FRONT LONG WITHOUT LINE	31	01
03	0511047164	DISC BLADE ASSY	37	01
04	0511058150	SET PRECISION PLANTING	39	01
05	0511057741	REAR LEFT	42	01
06	0511057740	RIGHT REAR	46	01
07	0521051424	WHEEL SYSTEM DEPTH / COMPACTOR QUICK ADJUSTMENT	48	01
08	0521050825	SEED CONDUCTOR FULL TOP	54	01
09	0571012014	TRANSPORT LOCK		01
10	0571012013	TRANSPORT LOCK		01
11	0511053857	FAST CLOSING SET	56	01
12	0503010905	1/2" X 2-1/4" BOLT		01
13	0503010019	1/2" SPRING WASHER		01
14	0503010060	1/2" NUT		01
15	0531013600	PRESS ADJUSTMENT LEVER		01
16	0503062763	CONVERSION ASSY FOR DISTRIBUTOR SOY / BEANS		01

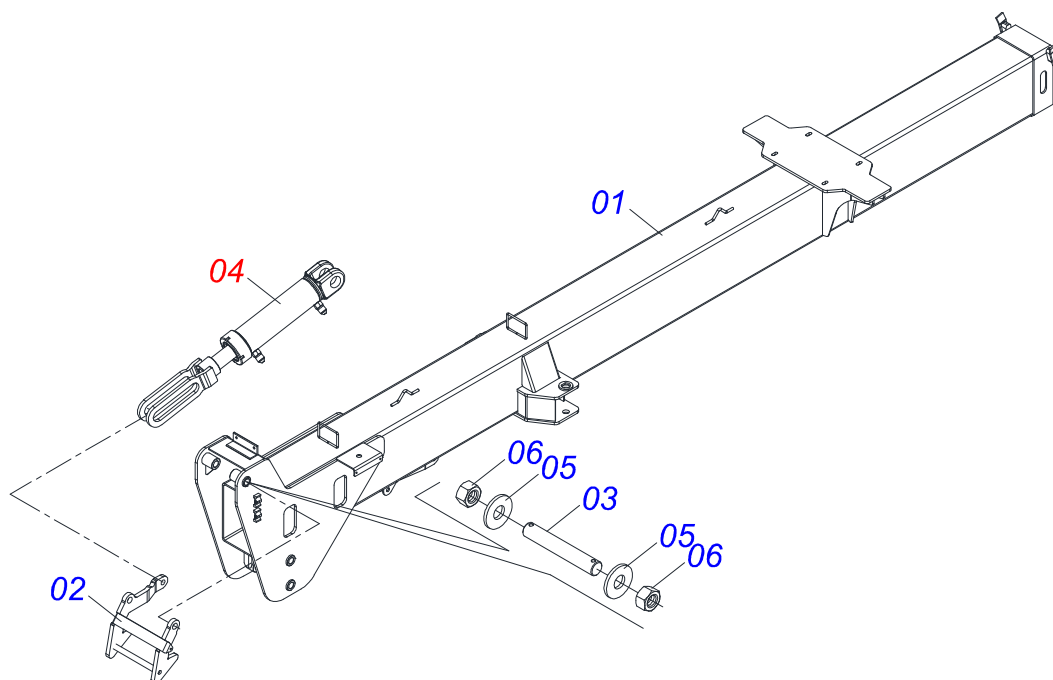

Item	Code	Description	See page	QT
01	0521063740	COMPLETE TELESCOPIC HEADER		01
02	0521063738	FIXER LOCK		01
03	0571013059	PIVOT SHAFT LOCK		01
04	0511058416	HYDRAULIC CYLINDER	7	01
05	0521011132	FLAT WASHER		02
06	0503010523	1/4" X 2" COTTERPIN		02

HYDRAULIC CYLINDER


0511058416

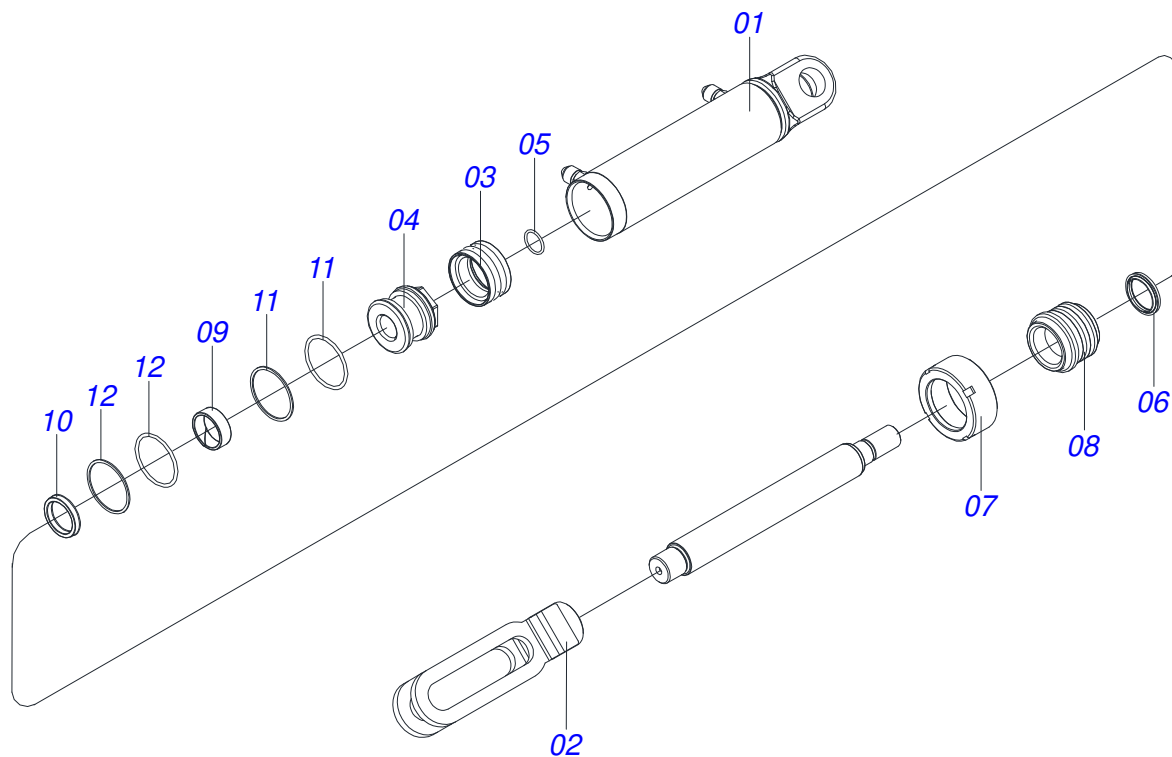


Item	Code	Description	See page	QT
01	0521062972	63,50 X 257 CYLINDER CASE		01
02	0511069508	CYLINDER FORK		01
03	0503018005	RING		01
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503010163	D-1500 SCRAPER RING		01
07	0502010471	MOBILE COVER		01
08	0581010668	RING SUPPORT		01
09	0503018004	RING		01
10	0503018003	GASKET		01
11	0503018163	BACK-UP RING		02
12	0503018162	O'RING		02

PANTOGRAPHY HEADER


0511053634

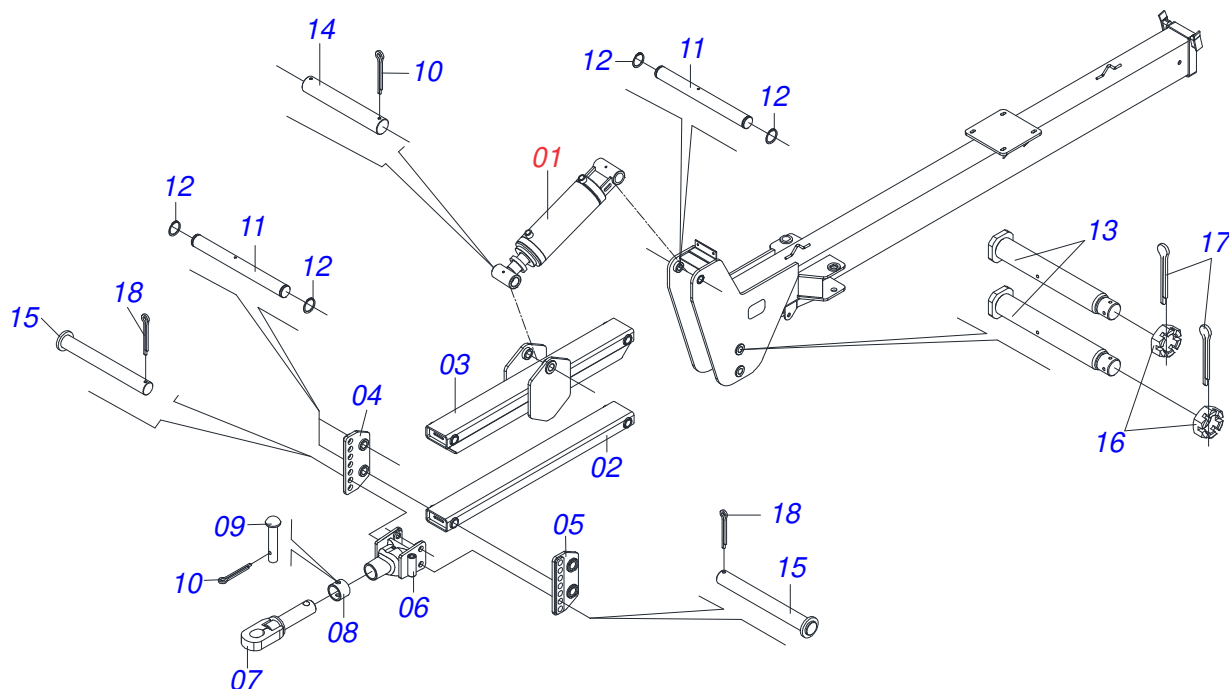

Item	Code	Description	See page	QT
01	0511058228	HYDRAULIC CYLINDER DRAWBAR HYDRAULIC	01	
02	0501079585	ARM USAP	01	
03	0521062955	SEED ARM SUPPORT ROW	01	
04	0521063433	EAR ARM PANTOGRAPH WITH LOOK	01	
05	0521063434	EAR ARM PANTOGRAPH	01	
06	0521063435	BOX HITCH WITH EARS	01	
07	0521063514	TRACTOR HITCH	01	
08	0502040327	ANEL TRAVA ENGATE	01	
09	0521010578	COUPLING SHAFT	01	
10	0503010523	1/4" X 2" COTTERPIN	01	
11	0571012980	AXLE	03	
12	0503010391	501038 CLAMPING RING (FOR AXLE)	06	
13	0521063022	AXLE LOWER	02	
14	0571011013	AXLE ARM	01	
15	0521063432	LOCK AXLE	02	
16	0503011052	1.1/4" X 0.77" CASTLE NUT	02	
17	0503010523	1/4" X 2" COTTERPIN	02	
18	0503010038	3/16 X 2 COTTERPIN	02	

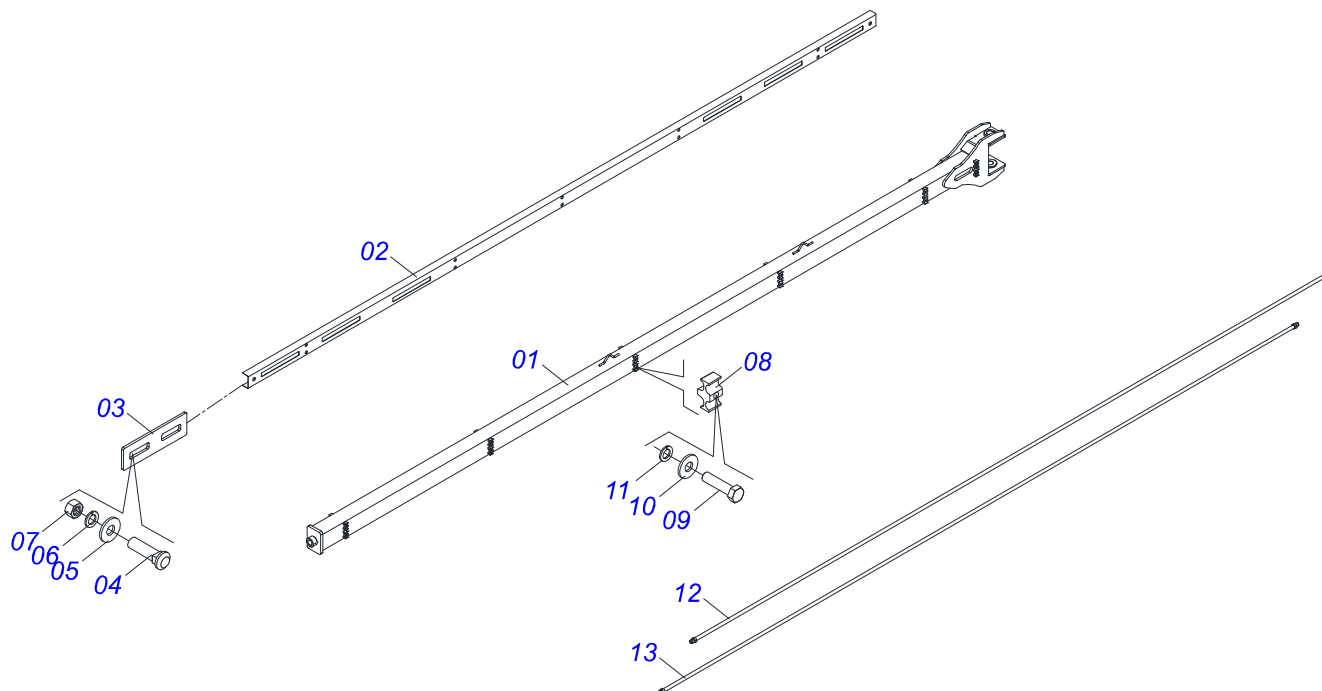


Item	Code	Description	See page	QT
01	0521063015	LEFT FRENCH HAND	01	
02	0571013212	GUTTER 20 X 38 X 2020 USAP	03	
03	0571011891	GUIDE RAIL	02	
04	0503011952	5/16" X 3/4" BOLT	04	
05	0501010694	8.5 X 18 X 1.5 FLAT WASHER	04	
06	0503010179	5/16" ZN SPRING WASHER	04	
07	0503010337	5/16" NUT	04	
08	0502012702	BODY SUPPORT CLAMP	16	
09	0503011135	BOLT	16	
10	0501012803	FLAT WASHER	04	
11	0503010180	7/16" SPRING WASHER	16	
12	0521063057	OIL TUBE	05	
13	0521063313	OIL TUBE	02	

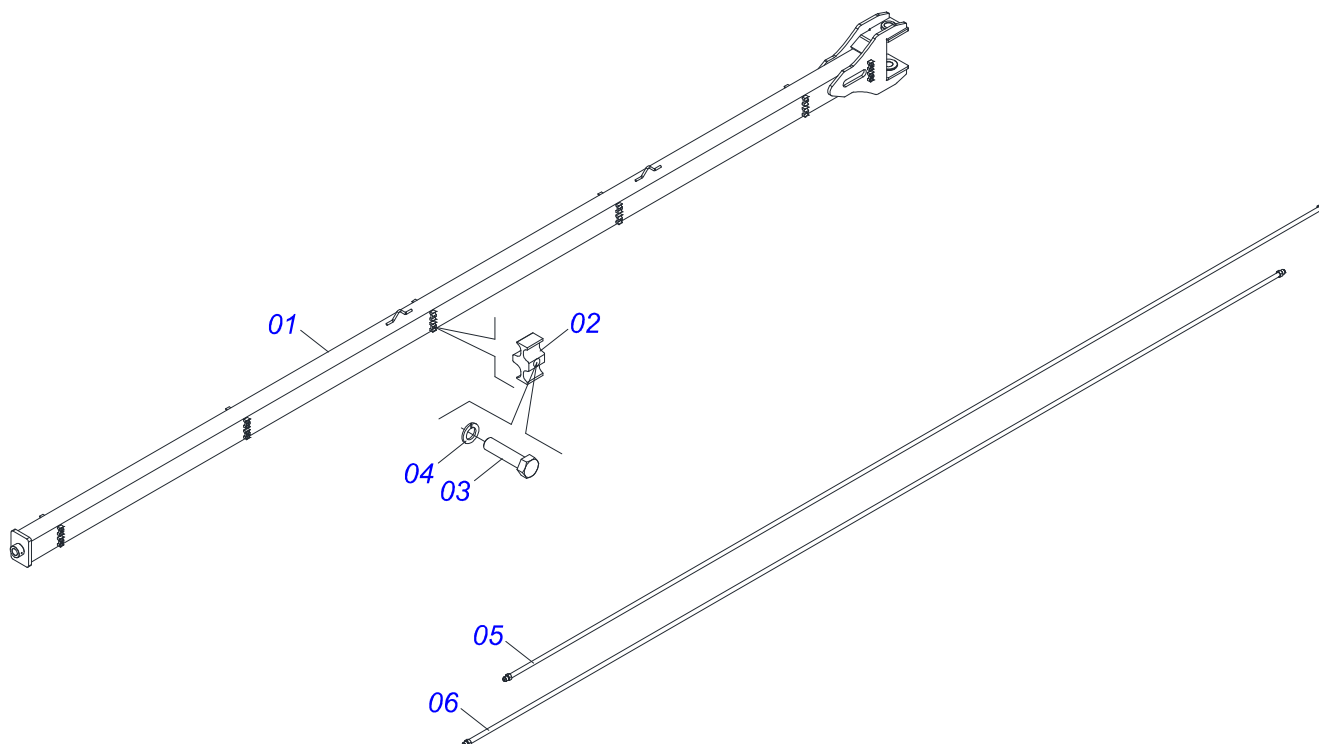


Item	Code	Description	See page	QT
01	0521063015	LEFT FRENCH HAND		01
02	0502012702	BODY SUPPORT CLAMP		16
03	0503011135	BOLT		16
04	0503010180	7/16" SPRING WASHER		16
05	0521063057	OIL TUBE		05
06	0521063313	OIL TUBE		02

HITCH ASSY


0511052794

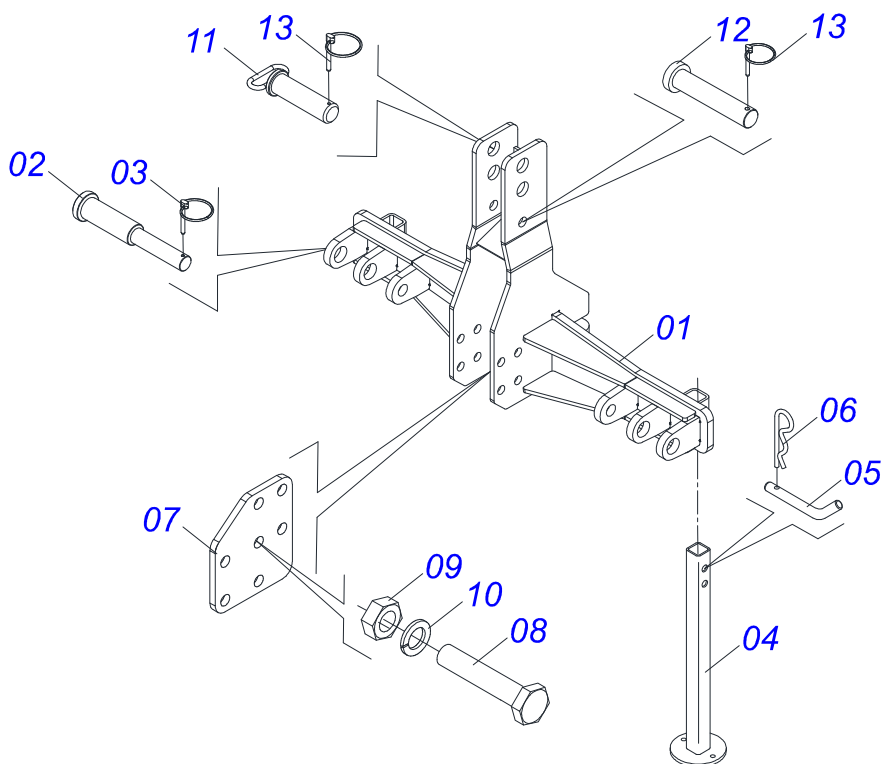


Item	Code	Description	See page	QT
01	0521063768	HITCH ASSY		01
02	0571012835	AXLE LOWER		02
03	0503030119	LOCK PIN		02
04	0511069471	PLOUGH SUPPORT		02
05	0501011075	PIN		02
06	0503030012	HAIR PIN		04
07	0561013456	GUIDE DRAWBAR ASSY		02
08	0501010276	BOLT		04
09	0501010059	1.5/8 NUT		04
10	0503010012	1" SPRING WASHER		04
11	0511069466	HITCH AXLE		01
12	0531013655	1.2" X 6.9" COUPLING SHAFT		01
13	0503030119	LOCK PIN		02

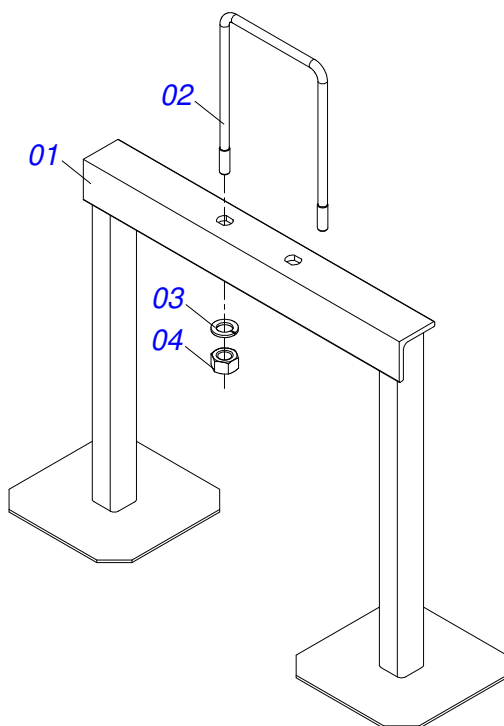


Item	Code	Description	See page	QT
01	0521063339	HIGHER		06
02	0571011070	5/8" UNC FASTENER		06
03	0503010027	5/8" SPRING WASHER		12
04	0503010013	5/8" NUT		12

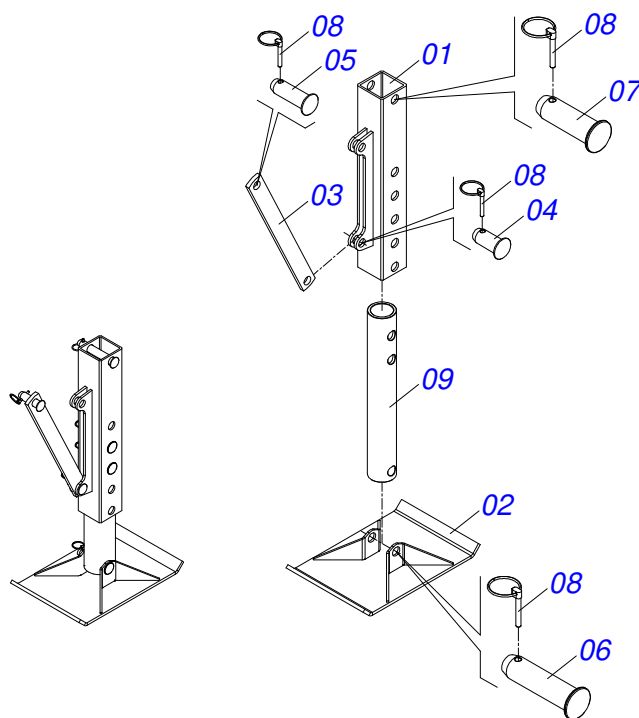


Item	Code	Description	See page	QT
01	0521063510	PLOUGH SUPPORT		01
02	0521063509	FRAME BRACKET		01
03	0571012421	FIXER ARM		01
04	0501014063	25 X 55 COUPLING SHAFT		01
05	0521010596	COUPLING SHAFT		03
06	0521010585	0.9" X 5.9" COUPLING SHAFT		01
07	0521010574	C0.9" X 3.3" COUPLING SHAFT		01
08	0503030085	LOCK PIN		06
09	0571013317	INNER TUBE		01

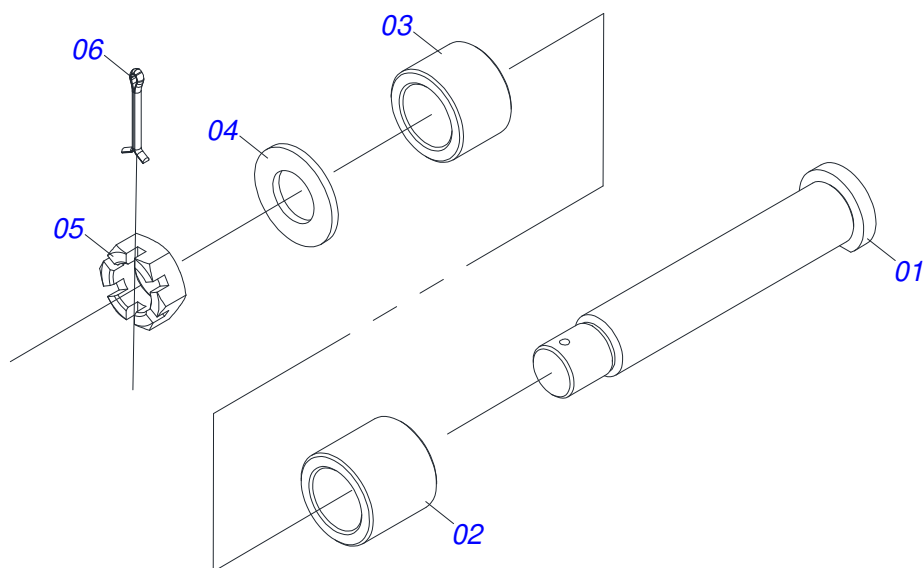


Item	Code	Description	See page	QT
01	0511069442	FRENCH HAND FRONT AXLE		01
02	0551018651	SLEEVE 38 X 56 X 40		01
03	0551018652	SLEEVE		01
04	0501017779	32 X 60 X 4.75 FLAT WASHER		01
05	0503011052	1.1/4" X 0.77" CASTLE NUT		01
06	0503010038	3/16 X 2 COTTERPIN		01

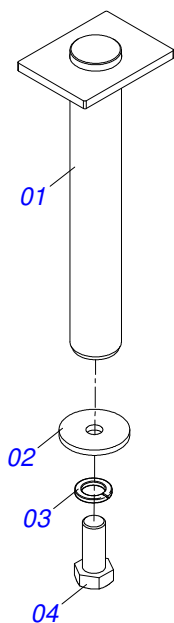


Item	Code	Description	See page	QT
01	0521062244	PIVOT SHAFT		01
02	0551019529	FLAT WASHER		01
03	0503010027	5/8" SPRING WASHER		01
04	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		01

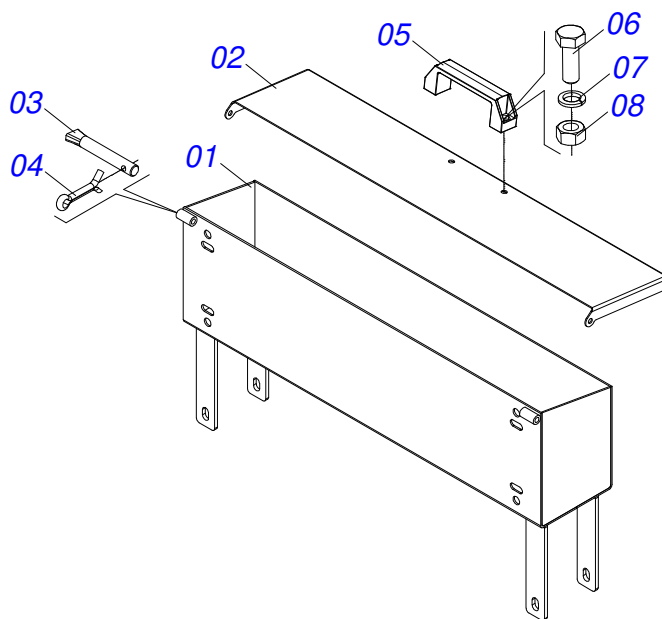


Item	Code	Description	See page	QT
01	0521063662	BOX OF TOOLS		01
02	0551018356	BOX OF TOOLS COVER ASSY		01
03	0521010528	0.3" X 1.6" COUPLING SHAFT		02
04	0503010140	1/8" X 3/4" COTTERPIN		02
05	0503011907	PMC 594-S NYLON LUG		01
06	0503010358	5/16" X 5/8" BOLT		02
07	0503010179	5/16" ZN SPRING WASHER		02
08	0503010337	5/16" NUT		02

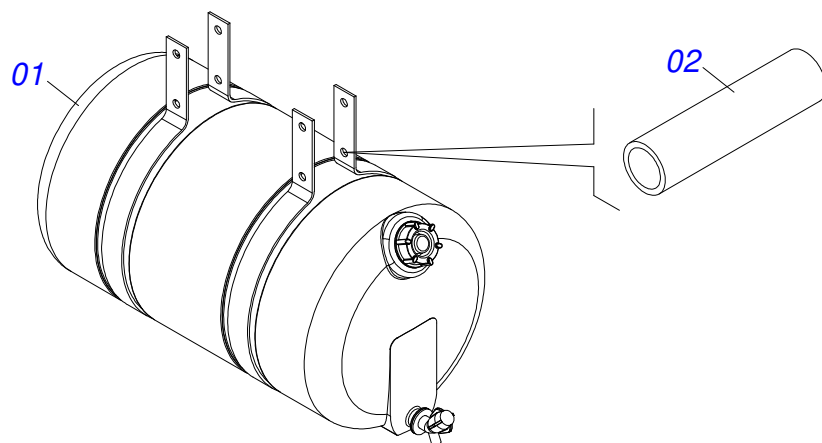


Item	Code	Description	See page	QT
01	0503014820	COROTE BLACK WATER		01
02	0571014702	COROTE SUPPORT GLOVE		02

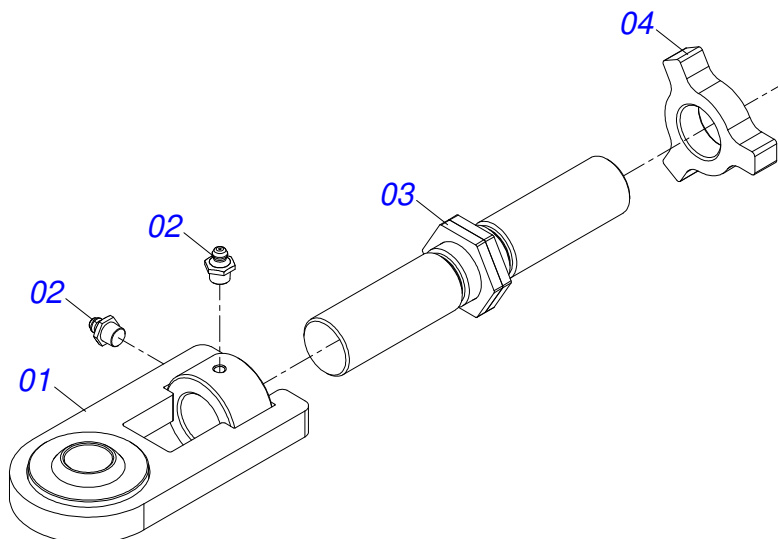

Item	Code	Description	See page	QT
01	0521062617	NUT FIXER		01
02	0503010002	1800 GREASE FITTING		02
03	0501078990	TURNBUCLE AXLE		01
04	0561019879	LOCK ATTACHMENT BAR		01

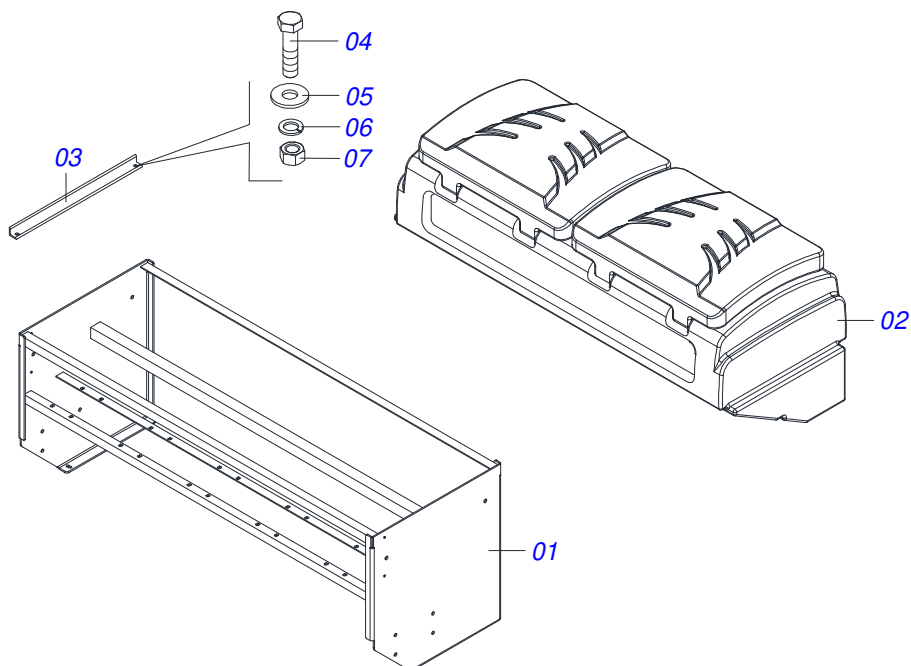


Item	Code	Description	See page	QT
01	0511069813	RH SEED BOX SIDE SUPPORT		01
02	0503060642	COVER BOX RIGHT FERTILIZER		01
03	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		02
04	0503010849	3/8" X 1-1/2" BOLT		04
05	0501010984	FLAT WASHER		08
06	0503010025	3/8" SPRING WASHER		04
07	0503010026	3/8" NUT		04

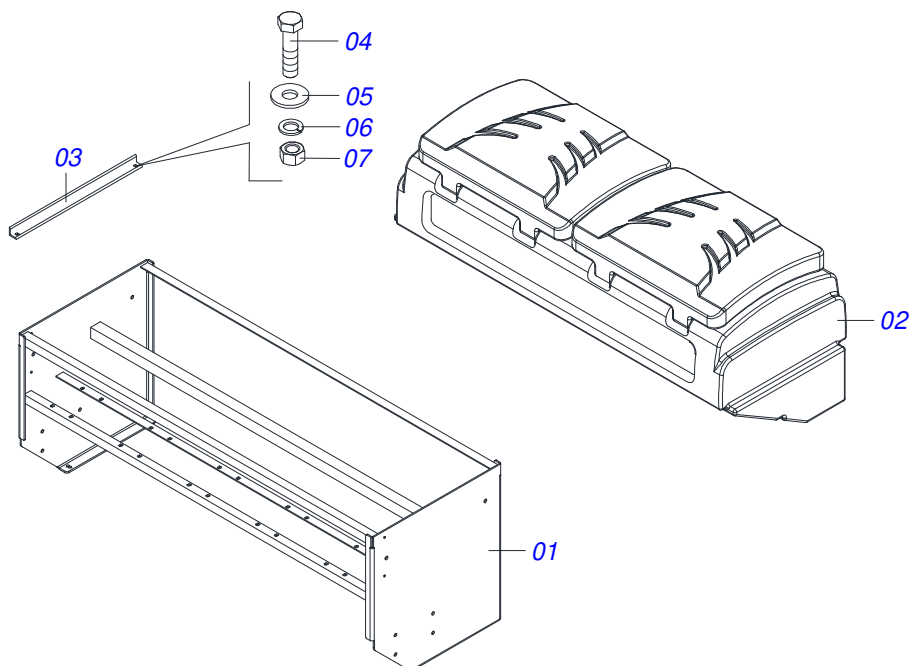

Item	Code	Description	See page	QT
01	0521062331	SUPPORT FERTILIZ BOX		01
02	0503060642	COVER BOX RIGHT FERTILIZER		01
03	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		02
04	0503010849	3/8" X 1-1/2" BOLT		04
05	0501010984	FLAT WASHER		08
06	0503010025	3/8" SPRING WASHER		04
07	0503010026	3/8" NUT		04

COVER ASSY


0511053377

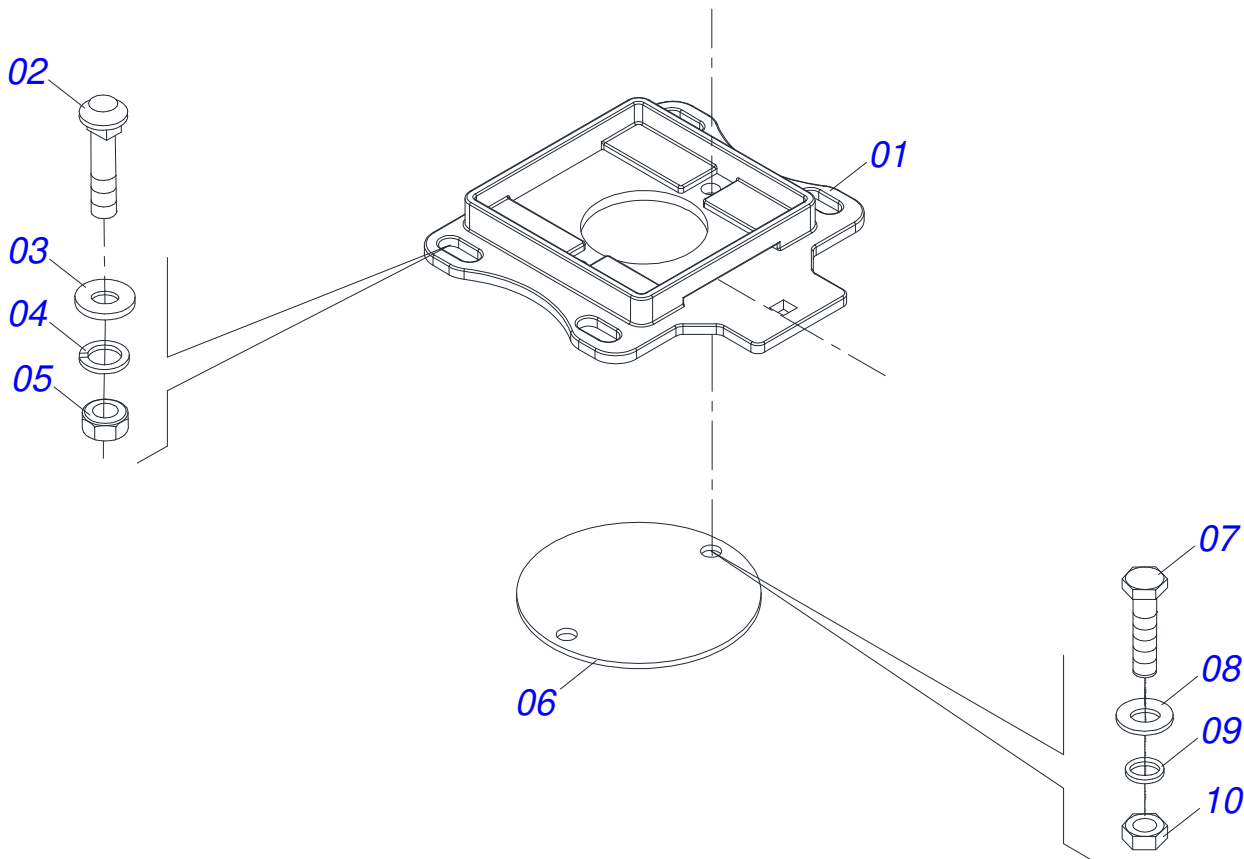

Item	Code	Description	See page	QT
01	0502012732	DUCT BODY	01	
02	0501010942	3/8" X 1-1/4" BOLT	04	
03	0501010984	FLAT WASHER	04	
04	0503010025	3/8" SPRING WASHER	04	
05	0503010026	3/8" NUT	04	
06	0571013983	SEED CONDUCTOR COVER	01	
07	0503011087	3/8" X 1" BOLT	02	
08	0501013518	FLAT WASHER	02	
09	0503010025	3/8" SPRING WASHER	02	
10	0503010026	3/8" NUT	02	

NYLON LUG ASSY


0511053323

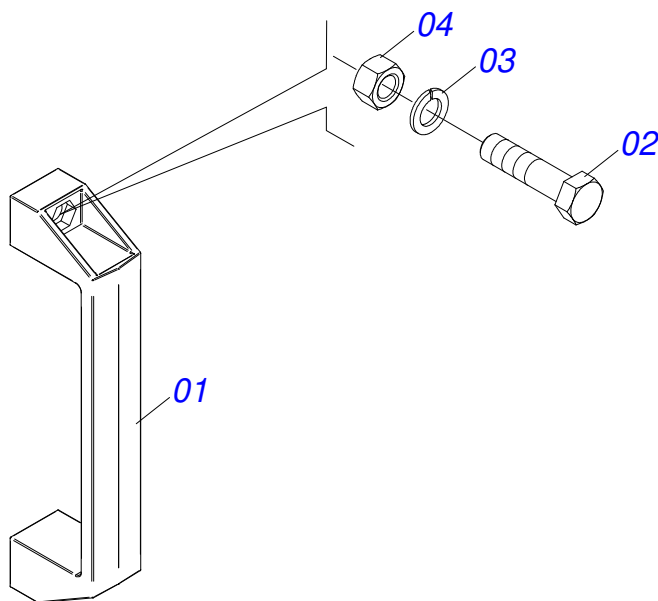


Item	Code	Description	See page	QT
01	0503011957	NYLON LUG		01
02	0503010365	NUT		02
03	0503010179	5/16" ZN SPRING WASHER		02
04	0503010337	5/16" NUT		02

ASSY SIDE LADDER

0511053320

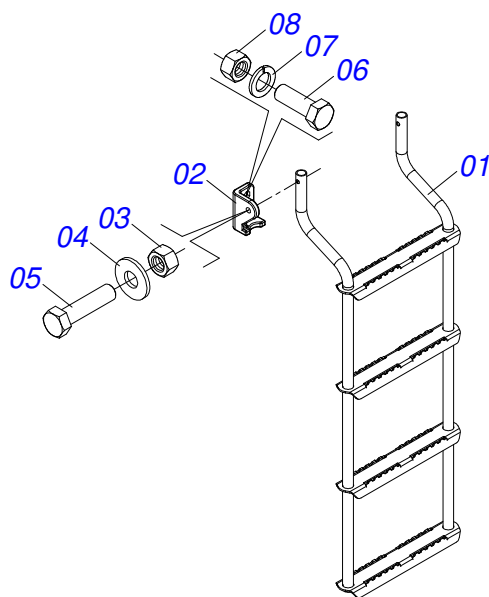

Item	Code	Description	See page	QT
01	0511069819	SIDE LADDER		01
02	0502012742	FIXER SUPPORT LADDER		02
03	0503013357	3/8" SELF-ADJUSTING NUT		02
04	0501010984	FLAT WASHER		02
05	0503011179	3/8" X 2-1/4" BOLT		02
06	0503010237	3/8" X 1" BOLT		04
07	0503010025	3/8" SPRING WASHER		04
08	0503010026	3/8" NUT		04

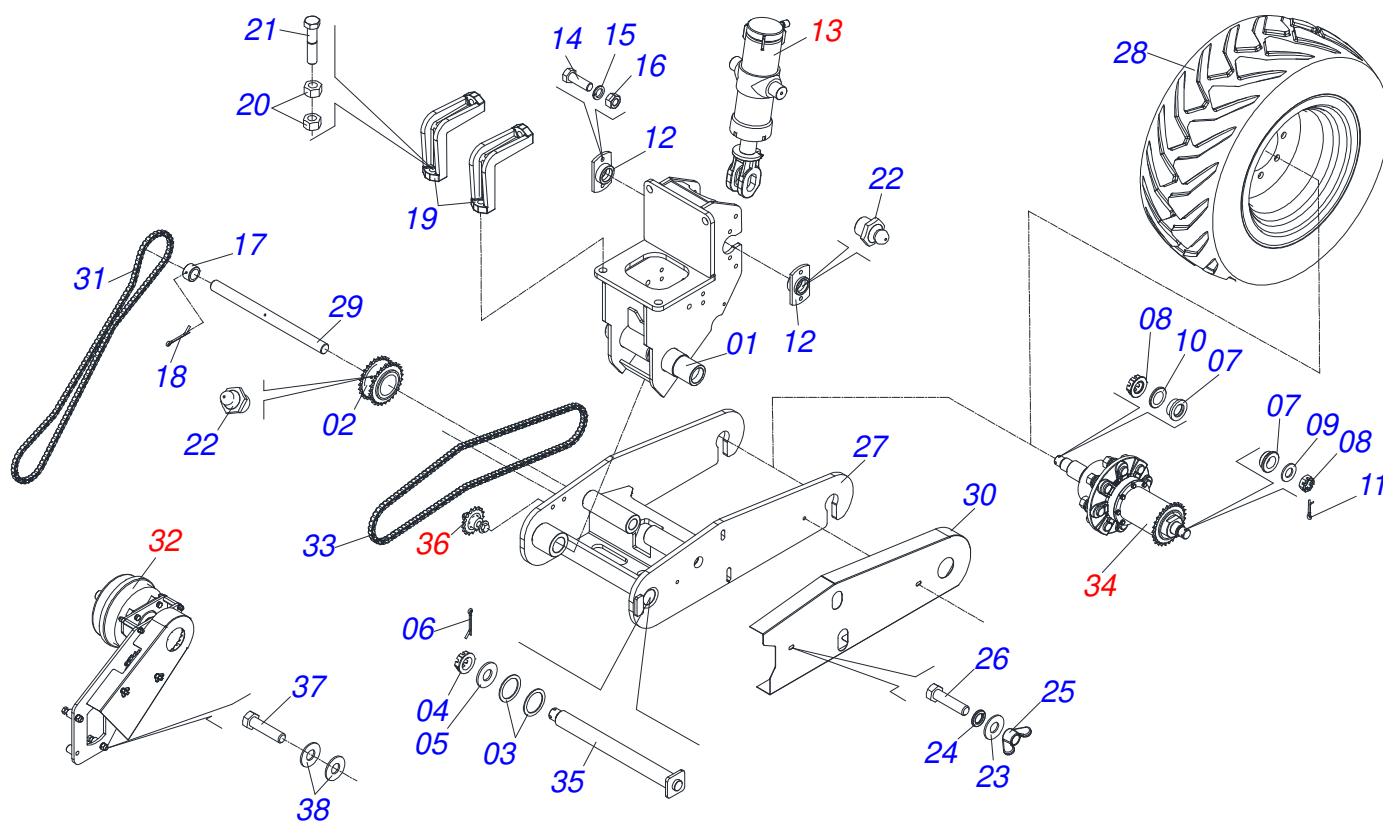


Item	Code	Description	See page	QT
01	0521064573	LARGER SUPPORT		01
02	0511068422	WHEEL GEAR DOBLE		01
03	0551018571	FLAT WASHER		02
04	0501010630	1.1/2" CASTLE NUT		01
05	0561019929	FLAT WASHER		01
06	0503011345	1/4" X 3-1/2" COTTERPIN		01
07	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
08	0503011052	1.1/4" X 0.77" CASTLE NUT		02
09	0501017779	32 X 60 X 4.75 FLAT WASHER		02
10	0551014508	FLAT WASHER		01
11	0503010010	1/4" X 2.1/2" COTTERPIN		02
12	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
13	0511058240	HYDRAULIC CYLINDER	65	01
14	0503010920	1/2" X 1.1/2" BOLT		04
15	0503010019	1/2" SPRING WASHER		04
16	0503010060	1/2" NUT		04
17	0551014565	CILINDER FORK SLEVE GUIDES		01
18	0503010067	3/16" X 2.1/2" COTTER PIN		01
19	0502012731	WHEEL HOLDER		02
20	0503010014	3/4" NUT		04
21	0501010195	3/4" X 3-1/2" BOLT		02
22	0503010002	1800 GREASE FITTING		03
23	0501013518	FLAT WASHER		02
24	0503010025	3/8" SPRING WASHER		02
25	0503010209	3/8" UNC BUTTERFLY NUT		02
26	0503010849	3/8" X 1-1/2" BOLT		02
27	0521064550	CARRYING-WHEELS FORK		01
28	0503061624	WHEEL AND TIRE ASSY 13.0/55-16/12LO		01
29	0571015194	Ø34,93 X 490 USAP AXLE		01
30	0561019941	RIGHT PROTECTIVE CAP WHEELS		01
31	0503014857	50-1 X CHAIN X 122 LINK + REDUCION		01

WHEELS RIGHT TRANSMISSION

0521043452


Item	Code	Description	See page	QT
32	0511054500	TRANSMISSION EXCHANGE RIGHT		01
33	0503014086	50-1 X 123 CHAIN LINK + MENDING		01
34	0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR		01
35	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
36	0511054464	WHEEL FORK TENSIONER		02
37	0503011198	C3/4" X 6" SCREW		02
38	0501010322	FLAT WASHER		04

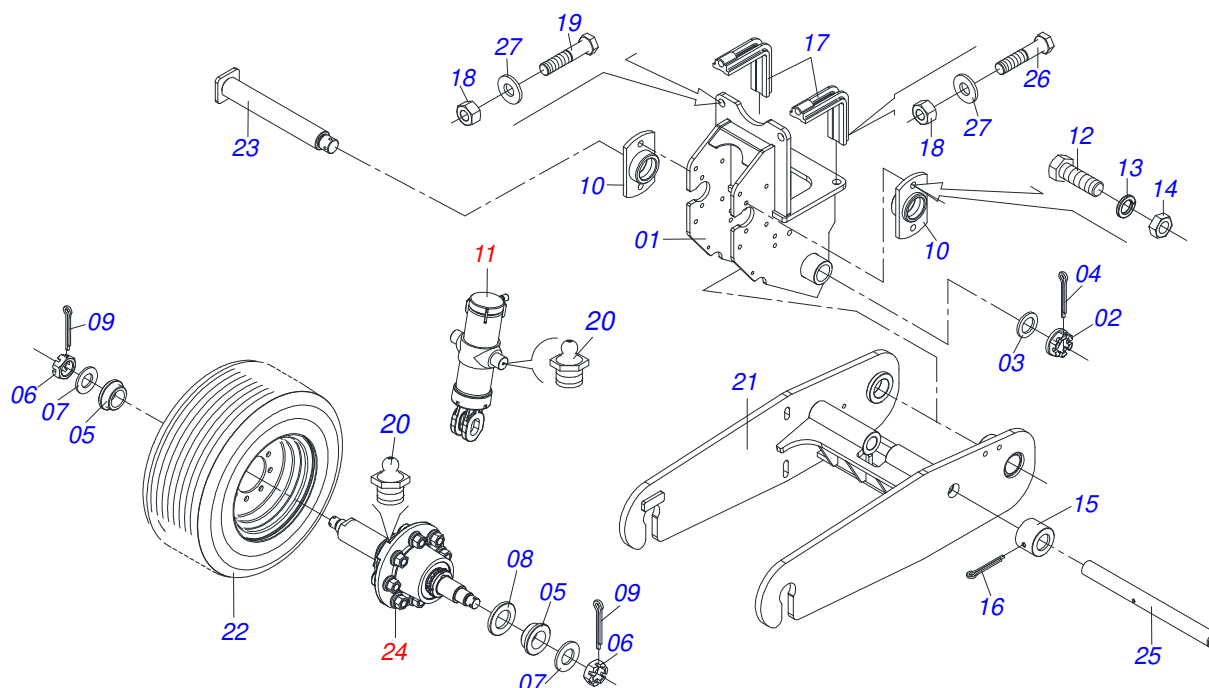

Item	Code	Description	See page	QT
01	0521064573	LARGER SUPPORT		01
02	0501010630	1.1/2" CASTLE NUT		01
03	0561019929	FLAT WASHER		01
04	0503011345	1/4" X 3-1/2" COTTERPIN		01
05	0551014511	CARRYING WHEELS AXLE SLEEVE GUIDES		02
06	0503011052	1.1/4" X 0.77" CASTLE NUT		02
07	0501017779	32 X 60 X 4.75 FLAT WASHER		02
08	0551014508	FLAT WASHER		01
09	0503010010	1/4" X 2.1/2" COTTERPIN		02
10	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
11	0511058240	HYDRAULIC CYLINDER	65	01
12	0503010920	1/2" X 1.1/2" BOLT		04
13	0503010019	1/2" SPRING WASHER		04
14	0503010060	1/2" NUT		04
15	0551014565	CILINDER FORK SLEEVE GUIDES		01
16	0503010067	3/16" X 2.1/2" COTTER PIN		01
17	0502012731	WHEEL HOLDER		02
18	0503010014	3/4" NUT		04
19	0501010195	3/4" X 3-1/2" BOLT		02
20	0503010002	1800 GREASE FITTING		03
21	0521064550	CARRYING-WHEELS FORK		01
22	0503061624	WHEEL AND TIRE ASSY 13.0/55-16/12LO		01
23	0571015194	Ø34.93 X 490 USAP AXLE		01
24	0511054495	WHEEL WITHOUT TIRE WITHOUT TRANSMISSION	63	01
25	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
26	0503011198	C3/4" X 6" SCREW		02
27	0501010322	FLAT WASHER		04

RIGHT GEAR BOX ASSY

0511051754

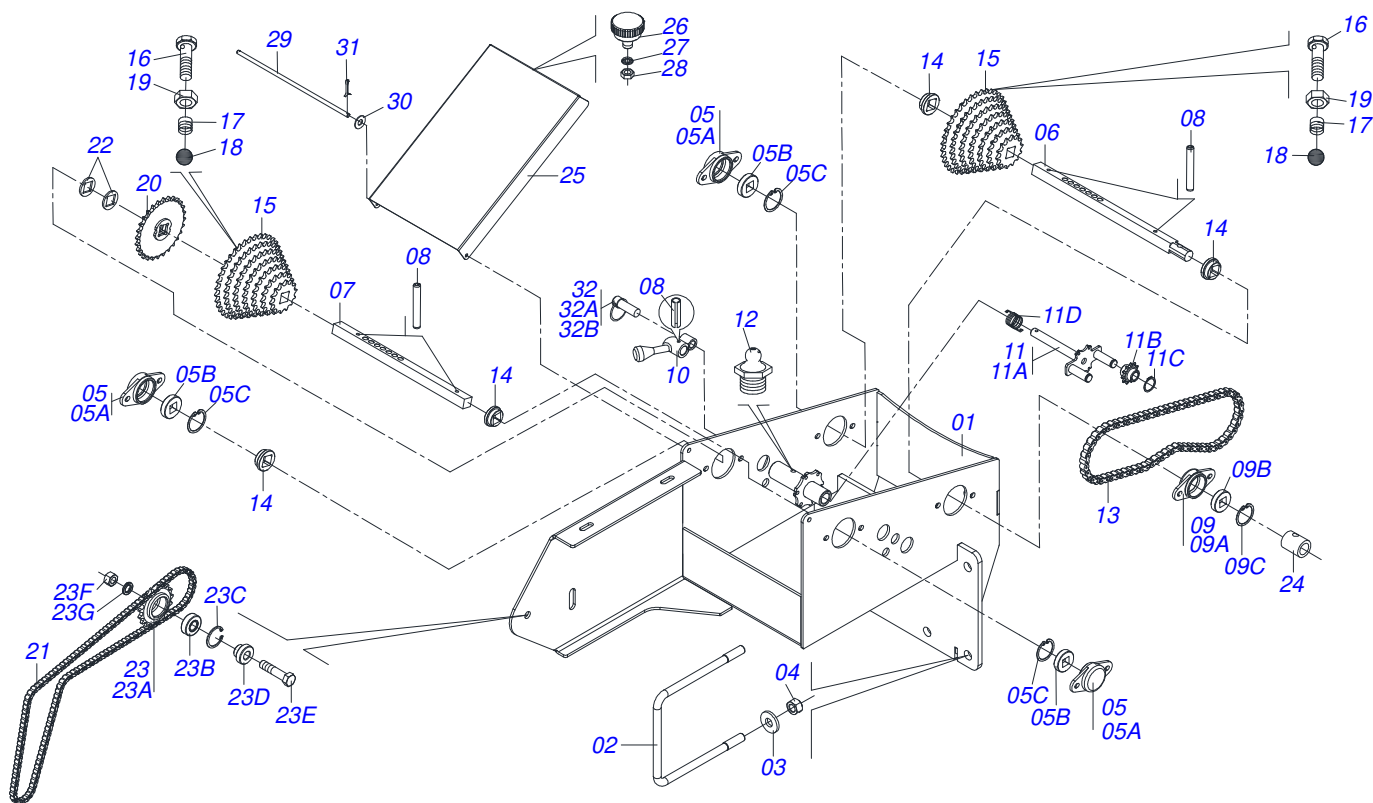

Item	Code	Description	See page	QT
01	0521063025	RH SIDE GEAR BOX SUPPORT	01	
02	0551015037	5/8" UNC X 210 X 198 FASTENER	02	
03	0503010027	5/8" SPRING WASHER	04	
04	0503010013	5/8" NUT	04	
05	0501056271	BEARING CLOSED	03	
05A	0502012310	GEAR BOX CLOSE BEARING	01	
05B	0503013462	BEARING WITH BALL BEARING	01	
05C	0503011105	SEAL RING	01	
06	0551018627	SIDE GEAR BOX DRIVER AXLE	01	
07	0551018581	CENTRAL GEAR BOX DRIVEN AXLE	01	
08	0503010292	0.2" X 1.6" SPRING PIN	05	
09	0501056444	BEARING WITH ROLLING	01	
09A	0502011697	BEARING OF THE GEAR BOX	01	
09B	0503013462	BEARING WITH BALL BEARING	01	
09C	0503011105	SEAL RING	01	
10	0502011758	REAR TENSIONER LEVER	01	
11	0501052776	CHAIN TENSIONER RIGHT ASSY GREATEST	01	
11A	0511061794	CHAIN TENSIONER	01	
11B	0503031805	11Z 1/2" GEAR	02	
11C	0503010302	501019 SEAL RING	02	
11D	0503031366	RIGHT TWISTED SPRING RECAMBIO	01	
12	0503010002	1800 GREASE FITTING	01	
13	0503012204	40-1 CHAIN X 82 LINK + RED	01	
14	0503030303	SUPPORT WASHER	04	
15	0502040868	GEAR CONE REPLACEMENT	02	
16	0503010395	1/2" X 1-1/4" BOLT	02	
17	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING	02	
18	0503012389	1/2 BALL	02	
19	0503010060	1/2" NUT	02	
20	0511064536	28Z GEAR	01	
21	0503016097	40-1 X 145 CHAIN LINK + MENDING	01	


RIGHT GEAR BOX ASSY

0511051754


Item	Code	Description	See page	QT
22	0521014167	CONE LOCK		01
23	0501054221	SEED BEARING INTERM LINE		02
23A	0502012367	17Z X P 1/2" GEAR INTERM		01
23B	0503012882	BEARING		01
23C	0503011945	503050 CLAMPING RING (FOR AXLE)		01
23D	0521010454	0.83" X 1.25" X 0.79" SLEEVE		01
23E	0503010905	1/2" X 2-1/4" BOLT		01
23F	0503010019	1/2" SPRING WASHER		01
23G	0503010060	1/2" NUT		01
24	0551018630	CARDAN SHAFT GUIDES SLEEVE		01
25	0551011625	PROTECTION COVER		01
26	0503010386	CABLE		01
27	0503010179	5/16" ZN SPRING WASHER		01
28	0503010337	5/16" NUT		01
29	0551018629	GEAR BOX COVER FIXER ROD		01
30	0501010984	FLAT WASHER		02
31	0503010257	1/8" X 1" COTTERPIN		02
32	0501048790	AXLE WITH LINK ASSY		01
32A	0521012476	GEAR BOX LEVER AXLE		01
32B	0503031369	LINK		01

DRIVE SHAFT


0511053616

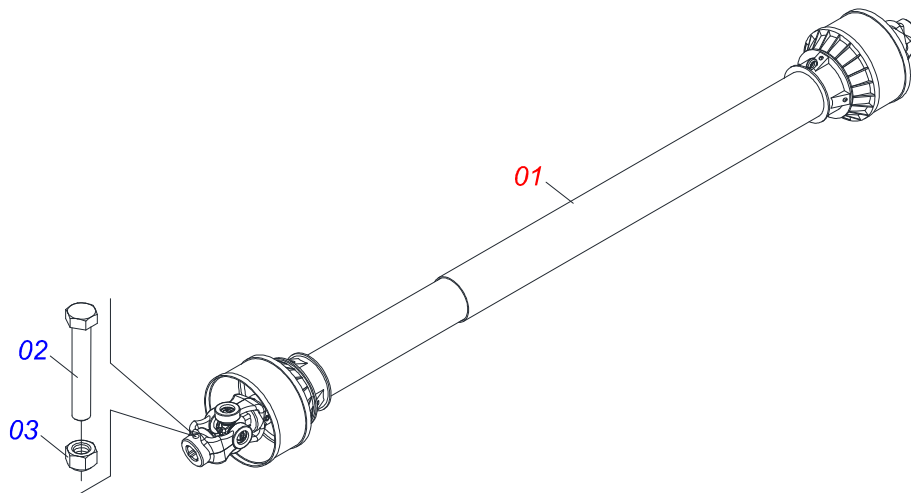


Item	Code	Description	See page	QT
01	0501048200	DRIVE SHAFT		01
02	0503011141	3/8" X 2-3/4" BOLT		02
03	0503013357	3/8" SELF-ADJUSTING NUT		02

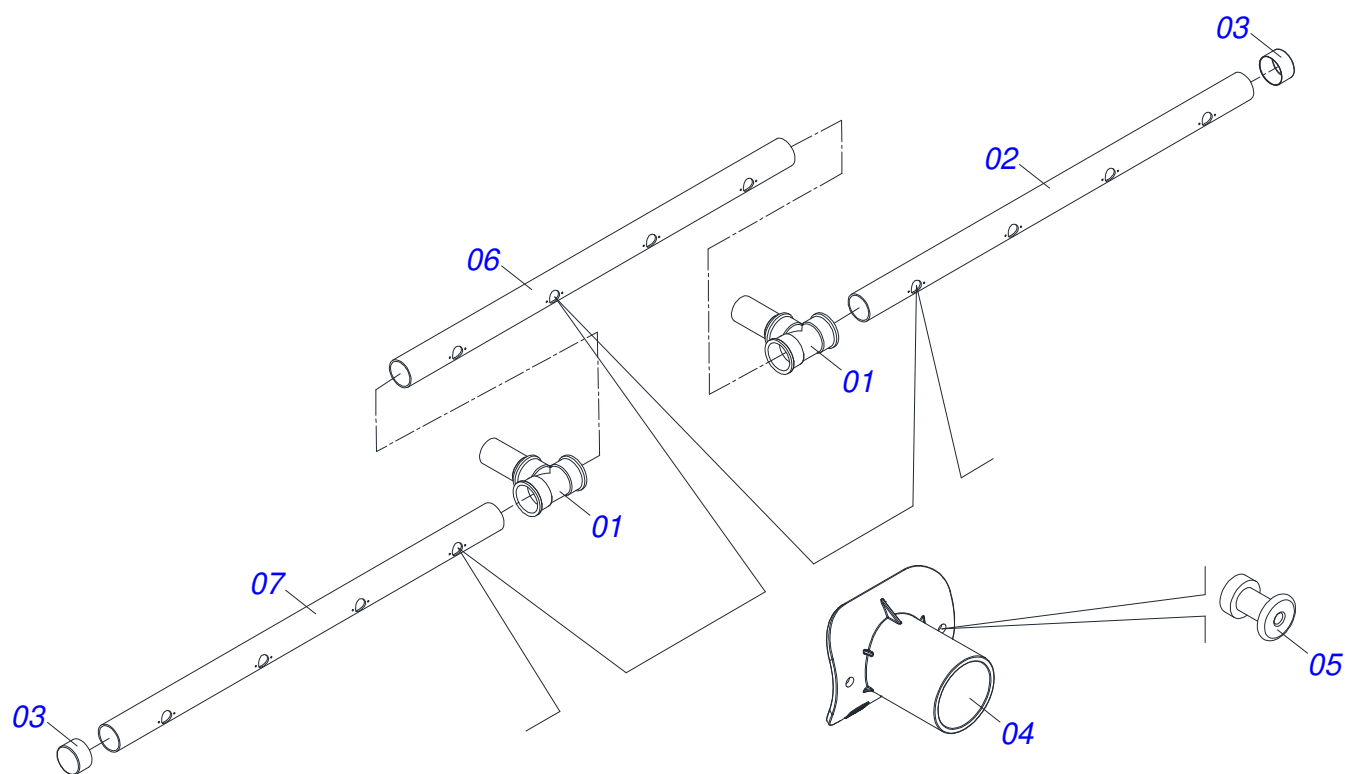


Item	Code	Description	See page	QT
01	0503031102	SUPREME AIR DISTRIBUTOR	02	
02	0571016104	BODY DISTRIBUTOR AR	01	
03	0503012566	COVER KAP 110 YELLOW	02	
04	0503031943	SOCKET	19	
05	0503012856	REBITE POP	38	
06	0571016105	CENTER BODY	01	
07	0571016106	BODY SIDE RIGHT	01	

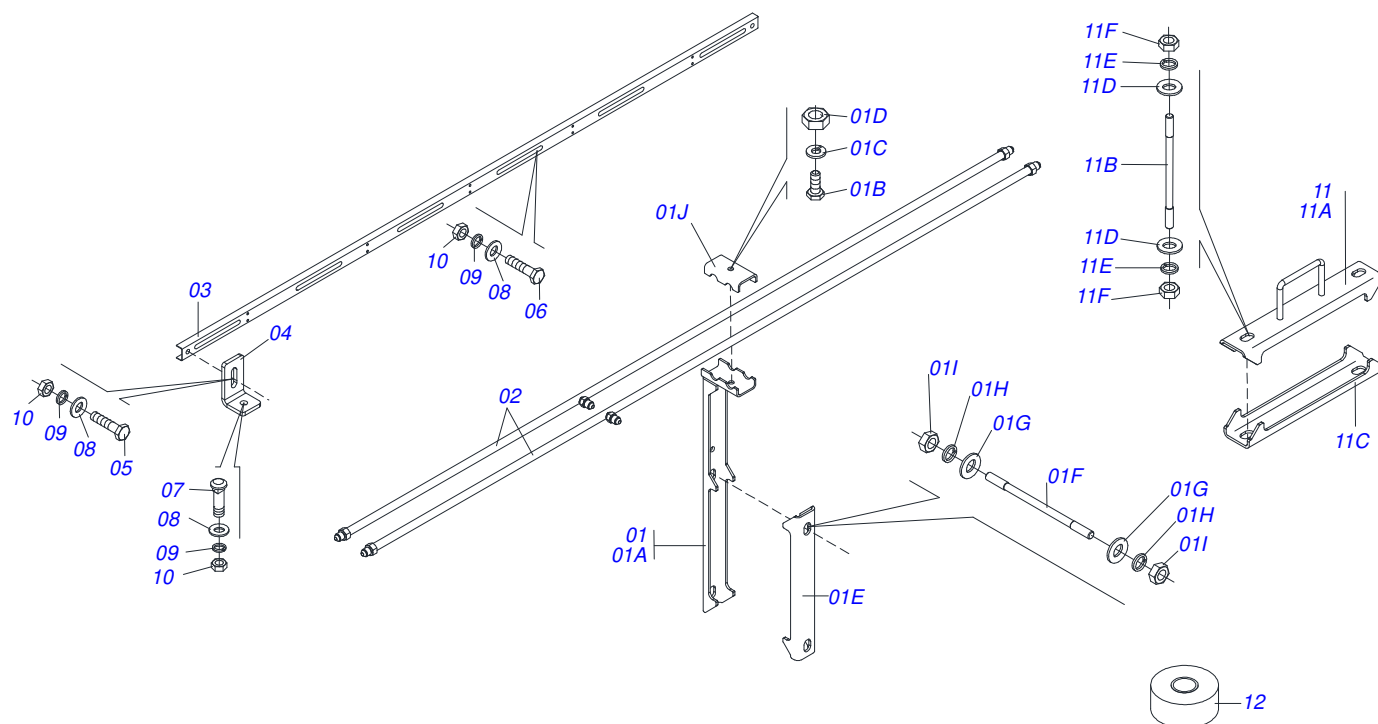


Item	Code	Description	See page	QT
01	0511053655	SIDE DUTY SUPPORT		04
01A	0521064055	SIDE DUTY SUPPORT		01
01B	0503011268	3/8" X 2-1/2" BOLT		01
01C	0503010025	3/8" SPRING WASHER		01
01D	0503010026	3/8" NUT		01
01E	0571013221	SUAPORTE CENTRAL DUTY		01
01F	0571013120	SUPTORTE CONDUCTO		02
01G	0511015705	FLAT WASHER		04
01H	0503010027	5/8" SPRING WASHER		04
01I	0503010013	5/8" NUT		04
01J	0551018637	SMALLEE FASTENER TUBE UPPER		01
02	0521063310	OIL TUBE		02
03	0571013315	GUTTER 25 X 38 X 2420 USAP		03
04	0571013217	FIXER L		06
05	0503011088	3/8" X 1-1/4" BOLT		02
06	0503010849	3/8" X 1-1/2" BOLT		02
07	0501011643	3/8 X 1" BOLT		06
08	0501013518	FLAT WASHER		06
09	0503010025	3/8" SPRING WASHER		10
10	0503010026	3/8" NUT		10
11	0511053729	FRONTAL SUPPORT HOSE		02
11A	0521064195	FRONTAL SUPPORT HOSE		01
11B	0571013120	SUPTORTE CONDUCTO		02
11C	0571013221	SUAPORTE CENTRAL DUTY		01
11D	0511015705	FLAT WASHER		04
11E	0503010027	5/8" SPRING WASHER		04
11F	0503010013	5/8" NUT		04
12	0503013171	SEALING		02

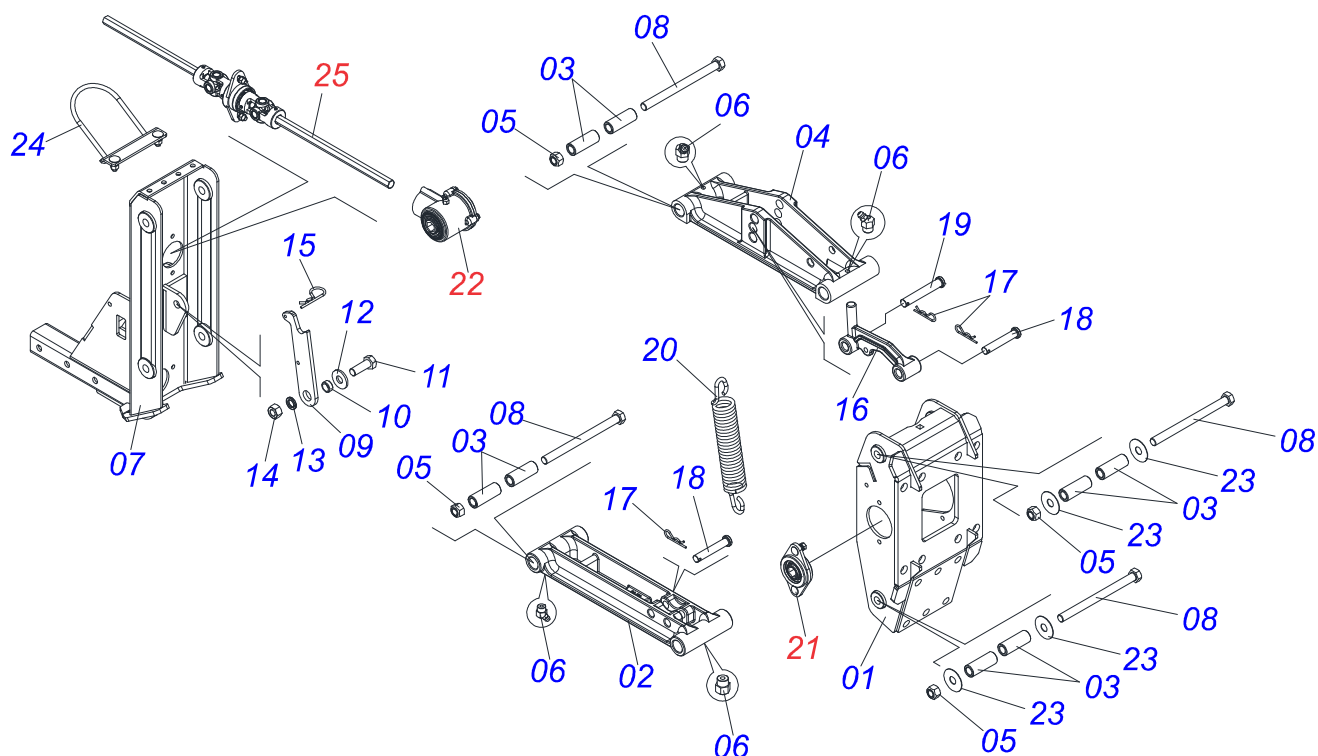


Item	Code	Description	See page	QT
01	0521066030	SEED ROW SUPPORT FRONT		01
02	0502012710	SMALLER LOWER ARM		01
03	0531016194	0.6" X 1" X 2.6" SLEEVE		08
04	0502012749	SEED ARM SUPPORT ROW		01
05	0503012412	5/8 UNC SELF LOCKING NUT		04
06	0503010003	1845 GREASE FITTING		04
07	0521066168	FRAME SEED LINE		01
08	0503013077	5/8" X 8" BOLT		04
09	0571012310	ROW LOCK BODY		01
10	0551015826	SEED ROW LOCK GUIDE SLEEV		01
11	0503010232	5/8" X 1.3/4" BOLT		01
12	0501012140	FLAT WASHER		01
13	0503010027	5/8" SPRING WASHER		01
14	0503010013	5/8" NUT		01
15	0503030285	HAIR PIN		01
16	1902012568	UPPER ROCKER ARM		01
17	0503030168	HAIR PIN		03
18	0503033728	FIXED SPRING PIN		02
19	0571014704	UPPER AXLE		01
20	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
21	0501057684	SIDE BEARING FRONT SUPPORT SEED LINE	32	01
22	0511054884	TRANSMISSION BOX	35	01
23	0531015184	FLAT WASHER		04
24	0511052300	CONDUCTOR SUPPORT ASSY SEED	36	01
25	0511057223	SHORT TRANSMISSION ASSY AXLE		01

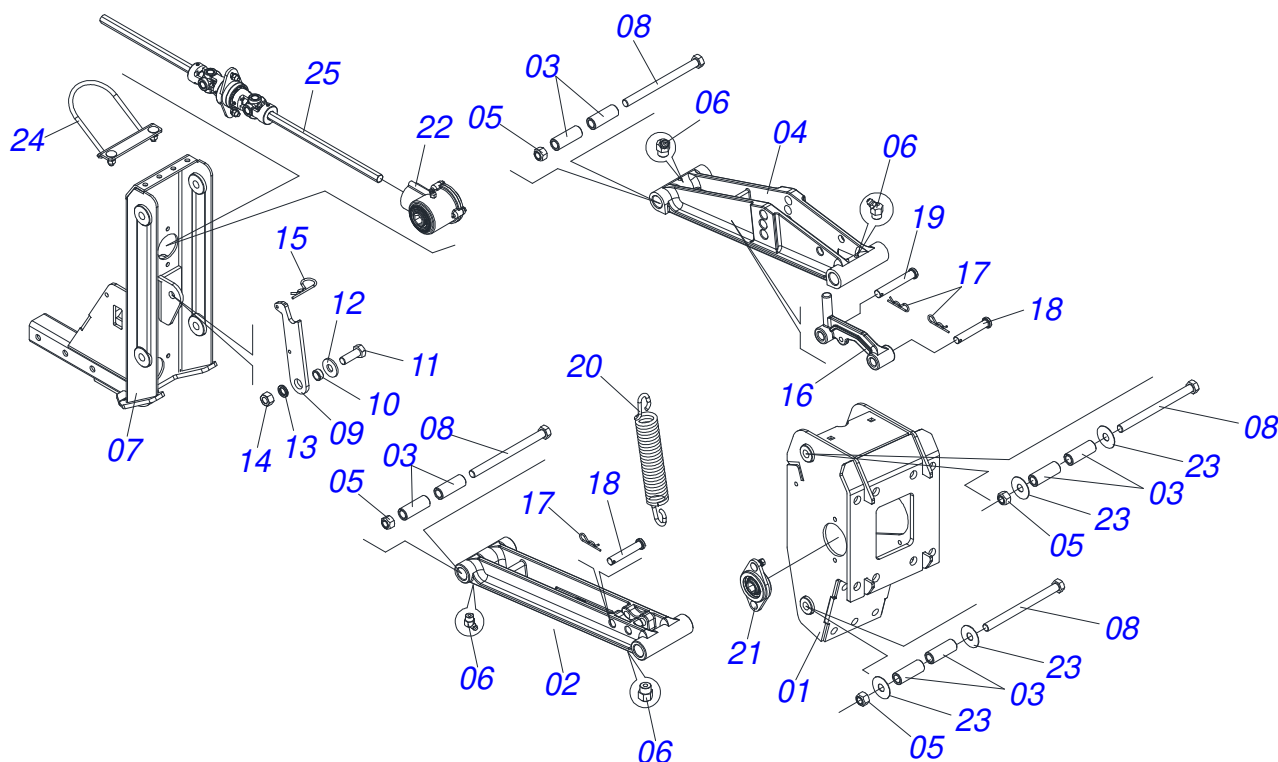


Item	Code	Description	See page	QT
01	0521066029	SEED ROW SUPPORT FRONT		01
02	0502012709	LARGER LOWER ARM		01
03	0531016194	0.6" X 1" X 2.6" SLEEVE		08
04	0502012750	SEED ARM SUPPORT ROW		01
05	0503012412	5/8 UNC SELF LOCKING NUT		04
06	0503010003	1845 GREASE FITTING		04
07	0521066168	FRAME SEED LINE		01
08	0503013077	5/8" X 8" BOLT		04
09	0571012310	ROW LOCK BODY		01
10	0551015826	SEED ROW LOCK GUIDE SLEEVE		01
11	0503010232	5/8" X 1.3/4" BOLT		01
12	0501012140	FLAT WASHER		01
13	0503010027	5/8" SPRING WASHER		01
14	0503010013	5/8" NUT		01
15	0503030285	HAIR PIN		01
16	1902012568	UPPER ROCKER ARM		01
17	0503030168	HAIR PIN		03
18	0503033728	FIXED SPRING PIN		02
19	0571014704	UPPER AXLE		01
20	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
21	0501057684	SIDE BEARING FRONT SUPPORT SEED LINE	32	01
22	0511054884	TRANSMISSION BOX	35	01
23	0531015184	FLAT WASHER		04
24	0511052300	CONDUCTOR SUPPORT ASSY SEED	36	01
25	0511057224	LONG TRANSMISSION ASSY AXLE		01

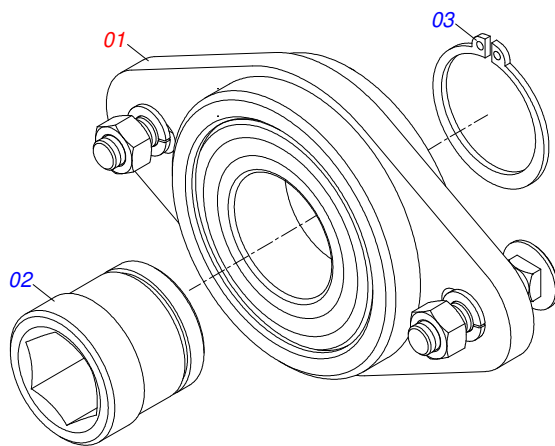

Item	Code	Description	See page	QT
01	0501053566	BEARING SEED LINE	33	01
02	0551015804	BEARING AXLE BODY		01
03	0503010707	501030 CLAMPING RING (FOR AXLE)		01

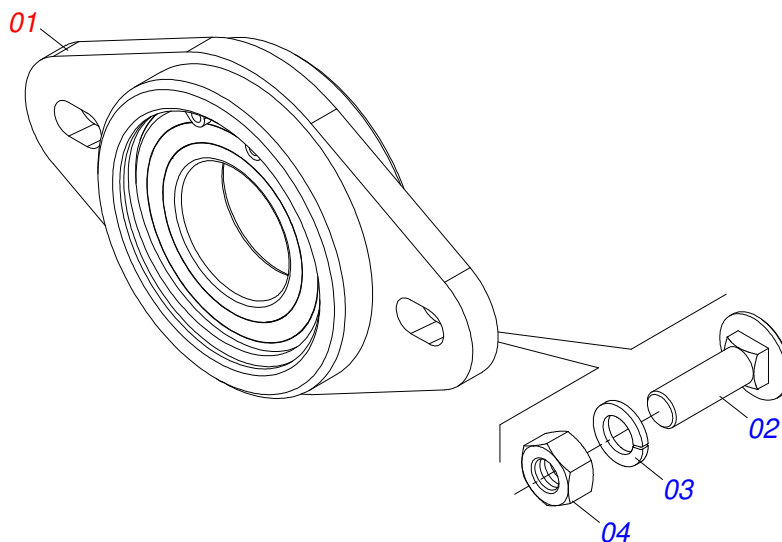


Item	Code	Description	See page	QT
01	0511059312	BEARING TRANSMISSION SEED	34	01
02	0503011953	5/16" X 1" BOLT		02
03	0503010179	5/16" ZN SPRING WASHER		02
04	0503010337	5/16" NUT		02

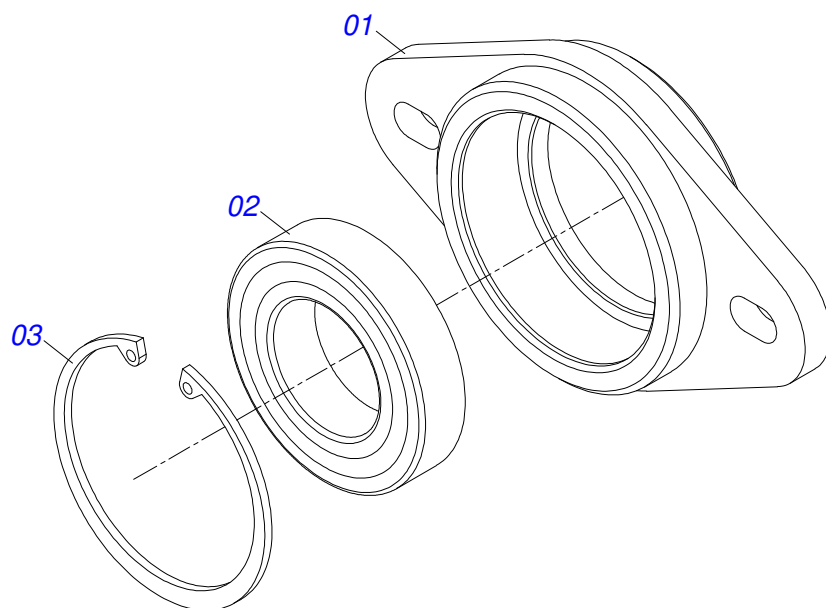


Item	Code	Description	See page	QT
01	0502012030	HOUSING BEARING		01
02	0503012861	6006 2RS BALL BEARING		01
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01

TRANSMISSION BOX

0511054884

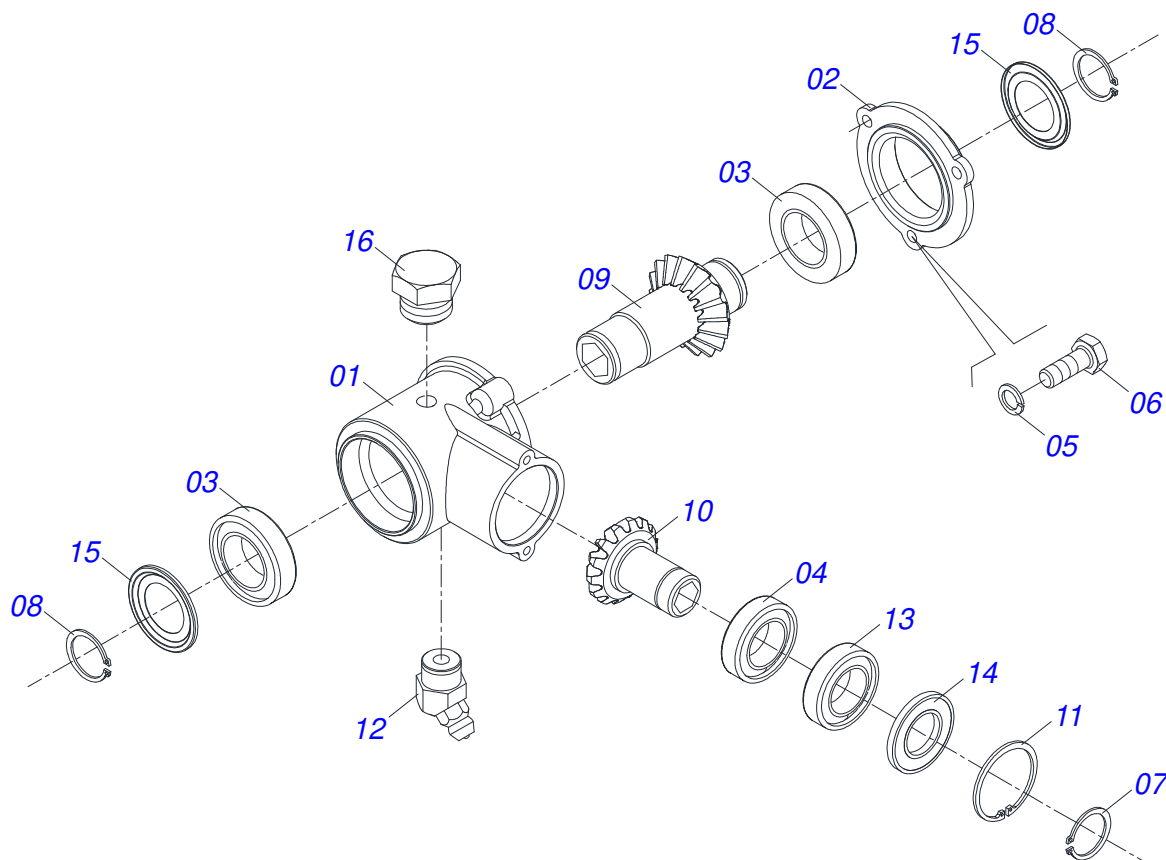


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0502040857	CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503010003	1845 GREASE FITTING		01
13	0503011409	6005 Z BALL BEARING		01
14	0503017008	SEAL RING		01
15	0503017007	SEAL RING		02
16	0511017907	1/8" BSPT X 6 PLUG		01

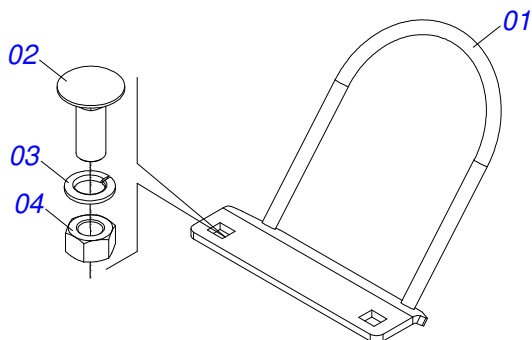

Item	Code	Description	See page	QT
01	0521063444	CONDUCTOR SUPPORT SEED		01
02	0501011643	3/8 X 1" BOLT		02
03	0503010025	3/8" SPRING WASHER		02
04	0503010026	3/8" NUT		02

DISC BLADE ASSY


0511047164

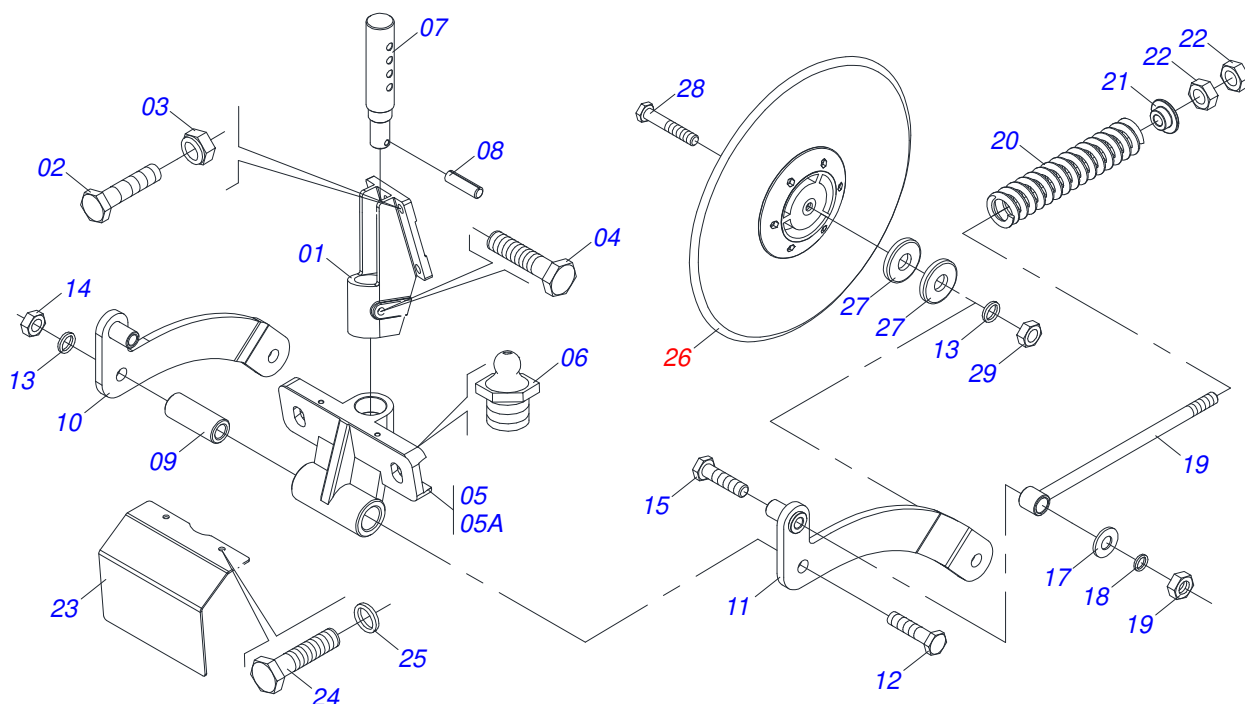


Item	Code	Description	See page	QT
00	0511047164	DISC BLADE ASSY	37	01
01	0502012470	UPPER SUPPORT		01
02	0503010232	5/8" X 1.3/4" BOLT		04
03	0503012412	5/8 UNC SELF LOCKING NUT		04
04	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		01
05	0501058374	BOTTOM BRACKET		01
05A	0502012713	BOTTOM BRACKET		01
06	0503010002	1800 GREASE FITTING		02
07	0561014164	SUPPORT DISC AXLE		01
08	0503010361	SPRING PIN		01
09	0571012371	SLEEVE 20 X 34,93 X 130		01
10	0521063500	RIGHT ARM OF THE BLADE DISC		01
11	0521063499	LH ARM BLADE DISC		01
12	0501013475	3/4 UNC X 7.1/2 C S G.5 ZNBOLT		01
13	0503011442	3/4" SPRING WASHER		02
14	0503010014	3/4" NUT		01
15	0501011541	5/8" X 3" BOLT		02
16	0511068751	SPRING REGULACION		02
17	0501010301	FLAT WASHER		02
18	0503011445	SPRING WASHER		02
19	0503010013	5/8" NUT		02
20	0503031575	2.5"X 12" X 0.5" COMPRESSION SPRING		02
21	0551015883	SPRING GUIDES SLEVE		02
22	0503010014	3/4" NUT		04
23	0571012370	PROTECTION FRONT		01
24	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		02
25	0503011444	SPRING WASHER		02
26	0511052299	BLADE DISC	38	01
27	0571012224	DUST CLOAK		02
28	0503016485	BOLT 3/4		01
29	0503010335	3/4"NUT		01

BLADE DISC


0511052299

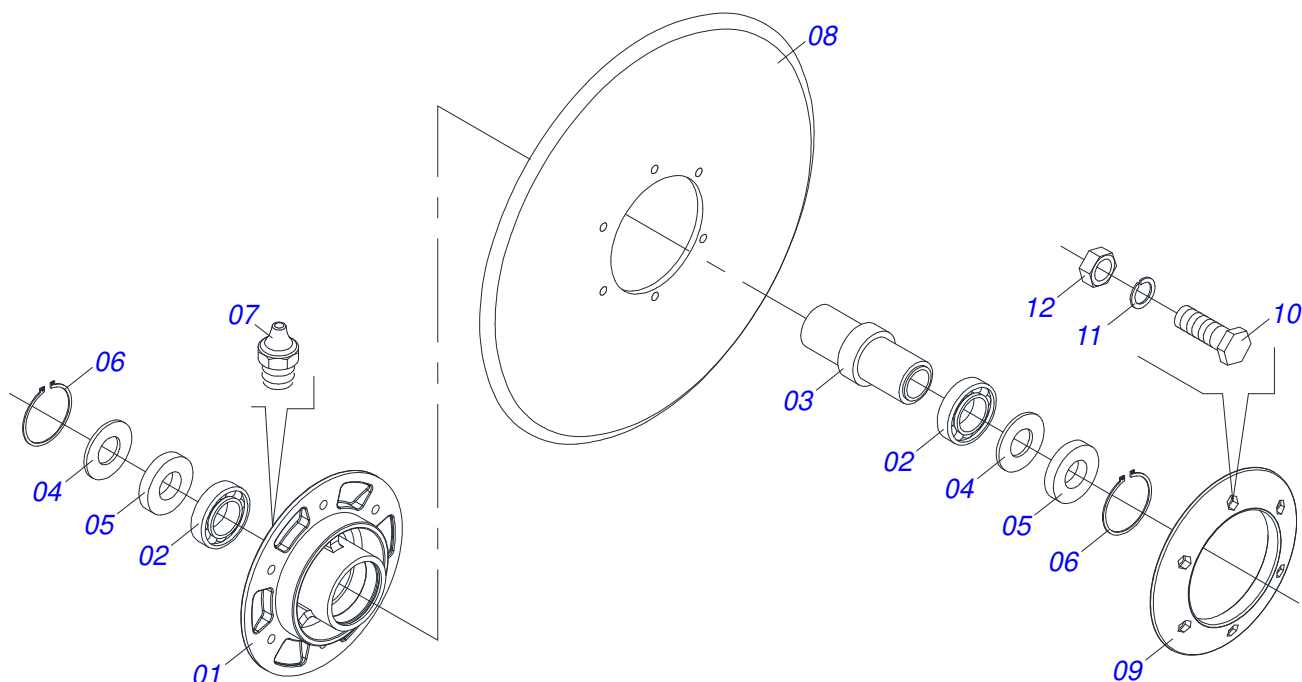

Item	Code	Description	See page	QT
01	0502011562	DC BOX		01
02	0503010276	6206 BALL BEARING		02
03	0571012223	BEARING CUBE		01
04	0503030832	FLAT WASHER		02
05	0503012417	SEAL		02
06	0503011800	SEAL RING		02
07	0503010691	1/4" GREASE FITTING		01
08	0603027851	20" X 0.2" FLAT PLAIN DISC		01
09	0502020641	BLADE DISC FLANGE		01
10	0503010371	5/16" X 1" BOLT		06
11	0503011444	SPRING WASHER		06
12	0503010337	5/16" NUT		06

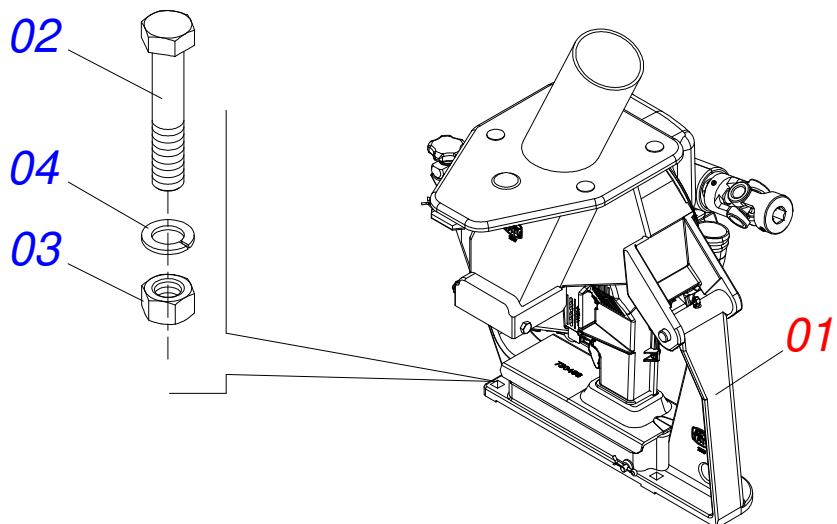


Item	Code	Description	See page	QT
01	0511057572	PRECISION PLANTING V-SET2 USAP SUP	40	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010026	3/8" NUT		04
04	0503010025	3/8" SPRING WASHER		04

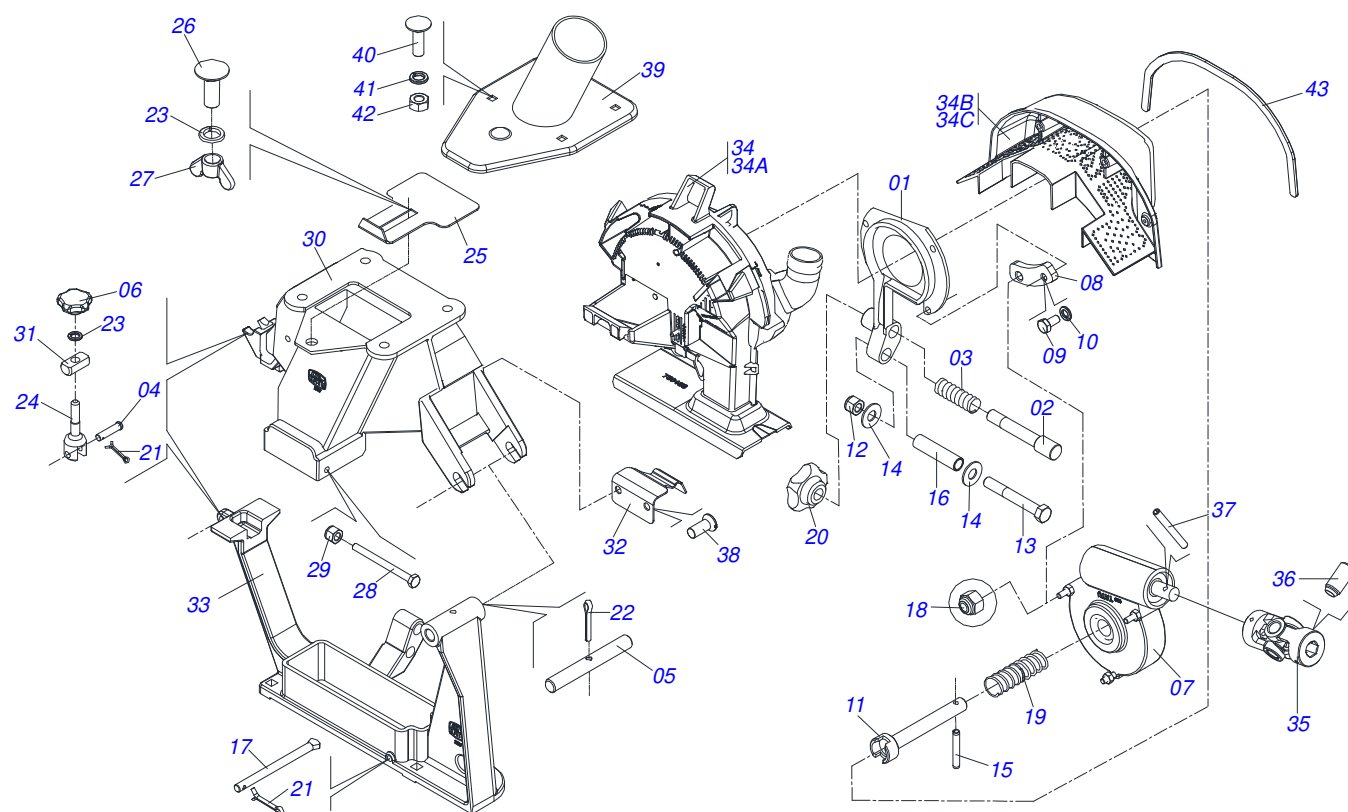


Item	Code	Description	See page	QT
01	0571019614	JOINT PNEUMATICA SUPPORT	01	
02	0571017899	PIN LOCK PP	01	
03	0503030190	0.5" X 1.6" X 0.05" SPRING	01	
04	0571014024	FAST BOLT GUIDE AXLE	02	
05	0571017897	AXLE ARTICULATION PRECISION PLANTING	01	
06	0503010293	BAQUELITE MANIPULACION	01	
07	0511057503	CAJA DE TRANSMISIÓN DERECHA PRECISION 41 PLANTING	01	
08	0571019027	FIXER SHIPPING BOX	01	
09	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN	03	
10	0503015110	M06 SPRING WASHER	03	
11	0571017894	PIN DRAG PRECISION PLANTING	01	
12	0503013357	3/8" SELF-ADJUSTING NUT	01	
13	0503015752	3/8" X 2" BOLT	01	
14	0501013518	FLAT WASHER	02	
15	0503015356	SPRING PIN	01	
16	0571017896	SLEEVE ARTICULATION PRECISION PLANTING	01	
17	0571017895	PIN FIXER CONDUCTOR P.P	01	
18	0503011776	M6 SELF ADJUSTINGNUT	03	
19	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING	02	
20	0503010293	BAQUELITE MANIPULACION	01	
21	0503010140	1/8" X 3/4" COTTERPIN	04	
22	0503010131	3/16" X 1-1/2" COTTERPIN	01	
23	0503010025	3/8" SPRING WASHER	01	
24	0581011225	FIXER P PLANTING CONTR CPRA	01	
25	0571019491	SLUICE PNEUMATIC PRECISION PLANTING	01	
26	0501011643	3/8 X 1" BOLT	01	
27	0503010209	3/8" UNC BUTTERFLY NUT	01	
28	0503012721	1/4" X 4" BOLT	01	
29	0503012880	1/4" UNC SELF ADJUSTING NUT	01	
30	0502012807	SUPPORT BOX PRECISION PLANTING	01	
31	0581011226	FIXER CLOSING P PLANTING CONTR CPRA	01	


Item	Code	Description	See page	QT
32	0571019489	CLAMP PRECISION PLANTING		01
33	0502012799	UPPER SUPPORT BASE PNEUMATIC PRECISION PLANTING		01
34	0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN DISC		01
34A	0503062405	SEED DISTRIBUTOR		01
34B	0503062407	SET SOYBEAN DISTRIBUTION		01
34C	0571019613	STRAW PRECISION PLANTING SHIELD		01
35	0561014778	HEX UNIVERSAL JOINT		01
36	0503013958	1/4" X 1" BOLT		02
37	0503011855	0.2" X 1.8" SPRING PIN		01
38	0503818139	BOLT		02
39	0571019491	SLUICE PNEUMATIC PRECISION PLANTING		01
40	0503011953	5/16" X 1" BOLT		04
41	0503010179	5/16" ZN SPRING WASHER		04
42	0503010337	5/16" NUT		04
43	0503037390	PACKING FOR PLANTING		04

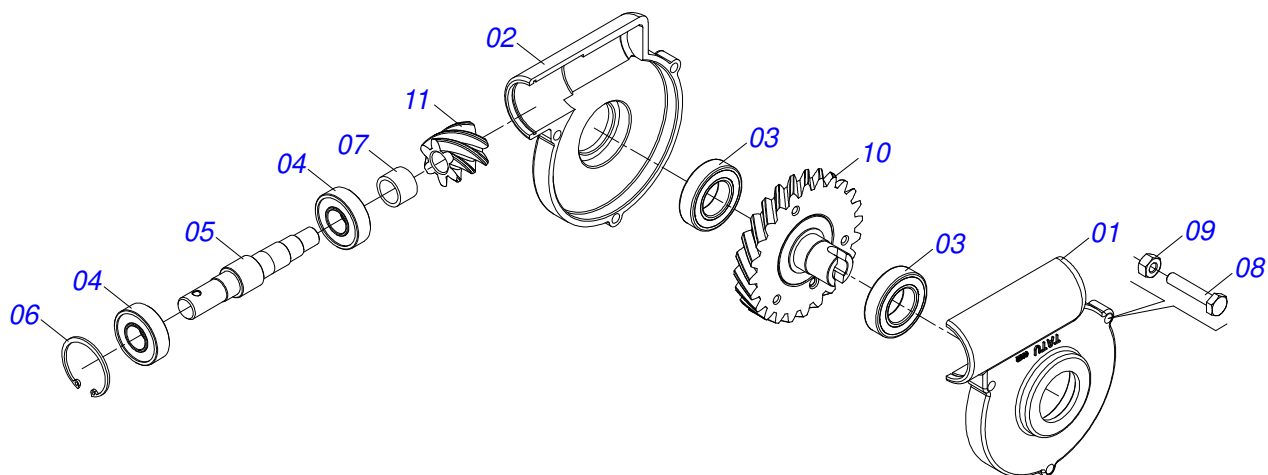


Item	Code	Description	See page	QT
01	0502050052	LEFT SIDE TRANSMISSION BOX PP		01
02	0502050053	RIGHT SIDE TRANSMISSION BOX PP		01
03	0503011410	ROLLER BEARING		02
04	0503011182	6203 ROLLER BEARING		02
05	0571016187	PINION AXLE 6Z PNEUMATIC		01
06	0503011184	502040 CLAMPING RING (FOR AXLE)		01
07	0571017655	SLEEVE FIXER HITCH PNEUMATIC		01
08	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		03
09	0503010144	1/4" NUT		03
10	0511057504	JOIN GEAR		01
11	0503033976	GEAR 6Z PNEUMATIC 2014		01

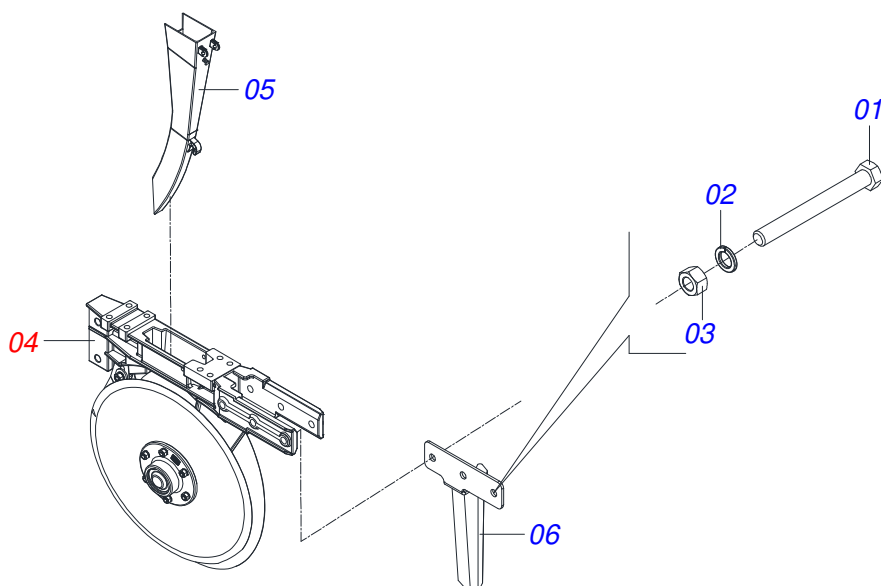


Item	Code	Description	See page	QT
01	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		03
02	0503010019	1/2" SPRING WASHER		03
03	0503010060	1/2" NUT		03
04	0511057153	DDD LEFT SUPREMA PRECISION PLANTING	43	01
05	0503062403	TUBE SEED P.P		01
06	0521065999	FRONT SHIELD		01

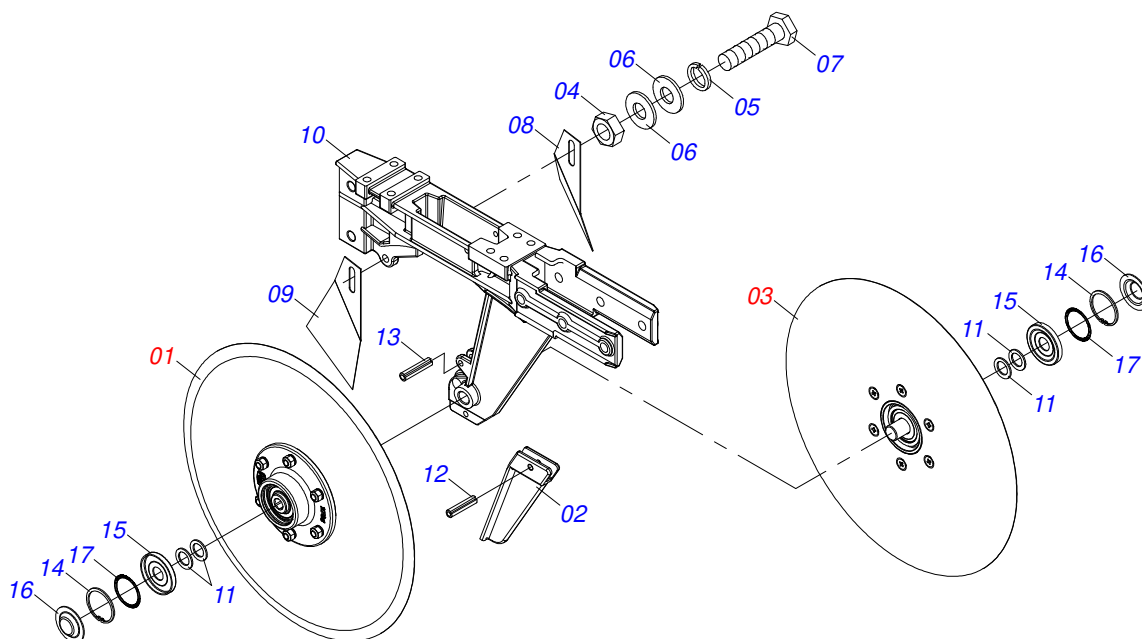


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	44	01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	CUBE LOW RIGHT WITH DISC 15	45	01
04	0503010026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501010984	FLAT WASHER		02
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012781	SUPPORT DDD LEFT		01
11	0511015098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O'RING		02

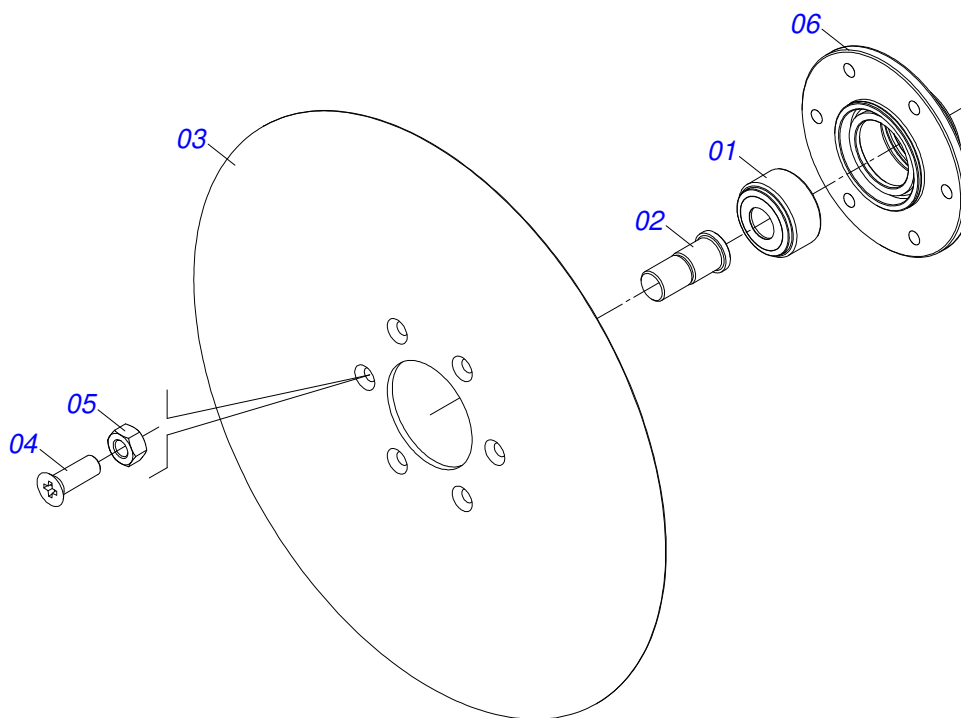


Item	Code	Description	See page	QT
01	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

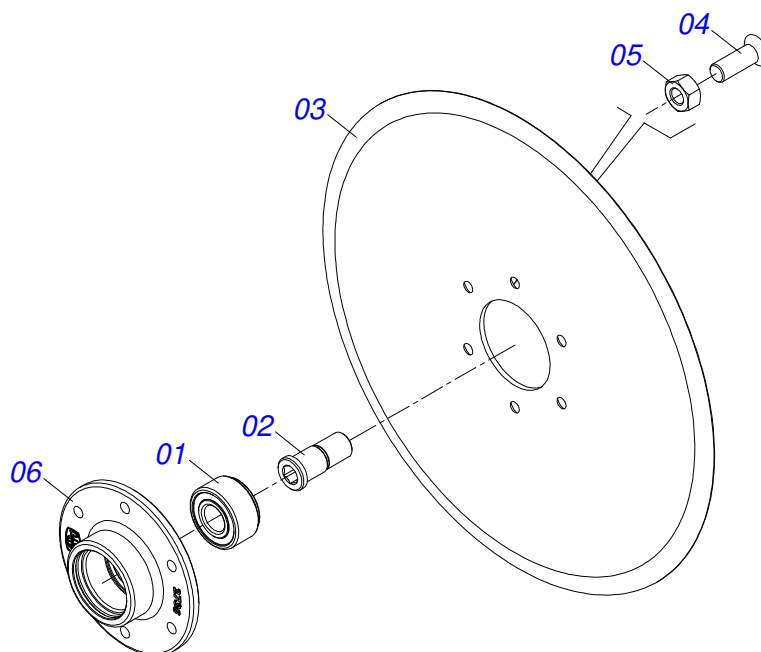


Item	Code	Description	See page	QT
01	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWR DDD		01

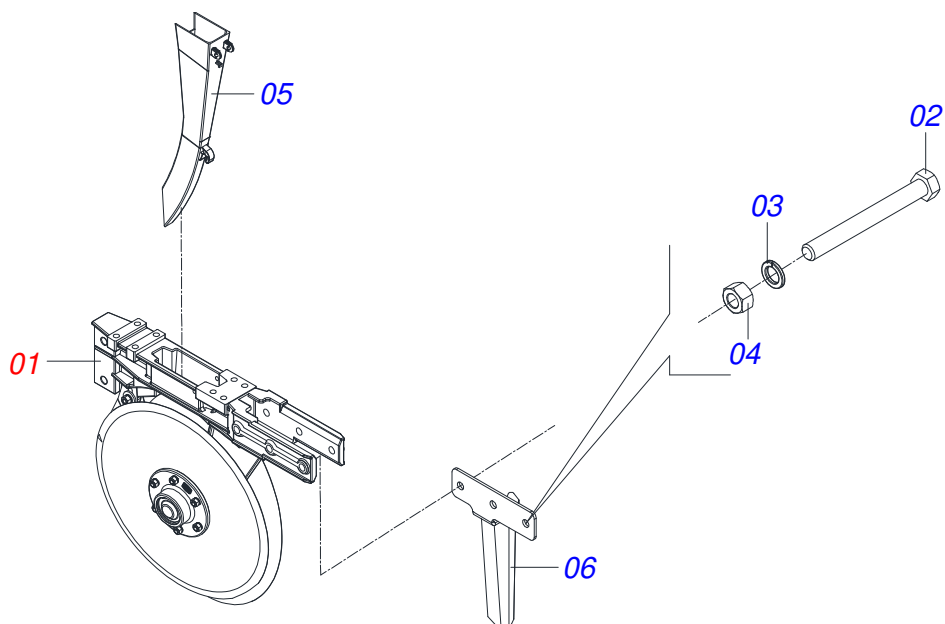


Item	Code	Description	See page	QT
01	0511057154	DDD RITGH SUPREMA PRECISION PLANTING	47	01
02	0503010706	SCREW 1/2 UNC X 4.1/2 C S G.5 ZN		03
03	0503010019	1/2" SPRING WASHER		03
04	0503010060	1/2" NUT		03
05	0503062403	TUBE SEED P.P		01
06	0521065999	FRONT SHIELD		01

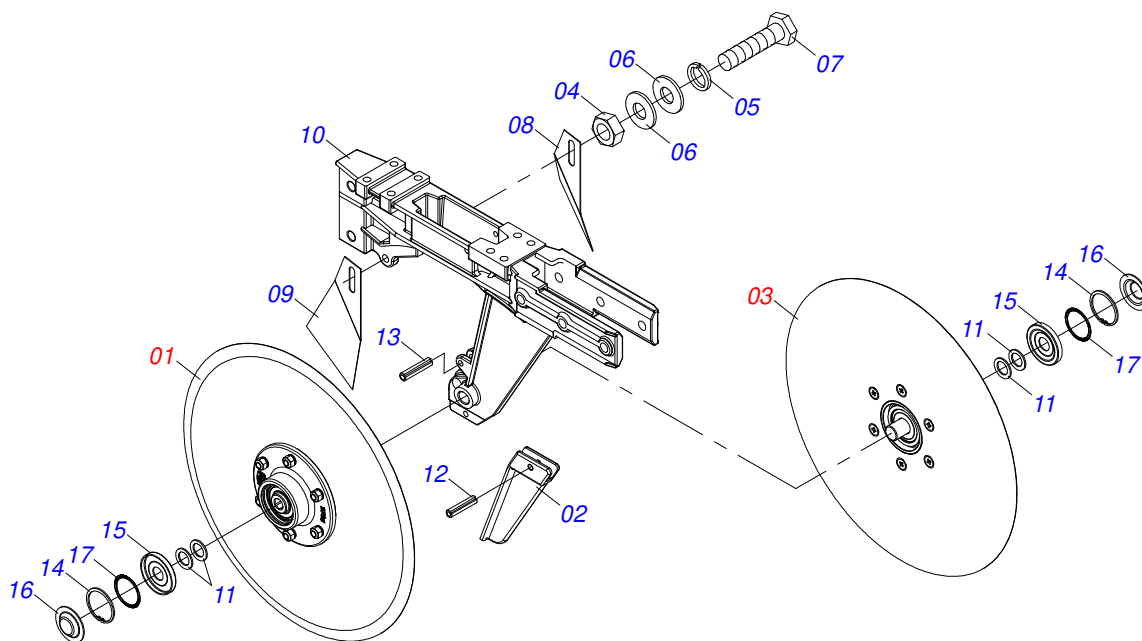

Item	Code	Description	See page	QT
01	0511053172	LEFT LOW CUBE WITH DISC 15	44	01
02	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
03	0511053173	CUBE LOW RIGHT WITH DISC 15	45	01
04	0503010026	3/8" NUT		01
05	0503011443	3/8" SPRING WASHER		01
06	0501010984	FLAT WASHER		02
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
08	0571017964	LEFT DOUBLE DISC SCRAPER		01
08.	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
09	0571017963	RIGHT DOUBLE DISC SCRAPER		01
09.	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
10	0502012780	SUPPORT DDD RIGHT		01
11	0511015098	FLAT WASHER		04
12	0503011402	0.2" X 0.8" SPRING PIN		01
13	0503013129	ELASTIC PIN		01
14	0503015081	502052 CLAMPING RING (FOR AXLE)		02
15	0511011927	DUST CLOAK		02
16	0571011152	DOUBLE DISC CAP		02
17	0503014679	2-134 O'RING		02

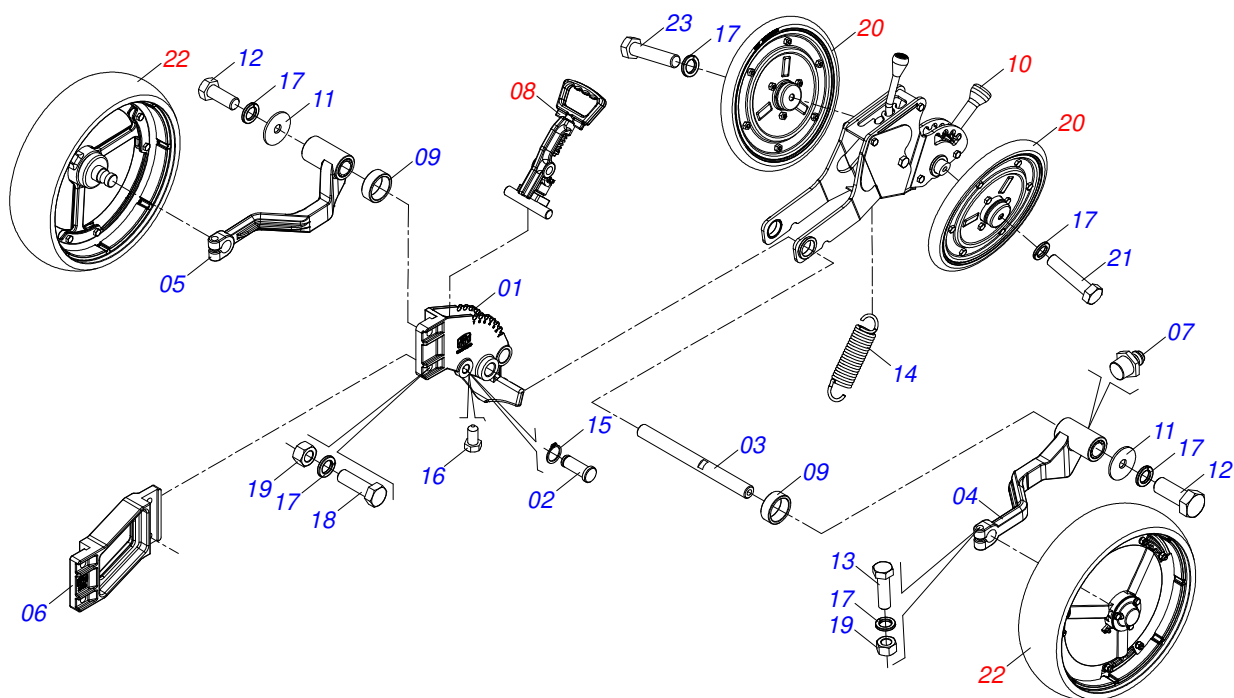


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0581014858	DEPTH WHEEL AXLE		01
04	0501110720	ARM LEFT		01
05	0501110719	DEPTH CONTROL RIGHT ARM		01
06	0502012663	EXTENSION		01
07	0503010002	1800 GREASE FITTING		02
08	0501056769	DEPTH WHEELS REGULATOR ASSY	49	01
09	0503034793	ARTICULATION SLEEVE		02
10	0521051423	COMPACTOR SUPPORT	50	01
11	0571017749	FLAT WASHER		02
12	0503010311	1/2" X 1-1/4" BOLT		02
13	0503016453	1/2" X 2.1/2 BOLT		02
14	0503034817	SPRING		01
15	0503010581	RING		01
16	0503034377	SCREEW 3/8 UNC X 3/4		01
17	0503010019	1/2" SPRING WASHER		08
18	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
19	0503010060	1/2" NUT		04
20	0501052908	COMPACTOR WHEEL WITH BEARING	51	02
21	0503013739	1/2" X 1" BOLT		01
22	0511050077	WHEEL STRIPED	52	02
23	0503010752	1/2" X 3.1/2" BOLT		01

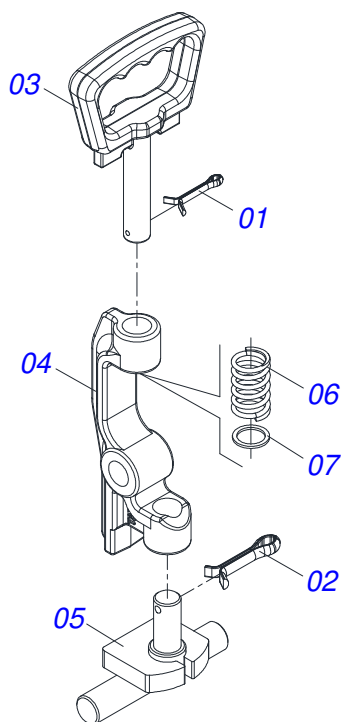


Item	Code	Description	See page	QT
01	0503010257	1/8" X 1" COTTERPIN		01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0502011689	1/8" DEPTH CONTROL LEVER		01
04	0502011688	SEED SIST CONTROL DEPTH LEVER		01
05	0511065582	DEPTH WHEEL STOP		01
06	0503030975	0.9" X 1.5" X 0.1" SPRING		01
07	0511015976	FLAT WASHER		01

COMPACTOR SUPPORT


0521051423

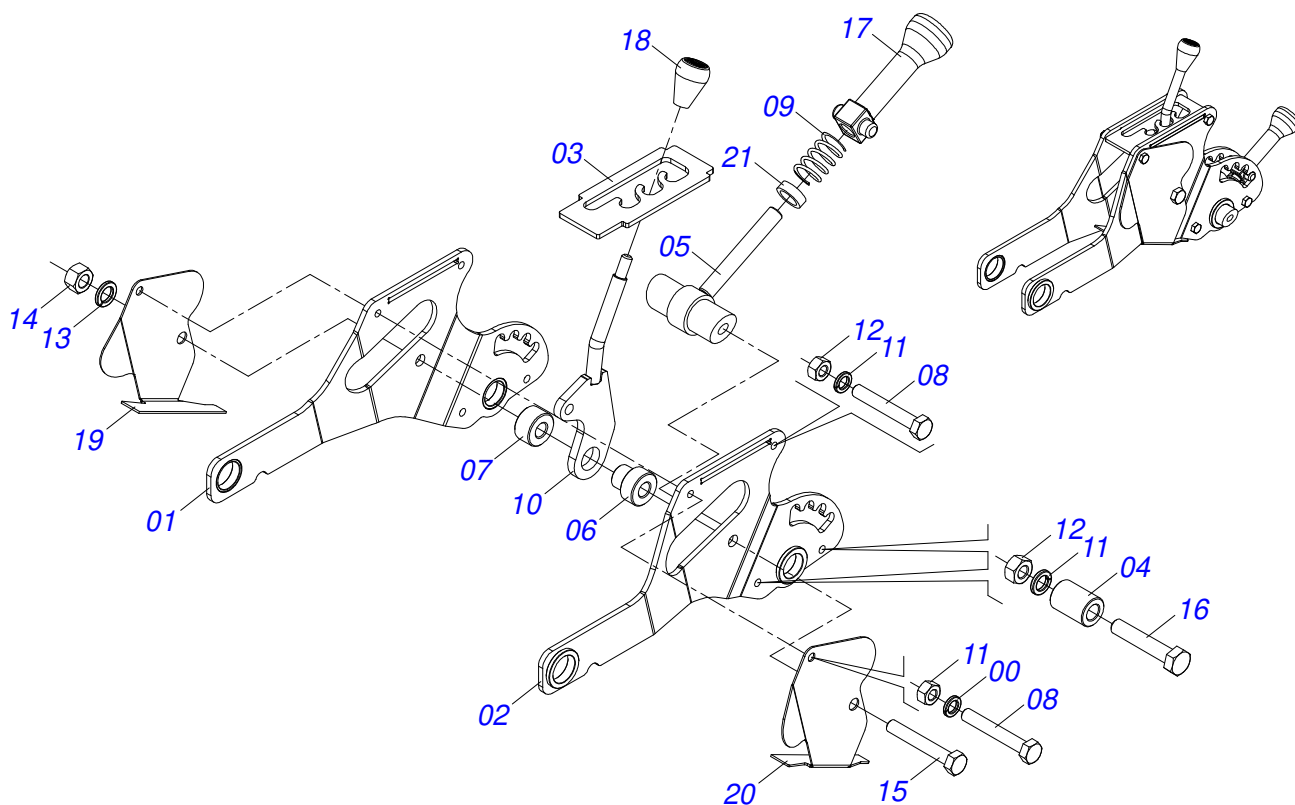

Item	Code	Description	See page	QT
01	0521068003	RIGHT SIDE		01
02	0521068002	LEFT SIDE		01
03	0581014847	PLATE UPPER		01
04	0581015855	SLEEVE		02
05	0521068004	HANDLE BODY		01
06	0581014969	SLEEVE GUIDE		01
07	0581014968	SLEEVE FLANGE		01
08	0503010937	5/16" X 3" BOLT		02
09	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
10	0521068005	LEVER		01
11	0503010179	5/16" ZN SPRING WASHER		04
12	0503010337	5/16" NUT		04
13	0503010019	1/2" SPRING WASHER		01
14	0503010060	1/2" NUT		01
15	0503010847	1/2" X 3.1/4" BOLT		01
16	0503010882	BOLT		02
17	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
18	0503030878	LEVER CRANK		01
19	0581015854	RIGHT PROTECTION COVER		01
20	0581015853	LEFT PROTECTION COVER		01
21	0581015903	SPACER WASHER		01

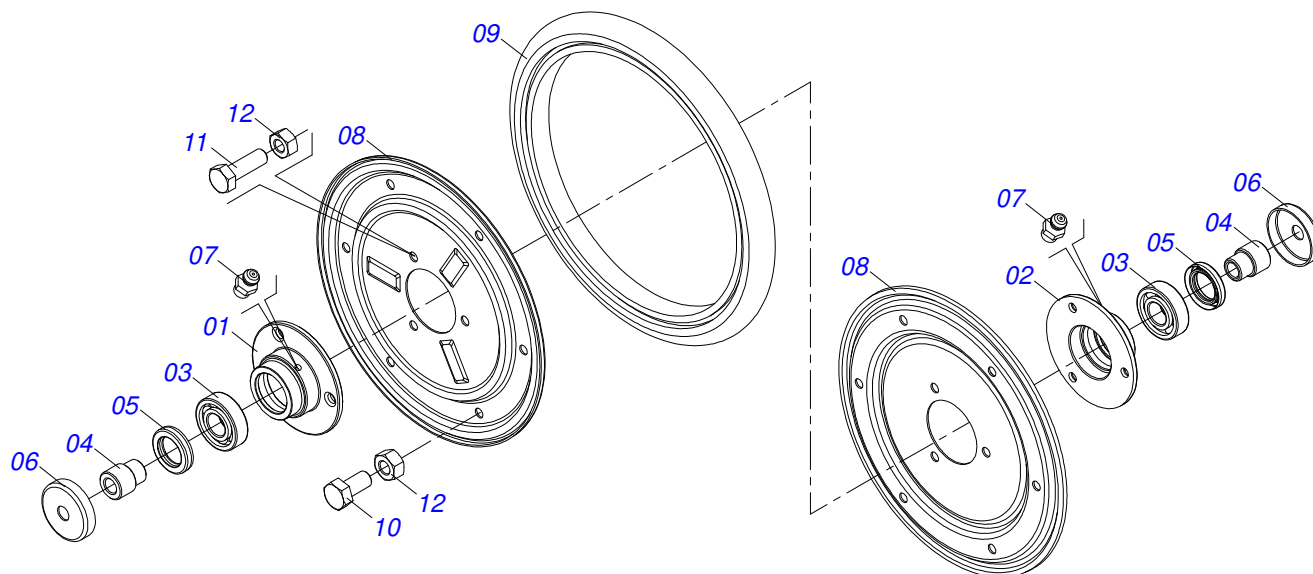


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

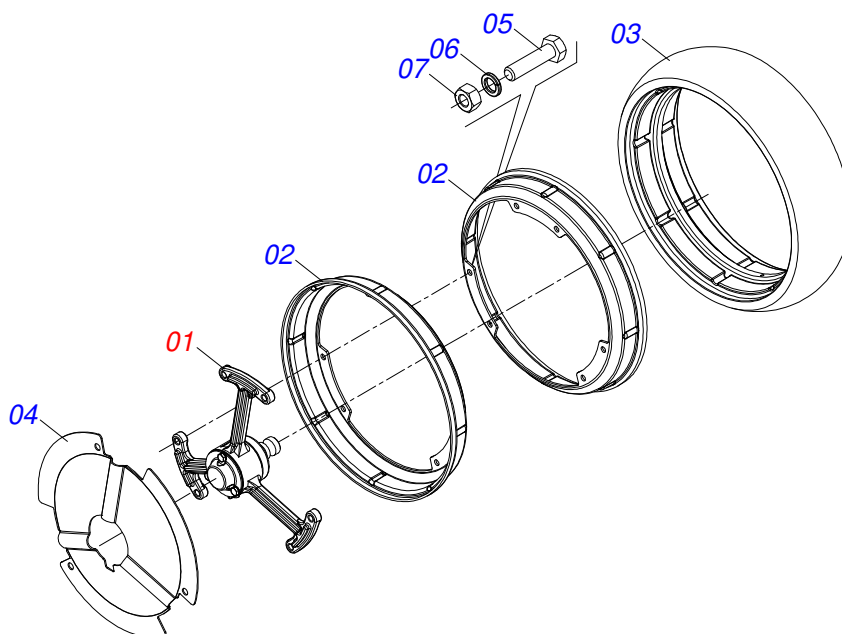


Item	Code	Description	See page	QT
01	0511052287	DEPTH WHEEL HUB ASSY	53	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	NUT		06
06	0503010179	5/16" ZN SPRING WASHER		06
07	0503010337	5/16" NUT		06

DEPTH WHEEL HUB ASSY


0511052287

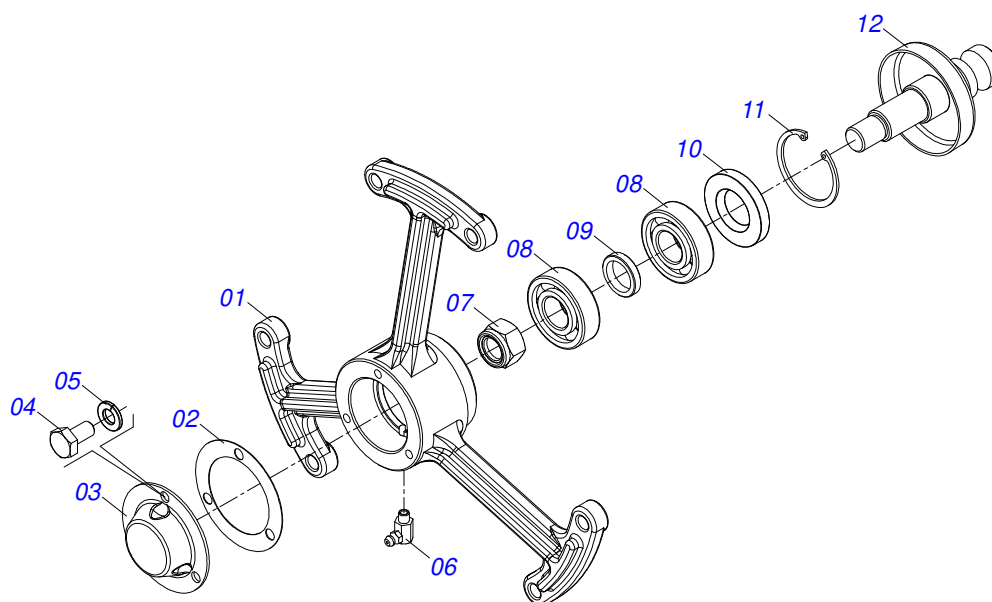


Item	Code	Description	See page	QT
01	0502011918	DEPHT WHEELS BOX		01
02	0503030757	2.9" X 2" X 0.02" JOINT		01
03	0521019178	COVER DEPTH		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503011098	1/4" GREASE FITTING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503010269	6204 BALL BEARING		02
09	0501013636	SPACING SLEEVE		01
10	0503010689	SEAL 00763-BR		01
11	0503011105	SEAL RING		01
12	0521063443	DEPTH CONTROL AXLE		01

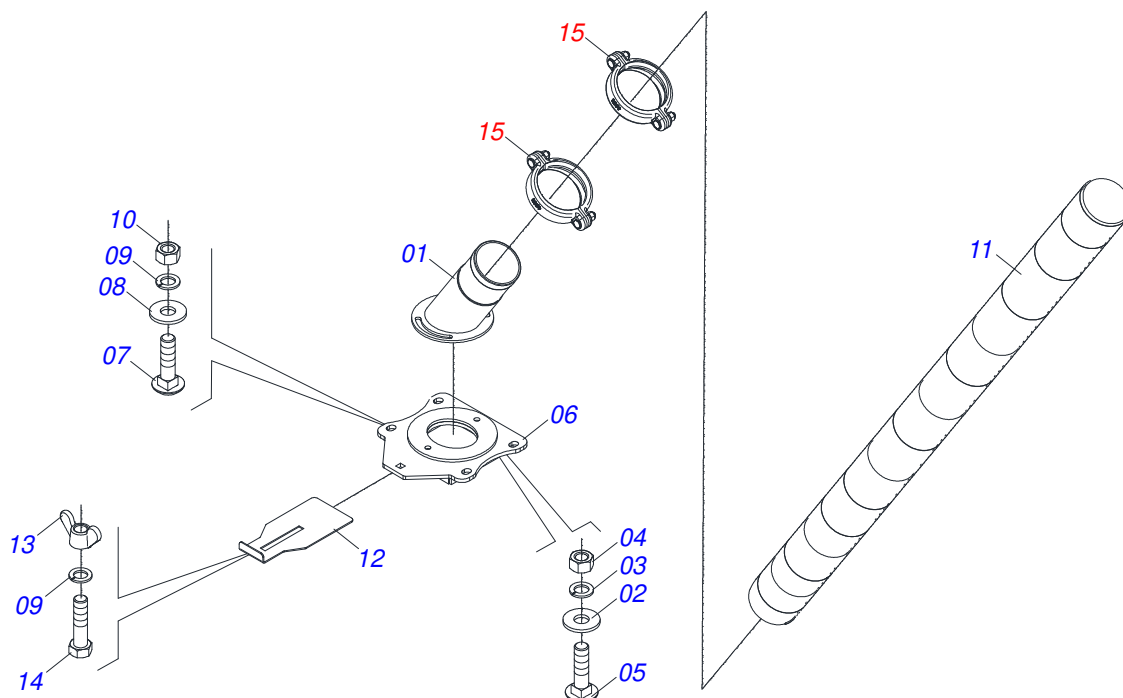

Item	Code	Description	See page	QT
01	0521066332	CONDUCTOR WITH FLANGE		01
02	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
03	0503010179	5/16" ZN SPRING WASHER		02
04	0503010337	5/16" NUT		02
05	0503010358	5/16" X 5/8" BOLT		02
06	0521067707	DUCT TOP SEED SUPPORT		01
07	0501010942	3/8" X 1-1/4" BOLT		04
08	0501010984	FLAT WASHER		04
09	0503010025	3/8" SPRING WASHER		05
10	0503010026	3/8" NUT		04
11	0551016144	3" X 1500 AIR CONDUCTOR		01
12	0561014231	TUBE CAP UPPER		01
13	0503010209	3/8" UNC BUTTERFLY NUT		01
14	0501011643	3/8 X 1"BOLT		01
15	0521050525	FIXER FERTILIZER CONDUCTOR	55	02

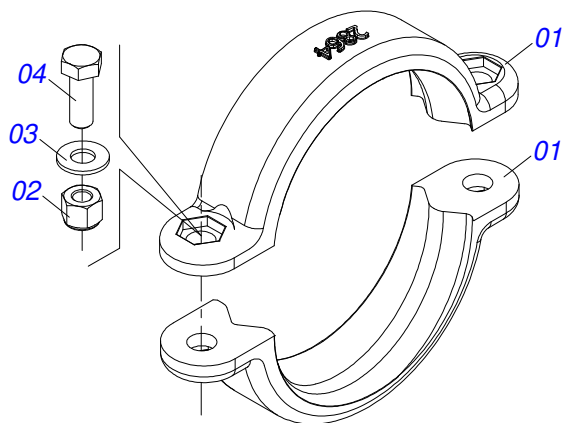


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
04	0503010365	NUT		02

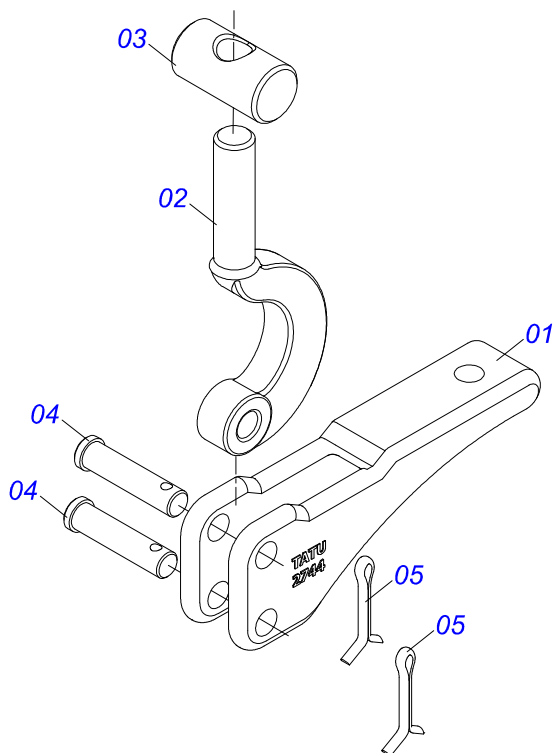


Item	Code	Description	See page	QT
01	0502012744	SPEED LOCK LEVER ASSY		01
02	0502012743	FAST BOLT ASSY		01
03	0571014534	FAST BOLT ADJUSTMENT		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010257	1/8" X 1" COTTERPIN		02

LEFT JOINT ARM


0511053335

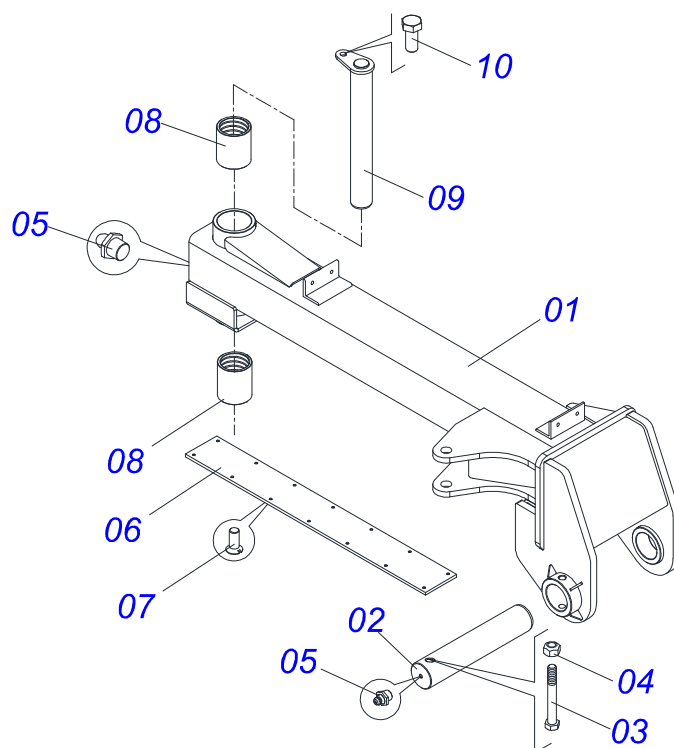


Item	Code	Description	See page	QT
01	0521063744	LEFT JOINT ARM	01	
02	0571017893	HORIZONTAL ARTICULATION SHAFT	01	
03	0503011198	C3/4" X 6" SCREW	01	
04	0503011255	3/4" LOCK NUT	01	
05	0503010002	1800 GREASE FITTING	02	
06	0503032042	SHEET POLYETHYLENE	01	
07	0503010814	5/16 BOLT	14	
08	0571011825	BUSHING	02	
09	0521063778	RELATION AVEC AXE VERTICAL LATCH	01	
10	0503015322	BOLT 7/8	02	

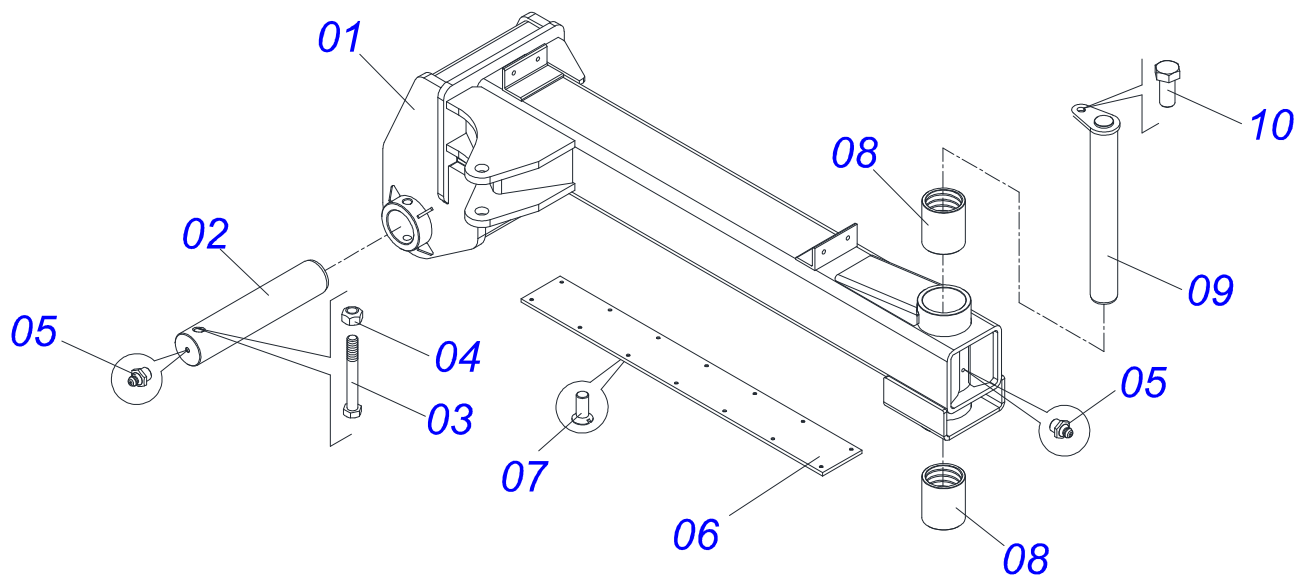


Item	Code	Description	See page	QT
01	0521063743	BRACO ARTICULATION RIGHT		01
02	0571017893	HORIZONTAL ARTICULATION SHAFT		01
03	0503011198	C3/4" X 6" SCREW		01
04	0503011255	3/4" LOCK NUT		01
05	0503010002	1800 GREASE FITTING		02
06	0503032042	SHEET POLYETHYLENE		01
07	0503010814	5/16 BOLT		14
08	0571011825	BUSHING		02
09	0521063778	RELATION AVEC AXE VERTICAL LATCH		01
10	0503015322	BOLT 7/8		02

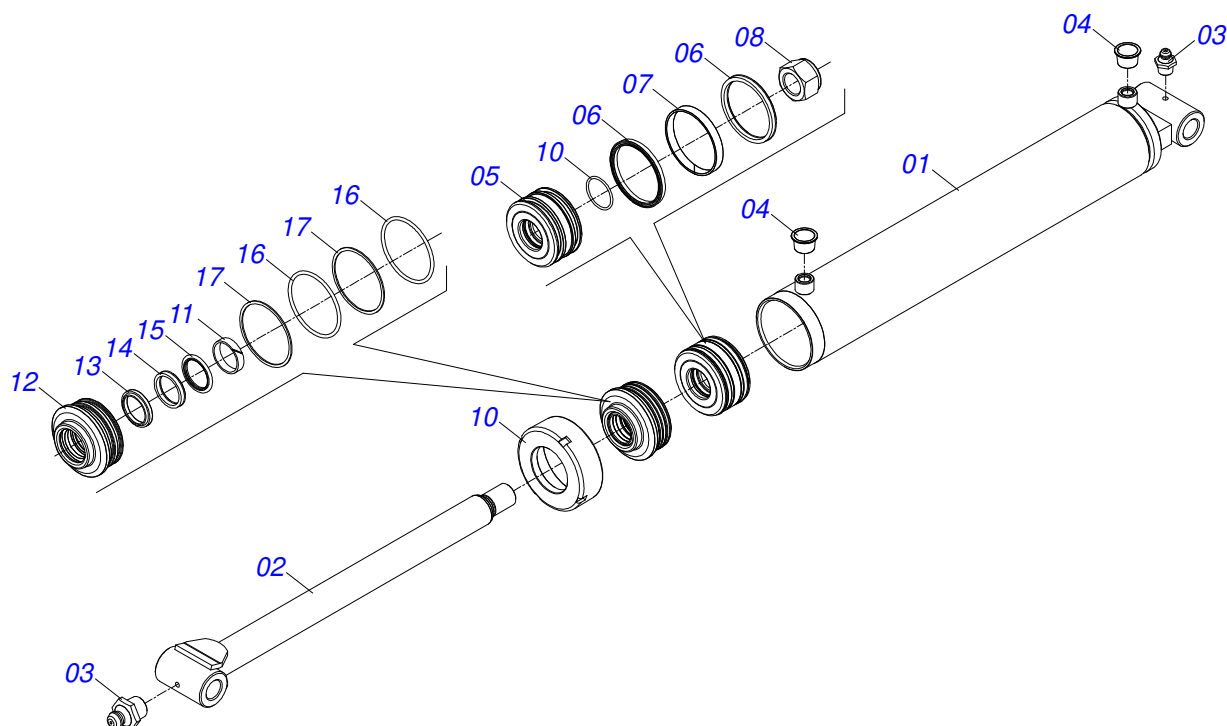


Item	Code	Description	See page	QT
01	0521066625	SHIRT 114.30 X 851		01
02	0521066559	EXTENSOR 876 X 50.80 (2)		01
03	0503010002	1800 GREASE FITTING		03
04	0503030384	CON PLUG N-001		02
05	0581010658	EMBOLO 50,80 X 114,30 USAP		01
06	0503018164	GAXETA 2500-4000-375 B (1150 AGEL)		02
07	0503018165	GUIDE RING W2-4500-590		01
08	0503010290	SELF ADJUSTING 1.1/2" UNF NUT		01
09	0503010141	2-226 N 3006-9B O'RING		01
10	0502011222	0.56" END CAP		01
11	0503010952	W2-2250-500 RING		01
12	0581010659	2" X 4" RING SUPPORT		01
13	0503010039	D-2000 SCRAPER RING		01
14	0503018026	1870-2000-375 B GASKET		01
15	0503018024	RING BS		01
16	0503011892	O' RING, 2-346 N 3006-9B		02
17	0503011893	BACK-UP RING, 8-346		02

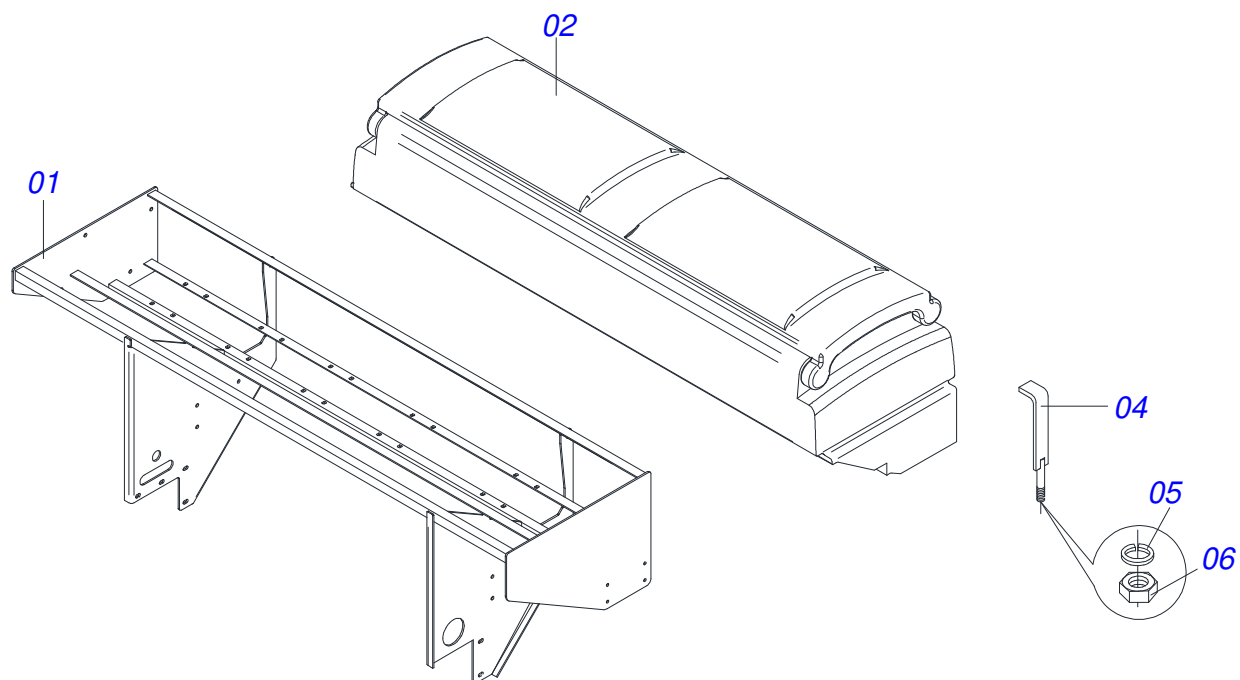


Item	Code	Description	See page	QT
01	0521063729	SUPPORT RIGHT SILO WITH		01
02	0503060642	COVER BOX RIGHT FERTILIZER		01
03	0511061886	FERTILIZER BEAM LOCK		02
04	0511062099	FERTILIZER BEAM CLAMP		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010060	1/2" NUT		02

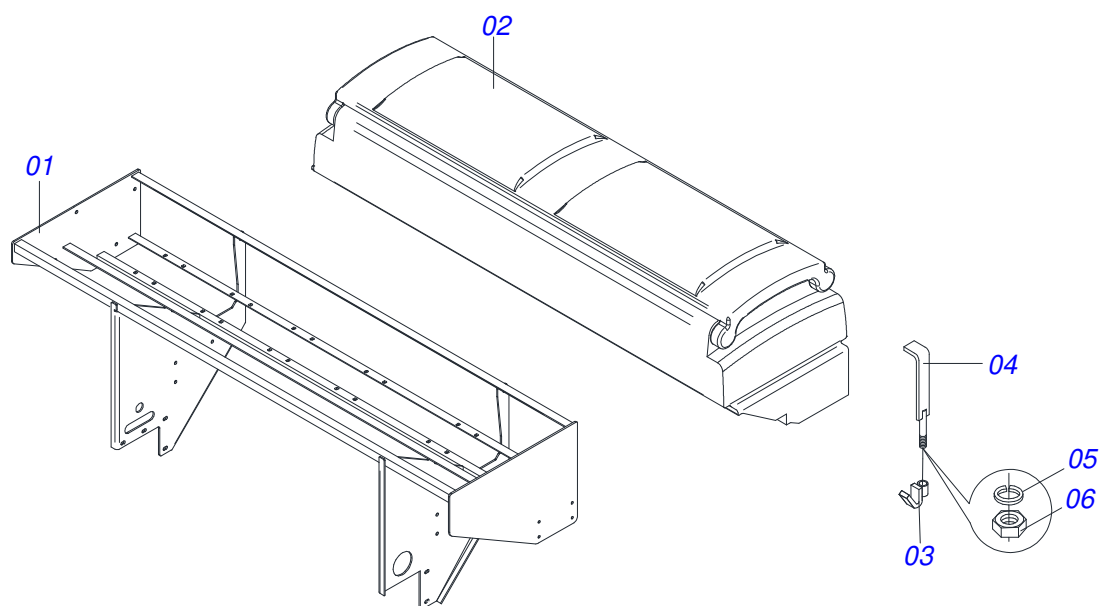


Item	Code	Description	See page	QT
01	0521063728	LH FERTILIZER BOX SUPPORT		01
02	0503060643	COVER BOX LEFT FERTILIZER		01
03	0511061886	FERTILIZER BEAM LOCK		02
04	0511062099	FERTILIZER BEAM CLAMP		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010060	1/2" NUT		02

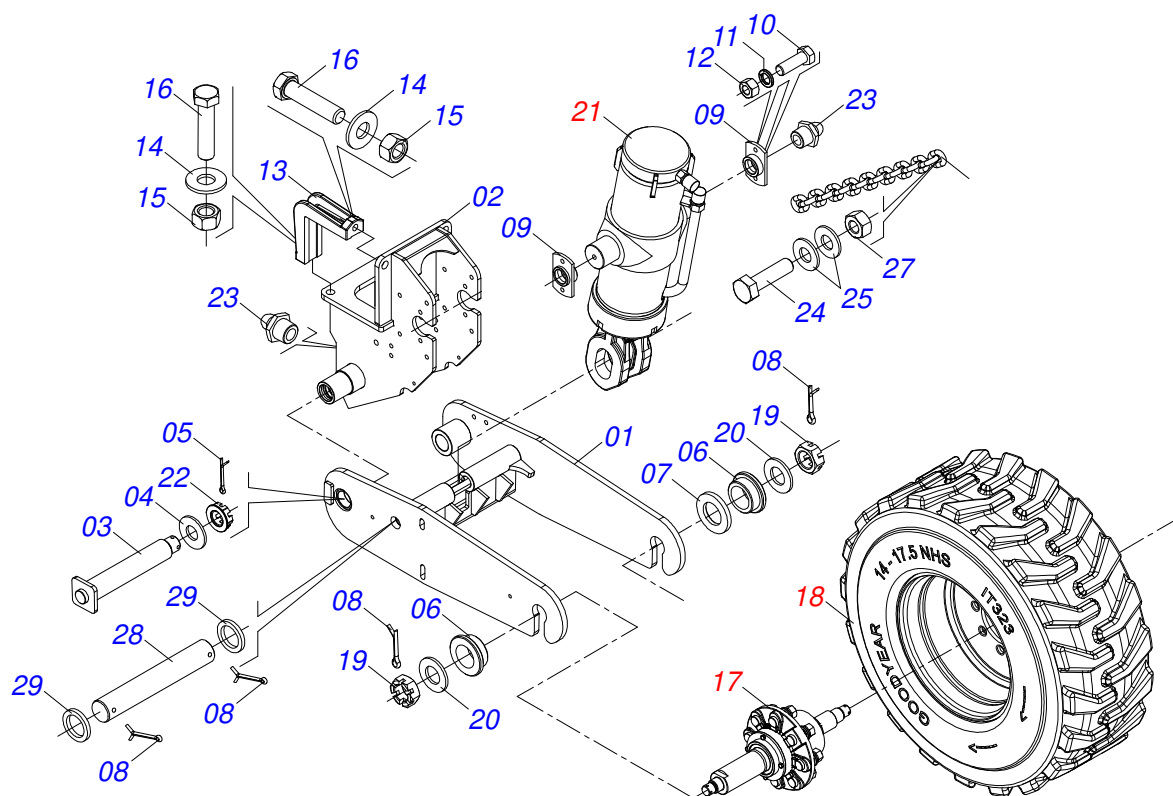

Item	Code	Description	See page	QT
01	0521064554	LEFT WHEEL FORK		01
02	0521064543	WHEEL SUPPORT		01
03	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
04	0561019929	FLAT WASHER		01
05	0503011345	1/4" X 3-1/2" COTTERPIN		01
06	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
07	0551014508	FLAT WASHER		01
08	0503010010	1/4" X 2.1/2" COTTERPIN		04
09	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
10	0503010920	1/2" X 1.1/2" BOLT		04
11	0503010019	1/2" SPRING WASHER		04
12	0503010060	1/2" NUT		04
13	0502012731	WHEEL HOLDER		02
14	0501010322	FLAT WASHER		04
15	0503010014	3/4" NUT		04
16	0501010195	3/4" X 3-1/2" BOLT		04
17	0511054495	WHEEL WITHOUT TIRE WITHOUT TRANSMISSION	63	01
18	0503060684	14 X 17.5/14L TR SK900 LEFT - WHEEL AND TIRE	64	01
19	0503011052	1.1/4" X 0.77" CASTLE NUT		02
20	0501017779	32 X 60 X 4.75 FLAT WASHER		02
21	0511058240	HYDRAULIC CYLINDER	65	01
22	0501010630	1.1/2" CASTLE NUT		01
23	0503010003	1845 GREASE FITTING		03
24	0503010882	BOLT		01
25	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
26	0503033458	CURRENT 6 X 17 ELOS		01
27	0503010337	5/16" NUT		01
28	0581017245	AXLE BODY		01
29	0531012874	FLAT WASHER		02

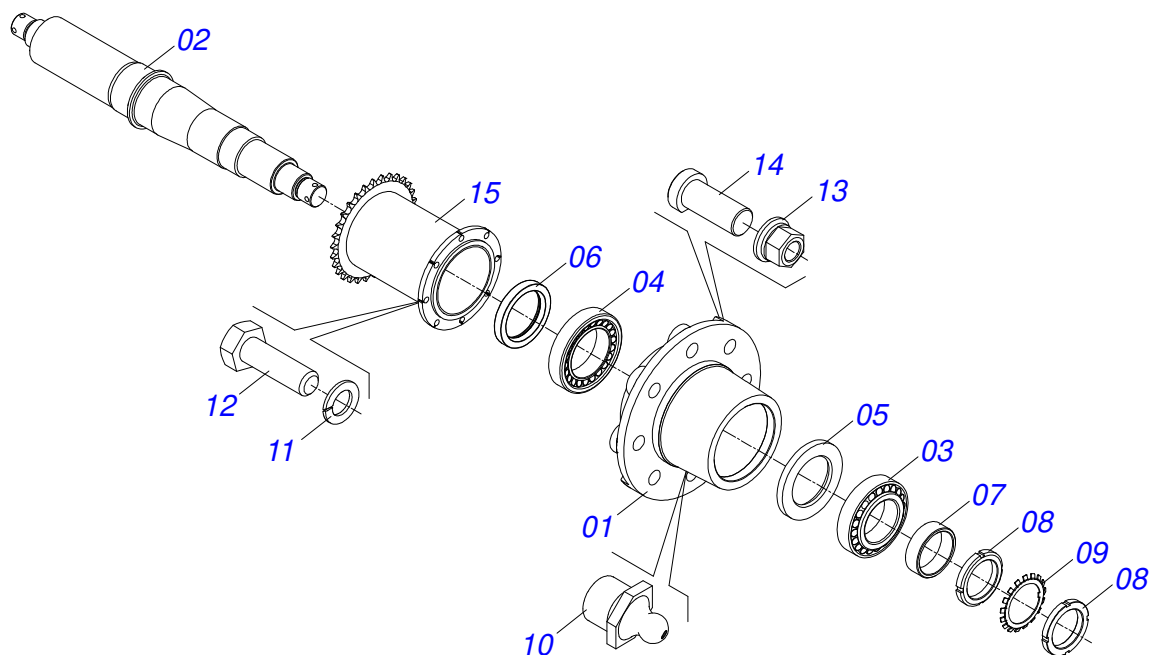


Item	Code	Description	See page	QT
01	0502040760	CARRYING WHEEL HUB		01
02	0571015180	WHEEL AXLE		01
03	0503010007	3982/3920 ROLLER BEARING		01
04	0503010059	33287/33462 ROLLER BEARING		01
05	0503010009	RETAINER 00573-B		01
06	0503010086	SEAL 0009B-B		01
07	0551014473	GLOVE		01
08	0503012702	KM-12 NUT		02
09	0503012703	LOCK WASHER		01
10	0503010002	1800 GREASE FITTING		01
11	0503011444	SPRING WASHER		04
12	0503011339	M22 X 1,5 X 72 BOLT		08
13	0503014048	22 X 1.5 HEX NUT		08
14	0503010363	5/16" X 1" BOLT		04
15	0511068415	PFFP-3770 SEAL GUIDE		01

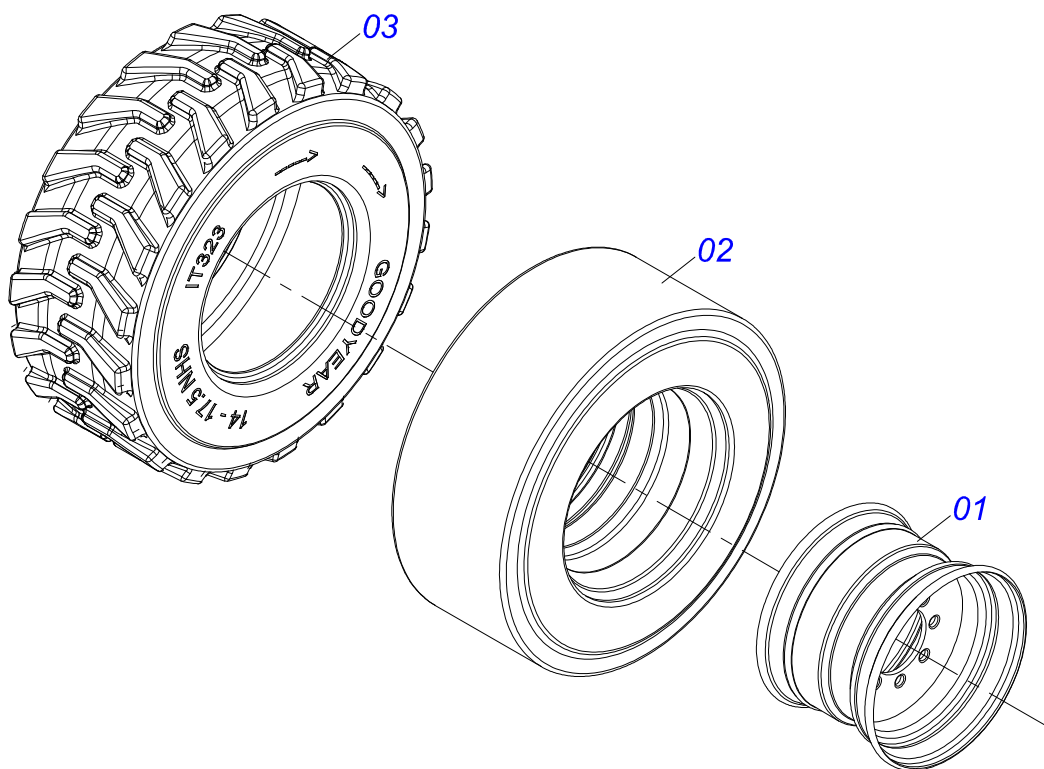


Item	Code	Description	See page	QT
01	0511065331	11.75 X 17.5 HOOP WHEEL		01
02	0503015355	INNER TIRE		01
03	0503013247	PLY TIRE		01

HYDRAULIC CYLINDER

0511058240

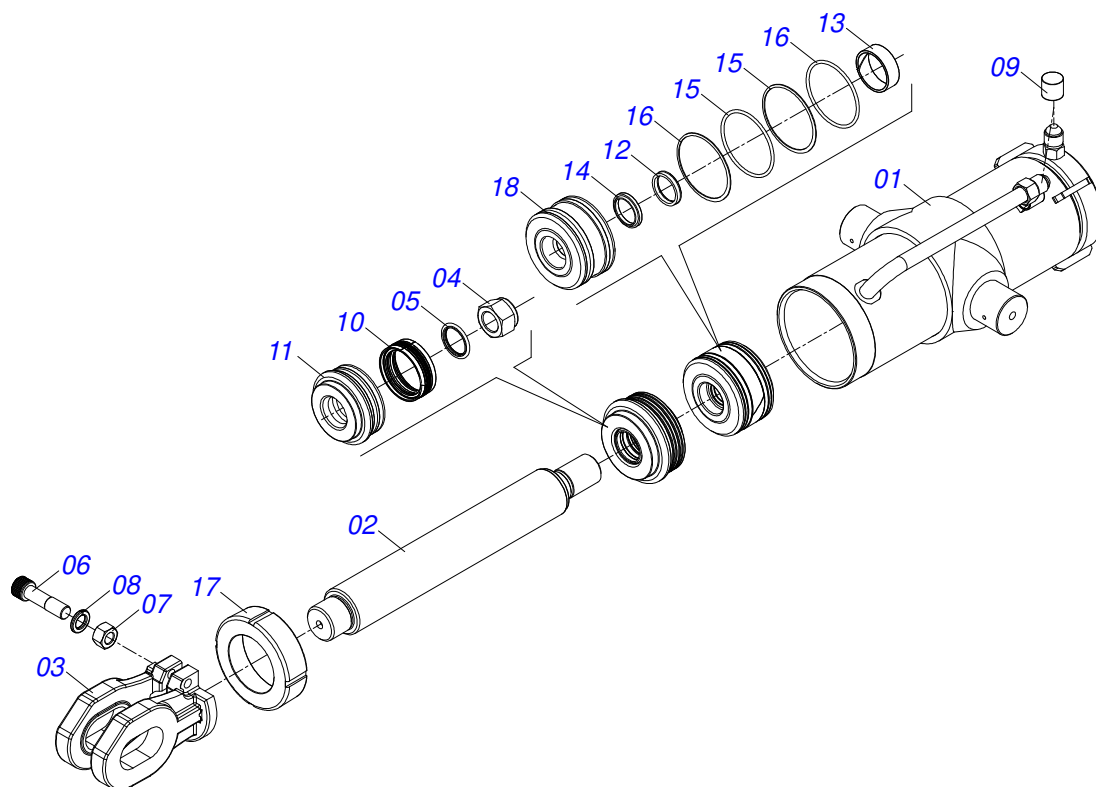

Item	Code	Description	See page	QT
01	0521066557	CYLINDER CASE 101,60 X 352		01
02	0581010680	TURNBUCKLE 50,80 X 386		01
03	0571015629	CILINDER SPINDLE FORK		01
04	0503010817	1.1/4" SELF LOCKING NUT		01
05	0503010345	2-218 N 3006-9B O'RING		01
06	0503011094	3/8" X 2" BOLT		01
07	0503010026	3/8" NUT		01
08	0503010025	3/8" SPRING WASHER		01
09	0503030385	CYLINDER PLUG N-002		02
10	0503015633	SELEMASTER SEALING		01
11	0581010678	50,80 X 101 RING SUPPORT		01
12	0503015636	SCRAPER SEAL		01
13	0503018025	RING GUIDE		01
14	0503018026	1870-2000-375 B GASKET		01
15	0503010338	2-342 N 3006-9B O'RING		02
16	0503011061	8-342 BACK-UP RING		02
17	0502012822	101.60 END CAP		01
18	0502012820	50.80 X 101.60 PISTON		01
19	0511032511	ASSY CYLINDER REPAIR KIT 50.8X101.6		01

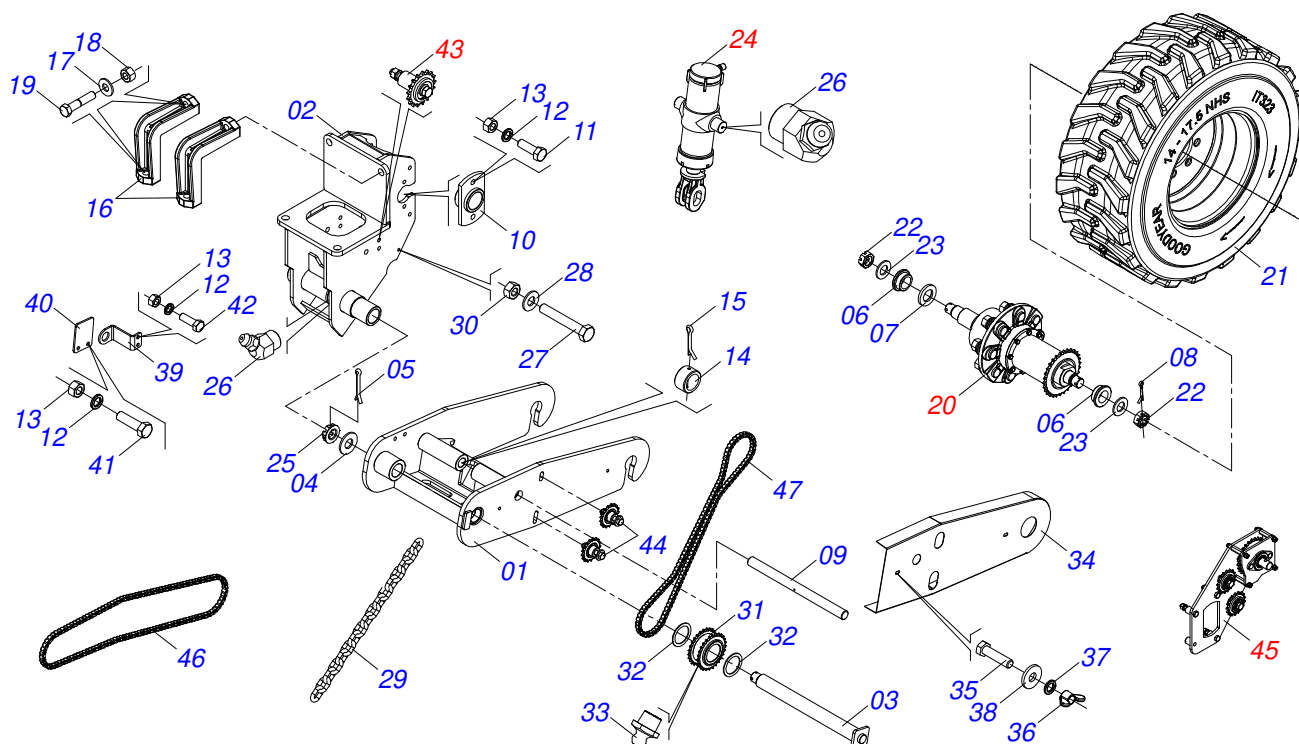

Item	Code	Description	See page	QT
01	0521064554	LEFT WHEEL FORK		01
02	0521064543	WHEEL SUPPORT		01
03	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
04	0561019929	FLAT WASHER		01
05	0503011345	1/4" X 3-1/2" COTTERPIN		01
06	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
07	0551014508	FLAT WASHER		01
08	0503010010	1/4" X 2.1/2" COTTERPIN		02
09	0571015147	PIVOT SHAFT		01
10	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
11	0503010920	1/2" X 1.1/2" BOLT		04
12	0503010019	1/2" SPRING WASHER		08
13	0503010060	1/2" NUT		08
14	0551014565	CILINDER FORK SLEVE GUIDES		01
15	0503010067	3/16" X 2.1/2" COTTER PIN		01
16	0502012731	WHEEL HOLDER		02
17	0501010322	FLAT WASHER		04
18	0503010014	3/4" NUT		04
19	0501010195	3/4" X 3-1/2" BOLT		04
20	0511054492	STUB SHAFT HUB	67	01
21	0503060684	14 X 17.5/14L TR SK900 LEFT - WHEEL AND TIRE	64	01
22	0503011052	1.1/4" X 0.77" CASTLE NUT		02
23	0501017779	32 X 60 X 4.75 FLAT WASHER		02
24	0511058240	HYDRAULIC CYLINDER	65	01
25	0501010630	1.1/2" CASTLE NUT		01
26	0503010003	1845 GREASE FITTING		03
27	0503010882	BOLT		01
28	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
29	0503033458	CURRENT 6 X 17 ELOS		01
30	0503010337	5/16" NUT		01
31	0511068422	WHEEL GEAR DOBLE		01


WHEELS CENTER AND TRANSMISSION

0521043440


Item	Code	Description	See page	QT
32	0551018571	FLAT WASHER		02
33	0503010002	1800 GREASE FITTING		01
34	0571015153	COVER PROTECTION WHEELED LARGER		01
35	0503010849	3/8" X 1-1/2" BOLT		02
36	0503010209	3/8" UNC BUTTERFLY NUT		02
37	0503010025	3/8" SPRING WASHER		02
38	0501010984	FLAT WASHER		02
39	0571012483	FIXER SENSOR WHEEL		01
40	0571015148	PLATE SENSIBLES		01
41	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		02
42	0501010063	1/2" X 1-1/2" BOLT		02
43	0511054463	WHEEL TENSIONER SUPORT CENTRAL	68	01
44	0511054464	WHEEL FORK TENSIONER		02
45	0511054499	TRANSMISSION OF LARGER CENTRAL EXCHANGE	69	01
46	0503016419	50-1 CHAIN X 128 LINK + REDUCION		01
47	0503014507	CHAIN LINK + MENDING		01

STUB SHAFT HUB


0511054492

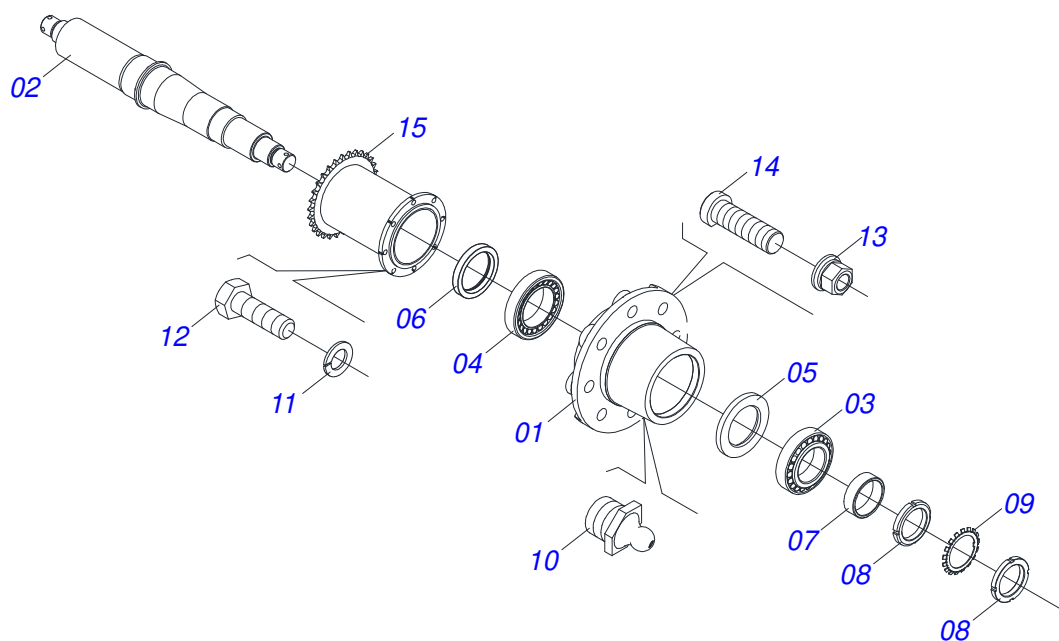


Item	Code	Description	See page	QT
01	0502040760	CARRYING WHEEL HUB	01	
02	0571015180	WHEEL AXLE	01	
03	0503010007	3982/3920 ROLLER BEARING	01	
04	0503010059	33287/33462 ROLLER BEARING	01	
05	0503010009	RETAINER 00573-B	01	
06	0503010086	SEAL 0009B-B	01	
07	0551014473	GLOVE	01	
08	0503012702	KM-12 NUT	02	
09	0503012703	LOCK WASHER	01	
10	0503010002	1800 GREASE FITTING	01	
11	0503011444	SPRING WASHER	08	
12	0503011339	M22 X 1,5 X 72 BOLT	08	
13	0503014048	22 X 1.5 HEX NUT	08	
14	0503010363	5/16" X 1" BOLT	08	
15	0521064564	30Z GEAR	01	

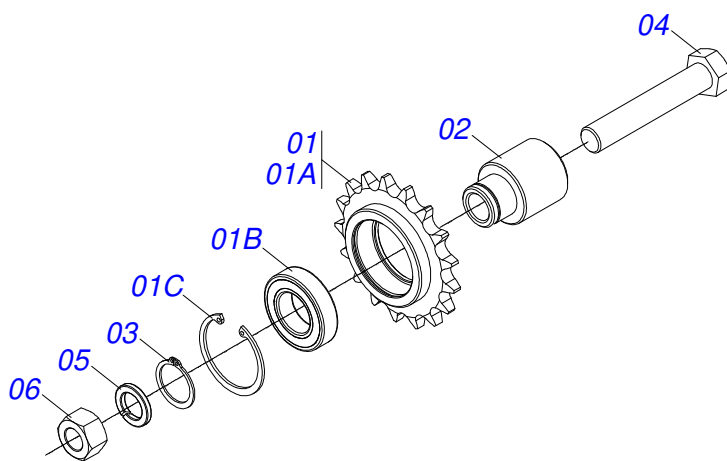


Item	Code	Description	See page	QT
01	0511054462	17Z GEAR		01
01A	0511061836	17Z GEAR		01
01B	0503011410	ROLLER BEARING		01
01C	0503011105	SEAL RING		01
02	0571015149	TIGHTENER AXLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0501010163	5/8" X 4-1/2" BOLT		01
05	0503010027	5/8" SPRING WASHER		01
06	0503010013	5/8" NUT		01

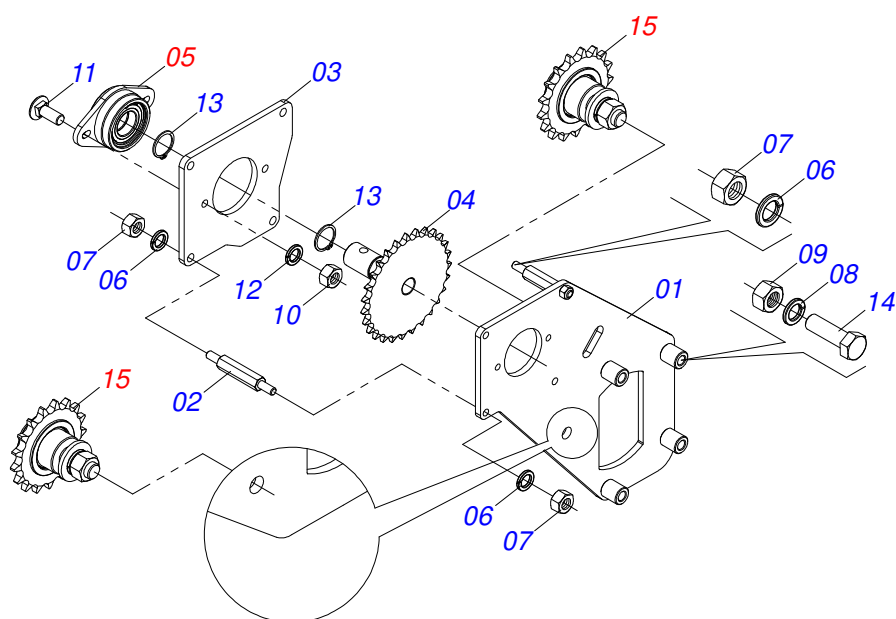


Item	Code	Description	See page	QT
01	0521064557	SUPPORT SET TRANSMISSION WHEEL SIDE		01
02	0571015141	FIXER CENTRAL TRANSMISSION		04
03	0571015151	SUPPORT BEARING		01
04	0521061795	27Z GEAR		01
05	0501053654	DOUBLE BEARING TRANSMISSION SEED 3/4		01
06	0503010025	3/8" SPRING WASHER		08
07	0503010026	3/8" NUT		08
08	0503010019	1/2" SPRING WASHER		03
09	0503010060	1/2" NUT		03
10	0503010337	5/16" NUT		02
11	0503011953	5/16" X 1" BOLT		02
12	0503010179	5/16" ZN SPRING WASHER		02
13	0503010707	501030 CLAMPING RING (FOR AXLE)		02
14	0503010741	1/2" X 2-3/4" BOLT		03
15	0511054461	STRETCHER TOP TRANSMISSION SWIRLED	70	02

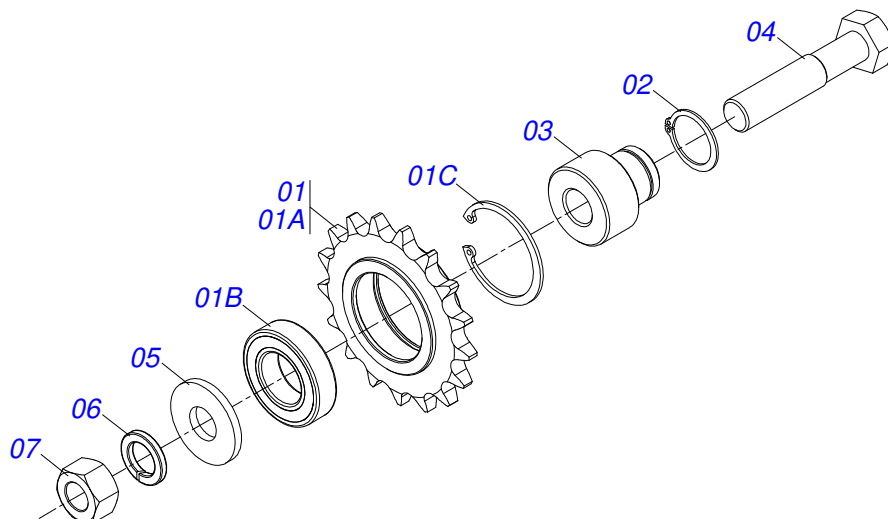

Item	Code	Description	See page	QT
01	0521055499	GEAR WITH NATIONAL BEARING		01
01A	0511061836	17Z GEAR		01
01B	0503019356	BEARING 6005 2RS1		01
01C	0503011105	SEAL RING		01
02	0571015146	TIGHTENER AXLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0501011541	5/8" X 3" BOLT		01
05	0501012140	FLAT WASHER		01
06	0503010027	5/8" SPRING WASHER		01
07	0503010013	5/8" NUT		01

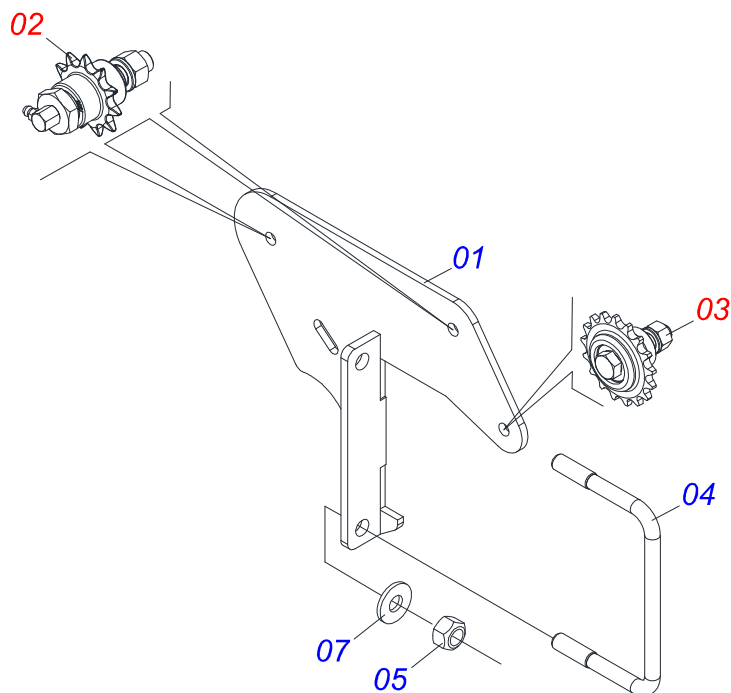


Item	Code	Description	See page	QT
01	0521063900	BIGGER REAR DEVIATION		01
02	0511053045	TENSIONER REAR OFFSET HIGHER		03
03	0511053050	CHAIN TENSIONER		01
04	0503033709	CATCH HEAD LINSEED SEEDS		01
05	0503012412	5/8 UNC SELF LOCKING NUT		02
06	0503011828	FLAT WASHER		01

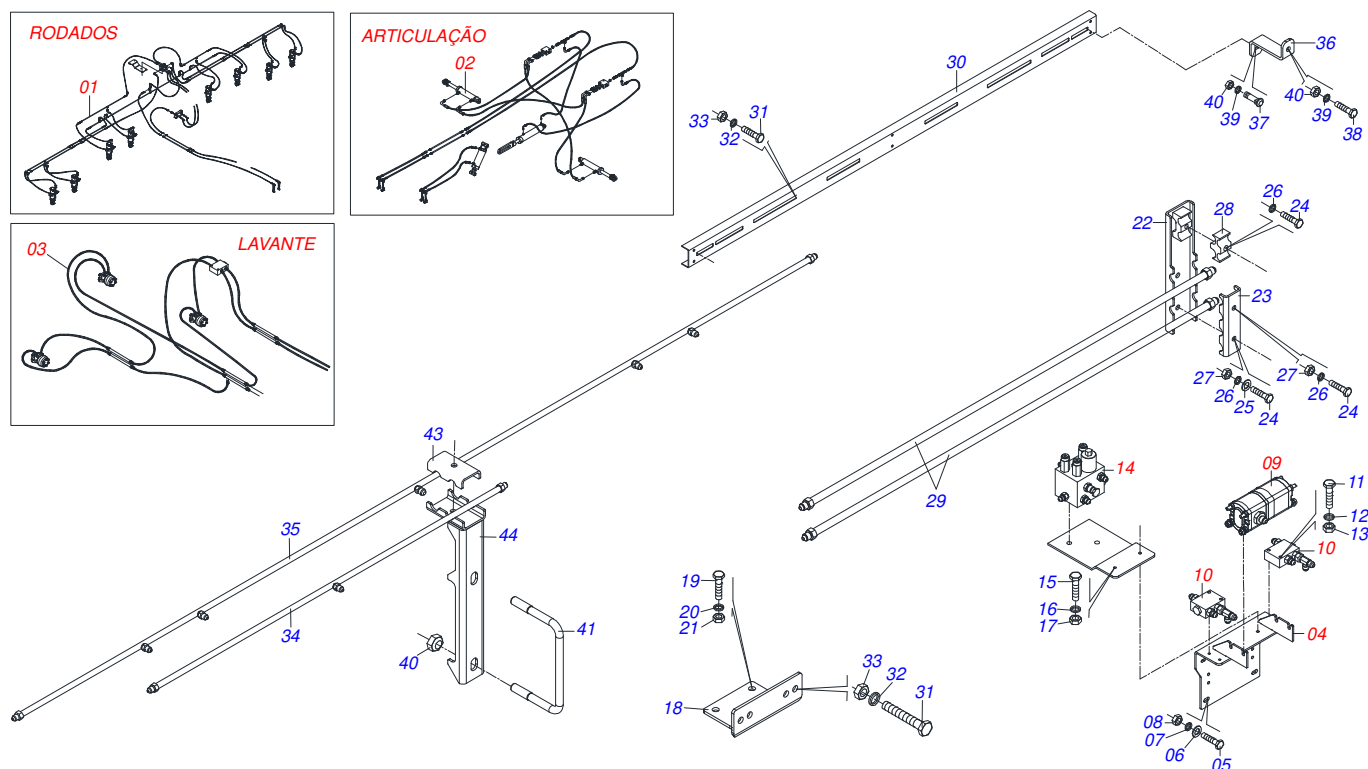


Item	Code	Description	See page	QT
01	0511053760	HOSE KIT	73	01
02	0511053761	HOSE KIT	74	01
03	0511053307	LIFT HOSE GAME	75	01
04	0521063765	FIXER SUPPORT VALVE		01
05	0501010155	1/2" X 1" BOLT		02
06	0501013519	FLAT WASHER		02
07	0503010019	1/2" SPRING WASHER		02
08	0503010060	1/2" NUT		02
09	0501058101	DOUBLE MOTOR ASSY	77	01
10	0501058100	ARTICULATE VALVE	78	02
11	0503010848	5/16" X 3.1/2" BOLT		04
12	0503010179	5/16" ZN SPRING WASHER		04
13	0503010337	5/16" NUT		04
14	0511053313	BLOCK COMMAND	76	01
15	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
16	0503010025	3/8" SPRING WASHER		02
17	0503010026	3/8" NUT		02
18	0551018640	TUBE FIXER UPPER SUPPORT		04
19	0503010237	3/8" X 1" BOLT		08
20	0503010025	3/8" SPRING WASHER		08
21	0503010026	3/8" NUT		08
22	0521062359	FASTENER LOWER DUCT CENTRAL		04
23	0551018635	TUBE UPPER FASTENER		04
24	0503011268	3/8" X 2-1/2" BOLT		12
25	0501013518	FLAT WASHER		04
26	0503010025	3/8" SPRING WASHER		12
27	0503010026	3/8" NUT		08
28	0502012702	BODY SUPPORT CLAMP		08
29	0521061963	OIL TUBE		08
30	0571013314	GUTTER 25 X 58 X 1500		02
31	0503011268	3/8" X 2-1/2" BOLT		04


Item	Code	Description	See page	QT
32	0503010025	3/8" SPRING WASHER		04
33	0503010026	3/8" NUT		04
34	0521062386	OIL DUCT 1654		02
35	0521062385	DUTO OLEO 3704		01
36	0571013956	CENTRAL TRACK SUPPORT		04
37	0503013029	3/8" X 3/4" BOLT		04
38	0503011087	3/8" X 1" BOLT		04
39	0503010025	3/8" SPRING WASHER		08
40	0503010026	3/8" NUT		08
41	0503012412	5/8 UNC SELF LOCKING NUT		08
42	0503033709	CATCH HEAD LINSEED SEEDS		04
43	0551018637	SMALEE FASTENER TUBE UPPER		04
44	0511069527	FIXER SMALLE SUPPORT		04

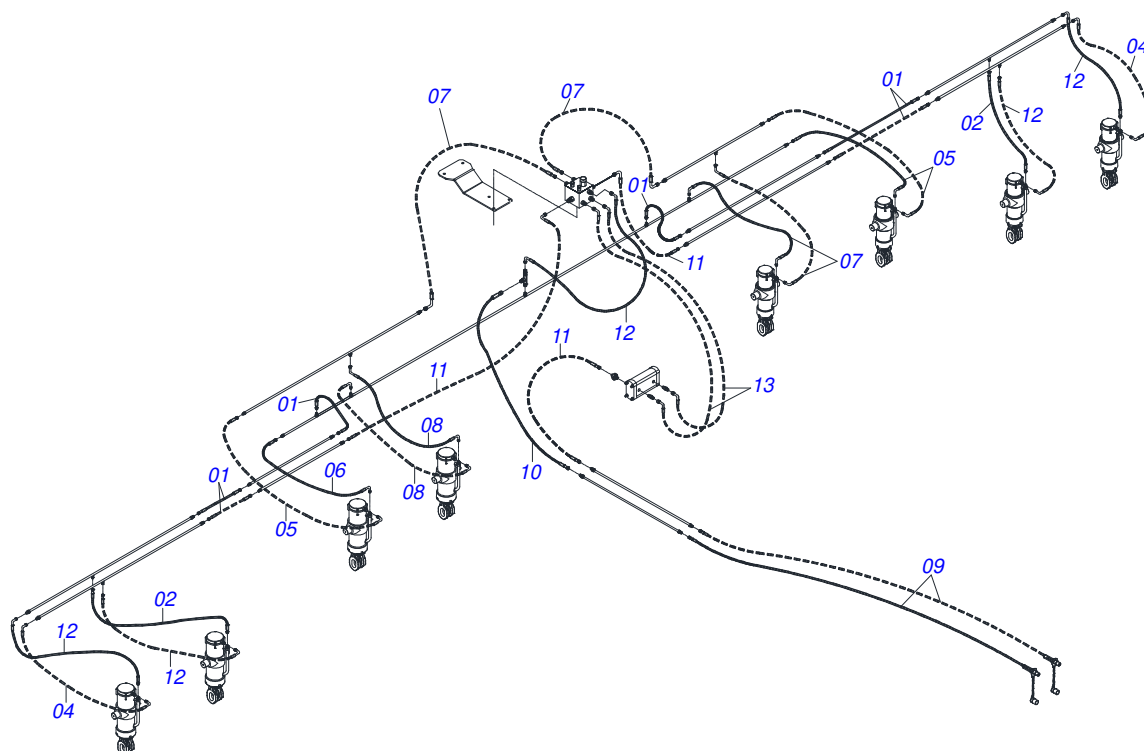


Item	Code	Description	See page	QT
01	0501081816	HOSE 3/8 X 800 TR-TR		06
02	0501081823	HOSE 3/8 X 700 TR-TR		02
03	0501081837	HOSE 3/8 X 700 TR-TC		02
04	0501081838	HOSE		03
05	0501081839	HOSE 3/8 X 1200 TR-TC		01
06	0501081830	HOSE 3/8 X 1000 TC-TC		03
07	0501081840	HOSE 3/8 X 1200 TC-TC		01
08	0501081841	HOSE 1/2 X 5900 TR-TM		02
09	0501081881	HOSE		01
10	0501081891	HOSE 1/2 X 6700 TR-TC		01
11	0501081843	HOSE 3/8 X 750 TR-TC		04
12	0501081820	HOSE 3/8 X 1700 TR-TC		02

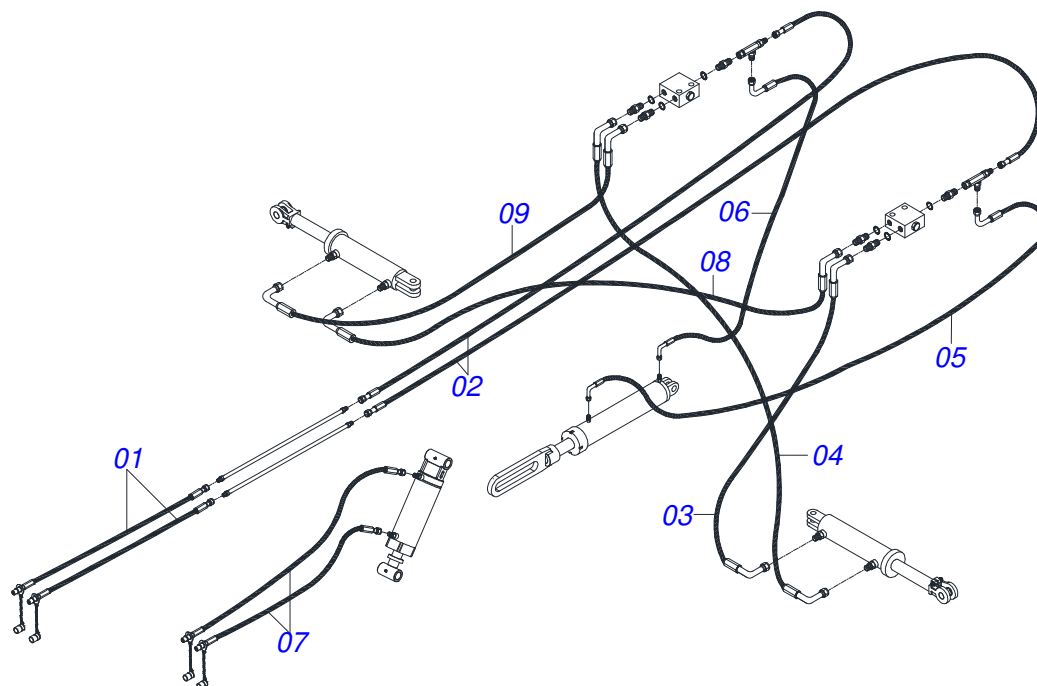


Item	Code	Description	See page	QT
01	0501081844	HOSE		02
02	0501081882	HOSE		02
03	0501081813	HOSE 1/2 X 1400 TC-TC		01
04	0501081846	HOSE		01
05	0501081883	HOSE 3/8 X 3200 TC-TC		01
06	0501081884	HOSE		01
07	0501081848	HOSE 3/8 X 3200 TR-TM		02
08	0501081849	HOSE		01
09	0501081850	HOSE		01

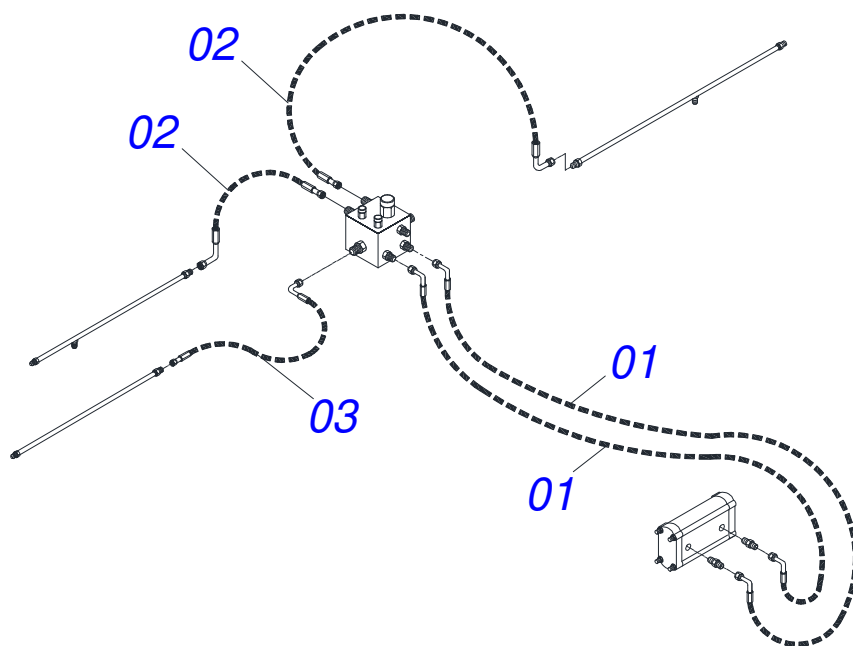


Item	Code	Description	See page	QT
01	0501081874	HOSE		02
02	0501081843	HOSE 3/8 X 750 TR-TC		02
03	0501080123	1/2 X 800 TR-TC HOSE ASSY		01

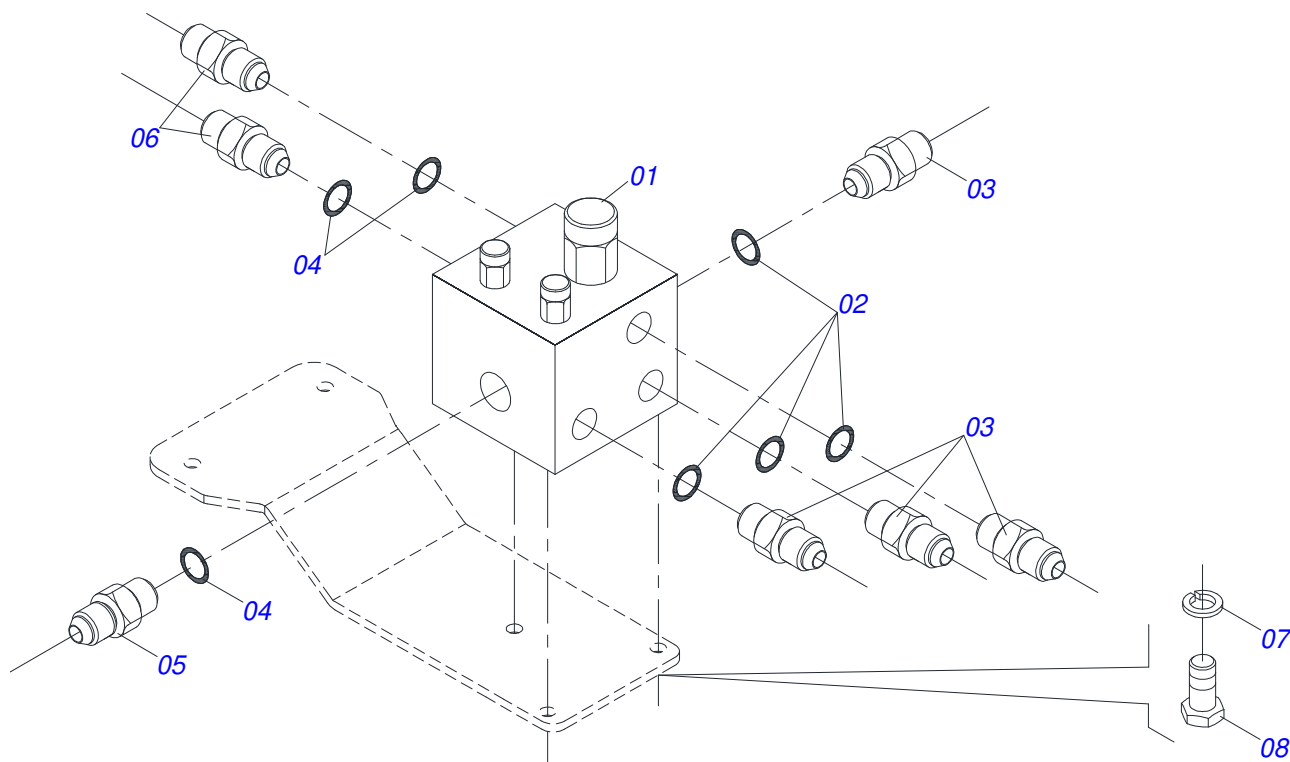


Item	Code	Description	See page	QT
00	0511053313	BLOCK COMMAND	76	01
01	0503016332	BLOCK COMMAND		01
02	0503010190	2-114 N 3006-9B O'RING		04
03	0501010617	3/4" NIPPLE		04
04	0503010045	O'RING		03
05	0501010590	NIPPLE		01
06	0511010111	7/8" NIPPLE		02
07	0503010371	5/16" X 1" BOLT		03
08	0503010179	5/16" ZN SPRING WASHER		03

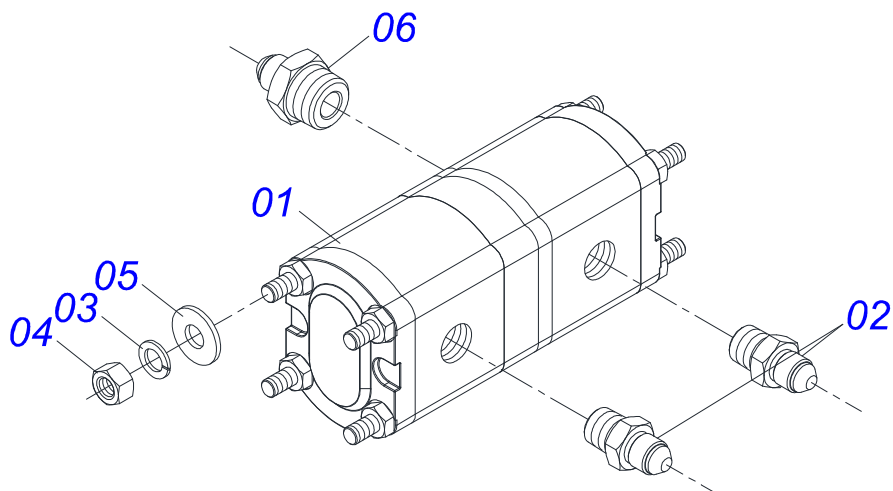


Item	Code	Description	See page	QT
01	0503013791	DOUBLE MOTOR		01
02	0551012463	1/2" BSPT X 3/4" UNF X 51 NIPPLE		02
03	0503010025	3/8" SPRING WASHER		04
04	0503011051	M10 X 0.6" NUT		04
05	0501013518	FLAT WASHER		04
06	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE		01

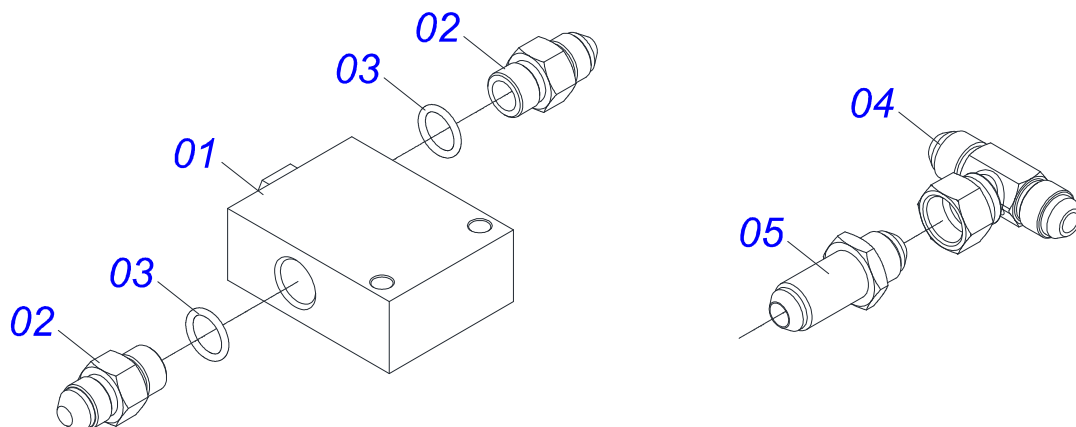


Item	Code	Description	See page	QT
01	0503012481	FLOW DIVIDING VALVE		01
02	0501010617	3/4" NIPPLE		01
03	0503010190	2-114 N 3006-9B O'RING		03
04	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
05	0501011460	7/8 NF REDUCTION NIPPLE		02

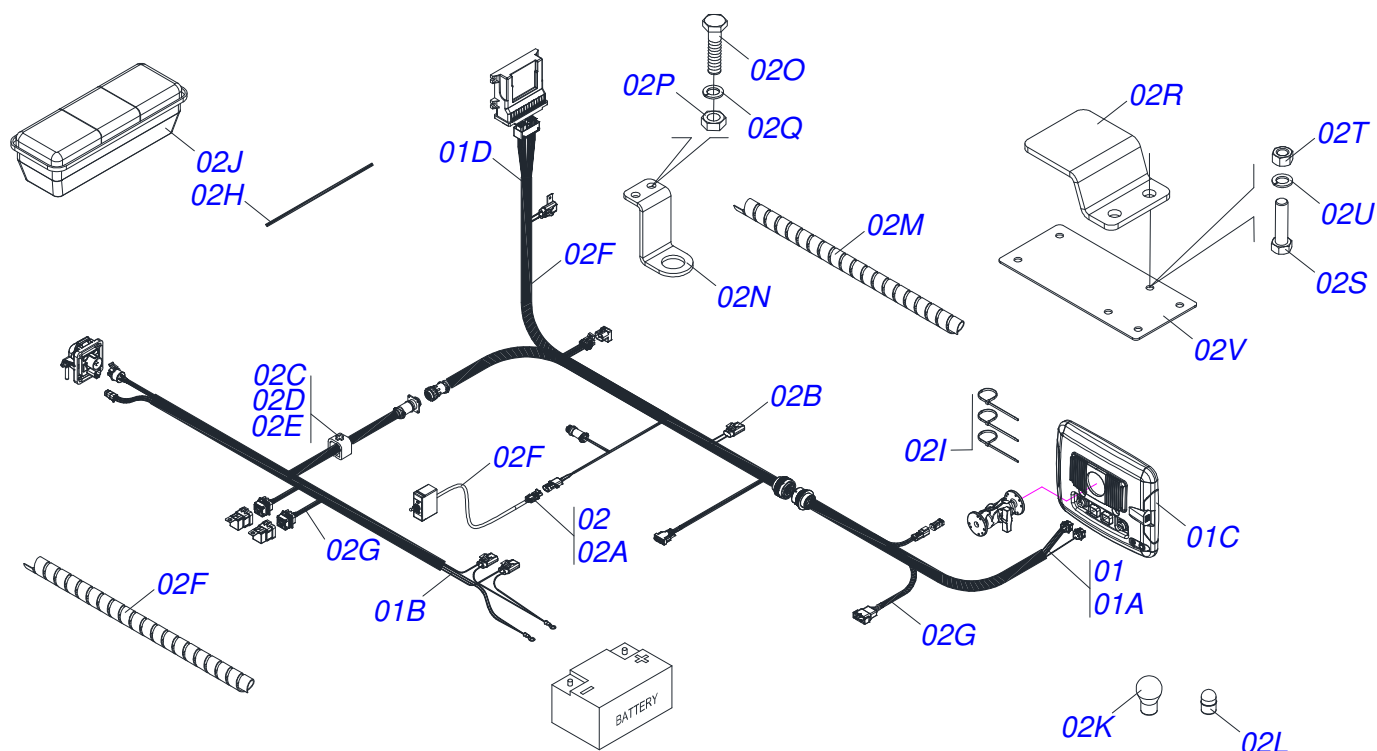

Item	Code	Description	See page	QT
01	0511053348	COMPLETE ELECTRIC KIT		01
01A	0503016468	WHIP FEEDING MACHINE		01
01B	0503016471	WHIP COMMAND MACHINE		01
01C	0503016474	CONTROL PANEL		01
01D	0503062308	WHIP ASSEMBLY WITH OUTLET CLUTCH VALVE		01
01E	0503016477	SENSOR CAPACITIVE SPIRALED		01
02	0511052473	COMPLETE ELECTRIC KIT		01
02A	0503015906	TWO-WAY MALE CONNECTOR		03
02B	0503015908	FEMALE TERMINAL		06
02C	0503016127	RING IDENTIFICATION		01
02D	0503016128	RING IDENTIFICATION		01
02E	0503016129	RING IDENTIFICATION		01
02F	0503014013	PROTECTION SPRING		03
02G	3505152099	ELECTRIC CABLE		24
02H	3504107571	SILICONE FLEXITE		00
02I	0503013527	CLAMP ZIPER		50
02J	0503032811	FLASHLIGHT		02
02K	0503032812	1141 12V LAMP		04
02L	0503032813	67 12V 5W LAMP		02
02M	0503014278	MP100 PLASTIC PROTECTION SPRING FOR 3/4 HOSE		02
02N	0571012483	FIXER SENSOR WHEEL		01
02O	0503010239	BOLT 1/2 UNC X 1.1/2 C S G.2 ZN		02
02P	0503010060	1/2" NUT		02
02Q	0503011440	SPRING WASHER		02
02R	0571012484	PLATE SENSIBLES		01
02S	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		02
02T	0503010060	1/2" NUT		02
02U	0503011440	SPRING WASHER		02
02V	0561016352	ELECTRICAL BOX PLATE FIXING		01

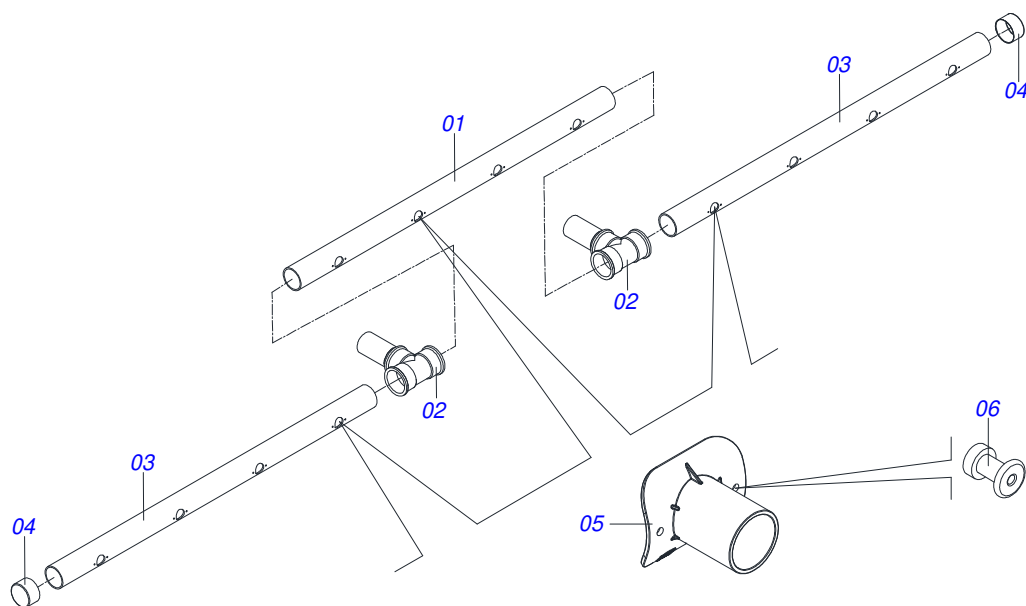


Item	Code	Description	See page	QT
01	0561018787	BODY DISTRIBUTOR AR		01
02	0503031102	SUPREME AIR DISTRIBUTOR		02
03	0561018786	BODY DISTRIBUTOR AR		02
04	0503012566	COVER KAP 110 YELLOW		02
05	0503031943	SOCKET		12
06	0503012856	REBITE POP		24

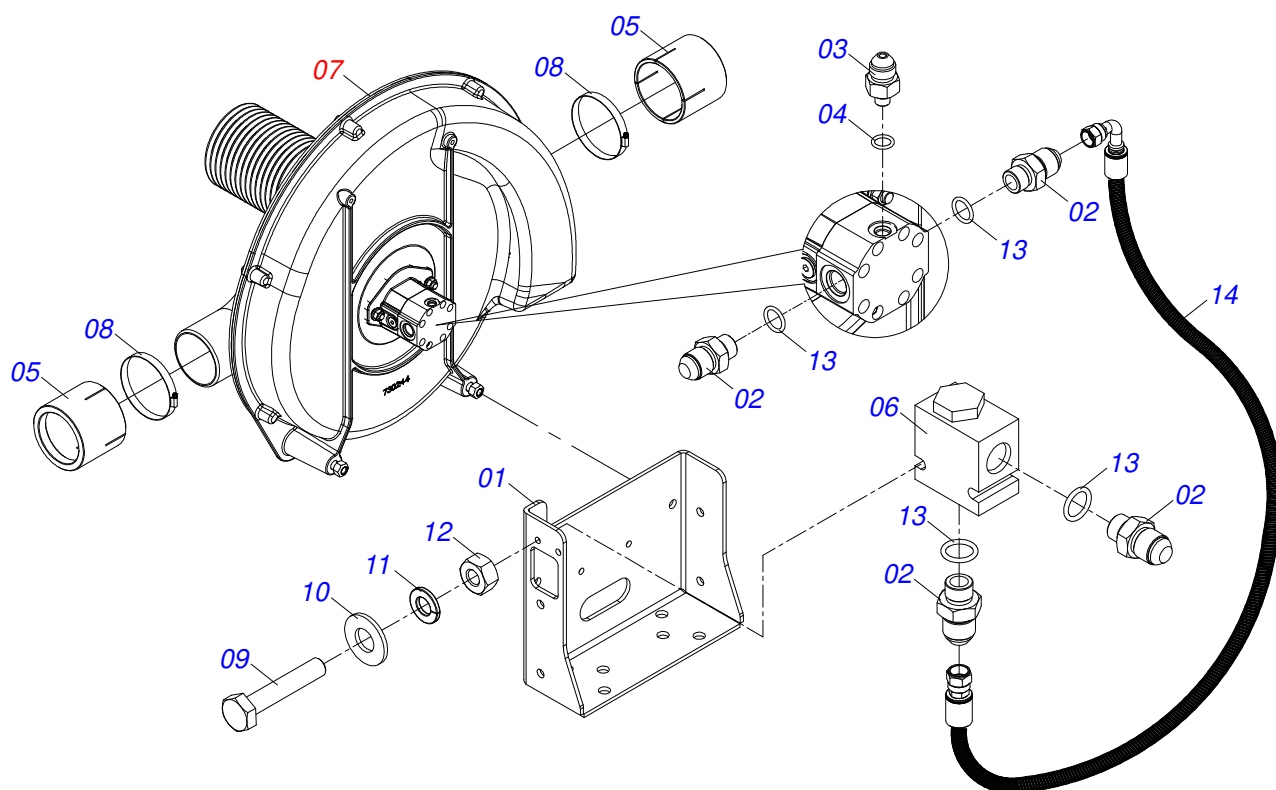


Item	Code	Description	See page	QT
01	0581012099	BODY SUPPORT TURBINE		01
02	0501011460	7/8 NF REDUCTION NIPPLE		04
03	0503034385	NIPPLE 7/16 UNF X UNF JIC		01
04	0503010392	2-046 N 3006 9B O'RING		01
05	0581012096	ROUND SLEEVE		02
06	0503015420	VALVE ANTI-CAVITACAO CV10208TN5		01
07	0521050154	TURBINE P.P WITH HOLE		01
08	0503011372	102 TO 121 CLAMP		02
09	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
10	0501010694	8.5 X 18 X 1.5 FLAT WASHER		02
11	0503010143	1/4" SPRING WASHER		02
12	0503010144	1/4" NUT		02
13	0503010190	2-114 N 3006-9B O'RING		04
14	0501081235	1/2 X 650 TR- TC HOSE		01

CLAMP

0521052549

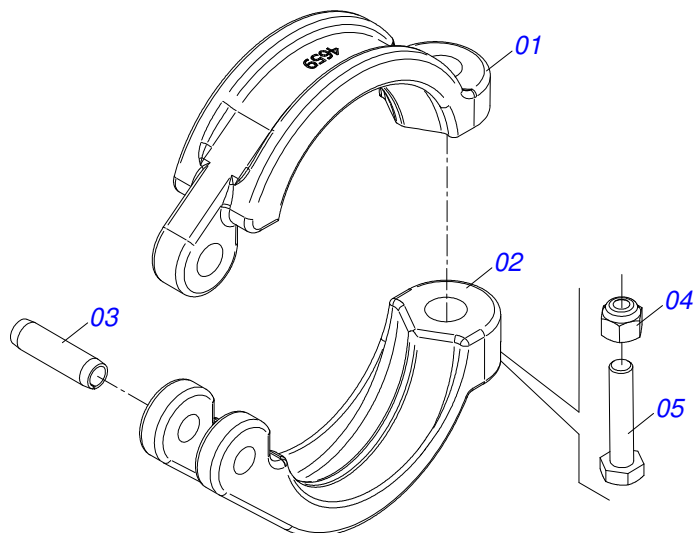


Item	Code	Description	See page	QT
01	0503034660	CLAMP LOWER		01
02	0503034659	CLAMP UPPER		01
03	0503010686	0.2" X 0.7" SPRING PIN		01
04	0503011776	M6 SELF ADJUSTINGNUT		01
05	0503011813	M6 X 1.2" BOLT		01

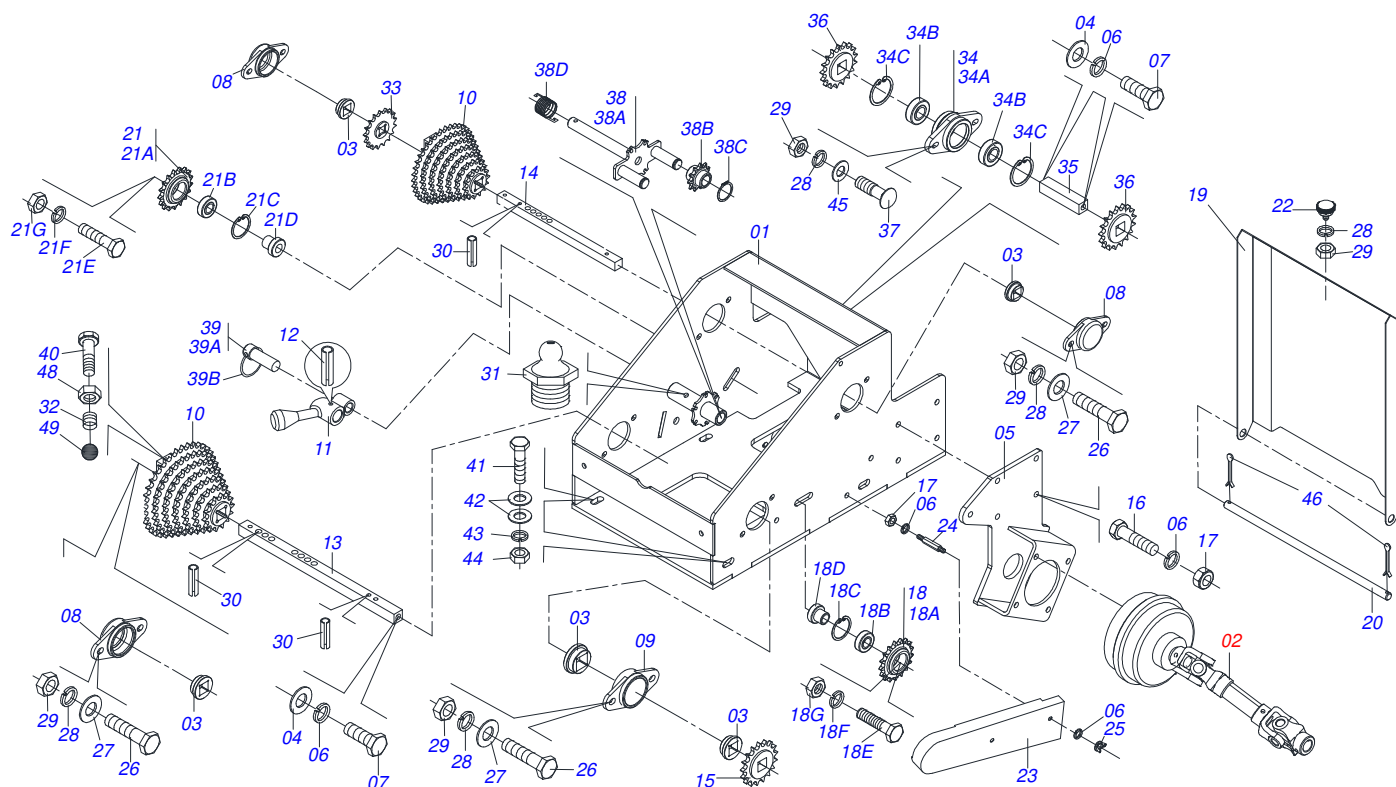


Item	Code	Description	See page	QT
01	0521063732	SUPPORT BEARING LEFT	01	
02	0511056179	CLUTCH WITH CARDAN CENTRAL	01	
03	0503030303	SUPPORT WASHER	05	
04	0501010984	FLAT WASHER	03	
05	0521063733	SUPPORT FRICÇÃO	01	
06	0503010025	3/8" SPRING WASHER	12	
07	0503010237	3/8" X 1" BOLT	03	
08	0501056271	BEARING CLOSED	03	
08A	0502012310	GEAR BOX CLOSE BEARING	01	
08B	0503013462	BEARING WITH BALL BEARING	01	
08C	0503011105	SEAL RING	01	
09	0501056444	BEARING WITH ROLLING	01	
09A	0502011697	BEARING OF THE GEAR BOX	01	
09B	0503013462	BEARING WITH BALL BEARING	01	
09C	0503011105	SEAL RING	01	
10	0502040868	GEAR CONE REPLACEMENT	02	
11	0502011758	REAR TENSIONER LEVER	01	
12	0503010292	0.2" X 1.6" SPRING PIN	01	
13	0571012988	CENTRAL GEAR BOX DRIVER AXLE	01	
14	0571012987	CENTRAL GEAR BOX DRIVER AXLE	01	
15	0511065209	20Z GEAR	01	
16	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	05	
17	0503010026	3/8" NUT	07	
18	0511046518	CENTRAL GEAR BOX CHAIN TENSIONER	01	
18A	0502012367	17Z X P 1/2" GEAR INTERM	01	
18B	0503012882	BEARING	01	
18C	0503011945	503050 CLAMPING RING (FOR AXLE)	01	
18D	0551018562	21 X 31,75 X 26,5 SLEEVE	01	
18E	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN	01	
18F	0503011440	SPRING WASHER	01	
18G	0503010060	1/2" NUT	01	


Item	Code	Description	See page	QT
19	0571012948	COVER		01
20	0571012949	GEAR BOX COVER FIXER ROD		01
21	0511046518	CENTRAL GEAR BOX CHAIN TENSIONER		01
21A	0502012367	17Z X P 1/2" GEAR INTERM		01
21B	0503012882	BEARING		01
21C	0503011945	503050 CLAMPING RING (FOR AXLE)		01
21D	0551018562	21 X 31,75 X 26,5 SLEEVE		01
21E	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		01
21F	0503011440	SPRING WASHER		01
21G	0503010060	1/2" NUT		01
22	0503010386	CABLE		01
23	0571012947	PROTECTION COVER		01
24	0571012989	PROTECTION COVER FIXER		02
25	0503010209	3/8" UNC BUTTERFLY NUT		02
26	0503011953	5/16" X 1" BOLT		08
27	0501010694	8.5 X 18 X 1.5 FLAT WASHER		10
28	0503010179	5/16" ZN SPRING WASHER		11
29	0503010337	5/16" NUT		11
30	0503010292	0.2" X 1.6" SPRING PIN		04
31	0503010002	1800 GREASE FITTING		01
32	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
33	0511064536	28Z GEAR		01
34	0511052432	DOUBLE BEARING WITH ASSY FLANGE		01
34A	0521063461	BEARING DOUBLE WITH FLANGE		01
34C	0503011105	SEAL RING		01
34D	0503013462	BEARING WITH BALL BEARING		02
35	0551011728	3770 PULLER AXLE SEED ROW		01
36	0521063460	20Z GEAR		02
37	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		02
38	0501052778	CHAIN TENSIONER ASSY		01
38A	0511061794	CHAIN TENSIONER		01
38B	0503031805	11Z 1/2" GEAR		02
38C	0503010302	501019 SEAL RING		02
38D	0503031367	SPRING		01
39	0501048790	AXLE WITH LINK ASSY		01
39A	0521012476	GEAR BOX LEVER AXLE		01
39B	0503031369	LINK		01
40	0503010395	1/2" X 1-1/4" BOLT		02
41	0503010920	1/2" X 1.1/2" BOLT		04
42	0511017302	FLAT WASHER		08
43	0503010019	1/2" SPRING WASHER		04
44	0503010060	1/2" NUT		04
45	0501013518	FLAT WASHER		02
46	0503010140	1/8" X 3/4" COTTERPIN		02
47	0511063282	HOSE HOLDER		01
48	0503010060	1/2" NUT		01
49	0503012389	1/2 BALL		02

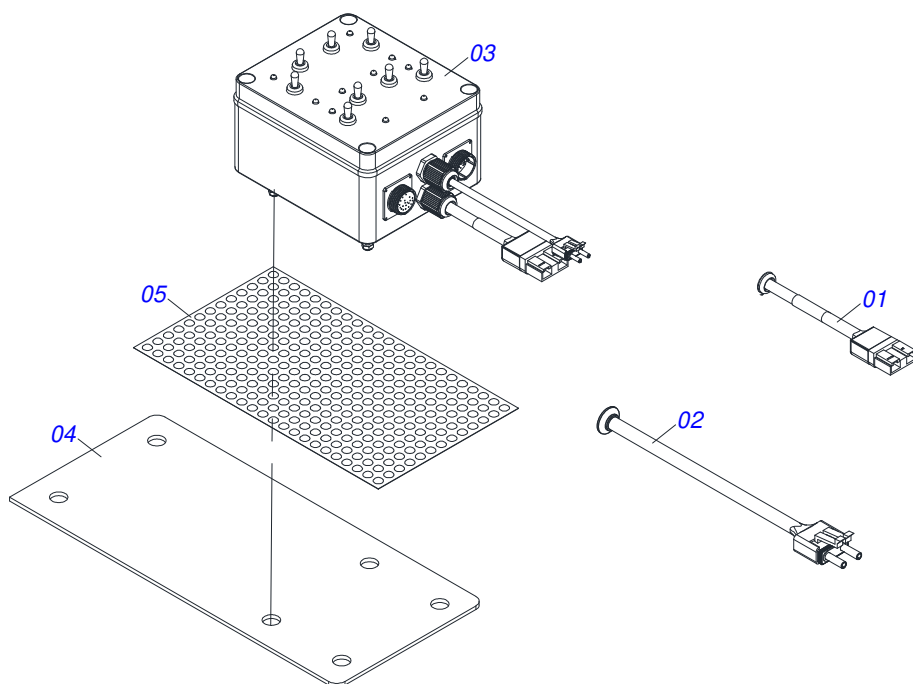


Item	Code	Description	See page	QT
01	0503016472	WHIP FEEDING TRACTOR		01
02	0503016473	WHIP COMMAND TRACTOR		01
03	0503016475	CONTROL PANEL		01
04	0561016352	ELECTRICAL BOX PLATE FIXING		01
05	3114820001	BOLT PLASTIC COIL		02

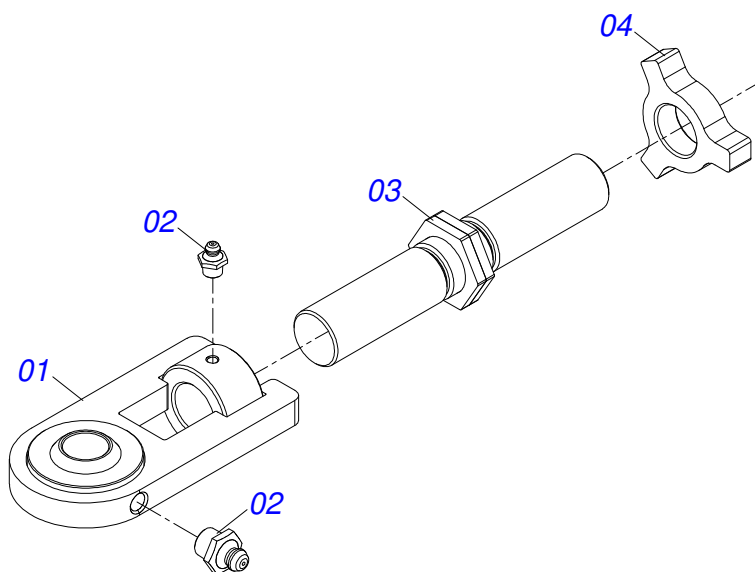


Item	Code	Description	See page	QT
01	0501078991	NUT FIXER		01
02	0503010002	1800 GREASE FITTING		02
03	0501078990	TURNBUCLE AXLE		01
04	0561019879	LOCK ATTACHMENT BAR		01

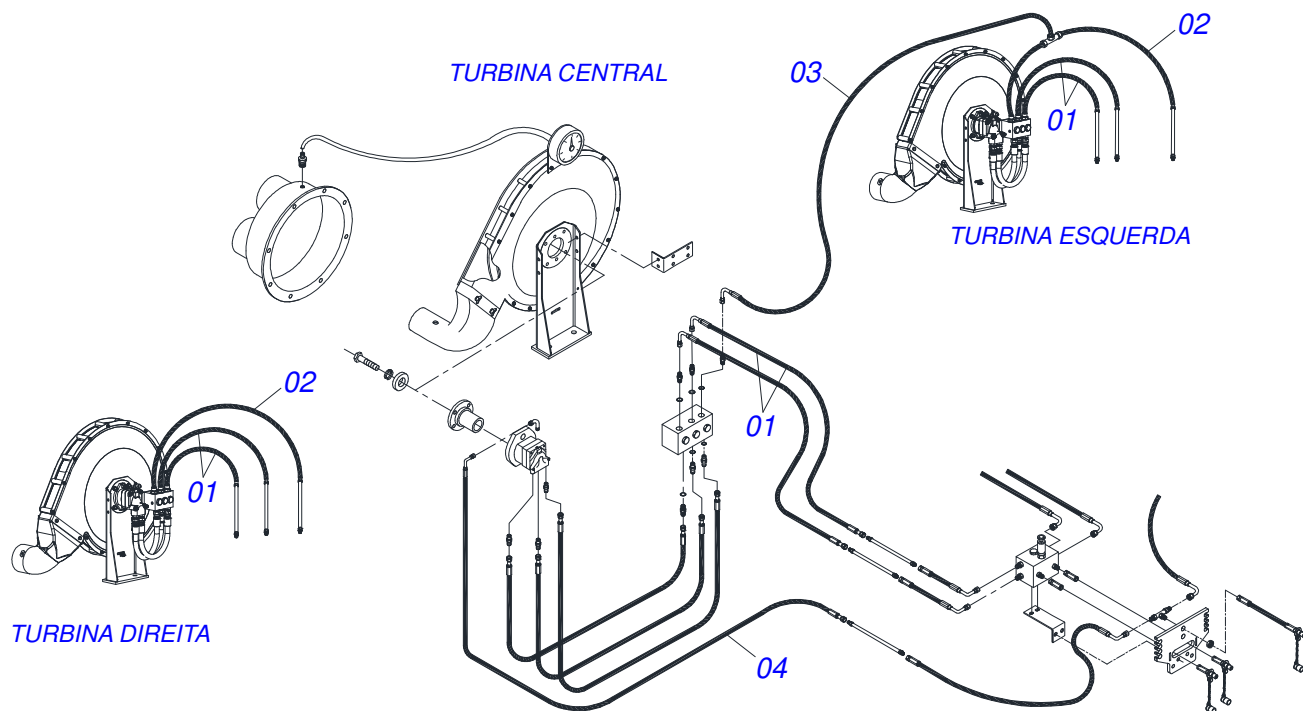


Item	Code	Description	See page	QT
01	0501081892	HOSE 1/2 X 4000 TR-TC		06
02	0501081896	HOSE 3/8 X 3350 TR-TC		02
03	0501081897	HOSE 3/8 X 3350 TR-TC		01
04	0501080981	HOSE 3/4 X 3500 TC-TM 1G112200		02

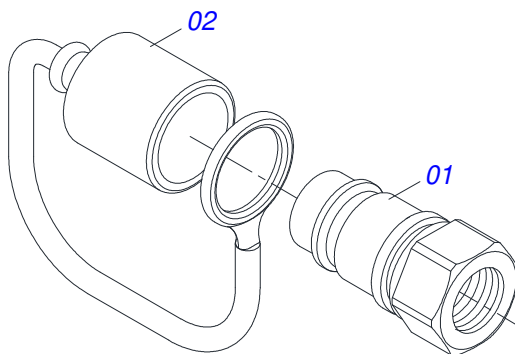


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

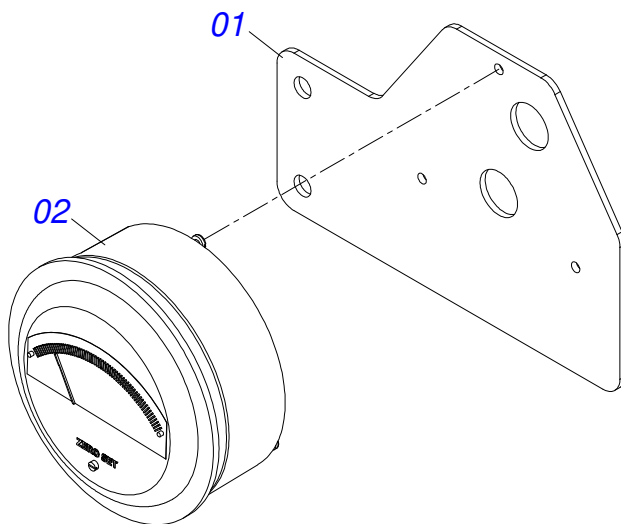


Item	Code	Description	See page	QT
01	0571014368	SWITCH FIXER		01
02	0503013584	VACUUM GAUGE		01

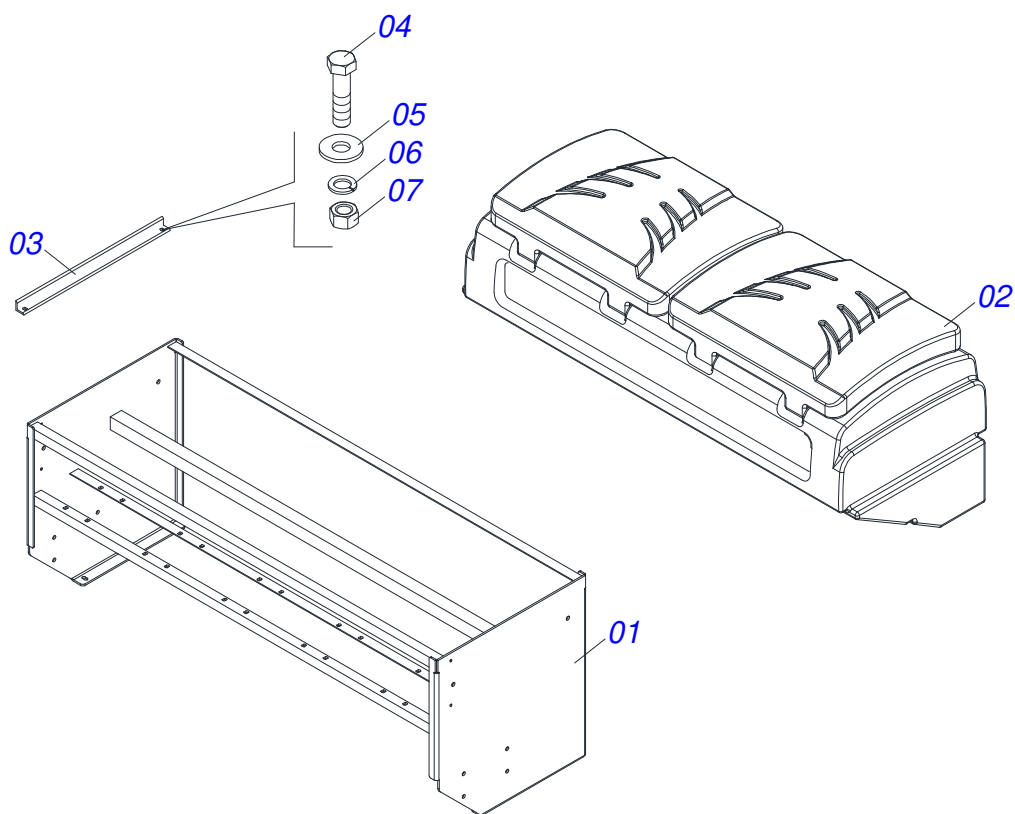

Item	Code	Description	See page	QT
01	0511069814	LH SEED BOX SIDE SUPPORT		01
02	0503060643	COVER BOX LEFT FERTILIZER		01
03	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		02
04	0503010849	3/8" X 1-1/2" BOLT		04
05	0501010984	FLAT WASHER		08
06	0503010025	3/8" SPRING WASHER		04
07	0503010026	3/8" NUT		04

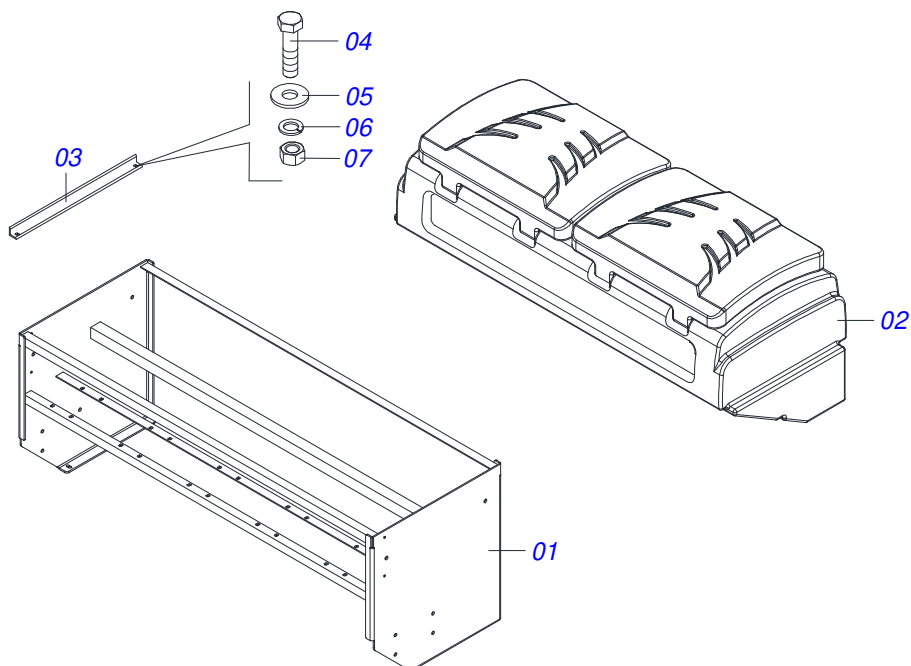

Item	Code	Description	See page	QT
001	0521062332	SIDE SEED BOX SUPPORT FIXER		01
002	0503060643	COVER BOX LEFT FERTILIZER		01
003	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		02
004	0503010849	3/8" X 1-1/2" BOLT		04
005	0501010984	FLAT WASHER		08
006	0503010025	3/8" SPRING WASHER		04
007	0503010026	3/8" NUT		04

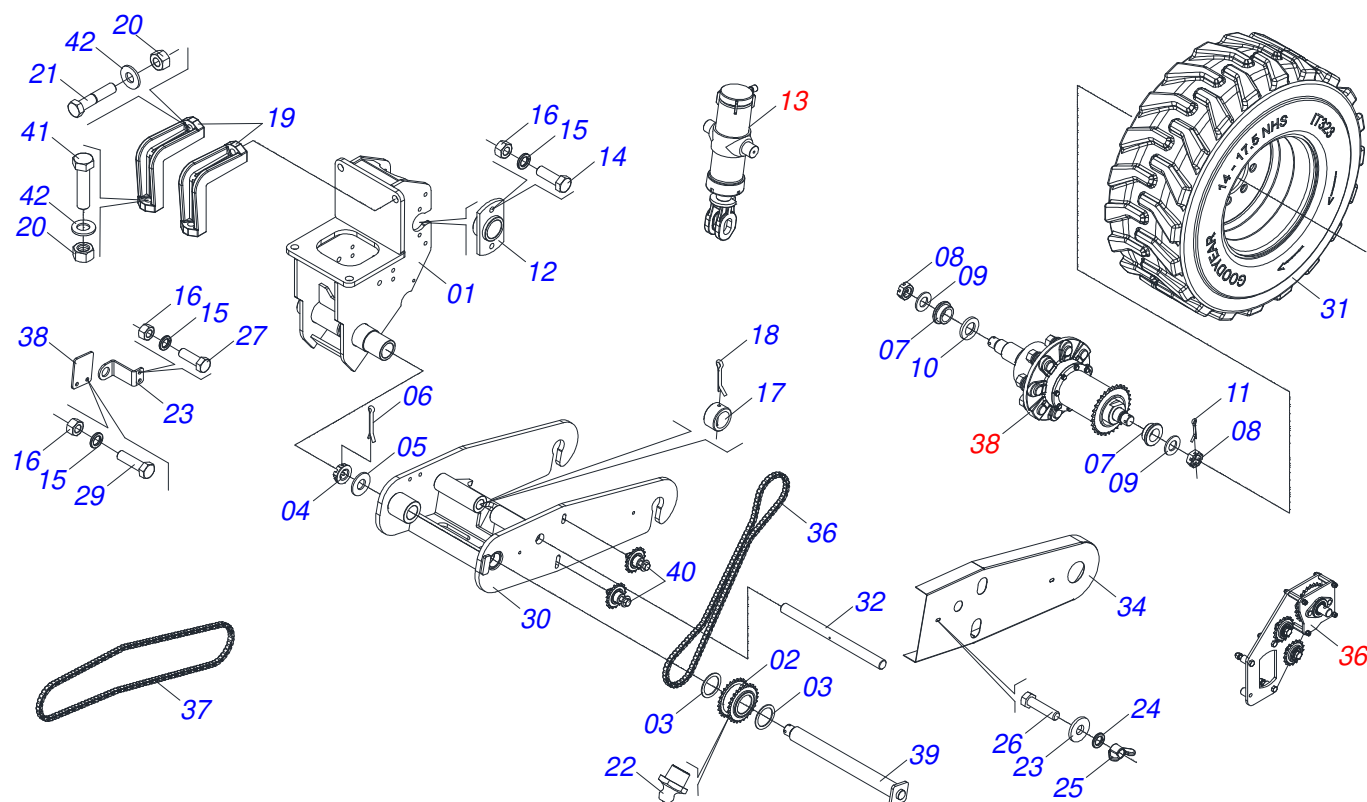

Item	Code	Description	See page	QT
01	0521064573	LARGER SUPPORT		01
02	0511068422	WHEEL GEAR DOBLE		01
03	0551018571	FLAT WASHER		02
04	0501010630	1.1/2" CASTLE NUT		01
05	0561019929	FLAT WASHER		01
06	0503011345	1/4" X 3-1/2" COTTERPIN		01
07	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
08	0503011052	1.1/4" X 0.77" CASTLE NUT		02
09	0501017779	32 X 60 X 4.75 FLAT WASHER		02
10	0551014508	FLAT WASHER		01
11	0503010010	1/4" X 2.1/2" COTTERPIN		02
12	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
13	0511058240	HYDRAULIC CYLINDER	65	01
14	0503010920	1/2" X 1.1/2" BOLT		04
15	0503010019	1/2" SPRING WASHER		08
16	0503010060	1/2" NUT		08
17	0551014565	CILINDER FORK SLEVE GUIDES		01
18	0503010067	3/16" X 2.1/2" COTTER PIN		01
19	0502012731	WHEEL HOLDER		02
20	0503010014	3/4" NUT		04
21	0501010195	3/4" X 3-1/2" BOLT		02
22	0503010002	1800 GREASE FITTING		03
23	0501013518	FLAT WASHER		02
24	0503010025	3/8" SPRING WASHER		02
25	0503010209	3/8" UNC BUTTERFLY NUT		02
26	0503010849	3/8" X 1-1/2" BOLT		02
27	0501010063	1/2" X 1-1/2" BOLT		02
28	0571015148	PLATE SENSIBLES		01
29	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		02
30	0521064550	CARRYING-WHEELS FORK		01
31	0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)		01


WHEELED LEFT SET OF TRANSMISSION

0521043453

Item	Code	Description	See page	QT
32	0571015194	Ø34,93 X 490 USAP AXLE		01
33	0591011692	WHEEL SENSOR FIXER (30.5)		01
34	0561019941	RIGHT PROTECTIVE CAP WHEELS		01
35	0503014857	50-1 X CHAIN X 122 LINK + REDUCION		01
36	0511054501	TRANSMISSION CAMBIO LEFT		01
37	0503014086	50-1 X 123 CHAIN LINK + MENDING		01
38	0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR		01
39	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
40	0511054464	WHEEL FORK TENSIONER		02
41	0503011198	C3/4" X 6" SCREW		02
42	0501010322	FLAT WASHER		04

LEFT GEAR BOX ASSY

0511051755

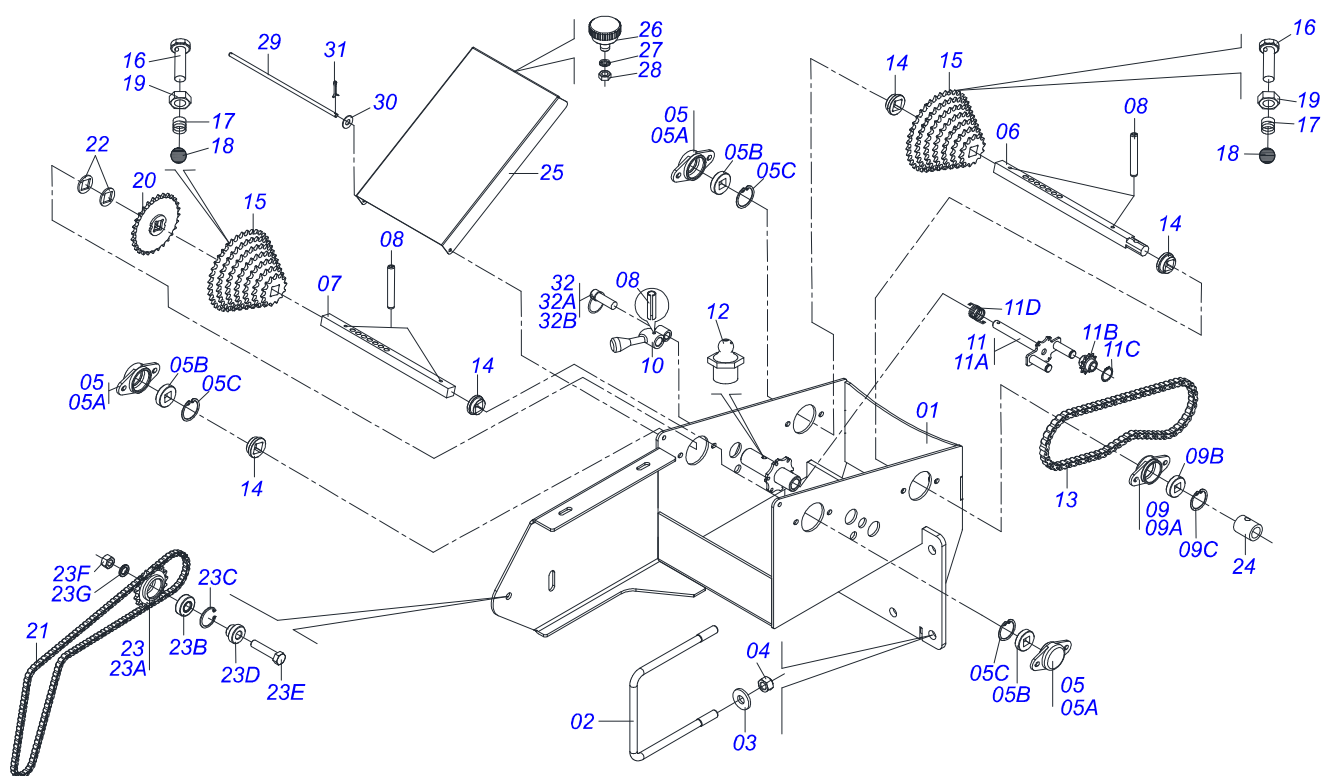

Item	Code	Description	See page	QT
01	0521063024	LH SIDE GEAR BOX SUPPORT	01	
02	0551015037	5/8" UNC X 210 X 198 FASTENER	02	
03	0503010027	5/8" SPRING WASHER	04	
04	0503010013	5/8" NUT	04	
05	0501056271	BEARING CLOSED	03	
05A	0502012310	GEAR BOX CLOSE BEARING	01	
05B	0503013462	BEARING WITH BALL BEARING	01	
05C	0503011105	SEAL RING	01	
06	0551018627	SIDE GEAR BOX DRIVER AXLE	01	
07	0551018581	CENTRAL GEAR BOX DRIVEN AXLE	01	
08	0503010292	0.2" X 1.6" SPRING PIN	05	
09	0501056444	BEARING WITH ROLLING	01	
09A	0502011697	BEARING OF THE GEAR BOX	01	
09B	0503013462	BEARING WITH BALL BEARING	01	
09C	0503011105	SEAL RING	01	
10	0502011758	REAR TENSIONER LEVER	01	
11	0501052778	CHAIN TENSIONER ASSY	01	
11A	0511061794	CHAIN TENSIONER	01	
11B	0503031805	11Z 1/2" GEAR	02	
11C	0503010302	501019 SEAL RING	02	
11D	0503031367	SPRING	01	
12	0503012204	40-1 CHAIN X 82 LINK + RED	01	
13	0503010002	1800 GREASE FITTING	01	
14	0503030303	SUPPORT WASHER	04	
15	0502040868	GEAR CONE REPLACEMENT	02	
16	0503010395	1/2" X 1-1/4" BOLT	02	
17	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING	02	
18	0503012389	1/2 BALL	02	
19	0503010060	1/2" NUT	02	
20	0511064536	28Z GEAR	01	
21	0503016097	40-1 X 145 CHAIN LINK + MENDING	01	


LEFT GEAR BOX ASSY

0511051755


Item	Code	Description	See page	QT
22	0521014167	CONE LOCK		01
23	0501054221	SEED BEARING INTERM LINE		02
23A	0502012367	17Z X P 1/2" GEAR INTERM		01
23B	0503012882	BEARING		01
23C	0503011945	503050 CLAMPING RING (FOR AXLE)		01
23D	0521010454	0.83" X 1.25" X 0.79" SLEEVE		01
23E	0503010905	1/2" X 2-1/4" BOLT		01
23F	0503010019	1/2" SPRING WASHER		01
23G	0503010060	1/2" NUT		01
24	0551018630	CARDAN SHAFT GUIDES SLEEVE		01
25	0551011625	PROTECTION COVER		01
26	0503010386	CABLE		01
27	0503010179	5/16" ZN SPRING WASHER		01
28	0503010337	5/16" NUT		01
29	0551018629	GEAR BOX COVER FIXER ROD		01
30	0501010984	FLAT WASHER		02
31	0503010257	1/8" X 1" COTTERPIN		02
32	0501048790	AXLE WITH LINK ASSY		01
32A	0521012476	GEAR BOX LEVER AXLE		01
32B	0503031369	LINK		01

HOSE HOLDER ASSY

0511051807

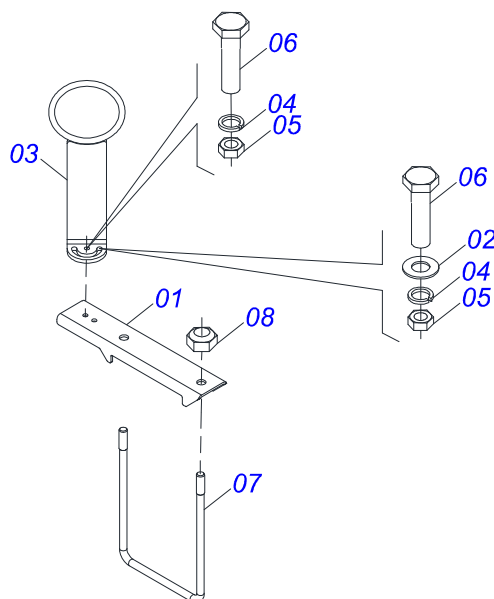

Item	Code	Description	See page	QT
01	0571011154	SUPPORT FIXING BASE		01
02	0501010984	FLAT WASHER		01
03	0521063079	HOSE HOLDER ASSY		01
04	0503010025	3/8" SPRING WASHER		02
05	0503010026	3/8" NUT		02
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
07	0571011070	5/8" UNC FASTENER		01
08	0503012412	5/8 UNC SELF LOCKING NUT		02

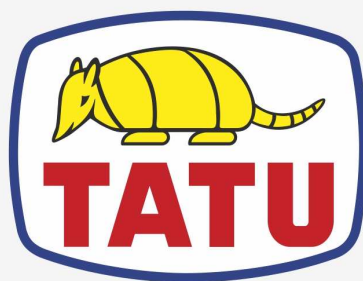

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

