

ROW CROP PLANTERS

USAP TITANIUM - FRAME 9050 - CSU/TCE/APT ISOBUS

Code: 0501093131
Series: S-0419
Revision: 00
Date Revision: SETEMBRO/2022

PARTS CATALOGUE



MARCHESAN



PRODUCTS

Code	Description
0111140475	USAP 9050/20E450 CSU CM TIT DT ESPECIAL S-0419
0111140450	USAP 9050/20E450 CSU CM TIT DT ESPECIAL S-0419

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.

INDEX

0909095983	FRAME ASSY	1
0909095984	FRAME RIGHT SIDE ASSY	2
0909095985	ASSY CENTRAL FRAME	3
0909095986	LEFT SIDE FRAME ASSY	4
0521059033	TELESCOPIO WITH STRAW INTERNAL 395/2482 ASSY	5
0521051438	HEADER 3 POINTS ASSY	6
0521058831	FRENCH HAND ASSY RIGHT 3593	7
0521058832	FRENCH HAND ASSY LEFT 3593	8
0511054713	ASSY FRENCH HAND TRANSMISSION SHAFT	9
0521058088	ROTULA WITH EXTENSOR AXIS 2	10
0511052052	SUPPORT WITH FIXATION	11
0521057792	PANTOGRAPHY HEADER	12
0521057786	HYDRAULIC CYLINDER HEAD PANTOGRAPH	13
0531052688	SEMI ASSEMBLED REST	14
0511053121	GREATER TOOL BOX ASSY	15
0521058344	WATER RESERVOIR WITH SOAP	16
0521057815	HYDRAULIC HOSE SUPPORT WITH FIXATION	17
0511059814	TELESCOPIC LOCK ASSY	18
0521059133	SIDE HEXAGONAL AXLE	19
0521055326	RIGHT WHEEL WITH TRANSMISSION	20
0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	21
0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	22
0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR	23
0511054463	WHEEL TENSIONER SUPORT CENTRAL	24
0511054464	WHEEL FORK TENSIONER	25
0511054500	TRANSMISSION EXCHANGE RIGHT	26
0511054461	STRETCHER TOP TRANSMISSION SWIRLED	27
0521057490	CHAIN STRETCHER WITH ASSY HOLE 13	28
0511057868	ASSY CURRENT STRETCHER 79	29
0521056865	EXCHANGE RIGHT ASSY FERTILIZER	30
0521056866	RIGHT SEMI-ASSEMBLED EXCHANGE	31
0501056444	BEARING WITH ROLLING	32
0501056271	GEARBOX CLOSED BEARING	33
0501052776	CHAIN TENSIONER RIGHT ASSY GREATEST	34
0501048790	AXLE WITH RING	35
0501046805	DRIVE SHAFT	36
0521053068	MOTOR SUPPORT APT ASSY	37
0511052600	STRETCHER HYDRAULIC MOTOR SUPPORT	38
0521058778	LEFT 5 MOUTH SEED SUPPORT	39
0531050722	RIGHT SIDE SUPPORT 5 MOUTH FERTILIZER SILO	40
0521059195	RIGHT SIDE SUPPORT SILO FERTILIZER 5 MOUTH	41
0521058775	LEFT FERTILIZER SUPPORT 5 MOUTHS FERTILIZER	42
0501053788	3/4 SQUARE AXLE FASTENER	43
0521054282	BEARING	44
0521054313	CLOSED BEARING	45
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	46
0521051407	FIXER SILO FERTILIZER	47
0521055365	SEED CONDUCTOR	48
0521054290	ASSY SIDE SUPPORT	49
0521053054	ASSY SIDE HANDLE	50
0521059135	SIDE PLATFORM	51
0521054279	PLATFORM FIXER	52
0521054272	LADDER ASSY	53
0521058714	SIDE GUTTER ASSY	54
0521059136	SIDE CHASSIS SET USAP CHASSIS 2175 APT SEED	55



MARCHESAN

INDEX

0521055102	BIGGEST FULL GUTTER SUPPORT	56
0531050721	SIDE DUCT ASSEMBLY	57
0521059137	SIDE DUCT SET	58
0511059943	SUPPORT FASTENER ASSY	59
0511059928	SIDE DUTY SUPPORT	60
0521059138	ADHESIVE LABEL ASSY	61
0909095987	SEED LINE/ASSY FERTILIZER	62
0521058534	FRONT LINE SEED LONG TCE/CM	63
0521058533	FRONT SEED SHORT LINE TCE/CM	64
0521058612	FRONT SUPER LONG SEED LINE TCE	65
0521059045	BEARING WITH CURRENT ENCAPSULATED	66
0521050096	SEED HOPPER SYSTEM (CSU)	67
0521050118	3" NOZZLE SEED HOPPER	68
0511052058	SEED SYSTEM TITANIUM	69
0521058571	RIGHT REAR TITANIUM/TATU	70
0521058572	LEFT REAR TITANIUM/TATU	71
0521056955	RIGHT DDD ASSY	72
0521056954	LEFT DDD ASSY	73
0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	74
0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	75
0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	76
0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	77
0531050193	DOSING ASSY TITANIUM/TATU	78
0531050596	FENDER ASSY	79
0521056639	SEED ROW TRANSMISSION	80
0521055053	DEPTH/COMPACTOR SYSTEM - SPCRR	81
0521055065	ASSY DEPTH / COMPACTOR	82
0521055888	SET REGULAGEM RAPIDA SEM LUBRIFICAÇÃO	83
0521055017	RIGHT COMPACTOR WHEEL	84
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	85
0501056769	DEPTH WHEELS REGULATOR ASSY	86
0521055068	RAYED WHEEL CENTER CLOSED	87
0521055055	BOX WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	88
0521054990	LEFT COMPACTOR WHEEL	89
0521055054	LEFT ARM WITH SLEEVE	90
0521055066	RIGHT ARM WITH GLOVE	91
0521055033	SEMI-ASSEMBLED COMPACTOR BODY	92
0521054262	RIGHT FERTILIZER CONDUCTOR	93
0521056855	ASSY SHORT FERTILIZER CONDUCTOR	94
0521056854	ASSY LONG FERTILIZER CONDUCTOR	95
0521054263	LEFT FERTILIZER CONDUCTOR ASSY	96
0511052024	FAST CLOSING SET	97
0503062066	DISC SET WITH CORN RING	98
0503062067	DISC SET / RING SOY 90F TITANIUM	99
0521050525	FIXER FERTILIZER CONDUCTOR	100
0521059184	CENTRAL FRAME 4500 TELESCOPIC FIXATION/LOCK	101
0521050019	TIGHTENING PLATE WITH FIXING INTERNAL	102
0521052189	38,10 X 63,50 X 386 X 148 HYDRAULIC CYLINDER	103
0521059185	CENTRAL HEXAGONAL AXLE TCE/APT	104
0521052144	SENSOR ASSEMBLY LIFT LINES	105
0521044028	CENTRAL WHEEL WITH TRANSMISSION 8940	106
0531050873	SIDE CENTRAL WHEEL WITHOUT TRANSMISSION	107
0511058240	HYDRAULIC CYLINDER 50,80 X 101,60 X 483 X 276	108
0511054499	TRANSMISSION OF LARGER CENTRAL EXCHANGE	109
0501053654	3/4 SEED TRANSMISSION DOUBLE BEARING	110



MARCHESAN

INDEX

0511054495	WHEEL WITHOUT TIRE WITHOUT TRANSMISSION	111
0521057222	ASSY CENTRAL FERTILIZER EXCHANGE	112
0501052778	CHAIN TENSIONER ASSY	113
0511054489	LEFT TENSIONER CENTRAL EXCHANGE	114
0511056179	CLUTCH WITH CARDAN CENTRAL	115
0501056443	GEAR HOUSING BEARING	116
0521056856	ECU BOX WITH ASSY SUPPORT	117
0521056857	ECU APT / TVT BOX WITH EXCHANGE	118
0521059026	RIGHT CENTRAL SEED BOX COMPLETE FERTILIZER	119
0521059027	COMPLETE LEFT SEED CENTER BOX FERTILIZER	120
0521059186	CENTRAL SILO SUPPORT	121
0521059025	CENTRAL SUPPORT LEFT 5 MOUTH FULL FERTILIZER	122
0521059028	RIGHT CENTRAL SUPPORT 5 MOUTH FULL FERTILIZER	123
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	124
0521059187	CENTRAL PLATFORM ASSY	125
0511054515	ASSY LEFT ARTICULATION ARM	126
0511054516	ASSY RIGHT ARTICULATION ARM	127
0521055949	LOWER ARTICULATED ARM CYLINDER ASSY	128
0511058226	HYDRAULIC CYLINDER 50,80 X 114,30 X 810 X 1300	129
0531050719	HYDRAULIC ASSY APT	130
0521059188	HYDRAULIC SET FERTILIZER APT SEED	131
0521057013	TRIPLE DIVISER VALVE BRP00079 WITH NIPLES	132
0521057526	SUPPORT BLOCK	133
0521059189	APT CENTRAL DUCT ASSEMBLY	134
0521053537	CENTRAL REAR DUCT SUPPORT	135
0531050586	CASAPPA TRIPLE FLOW DIVIDER VALVE 0201001Z WITH NIPLES	136
0531050058	SUPPORT ASSY BLOCK/VALVES	137
0531050351	ARTICULATED FERTILIZER / SEED HOSE ASSY	138
0521055275	ASSY HOSE ARTICULATION	139
0521055274	HEAD HOSE ASSY	140
0531050617	LIFT HOSE SET FERTILIZER / SEED 1 SIDE WHEEL	141
0521055276	HOSE KIT LEVANTE	142
0531051058	SET FERTILIZER AND SEED HOSE	143
0531050028	HOSE KIT APT FERTILIZER / SEED	144
0501053834	MALE QUICK COUPLER	145
0521059192	CENTER TRACK SET FERTILIZER SEED	146
0521058651	ELECTRICAL ASSY 15MT / 3F MECHANICAL LED	147
0521054283	HEADLIGHT WITH SUPPORT	148
0521059393	LED FLASHLIGHT WITH FIXATION SUPPORT	149
0521055426	ASSY ELECTRICAL BOX SUPPORT	150
0521052143	CLUTCH INDUCTIVE SENSOR ASSEMBLY	151
0521059714	ISOBUS 20L45/50 ASSEMBLY WITH SEED MONITOR	152
0521056496	MOTOR EMD 80 WITH BLOCK BLFP2618	153
0511056972	FILTER HYDAC	154
0531050507	APT CENTRAL ADHESIVE LABEL ASSY	155
0521057203	ELECTRIC ASSEMBLY BCE (PACKED) MECHANICAL	156
0521055327	LEFT WHEEL WITH TRANSMISSION	157
0511054501	TRANSMISSION CAMBIO LEFT	158
0521059910	CENTRAL STRETCHER	159
0511054476	RIGHT TENSIONER CENTRAL EXCHANGE	160
0501056573	17Z GEAR ASSY	161
0521058940	LEFT CHANGE INVERTED ASSY FERTILIZER	162
0521058941	LEFT CHANGE INVERTED SEMI MOUNTED	163
0521054349	FILTER SUPPORT	164




MARCHESAN

INDEX


0521058777	LEFT 5 MOUTH SEED SUPPORT		165
0531050720	LEFT SIDE SUPPORT 5 MOUTH FERTILIZER SILO		166
0521059134	LEFT SIDE SUPPORT SILO FERTILIZER 5 MOUTH		167
0521058776	LEFT FERTILIZER 5 MOUTH SUPPORT		168

FRAME ASSY

0909095983

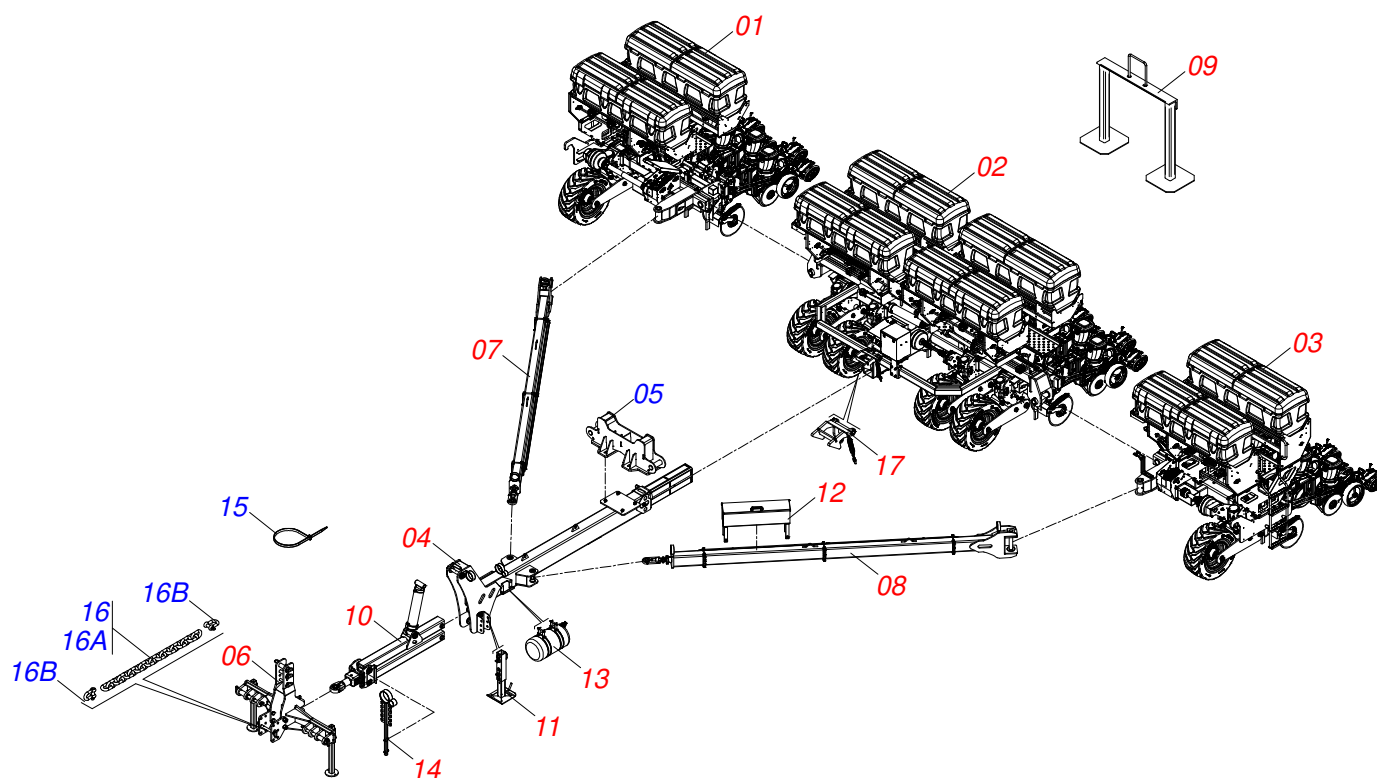


Item	Code	Description	See page	QT
01	0909095984	FRAME RIGHT SIDE ASSY	2	01
02	0909095985	ASSY CENTRAL FRAME	3	01
03	0909095986	LEFT SIDE FRAME ASSY	4	01
04	0521059033	TELESCOPIO WITH STRAW INTERNAL 395/2482 ASSY	5	01
05	0531062243	TRANSPORT LOCK		01
05.	0521069072	TRANSPORT LOCK		01
06	0521051438	HEADER 3 POINTS ASSY	6	01
07	0521058831	FRENCH HAND ASSY RIGHT 3593	7	01
08	0521058832	FRENCH HAND ASSY LEFT 3593	8	01
09	0511052052	SUPPORT WITH FIXATION	11	04
10	0521057792	PANTOGRAPHY HEADER	12	01
11	0531052688	SEMI ASSEMBLED REST	14	01
12	0511053121	GREATER TOOL BOX ASSY	15	01
13	0521058344	WATER RESERVOIR WITH SOAP	16	01
14	0521057815	HYDRAULIC HOSE SUPPORT WITH FIXATION	17	01
15	0503018829	NYLON CLAMP		12
16	0521058345	SAFETY CHAIN WITH SHACKLE		01
16A	0503014120	CHAIN		01
16B	0503014321	CABLE STEEL SHACKLE		02
17	0511059814	TELESCOPIC LOCK ASSY	18	01

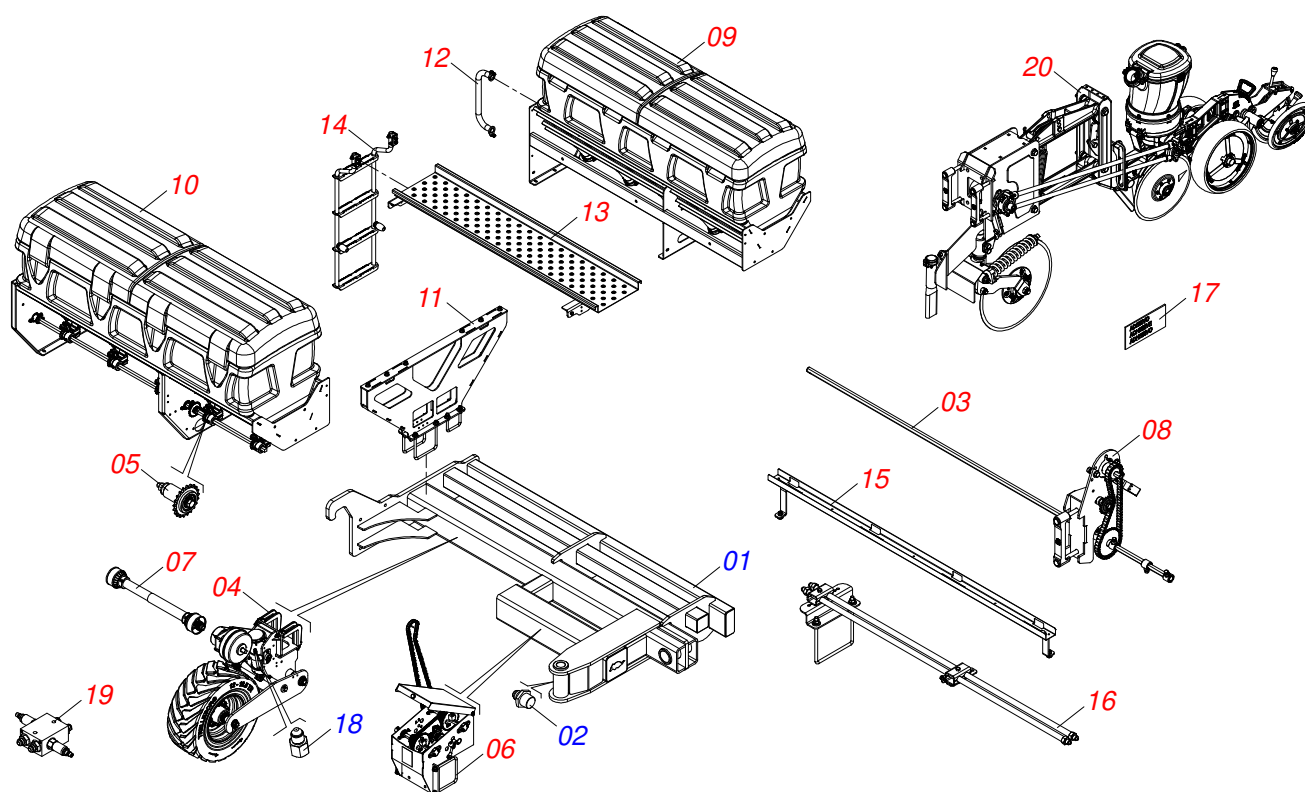

Item	Code	Description	See page	QT
01	0531061278	RIGHT SIDE FRAME 2175		01
02	0503010002	1800 GREASE FITTING		01
03	0521059133	SIDE HEXAGONAL AXLE	19	01
04	0521055326	RIGHT WHEEL WITH TRANSMISSION	20	01
05	0521057490	CHAIN STRETCHER WITH ASSY HOLE 13	28	01
05.	0511057868	ASSY CURRENT STRETCHER 79	29	01
06	0521056865	EXCHANGE RIGHT ASSY FERTILIZER	30	01
07	0501046805	DRIVE SHAFT	36	01
08	0521053068	MOTOR SUPPORT APT ASSY	37	01
09	0521058778	LEFT 5 MOUTH SEED SUPPORT	39	01
10	0531050722	RIGHT SIDE SUPPORT 5 MOUTH FERTILIZER SILO	40	01
10.	0521059195	RIGHT SIDE SUPPORT SILO FERTILIZER 5 MOUTH	41	01
11	0521054290	ASSY SIDE SUPPORT	49	02
12	0521053054	ASSY SIDE HANDLE	50	02
13	0521059135	SIDE PLATFORM	51	01
14	0521054272	LADDER ASSY	53	01
15	0521058714	SIDE GUTTER ASSY	54	01
15.	0521059136	SIDE CHASSIS SET USAP CHASSIS 2175 APT 55 SEED	55	01
16	0531050721	SIDE DUCT ASSEMBLY	57	01
16.	0521059137	SIDE DUCT SET	58	01
17	0521059138	ADHESIVE LABEL ASSY	61	01
18	0551016274	HYDRAULIC CYLINDER ADAPTER		02
19	0503019917	CONTROL VALVE		01
20	0909095987	SEED LINE/ASSY FERTILIZER	62	05

ASSY CENTRAL FRAME

0909095985

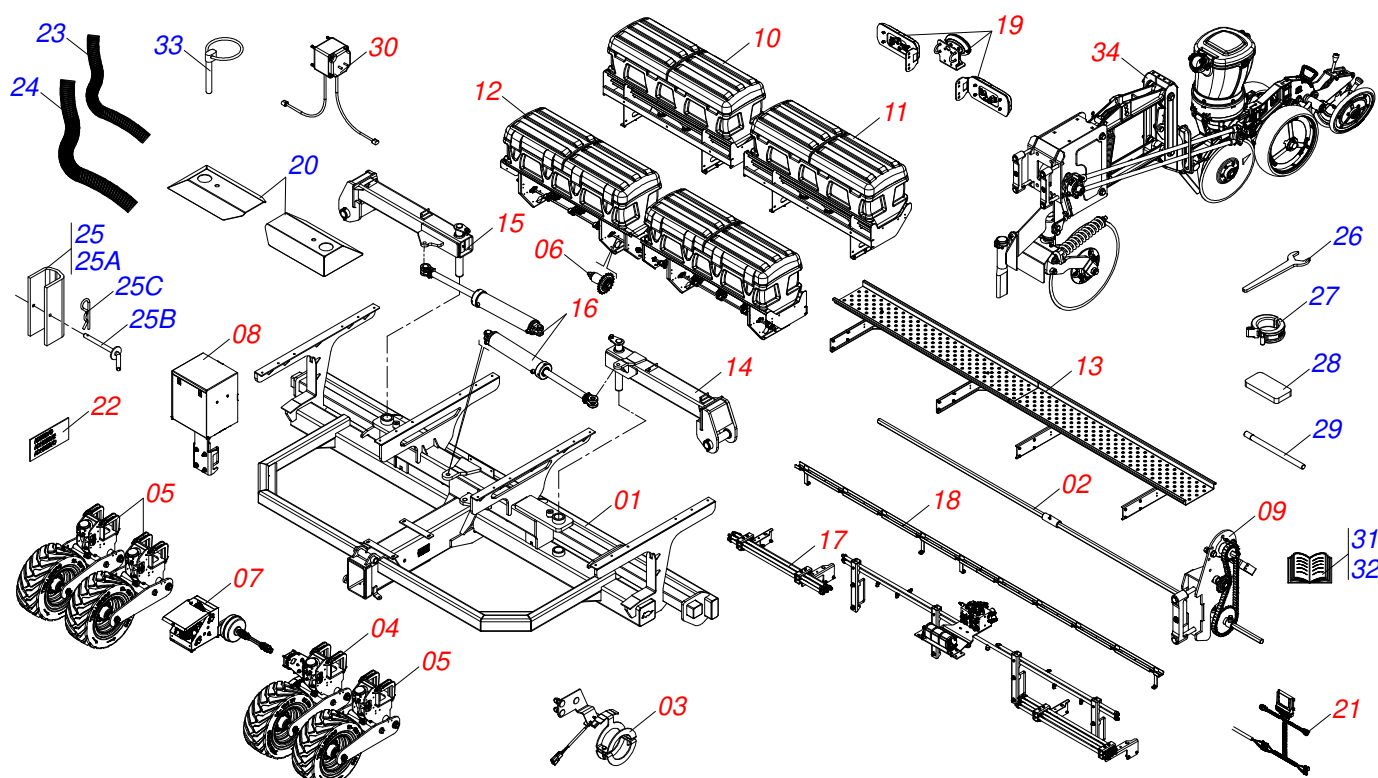


Item	Code	Description	See page	QT
01	0521059184	CENTRAL FRAME 4500 TELESCOPIC FIXATION/LOCK	101	01
02	0521059185	CENTRAL HEXAGONAL AXLE TCE/APT	104	01
03	0521052144	SENSOR ASSEMBLY LIFT LINES	105	01
04	0521044028	CENTRAL WHEEL WITH TRANSMISSION 8940	106	01
05	0531050873	SIDE CENTRAL WHEEL WITHOUT TRANSMISSION	107	03
06	0521057490	CHAIN STRETCHER WITH ASSY HOLE 13	28	01
07	0521057222	ASSY CENTRAL FERTILIZER EXCHANGE	112	01
08	0521056856	ECU BOX WITH ASSY SUPPORT	117	01
09	0521053068	MOTOR SUPPORT APT ASSY	37	01
10	0521059026	RIGHT CENTRAL SEED BOX COMPLETE FERTILIZER	119	01
11	0521059027	COMPLETE LEFT SEED CENTER BOX FERTILIZER	120	01
12	0521059186	CENTRAL SILO SUPPORT	121	01
13	0521059187	CENTRAL PLATFORM ASSY	125	01
14	0511054515	ASSY LEFT ARTICULATION ARM	126	01
15	0511054516	ASSY RIGHT ARTICULATION ARM	127	01
16	0521055949	LOWER ARTICULATED ARM CYLINDER ASSY	128	01
17	0531050719	HYDRAULIC ASSY APT	130	01
17.	0521059188	HYDRAULIC SET FERTILIZER APT SEED	131	01
18	0521059192	CENTER TRACK SET FERTILIZER SEED	146	01
19	0521058651	ELECTRICAL ASSY 15MT / 3F MECHANICAL LED	147	01
20	0581018653	LESSER PROTECTION		02
21	0521059714	ISOBUS 20L45/50 ASSEMBLY WITH SEED MONITOR	152	01
22	0531050507	APT CENTRAL ADHESIVE LABEL ASSY	155	01
23	1164920013	SPIRAL HOSE		29mts
23.	1164920012	SPIRAL HOSE		20mts
24	1164920006	BLACK LIGHT SUCTION HOSE		20mts
25	0521055637	ASSY TRANSPORT LOCK		04
25A	0551018312	TRANSPORT LOCK		01
25B	0501068994	8,30 X 78 LOCK PIN		01


ASSY CENTRAL FRAME

0909095985

Item	Code	Description	See page	QT
25C	0503030168	HITCH PIN CLIP		01
26	0561016793	FIXED WRENCH		01
27	0501047885	ROD STOP		08
28	0561017063	HOLDER TUBE		02
29	0581019559	AXIS		01
30	0521057203	ELECTRIC ASSEMBLY BCE (PACKED) 156 MECHANICAL		01
31	0511033763	PLASTIC COVER WITH INSTRUCTIONS MANUAL		01
32	0501090994	INSTRUCTIONS MANUAL		01
33	0503030085	LOCK PIN		02
34	0909095987	SEED LINE/ASSY FERTILIZER	62	10

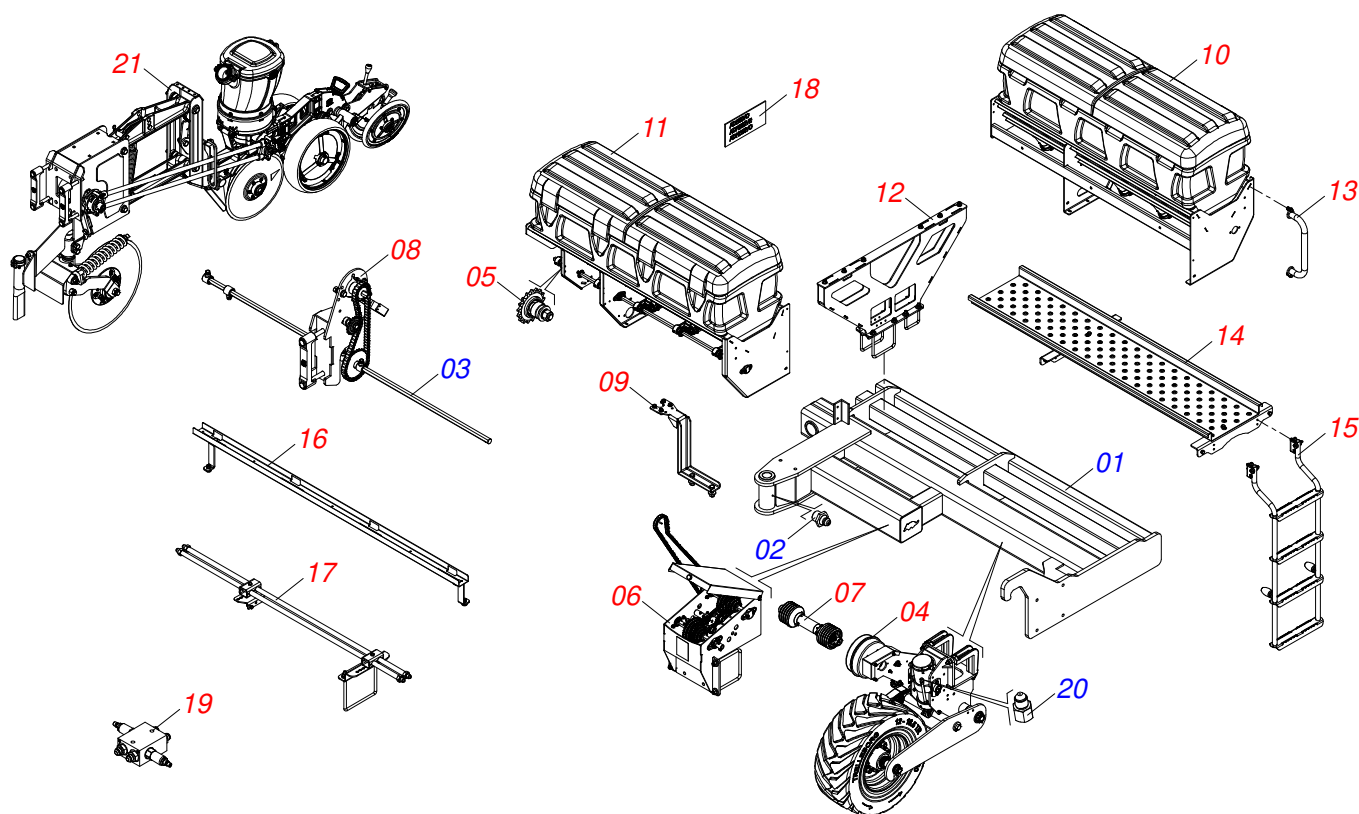


Item	Code	Description	See page	QT
01	0531061277	LEFT SIDE FRAME 2175		01
02	0503010002	1800 GREASE FITTING		01
03	0521059133	SIDE HEXAGONAL AXLE	19	01
04	0521055327	LEFT WHEEL WITH TRANSMISSION	157	01
05	0521059910	CENTRAL STRETCHER	159	01
05.	0511054476	RIGHT TENSIONER CENTRAL EXCHANGE	160	01
06	0521058940	LEFT CHANGE INVERTED ASSY FERTILIZER	162	01
07	0503062272	CARDAN WITHOUT PROTECTION		01
08	0521053068	MOTOR SUPPORT APT ASSY	37	01
09	0521054349	FILTER SUPPORT	164	01
10	0521058777	LEFT 5 MOUTH SEED SUPPORT	165	01
11	0531050720	LEFT SIDE SUPPORT 5 MOUTH FERTILIZER SILO	166	01
11.	0521059134	LEFT SIDE SUPPORT SILO FERTILIZER 5 MOUTH	167	01
12	0521054290	ASSY SIDE SUPPORT	49	02
13	0521053054	ASSY SIDE HANDLE	50	02
14	0521059135	SIDE PLATFORM	51	01
15	0521054272	LADDER ASSY	53	01
16	0521058714	SIDE GUTTER ASSY	54	01
16.	0521059136	SIDE CHASSIS SET USAP CHASSIS 2175 APT SEED	55	01
17	0531050721	SIDE DUCT ASSEMBLY	57	01
17.	0521059137	SIDE DUCT SET	58	01
18	0521059138	ADHESIVE LABEL ASSY	61	01
19	0503019917	CONTROL VALVE		01
20	0551016274	HYDRAULIC CYLINDER ADAPTER		02
21	0909095987	SEED LINE/ASSY FERTILIZER	62	05

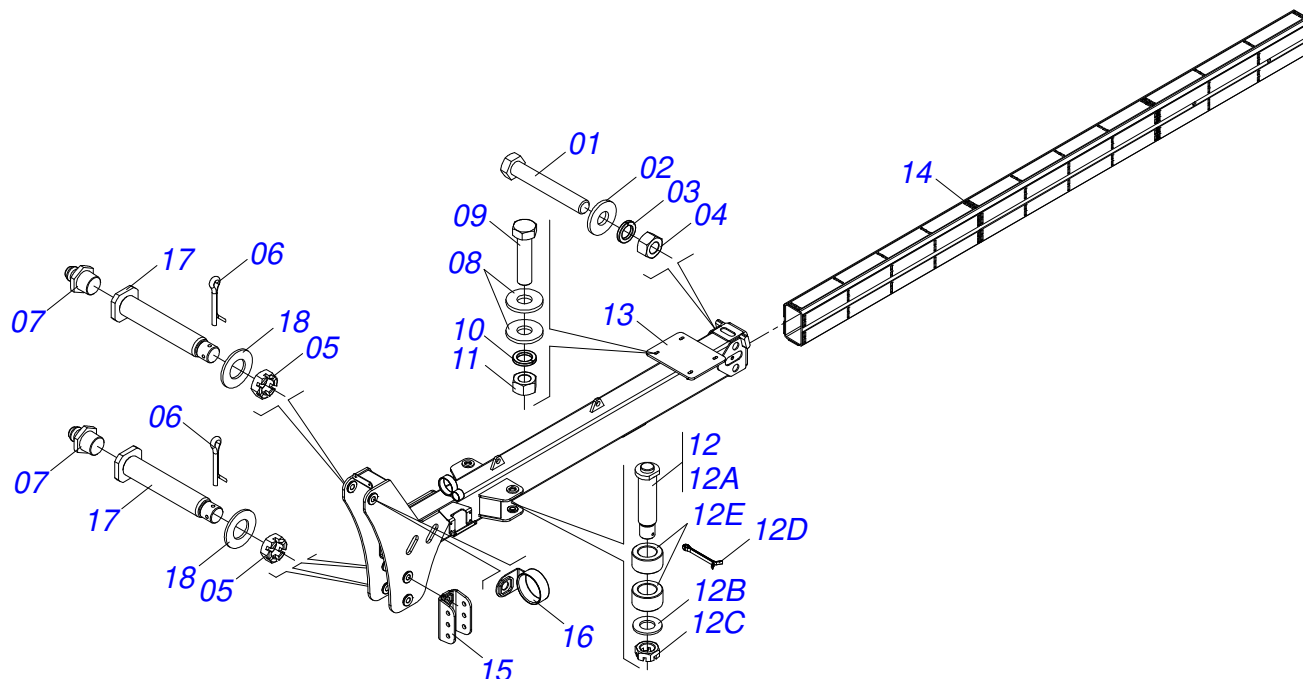


Item	Code	Description	See page	QT
01	0503015764	BOLT 7/8		01
02	0501010076	FLAT WASHER		01
03	0503010408	7/8" SPRING WASHER		01
04	0503010417	7/8" NUT		01
05	0503011052	1.1/4" X 0.77" CASTLE NUT		03
06	0503010038	3/16 X 2 COTTERPIN		03
07	0503010002	1800 GREASE FITTING		03
08	0501012140	FLAT WASHER		08
09	0503010233	5/8" X 2-1/2" BOLT		04
10	0503010027	5/8" SPRING WASHER		04
11	0503010013	5/8" NUT		04
12	0521051433	FRENCH HAND FRONT AXLE ASSY		02
12A	0511069442	FRENCH HAND FRONT AXLE		01
12B	0501017779	32 X 60 X 4.75 FLAT WASHER		01
12C	0503011052	1.1/4" X 0.77" CASTLE NUT		01
12D	0503010038	3/16 X 2 COTTERPIN		01
12E	0581014420	SLEEVE GUIDE		02
13	0531061298	TELESCOPIC HEADER 395/2482		01
14	0521069928	INTERNAL CANUDO 4286/4290		01
15	0531060748	REST SUPPORT		01
16	0531060747	TELESCOPIC HOSE GUIDE		01
17	0531060746	AXIS 278 TELESCOPIC HEADER		03
18	0561015332	FLAT WASHER Ø32 X Ø60 X 8		01

HEADER 3 POINTS ASSY


0521051438

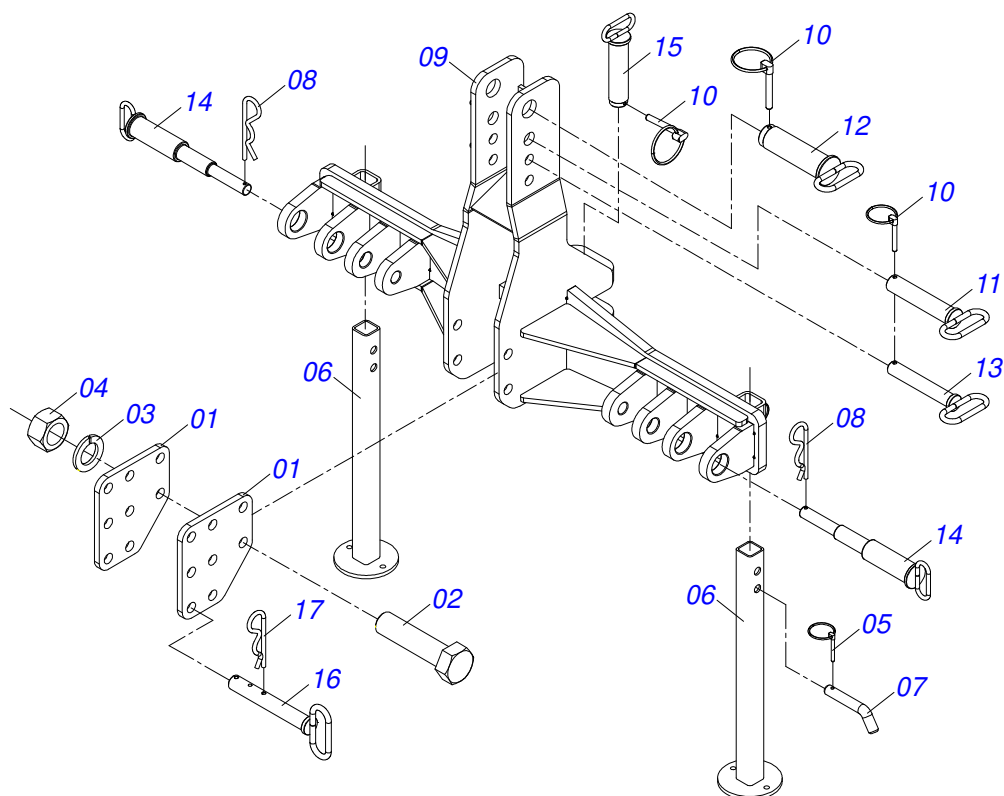


Item	Code	Description	See page	QT
01	0561013456	GUIDE DRAWBAR ASSY		02
02	0501010276	BOLT		04
03	0503010012	1" SPRING WASHER		04
04	0501010059	1.5/8 NUT		04
05	0503030119	LOCK PIN		02
06	0511069471	PLOUGH SUPPORT		02
07	0501011075	PIN		02
08	0503030285	HITCH PIN CLIP		02
09	0521068020	DRAWBAR ASSY		01
10	0503030085	LOCK PIN		04
11	0521068018	UPPER AXLE		01
12	0521068015	UPPER AXLE		01
13	0521068013	UPPER AXLE		01
14	0521068011	AXLE LOWER		02
15	0521068010	HITCH AXLE		01
16	0521068009	UPPER AXLE		01
17	0503031035	HITCH PIN CLIP		01

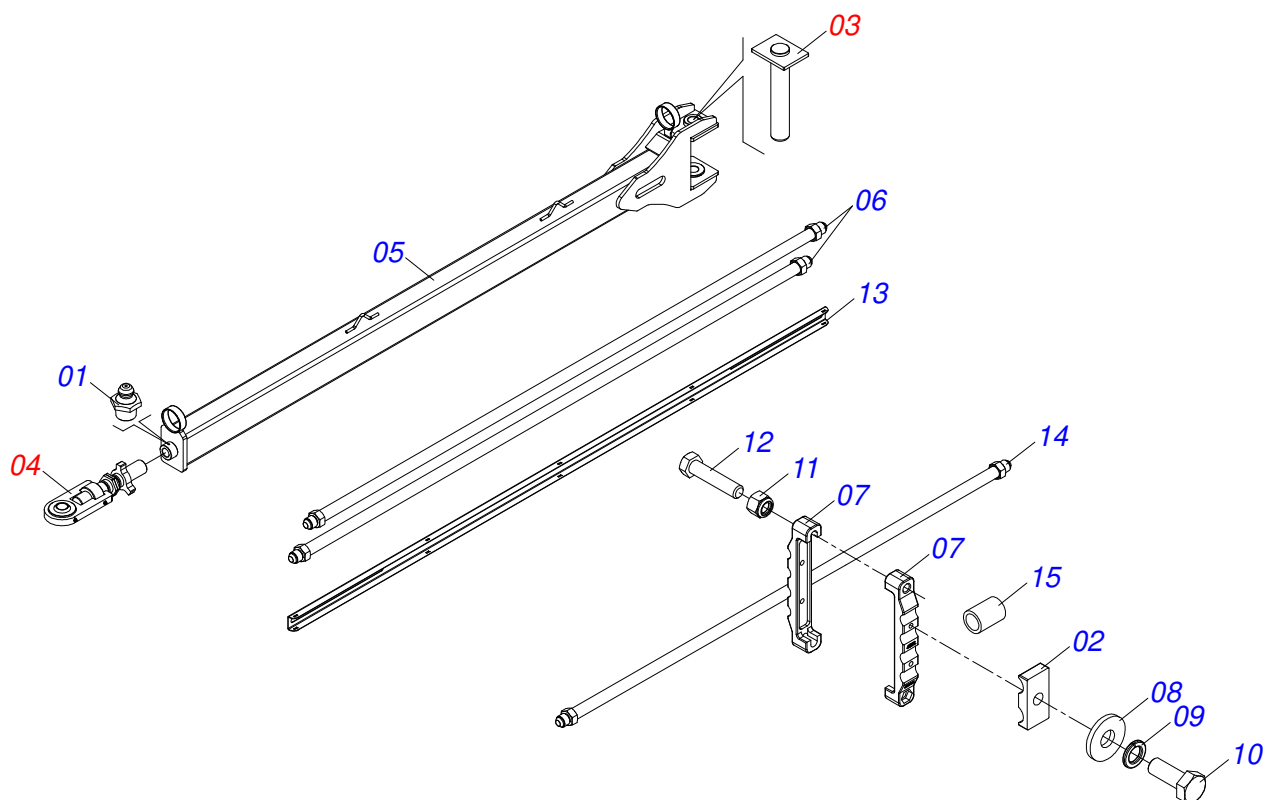


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	1902010477	UPPER CLAMP BODY		04
03	0511054713	ASSY FRENCH HAND TRANSMISSION SHAFT	9	01
04	0521058088	ROTULA WITH EXTENSOR AXIS 2	10	01
05	0521069927	FRENCH HAND 3593		01
06	0521069926	OIL DUCT R1.1 / 16 X 2460		02
07	0502012907	FRENCH HAND DUCTS SUPPORT		04
08	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
09	0503010025	3/8" SPRING WASHER		04
10	0503010964	BOLT		04
11	0503010589	1/2" UNC SELF ADJUSTING NUT		04
12	0503011404	BOLT		04
13	0591010529	FRENCH HAND RAIL 20 X38 X 2380		01
14	0521069925	OIL DUCT R7/8 X 2460		01
15	0581018419	SUPPORT		02

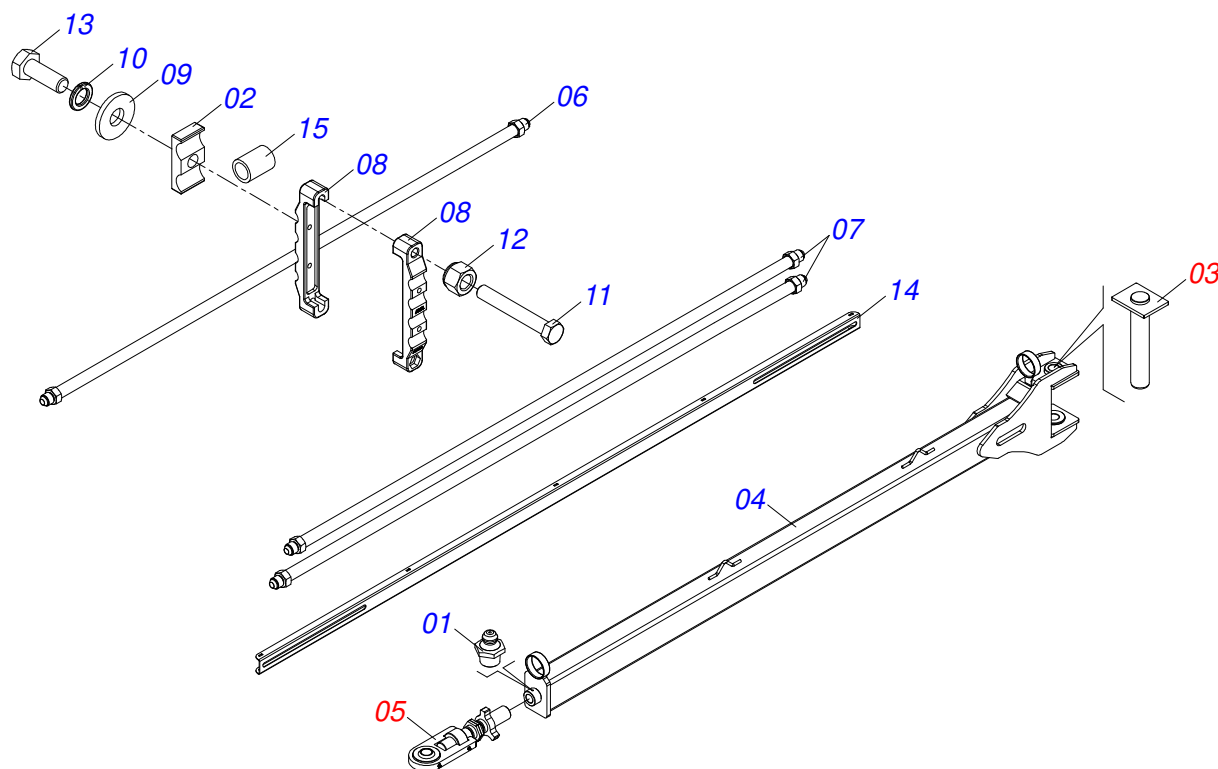


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	1902010477	UPPER CLAMP BODY		04
03	0511054713	ASSY FRENCH HAND TRANSMISSION SHAFT	9	01
04	0521069927	FRENCH HAND 3593		01
05	0521058088	ROTULA WITH EXTENSOR AXIS 2	10	01
06	0521069925	OIL DUCT R7/8 X 2460		01
07	0521069924	OIL DUTO R3/4 X 2460		02
08	0502012907	FRENCH HAND DUCTS SUPPORT		04
09	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
10	0503010025	3/8" SPRING WASHER		04
11	0503010964	BOLT		04
12	0503010589	1/2" UNC SELF ADJUSTING NUT		04
13	0503011404	BOLT		04
14	0591010529	FRENCH HAND RAIL 20 X38 X 2380		01
15	0581018419	SUPPORT		02

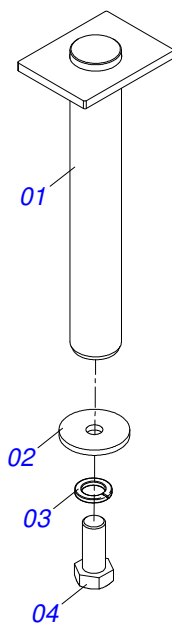

Item	Code	Description	See page	QT
01	0521062244	PIVOT SHAFT		01
02	0551019529	FLAT WASHER		01
03	0503010027	5/8" SPRING WASHER		01
04	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		01

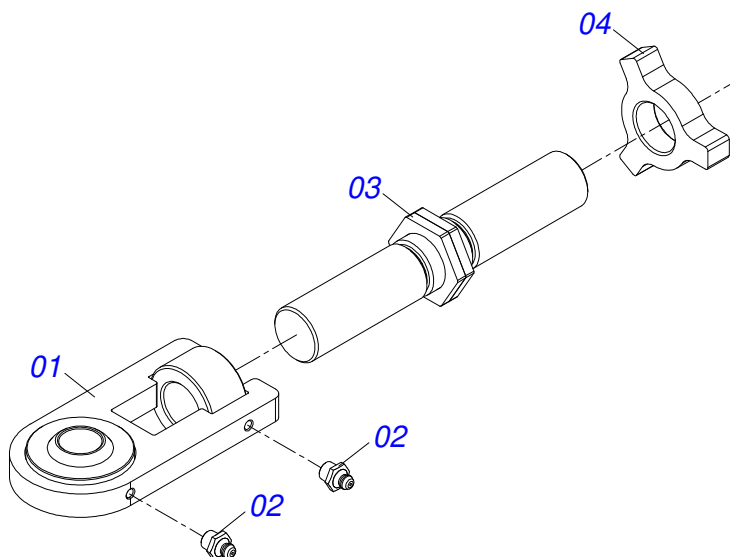


Item	Code	Description	See page	QT
01	0531061046	ROTULA WITH R2 LEFT NUT		01
02	0503010002	1800 GREASE FITTING		02
03	0501078990	TURNBUCLE AXLE		01
04	0561019879	LOCK ATTACHMENT BAR		01

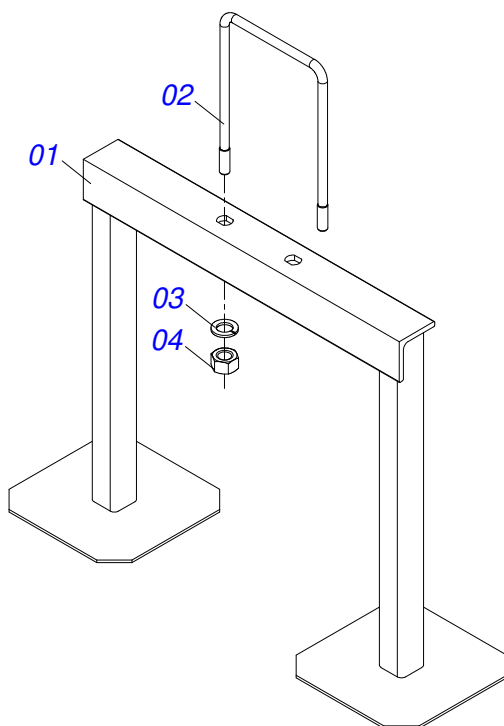

Item	Code	Description	See page	QT
01	0521063339	HIGHER		06
02	0571011070	5/8" UNC FASTENER		06
03	0503010027	5/8" SPRING WASHER		12
04	0503010013	5/8" NUT		12

PANTOGRAPHY HEADER


0521057792

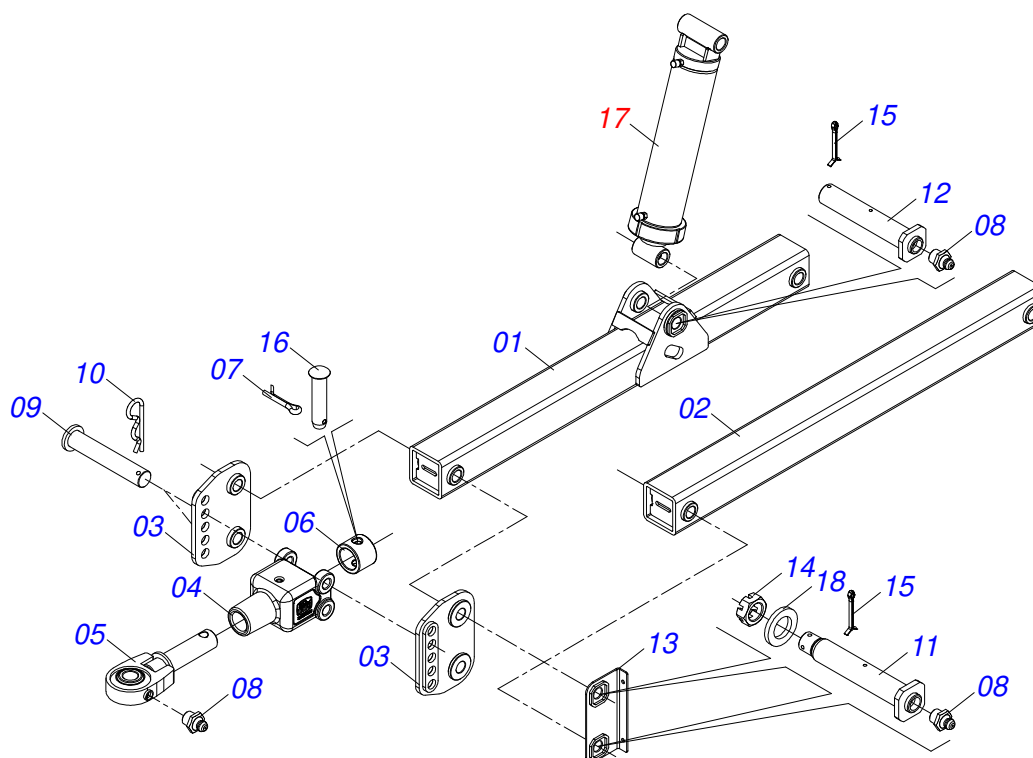


Item	Code	Description	See page	QT
01	0531060744	UPPER ARM PANTOGRAPHIC HEADER		01
02	0531060743	LOWER ARM PANTOGRAPHIC HEADER		01
03	0531060745	PANTOGRAPHIC ARM EAR		02
04	0502040864	GEAR BOX WITH REGULATOR		01
05	0521068007	TRACTOR HITCH		01
06	1902040327	LOCK SLEEVE		01
07	0503010523	1/4" X 2" COTTERPIN		01
08	0503010002	1800 GREASE FITTING		04
09	0521063432	LOCK AXLE		02
10	0503031035	HITCH PIN CLIP		02
11	0531060746	AXIS 278 TELESCOPIC HEADER		02
12	0531060792	AXIS 200 TELESCOPIC HEADER		01
13	0531060776	HYDRAULIC HOSE SUPPORT FIXER		01
14	0503011052	1.1/4" X 0.77" CASTLE NUT		02
15	0503010038	3/16 X 2 COTTERPIN		03
16	0521010578	COUPLING SHAFT		01
17	0521057786	HYDRAULIC CYLINDER HEAD PANTOGRAPH	13	01
18	0591013764	FLAT WASHER 39 X 65 X 8,00 ZN		02

HYDRAULIC CYLINDER HEAD PANTOGRAPH


0521057786

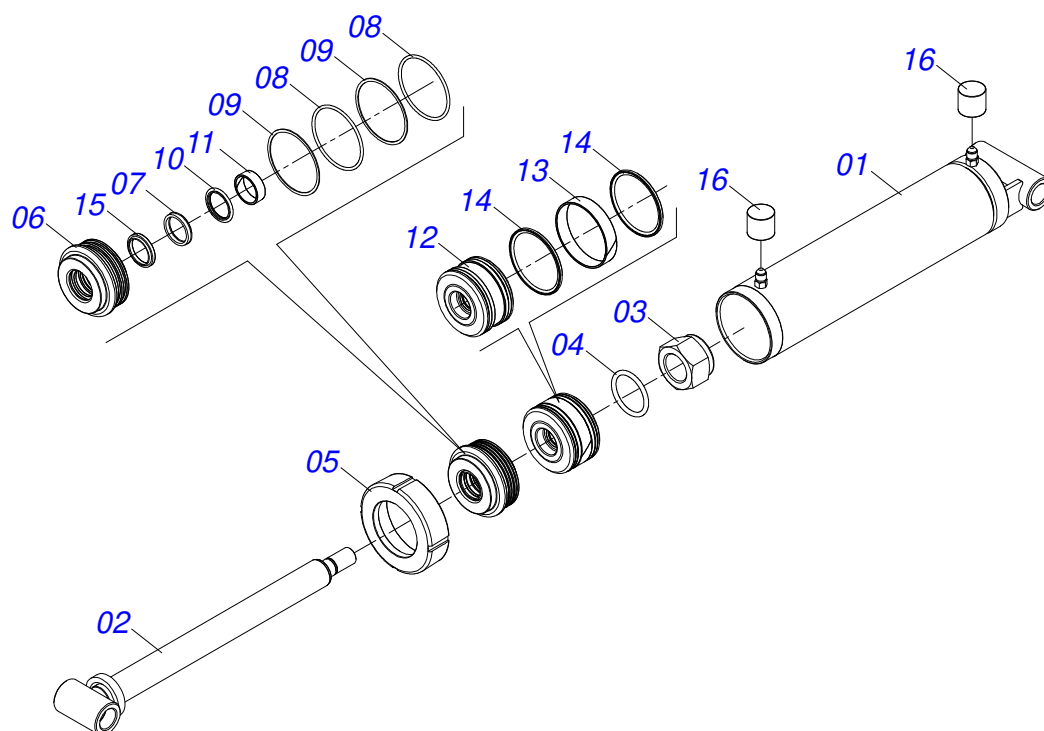


Item	Code	Description	See page	QT
01	0531060769	PANTOGRAPHIC HEAD CYLINDER CASE		01
02	0531060770	PANTOGRAPHIC HEAD CYLINDER ROD		01
03	0503010817	1.1/4" SELF LOCKING NUT		01
04	0503010345	2-218 N 3006-9B O'RING		01
05	0502010382	5" END CAP		01
06	0581010353	RING SUPPORT		01
07	0503018026	1870-2000-375 B GASKET		01
08	0503011453	O'RING		02
09	0503018152	O'RING		02
10	0503018024	RING BS		01
11	0503018025	RING GUIDE		01
12	0581010354	PISTON		01
13	0503018150	RING GUIDE		01
14	0503018151	RING BS		02
15	0503010039	D-2000 SCRAPER RING		01
16	0503030385	CYLINDER PLUG N-002		02

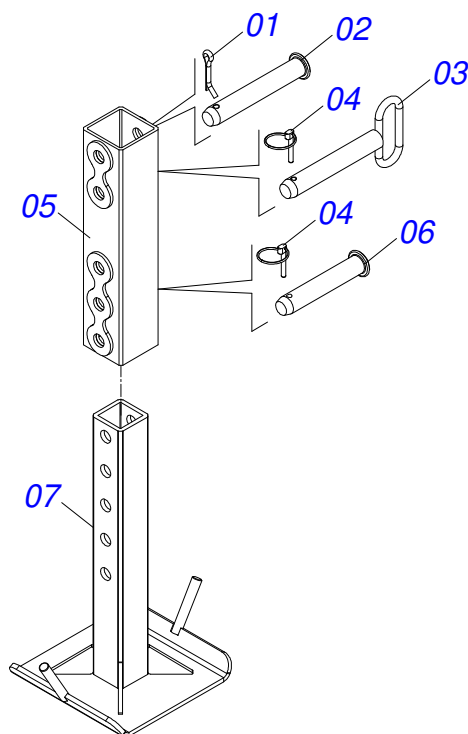


Item	Code	Description	See page	QT
01	0503010571	1/4" X 1.1/2 COTTERPIN		01
02	0521010784	COUPLING SHAFT		01
03	0531060758	AXLE JUNCTION 25.4 X 150 WITH HANDLE		01
04	0503030085	LOCK PIN		02
05	0531060667	REST		01
06	0521012533	COUPLING SHAFT		01
07	0531062876	INTERNAL TUBE WITH SHOE REST		01

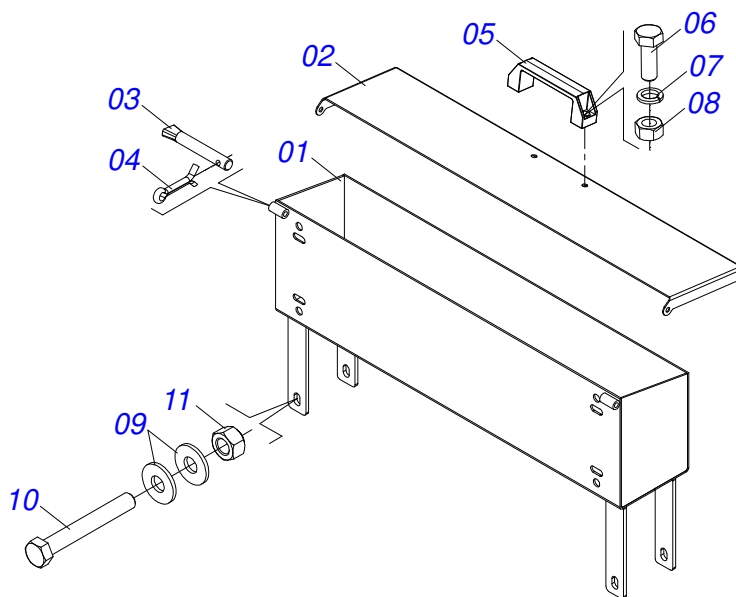

Item	Code	Description	See page	QT
01	0521063662	BOX OF TOOLS		01
02	0551018356	BOX OF TOOLS COVER ASSY		01
03	0521010528	0.3" X 1.6" COUPLING SHAFT		02
04	0503010140	1/8" X 3/4" COTTERPIN		02
05	0503011907	PMC 594-S NYLON LUG		01
06	0503010358	5/16" X 5/8" BOLT		02
07	0503010179	LOCK WASHER		02
08	0503010337	5/16" NUT		02
09	0511017302	FLAT WASHER		04
10	0503010964	BOLT		02
11	0503010589	1/2" UNC SELF ADJUSTING NUT		02

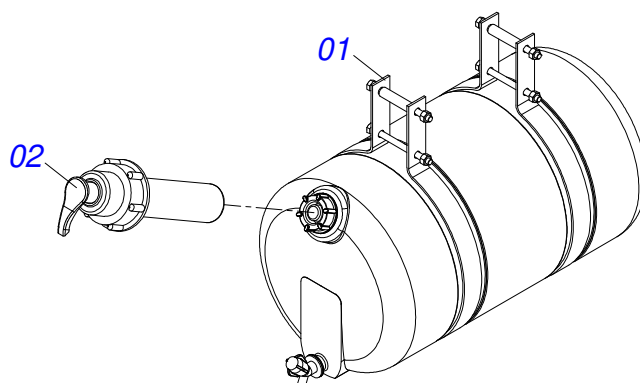


Item	Code	Description	See page	QT
01	0503014820	BLACK WATER RESERVOIR		01
02	0503019262	SOAP DISH VACUUM		01

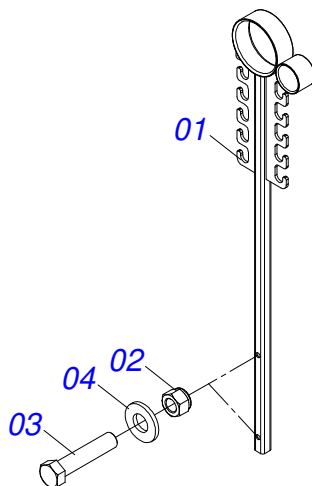


Item	Code	Description	See page	QT
01	0531060794	HYDRAULIC HOSE SUPPORT		01
02	0503015490	SELF-LOCKING NUT 7/16		02
03	0503011173	7/16" X 2" BOLT		02
04	0501010937	13,50 X 28 X 3,00 FLAT WASHER		02

TELESCOPIC LOCK ASSY


0511059814

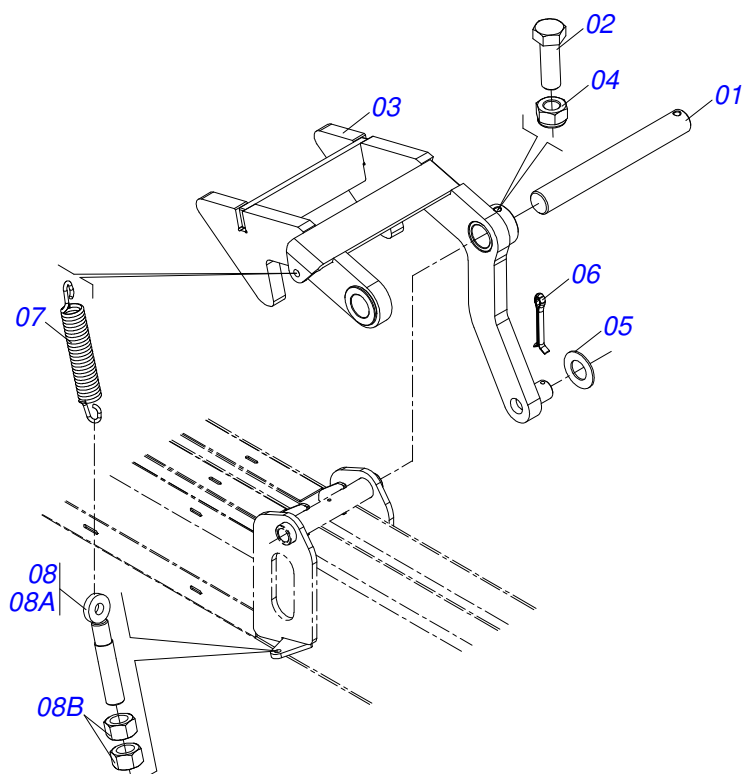

Item	Code	Description	See page	QT
01	0571015072	LOCK AXLE		01
02	0503010765	3/8" X 3" BOLT		01
03	0521064540	TELESCOPIC LOCK		01
04	0503013357	3/8" SELF-ADJUSTING NUT		01
05	0521011132	FLAT WASHER		01
06	0503010131	3/16" X 1-1/2" COTTERPIN		01
07	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
08	0511054270	TENSIONER SPRING		01
08A	0511069520	TELESC LOCK SPRING TENSIONER		01
08B	0503010013	5/8" NUT		02

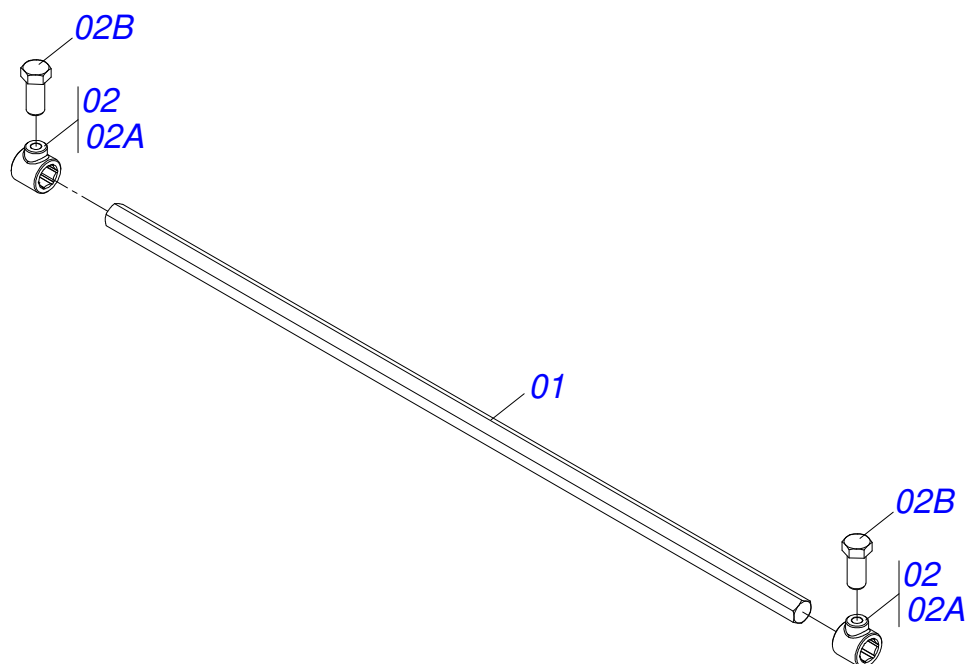

Item	Code	Description	See page	QT
01	0591014453	HEX AXLE 3/4 X 2000		01
02	0511054314	TRANSMISSION AXLE LOCK SLEEVE		02
02A	0502012699	TRANSMISSION HUB LOCK SLEEVE		01
02B	0503010256	3/8" X 3/4" BOLT		01

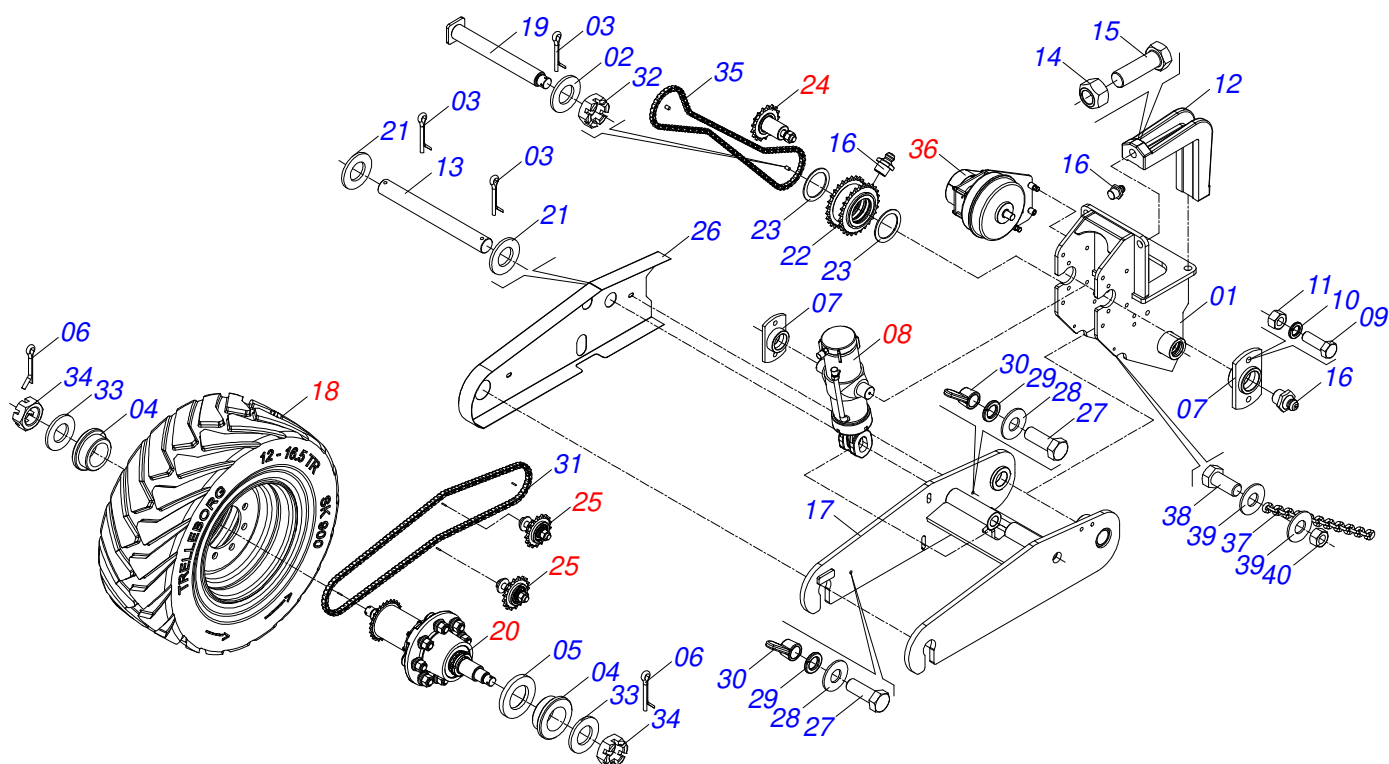


Item	Code	Description	See page	QT
01	0521064543	WHEEL SUPPORT		01
02	0561019929	FLAT WASHER		01
03	0503010523	1/4" X 2" COTTERPIN		03
04	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
05	0551014508	FLAT WASHER		01
06	0503010571	1/4" X 1.1/2 COTTERPIN		02
07	0521069575	FLANGE CYLINDER HYDRAULIC FIXER		02
08	0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	21	01
09	0503010920	1/2" X 1.1/2" BOLT		04
10	0503010019	1/2" SPRING WASHER		04
11	0503010060	1/2" NUT		04
12	0502012731	WHEEL HOLDER		02
13	0581017245	AXLE BODY		01
14	0503011075	3/4" UNC NUT		04
15	0503012334	3/4" UNC X 3.1/2" BOLT		04
16	0503010002	1800 GREASE FITTING		04
17	0521064550	CARRYING-WHEELS FORK		01
18	0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	22	01
19	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
20	0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR	23	01
21	0531012874	FLAT WASHER		02
22	0511068422	WHEEL GEAR DOBLE		01
23	0551018571	FLAT WASHER		02
24	0511054463	WHEEL TENSIONER SUPORT CENTRAL	24	01
25	0511054464	WHEEL FORK TENSIONER	25	02
26	0561019941	RIGHT PROTECTIVE CAP WHEELS		01
27	0503010849	3/8" X 1-1/2" BOLT		02
28	0501013518	FLAT WASHER		02
29	0503010025	3/8" SPRING WASHER		02
30	0503010209	3/8" UNC BUTTERFLY NUT		02
31	0503016419	50-1 CHAIN X 128 LINK + REDUCION		01


RIGHT WHEEL WITH TRANSMISSION

0521055326


Item	Code	Description	See page	QT
32	0501010630	1.1/2" CASTLE NUT		01
33	0501017779	32 X 60 X 4.75 FLAT WASHER		02
34	0503011052	1.1/4" X 0.77" CASTLE NUT		02
35	0503014857	50-1 X CHAIN X 122 LINK + REDUCION		01
36	0511054500	TRANSMISSION EXCHANGE RIGHT	26	01
37	0503033335	CURRENT 6 X 21 ELOS		01
38	0503010882	BOLT		01
39	0501010694	FLAT WASHER		02
40	0503010337	5/16" NUT		01

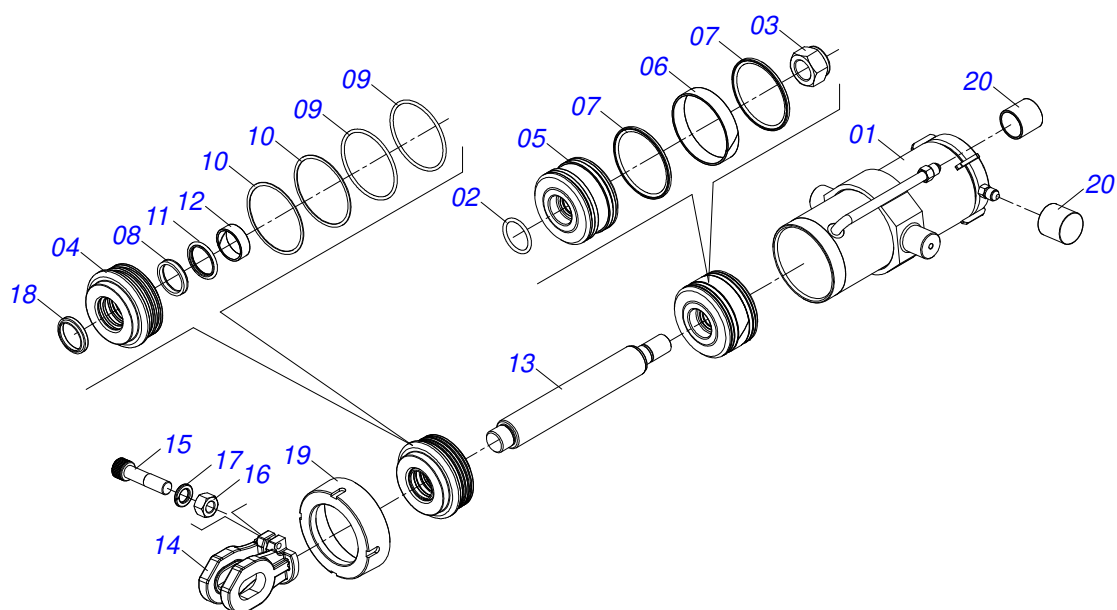


Item	Code	Description	See page	QT
01	0521069562	5" X 17" CYLINDER CASE		01
02	0503010345	2-218 N 3006-9B O'RING		01
03	0503010817	1.1/4" SELF LOCKING NUT		01
04	0581010353	RING SUPPORT		01
05	0581010354	PISTON		01
06	0503018150	RING GUIDE		01
07	0503018151	RING BS		02
08	0503018026	1870-2000-375 B GASKET		01
09	0503011453	O'RING		02
10	0503018152	O'RING		02
11	0503018024	RING BS		01
12	0503018025	RING GUIDE		01
13	0581019464	TURNBUCLE BODY		01
14	0571015629	CILINDER SPINDLE FORK		01
15	0503011094	3/8" X 2" BOLT		01
16	0503010026	3/8" NUT		01
17	0503010025	3/8" SPRING WASHER		01
18	0503010039	D-2000 SCRAPER RING		01
19	0502040876	COVER		01
20	0503030385	CYLINDER PLUG N-002		02
21	0511034219	CYLINDER REPAIR KIT 50,80 X 127 (0521054953)		01

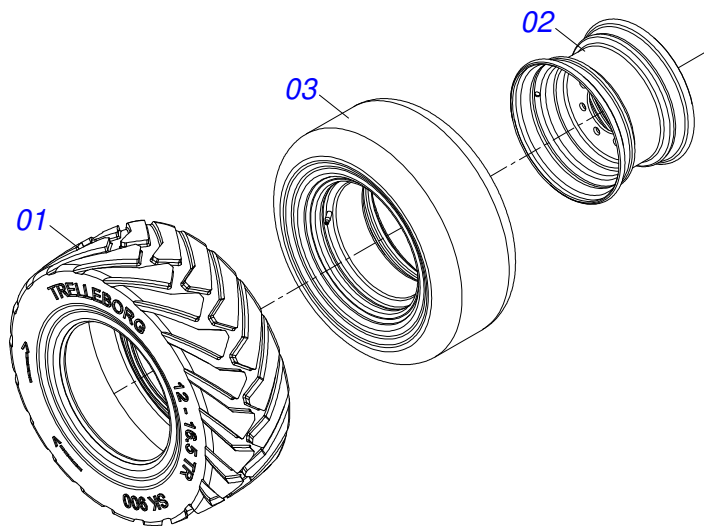

Item	Code	Description	See page	QT
01	0503033713	TIRE 12 X 16,5/12L TR SK 900		01
02	0503015029	WHEEL		01
03	0503015355	INNER TIRE		01

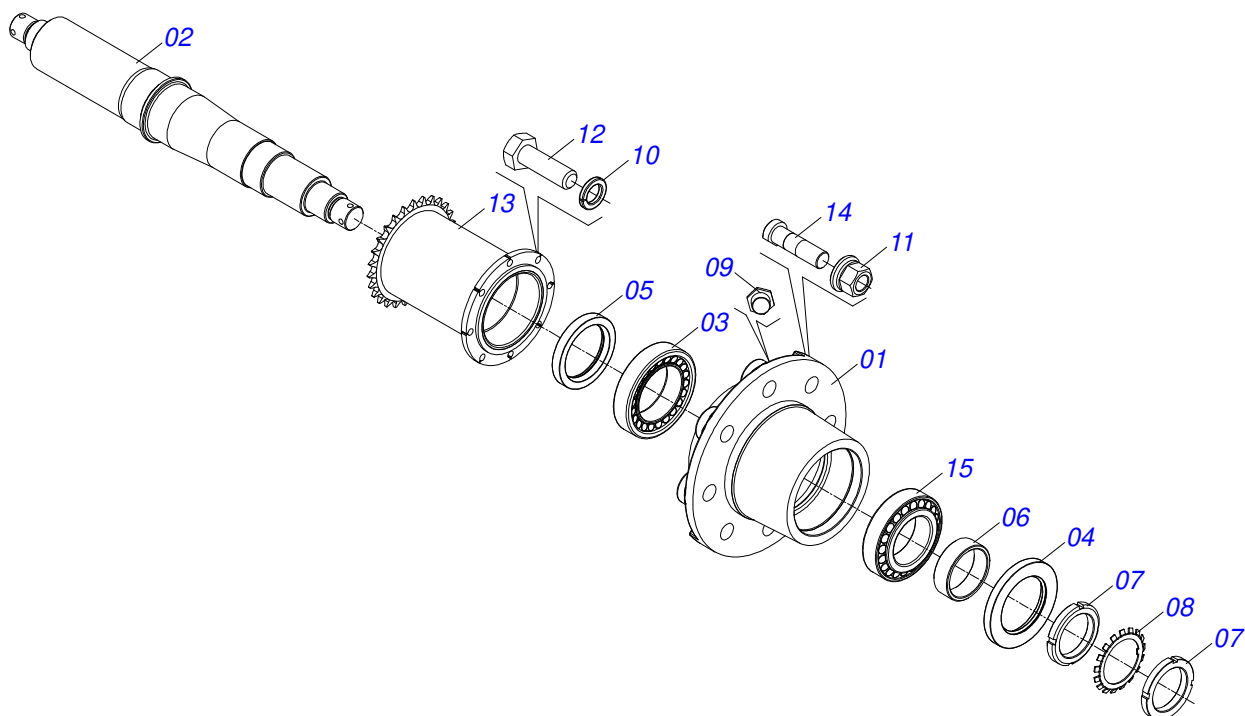


Item	Code	Description	See page	QT
01	0502040760	CARRYING WHEEL HUB		01
02	0571015180	WHEEL AXLE		01
03	0503013633	BEARING 33287/33462		01
04	0503010009	RETAINER 00573-B		01
05	0503010086	SEAL 0009B-B		01
06	0551014473	GLOVE		01
07	0503012702	KM-12 NUT		02
08	0503012703	LOCK WASHER		01
09	0503010002	1800 GREASE FITTING		01
10	0503011444	SPRING WASHER		08
11	0503014048	22 X 1.5 HEX NUT		08
12	0503010363	5/16" X 1" BOLT		08
13	0521064563	27Z GEAR		01
14	0503014050	22 X 1.5 BOLT		08
15	0503013496	3982/3920 ROLLER BEARING		01
16	1882970002	GREASE SOAP		01

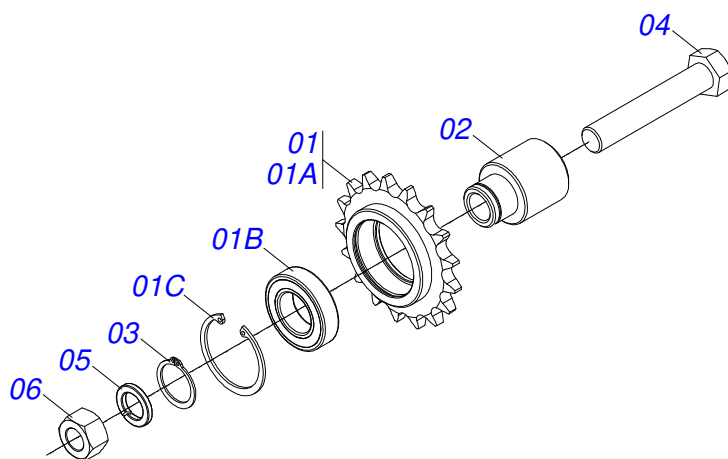


Item	Code	Description	See page	QT
01	0511054462	17Z GEAR		01
01A	0511061836	17Z GEAR		01
01B	0503011410	ROLLER BEARING		01
01C	0503011105	SEAL RING		01
02	0571015149	TIGHTENER AXLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0501010163	5/8" X 4-1/2" BOLT		01
05	0503010027	5/8" SPRING WASHER		01
06	0503010013	5/8" NUT		01

WHEEL FORK TENSIONER


0511054464

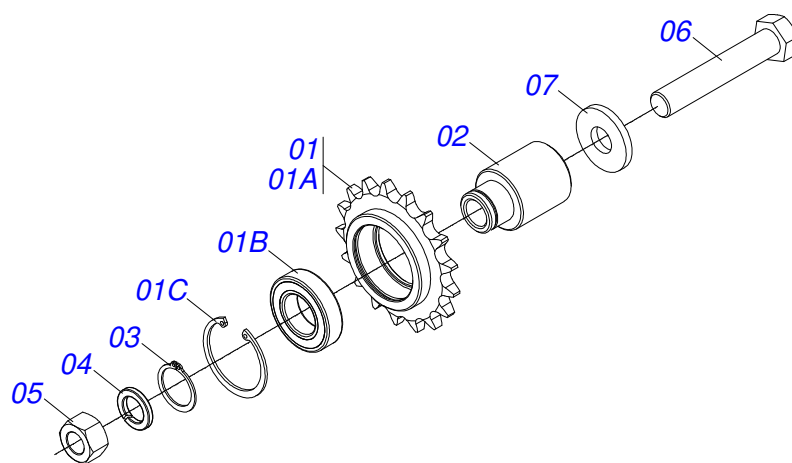


Item	Code	Description	See page	QT
01	0511054462	17Z GEAR		01
01A	0511061836	17Z GEAR		01
01B	0503011410	ROLLER BEARING		01
01C	0503011105	SEAL RING		01
02	0571015150	SLEEVE TENSIONER WHEEL		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0503010027	5/8" SPRING WASHER		01
05	0503010013	5/8" NUT		01
06	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
07	0501012140	FLAT WASHER		01

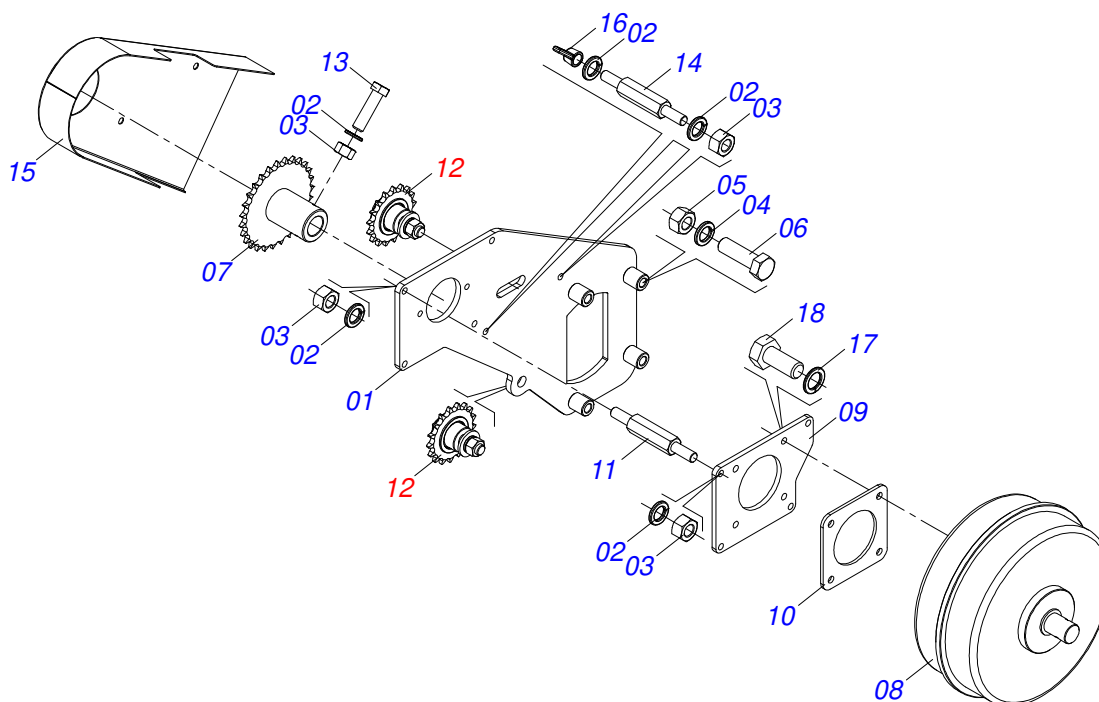


Item	Code	Description	See page	QT
01	0521064556	SUPPORT ASSY TRANSMISSION WHEEL SIDE		01
02	0503010025	3/8" SPRING WASHER		13
03	0503010026	3/8" NUT		11
04	0503010019	1/2" SPRING WASHER		03
05	0503010060	1/2" NUT		03
06	0503010741	1/2" X 2-3/4" BOLT		03
07	0521064555	27Z GEAR		01
08	0503062231	CLUTCH		01
09	0571015139	FIXER PLATE		01
10	0571015138	SIDE CLUTCH CHOCK		01
11	0571015141	FIXER CENTRAL TRANSMISSION		04
12	0511054461	STRETCHER TOP TRANSMISSION SWIRLED	27	02
13	0503011268	3/8" X 2-1/2" BOLT		01
14	0571015142	FIXER		02
15	0571015143	RIGHT PROTECTION SUPPORT WHEEL		01
16	0503010209	3/8" UNC BUTTERFLY NUT		02
17	0503013542	M10 SPRING WASHER		04
18	0503010188	M10 X 1,5 X 30 BOLT		04

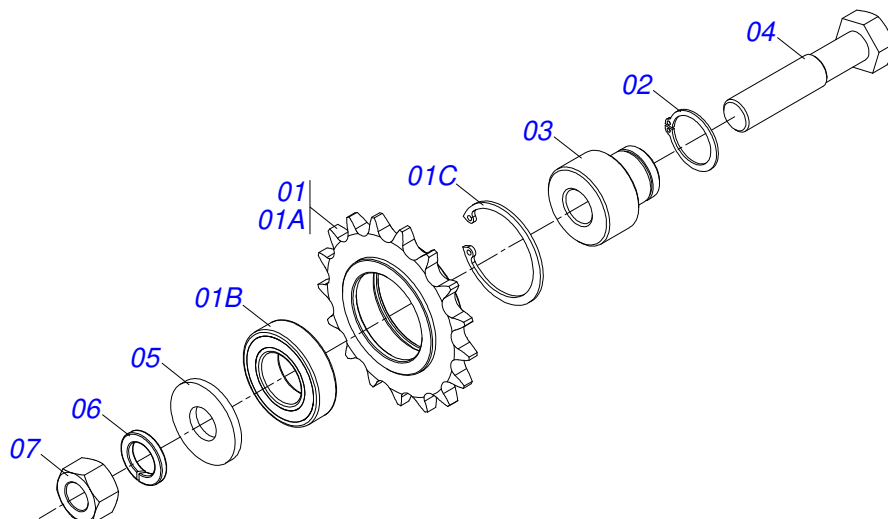


Item	Code	Description	See page	QT
01	0521055499	GEAR WITH NATIONAL BEARING		01
01A	0511061836	17Z GEAR		01
01B	0503019356	BEARING 6005 2RS1		01
01C	0503011105	SEAL RING		01
02	0571015146	TIGHTENER AXLE		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01
04	0501011541	5/8" X 3" BOLT		01
05	0501012140	FLAT WASHER		01
06	0503010027	5/8" SPRING WASHER		01
07	0503010013	5/8" NUT		01

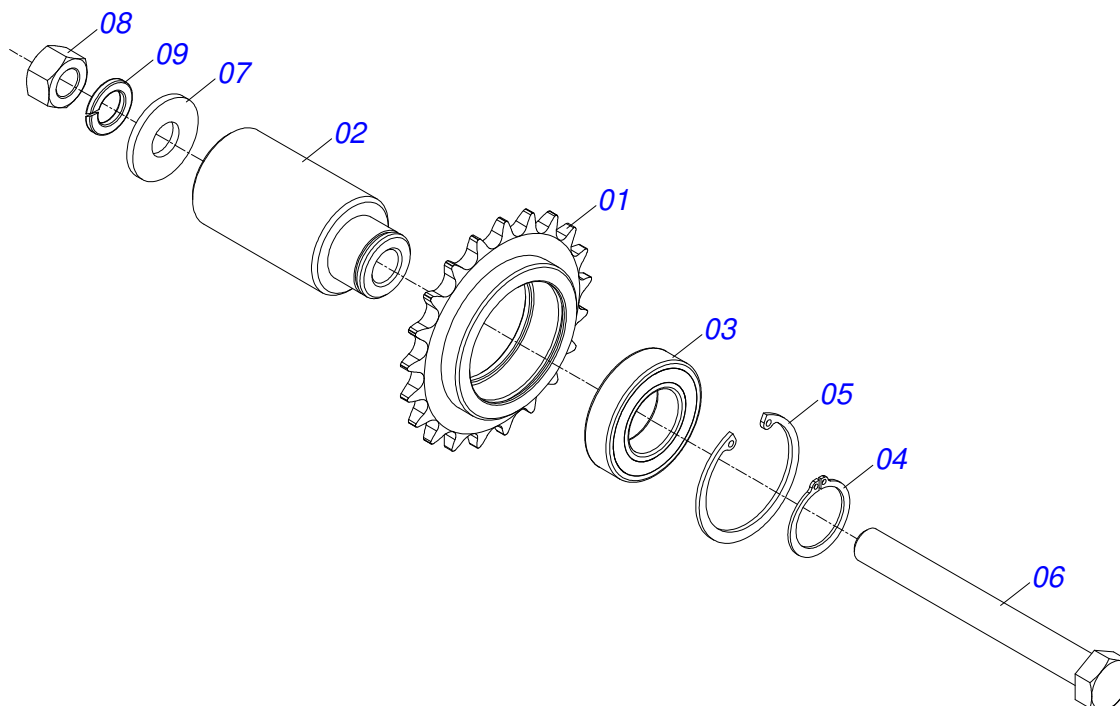


Item	Code	Description	See page	QT
01	0521069698	GEAR 21Z P 1/2		01
02	0591012478	HOLE TRANSMISSION STRETCHER AXLE 13		01
03	0503011410	ROLLER BEARING		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0503011105	SEAL RING		01
06	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
07	0511017302	FLAT WASHER		01
08	0503010060	1/2" NUT		01
09	0503010019	1/2" SPRING WASHER		01

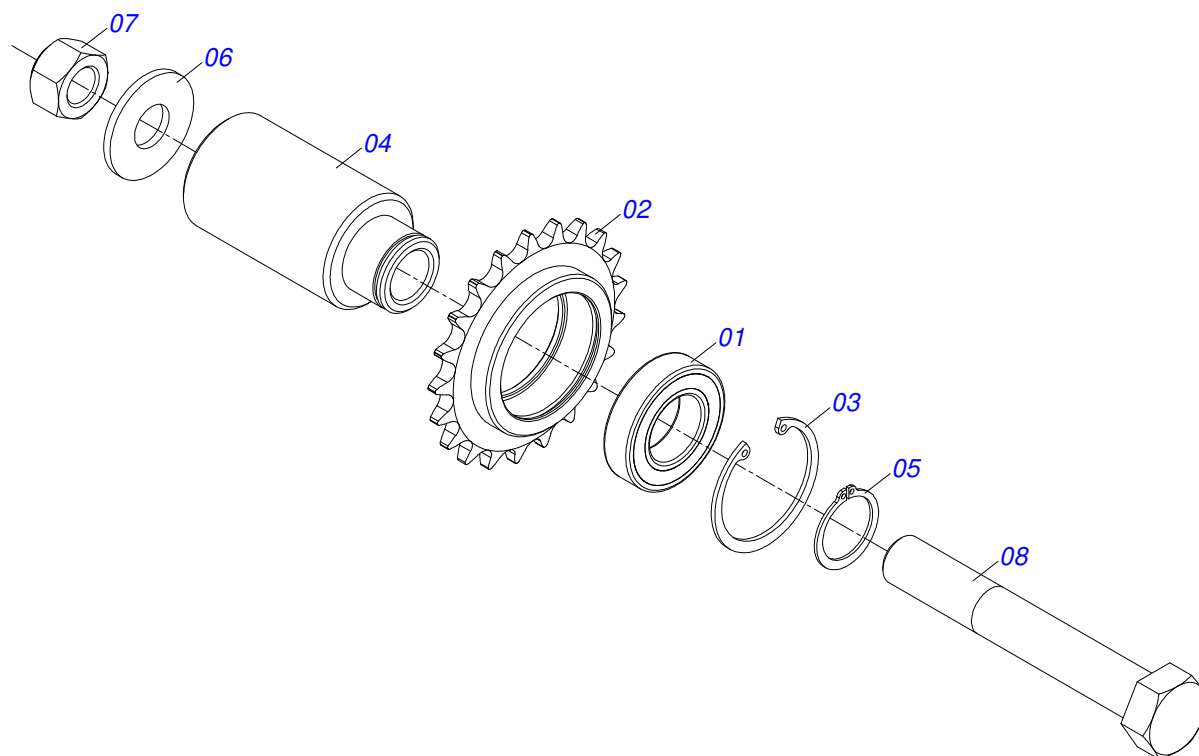


Item	Code	Description	See page	QT
01	0503011410	ROLLER BEARING		01
02	0511062169	21Z P 1/2" GEAR		01
03	0503011105	SEAL RING		01
04	0581010122	CHAIN TIGHTENER AXLE ASSY		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0571010265	16.5 X 40 X 3 FLAT WASHER		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01
08	0503010796	5/8" X 4-1/4" BOLT		01

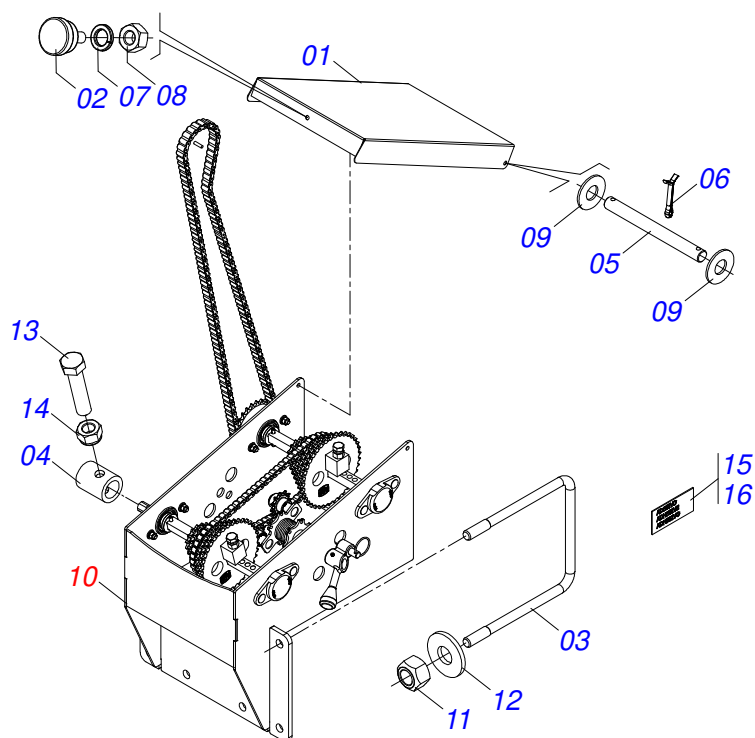


Item	Code	Description	See page	QT
01	0551011625	PROTECTION COVER		01
02	0503010386	CABLE		01
03	0551015037	5/8" UNC X 210 X 198 FASTENER		02
04	0551018630	CARDAN SHAFT GUIDES SLEEVE		01
05	0551018629	GEAR BOX COVER FIXER ROD		01
06	0503010257	1/8" X 1" COTTERPIN		02
07	0503010179	LOCK WASHER		01
08	0503010337	5/16" NUT		01
09	0501013518	FLAT WASHER		02
10	0521056866	RIGHT SEMI-ASSEMBLED EXCHANGE	31	01
11	0503012412	5/8 UNC SELF LOCKING NUT		04
12	0501012140	FLAT WASHER		04
13	0503011268	3/8" X 2-1/2" BOLT		01
14	0503013357	3/8" SELF-ADJUSTING NUT		01
15	0503034417	LETTER ADHESIVE LABEL		01
16	0503032987	ADHESIVE LABEL		01

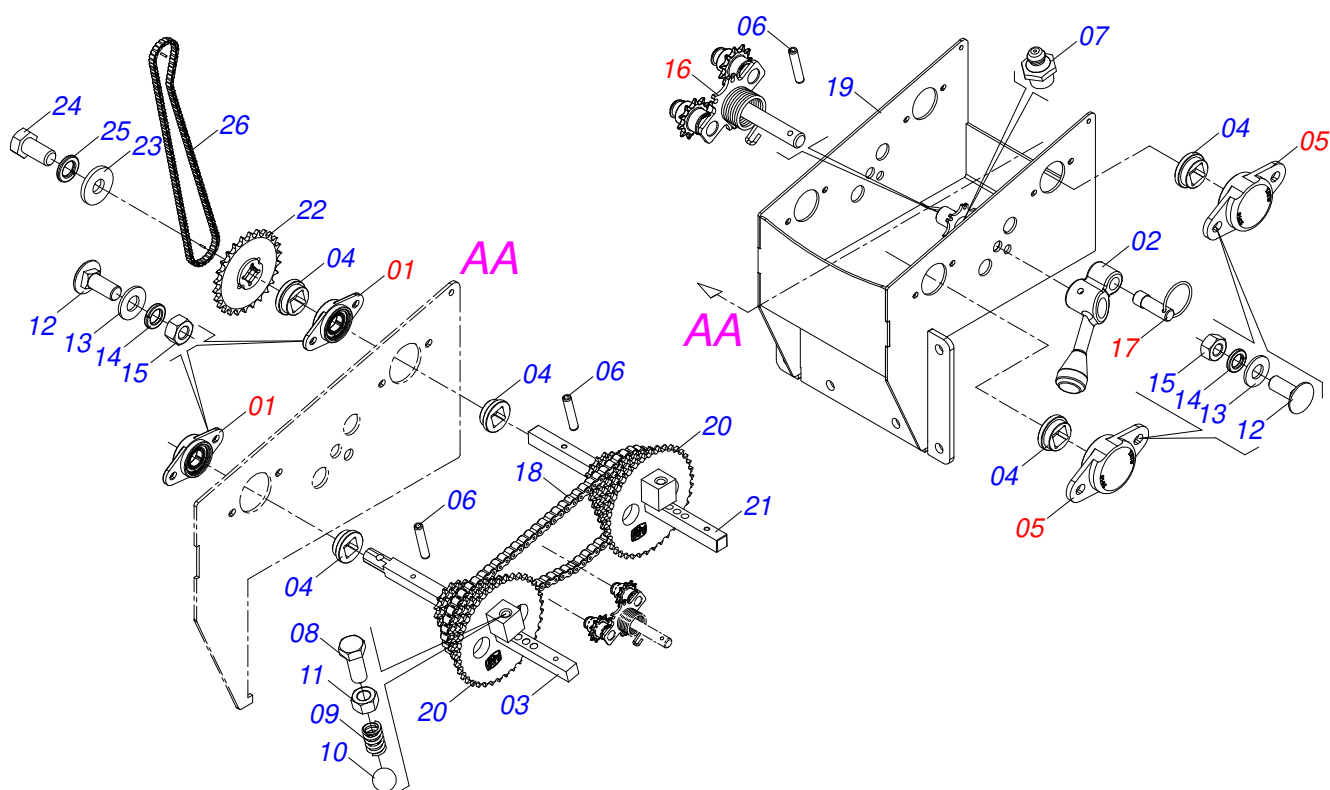


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	32	02
02	0502011758	REAR TENSIONER LEVER		01
03	0551018627	SIDE GEAR BOX DRIVER AXLE		01
04	0503030303	SUPPORT WASHER		05
05	0501056271	GEARBOX CLOSED BEARING	33	02
06	0503010292	0.2" X 1.6" SPRING PIN		05
07	0503010002	1800 GREASE FITTING		01
08	0503010395	1/2" X 1-1/4" BOLT		02
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
10	0503012389	1/2 BALL		02
11	0503010060	1/2" NUT		02
12	0503011953	5/16" X 1" BOLT		08
13	0501010694	FLAT WASHER		08
14	0503010179	LOCK WASHER		08
15	0503010337	5/16" NUT		08
16	0501052776	CHAIN TENSIONER RIGHT ASSY GREATEST	34	01
17	0501048790	AXLE WITH RING	35	01
18	0503012204	40-1 CHAIN X 82 LINK + RED		01
19	0531060361	RIGHT SIDE EXCHANGE SUPPORT		01
20	0511060396	DRIVE/DRIVEN AXLE CONE		02
21	0591011683	MOVED AXIS		01
22	0511067501	26Z GEAR		01
23	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		01
24	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
25	0503010025	3/8" SPRING WASHER		01
26	0503019312	40-1 X 51 CHAIN LINK + MENDING		01

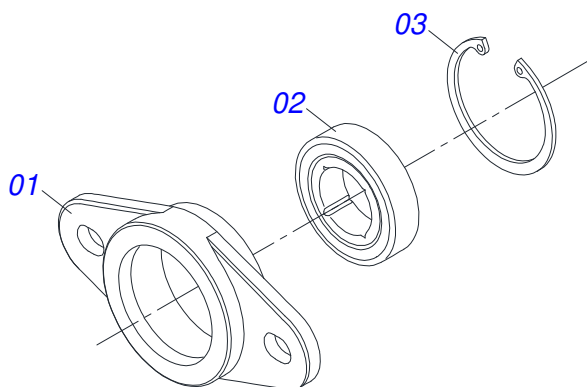


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

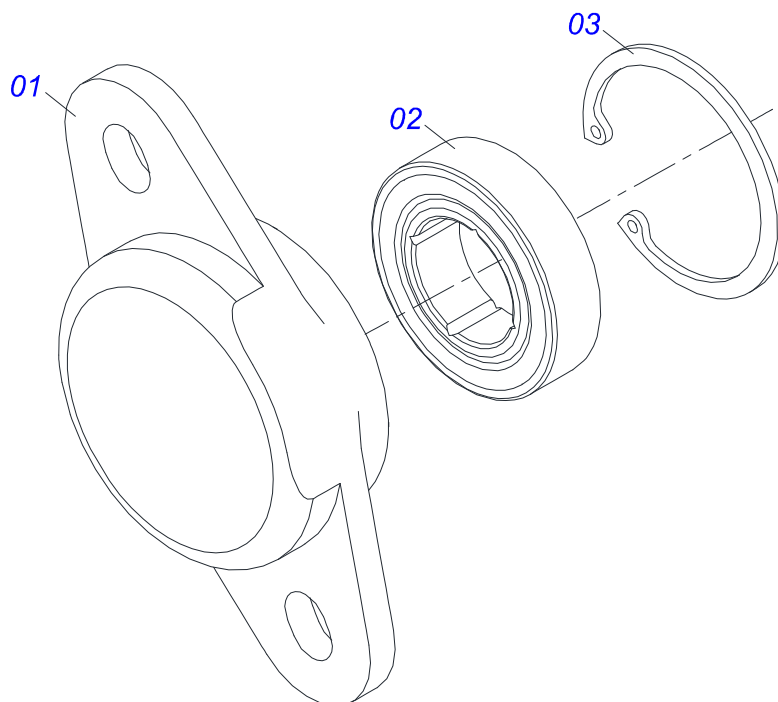

Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

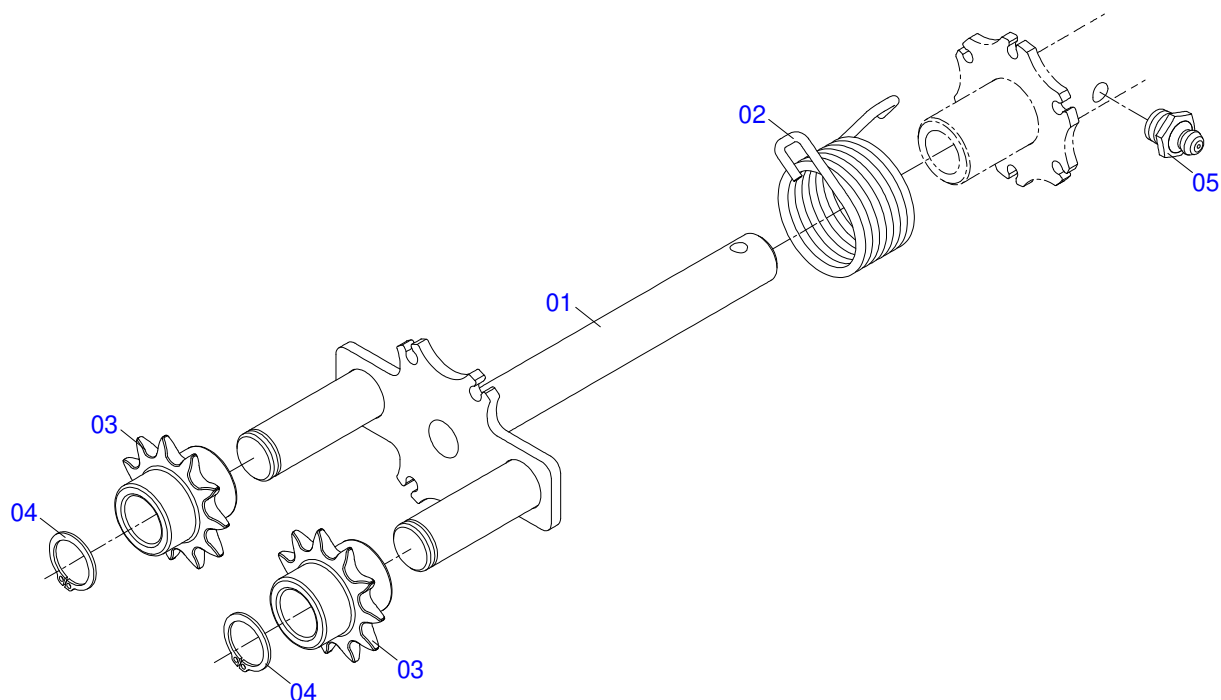


Item	Code	Description	See page	QT
01	0511061794	CHAIN TENSIONER		01
02	0503031367	SPRING		01
03	0503031805	11Z 1/2" GEAR		02
04	0503010302	501019 SEAL RING		02
05	0503010002	1800 GREASE FITTING		01

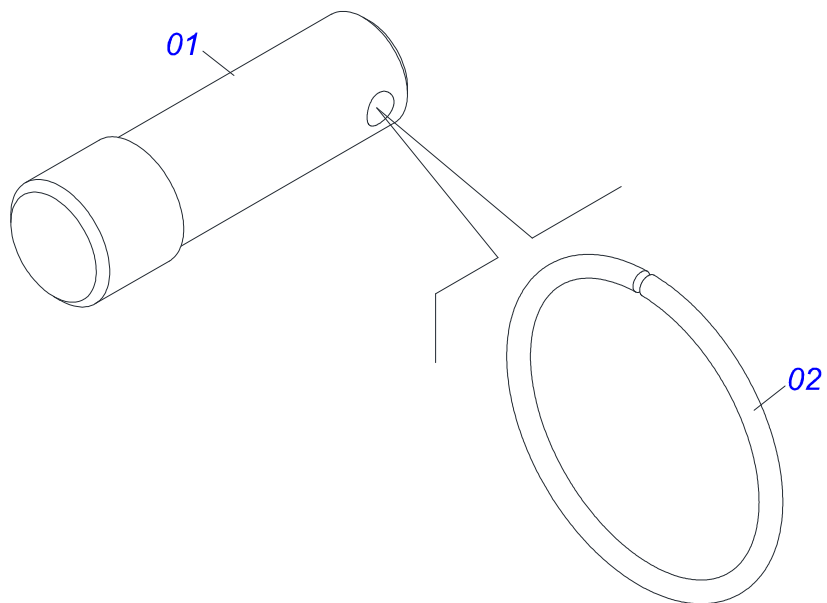


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

DRIVE SHAFT


0501046805

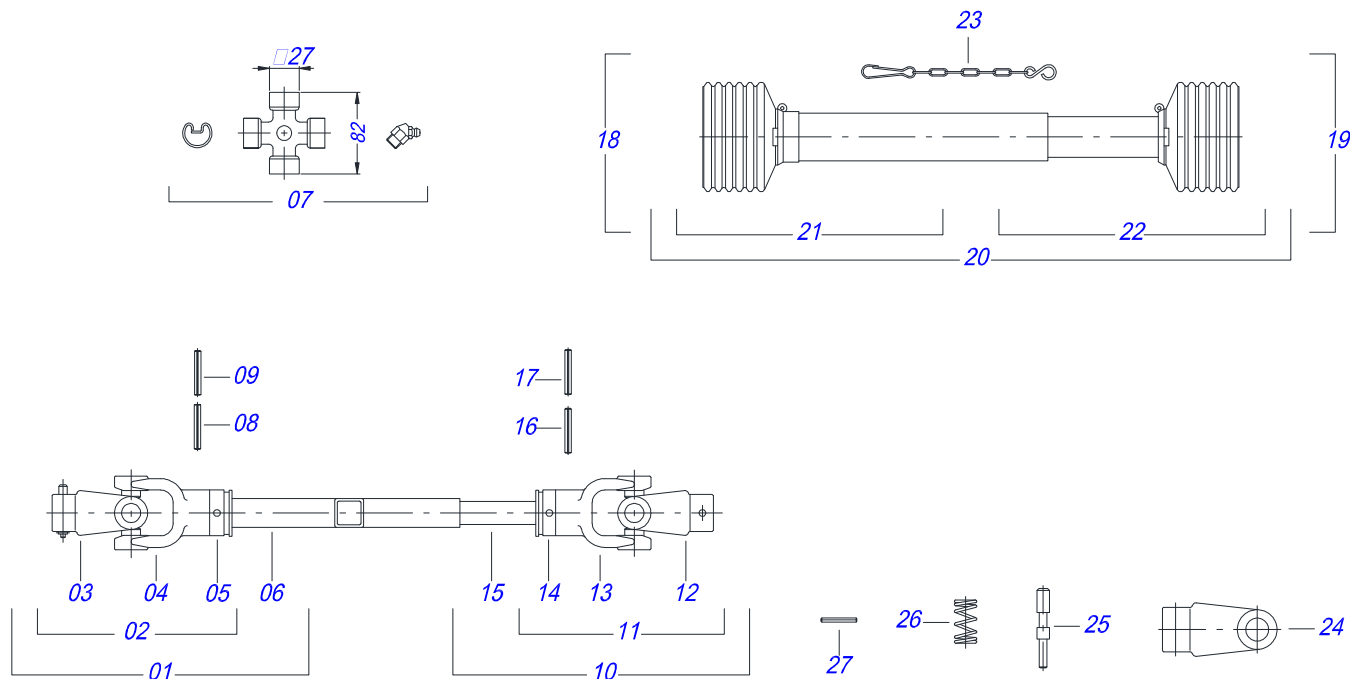


Item	Code	Description	See page	QT
01	0501051729	UNIVERSAL JOINT WITH SLEEVE/PROT		01
02	0501051727	UNIVERSAL JOINT WITH AXLE/PROT		01
03	0502010558	4-20 TERMINAL WITH ROLES		01
04	0502011426	2-20 TERMINAL		01
05	0503012069	ADAPTER FOR BUSHING PROTECT		01
06	0501017426	SLEEVE		01
07	0503010835	CARDAN CROSSPICE		01
08	0503010839	03"X 0.6" SPRING PIN		01
09	0503010301	0.3" X 1.8" SPRING PIN		01
10	0501051718	UNIVERSAL JOINT		01
11	0501051720	UNIVERSAL JOINT		01
12	0502011427	3-20 TERMINAL		01
13	0502010558	4-20 TERMINAL WITH ROLES		01
14	0503012070	ADAPTER FOR AXLE PROTECTION		01
15	0511010237	0.9" X 18" SQUARE SHAFT		01
16	0503010361	SPRING PIN		01
17	0503010756	0.2" X 2.4" SPRING PIN		01
18	0501051728	JOINT		01
19	0501051725	JOINT		01
20	0503012090	PROTECTION FOR UNIV JOINT AND SLEEV		01
21	0503012091	PROTECTION FOR UNIV JOINT AND AXLE		01
22	0503012279	PROTECTION FOR UNIV JOINT AND AXLE		01
23	0503012023	CHAIN FOR PROTECTION		01
24	0502010563	1-40 STRIATED 1.3/8" TERMINAL		01
25	0521010638	0.5" X 3.3" QUIC HITCH COUPL SHAFT		01
26	0503030518	0.5"X1.0"X 0.1" COMPRESSION SPRING		01
27	0503010838	0.1" X 0.8" SPRING PIN		01

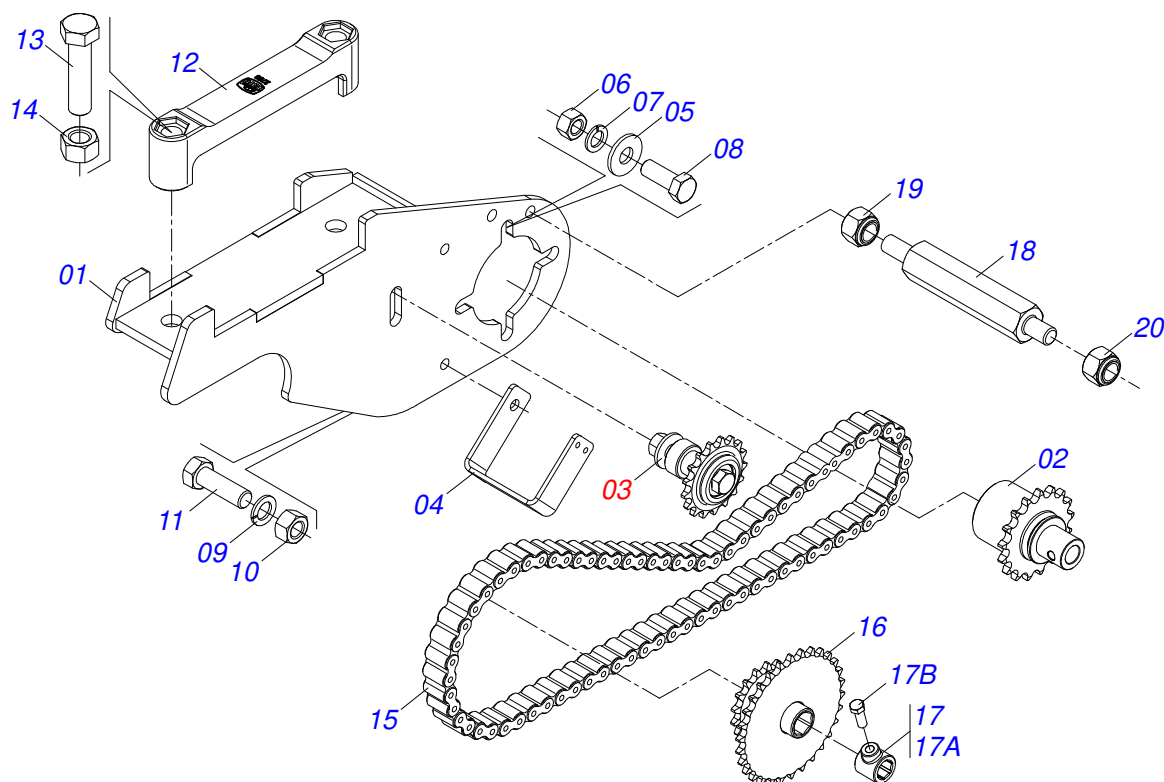


Item	Code	Description	See page	QT
01	0521063601	SUPPORT HYDRAULIC MOTOR		01
02	0521062807	17Z GEAR WITH SLEEVE		01
03	0511052600	STRETCHER HYDRAULIC MOTOR SUPPORT	38	01
04	0571012677	WASHER GUIDE		01
05	0501010937	13,50 X 28 X 3,00 FLAT WASHER		02
06	0503010060	1/2" NUT		02
07	0503010019	1/2" SPRING WASHER		02
08	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		02
09	0503010025	3/8" SPRING WASHER		01
10	0503010026	3/8" NUT		01
11	0503010237	3/8" X 1" BOLT		01
12	0502012768	LINE SUPPORT CLAMP		01
13	0503019024	BOLT 5/8 UNF X 5.1/2 C S RP G.5 ZN		02
14	0503010811	5/8" UNF SELF ADJUSTING NUT		02
15	0503017392	40-1 X 67 CHAIN LINK + MENDING		01
16	0521063774	GEAR ASSY		01
17	0511054314	TRANSMISSION AXLE LOCK SLEEVE		02
17A	0502012699	TRANSMISSION HUB LOCK SLEEVE		02
17B	0503010256	3/8" X 3/4" BOLT		02
18	0501213376	PRISONER 3/8 UNC X 1/4 UNC X 90		02
19	0503013357	3/8" SELF-ADJUSTING NUT		01
20	0503014876	NUT PARLOCK 1/4"		01

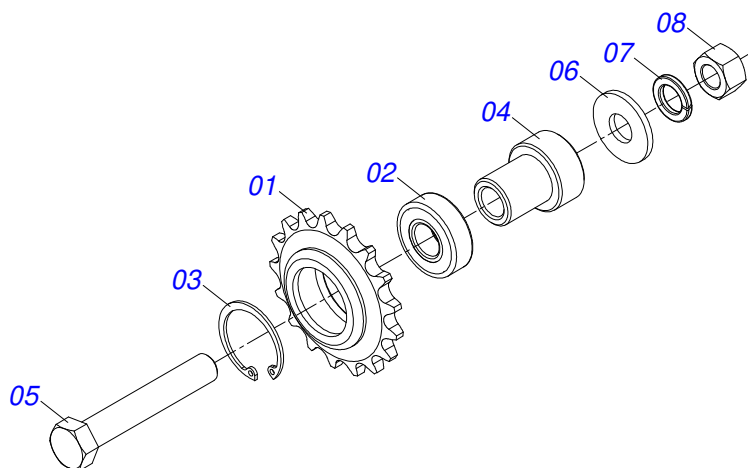


Item	Code	Description	See page	QT
01	0502012367	17Z X P 1/2" GEAR INTERM		01
02	0503012882	BEARING		01
03	0503011945	503050 CLAMPING RING (FOR AXLE)		01
04	0571012703	SLEEVE FLANGE		01
05	0503010479	BOLT		01
06	0511017302	FLAT WASHER		01
07	0503010019	1/2" SPRING WASHER		01
08	0503010060	1/2" NUT		01

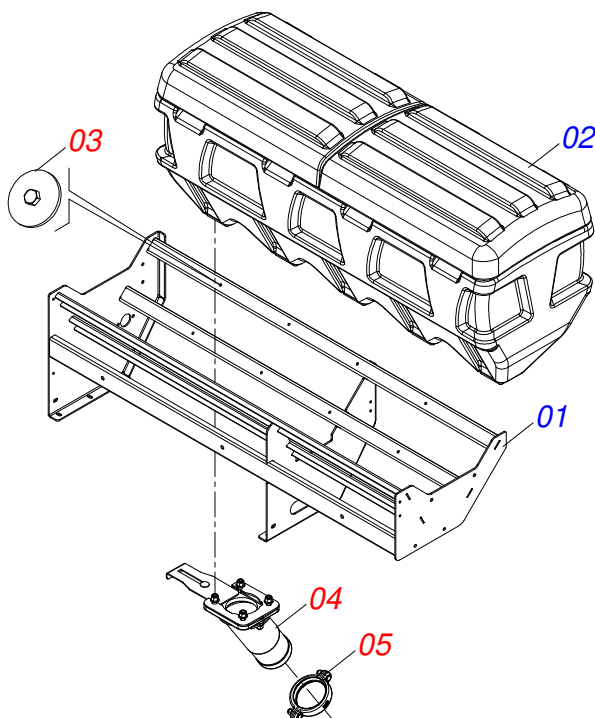


Item	Code	Description	See page	QT
01	0531061191	5 MOUTH SEED RIGHT SUPPORT		01
02	0503062962	SILO SEED 05 ASSY MOUTH		01
03	0521051407	FIXER SILO FERTILIZER	47	08
04	0521055365	SEED CONDUCTOR	48	05
05	0521050525	FIXER FERTILIZER CONDUCTOR	100	05

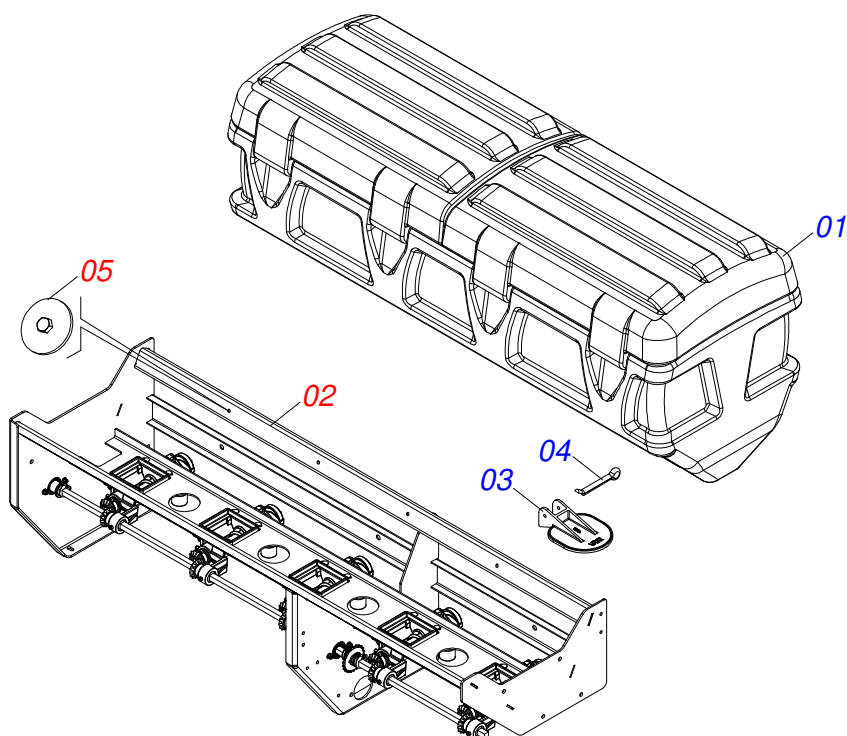

Item	Code	Description	See page	QT
01	0503062391	FERTILIZER HOPPER		01
02	0521058775	LEFT FERTILIZER SUPPORT 5 MOUTHS FERTILIZER	42	01
03	0503034396	FERTILIZER SIDE COVER		05
04	0503010362	1/8 X 1.1/4 COTTERPIN		05
05	0521051407	FIXER SILO FERTILIZER	47	08

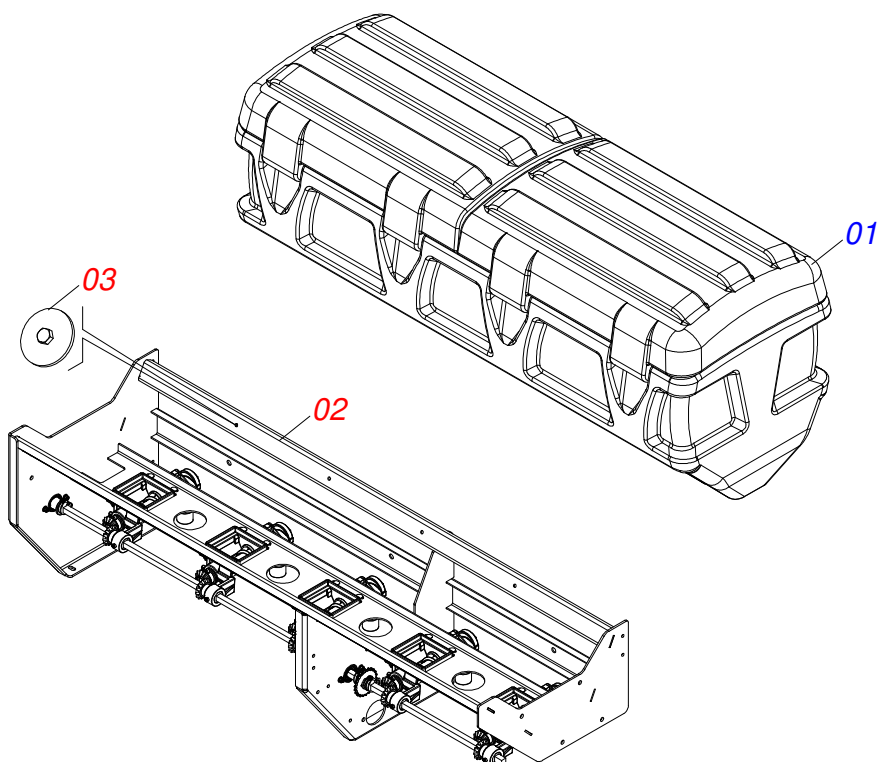


Item	Code	Description	See page	QT
01	0503062391	FERTILIZER HOPPER		01
02	0521058775	LEFT FERTILIZER SUPPORT 5 MOUTHS FERTILIZER	42	01
03	0521051407	FIXER SILO FERTILIZER	47	12

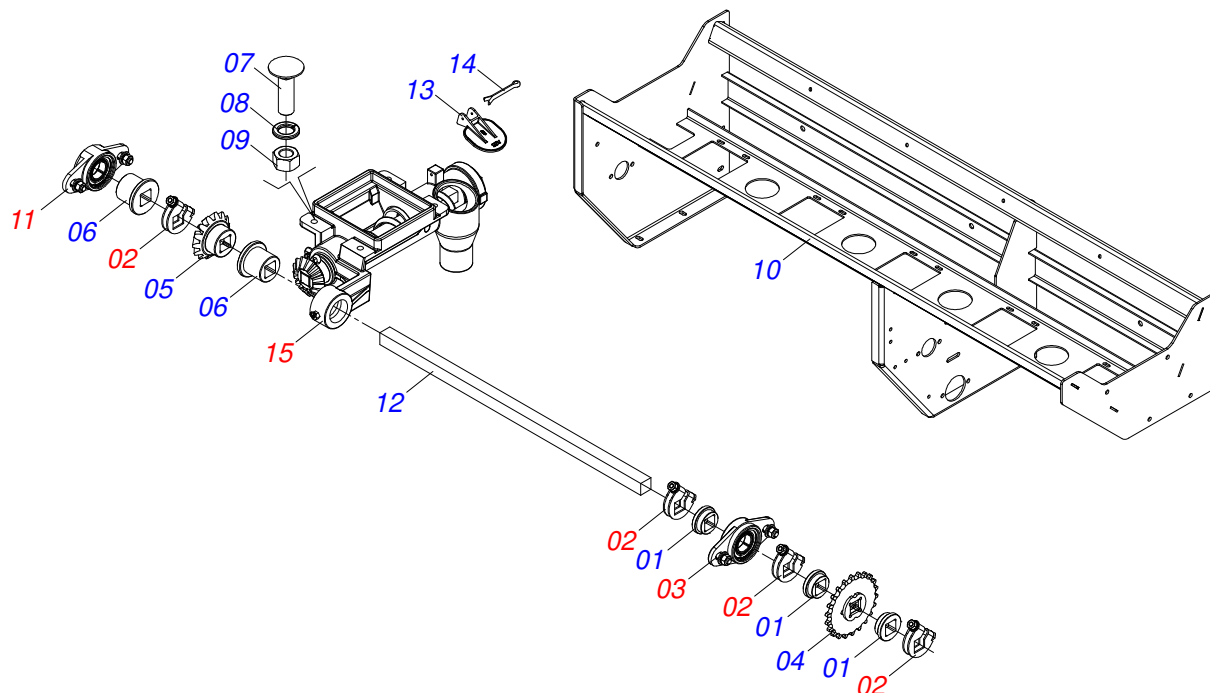

Item	Code	Description	See page	QT
01	0503030303	SUPPORT WASHER		03
02	0501053788	3/4 SQUARE AXLE FASTENER	43	04
03	0521054282	BEARING	44	01
04	0511061759	22Z P12,70 FQ 3/4" GEAR		01
05	0502012990	CONICA 14Z SQUARE GEAR		05
06	0503030275	AGRICULTURAL BEARING		06
07	0501010942	3/8" X 1-1/4" BOLT		20
08	0503010025	3/8" SPRING WASHER		20
09	0503010026	3/8" NUT		20
10	0531061194	FERTILIZER RIGHT SUPPORT 05 MOUTHS		01
11	0521054313	CLOSED BEARING	45	01
12	0561018365	SQUARE SHAFT		01
13	0503034396	FERTILIZER SIDE COVER		05
14	0503010362	1/8 X 1.1/4 COTTERPIN		05
15	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	46	05

3/4 SQUARE AXLE FASTENER


0501053788

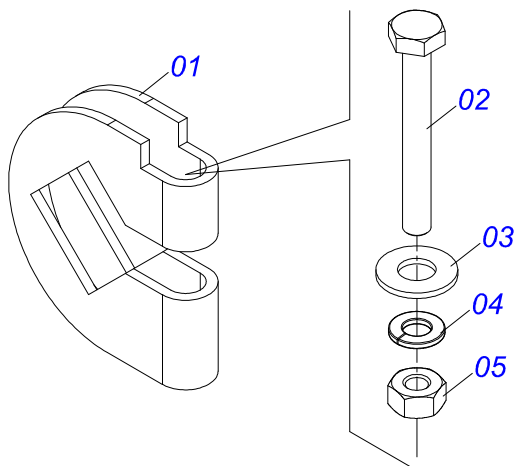

Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

BEARING


0521054282

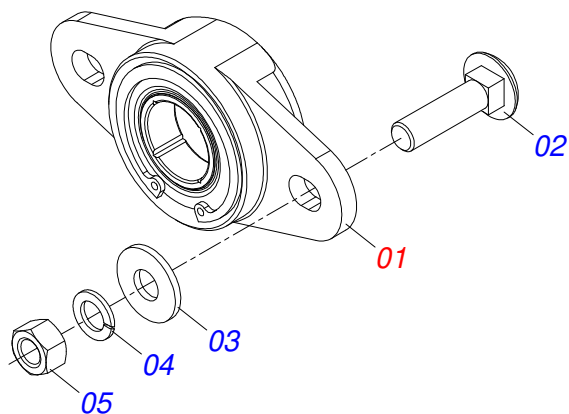

Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	32	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

CLOSED BEARING


0521054313

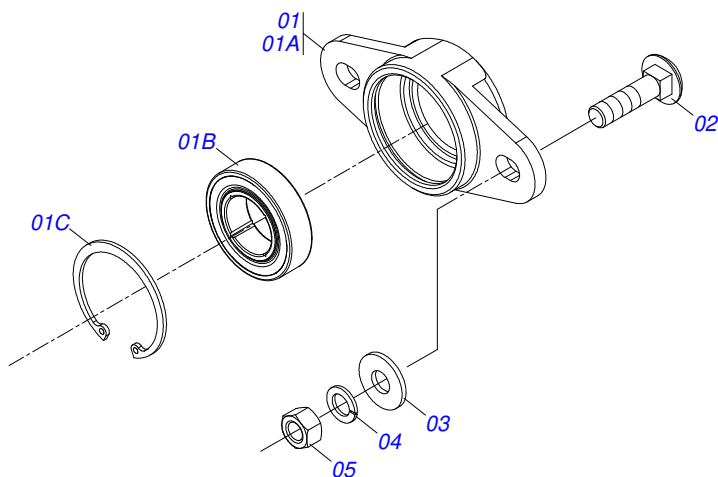


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	33	01
01A	0502012310	GEAR BOX CLOSE BEARING		01
01B	0503013462	BEARING WITH BALL BEARING		01
01C	0503011105	SEAL RING		01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

LEFT SIDE FERTILIZER DISTRIBUTOR


0511051558

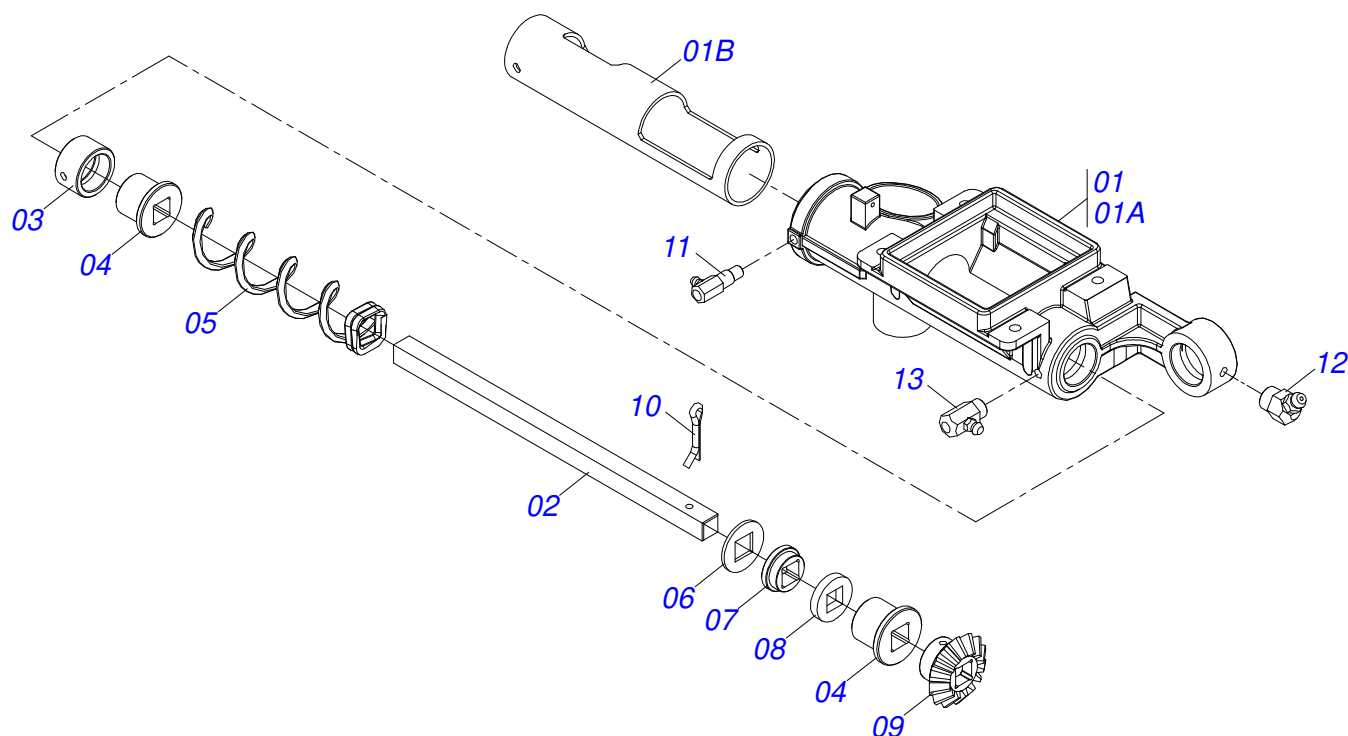


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

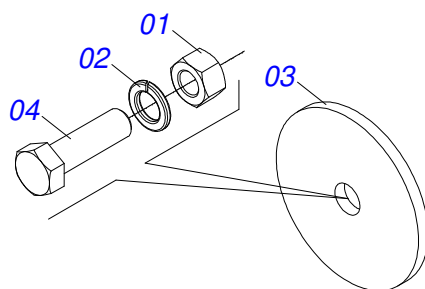

Item	Code	Description	See page	QT
01	0503012531	3/8" INOX NUT		01
02	0503012535	3/8" SPRING WASHER		01
03	0571019051	FIXER HOPPER WASHER		01
04	0503013751	3/8 UNC X 1.1/4 BOLT		01

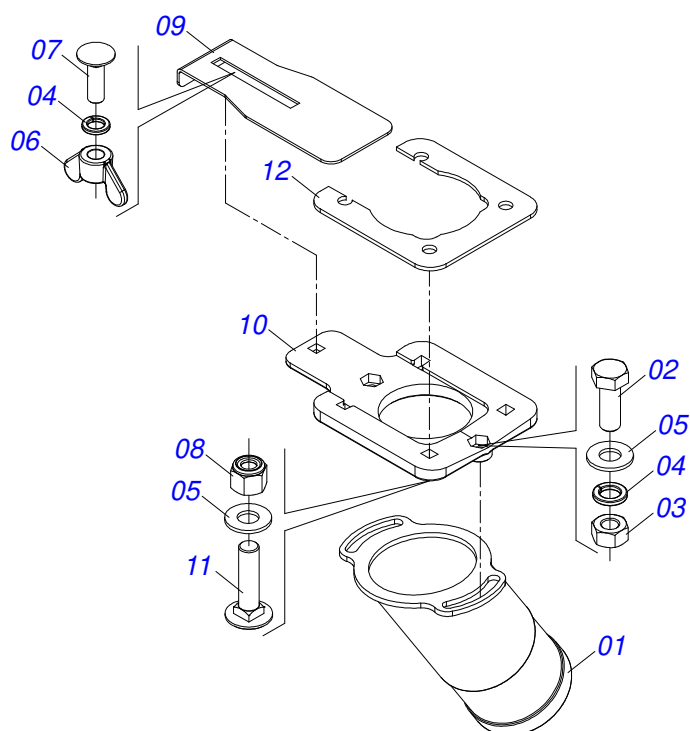


Item	Code	Description	See page	QT
01	0521069705	CONDUCTOR FIXER		01
02	0503010358	5/16" X 5/8" BOLT		02
03	0503010337	5/16" NUT		02
04	0503010179	LOCK WASHER		03
05	0501010694	FLAT WASHER		06
06	0503010499	5/16" UNC BUTTERFLY NUT		01
07	0503011953	5/16" X 1" BOLT		01
08	0503013759	NUT		04
09	0581019780	COVER		01
10	0502012899	DUCT BODY		01
11	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		04
12	0503034859	BOX SEALING GASKET		01

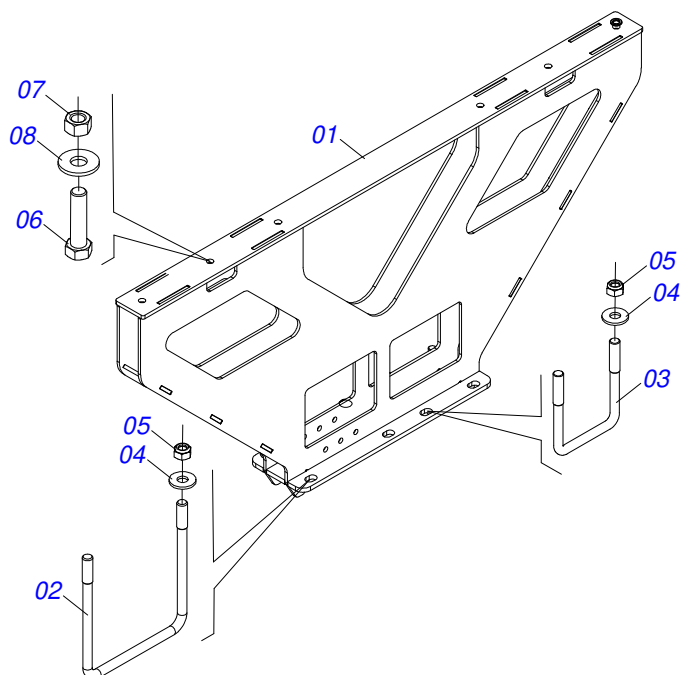


Item	Code	Description	See page	QT
01	0521069333	DEPTH SUPPORT		01
02	0551015037	5/8" UNC X 210 X 198 FASTENER		02
03	0541012939	5/8 UNC X 141 X 120 FASTENER		02
04	0501012140	FLAT WASHER		08
05	0503013389	5/8" SELF LOCKING NUT		08
06	0503010920	1/2" X 1.1/2" BOLT		06
07	0503010589	1/2" UNC SELF ADJUSTING NUT		06
08	0511017302	FLAT WASHER		12

ASSY SIDE HANDLE


0521053054

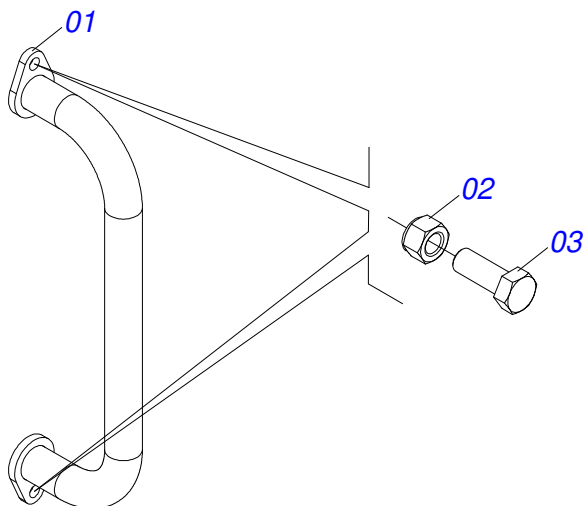

Item	Code	Description	See page	QT
01	0521068962	HANDLE		01
02	0503013357	3/8" SELF-ADJUSTING NUT		02
03	0503010237	3/8" X 1" BOLT		02

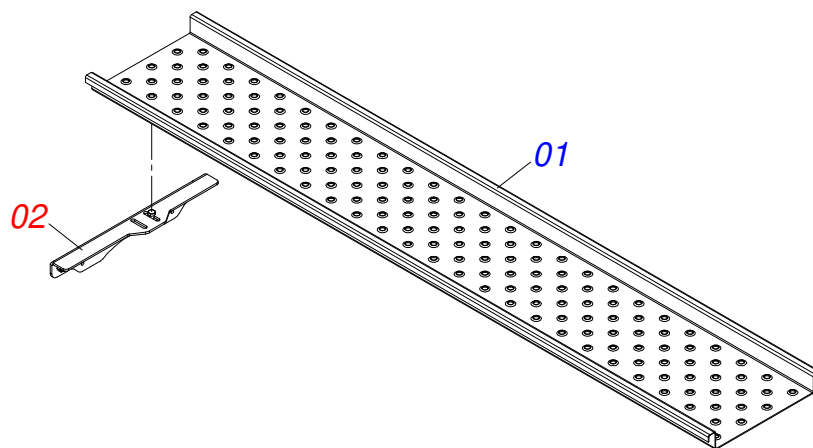


Item	Code	Description	See page	QT
01	0591011689	PLATFORM 1930 FERTILIZER		01
02	0521054279	PLATFORM FIXER	52	02

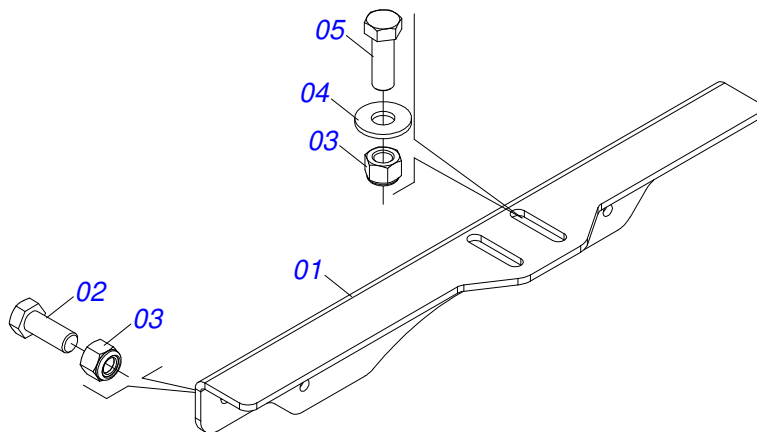


Item	Code	Description	See page	QT
01	0581018560	PLATFORM SUPPORT		01
02	0503010395	1/2" X 1-1/4" BOLT		02
03	0503010589	1/2" UNC SELF ADJUSTING NUT		03
04	0511017302	FLAT WASHER		01
05	0501010063	1/2" X 1-1/2" BOLT		01

LADDER ASSY


0521054272

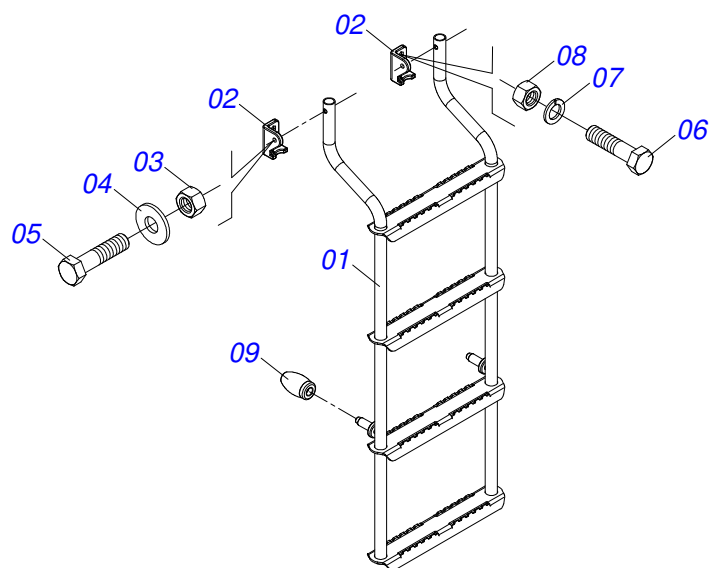


Item	Code	Description	See page	QT
01	0521069329	ASSY SIDE LADDER		01
02	0502012742	FIXER SUPPORT LADDER		02
03	0503013357	3/8" SELF-ADJUSTING NUT		02
04	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
05	0503011179	3/8" X 2-1/4" BOLT		02
06	0503010237	3/8" X 1" BOLT		04
07	0503010025	3/8" SPRING WASHER		04
08	0503010026	3/8" NUT		04
09	0503030403	1.85" X 2.87" BEATER		02

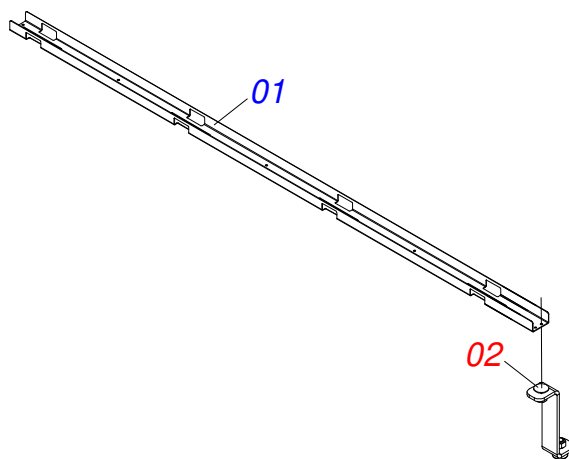


Item	Code	Description	See page	QT
01	0581017744	GUTTER 30 X 55 X 1530		01
02	0521055102	BIGGEST FULL GUTTER SUPPORT	56	02

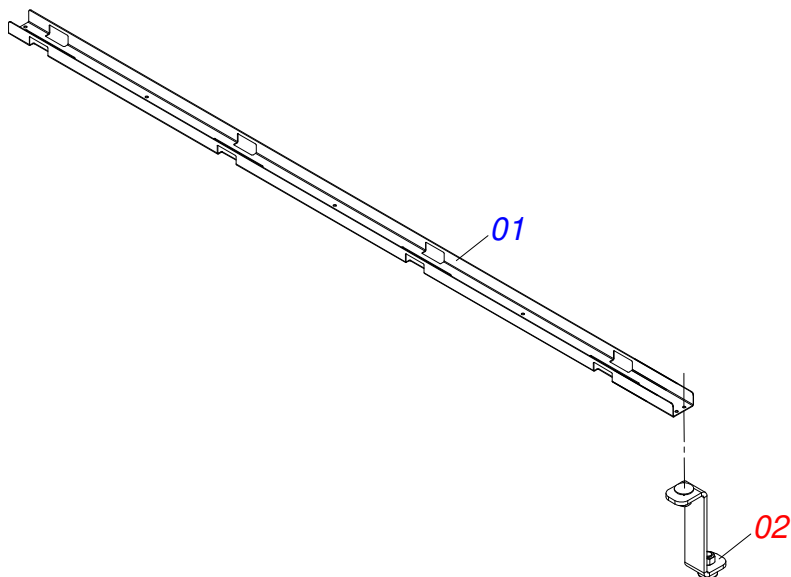

Item	Code	Description	See page	QT
01	0581017744	GUTTER 30 X 55 X 1530		01
02	0521055102	BIGGEST FULL GUTTER SUPPORT	56	03

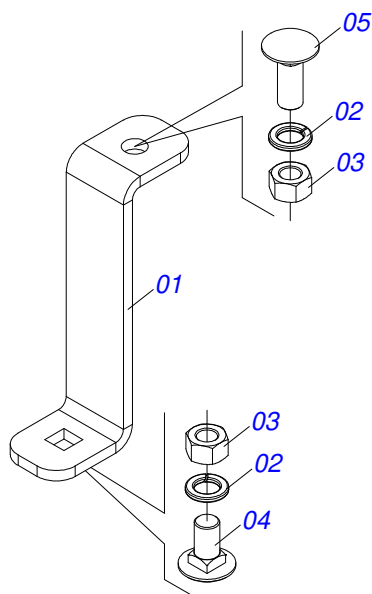


Item	Code	Description	See page	QT
01	0581019560	SUPPORT CONDUCTOR		01
02	0503010025	3/8" SPRING WASHER		02
03	0503010026	3/8" NUT		02
04	0503013029	3/8" X 3/4" BOLT		01
05	0501011643	3/8 X 1"BOLT		01

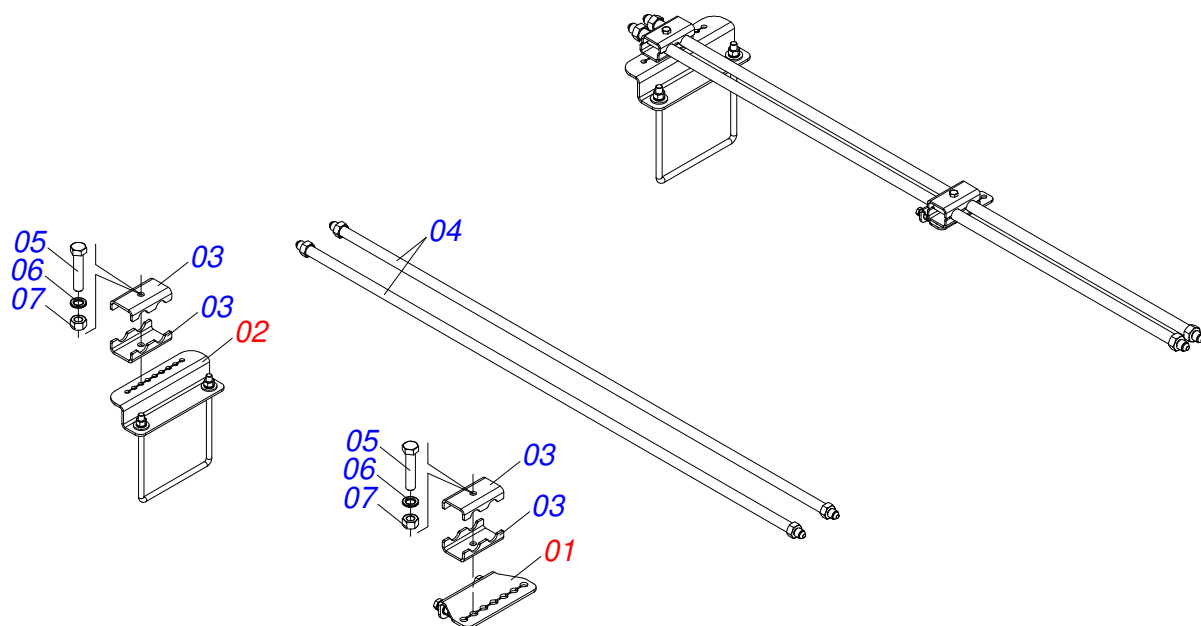


Item	Code	Description	See page	QT
01	0511059943	SUPPORT FASTENER ASSY	59	01
02	0511059928	SIDE DUTY SUPPORT	60	01
03	0581018407	BODY FASTENER 2 DUCTS		04
04	0521069199	OIL DUCT R.3/4 X 1480		02
05	0503011268	3/8" X 2-1/2" BOLT		02
06	0503010025	3/8" SPRING WASHER		02
07	0503010026	3/8" NUT		02

SIDE DUCT SET


0521059137

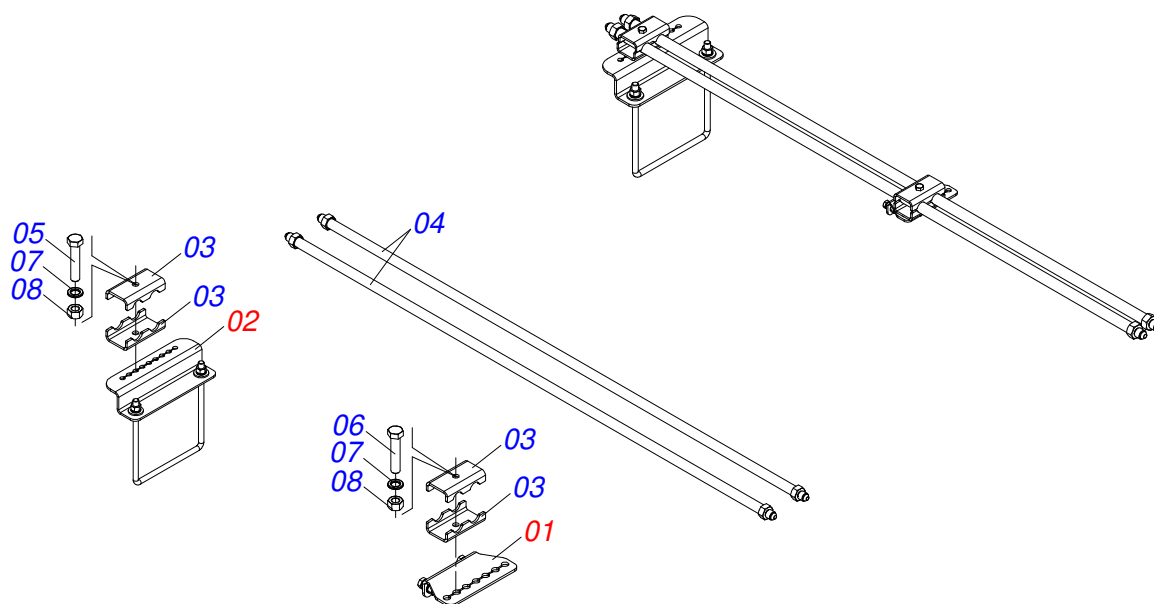

Item	Code	Description	See page	QT
01	0511059943	SUPPORT FASTENER ASSY	59	01
02	0511059928	SIDE DUTY SUPPORT	60	01
03	0581018407	BODY FASTENER 2 DUCTS		04
04	0521069199	OIL DUCT R.3/4 X 1480		02
05	0503011268	3/8" X 2-1/2" BOLT		01
06	0503011123	BOLT		01
07	0503010025	3/8" SPRING WASHER		02
08	0503010026	3/8" NUT		02

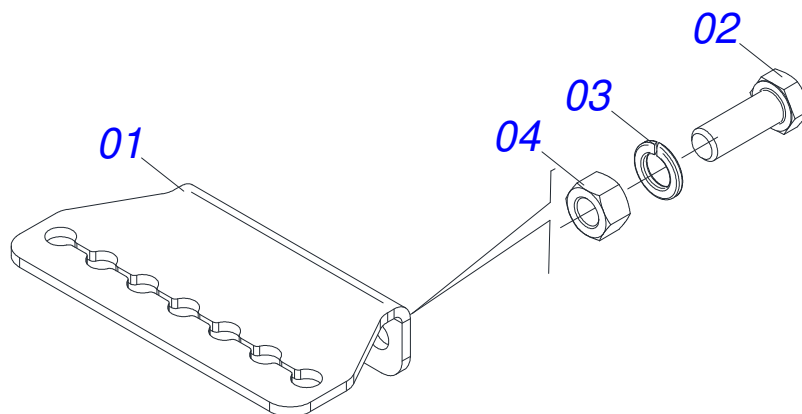

Item	Code	Description	See page	QT
01	0581011417	DUTO HOLDER SUPPORT		01
02	0503010237	3/8" X 1" BOLT		02
03	0503010025	3/8" SPRING WASHER		02
04	0503010026	3/8" NUT		02

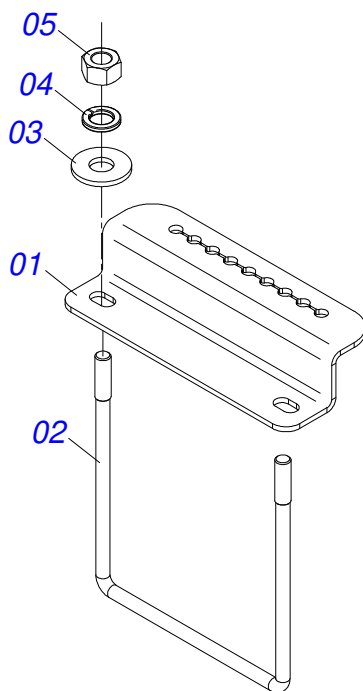

Item	Code	Description	See page	QT
01	0581013094	DUTO HOLDER SUPPORT		01
02	0571019756	FASTENER 1/2 UNC X 220 X 198 ZN		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		02
05	0503010060	1/2" NUT		02

0503034679

0503033621

0503031827

0503032986


0503033416

0503033414


0503031565

0503031546


Item	Code	Description	See page	QT
01	0503034679	ADHESIVE LABEL		01
02	0503032986	ADHESIVE LABEL		01
03	0503033621	ADHESIVE LABEL		01
04	0503033416	ADHESIVE LABEL		01
05	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING		01
06	0503031827	LUBRICATE AND RETIGHTEN DAILY DECAL		01
07	0503031565	ADHESIVE LABEL CARE		01
08	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		01

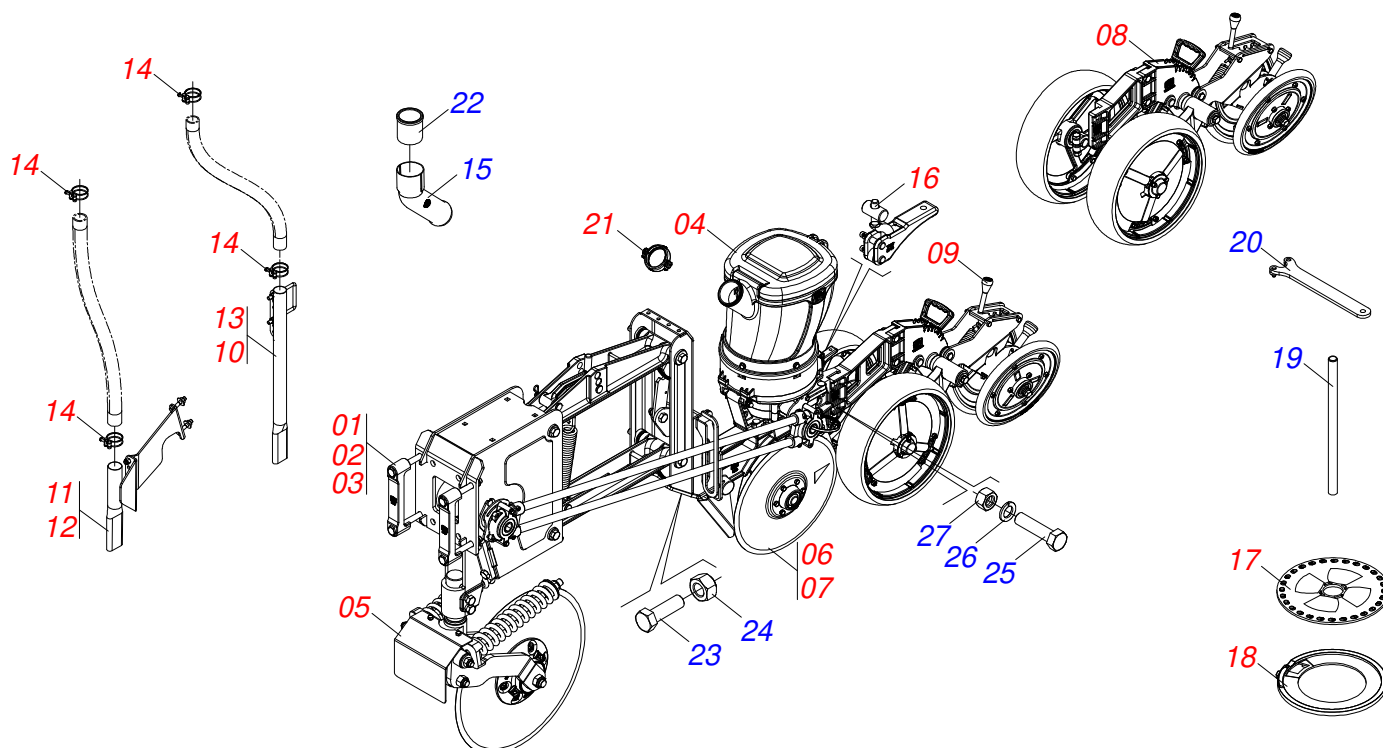


Item	Code	Description	See page	QT
01	0521058534	FRONT LINE SEED LONG TCE/CM	63	01
02	0521058533	FRONT SEED SHORT LINE TCE/CM	64	01
03	0521058612	FRONT SUPER LONG SEED LINE TCE	65	01
04	0521050096	SEED HOPPER SYSTEM (CSU)	67	01
05	0521055349	ASSY DPL20 CUTTING DISC		01
06	0521058571	RIGHT REAR TITANIUM/TATU	70	01
07	0521058572	LEFT REAR TITANIUM/TATU	71	01
08	0521055053	DEPTH/COMPACTOR SYSTEM - SPCRR	81	01
09	0521055888	SET REGULAGEM RAPIDA SEM LUBRIFICAÇÃO	83	01
10	0521054262	RIGHT FERTILIZER CONDUCTOR	93	01
11	0521056855	ASSY SHORT FERTILIZER CONDUCTOR	94	01
12	0521056854	ASSY LONG FERTILIZER CONDUCTOR	95	01
13	0521054263	LEFT FERTILIZER CONDUCTOR ASSY	96	01
14	0503019222	BRACELET TYPE WIRE 3.2MM X 48 X 63 MM		01
15	0503031050	CURVED CONDUCTOR		01
16	0511052024	FAST CLOSING SET	97	01
17	0503062066	DISC SET WITH CORN RING	98	01
18	0503062067	DISC SET / RING SOY 90F TITANIUM	99	01
19	0531013600	PRESS ADJUSTMENT LEVER		01
20	0521068982	CUTTING DISC HUB KEY		01
21	0521050525	FIXER FERTILIZER CONDUCTOR	100	01
22	0591011691	TOP GLOVE CONDUCTOR FERTILIZER		01
23	0503014234	BOLT 1/2 UNF X 1.3/4 CS G.5 ZN		01
24	0503012136	NUT 1/2 NF		01
25	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
26	0503010019	1/2" SPRING WASHER		01
27	0503010060	1/2" NUT		01

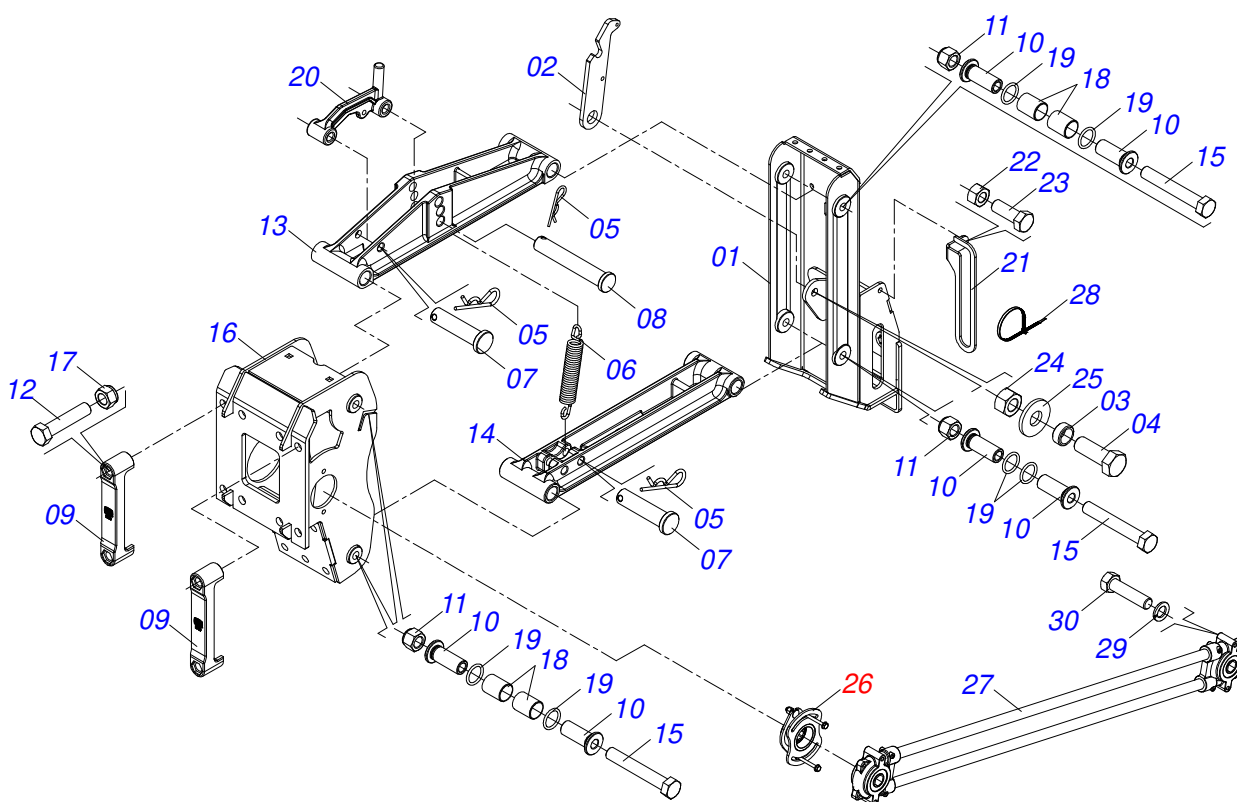


Item	Code	Description	See page	QT
01	0531060948	SEED LINE FRAME		01
02	0571012310	ROW LOCK BODY		01
03	0551015826	SEED ROW LOCK GUIDE SLEEVE		01
04	0503010232	5/8" X 1.3/4" BOLT		01
05	0503030168	HITCH PIN CLIP		04
06	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
07	0503033728	FIXED SPRING PIN		02
08	0571014704	UPPER AXLE		01
09	0502012768	LINE SUPPORT CLAMP		02
10	0581018676	SLEEVE ARM LINE SEED		08
11	0503010811	5/8" UNF SELF ADJUSTING NUT		04
12	0503019024	BOLT 5/8 UNF X 5.1/2 C S RP G.5 ZN		04
13	0581019795	SEED ARM SUPPORT ROW		01
14	0581019796	LOWER ARM LARGER		01
15	0503019025	BOLT 5/8 UNF X 8 C S RP G.5 ZN		04
16	0521068452	UP SUPPORT		01
17	0503010878	5/8" SELF ALIGNING NUT		04
18	0503019273	AUTO LUBRICANT SLEEVE		06
19	0503010045	O'RING		08
20	0502012568	UPPER ROCKER ARM		01
21	0591014726	ENCAPSULATED CURRENT GUIDE		01
22	0503013357	3/8" SELF-ADJUSTING NUT		01
23	0503010237	3/8" X 1" BOLT		01
24	0503013389	5/8" SELF LOCKING NUT		01
25	0501012140	FLAT WASHER		01
26	0521059045	BEARING WITH CURRENT ENCAPSULATED	66	01
27	0503063190	ENCAPSULATED CURRENT MAHM LONG 1060		01
28	0503018829	NYLON CLAMP		01
29	0503010179	LOCK WASHER		02
30	0503019284	M8 X BOLT		02

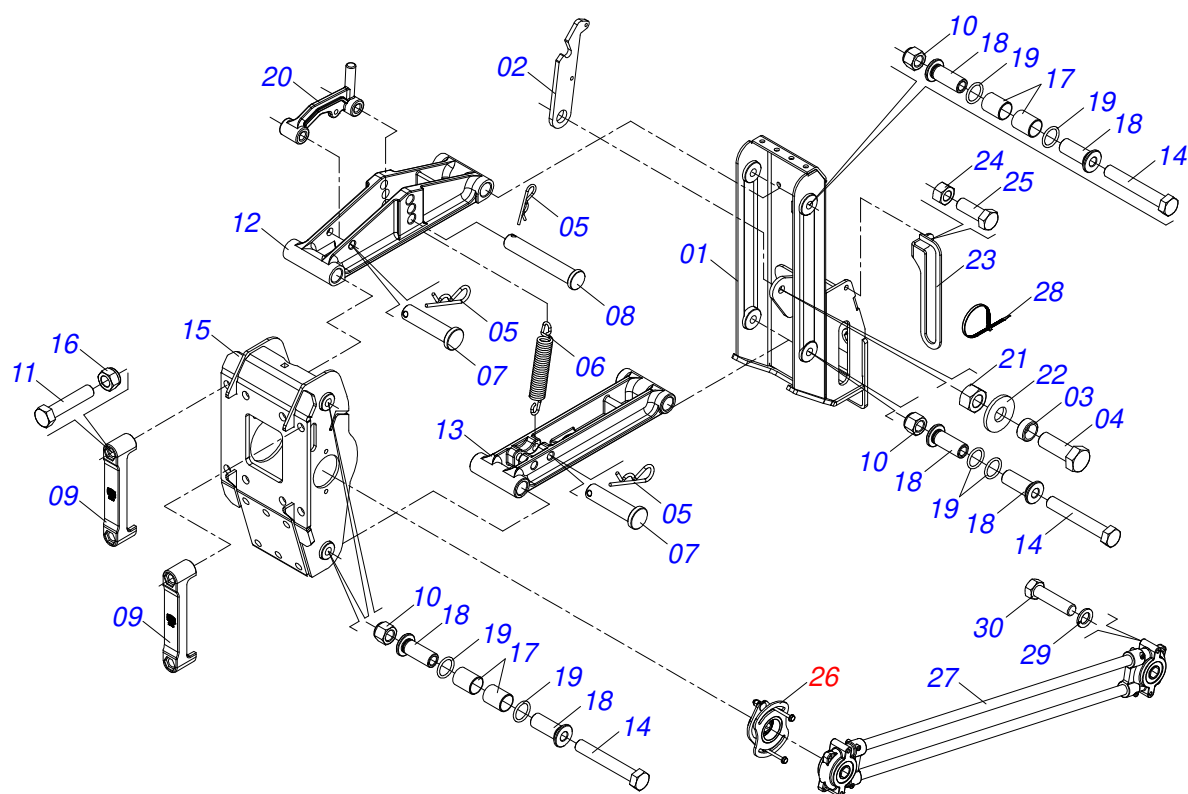


Item	Code	Description	See page	QT
01	0531060948	SEED LINE FRAME		01
02	0571012310	ROW LOCK BODY		01
03	0551015826	SEED ROW LOCK GUIDE SLEEVE		01
04	0503010232	5/8" X 1.3/4" BOLT		01
05	0503030168	HITCH PIN CLIP		04
06	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
07	0503033728	FIXED SPRING PIN		02
08	0571014704	UPPER AXLE		01
09	0502012768	LINE SUPPORT CLAMP		02
10	0503010811	5/8" UNF SELF ADJUSTING NUT		04
11	0503019024	BOLT 5/8 UNF X 5.1/2 C S RP G.5 ZN		04
12	0581019793	LOWER UPPER ARM WITHOUT LUBRICATION		01
13	0581019794	LOWER LOWER ARM WITHOUT LUBRICATION		01
14	0503019025	BOLT 5/8 UNF X 8 C S RP G.5 ZN		04
15	0521068448	FRONT SUPPORT SHORT SEED LINE		01
16	0503010878	5/8" SELF ALIGNING NUT		04
17	0503019273	AUTO LUBRICANT SLEEVE		08
18	0581018676	SLEEVE ARM LINE SEED		08
19	0503010045	O'RING		08
20	0502012568	UPPER ROCKER ARM		01
21	0503013389	5/8" SELF LOCKING NUT		01
22	0501012140	FLAT WASHER		01
23	0591014726	ENCAPSULATED CURRENT GUIDE		01
24	0503013357	3/8" SELF-ADJUSTING NUT		01
25	0503010237	3/8" X 1" BOLT		01
26	0521059045	BEARING WITH CURRENT ENCAPSULATED	66	01
27	0503063191	ENCAPSULATED CURRENT MAHM SHORT 895		01
28	0503018829	NYLON CLAMP		01
29	0503010179	LOCK WASHER		02
30	0503019284	M8 X BOLT		02

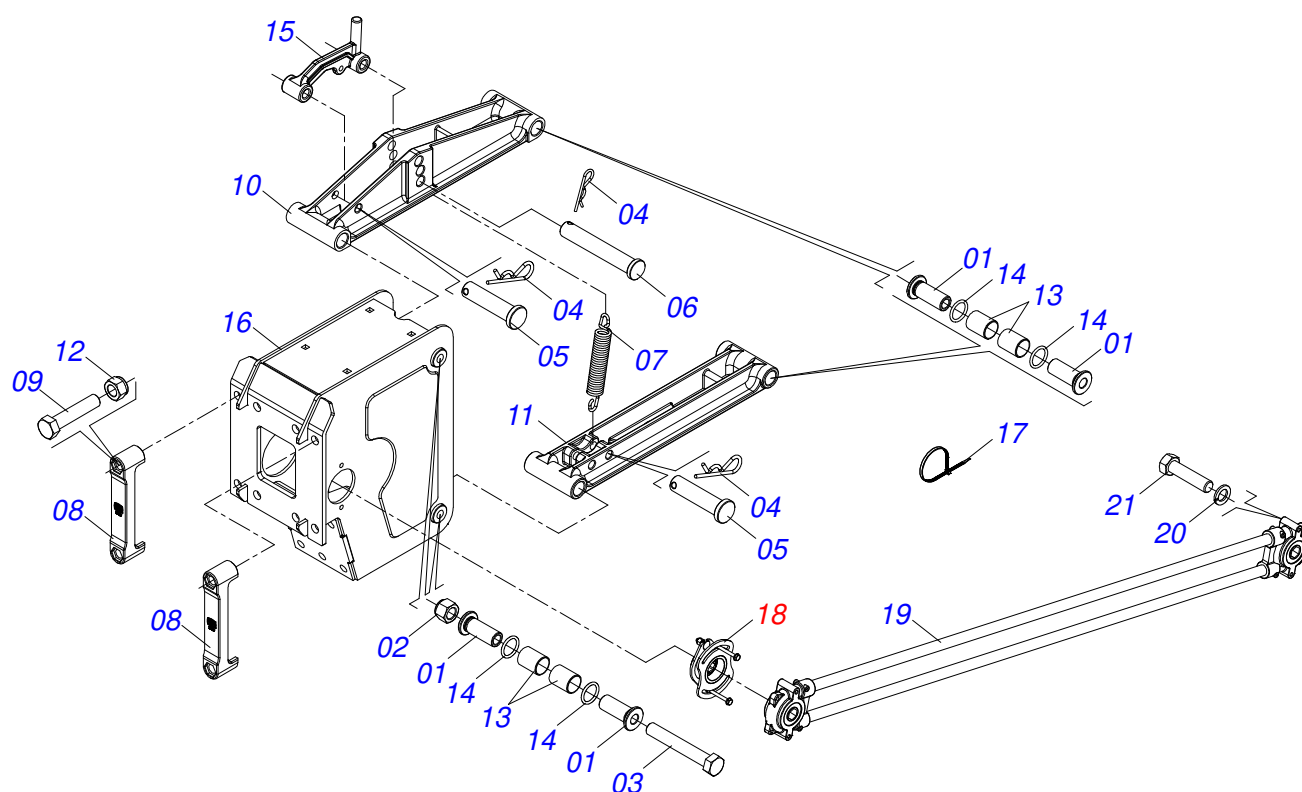


Item	Code	Description	See page	QT
01	0581018676	SLEEVE ARM LINE SEED		08
02	0503010811	5/8" UNF SELF ADJUSTING NUT		02
03	0503019025	BOLT 5/8 UNF X 8 C S RP G.5 ZN		02
04	0503030168	HITCH PIN CLIP		03
05	0503033728	FIXED SPRING PIN		02
06	0571014704	UPPER AXLE		01
07	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
08	0502012768	LINE SUPPORT CLAMP		02
09	0503019024	BOLT 5/8 UNF X 5.1/2 C S RP G.5 ZN		04
10	0581019795	SEED ARM SUPPORT ROW		01
11	0581019796	LOWER ARM LARGER		01
12	0503010878	5/8" SELF ALIGNING NUT		04
13	0503019273	AUTO LUBRICANT SLEEVE		08
14	0503010045	O'RING		08
15	0502012568	UPPER ROCKER ARM		01
16	0521069981	FRONT SUPPORT LONG SUPER SEED LINE		01
17	0503018829	NYLON CLAMP		03
18	0521059045	BEARING WITH CURRENT ENCAPSULATED	66	01
19	0503063189	SUPER LONG MAHM ENCAPSULATED CHAIN		01
20	0503010179	LOCK WASHER		02
21	0503011295	M 8 X 1,25 X 25 BOLT		02

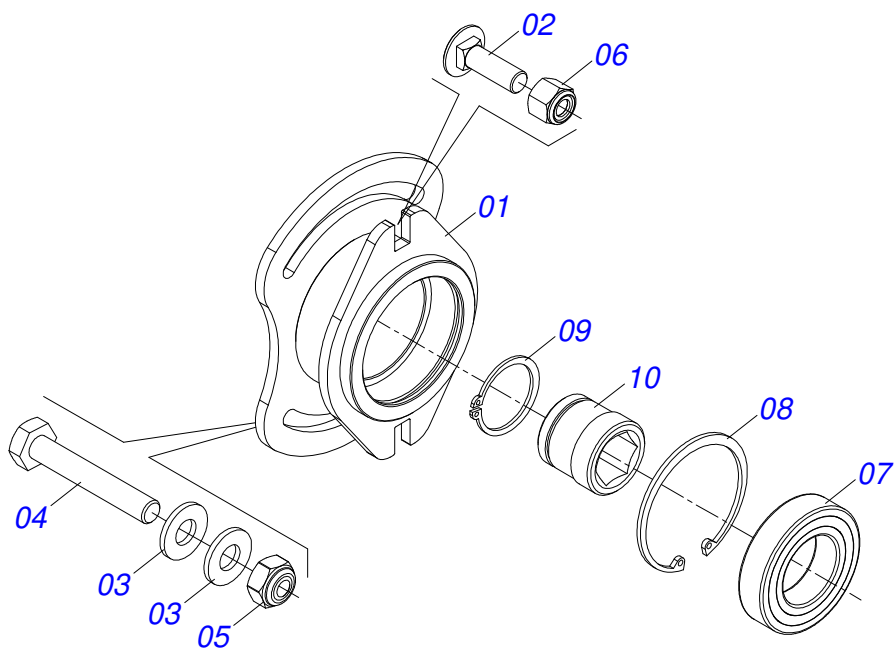


Item	Code	Description	See page	QT
01	0531061301	ENCAPSULATED CURRENT BEARING		01
02	0503011953	5/16" X 1" BOLT		02
03	0511017303	FLAT WASHER		04
04	0503011194	BOLT 1/4 UNC X 2.1/2 CS G.2 ZN		02
05	0503012880	1/4" UNC SELF ADJUSTING NUT		02
06	0503013759	NUT		02
07	0503019373	6006 2RS1 NATIONAL BEARING		01
08	0503012858	502075 CLAMPING RING (FOR HOLE)		01
09	0503010707	501030 CLAMPING RING (FOR AXLE)		01
10	0581019823	BEARING AXLE BODY WITHOUT LUBRICATION		01

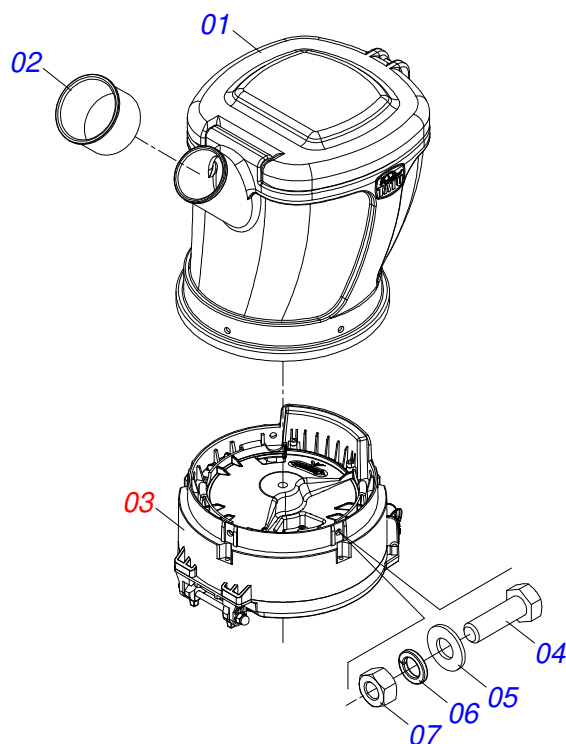


Item	Code	Description	See page	QT
01	0521050118	3" NOZZLE SEED HOPPER	68	01
02	0581014295	FIXING SLEEVE		01
03	0511052058	SEED SYSTEM TITANIUM	69	01
04	0503010358	5/16" X 5/8" BOLT		05
05	0501010694	FLAT WASHER		05
06	0503010179	LOCK WASHER		05
07	0503010337	5/16" NUT		05

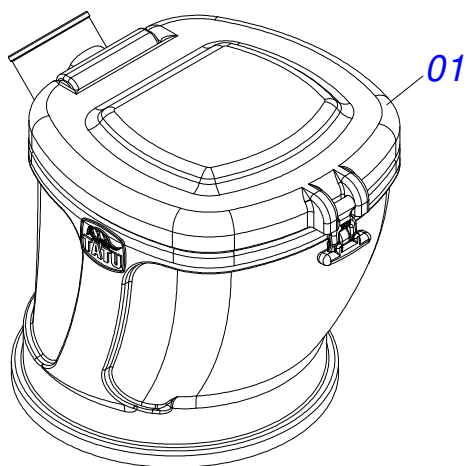


Item	Code	Description	See page	QT
01	0503062397	ASSY SEED HOPPER WITH 3" NOZZLE		01

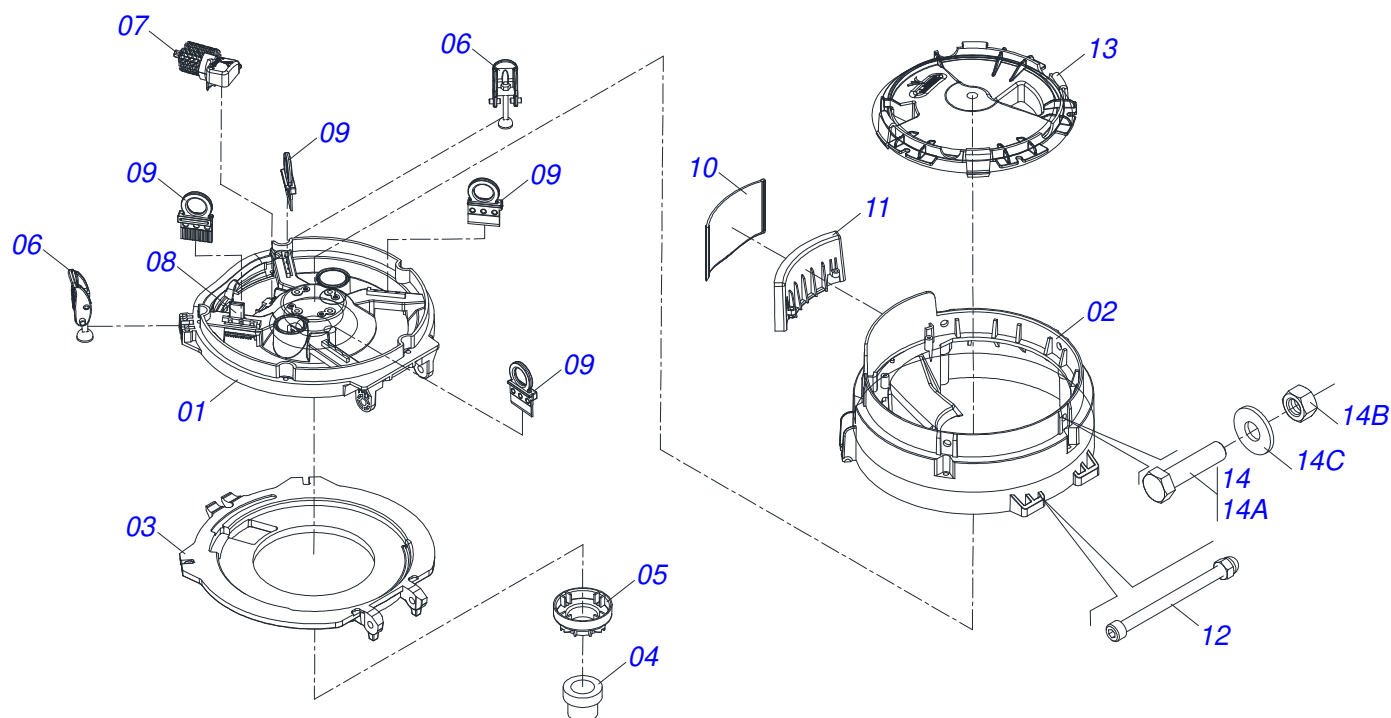


Item	Code	Description	See page	QT
01	0503062031	BASE SET		01
02	0503062032	NECK TITANIUM ASSY		01
03	0503062033	OPPOSITE BASE SET		01
04	0503062034	CENTRAL ADAPTER SET		01
05	0503062035	SET FALSE ADAPT CENTER		01
06	0503062036	SUBSET ASSY LOCK BASE		01
07	0503062037	SUBSET ESCOVAFLEX ASSY		01
08	0503062038	ASSY ANTI-LEAP		01
09	0503062039	POLIFLOW TITANIUM ASSY		01
09.	0503016279	POLIFLOW TITANIUM ASSY		01
10	0503062040	DISPLAY ASSY TITANIUM 1050010		01
11	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
12	0503062042	SET BOLT ARTICULADOR		01
13	0503062043	ASSY LIMIT WEIGHT		01
14	0503062044	ASSEMBLY SEED HOPPER SET		01
14A	0503016285	BOLT		05
14B	0503016286	HEX NUT		05
14C	0503016287	FLAT WASHER		05

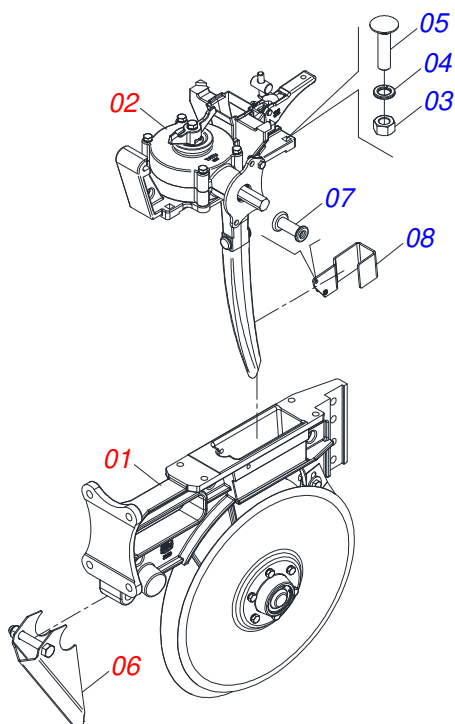

Item	Code	Description	See page	QT
01	0521056955	RIGHT DDD ASSY	72	01
02	0531050193	DOSING ASSY TITANIUM/TATU	78	01
03	0503010026	3/8" NUT		04
04	0503010025	3/8" SPRING WASHER		04
05	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04
06	0531050596	FENDER ASSY	79	01
07	0503015341	POP RIVET		02
08	0501212058	TITANIUM SEED DRIVER'S GUIDE		01

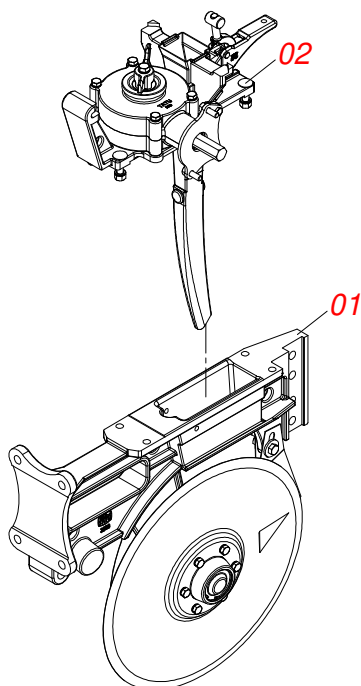


Item	Code	Description	See page	QT
01	0521056954	LEFT DDD ASSY	73	01
02	0521056582	TITANIUM SEED METER SET		01

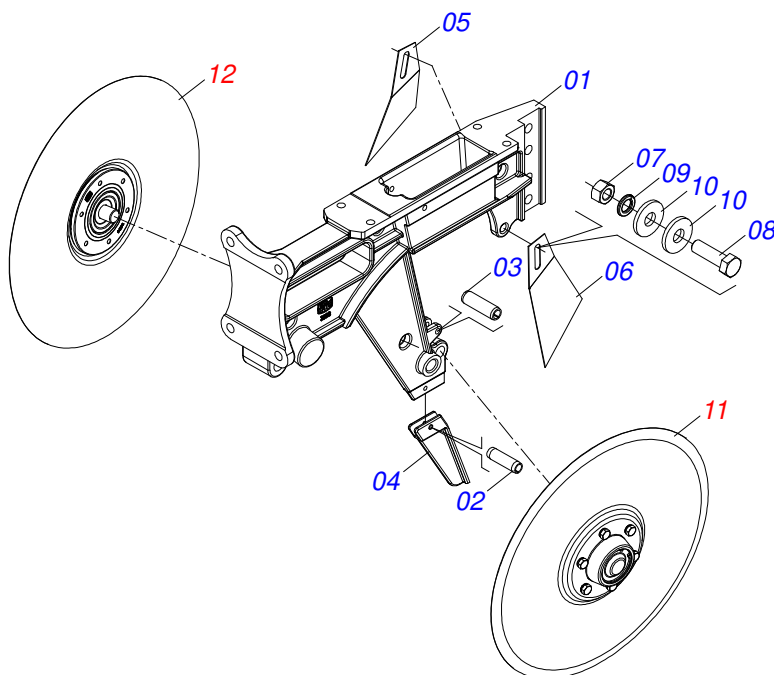


Item	Code	Description	See page	QT
01	0591011773	RIGHT DDD BODY		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8" SPRING WASHER		01
10	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 74 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 75 FERTILIZER / SEED		01

LEFT DDD ASSY


0521056954

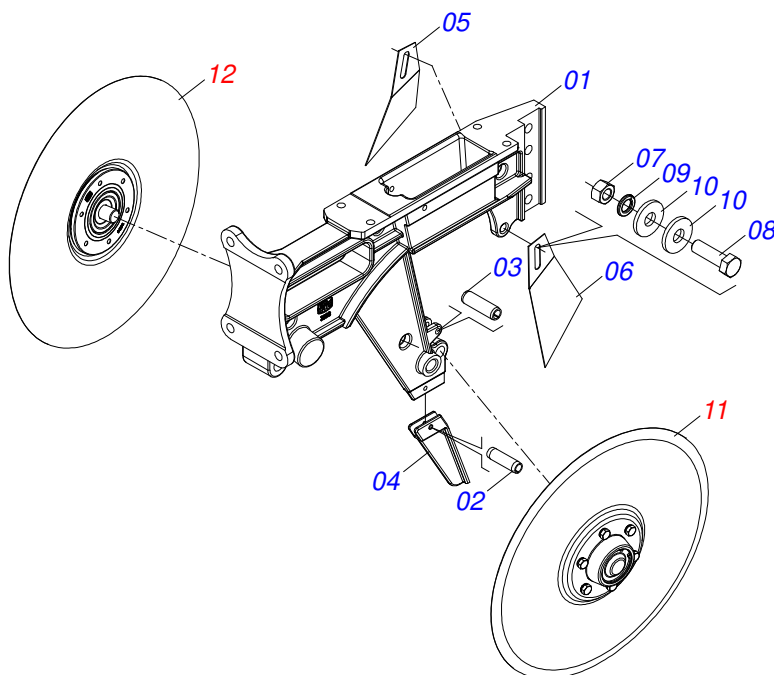


Item	Code	Description	See page	QT
01	0591011772	LEFT DDD BODY		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8" SPRING WASHER		01
10	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 74 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 75 FERTILIZER / SEED		01

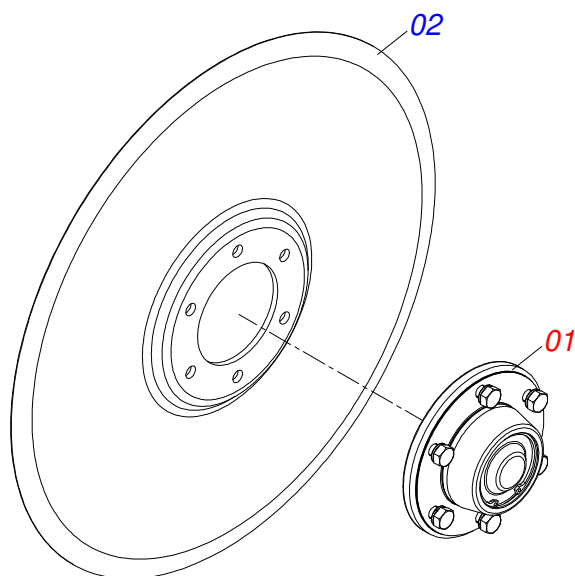


Item	Code	Description	See page	QT
01	0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	76	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

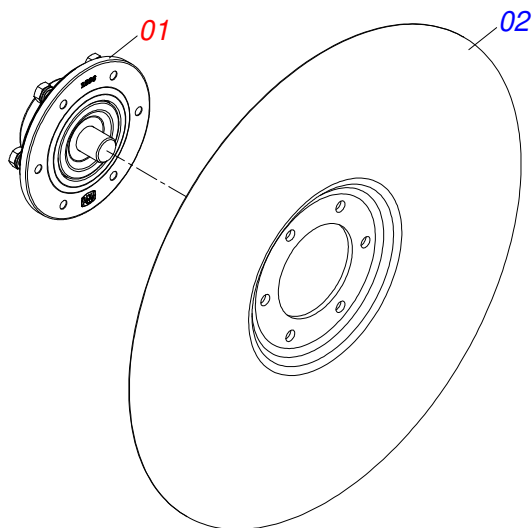


Item	Code	Description	See page	QT
01	0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	77	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

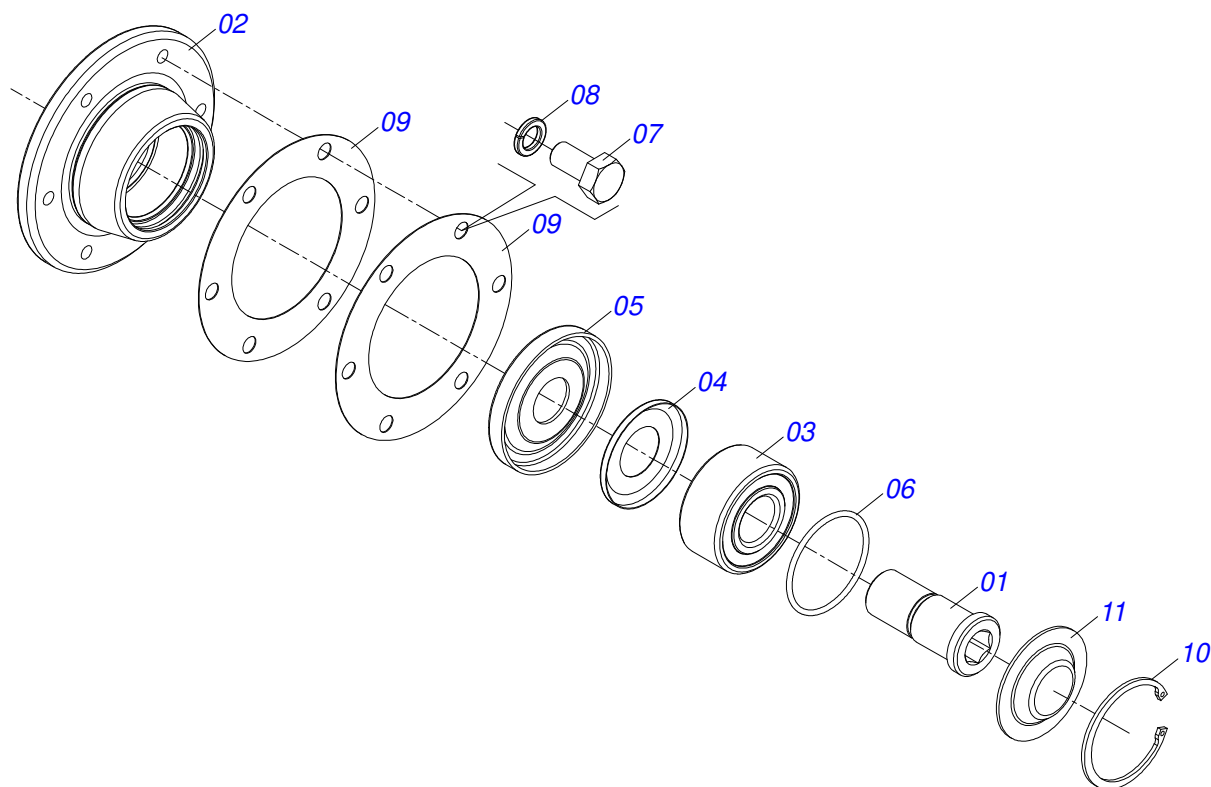

Item	Code	Description	See page	QT
01	0571011151	LEFT DOUBLE DISC HUB		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

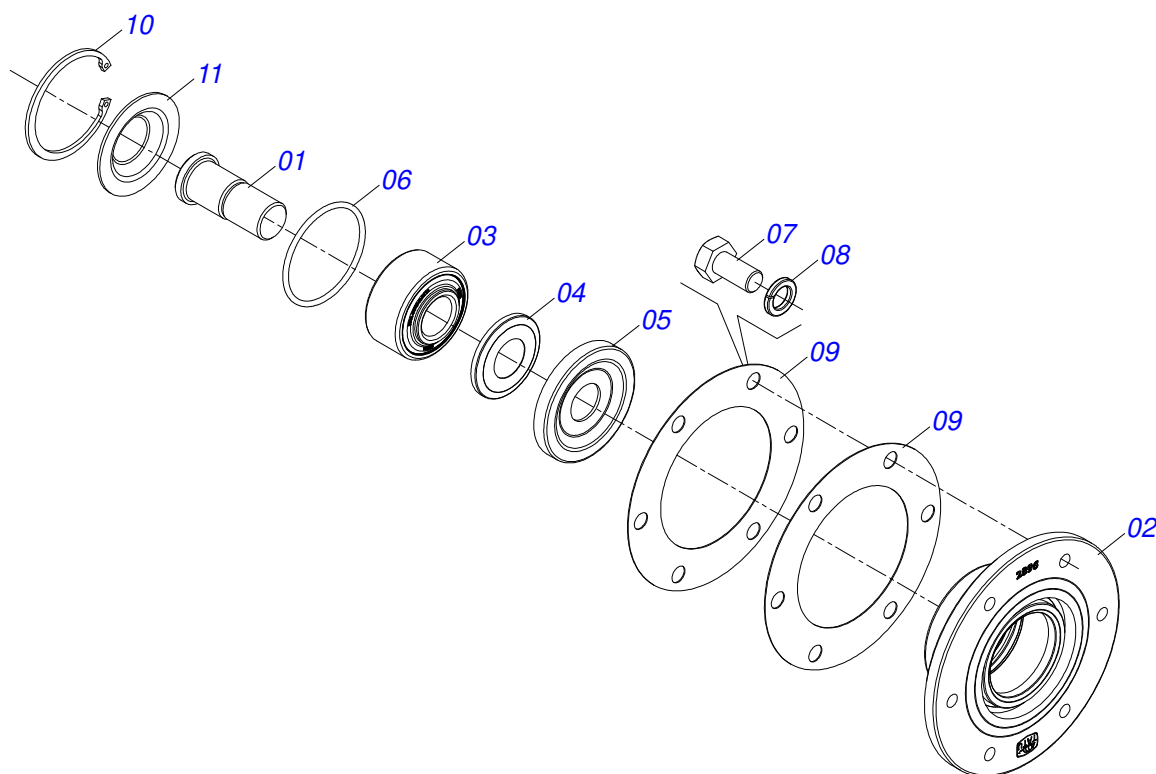


Item	Code	Description	See page	QT
01	0571011150	RIGHT DOUB DISC - HUB		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

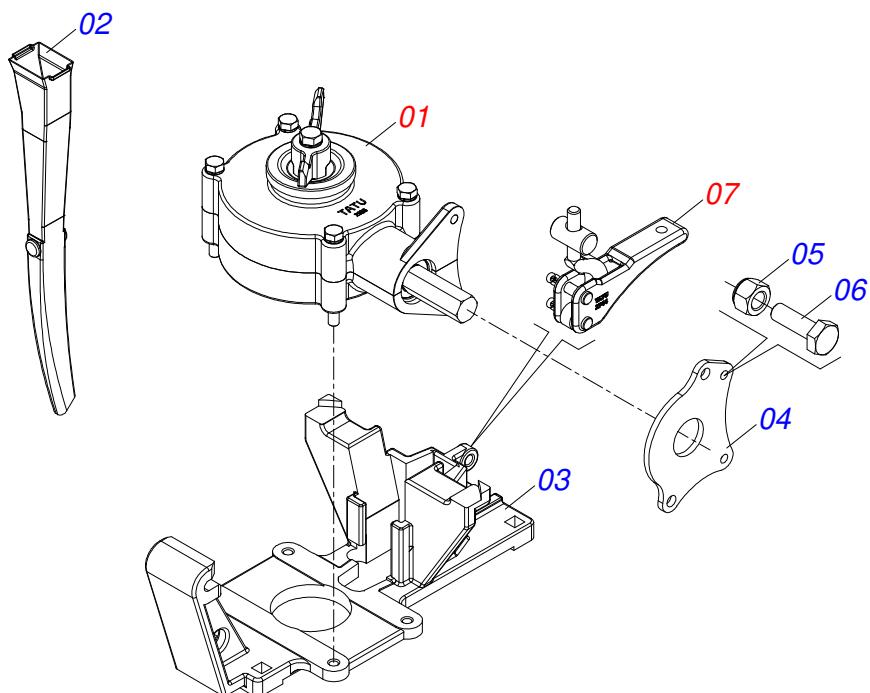


Item	Code	Description	See page	QT
01	0521056639	SEED ROW TRANSMISSION	80	01
02	0503035402	HIGHER LINE HIGH SEED		01
03	0502012921	BASE FIXING SYSTEM		01
04	0591014600	ENCAPSULATED CURRENT FIXER		01
05	0503014876	NUT PARLOCK 1/4"		02
06	0503010461	1/4" X 1" BOLT		02
07	0511052024	FAST CLOSING SET	97	01

FENDER ASSY


0531050596

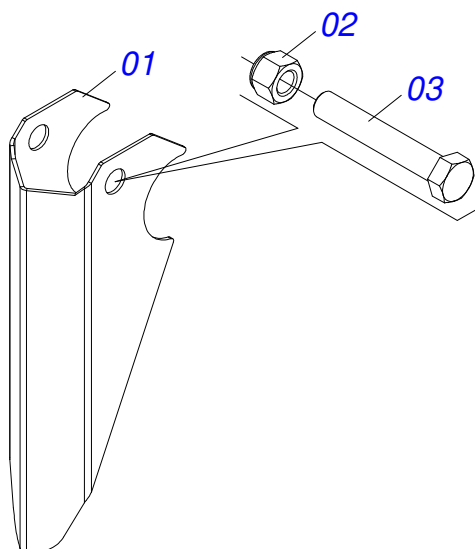


Item	Code	Description	See page	QT
01	0591016908	FENDER		01
02	0503010589	1/2" UNC SELF ADJUSTING NUT		01
03	0503010479	BOLT		01

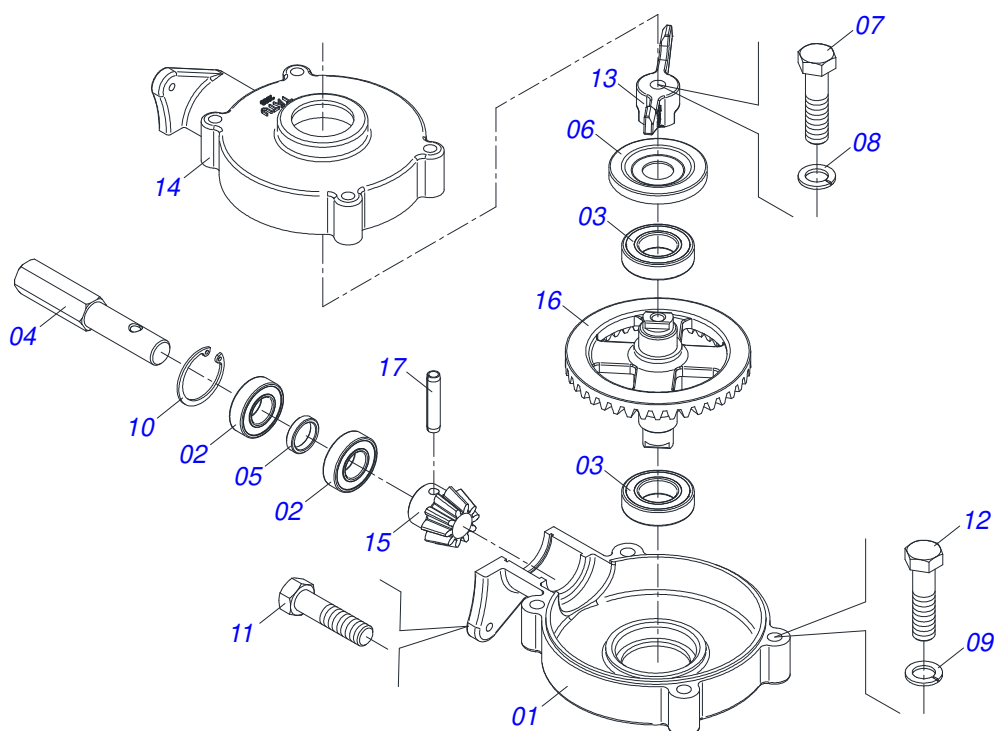


Item	Code	Description	See page	QT
01	0502012932	MINOR SIDE	01	
02	0503017046	BEARING	02	
03	0503011410	ROLLER BEARING	02	
04	0591011321	AXLE GEAR	01	
05	0591011322	SPACER	01	
06	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50	01	
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
08	0503010025	3/8" SPRING WASHER	01	
09	0503010179	LOCK WASHER	04	
10	0503011945	503050 CLAMPING RING (FOR AXLE)	01	
11	0503010420	BOLT	02	
12	0503011053	5/16" X 3" C S 6.5 ZN BOLT	04	
13	0502012919	GRAGGER	01	
14	0502012933	LARGER SIDE	01	
15	0502012930	CONICAL GEAR	01	
16	0502012931	CONICAL GEAR	01	
17	0503010585	0,24" X 1.18" SPRING PIN	01	

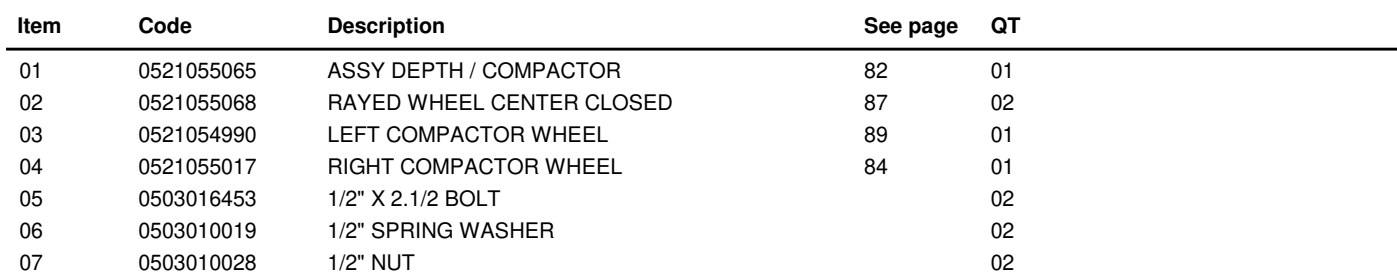


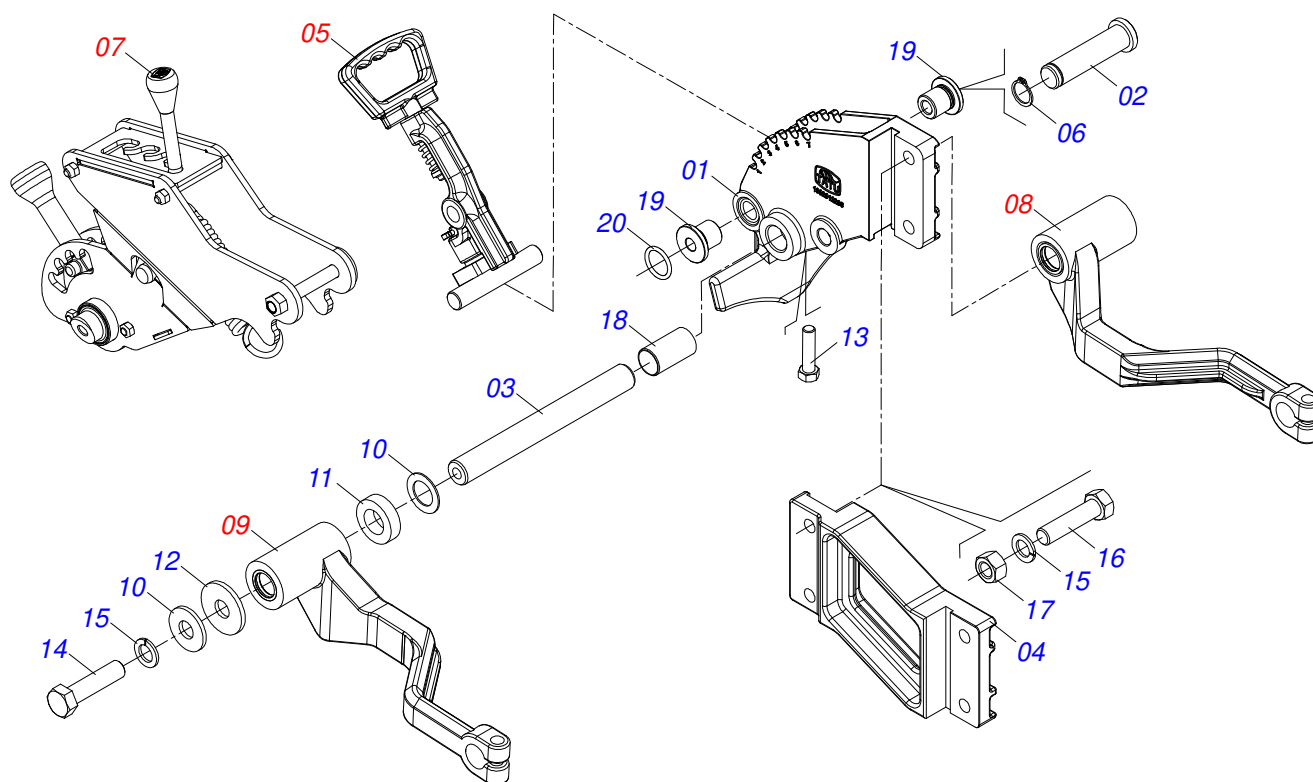


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0571013054	DEPTH CONTROL WHEEL AXLE		01
04	0502012663	EXTENSION		01
05	0501056769	DEPTH WHEELS REGULATOR ASSY	86	01
06	0503019398	AXLE RETAINER RING		01
07	0521055033	SEMI-ASSEMBLED COMPACTOR BODY	92	01
08	0521055054	LEFT ARM WITH SLEEVE	90	01
09	0521055066	RIGHT ARM WITH GLOVE	91	01
10	0511015346	FLAT WASHER		04
11	0571015974	WASHER		02
12	0511017302	FLAT WASHER		02
13	0503010256	3/8" X 3/4" BOLT		01
14	0503010311	1/2" X 1-1/4" BOLT		02
15	0503010019	1/2" SPRING WASHER		04
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2" NUT		02
18	0503019275	SLEEVE LUBRICATION SYSTEM		01
19	0581019473	ARTICULATED SLEEVE		02
20	0503010045	O'RING		02

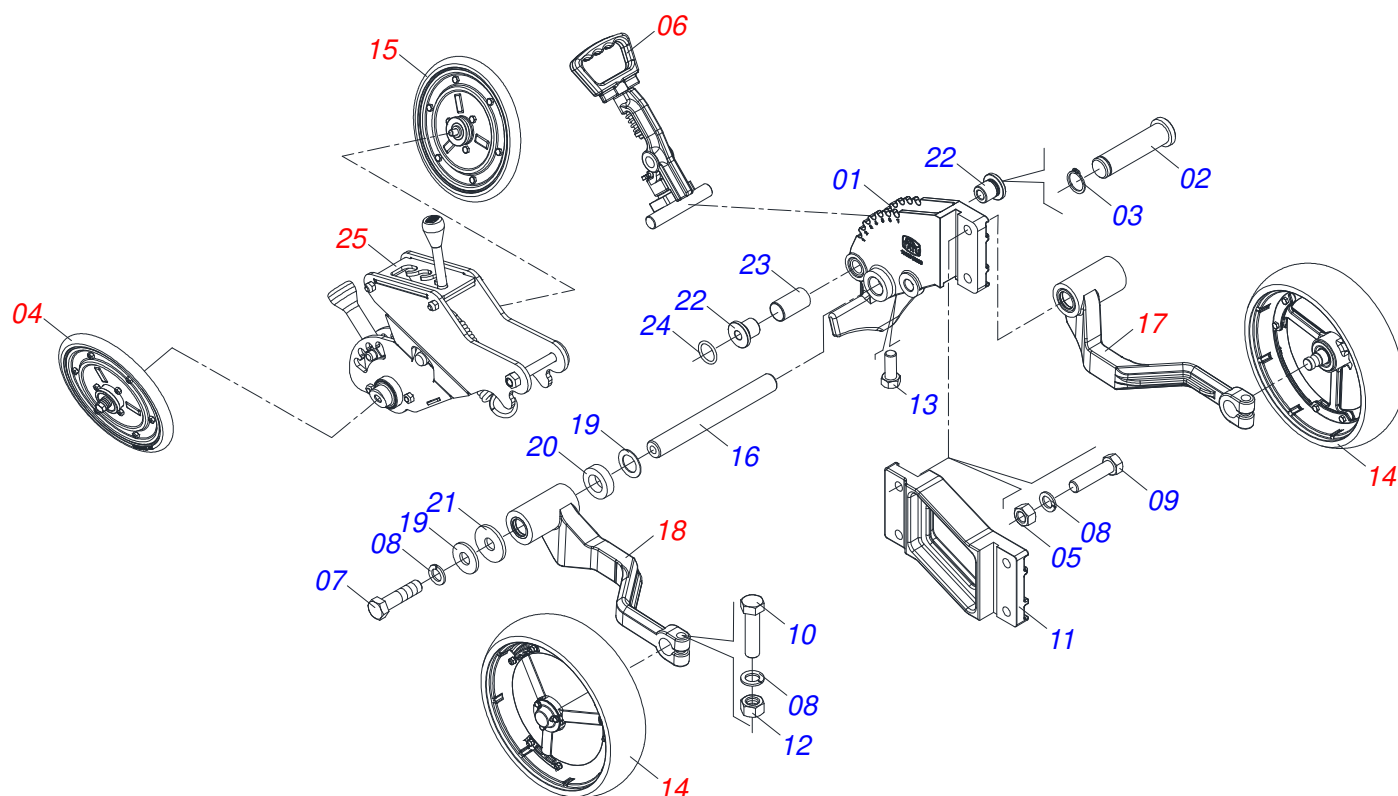


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0503010581	RING		01
04	0521055017	RIGHT COMPACTOR WHEEL	84	01
05	0503010060	1/2" NUT		02
06	0501056769	DEPTH WHEELS REGULATOR ASSY	86	01
07	0503010311	1/2" X 1-1/4" BOLT		02
08	0503010019	1/2" SPRING WASHER		06
09	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
10	0503016453	1/2" X 2.1/2 BOLT		02
11	0502012884	EXTENSION		01
12	0503010028	1/2" NUT		02
13	0503010256	3/8" X 3/4" BOLT		01
14	0521055068	RAYED WHEEL CENTER CLOSED	87	02
15	0521054990	LEFT COMPACTOR WHEEL	89	01
16	0571013054	DEPTH CONTROL WHEEL AXLE		01
17	0521055054	LEFT ARM WITH SLEEVE	90	01
18	0521055066	RIGHT ARM WITH GLOVE	91	01
19	0511015346	FLAT WASHER		04
20	0571015974	WASHER		02
21	0511017302	FLAT WASHER		02
22	0503019275	SLEEVE LUBRICATION SYSTEM		01
23	0581019473	ARTICULATED SLEEVE		02
24	0503010045	O'RING		02
25	0521055033	SEMI-ASSEMBLED COMPACTOR BODY	92	01

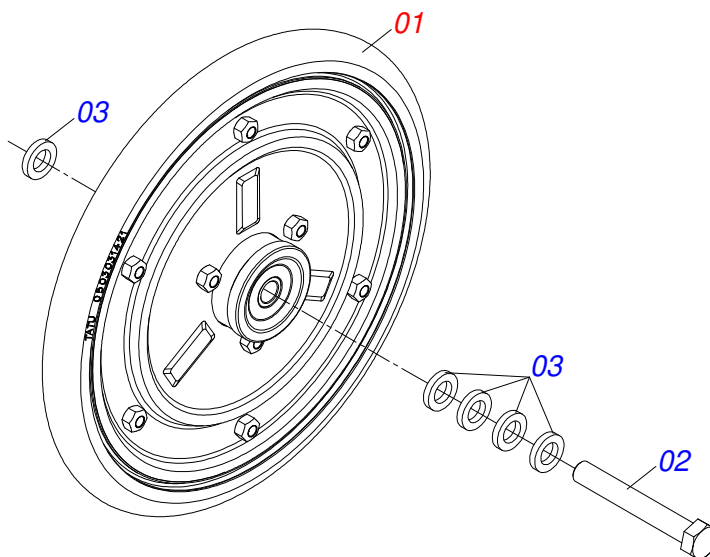


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	85	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

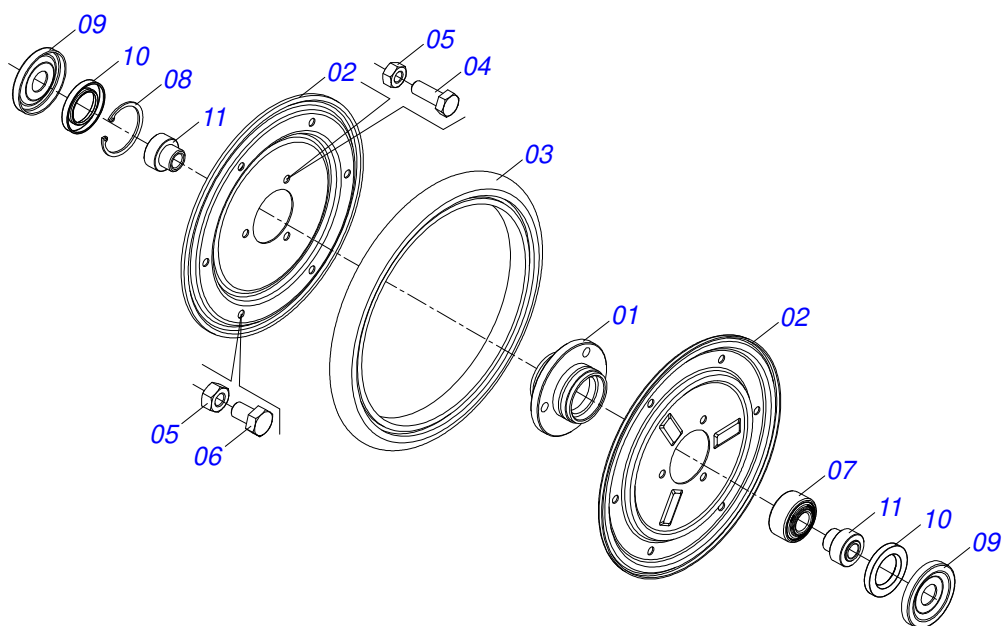


Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

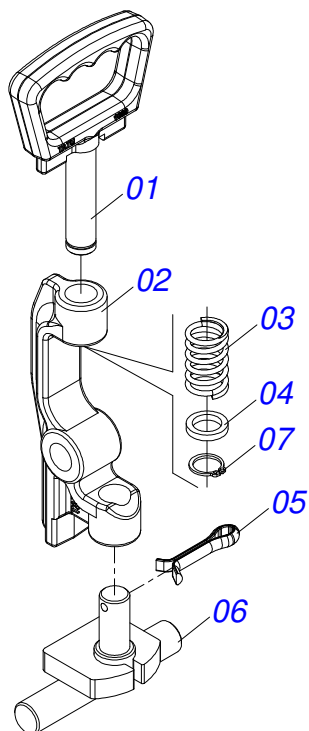

Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

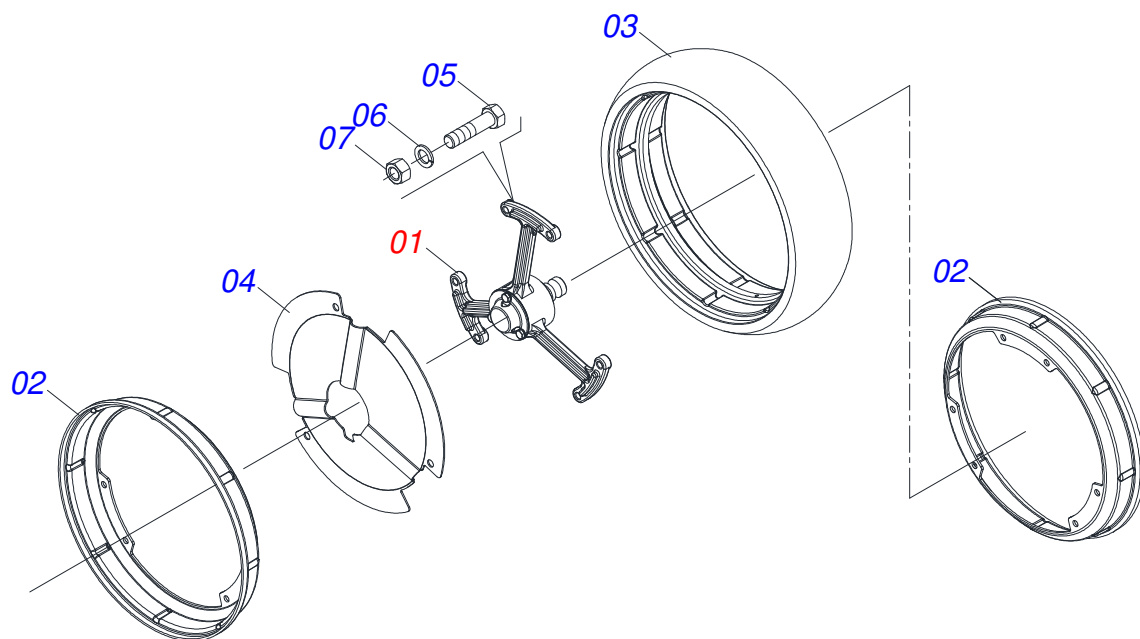


Item	Code	Description	See page	QT
01	0521055055	BOX WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	88	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	NUT		06
06	0503010179	LOCK WASHER		06
07	0503010337	5/16" NUT		06

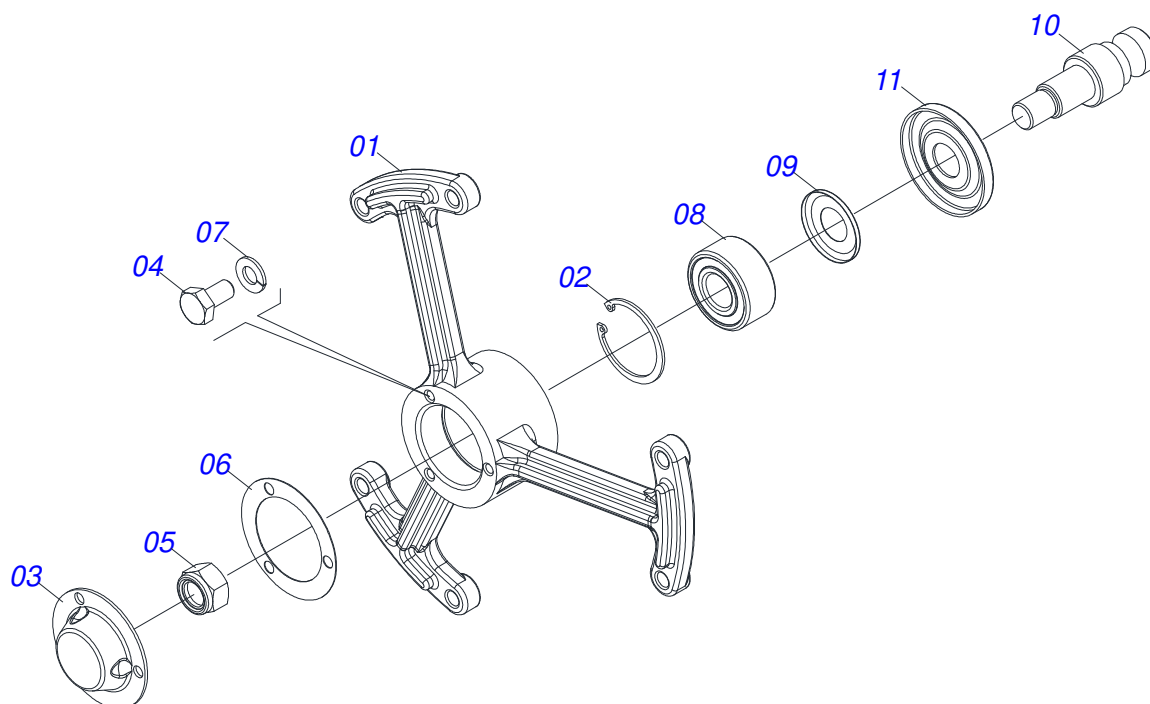

Item	Code	Description	See page	QT
01	0581019522	CASE WHEEL DEPTH WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010878	5/8" SELF ALIGNING NUT		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0503010143	1/4" SPRING WASHER		03
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019529	DEPTH REGULATOR SHAFT		01
11	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01

LEFT COMPACTOR WHEEL


0521054990

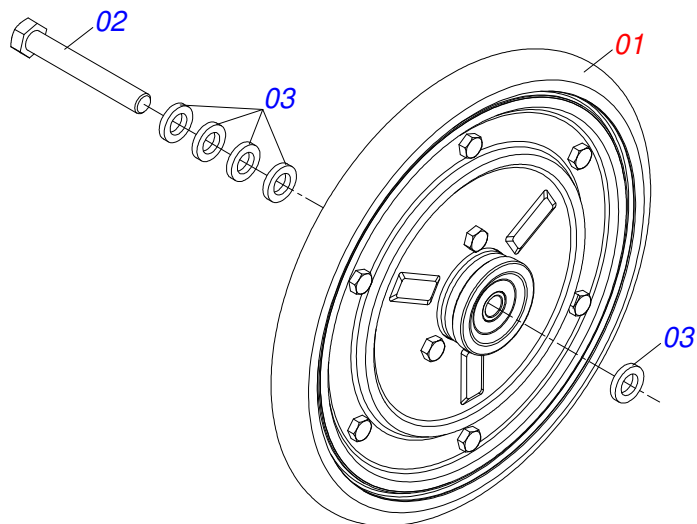


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	85	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

LEFT ARM WITH SLEEVE


0521055054

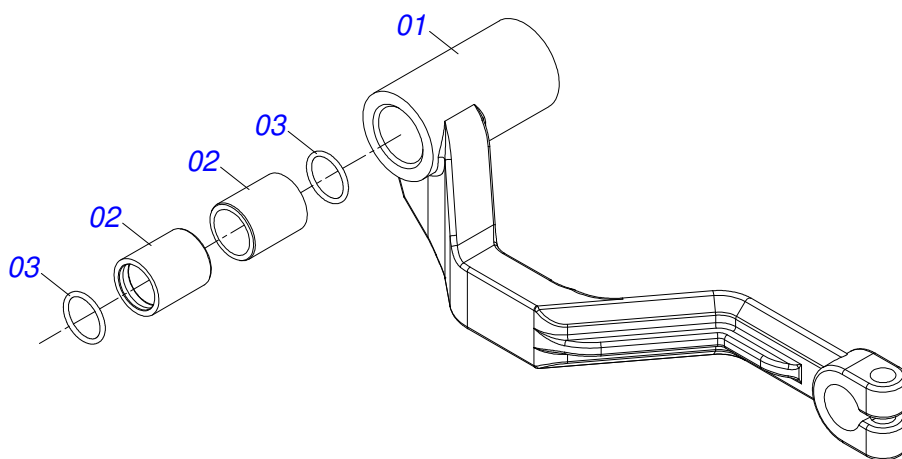


Item	Code	Description	See page	QT
01	0581019523	LEFT ARM WHEEL DEPTH		01
02	0581019514	LUBRICANT SLEEVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

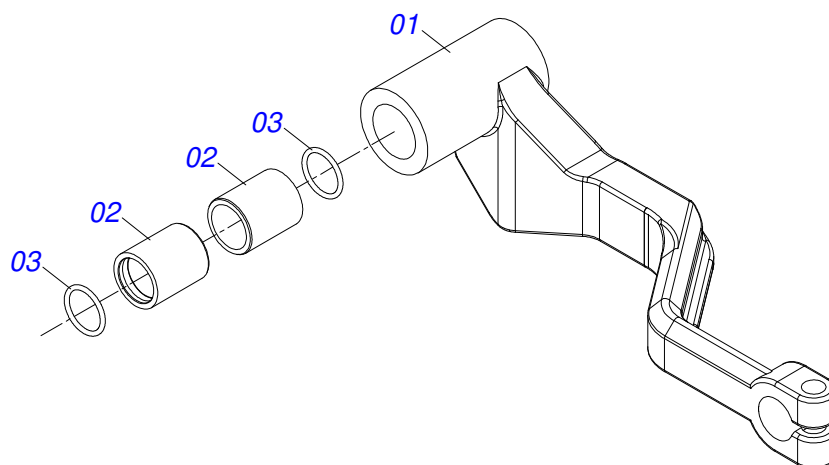

Item	Code	Description	See page	QT
01	0581019524	RIGHT ARM DEPTH		01
02	0581019514	LUBRICANT SLEEVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

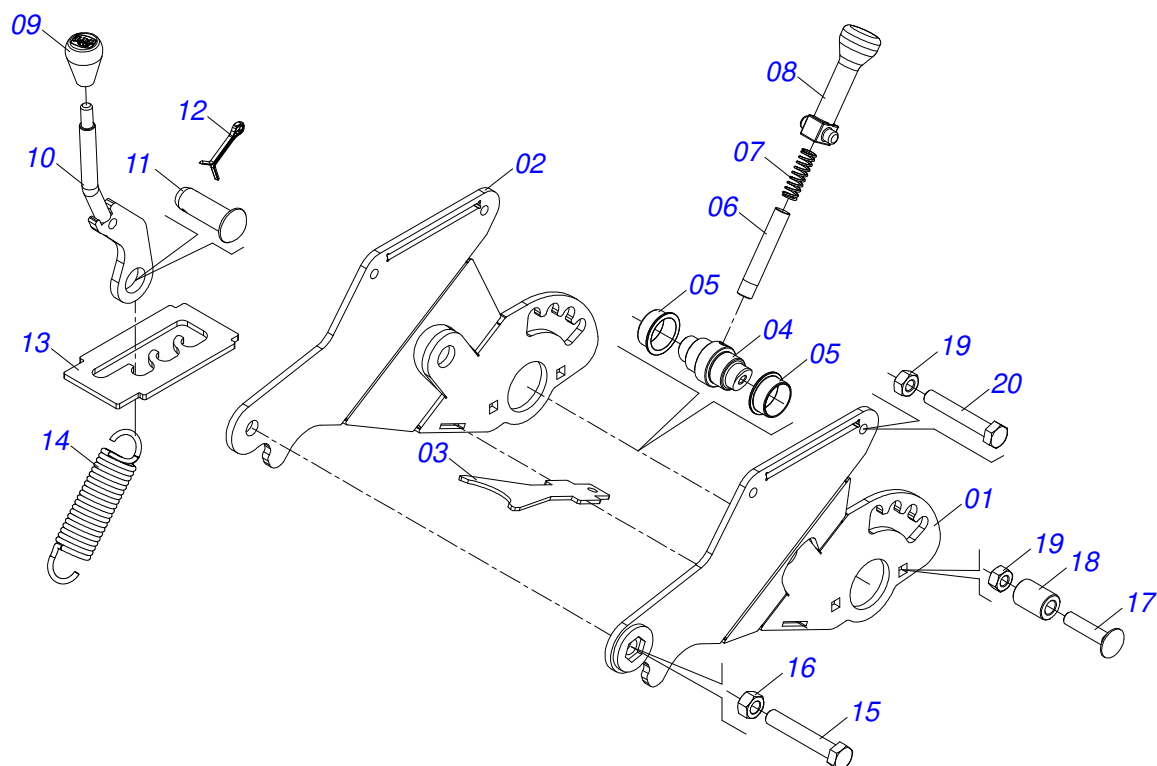


Item	Code	Description	See page	QT
01	0521069585	LEFT SIDE		01
02	0581019475	RIGHT SIDE BODY		01
03	0581019511	COVER		01
04	0581019510	AXIS		01
05	0503019351	LUBRICANT SLEEVE		02
06	0581019520	AXIS		01
07	0503030190	0.5" X 1.6" X 0.05" SPRING		01
08	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
09	0503030878	LEVER CRANK		01
10	0521068661	LEVER		01
11	0571012442	COUPLING SHAFT		01
12	0503010257	1/8" X 1" COTTERPIN		01
13	0581019512	PLATE TOP		01
14	0503034817	SPRING		01
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503011336	1/2" HEX SELF ADJUSTING NUT		01
17	0501011753	5/16" X 1-3/4" BOLT		02
18	0581015855	SLEEVE		02
19	0503013816	5/16" LOCKNUT		04
20	0503010848	5/16" X 3.1/2" BOLT		02

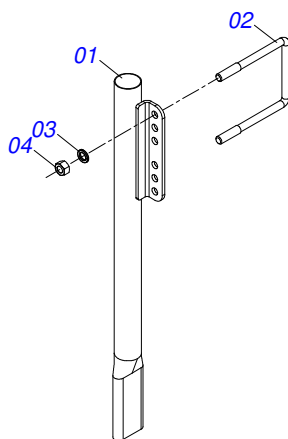

Item	Code	Description	See page	QT
01	0521069328	RIGHT FERTILIZER CONDUCTOR		01
02	0521014021	1/2" X 4.5" X 5.4" FASTENER		01
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2" NUT		02

ASSY SHORT FERTILIZER CONDUCTOR


0521056855

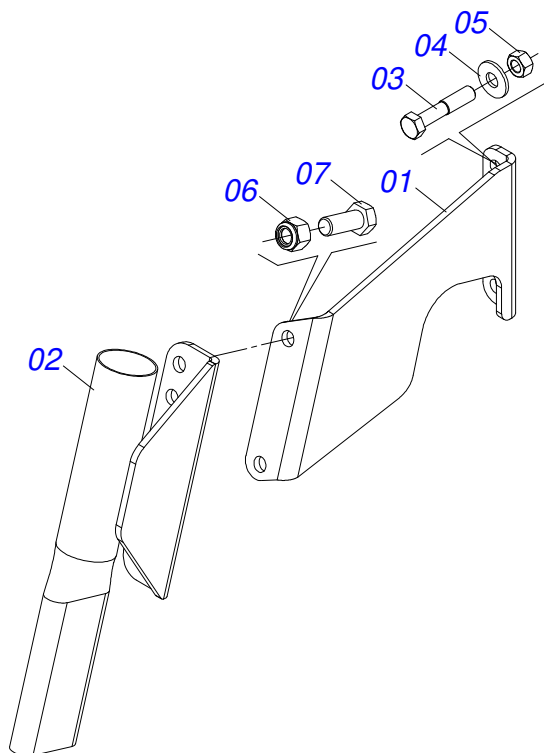


Item	Code	Description	See page	QT
01	0591011713	SHORT SUPPORT BODY CONDUCTOR FERTILIZER		01
02	0531060359	FERTILIZER CONDUCTOR		01
03	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
04	0511017302	FLAT WASHER		02
05	0503011336	1/2" HEX SELF ADJUSTING NUT		02
06	0503010589	1/2" UNC SELF ADJUSTING NUT		02
07	0503014007	1/2" X 1-1/4" BOLT		02

ASSY LONG FERTILIZER CONDUCTOR


0521056854

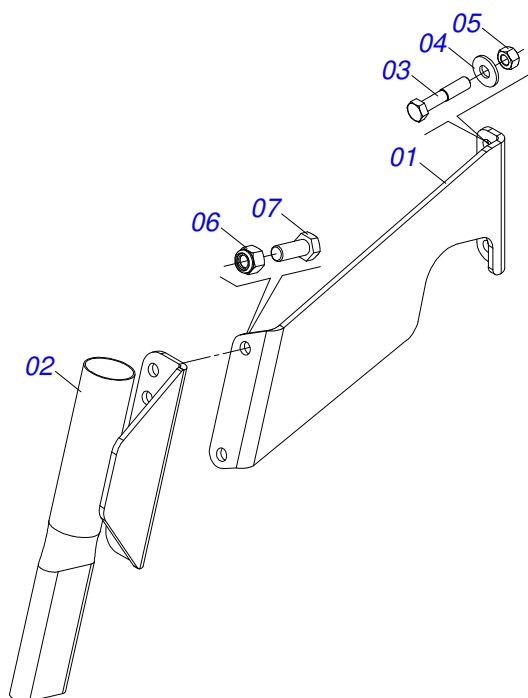


Item	Code	Description	See page	QT
01	0591011676	BODY LONG CONDUCTOR FERTILIZER		01
02	0531060359	FERTILIZER CONDUCTOR		01
03	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
04	0511017302	FLAT WASHER		02
05	0503011336	1/2" HEX SELF ADJUSTING NUT		02
06	0503010589	1/2" UNC SELF ADJUSTING NUT		02
07	0503014007	1/2" X 1-1/4" BOLT		02

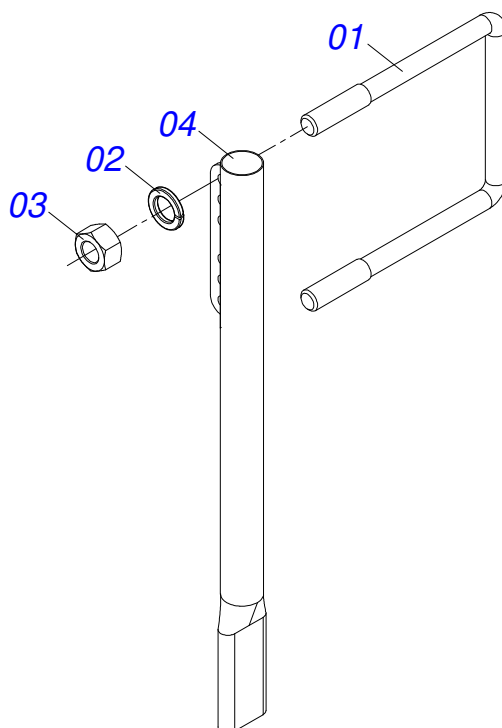


Item	Code	Description	See page	QT
01	0521014021	1/2" X 4.5" X 5.4" FASTENER		01
02	0503010019	1/2" SPRING WASHER		02
03	0503010060	1/2" NUT		02
04	0521069319	LEFT FERTILIZER CONDUCTOR		01

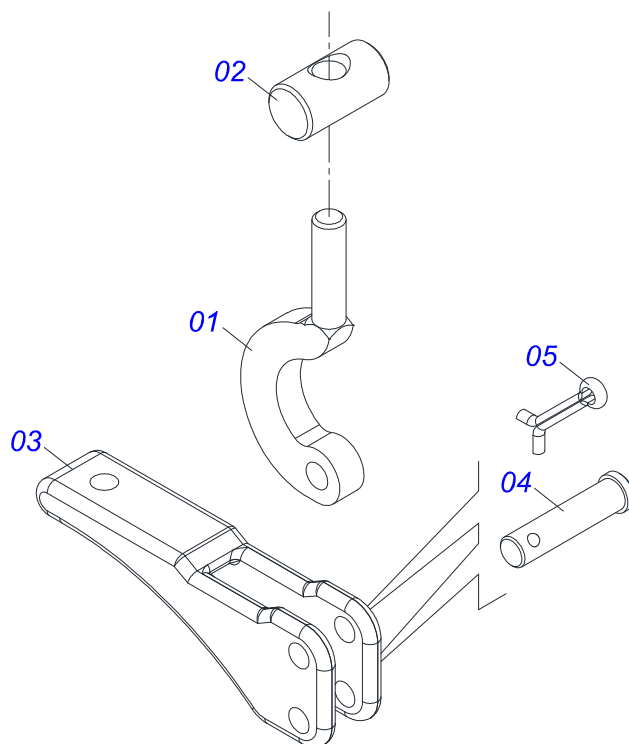


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

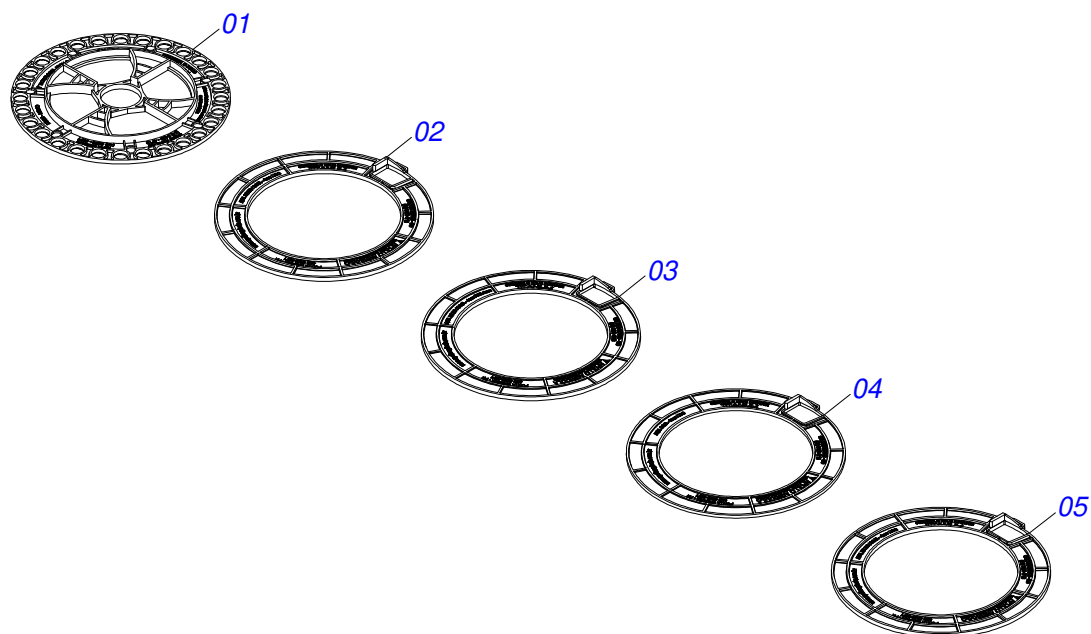


Item	Code	Description	See page	QT
01	0503016204	CORN DISK 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

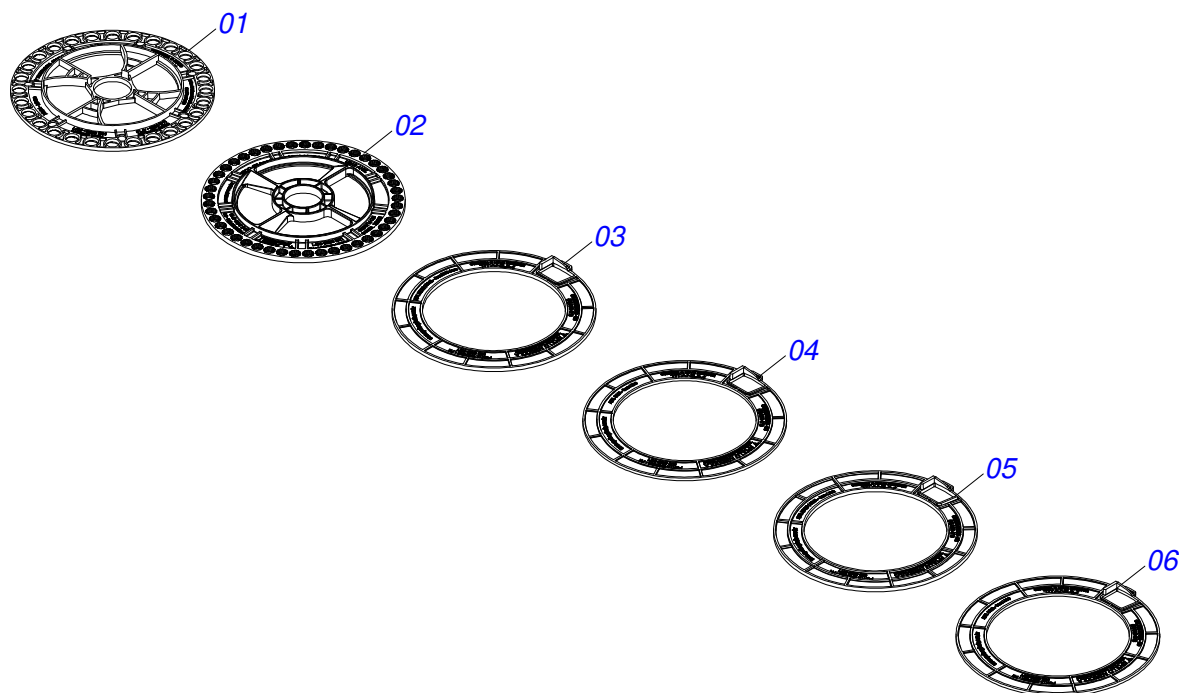


Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

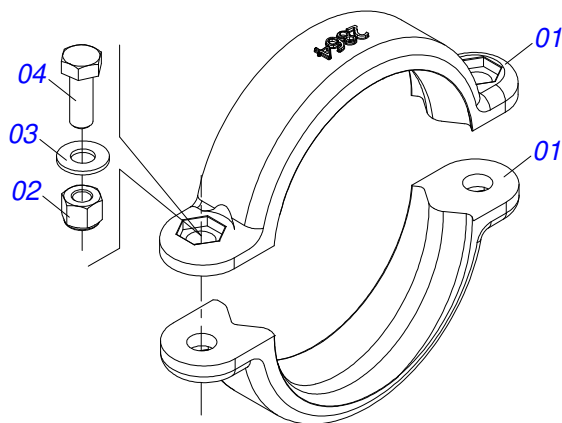


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER		02
04	0503010365	NUT		02

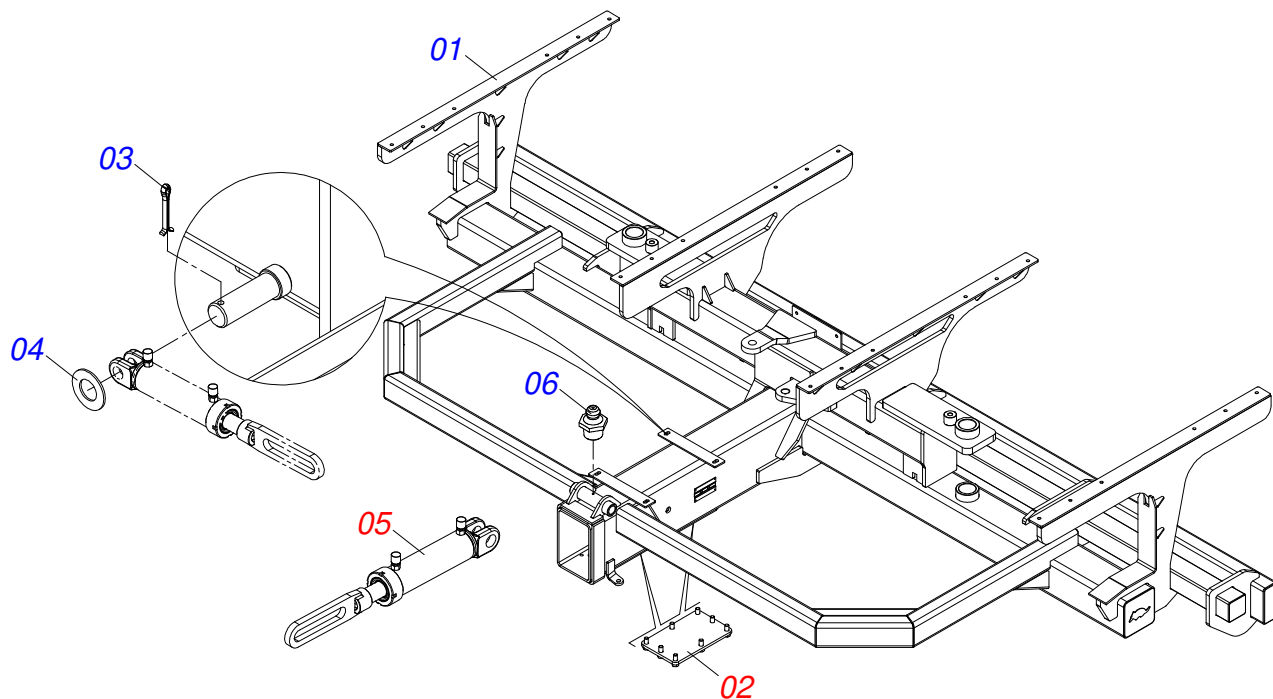


Item	Code	Description	See page	QT
01	0531061276	CHASSIS CENTER LOWER FERTILIZER		01
02	0521050019	TIGHTENING PLATE WITH FIXING INTERNAL	102	02
03	0503010523	1/4" X 2" COTTERPIN		01
04	0521011132	FLAT WASHER		01
05	0521052189	38,10 X 63,50 X 386 X 148 HYDRAULIC CYLINDER	103	01
06	0503010002	1800 GREASE FITTING		01

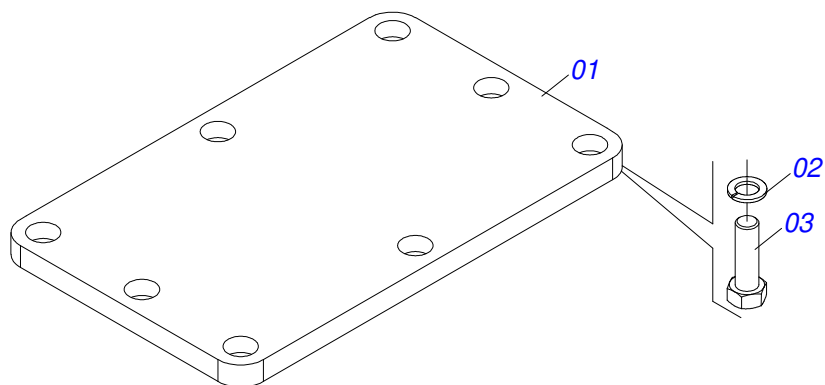


Item	Code	Description	See page	QT
01	0571015217	TUBE ADJUSTMENT PLATE		01
02	0503010027	5/8" SPRING WASHER		08
03	0503011267	BOLT 5/8 UNC X 1.1/2 C S G.5 ZN		08

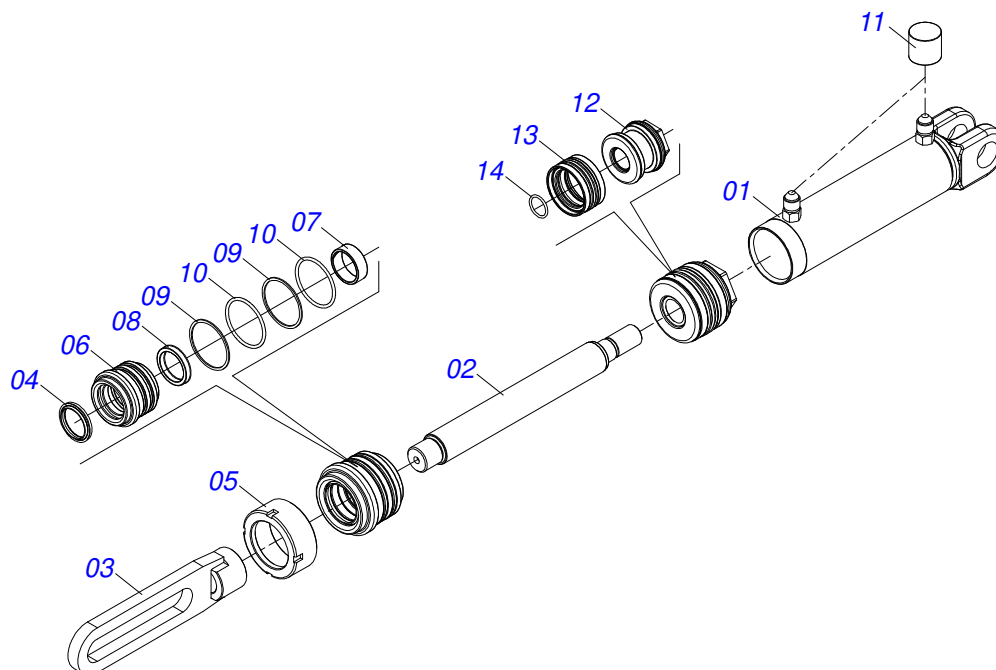


Item	Code	Description	See page	QT
01	0521068383	CYLINDER CASE		01
02	0581010670	CORPO HASTE 38,10 X 345		01
03	0511070058	GUIDE HIDRAULIC		01
04	0503010163	D-1500 SCRAPER RING		01
05	0502010471	63,50 MOBILE CAP		01
06	0581010668	RING SUPPORT		01
07	0503018004	RING		01
08	0503018003	GASKET		01
09	0503018163	BACK-UP RING		02
10	0503018162	O'RING		02
11	0503030385	CYLINDER PLUG N-002		02
12	0502012837	PISTON		01
13	0503018005	RING		01
14	0503011109	2-119 N 3006-9B O'RING		01
15	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

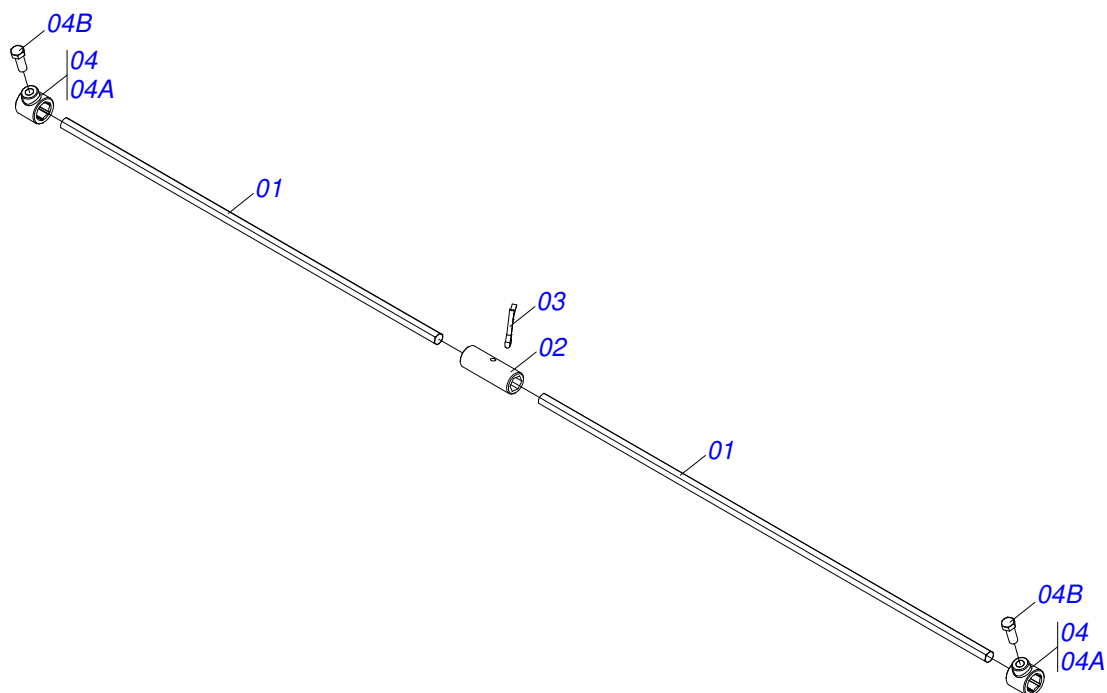

Item	Code	Description	See page	QT
01	0571013341	HEX AXLE		02
02	0561015837	SLEEVE 31,75		01
03	0503010523	1/4" X 2" COTTERPIN		01
04	0511054314	TRANSMISSION AXLE LOCK SLEEVE		04
04A	0502012699	TRANSMISSION HUB LOCK SLEEVE		01
04B	0503010256	3/8" X 3/4" BOLT		01

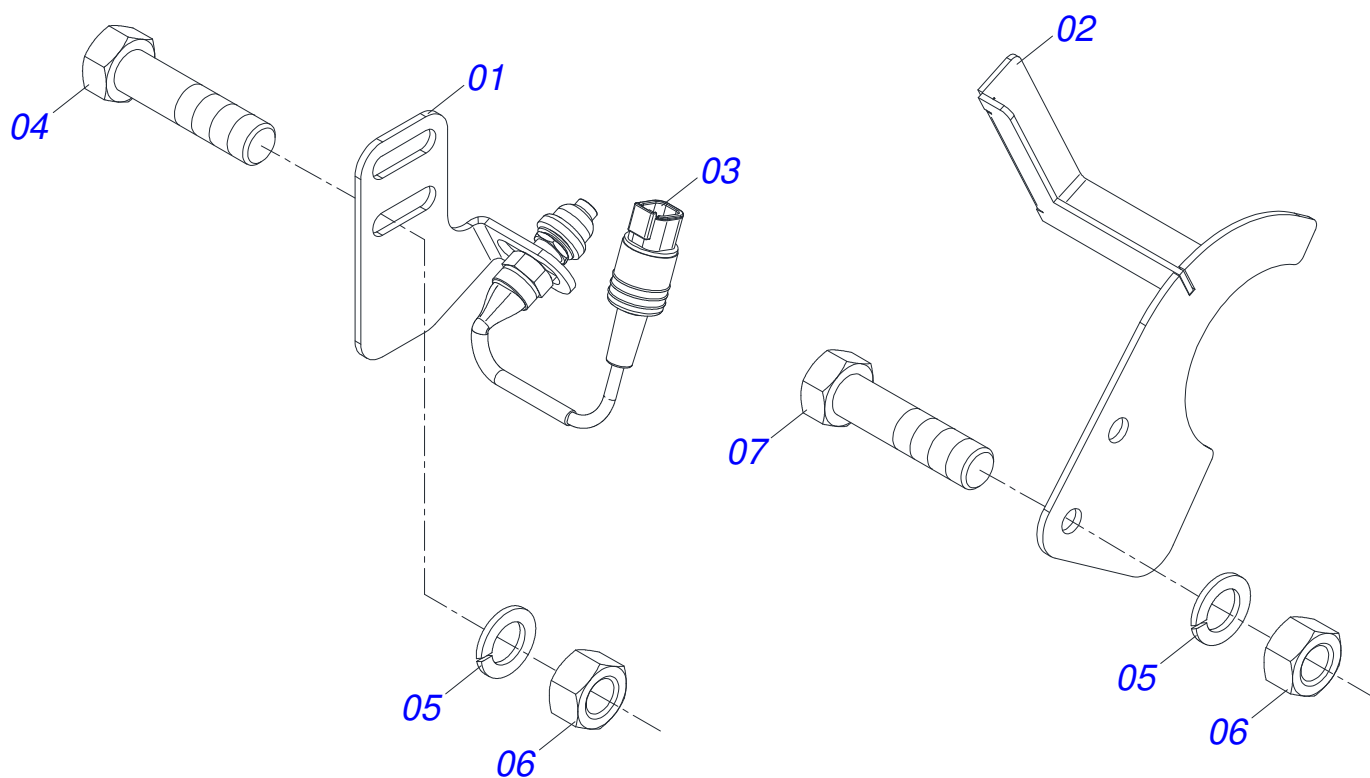


Item	Code	Description	See page	QT
01	0581015747	SUPPORT SENSOR		01
02	0521068295	RATCHET DRIVING		01
03	0503017984	LIFT SENSOR		01
04	0501010063	1/2" X 1-1/2" BOLT		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2" NUT		04
07	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		02

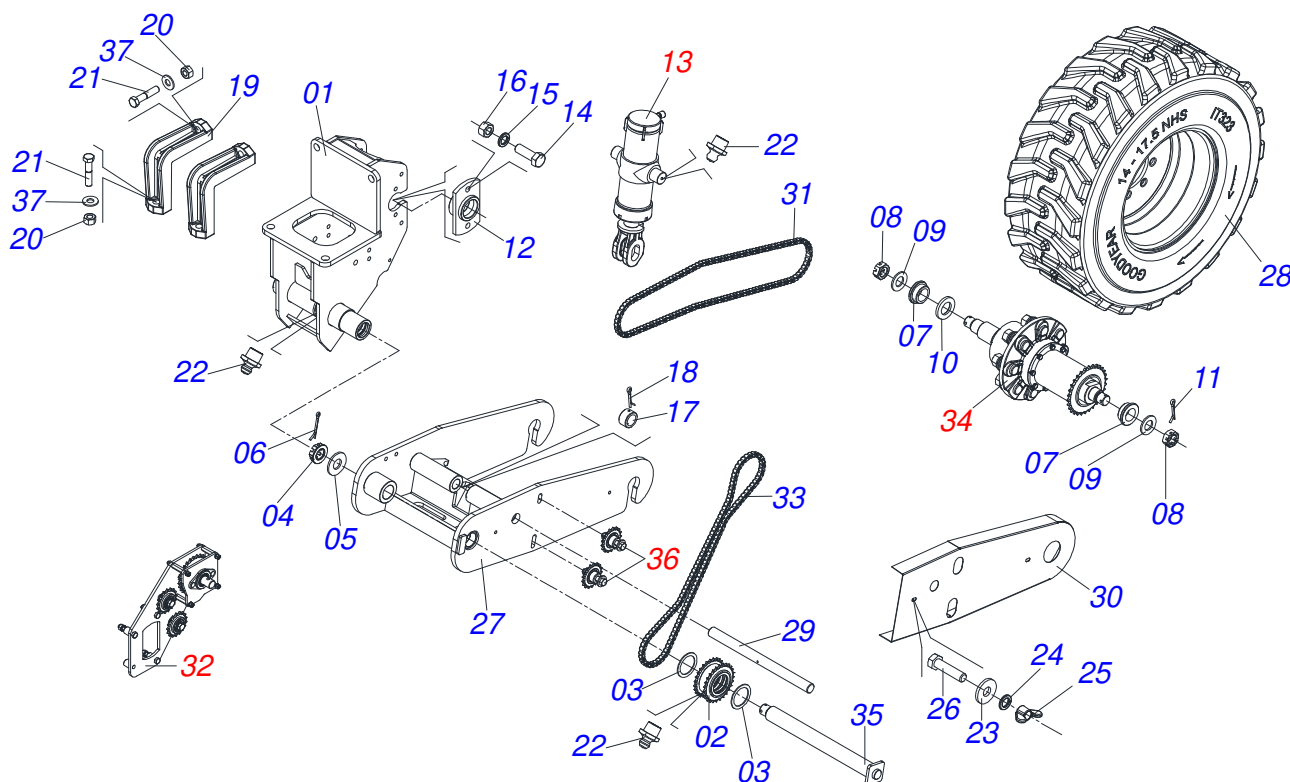


Item	Code	Description	See page	QT
01	0521064543	WHEEL SUPPORT		01
02	0511068422	WHEEL GEAR DOBLE		01
03	0551018571	FLAT WASHER		02
04	0501010630	1.1/2" CASTLE NUT		01
05	0561019929	FLAT WASHER		01
06	0503011345	1/4" X 3-1/2" COTTERPIN		01
07	0551014511	CARRYING WEELS AXLE SLEEVE GUIDES		02
08	0503011052	1.1/4" X 0.77" CASTLE NUT		02
09	0501017779	32 X 60 X 4.75 FLAT WASHER		02
10	0551014508	FLAT WASHER		01
11	0503010010	1/4" X 2.1/2" COTTERPIN		02
12	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
13	0511058240	HYDRAULIC CYLINDER 50,80 X 101,60 X 483 X 276	108	01
14	0503010920	1/2" X 1.1/2" BOLT		04
15	0503010019	1/2" SPRING WASHER		04
16	0503010060	1/2" NUT		04
17	0551014565	CILINDER FORK SLEEVE GUIDES		01
18	0503010067	3/16" X 2.1/2" COTTER PIN		01
19	0502012731	WHEEL HOLDER		02
20	0503010014	3/4" NUT		04
21	0501010195	3/4" X 3-1/2" BOLT		04
22	0503010002	1800 GREASE FITTING		03
23	0501013518	FLAT WASHER		02
24	0503010025	3/8" SPRING WASHER		02
25	0503010209	3/8" UNC BUTTERFLY NUT		02
26	0503010849	3/8" X 1-1/2" BOLT		02
27	0521064550	CARRYING-WHEELS FORK		01
28	0503061624	WHEEL AND TIRE ASSY 13.0/55-16/12LO		01
29	0571015194	Ø34,93 X 490 USAP AXLE		01
30	0561019941	RIGHT PROTECTIVE CAP WHEELS		01
31	0503014857	50-1 X CHAIN X 122 LINK + REDUCION		01


Item	Code	Description	See page	QT
32	0511054499	TRANSMISSION OF LARGER CENTRAL EXCHANGE	109	01
33	0503014086	50-1 X 123 CHAIN LINK + MENDING		01
34	0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR	23	01
35	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
36	0511054464	WHEEL FORK TENSIONER	25	02
37	0501010322	FLAT WASHER		04

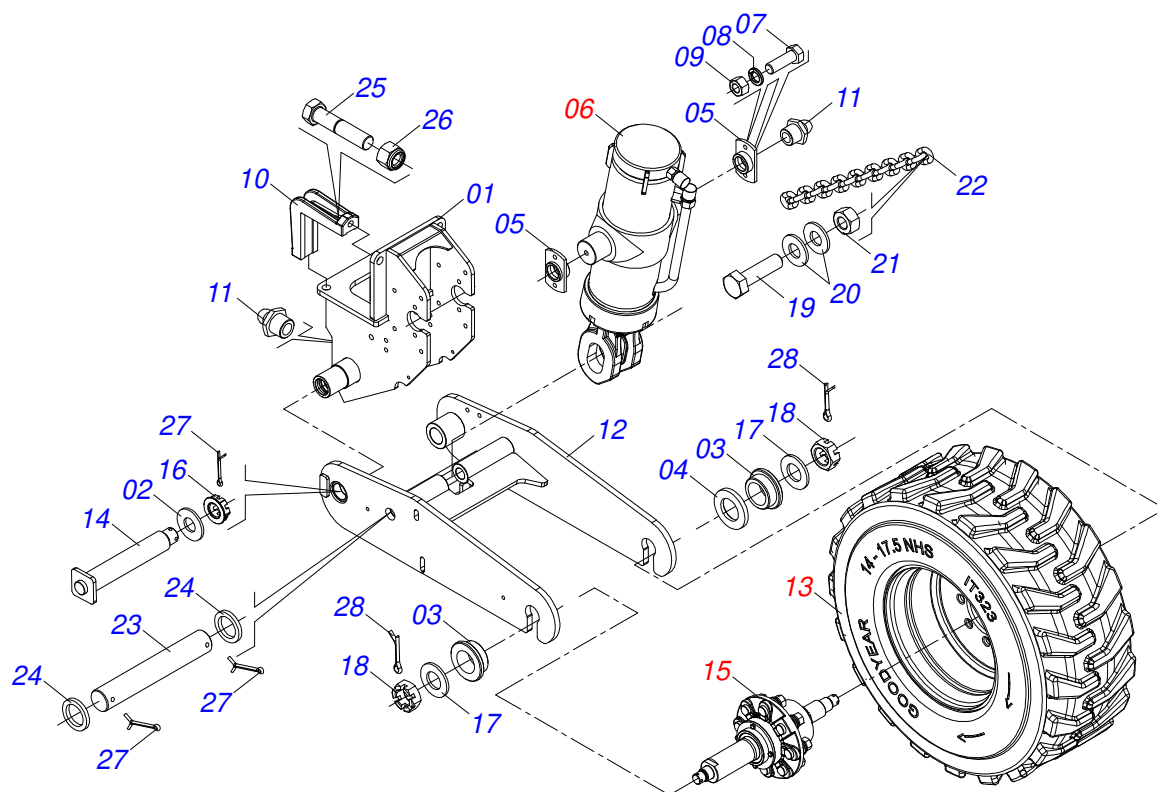


Item	Code	Description	See page	QT
01	0521064543	WHEEL SUPPORT		01
02	0561019929	FLAT WASHER		01
03	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
04	0551014508	FLAT WASHER		01
05	0511061810	HYDRAULIC CYLINDER FIXING FLANGE		02
06	0511058240	HYDRAULIC CYLINDER 50,80 X 101,60 X 483 X 276	108	01
07	0503010920	1/2" X 1.1/2" BOLT		04
08	0503010019	1/2" SPRING WASHER		04
09	0503010060	1/2" NUT		04
10	0502012731	WHEEL HOLDER		02
11	0503010002	1800 GREASE FITTING		03
12	0521064550	CARRYING-WHEELS FORK		01
13	0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	22	01
14	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
15	0511054495	WHEEL WITHOUT TIRE WITHOUT TRANSMISSION	111	01
16	0501010630	1.1/2" CASTLE NUT		01
17	0501017779	32 X 60 X 4.75 FLAT WASHER		02
18	0503011052	1.1/4" X 0.77" CASTLE NUT		02
19	0503010882	BOLT		01
20	0501010694	FLAT WASHER		02
21	0503010337	5/16" NUT		01
22	0503033335	CURRENT 6 X 21 ELOS		01
23	0581017245	AXLE BODY		01
24	0531012874	FLAT WASHER		02
25	0503012334	3/4" UNC X 3.1/2" BOLT		04
26	0503011075	3/4" UNC NUT		04
27	0503010523	1/4" X 2" COTTERPIN		03
28	0503010571	1/4" X 1.1/2 COTTERPIN		02

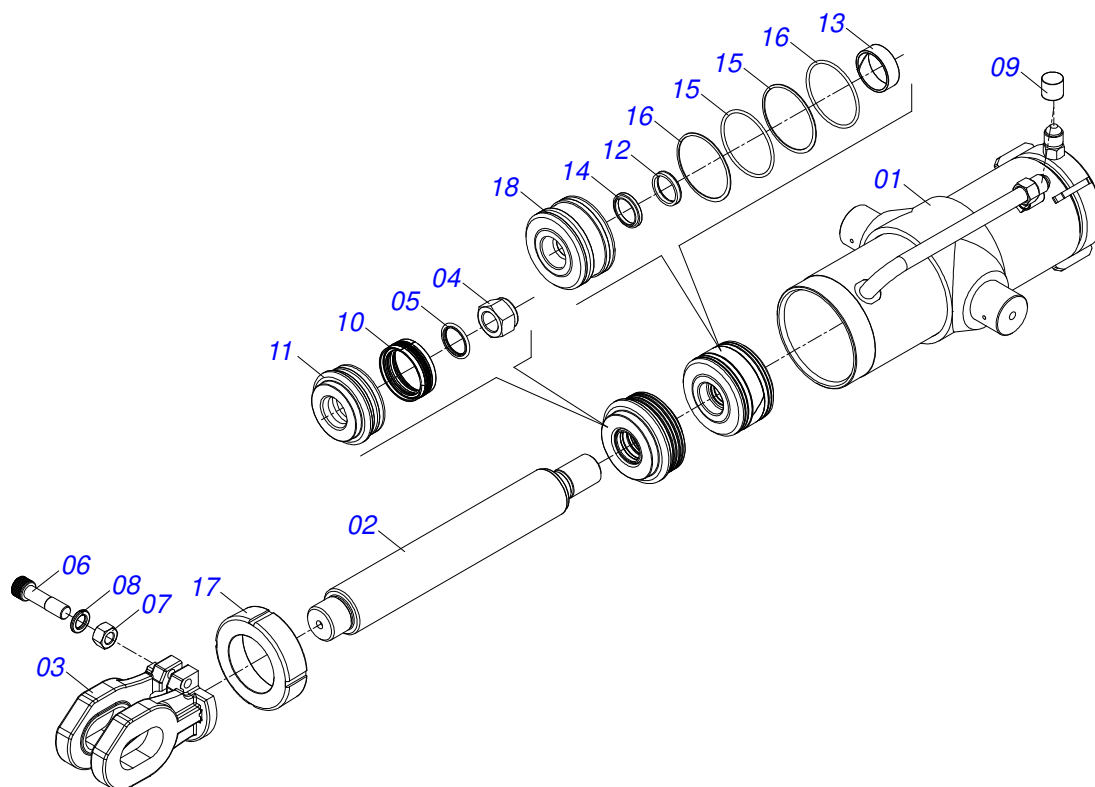


Item	Code	Description	See page	QT
01	0521066557	CYLINDER CASE 101,60 X 352		01
02	0581010680	TURNBUCKLE 50,80 X 386		01
03	0571015629	CILINDER SPINDLE FORK		01
04	0503010817	1.1/4" SELF LOCKING NUT		01
05	0503010345	2-218 N 3006-9B O'RING		01
06	0503011094	3/8" X 2" BOLT		01
07	0503010026	3/8" NUT		01
08	0503010025	3/8" SPRING WASHER		01
09	0503030385	CYLINDER PLUG N-002		02
10	0503015633	SELEMASTER SEALING		01
11	0581010678	50,80 X 101 RING SUPPORT		01
12	0503015636	SCRAPER SEAL		01
13	0503018025	RING GUIDE		01
14	0503018026	1870-2000-375 B GASKET		01
15	0503010338	2-342 N 3006-9B O'RING		02
16	0503011061	8-342 BACK-UP RING		02
17	0502012822	101.60 END CAP		01
18	0502012820	50.80 X 101.60 PISTON		01
19	0511032511	ASSY CYLINDER REPAIR KIT 50.8X101.6		01

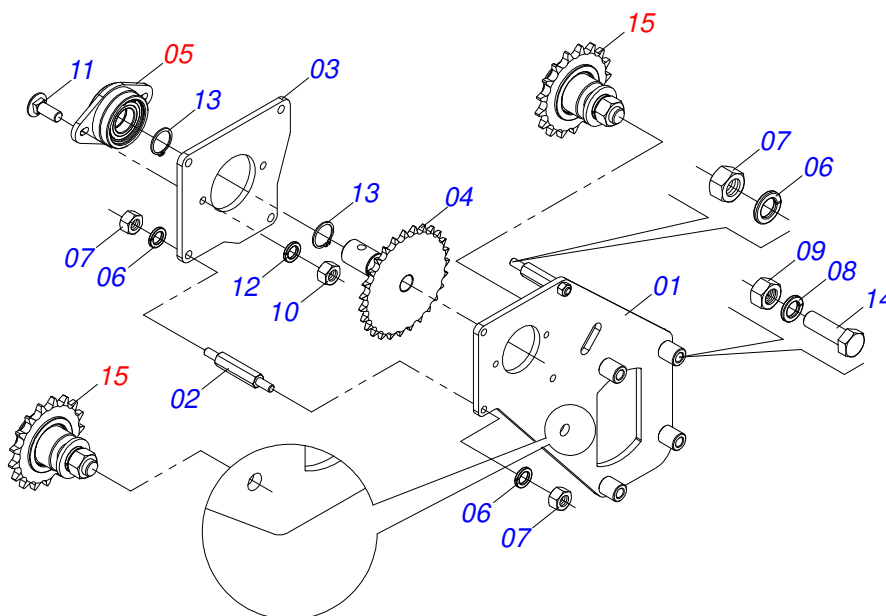

Item	Code	Description	See page	QT
01	0521064557	SUPPORT SET TRANSMISSION WHEEL SIDE		01
02	0571015141	FIXER CENTRAL TRANSMISSION		04
03	0571015151	SUPPORT BEARING		01
04	0521061795	27Z GEAR		01
05	0501053654	3/4 SEED TRANSMISSION DOUBLE BEARING	110	01
06	0503010025	3/8" SPRING WASHER		08
07	0503010026	3/8" NUT		08
08	0503010019	1/2" SPRING WASHER		03
09	0503010060	1/2" NUT		03
10	0503010337	5/16" NUT		02
11	0503011953	5/16" X 1" BOLT		02
12	0503010179	LOCK WASHER		02
13	0503010707	501030 CLAMPING RING (FOR AXLE)		02
14	0503010741	1/2" X 2-3/4" BOLT		03
15	0511054461	STRETCHER TOP TRANSMISSION SWIRLED	27	02

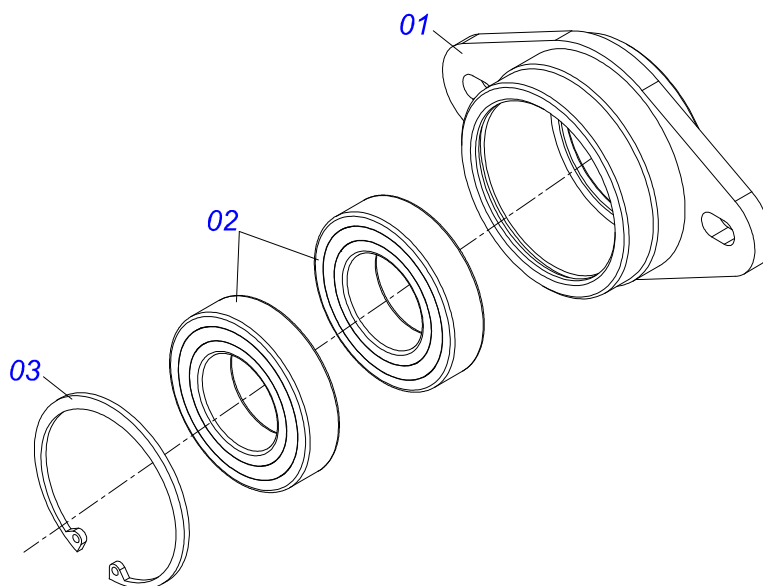


Item	Code	Description	See page	QT
01	0502012031	HOUSING BEARING		01
02	0503012861	6006 2RS BALL BEARING		02
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01

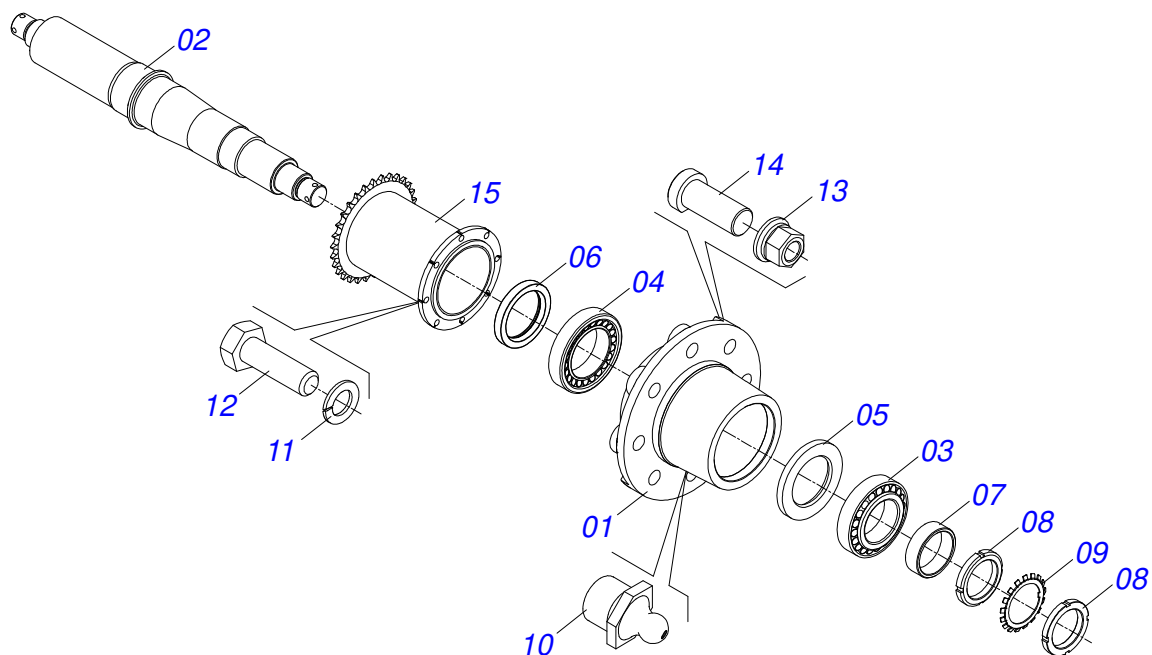

Item	Code	Description	See page	QT
01	0502040760	CARRYING WHEEL HUB		01
02	0571015180	WHEEL AXLE		01
03	0503010007	3982/3920 ROLLER BEARING		01
04	0503010059	33287/33462 ROLLER BEARING		01
05	0503010009	RETAINER 00573-B		01
06	0503010086	SEAL 0009B-B		01
07	0551014473	GLOVE		01
08	0503012702	KM-12 NUT		02
09	0503012703	LOCK WASHER		01
10	0503010002	1800 GREASE FITTING		01
11	0503011444	SPRING WASHER		04
12	0503010363	5/16" X 1" BOLT		04
13	0503014048	22 X 1.5 HEX NUT		08
14	0503014050	22 X 1.5 BOLT		08
15	0511068415	PFFP-3770 SEAL GUIDE		01

ASSY CENTRAL FERTILIZER EXCHANGE

0521057222

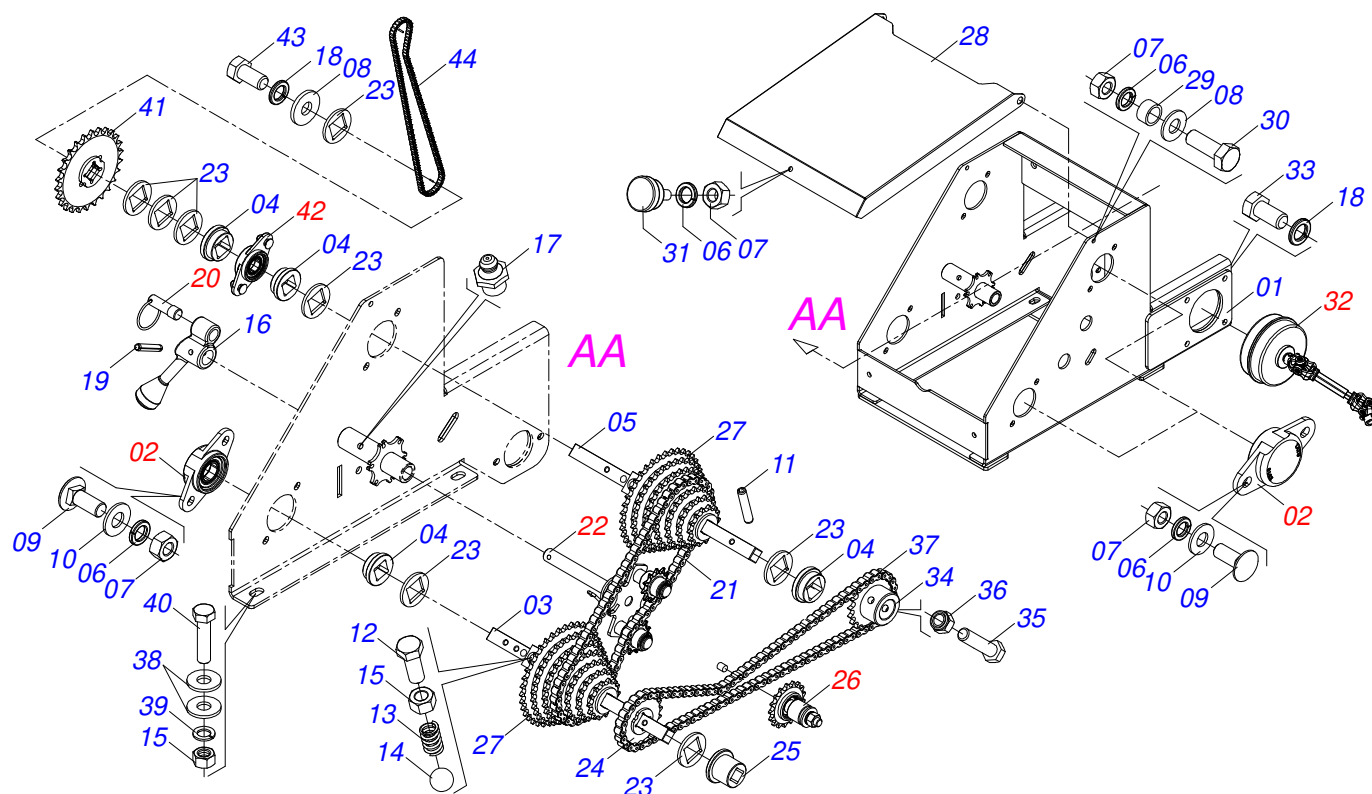


Item	Code	Description	See page	QT
01	0521064562	CENTRAL GEAR BOX SUPPORT		01
02	0501056271	GEARBOX CLOSED BEARING	33	03
03	0571015170	CENTRAL GEAR BOX DRIVER AXLE		01
04	0503030303	SUPPORT WASHER		04
05	0591011682	CENTRAL EXCHANGE MOVED AXIS		01
06	0503010179	LOCK WASHER		09
07	0503010337	5/16" NUT		09
08	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		03
09	0503011953	5/16" X 1" BOLT		06
10	0501010694	FLAT WASHER		06
11	0503010292	0.2" X 1.6" SPRING PIN		04
12	0503010395	1/2" X 1-1/4" BOLT		02
13	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
14	0503012389	1/2 BALL		02
15	0503010060	1/2" NUT		06
16	0502011758	REAR TENSIONER LEVER		01
17	0503010002	1800 GREASE FITTING		01
18	0503010025	3/8" SPRING WASHER		05
19	0503010683	0,2" X 1,2" SPRING PIN		01
20	0501048790	AXLE WITH RING	35	01
21	0503012204	40-1 CHAIN X 82 LINK + RED		01
22	0501052778	CHAIN TENSIONER ASSY	113	01
23	0521018630	1.4" X SQUARE 0.8" WASHER		08
24	0511065209	20Z GEAR		01
25	0503030275	AGRICULTURAL BEARING		01
26	0511054489	LEFT TENSIONER CENTRAL EXCHANGE	114	01
27	0511060396	DRIVE/DRIVEN AXLE CONE		02
28	0571015172	CENTRAL GEAR BOX COVER		01
29	0551018585	CENTRAL GEAR BOX COVER SLEEVE		02
30	0503010371	5/16" X 1" BOLT		02
31	0503010386	CABLE		01


Item	Code	Description	See page	QT
32	0511056179	CLUTCH WITH CARDAN CENTRAL	115	01
33	0503010172	M10 X 1,5 X 25 BOLT		04
34	0511069512	20Z GEAR		01
35	0503011268	3/8" X 2-1/2" BOLT		01
36	0503013357	3/8" SELF-ADJUSTING NUT		01
37	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
38	0511017302	FLAT WASHER		08
39	0503010019	1/2" SPRING WASHER		04
40	0503011082	C1/2" X 1.3/4" SCREW		04
41	0511067501	26Z GEAR		01
42	0501056443	GEAR HOUSING BEARING	116	01
43	0503010256	3/8" X 3/4" BOLT		01
44	0503013215	40-1 CHAIN X 89 LINK + MENDING		01

CHAIN TENSIONER ASSY


0501052778

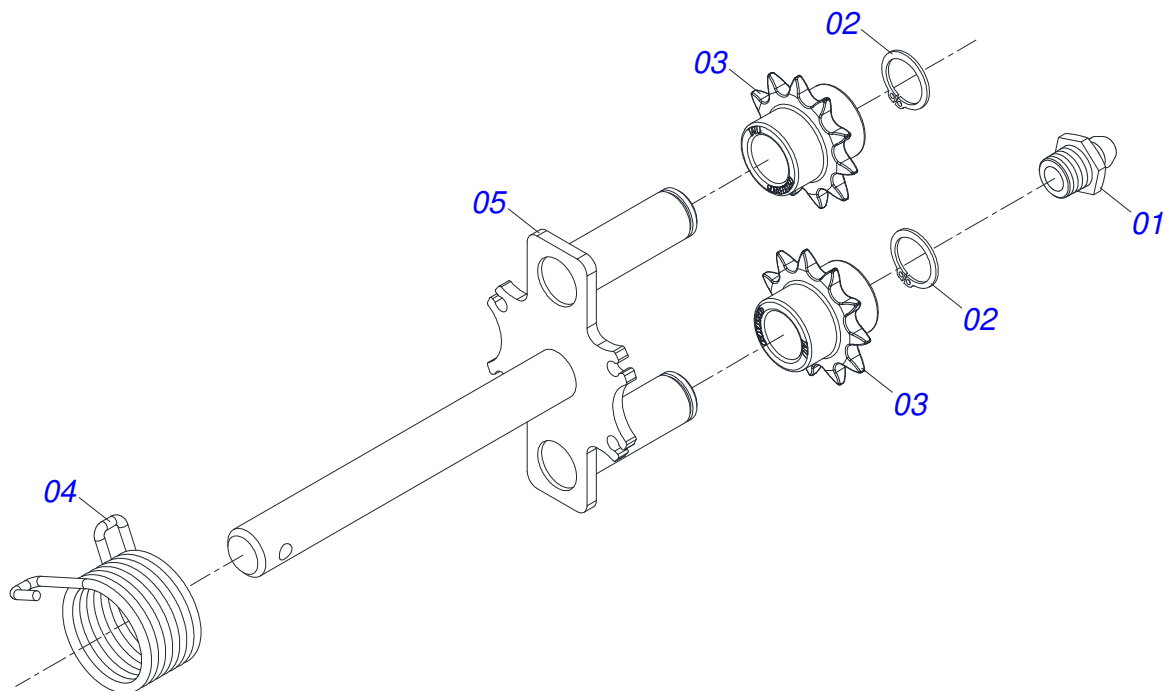


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503010302	501019 SEAL RING		02
03	0503031805	11Z 1/2" GEAR		02
04	0503031367	SPRING		01
05	0511061794	CHAIN TENSIONER		01

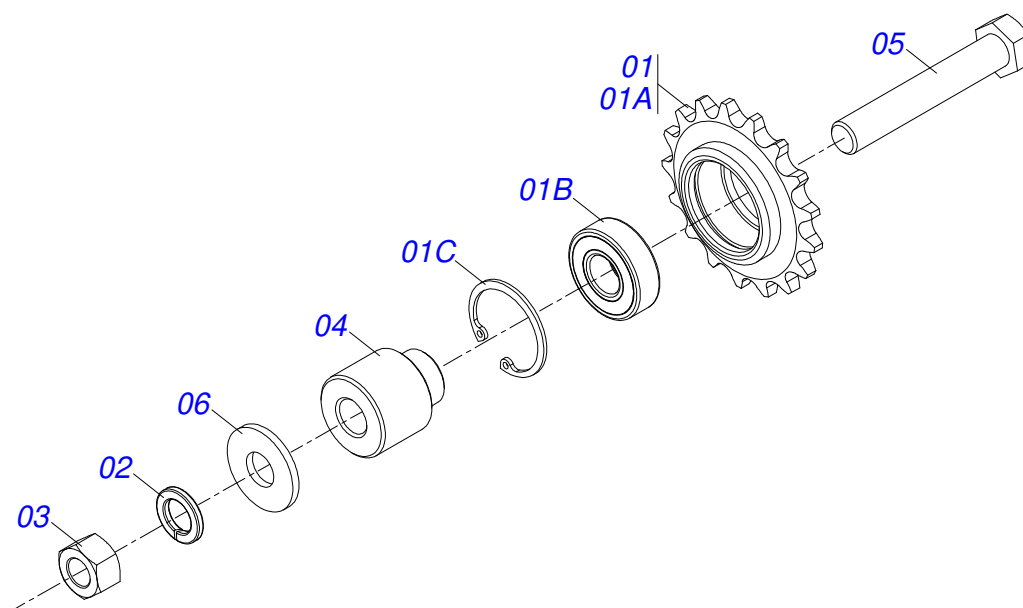


Item	Code	Description	See page	QT
01	0501056573	17Z GEAR ASSY	161	01
01A	0502012367	17Z X P 1/2" GEAR INTERM		01
01B	0503012882	BEARING		01
01C	0503011945	503050 CLAMPING RING (FOR AXLE)		01
02	0503010019	1/2" SPRING WASHER		01
03	0503010060	1/2" NUT		01
04	0571015167	SLEEVE NYLON Ø21 X Ø31,75 X 36,50		01
05	0503010479	BOLT		01
06	0511017302	FLAT WASHER		01

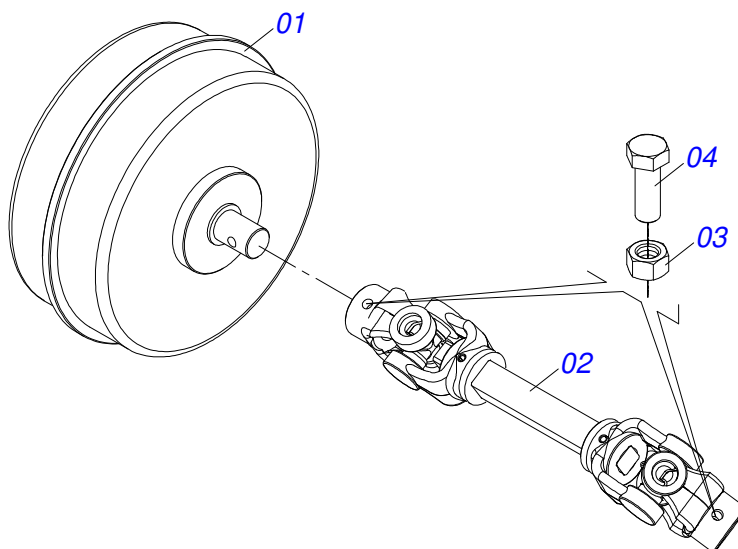


Item	Code	Description	See page	QT
01	0503062231	CLUTCH		01
02	0503062272	CARDAN WITHOUT PROTECTION		01
03	0503013357	3/8" SELF-ADJUSTING NUT		02
04	0503011268	3/8" X 2-1/2" BOLT		02

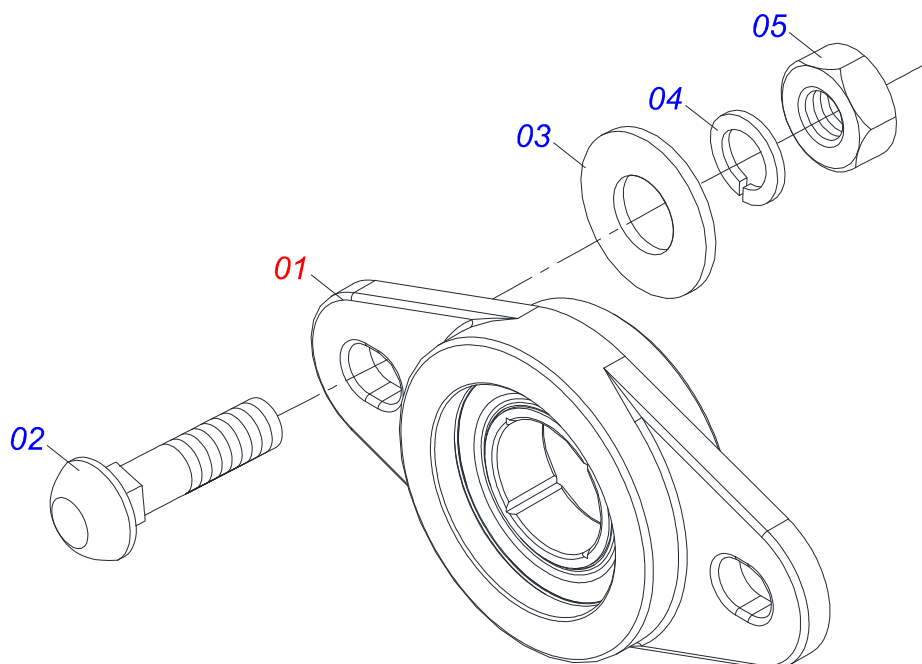


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	32	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

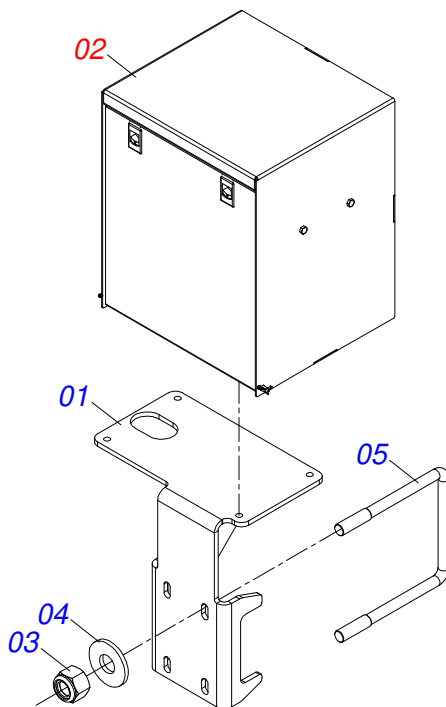


Item	Code	Description	See page	QT
01	0531060360	BOX SUPPORT		01
02	0521056857	ECU APT / TVT BOX WITH EXCHANGE	118	01
03	0503010589	1/2" UNC SELF ADJUSTING NUT		04
04	0511017302	FLAT WASHER		04
05	0561016468	FASTENER		02

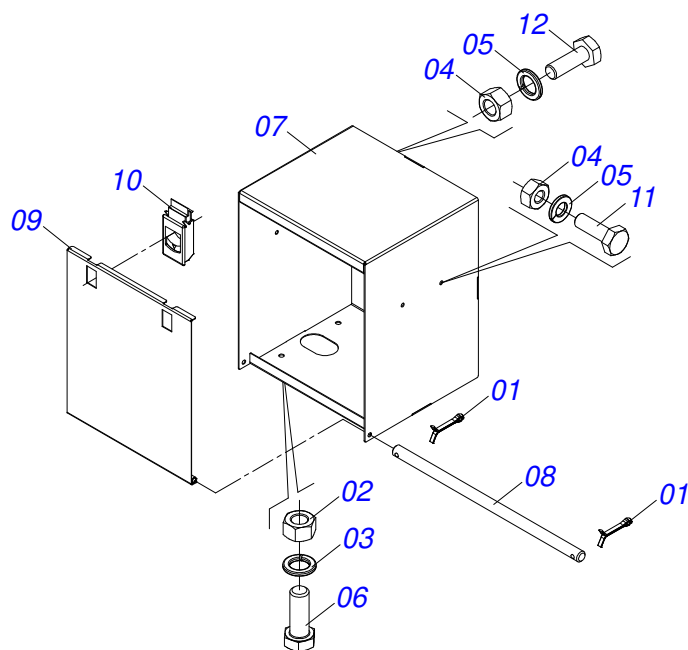


Item	Code	Description	See page	QT
01	0503010257	1/8" X 1" COTTERPIN		02
02	0503010026	3/8" NUT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010144	1/4" NUT		08
05	0503010143	1/4" SPRING WASHER		08
06	0503010237	3/8" X 1" BOLT		04
07	0521068017	BOX BODY APT/TVT		01
08	0571017090	ROD BOX		01
09	0521068016	BOX COVER		01
10	0503018171	FAST LOCK ASSY		02
11	0503010461	1/4" X 1" BOLT		04
12	0503010282	1/4" X 3/4" BOLT		04

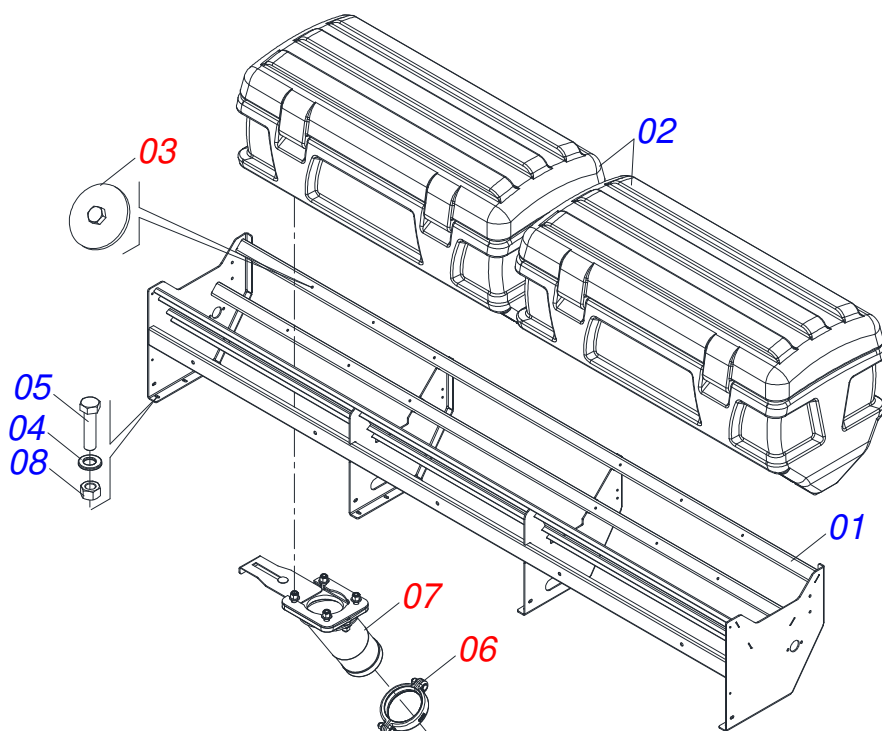


Item	Code	Description	See page	QT
001	0531061295	CENTRAL SUPPORT RIGHT FERTILIZER		01
002	0503062962	SILO SEED 05 ASSY MOUTH		01
003	0521051407	FIXER SILO FERTILIZER	47	08
004	0511017302	FLAT WASHER		06
005	0503010920	1/2" X 1.1/2" BOLT		06
006	0521050525	FIXER FERTILIZER CONDUCTOR	100	05
007	0521055365	SEED CONDUCTOR	48	05
008	0503010589	1/2" UNC SELF ADJUSTING NUT		06

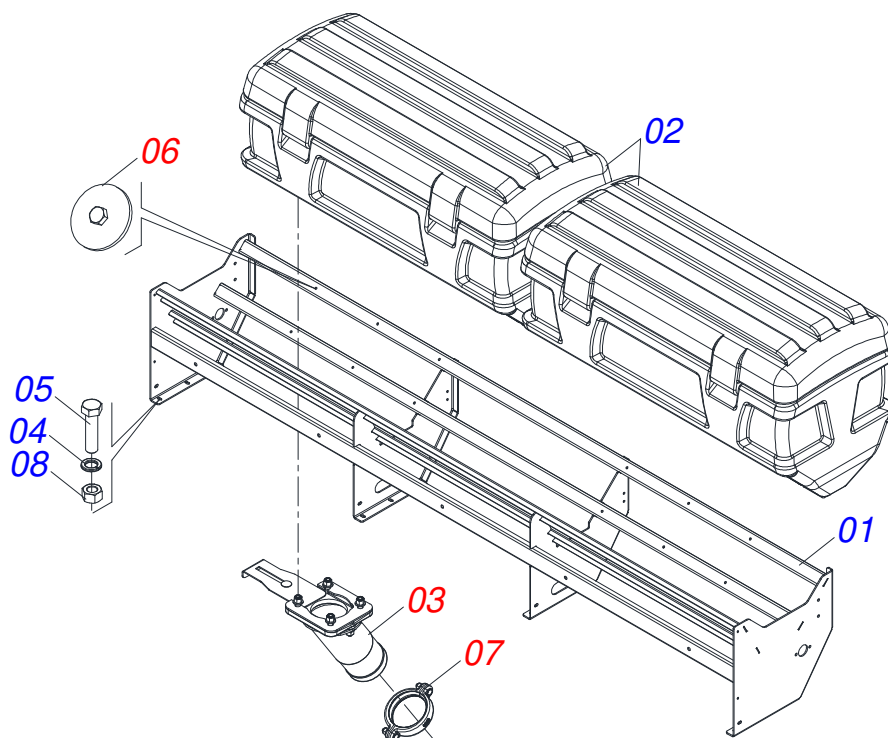


Item	Code	Description	See page	QT
001	0531061296	CENTRAL SUPPORT LEFT FERTILIZER		01
002	0503062962	SILO SEED 05 ASSY MOUTH		01
003	0521055365	SEED CONDUCTOR	48	05
004	0511017302	FLAT WASHER		06
005	0503010920	1/2" X 1.1/2" BOLT		06
006	0521051407	FIXER SILO FERTILIZER	47	08
007	0521050525	FIXER FERTILIZER CONDUCTOR	100	05
008	0503010589	1/2" UNC SELF ADJUSTING NUT		06

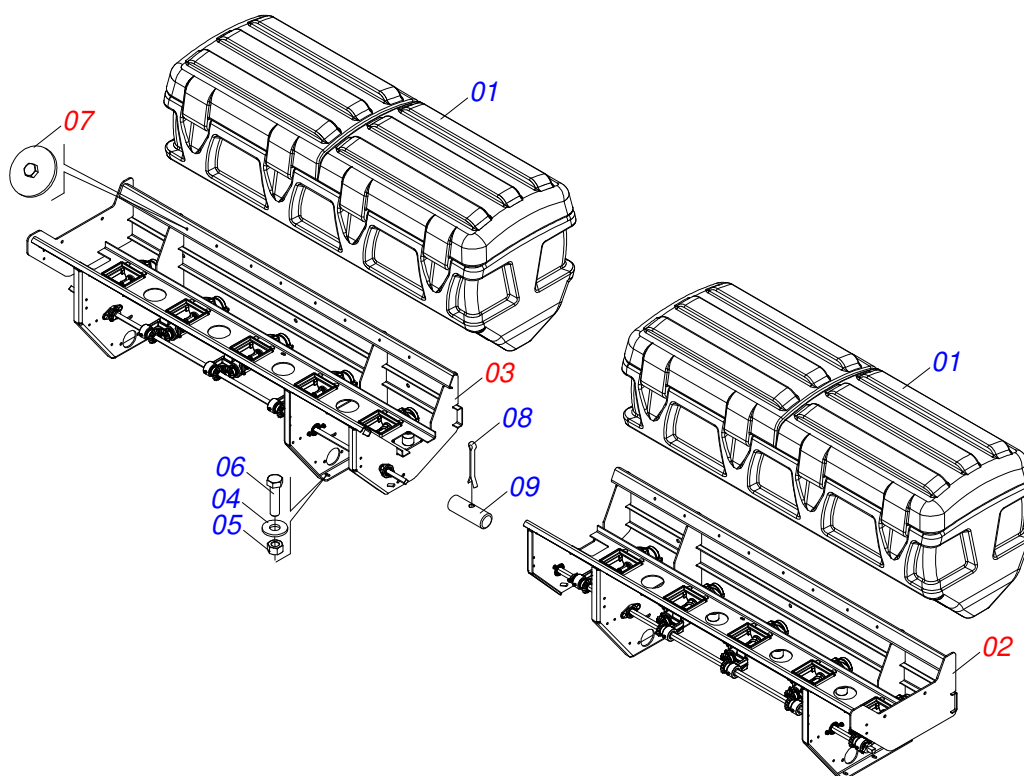


Item	Code	Description	See page	QT
01	0503062391	FERTILIZER HOPPER		02
02	0521059025	CENTRAL SUPPORT LEFT 5 MOUTH FULL 122 FERTILIZER		01
03	0521059028	RIGHT CENTRAL SUPPORT 5 MOUTH FULL 123 FERTILIZER		01
04	0511017302	FLAT WASHER		12
05	0503010589	1/2" UNC SELF ADJUSTING NUT		12
06	0503010920	1/2" X 1.1/2" BOLT		12
07	0521051407	FIXER SILO FERTILIZER	47	16
08	0503010010	1/4" X 2.1/2" COTTERPIN		01
09	0502012007	SQUARE SLEEVE		01

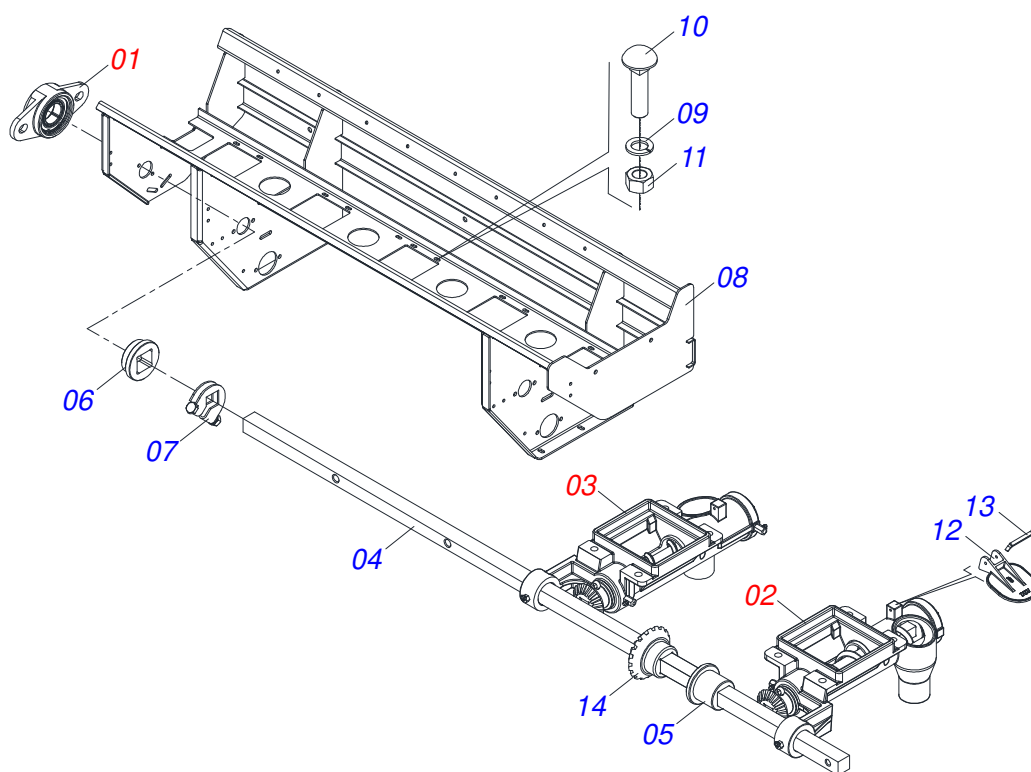


Item	Code	Description	See page	QT
001	0521054282	BEARING	44	03
002	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	124	01
003	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	46	04
004	0581019781	AXE CARRÉ		01
005	0503030275	AGRICULTURAL BEARING		05
006	0503030303	SUPPORT WASHER		02
007	0501053788	3/4 SQUARE AXLE FASTENER	43	02
008	0531061294	CENTRAL SUPPORT LEFT 5 MOUTH FERTILIZER		01
009	0503010025	3/8" SPRING WASHER		20
010	0501010942	3/8" X 1-1/4" BOLT		20
011	0503010026	3/8" NUT		20
012	0503034396	FERTILIZER SIDE COVER		05
013	0503010362	1/8 X 1.1/4 COTTERPIN		05
014	0502012990	CONICA 14Z SQUARE GEAR		05

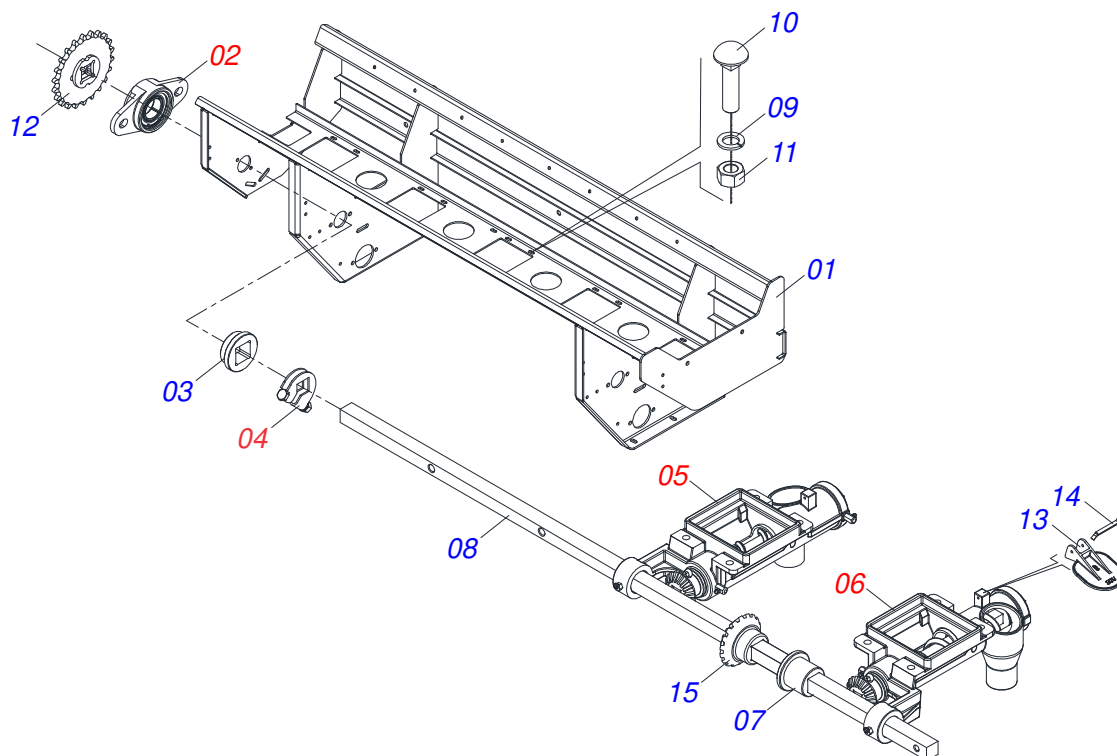

Item	Code	Description	See page	QT
001	0531061297	SUIT CENTRAL RIGHT 5 MOUTH		01
002	0521054282	BEARING	44	03
003	0503030303	SUPPORT WASHER		04
004	0501053788	3/4 SQUARE AXLE FASTENER	43	04
005	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	124	04
006	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	46	01
007	0503030275	AGRICULTURAL BEARING		05
008	0581019781	AXE CARRÉ		01
009	0503010025	3/8" SPRING WASHER		20
010	0501010942	3/8" X 1-1/4" BOLT		20
011	0503010026	3/8" NUT		20
012	0511061759	22Z P12,70 FQ 3/4" GEAR		01
013	0503034396	FERTILIZER SIDE COVER		05
014	0503010362	1/8 X 1.1/4 COTTERPIN		05
015	0502012990	CONICA 14Z SQUARE GEAR		05

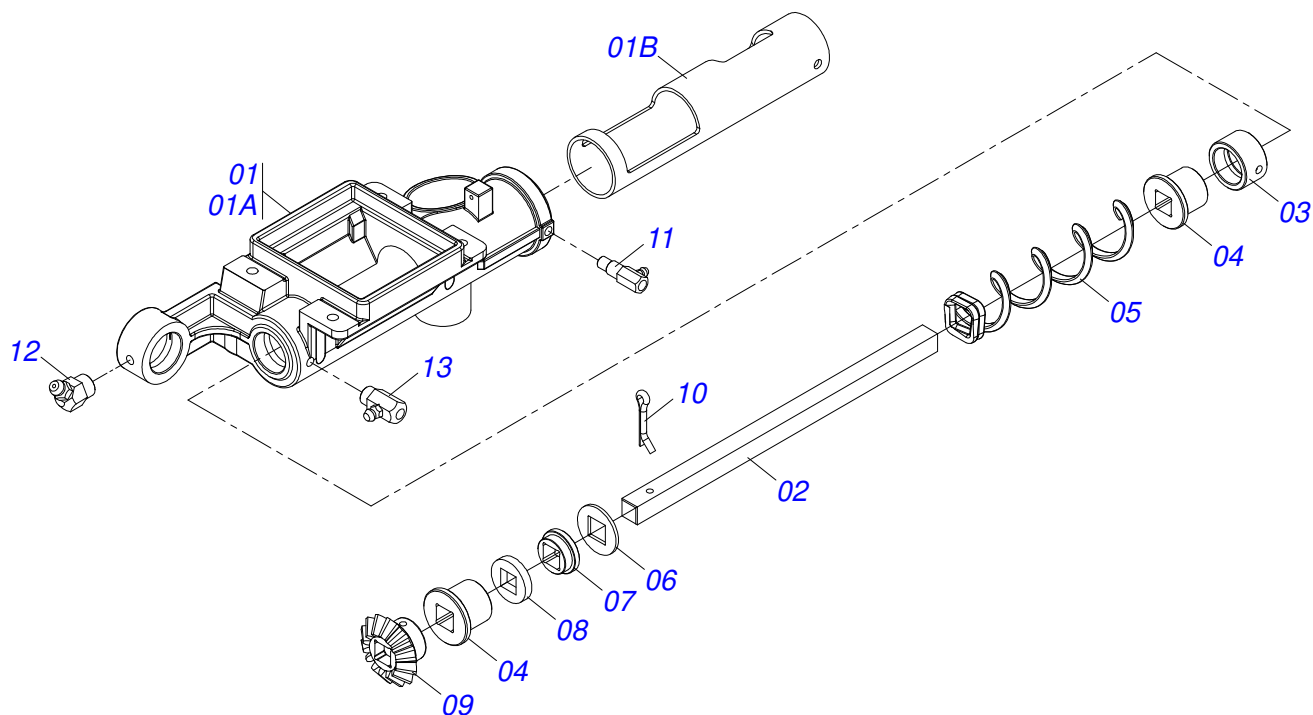


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

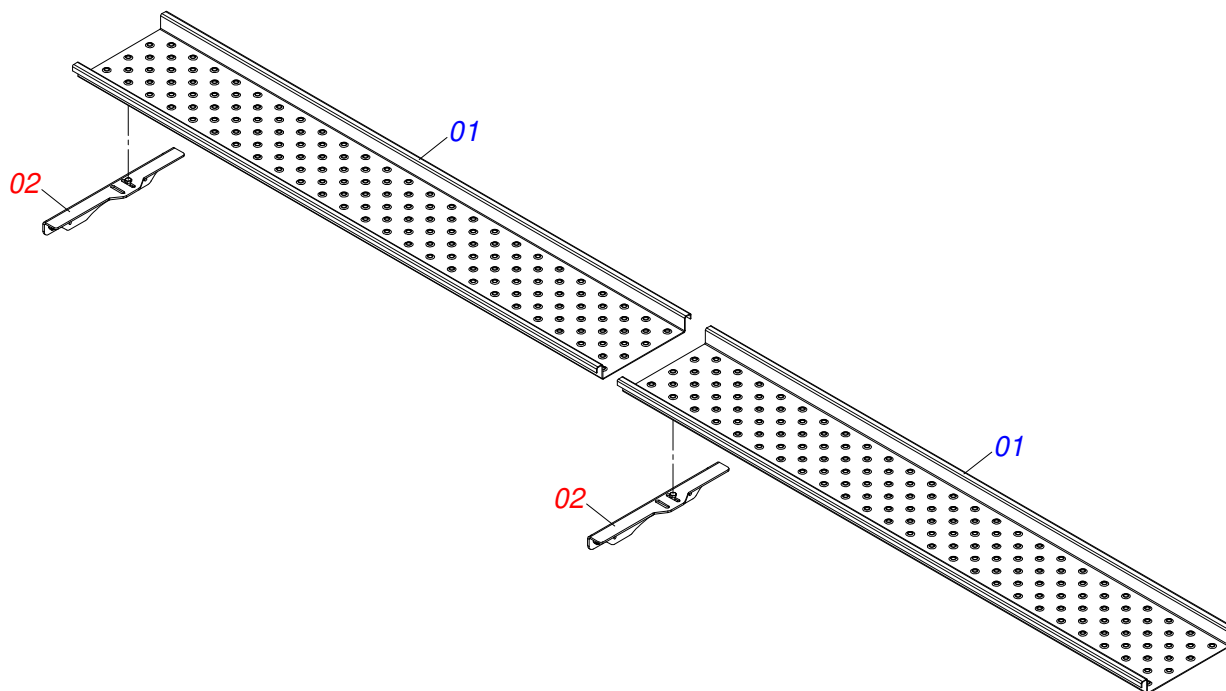

Item	Code	Description	See page	QT
01	0581019588	PLATFORM 2380		02
02	0521054279	PLATFORM FIXER	52	04

ASSY LEFT ARTICULATION ARM


0511054515

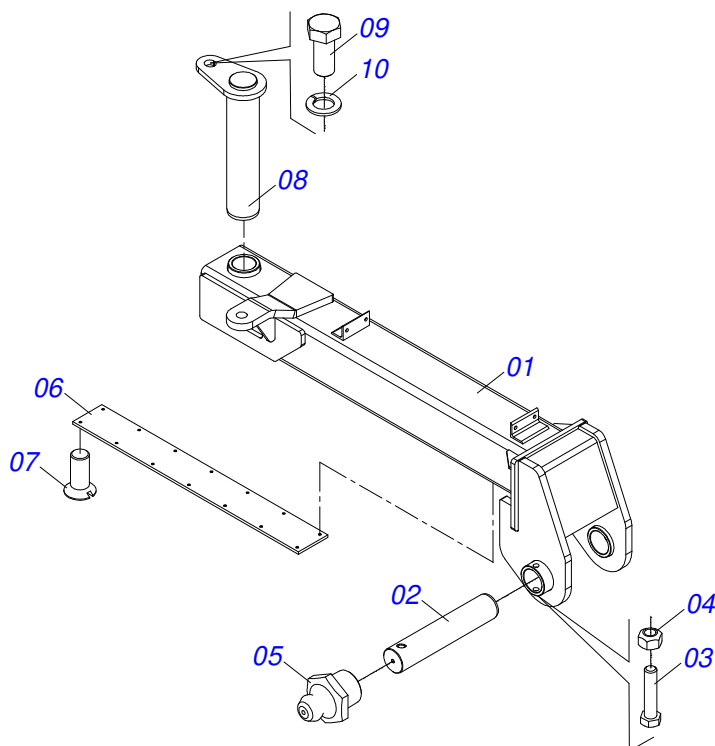


Item	Code	Description	See page	QT
01	0521064536	LH PIVOT ARM		01
02	0561015688	PIVOT SMALLE AXLE		01
03	0501010452	5/8" X 5" BOLT		01
04	0503012412	5/8 UNC SELF LOCKING NUT		01
05	0503010002	1800 GREASE FITTING		02
06	0503032042	SHEET POLYETHYLENE		01
07	0503010814	5/16 BOLT		14
08	0521063779	PIVOT SHAFT		01
09	0503015322	BOLT 7/8		01
10	0503010408	7/8" SPRING WASHER		01

ASSY RIGHT ARTICULATION ARM


0511054516

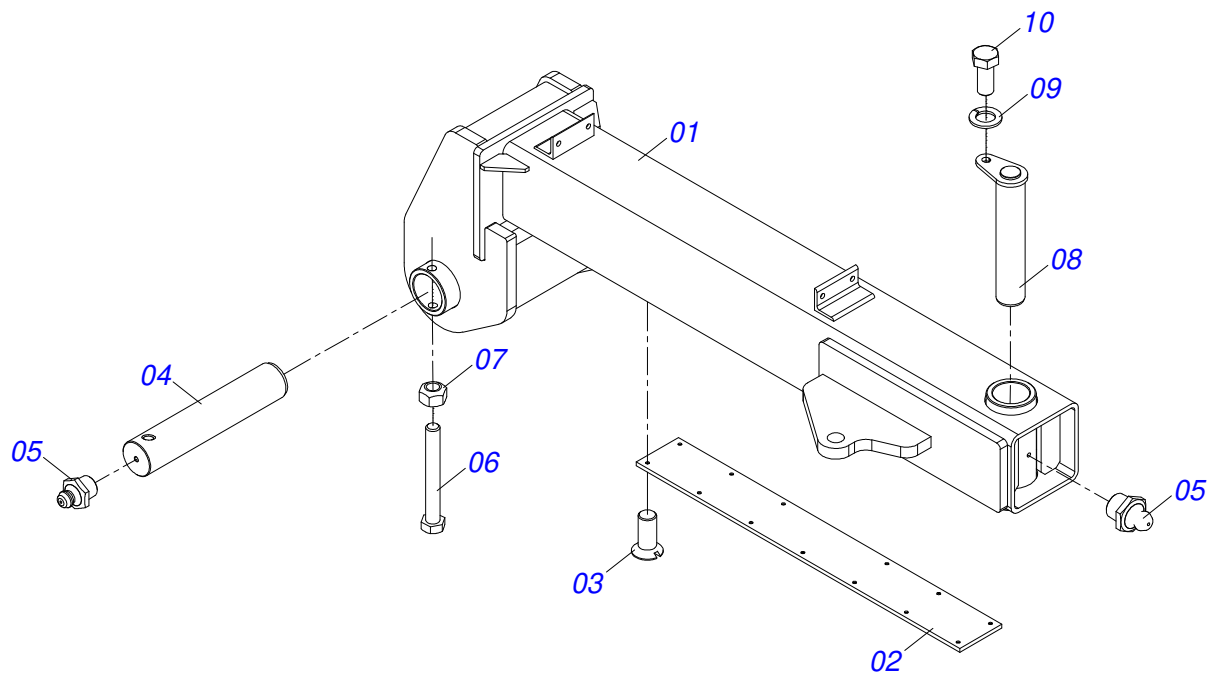


Item	Code	Description	See page	QT
01	0521064551	RH PIVOT ARM		01
02	0503032042	SHEET POLYETHYLENE		01
03	0503010814	5/16 BOLT		14
04	0561015688	PIVOT SMALLE AXLE		01
05	0503010002	1800 GREASE FITTING		02
06	0501010452	5/8" X 5" BOLT		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01
08	0521063779	PIVOT SHAFT		01
09	0503010408	7/8" SPRING WASHER		01
10	0503015322	BOLT 7/8		01

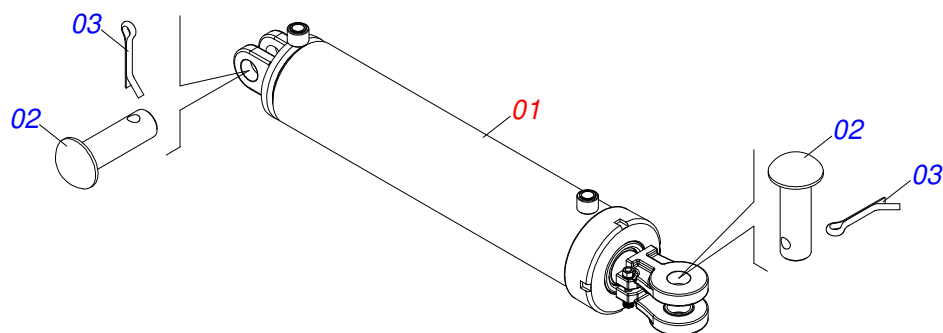


Item	Code	Description	See page	QT
01	0511058226	HYDRAULIC CYLINDER 50,80 X 114,30 X 810 X 1300	129	02
02	0521012538	1.2" X 3.5" COUPLING SHAFT		04
03	0503010523	1/4" X 2" COTTERPIN		02

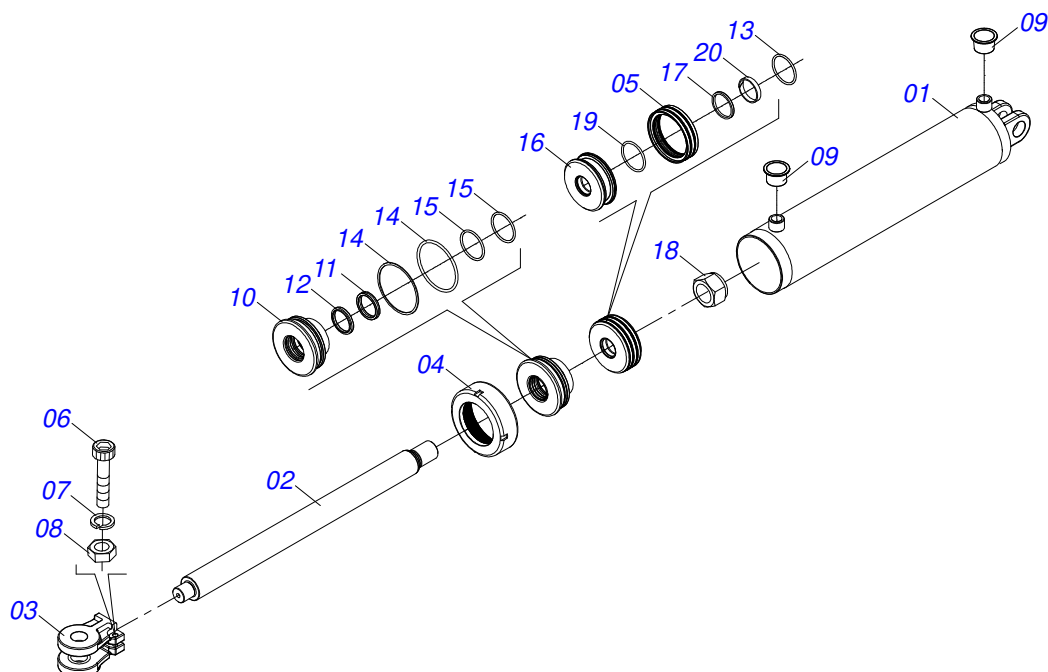


Item	Code	Description	See page	QT
01	0521066553	SHIRT 114.30 X 679 USAP		01
02	0581010657	ROD 50.80 X 695 USAP		01
03	0502040747	32.54 CLEVIS CLAMP		01
04	0502011222	0.56" END CAP		01
05	0503010952	W2-2250-500 RING		01
06	0503011094	3/8" X 2" BOLT		01
07	0503010025	3/8" SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503030384	CON PLUG N-001		02
10	0581010659	2" X 4" RING SUPPORT		01
11	0503010039	D-2000 SCRAPER RING		01
12	0503018026	1870-2000-375 B GASKET		01
13	0503018024	RING BS		01
14	0503011892	O' RING, 2-346 N 3006-9B		02
15	0503011893	BACK-UP RING, 8-346		02
16	0581010658	PISTON 50,80 X 114,30		01
17	0503018164	GASKET 2500-4000-375 B (1150 AGEL)		02
18	0503010290	SELF ADJUSTING 1.1/2" UNF NUT		01
19	0503010141	2-226 N 3006-9B O'RING		01
20	0503018165	GUIDE RING W2-4500-590		01
21	0511032868	ASSY CYLINDER REPAIR KIT 50,8 X 114,3 (0511058401)		01

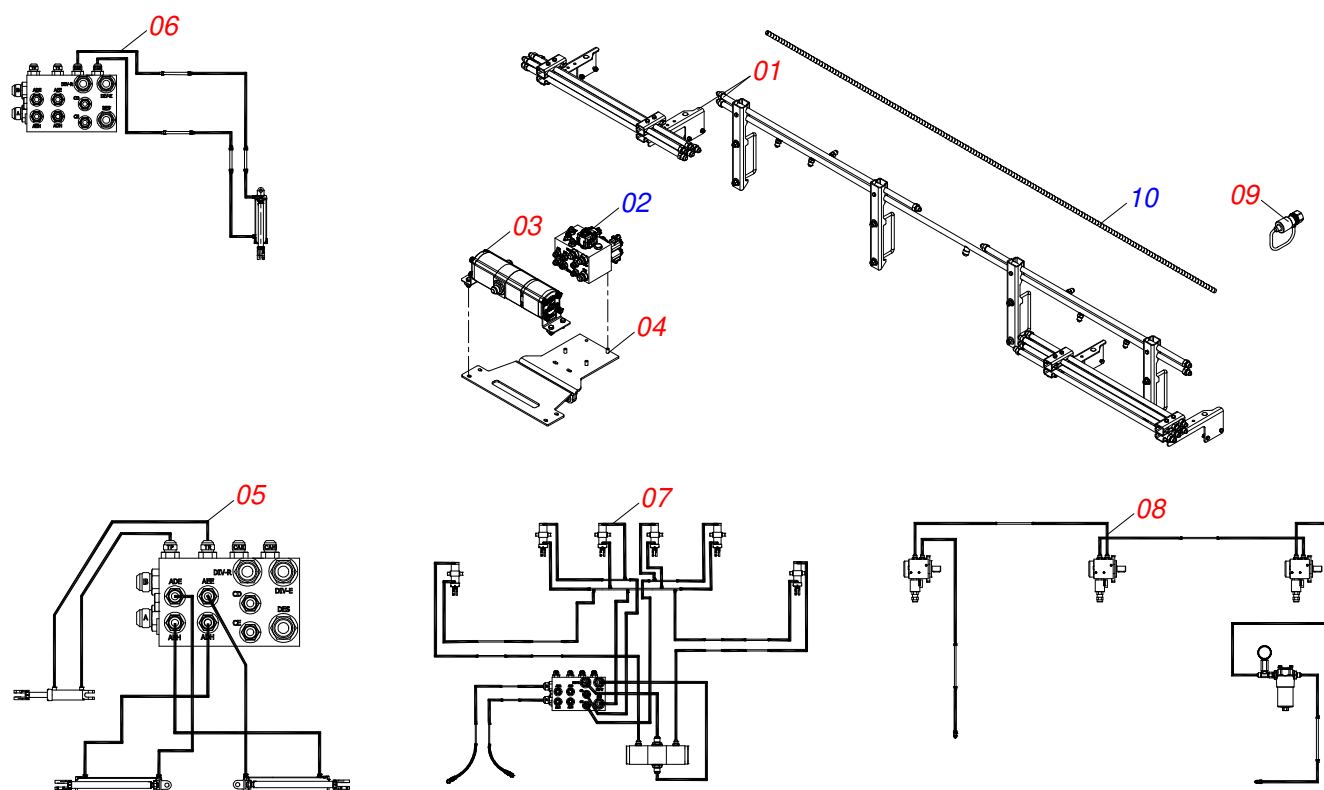

Item	Code	Description	See page	QT
01	0521059189	APT CENTRAL DUCT ASSEMBLY	134	01
02	0503063242	COMMAND BLOCK		01
03	0531050586	CASAPPA TRIPLE FLOW DIVIDER VALVE 0201001Z WITH NIPLES	136	01
04	0531050058	SUPPORT ASSY BLOCK/VALVES	137	01
05	0531050351	ARTICULATED FERTILIZER / SEED HOSE ASSY	138	01
06	0521055274	HEAD HOSE ASSY	140	01
07	0531050617	LIFT HOSE SET FERTILIZER / SEED 1 SIDE WHEEL	141	01
08	0531051058	SET FERTILIZER AND SEED HOSE	143	01
09	0501053834	MALE QUICK COUPLER	145	04
10	0571017774	SPRING PROTECTION QUICK HOSE		01

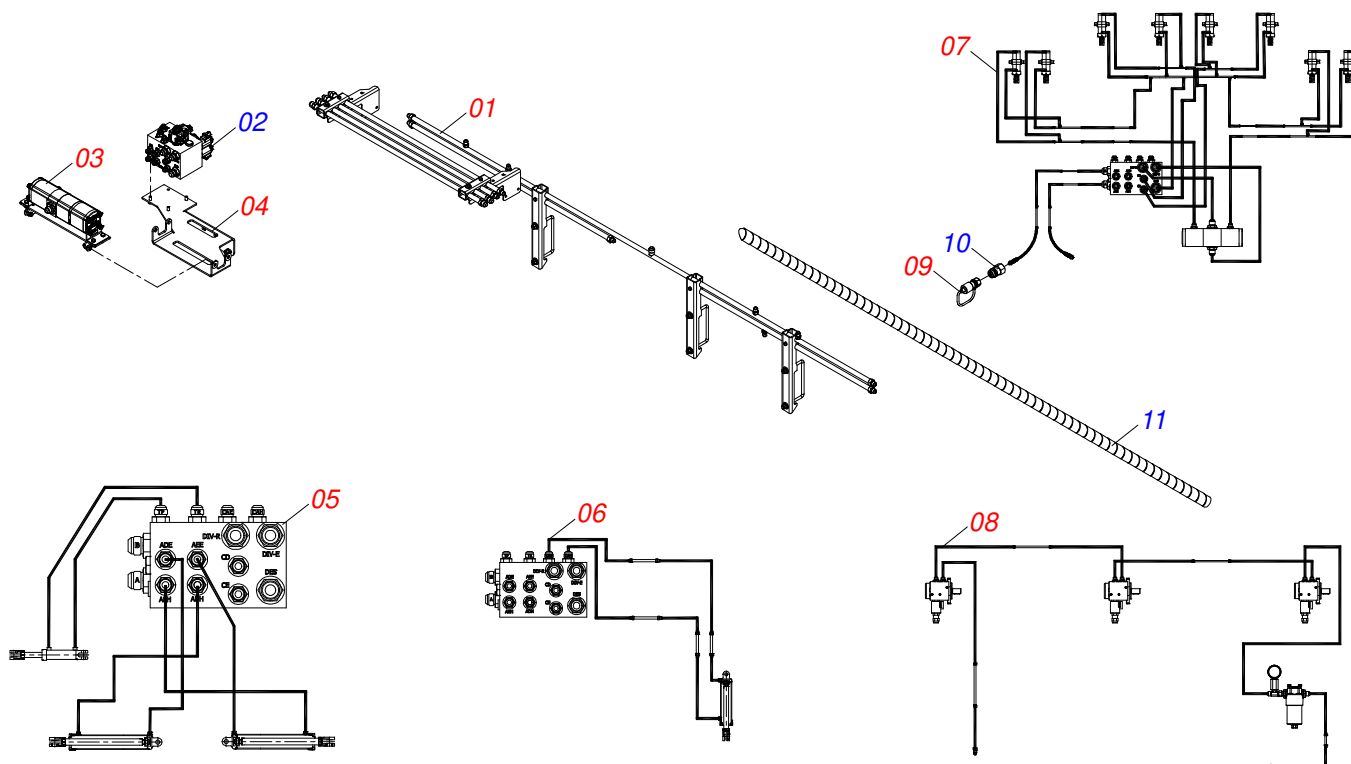


Item	Code	Description	See page	QT
01	0521059189	APT CENTRAL DUCT ASSEMBLY	134	01
02	0503063242	COMMAND BLOCK		01
03	0521057013	TRIPLE DIVISER VALVE BRP00079 WITH NIPLES	132	01
04	0521057526	SUPPORT BLOCK	133	01
05	0521055275	ASSY HOSE ARTICULATION	139	01
06	0521055274	HEAD HOSE ASSY	140	01
07	0521055276	HOSE KIT LEVANTE	142	01
08	0531050028	HOSE KIT APT FERTILIZER / SEED	144	01
09	0501053834	MALE QUICK COUPLER	145	02
10	0581017815	MALE ADAPTER		01
11	0571017774	SPRING PROTECTION QUICK HOSE		01

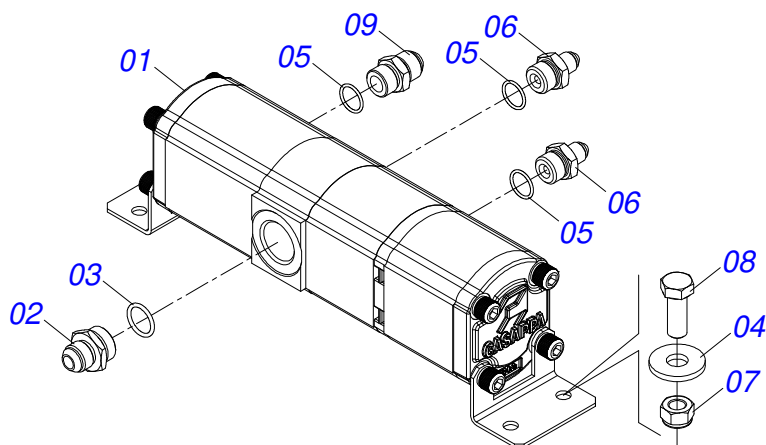

Item	Code	Description	See page	QT
01	0503019426	TRIPLE FLOW DIVISING VALVE		01
02	0581013111	NIPLE R 1.1/6 UN X 1.5/16 12 WIRES		01
03	0503014724	2-215 N 3006-9B O'RING		01
04	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
05	0503010045	O'RING		03
06	0511010111	7/8" NIPPLE		02
07	0503013357	3/8" SELF-ADJUSTING NUT		04
08	0503010237	3/8" X 1" BOLT		04
09	0501012520	1-1/16" X 7/8" NIPPLE		01

SUPPORT BLOCK


0521057526

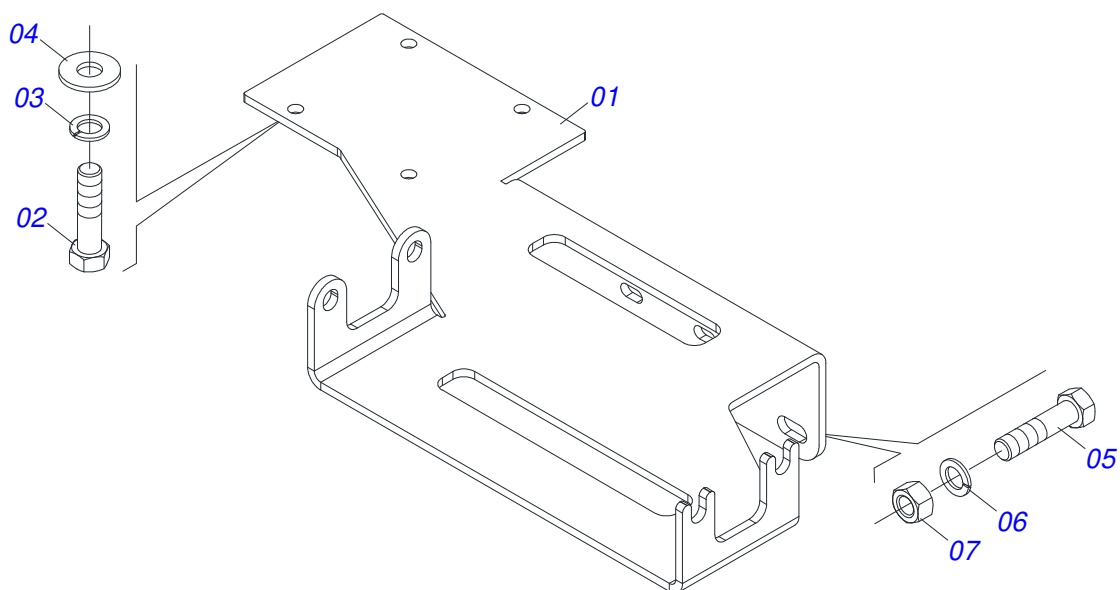


Item	Code	Description	See page	QT
01	0591012526	SUPPORT BLOCK		01
02	0503010172	M10 X 1,5 X 25 BOLT		03
03	0503010025	3/8" SPRING WASHER		03
04	0511017302	FLAT WASHER		02
05	0503010395	1/2" X 1-1/4" BOLT		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2" NUT		02

APT CENTRAL DUCT ASSEMBLY


0521059189

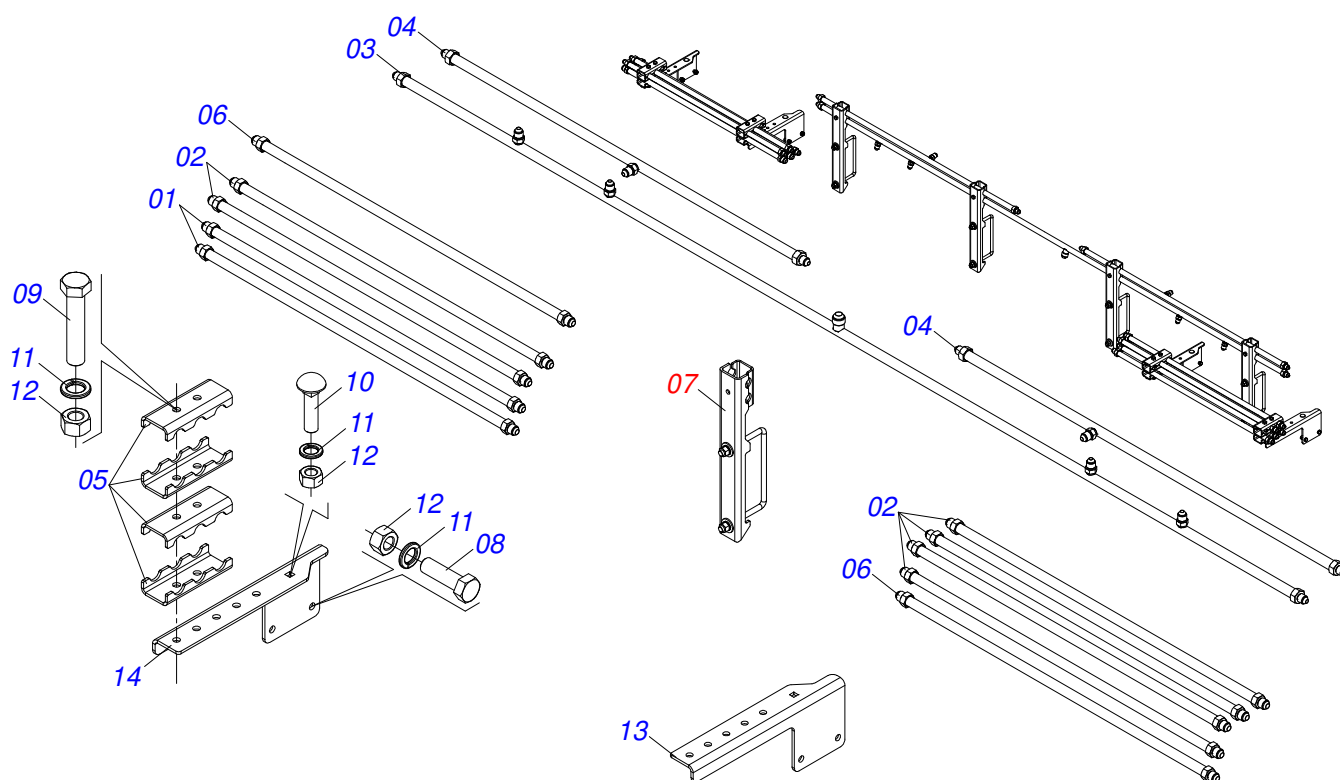


Item	Code	Description	See page	QT
01	0521069338	OIL TUBE		02
02	0521069341	OIL DUCT R.3/4 X 1050		06
03	0521069009	OIL DUCT		01
04	0521069275	OIL TUBE		02
05	0581018408	SUPPORT SCALE		12
06	0521069339	OIL TUBE		02
07	0521053537	CENTRAL REAR DUCT SUPPORT	135	04
08	0503010237	3/8" X 1" BOLT		08
09	0503010481	BOLT		08
10	0503013029	3/8" X 3/4" BOLT		04
11	0503010025	3/8" SPRING WASHER		20
12	0503010026	3/8" NUT		20
13	0591010127	SUPPORT LEFT DISTRIBUTOR		02
14	0581014867	SIDE DUTY SUPPORT		02

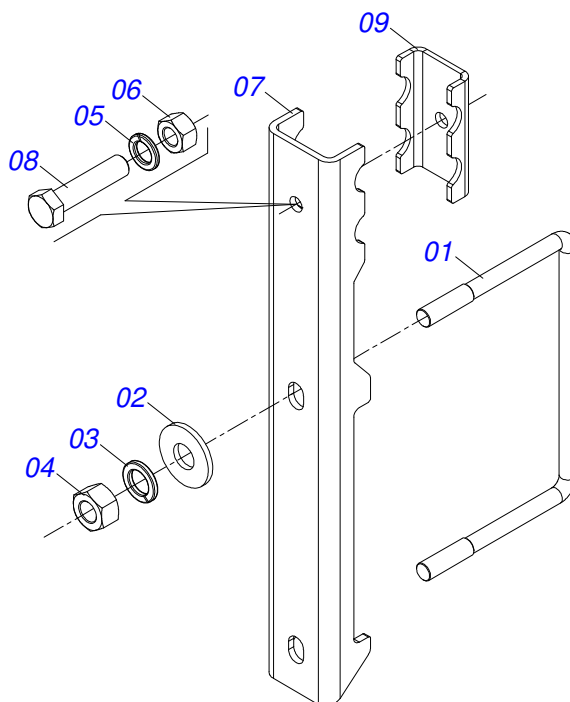


Item	Code	Description	See page	QT
01	0571019615	FITTING 1/2 UNC 130 X 198 ZN		01
02	0511017302	FLAT WASHER		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2" NUT		02
05	0503010025	3/8" SPRING WASHER		01
06	0503010026	3/8" NUT		01
07	0581017885	SUPPORT BODY		01
08	0503011141	3/8" X 2-3/4" BOLT		01
09	0581018407	BODY FASTENER 2 DUCTS		01

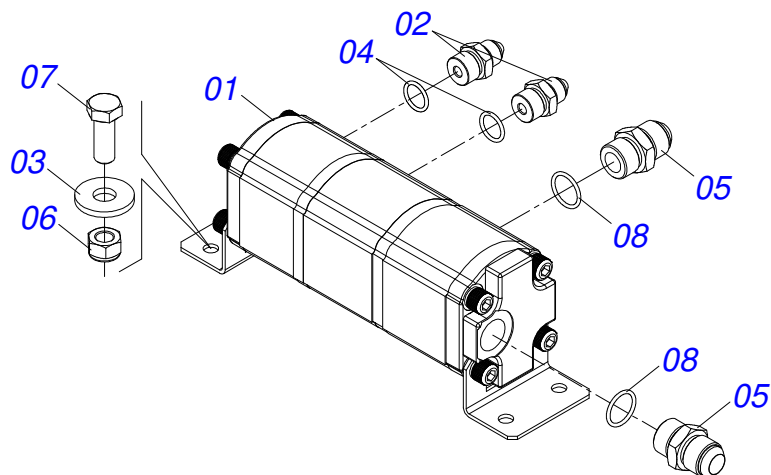

Item	Code	Description	See page	QT
01	0503019995	TRIPLE FLOW DIVIDER VALVE		01
02	0501010589	R. 1.1/16UN SEXT 1.1/4 X 52 NIPPLE		02
03	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		04
04	0503010045	O'RING		02
05	0511010111	7/8" NIPPLE		02
06	0503013357	3/8" SELF-ADJUSTING NUT		04
07	0503010237	3/8" X 1" BOLT		04
08	0503011109	2-119 N 3006-9B O'RING		02

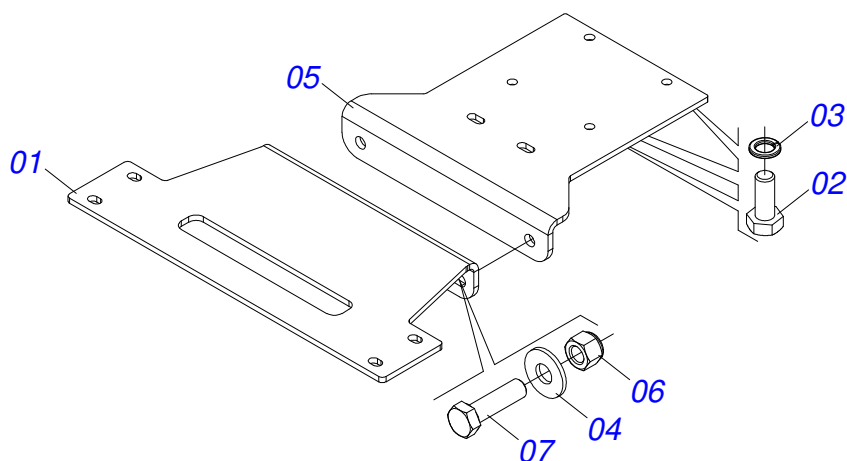


Item	Code	Description	See page	QT
01	0591016376	VALVE SUPPORT		01
02	0503010172	M10 X 1,5 X 25 BOLT		03
03	0503010025	3/8" SPRING WASHER		03
04	0511017302	FLAT WASHER		02
05	0591016360	BLOCK SUPPORT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		02
07	0503011082	C1/2" X 1.3/4" SCREW		02

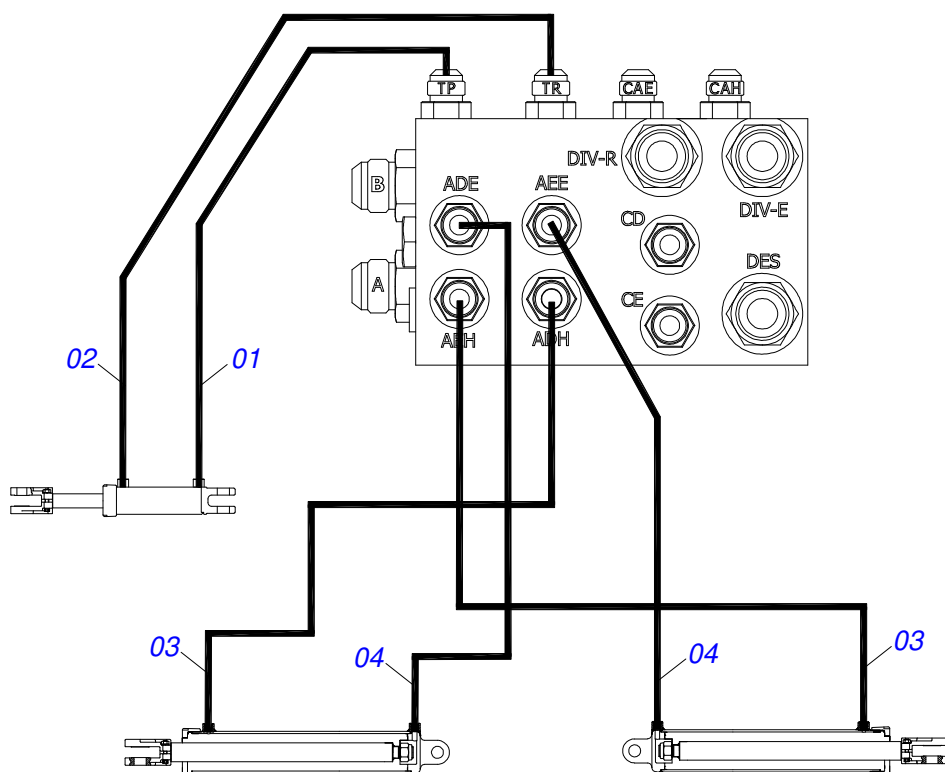

Item	Code	Description	See page	QT
01	0501081108	3/8 X 1400 TC-TC HOSE		01
02	0501080514	3/8 X 1700 TC-TC HOSE		01
03	0501080055	3/8 X 1000 TR-TC HOSE		02
04	0501080150	3/8 X 800 TR-TC HOSE		02

ASSY HOSE ARTICULATION


0521055275

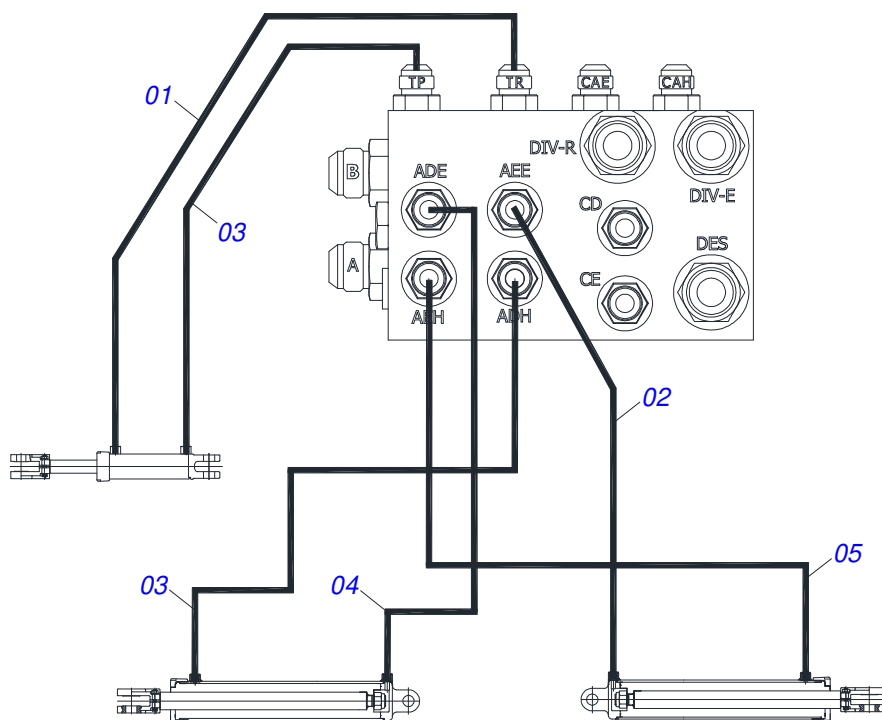


Item	Code	Description	See page	QT
01	0501080516	3/8" X 63" TR-TC HOSE ASSY		01
02	0501080449	3/8" X 1500 TC-TC HOSE		01
03	0501081108	3/8 X 1400 TC-TC HOSE		02
04	0501080522	3/8 X 700 TC-TC HOSE ASSY		01
05	0501082184	HOSE 1/2 X 2100 TC-TC		01

HEAD HOSE ASSY

0521055274

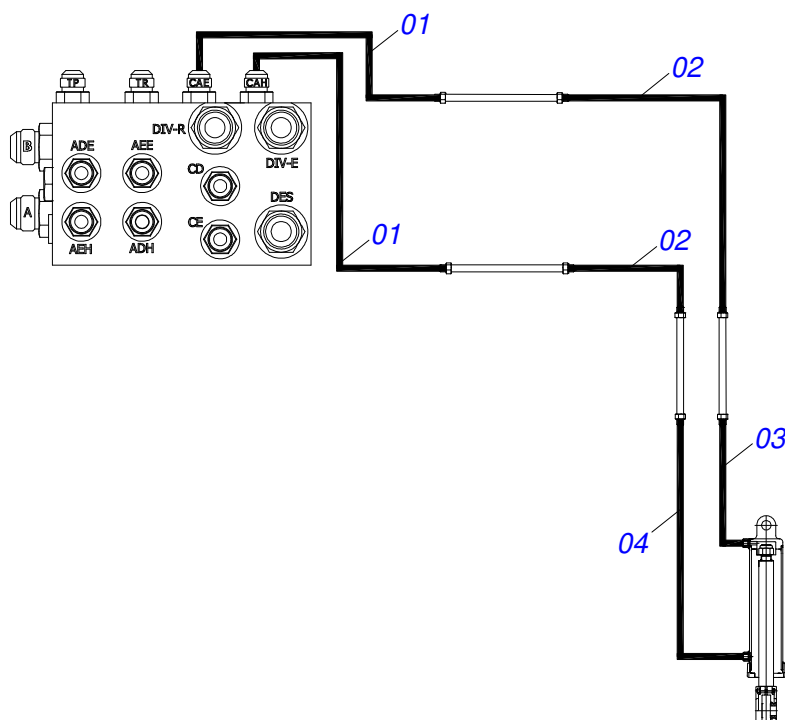


Item	Code	Description	See page	QT
01	0501080461	3/8 X 1800 TR-TC HOSE		02
02	0501080297	3/8 X 2800 TR-TR HOSE		02
03	0501080526	3/8 X 2900 TR-TC HOSE		01
04	0501080527	3/8 X 3300 TR-TC HOSE		01

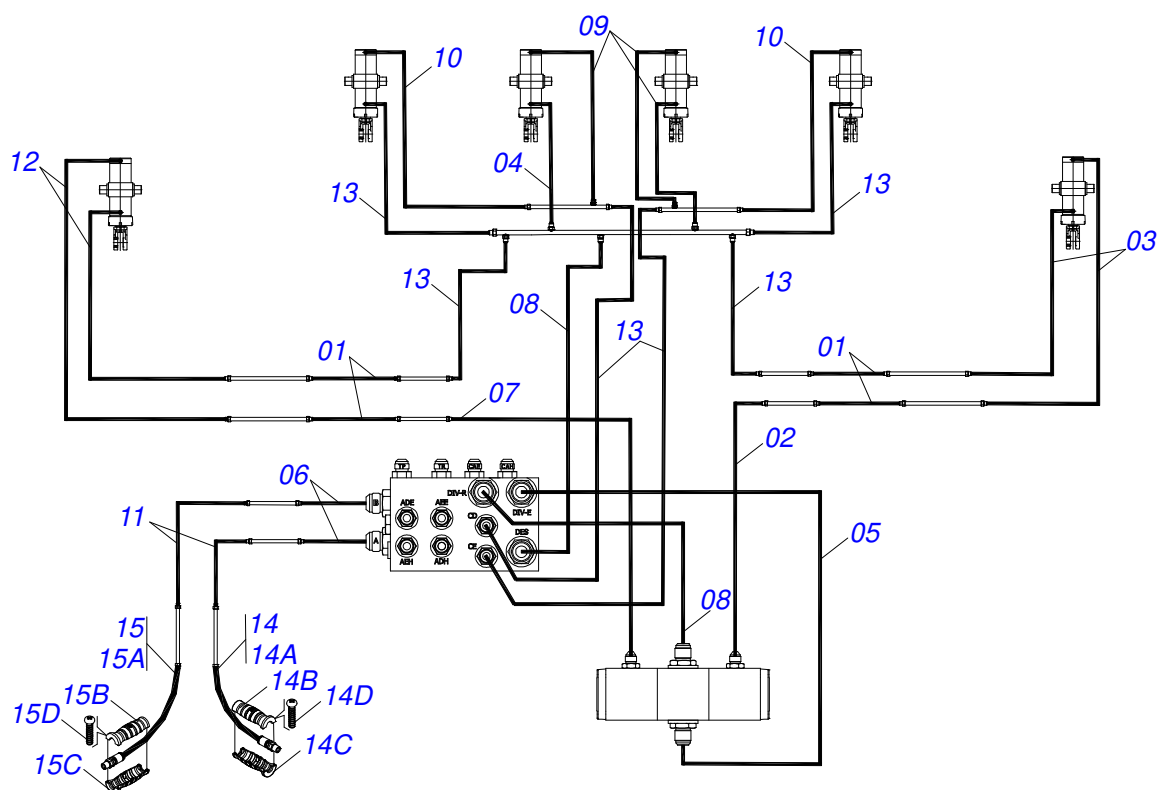


Item	Code	Description	See page	QT
01	0501080105	3/8 X 700 TR-TR HOSE		04
02	0501080025	3/8 X 1400 TR-TC HOSE		01
03	0501080599	3/8 X 650 TR-TC HOSE		02
04	0501080065	3/8 X 1200 TC-TC HOSE		01
05	0501081292	3/4 X 650 TR-TC HOSE		01
06	0501080196	3/4 X 1400 TR-TR HOSE		02
07	0501080714	3/8 X 1600 TR-TC HOSE		01
08	0501080175	3/4 X 900 TR-TC HOSE		02
09	0501080675	3/8 X 1000 TC-TC 180G HOSE		03
10	0501080485	3/8 X 1100 TR-TC HOSE		02
11	0501082204	3/4 X 2750 TR-TR HOSE		02
12	0501081837	3/8 X 700 TR-TC HOSE		02
13	0501081838	3/8 X 1000 TR-TC HOSE		06
14	0521053712	3/4 X 5900 TR-TM BLACK/RED HOSE		01
14A	0501082205	3/4 X 5900 TR-TM HOSE		01
14B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
14C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
14D	0503018952	PLASTIC BOLT		06
15	0521053707	3/4 X 5900 TR-TM BLACK/BLUE HOSE		01
15A	0501082205	3/4 X 5900 TR-TM HOSE		01
15B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
15C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
15D	0503018952	PLASTIC BOLT		06

HOSE KIT LEVANTE


0521055276

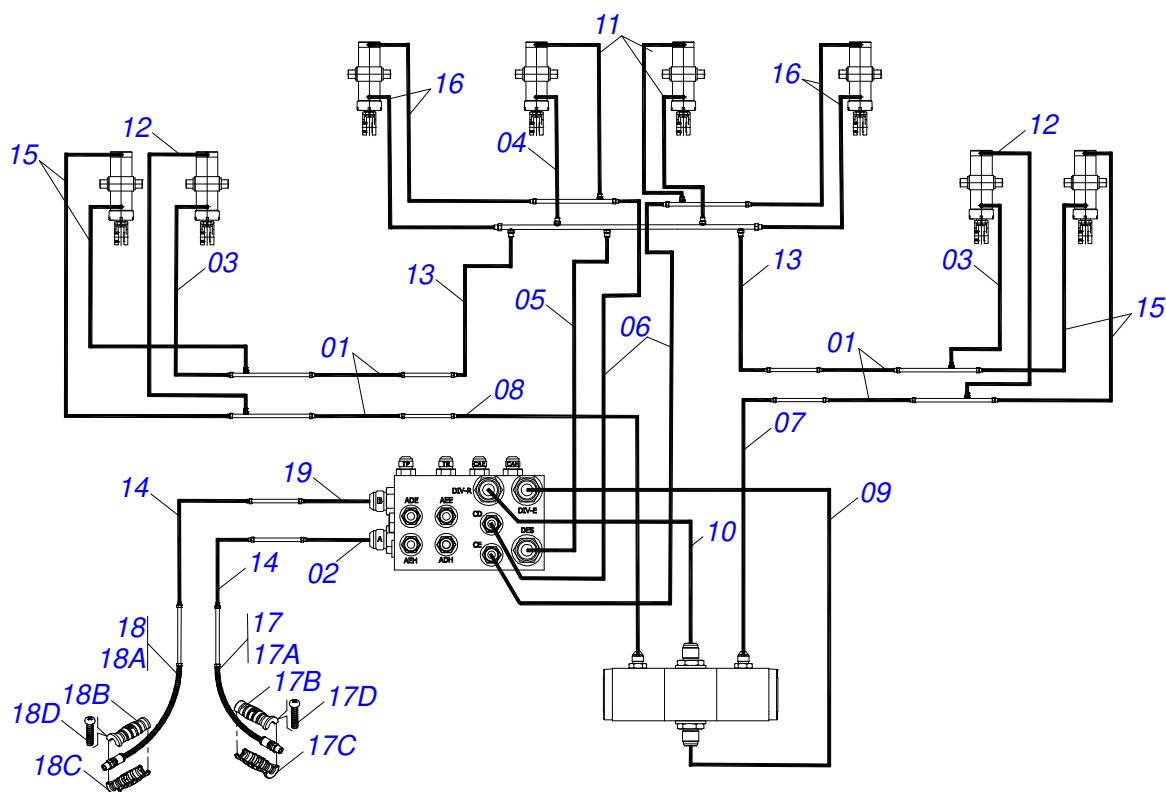


Item	Code	Description	See page	QT
01	0501080105	3/8 X 700 TR-TR HOSE		04
02	0501080232	3/4" X 1100 TR-TR HOSE		01
03	0501080599	3/8 X 650 TR-TC HOSE		02
04	0501080065	3/8 X 1200 TC-TC HOSE		01
05	0501080175	3/4 X 900 TR-TC HOSE		01
06	0501080055	3/8 X 1000 TR-TC HOSE		02
07	0501080352	3/8 X 1400 TR-TR HOSE		01
08	0501080714	3/8 X 1600 TR-TC HOSE		01
09	0501081288	3/4 X 500 TR-TC HOSE		01
10	0501082222	HOSE		01
11	0501080675	3/8 X 1000 TC-TC 180G HOSE		03
12	0501080700	3/8 X 650 TC-TC HOSE		02
13	0501081254	3/8" X 900 TR-TC HOSE		02
14	0501082204	3/4 X 2750 TR-TR HOSE		02
15	0501081837	3/8 X 700 TR-TC HOSE		04
16	0501081838	3/8 X 1000 TR-TC HOSE		04
17	0521053712	3/4 X 5900 TR-TM BLACK/RED HOSE		01
17A	0501082205	3/4 X 5900 TR-TM HOSE		01
17B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
17C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
17D	0503018952	PLASTIC BOLT		06
18	0521053707	3/4 X 5900 TR-TM BLACK/BLUE HOSE		01
18A	0501082205	3/4 X 5900 TR-TM HOSE		01
18B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
18C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
18D	0503018952	PLASTIC BOLT		06
19	0501080164	3/4 X 1250 TR-TC HOSE		01

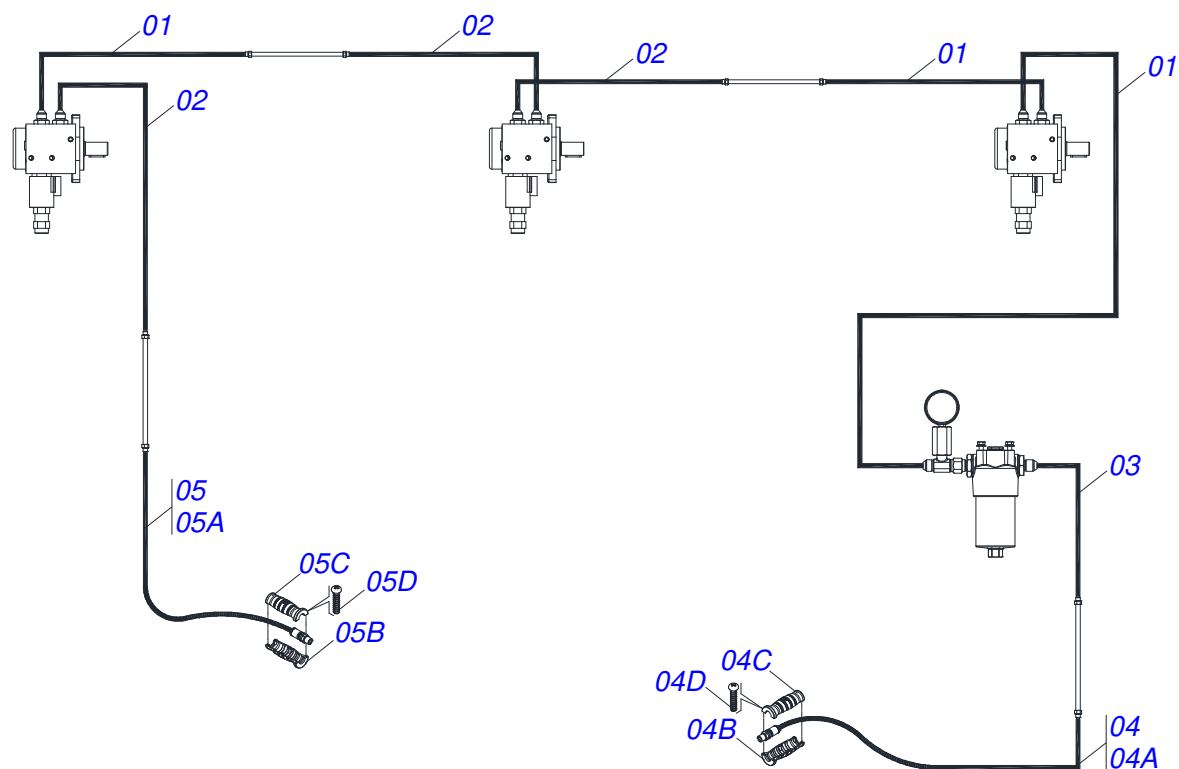


Item	Code	Description	See page	QT
01	0501081834	1/2 X 1500 TR-TC HOSE		03
02	0501081041	1/2 X 2400 TR-TC HOSE		03
03	0501080060	1/2 X 1600 TR-TC HOSE		01
04	0521052567	1/2 X 5900 TR-TM GRAY/RED HOSE		01
04A	0501081841	1/2 X 5900 TR-TM HOSE		01
04B	0503034489	HYDRAULIC HOSE GAUNTLET (GRAY)		01
04C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
04D	0503018952	PLASTIC BOLT		06
05	0521052566	1/2 X 5900 TR-TM GRAY/BLUE HOSE		01
05A	0501081841	1/2 X 5900 TR-TM HOSE		01
05B	0503034489	HYDRAULIC HOSE GAUNTLET (GRAY)		01
05C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
05D	0503018952	PLASTIC BOLT		06

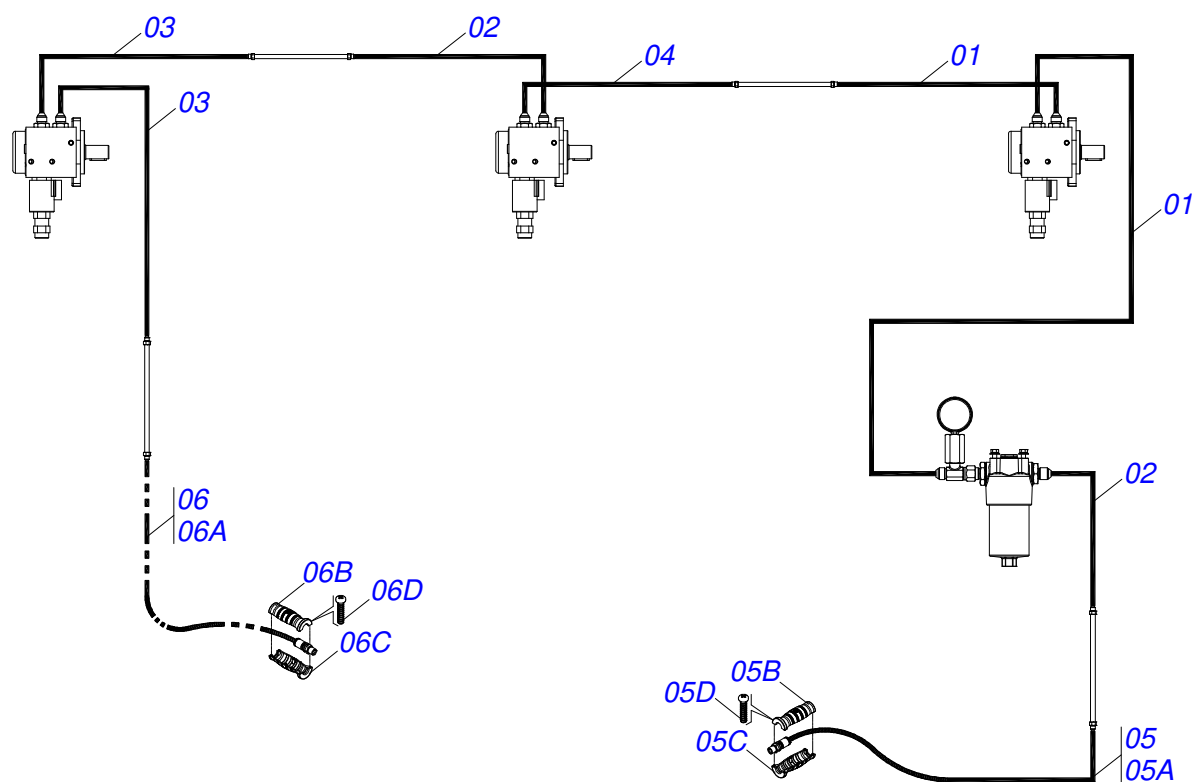


Item	Code	Description	See page	QT
01	0501080094	1/2 X 1800 TR-TC HOSE		02
02	0501081834	1/2 X 1500 TR-TC HOSE		02
03	0501080272	1/2 X 2700 TR-TC HOSE		02
04	0501081041	1/2 X 2400 TR-TC HOSE		01
05	0521052567	1/2 X 5900 TR-TM GRAY/RED HOSE		01
05A	0501081841	1/2 X 5900 TR-TM HOSE		01
05B	0503034489	HYDRAULIC HOSE GAUNTLET (GRAY)		01
05C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
05D	0503018952	PLASTIC BOLT		06
06	0521052566	1/2 X 5900 TR-TM GRAY/BLUE HOSE		01
06A	0501081841	1/2 X 5900 TR-TM HOSE		01
06B	0503034489	HYDRAULIC HOSE GAUNTLET (GRAY)		01
06C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
06D	0503018952	PLASTIC BOLT		06

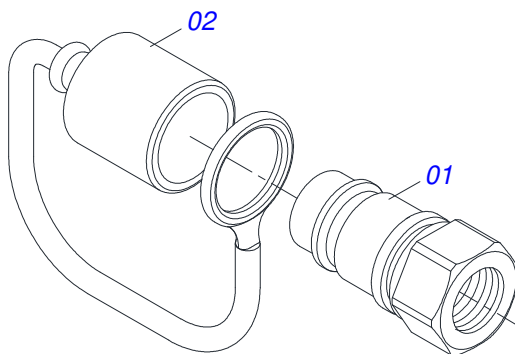

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

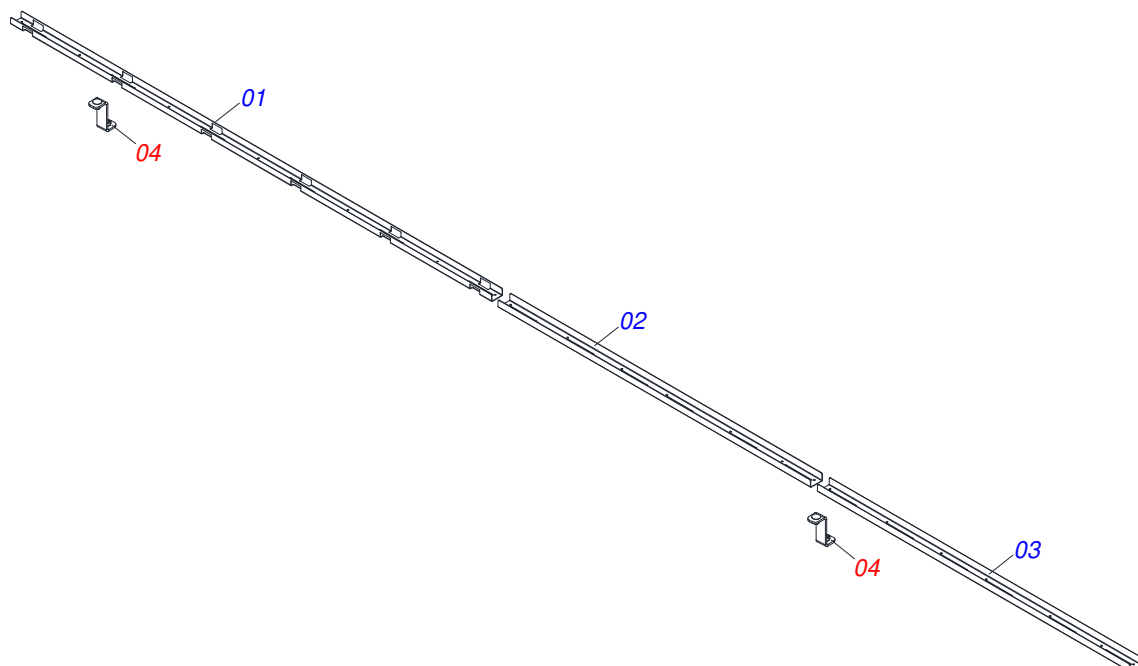


Item	Code	Description	See page	QT
001	0581017745	TROUGH 30 X 55 X 2420		01
002	0581017744	GUTTER 30 X 55 X 1530		01
003	0581018654	24 X 46 X 1000 GUTTER		02
004	0521055102	BIGGEST FULL GUTTER SUPPORT	56	04

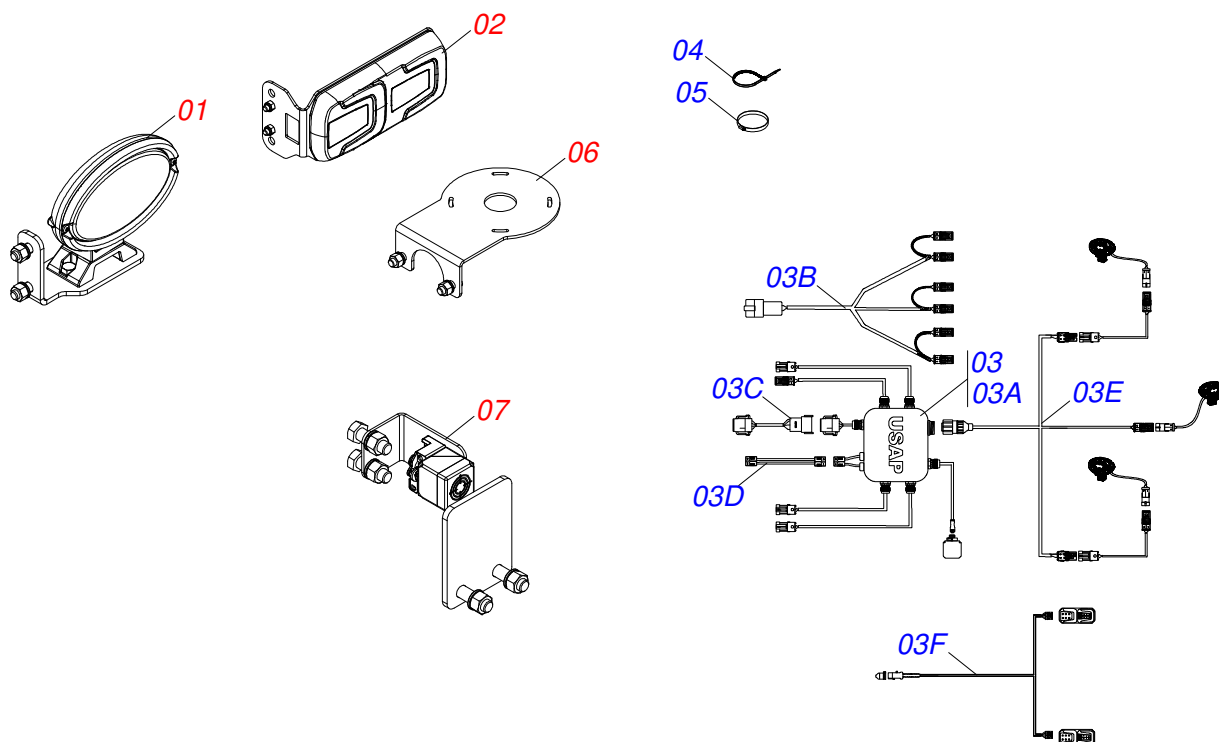


Item	Code	Description	See page	QT
01	0521054283	HEADLIGHT WITH SUPPORT	148	03
02	0521059393	LED FLASHLIGHT WITH FIXATION SUPPORT	149	02
03	0521057879	ECB ELECTRIC ASSEMBLY (ASSEMBLED)		01
03A	0503019329	COMMAND PANEL		01
03B	0503019061	WHIP		01
03C	0503019060	WHIP		01
03D	0503019390	WHIP BLOCK COMMAND IMPLEMENT		01
03E	0503019572	WHIP 3 HEADLIGHTS		01
03F	0503019694	LED LANTERN EXTENSOR WHIP 15M 4320.8 BCE		01
04	0503018829	NYLON CLAMP		20
05	0503019902	NYLON CLAMP 7,8X1,8X225 MM		80
06	0521055426	ASSY ELECTRICAL BOX SUPPORT	150	01
07	0521052143	CLUTCH INDUCTIVE SENSOR ASSEMBLY	151	01

HEADLIGHT WITH SUPPORT

0521054283

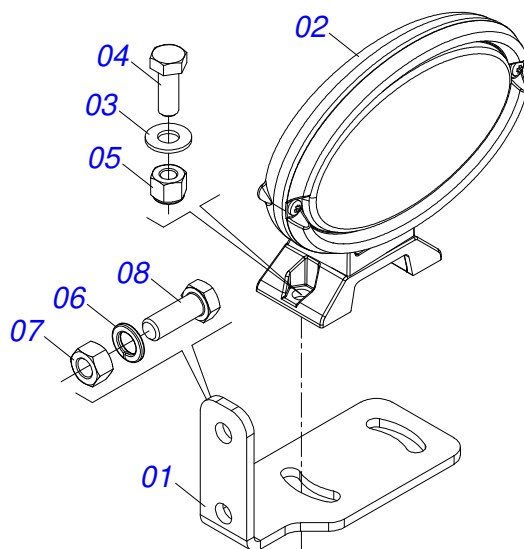


Item	Code	Description	See page	QT
01	0581018571	REAR HEADLIGHT SUPPORT		01
02	0503018738	LIGHTHOUSE		01
03	0501010694	FLAT WASHER		02
04	0503010358	5/16" X 5/8" BOLT		02
05	0503013759	NUT		02
06	0503010025	3/8" SPRING WASHER		02
07	0503010026	3/8" NUT		02
08	0503010237	3/8" X 1" BOLT		02

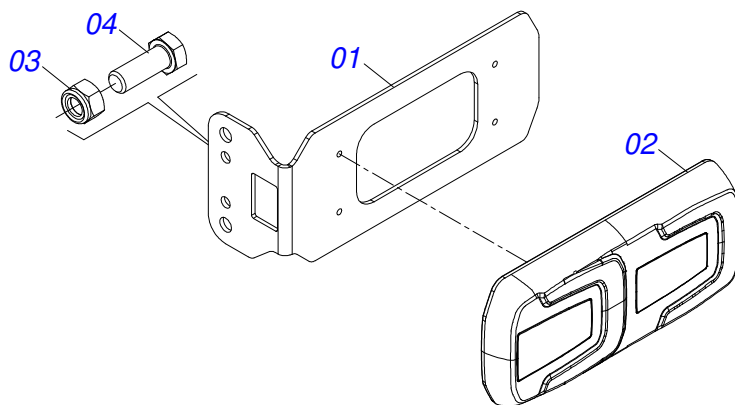


Item	Code	Description	See page	QT
01	0591013259	LED FLASHLIGHT SUPPORT		01
02	0503019579	LED LANTERN		01
03	0503013357	3/8" SELF-ADJUSTING NUT		02
04	0503010237	3/8" X 1" BOLT		02

ASSY ELECTRICAL BOX SUPPORT


0521055426

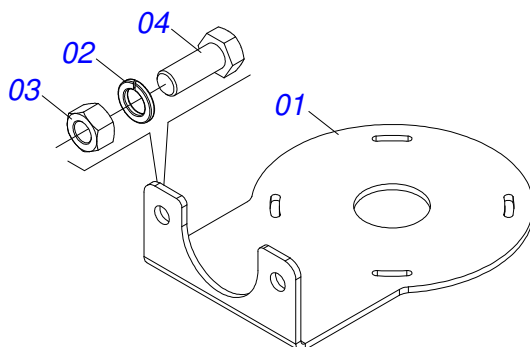


Item	Code	Description	See page	QT
01	0581014432	ELECTRIC BOX SUPPORT		01
02	0503010019	1/2" SPRING WASHER		02
03	0503010060	1/2" NUT		02
04	0503014007	1/2" X 1-1/4" BOLT		02

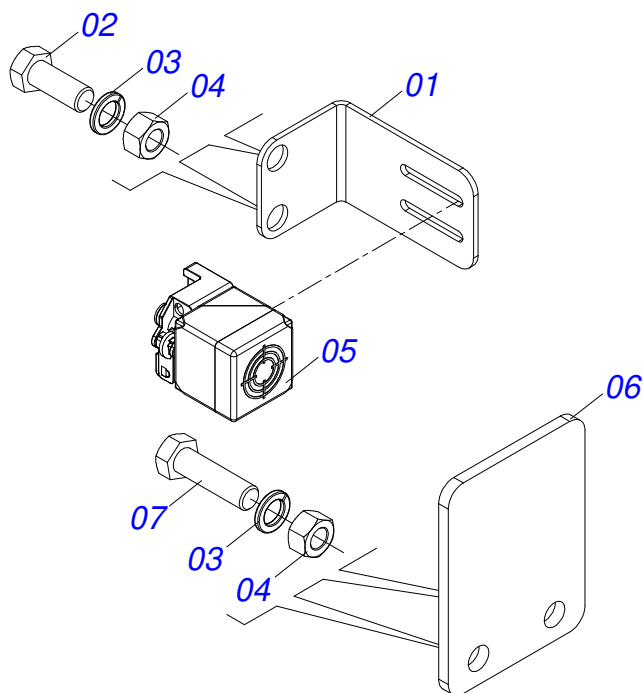


Item	Code	Description	See page	QT
01	0581016487	SENSOR SUPPORT		01
02	0501010063	1/2" X 1-1/2" BOLT		02
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2" NUT		04
05	0503019085	INDUCTIVE SENSOR		01
06	0571015148	PLATE SENSIBLES		01
07	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		02

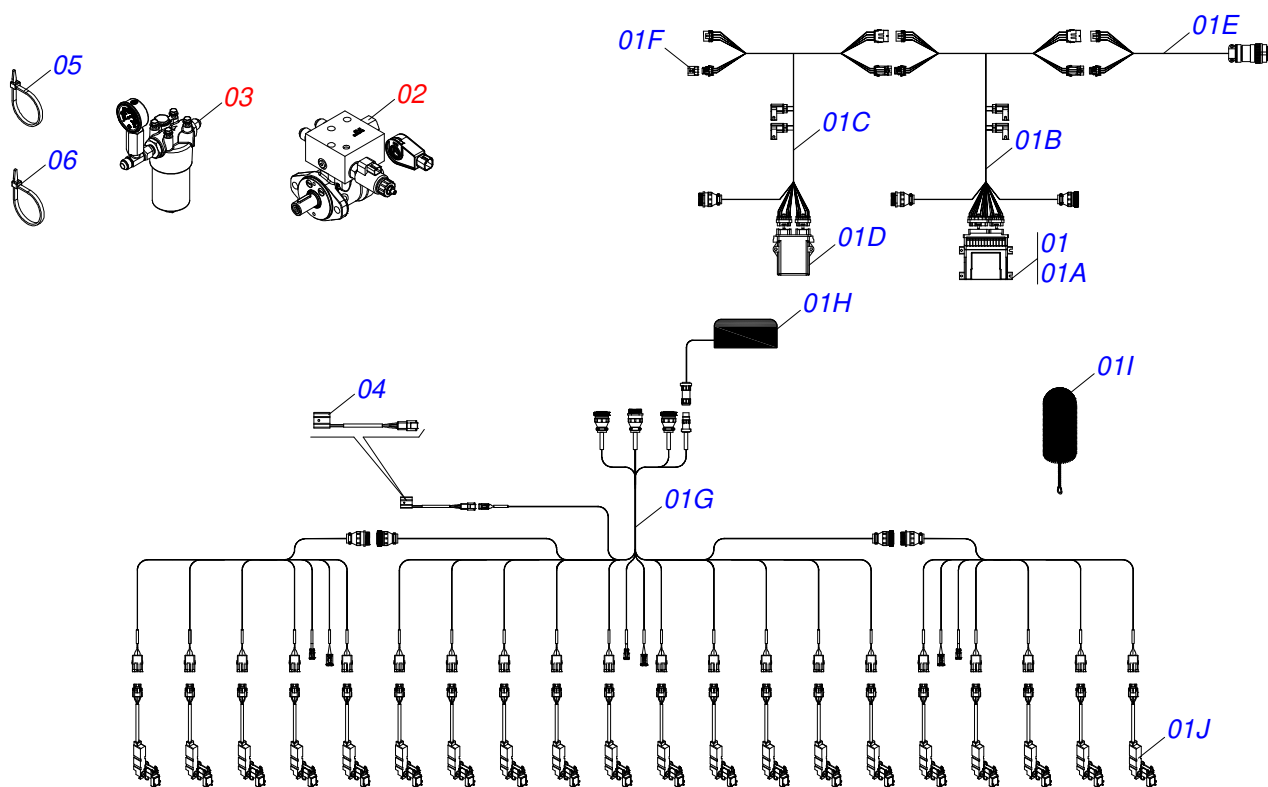

Item	Code	Description	See page	QT
01	0503063256	KIT INTELLIAG 20L 45/50 WITH MONITOR AND 0100XXXXX		01
01A	0503015065	MASTER CONTROL MODULE		01
01B	0503015066	CABLE CONTROL MASTER MODULE		01
01C	0503015209	MODULES WSMB 18L ISOBUS 4679811100S1		01
01D	0503015210	CABLE MODULO WSMB ISOBUS 467981200		01
01E	0503016321	ISOBUS CONNECTION CABLE		01
01F	0503015071	CONCTOR		01
01G	0503062521	CABLE ASSY		01
01H	0503017443	ANTENNA GPS PM 400		01
01I	0503017031	CLEANING BRUSH		01
01J	0503015218	SENSOR FOTOELE PM 400		20
02	0521056496	MOTOR EMD 80 WITH BLOCK BLFP2618	153	03
03	0511056972	FILTER HYDAC	154	01
04	0503019291	SUPPORT SENSOR		01
05	0503013100	NYLON CLAMP		100
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		300

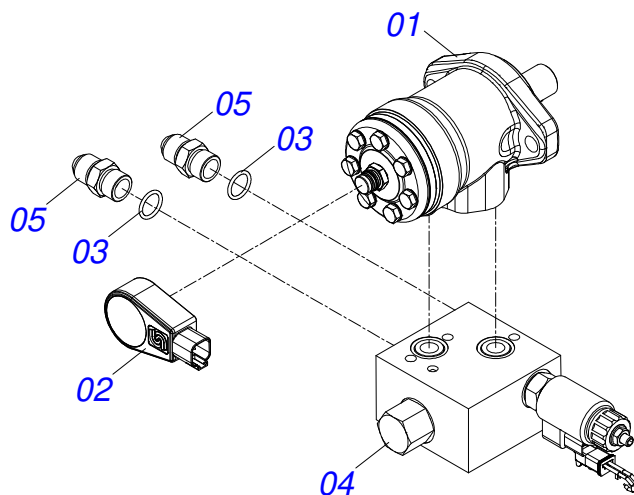


Item	Code	Description	See page	QT
01	0503018768	MOTOR OMP 80		01
02	0503018769	MOTOR SPEED SENSOR		01
03	0503010045	O'RING		02
04	0503019320	VALVE		01
05	0501010590	NIPPLE		02

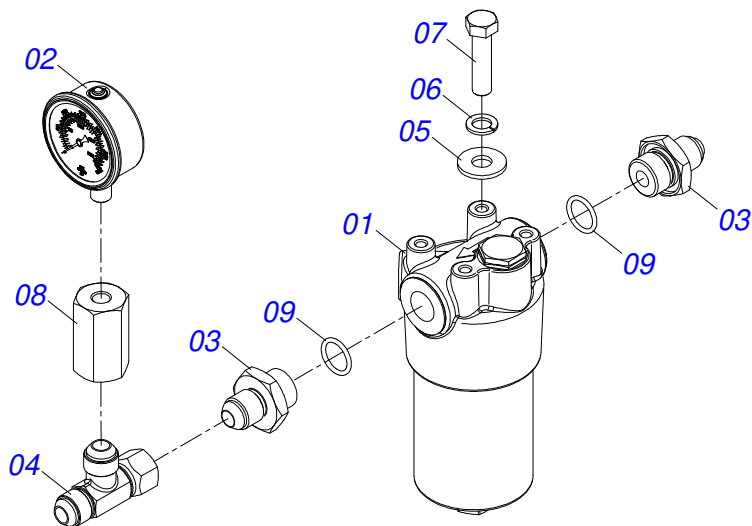


Item	Code	Description	See page	QT
01	0503016376	FILTER SPRING		01
02	0503016336	PRESSURE GAUGE		01
03	0581011416	7/8"NF UNF NIPPLE		02
04	0503012341	T 7/8" ADAPOR GIRAT NUT		01
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		04
07	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
08	0571016236	HIDRAULIC ADAPTER		01
09	0503014724	2-215 N 3006-9B O'RING		02



Item	Code	Description	See page	QT
01	0503034003	SERIAL NUMBER TAG 61 X 118		01
02	0503010001	3.2 X 5.5 RIVET		04
03	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 NOZZLES)		08
04	0503034563	ADHESIVE LABEL		08
05	0503033853	ADHESIVE LABEL		02
06	0503031425	ADHESIVE LABEL ATTENTION		02
07	0503034679	ADHESIVE LABEL		03
08	0503033597	ADHESIVE		02
09	0503031087	ADHESIVE LABEL		01
10	0503033021	ADHESIVE LABEL ISOBUS INSIDE 200MM		02
11	0503033022	ADHESIVE LABEL ISOBUS INSIDE 400MM		02
12	0503033765	ADHESIVE LABEL APT MARCHESAN LARGER		04
13	0503033764	ADHESIVE LABEL APT MARCHESAN LOWER		01
14	0503034471	ADHESIVE LABEL		01
15	0503034651	ADHESIVE LABEL		02
16	0503034683	ADHESIVE LABEL		02
17	0503034534	ADHESIVE LABEL		01
18	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02

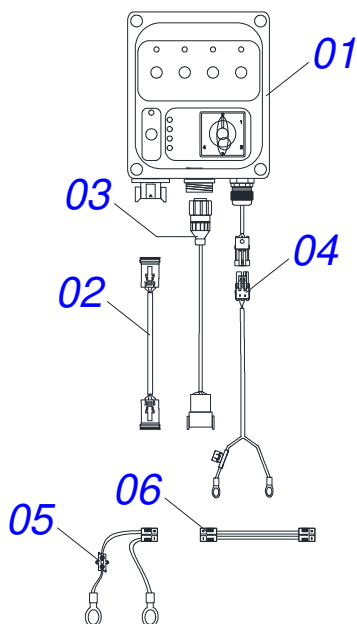

Item	Code	Description	See page	QT
01	0503019327	CONTROL PANEL		01
02	0503019054	WHIP		01
03	0503019059	WHIP		01
04	0503019052	WHIP		01
05	0503019328	WHIP		01
06	0503019057	WHIP		01

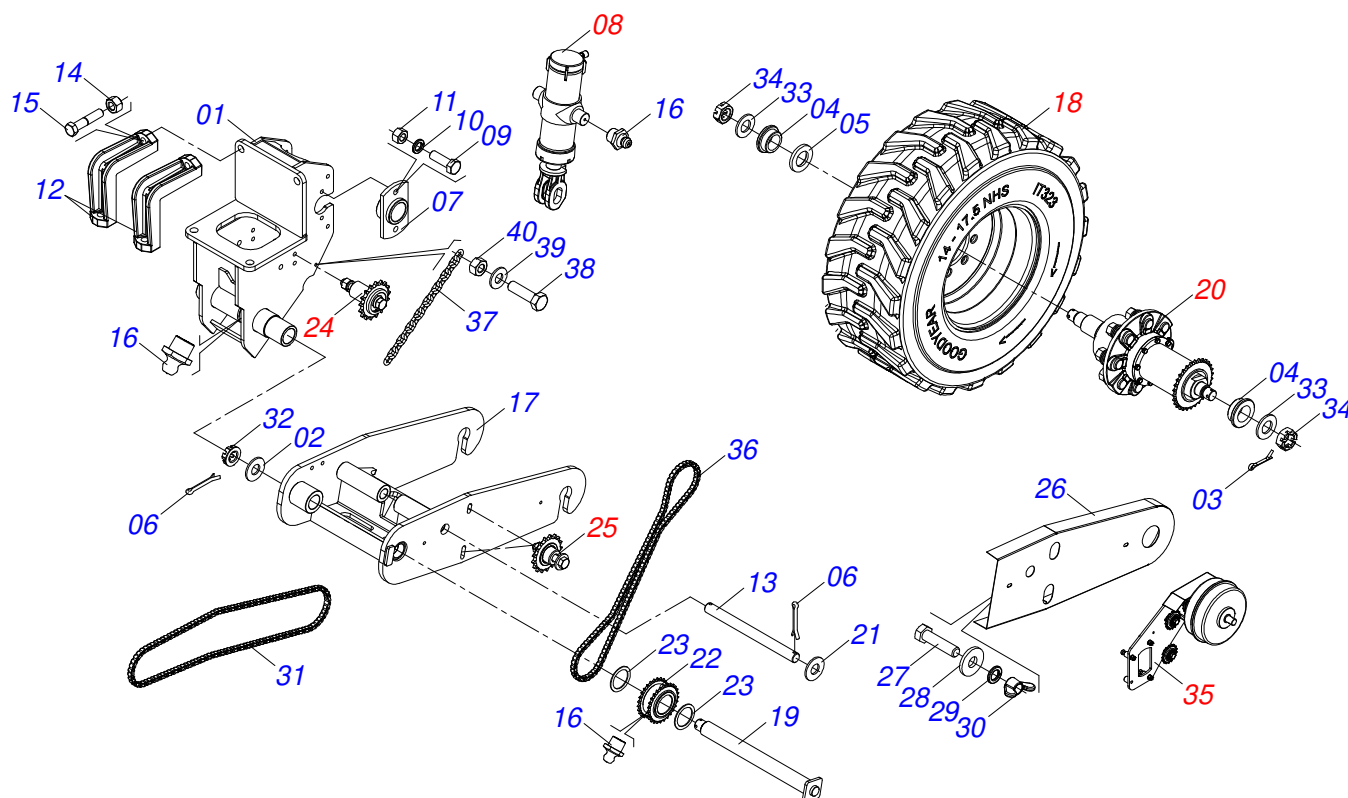

Item	Code	Description	See page	QT
01	0521064543	WHEEL SUPPORT		01
02	0561019929	FLAT WASHER		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		02
04	0551014511	CARRYING WEELS AXLE SLEVE GUIDES		02
05	0551014508	FLAT WASHER		01
06	0503010523	1/4" X 2" COTTERPIN		03
07	0521069575	FLANGE CYLINDER HYDRAULIC FIXER		02
08	0521054953	HYDRAULIC CYLINDER 50,80 X 127,00 X 205	21	01
09	0503010920	1/2" X 1.1/2" BOLT		04
10	0503010019	1/2" SPRING WASHER		04
11	0503010060	1/2" NUT		04
12	0502012731	WHEEL HOLDER		02
13	0581017245	AXLE BODY		01
14	0503011075	3/4" UNC NUT		04
15	0503012334	3/4" UNC X 3.1/2" BOLT		04
16	0503010002	1800 GREASE FITTING		04
17	0521064550	CARRYING-WHEELS FORK		01
18	0521054068	WHEEL WITH TIRE 12 X 16.5 - 12 CANVAS (RIGHT)	22	01
19	0521064558	CARRYING-WHEELS PIVOT SHAFT		01
20	0511054491	WHEEL WITHOUT TIRE WITH 27Z GEAR	23	01
21	0531012874	FLAT WASHER		02
22	0511068422	WHEEL GEAR DOBLE		01
23	0551018571	FLAT WASHER		02
24	0511054463	WHEEL TENSIONER SUPORT CENTRAL	24	01
25	0511054464	WHEEL FORK TENSIONER	25	02
26	0561019941	RIGHT PROTECTIVE CAP WHEELS		01
27	0503010849	3/8" X 1-1/2" BOLT		02
28	0501013518	FLAT WASHER		02
29	0503010025	3/8" SPRING WASHER		02
30	0503010209	3/8" UNC BUTTERFLY NUT		02
31	0503016419	50-1 CHAIN X 128 LINK + REDUCION		01


LEFT WHEEL WITH TRANSMISSION

0521055327


Item	Code	Description	See page	QT
32	0501010630	1.1/2" CASTLE NUT		01
33	0501017779	32 X 60 X 4.75 FLAT WASHER		02
34	0503011052	1.1/4" X 0.77" CASTLE NUT		02
35	0511054501	TRANSMISSION CAMBIO LEFT	158	01
36	0503014857	50-1 X CHAIN X 122 LINK + REDUCION		01
37	0503033335	CURRENT 6 X 21 ELOS		01
38	0503010882	BOLT		01
39	0501010694	FLAT WASHER		02
40	0503010337	5/16" NUT		01

TRANSMISSION CAMBIO LEFT


0511054501

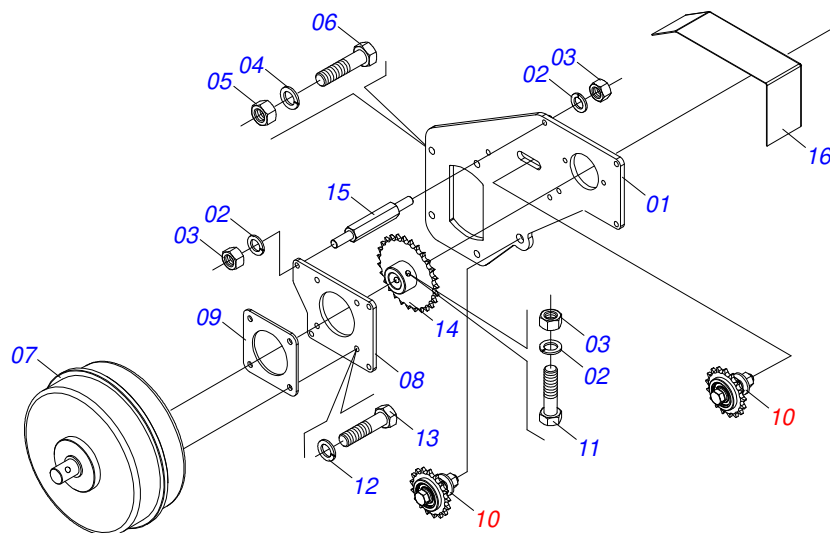


Item	Code	Description	See page	QT
01	0521064556	SUPPORT ASSY TRANSMISSION WHEEL SIDE		01
02	0503010025	3/8" SPRING WASHER		13
03	0503010026	3/8" NUT		11
04	0503010019	1/2" SPRING WASHER		03
05	0503010060	1/2" NUT		03
06	0503010741	1/2" X 2-3/4" BOLT		03
07	0503062231	CLUTCH		01
08	0571015139	FIXER PLATE		01
09	0571015138	SIDE CLUTCH CHOCK		01
10	0511054461	STRETCHER TOP TRANSMISSION SWIRLED	27	02
11	0503011268	3/8" X 2-1/2" BOLT		01
12	0503013542	M10 SPRING WASHER		04
13	0503010188	M10 X 1,5 X 30 BOLT		01
14	0511069511	27Z GEAR		02
15	0571015152	FIXER TRANSMISSION SIDE LEFT		04
16	0571015154	PROTECTION TRANSMISSION LEFT		04

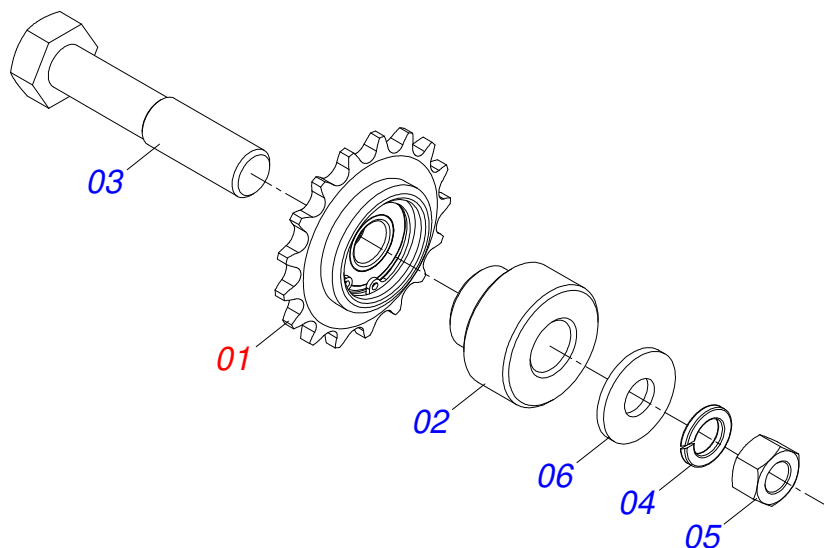


Item	Code	Description	See page	QT
01	0501056573	17Z GEAR ASSY	161	01
02	0591016137	GLOVE 21 X 31.75 X 24.90		01
03	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0511017302	FLAT WASHER		01

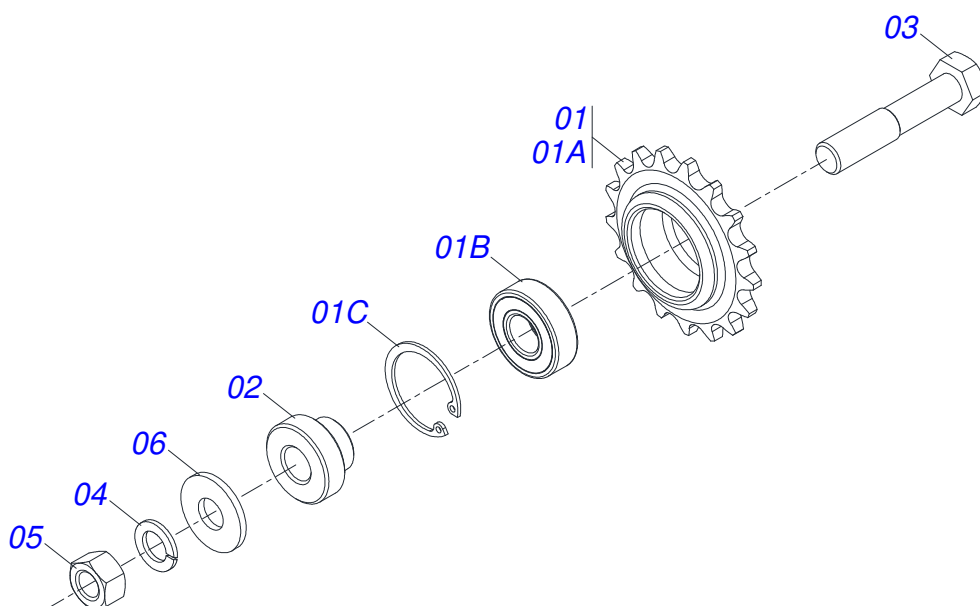


Item	Code	Description	See page	QT
01	0501056573	17Z GEAR ASSY	161	01
01A	0502012367	17Z X P 1/2" GEAR INTERM		01
01B	0503012882	BEARING		01
01C	0503011945	503050 CLAMPING RING (FOR AXLE)		01
02	0571015168	SLEEVE NYLON Ø21 X Ø31,75 X 20		01
03	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0511017302	FLAT WASHER		01

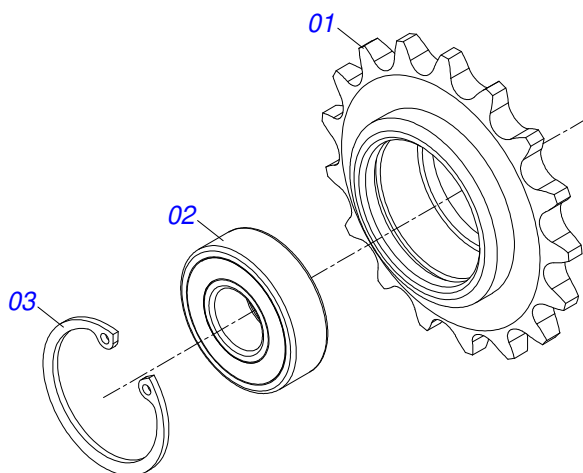

Item	Code	Description	See page	QT
01	0502012367	17Z X P 1/2" GEAR INTERM		01
02	0503019355	BEARING 6202 2RS1		01
03	0503011945	503050 CLAMPING RING (FOR AXLE)		01

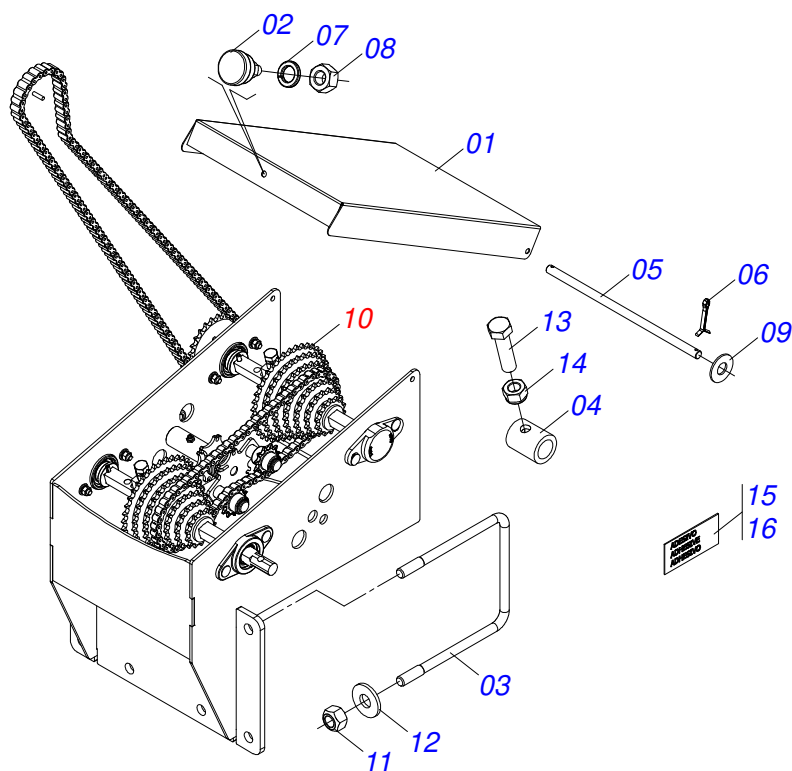


Item	Code	Description	See page	QT
01	0551011625	PROTECTION COVER		01
02	0503010386	CABLE		01
03	0551015037	5/8" UNC X 210 X 198 FASTENER		02
04	0551018630	CARDAN SHAFT GUIDES SLEEVE		01
05	0551018629	GEAR BOX COVER FIXER ROD		01
06	0503010257	1/8" X 1" COTTERPIN		02
07	0503010179	LOCK WASHER		01
08	0503010337	5/16" NUT		01
09	0501013518	FLAT WASHER		02
10	0521058941	LEFT CHANGE INVERTED SEMI MOUNTED	163	01
11	0503012412	5/8 UNC SELF LOCKING NUT		04
12	0501012140	FLAT WASHER		04
13	0503011268	3/8" X 2-1/2" BOLT		01
14	0503013357	3/8" SELF-ADJUSTING NUT		01
15	0503034417	LETTER ADHESIVE LABEL		01
16	0503032986	ADHESIVE LABEL		01

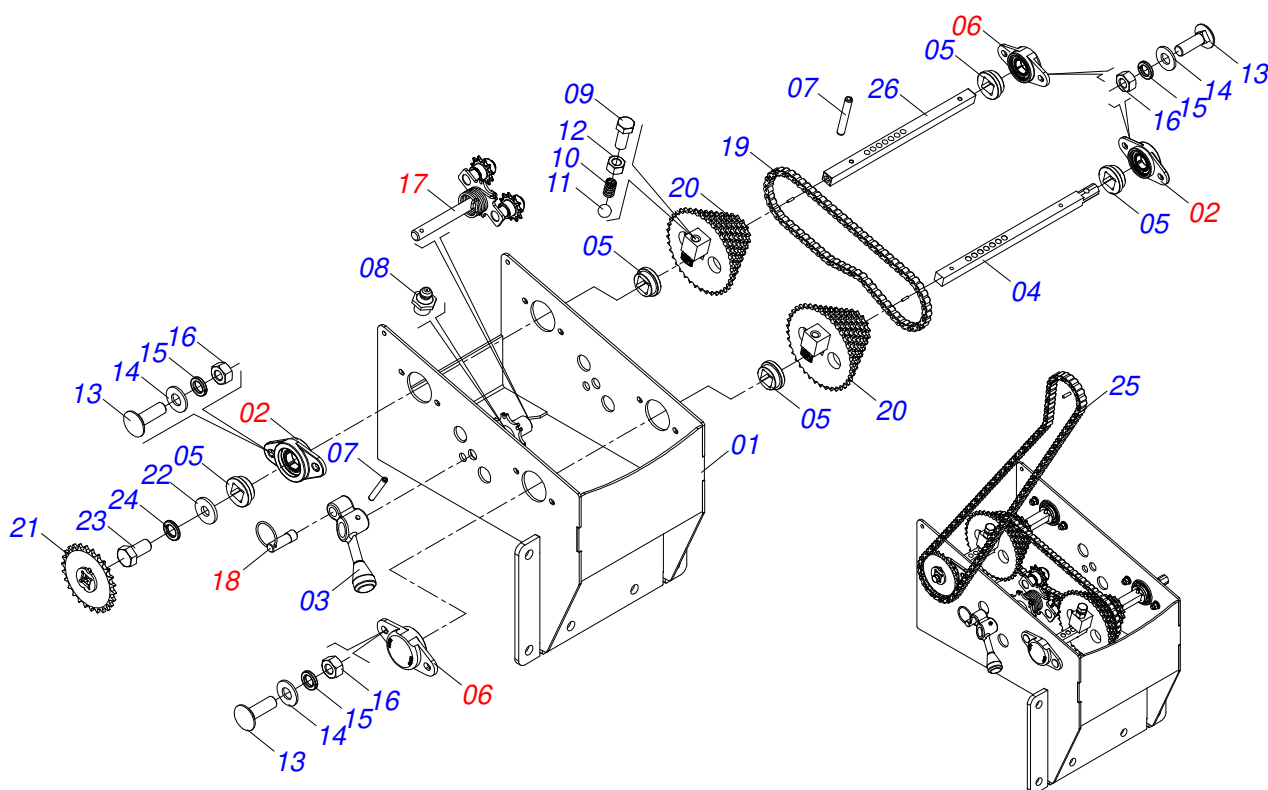


Item	Code	Description	See page	QT
01	0531060362	LEFT SIDE EXCHANGE FERTILIZER SUPPORT		01
02	0501056444	BEARING WITH ROLLING	32	02
03	0502011758	REAR TENSIONER LEVER		01
04	0551018627	SIDE GEAR BOX DRIVER AXLE		01
05	0503030303	SUPPORT WASHER		05
06	0501056271	GEARBOX CLOSED BEARING	33	02
07	0503010292	0.2" X 1.6" SPRING PIN		05
08	0503010002	1800 GREASE FITTING		01
09	0503010395	1/2" X 1-1/4" BOLT		02
10	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		02
11	0503012389	1/2 BALL		02
12	0503010060	1/2" NUT		02
13	0503011953	5/16" X 1" BOLT		08
14	0501010694	FLAT WASHER		08
15	0503010179	LOCK WASHER		08
16	0503010337	5/16" NUT		08
17	0501052778	CHAIN TENSIONER ASSY	113	01
18	0501048790	AXLE WITH RING	35	01
19	0503012204	40-1 CHAIN X 82 LINK + RED		01
20	0511060396	DRIVE/DRIVEN AXLE CONE		02
21	0511067501	26Z GEAR		01
22	0501010984	FLAT WASHER 10,50 X 27 X 3,00 ZN		01
23	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
24	0503010025	3/8" SPRING WASHER		01
25	0503019312	40-1 X 51 CHAIN LINK + MENDING		01
26	0591015004	3/4 MOVED SHAFT INVERTED FERTILIZER CONE		01

FILTER SUPPORT


0521054349

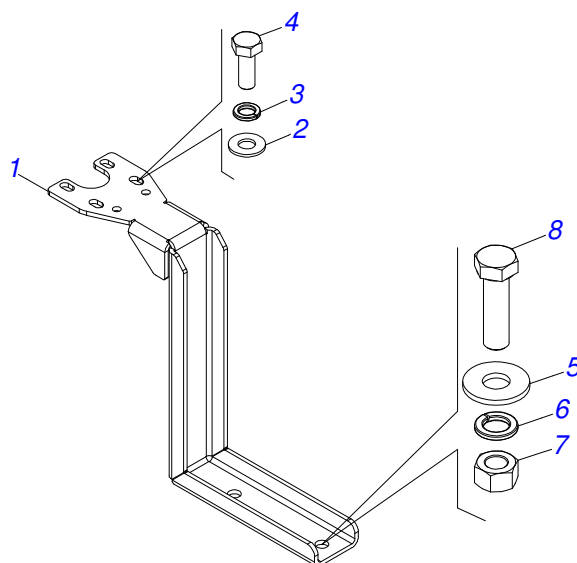


Item	Code	Description	See page	QT
001	0581018644	FILTER SUPPORT		01
002	0501010694	FLAT WASHER		04
003	0503010179	LOCK WASHER		04
004	0503015114	BOLT		04
005	0511017302	FLAT WASHER		02
006	0503010019	1/2" SPRING WASHER		02
007	0503010060	1/2" NUT		02
008	0503011082	C1/2" X 1.3/4" SCREW		02

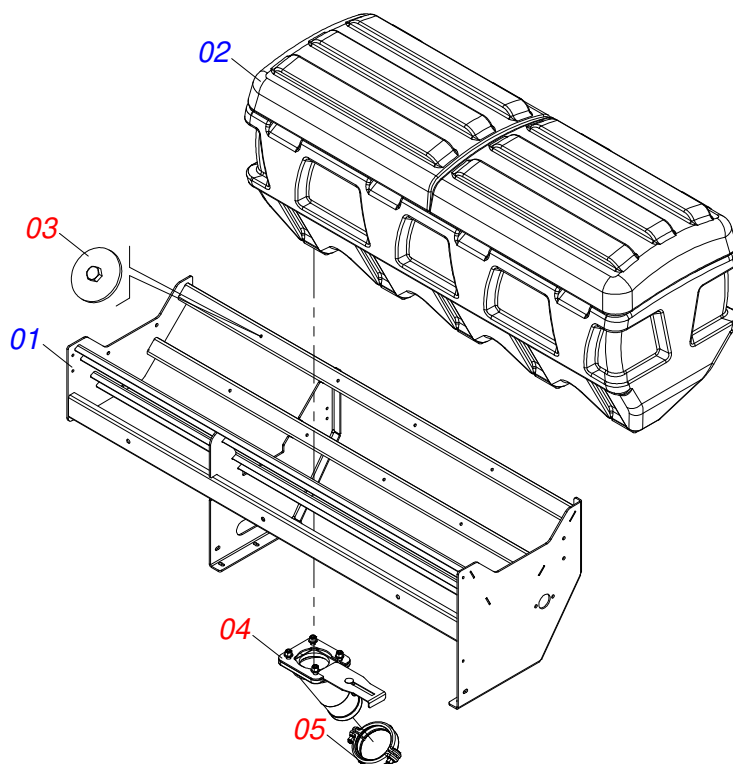


Item	Code	Description	See page	QT
01	0531061192	LEFT SEED SUPPORT 05 MOUTH		01
02	0503062962	SILO SEED 05 ASSY MOUTH		01
03	0521051407	FIXER SILO FERTILIZER	47	08
04	0521055365	SEED CONDUCTOR	48	05
05	0521050525	FIXER FERTILIZER CONDUCTOR	100	05

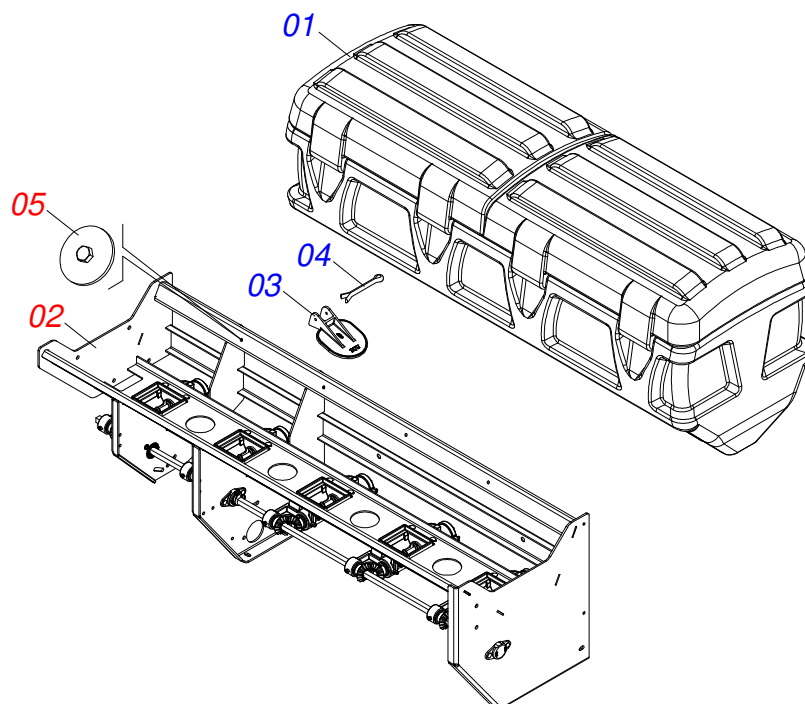


Item	Code	Description	See page	QT
01	0503062391	FERTILIZER HOPPER		01
02	0521058776	LEFT FERTILIZER 5 MOUTH SUPPORT	168	01
03	0503034396	FERTILIZER SIDE COVER		05
04	0503010362	1/8 X 1.1/4 COTTERPIN		05
05	0521051407	FIXER SILO FERTILIZER	47	08

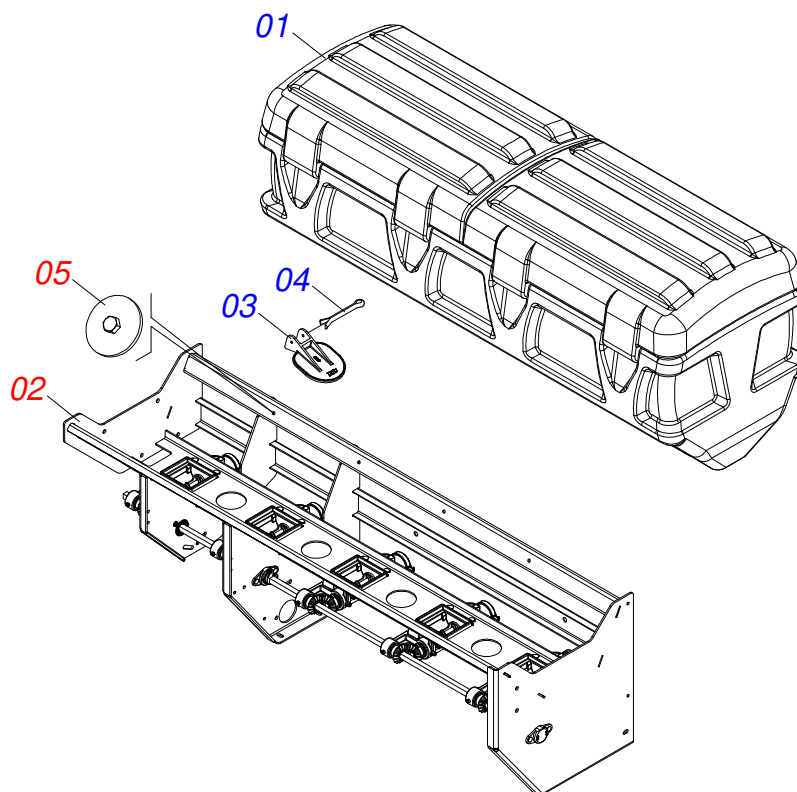

Item	Code	Description	See page	QT
01	0503062391	FERTILIZER HOPPER		01
02	0521058776	LEFT FERTILIZER 5 MOUTH SUPPORT	168	01
03	0503034396	FERTILIZER SIDE COVER		05
04	0503010362	1/8 X 1.1/4 COTTERPIN		05
05	0521051407	FIXER SILO FERTILIZER	47	12

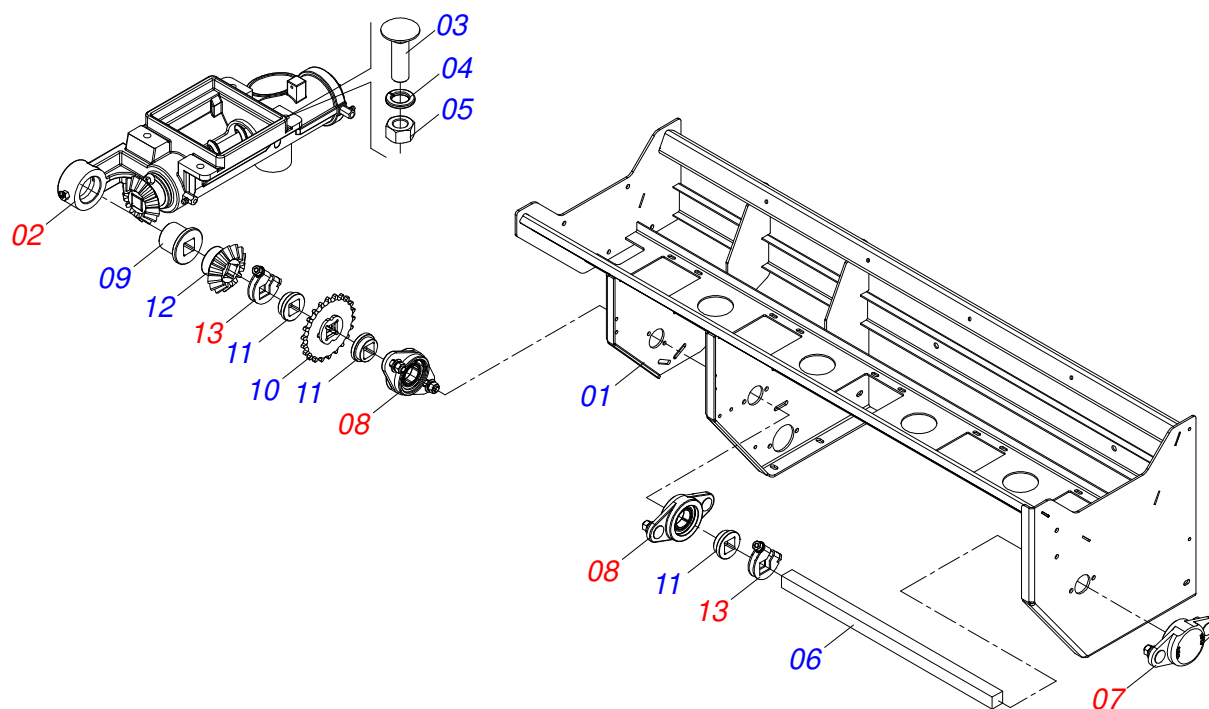

Item	Code	Description	See page	QT
01	0531061195	LEFT FERTILIZER 05 MOUTH SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	124	05
03	0501010942	3/8" X 1-1/4" BOLT		20
04	0503010025	3/8" SPRING WASHER		20
05	0503010026	3/8" NUT		20
06	0561018365	SQUARE SHAFT		01
07	0521054313	CLOSED BEARING	45	01
08	0521054282	BEARING	44	02
09	0503030275	AGRICULTURAL BEARING		05
10	0502012990	CONICA 14Z SQUARE GEAR		05
11	0503030303	SUPPORT WASHER		03
12	0511061759	22Z P12,70 FQ 3/4" GEAR		01
13	0501053788	3/4 SQUARE AXLE FASTENER	43	02

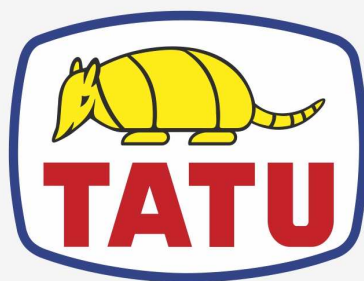

MARCHESAN

Technical Publications | Elaboration and Revision

ALESSANDRA PATRICIA KAWAHARA CARRILI

www.marchesan.com.br

