

ROW CROP PLANTERS

PST DUO - FRAME 4880/6350 (FROM 04/2022)

Code: 0501093291
Series: S-0119
Revision: 00
Date Revision: ABRIL/2022

PARTS CATALOGUE



MARCHESAN



PRODUCTS

Code	Description
0111230241	PST DUO 4880/10E500 CI MH DC20 S-0119
0111230243	PST DUO 4880/10E500 CPERA D/HDA MH DC20 S-0119
0111230245	PST DUO 6350/13E500 CPRA H CI MH S-0119

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.



MARCHESAN

INDEX

0909096248	ASSY FRAME - 4880/6350	1
0521054576	FRAME WITH ARTICULATION 4880	2
0521054579	FRAME WITH ARTICULATION 6350	3
0521054567	RIGHT FRAME WITH WHEELED AXLE 4880	4
0521054569	FRAME LEFT WITH SHAFT WHEELED 4880	5
0521054574	RIGHT FRAME WITH WHEELED AXLE 6350	6
0521054575	FRAME LEFT WITH SHAFT WHEELED 6350	7
0511058667	SPRING FLOW ENSEMBLY	8
0521058397	WHEELSET WITH SPRING TRACTION	9
0521058395	WHEEL SUPPORT ASSY WITH TRANSMISSION	10
0501058241	WHEEL SUPPORT CHAIN TENSIONER	11
0521058393	WHEEL WITH PNEU 7.00X16 14L PR TT WITH TRANSMISSION	12
0501058240	WHEEL FASTENER WITH TENSIONER	13
0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	14
0501058244	WHEEL FIXED CHAIN TENSIONER	15
0501058242	WHEEL MOBILE CHAIN TENSIONER	16
0521054561	CYLINDER ASSEMBLY	17
0511058406	HYDRAULIC CYLINDER	18
0511056742	ASSY SYSTEM HYDRAULIC 4880/5720/5950	19
0511056808	ASSY SYSTEM HYDRAULIC 6350	20
0501054694	FLOW DIVIDING VALVE ASSY	21
0501053834	MALE QUICK COUPLER	22
0909095143	HEADER ASSY	23
0511055096	TRACTOR HITCH	24
0521053310	LEFT EXTENSION HEADER 36.00 - 4880/5720/5950	25
0521053311	RIGHT EXTENSOR HEAD 36.00 - 4880/5720/5950	26
0511052311	3 POINT TURNBUCKLE	27
0511056736	HOSE SUPPORT	28
0521054526	SILO FERTILIZER ASSY 4880	29
0521054540	SILO FERTILIZER ASSY 6350	30
0521054541	SILO FERTILIZER RIGHT SUPPORT 6350	31
0521054542	LEFT FERTILIZER BEAM SUPPORT 6350	32
0521054528	SILO FERTILIZER RIGHT SUPPORT 4880	33
0521054527	LEFT FERTILIZER BEAM SUPPORT 4880	34
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	35
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	36
0501053788	3/4 SQUARE AXLE FASTENER	37
0511056807	LEFT TRANSMISSION ASSY	38
0511056741	LEFT TRANSMISSION ASSEMBLY - 4880	39
0501052560	MOTOR AXLE SIGNAL	40
0511051434	TRANSMISSION ACTUATOR	41
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	42
0521043317	LEFT GEAR BOX ASSY	43
0501058213	LH GEAR BOX	44
0511059266	CLOSED BEARING	45
0501056271	GEARBOX CLOSED BEARING	46
0501056443	GEAR HOUSING BEARING	47
0501056444	BEARING WITH ROLLING	48
0501048790	AXLE WITH RING	49
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	50
0511054363	CHAIN TENSIONER	51
0501055112	MICRO GRANULATED CHAIN TENSIONER	52
0501058234	LOWER CHAIN TENSIONER	53
0521055207	TOP CURRENT STRETCHER	54
0501058236	BEARING WITH 21Z GEAR	55



MARCHESAN

INDEX


0501058237	16Z GEAR BEARING	56
0511056740	RIGHT TRANSMISSION ASSY - 4880	57
0511056806	RIGHT TRANSMISSION ASSY	58
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	59
0501058212	SEMI MOUNTED RIGHT CHANGE	60
0521054562	PLATFORM ASSEMBLY 4880	61
0521054565	PLATFORM ASSEMBLY 6350	62
0511056746	HANDRAIL ASSY 4880	63
0511056812	HANDRAIL ASSY 6350	64
0511054971	JACK ASSEMBLY	65
0511056536	LADDER ASSEMBLY	66
0521056983	SEMI MOUNTED HYDRAULIC MARKER 4880	67
0511056809	SEMI MOUNTED HYDRAULIC MARKER 6350	68
0511058449	HYDRAULIC CYLINDER	69
0501054649	HBM SEQUENTIAL VALVE	70
0521055204	ROW MARKER DISC	71
0521054580	REAR LIGHTING ASSEMBLY 4880	72
0521054583	REAR LIGHTING ASSEMBLY	73
0521052792	MOUNTED REAR LIGHT	74
0521055105	ASSY MANUAL DOOR	75
0909096249	ASSY SEED/FERTILIZER ROW	76
0531054243	SHORT SEED/FERTILIZER ROW WITH 20" CUTTING DISC	77
0531054246	SHORT SEED/FERTILIZER ROW WITH 18" CUTTING DISC	78
0531054244	LONG SEED/FERTILIZER ROW WITH 20" CUTTING DISC	79
0531054245	LONG SEED/FERTILIZER ROW WITH 18" CUTTING DISC	80
0521054813	SHORT PIVOT LIFT LINE	81
0521054814	LONG PIVOT LIFT LINE	82
0511052024	FAST CLOSING SET	83
0511059244	ROD SPRING LINE SEED	84
0511059243	ASSEMBLY GUIDE VARIUM SPRING SEED	85
0521054775	LEFT REAR SEAL LINE BASE 1/2	86
0521054819	BASE 1/2 FIXED WITHOUT ASSY LUBRICATION	87
0521054763	DDD LEFT SEED	88
0511052302	LH SUPPORT DDD GUIDE	89
0521054761	LEFT LOW CUBE	90
0521054760	DOWN LOW CUBE	91
0521054774	REAR RIGHT LINE SEED LIFT	92
0521054762	RIGHT DDD SEED	93
0511052301	SUPPORT DDD 15 RIGHT	94
0521053231	DPL 20 SHORT LINE WITHOUT LUBRICATION CONICAL BEARING	95
0521054830	DPL 18 SHORT LINE WITHOUT LUBRICATION TAPERED BEARING	96
0521053232	DPL 20 LONG LINE WITHOUT LUBRICATION CONICAL BEARING	97
0521054831	DPL 18 LONG LINE WITHOUT LUBRICATION TAPERED BEARING	98
0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	99
0521053697	CUTTING DISK BOX	100
0531053925	SIGMA SOY INDIVIDUAL SEED SYSTEM	101
0531051514	SIGMA SOY SEED SYSTEM	102
0511057289	ASSY SEED DEFLECTOR	103
0503063602	SEMI-ASSEMBLED SIGMA INDIVIDUAL SEED BOX	104
0521054768	DDD RIGHT FERTILIZER WITH SUPPORT	105
0521054769	LEFT FERTILIZER WITH SUPPORT	106
0521054764	DDD RIGHT FERTILIZER	107



MARCHESAN


INDEX

0521054765	DDD LEFT FERTILIZER	108
0521054984	DEPTH/COMPACTOR SYSTEM - SPT	109
0521054758	CONTROL DEPTH WITH REGULATOR	110
0521054986	DEPTH CONTROL SEMI MOUNTED WITHOUT LUBRICATION	111
0531050978	DEPTH CONTROL WITH FAST ANGLE REGULATING AXIS	112
0531050980	SEM SEMI-ASSEMBLED CONTROL WITHOUT LUBRICATION	113
0531050975	LEFT ARM WHEELS DEPTH WITH CUBE WITHOUT LUBRICATION	114
0531050973	RIGHT ARM DEPTH WHEEL WITH HUB WITHOUT LUBRICATION	115
0531050974	CUBE CONTROL DEPTH WITHOUT LUBRICATION	116
0501052297	DEPTH WHEELS REGULATOR ASSY	117
0521054987	LEFT ARM WITH HUB WITHOUT LUBRIFICATION	118
0521055016	CUBE DEPTH CONTROL WITHOUT LUBRICATION	119
0521054988	RIGHT ARM WITH HUB WITHOUT LUBRIFICATION	120
0521055033	SEMI-ASSEMBLED COMPACTOR BODY	121
0501052538	DEPTH BAND WITH ARMS	122
0521054990	LEFT COMPACTOR WHEEL	123
0521054751	DEPTH CONTROL WITH THREAD	124
0521053483	CPRA RIGHT DEPTH CONTROL CUBE WITHOUT LUBRICATION	125
0521053484	CPRA LEFT DEPTH CONTROL CUBE WITHOUT LUBRICATION	126
0521053245	LEFT ARM WHEELS	127
0521053244	ARM RIGHT WHEEL COBRIDORA	128
0521054752	V COMPACTING SYSTEM	129
0521054753	DRIVE WHEEL V RUBBER RIGHT	130
0521054754	DRIVE WHEEL V LEFT RUBBER	131
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	132
0521055017	RIGHT COMPACTOR WHEEL	133
0511055819	DEPTH WHIT AROS BAND	134
0521053947	AUTOMATIC DISARMING ROD	135
0521053951	STEM	136
0521053932	ROD WITH BEAK 0869	137
0503063647	SIGMA CORN DISC SET	138
0503063648	SIGMA SOY DISC SET	139
0521053946	SCARING ROD	140
0521054181	TOOL BOX ASSEMBLY	141
0521054525	CONTAINER WATER TANK	142
0909095145	ASSY HEX AXLE	143
0909099016	HEXAGONAL SHAFT ASSEMBLY	144
0521055774	HYDRAULIC MARKER LABEL ASSY - 4880	145
0521058708	SET LABEL ADHESIVE	146

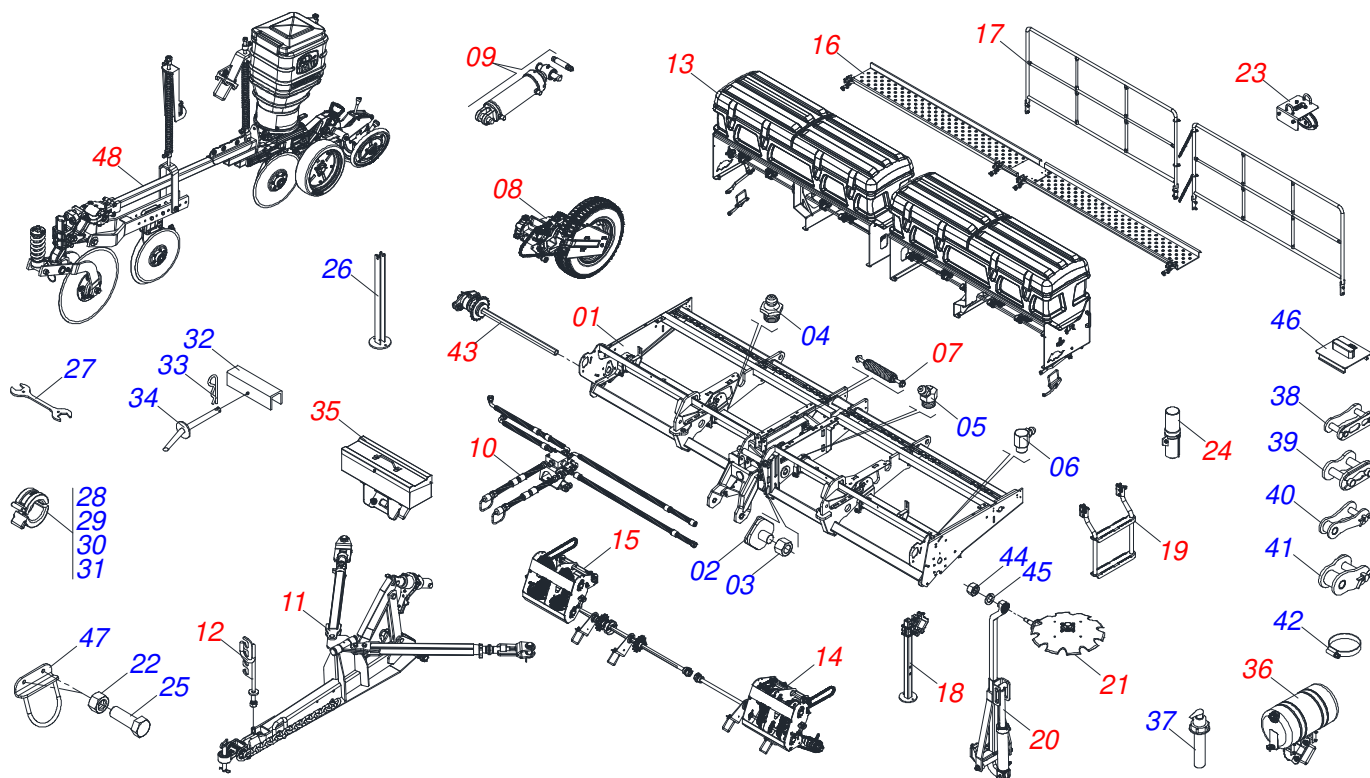


Item	Code	Description	See page	4880 / 6350
01	0521054576	FRAME WITH ARTICULATION 4880	2	01 00
01.	0521054579	FRAME WITH ARTICULATION 6350	3	00 01
02	0521064285	LOCK LOWER FRAME		01 01
03	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		01 01
04	0503010002	1800 GREASE FITTING		01 01
05	0503010003	1845 GREASE FITTING		05 05
06	0503010004	1890 GREASE FITTING		02 02
07	0511058667	SPRING FLOW ENSEMBLY	8	01 01
08	0521058397	WHEELSET WITH SPRING TRACTION	9	04 04
09	0521054561	CYLINDER ASSEMBLY	17	01 01
10	0511056742	ASSY SYSTEM HYDRAULIC 4880/5720/5950	19	01 00
10.	0511056808	ASSY SYSTEM HYDRAULIC 6350	20	00 01
11	0909095143	HEADER ASSY	23	01 01
12	0511056736	HOSE SUPPORT	28	01 01
13	0521054526	SILO FERTILIZER ASSY 4880	29	01 00
13.	0521054540	SILO FERTILIZER ASSY 6350	30	00 01
14	0511056741	LEFT TRANSMISSION ASSEMBLY - 4880	39	01 00
14.	0511056807	LEFT TRANSMISSION ASSY	38	00 01
15	0511056740	RIGHT TRANSMISSION ASSY - 4880	57	01 00
15.	0511056806	RIGHT TRANSMISSION ASSY	58	00 01
16	0521054562	PLATFORM ASSEMBLY 4880	61	01 00
16.	0521054565	PLATFORM ASSEMBLY 6350	62	00 01
17	0511056746	HANDRAIL ASSY 4880	63	01 00
17.	0511056812	HANDRAIL ASSY 6350	64	00 01
18	0511054971	JACK ASSEMBLY	65	04 04
19	0511056536	LADDER ASSEMBLY	66	02 02
20	0521056983	SEMI MOUNTED HYDRAULIC MARKER 4880	67	01 00
20.	0511056809	SEMI MOUNTED HYDRAULIC MARKER 6350	68	00 01
21	0521055204	ROW MARKER DISC	71	02 02
22	0503013816	5/16" LOCKNUT		02 02
23	0521054580	REAR LIGHTING ASSEMBLY 4880	72	01 00


Item	Code	Description	See page	4880 / 6350	
23.	0521054583	REAR LIGHTING ASSEMBLY	73	00	01
24	0521055105	ASSY MANUAL DOOR	75	01	01
25	0503011953	5/16" X 1" BOLT		02	02
26	0501065677	STRUT		02	02
27	0541015451	FIXED KEY 2.3/8 X 2.3/4		01	01
28	0501047895	ROD STOP		02	02
29	0501047885	ROD STOP		02	02
30	0501047886	ROD STOP		02	02
31	0501047887	ROD STOP		02	02
32	0521013022	TRANSPORT LOCK		02	02
33	0503030168	CUPILLA		02	02
34	0501068994	0.3" X 3.1" LOCK PIN		02	02
35	0521054181	TOOL BOX ASSEMBLY	141	01	01
36	0521054525	CONTAINER WATER TANK	142	01	01
37	0503019262	SOAP DISH VACUUM		01	01
38	0503010780	N-2050 AMENDMENT		02	02
39	0503011750	AMENDMENT WITH LOCK		06	06
40	0503011751	REDUCTION		06	06
41	0503010951	REDUCTION		04	04
42	0503010246	CLAMP		03	03
43	0909095145	ASSY HEX AXLE	143	01	00
43.	0909099016	HEXAGONAL SHAFT ASSEMBLY	144	00	01
44	0503010014	3/4" NUT		02	02
45	0503010023	3/4" SPRING WASHER		02	02
46	0503032624	SILO FERTILIZER GUTTER		06	06
47	0521065613	HOSE HOLDER		01	01
48	0909096249	ASSY SEED/FERTILIZER ROW	76	01	01

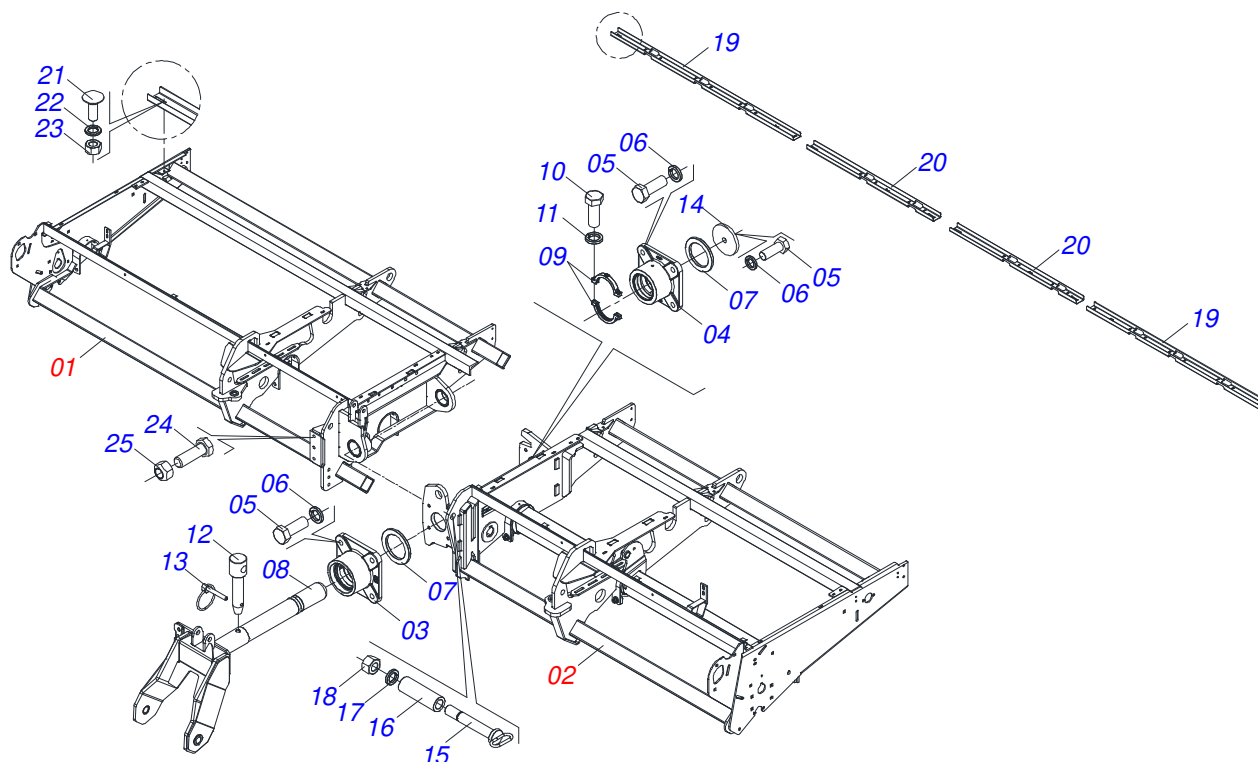


Item	Code	Description	See page	QT
01	0521054567	RIGHT FRAME WITH WHEELED AXLE 4880	4	01
02	0521054569	FRAME LEFT WITH SHAFT WHEELED 4880	5	01
03	0501110791	FRONT ARTICULATOR HUB WITH GLOVES		01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		01
05	0501010098	3/4" UNC BOLT		09
06	0503011442	3/4" SPRING WASHER		09
07	0571010094	SLEEVE FLANGE		02
08	0521065616	ARTICULATION		01
09	0502012698	CLAMP		02
10	0503010365	NUT		02
11	0503011444	SPRING WASHER		02
12	0571013510	LOCK AXLE		01
13	0503030085	LOCK PIN		01
14	0571010095	FLAT WASHER		01
15	0521063003	LOCK PIN		01
16	0571010969	LOCK SLEEVE FRAME		01
17	0503013627	1.1/2 SPRING WASHER		01
18	0501010110	1.1/2" NUT		01
19	0581018964	TROUGH 24 X 50 X 1320		02
20	0581018965	TROUGH 24 X 50 X 940		02
21	0501011643	3/8 X 1" BOLT		08
22	0503010025	3/8" SPRING WASHER		08
23	0503010026	3/8" NUT		08
24	0501018059	3/4" X 2-1/4" BOLT		03
25	0503011255	3/4" LOCK NUT		03

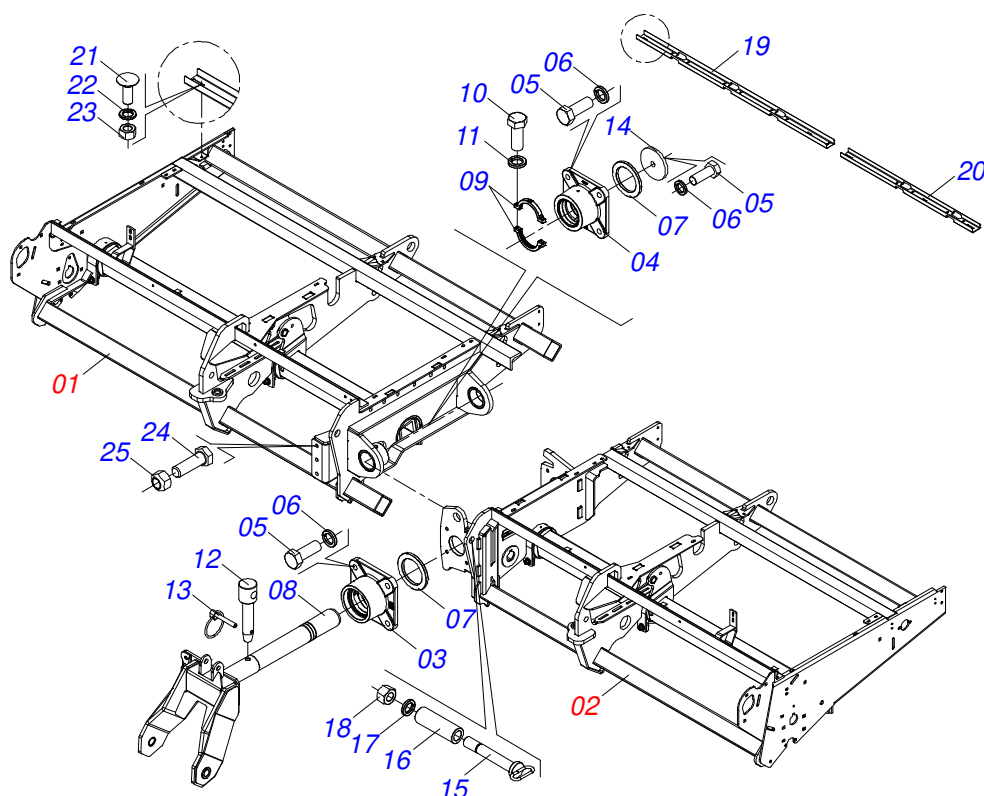


Item	Code	Description	See page	QT
01	0521054574	RIGHT FRAME WITH WHEELED AXLE 6350	6	01
02	0521054575	FRAME LEFT WITH SHAFT WHEELED 6350	7	01
03	0501110791	FRONT ARTICULATOR HUB WITH GLOVES		01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		01
05	0501010098	3/4" UNC BOLT		09
06	0503011442	3/4" SPRING WASHER		09
07	0571010094	SLEEVE FLANGE		02
08	0521065616	ARTICULATION		01
09	0502012698	CLAMP		02
10	0503010365	NUT		02
11	0503011444	SPRING WASHER		02
12	0571013510	LOCK AXLE		01
13	0503030085	LOCK PIN		01
14	0571010095	FLAT WASHER		01
15	0521063003	LOCK PIN		01
16	0571010969	LOCK SLEEVE FRAME		01
17	0503013627	1.1/2 SPRING WASHER		01
18	0501010110	1.1/2" NUT		01
19	0581018182	TROUGH 24 X 50 X 1750		02
20	0581018181	TROUGH 24 X 50 X 1250		02
21	0501011643	3/8 X 1" BOLT		08
22	0503010025	3/8" SPRING WASHER		08
23	0503010026	3/8" NUT		08
24	0501018059	3/4" X 2-1/4" BOLT		03
25	0503011255	3/4" LOCK NUT		03

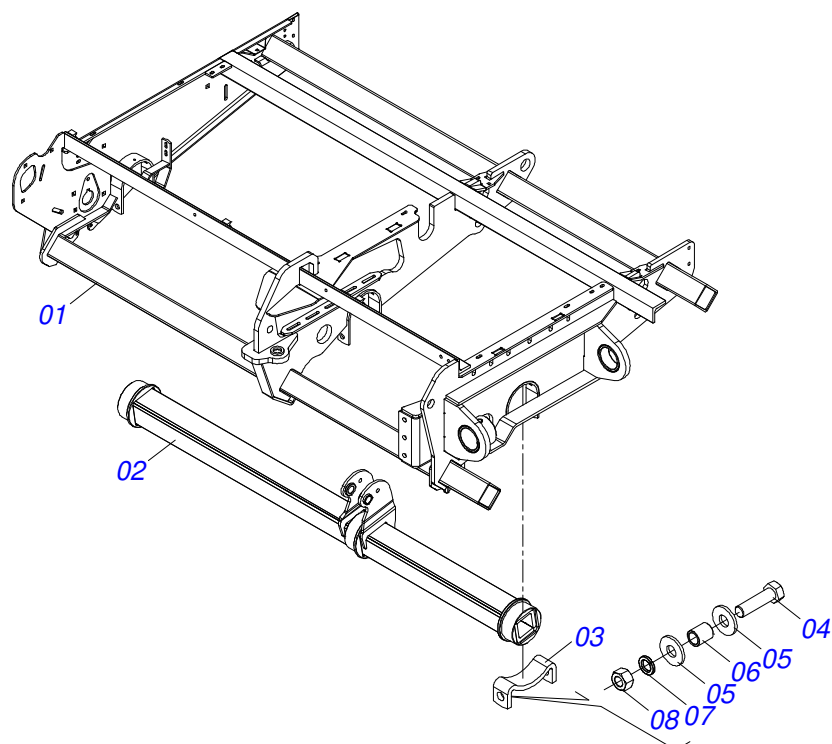


Item	Code	Description	See page	QT
01	0521068942	RIGHT FRAME		01
02	0521069426	RIGHT ARTICULATED AXLE		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

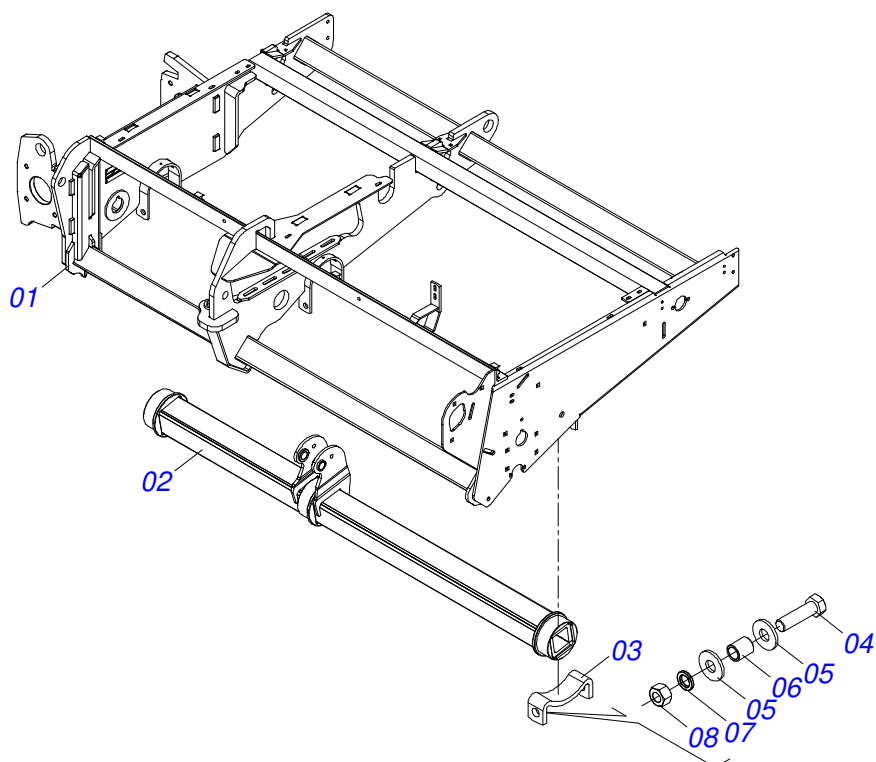


Item	Code	Description	See page	QT
01	0521068943	LEFT FRAME		01
02	0521069427	LEFT ARTICULATED AXLE		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

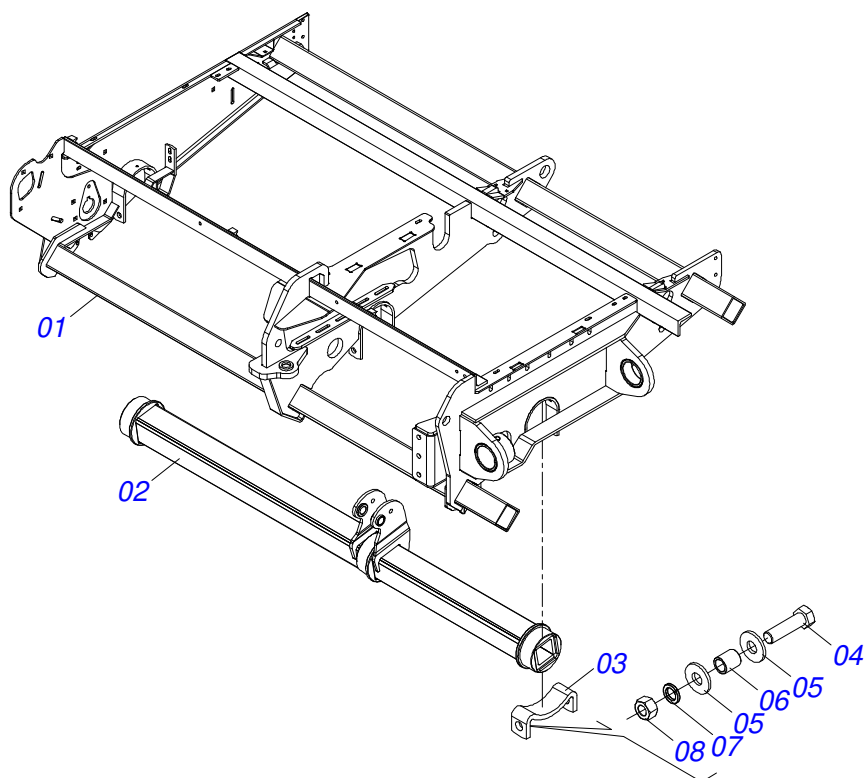


Item	Code	Description	See page	QT
01	0521068948	RIGHT FRAME 6350		01
02	0521069432	RIGHT SIDE RIGHT ARTICULATED AXLE 6350		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

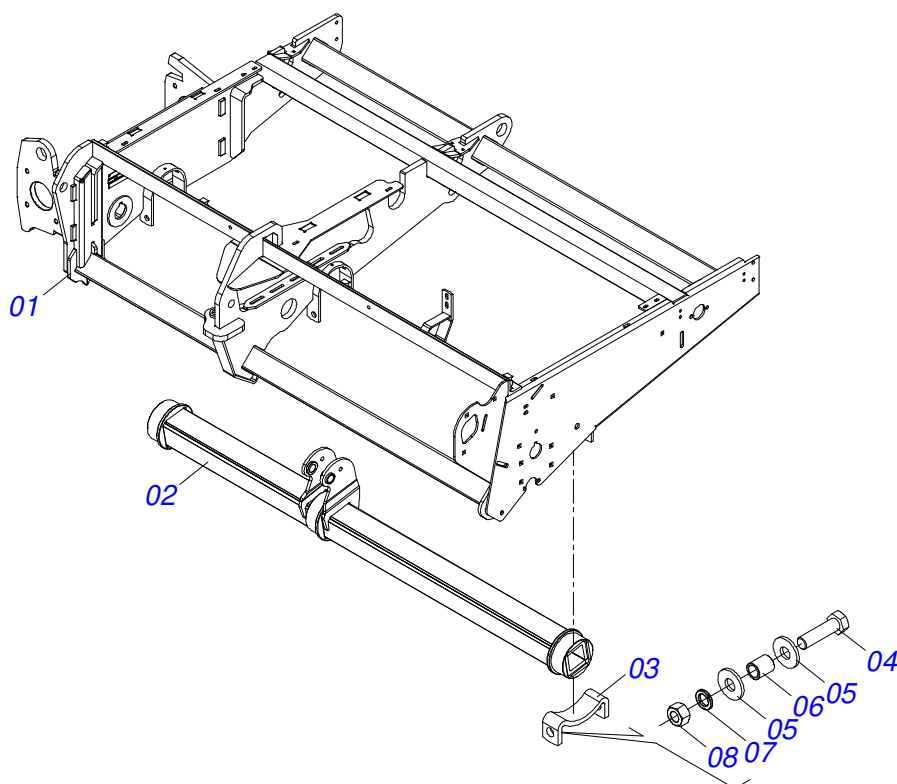


Item	Code	Description	See page	QT
01	0521068949	LEFT FRAME 6350		01
02	0521069433	LEFT ARTICULATED AXLE 6350		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

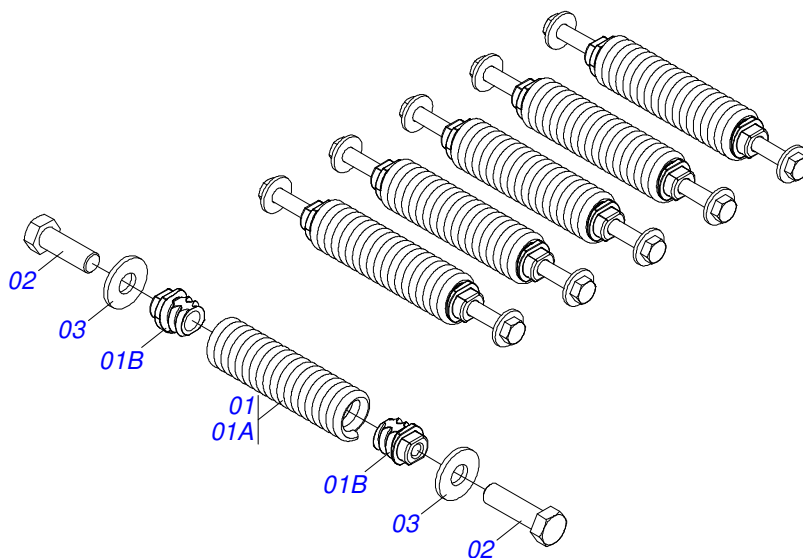


Item	Code	Description	See page	QT
01	0511050681	TRACTION SPRING		06
01A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
01B	0561016062	SPRING HITCH		02
02	0503013030	5/8" X 3.1/4" BOLT		12
03	0501012140	FLAT WASHER		24

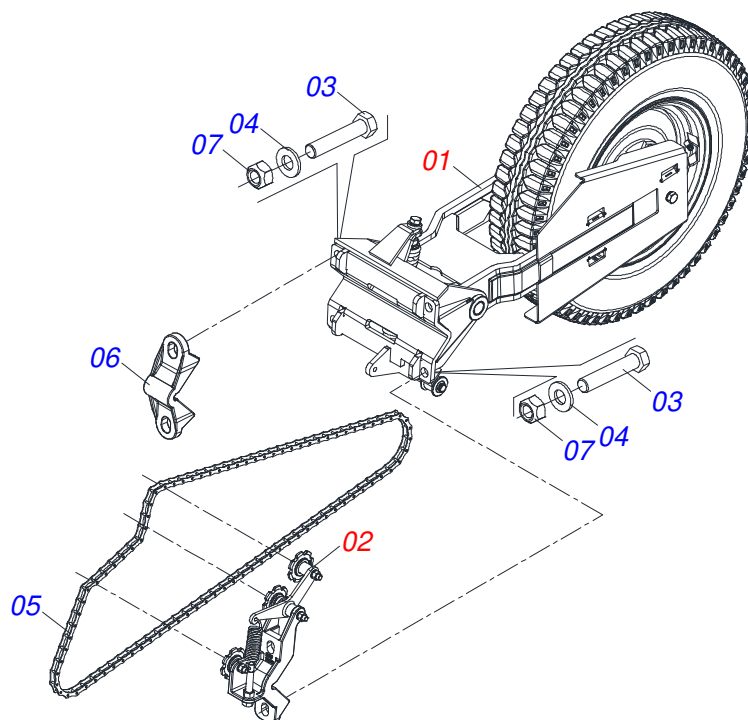


Item	Code	Description	See page	QT
01	0521058395	WHEEL SUPPORT ASSY WITH TRANSMISSION	10	01
02	0501058240	WHEEL FASTENER WITH TENSIONER	13	01
03	0503011119	7/8" X 6" BOLT		04
04	0501014251	FLAT WASHER		04
05	0503012212	2050 CHAIN X 81 LINK + MENDING		01
06	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
07	0503011254	7/8" HEX SELF ADJUSTING NUT		04

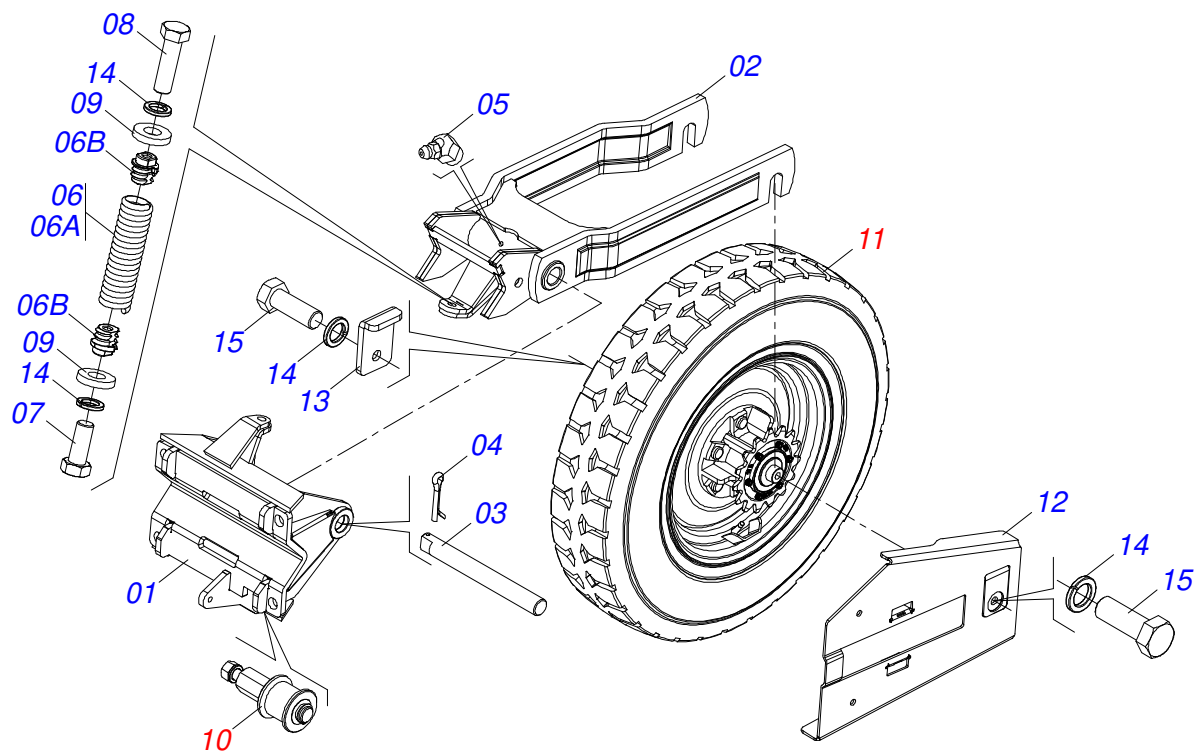


Item	Code	Description	See page	QT
01	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
02	0521061565	WHEEL SUPPORT ARM		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" COTTERPIN		01
05	0503010003	1845 GREASE FITTING		01
06	0511050681	TRACTION SPRING		01
06A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
06B	0561016062	SPRING HITCH		02
07	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
08	0503013030	5/8" X 3.1/4" BOLT		01
09	0551017715	FLAT WASHER		02
10	0501058241	WHEEL SUPPORT CHAIN TENSIONER	11	01
11	0521058393	WHEEL WITH PNEU 7.00X16 14L PR TT WITH 12 TRANSMISSION		01
12	0521069983	WHEEL COVER		01
13	0591010589	BODY LOCK WHEEL		01
14	0503010027	5/8" SPRING WASHER		04
15	0503018981	BOLT		02

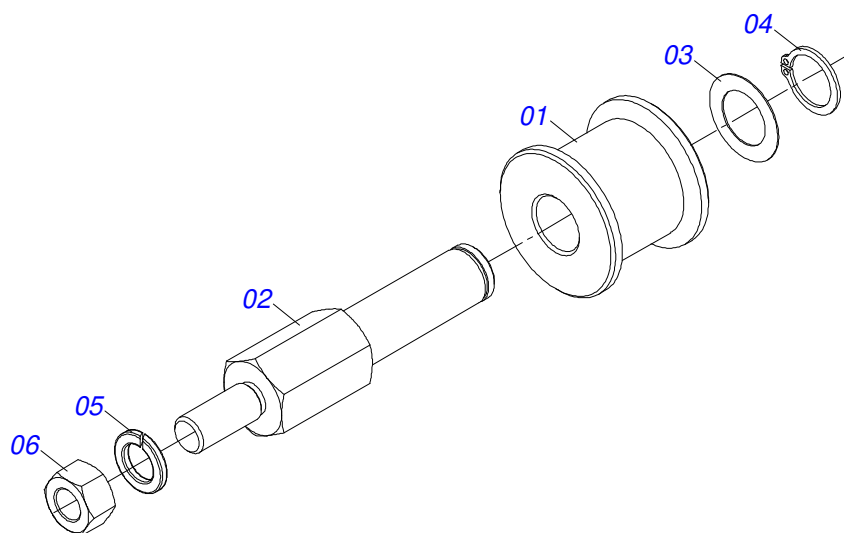


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	FERT CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

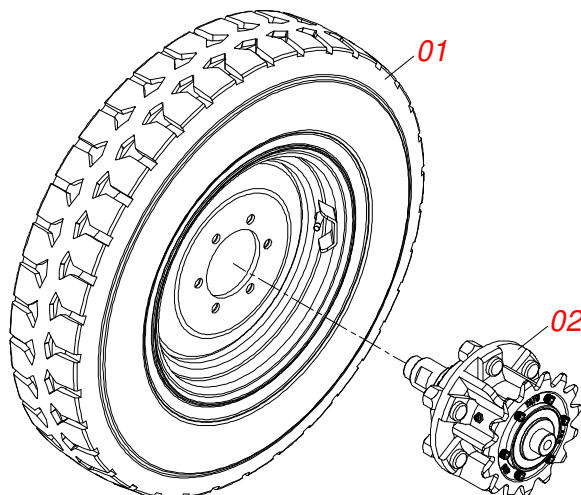


Item	Code	Description	See page	QT
01	0503063172	WHEEL		01
02	0521055233	WHEELED TRANSMISSION WITHOUT TIRE		01

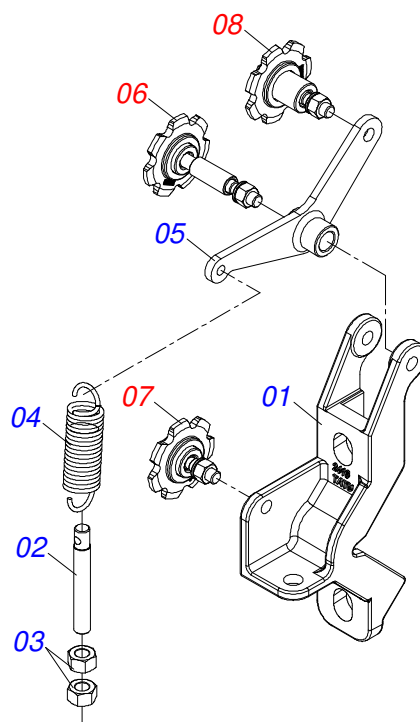


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8" NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	14	01
07	0501058244	WHEEL FIXED CHAIN TENSIONER	15	01
08	0501058242	WHEEL MOBILE CHAIN TENSIONER	16	01

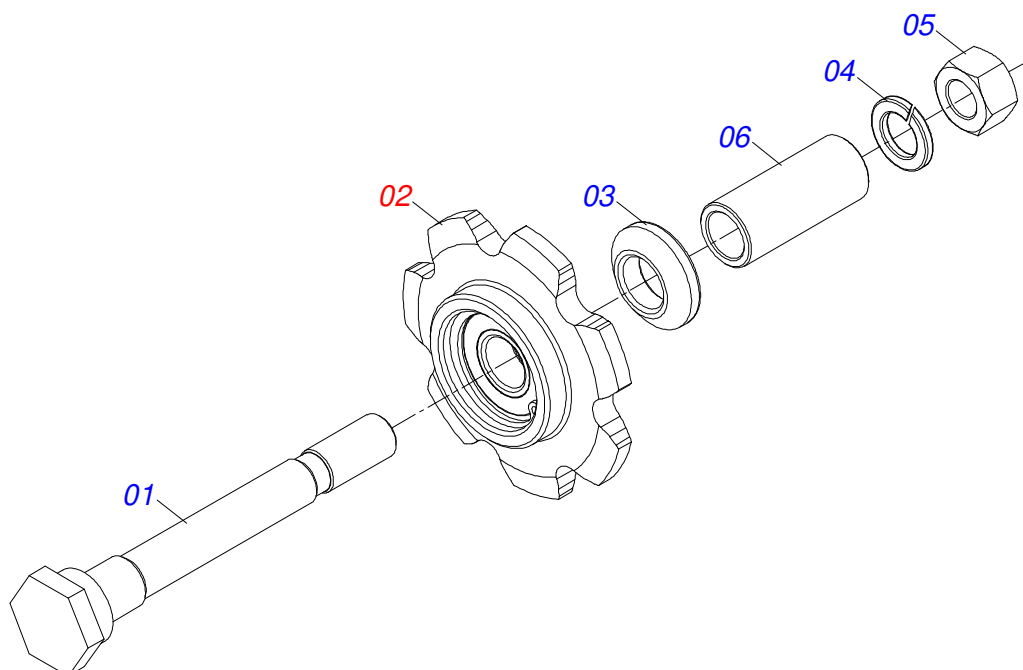


Item	Code	Description	See page	QT
01	0551018245	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01
06	0551018239	SLEEVE 19 X 13,50 X 45		01

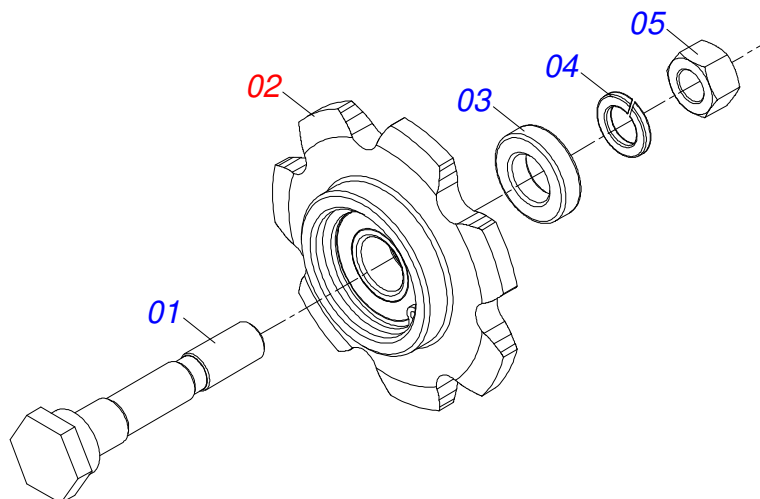


Item	Code	Description	See page	QT
01	0551018252	CHAIN TIGHTENER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

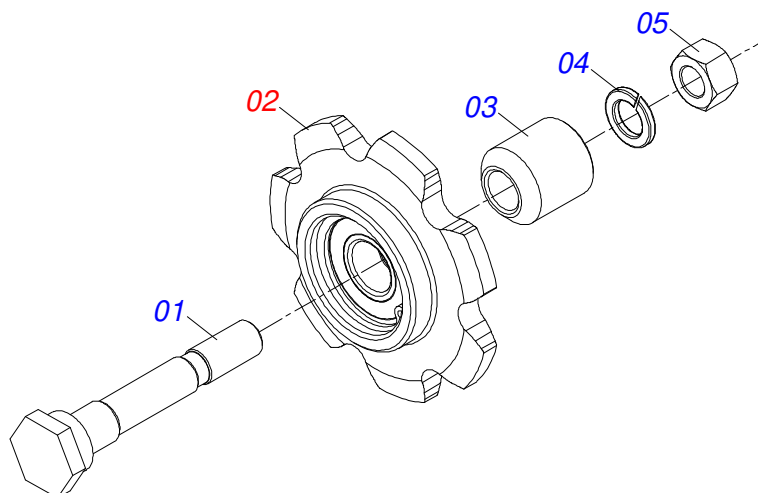


Item	Code	Description	See page	QT
01	0551018244	CHAIN UPPER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING		01
03	0591017923	GLOVE 15.30 X 30 X 32		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

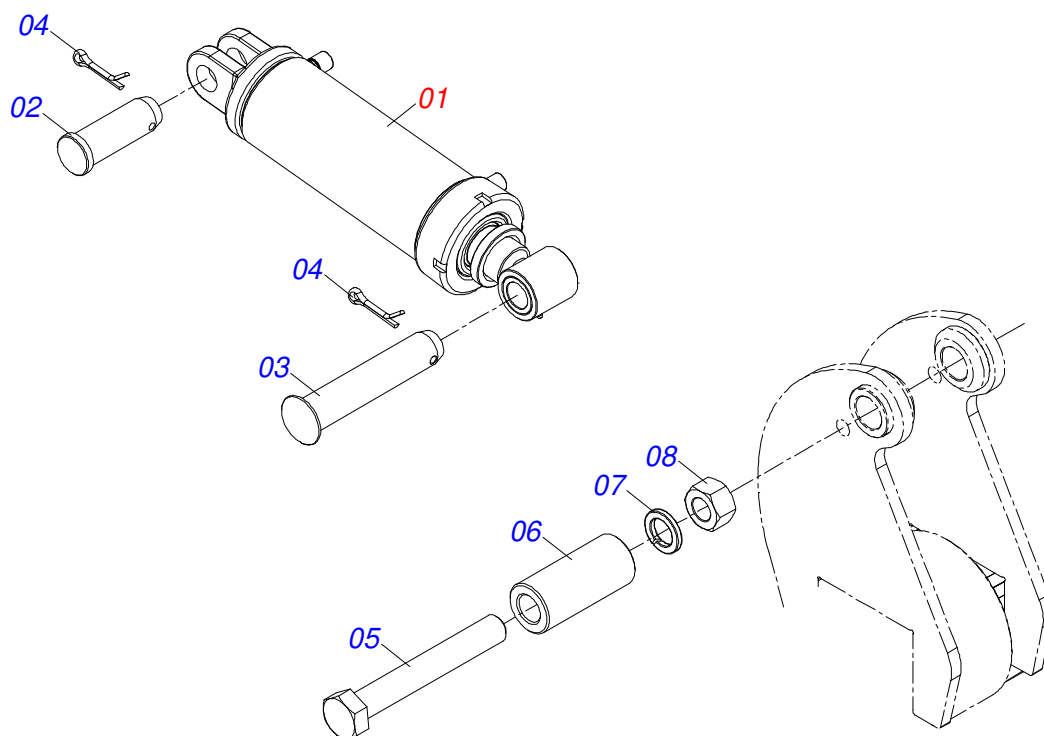

Item	Code	Description	See page	QT
01	0511058406	HYDRAULIC CYLINDER	18	02
02	0521012538	1.2" X 3.5" COUPLING SHAFT		02
03	0521015501	COUPLING SHAFT		02
04	0503010523	1/4" X 2" COTTERPIN		04
05	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02
06	0531012565	SLEEVE 16,3X 30 X 88		02
07	0503010027	5/8" SPRING WASHER		02
08	0503010013	5/8" NUT		02

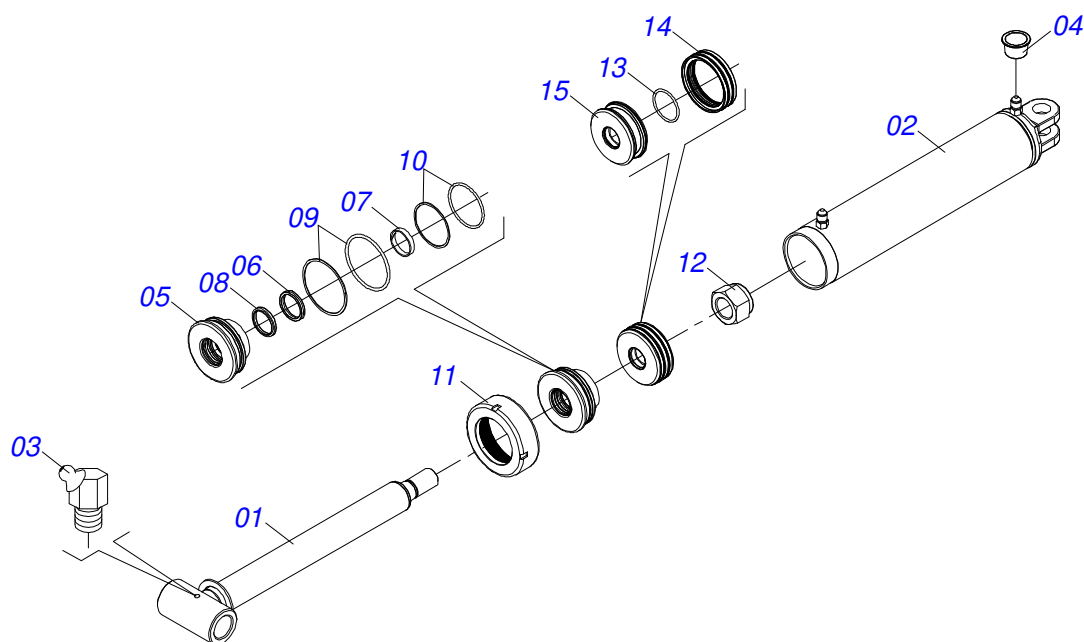

Item	Code	Description	See page	QT
01	0511064053	SLEEVE 2" X 14" TURNBUCLE		01
02	0511064052	4" X 12.1" CYLINDER CASE		01
03	0503010003	1845 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010678	50,80 X 101 RING SUPPORT		01
06	0503015636	SCRAPER SEAL		01
07	0503018025	RING GUIDE		01
08	0503018026	1870-2000-375 B GASKET		01
09	0503010338	2-342 N 3006-9B O'RING		02
10	0503011061	8-342 BACK-UP RING		02
11	0502012822	101.60 END CAP		01
12	0503010817	1.1/4" SELF LOCKING NUT		01
13	0503010345	2-218 N 3006-9B O'RING		01
14	0503015633	SELEMASTER SEALING		01
15	0502012842	50,80 X 101,60 PISTON		01
16	0511032511	ASSY CYLINDER REPAIR KIT 50.8X101.6		01

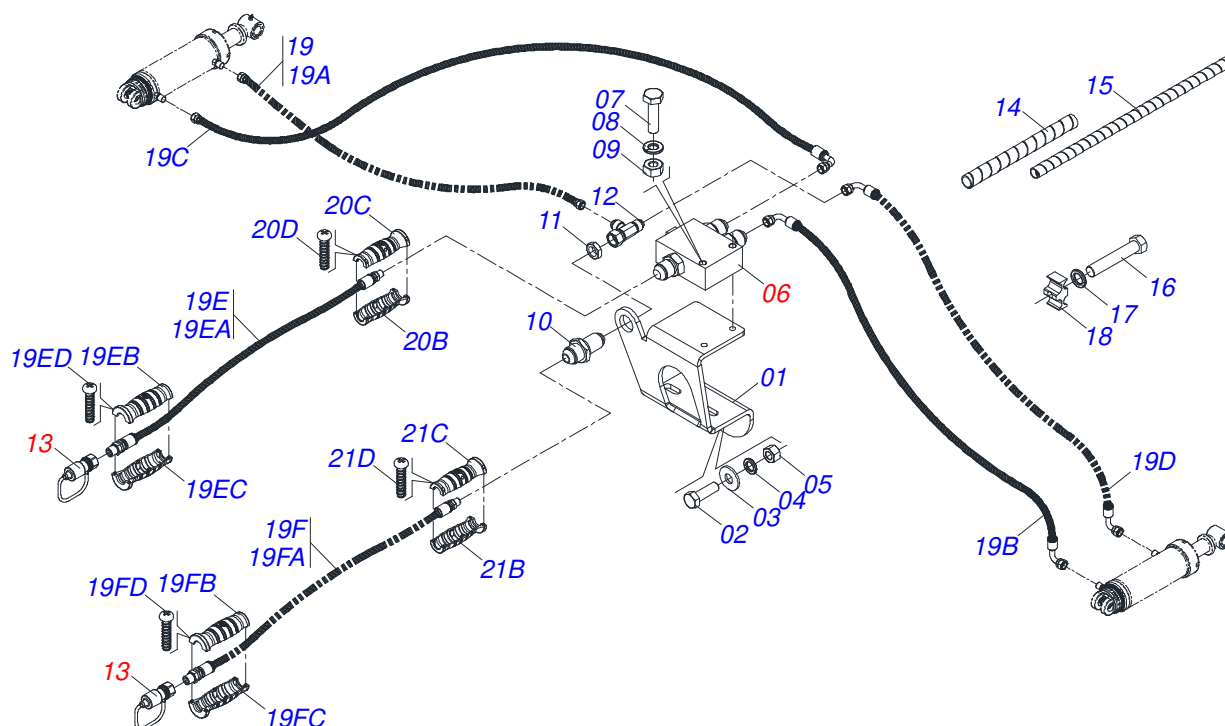

Item	Code	Description	See page	QT
01	0571017027	VALVE SUPPORT		01
02	0503010920	1/2" X 1.1/2" BOLT		02
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		02
05	0503010060	1/2" NUT		02
06	0501054452	FLOW DIVIDING VALVE		01
07	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
08	0503010143	1/4" SPRING WASHER		02
09	0503010144	1/4" NUT		02
10	0541012166	NIPPLE 3/4" UNF X 7/8"		01
11	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01
12	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
13	0501053834	MALE QUICK COUPLER	22	02
14	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
15	0571017774	SPRING PROTECTION QUICK HOSE		02
16	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		03
17	0503010180	7/16" SPRING WASHER		03
18	0502012702	BODY SUPPORT CLAMP		03
19	0511057089	HOSE KIT SYSTEM HYDRAULIC		01
19A	0501080045	3/8" X 850 TR-TR HOSE		01
19B	0501080999	3/8" X 39" TC-TC HOSE		01
19C	0501081987	HOSE 3/8 X 1550 TR-TC		01
19D	0501081986	HOSE 3/8 X 1550 TC-TC		01
19E	0521052299	HOSE 1/2 X 4000 TR-TM BLACK / RED		01
19EA	0501080185	HOSE 1/2 X 4000 TR-TM		01
19EB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
19EC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
19ED	0503018952	PLASTIC BOLT		06
19F	0521052300	HOSE 1/2 X 4000 TR-TM BLACK / BLUE		01
19FA	0501080185	HOSE 1/2 X 4000 TR-TM		01
19FB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01



PST DUO - FRAME 4880/6350


(FROM 04/2022)

Page 19

ASSY SYSTEM HYDRAULIC 4880/5720/5950

0511056742


Item	Code	Description	See page	QT
19FC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
19FD	0503018952	PLASTIC BOLT		06

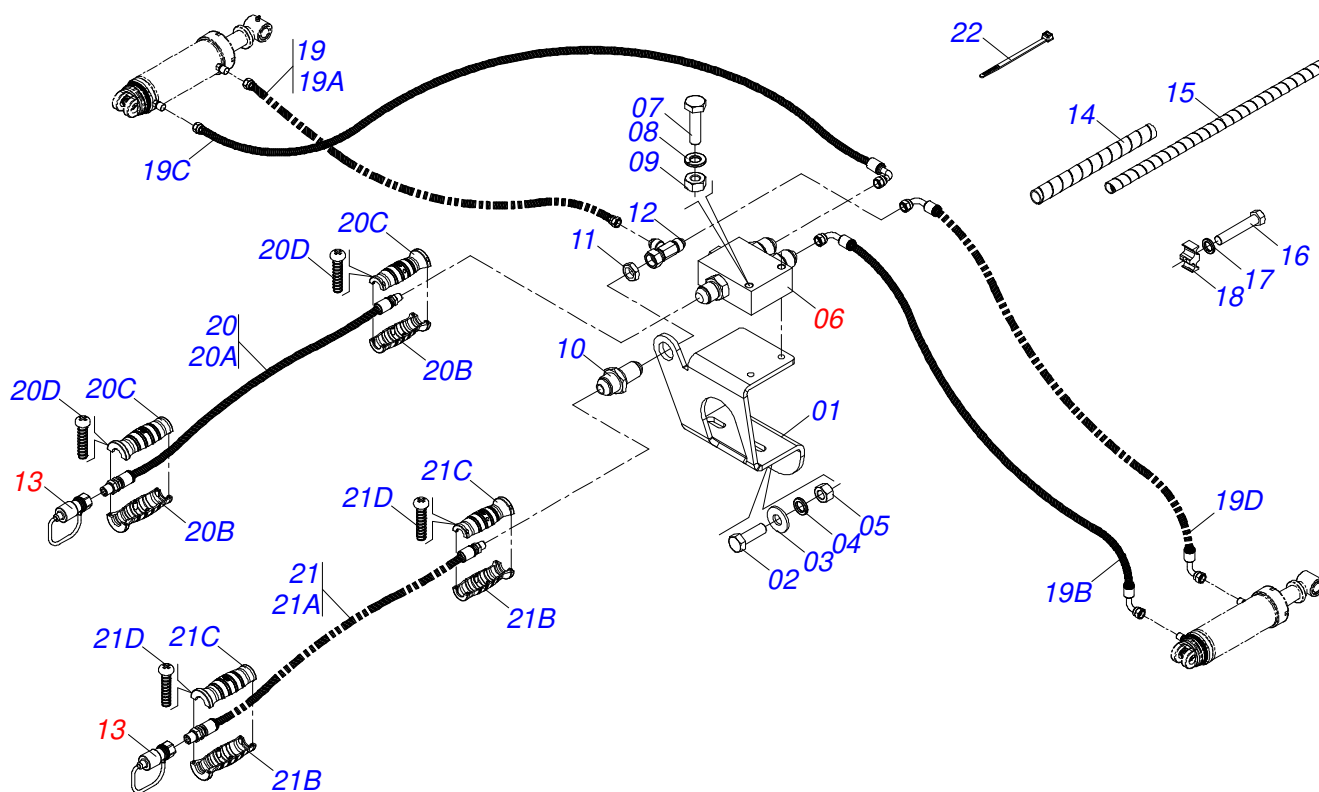


Item	Code	Description	See page	QT
01	0571017027	VALVE SUPPORT		01
02	0503010920	1/2" X 1.1/2" BOLT		02
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		02
05	0503010060	1/2" NUT		02
06	0501054694	FLOW DIVIDING VALVE ASSY	21	01
07	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		02
08	0503010143	1/4" SPRING WASHER		02
09	0503010144	1/4" NUT		02
10	0541012166	NIPPLE 3/4" UNF X 7/8"		01
11	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		01
12	0503011968	3/4" 8R6X-S T ADAPTER WITH SWIVEL NUT		01
13	0501053834	MALE QUICK COUPLER	22	02
14	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
15	0571017774	SPRING PROTECTION QUICK HOSE		01
16	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		03
17	0503010180	7/16" SPRING WASHER		03
18	0502012702	BODY SUPPORT CLAMP		03
19	0511057105	ASSY HYDRAULIC SYSTEM HOSE 6350		01
19A	0501080127	HOSE		01
19B	0501081998	HOSE 3/8 X 1300 TC-TC		01
19C	0501082001	TR-TC HOSE ASSY		01
19D	0501082000	TC-TC HOSE ASSY		01
20	0521052299	HOSE 1/2 X 4000 TR-TM BLACK / RED		01
20A	0501080185	HOSE 1/2 X 4000 TR-TM		01
20B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
20C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
20D	0503018952	PLASTIC BOLT		06
21	0521052300	HOSE 1/2 X 4000 TR-TM BLACK / BLUE		01
21A	0501080185	HOSE 1/2 X 4000 TR-TM		01
21B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01



Item	Code	Description	See page	QT
21C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
21D	0503018952	PLASTIC BOLT		06
22	0503013100	NYLON CLAMP		02

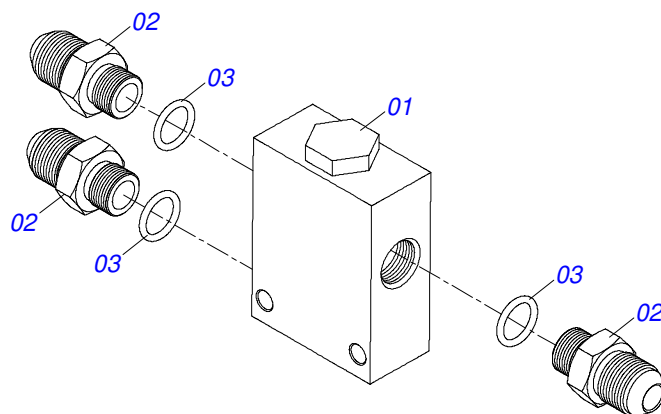


Item	Code	Description	See page	QT
01	0503012481	FLOW DIVIDING VALVE		01
02	0503030923	3/4" UNF X 13/16UN OFS X 40 NIPPLE		03
03	0503010190	2-114 N 3006-9B O'RING		03

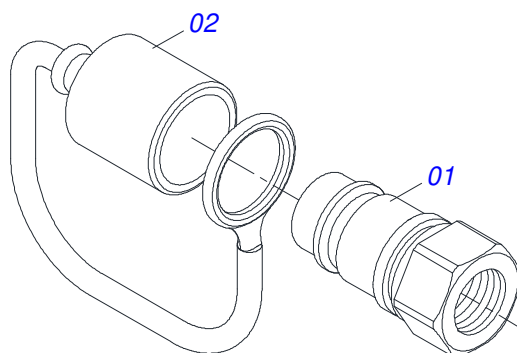


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

HEADER ASSY


0909095143

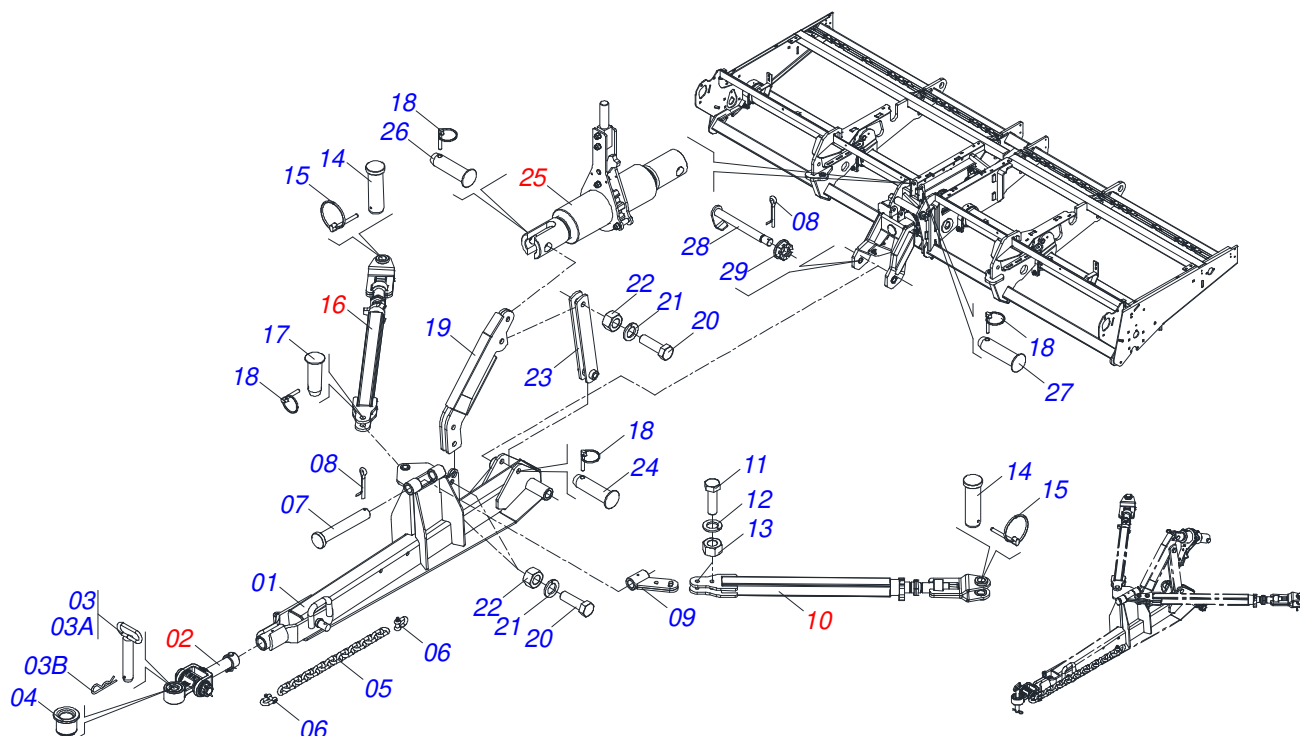


Item	Code	Description	See page	QT
01	0521068561	LONG COUPLING HEADER		01
02	0511055096	TRACTOR HITCH	24	01
03	0511053179	TRACTOR COUPLING SHAFT		01
03A	0521064036	TRACTOR HITCH AXLE		01
03B	0503030012	HAIR PIN		01
04	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
05	0503014120	CHAIN		01
06	0503014321	CABLE STEEL SHACKLE		02
07	0571010661	PIVOT SHAFT		01
08	0503010010	1/4" X 2.1/2" COTTERPIN		02
09	0521064203	EAR PIVOT DRAWBAR		01
10	0521053310	LEFT EXTENSION HEADER 36.00 - 4880/5720/5950	25	01
11	0501010500	3/4"X3"BOLT		02
12	0503010023	3/4" SPRING WASHER		02
13	0503010014	3/4" NUT		02
14	0571019949	JUNCTION SHAFT		02
15	0503030119	LOCK PIN		02
16	0521053311	RIGHT EXTENSOR HEAD 36,00 - 4880/5720/5950	26	01
17	0521010572	0.9" X 2.9" COUPLING SHAFT		01
18	0503030085	LOCK PIN		04
19	0521063528	EXTENDING FIXER		01
20	0501010171	BOLT 1 UNC X 3.1/2 C S G.5		03
21	0503010012	1" SPRING WASHER		03
22	0501010059	1.5/8 NUT		03
23	0521062916	LEFT FRENCH HAND		01
24	0521010585	0.9" X 5.9" COUPLING SHAFT		01
25	0511052311	3 POINT TURNBUCKLE	27	01
26	0521012532	0.9" X 3.9" COUPLING SHAFT		01
27	0521010582	COUPLING SHAFT		01
28	0521063529	LOCK AXLE		01
29	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01

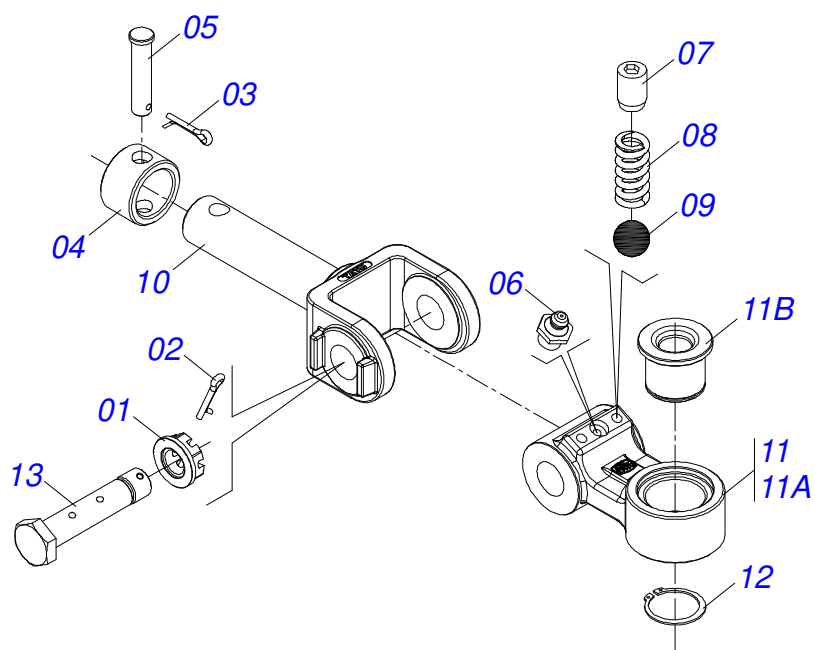


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	COMPRESSION SPRING LEFT		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

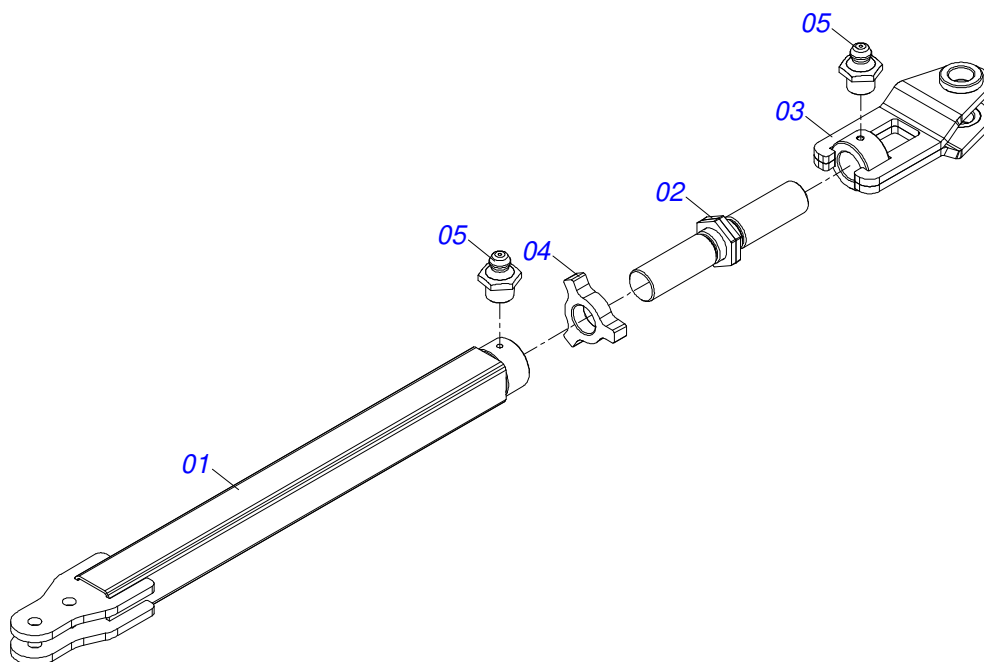


Item	Code	Description	See page	QT
01	0521064426	POINT FIXER EXTENDING LEFT		01
02	0501078990	TURNBUCLE AXLE		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0503010002	1800 GREASE FITTING		02

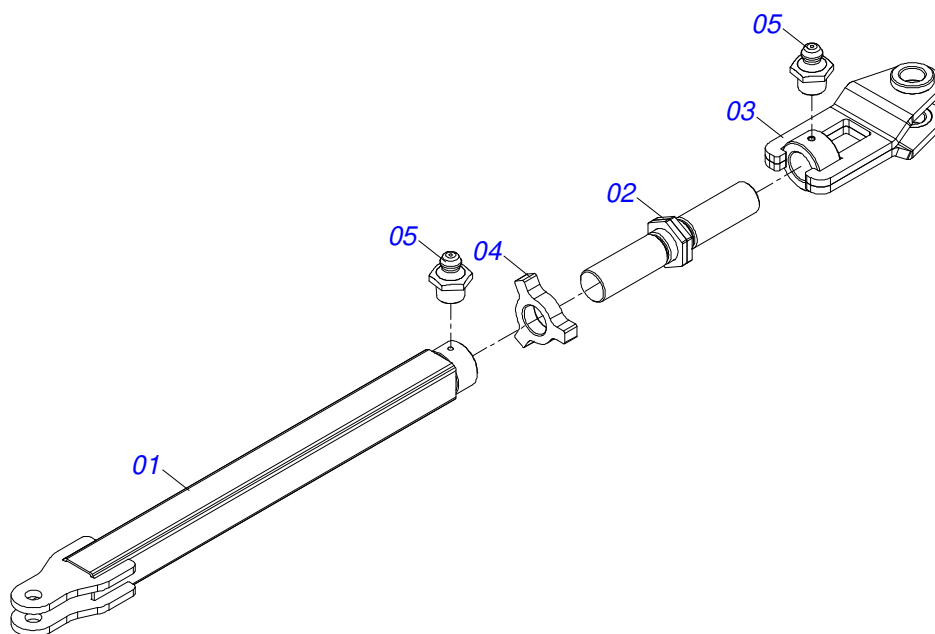


Item	Code	Description	See page	QT
01	0521064425	POINT FIXER EXTENDING RIGHT		01
02	0501078990	TURNBUCLE AXLE		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0503010002	1800 GREASE FITTING		02

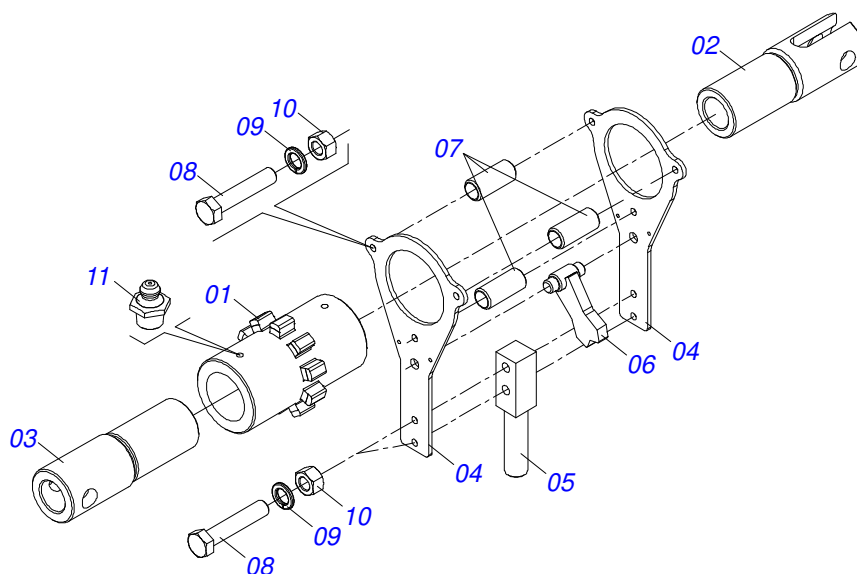

Item	Code	Description	See page	QT
01	0502012783	STABILIZER BODY GREATER		01
02	0571012279	JACK RIGHT		01
03	0571012280	JACK LEFT		01
04	0531010264	SIDE RATCHET		02
05	0521018500	SHAFT LEVER EXTENSOR		01
06	0511061881	RATCHET FOLLOWER		01
07	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
08	0503011179	3/8" X 2-1/4" BOLT		05
09	0503010025	3/8" SPRING WASHER		05
10	0503010026	3/8" NUT		05
11	0503010002	1800 GREASE FITTING		02

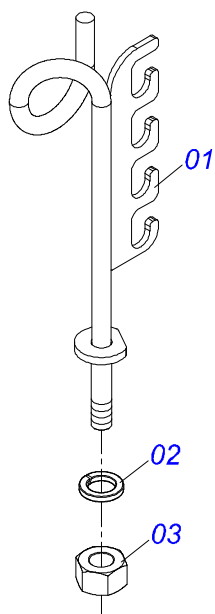


Item	Code	Description	See page	QT
01	0521065611	HOSE SUPPORT		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" NUT		01

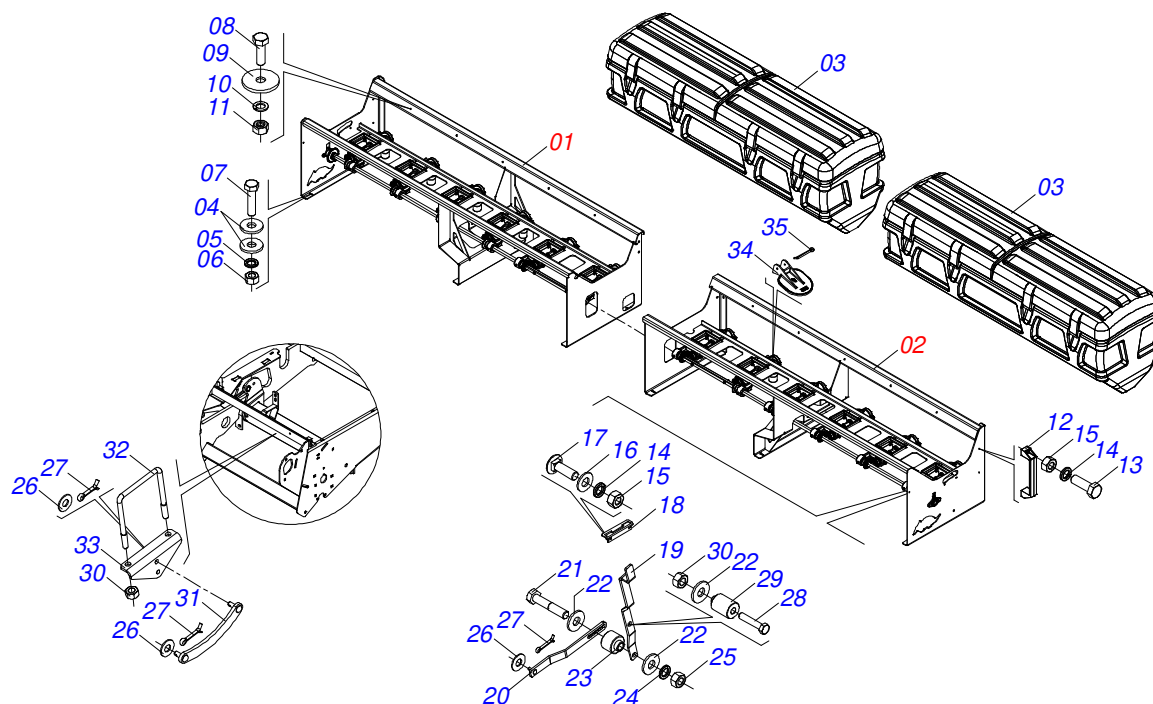

Item	Code	Description	See page	QT
01	0521054528	SILO FERTILIZER RIGHT SUPPORT 4880	33	01
02	0521054527	LEFT FERTILIZER BEAM SUPPORT 4880	34	01
03	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED		02
04	0501010984	FLAT WASHER		24
05	0503010025	3/8" SPRING WASHER		12
06	0503010026	3/8" NUT		12
07	0503010849	3/8" X 1-1/2" BOLT		12
08	0503013751	3/8 UNC X 1.1/4 BOLT		21
09	0571019051	FIXER BOX WASHER		21
10	0503012535	3/8" SPRING WASHER		21
11	0503012531	3/8" INOX NUT		21
12	0503011957	NYLON LUG		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0581018923	LOWER LEVER LEVER CHANGE		02
19	0581018922	LEVER ARM DISARMING MINOR		02
20	0521061741	INNTER LEVER		02
21	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
22	0511017302	FLAT WASHER		06
23	0551019167	SLEEVE UNION		02
24	0503010019	1/2" SPRING WASHER		02
25	0503010060	1/2" NUT		02
26	0501013518	FLAT WASHER		06
27	0503010140	1/8" X 3/4" COTTERPIN		06
28	0503010479	BOLT		02
29	0551019168	SLEEVE		02
30	0503011336	1/2" HEX SELF ADJUSTING NUT		06
31	0511069678	LH LOWER LEVER		02




Item	Code	Description	See page	QT
32	0561016468	FASTENER		02
33	0551019159	LEVER FIXER BODY		02
34	0503034396	FERTILIZER SIDE COVER		12
35	0503010362	1/8" X 1.1/4" COTTERPIN		12

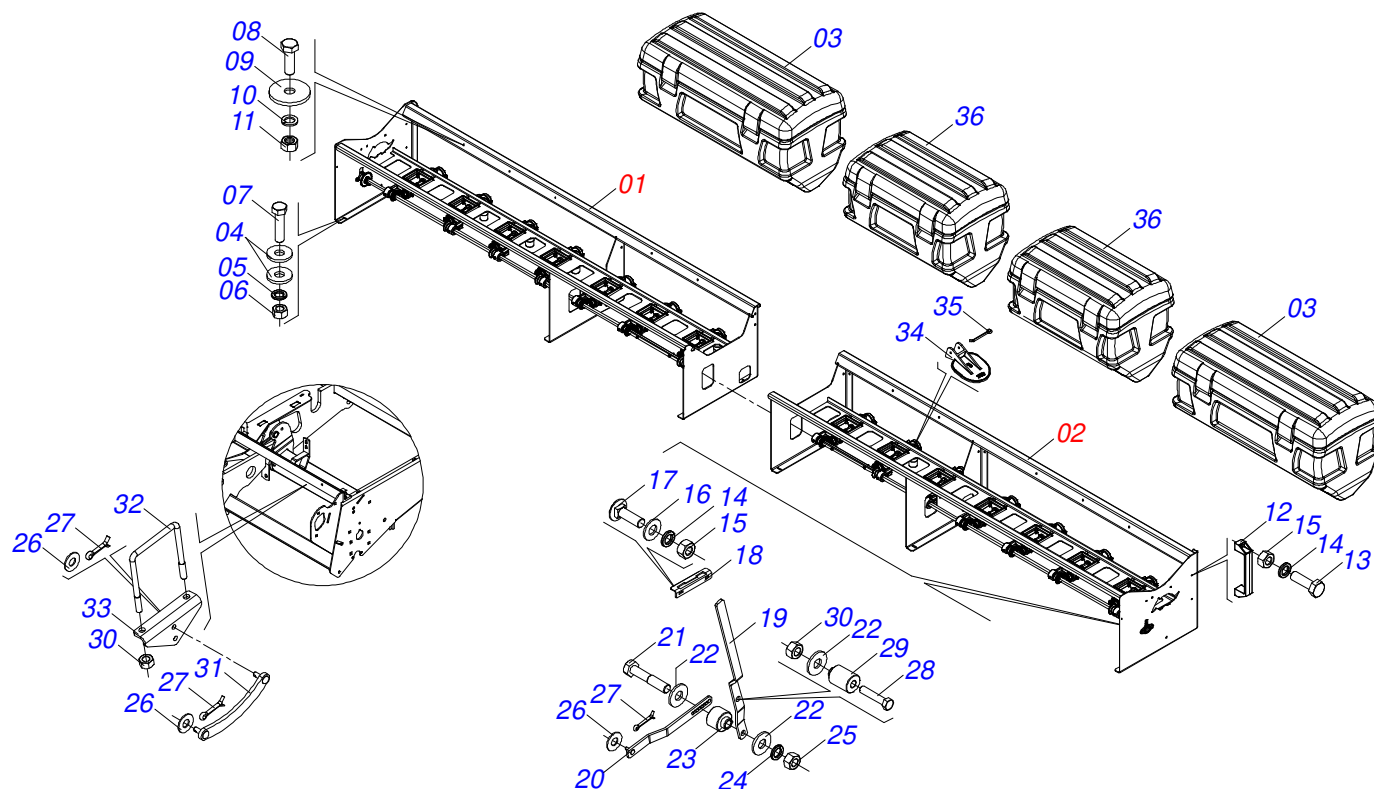


Item	Code	Description	See page	QT
01	0521054541	SILO FERTILIZER RIGHT SUPPORT 6350	31	01
02	0521054542	LEFT FERTILIZER BEAM SUPPORT 6350	32	01
03	0503062362	FERTILIZER BOX		02
04	0501010984	FLAT WASHER		24
05	0503010025	3/8" SPRING WASHER		12
06	0503010026	3/8" NUT		12
07	0503010849	3/8" X 1-1/2" BOLT		12
08	0503013751	3/8 UNC X 1.1/4 BOLT		20
09	0571019051	FIXER BOX WASHER		20
10	0503012535	3/8" SPRING WASHER		20
11	0503012531	3/8" INOX NUT		20
12	0503011957	NYLON LUG		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0581012605	GEAR BOX LEVER LOCK		02
19	0551019160	LEVER		02
20	0521061741	INNER LEVER		02
21	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
22	0511017302	FLAT WASHER		06
23	0551019167	SLEEVE UNION		02
24	0503010019	1/2" SPRING WASHER		02
25	0503010060	1/2" NUT		02
26	0501013518	FLAT WASHER		06
27	0503010140	1/8" X 3/4" COTTERPIN		06
28	0503010479	BOLT		02
29	0551019168	SLEEVE		02
30	0503011336	1/2" HEX SELF ADJUSTING NUT		06
31	0511069678	LH LOWER LEVER		02




Item	Code	Description	See page	QT
32	0561016468	FASTENER		02
33	0551019159	LEVER FIXER BODY		02
34	0503034396	FERTILIZER SIDE COVER		12
35	0503010362	1/8" X 1.1/4" COTTERPIN		12
36	0503062927	SILO FERTILIZER 3 MOUTHS		02

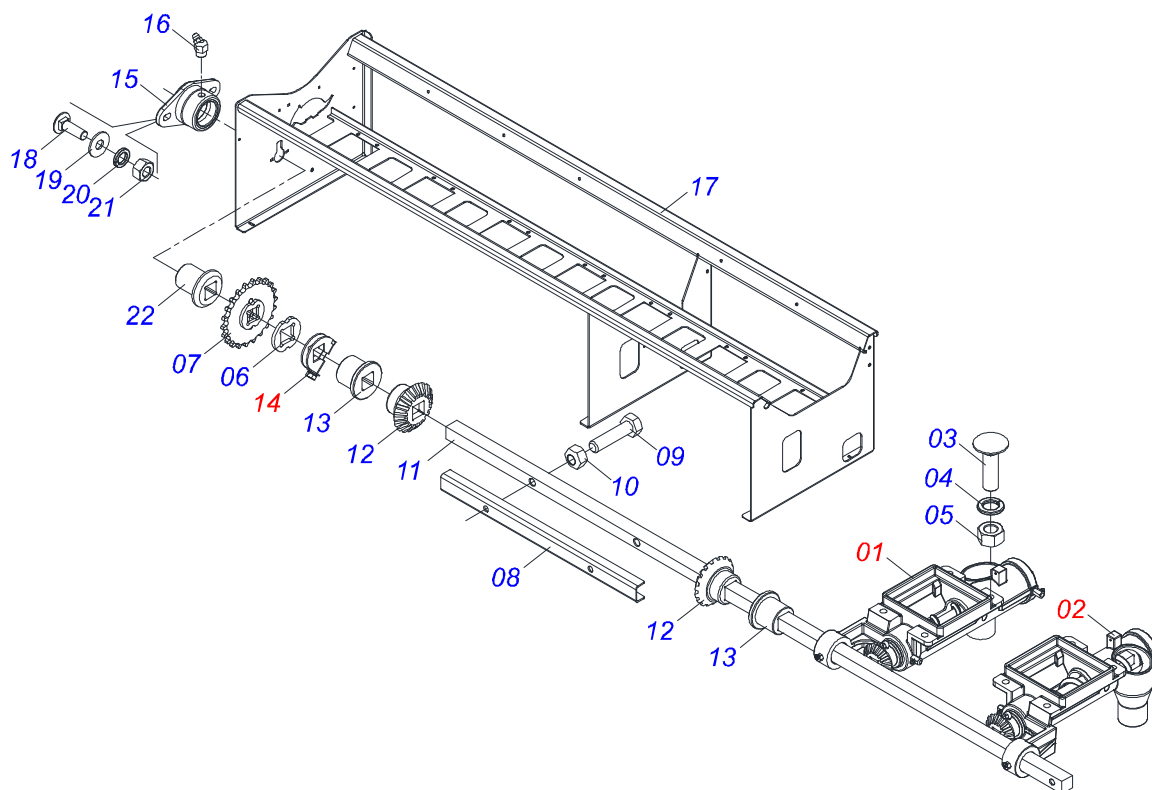


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	35	03
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	36	04
03	0501010942	3/8" X 1-1/4" BOLT		28
04	0503011443	3/8" SPRING WASHER		28
05	0503010026	3/8" NUT		28
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	NUT		02
10	0503013816	5/16" LOCKNUT		02
11	0581018936	SQUARE AXLE 3/4 X 2890 6350		01
12	1902010685	18Z CONICAL GEAR		07
13	0503030275	AGRICULTURAL BEARING		07
14	0501053788	3/4 SQUARE AXLE FASTENER	37	01
15	0501110392	SILO SUPPORT BEARING		01
16	0503010003	1845 GREASE FITTING		01
17	0521069412	SUPPORT RIGHT SILO FERTILIZER 6350		01
18	0503011953	5/16" X 1" BOLT		02
19	0521011039	FLAT WASHER		02
20	0503011444	SPRING WASHER		02
21	0503010337	5/16" NUT		02
22	0521012485	GEAR BOX BEARING AGRICUTURAL		01

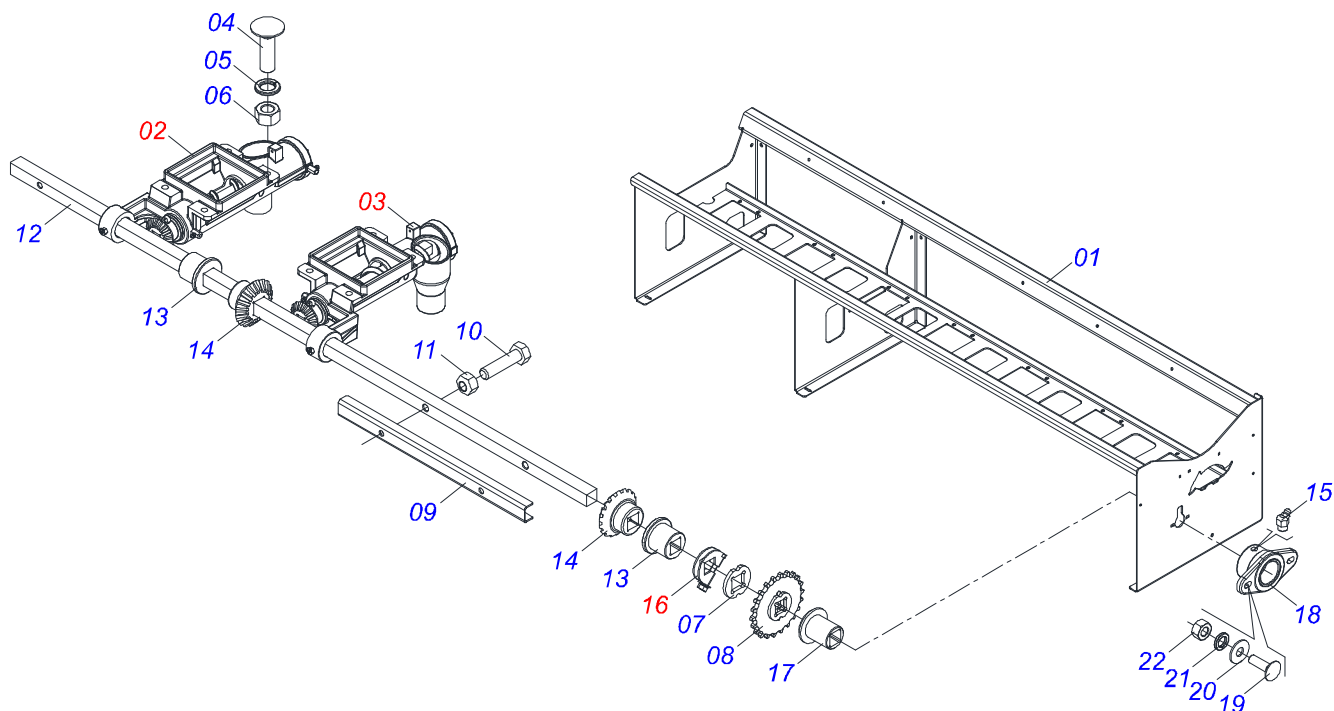


Item	Code	Description	See page	QT
01	0521069413	SUPPORT LEFT SILO FERTILIZER 6350		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	35	04
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	36	03
04	0501010942	3/8" X 1-1/4" BOLT		28
05	0503011443	3/8" SPRING WASHER		28
06	0503010026	3/8" NUT		28
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	NUT		02
11	0503010337	5/16" NUT		02
12	0581018936	SQUARE AXLE 3/4 X 2890 6350		01
13	0503030275	AGRICULTURAL BEARING		07
14	1902010685	18Z CONICAL GEAR		07
15	0503010003	1845 GREASE FITTING		01
16	0501053788	3/4 SQUARE AXLE FASTENER	37	01
17	0521012485	GEAR BOX BEARING AGRICUTURAL		01
18	0501110392	SILO SUPPORT BEARING		01
19	0503011953	5/16" X 1" BOLT		02
20	0521011039	FLAT WASHER		02
21	0503011444	SPRING WASHER		02
22	0503013816	5/16" LOCKNUT		02

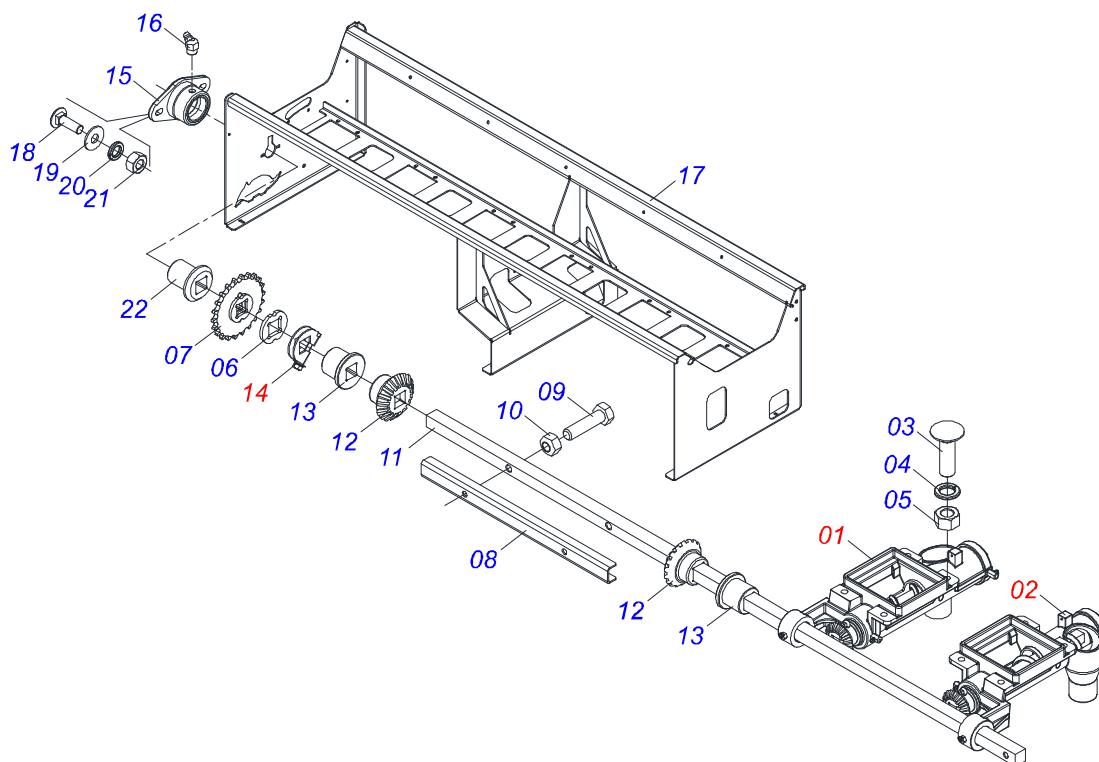


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	35	01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	36	05
03	0501010942	3/8" X 1-1/4" BOLT		24
04	0503011443	3/8" SPRING WASHER		24
05	0503010026	3/8" NUT		24
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	NUT		02
10	0503013816	5/16" LOCKNUT		02
11	0581018921	SQUARE AXLE 3/4 X 2275		01
12	1902010685	18Z CONICAL GEAR		06
13	0503030275	AGRICULTURAL BEARING		06
14	0501053788	3/4 SQUARE AXLE FASTENER	37	01
15	0501110392	SILO SUPPORT BEARING		01
16	0503010003	1845 GREASE FITTING		01
17	0521069407	SUPPORT RIGHT SILO FERTILIZER		01
18	0503011953	5/16" X 1" BOLT		02
19	0521011039	FLAT WASHER		02
20	0503011444	SPRING WASHER		02
21	0503010337	5/16" NUT		02
22	0521012485	GEAR BOX BEARING AGRICUTURAL		01

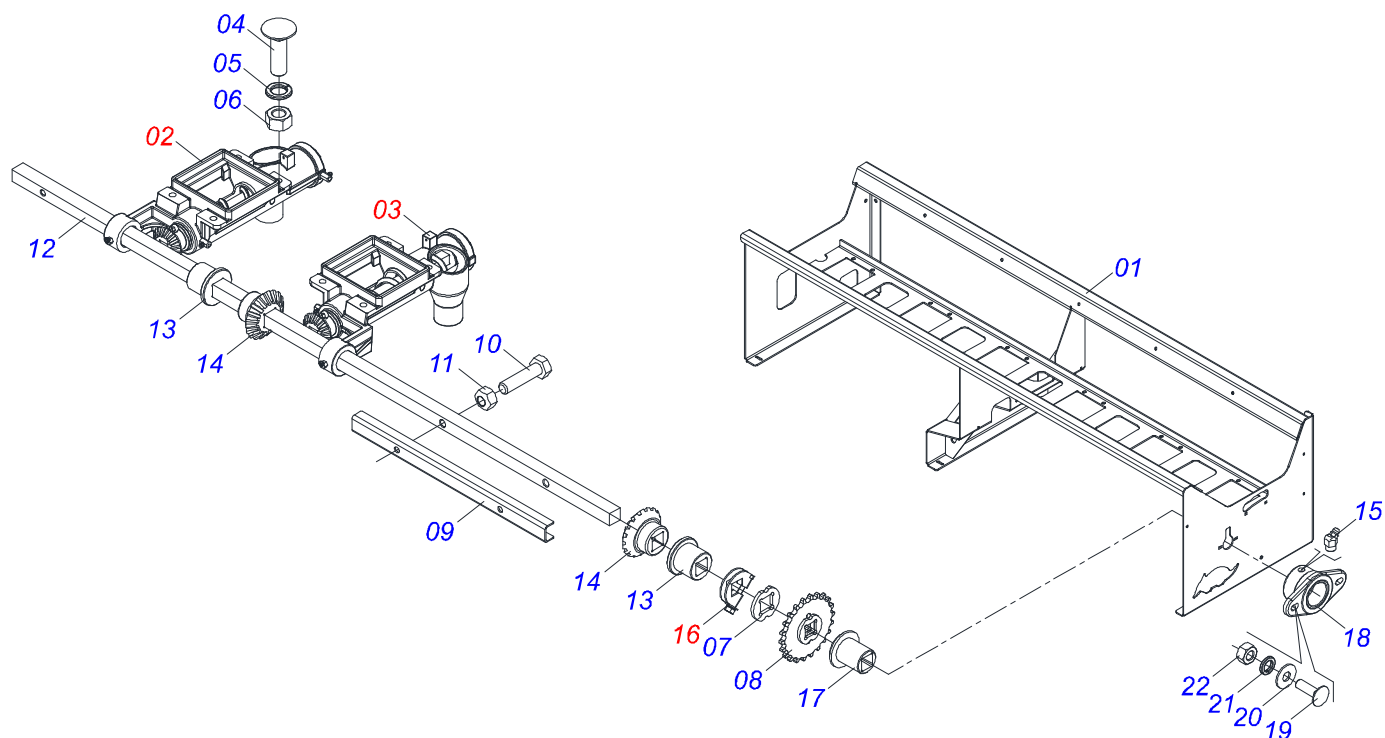


Item	Code	Description	See page	QT
01	0521069406	LEFT SUPPORT SILO FERTILIZER		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	35	05
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	36	01
04	0501010942	3/8" X 1-1/4" BOLT		24
05	0503011443	3/8" SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	NUT		02
11	0503010337	5/16" NUT		02
12	0581018921	SQUARE AXLE 3/4 X 2275		01
13	0503030275	AGRICULTURAL BEARING		06
14	1902010685	18Z CONICAL GEAR		06
15	0503010003	1845 GREASE FITTING		01
16	0501053788	3/4 SQUARE AXLE FASTENER	37	01
17	0521012485	GEAR BOX BEARING AGRICUTURAL		01
18	0501110392	SILO SUPPORT BEARING		01
19	0503011953	5/16" X 1" BOLT		02
20	0521011039	FLAT WASHER		02
21	0503011444	SPRING WASHER		02
22	0503013816	5/16" LOCKNUT		02

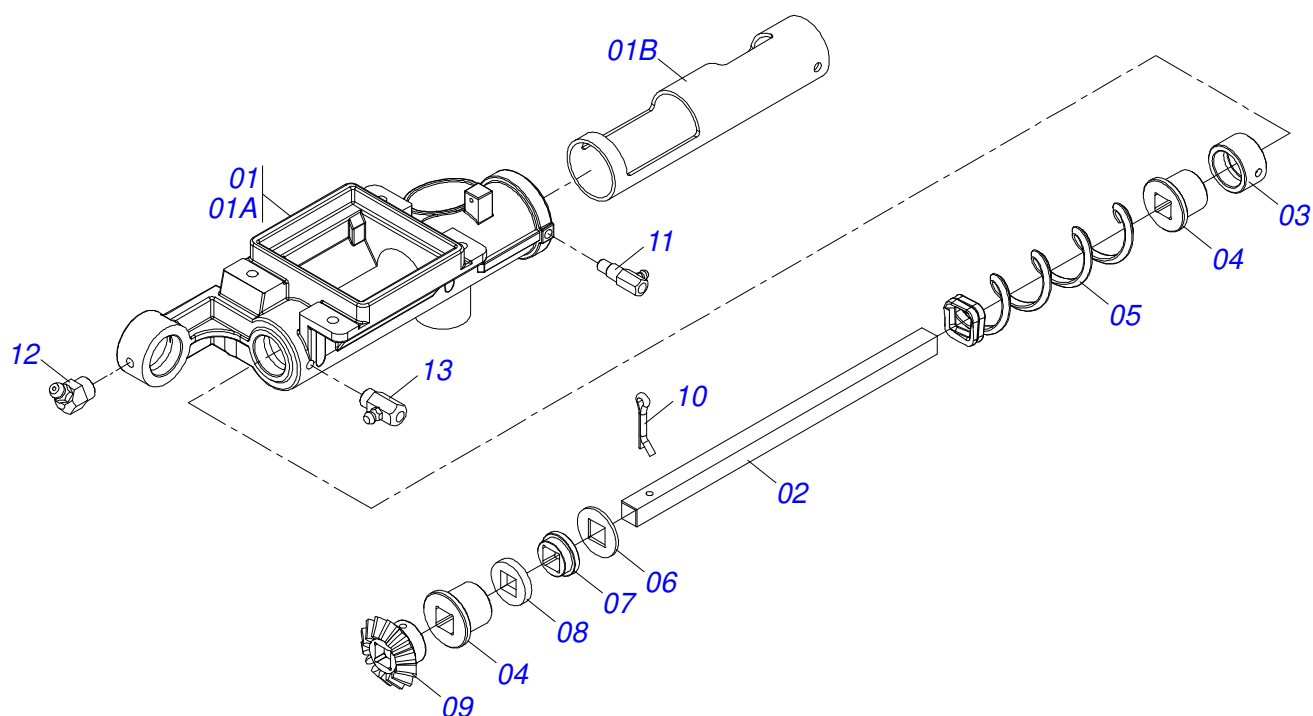


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

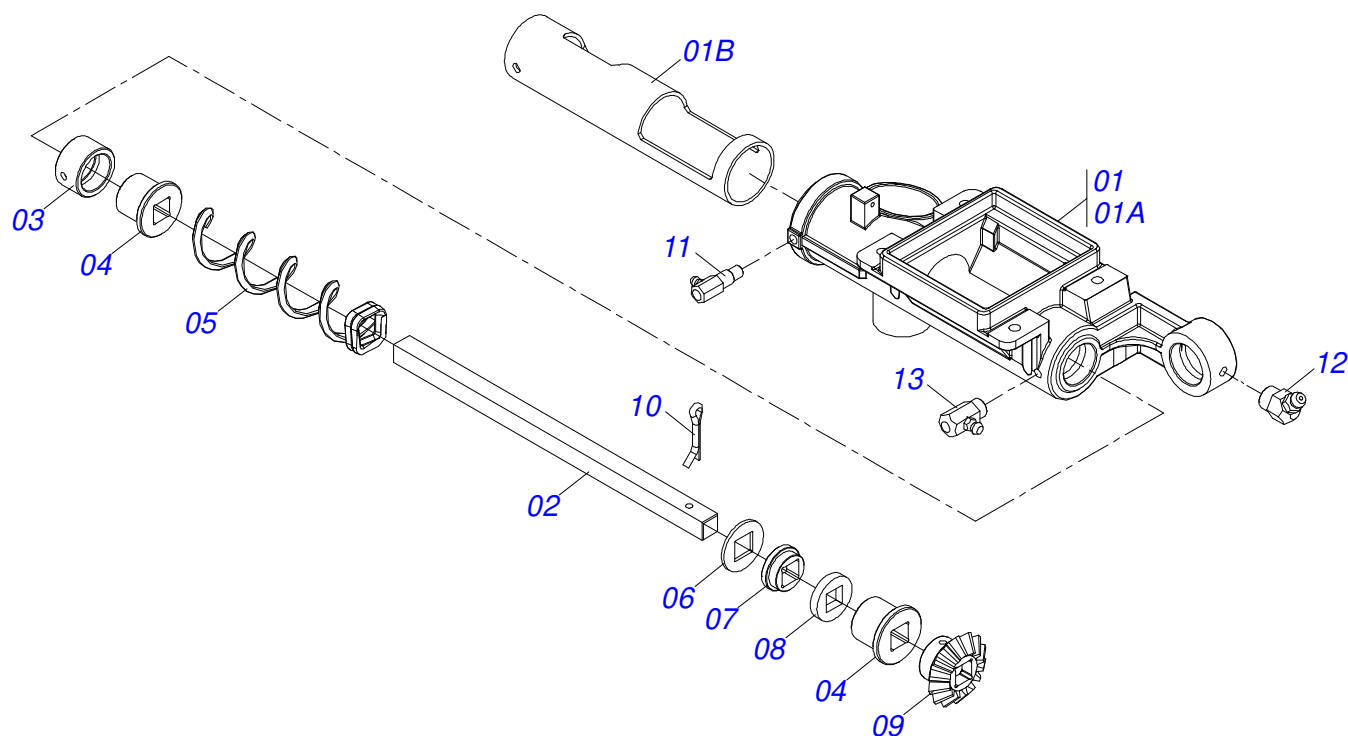

Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

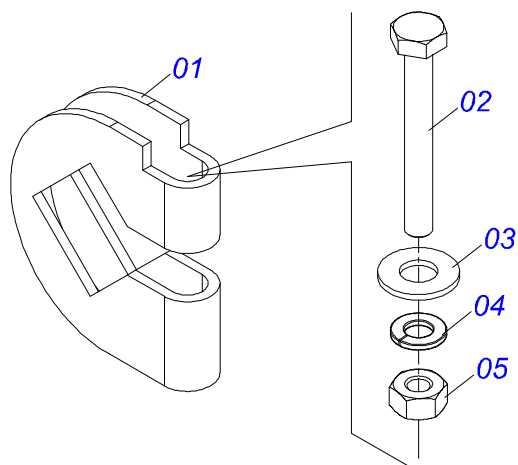

Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

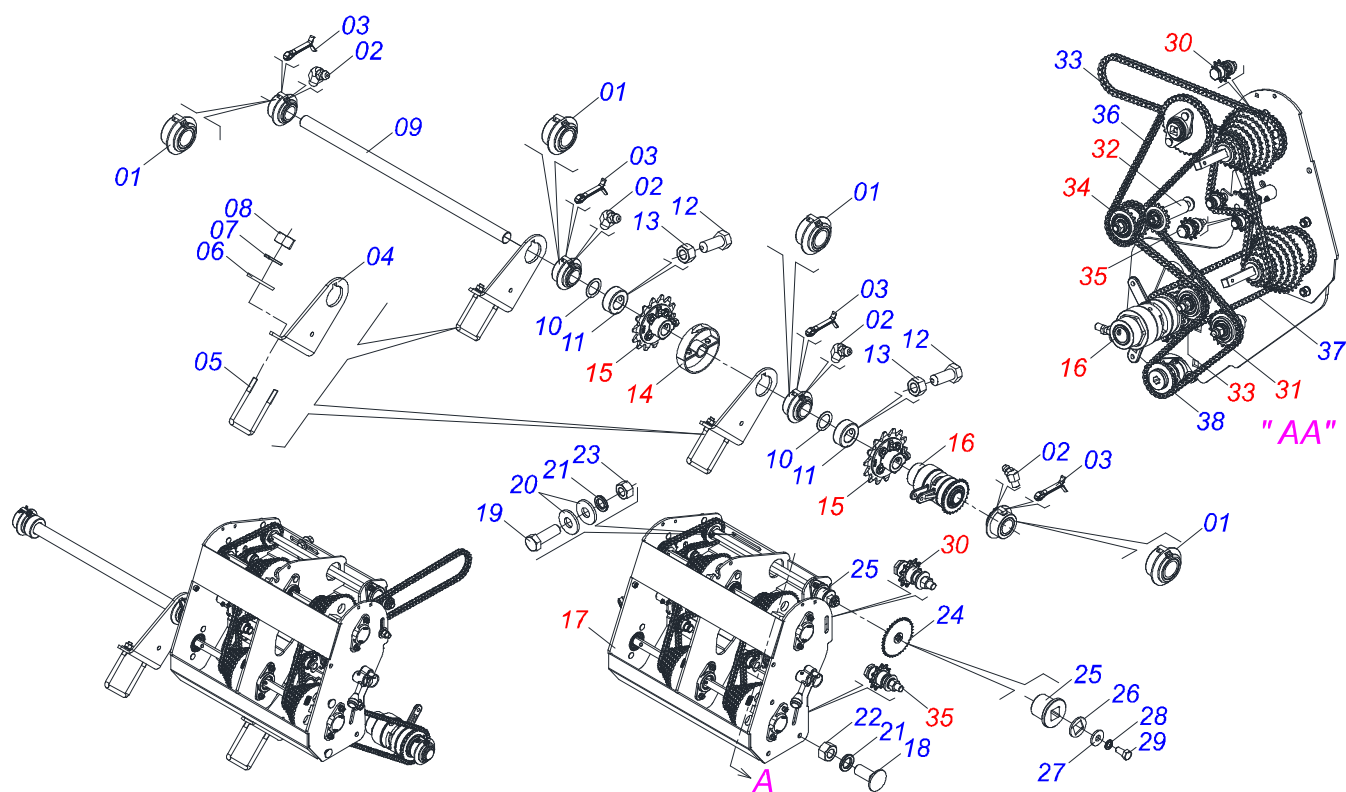


Item	Code	Description	See page	QT
01	0501110639	BEARING		04
02	0503011099	GREASE FITTING		04
03	0503010300	5/32" X 1" COTTERPIN		04
04	0551019114	MOTOR BEARING AXLE SUPPORT		02
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
06	0511017302	FLAT WASHER		04
07	0503010019	1/2" SPRING WASHER		04
08	0503010060	1/2" NUT		04
09	0571013750	MOTOR AXLE 3060		01
10	0501018466	FLAT WASHER		02
11	0511015961	LOCK BUSHING		02
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		02
13	0503010060	1/2" NUT		02
14	0501052560	MOTOR AXLE SIGNAL	40	01
15	0511051434	TRANSMISSION ACTUATOR	41	02
16	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	42	01
17	0521043317	LEFT GEAR BOX ASSY	43	01
18	0501010243	1/2" X 1-1/2" BOLT		03
19	0503010920	1/2" X 1.1/2" BOLT		02
20	0511017302	FLAT WASHER		04
21	0503010019	1/2" SPRING WASHER		05
22	0503012682	1/2" BSW NUT		03
23	0503010060	1/2" NUT		02
24	0521062072	33Z GEAR		01
25	0503030303	SUPPORT WASHER		03
26	0501010637	FLAT WASHER		01
27	0501010984	FLAT WASHER		01
28	0503010025	3/8" SPRING WASHER		01
29	0503010256	3/8" X 3/4" BOLT		01
30	0511054363	CHAIN TENSIONER	51	01
31	0501058234	LOWER CHAIN TENSIONER	53	01

LEFT TRANSMISSION ASSY

0511056807

Item	Code	Description	See page	QT
32	0521055207	TOP CURRENT STRETCHER	54	01
33	0501058236	BEARING WITH 21Z GEAR	55	01
34	0501058237	16Z GEAR BEARING	56	01
35	0501055112	MICRO GRANULATED CHAIN TENSIONER	52	01
36	0503012391	40-1 CHAIN X 83 LINK + MENDING		01
37	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
38	0503012718	40-1 CHAIN X 111 LINK + MENDING		02

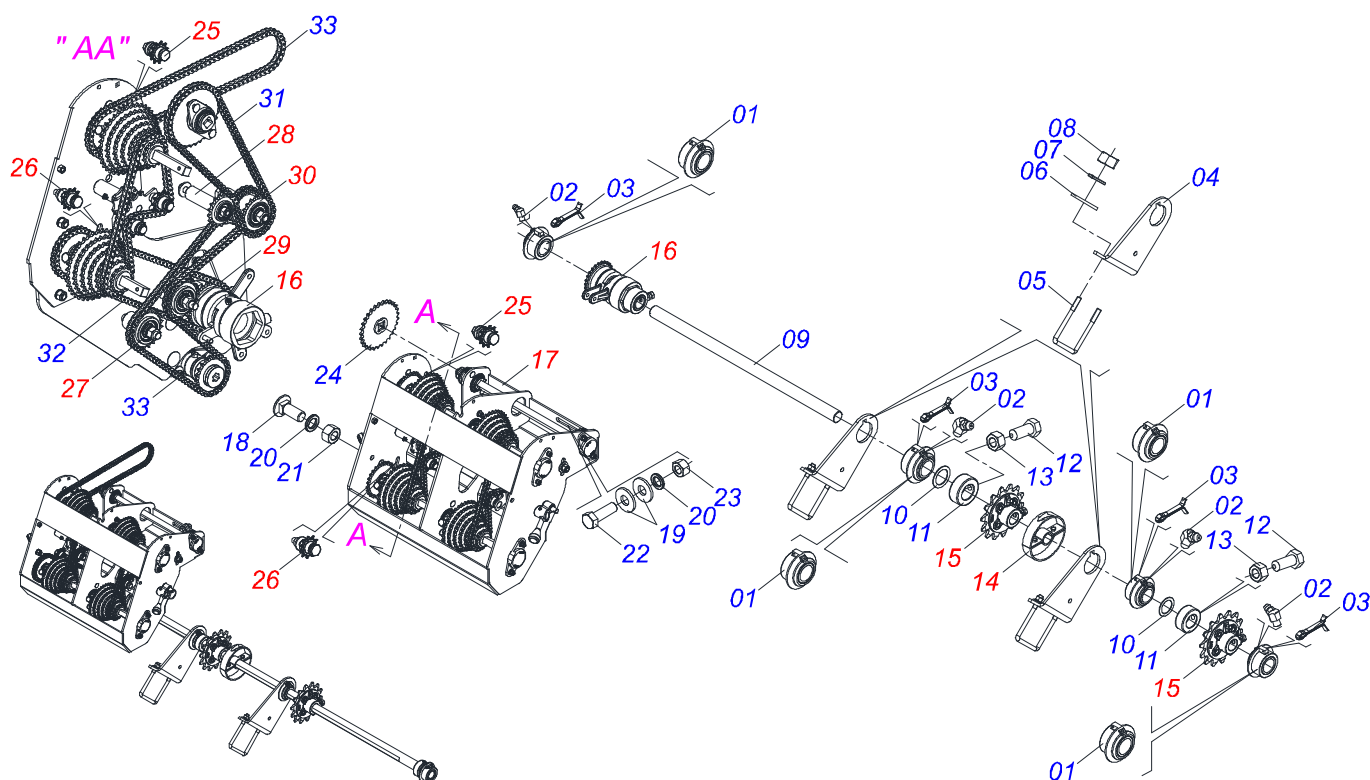

Item	Code	Description	See page	QT
01	0501110639	BEARING		04
02	0503011099	GREASE FITTING		04
03	0503010300	5/32" X 1" COTTERPIN		04
04	0551019114	MOTOR BEARING AXLE SUPPORT		02
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
06	0511017302	FLAT WASHER		04
07	0503010019	1/2" SPRING WASHER		04
08	0503010060	1/2" NUT		04
09	0561016876	MOTOR SHAFT		01
10	0501018466	FLAT WASHER		02
11	0511015961	LOCK BUSHING		02
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		02
13	0503010060	1/2" NUT		02
14	0501052560	MOTOR AXLE SIGNAL	40	01
15	0511051434	TRANSMISSION ACTUATOR	41	02
16	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	42	01
17	0521043317	LEFT GEAR BOX ASSY	43	01
18	0501010243	1/2" X 1-1/2" BOLT		03
19	0511017302	FLAT WASHER		04
20	0503010019	1/2" SPRING WASHER		05
21	0503012682	1/2" BSW NUT		03
22	0503010920	1/2" X 1.1/2" BOLT		02
23	0503010060	1/2" NUT		02
24	0521062072	33Z GEAR		01
25	0511054363	CHAIN TENSIONER	51	01
26	0501055112	MICRO GRANULATED CHAIN TENSIONER	52	01
27	0501058234	LOWER CHAIN TENSIONER	53	01
28	0521055207	TOP CURRENT STRETCHER	54	01
29	0501058236	BEARING WITH 21Z GEAR	55	01
30	0501058237	16Z GEAR BEARING	56	01
31	0503012391	40-1 CHAIN X 83 LINK + MENDING		01



PST DUO - FRAME 4880/6350


(FROM 04/2022)

Page 39


LEFT TRANSMISSION ASSEMBLY - 4880

0511056741


Item	Code	Description	See page	QT
32	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
33	0503012718	40-1 CHAIN X 111 LINK + MENDING		02

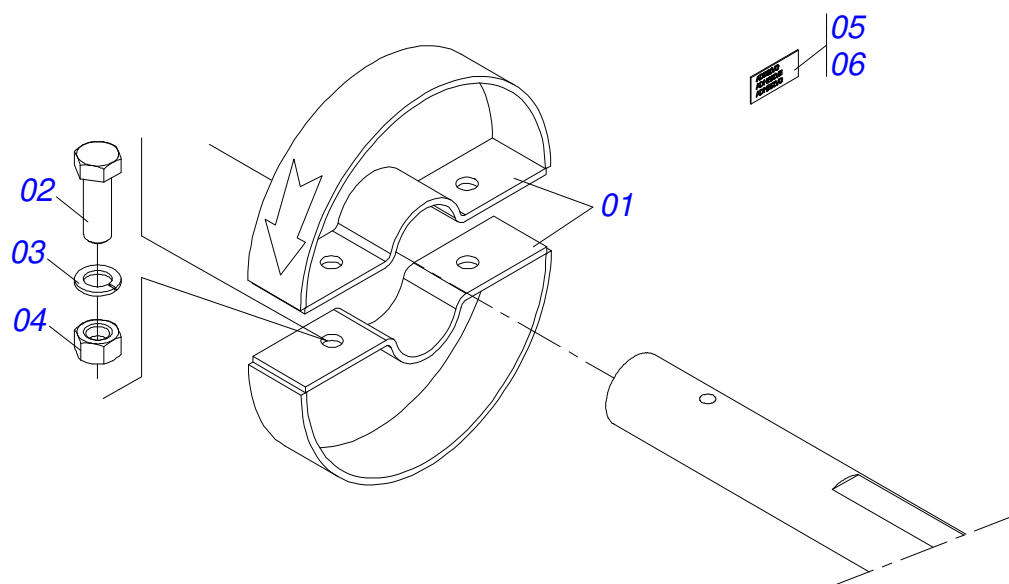

Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ADHESIVE LABEL		01

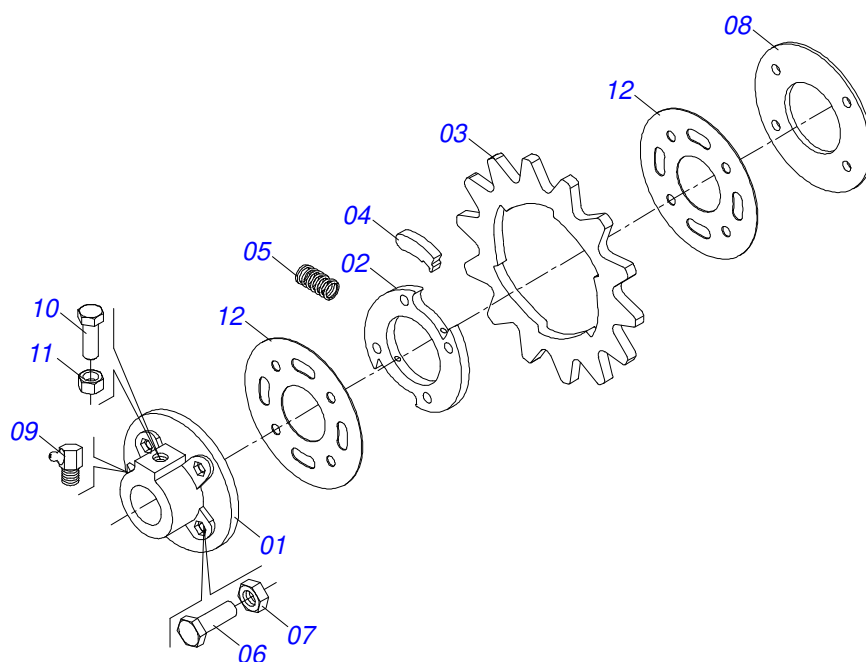


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

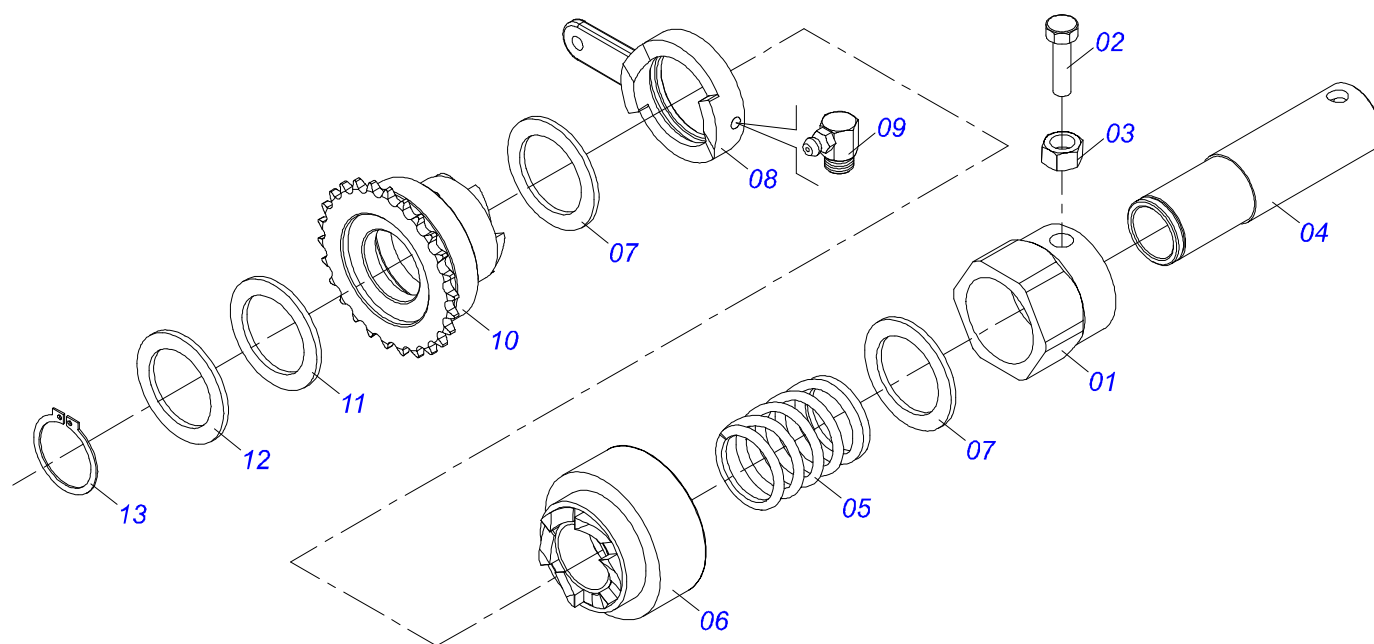


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

LEFT GEAR BOX ASSY


0521043317

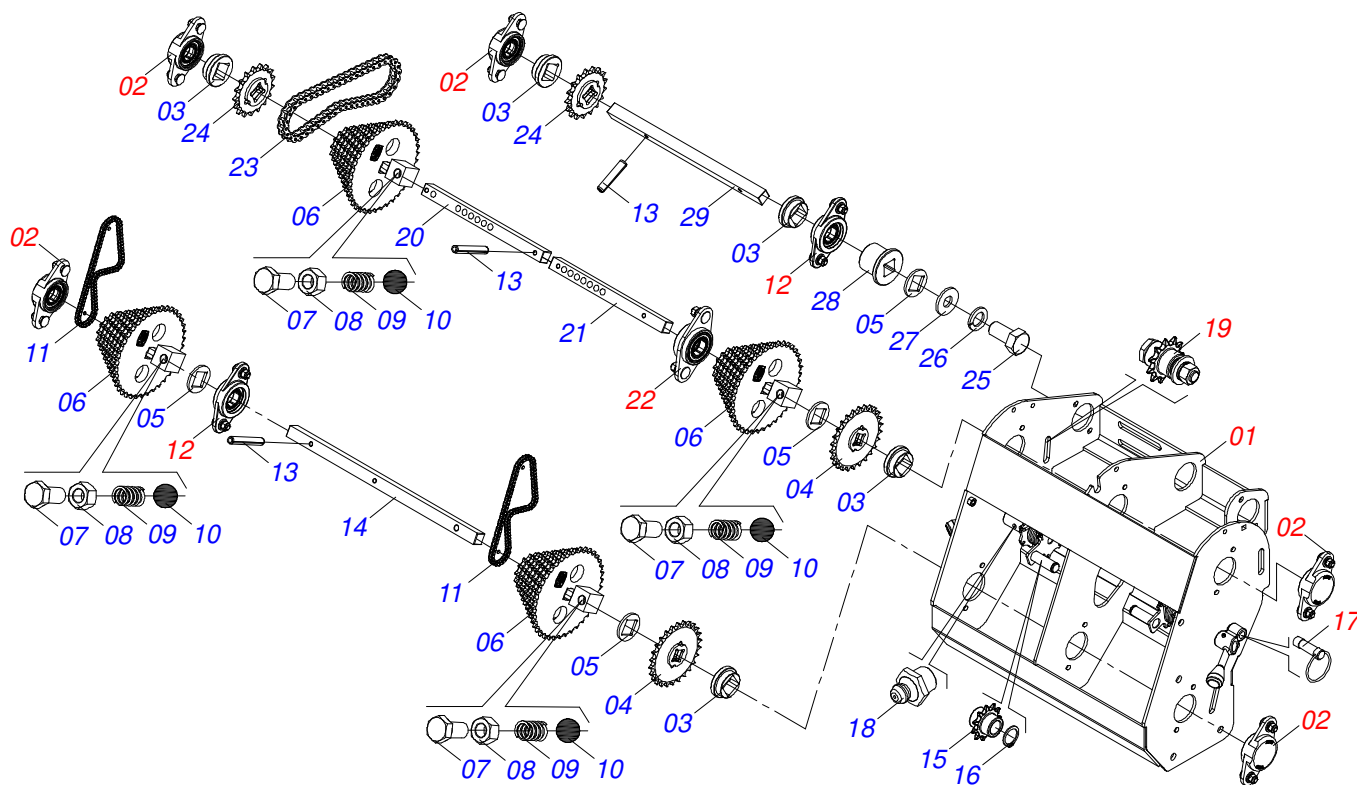


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	44	01
02	0511059266	CLOSED BEARING	45	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN AXLE CONE		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2" NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	47	02
13	0503010292	0.2" X 1.6" SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	49	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY		01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	50	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8" SPRING WASHER		01
27	0501010984	FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

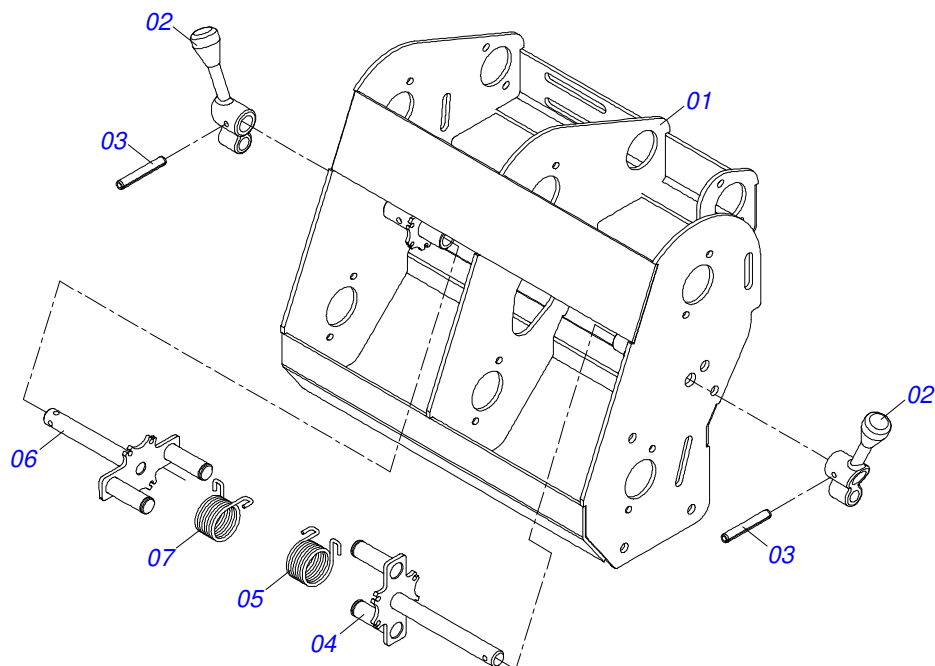


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

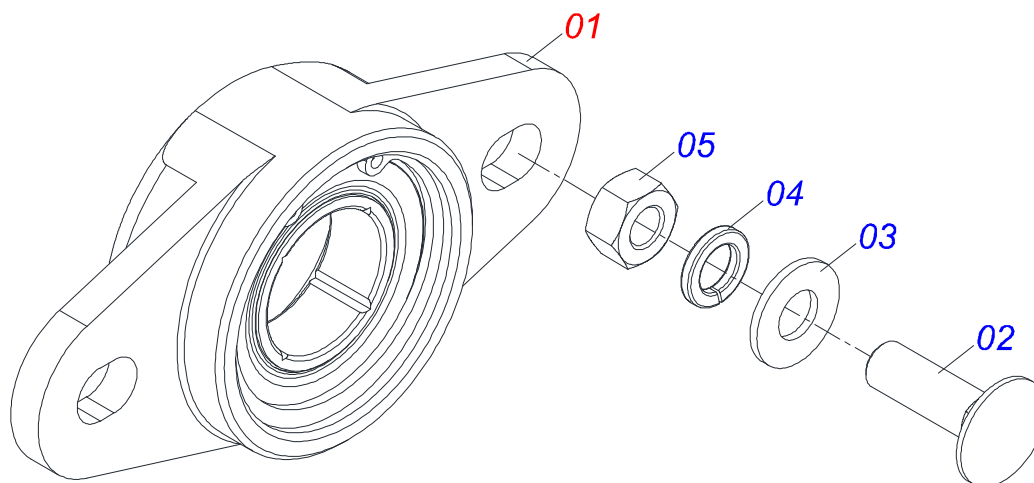


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	46	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

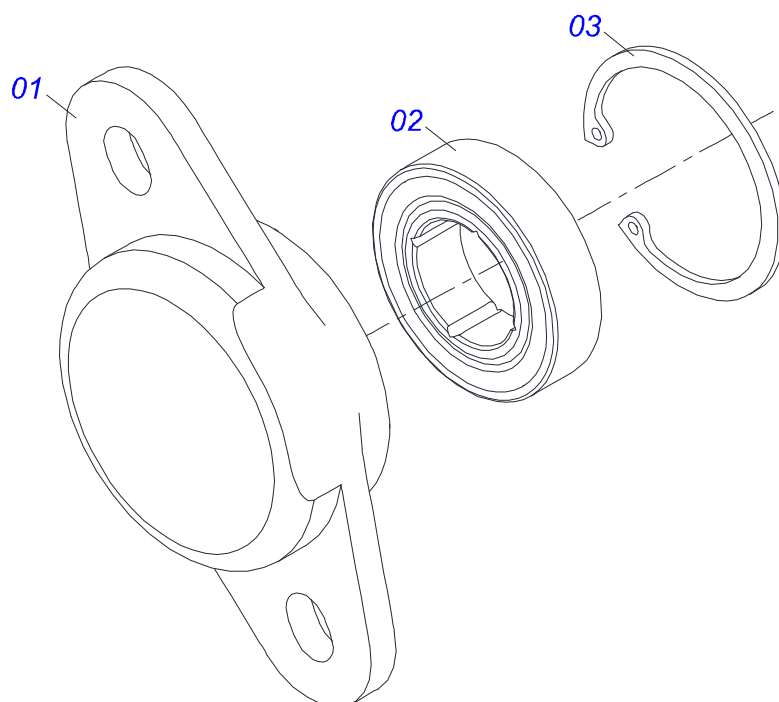


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

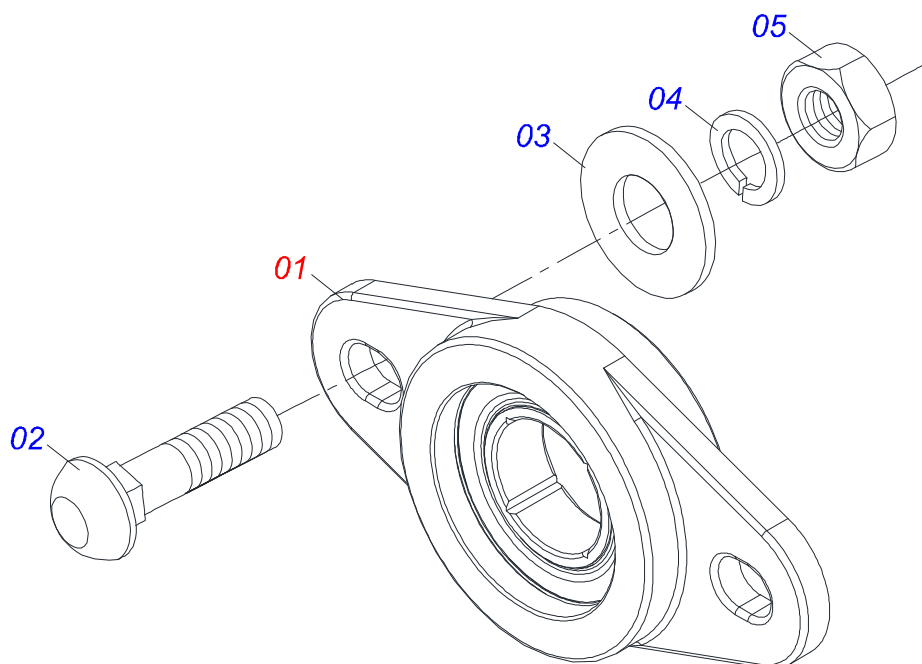


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	48	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

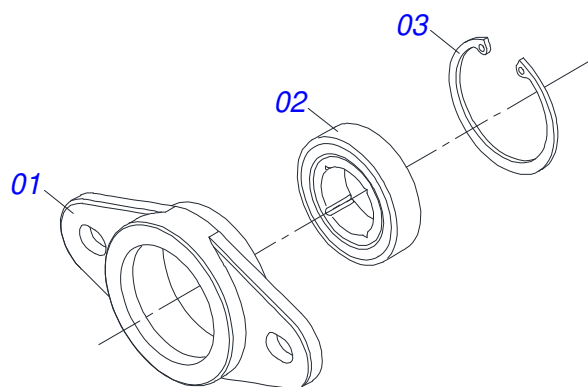


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

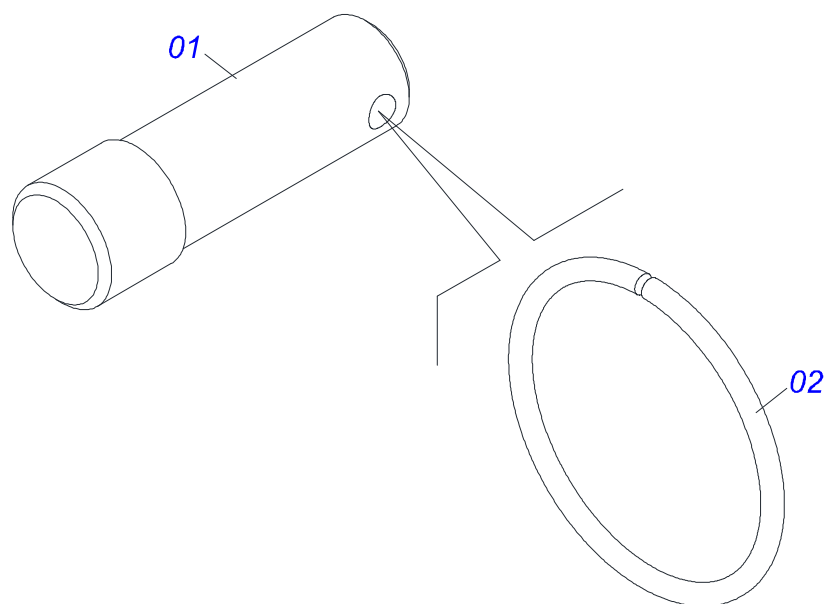


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

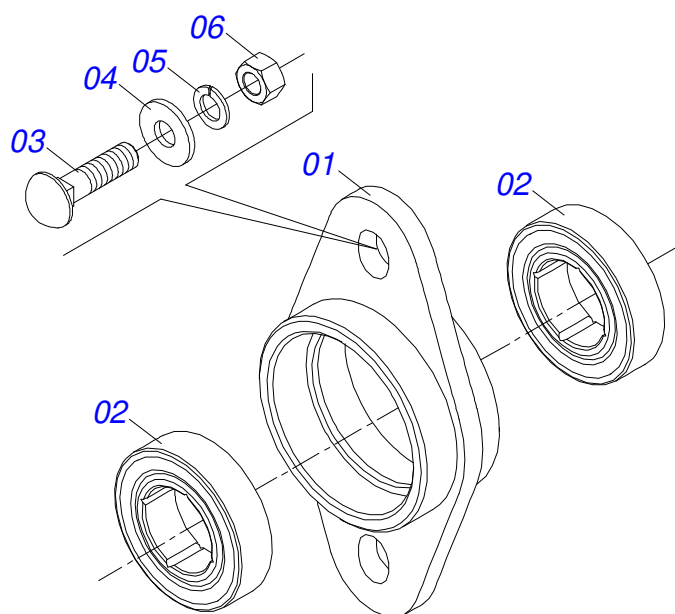


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER		02
06	0503010337	5/16" NUT		02

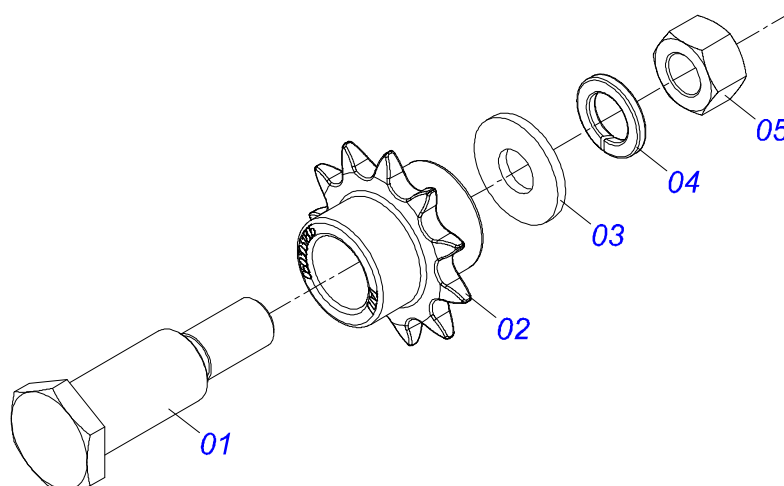


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

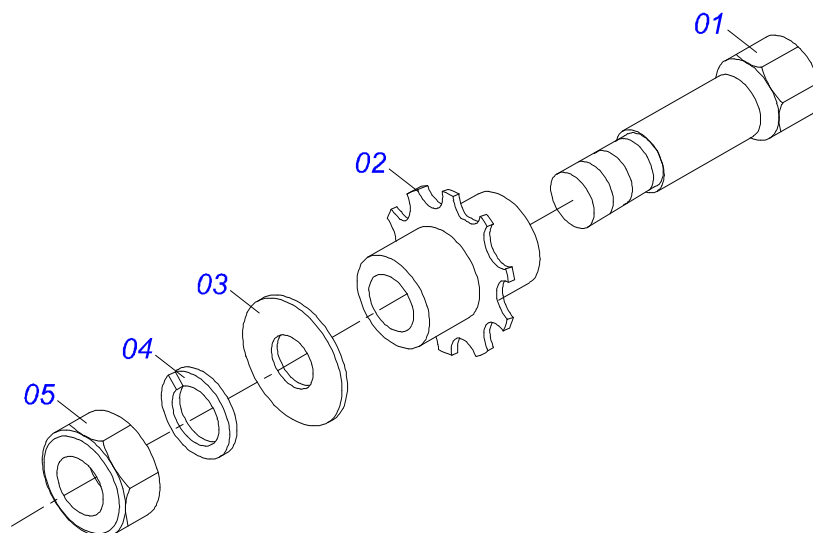


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

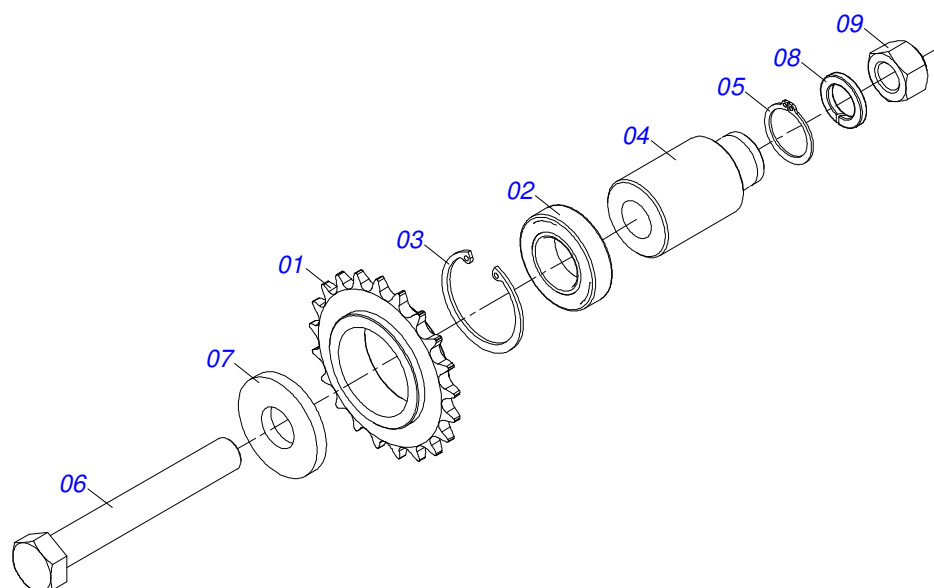


Item	Code	Description	See page	QT
01	0511062169	21Z P 1/2" GEAR		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0551019171	CHAIN TIGHTENER AXLE		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0501010163	5/8" X 4-1/2" BOLT		01
07	0501012140	FLAT WASHER		01
08	0503010027	5/8" SPRING WASHER		01
09	0503010013	5/8" NUT		01

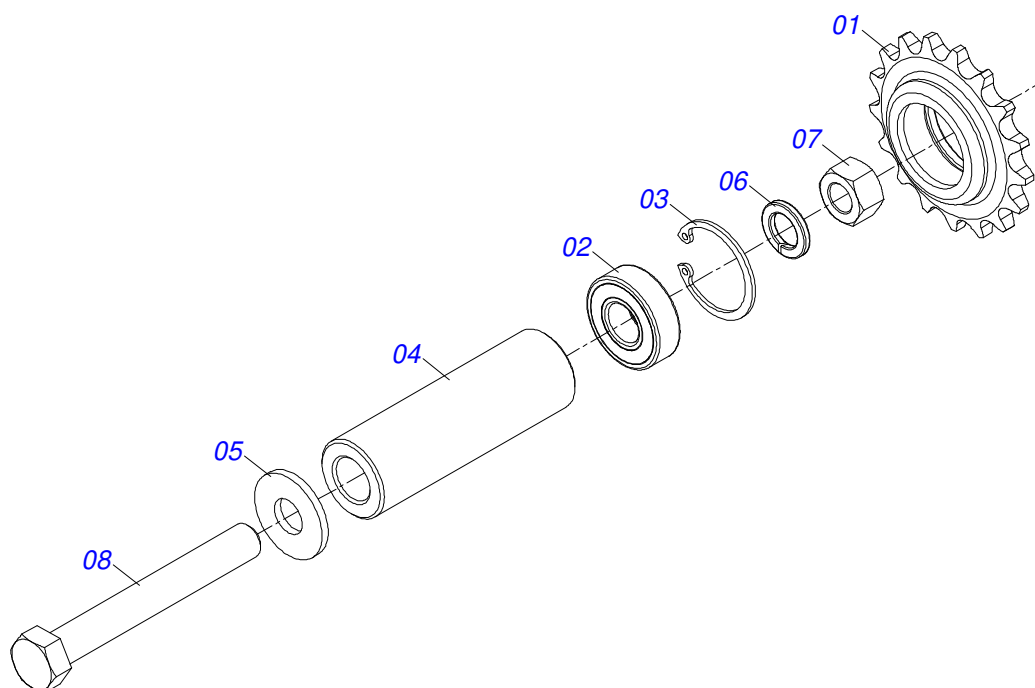


Item	Code	Description	See page	QT
01	0502012367	17Z X P 1/2" GEAR INTERM		01
02	0503019355	BEARING 6202 2RS1		01
03	0503011945	503050 CLAMPING RING (FOR AXLE)		01
04	0551019173	CHAIN SLEEVE TENSIONER		01
05	0511017302	FLAT WASHER		01
06	0503010019	1/2" SPRING WASHER		01
07	0503010060	1/2" NUT		01
08	0503011411	1/2" X 5-1/2" BOLT		01

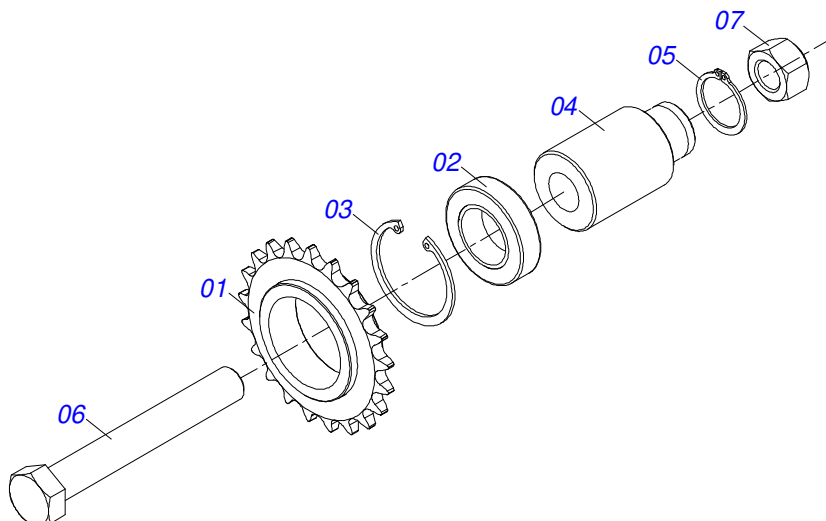

Item	Code	Description	See page	QT
01	0511062169	21Z P 1/2" GEAR		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0551019171	CHAIN TIGHTENER AXLE		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0501010163	5/8" X 4-1/2" BOLT		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01

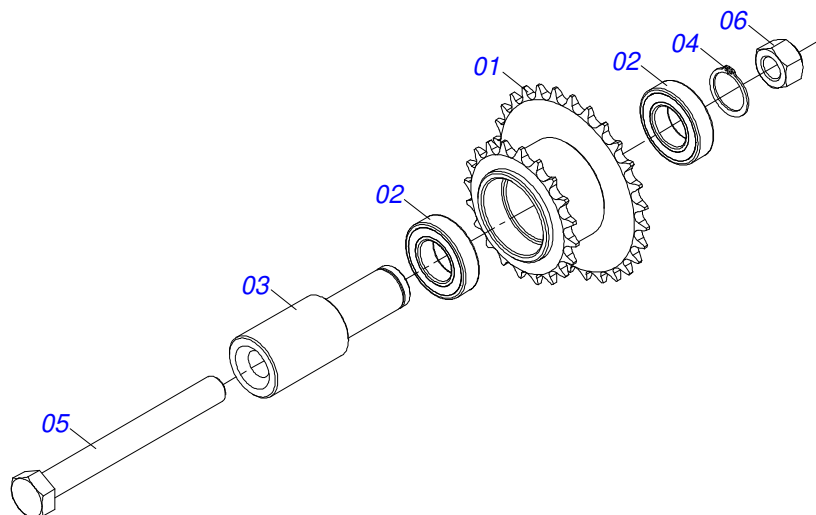

Item	Code	Description	See page	QT
01	0511069680	20Z X 28Z DOBLE GEAR		01
02	0503011410	ROLLER BEARING		02
03	0551019174	DOBLE GEAR AXLE		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		01
06	0503012412	5/8 UNC SELF LOCKING NUT		01

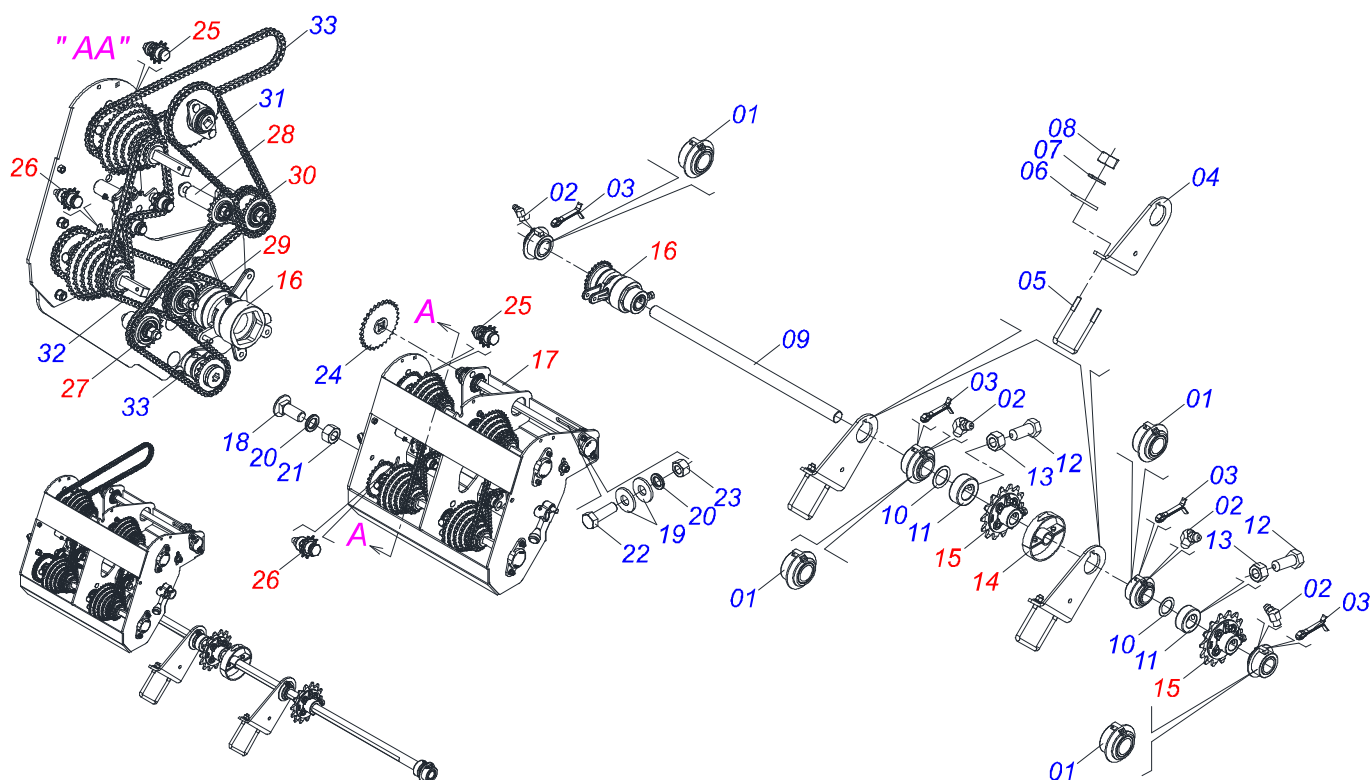

Item	Code	Description	See page	QT
01	0501110639	BEARING		04
02	0503011099	GREASE FITTING		04
03	0503010300	5/32" X 1" COTTERPIN		04
04	0551019114	MOTOR BEARING AXLE SUPPORT		02
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
06	0511017302	FLAT WASHER		04
07	0503010019	1/2" SPRING WASHER		04
08	0503010060	1/2" NUT		04
09	0561016876	MOTOR SHAFT		01
10	0501018466	FLAT WASHER		02
11	0511015961	LOCK BUSHING		02
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		02
13	0503010060	1/2" NUT		02
14	0501052560	MOTOR AXLE SIGNAL	40	01
15	0511051434	TRANSMISSION ACTUATOR	41	02
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	59	01
17	0521043316	RIGHT GEAR BOX ASSY		01
18	0501010243	1/2" X 1-1/2" BOLT		03
19	0511017302	FLAT WASHER		04
20	0503010019	1/2" SPRING WASHER		05
21	0503012682	1/2" BSW NUT		03
22	0503010920	1/2" X 1.1/2" BOLT		02
23	0503010060	1/2" NUT		02
24	0521062072	33Z GEAR		01
25	0511054363	CHAIN TENSIONER	51	01
26	0501058234	LOWER CHAIN TENSIONER	53	01
27	0521055207	TOP CURRENT STRETCHER	54	01
28	0501058236	BEARING WITH 21Z GEAR	55	01
29	0501058237	16Z GEAR BEARING	56	01
30	0501055112	MICRO GRANULATED CHAIN TENSIONER	52	01
31	0503012391	40-1 CHAIN X 83 LINK + MENDING		01



PST DUO - FRAME 4880/6350


(FROM 04/2022)

Page 57

RIGHT TRANSMISSION ASSY - 4880

0511056740

Item	Code	Description	See page	QT
32	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
33	0503012718	40-1 CHAIN X 111 LINK + MENDING		02

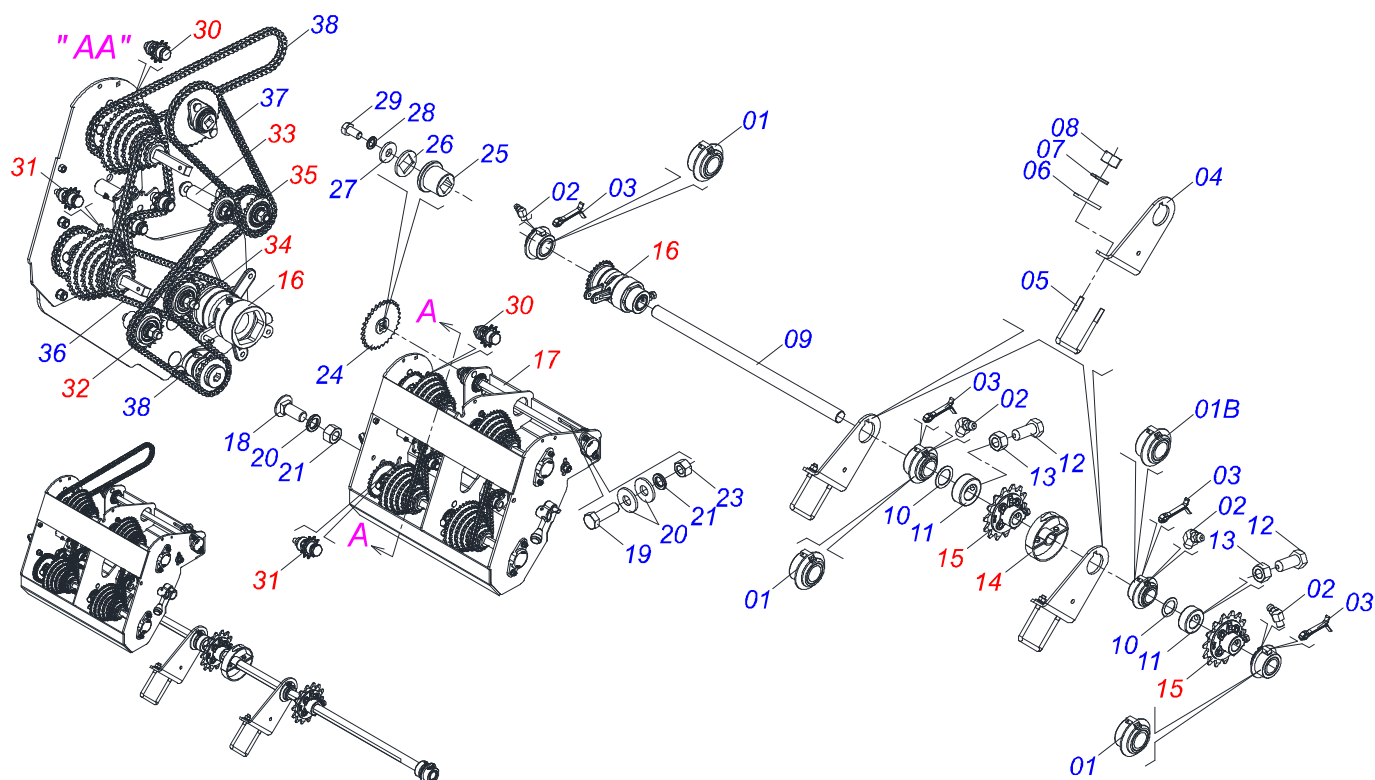


Item	Code	Description	See page	QT
01	0501110639	BEARING		04
02	0503011099	GREASE FITTING		04
03	0503010300	5/32" X 1" COTTERPIN		04
04	0551019114	MOTOR BEARING AXLE SUPPORT		02
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
06	0511017302	FLAT WASHER		04
07	0503010019	1/2" SPRING WASHER		04
08	0503010060	1/2" NUT		04
09	0571013750	MOTOR AXLE 3060		01
10	0501018466	FLAT WASHER		02
11	0511015961	LOCK BUSHING		02
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		02
13	0503010060	1/2" NUT		02
14	0501052560	MOTOR AXLE SIGNAL	40	01
15	0511051434	TRANSMISSION ACTUATOR	41	02
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	59	01
17	0521043316	RIGHT GEAR BOX ASSY		01
18	0501010243	1/2" X 1-1/2" BOLT		03
19	0503010920	1/2" X 1.1/2" BOLT		02
20	0511017302	FLAT WASHER		04
21	0503010019	1/2" SPRING WASHER		05
22	0503012682	1/2" BSW NUT		03
23	0503010060	1/2" NUT		02
24	0521062072	33Z GEAR		01
25	0503030303	SUPPORT WASHER		03
26	0501010637	FLAT WASHER		01
27	0501010984	FLAT WASHER		01
28	0503010025	3/8" SPRING WASHER		01
29	0503010256	3/8" X 3/4" BOLT		01
30	0511054363	CHAIN TENSIONER	51	01
31	0501058234	LOWER CHAIN TENSIONER	53	01


RIGHT TRANSMISSION ASSY

0511056806


Item	Code	Description	See page	QT
32	0521055207	TOP CURRENT STRETCHER	54	01
33	0501058236	BEARING WITH 21Z GEAR	55	01
34	0501058237	16Z GEAR BEARING	56	01
35	0501055112	MICRO GRANULATED CHAIN TENSIONER	52	01
36	0503012391	40-1 CHAIN X 83 LINK + MENDING		01
37	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
38	0503012718	40-1 CHAIN X 111 LINK + MENDING		02

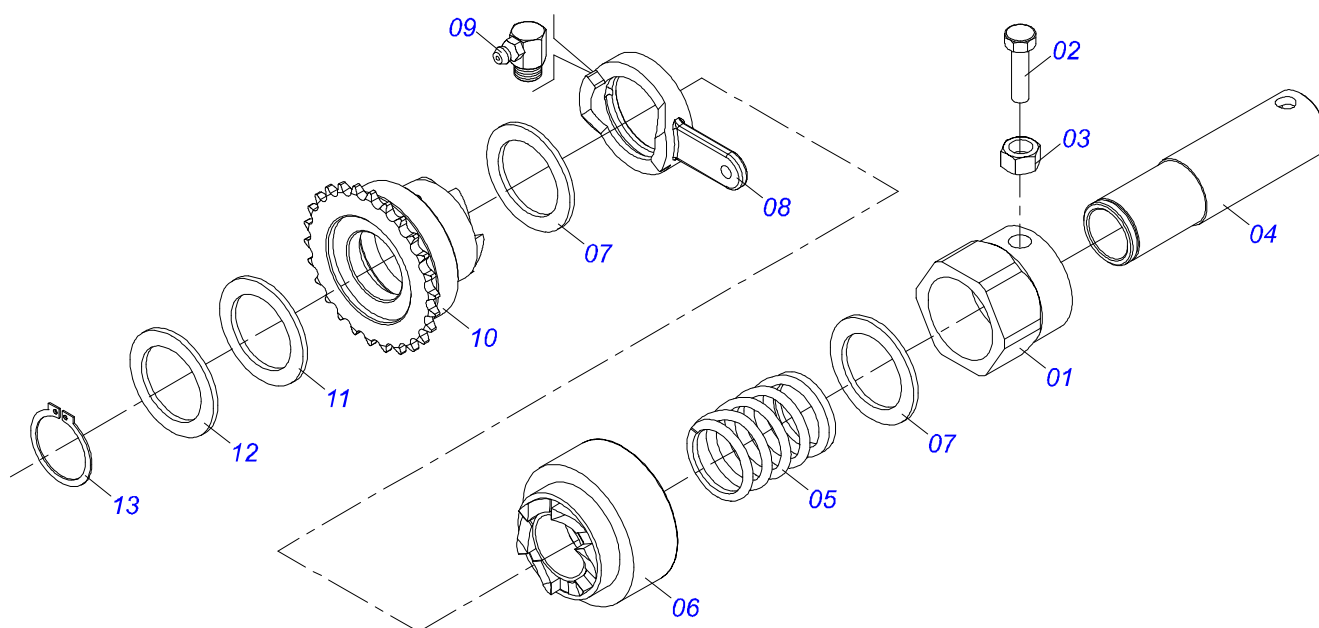


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

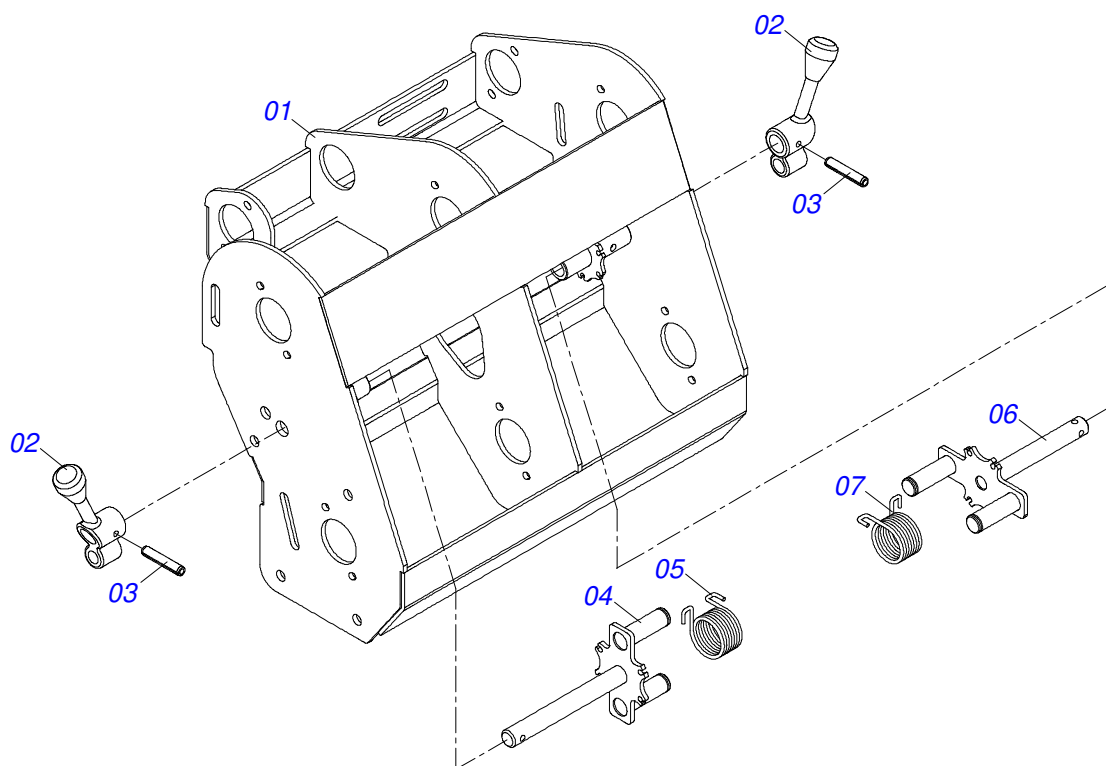


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

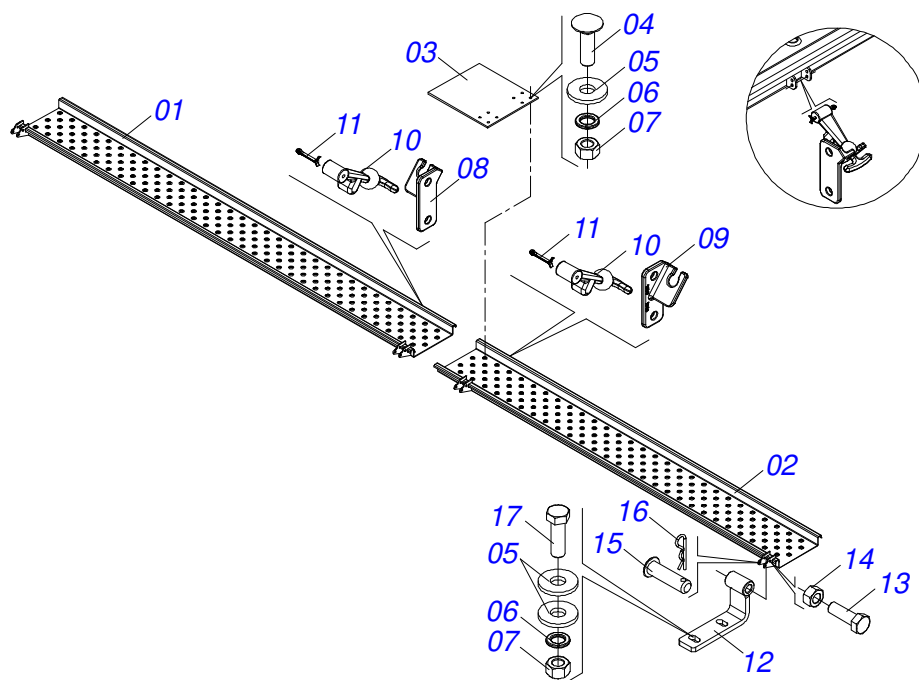


Item	Code	Description	See page	QT
01	0521069416	RIGHT PLATFORM		01
02	0521069421	LEFT PLATFORM		01
03	0581015863	PLATFORM ENHANCEMENT PROTECTION		01
04	0501010942	3/8" X 1-1/4" BOLT		02
05	0501010984	FLAT WASHER		18
06	0503010025	3/8" SPRING WASHER		10
07	0503010026	3/8" NUT		10
08	0502012739	PLATFORM LEFT FIXER SUPPORT		01
09	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
10	0503011333	COVER FIXER		02
11	0503010274	5/32"X 2" COTTERPIN		02
12	0521068316	JOINT SUPPORT		04
13	0503010741	1/2" X 2-3/4" BOLT		04
14	0503011336	1/2" HEX SELF ADJUSTING NUT		04
15	0521010549	COUPLING SHAFT		04
16	0503030168	CUPILLA		04
17	0503010849	3/8" X 1-1/2" BOLT		08

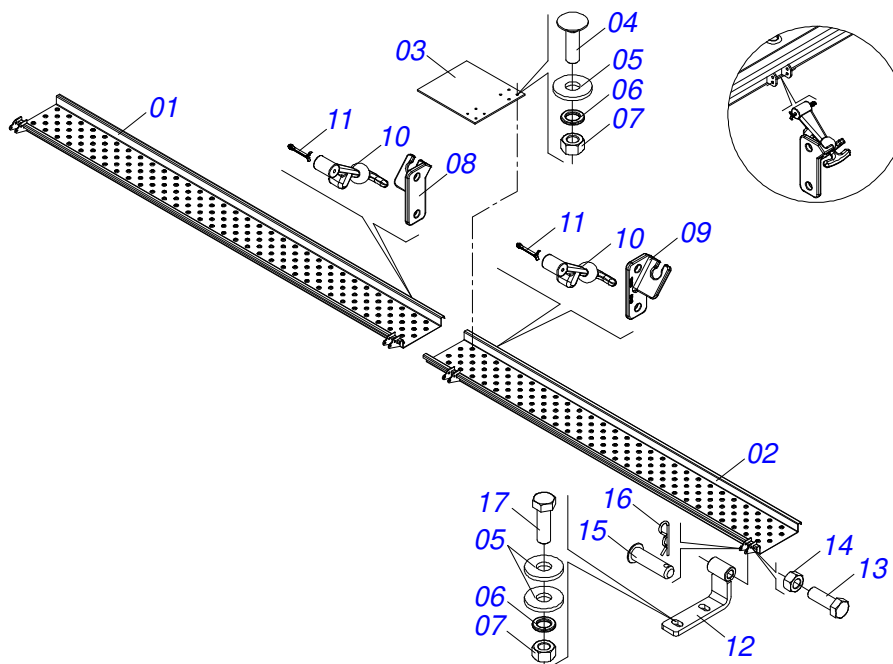


Item	Code	Description	See page	QT
01	0521069419	RIGHT PLATFORM 6350		01
02	0521069424	LEFT PLATFORM 6350		01
03	0581015863	PLATFORM ENHANCEMENT PROTECTION		01
04	0501010942	3/8" X 1-1/4" BOLT		02
05	0501010984	FLAT WASHER		18
06	0503010025	3/8" SPRING WASHER		10
07	0503010026	3/8" NUT		10
08	0502012739	PLATFORM LEFT FIXER SUPPORT		01
09	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
10	0503011333	COVER FIXER		02
11	0503010274	5/32"X 2" COTTERPIN		02
12	0521068316	JOINT SUPPORT		04
13	0503010741	1/2" X 2-3/4" BOLT		04
14	0503011336	1/2" HEX SELF ADJUSTING NUT		04
15	0521010549	COUPLING SHAFT		04
16	0503030168	CUPILLA		04
17	0503010849	3/8" X 1-1/2" BOLT		08

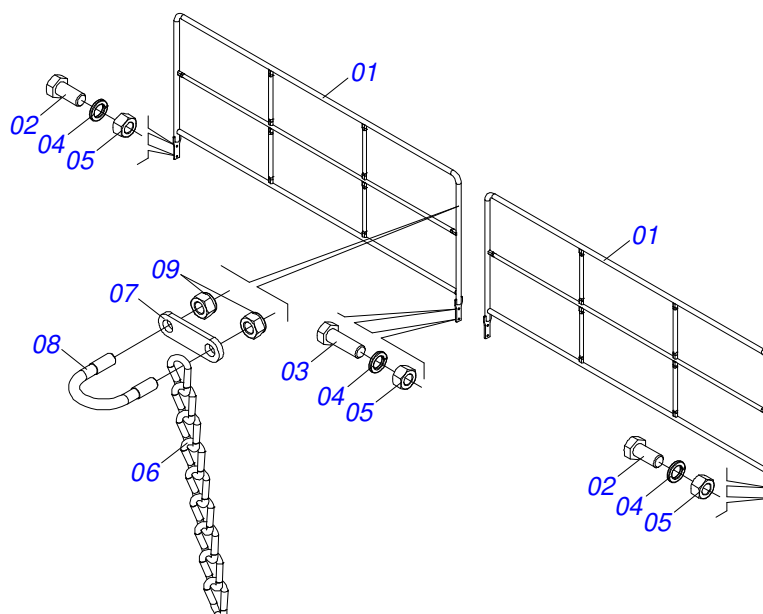


Item	Code	Description	See page	QT
01	0521062988	HANDRAIL		02
02	0503010395	1/2" X 1-1/4" BOLT		04
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0503034094	22 TWISTED CHAIN		02
07	0571017991	CHAIN FIXER HANDRAIL		04
08	0551019884	45 X 50 X 3/8 FASTENER		04
09	0503013357	3/8" SELF-ADJUSTING NUT		08

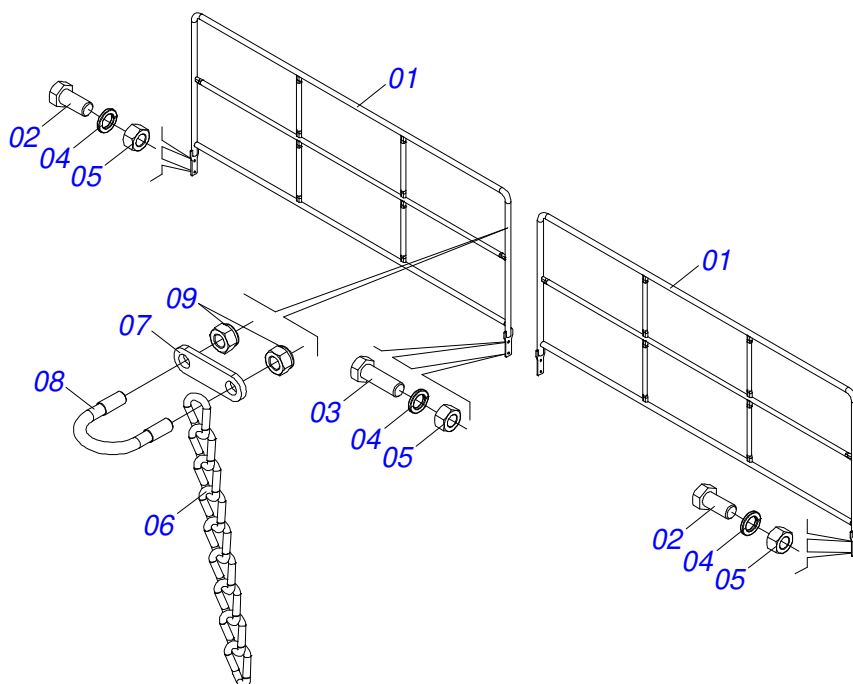


Item	Code	Description	See page	QT
01	0521064028	HANDRAIL 6350		02
02	0503010395	1/2" X 1-1/4" BOLT		04
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2" NUT		08
06	0503034094	22 TWISTED CHAIN		02
07	0571017991	CHAIN FIXER HANDRAIL		04
08	0551019884	45 X 50 X 3/8 FASTENER		04
09	0503013357	3/8" SELF-ADJUSTING NUT		08

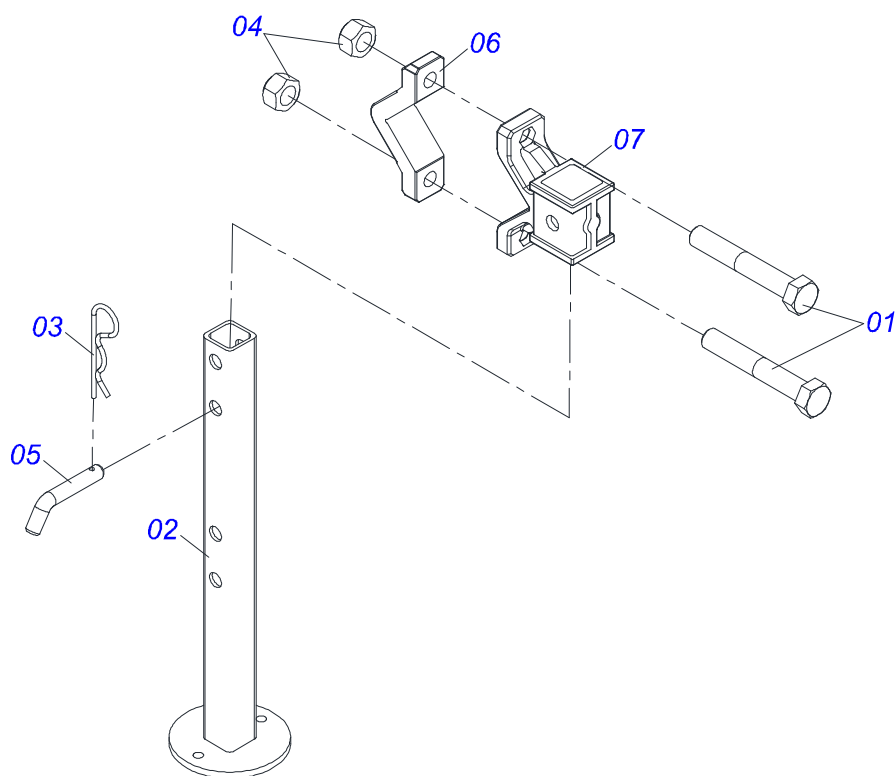

Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HAIR PIN		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

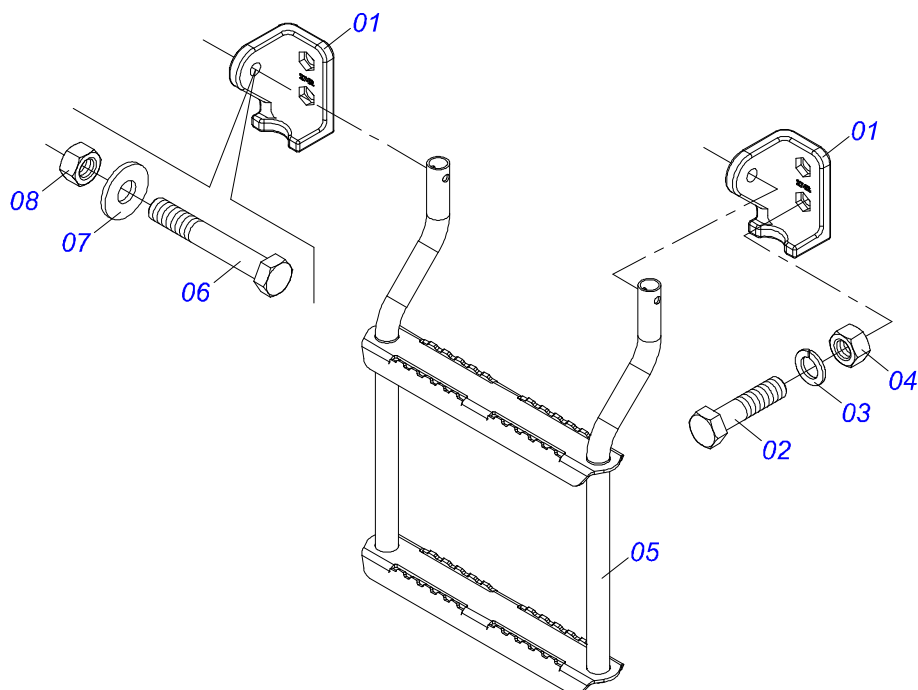


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8" SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	FLAT WASHER	02	
08	0503013357	3/8" SELF-ADJUSTING NUT	02	

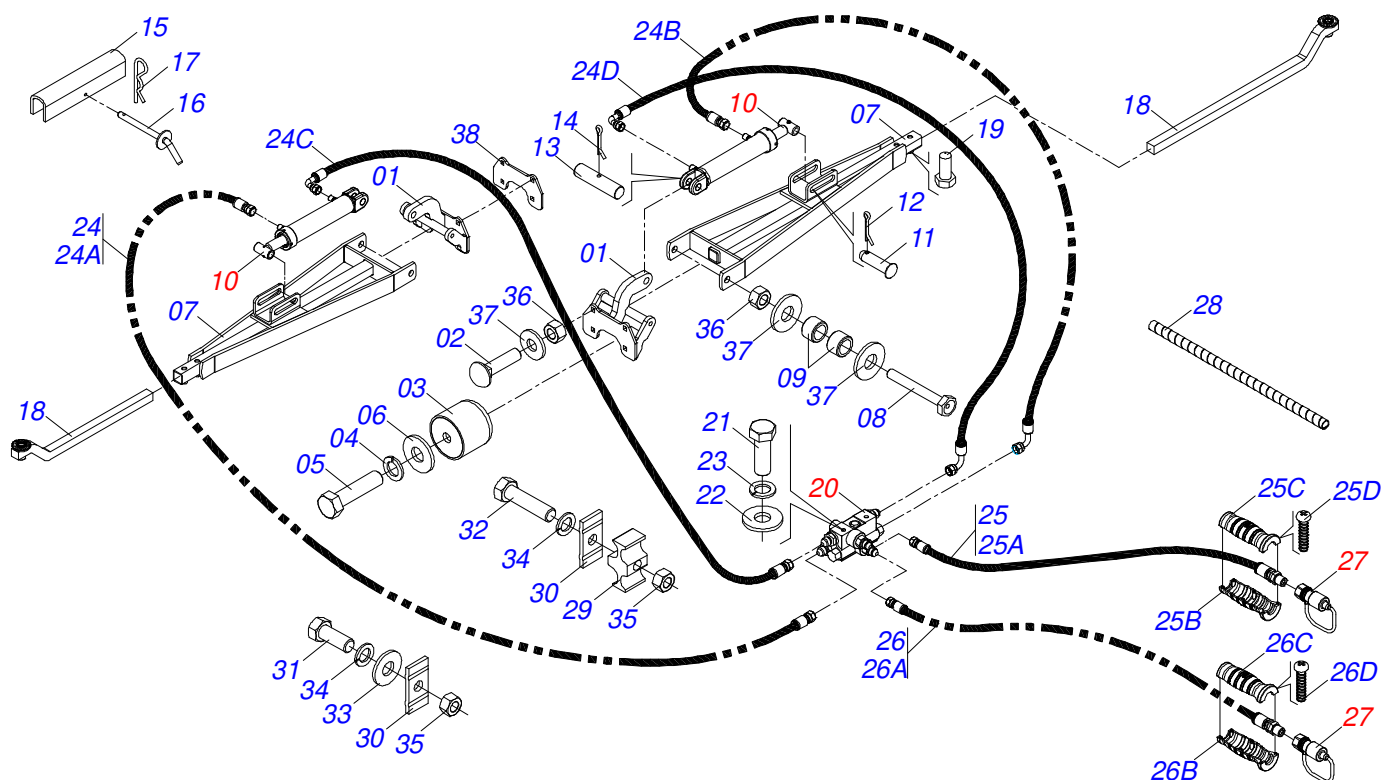


Item	Code	Description	See page	QT
01	0511069622	ROW MARKER ARM SUPPORT		02
02	0501014177	5/8" X 2-1/2" BOLT		08
03	0503011070	BEATER		02
04	0503010019	1/2" SPRING WASHER		02
05	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
06	0551019213	FLAT WASHER		02
07	0531061696	LINE MARKER ARM		02
08	0521061655	BOLT 5/8 UNC X 320 MM		02
09	0521010479	SLEEVE ARTICULATION		04
10	0511058449	HYDRAULIC CYLINDER	69	02
11	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511015779	1" X 4.2" AXLE		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
16	0501068994	0.3" X 3.1" LOCK PIN		02
17	0503030168	CUPILLA		02
18	0501066949	1235 TURNBUCKLE		02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
20	0501054649	HBM SEQUENTIAL VALVE	70	01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
22	0501010984	FLAT WASHER		02
23	0503010025	3/8" SPRING WASHER		02
24	0511057090	HYDRAULIC MARKER HAND SET		01
24A	0501081728	HOSE 3/8 X 3100 TR-TR		01
24B	0501080392	3/8 X 3300 TR-TC HOSE		01
24C	0501081988	3/8" X 145.6" TR-TC HOSE		01
24D	0501081682	TC-TC HOSE ASSY		01
25	0521052417	HOSE 3/8 X 4000 TR-TM PURPLE / RED		01
25A	0501080361	3/8" X 157" TR-TM HOSE		01
25B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01

Item	Code	Description	See page	QT
25C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
25D	0503018952	PLASTIC BOLT		06
26	0521052418	HOSE 3/8 X 4000 TR-TM PURPLE / BLUE		01
26A	0501080361	3/8" X 157" TR-TM HOSE		01
26B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
26C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
26D	0503018952	PLASTIC BOLT		06
27	0501053834	MALE QUICK COUPLER	22	02
28	0571017773	SPRING PROTECTION PLASTIC HOSE 3/4		02
29	0502012702	BODY SUPPORT CLAMP		06
30	0531011180	UPPER BODY CLIP		04
31	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
32	0503011103	7/16" X 2-1/2" BOLT		02
33	0501012803	FLAT WASHER		02
34	0503010180	7/16" SPRING WASHER		06
35	0503010244	7/16" NUT		02
36	0503012412	5/8 UNC SELF LOCKING NUT		10
37	0501012140	FLAT WASHER		04
38	0551018948	BODY MARKER SUPPORT LINE		02

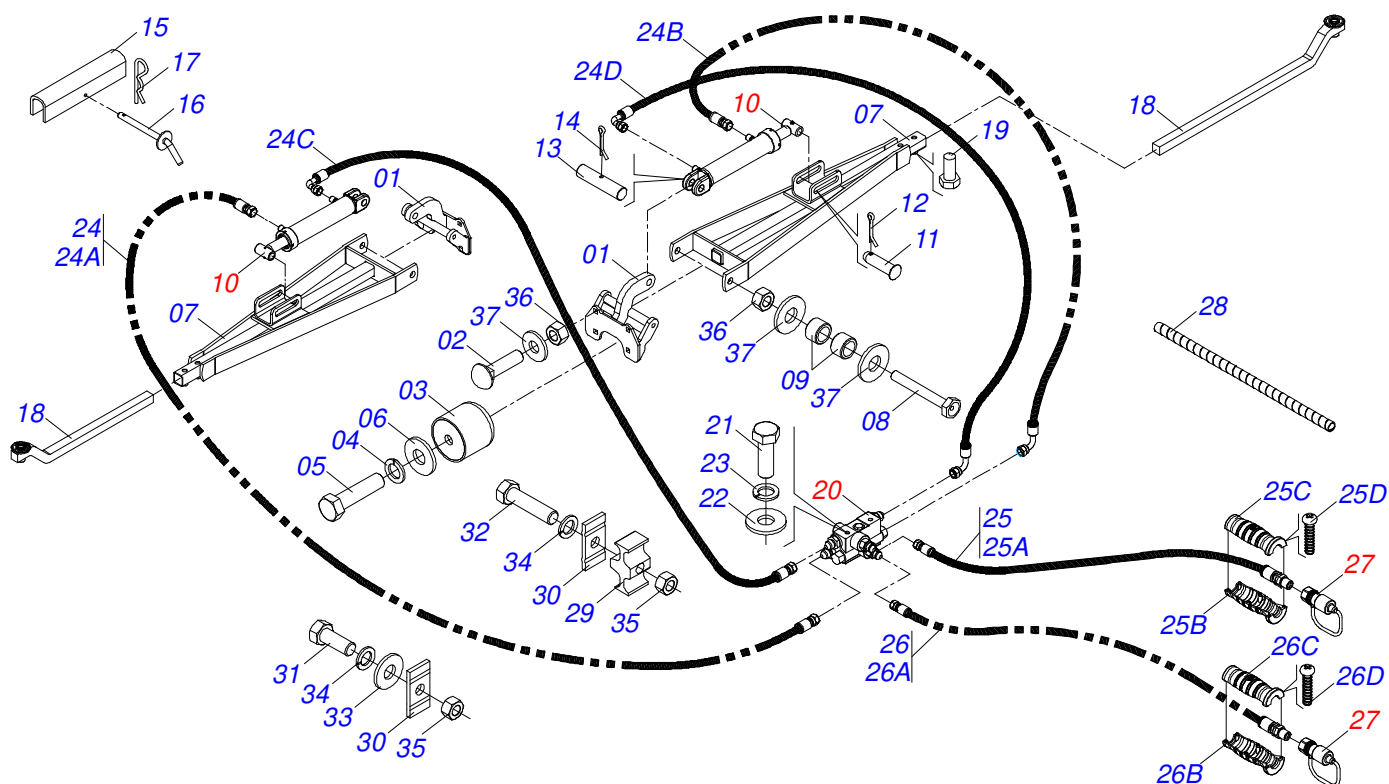


Item	Code	Description	See page	QT
01	0511069622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
03	0503011070	BEATER		02
04	0503010019	1/2" SPRING WASHER		02
05	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
06	0551019213	FLAT WASHER		02
07	0511061811	ROW MARKER ARM		02
08	0521061655	BOLT 5/8 UNC X 320 MM		02
09	0521010479	SLEEVE ARTICULATION		04
10	0511058449	HYDRAULIC CYLINDER	69	02
11	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
12	0503010523	1/4" X 2" COTTERPIN		02
13	0511015779	1" X 4.2" AXLE		02
14	0503010523	1/4" X 2" COTTERPIN		02
15	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
16	0501068994	0.3" X 3.1" LOCK PIN		02
17	0503030168	CUPILLA		02
18	0501066949	1235 TURNBUCKLE		02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
20	0501054649	HBM SEQUENTIAL VALVE	70	01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
22	0501010984	FLAT WASHER		02
23	0503010025	3/8" SPRING WASHER		02
24	0511057102	HOSE KIT MARKER HIDRAULICO 6350		01
24A	0501081794	TR-TC HOSE ASSY		01
24B	0501081999	3/8 X 4050 TR-TC HOSE ASSY		01
24C	0501080612	HOSE 3/8 X 4450 TR-TC		01
24D	0501082002	3/8 X 4650 TC-TC HOSE ASSY		01
25	0521052417	HOSE 3/8 X 4000 TR-TM PURPLE / RED		01
25A	0501080361	3/8" X 157" TR-TM HOSE		01
25B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01


Item	Code	Description	See page	QT
25C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
25D	0503018952	PLASTIC BOLT		06
26	0521052418	HOSE 3/8 X 4000 TR-TM PURPLE / BLUE		01
26A	0501080361	3/8" X 157" TR-TM HOSE		01
26B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
26C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
26D	0503018952	PLASTIC BOLT		06
27	0501053834	MALE QUICK COUPLER	22	02
28	0571017773	SPRING PROTECTION PLASTIC HOSE 3/4		02
29	0502012702	BODY SUPPORT CLAMP		06
30	0531011180	UPPER BODY CLIP		04
31	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
32	0503011103	7/16" X 2-1/2" BOLT		02
33	0501012803	FLAT WASHER		02
34	0503010180	7/16" SPRING WASHER		06
35	0503010244	7/16" NUT		02
36	0503012412	5/8 UNC SELF LOCKING NUT		10
37	0501012140	FLAT WASHER		04

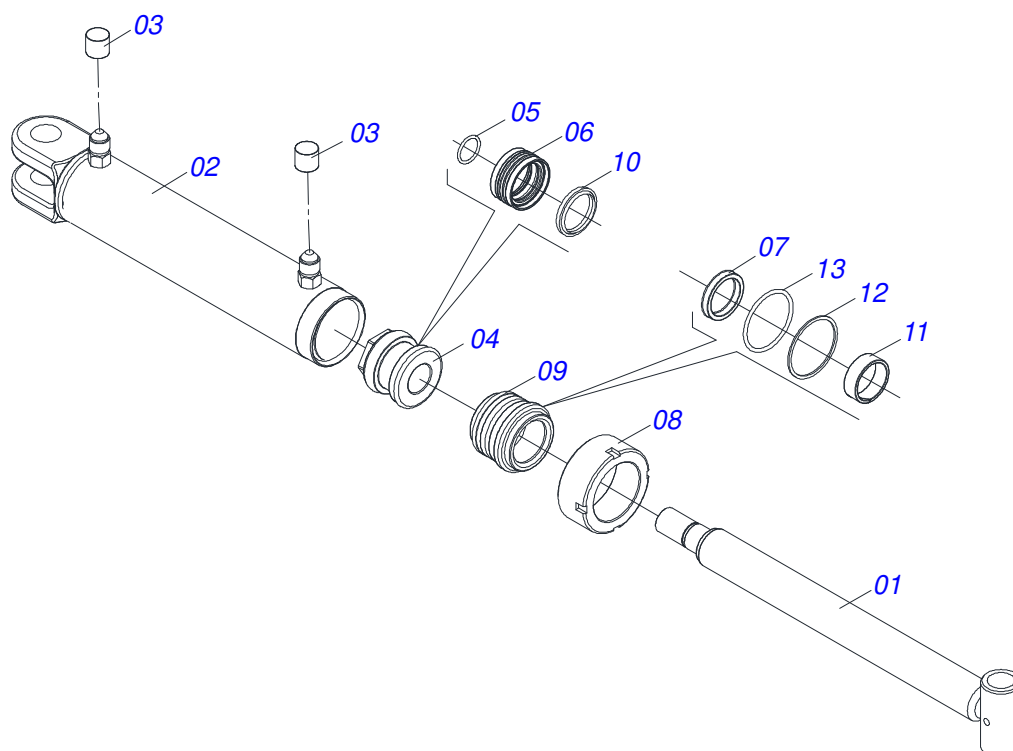


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

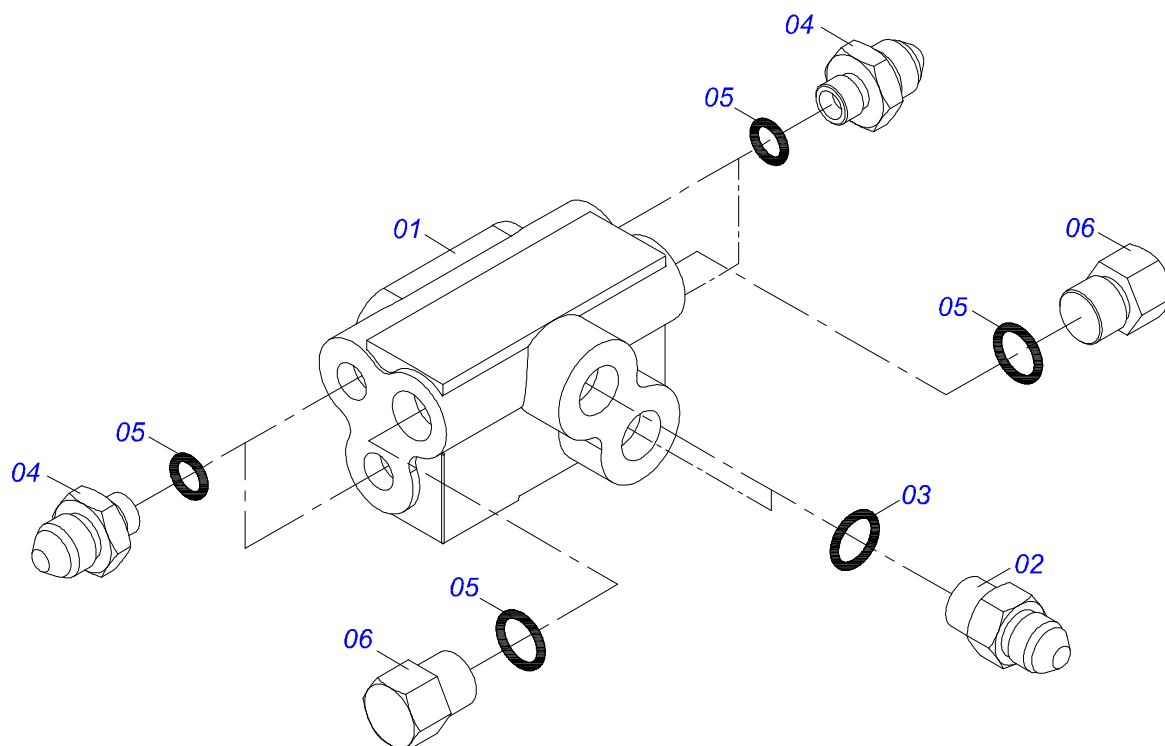


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

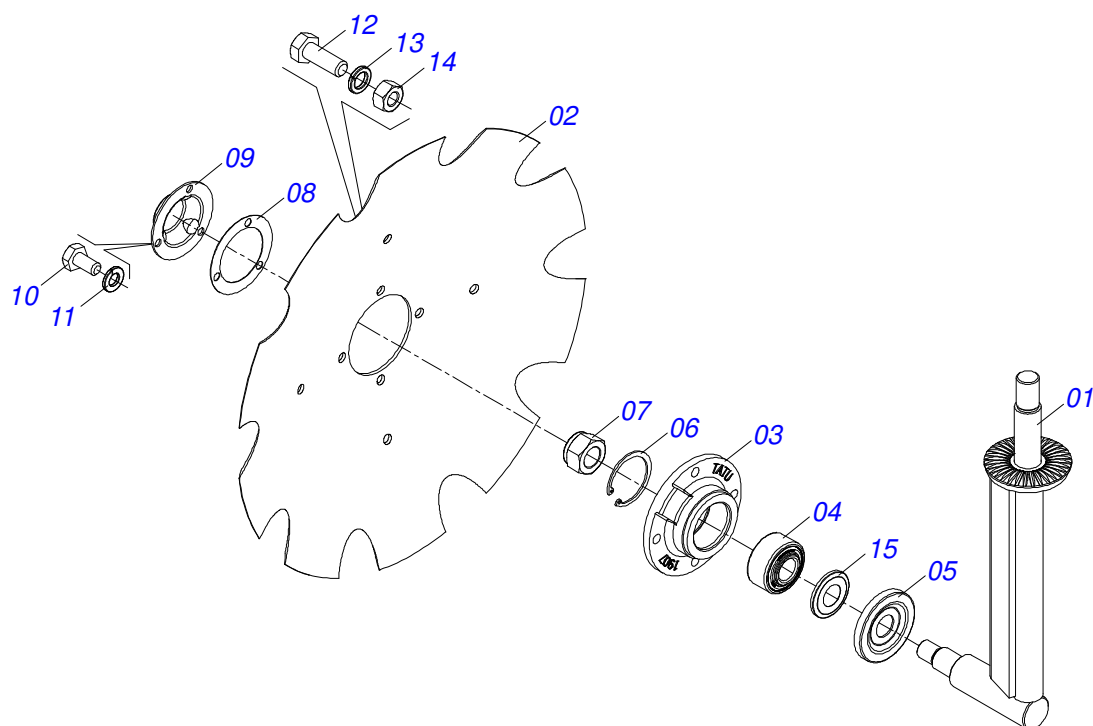

Item	Code	Description	See page	QT
01	0521069643	DISC AXLE MARKER LINE		01
02	0602023094	DR16X3 C36AFPAFR73+4FR+4FR D474 10R		01
03	0581019513	DEPTH WHEEL BOX		01
04	0503019342	ROLLER BEARING		01
05	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	COVER DEPTH		01
10	0503013758	1/4" X 1-1/2" BOLT		03
11	0503010143	1/4" SPRING WASHER		03
12	0503010358	5/16" X 5/8" BOLT		04
13	0503010179	LOCK WASHER		04
14	0503010337	5/16" NUT		04
15	0503034055	CLAMPING RING		01

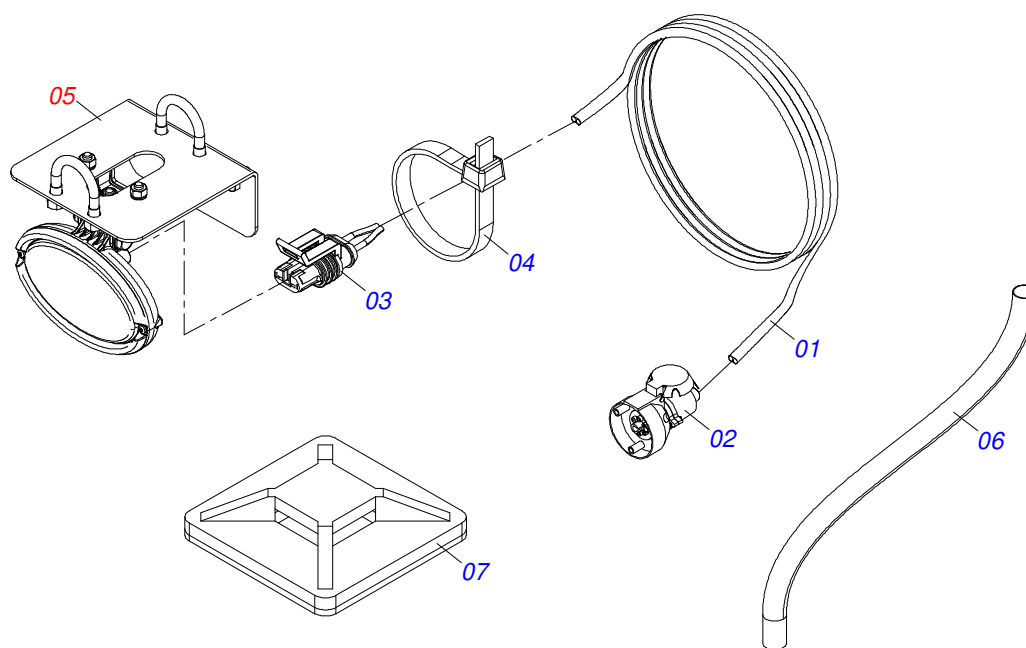


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		15mt
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		02
04	0503012903	T-80M CRAMP NYLON		50
05	0521052792	MOUNTED REAR LIGHT	74	02
06	3505151602	TUBE		0,3mt
07	0503017702	FIXER		14

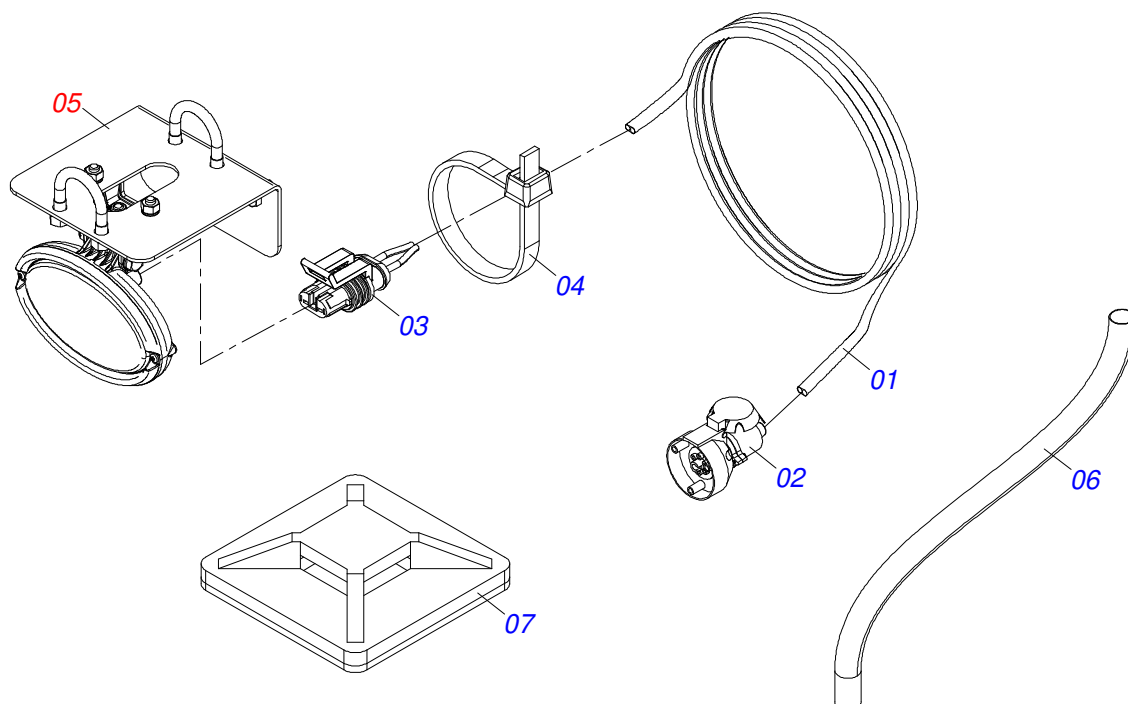


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		18mt
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		02
04	0503012903	T-80M CRAMP NYLON		50
05	0521052792	MOUNTED REAR LIGHT	74	02
06	3505151602	TUBE		0,3mt
07	0503017702	FIXER		14

MOUNTED REAR LIGHT


0521052792

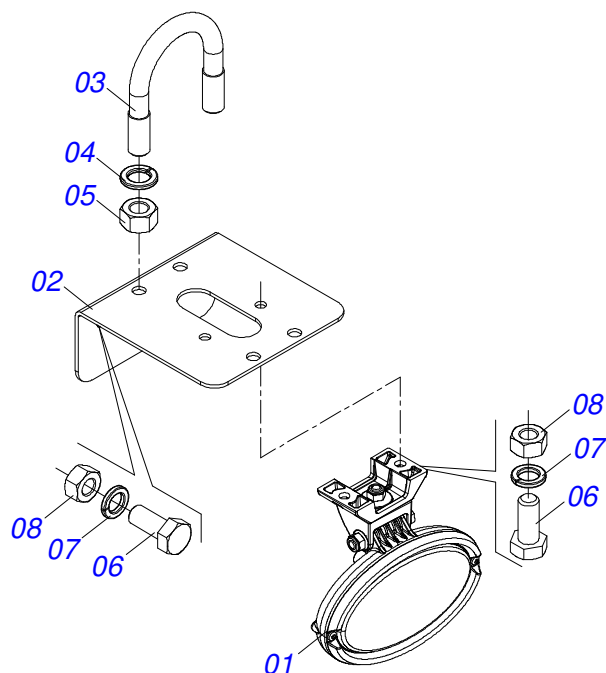

Item	Code	Description	See page	QT
01	0503018738	LIGHTHOUSE		01
02	0581016999	REAR LIGHT SUPPORT		01
03	0551019884	45 X 50 X 3/8 FASTENER		02
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
07	0503010179	LOCK WASHER		04
08	0503010337	5/16" NUT		04

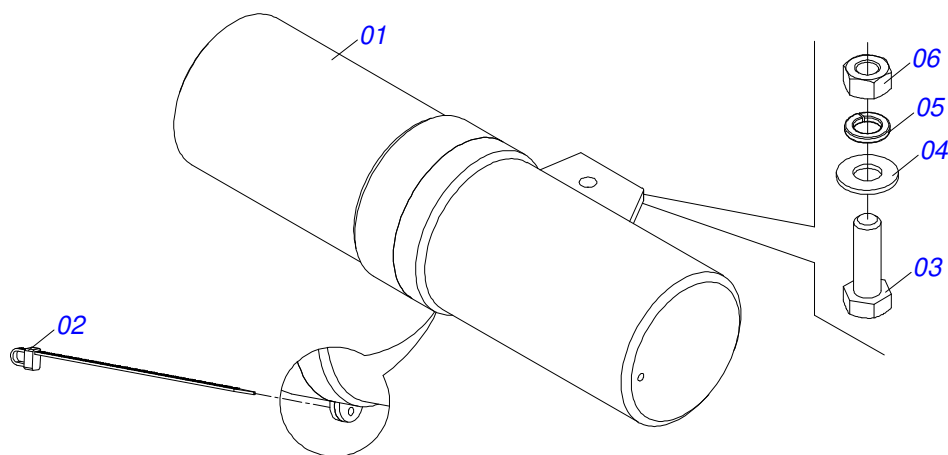


Item	Code	Description	See page	QT
01	0503060100	OPERATOR'S MANUAL STORAGE TUBE		01
02	0503010267	NYLON CLAMP		01
03	0503010363	5/16" X 1" BOLT		01
04	0501010694	FLAT WASHER		01
05	0503010179	LOCK WASHER		01
06	0503010337	5/16" NUT		01
07	0511033473	PACKING WITH MANUAL		01

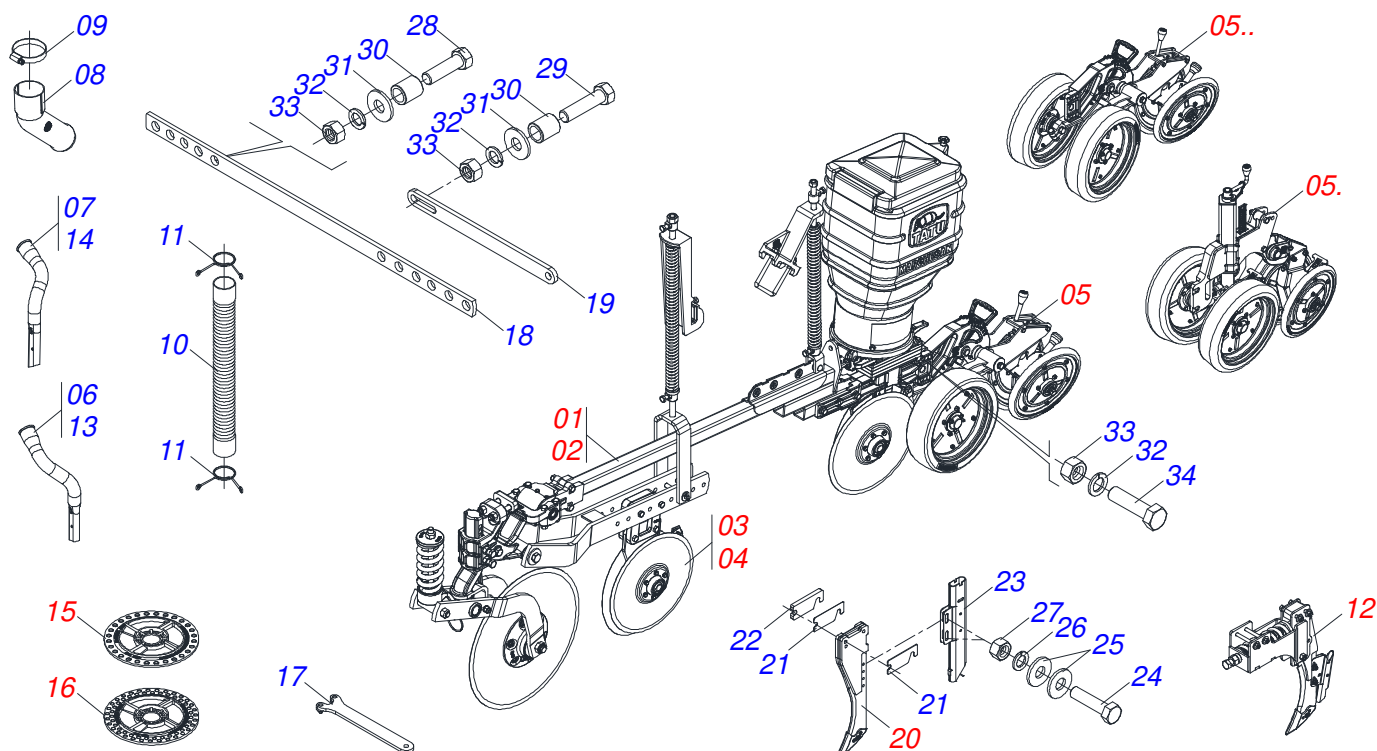


Item	Code	Description	See page	QT
01	0531054243	SHORT SEED/FERTILIZER ROW WITH 20" CUTTING DISC	77	01
01.	0531054246	SHORT SEED/FERTILIZER ROW WITH 18" CUTTING DISC	78	01
02	0531054244	LONG SEED/FERTILIZER ROW WITH 20" CUTTING DISC	79	01
02.	0531054245	LONG SEED/FERTILIZER ROW WITH 18" CUTTING DISC	80	01
03	0521054768	DDD RIGHT FERTILIZER WITH SUPPORT	105	01
04	0521054769	LEFT FERTILIZER WITH SUPPORT	106	01
05	0521054984	DEPTH/COMPACTOR SYSTEM - SPT	109	01
05.	0521054758	CONTROL DEPTH WITH REGULATOR	110	01
05..	0531050978	DEPTH CONTROL WITH FAST REGULATING AXIS	112	01
06	0503030391	RIGHT FERTILIZER NOZZLE		01
07	0503030392	LEFT FERTILIZER NOZZLE		01
08	0503031050	CURVED CONDUCTOR		01
09	0503010246	CLAMP		01
10	0503031145	2" X 2" X 20" HOSE		01
11	0503031076	2" HOSE CLAMP		01
12	0521053947	AUTOMATIC DISARMING ROD	135	01
13	0581010082	FERTILIZER SOCKET RIGHT		01
14	0581010083	FERTILIZER SOCKET LEFT		01
15	0503063647	SIGMA CORN DISC SET	138	01
16	0503063648	SIGMA SOY DISC SET	139	01
17	0521068982	KEY CASH DISC CUTTING		01
18	0501013714	STABILIZER BAR		01
18.	0501018652	CORN STABILIZER BAR		01
19	0581015215	STABILIZER BAR E500 PIVOTED HIGH LINE		01
20	0521053946	SCARING ROD	140	01
21	0511017969	0.1" SPACING PLATE		01
22	0511018662	SPACING PLATE		01


Item	Code	Description	See page	QT
23	0521069124	BOCAL FILLED LINE PIVOTED WITH LINGUET		01
24	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
25	0501010984	FLAT WASHER		01
26	0503010025	3/8" SPRING WASHER		01
27	0503010026	3/8" NUT		01
28	0503010741	1/2" X 2-3/4" BOLT		01
29	0503010547	1/2" X 4" BOLT		01
30	0521010505	13,50 X 19,00 X 21,50 SLEEVE		01
31	0511017302	FLAT WASHER		01
32	0503010019	1/2" SPRING WASHER		01
33	0503010060	1/2" NUT		01
34	0503010905	1/2" X 2-1/4" BOLT		01

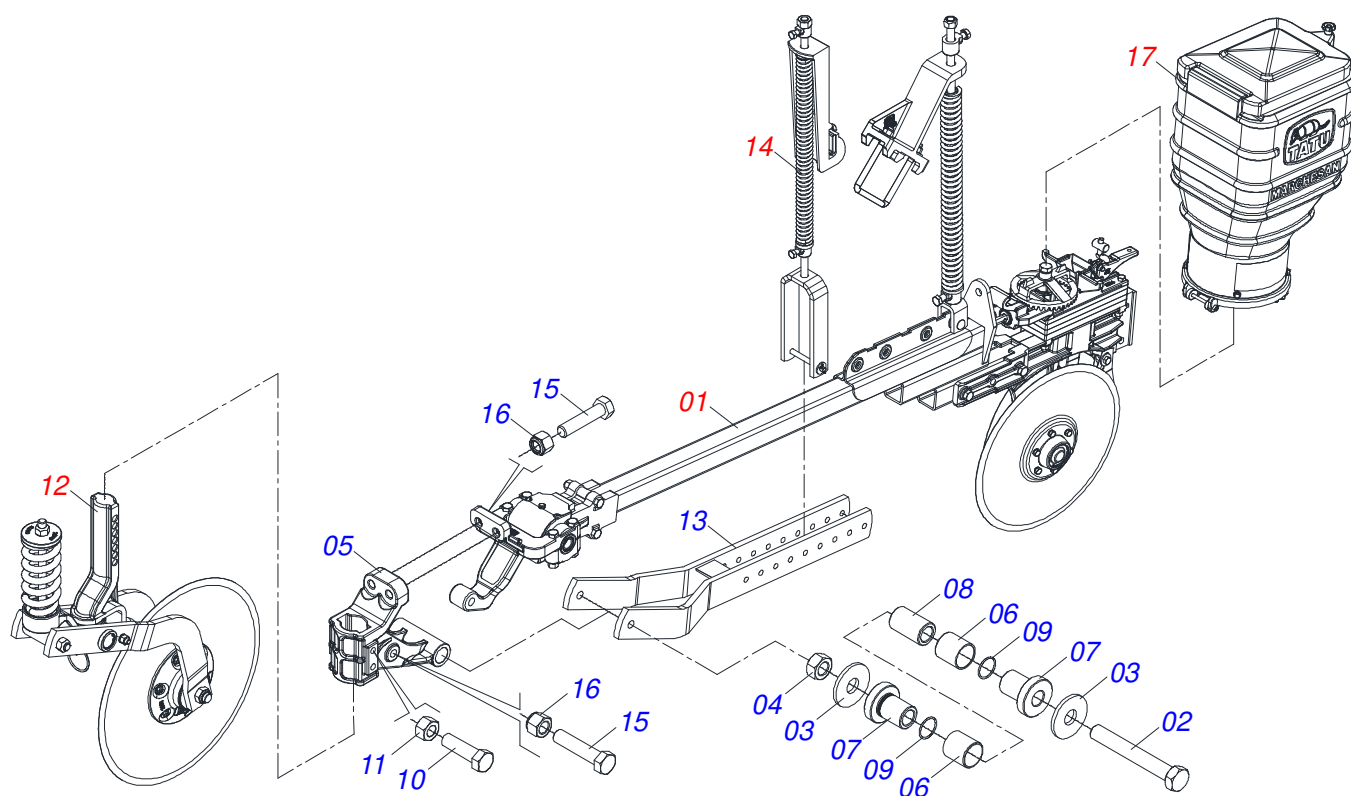


Item	Code	Description	See page	QT
01	0521054813	SHORT PIVOT LIFT LINE	81	01
02	0501010066	3/4" X 9" BOLT		01
03	0511017232	FLAT WASHER		02
04	0503011255	3/4" LOCK NUT		01
05	0502012873	SUPPORT DC LINE FERTILIZER		01
06	0503019278	LUBRICANT GLOVE		02
07	0581019195	SIDE GUIDE GLOVE		02
08	0581019196	CENTRAL GUIDE GLOVE		01
09	0503010410	RING		02
10	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
11	0503010013	5/8" NUT		02
12	0521053231	DPL 20 SHORT LINE WITHOUT LUBRICATION 95 CONICAL BEARING		01
13	0521069482	ARM FERTILIZER LINE SHORT RISE WITHOUT LUBRICATION		01
14	0521052644	TIGHT ELEVATION SPRING FULL FERTILIZER		01
15	0503017857	BOLT 5/8 UNF 4		03
16	0503010811	5/8" UNF SELF ADJUSTING NUT		03
17	0531053925	SIGMA SOY INDIVIDUAL SEED SYSTEM	101	01

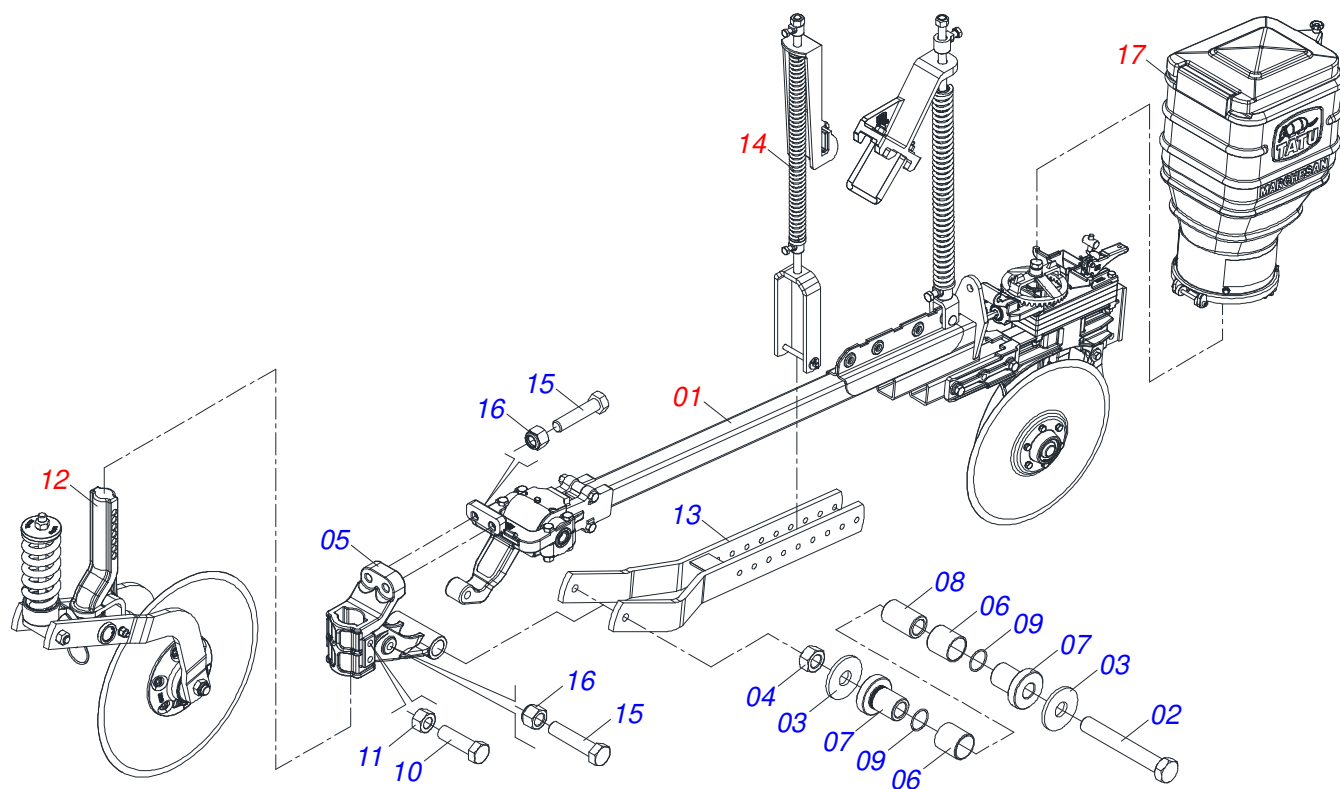


Item	Code	Description	See page	QT
01	0521054813	SHORT PIVOT LIFT LINE	81	01
02	0501010066	3/4" X 9" BOLT		01
03	0511017232	FLAT WASHER		02
04	0503011255	3/4" LOCK NUT		01
05	0502012873	SUPPORT DC LINE FERTILIZER		01
06	0503019278	LUBRICANT GLOVE		02
07	0581019195	SIDE GUIDE GLOVE		02
08	0581019196	CENTRAL GUIDE GLOVE		01
09	0503010410	RING		02
10	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
11	0503010013	5/8" NUT		02
12	0521054830	DPL 18 SHORT LINE WITHOUT LUBRICATION 96 TAPERED BEARING		01
13	0521069482	ARM FERTILIZER LINE SHORT RISE WITHOUT LUBRICATION		01
14	0521052644	TIGHT ELEVATION SPRING FULL FERTILIZER		01
15	0503017857	BOLT 5/8 UNF 4		03
16	0503010811	5/8" UNF SELF ADJUSTING NUT		03
17	0531053925	SIGMA SOY INDIVIDUAL SEED SYSTEM	101	01

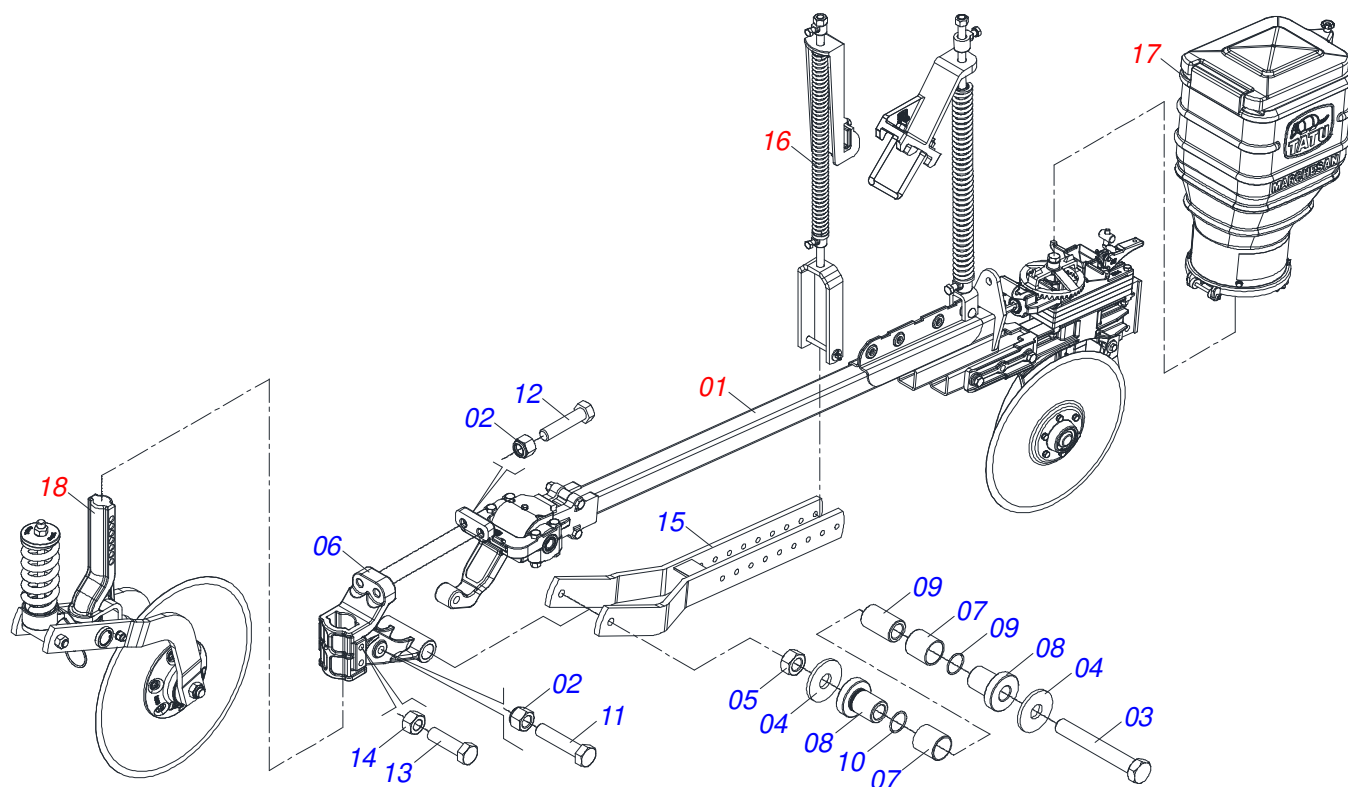


Item	Code	Description	See page	QT
01	0521054814	LONG PIVOT LIFT LINE	82	01
02	0503012412	5/8 UNC SELF LOCKING NUT		03
03	0501010066	3/4" X 9" BOLT		01
04	0511017232	FLAT WASHER		02
05	0503011255	3/4" LOCK NUT		01
06	0502012873	SUPPORT DC LINE FERTILIZER		01
07	0503019278	LUBRICANT GLOVE		02
08	0581019195	SIDE GUIDE GLOVE		02
09	0581019196	CENTRAL GUIDE GLOVE		01
10	0503010410	RING		02
11	0501011027	5/8" X 3-3/4" BOLT		01
12	0503016110	BOLT 5/8 UNC X 4 C S G.7 ZN		02
13	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
14	0503010013	5/8" NUT		02
15	0521069483	ARM LONG LINE HIGH FERTILIZER WITHOUT LUBRICATION		01
16	0521052644	TIGHT ELEVATION SPRING FULL FERTILIZER		01
17	0531053925	SIGMA SOY INDIVIDUAL SEED SYSTEM	101	01
18	0521053232	DPL 20 LONG LINE WITHOUT LUBRICATION	97	01
		CONICAL BEARING		

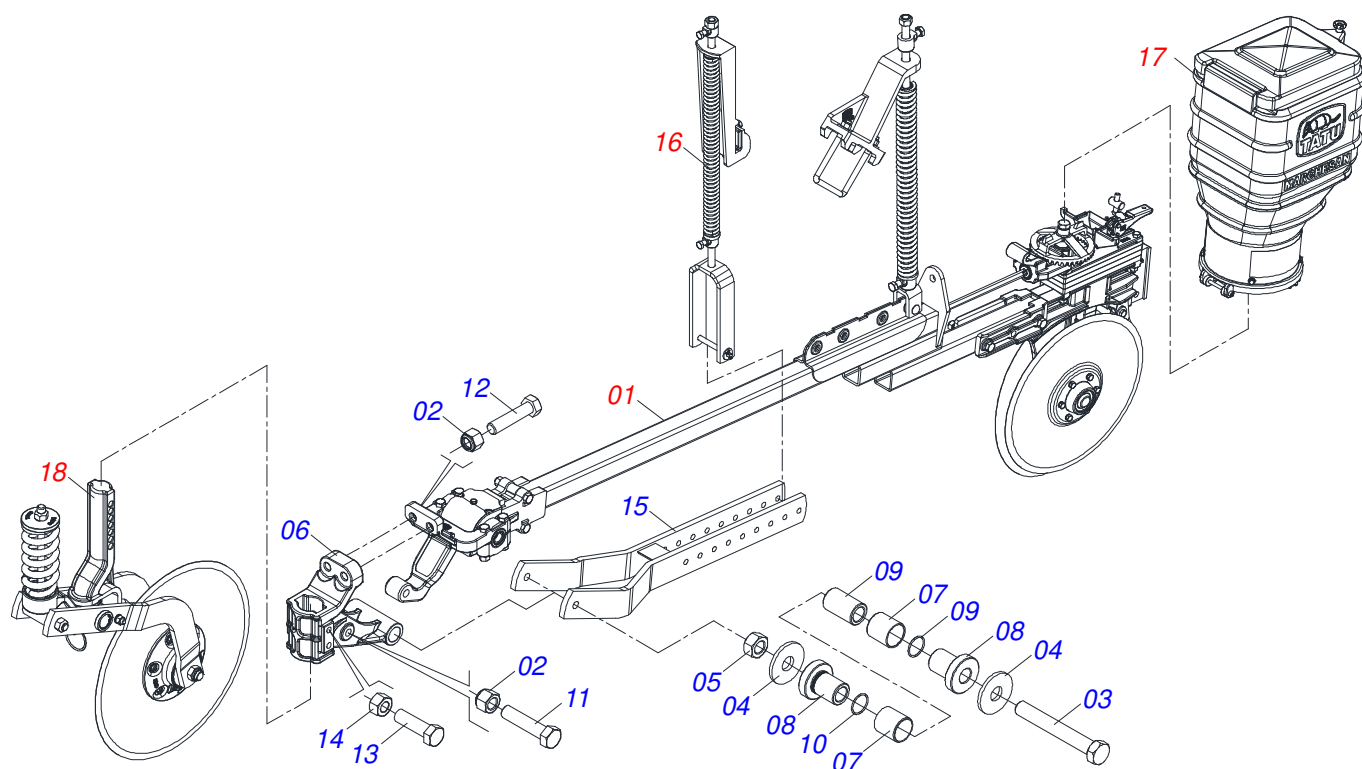


Item	Code	Description	See page	QT
01	0521054814	LONG PIVOT LIFT LINE	82	01
02	0503012412	5/8 UNC SELF LOCKING NUT		03
03	0501010066	3/4" X 9" BOLT		01
04	0511017232	FLAT WASHER		02
05	0503011255	3/4" LOCK NUT		01
06	0502012873	SUPPORT DC LINE FERTILIZER		01
07	0503019278	LUBRICANT GLOVE		02
08	0581019195	SIDE GUIDE GLOVE		02
09	0581019196	CENTRAL GUIDE GLOVE		01
10	0503010410	RING		02
11	0501011027	5/8" X 3-3/4" BOLT		01
12	0503016110	BOLT 5/8 UNC X 4 C S G.7 ZN		02
13	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
14	0503010013	5/8" NUT		02
15	0521069483	ARM LONG LINE HIGH FERTILIZER WITHOUT LUBRICATION		01
16	0521052644	TIGHT ELEVATION SPRING FULL FERTILIZER		01
17	0531053925	SIGMA SOY INDIVIDUAL SEED SYSTEM	101	01
18	0521054831	DPL 18 LONG LINE WITHOUT LUBRICATION	98	01
		TAPERED BEARING		

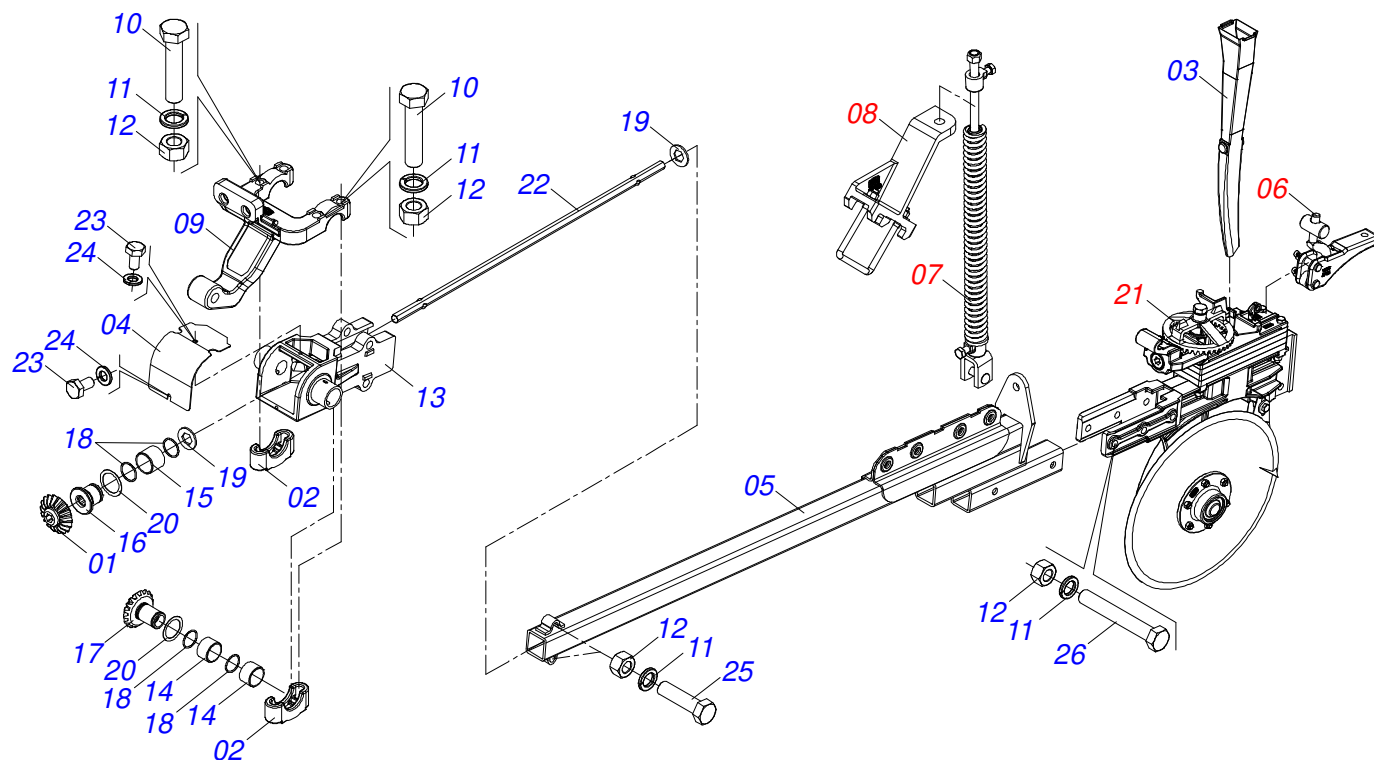


Item	Code	Description	See page	QT
01	0502011505	18Z CONICAL GEAR		01
02	1902010426	UPPER BEARING SEMI		02
03	0503034575	BOCAL SEED LINE HIGH TITANIUM		01
04	0521018079	SEEP ROW DRAWBAR COVER		01
05	0521068663	SHORT SEED LINE ARM		01
06	0511052024	FAST CLOSING SET	83	01
07	0511059244	ROD SPRING LINE SEED	84	01
08	0511059243	ASSEMBLY GUIDE VARIUM SPRING SEED	85	01
09	0502012872	PIVOTING CLAMP		01
10	0503010479	BOLT		04
11	0503010019	1/2" SPRING WASHER		08
12	0503010060	1/2" NUT		08
13	0581019188	ARTICULATED SUPPORT WITHOUT LUBRICATION		01
14	0503019343	AUTO LUBRICANT GLOVE		02
15	0503019344	AUTO LUBRICANT GLOVE		01
16	0581019189	BEARING GLOVE AXIS SEXTAVADO 1/2 WITHOUT LUBRICATION		01
17	0581019190	GEAR 18Z 5/8 ENGINE WITHOUT LUBRICATION		01
18	0503010410	RING		04
19	0501013352	FLAT WASHER		02
20	0501013354	FLAT WASHER		02
21	0521054775	LEFT REAR SEAL LINE BASE 1/2	86	01
22	0521018077	1/2" X 58.6" HEX AXLE		01
23	0503014729	1/4" UNF X 1/2" BOLT		02
24	0503010143	1/4" SPRING WASHER		02
25	0503010752	1/2" X 3.1/2" BOLT		02
26	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02

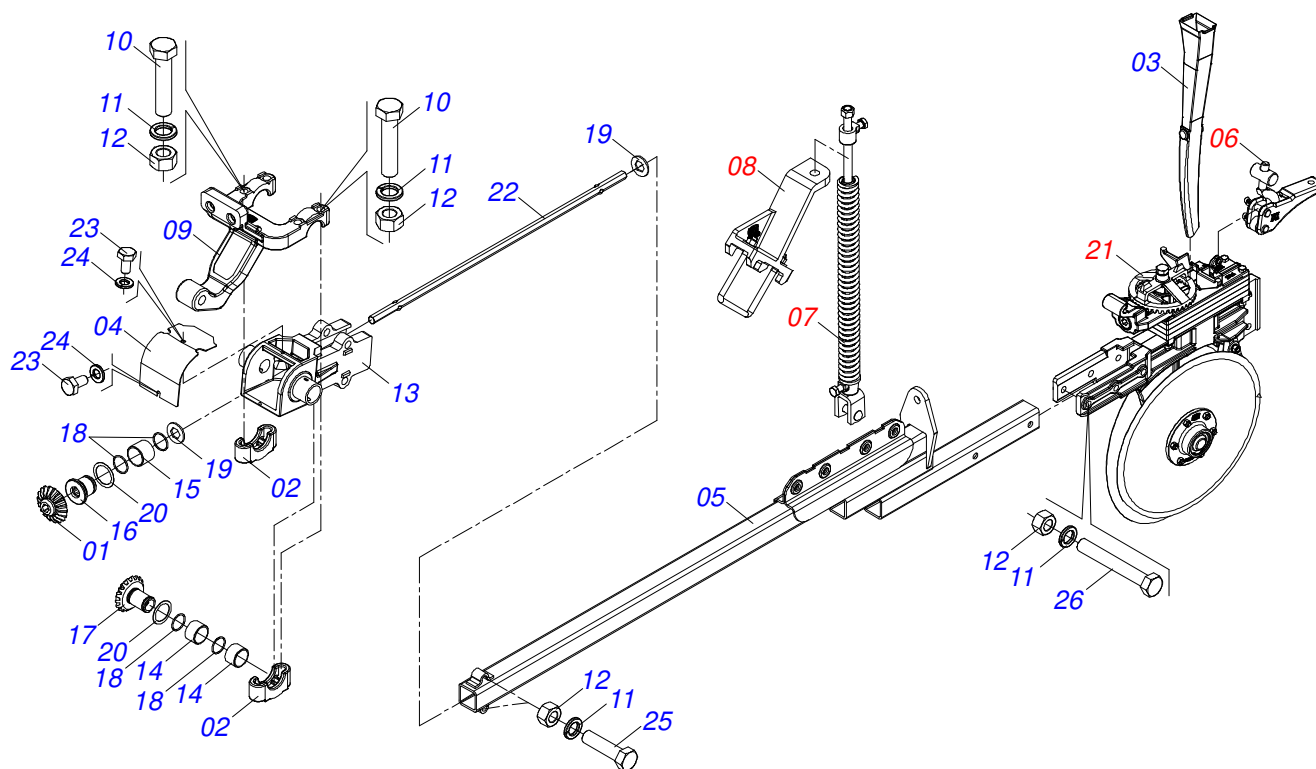


Item	Code	Description	See page	QT
01	0502011505	18Z CONICAL GEAR		01
02	1902010426	UPPER BEARING SEMI		02
03	0503034575	BOCAL SEED LINE HIGH TITANIUM		01
04	0521018079	SEEP ROW DRAWBAR COVER		01
05	0521068664	LONG SEED LINE ARM		01
06	0511052024	FAST CLOSING SET	83	01
07	0511059244	ROD SPRING LINE SEED	84	01
08	0511059243	ASSEMBLY GUIDE VARIUM SPRING SEED	85	01
09	0502012872	PIVOTING CLAMP		01
10	0503010479	BOLT		04
11	0503010019	1/2" SPRING WASHER		08
12	0503010060	1/2" NUT		08
13	0581019188	ARTICULATED SUPPORT WITHOUT LUBRICATION		01
14	0503019343	AUTO LUBRICANT GLOVE		02
15	0503019344	AUTO LUBRICANT GLOVE		01
16	0581019189	BEARING GLOVE AXIS SEXTAVADO 1/2 WITHOUT LUBRICATION		01
17	0581019190	GEAR 18Z 5/8 ENGINE WITHOUT LUBRICATION		01
18	0503010410	RING		04
19	0501013352	FLAT WASHER		02
20	0501013354	FLAT WASHER		02
21	0521054774	REAR RIGHT LINE SEED LIFT	92	01
22	0521018078	1/2" X 66.5" HEX AXLE		01
23	0503014729	1/4" UNF X 1/2" BOLT		02
24	0503010143	1/4" SPRING WASHER		02
25	0503010752	1/2" X 3.1/2" BOLT		02
26	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02

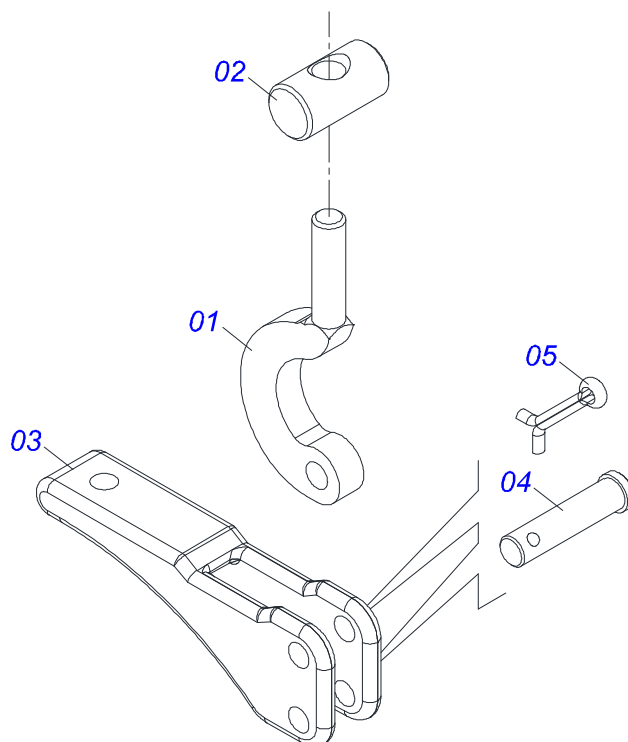


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

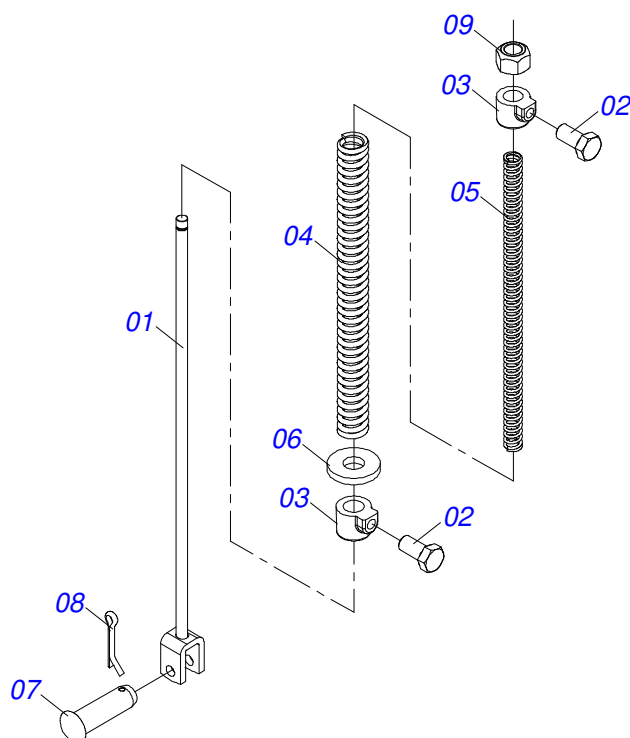


Item	Code	Description	See page	QT
01	0511060376	SEEP SPRING GUIDE		01
02	0503010834	1/2 X 1 BOLT		02
03	0502040534	SPRING GUIDE BUSHING LOCK		02
04	0503031340	1.7"X 19" X 0.3" COMPRESSION SPRING		01
05	0503031339	1" X 19" X 0.1" COMPRESSION SPRING		01
06	0501013753	FLAT WASHER		01
07	0521010542	COUPLING SHAFT		01
08	0503010257	1/8" X 1" COTTERPIN		01
09	0503012412	5/8 UNC SELF LOCKING NUT		01

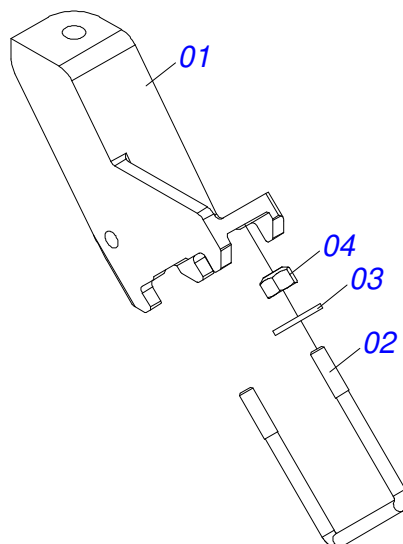


Item	Code	Description	See page	QT
01	0502012538	SPRING VARON SUPPORT		01
02	0521014021	1/2" X 4.5" X 5.4" FASTENER		01
03	0511017302	FLAT WASHER		02
04	0503011336	1/2" HEX SELF ADJUSTING NUT		02

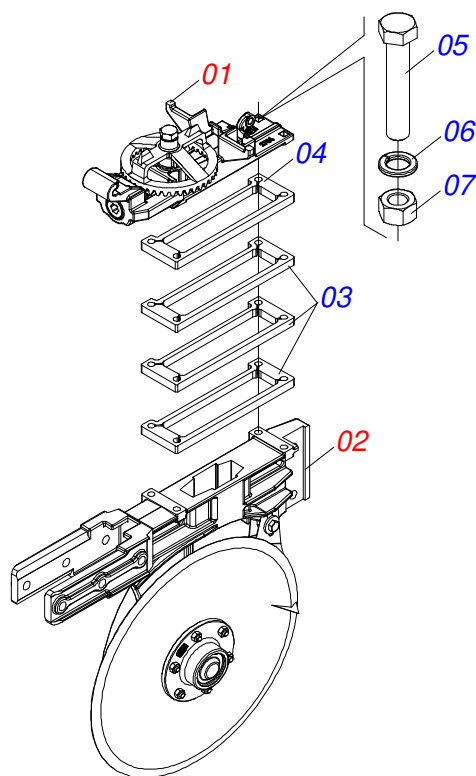


Item	Code	Description	See page	QT
01	0521054819	BASE 1/2 FIXED WITHOUT ASSY LUBRICATION	87	01
02	0521054763	DDD LEFT SEED	88	01
03	0581014527	ELEVATION PLATE 12,5		03
04	0581014526	ELEVATION PLATE 3/8		01
05	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		04
06	0503010025	3/8" SPRING WASHER		04
07	0503010026	3/8" NUT		04

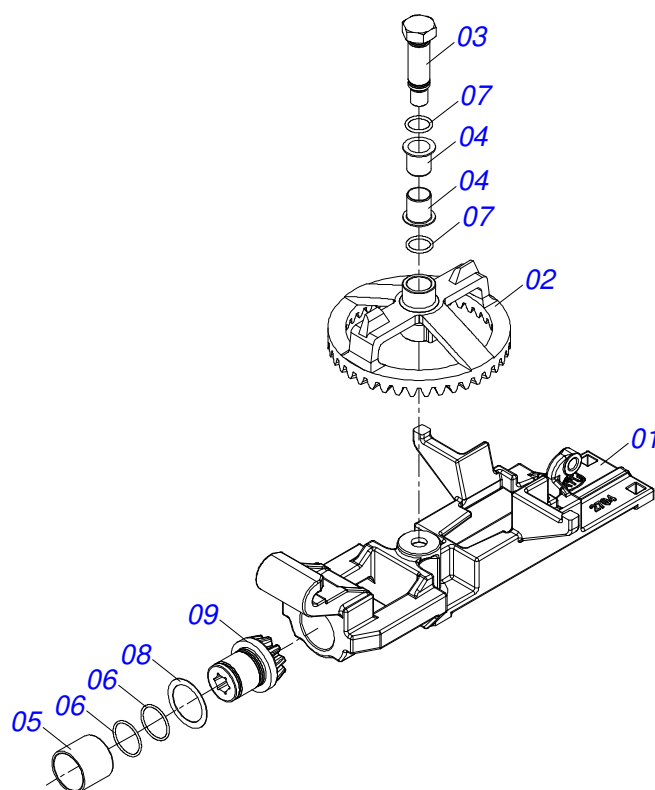


Item	Code	Description	See page	QT
01	0581019199	FIXED BASE		01
02	0581019200	CONICA 40Z GEAR		01
03	0581019201	CROWN SHAFT		01
04	0503019340	LUBRICANT GLOVE		02
05	0503019341	LUBRICANT GLOVE		01
06	0503011030	2-014 N 3006-9B O'RING		02
07	0503010410	RING		02
08	0501013354	FLAT WASHER		01
09	0581019203	CONICAL PINION		01

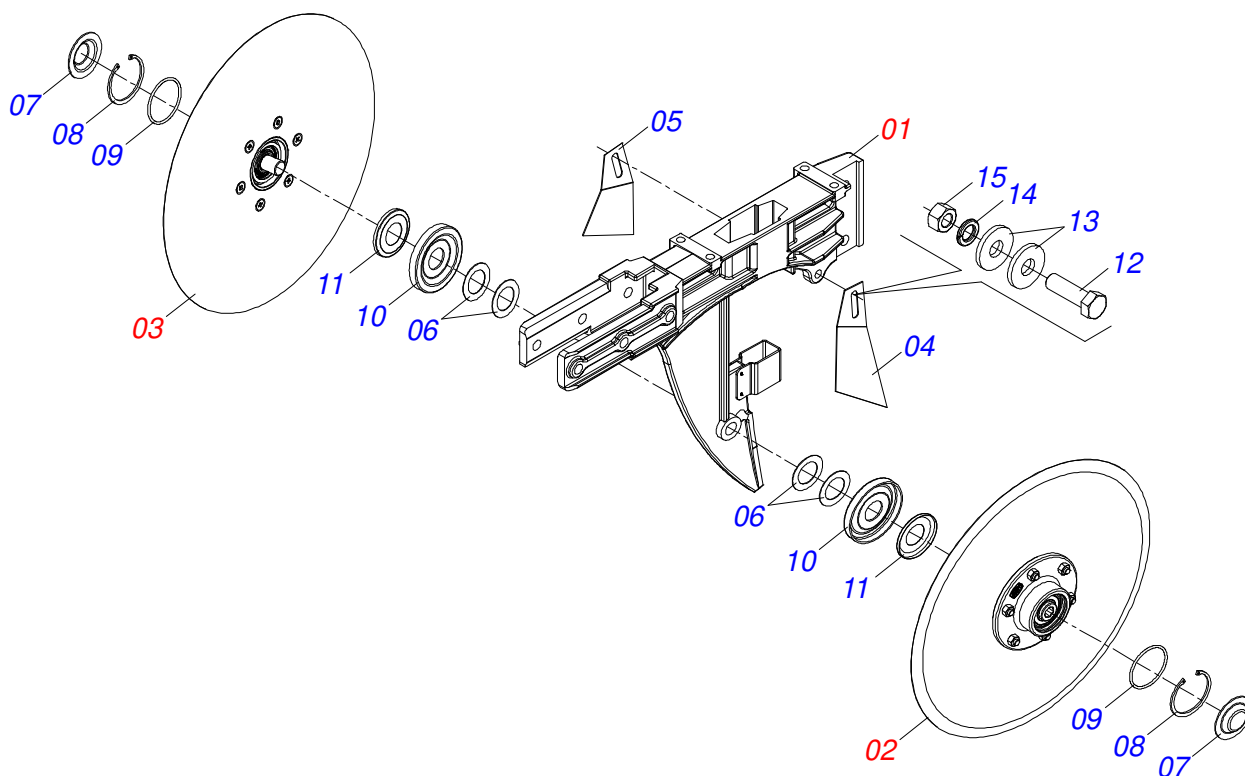


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE	89	01
02	0521054761	LEFT LOW CUBE	90	01
03	0521054760	DOWN LOW CUBE	91	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0511015098	FLAT WASHER		04
07	0571011152	DOUBLE DISC CAP		02
08	0503015081	502052 CLAMPING RING (FOR AXLE)		02
09	0503014679	2-134 O'RING		02
10	0511011927	DUST CLOAK		02
11	0503034055	CLAMPING RING		02
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
13	0501010984	FLAT WASHER		02
14	0503010025	3/8" SPRING WASHER		01
15	0503010026	3/8" NUT		01

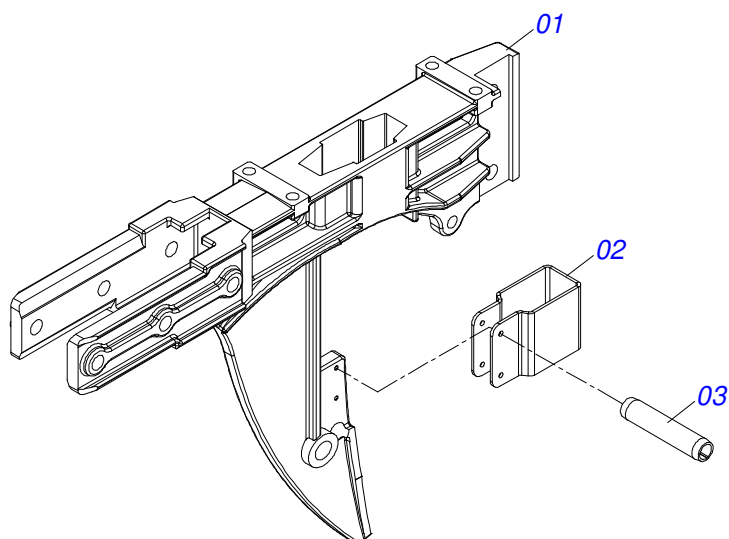


Item	Code	Description	See page	QT
01	0561015592	LEFT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

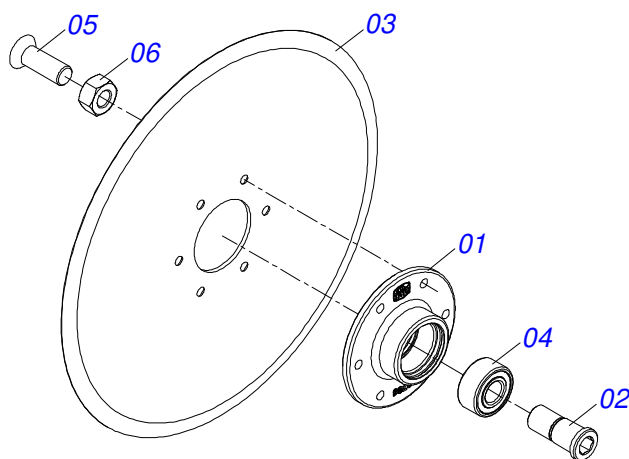


Item	Code	Description	See page	QT
01	0502012736	HUB LOWER		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503019342	ROLLER BEARING		01
05	0503010546	5/16" X 7/8" BOLT		06
06	0503010337	5/16" NUT		06

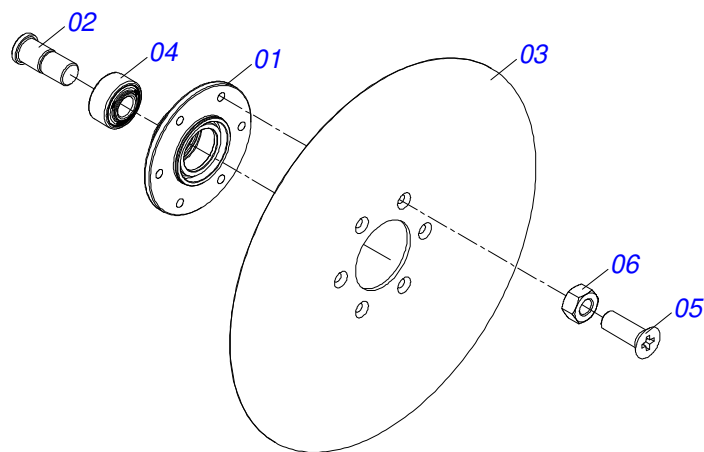


Item	Code	Description	See page	QT
01	0502012736	HUB LOWER		01
02	0571011150	RIGHT DOUB DISC - HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503019342	ROLLER BEARING		01
05	0503010546	5/16" X 7/8" BOLT		06
06	0503010337	5/16" NUT		06

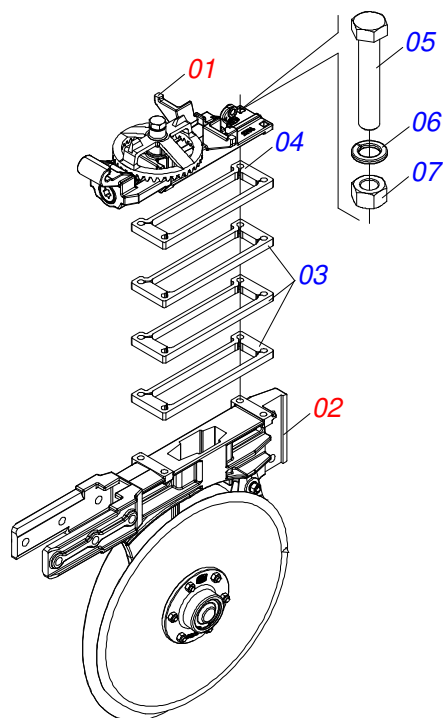


Item	Code	Description	See page	QT
01	0521054819	BASE 1/2 FIXED WITHOUT ASSY LUBRICATION	87	01
02	0521054762	RIGHT DDD SEED	93	01
03	0581014527	ELEVATION PLATE 12,5		03
04	0581014526	ELEVATION PLATE 3/8		01
05	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		04
06	0503010025	3/8" SPRING WASHER		04
07	0503010026	3/8" NUT		04

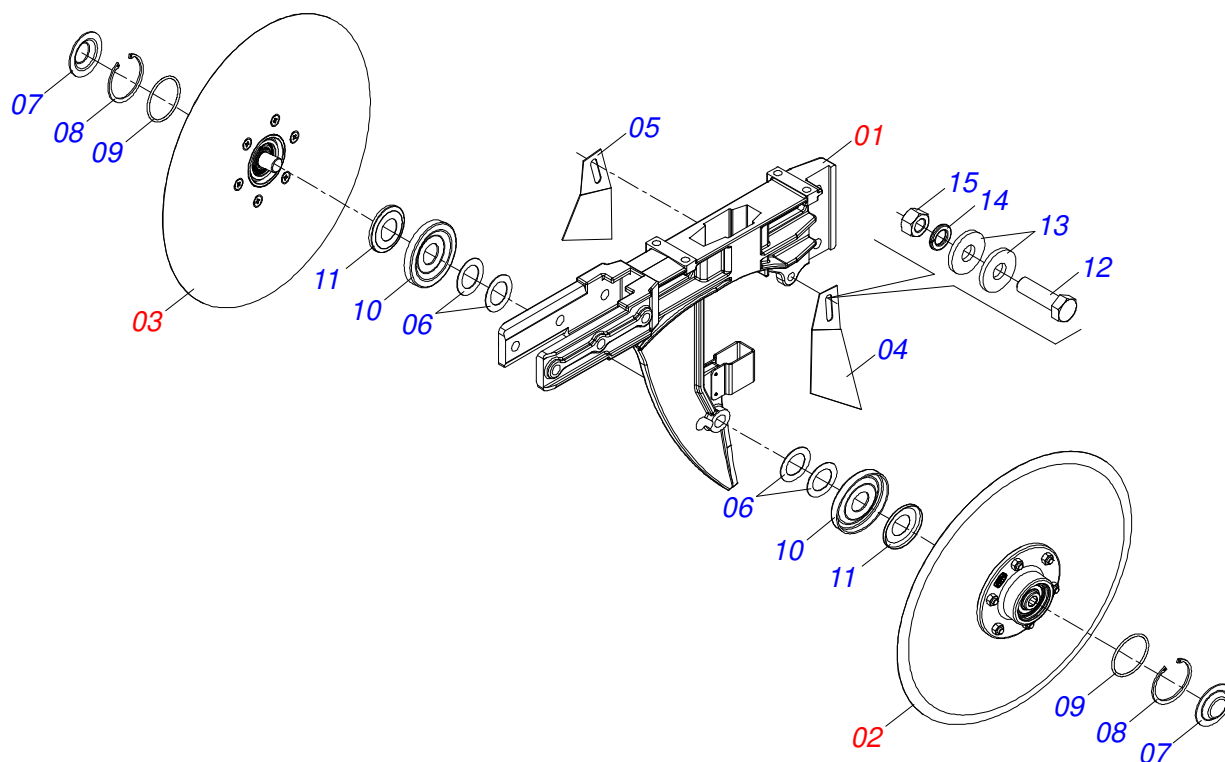


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT	94	01
02	0521054761	LEFT LOW CUBE	90	01
03	0521054760	DOWN LOW CUBE	91	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0511015098	FLAT WASHER		04
07	0571011152	DOUBLE DISC CAP		02
08	0503015081	502052 CLAMPING RING (FOR AXLE)		02
09	0503014679	2-134 O'RING		02
10	0511011927	DUST CLOAK		02
11	0503034055	CLAMPING RING		02
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
13	0501010984	FLAT WASHER		02
14	0503010025	3/8" SPRING WASHER		01
15	0503010026	3/8" NUT		01

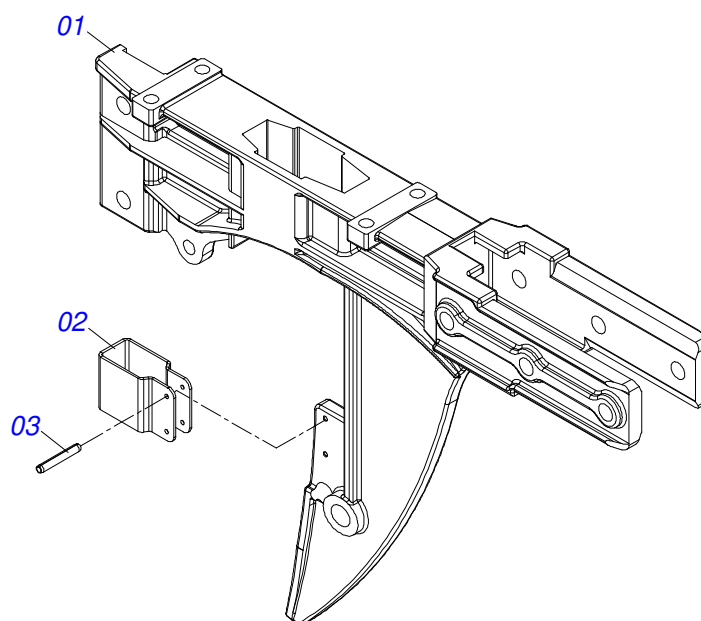


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

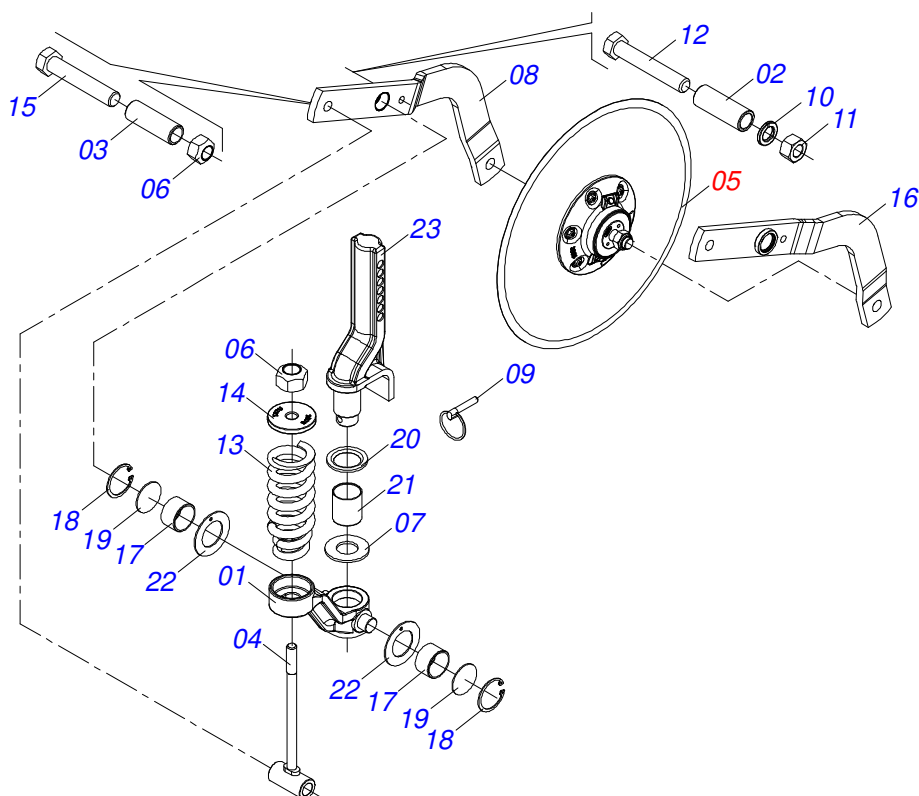


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT WITHOUT LUBRICATION		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	99	01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	WASHER BRACKET AXIS DC PST		01
08	0521068887	DC RIGHT ARM WITH GLOVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2" NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH GLOVE		01
17	0503019272	LUBRICANT GLOVE		02
18	0503010390	SEAL RING		02
19	0581017628	COVER		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012825	SHAFT FIXING SHAFT CUT LINE SHORT		01

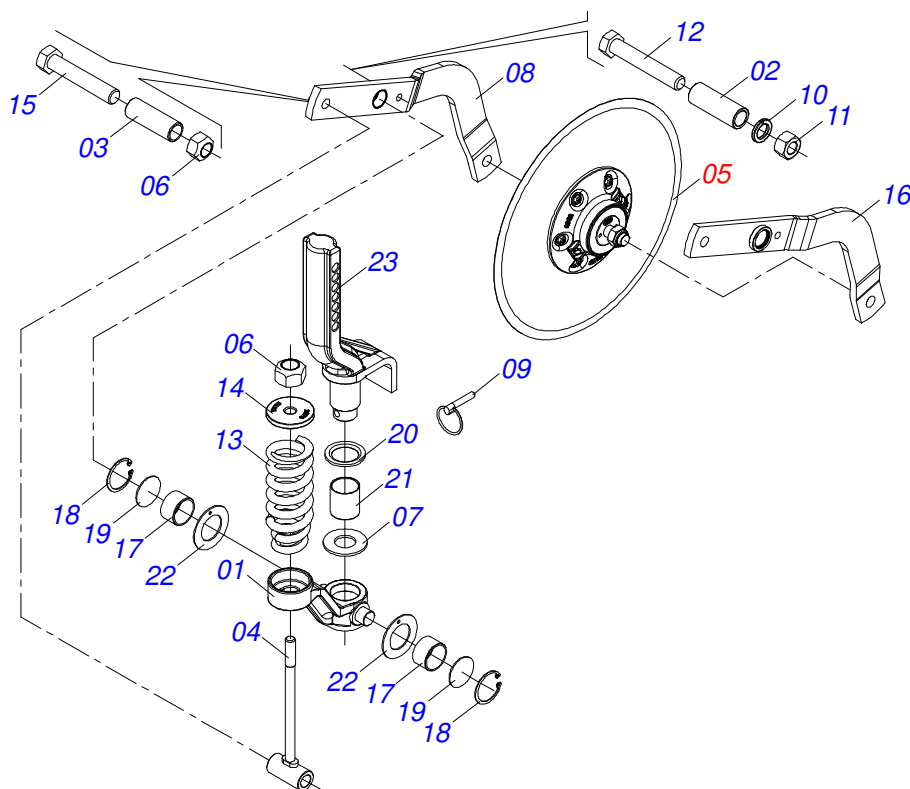


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT WITHOUT LUBRICATION		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521054829	DISC BOX CUT 18 BEARING CONICO		01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	WASHER BRACKET AXIS DC PST		01
08	0521068887	DC RIGHT ARM WITH GLOVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2" NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH GLOVE		01
17	0503019272	LUBRICANT GLOVE		02
18	0503010390	SEAL RING		02
19	0581017628	COVER		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012825	SHAFT FIXING SHAFT CUT LINE SHORT		01

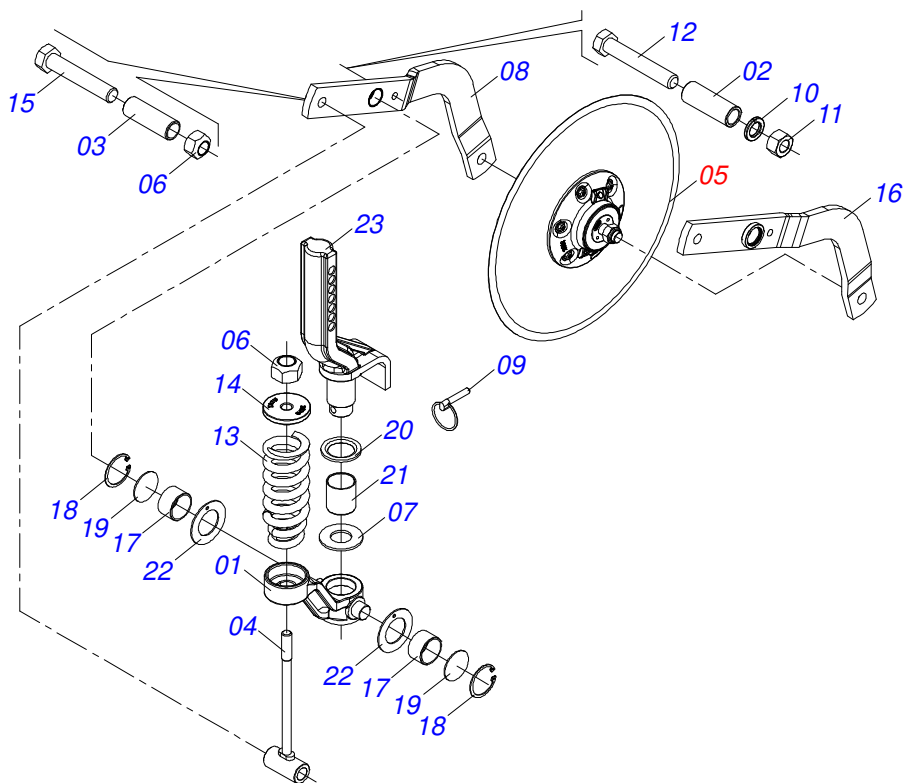


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT WITHOUT LUBRICATION		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	99	01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	WASHER BRACKET AXIS DC PST		01
08	0521068887	DC RIGHT ARM WITH GLOVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2" NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH GLOVE		01
17	0503019272	LUBRICANT GLOVE		02
18	0503010390	SEAL RING		02
19	0581017628	COVER		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012824	FIXING SHAFT DISC CUT LINE		01

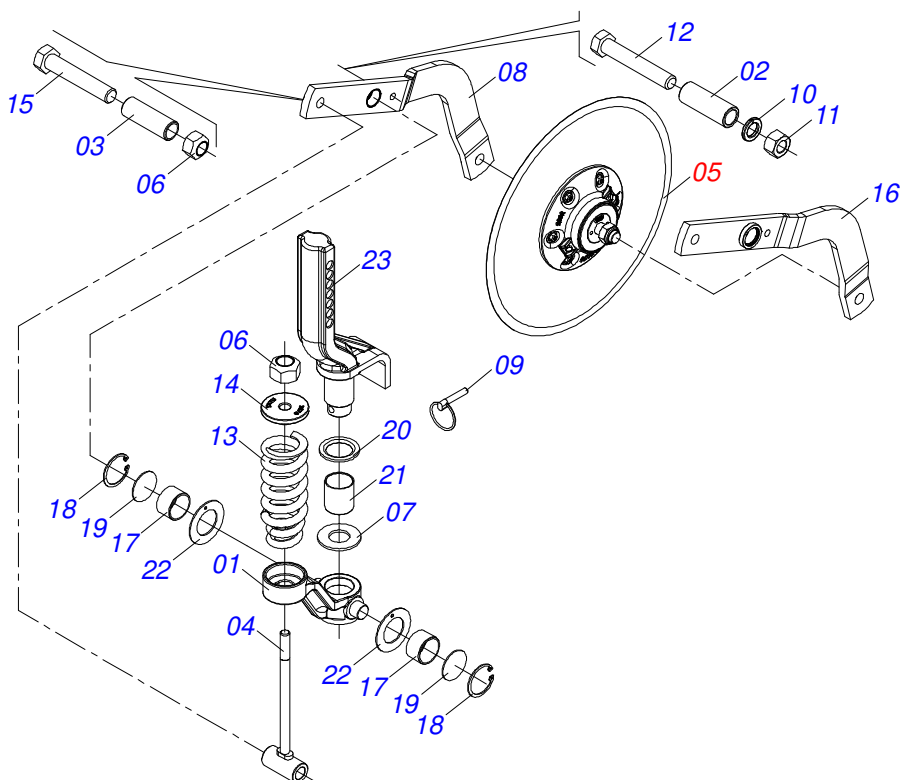


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT WITHOUT LUBRICATION		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521054829	DISC BOX CUT 18 BEARING CONICO		01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	WASHER BRACKET AXIS DC PST		01
08	0521068887	DC RIGHT ARM WITH GLOVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2" NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH GLOVE		01
17	0503019272	LUBRICANT GLOVE		02
18	0503010390	SEAL RING		02
19	0581017628	COVER		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012824	FIXING SHAFT DISC CUT LINE		01

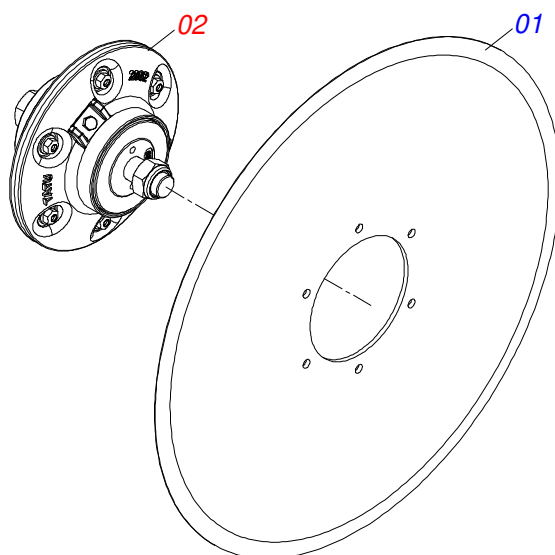


Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521053697	CUTTING DISK BOX	100	01

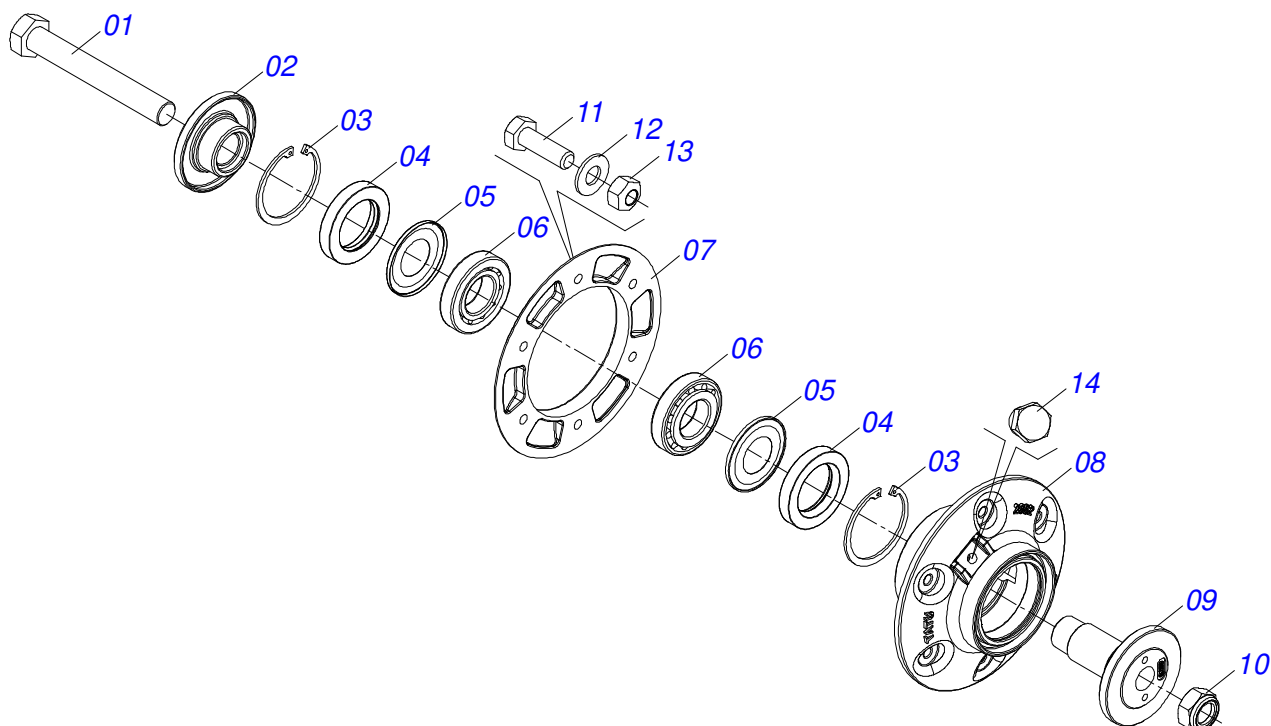

Item	Code	Description	See page	QT
01	0503019283	SCREW 7/8 UNF X 6.1/4	01	
02	0502040872	REGULATORY NUT	01	
03	0503010370	502072 CLAMPING RING (FOR AXLE)	02	
04	0503010590	00674-B SEAL	02	
05	0503019285	RING	02	
06	0503012170	30207 ROLLER BEARING	02	
07	0502020641	BLADE DISC FLANGE	01	
08	0502012862	CUTTING DISK BOX	01	
09	0502040873	CUTTING DISC AXLE	01	
10	0503017755	NUT	01	
11	0503018825	5/16 UNC UNC BOLT	06	
12	0501010694	FLAT WASHER	06	
13	0503013816	5/16" LOCKNUT	06	
14	0511017907	1/8" BSPT X 6 PLUG	02	

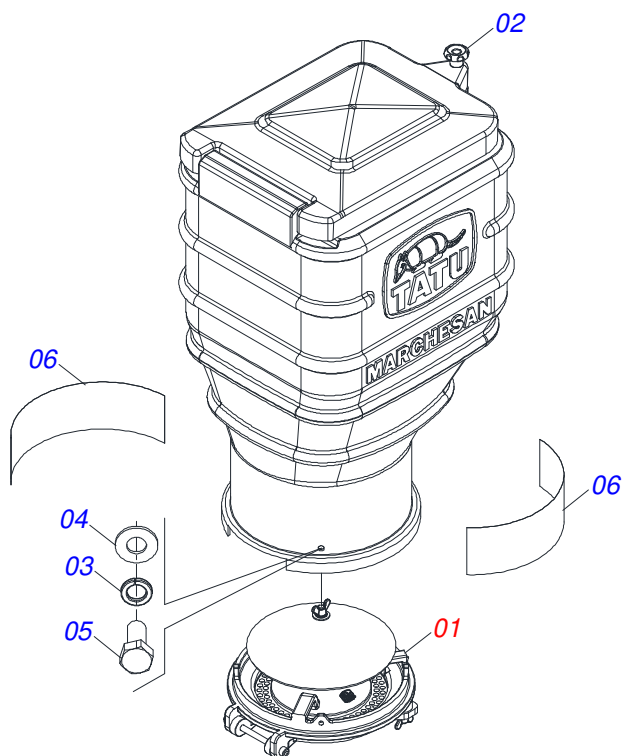


Item	Code	Description	See page	QT
01	0531051514	SIGMA SOY SEED SYSTEM	102	01
02	0503063602	SEMI-ASSEMBLED SIGMA INDIVIDUAL SEED BOX	104	01
03	0503010179	LOCK WASHER		04
04	0501010694	FLAT WASHER		04
05	0503010240	BOLT		04
06	0503035691	ADHESIVE LABEL		02

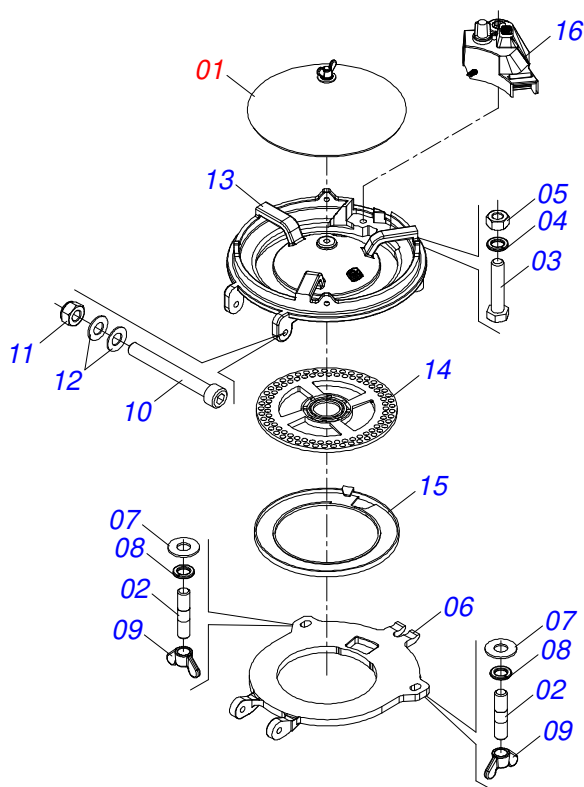


Item	Code	Description	See page	QT
01	0511057289	ASSY SEED DEFLECTOR	103	01
02	0503030083	3/8" X 3/8" X 1.6" STUD		02
03	0503010675	5/16" X 2.1/4" BOLT		01
04	0503010179	LOCK WASHER		01
05	0503010337	5/16" NUT		01
06	0502012974	LOWER SEED DISK TRACK		01
07	0501013518	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		02
09	0503010209	3/8" UNC BUTTERFLY NUT		02
10	0503016282	ALLEN BOLT		01
11	0503019913	SELF-LOCKING NUT W/ NYLON M8 X 1.25 C.8 ZN		01
12	0503035299	PLATE SPRING 16 X 8.2 X 0.90		02
13	0591018706	SEED BOX SUPPORT		01
14	0513010140	SOYA DISK SOCIDISC 90 HOLES		01
15	0513010161	SOCIDISCO RING FOR SOY 0,8MM AZCSOJAR08-002461		01
16	0503063405	SOY SEED DISTRIBUTOR BOX		01

ASSY SEED DEFLECTOR


0511057289

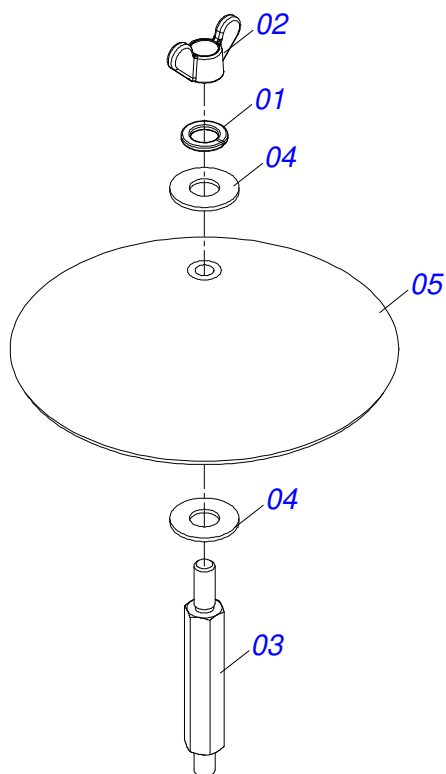


Item	Code	Description	See page	QT
01	0503010025	3/8" SPRING WASHER		01
02	0503010209	3/8" UNC BUTTERFLY NUT		01
03	0571018536	HEX PRISONER		01
04	0501013518	FLAT WASHER		02
05	0503034131	DEFLECTOR		01

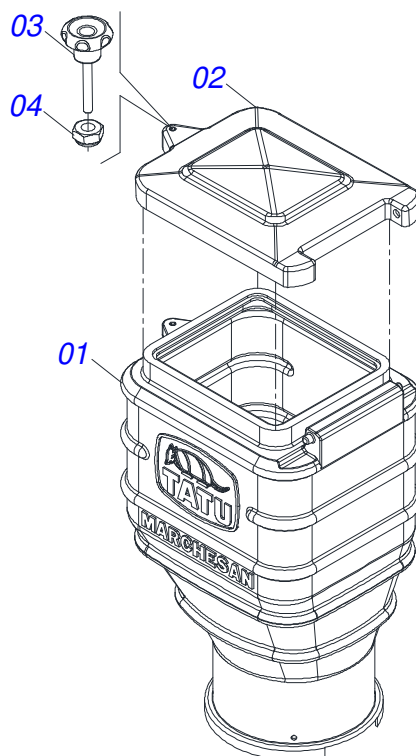


Item	Code	Description	See page	QT
01	0503035628	SIGMA YELLOW SEED BOX		01
02	0503035629	SIGMA SEED BOX LID		01
03	0503035298	BAKELITE HANDLE WITH THREAD		01
04	0503015536	M6 X 1" SELF ADJUSTING NUT		01

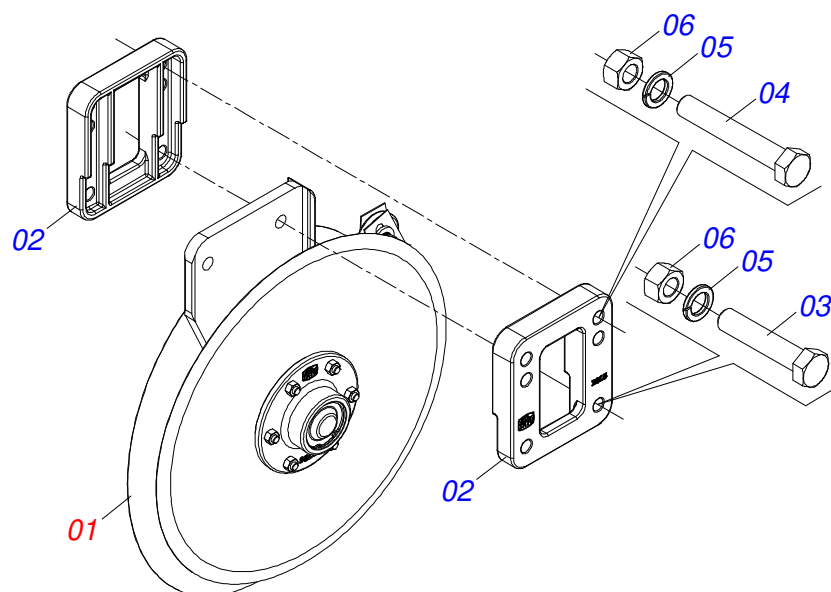


Item	Code	Description	See page	QT
01	0521055868	RIGHT DUAL FERTILIZER DISC		01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2" NUT		04

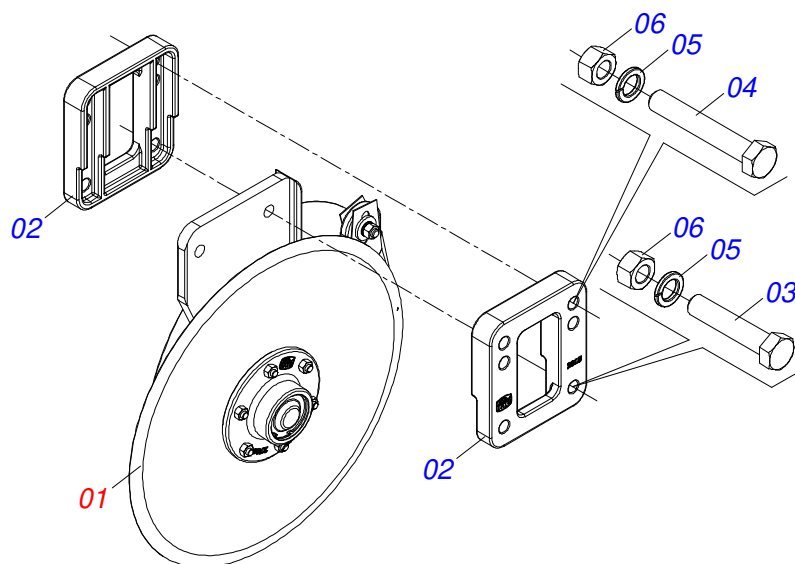


Item	Code	Description	See page	QT
01	0521055869	LEFT DUAL FERTILIZER DISC		01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2" NUT		04

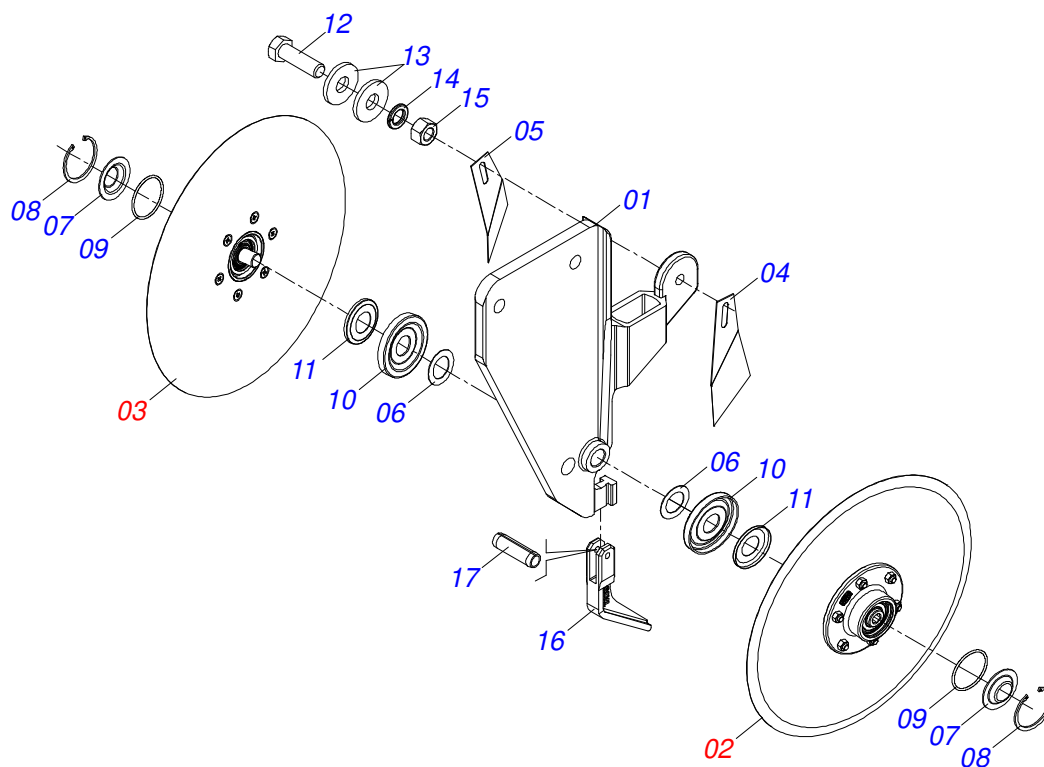


Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0521054761	LEFT LOW CUBE	90	01
03	0521054760	DOWN LOW CUBE	91	01
04	0501017541	RIGHT DOUBLE DISC SCRAPER		01
05	0501017542	LH DOUBLE DISC SCRAPER		01
06	0511015098	FLAT WASHER		02
07	0571011152	DOUBLE DISC CAP		02
08	0503015081	502052 CLAMPING RING (FOR AXLE)		02
09	0503014679	2-134 O'RING		02
10	0511011927	DUST CLOAK		02
11	0503034055	CLAMPING RING		02
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
13	0501010984	FLAT WASHER		02
14	0503010025	3/8" SPRING WASHER		01
15	0503010026	3/8" NUT		01
16	0502070062	SCRAPER		01
17	0503011402	0.2" X 0.8" SPRING PIN		01

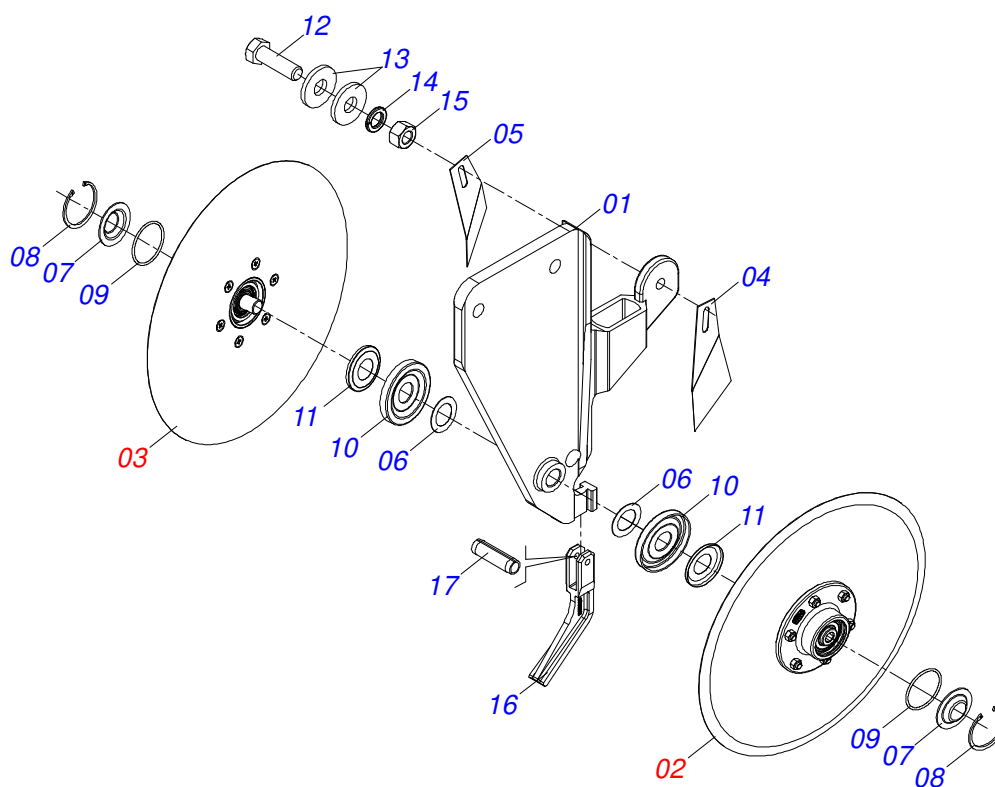


Item	Code	Description	See page	QT
01	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
02	0521054761	LEFT LOW CUBE	90	01
03	0521054760	DOWN LOW CUBE	91	01
04	0501017541	RIGHT DOUBLE DISC SCRAPER		01
05	0501017542	LH DOUBLE DISC SCRAPER		01
06	0511015098	FLAT WASHER		02
07	0571011152	DOUBLE DISC CAP		02
08	0503015081	502052 CLAMPING RING (FOR AXLE)		02
09	0503014679	2-134 O'RING		02
10	0511011927	DUST CLOAK		02
11	0503034055	CLAMPING RING		02
12	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
13	0501010984	FLAT WASHER		02
14	0503010025	3/8" SPRING WASHER		01
15	0503010026	3/8" NUT		01
16	0502070062	SCRAPER		01
17	0503011402	0.2" X 0.8" SPRING PIN		01

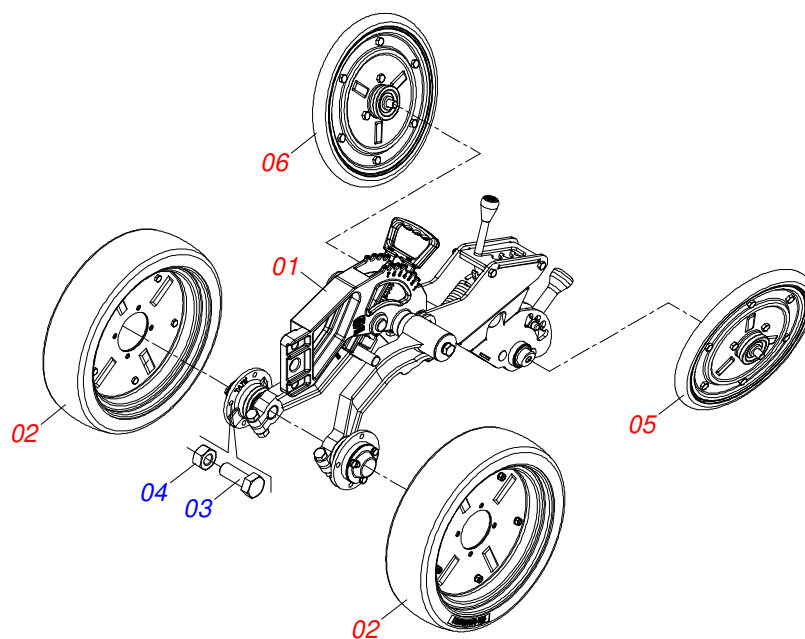


Item	Code	Description	See page	QT
01	0521054986	DEPTH CONTROL SEMI MOUNTED WITHOUT LUBRICATION	111	01
02	0501052538	DEPTH BAND WITH ARMS	122	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0521054990	LEFT COMPACTOR WHEEL	123	01
06	0521055017	RIGHT COMPACTOR WHEEL	133	01

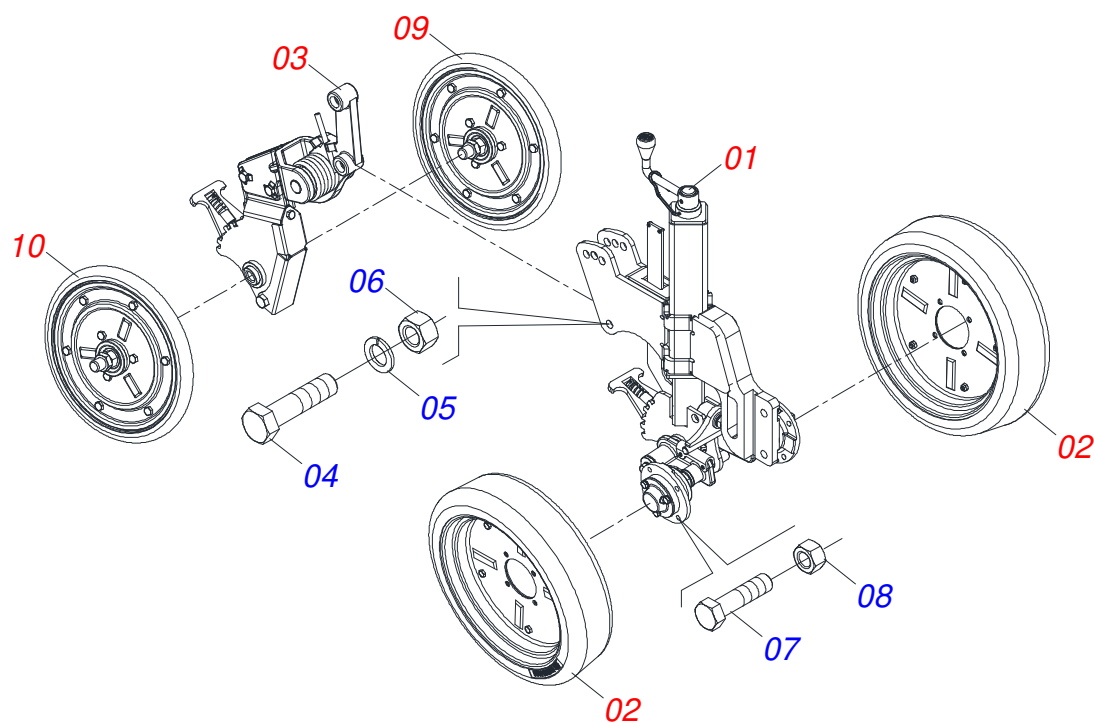


Item	Code	Description	See page	QT
01	0521054751	DEPTH CONTROL WITH THREAD	124	01
02	0511055819	DEPTH WHIT AROS BAND	134	02
03	0521054752	V COMPACTING SYSTEM	129	01
04	0503010479	BOLT		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010060	1/2" NUT		02
07	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		08
08	0503013816	5/16" LOCKNUT		08
09	0521054753	DRIVE WHEEL V RUBBER RIGHT	130	01
10	0521054754	DRIVE WHEEL V LEFT RUBBER	131	01

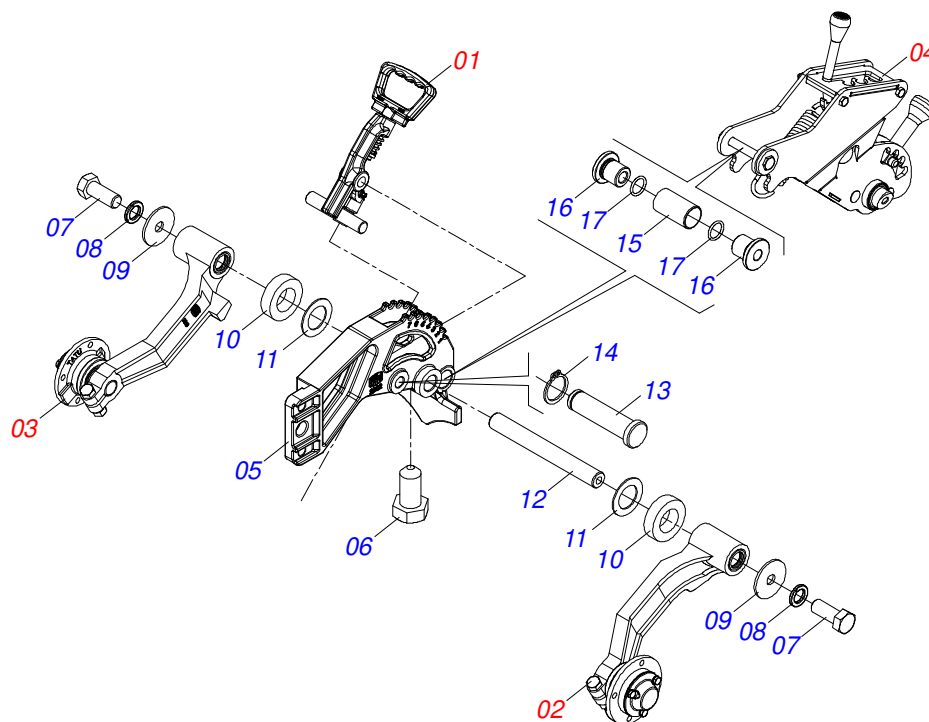


Item	Code	Description	See page	QT
01	0501052297	DEPTH WHEELS REGULATOR ASSY	117	01
02	0521054987	LEFT ARM WITH HUB WITHOUT LUBRIFICATION	118	01
03	0521054988	RIGHT ARM WITH HUB WITHOUT LUBRIFICATION	120	01
04	0521055033	SEMI-ASSEMBLED COMPACTOR BODY	121	01
05	0502012282	DEPTH CONTROL SUPPORT		01
06	0503034377	SCREW 3/8 UNC X 3/4		01
07	0503010311	1/2" X 1-1/4" BOLT		02
08	0503010019	1/2" SPRING WASHER		02
09	0571017749	FLAT WASHER		02
10	0571015974	WASHER		02
11	0511015346	FLAT WASHER		02
12	0581011100	DEPTH WHEEL AXLE		01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010581	RING		01
15	0503019275	SLEEVE LUBRICATION SYSTEM		01
16	0581019473	ARTICULATED GLOVE		02
17	0503010045	O'RING		02

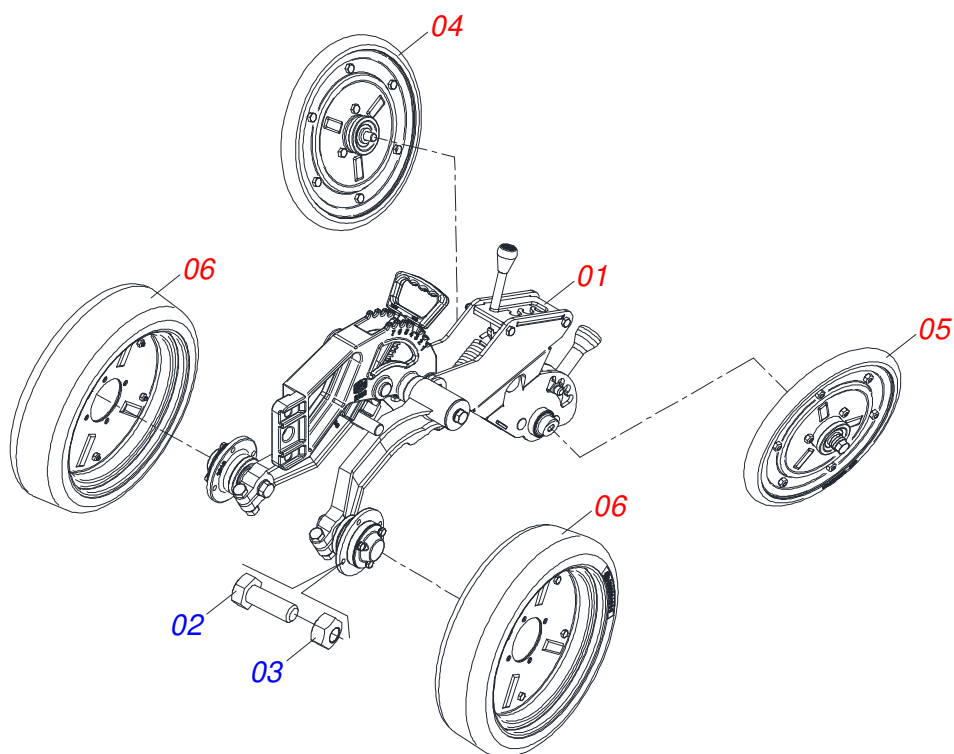


Item	Code	Description	See page	QT
01	0531050980	SEM SEMI-ASSEMBLED CONTROL WITHOUT LUBRICATION	113	01
02	0503010358	5/16" X 5/8" BOLT		08
03	0503013816	5/16" LOCKNUT		08
04	0521055017	RIGHT COMPACTOR WHEEL	133	01
05	0521054990	LEFT COMPACTOR WHEEL	123	01
06	0511055819	DEPTH WHIT AROS BAND	134	02

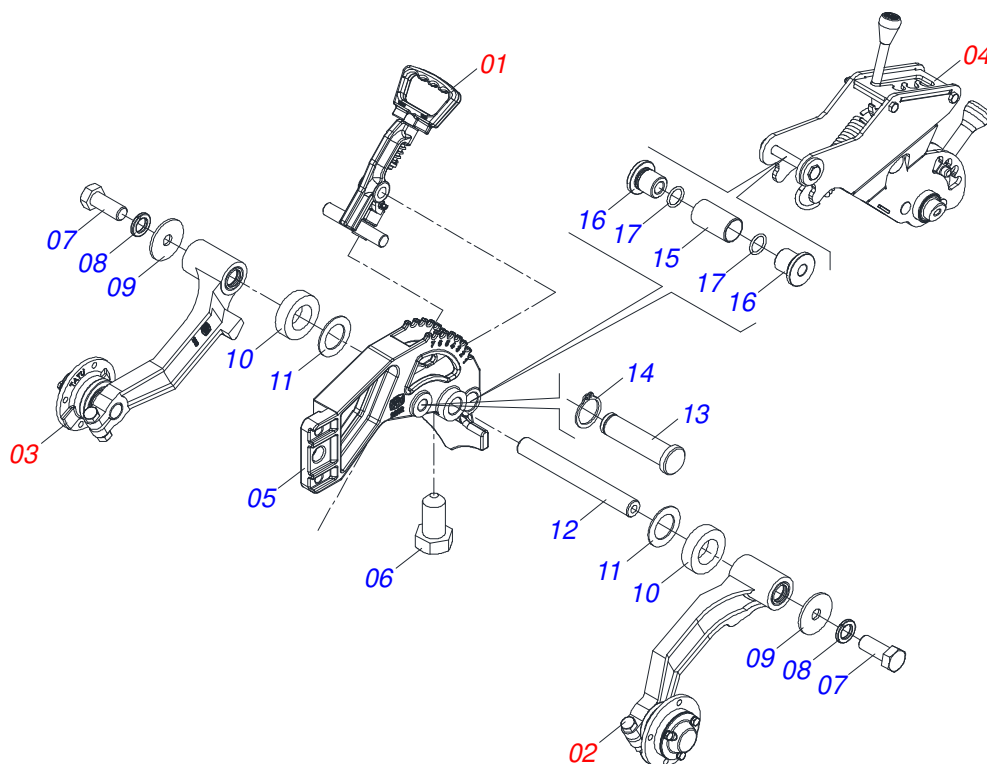


Item	Code	Description	See page	QT
01	0501052297	DEPTH WHEELS REGULATOR ASSY	117	01
02	0531050975	LEFT ARM WHEELS DEPTH WITH CUBE WITHOUT LUBRICATION	114	01
03	0531050973	RIGHT ARM DEPTH WHEEL WITH HUB WITHOUT LUBRICATION	115	01
04	0521055033	SEMI-ASSEMBLED COMPACTOR BODY	121	01
05	0502012282	DEPTH CONTROL SUPPORT		01
06	0503034377	SCREEW 3/8 UNC X 3/4		01
07	0503010311	1/2" X 1-1/4" BOLT		02
08	0503010019	1/2" SPRING WASHER		02
09	0571017749	FLAT WASHER		02
10	0571015974	WASHER		02
11	0511015346	FLAT WASHER		02
12	0581011100	DEPTH WHEEL AXLE		01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010581	RING		01
15	0503019275	SLEEVE LUBRICATION SYSTEM		01
16	0581019473	ARTICULATED GLOVE		02
17	0503010045	O'RING		02

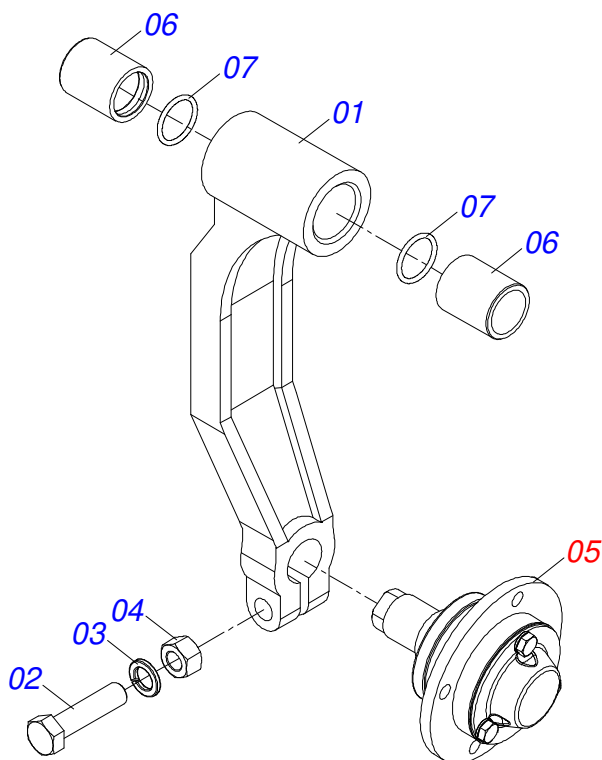


Item	Code	Description	See page	QT
01	0581019472	LEFT ARM WHEEL CONTROL DEPTH		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0531050974	CUBE CONTROL DEPTH WITHOUT LUBRICATION	116	01
06	0581019514	LUBRICANT GLOVE		02
07	0503011109	2-119 N 3006-9B O'RING		02

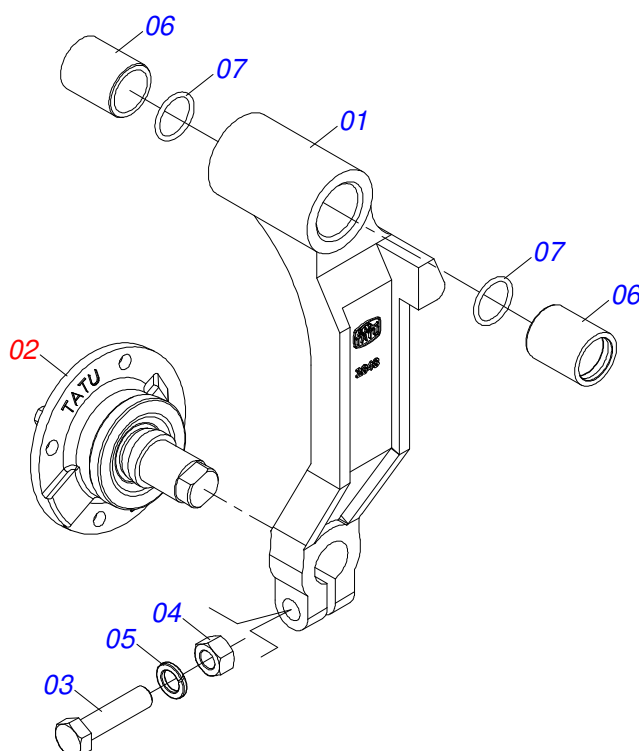


Item	Code	Description	See page	QT
01	0581019527	RIGHT ARM WHEEL CONTROL DEPTH		01
02	0531050974	CUBE CONTROL DEPTH WITHOUT LUBRICATION	116	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503010060	1/2" NUT		01
05	0503010019	1/2" SPRING WASHER		01
06	0581019514	LUBRICANT GLOVE		02
07	0503011109	2-119 N 3006-9B O'RING		02

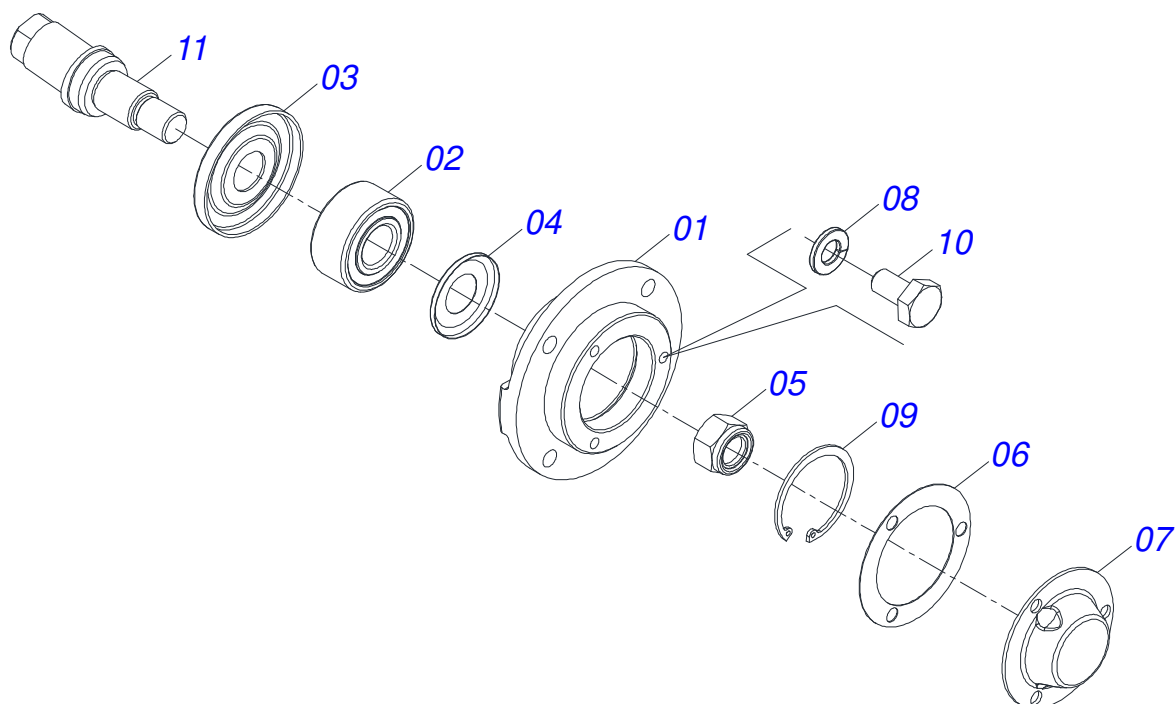


Item	Code	Description	See page	QT
01	0581019513	DEPTH WHEEL BOX		01
02	0503019342	ROLLER BEARING		01
03	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01
04	0503034055	CLAMPING RING		01
05	0503010878	5/8" SELF ALIGNING NUT		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0521019178	COVER DEPTH		01
08	0503010143	1/4" SPRING WASHER		03
09	0503011105	SEAL RING		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0591018029	DEPTH REGULATING AXLE WITH ANGLE		01

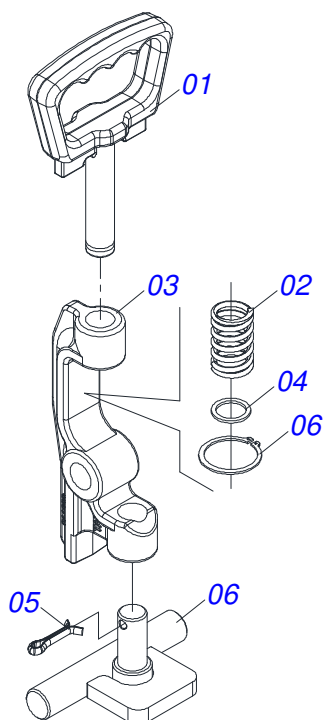


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	SEED SIST CONTROL DEPTH LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

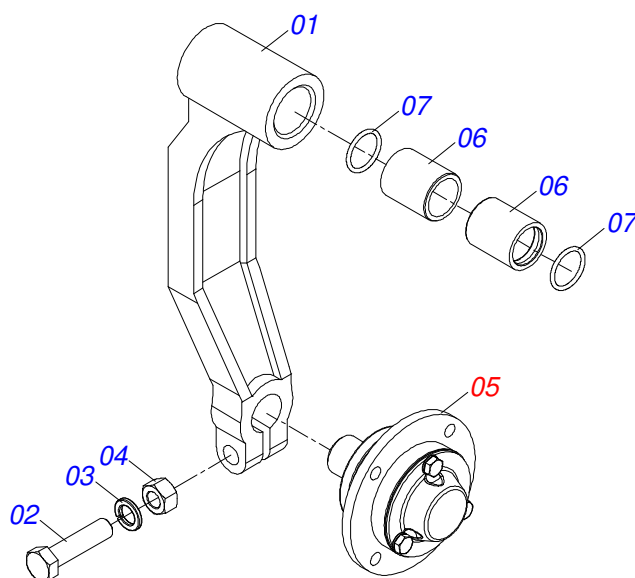


Item	Code	Description	See page	QT
01	0581019472	LEFT ARM WHEEL CONTROL DEPTH		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0521055016	CUBE DEPTH CONTROL WITHOUT LUBRICATION	119	01
06	0581019514	LUBRICANT GLOVE		02
07	0503011109	2-119 N 3006-9B O'RING		02

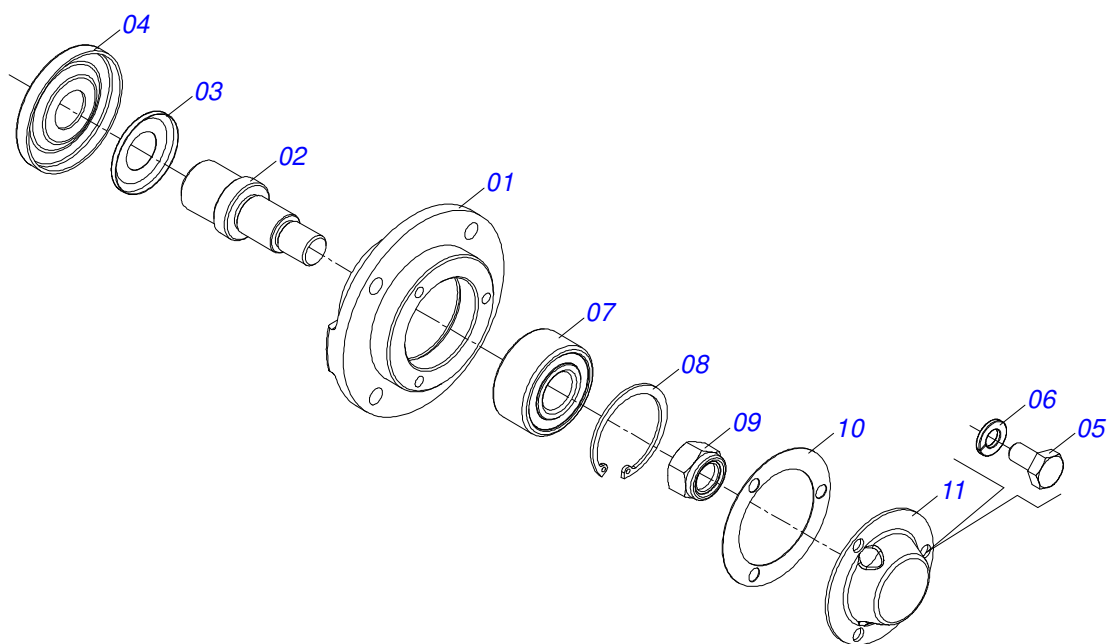


Item	Code	Description	See page	QT
01	0581019513	DEPTH WHEEL BOX		01
02	0581019515	AXIS		01
03	0503034055	CLAMPING RING		01
04	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01
05	0503013758	1/4" X 1-1/2" BOLT		03
06	0503010143	1/4" SPRING WASHER		03
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0503010878	5/8" SELF ALIGNING NUT		01
10	0503030757	2.9" X 2" X 0.02" JOINT		01
11	0521019178	COVER DEPTH		01

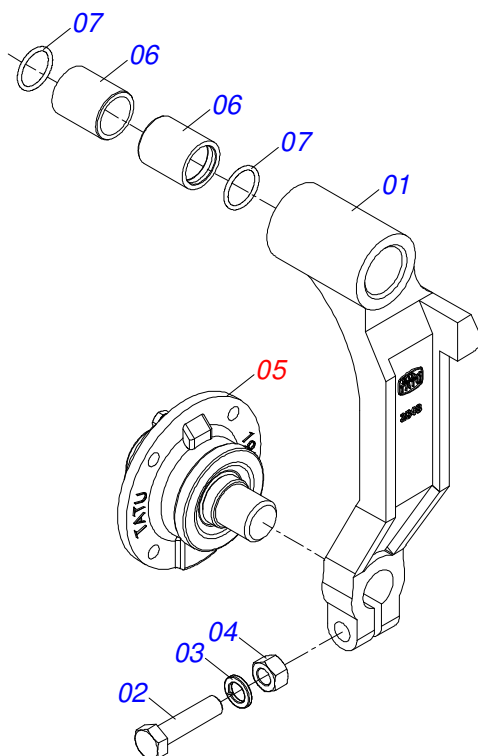


Item	Code	Description	See page	QT
01	0581019527	RIGHT ARM WHEEL CONTROL DEPTH		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0521055016	CUBE DEPTH CONTROL WITHOUT LUBRICATION	119	01
06	0581019514	LUBRICANT GLOVE		02
07	0503011109	2-119 N 3006-9B O'RING		02

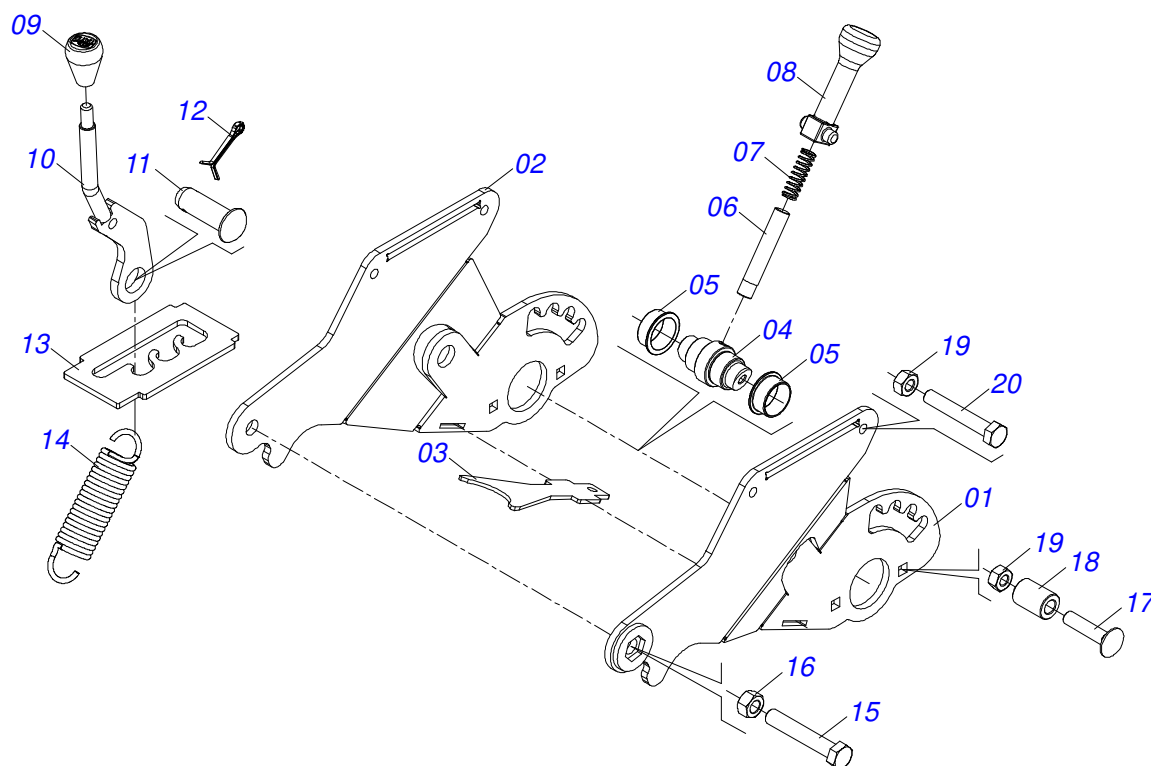


Item	Code	Description	See page	QT
01	0521069585	LEFT SIDE		01
02	0581019475	RIGHT SIDE BODY		01
03	0581019511	COVER		01
04	0581019510	AXIS		01
05	0503019351	LUBRICANT GLOVE		02
06	0581019520	AXIS		01
07	0503030190	0.5" X 1.6" X 0.05" SPRING		01
08	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
09	0503030878	LEVER CRANK		01
10	0521068661	LEVER		01
11	0571012442	COUPLING SHAFT		01
12	0503010257	1/8" X 1" COTTERPIN		01
13	0581019512	PLATE TOP		01
14	0503034817	SPRING		01
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503011336	1/2" HEX SELF ADJUSTING NUT		01
17	0501011753	5/16" X 1-3/4" BOLT		02
18	0581015855	SLEEVE		02
19	0503013816	5/16" LOCKNUT		04
20	0503010848	5/16" X 3.1/2" BOLT		02

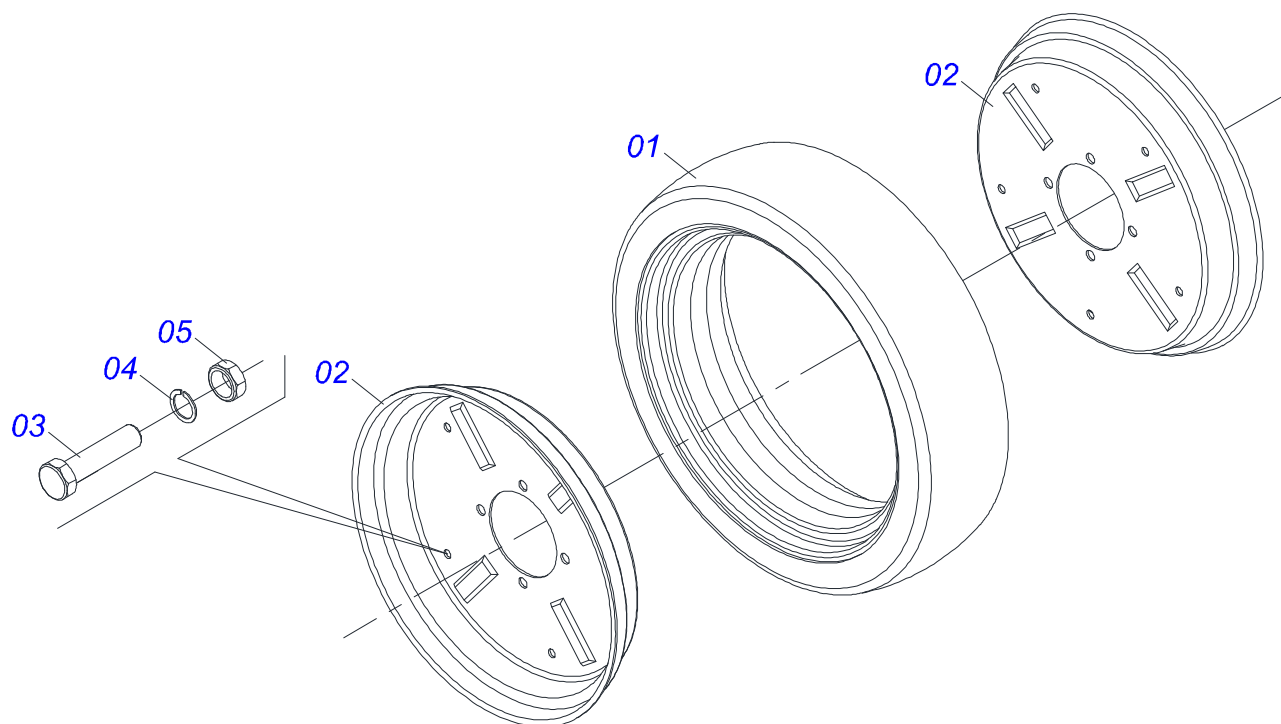

Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

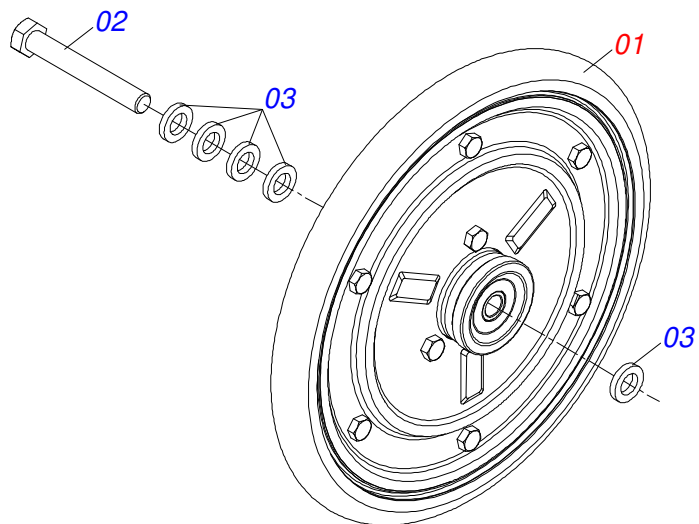

Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	132	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

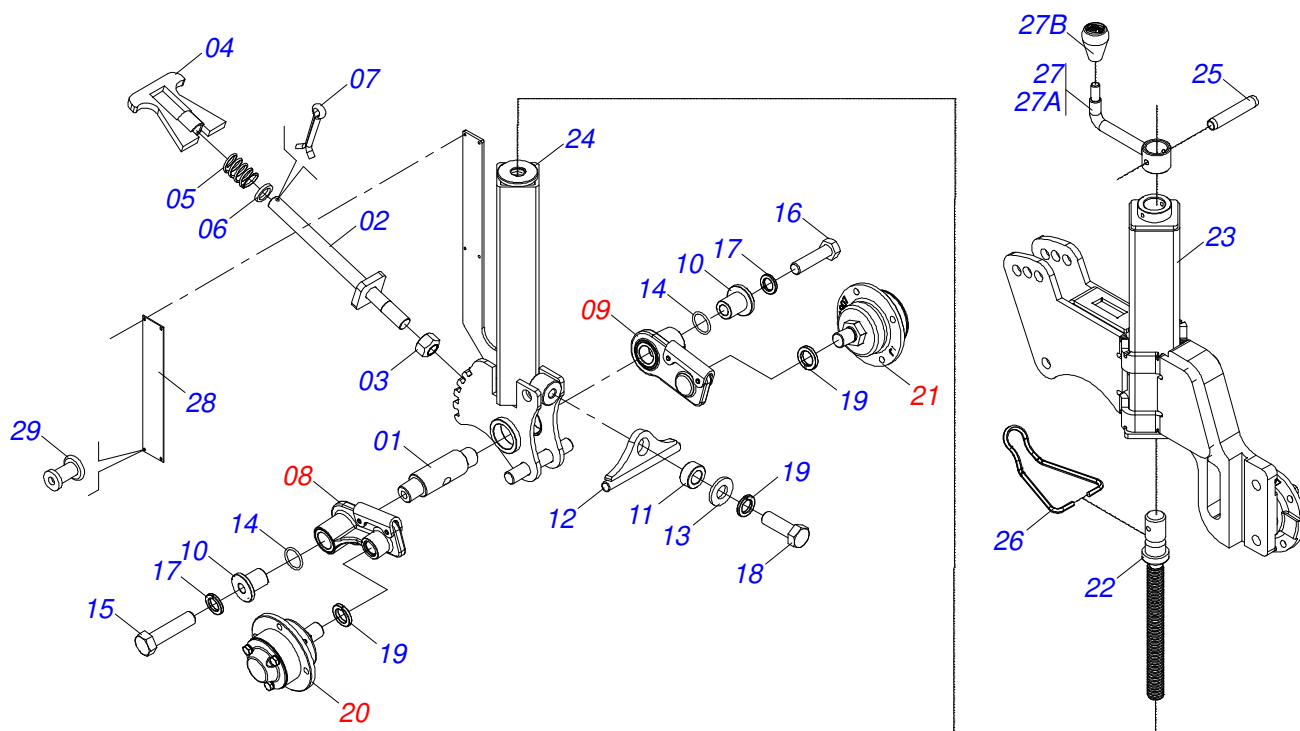

Item	Code	Description	See page	QT
01	0581017621	CONTROL AXLE		01
02	0521063812	REGULATOR LEVER ALXE		01
03	0503011336	1/2" HEX SELF ADJUSTING NUT		01
04	0511065308	LOCK REGULATOR		01
05	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
06	0541011627	FLAT WASHER		01
07	0503010140	1/8" X 3/4" COTTERPIN		01
08	0521053245	LEFT ARM WHEELS	127	01
09	0521053244	ARM RIGHT WHEEL COBRIDORA	128	01
10	0581017646	SLEEVE LOCK CONTROL ARM		02
11	0571013189	SLEEVE SUPPORT BEATER		01
12	0521063813	WHEEL PRESS BEATER		01
13	0501010937	13.5 X 28 X 3 FLAT WASHER		01
14	0503010045	O'RING		04
15	0503017375	1/2" X 1-1/4" BOLT		01
16	0503014007	1/2" X 1-1/4" BOLT		01
17	0503010019	1/2" SPRING WASHER		03
18	0503010920	1/2" X 1.1/2" BOLT		01
19	0503010023	3/4" SPRING WASHER		04
20	0521053483	CPRA RIGHT DEPTH CONTROL CUBE WITHOUT 125 LUBRICATION		01
21	0521053484	CPRA LEFT DEPTH CONTROL CUBE WITHOUT 126 LUBRICATION		01
22	0581019171	REGULATOR		01
23	0521069476	EXTERNAL COLUMN CONTROL DEPTH		01
24	0521069475	INTERNAL COLUMN CHECK DEPTH		01
25	0503010683	0,2" X 1,2" SPRING PIN		01
26	0503034830	REGULATION LATCHE		01
27	0521054750	CRANK ASSEMBLY		01
27A	0521069477	HAND CRANK		01
27B	0503030878	LEVER CRANK		01
28	0503030751	REGULATOR PLATE		01



PST DUO - FRAME 4880/6350


(FROM 04/2022)

Page 124


DEPTH CONTROL WITH THREAD

0521054751

Item	Code	Description	See page	QT
29	0503010001	3.2 X 5.5 RIVET		04

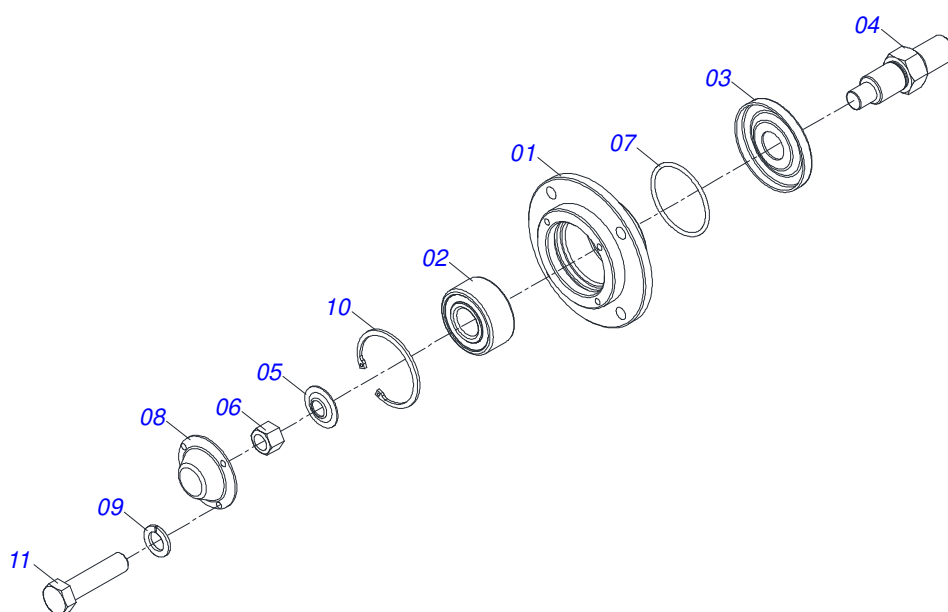


Item	Code	Description	See page	QT
01	0502012912	WHEEL BOX DEPTH WITHOUT LUBRICATION		01
02	0503019342	ROLLER BEARING		01
03	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01
04	0581017828	RIGHT AXLE CPRA WITHOUT LUBRICATION		01
05	0503034055	CLAMPING RING		01
06	0503010878	5/8" SELF ALIGNING NUT		01
07	0503030757	2.9" X 2" X 0.02" JOINT		01
08	0521019178	COVER DEPTH		01
09	0503010143	1/4" SPRING WASHER		03
10	0503011105	SEAL RING		01
11	0503014729	1/4" UNF X 1/2" BOLT		03

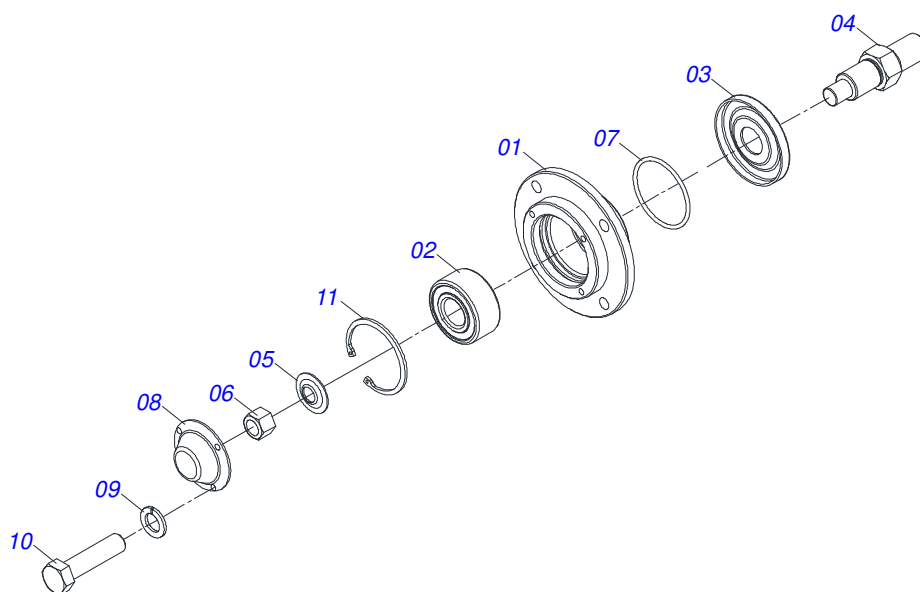


Item	Code	Description	See page	QT
01	0502012912	WHEEL BOX DEPTH WITHOUT LUBRICATION		01
02	0503019342	ROLLER BEARING		01
03	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01
04	0581017845	LEFT AXLE CPRA WITHOUT LUBRICATION		01
05	0503034055	CLAMPING RING		01
06	0503010878	5/8" SELF ALIGNING NUT		01
07	0503030757	2.9" X 2" X 0.02" JOINT		01
08	0521019178	COVER DEPTH		01
09	0503010143	1/4" SPRING WASHER		03
10	0503013758	1/4" X 1-1/2" BOLT		03
11	0503011105	SEAL RING		01

LEFT ARM WHEELS


0521053245

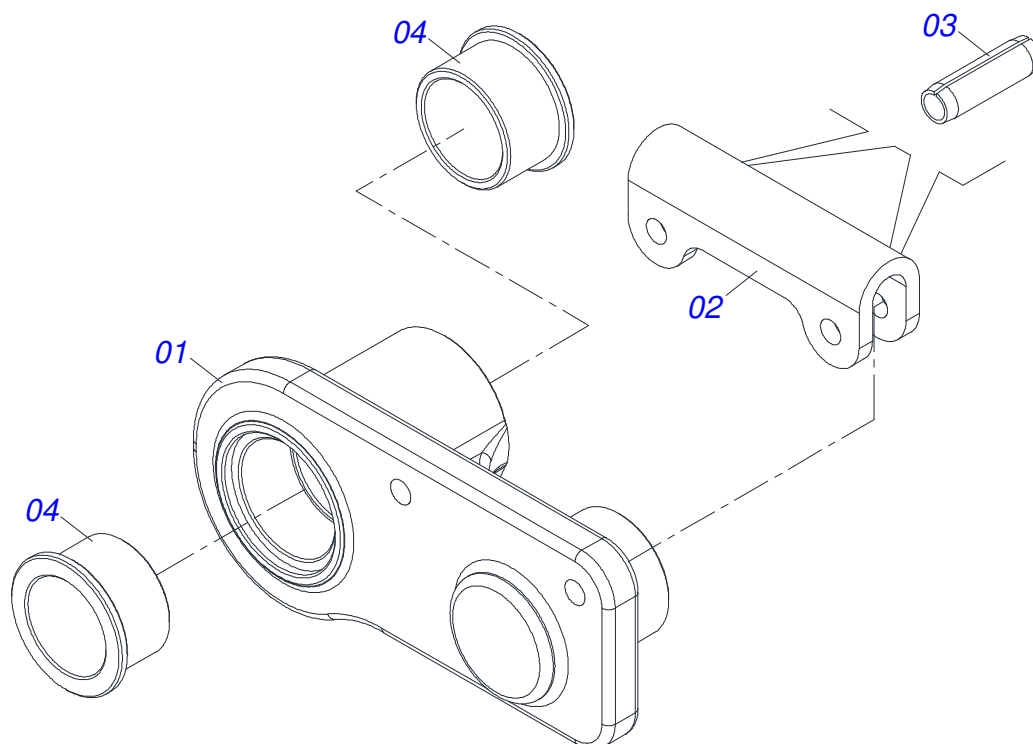


Item	Code	Description	See page	QT
01	0581017620	LEFT ARM WHEELS		01
02	0581011340	ARM COVER		01
03	0503011402	0.2" X 0.8" SPRING PIN		02
04	0503019275	SLEEVE LUBRICATION SYSTEM		01

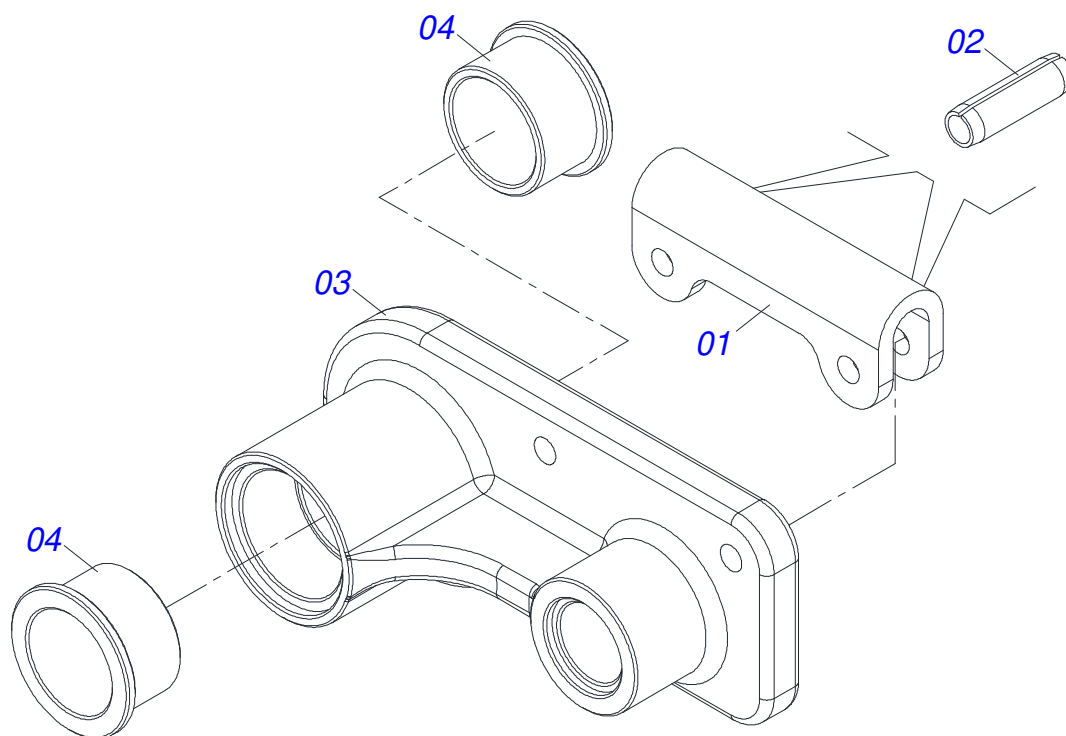


Item	Code	Description	See page	QT
01	0581011340	ARM COVER		01
02	0503011402	0.2" X 0.8" SPRING PIN		02
03	0581017645	WHEEL RIGHT ARM		01
04	0503019275	SLEEVE LUBRICATION SYSTEM		01

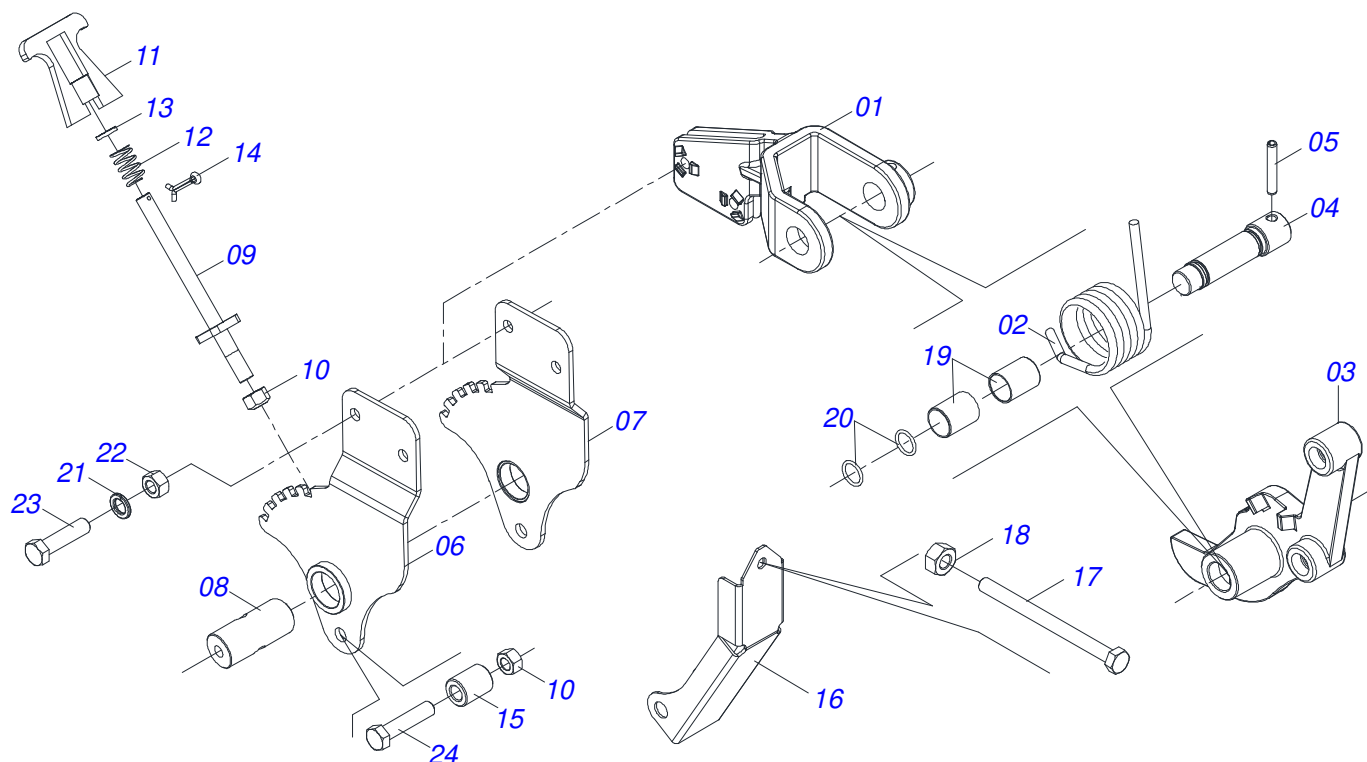


Item	Code	Description	See page	QT
01	0581017647	PRESS WHEELS ARM		01
02	0503030883	RIGHT TORSION SPRING		01
03	0581017622	SEAT SUPPORT		01
04	0581017648	PIVOT SHAFT		01
05	0503010839	03"X 0.6" SPRING PIN		01
06	0521069490	RIGHT REGULATOR		01
07	0521069491	LEFT REGULATOR		01
08	0581017817	ADJUSTMENT SHAFT COMPACTOR 1/2 THREAD WITHOUT LUBRICATION		01
09	0521063812	REGULATOR LEVER ALXE		01
10	0503011336	1/2" HEX SELF ADJUSTING NUT		02
11	0511065308	LOCK REGULATOR		01
12	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
13	0541011627	FLAT WASHER		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0571013293	SLEEVE LOCK COMPACTOR V CONTROL WITH SCREW		01
16	0581013744	PROTECTION COVER - CPRA		01
17	0503013096	5/16" X 4" BOLT		01
18	0503013816	5/16" LOCKNUT		01
19	0503019273	SLEEVE		02
20	0503010045	O'RING		02
21	0503010025	3/8" SPRING WASHER		02
22	0503010026	3/8" NUT		02
23	0503011404	BOLT		02
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		01

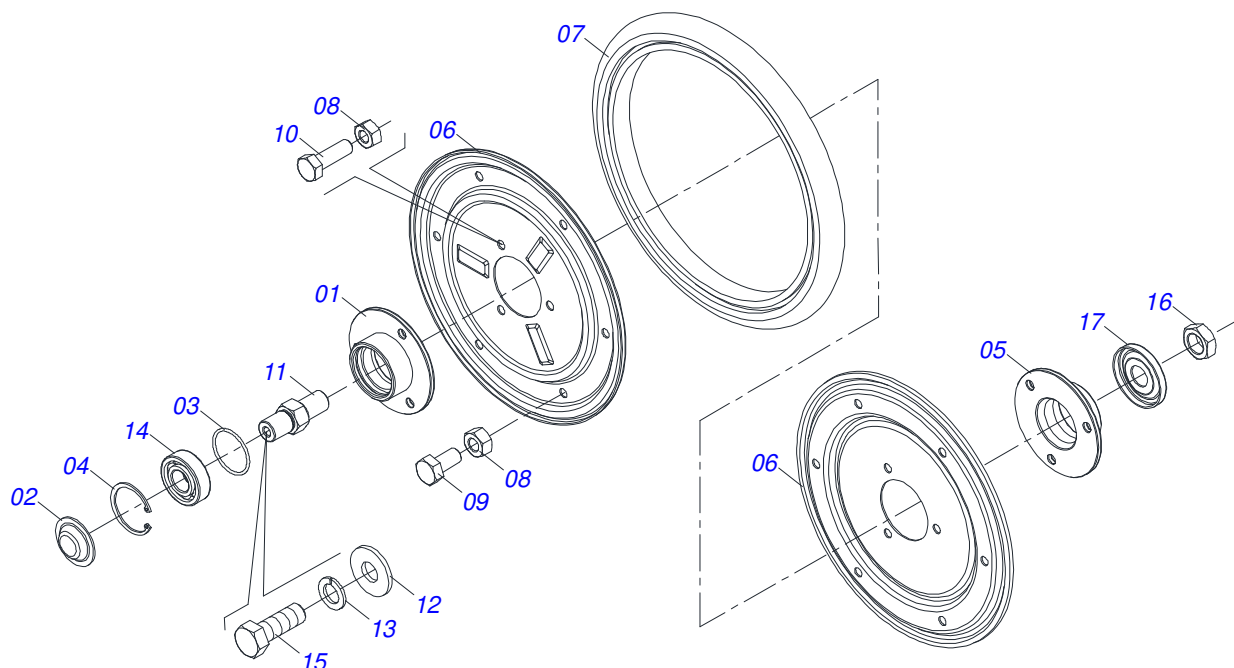


Item	Code	Description	See page	QT
01	0581019097	BOX LOWER WHEEL		01
02	0581012949	BEARING COVER		01
03	0503018045	2-130 (AGEL) O'RING		01
04	0503011105	SEAL RING		01
05	0502012893	WHEEL BOX		01
06	0521018928	PRESS WHEEL RIM		02
07	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
08	0503013816	5/16" LOCKNUT		09
09	0503010011	5/16" X 1/2" BOLT		06
10	0503010358	5/16" X 5/8" BOLT		03
11	0581019166	RIGHT AXIS		01
12	0501010984	FLAT WASHER		01
13	0503010025	3/8" SPRING WASHER		01
14	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
15	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
16	0503033787	NUT 3/4 UNF		01
17	0581019215	DUST CLOAK		01

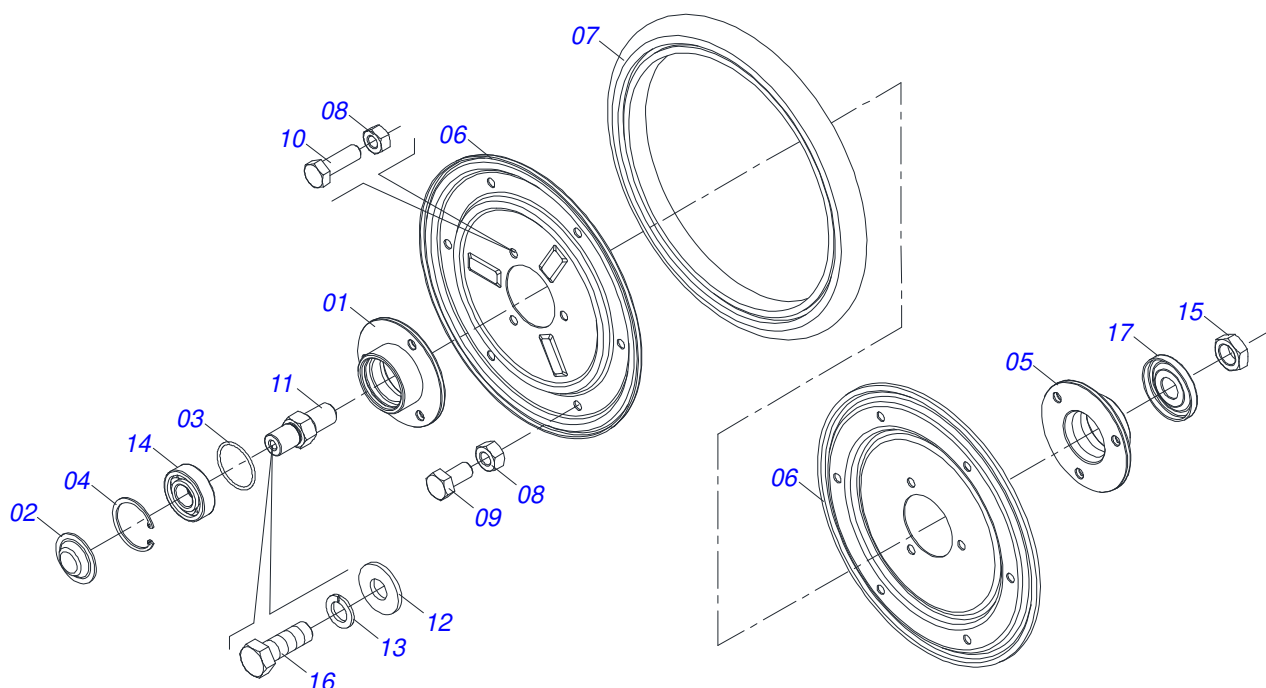


Item	Code	Description	See page	QT
01	0581019097	BOX LOWER WHEEL		01
02	0581012949	BEARING COVER		01
03	0503018045	2-130 (AGEL) O'RING		01
04	0503011105	SEAL RING		01
05	0502012893	WHEEL BOX		01
06	0521018928	PRESS WHEEL RIM		02
07	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
08	0503013816	5/16" LOCKNUT		09
09	0503010011	5/16" X 1/2" BOLT		06
10	0503010358	5/16" X 5/8" BOLT		03
11	0581019167	LEFT AXLE		01
12	0501010984	FLAT WASHER		01
13	0503010025	3/8" SPRING WASHER		01
14	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
15	0503033788	NUT 3/4		01
16	0503019348	SCREW 3/8 UNC X 3/4		01
17	0581019215	DUST CLOAK		01

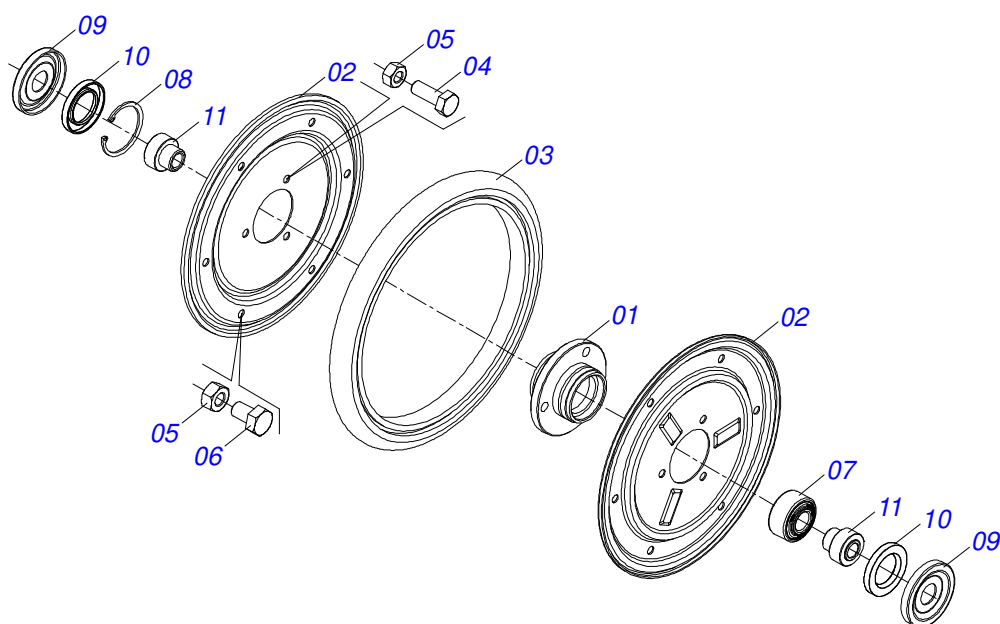


Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

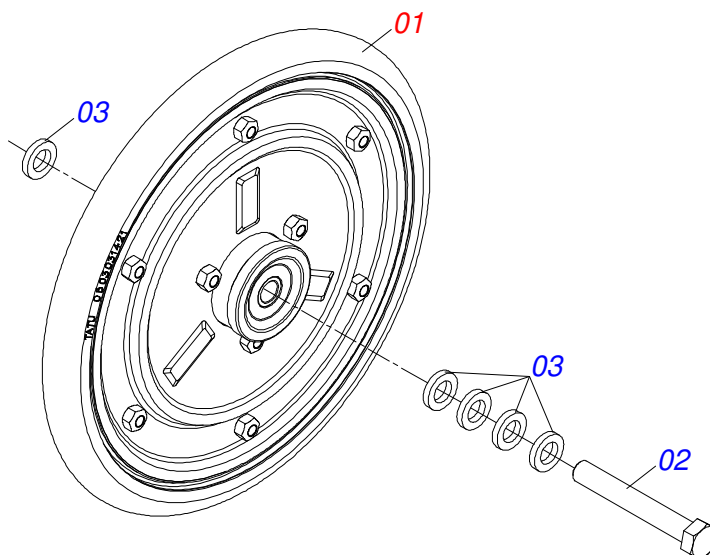


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	132	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

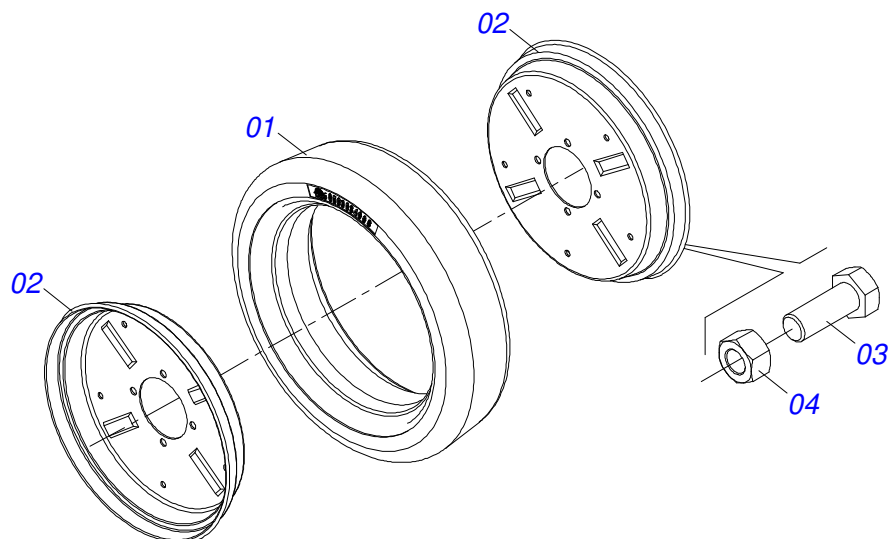


Item	Code	Description	See page	QT
01	0503034008	DEPTH CONTROL		01
02	0521010832	RIM FLANGE		02
03	0503013758	1/4" X 1-1/2" BOLT		05
04	0503013814	1/4" NC LOCKNUT		05

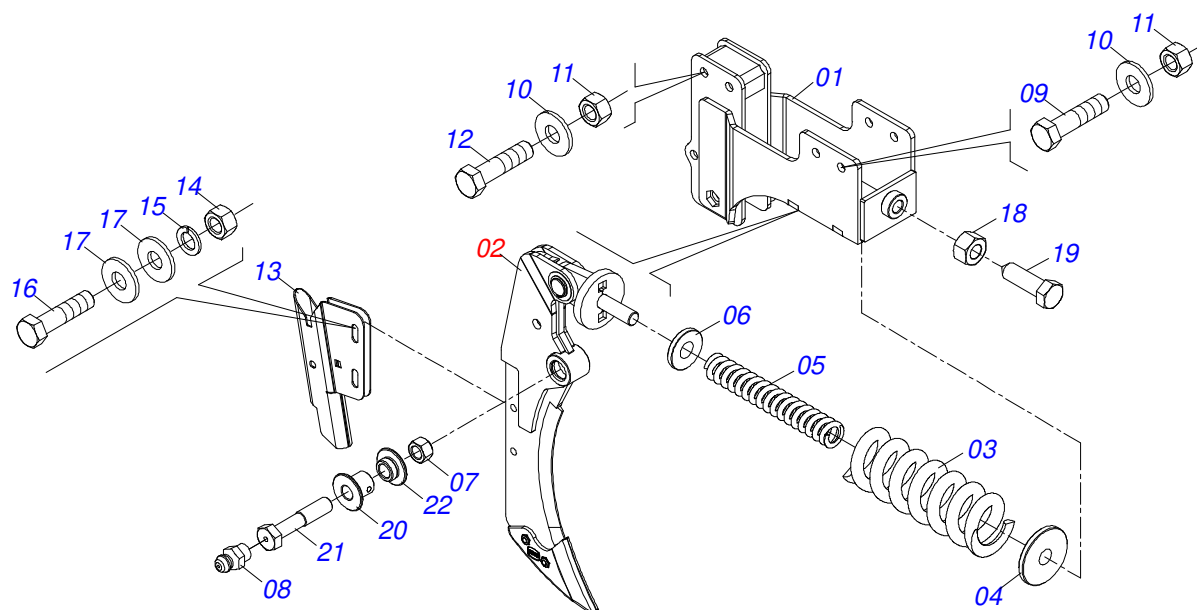


Item	Code	Description	See page	QT
01	0521068567	BOX SPRING		01
02	0521053951	STEM	136	01
03	0503034106	80 X 230 X 16,50 HDA COMPRESSION SPRING		01
04	0581012094	SUPPORT WASHER		01
05	0503033624	35 X 215 X 7,14 COMPRES SPRING		01
06	0571019462	SUPPORT GUIDE PRING		01
07	0503012795	5/8" HEX SELF ADJUSTING NUT		01
08	0503010691	1/4" GREASE FITTING		01
09	0503010384	1/2" X 5" BOLT		02
10	0511017302	FLAT WASHER		04
11	0503011336	1/2" HEX SELF ADJUSTING NUT		04
12	0503017874	BOLT 1/2 UNC		02
13	0571018541	BODY SOCKET FERTILIZER		01
14	0503010026	3/8" NUT		02
15	0503010025	3/8" SPRING WASHER		02
16	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
17	0501010984	FLAT WASHER		04
18	0503010417	7/8" NUT		01
19	0503017058	HEX 7/8 UNC X 3 CSRT PC G.5 ZN		01
20	0581012084	ARTICULATED GLOVE		01
21	0581012082	SCREW		01
22	0581012081	GLOVE		01

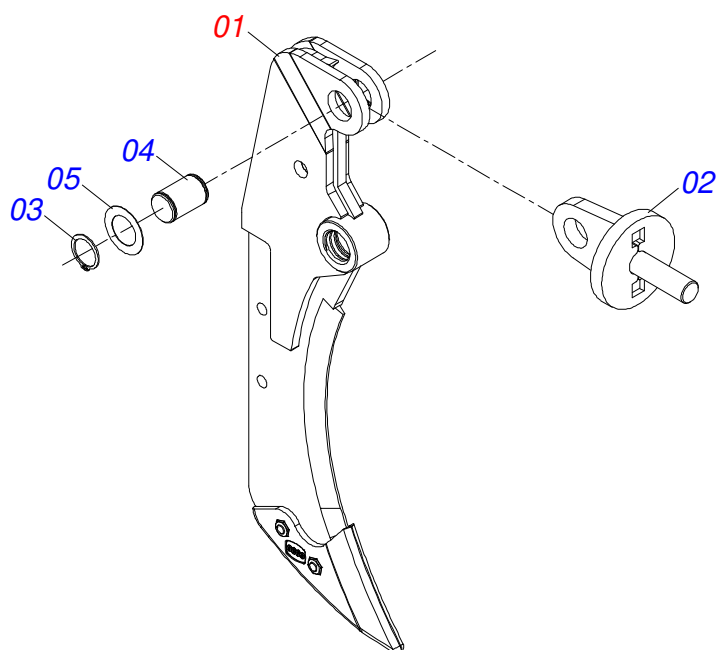


Item	Code	Description	See page	QT
01	0521053932	ROD WITH BEAK 0869	137	01
02	0521067065	FLANGE WASHER SPRING		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0581012092	AXLE FIXER		01
05	0521015818	FLAT WASHER		02

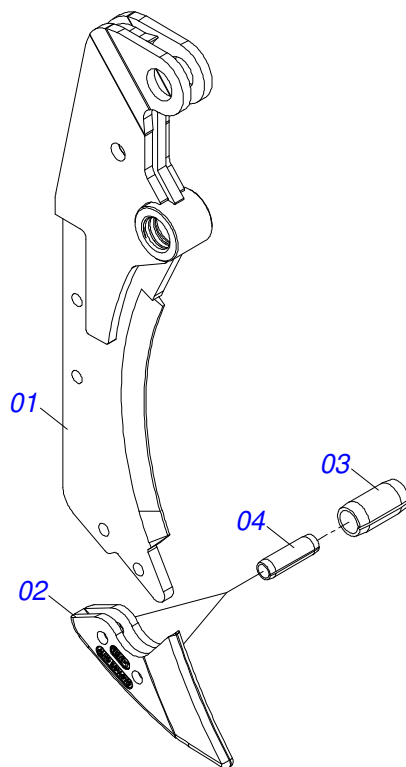

Item	Code	Description	See page	QT
01	0521067523	STEM WITHOUT BEAK DISARM		01
02	0502040901	FIXED ROD NOZZLE		01
03	0503016853	SPRING PIN		02
04	0503011402	0.2" X 0.8" SPRING PIN		02

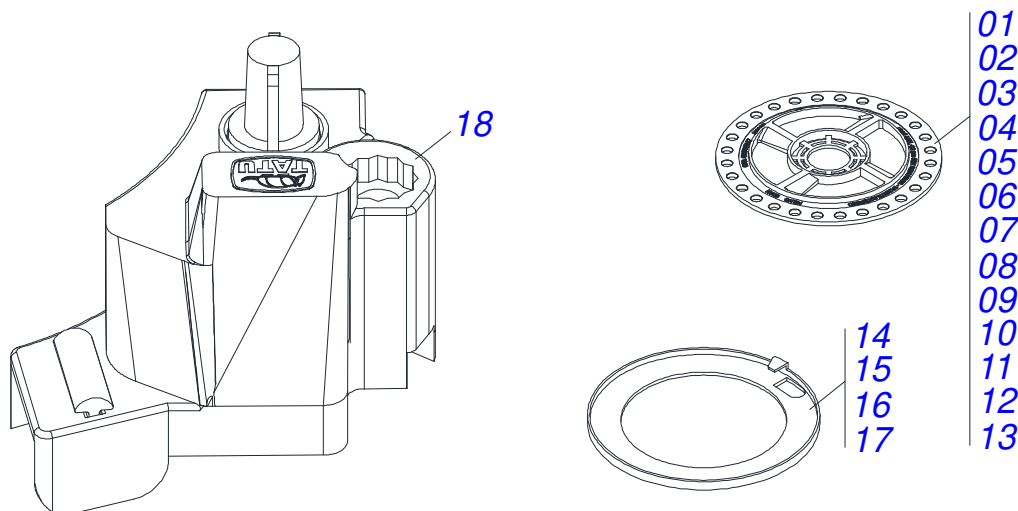


Item	Code	Description	See page	QT
01	0513010117	SOCIDISCO CORN DISC 28 HOLES 9,0 AMC9R-002130	01	01
02	0513010118	SOCIDISCO CORN DISC 28 HOLES 9,5 VLD9.5R-002115	01	01
03	0513010119	SOCIDISCO CORN DISC 28 HOLES 10 SAL10R-002619	01	01
04	0513010120	SOCIDISCO CORN DISC 28 HOLES 10,5 RSP10.5R-002133	01	01
05	0513010121	SOCIDISCO CORN DISC 28 HOLES 11 LRA11R-002134	01	01
06	0513010122	SOCIDISCO CORN DISC 28 HOLES 11,5 MAG11.5R-002620	01	01
07	0513010123	SOCIDISCO CORN DISC 28 HOLES 12 VDA12R-002621	01	01
08	0513010124	SOCIDISCO CORN DISC 28 HOLES 12,5 AMP12.5R-002131	01	01
09	0513010125	SOCIDISCO CORN DISC 28 HOLES 13 VMV13R-002132	01	01
10	0513010126	SOCIDISCO CORN DISC 28 HOLES 13,5 RXR13.5R-002136	01	01
11	0513010187	SOCIDISCO CORN DISC 28 HOLES 14,8 X 10 VM4-002581	01	01
12	0513010188	SOCIDISCO CORN DISC 28 HOLES 11 X 8 BR8.1-002589	01	01
13	0513010189	SOCIDISCO CORN DISC 28 HOLES 12,5 X 8,5 AZ8.2-002587	01	01
14	0513010164	SOCIDISCO FLAT RING FOR CORN AMFOSLISO-002127	01	01
15	0513010159	SOCIDISCO RING FOR CORN 0,8MM LRFOSSR08-002120	01	01
16	0513010160	SOCIDISCO RING FOR CORN 1,4MM VMFOSR1.4-002245	01	01
17	0513010163	SOCIDISCO RING FOR CORN 2,0MM VDFOSR2-002116	01	01
18	0503063413	CORN SEED DISTRIBUTOR BOX 4Z - 001798	01	01

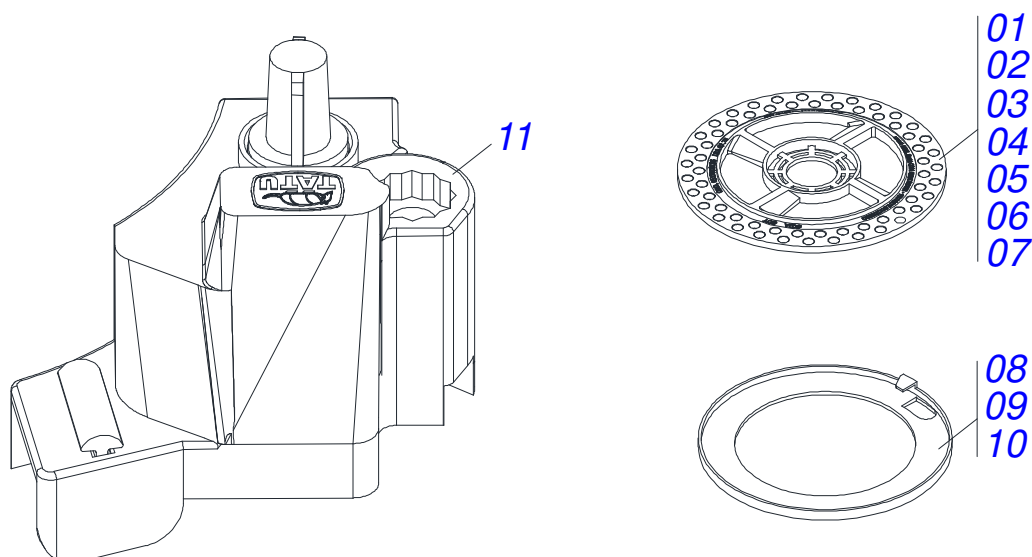


Item	Code	Description	See page	QT
01	0513010136	SOCIDISCO SOY DISC 62 HOLES 7,5 LRA62.75-002357		01
02	0513010137	SOCIDISCO SOY DISC 62 HOLES 8,0 RSP62.80-002358		01
03	0513010138	SOCIDISCO SOY DISC 62 HOLES 8,5 RXR62.85-002359		01
04	0513010139	SOCIDISCO SOY DISC 62 HOLES 9,0 AZM62.90-002360		01
05	0513010141	SOCIDISCO SOY DISC 90 HOLES 8,0 RSP90.80-002287		01
06	0513010142	SOCIDISCO SOY DISC 90 HOLES 8,5 RXR90.85-002317		01
07	0513010143	SOCIDISCO SOY DISC 90 HOLES 9,0 AZM90.90-002288		01
08	0513010158	SOCIDISCO FLAT RING FOR SOY AZMSOJALISO-002243		01
09	0513010161	SOCIDISCO RING FOR SOY 0,8MM AZCSOJAR08-002461		01
10	0513010162	SOCIDISCO RING FOR SOY 1,5MM RSPSOJASR1,5-002244		01
11	0503063412	4Z SOY/BEAN SEED DISTRIBUTOR BOX - 001804		01

SCARING ROD


0521053946

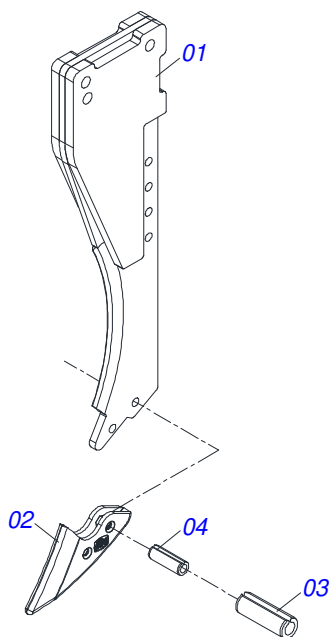

Item	Code	Description	See page	QT
01	0521065998	SCARIFIER SPINDLE		01
02	0502070085	FIXED ROD BEARING		01
03	0513010288	ELASTIC PIN 701211 10 X 24		02
04	0513010289	ELASTIC PIN 701211 10 X 24		02

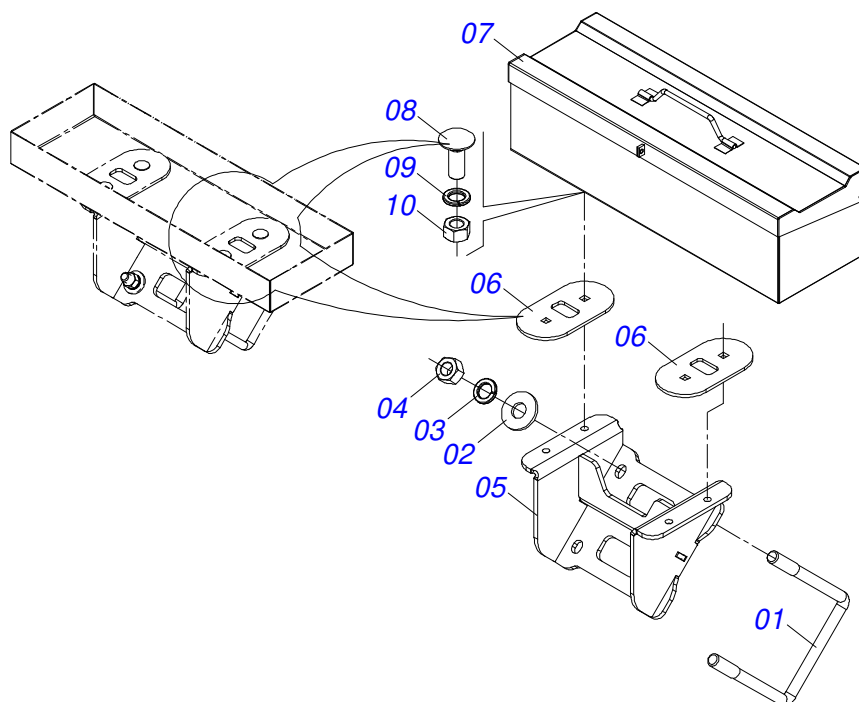


Item	Code	Description	See page	QT
01	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
02	0511017302	FLAT WASHER		04
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2" NUT		04
05	0521069295	SUPPORT TOOL CHEST		01
06	0581017000	PLATE INTERMEDIARY		02
07	0503034772	BOX		01
08	0501011643	3/8 X 1"BOLT		04
09	0503010025	3/8" SPRING WASHER		04
10	0503010026	3/8" NUT		04

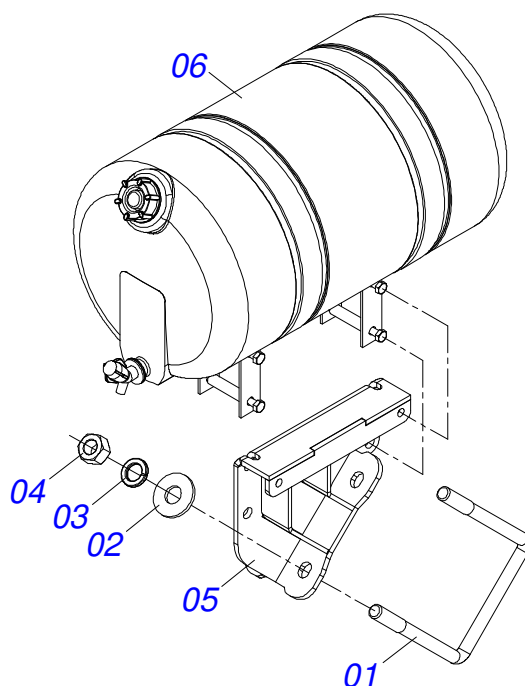

Item	Code	Description	See page	QT
01	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
02	0511017302	FLAT WASHER		04
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2" NUT		04
05	0521069405	WATER TANK SUPPORT		01
06	0503014820	BLACK WATER RESERVOIR		01

ASSY HEX AXLE


0909095145

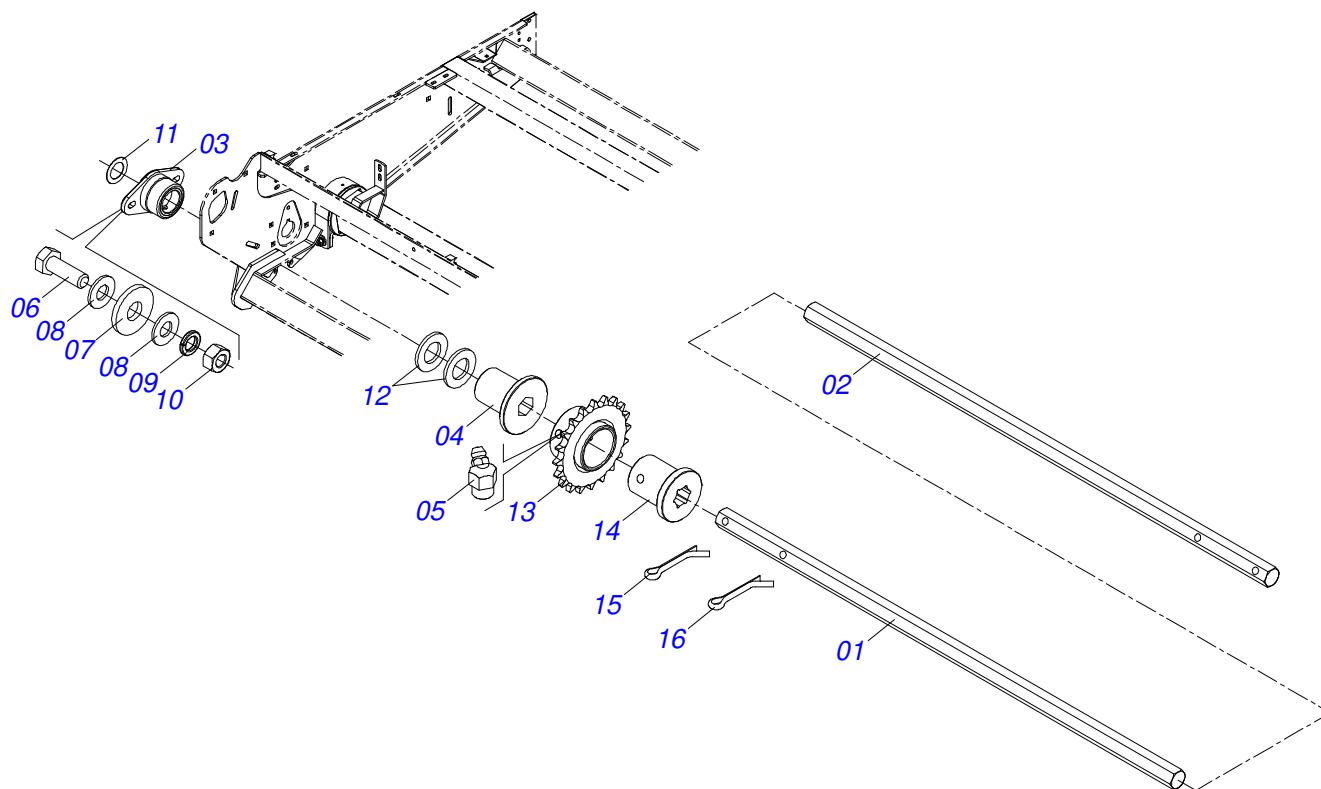


Item	Code	Description	See page	3245	4045	4845
01	0521013432	5/8" X 59" AXLE HEX		01	00	00
01.	0521013429	AXLE HEX 5/8 X 2180		00	01	00
01..	0521013430	HEX AXLE 5/8 X 2580		00	00	01
02	0521013428	HEX AXLE		01	00	00
02.	0521013433	5/8" X 75" AXLE HEX		00	01	00
02..	0521013434	HEX AXLE 5/8 X 2300		00	00	01
03	0501110037	AGRICULTURAL BEARING HEX SHAFT 5/8"		02	02	02
04	0502040723	5/8 HEX AXLE BEARING SLEEVE 5/8		02	02	02
05	0503010003	1845 GREASE FITTING		02	02	02
06	0503010365	NUT		04	04	04
07	0501010984	FLAT WASHER		04	04	04
08	0501010694	FLAT WASHER		08	08	08
09	0503010179	LOCK WASHER		04	04	04
10	0503010337	5/16" NUT		04	04	04
11	0511815098	FLAT WASHER		02	02	02
12	0511017305	FLAT WASHER		04	04	04
13	0511065562	20Z GEAR		02	02	02
14	0502011299	BUSHING GEAR		02	02	02
15	0503010571	1/4" X 1.1/2 COTTERPIN		02	02	02
16	0503010010	1/4" X 2.1/2" COTTERPIN		02	02	02

HEXAGONAL SHAFT ASSEMBLY

0909099016

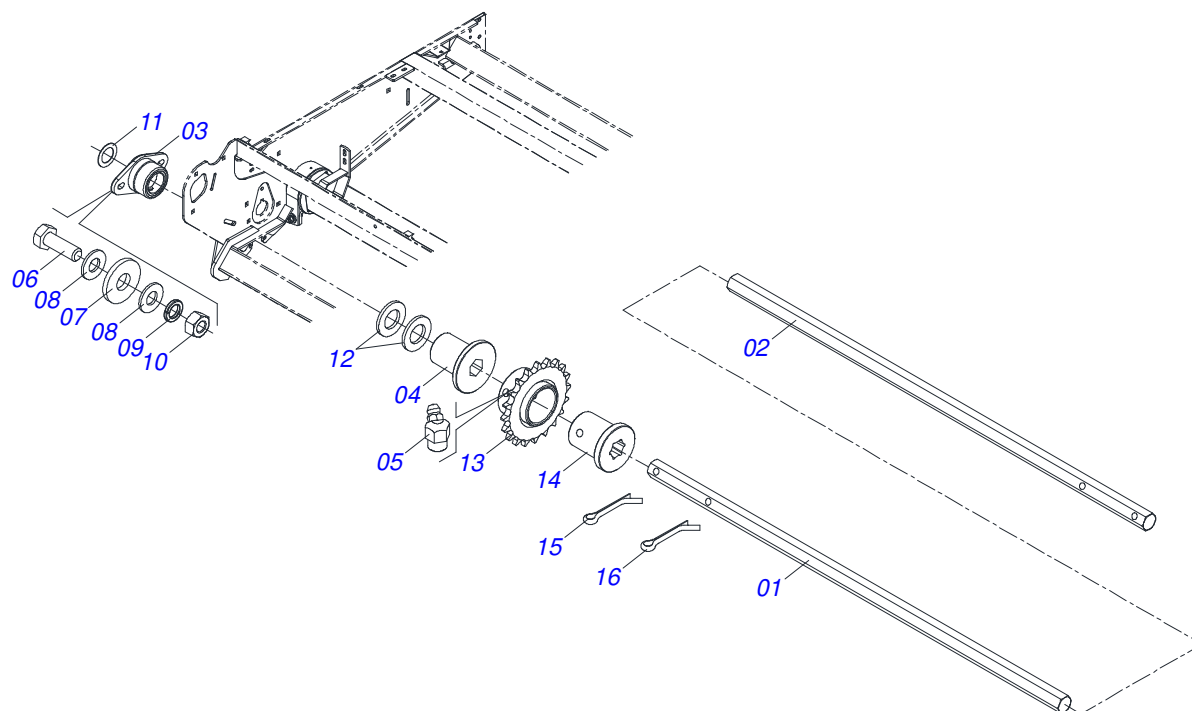

Item	Code	Description	See page	QT
01	0571013736	HEX AXLE		01
02	0521013431	5/8" X 3030" AXLE HEX		01
03	0501110037	AGRICULTURAL BEARING HEX SHAFT 5/8"		02
04	0502040723	5/8 HEX AXLE BEARING SLEEVE 5/8		02
05	0503010003	1845 GREASE FITTING		02
06	0503010365	NUT		04
07	0501010984	FLAT WASHER		04
08	0501010694	FLAT WASHER		08
09	0503010179	LOCK WASHER		04
10	0503010337	5/16" NUT		04
11	0511815098	FLAT WASHER		02
12	0511017305	FLAT WASHER		04
13	0511065562	20Z GEAR		02
14	0502011299	BUSHING GEAR		02
15	0503010571	1/4" X 1.1/2 COTTERPIN		02
16	0503010010	1/4" X 2.1/2" COTTERPIN		02

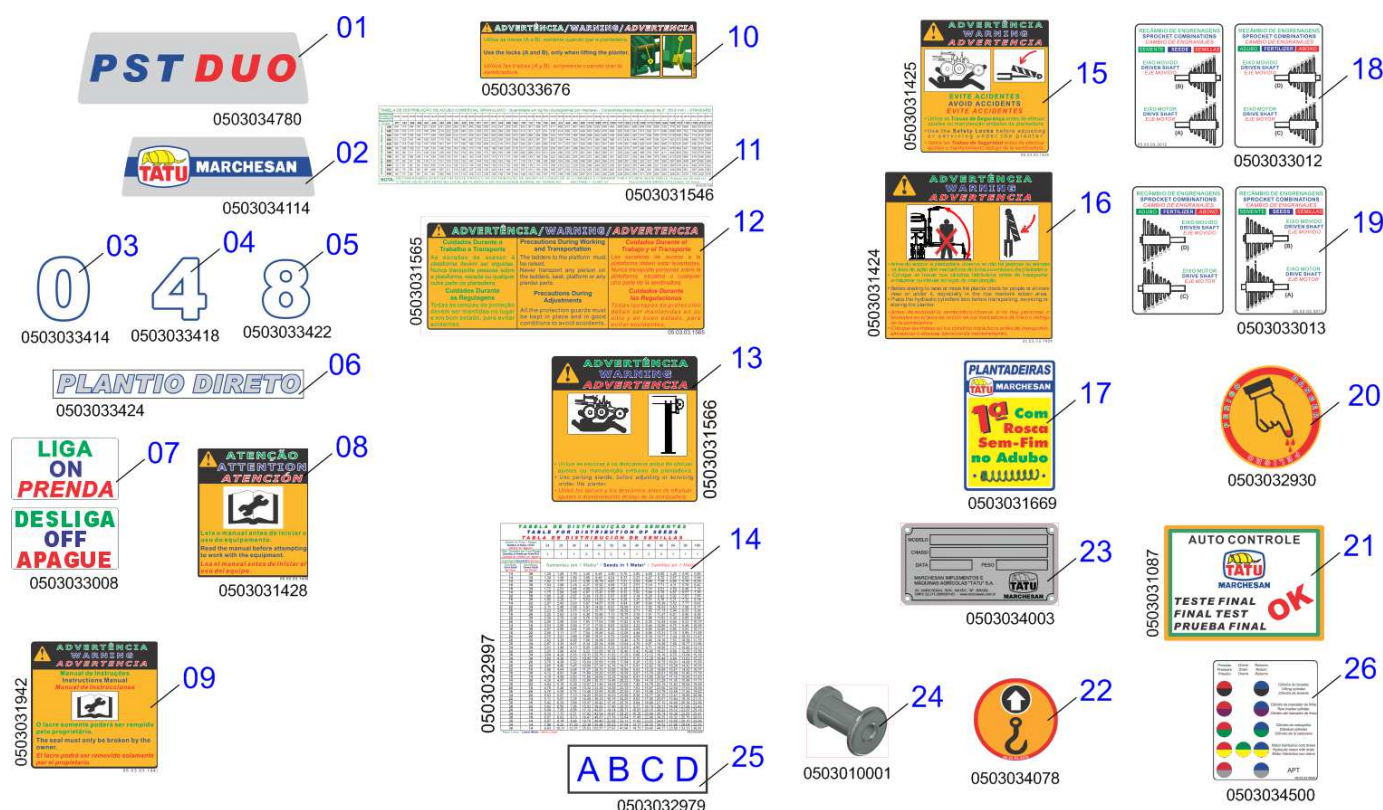

Item	Code	Description	See page	QT
01	0503034780	ADHESIVE LABEL PST DUO (04/06 MOUTHS)		02
02	0503034114	ADHESIVE LABEL LOGO TATU BOX 190 X 530		02
03	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING		02
04	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
05	0503033422	ADHESIVE LABEL		04
06	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
07	0503033008	ADHESIVE LABEL		02
08	0503031428	READ MANUAL DECAL		01
09	0503031942	ADHESIVE LABEL		01
10	0503033676	WARNING LABEL ADHESIVE SEAL LOCK AXIS		01
11	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
12	0503031565	ADHESIVE LABEL CARE		02
13	0503031566	ADHESIVE LABEL		02
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
15	0503031425	ADHESIVE LABEL ATTENTION		02
16	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
17	0503031669	ADHESIVE LABEL		01
18	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
19	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
20	0503032930	ADHESIVE LABEL DANGER		06
21	0503031087	ADHESIVE LABEL		01
22	0503034078	LIFTING POINTS DECAL		03
23	0503034003	SERIAL NUMBER TAG 61 X 118		01
24	0503010001	3.2 X 5.5 RIVET		04
25	0503032979	ADHESIVE LABEL LETTERS A B C D		02
26	0503034500	ADHESIVE LABEL		01



Item	Code	Description	See page	QT
001	0503034781	LABEL ADHESIVE PST DUO MINOR (03 MOUTHS)		02
002	0503034780	ADHESIVE LABEL PST DUO (04/06 MOUTHS)		02
003	0503034782	LABEL ADHESIVE LOGO SMALLER TATU (03 MOUTHS)		02
004	0503034114	ADHESIVE LABEL LOGO TATU BOX 190 X 530		02
005	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING		02
006	0503033417	ADHESIVE LABEL		02
007	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
008	0503033420	ADHESIVE LABEL 6 NUMBER FOR PLANTING		02
009	0503033424	DIRECT PLANTIO ADHESIVE LABEL		02
010	0503033008	ADHESIVE LABEL		02
011	0503031428	READ MANUAL DECAL		01
012	0503031942	ADHESIVE LABEL		01
013	0503033676	WARNING LABEL ADHESIVE SEAL LOCK AXIS		01
014	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
015	0503031565	ADHESIVE LABEL CARE		02
016	0503031566	ADHESIVE LABEL		02
017	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
018	0503031425	ADHESIVE LABEL ATTENTION		02
019	0503031424	ADHESIVE LABEL ATTENTION MARCADOR LÍNEA HIDRAULICO		02
020	0503031669	ADHESIVE LABEL		01
021	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
022	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
023	0503032930	ADHESIVE LABEL DANGER		08
024	0503031087	ADHESIVE LABEL		01
025	0503034078	LIFTING POINTS DECAL		03
026	0503034003	SERIAL NUMBER TAG 61 X 118		01
027	0503010001	3.2 X 5.5 RIVET		04
028	0503032979	ADHESIVE LABEL LETTERS A B C D		02



PST DUO - FRAME 4880/6350


(FROM 04/2022)

Page 146

SET LABEL ADHESIVE

0521058708

Item	Code	Description	See page	QT
029	0503034500	ADHESIVE LABEL		01

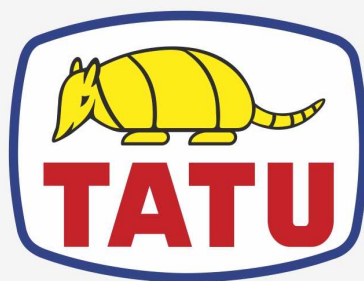

MARCHESAN

Technical Publications | Elaboration and Revision

LEONARDO JOSÉ DA SILVA SOUZA

www.marchesan.com.br

