

ROW CROP PLANTERS

**PST PLUS FLEX TITANIUM - FRAME
3245/3495/4045 - CSU (FROM 08/2022)**

Code: 0501093371
Series: S-0116
Revision: 00
Date Revision: AGOSTO/2023

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111380392	PST PLUS FLEX 3245/6E500 ESPECIAL S-0116
0111380174	PST PLUS FLEX 3245/7E450 D/HDA CSU TIT S-0116
0111380334	PST PLUS FLEX 3495/7E500 CI MH DC20 CSU TIT S-0116
0111380337	PST PLUS FLEX 3495/7E500 ESPECIAL S-0116
0111380378	PST PLUS FLEX 3495/7E500 ESPECIAL S-0116
0111380396	PST PLUS FLEX 3495/7E500 ESPECIAL S-0116
0111380529	PST PLUS FLEX 3495/7E500 ESPECIAL S-0116
0111380340	PST PLUS FLEX 3495/7E500 ESPECIAL S-0116
0111380520	PST PLUS FLEX 4045/9E450 ESPECIAL S-0116

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX

0909096467	ASSY FRAME	1
0511057196	FRAME WITH WHEEL AXLE - 3245	2
0511057371	FRAME WITH WHEEL AXLE - 3495	3
0511057303	FRAME WITH WHEEL AXLE - 4045	4
0511058655	CYLINDER SET - 3245/3495/4045/4395	5
0521045510	HYDRAULIC CYLINDER	6
0511058653	WHEELS WITH TRACTION SPRING	7
0511058654	WHEEL SUPPORT	8
0501058241	WHEEL SUPPORT CHAIN TENSIONER	9
0511052770	WHEEL WITH TIRE	10
0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	11
0501058240	WHEEL FASTENER WITH TENSIONER	12
0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	13
0501058239	WHEEL CHAIN TENSIONER BEARING	14
0501058244	WHEEL FIXED CHAIN TENSIONER	15
0501058242	WHEEL MOBILE CHAIN TENSIONER	16
0511058988	3245 - TRANSMISSION ASSY	17
0501052560	MOTOR AXLE SIGNAL	18
0511051434	TRANSMISSION ACTUATOR	19
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	20
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	21
0511058383	GEARBOX RIGHT/LEFT ASSY	22
0511058381	RIGHT GEAR HOUSING	23
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	24
0501048790	AXLE WITH RING	25
0511057258	TENSIONER WITH GEAR	26
0511054363	CHAIN TENSIONER	27
0511058382	LEFT GEAR HOUSING	28
0501056443	GEAR HOUSING BEARING	29
0501056444	SUPPORT WITH ROLLER BEARING	30
0501053788	3/4" SQUARE AXLE FASTENER	31
0501056271	GEARBOX CLOSED BEARING	32
0511059238	CHAIN TENSIONER	33
0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	34
0511050652	CHAIN TENSIONER	35
0501053653	BEARING WITH GEAR 20Z 3/4 HEX SHAFT	36
0501053654	3/4 SEED TRANSMISSION DOUBLE BEARING	37
0511059129	TRANSMISSION ASSEMBLY - 3245	38
0511059590	TRANSMISSION ASSEMBLY - 3495	39
0541050034	TRANSMISSION 4045	40
0511057265	TRANSMISSION CHAIN TENSIONER	41
0521055335	RIGHT GEAR HOUSING SET	42
0521055337	LEFT GEAR HOUSING SET	43
0531055591	3245 ALPHA II FERTILIZER HOPPER SET	44
0531055584	HOPPER SUPPORT WITH FERTILIZER METERING - 3245	45
0531055922	3495 ALPHA II FERTILIZER HOPPER SET	46
0531055386	HOPPER SUPPORT WITH FERTILIZER METERING - 3495	47
0531059677	4045 ALPHA II FERTILIZER HOPPER SET	48
0531059676	RIGHT HOPPER SUPPORT WITH FERTILIZER METERING - 4045	49
0531059675	LEFT HOPPER SUPPORT WITH FERTILIZER METERING - 4045	50
0503062362	FERTILIZER HOPPER	51
0503062391	FERTILIZER HOPPER	52
0531055319	ALPHA II FERTILIZER METERING	53
0531055863	ASSY TRANSMISSION HUB	54

INDEX

0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	55
0531059139	ASSY COLLECTOR	56
0531055273	ALPHA FERTILIZER METERING CLAMP	57
0531057911	22Z GEAR SIDE BEARING ASSEMBLY	58
0531057901	GEAR	59
0531057913	DOUBLE BEARING ASSEMBLY	60
0531057912	DOUBLE SIDE BEARING	61
0511057266	HYDRAULIC SYSTEM ASSEMBLY - 3245/3495/4045/4395	62
0511057207	SEMI-ASSEMBLED HYDRAULIC MARKER - 3245	63
0511057368	SEMI-ASSEMBLED HYDRAULIC MARKER - 3495	64
0511057311	SEMI-ASSEMBLED HYDRAULIC MARKER - 4045	65
0511058449	HYDRAULIC CYLINDER	66
0501054649	HBM SEQUENTIAL VALVE	67
0501053834	MALE QUICK COUPLER	68
0511058119	VALVE SUPPORT ASSEMBLY	69
0511057205	PLATFORM ASSEMBLY - 3245	70
0511057370	PLATFORM ASSEMBLY - 3495	71
0511057307	PLATFORM ASSEMBLY - 4045	72
0511056536	LADDER ASSEMBLY	73
0511054971	JACK ASSEMBLY	74
0511057229	DRAWBAR ASSEMBLY - 3245	75
0511057333	DRAWBAR ASSEMBLY - 3495/4045/4395/4845/5345/5745	76
0531057452	DECAL SET - 3245	77
0531057423	DECAL SET - 3245	78
0531057453	DECAL SET - 3495	79
0531057454	DECAL SET - 4045	80
0511057845	MANUAL CANISTER	81
0511059322	LIFTING SUPPORT ASSEMBLY	82
0511057206	HANDRAIL ASSEMBLY - 3245	83
0511057369	HANDRAIL ASSEMBLY - 3495	84
0511057306	HANDRAIL ASSEMBLY - 4045	85
0511059383	HANDRAIL INTERNAL FIXER	86
0531058328	CSU C3 SET - 07 CONDUCTORS	87
0531058340	CSU C3 SET - 07 CONDUCTORS	88
0531058316	CSU C3 SET - 09 CONDUCTORS	89
0531058326	CSU C3 SET - 02 HOPPERS 05 NOZZLES - 07 CONDUCTORS	90
0531058315	CSU C3 SET - 02 HOPPERS 05 NOZZLES - 09 CONDUCTORS	91
0531058338	CSU C3 SET - 02 HOPPERS 05 NOZZLES - 07 CONDUCTORS	92
0531057950	3" X 175 SEED NOZZLE WITH FIXING	93
0531054471	CAP WITH FIXING	94
0511059323	SUPPORT PLATFORM TRANSPORT	95
0909099275	ASSY HEX AXLE - 3245/3495	96
0521055338	ROW SEED BEARING	97
0501050633	ROW MARKER DISC ASSEMBLY	98
0511053904	ROW MARKER DISC	99
0511057270	DRAWBAR EXTENDER	100
0511054601	HITCH ARTICULATED TRACTOR	101
0511053179	TRACTOR COUPLING SHAFT	102
0511056736	HOSE SUPPORT	103
0531059616	KIT WITH ALPHA COMPONENTS - 06 ROWS	104
0531059617	KIT WITH ALPHA COMPONENTS - 07 ROWS	105
0531059619	KIT WITH ALPHA COMPONENTS - 09 ROWS	106
0521053443	MONITORING ASSEMBLY PLANTING SEEDS 07L PM400	107
0531053489	MONITORING ASSEMBLY PLANTING SEEDS 8L PM 400	108
0909099276	ASSY SEED/FERTILIZER ROW	109



MARCHESAN

INDEX

0511057277	FRONT SHORT SEED ROW WITH RIGHT TRANSMISSION	110
0521056500	FRONT SHORT SEED ROW WITH RIGHT TRANSMISSION WITHOUT LUBRIFICATION	111
0511057278	FRONT LONG SEED ROW WITH RIGHT TRANSMISSION	112
0521056501	FRONT LONG SEED ROW WITH RIGHT TRANSMISSION WITHOUT LUBRIFICATION	113
0511058766	BEARING	114
0511057159	TRANSMISSION HOPPER SEED ROW	115
0511057269	CHAIN TENSIONER	116
0511059872	BEARING	117
0511058512	PROTECTION LID	118
0511056621	RIGHT REAR SEED ROW	119
0511051888	5/8 ASSY TITANIUM SYSTEM FIXING BASE	120
0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	121
0511052301	SUPPORT DDD 15 RIGHT	122
0511053173	RIGHT LOW HUB WITH 15 DISC	123
0511053172	LEFT LOW HUB WITH 15 DISC	124
0511056622	LEFT REAR SEED ROW	125
0511056586	15 X 15 SEED DDD LEFT	126
0531055312	TITANIUM SINGLE SEED SYSTEM	127
0531054583	SEMI-ASSEMBLED SINGLE SEED HOPPER	128
0503063760	SINGLE SEED HOPPER ASSEMBLED WITH LOCK LID	129
0511052058	SEED SYSTEM TITANIUM	130
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	131
0511058650	SEMI-MOUNTED DEPTH CONTROL	132
0511058652	LEFT DEPTH WHEEL ARM WITH HUB	133
0511058651	RIGHT DEPTH WHEEL ARM WITH HUB	134
0501052627	ASSY DEPTH WHEEL HUB	135
0501052297	DEPTH WHEELS REGULATOR ASSY	136
0501052538	DEPTH BAND WITH ARMS	137
0511054333	COMPACT WHEEL RIGHT WITH BEARING	138
0501052908	COMPACTOR WHEEL WITH BEARING	139
0511054334	COMPACT WHEEL LEFT WITH BEARING	140
0521053063	SPACRR DEPTH SYSTEM / COMPACTION CLOSED	141
0521053059	SYSTEM WHEELS CONTROL COMPACTOR ASSY	142
0501059228	ADJUSTMENT LEVER	143
0521053060	DEPTH WHEEL RIGHT SPACRR CLOSED	144
0521053062	WHEEL RAYED ASSY (SPA) CLOSED	145
0511055626	SPREADED DEPTH WHEEL HUB	146
0521053061	SPACRR LEFT DEPTH WHEEL CLOSED	147
0521052825	SUPPORT WHEELS COMPACTORS	148
0531054532	WHEEL SYSTEM DEPTH / COMPACTOR	149
0501056769	DEPTH WHEELS REGULATOR ASSY	150
0521051423	COMPACTOR SUPPORT	151
0511050077	WHEEL STRIPED	152
0511052287	DEPTH WHEEL HUB ASSY	153
0521054984	DEPTH/COMPACTOR SYSTEM - SPT	154
0521054986	DEPTH CONTROL SEMI MOUNTED WITHOUT LUBRICATION	155
0521054987	LEFT ARM WITH HUB WITHOUT LUBRIFICATION	156
0521055016	CUBE DEPTH CONTROL WITHOUT LUBRICATION	157
0521054988	RIGHT ARM WITH HUB WITHOUT LUBRIFICATION	158
0521055033	SEMI-ASSEMBLED COMPACTOR BODY	159
0521054990	LEFT COMPACTOR WHEEL	160
0521055017	RIGHT COMPACTOR WHEEL	161
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	162




MARCHESAN

INDEX

0511058639	SHORT FERTILIZER ROW WITH DDD/DC20	163
0511058635	SHORT FERTILIZER ROW DDD 18" BLADE DISC	164
0541050898	SHORT FERTILIZER ROW WITH 18" DISC BLADE	165
0511058633	FIXED SHORT SUPPORT FERTILIZER ROW	166
0511057272	LH SHORT ARM ROW FERTILIZER	167
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	168
0511058630	20" DISC BLADE	169
0541050897	CUTTING DISC 18 "	170
0511058648	HUB WITH 20" DISC BLADE	171
0521053698	BOX WITH CUTTING DISC 18"	172
0521053697	DISC BLADE HUB	173
0511056909	DISC BLADE HUB WITHOUT DISC	174
0511058640	LONG FERTILIZER ROW WITH DDD/DC20	175
0511058636	LONG FERTILIZER ROW DDD 18" BLADE DISC	176
0541050899	LONG FERTILIZER ROW WITH 18" DISC BLADE	177
0511058629	18" COULTER BLADE ASSY FOR SHORT ROW	178
0511056910	HUB WITH 18" DISC BLADE	179
0511058634	SUPPORT LONG	180
0511057271	RH LONG ARM ROW FERTILIZER	181
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	182
0521050525	FIXER FERTILIZER CONDUCTOR	183
0503062066	DISC SET WITH CORN RING	184
0503062067	DISC SET / RING SOY 90F TITANIUM	185
0511052024	FAST CLOSING SET	186
0501050120	LARGER WALKING BEAM ASSY	187
0521050560	ASSY HOSE SUPPORT 3"	188
0521057957	FIXED ROD EXTENSION WITH FIXATION	189
0521050339	RIGHT POINT SPINDLE	190
0521050338	AUTOMATIC DISARMING ROD	191
0521050364	ROD WITH BEAK	192
0521053949	SCARIFIER SPINDLE WITH SOCKET RIGHT	193
0521053950	HDA AUTOMATIC DISARM	194
0521053951	STEM	195
0521053932	ROD WITH BEAK 0869	196
0521050340	LEFT POINT SPINDLE	197
0521053948	SCARIFIER SPINDLE WITH SOCKET LEFT	198
0511057984	V-COVERING RUBBER WHEEL - SHORT ROW	199
0511057985	V-COVERING RUBBER WHEEL - LONG ROW	200

ASSY FRAME

0909096467

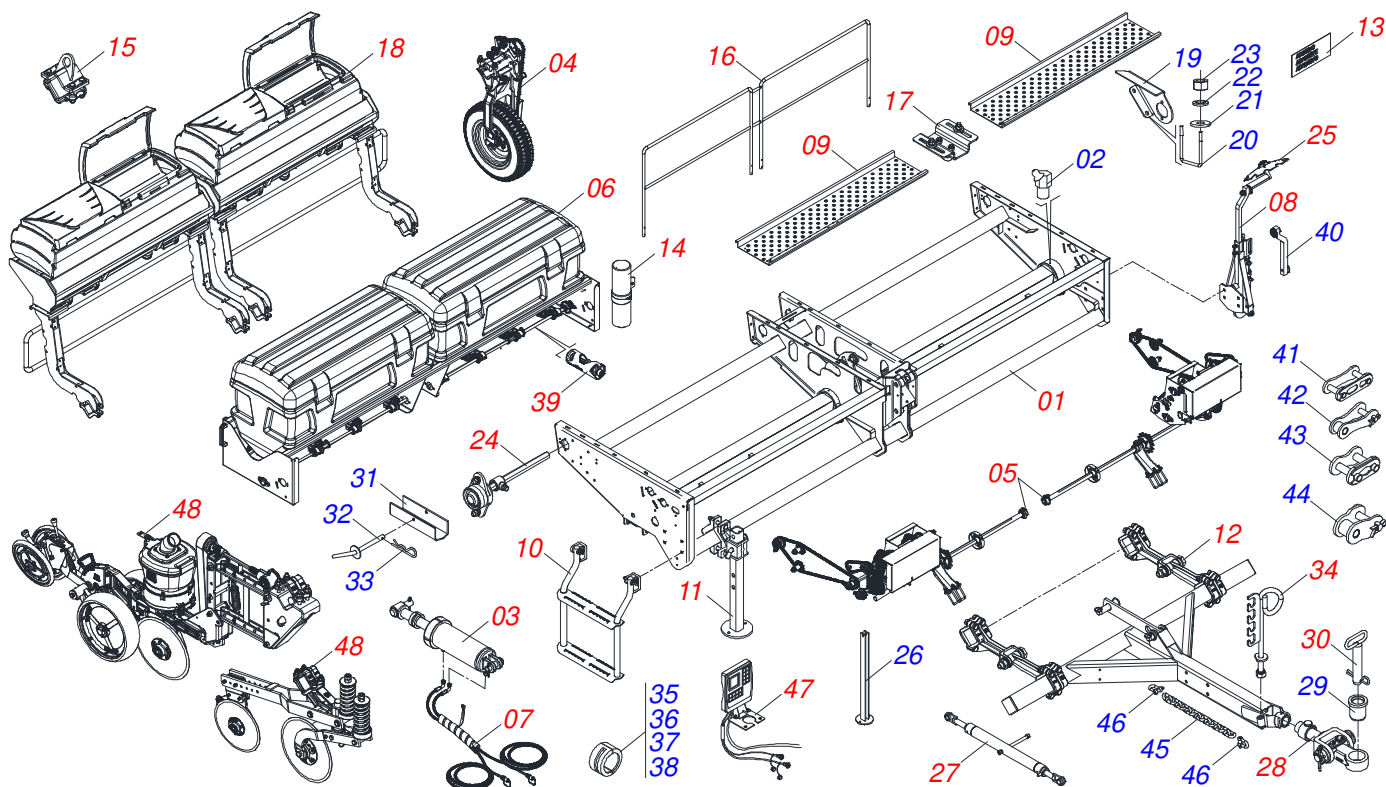


Item	Code	Description	See page	3245	3495	4045
01	0511057196	FRAME WITH WHEEL AXLE - 3245	2	01	00	00
01.	0511057371	FRAME WITH WHEEL AXLE - 3495	3	00	01	00
01..	0511057303	FRAME WITH WHEEL AXLE - 4045	4	00	00	01
02	0503010003	1845 GREASE FITTING		04	04	04
03	0511058655	CYLINDER SET - 3245/3495/4045/4395	5	01	01	01
04	0511058653	WHEELS WITH TRACTION SPRING	7	04	04	04
05	0511058988	3245 - TRANSMISSION ASSY	17	01	00	00
05.	0511059129	TRANSMISSION ASSEMBLY - 3245	38	01	00	00
05..	0511059590	TRANSMISSION ASSEMBLY - 3495	39	00	01	00
05...	0541050034	TRANSMISSION 4045	40	00	00	01
06	0531055591	3245 ALPHA II FERTILIZER HOPPER SET	44	01	00	00
06.	0531055922	3495 ALPHA II FERTILIZER HOPPER SET	46	00	01	00
06..	0531059677	4045 ALPHA II FERTILIZER HOPPER SET	48	00	00	01
07	0511057266	HYDRAULIC SYSTEM ASSEMBLY - 3245/3495/4045/4395	62	01	01	01
08	0511057207	SEMI-ASSEMBLED HYDRAULIC MARKER - 3245	63	01	00	00
08.	0511057368	SEMI-ASSEMBLED HYDRAULIC MARKER - 3495	64	00	01	00
08..	0511057311	SEMI-ASSEMBLED HYDRAULIC MARKER - 4045	65	00	00	01
09	0511057205	PLATFORM ASSEMBLY - 3245	70	01	00	00
09.	0511057370	PLATFORM ASSEMBLY - 3495	71	00	01	00
09..	0511057307	PLATFORM ASSEMBLY - 4045	72	00	00	01
10	0511056536	LADDER ASSEMBLY	73	02	02	02
11	0511054971	JACK ASSEMBLY	74	02	02	02
12	0511057229	DRAWBAR ASSEMBLY - 3245	75	01	00	00
12.	0511057333	DRAWBAR ASSEMBLY - 3495/4045/4395/4845/5345/5745	76	00	01	01
13	0531057452	DECAL SET - 3245	77	01	00	00
13.	0531057423	DECAL SET - 3245	78	01	00	00
13..	0531057453	DECAL SET - 3495	79	00	01	00
13...	0531057454	DECAL SET - 4045	80	00	00	01
14	0511057845	MANUAL CANISTER	81	01	01	01
15	0511059322	LIFTING SUPPORT ASSEMBLY	82	02	02	02


ASSY FRAME

0909096467


Item	Code	Description	See page	3245	3495	4045
16	0511057206	HANDRAIL ASSEMBLY - 3245	83	01	00	00
16.	0511057369	HANDRAIL ASSEMBLY - 3495	84	00	01	00
16..	0511057306	HANDRAIL ASSEMBLY - 4045	85	00	00	01
17	0511059323	SUPPORT PLATFORM TRANSPORT	95	04	04	04
18	0531058328	CSU C3 SET - 07 CONDUCTORS	87	01	01	00
18.	0531058340	CSU C3 SET - 07 CONDUCTORS	88	01	01	00
18..	0531058316	CSU C3 SET - 09 CONDUCTORS	89	00	00	01
19	0571019315	BEARING SUPPORT AXLE HEX/SUPPORT PLATAFORM		02	02	02
20	0521014021	1/2" X 4.5" X 5.4" FASTENER		02	02	02
21	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04	04	04
22	0503010019	1/2" SPRING WASHER		04	04	04
23	0503010060	1/2 UNC G.5 ZN HEX NUT		04	04	04
24	0909099275	ASSY HEX AXLE - 3245/3495	96	01	01	00
24.	0909095964	HEXAGONAL SHAFT ASSEMBLY - 4045		00	00	01
25	0501050633	ROW MARKER DISC ASSEMBLY	98	00	02	02
26	0501065677	STRUT		02	02	02
27	0511057270	DRAWBAR EXTENDER	100	01	01	01
28	0511054601	HITCH ARTICULATED TRACTOR	101	01	01	01
29	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01	01	01
30	0511053179	TRACTOR COUPLING SHAFT	102	01	01	01
31	0521013022	TRANSPORT LOCK		01	01	01
32	0501068994	8,30 X 78 LOCK PIN		01	01	01
33	0503030168	HITCH PIN CLIP		01	01	01
34	0511056736	HOSE SUPPORT	103	01	01	01
35	0501047895	25 ROD STOP		01	01	01
36	0501047885	30 ROD STOP		01	01	01
37	0501047886	35 ROD STOP		01	01	01
38	0501047887	40 ROD STOP		01	01	01
39	0531059616	KIT WITH ALPHA COMPONENTS - 06 ROWS	104	01	00	01
39.	0531059617	KIT WITH ALPHA COMPONENTS - 07 ROWS	105	00	01	01
39..	0531059619	KIT WITH ALPHA COMPONENTS - 09 ROWS	106	00	00	01
40	0511066652	400 TURNBUCKLE		00	02	00
41	0503010780	N-2050 AMENDMENT		02	02	02
42	0503010951	REDUCTION		04	04	04
43	0503011750	AMENDMENT WITH LOCK		06	06	06
44	0503011751	REDUCTION		06	06	06
45	0503014120	CHAIN		01	01	01
46	0503014321	CABLE STEEL SHACKLE		02	02	02
47	0521053443	MONITORING ASSEMBLY PLANTING SEEDS 07L PM400	107	00	01	00
47.	0531053489	MONITORING ASSEMBLY PLANTING SEEDS 8L PM 400	108	00	01	00
48	0909099276	ASSY SEED/FERTILIZER ROW	109	07	07	09

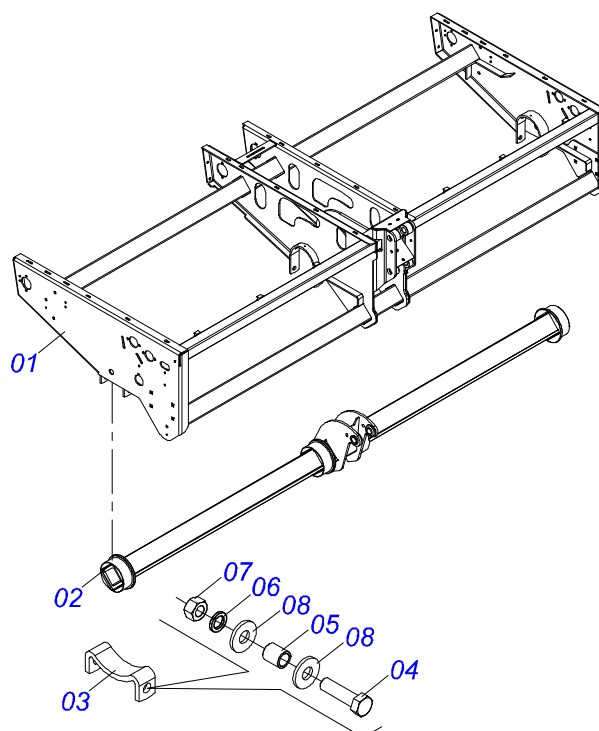


Item	Code	Description	See page	QT
01	0521065917	FRAME - 3245		01
02	0521065926	CARRYING-WHEELS PIVOT SHAFT 3245		01
03	0521013199	LOWER BEARING SEMI		04
04	0503810899	BOLT		08
05	0531013922	0.6" X 0.8" X 1" SLEEVE		08
06	0503011445	SPRING WASHER		08
07	0503810013	NUT 5/8 NC		08
08	0501812140	FLAT WASHER		16

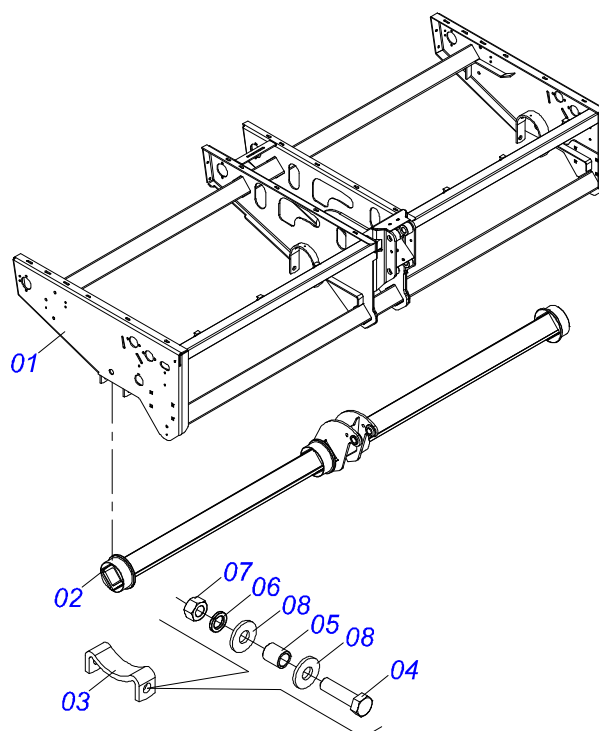


Item	Code	Description	See page	QT
01	0521065918	FRAME - 3495		01
02	0521065927	CARRYING-WHEELS PIVOT SHAFT 3495		01
03	0521013199	LOWER BEARING SEMI		04
04	0503810899	BOLT		08
05	0531013922	0.6" X 0.8" X 1" SLEEVE		08
06	0503011445	SPRING WASHER		08
07	0503810013	NUT 5/8 NC		08
08	0501812140	FLAT WASHER		16

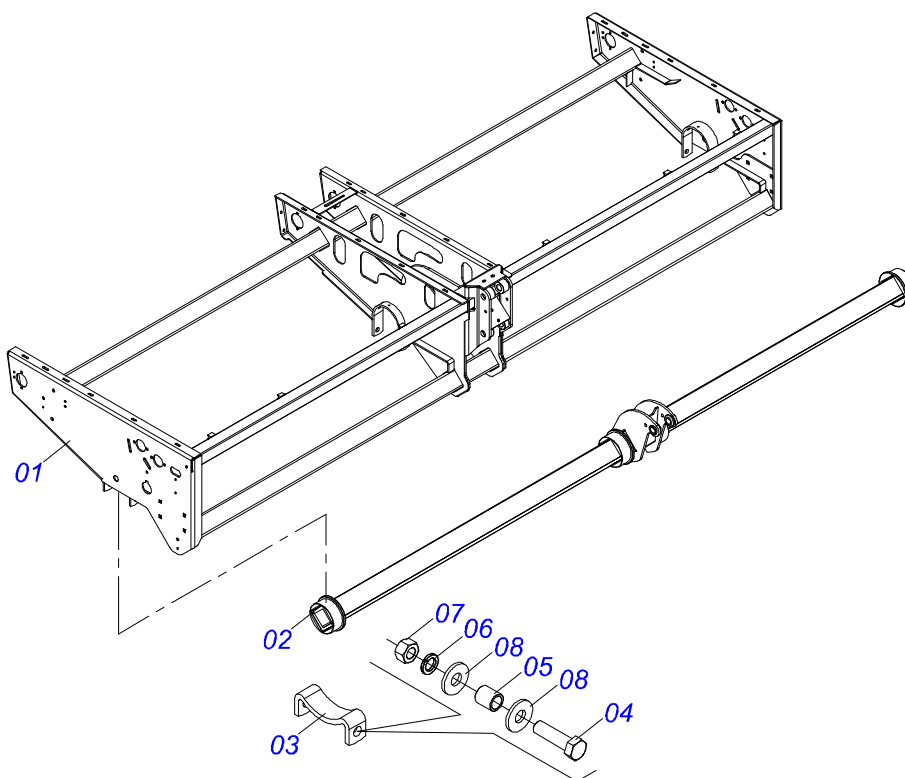


Item	Code	Description	See page	QT
01	0521065919	FRAME - 4045		01
02	0521065928	CARRYING-WHEELS PIVOT SHAFT - 4045		01
03	0521013199	LOWER BEARING SEMI		04
04	0503810899	BOLT		08
05	0531013922	0.6" X 0.8" X 1" SLEEVE		08
06	0503011445	SPRING WASHER		08
07	0503810013	NUT 5/8 NC		08
08	0501812140	FLAT WASHER		16

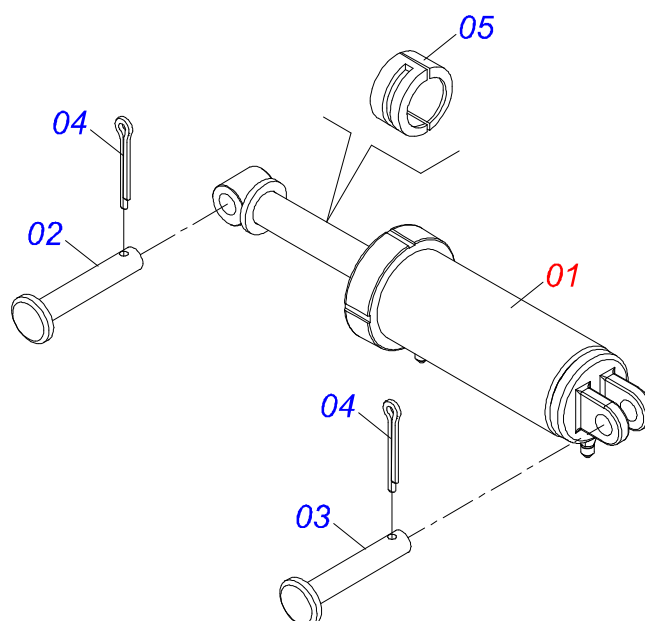

Item	Code	Description	See page	QT
01	0521045510	HYDRAULIC CYLINDER	6	01
02	0551014099	COUPLING SHAFT 31,75 X 185		01
03	0521010547	1.2" X 6.5" COUPLING SHAFT		01
04	0503010523	1/4" X 2" SPLIT PIN		02
05	0501047888	45 ROD STOP		01

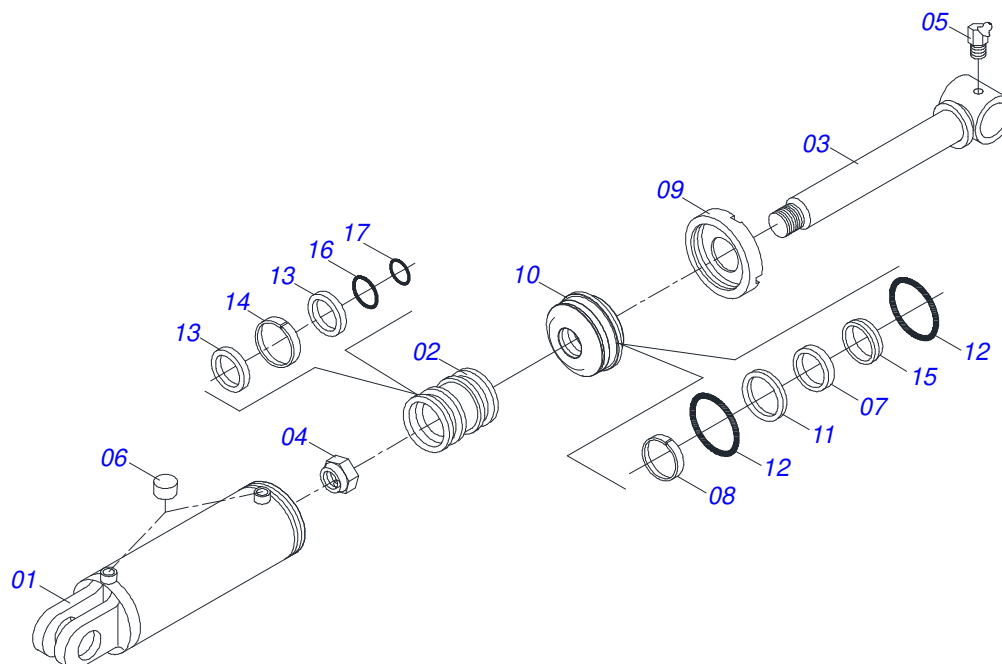


Item	Code	Description	See page	QT
01	0521065976	127 X 438,5 TUBE		01
02	0581013698	PISTON		01
03	0521067585	EXTENDER 50.80 X 371.5 WITH BUSHING		01
04	0503010817	1.1/4" SELF LOCKING NUT		01
05	0503010003	1845 GREASE FITTING		01
06	0503030385	CYLINDER PLUG N-002		02
07	0503018439	WIPER SEAL		01
08	0503018150	RING GUIDE		01
09	0502010382	5" END CAP		01
10	0581010353	RING SUPPORT		01
11	0503018026	1870-2000-375 B GASKET		01
12	0503011453	O'RING		02
13	0503018152	O'RING		02
14	0503018024	RING BS		01
15	0503018025	RING GUIDE		01
16	0503010039	D-2000 SCRAPER RING		01
17	0503010173	2-220 N 3006-9B O'RING		01

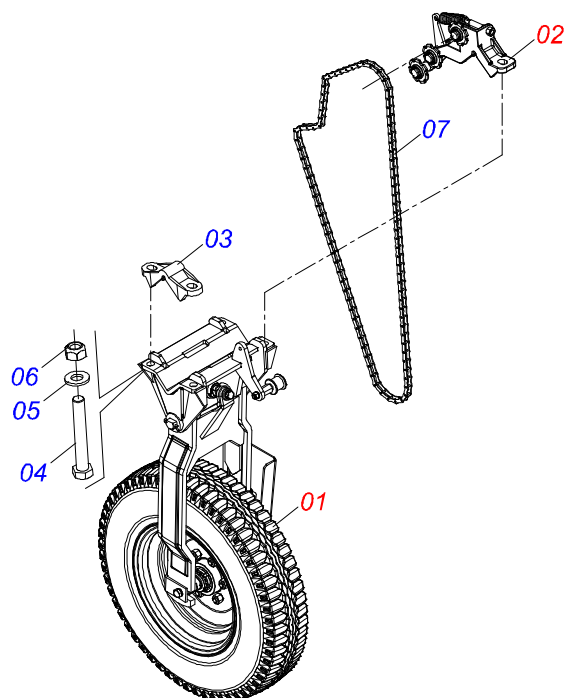


Item	Code	Description	See page	QT
01	0511058654	WHEEL SUPPORT	8	01
02	0501058240	WHEEL FASTENER WITH TENSIONER	12	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

WHEEL SUPPORT


0511058654

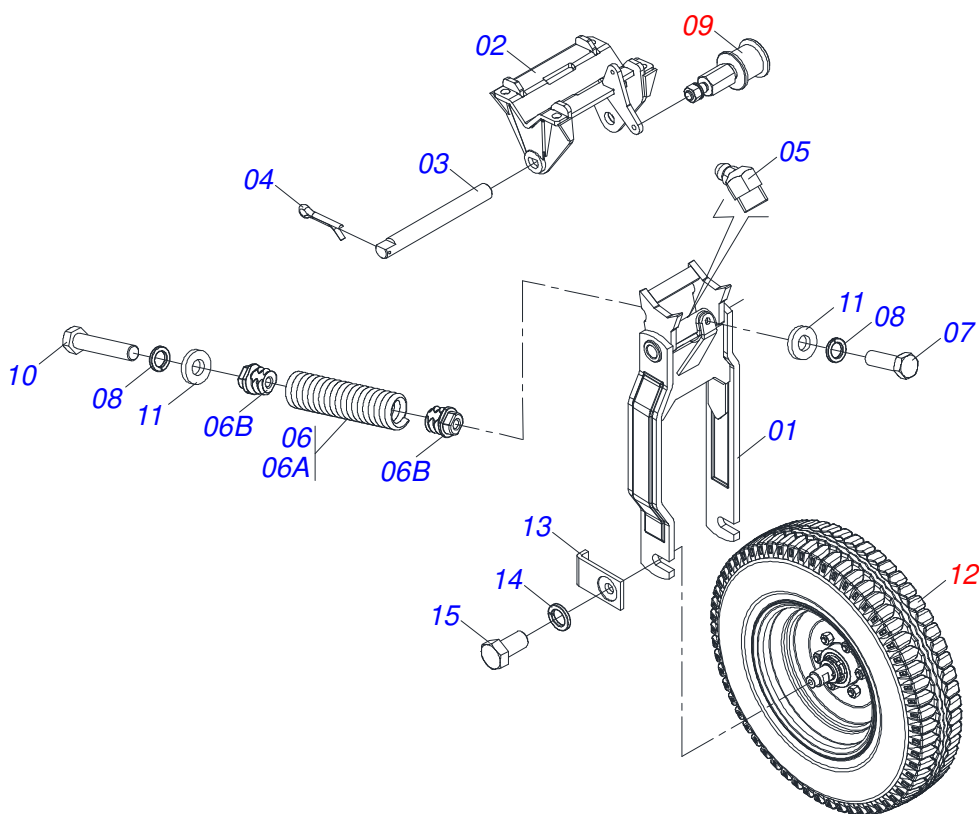


Item	Code	Description	See page	QT
01	0521066716	WHEEL ARM ASSY		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" SPLIT PIN		01
05	0503010003	1845 GREASE FITTING		01
06	0511050681	TRACTION SPRING		01
06A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
06B	0561016062	SPRING HITCH		02
07	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
08	0503010027	5/8 SPRING WASHER		01
09	0501058241	WHEEL SUPPORT CHAIN TENSIONER	9	01
10	0503013030	5/8" X 3.1/4" BOLT		01
11	0551017715	FLAT WASHER		02
12	0511052770	WHEEL WITH TIRE	10	01
13	0591010589	BODY LOCK WHEEL		01
14	0503010027	5/8 SPRING WASHER		02
15	0503011167	M16 X 2 X 30 BOLT		02

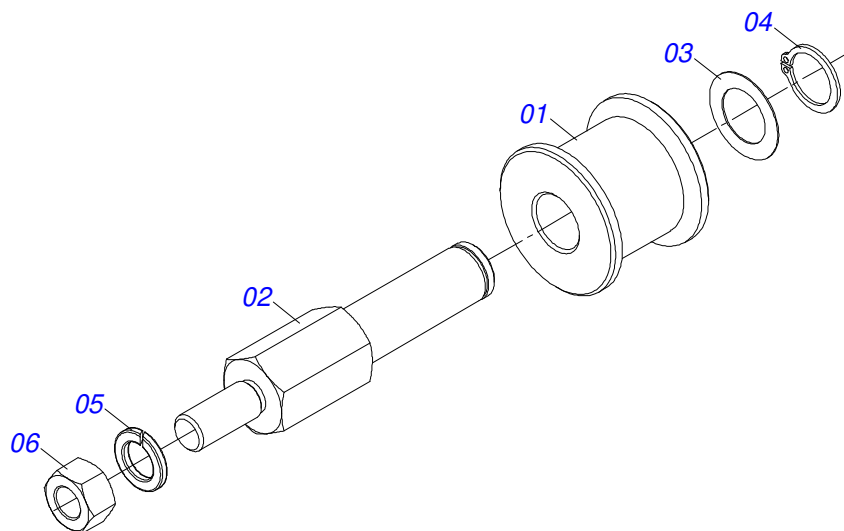


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

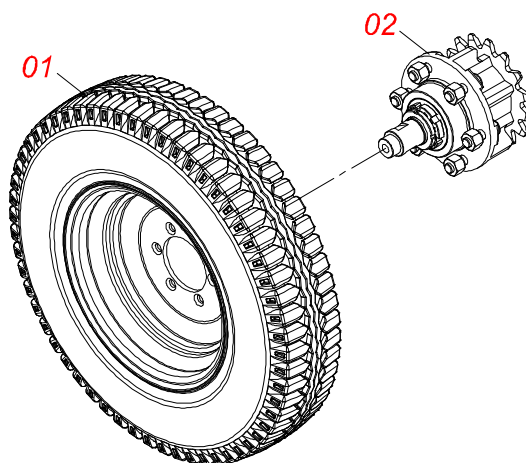


Item	Code	Description	See page	QT
01	0503062159	WHEEL WITH TIRE		01
02	0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	11	01

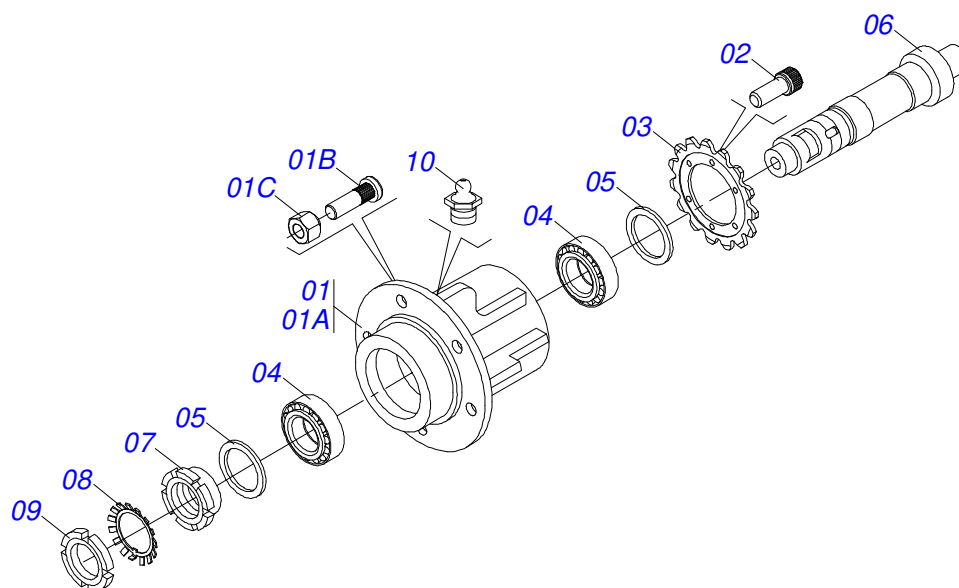


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503012550	5/16" X 3/4" BOLT		06
03	0502011339	15Z GEAR P 1.25"		01
04	0503010328	25590/25523 ROLLER BEARING		02
05	0503010804	00547-B SEAL		02
06	0521012185	TRANSMISSION WHEEL AXLE		01
07	0511015949	LOCK NUT		01
08	0503010329	LOCK WASHER		01
09	0503010330	KM 9 LOCKNUT		01
10	0503010002	1800 GREASE FITTING		01

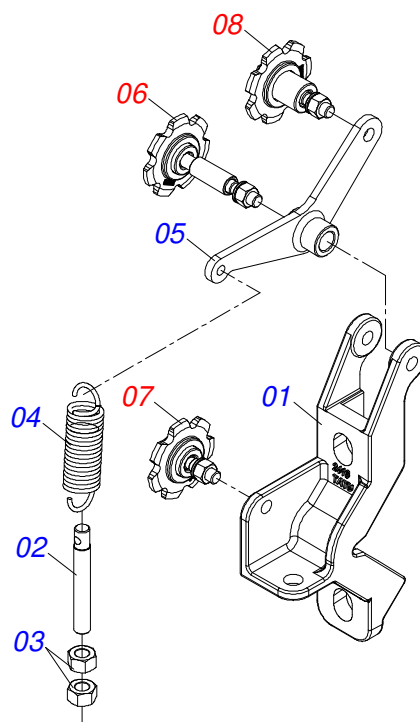


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8 NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	13	01
07	0501058244	WHEEL FIXED CHAIN TENSIONER	15	01
08	0501058242	WHEEL MOBILE CHAIN TENSIONER	16	01

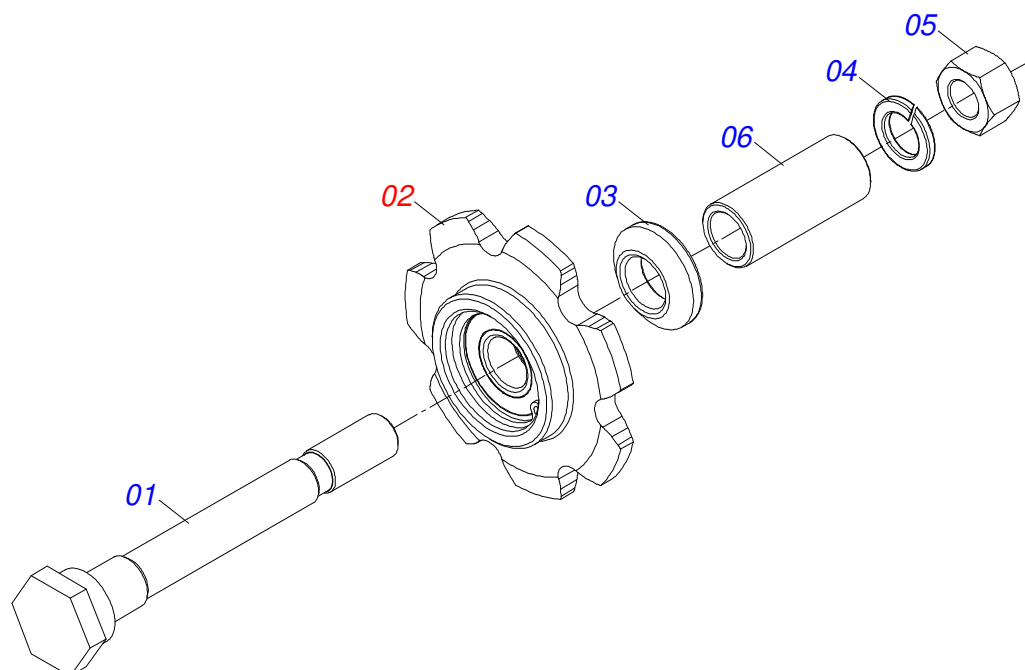


Item	Code	Description	See page	QT
01	0551018245	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	14	01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0551018239	SLEEVE 19 X 13,50 X 45		01

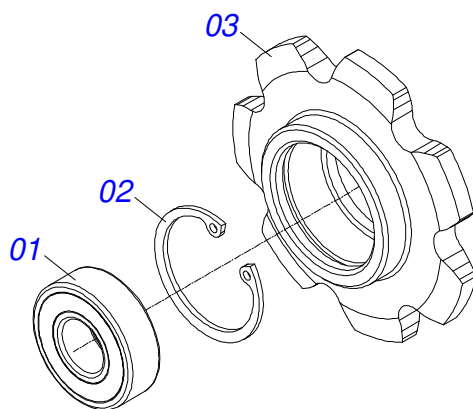


Item	Code	Description	See page	QT
01	0503012882	BEARING		01
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012853	GEAR		01

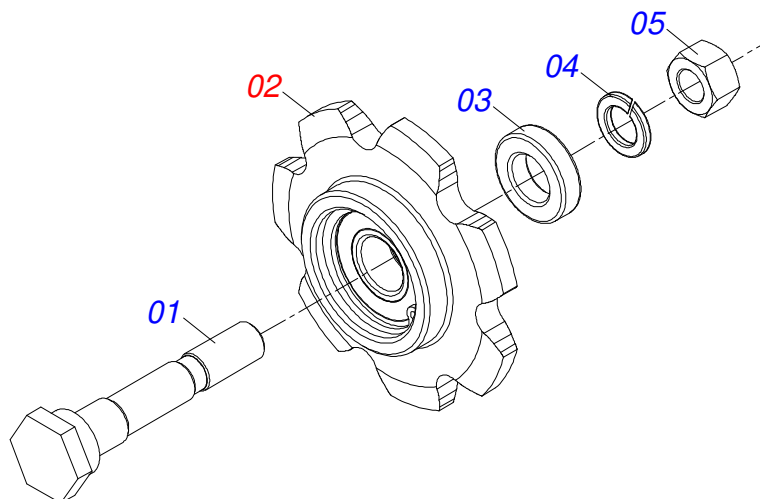

Item	Code	Description	See page	QT
01	0551018252	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	14	01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

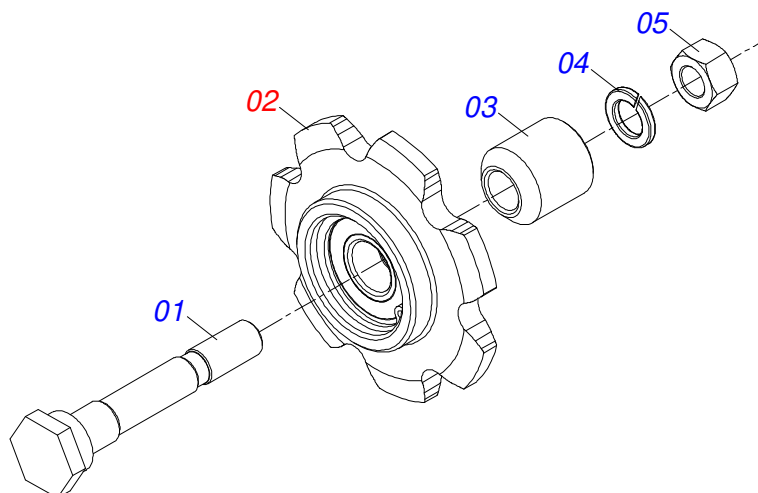


Item	Code	Description	See page	QT
01	0551018244	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	14	01
03	0591017923	15,30 X 30 X 32 SLEEVE		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

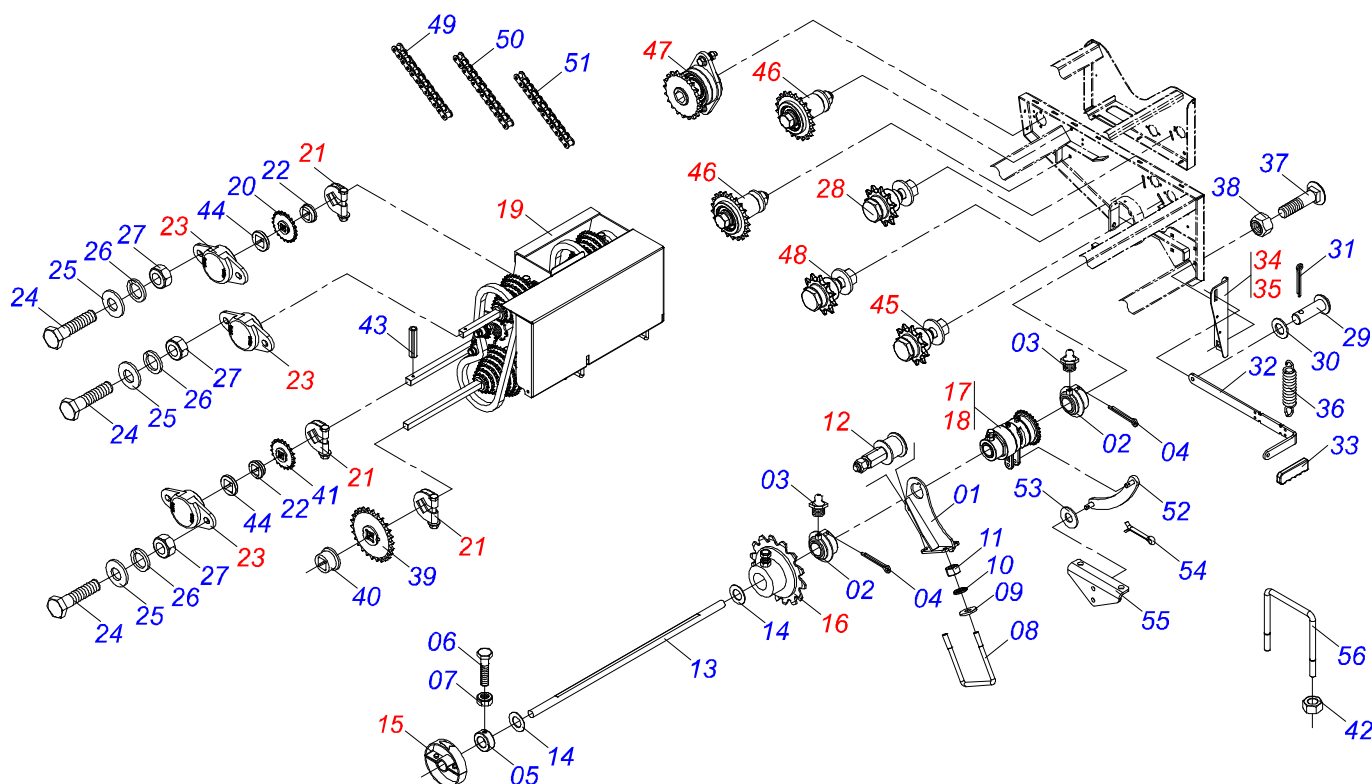


Item	Code	Description	See page	QT
01	0521065954	SUPPORT BEARING AXLE MOTOR		02
02	0501110639	BEARING		06
03	0503011099	GREASE FITTING		06
04	0503010300	5/32" X 1" SPLIT PIN		06
05	0511015961	LOCK BUSHING		04
06	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
07	0503010060	1/2 UNC G.5 ZN HEX NUT		04
08	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
09	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
10	0503010019	1/2" SPRING WASHER		08
11	0503010060	1/2 UNC G.5 ZN HEX NUT		08
12	0501058241	WHEEL SUPPORT CHAIN TENSIONER	9	02
13	0571018904	AXLE MOTOR 1550		02
14	0501018466	FLAT WASHER		02
15	0501052560	MOTOR AXLE SIGNAL	18	02
16	0511051434	TRANSMISSION ACTUATOR	19	02
17	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	20	01
18	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	21	01
19	0511058383	GEARBOX RIGHT/LEFT ASSY	22	01
20	0511061759	22Z P12,70 FQ 3/4" GEAR		02
21	0501053788	3/4" SQUARE AXLE FASTENER	31	06
22	0503030303	SUPPORT WASHER		06
23	0501056271	GEARBOX CLOSED BEARING	32	06
24	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		12
25	0501010984	10,50 X 27 X 3,00 FLAT WASHER		24
26	0503010025	3/8 SPRING WASHER		14
27	0503010026	3/8" NUT		14
28	0511059238	CHAIN TENSIONER	33	01
29	0521010773	0.37" X 1.18" COUPLING SHAFT		02
30	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
31	0503010140	1/8" X 3/4" SPLIT PIN		02


Item	Code	Description	See page	QT
32	0571018846	DISASSEMBLE LEVER		02
33	0503033942	COMPACTOR WHEEL REGULATOR LID		02
34	0571018844	SUPPORT RIGHT DISASSEMBLE LEVER		01
35	0571018845	SUPPORT LEFT DISASSEMBLE LEVER		01
36	0503030093	TRACTION SPRING		02
37	0503012407	5/8" X 1-1/2" BOLT		04
37.	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
38	0503012412	5/8" UNC SELF LOCKING NUT		04
39	0511061759	22Z P12,70 FQ 3/4" GEAR		02
40	0503030275	AGRICULTURAL BEARING		02
41	0511065209	20Z GEAR		02
42	0503011336	1/2" HEX SELF ADJUSTING NUT		04
43	0503010292	701164 6 X 40 SPRING PIN		02
44	0521018630	1.4" X SQUARE 0.8" WASHER		02
45	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	34	01
46	0511050652	CHAIN TENSIONER	35	04
47	0501053653	BEARING WITH GEAR 20Z 3/4 HEX SHAFT	36	02
48	0511057265	TRANSMISSION CHAIN TENSIONER	41	01
49	0503015637	40-1 X 56 CHAIN LINK + REDUCTION		02
50	0503014870	40-1 X 59 CHAIN LINK + MENDING		02
51	0503015001	40-1 X 153 CHAIN LINK + MENDING		02
52	0511069678	LH LOWER LEVER		02
53	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
54	0503010140	1/8" X 3/4" SPLIT PIN		04
55	0551019159	LEVER FIXER BODY		02
56	0561016468	FASTENER		02

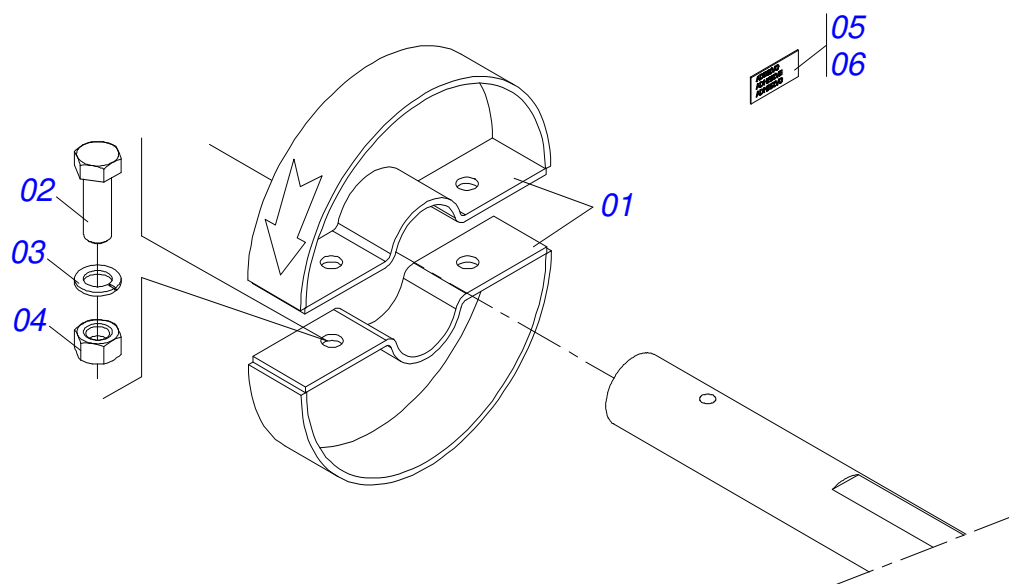

Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ADHESIVE LABEL		01

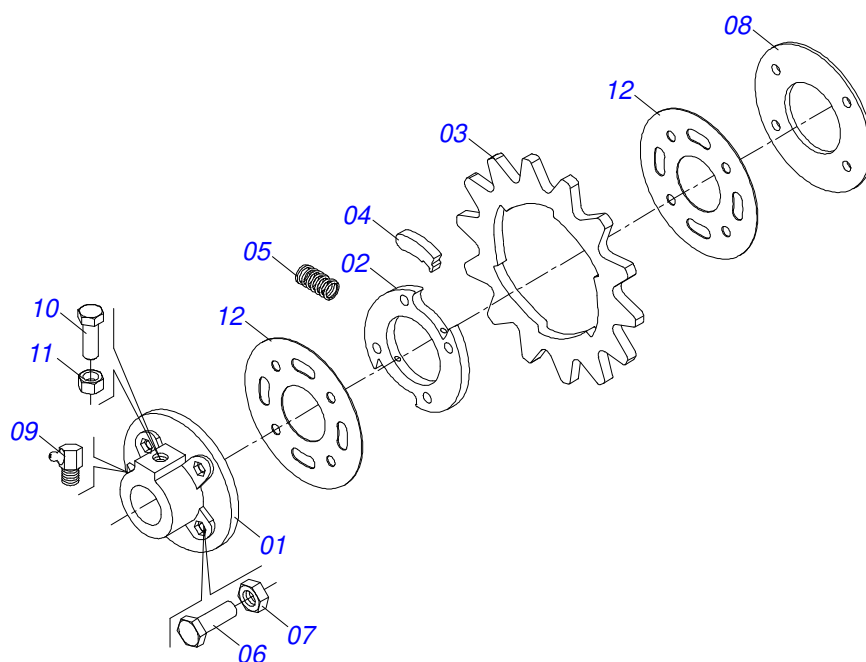


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CS G.5 ZN		01
11	0503010060	1/2 UNC G.5 ZN HEX NUT		01
12	0571010763	FLANGE WASHER		02

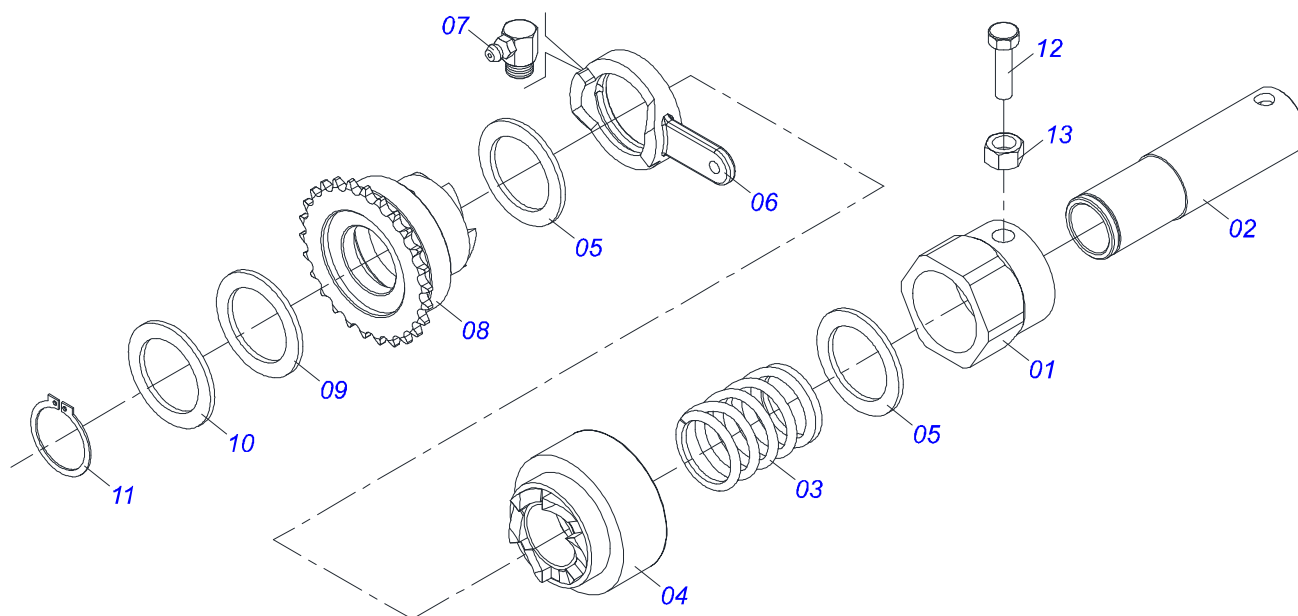


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0521017590	GUIDE AXLE		01
03	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
04	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
05	0501019734	FLAT WASHER		02
06	0502010710	RIGHT CAM, SMALLER		02
07	0503010003	1845 GREASE FITTING		02
08	0502012539	26Z P12,7 GEAR		01
09	0501019735	FLAT WASHER		01
10	0521017593	FLAT WASHER		01
11	0503010542	501045 CLAMPING RING (FOR AXLE)		01
12	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
13	0503010060	1/2 UNC G.5 ZN HEX NUT		01

LEFT SIDE TRANSMISSION ACTUATOR

0511047070

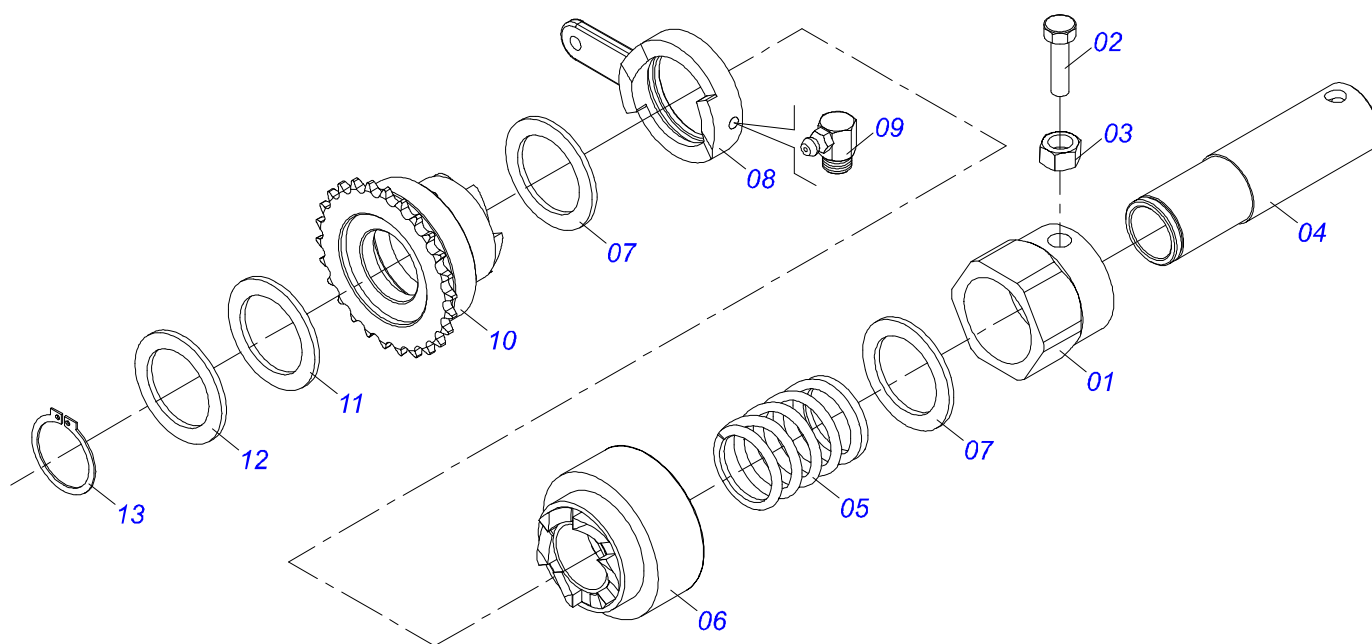


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

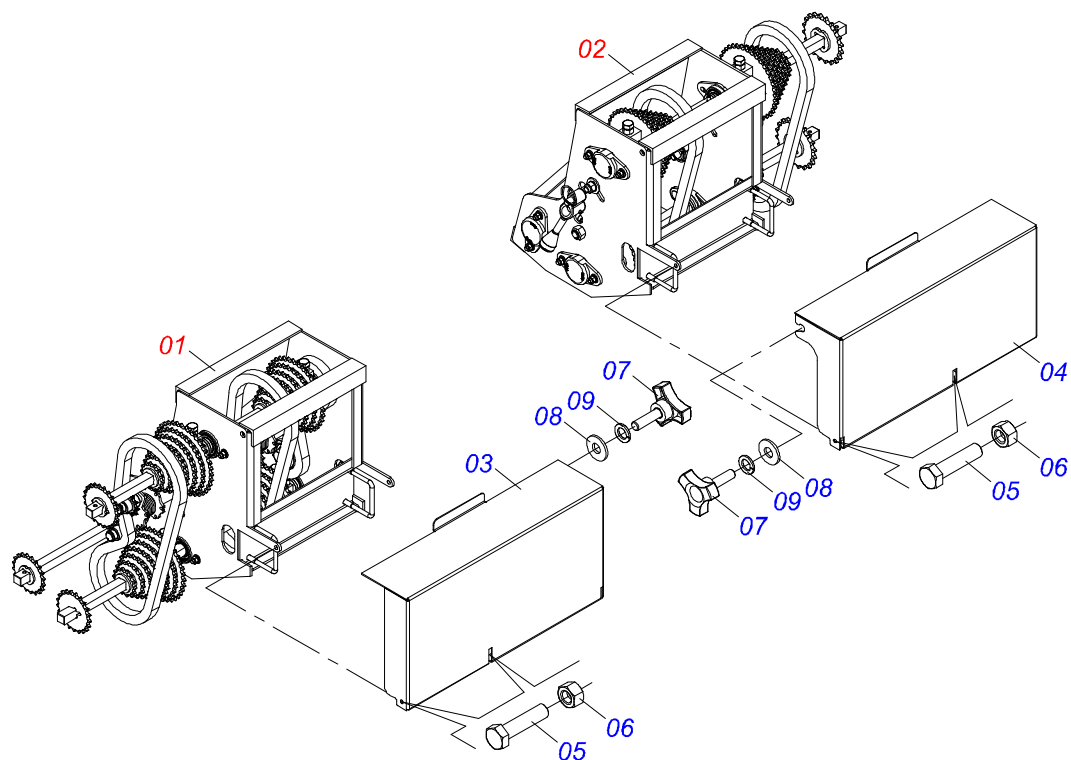

Item	Code	Description	See page	QT
01	0511058381	RIGHT GEAR HOUSING	23	01
02	0511058382	LEFT GEAR HOUSING	28	01
03	0521065955	RIGHT GEARBOX LID		01
04	0521065956	LEFT GEARBOX LID		01
05	0503010240	BOLT		04
06	0503013816	5/16" LOCKNUT		04
07	0503033682	KNOB 3P K3 60A M12 X 40		02
08	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
09	0503010019	1/2" SPRING WASHER		02

RIGHT GEAR HOUSING

0511058381

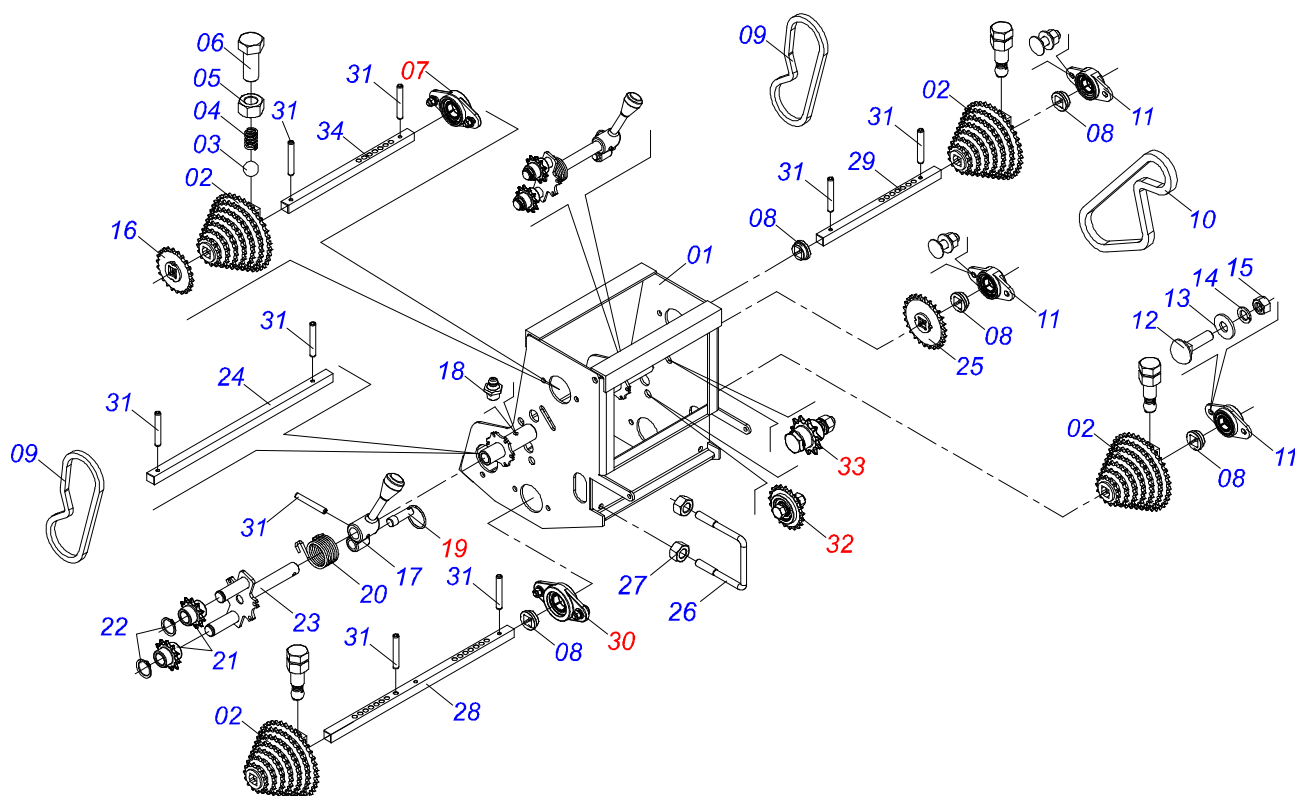


Item	Code	Description	See page	QT
01	0521065939	RIGHT GEAR BOX		01
02	0511060396	DRIVE/DRIVEN SHAFT		04
03	0503012389	1/2 BALL		04
04	0503031512	0.4" X 0.1"X 2" X 0.6" SPRING		04
05	0503010060	1/2 UNC G.5 ZN HEX NUT		04
06	0503010395	1/2" X 1-1/4" BOLT		04
07	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	24	01
08	0503030303	SUPPORT WASHER		06
09	0503012204	40-1 CHAIN X 82 LINK + RED		02
10	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
11	0501056271	GEARBOX CLOSED BEARING	32	03
12	0503011953	5/16" X 1" BOLT		06
13	0501010694	FLAT WASHER		06
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
15	0503010337	5/16" NUT		06
16	0511061758	21Z GEAR		01
17	0502011758	REAR TIGHTENER LEVER		02
18	0503010002	1800 GREASE FITTING		02
19	0501048790	AXLE WITH RING	25	02
20	0503031366	RIGHT TWISTED SPRING		02
21	0503031805	11Z 1/2" GEAR		04
22	0503010302	501019 SEAL RING		04
23	0511061794	CHAIN TENSIONER		02
24	0571018903	AXLE INTERMEDIATE RECAMBIO		01
25	0511067501	26Z GEAR		01
26	0521010683	3/8 UNC FASTENER		02
27	0503010026	3/8" NUT		04
28	0571018902	GEAR BOX DRIVER AXLE		01
29	0571018900	SEED DRIVEN AXLE		01
30	0501056443	GEAR HOUSING BEARING	29	01
31	0503010292	701164 6 X 40 SPRING PIN		08


RIGHT GEAR HOUSING

0511058381


Item	Code	Description	See page	QT
32	0511057258	TENSIONER WITH GEAR	26	01
33	0511054363	CHAIN TENSIONER	27	01
34	0571018901	DRIVEN AXLE		01

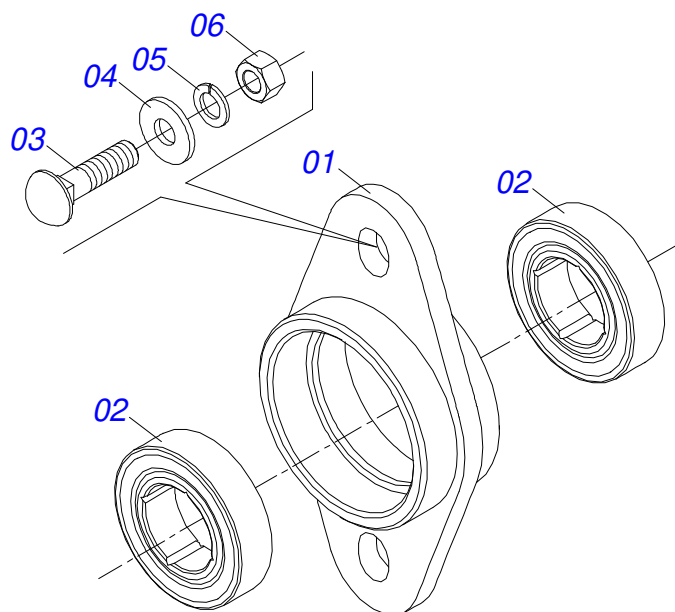


Item	Code	Description	See page	QT
01	0502011978	CENTRAL BEARING GEARBOX		01
02	0503013462	6005 2RS1 ROLLER BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

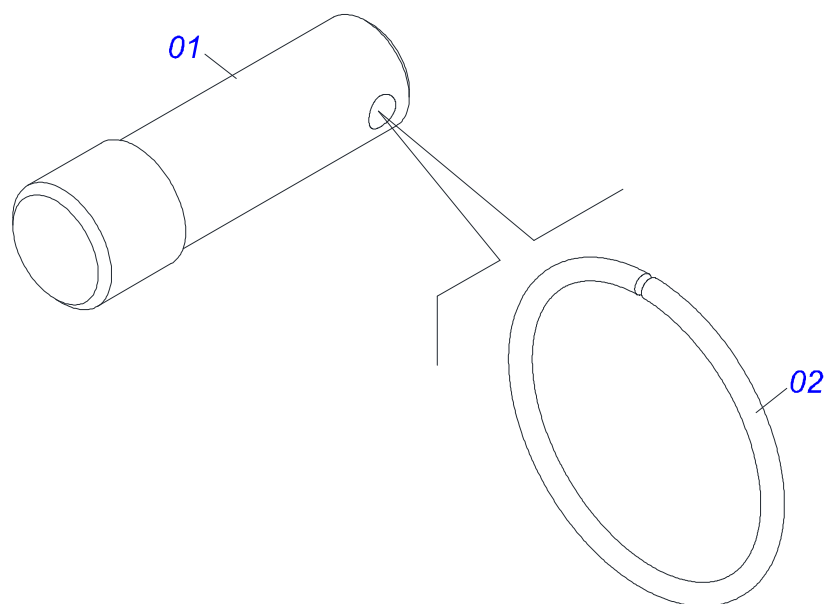

Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

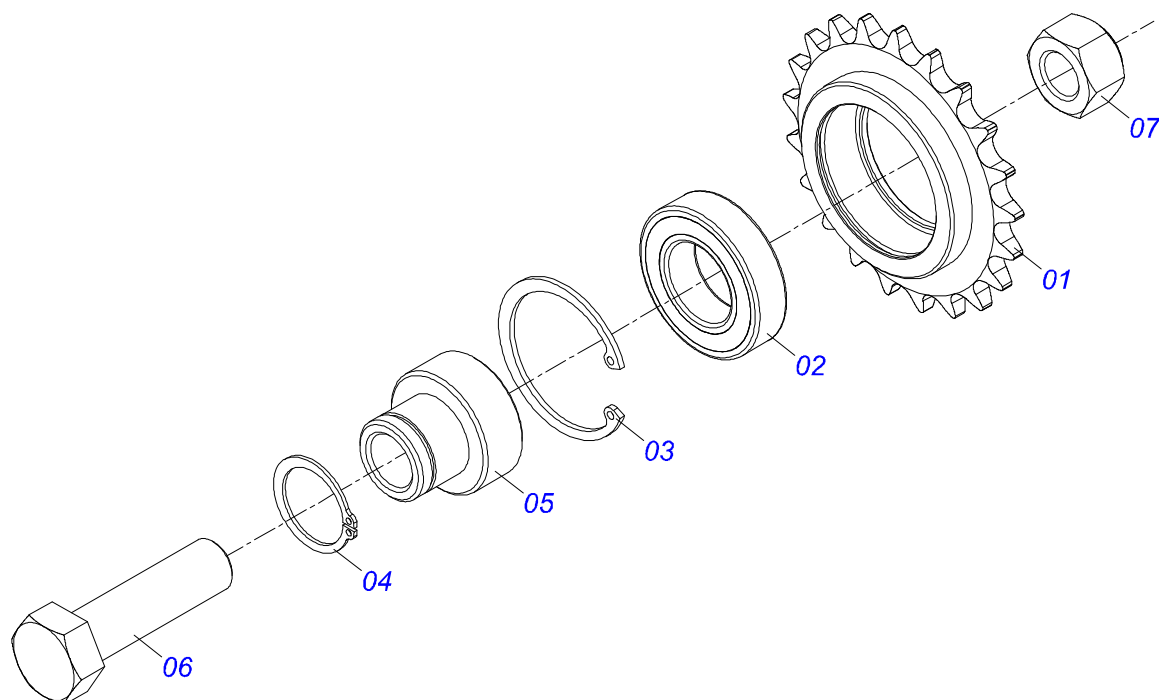


Item	Code	Description	See page	QT
01	0511062169	21Z P 1/2" GEAR		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0571019207	DEVIATION AXLE GEAR BOX		01
06	0503010899	5/8 UNC X 2.1/4 BOLT		01
07	0503012412	5/8" UNC SELF LOCKING NUT		01

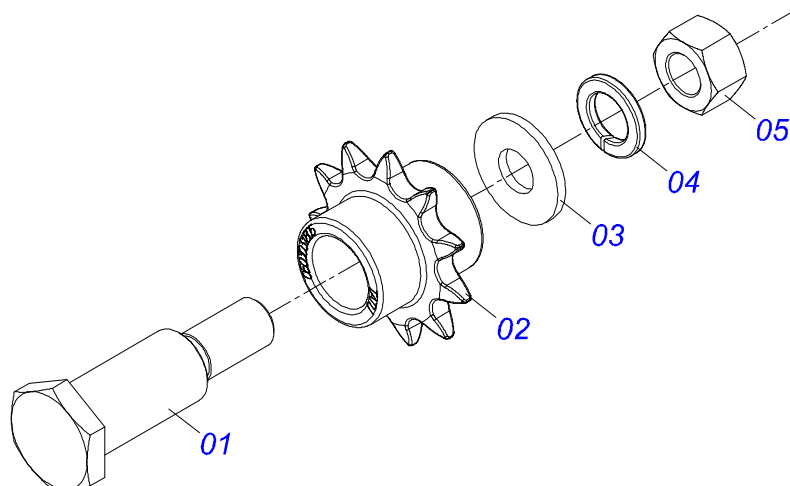

Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

LEFT GEAR HOUSING

0511058382

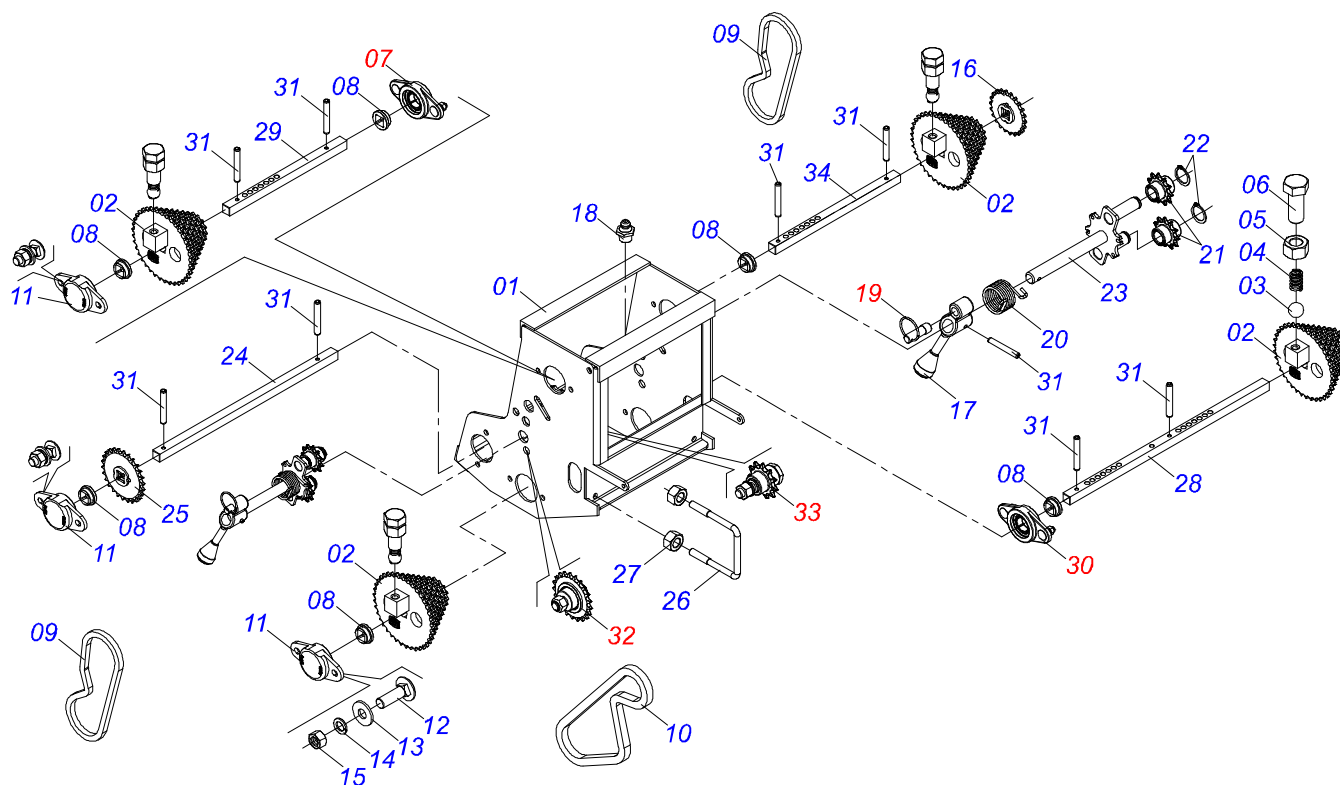


Item	Code	Description	See page	QT
01	0521065940	LEFT GEAR BOX		01
02	0511060396	DRIVE/DRIVEN SHAFT		04
03	0503012389	1/2 BALL		04
04	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
05	0503010060	1/2 UNC G.5 ZN HEX NUT		04
06	0503010395	1/2" X 1-1/4" BOLT		04
07	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	24	01
08	0503030303	SUPPORT WASHER		06
09	0503012204	40-1 CHAIN X 82 LINK + RED		02
10	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
11	0501056271	GEARBOX CLOSED BEARING	32	03
12	0503011953	5/16" X 1" BOLT		06
13	0501010694	FLAT WASHER		06
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
15	0503010337	5/16" NUT		06
16	0511061758	21Z GEAR		01
17	0502011758	REAR TIGHTENER LEVER		02
18	0503010002	1800 GREASE FITTING		02
19	0501048790	AXLE WITH RING	25	02
20	0503031367	SPRING		02
21	0503031805	11Z 1/2" GEAR		04
22	0503010302	501019 SEAL RING		04
23	0511061794	CHAIN TENSIONER		02
24	0571018903	AXLE INTERMEDIATE RECAMBIO		01
25	0511067501	26Z GEAR		01
26	0521010683	3/8 UNC FASTENER		02
27	0503010026	3/8" NUT		04
28	0571018902	GEAR BOX DRIVER AXLE		01
29	0571018900	SEED DRIVEN AXLE		01
30	0501056443	GEAR HOUSING BEARING	29	01
31	0503010292	701164 6 X 40 SPRING PIN		08


LEFT GEAR HOUSING

0511058382


Item	Code	Description	See page	QT
32	0511057258	TENSIONER WITH GEAR	26	01
33	0511054363	CHAIN TENSIONER	27	01
34	0571018901	DRIVEN AXLE		01

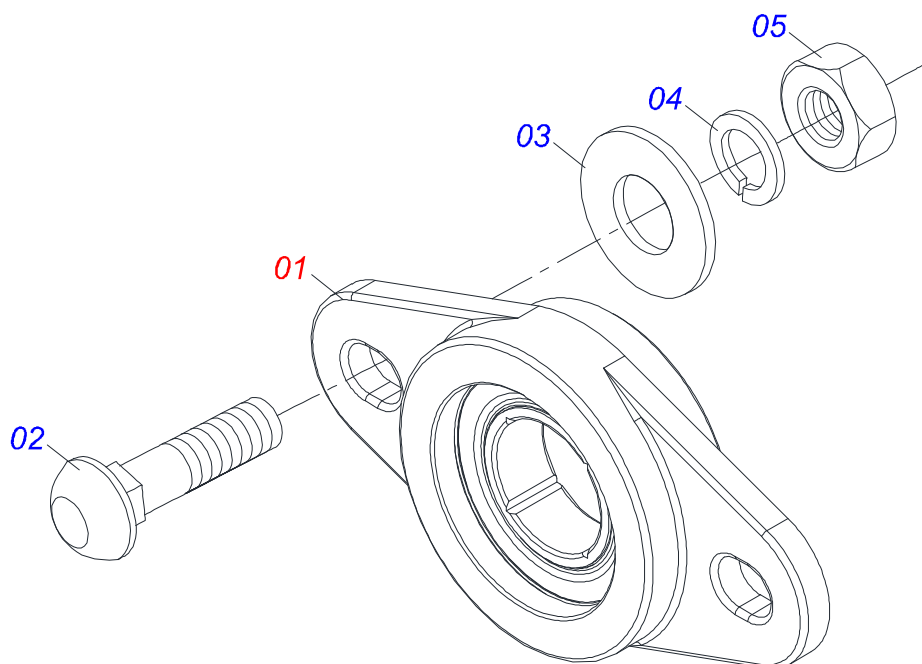


Item	Code	Description	See page	QT
01	0501056444	SUPPORT WITH ROLLER BEARING	30	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

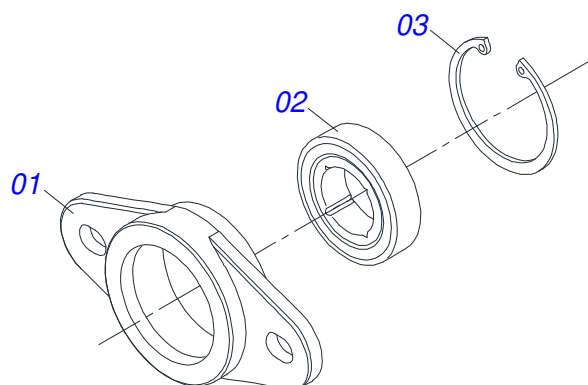


Item	Code	Description	See page	QT
01	0502011697	GEARBOX SUPPORT		01
02	0503013462	6005 2RS1 ROLLER BEARING		01
03	0503011105	SEAL RING		01

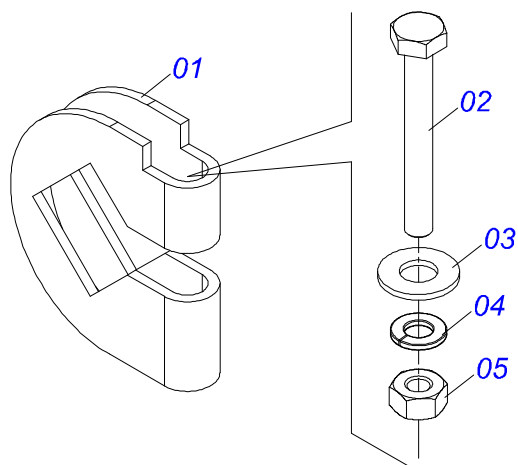


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

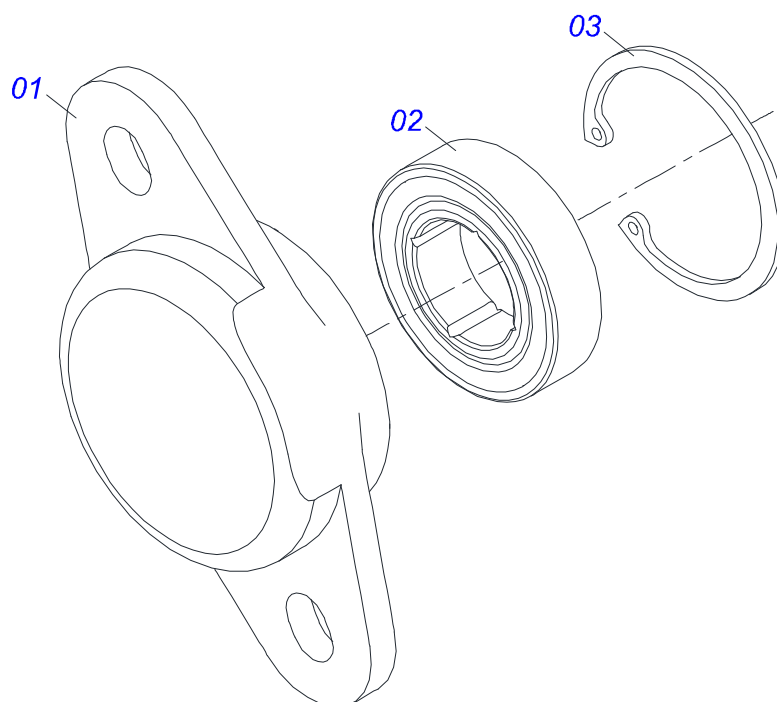


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	6005 2RS1 ROLLER BEARING		01
03	0503011105	SEAL RING		01

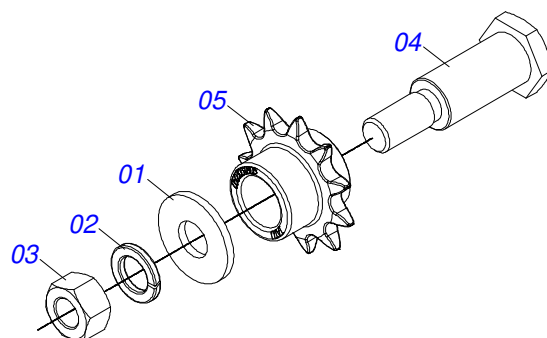


Item	Code	Description	See page	QT
01	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
02	0503010019	1/2" SPRING WASHER		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
05	0581011914	9Z X P 5/8" GEAR		01

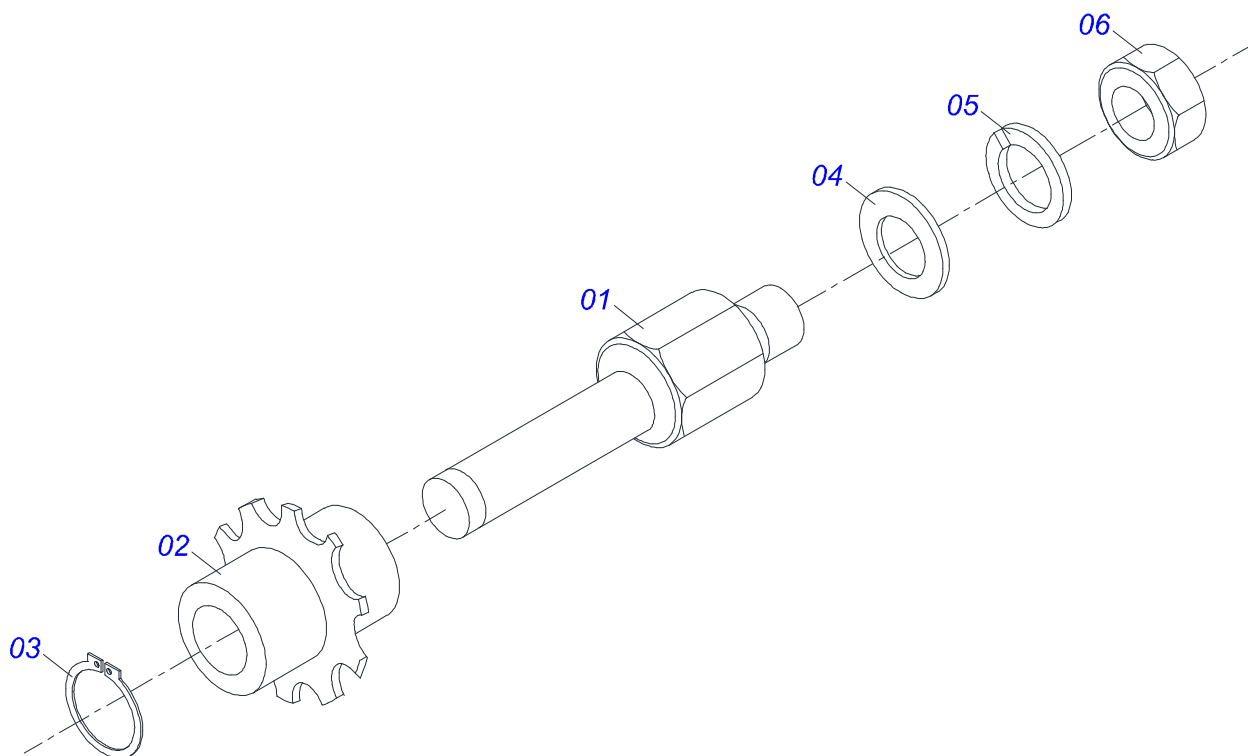


Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

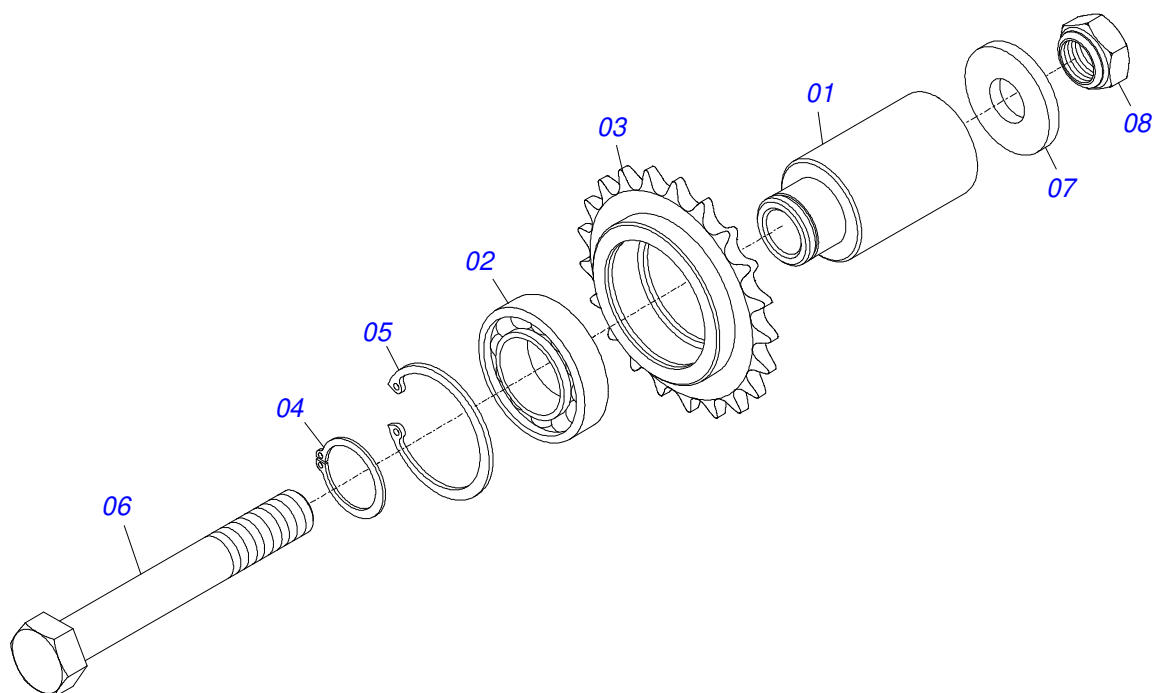


Item	Code	Description	See page	QT
01	0551019171	CHAIN TIGHTENER AXLE		01
02	0503011410	ROLLER BEARING		01
03	0511062169	21Z P 1/2" GEAR		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0503011105	SEAL RING		01
06	0501011027	5/8" X 3-3/4" BOLT		01
07	0571010265	16.5 X 40 X 3 FLAT WASHER		01
08	0503012412	5/8" UNC SELF LOCKING NUT		01

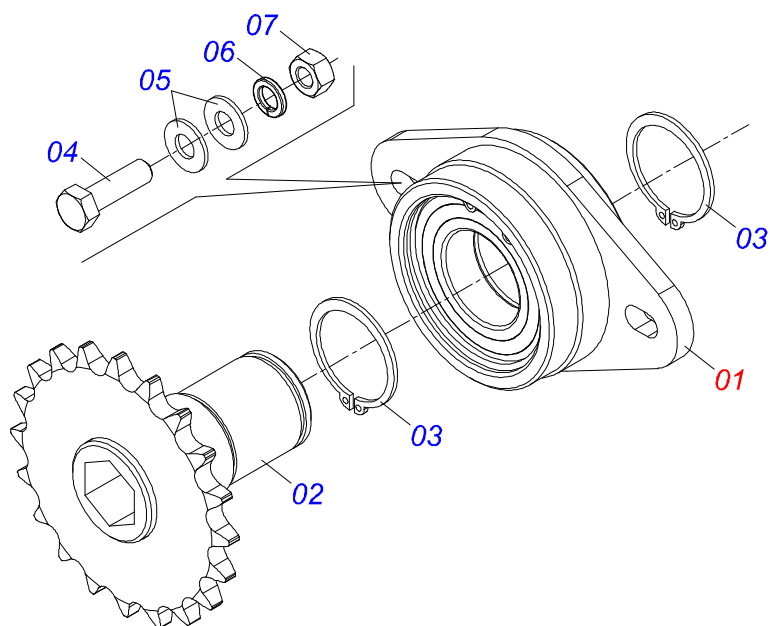

Item	Code	Description	See page	QT
01	0501053654	3/4 SEED TRANSMISSION DOUBLE BEARING	37	01
02	0511063185	20Z GEAR WITH HEX HOLE AXLE 20		01
03	0503010707	501030 CLAMPING RING (FOR AXLE)		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

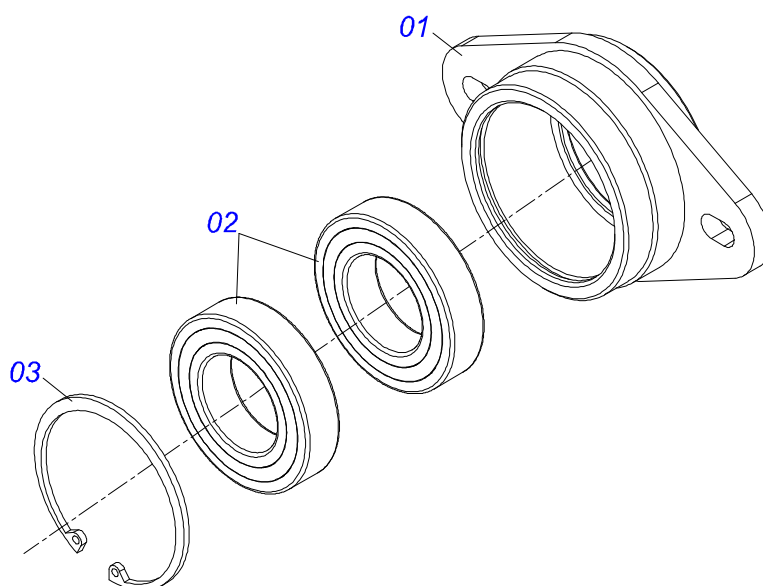

Item	Code	Description	See page	QT
01	0502012031	HOUSING BEARING		01
02	0503012861	6006 2RS BALL BEARING		02
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01

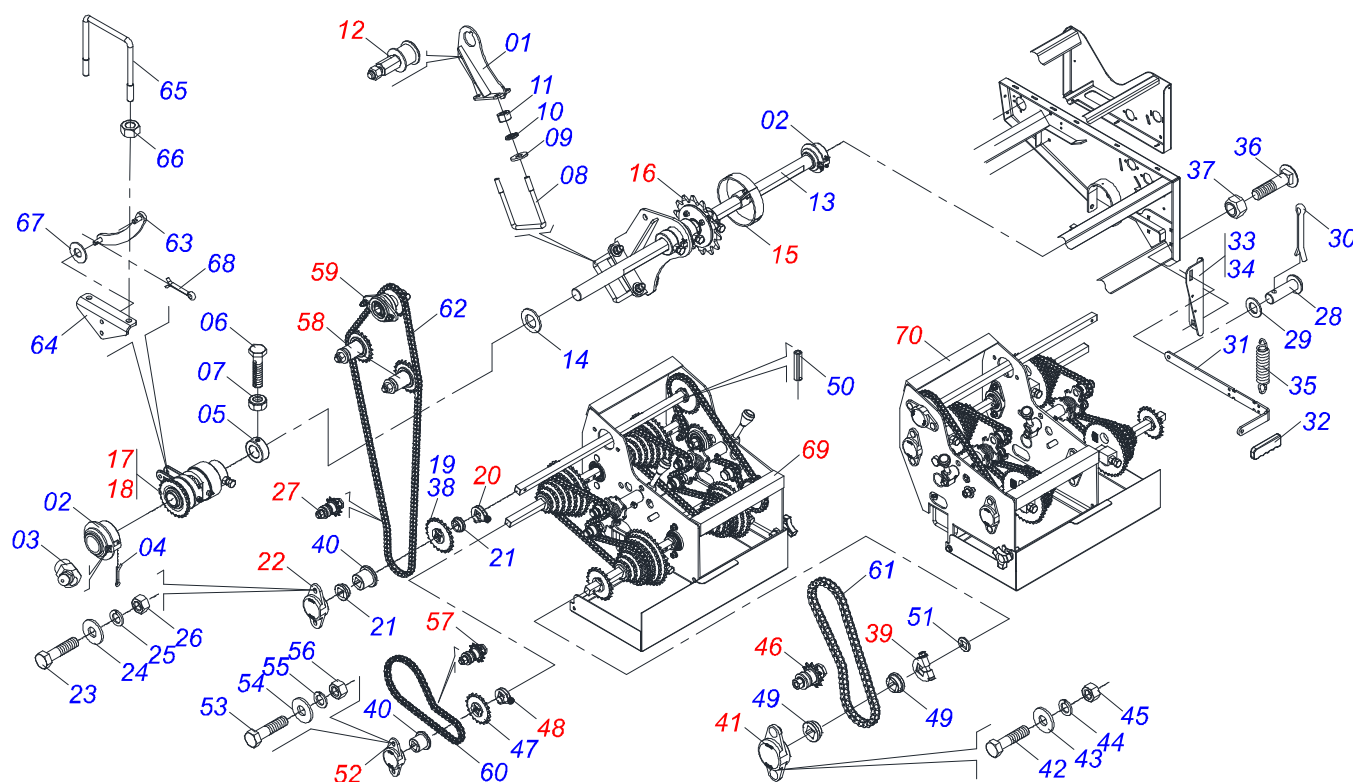


Item	Code	Description	See page	QT
01	0521065954	SUPPORT BEARING AXLE MOTOR		02
02	0501110639	BEARING		06
03	0503011099	GREASE FITTING		06
04	0503010300	5/32" X 1" SPLIT PIN		06
05	0511015961	LOCK BUSHING		04
06	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
07	0503010060	1/2 UNC G.5 ZN HEX NUT		04
08	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
09	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
10	0503010019	1/2" SPRING WASHER		08
11	0503010060	1/2 UNC G.5 ZN HEX NUT		08
12	0501058241	WHEEL SUPPORT CHAIN TENSIONER	9	02
13	0571018904	AXLE MOTOR 1550		02
14	0501018466	FLAT WASHER		02
15	0501052560	MOTOR AXLE SIGNAL	18	02
16	0511051434	TRANSMISSION ACTUATOR	19	02
17	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	20	01
18	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	21	01
19	0511061759	22Z P12,70 FQ 3/4" GEAR		02
20	0501053788	3/4" SQUARE AXLE FASTENER	31	02
21	0503030303	SUPPORT WASHER		04
22	0501056271	GEARBOX CLOSED BEARING	32	02
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
24	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
25	0503010025	3/8 SPRING WASHER		04
26	0503010026	3/8" NUT		04
27	0511057265	TRANSMISSION CHAIN TENSIONER	41	02
28	0521010773	0.37" X 1.18" COUPLING SHAFT		02
29	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
30	0503010140	1/8" X 3/4" SPLIT PIN		02
31	0571018846	DISASSEMBLE LEVER		02

TRANSMISSION ASSEMBLY - 3245


0511059129

Item	Code	Description	See page	QT
32	0503033942	COMPACTOR WHEEL REGULATOR LID		02
33	0571018844	SUPPORT RIGHT DISASSEMBLE LEVER		01
34	0571018845	SUPPORT LEFT DISASSEMBLE LEVER		01
35	0503030093	TRACTION SPRING		02
36	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
37	0503012412	5/8" UNC SELF LOCKING NUT		04
38	0511061759	22Z P12,70 FQ 3/4" GEAR		02
39	0501053788	3/4" SQUARE AXLE FASTENER	31	02
40	0503030275	AGRICULTURAL BEARING		02
41	0501056271	GEARBOX CLOSED BEARING	32	02
42	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
43	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
44	0503010025	3/8 SPRING WASHER		04
45	0503010026	3/8" NUT		04
46	0511057265	TRANSMISSION CHAIN TENSIONER	41	02
47	0511065209	20Z GEAR		02
48	0501053788	3/4" SQUARE AXLE FASTENER	31	02
49	0503030303	SUPPORT WASHER		02
50	0503010292	701164 6 X 40 SPRING PIN		02
51	0521018630	1.4" X SQUARE 0.8" WASHER		02
52	0501056271	GEARBOX CLOSED BEARING	32	02
53	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
54	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
55	0503010025	3/8 SPRING WASHER		04
56	0503010026	3/8" NUT		04
57	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	34	02
58	0511050652	CHAIN TENSIONER	35	04
59	0501053653	BEARING WITH GEAR 20Z 3/4 HEX SHAFT	36	02
60	0503015637	40-1 X 56 CHAIN LINK + REDUCTION		02
61	0503014870	40-1 X 59 CHAIN LINK + MENDING		02
62	0503015001	40-1 X 153 CHAIN LINK + MENDING		02
63	0511069678	LH LOWER LEVER		02
64	0551019159	LEVER FIXER BODY		02
65	0561016468	FASTENER		02
66	0503011336	1/2" HEX SELF ADJUSTING NUT		04
67	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
68	0503010140	1/8" X 3/4" SPLIT PIN		04
69	0521055335	RIGHT GEAR HOUSING SET	42	01
70	0521055337	LEFT GEAR HOUSING SET	43	01

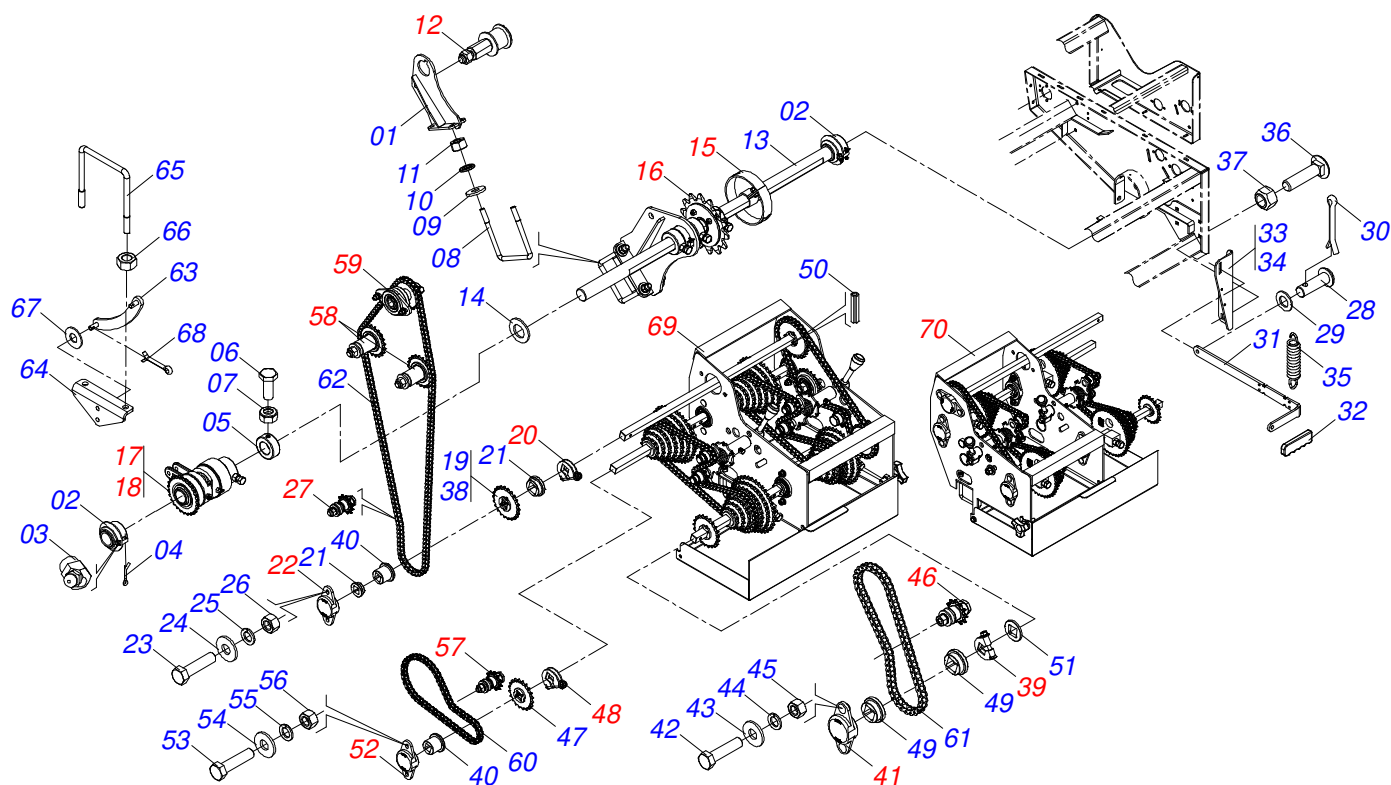

Item	Code	Description	See page	QT
01	0521065954	SUPPORT BEARING AXLE MOTOR		04
02	0501110639	BEARING		08
03	0503011099	GREASE FITTING		08
04	0503010300	5/32" X 1" SPLIT PIN		08
05	0511015961	LOCK BUSHING		04
06	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
07	0503010060	1/2 UNC G.5 ZN HEX NUT		04
08	0521014021	1/2" X 4.5" X 5.4" FASTENER		08
09	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		16
10	0503010019	1/2" SPRING WASHER		16
11	0503010060	1/2 UNC G.5 ZN HEX NUT		16
12	0501058241	WHEEL SUPPORT CHAIN TENSIONER	9	04
13	0571018905	AXLE MOTOR 1675		02
14	0501018466	FLAT WASHER		02
15	0501052560	MOTOR AXLE SIGNAL	18	02
16	0511051434	TRANSMISSION ACTUATOR	19	04
17	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	20	01
18	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	21	01
19	0511061759	22Z P12,70 FQ 3/4" GEAR		02
20	0501053788	3/4" SQUARE AXLE FASTENER	31	02
21	0503030303	SUPPORT WASHER		04
22	0501056271	GEARBOX CLOSED BEARING	32	02
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
24	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
25	0503010025	3/8 SPRING WASHER		04
26	0503010026	3/8" NUT		04
27	0511057265	TRANSMISSION CHAIN TENSIONER	41	02
28	0521010773	0.37" X 1.18" COUPLING SHAFT		02
29	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
30	0503010140	1/8" X 3/4" SPLIT PIN		02
31	0571018846	DISASSEMBLE LEVER		02

Item	Code	Description	See page	QT
32	0503033942	COMPACTOR WHEEL REGULATOR LID		02
33	0571018844	SUPPORT RIGHT DISASSEMBLE LEVER		01
34	0571018845	SUPPORT LEFT DISASSEMBLE LEVER		01
35	0503030093	TRACTION SPRING		02
36	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
37	0503012412	5/8" UNC SELF LOCKING NUT		04
38	0511061759	22Z P12,70 FQ 3/4" GEAR		02
39	0501053788	3/4" SQUARE AXLE FASTENER	31	02
40	0503030275	AGRICULTURAL BEARING		02
41	0501056271	GEARBOX CLOSED BEARING	32	02
42	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
43	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
44	0503010025	3/8 SPRING WASHER		04
45	0503010026	3/8" NUT		04
46	0511057265	TRANSMISSION CHAIN TENSIONER	41	02
47	0511065209	20Z GEAR		02
48	0501053788	3/4" SQUARE AXLE FASTENER	31	02
49	0503030303	SUPPORT WASHER		02
50	0503010292	701164 6 X 40 SPRING PIN		02
51	0521018630	1.4" X SQUARE 0.8" WASHER		02
52	0501056271	GEARBOX CLOSED BEARING	32	02
53	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
54	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
55	0503010025	3/8 SPRING WASHER		04
56	0503010026	3/8" NUT		04
57	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	34	02
58	0511050652	CHAIN TENSIONER	35	04
59	0501053653	BEARING WITH GEAR 20Z 3/4 HEX SHAFT	36	02
60	0503015637	40-1 X 56 CHAIN LINK + REDUCTION		02
61	0503014870	40-1 X 59 CHAIN LINK + MENDING		02
62	0503015001	40-1 X 153 CHAIN LINK + MENDING		02
63	0511069678	LH LOWER LEVER		02
64	0551019159	LEVER FIXER BODY		02
65	0561016468	FASTENER		02
66	0503011336	1/2" HEX SELF ADJUSTING NUT		04
67	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
68	0503010140	1/8" X 3/4" SPLIT PIN		04
69	0521055335	RIGHT GEAR HOUSING SET	42	01
70	0521055337	LEFT GEAR HOUSING SET	43	01

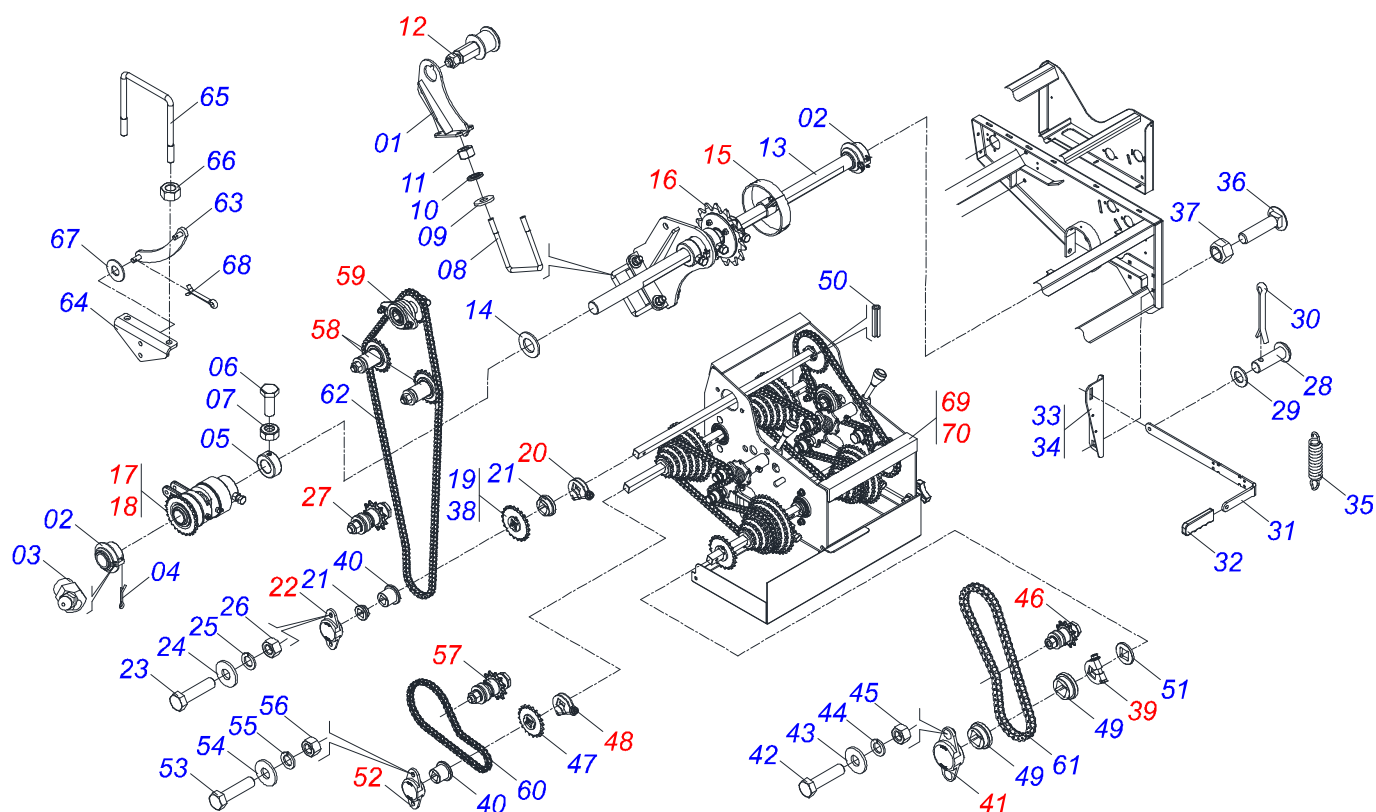


Item	Code	Description	See page	QT
01	0521065954	SUPPORT BEARING AXLE MOTOR		04
02	0501110639	BEARING		08
03	0503011099	GREASE FITTING		08
04	0503010300	5/32" X 1" SPLIT PIN		08
05	0511015961	LOCK BUSHING		04
06	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
07	0503010060	1/2 UNC G.5 ZN HEX NUT		04
08	0521014021	1/2" X 4.5" X 5.4" FASTENER		08
09	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		16
10	0503010019	1/2" SPRING WASHER		16
11	0503010060	1/2 UNC G.5 ZN HEX NUT		16
12	0501058241	WHEEL SUPPORT CHAIN TENSIONER	9	04
13	0571018906	AXLE MOTOR 1950		02
14	0501018466	FLAT WASHER		02
15	0501052560	MOTOR AXLE SIGNAL	18	02
16	0511051434	TRANSMISSION ACTUATOR	19	04
17	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	20	01
18	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	21	01
19	0511061759	22Z P12,70 FQ 3/4" GEAR		02
20	0501053788	3/4" SQUARE AXLE FASTENER	31	02
21	0503030303	SUPPORT WASHER		04
22	0501056271	GEARBOX CLOSED BEARING	32	02
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
24	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
25	0503010025	3/8 SPRING WASHER		04
26	0503010026	3/8" NUT		04
27	0511057265	TRANSMISSION CHAIN TENSIONER	41	02
28	0521010773	0.37" X 1.18" COUPLING SHAFT		02
29	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
30	0503010140	1/8" X 3/4" SPLIT PIN		02
31	0571018846	DISASSEMBLE LEVER		02


TRANSMISSION 4045

0541050034

Item	Code	Description	See page	QT
32	0503033942	COMPACTOR WHEEL REGULATOR LID		02
33	0571018844	SUPPORT RIGHT DISASSEMBLE LEVER		01
34	0571018845	SUPPORT LEFT DISASSEMBLE LEVER		01
35	0503030093	TRACTION SPRING		02
36	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
37	0503012412	5/8" UNC SELF LOCKING NUT		04
38	0511061759	22Z P12,70 FQ 3/4" GEAR		02
39	0501053788	3/4" SQUARE AXLE FASTENER	31	02
40	0503030275	AGRICULTURAL BEARING		02
41	0501056271	GEARBOX CLOSED BEARING	32	02
42	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
43	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
44	0503010025	3/8 SPRING WASHER		04
45	0503010026	3/8" NUT		04
46	0511057265	TRANSMISSION CHAIN TENSIONER	41	02
47	0511065209	20Z GEAR		02
48	0501053788	3/4" SQUARE AXLE FASTENER	31	02
49	0503030303	SUPPORT WASHER		02
50	0503010292	701164 6 X 40 SPRING PIN		02
51	0521018630	1.4" X SQUARE 0.8" WASHER		02
52	0501056271	GEARBOX CLOSED BEARING	32	02
53	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
54	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
55	0503010025	3/8 SPRING WASHER		04
56	0503010026	3/8" NUT		04
57	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	34	02
58	0511050652	CHAIN TENSIONER	35	04
59	0501053653	BEARING WITH GEAR 20Z 3/4 HEX SHAFT	36	02
60	0503015637	40-1 X 56 CHAIN LINK + REDUCTION		02
61	0503014911	40-1 X 63 CHAIN LINK + MENDING		02
62	0503015001	40-1 X 153 CHAIN LINK + MENDING		02
63	0531062318	LEFT/RIGHT LOWER LEVER		02
64	0551019159	LEVER FIXER BODY		02
65	0561016468	FASTENER		02
66	0503011336	1/2" HEX SELF ADJUSTING NUT		04
67	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
68	0503010140	1/8" X 3/4" SPLIT PIN		04
69	0521055335	RIGHT GEAR HOUSING SET	42	01
70	0521055337	LEFT GEAR HOUSING SET	43	01

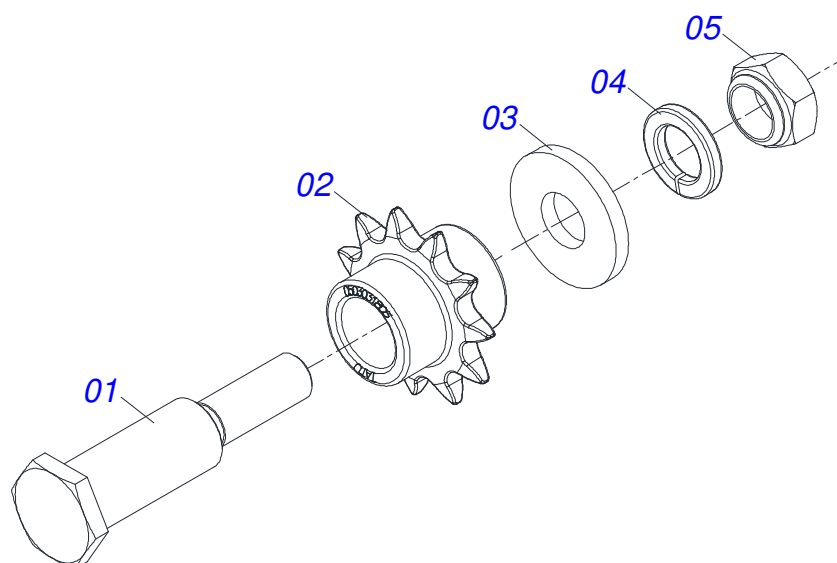


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		03
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

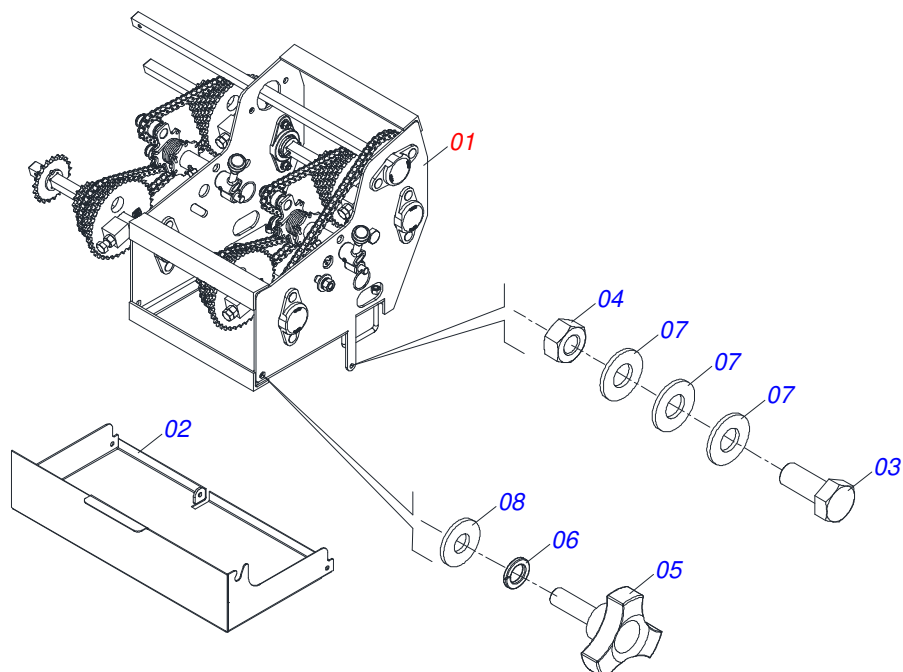


Item	Code	Description	See page	QT
01	0511058381	RIGHT GEAR HOUSING	23	01
02	0521065955	RIGHT GEARBOX LID		01
03	0503010240	BOLT		02
04	0503013816	5/16" LOCKNUT		02
05	0503033682	KNOB 3P K3 60A M12 X 40		01
06	0503010019	1/2" SPRING WASHER		01
07	0501010694	FLAT WASHER		06
08	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01

LEFT GEAR HOUSING SET


0521055337

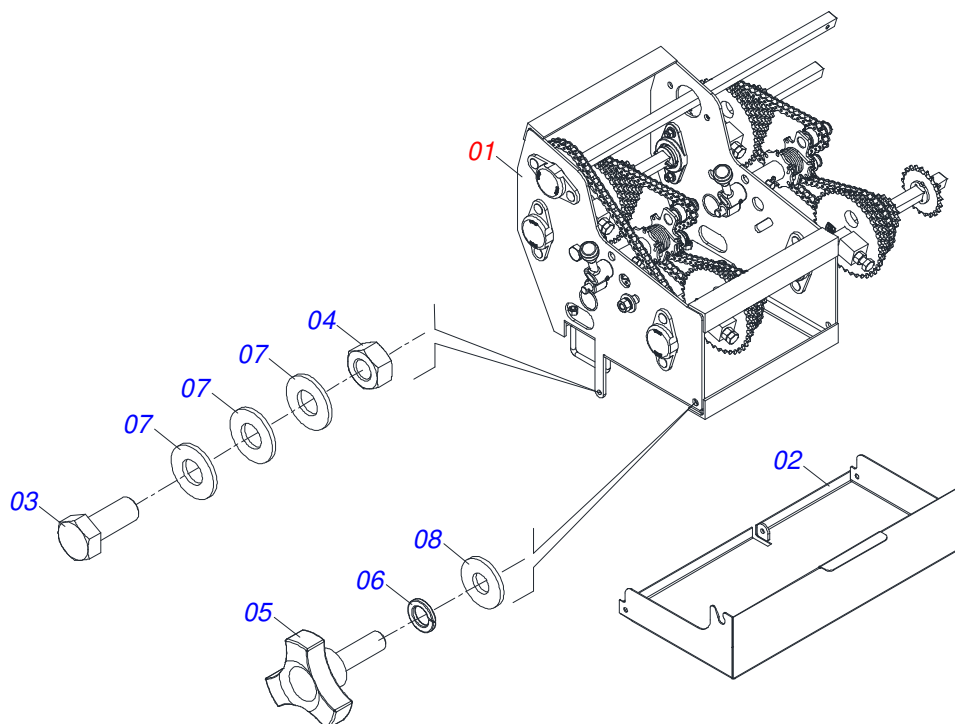


Item	Code	Description	See page	QT
01	0511058382	LEFT GEAR HOUSING	28	01
02	0521065956	LEFT GEARBOX LID		01
03	0503010240	BOLT		02
04	0503013816	5/16" LOCKNUT		02
05	0503033682	KNOB 3P K3 60A M12 X 40		01
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
07	0503010019	1/2" SPRING WASHER		01
08	0501010694	FLAT WASHER		06

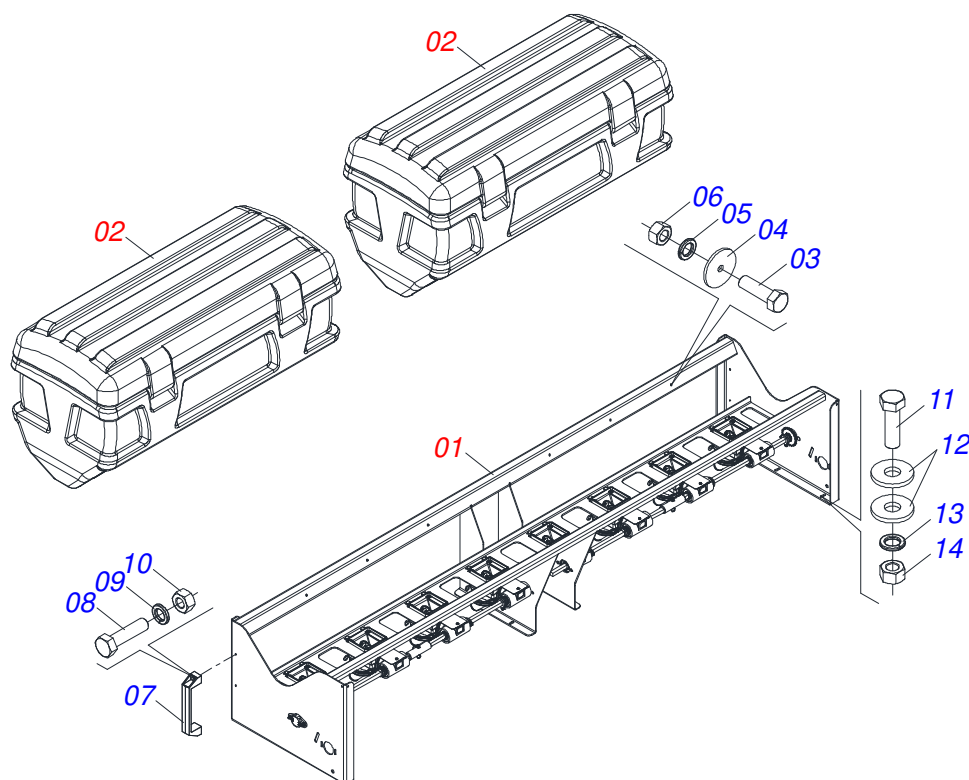


Item	Code	Description	See page	QT
01	0531055584	HOPPER SUPPORT WITH FERTILIZER METERING - 3245	45	01
02	0503062362	FERTILIZER HOPPER	51	02
03	0503013751	3/8 UNC X 1.1/4 BOLT		12
04	0571019051	FIXER HOPPER WASHER		12
05	0503012535	3/8" SPRING WASHER		12
06	0503012531	3/8" INOX NUT		12
07	0503011957	NYLON HANDLE		02
08	0503010371	5/16" X 1" BOLT		04
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
10	0503010337	5/16" NUT		04
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		10
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		20
13	0503010025	3/8 SPRING WASHER		10
14	0503010026	3/8" NUT		10

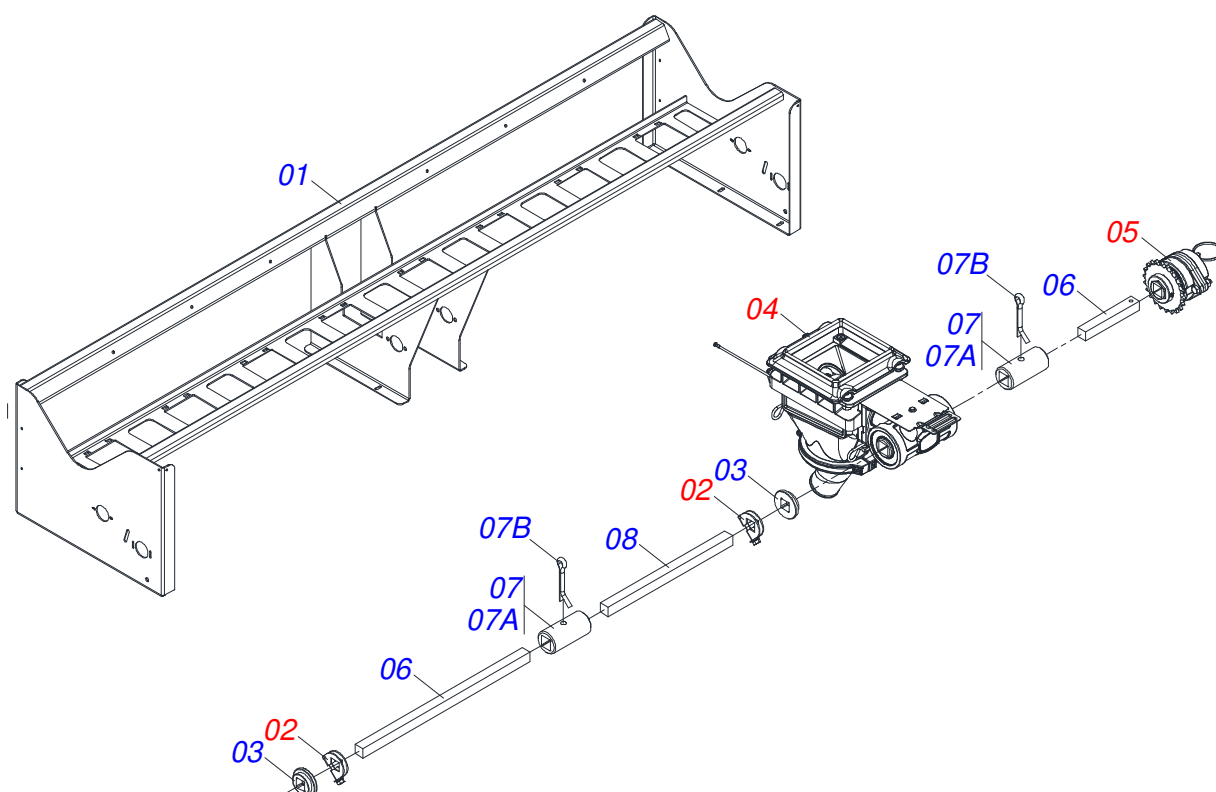


Item	Code	Description	See page	QT
01	0531064280	HOPPER SUPPORT - 3245		01
02	0501053788	3/4" SQUARE AXLE FASTENER	31	04
03	0503031527	AGRICULTURAL BEARING		04
04	0531055319	ALPHA II FERTILIZER METERING	53	08
05	0531057911	22Z GEAR SIDE BEARING ASSEMBLY	58	02
06	0501311131	3/4 X 450 AXLE WITH HOLE		02
07	0531057908	SLEEVE 1/4 X 2		06
07A	0502013069	SLEEVE 21 X 38 X 50		01
07B	0503010010	1/4" X 2.1/2" SPLIT PIN		01
08	0501310661	3/4" X 15,35"/15,27" AXLE		06

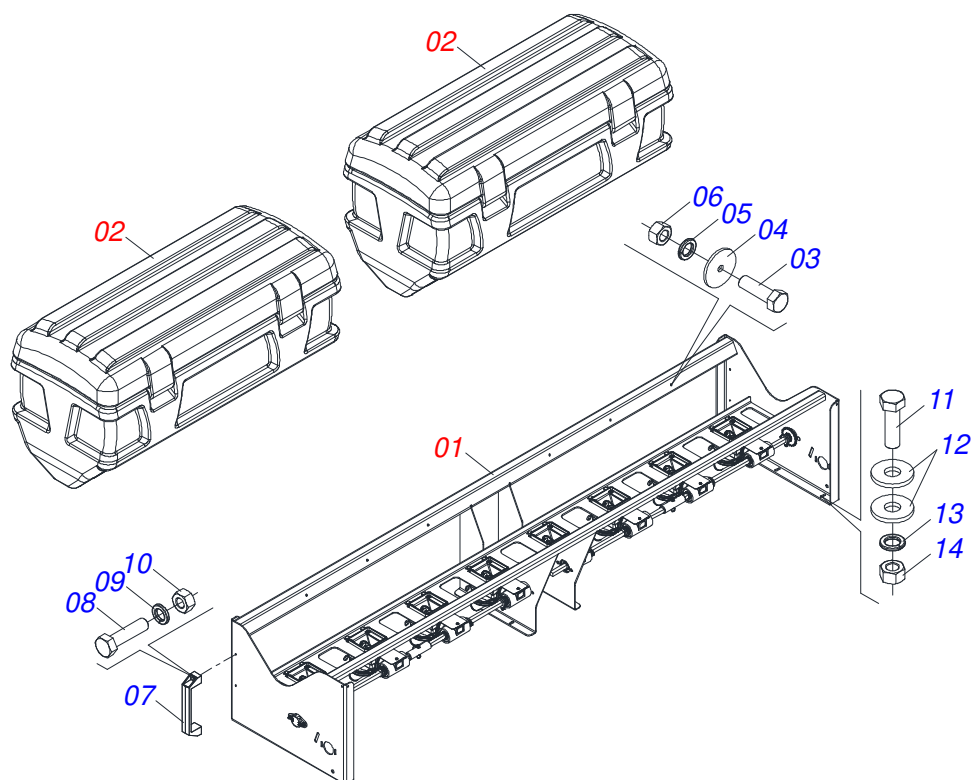


Item	Code	Description	See page	QT
01	0531055386	HOPPER SUPPORT WITH FERTILIZER METERING - 3495	47	01
02	0503062362	FERTILIZER HOPPER	51	02
03	0503013751	3/8 UNC X 1.1/4 BOLT		12
04	0571019051	FIXER HOPPER WASHER		12
05	0503012535	3/8" SPRING WASHER		12
06	0503012531	3/8" INOX NUT		12
07	0503011957	NYLON HANDLE		02
08	0503010371	5/16" X 1" BOLT		04
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
10	0503010337	5/16" NUT		04
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		10
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		20
13	0503010025	3/8 SPRING WASHER		10
14	0503010026	3/8" NUT		10

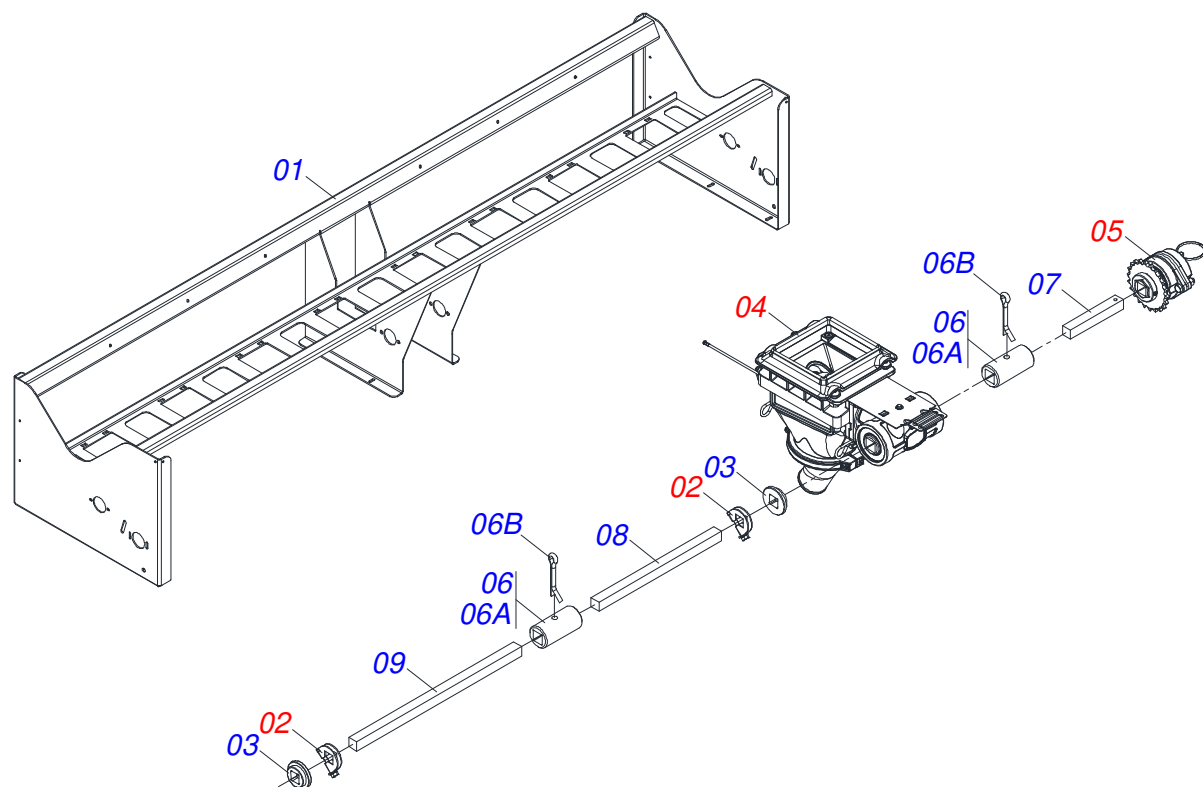


Item	Code	Description	See page	QT
01	0531064089	HOPPER SUPPORT - 3495		01
02	0501053788	3/4" SQUARE AXLE FASTENER	31	06
03	0503031527	AGRICULTURAL BEARING		06
04	0531055319	ALPHA II FERTILIZER METERING	53	08
05	0531057913	DOUBLE BEARING ASSEMBLY	60	02
06	0531057908	SLEEVE 1/4 X 2		08
06A	0502013069	SLEEVE 21 X 38 X 50		01
06B	0503010010	1/4" X 2.1/2" SPLIT PIN		01
07	0501218689	AXLE 3/4 X 190 WITH HOLE		02
08	0501218850	3/4 X 360/362 AXLE		02
09	0501218487	3/4 X 390 AXLE		06

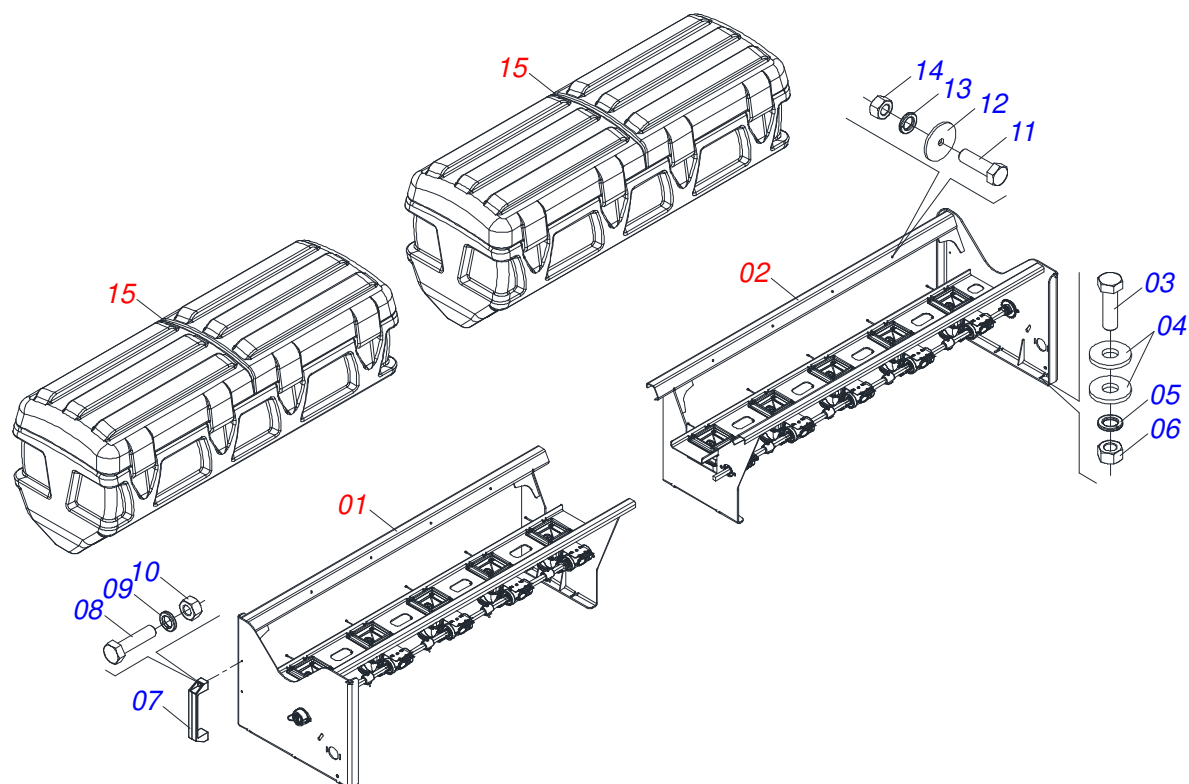


Item	Code	Description	See page	QT
01	0531059676	RIGHT HOPPER SUPPORT WITH FERTILIZER 49 METERING - 4045		01
02	0531059675	LEFT HOPPER SUPPORT WITH FERTILIZER 50 METERING - 4045		01
03	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		10
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		20
05	0503010025	3/8 SPRING WASHER		10
06	0503010026	3/8" NUT		10
07	0503011957	NYLON HANDLE		02
08	0503018441	5/16" X 1-1/4" BOLT		04
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
10	0503010337	5/16" NUT		04
11	0503013751	3/8 UNC X 1.1/4 BOLT		16
12	0571019051	FIXER HOPPER WASHER		16
13	0503012535	3/8" SPRING WASHER		16
14	0503012531	3/8" INOX NUT		16
15	0503062391	FERTILIZER HOPPER	52	02

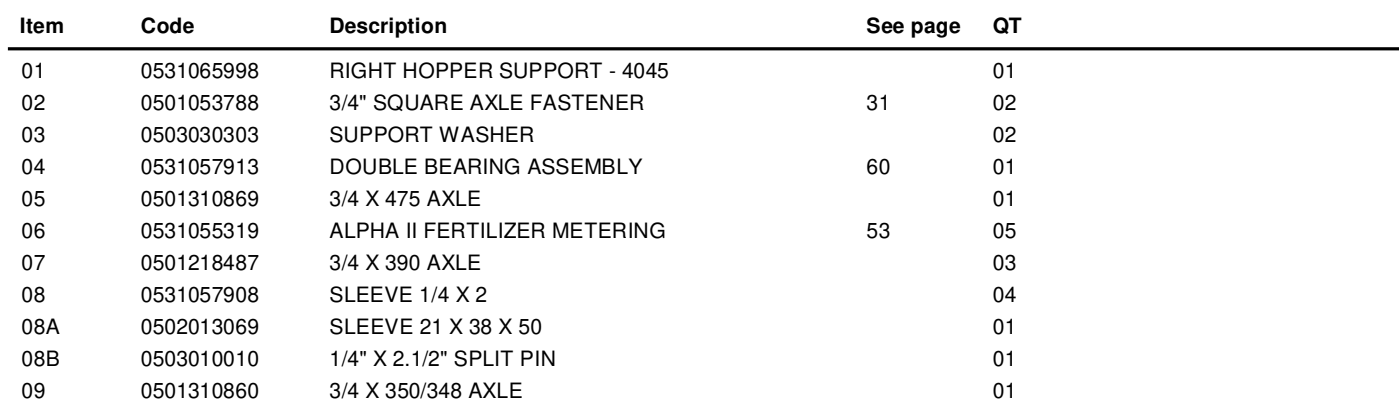

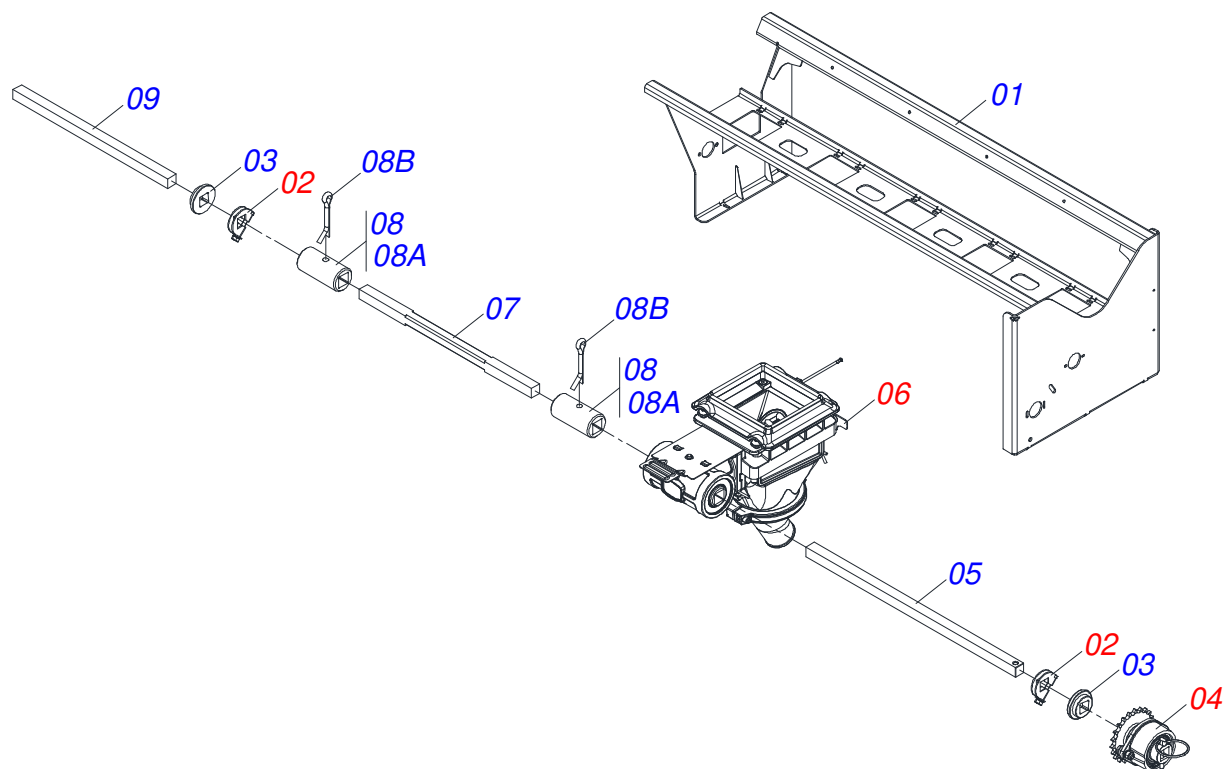


Item	Code	Description	See page	QT
01	0531065999	LEFT HOPPER SUPPORT - 4045		01
02	0501053788	3/4" SQUARE AXLE FASTENER	31	02
03	0503030303	SUPPORT WASHER		02
04	0531057913	DOUBLE BEARING ASSEMBLY	60	01
05	0501310869	3/4 X 475 AXLE		01
06	0531055319	ALPHA II FERTILIZER METERING	53	05
07	0501218487	3/4 X 390 AXLE		03
08	0531057908	SLEEVE 1/4 X 2		04
08A	0502013069	SLEEVE 21 X 38 X 50		01
08B	0503010010	1/4" X 2.1/2" SPLIT PIN		01
09	0501310860	3/4 X 350/348 AXLE		01

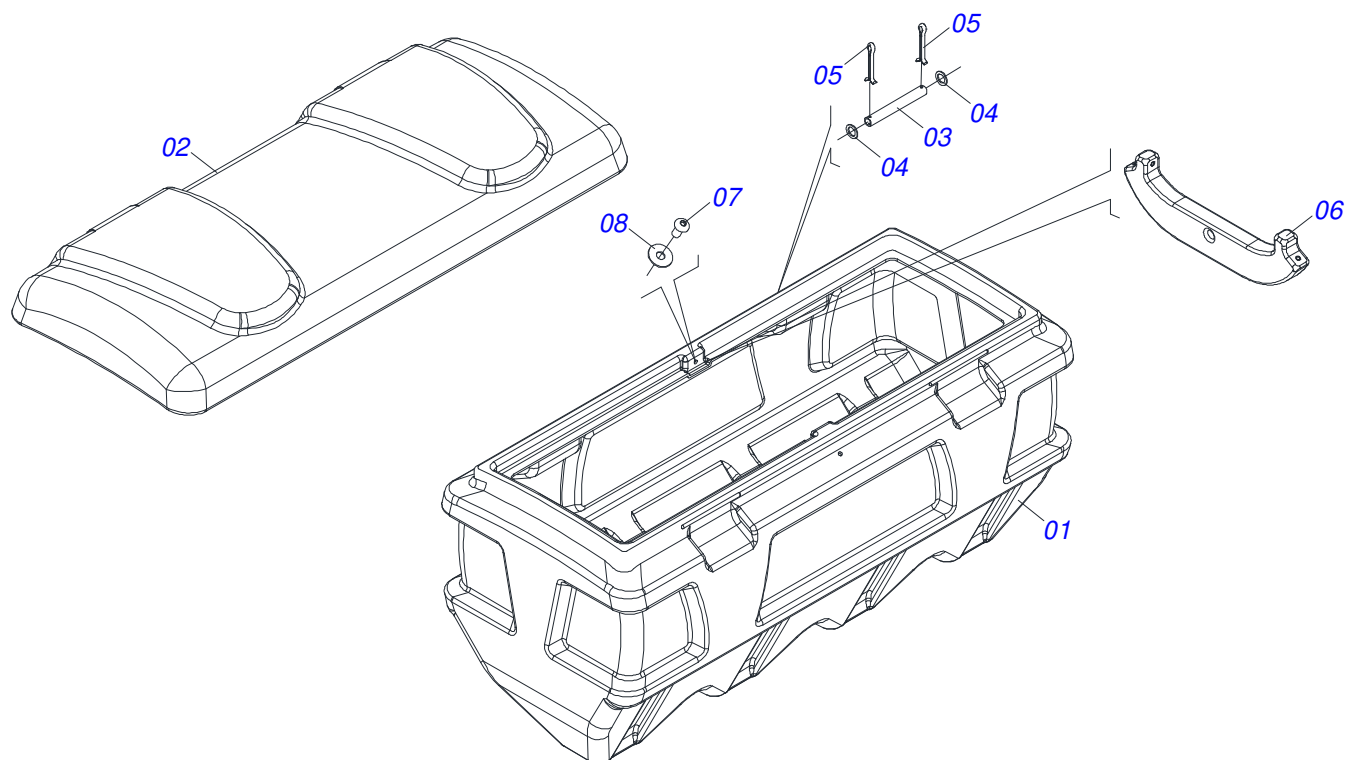


Item	Code	Description	See page	QT
01	0503034085	BEAN FERTILIZER ASSY		01
02	0503034086	HOPPER LID		01
03	0503034087	LID ARTICULATING TUBE		02
04	0503034088	WASHER		04
05	0503010131	3/16" X 1.1/2" SPLIT PIN		04
06	0503034130	PLATE		01
07	0503032053	BOLT C.A.S.I		04
08	0503034220	FLAT WASHER		04

FERTILIZER HOPPER

0503062391

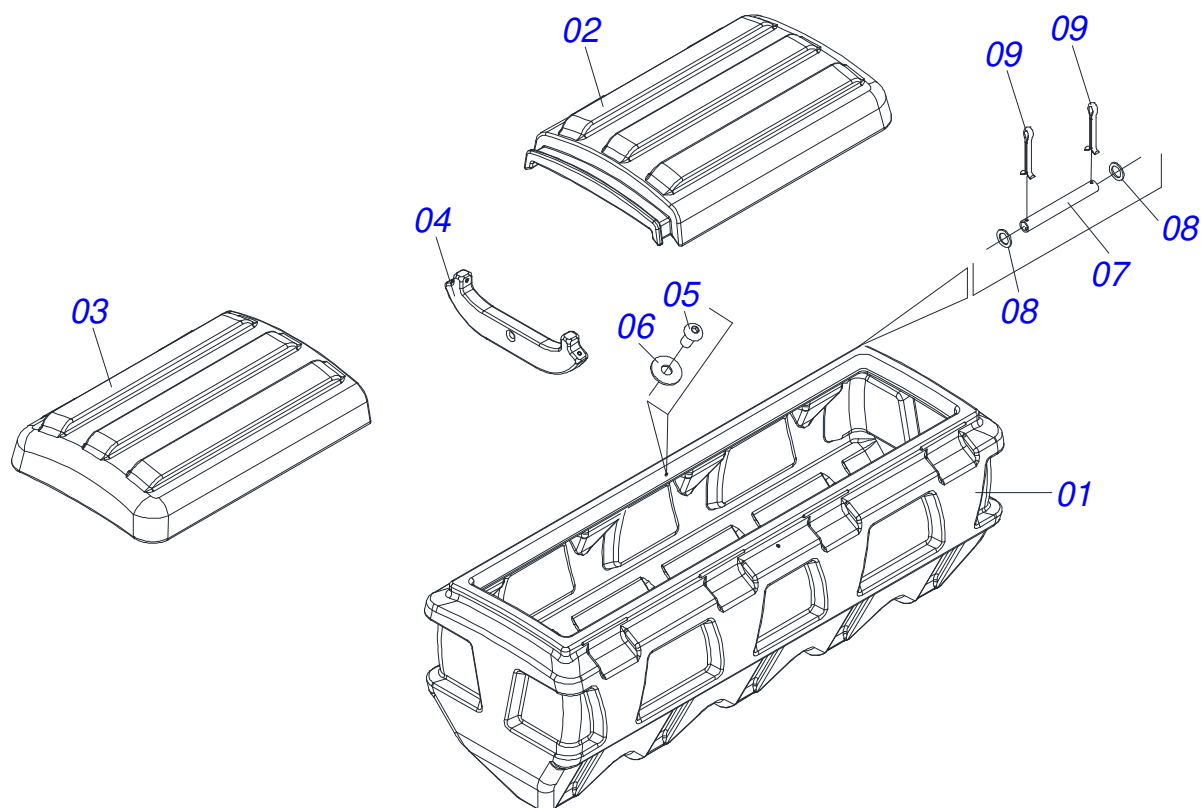


Item	Code	Description	See page	QT
01	0503034127	FERTILIZER HOPPER		01
02	0503034129	LOWER HOPPER LID		01
03	0503034128	UPPER HOPPER LID		01
04	0503034130	PLATE		01
05	0503032053	BOLT C.A.S.I		04
06	0503034220	FLAT WASHER		04
07	0503034087	LID ARTICULATING TUBE		04
08	0503034088	WASHER		08
09	0503010131	3/16" X 1.1/2" SPLIT PIN		08

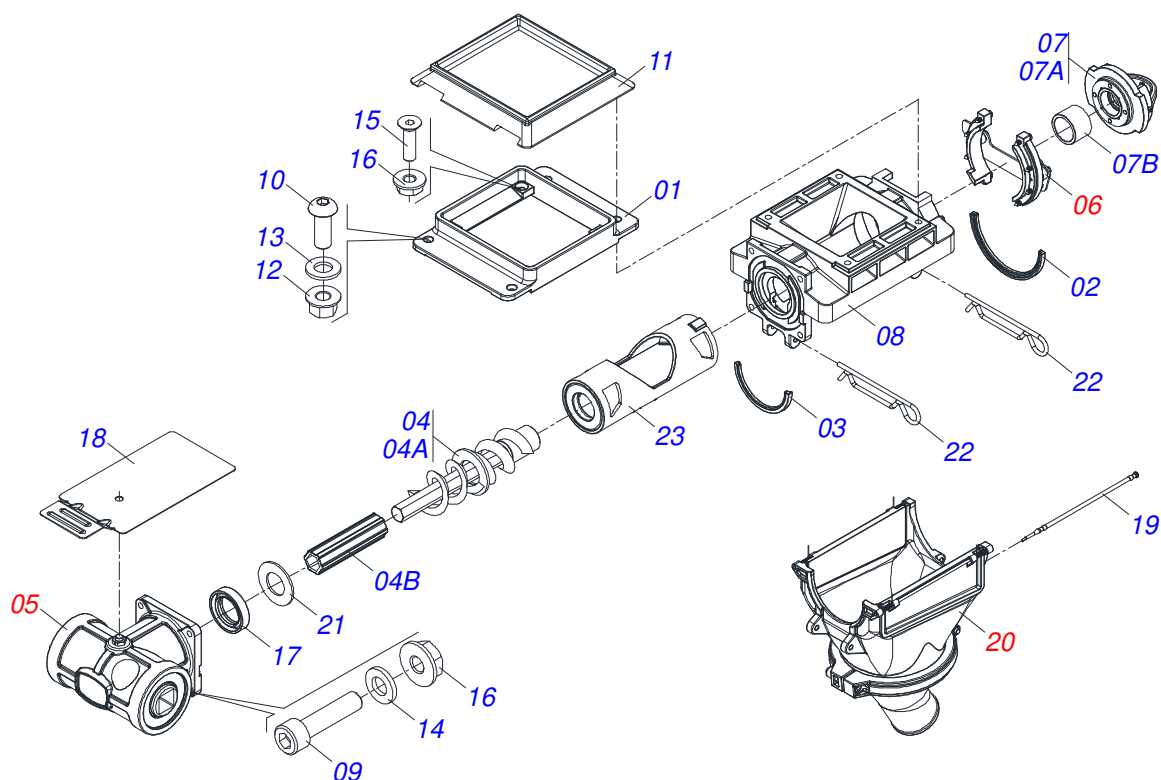


Item	Code	Description	See page	QT
01	0503035913	METERING BODY FIXING ADAPTER		01
02	0503035911	REAR COLLECTOR SEAL		01
03	0503035912	FRONT COLLECTOR SEAL		01
04	0531055518	WORM THREAD ASSEMBLED		01
04A	0531064265	WORM THREAD		01
04B	0503035859	SUPPORT SLEEVE		01
05	0531055863	ASSY TRANSMISSION HUB	54	01
06	0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	55	01
07	0501111134	LID WITH ALPHA FERTILIZER METERING GUIDE SLEEVE		01
07A	0503063799	LID WITH FERTILIZER METERING WASHER ALPHA		01
07B	0503035822	GUIDE SLEEVE SPRING CONDUCTOR		01
08	0501214337	FERTILIZER METERING BOX		01
09	0513011169	ALLEN SCREW 1/4 UNC X 1 CCSI STAINLESS STEEL		04
10	0513011172	ALLEN SCREW 3/8 UNC X 1 CASI STAINLESS STEEL		04
11	0503035931	FERTILIZER METERING SEAL		01
12	0513011173	NUT 3/8 UNC X 1		04
13	0513011174	FLAT WASHER 10.50 X 20 X 2.00 STAINLESS STEEL		05
14	0513011167	FLAT WASHER 6.4 X 12 X 1.60 STAINLESS STEEL		04
15	0513011170	ALLEN SCREW 1/4 UNC X 7/8 CCSI STAINLESS STEEL		04
16	0513011171	1/4 NC HEX NUT		08
17	0503036181	30 X 47 X 6.50 SEAL SUPPLEMENT		01
18	0501310211	FRONT LID		01
19	0503036177	LID CORD		01
20	0531059139	ASSY COLLECTOR	56	01
21	0501310274	FLAT WASHER 46.10 X 32 X 0.80		01
22	0503035797	FRONT COLLECTOR FIXER		02
23	0501111195	GRANULATED FERTILIZER COATING		01

ASSY TRANSMISSION HUB


0531055863

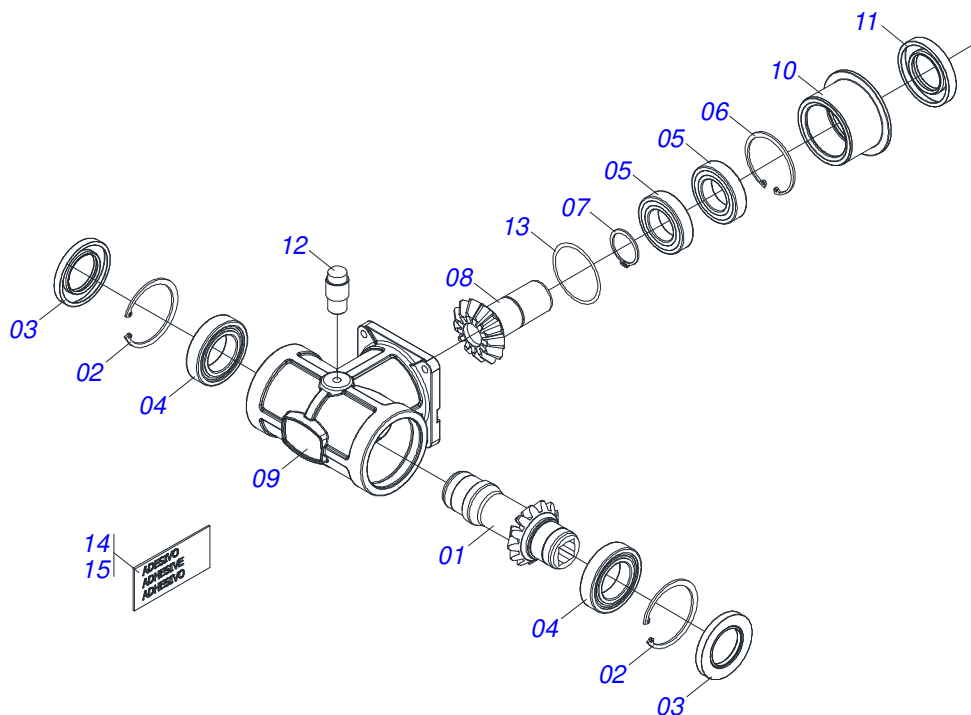


Item	Code	Description	See page	QT
01	0502013056	CONICAL PINION MOTOR 13Z ALPHA FERTILIZER METERING		01
02	0503011800	SEAL RING		02
03	0513010740	RETAINER 62 X 35 X 7 BRG 7159		02
04	0503016065	ROLLER BEARING		02
05	0503019373	6006 2RS1 NATIONAL BEARING		02
06	0503012858	502075 CLAMPING RING (FOR HOLE)		01
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01
08	0501111141	GEAR WITH ALPHA FERTILIZER METERING CAP		01
09	0501215105	METERING TRANSMISSION HUB		01
10	0501215104	TRANSMISSION HUB SLEEVE		01
11	0513011272	SEAL 7435-BRG 30 X 55 X 8.00MM		01
12	0501219613	FIXER BREATHER COVER		01
13	0513011248	RING RING 62.00 X 1.50		01
14	0503036071	TATU LOGO ADHESIVE LABEL 41.5 X 29		01
15	0503035316	LUBRICATED POINTS ADHESIVE LABEL		01

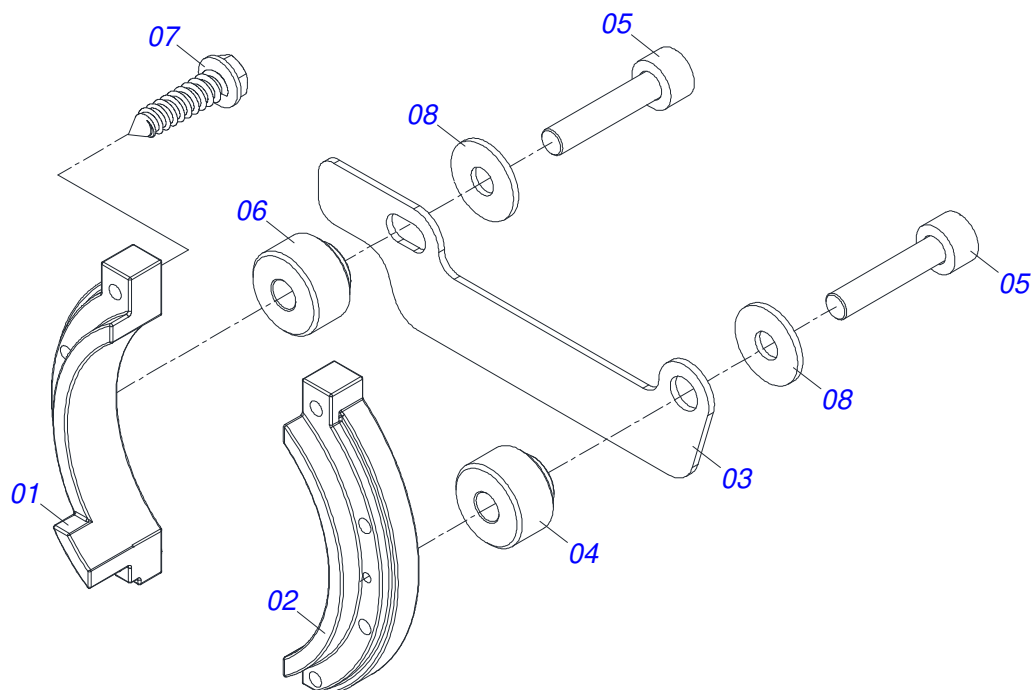


Item	Code	Description	See page	QT
01	0503035915	RIGHT FERTILIZER METERING LID GUIDE		01
02	0503035916	LEFT GUIDE DISPENSER COVER		01
03	0501310245	ALPHA FERTILIZER DISPENSER COVER LATCH		01
04	0501310247	LEFT SAFETY LOCK SLEEVE		01
05	0513011249	ALLEN SCREW M4 X 20 CCSI STAINLESS STEEL		02
06	0501310246	RIGHT SAFETY LOCK SLEEVE		01
07	0513011507	FLANGED HEX SCREW AT 3.5 X 19 STAINLESS STEEL		08
08	0513011518	FLAT WASHER M4 STAINLESS STEEL AISI 304 4.3 X 12 X 1 MM		01

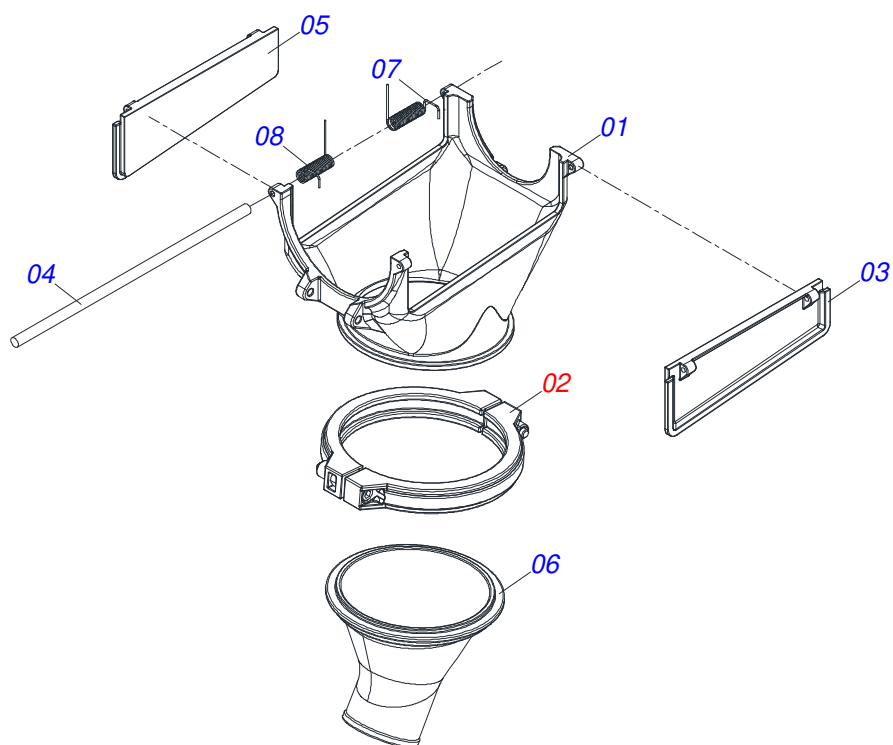


Item	Code	Description	See page	QT
01	0503036178	DISPENSER SIDE COVER COLLECTOR		01
02	0531055273	ALPHA FERTILIZER METERING CLAMP	57	01
03	0503036166	DISPENSER RIGHT SIDE COVER		01
04	0501219838	COLLECTOR SIDE LID AXLE		02
05	0503036167	DISPENSER LEFT SIDE COVER		01
06	0503036180	ALPHA FERTILIZER DOSING NOZZLE 50MM		01
07	0503036203	RIGHT TORSION SPRING DISPENSER SIDE COVER		02
08	0503036202	LEFT TORSION SPRING SIDE COVER		02

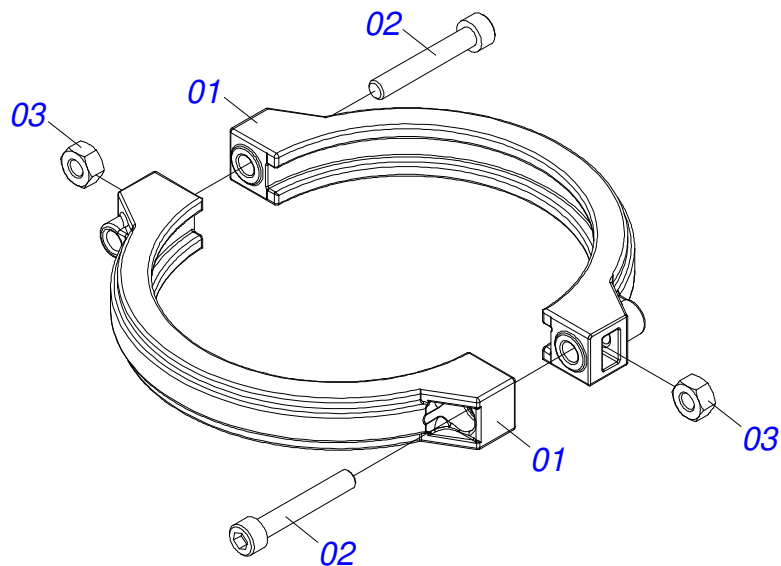


Item	Code	Description	See page	QT
01	0503035812	BODY CLAMP COLLECTOR FERTILIZER METERING ALPHA		02
02	0513010691	ALLEN SCREW 1/4 UNC X 1.1/2 CCSI INOX		02
03	0503012118	1/4" INOX NUT		02

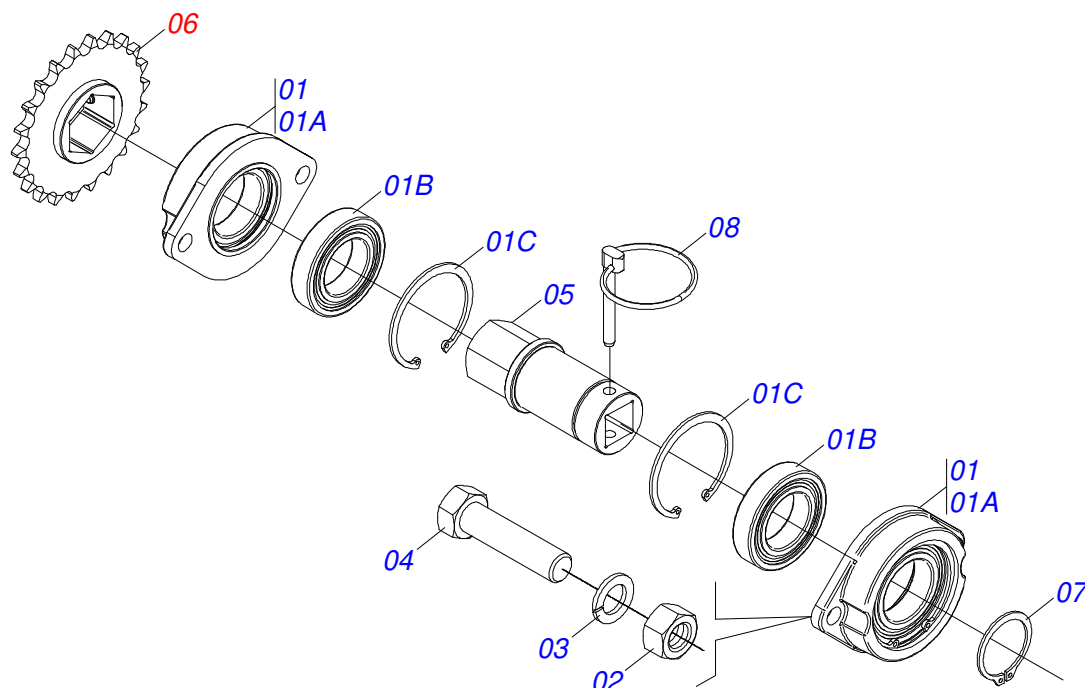


Item	Code	Description	See page	QT
01	0531057910	SIDE BEARING WITH BEARING 6007		02
01A	0502013070	SIDE FERTILIZER HOPPER SUPPORT BEARING		01
01B	0503016065	ROLLER BEARING		01
01C	0503011800	SEAL RING		01
02	0503010337	5/16" NUT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0502013067	SIDE BEARING AXLE FERTILIZER HOPPER SUPPORT		01
06	0531057901	GEAR	59	01
07	0503010845	501035 CLAMPING RING (FOR AXLE)		01
08	0503030119	LOCK PIN		01

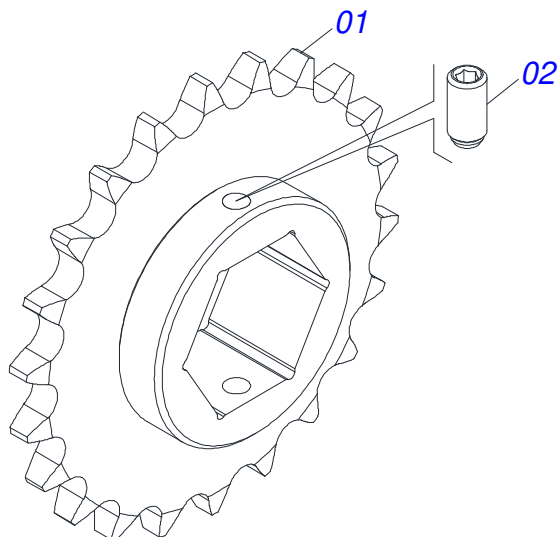


Item	Code	Description	See page	QT
01	0531065402	GEAR		01
02	0503013958	1/4" X 1" BOLT		02

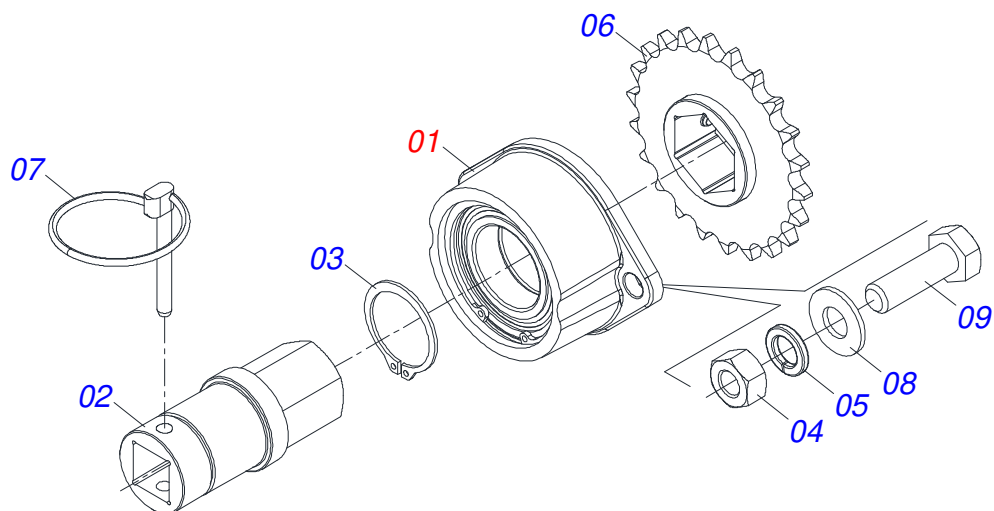


Item	Code	Description	See page	QT
01	0531057912	DOUBLE SIDE BEARING	61	01
02	0502013068	SIDE BEARING SHAFT		01
03	0503010845	501035 CLAMPING RING (FOR AXLE)		01
04	0503010337	5/16" NUT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0531057901	GEAR	59	01
07	0503030119	LOCK PIN		01
08	0501010694	FLAT WASHER		02
09	0503010371	5/16" X 1" BOLT		02

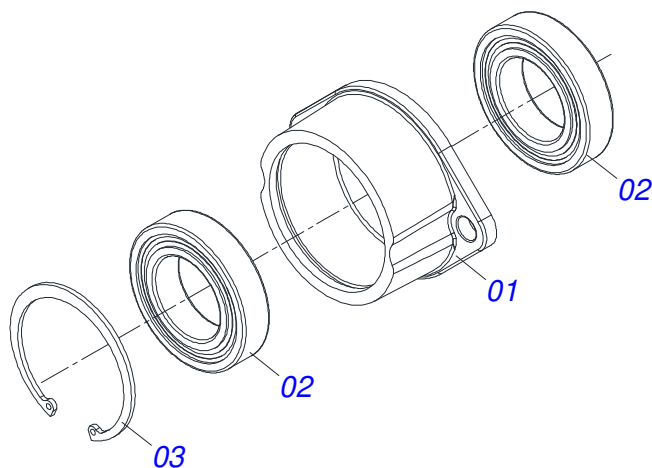

Item	Code	Description	See page	QT
01	0502013071	SIDE BEARING		01
02	0503016065	ROLLER BEARING		02
03	0503011800	SEAL RING		01

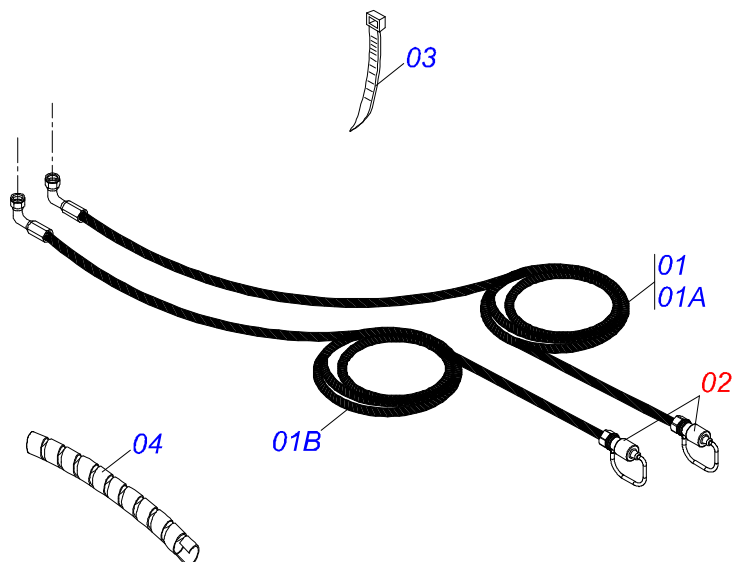


Item	Code	Description	See page	QT
01	0511057267	HOSE KIT HYDRAULIC		01
01A	0501080722	3/8 X 3300 TC-TM HOSE ASSY		01
01B	0501082023	HOSE 3/8 X 3600 TC-TM		01
02	0501053834	MALE QUICK COUPLER	68	02
03	0503013100	NYLON CLAMP		02
04	0571017774	SPRING PROTECTION QUICK HOSE		01

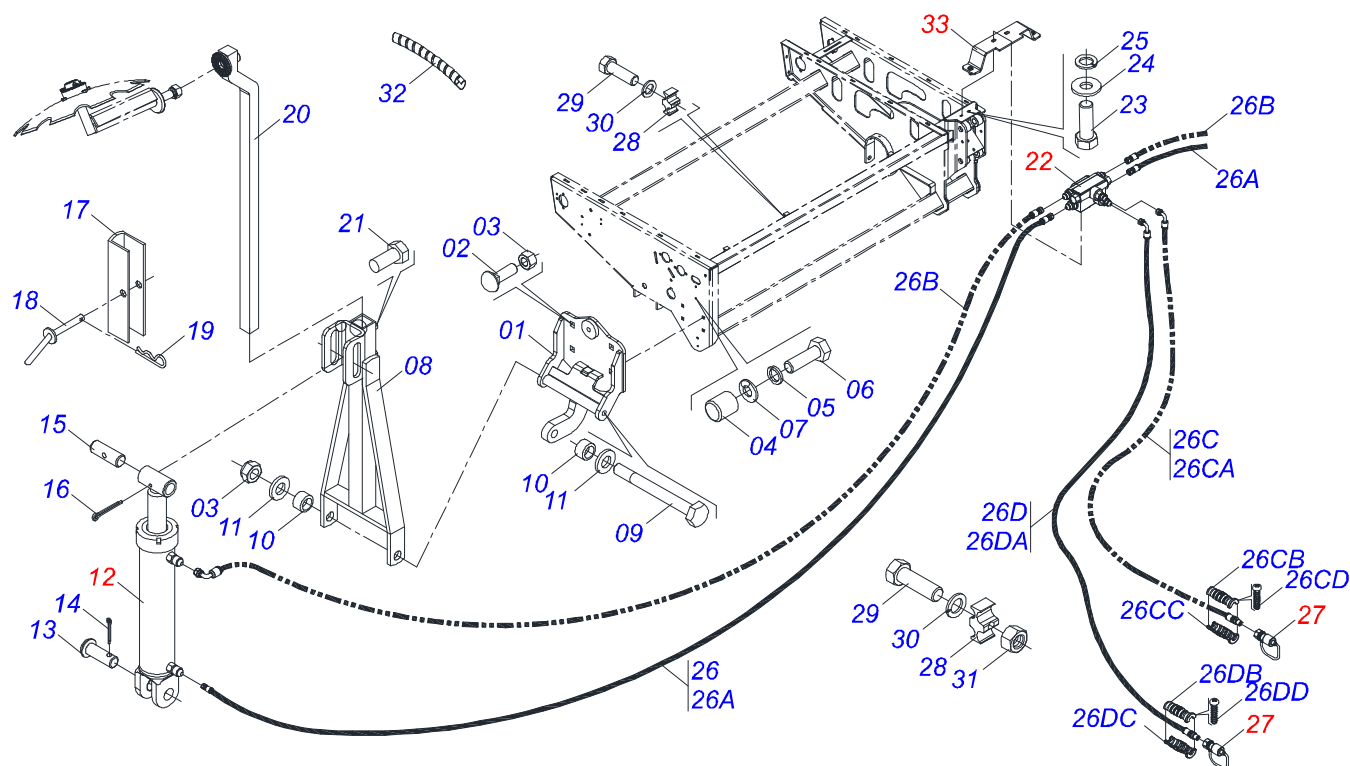


Item	Code	Description	See page	QT
01	0521066622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
03	0503012412	5/8" UNC SELF LOCKING NUT		06
04	0503011070	BEATER		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07	0551019213	FLAT WASHER		02
08	0501069470	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0501012140	FLAT WASHER		04
12	0511058449	HYDRAULIC CYLINDER	66	02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
14	0503010523	1/4" X 2" SPLIT PIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010523	1/4" X 2" SPLIT PIN		02
17	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
18	0501068994	8,30 X 78 LOCK PIN		02
19	0503030168	HITCH PIN CLIP		02
20	0501069643	890 TURNBUCKLE		02
21	0503011854	5/8" X 1-1/4" BOLT		04
22	0501054649	HBM SEQUENTIAL VALVE	67	01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
24	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
25	0503010025	3/8 SPRING WASHER		02
26	0511057208	HYDRAULIC MARKER HOSE KIT - 3245		01
26A	0501080452	3/8" X 98" TR-TR HOSE		02
26B	0501080414	3/8" X 110.2" TR-TC HOSE ASSY		02
26C	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		01
26CA	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
26CB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01

Item	Code	Description	See page	QT
26CC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
26CD	0503018952	PLASTIC BOLT		06
26D	0521052850	3/8 X 4200 TC-TM PURPLE/BLUE HOSE		01
26DA	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
26DB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
26DC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
26DD	0503018952	PLASTIC BOLT		06
27	0501053834	MALE QUICK COUPLER	68	02
28	0502012702	BODY SUPPORT CLAMP		08
29	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		08
30	0503010180	7/16" SPRING WASHER		08
31	0503010244	7/16" NUT		02
32	0571014419	PLASTIC PROTECTION SPRING HOSE 3/4 X 700MM		04
33	0511058119	VALVE SUPPORT ASSEMBLY	69	01

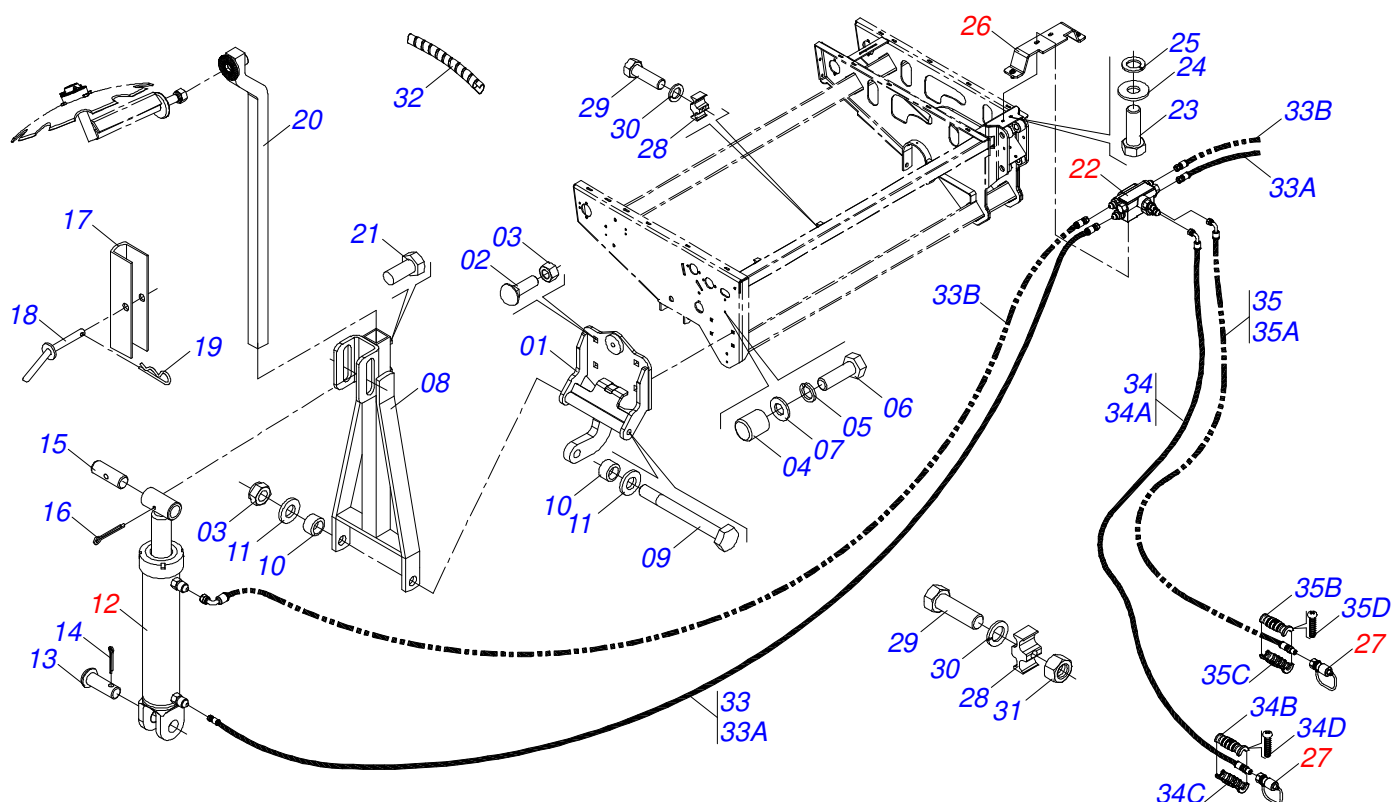


Item	Code	Description	See page	QT
01	0521066622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
03	0503012412	5/8" UNC SELF LOCKING NUT		04
04	0503011070	BEATER		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07	0551019213	FLAT WASHER		02
08	0501069470	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0501012140	FLAT WASHER		04
12	0511058449	HYDRAULIC CYLINDER	66	02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
14	0503010523	1/4" X 2" SPLIT PIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010523	1/4" X 2" SPLIT PIN		02
17	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
18	0501068994	8,30 X 78 LOCK PIN		02
19	0503030168	HITCH PIN CLIP		02
20	0501069643	890 TURNBUCKLE		02
21	0503011854	5/8" X 1-1/4" BOLT		04
22	0501054649	HBM SEQUENTIAL VALVE	67	01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
24	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
25	0503010025	3/8 SPRING WASHER		02
26	0511058119	VALVE SUPPORT ASSEMBLY	69	01
27	0501053834	MALE QUICK COUPLER	68	02
28	0502012702	BODY SUPPORT CLAMP		08
29	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		08
30	0503010180	7/16" SPRING WASHER		08
31	0503010244	7/16" NUT		02

Item	Code	Description	See page	QT
32	0571014419	PLASTIC PROTECTION SPRING HOSE 3/4 X 700MM		04
33	0511057367	HOSE KIT MARKER HYDRAULIC		01
33A	0501080296	3/8" X 106" TR-TR HOSE		02
33B	0501080397	3/8" X 120" TR-TC HOSE		02
34	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		01
34A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
34C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
34D	0503018952	PLASTIC BOLT		06
35	0521052850	3/8 X 4200 TC-TM PURPLE/BUE HOSE		01
35A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
35B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
35C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
35D	0503018952	PLASTIC BOLT		06

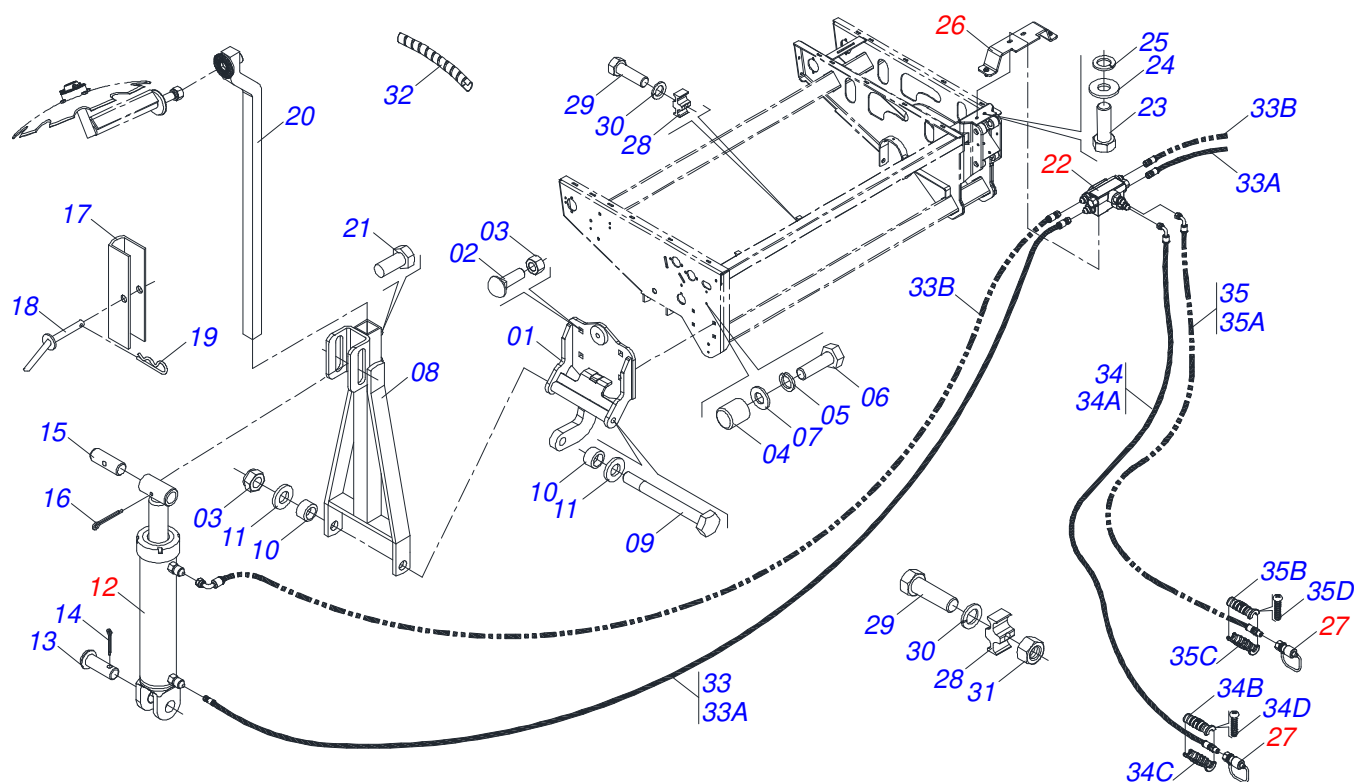


Item	Code	Description	See page	QT
01	0521066622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
03	0503012412	5/8" UNC SELF LOCKING NUT		04
04	0503011070	BEATER		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07	0551019213	FLAT WASHER		02
08	0501069470	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0501012140	FLAT WASHER		04
12	0511058449	HYDRAULIC CYLINDER	66	02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
14	0503010523	1/4" X 2" SPLIT PIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010523	1/4" X 2" SPLIT PIN		02
17	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
18	0501068994	8,30 X 78 LOCK PIN		02
19	0503030168	HITCH PIN CLIP		02
20	0501069643	890 TURNBUCKLE		02
21	0503011854	5/8" X 1-1/4" BOLT		04
22	0501054649	HBM SEQUENTIAL VALVE	67	01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
24	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
25	0503010025	3/8 SPRING WASHER		02
26	0511058119	VALVE SUPPORT ASSEMBLY	69	01
27	0501053834	MALE QUICK COUPLER	68	02
28	0502012702	BODY SUPPORT CLAMP		08
29	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		08
30	0503010180	7/16" SPRING WASHER		08
31	0503010244	7/16" NUT		02


Item	Code	Description	See page	QT
32	0571014419	PLASTIC PROTECTION SPRING HOSE 3/4 X 700MM		04
33	0511057312	HOSE KIT MARKER HYDRAULIC		
33A	0501081727	TR-TR HOSE ASSY		02
33B	0501080408	HOSE 3/8 X 3200 TR-TC		02
34	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		01
34A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
34C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
34D	0503018952	PLASTIC BOLT		06
35	0521052850	3/8 X 4200 TC-TM PURPLE/BLEU HOSE		01
35A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
35B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
35C	0503034494	HYDRAULIC HOSE GRIP (BLEU)		01
35D	0503018952	PLASTIC BOLT		06

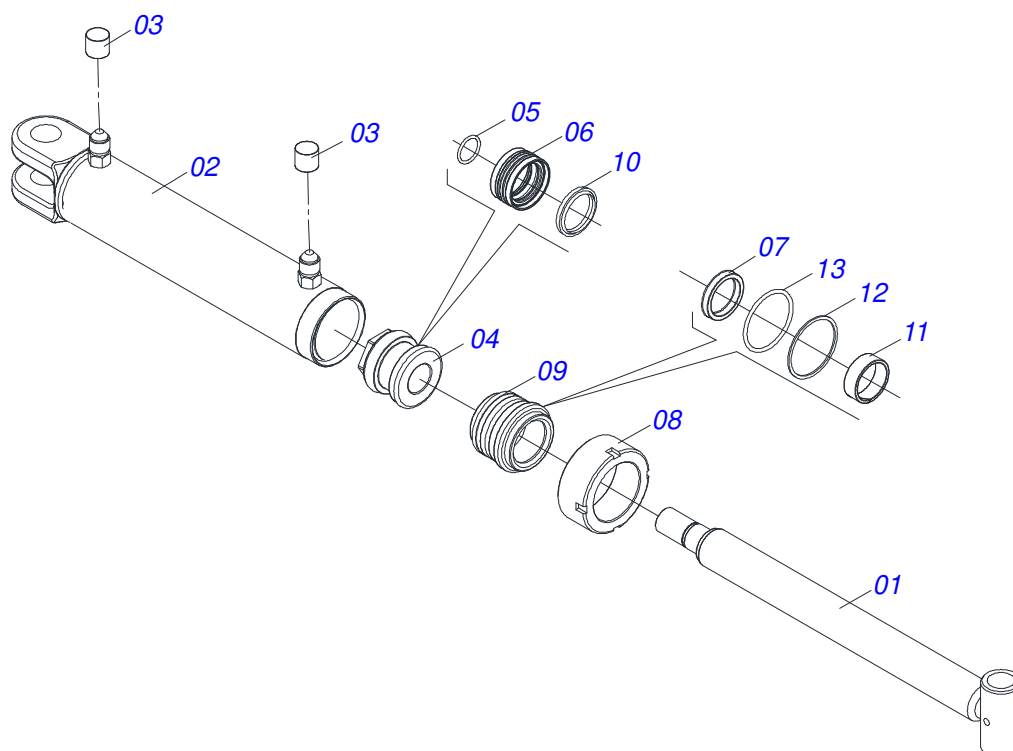


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

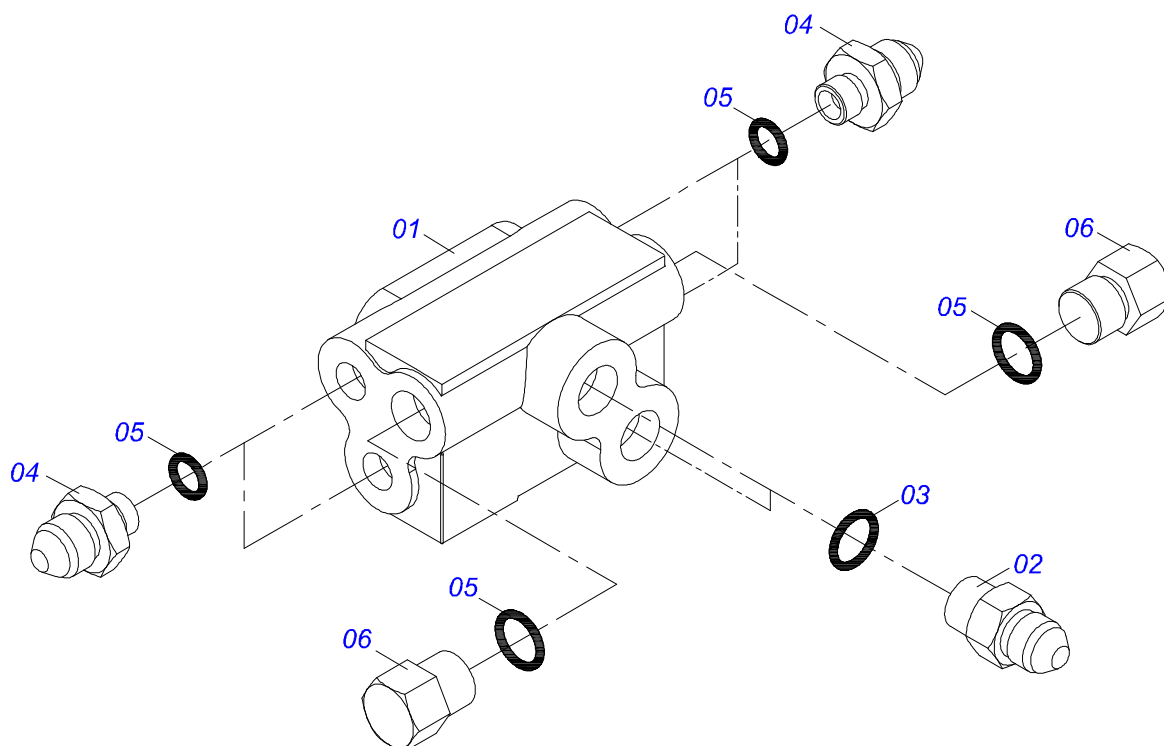


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

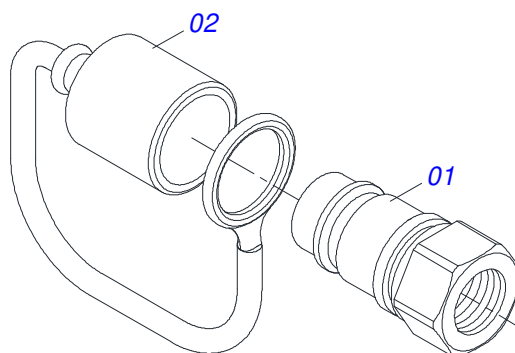


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

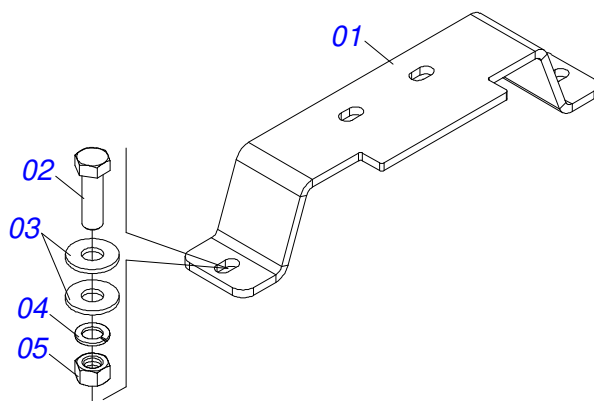


Item	Code	Description	See page	QT
01	0581010011	VALVE FIXING SUPPORT		01
02	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
04	0503010025	3/8 SPRING WASHER		02
05	0503010026	3/8" NUT		02

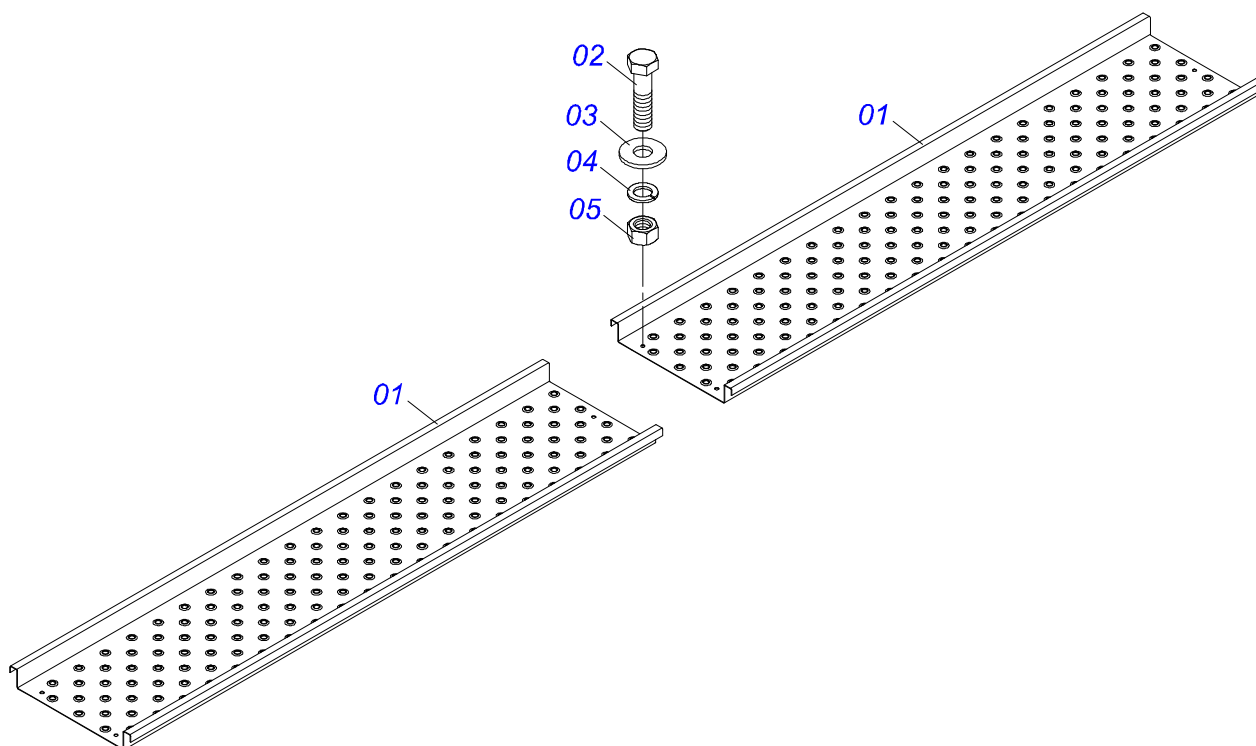


Item	Code	Description	See page	QT
01	0571018864	PLATFORM - 3245		02
02	0503010237	3/8" X 1" BOLT		08
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
04	0503010025	3/8 SPRING WASHER		08
05	0503010026	3/8" NUT		08

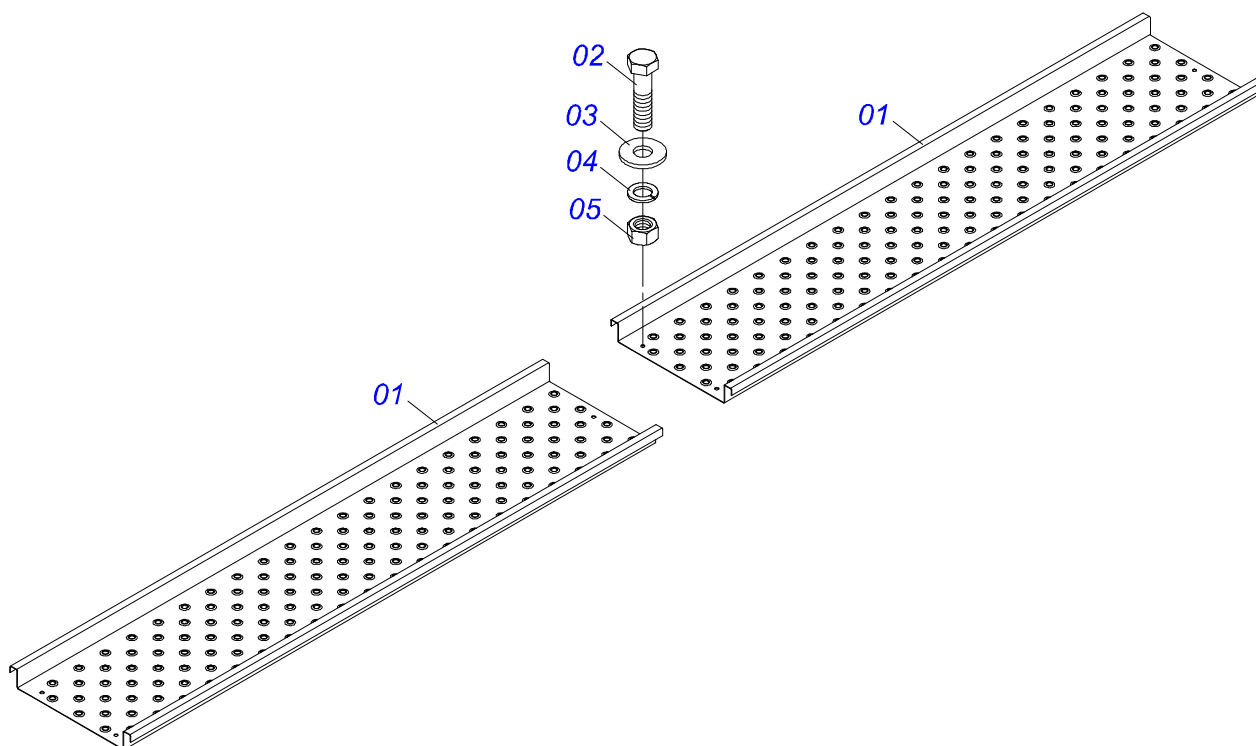


Item	Code	Description	See page	QT
01	0571018865	PLATFORM - 3495		02
02	0503010237	3/8" X 1" BOLT		08
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
04	0503010025	3/8 SPRING WASHER		08
05	0503010026	3/8" NUT		08

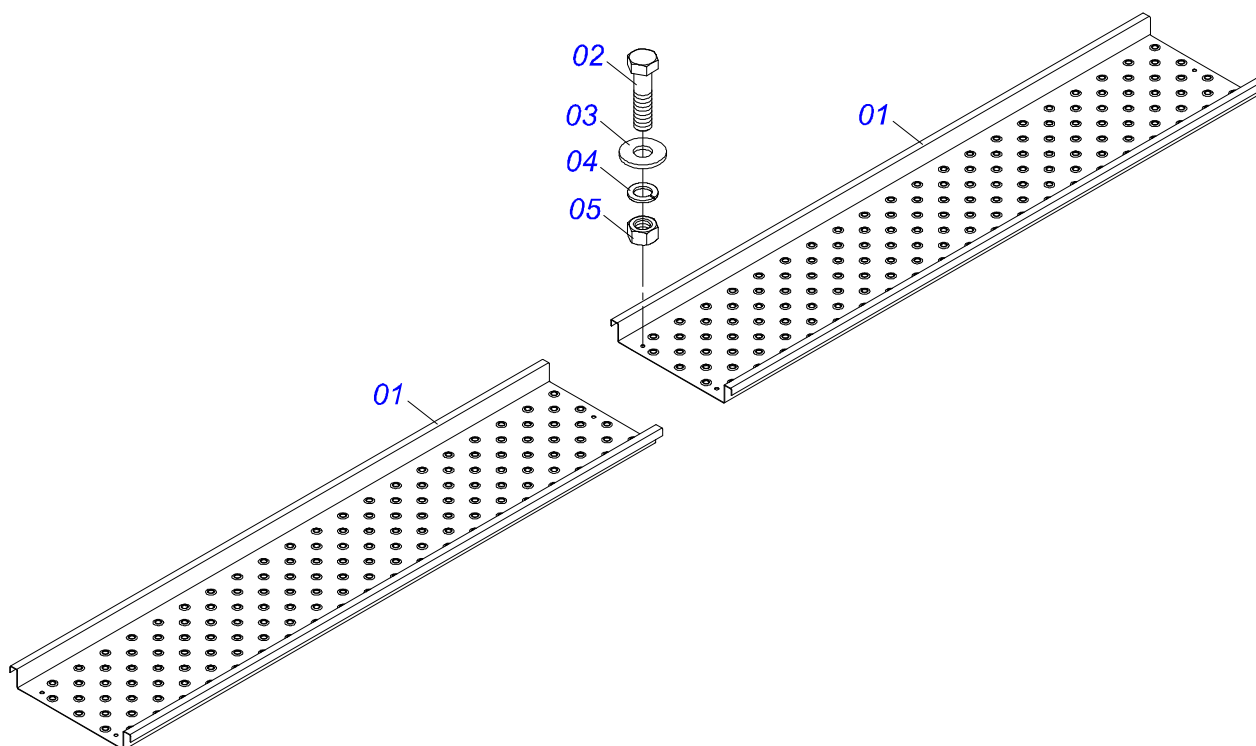

Item	Code	Description	See page	QT
01	0571018866	PLATFORM - 4045		02
02	0503010237	3/8" X 1" BOLT		08
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
04	0503010025	3/8 SPRING WASHER		08
05	0503010026	3/8" NUT		08

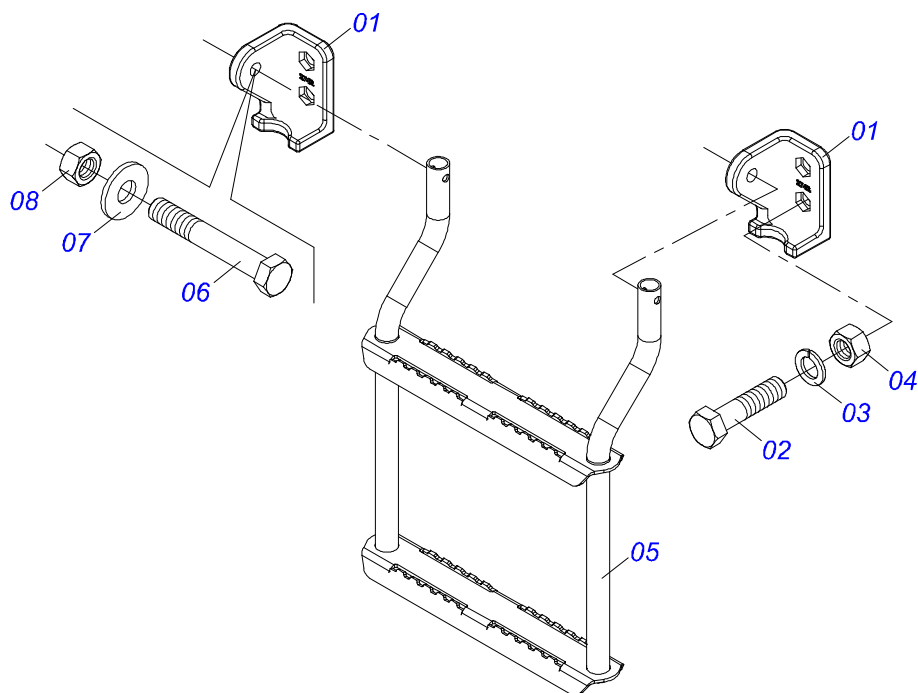


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8 SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER	02	
08	0503013357	3/8 SELF-ADJUSTING NUT	02	

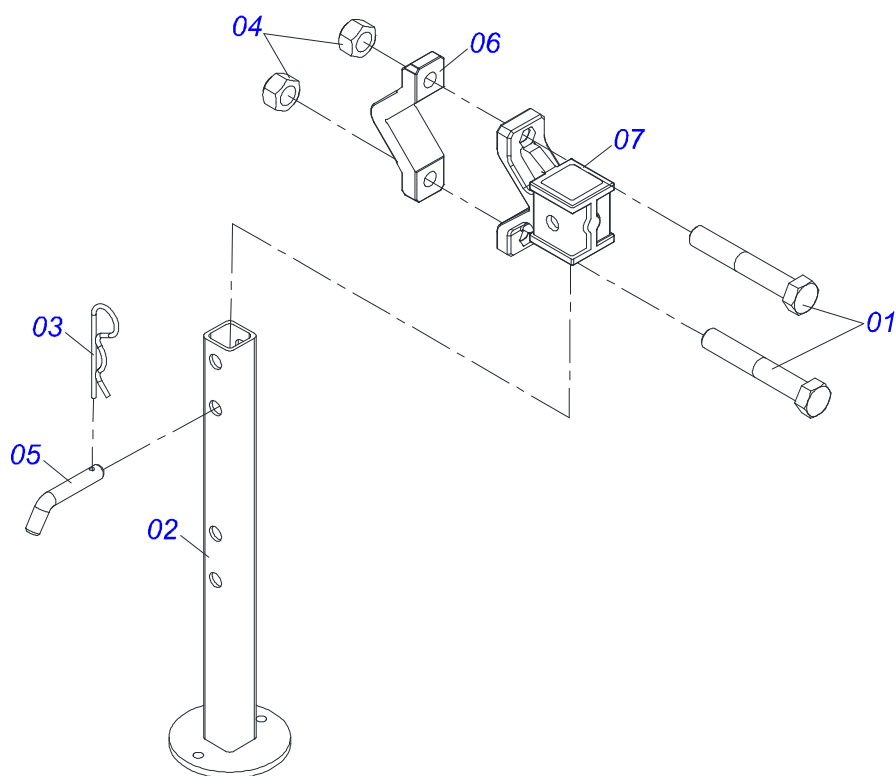


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HITCH PIN CLIP		01
04	0503012412	5/8" UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

DRAWBAR ASSEMBLY - 3245


0511057229

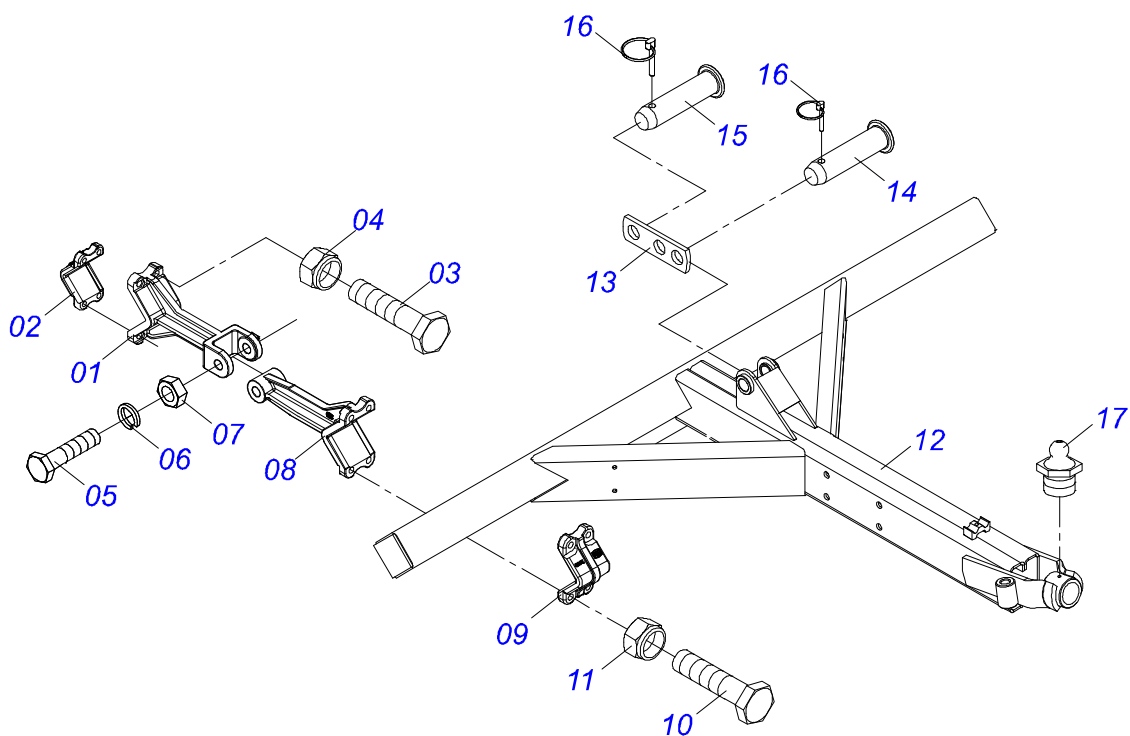

Item	Code	Description	See page	QT
01	0502012806	SUPPORT REAR FIXER DRAWBAR	02	
02	0502012789	FIXER SUPPORT FERTILIZER ROW	02	
03	0503017960	5/8" X 3-12" BOLT	08	
04	0503010811	5/8" UNF SELF ADJUSTING NUT	08	
05	0501010191	1" X 6" BOLT	02	
06	0503010012	1" SPRING WASHER	02	
07	0501010059	1.5/8 NUT	02	
08	0502012805	SUPPORT FRONT FIXER DRAWBAR	02	
09	0502012789	FIXER SUPPORT FERTILIZER ROW	02	
10	0503017960	5/8" X 3-12" BOLT	08	
11	0503010811	5/8" UNF SELF ADJUSTING NUT	08	
12	0521065958	DRAWBAR	01	
13	0561019087	DRAWBAR TRANSPORT LOCK	01	
14	0551014099	COUPLING SHAFT 31,75 X 185	01	
15	0521010544	1.2" X 4.9" COUPLING SHAFT	01	
16	0503030085	LOCK PIN	02	
17	0503010002	1800 GREASE FITTING	01	

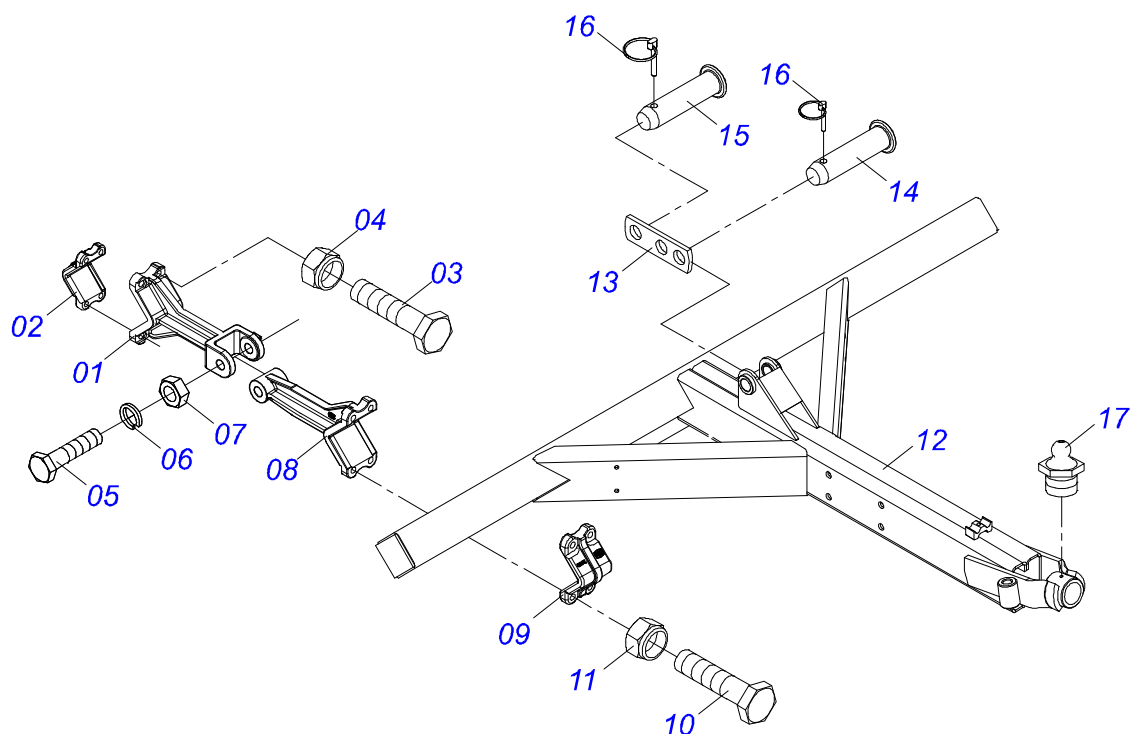


Item	Code	Description	See page	QT
01	0502012806	SUPPORT REAR FIXER DRAWBAR		04
02	0502012789	FIXER SUPPORT FERTILIZER ROW		04
03	0503017960	5/8" X 3-12" BOLT		16
04	0503010811	5/8" UNF SELF ADJUSTING NUT		16
05	0501010191	1" X 6" BOLT		04
06	0503010012	1" SPRING WASHER		04
07	0501010059	1.5/8 NUT		04
08	0502012805	SUPPORT FRONT FIXER DRAWBAR		04
09	0502012789	FIXER SUPPORT FERTILIZER ROW		04
10	0503017960	5/8" X 3-12" BOLT		16
11	0503010811	5/8" UNF SELF ADJUSTING NUT		16
12	0521065958	DRAWBAR		01
13	0561019087	DRAWBAR TRANSPORT LOCK		01
14	0551014099	COUPLING SHAFT 31,75 X 185		01
15	0521010544	1.2" X 4.9" COUPLING SHAFT		01
16	0503030085	LOCK PIN		02
17	0503010002	1800 GREASE FITTING		01

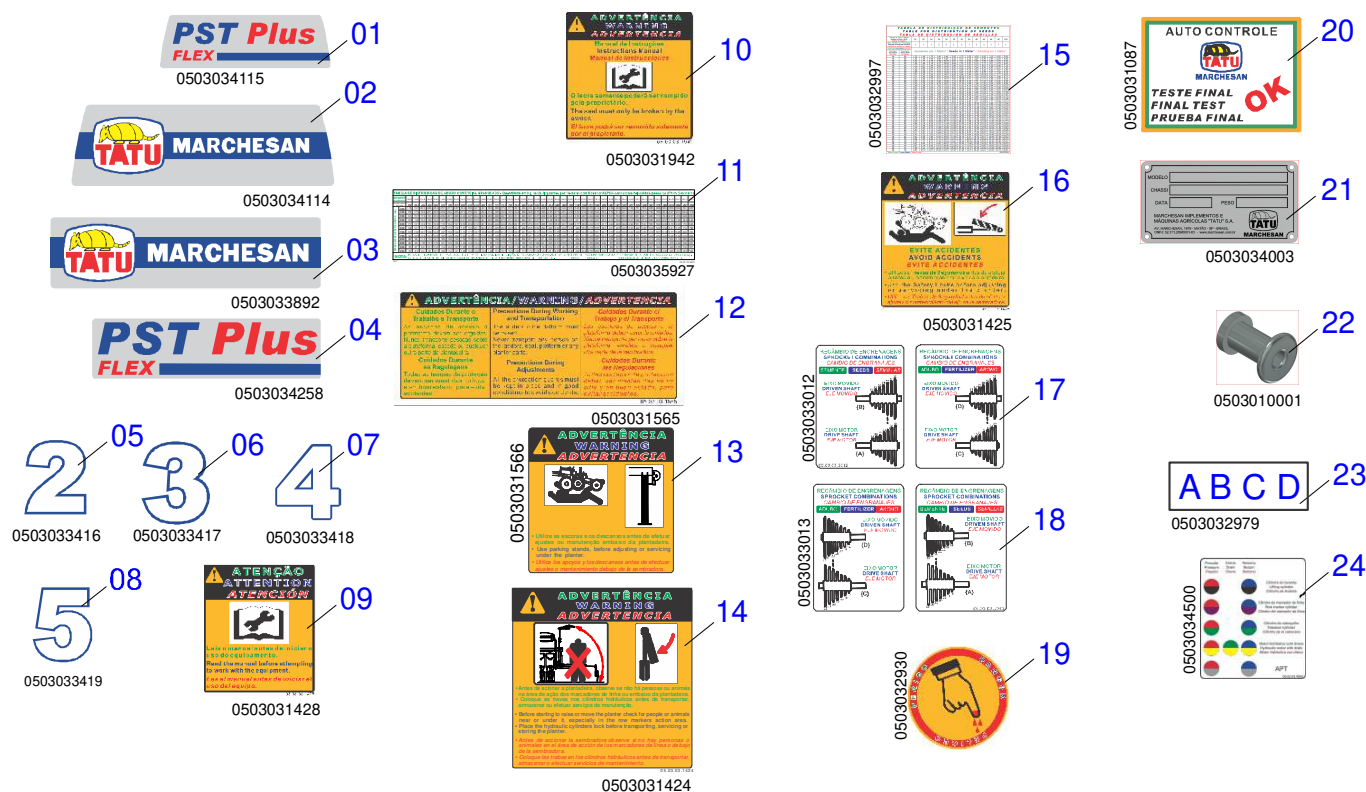


Item	Code	Description	See page	QT
01	0503034115	ADHESIVE LABEL		01
02	0503034114	ADHESIVE LABEL LOGO TATU HOPPER 190 X 530		01
03	0503033892	ADHESIVE LABEL LOGO TATU HOPPER 190 X 720		01
04	0503034258	ADHESIVE LABEL		01
05	0503033416	ADHESIVE LABEL		02
06	0503033417	ADHESIVE LABEL		02
07	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
08	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
09	0503031428	READ MANUAL DECAL		01
10	0503031942	ADHESIVE LABEL		01
11	0503035927	ADHESIVE LABEL TABLE FERTILIZER P27		02
12	0503031565	ADHESIVE LABEL CARE		02
13	0503031566	ADHESIVE LABEL		02
14	0503031424	ADHESIVE LABEL ATTENTION ROW HYDRAULIC MARKER		02
15	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
16	0503031425	ADHESIVE LABEL ATTENTION		02
17	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
18	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
19	0503032930	ADHESIVE LABEL DANGER		04
20	0503031087	ADHESIVE LABEL		01
21	0503034003	SERIAL NUMBER TAG 61 X 118		01
22	0503010001	3.2 X 5.5 RIVET		04
23	0503032979	ADHESIVE LABEL LETTERS A B C D		02
24	0503034500	ADHESIVE LABEL		01




Item	Code	Description	See page	QT
01	0503034115	ADHESIVE LABEL		01
02	0503034114	ADHESIVE LABEL LOGO TATU HOPPER 190 X 530		01
03	0503033892	ADHESIVE LABEL LOGO TATU HOPPER 190 X 720		01
04	0503034258	ADHESIVE LABEL		01
05	0503033416	ADHESIVE LABEL		02
06	0503033417	ADHESIVE LABEL		02
07	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
08	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
09	0503031428	READ MANUAL DECAL		01
10	0503031942	ADHESIVE LABEL		01
11	0503035927	ADHESIVE LABEL TABLE FERTILIZER P27		02
12	0503031565	ADHESIVE LABEL CARE		02
13	0503031566	ADHESIVE LABEL		02
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
15	0503031425	ADHESIVE LABEL ATTENTION		02
16	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
17	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
18	0503032930	ADHESIVE LABEL DANGER		04
19	0503031087	ADHESIVE LABEL		01
20	0503034003	SERIAL NUMBER TAG 61 X 118		01
21	0503010001	3.2 X 5.5 RIVET		04
22	0503032979	ADHESIVE LABEL LETTERS A B C D		02
23	0503034500	ADHESIVE LABEL		01

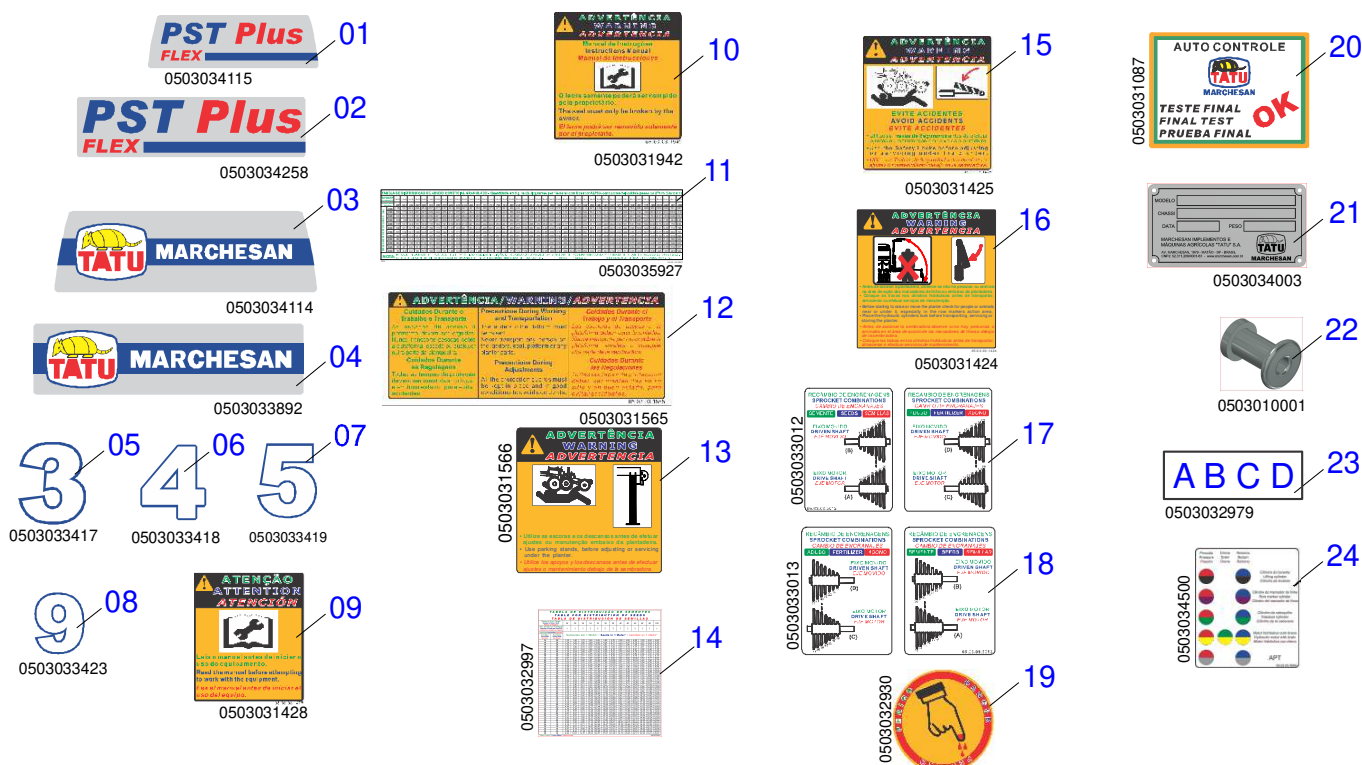


Item	Code	Description	See page	QT
01	0503034115	ADHESIVE LABEL		01
02	0503034258	ADHESIVE LABEL		01
03	0503034114	ADHESIVE LABEL LOGO TATU HOPPER 190 X 530		01
04	0503033892	ADHESIVE LABEL LOGO TATU HOPPER 190 X 720		01
05	0503033417	ADHESIVE LABEL		02
06	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
07	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
08	0503033423	LABEL ADHESIVE NUMBER 9		02
09	0503031428	READ MANUAL DECAL		01
10	0503031942	ADHESIVE LABEL		01
11	0503035927	ADHESIVE LABEL TABLE FERTILIZER P27		02
12	0503031565	ADHESIVE LABEL CARE		02
13	0503031566	ADHESIVE LABEL		02
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
15	0503031425	ADHESIVE LABEL ATTENTION		02
16	0503031424	ADHESIVE LABEL ATTENTION ROW HYDRAULIC MARKER		02
17	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
18	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
19	0503032930	ADHESIVE LABEL DANGER		04
20	0503031087	ADHESIVE LABEL		01
21	0503034003	SERIAL NUMBER TAG 61 X 118		01
22	0503010001	3.2 X 5.5 RIVET		04
23	0503032979	ADHESIVE LABEL LETTERS A B C D		02
24	0503034500	ADHESIVE LABEL		01

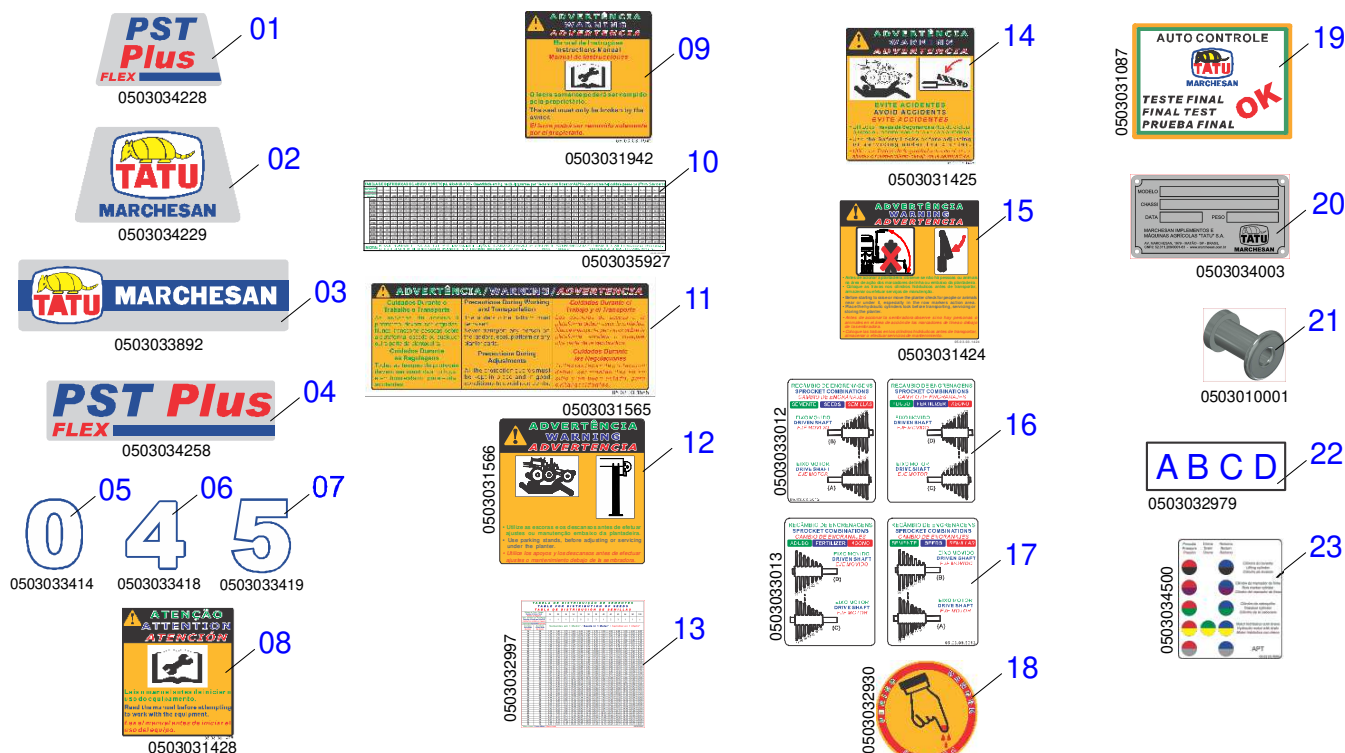


Item	Code	Description	See page	QT
01	0503034228	ADHESIVE LABEL PST FLEX PLUS LOWER (05 NOZZLES)		02
02	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 NOZZLES)		02
03	0503033892	ADHESIVE LABEL LOGO TATU HOPPER 190 X 720		01
04	0503034258	ADHESIVE LABEL		01
05	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING		02
06	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		04
07	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
08	0503031428	READ MANUAL DECAL		01
09	0503031942	ADHESIVE LABEL		01
10	0503035927	ADHESIVE LABEL TABLE FERTILIZER P27		02
11	0503031565	ADHESIVE LABEL CARE		02
12	0503031566	ADHESIVE LABEL		02
13	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
14	0503031425	ADHESIVE LABEL ATTENTION		02
15	0503031424	ADHESIVE LABEL ATTENTION ROW HYDRAULIC MARKER		02
16	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
17	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
18	0503032930	ADHESIVE LABEL DANGER		05
19	0503031087	ADHESIVE LABEL		01
20	0503034003	SERIAL NUMBER TAG 61 X 118		01
21	0503010001	3.2 X 5.5 RIVET		04
22	0503032979	ADHESIVE LABEL LETTERS A B C D		02
23	0503034500	ADHESIVE LABEL		01

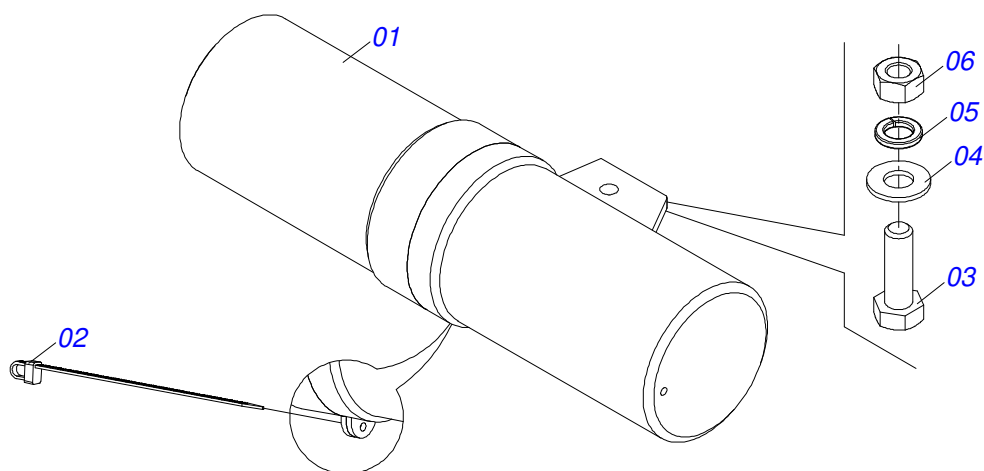


Item	Code	Description	See page	QT
01	0503060100	INSTRUCTIONS MANUAL CANISTER		01
02	0503010267	NYLON CLAMP		01
03	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
04	0501010694	FLAT WASHER		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
06	0503010337	5/16" NUT		01

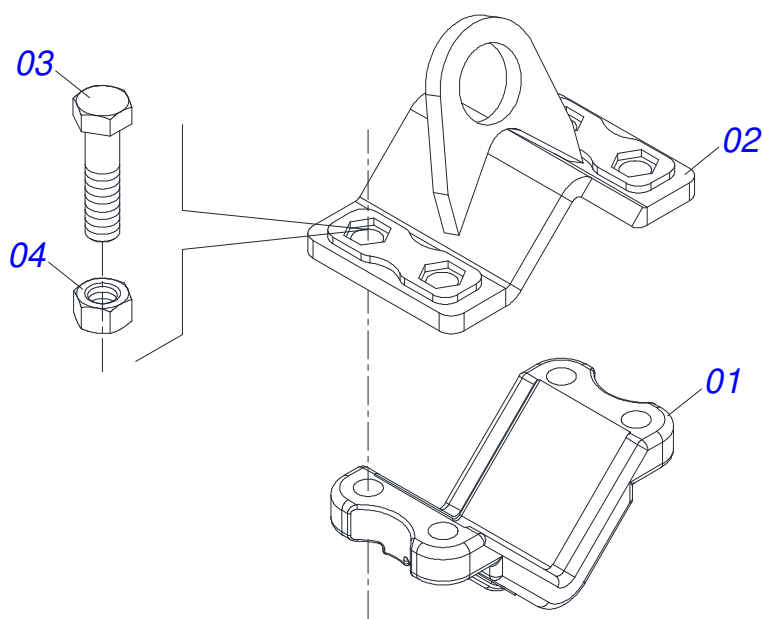


Item	Code	Description	See page	QT
01	0502012789	FIXER SUPPORT FERTILIZER ROW		01
02	0521067033	FRAME LIFTING SUPPORT		01
03	0503017960	5/8" X 3-12" BOLT		04
04	0503010811	5/8" UNF SELF ADJUSTING NUT		04

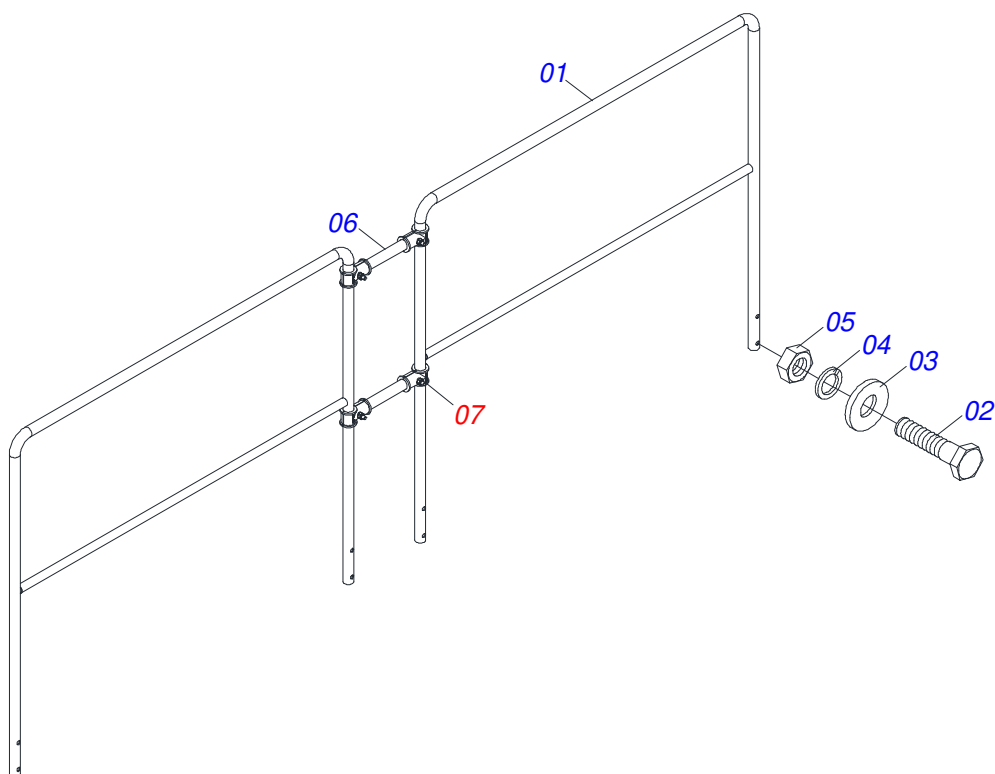


Item	Code	Description	See page	QT
01	0521065948	FRAME HANDRAIL - 3245		02
02	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2 UNC G.5 ZN HEX NUT		08
06	0581012916	INTERMEDIATE TUBE		02
07	0511059383	HANDRAIL INTERNAL FIXER	86	04

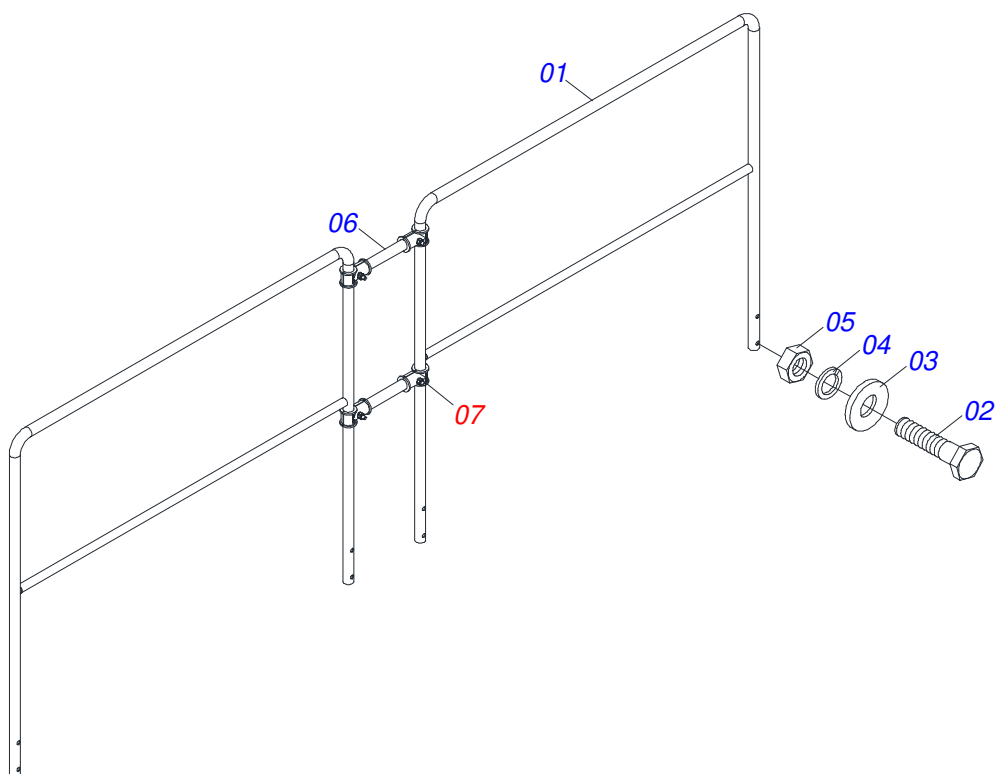


Item	Code	Description	See page	QT
01	0521065949	FRAME HANDRAIL - 3495		02
02	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2 UNC G.5 ZN HEX NUT		08
06	0581012916	INTERMEDIATE TUBE		02
07	0511059383	HANDRAIL INTERNAL FIXER	86	04

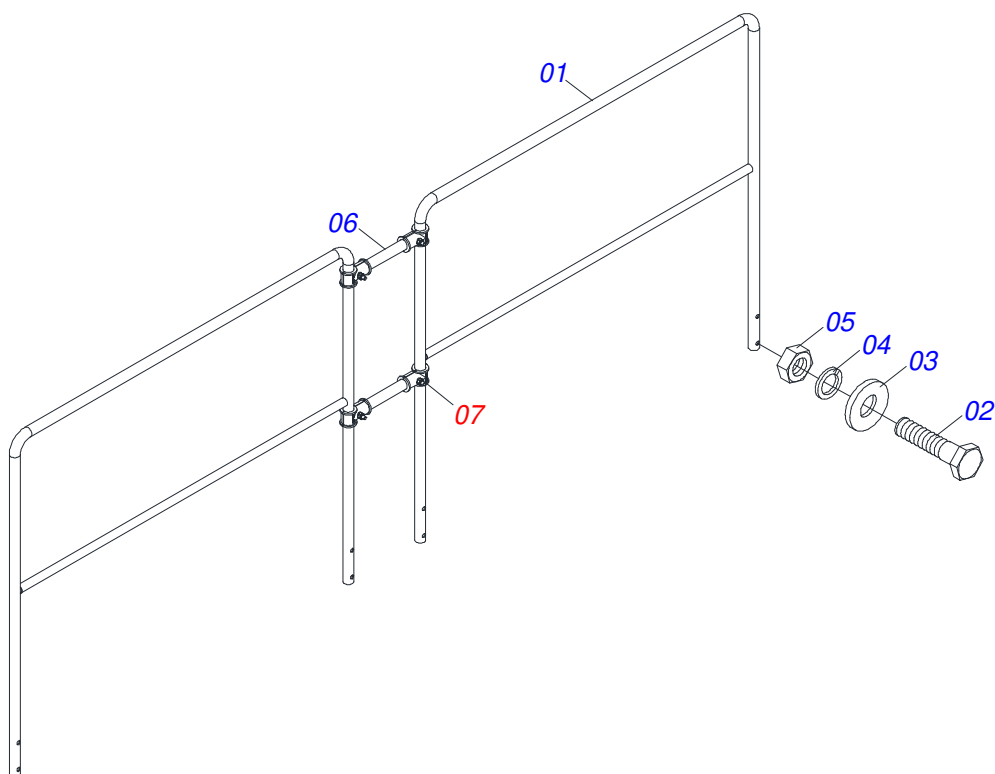


Item	Code	Description	See page	QT
01	0521065950	FRAME HANDRAIL - 4045		02
02	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2 UNC G.5 ZN HEX NUT		08
06	0581012916	INTERMEDIATE TUBE		02
07	0511059383	HANDRAIL INTERNAL FIXER	86	04

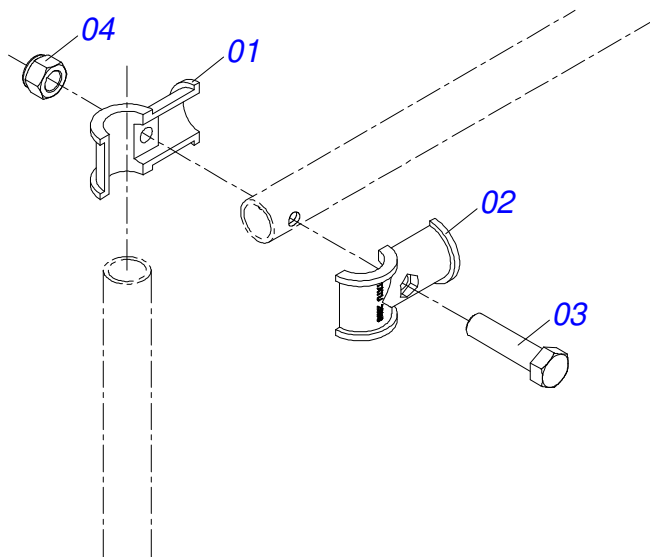


Item	Code	Description	See page	QT
01	0502012857	EXTERNAL FIXER HANDRAIL		01
02	0502012858	INTERNAL FIXER HANDRAIL		01
03	0503019083	7/16 UNC X 2.1/4 C S R P G.5 ZN BOLT		01
04	0503015490	SELF-LOCKING NUT 7/16		01

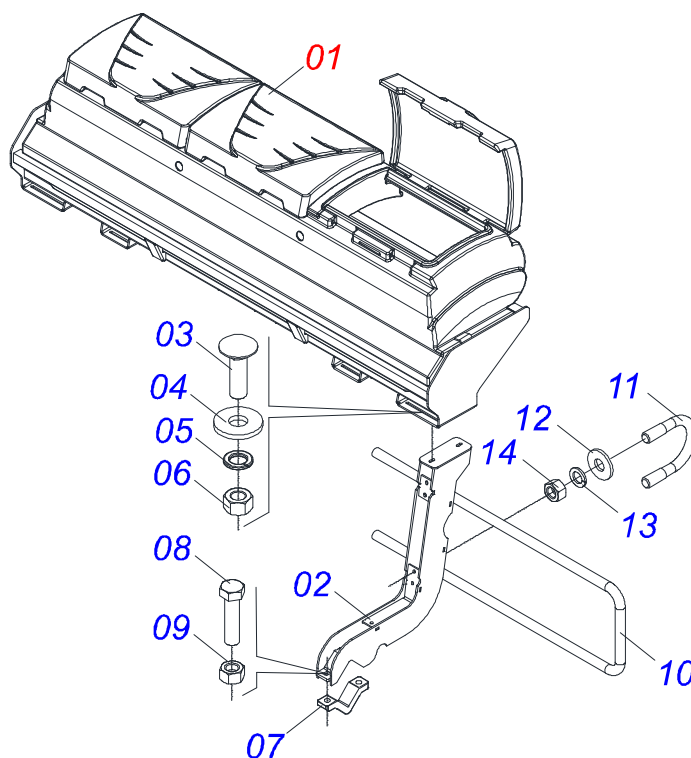


Item	Code	Description	See page	QT
01	0531058326	CSU C3 SET - 02 HOPPERS 05 NOZZLES - 07 90 CONDUCTORS		01
02	0521066102	TOWER SUPPORT HOPPER		04
03	0501010942	3/8" X 1-1/4" BOLT		08
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
05	0503010025	3/8 SPRING WASHER		08
06	0503010026	3/8" NUT		08
07	0502010175	HITCH CLAMP		04
08	0501011543	5/8" X 4" BOLT		08
09	0503012412	5/8" UNC SELF LOCKING NUT		08
10	0571019392	PROTECTOR		02
11	0551019884	45 X 50 X 3/8 FASTENER		08
12	0501010453	FLAT WASHER		16
13	0503010025	3/8 SPRING WASHER		16
14	0503010026	3/8" NUT		16

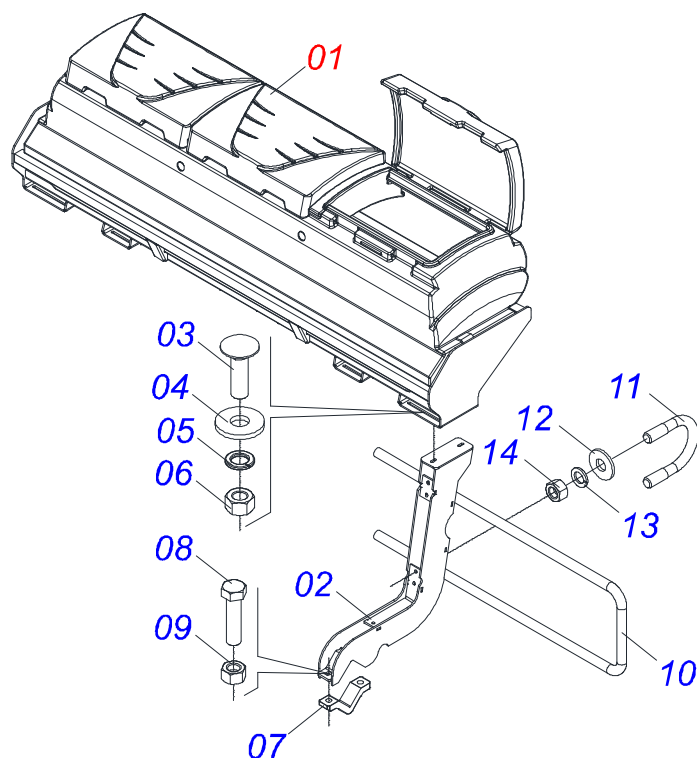


Item	Code	Description	See page	QT
01	0531058338	CSU C3 SET - 02 HOPPERS 05 NOZZLES - 07 92 CONDUCTORS		01
02	0521066102	TOWER SUPPORT HOPPER		04
03	0501010942	3/8" X 1-1/4" BOLT		08
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
05	0503010025	3/8 SPRING WASHER		08
06	0503010026	3/8" NUT		08
07	0502010175	HITCH CLAMP		04
08	0501011543	5/8" X 4" BOLT		08
09	0503012412	5/8" UNC SELF LOCKING NUT		08
10	0571019392	PROTECTOR		02
11	0551019884	45 X 50 X 3/8 FASTENER		08
12	0501010453	FLAT WASHER		16
13	0503010025	3/8 SPRING WASHER		16
14	0503010026	3/8" NUT		16

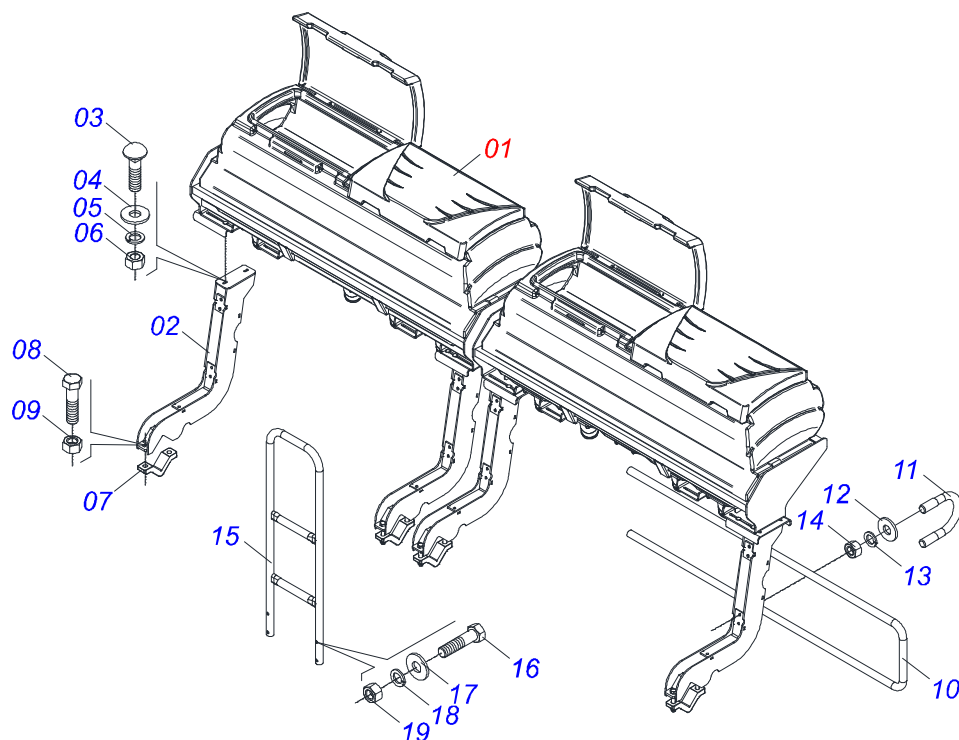


Item	Code	Description	See page	QT
01	0531058315	CSU C3 SET - 02 HOPPERS 05 NOZZLES - 09 91 CONDUCTORS		01
02	0521066102	TOWER SUPPORT HOPPER		04
03	0501010942	3/8" X 1-1/4" BOLT		08
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
05	0503010025	3/8 SPRING WASHER		08
06	0503010026	3/8" NUT		08
07	0502010175	HITCH CLAMP		04
08	0501011543	5/8" X 4" BOLT		08
09	0503012412	5/8" UNC SELF LOCKING NUT		08
10	0571019393	PROTECTOR		02
11	0551019884	45 X 50 X 3/8 FASTENER		08
12	0501010453	FLAT WASHER		16
13	0503010025	3/8 SPRING WASHER		16
14	0503010026	3/8" NUT		16
15	0521066211	PROTECTOR CENTRAL		01
16	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		04
17	0501013519	FLAT WASHER		04
18	0503010019	1/2" SPRING WASHER		04
19	0503010060	1/2 UNC G.5 ZN HEX NUT		04

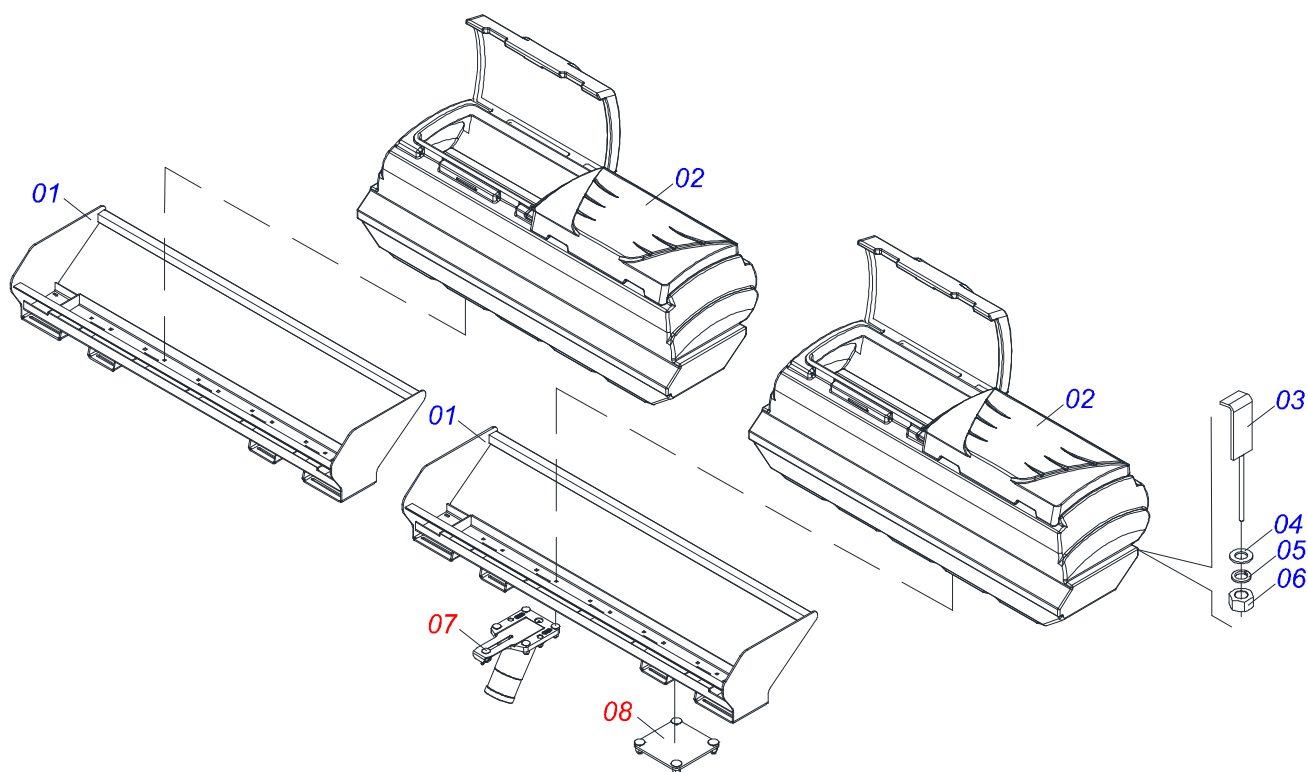


Item	Code	Description	See page	QT
01	0521064748	05 NOZZLES SINGLE SEED HOPPER SUPPORT		02
02	0503061987	05 NOZZLES FERTILIZER HOPPER		02
03	0521063401	FIXING LOCK		04
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0503010025	3/8 SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0531057950	3" X 175 SEED NOZZLE WITH FIXING	93	06
08	0531054471	CAP WITH FIXING	94	04

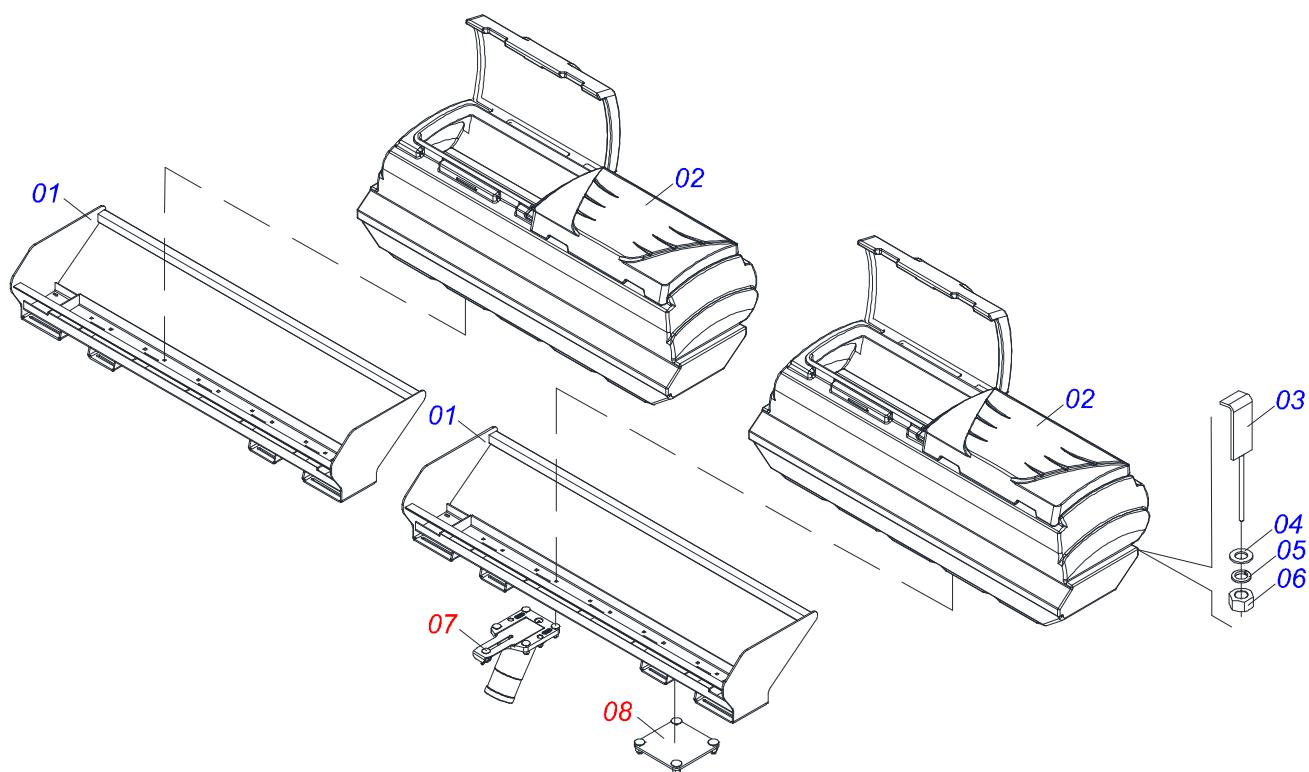


Item	Code	Description	See page	QT
01	0521064748	05 NOZZLES SINGLE SEED HOPPER SUPPORT		02
02	0503061987	05 NOZZLES FERTILIZER HOPPER		02
03	0521063401	FIXING LOCK		04
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0503010025	3/8 SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0531057950	3" X 175 SEED NOZZLE WITH FIXING	93	09
08	0531054471	CAP WITH FIXING	94	01

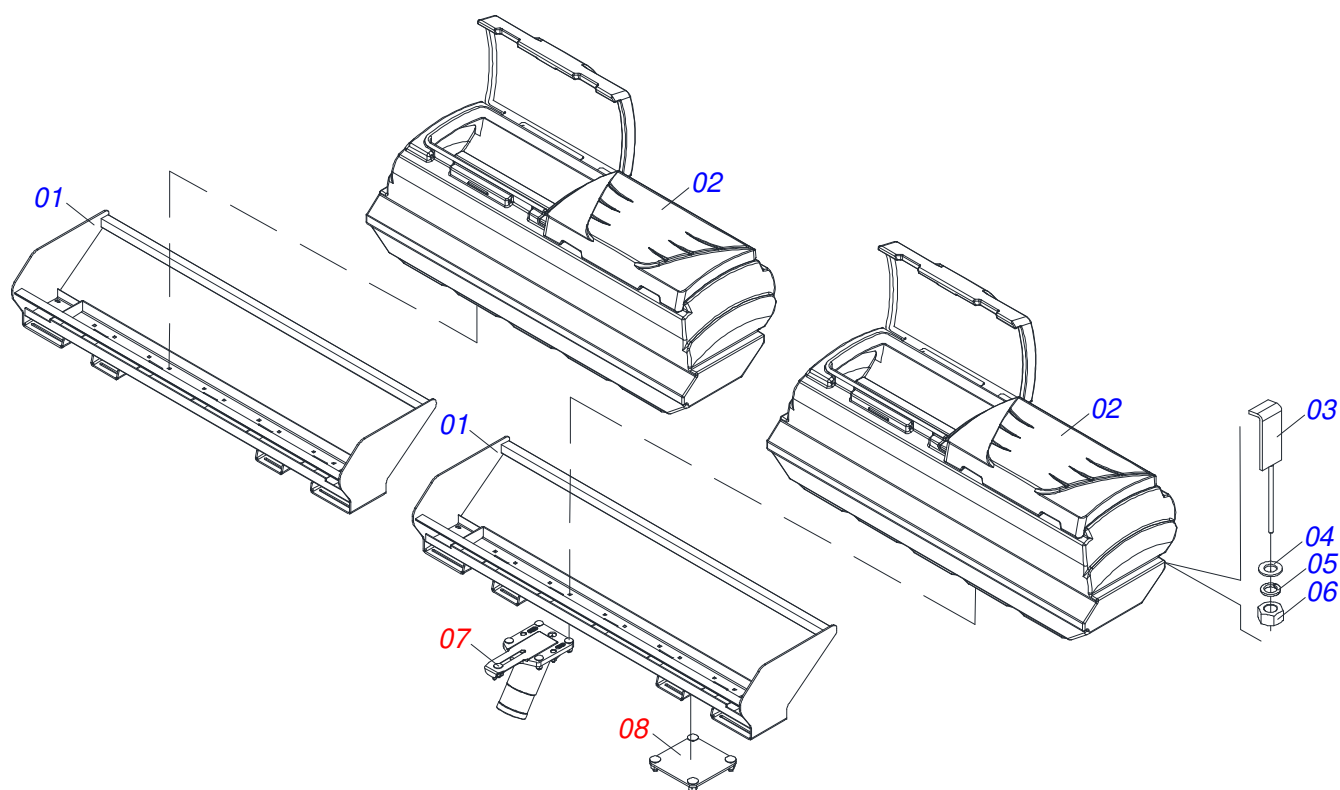


Item	Code	Description	See page	QT
01	0521064748	05 NOZZLES SINGLE SEED HOPPER SUPPORT		02
02	0503061987	05 NOZZLES FERTILIZER HOPPER		02
03	0521063401	FIXING LOCK		04
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0503010025	3/8 SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0531057950	3" X 175 SEED NOZZLE WITH FIXING	93	07
08	0531054471	CAP WITH FIXING	94	03

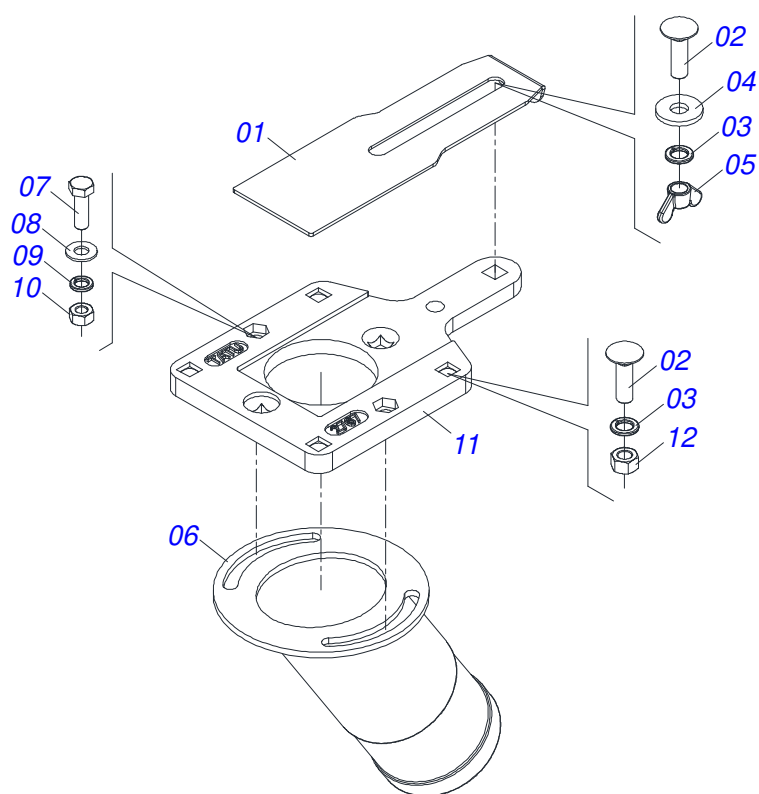


Item	Code	Description	See page	QT
01	0571015779	ARTICULATION NOZZLE SUPPORT LID		01
02	0501010942	3/8" X 1-1/4" BOLT		05
03	0503010025	3/8 SPRING WASHER		05
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
05	0503010209	3/8" UNC BUTTERFLY NUT		01
06	0521066332	CONDUCTOR WITH FLANGE		01
07	0503010371	5/16" X 1" BOLT		02
08	0501010694	FLAT WASHER		02
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
10	0503010337	5/16" NUT		02
11	0502012767	SEED NOZZLE FIXER SUPPORT		01
12	0503010026	3/8" NUT		04

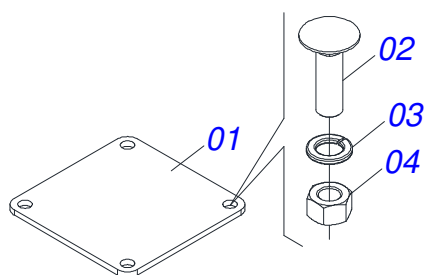


Item	Code	Description	See page	QT
01	0571015773	SUPPORT SEED		01
02	0501011643	3/8 X 1"BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04

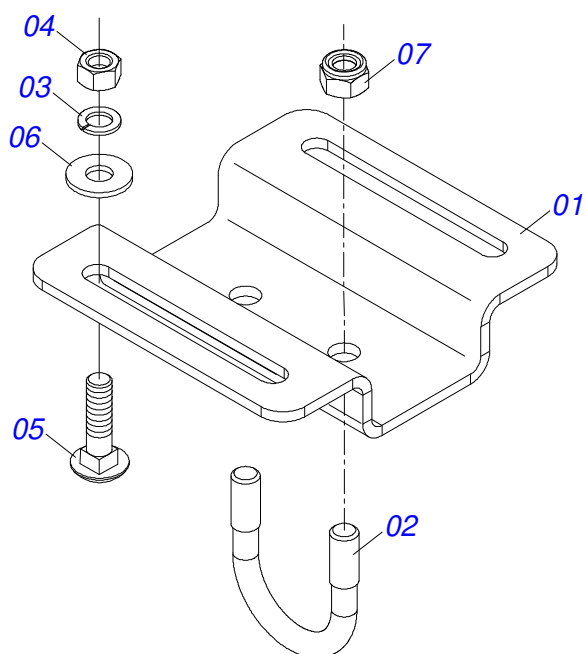


Item	Code	Description	See page	QT
01	0581011989	SIDE BODY FIXER PLATFORM		01
02	0551019884	45 X 50 X 3/8 FASTENER		01
03	0503010025	3/8 SPRING WASHER		02
04	0503010026	3/8" NUT		02
05	0501011643	3/8 X 1"BOLT		02
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503013357	3/8 SELF-ADJUSTING NUT		02

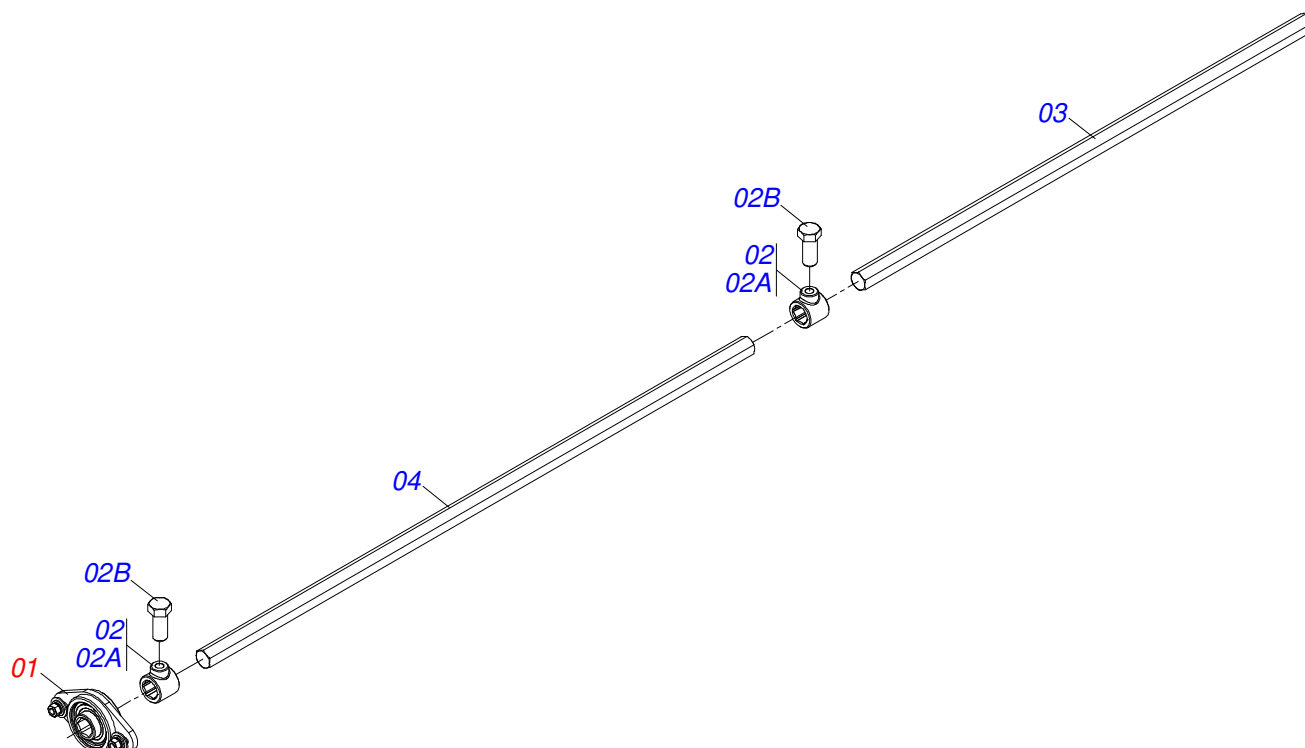

Item	Code	Description	See page	3245	3495
01	0521055338	ROW SEED BEARING	97	04	04
02	0511054314	TRANSMISSION AXLE LOCK SLEEVE		18	18
02A	0502012699	TRANSMISSION HUB LOCK SLEEVE		01	01
02B	0503010256	3/8" X 3/4" BOLT		01	01
03	0571018910	3/4 X 1505 AXLE HEX		01	00
03.	0571018912	3/4 X 1630 AXLE HEX		00	01
04	0571018911	3/4 X 1690 AXLE HEX		01	00
04.	0571018913	3/4 X 1815 AXLE HEX		00	01

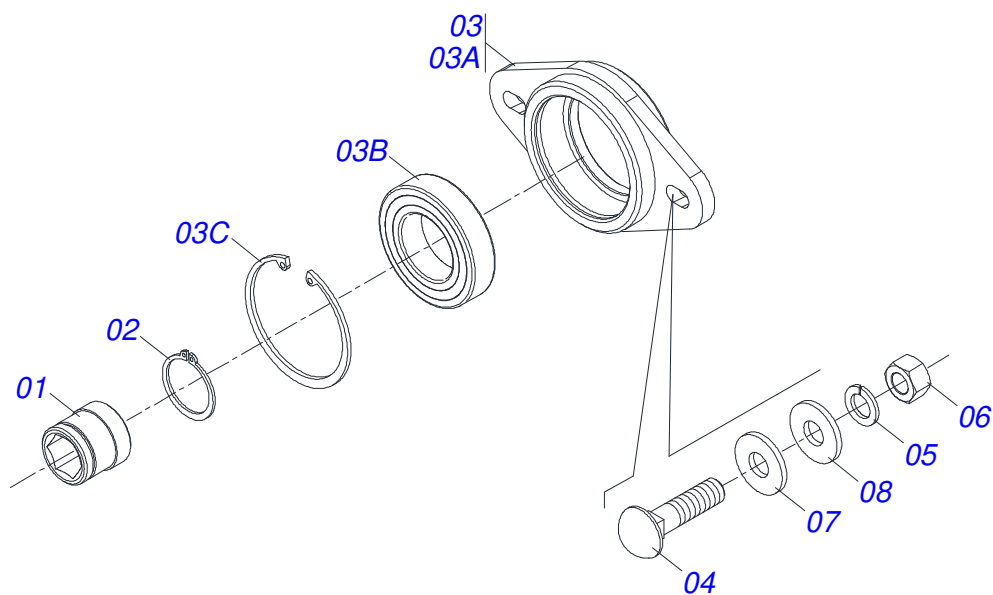


Item	Code	Description	See page	QT
01	0551015804	BEARING AXLE BODY		01
02	0503010707	501030 CLAMPING RING (FOR AXLE)		01
03	0501053566	ROW SEED BEARING		01
03A	0502012030	HOUSING BEARING		01
03B	0503012861	6006 2RS BALL BEARING		01
03C	0503012858	502075 CLAMPING RING (FOR HOLE)		01
04	0503011953	5/16" X 1" BOLT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02
07	0501013518	FLAT WASHER		02
08	0501010694	FLAT WASHER		02

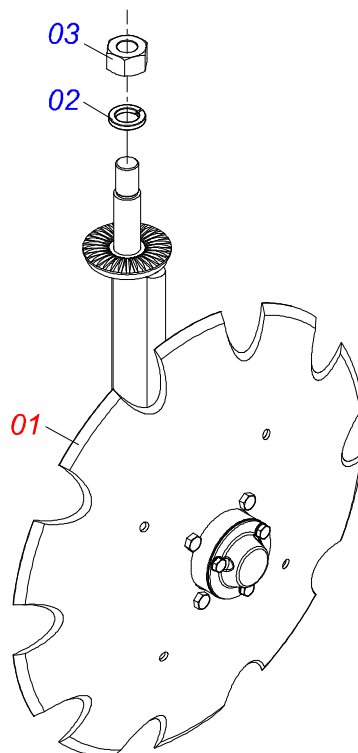


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC	99	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

ROW MARKER DISC


0511053904

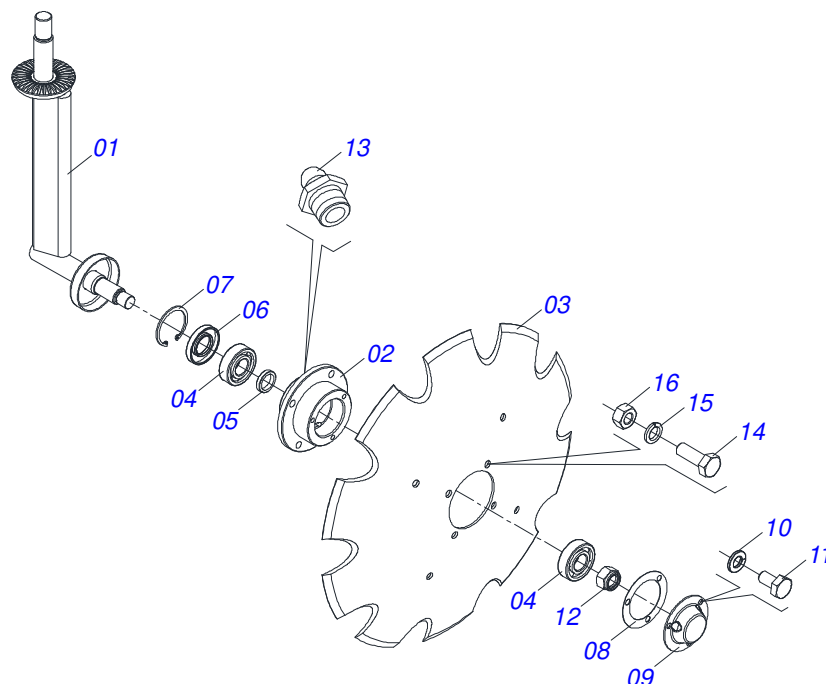


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	PROTECTION LID		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

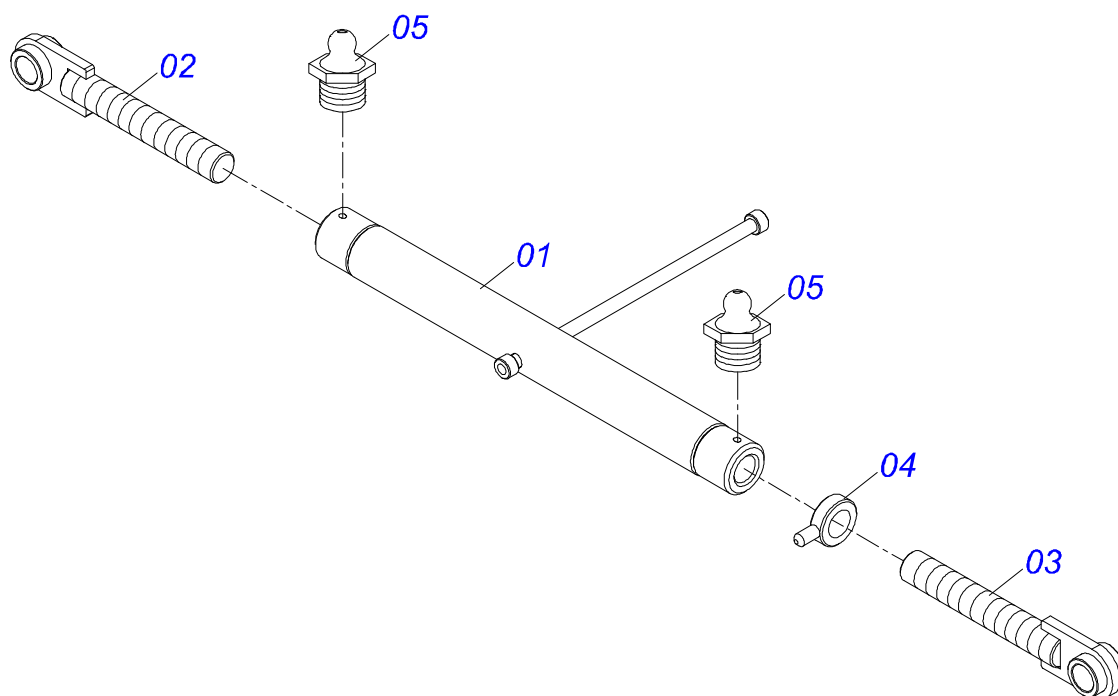


Item	Code	Description	See page	QT
01	0501069529	653 TURNBUCKLE		01
02	0521065959	JACK R.1.1/2 UNC RIGHT X 240		01
03	0521065960	JACK R.1.1/2 UNC LEFT X 240		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

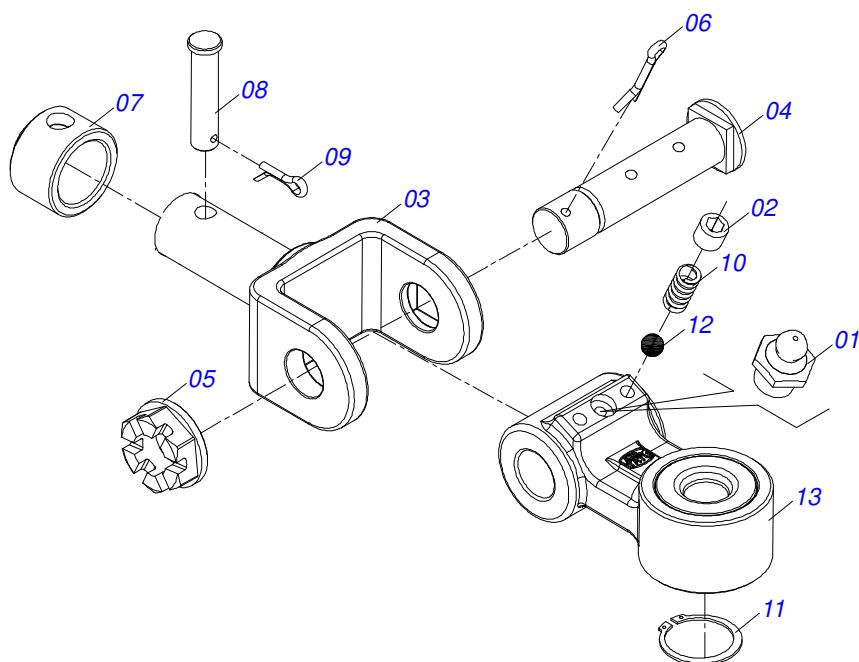


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0581019654	ASSY BOLT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" SPLIT PIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2" SPLIT PIN		01
10	0503033731	LEFT COMPRESSION SPRING		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

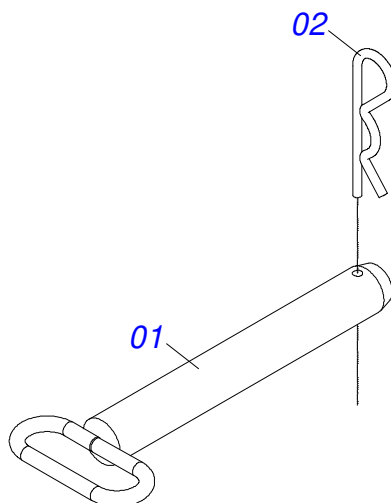


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

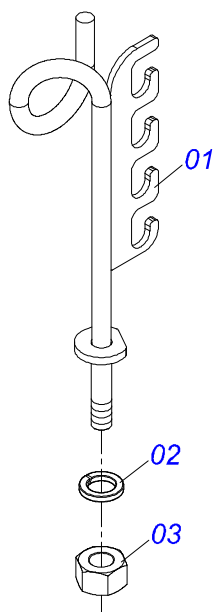


Item	Code	Description	See page	QT
01	0521065611	HOSE SUPPORT		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

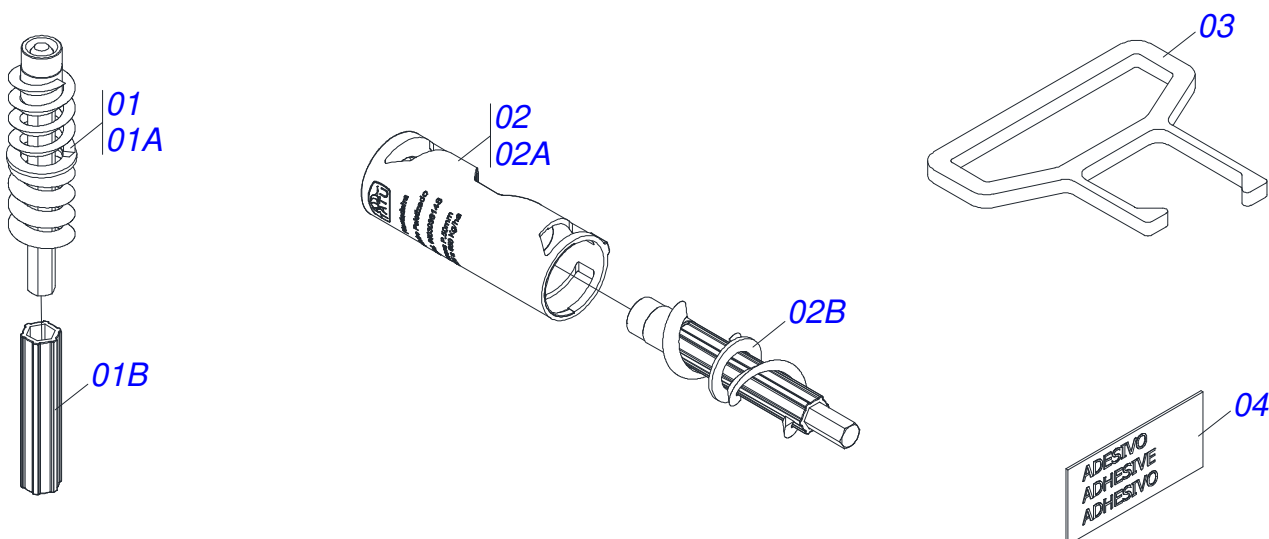


Item	Code	Description	See page	QT
01	0531058988	P.16 ENDLESS THREAD WITH COATING		06
01A	0531065012	ALPHA FERTILIZER METERING P.16MM WORM THREAD		01
01B	0503035859	SUPPORT SLEEVE		01
02	0531058992	PELLETIZED FERTILIZER KIT P.50 125 TO 650 KG/HA ALPHA		06
02A	0501111196	PELLETED FERTILIZER METERING COATING		01
02B	0531058987	ENDLESS THREAD WITH AXLE COVERING		01
03	0501214546	SPRING KEY		01
04	0503035928	ADHESIVE LABEL FERTILIZER TABLE ALPHA P16.5		01

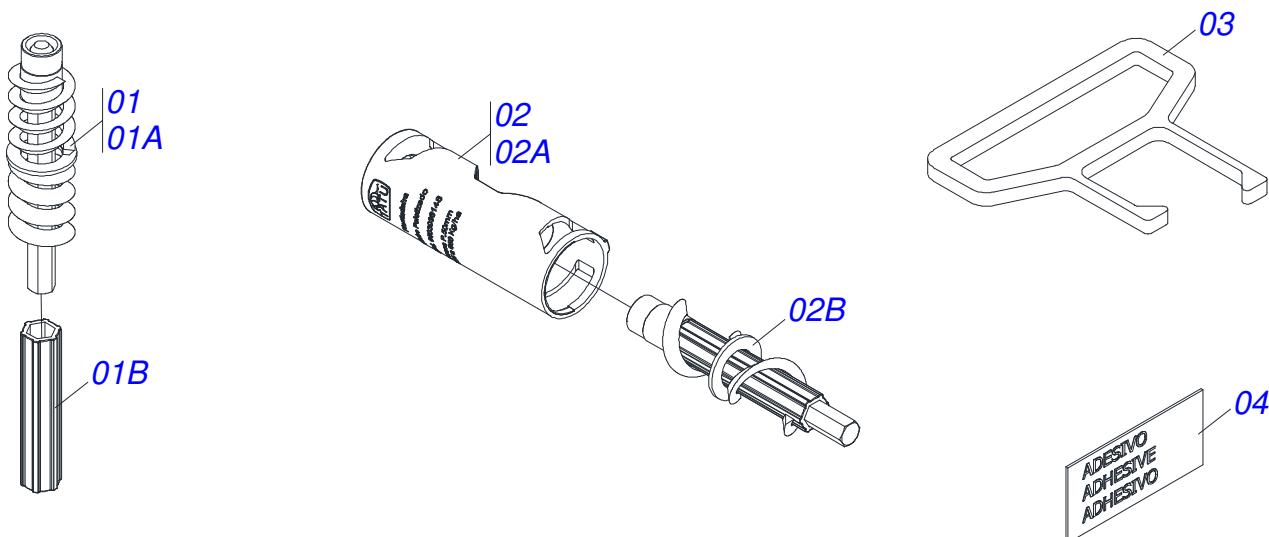


Item	Code	Description	See page	QT
01	0531058988	P.16 ENDLESS THREAD WITH COATING		07
01A	0531065012	ALPHA FERTILIZER METERING P.16MM WORM THREAD		01
01B	0503035859	SUPPORT SLEEVE		01
02	0531058992	PELLETIZED FERTILIZER KIT P.50 125 TO 650 KG/HA ALPHA		07
02A	0501111196	PELLETED FERTILIZER METERING COATING		01
02B	0531058987	ENDLESS THREAD WITH AXLE COVERING		01
03	0501214546	SPRING KEY		01
04	0503035928	ADHESIVE LABEL FERTILIZER TABLE ALPHA P16.5		01

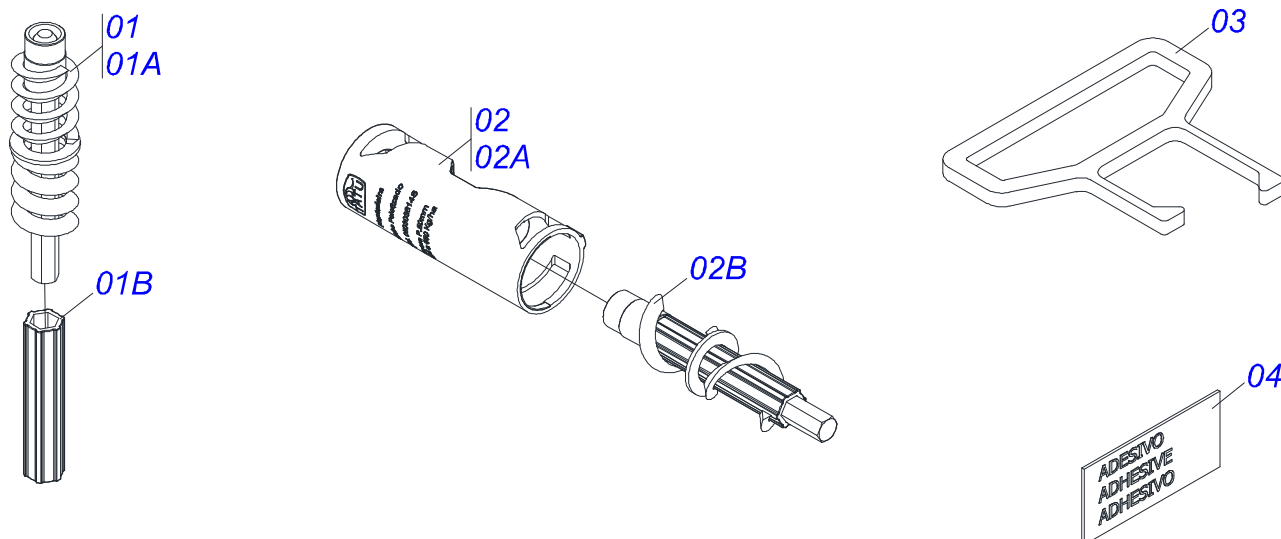


Item	Code	Description	See page	QT
01	0531058988	P.16 ENDLESS THREAD WITH COATING		09
01A	0531065012	ALPHA FERTILIZER METERING P.16MM WORM THREAD		01
01B	0503035859	SUPPORT SLEEVE		01
02	0531058992	PELLETIZED FERTILIZER KIT P.50 125 TO 650 KG/HA ALPHA		09
02A	0501111196	PELLETED FERTILIZER METERING COATING		01
02B	0531058987	ENDLESS THREAD WITH AXLE COVERING		01
03	0501214546	SPRING KEY		01
04	0503035928	ADHESIVE LABEL FERTILIZER TABLE ALPHA P16.5		01

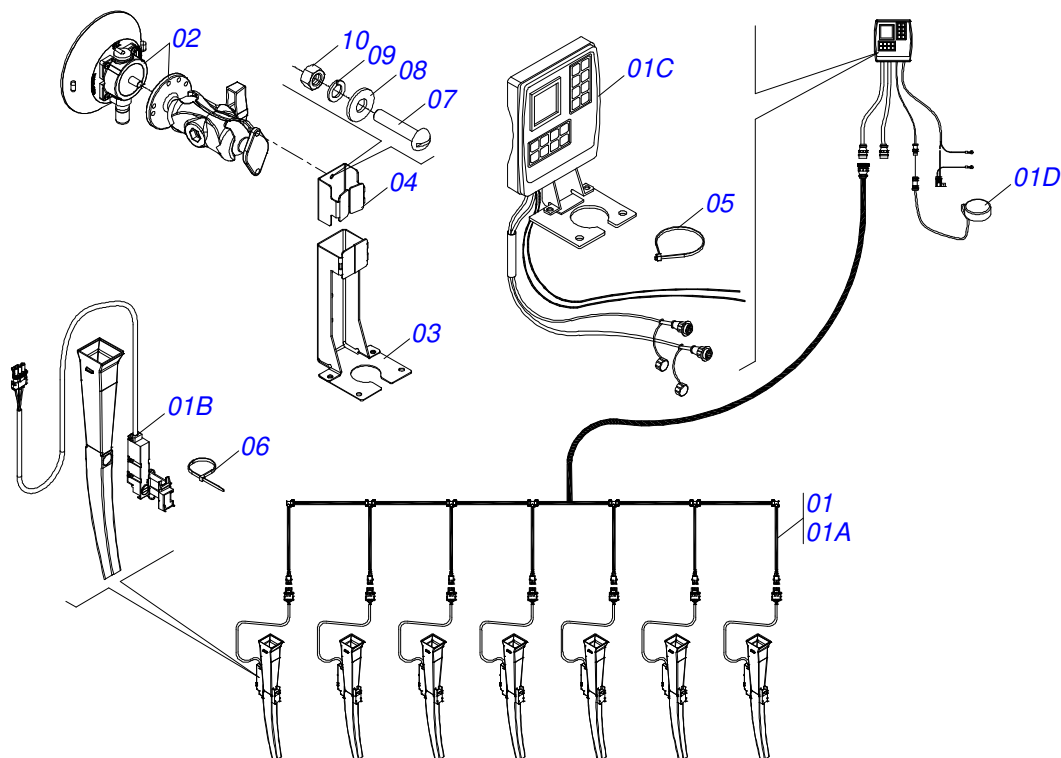

Item	Code	Description	See page	QT
01	0503062792	SEED MONITORING KIT		01
01A	0503016553	7 ROW SIMPLE MONITOR CABLE		01
01B	0503019100	SENSOR		07
01C	0503017602	MONITOR PLANT PM400		01
01D	0503017443	ANTENNA GPS PM 400		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503013100	NYLON CLAMP		35
06	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		105
07	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
08	0503010669	FLAT WASHER		02
09	0503010668	3/16" SPRING WASHER		02
10	0503010667	3/16" NUT		02

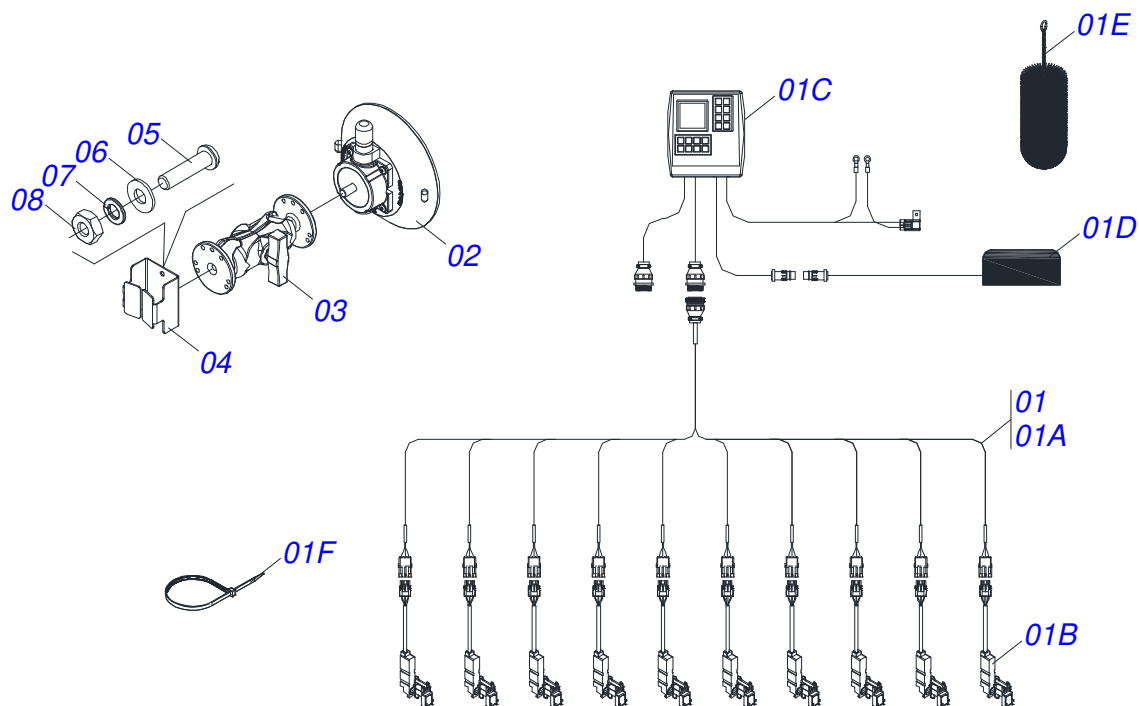

Item	Code	Description	See page	QT
01	0503063621	KIT MONITORING SEED		01
01A	0503019723	CABLE		01
01B	0503019100	SENSOR		10
01C	0503017602	MONITOR PLANT PM400		01
01D	0503017443	ANTENNA GPS PM 400		01
01E	0503017031	CLEANING BRUSH		01
01F	0503019720	NYLON CLAMP		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
06	0503010669	FLAT WASHER		02
07	0503010668	3/16" SPRING WASHER		02
08	0503010667	3/16" NUT		02

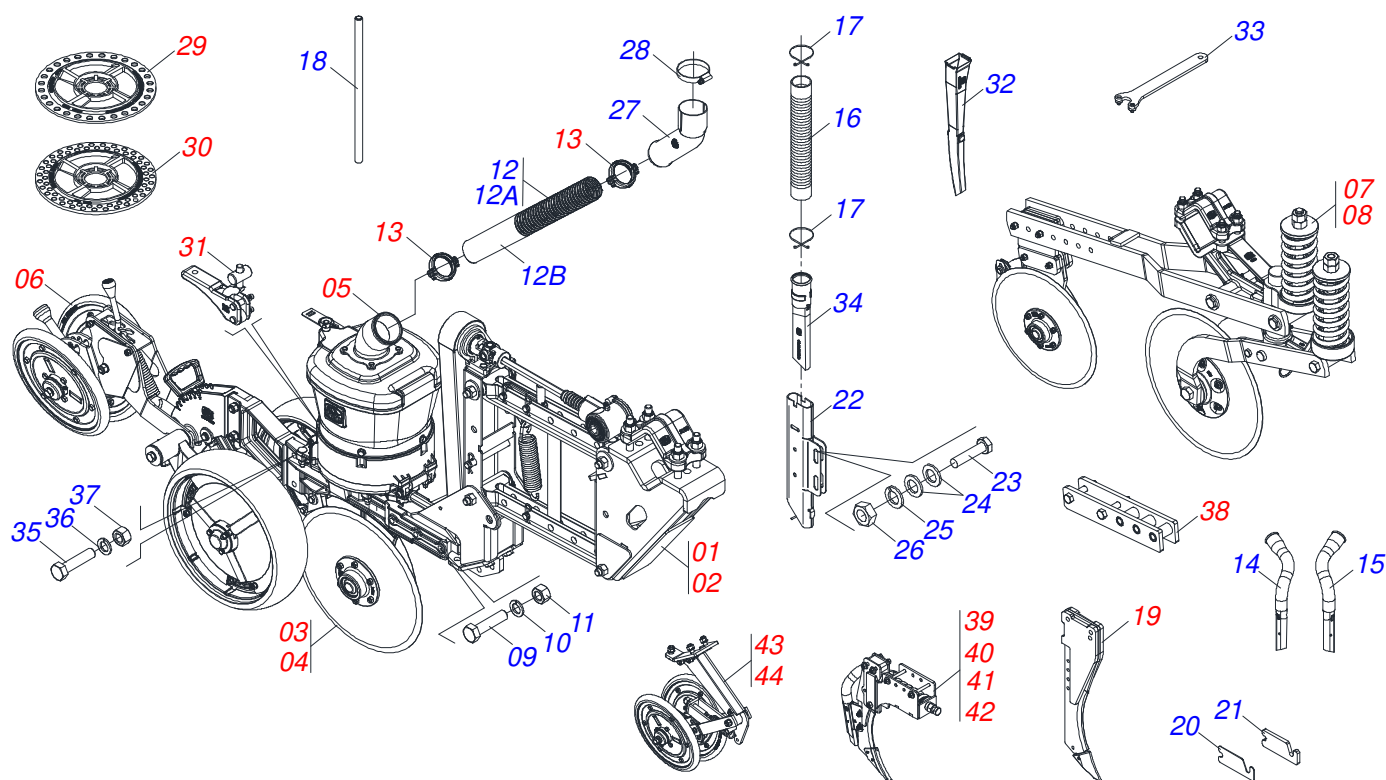


Item	Code	Description	See page	QT
01	0511057277	FRONT SHORT SEED ROW WITH RIGHT TRANSMISSION	110	01
01.	0521056500	FRONT SHORT SEED ROW WITH RIGHT TRANSMISSION WITHOUT LUBRIFICATION	111	01
02	0511057278	FRONT LONG SEED ROW WITH RIGHT TRANSMISSION	112	01
02.	0521056501	FRONT LONG SEED ROW WITH RIGHT TRANSMISSION WITHOUT LUBRIFICATION	113	01
03	0511056621	RIGHT REAR SEED ROW	119	01
03.	0521054770	RIGHT REAR SEED ROW		01
04	0511056622	LEFT REAR SEED ROW	125	01
04.	0521054771	LEFT REAR SEED ROW		01
05	0531055312	TITANIUM SINGLE SEED SYSTEM	127	01
06	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	131	01
06.	0521053063	SPACRR DEPTH SYSTEM / COMPACTION CLOSED	141	01
06..	0531054532	WHEEL SYSTEM DEPTH / COMPACTOR	149	01
06...	0521054984	DEPTH/COMPACTOR SYSTEM - SPT	154	01
07	0511058639	SHORT FERTILIZER ROW WITH DDD/DC20	163	01
07.	0511058635	SHORT FERTILIZER ROW DDD 18" BLADE DISC	164	01
07..	0541050898	SHORT FERTILIZER ROW WITH 18" DISC BLADE	165	01
08	0511058640	LONG FERTILIZER ROW WITH DDD/DC20	175	01
08.	0511058636	LONG FERTILIZER ROW DDD 18" BLADE DISC	176	01
08..	0541050899	LONG FERTILIZER ROW WITH 18" DISC BLADE	177	01
09	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2 UNC G.5 ZN HEX NUT		01
12	0531059865	RIGHT SEED CONDUCTOR WITH PROTECTION		01
12A	0501310971	SEED CONDUCTOR RIGHT 3 X 1500		01
12B	1164930001	BLACK VINYL TUBE 3.1/2		02
13	0531050237	SEED CONDUCTOR FIXER 3 CSU RIGHT		01
14	0503030391	RIGHT FERTILIZER NOZZLE		01
15	0503030392	LEFT FERTILIZER NOZZLE		01

ASSY SEED/FERTILIZER ROW

0909099276

Item	Code	Description	See page	QT
16	0503031145	2" X 2" X 20" HOSE		01
17	0503031076	2" HOSE CLAMP		01
18	0531013600	PRESS ADJUSTMENT LEVER		01
19	0501110804	SCARIFIER ROD WITH POINT		01
20	0511017969	0.1" SPACING PLATE		01
21	0511018662	SPACING PLATE		01
22	0521069127	BOTTOM NOZZLE FERTILIZER		01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
24	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
25	0503010025	3/8 SPRING WASHER		01
26	0503010026	3/8" NUT		01
27	0503031050	CURVED CONDUCTOR		01
28	0503010246	CLAMP		01
29	0503062066	DISC SET WITH CORN RING	184	01
30	0503062067	DISC SET / RING SOY 90F TITANIUM	185	01
31	0511052024	FAST CLOSING SET	186	01
32	0503033672	NOZZLE WITHOUT TITANIUM		01
33	0521068982	DISC BLADE HUB KEY		01
34	0503030520	SEED SOCKET		01
35	0503010905	1/2" X 2-1/4" BOLT		01
36	0503010019	1/2" SPRING WASHER		01
37	0503010060	1/2 UNC G.5 ZN HEX NUT		01
38	0521057957	FIXED ROD EXTENSION WITH FIXATION	189	01
39	0521050339	RIGHT POINT SPINDLE	190	01
40	0521053949	SCARIFIER SPINDLE WITH SOCKET RIGHT	193	01
41	0521050340	LEFT POINT SPINDLE	197	01
42	0521053948	SCARIFIER SPINDLE WITH SOCKET LEFT	198	01
43	0511057984	V-COVERING RUBBER WHEEL - SHORT ROW	199	01
44	0511057985	V-COVERING RUBBER WHEEL - LONG ROW	200	01

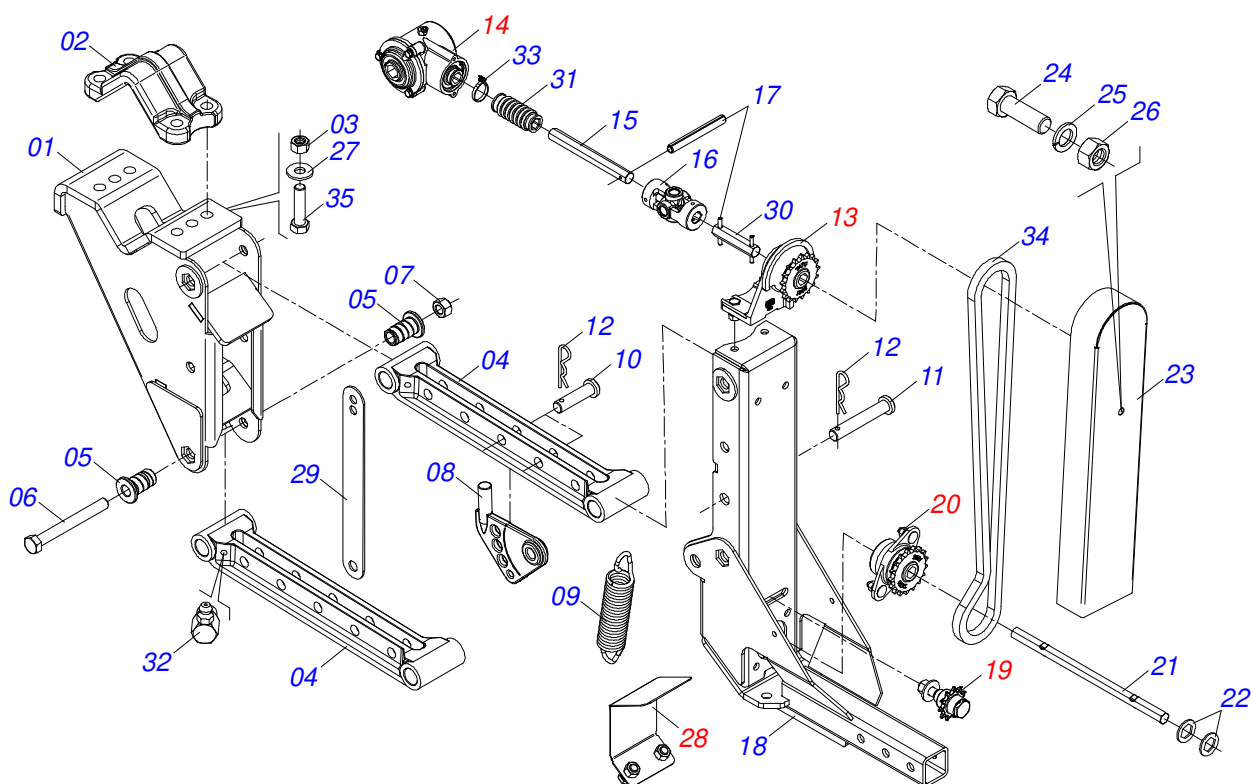


Item	Code	Description	See page	QT
01	0521065941	FRAME SEED ROW FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0502012804	PIVOT ARM SEED ROW		02
05	0571018882	SEED ROW ARM SLEEVE		08
06	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		04
07	0503012412	5/8" UNC SELF LOCKING NUT		04
08	0502012812	SEED ROW ADJUSTMENT LEVER ASSY		01
09	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
10	0571018883	PIN FIXER SPRING		03
11	0571018884	ARTICULATION ROW LOCK PIN		01
12	0503030168	HITCH PIN CLIP		04
13	0511058766	BEARING	114	01
14	0511057159	TRANSMISSION HOPPER SEED ROW	115	01
15	0571012492	5/8 X 330 AXLE HEX		01
16	0501056296	UNIVERSAL JOINT		01
17	0503011855	0.2" X 1.8" SPRING PIN		03
18	0521065942	FRAME REAR SHORT ROW SEED		01
19	0511057269	CHAIN TENSIONER	116	01
20	0511059872	BEARING	117	01
21	0581010239	SEED ROW AXLE TRANSMISSION		01
22	0521011859	FLAT WASHER		02
23	0581011694	PROTECTION REAR COVER SEED ROW		01
24	0503010765	3/8" X 3" BOLT		01
25	0503010025	3/8 SPRING WASHER		01
26	0503010026	3/8" NUT		01
27	0501012140	FLAT WASHER		08
28	0511058512	PROTECTION LID	118	01
29	0581011430	DRAWBAR ASSY		01
30	0581010976	5/8" HEX AXLE		01
31	0503032984	HOOD HEX AXLE ROW		01



PST PLUS FLEX TITANIUM - FRAME 3245/3495/4045 - CSU
FRONT SHORT SEED ROW WITH RIGHT TRANSMISSION

Page 110
0511057277

Item	Code	Description	See page	QT
32	0503010004	1890 GREASE FITTING		04
33	0503013100	NYLON CLAMP		01
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		01
35	0503017857	BOLT 5/8 UNF 4		04

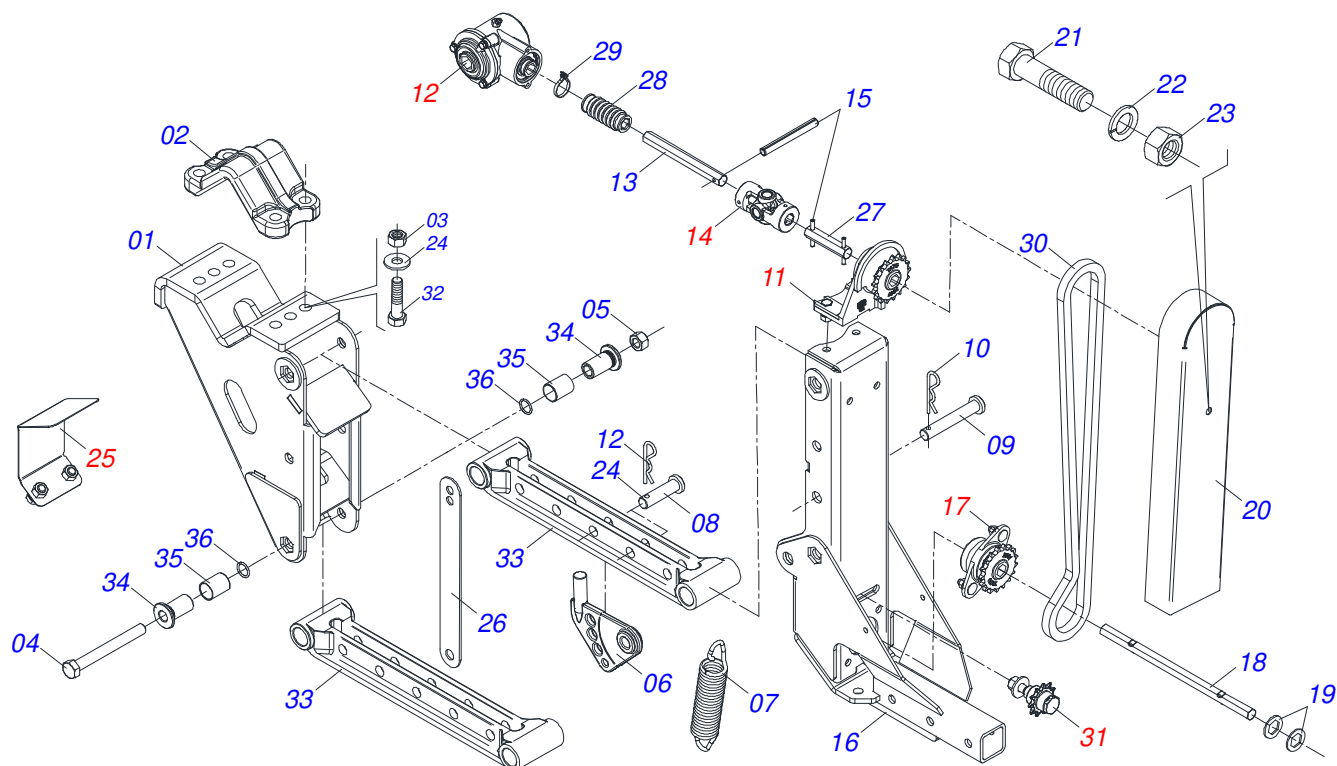


Item	Code	Description	See page	QT
01	0521065941	FRAME SEED ROW FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		04
05	0503012412	5/8" UNC SELF LOCKING NUT		04
06	0502012812	SEED ROW ADJUSTMENT LEVER ASSY		01
07	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
08	0571018883	PIN FIXER SPRING		03
09	0571018884	ARTICULATION ROW LOCK PIN		01
10	0503030168	HITCH PIN CLIP		04
11	0511058766	BEARING	114	01
12	0511057159	TRANSMISSION HOPPER SEED ROW	115	01
13	0571012492	5/8 X 330 AXLE HEX		01
14	0501056296	UNIVERSAL JOINT		01
15	0503011855	0.2" X 1.8" SPRING PIN		03
16	0521065942	FRAME REAR SHORT ROW SEED		01
17	0511059872	BEARING	117	01
18	0581010239	SEED ROW AXLE TRANSMISSION		01
19	0521011859	FLAT WASHER		02
20	0581011694	PROTECTION REAR COVER SEED ROW		01
21	0503010765	3/8" X 3" BOLT		01
22	0503010025	3/8 SPRING WASHER		01
23	0503010026	3/8" NUT		01
24	0501012140	FLAT WASHER		08
25	0511058512	PROTECTION LID	118	01
26	0581011430	DRAWBAR ASSY		01
27	0581010976	5/8" HEX AXLE		01
28	0503032984	HOOD HEX AXLE ROW		01
29	0503013100	NYLON CLAMP		01
30	0503013215	40-1 CHAIN X 89 LINK + MENDING		01
31	0511057269	CHAIN TENSIONER	116	01



PST PLUS FLEX TITANIUM - FRAME 3245/3495/4045 - CSU
FRONT SHORT SEED ROW WITH RIGHT TRANSMISSION

Page 111
0521056500

Item	Code	Description	See page	QT
32	0503017857	BOLT 5/8 UNF 4		04
33	0591011156	PIVOT ARM SEED ROW		02
34	0591011157	SPACER LOWER SLEEVE		08
35	0503019273	AUTO LUBRICANT SLEEVE		08
36	0503010045	O'RING		08

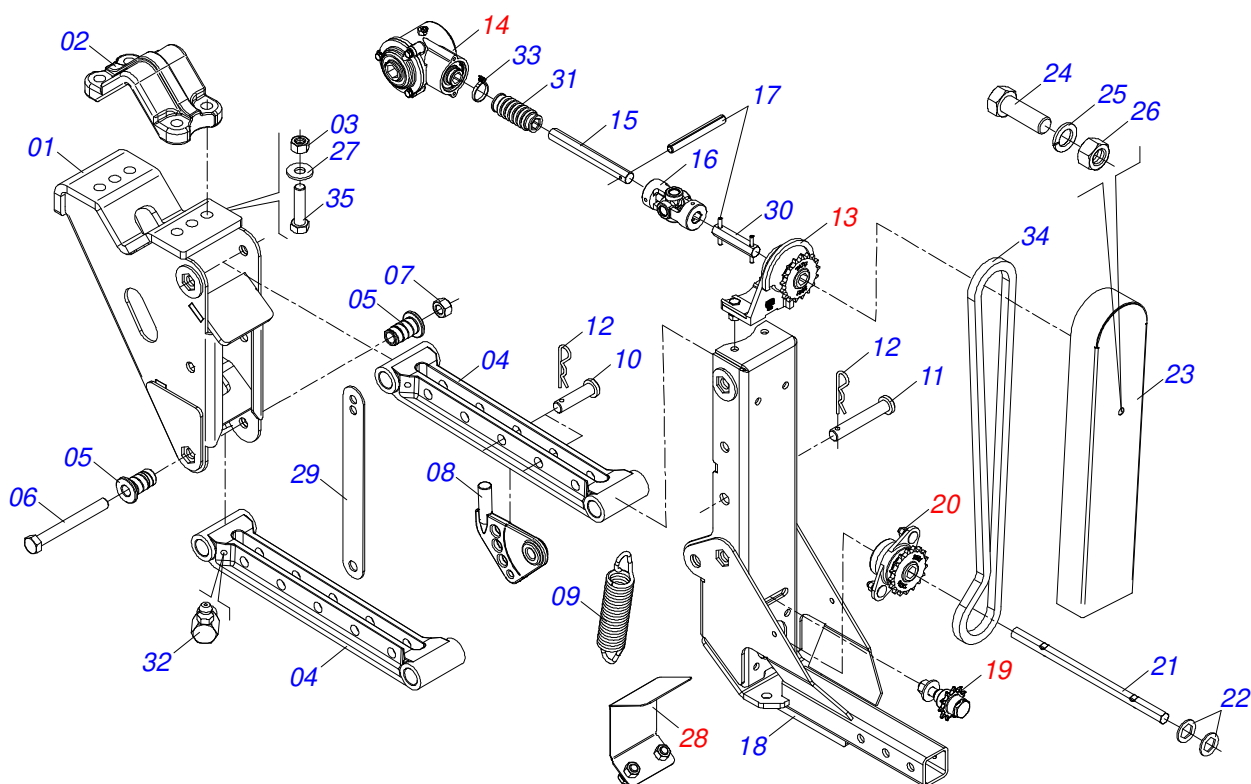


Item	Code	Description	See page	QT
01	0521065941	FRAME SEED ROW FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0502012804	PIVOT ARM SEED ROW		02
05	0571018882	SEED ROW ARM SLEEVE		08
06	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		04
07	0503012412	5/8" UNC SELF LOCKING NUT		04
08	0502012812	SEED ROW ADJUSTMENT LEVER ASSY		01
09	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
10	0571018883	PIN FIXER SPRING		03
11	0571018884	ARTICULATION ROW LOCK PIN		01
12	0503030168	HITCH PIN CLIP		04
13	0511058766	BEARING	114	01
14	0511057159	TRANSMISSION HOPPER SEED ROW	115	01
15	0571012492	5/8 X 330 AXLE HEX		01
16	0501056296	UNIVERSAL JOINT		01
17	0503011855	0.2" X 1.8" SPRING PIN		03
18	0521065943	REAR FRAME LONG ROW SEED		01
19	0511057269	CHAIN TENSIONER	116	01
20	0511059872	BEARING	117	01
21	0581010240	SEED ROW AXLE TRANSMISSION		01
22	0521011859	FLAT WASHER		02
23	0581011694	PROTECTION REAR COVER SEED ROW		01
24	0503010765	3/8" X 3" BOLT		01
25	0503010025	3/8 SPRING WASHER		01
26	0503010026	3/8" NUT		01
27	0501012140	FLAT WASHER		08
28	0511058512	PROTECTION LID	118	01
29	0581011430	DRAWBAR ASSY		01
30	0581010976	5/8" HEX AXLE		01
31	0503032984	HOOD HEX AXLE ROW		01



PST PLUS FLEX TITANIUM - FRAME 3245/3495/4045 - CSU
FRONT LONG SEED ROW WITH RIGHT TRANSMISSION

Page 112
0511057278

Item	Code	Description	See page	QT
32	0503010004	1890 GREASE FITTING		04
33	0503013100	NYLON CLAMP		01
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		01
35	0503017857	BOLT 5/8 UNF 4		04

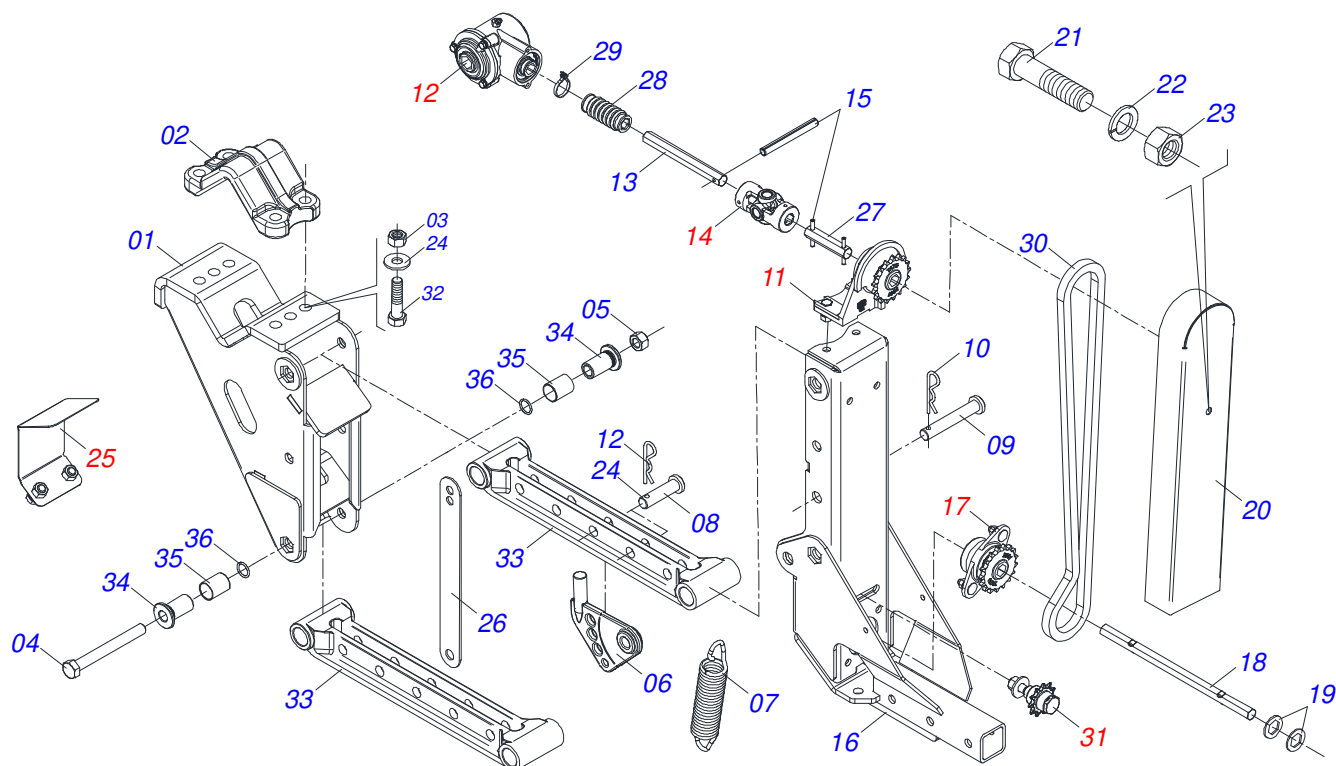


Item	Code	Description	See page	QT
01	0521065941	FRAME SEED ROW FRONT		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		04
05	0503012412	5/8" UNC SELF LOCKING NUT		04
06	0502012812	SEED ROW ADJUSTMENT LEVER ASSY		01
07	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
08	0571018883	PIN FIXER SPRING		03
09	0571018884	ARTICULATION ROW LOCK PIN		01
10	0503030168	HITCH PIN CLIP		04
11	0511058766	BEARING	114	01
12	0511057159	TRANSMISSION HOPPER SEED ROW	115	01
13	0571012492	5/8 X 330 AXLE HEX		01
14	0501056296	UNIVERSAL JOINT		01
15	0503011855	0.2" X 1.8" SPRING PIN		03
16	0521065943	REAR FRAME LONG ROW SEED		01
17	0511059872	BEARING	117	01
18	0581010240	SEED ROW AXLE TRANSMISSION		01
19	0521011859	FLAT WASHER		02
20	0581011694	PROTECTION REAR COVER SEED ROW		01
21	0503010765	3/8" X 3" BOLT		01
22	0503010025	3/8 SPRING WASHER		01
23	0503010026	3/8" NUT		01
24	0501012140	FLAT WASHER		08
25	0511058512	PROTECTION LID	118	01
26	0581011430	DRAWBAR ASSY		01
27	0581010976	5/8" HEX AXLE		01
28	0503032984	HOOD HEX AXLE ROW		01
29	0503013100	NYLON CLAMP		01
30	0503013215	40-1 CHAIN X 89 LINK + MENDING		01
31	0511057269	CHAIN TENSIONER	116	01




PST PLUS FLEX TITANIUM - FRAME 3245/3495/4045 - CSU
FRONT LONG SEED ROW WITH RIGHT TRANSMISSION

Page 113
0521056501


Item	Code	Description	See page	QT
32	0503017857	BOLT 5/8 UNF 4		04
33	0591011156	PIVOT ARM SEED ROW		02
34	0591011157	SPACER LOWER SLEEVE		08
35	0503019273	AUTO LUBRICANT SLEEVE		08
36	0503010045	O'RING		08

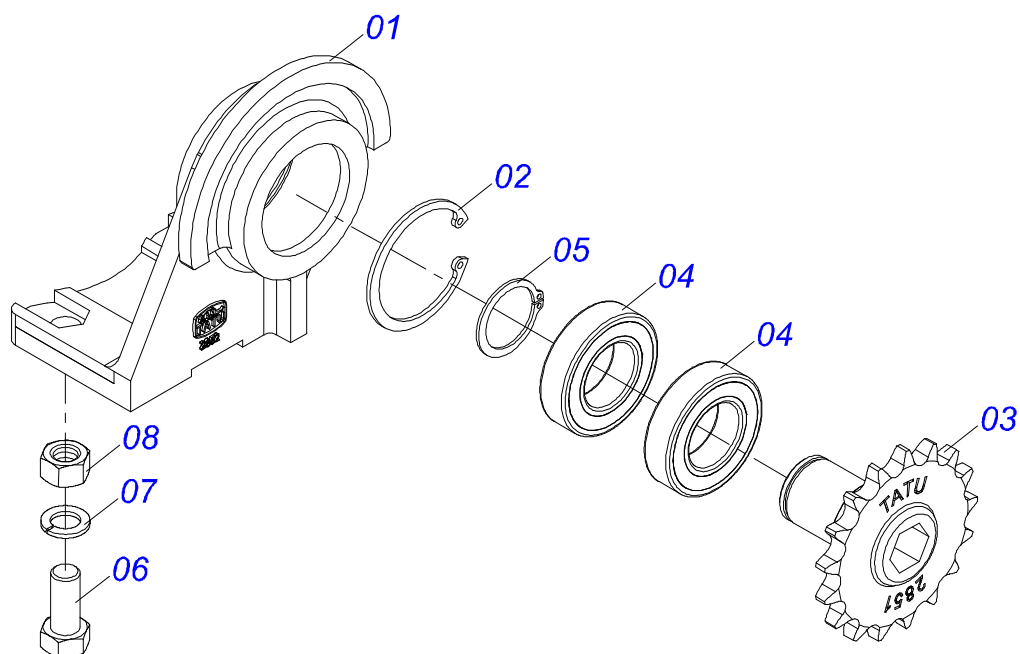

Item	Code	Description	See page	QT
01	0502012852	ROW SEED UPPER BEARING		01
02	0503011105	SEAL RING		01
03	0502012851	17Z GEAR WITH HEX HOLE		01
04	0503011410	ROLLER BEARING		02
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503010237	3/8" X 1" BOLT		02
07	0503010025	3/8 SPRING WASHER		02
08	0503010026	3/8" NUT		02

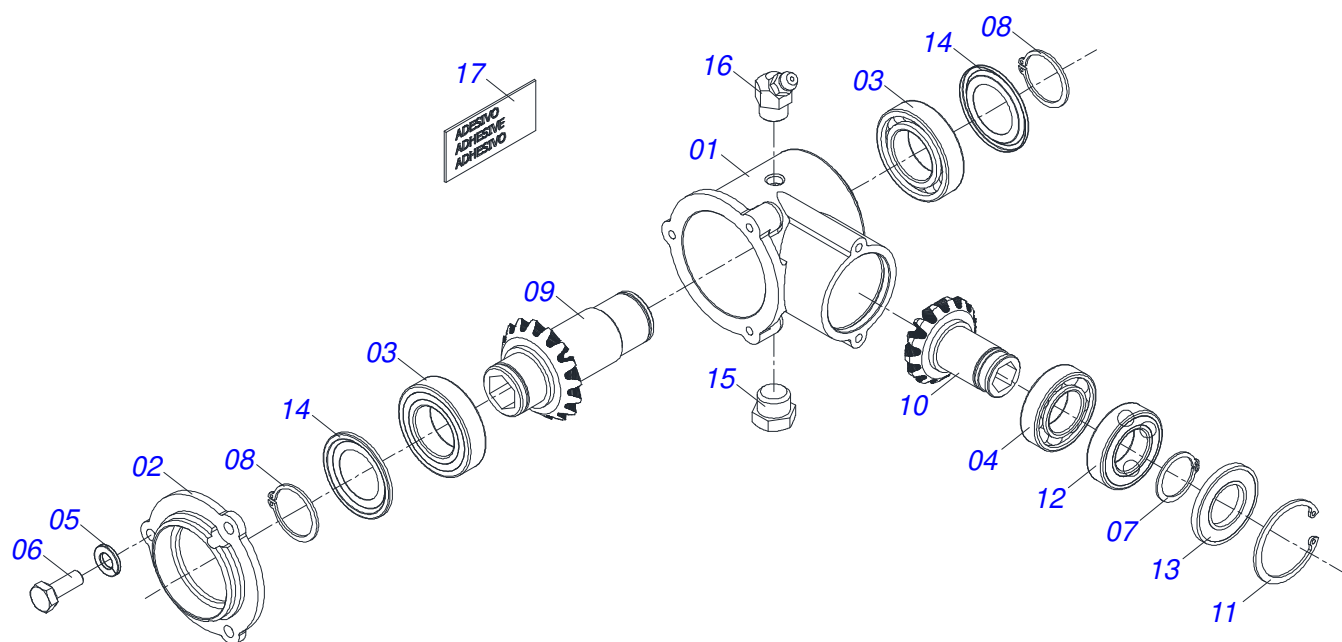


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01
17	0503035316	LUBRICATED POINTS ADHESIVE LABEL		01

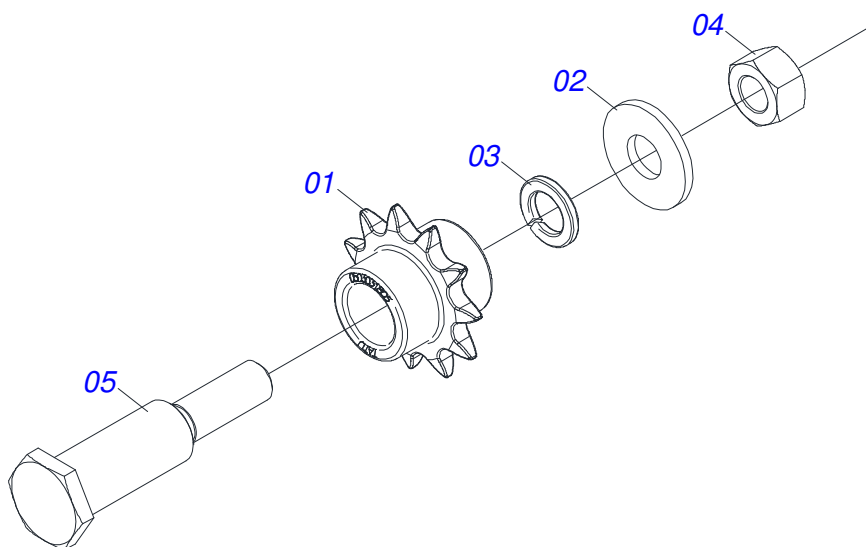


Item	Code	Description	See page	QT
01	0503031805	1 1/2" GEAR		01
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0531019479	AXLE CHAIN GEAR		01

BEARING


0511059872

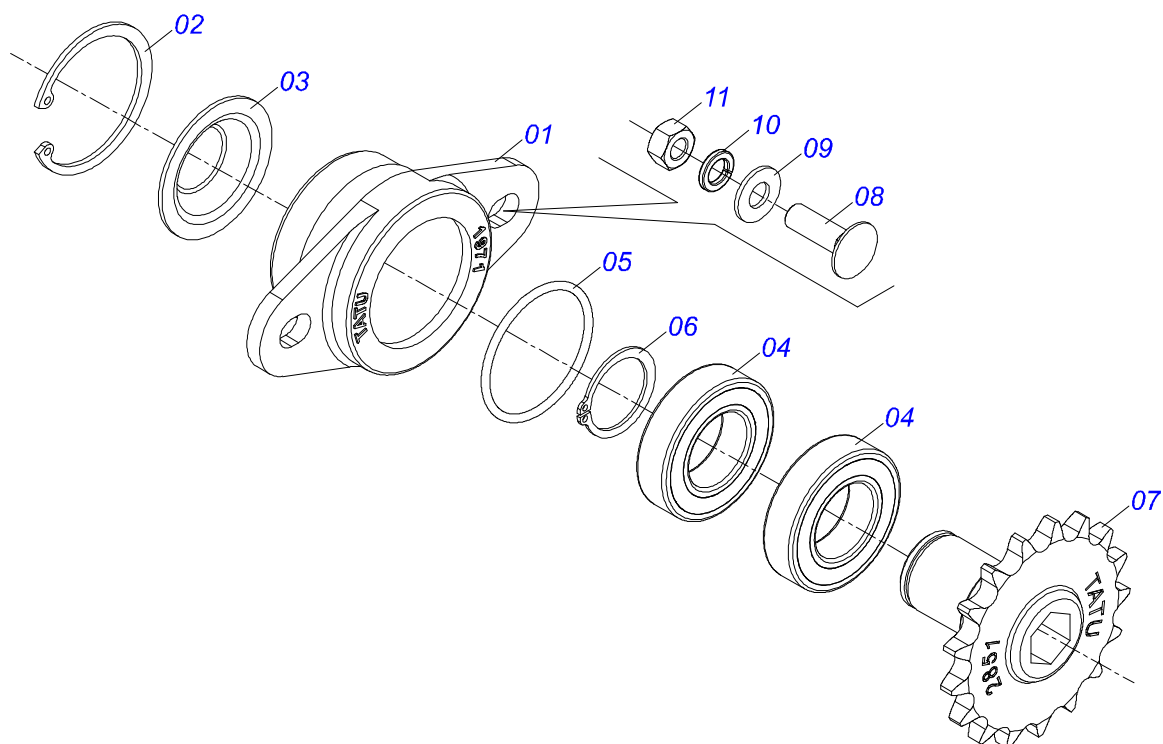


Item	Code	Description	See page	QT
01	0581012948	HOUSING BEARING		01
02	0503011105	SEAL RING		01
03	0581012949	BEARING COVER		01
04	0503011410	ROLLER BEARING		02
05	0503018045	2-130 (AGEL) O'RING		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		01
07	0502012851	17Z GEAR WITH HEX HOLE		01
08	0503011953	5/16" X 1" BOLT		02
09	0501010694	FLAT WASHER		02
10	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
11	0503010337	5/16" NUT		02

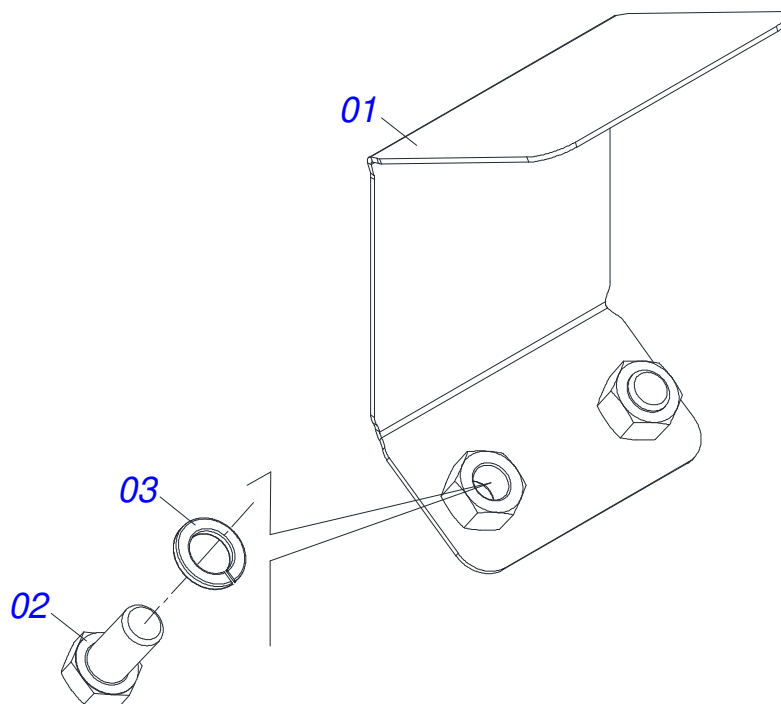


Item	Code	Description	See page	QT
01	0521066693	CAP BEARING		01
02	0503010834	1/2 X 1 BOLT		02
03	0503010019	1/2" SPRING WASHER		02

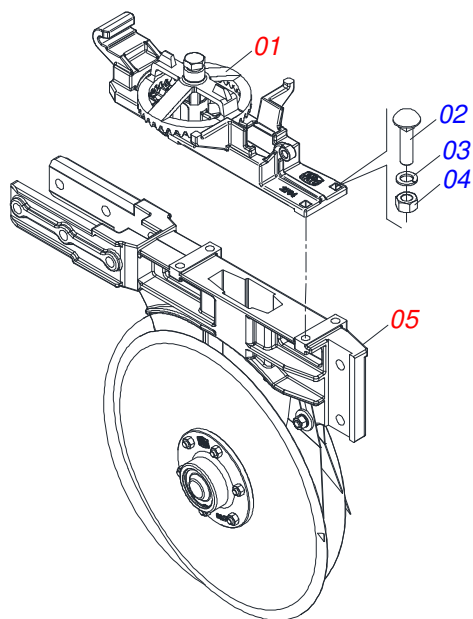


Item	Code	Description	See page	QT
01	0511051888	5/8 ASSY TITANIUM SYSTEM FIXING BASE	120	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0511056585	RIGHT 15" X 15" DOUBLE DISC SEED	121	01

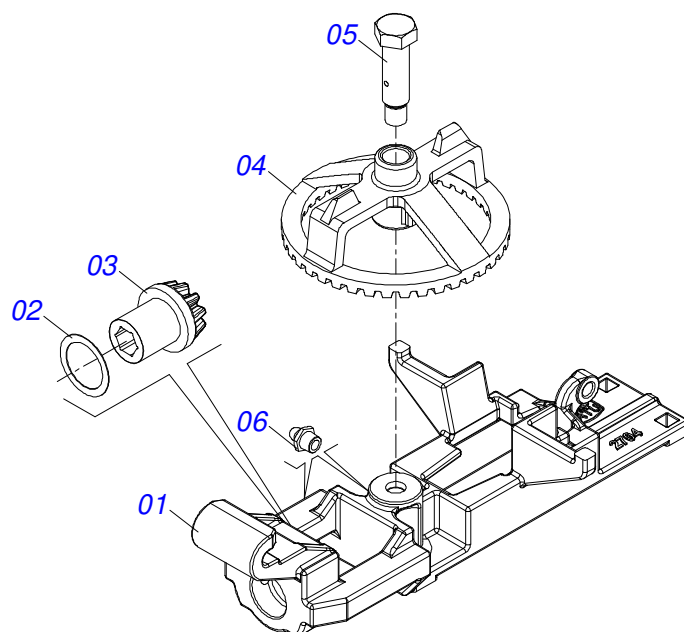


Item	Code	Description	See page	QT
01	0502012704	BASE FIXING SYSTEM		01
02	0501013354	FLAT WASHER		01
03	0502012639	12Z LOWER CONICAL GEAR		01
04	0502011418	40Z CONICAL GEAR		01
05	0511018700	AXLE		01
06	0503010002	1800 GREASE FITTING		02

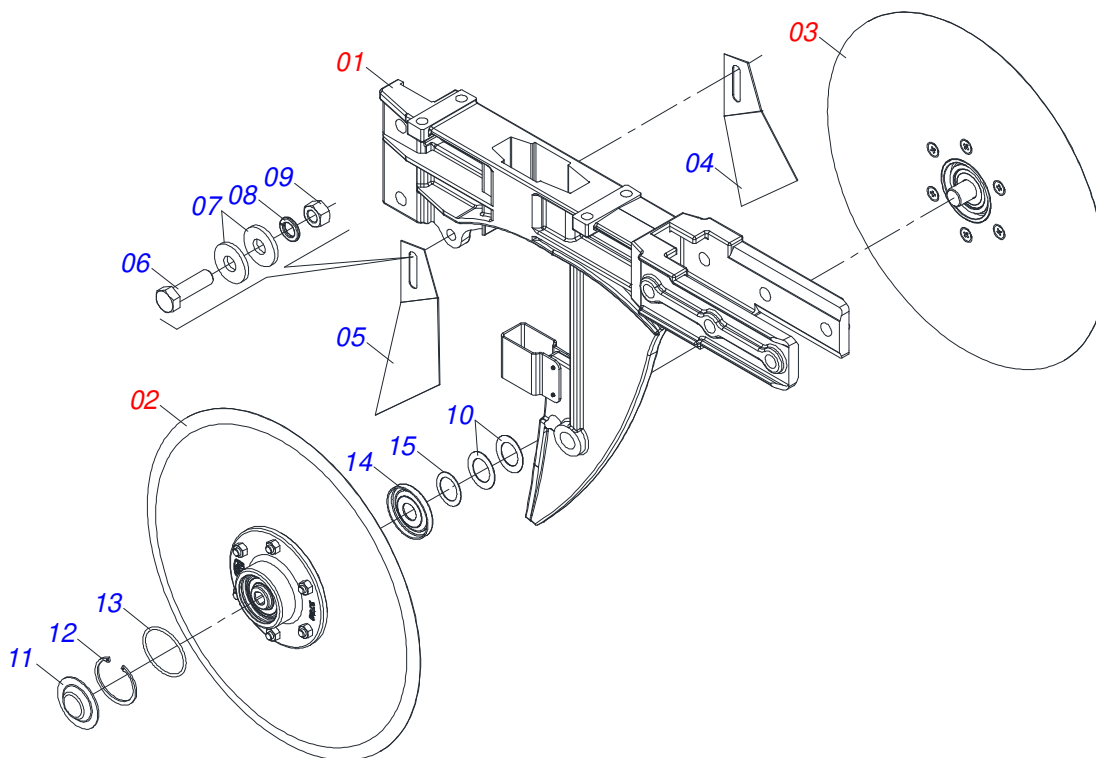


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT	122	01
02	0511053173	RIGHT LOW HUB WITH 15 DISC	123	01
03	0511053172	LEFT LOW HUB WITH 15 DISC	124	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
08	0503010025	3/8 SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511815098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O'RING		02
14	0511011927	DUST CLOAK		02
15	0591014250	19 X 26 X 0,50 FLAT WASHER		02

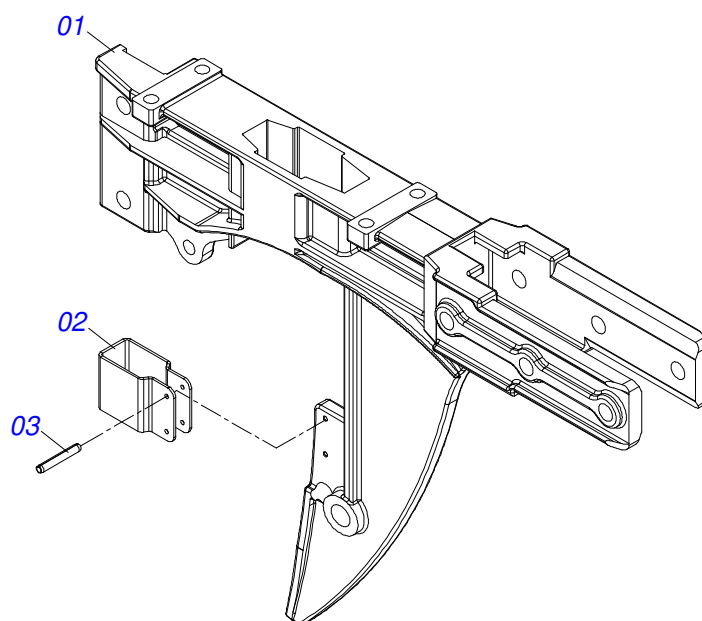


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

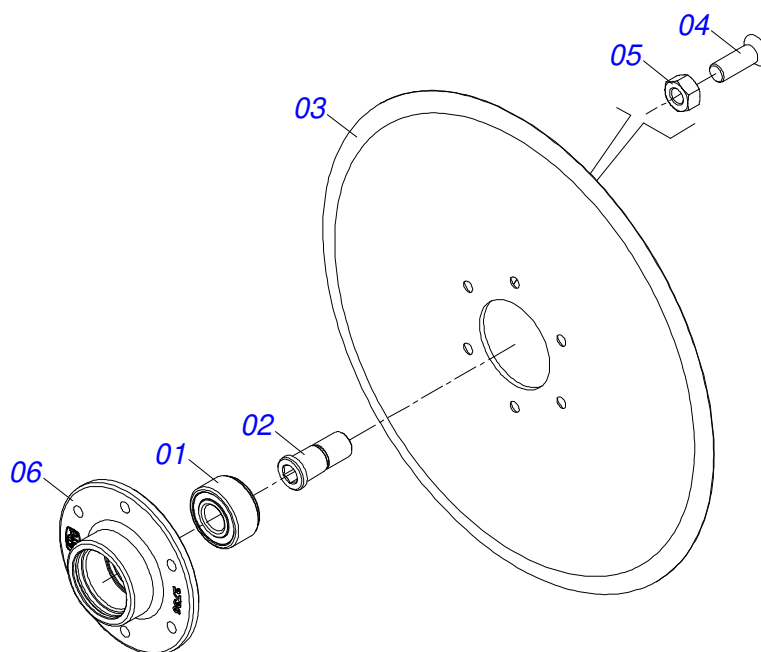


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011150	RIGHT DOUBLE DISC AXLE		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

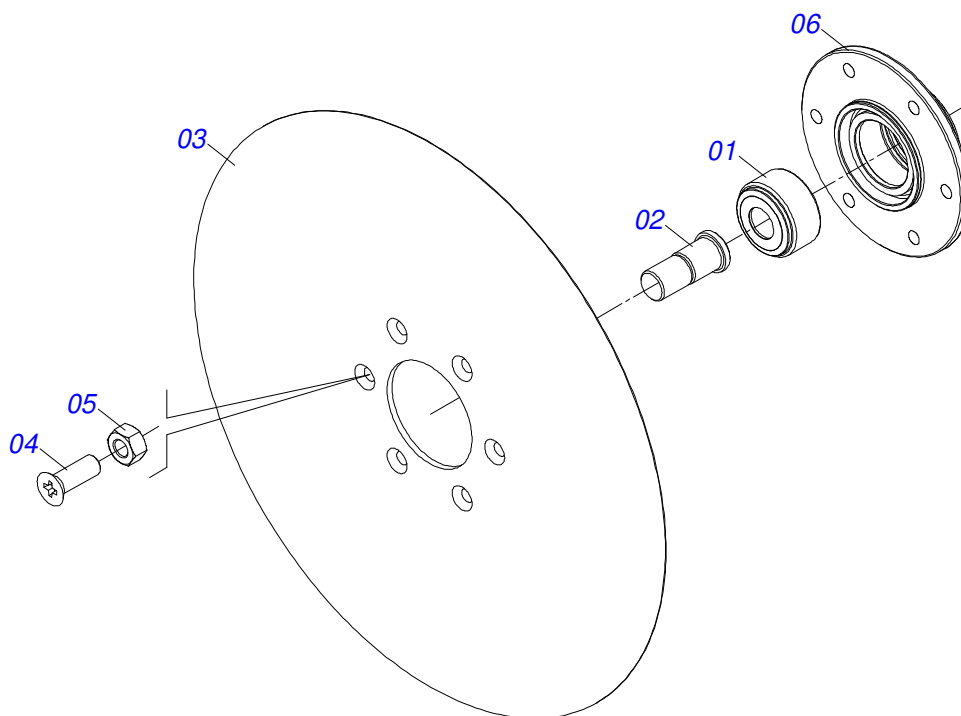


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

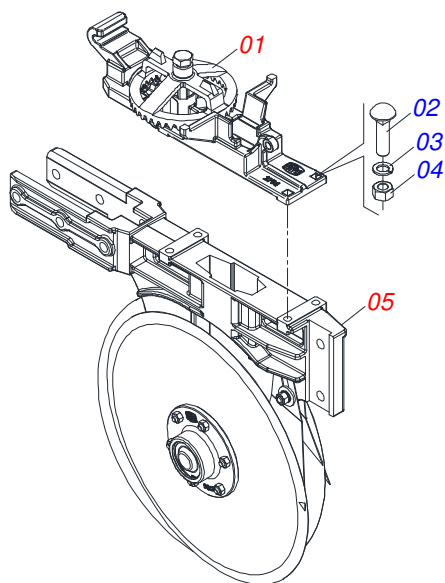


Item	Code	Description	See page	QT
01	0511051888	5/8 ASSY TITANIUM SYSTEM FIXING BASE	120	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503011443	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0511056586	15 X 15 SEED DDD LEFT	126	01

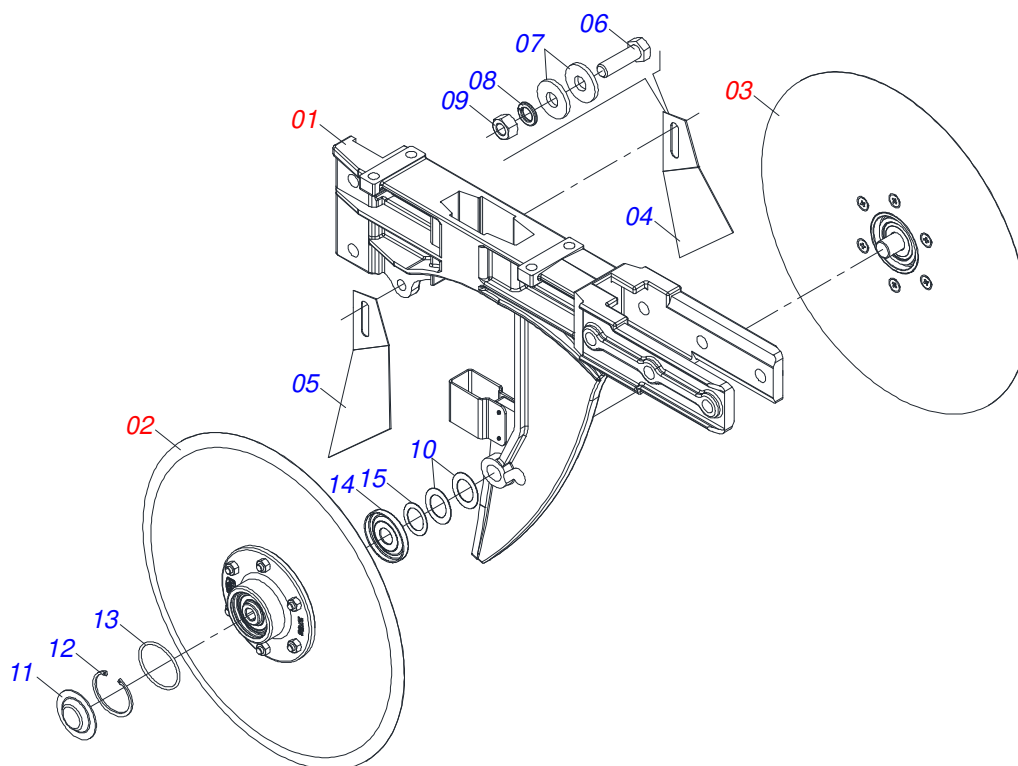


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE		01
02	0511053173	RIGHT LOW HUB WITH 15 DISC	123	01
03	0511053172	LEFT LOW HUB WITH 15 DISC	124	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
08	0503010025	3/8 SPRING WASHER		01
09	0503010026	3/8" NUT		01
10	0511815098	FLAT WASHER		04
11	0571011152	DOUBLE DISC CAP		02
12	0503015081	502052 CLAMPING RING (FOR AXLE)		02
13	0503014679	2-134 O'RING		02
14	0511011927	DUST CLOAK		02
15	0591014250	19 X 26 X 0,50 FLAT WASHER		02

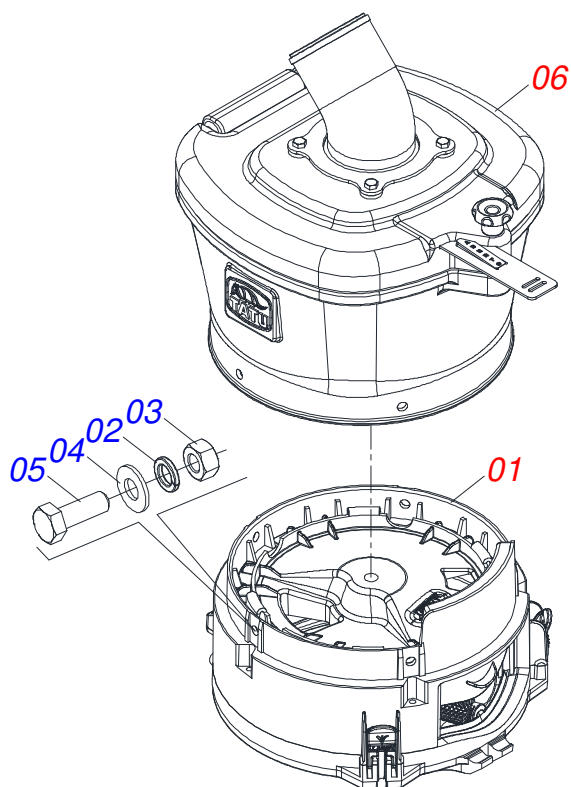


Item	Code	Description	See page	QT
01	0511052058	SEED SYSTEM TITANIUM	130	01
02	0503010179	LOCK WASHER 5/16 ZN 1K01528		05
03	0503010337	5/16" NUT		05
04	0501010694	FLAT WASHER		05
05	0503010358	5/16" X 5/8" BOLT		05
06	0531054583	SEMI-ASSEMBLED SINGLE SEED HOPPER	128	01

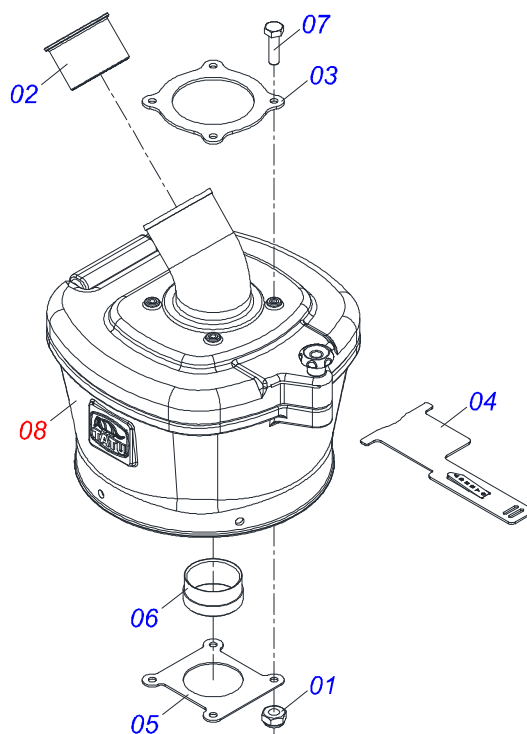


Item	Code	Description	See page	QT
01	0503015536	M6 X 1" SELF ADJUSTING NUT	04	
02	0581014295	FIXING SLEEVE	01	
03	0501213431	SEED NOZZLE FIXING FLANGE	01	
04	0501213520	SEED BREAKER BODY	01	
05	0501213432	BREAKER SUPPORT BASE	01	
06	0501213728	60 X 53 X 30 PVC TUBE	01	
07	0513010720	M6 X 1 X 35 C S G.5 ZB BOLT	04	
08	0503063760	SINGLE SEED HOPPER ASSEMBLED WITH LOCK 129 LID	01	

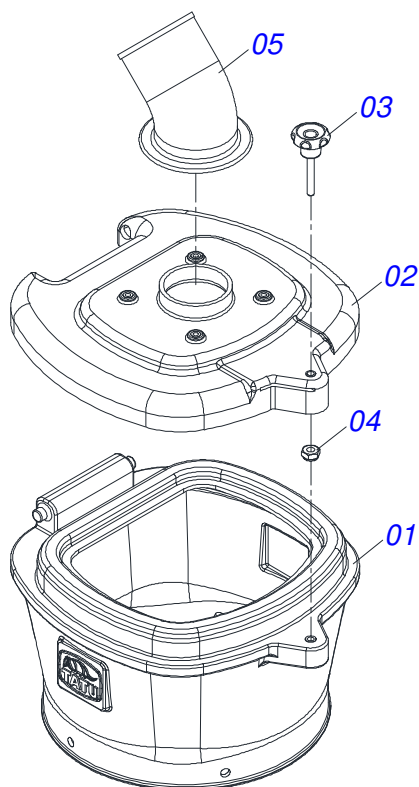


Item	Code	Description	See page	QT
01	0503035751	SIGMA SINGLE SEED HOPPER		01
02	0503035750	SEED HOPPER LID		01
03	0503035298	BAKELITE HANDLE WITH THREAD		01
04	0503015536	M6 X 1" SELF ADJUSTING NUT		01
05	0503035297	CURVED NOZZLE SEED HOPPER		01

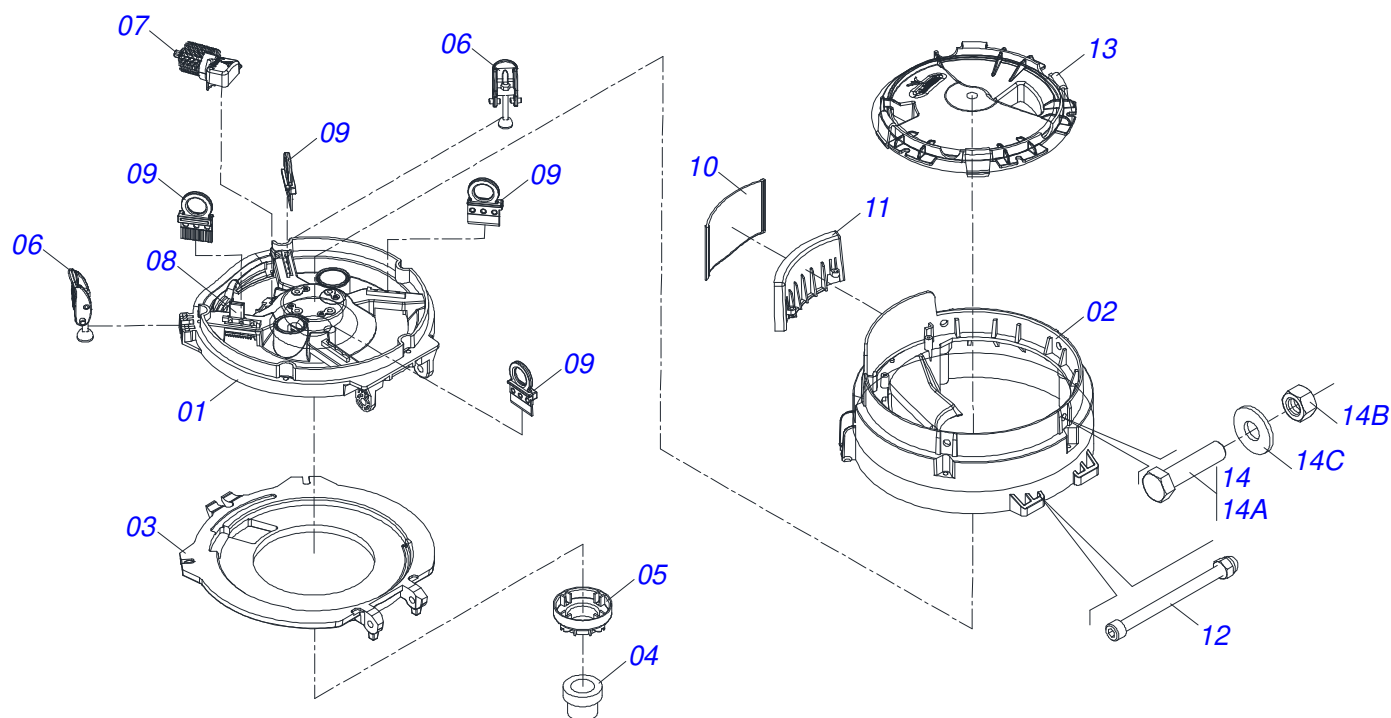


Item	Code	Description	See page	QT
01	0503062031	BASE SET		01
02	0503062032	NECK TITANIUM ASSY		01
03	0503062033	OPPOSITE BASE SET		01
04	0503062034	CENTRAL ADAPTER SET		01
05	0503062035	SET FALSE ADAPT CENTER		01
06	0503062036	SUBSET ASSY LOCK BASE		01
07	0503062037	SUBSET ESCOVAFLEX ASSY		01
08	0503062038	ASSY ANTI-LEAP		01
09	0503062039	POLIFLOW TITANIUM ASSY		01
09.	0503016279	POLIFLOW TITANIUM ASSY		01
10	0503062040	DISPLAY ASSY TITANIUM 1050010		01
11	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
12	0503062042	SET BOLT ARTICULADOR		01
13	0503062043	ASSY LIMIT WEIGHT		01
14	0503062044	ASSEMBLY SEED HOPPER SET		01
14A	0503016285	BOLT		05
14B	0503016286	HEX NUT		05
14C	0503016287	FLAT WASHER		05

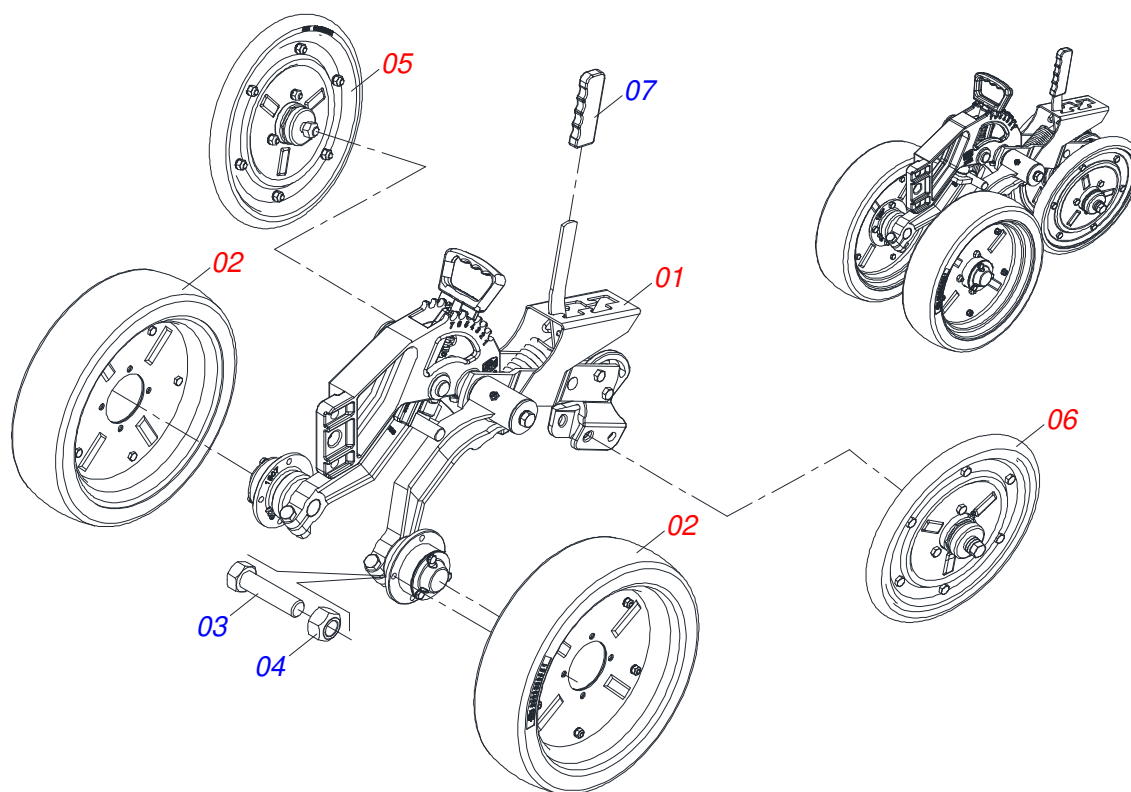


Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	132	01
02	0501052538	DEPTH BAND WITH ARMS	137	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	138	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	140	01
07	0503033942	COMPACTOR WHEEL REGULATOR LID		01

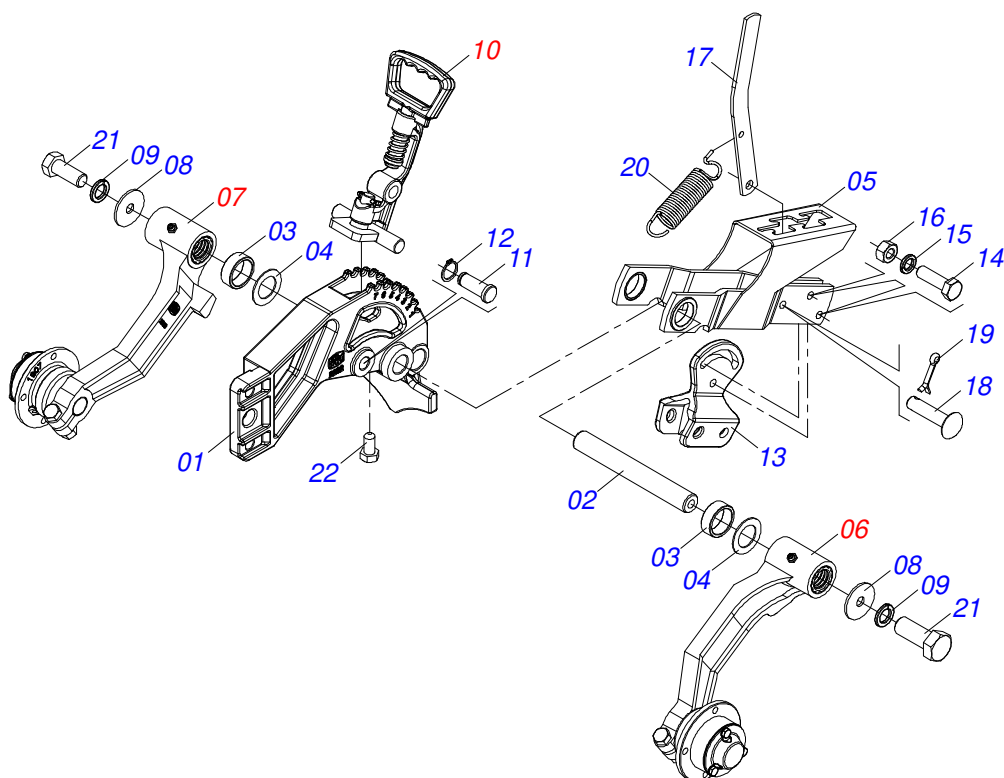

Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT DEPTH WHEEL ARM WITH HUB	133	01
07	0511058651	RIGHT DEPTH WHEEL ARM WITH HUB	134	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	136	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" SPLIT PIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	3/8 UNC X 3/4 BOLT		01

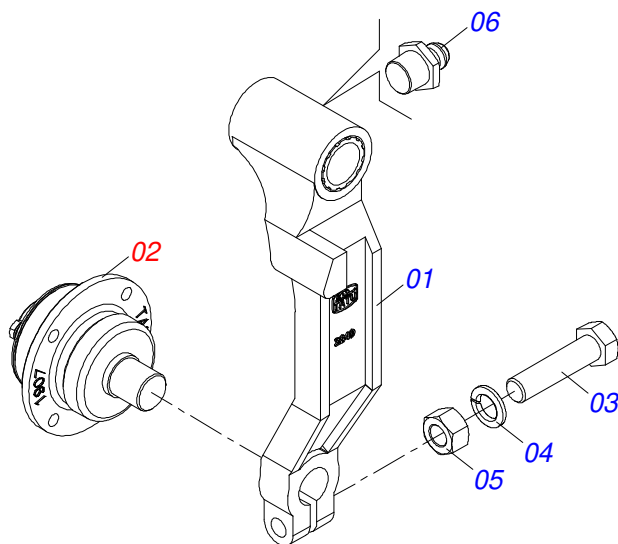


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL HUB	135	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0503010002	1800 GREASE FITTING		01

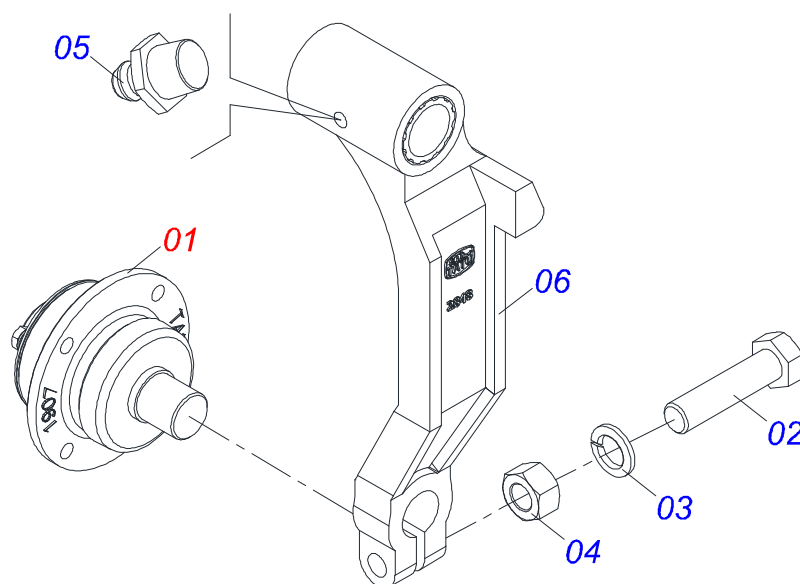


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL HUB	135	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

ASSY DEPTH WHEEL HUB


0501052627

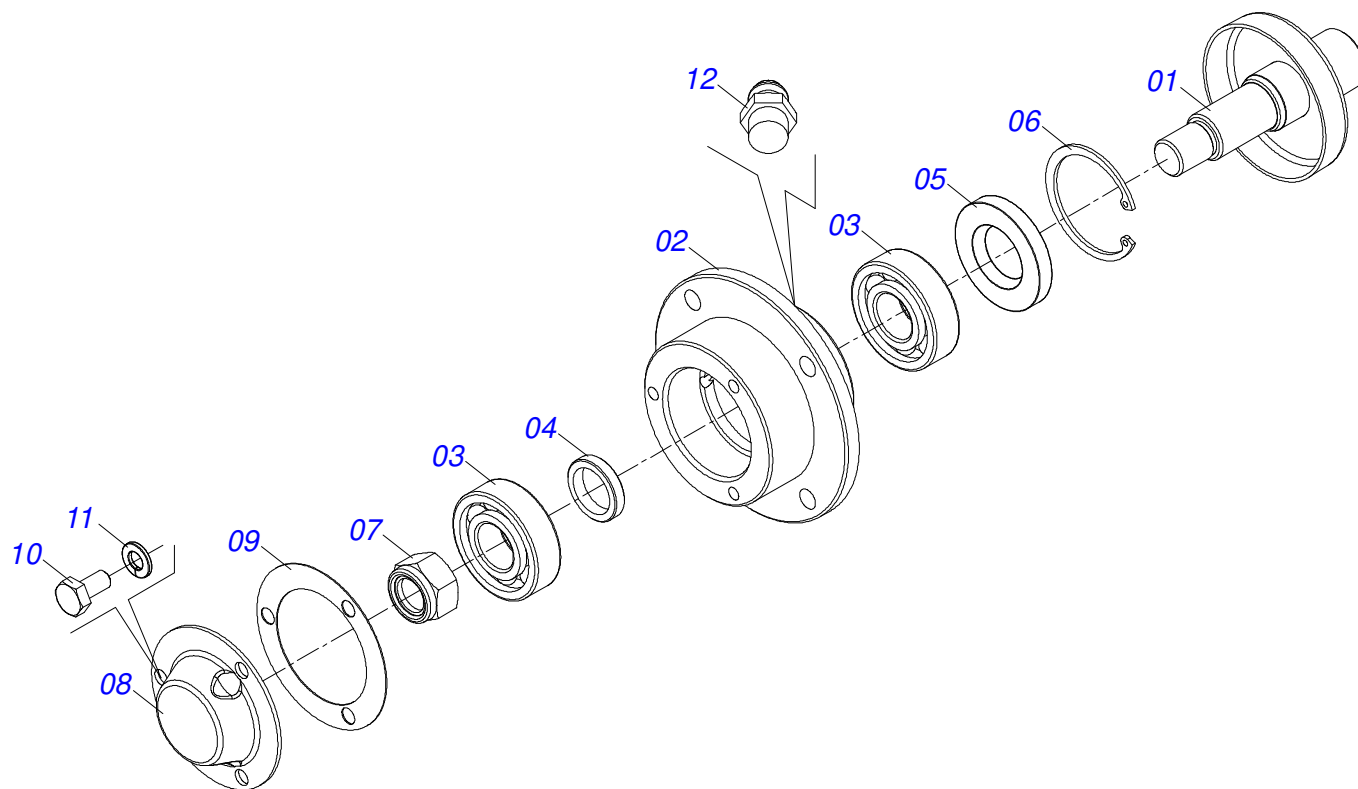


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK	01	
02	0502011907	DEPTH CONTROL WHEEL HUB	01	
03	0503010269	6204 BALL BEARING	02	
04	0501013636	SPACING SLEEVE	01	
05	0503010689	SEAL 00763-BR	01	
06	0503011105	SEAL RING	01	
07	0503010878	5/8" SELF ALIGNING NUT	01	
08	0521019178	PROTECTION LID	01	
09	0503030757	2.9" X 2" X 0.02" JOINT	01	
10	0503014729	1/4" UNF X 1/2" BOLT	03	
11	0503011441	SPRING WASHER	03	
12	0503010691	1/4" GREASE FITTING	01	

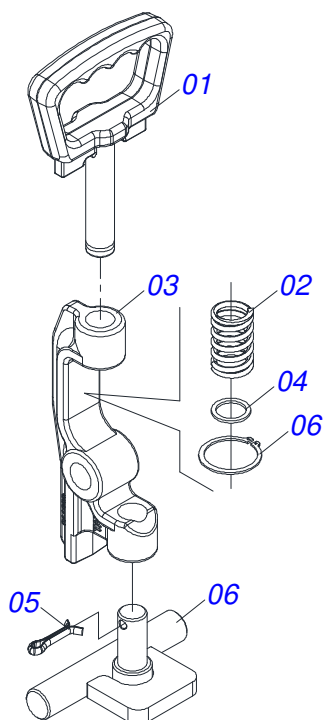


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	DEPTH CONTROL LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" SPLIT PIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

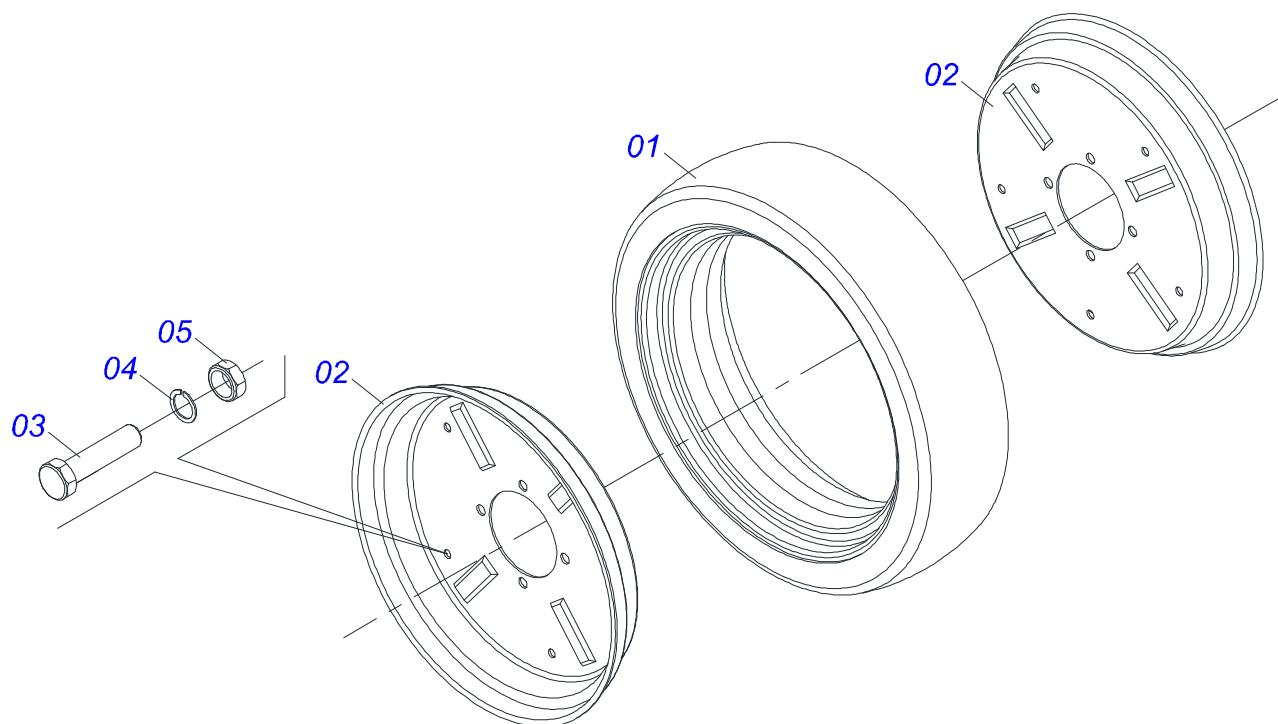


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

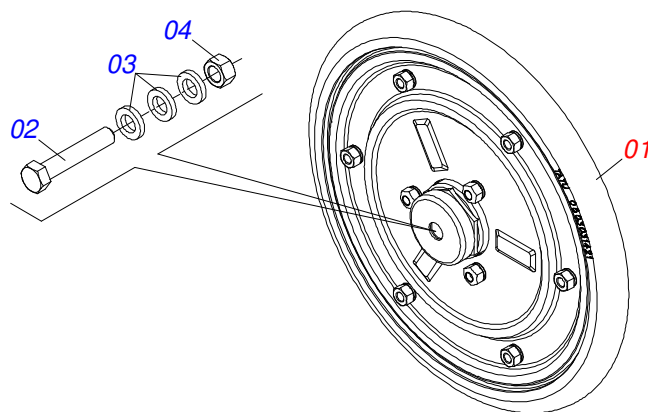


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	139	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

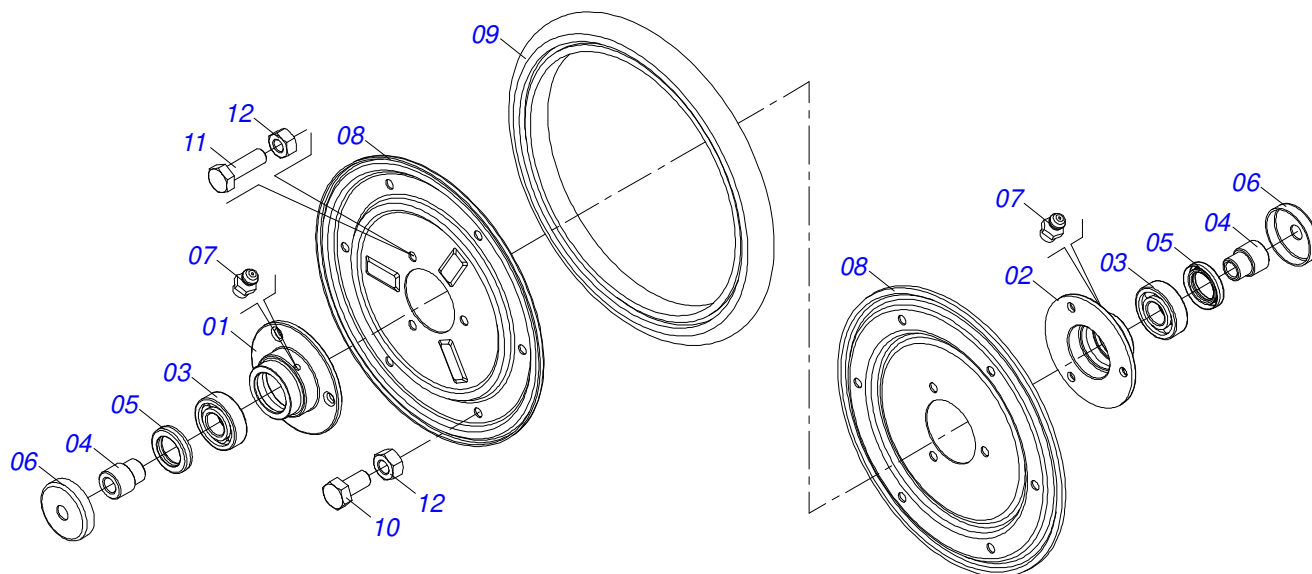


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

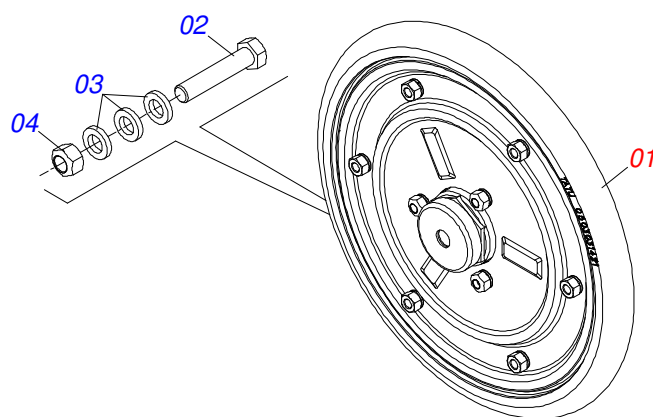

Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	139	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

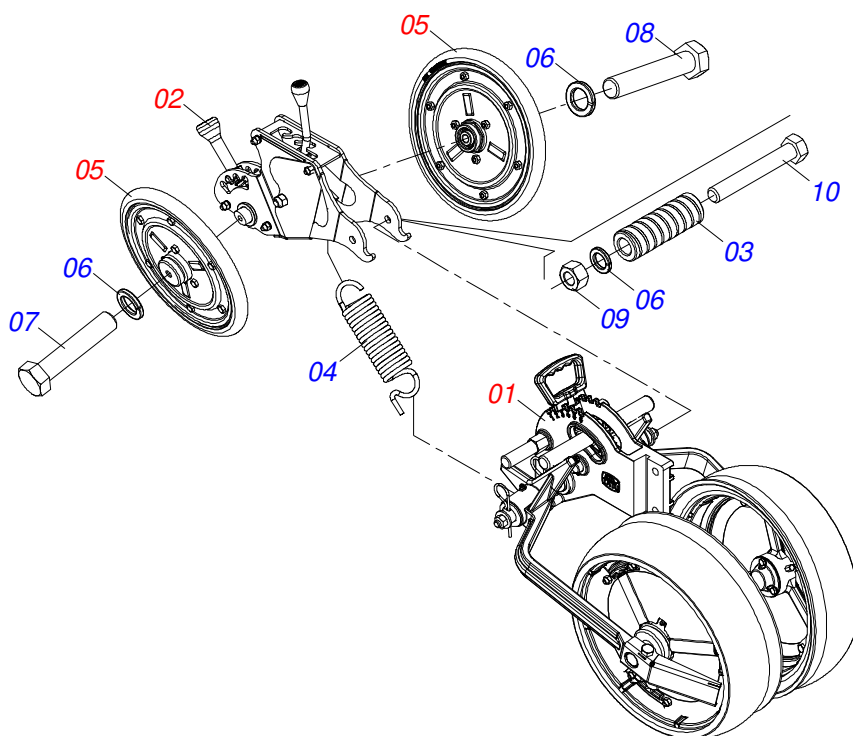


Item	Code	Description	See page	QT
01	0521053059	SYSTEM WHEELS CONTROL COMPACTOR ASSY	142	01
02	0521052825	SUPPORT WHEELS COMPACTORS	148	01
03	0551019650	SLEEVE 13,20 X 25 X 74		01
04	0503031393	1.57" X 5.98" X 0.2" TRACTION SPRING		01
05	0501052908	COMPACTOR WHEEL WITH BEARING	139	02
06	0503010019	1/2" SPRING WASHER		03
07	0503013739	1/2" X 1" BOLT		01
08	0503010752	1/2" X 3.1/2" BOLT		01
09	0503010060	1/2 UNC G.5 ZN HEX NUT		01
10	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01

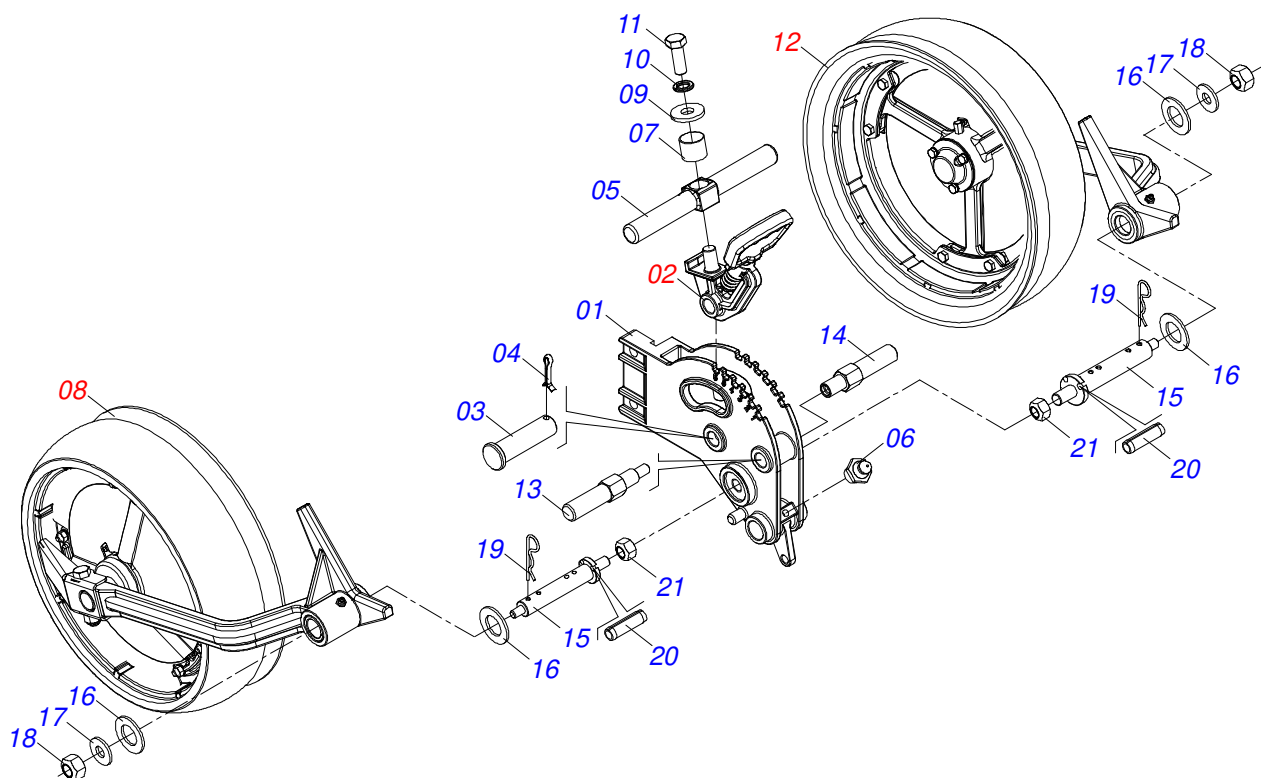


Item	Code	Description	See page	QT
01	0502012758	DEPTH CONTROL SUPPORT		01
02	0501059228	ADJUSTMENT LEVER	143	01
03	0571016132	PIVOT SHAFT		01
04	0503010071	3/16" X 1" SPLIT PIN		01
05	0502012611	DEPTH CONTROL AXLE		01
06	0503010002	1800 GREASE FITTING		01
07	0571015326	ARTICULATION SLEEVE HANDLE		01
08	0521053060	DEPTH WHEEL RIGHT SPACRR CLOSED	144	01
09	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
10	0503011443	3/8" SPRING WASHER		01
11	0503010237	3/8" X 1" BOLT		01
12	0521053061	SPACRR LEFT DEPTH WHEEL CLOSED	147	01
13	0581017075	LARGER AXLE		01
14	0581017076	SMALLER AXLE		01
15	0581017077	CARRYING-WHEELS PIVOT SHAFT		02
16	0501011445	FLAT WASHER		04
17	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
18	0503011336	1/2" HEX SELF ADJUSTING NUT		02
19	0503030012	HITCH PIN CLIP		04
20	0503011402	0.2" X 0.8" SPRING PIN		02
21	0503012795	5/8" HEX SELF ADJUSTING NUT		02

ADJUSTMENT LEVER


0501059228

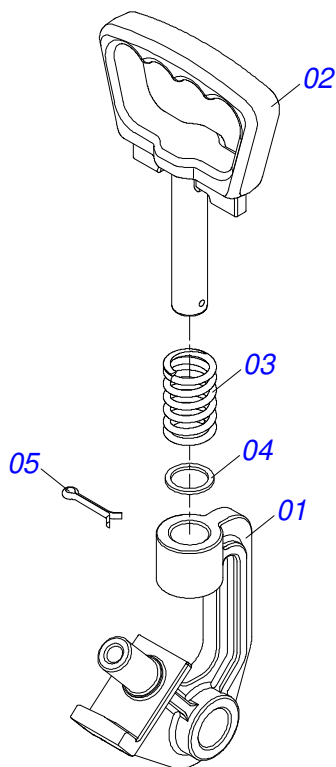

Item	Code	Description	See page	QT
01	0502012603	ADJUSTMENT LEVER		01
02	0502011689	1/8" DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0511015976	FLAT WASHER		01
05	0503010140	1/8" X 3/4" SPLIT PIN		01

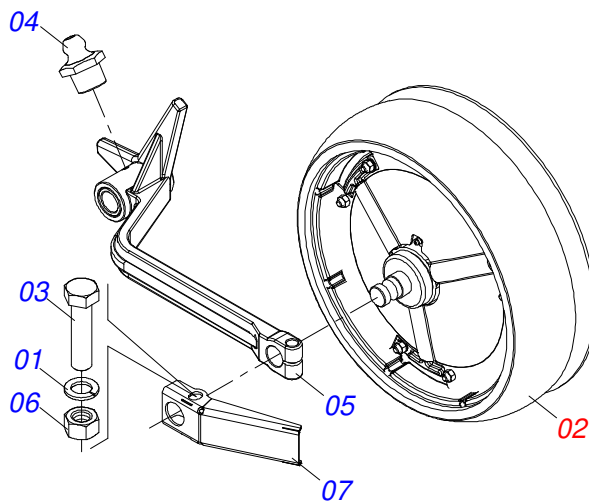


Item	Code	Description	See page	QT
01	0503010019	1/2" SPRING WASHER		01
02	0521053062	WHEEL RAYED ASSY (SPA) CLOSED	145	01
03	0503016453	1/2" X 2.1/2 BOLT		01
04	0503010002	1800 GREASE FITTING		01
05	0501110777	RIGHT WHEEL ARM		01
06	0503010028	1/2" NUT		01
07	0581018815	SET DEVIATION		01

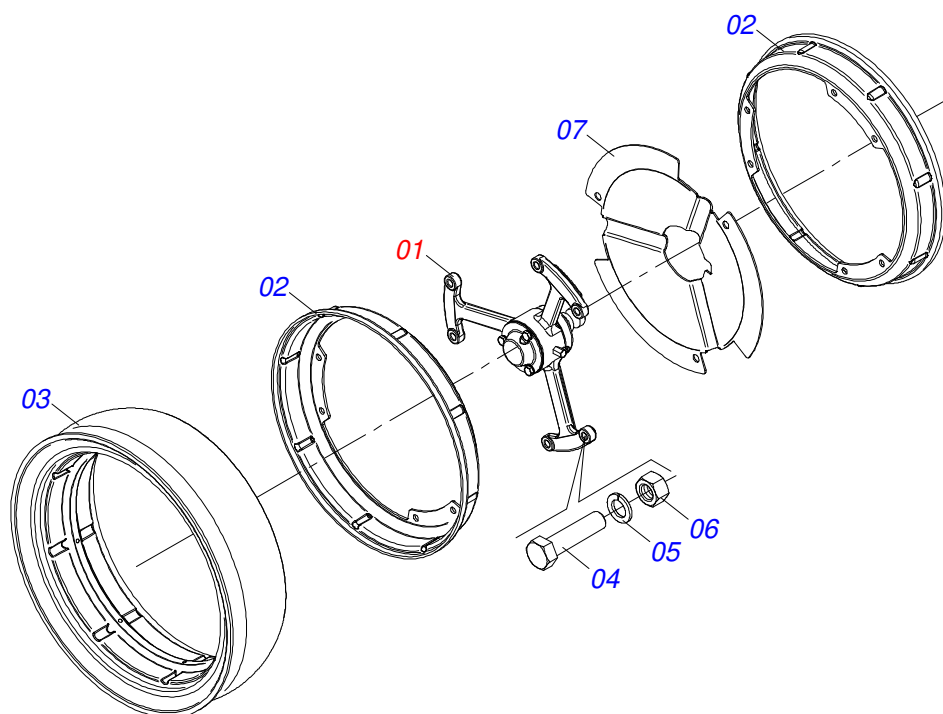


Item	Code	Description	See page	QT
01	0511055626	SPREADED DEPTH WHEEL HUB	146	01
02	0551019904	PRESS WHEEL RIM		02
03	0503030891	RUBBER BAND		01
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
06	0503010337	5/16" NUT		06
07	0561016889	STRIPED CAP WHEEL DEPTH		01

SPREADED DEPTH WHEEL HUB


0511055626

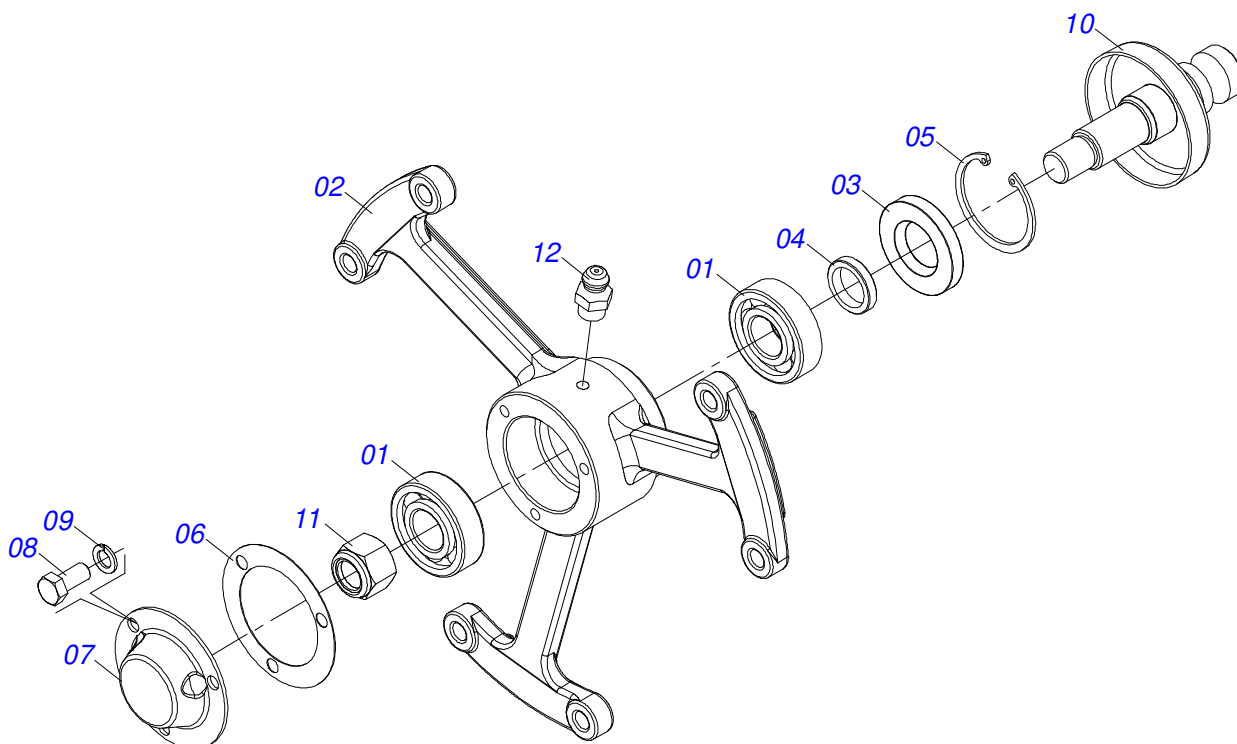


Item	Code	Description	See page	QT
01	0503010269	6204 BALL BEARING		02
02	0502012607	DEPTH SPREADED WHEEL HUB		01
03	0503010689	SEAL 00763-BR		01
04	0501013636	SPACING SLEEVE		01
05	0503011105	SEAL RING		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0521019178	PROTECTION LID		01
08	0503013758	1/4" X 1-1/2" BOLT		03
09	0503011441	SPRING WASHER		03
10	0521063443	DEPTH CONTROL AXLE		01
11	0503010811	5/8" UNF SELF ADJUSTING NUT		01
12	0503010691	1/4" GREASE FITTING		01

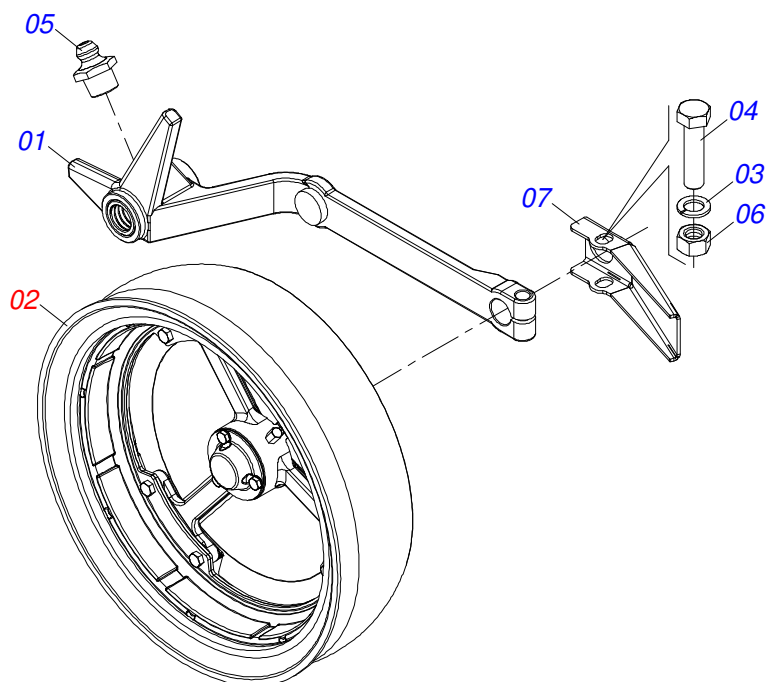


Item	Code	Description	See page	QT
01	0501110776	ARM,LEFT		01
02	0521053062	WHEEL RAYED ASSY (SPA) CLOSED	145	01
03	0503010019	1/2" SPRING WASHER		01
04	0503016453	1/2" X 2.1/2 BOLT		01
05	0503010002	1800 GREASE FITTING		01
06	0503010028	1/2" NUT		01
07	0581018815	SET DEVIATION		01

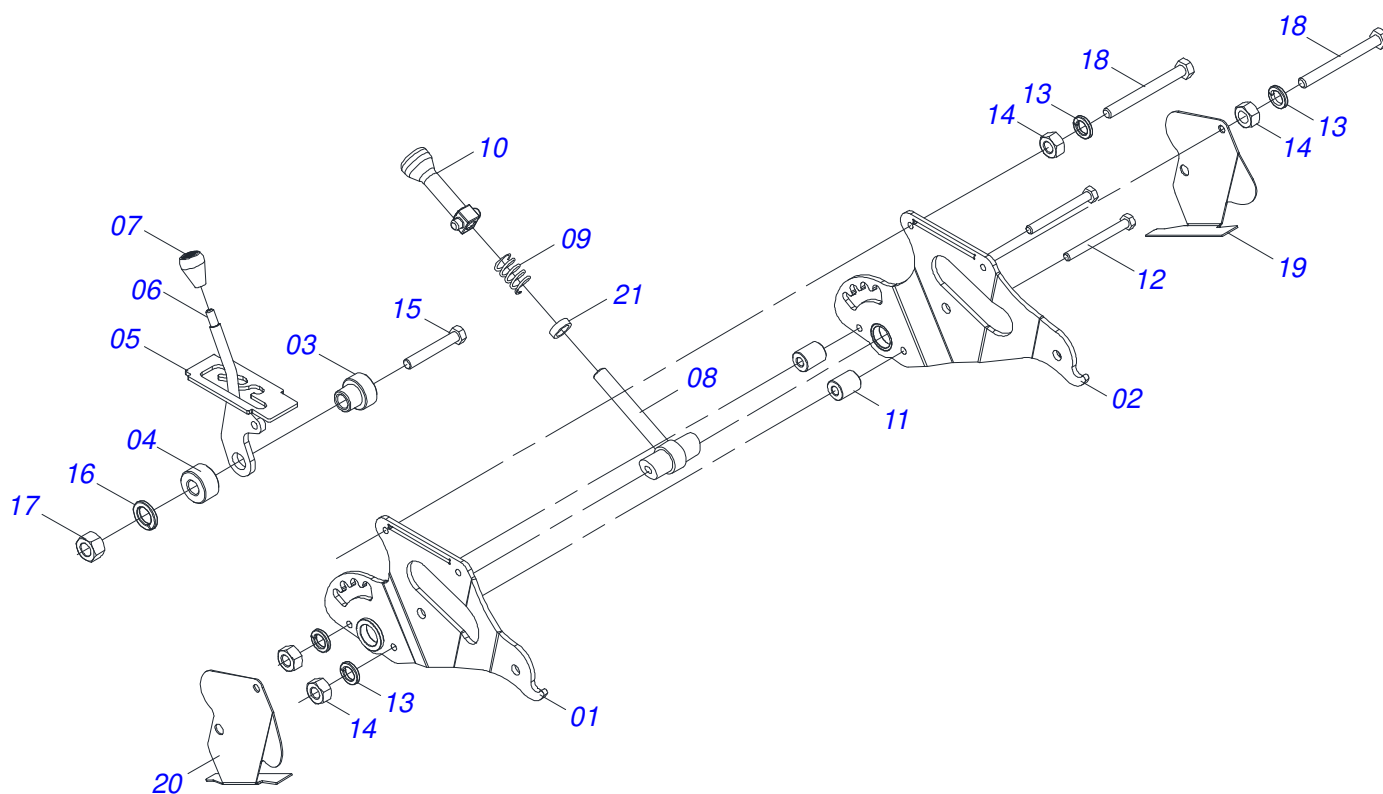

Item	Code	Description	See page	QT
01	0521068514	LEFT SIDE BASE	01	
02	0521068660	RIGHT SIDE BASE	01	
03	0581014969	GUIDE SLEEVE	01	
04	0581014968	SLEEVE FLANGE	01	
05	0581014847	PLATE UPPER	01	
06	0521068661	LEVER	01	
07	0503030878	LEVER CRANK	01	
08	0521068004	HANDLE BODY	01	
09	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING	01	
10	0502012877	PRESS WHEEL ADJUSTMENT LEVER	01	
11	0581015855	SLEEVE	02	
12	0503010882	BOLT	02	
13	0503010179	LOCK WASHER 5/16 ZN 1K01528	04	
14	0503010337	5/16" NUT	04	
15	0503010847	1/2" X 3.1/4" BOLT	01	
16	0503010019	1/2" SPRING WASHER	01	
17	0503010060	1/2 UNC G.5 ZN HEX NUT	01	
18	0503010937	5/16" X 3" BOLT	02	
19	0581015853	LEFT PROTECTION COVER	02	
20	0581015854	RIGHT PROTECTION COVER	02	
21	0581015903	SPACER WASHER	01	

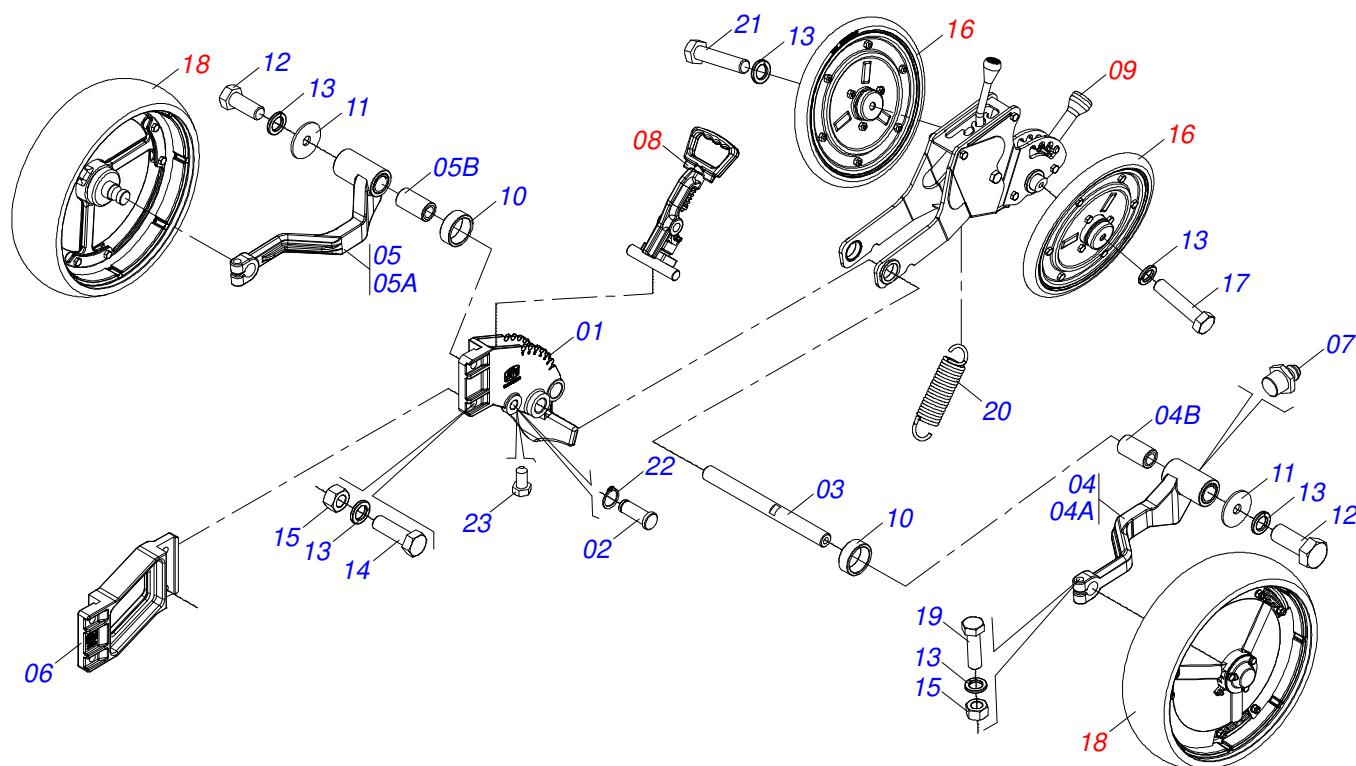


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0581014858	DEPTH WHEEL AXLE		01
04	0501110720	ARM LEFT		01
04A	0502012726	LEFT DEPTH WHEEL ARM		01
04B	0503034375	WHEEL ARM SLEEVE		02
05	0501110719	DEPTH CONTROL RIGHT ARM		01
05A	0502012725	DEPTH WHEEL RIGHT ARM		01
05B	0503034375	WHEEL ARM SLEEVE		02
06	0502012663	EXTENSION		01
07	0503010002	1800 GREASE FITTING		02
08	0501056769	DEPTH WHEELS REGULATOR ASSY	150	01
09	0521051423	COMPACTOR SUPPORT	151	01
10	0503034793	ARTICULATION SLEEVE		02
11	0571017749	FLAT WASHER		02
12	0503010311	1/2" X 1-1/4" BOLT		02
13	0503010019	1/2" SPRING WASHER		08
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
15	0503010060	1/2 UNC G.5 ZN HEX NUT		04
16	0501052908	COMPACTOR WHEEL WITH BEARING	139	02
17	0503013739	1/2" X 1" BOLT		01
18	0511050077	WHEEL STRIPED	152	02
19	0503016453	1/2" X 2.1/2 BOLT		02
20	0503034817	SPRING		01
21	0503010752	1/2" X 3.1/2" BOLT		01
22	0503010581	RING		01
23	0503034377	3/8 UNC X 3/4 BOLT		01

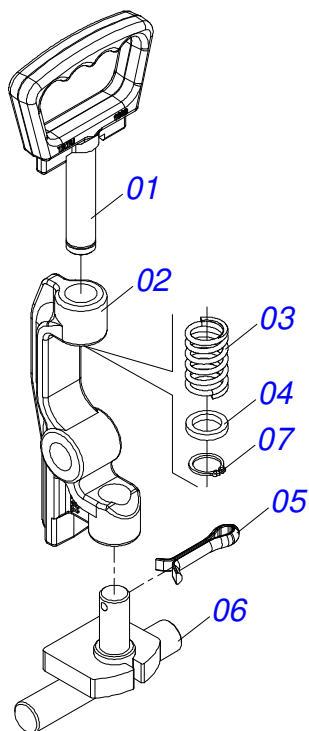


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" SPLIT PIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

COMPACTOR SUPPORT

0521051423

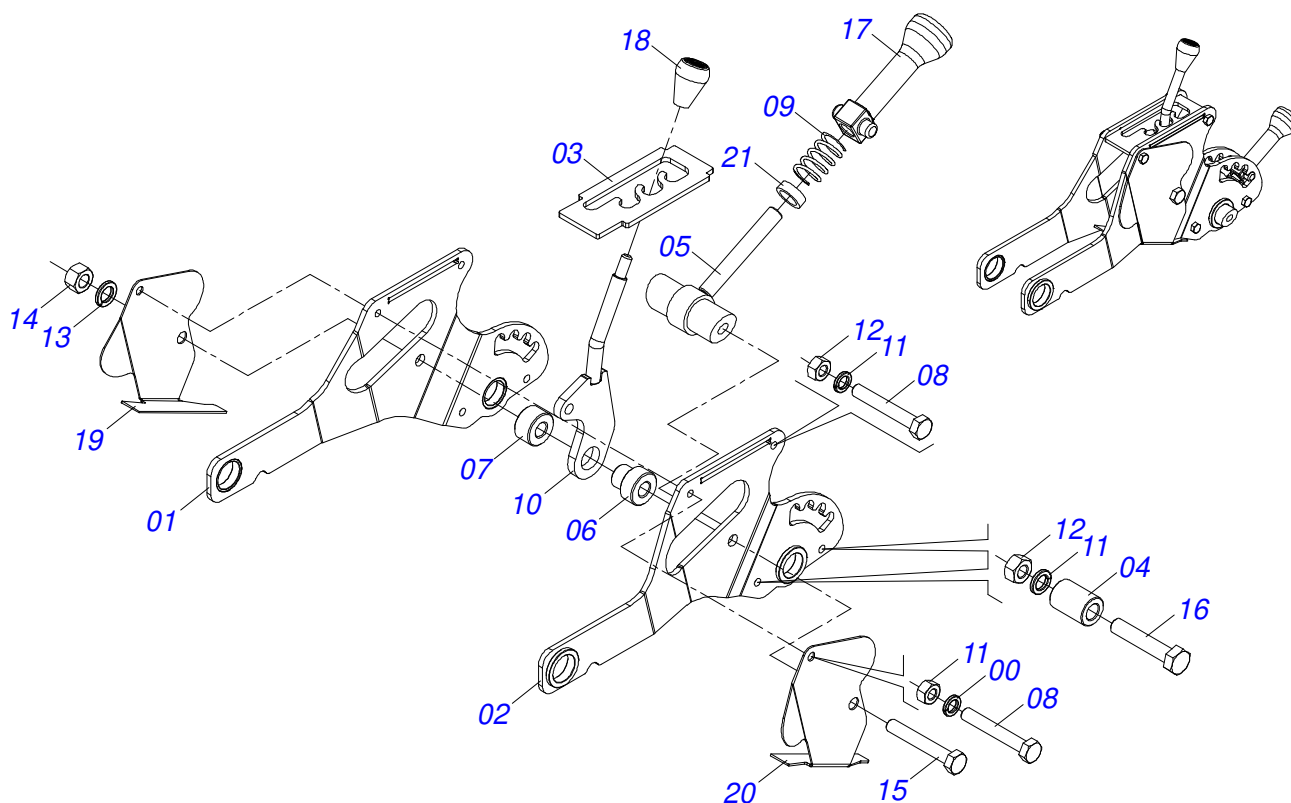


Item	Code	Description	See page	QT
01	0521068003	RIGHT SIDE		01
02	0521068002	LEFT SIDE		01
03	0581014847	PLATE UPPER		01
04	0581015855	SLEEVE		02
05	0521068004	HANDLE BODY		01
06	0581014969	GUIDE SLEEVE		01
07	0581014968	SLEEVE FLANGE		01
08	0503010937	5/16" X 3" BOLT		02
09	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
10	0521068005	LEVER		01
11	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
12	0503010337	5/16" NUT		04
13	0503010019	1/2" SPRING WASHER		01
14	0503010060	1/2 UNC G.5 ZN HEX NUT		01
15	0503010847	1/2" X 3.1/4" BOLT		01
16	0503010882	BOLT		02
17	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
18	0503030878	LEVER CRANK		01
19	0581015854	RIGHT PROTECTION COVER		01
20	0581015853	LEFT PROTECTION COVER		01
21	0581015903	SPACER WASHER		01

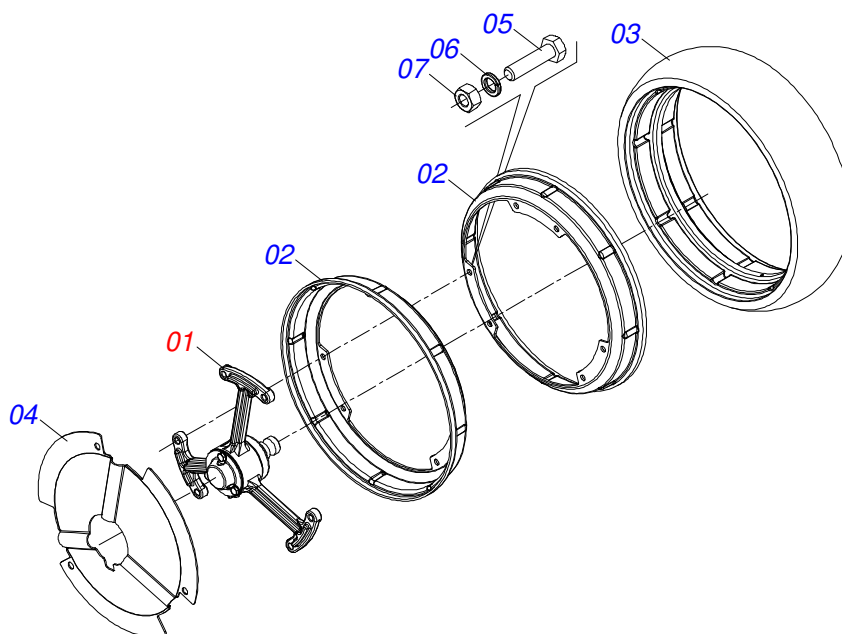


Item	Code	Description	See page	QT
01	0511052287	DEPTH WHEEL HUB ASSY	153	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
07	0503010337	5/16" NUT		06

DEPTH WHEEL HUB ASSY


0511052287

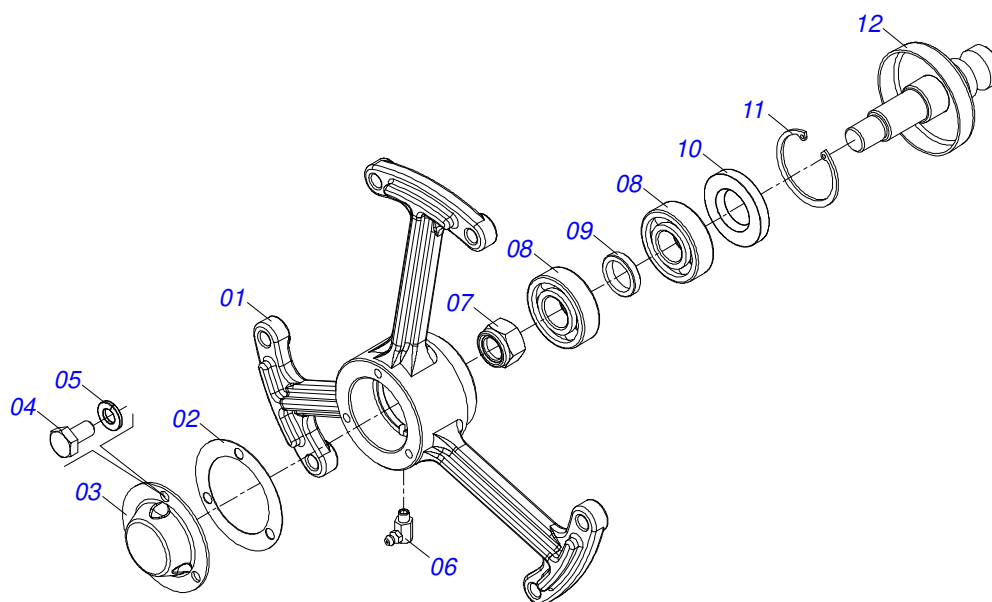


Item	Code	Description	See page	QT
01	0502011918	DEPHT WHEEL HUB		01
02	0503030757	2.9" X 2" X 0.02" JOINT		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503011098	1/4" GREASE FITTING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503010269	6204 BALL BEARING		02
09	0501013636	SPACING SLEEVE		01
10	0503010689	SEAL 00763-BR		01
11	0503011105	SEAL RING		01
12	0521063443	DEPTH CONTROL AXLE		01

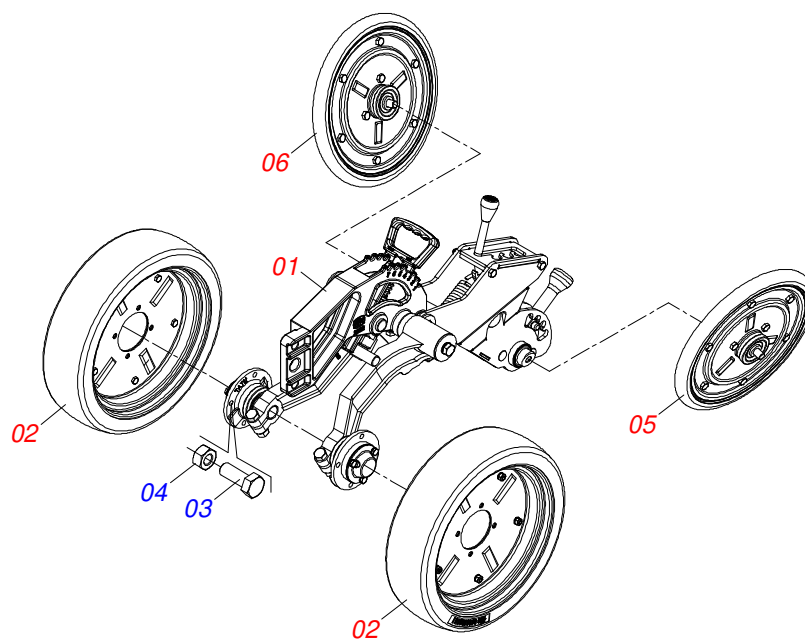


Item	Code	Description	See page	QT
01	0521054986	DEPTH CONTROL SEMI MOUNTED WITHOUT LUBRICATION	155	01
02	0501052538	DEPTH BAND WITH ARMS	137	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0521054990	LEFT COMPACTOR WHEEL	160	01
06	0521055017	RIGHT COMPACTOR WHEEL	161	01

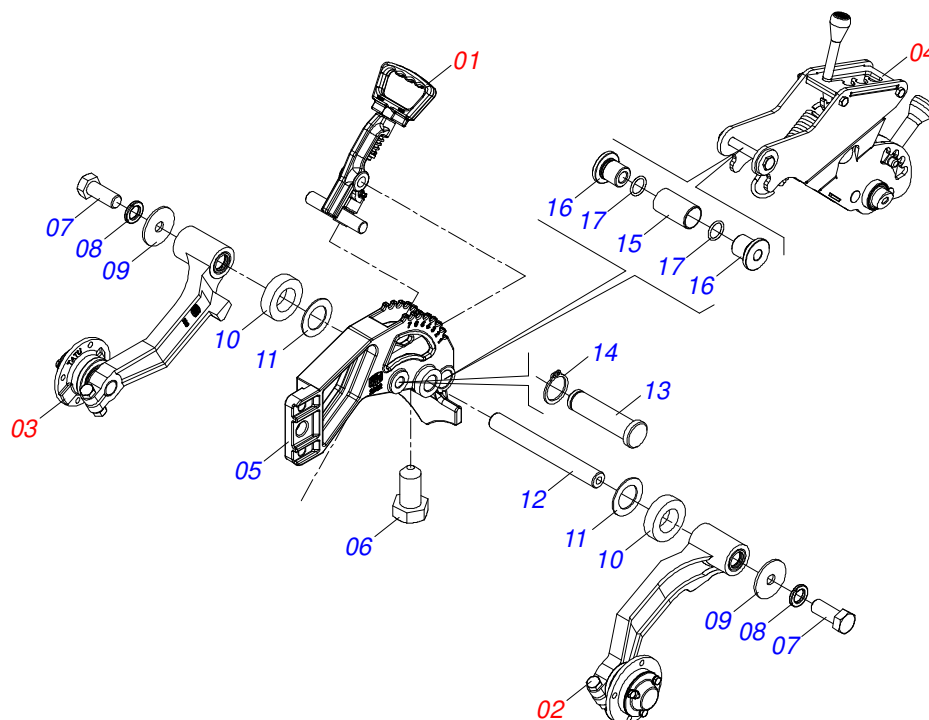


Item	Code	Description	See page	QT
01	0501052297	DEPTH WHEELS REGULATOR ASSY	136	01
02	0521054987	LEFT ARM WITH HUB WITHOUT LUBRIFICATION	156	01
03	0521054988	RIGHT ARM WITH HUB WITHOUT LUBRIFICATION	158	01
04	0521055033	SEMI-ASSEMBLED COMPACTOR BODY	159	01
05	0502012282	DEPTH CONTROL SUPPORT		01
06	0503034377	3/8 UNC X 3/4 BOLT		01
07	0503010311	1/2" X 1-1/4" BOLT		02
08	0503010019	1/2" SPRING WASHER		02
09	0571017749	FLAT WASHER		02
10	0571015974	WASHER		02
11	0511015346	FLAT WASHER		02
12	0581011100	DEPTH WHEEL AXLE		01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010581	RING		01
15	0503019275	SLEEVE LUBRICATION SYSTEM		01
16	0581019473	ARTICULATED SLEEVE		02
17	0503010045	O'RING		02

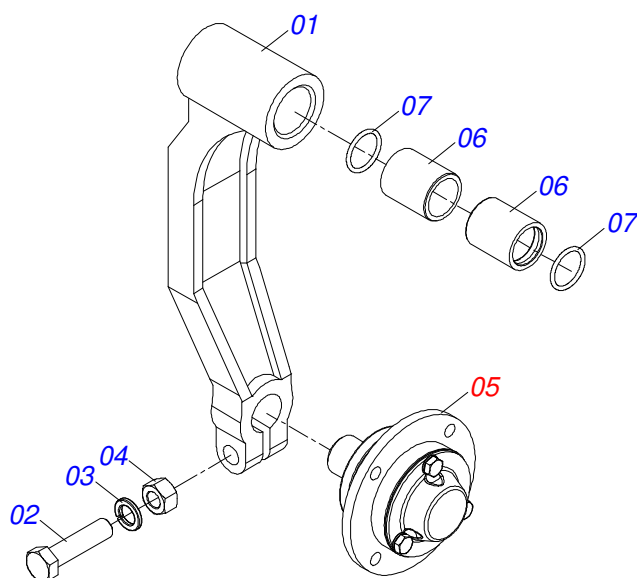


Item	Code	Description	See page	QT
01	0581019472	LEFT ARM WHEEL CONTROL DEPTH		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0521055016	CUBE DEPTH CONTROL WITHOUT LUBRICATION	157	01
06	0581019514	LUBRICANT SLEEVE		02
07	0503011109	2-119 N 3006-9B O'RING		02

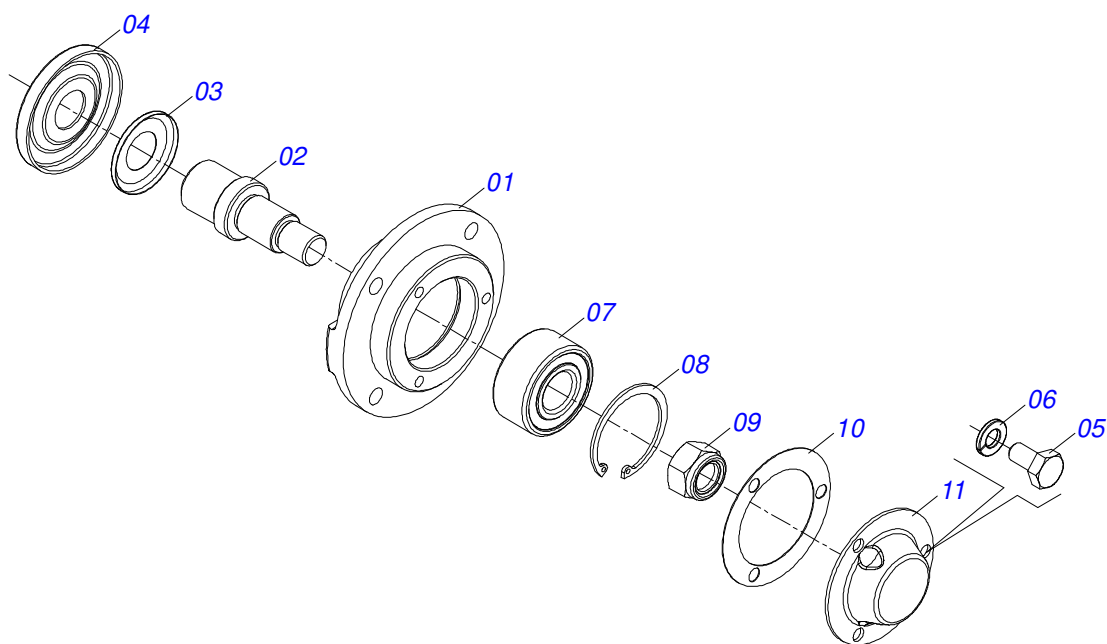


Item	Code	Description	See page	QT
01	0581019513	DEPTH WHEEL HUB		01
02	0581019515	AXIS		01
03	0503034055	CLAMPING RING		01
04	0581019168	DUST CLOAK		01
05	0503013758	1/4" X 1-1/2" BOLT		03
06	0503010143	1/4" SPRING WASHER		03
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0503010878	5/8" SELF ALIGNING NUT		01
10	0503030757	2.9" X 2" X 0.02" JOINT		01
11	0521019178	PROTECTION LID		01

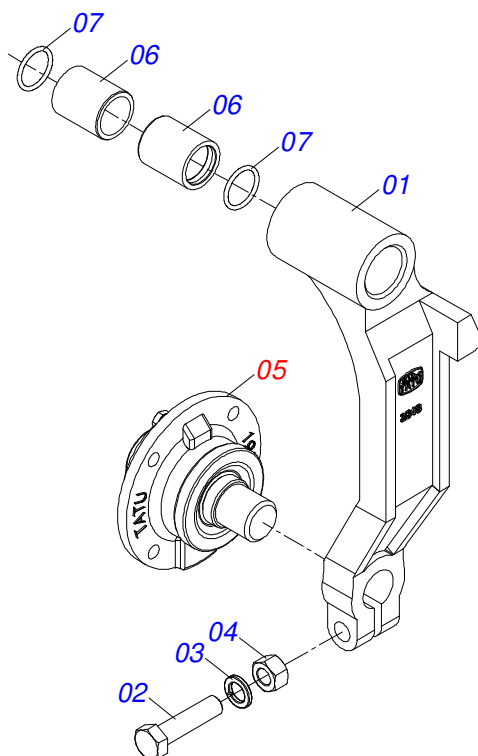


Item	Code	Description	See page	QT
01	0581019527	RIGHT ARM WHEEL CONTROL DEPTH		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0521055016	CUBE DEPTH CONTROL WITHOUT LUBRICATION	157	01
06	0581019514	LUBRICANT SLEEVE		02
07	0503011109	2-119 N 3006-9B O'RING		02

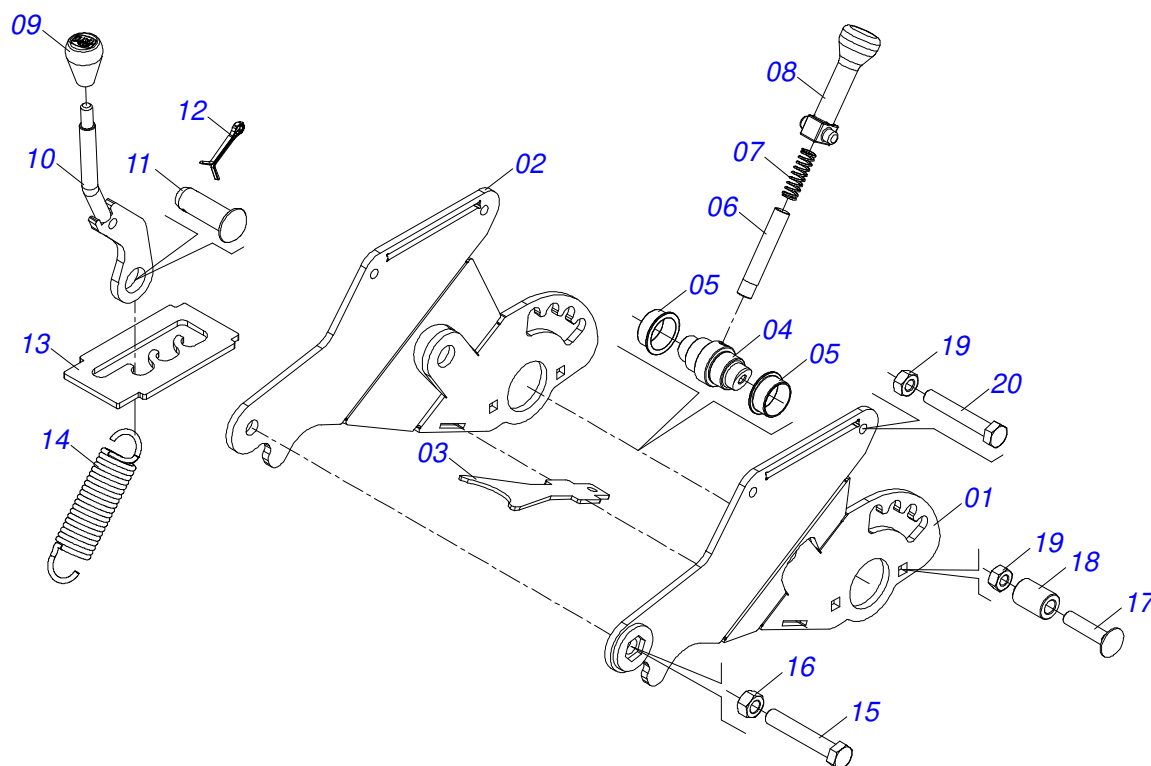


Item	Code	Description	See page	QT
01	0521069585	LEFT SIDE		01
02	0581019475	RIGHT SIDE BODY		01
03	0581019511	COVER		01
04	0581019510	AXIS		01
05	0503019351	LUBRICANT SLEEVE		02
06	0581019520	AXIS		01
07	0503030190	0.5" X 1.6" X 0.05" SPRING		01
08	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
09	0503030878	LEVER CRANK		01
10	0521068661	LEVER		01
11	0571012442	COUPLING SHAFT		01
12	0503010257	1/8" X 1" SPLIT PIN		01
13	0581019512	PLATE TOP		01
14	0503034817	SPRING		01
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503011336	1/2" HEX SELF ADJUSTING NUT		01
17	0501011753	5/16" X 1-3/4" BOLT		02
18	0581015855	SLEEVE		02
19	0503013816	5/16" LOCKNUT		04
20	0503010848	5/16" X 3.1/2" BOLT		02

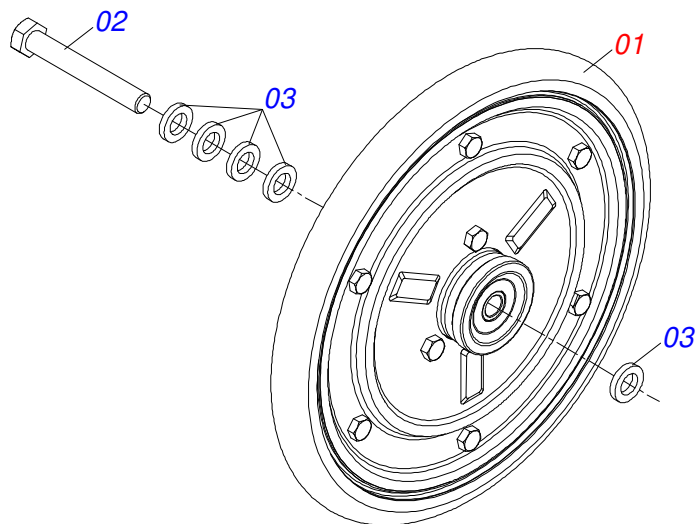


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	162	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

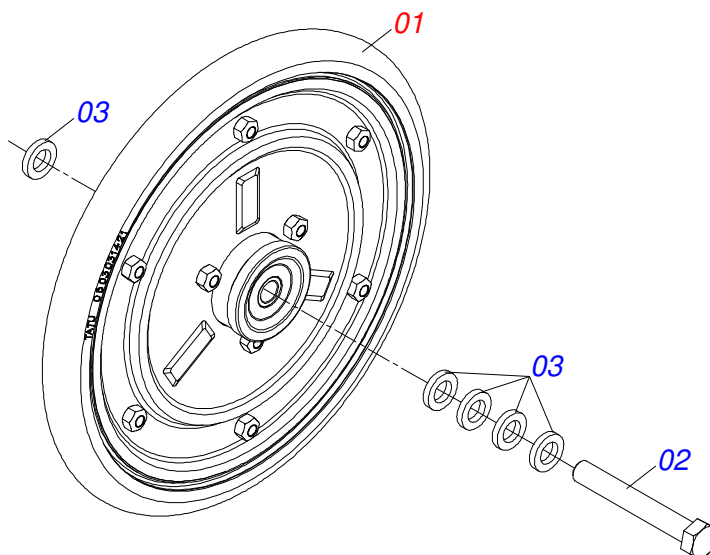


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	162	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

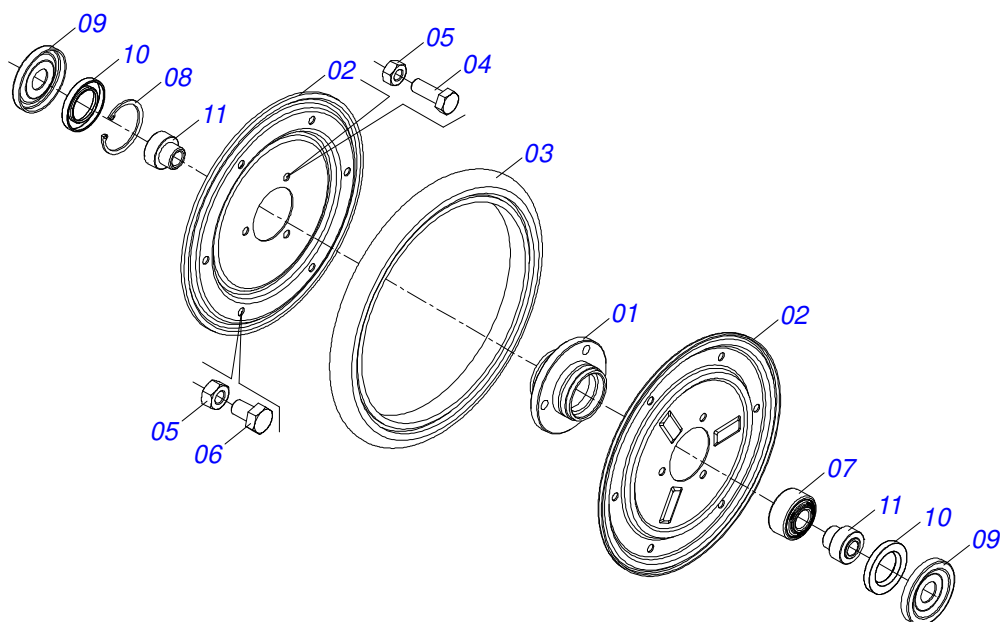


Item	Code	Description	See page	QT
01	0502012894	WHEEL HUB		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

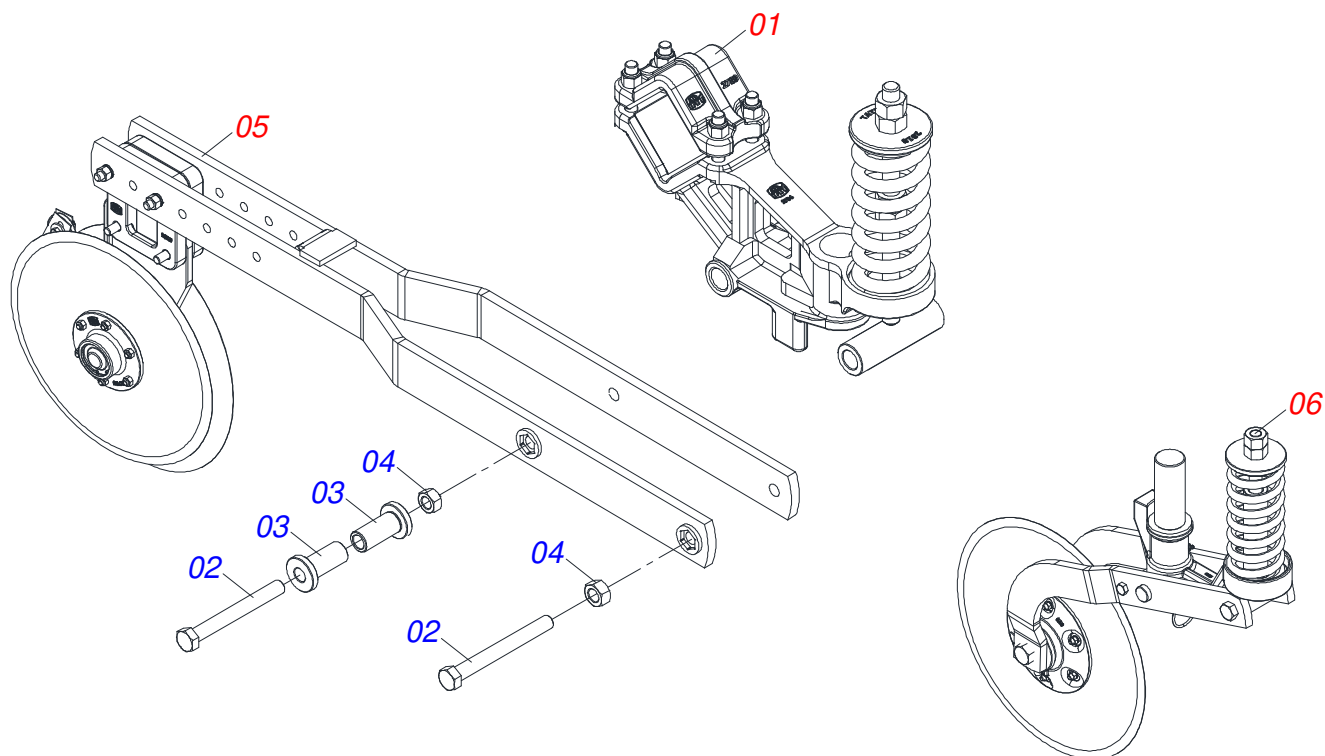


Item	Code	Description	See page	QT
01	0511058633	FIXED SHORT SUPPORT FERTILIZER ROW	166	01
02	0511016281	3/4" X 8" BOLT		02
03	0571019061	FERTILIZER ROW SUPPORT ARM SLEEVE		02
04	0503011255	3/4" LOCK NUT		02
05	0511057272	LH SHORT ARM ROW FERTILIZER	167	01
06	0511058630	20" DISC BLADE	169	01

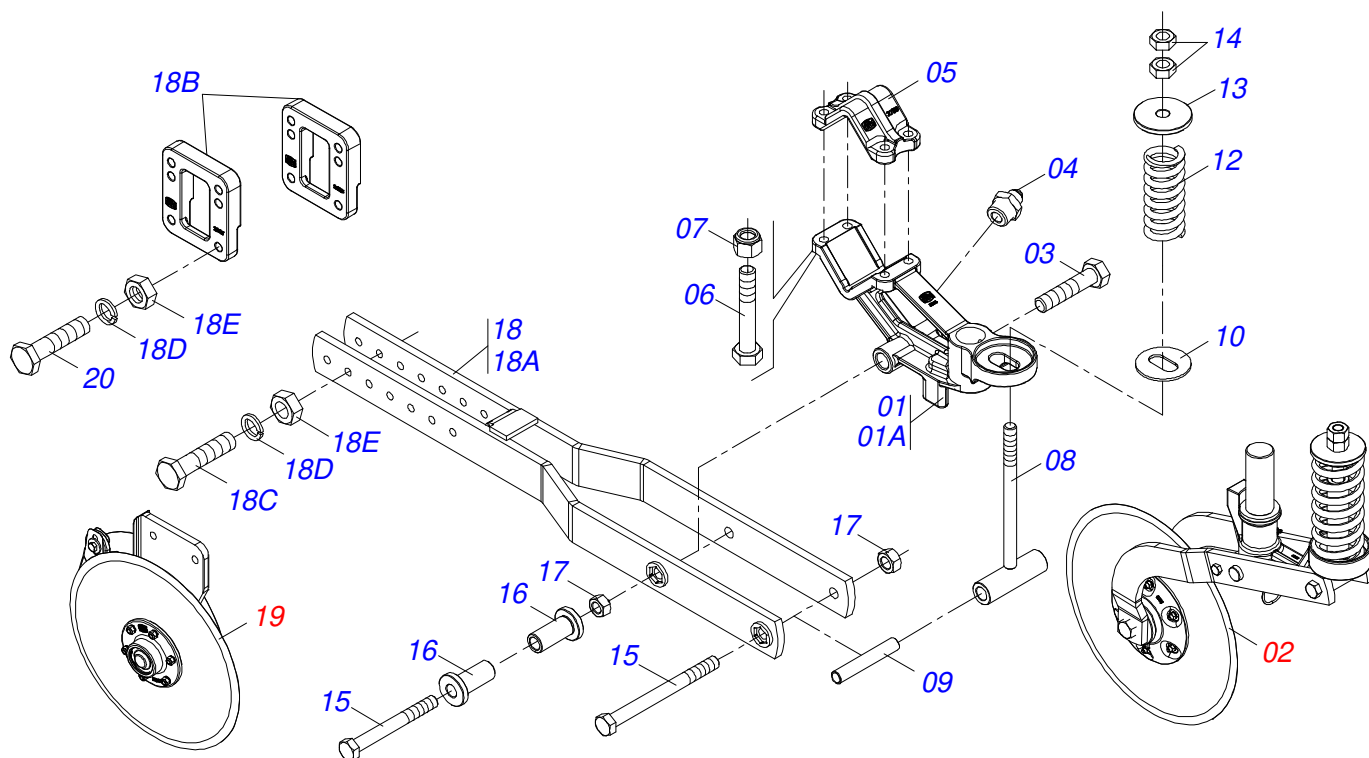


Item	Code	Description	See page	QT
01	0511058633	FIXED SHORT SUPPORT FERTILIZER ROW	166	01
01A	0502012794	SHORT SUPPORT FERTILIZER ROW		01
02	0511058629	18" COULTER BLADE ASSY FOR SHORT ROW	178	01
03	0503011854	5/8" X 1-1/4" BOLT		02
04	0503010002	1800 GREASE FITTING		01
05	0502012789	FIXER SUPPORT FERTILIZER ROW		01
06	0503017960	5/8" X 3-12" BOLT		04
07	0503010811	5/8" UNF SELF ADJUSTING NUT		04
08	0521066744	FERTILIZER ROW ADJUSTMENT SPRING		01
09	0571019062	SLEEVE		01
10	0571019059	SUPPORT WASHER		01
12	0503034320	COMPRESSION SPRING		01
13	0502012813	FLANGE WASHER SPRING		01
14	0503010417	7/8" NUT		02
15	0511016281	3/4" X 8" BOLT		02
16	0571019061	FERTILIZER ROW SUPPORT ARM SLEEVE		02
17	0503011255	3/4" LOCK NUT		02
18	0511057272	LH SHORT ARM ROW FERTILIZER	167	01
18A	0521065972	LH SHORT ARM ROW FERTILIZER		01
18B	0502012815	DOUBLE-DISC SPACING PLATE		02
18C	0503810479	BOLT		02
18D	0503011440	SPRING WASHER		04
18E	0503010060	1/2 UNC G.5 ZN HEX NUT		04
19	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	168	01
20	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02

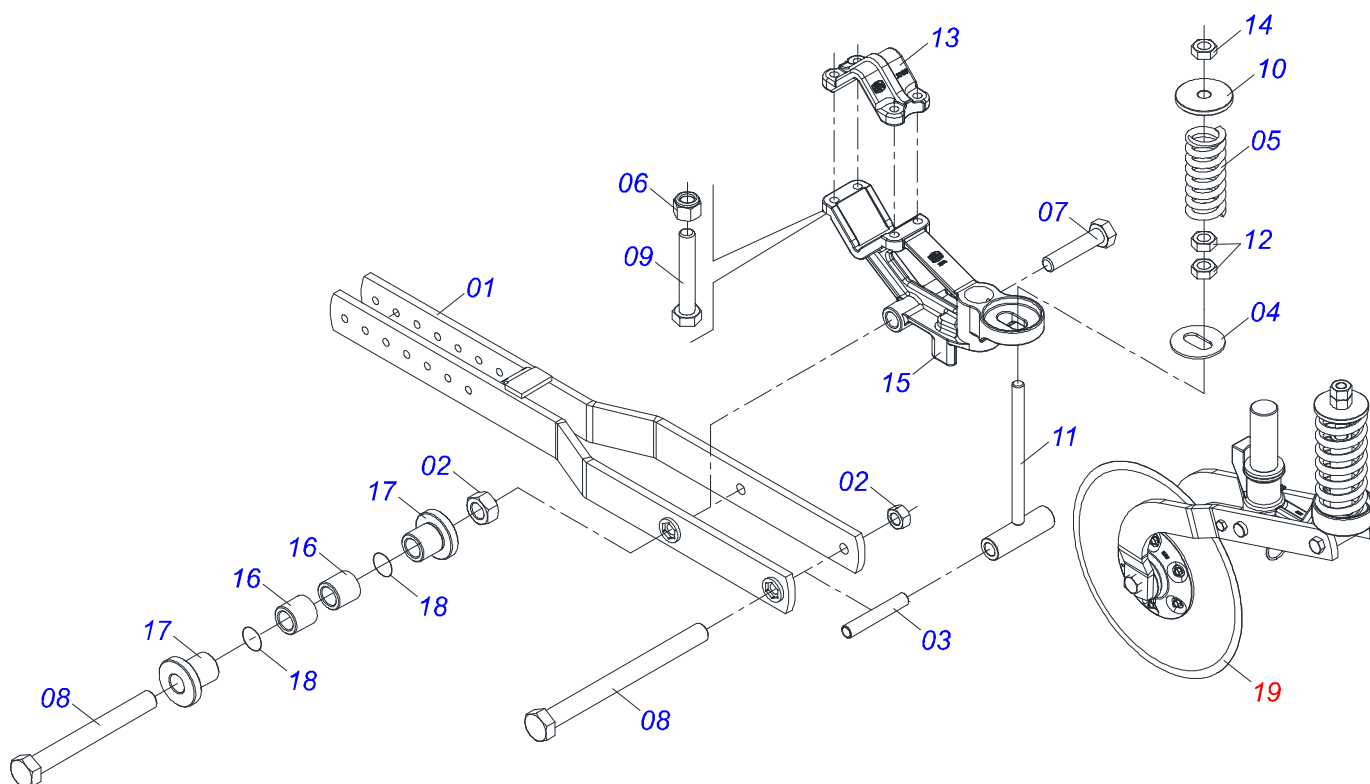


Item	Code	Description	See page	QT
01	0521065972	LH SHORT ARM ROW FERTILIZER		01
02	0503011255	3/4" LOCK NUT		02
03	0571019062	SLEEVE		01
04	0571019059	SUPPORT WASHER		01
05	0503034320	COMPRESSION SPRING		01
06	0503010811	5/8" UNF SELF ADJUSTING NUT		04
07	0503011854	5/8" X 1-1/4" BOLT		02
08	0511016281	3/4" X 8" BOLT		02
09	0503017960	5/8" X 3-12" BOLT		04
10	0502012813	FLANGE WASHER SPRING		01
11	0521066744	FERTILIZER ROW ADJUSTMENT SPRING		01
12	0503010417	7/8" NUT		02
13	0502012789	FIXER SUPPORT FERTILIZER ROW		01
14	0503011254	7/8" HEX SELF ADJUSTING NUT		01
15	0591011145	FERTILIZER ROW SUPPORT		01
16	0503019278	LUBRICANT SLEEVE		02
17	0591011147	SLEEVE ARM ROW		02
18	0503011109	2-119 N 3006-9B O'RING		02
19	0541050897	CUTTING DISC 18 "	170	01

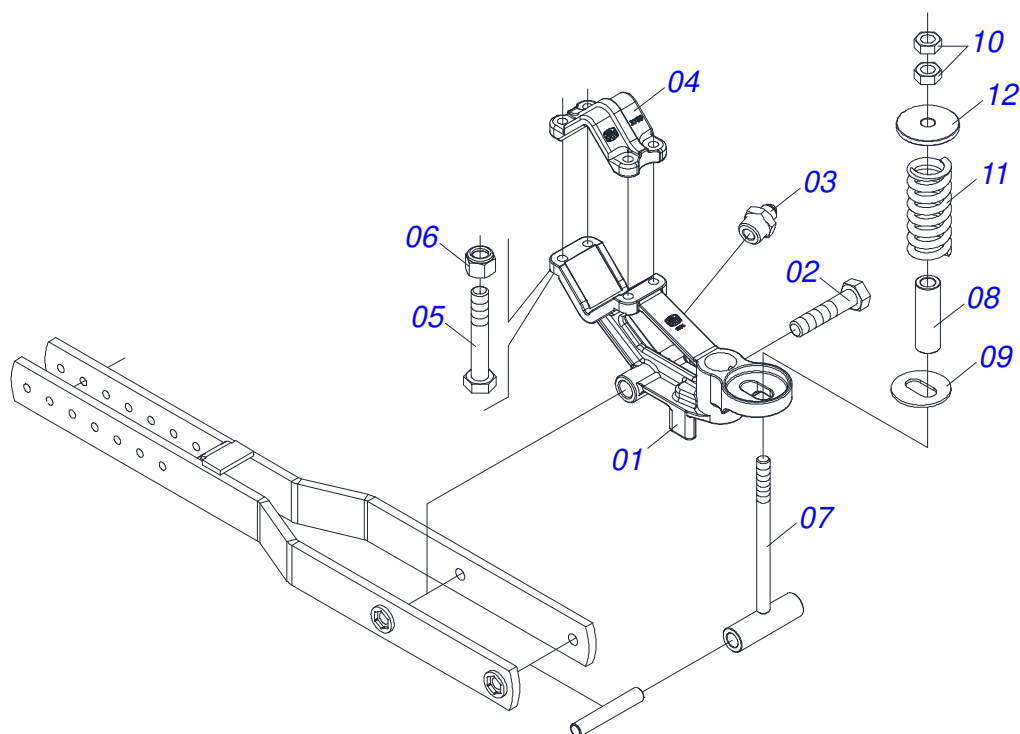

Item	Code	Description	See page	QT
01	0502012794	SHORT SUPPORT FERTILIZER ROW	01	
02	0503011854	5/8" X 1-1/4" BOLT	02	
03	0503010002	1800 GREASE FITTING	01	
04	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
05	0503017960	5/8" X 3-12" BOLT	04	
06	0503010811	5/8" UNF SELF ADJUSTING NUT	04	
07	0521066744	FERTILIZER ROW ADJUSTMENT SPRING	01	
08	0571019062	SLEEVE	01	
09	0571019059	SUPPORT WASHER	01	
10	0503010417	7/8" NUT	04	
11	0503034320	COMPRESSION SPRING	01	
12	0502012813	FLANGE WASHER SPRING	01	

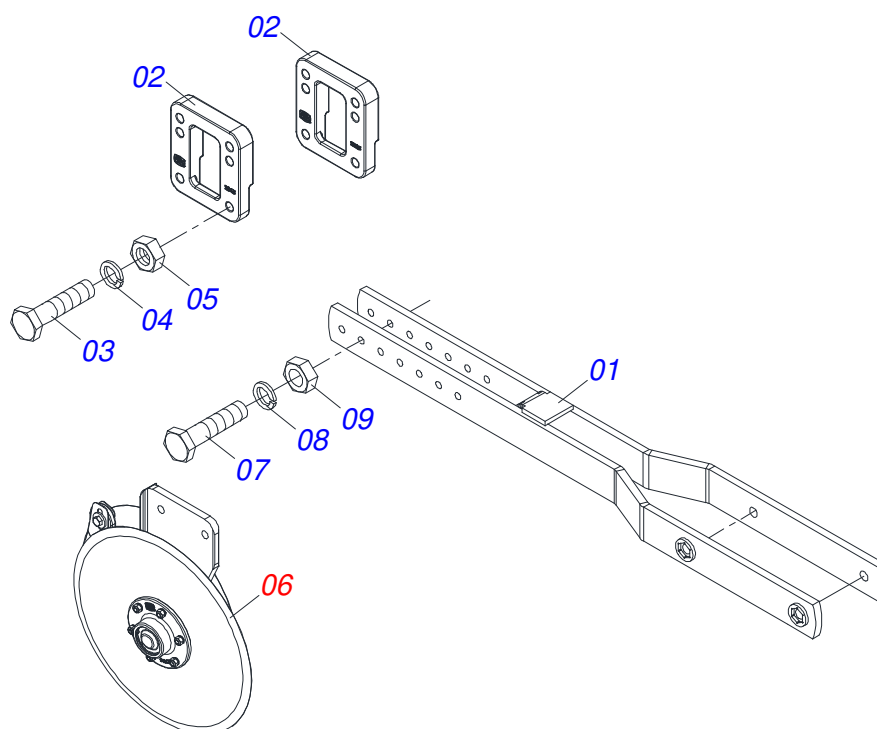


Item	Code	Description	See page	QT
01	0521065972	LH SHORT ARM ROW FERTILIZER		01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503011440	SPRING WASHER		02
05	0503010060	1/2 UNC G.5 ZN HEX NUT		02
06	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	168	01
07	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
08	0503011440	SPRING WASHER		02
09	0503010060	1/2 UNC G.5 ZN HEX NUT		02

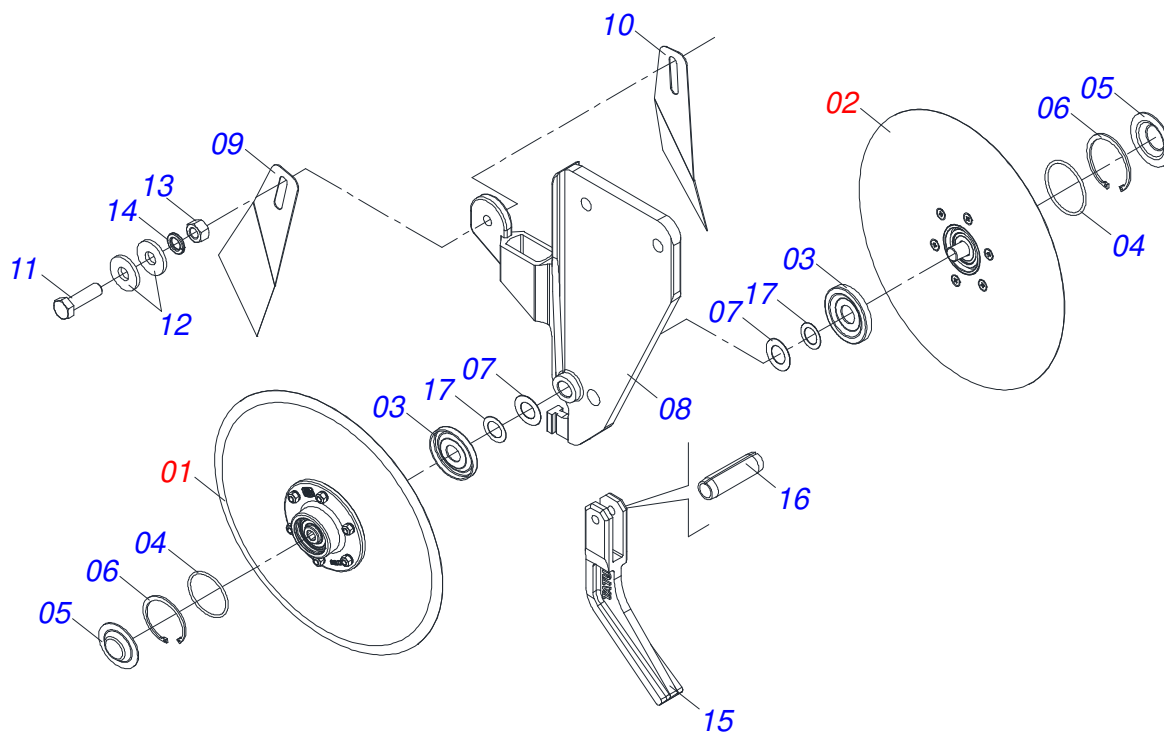


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW HUB WITH 15 DISC	124	01
02	0511053173	RIGHT LOW HUB WITH 15 DISC	123	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503010025	3/8 SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

20" DISC BLADE


0511058630

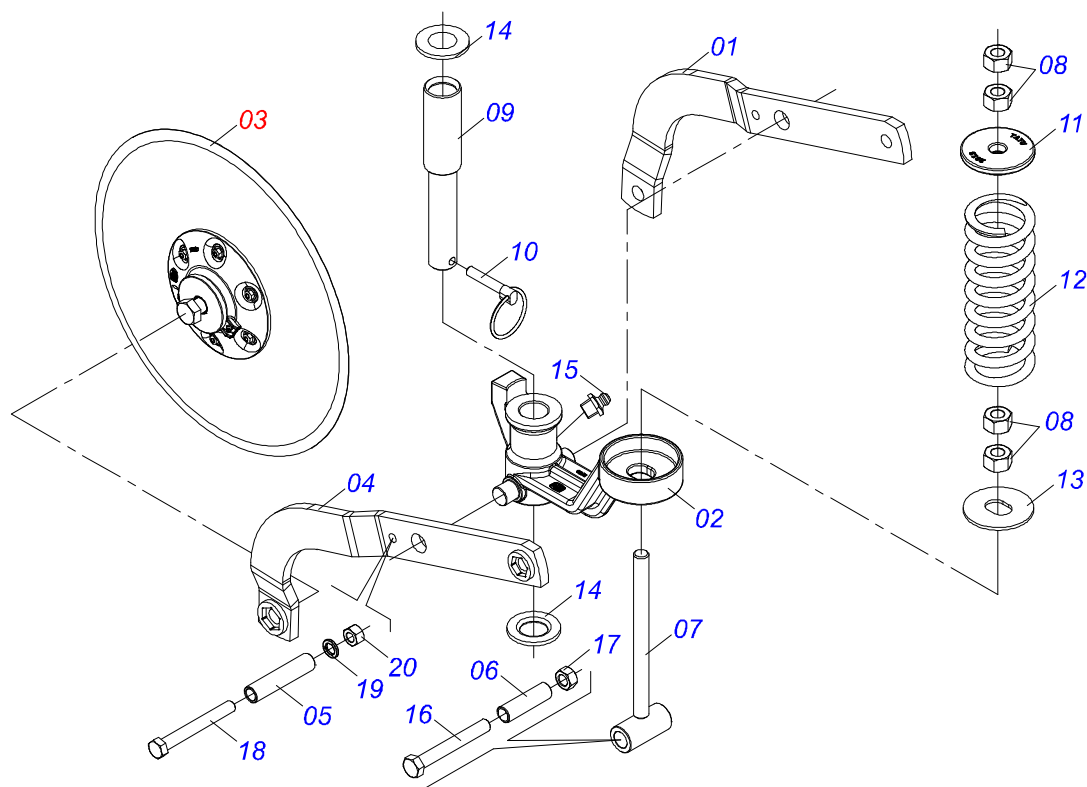


Item	Code	Description	See page	QT
01	0571018989	LH BLADE DISC ARM		01
02	0502012790	LOCK NUT		01
03	0511058648	HUB WITH 20" DISC BLADE	171	01
04	0521065978	RIGHT ARM WITH WASHER LOCK		01
05	0571019035	SLEEVE SUPPORT ARM		01
06	0521010452	SLEEVE		01
07	0521066743	SPRING REGULATOR		01
08	0503010417	7/8" NUT		04
09	0571019033	FIXATION AXLE		01
10	0503034319	LOCK PIN		01
11	0502012813	FLANGE WASHER SPRING		01
12	0503034320	COMPRESSION SPRING		01
13	0571019032	SUPPORT WASHER		01
14	0571019034	FLANGE WASHER AXLE		02
15	0503010002	1800 GREASE FITTING		01
16	0503013185	3/4" X 5-1/2" BOLT		01
17	0503011255	3/4" LOCK NUT		01
18	0503011411	1/2" X 5-1/2" BOLT		01
19	0503011440	SPRING WASHER		01
20	0503010060	1/2 UNC G.5 ZN HEX NUT		01

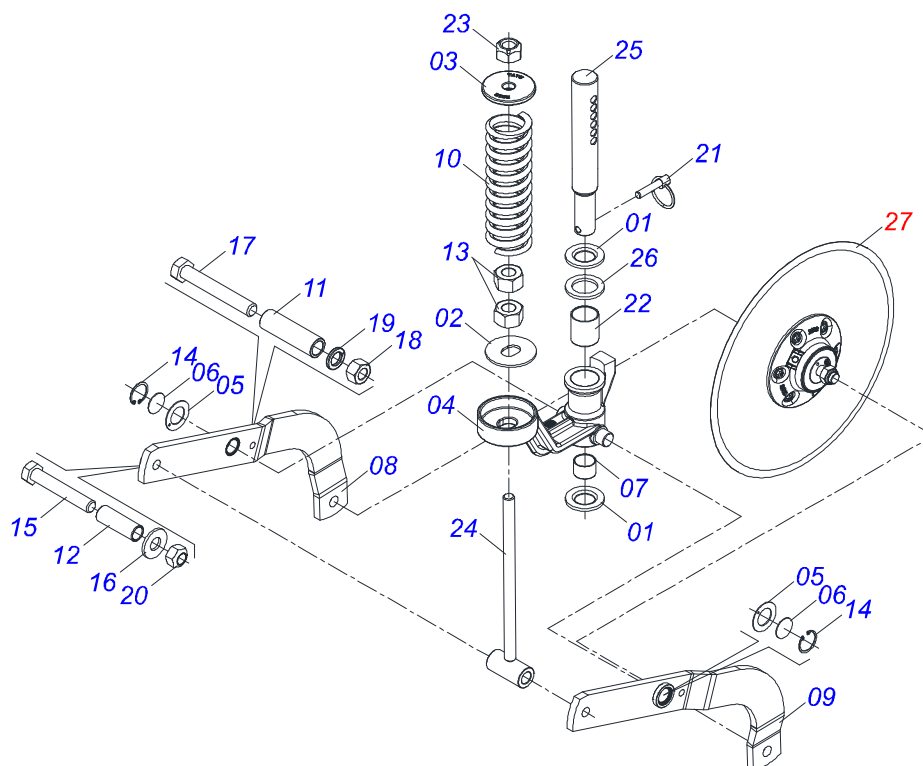

Item	Code	Description	See page	QT
01	0571019034	FLANGE WASHER AXLE		01
02	0571019032	SUPPORT WASHER		01
03	0502012813	FLANGE WASHER SPRING		01
04	0591010619	DC SPRING SUPPORT		01
05	0503019274	WASHER		02
06	0581017628	LID		02
07	0503019277	SLEEVE LUBRICATION SYSTEM		01
08	0501110964	RIGHT ARM WITH SLEEVE		01
09	0501110965	LEFT ARM WITH SLEEVE		01
10	0503034320	COMPRESSION SPRING		01
11	0591010624	SUPPORT ARM SLEEVE		01
12	0591010625	19,50 X 25 X 91,50/91,30 SLEEVE		01
13	0503010417	7/8" NUT		02
14	0503010390	SEAL RING		02
15	0503011198	C3/4" X 6" SCREW		01
16	0501010322	FLAT WASHER		01
17	0503011411	1/2" X 5-1/2" BOLT		01
18	0503010060	1/2 UNC G.5 ZN HEX NUT		01
19	0503010019	1/2" SPRING WASHER		01
20	0503011255	3/4" LOCK NUT		01
21	0503030430	7/16 X 2" PIN LOCK		01
22	0503019271	SELF LUBRICATING BUSHING		01
23	0503011254	7/8" HEX SELF ADJUSTING NUT		01
24	0521066743	SPRING REGULATOR		01
25	0591011144	FIXATION AXLE		01
26	0591010628	DC AXIS BACKREST WASHER		01
27	0521053698	BOX WITH CUTTING DISC 18"	172	01

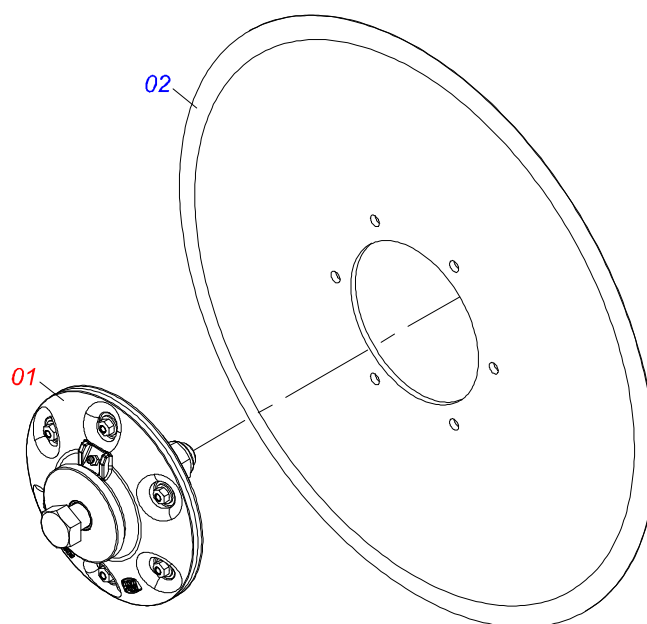


Item	Code	Description	See page	QT
01	0511056909	DISC BLADE HUB WITHOUT DISC	174	01
02	0603027851	20" X 0.2" FLAT PLAIN DISC		01

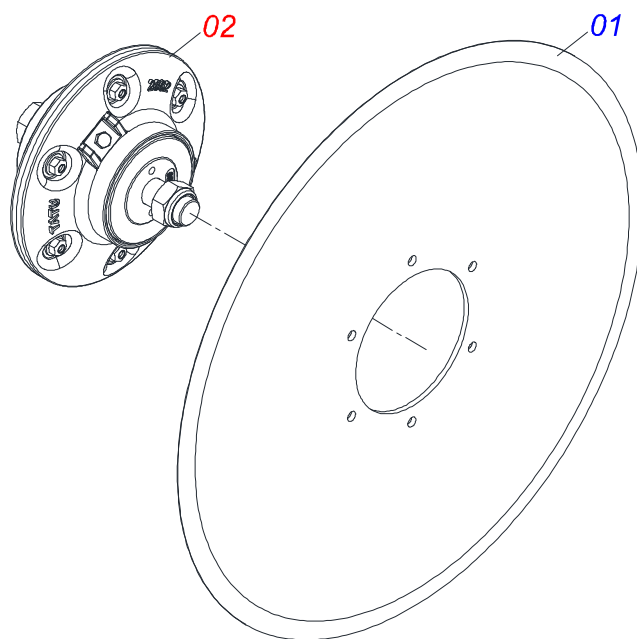


Item	Code	Description	See page	QT
01	0603026013	PLAIN COULTER BLADE		01
02	0521053697	DISC BLADE HUB	173	01

DISC BLADE HUB


0521053697

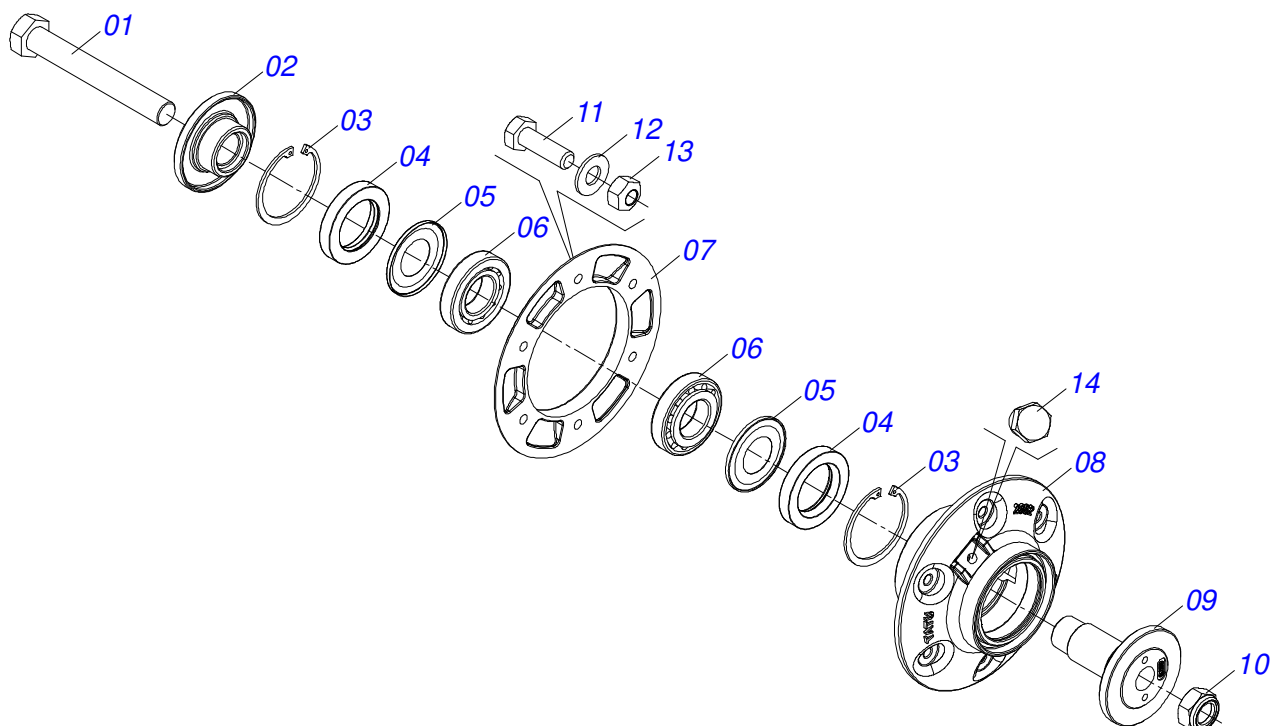


Item	Code	Description	See page	QT
01	0503019283	SCREW 7/8 UNF X 6.1/4		01
02	0502040872	REGULATORY NUT		01
03	0503010370	502072 CLAMPING RING (FOR AXLE)		02
04	0503010590	00674-B SEAL		02
05	0503019285	RING		02
06	0503012170	30207 ROLLER BEARING		02
07	0502020641	BLADE DISC FLANGE		01
08	0502012862	DISC BLADE HUB		01
09	0502040873	DISC BLADE AXLE		01
10	0503017755	NUT		01
11	0503018825	5/16 UNC UNC BOLT		06
12	0501010694	FLAT WASHER		06
13	0503013816	5/16" LOCKNUT		06
14	0511017907	1/8" BSPT X 6 PLUG		02

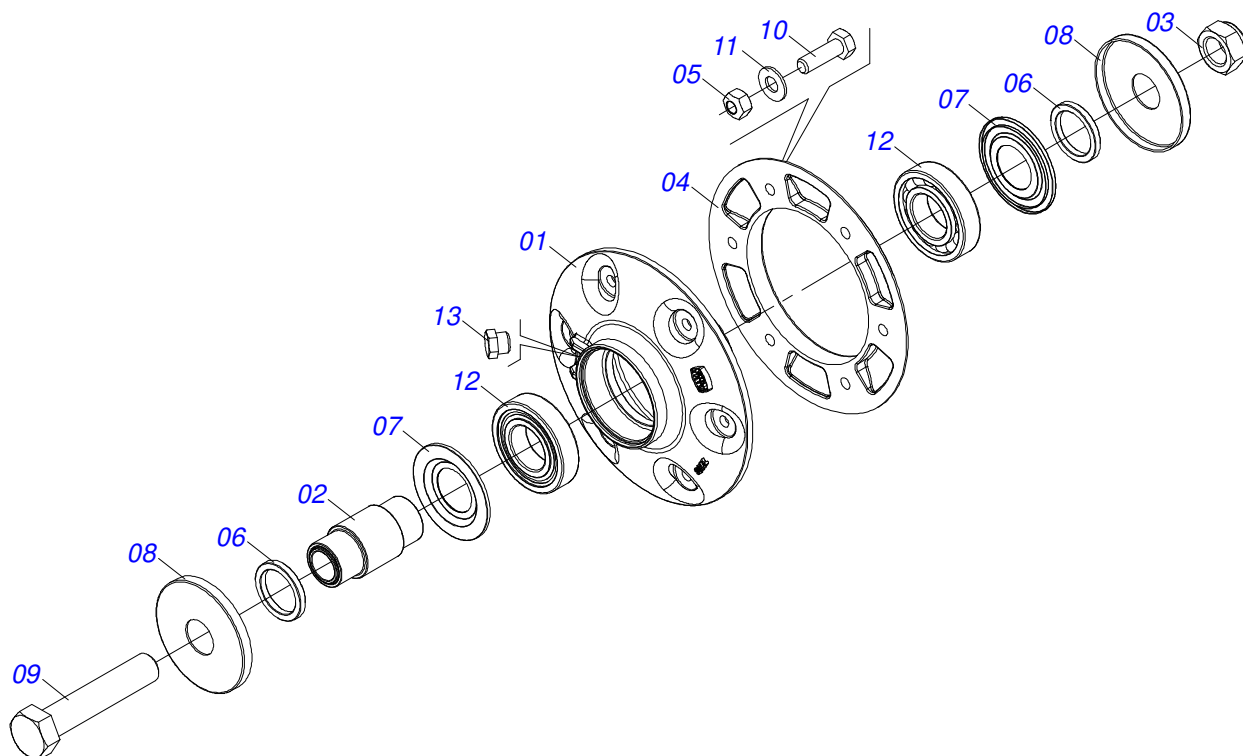


Item	Code	Description	See page	QT
01	0502012793	DISC HUB		01
02	0571018047	DISC BLADE HUB AXLE		01
03	0503017755	NUT		01
04	0502020641	BLADE DISC FLANGE		01
05	0503013816	5/16" LOCKNUT		06
06	0571018048	BACKREST WASHER		02
07	0521065882	NILOS SEALING RING		02
08	0571018049	DUST CLOAK		02
09	0581010575	7/8" X 145 BOLT		01
10	0503018825	5/16 UNC UNC BOLT		06
11	0501010694	FLAT WASHER		06
12	0503016061	BEARING		02
13	0511017907	1/8" BSPT X 6 PLUG		01

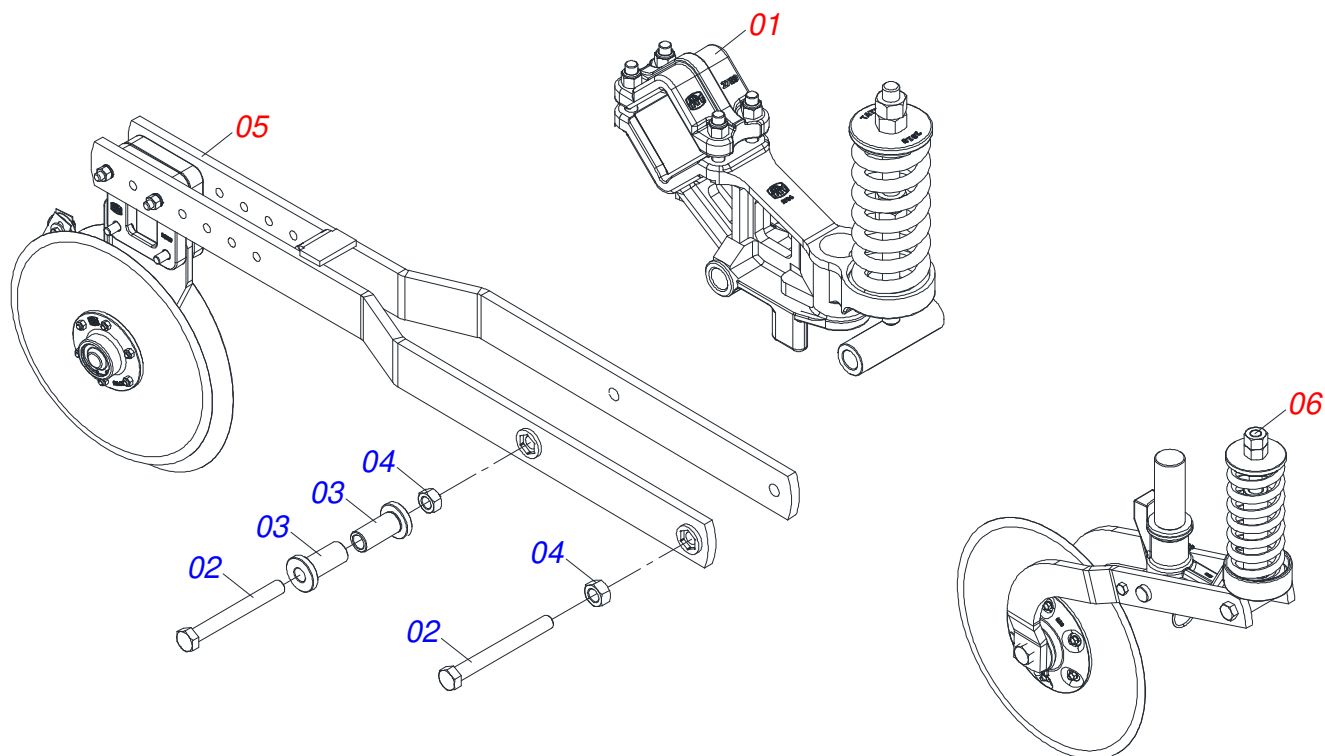


Item	Code	Description	See page	QT
01	0511058634	SUPPORT LONG	180	01
02	0511016281	3/4" X 8" BOLT		02
03	0571019061	FERTILIZER ROW SUPPORT ARM SLEEVE		02
04	0503011255	3/4" LOCK NUT		02
05	0511057271	RH LONG ARM ROW FERTILIZER	181	01
06	0511058630	20" DISC BLADE	169	01

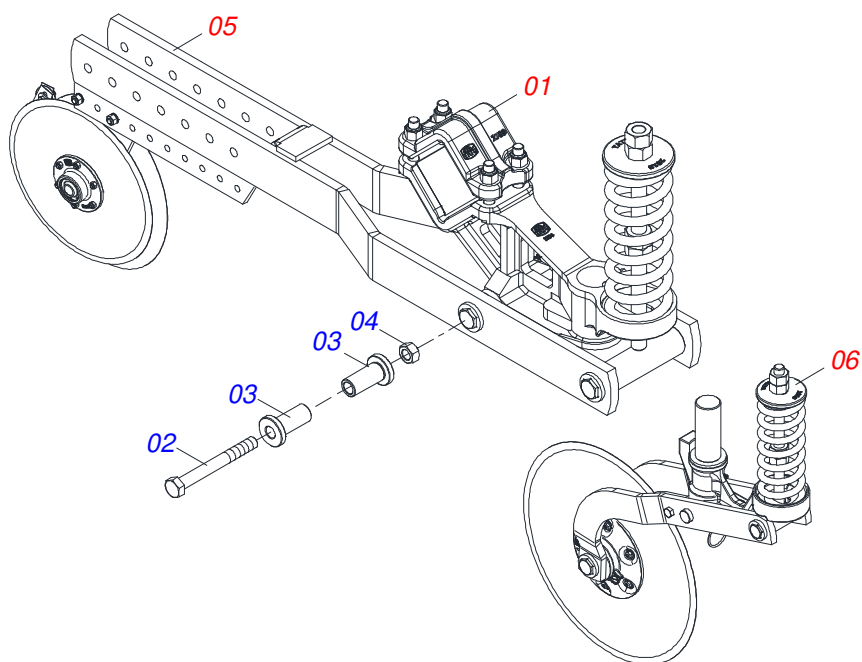


Item	Code	Description	See page	QT
01	0511058634	SUPPORT LONG	180	01
02	0511016281	3/4" X 8" BOLT		02
03	0571019061	FERTILIZER ROW SUPPORT ARM SLEEVE		02
04	0503011255	3/4" LOCK NUT		02
05	0511057271	RH LONG ARM ROW FERTILIZER	181	01
06	0511058629	18" COULTER BLADE ASSY FOR SHORT ROW	178	01

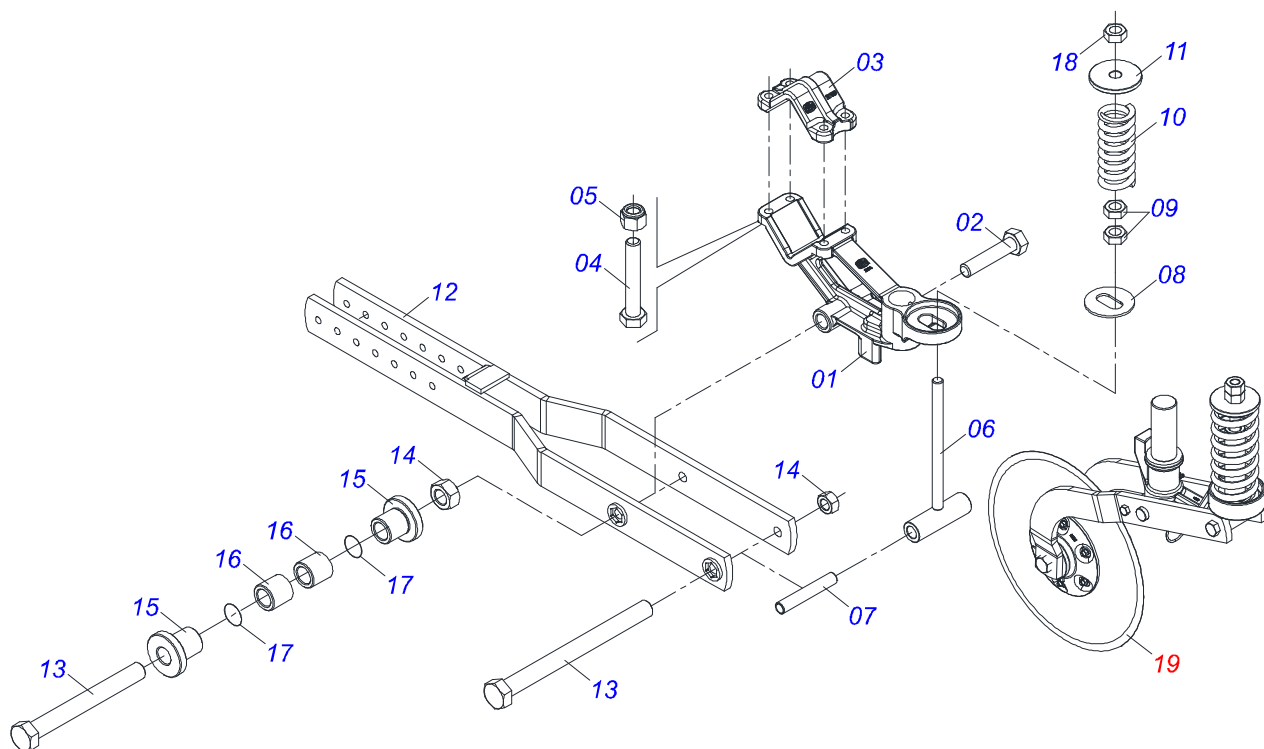


Item	Code	Description	See page	QT
01	0591011146	SUPPORT LONG		01
02	0503011854	5/8" X 1-1/4" BOLT		02
03	0502012789	FIXER SUPPORT FERTILIZER ROW		01
04	0503017960	5/8" X 3-12" BOLT		04
05	0503010811	5/8" UNF SELF ADJUSTING NUT		04
06	0521066744	FERTILIZER ROW ADJUSTMENT SPRING		01
07	0571019062	SLEEVE		01
08	0571019059	SUPPORT WASHER		01
09	0503010417	7/8" NUT		02
10	0503034320	COMPRESSION SPRING		01
11	0502012813	FLANGE WASHER SPRING		01
12	0521065973	RH LONG ARM ROW FERTILIZER		01
13	0511016281	3/4" X 8" BOLT		02
14	0503011255	3/4" LOCK NUT		02
15	0591011147	SLEEVE ARM ROW		02
16	0503019278	LUBRICANT SLEEVE		02
17	0503011109	2-119 N 3006-9B O'RING		02
18	0503011254	7/8" HEX SELF ADJUSTING NUT		01
19	0541050897	CUTTING DISC 18 "	170	01

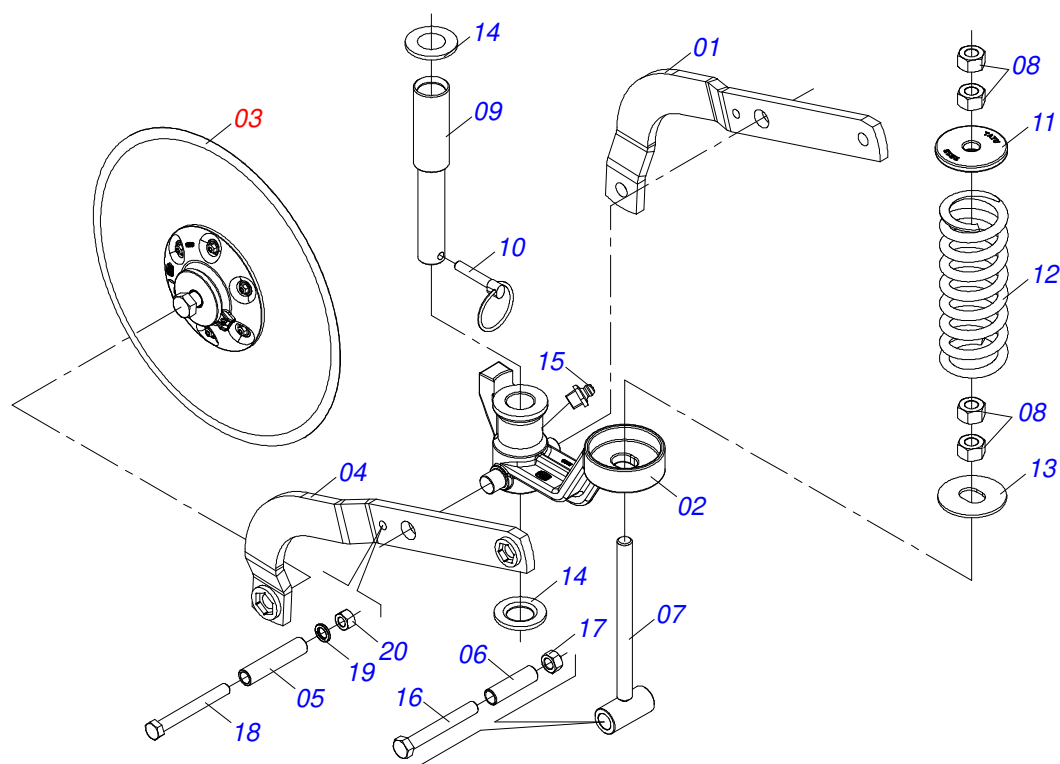


Item	Code	Description	See page	QT
01	0571018989	LH BLADE DISC ARM		01
02	0502012790	LOCK NUT		01
03	0511056910	HUB WITH 18" DISC BLADE	179	01
04	0521065978	RIGHT ARM WITH WASHER LOCK		01
05	0571019035	SLEEVE SUPPORT ARM		01
06	0521010452	SLEEVE		01
07	0521066743	SPRING REGULATOR		01
08	0503010417	7/8" NUT		04
09	0571019033	FIXATION AXLE		01
10	0503034319	LOCK PIN		01
11	0502012813	FLANGE WASHER SPRING		01
12	0503034320	COMPRESSION SPRING		01
13	0571019032	SUPPORT WASHER		01
14	0571019034	FLANGE WASHER AXLE		02
15	0503010002	1800 GREASE FITTING		01
16	0503013185	3/4" X 5-1/2" BOLT		01
17	0503011255	3/4" LOCK NUT		01
18	0503011411	1/2" X 5-1/2" BOLT		01
19	0503010019	1/2" SPRING WASHER		01
20	0503010060	1/2 UNC G.5 ZN HEX NUT		01

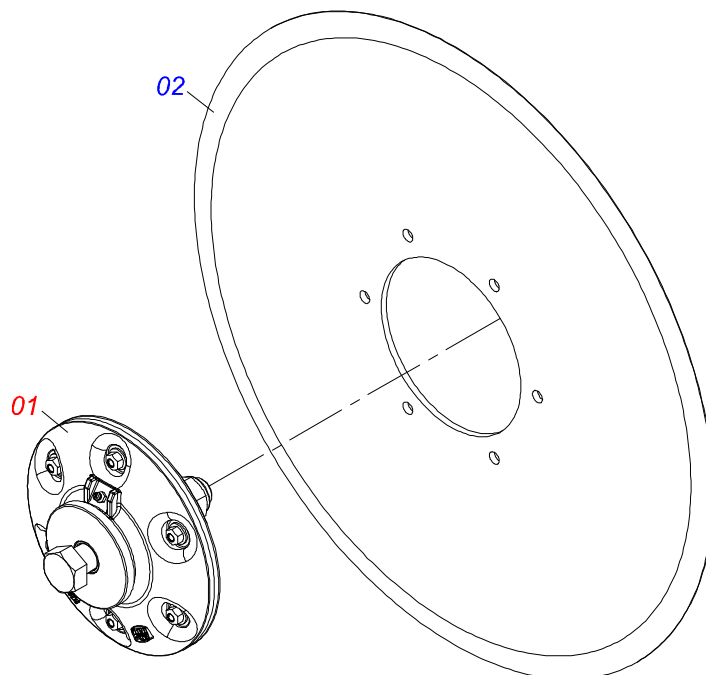


Item	Code	Description	See page	QT
01	0511056909	DISC BLADE HUB WITHOUT DISC	174	01
02	0603026013	PLAIN COULTER BLADE		01

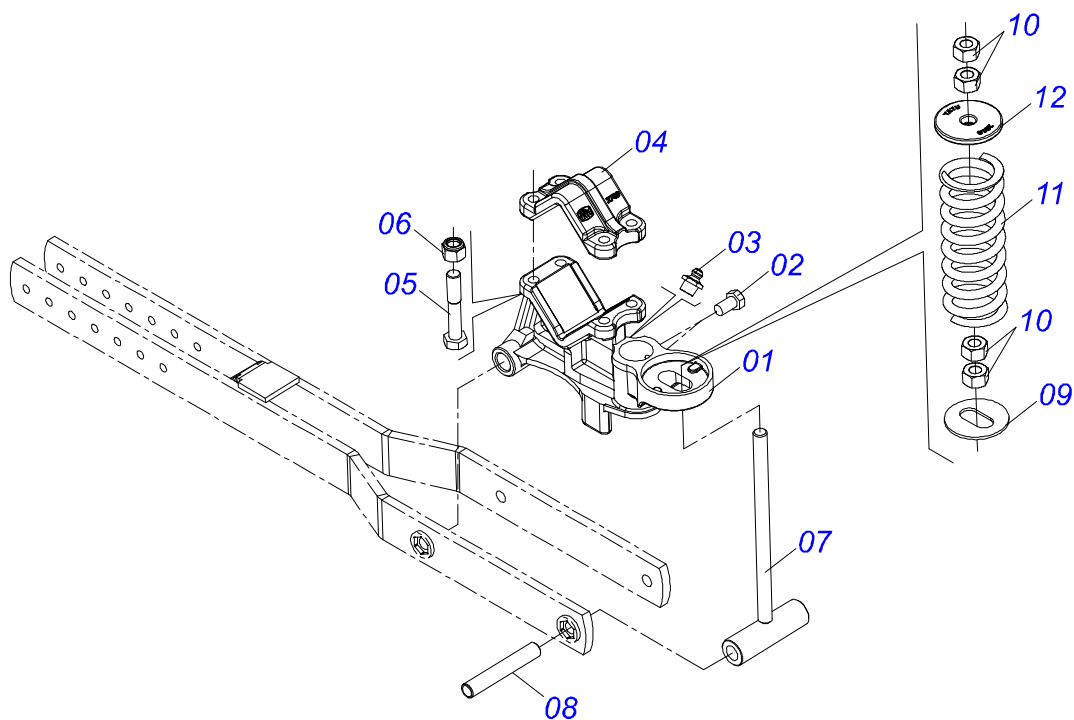


Item	Code	Description	See page	QT
01	0502012795	SUPPORT LONG	01	
02	0503011854	5/8" X 1-1/4" BOLT	02	
03	0503010002	1800 GREASE FITTING	01	
04	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
05	0503017960	5/8" X 3-12" BOLT	04	
06	0503010811	5/8" UNF SELF ADJUSTING NUT	04	
07	0521066744	FERTILIZER ROW ADJUSTMENT SPRING	01	
08	0571019062	SLEEVE	01	
09	0571019059	SUPPORT WASHER	01	
10	0503010417	7/8" NUT	04	
11	0503034320	COMPRESSION SPRING	01	
12	0502012813	FLANGE WASHER SPRING	01	

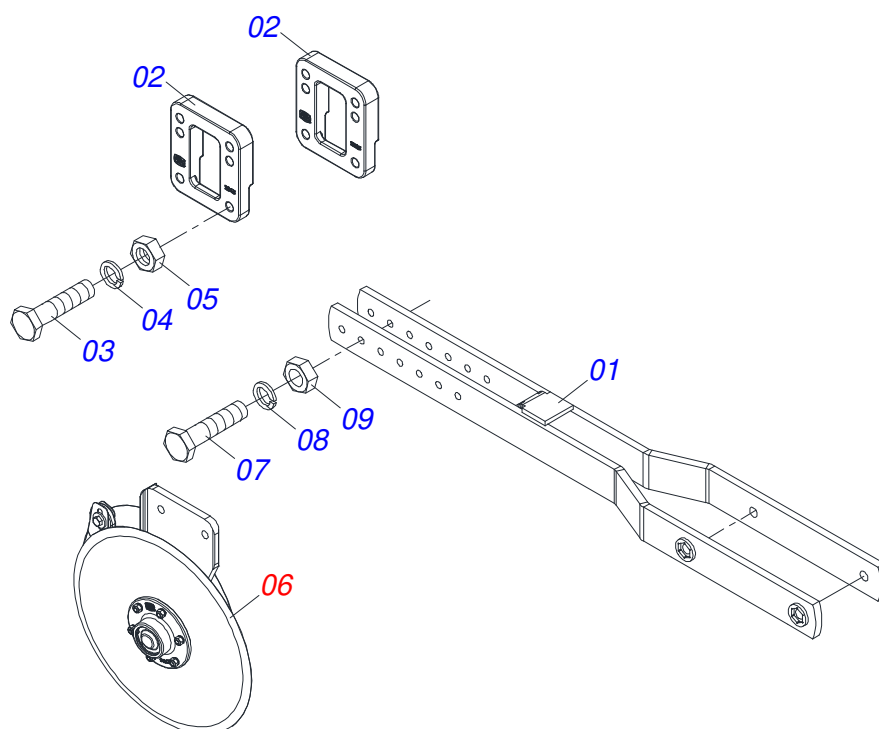


Item	Code	Description	See page	QT
01	0521065973	RH LONG ARM ROW FERTILIZER		01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503011440	SPRING WASHER		02
05	0503010060	1/2 UNC G.5 ZN HEX NUT		02
06	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	182	01
07	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
08	0503011440	SPRING WASHER		02
09	0503010060	1/2 UNC G.5 ZN HEX NUT		02

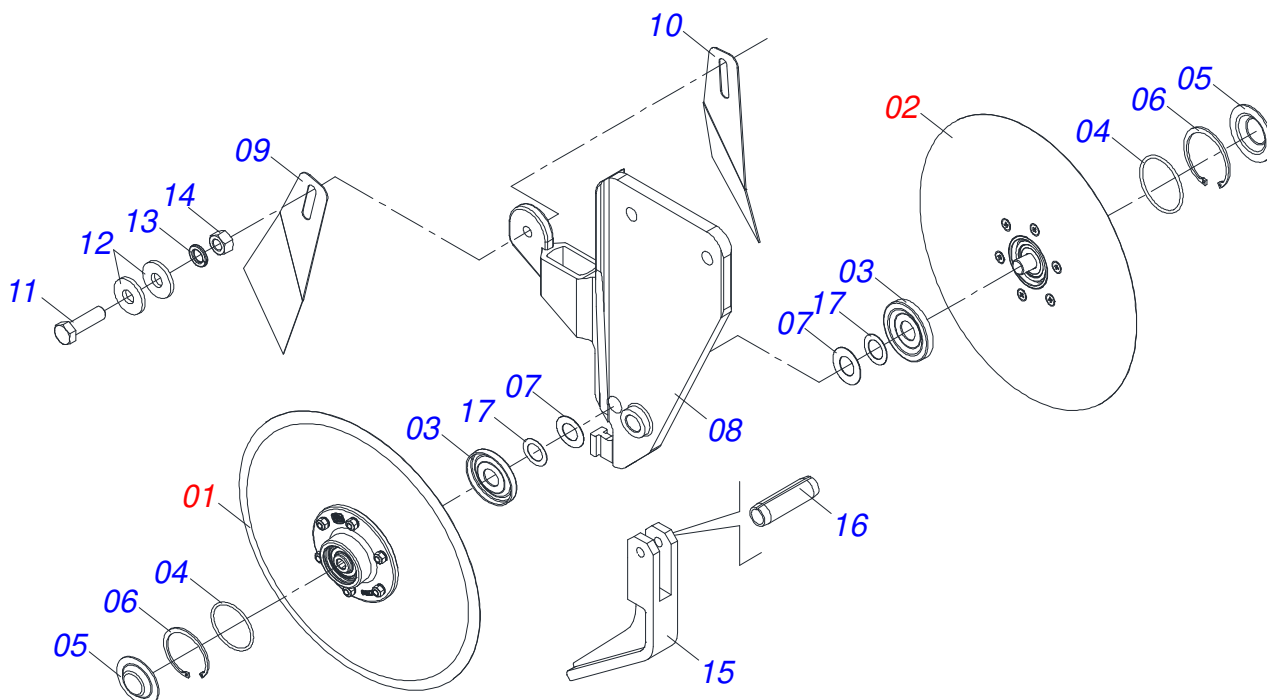


Item	Code	Description	See page	QT
01	0511053173	RIGHT LOW HUB WITH 15 DISC	123	01
02	0511053172	LEFT LOW HUB WITH 15 DISC	124	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011160	15\"X15\" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8\" X 1.1/4\" HEX BOLT G.5		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
13	0503010025	3/8 SPRING WASHER		01
14	0503010026	3/8\" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2\" X 0.8\" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

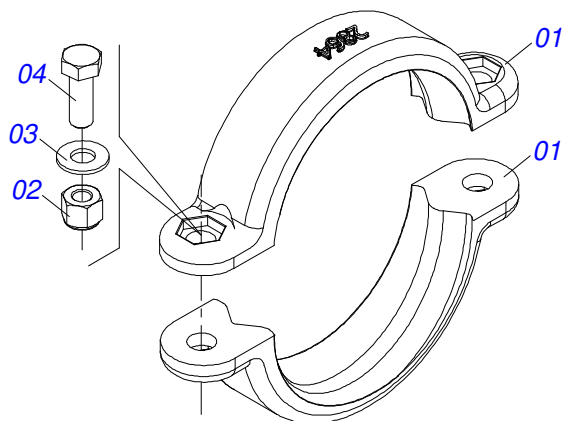


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02

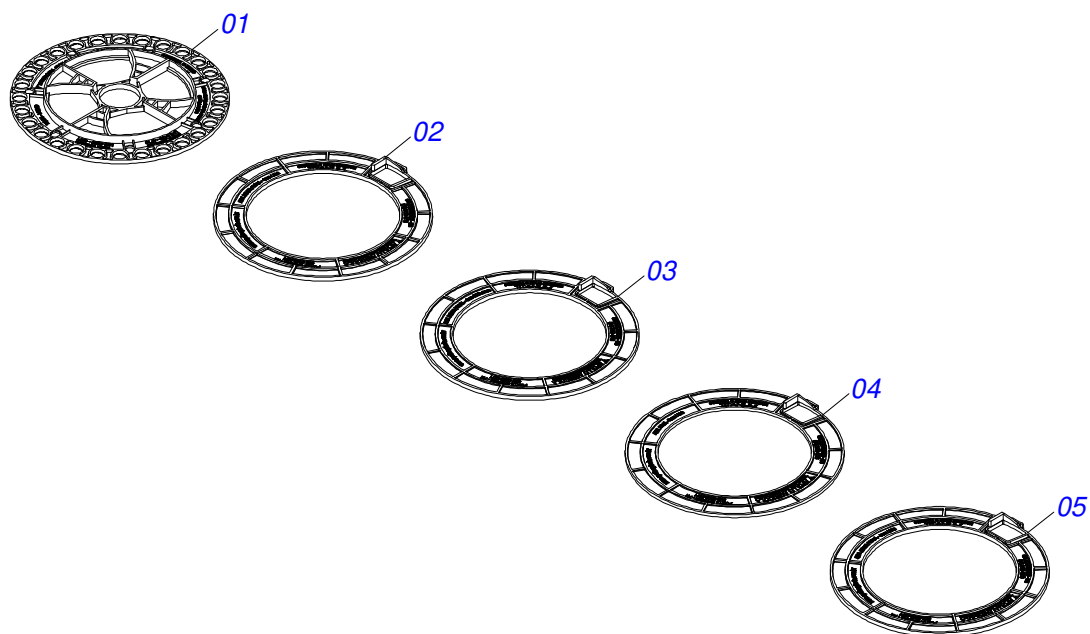


Item	Code	Description	See page	QT
01	0503016204	CORN DISC 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

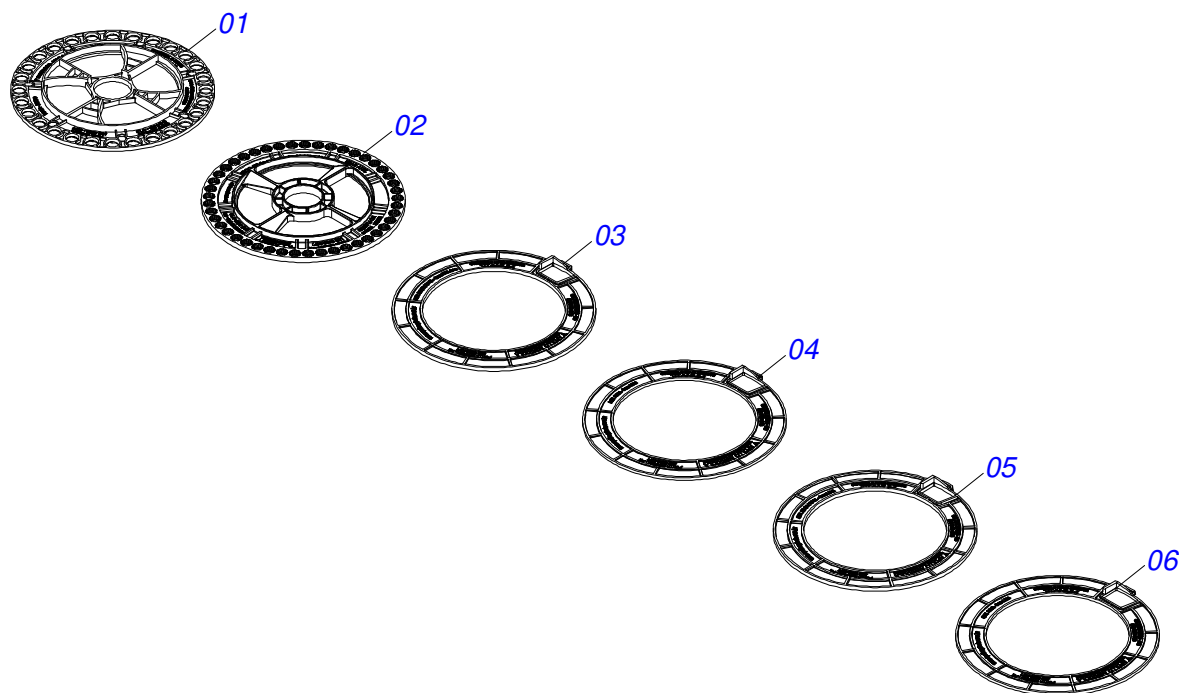

Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

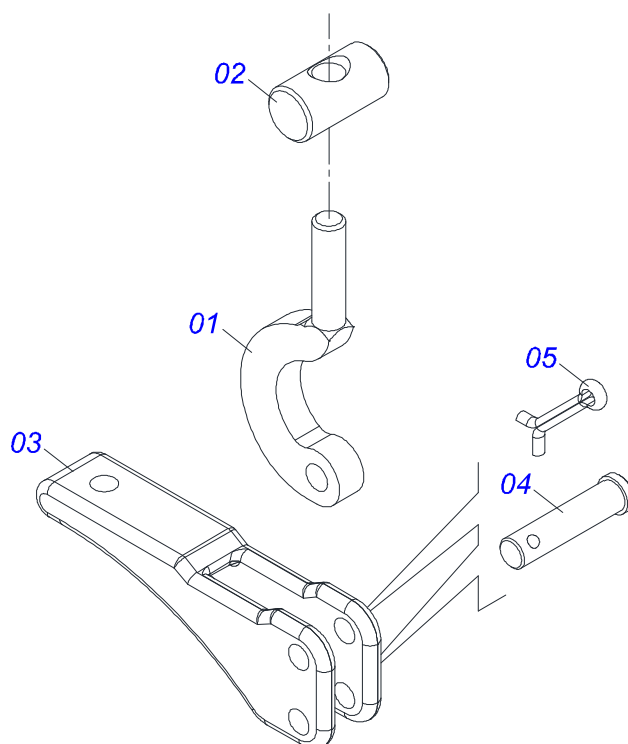


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" SPLIT PIN		02

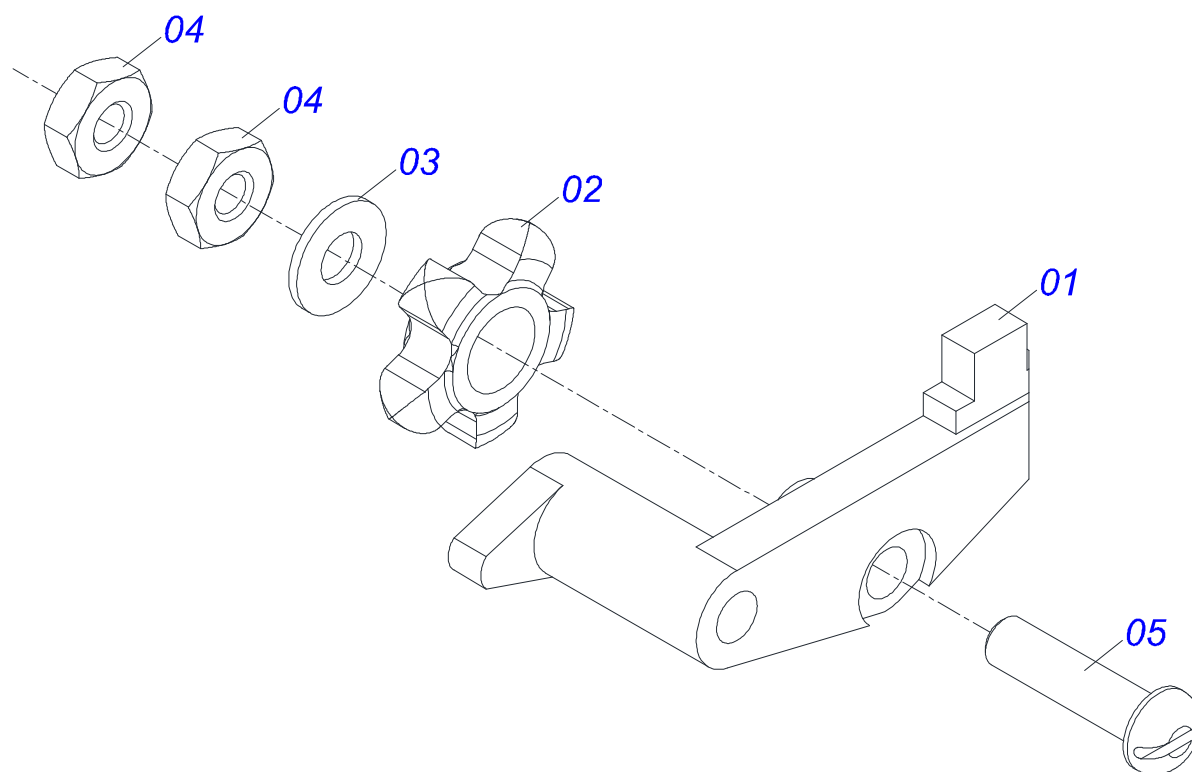


Item	Code	Description	See page	QT
01	0503030379	LARGER ROCKER ARM		01
02	0502060001	PLASTIC PULLEY FOR MAIZE		01
03	0503010669	FLAT WASHER		01
04	0503010667	3/16" NUT		02
05	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		01

ASSY HOSE SUPPORT 3"


0521050560

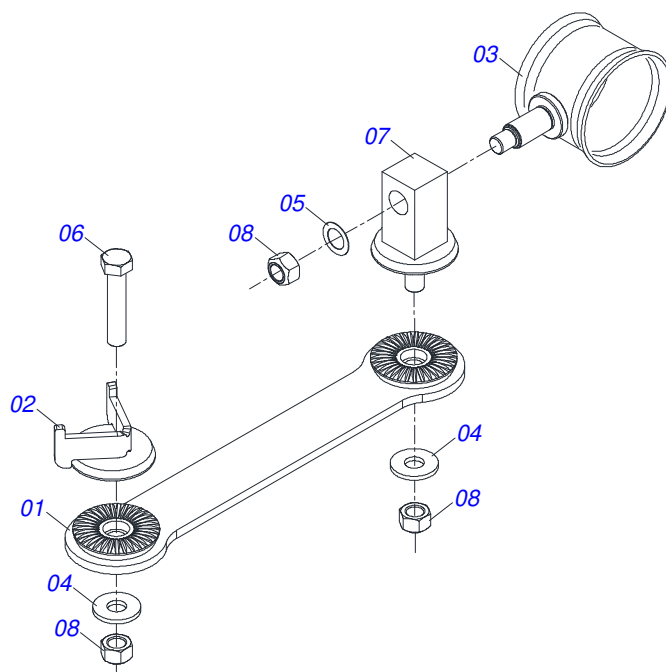

Item	Code	Description	See page	QT
01	0521067601	LH REGULATOR		01
02	0521067600	FIXER SUPPORT		01
03	0521067602	GUIDE ASSY		01
04	0501012140	FLAT WASHER		02
05	0511015098	FLAT WASHER		01
06	0503010806	5/8" X 3" BOLT		01
07	0521069693	EAR FIXATION		01
08	0503012795	5/8" HEX SELF ADJUSTING NUT		03

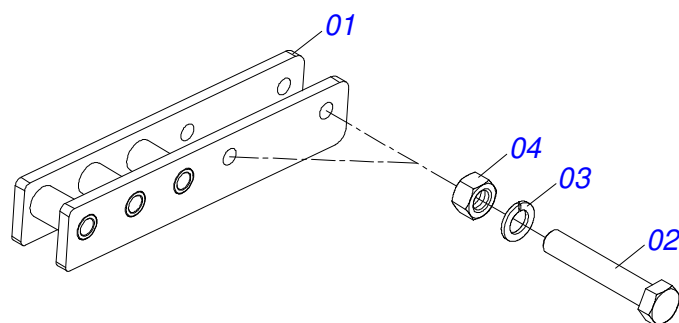


Item	Code	Description	See page	QT
01	0521068467	FIXED ROD EXTENSION		01
02	0503010479	BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02

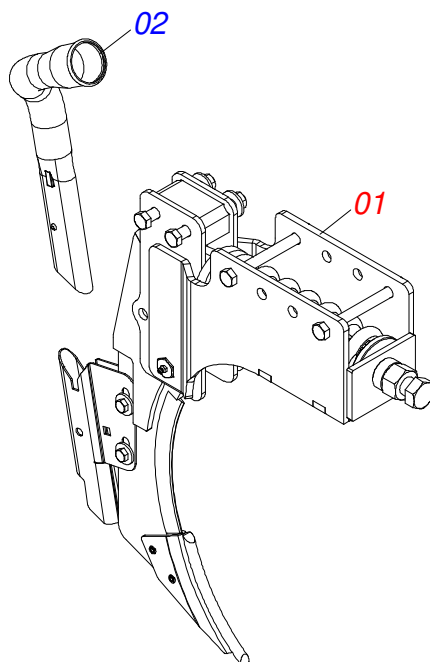


Item	Code	Description	See page	QT
01	0521050338	AUTOMATIC DISARMING ROD	191	01
02	0581010082	FERTILIZER SOCKET RIGHT		01

AUTOMATIC DISARMING ROD


0521050338

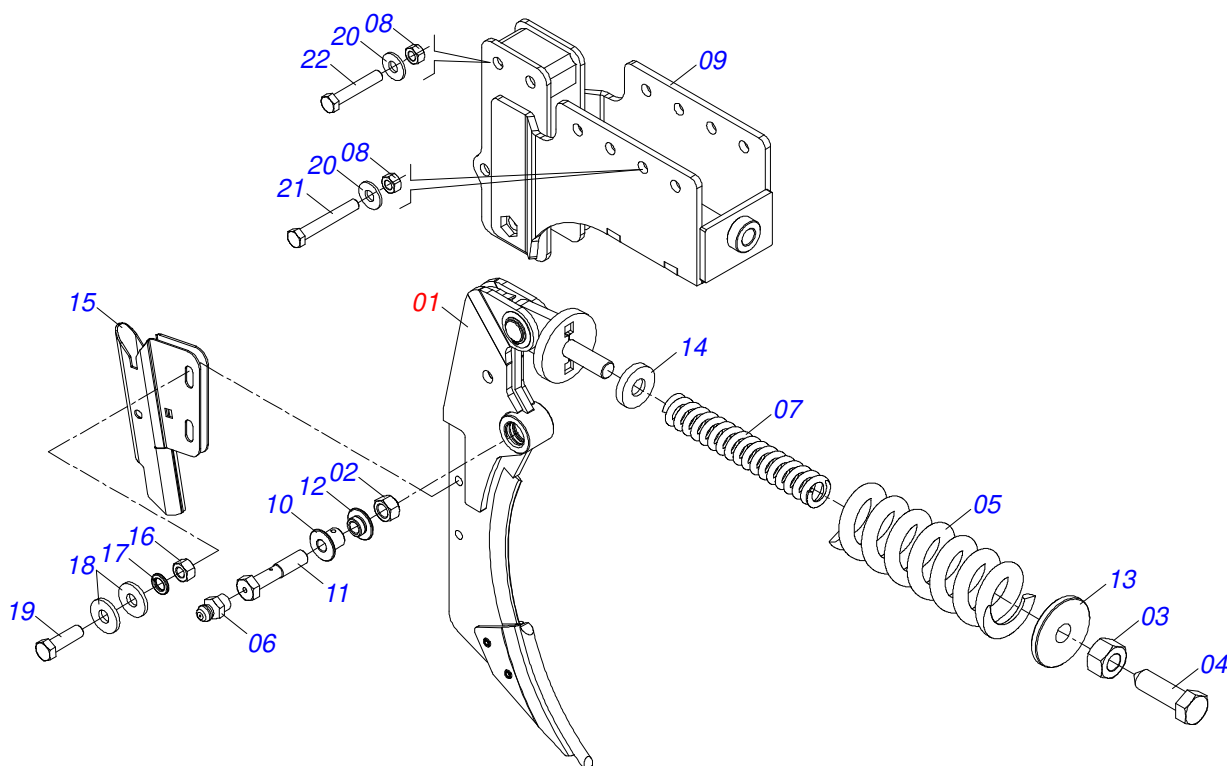


Item	Code	Description	See page	QT
01	0521050364	ROD WITH BEAK	192	01
02	0503012795	5/8" HEX SELF ADJUSTING NUT		01
03	0503010417	7/8" NUT		01
04	0503017058	HEX 7/8 UNC X 3 CSRT PC G.5 ZN		01
05	0503034106	80 X 230 X 16,50 COMPRESSSION SPRING		01
06	0503010691	1/4" GREASE FITTING		01
07	0503033624	35 X 215 X 7,14 COMPRES SPRING		01
08	0503011336	1/2" HEX SELF ADJUSTING NUT		04
09	0521067522	HDA SPRING BOX		01
10	0581012084	ARTICULATED SLEEVE		01
11	0581012082	SCREW		01
12	0581012081	ARTICULATED SLEEVE		01
13	0571019462	SUPPORT GUIDE PRING		01
14	0581012094	SUPPORT WASHER		01
15	0571018541	BODY SOCKET FERTILIZER		01
16	0503010026	3/8" NUT		02
17	0503010025	3/8 SPRING WASHER		02
18	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
21	0503010384	1/2" X 5" BOLT		02
22	0503010547	1/2" X 4" BOLT		02

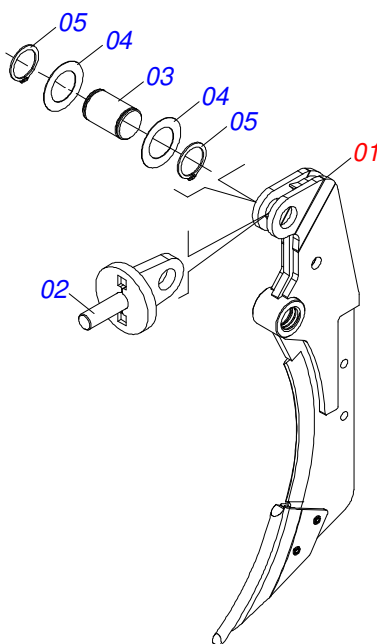


Item	Code	Description	See page	QT
01	0501110865	ROD WITH BEAK HDA		01
02	0521067065	FLANGE WASHER SPRING		01
03	0581012092	AXLE FIXER		01
04	0581012093	WASHER		02
05	0503010406	501025 CLAMPING RING (FOR AXLE)		02

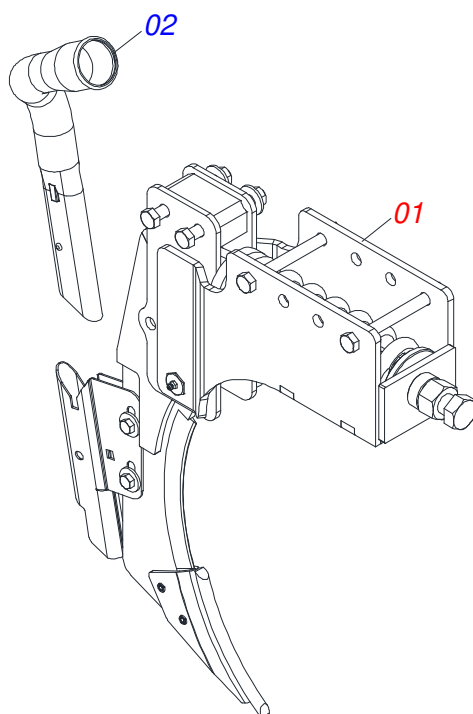


Item	Code	Description	See page	QT
01	0521053950	HDA AUTOMATIC DISARM	194	01
02	0581010082	FERTILIZER SOCKET RIGHT		01

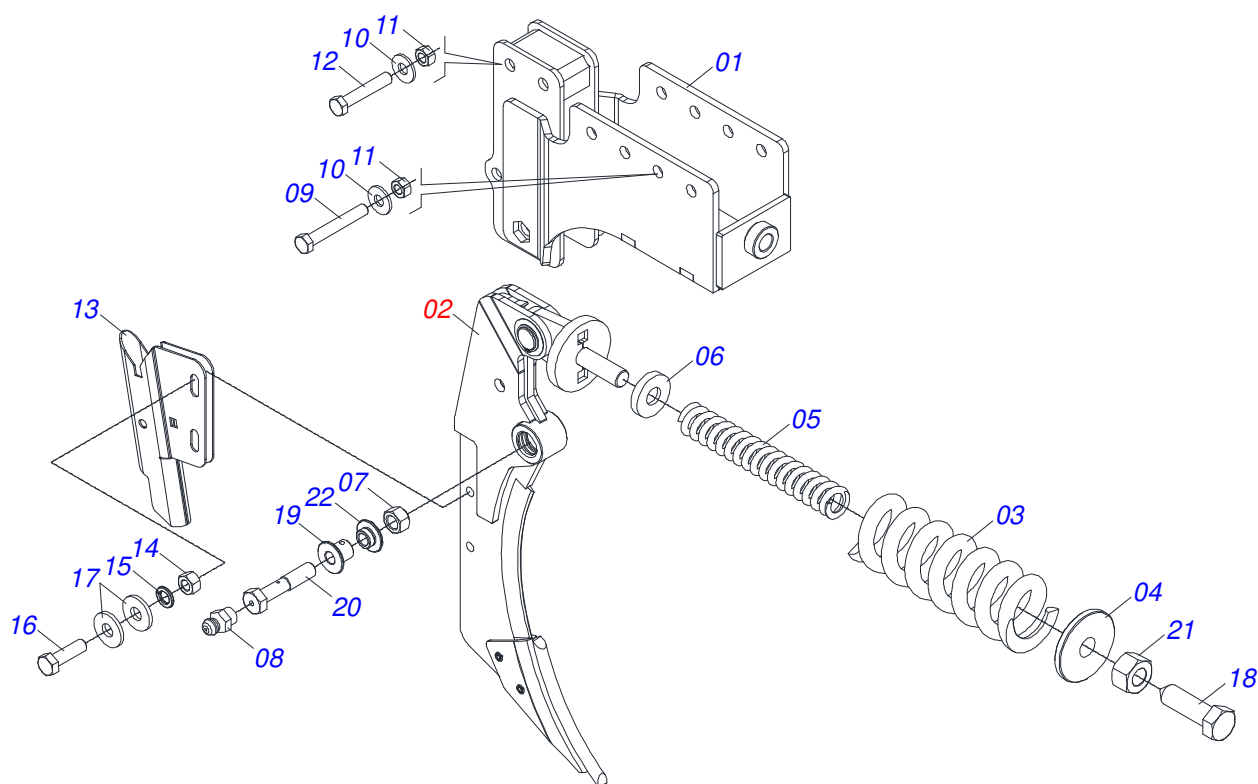


Item	Code	Description	See page	QT
01	0521067522	HDA SPRING BOX		01
02	0521053951	STEM	195	01
03	0503034106	80 X 230 X 16,50 COMPRESSSION SPRING		01
04	0581012094	SUPPORT WASHER		01
05	0503033624	35 X 215 X 7,14 COMPRES SPRING		01
06	0571019462	SUPPORT GUIDE PRING		01
07	0503012795	5/8" HEX SELF ADJUSTING NUT		01
08	0503010691	1/4" GREASE FITTING		01
09	0503010384	1/2" X 5" BOLT		02
10	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
11	0503011336	1/2" HEX SELF ADJUSTING NUT		04
12	0503017874	BOLT 1/2 UNC		02
13	0571018541	BODY SOCKET FERTILIZER		01
14	0503010026	3/8" NUT		02
15	0503010025	3/8 SPRING WASHER		02
16	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
17	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
18	0503017058	HEX 7/8 UNC X 3 CSRT PC G.5 ZN		01
19	0581012084	ARTICULATED SLEEVE		01
20	0581012082	SCREW		01
21	0503010417	7/8" NUT		01
22	0581012081	ARTICULATED SLEEVE		01

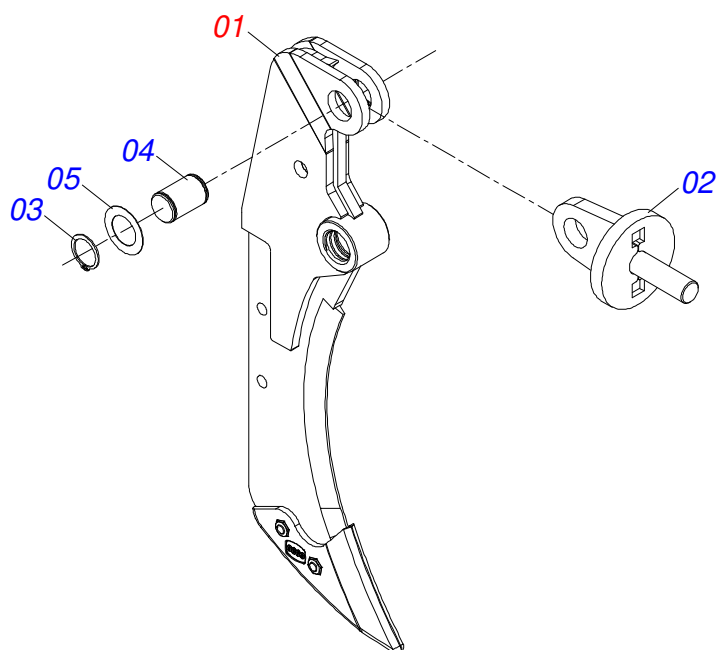


Item	Code	Description	See page	QT
01	0521053932	ROD WITH BEAK 0869	196	01
02	0521067065	FLANGE WASHER SPRING		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0581012092	AXLE FIXER		01
05	0521015818	FLAT WASHER		02

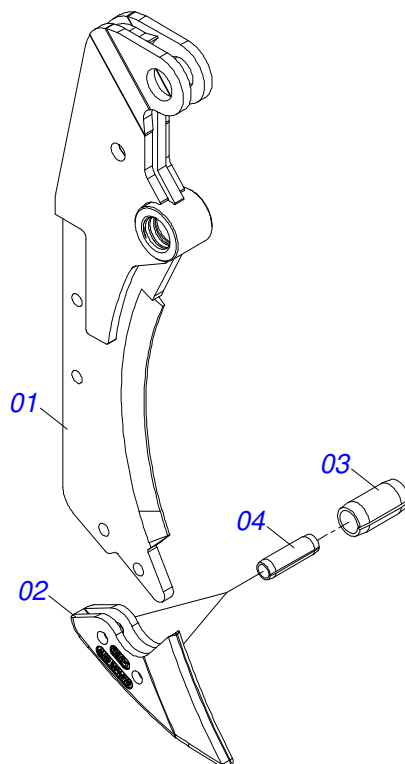


Item	Code	Description	See page	QT
01	0521067523	STEM WITHOUT BEAK DISARM		01
02	0502040901	FIXED ROD NOZZLE		01
03	0503016853	SPRING PIN		02
04	0503011402	0.2" X 0.8" SPRING PIN		02

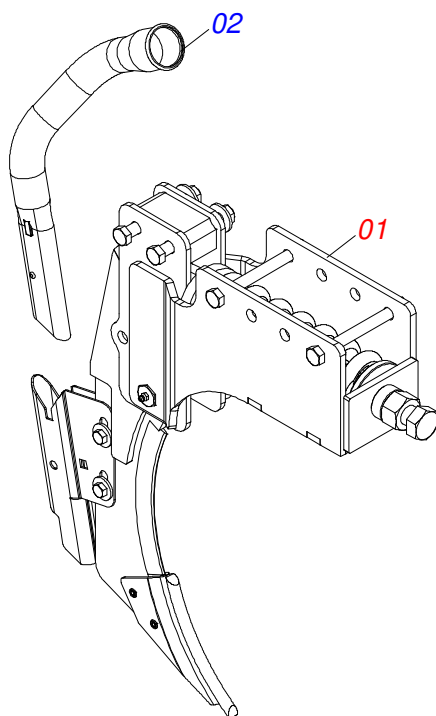


Item	Code	Description	See page	QT
01	0521050338	AUTOMATIC DISARMING ROD	191	01
02	0581010083	FERTILIZER SOCKET LEFT		01

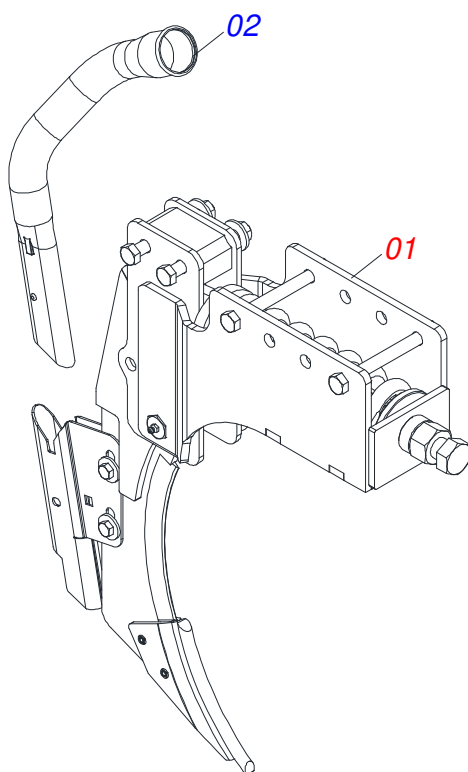


Item	Code	Description	See page	QT
01	0521053950	HDA AUTOMATIC DISARM	194	01
02	0581010083	FERTILIZER SOCKET LEFT		01

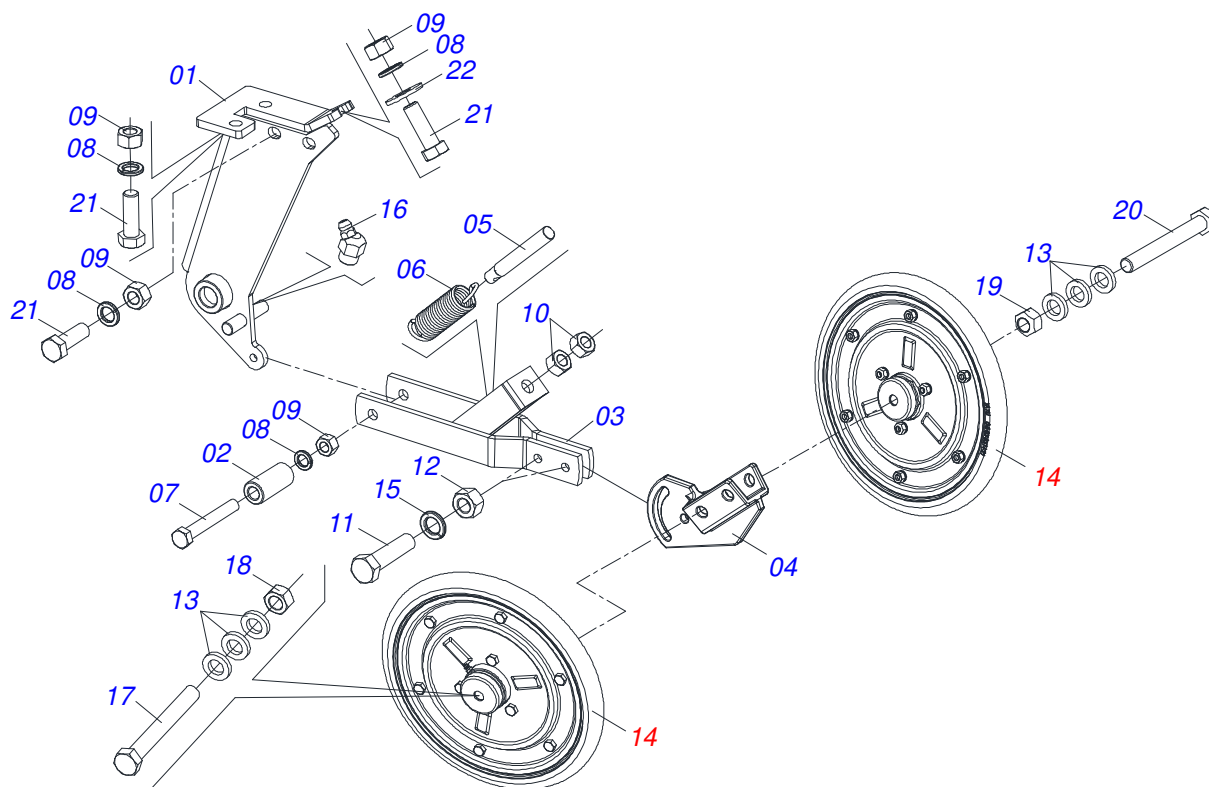

Item	Code	Description	See page	QT
01	0521066457	WHEEL SUPPORT		01
02	0531013272	0.5" X 1" X 2.2" SLEEVE		01
03	0511064128	LOWER COVER WHEEL SUPPORT		01
04	0502011757	PRESS REGULATOR		01
05	0501013491	5/8" TENSIONER SPRING		01
06	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
07	0503010752	1/2" X 3.1/2" BOLT		01
08	0503010019	1/2" SPRING WASHER		06
09	0503010060	1/2 UNC G.5 ZN HEX NUT		06
10	0503010013	5/8 NUT		02
11	0503010849	3/8" X 1-1/2" BOLT		02
12	0503010026	3/8" NUT		02
13	0521014508	FLAT WASHER		07
14	0501052908	COMPACTOR WHEEL WITH BEARING	139	02
15	0503010025	3/8 SPRING WASHER		02
16	0503010003	1845 GREASE FITTING		01
17	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
18	0503016864	LH 1/2" LOCK NUT		01
19	0503012136	NUT 1/2 NF		01
20	0503016449	1/2 X 4 BOLT		01
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		05
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01

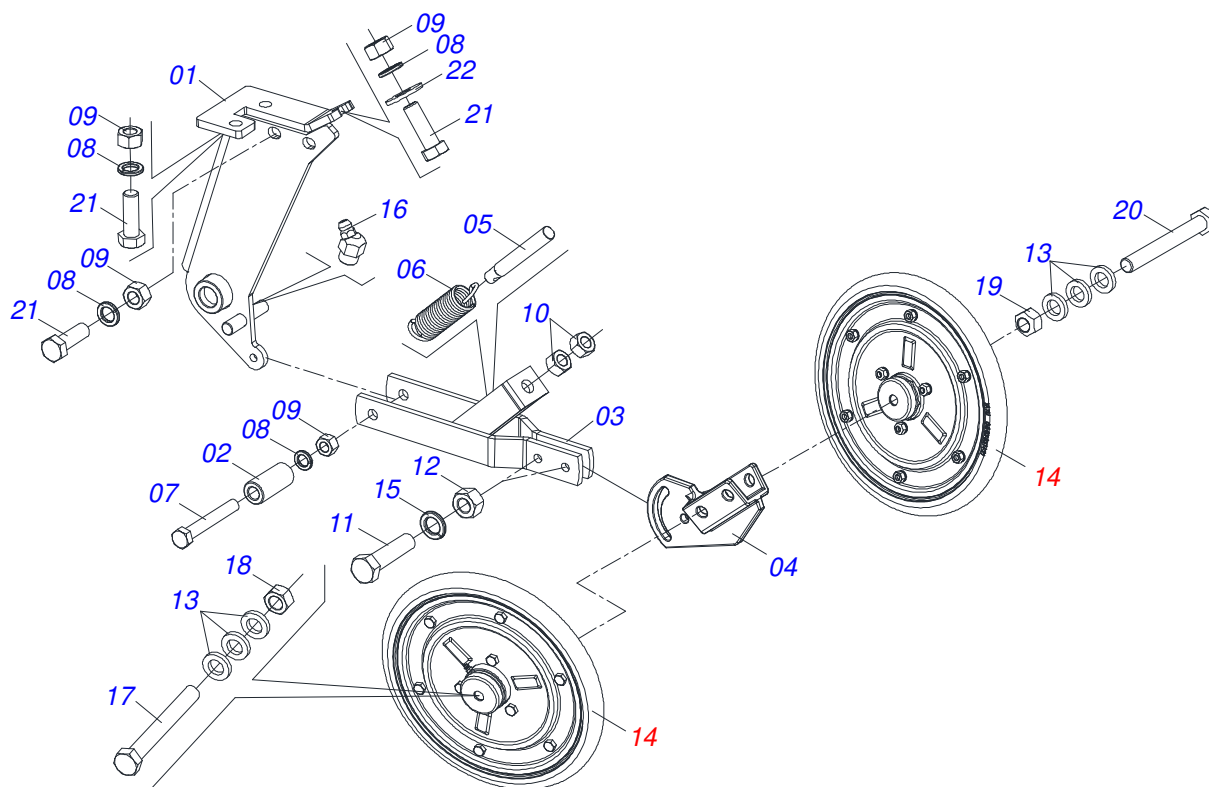

Item	Code	Description	See page	QT
01	0521066456	WHEEL SUPPORT		01
02	0531013272	0.5" X 1" X 2.2" SLEEVE		01
03	0511064128	LOWER COVER WHEEL SUPPORT		01
04	0502011757	PRESS REGULATOR		01
05	0501013491	5/8" TENSIONER SPRING		01
06	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
07	0503010752	1/2" X 3.1/2" BOLT		01
08	0503010019	1/2" SPRING WASHER		06
09	0503010060	1/2 UNC G.5 ZN HEX NUT		06
10	0503010013	5/8 NUT		02
11	0503010849	3/8" X 1-1/2" BOLT		02
12	0503010026	3/8" NUT		02
13	0521014508	FLAT WASHER		07
14	0501052908	COMPACTOR WHEEL WITH BEARING	139	02
15	0503010025	3/8 SPRING WASHER		02
16	0503010003	1845 GREASE FITTING		01
17	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
18	0503016864	LH 1/2" LOCK NUT		01
19	0503012136	NUT 1/2 NF		01
20	0503016449	1/2 X 4 BOLT		01
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		05
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01

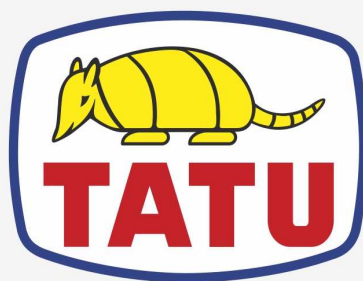

MARCHESAN

Technical Publications | Elaboration and Revision

LORENA ROCHA ALVES

www.marchesan.com.br

