

ROW CROP PLANTERS

PST TRIO FLEX TITANIUM - FRAME 7450 - CSU - (FROM 08/2022)

Code: 0501093417
Series: S-0119
Revision: 00
Date Revision: JUNHO/2023

PARTS CATALOGUE



MARCHESAN



PRODUCTS

Code	Description
0111260548	PST TRIO FLEX 7450/15E500 ESPECIAL S-0119
0111260551	PST TRIO FLEX 7450/15E500 ESPECIAL S-0119
0111260438	PST TRIO FLEX 7450/15E500 ESPECIAL S-0119

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX

0909096542	ASSY FRAME	1
0511053196	FRAME WITH ARTICULATION 7450	2
0511053188	RIGHT FRAME WITH WHEELED AXLE 7450	3
0511053189	LEFT FRAME WITH WHEELED AXLE 7450	4
0511053190	CENTRAL FRAME WITH WHEELED AXLE 6450/7285/7450/8460	5
0511059232	ASSEMBLY SPRING TRACTION	6
0521058402	WHEELED WITH 655 DRIFT SPRING WITH TRANSMISSION	7
0521058401	655 WHEELED SUPPORT WITH TRANSMISSION	8
0501058241	WHEEL SUPPORT CHAIN TENSIONER	9
0521058393	WHEEL WITH TIRE 7.00 X 16 14L PR TT WITH TRANSMISSION	10
0503063172	WHEEL	11
0521055233	WHEELED TRANSMISSION WITHOUT TIRE	12
0521055234	WHEELED FASTENER	13
0521055236	INTERMEDIARY CURRENT STRETCHER	14
0521055237	WHEEL FIXED CURRENT STRETCHER	15
0521055235	WHEEL MOBILE CURRENT STRETCHER	16
0521055238	BEARING TENSIONER CHAIN	17
0521058404	WHEELED WITH 655 DRIFT SPRING WITHOUT TRANSMISSION	18
0521058403	655 WHEELED BRACKET WITHOUT TRANSMISSION	19
0521058394	WHEEL WITH TIRE	20
0521055244	WHEEL WITHOUT TRANSMISSION WITHOUT TIRE	21
0909098905	DRAWBAR ASSEMBLY - FRAME 5750/5850/6850/7450	22
0511055096	TRACTOR HITCH	23
0511053179	TRACTOR COUPLING SHAFT	24
0521051614	TURNBUCKLE SIDE UPPER	25
0521050133	TURNBUCKLE SIDE 755/480	26
0511059237	3 POINT TURNBUCKLE	27
0521045756	HYDRAULIC CYLINDER	28
0511057653	HYDRAULIC CYLINDER	29
0501053835	FEMALE QUICK COUPLER	30
0511059419	HYDRAULIC SYSTEM ASSEMBLY 6850/7285/7450/7860/7960	31
0511059290	VALVE ASSEMBLY	32
0501053834	MALE QUICK COUPLER	33
0531056205	7450 FERTILIZER HOPPER SET	34
0531056259	RIGHT HOPPER SUPPORT WITH FERTILIZER METERING	35
0531056260	CENTRAL HOPPER SUPPORT WITH FERTILIZER METERING	36
0531056262	LEFT HOPPER SUPPORT WITH FERTILIZER METERING	37
0501053788	3/4" SQUARE AXLE FASTENER	38
0531055319	ALPHA II FERTILIZER METERING	39
0531055863	ASSY TRANSMISSION HUB	40
0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	41
0531059139	ASSY COLLECTOR	42
0531055273	ALPHA FERTILIZER METERING CLAMP	43
0531055898	CHAIN TIGHTENER	44
0531055897	INTERMEDIATE TRANSMISSION BEARING	45
0501056451	BEARING	46
0531055896	80 INTERMEDIATE TRANSMISSION BEARING ASSEMBLED	47
0531057911	22Z GEAR SIDE BEARING ASSEMBLY	48
0531057901	GEAR	49
0531059737	RIGHT BEARING WITH ALPHA GEAR	50
0531059738	LEFT EARLY BEARING	51
0531059739	SINGLE SIDE GEAR BEARING SET 22Z	52
0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	53
0511058249	ASSEMBLY TRANSMISSION 7450	54



MARCHESAN

INDEX

0501110639	BEARING	55
0501052560	MOTOR AXLE SIGNAL	56
0511051434	TRANSMISSION ACTUATOR	57
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	58
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	59
0521043316	RIGHT GEAR BOX ASSY	60
0501058212	SEMI MOUNTED RIGHT CHANGE	61
0521043317	LEFT GEAR BOX ASSY	62
0501058213	LH GEAR BOX	63
0511059266	CLOSED BEARING	64
0501056271	GEARBOX CLOSED BEARING	65
0501056443	GEAR HOUSING BEARING	66
0501056444	BEARING WITH ROLLER	67
0501048790	AXLE WITH RING	68
0501054655	CHAIN TENSIONER ASSY	69
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	70
0511059261	CHAIN TENSIONER	71
0521055217	LOWER CURRENT STRETCH	72
0501058254	UPPER SEED CHAIN TENSIONER	73
0521055216	BEARING WITH GEAR	74
0521055218	BEARING GEAR WITH DOUBLE	75
0521055214	BEARING GEAR WITH	76
0521055215	DOUBLE TRANSMISSION BEARING	77
0521052672	PLATFORM ASSEMBLY 7450	78
0511058252	HANDLE ASSEMBLY 7450	79
0511054971	JACK ASSEMBLY	80
0511056536	LADDER ASSEMBLY	81
0511057512	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE	82
0501054649	HBM SEQUENTIAL VALVE	83
0511058431	HYDRAULIC CYLINDER	84
0521052827	AXIS TRANSMISSION SEED ASSY 7450	85
0503062206	CARDAN TERMINAL	86
0521052803	REAR LIGHT ASSEMBLY	87
0521052792	MOUNTED REAR LIGHT	88
0531058043	7450 SINGLE SEED HOPPER SET FOR 15 NOZZLES	89
0531058045	7450 SINGLE SEED HOPPER FOR 15 NOZZLES	90
0531057950	3" X 175 SEED NOZZLE WITH FIXING	91
0531054471	CAP WITH FIXING	92
0521052687	RIGHT SUPPORT TOWER WITH BOLT	93
0521051931	LEFT SUPPORT TOWER WITH BOLT	94
0531052006	LEFT SUPPORT TOWER WITH BOLT	95
0531052000	LEFT SUPPORT TOWER WITH BOLT	96
0531052003	RIGHT SUPPORT TOWER WITH BOLT	97
0521052810	ASSY MANUAL DOOR	98
0531059625	KIT WITH ALPHA COMPONENTS - 15 ROWS	99
0511056736	HOSE SUPPORT	100
0521052796	CYLINDER ASSEMBLY 5750/6850/7860/7960/8460	101
0511058406	HYDRAULIC CYLINDER	102
0531054946	SET OF PLANTING MONITORING 16	103
0531057638	APLHA LABEL SET - 7450	104
0909096543	FERTILIZER/SEED ROW	105
0521053227	FRONT LEFT SHORT SEED ROW	106
0521053230	FRONT RIGHT SHORT SEED ROW	107
0521053228	FRONT LEFT LONG SEED ROW	108
0521053229	FRONT RIGHT LONG SEED ROW	109



MARCHESAN

INDEX


0521054737	FRONT SEMI-ASSEMBLED LONG LEFT SEED ROW	110
0521054736	FRONT SEMI-ASSEMBLED OF LONG RIGHT SEED ROW	111
0521055213	SEED ROW BEARING	112
0521055223	SEED ROW TRANSMISSION HUB	113
0511055260	SEED ROW CHAIN TENSIONER	114
0521055226	BEARING WITH AXLE JOINT	115
0501059326	UNIVERSAL JOINT AXLE	116
0521055227	BEARING SHAFT HEX	117
0501059363	5/8" HEX AXLE BEARING	118
0521055219	BEARING WITH GEAR 17Z HEX 5/8	119
0521055220	BEARING FRONT SEED ROW	120
0511059333	SEMI-ASSEMBLED MECHANICAL FRAME	121
0511059334	BEARING WITH LONG FRONT AXLE	122
0511058143	UNIVERSAL JOINT AXLE	123
0521054771	LEFT REAR SEED ROW	124
0521054770	RIGHT REAR SEED ROW	125
0521054818	BASE 5/8 FIXATION WITHOUT ASSY LUBRICATION	126
0521055871	LEFT DOUBLE DISC SEED 15 X 15	127
0511052302	LH SUPPORT DDD GUIDE	128
0521055870	RIGHT DOUBLE DISC SEED 15 X 15	129
0511052301	SUPPORT DDD 15 RIGHT	130
0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	131
0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	132
0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	133
0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	134
0521055053	DEPTH/COMPACTOR SYSTEM - SPCRR	135
0521055065	ASSY DEPTH / COMPACTOR	136
0501056769	DEPTH WHEELS REGULATOR ASSY	137
0521055033	SEMI-ASSEMBLED COMPACTOR BODY	138
0521055054	LEFT ARM WITH SLEEVE	139
0521055066	RIGHT ARM WITH SLEEVE	140
0521055068	RAYED WHEEL CENTER CLOSED	141
0521055055	HUB WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	142
0521054990	LEFT COMPACTOR WHEEL	143
0521055017	RIGHT COMPACTOR WHEEL	144
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	145
0521054758	CONTROL DEPTH WITH REGULATOR	146
0521054751	DEPTH CONTROL WITH THREAD	147
0521053245	LEFT ARM WHEELS	148
0521053244	COVERING WHEEL RIGHT ARM ASSEMBLED	149
0521053483	CPRA RIGHT DEPTH CONTROL CUBE WITHOUT LUBRICATION	150
0521053484	CPRA LEFT DEPTH CONTROL CUBE WITHOUT LUBRICATION	151
0511055819	DEPTH BAND WITH RIM	152
0521054752	V COMPACTING SYSTEM	153
0521054753	DRIVE WHEEL V RUBBER RIGHT	154
0521054754	DRIVE WHEEL V LEFT RUBBER	155
0521054811	FERTILIZER SHORT ROW	156
0521054812	LONG FERTILIZER ROW	157
0521054906	SPRING ASSY FERTILIZER	158
0521053231	DPL 20 SHORT ROW WITHOUT LUBRICATION CONICAL BEARING	159
0521053232	DPL 20 LONG ROW WITHOUT LUBRICATION CONICAL BEARING	160
0521053248	20" DISC BLADE HUB WITH CONICAL BEARING	161



MARCHESAN


INDEX

0521053697	DISC BLADE HUB		162
0521054769	LEFT DDD FERTILIZER WITH SUPPORT		163
0521055869	LEFT DUAL FERTILIZER DISC		164
0521054768	RIGHT DDD FERTILIZER WITH SUPPORT		165
0521055868	RIGHT DUAL FERTILIZER DISC		166
0531055312	TITANIUM SINGLE SEED SYSTEM		167
0531054583	SEMI-ASSEMBLED SINGLE SEED HOPPER		168
0503063760	SINGLE SEED HOPPER ASSEMBLED WITH LOCK LID		169
0511052058	SEED SYSTEM TITANIUM		170
0511052024	FAST CLOSING SET		171
0531050666	LEFT SINGLE DISC CONDUCTOR ASSEMBLY		172
0531050667	SINGLE RIGHT DISC CONDUCTOR ASSEMBLY		173
0531050801	SUPPORT WITH 18" B RIBBED DISC BLADE		174
0531050800	HUB WITH SMOOTH STRIPED FLAT DISC B. 18		175
0521053947	AUTOMATIC DISARMING ROD		176
0521053951	STEM		177
0521053932	ROD WITH BEAK 0869		178
0521054912	RIGHT SUPPORT WITH DOC 18		179
0521054914	HUB WITH DOC 18 RIGHT		180
0521054913	LEFT SUPPORT WITH DOC 18		181
0521054915	HUB WITH DOC 18 LEFT		182
0531050237	SEED CONDUCTOR FIXER 3 CSU RIGHT		183
0521050168	MOUNTED FERTILIZER CONDUCTOR		184
0503062066	DISC SET WITH CORN RING		185
0503062067	DISC SET / RING SOY 90F TITANIUM		186

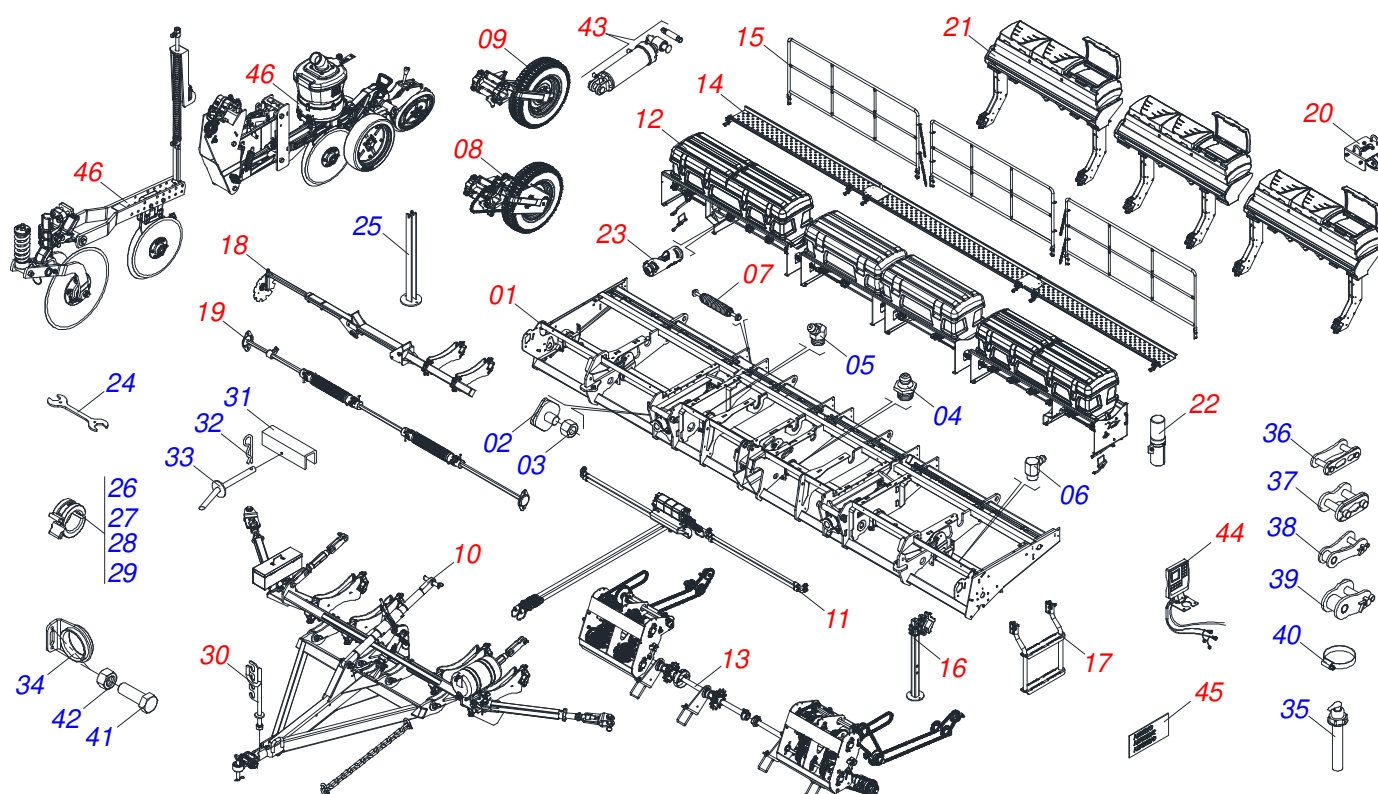


Item	Code	Description	See page	QT
01	0511053196	FRAME WITH ARTICULATION 7450	2	01
02	0521064285	LOCK LOWER FRAME		02
03	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		02
04	0503010002	1800 GREASE FITTING		02
05	0503010003	1845 GREASE FITTING		08
06	0503010004	1890 GREASE FITTING		02
07	0511059232	ASSEMBLY SPRING TRACTION	6	02
08	0521058402	WHEELED WITH 655 DRIFT SPRING WITH 7 TRANSMISSION		04
09	0521058404	WHEELED WITH 655 DRIFT SPRING WITHOUT 18 TRANSMISSION		02
10	0909098905	DRAWBAR ASSEMBLY - FRAME 22	22	01
11	0511059419	HYDRAULIC SYSTEM ASSEMBLY 6850/7285/7450/7860/7960	31	01
12	0531056205	7450 FERTILIZER HOPPER SET	34	01
13	0511058249	ASSEMBLY TRANSMISSION 7450	54	01
14	0521052672	PLATFORM ASSEMBLY 7450	78	01
15	0511058252	HANDLE ASSEMBLY 7450	79	01
16	0511054971	JACK ASSEMBLY	80	02
17	0511056536	LADDER ASSEMBLY	81	02
18	0511057512	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE	82	01
19	0521052827	AXIS TRANSMISSION SEED ASSY 7450	85	01
20	0521052803	REAR LIGHT ASSEMBLY	87	01
21	0531058043	7450 SINGLE SEED HOPPER SET FOR 15 NOZZLES	89	01
22	0521052810	ASSY MANUAL DOOR	98	01
23	0531059625	KIT WITH ALPHA COMPONENTS - 15 ROWS	99	01
24	0541015451	FIXED KEY 2.3/8 X 2.3/4		01
25	0501065677	STRUT		02
26	0501047895	25 ROD STOP		03
27	0501047885	30 ROD STOP		03


Item	Code	Description	See page	QT
28	0501047886	35 ROD STOP		03
29	0501047887	40 ROD STOP		03
30	0511056736	HOSE SUPPORT	100	01
31	0521013022	TRANSPORT LOCK		03
32	0503030168	HITCH PIN CLIP		03
33	0501068994	8,30 X 78 LOCK PIN		03
34	0521066304	HOSE GUIDE		01
35	0503019262	SOAP DISH VACUUM		01
36	0503010780	N-2050 AMENDMENT		02
37	0503011750	AMENDMENT WITH LOCK		06
38	0503011751	REDUCTION		06
39	0503010951	REDUCTION		04
40	0503010246	CLAMP		15
41	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		02
42	0503013816	5/16" LOCKNUT		02
43	0521052796	CYLINDER ASSEMBLY 5750/6850/7860/7960/8460	101	01
44	0531054946	SET OF PLANTING MONITORING 16	103	01
45	0531057638	APLHA LABEL SET - 7450	104	01
46	0909096543	FERTILIZER/SEED ROW	105	01

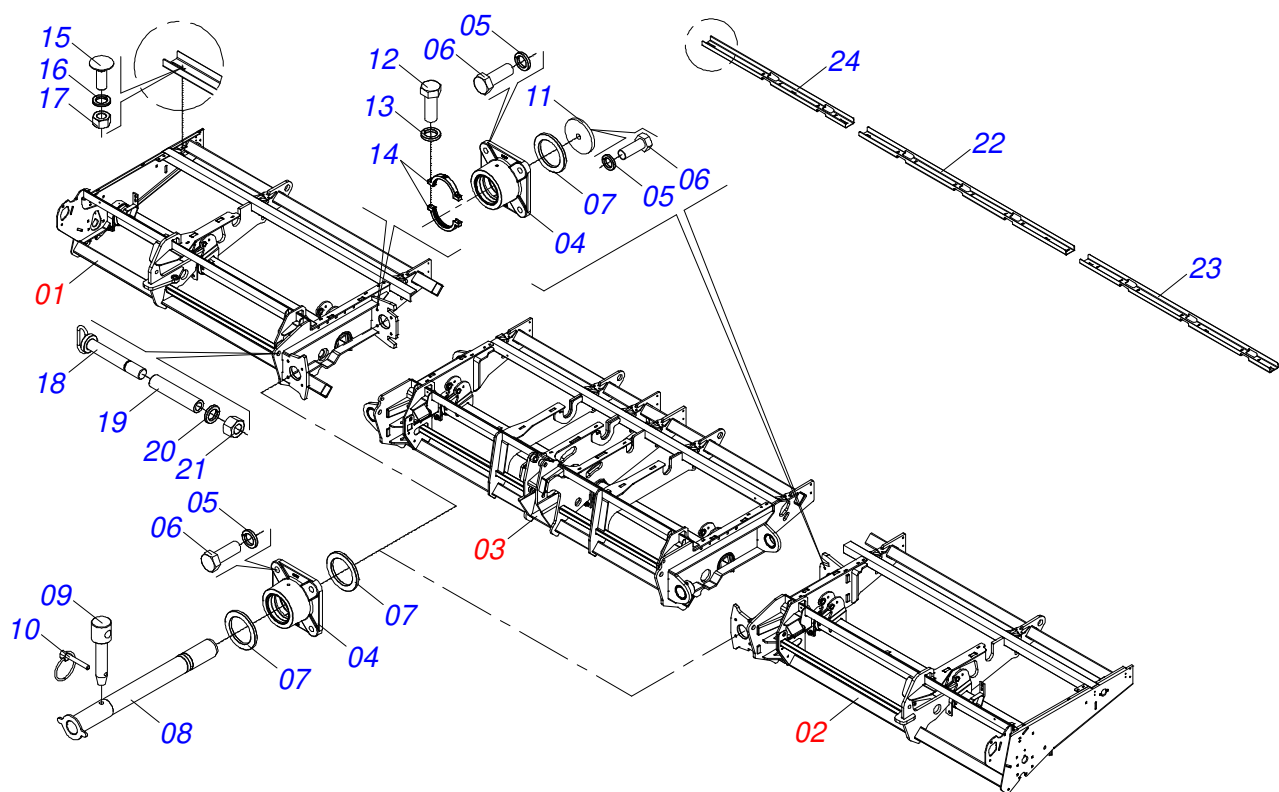


Item	Code	Description	See page	QT
01	0511053188	RIGHT FRAME WITH WHEELED AXLE 7450	3	01
02	0511053189	LEFT FRAME WITH WHEELED AXLE 7450	4	01
03	0511053190	CENTRAL FRAME WITH WHEELED AXLE 6450/7285/7450/8460	5	01
04	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
13	0503011444	SPRING WASHER		04
14	0502012698	CLAMP		04
15	0501011643	3/8 X 1" BOLT		14
16	0503010025	3/8 SPRING WASHER		14
17	0503010026	3/8" NUT		14
18	0521063003	LOCK PIN		02
19	0571010969	LOCK SLEEVE FRAME		02
20	0503013627	1.1/2 SPRING WASHER		02
21	0501010110	1.1/2" NUT		02
22	0581018018	TROUGH 24 X 50 X 1255		02
23	0581018019	TROUGH 24 X 50 X 1070		02
24	0581015857	GUTTER 24 X 50 X 1080		02

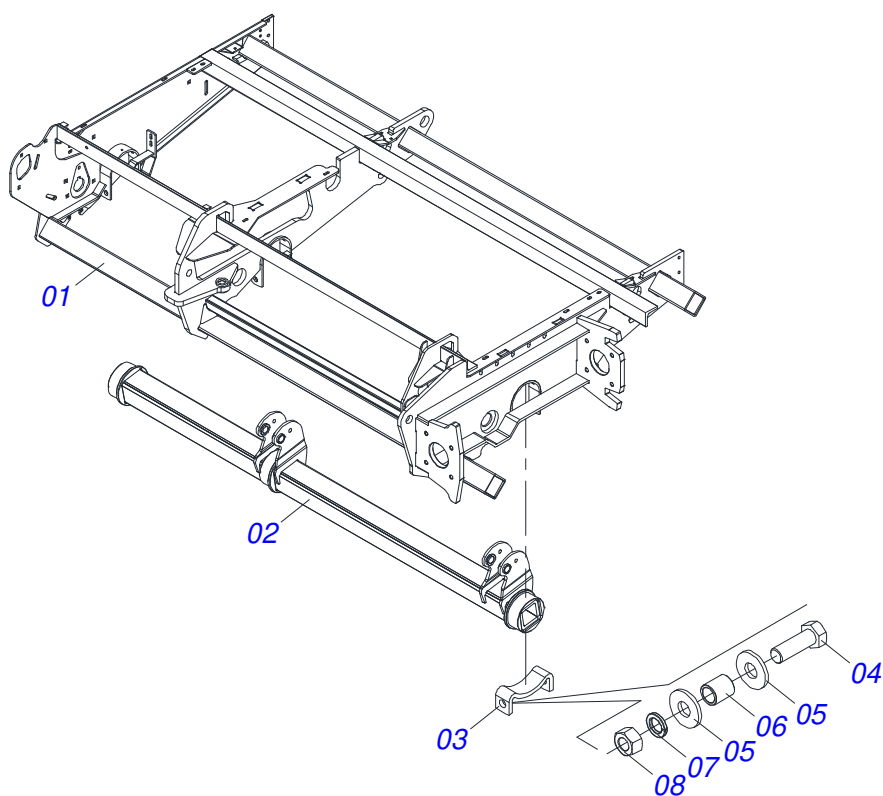


Item	Code	Description	See page	QT
01	0521064009	RIGHT FRAME		01
02	0521064023	ARTICLES AXLE RIGHT ROLLED		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

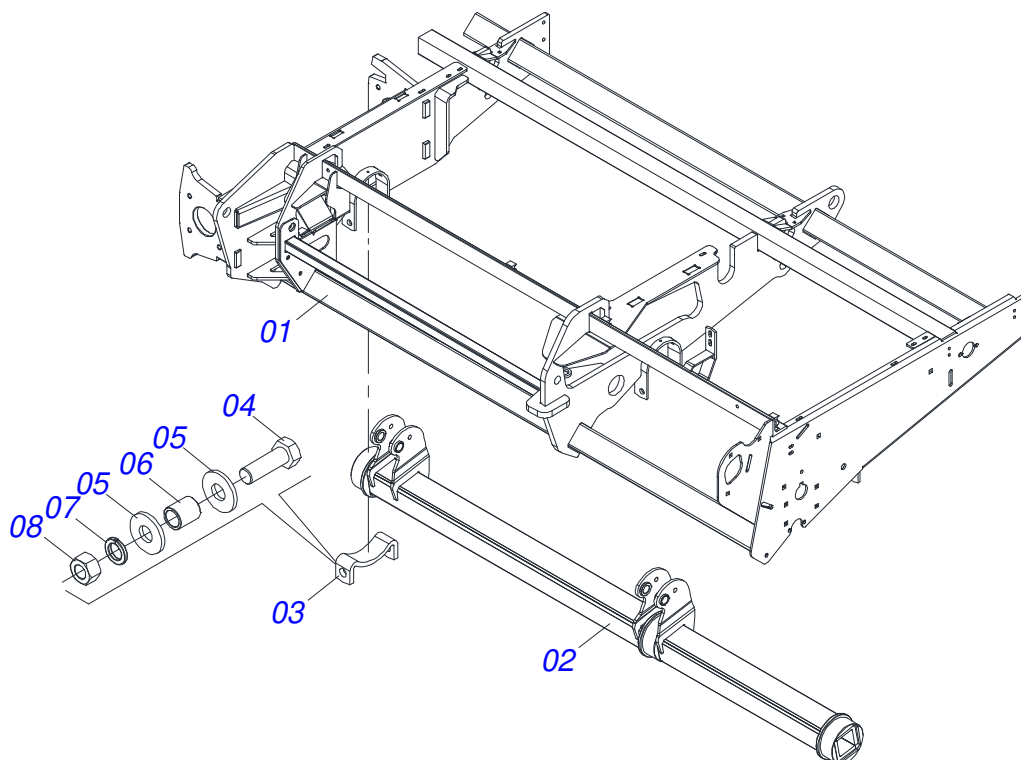


Item	Code	Description	See page	QT
01	0521064010	LEFT FRAME		01
02	0521064021	ARTICLES AXLE LEFT ROLLED		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8 UNC X 2.1/4 BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8 NUT		06

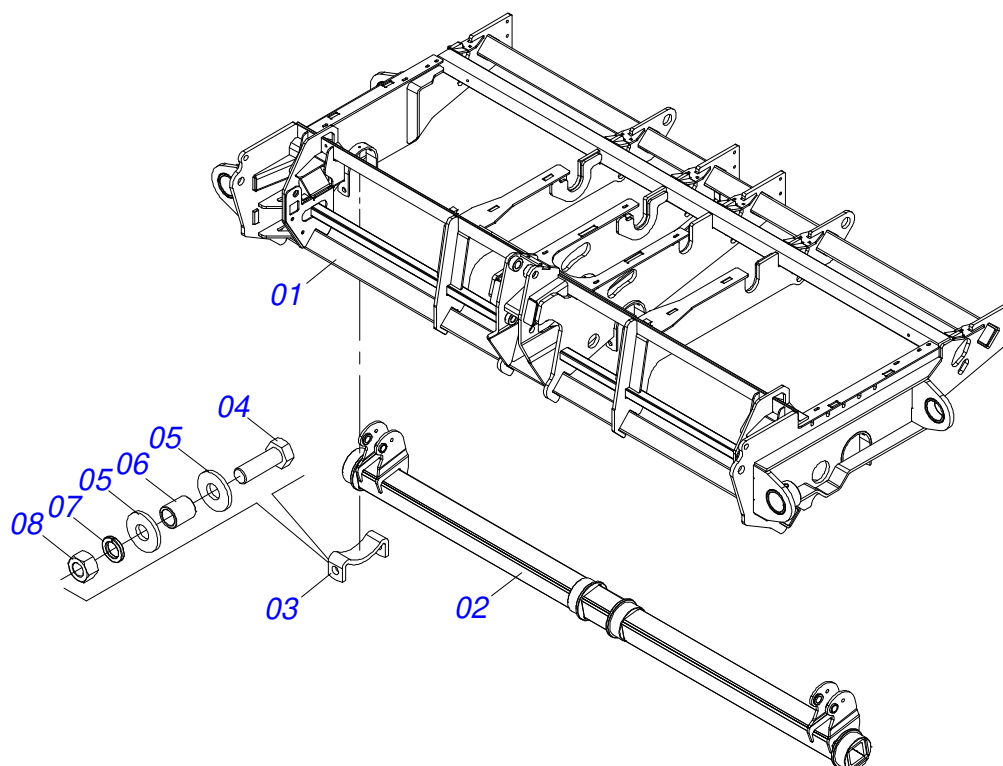


Item	Code	Description	See page	QT
01	0521064011	CENTRAL FRAME		01
02	0521064022	CENTRAL ARTICLES AXLE ROLLED		01
03	0521013199	LOWER BEARING SEMI		04
04	0503010899	5/8 UNC X 2.1/4 BOLT		08
05	0501012140	FLAT WASHER		16
06	0531013922	0.6" X 0.8" X 1" SLEEVE		08
07	0503011445	SPRING WASHER		08
08	0503010013	5/8 NUT		08

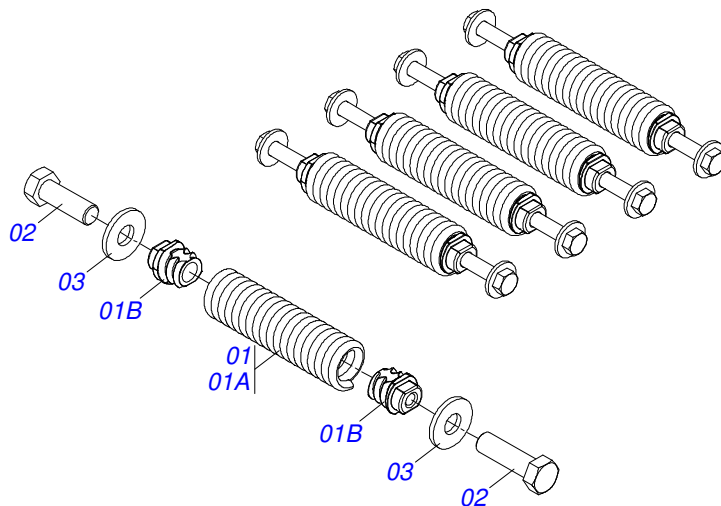


Item	Code	Description	See page	QT
01	0511050681	TRACTION SPRING		05
01A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
01B	0561016062	SPRING HITCH		02
02	0503013030	5/8" X 3.1/4" BOLT		10
03	0501012140	FLAT WASHER		10

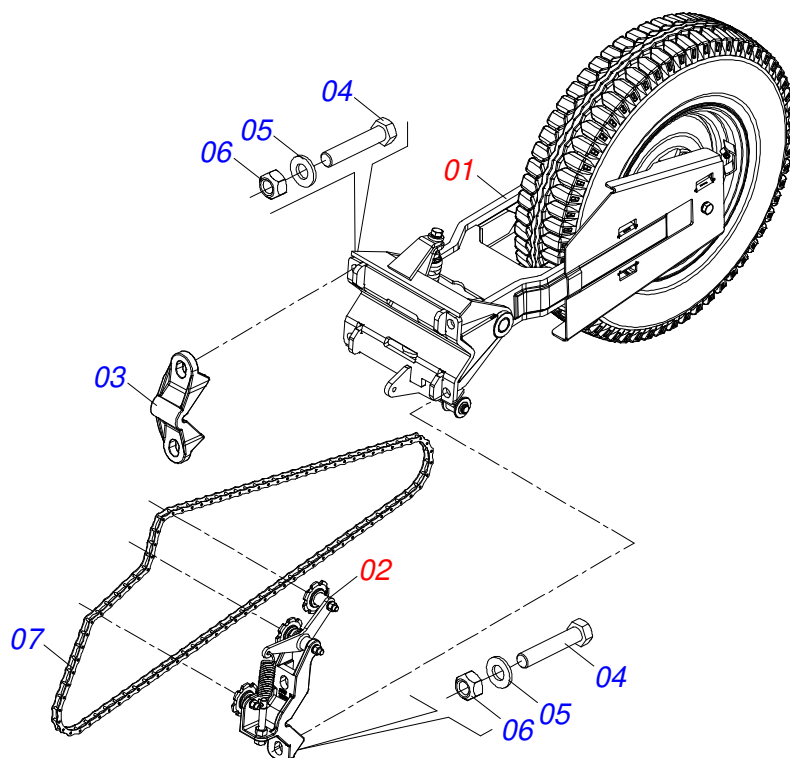


Item	Code	Description	See page	QT
01	0521058401	655 WHEELED SUPPORT WITH TRANSMISSION	8	01
02	0521055234	WHEELED FASTENER	13	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

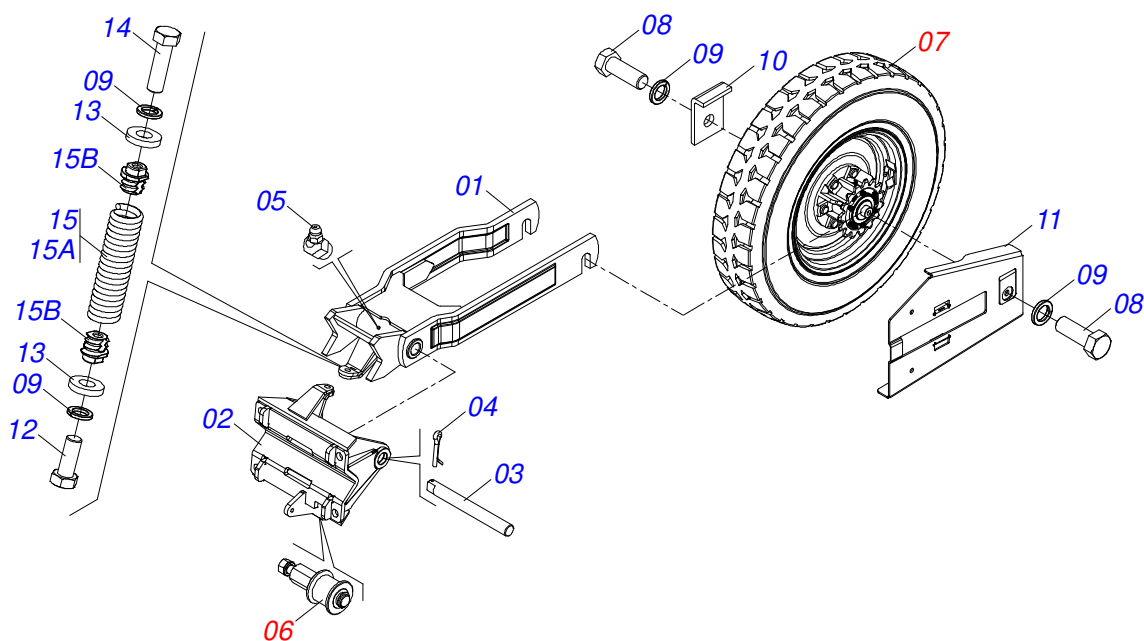


Item	Code	Description	See page	QT
01	0531062422	WHEEL ARM		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" SPLIT PIN		01
05	0503010003	1845 GREASE FITTING		01
06	0501058241	WHEEL SUPPORT CHAIN TENSIONER	9	01
07	0521058393	WHEEL WITH TIRE 7.00 X 16 14L PR TT WITH 10 TRANSMISSION		01
08	0503018981	BOLT		02
09	0503010027	5/8 SPRING WASHER		04
10	0591010589	BODY LOCK WHEEL		01
11	0521069983	WHEEL COVER		01
12	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
13	0551017715	FLAT WASHER		02
14	0503013030	5/8" X 3.1/4" BOLT		01
15	0511050681	TRACTION SPRING		01
15A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
15B	0561016062	SPRING HITCH		02

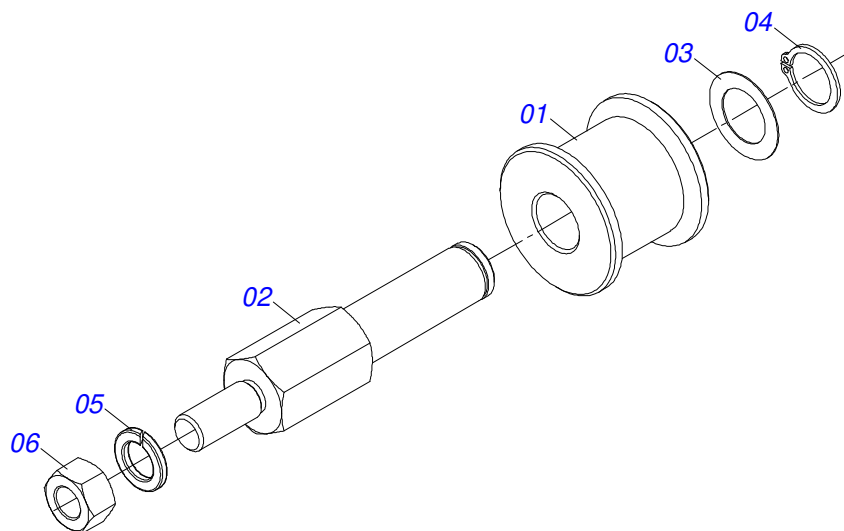


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

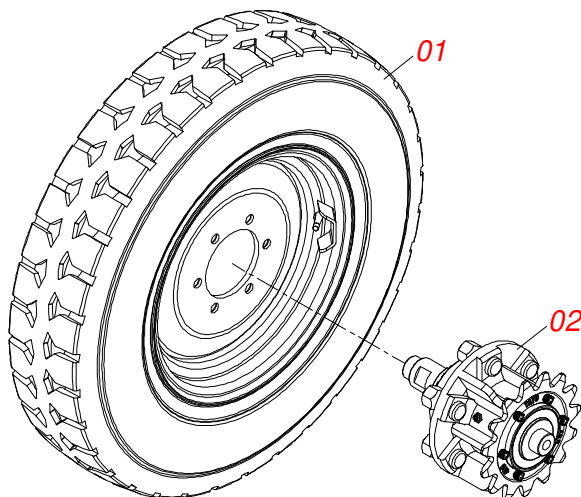


Item	Code	Description	See page	QT
01	0503063172	WHEEL	11	01
02	0521055233	WHEELED TRANSMISSION WITHOUT TIRE	12	01

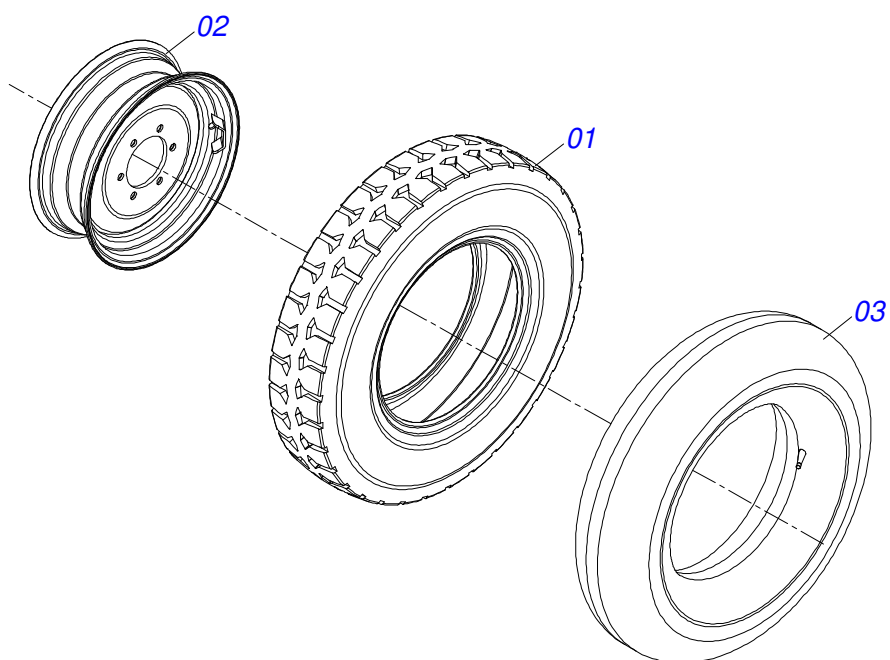


Item	Code	Description	See page	QT
01	0503019458	TIRE 7.00X16 14PR		01
02	0503016517	WHEEL EI		01
03	0503010033	7.50 X 16 INNER TIRE		01

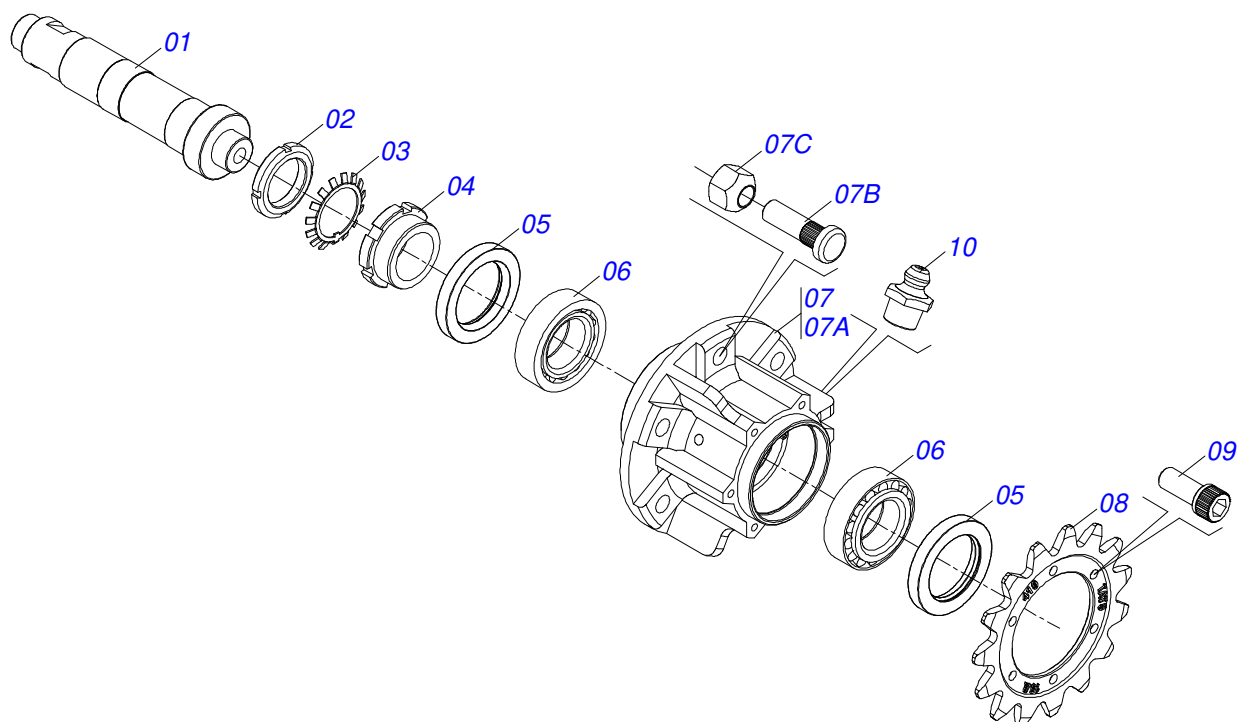


Item	Code	Description	See page	QT
01	0521012185	TRANSMISSION WHEEL AXLE	01	
02	0503010330	KM 9 LOCKNUT	01	
03	0503010329	LOCK WASHER	01	
04	0511015949	LOCK NUT	01	
05	0503010804	00547-B SEAL	02	
06	0503019364	BEARING 25590/25523	02	
07	0501110721	WHEEL HUB WITH SCREW / NUTS	01	
07A	0571012990	CARRYING WHEEL HUB TRANSMISSION	01	
07B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR	06	
07C	0503016516	5/8 UNF CONIC NUT	06	
08	0502011339	15Z GEAR P 1.25"	01	
09	0503012550	5/16" X 3/4" BOLT	06	
10	0503010002	1800 GREASE FITTING	01	

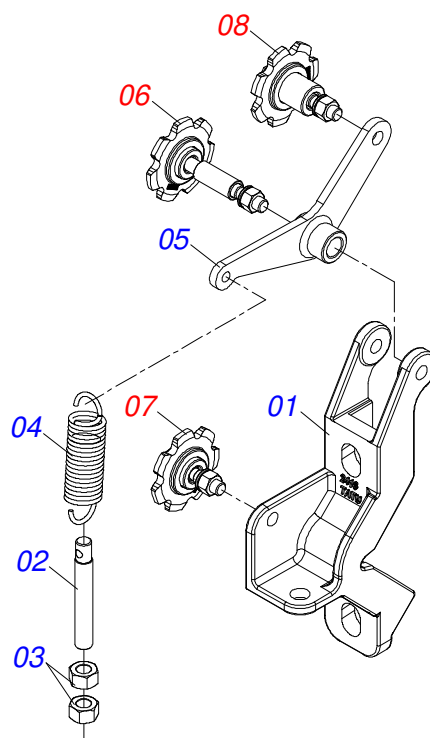


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8 NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0521055236	INTERMEDIARY CURRENT STRETCHER	14	01
07	0521055237	WHEEL FIXED CURRENT STRETCHER	15	01
08	0521055235	WHEEL MOBILE CURRENT STRETCHER	16	01

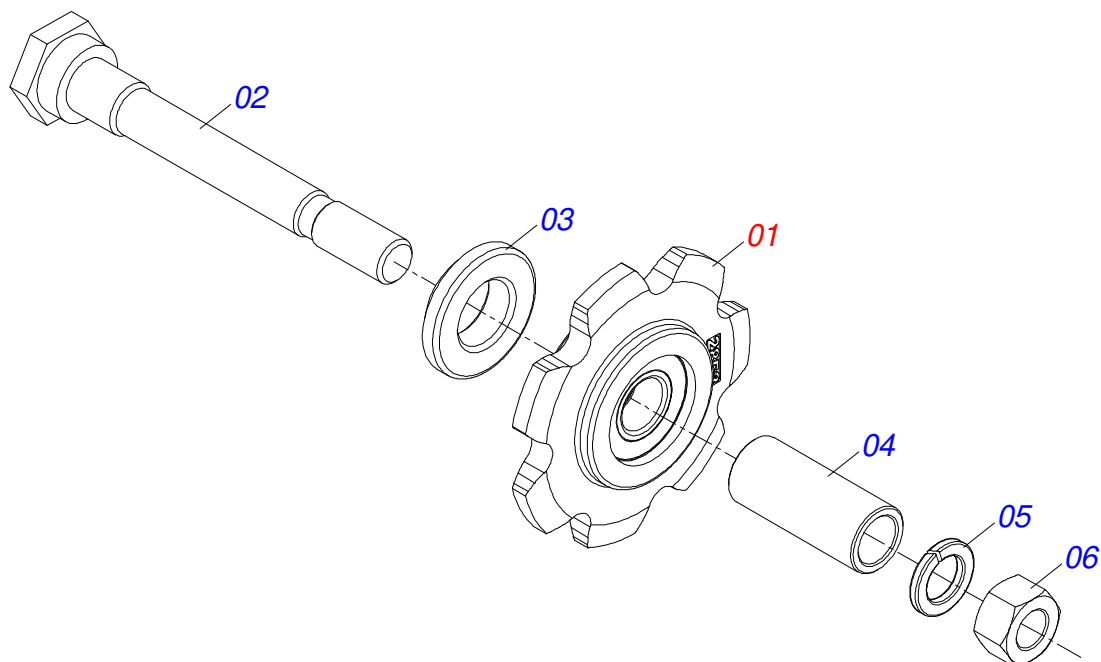


Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN	17	01
02	0551018245	CHAIN TENSIONER AXLE		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0551018239	SLEEVE 19 X 13,50 X 45		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

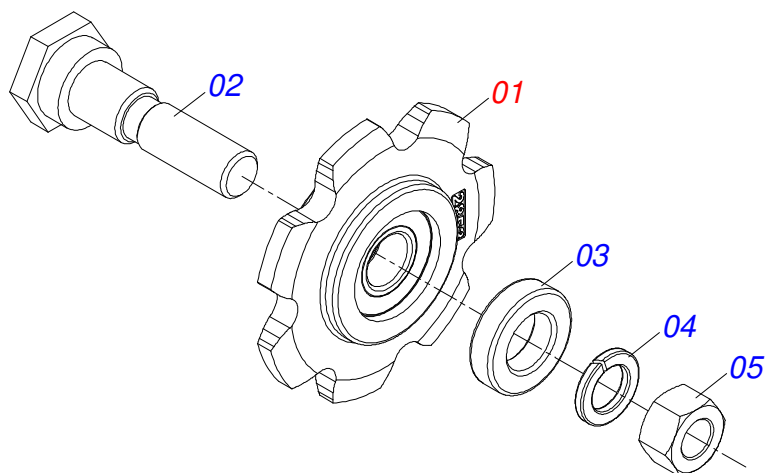


Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN	17	01
02	0551018252	CHAIN TENSIONER AXLE		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

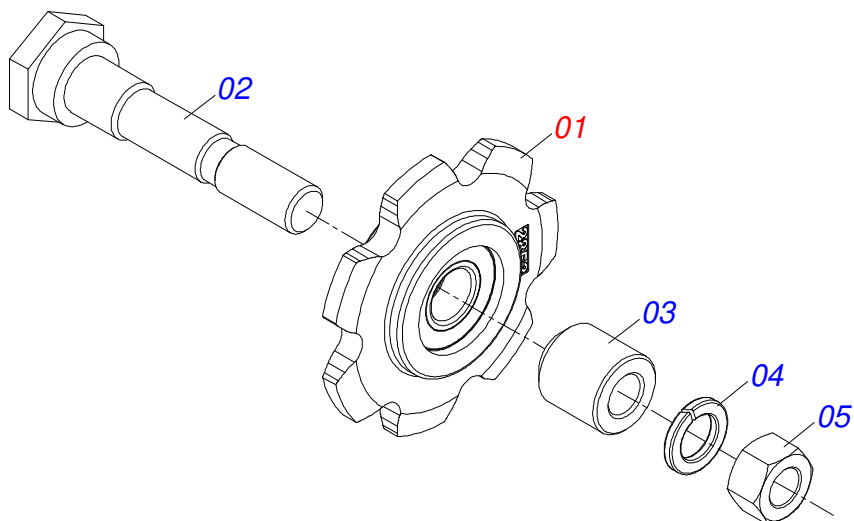


Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN	17	01
02	0551018244	CHAIN TENSIONER AXLE		01
03	0591017923	15,30 X 30 X 32 SLEEVE		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

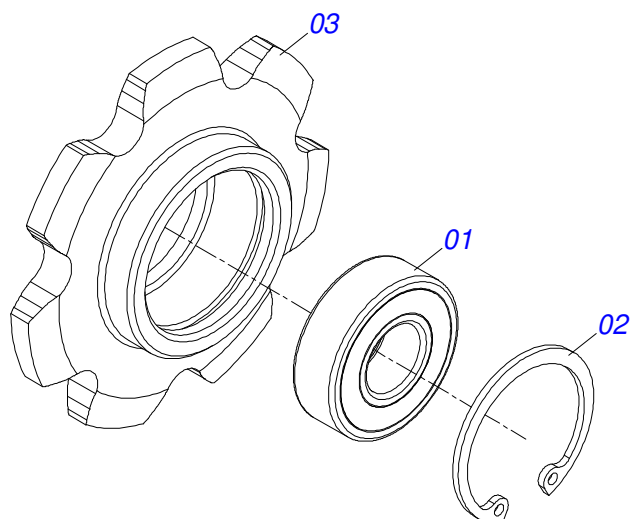


Item	Code	Description	See page	QT
01	0503019355	BEARING 6202 2RS1		01
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012853	GEAR		01

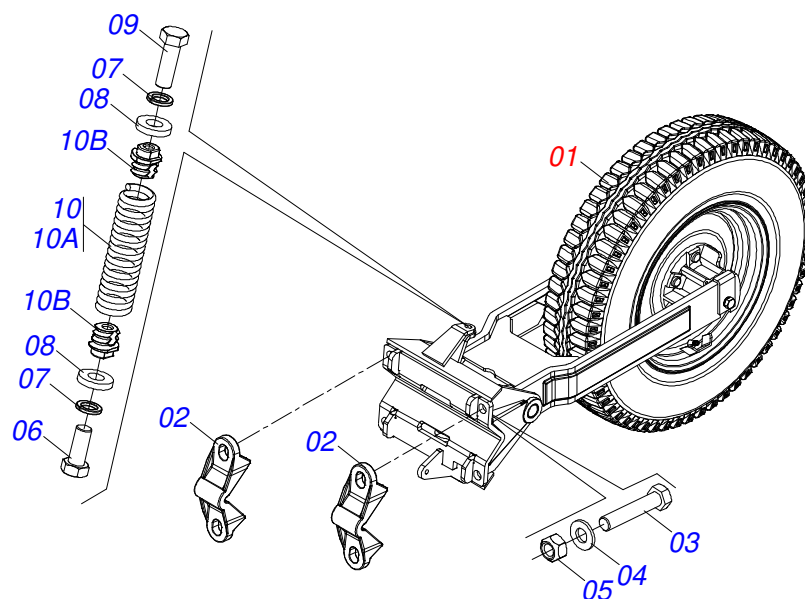


Item	Code	Description	See page	QT
01	0521058403	655 WHEELED BRACKET WITHOUT TRANSMISSION	19	01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
03	0503011119	7/8" X 6" BOLT		04
04	0501014251	FLAT WASHER		04
05	0503011254	7/8" HEX SELF ADJUSTING NUT		04
06	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
07	0503010027	5/8 SPRING WASHER		02
08	0551017715	FLAT WASHER		02
09	0503013030	5/8" X 3.1/4" BOLT		01
10	0511050681	TRACTION SPRING		01
10A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
10B	0561016062	SPRING HITCH		02

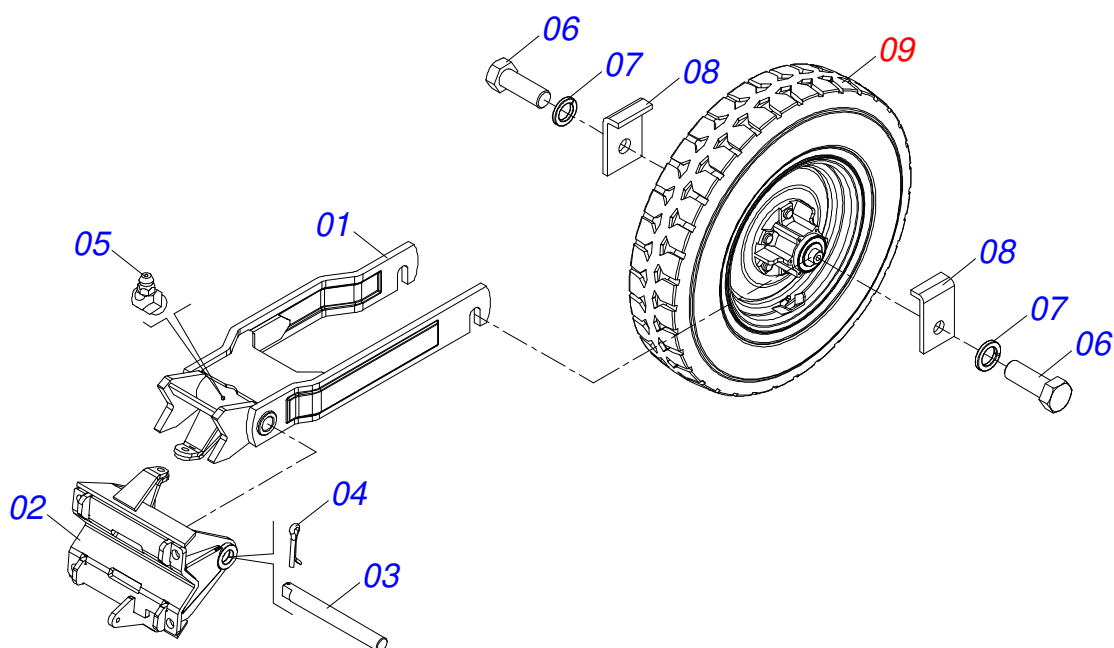


Item	Code	Description	See page	QT
01	0531062422	WHEEL ARM		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" SPLIT PIN		01
05	0503010003	1845 GREASE FITTING		01
06	0503018981	BOLT		02
07	0503010027	5/8 SPRING WASHER		02
08	0591010589	BODY LOCK WHEEL		02
09	0521058394	WHEEL WITH TIRE	20	01

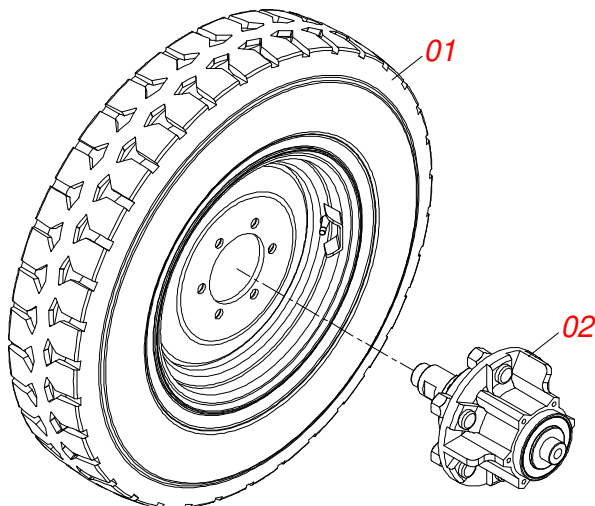

Item	Code	Description	See page	QT
01	0503063172	WHEEL	11	01
02	0521055244	WHEEL WITHOUT TRANSMISSION WITHOUT TIRE	21	01

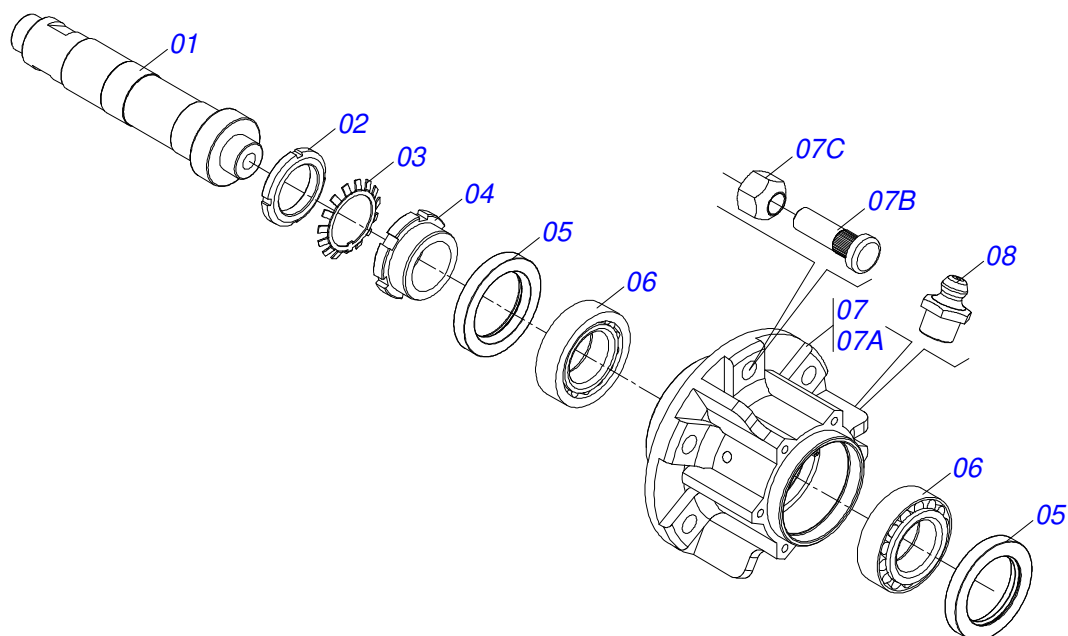


Item	Code	Description	See page	QT
01	0521012185	TRANSMISSION WHEEL AXLE		01
02	0503010330	KM 9 LOCKNUT		01
03	0503010329	LOCK WASHER		01
04	0511015949	LOCK NUT		01
05	0503010804	00547-B SEAL		02
06	0503019364	BEARING 25590/25523		02
07	0501110721	WHEEL HUB WITH SCREW / NUTS		01
07A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
07B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
07C	0503016516	5/8 UNF CONIC NUT		06
08	0503010002	1800 GREASE FITTING		01

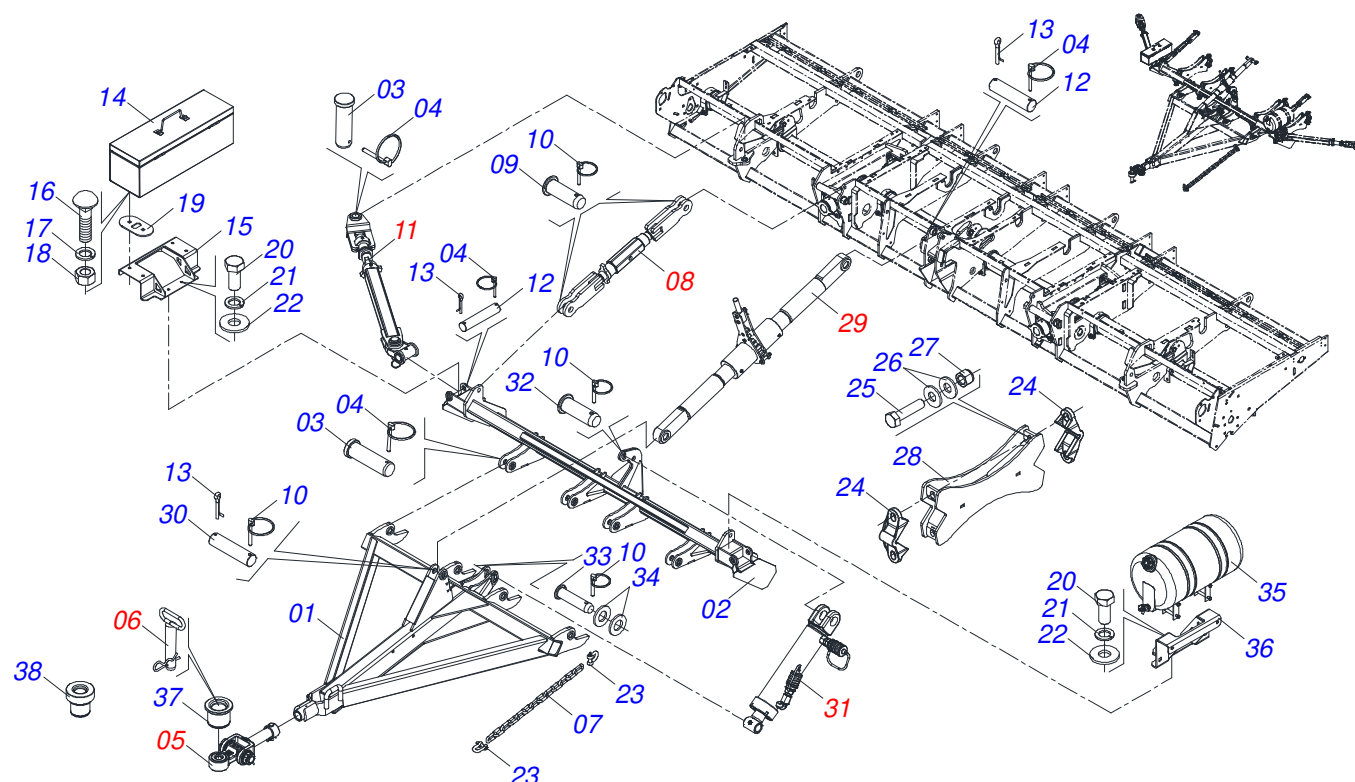


Item	Code	Description	See page	5750	5850	6850	7450
01	0521066289	5750/6350/6850 FRONT DRAWBAR		001	001	001	001
02	0521066290	INTERMEDIATE DRAWBAR - 5750/6850/7860/8160		001	000	001	000
02..	0521067151	INTERMEDIATE DRAWBAR - 5850/7960		000	001	000	000
02...	0521067075	INTERMEDIATE DRAWBAR 6450/7285/7350/7450/8460	-	000	000	000	001
03	0571019949	JUNCTION SHAFT		006	006	006	006
04	0503030119	LOCK PIN		010	010	010	010
05	0511055096	TRACTOR HITCH	23	001	001	001	001
06	0511053179	TRACTOR COUPLING SHAFT	24	001	001	001	001
07	0503014120	CHAIN		001	001	001	001
08	0521051614	TURNBUCKLE SIDE UPPER	25	002	002	002	002
09	0521010571	COUPLING SHAFT		004	004	004	004
10	0503030085	LOCK PIN		006	006	006	006
11	0521052754	LATERAL EXTENSOR 505/316		002	000	000	000
11.	0521051616	TURNBUCKLE SIDE 505/480		000	002	000	000
11..	0521050133	TURNBUCKLE SIDE 755/480	26	000	000	002	002
12	0571019951	JUNCTION SHAFT		003	003	003	003
13	0503010523	1/4" X 2" SPLIT PIN		004	004	004	004
14	0503034772	BOX		001	001	001	001
15	0521068652	TOOLS BOX SUPPORT		001	001	001	001
16	0501011643	3/8 X 1" BOLT		004	004	004	004
17	0503010025	3/8 SPRING WASHER		004	004	004	004
18	0503010026	3/8" NUT		004	004	004	004
19	0581017000	PLATE INTERMEDIARY		002	002	002	002
20	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		004	004	004	004
21	0503010025	3/8 SPRING WASHER		004	004	004	004
22	0501010984	10,50 X 27 X 3,00 FLAT WASHER		004	004	004	004
23	0503014321	CABLE STEEL SHACKLE		002	002	002	002
24	0502010584	CARRYING-WHEELS SUPPORT FIXER		008	008	008	008
25	0503016485	BOLT 3/4		016	016	016	016
26	0501010322	FLAT WASHER		032	032	032	032
27	0503010152	3/4" SELF LOCKING NUT		016	016	016	016


Item	Code	Description	See page	5750	5850	6850	7450
28	0521067716	FIXER TUBE		004	004	004	004
29	0511059237	3 POINT TURNBUCKLE	27	001	001	001	001
30	0571019950	COUPLING SHAFT		001	001	001	001
31	0521045756	HYDRAULIC CYLINDER	28	001	001	001	001
32	0521010779	31.75 X 95 COUPLING SHAFT		001	001	001	001
33	0521010581	0.9" X 4.9" COUPLING SHAFT		001	001	001	001
34	0531016049	FLAT WASHER		002	002	002	002
35	0503014820	BLACK WATER RESERVOIR		001	001	001	001
36	0521068651	SUPPORT BOX		001	001	001	001
37	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		000	000	001	001
38	0501212237	HITCH SLEEVE ARTICULATED 85 X 35 MM		001	001	001	001

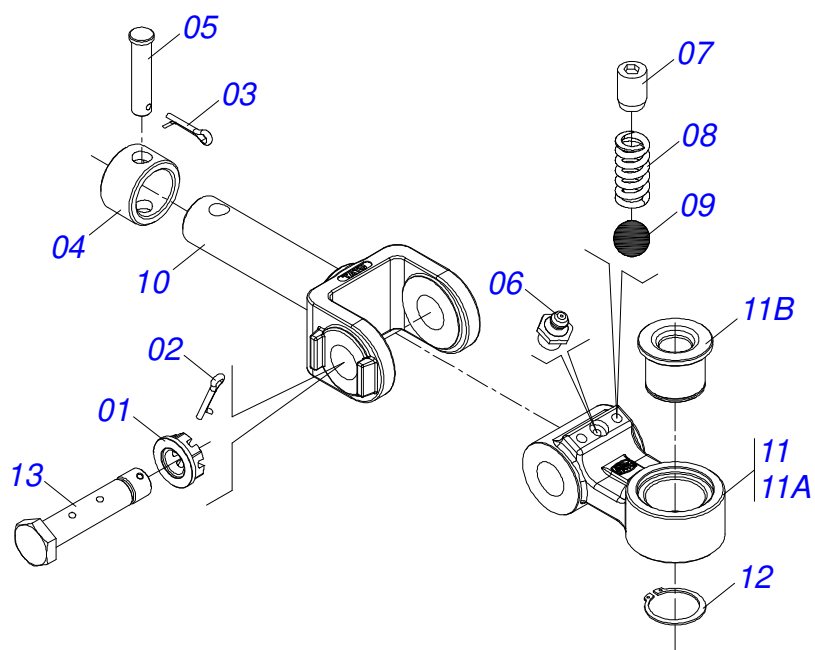


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	LEFT COMPRESSION SPRING		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

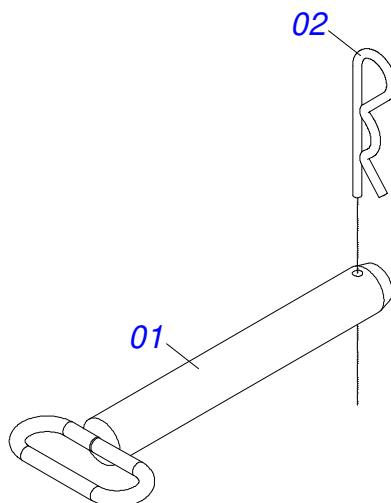


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

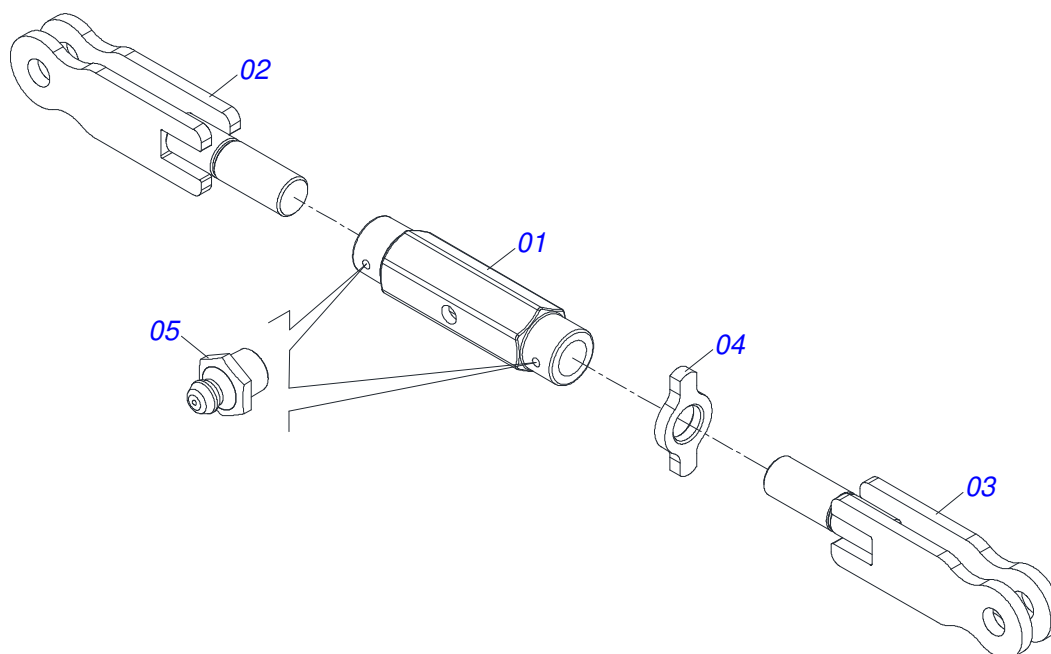


Item	Code	Description	See page	QT
01	0502011195	ADJUSTMENT NUT BODY		01
02	0521068096	EXTENSOR R.1.1 / 2 UNC RIGHT		01
03	0521068095	EXTENSOR R.1.1/2 UNC LEFT		01
04	0541018672	COUNTERNUT		01
05	0503010002	1800 GREASE FITTING		02

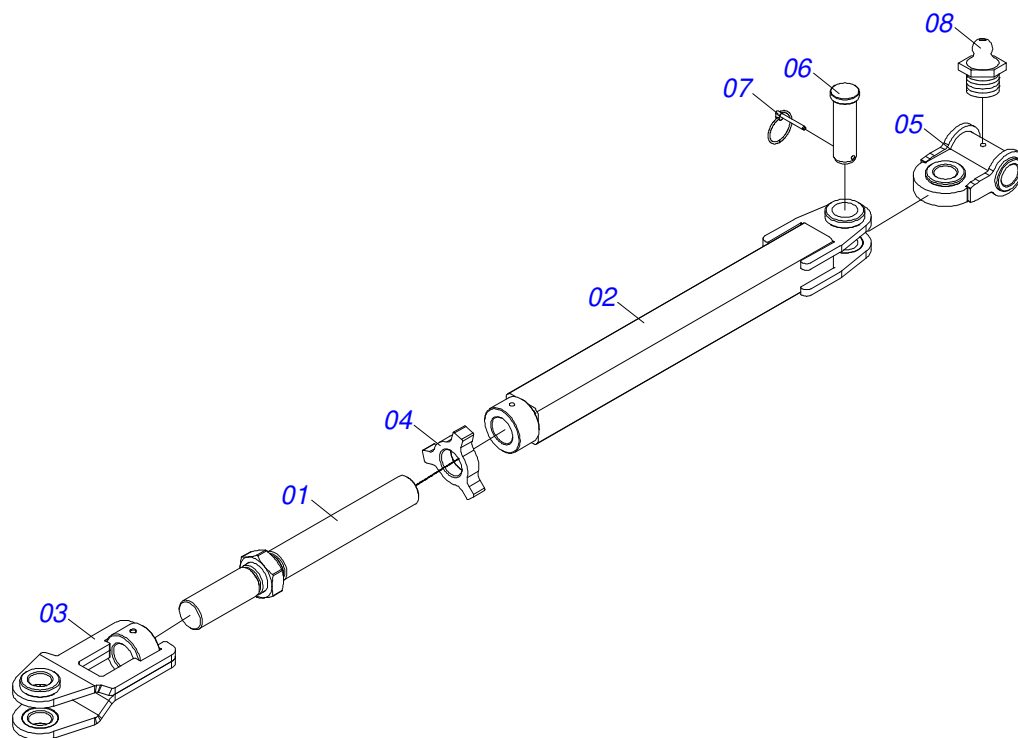


Item	Code	Description	See page	QT
01	0521065193	TURNBUCKLE AXLE		01
02	0521067392	FIXED BRACKET		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0521067393	EXTERNAL SIDE EAR		01
06	0571019949	JUNCTION SHAFT		01
07	0503030119	LOCK PIN		01
08	0503010002	1800 GREASE FITTING		03

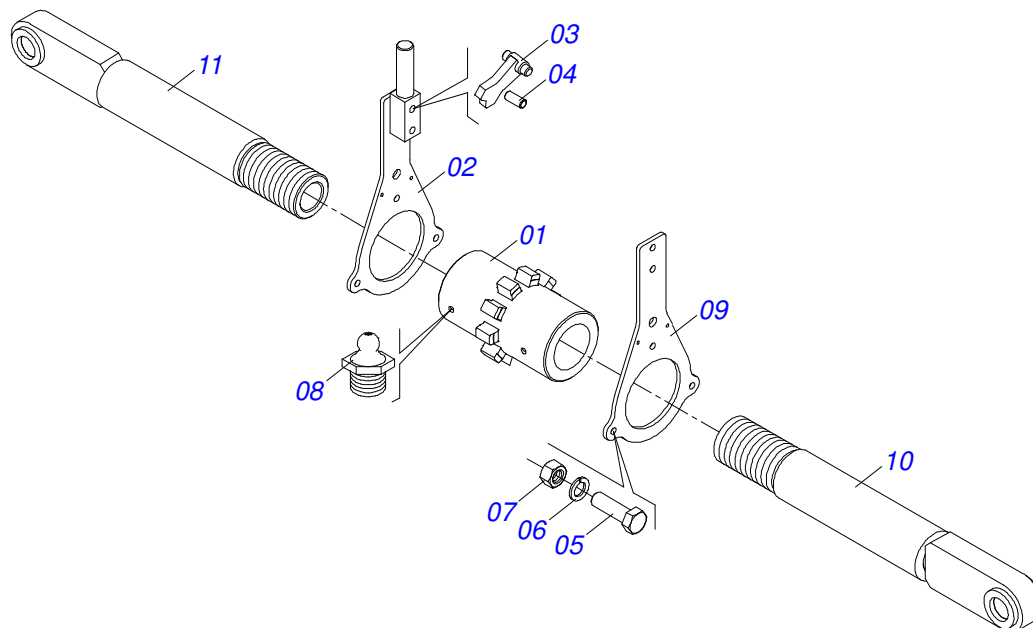


Item	Code	Description	See page	QT
01	0502012783	STABILIZER BODY GREATER		01
02	0511061880	SIDE RIGHT RATCHET		01
03	0511061881	RATCHET FOLLOWER		01
04	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
05	0503011179	3/8" X 2-1/4" BOLT		05
06	0503010025	3/8 SPRING WASHER		05
07	0503010026	3/8" NUT		05
08	0503010002	1800 GREASE FITTING		02
09	0531010264	SIDE RATCHET		01
10	0521066919	3-POINT EXTENSOR RIGHT FUSE		01
11	0521066337	LEFT EXTENSOR 3 SPIKE		01

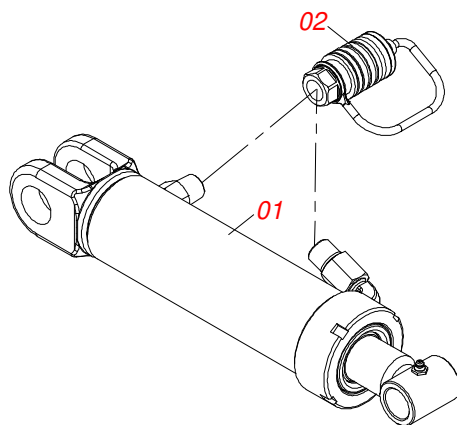


Item	Code	Description	See page	QT
01	0511057653	HYDRAULIC CYLINDER	29	01
02	0501053835	FEMALE QUICK COUPLER	30	02

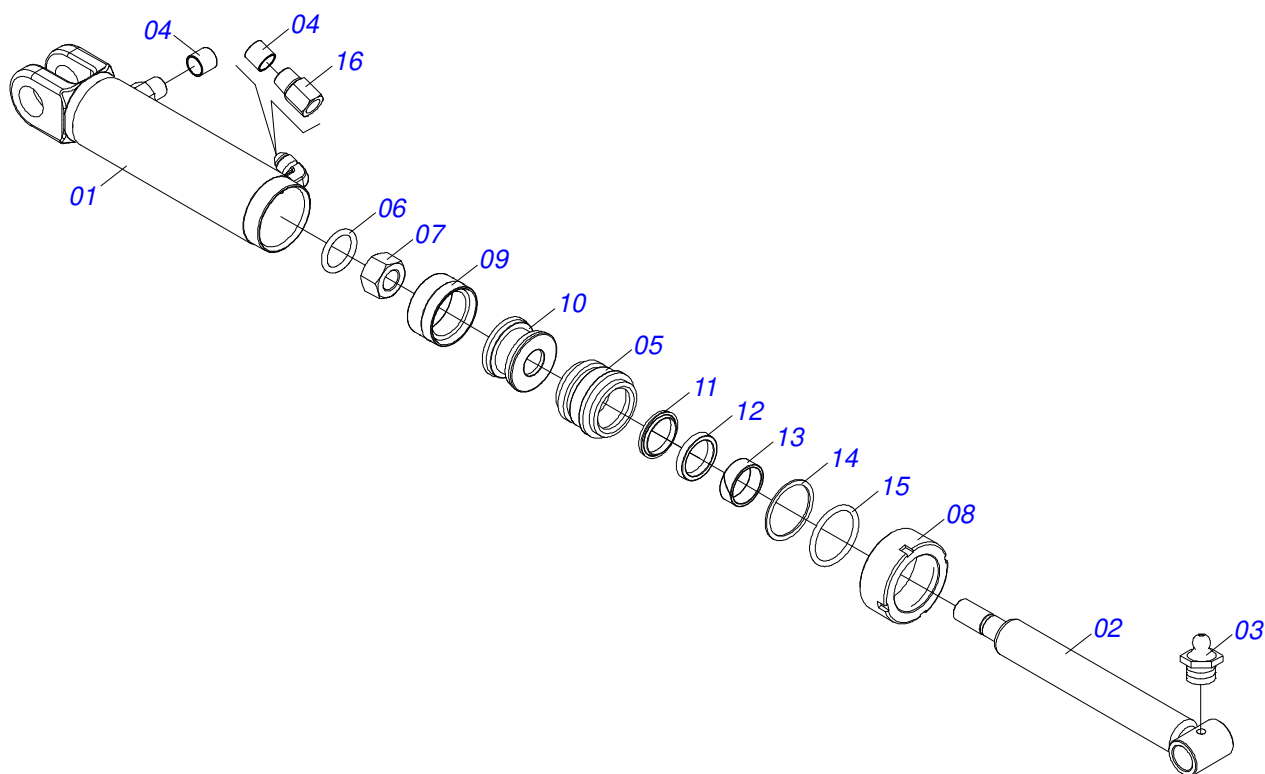

Item	Code	Description	See page	QT
01	0521066550	CASE		01
02	0521066551	EXTENSION DRAWBAR		01
03	0503010002	1800 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010669	EMBOLUS 63.50 X 40 USAP		01
06	0503018005	RING		01
07	0503010558	7/8" NUT		01
08	0502010471	63,50 MOBILE CAP		01
09	0503011058	8-330 BACK-UP RING		01
10	0571019866	RING SUPPORT		01
11	0503010163	D-1500 SCRAPER RING		01
12	0503018004	RING		01
13	0503010161	2-330 N 3006 9B O'RING		01
14	0503018003	GASKET		01
15	0503010605	O'RING		01
16	0581010652	JIC ADAPTER		01

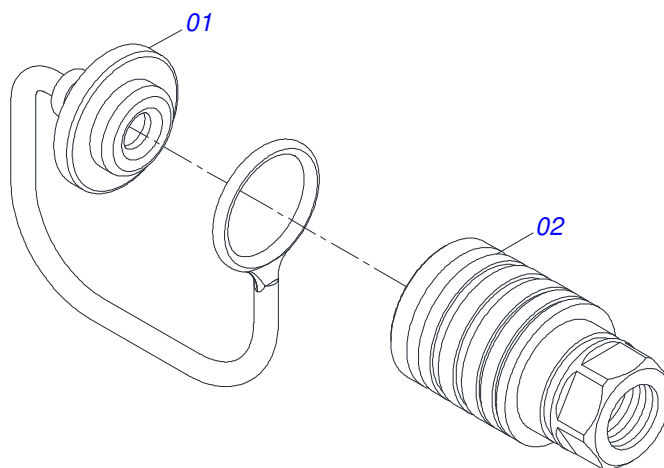


Item	Code	Description	See page	QT
01	0503011883	QUICK CONNECTION COVER		01
02	0503011628	FEMALE QUICK COUPLER		01

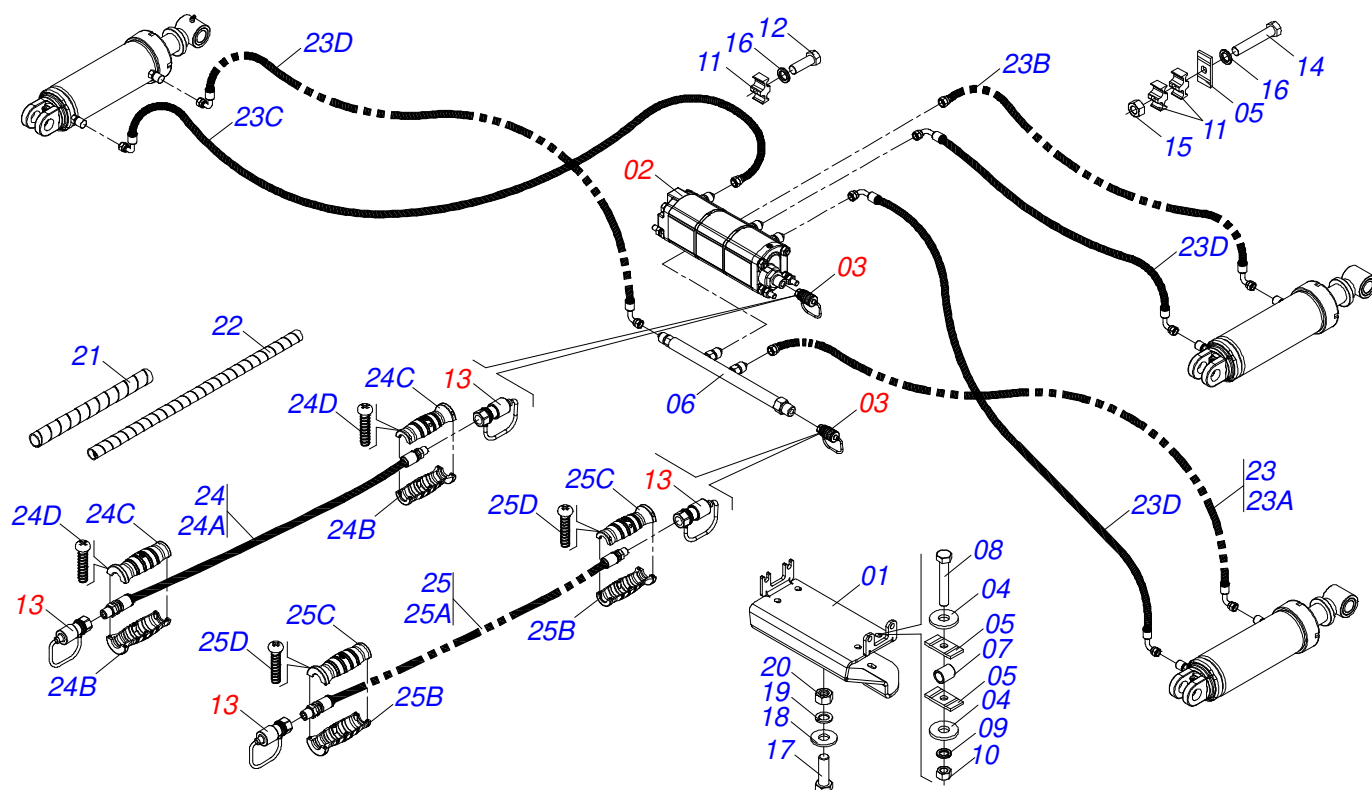


Item	Code	Description	See page	QT
01	0591019605	FLOW DIVIDER VALVE SUPPORT		01
01.	0591019604	VALVE SUPPORT		01
02	0511059290	VALVE ASSEMBLY	32	01
03	0501053835	FEMALE QUICK COUPLER	30	02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		04
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8 SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0502012702	BODY SUPPORT CLAMP		12
12	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
13	0501053834	MALE QUICK COUPLER	33	04
14	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
15	0503010244	7/16" NUT		04
16	0503010180	7/16" SPRING WASHER		08
17	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
18	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
19	0503010019	1/2" SPRING WASHER		02
20	0503010060	1/2 UNC G.5 ZN HEX NUT		02
21	0571017773	SPRING PROTECTION PLASTIC HOSE 3/4		02
22	0571017774	SPRING PROTECTION QUICK HOSE		01
23	0511059418	HYDRAULIC SYSTEM HOSE ASSEMBLY		01
23A	0501080406	3/8" X 23" TR-TC HOSE		01
23B	0501080150	3/8 X 800 TR-TC HOSE		01
23C	0501081930	HOSE		01
23D	0501081646	TC-TC HOSE ASSY		03
24	0521052484	HOSE 1/2 X 4122 TM-TM BLACK / RED		01
24A	0501080881	HOSE		01
24B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02


Item	Code	Description	See page	QT
24C	0503034495	HYDRAULIC HOSE GRIP (RED)		02
24D	0503018952	PLASTIC BOLT		12
25	0521052485	HOSE 1/2 X 4122 TM-TM BLACK / BLUE		01
25A	0501080881	HOSE		01
25B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
25C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02
25D	0503018952	PLASTIC BOLT		12

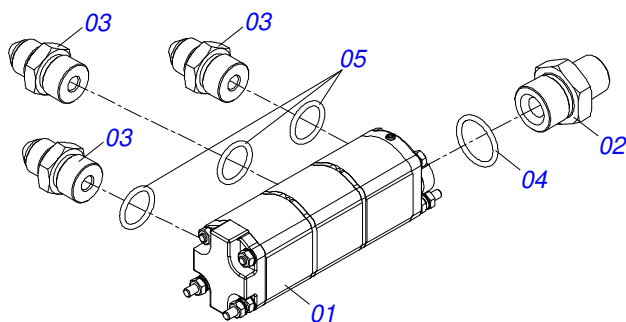

Item	Code	Description	See page	QT
01	0503016524	DIVIDER VALVE		01
02	0581011593	NIPPLE R.1.1/16 UN		01
03	0511010111	7/8" NIPPLE		03
04	0503011109	2-119 N 3006-9B O'RING		01
05	0503010045	O'RING		03

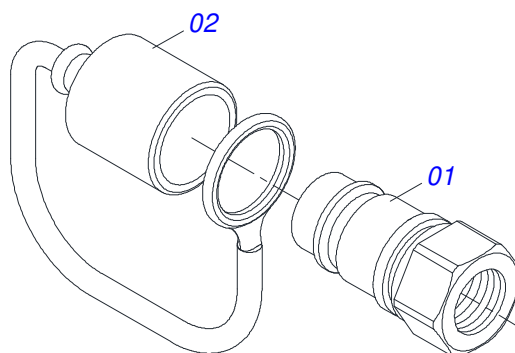

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

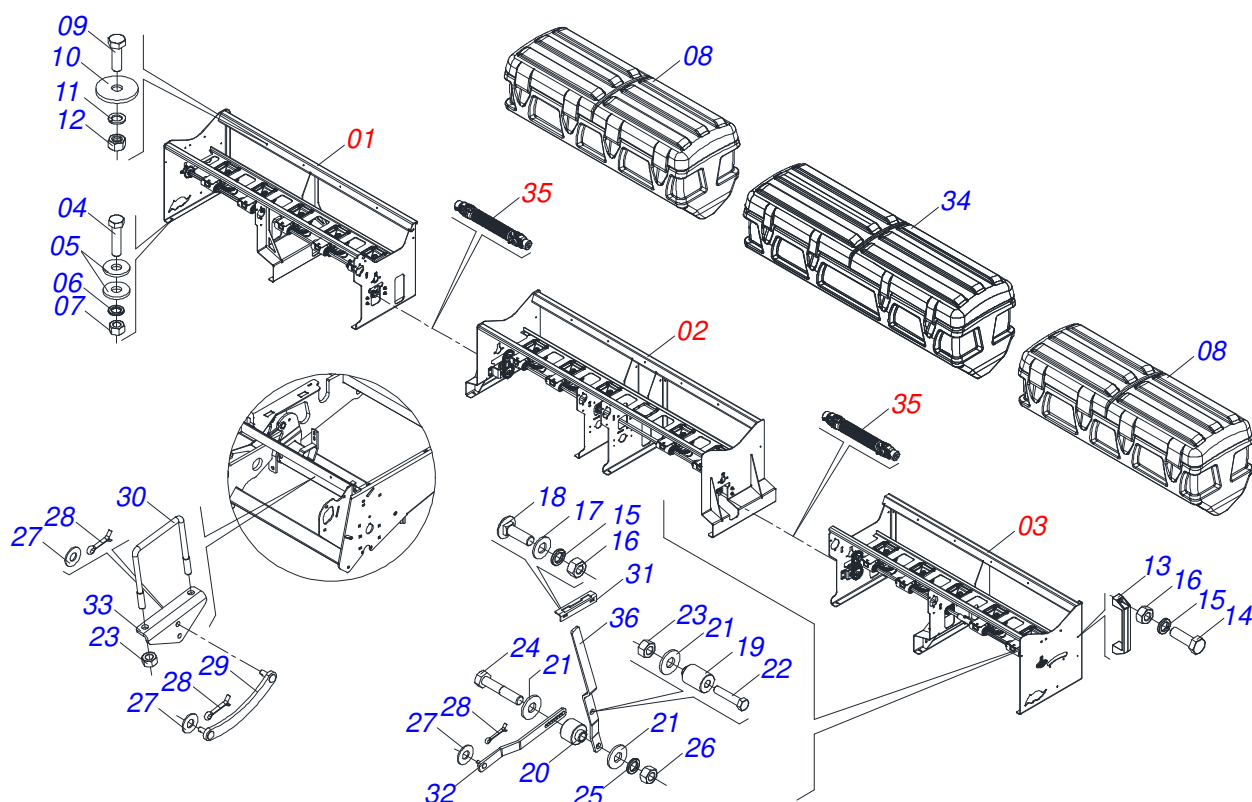


Item	Code	Description	See page	QT
01	0531056259	RIGHT HOPPER SUPPORT WITH FERTILIZER 35 METERING	01	01
02	0531056260	CENTRAL HOPPER SUPPORT WITH FERTILIZER 36 METERING	01	01
03	0531056262	LEFT HOPPER SUPPORT WITH FERTILIZER 37 METERING	01	01
04	0503010849	3/8" X 1-1/2" BOLT		20
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
06	0503010025	3/8 SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0503062391	FERTILIZER HOPPER		02
09	0503013751	3/8 UNC X 1.1/4 BOLT		26
10	0571019051	FIXER HOPPER WASHER		26
11	0503012535	3/8" SPRING WASHER		26
12	0503012531	3/8" INOX NUT		26
13	0503011957	NYLON HANDLE		02
14	0503010371	5/16" X 1" BOLT		04
15	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
16	0503010337	5/16" NUT		08
17	0501010694	FLAT WASHER		04
18	0503011953	5/16" X 1" BOLT		04
19	0551019168	SLEEVE		02
20	0551019167	SLEEVE UNION		02
21	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
22	0503010479	BOLT		02
23	0503011336	1/2" HEX SELF ADJUSTING NUT		06
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		02
26	0503010060	1/2 UNC G.5 ZN HEX NUT		02
27	0501013518	FLAT WASHER		06
28	0503010140	1/8" X 3/4" COTTERPIN		06
29	0511069678	LH LOWER LEVER		02




**PST TRIO FLEX TITANIUM - FRAME 7450 - CSU - (FROM
7450 FERTILIZER HOPPER SET**

Page 34
0531056205


Item	Code	Description	See page	QT
30	0561016468	FASTENER		02
31	0581012605	GEAR BOX LEVER LOCK		02
32	0521061741	ININTER LEVER		02
33	0551019159	LEVER FIXER BODY		02
34	0503062589	FERTILIZER HOPPER MOUNTED		01
35	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	53	02
36	0501215701	ARM/DISARM LEVER		02

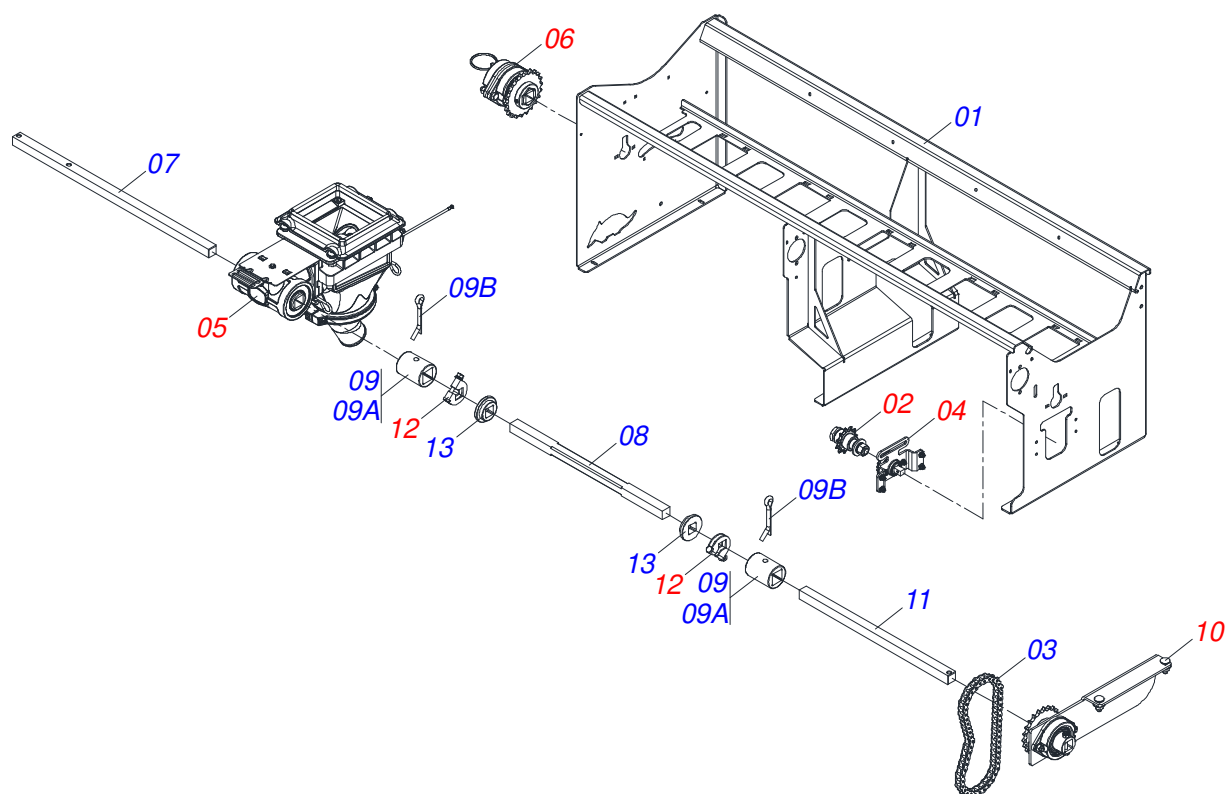


Item	Code	Description	See page	QT
01	0531064546	RIGHT FERTILIZER HOPPER SUPPORT		01
02	0531055898	CHAIN TIGHTENER	44	01
03	0503012761	40-1 CHAIN X 52 LINK + REDUCTION		01
04	0531055897	INTERMEDIATE TRANSMISSION BEARING	45	01
05	0531055319	ALPHA II FERTILIZER METERING	39	05
06	0531057911	22Z GEAR SIDE BEARING ASSEMBLY	48	01
07	0501310862	3/4 X 503 AXLE		01
08	0501218487	3/4 X 390 AXLE		03
09	0531057908	SLEEVE 1/4 X 2		04
09A	0502013069	SLEEVE 21 X 38 X 50		01
09B	0503010010	1/4" X 2.1/2" COTTERPIN		01
10	0531059737	RIGHT BEARING WITH ALPHA GEAR	50	01
11	0501311330	3/4 X 383 AXLE WITH HOLE		01
12	0501053788	3/4" SQUARE AXLE FASTENER	38	02
13	0503031527	AGRICULTURAL BEARING		02

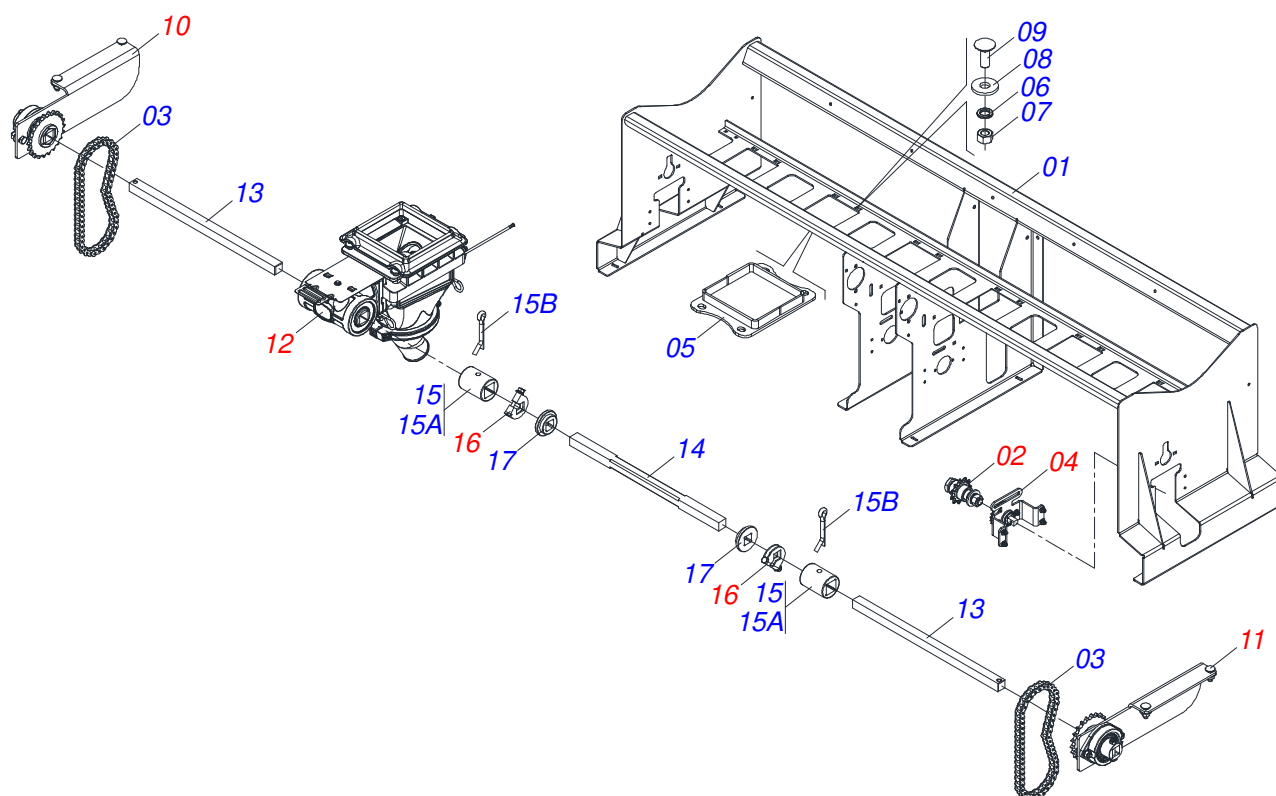


Item	Code	Description	See page	QT
01	0531064554	CENTRAL FERTILIZER HOPPER SUPPORT		01
02	0531055898	CHAIN TIGHTENER	44	02
03	0503012761	40-1 CHAIN X 52 LINK + REDUCTION		02
04	0531055896	80 INTERMEDIATE TRANSMISSION BEARING ASSEMBLED	47	02
05	0511062163	FERTILIZER BEAM LOWER COVER		01
06	0503010025	3/8 SPRING WASHER		04
07	0503010026	3/8" NUT		04
08	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
09	0501011643	3/8 X 1" BOLT		04
10	0531059738	LEFT EARLY BEARING	51	01
11	0531059737	RIGHT BEARING WITH ALPHA GEAR	50	01
12	0531055319	ALPHA II FERTILIZER METERING	39	05
13	0501311330	3/4 X 383 AXLE WITH HOLE		02
14	0501218487	3/4 X 390 AXLE		03
15	0531057908	SLEEVE 1/4 X 2		03
15A	0502013069	SLEEVE 21 X 38 X 50		01
15B	0503010010	1/4" X 2.1/2" COTTERPIN		01
16	0501053788	3/4" SQUARE AXLE FASTENER	38	04
17	0503031527	AGRICULTURAL BEARING		04

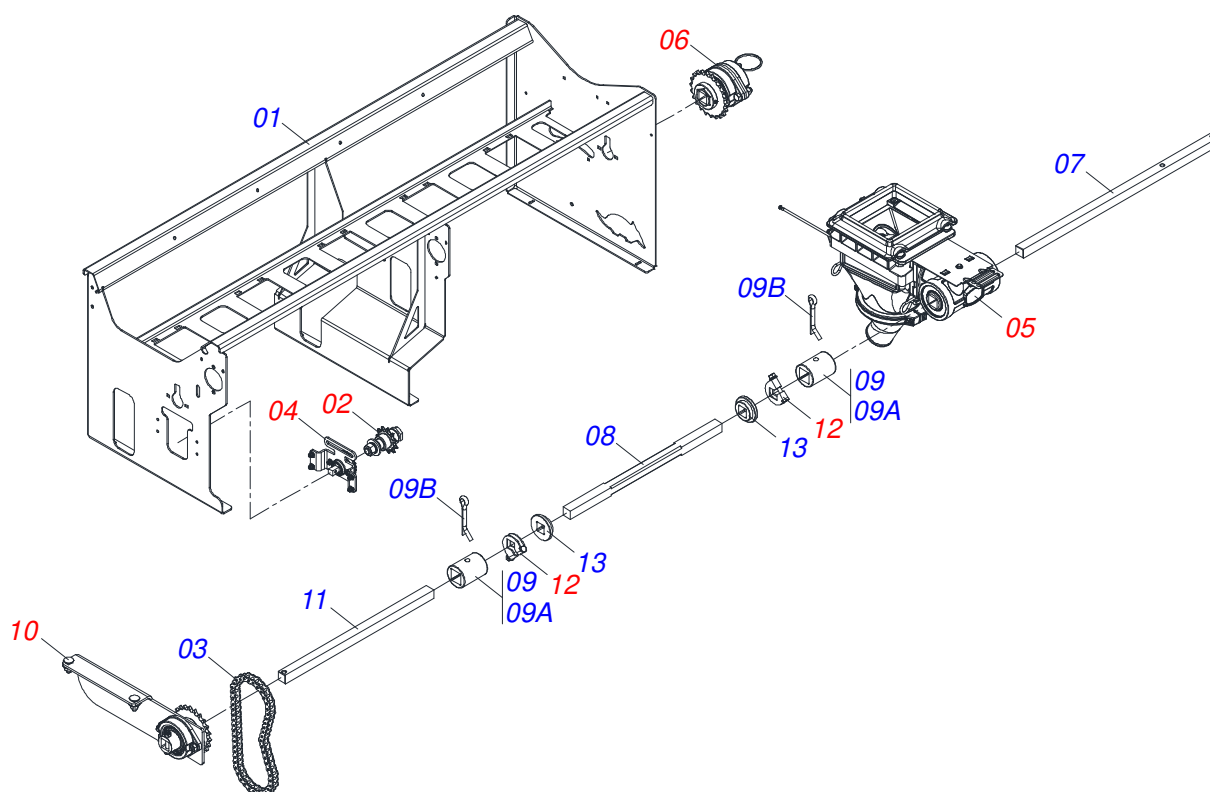


Item	Code	Description	See page	QT
01	0531064545	LEFT FERTILIZER HOPPER SUPPORT		01
02	0531055898	CHAIN TIGHTENER	44	01
03	0503012761	40-1 CHAIN X 52 LINK + REDUCTION		01
04	0531055897	INTERMEDIATE TRANSMISSION BEARING	45	01
05	0531055319	ALPHA II FERTILIZER METERING	39	05
06	0531057911	22Z GEAR SIDE BEARING ASSEMBLY	48	01
07	0501310862	3/4 X 503 AXLE		01
08	0501218487	3/4 X 390 AXLE		03
09	0531057908	SLEEVE 1/4 X 2		04
09A	0502013069	SLEEVE 21 X 38 X 50		01
09B	0503010010	1/4" X 2.1/2" COTTERPIN		01
10	0531059738	LEFT EARLY BEARING	51	01
11	0501311330	3/4 X 383 AXLE WITH HOLE		01
12	0501053788	3/4" SQUARE AXLE FASTENER	38	02
13	0503031527	AGRICULTURAL BEARING		02

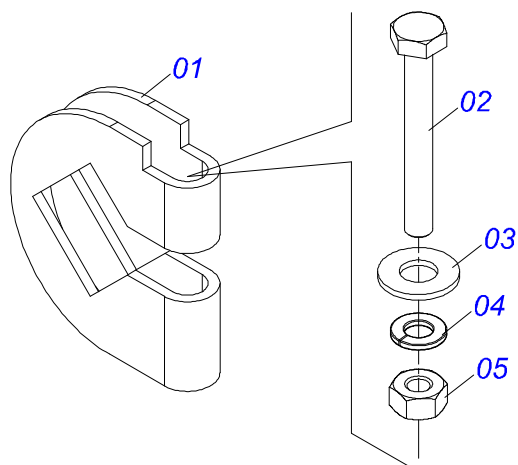


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

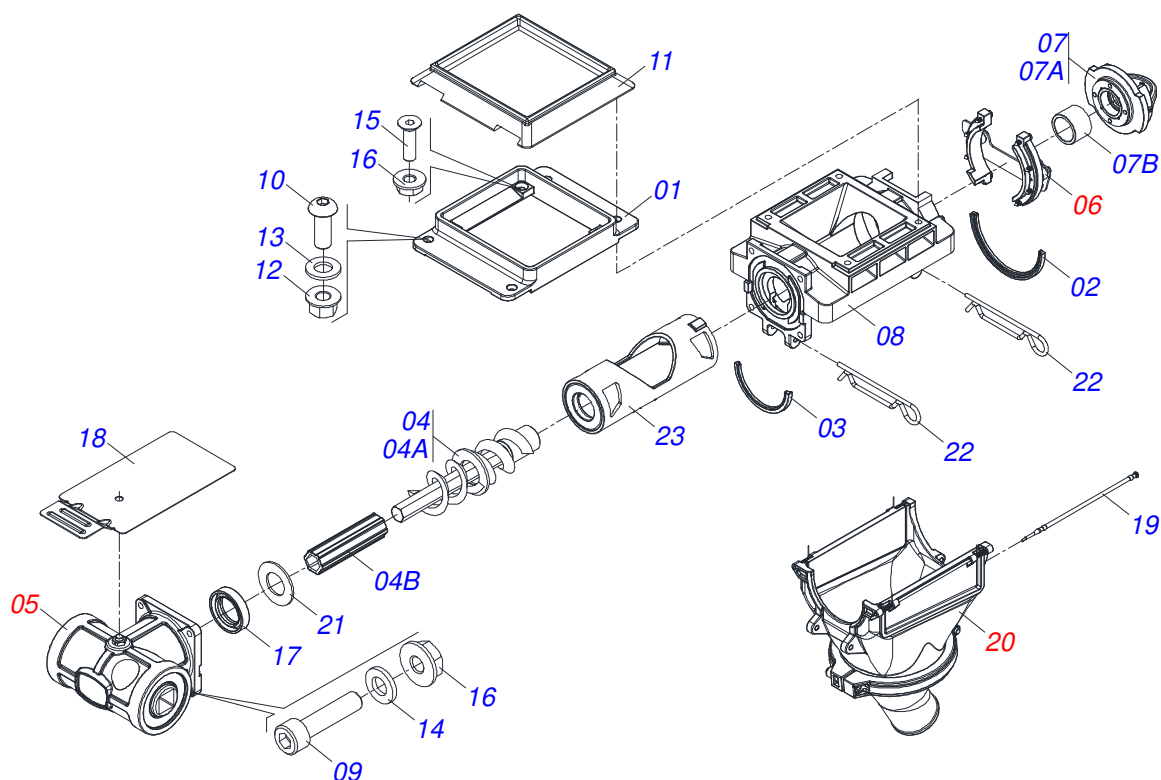


Item	Code	Description	See page	QT
01	0503035913	METERING BODY FIXING ADAPTER		01
02	0503035911	REAR COLLECTOR SEAL		01
03	0503035912	FRONT COLLECTOR SEAL		01
04	0531055518	WORM THREAD ASSEMBLED		01
04A	0531064265	WORM THREAD		01
04B	0503035859	SUPPORT SLEEVE		01
05	0531055863	ASSY TRANSMISSION HUB	40	01
06	0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	41	01
07	0501111134	LID WITH ALPHA FERTILIZER METERING GUIDE SLEEVE		01
07A	0503063799	LID WITH FERTILIZER METERING WASHER ALPHA		01
07B	0503035822	GUIDE SLEEVE SPRING CONDUCTOR		01
08	0501214337	FERTILIZER METERING BOX		01
09	0513011169	ALLEN SCREW 1/4 UNC X 1 CCSI STAINLESS STEEL		04
10	0513011172	ALLEN SCREW 3/8 UNC X 1 CASI STAINLESS STEEL		04
11	0503035931	FERTILIZER METERING SEAL		01
12	0513011173	NUT 3/8 UNC X 1		04
13	0513011174	FLAT WASHER 10.50 X 20 X 2.00 STAINLESS STEEL		05
14	0513011167	FLAT WASHER 6.4 X 12 X 1.60 STAINLESS STEEL		04
15	0513011170	ALLEN SCREW 1/4 UNC X 7/8 CCSI STAINLESS STEEL		04
16	0513011171	1/4 NC HEX NUT		08
17	0503036181	30 X 47 X 6.50 SEAL SUPPLEMENT		01
18	0501310211	FRONT LID		01
19	0503036177	LID CORD		01
20	0531059139	ASSY COLLECTOR	42	01
21	0501310274	FLAT WASHER 46.10 X 32 X 0.80		01
22	0503035797	FRONT COLLECTOR FIXER		02
23	0501111195	GRANULATED FERTILIZER COATING		01

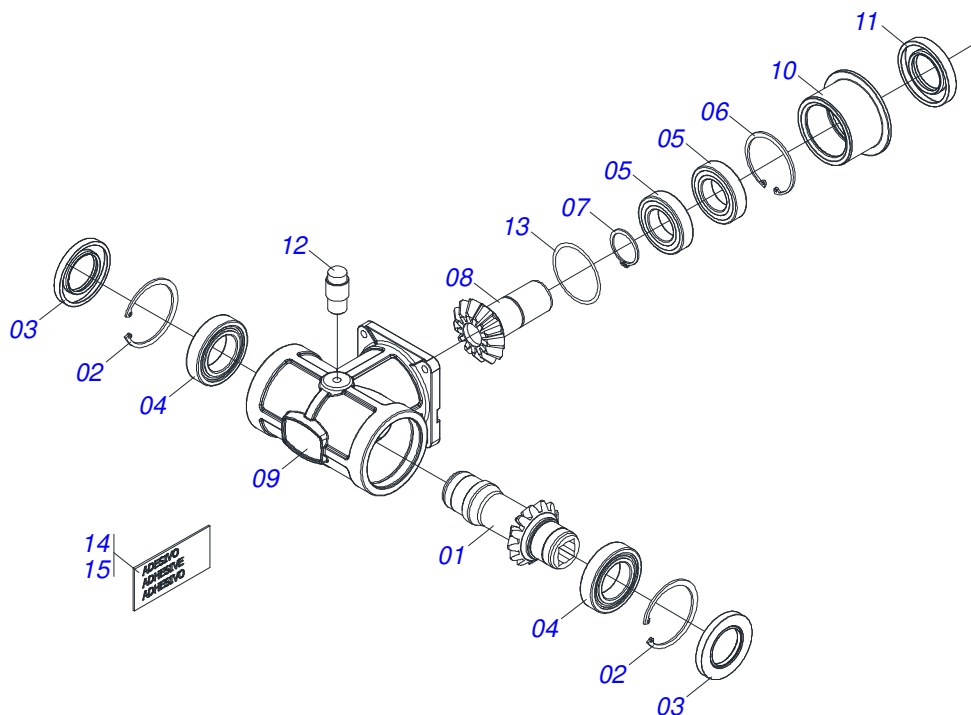


Item	Code	Description	See page	QT
01	0502013056	CONICAL PINION MOTOR 13Z ALPHA FERTILIZER METERING		01
02	0503011800	SEAL RING		02
03	0513010740	RETAINER 62 X 35 X 7 BRG 7159		02
04	0503016065	ROLLER BEARING		02
05	0503019373	6006 2RS1 NATIONAL BEARING		02
06	0503012858	502075 CLAMPING RING (FOR HOLE)		01
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01
08	0501111141	GEAR WITH ALPHA FERTILIZER METERING CAP		01
09	0501215105	METERING TRANSMISSION HUB		01
10	0501215104	TRANSMISSION HUB SLEEVE		01
11	0513011272	SEAL 7435-BRG 30 X 55 X 8.00MM		01
12	0501219613	FIXER BREATHER COVER		01
13	0513011248	RING RING 62.00 X 1.50		01
14	0503036071	TATU LOGO ADHESIVE LABEL 41.5 X 29		01
15	0503035316	LUBRICATED POINTS ADHESIVE LABEL		01

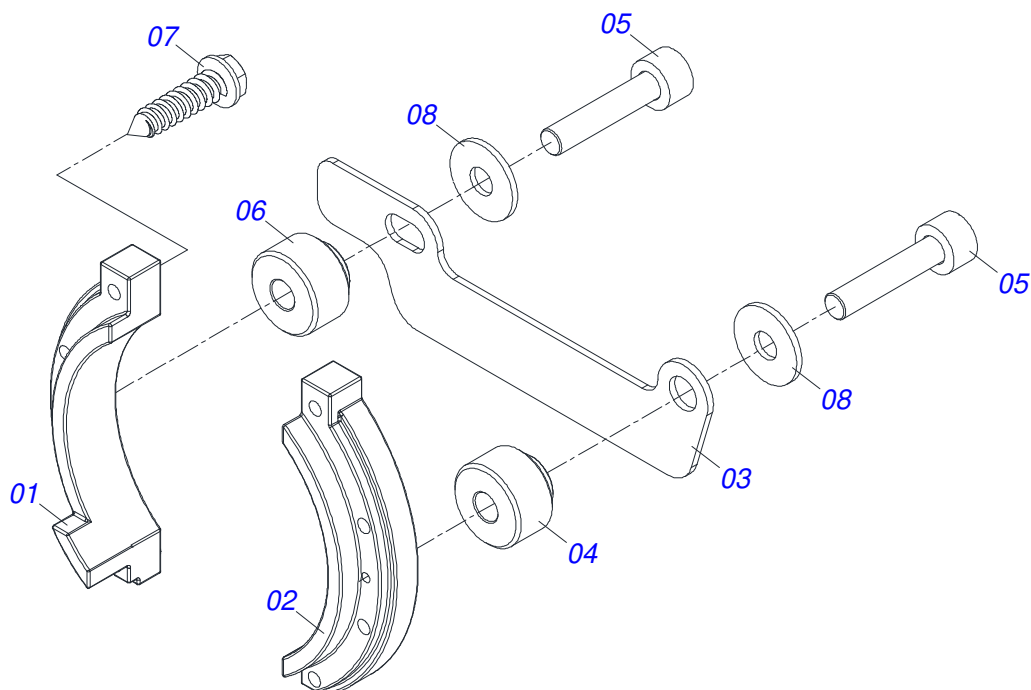


Item	Code	Description	See page	QT
01	0503035915	RIGHT GUIDE DOSING COVER		01
02	0503035916	LEFT GUIDE DISPENSER COVER		01
03	0501310245	ALPHA FERTILIZER DISPENSER COVER LATCH		01
04	0501310247	LEFT SAFETY LOCK SLEEVE		01
05	0513011249	ALLEN SCREW M4 X 20 CCSI STAINLESS STEEL		02
06	0501310246	RIGHT SAFETY LOCK SLEEVE		01
07	0513011507	FLANGED HEX SCREW AT 3.5 X 19 STAINLESS STEEL		08
08	0513011518	FLAT WASHER M4 STAINLESS STEEL AISI 304 4.3 X 12 X 1 MM		01

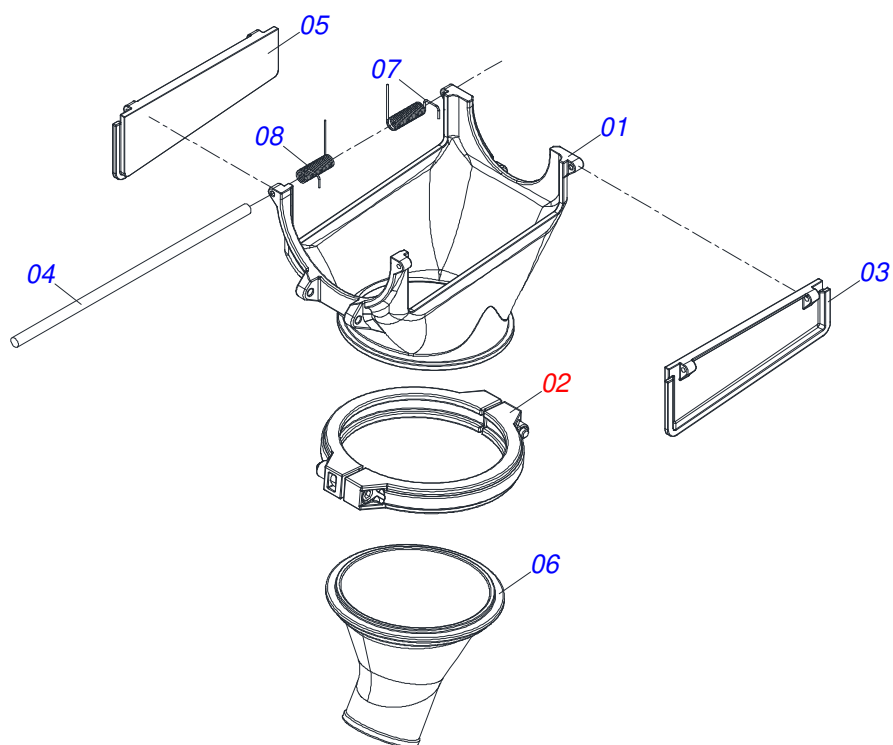


Item	Code	Description	See page	QT
01	0503036178	DISPENSER SIDE COVER COLLECTOR		01
02	0531055273	ALPHA FERTILIZER METERING CLAMP	43	01
03	0503036166	DISPENSER RIGHT SIDE COVER		01
04	0501219838	COLLECTOR SIDE LID AXLE		02
05	0503036167	DISPENSER LEFT SIDE COVER		01
06	0503036180	ALPHA FERTILIZER DOSING NOZZLE 50MM		01
07	0503036203	RIGHT TORSION SPRING DISPENSER SIDE COVER		02
08	0503036202	LEFT TORSION SPRING SIDE COVER		02

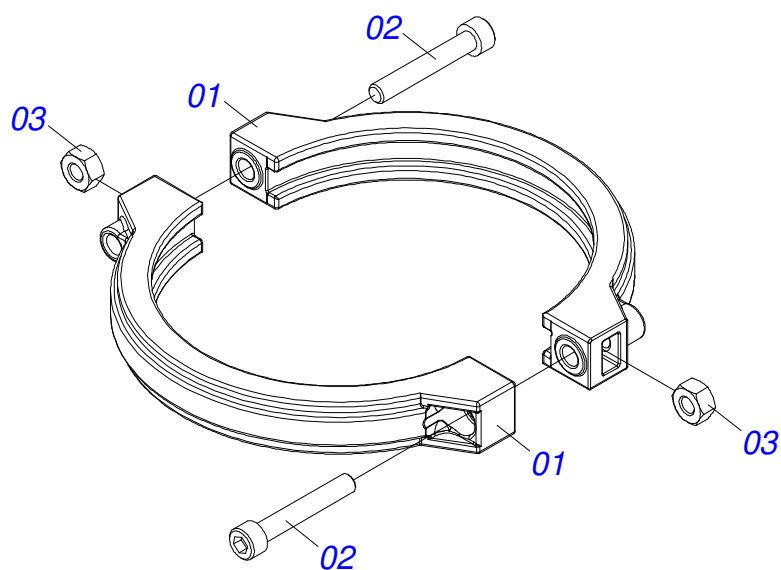


Item	Code	Description	See page	QT
01	0503035812	BODY CLAMP COLLECTOR FERTILIZER METERING ALPHA		02
02	0513010691	ALLEN SCREW 1/4 UNC X 1.1/2 CCSI INOX		02
03	0503012118	1/4" INOX NUT		02

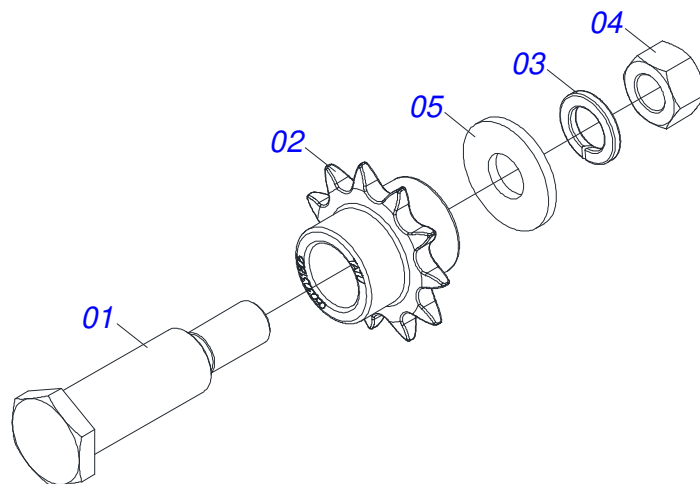


Item	Code	Description	See page	QT
01	0501215149	CHAIN STRETCH AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01

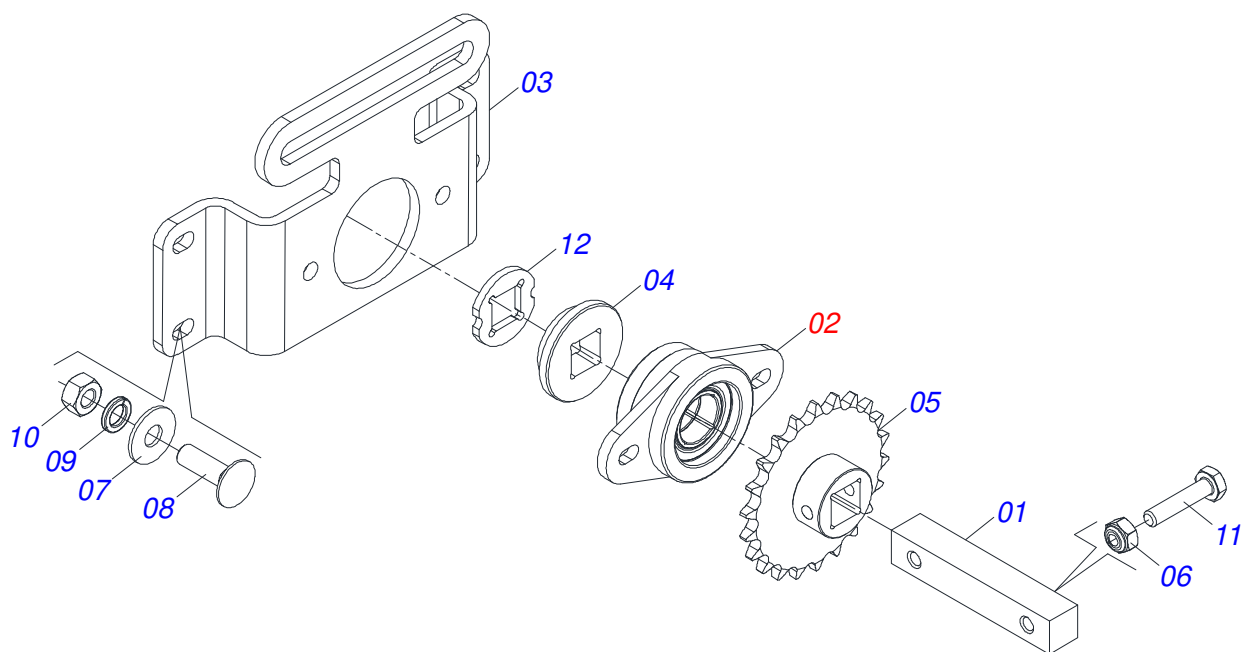


Item	Code	Description	See page	QT
01	0501215144	3/4 X 105 QUADRATE AXLE		01
02	0501056451	BEARING	46	01
03	0501215142	INTERMEDIATE TRANSMISSION BEARING BODY		01
04	0503031527	AGRICULTURAL BEARING		01
05	0521063187	GEAR 22Z P.1/2 (Q.19,2)		01
06	0503012880	1/4" UNC SELF ADJUSTING NUT		01
07	0521011039	FLAT WASHER		06
08	0503011953	5/16" X 1" BOLT		06
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
10	0503010337	5/16" NUT		06
11	0503010733	1/4" X 1-3/4" BOLT		01
12	0521014167	CONE LOCK		01

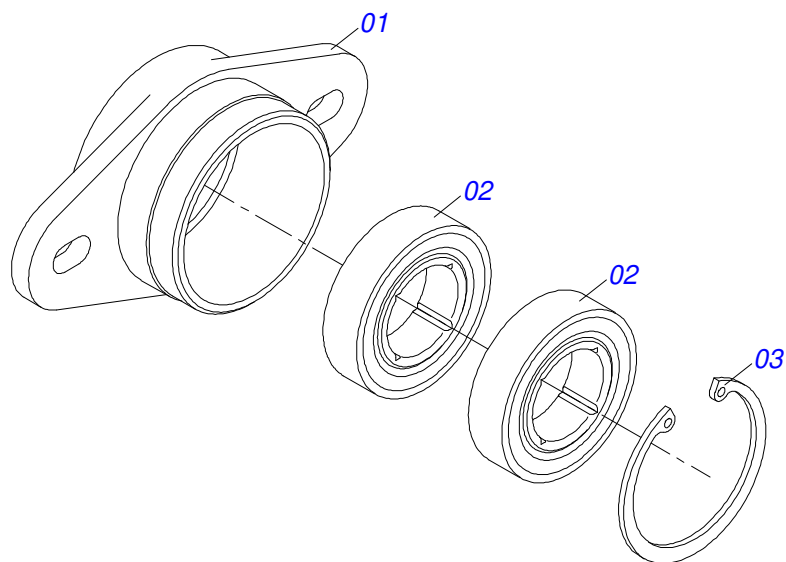


Item	Code	Description	See page	QT
01	0502011971	HOUSING WITH DOUBLE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011105	SEAL RING		01

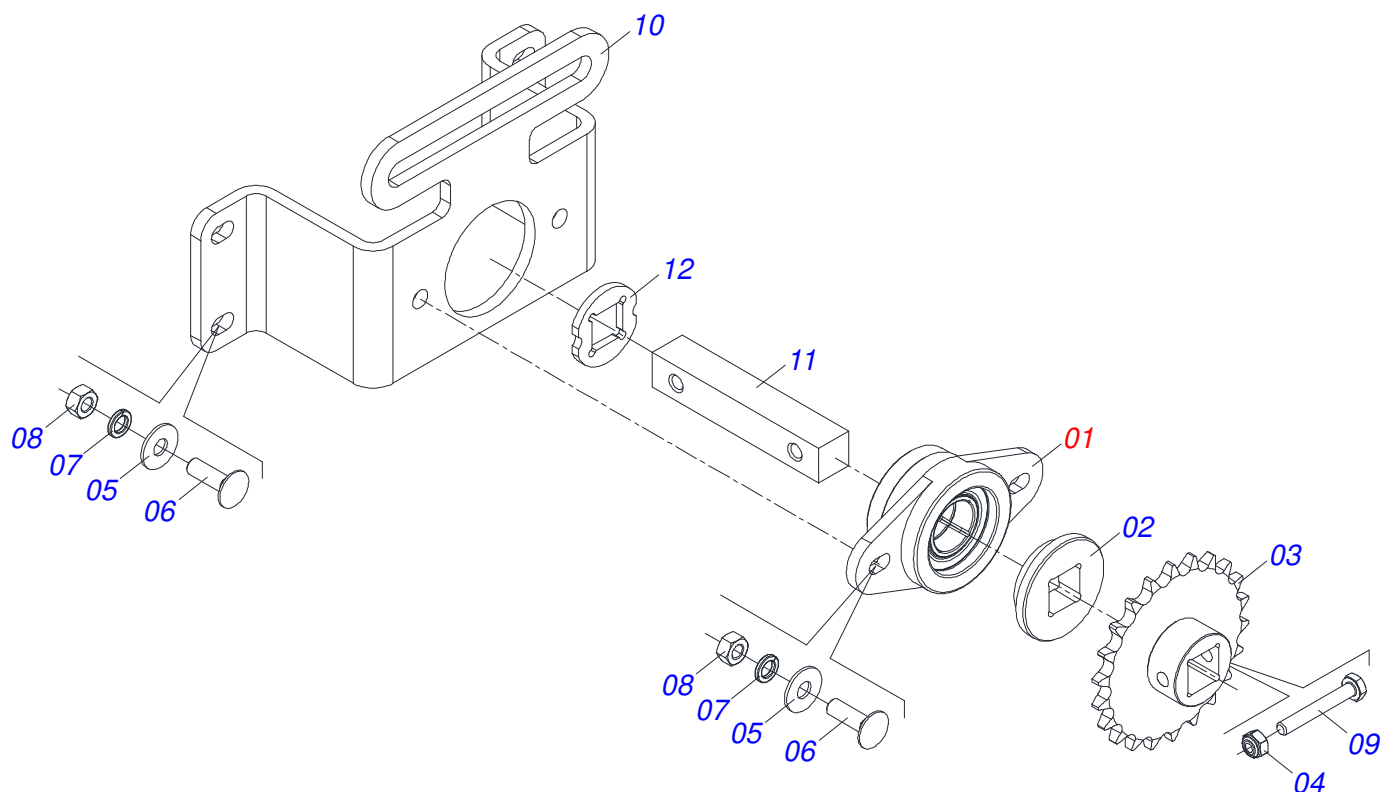


Item	Code	Description	See page	QT
01	0501056451	BEARING	46	01
02	0503031527	AGRICULTURAL BEARING		01
03	0521063187	GEAR 22Z P.1/2 (Q.19,2)		01
04	0503012880	1/4" UNC SELF ADJUSTING NUT		01
05	0521011039	FLAT WASHER		06
06	0503011953	5/16" X 1" BOLT		06
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
08	0503010337	5/16" NUT		06
09	0503010733	1/4" X 1-3/4" BOLT		01
10	0501215084	80 INTERMEDIATE TRANSMISSION BEARING BODY		01
11	0501215144	3/4 X 105 QUADRATE AXLE		01
12	0521014167	CONE LOCK		01

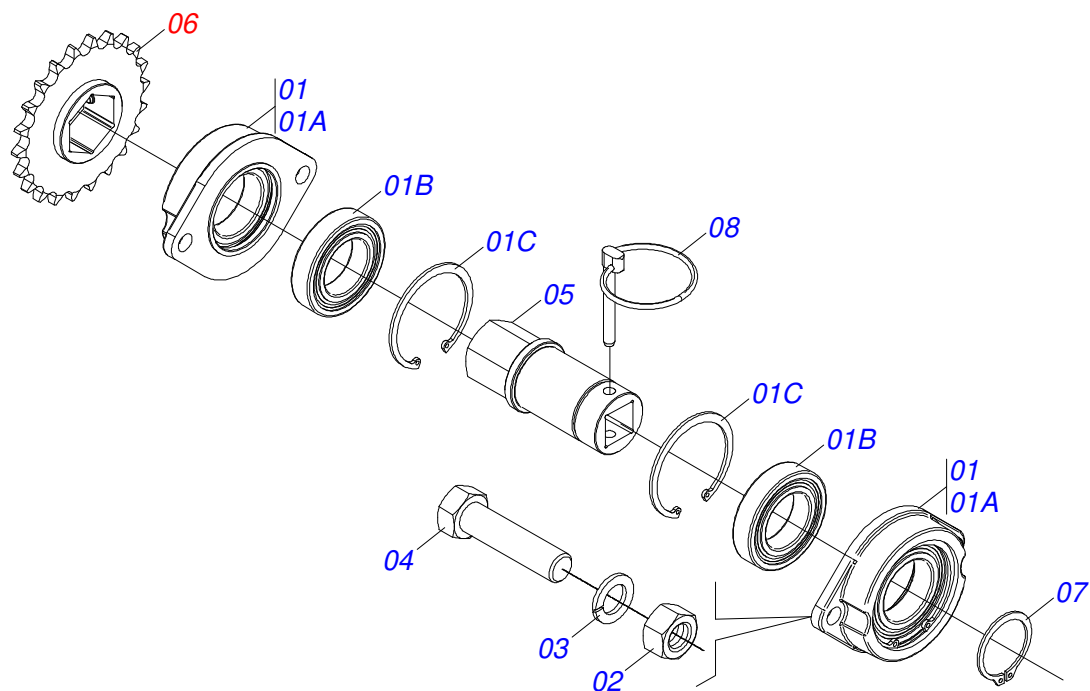


Item	Code	Description	See page	QT
01	0531057910	SIDE BEARING WITH BEARING 6007		02
01A	0502013070	SIDE FERTILIZER HOPPER SUPPORT BEARING		01
01B	0503016065	ROLLER BEARING		01
01C	0503011800	SEAL RING		01
02	0503010337	5/16" NUT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0502013067	SIDE BEARING AXLE FERTILIZER HOPPER SUPPORT		01
06	0531057901	GEAR	49	01
07	0503010845	501035 CLAMPING RING (FOR AXLE)		01
08	0503030119	LOCK PIN		01

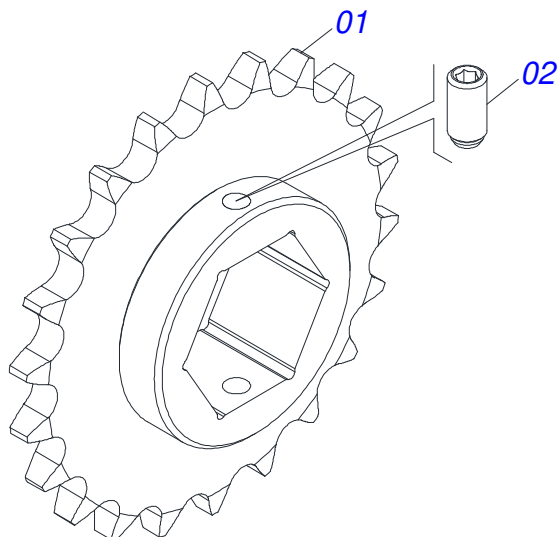


Item	Code	Description	See page	QT
01	0531065402	GEAR		01
02	0503013958	1/4" X 1" BOLT		02

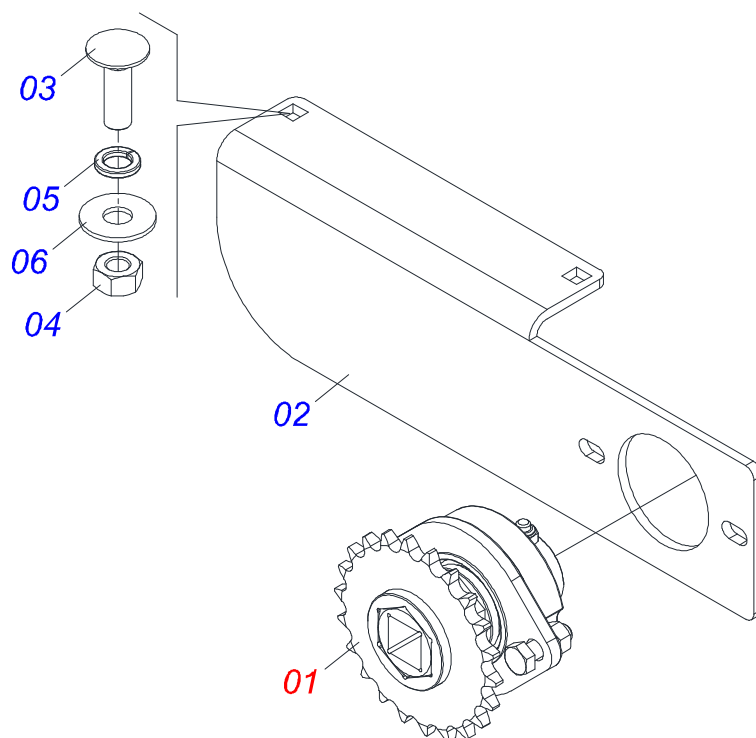


Item	Code	Description	See page	QT
01	0531059739	SINGLE SIDE GEAR BEARING SET 22Z	52	01
02	0501310951	LEFT BEARING PLATE BALANCE		01
03	0503030796	5/16" X 1" BOLT		02
04	0503010337	5/16" NUT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0521011039	FLAT WASHER		02

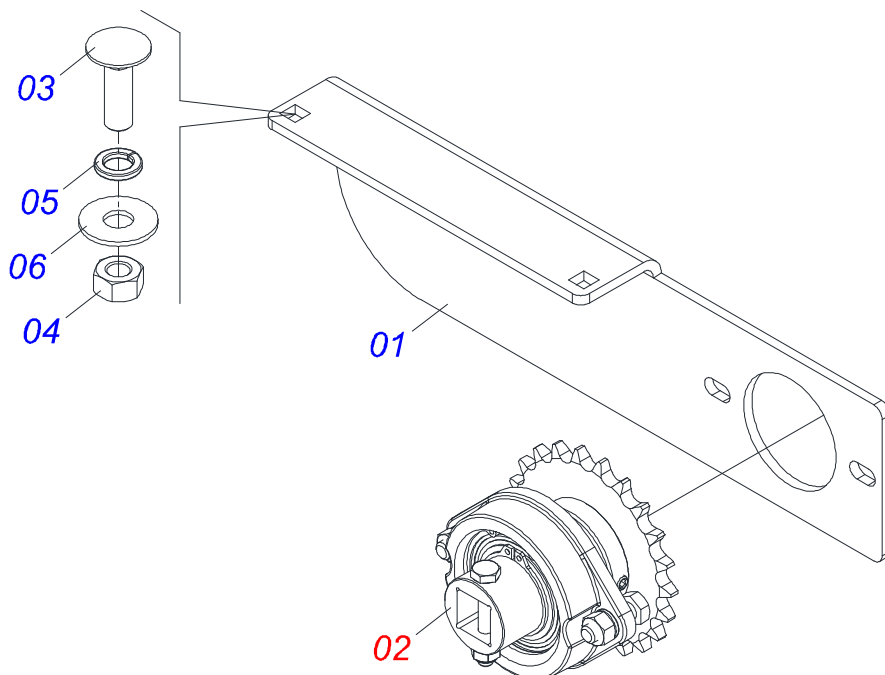


Item	Code	Description	See page	QT
01	0501310953	RIGHT BEARING PLATE BALANCE		01
02	0531059739	SINGLE SIDE GEAR BEARING SET 22Z	52	01
03	0503030796	5/16" X 1" BOLT		02
04	0503010337	5/16" NUT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0521011039	FLAT WASHER		02

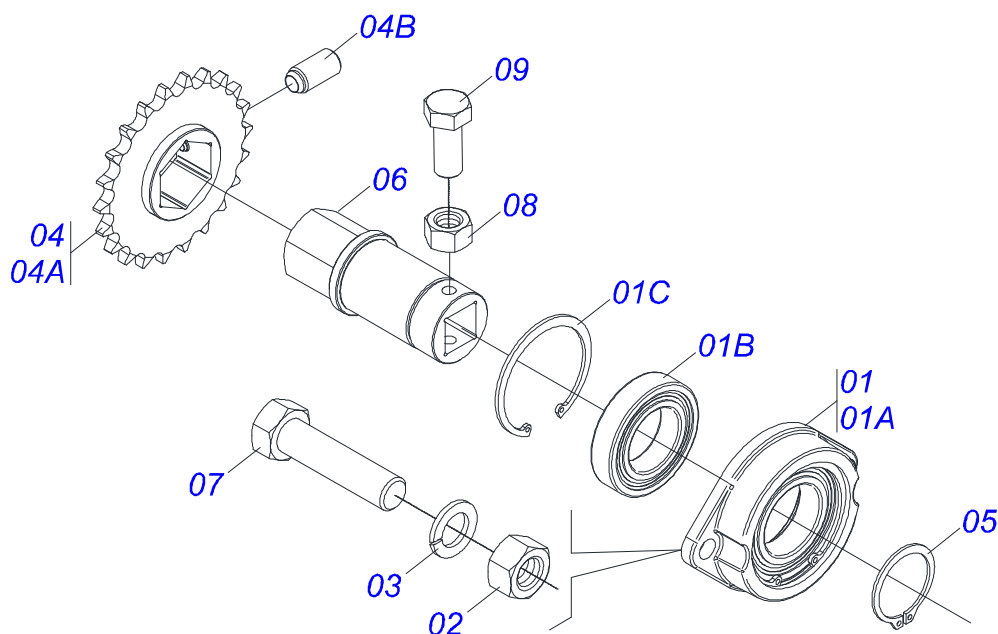

Item	Code	Description	See page	QT
01	0531057910	SIDE BEARING WITH BEARING 6007		01
01A	0502013070	SIDE FERTILIZER HOPPER SUPPORT BEARING		01
01B	0503016065	ROLLER BEARING		01
01C	0503011800	SEAL RING		01
02	0503010337	5/16" NUT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0531057901	GEAR	49	01
04A	0531065402	GEAR		01
04B	0503013958	1/4" X 1" BOLT		02
05	0503010845	501035 CLAMPING RING (FOR AXLE)		01
06	0502012902	SINGLE BEARING SHAFT		01
07	0503010371	5/16" X 1" BOLT		02
08	0503012880	1/4" UNC SELF ADJUSTING NUT		01
09	0503010733	1/4" X 1-3/4" BOLT		01

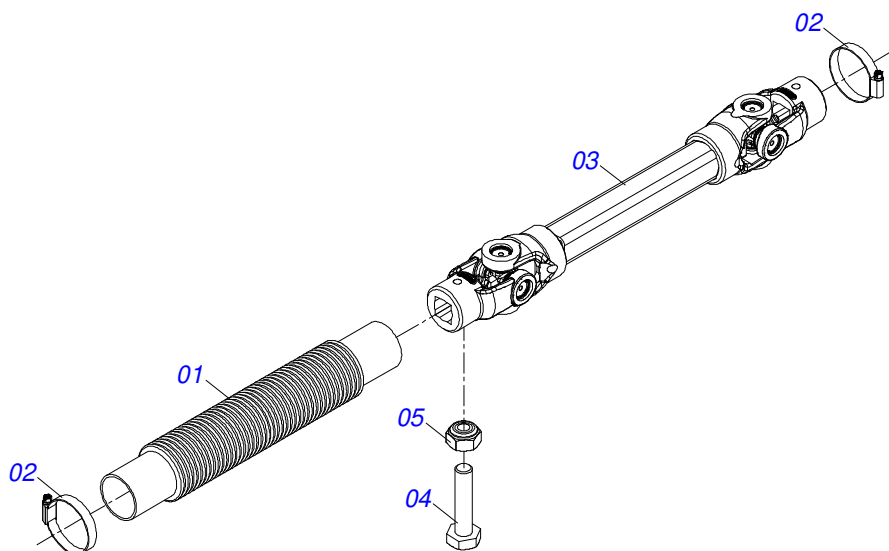


Item	Code	Description	See page	QT
01	0503030331	1.2" X 1.2" X 12.2" HOSE		01
02	0503010243	CLAMP		02
03	0503062755	TRANSMISSION AXLE		01
04	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
05	0503012880	1/4" UNC SELF ADJUSTING NUT		02

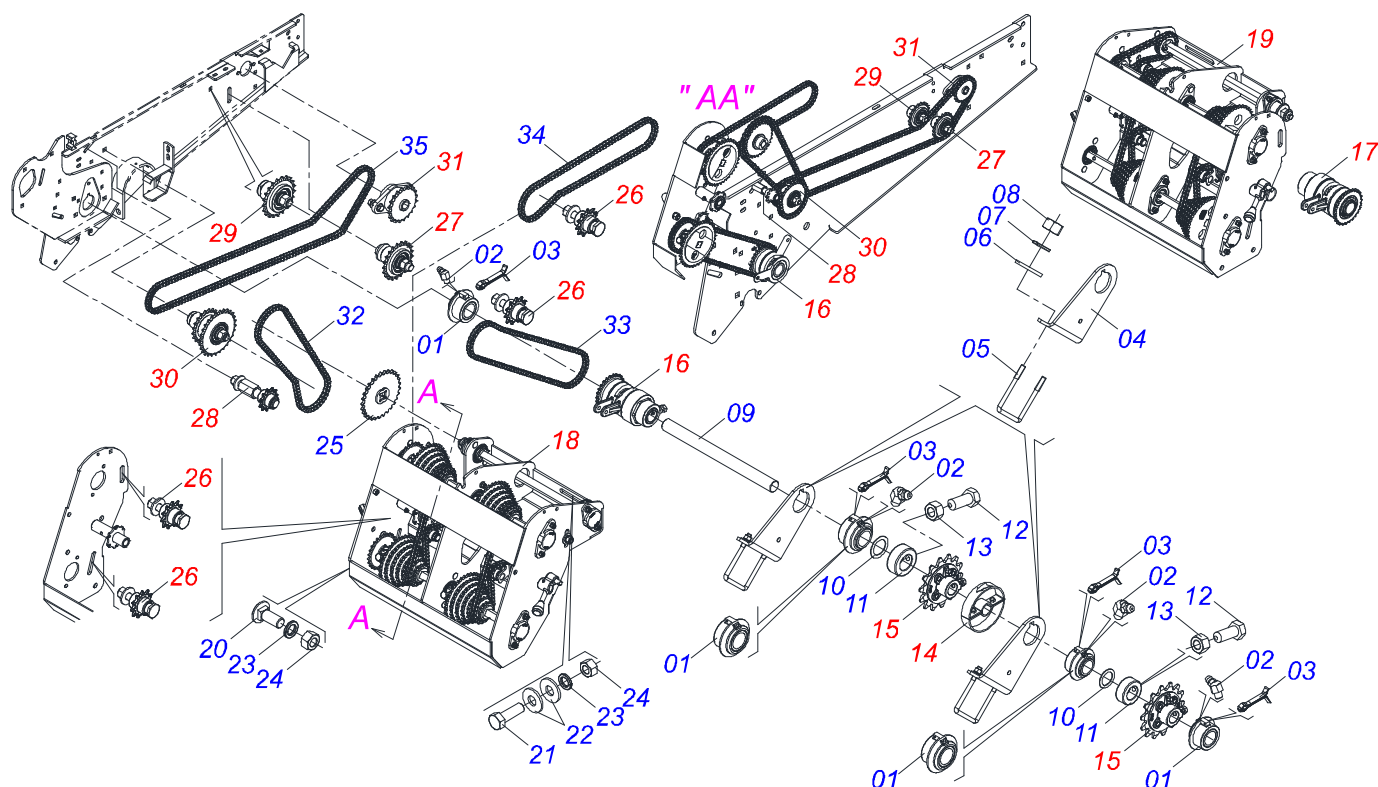


Item	Code	Description	See page	QT
01	0501110639	BEARING	55	08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2 UNC G.5 ZN HEX NUT		08
09	0571014439	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		04
14	0501052560	MOTOR AXLE SIGNAL	56	02
15	0511051434	TRANSMISSION ACTUATOR	57	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	58	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	59	01
18	0521043316	RIGHT GEAR BOX ASSY	60	01
19	0521043317	LEFT GEAR BOX ASSY	62	01
20	0503014734	BOLT		06
21	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2 UNC G.5 ZN HEX NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	71	04
27	0521055217	LOWER CURRENT STRETCH	72	02
28	0501058254	UPPER SEED CHAIN TENSIONER	73	02
29	0521055216	BEARING WITH GEAR	74	02
30	0521055218	BEARING GEAR WITH DOUBLE	75	02
31	0521055214	BEARING GEAR WITH	76	02


Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

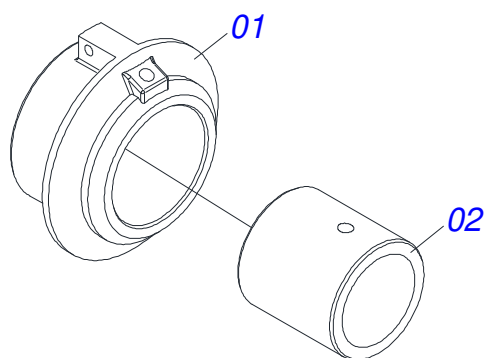


Item	Code	Description	See page	QT
01	0502012615	AGRICULTURAL BEARING BODY		01
02	0561014848	BEARING INTERNAL SLEEVE		01

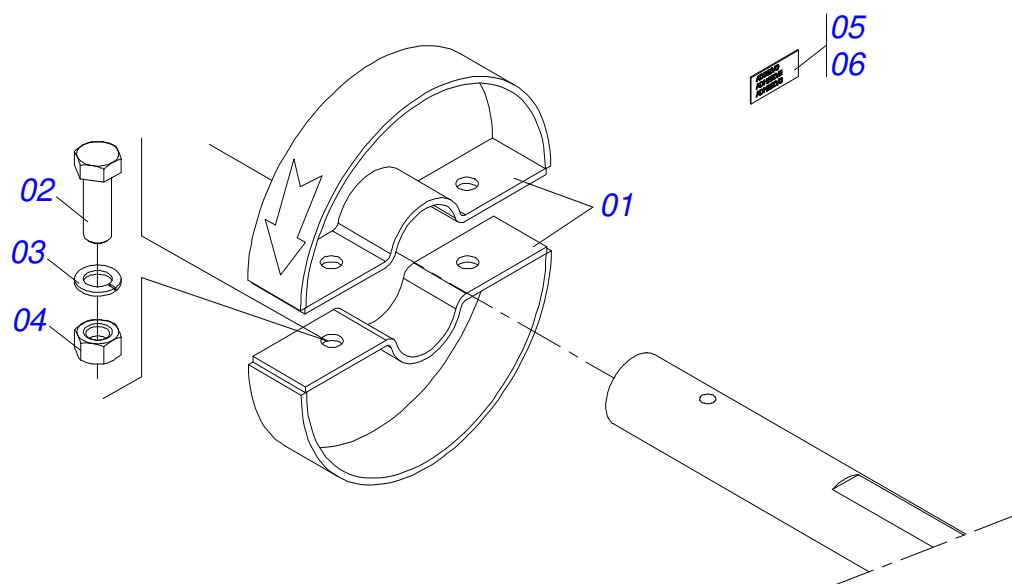


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ADHESIVE LABEL		01

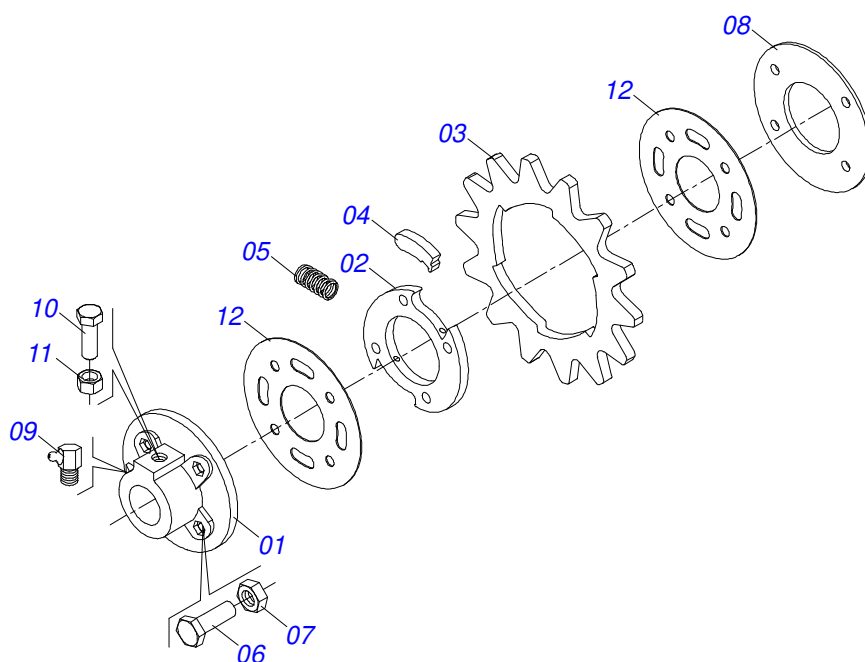


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CS PC G.5 ZN		01
11	0503010060	1/2 UNC G.5 ZN HEX NUT		01
12	0571010763	FLANGE WASHER		02

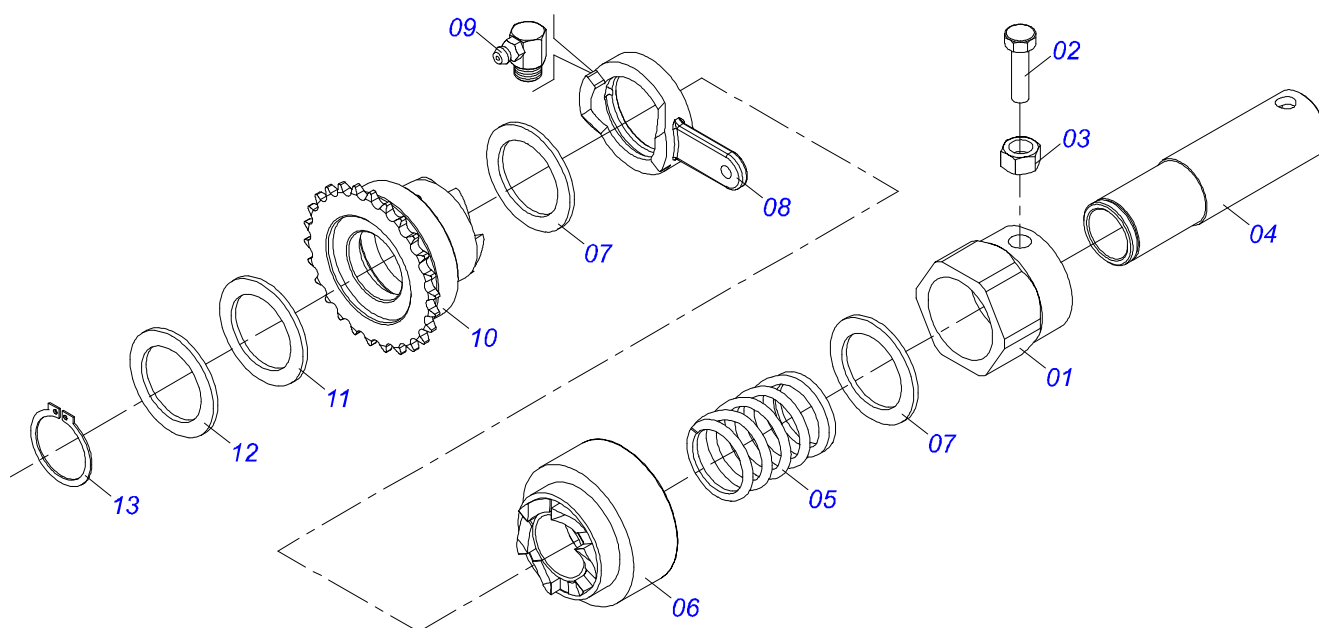


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

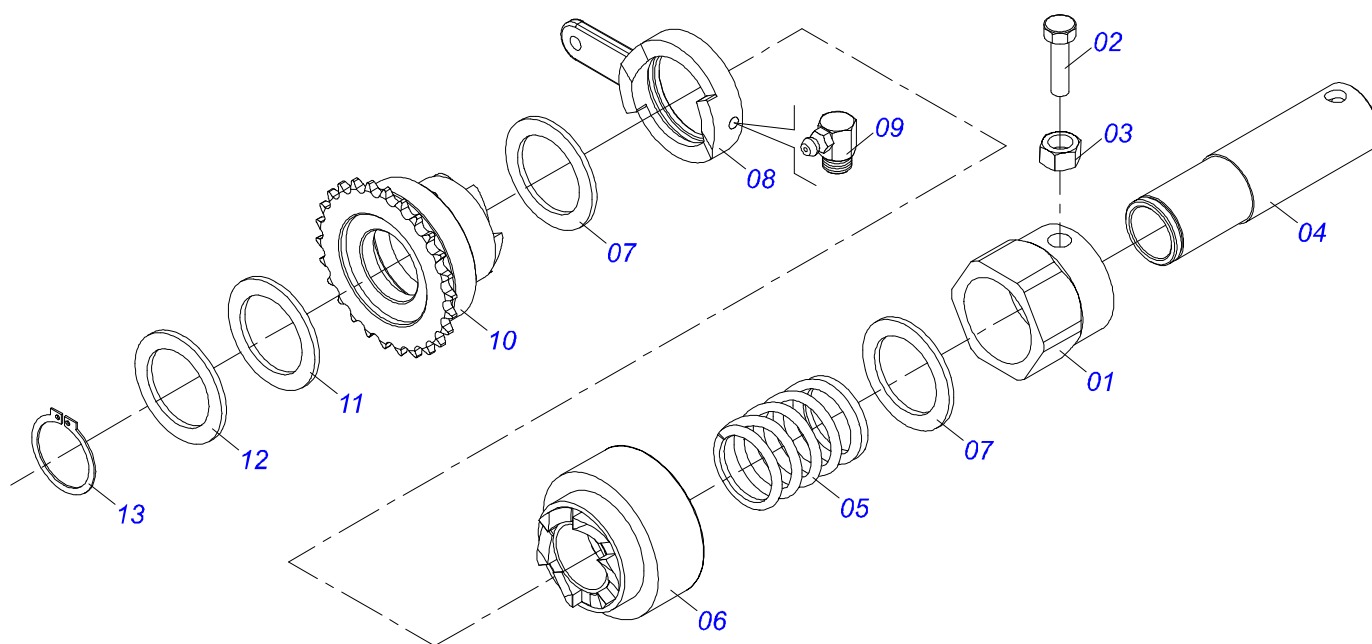


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

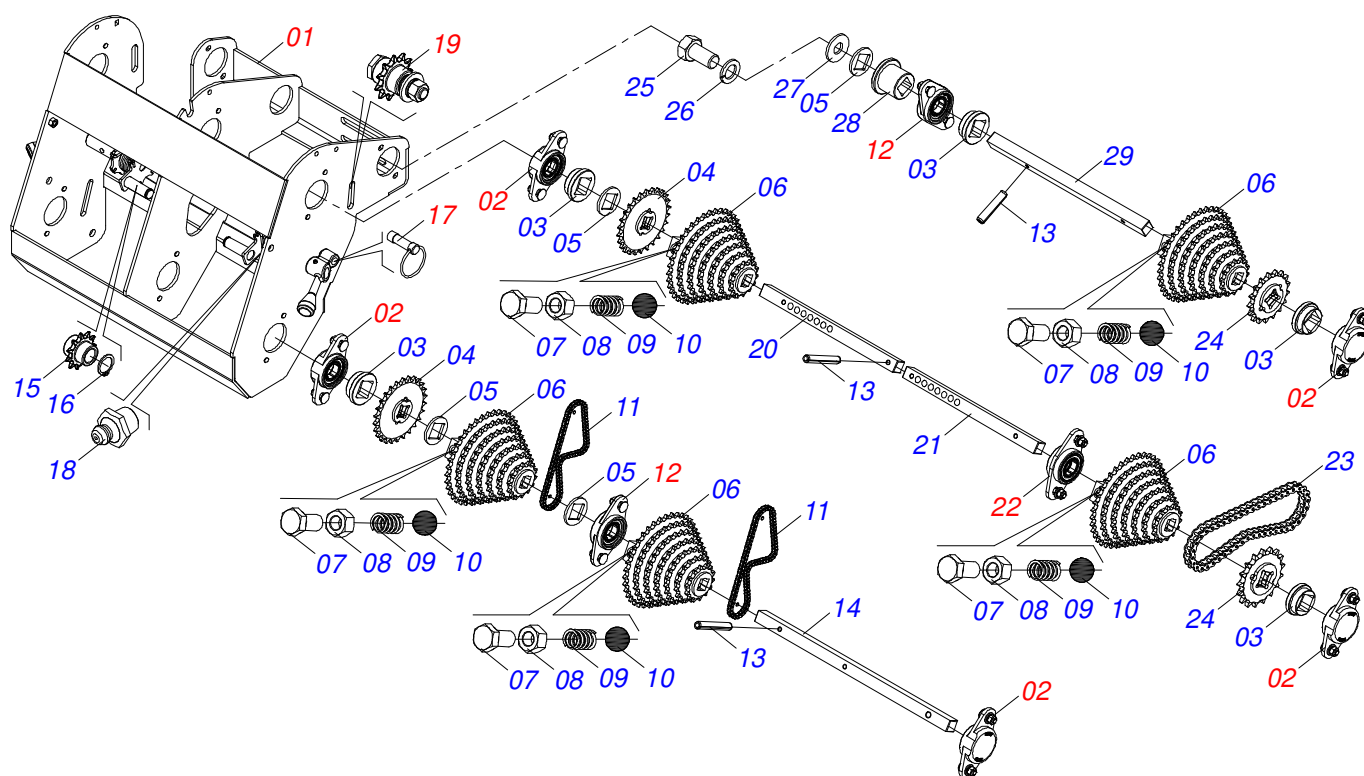


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	61	01
02	0511059266	CLOSED BEARING	64	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN SHAFT		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	66	02
13	0503010292	701164 6 X 40 SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	68	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	69	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	70	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8 SPRING WASHER		01
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

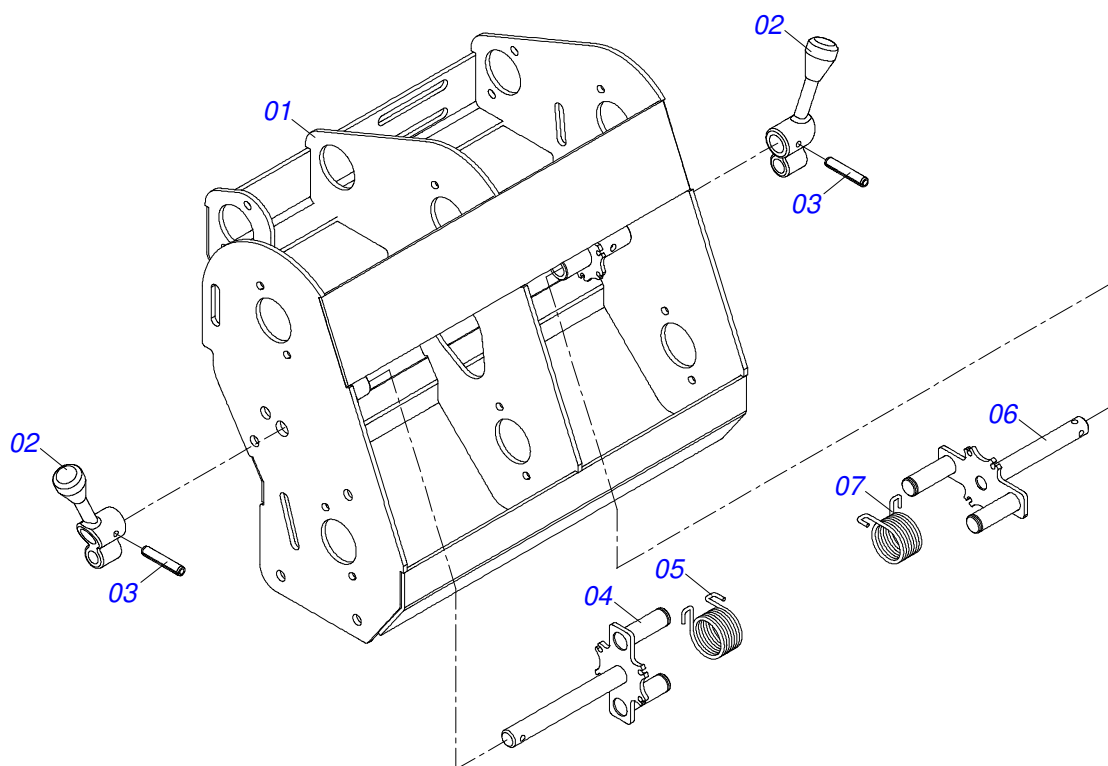


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TIGHTENER LEVER		02
03	0503010292	701164 6 X 40 SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING		01

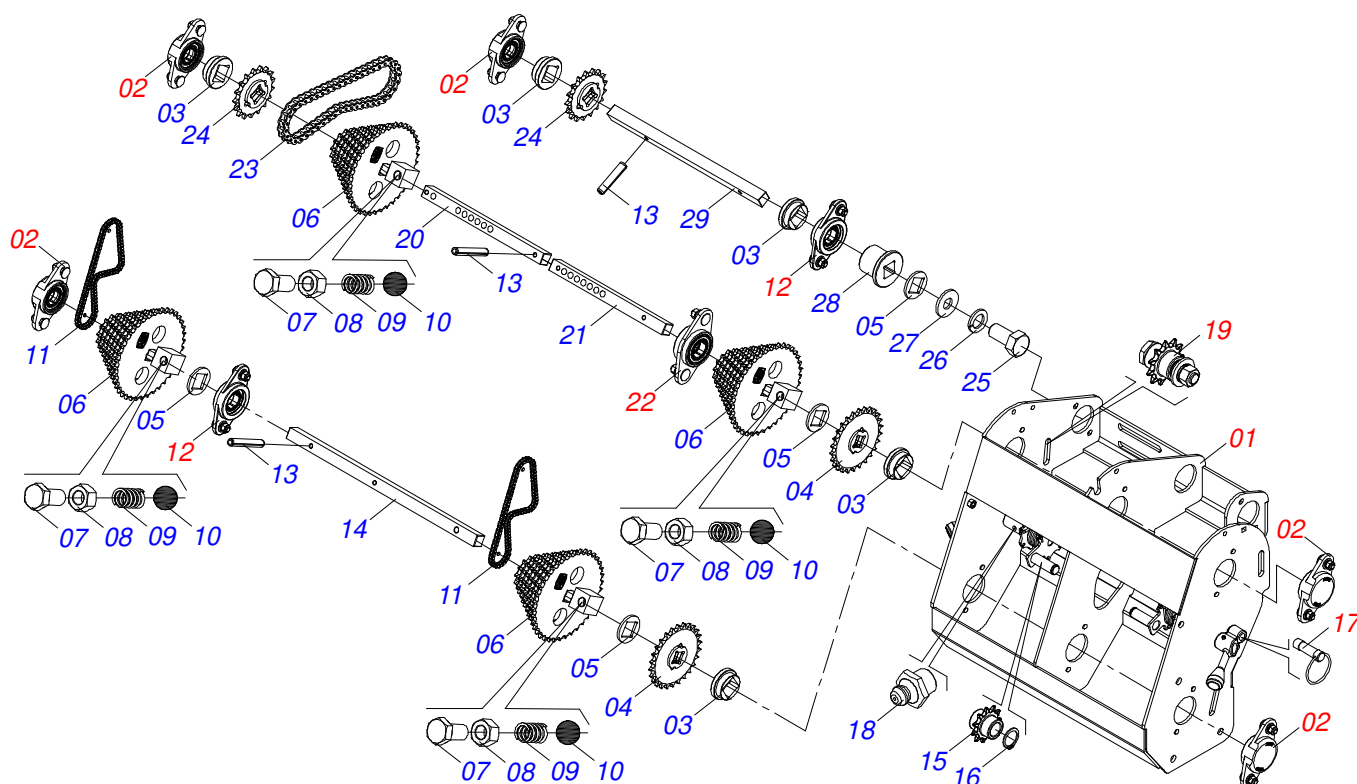


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	63	01
02	0511059266	CLOSED BEARING	64	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN SHAFT		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	66	02
13	0503010292	701164 6 X 40 SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	68	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	69	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	70	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8 SPRING WASHER		01
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

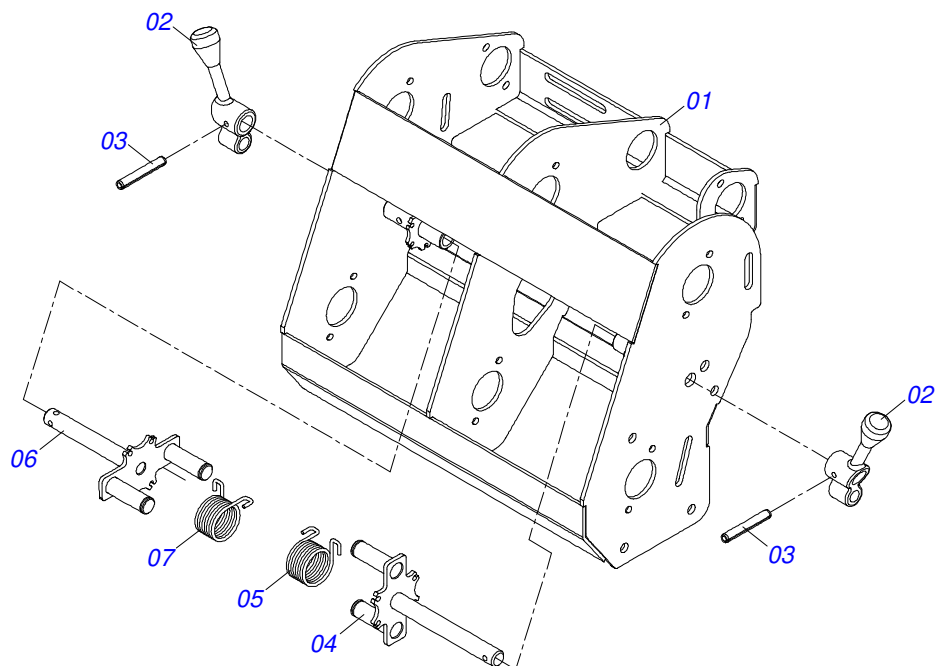


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TIGHTENER LEVER		02
03	0503010292	701164 6 X 40 SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING		01

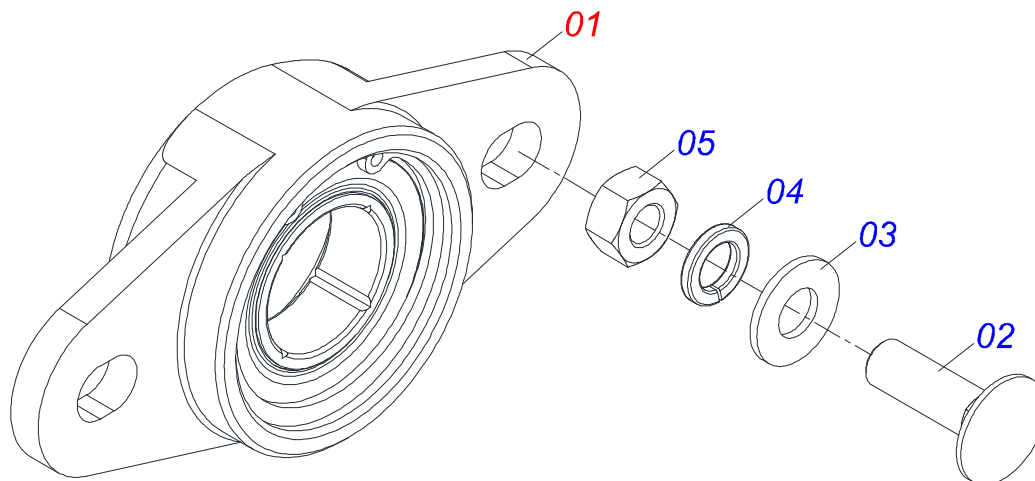


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	65	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

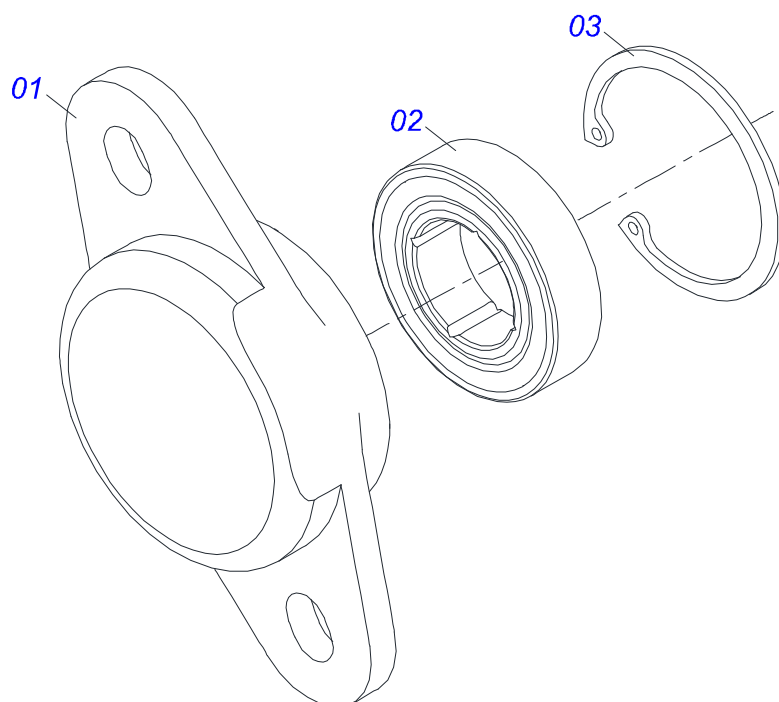


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

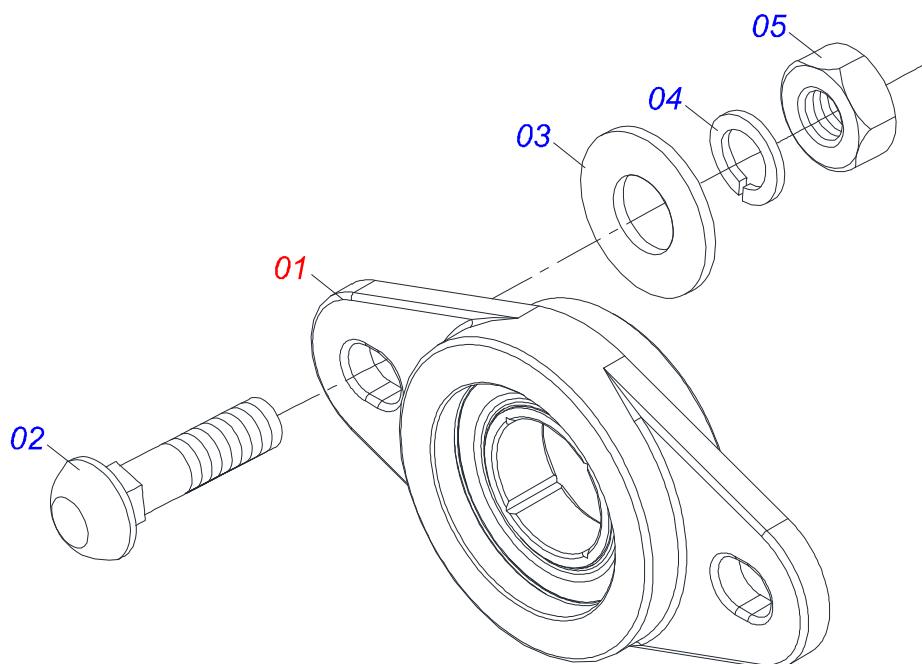


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLER	67	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

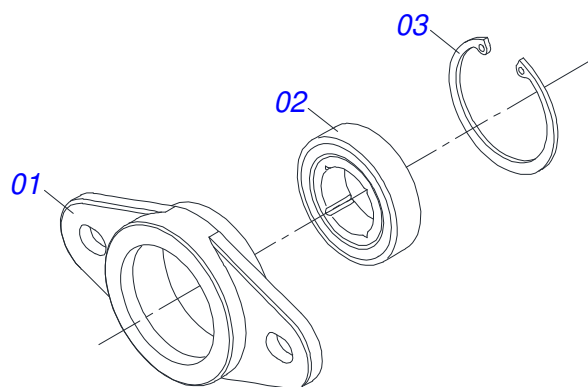


Item	Code	Description	See page	QT
01	0502011697	GEARBOX BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

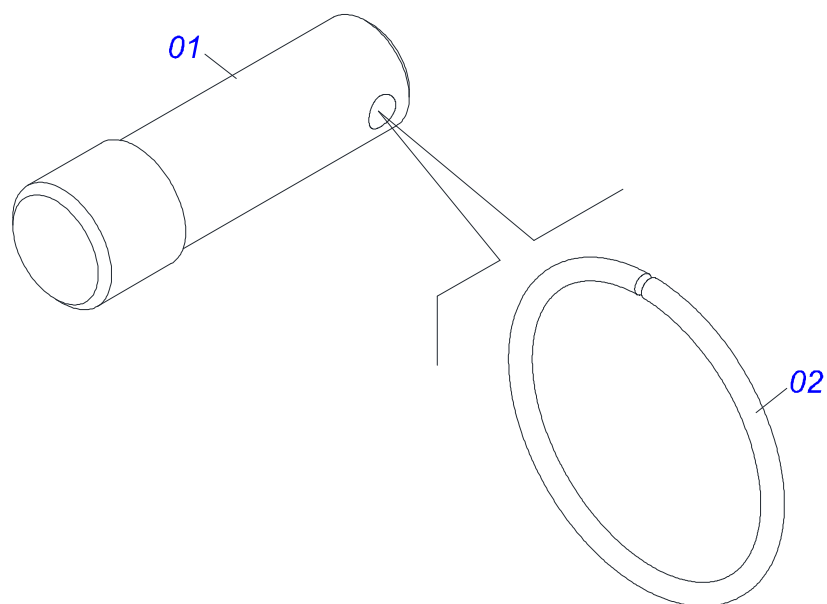


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

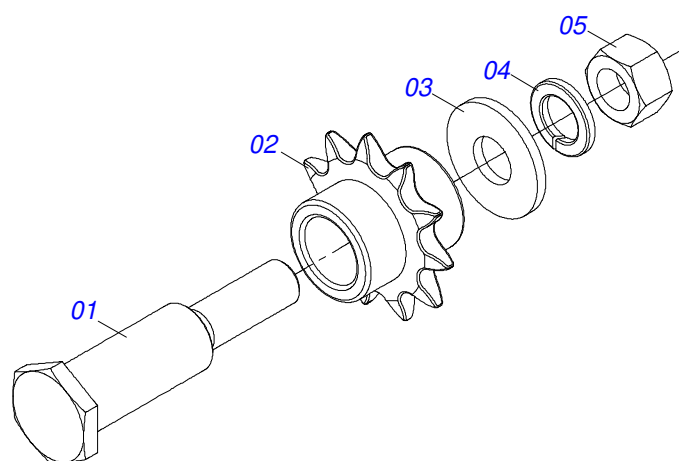


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

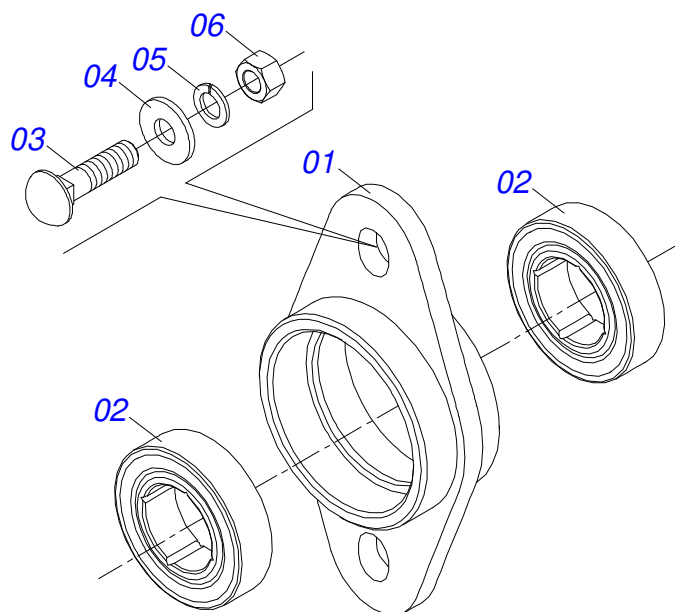


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

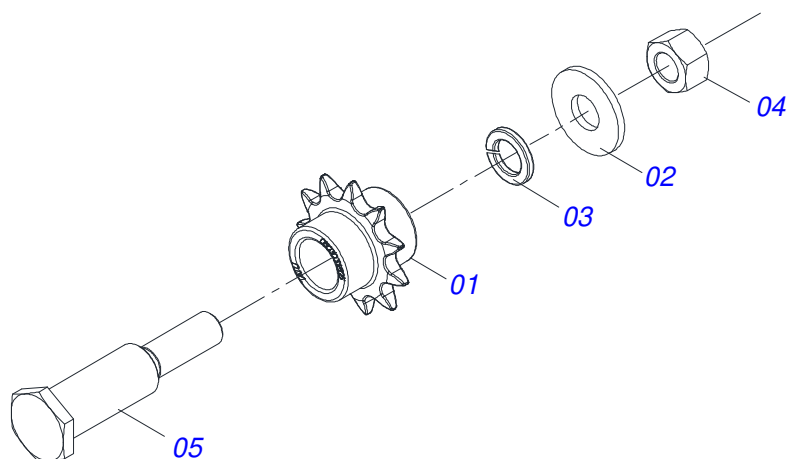


Item	Code	Description	See page	QT
01	0503031805	11Z 1/2" GEAR		01
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0531019479	AXLE CHAIN GEAR		01

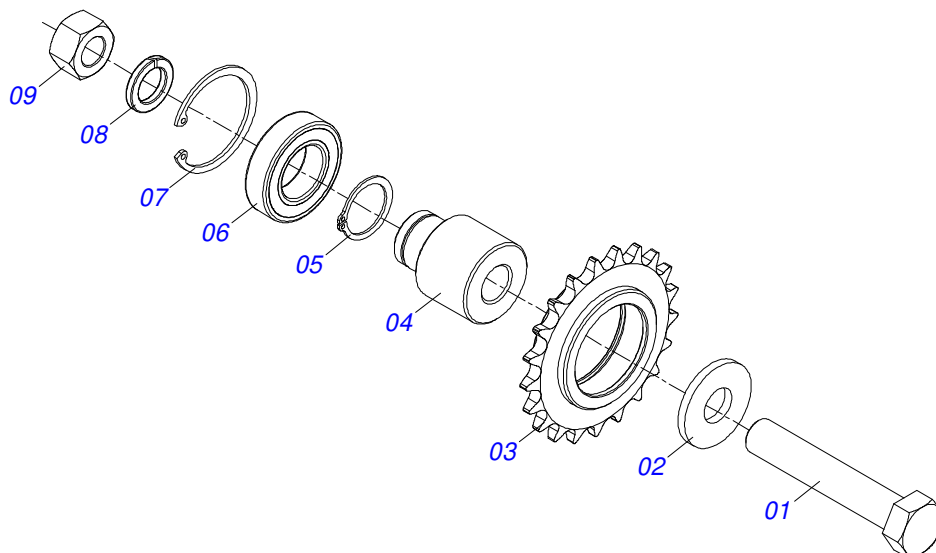


Item	Code	Description	See page	QT
01	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
02	0501012140	FLAT WASHER		01
03	0521069698	GEAR 21Z P 1/2		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503019356	BEARING 6005 2RS1		01
07	0503011105	SEAL RING		01
08	0503010027	5/8 SPRING WASHER		01
09	0503010013	5/8 NUT		01

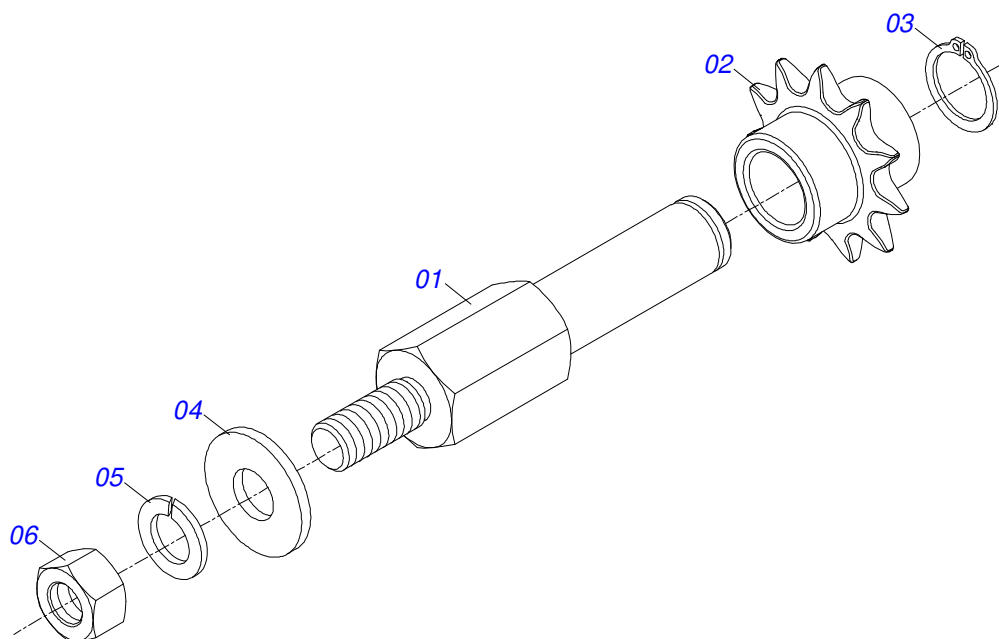


Item	Code	Description	See page	QT
01	0521018933	CHAIN TENSIONER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

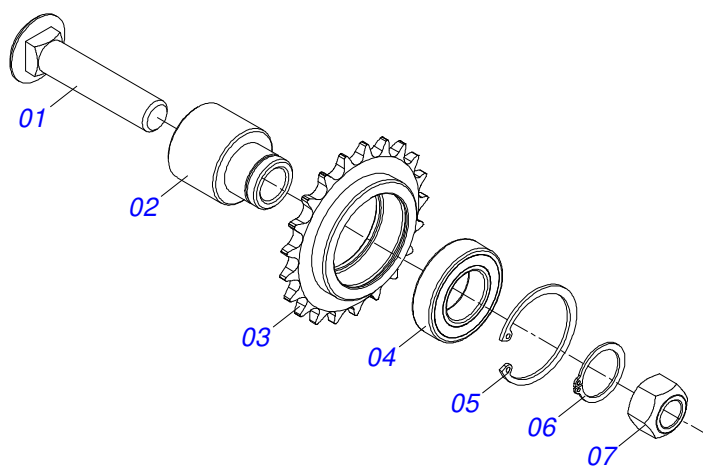


Item	Code	Description	See page	QT
01	0501011234	5/8" X 3" BOLT		01
02	0531017086	50 AXLETIGHTENER		01
03	0521069698	GEAR 21Z P 1/2		01
04	0503019356	BEARING 6005 2RS1		01
05	0503011105	SEAL RING		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		01
07	0503012412	5/8" UNC SELF LOCKING NUT		01

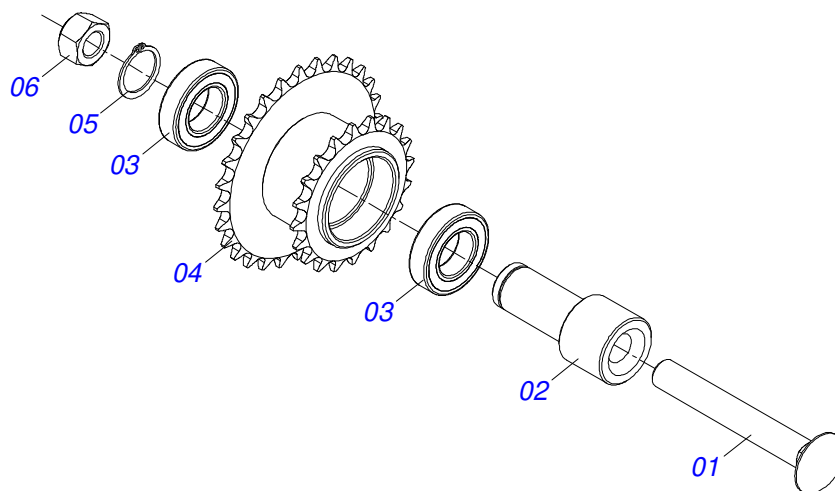


Item	Code	Description	See page	QT
01	0503016460	5/8" X 4.1/2" BOLT		01
02	0551019175	DOUBLE GEAR AXLE		01
03	0503019356	BEARING 6005 2RS1		02
04	0511069680	20Z X 28Z DOUBLE GEAR		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503012412	5/8" UNC SELF LOCKING NUT		01

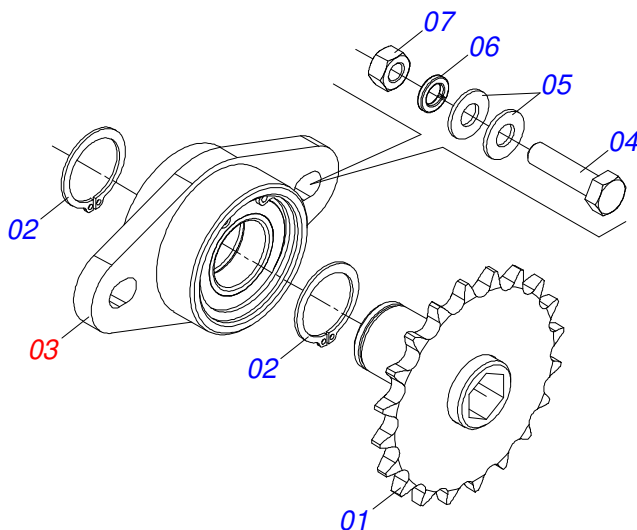


Item	Code	Description	See page	QT
01	0511063106	20Z AXLE BEARING DOUBLE		01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		02
03	0521055215	DOUBLE TRANSMISSION BEARING	77	01
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

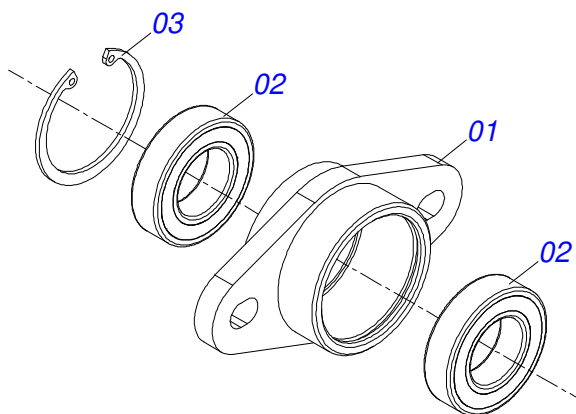


Item	Code	Description	See page	QT
01	0502011987	DOUBLE HOUSING BEARING		01
02	0503019356	BEARING 6005 2RS1		02
03	0503011105	SEAL RING		01

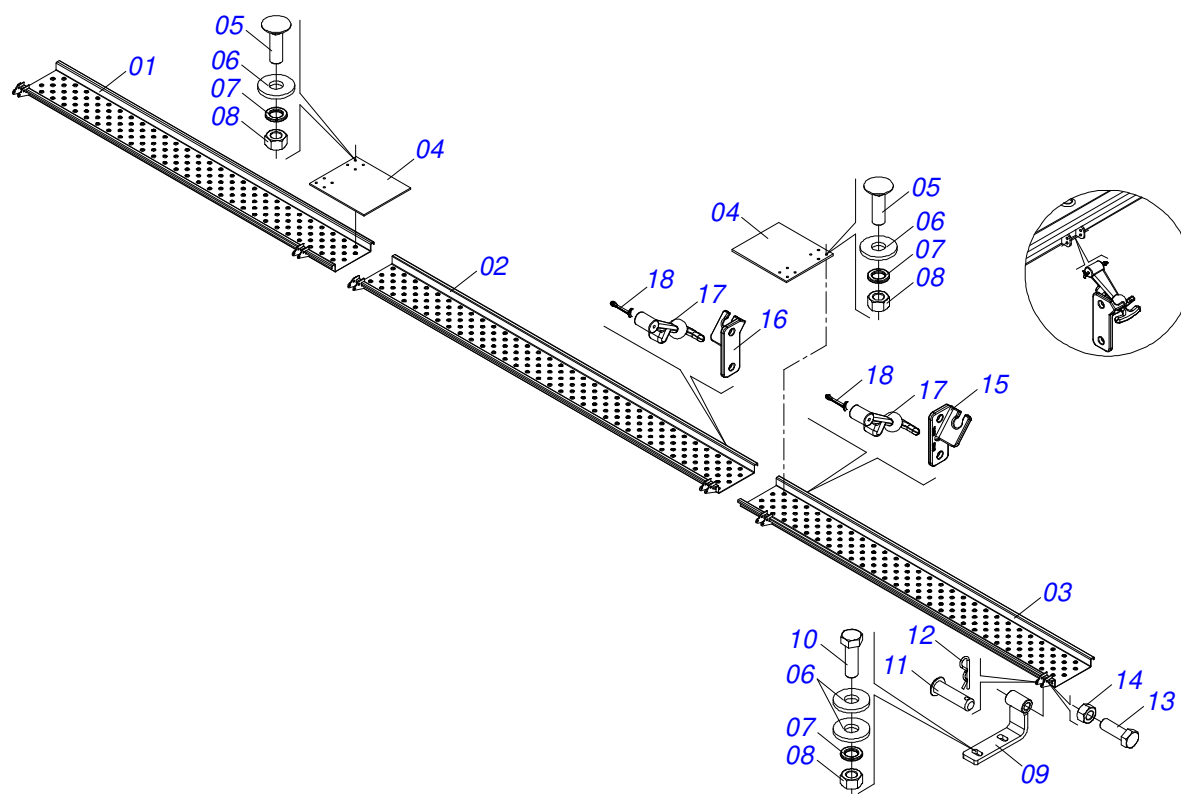


Item	Code	Description	See page	QT
01	0521068580	RIGHT PLATFORM	01	
02	0521068596	CENTRAL PLATFORM	01	
03	0521068588	LEFT PLATFORM	01	
04	0581015863	PLATFORM ENHANCEMENT PROTECTION	02	
05	0501010942	3/8" X 1-1/4" BOLT	04	
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER	28	
07	0503010025	3/8 SPRING WASHER	16	
08	0503010026	3/8" NUT	16	
09	0521068316	JOINT SUPPORT	06	
10	0503010849	3/8" X 1-1/2" BOLT	12	
11	0521010549	COUPLING SHAFT	06	
12	0503030168	HITCH PIN CLIP	06	
13	0503010741	1/2" X 2-3/4" BOLT	06	
14	0503011336	1/2" HEX SELF ADJUSTING NUT	06	
15	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
16	0502012739	PLATFORM LEFT FIXER SUPPORT	02	
17	0503011333	COVER FIXER	03	
18	0503010274	5/32"X 2" COTTERPIN	03	

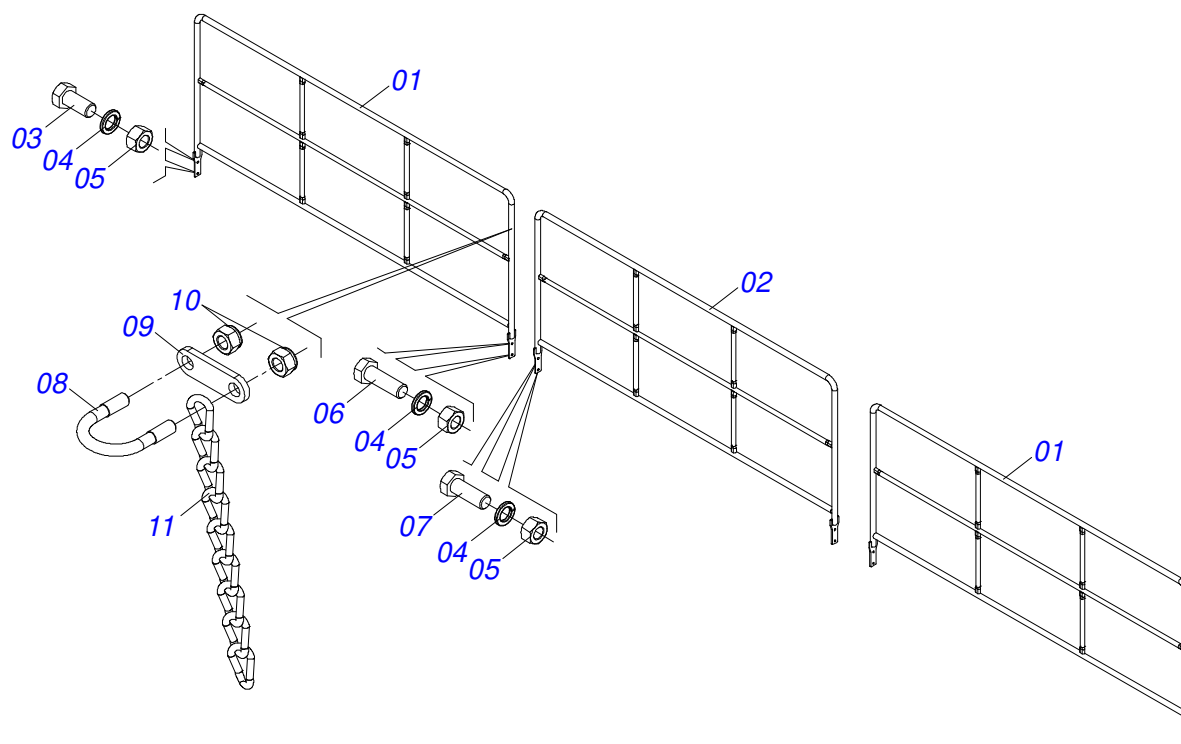


Item	Code	Description	See page	QT
01	0521064019	SIDE HANDRAIL		02
02	0521064018	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2 UNC G.5 ZN HEX NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8 SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

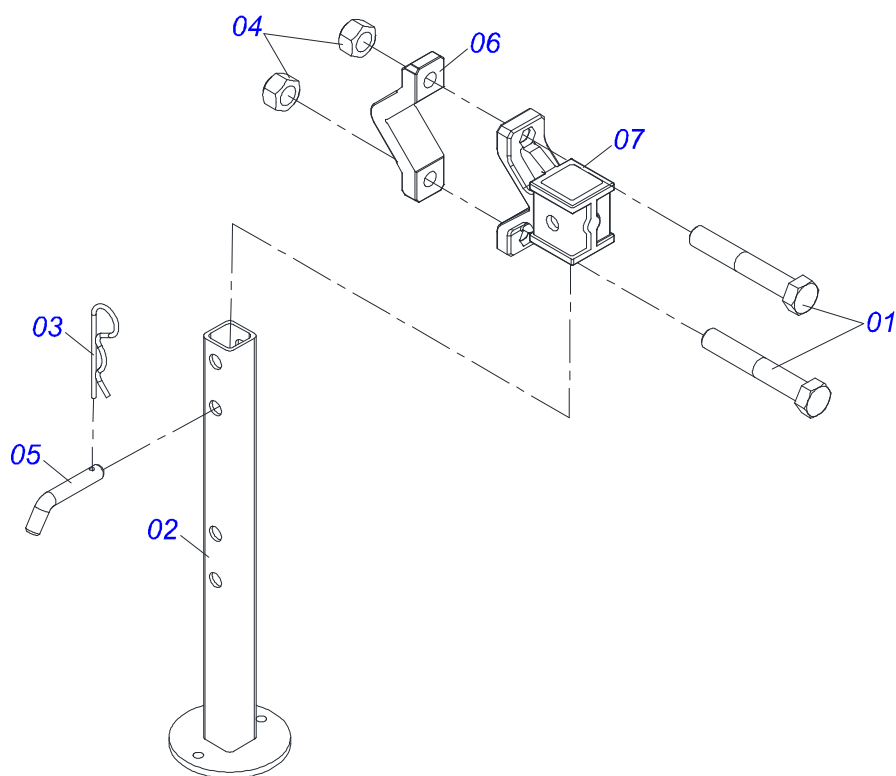


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HITCH PIN CLIP		01
04	0503012412	5/8" UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

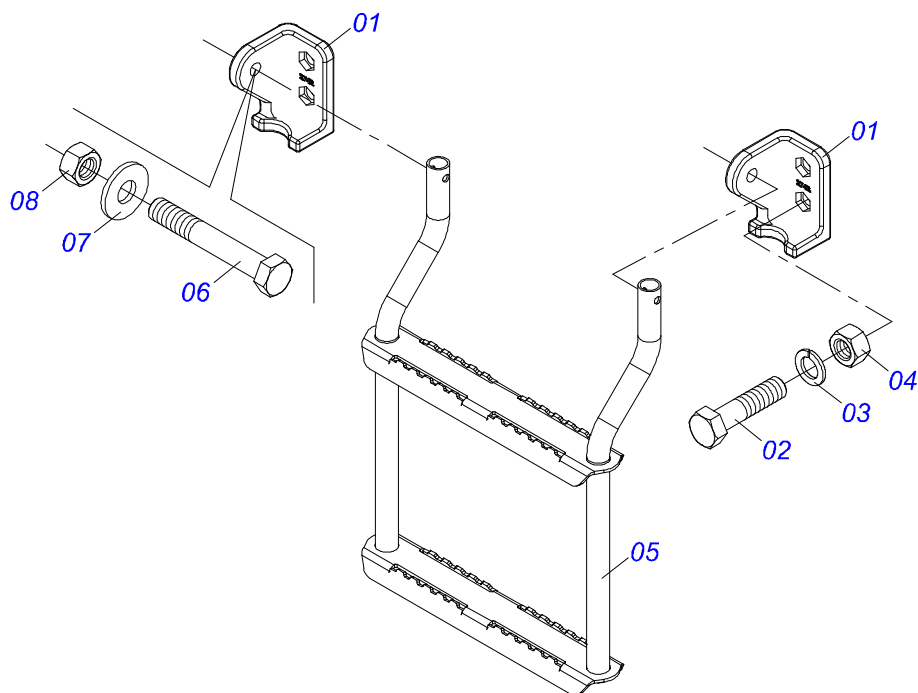


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8 SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER	02	
08	0503013357	3/8 SELF-ADJUSTING NUT	02	

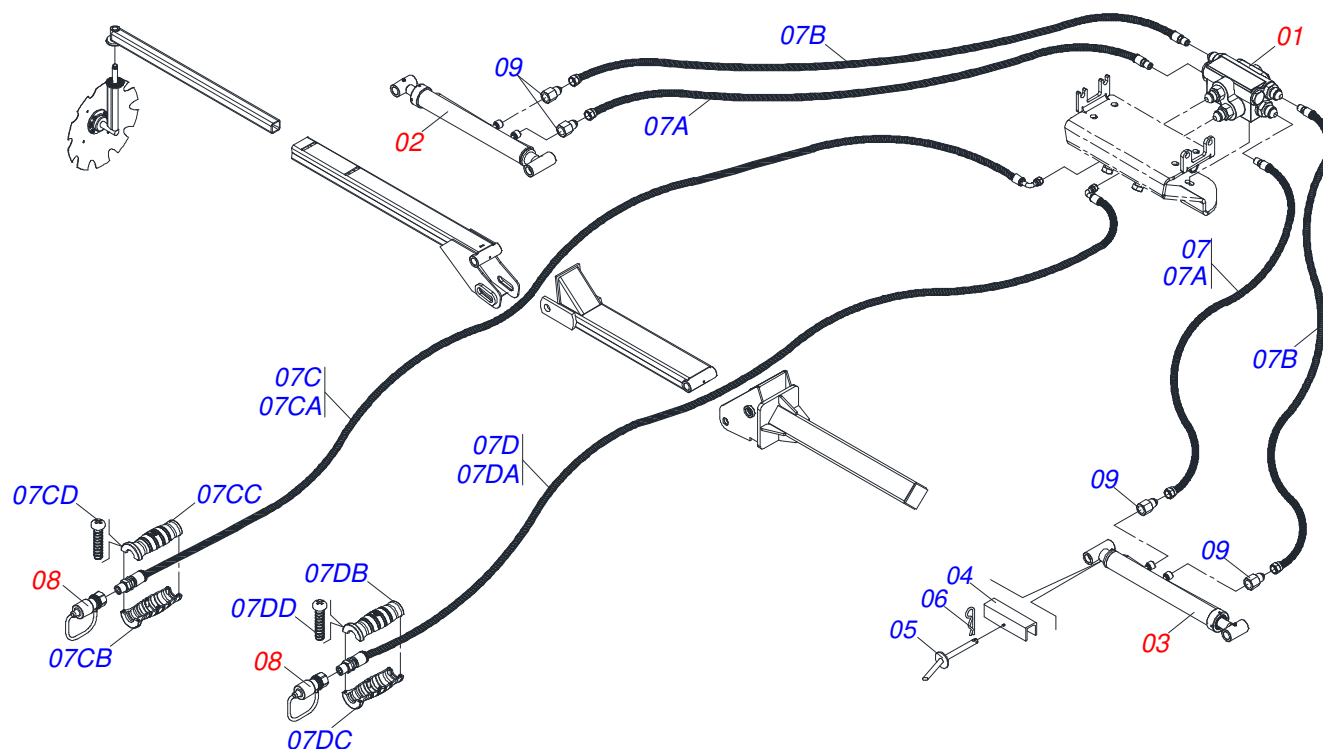


Item	Code	Description	See page	QT
01	0501054649	HBM SEQUENTIAL VALVE	83	01
02	0511058431	HYDRAULIC CYLINDER	84	01
03	0511058431	HYDRAULIC CYLINDER	84	01
04	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
05	0501068994	8,30 X 78 LOCK PIN		02
06	0503030168	HITCH PIN CLIP		02
07	0511057094	HYDRAULIC HOSE MARKER ASSY 6450		01
07A	0501080783	HOSE 3/8 X 5000 TR-TR		02
07B	0501081659	HOSE 3/8 X 5300 TR-TR 2T		02
07C	0521052512	HOSE 3/8 X 5200 TC-TM PURPLE / RED		01
07CA	0501081980	HOSE 3/8 X 5200 TC-TM		01
07CB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
07CC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
07CD	0503018952	PLASTIC BOLT		06
07D	0521052513	HOSE 3/8 X 5200 TC-TM PURPLE / BLUE		01
07DA	0501081980	HOSE 3/8 X 5200 TC-TM		01
07DB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
07DC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
07DE	0503018952	PLASTIC BOLT		06
08	0501053834	MALE QUICK COUPLER	33	02
09	0511018012	HIDRAULIC ADAPTER		04

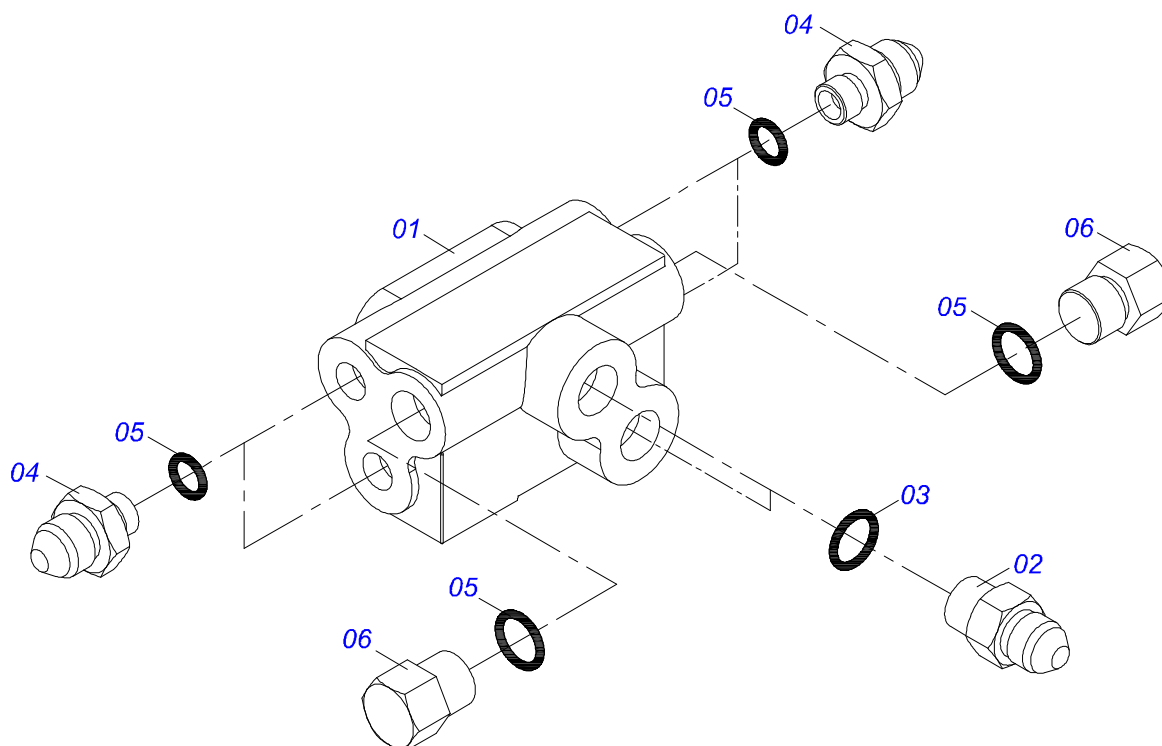


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

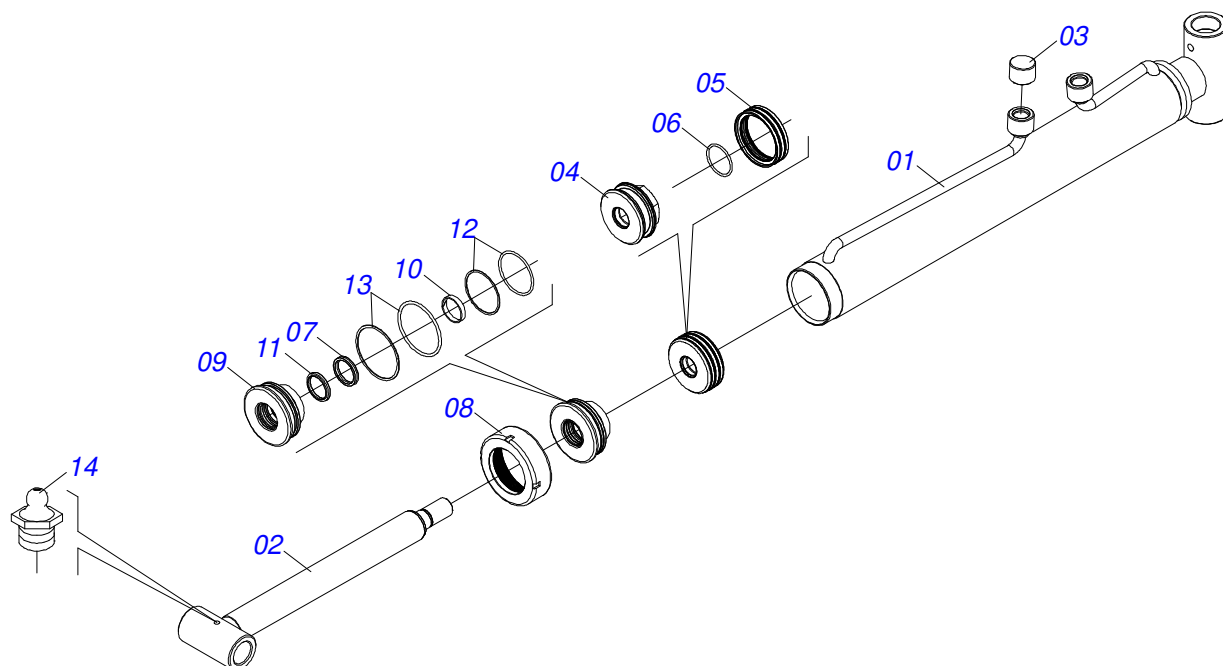


Item	Code	Description	See page	QT
01	0501067700	2.5" X 25" CYLINDER CASE		01
02	0521066632	EXTENDER		01
03	0503030384	CON PLUG N-001		02
04	0502012837	PISTON		01
05	0503018005	RING		01
06	0503011109	2-119 N 3006-9B O'RING		01
07	0503010163	D-1500 SCRAPER RING		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503018004	RING		01
11	0503018003	GASKET		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0503010002	1800 GREASE FITTING		02
15	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

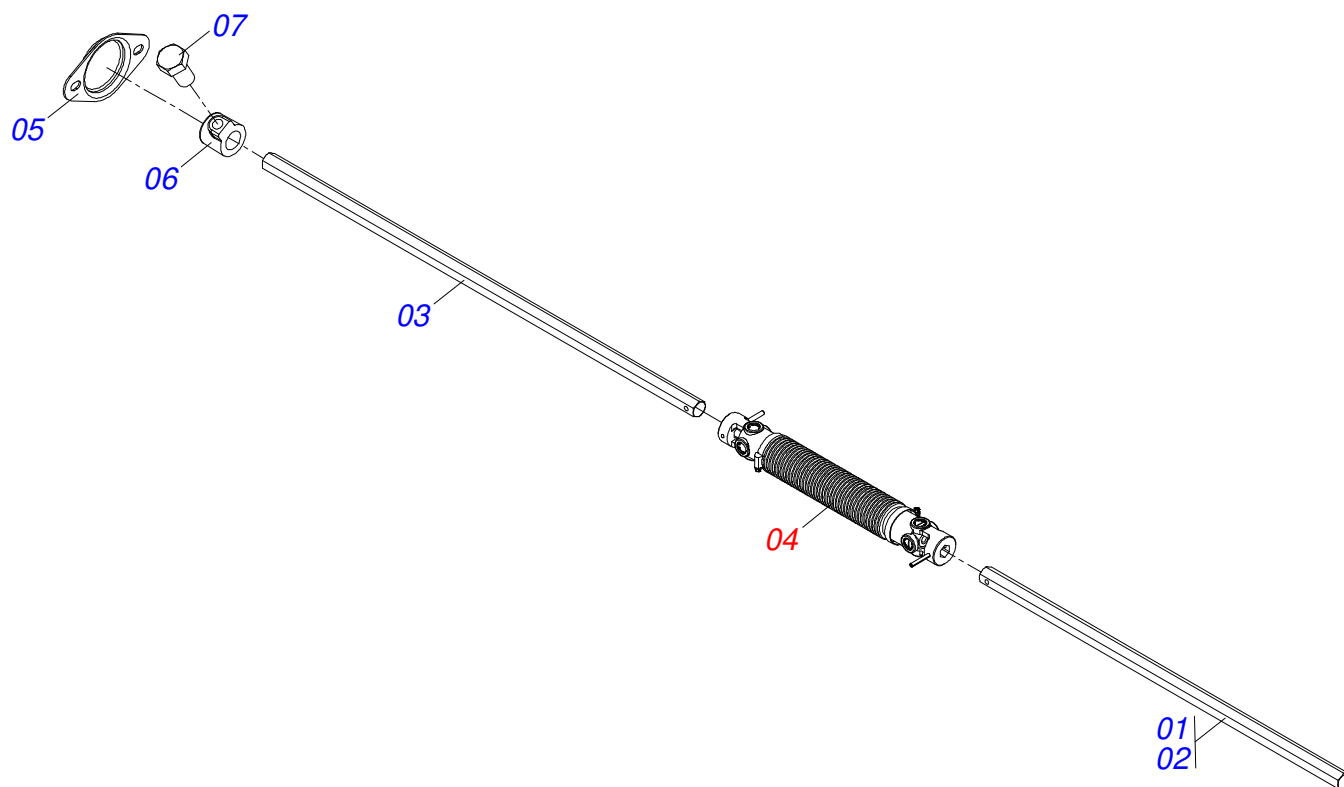


Item	Code	Description	See page	QT
01	0571013726	5/8 X 800 HEX AXLE		01
02	0571013724	5/8 X 1250 HEX AXLE		01
03	0571013725	5/8 X 2190 HEX AXLE		02
04	0503062206	CARDAN TERMINAL	86	02
05	0561014215	BEARING COVER LOWER ROW FRAME		02
06	0502040534	SPRING GUIDE BUSHING LOCK		08
07	0501018535	1/2 X 1 BOLT		08

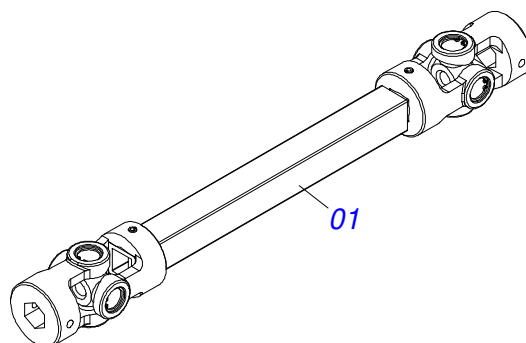


Item	Code	Description	See page	QT
01	0503062206	CARDAN TERMINAL	86	01

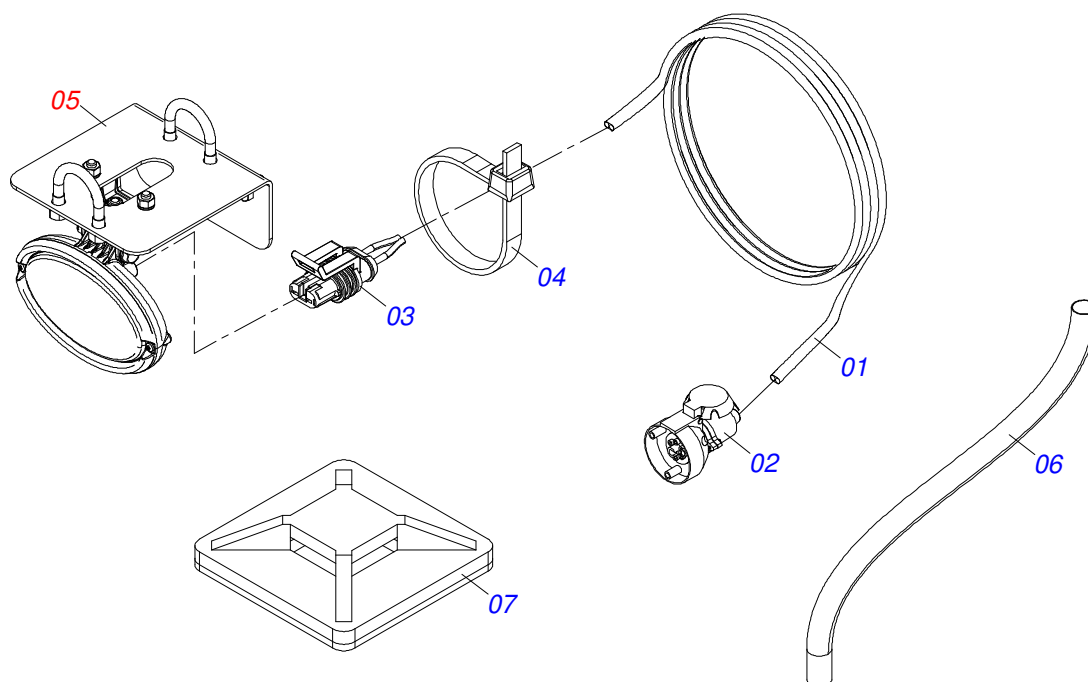


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		16
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		03
04	0503012903	T-80M CRAMP NYLON		50
05	0521052792	MOUNTED REAR LIGHT	88	03
06	3505151602	TUBE		0,3mt
07	0503017702	FIXER		15

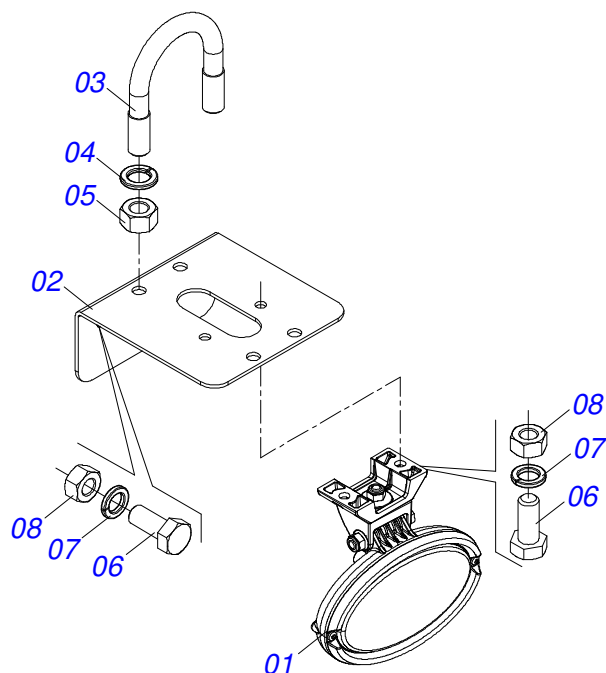


Item	Code	Description	See page	QT
01	0503018738	HEADLIGHT		01
02	0581016999	REAR LIGHT SUPPORT		01
03	0551019884	45 X 50 X 3/8 FASTENER		02
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04

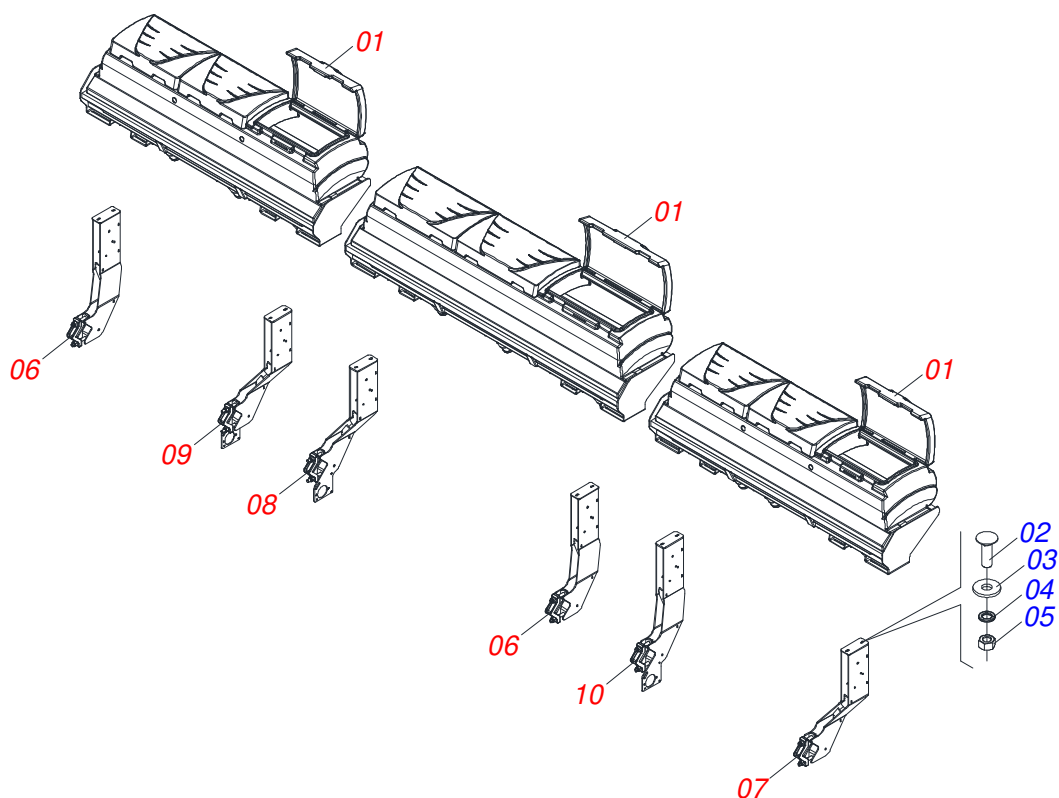


Item	Code	Description	See page	QT
01	0531058045	7450 SINGLE SEED HOPPER FOR 15 NOZZLES	90	01
02	0501010942	3/8" X 1-1/4" BOLT		12
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
04	0503010025	3/8 SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0521052687	RIGHT SUPPORT TOWER WITH BOLT	93	02
07	0521051931	LEFT SUPPORT TOWER WITH BOLT	94	01
08	0531052006	LEFT SUPPORT TOWER WITH BOLT	95	01
09	0531052000	LEFT SUPPORT TOWER WITH BOLT	96	01
10	0531052003	RIGHT SUPPORT TOWER WITH BOLT	97	01

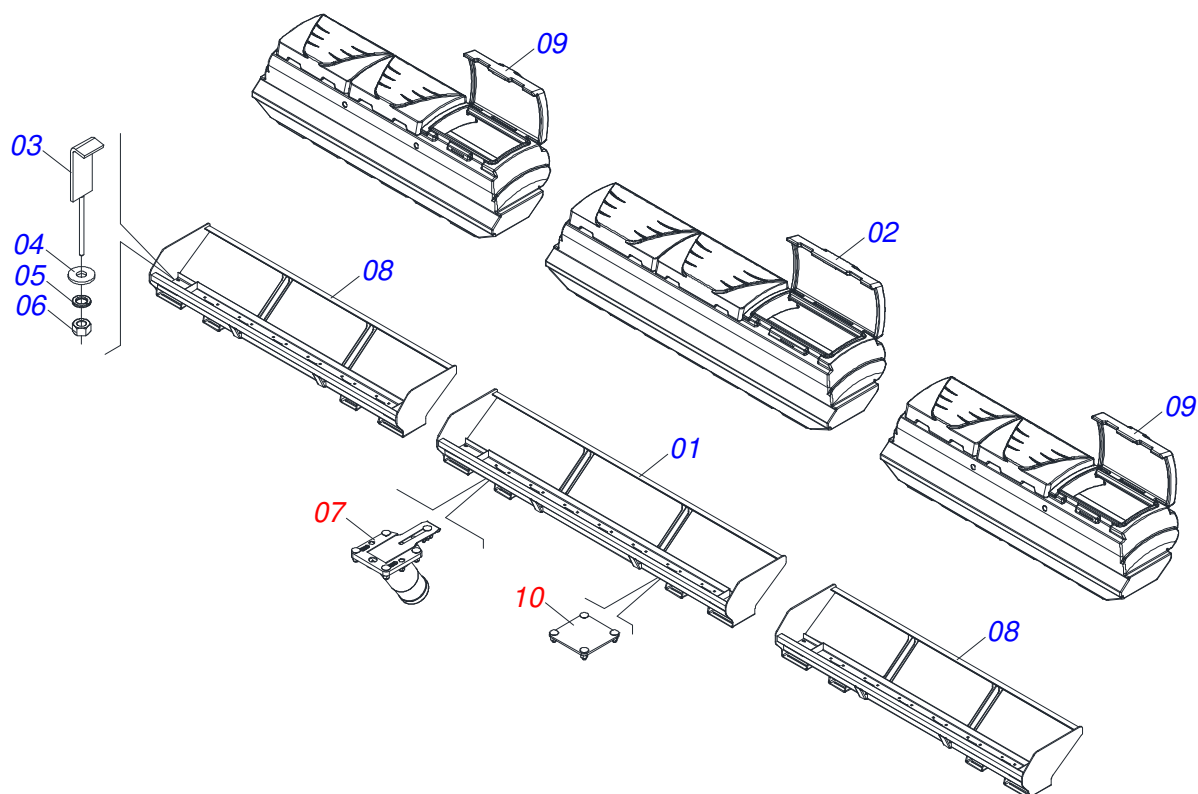


Item	Code	Description	See page	QT
01	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		01
02	0503062165	7 NOZZLES FRONT FERTILIZER HOPPER		01
03	0521063401	FIXING LOCK		06
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
05	0503010025	3/8 SPRING WASHER		06
06	0503010026	3/8" NUT		06
07	0531057950	3" X 175 SEED NOZZLE WITH FIXING	91	15
08	0521064813	6 NOZZLES SINGLE SEED HOPPER SUPPORT		02
09	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		02
10	0531054471	CAP WITH FIXING	92	04

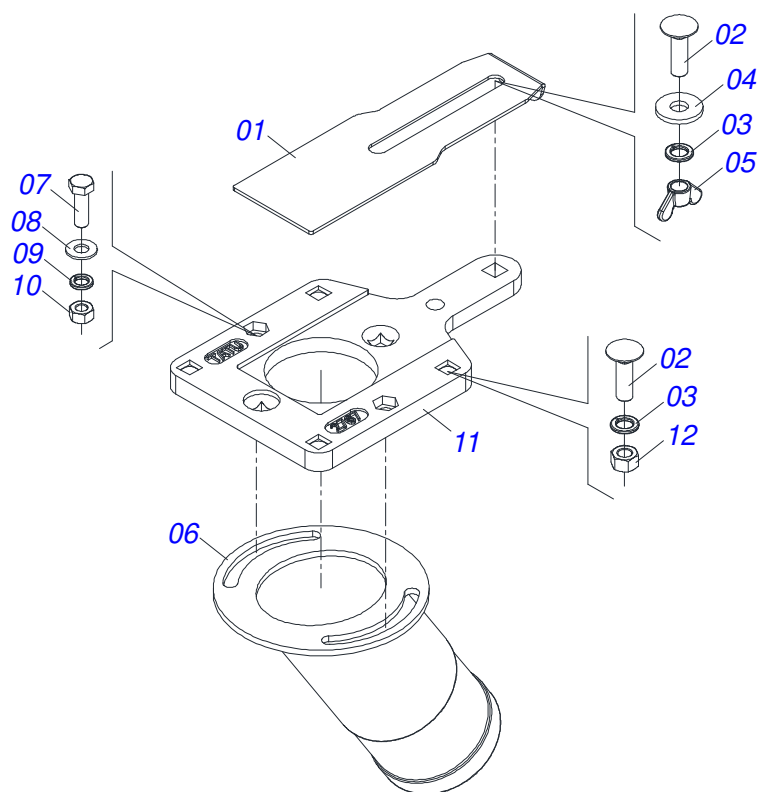


Item	Code	Description	See page	QT
01	0571015779	ARTICULATION NOZZLE SUPPORT LID	01	
02	0501010942	3/8" X 1-1/4" BOLT	05	
03	0503010025	3/8 SPRING WASHER	05	
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER	01	
05	0503010209	3/8" UNC BUTTERFLY NUT	01	
06	0521066332	CONDUCTOR WITH FLANGE	01	
07	0503010371	5/16" X 1" BOLT	02	
08	0501010694	FLAT WASHER	02	
09	0503010179	LOCK WASHER 5/16 ZN 1K01528	02	
10	0503010337	5/16" NUT	02	
11	0502012767	SEED NOZZLE FIXER SUPPORT	01	
12	0503010026	3/8" NUT	04	

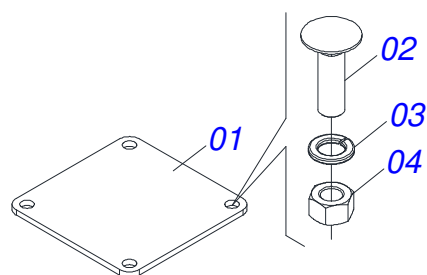


Item	Code	Description	See page	QT
01	0571015773	SUPPORT SEED		01
02	0501011643	3/8 X 1" BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04

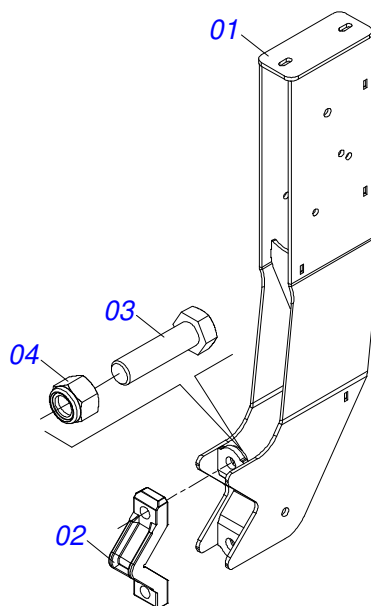


Item	Code	Description	See page	QT
01	0521066206	RIGHT HOPPER SUPPORT TOWER		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

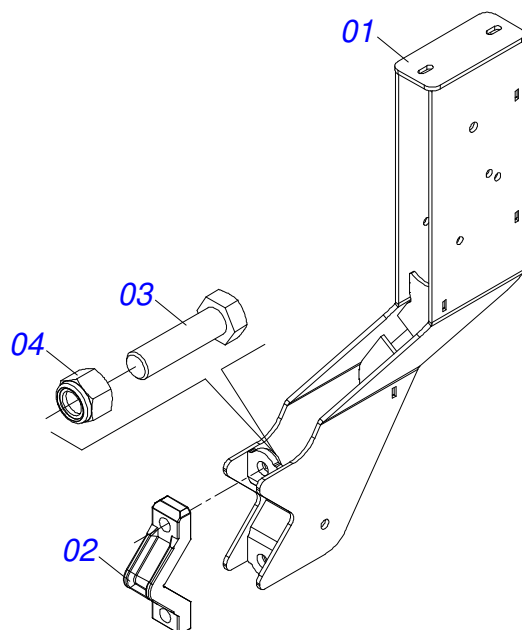


Item	Code	Description	See page	QT
01	0521066207	LEFT HOPPER SUPPORT TOWER		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

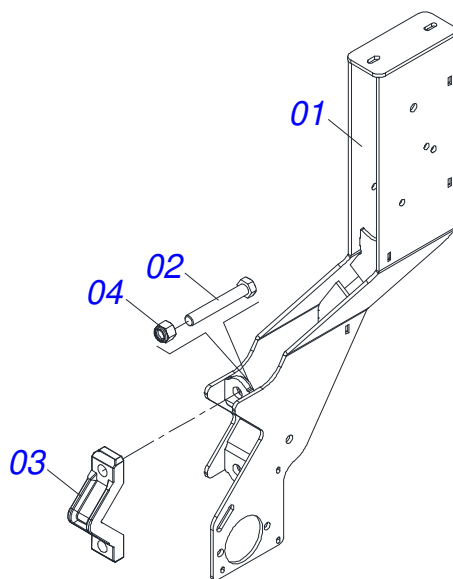


Item	Code	Description	See page	QT
01	0531062623	LEFT SUPPORT TOWER HOPPER SUPPORT		01
02	0503011084	3/4" X 5" BOLT		02
03	0502010175	HITCH CLAMP		01
04	0503011075	3/4" UNC NUT		02

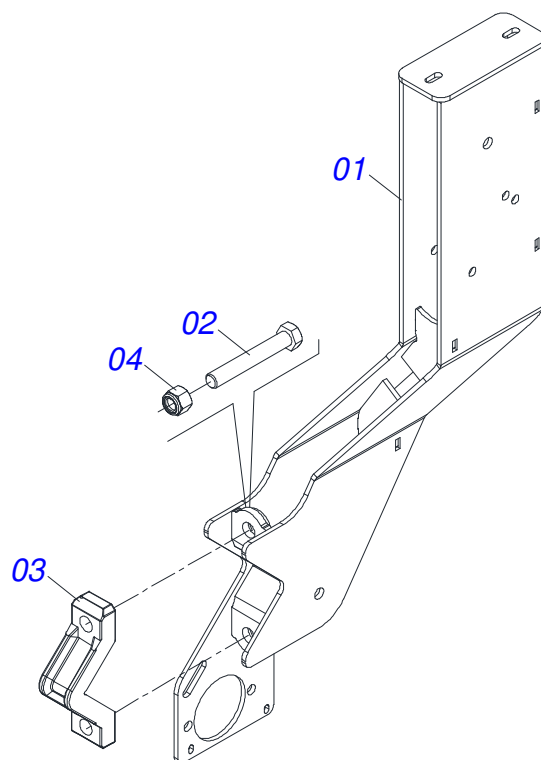


Item	Code	Description	See page	QT
01	0531062619	LEFT SUPPORT TOWER		01
02	0503011084	3/4" X 5" BOLT		02
03	0502010175	HITCH CLAMP		01
04	0503011075	3/4" UNC NUT		02

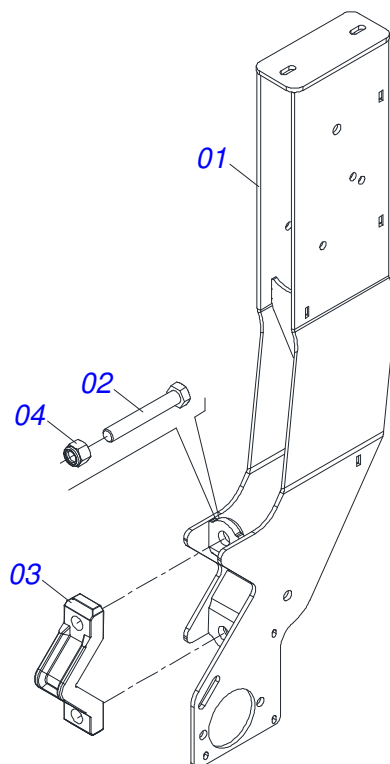


Item	Code	Description	See page	QT
01	0531062621	RIGHT SUPPORT TOWER		01
02	0503011084	3/4" X 5" BOLT		02
03	0502010175	HITCH CLAMP		01
04	0503011075	3/4" UNC NUT		02

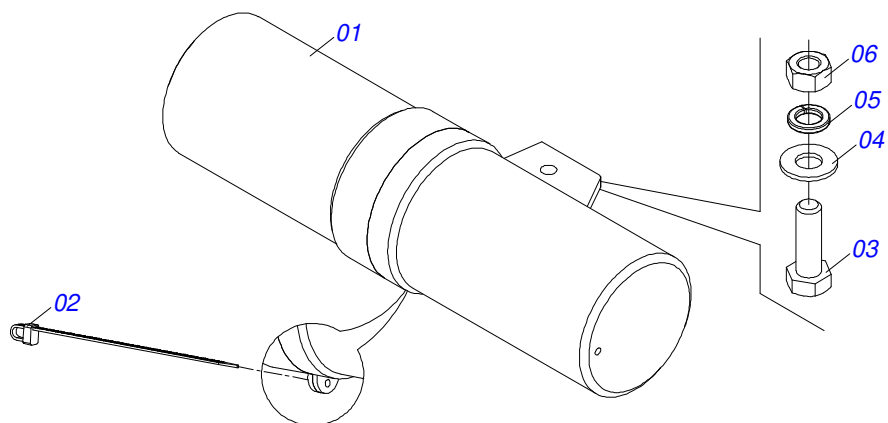


Item	Code	Description	See page	QT
01	0503060100	INSTRUCTIONS MANUAL CANISTER		01
02	0503010267	NYLON CLAMP		01
03	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
04	0501010694	FLAT WASHER		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
06	0503010337	5/16" NUT		01

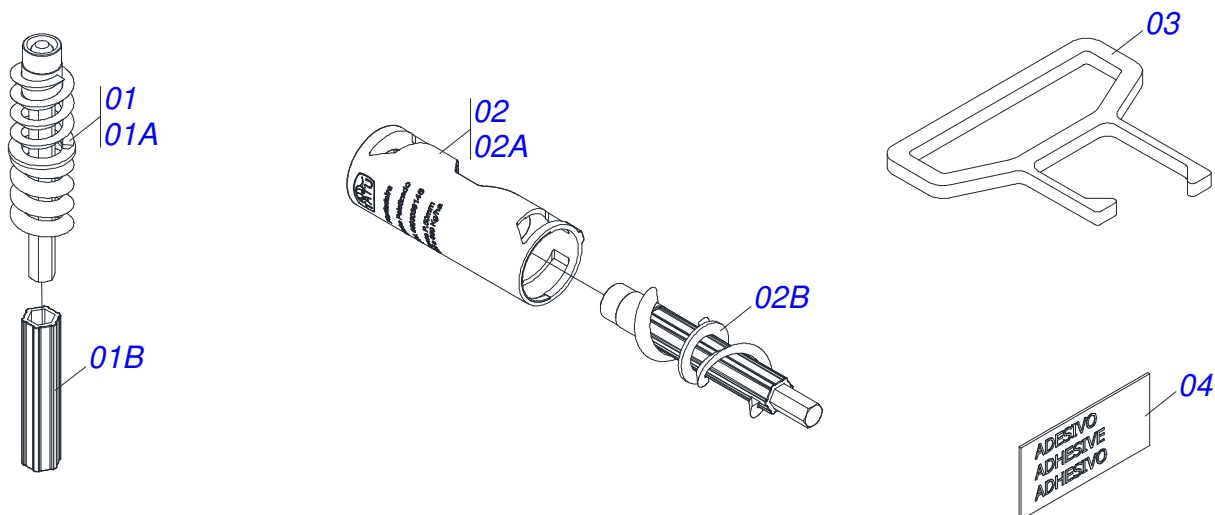


Item	Code	Description	See page	QT
01	0531058988	P.16 ENDLESS THREAD WITH COATING		15
01A	0531065012	ALPHA FERTILIZER METERING P.16MM WORM THREAD		01
01B	0503035859	SUPPORT SLEEVE		01
02	0531058992	PELLETIZED FERTILIZER KIT P.50 125 TO 650 KG/HA ALPHA		15
02A	0501111196	PELLETED FERTILIZER METERING COATING		01
02B	0531058987	ENDLESS THREAD WITH AXLE COVERING		01
03	0501214546	SPRING KEY		01
04	0503035928	ADHESIVE LABEL FERTILIZER TABLE ALPHA P16.5		01

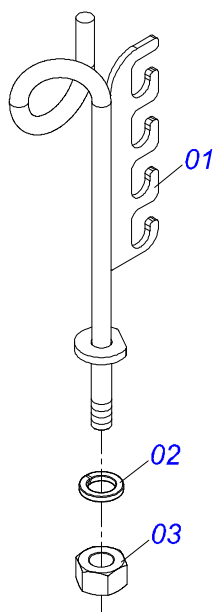


Item	Code	Description	See page	QT
01	0521065611	HOSE SUPPORT		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

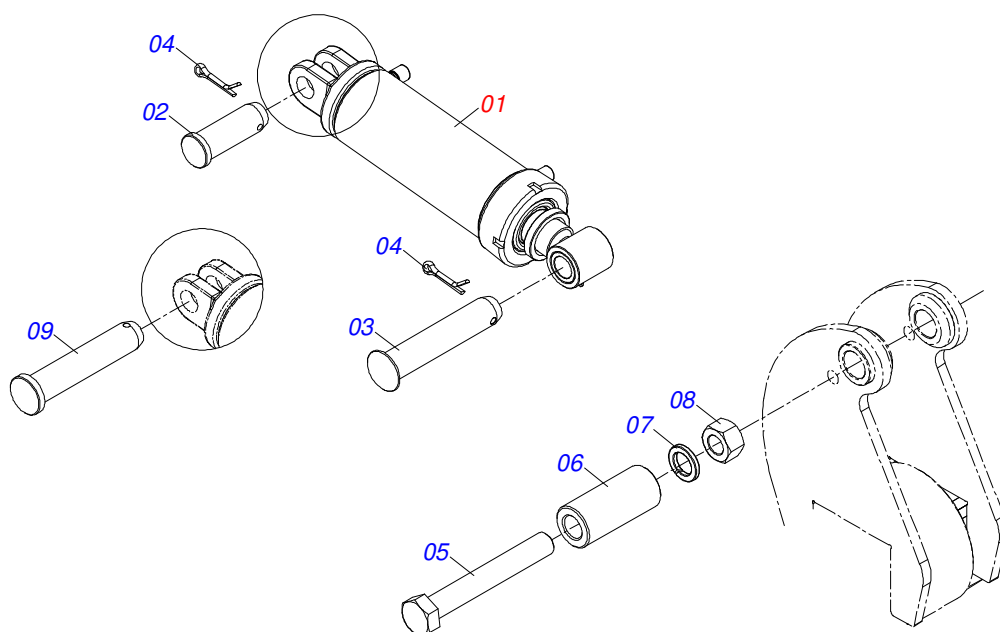


Item	Code	Description	See page	QT
01	0511058406	HYDRAULIC CYLINDER	102	03
02	0521012538	1.2" X 3.5" COUPLING SHAFT		02
03	0521015501	COUPLING SHAFT		03
04	0503010523	1/4" X 2" SPLIT PIN		06
05	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		03
06	0531012565	SLEEVE 16,3X 30 X 88		03
07	0503010027	5/8 SPRING WASHER		03
08	0503010013	5/8 NUT		03
09	0551014099	COUPLING SHAFT 31,75 X 185		01

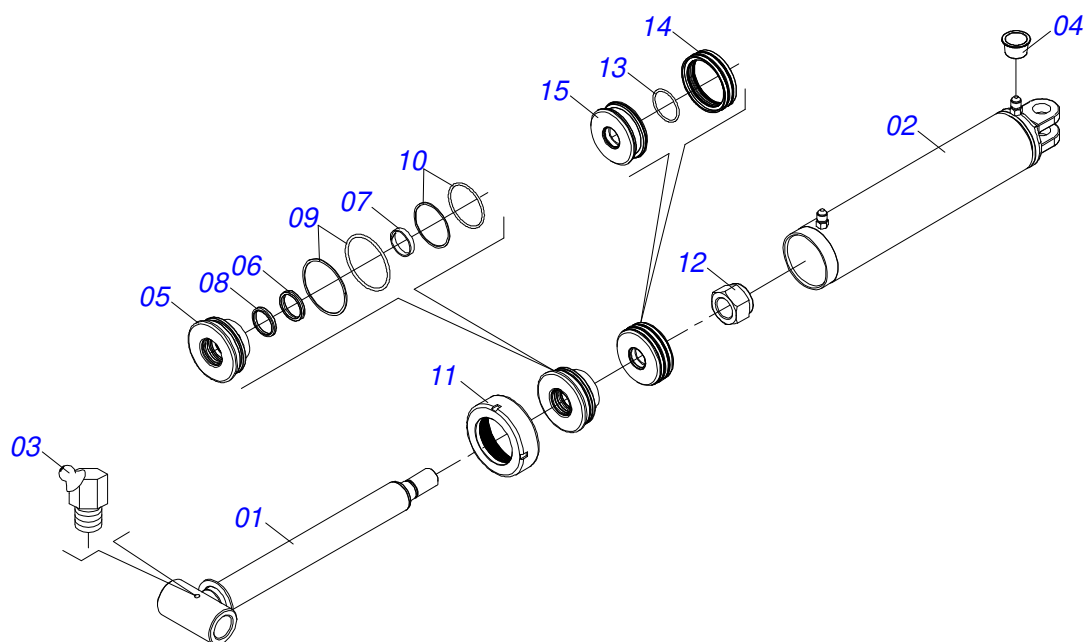

Item	Code	Description	See page	QT
01	0511064053	SLEEVE 2" X 14" TURNBUCKLE		01
02	0511064052	4" X 12.1" CYLINDER CASE		01
03	0503010003	1845 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010678	50,80 X 101 RING SUPPORT		01
06	0503015636	SCRAPER SEAL		01
07	0503018025	RING GUIDE		01
08	0503018026	1870-2000-375 B GASKET		01
09	0503010338	2-342 N 3006-9B O-RING		02
10	0503011061	8-342 BACK-UP RING		02
11	0502012822	101.60 END CAP		01
12	0503010817	1.1/4" SELF LOCKING NUT		01
13	0503010345	2-218 N 3006-9B O-RING		01
14	0503015633	SELEMASTER SEALING		01
15	0502012842	50,80 X 101,60 PISTON		01
16	0511032511	ASSY CYLINDER REPAIR KIT 50.8X101.6		01

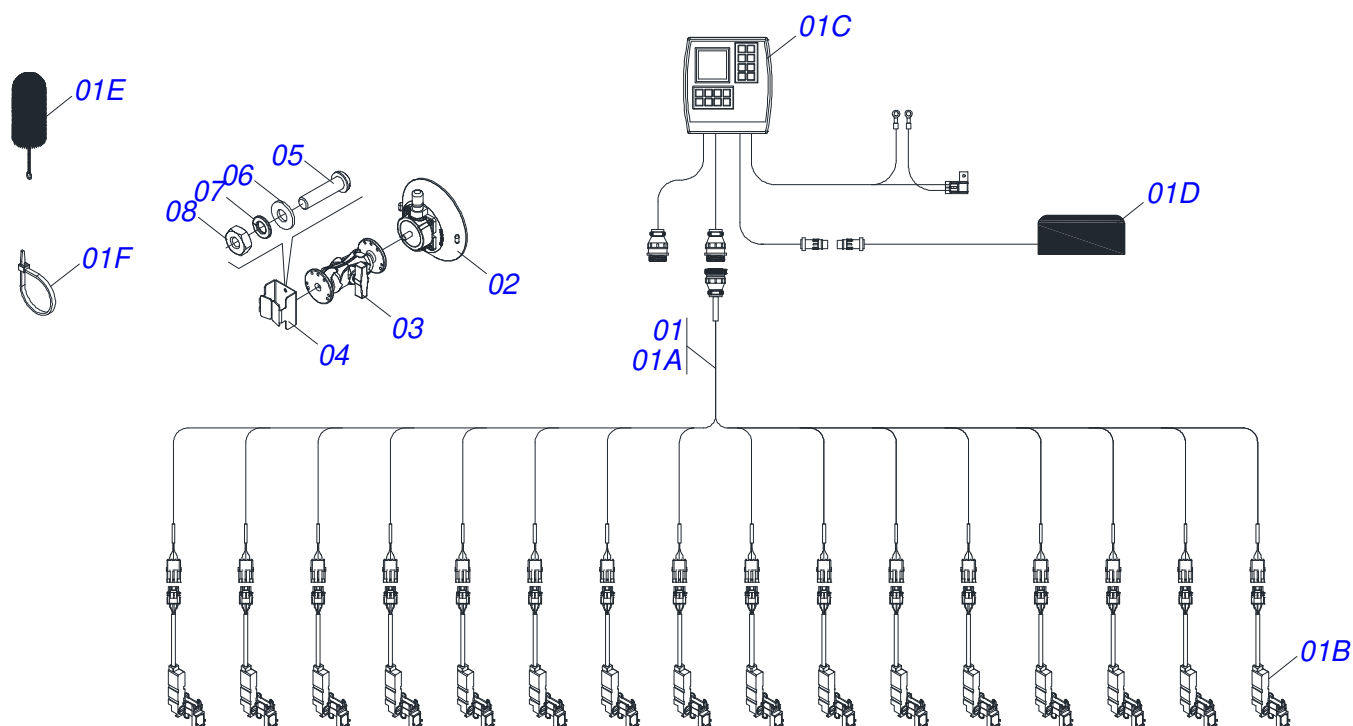

Item	Code	Description	See page	QT
01	0503063728	010072449 16 ROWS 450/500 SEED MONITORING SET		01
01A	0513010274	020011377 16 ROWS CABLE FOR MESH SEED		01
01B	0503019100	SENSOR		16
01C	0503017602	MONITOR PLANT PM400		01
01D	0503017443	ANTENNA GPS PM 400		01
01E	0503017031	CLEANING BRUSH		01
01F	0503019720	NYLON CLAMP		01
02	0503016234	TRIMBLE FIXING WINDOW		01
03	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
04	0571012196	MOUNTING BRACKET PM 400		01
05	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
06	0503010669	FLAT WASHER		02
07	0503010668	3/16" SPRING WASHER		02
08	0503010667	3/16" NUT		02

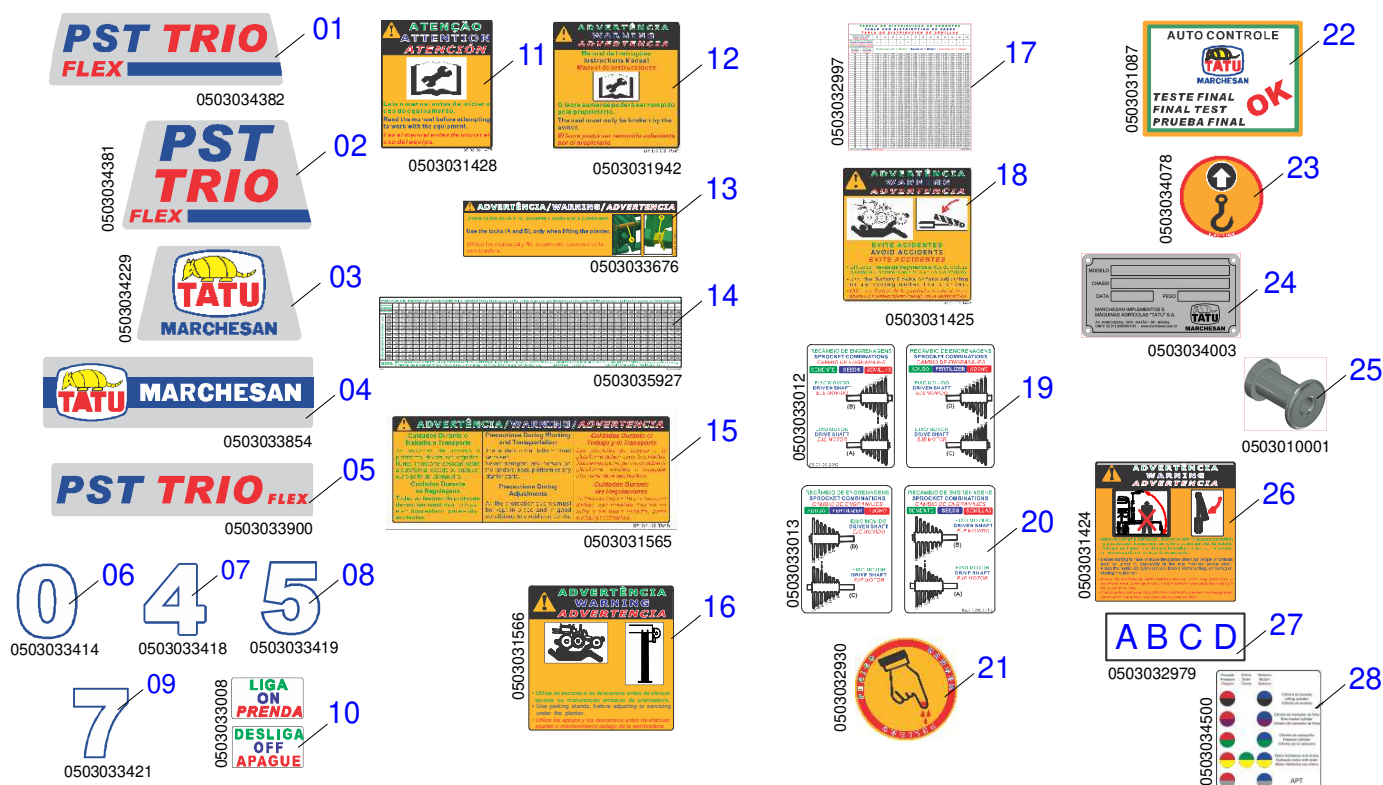


Item	Code	Description	See page	QT
01	0503034382	LABEL ADHESIVE PST TRIO FLEX (04 MOUTHS)		01
02	0503034381	ADHESIVE LABEL PST TRIO FLEX LOWER (05 MOUTH)		02
03	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 NOZZLES)		02
04	0503033854	ADHESIVE LABEL		01
05	0503033900	ADHESIVE LABEL		02
06	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING		02
07	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
08	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
09	0503033421	ADHESIVE LABEL 7 NUMBER FOR PLANTING		02
10	0503033008	ADHESIVE LABEL		02
11	0503031428	READ MANUAL DECAL		01
12	0503031942	ADHESIVE LABEL		01
13	0503033676	WARNING LABEL ADHESIVE SEAL LOCK AXIS		02
14	0503035927	ADHESIVE LABEL TABLE FERTILIZER P27		02
15	0503031565	ADHESIVE LABEL CARE		02
16	0503031566	ADHESIVE LABEL		02
17	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
18	0503031425	ADHESIVE LABEL ATTENTION		02
19	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
20	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
21	0503032930	ADHESIVE LABEL DANGER		08
22	0503031087	ADHESIVE LABEL		01
23	0503034078	LIFTING POINTS DECAL		03
24	0503034003	SERIAL NUMBER TAG 61 X 118		01
25	0503010001	3.2 X 5.5 RIVET		04
26	0503031424	ADHESIVE LABEL ATTENTION ROW HYDRAULIC MARKER		02
27	0503032979	ADHESIVE LABEL LETTERS A B C D		02



**PST TRIO FLEX TITANIUM - FRAME 7450 - CSU - (FROM
APLHA LABEL SET - 7450**

Page 104
0531057638

Item	Code	Description	See page	QT
28	0503034500	ADHESIVE LABEL		01

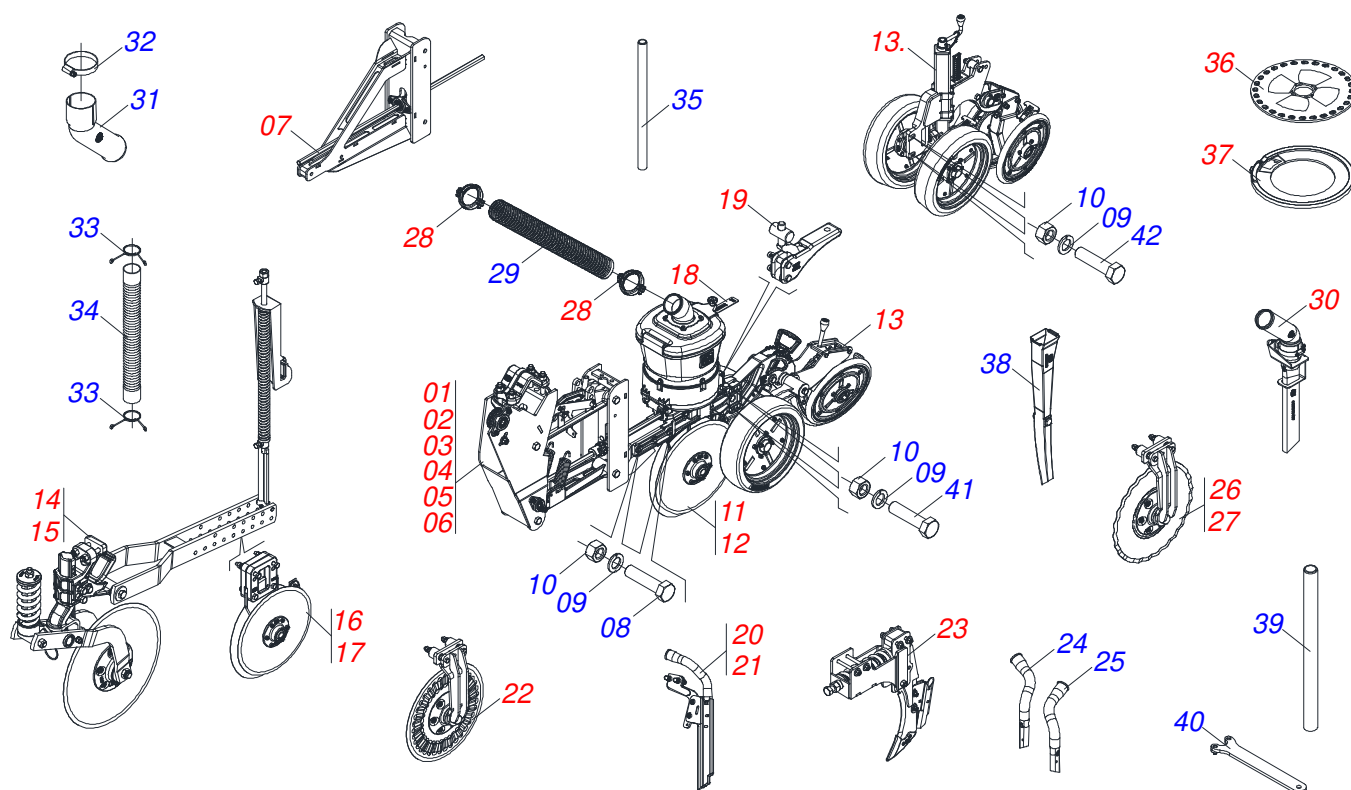


Item	Code	Description	See page	QT
01	0521053227	FRONT LEFT SHORT SEED ROW	106	01
02	0521053230	FRONT RIGHT SHORT SEED ROW	107	01
03	0521053228	FRONT LEFT LONG SEED ROW	108	01
04	0521053229	FRONT RIGHT LONG SEED ROW	109	01
05	0521054737	FRONT SEMI-ASSEMBLED LONG LEFT SEED ROW	110	01
06	0521054736	FRONT SEMI-ASSEMBLED OF LONG RIGHT SEED ROW	111	01
07	0511059333	SEMI-ASSEMBLED MECHANICAL FRAME	121	01
08	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
09	0503010019	1/2" SPRING WASHER		04
10	0503010060	1/2 UNC G.5 ZN HEX NUT		04
11	0521054771	LEFT REAR SEED ROW	124	01
12	0521054770	RIGHT REAR SEED ROW	125	01
13	0521055053	DEPTH/COMPACTOR SYSTEM - SPCRR	135	01
13.	0521054758	CONTROL DEPTH WITH REGULATOR	146	01
14	0521054811	FERTILIZER SHORT ROW	156	01
15	0521054812	LONG FERTILIZER ROW	157	01
16	0521054769	LEFT DDD FERTILIZER WITH SUPPORT	163	01
17	0521054768	RIGHT DDD FERTILIZER WITH SUPPORT	165	01
18	0531055312	TITANIUM SINGLE SEED SYSTEM	167	01
19	0511052024	FAST CLOSING SET	171	01
20	0531050666	LEFT SINGLE DISC CONDUCTOR ASSEMBLY	172	01
21	0531050667	SINGLE RIGHT DISC CONDUCTOR ASSEMBLY	173	01
22	0531050801	SUPPORT WITH 18" B RIBBED DISC BLADE	174	01
23	0521053947	AUTOMATIC DISARMING ROD	176	01
24	0581010082	FERTILIZER SOCKET RIGHT		01
25	0581010083	FERTILIZER SOCKET LEFT		01
26	0521054912	RIGHT SUPPORT WITH DOC 18	179	01
27	0521054913	LEFT SUPPORT WITH DOC 18	181	01
28	0531050237	SEED CONDUCTOR FIXER 3 CSU RIGHT	183	01
29	0531059865	RIGHT SEED CONDUCTOR WITH PROTECTION		01
30	0521050168	MOUNTED FERTILIZER CONDUCTOR	184	01



**PST TRIO FLEX TITANIUM - FRAME 7450 - CSU - (FROM
FERTILIZER/SEED ROW**


Page 105
0909096543

Item	Code	Description	See page	QT
31	0503031050	CURVED CONDUCTOR		01
32	0503010246	CLAMP		01
33	0503031076	2" HOSE CLAMP		01
34	0503031145	2" X 2" X 20" HOSE		01
35	0531013600	PRESS ADJUSTMENT LEVER		01
36	0503062066	DISC SET WITH CORN RING	185	01
37	0503062067	DISC SET / RING SOY 90F TITANIUM	186	01
38	0503033672	NOZZLE WITHOUT TITANIUM		01
39	0521018501	TURNBUCKLE LEVER		01
40	0521068982	DISC BLADE HUB KEY		01
41	0503010905	1/2" X 2-1/4" BOLT		02
42	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02

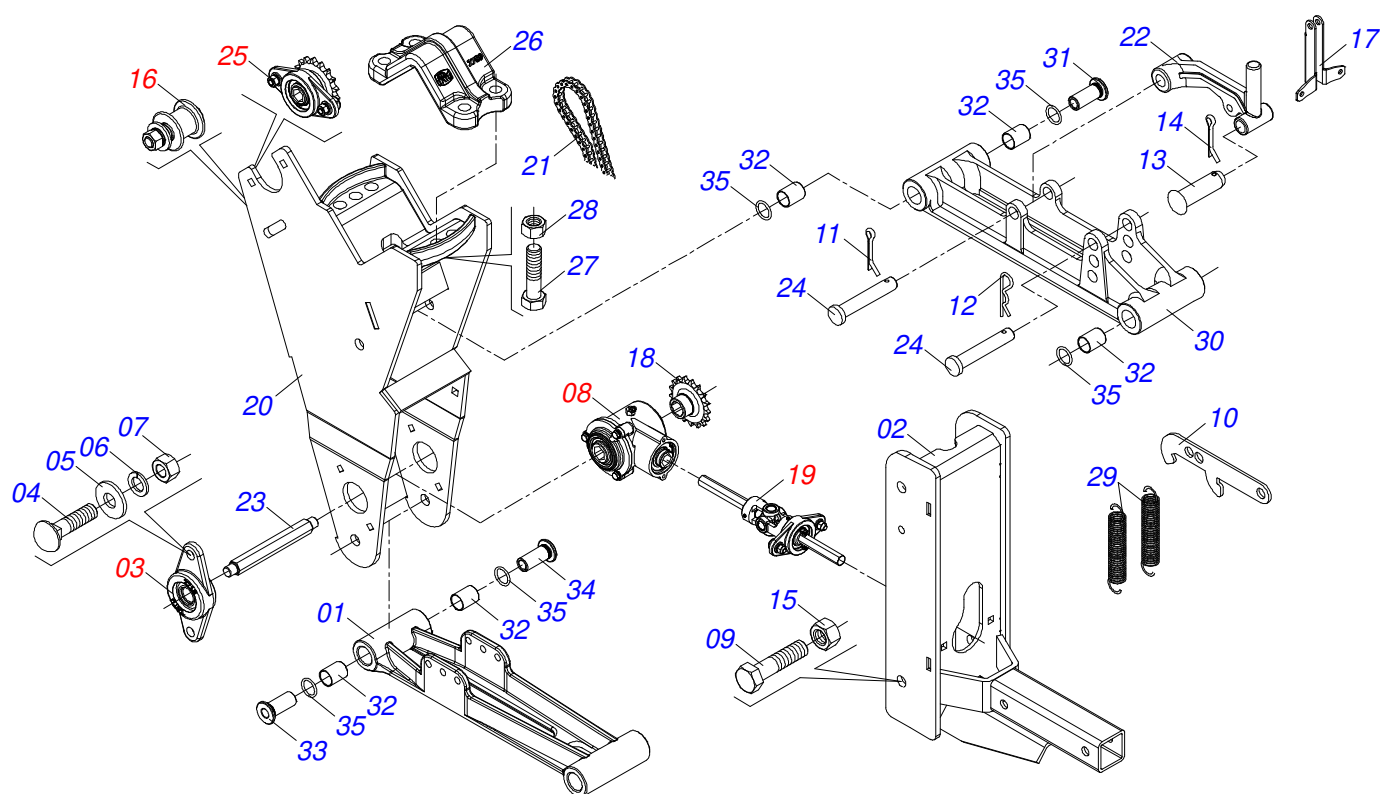

Item	Code	Description	See page	QT
01	0502012910	SEED ROW LOWER ARM WITHOUT LUBRICATION		01
02	0521061427	SHORT SEED ROW FRAME		01
03	0521055213	SEED ROW BEARING	112	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED ROW TRANSMISSION HUB	113	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8" UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	114	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	115	01
20	0521064651	LEFT SEED ROW SUPPORT FRONT		01
21	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME ROW		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	119	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED ROW		01
31	0581017624	SPACING SLEEVE		06

Item	Code	Description	See page	QT
32	0503019273	AUTO LUBRICANT SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE SLEEVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

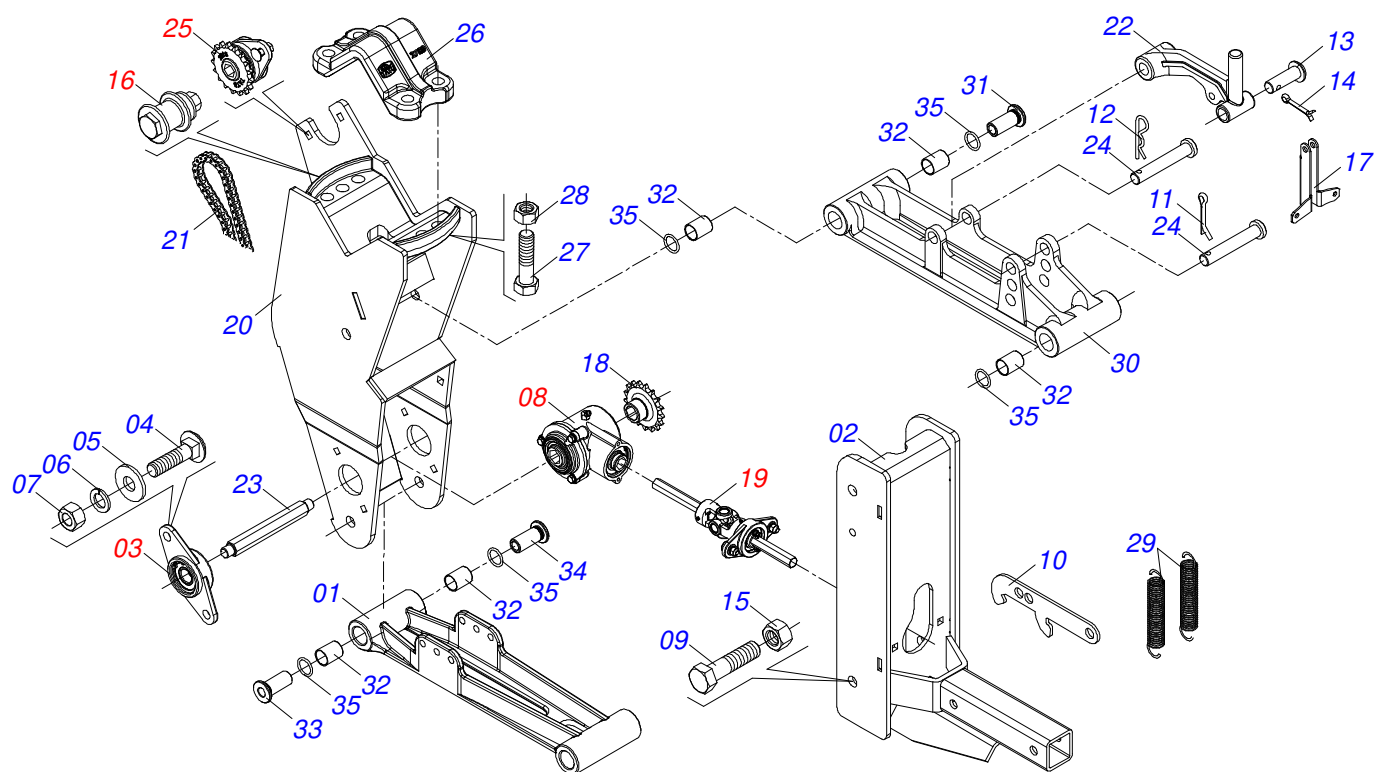


Item	Code	Description	See page	QT
01	0502012910	SEED ROW LOWER ARM WITHOUT LUBRICATION		01
02	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
03	0521055213	SEED ROW BEARING	112	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED ROW TRANSMISSION HUB	113	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8" UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	114	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	115	01
20	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
21	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME ROW		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	119	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED ROW		01
31	0581017624	SPACING SLEEVE		06



**PST TRIO FLEX TITANIUM - FRAME 7450 - CSU - (FROM
FRONT RIGHT SHORT SEED ROW**

Page 107
0521053230

Item	Code	Description	See page	QT
32	0503019273	AUTO LUBRICANT SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE SLEEVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

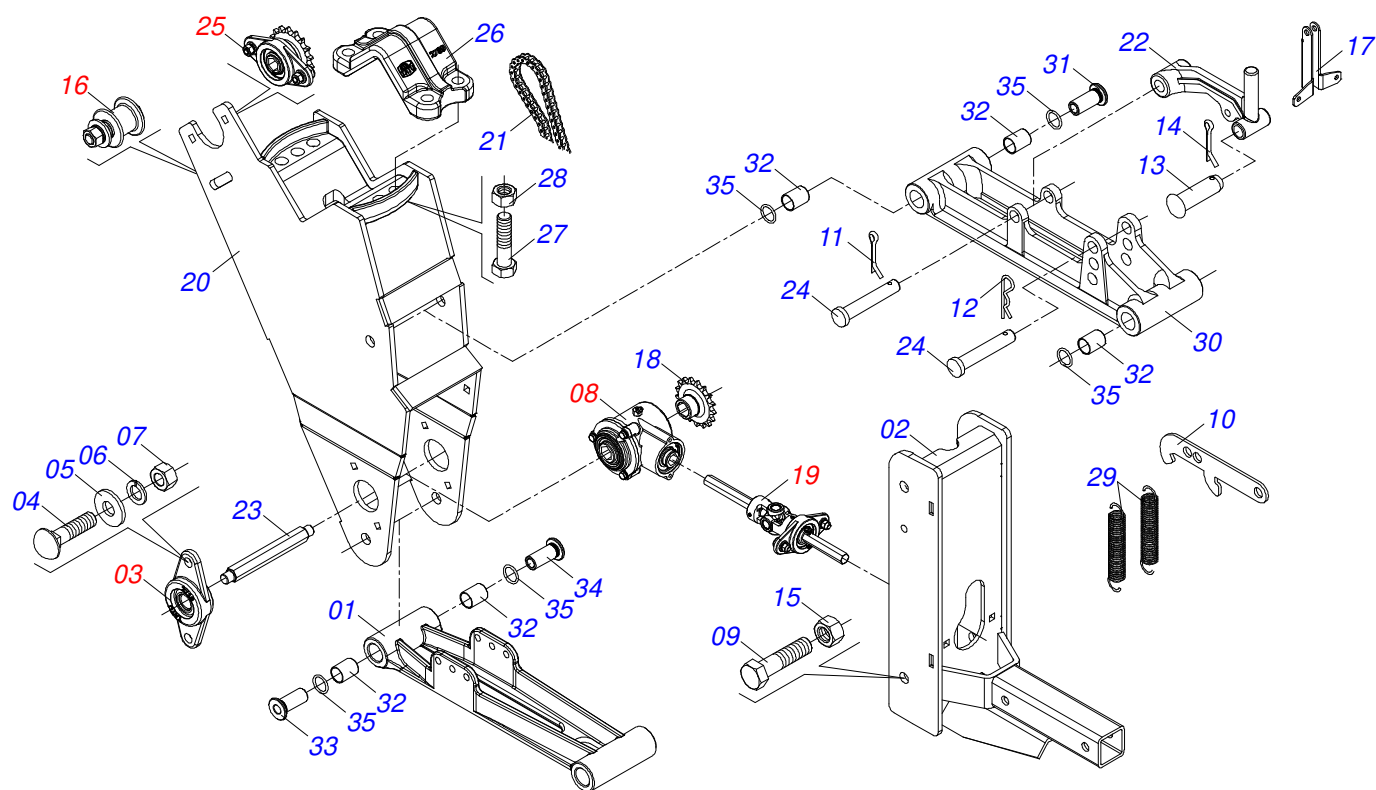


Item	Code	Description	See page	QT
01	0502012910	SEED ROW LOWER ARM WITHOUT LUBRICATION		01
02	0521061427	SHORT SEED ROW FRAME		01
03	0521055213	SEED ROW BEARING	112	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED ROW TRANSMISSION HUB	113	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8" UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	114	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	115	01
20	0521064650	LEFT SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME ROW		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	119	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED ROW		01
31	0581017624	SPACING SLEEVE		06



**PST TRIO FLEX TITANIUM - FRAME 7450 - CSU - (FROM
FRONT LEFT LONG SEED ROW**

Page 108
0521053228

Item	Code	Description	See page	QT
32	0503019273	AUTO LUBRICANT SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE SLEEVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

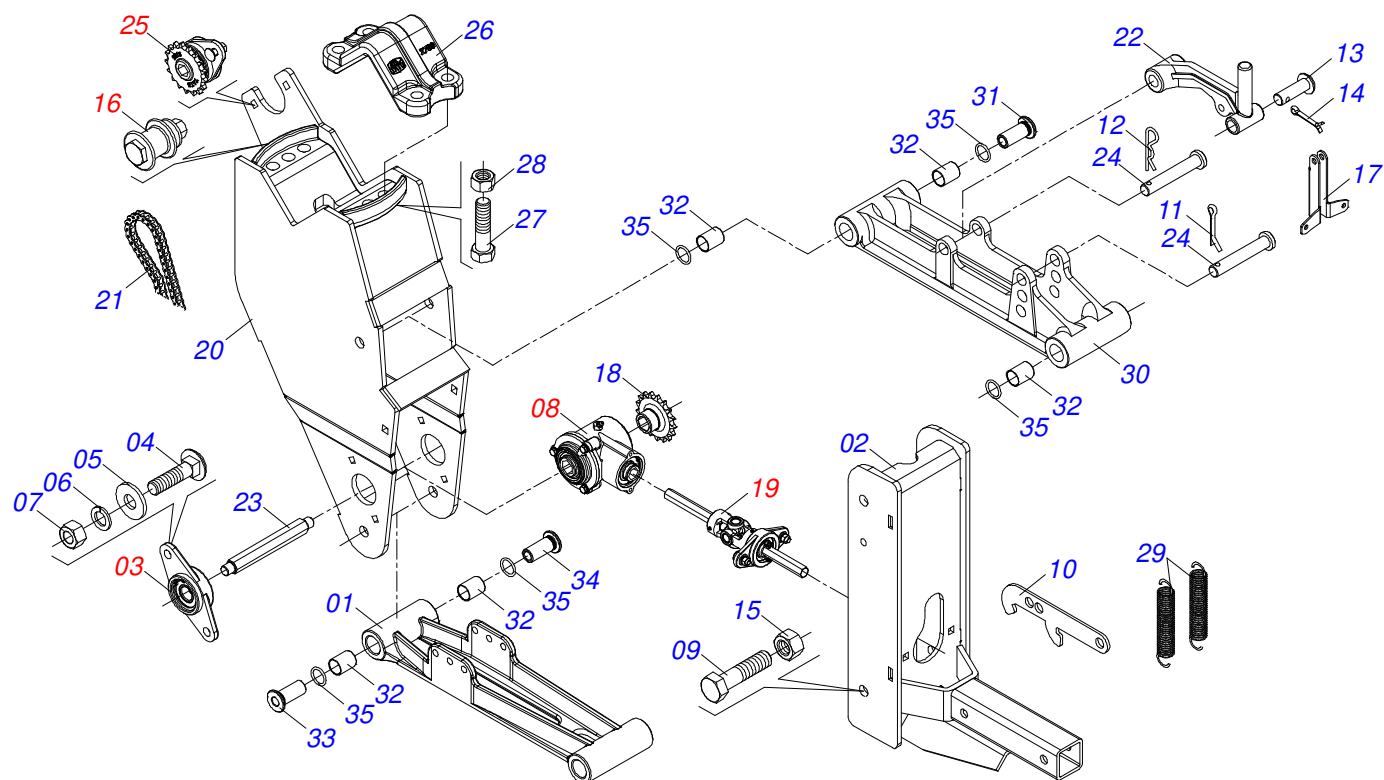


Item	Code	Description	See page	QT
01	0502012910	SEED ROW LOWER ARM WITHOUT LUBRICATION		01
02	0521061427	SHORT SEED ROW FRAME		01
03	0521055213	SEED ROW BEARING	112	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED ROW TRANSMISSION HUB	113	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8" UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	114	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	115	01
20	0521064652	RH SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME ROW		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	119	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED ROW		01
31	0581017624	SPACING SLEEVE		06



PST TRIO FLEX TITANIUM - FRAME 7450 - CSU - (FROM
FRONT RIGHT LONG SEED ROW

Page 109
0521053229

Item	Code	Description	See page	QT
32	0503019273	AUTO LUBRICANT SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE SLEEVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

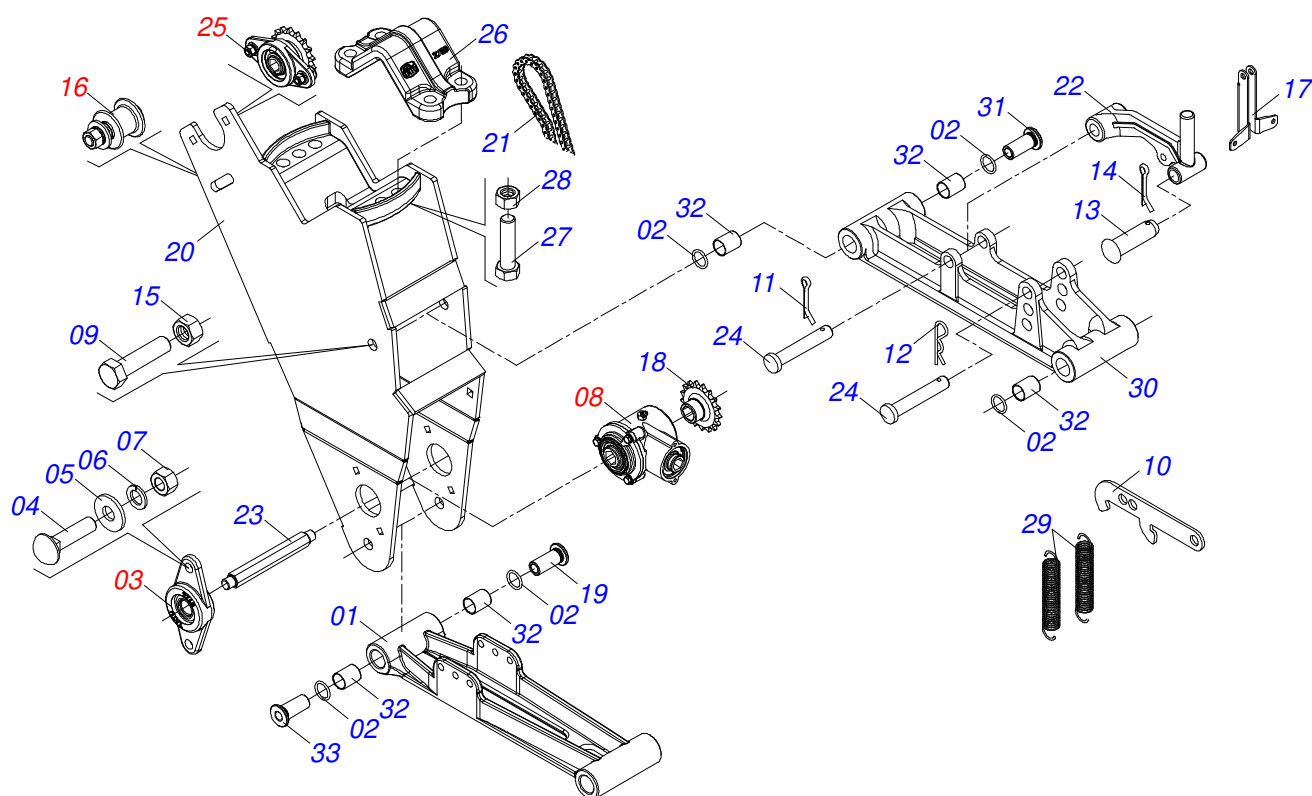


Item	Code	Description	See page	QT
01	0502012910	SEED ROW LOWER ARM WITHOUT LUBRICATION		01
02	0503010045	O'RING		08
03	0521055213	SEED ROW BEARING	112	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED ROW TRANSMISSION HUB	113	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8" UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	114	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0581017625	SMALLER SPACE SLEEVE LOWER ARM WITHOUT LUBRICATION		01
20	0521064650	LEFT SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME ROW		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	119	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED ROW		01
31	0581017624	SPACING SLEEVE		06



**PST TRIO FLEX TITANIUM - FRAME 7450 - CSU - (FROM
FRONT SEMI-ASSEMBLED LONG LEFT SEED ROW**

Page 110
0521054737

Item	Code	Description	See page	QT
32	0503019273	AUTO LUBRICANT SLEEVE		08
33	0581017626	SPACER		01

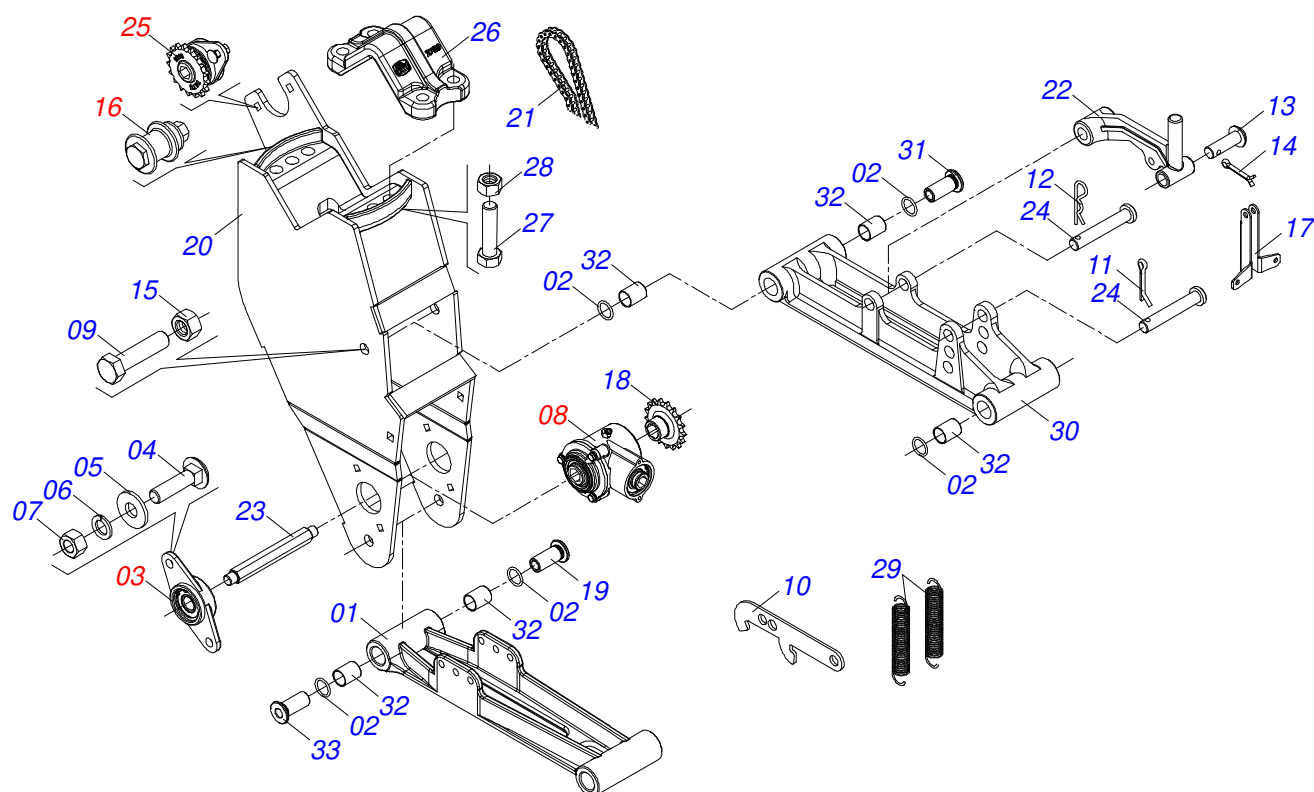


Item	Code	Description	See page	QT
01	0502012910	SEED ROW LOWER ARM WITHOUT LUBRICATION		01
02	0503010045	O'RING		08
03	0521055213	SEED ROW BEARING	112	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED ROW TRANSMISSION HUB	113	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8" UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	114	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0581017625	SMALLER SPACE SLEEVE LOWER ARM WITHOUT LUBRICATION		01
20	0521064652	RH SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME ROW		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	119	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED ROW		01
31	0581017624	SPACING SLEEVE		06




**PST TRIO FLEX TITANIUM - FRAME 7450 - CSU - (FROM
FRONT SEMI-ASSEMBLED OF LONG RIGHT SEED ROW**

Page 111
0521054736


Item	Code	Description	See page	QT
32	0503019273	AUTO LUBRICANT SLEEVE		08
33	0581017626	SPACER		01

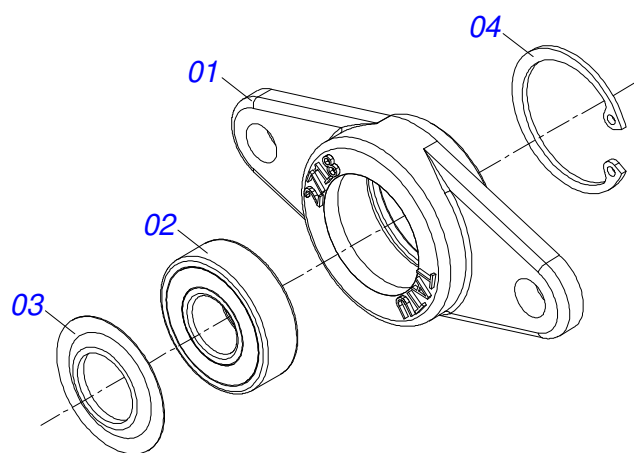


Item	Code	Description	See page	QT
01	0502012718	ROW BEARING		01
02	0503019355	BEARING 6202 2RS1		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

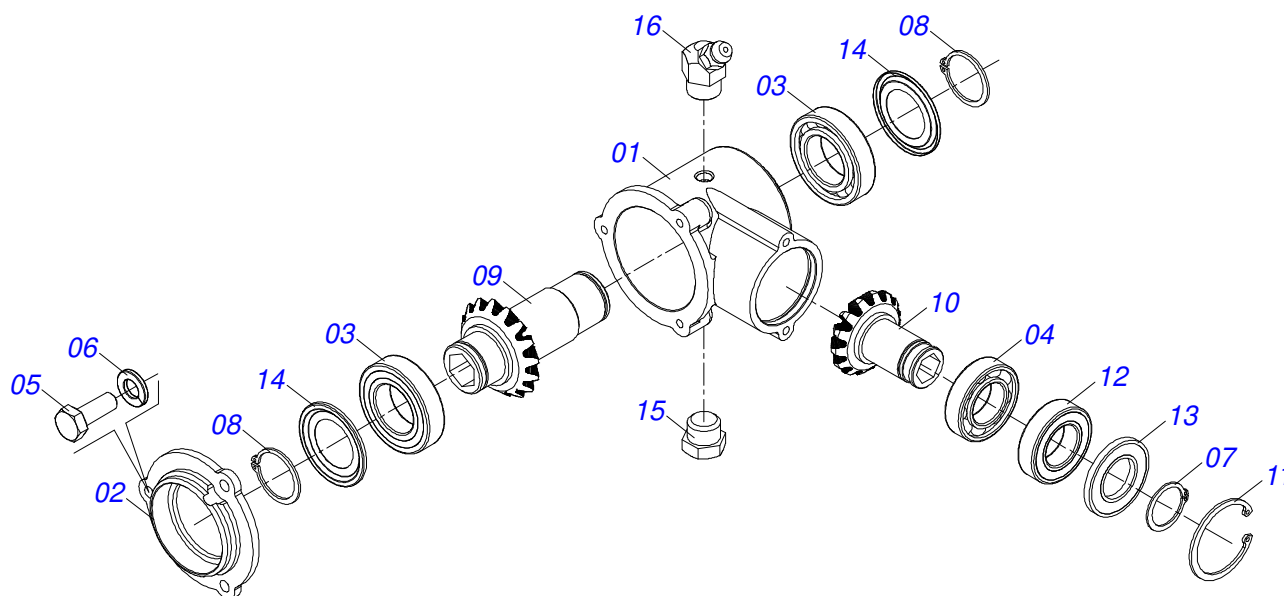


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503019361	BEARING 6006 RS1		02
04	0503019363	BEARING 6005		01
05	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
06	0503010143	1/4" SPRING WASHER		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503019362	BEARING 6005 RS1		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01

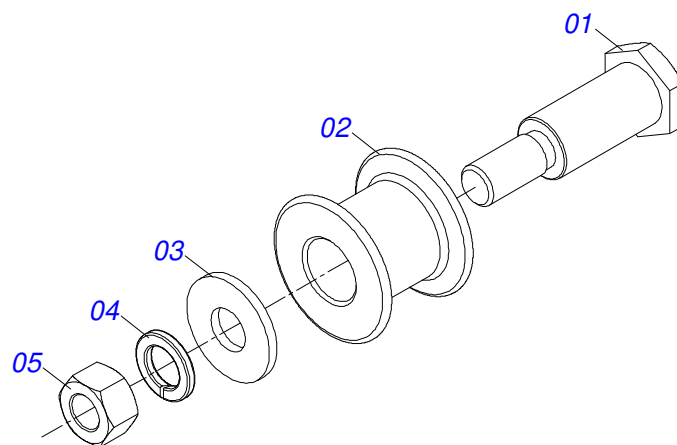


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

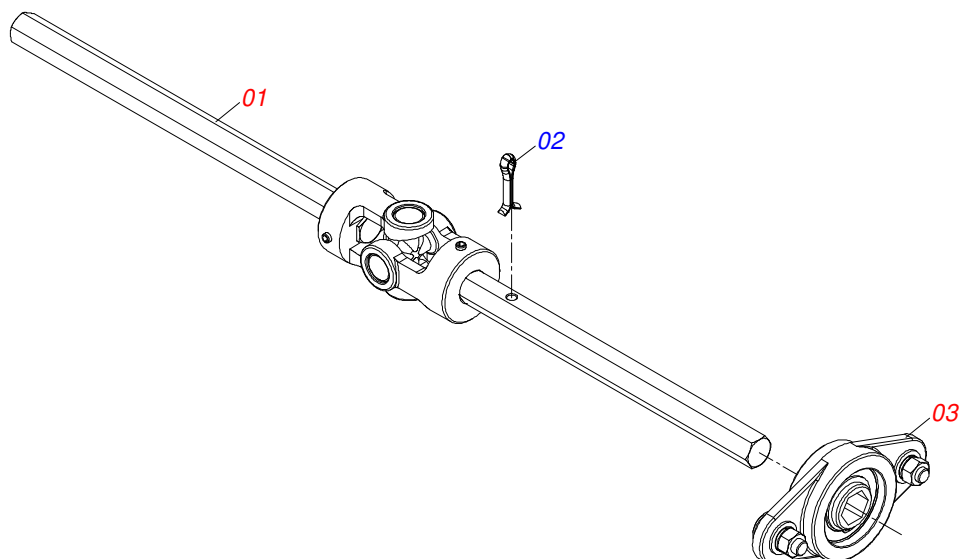


Item	Code	Description	See page	QT
01	0501059326	UNIVERSAL JOINT AXLE	116	01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0521055227	BEARING SHAFT HEX	117	01

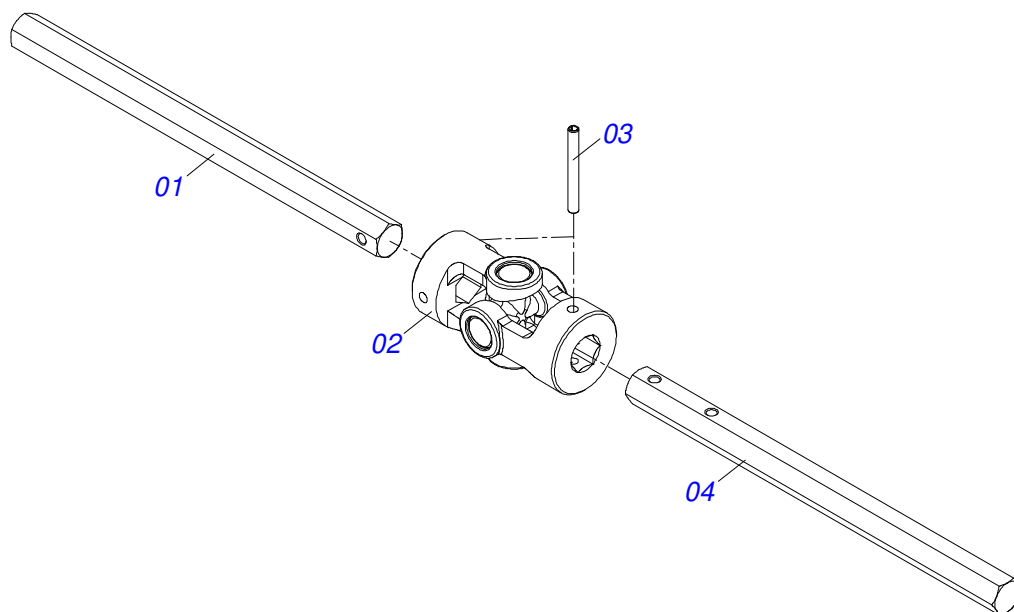


Item	Code	Description	See page	QT
01	0561016322	5/8" HEX AXLE		01
02	0501056296	UNIVERSAL JOINT		01
03	0503011855	0.2" X 1.8" SPRING PIN		02
04	0561014794	350 AXLE HEX		01

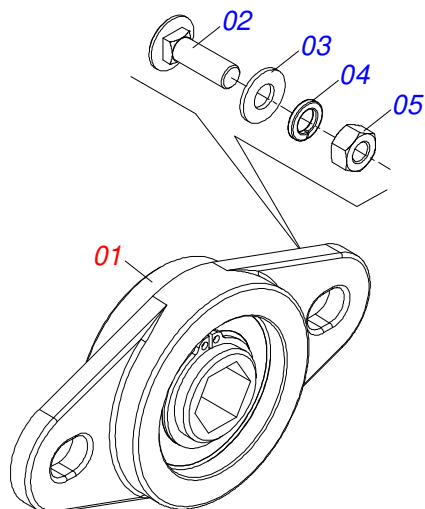


Item	Code	Description	See page	QT
01	0501059363	5/8" HEX AXLE BEARING	118	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

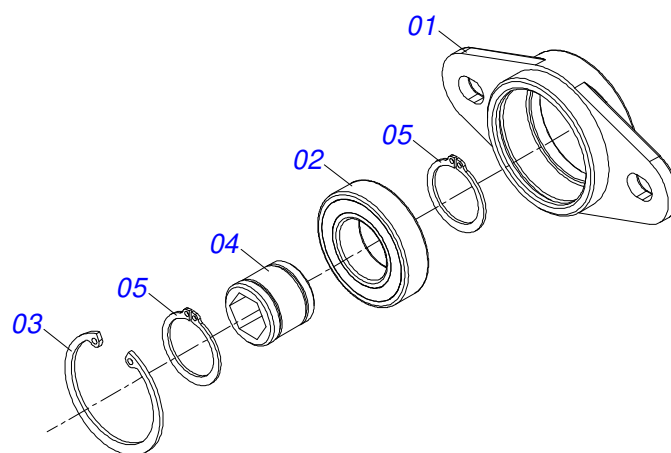


Item	Code	Description	See page	QT
01	0502011697	GEARBOX BEARING		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0561014911	5/8 HEX AXLE GUIDE SLEEVE		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		02

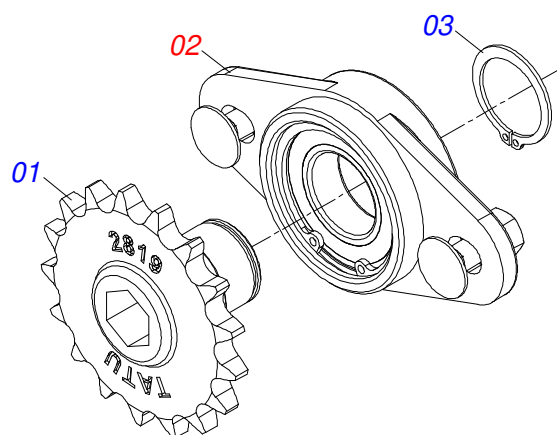


Item	Code	Description	See page	QT
01	0502012819	17Z GEAR WITH HEX HOLE		01
02	0521055220	BEARING FRONT SEED ROW	120	01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01

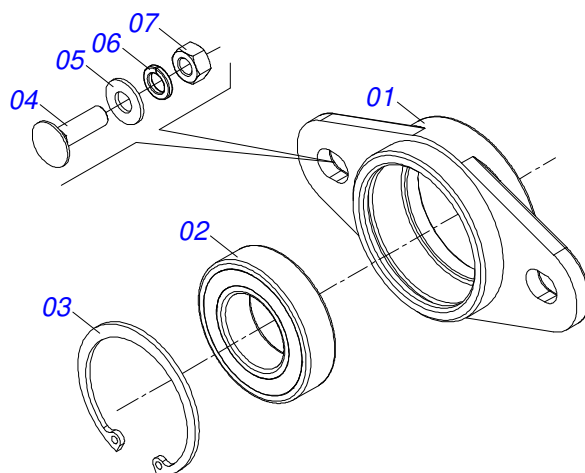


Item	Code	Description	See page	QT
01	0502011697	GEARBOX BEARING		01
02	0503019356	BEARING 6005 2RS1		01
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER		02
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

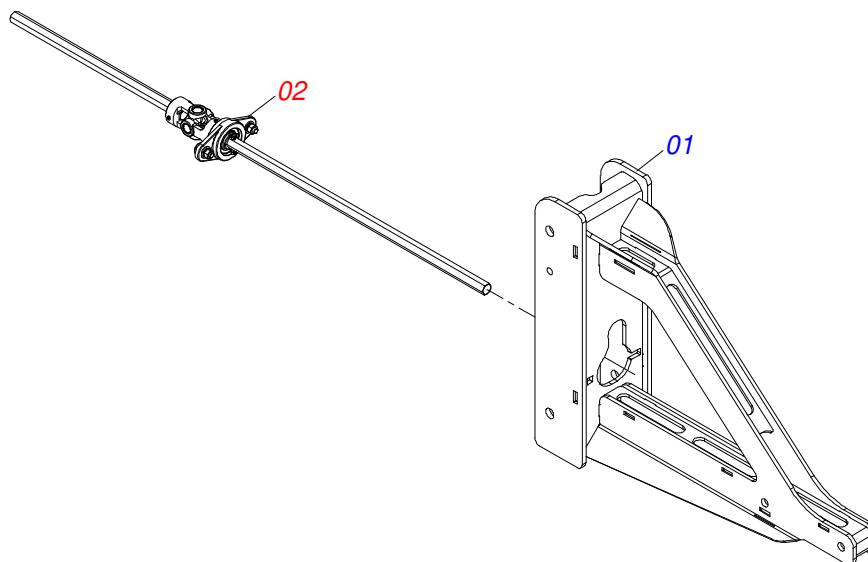


Item	Code	Description	See page	QT
01	0521066496	FRAME MECHANICAL CENTRAL SEED ROW		01
02	0511059334	BEARING WITH LONG FRONT AXLE	122	01

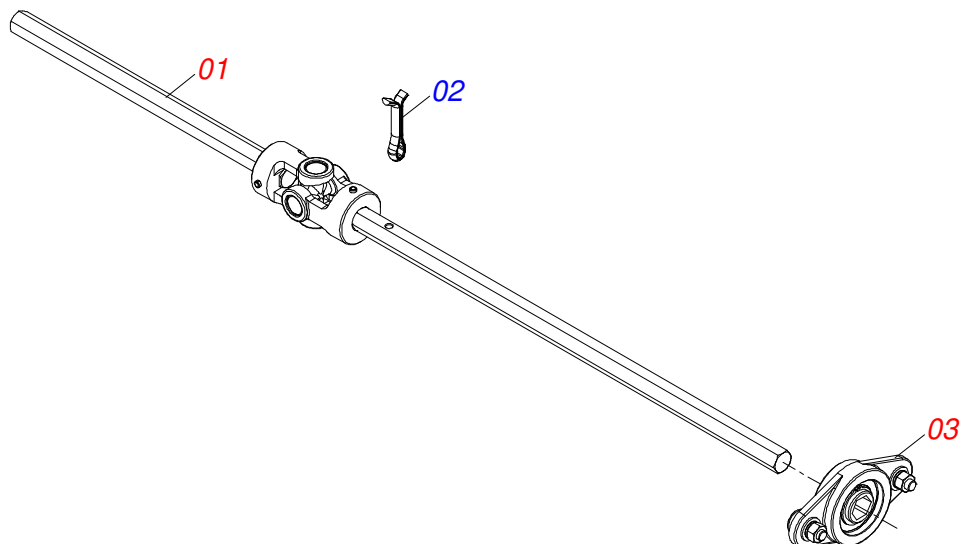


Item	Code	Description	See page	QT
01	0511058143	UNIVERSAL JOINT AXLE	123	01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0521055227	BEARING SHAFT HEX	117	01

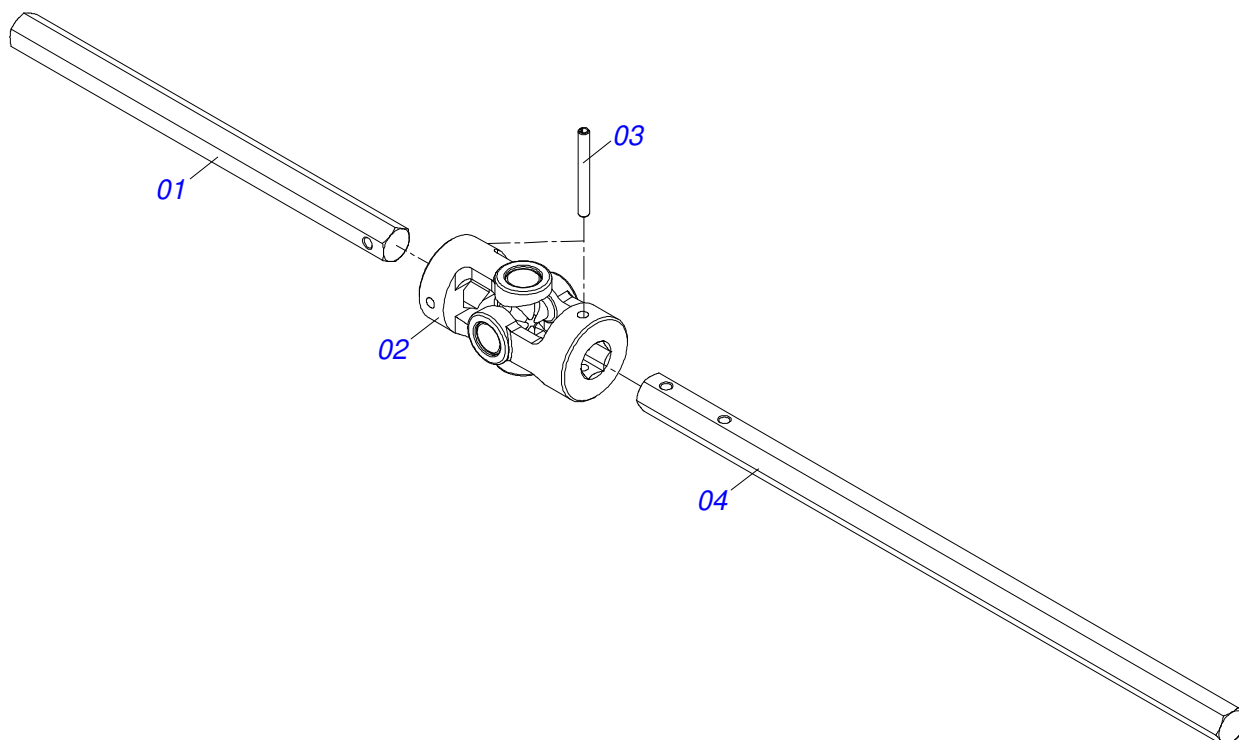


Item	Code	Description	See page	QT
01	0561014794	350 AXLE HEX		01
02	0501056296	UNIVERSAL JOINT		01
03	0503011855	0.2" X 1.8" SPRING PIN		02
04	0581010483	HEX AXLE		01

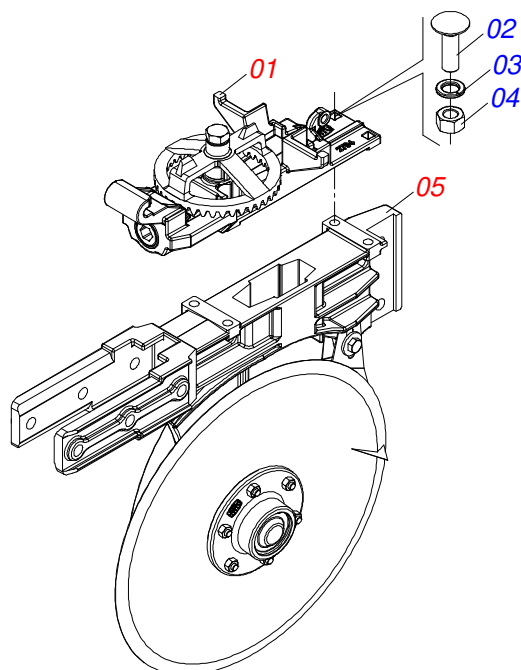


Item	Code	Description	See page	QT
01	0521054818	BASE 5/8 FIXATION WITHOUT ASSY LUBRICATION	126	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0521055871	LEFT DOUBLE DISC SEED 15 X 15	127	01

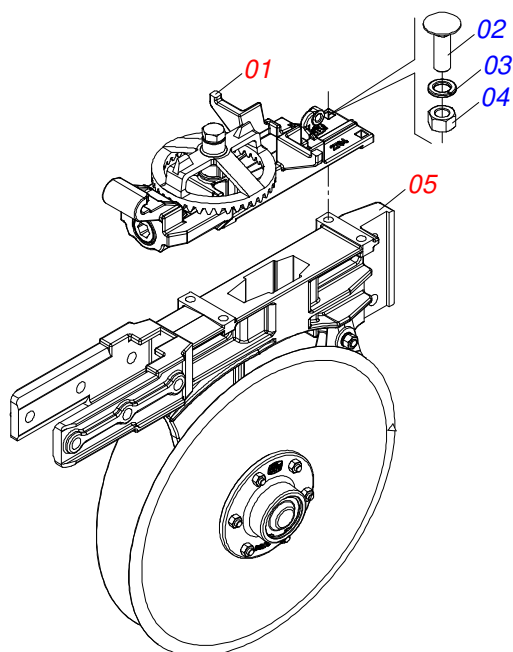


Item	Code	Description	See page	QT
01	0521054818	BASE 5/8 FIXATION WITHOUT ASSY LUBRICATION	126	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0521055870	RIGHT DOUBLE DISC SEED 15 X 15	129	01

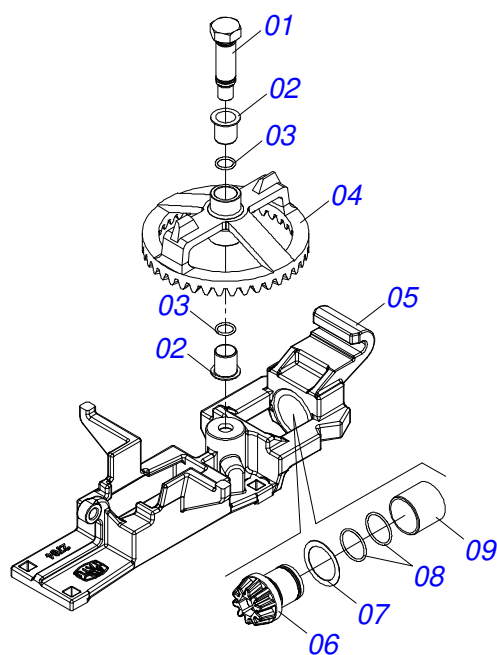


Item	Code	Description	See page	QT
01	0581019201	CROWN SHAFT		01
02	0503019340	LUBRICANT SLEEVE		02
03	0503011030	2-014 N 3006-9B O'RING		02
04	0581019200	CONICA 40Z GEAR		01
05	0581019199	FIXED BASE		01
06	0581019202	10Z X 5/8" CONICAL PINION		01
07	0501013354	FLAT WASHER		01
08	0503010410	RING		02
09	0503019341	LUBRICANT SLEEVE		01

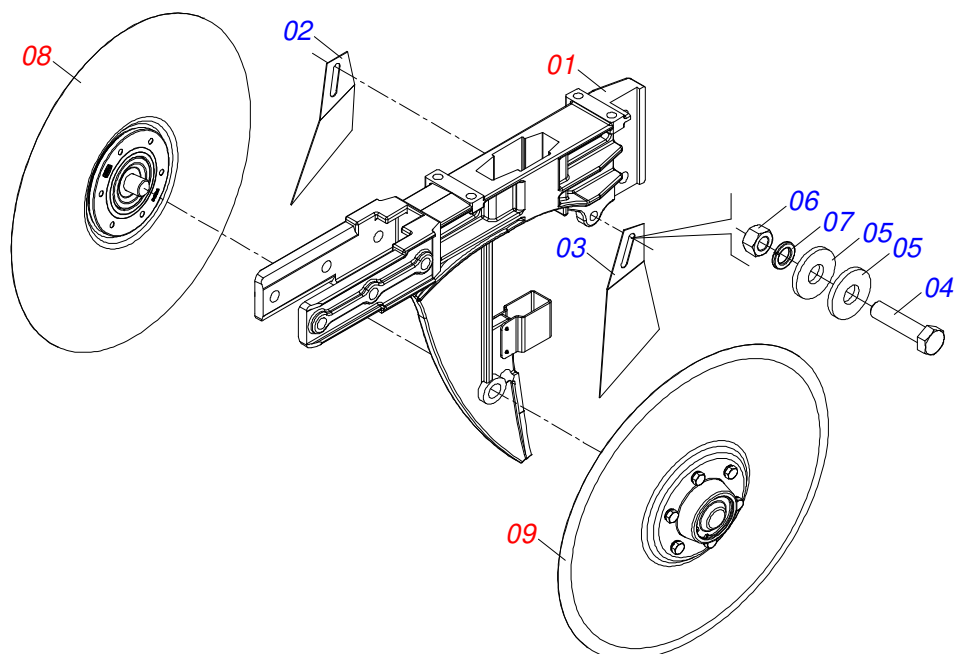


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE	128	01
02	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
03	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
06	0503010026	3/8" NUT		01
07	0503010025	3/8 SPRING WASHER		01
08	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 131 FERTILIZER / SEED		01
09	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 133 FERTILIZER / SEED		01

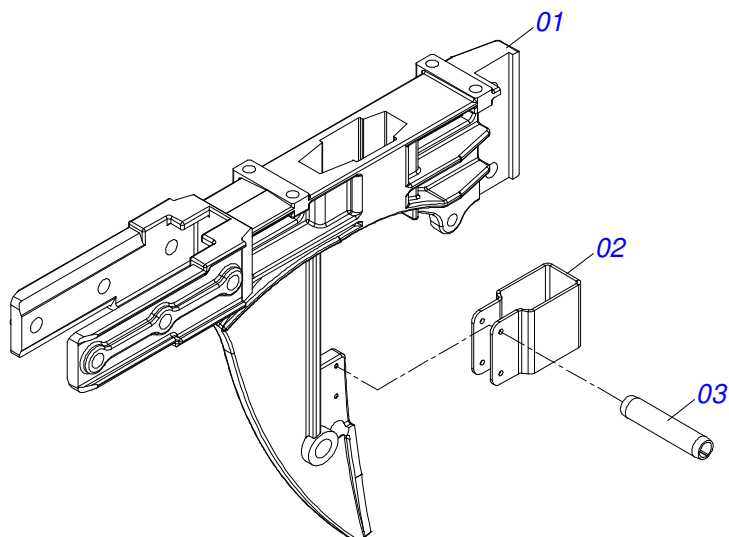


Item	Code	Description	See page	QT
01	0561015592	LEFT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

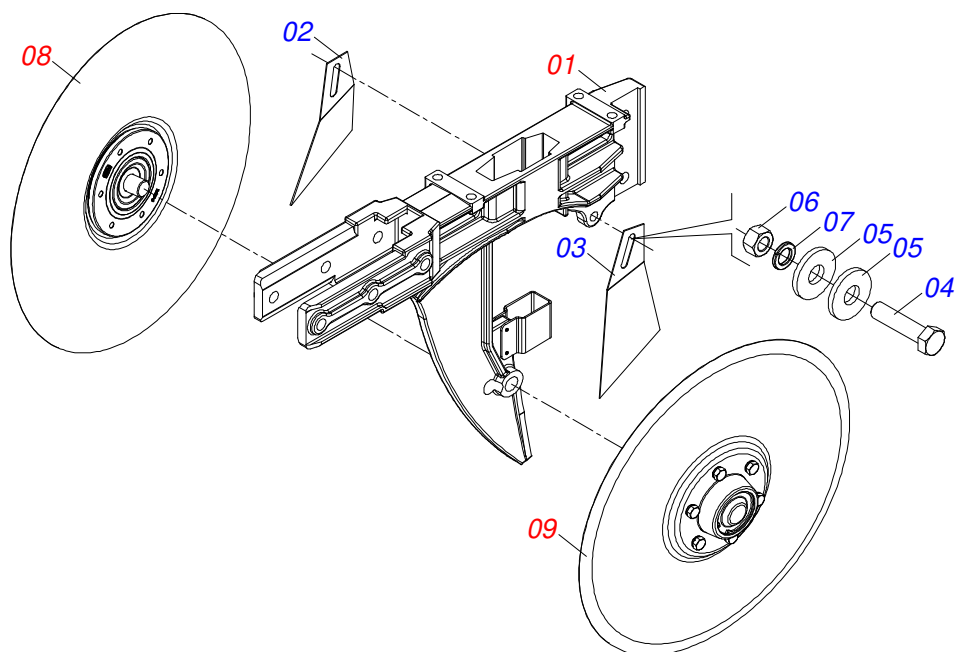


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT	130	01
02	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
03	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
06	0503010026	3/8" NUT		01
07	0503010025	3/8 SPRING WASHER		01
08	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 131 FERTILIZER / SEED		01
09	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 133 FERTILIZER / SEED		01

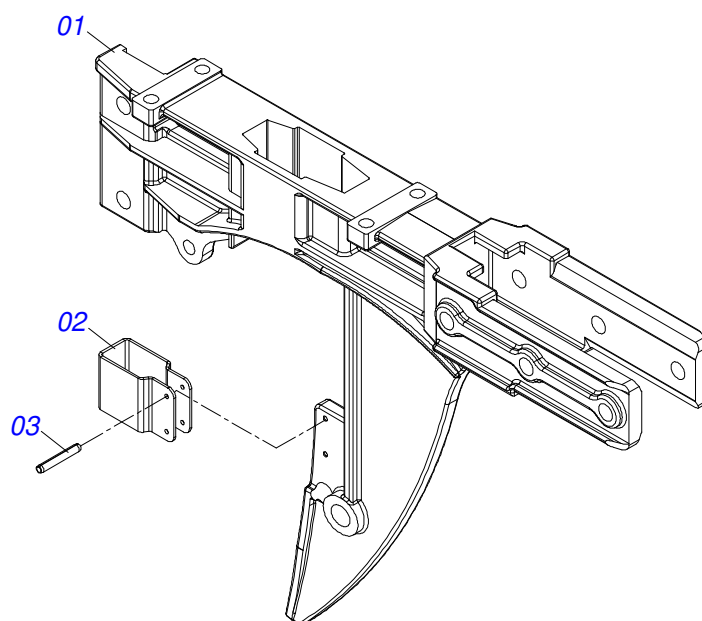


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

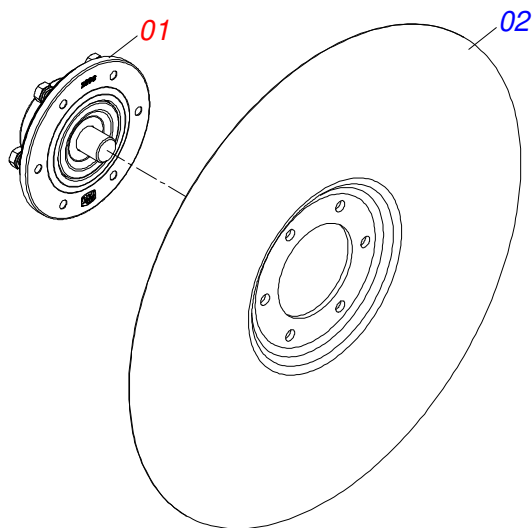


Item	Code	Description	See page	QT
01	0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	132	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

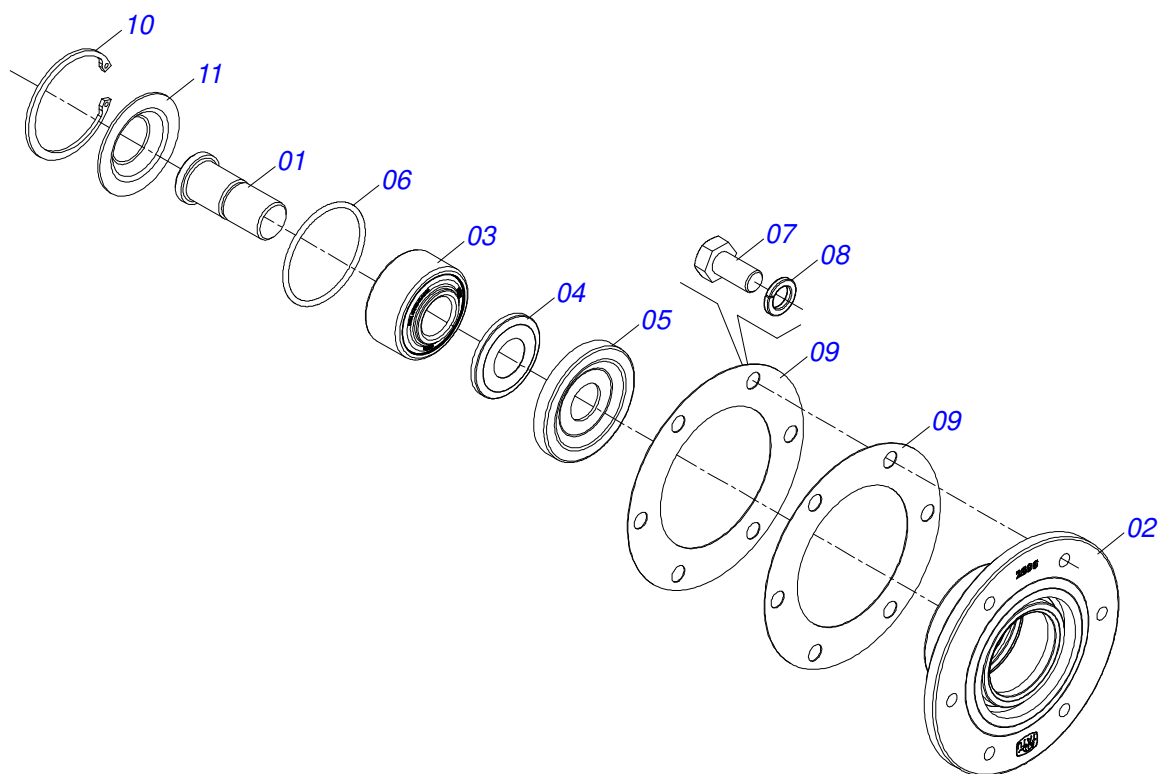


Item	Code	Description	See page	QT
01	0571011150	RIGHT DOUBLE DISC AXLE		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

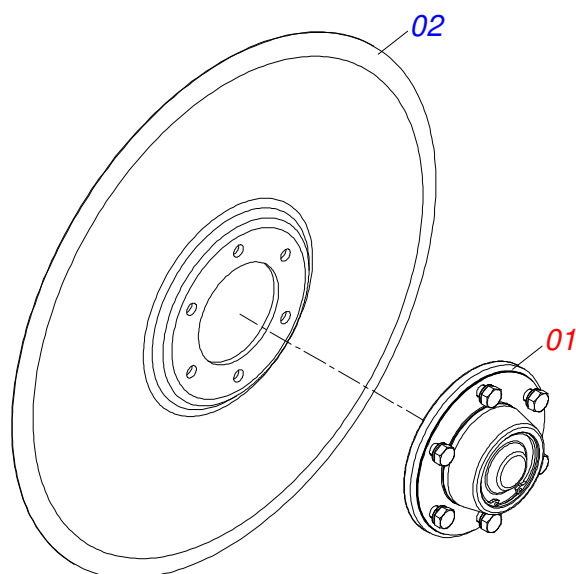


Item	Code	Description	See page	QT
01	0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	134	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

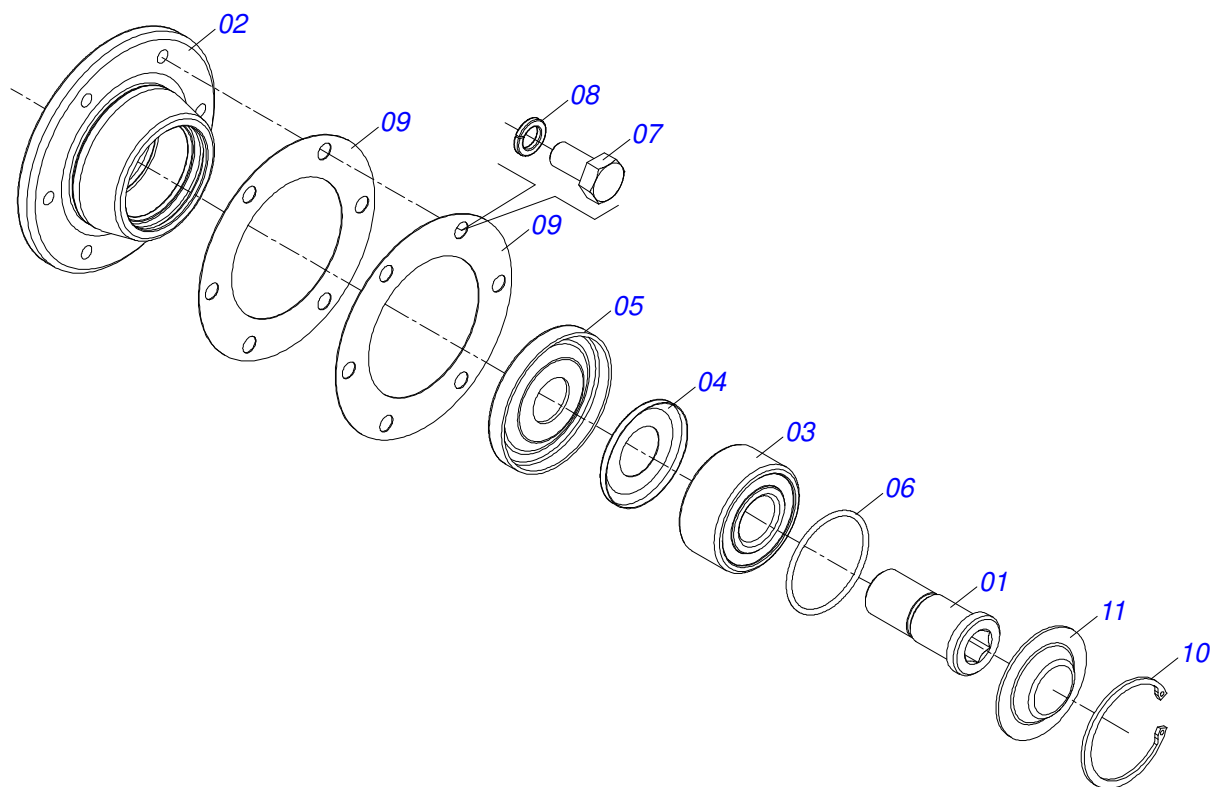


Item	Code	Description	See page	QT
01	0571011151	LEFT DOUBLE DISC HUB		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

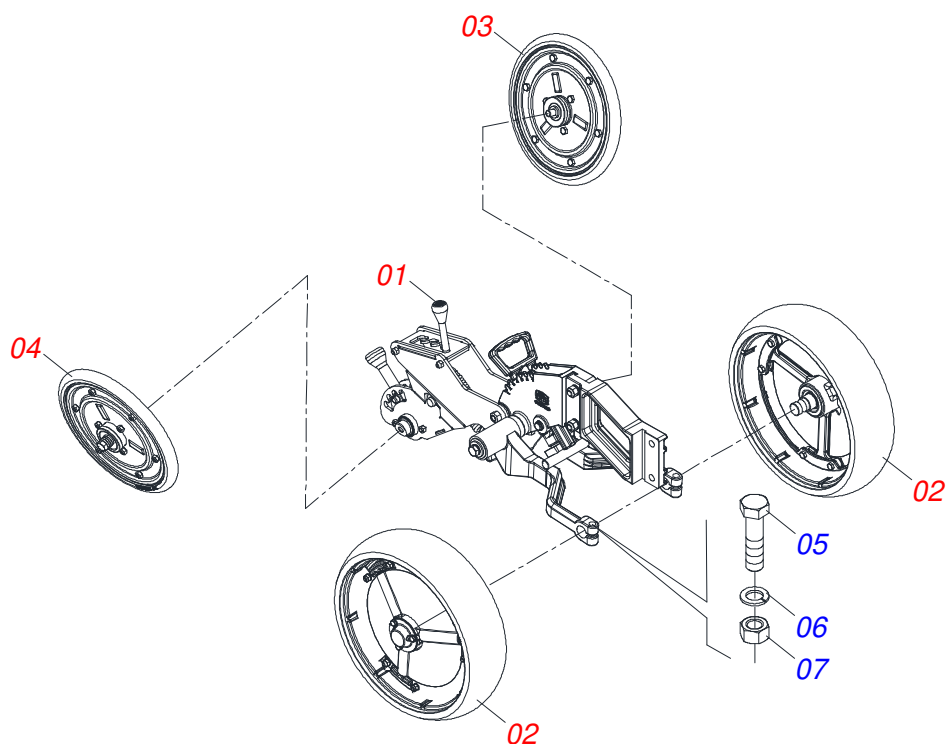


Item	Code	Description	See page	QT
01	0521055065	ASSY DEPTH / COMPACTOR	136	01
02	0521055068	RAYED WHEEL CENTER CLOSED	141	02
03	0521054990	LEFT COMPACTOR WHEEL	143	01
04	0521055017	RIGHT COMPACTOR WHEEL	144	01
05	0503016453	1/2" X 2.1/2 BOLT		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010028	1/2" NUT		02

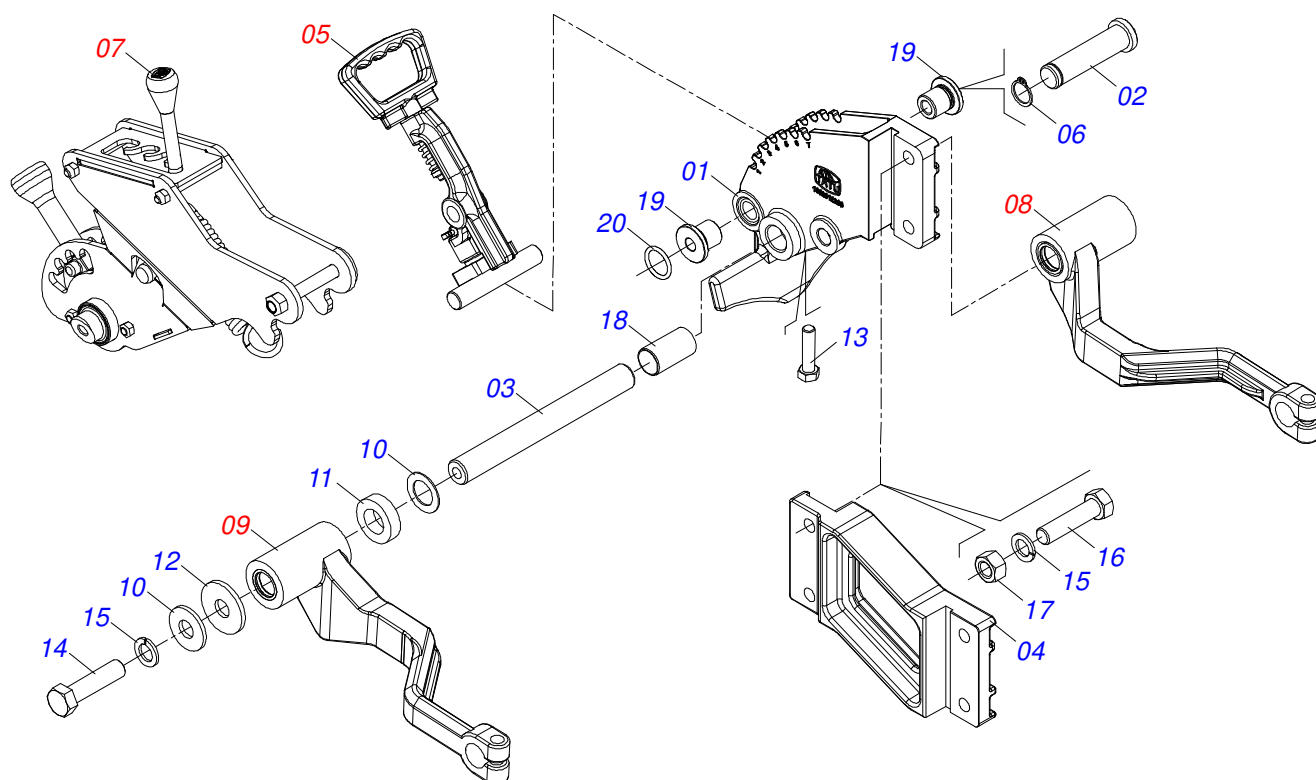


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0571013054	DEPTH CONTROL WHEEL AXLE		01
04	0502012663	EXTENSION		01
05	0501056769	DEPTH WHEELS REGULATOR ASSY	137	01
06	0503019398	AXLE RETAINER RING		01
07	0521055033	SEMI-ASSEMBLED COMPACTOR BODY	138	01
08	0521055054	LEFT ARM WITH SLEEVE	139	01
09	0521055066	RIGHT ARM WITH SLEEVE	140	01
10	0511015346	FLAT WASHER		04
11	0571015974	WASHER		02
12	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
13	0503010256	3/8" X 3/4" BOLT		01
14	0503010311	1/2" X 1-1/4" BOLT		02
15	0503010019	1/2" SPRING WASHER		04
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2 UNC G.5 ZN HEX NUT		02
18	0503019275	SLEEVE LUBRICATION SYSTEM		01
19	0581019473	ARTICULATED SLEEVE		02
20	0503010045	O'RING		02

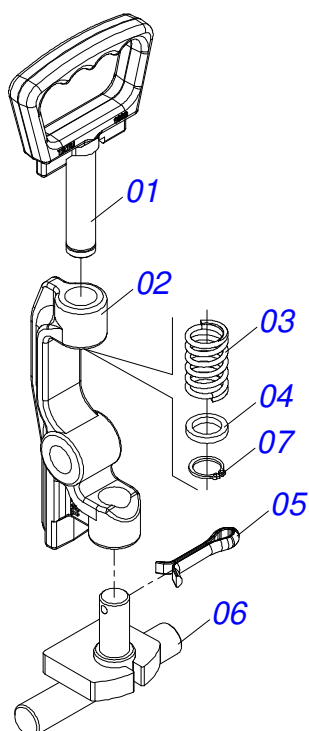


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

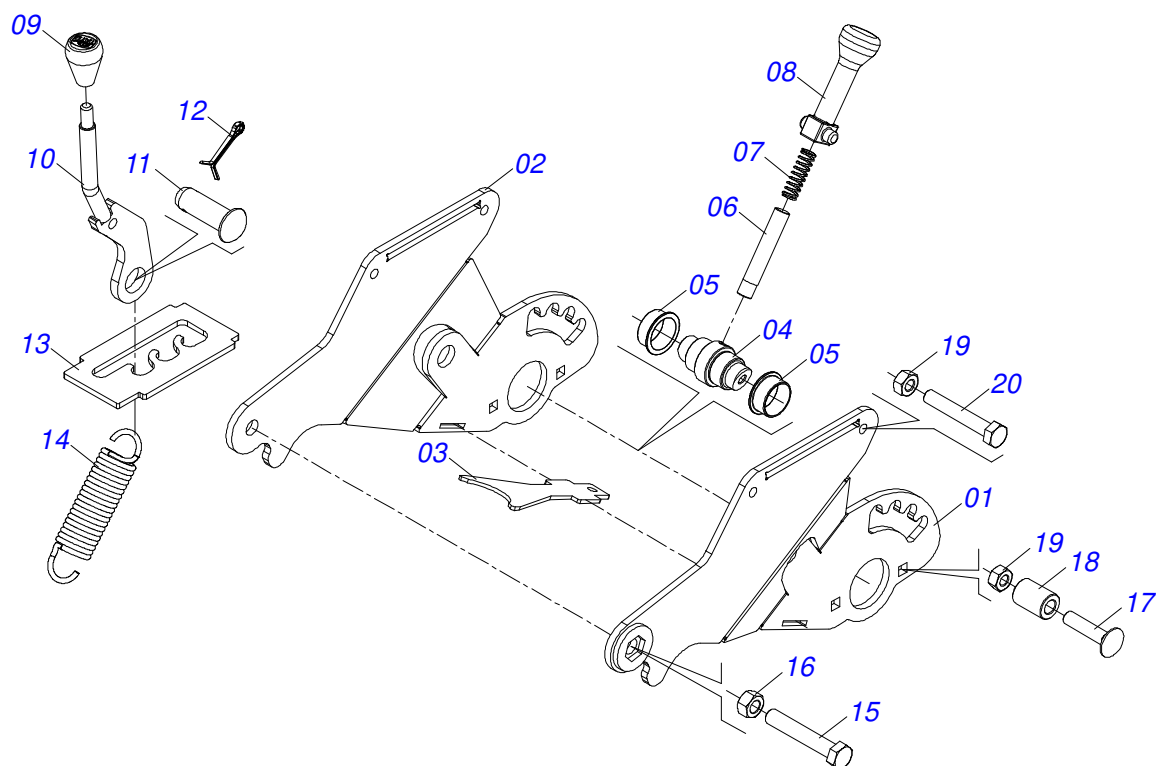


Item	Code	Description	See page	QT
01	0521069585	LEFT SIDE		01
02	0581019475	RIGHT SIDE BODY		01
03	0581019511	COVER		01
04	0581019510	AXIS		01
05	0503019351	LUBRICANT SLEEVE		02
06	0581019520	AXIS		01
07	0503030190	0.5" X 1.6" X 0.05" SPRING		01
08	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
09	0503030878	LEVER CRANK		01
10	0521068661	LEVER		01
11	0571012442	COUPLING SHAFT		01
12	0503010257	1/8" X 1" COTTERPIN		01
13	0581019512	PLATE TOP		01
14	0503034817	SPRING		01
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503011336	1/2" HEX SELF ADJUSTING NUT		01
17	0501011753	5/16" X 1-3/4" BOLT		02
18	0581015855	SLEEVE		02
19	0503013816	5/16" LOCKNUT		04
20	0503010848	5/16" X 3.1/2" BOLT		02

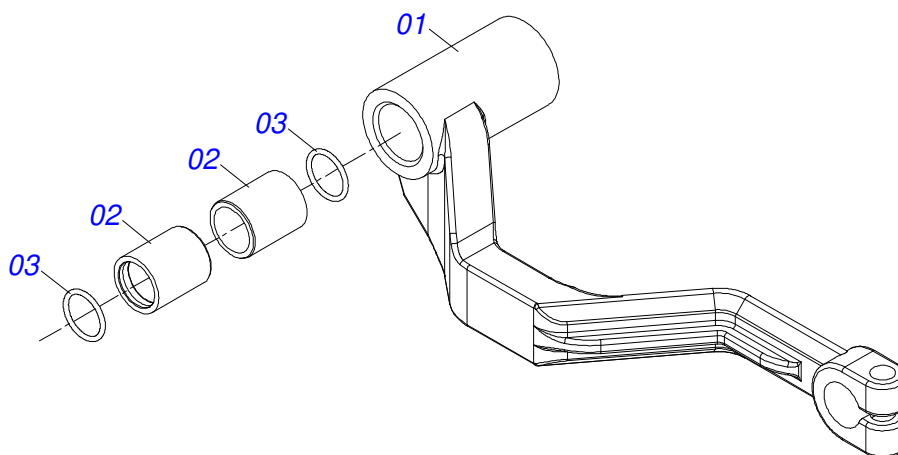


Item	Code	Description	See page	QT
01	0581019523	LEFT ARM WHEEL DEPTH		01
02	0581019514	LUBRICANT SLEEVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

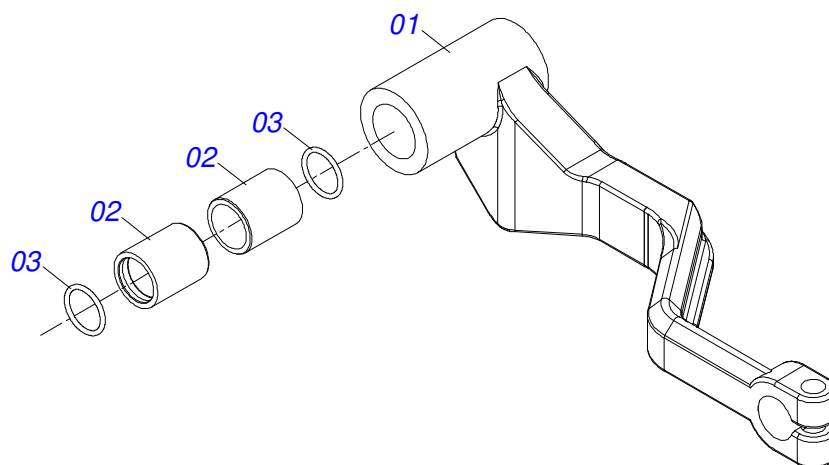


Item	Code	Description	See page	QT
01	0581019524	RIGHT ARM DEPTH		01
02	0581019514	LUBRICANT SLEEVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

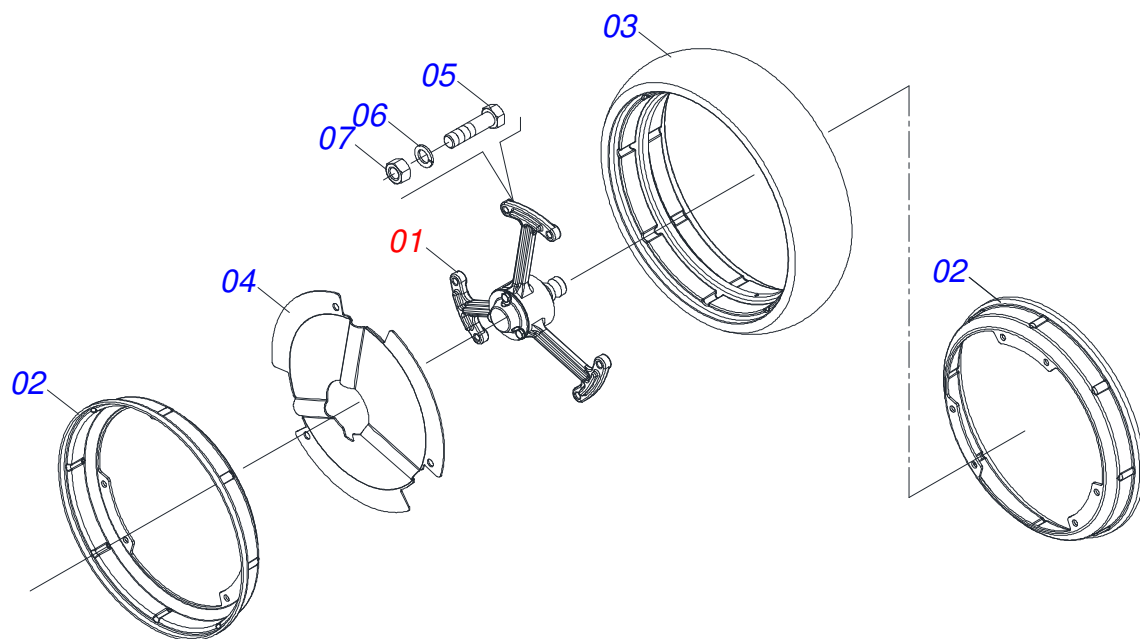


Item	Code	Description	See page	QT
01	0521055055	HUB WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	142	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
07	0503010337	5/16" NUT		06

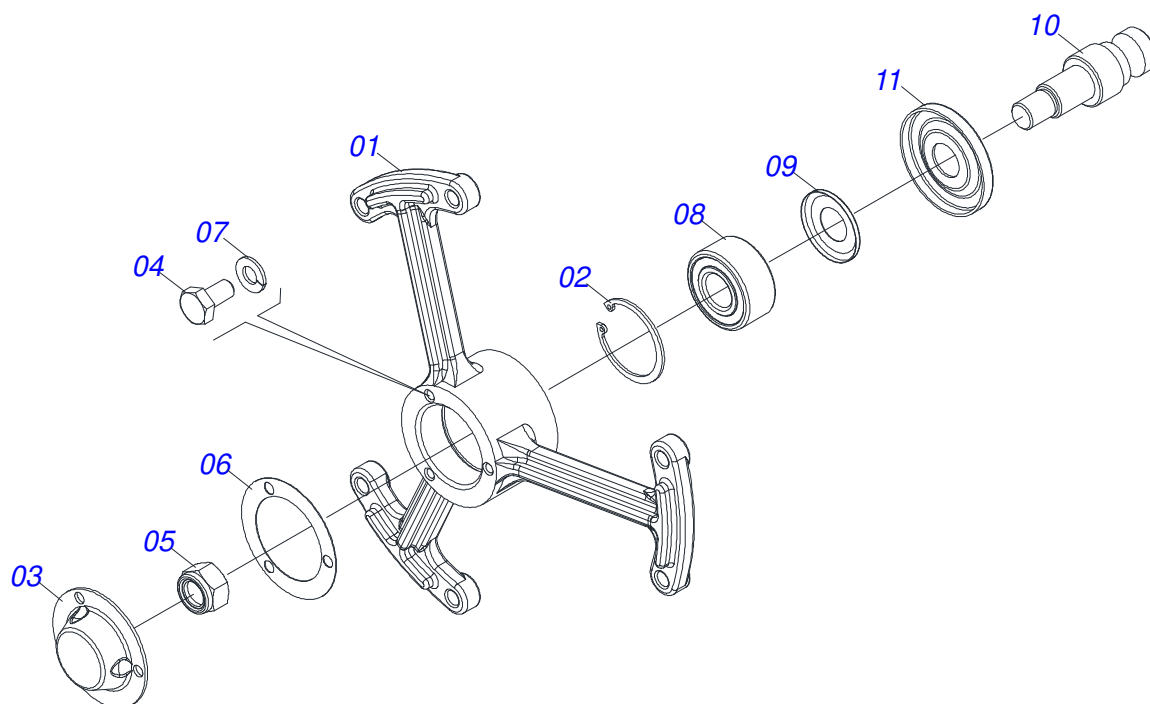


Item	Code	Description	See page	QT
01	0581019522	CASE WHEEL DEPTH WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010878	5/8" SELF ALIGNING NUT		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0503010143	1/4" SPRING WASHER		03
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019529	DEPTH REGULATOR SHAFT		01
11	0581019168	DUST CLOAK		01

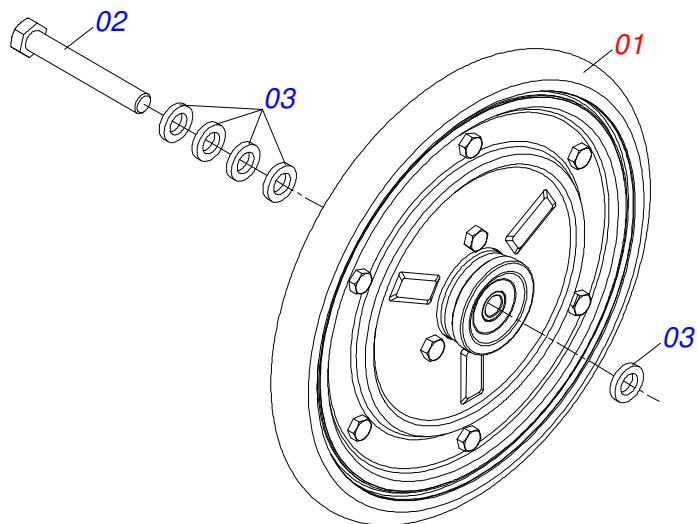


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	145	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

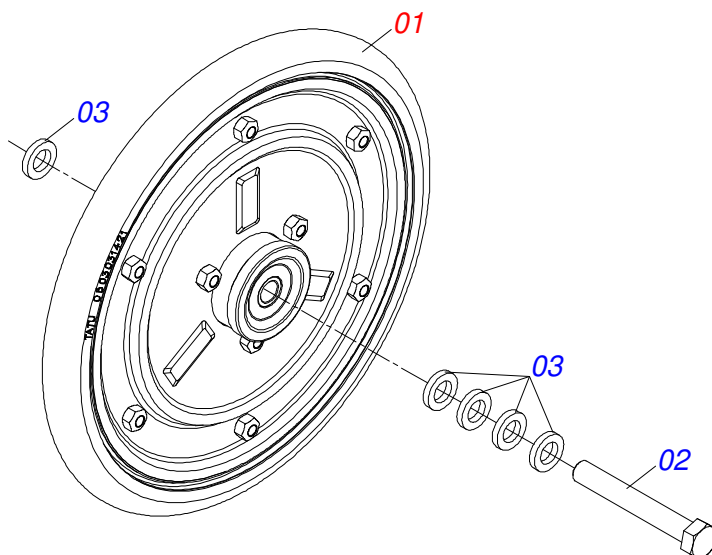


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	145	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

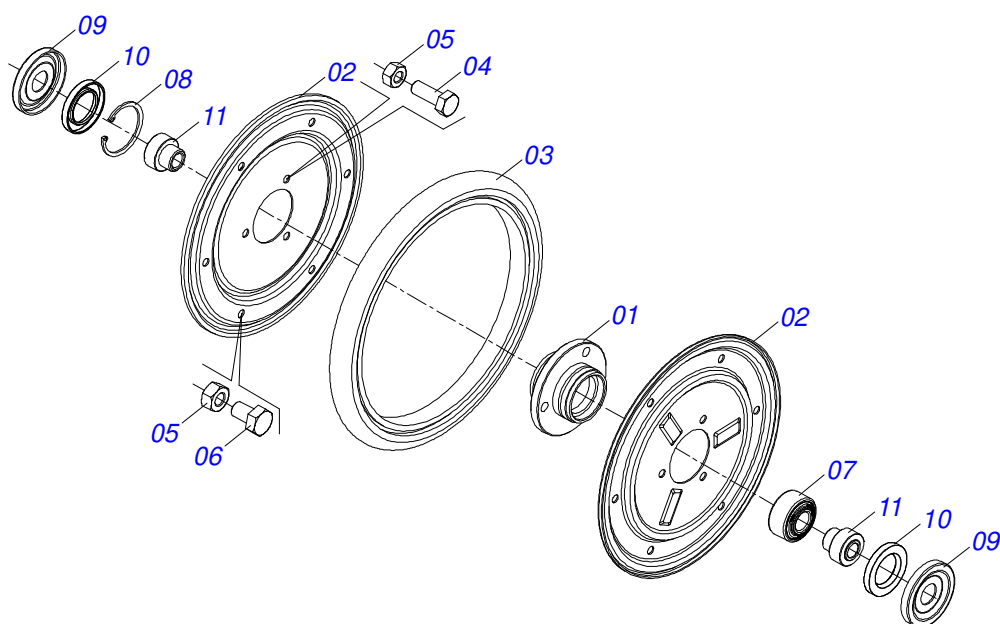

Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

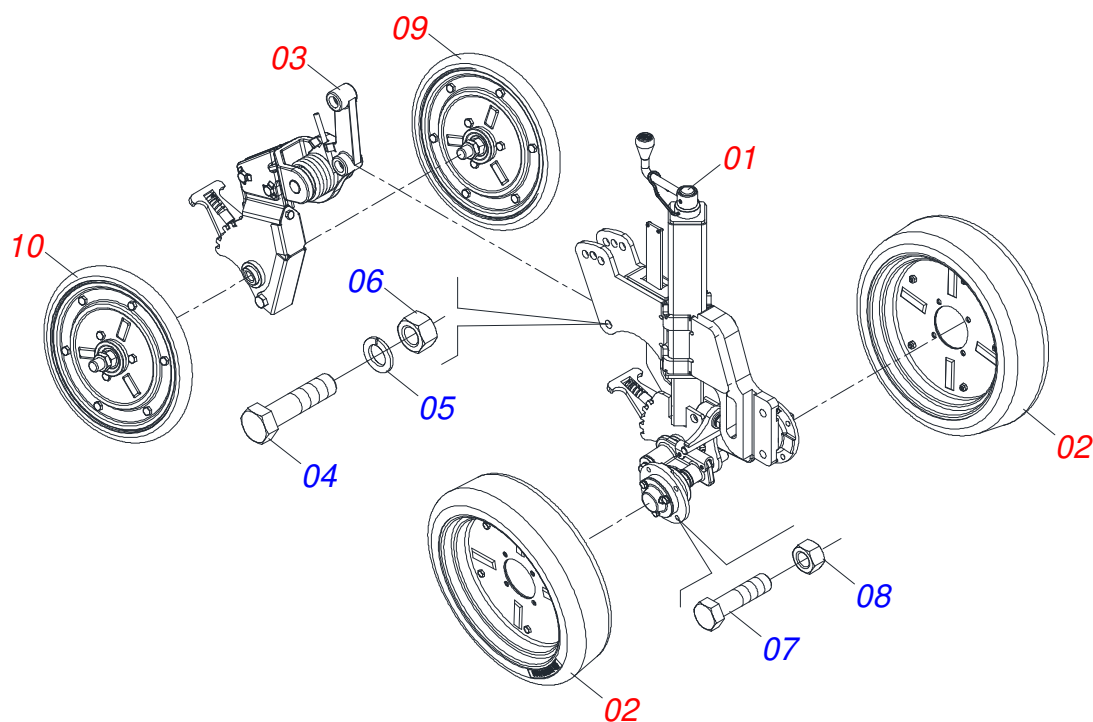

Item	Code	Description	See page	QT
01	0521054751	DEPTH CONTROL WITH THREAD	147	01
02	0511055819	DEPTH BAND WITH RIM	152	02
03	0521054752	V COMPACTING SYSTEM	153	01
04	0503010479	BOLT		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010060	1/2 UNC G.5 ZN HEX NUT		02
07	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		08
08	0503013816	5/16" LOCKNUT		08
09	0521054753	DRIVE WHEEL V RUBBER RIGHT	154	01
10	0521054754	DRIVE WHEEL V LEFT RUBBER	155	01

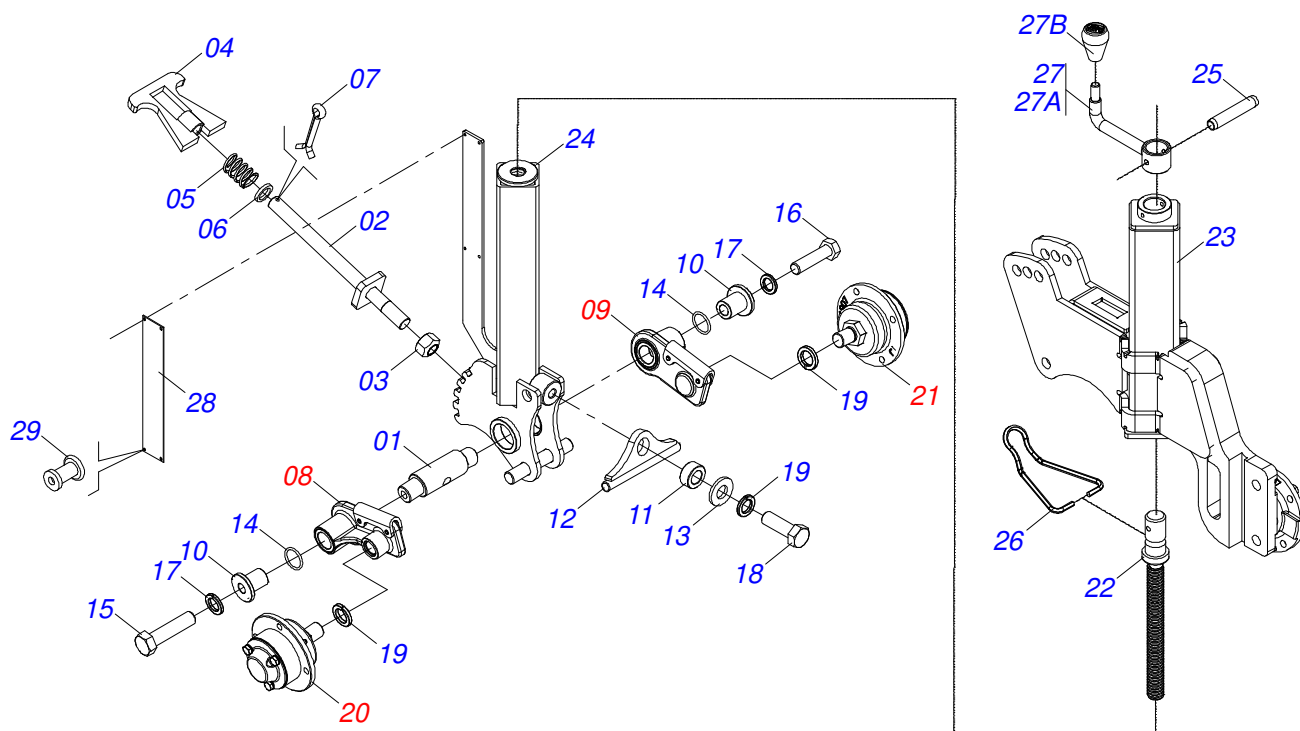


Item	Code	Description	See page	QT
01	0581017621	CONTROL AXLE		01
02	0521063812	REGULATOR LEVER ALXE		01
03	0503011336	1/2" HEX SELF ADJUSTING NUT		01
04	0511065308	LOCK REGULATOR		01
05	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
06	0541011627	FLAT WASHER		01
07	0503010140	1/8" X 3/4" COTTERPIN		01
08	0521053245	LEFT ARM WHEELS	148	01
09	0521053244	COVERING WHEEL RIGHT ARM ASSEMBLED	149	01
10	0581017646	SLEEVE LOCK CONTROL ARM		02
11	0571013189	SLEEVE SUPPORT BEATER		01
12	0521063813	WHEEL PRESS BEATER		01
13	0501010937	13,50 X 28 X 3,00 FLAT WASHER		01
14	0503010045	O'RING		04
15	0503017375	1/2" X 1-1/4" BOLT		01
16	0503014007	1/2" X 1-1/4" BOLT		01
17	0503010019	1/2" SPRING WASHER		03
18	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		01
19	0503010023	3/4" SPRING WASHER		04
20	0521053483	CPRA RIGHT DEPTH CONTROL CUBE WITHOUT 150 LUBRICATION		01
21	0521053484	CPRA LEFT DEPTH CONTROL CUBE WITHOUT 151 LUBRICATION		01
22	0581019171	REGULATOR		01
23	0521069476	EXTERNAL COLUMN CONTROL DEPTH		01
24	0521069475	INTERNAL COLUMN CHECK DEPTH		01
25	0503010683	0,2" X 1,2" SPRING PIN		01
26	0503034830	REGULATION LATCHE		01
27	0521054750	CRANK ASSEMBLY		01
27A	0521069477	HAND CRANK		01
27B	0503030878	LEVER CRANK		01
28	0503030751	REGULATOR PLATE		01




**PST TRIO FLEX TITANIUM - FRAME 7450 - CSU - (FROM
DEPTH CONTROL WITH THREAD**

Page 147
0521054751


Item	Code	Description	See page	QT
29	0503010001	3.2 X 5.5 RIVET		04

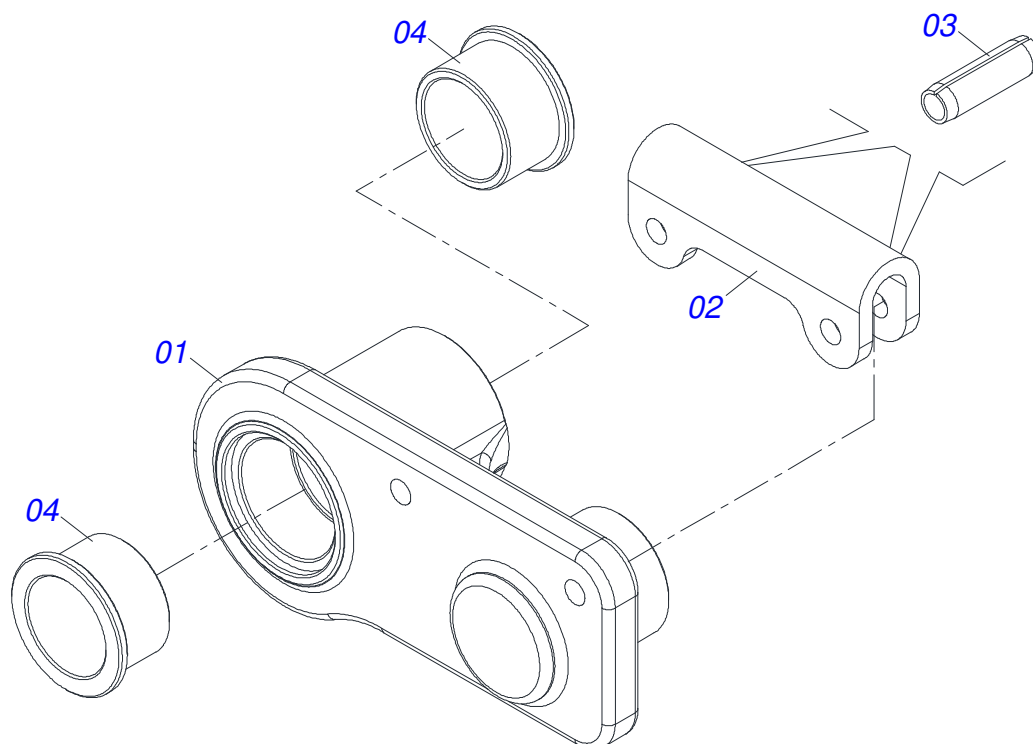


Item	Code	Description	See page	QT
01	0581017620	LEFT ARM WHEELS		01
02	0581011340	ARM CASE		01
03	0503011402	0.2" X 0.8" SPRING PIN		02
04	0503019275	SLEEVE LUBRICATION SYSTEM		01

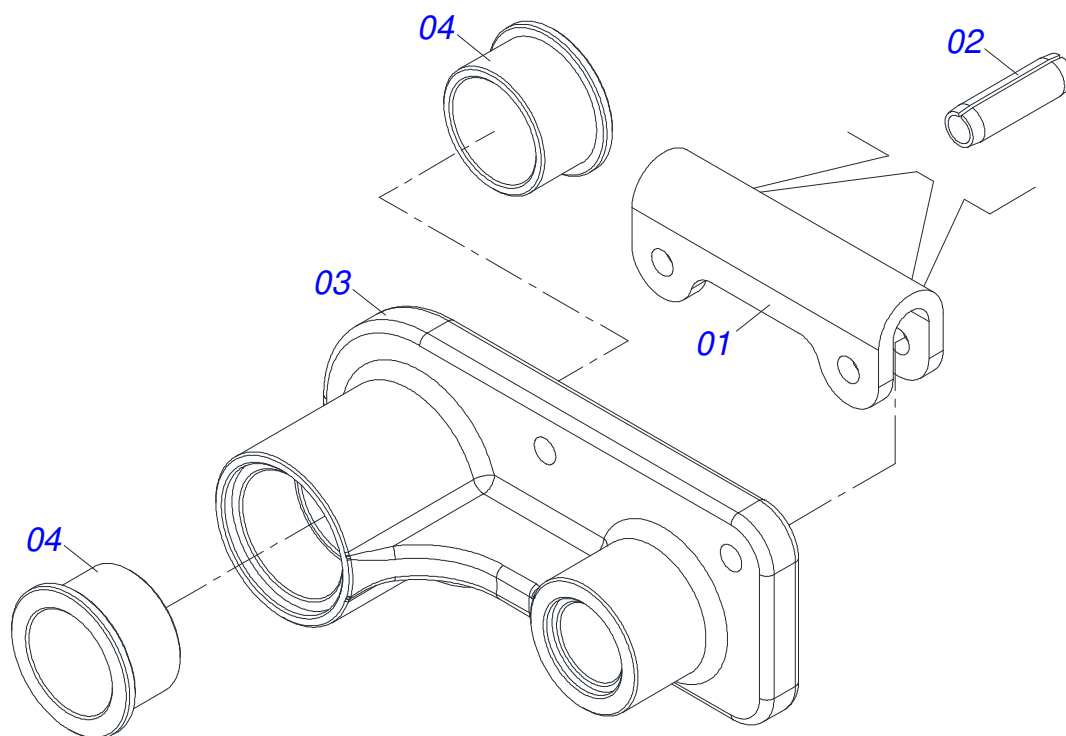


Item	Code	Description	See page	QT
01	0581011340	ARM CASE		01
02	0503011402	0.2" X 0.8" SPRING PIN		02
03	0581017645	WHEEL RIGHT ARM		01
04	0503019275	SLEEVE LUBRICATION SYSTEM		01

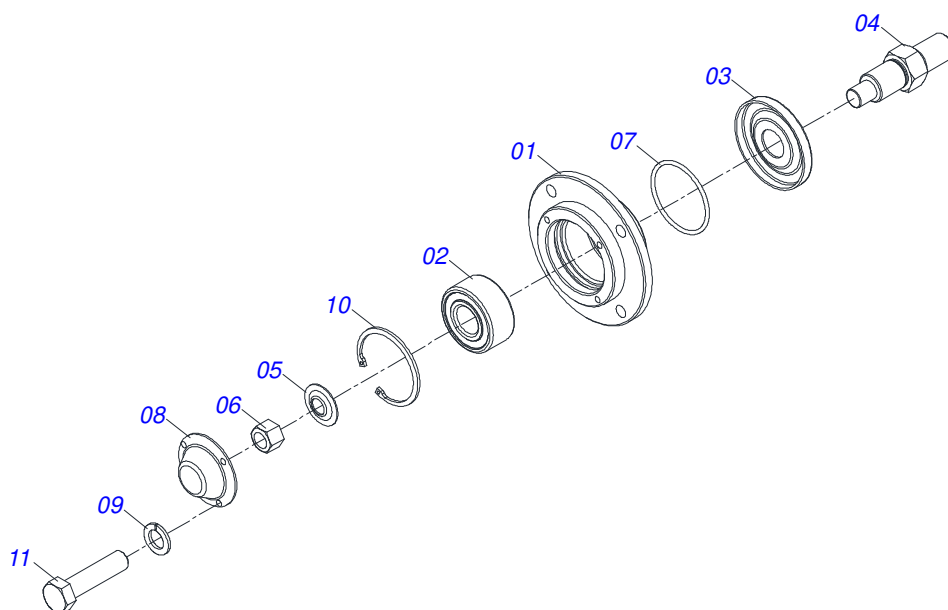


Item	Code	Description	See page	QT
01	0502012912	WHEEL BOX DEPTH WITHOUT LUBRICATION		01
02	0503019342	ROLLER BEARING		01
03	0581019168	DUST CLOAK		01
04	0581017828	RIGHT AXLE CPRA WITHOUT LUBRICATION		01
05	0503034055	CLAMPING RING		01
06	0503010878	5/8" SELF ALIGNING NUT		01
07	0503030757	2.9" X 2" X 0.02" JOINT		01
08	0521019178	PROTECTION LID		01
09	0503010143	1/4" SPRING WASHER		03
10	0503011105	SEAL RING		01
11	0503014729	1/4" UNF X 1/2" BOLT		03

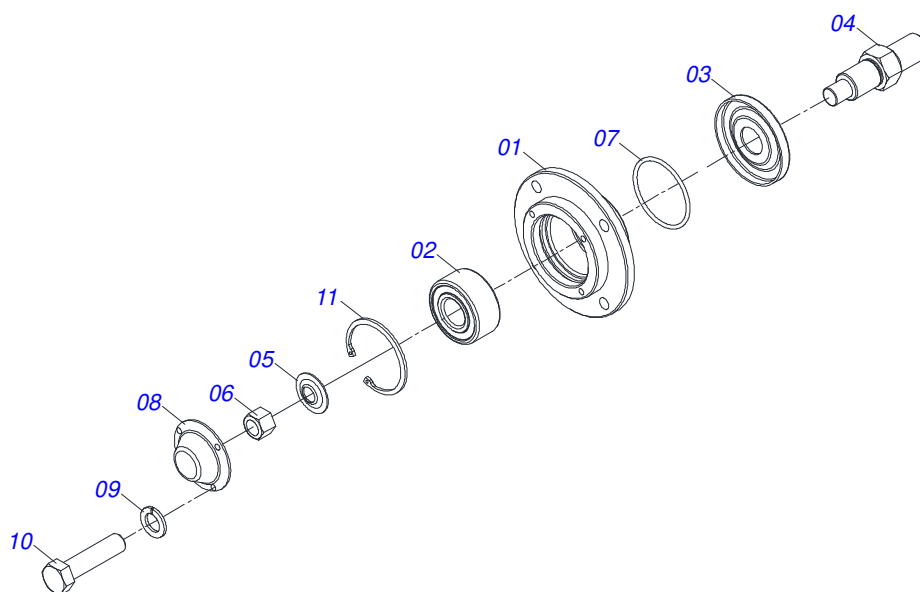


Item	Code	Description	See page	QT
01	0502012912	WHEEL BOX DEPTH WITHOUT LUBRICATION		01
02	0503019342	ROLLER BEARING		01
03	0581019168	DUST CLOAK		01
04	0581017845	LEFT AXLE CPRA WITHOUT LUBRICATION		01
05	0503034055	CLAMPING RING		01
06	0503010878	5/8" SELF ALIGNING NUT		01
07	0503030757	2.9" X 2" X 0.02" JOINT		01
08	0521019178	PROTECTION LID		01
09	0503010143	1/4" SPRING WASHER		03
10	0503013758	1/4" X 1-1/2" BOLT		03
11	0503011105	SEAL RING		01

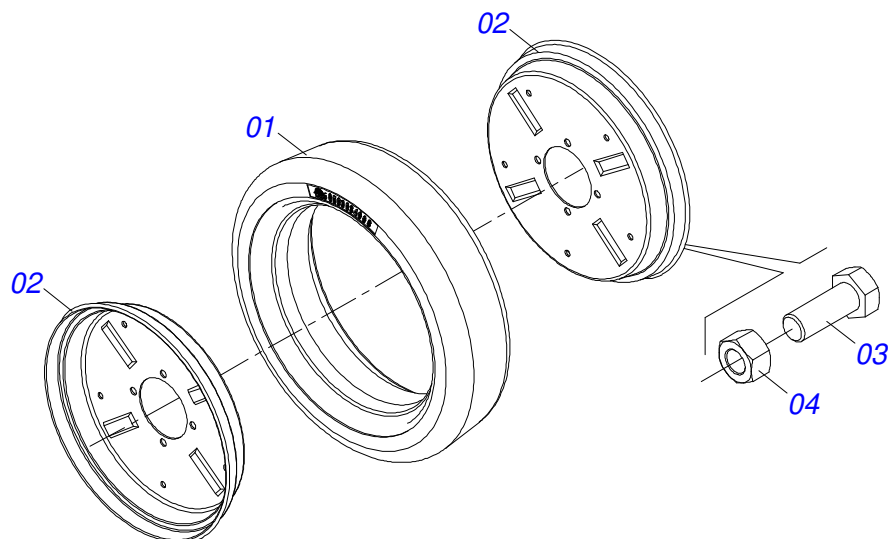


Item	Code	Description	See page	QT
01	0503034008	DEPTH CONTROL		01
02	0521010832	RIM FLANGE		02
03	0503013758	1/4" X 1-1/2" BOLT		05
04	0503013814	1/4" NC LOCKNUT		05

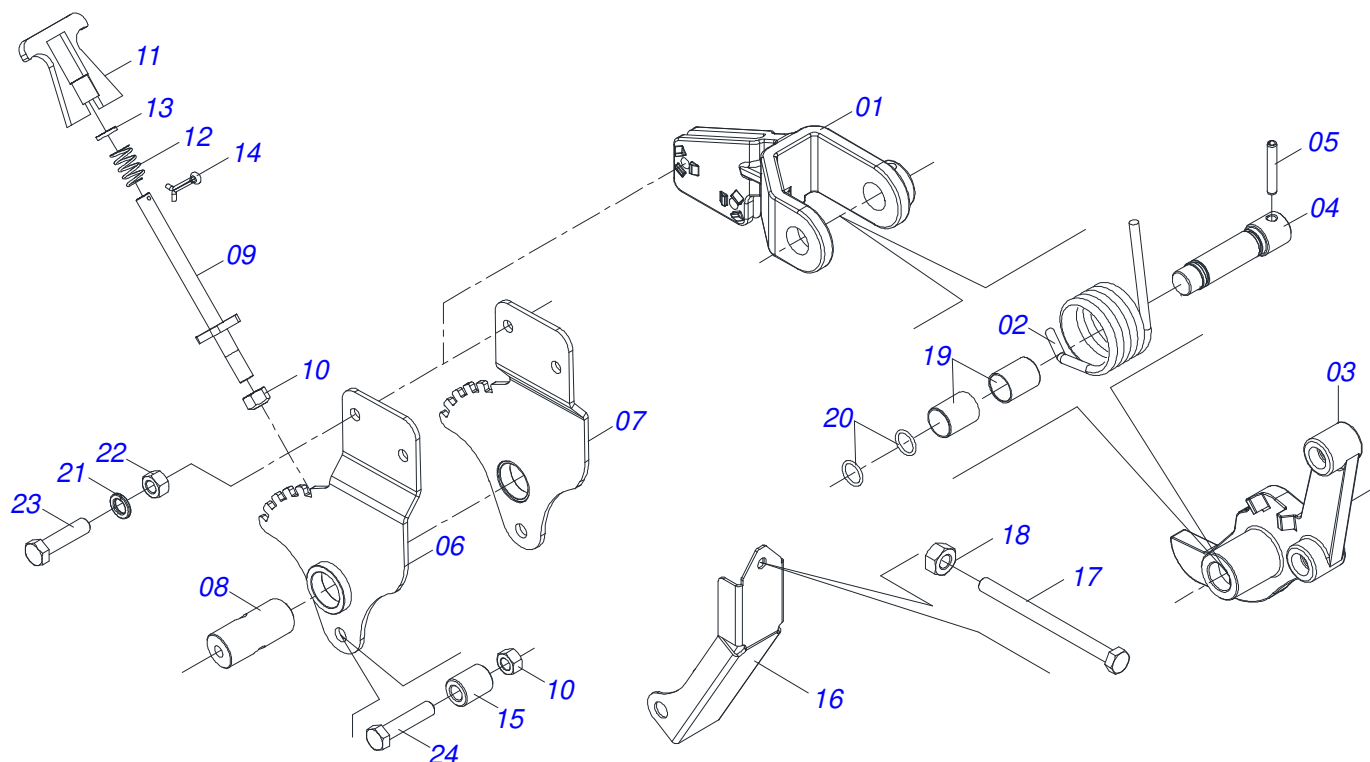


Item	Code	Description	See page	QT
01	0581017647	PRESS WHEELS ARM		01
02	0503030883	RIGHT TORSION SPRING		01
03	0581017622	SEAT SUPPORT		01
04	0581017648	PIVOT SHAFT		01
05	0503010839	03"X 0.6" SPRING PIN		01
06	0521069490	RIGHT REGULATOR		01
07	0521069491	LEFT REGULATOR		01
08	0581017817	ADJUSTMENT SHAFT COMPACTOR 1/2 THREAD WITHOUT LUBRICATION		01
09	0521063812	REGULATOR LEVER ALXE		01
10	0503011336	1/2" HEX SELF ADJUSTING NUT		02
11	0511065308	LOCK REGULATOR		01
12	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
13	0541011627	FLAT WASHER		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0571013293	SLEEVE LOCK COMPACTOR V CONTROL WITH SCREW		01
16	0581013744	PROTECTION CASE		01
17	0503013096	5/16" X 4" BOLT		01
18	0503013816	5/16" LOCKNUT		01
19	0503019273	AUTO LUBRICANT SLEEVE		02
20	0503010045	O'RING		02
21	0503010025	3/8 SPRING WASHER		02
22	0503010026	3/8" NUT		02
23	0503011404	BOLT		02
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		01

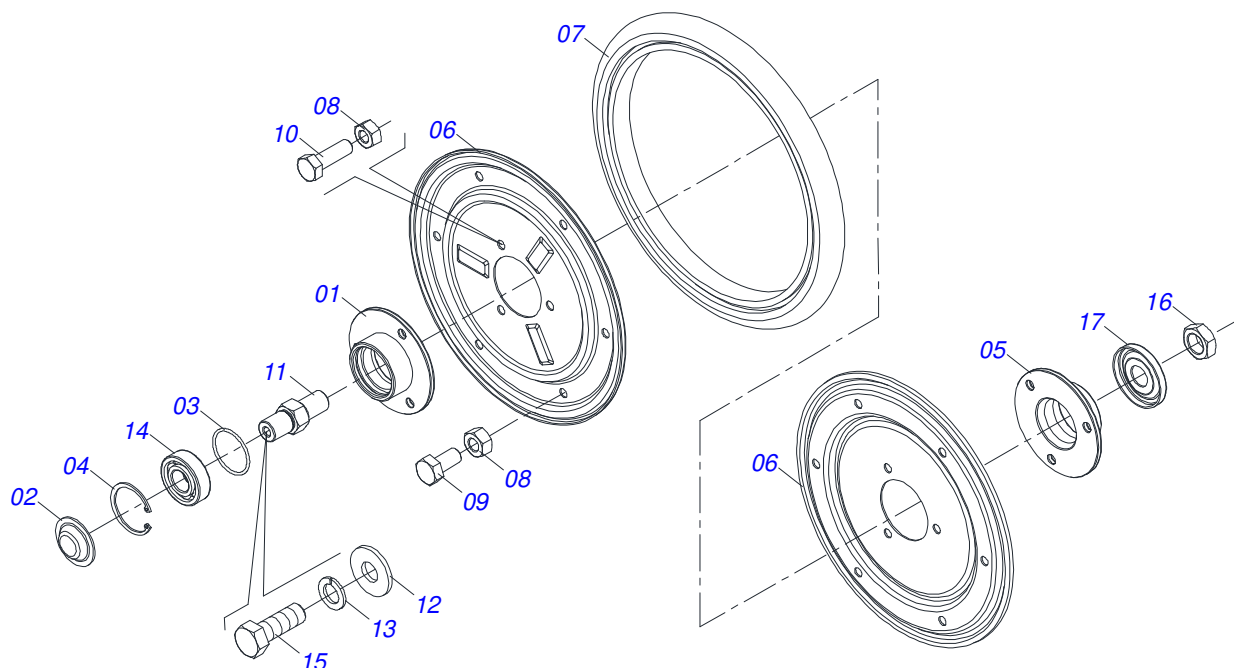


Item	Code	Description	See page	QT
01	0581019097	LOWER WHEEL HUB		01
02	0581012949	BEARING COVER		01
03	0503018045	2-130 (AGEL) O'RING		01
04	0503011105	SEAL RING		01
05	0502012893	WHEEL BOX		01
06	0521018928	PRESS WHEEL RIM		02
07	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
08	0503013816	5/16" LOCKNUT		09
09	0503010011	5/16" X 1/2" BOLT		06
10	0503010358	5/16" X 5/8" BOLT		03
11	0581019166	RIGHT AXIS		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
13	0503010025	3/8 SPRING WASHER		01
14	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
15	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
16	0503033787	NUT 3/4 UNF		01
17	0581019215	DUST CLOAK		01

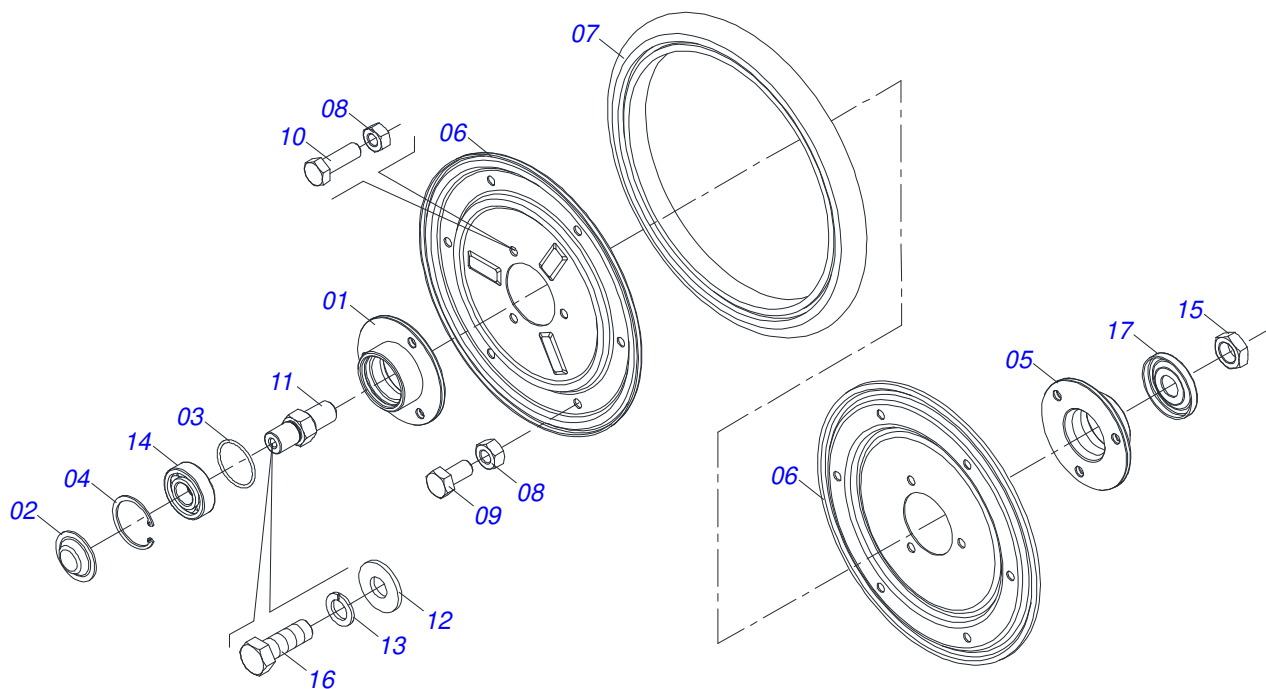


Item	Code	Description	See page	QT
01	0581019097	LOWER WHEEL HUB		01
02	0581012949	BEARING COVER		01
03	0503018045	2-130 (AGEL) O'RING		01
04	0503011105	SEAL RING		01
05	0502012893	WHEEL BOX		01
06	0521018928	PRESS WHEEL RIM		02
07	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
08	0503013816	5/16" LOCKNUT		09
09	0503010011	5/16" X 1/2" BOLT		06
10	0503010358	5/16" X 5/8" BOLT		03
11	0581019167	LEFT AXLE		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
13	0503010025	3/8 SPRING WASHER		01
14	0503062300	EVA-F8 ESF2CARR BALL BEARING		01
15	0503033788	NUT 3/4		01
16	0503019348	SCREW 3/8 UNC X 3/4		01
17	0581019215	DUST CLOAK		01

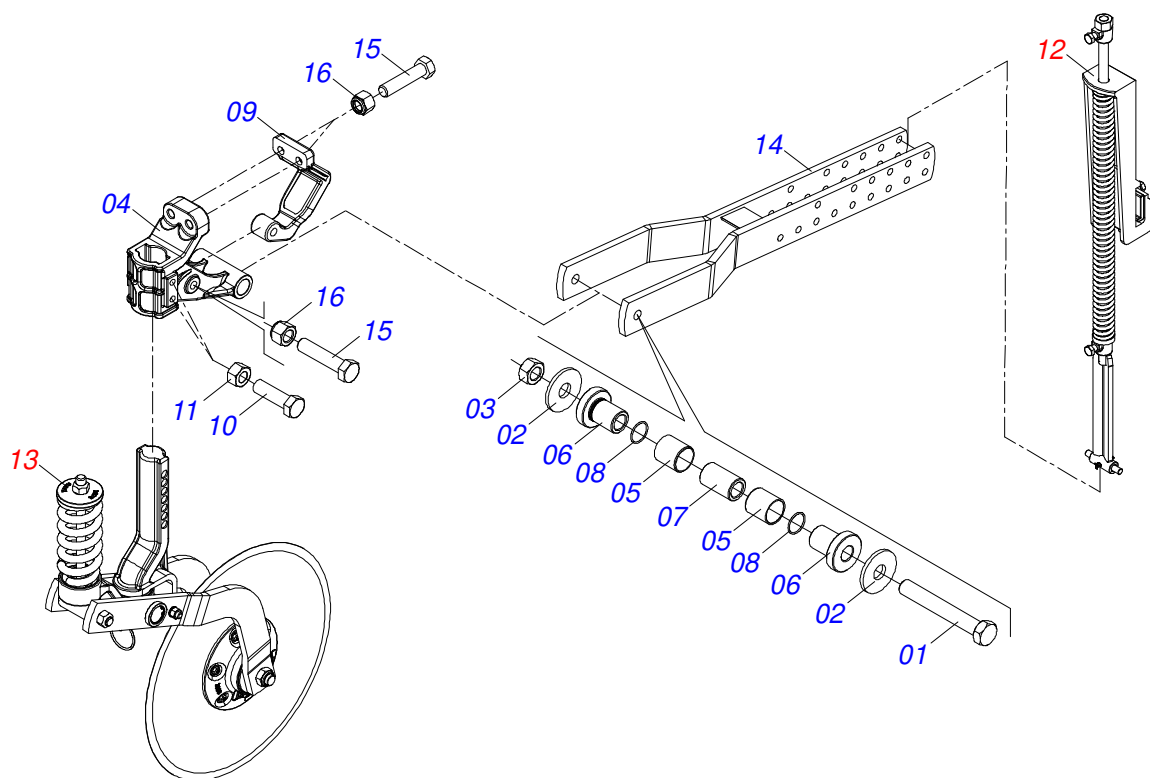


Item	Code	Description	See page	QT
01	0501010066	3/4" X 9" BOLT		01
02	0511017232	FLAT WASHER		02
03	0503011255	3/4" LOCK NUT		01
04	0502012873	SUPPORT DC FERTILIZER ROW		01
05	0503019278	LUBRICANT SLEEVE		02
06	0581019195	SIDE GUIDE SLEEVE		02
07	0581019196	CENTRAL GUIDE SLEEVE		01
08	0503010410	RING		02
09	0502012876	CLAMP		01
10	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
11	0503010013	5/8 NUT		02
12	0521054906	SPRING ASSY FERTILIZER	158	01
13	0521053231	DPL 20 SHORT ROW WITHOUT LUBRICATION CONICAL BEARING	159	01
14	0521066231	SHORT FERTILIZER ROW ARM		01
15	0503017857	BOLT 5/8 UNF 4		03
16	0503010811	5/8" UNF SELF ADJUSTING NUT		03

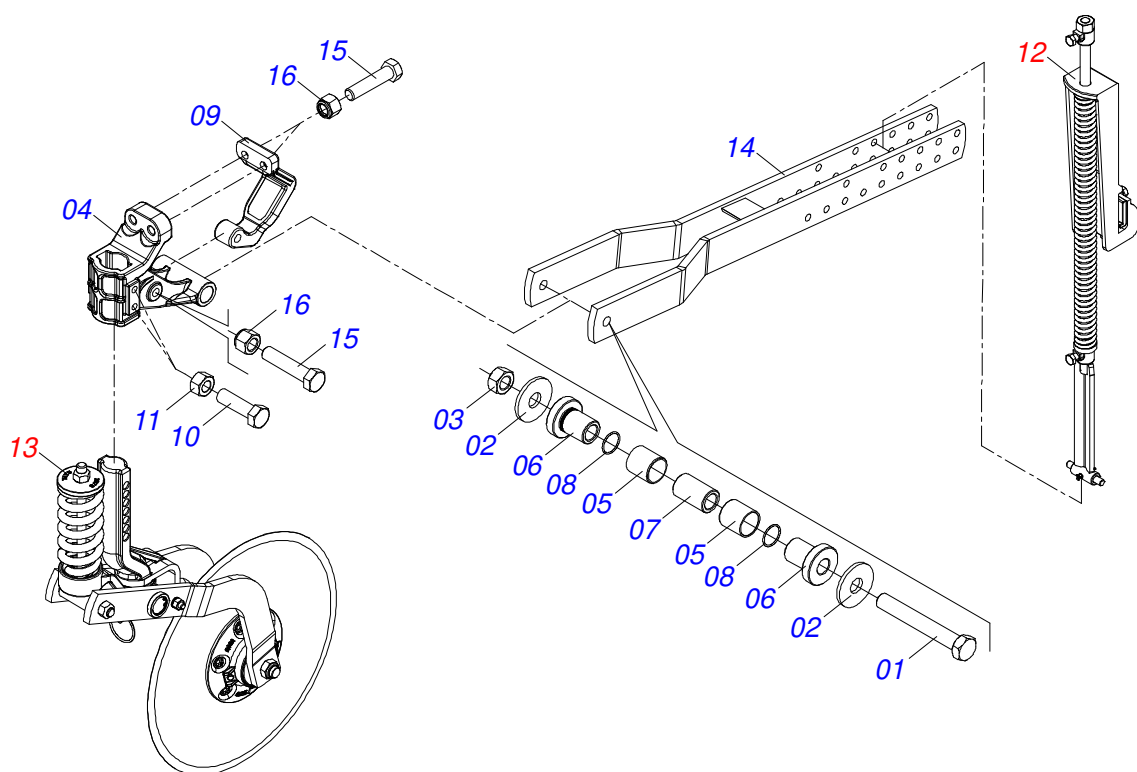


Item	Code	Description	See page	QT
01	0501010066	3/4" X 9" BOLT		01
02	0511017232	FLAT WASHER		02
03	0503011255	3/4" LOCK NUT		01
04	0502012873	SUPPORT DC FERTILIZER ROW		01
05	0503019278	LUBRICANT SLEEVE		02
06	0581019195	SIDE GUIDE SLEEVE		02
07	0581019196	CENTRAL GUIDE SLEEVE		01
08	0503010410	RING		02
09	0502012876	CLAMP		01
10	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
11	0503010013	5/8 NUT		02
12	0521054906	SPRING ASSY FERTILIZER	158	01
13	0521053232	DPL 20 LONG ROW WITHOUT LUBRICATION CONICAL BEARING	160	01
14	0521066230	LONG FERTILIZER ROW ARM		01
15	0503017857	BOLT 5/8 UNF 4		03
16	0503010811	5/8" UNF SELF ADJUSTING NUT		03

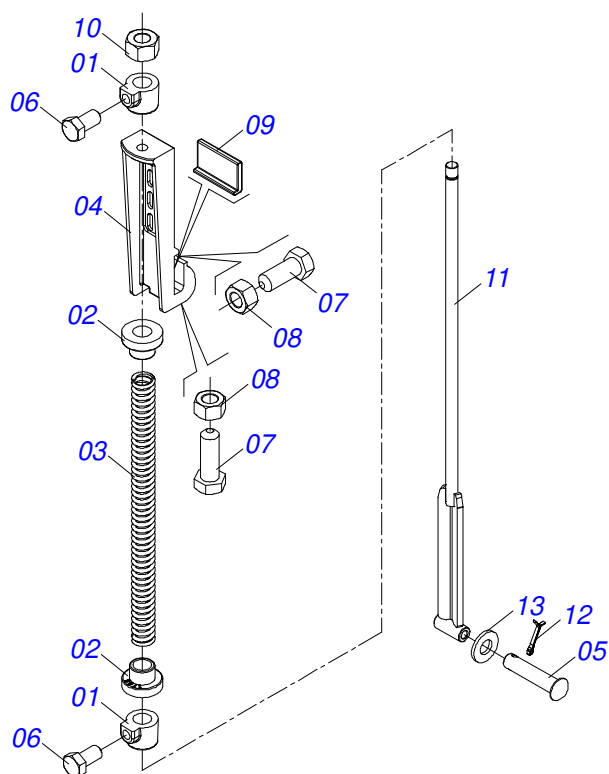


Item	Code	Description	See page	QT
01	0502040534	SPRING GUIDE BUSHING LOCK	02	
02	0502012184	FERTILIZER SPRING GUIDE	02	
03	0503031910	1.7" X 22.8" X 0.3" SPRING	01	
04	0502012510	SPRING ROD SUPPORT	01	
05	0591018219	JUNCTION SHAFT 12.70 X 109 ZN	01	
06	0501018535	1/2 X 1 BOLT	02	
07	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN	02	
08	0503010060	1/2 UNC G.5 ZN HEX NUT	02	
09	0502010891	SPRING ROD SUPPORT CHOCK	01	
10	0503010014	3/4" HEX NUT	01	
11	0521067619	FERTILIZER ROW TUBE	01	
12	0503010257	1/8" X 1" COTTERPIN	01	
13	0501010937	13,50 X 28 X 3,00 FLAT WASHER	01	

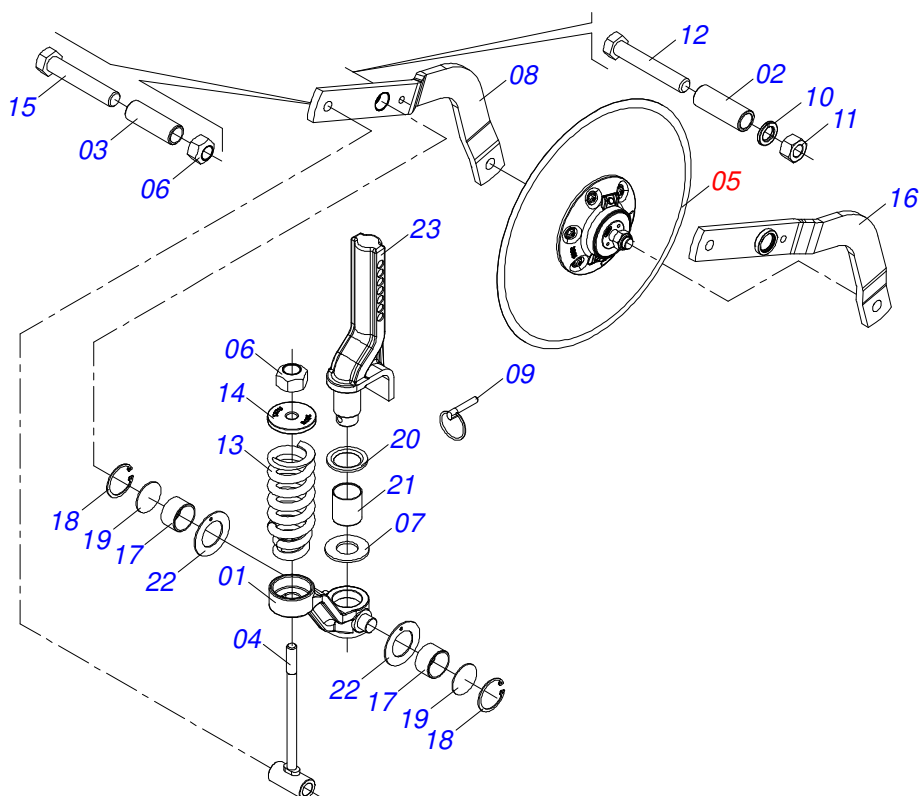


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521053248	20" DISC BLADE HUB WITH CONICAL BEARING	161	01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	THRUST WASHER		01
08	0521068887	DC RIGHT ARM WITH SLEEVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2 UNC G.5 ZN HEX NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH SLEEVE		01
17	0503019272	LUBRICANT SLEEVE		02
18	0503010390	SEAL RING		02
19	0581017628	LID		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012825	DISC BLADE FIXED AXLE		01

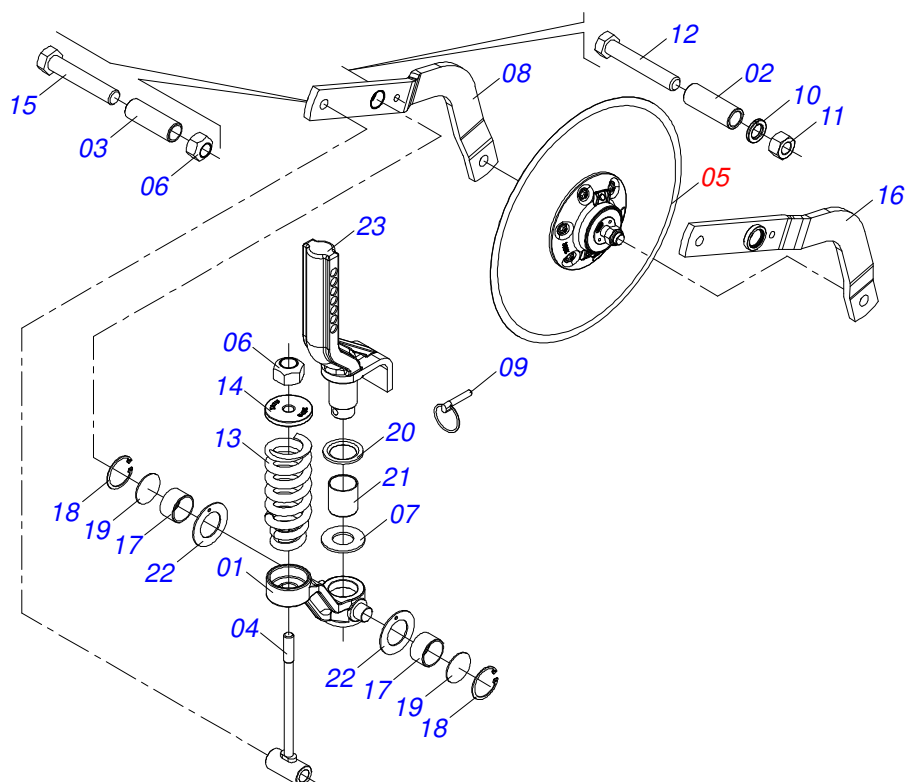


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521053248	20" DISC BLADE HUB WITH CONICAL BEARING	161	01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	THRUST WASHER		01
08	0521068887	DC RIGHT ARM WITH SLEEVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2 UNC G.5 ZN HEX NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH SLEEVE		01
17	0503019272	LUBRICANT SLEEVE		02
18	0503010390	SEAL RING		02
19	0581017628	LID		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012824	DISC BLADE FIXED AXLE		01

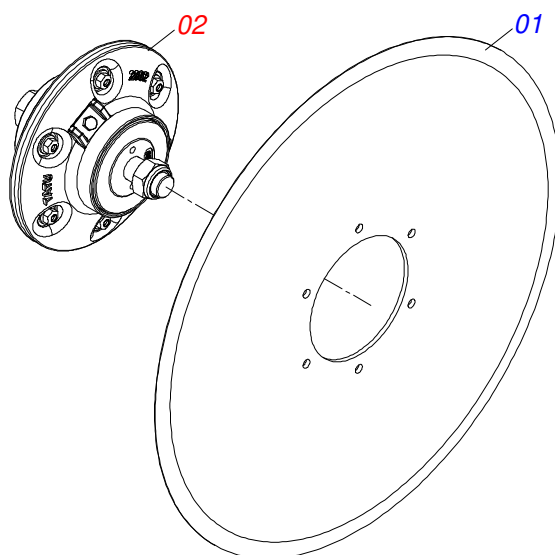


Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521053697	DISC BLADE HUB	162	01

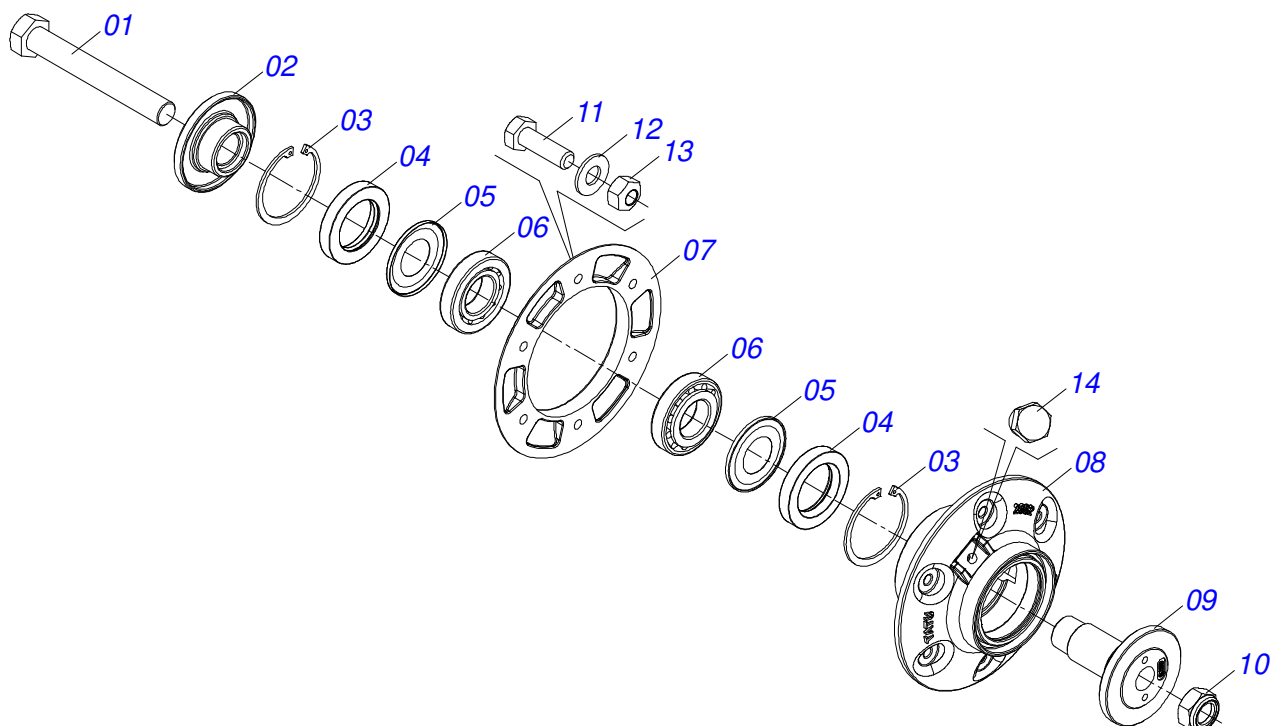


Item	Code	Description	See page	QT
01	0503019283	SCREW 7/8 UNF X 6.1/4		01
02	0502040872	REGULATORY NUT		01
03	0503010370	502072 CLAMPING RING (FOR AXLE)		02
04	0503010590	00674-B SEAL		02
05	0503019285	RING		02
06	0503012170	30207 ROLLER BEARING		02
07	0502020641	BLADE DISC FLANGE		01
08	0502012862	DISC BLADE HUB		01
09	0502040873	DISC BLADE AXLE		01
10	0503017755	NUT		01
11	0503018825	5/16 UNC UNC BOLT		06
12	0501010694	FLAT WASHER		06
13	0503013816	5/16" LOCKNUT		06
14	0511017907	1/8" BSPT X 6 PLUG		02

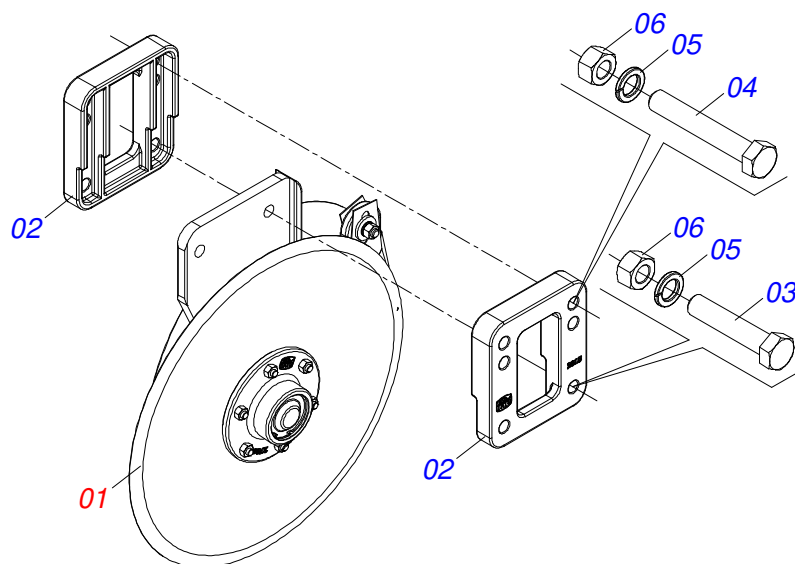


Item	Code	Description	See page	QT
01	0521055869	LEFT DUAL FERTILIZER DISC	164	01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2 UNC G.5 ZN HEX NUT		04

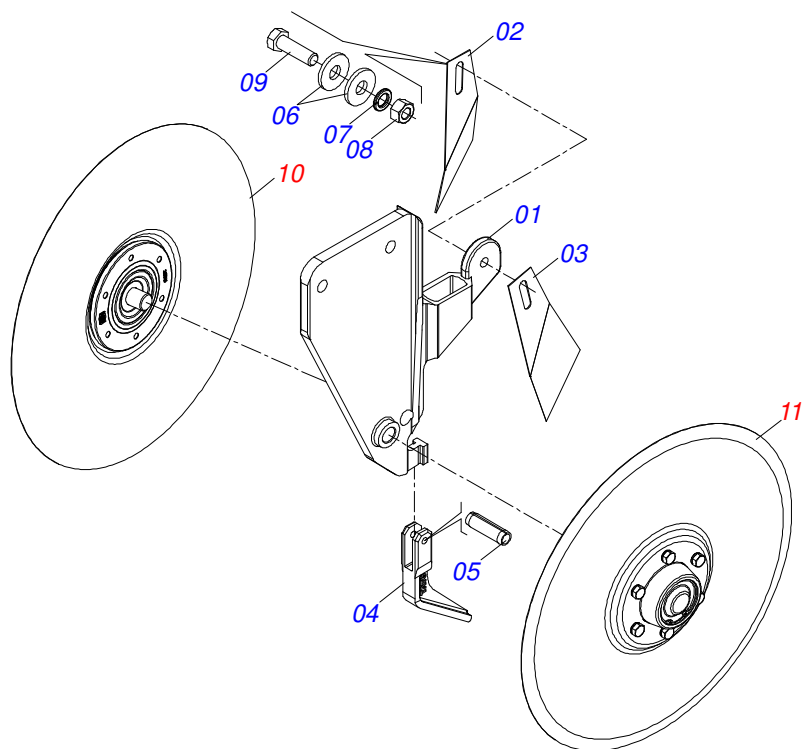


Item	Code	Description	See page	QT
01	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503010025	3/8 SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 131 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 133 FERTILIZER / SEED		01

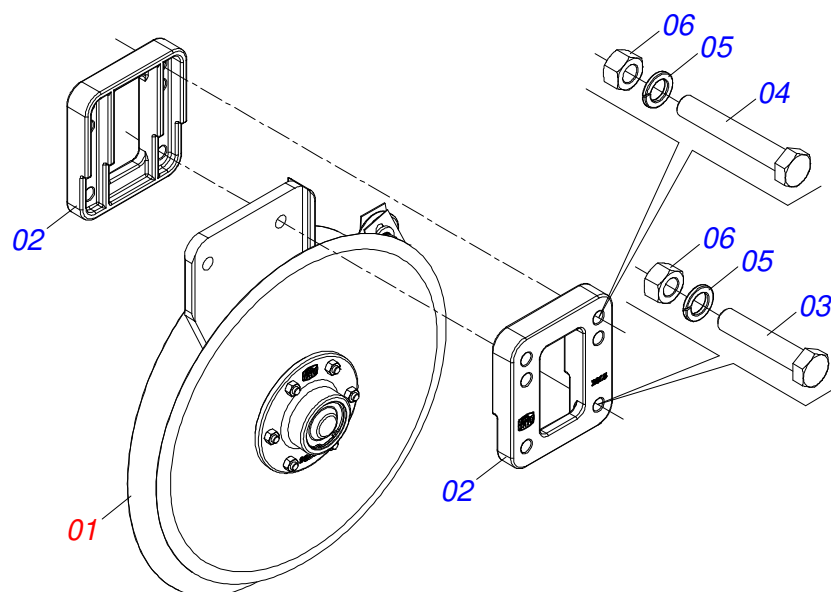


Item	Code	Description	See page	QT
01	0521055868	RIGHT DUAL FERTILIZER DISC	166	01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2 UNC G.5 ZN HEX NUT		04

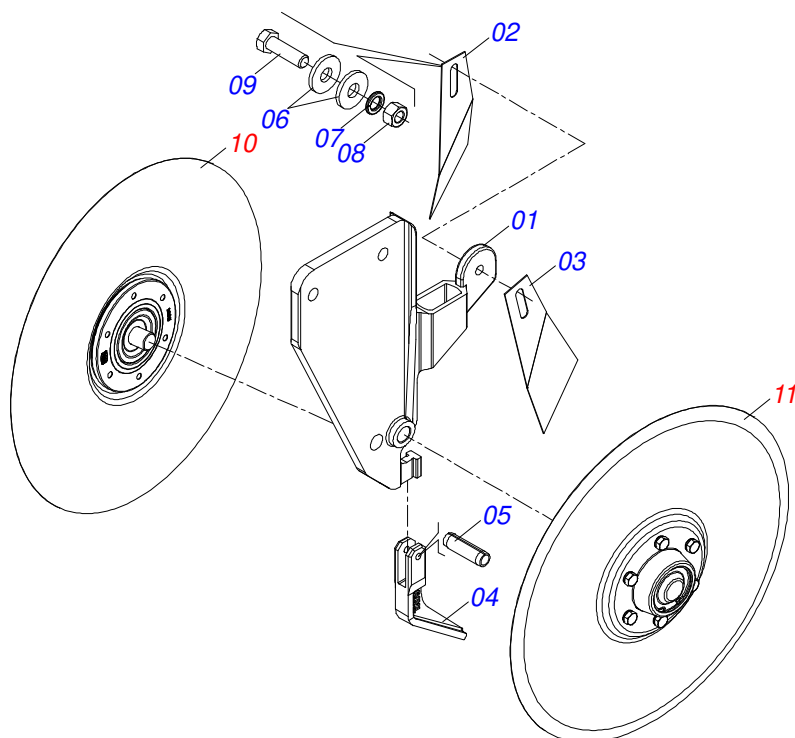


Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503010025	3/8 SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 131 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 133 FERTILIZER / SEED		01

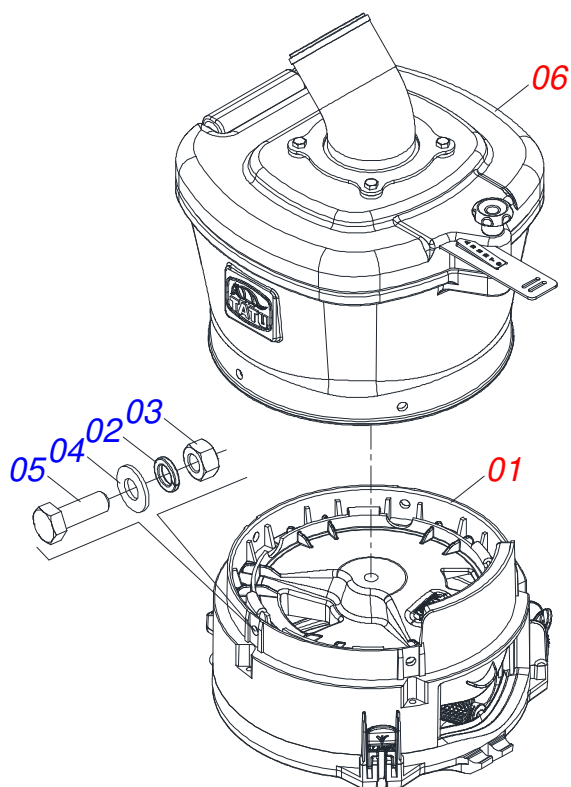


Item	Code	Description	See page	QT
01	0511052058	SEED SYSTEM TITANIUM	170	01
02	0503010179	LOCK WASHER 5/16 ZN 1K01528		05
03	0503010337	5/16" NUT		05
04	0501010694	FLAT WASHER		05
05	0503010358	5/16" X 5/8" BOLT		05
06	0531054583	SEMI-ASSEMBLED SINGLE SEED HOPPER	168	01

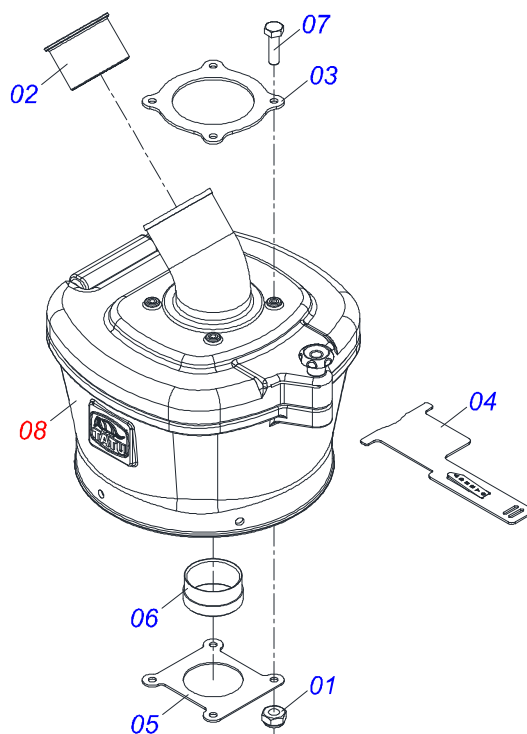


Item	Code	Description	See page	QT
01	0503015536	M6 X 1" SELF ADJUSTING NUT	04	
02	0581014295	FIXING SLEEVE	01	
03	0501213431	SEED NOZZLE FIXING FLANGE	01	
04	0501213520	SEED BREAKER BODY	01	
05	0501213432	BREAKER SUPPORT BASE	01	
06	0501213728	60 X 53 X 30 PVC TUBE	01	
07	0513010720	M6 X 1 X 35 C S G.5 ZB BOLT	04	
08	0503063760	SINGLE SEED HOPPER ASSEMBLED WITH LOCK 169 LID	01	

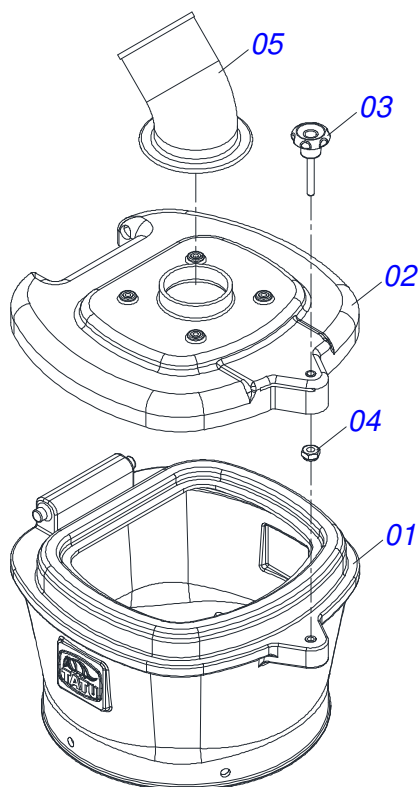


Item	Code	Description	See page	QT
01	0503035751	SIGMA SINGLE SEED HOPPER		01
02	0503035750	SEED HOPPER LID		01
03	0503035298	BAKELITE HANDLE WITH THREAD		01
04	0503015536	M6 X 1" SELF ADJUSTING NUT		01
05	0503035297	CURVED NOZZLE SEED HOPPER		01

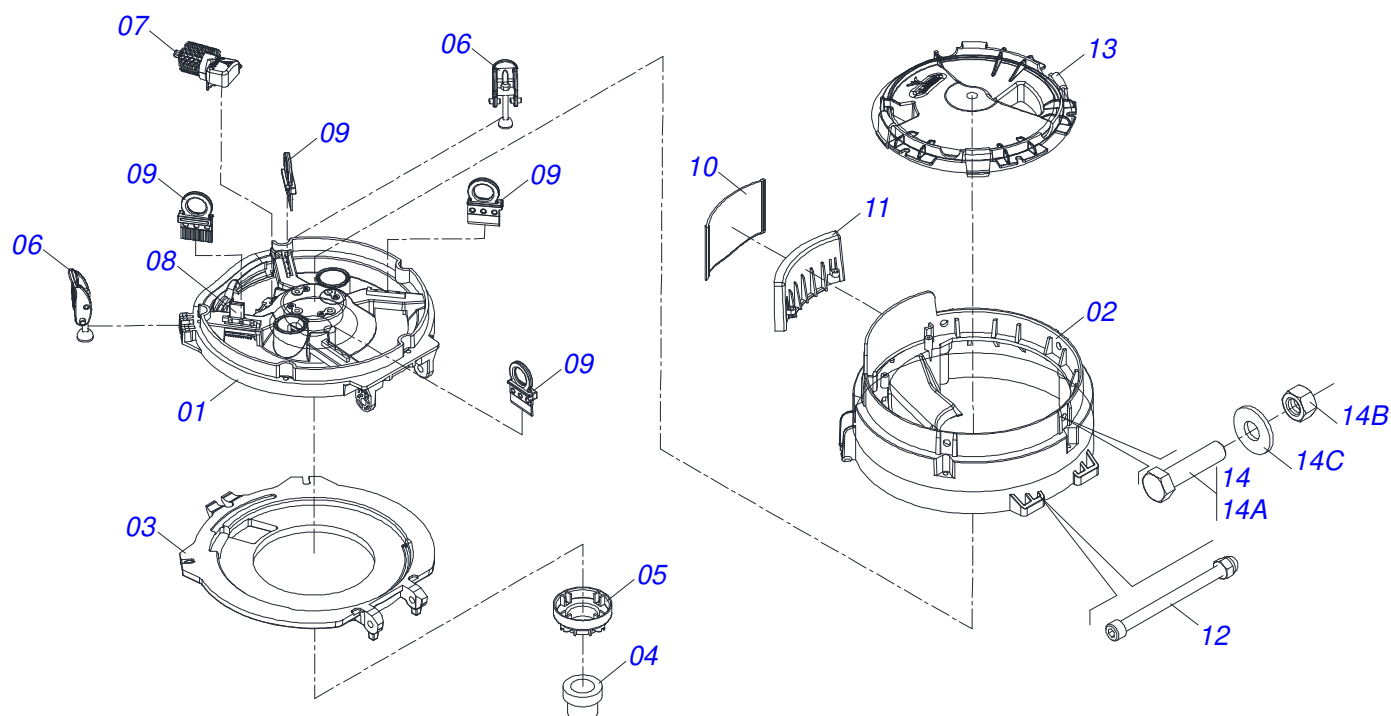


Item	Code	Description	See page	QT
01	0503062031	BASE SET		01
02	0503062032	NECK TITANIUM ASSY		01
03	0503062033	OPPOSITE BASE SET		01
04	0503062034	CENTRAL ADAPTER SET		01
05	0503062035	SET FALSE ADAPT CENTER		01
06	0503062036	SUBSET ASSY LOCK BASE		01
07	0503062037	SUBSET ESCOVAFLEX ASSY		01
08	0503062038	ASSY ANTI-LEAP		01
09	0503062039	POLIFLOW TITANIUM ASSY		01
09.	0503016279	POLIFLOW TITANIUM ASSY		01
10	0503062040	DISPLAY ASSY TITANIUM 1050010		01
11	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
12	0503062042	SET BOLT ARTICULADOR		01
13	0503062043	ASSY LIMIT WEIGHT		01
14	0503062044	ASSEMBLY SEED HOPPER SET		01
14A	0503016285	BOLT		05
14B	0503016286	HEX NUT		05
14C	0503016287	FLAT WASHER		05

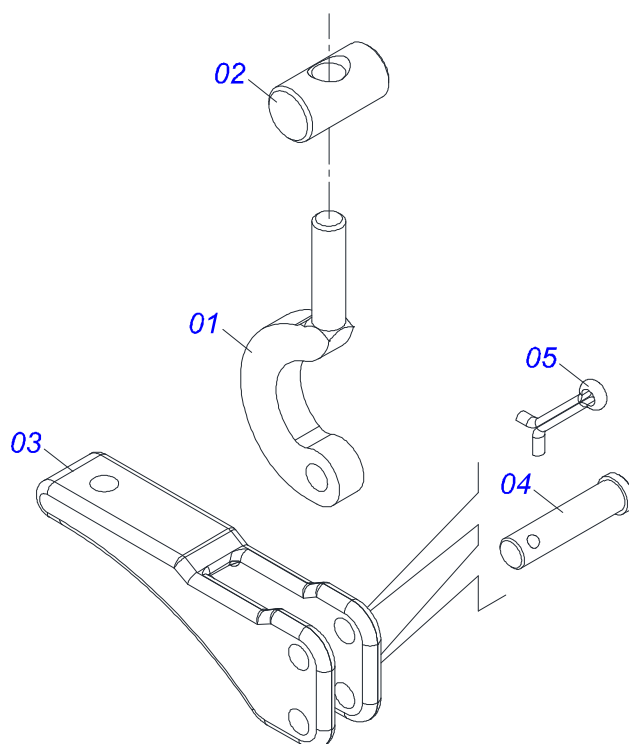


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

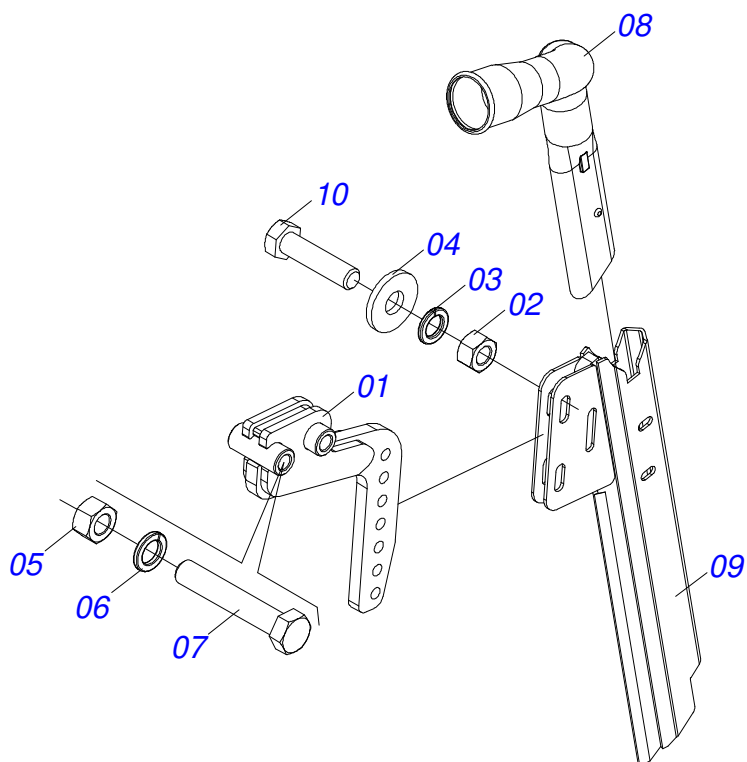


Item	Code	Description	See page	QT
01	0531061999	SINGLE DISC REAR CONDUCTOR SUPPORT		01
02	0503010026	3/8" NUT		02
03	0503010025	3/8 SPRING WASHER		02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0503010060	1/2 UNC G.5 ZN HEX NUT		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
08	0581010083	FERTILIZER SOCKET LEFT		01
09	0531061998	REAR FERTILIZER CONDUCTOR SINGLE DISC		01
10	0503010849	3/8" X 1-1/2" BOLT		02

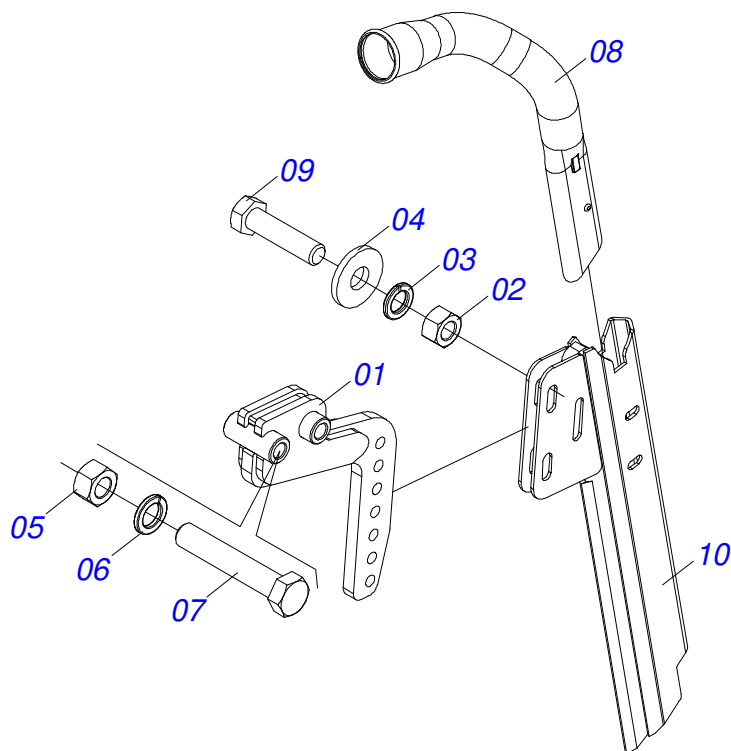


Item	Code	Description	See page	QT
01	0531061999	SINGLE DISC REAR CONDUCTOR SUPPORT		01
02	0503010026	3/8" NUT		02
03	0503010025	3/8 SPRING WASHER		02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0503010060	1/2 UNC G.5 ZN HEX NUT		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
08	0531061998	REAR FERTILIZER CONDUCTOR SINGLE DISC		01
09	0503010849	3/8" X 1-1/2" BOLT		02
10	0581010082	FERTILIZER SOCKET RIGHT		01

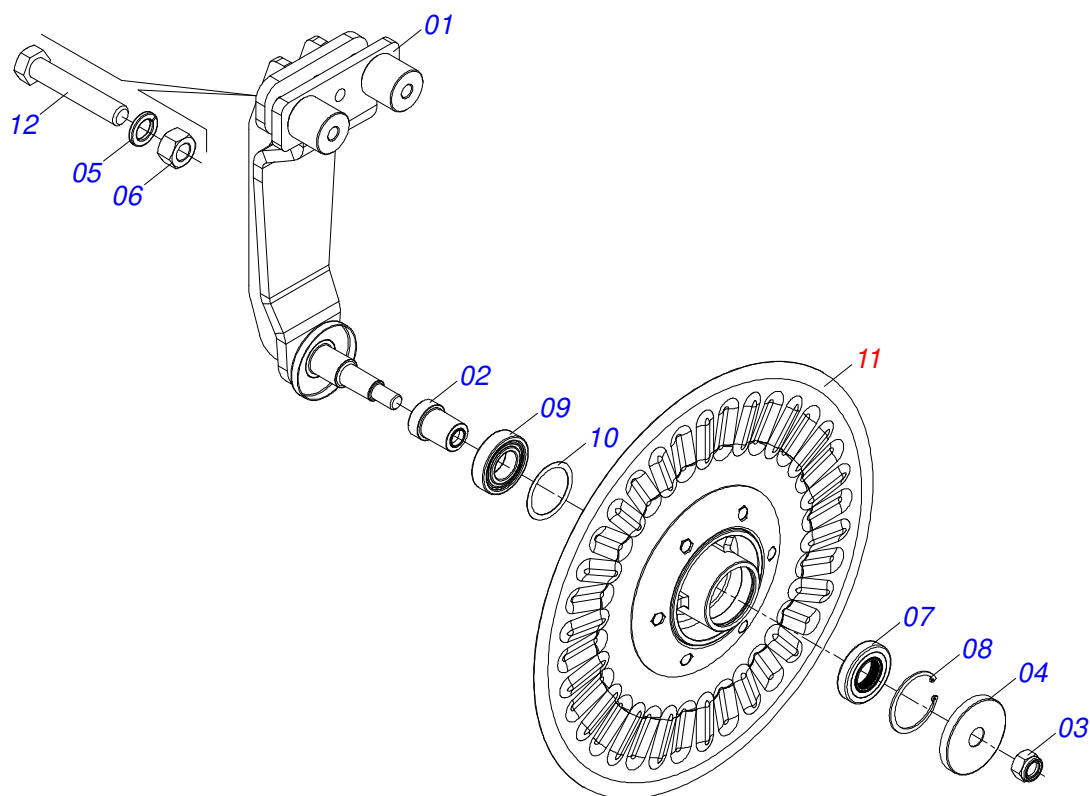


Item	Code	Description	See page	QT
01	0521069504	DOC DISC ARM		01
02	0581011838	SLEEVE GUIDES		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0521015376	DUST CLOAK		01
05	0503010019	1/2" SPRING WASHER		02
06	0503010060	1/2 UNC G.5 ZN HEX NUT		02
07	0503012417	SEAL		01
08	0503011800	SEAL RING		01
09	0503016063	ROLLER BEARING		01
10	0503030832	FLAT WASHER		01
11	0531050800	HUB WITH SMOOTH STRIPED FLAT DISC B. 18	175	01
12	0503010384	1/2" X 5" BOLT		02

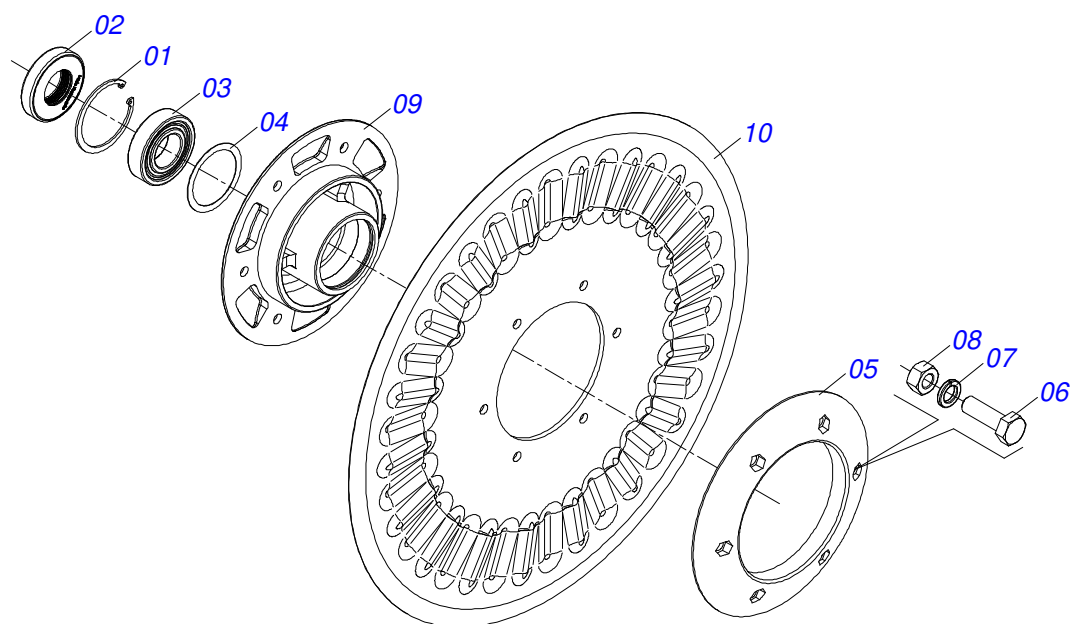


Item	Code	Description	See page	QT
01	0503011800	SEAL RING		01
02	0503012417	SEAL		01
03	0503016063	ROLLER BEARING		01
04	0503030832	FLAT WASHER		01
05	0502020641	BLADE DISC FLANGE		01
06	0503010371	5/16" X 1" BOLT		06
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
08	0503010337	5/16" NUT		06
09	0581019304	DISC HUB		01
10	0605025015	18" PLAIN COULTER BLADE		01

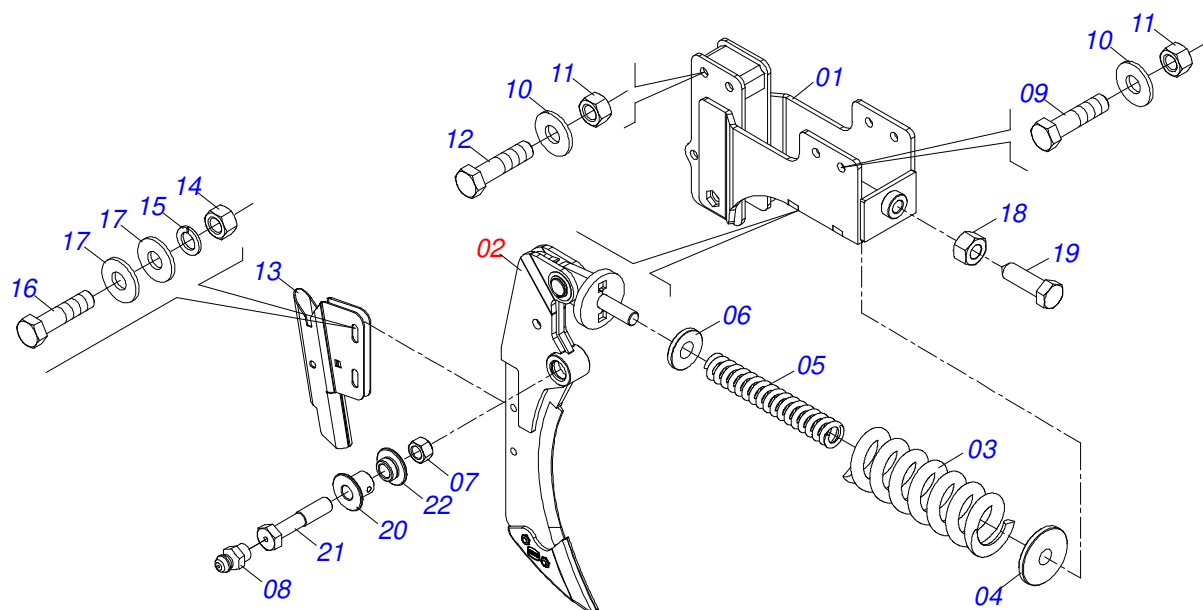


Item	Code	Description	See page	QT
01	0521068567	BOX SPRING		01
02	0521053951	STEM	177	01
03	0503034106	80 X 230 X 16,50 COMPRESSION SPRING		01
04	0581012094	SUPPORT WASHER		01
05	0503033624	35 X 215 X 7,14 COMPRES SPRING		01
06	0571019462	SUPPORT GUIDE PRING		01
07	0503012795	5/8" HEX SELF ADJUSTING NUT		01
08	0503010691	1/4" GREASE FITTING		01
09	0503010384	1/2" X 5" BOLT		02
10	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
11	0503011336	1/2" HEX SELF ADJUSTING NUT		04
12	0503017874	BOLT 1/2 UNC		02
13	0571018541	BODY SOCKET FERTILIZER		01
14	0503010026	3/8" NUT		02
15	0503010025	3/8 SPRING WASHER		02
16	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
17	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
18	0503010417	7/8" NUT		01
19	0503017058	HEX 7/8 UNC X 3 CSRT PC G.5 ZN		01
20	0581012084	ARTICULATED SLEEVE		01
21	0581012082	SCREW		01
22	0581012081	ARTICULATED SLEEVE		01

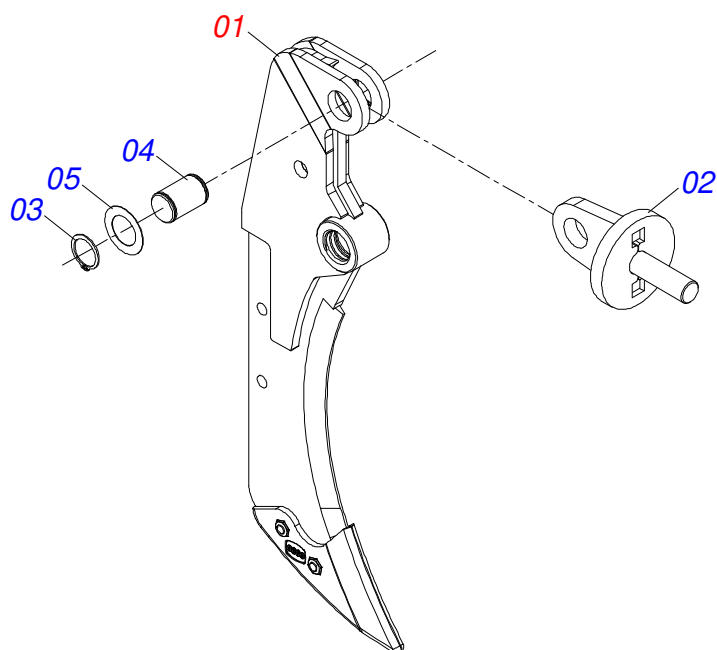


Item	Code	Description	See page	QT
01	0521053932	ROD WITH BEAK 0869	178	01
02	0521067065	FLANGE WASHER SPRING		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0581012092	AXLE FIXER		01
05	0521015818	FLAT WASHER		02

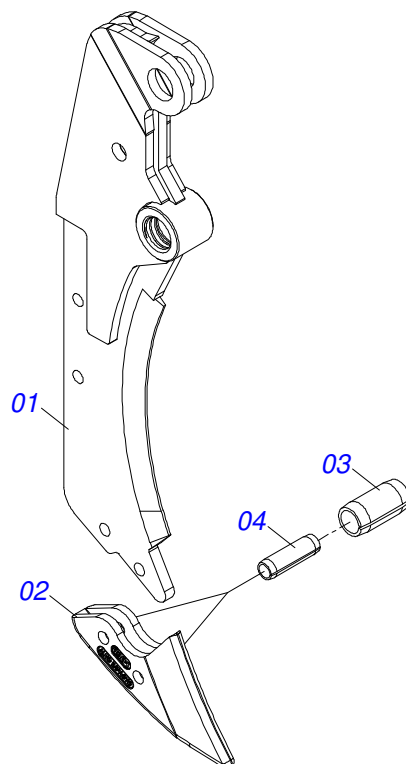


Item	Code	Description	See page	QT
01	0521067523	STEM WITHOUT BEAK DISARM		01
02	0502040901	FIXED ROD NOZZLE		01
03	0503016853	SPRING PIN		02
04	0503011402	0.2" X 0.8" SPRING PIN		02

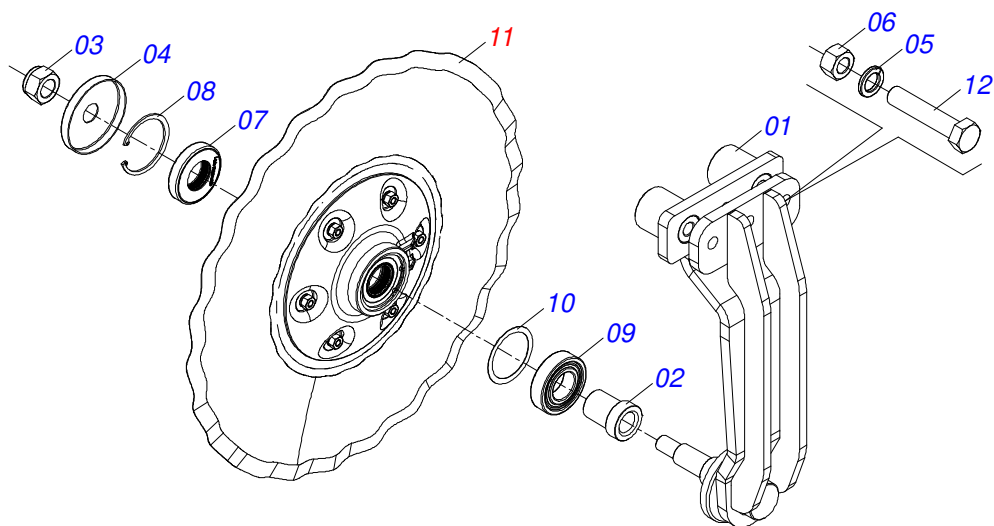


Item	Code	Description	See page	QT
01	0521069504	DOC DISC ARM		01
02	0581011838	SLEEVE GUIDES		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0521015376	DUST CLOAK		01
05	0503010019	1/2" SPRING WASHER		02
06	0503010060	1/2 UNC G.5 ZN HEX NUT		02
07	0503012417	SEAL		01
08	0503011800	SEAL RING		01
09	0503016063	ROLLER BEARING		01
10	0503030832	FLAT WASHER		01
11	0521054914	HUB WITH DOC 18 RIGHT	180	01
12	0503010384	1/2" X 5" BOLT		02

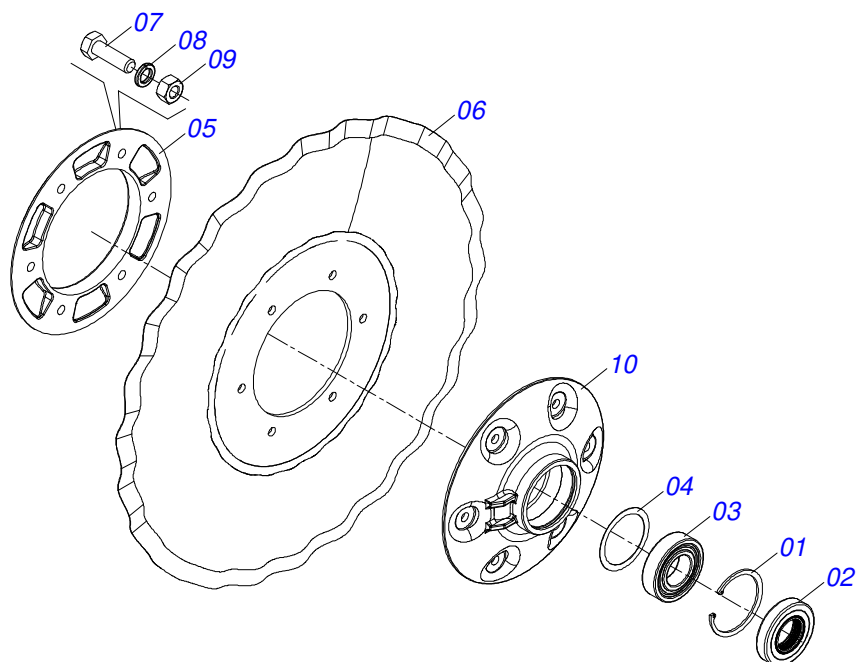


Item	Code	Description	See page	QT
01	0503011800	SEAL RING		01
02	0503012417	SEAL		01
03	0503016063	ROLLER BEARING		01
04	0503030832	FLAT WASHER		01
05	0502020641	BLADE DISC FLANGE		01
06	0607025032	PLAIN COULTER BLADE		01
07	0503010371	5/16" X 1" BOLT		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0503010337	5/16" NUT		06
10	0581019304	DISC HUB		01

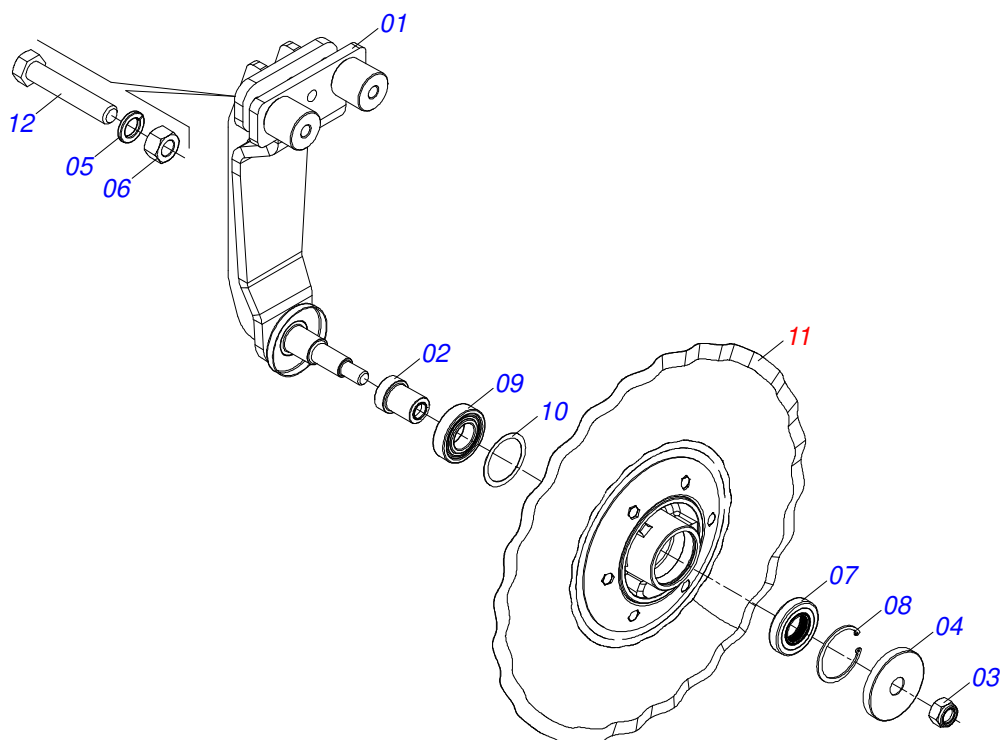


Item	Code	Description	See page	QT
01	0521069504	DOC DISC ARM		01
02	0581011838	SLEEVE GUIDES		01
03	0503010878	5/8" SELF ALIGNING NUT		01
04	0521015376	DUST CLOAK		01
05	0503010019	1/2" SPRING WASHER		02
06	0503010060	1/2 UNC G.5 ZN HEX NUT		02
07	0503012417	SEAL		01
08	0503011800	SEAL RING		01
09	0503016063	ROLLER BEARING		01
10	0503030832	FLAT WASHER		01
11	0521054915	HUB WITH DOC 18 LEFT	182	01
12	0503010384	1/2" X 5" BOLT		02

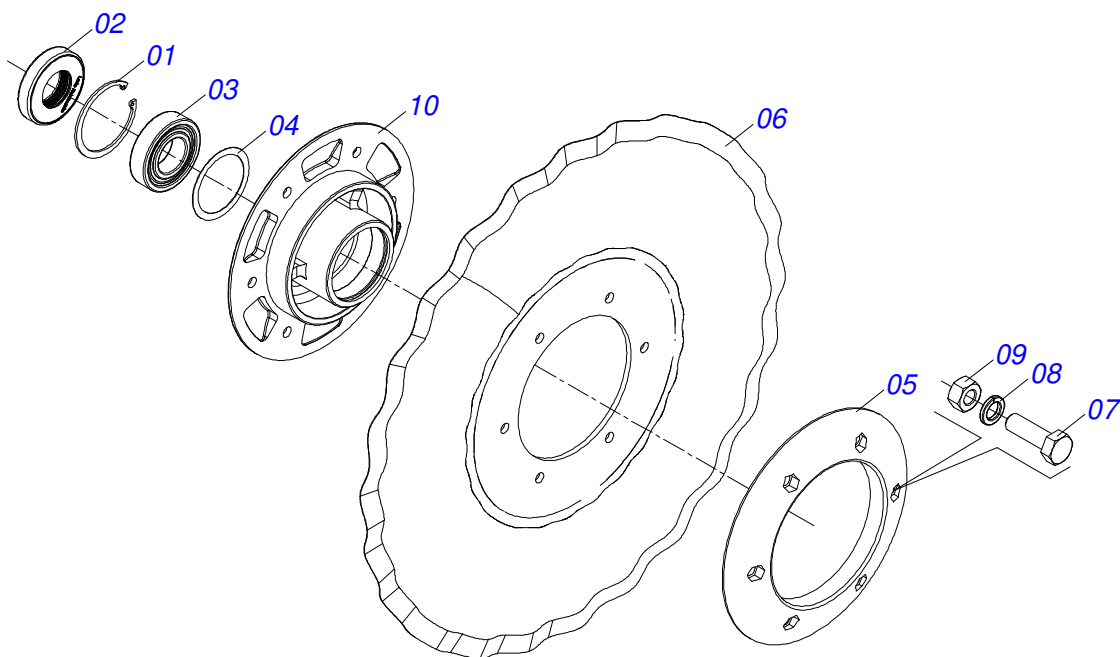


Item	Code	Description	See page	QT
01	0503011800	SEAL RING		01
02	0503012417	SEAL		01
03	0503016063	ROLLER BEARING		01
04	0503030832	FLAT WASHER		01
05	0502020641	BLADE DISC FLANGE		01
06	0607025032	PLAIN COULTER BLADE		01
07	0503010371	5/16" X 1" BOLT		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0503010337	5/16" NUT		06
10	0581019304	DISC HUB		01

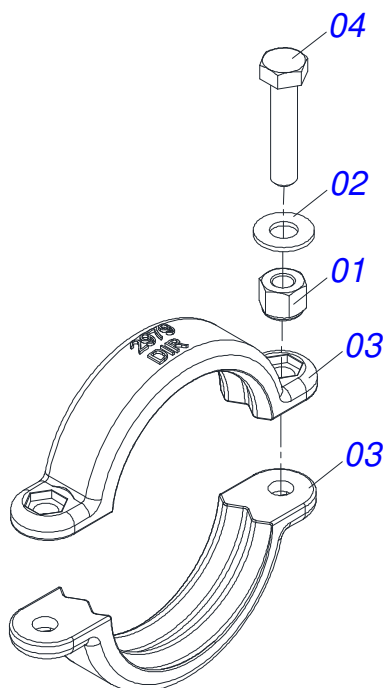


Item	Code	Description	See page	QT
01	0503013759	NUT		02
02	0501010694	FLAT WASHER		02
03	0502012979	CLAMP 3 RIGHT CSU		02
04	0503010421	5/16" X 1-1/2" BOLT		02

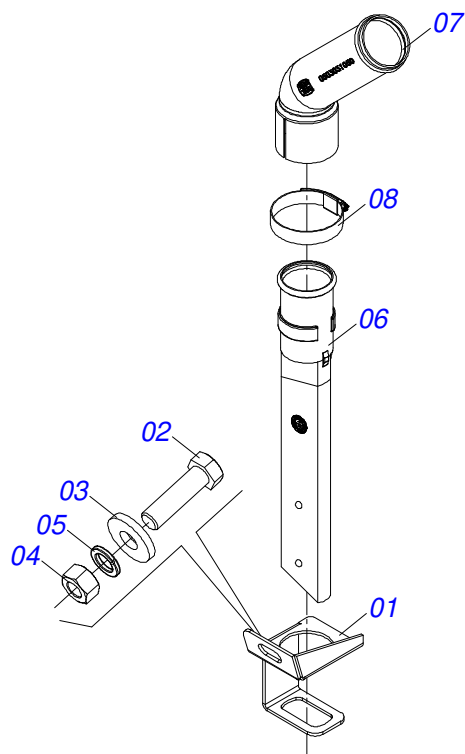


Item	Code	Description	See page	QT
01	0581013298	SUPPORT		01
02	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		01
03	0521018517	FLAT WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0503010019	1/2" SPRING WASHER		01
06	0503030483	FERTILIZER SOCKET		01
07	0503031050	CURVED CONDUCTOR		01
08	0503010246	CLAMP		01

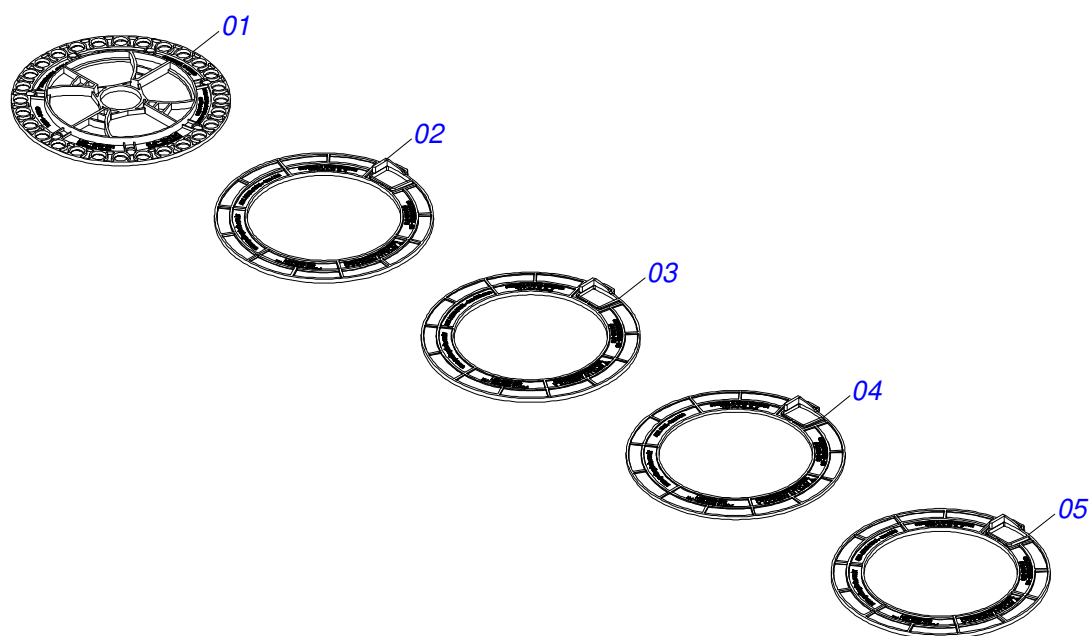

Item	Code	Description	See page	QT
01	0503016204	CORN DISC 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

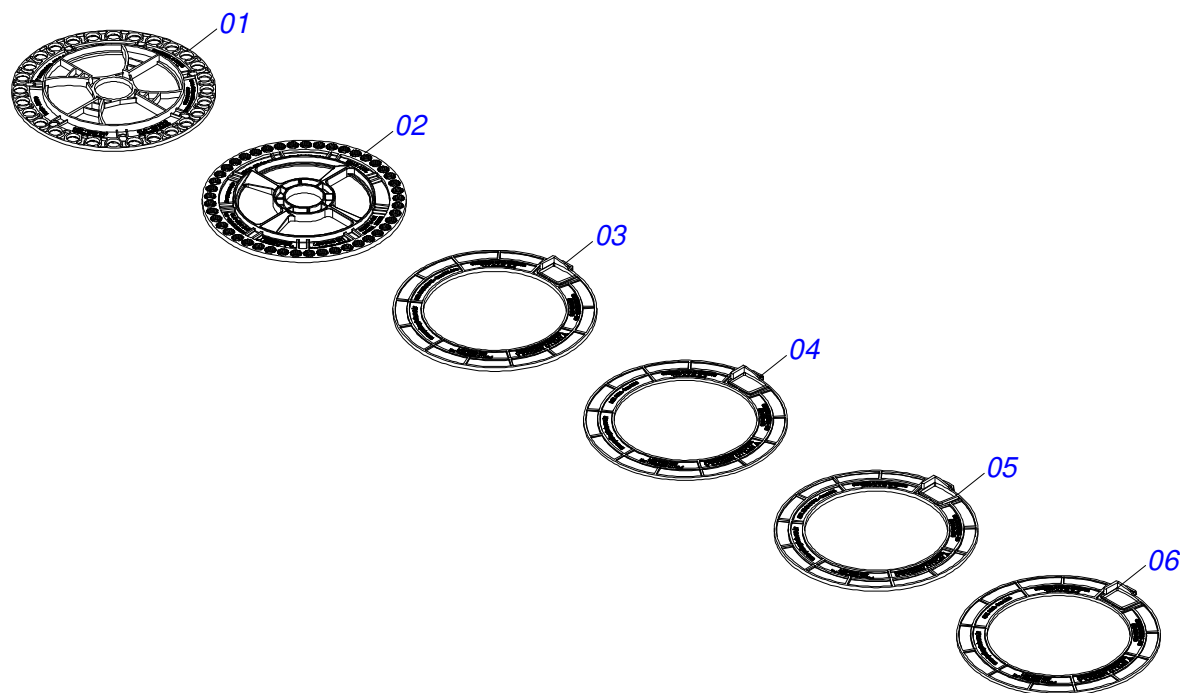

Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

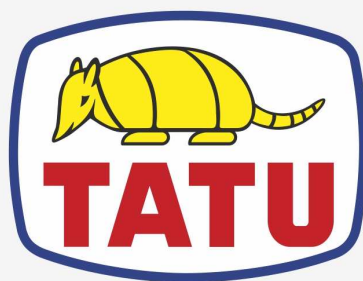

MARCHESAN

Technical Publications | Elaboration and Revision

LEONARDO JOSÉ DA SILVA SOUZA

www.marchesan.com.br

