

ROW CROP PLANTERS

COP TRIO 650 TITANIUM - FRAME 6850/7655 - CSU (FROM 08/2022)

Code: 0501093419
Series: S-0419
Revision: 00
Date Revision: JUNHO/2023

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111460064	COP TRIO 650 6850/15E450 ESPECIAL S-0419
0111460044	COP TRIO 650 7655/17E450 ESPECIAL S-0419

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX

0909096557	ASSY FRAME	1
0521056065	FRAME SHAFT	2
0521056088	WHEEL ASSY RIGHT FIXING EXTENSOR	3
0521056089	WHEEL ASSY LEFT FIXING EXTENSOR	4
0521056090	RIGHT WHEEL ASSY	5
0521056091	LEFT WHEEL ASSY	6
0521057820	WHEEL ASSEMBLY WITHOUT TRANSMISSION	7
0521056099	EE WHEEL WITH TIRE 7.00 X 16 ASSY WITH TRANSMISSION	8
0503063073	EE WHEEL WITH TIRE 7.00 X 16 14L ASSEMBLY	9
0521056100	WHEEL HUB ASSY WITH TRANSMISSION	10
0521056160	SIDE TRANSMISSION CURRENT STRETCHER	11
0521056094	HYDRAULIC CYLINDER 44,45 X 101,6 X 203 X 181 WITHOUT LUBRICATION	12
0521056299	MOUNTED RIGHT STRETCHER	13
0521055238	BEARING TENSIONER CHAIN	14
0521056095	ARTICULATED BEARING WHEELED WITHOUT LUBRICATION	15
0521056300	MOUNTED LEFT STRETCHER	16
0501058239	WHEEL CHAIN TENSIONER BEARING	17
0521057818	WHEEL WITH TIRE 7.00 X 16 14L ASSY WITHOUT TRANSMISSION	18
0521057819	ASSY WHEEL HUB WITHOUT TRANSMISSION	19
0521057817	HYDRAULIC CYLINDER 44,45 X 101,6 X 203 X 181 WITHOUT LUBRICATION	20
0521056119	SQUARE AXIS ASSEMBLY 730	21
0501056271	GEARBOX CLOSED BEARING	22
0501056444	BEARING WITH ROLLER	23
0501053788	3/4" SQUARE AXLE FASTENER	24
0521056084	MOTOR SHAFT ASSEMBLY - 6850	25
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	26
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	27
0511051434	TRANSMISSION ACTUATOR	28
0521056085	PLATE BEARING ASSY	29
0521056432	7655 - MOTOR AXLE ASSEMBLY	30
0521056121	HEX AXLE ASSEMBLY	31
0521056103	BEARING WITH GEAR 20Z HEX SHAFT 3/4	32
0521055498	SEED TRANSMISSION DOUBLE BEARING	33
0521056144	INTERMEDIATE SEED TRANSMISSION	34
0521056438	HEX AXLE ASSEMBLY 7655	35
0521056118	TRANSMISSION ASSY	36
0521056135	BEARING GEAR WITH DOUBLE	37
0521055217	LOWER CURRENT STRETCH	38
0521056134	STRETCHER FERTILIZER CURRENT 17Z	39
0521054446	LOWER CURRENT STRETCHER 21Z	40
0511052332	ASSY SUPPORT RIGHT FIXER CHANGE	41
0511052333	ASSEMBLY SUPPORT LEFT FIXER CHANGE	42
0521057000	RIGHT GEAR BOX ASSY	43
0521056999	LEFT GEAR BOX ASSY	44
0501048790	AXLE WITH RING	45
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	46
0501056443	GEAR HOUSING BEARING	47
0511059266	CLOSED BEARING	48
0501054655	CHAIN TENSIONER ASSY	49
0511059261	CHAIN TENSIONER	50
0531056473	3695 - ALPHA II FERTILIZER METERING HOPPER SET	51
0531056805	RIGHT FERTILIZER HOPPER SUPPORT WITH METERING	52



MARCHESAN

INDEX

0531055319	ALPHA II FERTILIZER METERING	53
0531055863	ASSY TRANSMISSION HUB	54
0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	55
0531059139	ASSY COLLECTOR	56
0531055273	ALPHA FERTILIZER METERING CLAMP	57
0531055898	CHAIN TIGHTENER	58
0531059739	SINGLE SIDE GEAR BEARING SET 22Z	59
0531057911	22Z GEAR SIDE BEARING ASSEMBLY	60
0531057901	GEAR	61
0531056806	CENTRAL FERTILIZER SUPPORT WITH DOSER	62
0531059737	RIGHT BEARING WITH ALPHA GEAR	63
0531059738	LEFT EARLY BEARING	64
0531055896	80 INTERMEDIATE TRANSMISSION BEARING ASSEMBLED	65
0501056451	BEARING	66
0531056807	LEFT FERTILIZER HOPPER SUPPORT WITH METERING	67
0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	68
0531056474	ALPHA FERTILIZER HOPPER SET	69
0531056737	FERTILIZER RIGHT BEAM SUPPORT	70
0531055897	INTERMEDIATE TRANSMISSION BEARING	71
0531056739	CENTRAL FERTILIZER HOPPER SUPPORT	72
0531056738	LFT FERTILIZER BEAM SUPPORT	73
0521057078	HANDRAIL ASSY - 6850	74
0521057080	7655 - HANDRAIL ASSY	75
0531051907	PLATFORM ASSEMBLY - 6850	76
0531051909	7655 - PLATFORM ASSEMBLY	77
0521057199	6850 - HYDRAULIC SET	78
0521057899	SUPPORT VALVE BLOCK VACUOMETER ASSY 5750/7350	79
0521057855	CASAPPA DIVIDER VALVE WITH FIXING NIPLES	80
0521057886	HOSE CLAMP ASSEMBLY	81
0521057259	OIL CONDUCTOR FIXATION	82
0521057704	SLIDING SUPPORT HYDRAULIC HOSE	83
0501053834	MALE QUICK COUPLER	84
0521057184	HYDRAULIC ASSY 7655	85
0521057854	SUPPORT VALVE BLOCK VACUOMETER ASSY 7655/8450	86
0909098878	HYDRAULIC MARKER ASSY 2 TUMBLES	87
0501054649	HBM SEQUENTIAL VALVE	88
0511058431	HYDRAULIC CYLINDER	89
0521057306	HYDRAULIC MARKER	90
0511058449	HYDRAULIC CYLINDER	91
0909098940	ROW MARKER HYDRAULIC CIRCUIT	92
0511053356	ASSY LADDER	93
0511058191	REST ASSY	94
0511057803	ASSY PORT MANUAL INSTRUCTION	95
0909098859	DRAWBAR ASSY - 5750/6350/6850/7655	96
0521045756	HYDRAULIC CYLINDER	97
0521050573	EXTENSOR 3RD POINT	98
0511057817	SUPPORT HOSE	99
0511055096	TRACTOR HITCH	100
0511053179	TRACTOR COUPLING SHAFT	101
0521050133	TURNBUCKLE SIDE 755/480	102
0521050196	TURNBUCKLE SIDE 1125/480	103
0521050574	EXTENSOR	104
0521057452	ASSY INTERMEDIATE DRAWBAR FIXATION SUPPORT	105
0521057928	REAR HEADLIGHT ASSY 6850 A 7350	106
0521053672	LIGHTHOUSE ASSY	107



MARCHESAN

INDEX


0521052792	MOUNTED REAR LIGHT	108
0521057929	REAR HEADLIGHT ASSY 7655 A 8450	109
0531058095	ASSY BOX SEED	110
0521051730	ASSY FIXING SUPPORT	111
0531058096	SEMI ASSEMBLED CSU ASSEMBLY C3 X 175 3 BOXES 6 MOUTHS 15C	112
0531057950	3" X 175 SEED NOZZLE WITH FIXING	113
0531054471	CAP WITH FIXING	114
0521057149	ASSY RIGHT FIXING SUPPORT	115
0521057151	FIXING SUPPORT LEFT ASSY	116
0531057957	ASSY BOX SEED	117
0531057959	SEMI ASSEMBLED CSU ASSEMBLY C3 X 175 3 BOXES 7 MOUTHS 19C	118
0531057714	6850 - ALPHA II LABEL SET	119
0531059625	KIT WITH ALPHA COMPONENTS - 15 ROWS	120
0531059627	KIT WITH ALPHA COMPONENTS - 17 ROWS	121
0511059494	TRACTION SPRING ASSY	122
0521055204	ROW MARKER DISC	123
0521056993	ASSY WATER RESERVOIR	124
0521056994	ASSY TOOL CHEST	125
0909096558	SEED LINE/ASSY FERTILIZER	126
0521056877	SHORT ROW FRONT	127
0521056878	LONG FRONT ROW	128
0531052956	ASSEMBLY SEED ROW TRANSMISSION FIXING BEARING	129
0521056069	SEMI-ASSEMBLED SHORT FERTILIZER ROW	130
0521056066	SEMI-ASSEMBLED LONG FERTILIZER ROW	131
0521056070	DC 20 ASSY	132
0521053248	20" DISC BLADE HUB WITH CONICAL BEARING	133
0521053697	DISC BLADE HUB	134
0531055312	TITANIUM SINGLE SEED SYSTEM	135
0511052058	SEED SYSTEM TITANIUM	136
0531054583	SEMI-ASSEMBLED SINGLE SEED HOPPER	137
0521055053	DEPTH/COMPACTOR SYSTEM - SPCRR	138
0521055065	ASSY DEPTH / COMPACTOR	139
0501056769	DEPTH WHEELS REGULATOR ASSY	140
0521055033	SEMI-ASSEMBLED COMPACTOR BODY	141
0521055054	LEFT ARM WITH SLEEVE	142
0521055066	RIGHT ARM WITH SLEEVE	143
0521055068	RAYED WHEEL CENTER CLOSED	144
0521055055	HUB WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	145
0521054990	LEFT COMPACTOR WHEEL	146
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	147
0521055017	RIGHT COMPACTOR WHEEL	148
0521051447	FRONT ASSY ROW BEARING	149
0521056844	SCARIFIER ROD	150
0521053673	SCARIFIER ROD WITH NOZZLE	151
0521056944	REAR FRAME	152
0521056945	REAR FRAME	153
0521056955	RIGHT DDD ASSY	154
0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	155
0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	156
0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	157
0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	158
0521056954	LEFT DDD ASSY	159
0521056582	TITANIUM SEED METER SET	160



MARCHESAN

INDEX

0521056639	SEED ROW TRANSMISSION		161
0531053040	ENCAPSULATED CHAIN GUIDE SEED ROW WITH CONDUCTOR		162
0521059683	ENCAPSULATED CHAIN SUPPORT GUIDE		163
0531052836	CSU SEED CONDUCTOR JOINT SUPPORT		164
0521050525	FIXER FERTILIZER CONDUCTOR		165
0503062066	DISC SET WITH CORN RING		166
0503062067	DISC SET / RING SOY 90F TITANIUM		167

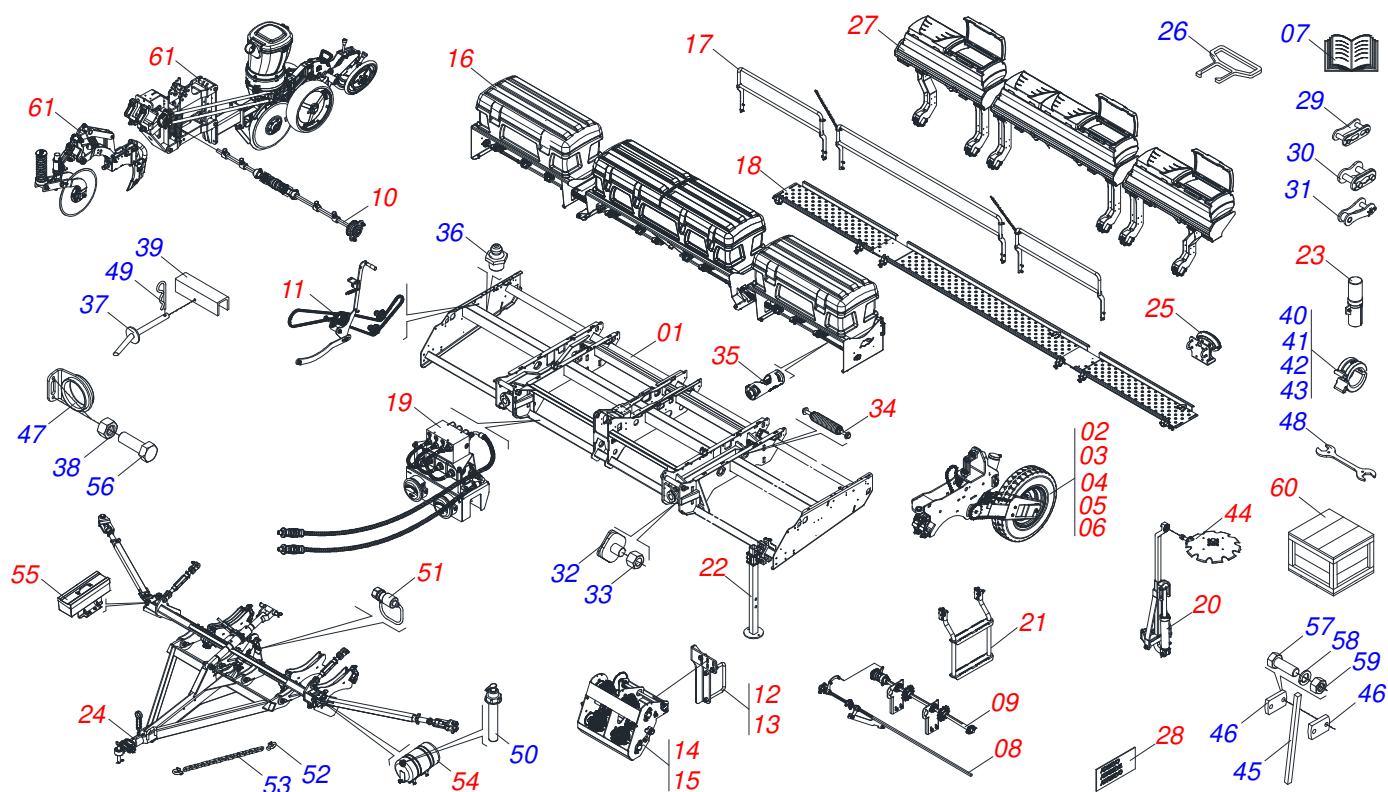


Item	Code	Description	See page	6850	7655
01	0521056065	FRAME SHAFT	2	01	00
01.	0521069990	RIGHT SIDE FRAME 6850		00	01
02	0521056088	WHEEL ASSY RIGHT FIXING EXTENSOR	3	01	01
03	0521056089	WHEEL ASSY LEFT FIXING EXTENSOR	4	01	01
04	0521056090	RIGHT WHEEL ASSY	5	01	01
05	0521056091	LEFT WHEEL ASSY	6	01	01
06	0521057820	WHEEL ASSEMBLY WITHOUT TRANSMISSION	7	01	01
07	0501090994	INSTRUCTIONS MANUAL		01	01
08	0521056119	SQUARE AXIS ASSEMBLY 730	21	01	01
09	0521056084	MOTOR SHAFT ASSEMBLY - 6850	25	01	00
09.	0521056432	7655 - MOTOR AXLE ASSEMBLY	30	00	01
10	0521056121	HEX AXLE ASSEMBLY	31	01	00
10.	0521056438	HEX AXLE ASSEMBLY 7655	35	00	01
11	0521056118	TRANSMISSION ASSY	36	01	01
12	0511052332	ASSY SUPPORT RIGHT FIXER CHANGE	41	01	01
13	0511052333	ASSEMBLY SUPPORT LEFT FIXER CHANGE	42	01	01
14	0521057000	RIGHT GEAR BOX ASSY	43	01	01
15	0521056999	LEFT GEAR BOX ASSY	44	01	01
16	0531056473	3695 - ALPHA II FERTILIZER METERING HOPPER SET	51	01	00
16.	0531056474	ALPHA FERTILIZER HOPPER SET	69	00	01
17	0521057078	HANDRAIL ASSY - 6850	74	01	00
17.	0521057080	7655 - HANDRAIL ASSY	75	00	01
18	0531051907	PLATFORM ASSEMBLY - 6850	76	01	00
18.	0531051909	7655 - PLATFORM ASSEMBLY	77	00	01
19	0521057199	6850 - HYDRAULIC SET	78	01	00
19.	0521057184	HYDRAULIC ASSY 7655	85	00	01
19..	0909098878	HYDRAULIC MARKER ASSY 2 TUMBLES	87	00	01
20	0521057306	HYDRAULIC MARKER	90	01	00
21	0511053356	ASSY LADDER	93	01	01
22	0511058191	REST ASSY	94	01	01
23	0511057803	ASSY PORT MANUAL INSTRUCCION	95	01	01


ASSY FRAME

0909096557

Item	Code	Description	See page	6850	7655
24	0909098859	DRAWBAR ASSY - 5750/6350/6850/7655	96	01	01
25	0521057928	REAR HEADLIGHT ASSY 6850 A 7350	106	02	00
25.	0521057929	REAR HEADLIGHT ASSY 7655 A 8450	109	00	01
26	0501214546	SPRING KEY		01	01
27	0531058095	ASSY BOX SEED	110	01	00
27.	0531057957	ASSY BOX SEED	117	00	01
28	0531057714	6850 - ALPHA II LABEL SET	119	01	00
28.	0541051262	7655 - ALPHA II LABEL SET			
29	0503011750	AMENDMENT WITH LOCK		06	06
30	0503011751	REDUCTION		06	06
31	0503010780	N-2050 AMENDMENT		06	06
32	0521064285	LOCK LOWER FRAME		04	04
33	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		04	04
34	0511059494	TRACTION SPRING ASSY	122	10	10
35	0531059625	KIT WITH ALPHA COMPONENTS - 15 ROWS	120	01	00
35.	0531059627	KIT WITH ALPHA COMPONENTS - 17 ROWS	121	00	01
36	0503010002	1800 GREASE FITTING		01	01
37	0501068994	8,30 X 78 LOCK PIN		08	08
38	0503013816	5/16" LOCKNUT		02	02
39	0521013022	TRANSPORT LOCK		08	08
40	0501047895	25 ROD STOP		08	08
41	0501047885	30 ROD STOP		08	08
42	0501047886	35 ROD STOP		08	08
43	0501047887	40 ROD STOP		08	08
44	0521055204	ROW MARKER DISC	123	02	02
45	0521013164	EXTENDER		02	02
46	0501011310	FIXER LOCK		08	08
47	0521066303	HOSE GUIDE		01	01
48	0541015451	FIXED KEY 2.3/8 X 2.3/4		01	01
49	0503030168	HITCH PIN CLIP		08	08
50	0503019262	SOAP DISH VACUUM		01	01
51	0501053834	MALE QUICK COUPLER	84	01	01
52	0503014321	CABLE STEEL SHACKLE		02	02
53	0503014120	CHAIN		01	01
54	0521056993	ASSY WATER RESERVOIR	124	01	01
55	0521056994	ASSY TOOL CHEST	125	01	01
56	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		02	02
57	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		08	08
58	0503010019	1/2" SPRING WASHER		08	08
59	0503010060	1/2 UNC G.5 ZN HEX NUT		08	08
60	0511025997	BOX WITH HYDRAULIC MARKER COMPONENTS		00	01
61	0909096558	SEED LINE/ASSY FERTILIZER	126	15	17

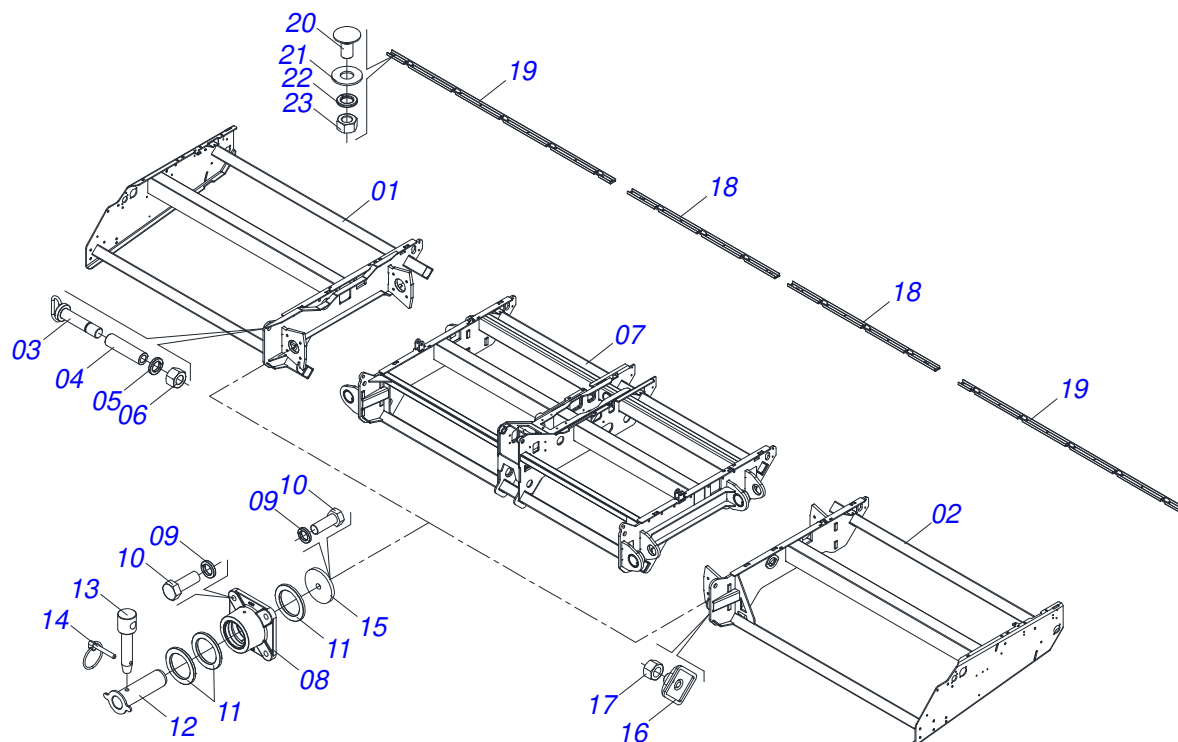


Item	Code	Description	See page	QT
01	0521069990	RIGHT SIDE FRAME 6850		01
02	0521069989	LEFT SIDE FRAME 6850		01
03	0521063003	LOCK PIN		02
04	0571010969	LOCK SLEEVE FRAME		02
05	0503013627	1.1/2 SPRING WASHER		02
06	0501010110	1.1/2" NUT		02
07	0521069988	CENTRAL FRAME		01
08	0501110683	REAR HUB ARTICULATOR WITH SLEEVES		04
09	0503011442	3/4" SPRING WASHER		20
10	0501010098	3/4" UNC BOLT		20
11	0571010094	SLEEVE FLANGE		12
12	0521066298	ARTICULATOR		04
13	0571013510	LOCK AXLE		04
14	0503030085	LOCK PIN		04
15	0571010095	FLAT WASHER		04
16	0521064285	LOCK LOWER FRAME		04
17	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		04
18	0591012308	SIDE GUTTER 24 X 50 X 1950		02
19	0591012303	CENTRAL TRACK		02
20	0503013029	3/8" X 3/4" BOLT		08
21	0501013518	FLAT WASHER		08
22	0503010025	3/8 SPRING WASHER		08
23	0503010026	3/8" NUT		08

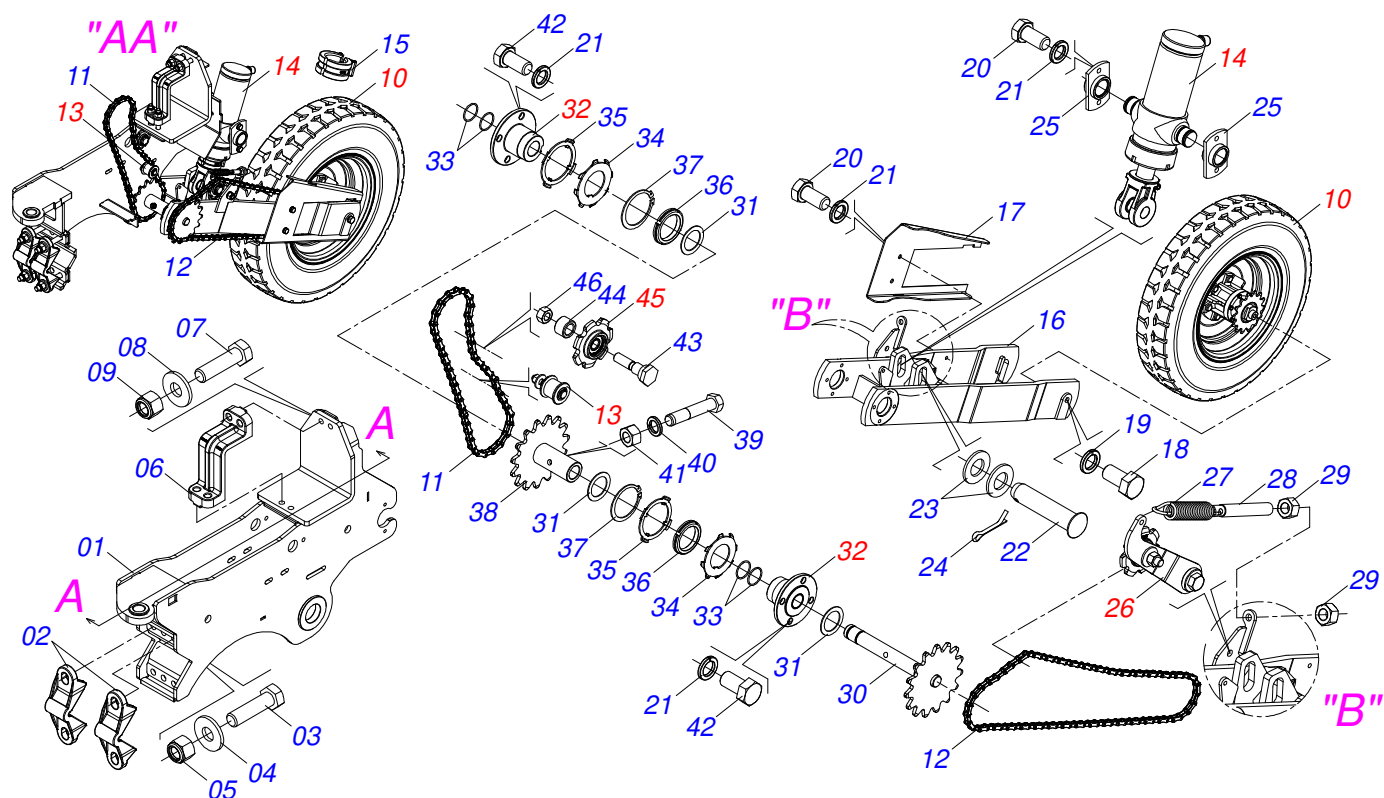

Item	Code	Description	See page	QT
01	0521066480	RH WHEELS SUPPORT		01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
03	0503016485	BOLT 3/4		04
04	0541010763	FLAT WASHER		04
05	0503010152	3/4" SELF LOCKING NUT		04
06	0502012720	WHEEL SUPPORT FIXER		01
07	0503017857	BOLT 5/8 UNF 4		04
08	0501012140	FLAT WASHER		04
09	0503010811	5/8" UNF SELF ADJUSTING NUT		04
10	0521056099	EE WHEEL WITH TIRE 7.00 X 16 ASSY WITH 8 TRANSMISSION		01
11	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
12	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
13	0521056160	SIDE TRANSMISSION CURRENT STRETCHER	11	01
14	0521056094	HYDRAULIC CYLINDER 44,45 X 101,6 X 203 X 181 WITHOUT LUBRICATION	12	01
15	0501047888	45 ROD STOP		02
16	0511064744	WHEEL FORK		01
17	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
18	0503011167	M16 X 2 X 30 BOLT		02
19	0503010027	5/8 SPRING WASHER		02
20	0503010834	1/2 X 1 BOLT		06
21	0503010019	1/2" SPRING WASHER		14
22	0521010546	1.2" X 5.7" COUPLING SHAFT		01
23	0501017779	32 X 60 X 4.75 FLAT WASHER		02
24	0503010523	1/4" X 2" SPLIT PIN		01
25	0501110968	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		02
26	0521056299	MOUNTED RIGHT STRETCHER	13	01
27	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
28	0501013491	5/8" TENSIONER SPRING		01
29	0503010013	5/8 NUT		02

Item	Code	Description	See page	QT
30	0531060127	15Z GEAR AXLE WITHOUT LUBRICATION		01
31	0501018466	FLAT WASHER		03
32	0521056095	ARTICULATED BEARING WHEELED WITHOUT 15 LUBRICATION		02
33	0503010411	RING 2-023 N 3006-9B		04
34	0561013021	BEARING INNER LOCK		02
35	0561013022	BEARING EXTERNAL LOCK		02
36	0561013020	KM 12 NUT		02
37	0503010398	501082 CLAMPING RING (FOR AXLE)		02
38	0511061809	15Z GEAR WITH COUPLING		01
39	0503011103	7/16" X 2-1/2" BOLT		01
40	0503010180	7/16" SPRING WASHER		01
41	0503010244	7/16" NUT		01
42	0503013232	1/2' BOLT		08
43	0551018252	CHAIN TENSIONER AXLE		01
44	0521010479	SLEEVE ARTICULATION		01
45	0501058239	WHEEL CHAIN TENSIONER BEARING	17	01
46	0503011336	1/2" HEX SELF ADJUSTING NUT		01

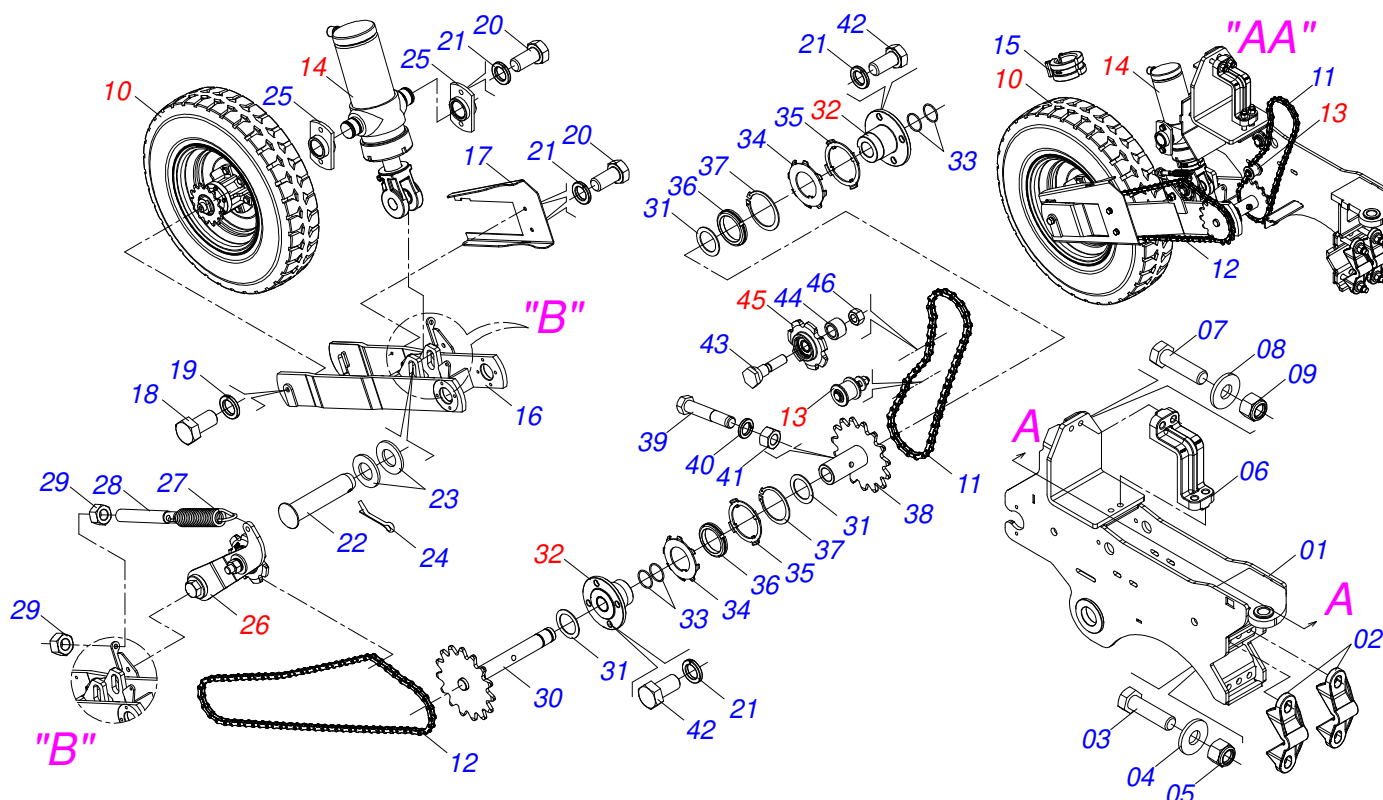


Item	Code	Description	See page	QT
01	0521066479	RH WHEELS SUPPORT		01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
03	0503016485	BOLT 3/4		04
04	0541010763	FLAT WASHER		04
05	0503010152	3/4" SELF LOCKING NUT		04
06	0502012720	WHEEL SUPPORT FIXER		01
07	0503017857	BOLT 5/8 UNF 4		04
08	0501012140	FLAT WASHER		04
09	0503010811	5/8" UNF SELF ADJUSTING NUT		04
10	0521056099	EE WHEEL WITH TIRE 7.00 X 16 ASSY WITH 8 TRANSMISSION		01
11	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
12	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
13	0521056160	SIDE TRANSMISSION CURRENT STRETCHER	11	01
14	0521056094	HYDRAULIC CYLINDER 44,45 X 101,6 X 203 X 181 WITHOUT LUBRICATION	12	01
15	0501047888	45 ROD STOP		01
16	0511065842	LEFT WHEEL FORK		01
17	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
18	0503011167	M16 X 2 X 30 BOLT		02
19	0503010027	5/8 SPRING WASHER		02
20	0503010834	1/2 X 1 BOLT		06
21	0503010019	1/2" SPRING WASHER		14
22	0521010546	1.2" X 5.7" COUPLING SHAFT		01
23	0501017779	32 X 60 X 4.75 FLAT WASHER		02
24	0503010523	1/4" X 2" SPLIT PIN		01
25	0501110968	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		02
26	0521056300	MOUNTED LEFT STRETCHER	16	01
27	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
28	0501013491	5/8" TENSIONER SPRING		01
29	0503010013	5/8 NUT		02

WHEEL ASSY LEFT FIXING EXTENSOR

0521056089

Item	Code	Description	See page	QT
30	0531060127	15Z GEAR AXLE WITHOUT LUBRICATION		01
31	0501018466	FLAT WASHER		03
32	0521056095	ARTICULATED BEARING WHEELED WITHOUT 15 LUBRICATION		02
33	0503010411	RING 2-023 N 3006-9B		04
34	0561013021	BEARING INNER LOCK		02
35	0561013022	BEARING EXTERNAL LOCK		02
36	0561013020	KM 12 NUT		02
37	0503010398	501082 CLAMPING RING (FOR AXLE)		02
38	0511061809	15Z GEAR WITH COUPLING		01
39	0503011103	7/16" X 2-1/2" BOLT		01
40	0503010180	7/16" SPRING WASHER		01
41	0503010244	7/16" NUT		01
42	0503013232	1/2' BOLT		08
43	0551018252	CHAIN TENSIONER AXLE		01
44	0521010479	SLEEVE ARTICULATION		01
45	0501058239	WHEEL CHAIN TENSIONER BEARING	17	01
46	0503011336	1/2" HEX SELF ADJUSTING NUT		01

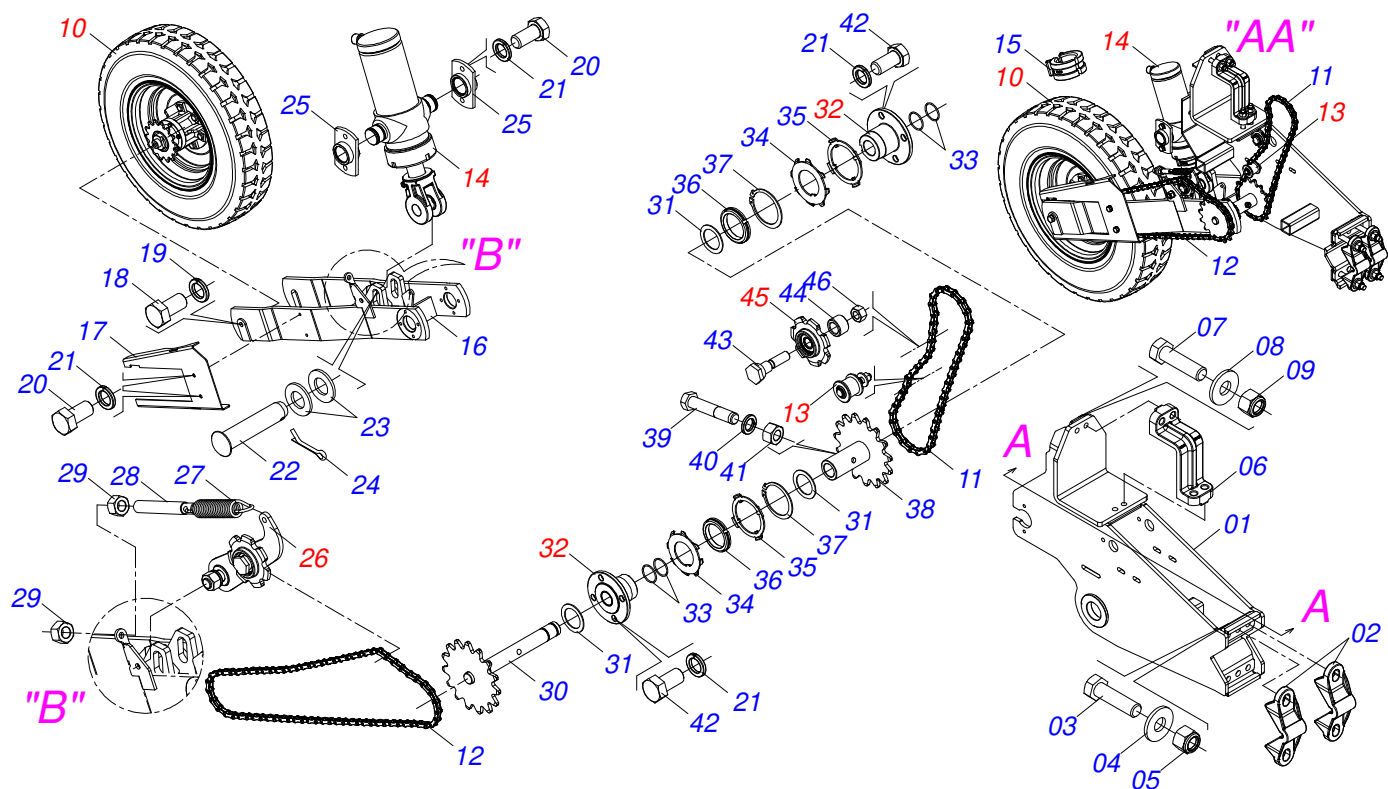


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
03	0503016485	BOLT 3/4		04
04	0541010763	FLAT WASHER		04
05	0503010152	3/4" SELF LOCKING NUT		04
06	0502012720	WHEEL SUPPORT FIXER		01
07	0503017857	BOLT 5/8 UNF 4		04
08	0501012140	FLAT WASHER		04
09	0503010811	5/8" UNF SELF ADJUSTING NUT		04
10	0521056099	EE WHEEL WITH TIRE 7.00 X 16 ASSY WITH 8 TRANSMISSION		01
11	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
12	0503012570	CHAIN 2050 X 2.8" LINK + MENDING		01
13	0521056160	SIDE TRANSMISSION CURRENT STRETCHER	11	01
14	0521056094	HYDRAULIC CYLINDER 44,45 X 101,6 X 203 X 181 WITHOUT LUBRICATION	12	01
15	0501047888	45 ROD STOP		01
16	0511064744	WHEEL FORK		01
17	0531016051	CARRY-WHEEL CHAIN PROTECTION CAP		01
18	0503011167	M16 X 2 X 30 BOLT		02
19	0503010027	5/8 SPRING WASHER		02
20	0503010834	1/2 X 1 BOLT		06
21	0503010019	1/2" SPRING WASHER		14
22	0521010546	1.2" X 5.7" COUPLING SHAFT		01
23	0501017779	32 X 60 X 4.75 FLAT WASHER		02
24	0503010523	1/4" X 2" SPLIT PIN		01
25	0501110968	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		02
26	0521056299	MOUNTED RIGHT STRETCHER	13	01
27	0503031103	0.9" X 4.1" X 0.1" TRACTION SPRING		01
28	0501013491	5/8" TENSIONER SPRING		01
29	0503010013	5/8 NUT		02

Item	Code	Description	See page	QT
30	0531060127	15Z GEAR AXLE WITHOUT LUBRICATION		01
31	0501018466	FLAT WASHER		03
32	0521056095	ARTICULATED BEARING WHEELED WITHOUT 15 LUBRICATION		02
33	0503010411	RING 2-023 N 3006-9B		04
34	0561013021	BEARING INNER LOCK		02
35	0561013022	BEARING EXTERNAL LOCK		02
36	0561013020	KM 12 NUT		02
37	0503010398	501082 CLAMPING RING (FOR AXLE)		02
38	0511061809	15Z GEAR WITH COUPLING		01
39	0503011103	7/16" X 2-1/2" BOLT		01
40	0503010180	7/16" SPRING WASHER		01
41	0503010244	7/16" NUT		01
42	0503013232	1/2' BOLT		08
43	0551018252	CHAIN TENSIONER AXLE		01
44	0521010479	SLEEVE ARTICULATION		01
45	0501058239	WHEEL CHAIN TENSIONER BEARING	17	01
46	0503011336	1/2" HEX SELF ADJUSTING NUT		01

LEFT WHEEL ASSY

0521056091

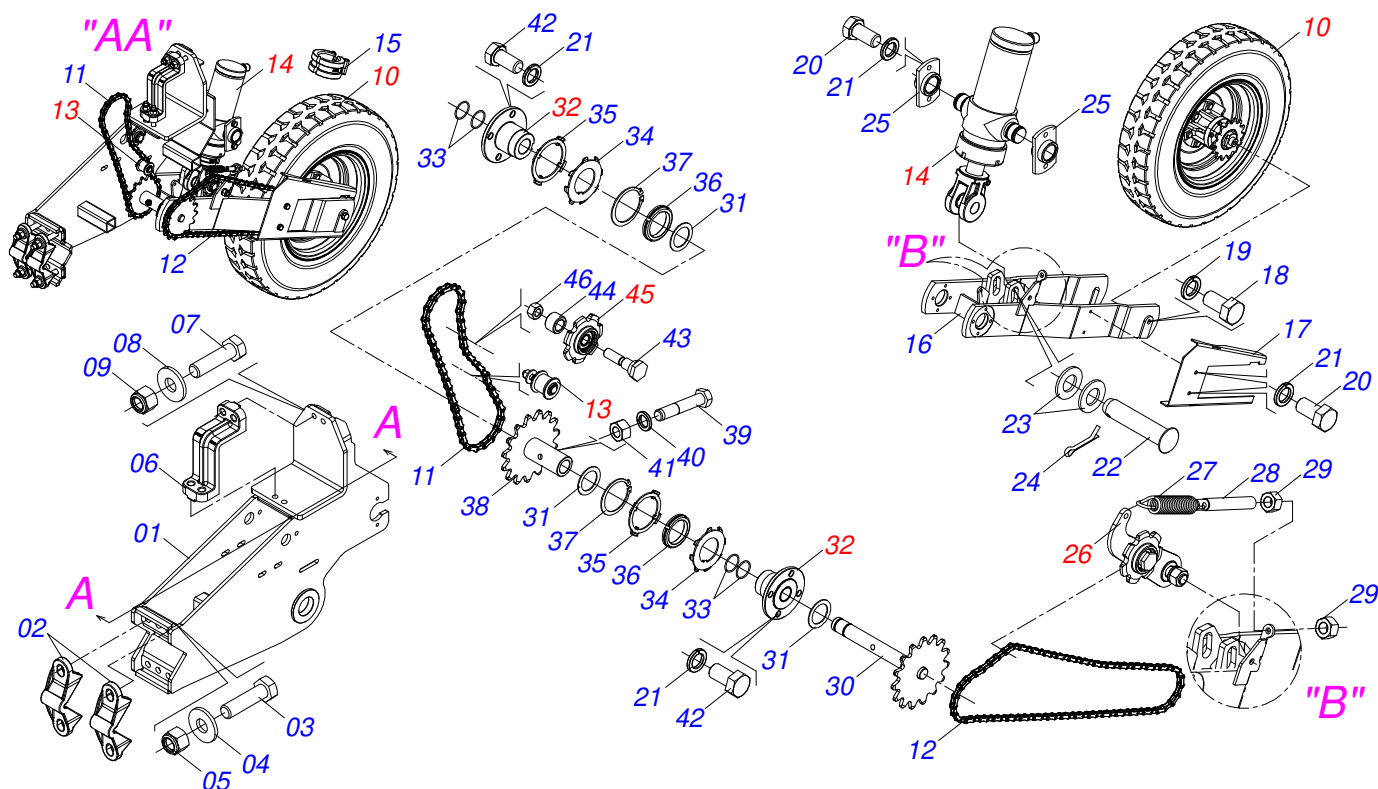


Item	Code	Description	See page	QT
01	0521063678	WHEEL SUPPORT		01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
03	0503016485	BOLT 3/4		04
04	0541010763	FLAT WASHER		04
05	0503010152	3/4\" SELF LOCKING NUT		04
06	0502012720	WHEEL SUPPORT FIXER		01
07	0503017857	BOLT 5/8 UNF 4		04
08	0501012140	FLAT WASHER		04
09	0503010811	5/8\" UNF SELF ADJUSTING NUT		04
10	0521056099	EE WHEEL WITH TIRE 7.00 X 16 ASSY WITH 8 TRANSMISSION		01
11	0503016738	2050 CHAIN X 44 LINK + REDUCTION		01
12	0503012570	CHAIN 2050 X 2.8\" LINK + MENDING		01
13	0521056160	SIDE TRANSMISSION CURRENT STRETCHER	11	01
14	0521056094	HYDRAULIC CYLINDER 44,45 X 101,6 X 203 X 181 WITHOUT LUBRICATION	12	01
15	0501047888	45 ROD STOP		01
16	0511065842	LEFT WHEEL FORK		01
17	0541012543	LEFT CARRY-WHEEL CHAIN PROTECTION		01
18	0503011167	M16 X 2 X 30 BOLT		02
19	0503010027	5/8 SPRING WASHER		02
20	0503010834	1/2 X 1 BOLT		06
21	0503010019	1/2\" SPRING WASHER		14
22	0521010546	1.2\" X 5.7\" COUPLING SHAFT		01
23	0501017779	32 X 60 X 4.75 FLAT WASHER		02
24	0503010523	1/4\" X 2\" SPLIT PIN		01
25	0501110968	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		02
26	0521056300	MOUNTED LEFT STRETCHER	16	01
27	0503031103	0.9\" X 4.1\" X 0.1\" TRACTION SPRING		01
28	0501013491	5/8\" TENSIONER SPRING		01
29	0503010013	5/8 NUT		02


LEFT WHEEL ASSY

0521056091


Item	Code	Description	See page	QT
30	0531060127	15Z GEAR AXLE WITHOUT LUBRICATION		01
31	0501018466	FLAT WASHER		03
32	0521056095	ARTICULATED BEARING WHEELED WITHOUT 15 LUBRICATION		02
33	0503010411	RING 2-023 N 3006-9B		04
34	0561013021	BEARING INNER LOCK		02
35	0561013022	BEARING EXTERNAL LOCK		02
36	0561013020	KM 12 NUT		02
37	0503010398	501082 CLAMPING RING (FOR AXLE)		02
38	0511061809	15Z GEAR WITH COUPLING		01
39	0503011103	7/16" X 2-1/2" BOLT		01
40	0503010180	7/16" SPRING WASHER		01
41	0503010244	7/16" NUT		01
42	0503013232	1/2' BOLT		08
43	0551018252	CHAIN TENSIONER AXLE		01
44	0521010479	SLEEVE ARTICULATION		01
45	0501058239	WHEEL CHAIN TENSIONER BEARING	17	01
46	0503011336	1/2" HEX SELF ADJUSTING NUT		01

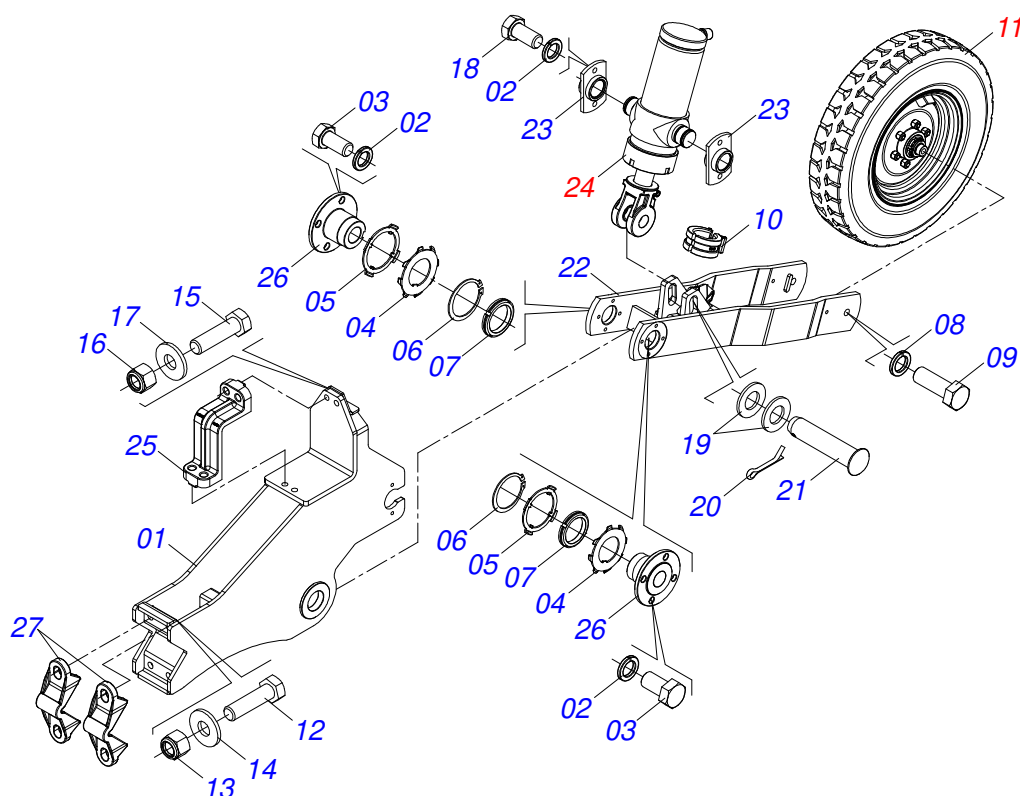


Item	Code	Description	See page	QT
01	0531060795	WHEEL SUPPORT	01	
02	0503010019	1/2" SPRING WASHER	13	
03	0503013232	1/2" BOLT	08	
04	0561013021	BEARING INNER LOCK	02	
05	0561013022	BEARING EXTERNAL LOCK	02	
06	0503010398	501082 CLAMPING RING (FOR AXLE)	02	
07	0561013020	KM 12 NUT	02	
08	0503010408	7/8" SPRING WASHER	02	
09	0503012419	7/8" X 2-3/4" BOLT	02	
10	0501047888	45 ROD STOP	02	
11	0521057818	WHEEL WITH TIRE 7.00 X 16 14L ASSY WITHOUT TRANSMISSION	01	
12	0503016485	BOLT 3/4	04	
13	0503010152	3/4" SELF LOCKING NUT	04	
14	0501010322	FLAT WASHER	04	
15	0503017857	BOLT 5/8 UNF 4	04	
16	0503010811	5/8" UNF SELF ADJUSTING NUT	04	
17	0501012140	FLAT WASHER	04	
18	0503010834	1/2 X 1 BOLT	05	
19	0501017779	32 X 60 X 4.75 FLAT WASHER	02	
20	0503010523	1/4" X 2" SPLIT PIN	01	
21	0521010546	1.2" X 5.7" COUPLING SHAFT	01	
22	0531060798	CENTRAL WHEEL FORK WITHOUT TRANSMISSION	01	
23	0501110968	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION	02	
24	0521057817	HYDRAULIC CYLINDER 44,45 X 101,6 X 203 X 181 WITHOUT LUBRICATION	01	
25	0502010584	CARRYING-WHEELS SUPPORT FIXER	02	
26	0591010098	ARTICULATED BEARING WHEELED WITHOUT TRANSMISSION WITHOUT LUBRICATION	02	
27	0502012720	WHEEL SUPPORT FIXER	01	

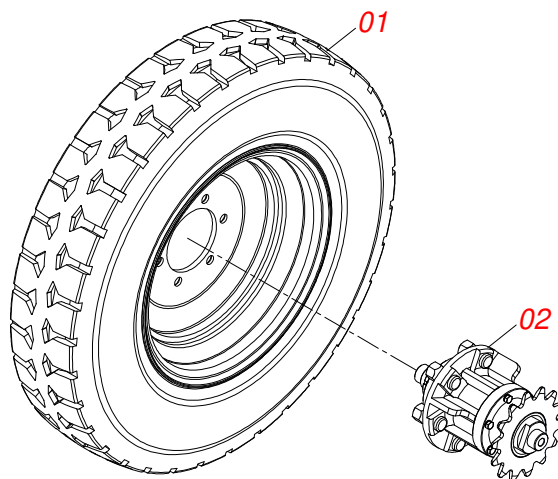


Item	Code	Description	See page	QT
01	0503063073	EE WHEEL WITH TIRE 7.00 X 16 14L ASSEMBLY	9	01
02	0521056100	WHEEL HUB ASSY WITH TRANSMISSION	10	01

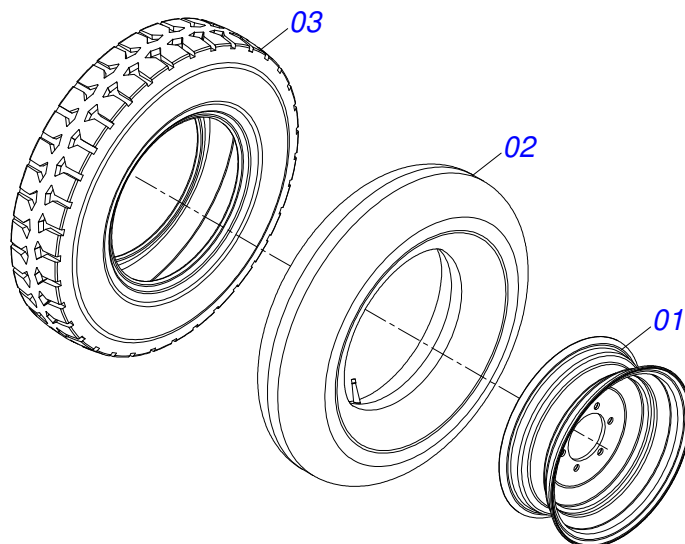


Item	Code	Description	See page	QT
01	0503016518	WHEEL		01
02	0503010033	7.50 X 16 INNER TIRE		01
03	0503019458	TIRE 7.00X16 14PR		01

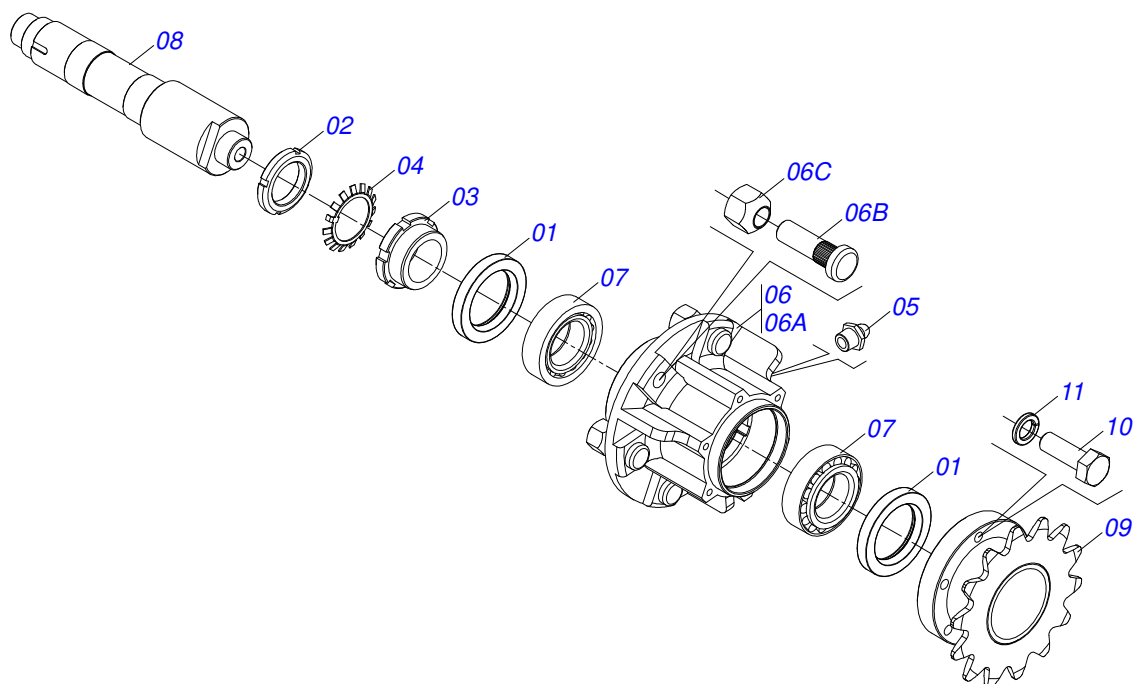


Item	Code	Description	See page	QT
01	0503010804	00547-B SEAL		02
02	0503010330	KM 9 LOCKNUT		01
03	0511015949	LOCK NUT		01
04	0503010329	LOCK WASHER		01
05	0503010002	1800 GREASE FITTING		01
06	0501110721	WHEEL HUB WITH SCREW / NUTS		01
06A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
06B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
06C	0503016516	5/8 UNF CONIC NUT		06
07	0503019364	BEARING 25590/25523		02
08	0521018363	00547-B SEAL		01
09	0511062015	14Z GEAR WITH FLANGE		01
10	0503010421	5/16" X 1-1/2" BOLT		06
11	0503011444	SPRING WASHER		06

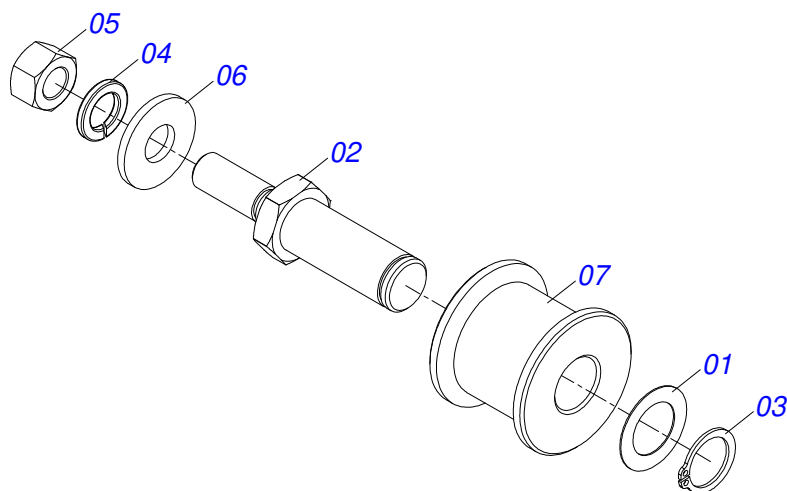


Item	Code	Description	See page	QT
01	0511015098	FLAT WASHER		01
02	0591010747	CURRENT STRETCHER AXIS		01
03	0503010302	501019 SEAL RING		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
07	0541016454	PULLEY		01

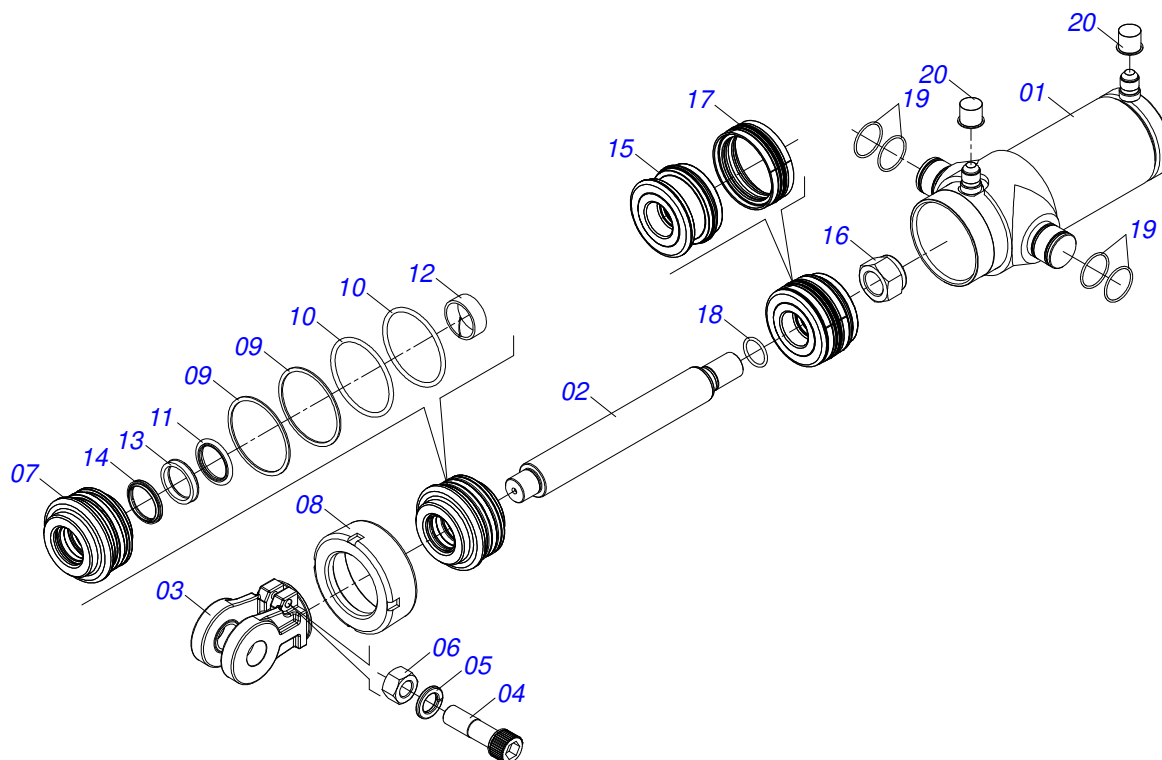


Item	Code	Description	See page	QT
01	0531060012	CASE 101.6 X 324.5 WITHOUT LUBRICATION		01
02	0541017674	TURNBUCLE BODY		01
03	0511064408	FORK		01
04	0503011094	3/8" X 2" BOLT		01
05	0503010025	3/8 SPRING WASHER		01
06	0503010026	3/8" NUT		01
07	0581010302	RING OF SUPPORT		01
08	0502012822	101.60 END CAP		01
09	0503011061	8-342 BACK-UP RING		02
10	0503010338	2-342 N 3006-9B O'RING		02
11	0503017936	RING		01
12	0503017938	RING GUIDE		01
13	0503017937	GASKET		01
14	0503010761	D-1750 SCRAPER RING		01
15	0581010837	PISTON		01
16	0503010817	1.1/4" SELF LOCKING NUT		01
17	0503015633	SELEMASTER SEALING		01
18	0503018029	2-217 O'RING		01
19	0503018045	2-130 (AGEL) O'RING		04
20	0503030387	PLUG		02
21	0511033019	CYLINDER REPAIR KIT 44.45 X 101.60		01

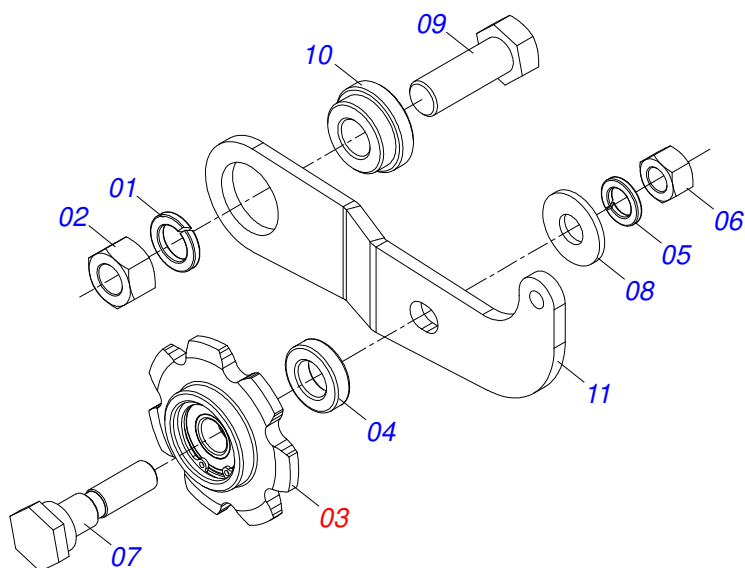


Item	Code	Description	See page	QT
01	0503010027	5/8 SPRING WASHER		01
02	0503010013	5/8 NUT		01
03	0521055238	BEARING TENSIONER CHAIN	14	01
04	0551018241	SLEEVE 16,30 X 30 X 8		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01
07	0551018252	CHAIN TENSIONER AXLE		01
08	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
09	0503010232	5/8" X 1.3/4" BOLT		01
10	0531016916	SLEEVE BEARING SUPPORT		01
11	0531018654	CHAIN TIGHTENER SUPPORT		01

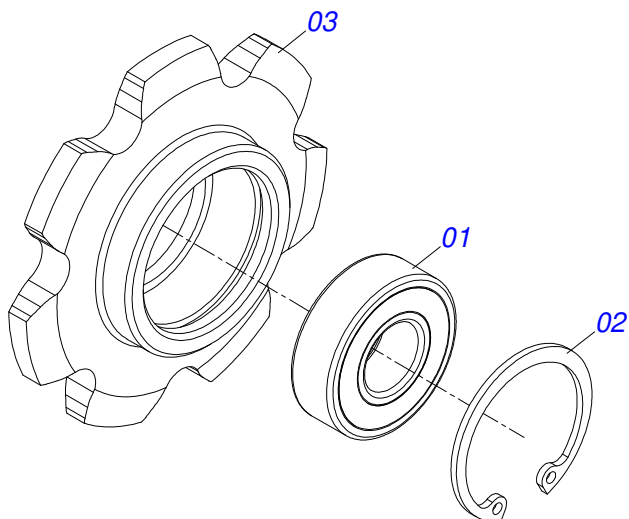


Item	Code	Description	See page	QT
01	0503019355	BEARING 6202 2RS1		01
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012853	GEAR		01

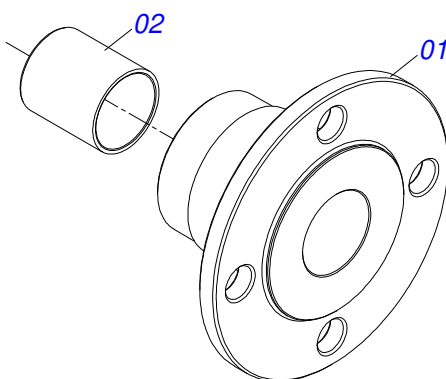


Item	Code	Description	See page	QT
01	0591010097	ARTICULATED BEARING WHEELED WITHOUT LUBRICATION		01
02	0503019409	SELF LUBRICATING BUSHING		01

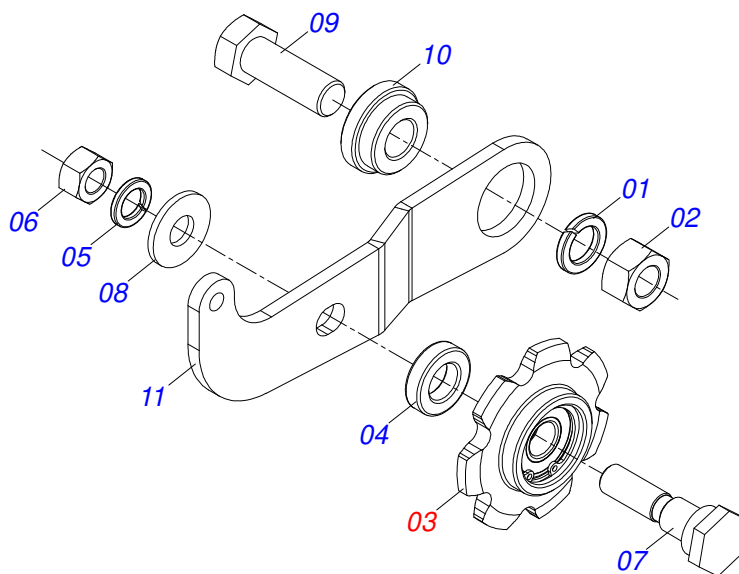


Item	Code	Description	See page	QT
01	0503010027	5/8 SPRING WASHER		01
02	0503010013	5/8 NUT		01
03	0521055238	BEARING TENSIONER CHAIN	14	01
04	0551018241	SLEEVE 16,30 X 30 X 8		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01
07	0551018252	CHAIN TENSIONER AXLE		01
08	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
09	0503010232	5/8" X 1.3/4" BOLT		01
10	0531016916	SLEEVE BEARING SUPPORT		01
11	0541012098	LEFT CHAIN TIGHTENER LARGER SUPPORT		01

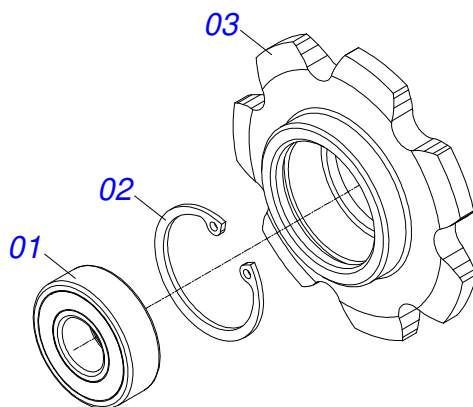


Item	Code	Description	See page	QT
01	0503012882	BEARING		01
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012853	GEAR		01

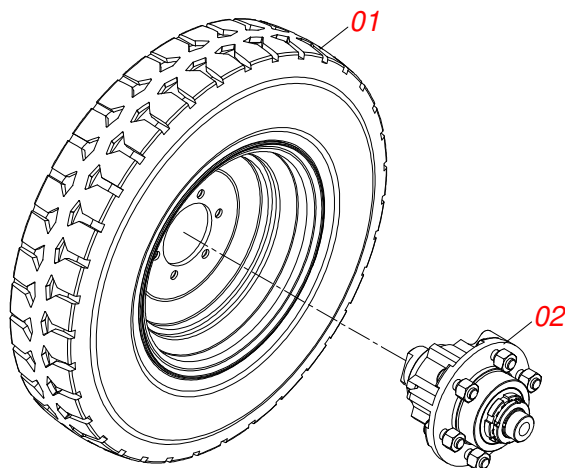


Item	Code	Description	See page	QT
01	0503063073	EE WHEEL WITH TIRE 7.00 X 16 14L ASSEMBLY	9	01
02	0521057819	ASSY WHEEL HUB WITHOUT TRANSMISSION	19	01

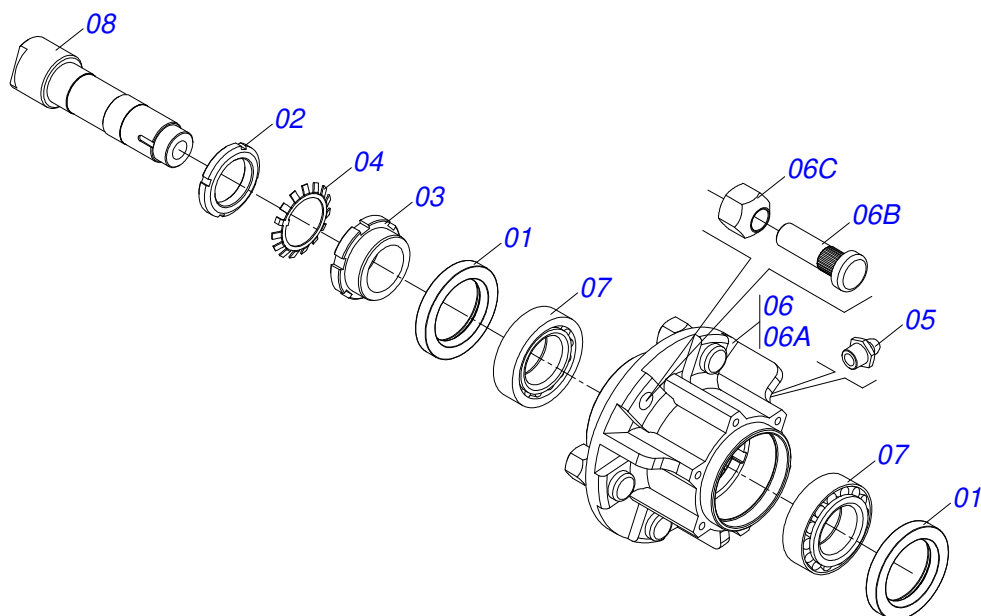


Item	Code	Description	See page	QT
01	0503010804	00547-B SEAL		02
02	0503010330	KM 9 LOCKNUT		01
03	0511015949	LOCK NUT		01
04	0503010329	LOCK WASHER		01
05	0503010002	1800 GREASE FITTING		01
06	0501110721	WHEEL HUB WITH SCREW / NUTS		01
06A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
06B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
06C	0503016516	5/8 UNF CONIC NUT		06
07	0503019364	BEARING 25590/25523		02
08	0591013435	TRANSMISSION WHEEL AXLE		01

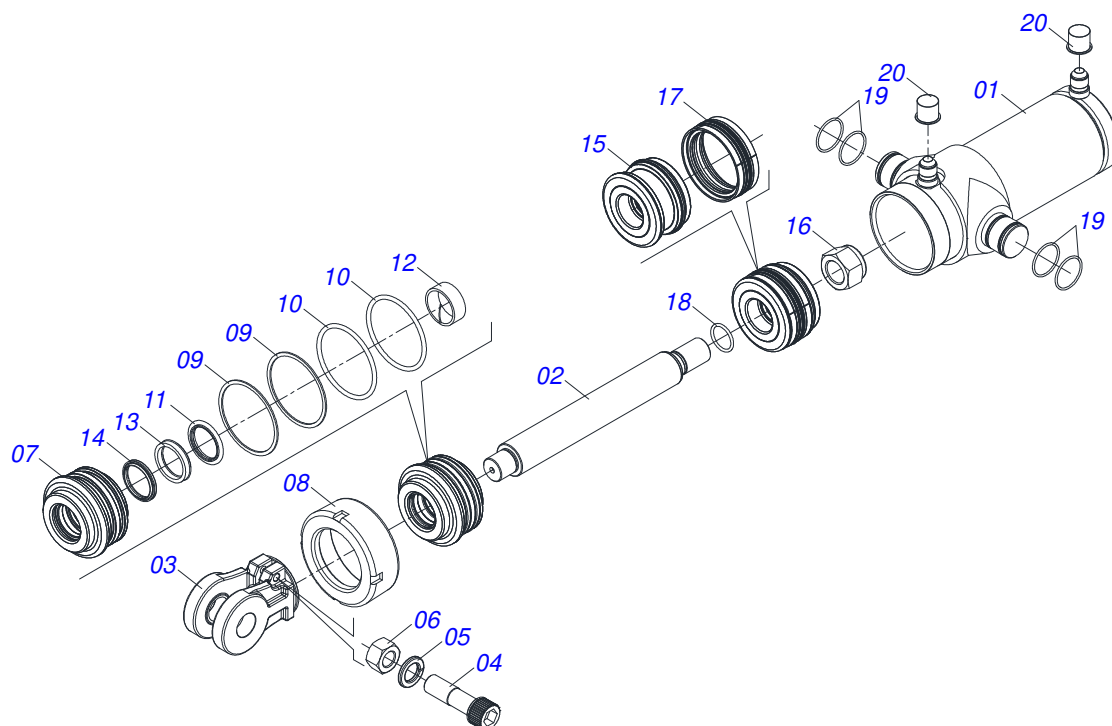


Item	Code	Description	See page	QT
01	0531060797	CYLINDER CASE		01
02	0541017674	TURNBUCLE BODY		01
03	0511064408	FORK		01
04	0503011094	3/8" X 2" BOLT		01
05	0503010025	3/8 SPRING WASHER		01
06	0503010026	3/8" NUT		01
07	0581010302	RING OF SUPPORT		01
08	0591013736	MOBILE COVER		01
09	0503011061	8-342 BACK-UP RING		02
10	0503010338	2-342 N 3006-9B O'RING		02
11	0503017936	RING		01
12	0503017938	RING GUIDE		01
13	0503017937	GASKET		01
14	0503010761	D-1750 SCRAPER RING		01
15	0581010837	PISTON		01
16	0503010817	1.1/4" SELF LOCKING NUT		01
17	0503015633	SELEMASTER SEALING		01
18	0503018029	2-217 O'RING		01
19	0503018045	2-130 (AGEL) O'RING		04
20	0503030387	PLUG		02
21	0511033019	CYLINDER REPAIR KIT 44.45 X 101.60		01

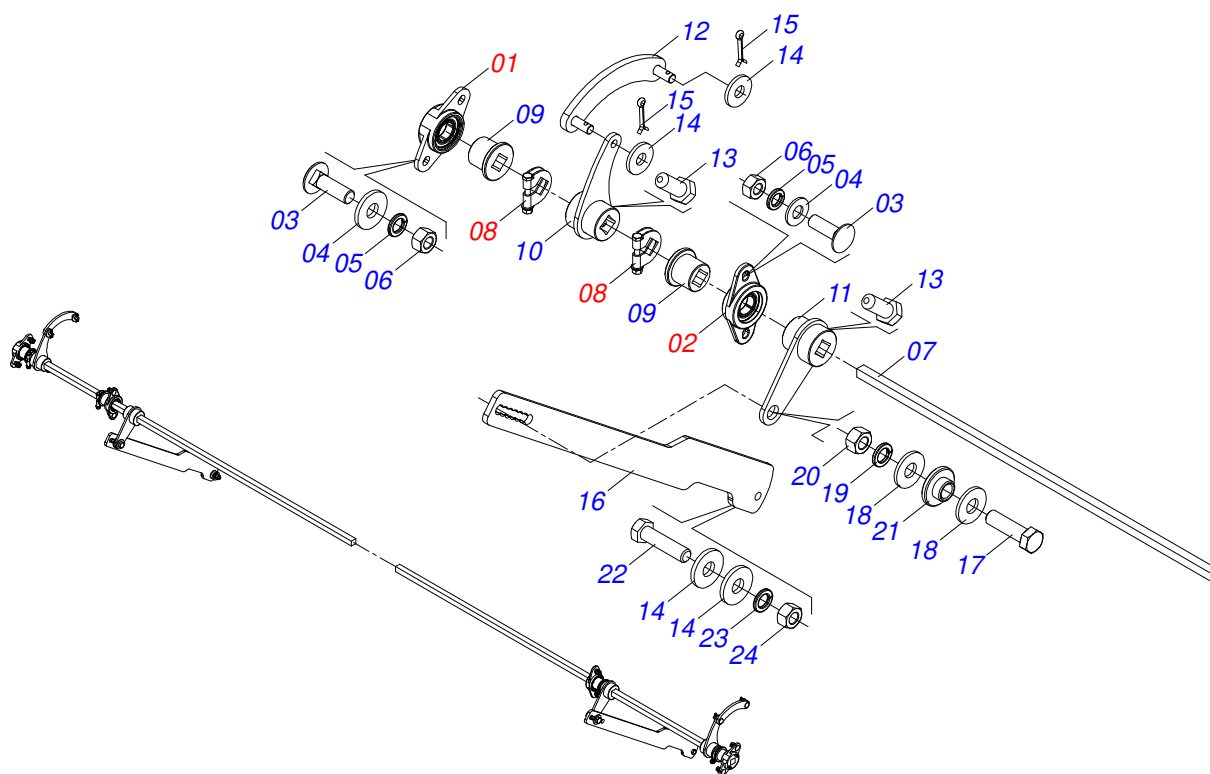


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	22	02
02	0501056444	BEARING WITH ROLLER	23	02
03	0503011953	5/16" X 1" BOLT		08
04	0501010694	FLAT WASHER		08
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		08
06	0503010337	5/16" NUT		08
07	0511014218	3/4" X 28.7"SQUARE SHAFT		02
08	0501053788	3/4" SQUARE AXLE FASTENER	24	04
09	0503030275	AGRICULTURAL BEARING		04
10	0521061852	LEVER RATCHET		02
11	0521061847	AXLE ADRIVING ASSY		02
12	0521061849	DISASSEMBLE LEVER		02
13	0503030679	BOLT 1/2 UNC X 1.1/4 C508 G.5 ZN		04
14	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
15	0503010140	1/8" X 3/4" COTTERPIN		04
16	0571012792	LOWER LEVER		02
17	0503011082	C1/2" X 1.3/4" SCREW		02
18	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
19	0503010019	1/2" SPRING WASHER		02
20	0503010060	1/2 UNC G.5 ZN HEX NUT		02
21	0561016797	SLEEVE UNION LEVER		02
22	0503010026	3/8" NUT		02
23	0503010025	3/8 SPRING WASHER		02
24	0503010849	3/8" X 1-1/2" BOLT		02

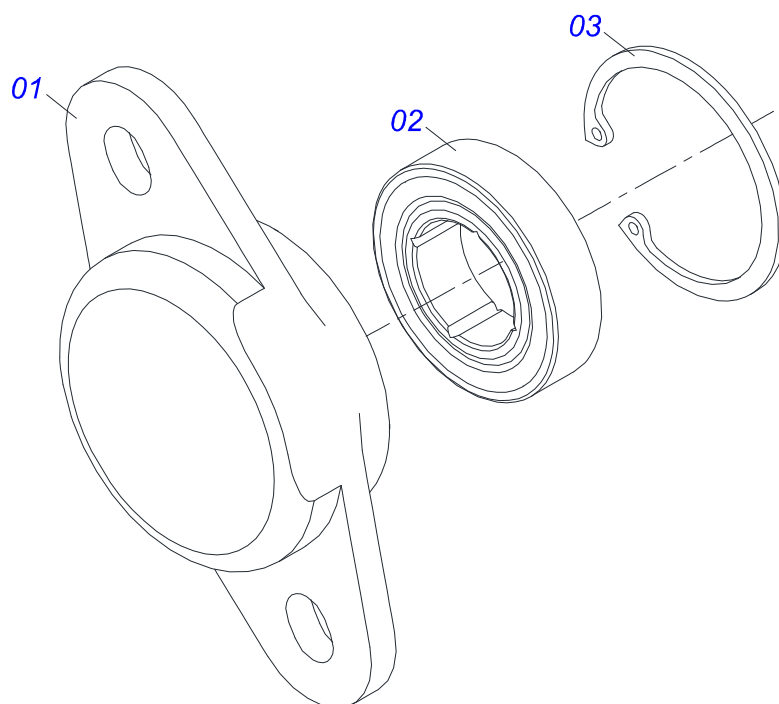


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

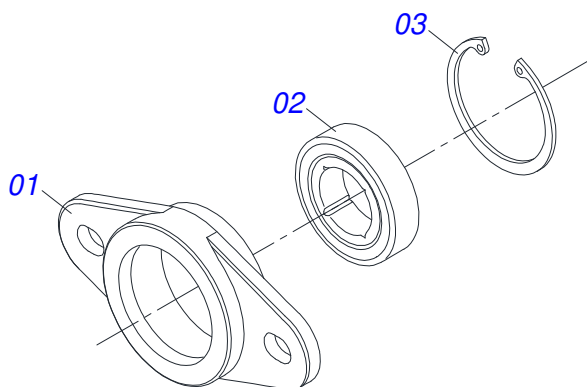


Item	Code	Description	See page	QT
01	0502011697	GEARBOX BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

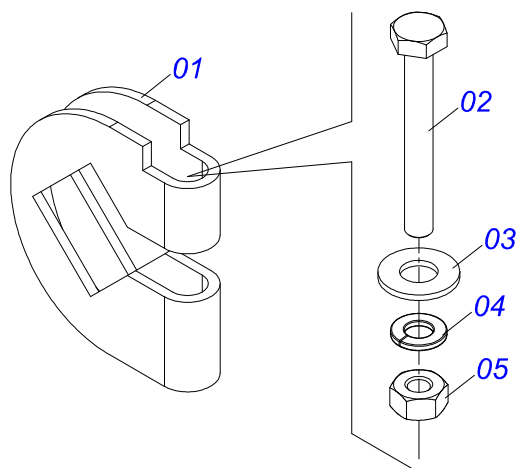


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

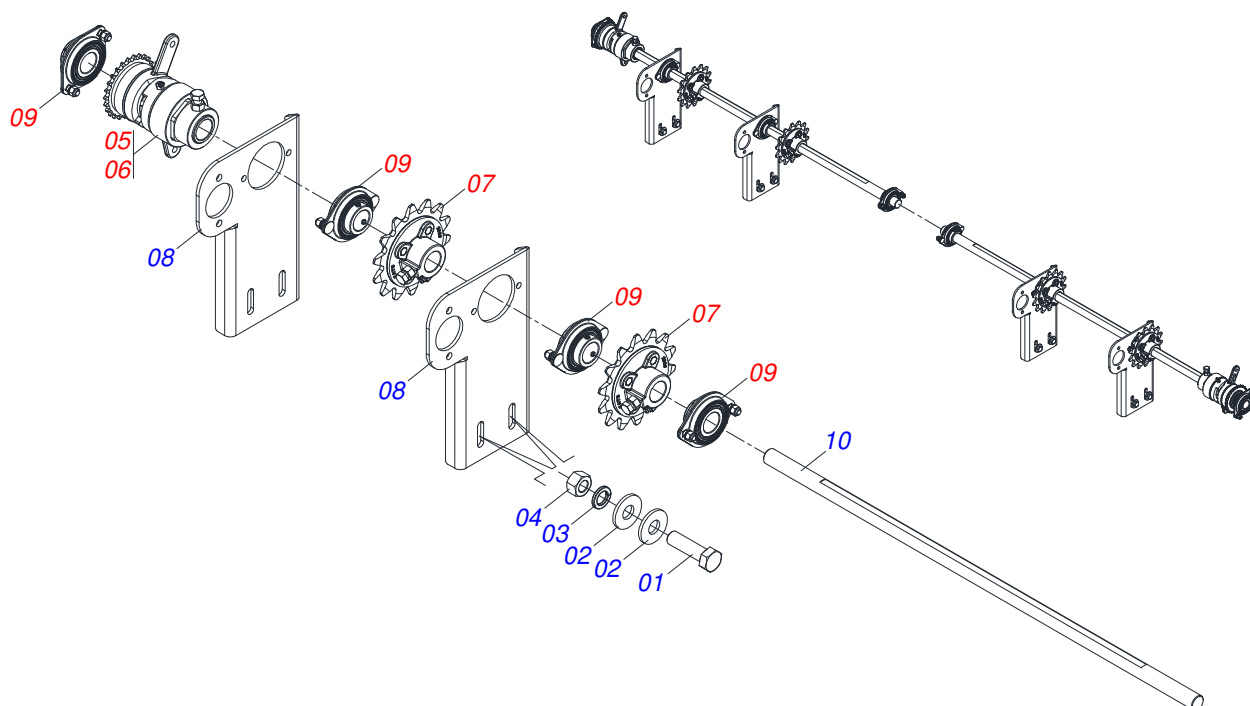


Item	Code	Description	See page	QT
01	0503011082	C1/2" X 1.3/4" SCREW		08
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		16
03	0503010019	1/2" SPRING WASHER		08
04	0503010060	1/2 UNC G.5 ZN HEX NUT		08
05	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	26	01
06	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	27	01
07	0511051434	TRANSMISSION ACTUATOR	28	04
08	0591010711	MOTOR AXLE BEARING SUPPORT		04
09	0521056085	PLATE BEARING ASSY	29	08
10	0571014441	MOTOR SHAFT		02

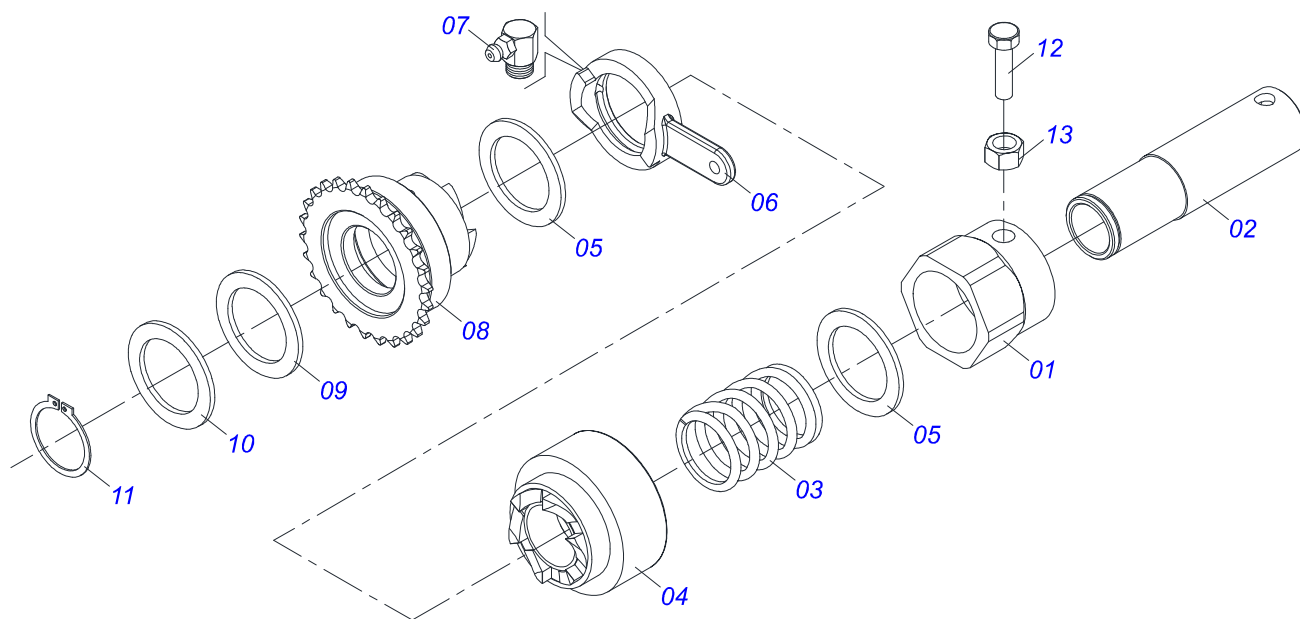


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0521017590	GUIDE AXLE		01
03	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
04	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
05	0501019734	FLAT WASHER		02
06	0502010710	RIGHT CAM, SMALLER		02
07	0503010003	1845 GREASE FITTING		02
08	0502012539	26Z P12,7 GEAR		01
09	0501019735	FLAT WASHER		01
10	0521017593	FLAT WASHER		01
11	0503010542	501045 CLAMPING RING (FOR AXLE)		01
12	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
13	0503010060	1/2 UNC G.5 ZN HEX NUT		01

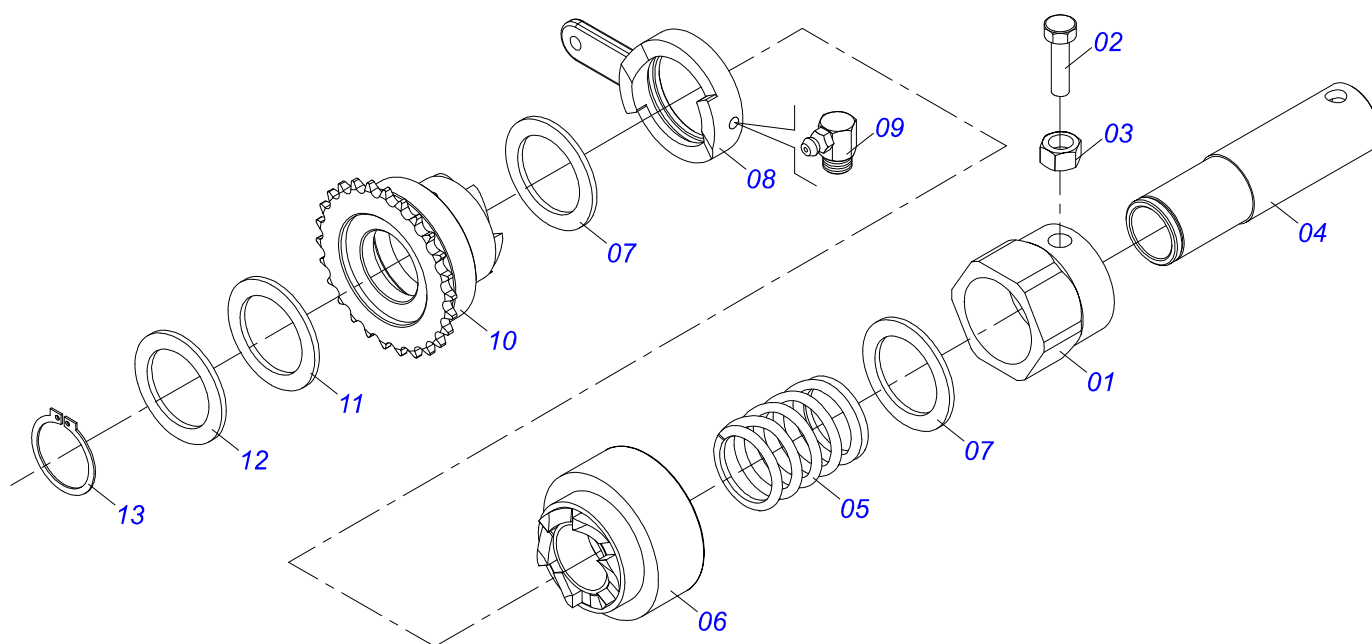


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

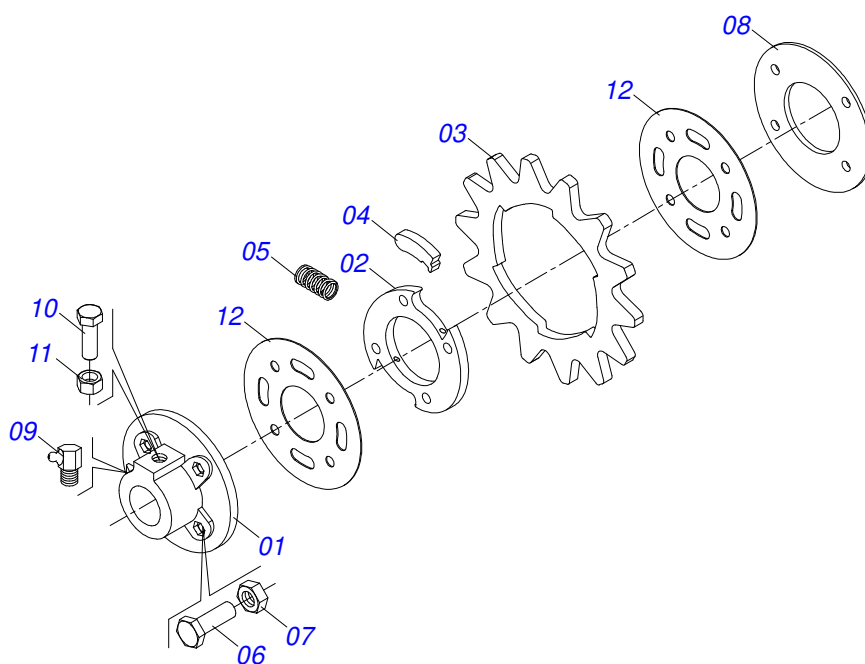


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CS G.5 ZN		01
11	0503010060	1/2 UNC G.5 ZN HEX NUT		01
12	0571010763	FLANGE WASHER		02

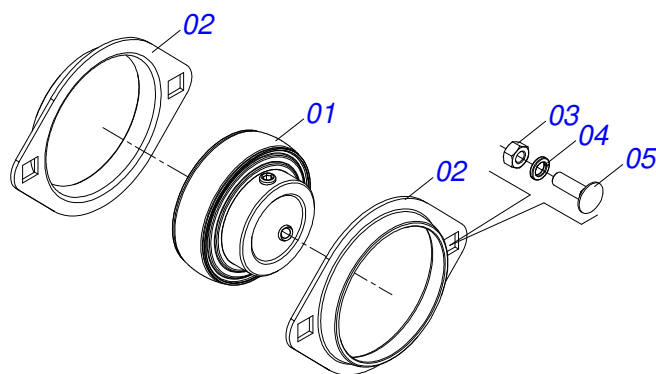


Item	Code	Description	See page	QT
01	0503019402	BEARING B207-22 V22 FRM		01
02	0503019403	PFL 207 FRM BEARING PLATE		02
03	0503010026	3/8" NUT		02
04	0503010025	3/8 SPRING WASHER		02
05	0501011643	3/8 X 1"BOLT		02

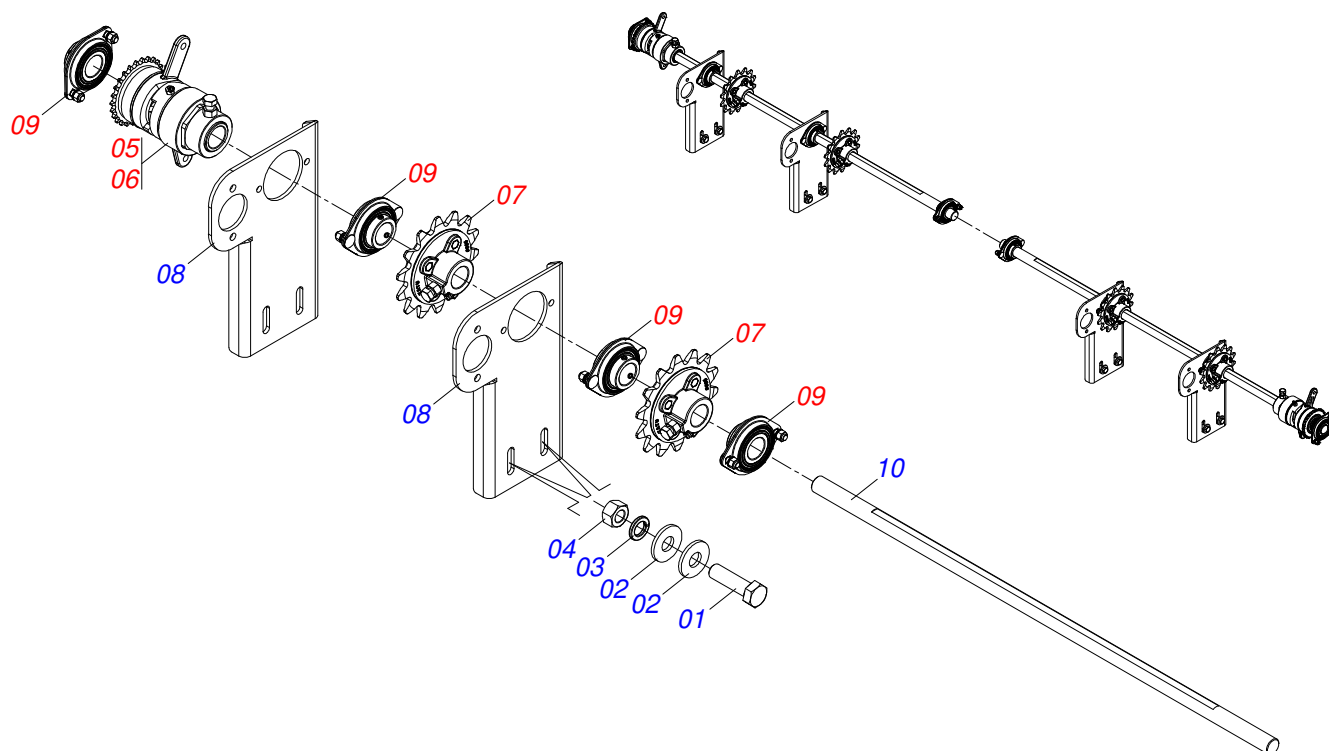


Item	Code	Description	See page	QT
01	0503011082	C1/2" X 1.3/4" SCREW		08
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		16
03	0503010019	1/2" SPRING WASHER		08
04	0503010060	1/2 UNC G.5 ZN HEX NUT		08
05	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	26	01
06	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	27	01
07	0511051434	TRANSMISSION ACTUATOR	28	04
08	0591010711	MOTOR AXLE BEARING SUPPORT		04
09	0521056085	PLATE BEARING ASSY	29	08
10	0571014441	MOTOR SHAFT		02

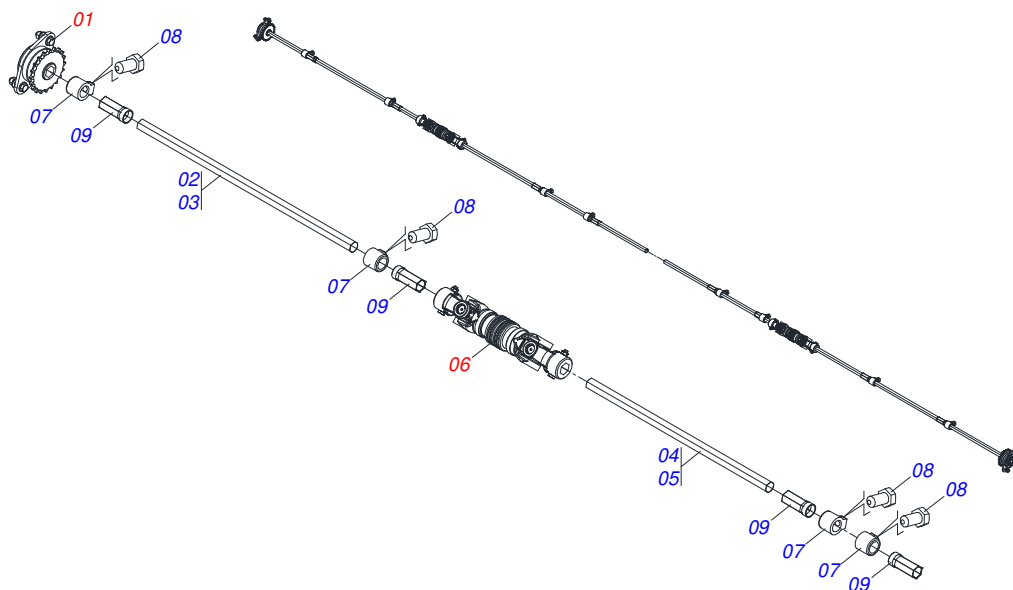


Item	Code	Description	See page	QT
01	0521056103	BEARING WITH GEAR 20Z HEX SHAFT 3/4	32	02
02	0591011101	HEX AXLE 3/4 X 1727		01
03	0591011100	HEX AXLE 3/4 X 1847		01
04	0591010702	HEX SHAFT 3/4 X 750		01
05	0591010701	HEX SHAFT 3/4 X 1270		01
06	0521056144	INTERMEDIATE SEED TRANSMISSION	34	02
07	0511063123	BUSHING WITH NUT		08
08	0501018535	1/2 X 1 BOLT		08
09	0581015056	SLEEVE		08

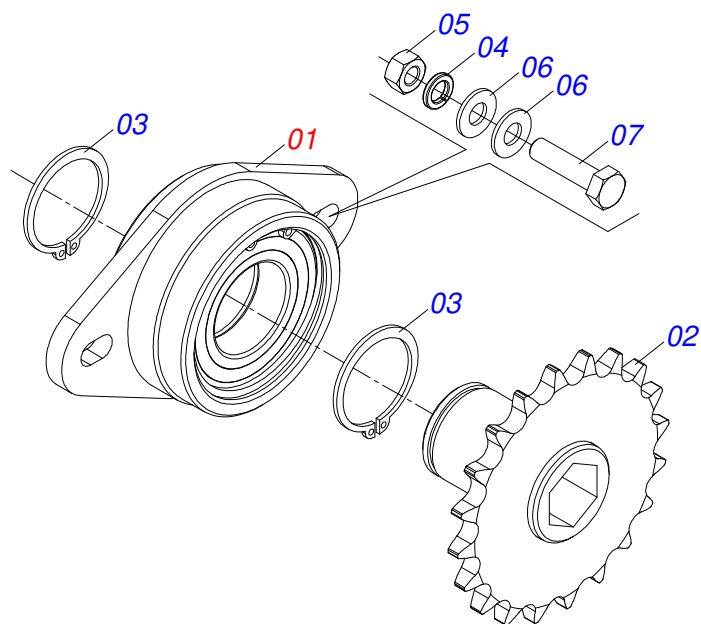


Item	Code	Description	See page	QT
01	0521055498	SEED TRANSMISSION DOUBLE BEARING	33	01
02	0531060014	GEAR 20Z X 48.50 HEX HOLE 20		01
03	0503010707	501030 CLAMPING RING (FOR AXLE)		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02
06	0501010694	FLAT WASHER		04
07	0503018441	5/16" X 1-1/4" BOLT		02

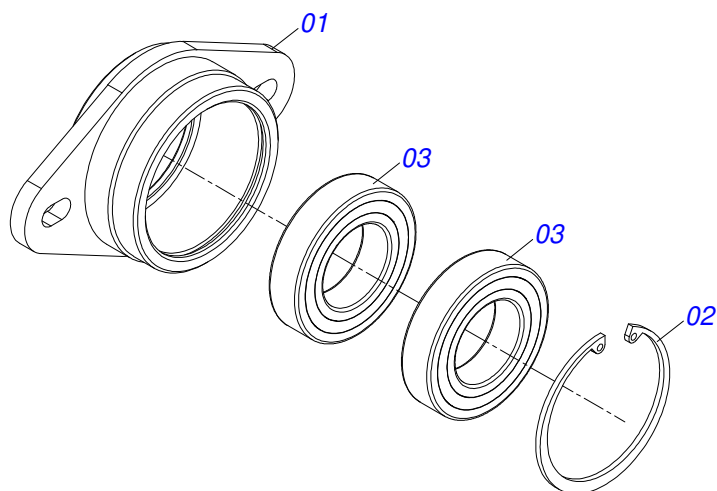


Item	Code	Description	See page	QT
01	0502012031	HOUSING BEARING		01
02	0503012858	502075 CLAMPING RING (FOR HOLE)		01
03	0503019373	6006 2RS1 NATIONAL BEARING		02

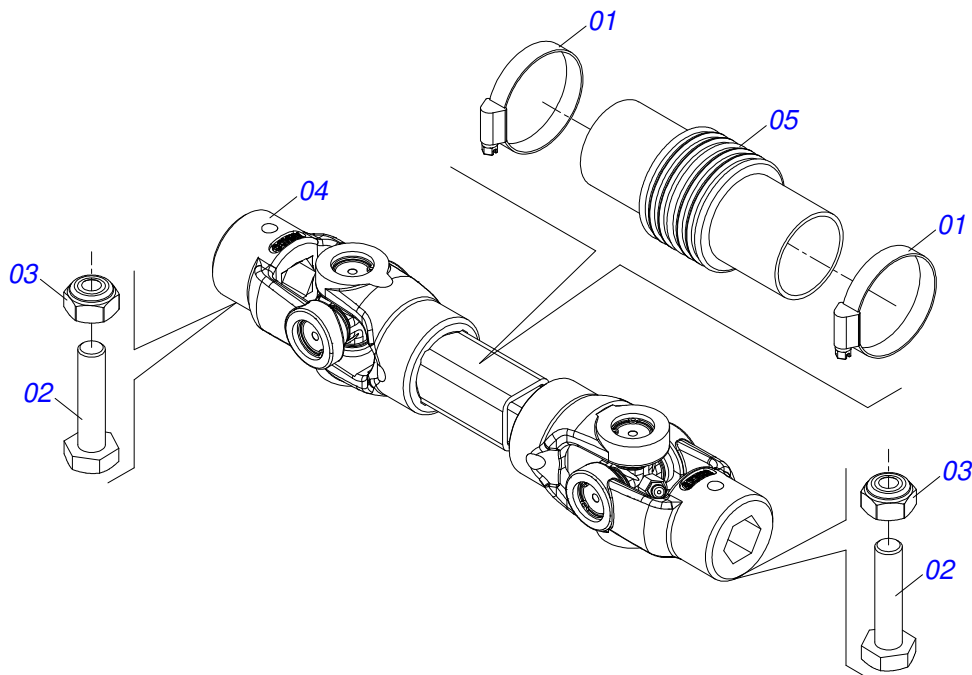


Item	Code	Description	See page	QT
01	0503010243	CLAMP		02
02	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
03	0503012880	1/4" UNC SELF ADJUSTING NUT		02
04	0503063012	SEED TRANSMISSION SHAFT HEX 3/4		01
05	0503034773	HOSE 1.1/2 X 1.1/2 X 120		01

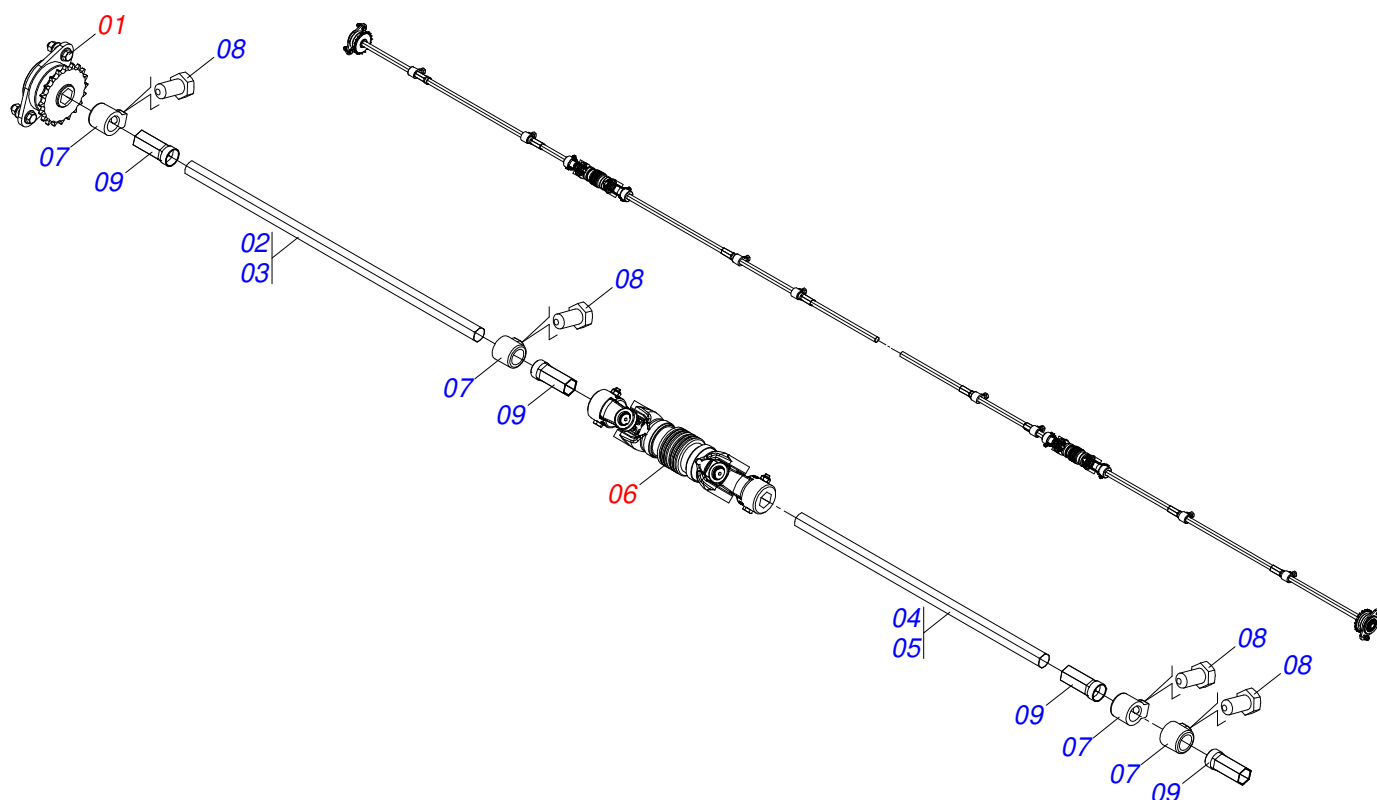


Item	Code	Description	See page	QT
01	0521056103	BEARING WITH GEAR 20Z HEX SHAFT 3/4	32	02
02	0591011114	HEX AXLE 3/4 X 2080		01
03	0591011116	HEX AXLE 3/4 X 2200		01
04	0591010682	HEX AXLE 3/4 X 1120		01
05	0591011115	HEX AXLE 3/4 X 1570		01
06	0521056144	INTERMEDIATE SEED TRANSMISSION	34	02
07	0511063123	BUSHING WITH NUT		08
08	0501018535	1/2 X 1 BOLT		08
09	0581015056	SLEEVE		08

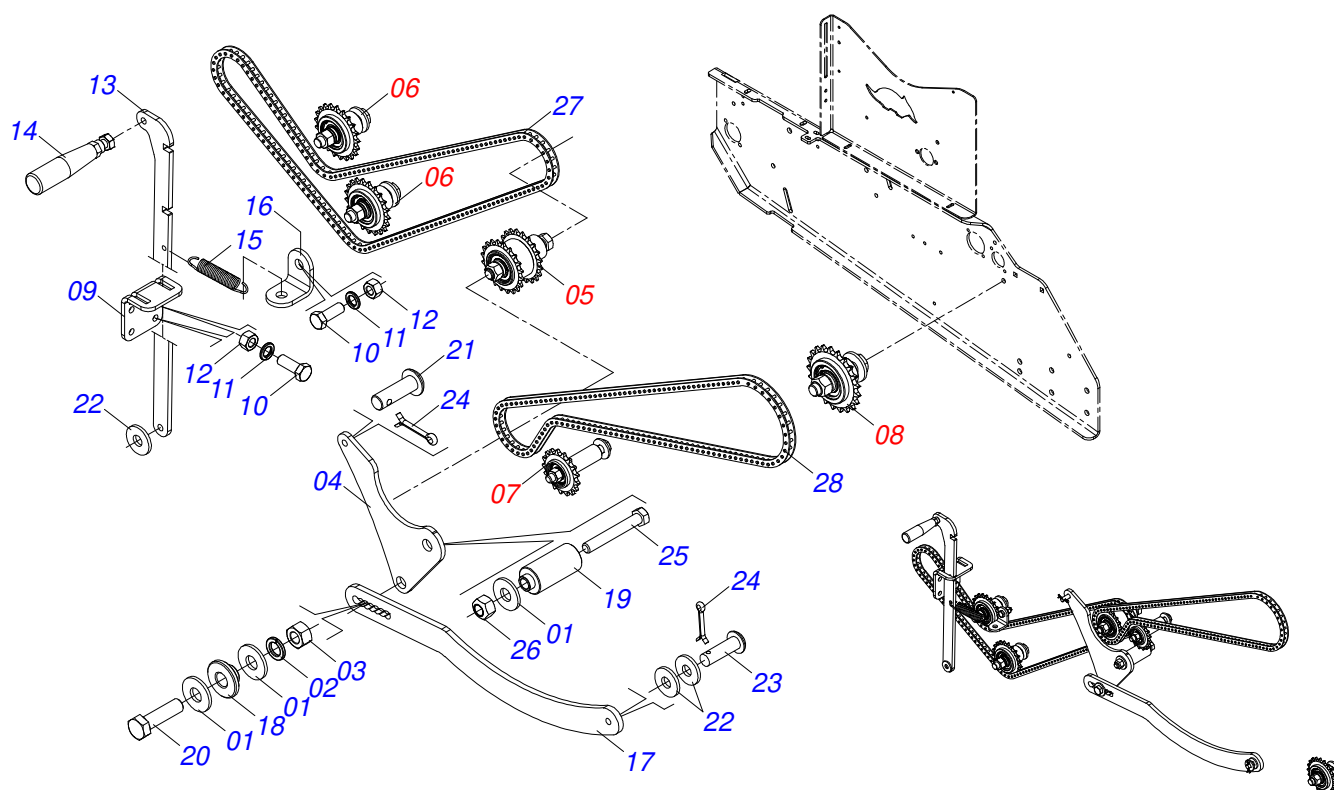


Item	Code	Description	See page	QT
01	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
02	0503010019	1/2" SPRING WASHER		02
03	0503010060	1/2 UNC G.5 ZN HEX NUT		02
04	0561017281	ARTICULACION ARM		02
05	0521056135	BEARING GEAR WITH DOUBLE	37	02
06	0521055217	LOWER CURRENT STRETCH	38	04
07	0521056134	STRETCHER FERTILIZER CURRENT 17Z	39	02
08	0521054446	LOWER CURRENT STRETCHER 21Z	40	02
09	0571019829	LEVER FIXER		02
10	0503010237	3/8" X 1" BOLT		06
11	0503010025	3/8 SPRING WASHER		06
12	0503010026	3/8" NUT		06
13	0571019830	LEVER FIXER		02
14	0503011312	ROTATIVE CABLE		02
15	0503030093	TRACTION SPRING		02
16	0561017273	FIXER SPRING		02
17	0561017282	LOWER LEVER		02
18	0561016797	SLEEVE UNION LEVER		02
19	0591010705	ARTICULATION SLEEVE		02
20	0503011082	C1/2" X 1.3/4" SCREW		02
21	0521010773	0.37" X 1.18" COUPLING SHAFT		02
22	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
23	0541014973	COUPLING SHAFT		02
24	0503010140	1/8" X 3/4" COTTERPIN		04
25	0503017874	BOLT 1/2 UNC		02
26	0503011336	1/2" HEX SELF ADJUSTING NUT		02
27	0503013065	40-1 X 159 CHAIN LINK + MENDING		02
28	0503016737	40-1 X 114 CHAIN LINK + REDUCION		02

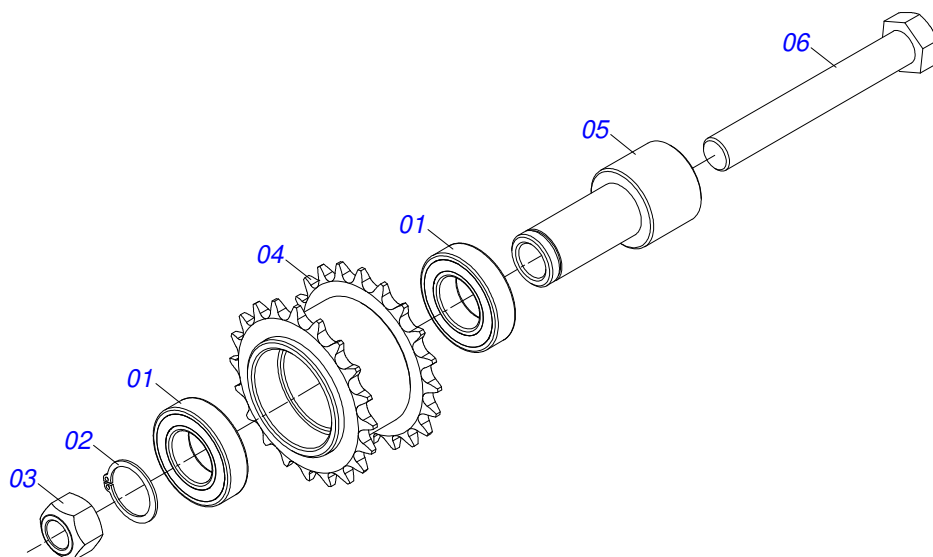


Item	Code	Description	See page	QT
01	0503019356	BEARING 6005 2RS1		02
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0503012412	5/8" UNC SELF LOCKING NUT		01
04	0521061843	20Z DOBLE GEAR		01
05	0551019175	DOUBLE GEAR AXLE		01
06	0501010163	5/8" X 4-1/2" BOLT		01

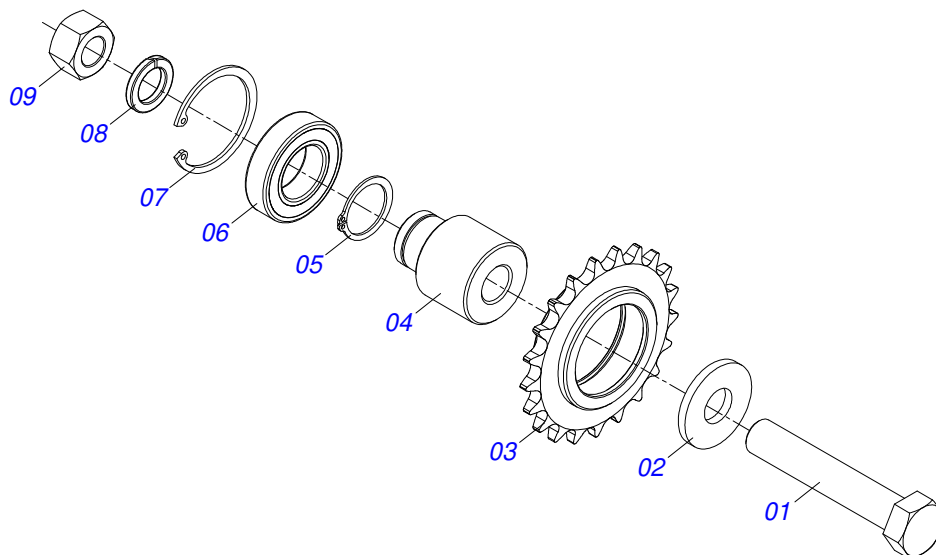


Item	Code	Description	See page	QT
01	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
02	0501012140	FLAT WASHER		01
03	0521069698	GEAR 21Z P 1/2		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503019356	BEARING 6005 2RS1		01
07	0503011105	SEAL RING		01
08	0503010027	5/8 SPRING WASHER		01
09	0503010013	5/8 NUT		01

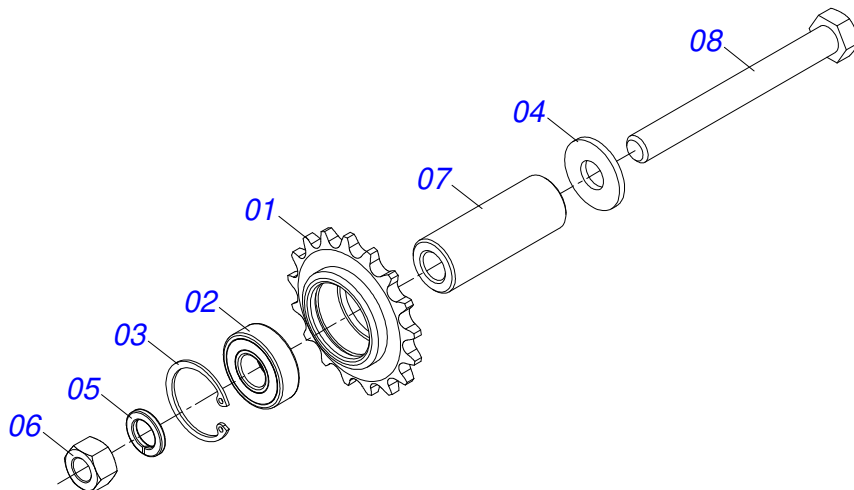


Item	Code	Description	See page	QT
01	0502012367	17Z X P 1/2" GEAR INTERM		01
02	0503019355	BEARING 6202 2RS1		01
03	0503011945	503050 CLAMPING RING (FOR AXLE)		01
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01
07	0591010693	CURRENT DEVIATION SLEEVE		01
08	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01

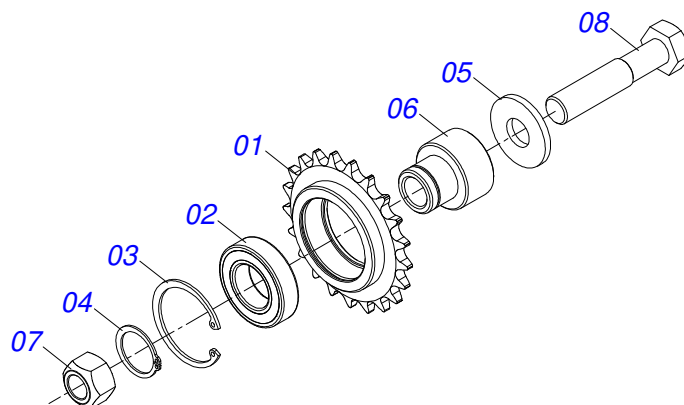


Item	Code	Description	See page	QT
01	0521069698	GEAR 21Z P 1/2		01
02	0503019356	BEARING 6005 2RS1		01
03	0503011105	SEAL RING		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0501012140	FLAT WASHER		01
06	0581015136	40MM STRETCHING SHAFT		01
07	0503012412	5/8" UNC SELF LOCKING NUT		01
08	0501011541	5/8" X 3" BOLT		01

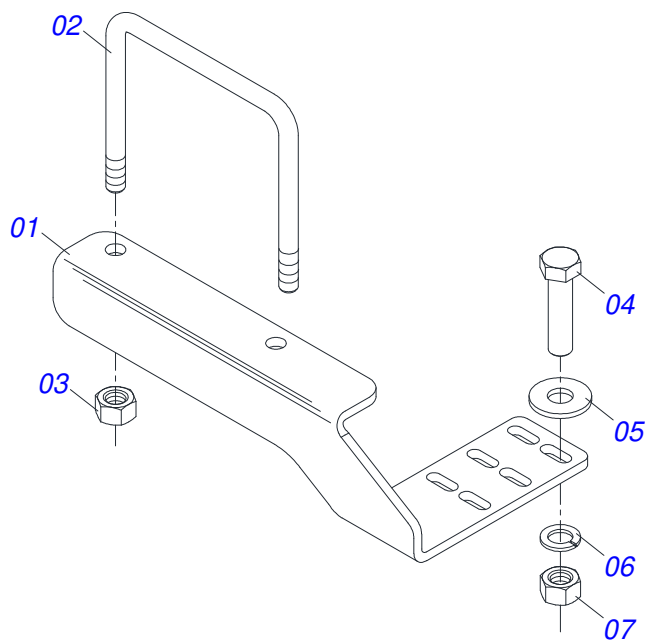

Item	Code	Description	See page	QT
01	0561019899	RIGHT GEARBOX FIXER SUPPORT		01
02	0521010718	5/8" U BOLT		01
03	0503012412	5/8" UNC SELF LOCKING NUT		02
04	0503011082	C1/2" X 1.3/4" SCREW		02
05	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2 UNC G.5 ZN HEX NUT		02

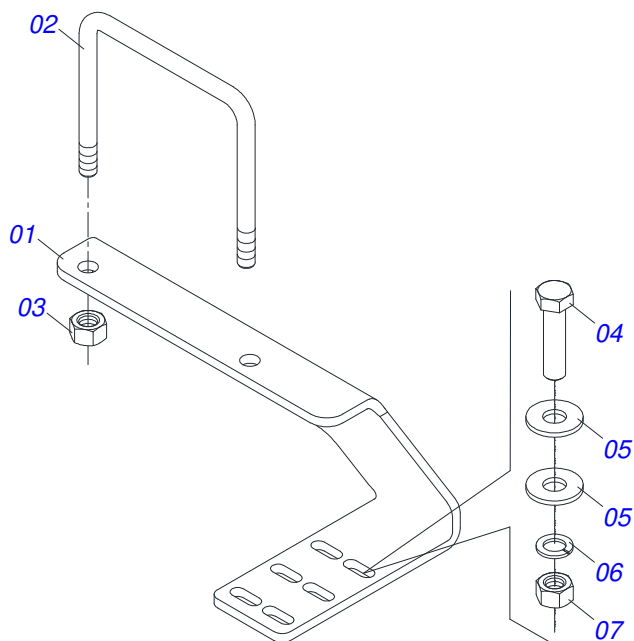


Item	Code	Description	See page	QT
01	0561019898	LEFT SUPPORT FIXER GEARBOX		01
02	0521010718	5/8" U BOLT		01
03	0503012412	5/8" UNC SELF LOCKING NUT		02
04	0503011082	C1/2" X 1.3/4" SCREW		02
05	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2 UNC G.5 ZN HEX NUT		02

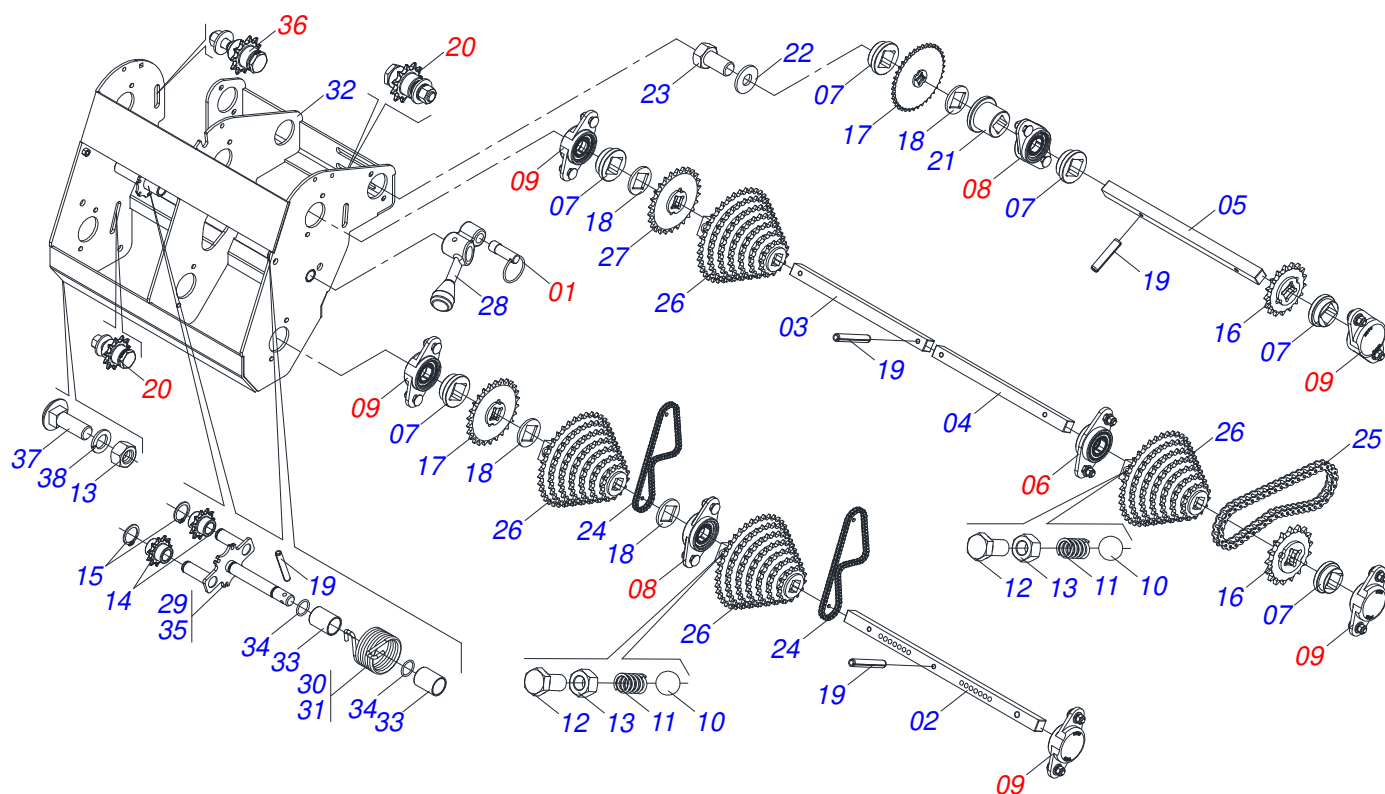

Item	Code	Description	See page	QT
01	0501048790	AXLE WITH RING	45	02
02	0551018209	DRIVING AXLE		01
03	0521018259	DRIVEN AXLE		01
04	0551018210	DRIVEN AXLE		01
05	0551018211	INTERM SHAFT		01
06	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	46	01
07	0503030303	SUPPORT WASHER		06
08	0501056443	GEAR HOUSING BEARING	47	02
09	0511059266	CLOSED BEARING	48	05
10	0503012389	1/2 BALL		04
11	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
12	0503010834	1/2 X 1 BOLT		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		06
14	0503031805	11Z 1/2" GEAR		04
15	0503010302	501019 SEAL RING		04
16	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
17	0511067501	26Z GEAR		02
18	0521018630	1.4" X SQUARE 0.8" WASHER		05
19	0503010292	701164 6 X 40 SPRING PIN		10
20	0501054655	CHAIN TENSIONER ASSY	49	02
21	0591010679	19.4 / 19.6 X 26 BEARING		01
22	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
23	0503010256	3/8" X 3/4" BOLT		01
24	0503012204	40-1 CHAIN X 82 LINK + RED		02
25	0503012713	40-1 CHAIN X 45 LINK + MEN		01
26	0511060396	DRIVE/DRIVEN SHAFT		04
27	0511061822	25Z P0.5" GEAR SQUARE HOL		01
28	0502011758	REAR TIGHTENER LEVER		02
29	0531060029	LONGER CURRENT STRETCHER WITHOUT LUBRICATION		01
30	0503031367	SPRING		01
31	0503031366	RIGHT TWISTED SPRING		01

Item	Code	Description	See page	QT
32	0531060009	RIGHT EXCHANGE BODY WITHOUT LUBRICATION		01
33	0503019418	SLEEVE		04
34	0503011034	RING		04
35	0531060025	MINOR CHAIN STRETCHER WITHOUT LUBRICATION		01
36	0511059261	CHAIN TENSIONER	50	01
37	0503014734	BOLT		02
38	0503010019	1/2" SPRING WASHER		02

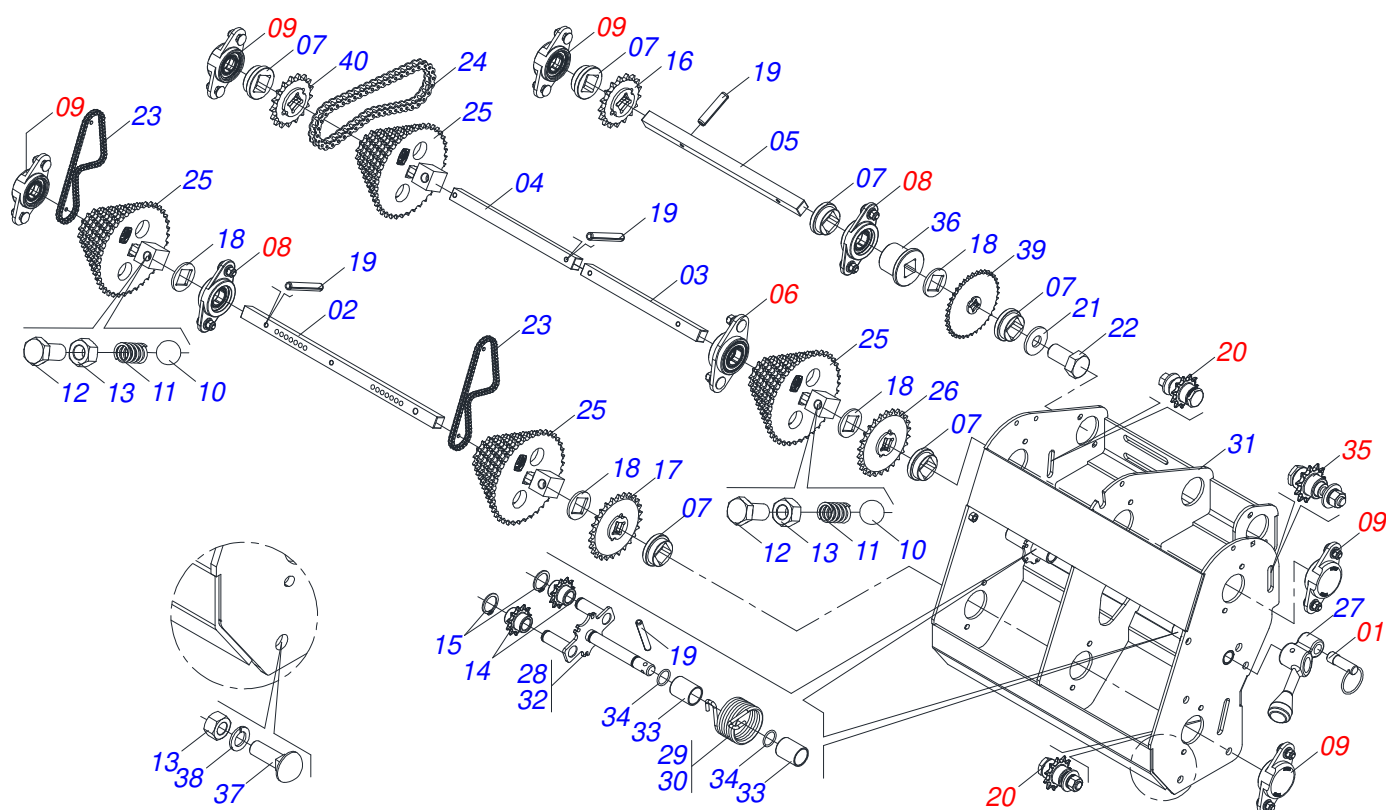


Item	Code	Description	See page	QT
01	0501048790	AXLE WITH RING	45	02
02	0551018209	DRIVING AXLE		01
03	0521018259	DRIVEN AXLE		01
04	0551018210	DRIVEN AXLE		01
05	0551018211	INTERM SHAFT		01
06	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	46	01
07	0503030303	SUPPORT WASHER		06
08	0501056443	GEAR HOUSING BEARING	47	02
09	0511059266	CLOSED BEARING	48	05
10	0503012389	1/2 BALL		04
11	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
12	0503010834	1/2 X 1 BOLT		04
13	0503010060	1/2 UNC G.5 ZN HEX NUT		06
14	0503031805	11Z 1/2" GEAR		04
15	0503010302	501019 SEAL RING		04
16	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
17	0511067501	26Z GEAR		02
18	0521018630	1.4" X SQUARE 0.8" WASHER		05
19	0503010292	701164 6 X 40 SPRING PIN		10
20	0501054655	CHAIN TENSIONER ASSY	49	02
21	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
22	0503010256	3/8" X 3/4" BOLT		01
23	0503012204	40-1 CHAIN X 82 LINK + RED		02
24	0503012713	40-1 CHAIN X 45 LINK + MEN		01
25	0511060396	DRIVE/DRIVEN SHAFT		04
26	0511061822	25Z P0.5" GEAR SQUARE HOL		01
27	0502011758	REAR TIGHTENER LEVER		02
28	0531060029	LONGER CURRENT STRETCHER WITHOUT LUBRICATION		01
29	0503031367	SPRING		01
30	0503031366	RIGHT TWISTED SPRING		01
31	0531060008	LEFT EXCHANGE BODY WITHOUT LUBRICATION		01


LEFT GEAR BOX ASSY

0521056999


Item	Code	Description	See page	QT
32	0531060025	MINOR CHAIN STRETCHER WITHOUT LUBRICATION		01
33	0503019418	SLEEVE		04
34	0503011034	RING		04
35	0511059261	CHAIN TENSIONER	50	01
36	0591010679	19.4 / 19.6 X 26 BEARING		01
37	0503014734	BOLT		02
38	0503010019	1/2" SPRING WASHER		02
39	0521060879	38Z GEAR		01
40	0511061759	22Z P12,70 FQ 3/4" GEAR		01

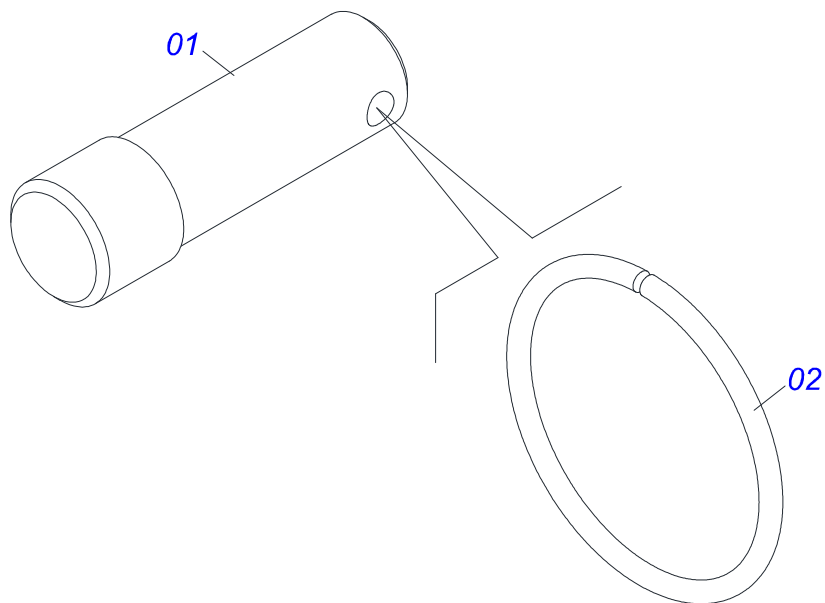


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

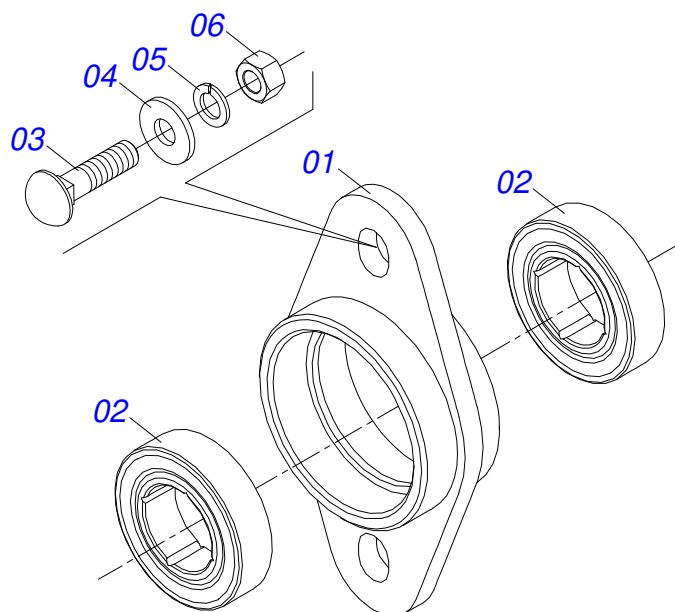


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

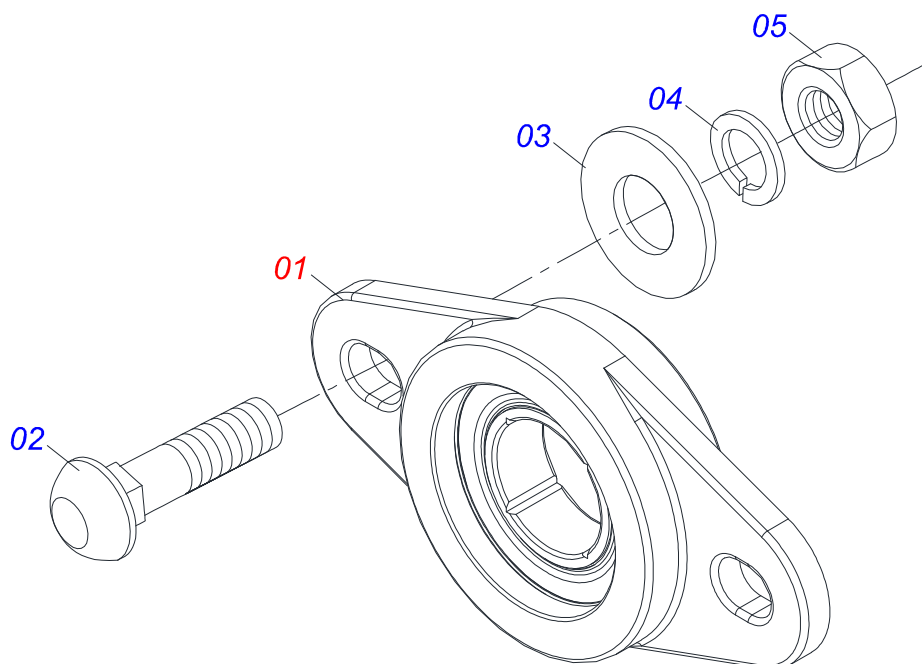


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLER	23	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

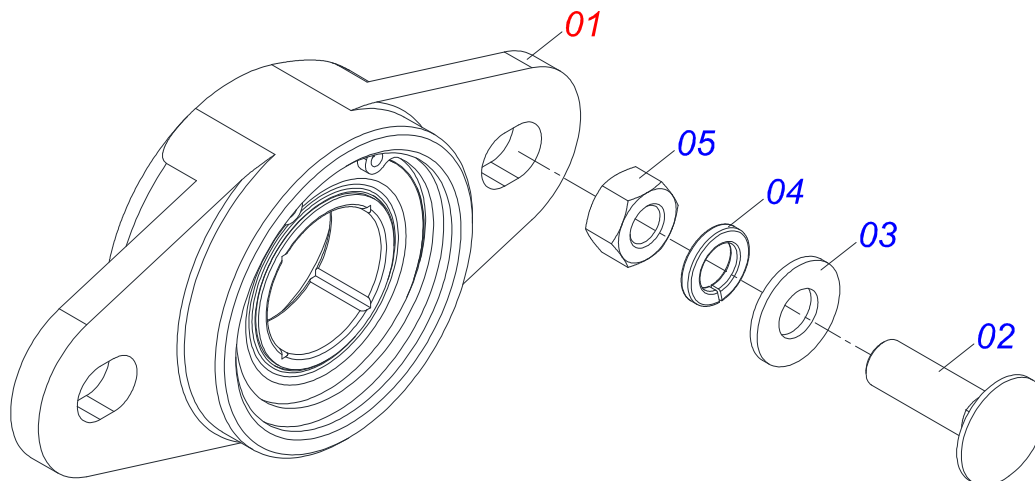


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	22	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

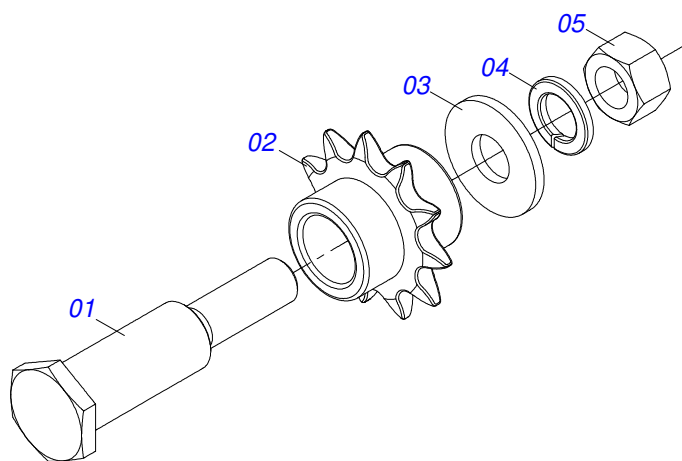


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

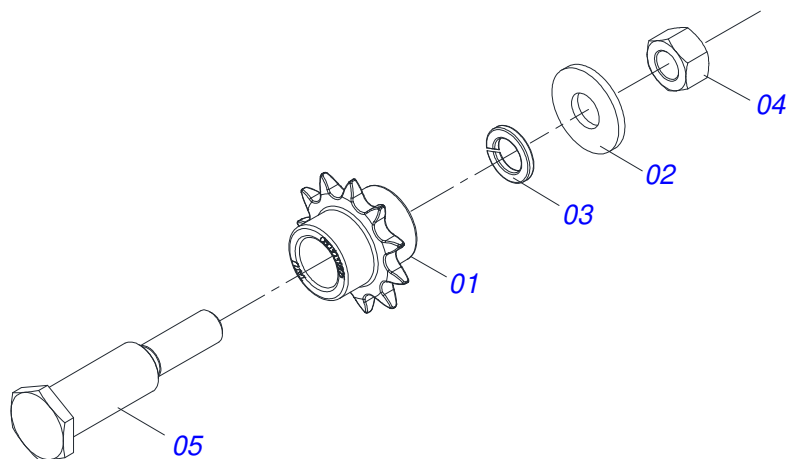


Item	Code	Description	See page	QT
01	0503031805	11Z 1/2" GEAR		01
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0531019479	AXLE CHAIN GEAR		01

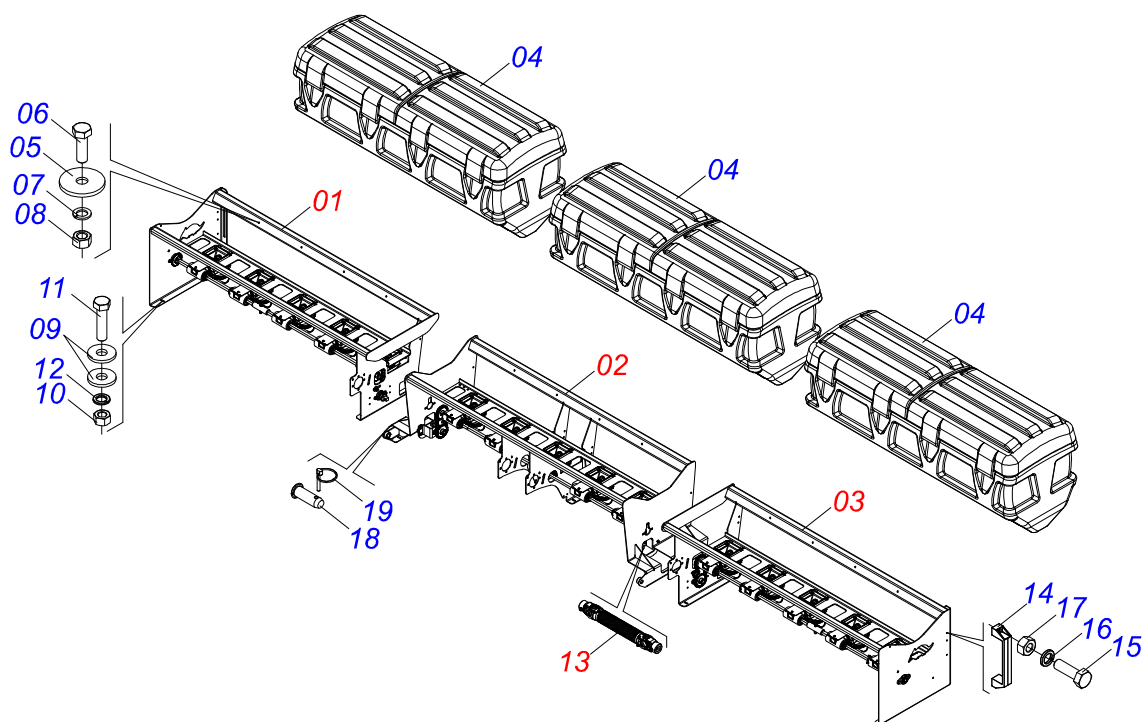


Item	Code	Description	See page	QT
01	0531056805	RIGHT FERTILIZER HOPPER SUPPORT WITH 52 METERING		01
02	0531056806	CENTRAL FERTILIZER SUPPORT WITH DOSER 62		01
03	0531056807	LEFT FERTILIZER HOPPER SUPPORT WITH 67 METERING		01
04	0503062391	FERTILIZER HOPPER		03
05	0571019051	FIXER HOPPER WASHER		24
06	0503013751	3/8 UNC X 1.1/4 BOLT		24
07	0503012535	3/8" SPRING WASHER		24
08	0503012531	3/8" INOX NUT		24
09	0501010984	10,50 X 27 X 3,00 FLAT WASHER		32
10	0503010026	3/8" NUT		16
11	0503010849	3/8" X 1-1/2" BOLT		16
12	0503010025	3/8 SPRING WASHER		16
13	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER 68		02
14	0503011957	NYLON HANDLE		02
15	0503010371	5/16" X 1" BOLT		04
16	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
17	0503010337	5/16" NUT		04
18	0521010572	0.9" X 2.9" COUPLING SHAFT		02
19	0503030085	LOCK PIN		02

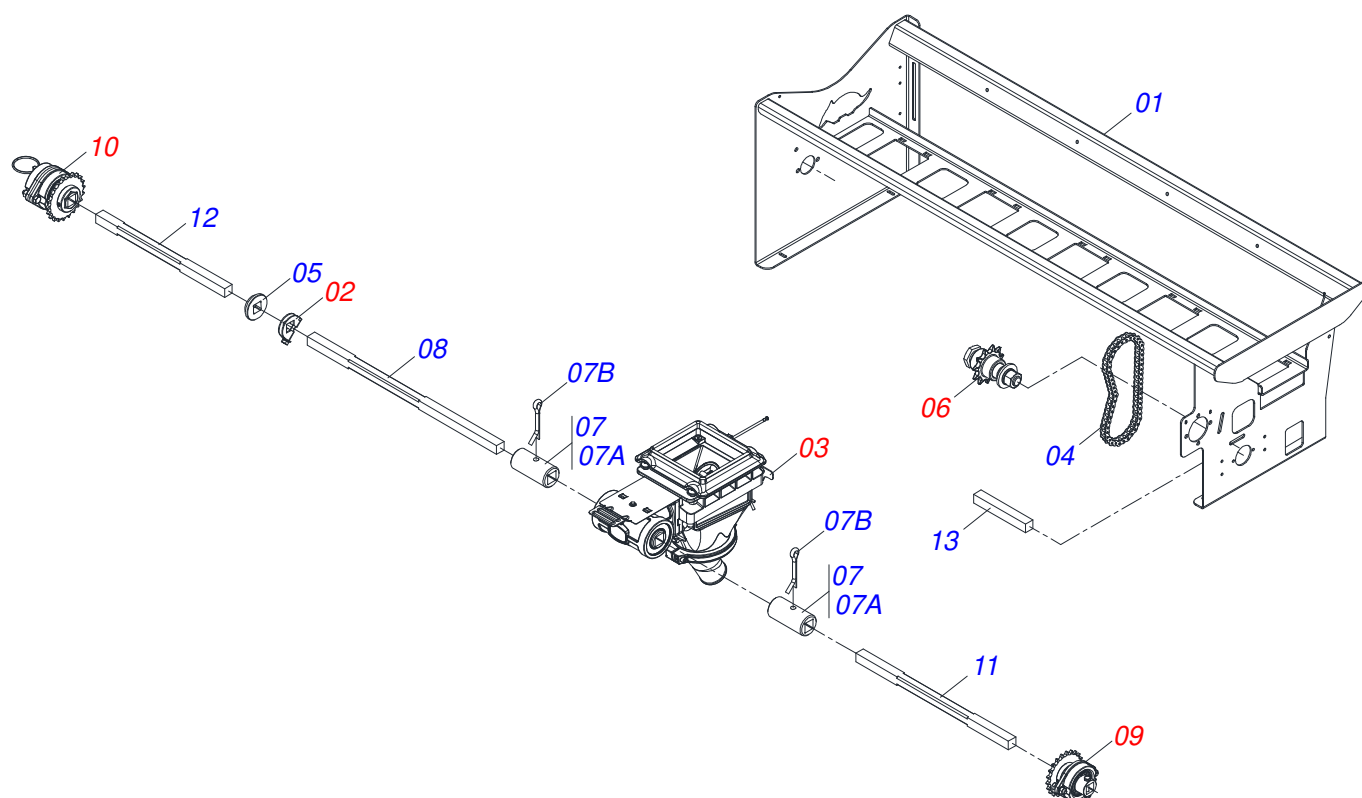


Item	Code	Description	See page	QT
01	0531064872	RIGHT SUPPORT SILO FERTILIZER ALPHA		01
02	0501053788	3/4" SQUARE AXLE FASTENER	24	02
03	0531055319	ALPHA II FERTILIZER METERING	53	05
04	0503012761	40-1 CHAIN X 52 LINK + REDUCTION		01
05	0503031527	AGRICULTURAL BEARING		02
06	0531055898	CHAIN TIGHTENER	58	01
07	0531057908	SLEEVE 1/4 X 2		03
07A	0502013069	SLEEVE 21 X 38 X 50		01
07B	0503010010	1/4" X 2.1/2" COTTERPIN		01
08	0501310890	SQUARE AXLE		02
09	0531059739	SINGLE SIDE GEAR BEARING SET 22Z	59	02
10	0531057911	22Z GEAR SIDE BEARING ASSEMBLY	60	01
11	0501310952	EJE Q 3/4 X 740 ALFA		01
12	0501311019	3/4 X 462 SQUARE AXLE		01
13	0501310950	SQUARE AXLE		01

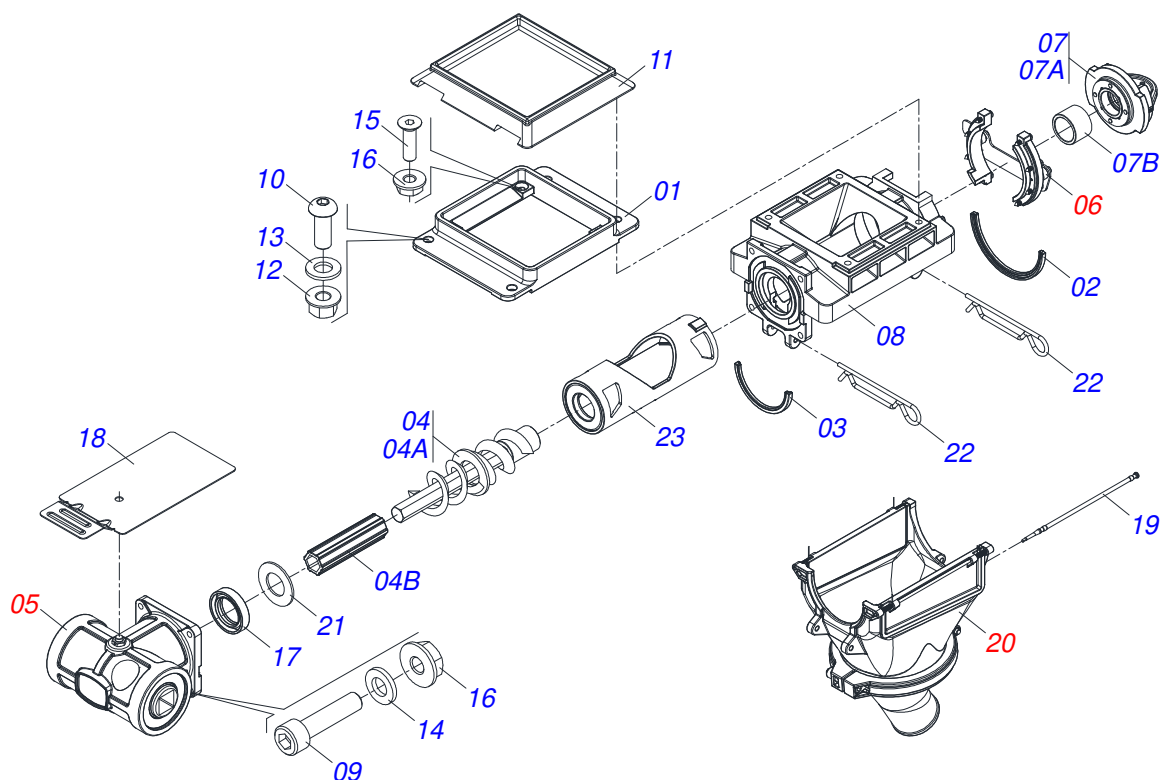


Item	Code	Description	See page	QT
01	0503035913	METERING BODY FIXING ADAPTER		01
02	0503035911	REAR COLLECTOR SEAL		01
03	0503035912	FRONT COLLECTOR SEAL		01
04	0531055518	WORM THREAD ASSEMBLED		01
04A	0531064265	WORM THREAD		01
04B	0503035859	SUPPORT SLEEVE		01
05	0531055863	ASSY TRANSMISSION HUB	54	01
06	0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	55	01
07	0501111134	LID WITH ALPHA FERTILIZER METERING GUIDE SLEEVE		01
07A	0503063799	LID WITH FERTILIZER METERING WASHER ALPHA		01
07B	0503035822	GUIDE SLEEVE SPRING CONDUCTOR		01
08	0501214337	FERTILIZER METERING BOX		01
09	0513011169	ALLEN SCREW 1/4 UNC X 1 CCSI STAINLESS STEEL		04
10	0513011172	ALLEN SCREW 3/8 UNC X 1 CASI STAINLESS STEEL		04
11	0503035931	FERTILIZER METERING SEAL		01
12	0513011173	NUT 3/8 UNC X 1		04
13	0513011174	FLAT WASHER 10.50 X 20 X 2.00 STAINLESS STEEL		05
14	0513011167	FLAT WASHER 6.4 X 12 X 1.60 STAINLESS STEEL		04
15	0513011170	ALLEN SCREW 1/4 UNC X 7/8 CCSI STAINLESS STEEL		04
16	0513011171	1/4 NC HEX NUT		08
17	0503036181	30 X 47 X 6.50 SEAL SUPPLEMENT		01
18	0501310211	FRONT LID		01
19	0503036177	LID CORD		01
20	0531059139	ASSY COLLECTOR	56	01
21	0501310274	FLAT WASHER 46.10 X 32 X 0.80		01
22	0503035797	FRONT COLLECTOR FIXER		02
23	0501111195	GRANULATED FERTILIZER COATING		01

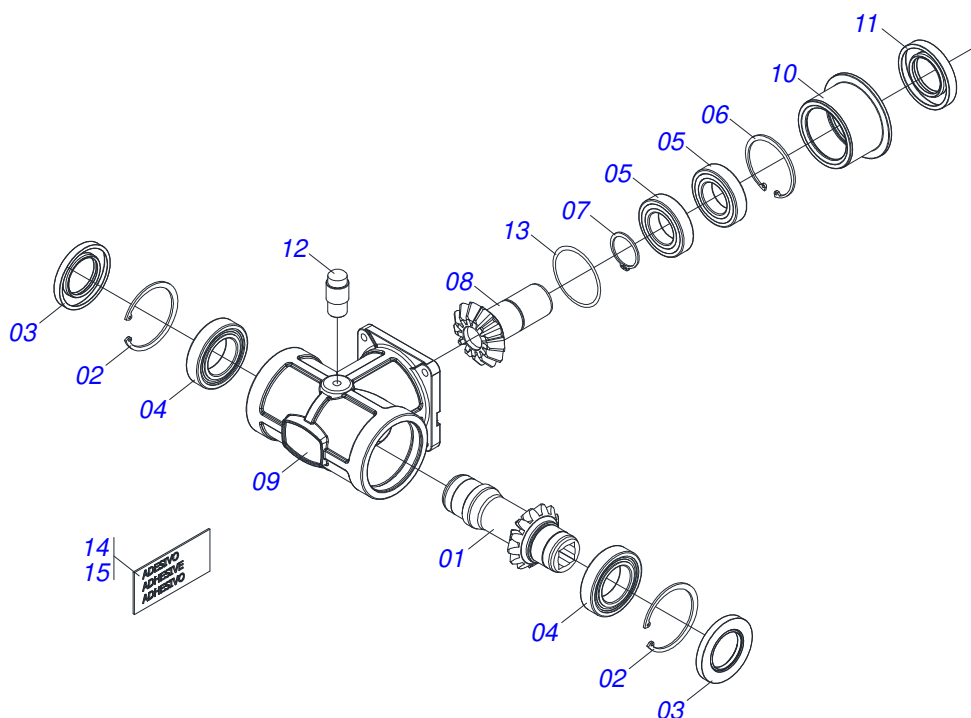


Item	Code	Description	See page	QT
01	0502013056	CONICAL PINION MOTOR 13Z ALPHA FERTILIZER METERING		01
02	0503011800	SEAL RING		02
03	0513010740	RETAINER 62 X 35 X 7 BRG 7159		02
04	0503016065	ROLLER BEARING		02
05	0503019373	6006 2RS1 NATIONAL BEARING		02
06	0503012858	502075 CLAMPING RING (FOR HOLE)		01
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01
08	0501111141	GEAR WITH ALPHA FERTILIZER METERING CAP		01
09	0501215105	METERING TRANSMISSION HUB		01
10	0501215104	TRANSMISSION HUB SLEEVE		01
11	0513011272	SEAL 7435-BRG 30 X 55 X 8.00MM		01
12	0501219613	FIXER BREATHER COVER		01
13	0513011248	RING RING 62.00 X 1.50		01
14	0503036071	TATU LOGO ADHESIVE LABEL 41.5 X 29		01
15	0503035316	LUBRICATED POINTS ADHESIVE LABEL		01

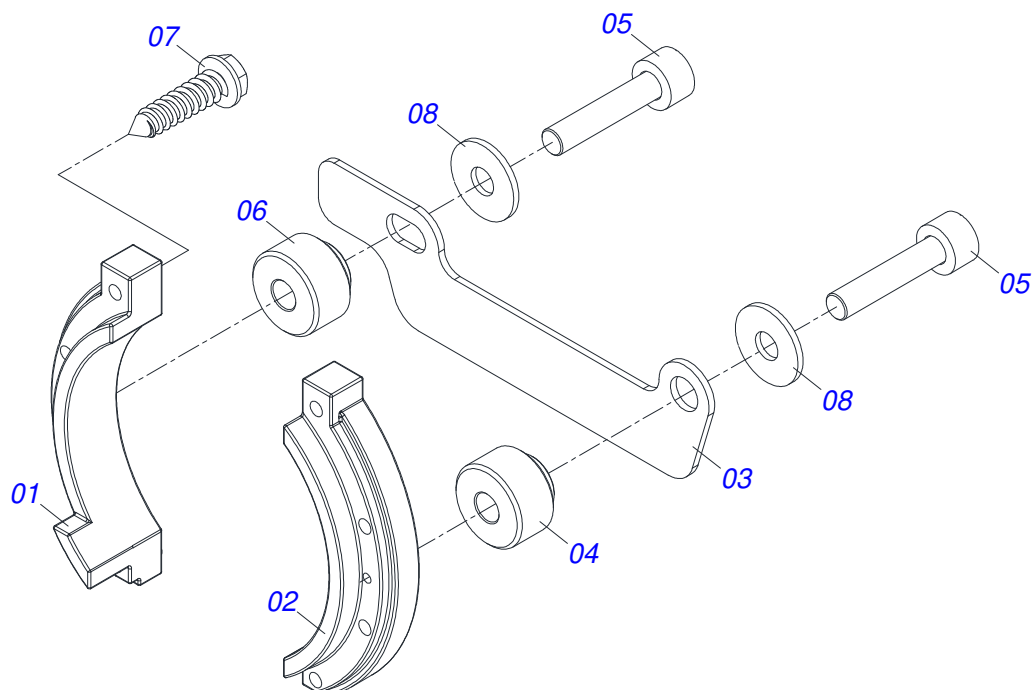


Item	Code	Description	See page	QT
01	0503035915	RIGHT GUIDE DOSING COVER		01
02	0503035916	LEFT GUIDE DISPENSER COVER		01
03	0501310245	ALPHA FERTILIZER DISPENSER COVER LATCH		01
04	0501310247	LEFT SAFETY LOCK SLEEVE		01
05	0513011249	ALLEN SCREW M4 X 20 CCSI STAINLESS STEEL		02
06	0501310246	RIGHT SAFETY LOCK SLEEVE		01
07	0513011507	FLANGED HEX SCREW AT 3.5 X 19 STAINLESS STEEL		08
08	0513011518	FLAT WASHER M4 STAINLESS STEEL AISI 304 4.3 X 12 X 1 MM		01

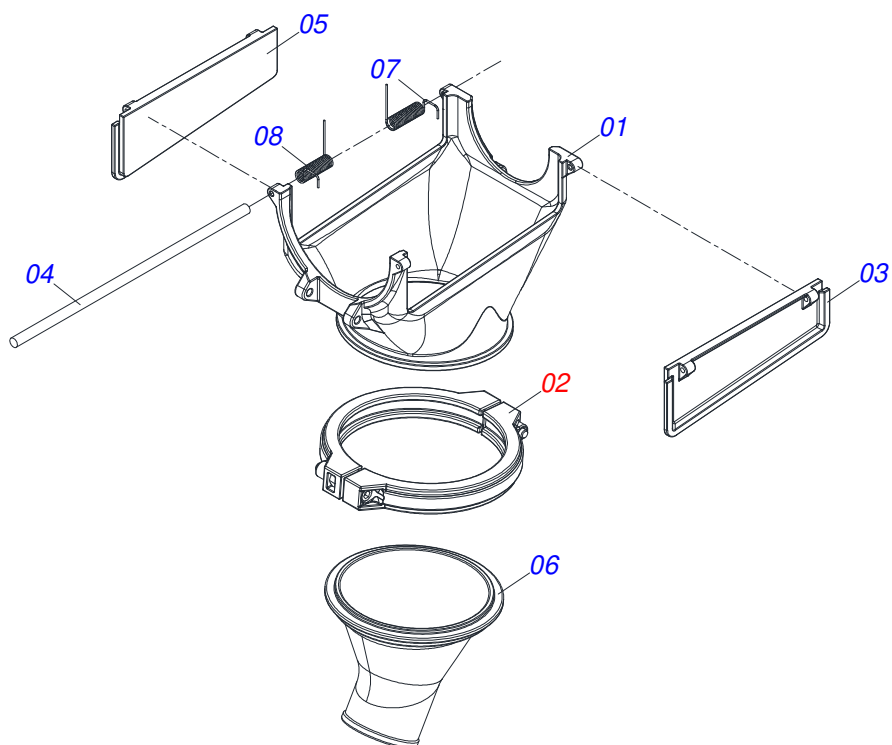


Item	Code	Description	See page	QT
01	0503036178	DISPENSER SIDE COVER COLLECTOR		01
02	0531055273	ALPHA FERTILIZER METERING CLAMP	57	01
03	0503036166	DISPENSER RIGHT SIDE COVER		01
04	0501219838	COLLECTOR SIDE LID AXLE		02
05	0503036167	DISPENSER LEFT SIDE COVER		01
06	0503036180	ALPHA FERTILIZER DOSING NOZZLE 50MM		01
07	0503036203	RIGHT TORSION SPRING DISPENSER SIDE COVER		02
08	0503036202	LEFT TORSION SPRING SIDE COVER		02

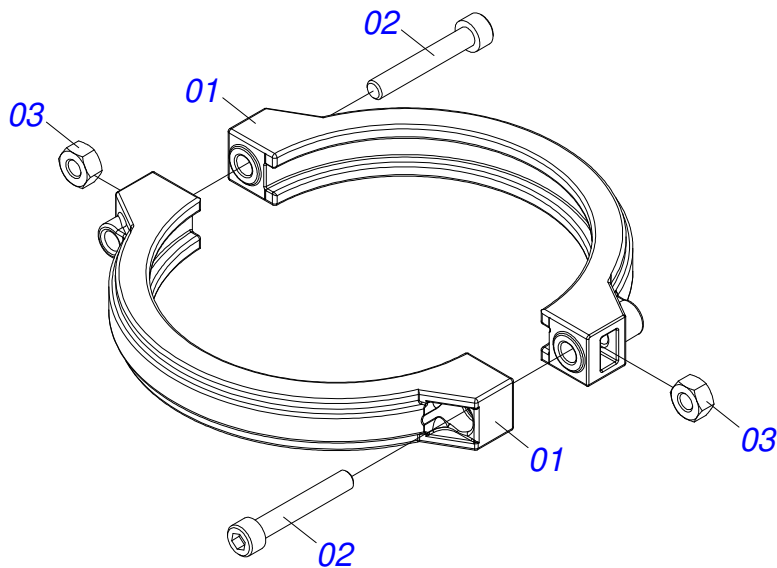


Item	Code	Description	See page	QT
01	0503035812	BODY CLAMP COLLECTOR FERTILIZER METERING ALPHA		02
02	0513010691	ALLEN SCREW 1/4 UNC X 1.1/2 CCSI INOX		02
03	0503012118	1/4" INOX NUT		02

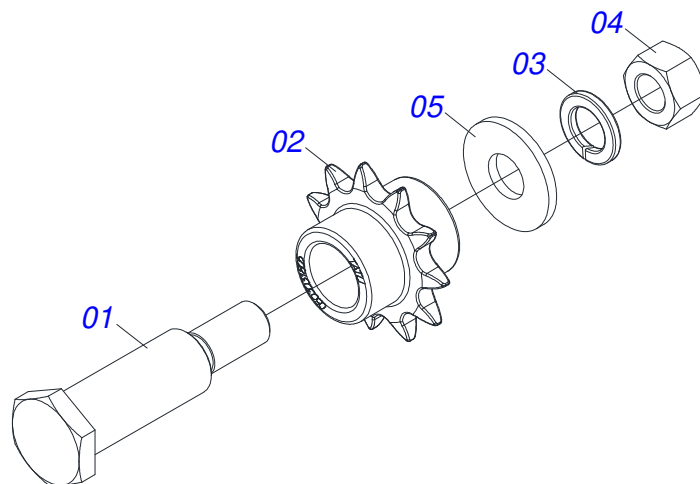


Item	Code	Description	See page	QT
01	0501215149	CHAIN STRETCH AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01

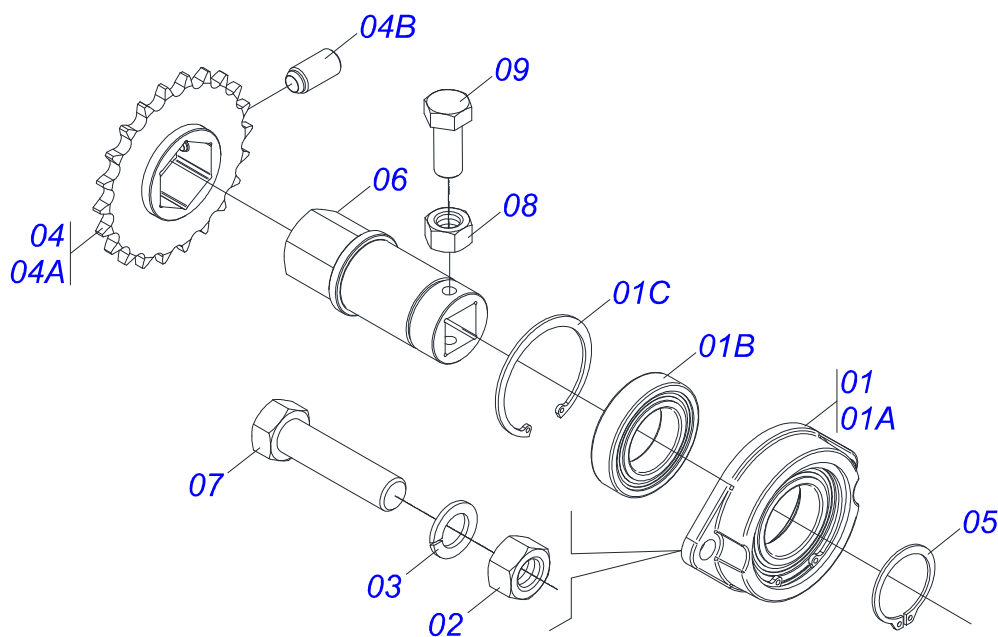


Item	Code	Description	See page	QT
01	0531057910	SIDE BEARING WITH BEARING 6007		01
01A	0502013070	SIDE FERTILIZER HOPPER SUPPORT BEARING		01
01B	0503016065	ROLLER BEARING		01
01C	0503011800	SEAL RING		01
02	0503010337	5/16" NUT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0531057901	GEAR	61	01
04A	0531065402	GEAR		01
04B	0503013958	1/4" X 1" BOLT		02
05	0503010845	501035 CLAMPING RING (FOR AXLE)		01
06	0502012902	SINGLE BEARING SHAFT		01
07	0503010371	5/16" X 1" BOLT		02
08	0503012880	1/4" UNC SELF ADJUSTING NUT		01
09	0503010733	1/4" X 1-3/4" BOLT		01

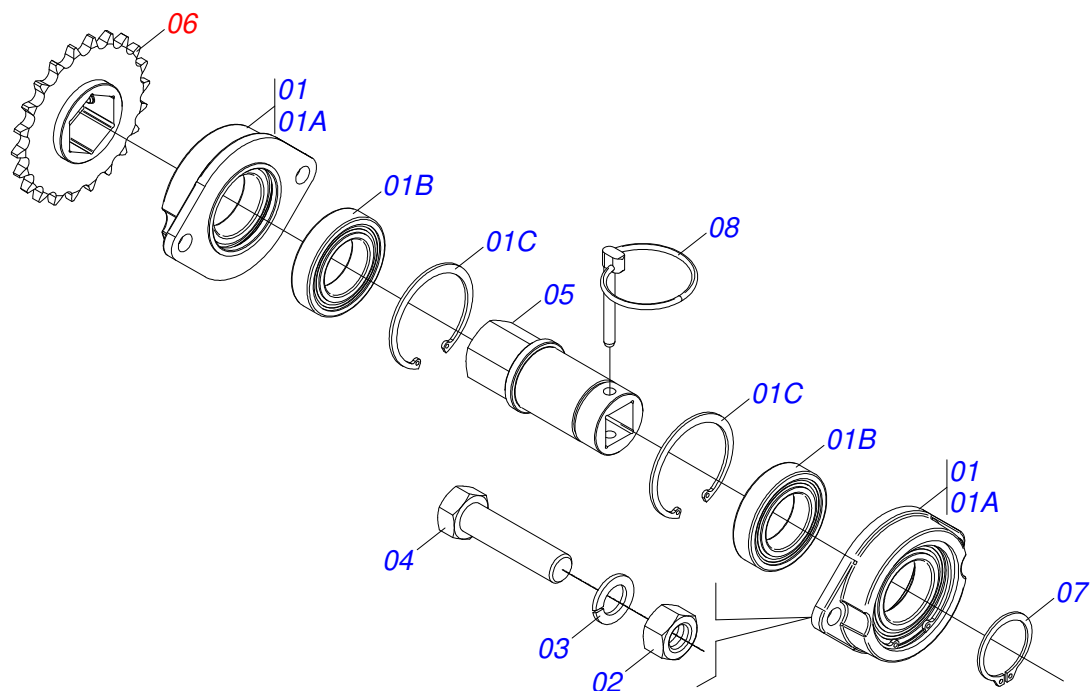


Item	Code	Description	See page	QT
01	0531057910	SIDE BEARING WITH BEARING 6007		02
01A	0502013070	SIDE FERTILIZER HOPPER SUPPORT BEARING		01
01B	0503016065	ROLLER BEARING		01
01C	0503011800	SEAL RING		01
02	0503010337	5/16" NUT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0502013067	SIDE BEARING AXLE FERTILIZER HOPPER SUPPORT		01
06	0531057901	GEAR	61	01
07	0503010845	501035 CLAMPING RING (FOR AXLE)		01
08	0503030119	LOCK PIN		01

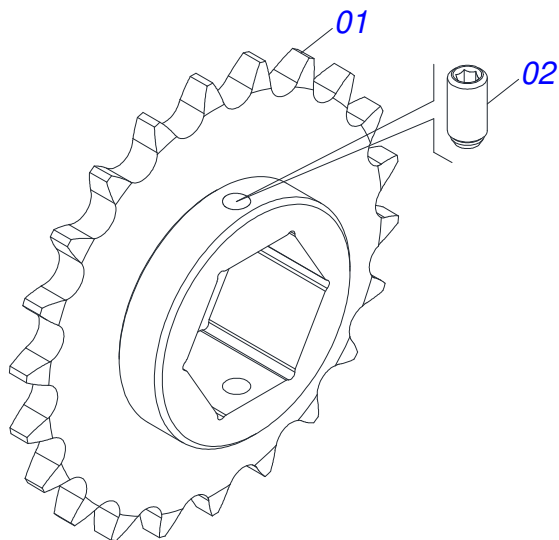


Item	Code	Description	See page	QT
01	0531065402	GEAR		01
02	0503013958	1/4" X 1" BOLT		02

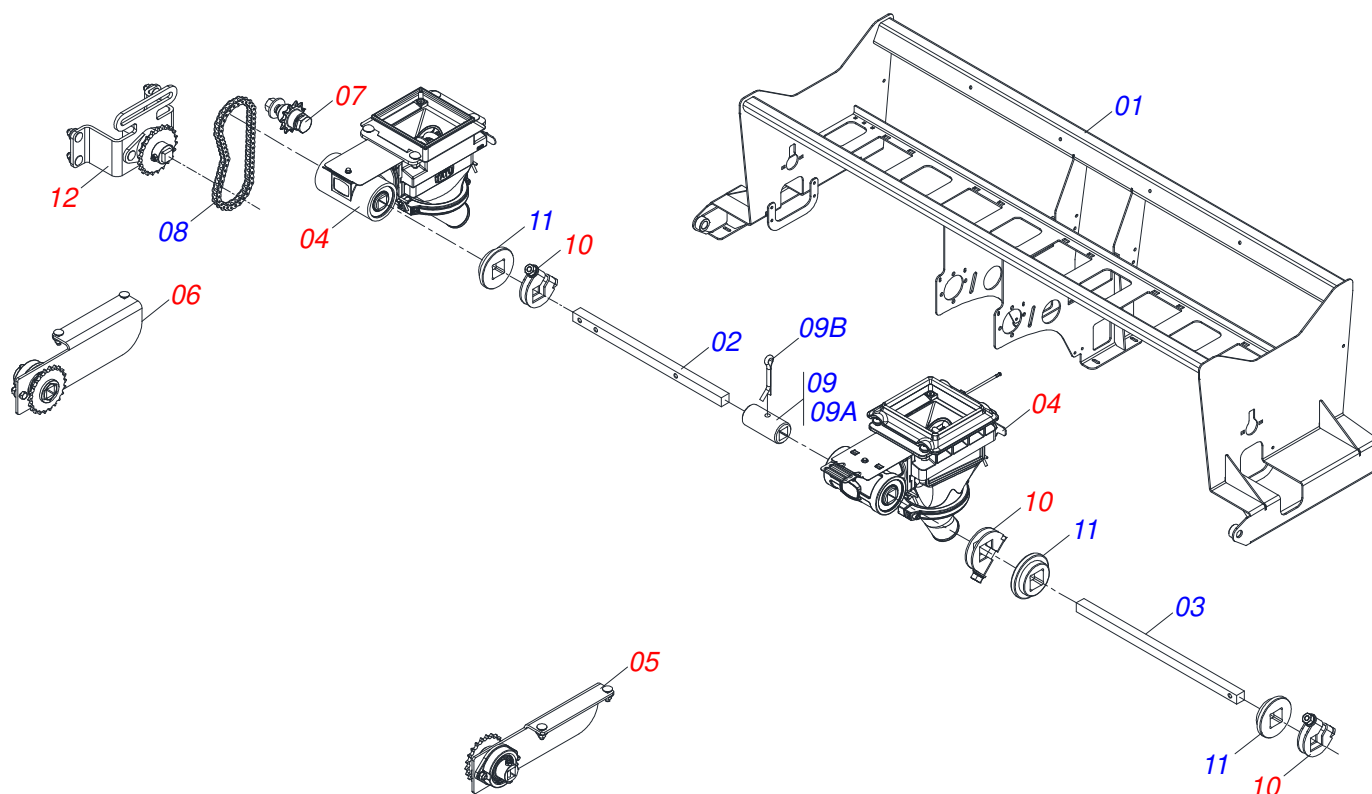


Item	Code	Description	See page	QT
01	0531064770	CENTRAL SUPPORT SILO ADB ALPHA		01
02	0501310952	EJE Q 3/4 X 740 ALFA		02
03	0501311018			01
04	0531055319	ALPHA II FERTILIZER METERING	53	05
05	0531059737	RIGHT BEARING WITH ALPHA GEAR	63	01
06	0531059738	LEFT EARLY BEARING	64	01
07	0531055898	CHAIN TIGHTENER	58	02
08	0503012761	40-1 CHAIN X 52 LINK + REDUCTION		02
09	0531057908	SLEEVE 1/4 X 2		01
09A	0502013069	SLEEVE 21 X 38 X 50		01
09B	0503010010	1/4" X 2.1/2" COTTERPIN		01
10	0501053788	3/4" SQUARE AXLE FASTENER	24	04
11	0503031527	AGRICULTURAL BEARING		04
12	0531055896	80 INTERMEDIATE TRANSMISSION BEARING 65 ASSEMBLED		02

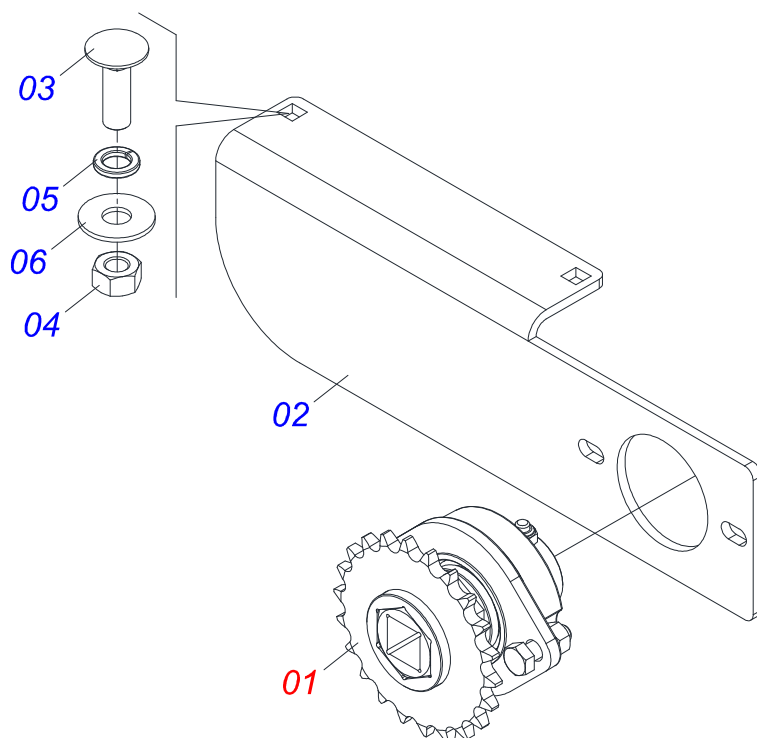


Item	Code	Description	See page	QT
01	0531059739	SINGLE SIDE GEAR BEARING SET 22Z	59	01
02	0501310951	LEFT BEARING PLATE BALANCE		01
03	0503030796	5/16" X 1" BOLT		02
04	0503010337	5/16" NUT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0521011039	FLAT WASHER		02

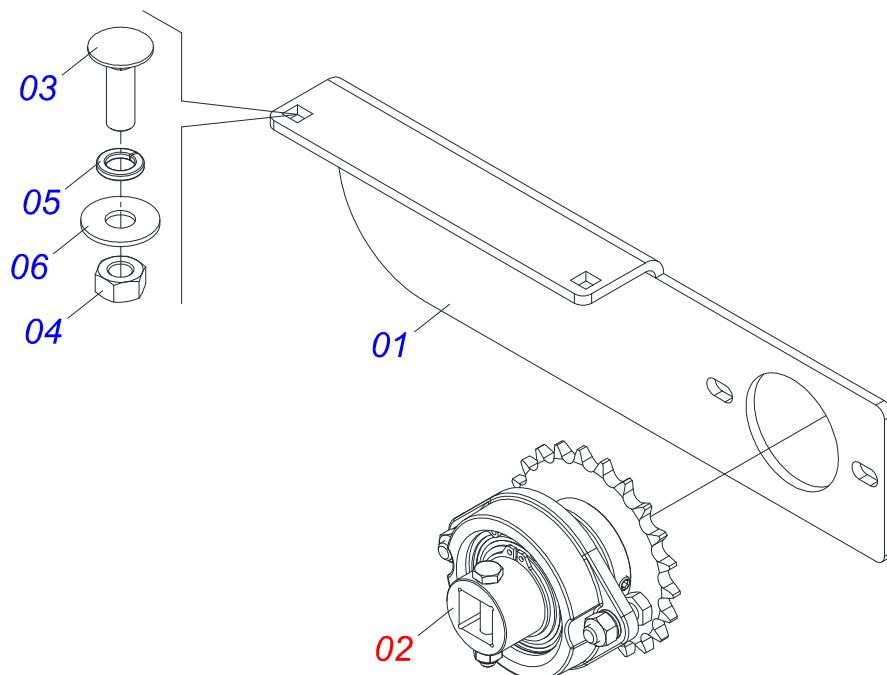


Item	Code	Description	See page	QT
01	0501310953	RIGHT BEARING PLATE BALANCE		01
02	0531059739	SINGLE SIDE GEAR BEARING SET 22Z	59	01
03	0503030796	5/16" X 1" BOLT		02
04	0503010337	5/16" NUT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0521011039	FLAT WASHER		02

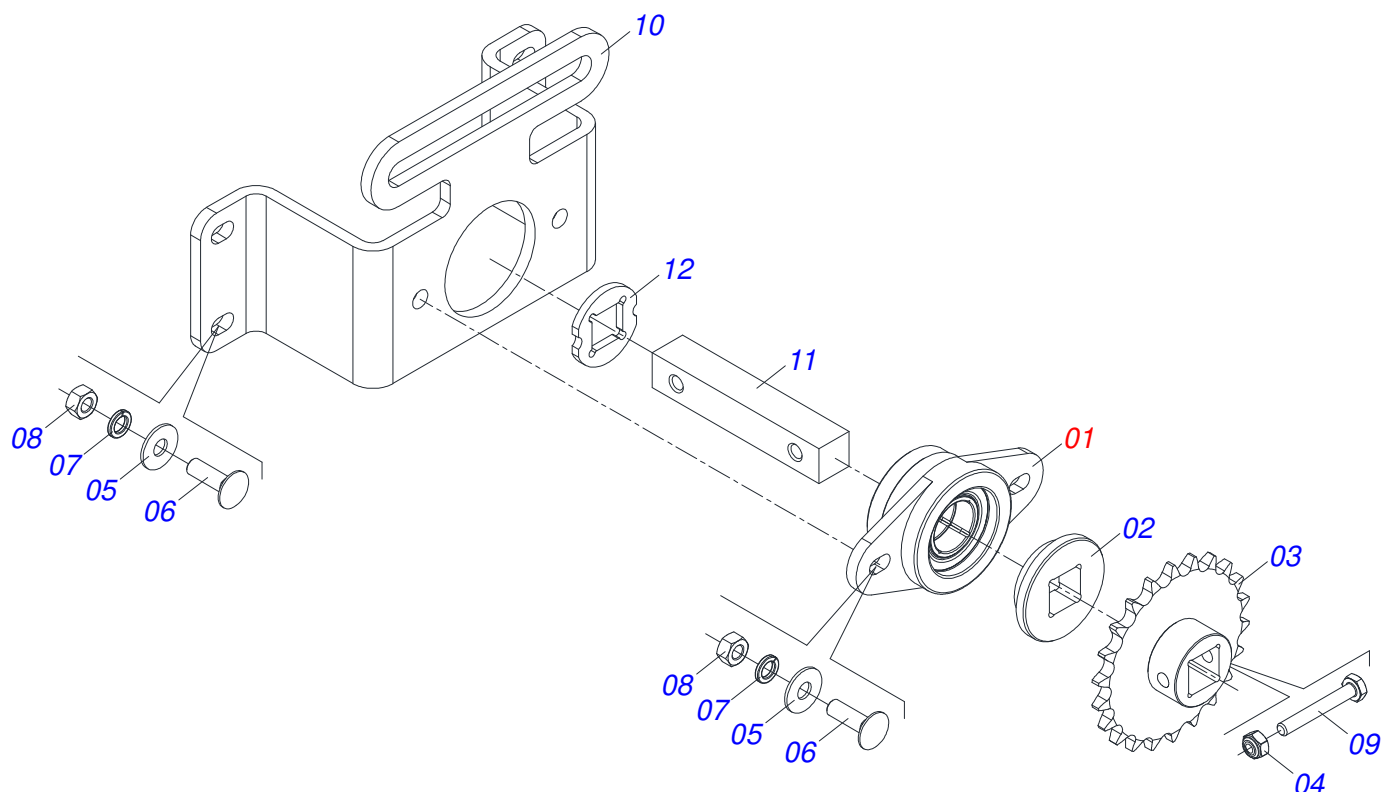


Item	Code	Description	See page	QT
01	0501056451	BEARING	66	01
02	0503031527	AGRICULTURAL BEARING		01
03	0521063187	GEAR 22Z P.1/2 (Q.19,2)		01
04	0503012880	1/4" UNC SELF ADJUSTING NUT		01
05	0521011039	FLAT WASHER		06
06	0503011953	5/16" X 1" BOLT		06
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
08	0503010337	5/16" NUT		06
09	0503010733	1/4" X 1-3/4" BOLT		01
10	0501215084	80 INTERMEDIATE TRANSMISSION BEARING BODY		01
11	0501215144	3/4 X 105 QUADRATE AXLE		01
12	0521014167	CONE LOCK		01

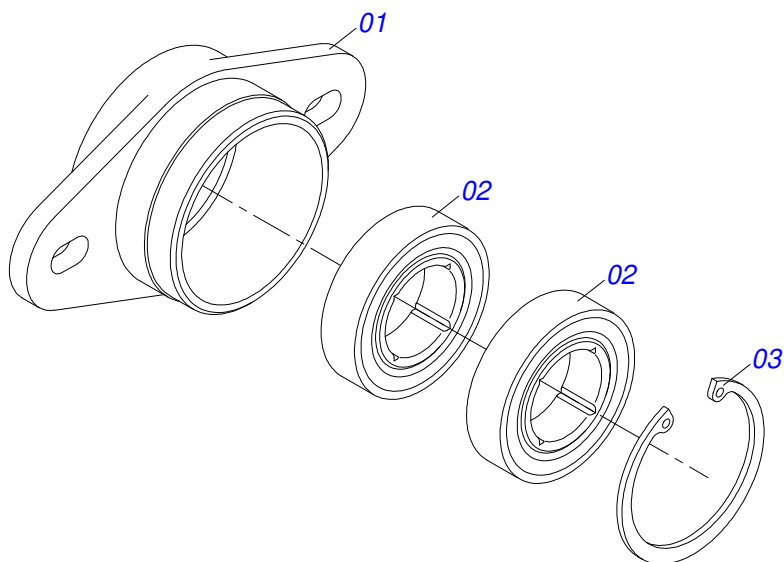


Item	Code	Description	See page	QT
01	0502011971	HOUSING WITH DOUBLE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011105	SEAL RING		01

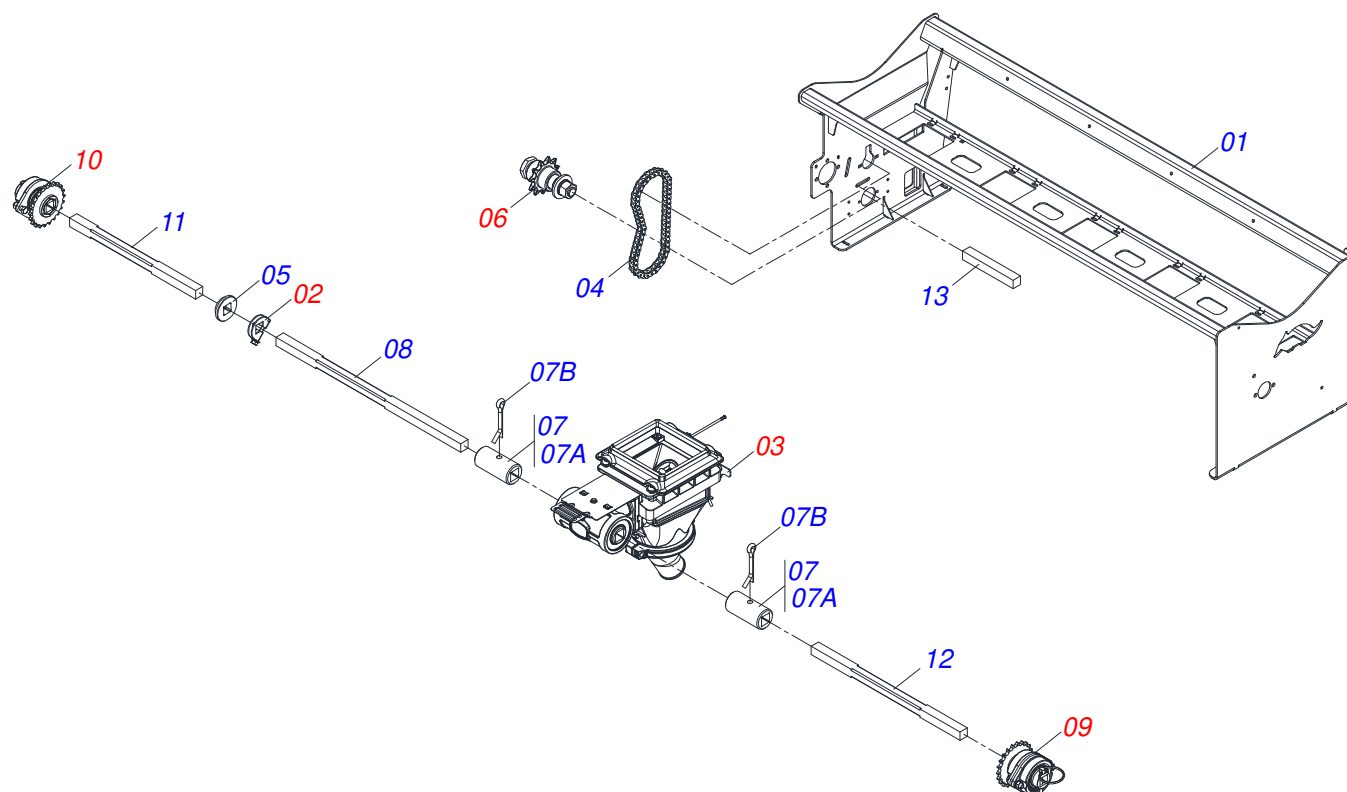


Item	Code	Description	See page	QT
01	0531064873	LEFT SUPPORT SILO FERTILIZER ALPHA		01
02	0501053788	3/4" SQUARE AXLE FASTENER	24	02
03	0531055319	ALPHA II FERTILIZER METERING	53	05
04	0503012761	40-1 CHAIN X 52 LINK + REDUCTION		01
05	0503031527	AGRICULTURAL BEARING		02
06	0531055898	CHAIN TIGHTENER	58	01
07	0531057908	SLEEVE 1/4 X 2		03
07A	0502013069	SLEEVE 21 X 38 X 50		01
07B	0503010010	1/4" X 2.1/2" COTTERPIN		01
08	0501310661	3/4" X 15,35"/15,27" AXLE		02
09	0531057911	22Z GEAR SIDE BEARING ASSEMBLY	60	01
10	0531059739	SINGLE SIDE GEAR BEARING SET 22Z	59	02
11	0501310952	EJE Q 3/4 X 740 ALFA		01
12	0501311019	3/4 X 462 SQUARE AXLE		01
13	0501310950	SQUARE AXLE		01

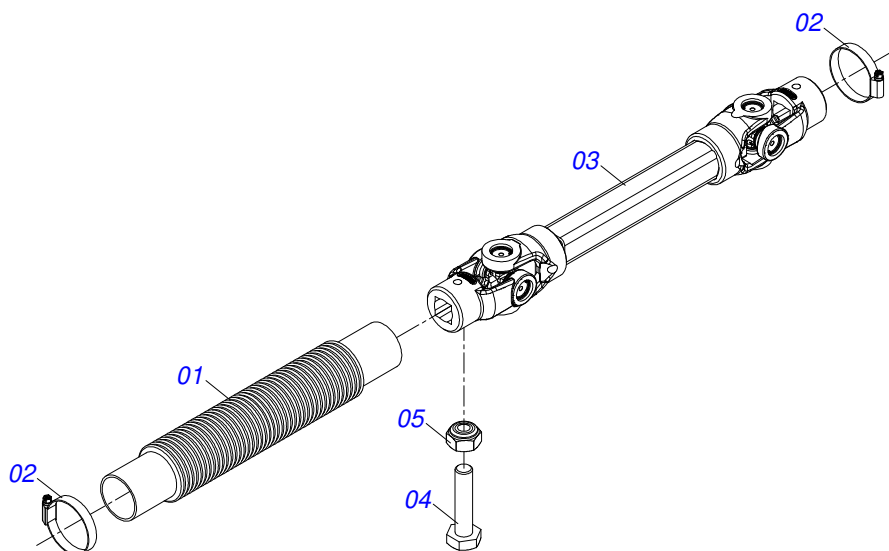


Item	Code	Description	See page	QT
01	0503030331	1.2" X 1.2" X 12.2" HOSE		01
02	0503010243	CLAMP		02
03	0503062755	TRANSMISSION AXLE		01
04	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
05	0503012880	1/4" UNC SELF ADJUSTING NUT		02

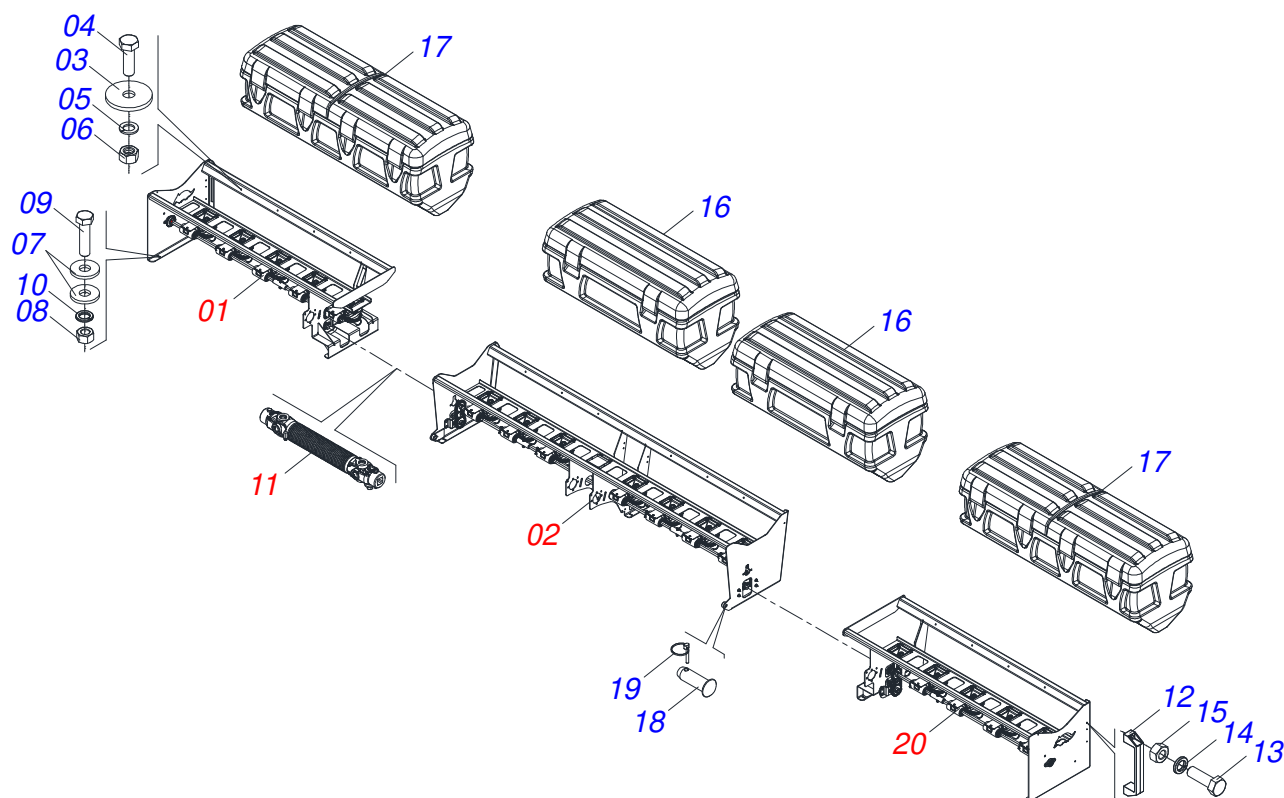


Item	Code	Description	See page	QT
01	0531056737	FERTILIZER RIGHT BEAM SUPPORT	70	01
02	0531056739	CENTRAL FERTILIZER HOPPER SUPPORT	72	01
03	0571019051	FIXER HOPPER WASHER		28
04	0503013751	3/8 UNC X 1.1/4 BOLT		28
05	0503012535	3/8" SPRING WASHER		28
06	0503012531	3/8" INOX NUT		28
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		20
08	0503010026	3/8" NUT		10
09	0503010849	3/8" X 1-1/2" BOLT		10
10	0503010025	3/8 SPRING WASHER		10
11	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	68	02
12	0503011957	NYLON HANDLE		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
15	0503010337	5/16" NUT		04
16	0503062362	FERTILIZER HOPPER		02
17	0503062391	FERTILIZER HOPPER		02
18	0521010572	0.9" X 2.9" COUPLING SHAFT		02
19	0503030085	LOCK PIN		02
20	0531056738	LFT FERTILIZER BEAM SUPPORT	73	01

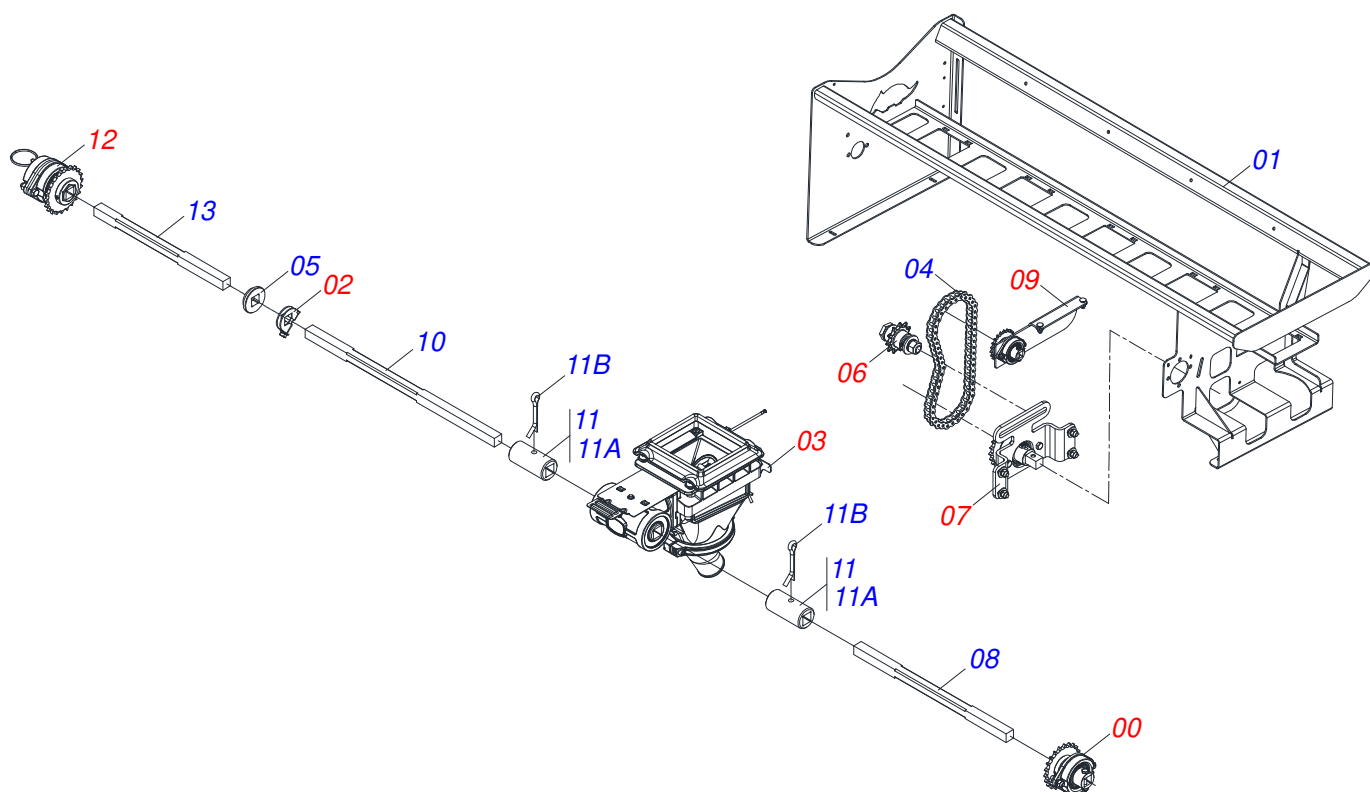


Item	Code	Description	See page	QT
01	0531064826	FERTILIZER RIGHT BEAM SUPPORT		01
02	0501053788	3/4" SQUARE AXLE FASTENER	24	02
03	0531055319	ALPHA II FERTILIZER METERING	53	05
04	0503012761	40-1 CHAIN X 52 LINK + REDUCTION		01
05	0503031527	AGRICULTURAL BEARING		02
06	0531055898	CHAIN TIGHTENER	58	01
07	0531055897	INTERMEDIATE TRANSMISSION BEARING	71	01
08	0501311647	3/4 X 680 SQUARE AXLE		01
09	0531059737	RIGHT BEARING WITH ALPHA GEAR	63	01
10	0501310661	3/4" X 15,35"/15,27" AXLE		02
11	0531057908	SLEEVE 1/4 X 2		03
11A	0502013069	SLEEVE 21 X 38 X 50		01
11B	0503010010	1/4" X 2.1/2" COTTERPIN		01
12	0531057911	22Z GEAR SIDE BEARING ASSEMBLY	60	01
13	0501311019	3/4 X 462 SQUARE AXLE		01

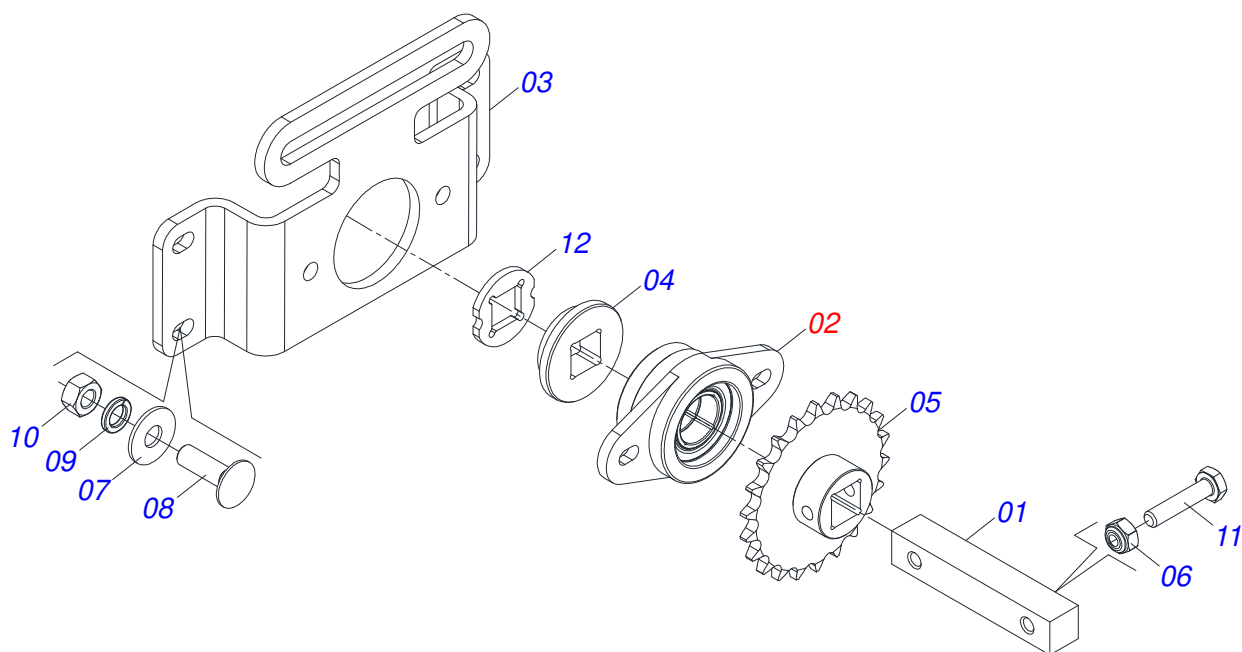


Item	Code	Description	See page	QT
01	0501215144	3/4 X 105 QUADRATE AXLE		01
02	0501056451	BEARING	66	01
03	0501215142	INTERMEDIATE TRANSMISSION BEARING BODY		01
04	0503031527	AGRICULTURAL BEARING		01
05	0521063187	GEAR 22Z P.1/2 (Q.19,2)		01
06	0503012880	1/4" UNC SELF ADJUSTING NUT		01
07	0521011039	FLAT WASHER		06
08	0503011953	5/16" X 1" BOLT		06
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
10	0503010337	5/16" NUT		06
11	0503010733	1/4" X 1-3/4" BOLT		01
12	0521014167	CONE LOCK		01

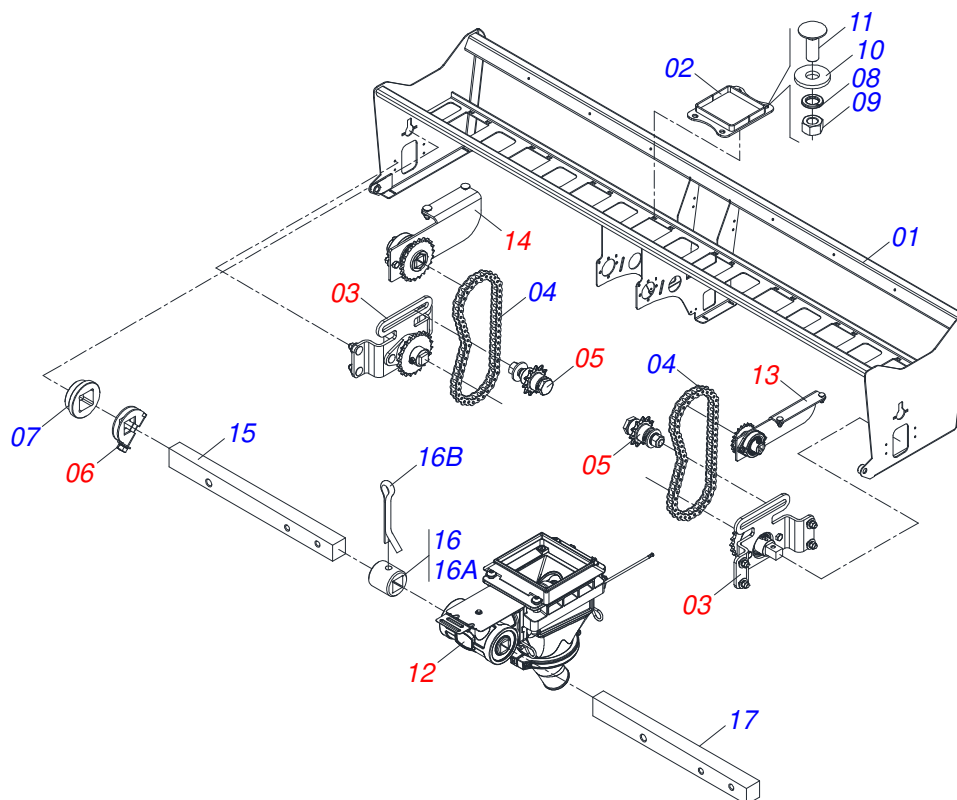


Item	Code	Description	See page	QT
01	0531064828	CENTRAL FERTILIZER HOPPER SUPPORT		01
02	0511062163	FERTILIZER BEAM LOWER COVER		01
03	0531055897	INTERMEDIATE TRANSMISSION BEARING	71	02
04	0503012761	40-1 CHAIN X 52 LINK + REDUCTION		02
05	0531055898	CHAIN TIGHTENER	58	02
06	0501053788	3/4" SQUARE AXLE FASTENER	24	04
07	0503031527	AGRICULTURAL BEARING		04
08	0503010025	3/8 SPRING WASHER		04
09	0503010026	3/8" NUT		04
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
11	0501011643	3/8 X 1"BOLT		04
12	0531055319	ALPHA II FERTILIZER METERING	53	07
13	0531059737	RIGHT BEARING WITH ALPHA GEAR	63	01
14	0531059738	LEFT EARLY BEARING	64	01
15	0501310661	3/4" X 15,35"/15,27" AXLE		05
16	0531057908	SLEEVE 1/4 X 2		05
16A	0502013069	SLEEVE 21 X 38 X 50		01
16B	0503010010	1/4" X 2.1/2" COTTERPIN		01
17	0501311653	3/4 X 390 SQUARE AXLE		02

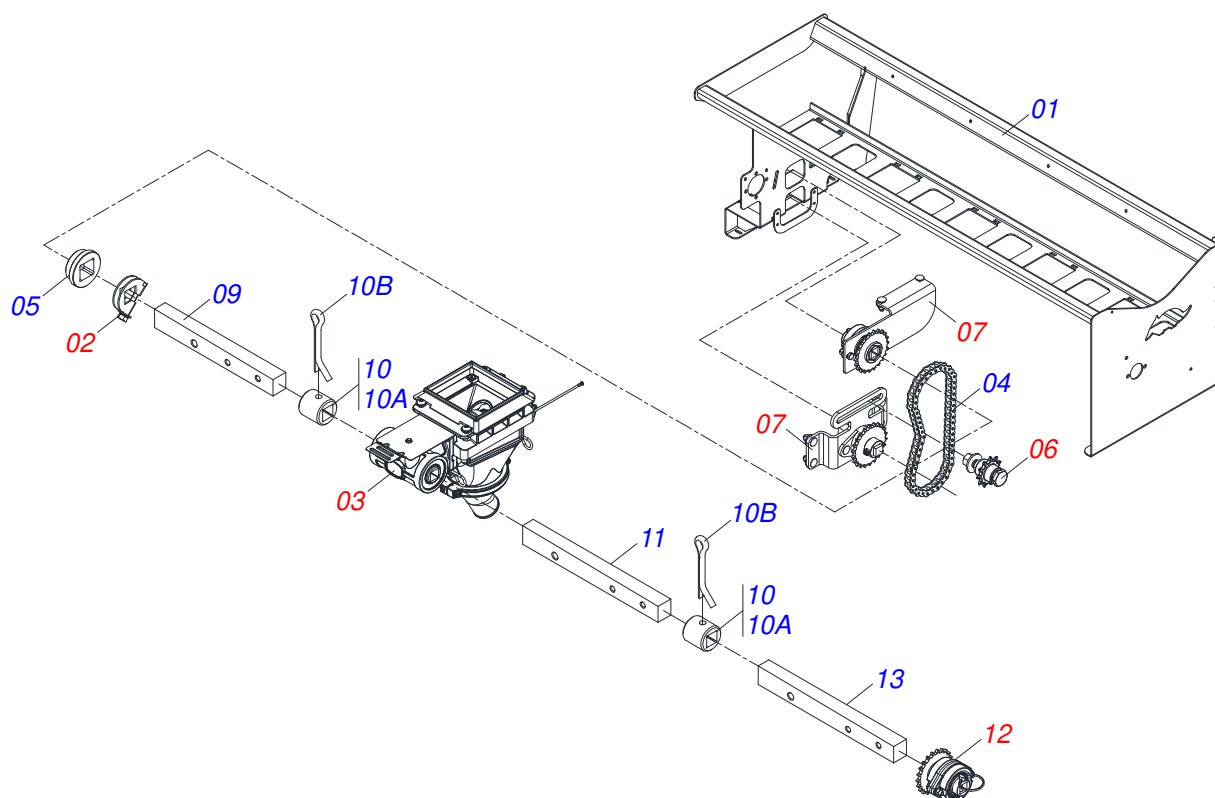


Item	Code	Description	See page	QT
01	0531064827	LFT FERTILIZER BEAM SUPPORT		01
02	0501053788	3/4" SQUARE AXLE FASTENER	24	02
03	0531055319	ALPHA II FERTILIZER METERING	53	05
04	0503012761	40-1 CHAIN X 52 LINK + REDUCTION		01
05	0503031527	AGRICULTURAL BEARING		02
06	0531055898	CHAIN TIGHTENER	58	01
07	0531055897	INTERMEDIATE TRANSMISSION BEARING	71	01
08	0531059738	LEFT EARLY BEARING	64	01
09	0501311647	3/4 X 680 SQUARE AXLE		01
10	0531057908	SLEEVE 1/4 X 2		03
10A	0502013069	SLEEVE 21 X 38 X 50		01
10B	0503010010	1/4" X 2.1/2" COTTERPIN		01
11	0501310661	3/4" X 15,35"/15,27" AXLE		02
12	0531057911	22Z GEAR SIDE BEARING ASSEMBLY	60	01
13	0501311019	3/4 X 462 SQUARE AXLE		01

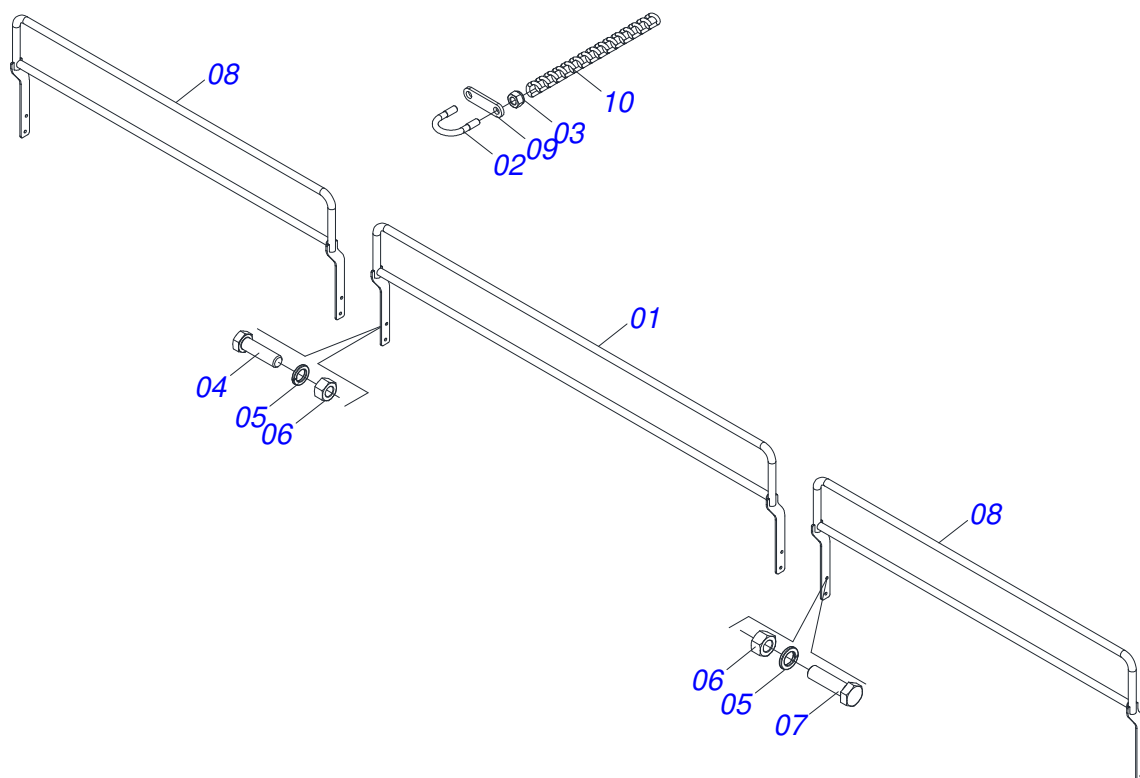


Item	Code	Description	See page	QT
01	0531060446	HANDRAIL		01
02	0551019884	45 X 50 X 3/8 FASTENER		04
03	0503013357	3/8 SELF-ADJUSTING NUT		08
04	0503011082	C1/2" X 1.3/4" SCREW		08
05	0503010019	1/2" SPRING WASHER		12
06	0503010060	1/2 UNC G.5 ZN HEX NUT		12
07	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
08	0531060448	HANDRAIL		02
09	0571017991	CHAIN FIXER HANDRAIL		04
10	0503034094	22 TWISTED CHAIN		02

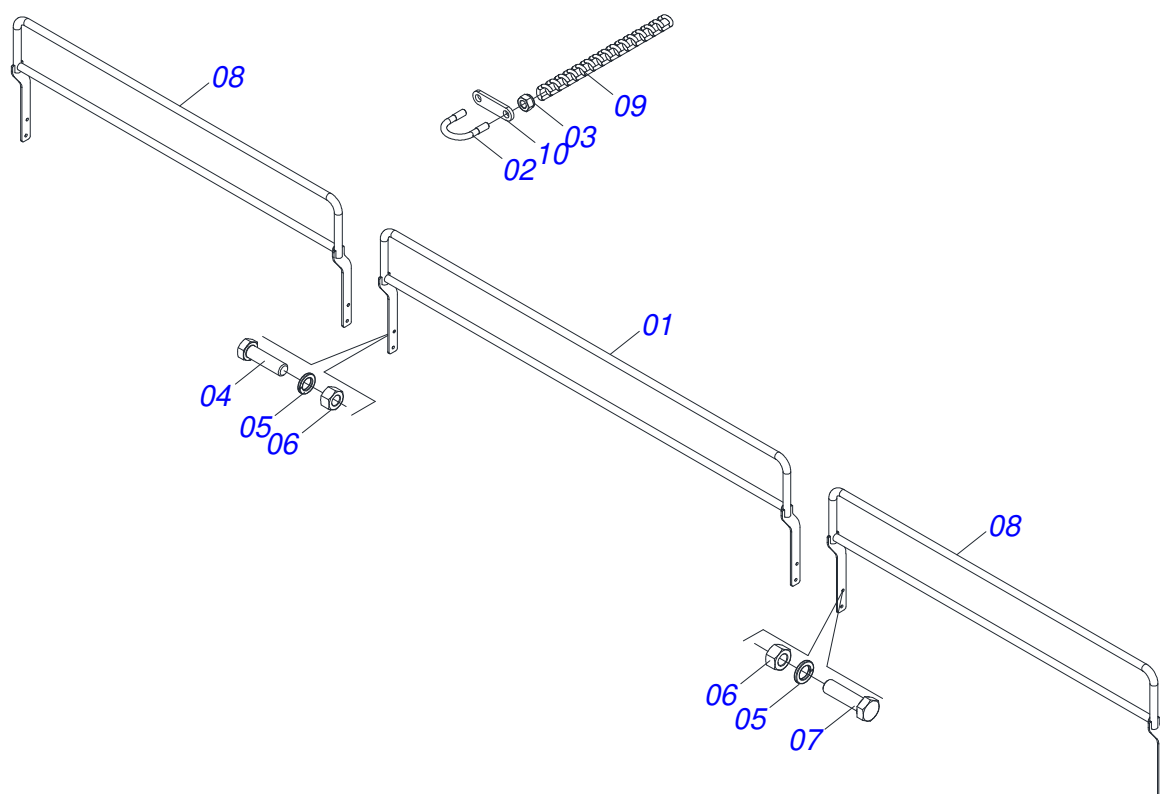


Item	Code	Description	See page	QT
01	0531060453	HANDRAIL		01
02	0551019884	45 X 50 X 3/8 FASTENER		04
03	0503013357	3/8 SELF-ADJUSTING NUT		08
04	0503011082	C1/2" X 1.3/4" SCREW		08
05	0503010019	1/2" SPRING WASHER		12
06	0503010060	1/2 UNC G.5 ZN HEX NUT		12
07	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
08	0531060448	HANDRAIL		02
09	0503034094	22 TWISTED CHAIN		02
10	0571017991	CHAIN FIXER HANDRAIL		04

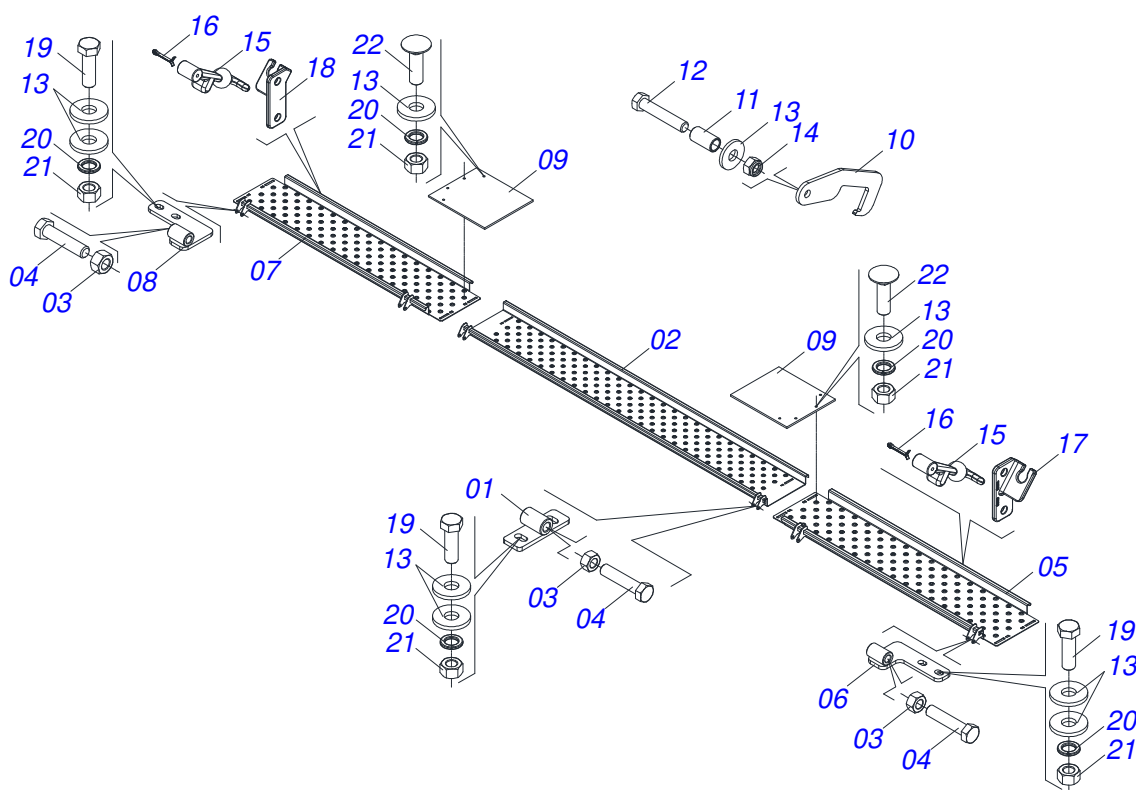

Item	Code	Description	See page	QT
01	0521067102	ARTICULATION CENTRAL PLATFORM		04
02	0531062585	CENTRAL PLATFORM		01
03	0503011336	1/2" HEX SELF ADJUSTING NUT		06
04	0503010741	1/2" X 2-3/4" BOLT		06
05	0521067100	LEFT PLATAFORM		01
06	0521067104	LEFT SIDE ARTICULATION PLATFORM		01
07	0521067101	RIGHT PLATAFORM		01
08	0521067103	RIGHT SIDE ARTICULATION PLATFORM		01
09	0581012193	PLATFORM AMENDMENT PROTECTION		02
10	0551019115	LOCKING PLATFORM FIXATION		03
11	0571019831	X 0.2" SLEEVE		03
12	0501010096	3/8" X 2" BOLT		03
13	0501010984	10,50 X 27 X 3,00 FLAT WASHER		31
14	0503013357	3/8 SELF-ADJUSTING NUT		03
15	0503011333	COVER FIXER		04
16	0503010274	5/32"X 2" COTTERPIN		04
17	1902012740	PLATFORM RIGHT FIXER SUPPORT		02
18	1902012739	PLATFORM LEFT FIXER SUPPORT		02
19	0503010849	3/8" X 1-1/2" BOLT		12
20	0503010025	3/8 SPRING WASHER		16
21	0503010026	3/8" NUT		16
22	0501010942	3/8" X 1-1/4" BOLT		04

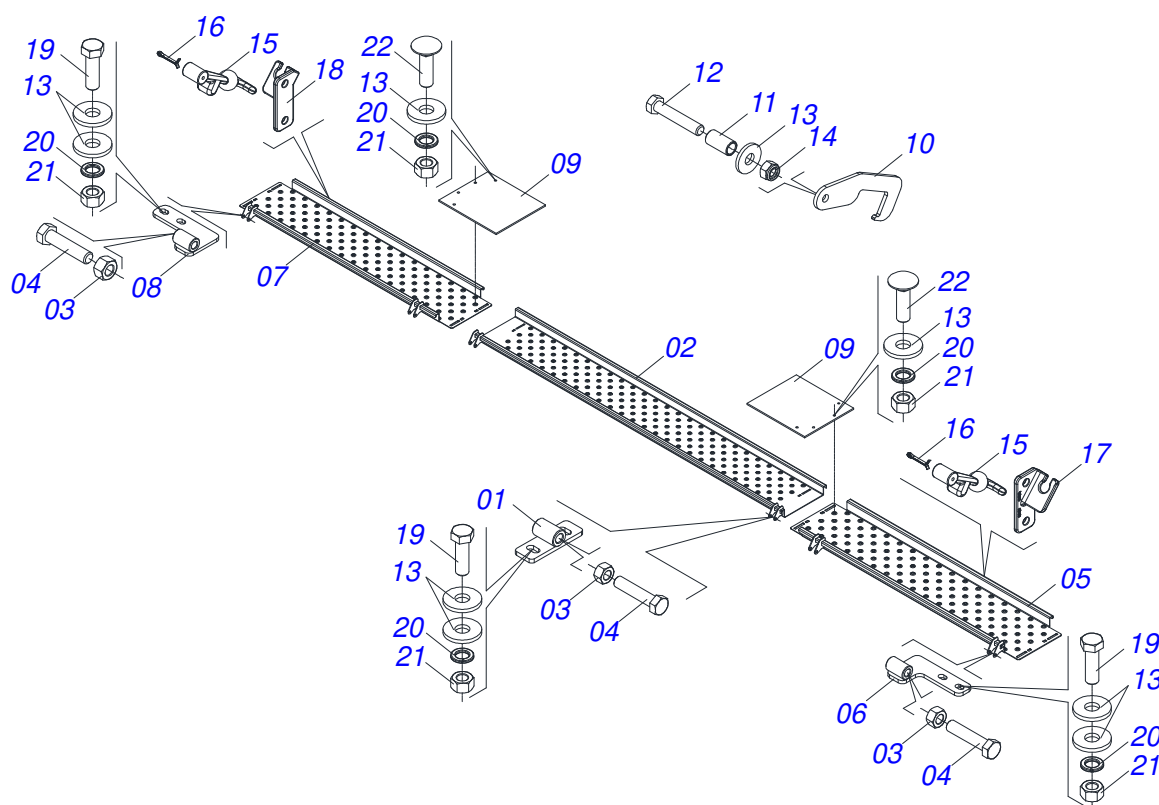


Item	Code	Description	See page	QT
01	0521067102	ARTICULATION CENTRAL PLATFORM	04	
02	0531062587	PLATFORM CENTER	01	
03	0503011336	1/2" HEX SELF ADJUSTING NUT	06	
04	0503010741	1/2" X 2-3/4" BOLT	06	
05	0531060162	LEFT PLATFORM 7655	01	
06	0521067104	LEFT SIDE ARTICULATION PLATFORM	01	
07	0531060161	RIGHT PLATFORM 7655	01	
08	0521067103	RIGHT SIDE ARTICULATION PLATFORM	01	
09	0581012193	PLATFORM AMENDMENT PROTECTION	02	
10	0551019115	LOCKING PLATFORM FIXATION	03	
11	0571019831	X 0.2" SLEEVE	03	
12	0501010096	3/8" X 2" BOLT	03	
13	0501010984	10,50 X 27 X 3,00 FLAT WASHER	31	
14	0503013357	3/8 SELF-ADJUSTING NUT	03	
15	0503011333	COVER FIXER	04	
16	0503010274	5/32"X 2" COTTERPIN	04	
17	1902012740	PLATFORM RIGHT FIXER SUPPORT	02	
18	1902012739	PLATFORM LEFT FIXER SUPPORT	02	
19	0503010849	3/8" X 1-1/2" BOLT	12	
20	0503010025	3/8 SPRING WASHER	16	
21	0503010026	3/8" NUT	16	
22	0501010942	3/8" X 1-1/4" BOLT	04	

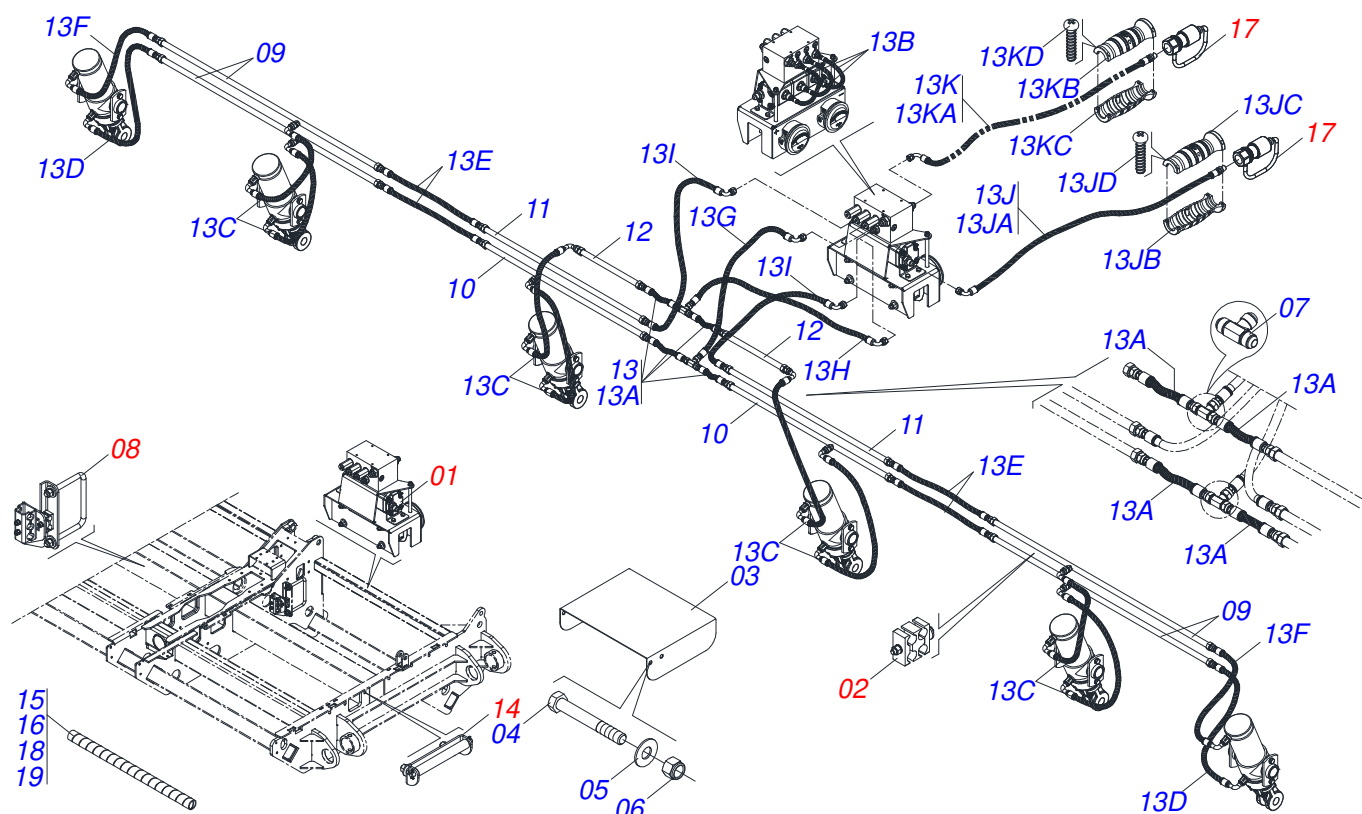


Item	Code	Description	See page	QT
01	0521057899	SUPPORT VALVE BLOCK VACUOMETER ASSY 5750/7350	79	01
02	0521057886	HOSE CLAMP ASSEMBLY	81	02
03	0581010324	HOSE PROTECTOR		01
04	0503010358	5/16" X 5/8" BOLT		04
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
06	0503010337	5/16" NUT		04
07	0503013493	T CONNECTION MALE		02
08	0521057259	OIL CONDUCTOR FIXATION	82	08
09	0531060538	OIL CONDUCTOR		04
10	0531060537	OIL CONDUCTOR		02
11	0531060540	OIL TUBE		02
12	0531060545	OIL DUCT 275 6350		02
13	0521057915	HOSE KIT HYDRAULIC SYSTEM 6 WHEEL		01
13A	0501082269	HOSE 1/2 X 300 TR-TR		04
13B	0501080087	1/2" X 450 HOSE		03
13C	0501080096	1/2 X 500 TC-TC HOSE		08
13D	0501081235	1/2 X 650 TR- TC HOSE		02
13E	0501080024	1/2" X 700 TR-TR HOSE		04
13F	0501080218	1/2 X 750 HOSE		02
13G	0501080093	1/2 X 1300 HOSE TR-TC		01
13H	0501080058	HOSE 1/2 X 1400 TR-TC		01
13I	0501081834	1/2 X 1500 TR-TC HOSE		02
13J	0521057243	1/2 X 4350 TC-TM HOSE BLACK / RED		01
13JA	0501082259	HOSE 1/2 X 4350 TC-TM		01
13JB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
13JC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
13JD	0503018952	PLASTIC BOLT		06
13K	0521057244	HOSE 1/2 X 4900 TC-TM BLACK / BLUE		01
13KA	0501082260	HOSE 1/2 X 4900 TC-TM		01
13KB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
13KC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01


Item	Code	Description	See page	QT
13KD	0503018952	PLASTIC BOLT		06
14	0521057704	SLIDING SUPPORT HYDRAULIC HOSE	83	04
15	0581010091	SPRING PROTECTION PLASTIC HOSE		01
16	0581012991	SPRING PROTECTION PLASTIC HOSE		01
17	0501053834	MALE QUICK COUPLER	84	02
18	0581010090	SPRING PROTECTION PLASTIC HOSE		02
19	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		01

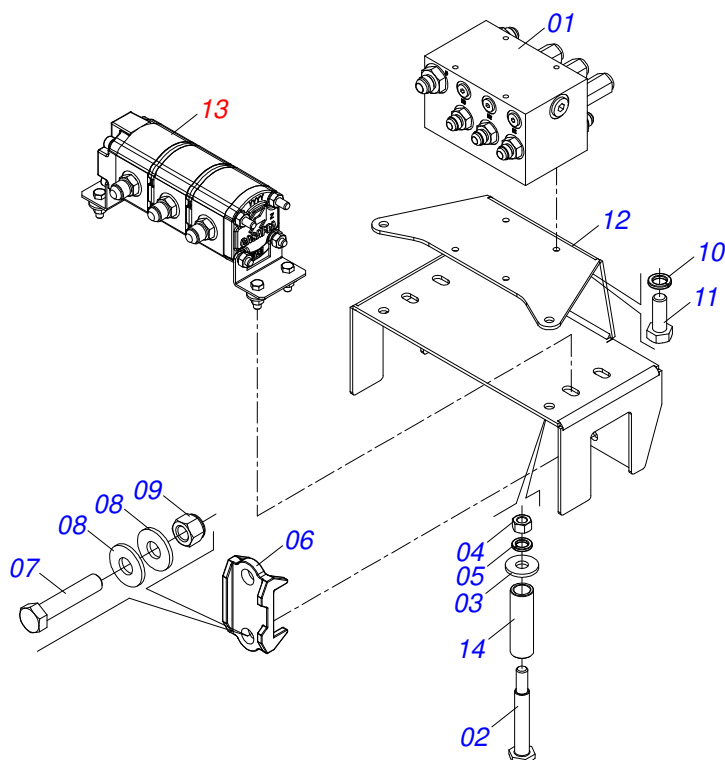


Item	Code	Description	See page	QT
01	0503062960	COMMAND BLOCK		01
02	0591013473	VACUOMETER GUIDE SCREW BOLT		02
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
04	0503010026	3/8" NUT		02
05	0503010025	3/8 SPRING WASHER		02
06	0502011170	FIXER		02
07	0503010384	1/2" X 5" BOLT		04
08	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
09	0503010589	1/2" UNC SELF ADJUSTING NUT		04
10	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
11	0503015114	BOLT		04
12	0531060808	SUPPORT FIXING VALVE TRIPLE BLOCK		01
13	0521057855	CASAPPA DIVIDER VALVE WITH FIXING NIPLES	80	01
14	0591014208	HYDRAULIC BLOCK SUPPORT SLEEVE		02

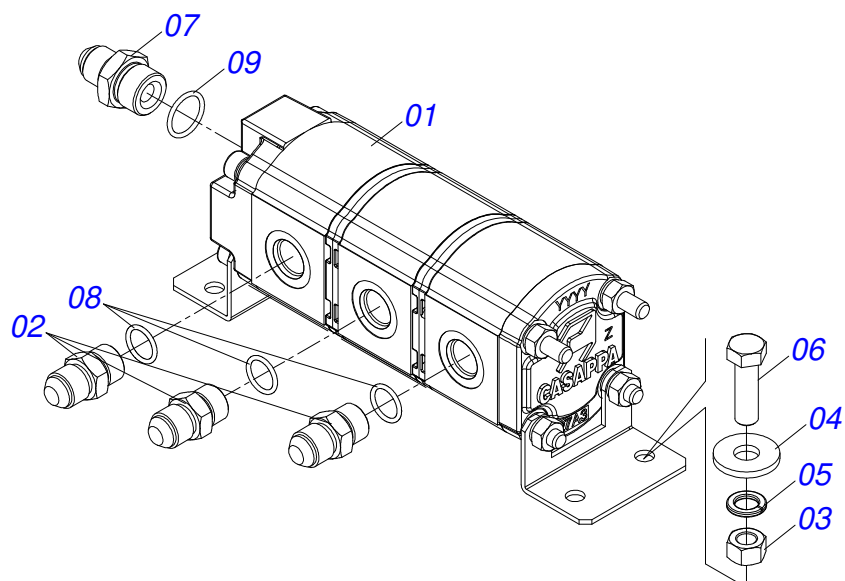


Item	Code	Description	See page	QT
01	0503019548	FLOW DIVIDER VALVE		01
02	0501010590	NIPPLE		03
03	0503010026	3/8" NUT		04
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
05	0503010025	3/8 SPRING WASHER		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0511018014	7/8"NF X 1.1/16 UN NIPPLE		01
08	0503010045	O'RING		03
09	0503011109	2-119 N 3006-9B O'RING		01

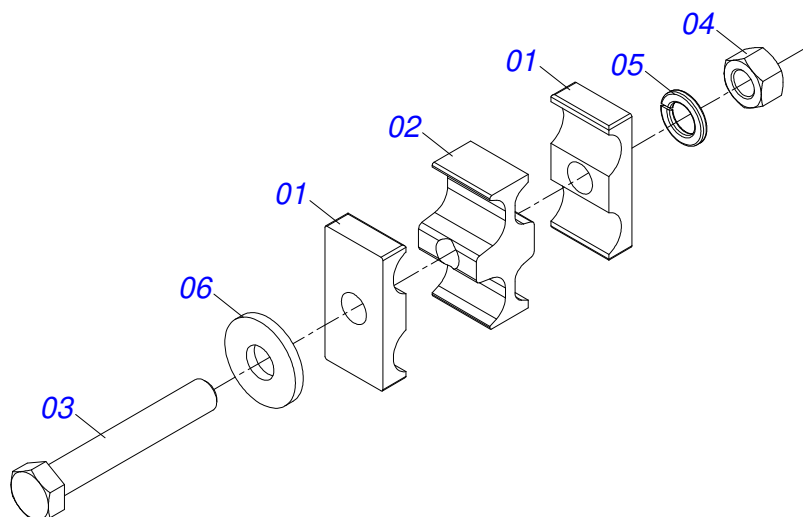


Item	Code	Description	See page	QT
01	0502010477	HOSE CLAMP		02
02	0502012702	BODY SUPPORT CLAMP		01
03	0503010718	3/8" X 3-1/2" BOLT		01
04	0503010026	3/8" NUT		01
05	0503010025	3/8 SPRING WASHER		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01

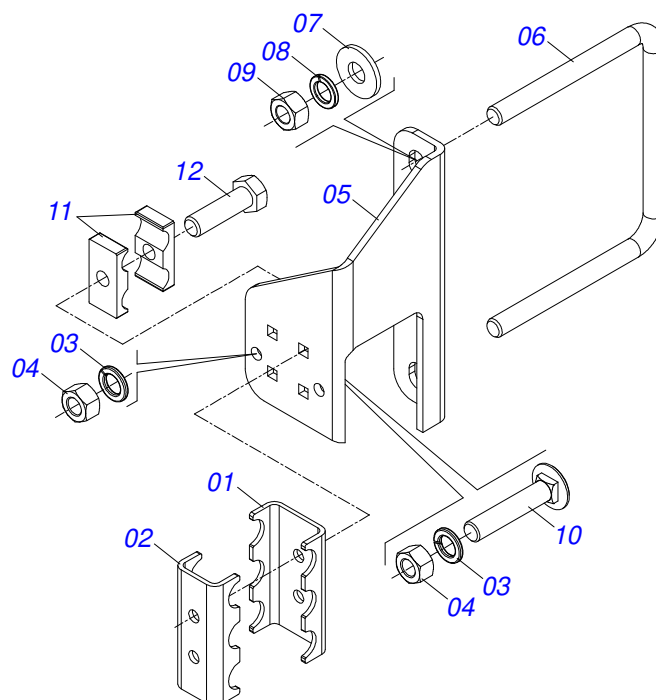


Item	Code	Description	See page	QT
01	0591012302	LOWER CLAMP FIXING OIL CONDUCTOR		01
02	0591012301	TOP CLAMP FIXING OIL CONDUCTOR		01
03	0503010025	3/8 SPRING WASHER		03
04	0503010026	3/8" NUT		03
05	0561017277	OIL CONDUCTOR FIXER PLATE		01
06	0521010718	5/8" U BOLT		01
07	0501012140	FLAT WASHER		02
08	0503010027	5/8 SPRING WASHER		02
09	0503010013	5/8 NUT		02
10	0501011755	3/8" X 3" BOLT		02
11	0502010477	HOSE CLAMP		02
12	0501010096	3/8" X 2" BOLT		01

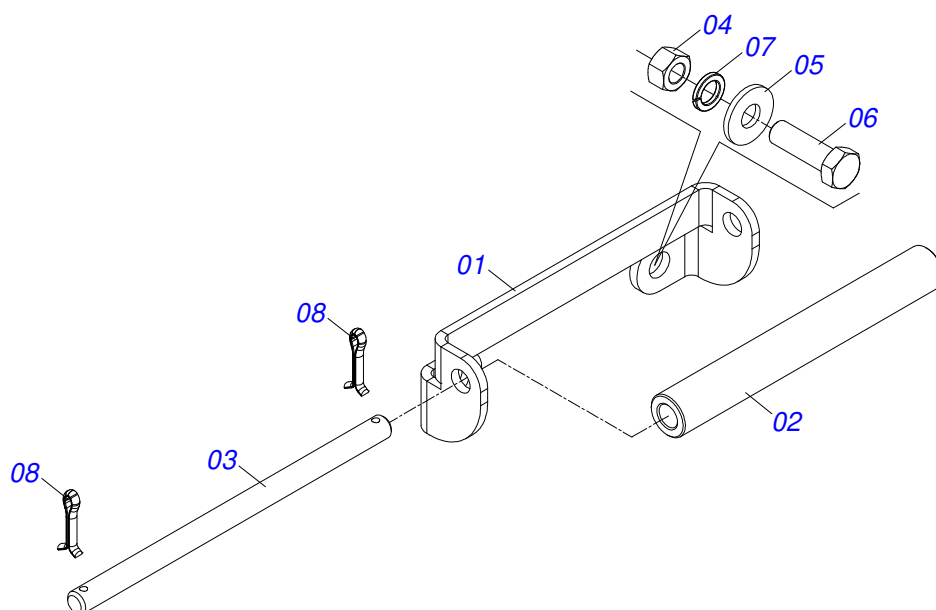

Item	Code	Description	See page	QT
01	0591012962	SLIDING SUPPORT BODY HYDRAULIC HOSE		01
02	0591012961	16,30 X 30 X 230 SLEEVE		01
03	0591012963	HOSE SLEEVE FIXING AXLE		01
04	0503010013	5/8 NUT		02
05	0501012140	FLAT WASHER		02
06	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		02
07	0503010027	5/8 SPRING WASHER		02
08	0503010071	3/16" X 1" COTTERPIN		02

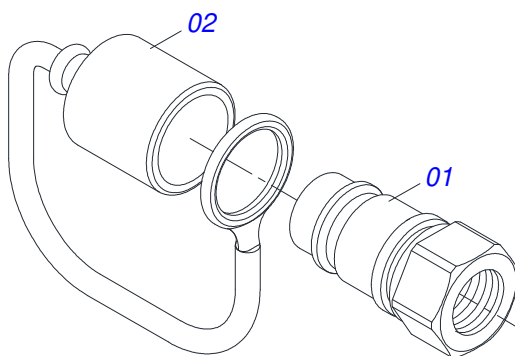


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

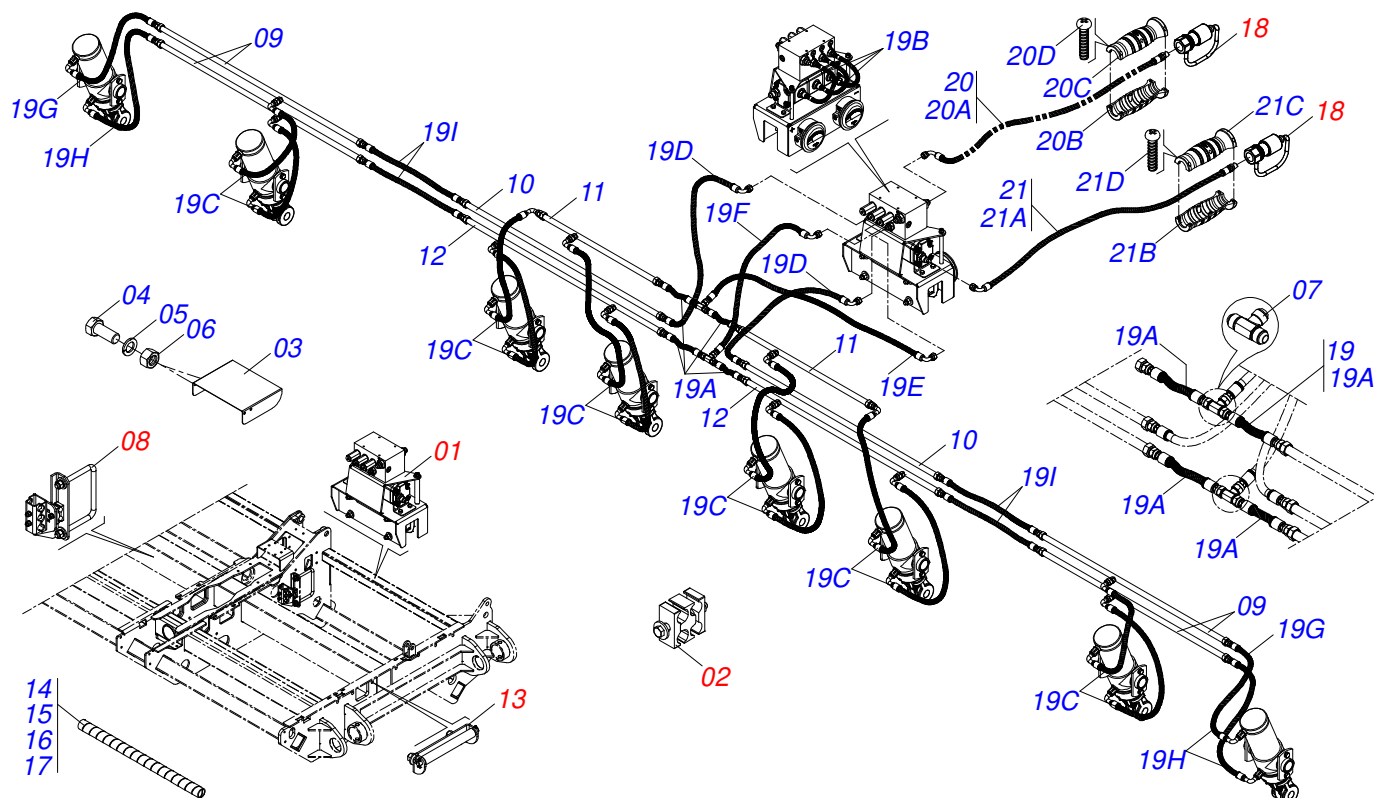


Item	Code	Description	See page	QT
01	0521057854	SUPPORT VALVE BLOCK VACUOMETER ASSY 7655/8450	86	01
02	0521057886	HOSE CLAMP ASSEMBLY	81	02
03	0581010324	HOSE PROTECTOR		01
04	0503010358	5/16" X 5/8" BOLT		04
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
06	0503010337	5/16" NUT		04
07	0503013493	T CONNECTION MALE		02
08	0521057259	OIL CONDUCTOR FIXATION	82	08
09	0531060539	OIL CONDUCTOR 1465 WHEEL CYLINDER 8450		04
10	0531060516	OIL DUCT 1200 7655		02
11	0531060515	OIL DUCT 3 OUTPUT 655 MM 7655		02
12	0531060545	OIL DUCT 275 6350		02
13	0521057704	SLIDING SUPPORT HYDRAULIC HOSE	83	04
14	0581010091	SPRING PROTECTION PLASTIC HOSE		01
15	0581012991	SPRING PROTECTION PLASTIC HOSE		01
16	0581010090	SPRING PROTECTION PLASTIC HOSE		02
17	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		01
18	0501053834	MALE QUICK COUPLER	84	02
19	0521057304	HOSE KIT HYDRAULIC SYSTEM		01
19A	0501082269	HOSE 1/2 X 300 TR-TR		04
19B	0501080087	1/2" X 450 HOSE		03
19C	0501080096	1/2 X 500 TC-TC HOSE		12
19D	0501081834	1/2 X 1500 TR-TC HOSE		02
19E	0501080058	HOSE 1/2 X 1400 TR-TC		01
19F	0501080093	1/2 X 1300 HOSE TR-TC		01
19G	0501080218	1/2 X 750 HOSE		02
19H	0501081235	1/2 X 650 TR- TC HOSE		02
19I	0501080024	1/2" X 700 TR-TR HOSE		04
20	0521057244	HOSE 1/2 X 4900 TC-TM BLACK / BLUE		01
20A	0501082260	HOSE 1/2 X 4900 TC-TM		01
20B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01

Item	Code	Description	See page	QT
20C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
20D	0503018952	PLASTIC BOLT		06
21	0521057243	1/2 X 4350 TC-TM HOSE BLACK / RED		01
21A	0501082259	HOSE 1/2 X 4350 TC-TM		01
21B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
21C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
21D	0503018952	PLASTIC BOLT		06

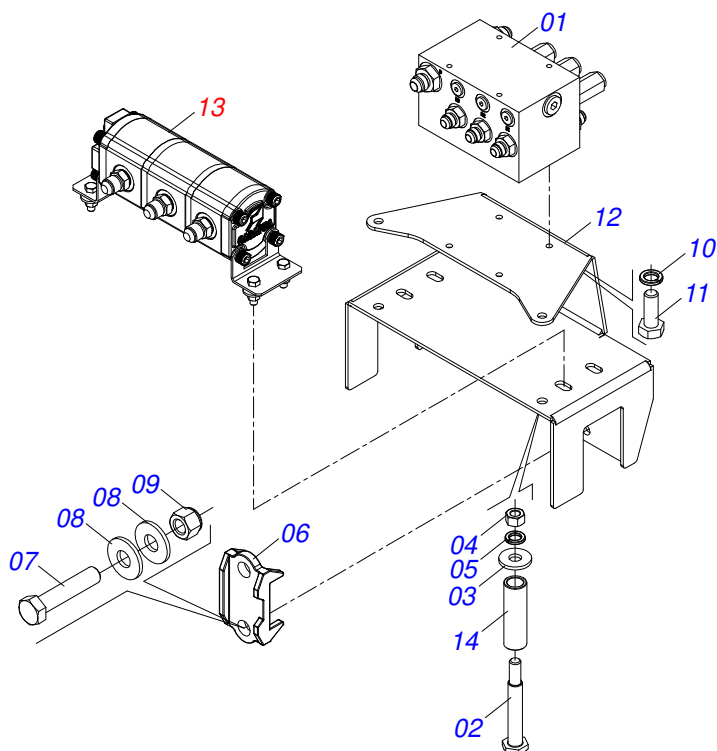


Item	Code	Description	See page	QT
01	0503062960	COMMAND BLOCK	01	
02	0591013473	VACUOMETER GUIDE SCREW BOLT	02	
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER	02	
04	0503010026	3/8" NUT	02	
05	0503010025	3/8 SPRING WASHER	02	
06	0502011170	FIXER	02	
07	0503010384	1/2" X 5" BOLT	04	
08	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN	08	
09	0503010589	1/2" UNC SELF ADJUSTING NUT	04	
10	0503010179	LOCK WASHER 5/16 ZN 1K01528	04	
11	0503015114	BOLT	04	
12	0531060808	SUPPORT FIXING VALVE TRIPLE BLOCK	01	
13	0521057291	TRIPLE VALVE	01	
14	0591014208	HYDRAULIC BLOCK SUPPORT SLEEVE	02	

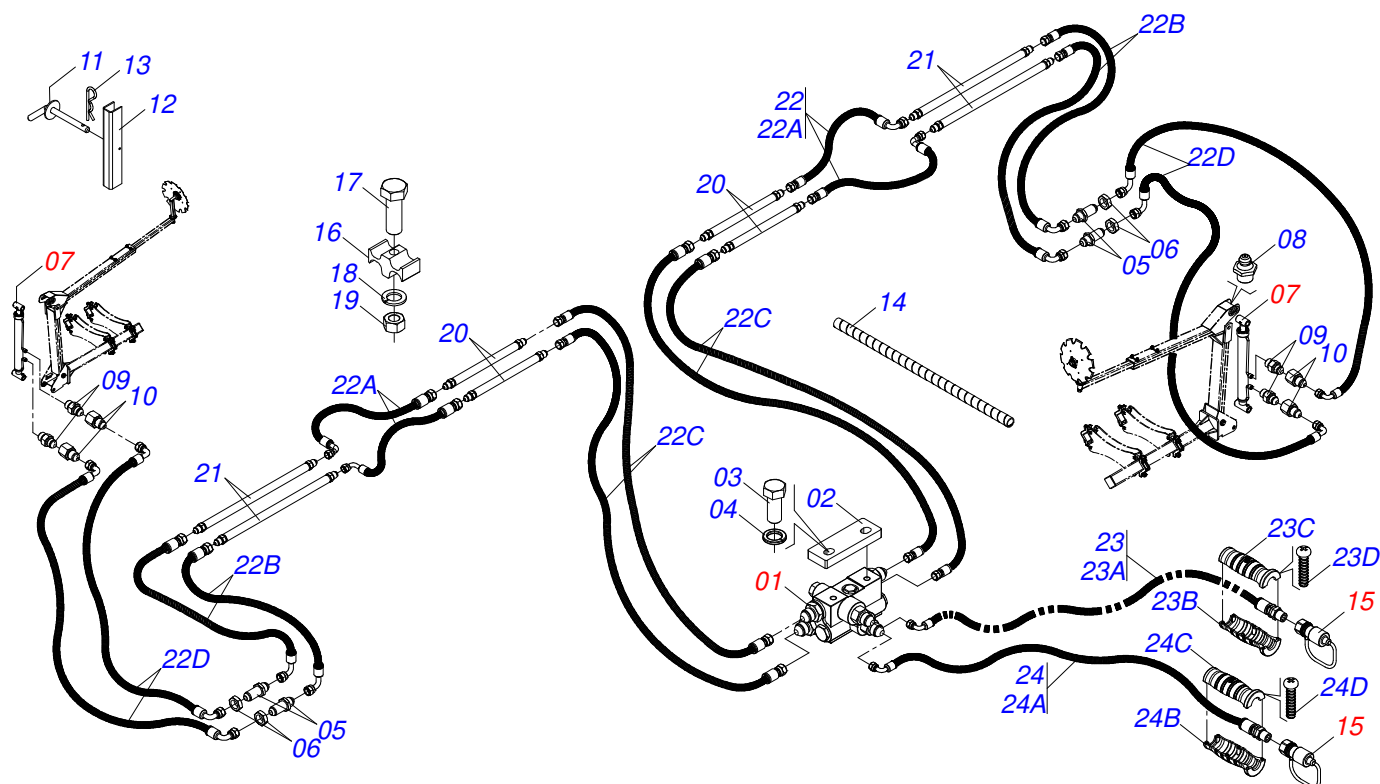


Item	Code	Description	See page	7350	7655	8450
00	0521057307	HYDRAULIC ASSY MH2T 7350		001	000	000
00.	0521057309	HYDRAULIC ASSY MH2T 7655		000	001	000
00..	0521057310	HYDRAULIC ASSY MH2T 8450		000	000	001
01	0501054649	HBM SEQUENTIAL VALVE	88	001	001	001
02	0591012041	ROW MARKER VALVE SUPPORT		001	001	001
03	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		002	002	002
04	0503010025	3/8 SPRING WASHER		002	002	002
05	0541012165	3/4" NIPPLE		004	004	004
06	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		004	004	004
07	0511058431	HYDRAULIC CYLINDER	89	002	002	002
08	0503010002	1800 GREASE FITTING		004	004	004
09	0501010617	3/4" NIPPLE		004	004	004
10	0551016274	HYDRAULIC CYLINDER ADAPTER		004	004	004
11	0501068994	8,30 X 78 LOCK PIN		002	002	002
12	0511015573	2.07" X 1.6" TRANSPORT LOCK		002	002	002
13	0503030168	HITCH PIN CLIP		002	002	002
14	0581011173	SPRING PROTECTION PLASTIC HOSE		002	002	002
15	0501053834	MALE QUICK COUPLER	84	002	002	002
16	0502012702	BODY SUPPORT CLAMP		002	002	002
17	0503010677	7/16" X 2-3/4" BOLT		002	002	002
18	0503010180	7/16" SPRING WASHER		002	002	002
19	0503010244	7/16" NUT		002	002	002
20	0521066484	OIL CONDUCTOR		004	000	000
20.	0521065258	HYDRAULIC MARKER 9/450 OIL CONDUCTOR		000	004	000
20..	0521067396	CONDUCTOR OIL 1250 HYDRAULIC MARKER 8450		000	000	004
21	0521067453	OIL CONDUCTOR		004	000	000
21.	0521067396	CONDUCTOR OIL 1250 HYDRAULIC MARKER 8450		000	004	000
21..	0521067397	OIL CONDUCTOR 2000 MH 8450		000	000	004
22	0521057308	KIT HOSE MH 7350		001	001	001
22A	0501080714	3/8 X 1600 TR-TC HOSE		004	004	004
22B	0501080386	3/8 X 1050 TR-TC HOSE		004	004	004


Item	Code	Description	See page	7350	7655	8450
22C	0501080460	3/8" X 23" TR-TR HOSE		004	004	004
22D	0501080675	3/8 X 1000 TC-TC 180G HOSE		004	004	004
23	0521052307	HOSE 3/8 X 4450 TC-TM PURPLE / BLUE		001	001	001
23A	0501082121	3/8 X 4450 TR-TM HOSE		001	001	001
23B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		001	001	001
23C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		001	001	001
23D	0503018952	PLASTIC BOLT		006	006	006
24	0521052306	HOSE 3/8 X 4450 TC-TM PURPLE / RED		001	001	001
24A	0501082121	3/8 X 4450 TR-TM HOSE		001	001	001
24B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		001	001	001
24C	0503034495	HYDRAULIC HOSE GRIP (RED)		001	001	001
24D	0503018952	PLASTIC BOLT		006	006	006

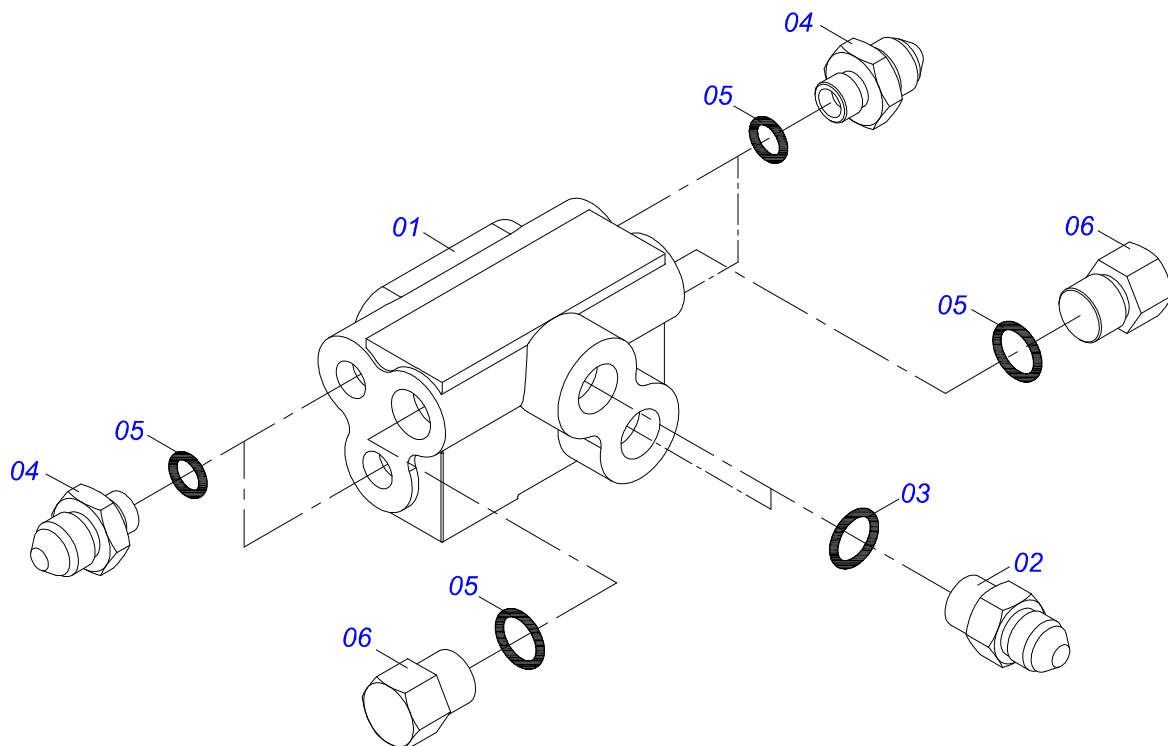


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

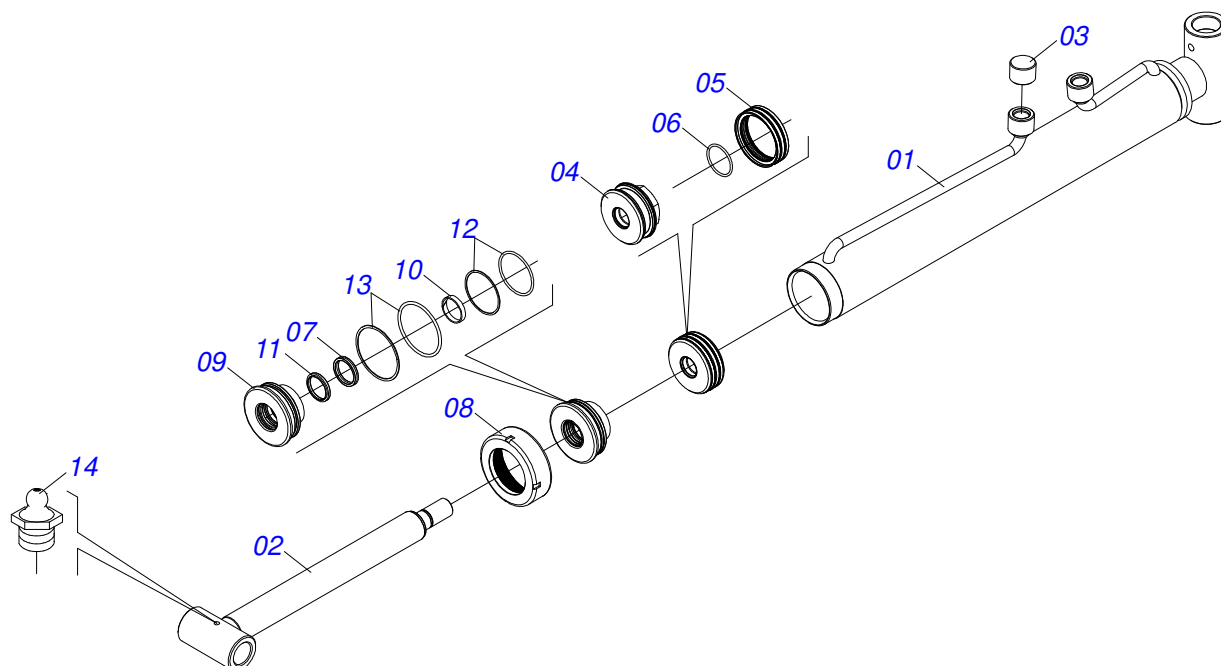


Item	Code	Description	See page	QT
01	0501067700	2.5" X 25" CYLINDER CASE		01
02	0521066632	EXTENDER		01
03	0503030384	CON PLUG N-001		02
04	0502012837	PISTON		01
05	0503018005	RING		01
06	0503011109	2-119 N 3006-9B O'RING		01
07	0503010163	D-1500 SCRAPER RING		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503018004	RING		01
11	0503018003	GASKET		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0503010002	1800 GREASE FITTING		02
15	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

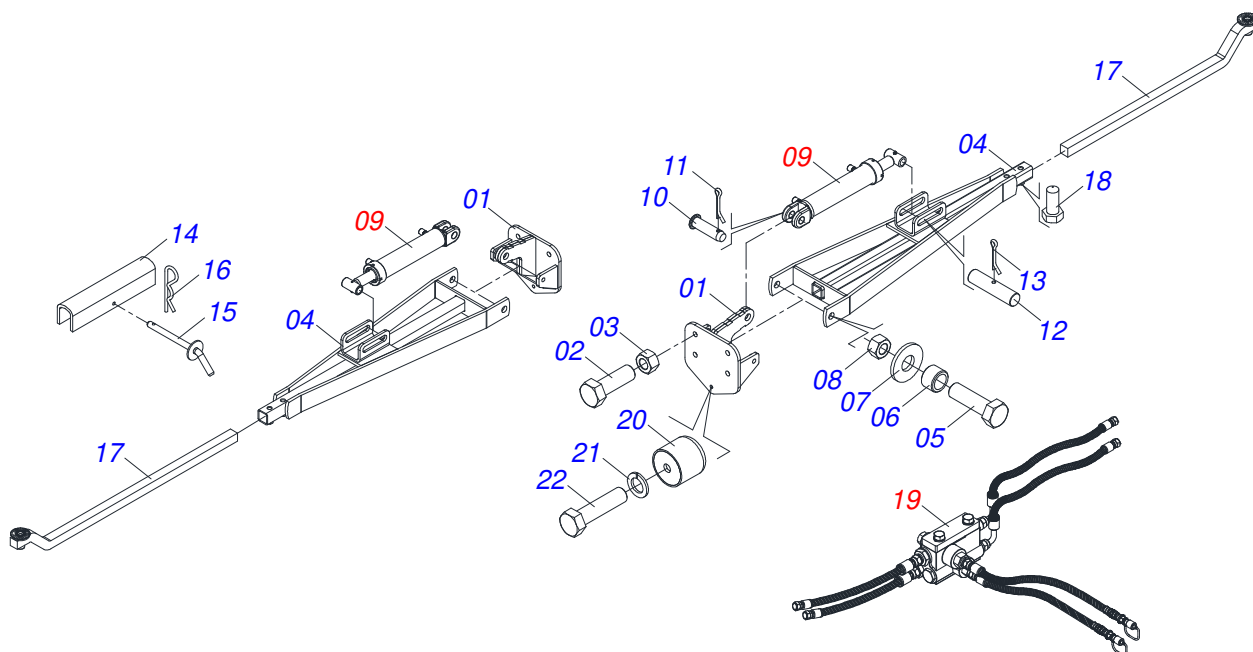


Item	Code	Description	See page	QT
01	0511065449	ROW MARKER ARM SUPPORT		02
02	0501010098	3/4" UNC BOLT		08
03	0503011255	3/4" LOCK NUT		08
04	0511061811	ROW MARKER ARM		02
05	0503011067	5/8" X 2-1/2" BOLT		04
06	0521010479	SLEEVE ARTICULATION		04
07	0501012140	FLAT WASHER		04
08	0503012795	5/8" HEX SELF ADJUSTING NUT		04
09	0511058449	HYDRAULIC CYLINDER	91	02
10	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
11	0503010571	1/4" X 1.1/2 COTTERPIN		02
12	0511015779	1" X 4.2" AXLE		02
13	0503010523	1/4" X 2" SPLIT PIN		02
14	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
15	0501068994	8,30 X 78 LOCK PIN		02
16	0503030168	HITCH PIN CLIP		02
17	0501066949	1235 TURNBUCKLE		02
18	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
19	0909098940	ROW MARKER HYDRAULIC CIRCUIT	92	01
20	0503011070	BEATER		02
21	0503010019	1/2" SPRING WASHER		02
22	0503011082	C1/2" X 1.3/4" SCREW		02

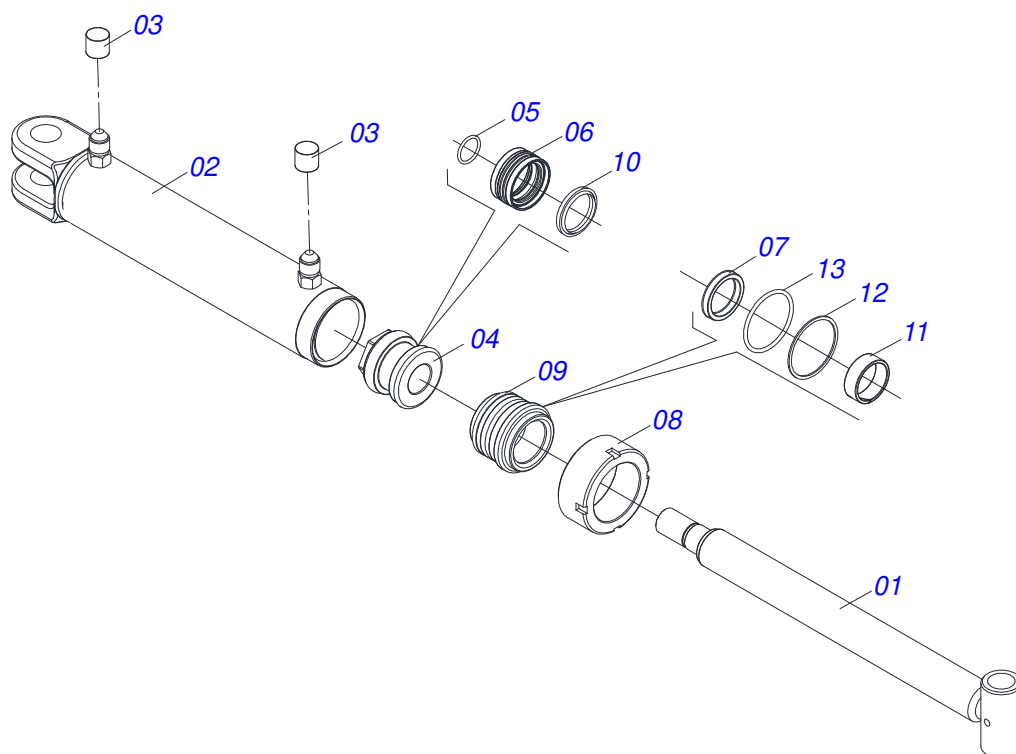


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

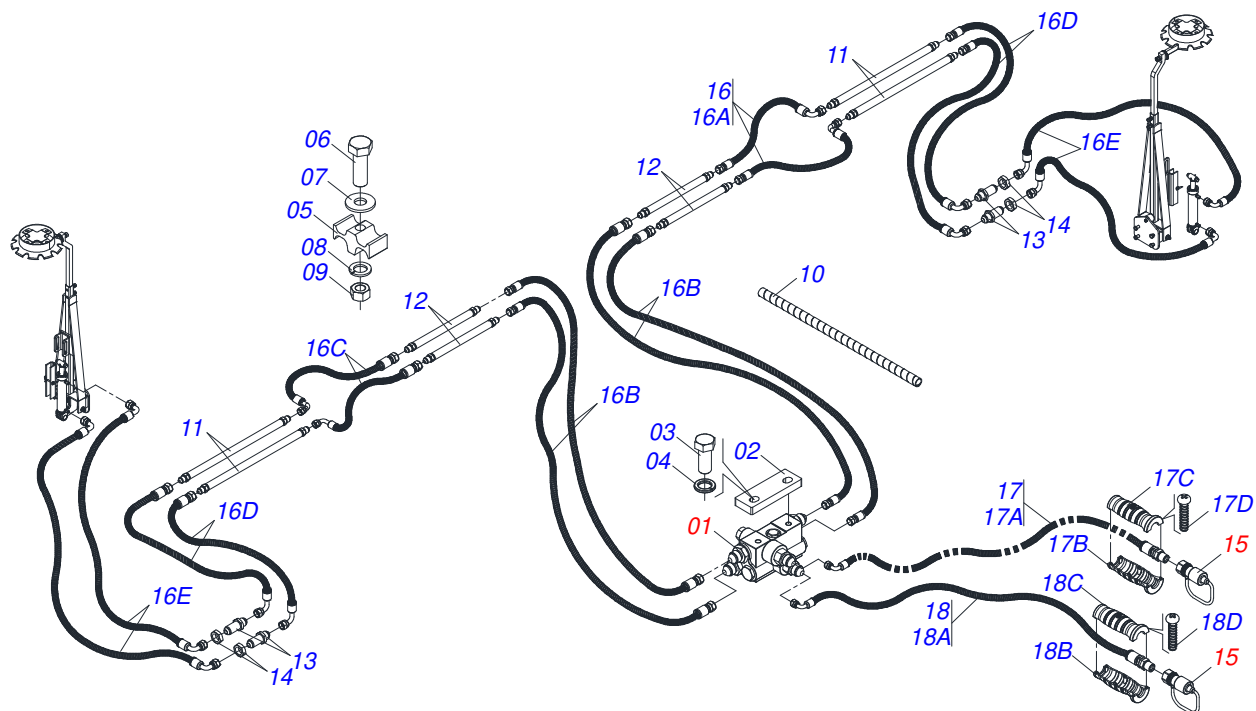


Item	Code	Description	See page	QT
01	0501054649	HBM SEQUENTIAL VALVE	88	01
02	0591012041	ROW MARKER VALVE SUPPORT		01
03	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
04	0503010025	3/8 SPRING WASHER		02
05	0502012702	BODY SUPPORT CLAMP		02
06	0503010677	7/16" X 2-3/4" BOLT		02
07	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
08	0503010180	7/16" SPRING WASHER		02
09	0503010244	7/16" NUT		02
10	0581010090	SPRING PROTECTION PLASTIC HOSE		02
11	0521066484	OIL CONDUCTOR		04
12	0521066306	OIL CONDUCTOR		04
13	0541012165	3/4" NIPPLE		04
14	0511018387	3/4" X 0,3 ADJUSTMENT VALVE NUT		04
15	0501053834	MALE QUICK COUPLER	84	02
16	0521057305	HOSE KIT		01
16A	0501080635	3/8" X 19" TR-TR HOSE		02
16B	0501080460	3/8" X 23" TR-TR HOSE		04
16C	0501080413	3/8" X 27" TR-TC HOSE		02
16D	0501080386	3/8 X 1050 TR-TC HOSE		04
16E	0501080301	3/8 X 1300 TC-TC HOSE		04
17	0521052307	HOSE 3/8 X 4450 TC-TM PURPLE / BLUE		01
17A	0501082121	3/8 X 4450 TR-TM HOSE		01
17B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
17C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
17D	0503018952	PLASTIC BOLT		06
18	0521052306	HOSE 3/8 X 4450 TC-TM PURPLE / RED		01
18A	0501082121	3/8 X 4450 TR-TM HOSE		01
18B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
18C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
18D	0503018952	PLASTIC BOLT		06

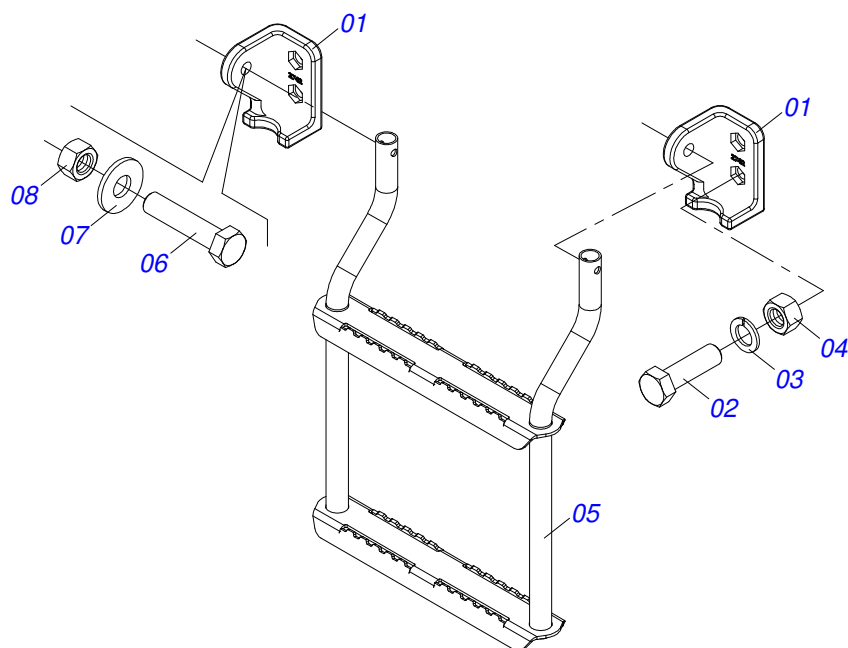


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER		04
02	0503010237	3/8" X 1" BOLT		08
03	0503010025	3/8 SPRING WASHER		08
04	0503010026	3/8" NUT		08
05	0511069636	LADDER		02
06	0503011179	3/8" X 2-1/4" BOLT		04
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
08	0503013357	3/8 SELF-ADJUSTING NUT		04

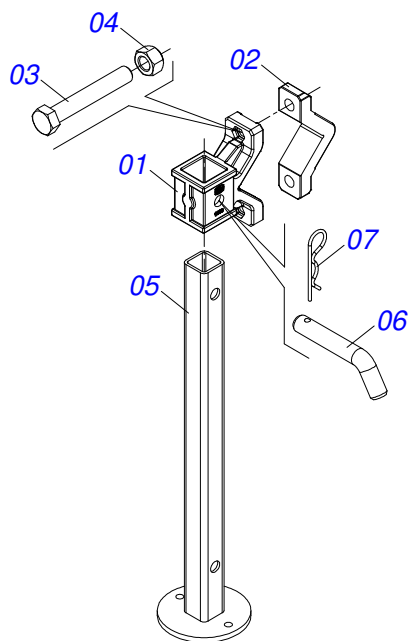

Item	Code	Description	See page	QT
01	0502011530	SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0501069951	PLOUGH SUPPORT		04
06	0501011075	PIN		02
07	0503030012	HITCH PIN CLIP		02

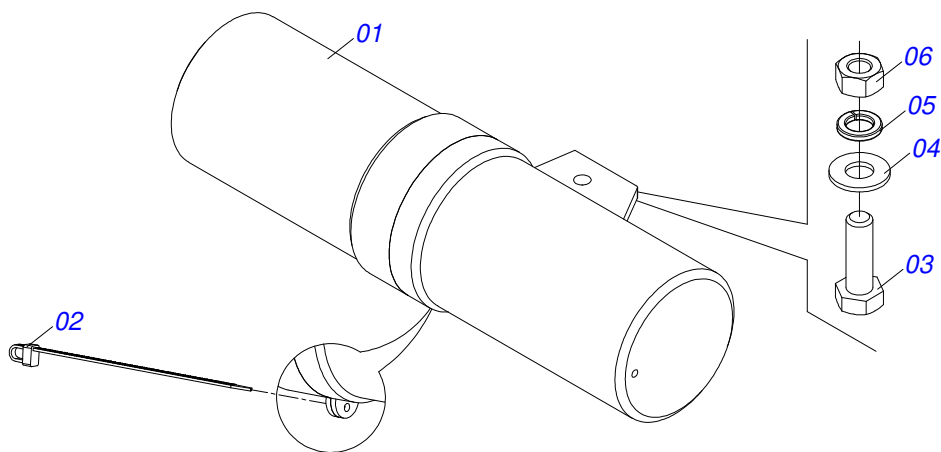


Item	Code	Description	See page	QT
01	0503060100	INSTRUCTIONS MANUAL CANISTER		01
02	0503010267	NYLON CLAMP		01
03	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
04	0501010694	FLAT WASHER		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
06	0503010337	5/16" NUT		01

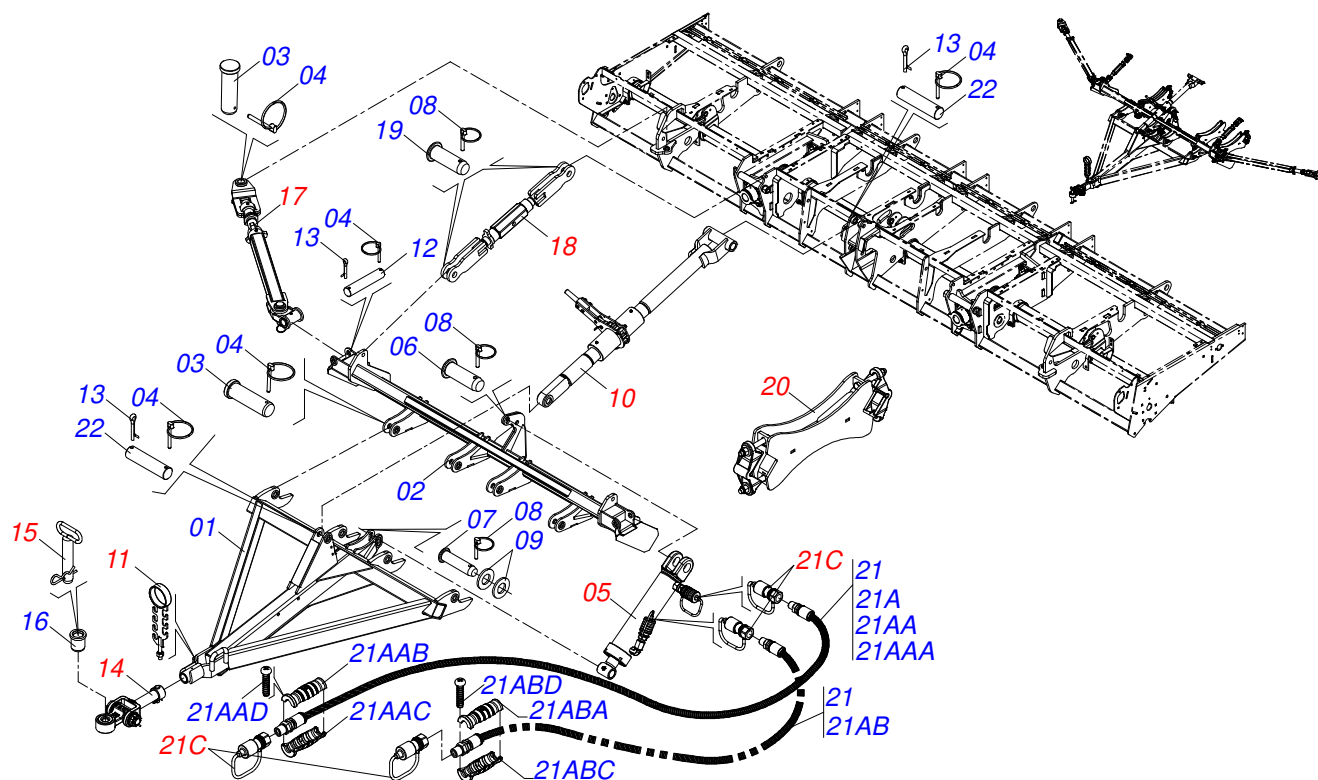


Item	Code	Description	See page	5750	6350	6850	7655
01	0521066289	5750/6350/6850 FRONT DRAWBAR		01	00	01	00
01.	0521067406	DRAWBAR ASSY 7655		00	00	00	01
02	0531060570	INTERMEDIATE HEADER 5750/6850		01	00	01	00
02.	0531060568	INTERMEDIATE DRAWBAR 7655/8450		00	00	00	01
02..	0531060569	INTERMEDIATE DRAWBAR 6350/7350		01	00	00	00
03	0571019949	JUNCTION SHAFT		06	06	06	06
04	0503030119	LOCK PIN		10	10	10	10
05	0521045756	HYDRAULIC CYLINDER	97	01	01	01	01
06	0521010779	31.75 X 95 COUPLING SHAFT		01	01	01	01
07	0521010581	0.9" X 4.9" COUPLING SHAFT		01	01	01	01
08	0503030085	LOCK PIN		06	06	06	06
09	0531016049	FLAT WASHER		02	02	02	02
10	0521050573	EXTENSOR 3RD POINT	98	01	01	01	01
11	0511057817	SUPPORT HOSE	99	01	01	01	01
12	0571019951	JUNCTION SHAFT		02	02	02	02
13	0503010523	1/4" X 2" SPLIT PIN		04	04	04	04
14	0511055096	TRACTOR HITCH	100	01	01	01	01
15	0511053179	TRACTOR COUPLING SHAFT	101	01	01	01	01
16	0501212237	HITCH SLEEVE ARTICULATED 85 X 35 MM		01	01	01	01
17	0521050133	TURNBUCKLE SIDE 755/480	102	02	02	02	02
17.	0521050196	TURNBUCKLE SIDE 1125/480	103	00	00	02	00
18	0521050574	EXTENSOR	104	02	02	02	02
19	0521010571	COUPLING SHAFT		04	04	04	04
20	0521057452	ASSY INTERMEDIATE DRAWBAR FIXATION SUPPORT	105	04	04	04	04
21	0521050693	ASSEMBLY SET HOSE CYLINDER FRONT HEAD		01	01	01	01
21A	0521050692	HOSE KIT CYLINDER HEAD FRONT		01	01	01	01
21AA	0521052310	HOSE 1/2 X 4500 TM-TM GREEN / RED		01	01	01	01
21AAA	0501081929	HOSE 1/2 X 4500 TM-TM		01	01	01	01
21AAB	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01	01	01	01
21AAC	0503034495	HYDRAULIC HOSE GRIP (RED)		01	01	01	01
21AAD	0503018952	PLASTIC BOLT		06	06	06	06


Item	Code	Description	See page	5750	6350	6850	7655
21AB	0521052309	HOSE 1/2 X 4500 TM-TM GREEN / BLUE		01	01	01	01
21ABA	0501081929	HOSE 1/2 X 4500 TM-TM		01	01	01	01
21ABB	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01	01	01	01
21ABC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01	01	01	01
21ABD	0503018952	PLASTIC BOLT		06	06	06	06
21C	0501053834	MALE QUICK COUPLER	84	04	04	04	04
22	0571019950	COUPLING SHAFT		02	02	02	02

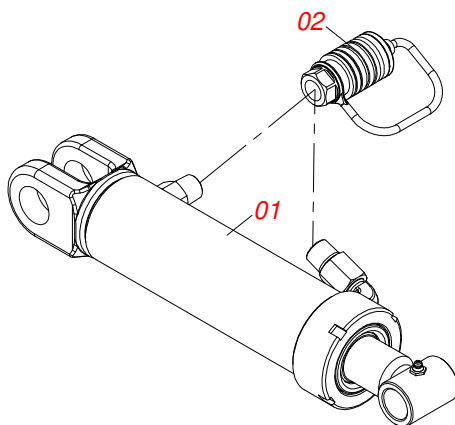


Item	Code	Description	See page	QT
01	0511057653	HYDRAULIC CYLINDER		01
02	0501053835	FEMALE QUICK COUPLER		02

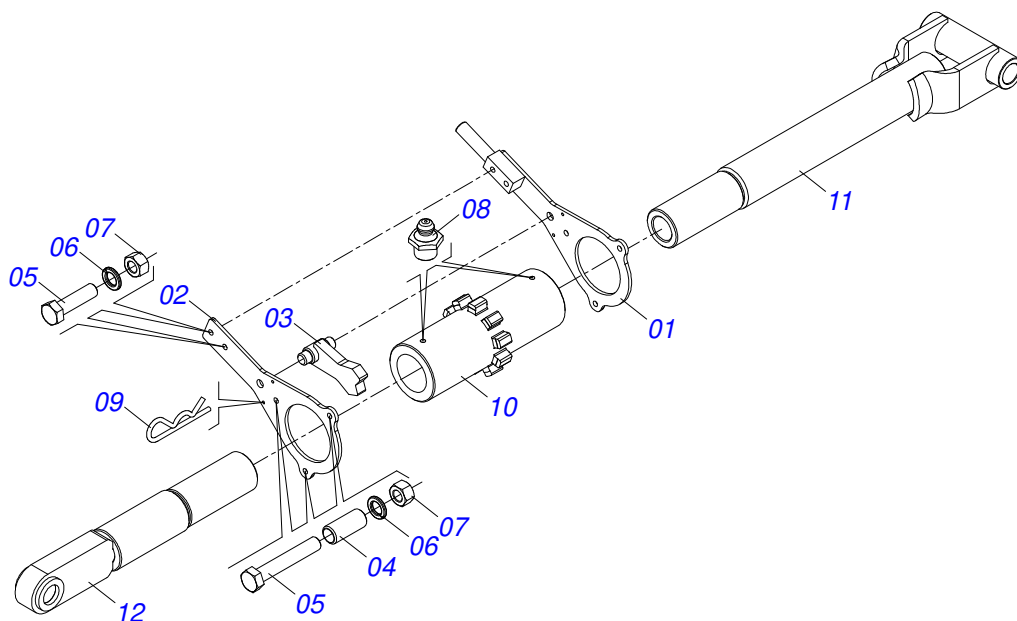


Item	Code	Description	See page	QT
01	0511061880	SIDE RIGHT RATCHET		01
02	0531010264	SIDE RATCHET		01
03	0511061881	RATCHET FOLLOWER		01
04	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
05	0503011179	3/8" X 2-1/4" BOLT		05
06	0503011443	3/8" SPRING WASHER		05
07	0503010026	3/8" NUT		05
08	0503010002	1800 GREASE FITTING		02
09	0503030012	HITCH PIN CLIP		01
10	0502012783	STABILIZER BODY GREATER		01
11	0521067623	FUSE 713 EXTENSION RIGHT 3RD POINT		01
12	0521067622	FUSE 470 EXTENSION LEFT 3RD POINT		01

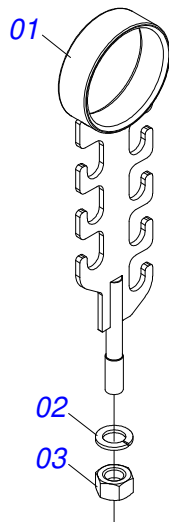


Item	Code	Description	See page	QT
01	0521066302	HOSE HOLDER		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

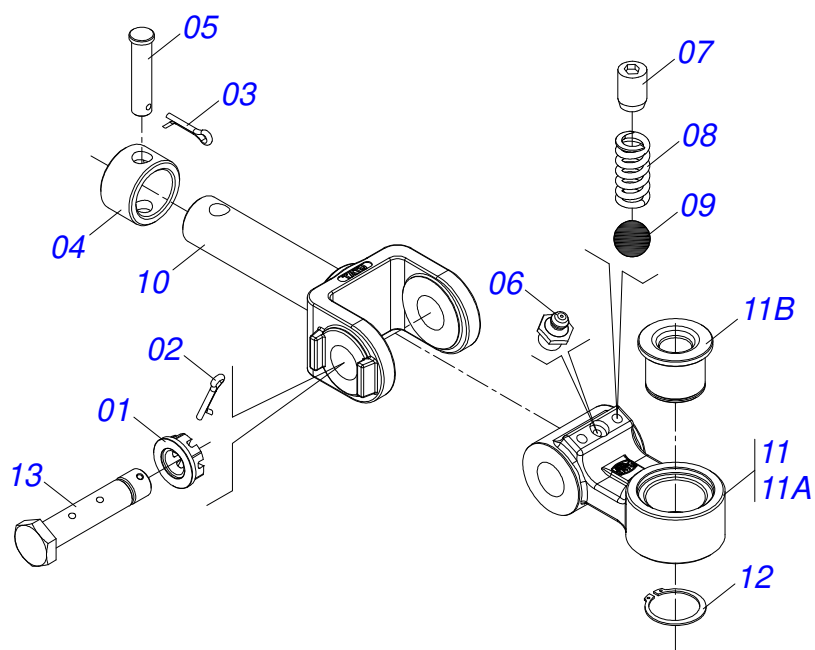


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	LEFT COMPRESSION SPRING		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

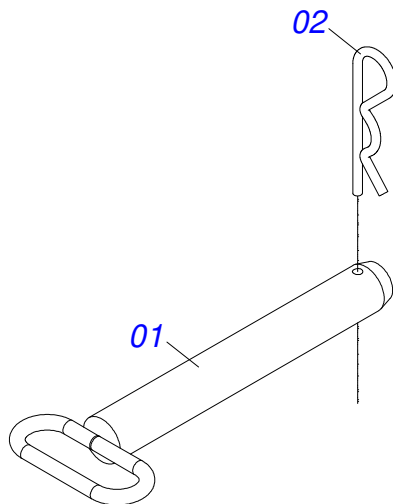


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

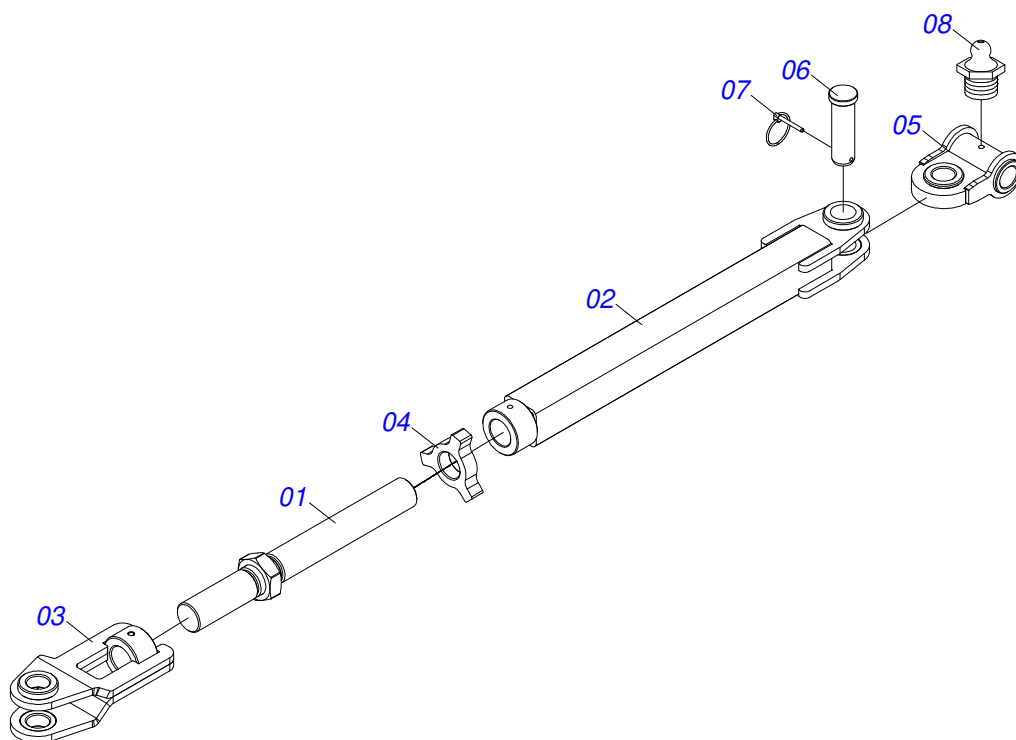


Item	Code	Description	See page	QT
01	0521065193	TURNBUCKLE AXLE		01
02	0521067392	FIXED BRACKET		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0521067393	EXTERNAL SIDE EAR		01
06	0571019949	JUNCTION SHAFT		01
07	0503030119	LOCK PIN		01
08	0503010002	1800 GREASE FITTING		03

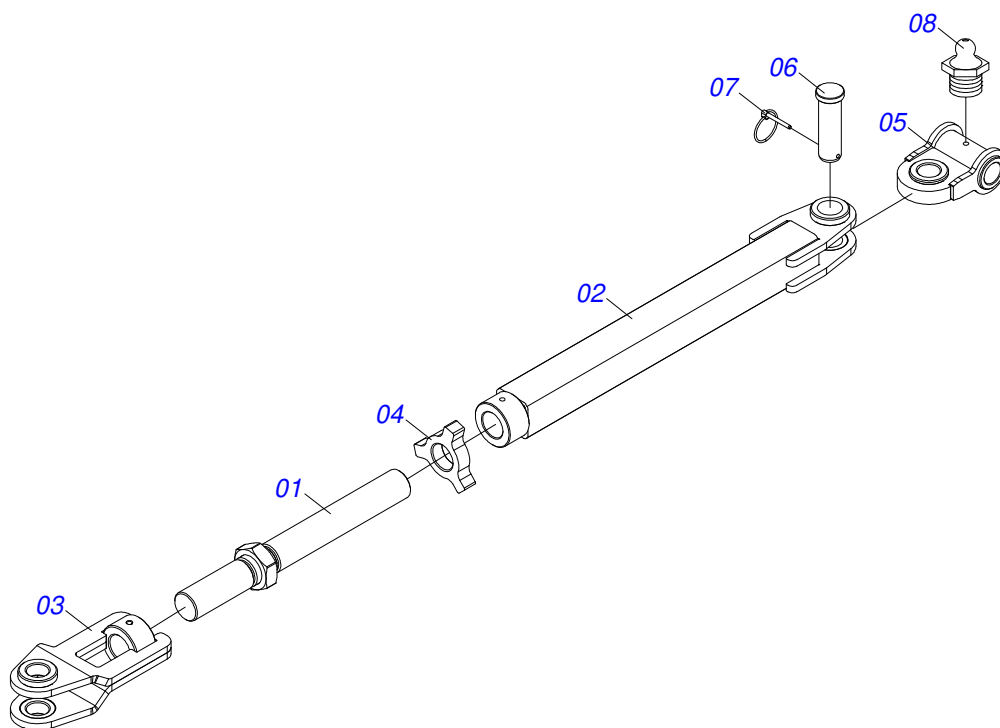


Item	Code	Description	See page	QT
01	0521065193	TURNBUCKLE AXLE		01
02	0521067451	FIXED TIP 1125 SIDE EXTENSION 7350		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0521067393	EXTERNAL SIDE EAR		01
06	0571019949	JUNCTION SHAFT		01
07	0503030119	LOCK PIN		01
08	0503010002	1800 GREASE FITTING		03

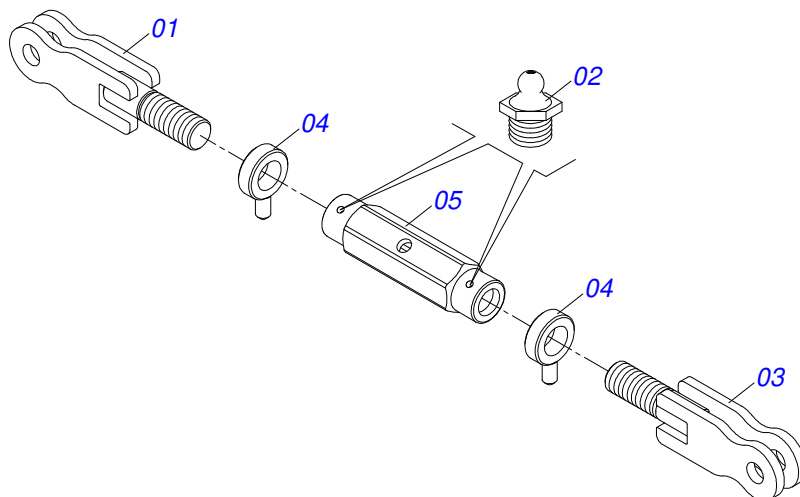


Item	Code	Description	See page	QT
01	0521066300	RIGHT TURNBUCKLE		01
02	0503010002	1800 GREASE FITTING		02
03	0521066301	LEFT TURNBUCKLE		01
04	0541018672	COUNTERNUT		01
05	0502011195	ADJUSTMENT NUT BODY		01

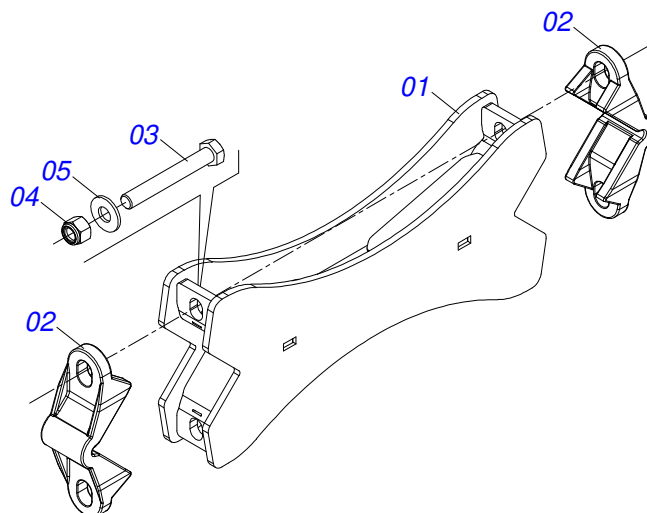


Item	Code	Description	See page	QT
01	0521067716	FIXER TUBE		01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
03	0503016485	BOLT 3/4		04
04	0503010152	3/4" SELF LOCKING NUT		04
05	0501010322	FLAT WASHER		04

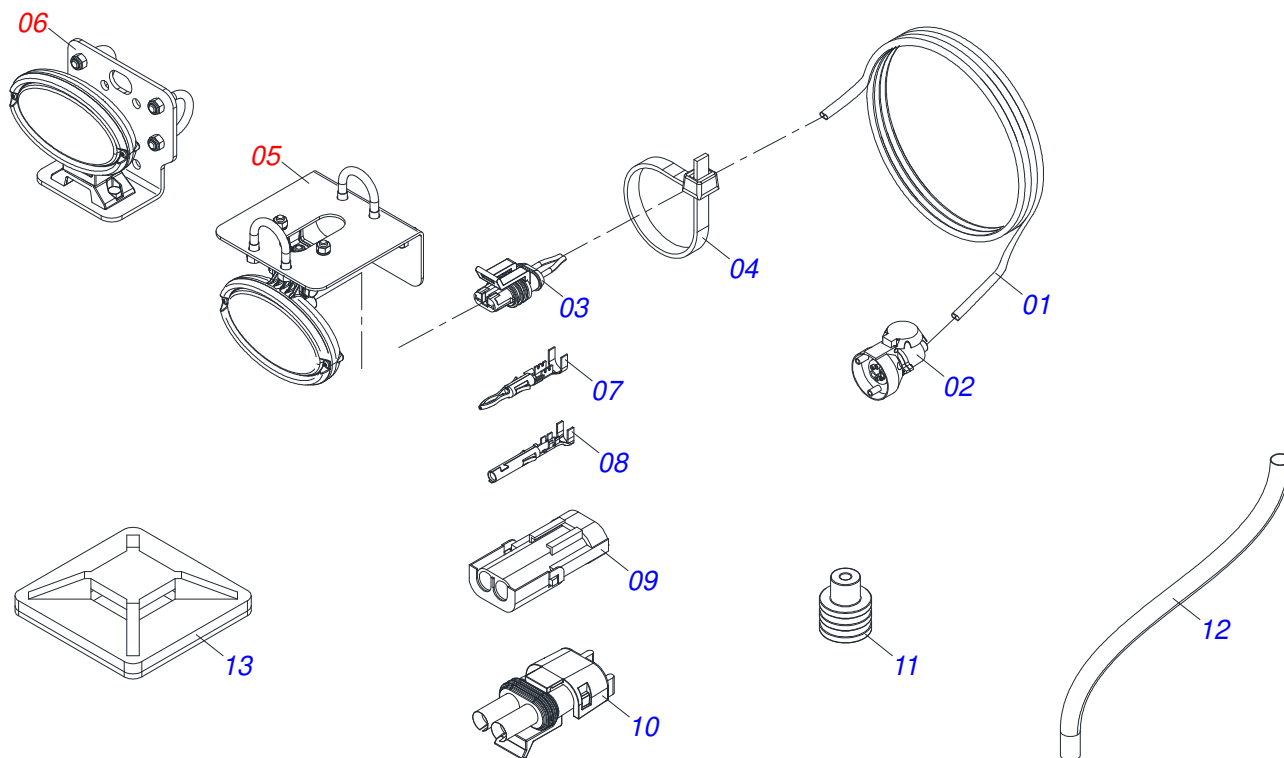


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		17
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		03
04	0503012903	T-80M CRAMP NYLON		50
05	0521053672	LIGHTHOUSE ASSY	107	02
06	0521052792	MOUNTED REAR LIGHT	108	01
07	0503015907	MALE TERMINAL		02
08	0503015908	FEMALE TERMINAL		02
09	0503015906	TWO-WAY MALE CONNECTOR		01
10	0503015905	TWO-WAY FEMALE MALE CONNECTOR		01
11	0503015911	CABLE SEAL		04
12	3505151602	TUBE		01
13	0503017702	FIXER		03

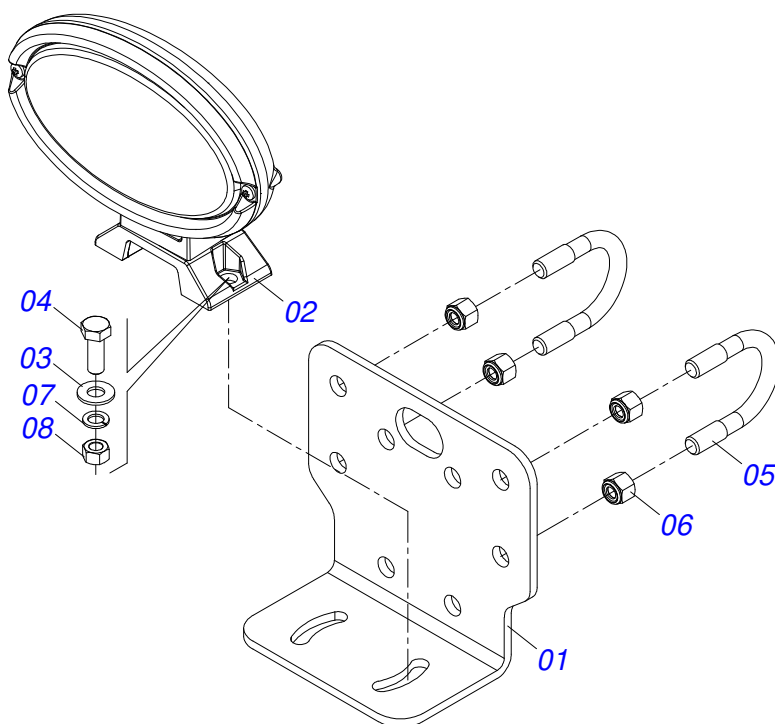


Item	Code	Description	See page	QT
01	0581015856	REDLIGHT SUPPORT		01
02	0503018738	HEADLIGHT		01
03	0501010694	FLAT WASHER		02
04	0503010358	5/16" X 5/8" BOLT		02
05	0551019884	45 X 50 X 3/8 FASTENER		02
06	0503013357	3/8 SELF-ADJUSTING NUT		04
07	0503010337	5/16" NUT		02
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		02

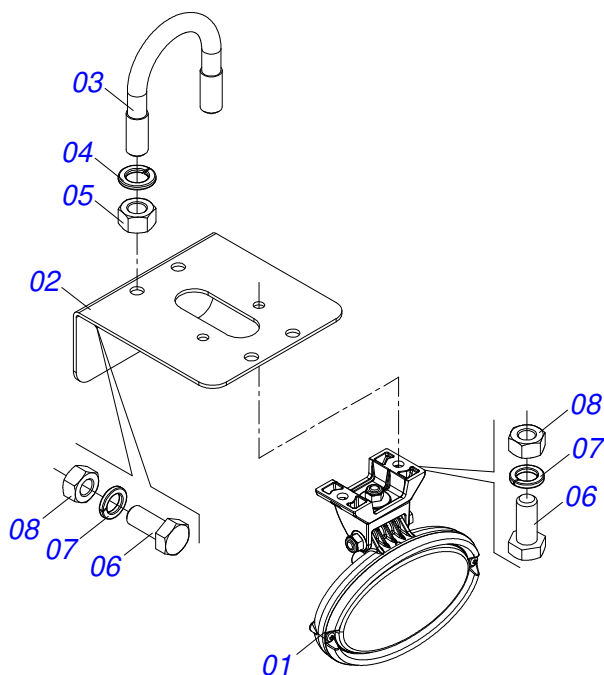


Item	Code	Description	See page	QT
01	0503018738	HEADLIGHT		01
02	0581016999	REAR LIGHT SUPPORT		01
03	0551019884	45 X 50 X 3/8 FASTENER		02
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04

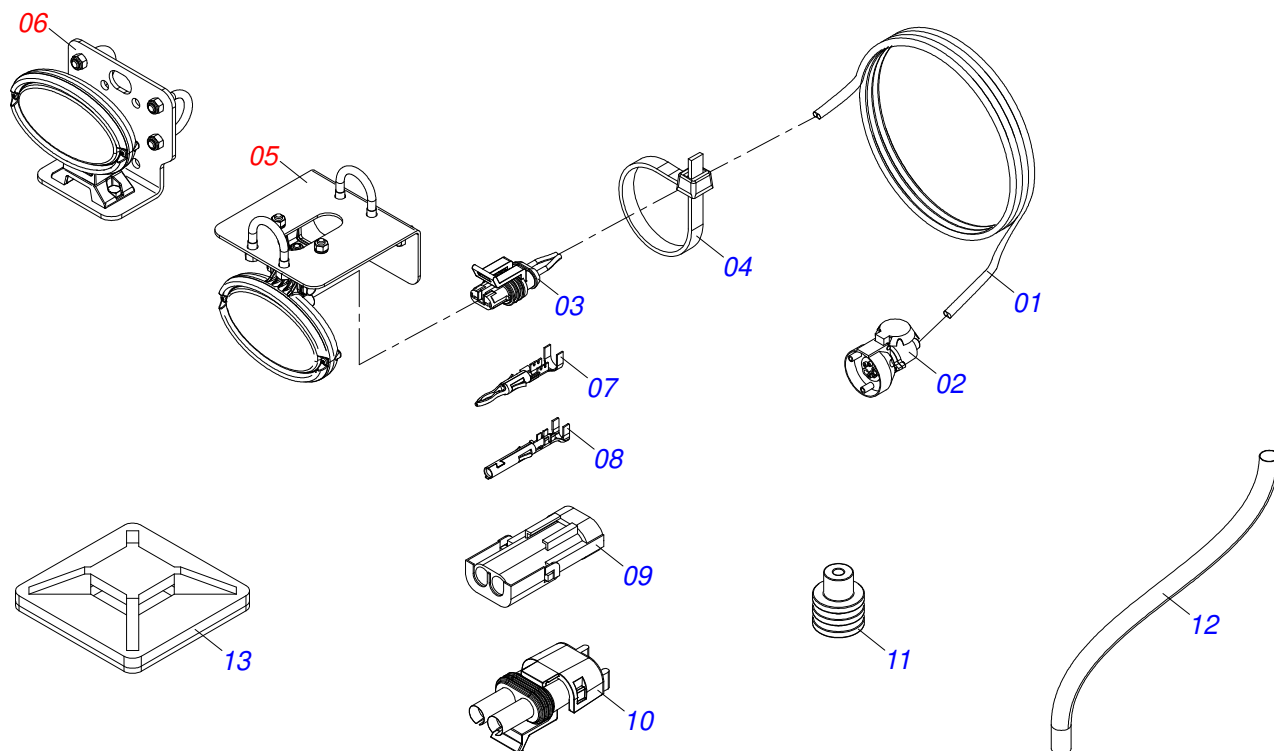


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		18
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		03
04	0503012903	T-80M CRAMP NYLON		50
05	0521053672	LIGHTHOUSE ASSY	107	02
06	0521052792	MOUNTED REAR LIGHT	108	01
07	0503015907	MALE TERMINAL		02
08	0503015908	FEMALE TERMINAL		02
09	0503015906	TWO-WAY MALE CONNECTOR		01
10	0503015905	TWO-WAY FEMALE MALE CONNECTOR		01
11	0503015911	CABLE SEAL		04
12	3505151602	TUBE		01
13	0503017702	FIXER		03

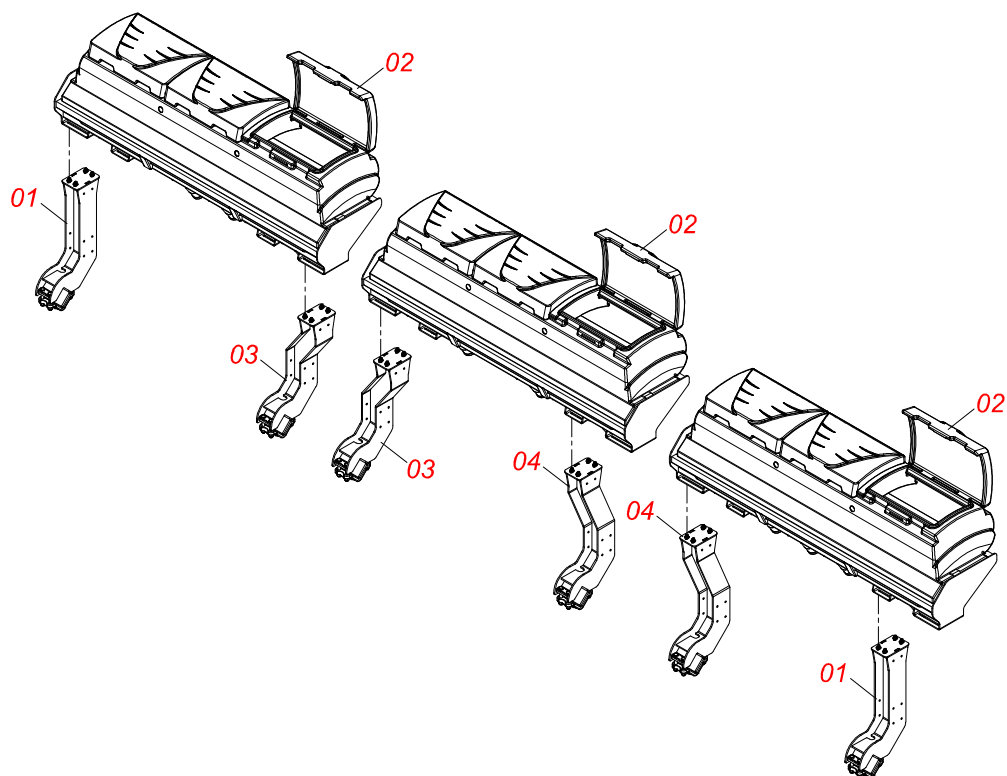


Item	Code	Description	See page	QT
01	0521051730	ASSY FIXING SUPPORT	111	02
02	0531058096	SEMI ASSEMBLED CSU ASSEMBLY C3 X 175 3 BOXES 6 MOUTHS 15C	112	01
03	0521057149	ASSY RIGHT FIXING SUPPORT	115	02
04	0521057151	FIXING SUPPORT LEFT ASSY	116	02

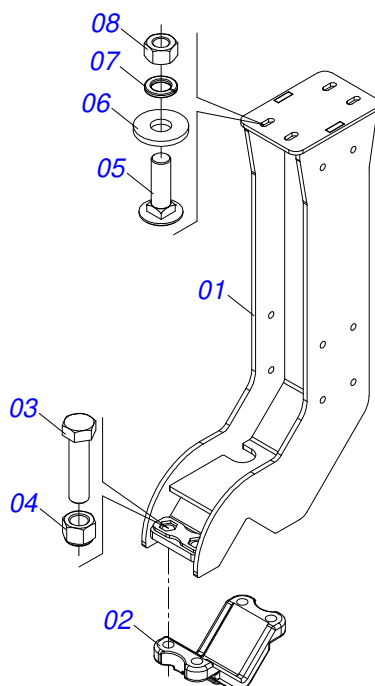


Item	Code	Description	See page	QT
01	0531060573	FIXING SUPPORT CSU		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503010811	5/8" UNF SELF ADJUSTING NUT		04
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
07	0503010025	3/8 SPRING WASHER		04
08	0503010026	3/8" NUT		04

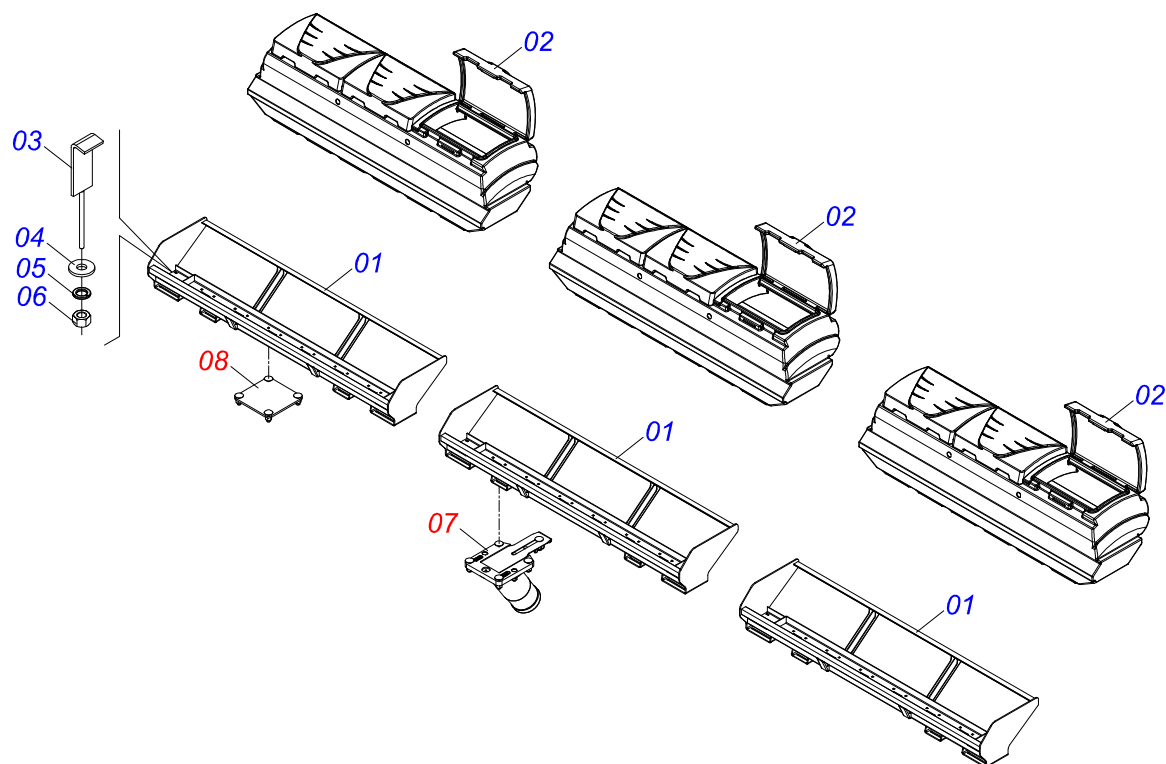


Item	Code	Description	See page	QT
01	0521064813	6 NOZZLES SINGLE SEED HOPPER SUPPORT		03
02	0503061899	6 NOZZLES FRONT FERTILIZER HOPPER		03
03	0521063401	FIXING LOCK		06
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
05	0503010025	3/8 SPRING WASHER		06
06	0503010026	3/8" NUT		06
07	0531057950	3" X 175 SEED NOZZLE WITH FIXING	113	15
08	0531054471	CAP WITH FIXING	114	03

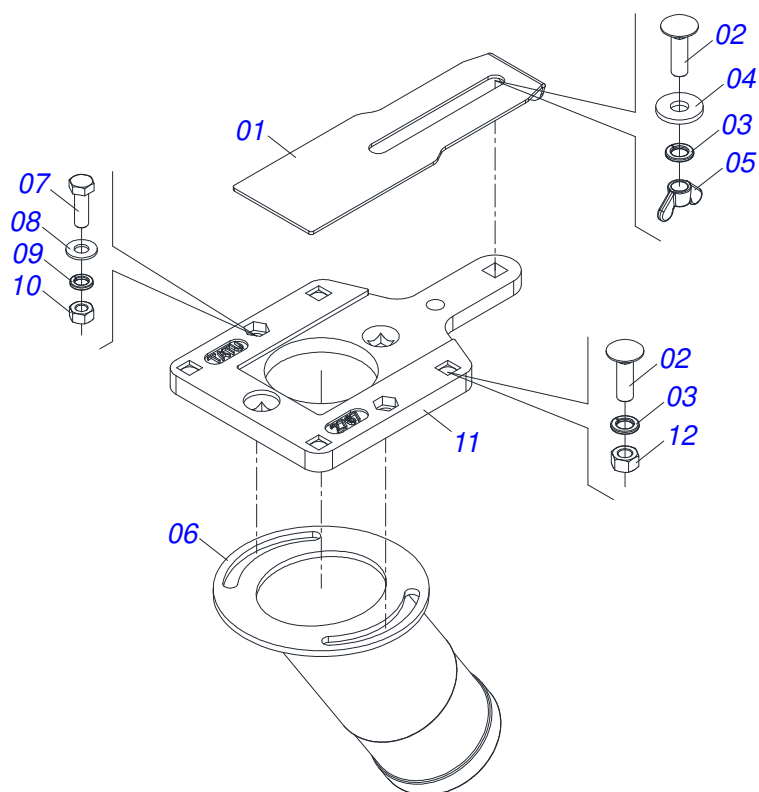


Item	Code	Description	See page	QT
01	0571015779	ARTICULATION NOZZLE SUPPORT LID	01	
02	0501010942	3/8" X 1-1/4" BOLT	05	
03	0503010025	3/8 SPRING WASHER	05	
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER	01	
05	0503010209	3/8" UNC BUTTERFLY NUT	01	
06	0521066332	CONDUCTOR WITH FLANGE	01	
07	0503010371	5/16" X 1" BOLT	02	
08	0501010694	FLAT WASHER	02	
09	0503010179	LOCK WASHER 5/16 ZN 1K01528	02	
10	0503010337	5/16" NUT	02	
11	0502012767	SEED NOZZLE FIXER SUPPORT	01	
12	0503010026	3/8" NUT	04	

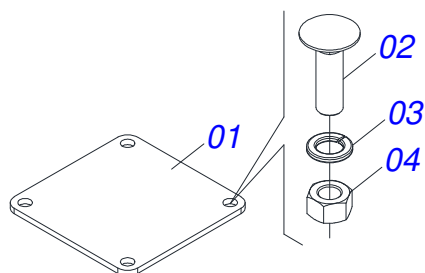


Item	Code	Description	See page	QT
01	0571015773	SUPPORT SEED		01
02	0501011643	3/8 X 1"BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04

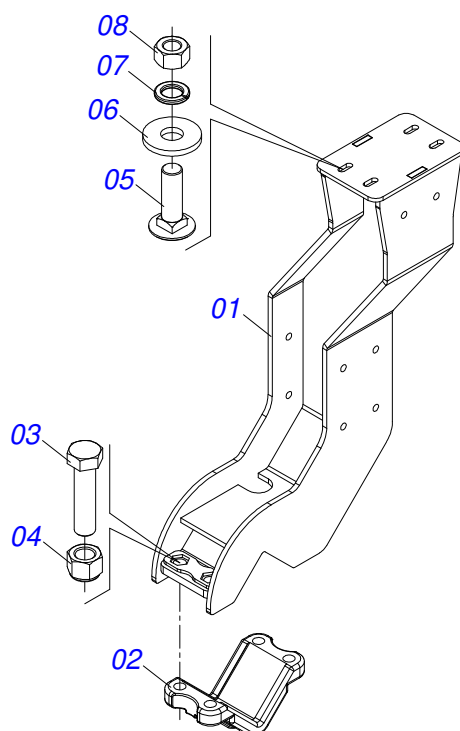


Item	Code	Description	See page	QT
01	0531060480	RIGHT FIXING SUPPORT CSU		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503010811	5/8" UNF SELF ADJUSTING NUT		04
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
07	0503010025	3/8 SPRING WASHER		04
08	0503010026	3/8" NUT		04

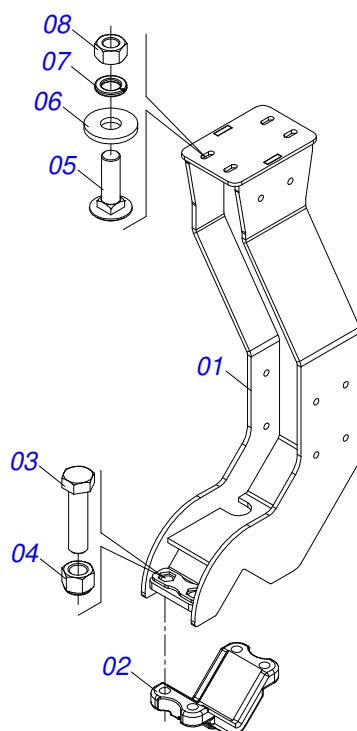


Item	Code	Description	See page	QT
01	0531060485	FIXING SUPPORT LEFT CSU		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503017857	BOLT 5/8 UNF 4		04
04	0503010811	5/8" UNF SELF ADJUSTING NUT		04
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
07	0503010025	3/8 SPRING WASHER		04
08	0503010026	3/8" NUT		04

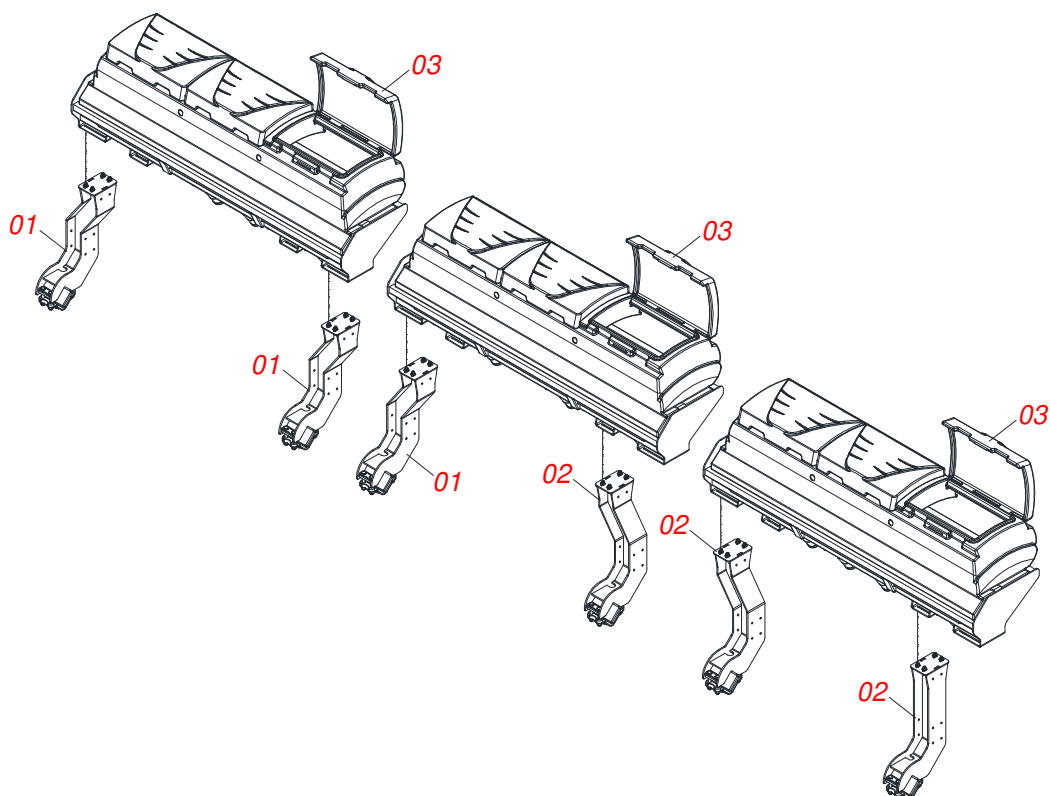


Item	Code	Description	See page	QT
01	0521057149	ASSY RIGHT FIXING SUPPORT	115	03
02	0521057151	FIXING SUPPORT LEFT ASSY	116	03
03	0531057959	SEMI ASSEMBLED CSU ASSEMBLY C3 X 175 3 BOXES 7 MOUTHS 19C	118	01

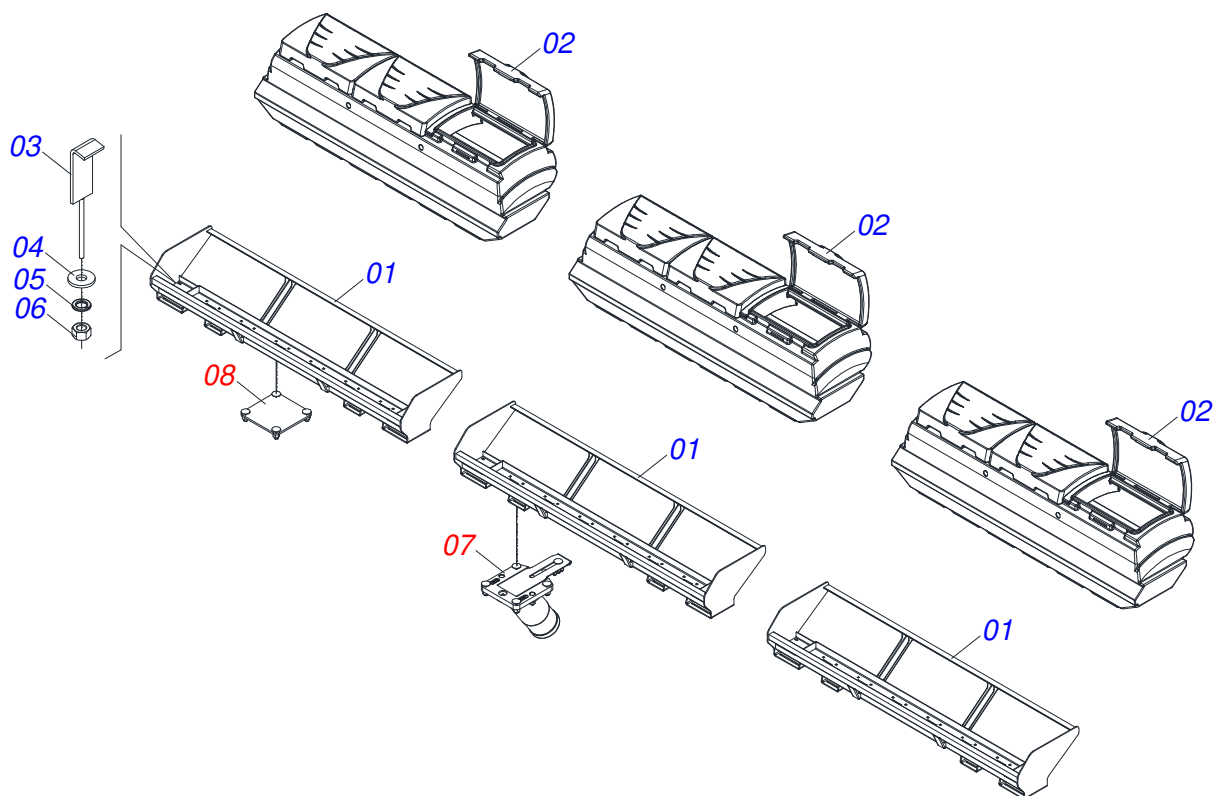


Item	Code	Description	See page	QT
01	0521064874	7 NOZZLES SINGLE SEED HOPPER SUPPORT		03
02	0503062165	7 NOZZLES FRONT FERTILIZER HOPPER		03
03	0521063401	FIXING LOCK		06
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		06
05	0503010025	3/8 SPRING WASHER		06
06	0503010026	3/8" NUT		06
07	0531057950	3" X 175 SEED NOZZLE WITH FIXING	113	19
08	0531054471	CAP WITH FIXING	114	02

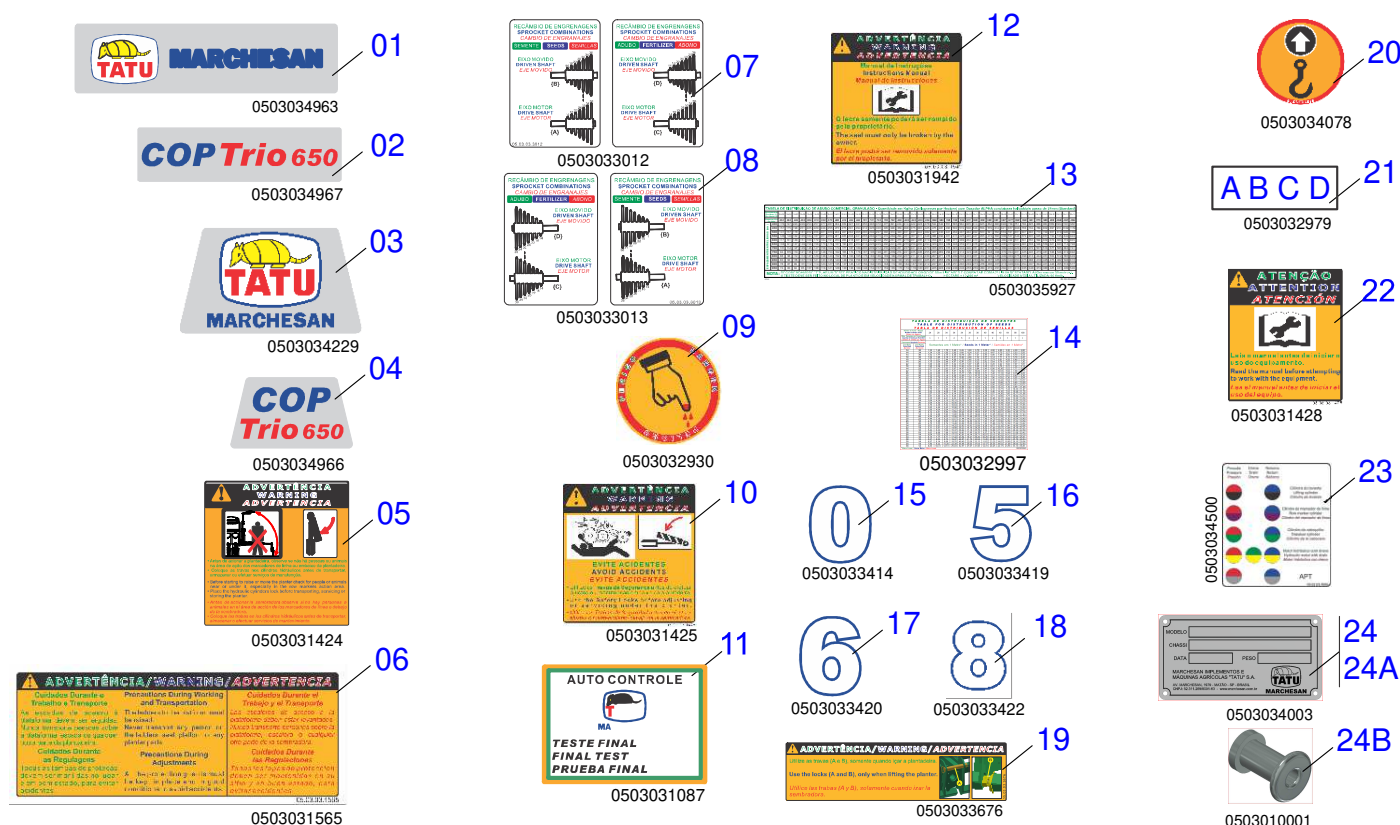


Item	Code	Description	See page	QT
01	0503034963	ADHESIVE LABEL		01
02	0503034967	ADHESIVE LABEL (190 X 720)		04
03	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 NOZZLES)		03
04	0503034966	ADHESIVE LABEL (185 X 320)		03
05	0503031424	ADHESIVE LABEL ATTENTION ROW HYDRAULIC MARKER		02
06	0503031565	ADHESIVE LABEL CARE		02
07	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
08	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
09	0503032930	ADHESIVE LABEL DANGER		04
10	0503031425	ADHESIVE LABEL ATTENTION		02
11	0503031087	ADHESIVE LABEL		01
12	0503031942	ADHESIVE LABEL		01
13	0503035927	ADHESIVE LABEL TABLE FERTILIZER P27		02
14	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
15	0503033414	ADHESIVE LABEL 0 NUMBER FOR PLANTING		02
16	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		02
17	0503033420	ADHESIVE LABEL 6 NUMBER FOR PLANTING		02
18	0503033422	ADHESIVE LABEL		02
19	0503033676	WARNING LABEL ADHESIVE SEAL LOCK AXIS		04
20	0503034078	LIFTING POINTS DECAL		03
21	0503032979	ADHESIVE LABEL LETTERS A B C D		02
22	0503031428	READ MANUAL DECAL		01
23	0503034500	ADHESIVE LABEL		01
24	0521056998	ALUMINUM IDENTIFICATION LABEL WITH RIVET		01
24A	0503034003	SERIAL NUMBER TAG 61 X 118		01
24B	0503010001	3.2 X 5.5 RIVET		04

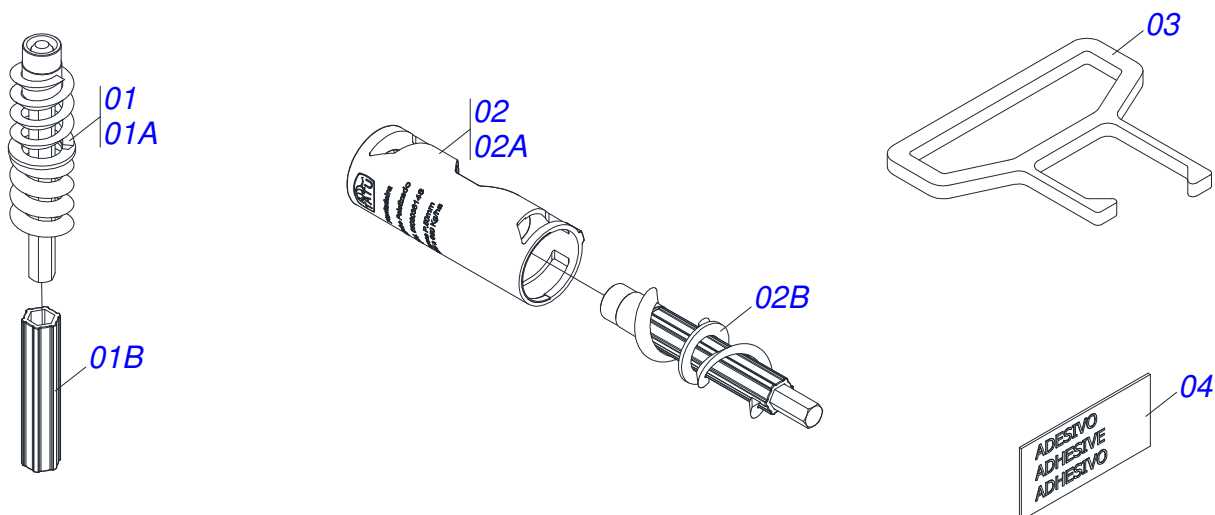


Item	Code	Description	See page	QT
01	0531058988	P.16 ENDLESS THREAD WITH COATING		15
01A	0531065012	ALPHA FERTILIZER METERING P.16MM WORM THREAD		01
01B	0503035859	SUPPORT SLEEVE		01
02	0531058992	PELLETIZED FERTILIZER KIT P.50 125 TO 650 KG/HA ALPHA		15
02A	0501111196	PELLETED FERTILIZER METERING COATING		01
02B	0531058987	ENDLESS THREAD WITH AXLE COVERING		01
03	0501214546	SPRING KEY		01
04	0503035928	ADHESIVE LABEL FERTILIZER TABLE ALPHA P16.5		01

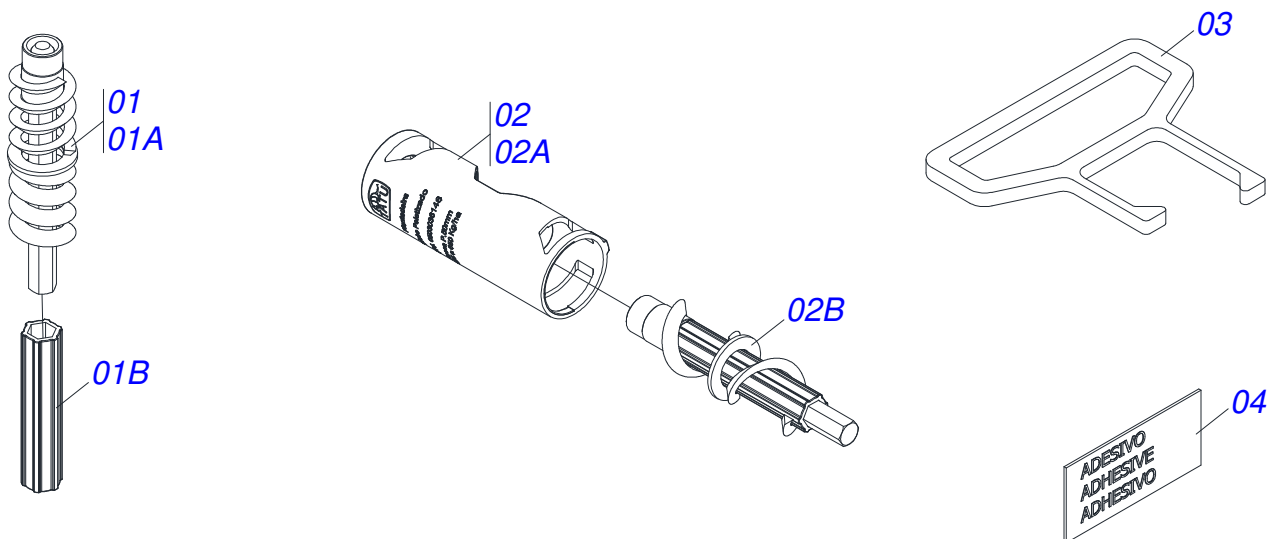


Item	Code	Description	See page	QT
01	0531058988	P.16 ENDLESS THREAD WITH COATING		17
01A	0531065012	ALPHA FERTILIZER METERING P.16MM WORM THREAD		01
01B	0503035859	SUPPORT SLEEVE		01
02	0531058992	PELLETIZED FERTILIZER KIT P.50 125 TO 650 KG/HA ALPHA		17
02A	0501111196	PELLETED FERTILIZER METERING COATING		01
02B	0531058987	ENDLESS THREAD WITH AXLE COVERING		01
03	0501214546	SPRING KEY		01
04	0503035928	ADHESIVE LABEL FERTILIZER TABLE ALPHA P16.5		01

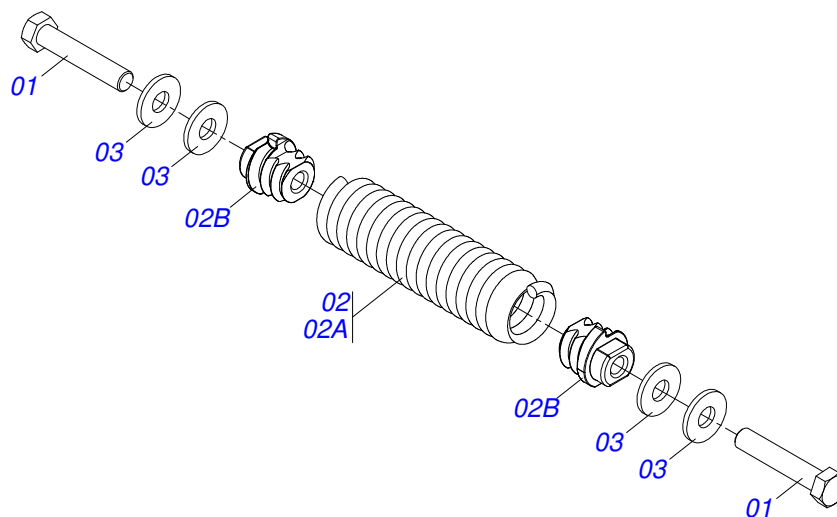


Item	Code	Description	See page	QT
01	0503013030	5/8" X 3.1/4" BOLT		02
02	0511050681	TRACTION SPRING		01
02A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
02B	0561016062	SPRING HITCH		02
03	0501012140	FLAT WASHER		04

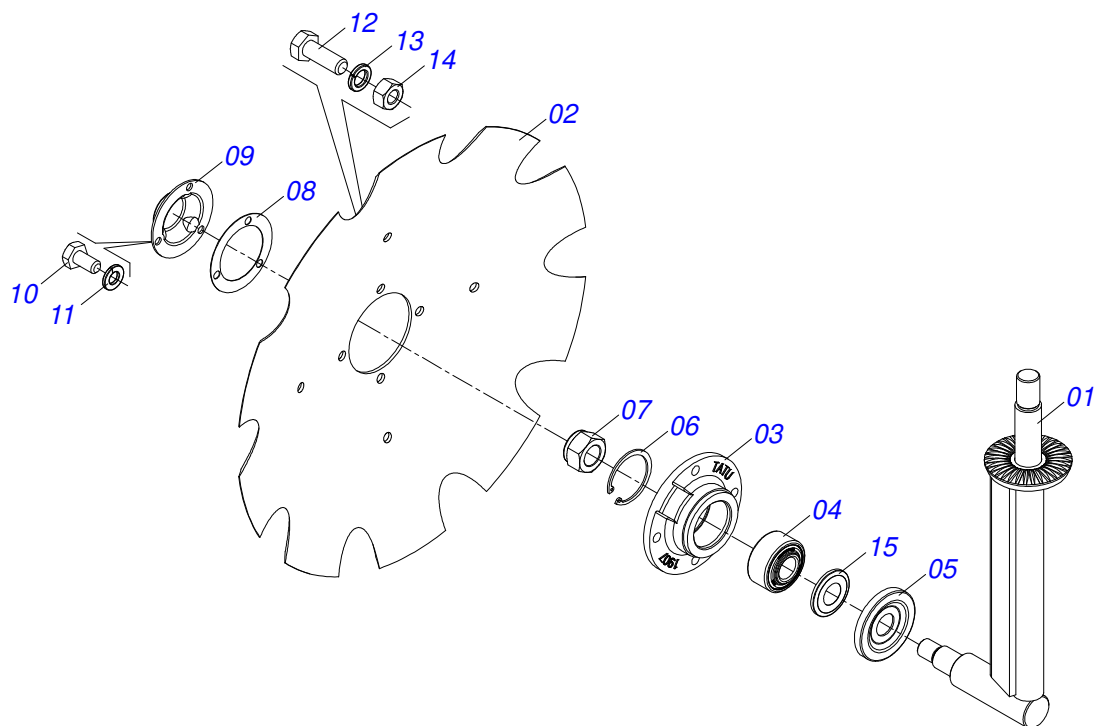


Item	Code	Description	See page	QT
01	0521069643	DISC AXLE MARKER ROW		01
02	0602023094	DR16X3 C36AFPAFR73+4FR+4FR D474 10R		01
03	0581019513	DEPTH WHEEL HUB		01
04	0503019342	ROLLER BEARING		01
05	0581019168	DUST CLOAK		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	PROTECTION LID		01
10	0503013758	1/4" X 1-1/2" BOLT		03
11	0503010143	1/4" SPRING WASHER		03
12	0503010358	5/16" X 5/8" BOLT		04
13	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
14	0503010337	5/16" NUT		04
15	0503034055	CLAMPING RING		01

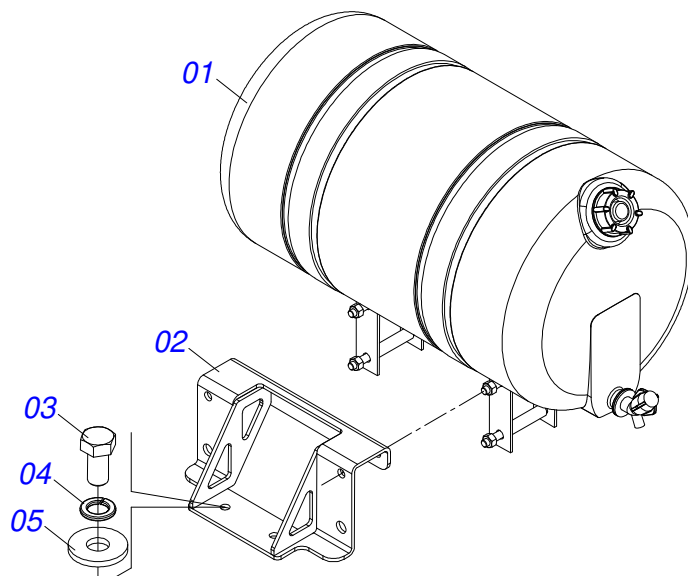

Item	Code	Description	See page	QT
01	0503014820	BLACK WATER RESERVOIR		01
02	0521068651	SUPPORT BOX		01
03	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		02
04	0503010025	3/8 SPRING WASHER		02
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02

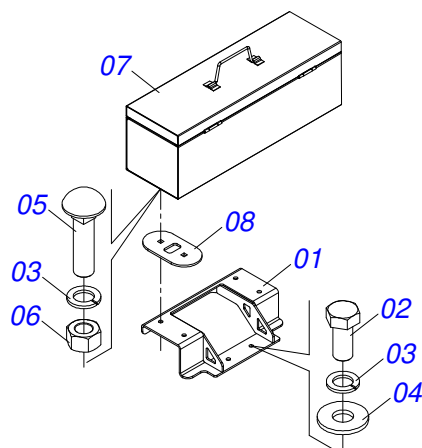

Item	Code	Description	See page	QT
01	0521068652	TOOLS BOX SUPPORT		01
02	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		02
03	0503010025	3/8 SPRING WASHER		06
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
05	0501011643	3/8 X 1"BOLT		04
06	0503010026	3/8" NUT		04
07	0503034772	BOX		01
08	0581017000	PLATE INTERMEDIARY		02

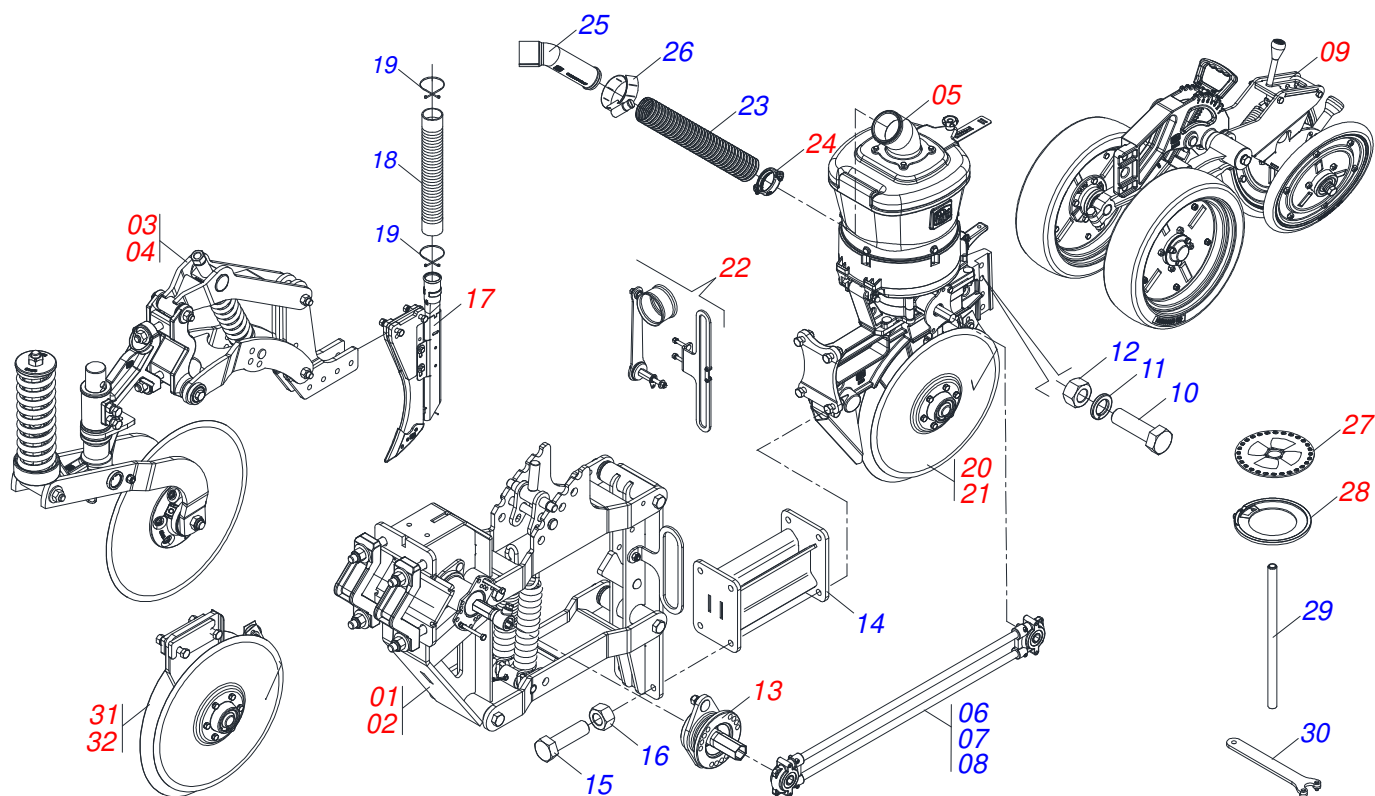


Item	Code	Description	See page	QT
01	0521056877	SHORT ROW FRONT	127	01
02	0521056878	LONG FRONT ROW	128	01
03	0521056069	SEMI-ASSEMBLED SHORT FERTILIZER ROW	130	01
04	0521056066	SEMI-ASSEMBLED LONG FERTILIZER ROW	131	01
05	0531055312	TITANIUM SINGLE SEED SYSTEM	135	01
06	0503063068	ENCAPSULATED CURRENT		01
07	0503063069	ENCAPSULATED CURRENT		01
08	0503063070	ENCAPSULATED CURRENT		01
09	0521055053	DEPTH/COMPACTOR SYSTEM - SPCRR	138	01
10	0503010905	1/2" X 2-1/4" BOLT		01
11	0503010019	1/2" SPRING WASHER		01
12	0503010060	1/2 UNC G.5 ZN HEX NUT		01
13	0521051447	FRONT ASSY ROW BEARING	149	01
14	0531060405	EXTENSION		01
15	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		01
16	0503012136	NUT 1/2 NF		01
17	0521056844	SCARIFIER ROD	150	01
18	0503031145	2" X 2" X 20" HOSE		01
19	0503031076	2" HOSE CLAMP		01
20	0521056944	REAR FRAME	152	01
21	0521056945	REAR FRAME	153	01
22	0531053040	ENCAPSULATED CHAIN GUIDE SEED ROW WITH CONDUCTOR	162	01
23	0571011730	SEED CONDUCTOR 3" X 1500		01
24	0521050525	FIXER FERTILIZER CONDUCTOR	165	01
25	0503031050	CURVED CONDUCTOR		01
26	0503010246	CLAMP		01
27	0503062066	DISC SET WITH CORN RING	166	01
28	0503062067	DISC SET / RING SOY 90F TITANIUM	167	01
29	0531061786	SEED ROW PRESSURE REGULATING LEVER		01
30	0521068982	DISC BLADE HUB KEY		01
31	0521056067	DDD RIGHT FERTILIZER WITH FIXATION		01




COP TRIO 650 TITANIUM - FRAME 6850/7655 - CSU (FROM
SEED LINE/ASSY FERTILIZER

Page 126
0909096558


Item	Code	Description	See page	QT
32	0521056068	DDD LEFT FERTILIZER WITH FIXATION		01

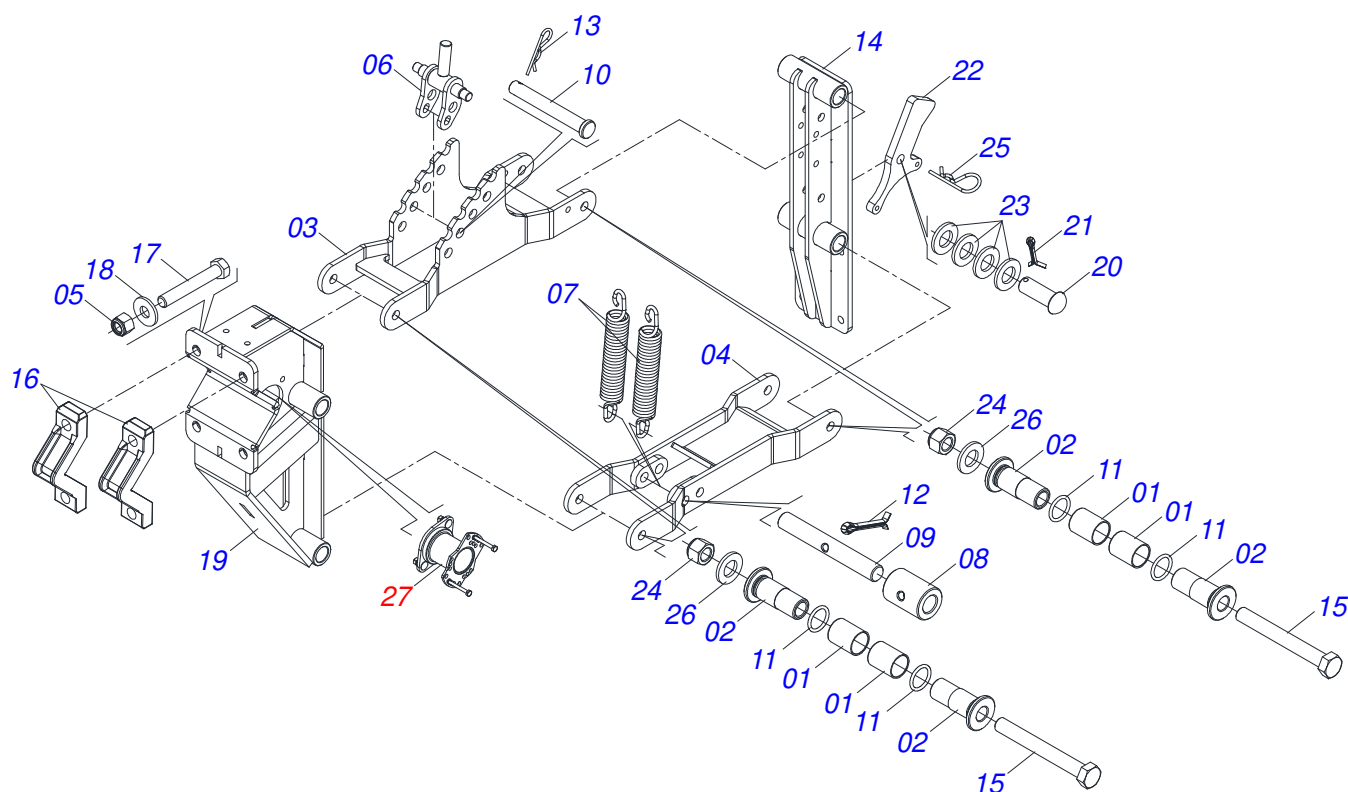


Item	Code	Description	See page	QT
01	0503019273	AUTO LUBRICANT SLEEVE	08	
02	0591011316	SEED ROW SUPPORT SLEEVE	08	
03	0531060069	TOP ARM	01	
04	0531062744	FRONT LOWER ARM SHORT SEED ROW	01	
05	0503010811	5/8" UNF SELF ADJUSTING NUT	04	
06	0531060077	PRESSURE REGULATOR	01	
07	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING	02	
08	0591010915	SPRING REGULATOR	01	
09	0591010914	LOWER AXLE	01	
10	0591011315	SPRING AXLE	01	
11	0503010045	O'RING	08	
12	0503010131	3/16" X 1-1/2" COTTERPIN	01	
13	0503030168	HITCH PIN CLIP	01	
14	0531060068	REAR ROW	01	
15	0503019295	SCREW 5/8 UNF X 7 CS RP G.5 ZN	04	
16	0502010175	HITCH CLAMP	02	
17	0503017857	BOLT 5/8 UNF 4	04	
18	0501012140	FLAT WASHER	04	
19	0531060073	FRONT ROW SUPPORT	01	
20	0521010542	COUPLING SHAFT	01	
21	0503010300	5/32" X 1" COTTERPIN	01	
22	0591010913	TRANSPORT BUMPER	01	
23	0501010301	FLAT WASHER	04	
24	0503010878	5/8" SELF ALIGNING NUT	04	
25	0503030012	HITCH PIN CLIP	01	
26	0571016296	FLAT WASHER	04	
27	0531052956	ASSEMBLY SEED ROW TRANSMISSION FIXING 129 BEARING	01	

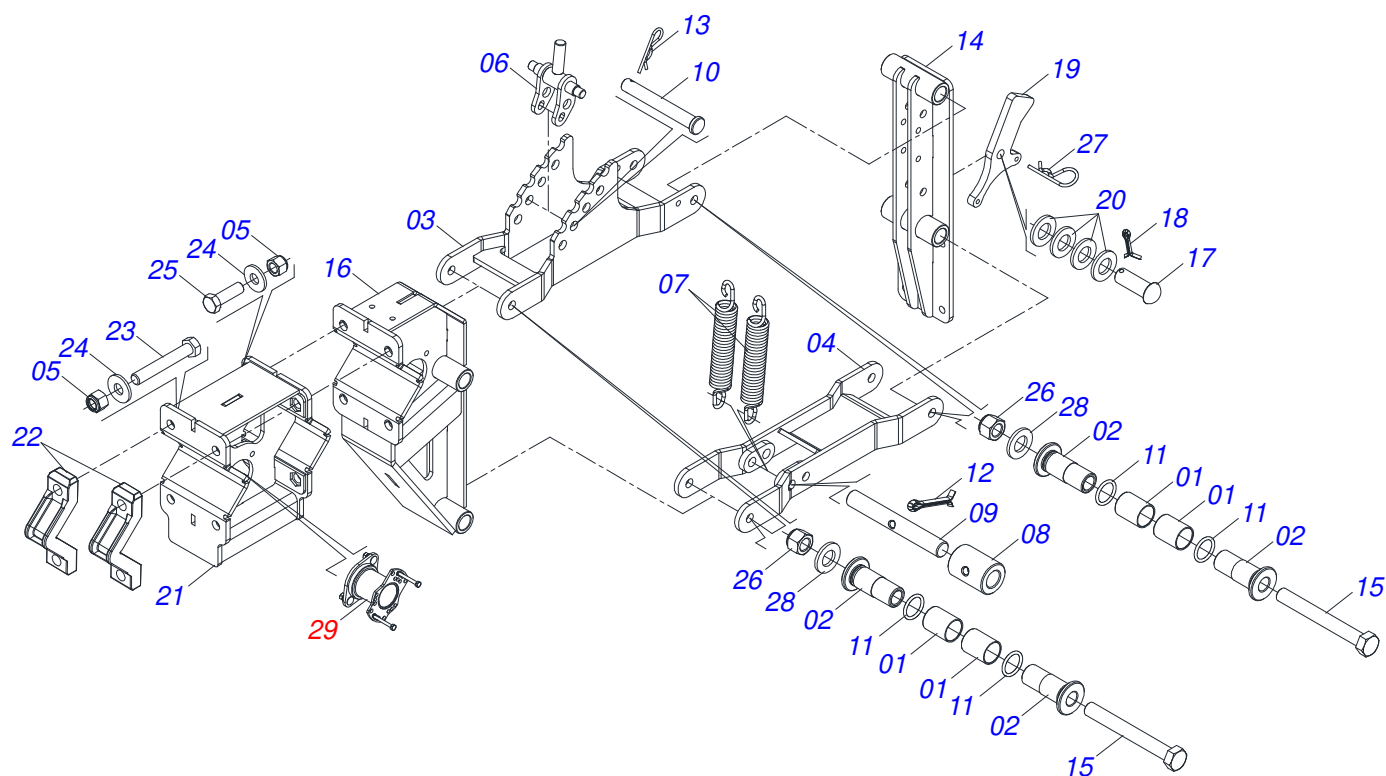


Item	Code	Description	See page	QT
01	0503019273	AUTO LUBRICANT SLEEVE	08	
02	0591011316	SEED ROW SUPPORT SLEEVE	08	
03	0531060069	TOP ARM	01	
04	0531062744	FRONT LOWER ARM SHORT SEED ROW	01	
05	0503010811	5/8" UNF SELF ADJUSTING NUT	08	
06	0531060077	PRESSURE REGULATOR	01	
07	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING	02	
08	0591010915	SPRING REGULATOR	01	
09	0591010914	LOWER AXLE	01	
10	0591011315	SPRING AXLE	01	
11	0503010045	O'RING	08	
12	0503010131	3/16" X 1-1/2" COTTERPIN	01	
13	0503030168	HITCH PIN CLIP	01	
14	0531060068	REAR ROW	01	
15	0503019295	SCREW 5/8 UNF X 7 CS RP G.5 ZN	04	
16	0531060073	FRONT ROW SUPPORT	01	
17	0521010542	COUPLING SHAFT	01	
18	0503010300	5/32" X 1" COTTERPIN	01	
19	0591010913	TRANSPORT BUMPER	01	
20	0501010301	FLAT WASHER	04	
21	0531060072	EXTENDER	01	
22	0502010175	HITCH CLAMP	02	
23	0503017857	BOLT 5/8 UNF 4	04	
24	0501012140	FLAT WASHER	08	
25	0503012798	5/8" X 2" BOLT	04	
26	0503010878	5/8" SELF ALIGNING NUT	04	
27	0503030012	HITCH PIN CLIP	01	
28	0571016296	FLAT WASHER	04	
29	0531052956	ASSEMBLY SEED ROW TRANSMISSION FIXING 129 BEARING	01	

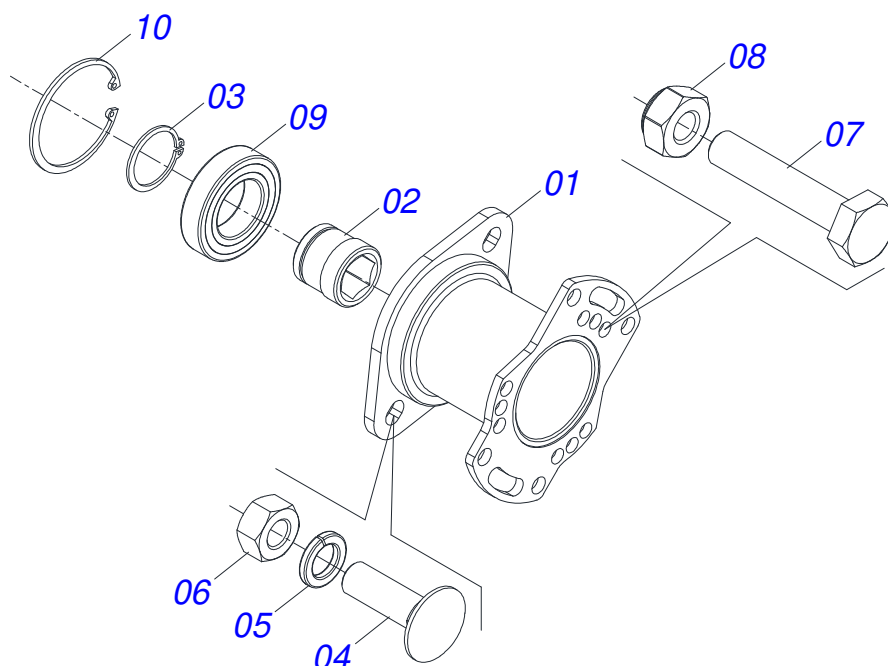


Item	Code	Description	See page	QT
01	0531060071	BEARING		01
02	0551015804	BEARING AXLE BODY		01
03	0503010707	501030 CLAMPING RING (FOR AXLE)		01
04	0503011953	5/16" X 1" BOLT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02
07	0503011194	BOLT 1/4 UNC X 2.1/2 CS G.2 ZN		02
08	0503012880	1/4" UNC SELF ADJUSTING NUT		02
09	0503019373	6006 2RS1 NATIONAL BEARING		01
10	0503012858	502075 CLAMPING RING (FOR HOLE)		01

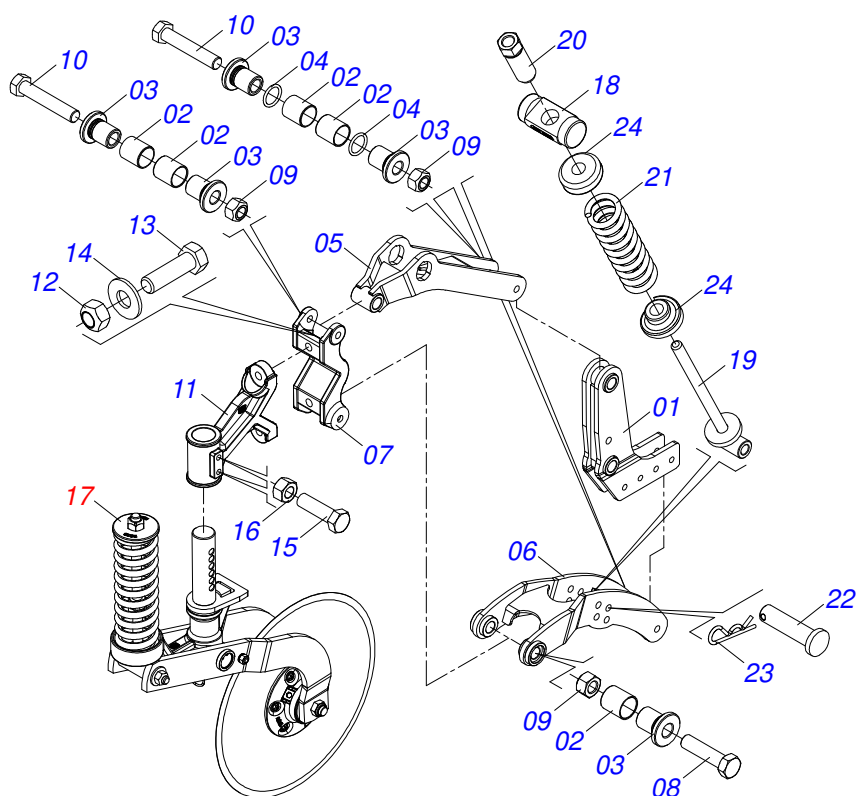


Item	Code	Description	See page	QT
01	0531060002	FERTILIZER ROW REAR SUPPORT		01
02	0503019405	SLEEVE		08
03	0591010640	ARM SPACER SLEEVE WITHOUT LUBRICATION		08
04	0503010045	O'RING		04
05	0531060001	TOP SUPPORT FERTILIZER ROW		01
06	0521069998	LOWER SUPPORT FERTILIZER ROW		01
07	0591010629	SHORT FERTILIZER ROW SUPPORT		01
08	0503010233	5/8" X 2-1/2" BOLT		02
09	0503012412	5/8" UNC SELF LOCKING NUT		05
10	0501010452	5/8" X 5" BOLT		03
11	0502012727	BLADE DISC SUPPORT		01
12	0503011255	3/4" LOCK NUT		02
13	0503011328	3/4" X 4" BOLT		02
14	0501010322	FLAT WASHER		02
15	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
16	0503010013	5/8 NUT		02
17	0521056070	DC 20 ASSY	132	01
18	0521011158	SPRING LOCKNUT		01
19	0521062073	SPRING GUIDE		01
20	0521018575	REGULATOR SPINDLE 100		01
21	0503031450	2.7" X 9.2" X 0.03" SPRING		01
22	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
23	0503030168	HITCH PIN CLIP		01
24	0502020393	SPRING UPPER SUPPORT		02

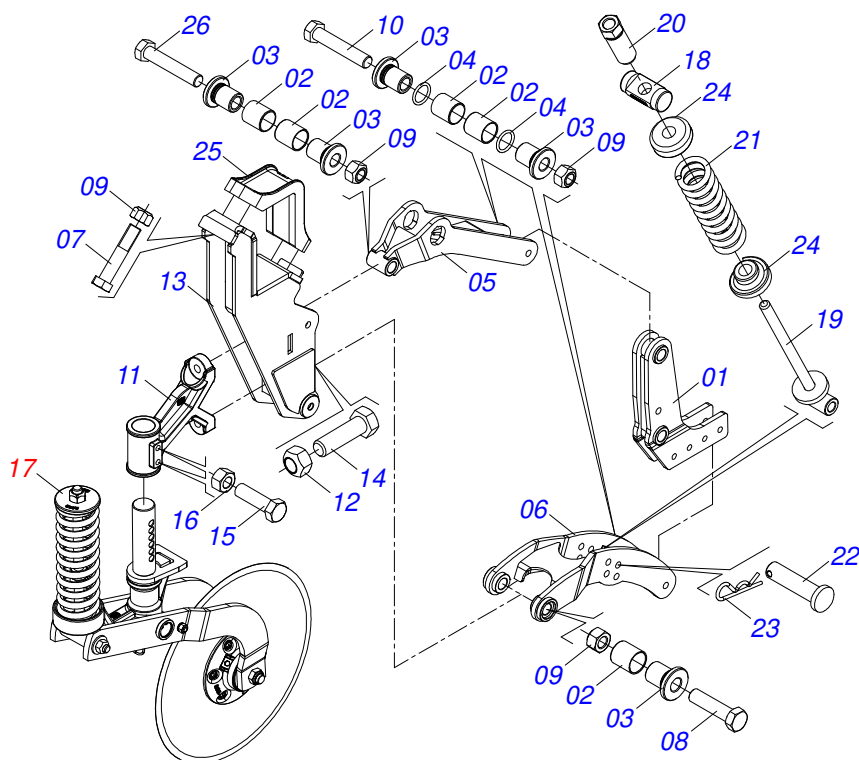


Item	Code	Description	See page	QT
01	0531060002	FERTILIZER ROW REAR SUPPORT		01
02	0503019405	SLEEVE		08
03	0591010640	ARM SPACER SLEEVE WITHOUT LUBRICATION		08
04	0503010045	O'RING		04
05	0531060001	TOP SUPPORT FERTILIZER ROW		01
06	0521069998	LOWER SUPPORT FERTILIZER ROW		01
07	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		04
08	0503010233	5/8" X 2-1/2" BOLT		02
09	0503012412	5/8" UNC SELF LOCKING NUT		09
10	0501010452	5/8" X 5" BOLT		02
11	0502012727	BLADE DISC SUPPORT		01
12	0503011255	3/4" LOCK NUT		02
13	0521069993	LONG FERTILIZER ROW SUPPORT		01
14	0501010125	3/4" X 2-1/2" BOLT		02
15	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
16	0503010013	5/8 NUT		02
17	0521056070	DC 20 ASSY	132	01
18	0521011158	SPRING LOCKNUT		01
19	0521062073	SPRING GUIDE		01
20	0521018575	REGULATOR SPINDLE 100		01
21	0503031450	2.7" X 9.2" X 0.03" SPRING		01
22	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
23	0503030168	HITCH PIN CLIP		01
24	0502020393	SPRING UPPER SUPPORT		02
25	0502012724	FERTILIZER ROW FIXER		01
26	0501010163	5/8" X 4-1/2" BOLT		01

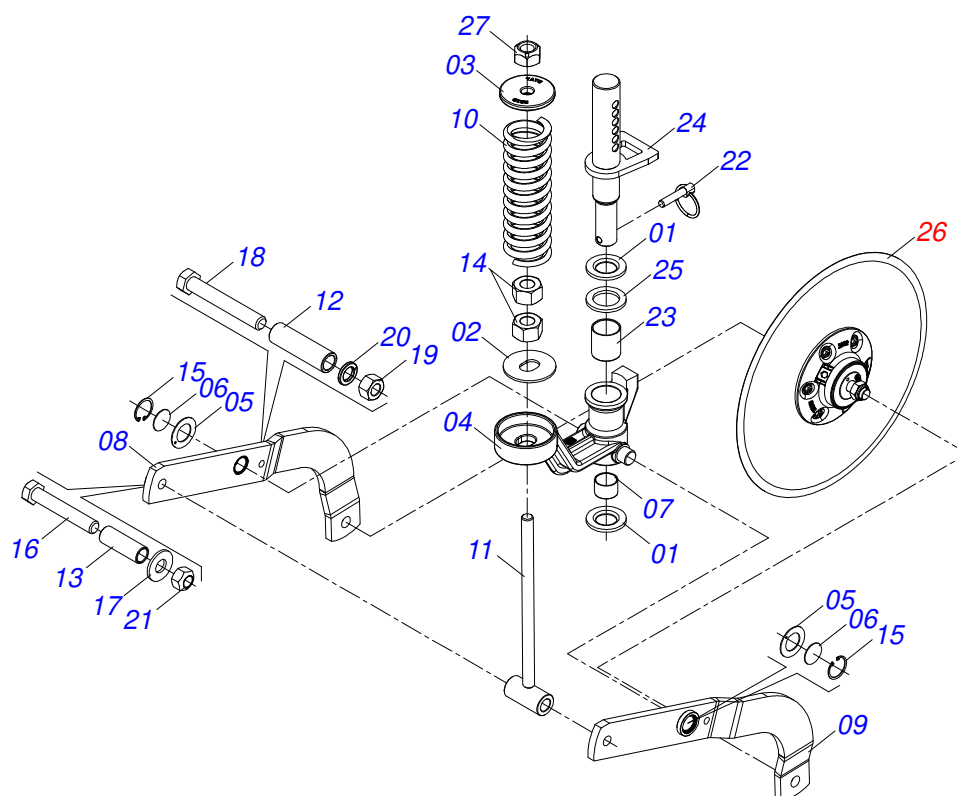


Item	Code	Description	See page	QT
01	0571019034	FLANGE WASHER AXLE		02
02	0571019032	SUPPORT WASHER		01
03	0502012813	FLANGE WASHER SPRING		01
04	0591010619	DC SPRING SUPPORT		01
05	0503019274	WASHER		02
06	0581017628	LID		02
07	0503019277	SLEEVE LUBRICATION SYSTEM		01
08	0501110964	RIGHT ARM WITH SLEEVE		01
09	0501110965	LEFT ARM WITH SLEEVE		01
10	0503034709	COMPRESSION SPRING 100 X 315 X 15.87		01
11	0521069996	ROD SPRING FERTILIZER		01
12	0591010624	SUPPORT ARM SLEEVE		01
13	0591010625	19,50 X 25 X 91,50/91,30 SLEEVE		01
14	0503010417	7/8" NUT		02
15	0503010390	SEAL RING		02
16	0503011198	C3/4" X 6" SCREW		01
17	0501010322	FLAT WASHER		01
18	0503011411	1/2" X 5-1/2" BOLT		01
19	0503010060	1/2 UNC G.5 ZN HEX NUT		01
20	0503010019	1/2" SPRING WASHER		01
21	0503011255	3/4" LOCK NUT		01
22	0503030430	7/16 X 2" PIN LOCK		01
23	0503019271	SELF LUBRICATING BUSHING		01
24	0521069997	DC FIXING AXIS WITH LIMITER		01
25	0591010628	DC AXIS BACKREST WASHER		01
26	0521053248	20" DISC BLADE HUB WITH CONICAL BEARING	133	01
27	0503011254	7/8" HEX SELF ADJUSTING NUT		01

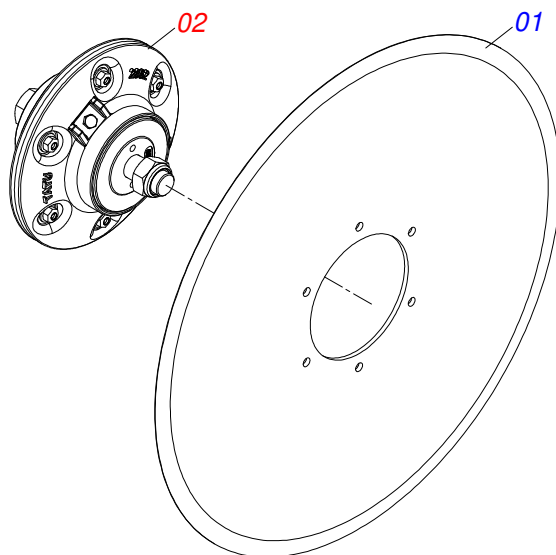


Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521053697	DISC BLADE HUB	134	01

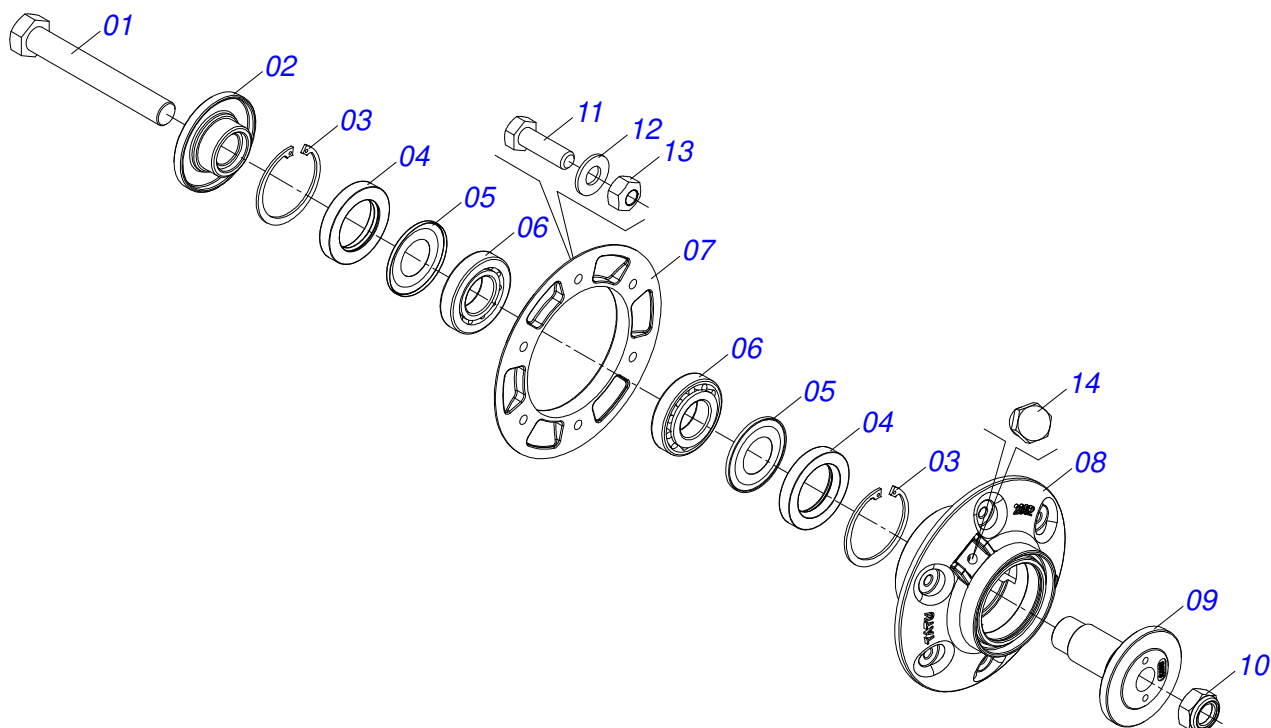


Item	Code	Description	See page	QT
01	0503019283	SCREW 7/8 UNF X 6.1/4		01
02	0502040872	REGULATORY NUT		01
03	0503010370	502072 CLAMPING RING (FOR AXLE)		02
04	0503010590	00674-B SEAL		02
05	0503019285	RING		02
06	0503012170	30207 ROLLER BEARING		02
07	0502020641	BLADE DISC FLANGE		01
08	0502012862	DISC BLADE HUB		01
09	0502040873	DISC BLADE AXLE		01
10	0503017755	NUT		01
11	0503018825	5/16 UNC UNC BOLT		06
12	0501010694	FLAT WASHER		06
13	0503013816	5/16" LOCKNUT		06
14	0511017907	1/8" BSPT X 6 PLUG		02

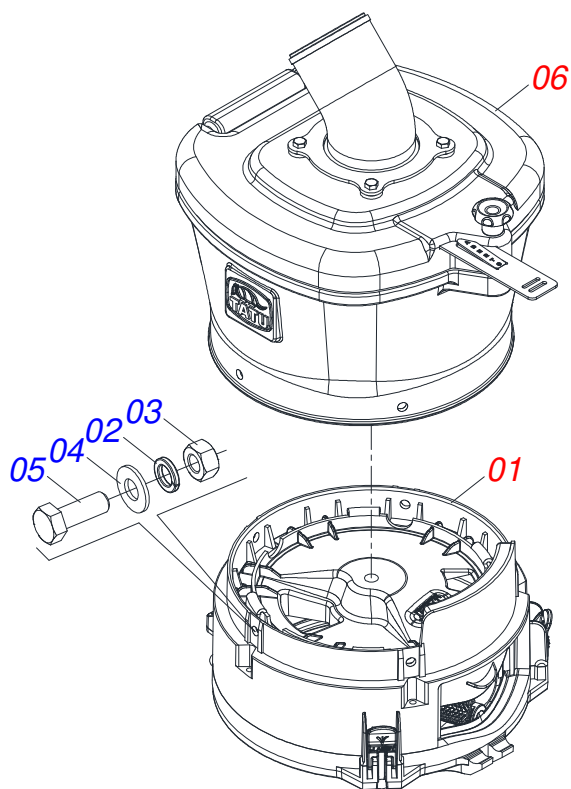


Item	Code	Description	See page	QT
01	0511052058	SEED SYSTEM TITANIUM	136	01
02	0503010179	LOCK WASHER 5/16 ZN 1K01528		05
03	0503010337	5/16" NUT		05
04	0501010694	FLAT WASHER		05
05	0503010358	5/16" X 5/8" BOLT		05
06	0531054583	SEMI-ASSEMBLED SINGLE SEED HOPPER	137	01

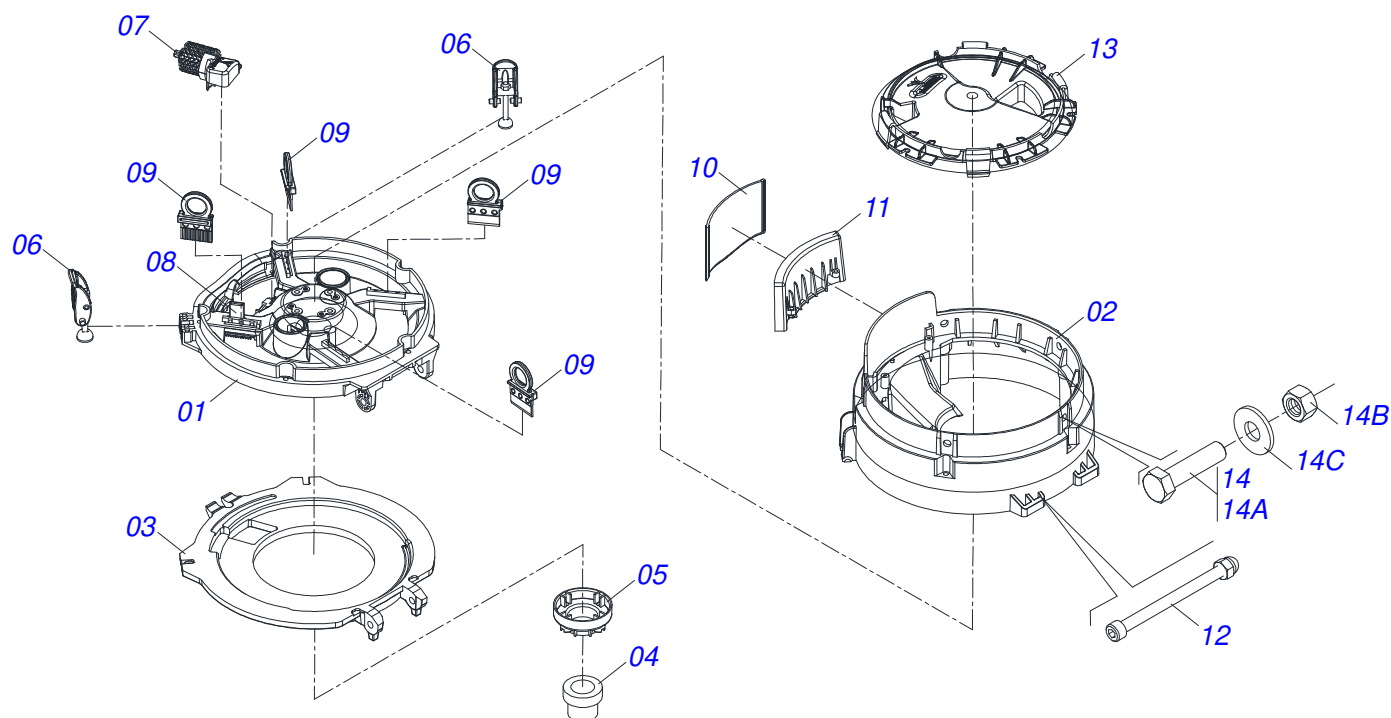


Item	Code	Description	See page	QT
01	0503062031	BASE SET		01
02	0503062032	NECK TITANIUM ASSY		01
03	0503062033	OPPOSITE BASE SET		01
04	0503062034	CENTRAL ADAPTER SET		01
05	0503062035	SET FALSE ADAPT CENTER		01
06	0503062036	SUBSET ASSY LOCK BASE		01
07	0503062037	SUBSET ESCOVAFLEX ASSY		01
08	0503062038	ASSY ANTI-LEAP		01
09	0503062039	POLIFLOW TITANIUM ASSY		01
09.	0503016279	POLIFLOW TITANIUM ASSY		01
10	0503062040	DISPLAY ASSY TITANIUM 1050010		01
11	0503062041	TITANIUM DISPLAY PROTECTION ASSY		01
12	0503062042	SET BOLT ARTICULADOR		01
13	0503062043	ASSY LIMIT WEIGHT		01
14	0503062044	ASSEMBLY SEED HOPPER SET		01
14A	0503016285	BOLT		05
14B	0503016286	HEX NUT		05
14C	0503016287	FLAT WASHER		05

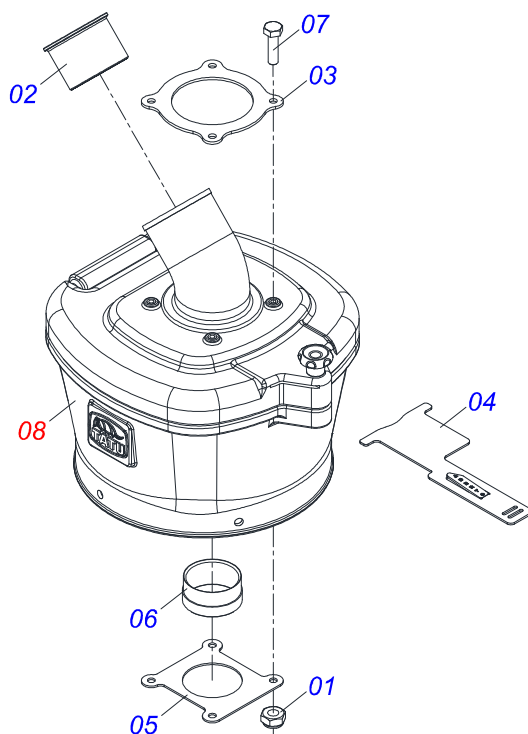


Item	Code	Description	See page	QT
01	0503015536	M6 X 1" SELF ADJUSTING NUT		04
02	0581014295	FIXING SLEEVE		01
03	0501213431	SEED NOZZLE FIXING FLANGE		01
04	0501213520	SEED BREAKER BODY		01
05	0501213432	BREAKER SUPPORT BASE		01
06	0501213728	60 X 53 X 30 PVC TUBE		01
07	0513010720	M6 X 1 X 35 C S G.5 ZB BOLT		04
08	0503063760	SINGLE SEED HOPPER ASSEMBLED WITH LOCK LID		01

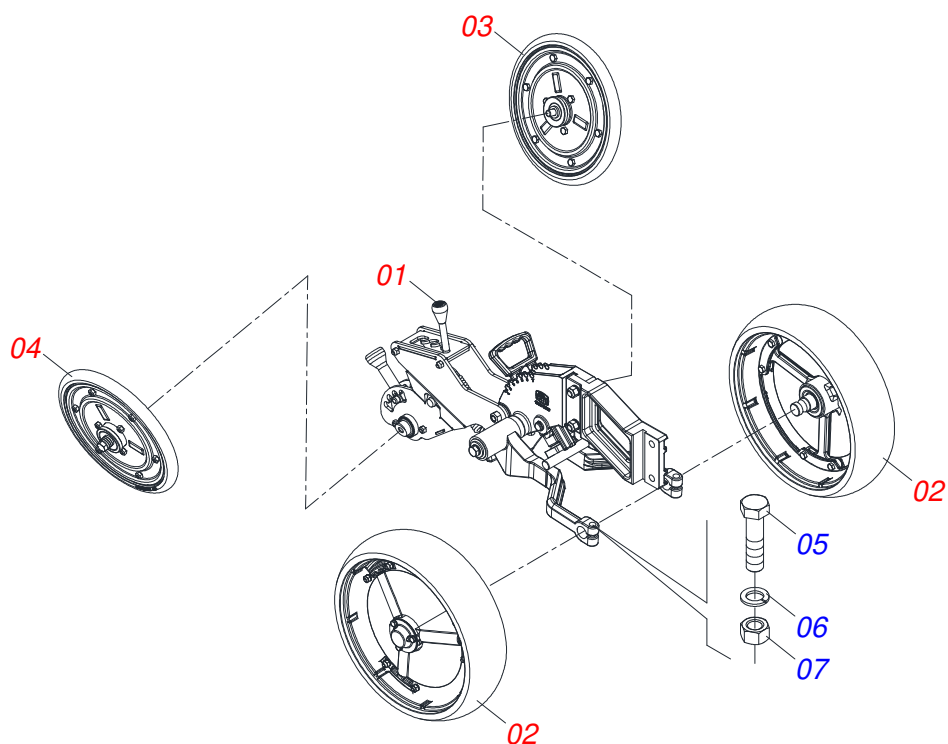


Item	Code	Description	See page	QT
01	0521055065	ASSY DEPTH / COMPACTOR	139	01
02	0521055068	RAYED WHEEL CENTER CLOSED	144	02
03	0521054990	LEFT COMPACTOR WHEEL	146	01
04	0521055017	RIGHT COMPACTOR WHEEL	148	01
05	0503016453	1/2" X 2.1/2 BOLT		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010028	1/2" NUT		02

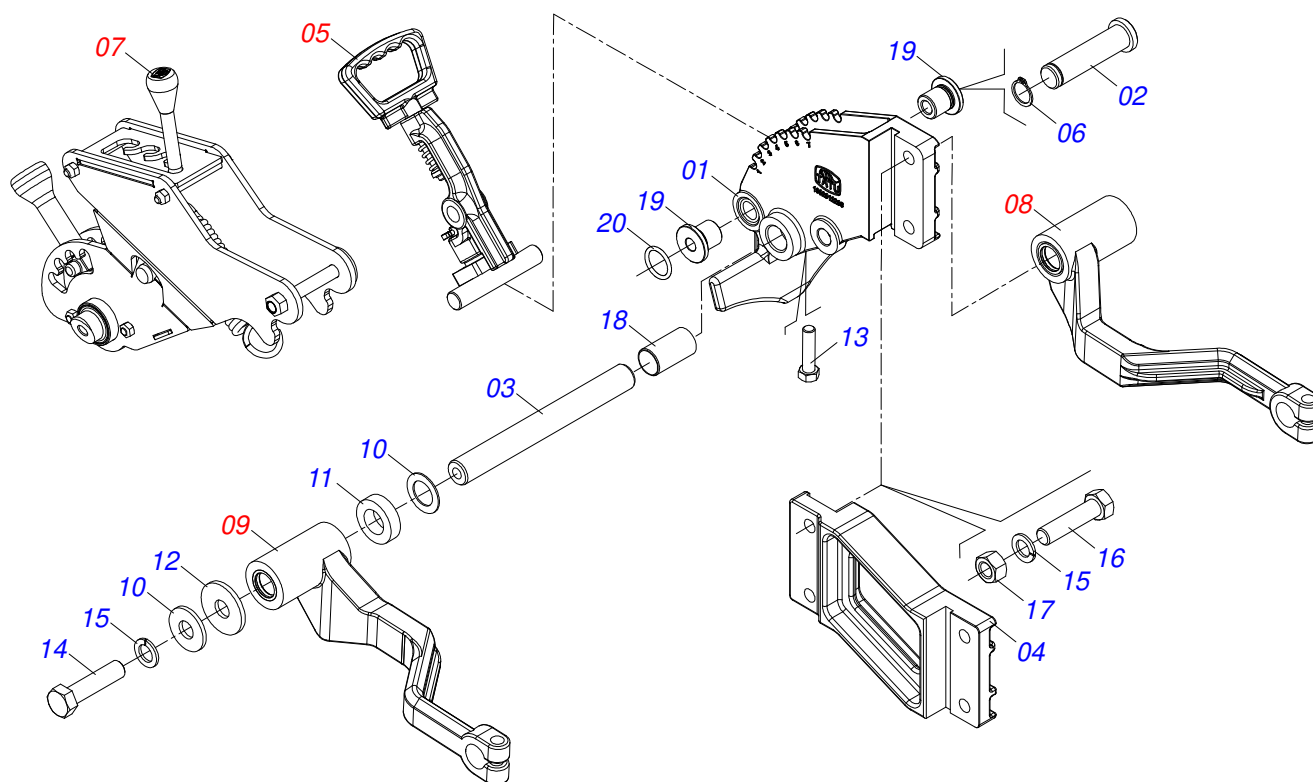


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0571013054	DEPTH CONTROL WHEEL AXLE		01
04	0502012663	EXTENSION		01
05	0501056769	DEPTH WHEELS REGULATOR ASSY	140	01
06	0503019398	AXLE RETAINER RING		01
07	0521055033	SEMI-ASSEMBLED COMPACTOR BODY	141	01
08	0521055054	LEFT ARM WITH SLEEVE	142	01
09	0521055066	RIGHT ARM WITH SLEEVE	143	01
10	0511015346	FLAT WASHER		04
11	0571015974	WASHER		02
12	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
13	0503010256	3/8" X 3/4" BOLT		01
14	0503010311	1/2" X 1-1/4" BOLT		02
15	0503010019	1/2" SPRING WASHER		04
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2 UNC G.5 ZN HEX NUT		02
18	0503019275	SLEEVE LUBRICATION SYSTEM		01
19	0581019473	ARTICULATED SLEEVE		02
20	0503010045	O'RING		02

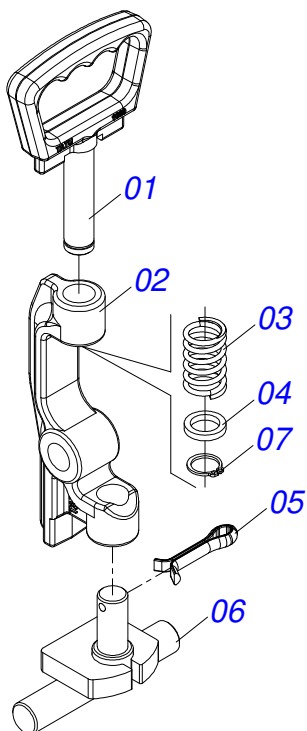


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

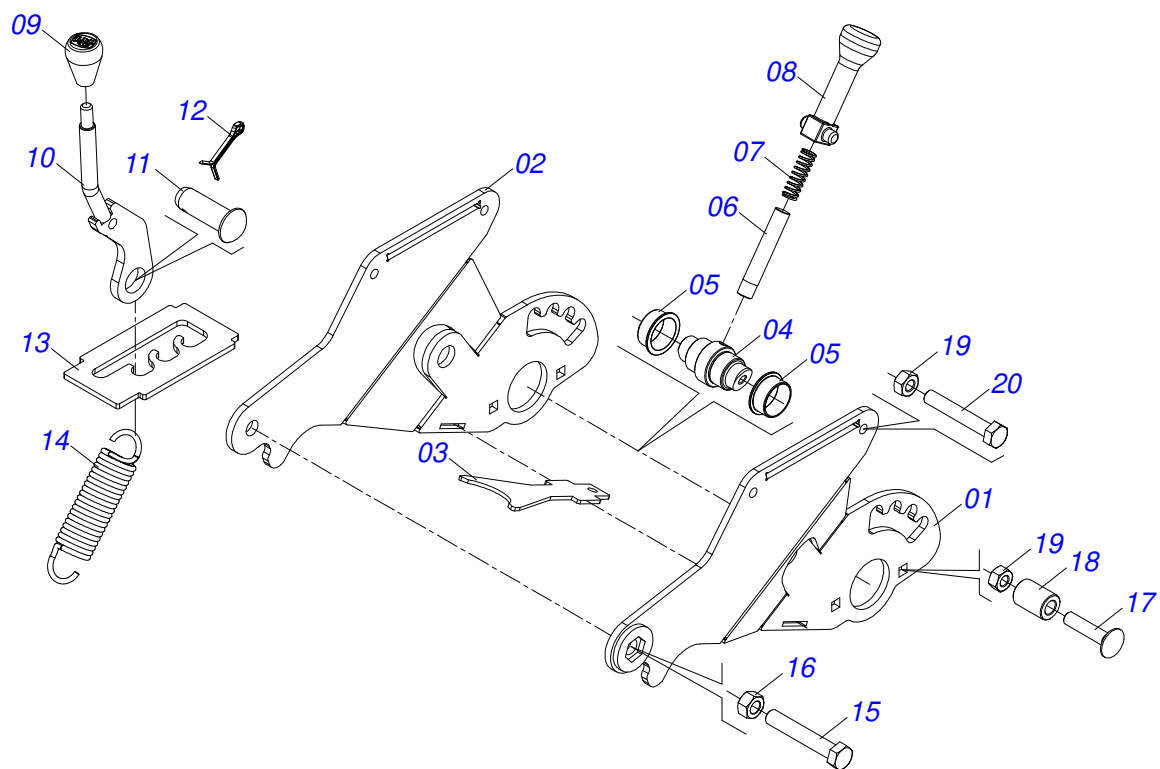


Item	Code	Description	See page	QT
01	0521069585	LEFT SIDE		01
02	0581019475	RIGHT SIDE BODY		01
03	0581019511	COVER		01
04	0581019510	AXIS		01
05	0503019351	LUBRICANT SLEEVE		02
06	0581019520	AXIS		01
07	0503030190	0.5" X 1.6" X 0.05" SPRING		01
08	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
09	0503030878	LEVER CRANK		01
10	0521068661	LEVER		01
11	0571012442	COUPLING SHAFT		01
12	0503010257	1/8" X 1" COTTERPIN		01
13	0581019512	PLATE TOP		01
14	0503034817	SPRING		01
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503011336	1/2" HEX SELF ADJUSTING NUT		01
17	0501011753	5/16" X 1-3/4" BOLT		02
18	0581015855	SLEEVE		02
19	0503013816	5/16" LOCKNUT		04
20	0503010848	5/16" X 3.1/2" BOLT		02

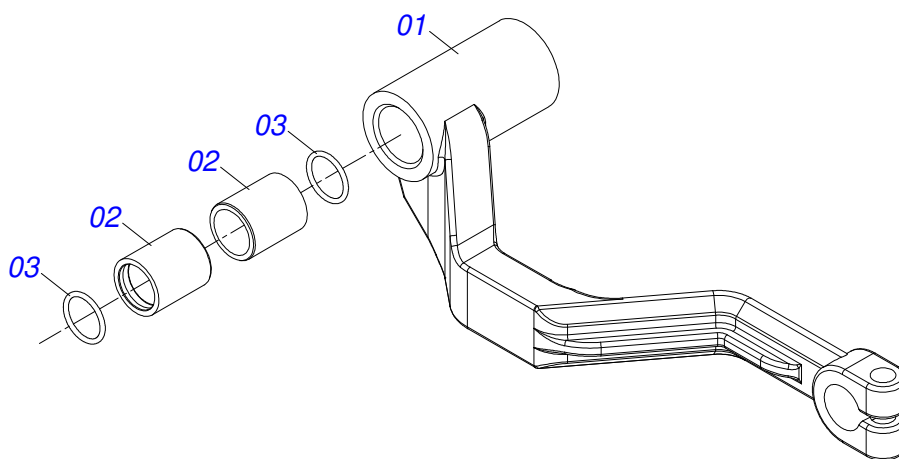


Item	Code	Description	See page	QT
01	0581019523	LEFT ARM WHEEL DEPTH		01
02	0581019514	LUBRICANT SLEEVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

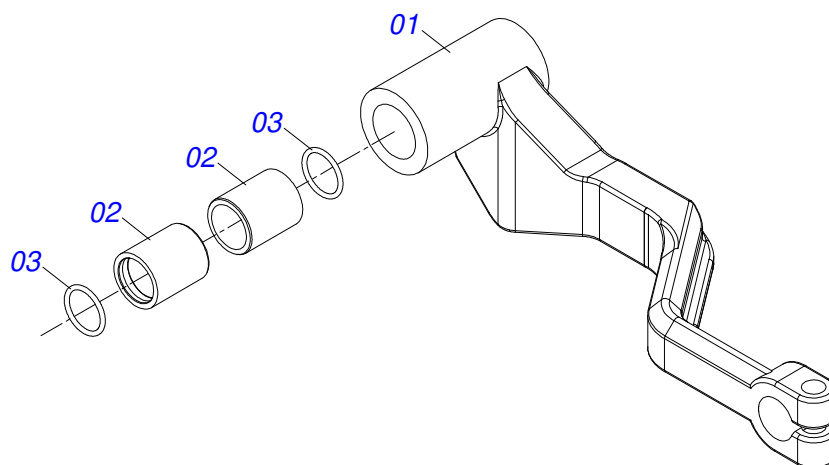


Item	Code	Description	See page	QT
01	0581019524	RIGHT ARM DEPTH		01
02	0581019514	LUBRICANT SLEEVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

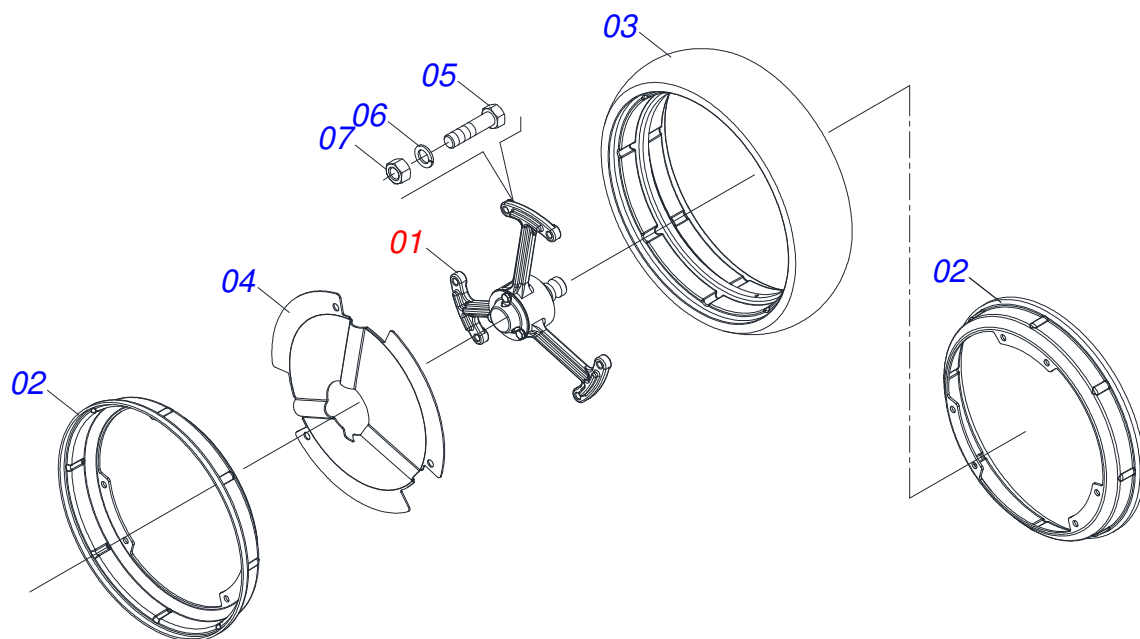


Item	Code	Description	See page	QT
01	0521055055	HUB WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	145	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
07	0503010337	5/16" NUT		06

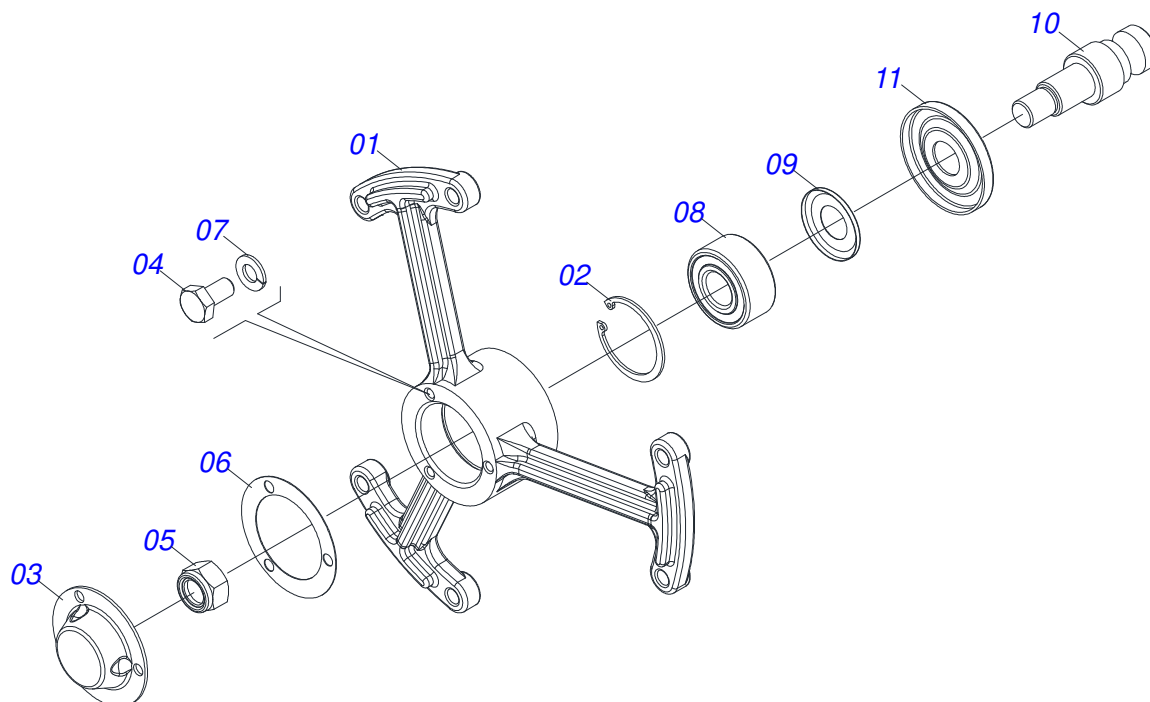


Item	Code	Description	See page	QT
01	0581019522	CASE WHEEL DEPTH WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010878	5/8" SELF ALIGNING NUT		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0503010143	1/4" SPRING WASHER		03
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019529	DEPTH REGULATOR SHAFT		01
11	0581019168	DUST CLOAK		01

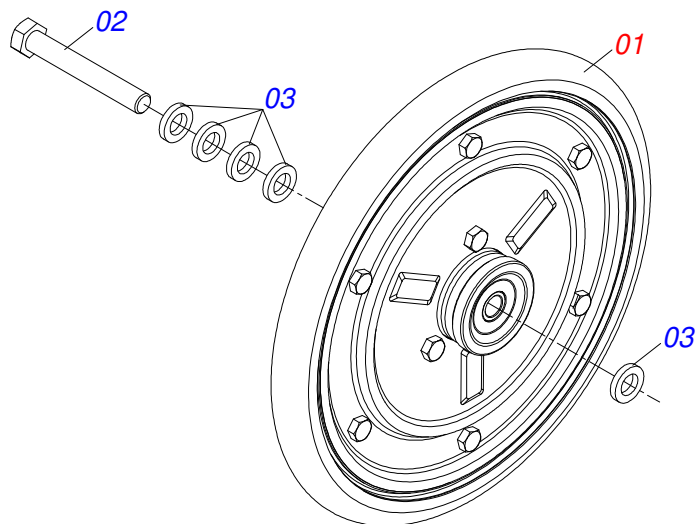


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	147	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

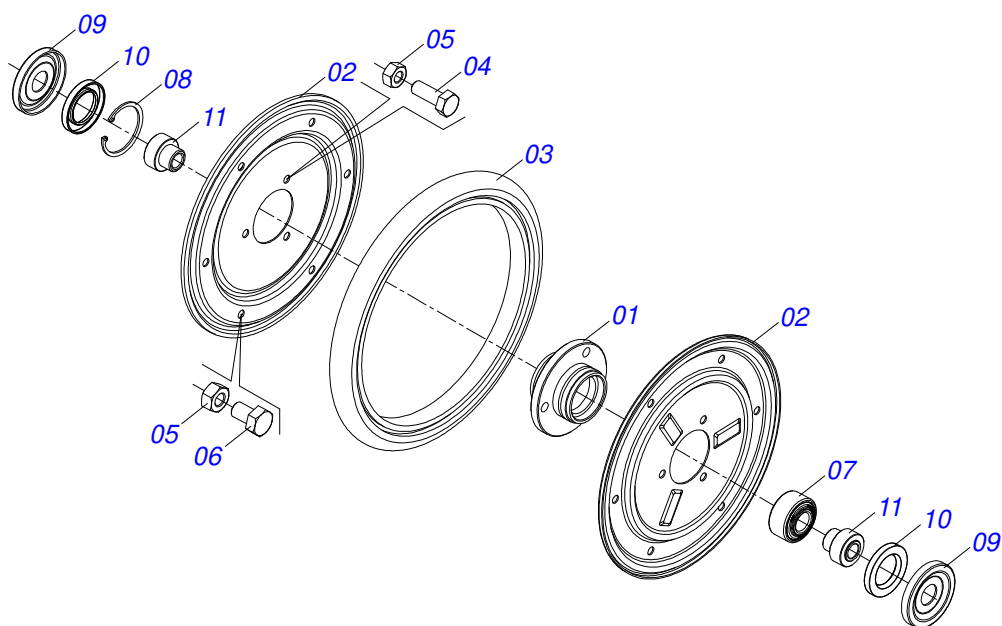


Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

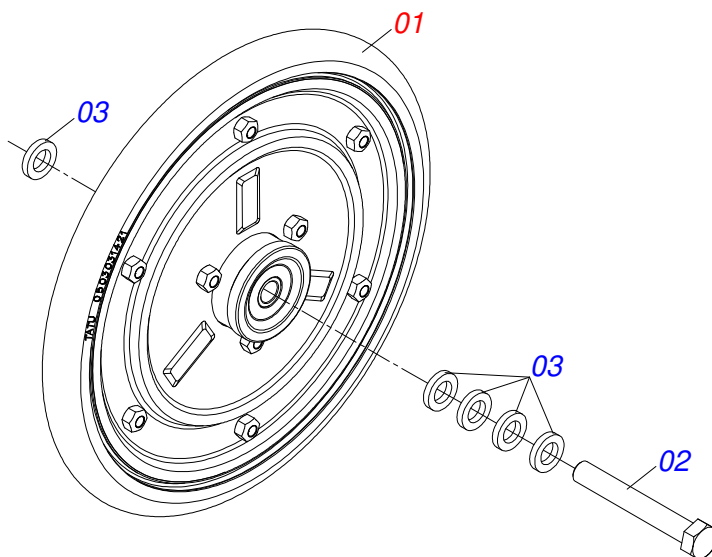


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	147	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

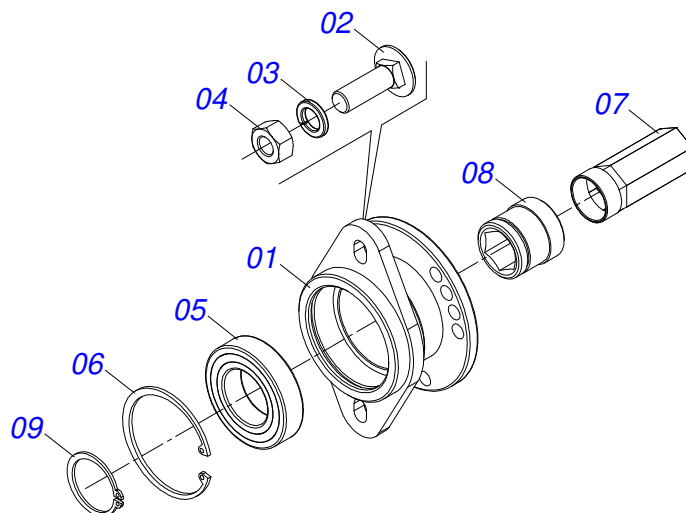


Item	Code	Description	See page	QT
01	0581014691	BEARING		01
02	0503011953	5/16" X 1" BOLT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	5/16" NUT		02
05	0503012861	6006 2RS BALL BEARING		01
06	0503012858	502075 CLAMPING RING (FOR HOLE)		01
07	0581015056	SLEEVE		01
08	0551015804	BEARING AXLE BODY		01
09	0503010707	501030 CLAMPING RING (FOR AXLE)		01

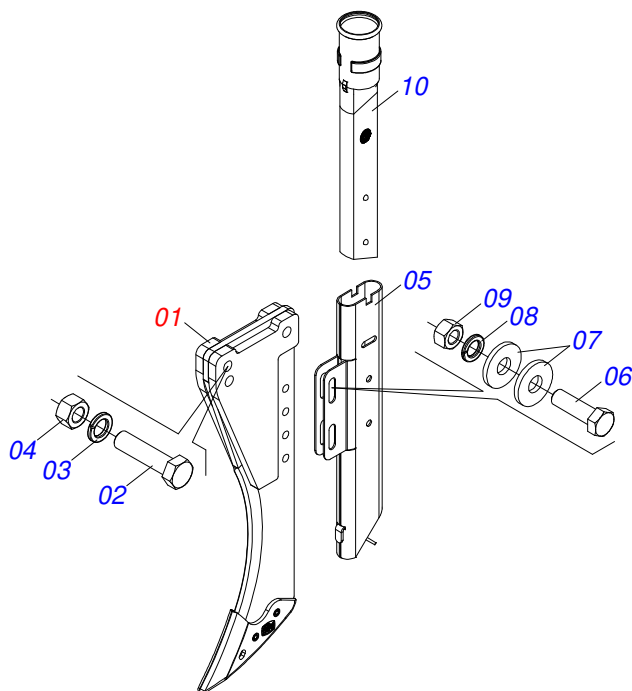


Item	Code	Description	See page	QT
01	0521053673	SCARIFIER ROD WITH NOZZLE	151	01
02	0503010479	BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0521069127	BOTTOM NOZZLE FERTILIZER		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
08	0503010025	3/8 SPRING WASHER		02
09	0503010026	3/8" NUT		02
10	0503030483	FERTILIZER SOCKET		01

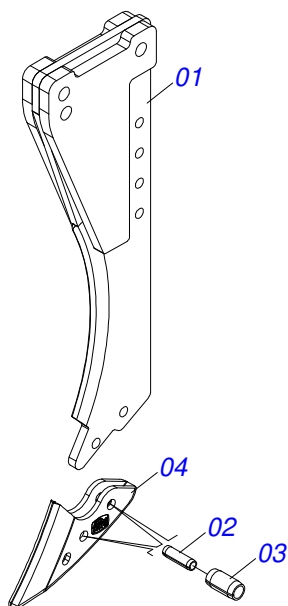


Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER ROD		01
02	0503011402	0.2" X 0.8" SPRING PIN		02
03	0503016853	SPRING PIN		02
04	0502040869	FIXED ROD BEARING		01

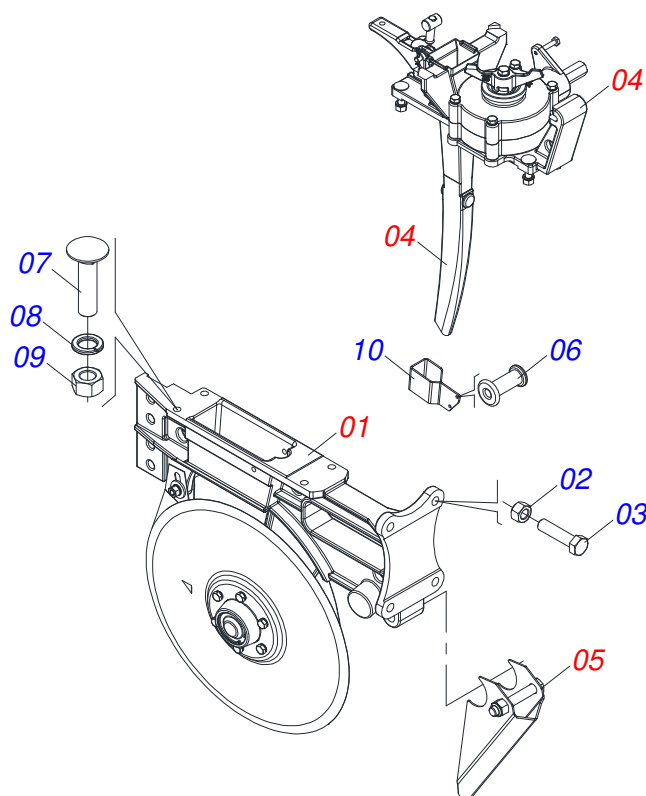


Item	Code	Description	See page	QT
01	0521056955	RIGHT DDD ASSY	154	01
02	0503012136	NUT 1/2 NF		04
03	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
04	0531050193	DOSING ASSY TITANIUM/TATU		01
05	0531050596	FENDER ASSY		01
06	0503015341	POP RIVET		02
07	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04
08	0503010025	3/8 SPRING WASHER		04
09	0503010026	3/8" NUT		04
10	0501212058	TITANIUM SEED DRIVER'S GUIDE		01

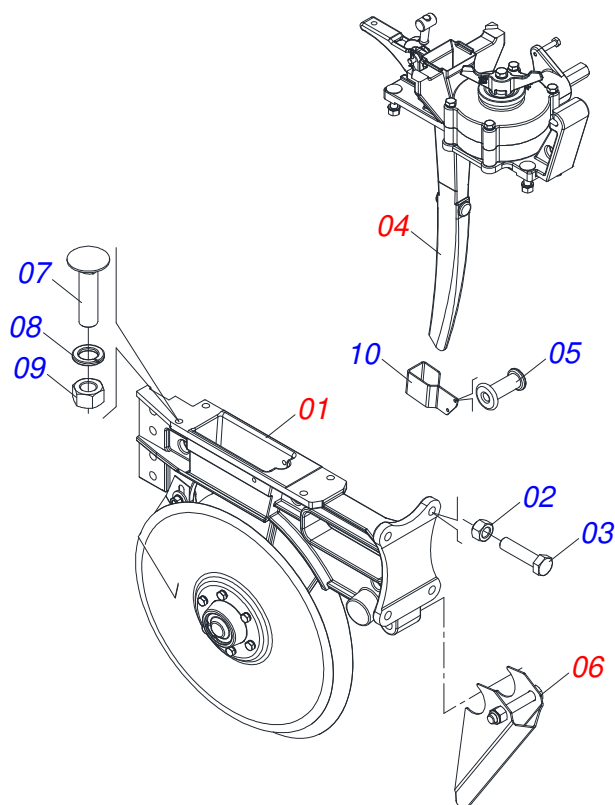


Item	Code	Description	See page	QT
01	0521056954	LEFT DDD ASSY	159	01
02	0503012136	NUT 1/2 NF		04
03	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
04	0531050193	DOSING ASSY TITANIUM/TATU		01
05	0503015341	POP RIVET		02
06	0531050596	FENDER ASSY		01
07	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04
08	0503010025	3/8 SPRING WASHER		04
09	0503010026	3/8" NUT		04
10	0501212058	TITANIUM SEED DRIVER'S GUIDE		01

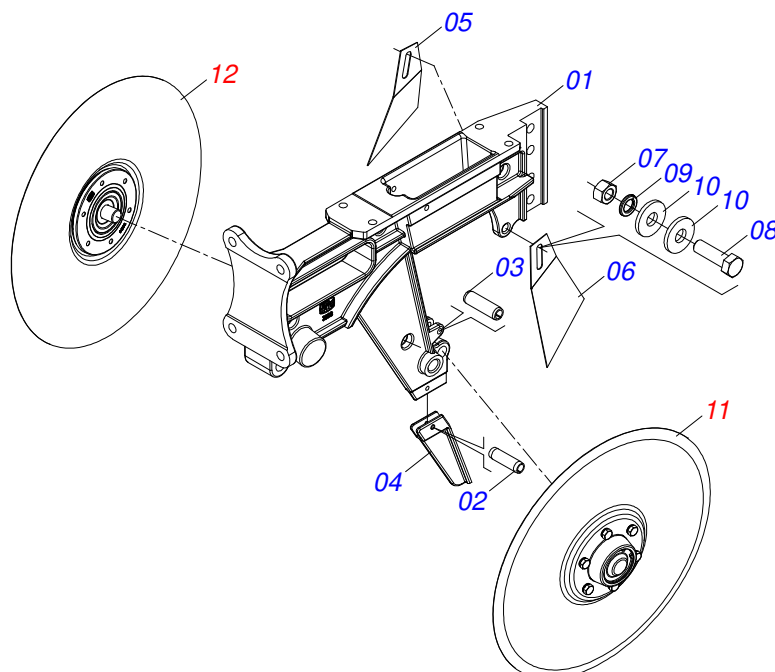


Item	Code	Description	See page	QT
01	0591011773	RIGHT DDD BODY		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 155 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 156 FERTILIZER / SEED		01

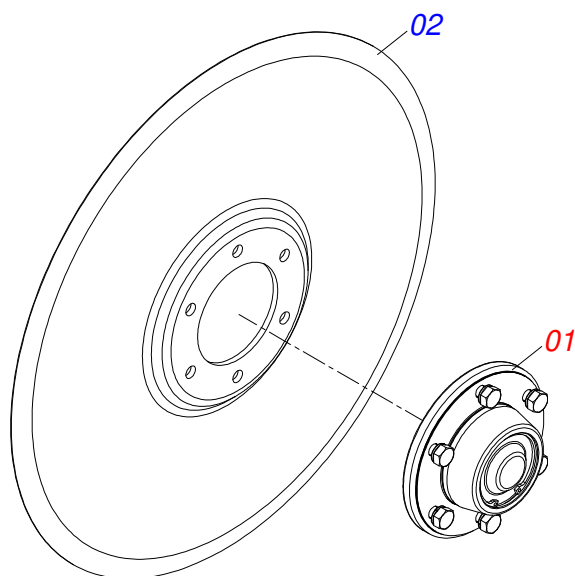


Item	Code	Description	See page	QT
01	0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	157	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

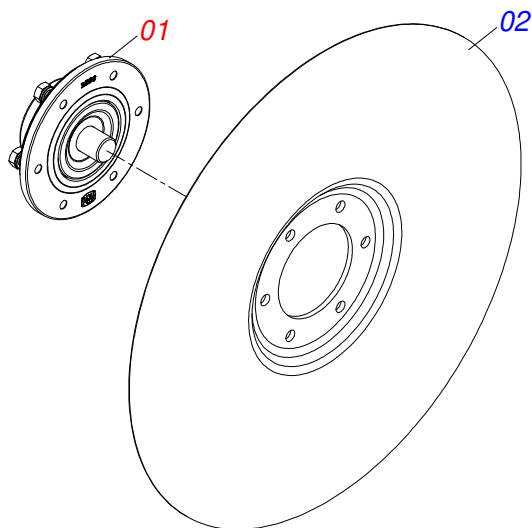


Item	Code	Description	See page	QT
01	0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	158	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

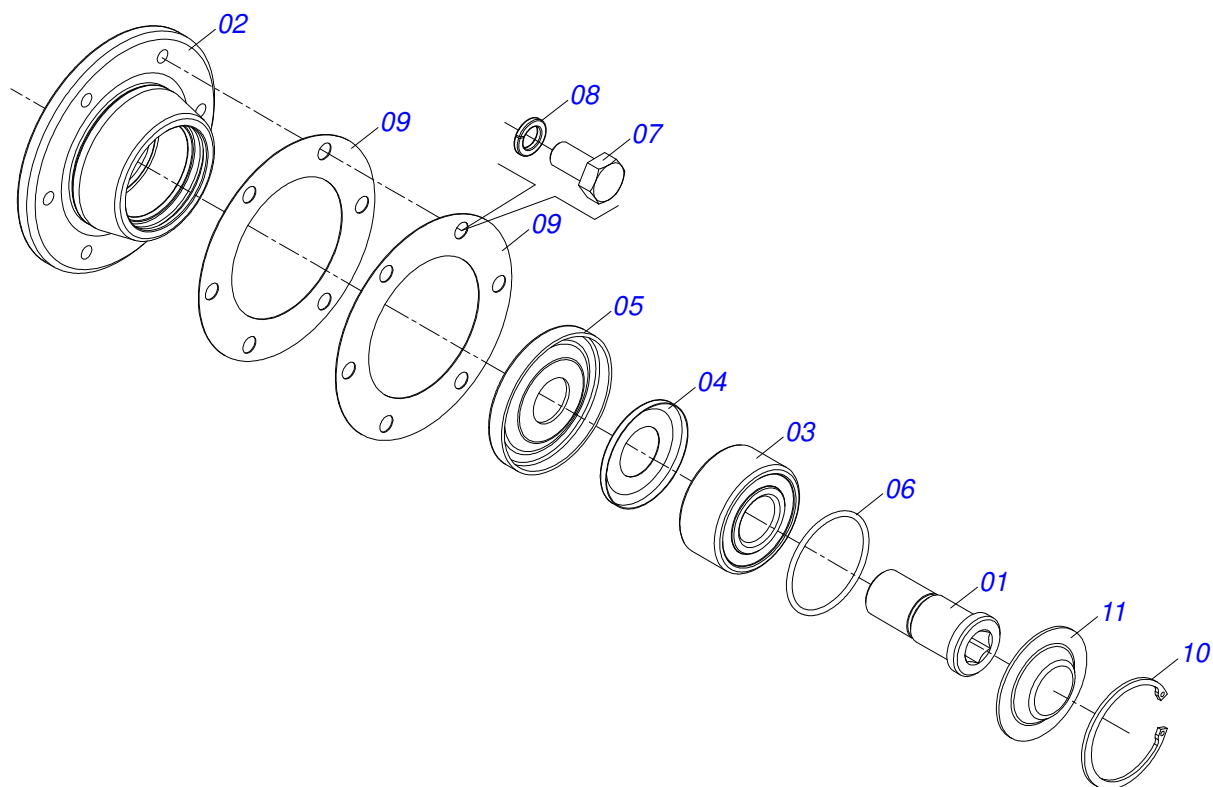


Item	Code	Description	See page	QT
01	0571011151	LEFT DOUBLE DISC HUB		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

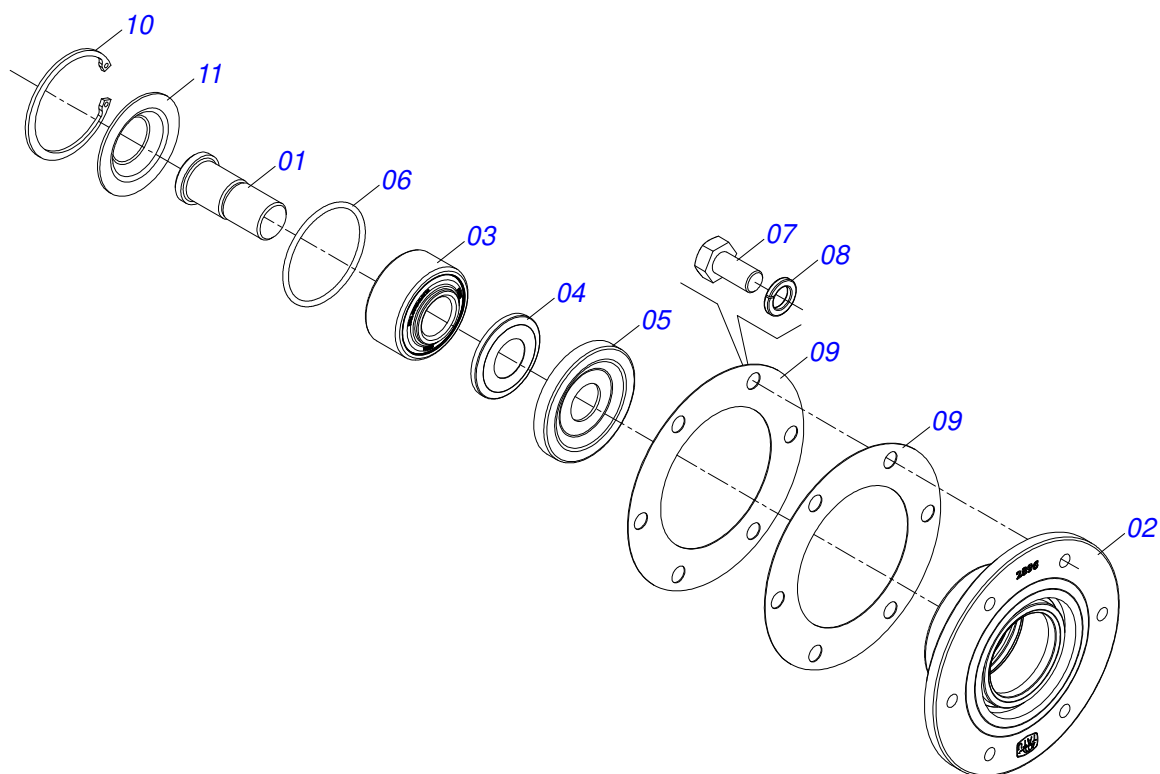


Item	Code	Description	See page	QT
01	0571011150	RIGHT DOUBLE DISC AXLE	01	
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB	01	
03	0503019342	ROLLER BEARING	01	
04	0503034055	CLAMPING RING	01	
05	0511011927	DUST CLOAK	01	
06	0503014679	2-134 O'RING	01	
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN	06	
08	0503010179	LOCK WASHER 5/16 ZN 1K01528	06	
09	0591010493	WASHER DDD FERTILIZER / SEED	02	
10	0503015081	502052 CLAMPING RING (FOR AXLE)	01	
11	0571011152	DOUBLE DISC CAP	01	

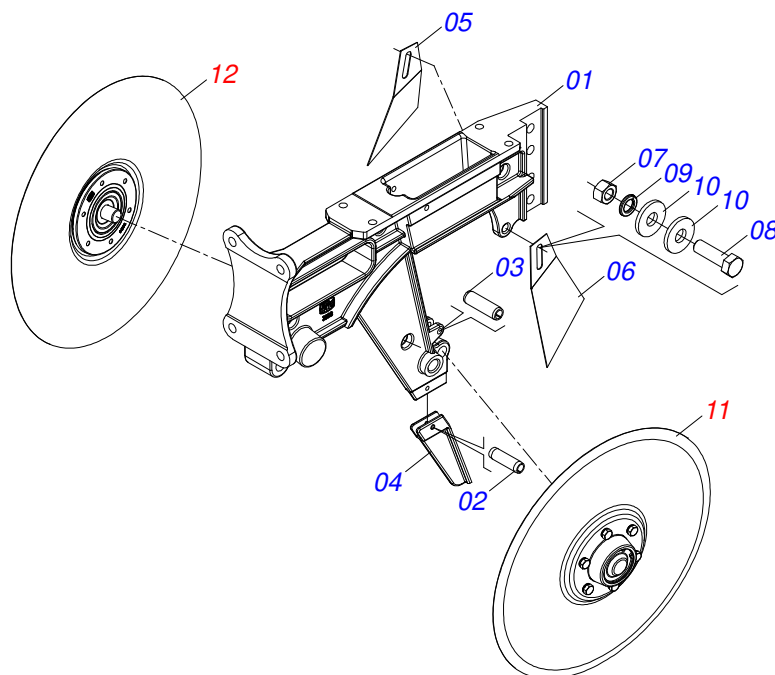


Item	Code	Description	See page	QT
01	0591011772	LEFT DDD BODY		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 155 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 156 FERTILIZER / SEED		01

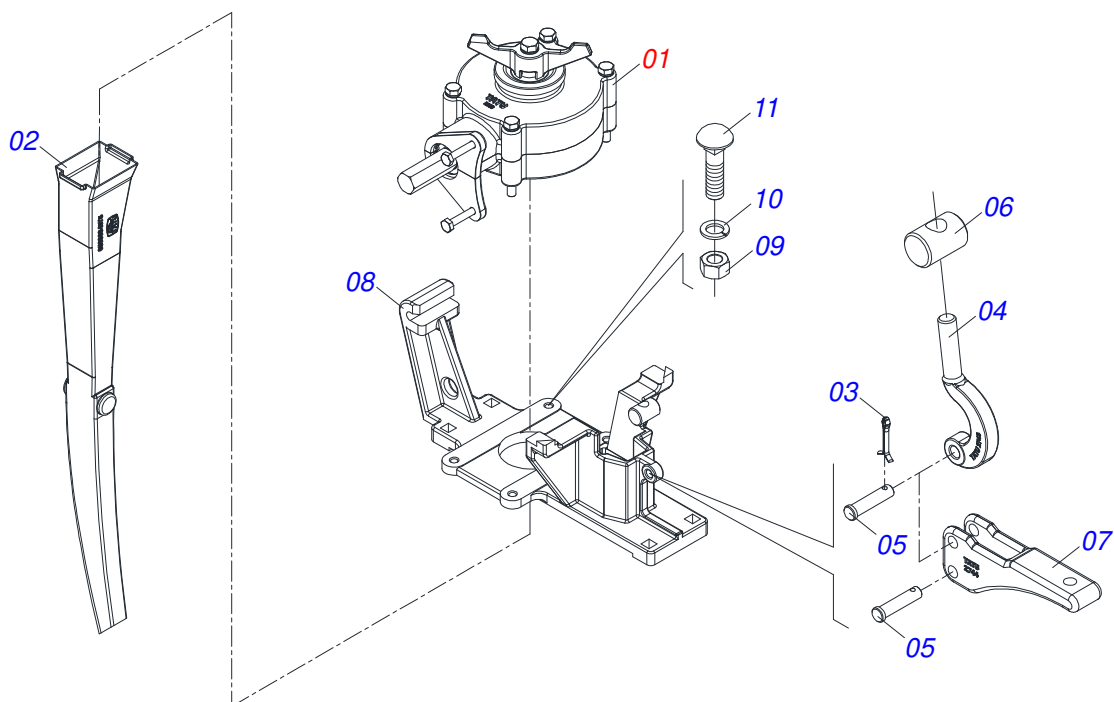


Item	Code	Description	See page	QT
01	0521056639	SEED ROW TRANSMISSION	161	01
02	0503034575	TITANIUM HIGH ROW SEED NOZZLE		01
03	0503010257	1/8" X 1" COTTERPIN		01
04	0502012743	FAST BOLT ASSY		01
05	0571014024	FAST BOLT GUIDE AXLE		02
06	0561019270	FAST BOLT ADJUSTMENT		01
07	0502012744	SPEED LOCK LEVER ASSY		01
08	0502012921	BASE FIXING SYSTEM		01
09	0503010026	3/8" NUT		04
10	0503010025	3/8 SPRING WASHER		04
11	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04

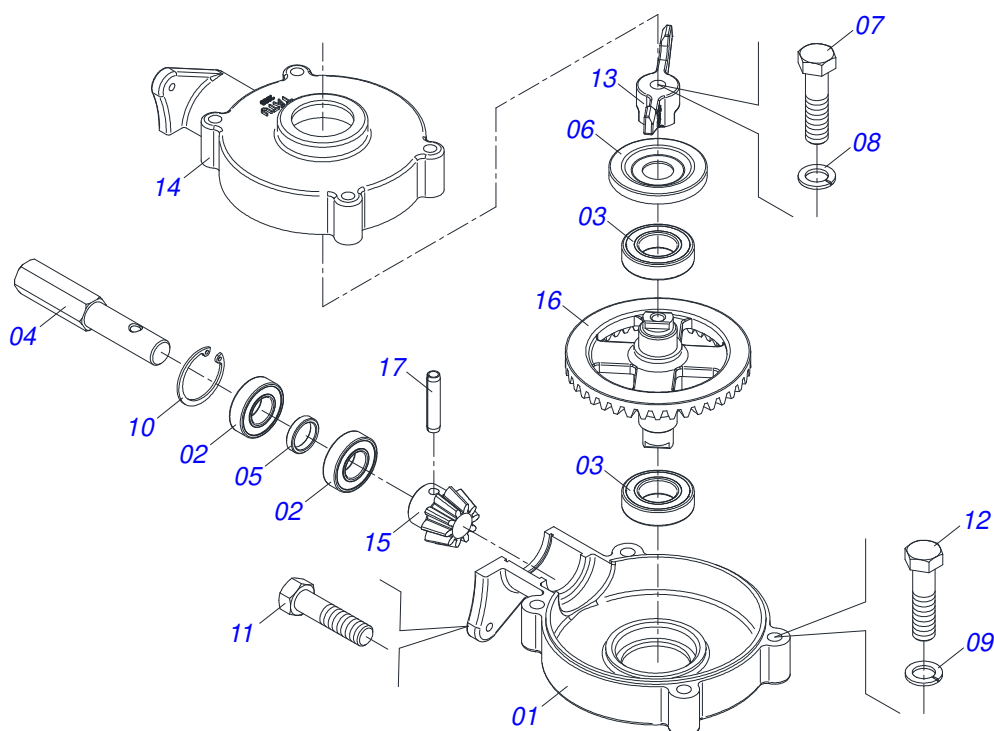


Item	Code	Description	See page	QT
01	0502012932	MINOR SIDE	01	
02	0503017046	BEARING	02	
03	0503011410	ROLLER BEARING	02	
04	0591011321	AXLE GEAR	01	
05	0591011322	SPACER	01	
06	0581019168	DUST CLOAK	01	
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	01	
08	0503010025	3/8 SPRING WASHER	01	
09	0503010179	LOCK WASHER 5/16 ZN 1K01528	04	
10	0503011945	503050 CLAMPING RING (FOR AXLE)	01	
11	0503010420	BOLT	02	
12	0503011053	5/16" X 3" C S 6.5 ZN BOLT	04	
13	0502012919	GRAGGER	01	
14	0502012933	LARGER SIDE	01	
15	0502012930	CONICAL GEAR	01	
16	0502012931	CONICAL GEAR	01	
17	0503010585	0,24" X 1.18" SPRING PIN	01	

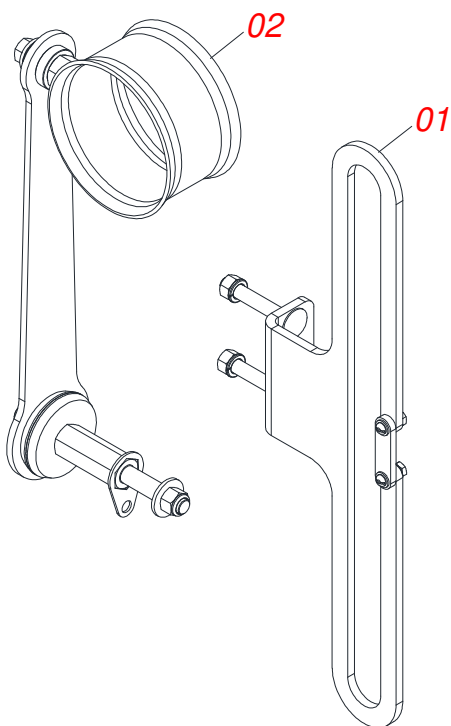


Item	Code	Description	See page	QT
01	0521059683	ENCAPSULATED CHAIN SUPPORT GUIDE	163	01
02	0531052836	CSU SEED CONDUCTOR JOINT SUPPORT	164	01

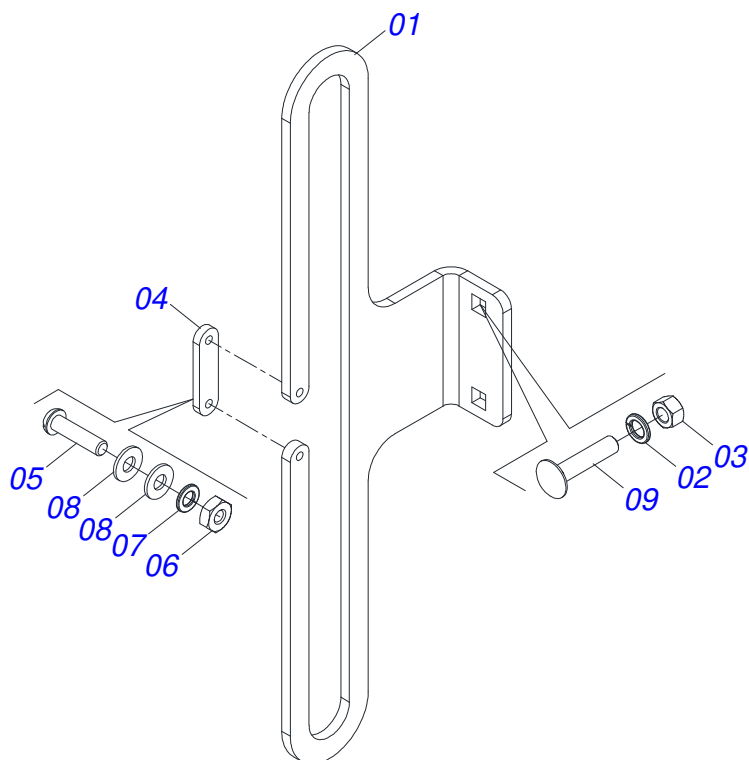


Item	Code	Description	See page	QT
01	0591015754	CHAIN SUPPORT		01
02	0503010025	3/8 SPRING WASHER		02
03	0503010026	3/8" NUT		02
04	0591016329	ENCAPSULATED CHAIN CLOSING		01
05	0503010803	SCREW 3/16 UNC X 3/4 CAF G.2 ZN		02
06	0503010667	3/16" NUT		02
07	0503010668	3/16" SPRING WASHER		02
08	0503010669	FLAT WASHER		04
09	0501011778	3/8" X 2-1/2" BOLT		02

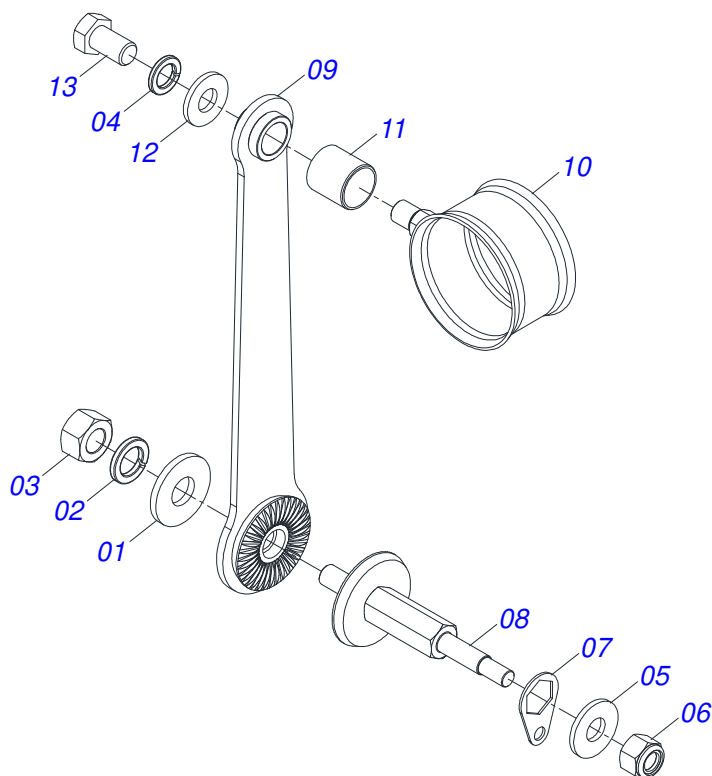


Item	Code	Description	See page	QT
01	0501012140	FLAT WASHER		01
02	0503010027	5/8 SPRING WASHER		01
03	0503010013	5/8 NUT		01
04	0503010019	1/2" SPRING WASHER		01
05	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
06	0503019656	HEXAGONAL NUT		01
07	0591016543	LOCK WASHER ARTICULATOR AXLE BODY		01
08	0531061797	LOWER ADJUSTMENT AXIS		01
09	0531062908	HOSE SUPPORT ARM		01
10	0531062907	ARTICULATOR HOSE		01
11	0513010322	LUBRICANT SLEEVE		01
12	0501210533	FLANGE WASHER		01
13	0503013776	BOLT 1/2 UNC X 7/8 C S G.5 ZN		01

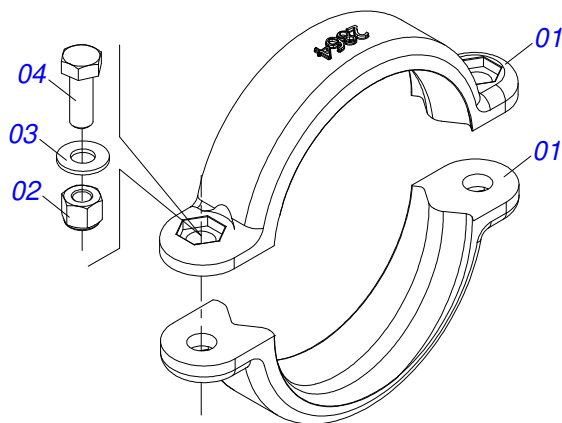


Item	Code	Description	See page	QT
01	1902012864	3 CLAMP		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02

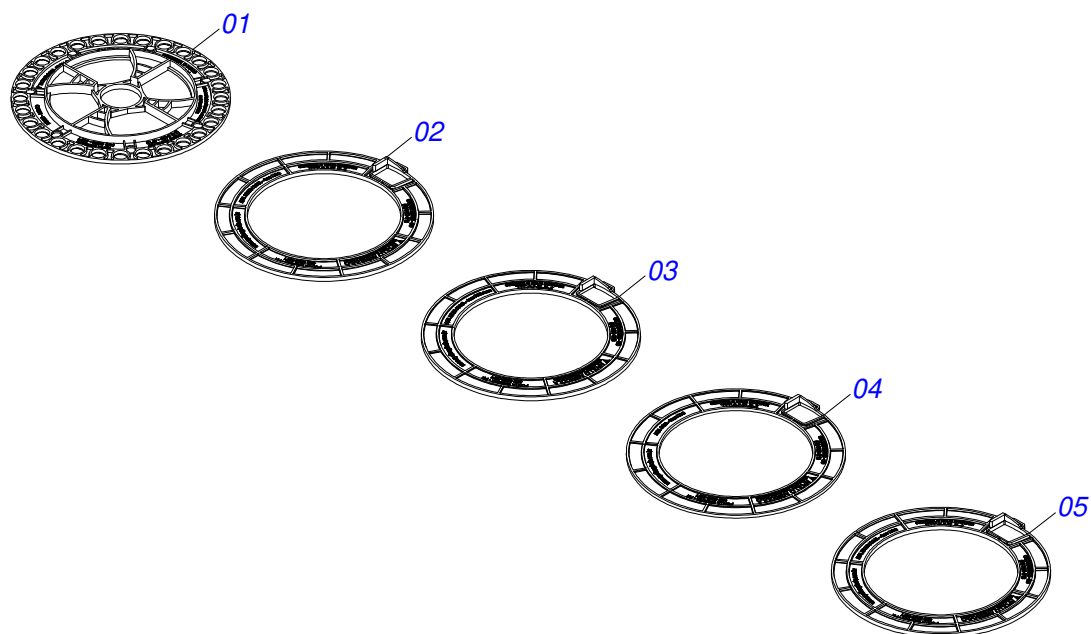

Item	Code	Description	See page	QT
01	0503016204	CORN DISC 12 ORANGE		01
02	0503016398	TITANIUM RING CORN / SOY (YELLOW FLAT)		01
03	0503016399	TITANIUM RING CORN (GREEN)		01
04	0503016400	TITANIUM RING CORN (GREY)		01
05	0503016401	TITANIUM RING CORN (BLUE)		01

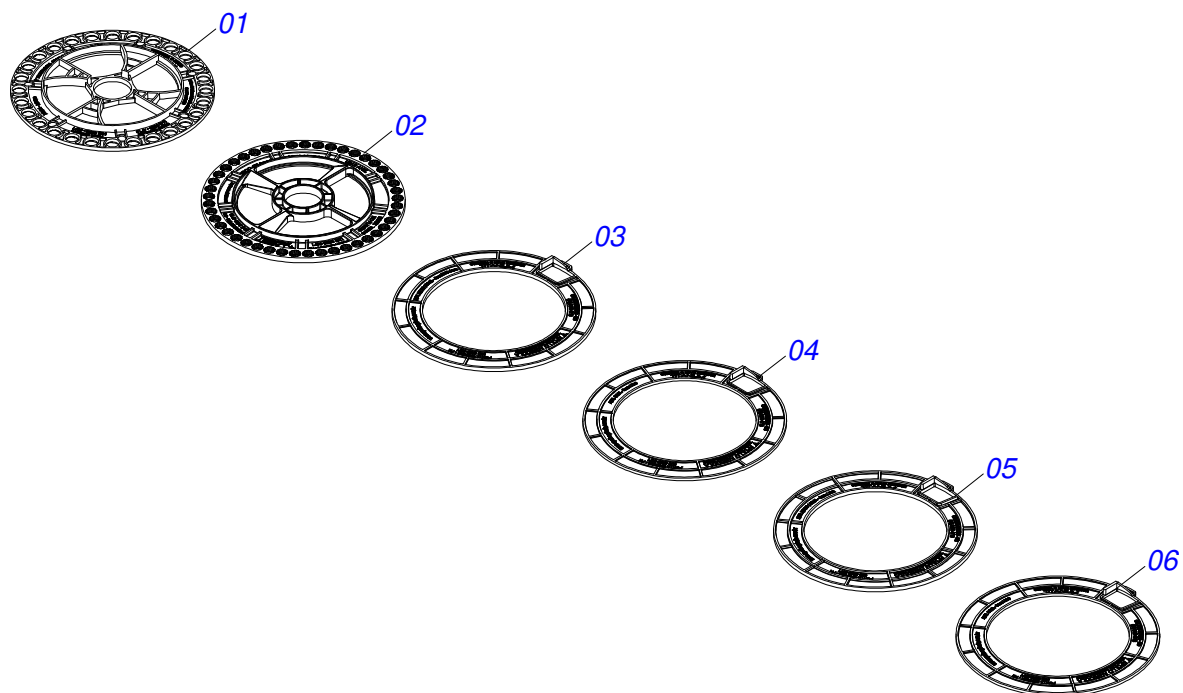

Item	Code	Description	See page	QT
01	0503016217	SOYBEAN SEED DISC 34 OBLONG		01
02	0503016218	DISC OF SOYBEAN		01
03	0503016403	TITANIUM RING FOR SOYBEAN (LILAC)		01
04	0503016404	TITANIUM RING FOR SOYBEAN (PURPLE)		01
05	0503016406	TITANIUM RING FOR SOYBEAN (ORANGE)		01
06	0503016407	TITANIUM RING FOR SOYBEAN		01

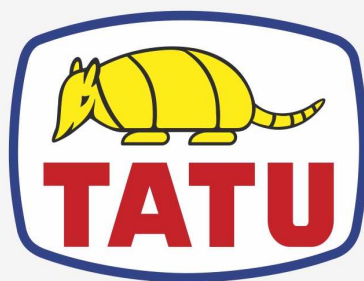

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

