

ROW CROP PLANTERS

COP CERRADO SUPREMA P.P MINI HOPPER - FRAME 7545 - CSU/CBA/APT ISO/MS

Code: 0501093531

Series: S-0419

Revision: 00

Date Revision: MAIO/2023

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111121242	COP CE SUP 7545/15E500 ESPECIAL S-0419

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.

INDEX

0909096714	ASSY FRAME	1
0521056329	ASSY 1510 WHEEL	2
0521056327	WHEEL SUPPORT 1510 MOUNTED 450	3
0521056346	FORK 1510 ASSEMBLED 450	4
0521057477	WHEEL SET WITH TIRE 615	5
0511059705	WHEEL AND TIRE	6
0521057476	MOUNTED CUBE 405	7
0521056330	HYDRAULIC CYLINDER 63.50 X 101.60 X 592 X 1295	8
0521057547	ROD HOSE FIXATION	9
0521058017	ASSY SUPPORT SILO FERTILIZER	10
0521057959	LOWER BASE FIXING SILO FERTILIZER	11
0521057960	TOP BASE FIXING SILO FERTILIZER	12
0521056331	RIGHT SEMI-ASSEMBLED FERTILIZER BOX SUPPORT	13
0501053788	3/4 SQUARE AXLE FASTENER	14
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	15
0521057965	LEFT SEMI-ASSEMBLED FERTILIZER BOX SUPPORT	16
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	17
0521056334	SUPPORT BOX FERTILIZER 5B SEMI-ASSEMBLY LEFT	18
0521056335	SUPPORT BOX FERTILIZER 5B SEMI MOUNTED RIGHT	19
0521051407	FERTILIZER HOPPER FIXER	20
0521056671	SET SINGLE SEED BOX	21
0521056676	SUPPORT CSU C3 1 BOX 8 MOUTH	22
0521056677	SUPPORT CSU 1 BOX 10 MOUTH	23
0531054470	CONDUCTOR ASSY SEED	24
0521056288	PLATFORM SET - 7545	25
0521057695	HYDRAULIC ASSY	26
0521057007	VALVE ASSEMBLY	27
0511052464	FLOW DIVIDING VALVE	28
0521057006	COMMAND BLOCK BLFP2962	29
0501053834	MALE QUICK COUPLER	30
0521056341	ASSY LADDER	31
0511058191	REST ASSY	32
0521057697	MANUAL CANISTER ASSY	33
0521058045	TURBINE SET CSU 7545	34
0521057008	DIVIDER BLOCK FOR 02 TURBINES	35
0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	36
0521056680	SIDE STRAIGHT AIR CONDUCTOR	37
0521056262	CBA ASSY AIR DUCT FIXER SUPPORT	38
0521056678	CENTRAL STRAIGHT 5-BURNER AIR CONDUCTOR	39
0521056674	TURBINE MOUNTED WITH SUPPORT	40
0521056673	TURBINE P.P CSC	41
0521050154	PRECISION PLANTING TURBINE WITH HOLE	42
0521051365	VALVE ASSY	43
0521052549	CLAMP	44
0521058033	SET OF LABELS	45
0521057927	MOUNTED REAR LIGHT	46
0521053672	LIGHTHOUSE ASSY	47
0521052792	MOUNTED REAR LIGHT	48
0521054525	CONTAINER WATER TANK	49
0521054181	TOOL BOX ASSEMBLY	50
0511050644	DRAWBAR ASSY	51
0521057686	FIXING SUPPORT	52
0521057698	CHASSIS LOCKING SUPPORT AND HEADER SUPPORT FIXATION	53
0511055096	TRACTOR HITCH	54




MARCHESAN

INDEX

0511057817	SUPPORT HOSE	55
0501055579	DRAWBAR ESTABILIZER	56
0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER	57
0521058493	ASSY ISO 4C 15L 45/50 MSA	58
0511056972	FILTER HYDAC	59
0521056496	MOTOR EMD 80 WITH BLOCK BLFP2618	60
0521058212	APT MECHANICAL ASSY FERTILIZER / SEED CONTROL	61
0521057272	PROTECTION COVER	62
0521057273	PROTECTION COVER	63
0521057276	COVER MOTOR	64
0511059348	APT ASSY MODULE BOX	65
0909095698	MECHANICAL HYDRAULIC ASSEMBLY APT ISO	66
0521057259	OIL CONDUCTOR FIXATION	67
0521058214	GUTTER SET	68
0909096715	COMPLETE SEED/FERTILIZER ROW	69
0521056240	FRONT SHORT ROW	70
0521056241	FRONT LONG ROW	71
0531052956	ASSEMBLY SEED ROW TRANSMISSION FIXING BEARING	72
0521056941	RIGHT REAR P.P CSU TRANSMISSION/CABLE	73
0521056940	LEFT REAR P.P CSU TRANSMISSION CABLE	74
0521056955	RIGHT DDD ASSY	75
0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	76
0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	77
0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	78
0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	79
0521056956	PRECISION PLANTING CSU CABLE/TRANSMISSION ASSY	80
0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN DISC	81
0521052131	VSET2 DISTRIBUTOR WITH CORN DISC WITHOUT PROTECTION	82
0521056954	LEFT DDD ASSY	83
0521055053	DEPTH/COMPACTOR SYSTEM - SPCRR	84
0521055065	ASSY DEPTH / COMPACTOR	85
0501056769	DEPTH WHEELS REGULATOR ASSY	86
0521055033	SEMI-ASSEMBLED COMPACTOR BODY	87
0521055054	LEFT ARM WITH SLEEVE	88
0521055066	RIGHT ARM WITH SLEEVE	89
0521055068	RAYED WHEEL CENTER CLOSED	90
0521055055	HUB WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	91
0521054990	LEFT COMPACTOR WHEEL	92
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	93
0521055017	RIGHT COMPACTOR WHEEL	94
0521056069	SEMI-ASSEMBLED SHORT FERTILIZER ROW	95
0521056066	SEMI-ASSEMBLED LONG FERTILIZER ROW	96
0521056070	DC 20 ASSY	97
0521053248	20" DISC BLADE HUB WITH CONICAL BEARING	98
0521053697	DISC BLADE HUB	99
0521051447	FRONT ASSY ROW BEARING	100
0521057552	ASSY SCARIFYING ROD	101
0521053946	SCARING ROD	102
0531050237	SEED CONDUCTOR FIXER 3 CSU RIGHT	103

ASSY FRAME

0909096714

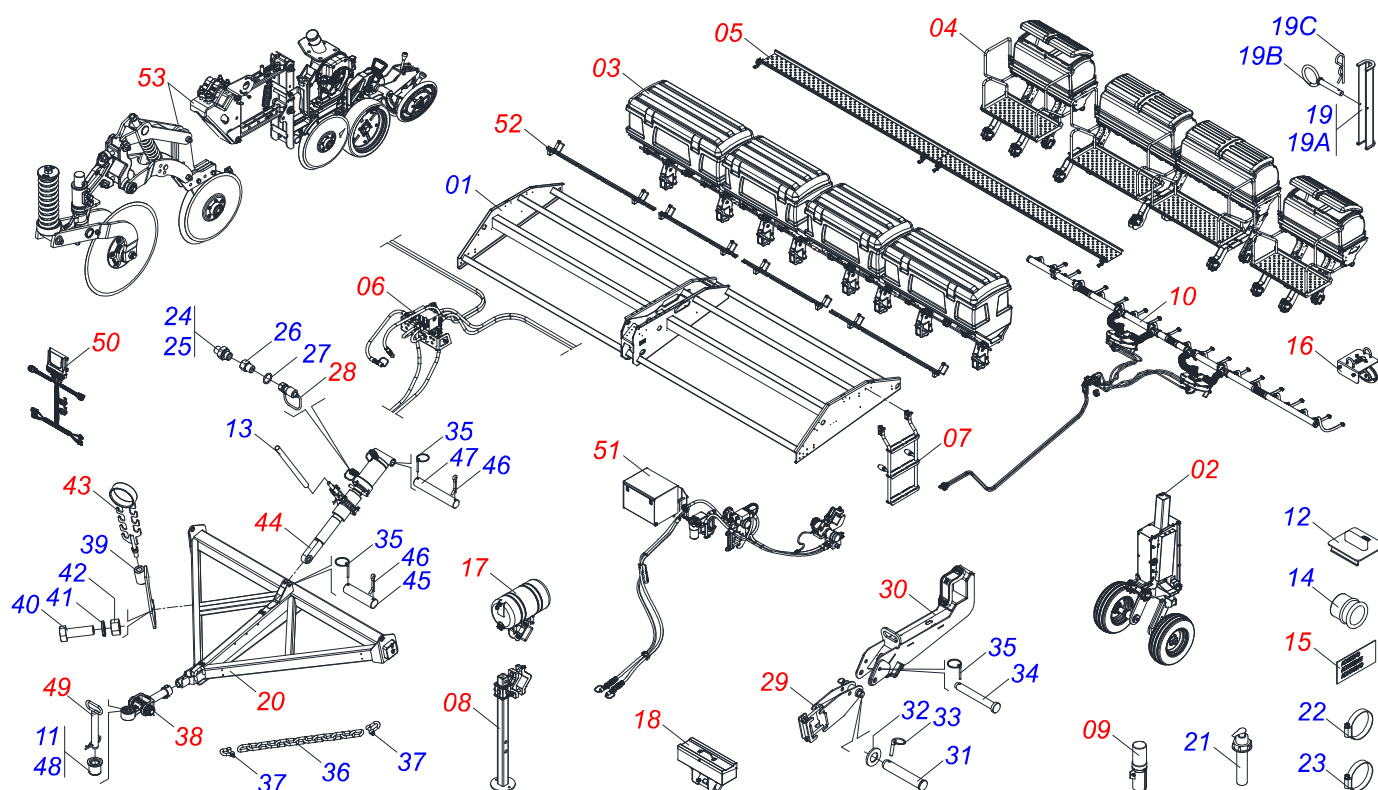


Item	Code	Description	See page	QT
01	0531060133	FRAME 7545		01
02	0521056329	ASSY 1510 WHEEL	2	02
03	0521058017	ASSY SUPPORT SILO FERTILIZER	10	01
04	0521056671	SET SINGLE SEED BOX	21	01
05	0521056288	PLATFORM SET - 7545	25	01
06	0521057695	HYDRAULIC ASSY	26	01
07	0521056341	ASSY LADDER	31	02
08	0511058191	REST ASSY	32	01
09	0521057697	MANUAL CANISTER ASSY	33	01
10	0521058045	TURBINE SET CSU 7545	34	01
11	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
12	0503032624	FERTILIZER HOPPER GUTTER		07
13	0521018501	TURNBUCKLE LEVER		01
14	0503034867	AIR DITRIBUTOR PUMP		07
15	0521058033	SET OF LABELS	45	01
16	0521057927	MOUNTED REAR LIGHT	46	01
17	0521054525	CONTAINER WATER TANK	49	01
18	0521054181	TOOL BOX ASSEMBLY	50	01
19	0521056914	LOCK FOR MOUNTED TRANSPORT		02
19A	0531060393	TRANSPORT LOCK		01
19B	0531060392	PIN LOCK TRANSPORT		01
19C	0503030168	HITCH PIN CLIP		01
20	0511050644	DRAWBAR ASSY	51	01
21	0503019262	SOAP DISH VACUUM		01
22	0503010246	CLAMP		15
23	0503010243	CLAMP		15
24	0581013729	NIPLE 1/2 NPT		01
25	0571015343	NIPLE 1 / 2NPT X 3 / 4NPT		01
26	0541010080	TERMINAL R.1 / 2 NPT		01
27	0503010045	O'RING		01
28	0501053834	MALE QUICK COUPLER	30	01

ASSY FRAME

0909096714

Item	Code	Description	See page	QT
29	0521057686	FIXING SUPPORT	52	06
30	0521057698	CHASSIS LOCKING SUPPORT AND HEADER SUPPORT FIXATION	53	06
31	0591012930	COUPLING SHAFT		06
32	0571019034	FLANGE WASHER AXLE		06
33	0503030430	7/16 X 2" PIN LOCK		06
34	0541012484	COUPLING SHAFT		02
35	0503030119	LOCK PIN		04
36	0503014120	CHAIN		01
37	0503014321	CABLE STEEL SHACKLE		02
38	0511055096	TRACTOR HITCH	54	01
39	0531060395	ANTENNA SUPPORT		01
40	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
41	0503010019	1/2" SPRING WASHER		02
42	0503010060	1/2 UNC G.5 ZN HEX NUT		02
43	0511057817	SUPPORT HOSE	55	01
44	0501055579	DRAWBAR ESTABILIZER	56	01
45	0571019950	COUPLING SHAFT		01
46	0503010523	1/4" X 2" SPLIT PIN		02
47	0591012931	AXLE JUNCTION 34.93 X 322		01
48	0501212237	HITCH SLEEVE ARTICULATED 85 X 35 MM		01
49	0511053179	TRACTOR COUPLING SHAFT		01
50	0521058493	ASSY ISO 4C 15L 45/50 MSA	58	01
51	0521058212	APT MECHANICAL ASSY FERTILIZER / SEED CONTROL	61	01
52	0521058214	GUTTER SET	68	01
53	0909096715	COMPLETE SEED/FERTILIZER ROW	69	15

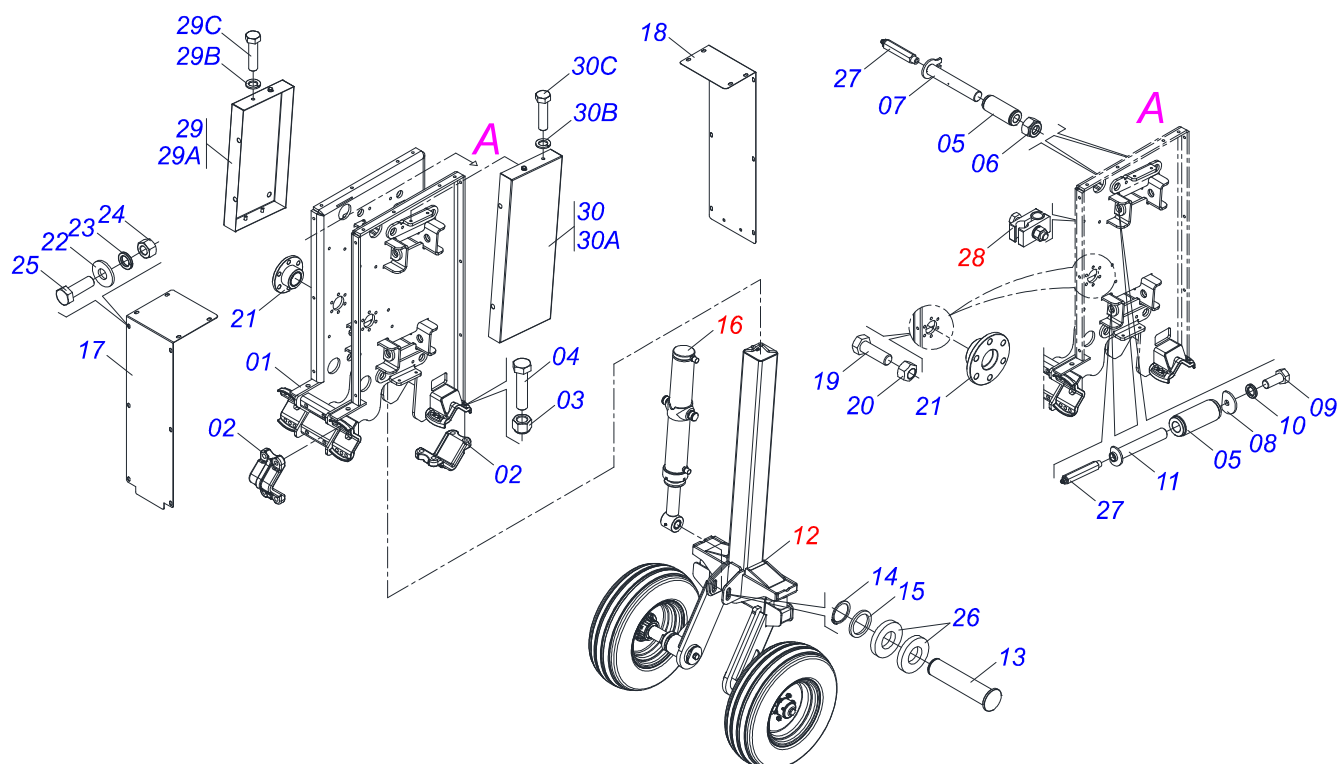


Item	Code	Description	See page	QT
01	0531060120	RODE TOWER		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		04
03	0503010811	5/8" UNF SELF ADJUSTING NUT		16
04	0503017857	BOLT 5/8 UNF 4		16
05	0501110985	FRONT ROLLER		08
06	0503010290	SELF ADJUSTING 1.1/2" UNF NUT		04
07	0531060121	ROLLER GUIDE AXLE		04
08	0591011016	AXLE LOCK		04
09	0503011267	5/8 UNC X 1.1/2 C S G.5 ZN BOLT		04
10	0503010027	5/8 SPRING WASHER		04
11	0531060122	ROLLER GUIDE AXLE		04
12	0521056327	WHEEL SUPPORT 1510 MOUNTED 450	3	01
13	0591011019	AXIS		01
14	0503010391	501038 CLAMPING RING (FOR AXLE)		01
15	0591011020	WASHER		01
16	0521056330	HYDRAULIC CYLINDER 63.50 X 101.60 X 592 X 1295 8		01
17	0591011021	FRONT COVER		01
18	0591011022	REAR PLATE		01
19	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		12
20	0503012136	NUT 1/2 NF		12
21	0501110984	MOUNTED FLANGE		02
22	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		20
23	0503010019	1/2" SPRING WASHER		20
24	0503010060	1/2 UNC G.5 ZN HEX NUT		20
25	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		20
26	0501012694	FLAT WASHER		02
27	0503010829	GREASE FITTING		08
28	0521057547	ROD HOSE FIXATION	9	02
29	0521057542	ASSY RIGHT SIDE PROTECTION COVER		01
29A	0591012529	COVER RIGHT SIDE PROTECTION		01
29B	0503010019	1/2" SPRING WASHER		04


**ASSY 1510 WHEEL**

0521056329


Item	Code	Description	See page	QT
29C	0503013776	BOLT 1/2 UNC X 7/8 C S G.5 ZN		04
30	0521057543	ASSY LEFT SIDE PROTECTION COVER		01
30A	0591012530	LEFT SIDE PROTECTION COVER		01
30B	0503010019	1/2" SPRING WASHER		04
30C	0503013776	BOLT 1/2 UNC X 7/8 C S G.5 ZN		04

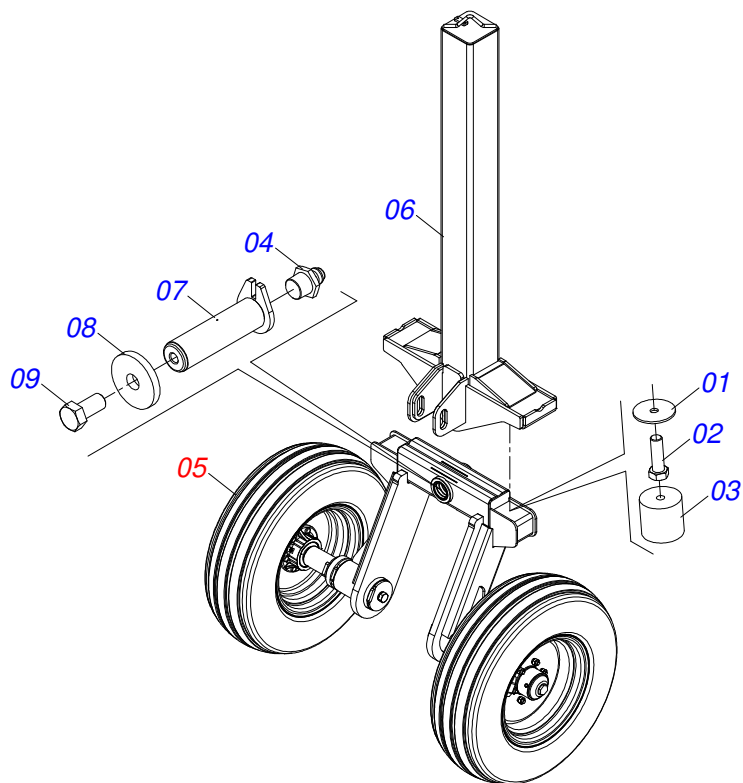


Item	Code	Description	See page	QT
01	0571013284	17.5 X 90 X 4.75 FLAT WASHER		02
02	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		02
03	0591010992	FRAME SUPPORT		02
04	0503010002	1800 GREASE FITTING		01
05	0521056346	FORK 1510 ASSEMBLED 450	4	01
06	0531060119	ROD FORK ARTICULATOR		01
07	0531060141	ARTICULATOR AXIS		01
08	0591011057	WASHER		01
09	0503011250	1" X 2" BOLT		01

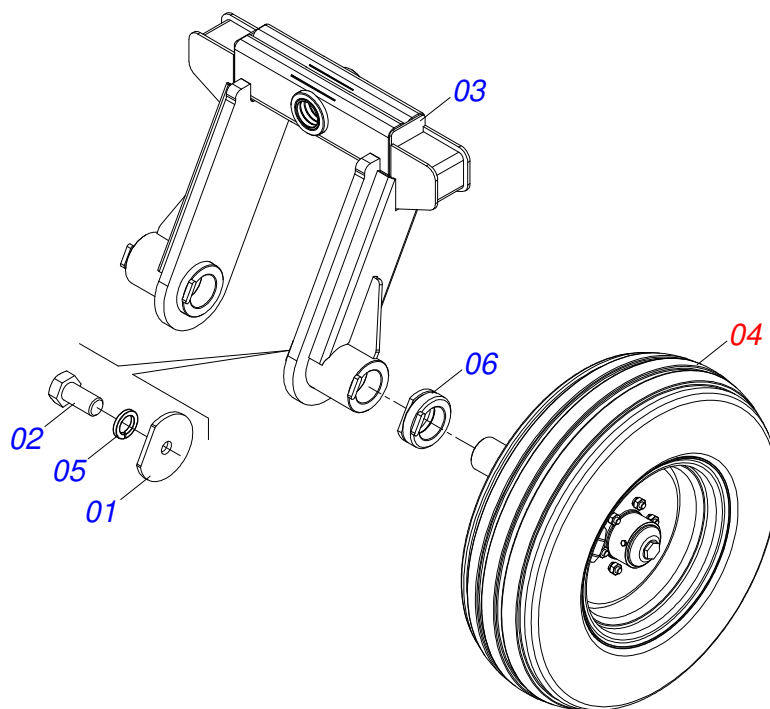


Item	Code	Description	See page	QT
01	0591011056	WHEEL AXLE FIXING WASHER		02
02	0503011250	1" X 2" BOLT		02
03	0501110986	ROD SUPPORT BUSHING 771		01
04	0521057477	WHEEL SET WITH TIRE 615	5	02
05	0503010012	1" SPRING WASHER		02
06	0531060577	GLOVE SUPPORT AXLE ROD		02

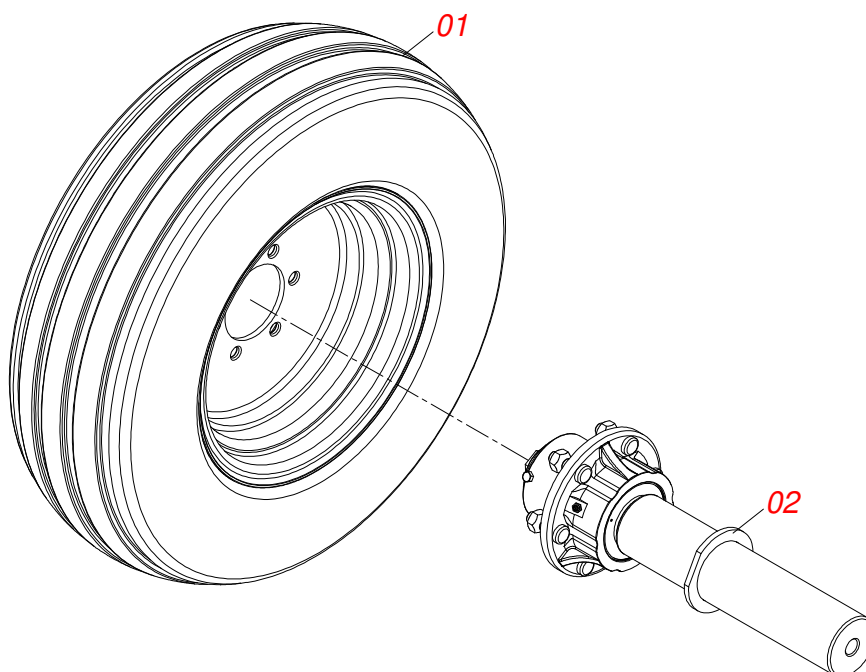


Item	Code	Description	See page	QT
01	0511059705	WHEEL AND TIRE	6	01
02	0521057476	MOUNTED CUBE 405	7	01

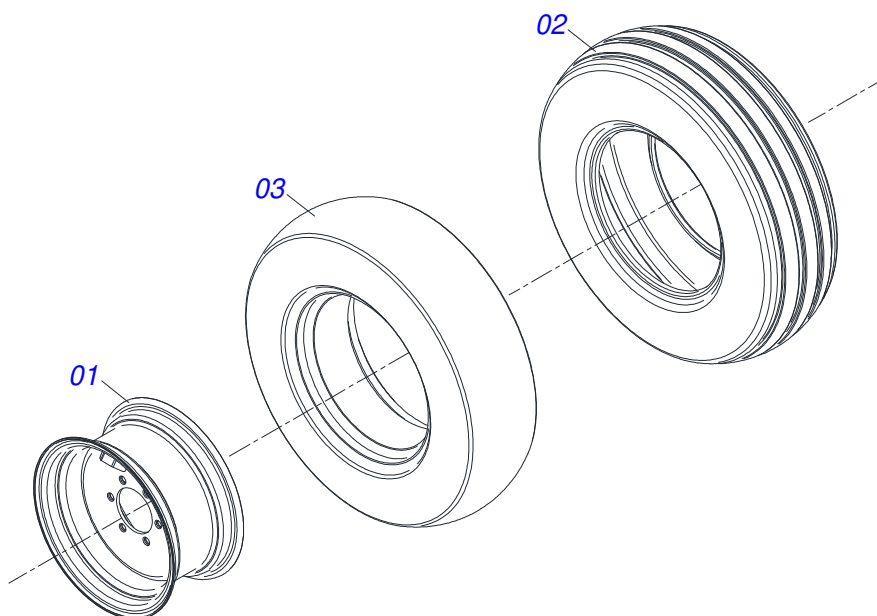

Item	Code	Description	See page	QT
01	0503062602	WHEEL		01
02	0503015547	10.5 10L TIRE		01
03	0503015549	10,5 INNER TIRE		01

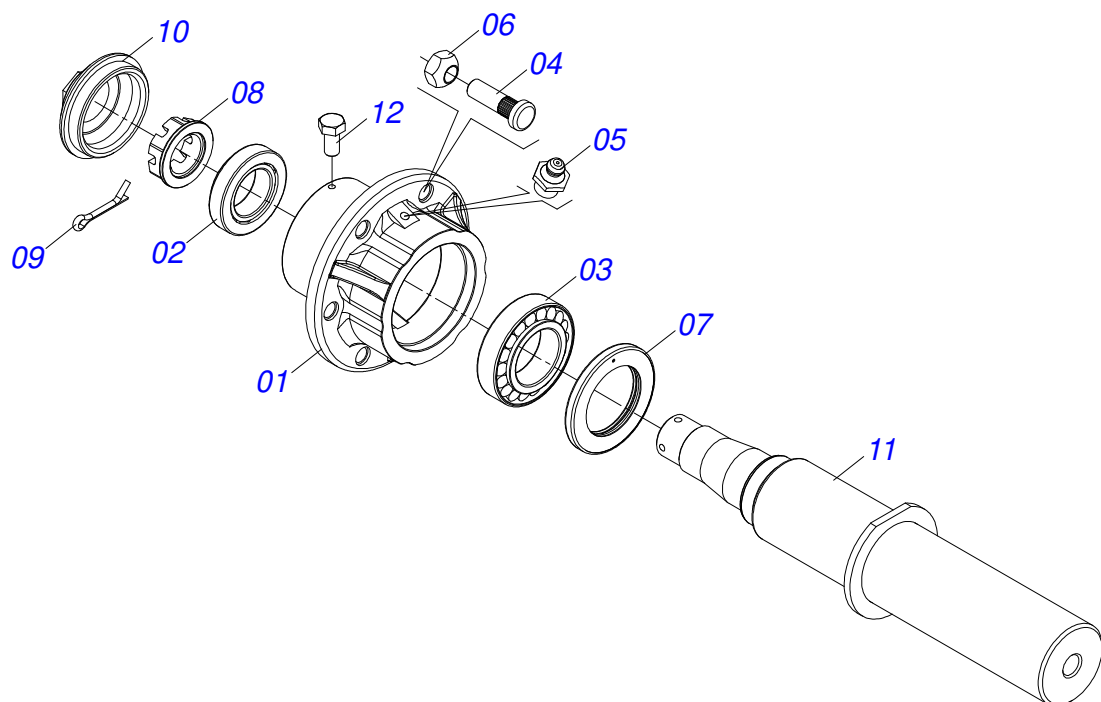


Item	Code	Description	See page	QT
01	0502011389	BOX		01
02	0503010006	32210 ROLLER BEARING		01
03	0503010005	32212 ROLLER BEARING		01
04	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
05	0503010002	1800 GREASE FITTING		01
06	0503010064	5/8 UNF CONIC NUT		06
07	0503011866	SEAL 00573-B WITH HOLE		01
08	0501010888	1.3/4" 2.5/16" CASTLE NUT		01
09	0503010010	1/4" X 2.1/2" COTTERPIN		01
10	0502020593	COVER		01
11	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		01
12	0531060576	LARGER WHEEL AXLE		01

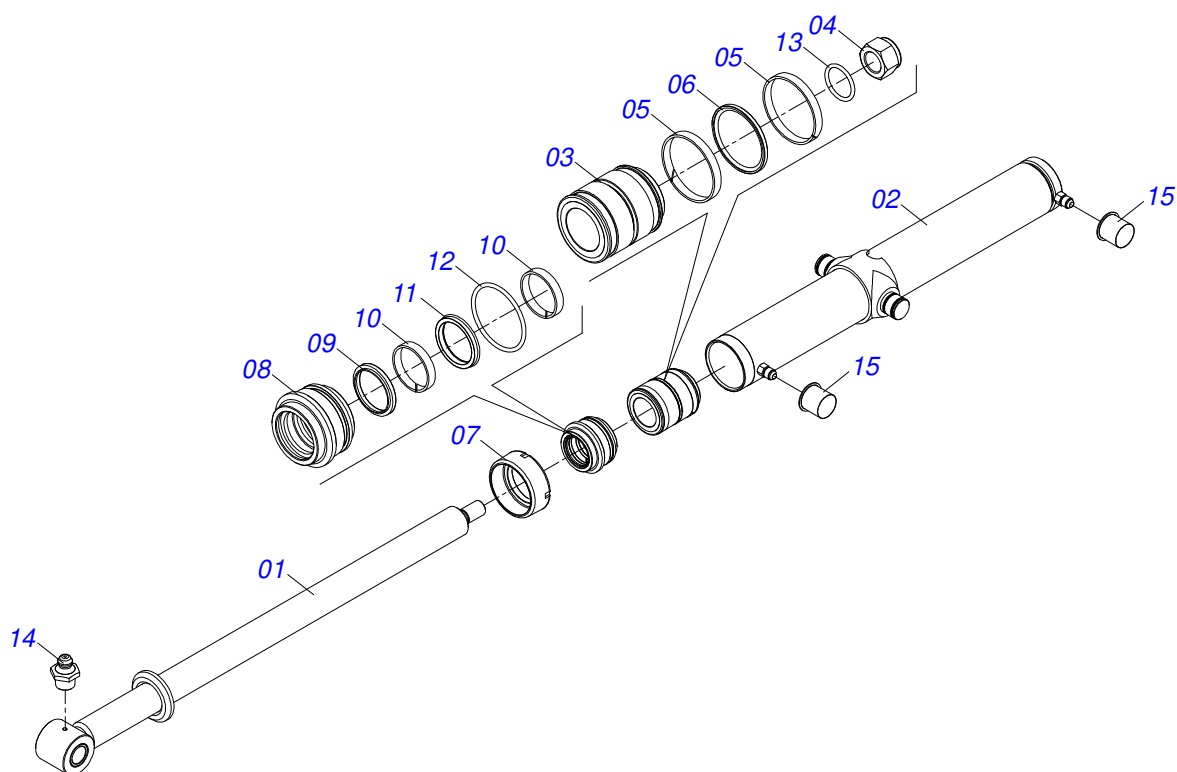


Item	Code	Description	See page	QT
01	0531060124	CYLINDER ROD 63.50 / 63.45 X 1030		01
02	0531060123	CASE 101,60 X 900,5		01
03	0551016446	101.6 X 63.5 PISTON		01
04	0503010817	1.1/4" SELF LOCKING NUT		01
05	0503010994	W2-4000-500 PK RING G.E		02
06	0503012725	GASKET		01
07	0551010932	MOBILE COVER		01
08	0551016459	RING SUPPORT 2.1/2		01
09	0503010287	D-2500 SCRAPER RING		01
10	0503010971	W2-2750-500 PK RING G.I		02
11	0503010288	PACKING 2500-2500-375-B		01
12	0503010338	2-342 N 3006-9B O'RING		01
13	0503010345	2-218 N 3006-9B O'RING		01
14	0503010002	1800 GREASE FITTING		01
15	0503030387	PLUG		02

ROD HOSE FIXATION


0521057547

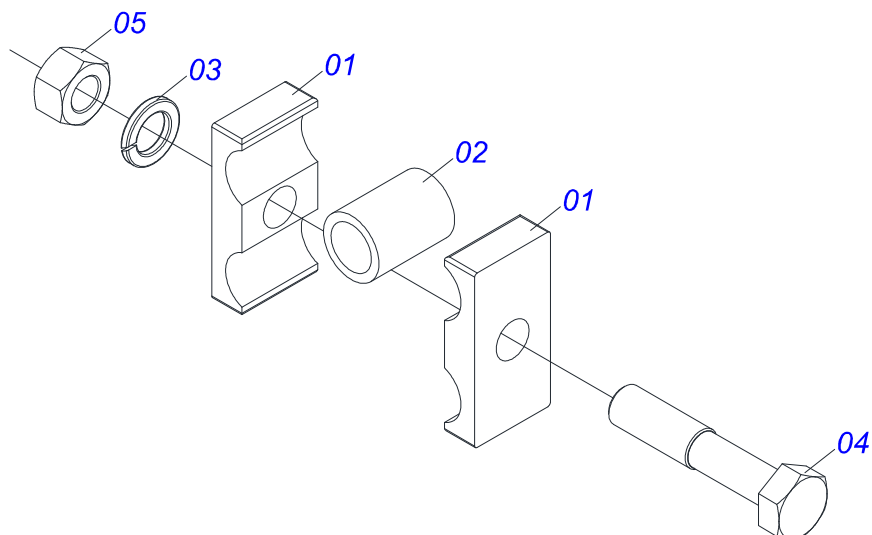


Item	Code	Description	See page	QT
01	0502010477	HOSE CLAMP		02
02	0581018419	SUPPORT		01
03	0503010019	1/2" SPRING WASHER		01
04	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

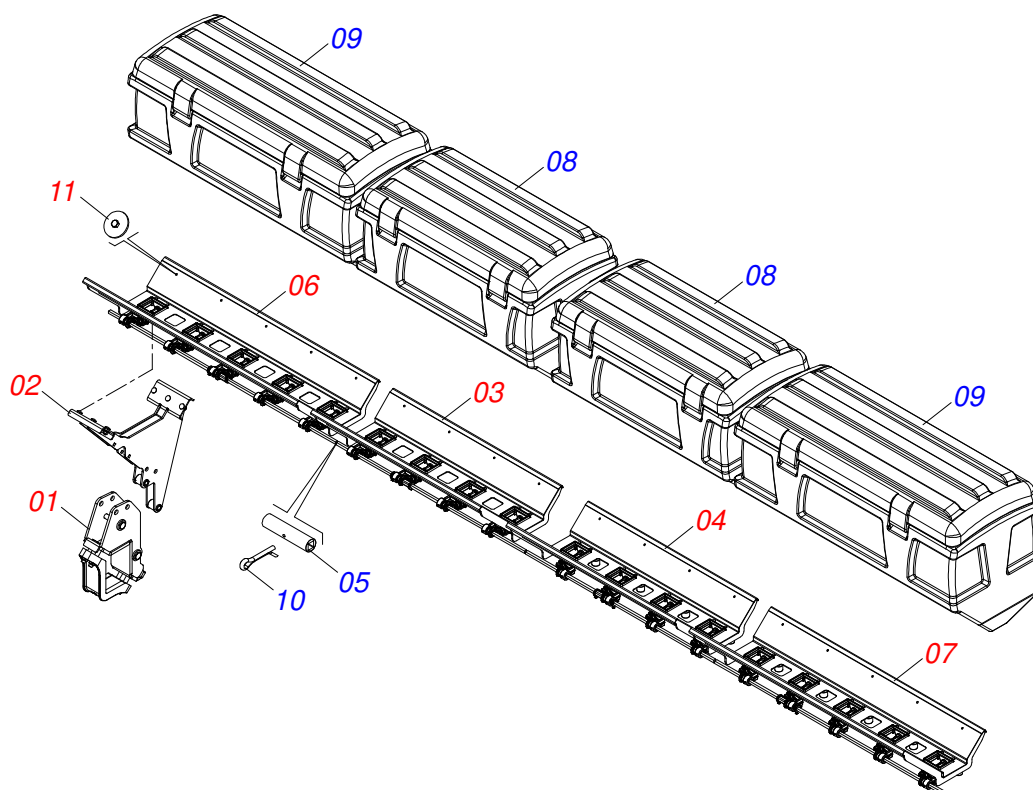


Item	Code	Description	See page	QT
01	0521057959	LOWER BASE FIXING SILO FERTILIZER	11	08
02	0521057960	TOP BASE FIXING SILO FERTILIZER	12	08
03	0521056331	RIGHT SEMI-ASSEMBLED FERTILIZER BOX SUPPORT	13	01
04	0521057965	LEFT SEMI-ASSEMBLED FERTILIZER BOX SUPPORT	16	01
05	0502012007	SQUARE SLEEVE		03
06	0521056335	SUPPORT BOX FERTILIZER 5B SEMI MOUNTED RIGHT	19	01
07	0521056334	SUPPORT BOX FERTILIZER 5B SEMI-ASSEMBLY LEFT	18	01
08	0503062968	SILO FERTILIZER 4B		02
09	0503063013	SILO FERTILIZER 5B		02
10	0503010571	1/4" X 1.1/2 COTTERPIN		03
11	0521051407	FERTILIZER HOPPER FIXER	20	54

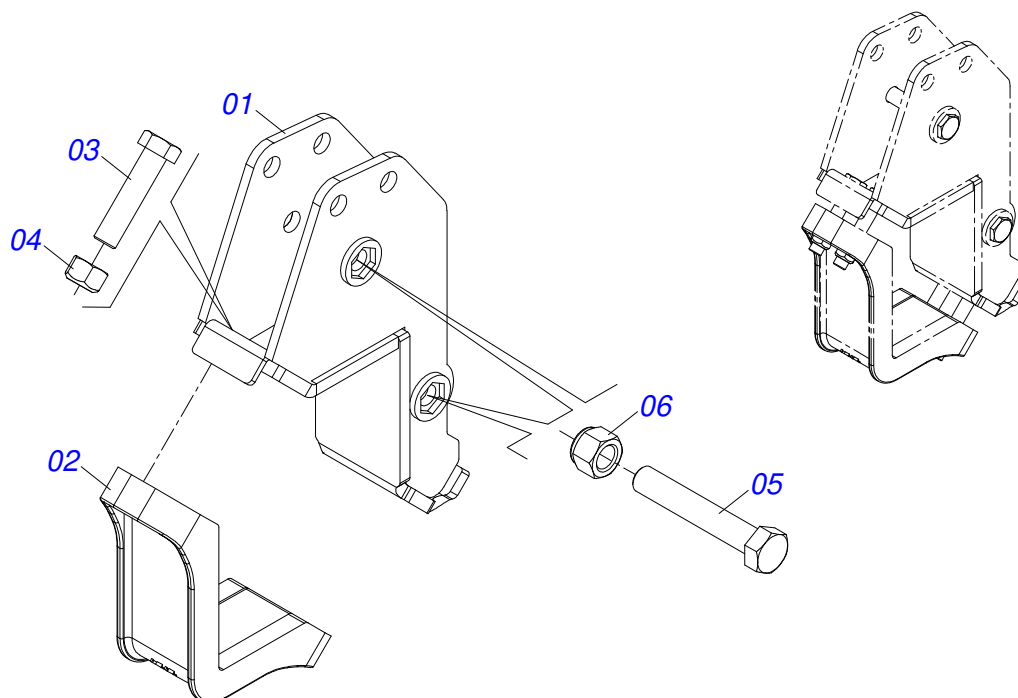


Item	Code	Description	See page	QT
01	0531060105	FERTILIZER FIXING BASE SUPPORT		01
02	1902012724	FERTILIZER LINE FIXER		01
03	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0503016485	BOLT 3/4		02
06	0503010152	3/4" SELF LOCKING NUT		02

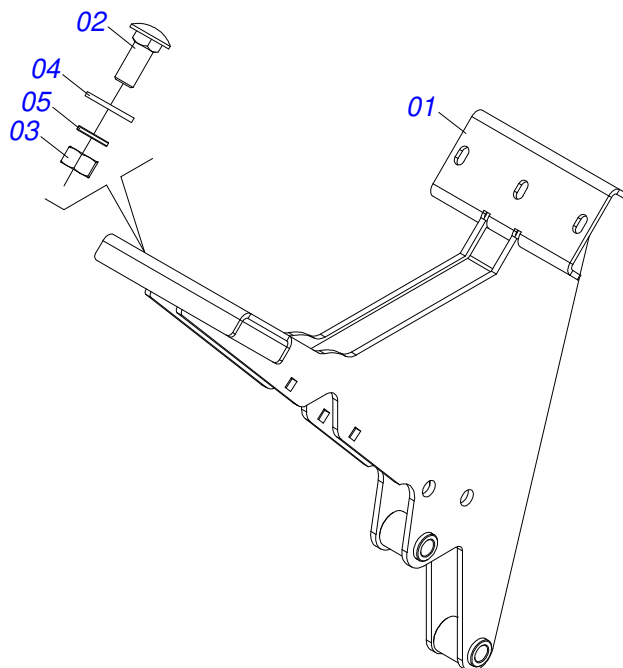


Item	Code	Description	See page	QT
01	0531060095	SUPPORT		01
02	0503014734	BOLT		06
03	0503010060	1/2 UNC G.5 ZN HEX NUT		06
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
05	0503010019	1/2" SPRING WASHER		06

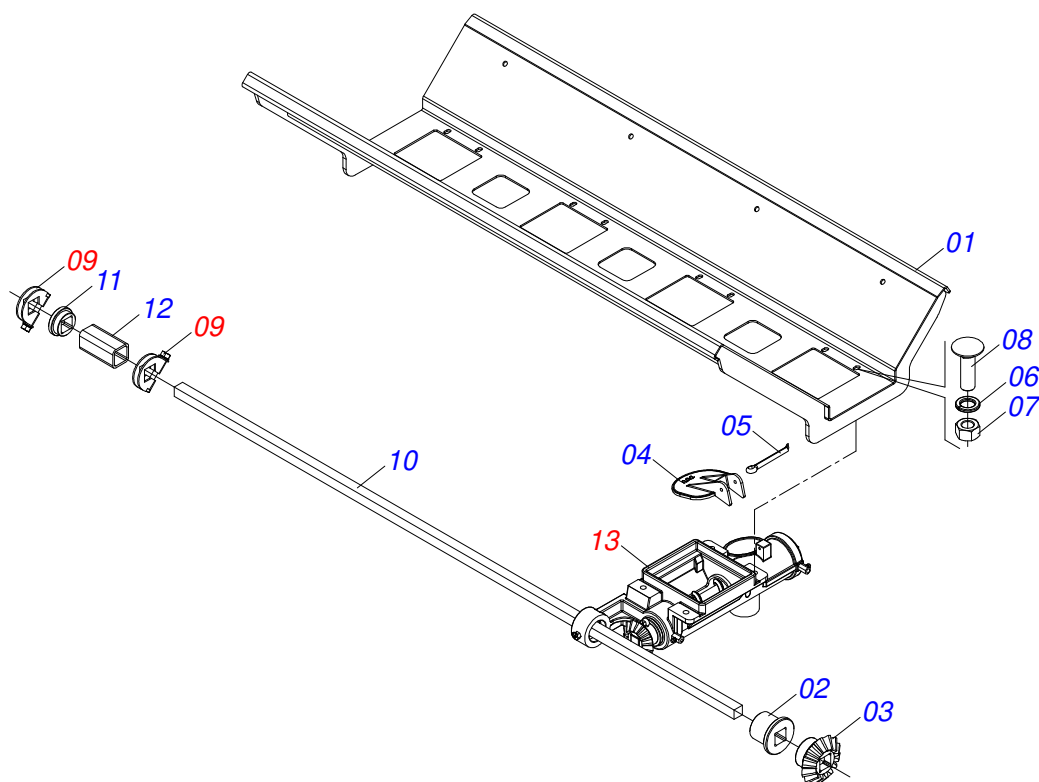


Item	Code	Description	See page	QT
01	0531060126	FIXATION BASE 4B		01
02	0503030275	AGRICULTURAL BEARING		04
03	0502012990	CONICA 14Z SQUARE GEAR		04
04	0503034396	FERTILIZER SIDE COVER		04
05	0503010362	1/8 X 1.1/4 COTTERPIN		04
06	0503010025	3/8 SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0501010942	3/8" X 1-1/4" BOLT		16
09	0501053788	3/4 SQUARE AXLE FASTENER	14	02
10	0591011136	SQUARE SHAFT 3/4 X 1675		01
11	0503030303	SUPPORT WASHER		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	15	04

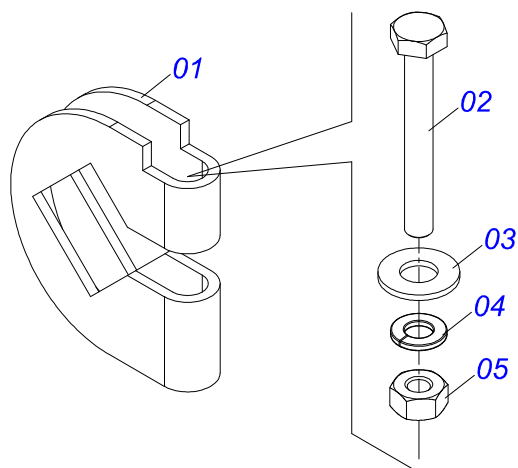

Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

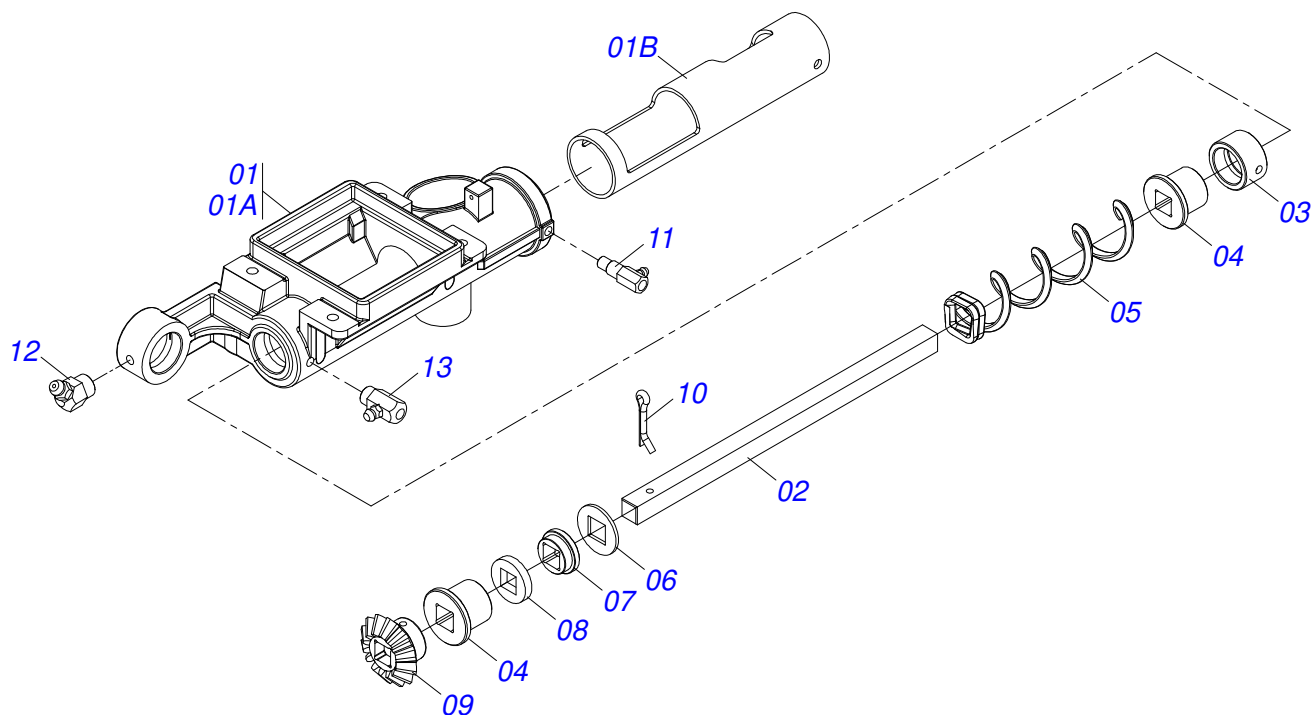


Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" SPLIT PIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

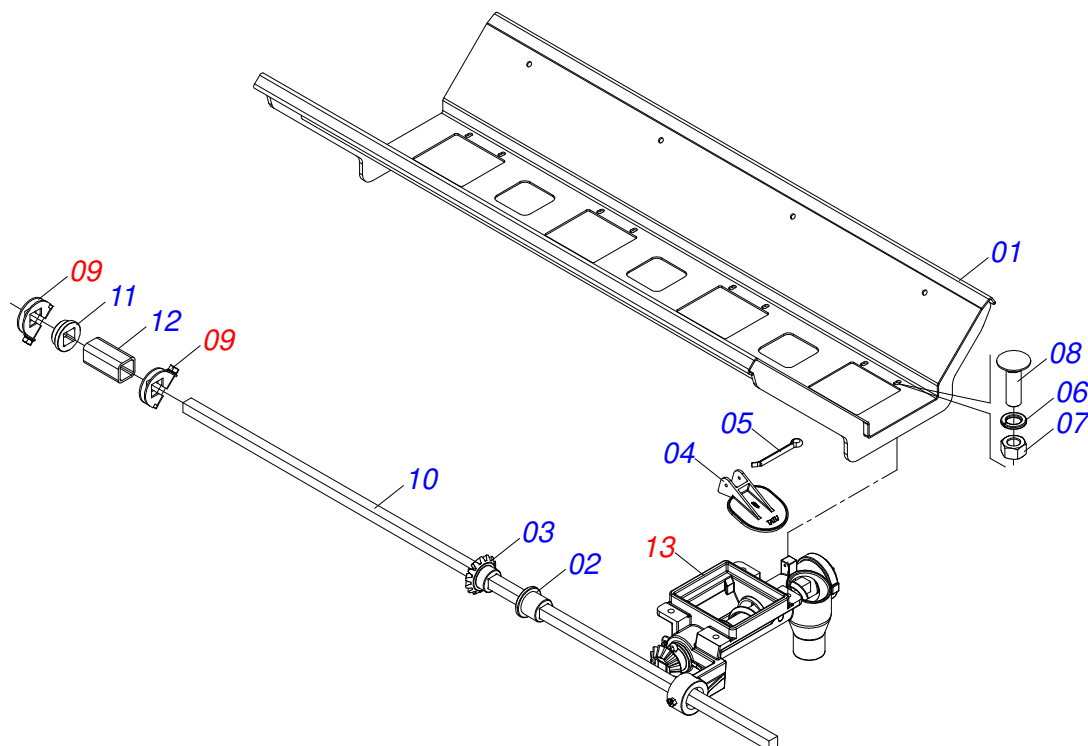


Item	Code	Description	See page	QT
01	0531060126	FIXATION BASE 4B		01
02	0503030275	AGRICULTURAL BEARING		04
03	0502012990	CONICA 14Z SQUARE GEAR		04
04	0503034396	FERTILIZER SIDE COVER		04
05	0503010362	1/8 X 1.1/4 COTTERPIN		04
06	0503010025	3/8 SPRING WASHER		16
07	0503010026	3/8" NUT		16
08	0501010942	3/8" X 1-1/4" BOLT		16
09	0501053788	3/4 SQUARE AXLE FASTENER	14	02
10	0591011136	SQUARE SHAFT 3/4 X 1675		01
11	0503030303	SUPPORT WASHER		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	17	04

LEFT SIDE FERTILIZER DISTRIBUTOR


0511051558

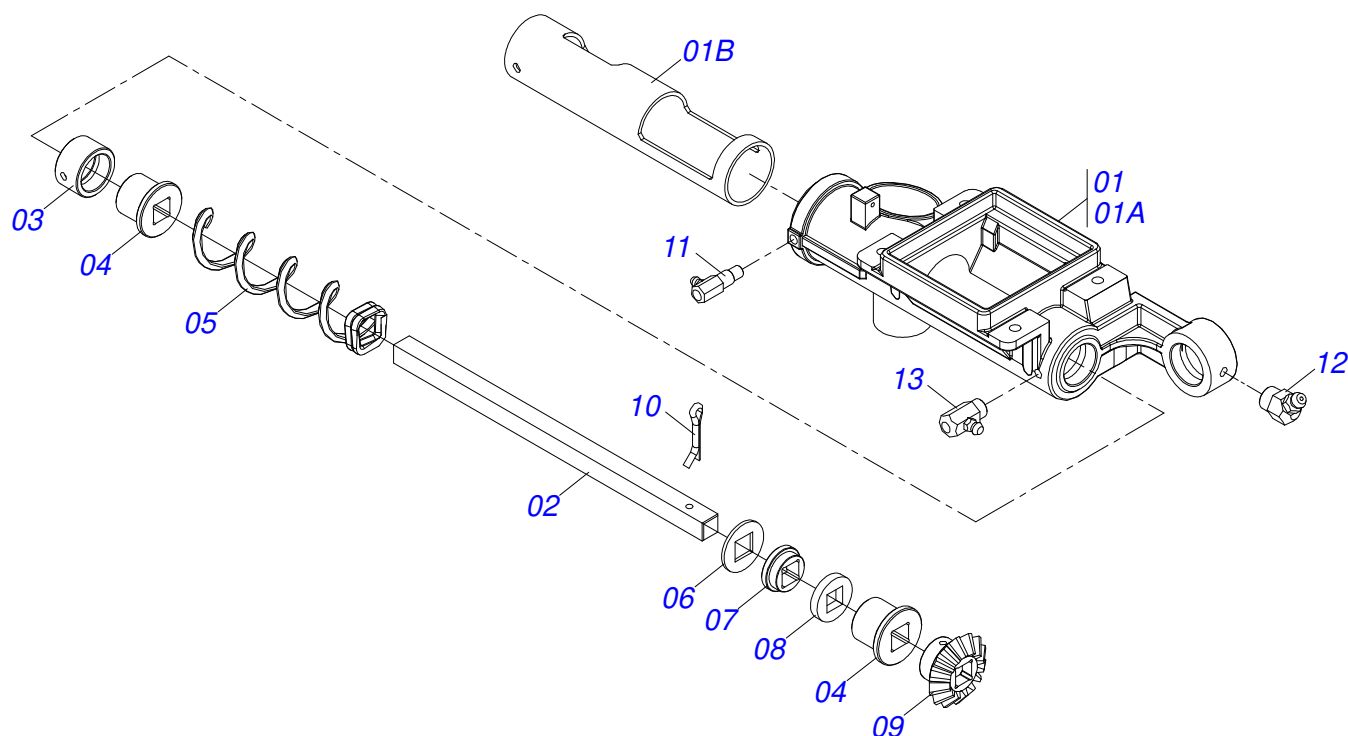


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" SPLIT PIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

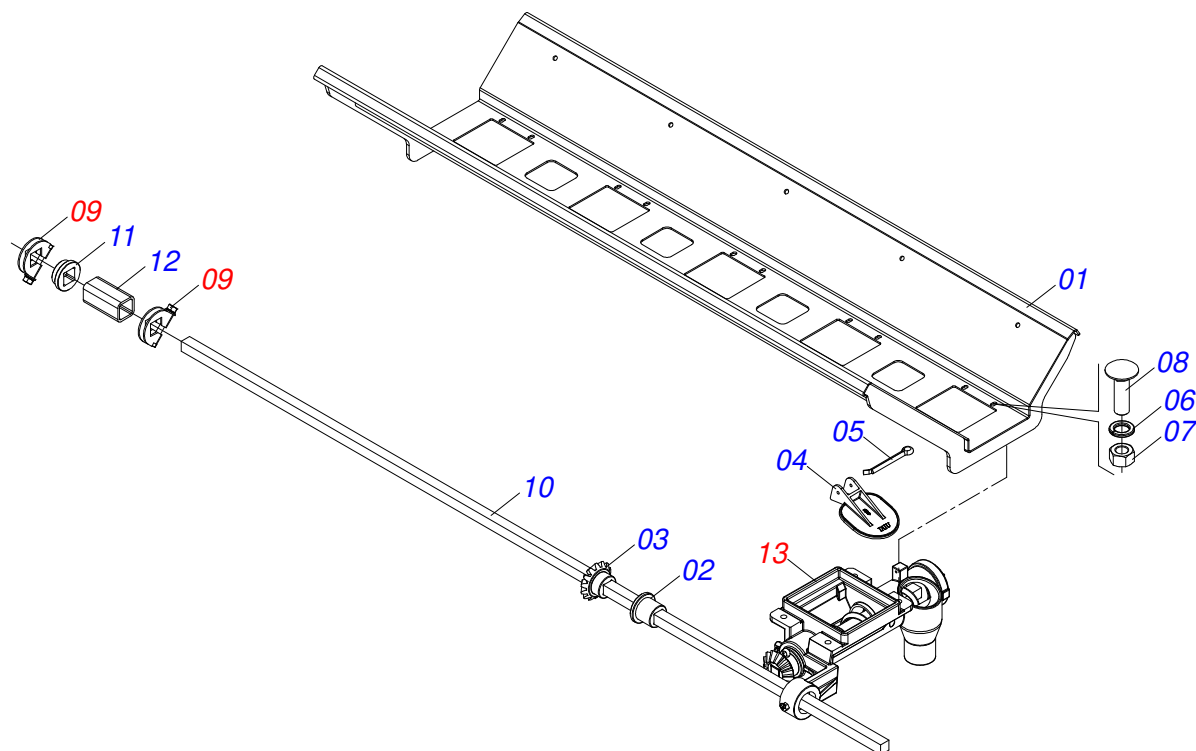


Item	Code	Description	See page	QT
01	0531060125	FIXING BASE 5B		01
02	0503030275	AGRICULTURAL BEARING		05
03	0502012990	CONICA 14Z SQUARE GEAR		05
04	0503034396	FERTILIZER SIDE COVER		05
05	0503010362	1/8 X 1.1/4 COTTERPIN		05
06	0503010025	3/8 SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0501010942	3/8" X 1-1/4" BOLT		20
09	0501053788	3/4 SQUARE AXLE FASTENER	14	02
10	0591011137	SQUARE SHAFT 3/4 X 2020		01
11	0503030303	SUPPORT WASHER		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	17	05

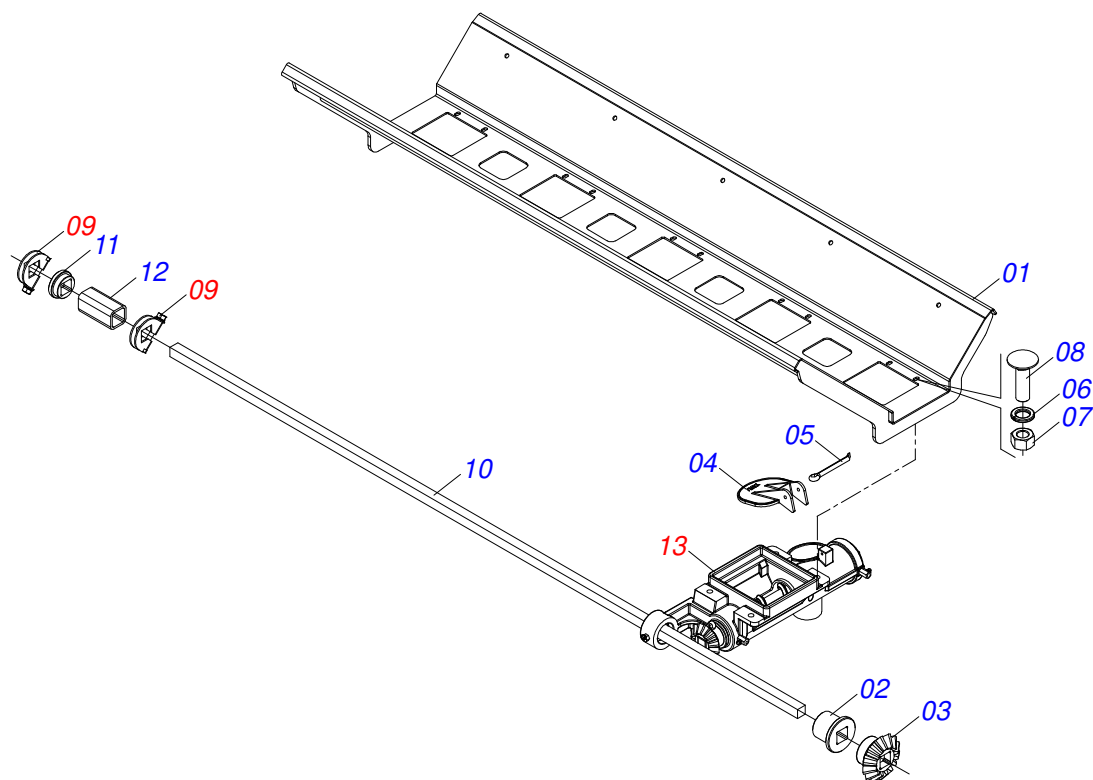


Item	Code	Description	See page	QT
01	0531060125	FIXING BASE 5B		01
02	0503030275	AGRICULTURAL BEARING		05
03	0502012990	CONICA 14Z SQUARE GEAR		05
04	0503034396	FERTILIZER SIDE COVER		05
05	0503010362	1/8 X 1.1/4 COTTERPIN		05
06	0503010025	3/8 SPRING WASHER		20
07	0503010026	3/8" NUT		20
08	0501010942	3/8" X 1-1/4" BOLT		20
09	0501053788	3/4 SQUARE AXLE FASTENER	14	02
10	0591011137	SQUARE SHAFT 3/4 X 2020		01
11	0503030303	SUPPORT WASHER		01
12	0551018055	22,65 X 60 SLEEVE		01
13	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	15	05

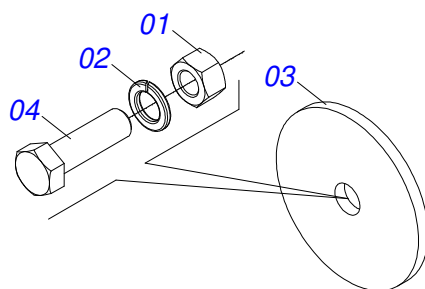


Item	Code	Description	See page	QT
01	0503012531	3/8" INOX NUT		01
02	0503012535	3/8" SPRING WASHER		01
03	0571019051	FIXER HOPPER WASHER		01
04	0503013751	3/8 UNC X 1.1/4 BOLT		01

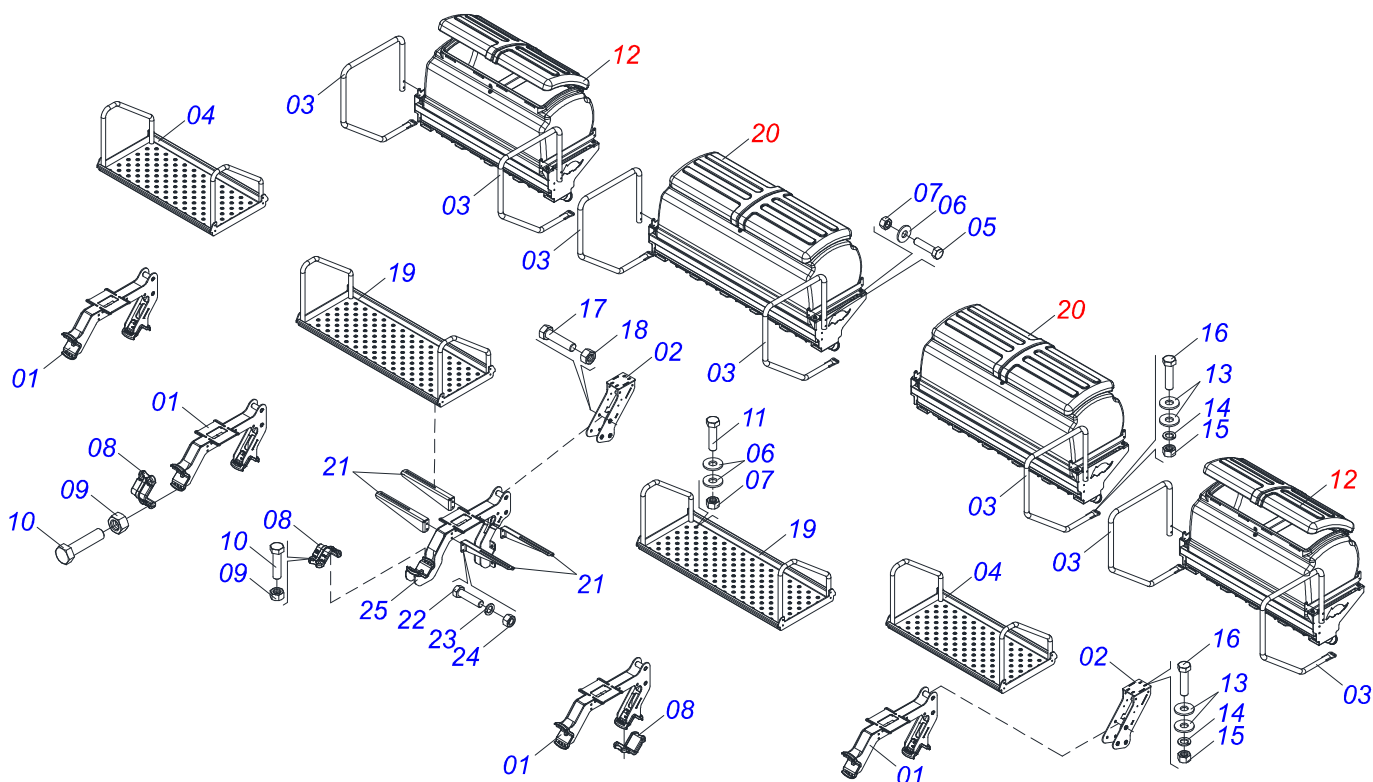


Item	Code	Description	See page	QT
01	0531060250	FIXING SUPPORT TOWER		06
02	0531060251	SUPPORT TOWER SUPPORT		07
03	0531060259	JOINT UPPER HANDRAIL		07
04	0531060261	PLATFORM 1200 SET		02
05	0503011179	3/8" X 2-1/4" BOLT		14
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		46
07	0503013357	3/8 SELF-ADJUSTING NUT		30
08	0502012789	FIXER SUPPORT FERTILIZER ROW		13
09	0503010811	5/8" UNF SELF ADJUSTING NUT		52
10	0503017960	5/8" X 3-12" BOLT		52
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
12	0521056676	SUPPORT CSU C3 1 BOX 8 MOUTH	22	02
13	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		42
14	0503010019	1/2" SPRING WASHER		21
15	0503010060	1/2 UNC G.5 ZN HEX NUT		21
16	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		21
17	0503011198	C3/4" X 6" SCREW		14
18	0503011255	3/4" LOCK NUT		14
19	0531060260	PLATFORM 1500 CSU SET		02
20	0521056677	SUPPORT CSU 1 BOX 10 MOUTH	23	02
21	0591011351	MOBILE SUPPORT LOWER PLATFORM		04
22	0501011643	3/8 X 1" BOLT		08
23	0503010025	3/8 SPRING WASHER		08
24	0503010026	3/8" NUT		08
25	0531060249	TOWER FIXING SUPPORT CSU LINE		01

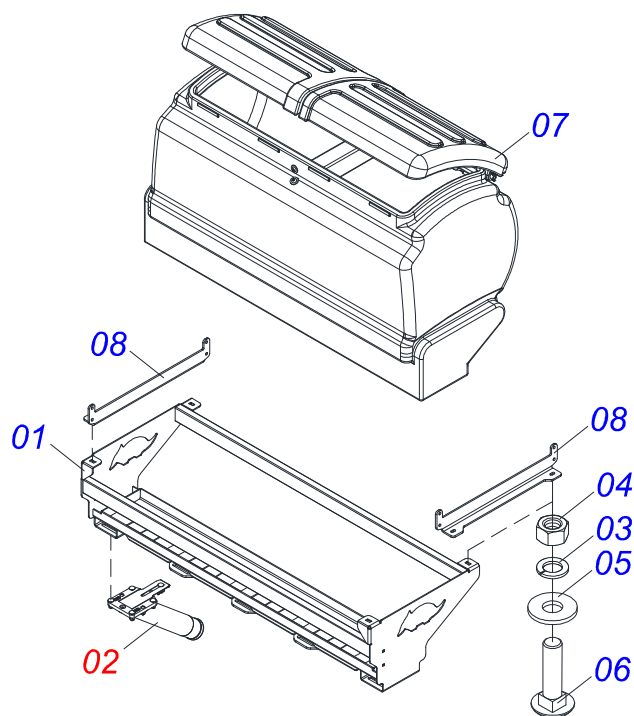


Item	Code	Description	See page	QT
01	0531060257	SUPPORT CSU 8/4 MOUTH		01
02	0531054470	CONDUCTOR ASSY SEED	24	04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
06	0501011643	3/8 X 1"BOLT		04
07	0503062464	ASSY FERTILIZER HOPPER		01
08	0591011361	SEED SILO FIXING BODY		02

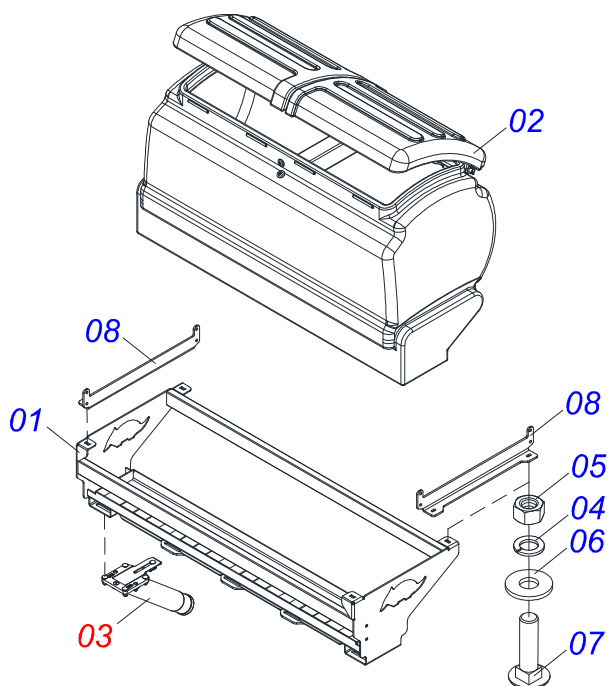

Item	Code	Description	See page	QT
01	0531060258	SUPPORT CSU 10/5 MOUTH		01
02	0503062587	FERTILIZER HOPPER ASSY		01
03	0531054470	CONDUCTOR ASSY SEED	24	05
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
07	0501011643	3/8 X 1"BOLT		04
08	0591011361	SEED SILO FIXING BODY		02

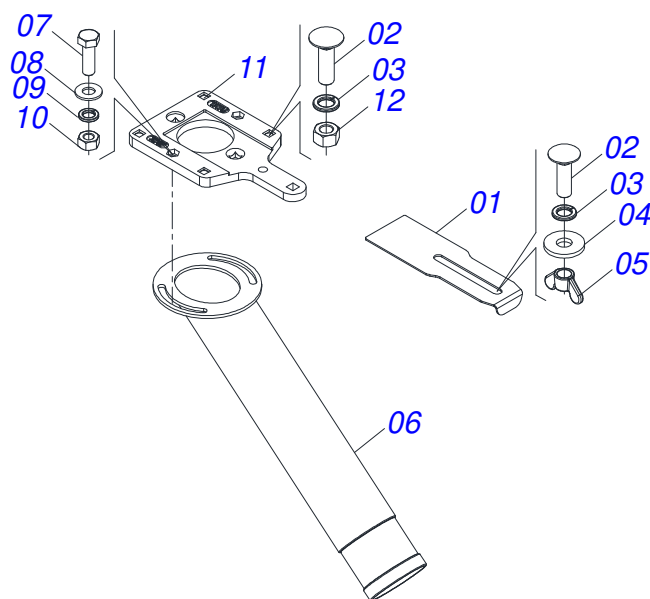


Item	Code	Description	See page	QT
01	0571015779	ARTICULATION NOZZLE SUPPORT LID		01
02	0501010942	3/8" X 1-1/4" BOLT		05
03	0503010025	3/8 SPRING WASHER		05
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
05	0503010209	3/8" UNC BUTTERFLY NUT		01
06	0531063447	CONDUCTOR		01
07	0503010371	5/16" X 1" BOLT		02
08	0501010694	FLAT WASHER		02
09	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
10	0503010337	5/16" NUT		02
11	0502012767	SEED NOZZLE FIXER SUPPORT		01
12	0503010026	3/8" NUT		04

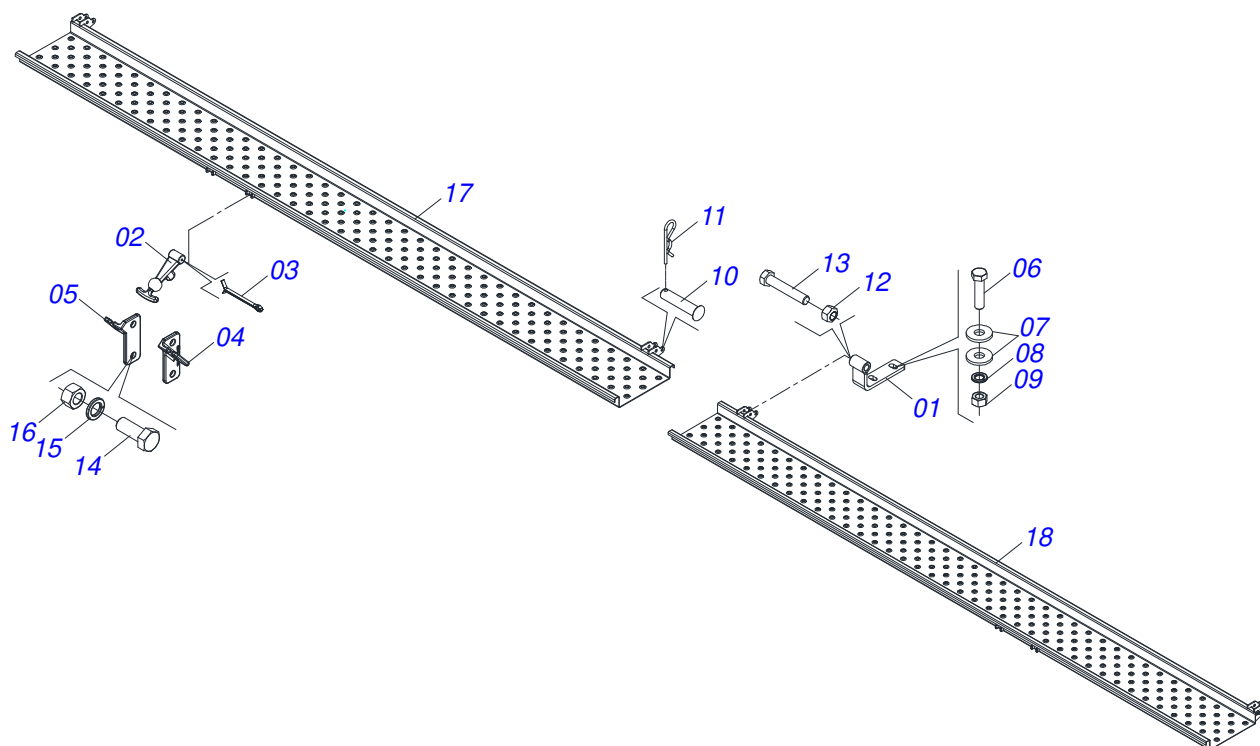

Item	Code	Description	See page	QT
01	0521068316	JOINT SUPPORT		04
02	0503011333	COVER FIXER		02
03	0503010274	5/32"X 2" COTTERPIN		02
04	1902012740	PLATFORM RIGHT FIXER SUPPORT		01
05	0502012739	PLATFORM LEFT FIXER SUPPORT		01
06	0503010849	3/8" X 1-1/2" BOLT		08
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
08	0503010025	3/8 SPRING WASHER		08
09	0503010026	3/8" NUT		08
10	0521010549	COUPLING SHAFT		04
11	0503030168	HITCH PIN CLIP		04
12	0503011336	1/2" HEX SELF ADJUSTING NUT		04
13	0503010741	1/2" X 2-3/4" BOLT		04
14	0503010395	1/2" X 1-1/4" BOLT		04
15	0503010019	1/2" SPRING WASHER		04
16	0503010060	1/2 UNC G.5 ZN HEX NUT		04
17	0531060100	LEFT PLATFORM - 7545		01
18	0531060098	RIGHT PLATFORM - 7545		01

HYDRAULIC ASSY


0521057695

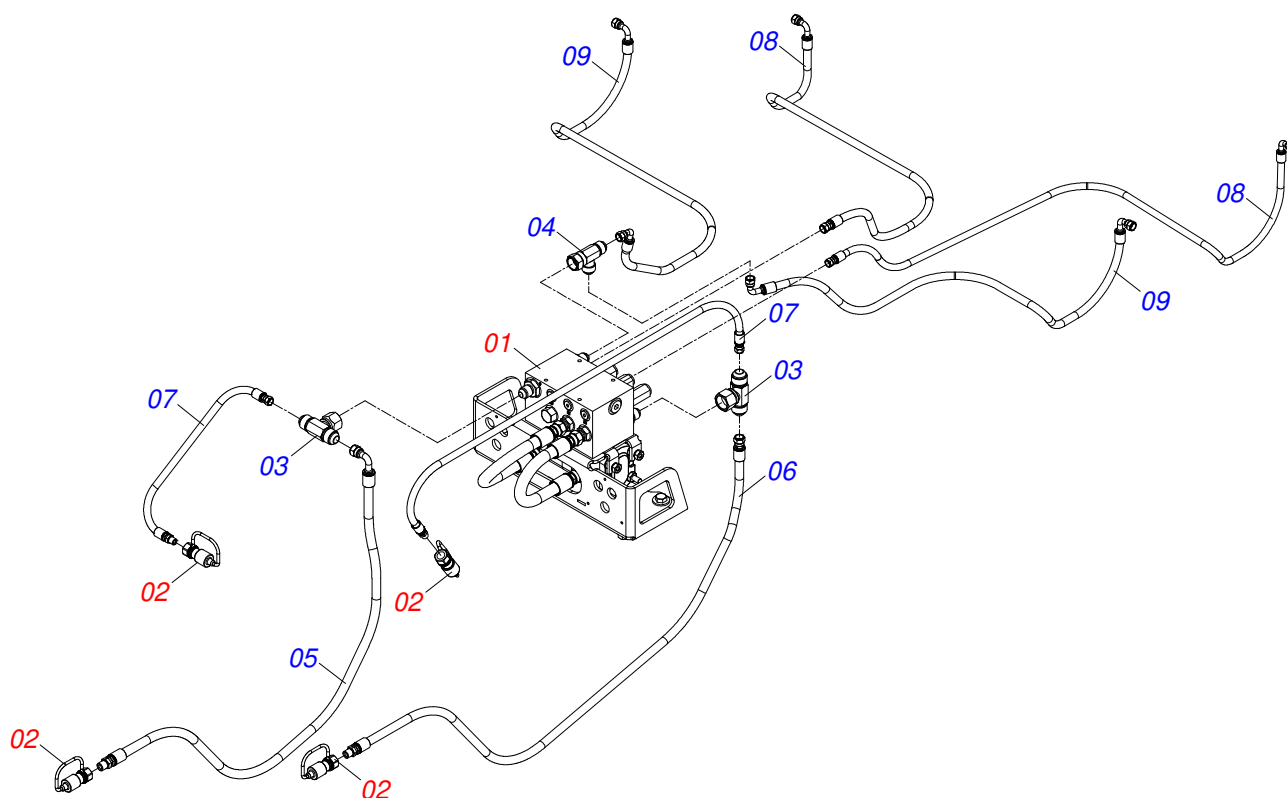


Item	Code	Description	See page	QT
01	0521057007	VALVE ASSEMBLY	27	01
02	0501053834	MALE QUICK COUPLER	30	04
03	0503017982	7/8" ADAPTER WITH CENTRAL SWIVEL NUT		02
04	0503062177	7/8 (V.C) T-ADAPTER WITH NUT		01
05	0501082120	1/2" X 177" TR-TM HOSE ASSY		01
06	0501080038	HOSE 1/2 X 4800 TR-TM		01
07	0501080070	1/2" X 33" TR-TM HOSE ASSY		02
08	0501081779	HOSE 1/2 X 4200 TR-TC		02
09	0501081427	1/2" X 125,98" TC-TC HOSE		02

VALVE ASSEMBLY


0521057007

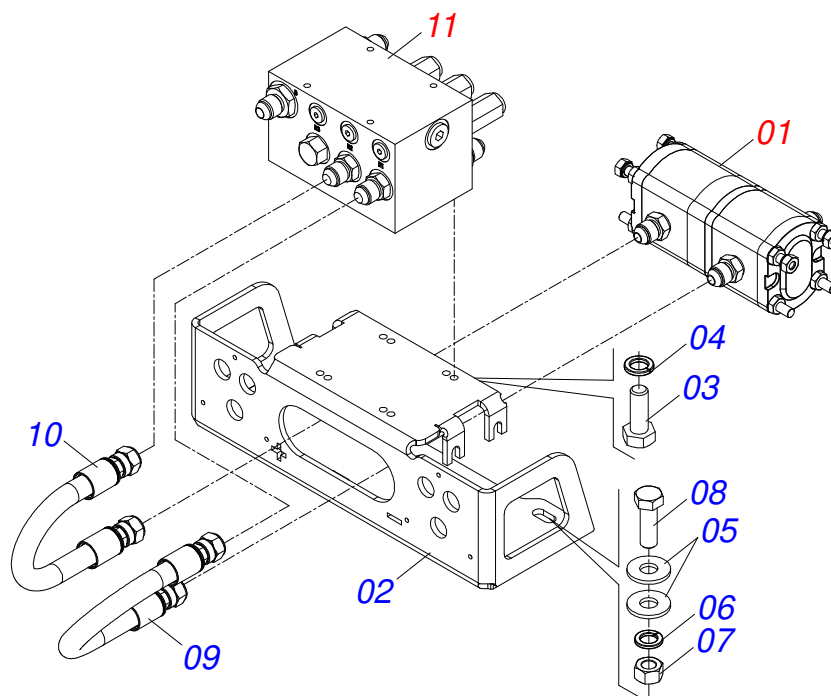


Item	Code	Description	See page	QT
01	0511052464	FLOW DIVIDING VALVE	28	01
02	0591011852	VALVE / VACUOMETER SUPPORT		01
03	0503015114	BOLT		04
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
05	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
06	0503010019	1/2" SPRING WASHER		04
07	0503010060	1/2 UNC G.5 ZN HEX NUT		04
08	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
09	0501082232	HOSE 1/2 X 380 TR-TR		01
10	0501082234	HOSE 1/2 X 420 TR-TR		01
11	0521057006	COMMAND BLOCK BLFP2962	29	01

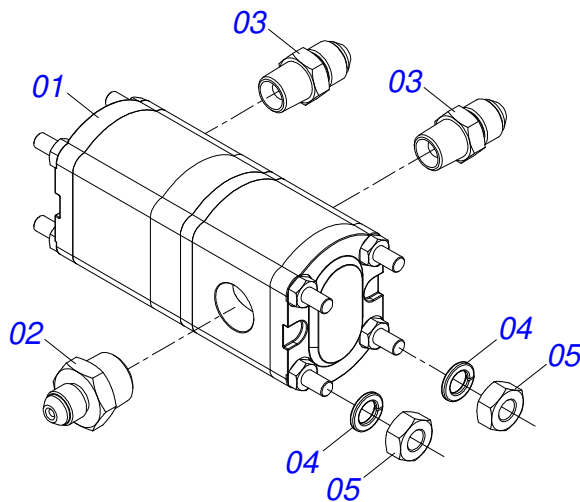

Item	Code	Description	See page	QT
01	0503013791	DOUBLE MOTOR		01
02	0541018940	7/8 NF X R 1 BSPT X 55 NIPPLE		01
03	0511014065	7/8" NF X R1/2NPT X 52 NIPPLE		02
04	0503010025	3/8 SPRING WASHER		04
05	0503011051	M10 X 0.6" NUT		04

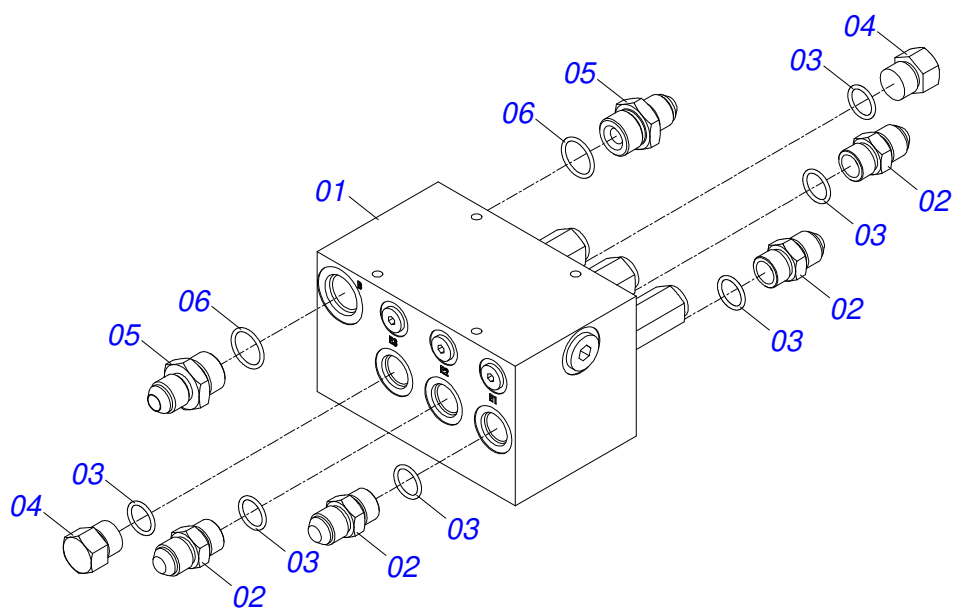


Item	Code	Description	See page	QT
01	0503062960	COMMAND BLOCK		01
02	0501010590	NIPPLE		04
03	0503010045	O'RING		06
04	0551018643	7/8" UNF X 14 FPP PUMP		02
05	0511018014	7/8"NF X 1.1/16 UN NIPPLE		02
06	0503011109	2-119 N 3006-9B O'RING		02

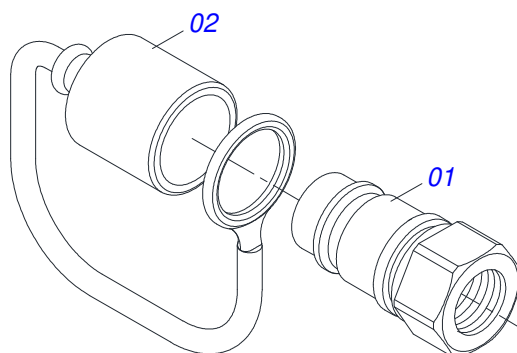


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

ASSY LADDER


0521056341

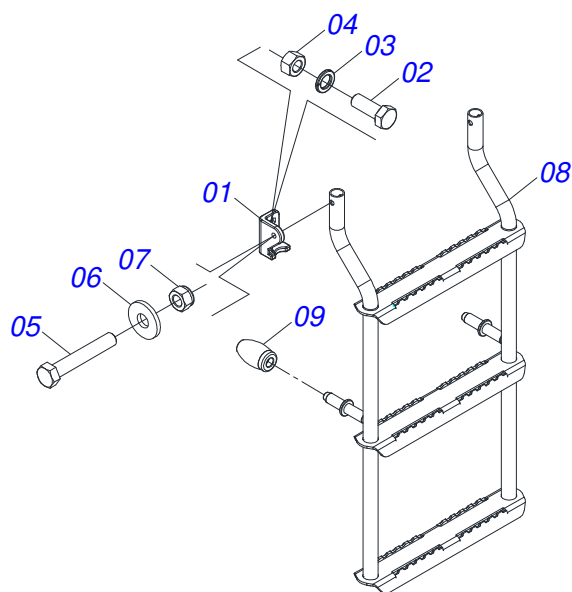


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER		02
02	0503010237	3/8" X 1" BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503011179	3/8" X 2-1/4" BOLT		02
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503013357	3/8 SELF-ADJUSTING NUT		02
08	0531060132	LADDER		01
09	0503030403	1.85" X 2.87" BEATER		02

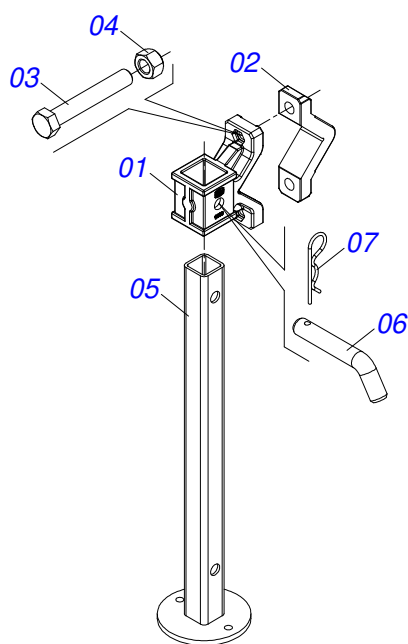


Item	Code	Description	See page	QT
01	0502011530	SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0501069951	PLOUGH SUPPORT		04
06	0501011075	PIN		02
07	0503030012	HITCH PIN CLIP		02

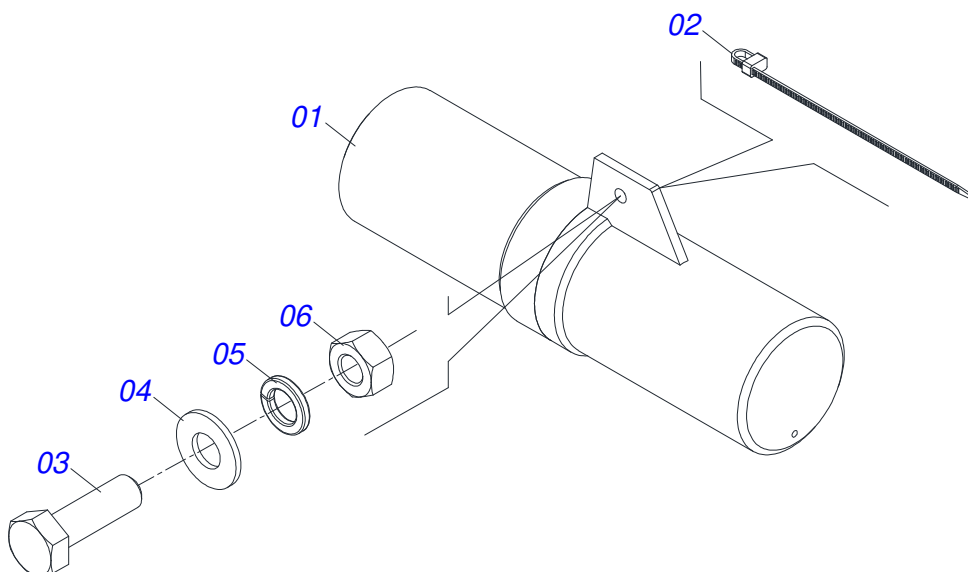


Item	Code	Description	See page	QT
01	0503060100	INSTRUCTIONS MANUAL CANISTER		01
02	0503010267	NYLON CLAMP		01
03	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
04	0501010694	FLAT WASHER		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
06	0503010337	5/16" NUT		01

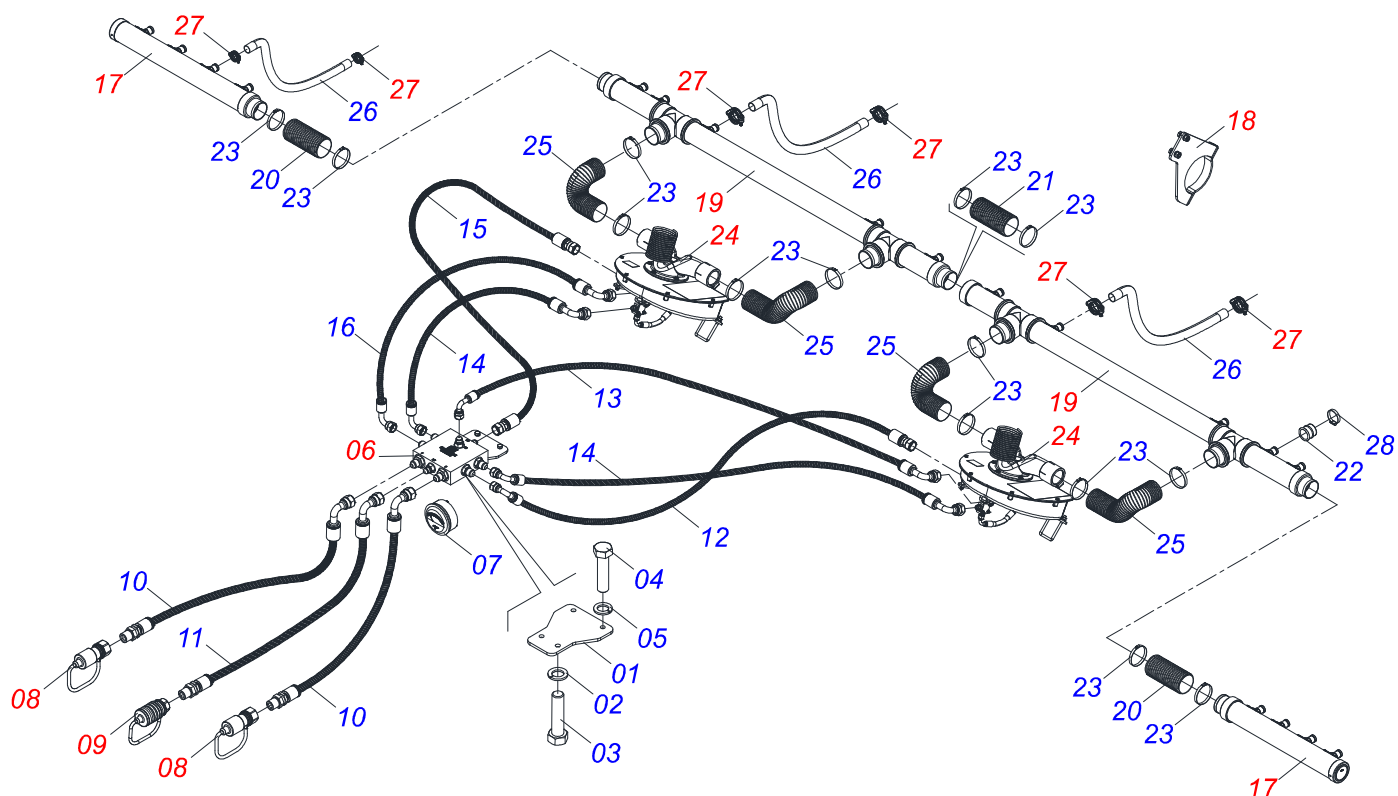


Item	Code	Description	See page	QT
01	0591011853	SUPPORT TURBINE FLOW SPLITTER BLOCK		01
02	0503010025	3/8 SPRING WASHER		02
03	0503010172	M10 X 1,5 X 25 BOLT		02
04	0503015114	BOLT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0521057008	DIVIDER BLOCK FOR 02 TURBINES	35	01
07	0503013584	VACUUM GAUGE		01
08	0501053834	MALE QUICK COUPLER	30	02
09	0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	36	01
10	0501082120	1/2" X 177" TR-TM HOSE ASSY		02
11	0501080845	3/8 X 4600 TC-TM HOSE		01
12	0501080016	1/2 X 2800 TR-TC HOSE		01
13	0501080717	3/8" X 98" TC-TC HOSE ASSY		01
14	0501081933	HOSE 1/2 X 2350 TC TC		02
15	0501080469	3/8" X 98.42" TR-TR HOSE ASSY		01
16	0501081427	1/2" X 125,98" TC-TC HOSE		01
17	0521056680	SIDE STRAIGHT AIR CONDUCTOR	37	02
18	0521056262	CBA ASSY AIR DUCT FIXER SUPPORT	38	08
19	0521056678	CENTRAL STRAIGHT 5-BURNER AIR CONDUCTOR	39	02
20	0581018371	HOSE 4 X 237,5		02
21	0581012725	HOSE 4" X 150		01
22	0503034867	AIR DISTRIBUTOR PUMP		03
23	0503011372	102 TO 121 CLAMP		14
24	0521056674	TURBINE MOUNTED WITH SUPPORT	40	02
25	0581012185	HOSE 4 X 440		04
26	0581016488	AIR CONDUCTOR		15
27	0521052549	CLAMP	44	30
28	0503010243	CLAMP		03

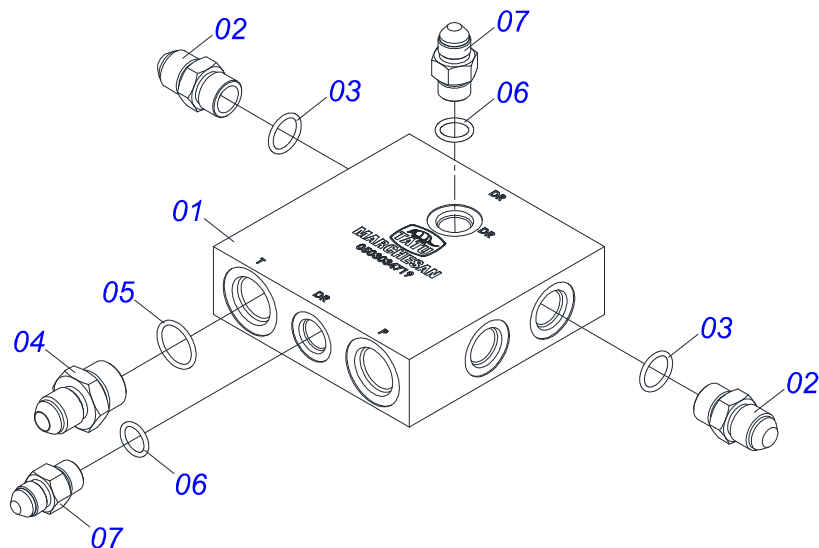


Item	Code	Description	See page	QT
01	0503034719	FLOW DIVIDER BLOCK		01
02	0501010590	NIPPLE		04
03	0503010045	O'RING		04
04	0511018014	7/8"NF X 1.1/16 UN NIPPLE		02
05	0503011109	2-119 N 3006-9B O'RING		02
06	0503010190	2-114 N 3006-9B O'RING		03
07	0501010617	3/4" NIPPLE		03

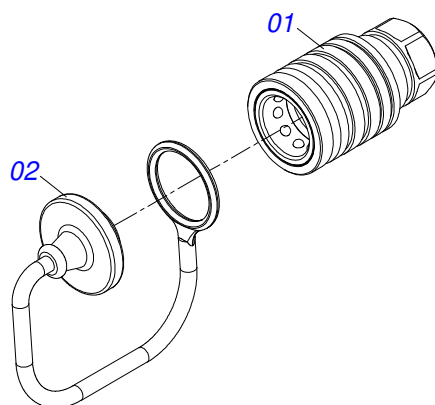


Item	Code	Description	See page	QT
01	0503018799	QUICK COUPLING		01
02	0503011883	QUICK CONNECTION COVER		01

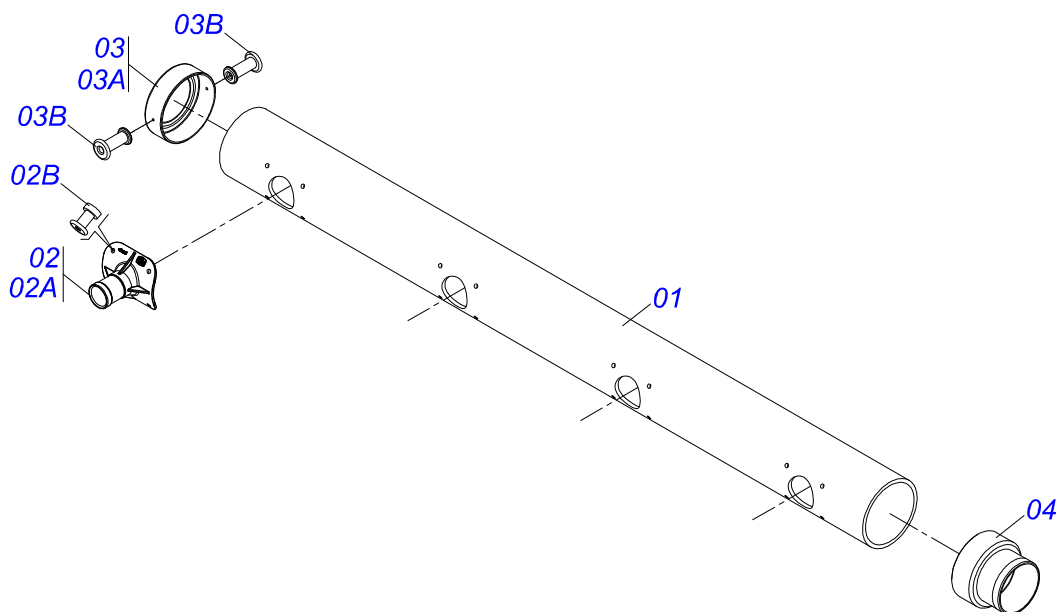


Item	Code	Description	See page	QT
01	0591011134	CONDUCTOR BODY AIR 4 MOUTH 1300 04 HOLES		01
02	0521056048	AIR DISTRIBUTOR NOZZLE 1.1 / 2 WITH RIVET		04
02A	0503034812	SOCKET DISTRIBUTOR AR		01
02B	0503012856	POP RIVET		04
03	0521056049	AIR DISTRIBUTOR CAP WITH RIVET		01
03A	0503034763	AIR DITRIBUTOR PUMP		01
03B	0503015341	POP RIVET		02
04	0581013633	SOCKET DISTRIBUTOR AR		01

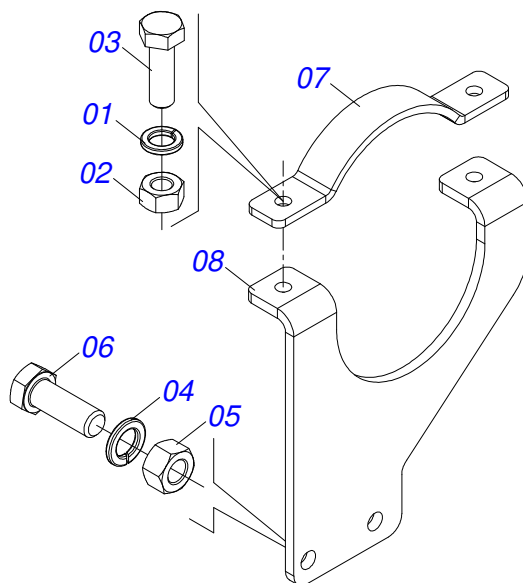


Item	Code	Description	See page	QT
01	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
02	0503010337	5/16" NUT		02
03	0503010371	5/16" X 1" BOLT		02
04	0503010025	3/8 SPRING WASHER		02
05	0503010026	3/8" NUT		02
06	0503010237	3/8" X 1" BOLT		02
07	0521018402	AIR CONDUCTOR CLAMP		01
08	0591010923	AIR DUCT SUPPORT		01

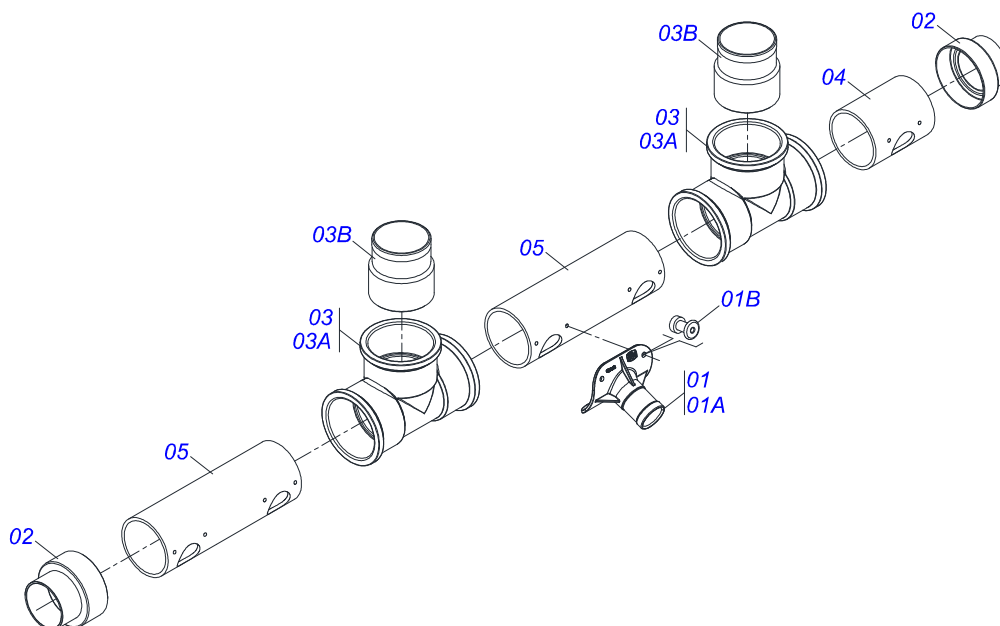


Item	Code	Description	See page	QT
01	0521056048	AIR DISTRIBUTOR NOZZLE 1.1 / 2 WITH RIVET		05
01A	0503034812	SOCKET DISTRIBUTOR AR		05
01B	0503012856	POP RIVET		20
02	0581013633	SOCKET DISTRIBUTOR AR		02
03	0511057036	AIR DISTRIBUTOR BOARD		02
03A	0503012567	T-JOIN FOR TUBE 110		02
03B	0581013890	AIR DISTRIBUTOR SOCKET		02
04	0581016056	CENTRAL AIR DISTRIBUTOR BODY 315		01
05	0581019601	CONDUCTOR BODY AIR 02 MOUTHES 740 04 HOLES		02

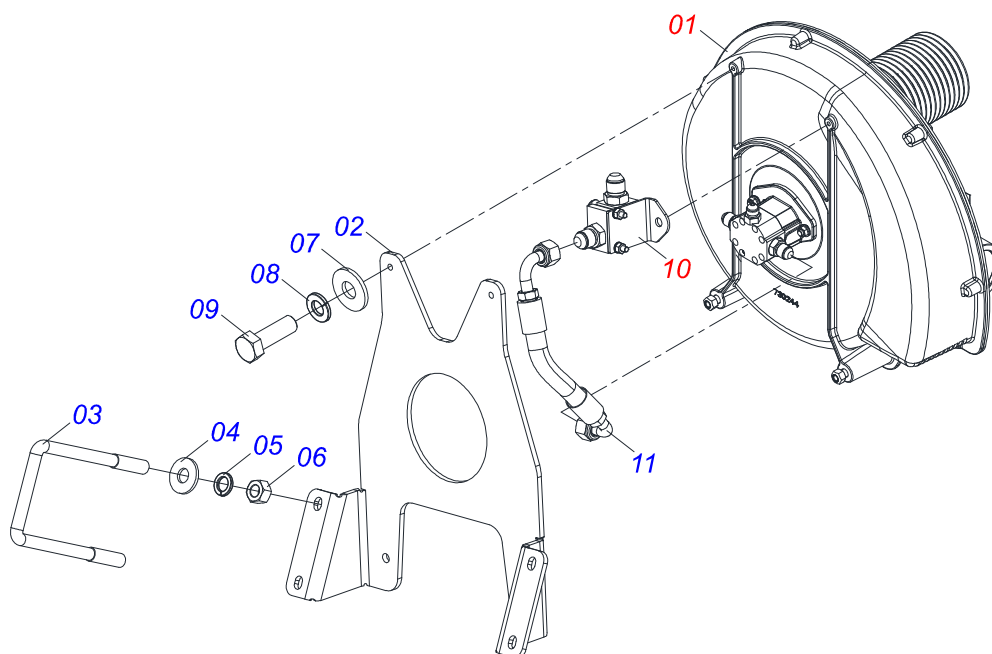


Item	Code	Description	See page	QT
01	0521056673	TURBINE P.P CSC	41	01
02	0591011354	TURBINE SUPPORT		01
03	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2 UNC G.5 ZN HEX NUT		04
07	0501010694	FLAT WASHER		02
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
09	0503019284	M8 X BOLT		02
10	0521051365	VALVE ASSY	43	01
11	0501082251	HOSE 1/2 X 260 TC-TC 90G		01

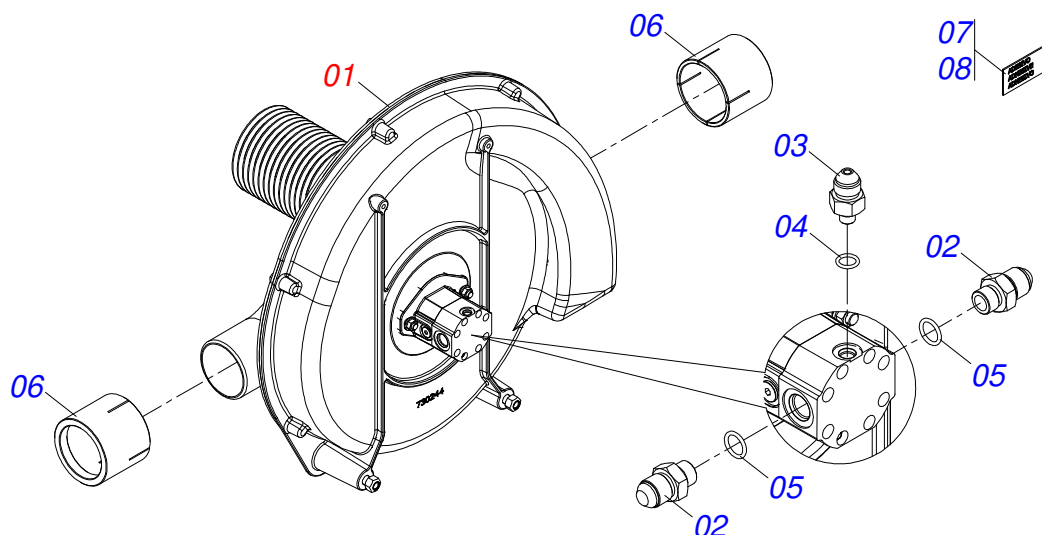

Item	Code	Description	See page	QT
01	0521050154	PRECISION PLANTING TURBINE WITH HOLE	42	01
02	0501011460	7/8 NF REDUCTION NIPPLE		02
03	0503034385	NIPPLE 7/16 UNF X UNF JIC		01
04	0503010392	2-046 N 3006 9B O'RING		01
05	0503010190	2-114 N 3006-9B O'RING		02
06	0581012096	ROUND SLEEVE		02
07	0503031087	ADHESIVE LABEL		01
08	0503031426	ADHESIVE LABEL ATTENTION TURBINE		01

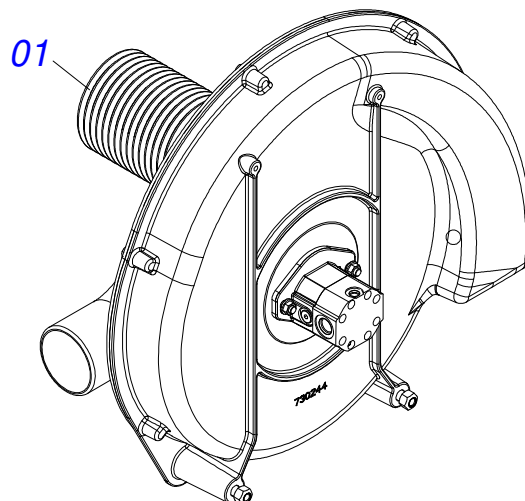


Item	Code	Description	See page	QT
01	0503062627	HYDRAULIC TURBINE ASSY		01

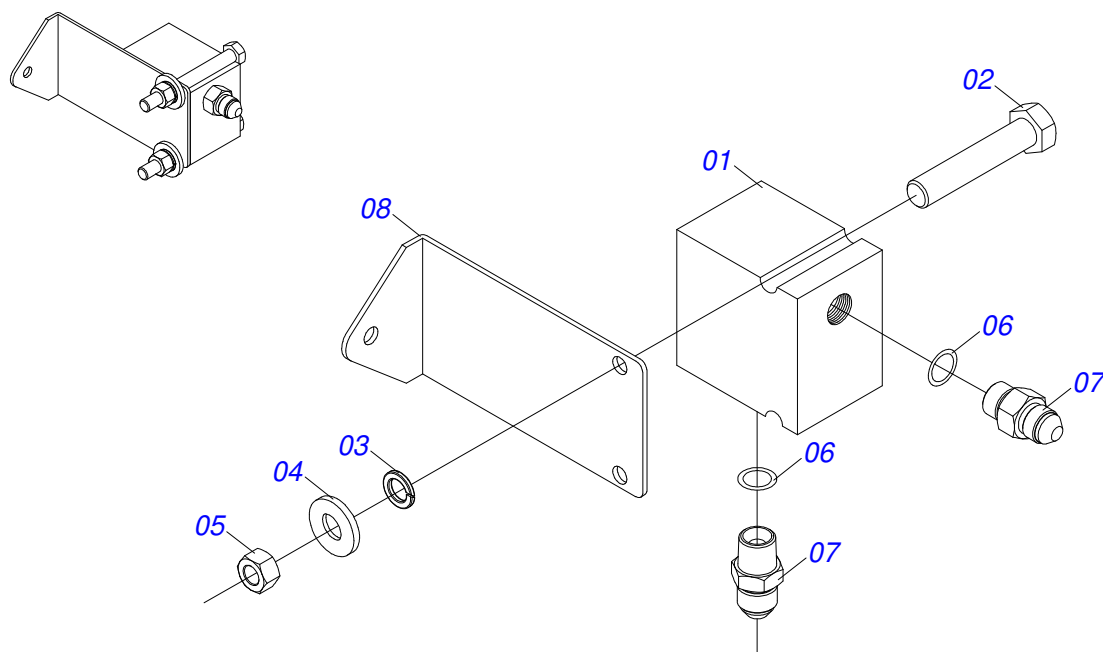

Item	Code	Description	See page	QT
01	0503015420	CV10208TN5 ANTI-CAVITATION VALVE		01
02	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
03	0503010143	1/4" SPRING WASHER		02
04	0503010305	FLAT WASHER		02
05	0503010144	1/4" NUT		02
06	0503010190	2-114 N 3006-9B O'RING		02
07	0501011460	7/8 NF REDUCTION NIPPLE		02
08	0581014738	VALVE SUPPORT		01

CLAMP


0521052549

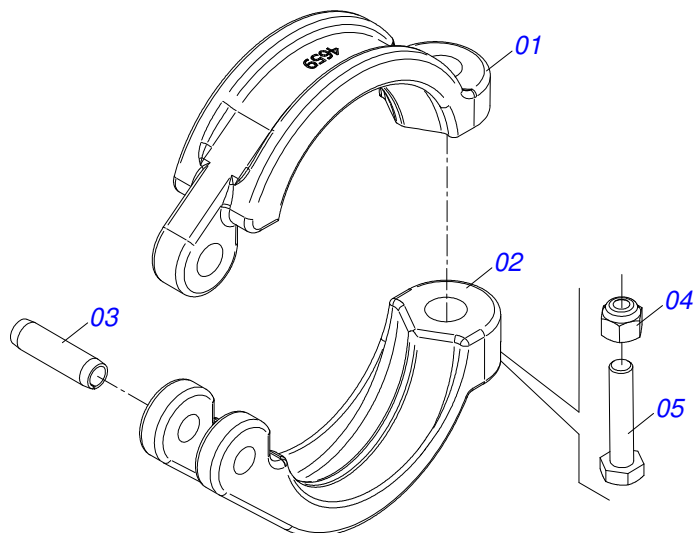


Item	Code	Description	See page	QT
01	0503034660	CLAMP LOWER		01
02	0503034659	CLAMP UPPER		01
03	0503010686	0.2" X 0.7" SPRING PIN		01
04	0503011776	M6 SELF ADJUSTINGNUT		01
05	0503011813	M6 X 1.2" BOLT		01




Item	Code	Description	See page	QT
01	0503035001	ADHESIVE LABEL COP CERRADO SUPREME (190 X 720)		04
02	0503034963	ADHESIVE LABEL		02
03	0503035003	LABEL ADHESIVE		02
04	0503035005	LABEL ADHESIVE		02
05	0503034983	LOGO TATU MARCHESAN ADHESIVE LABEL 190 X 613		02
06	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 NOZZLES)		02
07	0503031565	ADHESIVE LABEL CARE		02
08	0503032930	ADHESIVE LABEL DANGER		06
09	0503031425	ADHESIVE LABEL ATTENTION		02
10	0503031087	ADHESIVE LABEL		01
11	0503031428	READ MANUAL DECAL		01
12	0503031942	ADHESIVE LABEL		01
13	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
14	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		04
15	0503033421	ADHESIVE LABEL 7 NUMBER FOR PLANTING		02
16	0503033676	WARNING LABEL ADHESIVE SEAL LOCK AXIS		04
17	0503034078	LIFTING POINTS DECAL		03
18	0503032949	ADHESIVE LABEL		01
19	0503034500	ADHESIVE LABEL		01
20	0503033764	ADHESIVE LABEL APT MARCHESAN LOWER		02
21	0503033765	ADHESIVE LABEL APT MARCHESAN LARGER		01
22	0503033021	ADHESIVE LABEL ISOBUS INSIDE 200MM		02
23	0503033022	ADHESIVE LABEL ISOBUS INSIDE 400MM		02
24	0521056998	ALUMINUM IDENTIFICATION LABEL WITH RIVET		01
24A	0503034003	SERIAL NUMBER TAG 61 X 118		01
24B	0503010001	3.2 X 5.5 RIVET		04

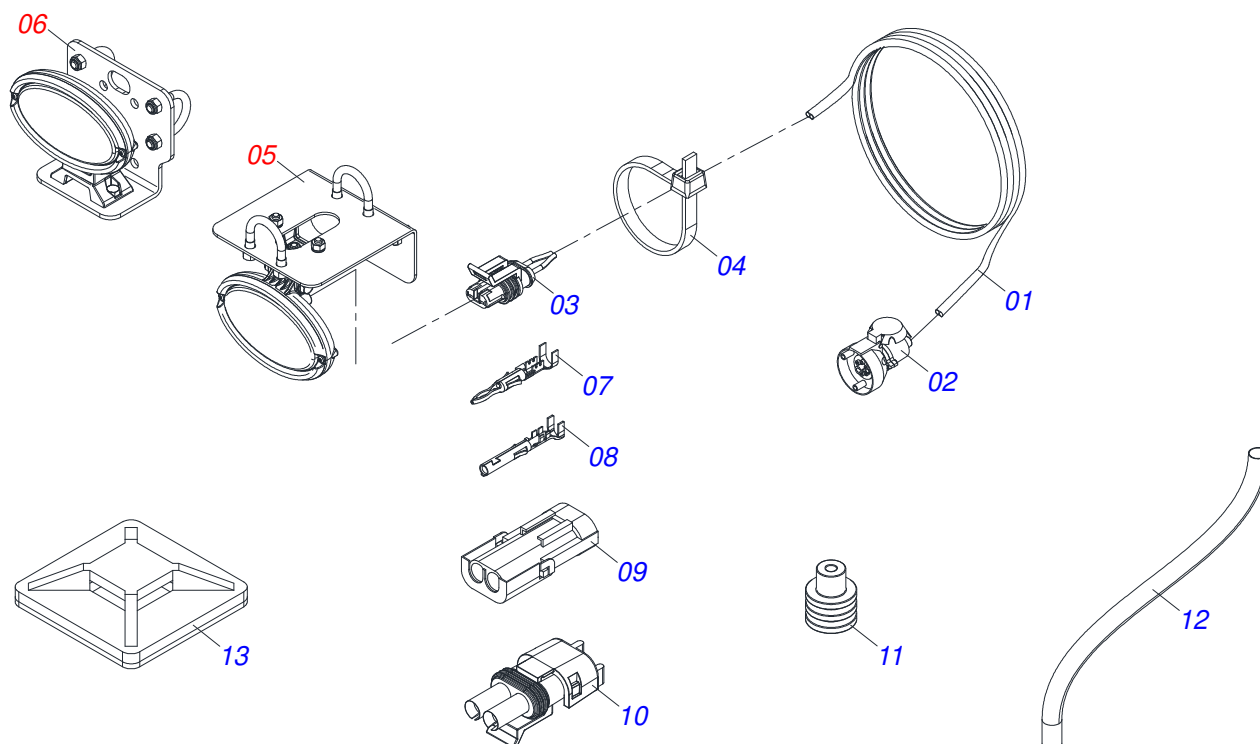


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		16
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		03
04	0503012903	T-80M CRAMP NYLON		50
05	0521053672	LIGHTHOUSE ASSY	47	02
06	0521052792	MOUNTED REAR LIGHT	48	01
07	0503015907	MALE TERMINAL		02
08	0503015908	FEMALE TERMINAL		02
09	0503015906	TWO-WAY MALE CONNECTOR		01
10	0503015905	TWO-WAY FEMALE MALE CONNECTOR		01
11	0503015911	CABLE SEAL		04
12	3505151602	TUBE		01
13	0503017702	FIXER		03

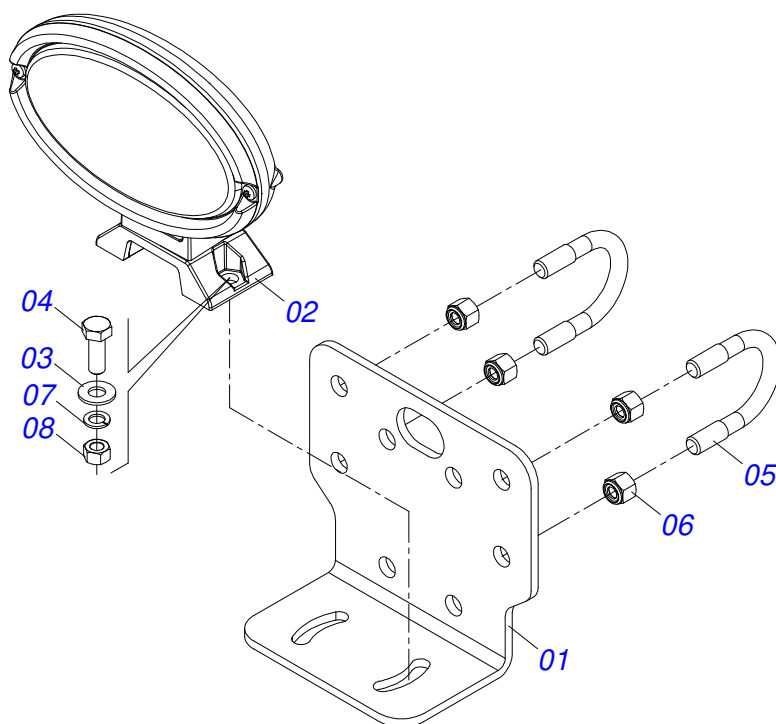


Item	Code	Description	See page	QT
01	0581015856	REDLIGHT SUPPORT		01
02	0503018738	HEADLIGHT		01
03	0501010694	FLAT WASHER		02
04	0503010358	5/16" X 5/8" BOLT		02
05	0551019884	45 X 50 X 3/8 FASTENER		02
06	0503013357	3/8 SELF-ADJUSTING NUT		04
07	0503010337	5/16" NUT		02
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		02

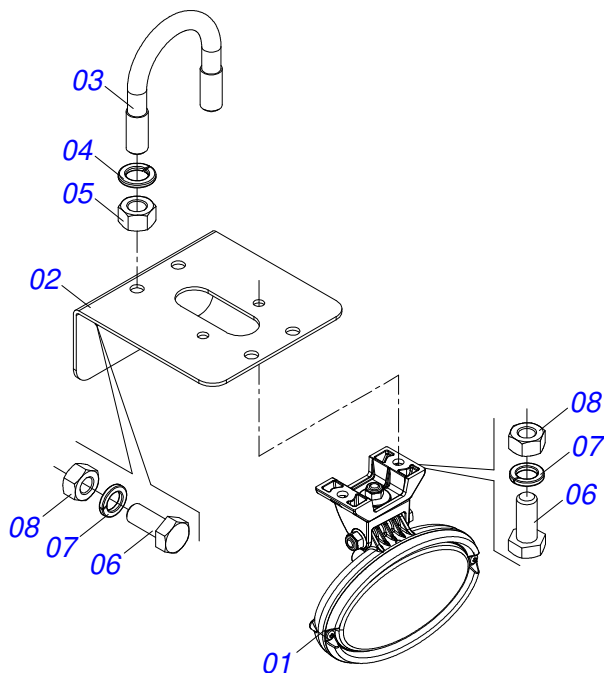

Item	Code	Description	See page	QT
01	0503018738	HEADLIGHT		01
02	0581016999	REAR LIGHT SUPPORT		01
03	0551019884	45 X 50 X 3/8 FASTENER		02
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04

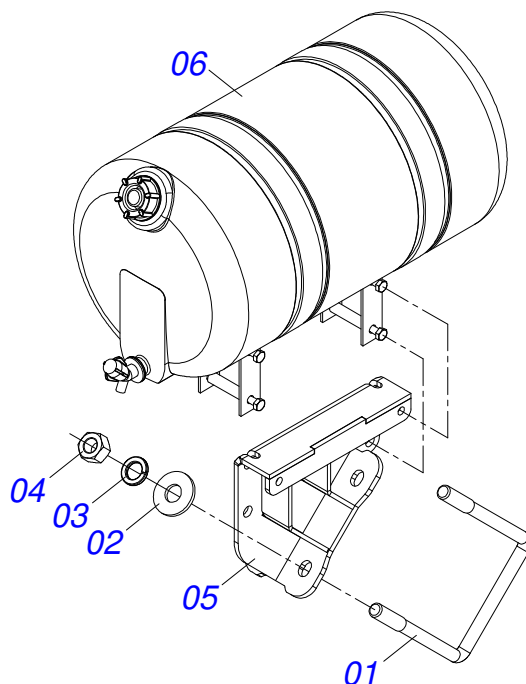


Item	Code	Description	See page	QT
01	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2 UNC G.5 ZN HEX NUT		04
05	0521069405	WATER TANK SUPPORT		01
06	0503014820	BLACK WATER RESERVOIR		01

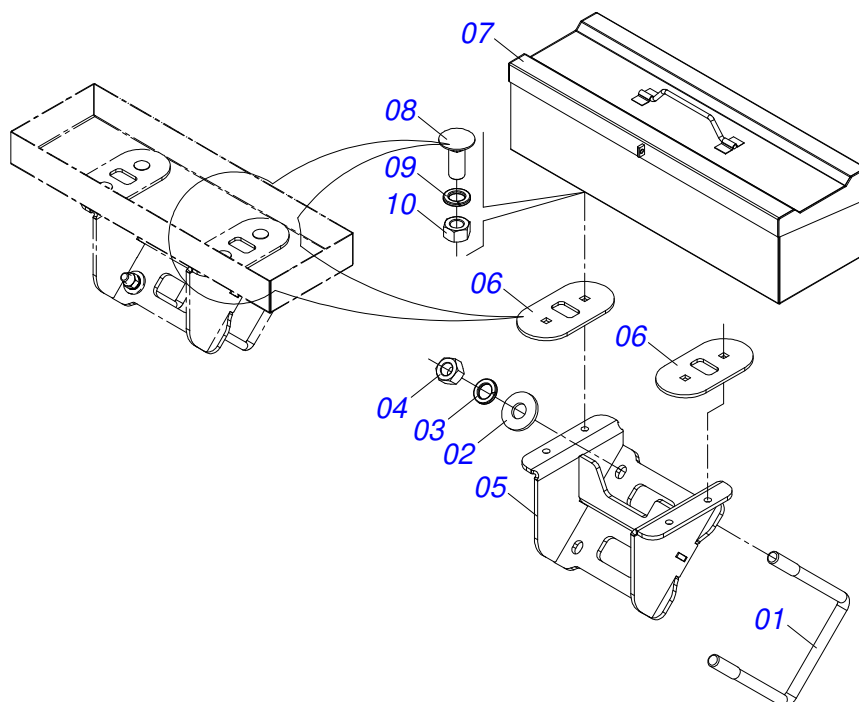


Item	Code	Description	See page	QT
01	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2 UNC G.5 ZN HEX NUT		04
05	0521069295	SUPPORT TOOL CHEST		01
06	0581017000	PLATE INTERMEDIARY		02
07	0503034772	BOX		01
08	0501011643	3/8 X 1"BOLT		04
09	0503010025	3/8 SPRING WASHER		04
10	0503010026	3/8" NUT		04

DRAWBAR ASSY


0511050644

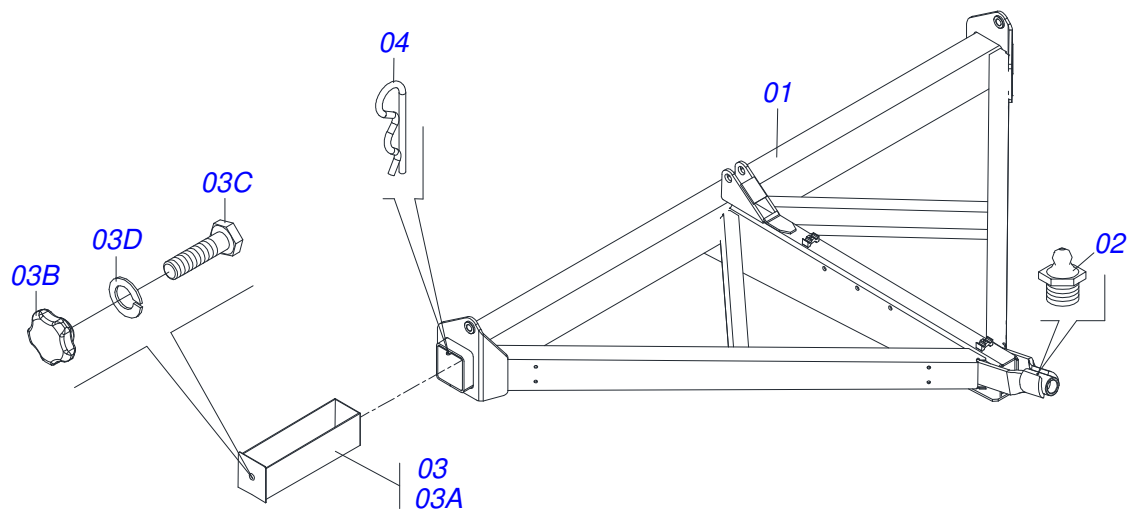

Item	Code	Description	See page	QT
01	0521062074	DRAWBAR		01
02	0503010002	1800 GREASE FITTING		01
03	0511043137	TOOLS BOX ASSY		02
03A	0511065471	BOX OF TOOLS		01
03B	0503010293	CLAMP KNOB		01
03C	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		01
03D	0503011443	3/8" SPRING WASHER		01
04	0503030012	HITCH PIN CLIP		02

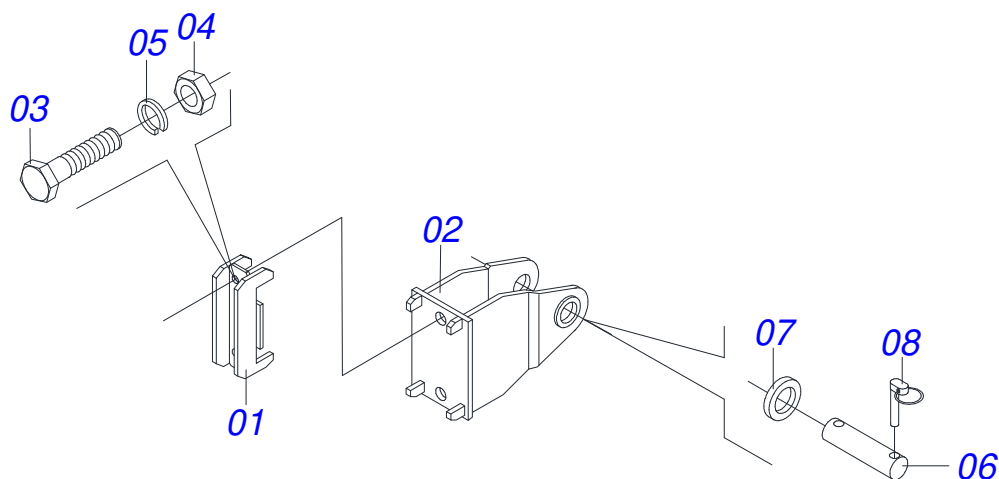


Item	Code	Description	See page	QT
001	0531061290	FIXING CLAMP		01
002	0531060106	SUPPORT ARTICULACION		01
003	0511016281	3/4" X 8" BOLT		02
004	0503010014	3/4" HEX NUT		02
005	0503010023	3/4" SPRING WASHER		02
006	0591012930	COUPLING SHAFT		01
007	0571019034	FLANGE WASHER AXLE		01
008	0503030430	7/16 X 2" PIN LOCK		01

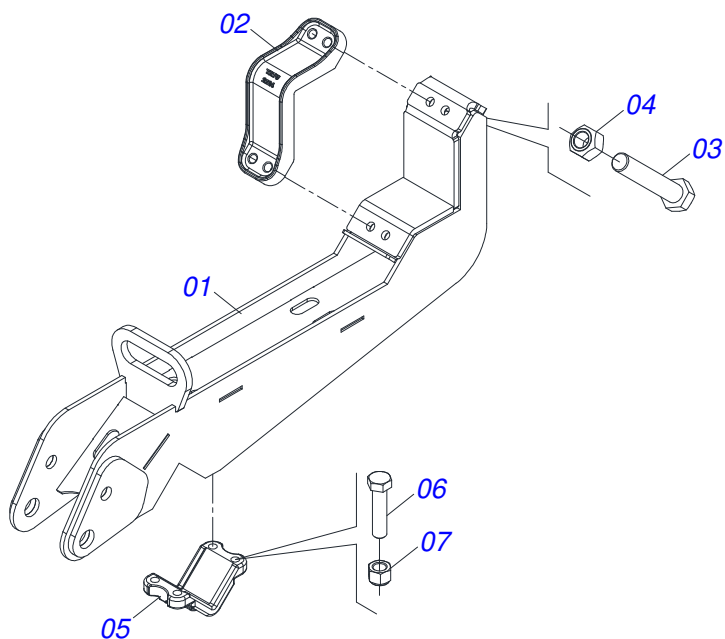


Item	Code	Description	See page	QT
01	0531060097	HEADER FIXATION SUPPORT		01
02	1902012724	FERTILIZER LINE FIXER		01
03	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0502012789	FIXER SUPPORT FERTILIZER ROW		01
06	0503017857	BOLT 5/8 UNF 4		04
07	0503010811	5/8" UNF SELF ADJUSTING NUT		04

TRACTOR HITCH

0511055096

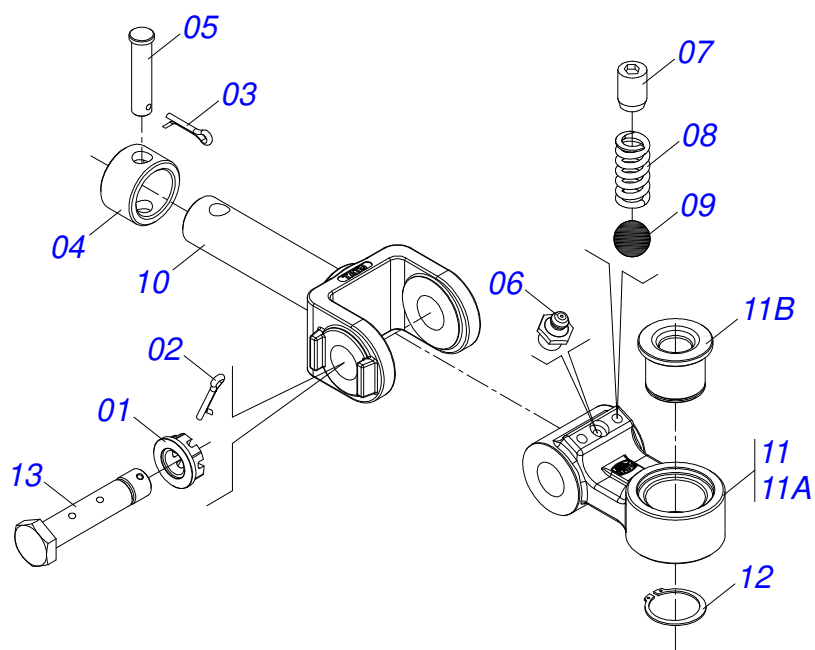


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	LEFT COMPRESSION SPRING		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

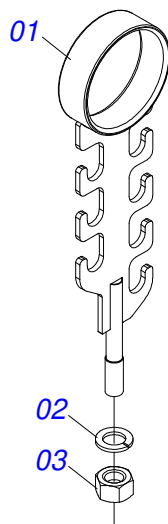


Item	Code	Description	See page	QT
01	0521066302	HOSE HOLDER		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

DRAWBAR ESTABILIZER


0501055579

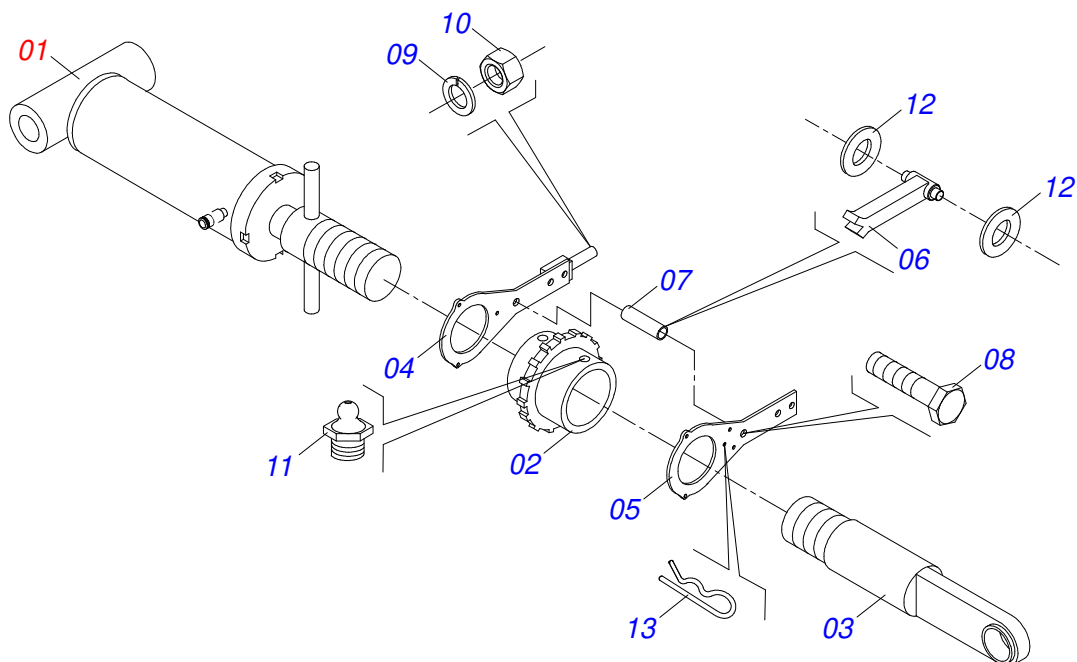

Item	Code	Description	See page	QT
01	0511041864	2 X 4.48 X 16.3 HYDRAULIC CYLINDER	57	01
02	0502011237	ESTABILIZER BODY		01
03	0511065467	LH SCREW ARBOR		01
04	0511061880	SIDE RIGHT RATCHET		01
05	0531010264	SIDE RATCHET		01
06	0511061881	RATCHET FOLLOWER		01
07	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
08	0503011179	3/8" X 2-1/4" BOLT		05
09	0503010025	3/8 SPRING WASHER		05
10	0503010026	3/8" NUT		05
11	0503010002	1800 GREASE FITTING		02
12	0521018517	FLAT WASHER		02
13	0503030012	HITCH PIN CLIP		01

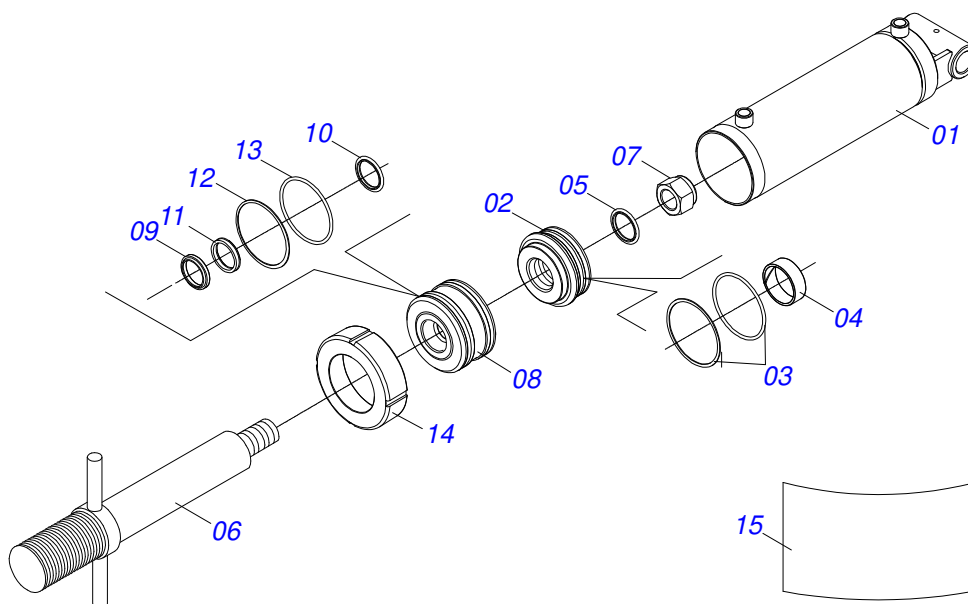


Item	Code	Description	See page	07
01	0511064908	4.5" X 25.4" CYLINDER CASE		01
02	0502011221	2.0" X 4.5" PISTON		01
03	0503011890	3750-3750 GASKET		02
04	0503011891	W2-4500-500 RING G.E		01
05	0503010345	2-218 N 3006-9B O'RING		01
06	0511064909	2" X 14.4" TURNBUCLE		01
07	0503010817	1.1/4" SELF LOCKING NUT		01
08	0502011220	2" X 4.5" RING SUPPORT		01
09	0503010952	W2-2250-500 RING		01
10	0503010991	1870-2000-375-B GASKET		01
11	0503010039	D-2000 SCRAPER RING		01
12	0503011892	O' RING, 2-346 N 3006-9B		01
13	0503011893	BACK-UP RING, 8-346		01
14	0502011222	0.56" END CAP		01
15	0501032513	HYDRAULIC CYLINDER REPAIR KIT		01

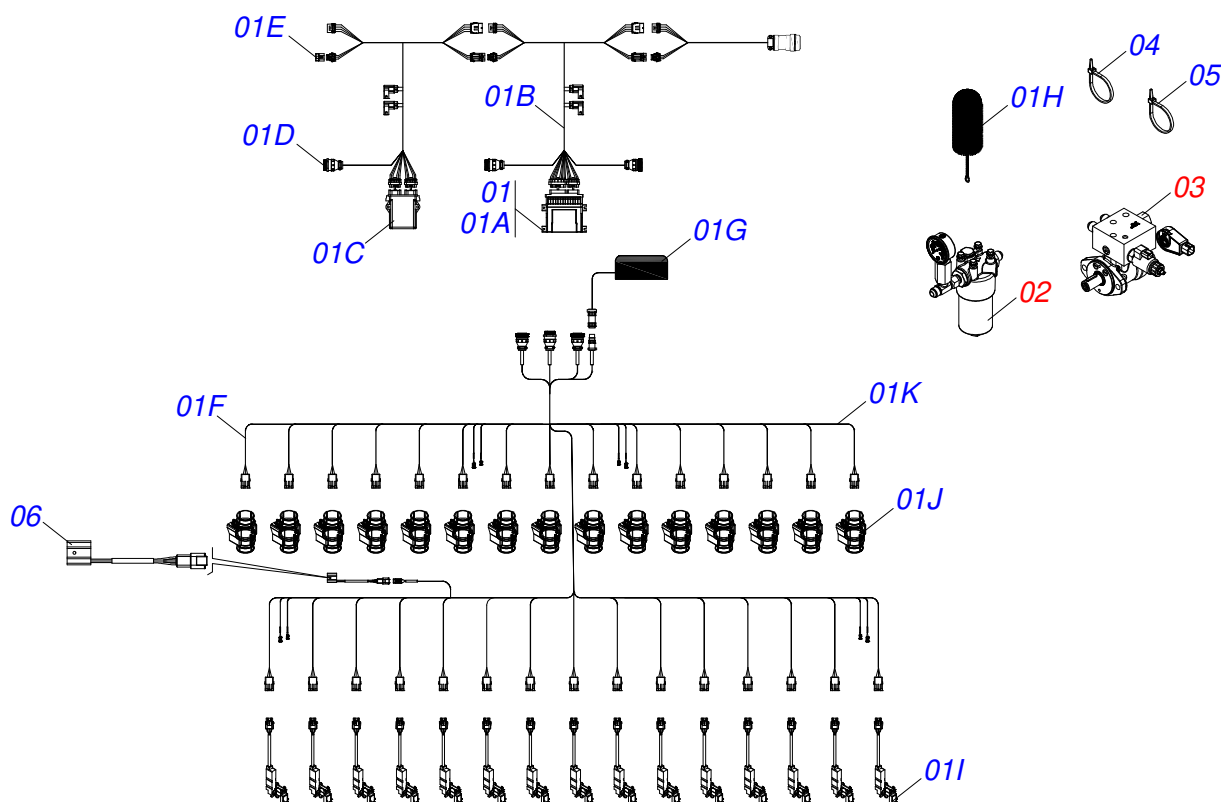


Item	Code	Description	See page	QT
01	0503063184	KIT INTELLIAG ISO 4C 15L 45/50 MSA		01
01A	0503015065	MASTER CONTROL MODULE		01
01B	0503015066	CABLE CONTROL MASTER MODULE		01
01C	0503015209	MODULES WSMB 18L ISOBUS 4679811100S1		01
01D	0503015210	CABLE MODULO WSMB ISOBUS 467981200		01
01E	0503015071	CONNECTOR		01
01F	0503019843	CABLE ISO ISO 4C 15L 45/50 MSA		01
01G	0503017443	ANTENNA GPS PM 400		01
01H	0503017031	CLEANING BRUSH		01
01I	0503015218	SENSOR FOTOELE PM 400		15
01J	0503018932	FLOW FERTILIZER SENSOR		15
01K	0503019685	CABLE ISO CONNECTION TRACTOR 8,0 MT 020011353		01
02	0511056972	FILTER HYDAC	59	01
03	0521056496	MOTOR EMD 80 WITH BLOCK BLFP2618	60	04
04	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		225
05	0503013100	NYLON CLAMP		75
06	0503019291	SUPPORT SENSOR		01

FILTER HYDAC


0511056972

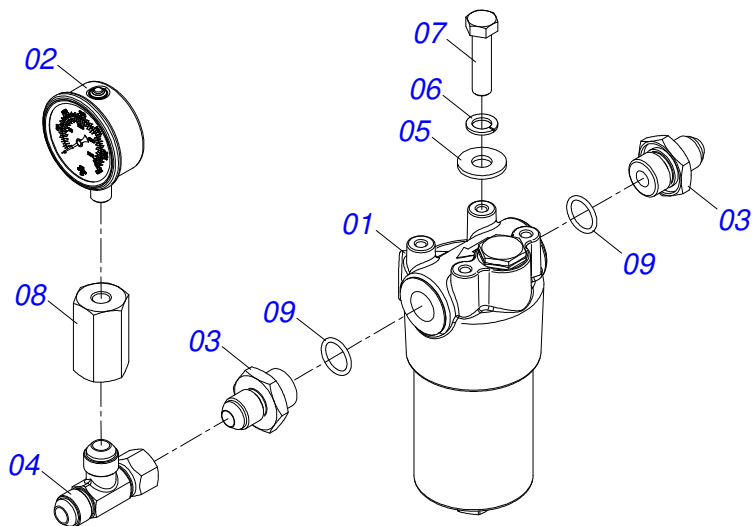

Item	Code	Description	See page	QT
01	0503063151	PRESSURE FILTER MFM HYDAC 1319024BR		01
02	0503016336	PRESSURE GAUGE		01
03	0581011416	7/8"NF UNF NIPPLE		02
04	0503012341	7/8" T ADAPTER		01
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
07	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
08	0571016236	HIDRAULIC ADAPTER		01
09	0503014724	2-215 N 3006-9B O'RING		02

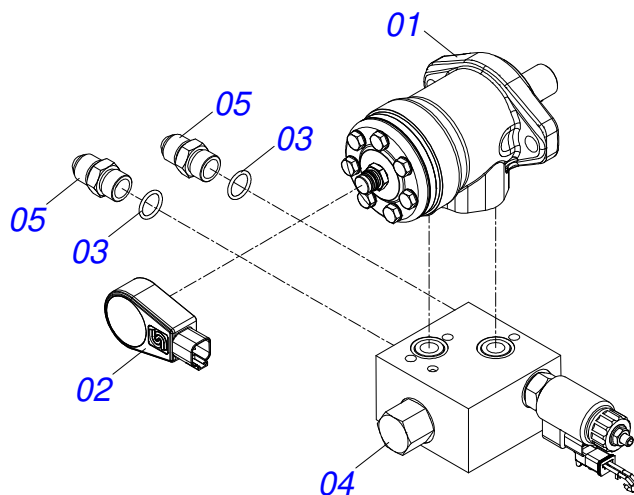

Item	Code	Description	See page	QT
01	0513010049	MOTOR OMP X 80 EMD - 11185907		01
02	0503018769	MOTOR SPEED SENSOR		01
03	0503010045	O'RING		02
04	0503019320	VALVE		01
05	0501010590	NIPPLE		02

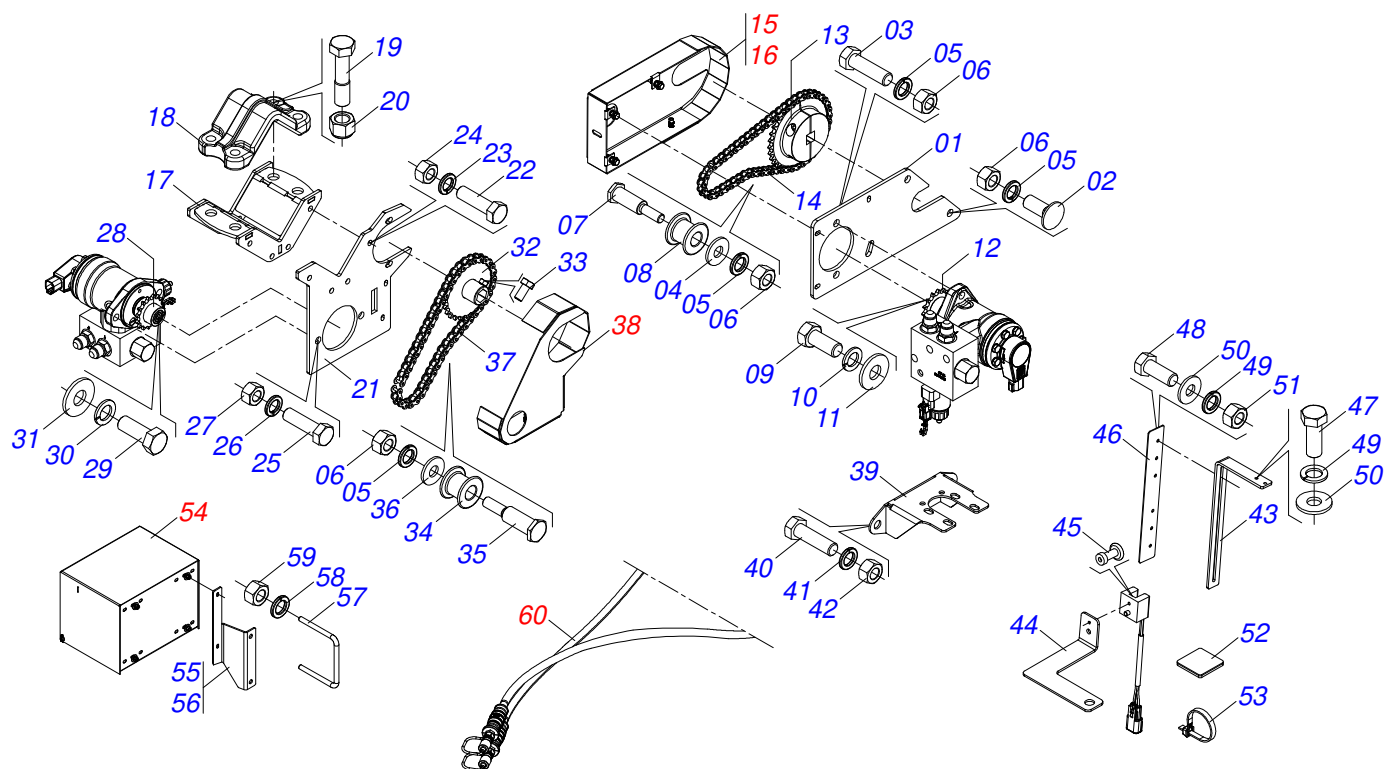


Item	Code	Description	See page	QT
01	0591012394	SIDE SUPPORT ENGINE FERTILIZER		02
02	0503014734	BOLT		04
03	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		04
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
05	0503010019	1/2" SPRING WASHER		10
06	0503010060	1/2 UNC G.5 ZN HEX NUT		10
07	0531019479	AXLE CHAIN GEAR		02
08	0503030402	PULLEY		02
09	0503010282	1/4" X 3/4" BOLT		02
10	0503010143	1/4" SPRING WASHER		02
11	0561011665	FLAT WASHER		02
12	0521069832	15Z GEAR		02
13	0503062754	GEAR 34Z P.1/2 APT		02
14	0503015637	40-1 X 56 CHAIN LINK + REDUCTION		02
15	0521057272	PROTECTION COVER	62	01
16	0521057273	PROTECTION COVER	63	01
17	0531060542	HIDRAULIC MOTOR SUPPORT		02
18	0502012789	FIXER SUPPORT FERTILIZER ROW		02
19	0503017960	5/8" X 3-12" BOLT		08
20	0503010811	5/8" UNF SELF ADJUSTING NUT		08
21	0591012331	SUPPORT SIDE		02
22	0503010237	3/8" X 1" BOLT		08
23	0503010025	3/8 SPRING WASHER		08
24	0503010026	3/8" NUT		08
25	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN		04
26	0503010019	1/2" SPRING WASHER		06
27	0503010060	1/2 UNC G.5 ZN HEX NUT		06
28	0531060544	15Z GEAR P		02
29	0503010282	1/4" X 3/4" BOLT		02
30	0503010143	1/4" SPRING WASHER		02
31	0561011665	FLAT WASHER		02


Item	Code	Description	See page	QT
32	0531060543	25Z GEAR WITH		02
33	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		04
34	0503030402	PULLEY		02
35	0531019479	AXLE CHAIN GEAR		02
36	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
37	0503012706	40-1 CHAIN X 47 LINK + MENDING		02
38	0521057276	COVER MOTOR	64	02
39	0581012971	FILTER SUPPORT		01
40	0503011082	C1/2" X 1.3/4" SCREW		02
41	0503010019	1/2" SPRING WASHER		02
42	0503010060	1/2 UNC G.5 ZN HEX NUT		02
43	0591012393	LIFT SENSOR SUPPORT		01
44	0591012391	LIFT SENSOR SUPPORT		01
45	0503013356	RIVET POP 3,2 X 10,0		01
46	0591012392	LIFTING RULE		01
47	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		02
48	0503010237	3/8" X 1" BOLT		02
49	0503010025	3/8 SPRING WASHER		04
50	0501013518	FLAT WASHER		04
51	0503010026	3/8" NUT		02
52	0503017702	FIXER		03
53	0503013100	NYLON CLAMP		03
54	0511059348	APT ASSY MODULE BOX	65	01
55	0571013729	RIGHT SUPPORT CASE MODULE APT		01
56	0571013730	LEFT SUPPORT BOX MODULO APT		01
57	0521010718	5/8" U BOLT		02
58	0503010027	5/8 SPRING WASHER		04
59	0503010013	5/8 NUT		04
60	0909095698	MECHANICAL HYDRAULIC ASSEMBLY APT ISO	66	01

PROTECTION COVER


0521057272

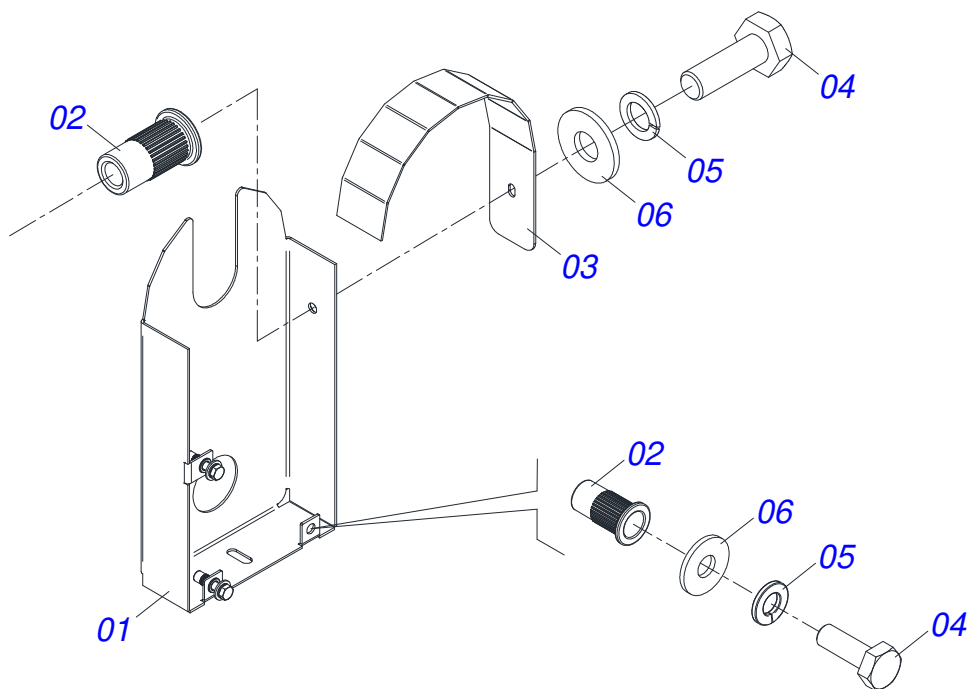


Item	Code	Description	See page	QT
001	0591012316	PROTECTION COVER		01
002	0503019412	RIVET SCREW INTERNAL		04
003	0591012314	GEAR PROTECTION		01
004	0503013849	1/4" UNC X 3/4" BOLT		04
005	0503010143	1/4" SPRING WASHER		04
006	0503010305	FLAT WASHER		04

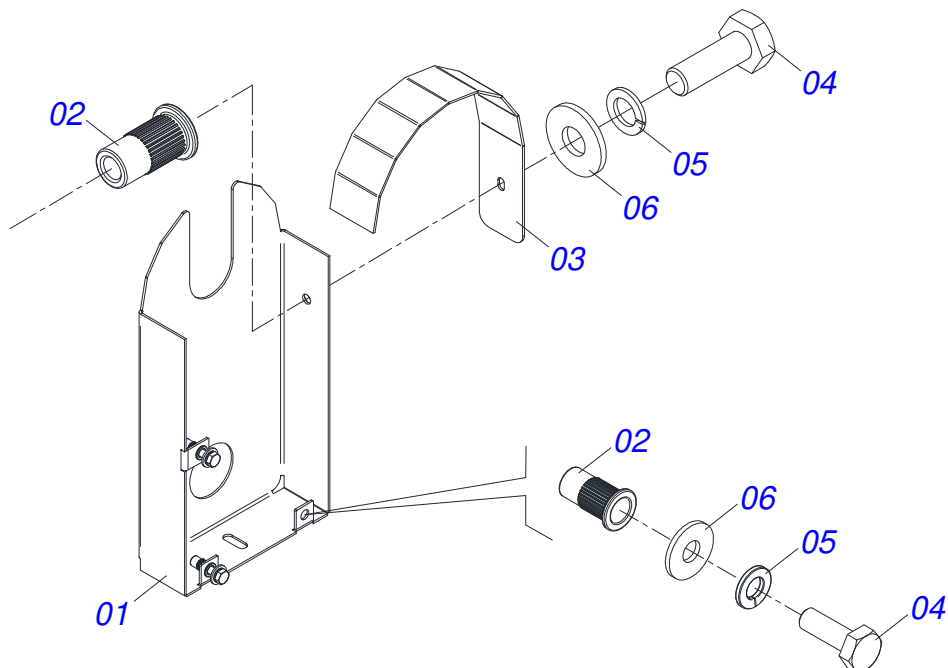


Item	Code	Description	See page	QT
001	0591012318	PROTECTION COVER		01
002	0503019412	RIVET SCREW INTERNAL		04
003	0591012314	GEAR PROTECTION		01
004	0503013849	1/4" UNC X 3/4" BOLT		04
005	0503010143	1/4" SPRING WASHER		04
006	0503010305	FLAT WASHER		04

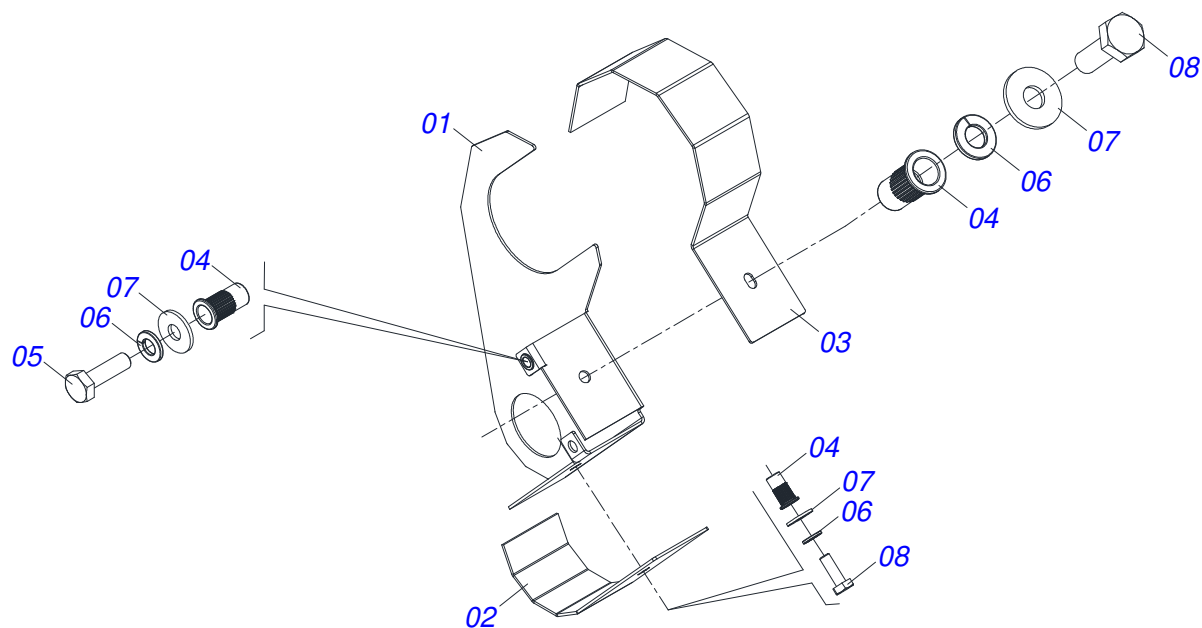


Item	Code	Description	See page	QT
01	0591012330	PROTECTION COVER		01
02	0591012328	PROTECTION COVER		01
03	0591012327	PROTECTION COVER		01
04	0503019412	RIVET SCREW INTERNAL		03
05	0503013813	1/4" UNC X 7/8" BOLT		01
06	0503010143	1/4" SPRING WASHER		03
07	0503010305	FLAT WASHER		03
08	0503013849	1/4" UNC X 3/4" BOLT		02

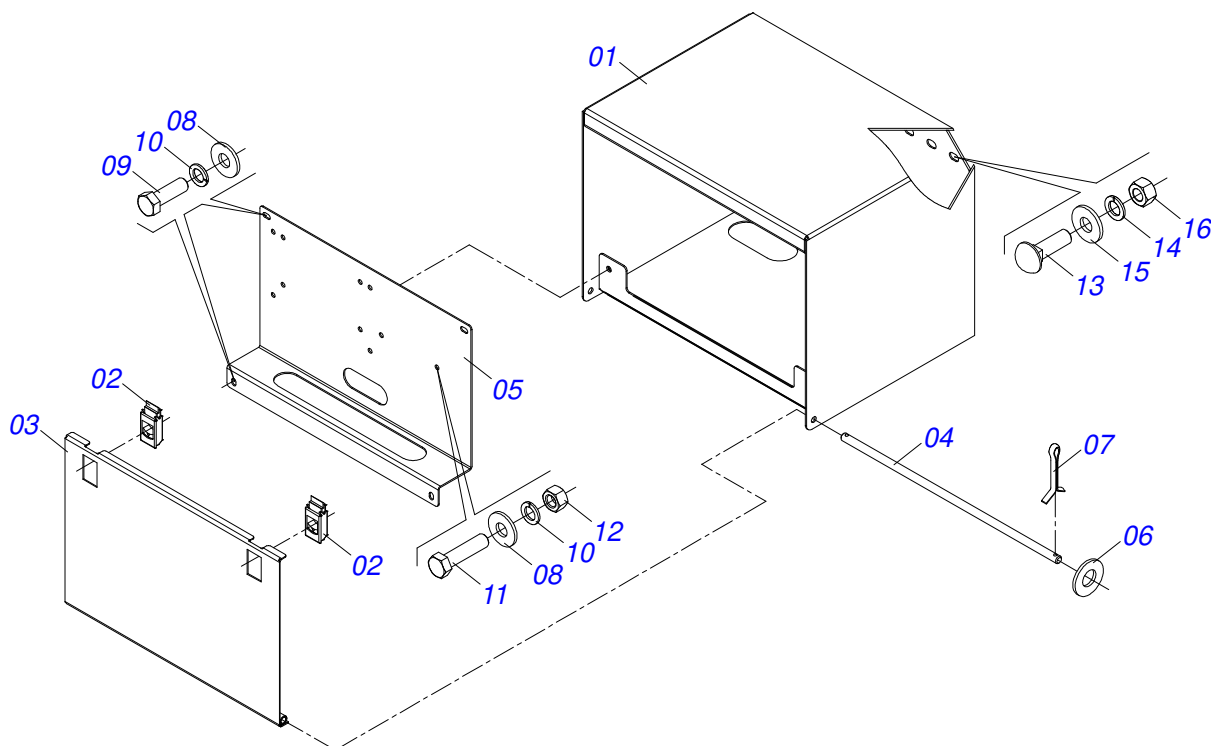

Item	Code	Description	See page	QT
01	0521066834	MODULE BOX		01
02	0503018171	FAST LOCK ASSY		02
03	0521066833	BOX COVER		01
04	0571012006	COVER PIVOT SHAFT		01
05	0571012005	SUPPORT GUIDE ASSY		01
06	0501010694	FLAT WASHER		03
07	0503010257	1/8" X 1" COTTERPIN		02
08	0511017303	FLAT WASHER		10
09	0503010298	1/4" X 1/2" BOLT		04
10	0503010143	1/4" SPRING WASHER		10
11	0503010294	1/4" X 7/8" BOLT		06
12	0503010144	1/4" NUT		06
13	0501011643	3/8 X 1" BOLT		04
14	0503010025	3/8 SPRING WASHER		04
15	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
16	0503010026	3/8" NUT		04

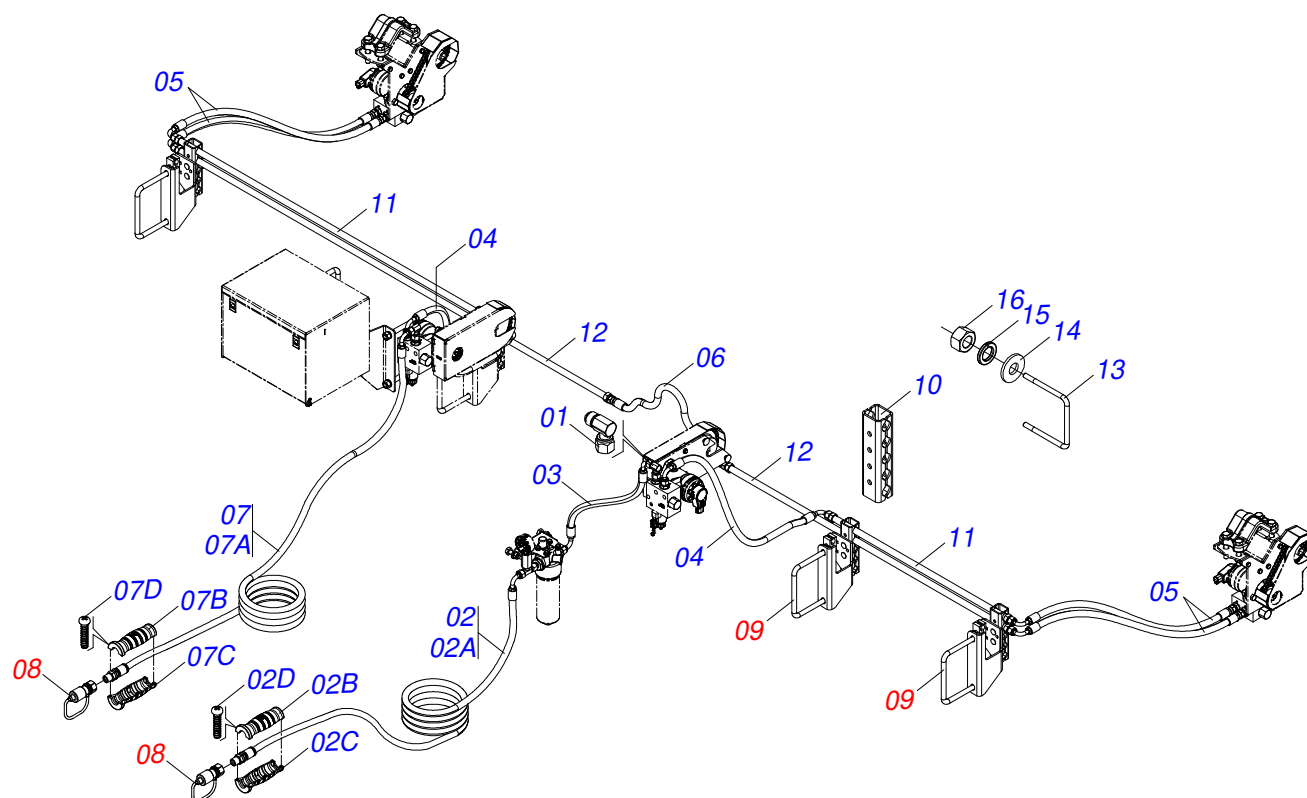


Item	Code	Description	See page	QT
01	0503018033	37 X R.7/8 UNF 90° JIC MALE CONNECTOR WITH ROTATING NUT		02
02	0521052519	HOSE 1/2 X 4200 TC-TM GRAY / RED		01
02A	0501081073	HOSE 1/2 X 4200 TC-TM		01
02B	0503034489	HYDRAULIC HOSE GAUNTLET (GRAY)		01
02C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
02D	0503018952	PLASTIC BOLT		06
03	0501080805	HOSE 1/2 X 520 TC-TC 90G LEFT		01
04	0501080811	HOSE 1/2 X 900 TC-TC 90G RIGHT		02
05	0501080825	1/2" X 1100 TR-TC HOSE		04
06	0501080036	HOSE 1/2 X 750 TR-TR		01
07	0521056480	HOSE 1/2 X 5500 TC-TM GRAY / BLUE		01
07A	0501082246	1/2 X 5500 TC-TM HOSE		01
07B	0503034489	HYDRAULIC HOSE GAUNTLET (GRAY)		01
07C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
07D	0503018952	PLASTIC BOLT		06
08	0501053834	MALE QUICK COUPLER	30	02
09	0521057259	OIL CONDUCTOR FIXATION	67	04
10	0581018415	PROTECTION BODY		08
11	0521069924	OIL DUTO R3/4 X 2460		02
12	0521069271	OIL DUCT R.3/4 X 2950		02
13	0521014021	1/2" X 4.5" X 5.4" FASTENER		08
14	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		16
15	0503010019	1/2" SPRING WASHER		16
16	0503010060	1/2 UNC G.5 ZN HEX NUT		16

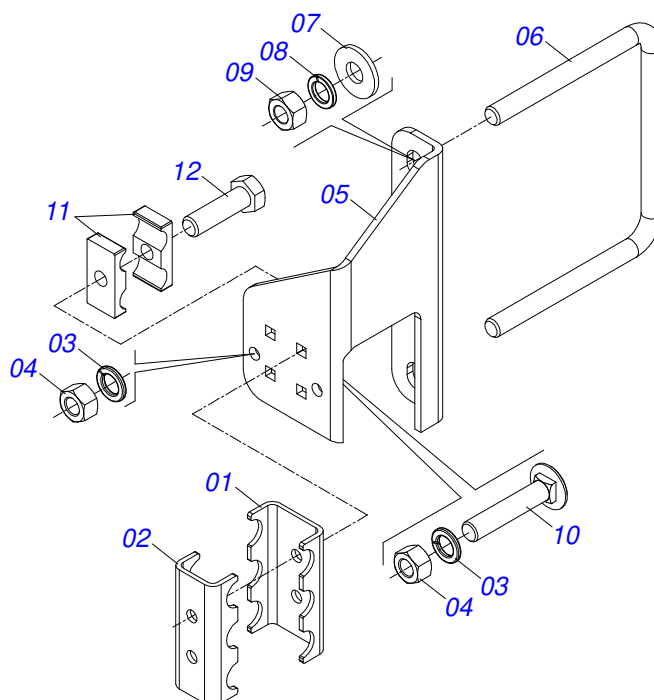


Item	Code	Description	See page	QT
01	0591012302	LOWER CLAMP FIXING OIL CONDUCTOR		01
02	0591012301	TOP CLAMP FIXING OIL CONDUCTOR		01
03	0503010025	3/8 SPRING WASHER		03
04	0503010026	3/8" NUT		03
05	0561017277	OIL CONDUCTOR FIXER PLATE		01
06	0521010718	5/8" U BOLT		01
07	0501012140	FLAT WASHER		02
08	0503010027	5/8 SPRING WASHER		02
09	0503010013	5/8 NUT		02
10	0501011755	3/8" X 3" BOLT		02
11	0502010477	HOSE CLAMP		02
12	0501010096	3/8" X 2" BOLT		01

GUTTER SET

0521058214

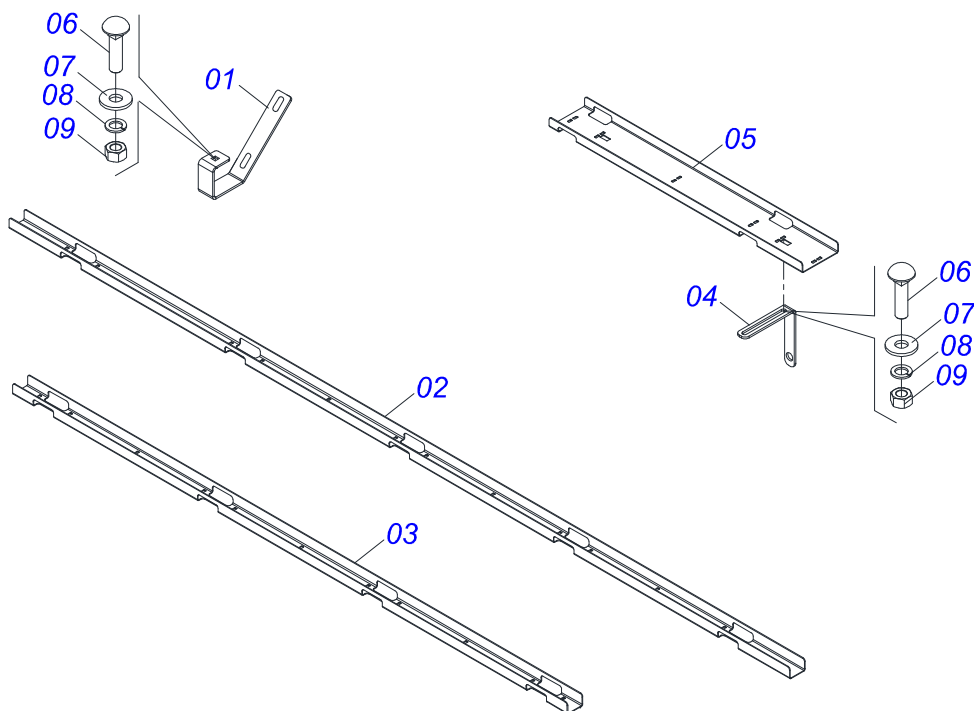


Item	Code	Description	See page	QT
01	0591012524	SUPPORT GUTTER FERTILIZER		08
02	0591012521	24 X 38 X 1900 GUTTER		02
03	0591012522	24 X 38 X 1350 GUTTER		02
04	0591012520	SEED GUTTER SUPPORT		06
05	0591012514	CENTRAL TRACK		03
06	0503013029	3/8" X 3/4" BOLT		14
07	0501013518	FLAT WASHER		14
08	0503010025	3/8 SPRING WASHER		14
09	0503010026	3/8" NUT		14

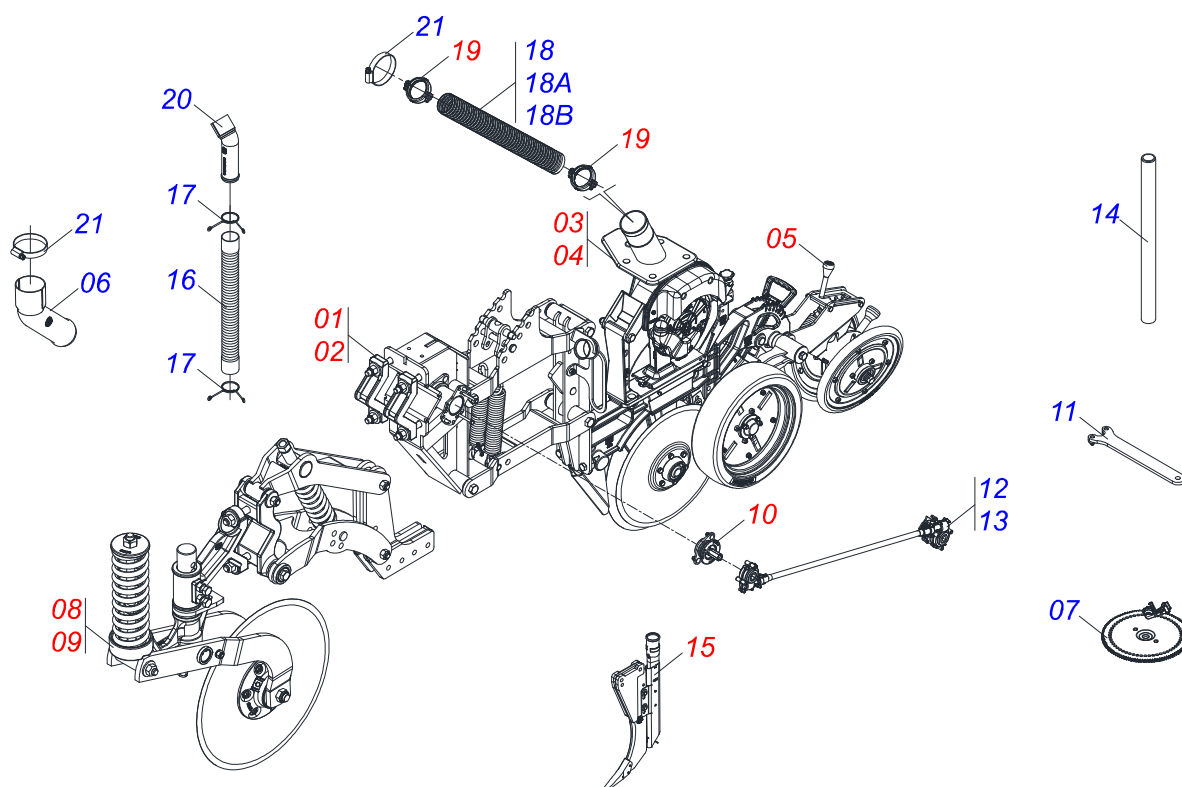


Item	Code	Description	See page	QT
01	0521056240	FRONT SHORT ROW	70	01
02	0521056241	FRONT LONG ROW	71	01
03	0521056941	RIGHT REAR P.P CSU TRANSMISSION/CABLE	73	01
04	0521056940	LEFT REAR P.P CSU TRANSMISSION CABLE	74	01
05	0521055053	DEPTH/COMPACTOR SYSTEM - SPCRR	84	01
06	0503031050	CURVED CONDUCTOR		01
07	0503062763	CONVERSION ASSY FOR DISTRIBUTOR SOY / BEANS		01
08	0521056069	SEMI-ASSEMBLED SHORT FERTILIZER ROW	95	01
09	0521056066	SEMI-ASSEMBLED LONG FERTILIZER ROW	96	01
10	0521051447	FRONT ASSY ROW BEARING	100	01
11	0521068982	DISC BLADE HUB KEY		01
12	0503063031	1200 TRANSMISSION ROW SET		01
13	0503063033	1350 TRANSMISSION ROW SET		01
14	0531013600	PRESS ADJUSTMENT LEVER		01
15	0521057552	ASSY SCARIFYING ROD	101	01
16	0503031145	2" X 2" X 20" HOSE		01
17	0503031076	2" HOSE CLAMP		01
18	0531059865	RIGHT SEED CONDUCTOR WITH PROTECTION		01
18A	0501310971	SEED CONDUCTOR RIGHT 3 X 1500		01
18B	1164930001	BLACK VINYL TUBE 3.1/2		02
19	0531050237	SEED CONDUCTOR FIXER 3 CSU RIGHT	103	01
20	0503031826	CURVED CONDUCTOR		01
21	0503010246	CLAMP		01

FRONT SHORT ROW


0521056240

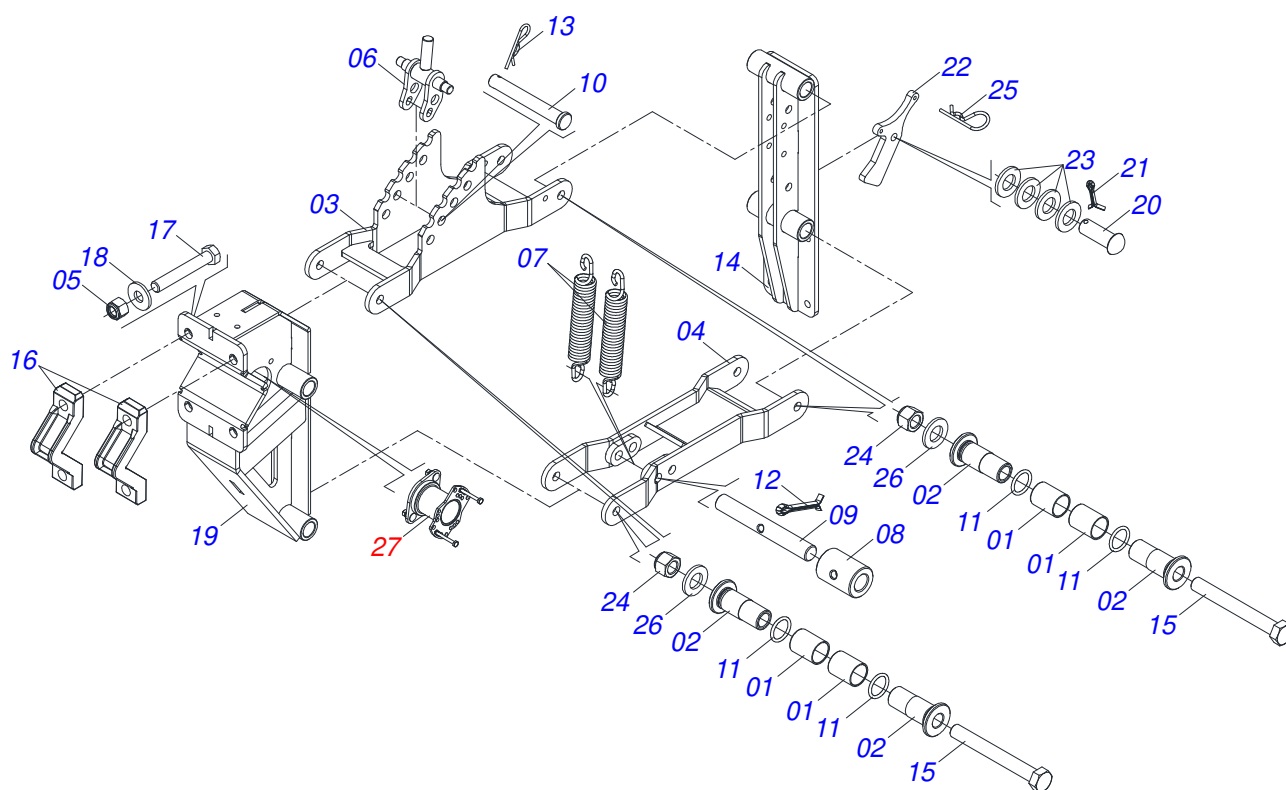


Item	Code	Description	See page	QT
01	0503019273	AUTO LUBRICANT SLEEVE	08	
02	0591011316	SEED ROW SUPPORT SLEEVE	08	
03	0531060069	TOP ARM	01	
04	0531062744	FRONT LOWER ARM SHORT SEED ROW	01	
05	0503010811	5/8" UNF SELF ADJUSTING NUT	04	
06	0531060077	PRESSURE REGULATOR	01	
07	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING	02	
08	0591010915	SPRING REGULATOR	01	
09	0591010914	LOWER AXLE	01	
10	0591011315	SPRING AXLE	01	
11	0503010045	O'RING	08	
12	0503010131	3/16" X 1-1/2" COTTERPIN	01	
13	0503030168	HITCH PIN CLIP	01	
14	0531060068	REAR ROW	01	
15	0503019295	SCREW 5/8 UNF X 7 CS RP G.5 ZN	04	
16	0502010175	HITCH CLAMP	02	
17	0503017857	BOLT 5/8 UNF 4	04	
18	0501012140	FLAT WASHER	04	
19	0531060073	FRONT ROW SUPPORT	01	
20	0521010542	COUPLING SHAFT	01	
21	0503010300	5/32" X 1" COTTERPIN	01	
22	0591010913	TRANSPORT BUMPER	01	
23	0501010301	FLAT WASHER	04	
24	0503010878	5/8" SELF ALIGNING NUT	04	
25	0503030012	HITCH PIN CLIP	01	
26	0571016296	FLAT WASHER	04	
27	0531052956	ASSEMBLY SEED ROW TRANSMISSION FIXING 72 BEARING	01	

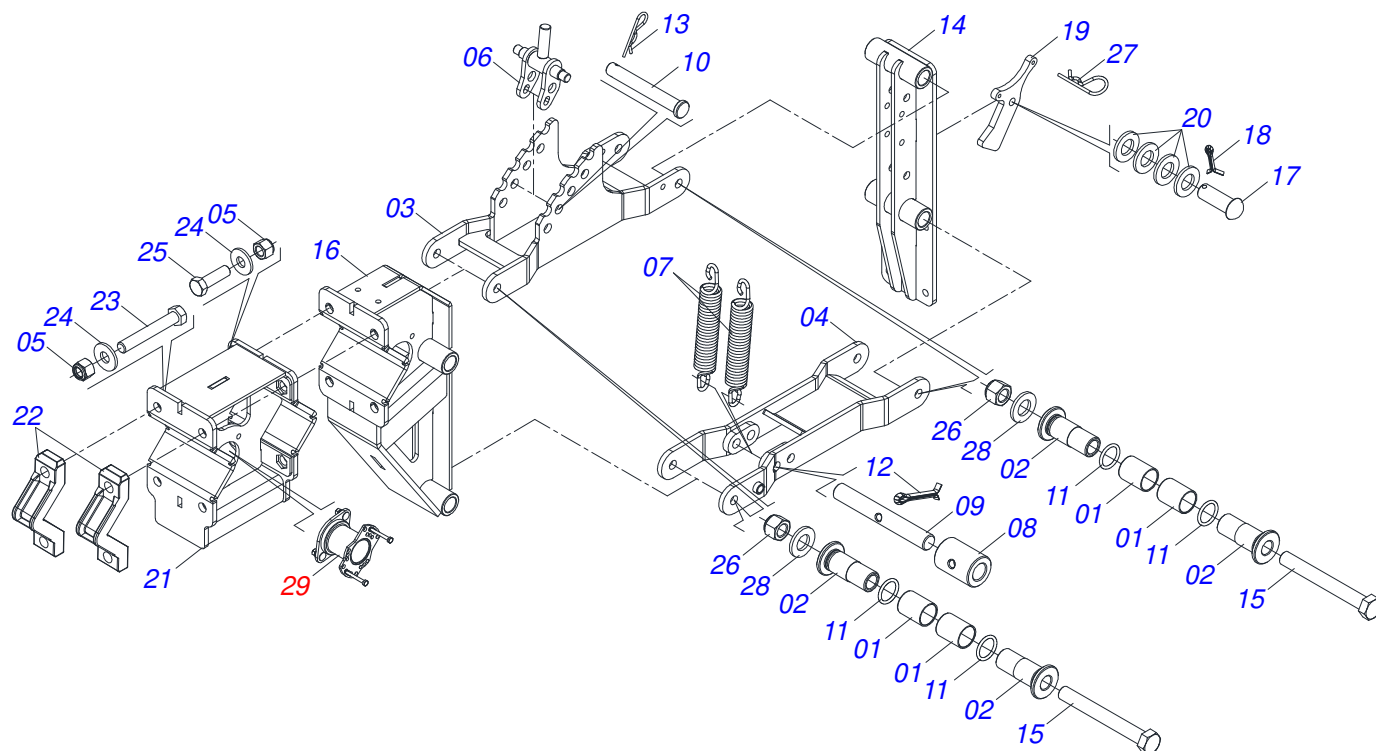


Item	Code	Description	See page	QT
01	0503019273	AUTO LUBRICANT SLEEVE	08	
02	0591011316	SEED ROW SUPPORT SLEEVE	08	
03	0531060069	TOP ARM	01	
04	0531060070	LOWER ARM	01	
05	0503010811	5/8" UNF SELF ADJUSTING NUT	08	
06	0531060077	PRESSURE REGULATOR	01	
07	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING	02	
08	0591010915	SPRING REGULATOR	01	
09	0591010914	LOWER AXLE	01	
10	0591011315	SPRING AXLE	01	
11	0503010045	O'RING	08	
12	0503010131	3/16" X 1-1/2" COTTERPIN	01	
13	0503030168	HITCH PIN CLIP	01	
14	0531060068	REAR ROW	01	
15	0503019295	SCREW 5/8 UNF X 7 CS RP G.5 ZN	04	
16	0531060073	FRONT ROW SUPPORT	01	
17	0521010542	COUPLING SHAFT	01	
18	0503010300	5/32" X 1" COTTERPIN	01	
19	0591010913	TRANSPORT BUMPER	01	
20	0501010301	FLAT WASHER	04	
21	0531060072	EXTENDER	01	
22	0502010175	HITCH CLAMP	02	
23	0503017857	BOLT 5/8 UNF 4	04	
24	0501012140	FLAT WASHER	08	
25	0503012798	5/8" X 2" BOLT	04	
26	0503010878	5/8" SELF ALIGNING NUT	04	
27	0503030012	HITCH PIN CLIP	01	
28	0571016296	FLAT WASHER	04	
29	0531052956	ASSEMBLY SEED ROW TRANSMISSION FIXING 72 BEARING	01	

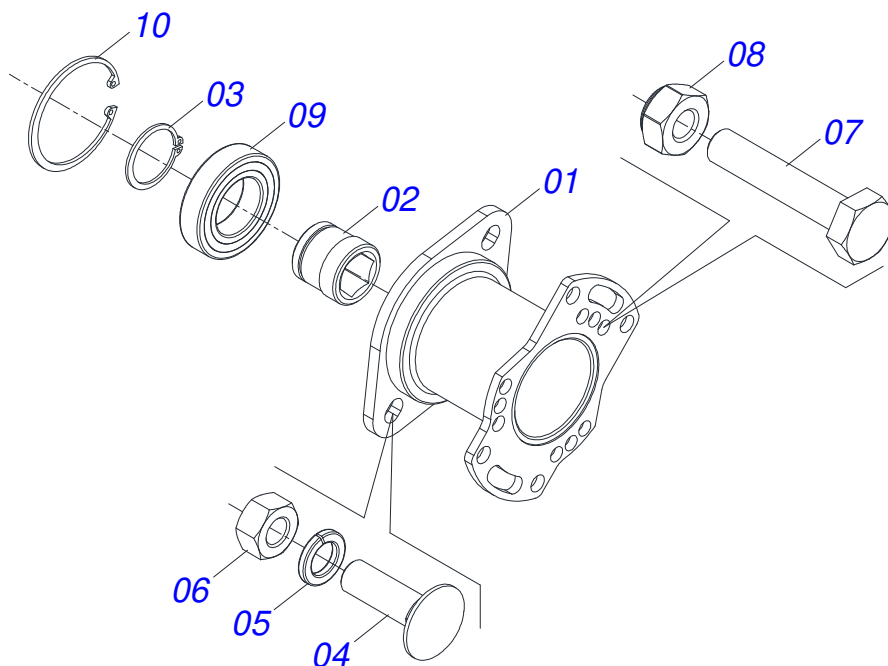


Item	Code	Description	See page	QT
01	0531060071	BEARING		01
02	0551015804	BEARING AXLE BODY		01
03	0503010707	501030 CLAMPING RING (FOR AXLE)		01
04	0503011953	5/16" X 1" BOLT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02
07	0503011194	BOLT 1/4 UNC X 2.1/2 CS G.2 ZN		02
08	0503012880	1/4" UNC SELF ADJUSTING NUT		02
09	0503019373	6006 2RS1 NATIONAL BEARING		01
10	0503012858	502075 CLAMPING RING (FOR HOLE)		01

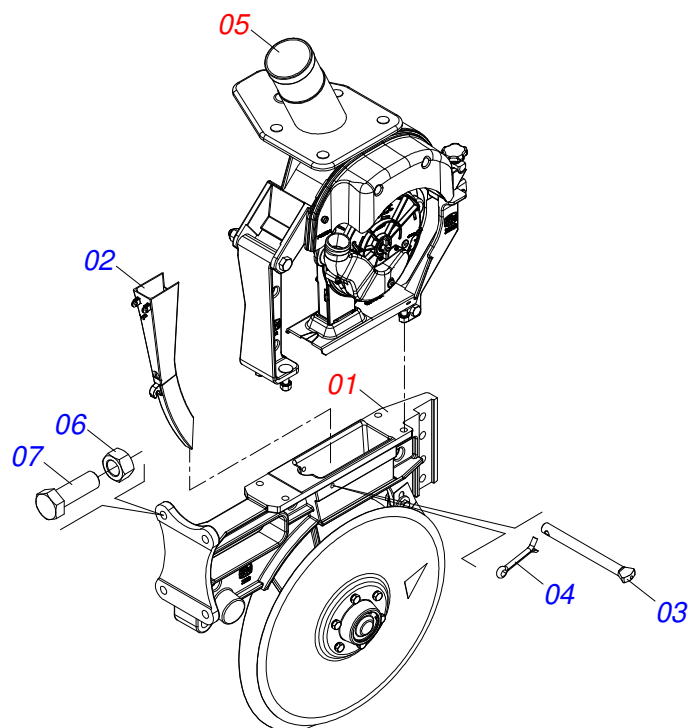


Item	Code	Description	See page	QT
01	0521056955	RIGHT DDD ASSY	75	01
02	0503062403	TUBE SEED P.P		01
03	0571017895	PIN FIXER CONDUCTOR P.P		01
04	0503010140	1/8" X 3/4" COTTERPIN		01
05	0521056956	PRECISION PLANTING CABLE/TRANSMISSION ASSY	CSU 80	01
06	0503012136	NUT 1/2 NF		04
07	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04

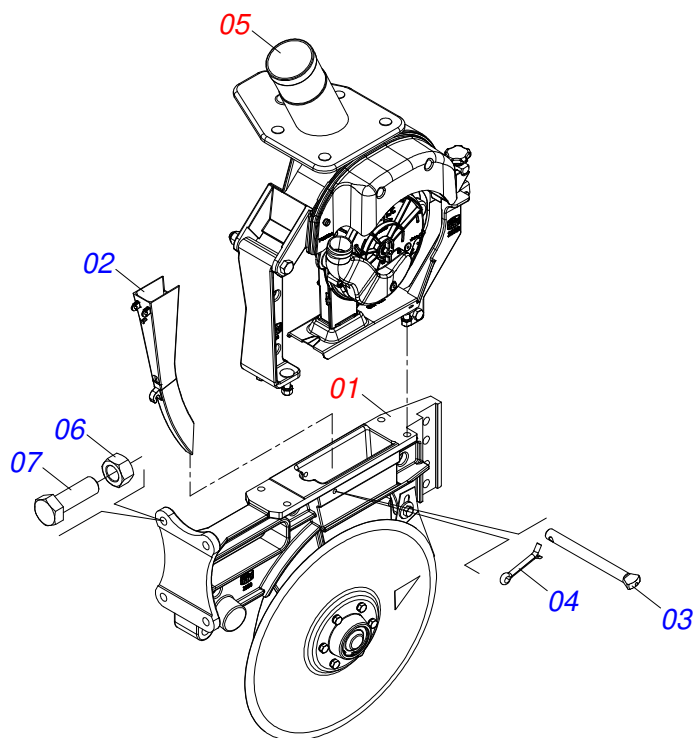


Item	Code	Description	See page	QT
01	0521056954	LEFT DDD ASSY	83	01
02	0503062403	TUBE SEED P.P		01
03	0571017895	PIN FIXER CONDUCTOR P.P		01
04	0503010140	1/8" X 3/4" COTTERPIN		01
05	0521056956	PRECISION PLANTING CABLE/TRANSMISSION ASSY	CSU 80	01
06	0503012136	NUT 1/2 NF		04
07	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04

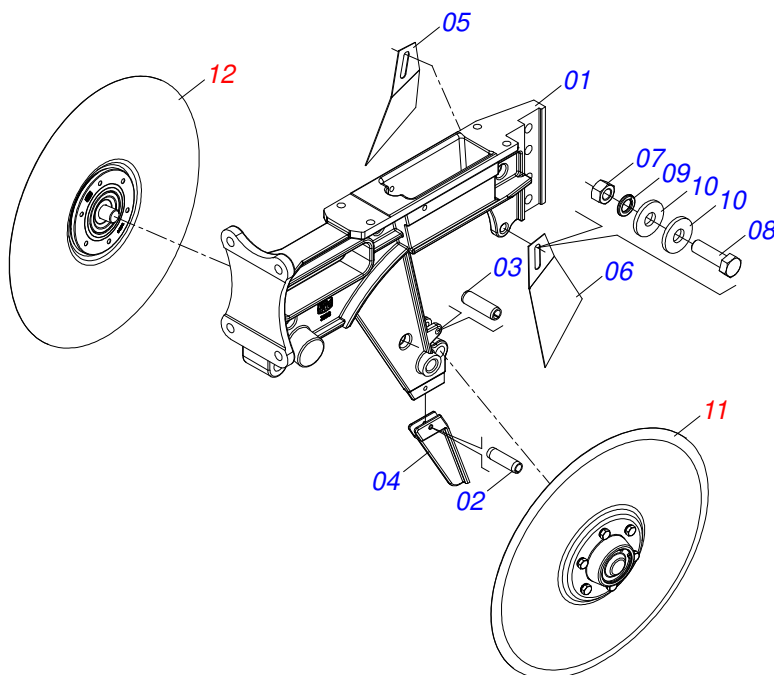


Item	Code	Description	See page	QT
01	0591011773	RIGHT DDD BODY		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 76 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 77 FERTILIZER / SEED		01

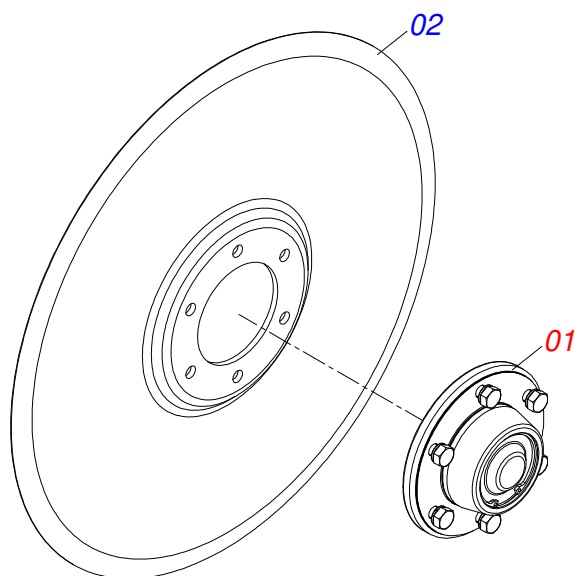


Item	Code	Description	See page	QT
01	0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	78	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

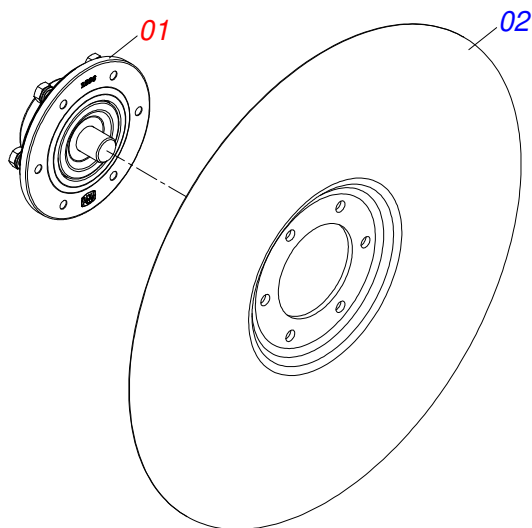


Item	Code	Description	See page	QT
01	0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	79	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

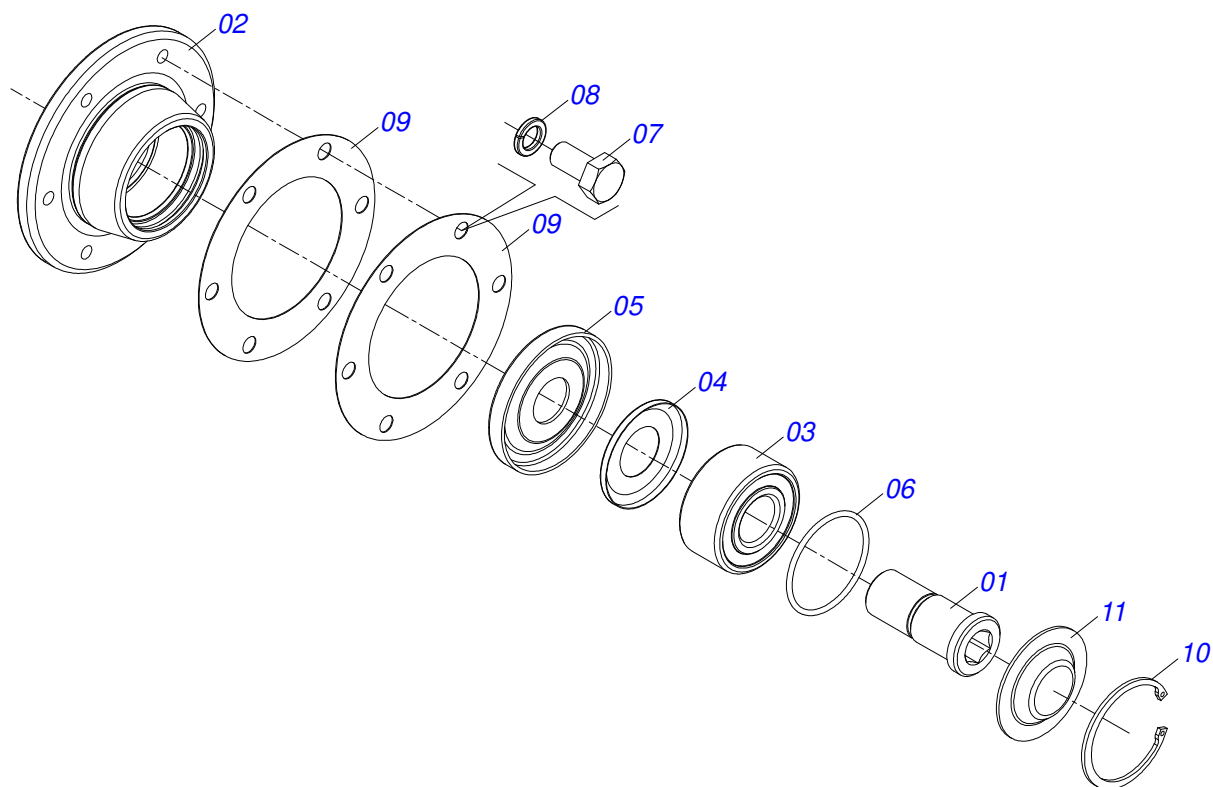


Item	Code	Description	See page	QT
01	0571011151	LEFT DOUBLE DISC HUB		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

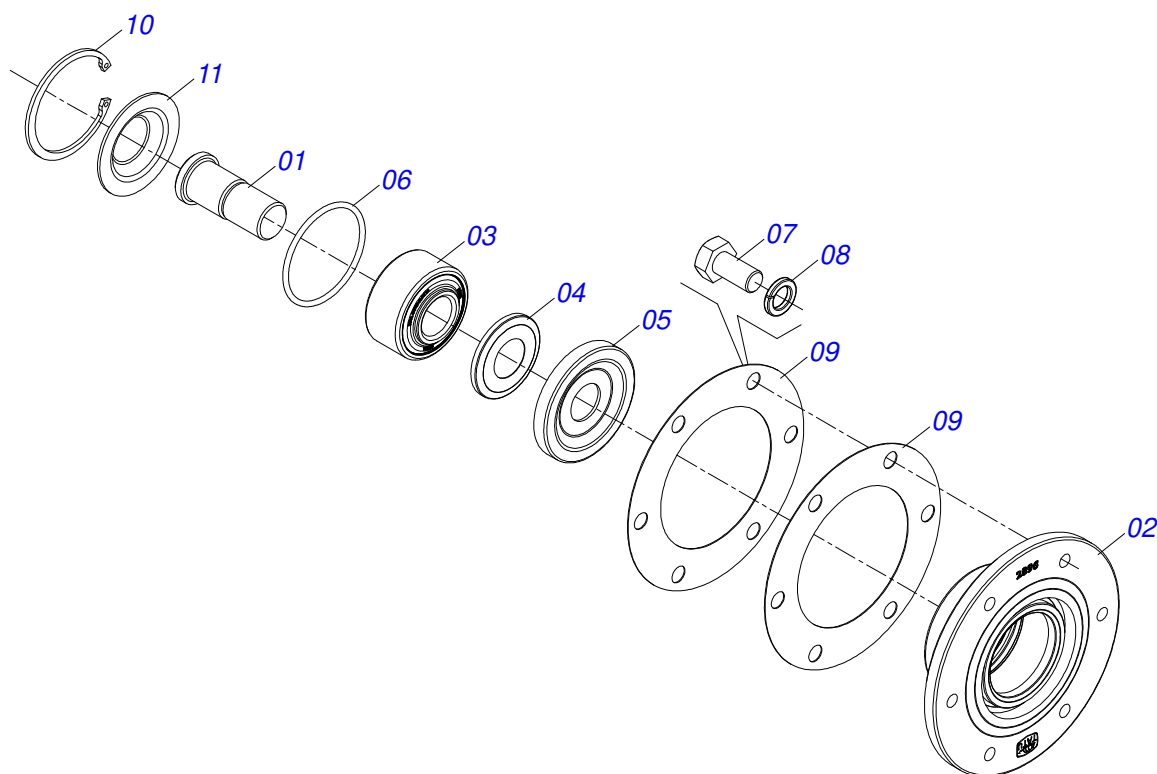


Item	Code	Description	See page	QT
01	0571011150	RIGHT DOUB DISC - HUB		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

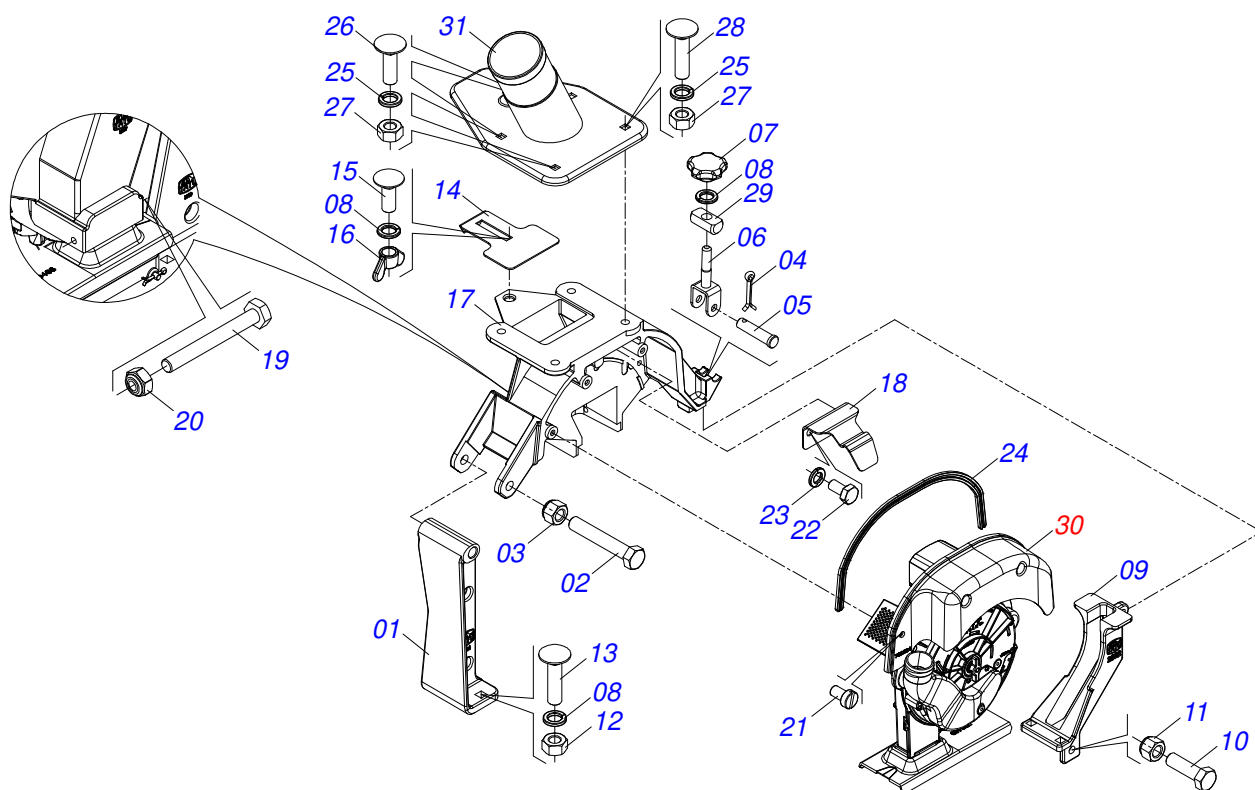

Item	Code	Description	See page	QT
01	0502012924	PRECISION PLANTING SUPPORT		01
02	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
03	0503010589	1/2" UNC SELF ADJUSTING NUT		01
04	0503010140	1/8" X 3/4" COTTERPIN		01
05	0571014024	FAST BOLT GUIDE AXLE		01
06	0503034824	FIXATIVE		01
07	0503010293	CLAMP KNOB		01
08	0503010025	3/8 SPRING WASHER		06
09	0502012922	FIXING SUPPORT		01
10	0503011404	BOLT		01
11	0503013357	3/8 SELF-ADJUSTING NUT		01
12	0503010026	3/8" NUT		04
13	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04
14	0571019491	SLUICE PNEUMATIC		01
15	0501011643	3/8 X 1" BOLT		01
16	0503010209	3/8" UNC BUTTERFLY NUT		01
17	0502012807	SUPPORT HOPPER PRECISION PLANTING		01
18	0571019489	CLAMP PRECISION PLANTING		01
19	0503012721	1/4" X 4" BOLT		01
20	0503012880	1/4" UNC SELF ADJUSTING NUT		01
21	0503818139	BOLT		03
22	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		02
23	0503015110	M06 SPRING WASHER		02
24	0503037390	PACKING FOR PLANTING		01
25	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
26	0503011953	5/16" X 1" BOLT		03
27	0503010337	5/16" NUT		04
28	0503012163	5/16" X 1-1/2" BOLT		01
29	0581011226	FIXER CLOSING P. PLANTING CONTROL CPRA		01
30	0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN 81 DISC		01
31	0521066707	FEEDER		01

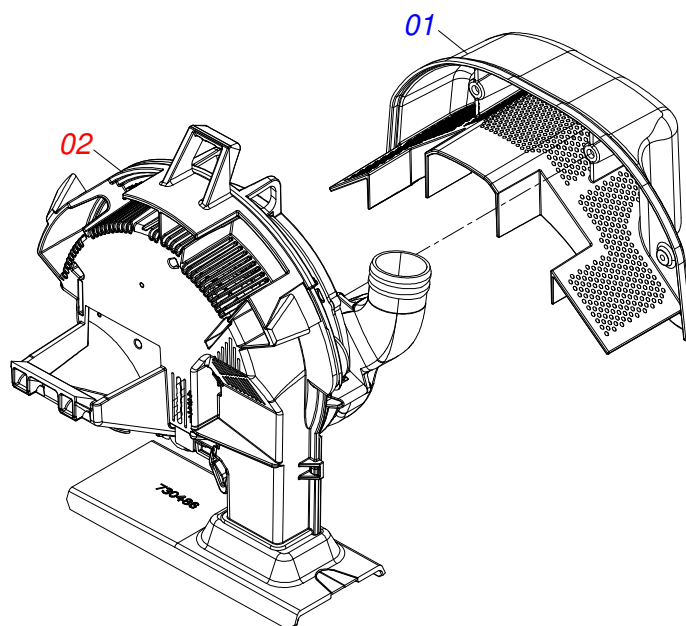


Item	Code	Description	See page	QT
01	0571019613	STRAW PRECISION PLANTING SHIELD		01
02	0521052131	VSET2 DISTRIBUTOR WITH CORN DISC WITHOUT PROTECTION	82	01

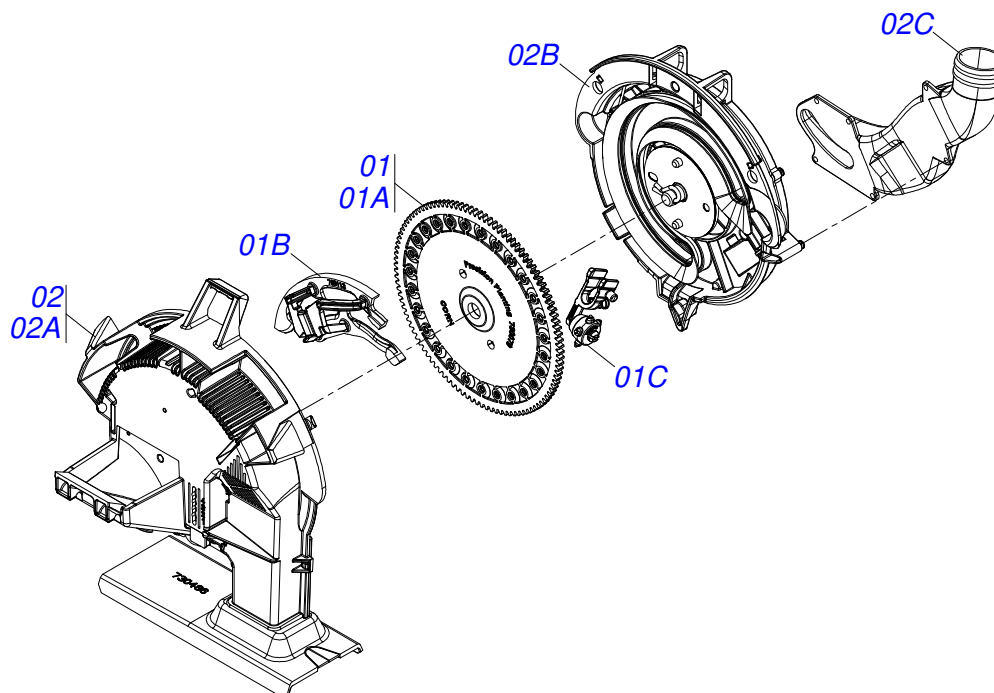


Item	Code	Description	See page	QT
01	0503062417	KIT CORN DISTRIBUTION		01
01A	0503018160	CORN PLASTIC DISC		01
01B	0503062472	SELECTOR SEED CORN		01
01C	0503062474	EJECTOR CORN SEED SET		01
02	0503062405	SEED DISTRIBUTOR		01
02A	0503062567	FIXED BASE SEEDS DISTRIBUTOR		01
02B	0503062974	MOBILE BASE WITHOUT SNORKEL		01
02C	0503062973	SNORKEL ASSY PP768718		01

LEFT DDD ASSY


0521056954

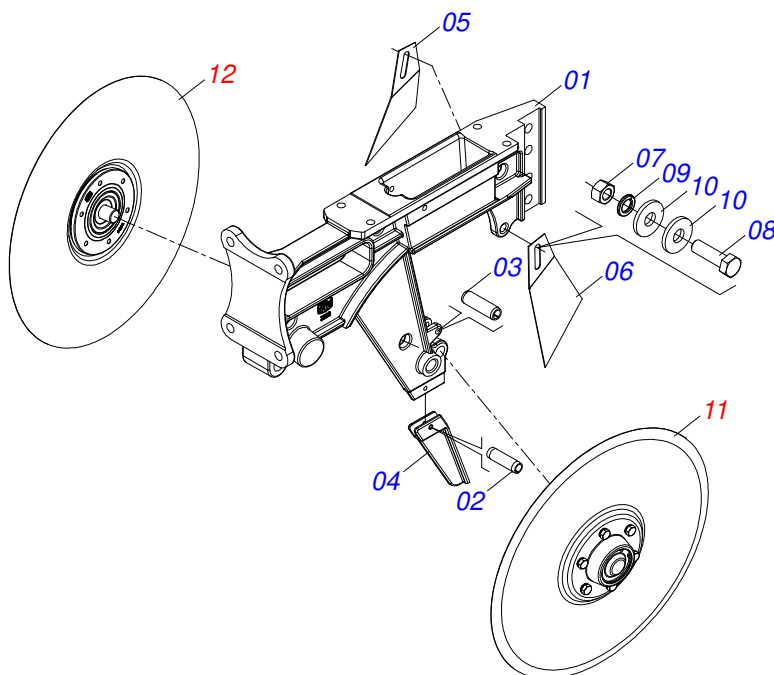


Item	Code	Description	See page	QT
01	0591011772	LEFT DDD BODY		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 76 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 77 FERTILIZER / SEED		01

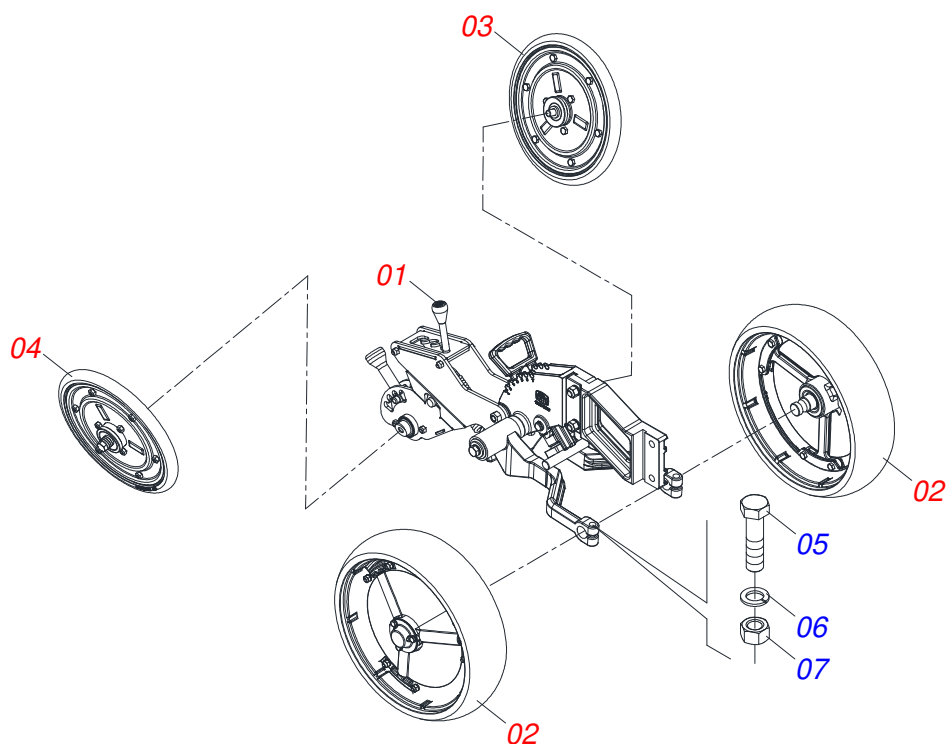


Item	Code	Description	See page	QT
01	0521055065	ASSY DEPTH / COMPACTOR	85	01
02	0521055068	RAYED WHEEL CENTER CLOSED	90	02
03	0521054990	LEFT COMPACTOR WHEEL	92	01
04	0521055017	RIGHT COMPACTOR WHEEL	94	01
05	0503016453	1/2" X 2.1/2 BOLT		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010028	1/2" NUT		02

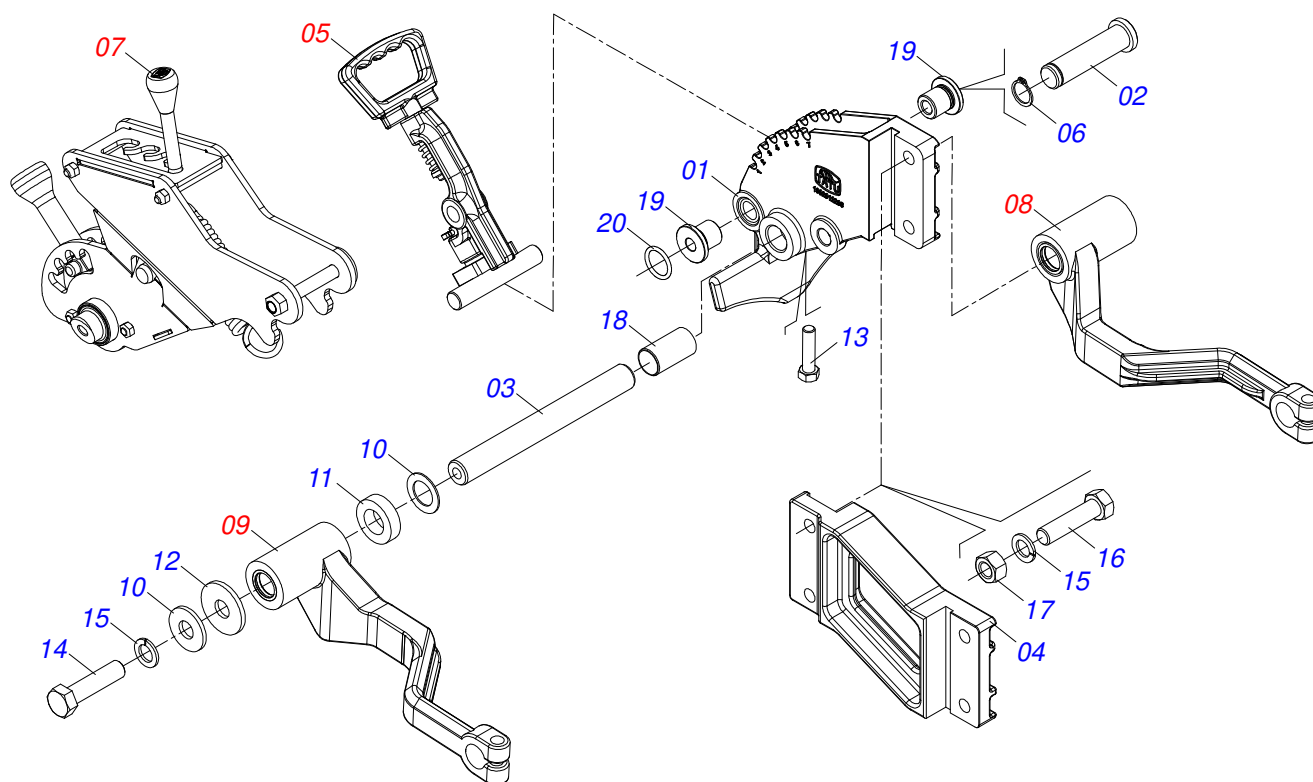


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0571013054	DEPTH CONTROL WHEEL AXLE		01
04	0502012663	EXTENSION		01
05	0501056769	DEPTH WHEELS REGULATOR ASSY	86	01
06	0503019398	AXLE RETAINER RING		01
07	0521055033	SEMI-ASSEMBLED COMPACTOR BODY	87	01
08	0521055054	LEFT ARM WITH SLEEVE	88	01
09	0521055066	RIGHT ARM WITH SLEEVE	89	01
10	0511015346	FLAT WASHER		04
11	0571015974	WASHER		02
12	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
13	0503010256	3/8" X 3/4" BOLT		01
14	0503010311	1/2" X 1-1/4" BOLT		02
15	0503010019	1/2" SPRING WASHER		04
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2 UNC G.5 ZN HEX NUT		02
18	0503019275	SLEEVE LUBRICATION SYSTEM		01
19	0581019473	ARTICULATED SLEEVE		02
20	0503010045	O'RING		02

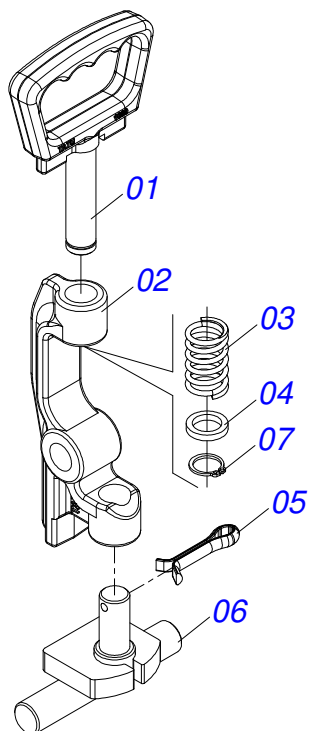


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

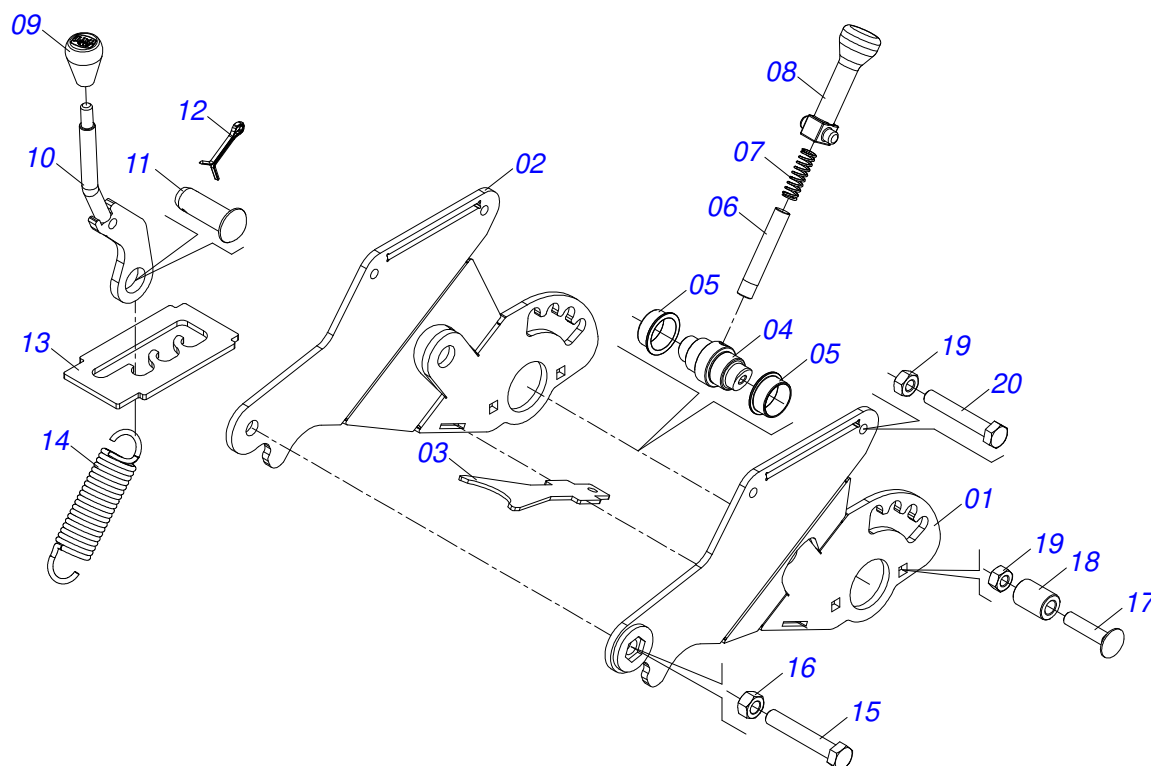


Item	Code	Description	See page	QT
01	0521069585	LEFT SIDE		01
02	0581019475	RIGHT SIDE BODY		01
03	0581019511	COVER		01
04	0581019510	AXIS		01
05	0503019351	LUBRICANT SLEEVE		02
06	0581019520	AXIS		01
07	0503030190	0.5" X 1.6" X 0.05" SPRING		01
08	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
09	0503030878	LEVER CRANK		01
10	0521068661	LEVER		01
11	0571012442	COUPLING SHAFT		01
12	0503010257	1/8" X 1" COTTERPIN		01
13	0581019512	PLATE TOP		01
14	0503034817	SPRING		01
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503011336	1/2" HEX SELF ADJUSTING NUT		01
17	0501011753	5/16" X 1-3/4" BOLT		02
18	0581015855	SLEEVE		02
19	0503013816	5/16" LOCKNUT		04
20	0503010848	5/16" X 3.1/2" BOLT		02

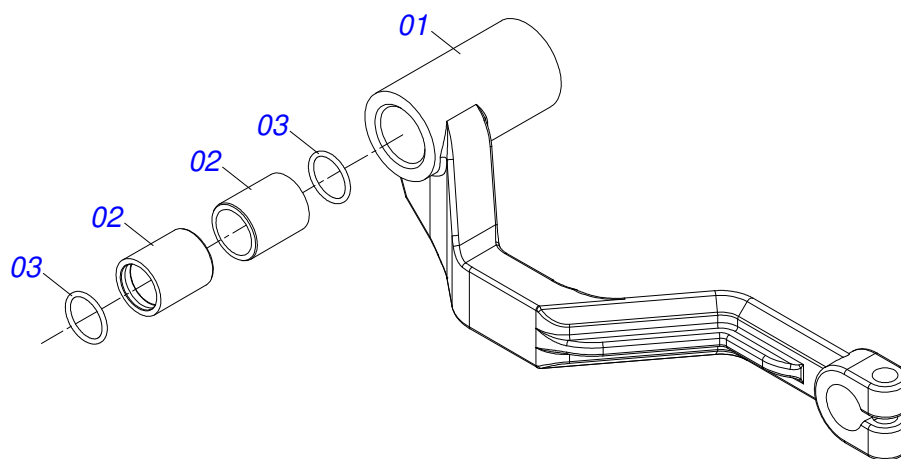


Item	Code	Description	See page	QT
01	0581019523	LEFT ARM WHEEL DEPTH		01
02	0581019514	LUBRICANT SLEEVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

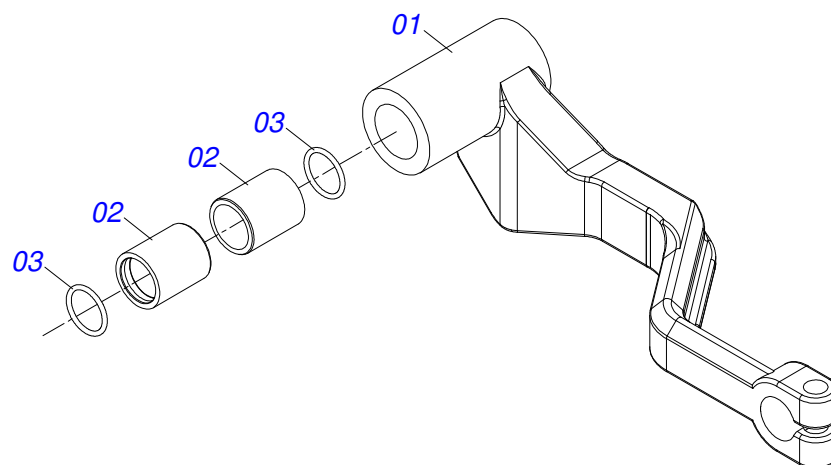


Item	Code	Description	See page	QT
01	0581019524	RIGHT ARM DEPTH		01
02	0581019514	LUBRICANT SLEEVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

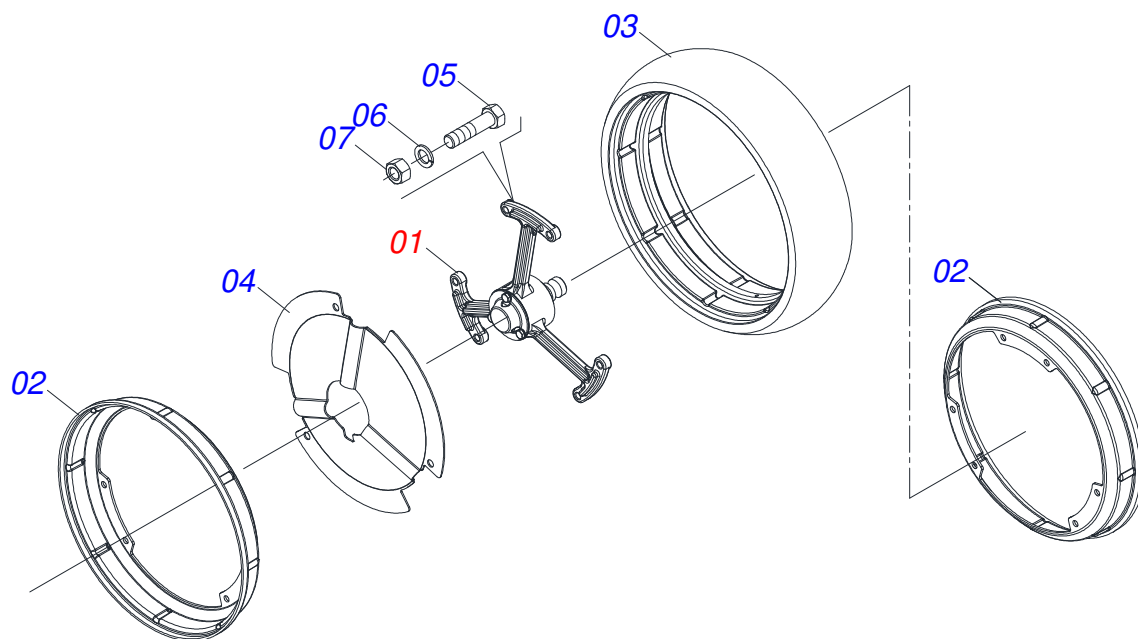


Item	Code	Description	See page	QT
01	0521055055	HUB WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	91	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
07	0503010337	5/16" NUT		06

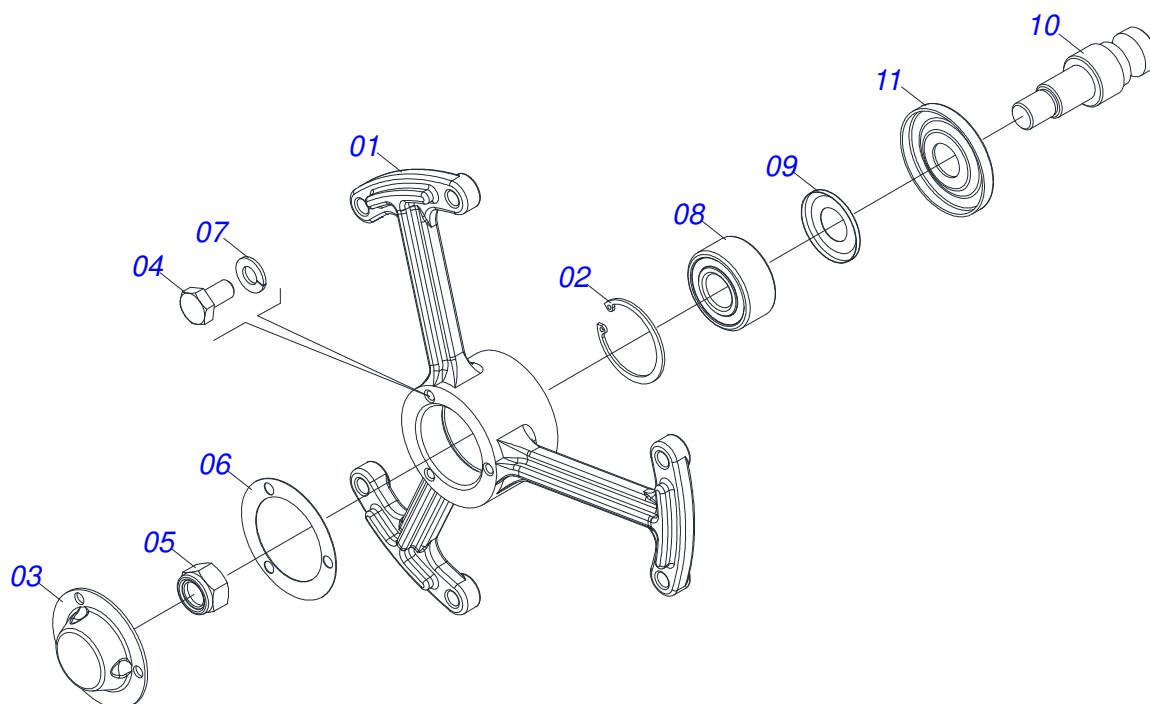


Item	Code	Description	See page	QT
01	0581019522	CASE WHEEL DEPTH WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010878	5/8" SELF ALIGNING NUT		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0503010143	1/4" SPRING WASHER		03
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019529	DEPTH REGULATOR SHAFT		01
11	0581019168	DUST CLOAK		01

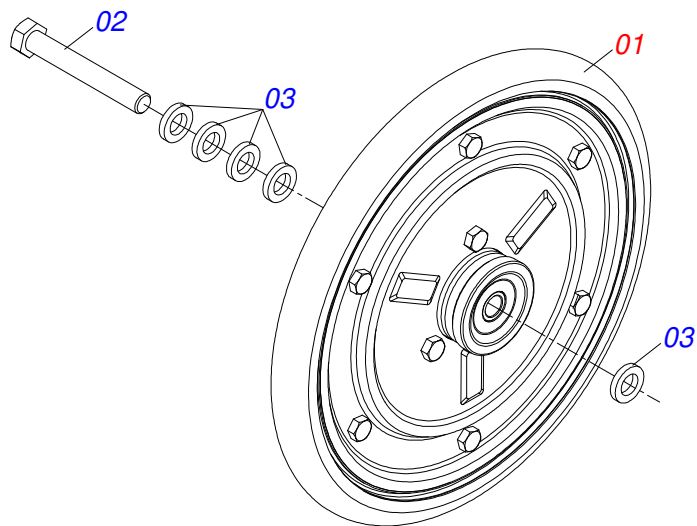


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	93	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

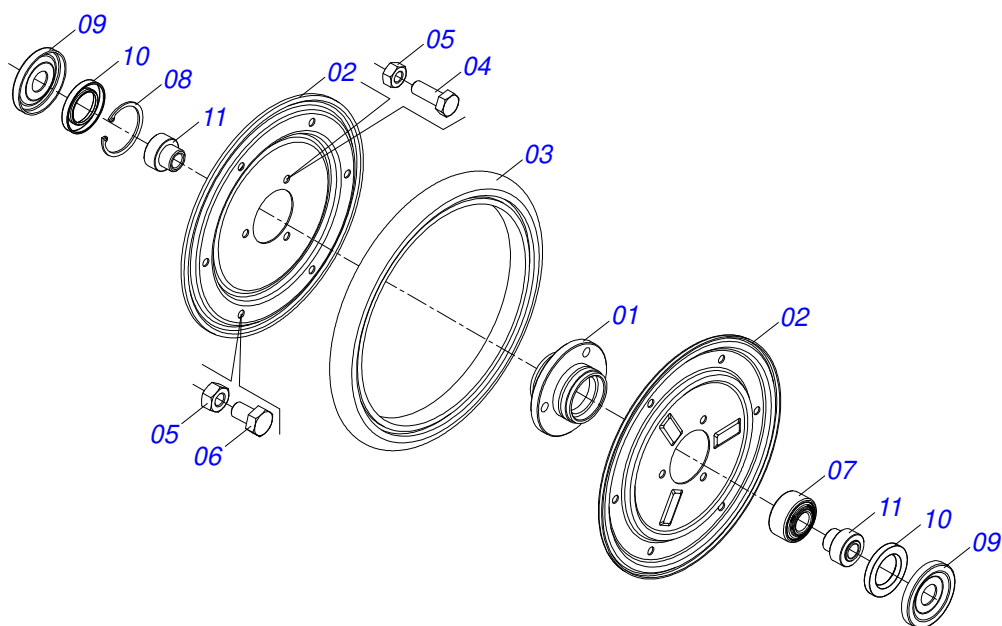


Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

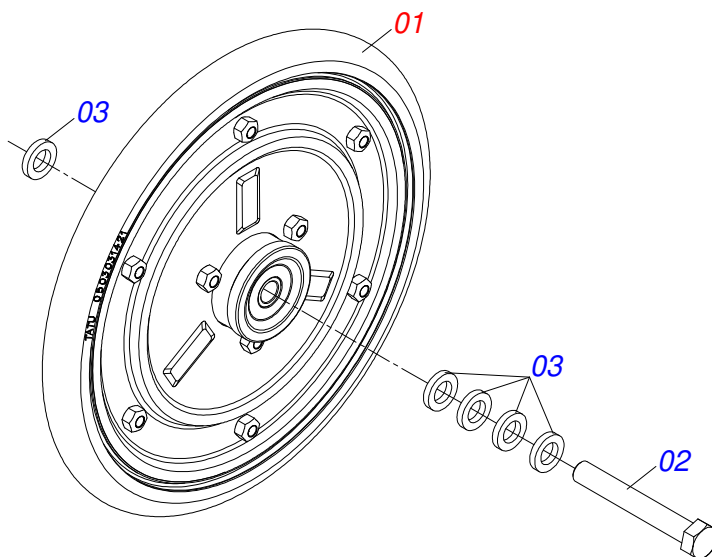


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	93	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

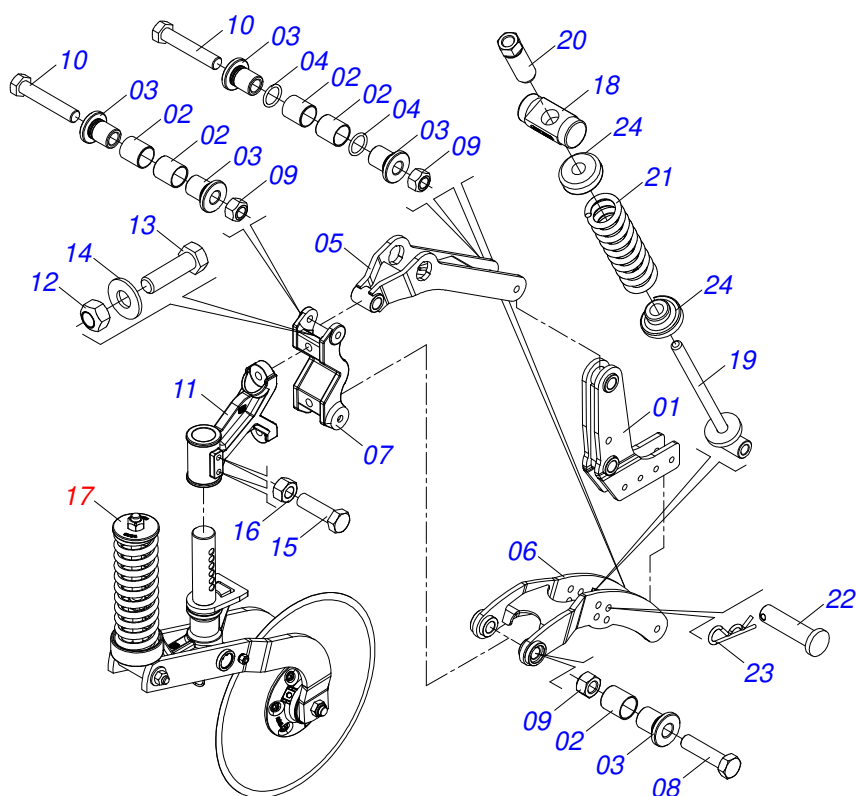


Item	Code	Description	See page	QT
01	0531060002	FERTILIZER ROW REAR SUPPORT		01
02	0503019405	SLEEVE		08
03	0591010640	ARM SPACER SLEEVE WITHOUT LUBRICATION		08
04	0503010045	O'RING		04
05	0531060001	TOP SUPPORT FERTILIZER ROW		01
06	0521069998	LOWER SUPPORT FERTILIZER ROW		01
07	0591010629	SHORT FERTILIZER ROW SUPPORT		01
08	0503010233	5/8" X 2-1/2" BOLT		02
09	0503012412	5/8" UNC SELF LOCKING NUT		05
10	0501010452	5/8" X 5" BOLT		03
11	0502012727	BLADE DISC SUPPORT		01
12	0503011255	3/4" LOCK NUT		02
13	0503011328	3/4" X 4" BOLT		02
14	0501010322	FLAT WASHER		02
15	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
16	0503010013	5/8 NUT		02
17	0521056070	DC 20 ASSY	97	01
18	0521011158	SPRING LOCKNUT		01
19	0521062073	SPRING GUIDE		01
20	0521018575	REGULATOR SPINDLE 100		01
21	0503031450	2.7" X 9.2" X 0.03" SPRING		01
22	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
23	0503030168	HITCH PIN CLIP		01
24	0502020393	SPRING UPPER SUPPORT		02

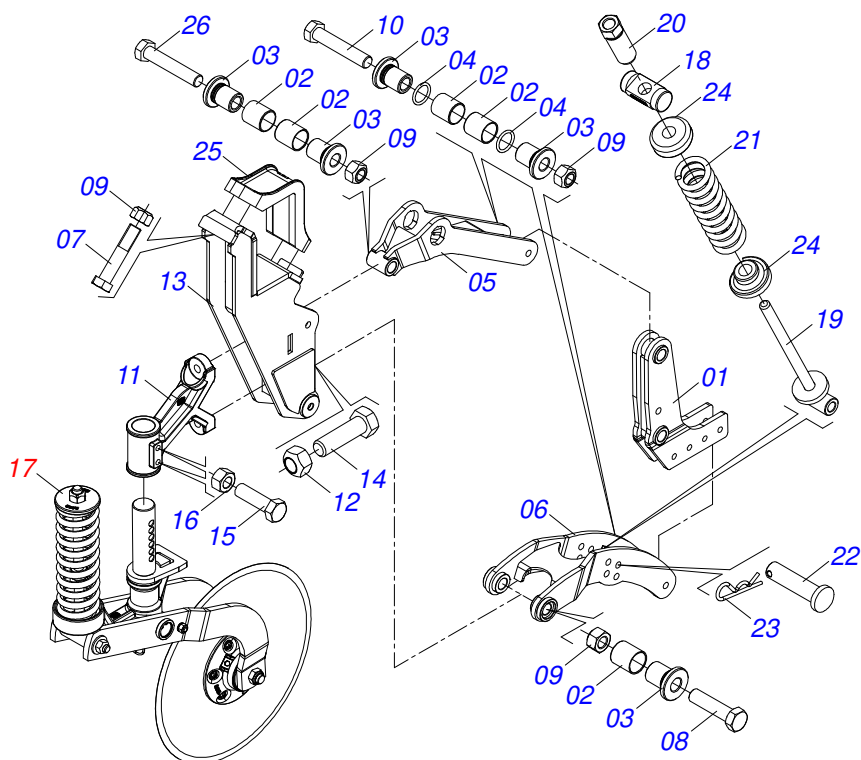

Item	Code	Description	See page	QT
01	0531060002	FERTILIZER ROW REAR SUPPORT		01
02	0503019405	SLEEVE		08
03	0591010640	ARM SPACER SLEEVE WITHOUT LUBRICATION		08
04	0503010045	O'RING		04
05	0531060001	TOP SUPPORT FERTILIZER ROW		01
06	0521069998	LOWER SUPPORT FERTILIZER ROW		01
07	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		04
08	0503010233	5/8" X 2-1/2" BOLT		02
09	0503012412	5/8" UNC SELF LOCKING NUT		09
10	0501010452	5/8" X 5" BOLT		02
11	0502012727	BLADE DISC SUPPORT		01
12	0503011255	3/4" LOCK NUT		02
13	0521069993	LONG FERTILIZER ROW SUPPORT		01
14	0501010125	3/4" X 2-1/2" BOLT		02
15	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
16	0503010013	5/8 NUT		02
17	0521056070	DC 20 ASSY	97	01
18	0521011158	SPRING LOCKNUT		01
19	0521062073	SPRING GUIDE		01
20	0521018575	REGULATOR SPINDLE 100		01
21	0503031450	2.7" X 9.2" X 0.03" SPRING		01
22	0521016057	COUP SHA OF THE CARRY-W SPRING GUI		01
23	0503030168	HITCH PIN CLIP		01
24	0502020393	SPRING UPPER SUPPORT		02
25	0502012724	FERTILIZER ROW FIXER		01
26	0501010163	5/8" X 4-1/2" BOLT		01

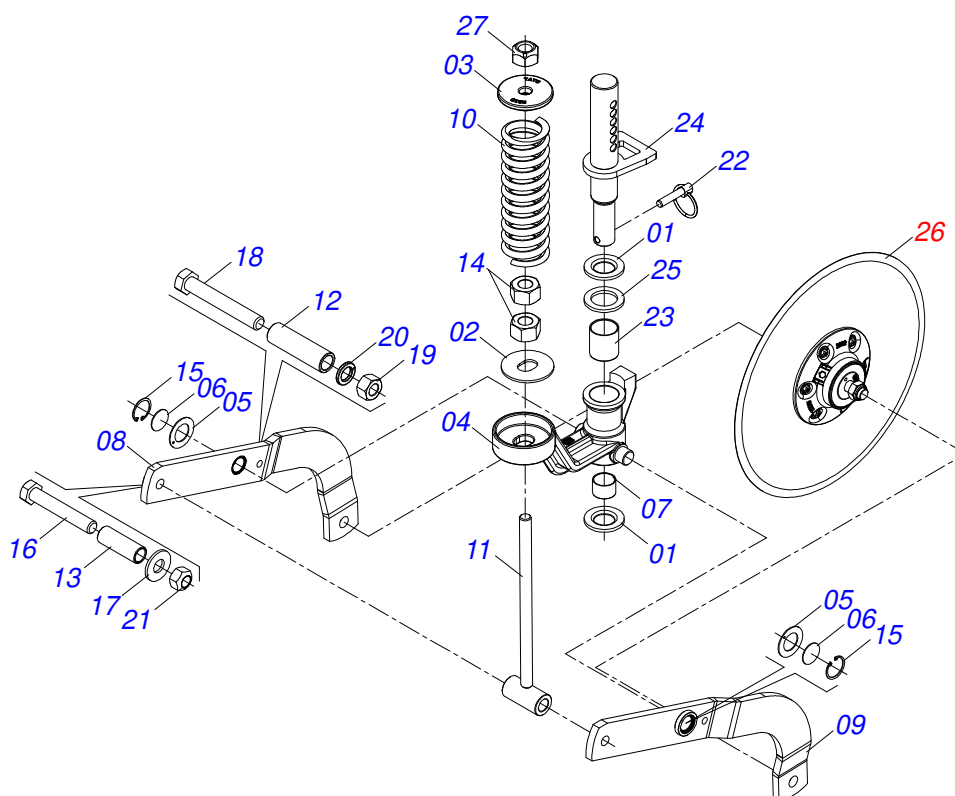


Item	Code	Description	See page	QT
01	0571019034	FLANGE WASHER AXLE		02
02	0571019032	SUPPORT WASHER		01
03	0502012813	FLANGE WASHER SPRING		01
04	0591010619	DC SPRING SUPPORT		01
05	0503019274	WASHER		02
06	0581017628	LID		02
07	0503019277	SLEEVE LUBRICATION SYSTEM		01
08	0501110964	RIGHT ARM WITH SLEEVE		01
09	0501110965	LEFT ARM WITH SLEEVE		01
10	0503034709	COMPRESSION SPRING 100 X 315 X 15.87		01
11	0521069996	ROD SPRING FERTILIZER		01
12	0591010624	SUPPORT ARM SLEEVE		01
13	0591010625	19,50 X 25 X 91,50/91,30 SLEEVE		01
14	0503010417	7/8" NUT		02
15	0503010390	SEAL RING		02
16	0503011198	C3/4" X 6" SCREW		01
17	0501010322	FLAT WASHER		01
18	0503011411	1/2" X 5-1/2" BOLT		01
19	0503010060	1/2 UNC G.5 ZN HEX NUT		01
20	0503010019	1/2" SPRING WASHER		01
21	0503011255	3/4" LOCK NUT		01
22	0503030430	7/16 X 2" PIN LOCK		01
23	0503019271	SELF LUBRICATING BUSHING		01
24	0521069997	DC FIXING AXIS WITH LIMITER		01
25	0591010628	DC AXIS BACKREST WASHER		01
26	0521053248	20" DISC BLADE HUB WITH CONICAL BEARING	98	01
27	0503011254	7/8" HEX SELF ADJUSTING NUT		01

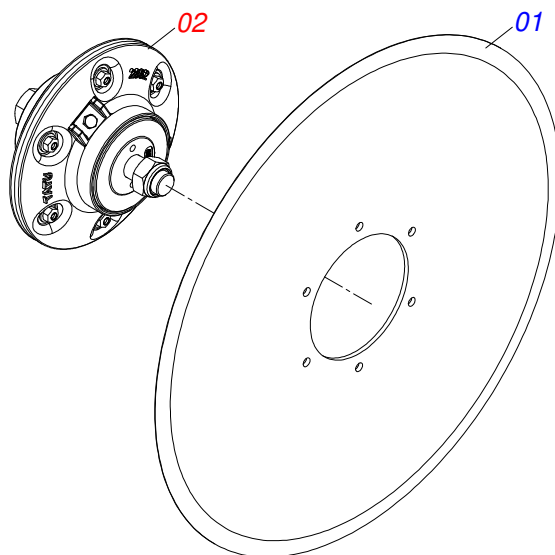

Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521053697	DISC BLADE HUB	99	01

DISC BLADE HUB


0521053697

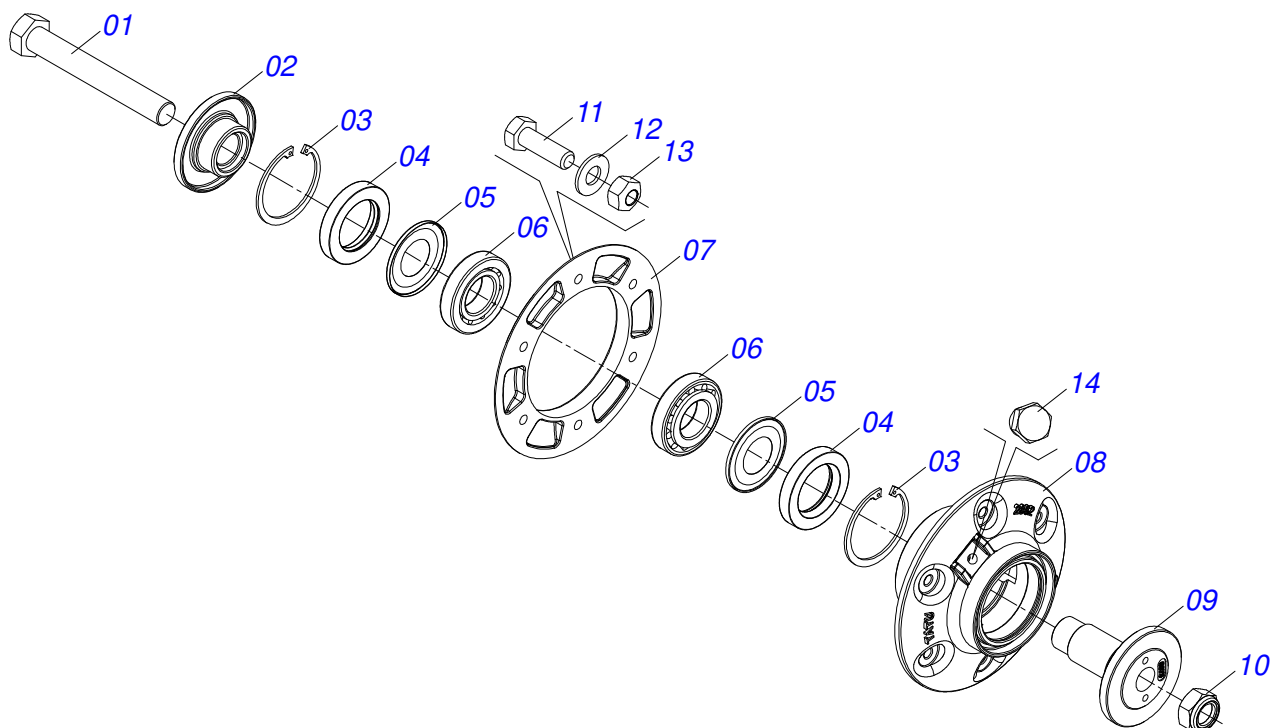

Item	Code	Description	See page	QT
01	0503019283	SCREW 7/8 UNF X 6.1/4		01
02	0502040872	REGULATORY NUT		01
03	0503010370	502072 CLAMPING RING (FOR AXLE)		02
04	0503010590	00674-B SEAL		02
05	0503019285	RING		02
06	0503012170	30207 ROLLER BEARING		02
07	0502020641	BLADE DISC FLANGE		01
08	0502012862	DISC BLADE HUB		01
09	0502040873	DISC BLADE AXLE		01
10	0503017755	NUT		01
11	0503018825	5/16 UNC UNC BOLT		06
12	0501010694	FLAT WASHER		06
13	0503013816	5/16" LOCKNUT		06
14	0511017907	1/8" BSPT X 6 PLUG		02

FRONT ASSY ROW BEARING


0521051447

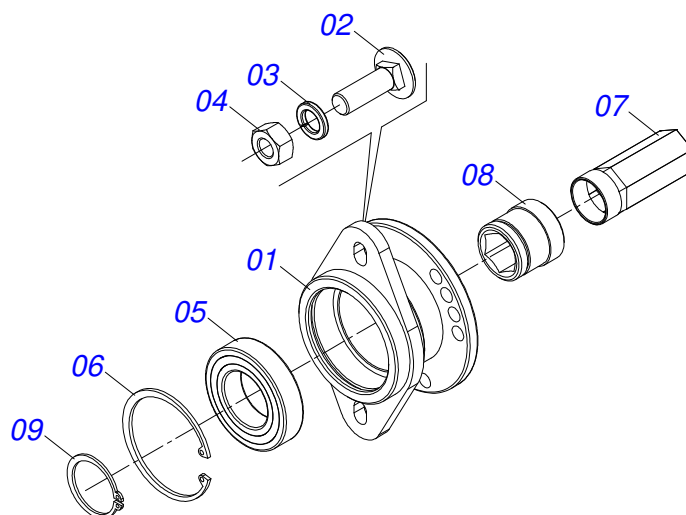

Item	Code	Description	See page	QT
01	0581014691	BEARING		01
02	0503011953	5/16" X 1" BOLT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	5/16" NUT		02
05	0503012861	6006 2RS BALL BEARING		01
06	0503012858	502075 CLAMPING RING (FOR HOLE)		01
07	0581015056	SLEEVE		01
08	0551015804	BEARING AXLE BODY		01
09	0503010707	501030 CLAMPING RING (FOR AXLE)		01

ASSY SCARIFYING ROD


0521057552

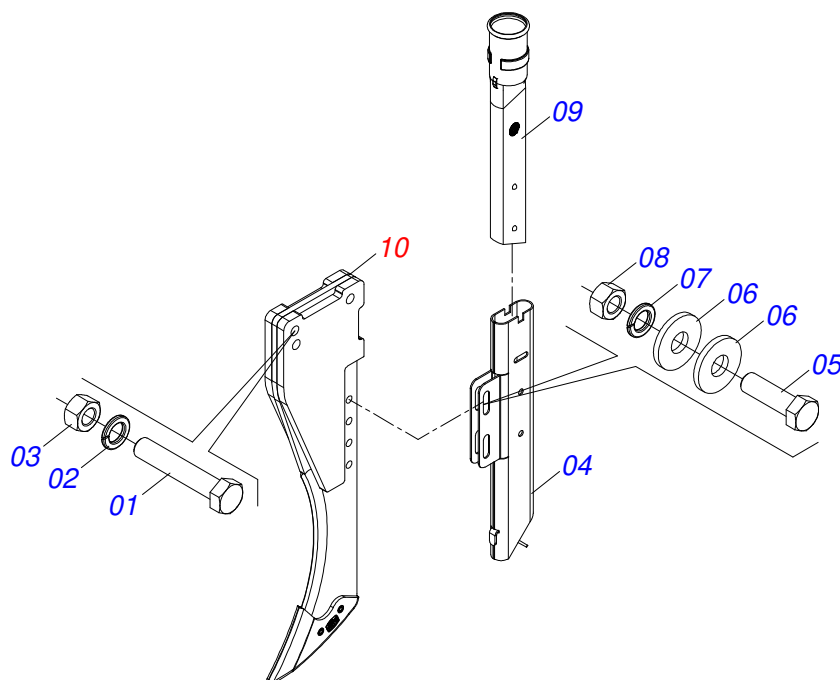


Item	Code	Description	See page	QT
01	0503010479	BOLT		02
02	0503010019	1/2" SPRING WASHER		02
03	0503010060	1/2 UNC G.5 ZN HEX NUT		02
04	0521069127	BOTTOM NOZZLE FERTILIZER		01
05	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
07	0503010025	3/8 SPRING WASHER		02
08	0503010026	3/8" NUT		02
09	0503030483	FERTILIZER SOCKET		01
10	0521053946	SCARING ROD	102	01

SCARING ROD


0521053946

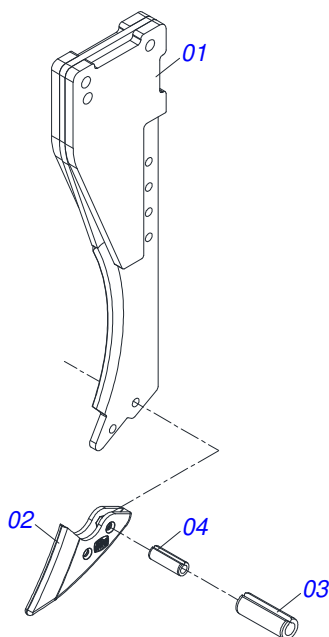

Item	Code	Description	See page	QT
01	0521065998	SCARIFIER SPINDLE		01
02	0502070085	FIXED ROD BEARING		01
03	0513010288	ELASTIC PIN 701211 10 X 24		02
04	0513010289	ELASTIC PIN 701211 10 X 24		02

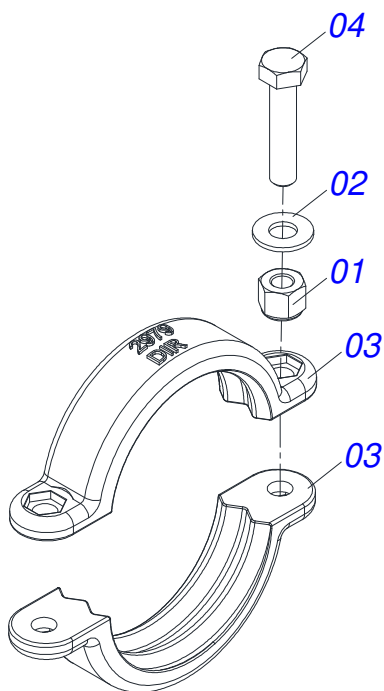

Item	Code	Description	See page	QT
01	0503013759	NUT		02
02	0501010694	FLAT WASHER		02
03	0502012979	CLAMP 3 RIGHT CSU		02
04	0503010421	5/16" X 1-1/2" BOLT		02

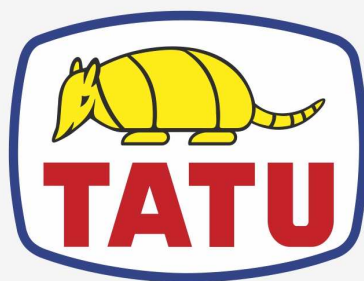

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

