

ROW CROP PLANTERS

PST4 FLEX - FRAME 5345 - CSI (FROM 05/2023)

Code: 0501093616
Series: S-0116
Revision: 00
Date Revision: AGOSTO/2023

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111280472	PST4 FLEX 5345/11E500 CI MH DC20 S-0116

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX

0909096815	ASSY FRAME	1
0511051118	WHEEL AXLE FRAME - 5345	2
0511056529	CYLINDER ASSY	3
0511058406	HYDRAULIC CYLINDER	4
0511059265	WHEELED WITH SPRING TRACTION WITH TRANSMISSION	5
0511059262	WHEEL SUPPORT ASSY	6
0501058241	WHEEL SUPPORT CHAIN TENSIONER	7
0511052770	WHEEL WITH TIRE	8
0503062159	WHEEL WITH TIRE	9
0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	10
0501058240	WHEEL FASTENER WITH TENSIONER	11
0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	12
0501058244	WHEEL FIXED CHAIN TENSIONER	13
0501058242	WHEEL MOBILE CHAIN TENSIONER	14
0501058239	WHEEL CHAIN TENSIONER BEARING	15
0511058310	RIGHT TRANSMISSION ASSY - 5345	16
0511051434	TRANSMISSION ACTUATOR	17
0501052560	MOTOR AXLE SIGNAL	18
0511059261	CHAIN TENSIONER	19
0501058265	STRETCHER LOWER CURRENT 21Z SEED	20
0501058254	UPPER SEED CHAIN TENSIONER	21
0501058266	BEARING WITH 21Z GEAR INTERMEDIATE SEED	22
0501058267	DOUBLE BEARING WITH 17Z GEAR SEED	23
0501055112	MICRO GRANULATED CHAIN TENSIONER	24
0521043316	RIGHT GEAR BOX ASSY	25
0501058212	SEMI MOUNTED RIGHT CHANGE	26
0511059266	CLOSED BEARING	27
0501056271	GEARBOX CLOSED BEARING	28
0501056443	GEAR HOUSING BEARING	29
0501056444	SUPPORT WITH ROLLER BEARING	30
0501048790	AXLE WITH RING	31
0501054655	CHAIN TENSIONER ASSY	32
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	33
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	34
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	35
0521043317	LEFT GEAR BOX ASSY	36
0501058213	LH GEAR BOX	37
0511057146	HYDRAULIC SYSTEM ASSY - 4845/5345	38
0501053834	MALE QUICK COUPLER	39
0511051119	SEMI-ASSEMBLED HYDRAULIC MARKER 5345	40
0511058449	HYDRAULIC CYLINDER	41
0501054649	HBM SEQUENTIAL VALVE	42
0501050633	ROW MARKER DISC ASSEMBLY	43
0511053904	ROW MARKER DISC	44
0531056921	RIGHT/LEFT ALPHA II FERTILIZER HOPPER SET - 5345	45
0531056920	RIGHT HOPPER SUPPORT WITH FERTILIZER METERING - 5345	46
0531056919	LEFT HOPPER SUPPORT WITH FERTILIZER METERING - 5345	47
0531055319	ALPHA II FERTILIZER METERING	48
0531055863	ASSY TRANSMISSION HUB	49
0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	50
0501053788	3/4" SQUARE AXLE FASTENER	51
0531057911	22Z GEAR SIDE BEARING ASSEMBLY	52
0531057901	GEAR	53
0511058312	PLATFORM ASSY - 5345	54



MARCHESAN

INDEX

0511058308	HANDRAIL ASSY - 5345	55
0511056536	LADDER ASSEMBLY	56
0511054971	JACK ASSEMBLY	57
0511057150	DRAWBAR ASSEMBLY - 4845/5345	58
0511057151	ASSY DOOR HAND BOOK	59
0531057815	5345 - LABEL ASSY	60
0511054303	HEX AXLE ASSEMBLY	61
0501054258	DRAWBAR ESTABILIZER ASSY	62
0511054601	HITCH ARTICULATED TRACTOR	63
0511053179	TRACTOR COUPLING SHAFT	64
0511056736	HOSE SUPPORT	65
0531059621	KIT WITH ALPHA COMPONENTS - 11 ROWS	66
0909096816	ASSY SEED/FERTILIZER LINE	67
0531055772	FRONT OF SHORT SEED ROW LEFT SIGMA V2	68
0531055769	FRONT OF LONG SEED ROW RIGHT SIGMA V2	69
0531055770	FRONT OF SHORT SEED ROW RIGHT SIGMA V2	70
0531055768	FRONT OF LONG SEED ROW LEFT	71
0511054635	BEARING AXLE BODY	72
0511055260	SEED ROW CHAIN TENSIONER	73
0511050609	BEARING WITH 17Z GEAR ASSY	74
0511050617	FRONT SEED ROW BEARING	75
0531055203	TRANSMISSION WITH AXLE	76
0531055206	298 TRANSMISSION HUB	77
0531055205	BEARING WITH 168 AXLE	78
0531055218	DRAGGER BEARING	79
0521055223	SEED ROW TRANSMISSION HUB	80
0501052769	BEARING WITH 17Z GEAR	81
0531059347	SILO SEED CSI FRONT DRIVE SIGMA	82
0531059302	SEED SILO SUPPORT FRONT TRANSMISSION FAST FIXING SIGMA	83
0531054795	FRONT TRANSMISSION ASSEMBLY	84
0503063752	SIGMA INDIVIDUAL SEED HOPPER	85
0531059396	RIGHT REAR SEED LINE FRONT SIGMA QUICK FITTING	86
0531059395	REAR LEFT SEED LINE FRONT SIGMA QUICK FIXING	87
0531058675	DDD SEED 15 X 15 RIGHT	88
0511052301	SUPPORT DDD 15 RIGHT	89
0511053173	RIGHT LOW HUB WITH 15 DISC	90
0511053172	LEFT LOW HUB WITH 15 DISC	91
0531058676	DDD SEED 15 X 15 LEFT	92
0511052302	LH SUPPORT DDD GUIDE	93
0521046122	DEPTH SYSTEM / COMPACTOR ASSY	94
0511058650	SEMI-MOUNTED DEPTH CONTROL	95
0511058652	LEFT DEPTH WHEEL ARM WITH HUB	96
0501052627	ASSY DEPTH WHEEL HUB	97
0511058651	RIGHT DEPTH WHEEL ARM WITH HUB	98
0501052297	DEPTH WHEELS REGULATOR ASSY	99
0501052538	DEPTH BAND WITH ARMS	100
0511054333	COMPACT WHEEL RIGHT WITH BEARING	101
0501052908	COMPACTOR WHEEL WITH BEARING	102
0511054334	COMPACT WHEEL LEFT WITH BEARING	103
0511053250	SHORT ARM FERTILIZER ROW WITH LEFT DOUBLE DISC	104
0511053251	LONG ARM FERTILIZER ROW WITH RIGHT DOUBLE DISC	105
0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	106
0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	107
0511044563	20" COULTER BLADE ASSY FOR SHORT ROW	108




MARCHESAN

INDEX

0511044585	20" COULTER BLADE ASSY FOR LONG ROW		109
0521054680	20" DISC BLADE HUB		110
0521054679	DISC BLADE HUB		111
0511058212	FERTILIZER ROW SUPPORT ASSY		112
0501058423	FERTILIZER ROD SPRING ROW		113
0511052024	FAST CLOSING SET		114
0503063785	SIGMA V2 CORN DISC SET		115
0503063786	SIGMA V2 SOY DISC SET		116
0501110231	SCARIFIER ROD WITH TIP		118
0521057957	FIXED ROD EXTENSION WITH FIXATION		119

ASSY FRAME

0909096815

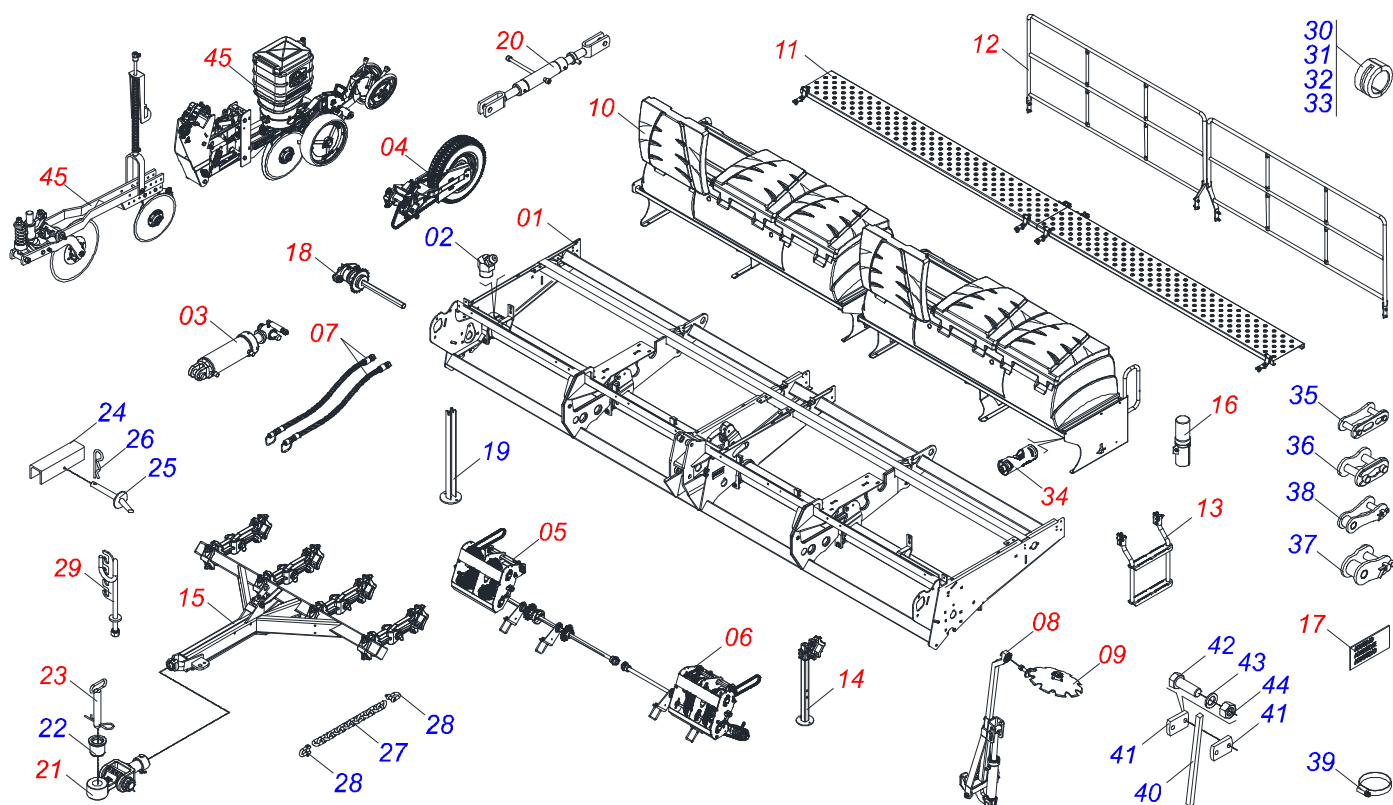


Item	Code	Description	See page	QT
01	0511051118	WHEEL AXLE FRAME - 5345	2	01
02	0503010003	1845 GREASE FITTING		04
03	0511056529	CYLINDER ASSY	3	01
04	0511059265	WHEELED WITH SPRING TRACTION WITH 5 TRANSMISSION		04
05	0511058310	RIGHT TRANSMISSION ASSY - 5345	16	01
06	0511058309	LEFT TRANSMISSION ASSY - 5345		01
07	0511057146	HYDRAULIC SYSTEM ASSY - 4845/5345	38	01
08	0511051119	SEMI-ASSEMBLED HYDRAULIC MARKER 5345	40	01
09	0501050633	ROW MARKER DISC ASSEMBLY	43	02
10	0531056921	RIGHT/LEFT ALPHA II FERTILIZER HOPPER SET - 5345	45	01
11	0511058312	PLATFORM ASSY - 5345	54	01
12	0511058308	HANDRAIL ASSY - 5345	55	01
13	0511056536	LADDER ASSEMBLY	56	02
14	0511054971	JACK ASSEMBLY	57	02
15	0511057150	DRAWBAR ASSEMBLY - 4845/5345	58	01
16	0511057151	ASSY DOOR HAND BOOK	59	01
17	0531057815	5345 - LABEL ASSY	60	01
18	0511054303	HEX AXLE ASSEMBLY	61	01
19	0501065677	STRUT		02
20	0501054258	DRAWBAR ESTABILIZER ASSY	62	01
21	0511054601	HITCH ARTICULATED TRACTOR	63	01
22	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
23	0511053179	TRACTOR COUPLING SHAFT	64	01
24	0521013022	TRANSPORT LOCK		01
25	0501068994	8,30 X 78 LOCK PIN		01
26	0503030168	HITCH PIN CLIP		01
27	0503014120	CHAIN		01
28	0503014321	CABLE STEEL SHACKLE		02
29	0511056736	HOSE SUPPORT	65	01
30	0501047895	25 ROD STOP		02

ASSY FRAME

0909096815


Item	Code	Description	See page	QT
31	0501047885	30 ROD STOP		02
32	0501047886	35 ROD STOP		02
33	0501047887	40 ROD STOP		02
34	0531059621	KIT WITH ALPHA COMPONENTS - 11 ROWS	66	01
35	0503010780	N-2050 AMENDMENT		02
36	0503011750	AMENDMENT WITH LOCK		06
37	0503010951	REDUCTION		04
38	0503011751	REDUCTION		06
39	0503010246	CLAMP		11
40	0521013164	EXTENDER		02
41	0501011310	FIXER LOCK		08
42	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		08
43	0503010019	1/2" SPRING WASHER		08
44	0503010060	1/2 UNC G.5 ZN HEX NUT		08
45	0909096816	ASSY SEED/FERTILIZER LINE	67	11

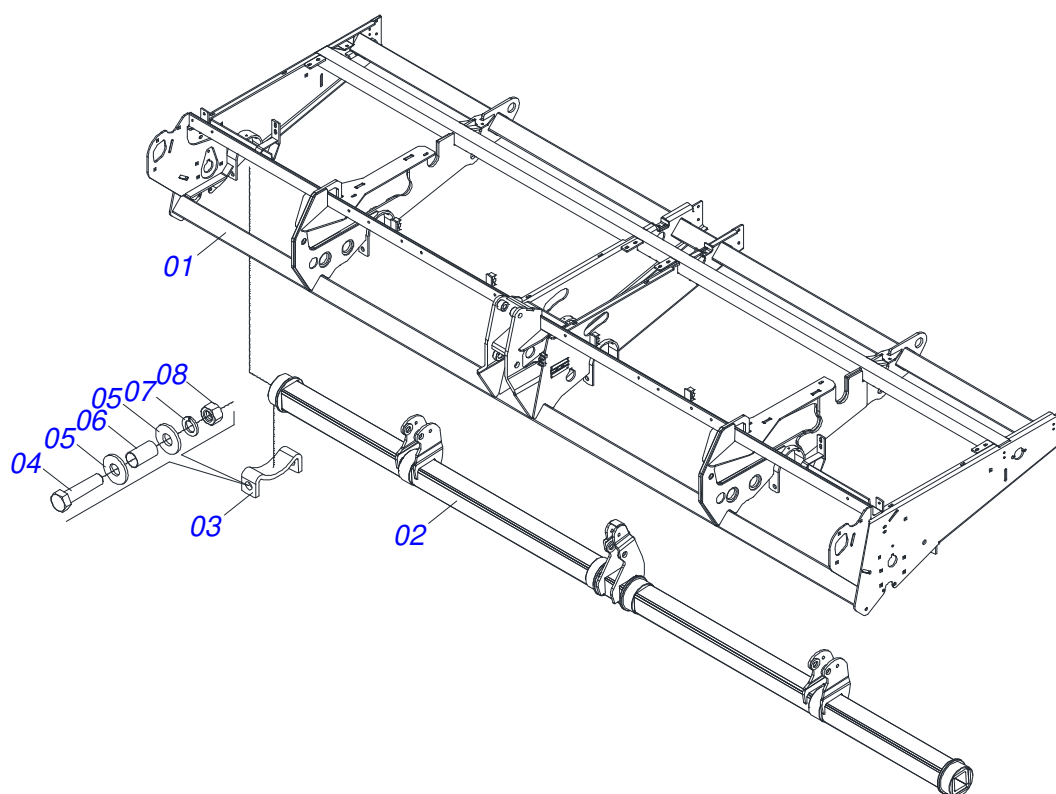

Item	Code	Description	See page	QT
01	0521062442	FRAME		01
02	0521062447	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		06
04	0503010899	5/8 UNC X 2.1/4 BOLT		12
05	0501012140	FLAT WASHER		24
06	0531013922	0.6" X 0.8" X 1" SLEEVE		12
07	0503011445	SPRING WASHER		12
08	0503010013	5/8 NUT		12

CYLINDER ASSY


0511056529

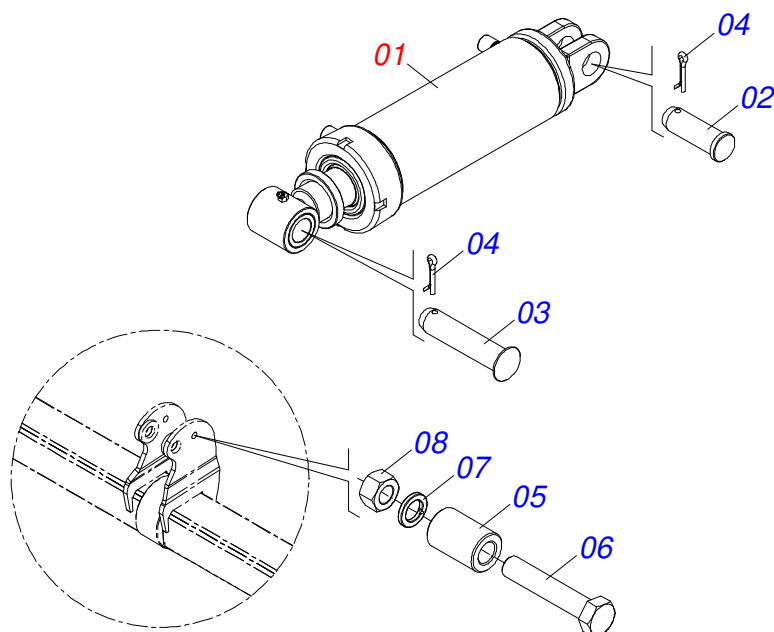


Item	Code	Description	See page	QT
01	0511058406	HYDRAULIC CYLINDER	4	02
02	0521012538	1.2" X 3.5" COUPLING SHAFT		02
03	0521012536	COUPLING SHAFT		02
04	0503010523	1/4" X 2" SPLIT PIN		04
05	0531012565	SLEEVE 16,3X 30 X 88		02
06	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02
07	0503010027	5/8 SPRING WASHER		02
08	0503010013	5/8 NUT		02

HYDRAULIC CYLINDER

0511058406

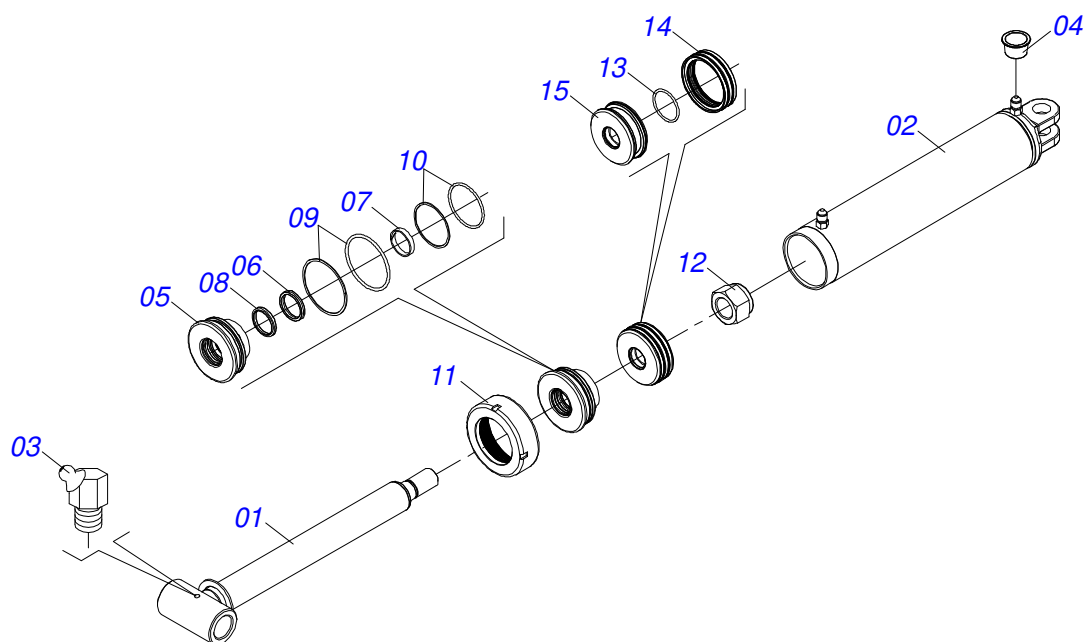


Item	Code	Description	See page	QT
01	0511064053	SLEEVE 2" X 14" TURNBUCKLE		01
02	0511064052	4" X 12.1" CYLINDER CASE		01
03	0503010003	1845 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010678	50,80 X 101 RING SUPPORT		01
06	0503015636	SCRAPER SEAL		01
07	0503018025	RING GUIDE		01
08	0503018026	1870-2000-375 B GASKET		01
09	0503010338	2-342 N 3006-9B O'RING		02
10	0503011061	8-342 BACK-UP RING		02
11	0502012822	101.60 END CAP		01
12	0503010817	1.1/4" SELF LOCKING NUT		01
13	0503010345	2-218 N 3006-9B O'RING		01
14	0503015633	SELEMASTER SEALING		01
15	0502012842	50,80 X 101,60 PISTON		01
16	0511032511	ASSY CYLINDER REPAIR KIT 50.8X101.6		01

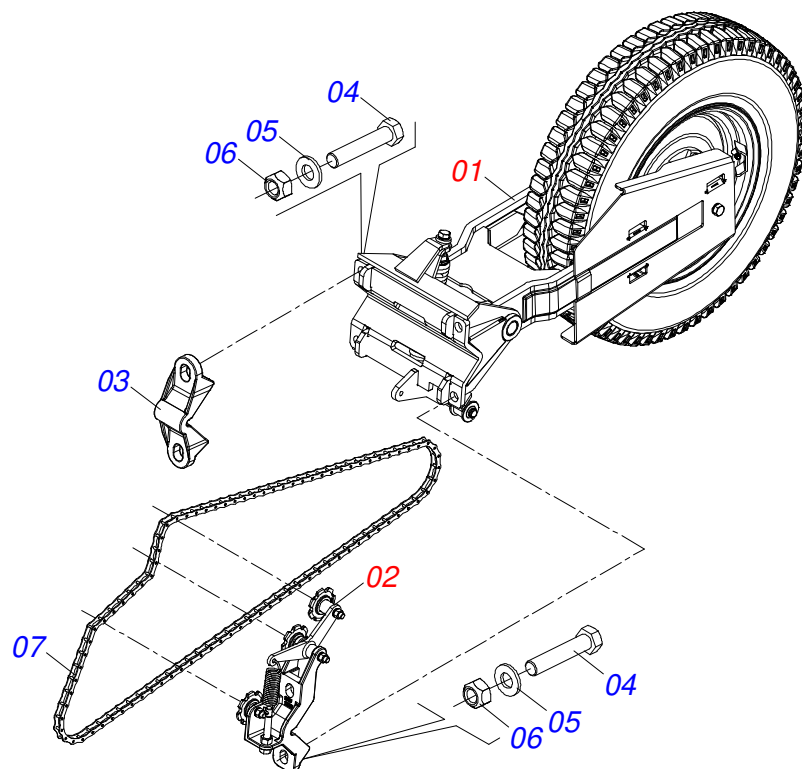


Item	Code	Description	See page	QT
01	0511059262	WHEEL SUPPORT ASSY	6	01
02	0501058240	WHEEL FASTENER WITH TENSIONER	11	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

WHEEL SUPPORT ASSY


0511059262

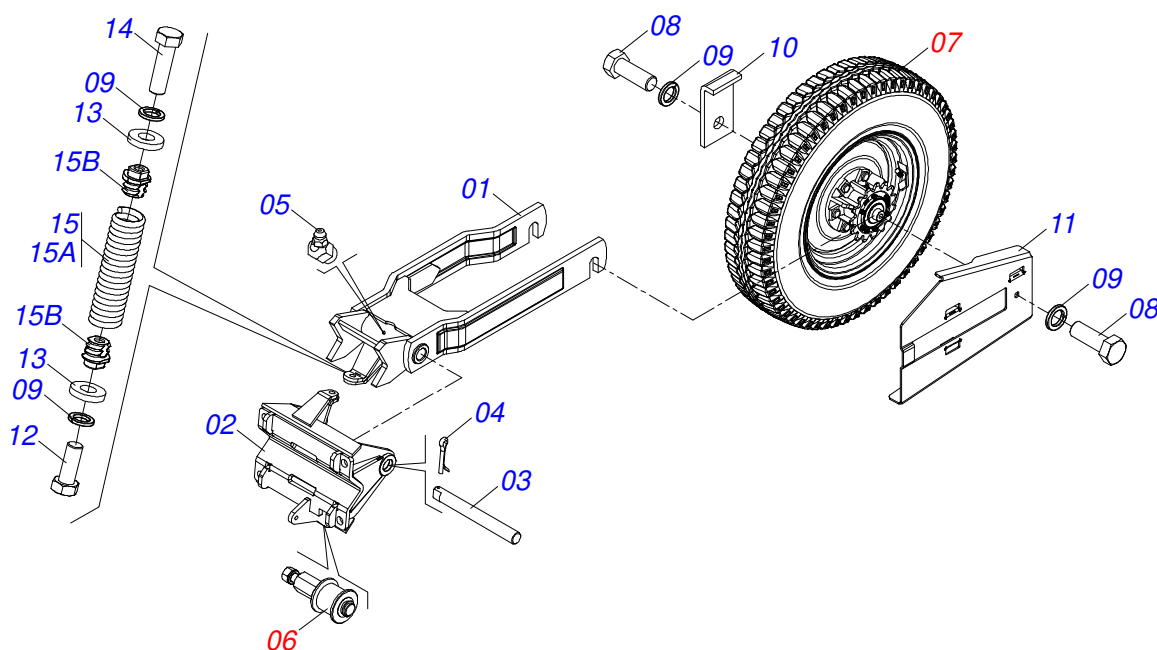

Item	Code	Description	See page	QT
01	0531062422	WHEEL ARM		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" SPLIT PIN		01
05	0503010003	1845 GREASE FITTING		01
06	0501058241	WHEEL SUPPORT CHAIN TENSIONER	7	01
07	0511052770	WHEEL WITH TIRE	8	01
08	0503018981	BOLT		02
09	0503010027	5/8 SPRING WASHER		04
10	0591010589	BODY LOCK WHEEL		01
11	0521069983	WHEEL COVER		01
12	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
13	0551017715	FLAT WASHER		02
14	0503013030	5/8" X 3.1/4" BOLT		01
15	0511050681	TRACTION SPRING		01
15A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
15B	0561016062	SPRING HITCH		02

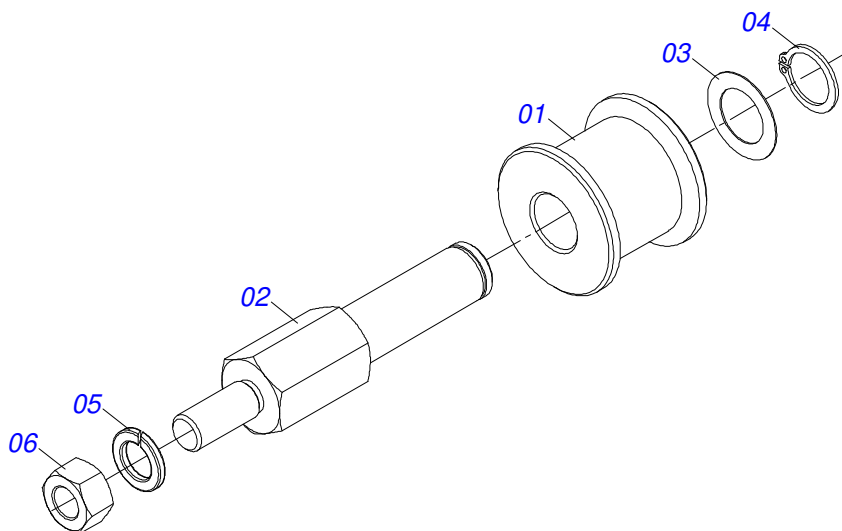


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

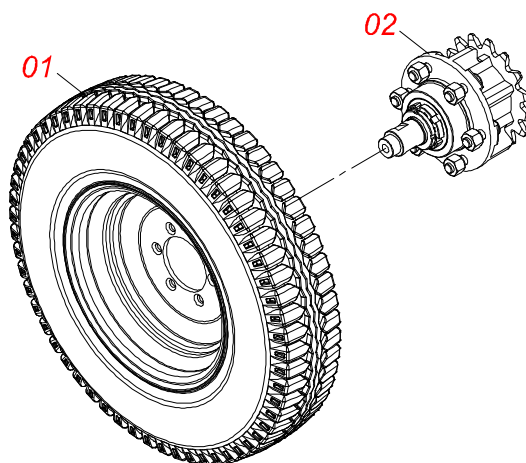


Item	Code	Description	See page	QT
01	0503062159	WHEEL WITH TIRE	9	01
02	0511052769	WHEEL WITH TRANSMISSION WITHOUT TIRE	10	01

WHEEL WITH TIRE


0503062159

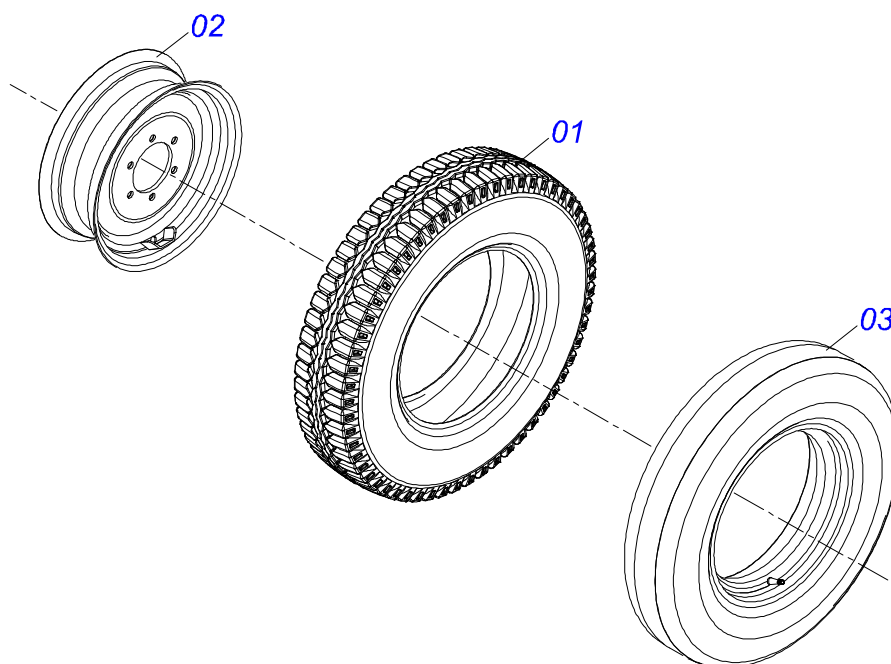


Item	Code	Description	See page	QT
01	0503012113	PLY TIRE		01
02	0503016517	WHEEL EI		01
03	0503010033	7.50 X 16 INNER TIRE		01

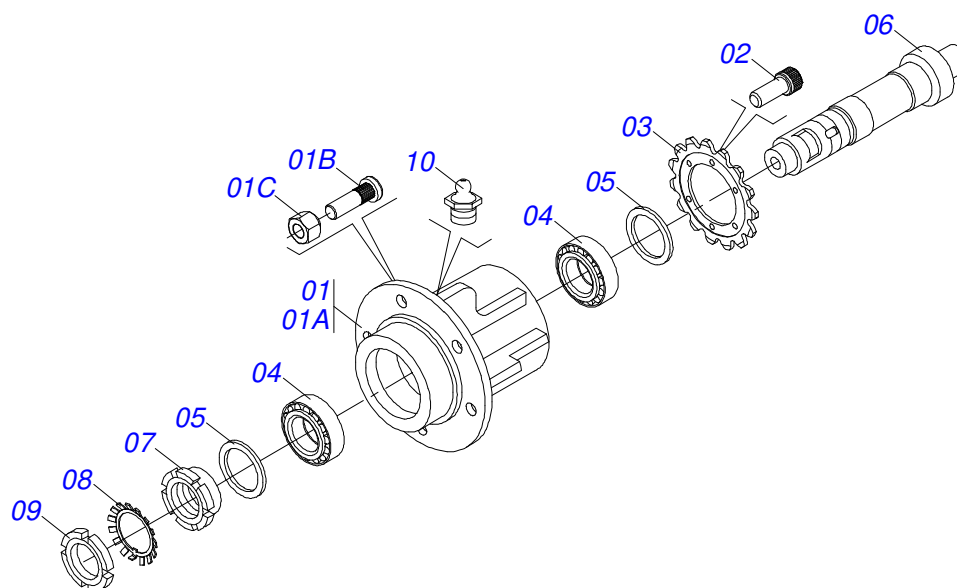


Item	Code	Description	See page	QT
01	0501110721	WHEEL HUB WITH SCREW / NUTS		01
01A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
01B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
01C	0503016516	5/8 UNF CONIC NUT		06
02	0503012550	5/16" X 3/4" BOLT		06
03	0502011339	15Z GEAR P 1.25"		01
04	0503010328	25590/25523 ROLLER BEARING		02
05	0503010804	00547-B SEAL		02
06	0521012185	TRANSMISSION WHEEL AXLE		01
07	0511015949	LOCK NUT		01
08	0503010329	LOCK WASHER		01
09	0503010330	KM 9 LOCKNUT		01
10	0503010002	1800 GREASE FITTING		01

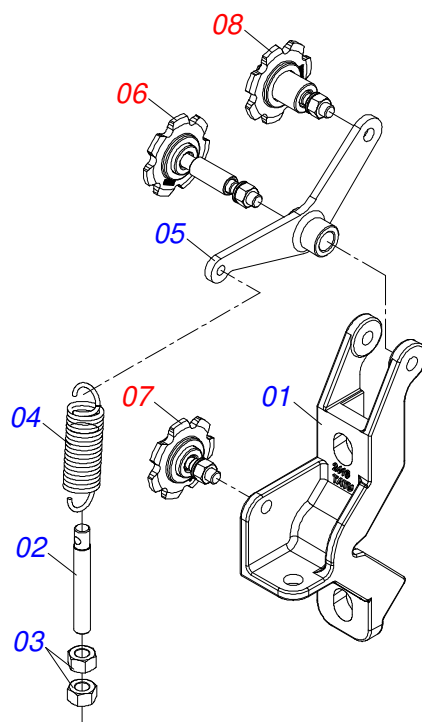


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8 NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	12	01
07	0501058244	WHEEL FIXED CHAIN TENSIONER	13	01
08	0501058242	WHEEL MOBILE CHAIN TENSIONER	14	01

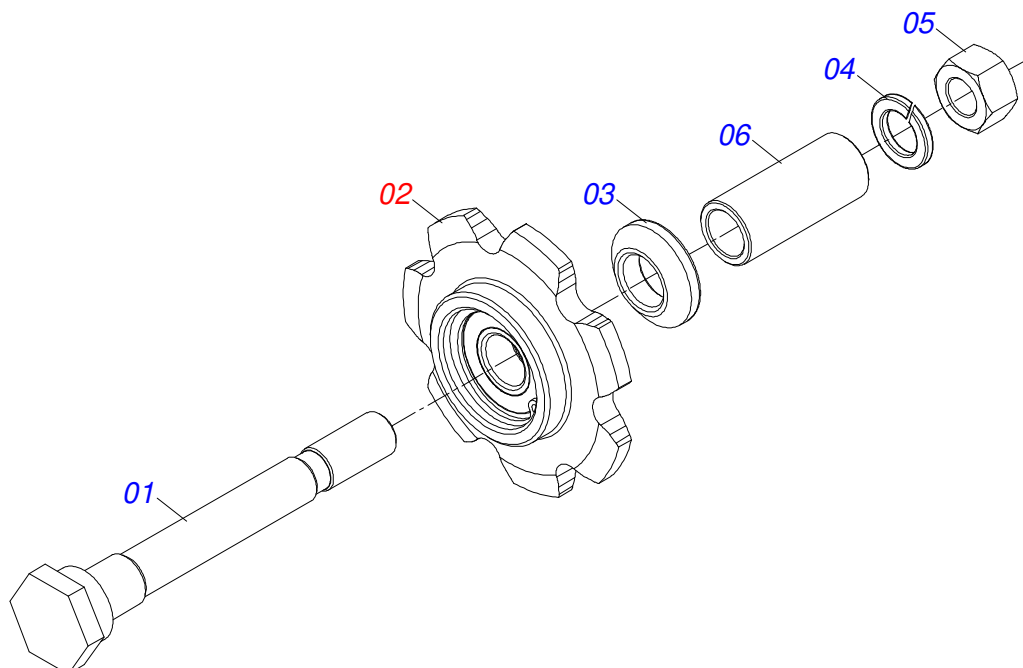


Item	Code	Description	See page	QT
01	0551018245	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	15	01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0551018239	SLEEVE 19 X 13,50 X 45		01

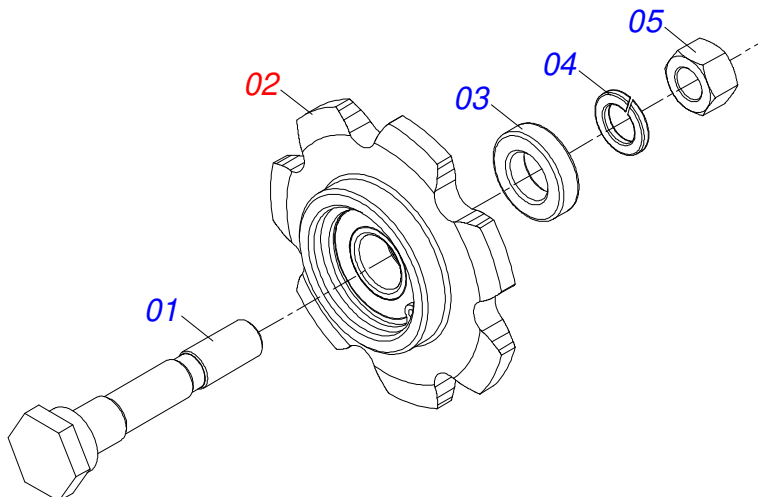


Item	Code	Description	See page	QT
01	0551018252	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	15	01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

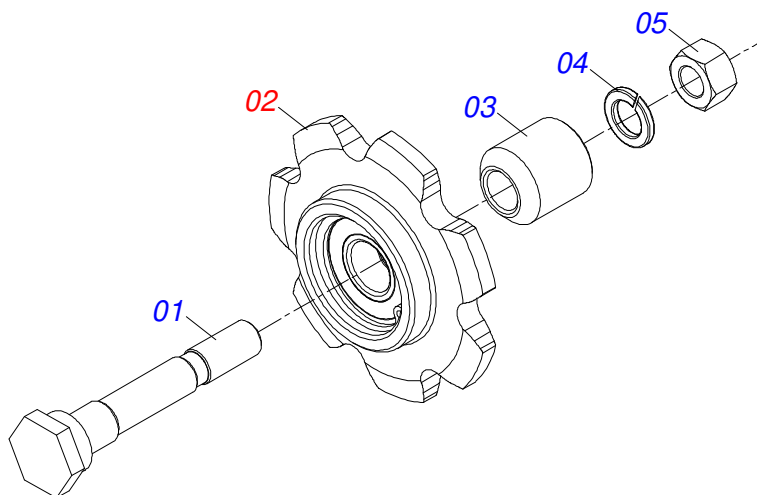


Item	Code	Description	See page	QT
01	0551018244	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	15	01
03	0591017923	15,30 X 30 X 32 SLEEVE		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

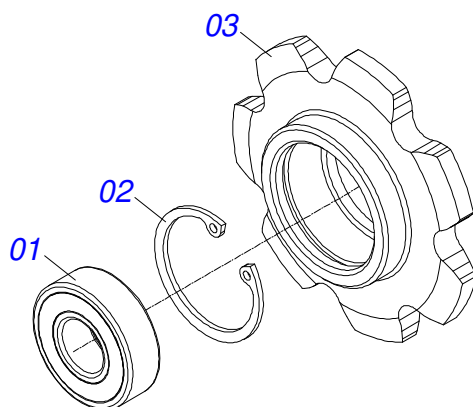


Item	Code	Description	See page	QT
01	0503012882	BEARING		01
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012853	GEAR		01

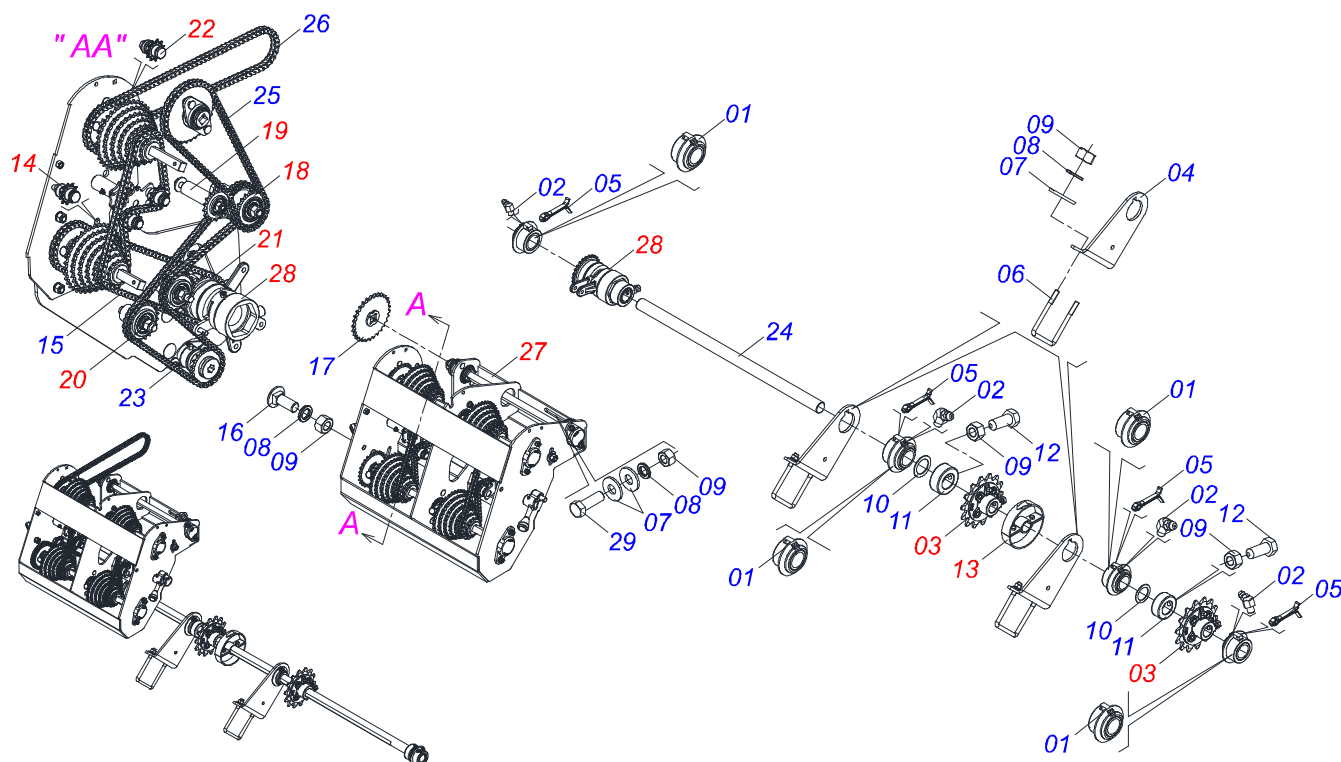

Item	Code	Description	See page	QT
01	0501110639	BEARING		04
02	0503011099	GREASE FITTING		04
03	0511051434	TRANSMISSION ACTUATOR	17	02
04	0551019114	MOTOR BEARING AXLE SUPPORT		02
05	0503010300	5/32" X 1" SPLIT PIN		04
06	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
07	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
08	0503010019	1/2" SPRING WASHER		09
09	0503010060	1/2 UNC G.5 ZN HEX NUT		11
10	0501018466	FLAT WASHER		03
11	0511015961	LOCK BUSHING		02
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		02
13	0501052560	MOTOR AXLE SIGNAL	18	01
14	0511059261	CHAIN TENSIONER	19	01
15	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		01
16	0503014734	BOLT		03
17	0521064448	GEAR		01
18	0501058265	STRETCHER LOWER CURRENT 21Z SEED	20	01
19	0501058254	UPPER SEED CHAIN TENSIONER	21	01
20	0501058266	BEARING WITH 21Z GEAR INTERMEDIATE SEED	22	01
21	0501058267	DOUBLE BEARING WITH 17Z GEAR SEED	23	01
22	0501055112	MICRO GRANULATED CHAIN TENSIONER	24	01
23	0503014907	40-1 X 151 CHAIN LINK + MENDING		01
24	0561019204	MOTOR SHAFT		01
25	0503012204	40-1 CHAIN X 82 LINK + RED		01
26	0503012718	40-1 CHAIN X 111 LINK + MENDING		01
27	0521043316	RIGHT GEAR BOX ASSY	25	01
28	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	34	01
29	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02

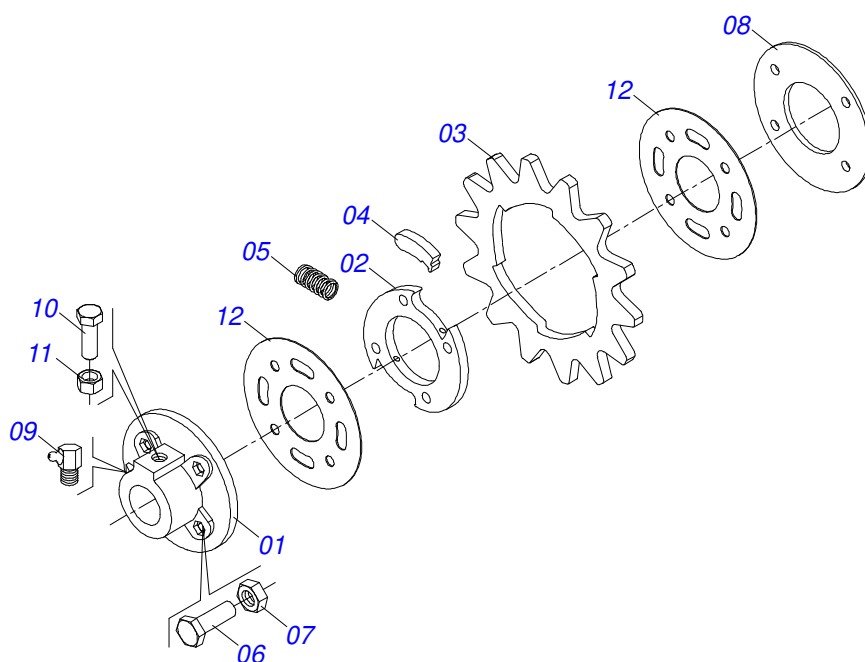


Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2 UNC G.5 ZN HEX NUT		01
12	0571010763	FLANGE WASHER		02

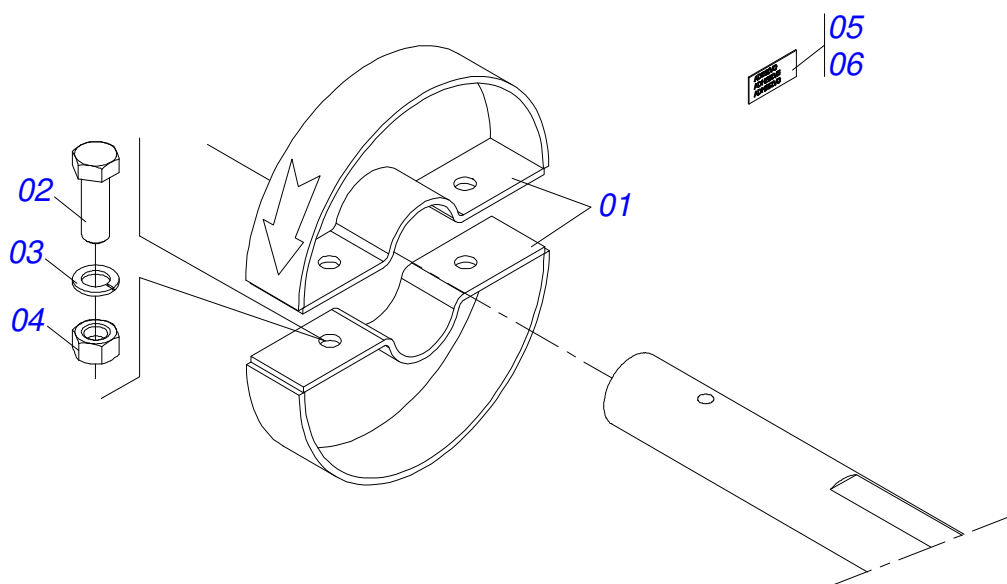


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ADHESIVE LABEL		01

CHAIN TENSIONER


0511059261

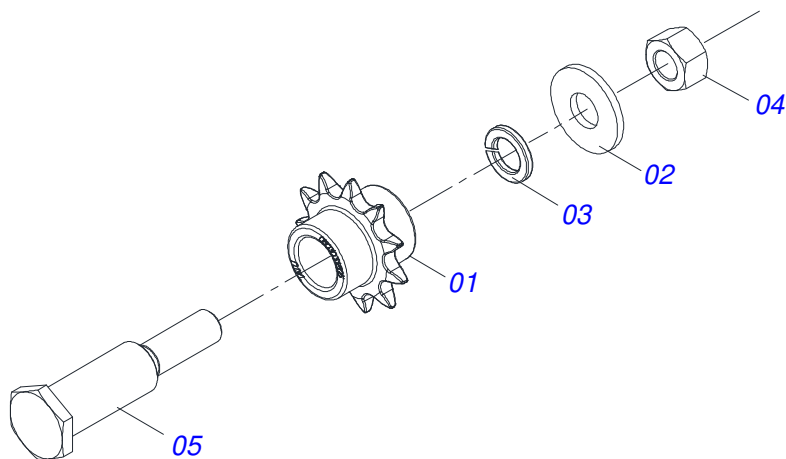


Item	Code	Description	See page	QT
01	0503031805	11Z 1/2" GEAR		01
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0531019479	AXLE CHAIN GEAR		01

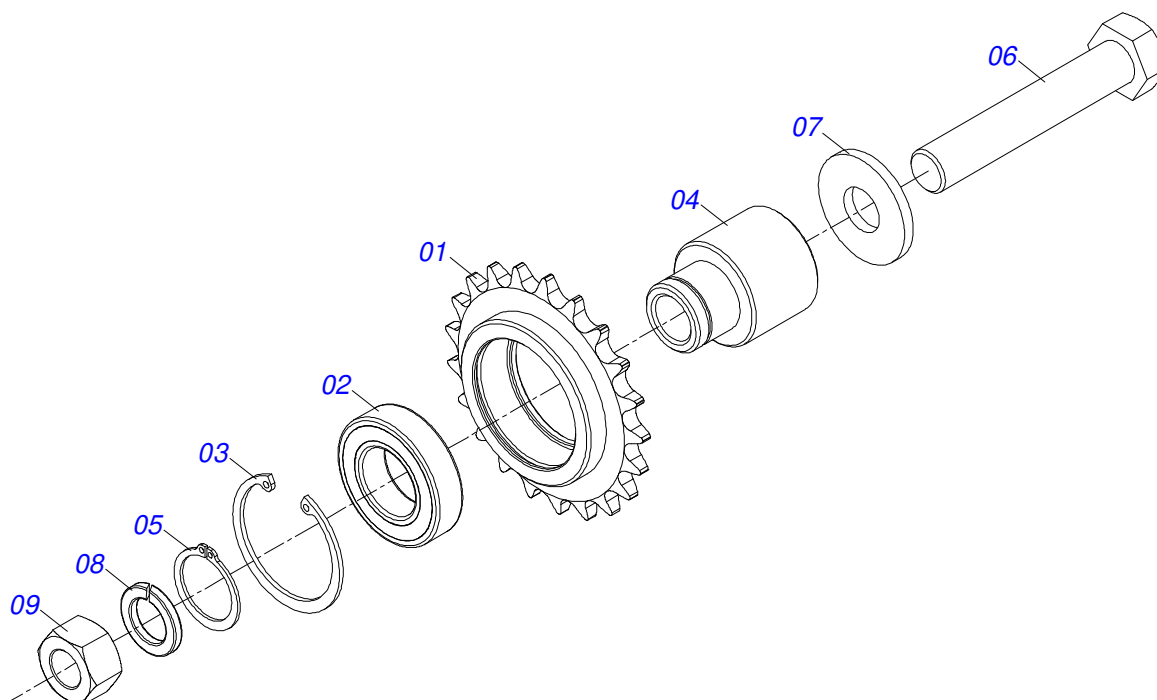


Item	Code	Description	See page	QT
01	0521069698	GEAR 21Z P 1/2		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
07	0501012140	FLAT WASHER		01
08	0503010027	5/8 SPRING WASHER		01
09	0503010013	5/8 NUT		01

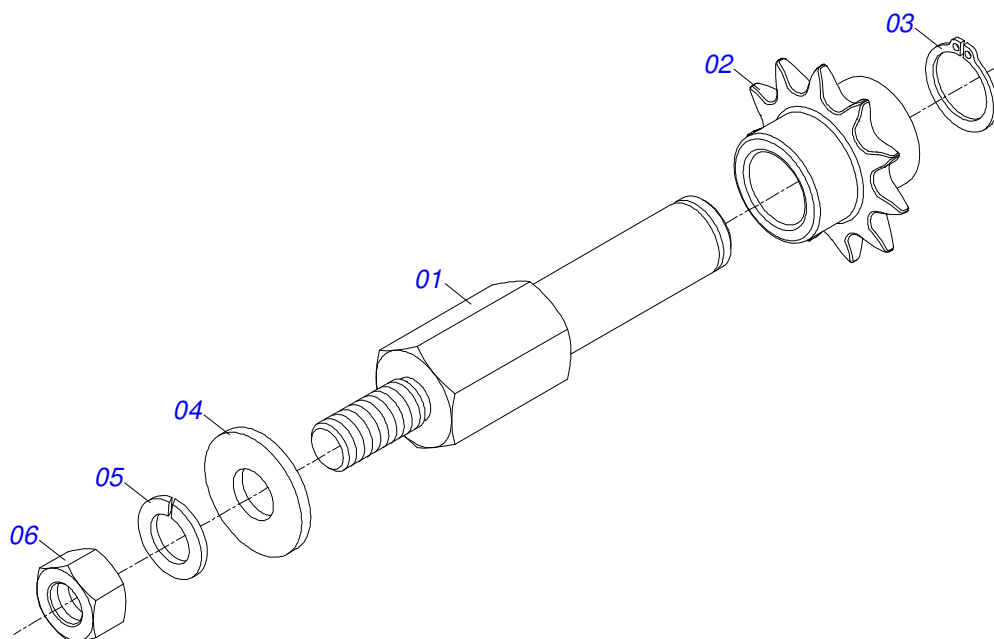


Item	Code	Description	See page	QT
01	0521018933	CHAIN TENSIONER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

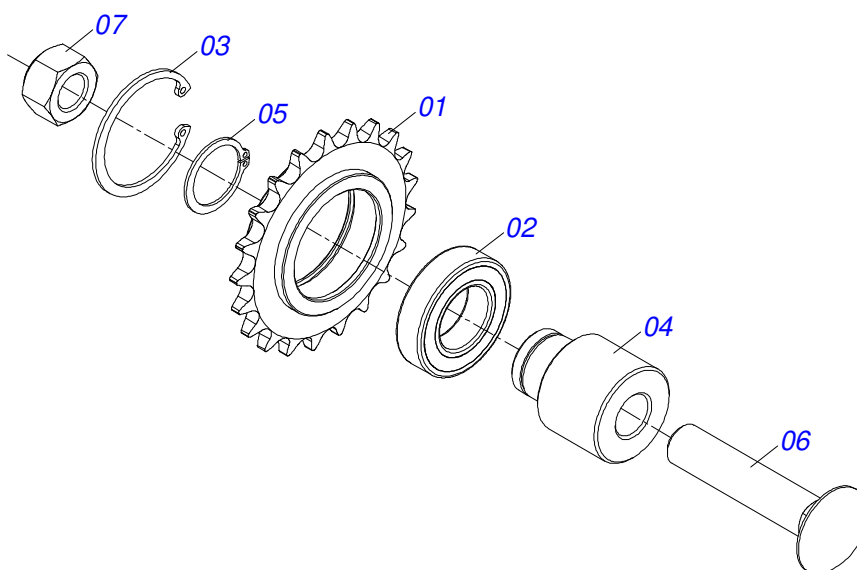

Item	Code	Description	See page	QT
01	0521069698	GEAR 21Z P 1/2		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0501011234	5/8" X 3" BOLT		01
07	0503012412	5/8" UNC SELF LOCKING NUT		01

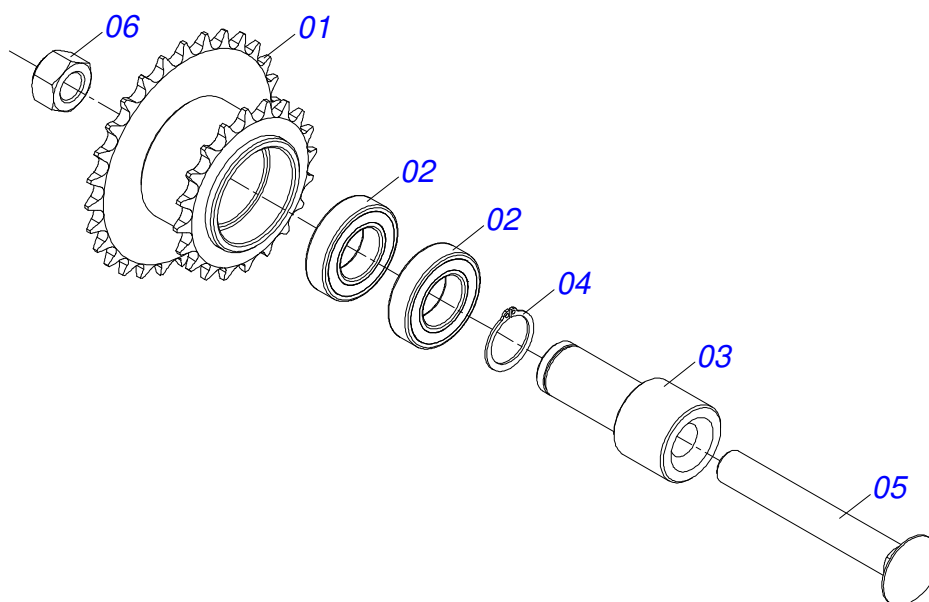


Item	Code	Description	See page	QT
01	0511069680	20Z X 28Z DOUBLE GEAR		01
02	0503011410	ROLLER BEARING		02
03	0551019175	DOUBLE GEAR AXLE		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0503016460	5/8" X 4.1/2" BOLT		01
06	0503012412	5/8" UNC SELF LOCKING NUT		01

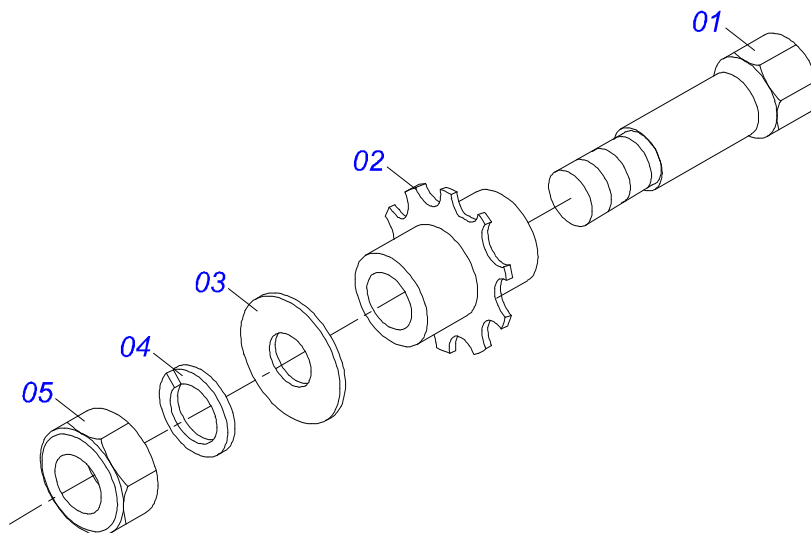


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	1 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

RIGHT GEAR BOX ASSY


0521043316

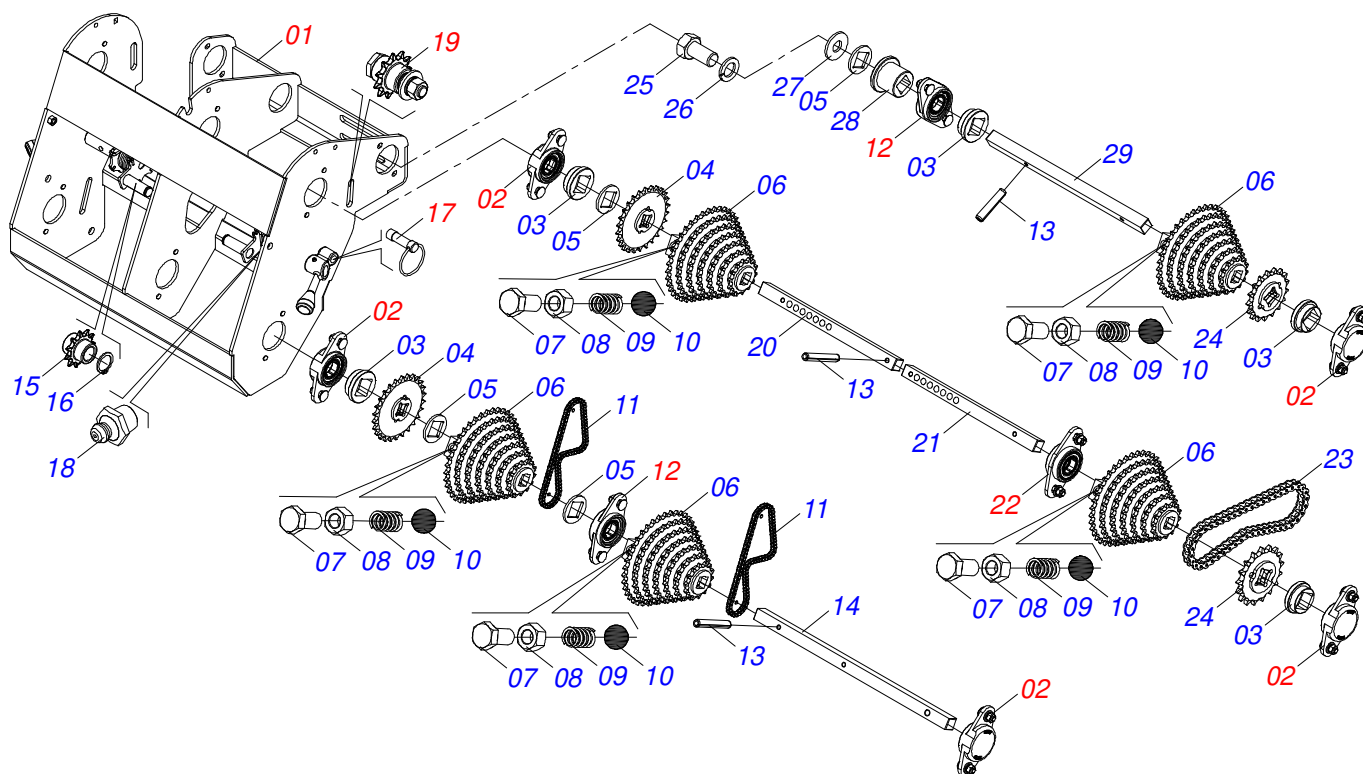


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	26	01
02	0511059266	CLOSED BEARING	27	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN SHAFT		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	29	02
13	0503010292	701164 6 X 40 SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	31	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	32	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	33	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8 SPRING WASHER		01
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

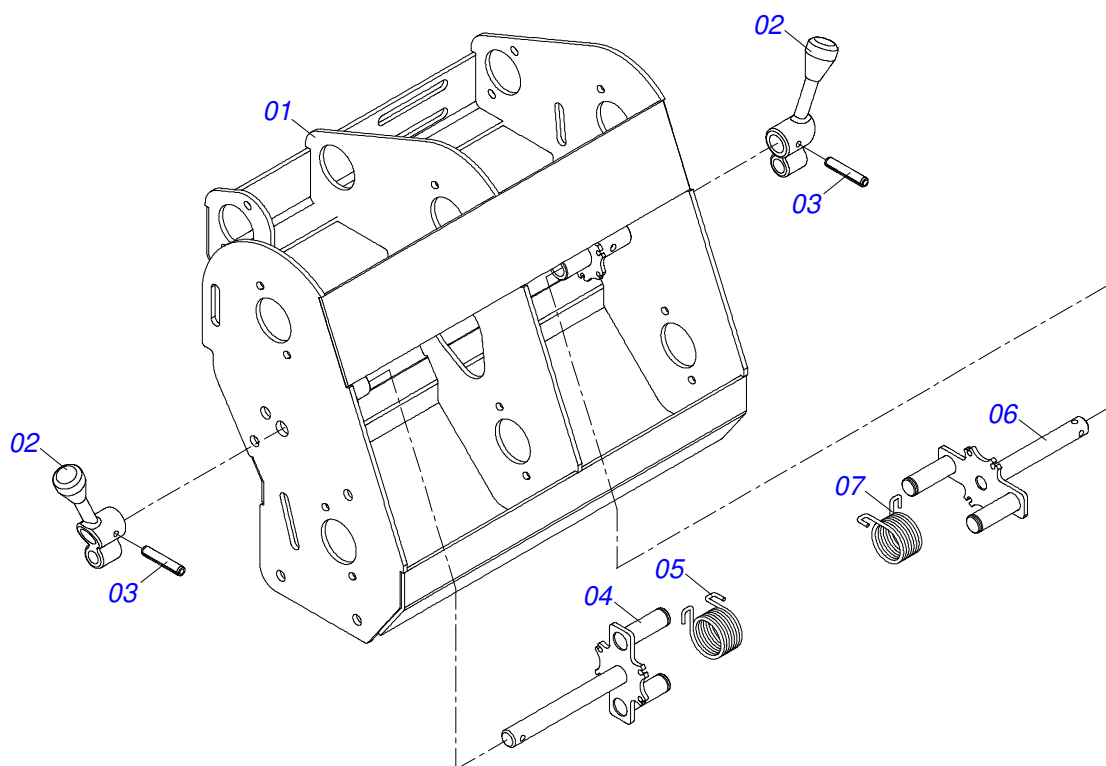


Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TIGHTENER LEVER		02
03	0503010292	701164 6 X 40 SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING		01

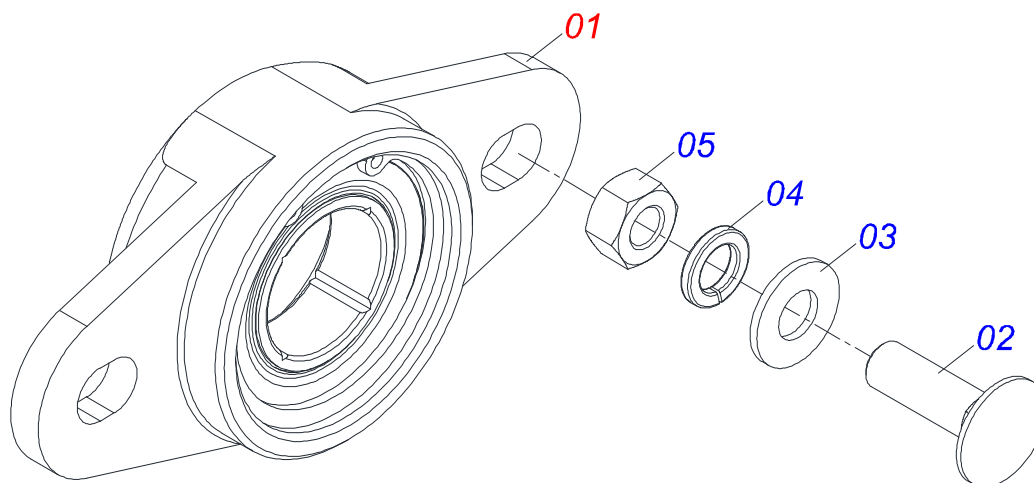


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	28	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

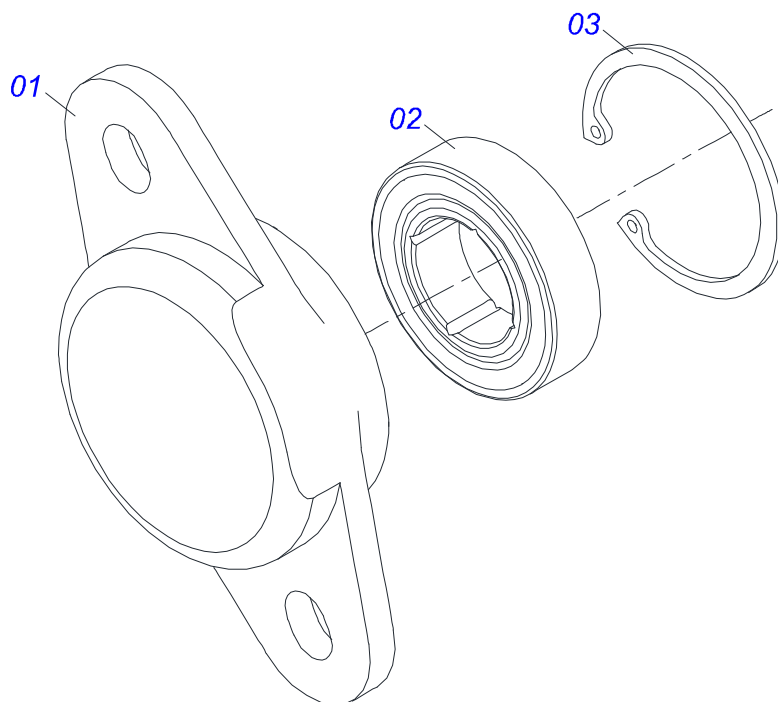


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	6005 2RS1 ROLLER BEARING		01
03	0503011105	SEAL RING		01

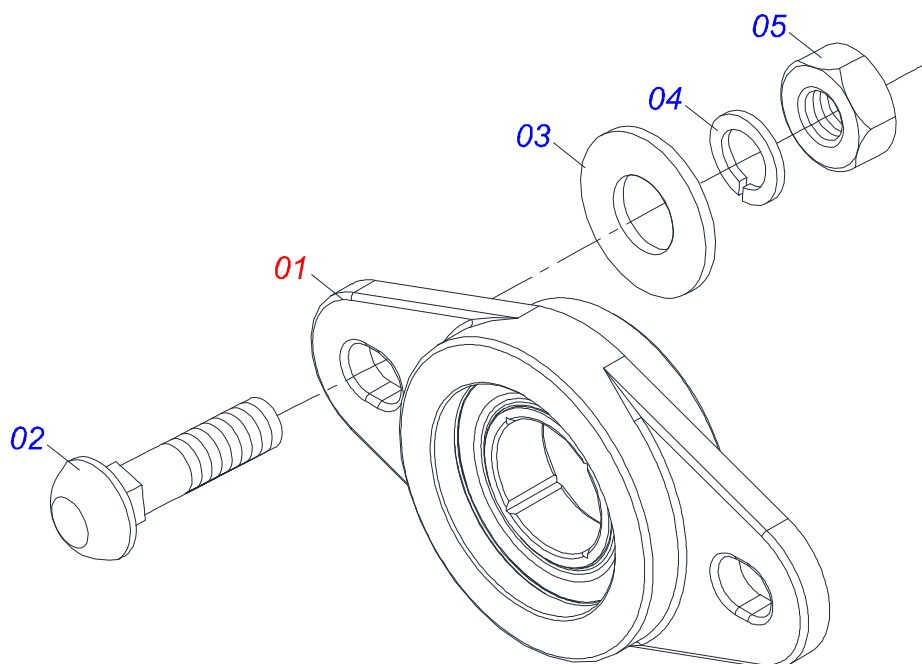

Item	Code	Description	See page	QT
01	0501056444	SUPPORT WITH ROLLER BEARING	30	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

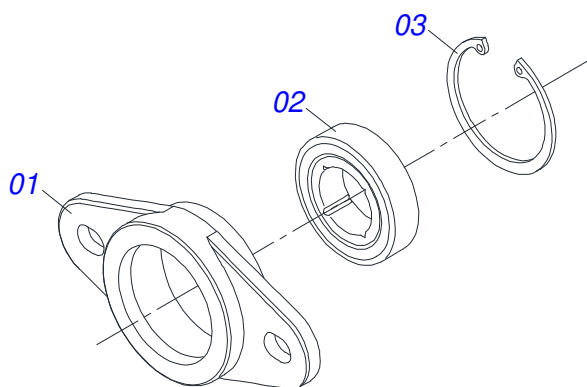


Item	Code	Description	See page	QT
01	0502011697	GEARBOX SUPPORT		01
02	0503013462	6005 2RS1 ROLLER BEARING		01
03	0503011105	SEAL RING		01

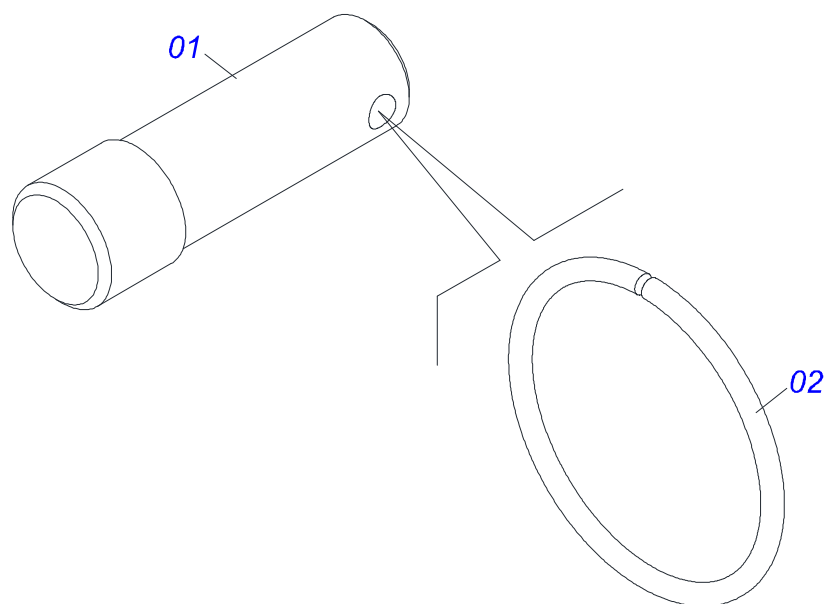


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

CHAIN TENSIONER ASSY


0501054655

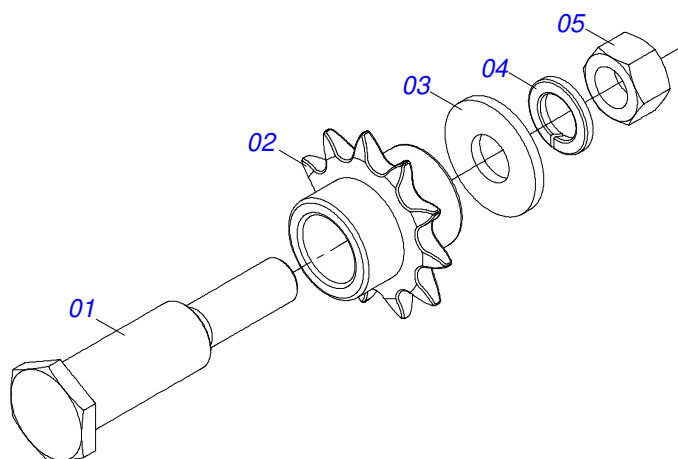

Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

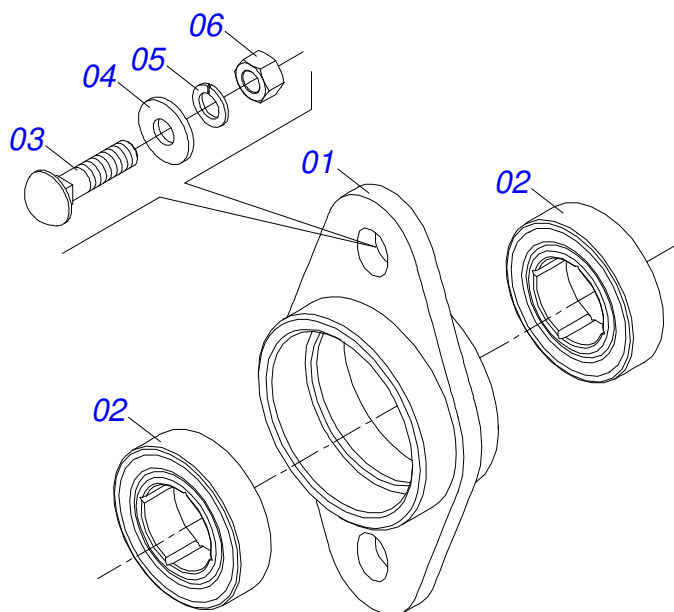


Item	Code	Description	See page	QT
01	0502011978	CENTRAL BEARING GEARBOX		01
02	0503013462	6005 2RS1 ROLLER BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

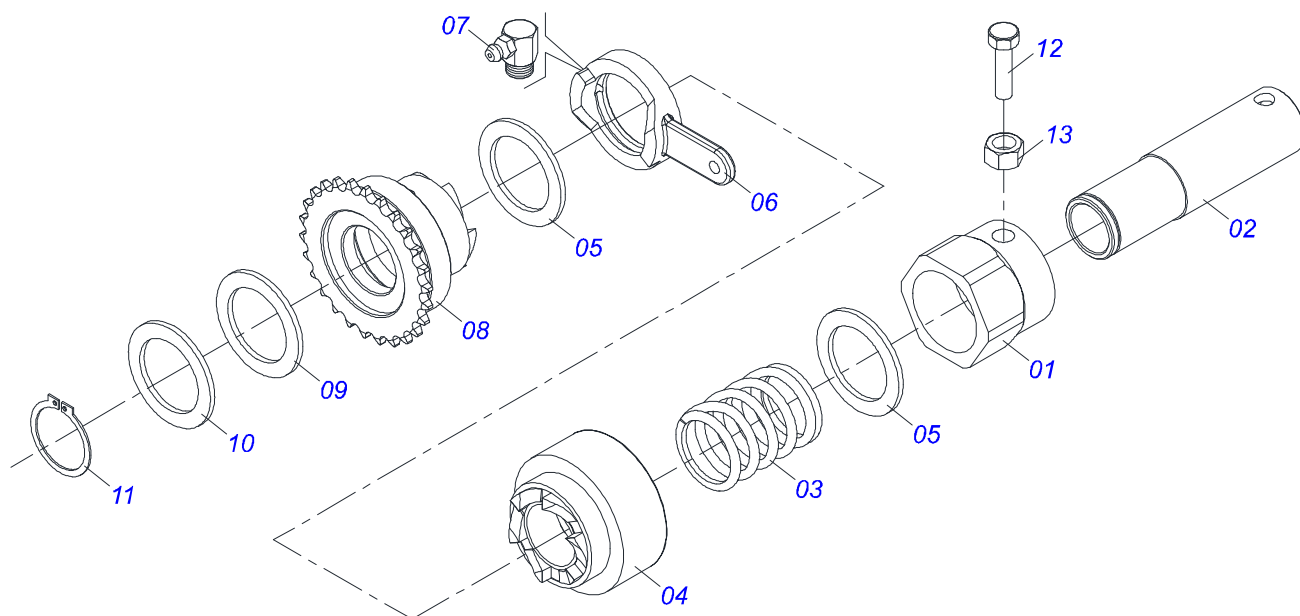

Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0521017590	GUIDE AXLE		01
03	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
04	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
05	0501019734	FLAT WASHER		02
06	0502010710	RIGHT CAM, SMALLER		02
07	0503010003	1845 GREASE FITTING		02
08	0502012539	26Z P12,7 GEAR		01
09	0501019735	FLAT WASHER		01
10	0521017593	FLAT WASHER		01
11	0503010542	501045 CLAMPING RING (FOR AXLE)		01
12	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
13	0503010060	1/2 UNC G.5 ZN HEX NUT		01

LEFT SIDE TRANSMISSION ACTUATOR


0511047070

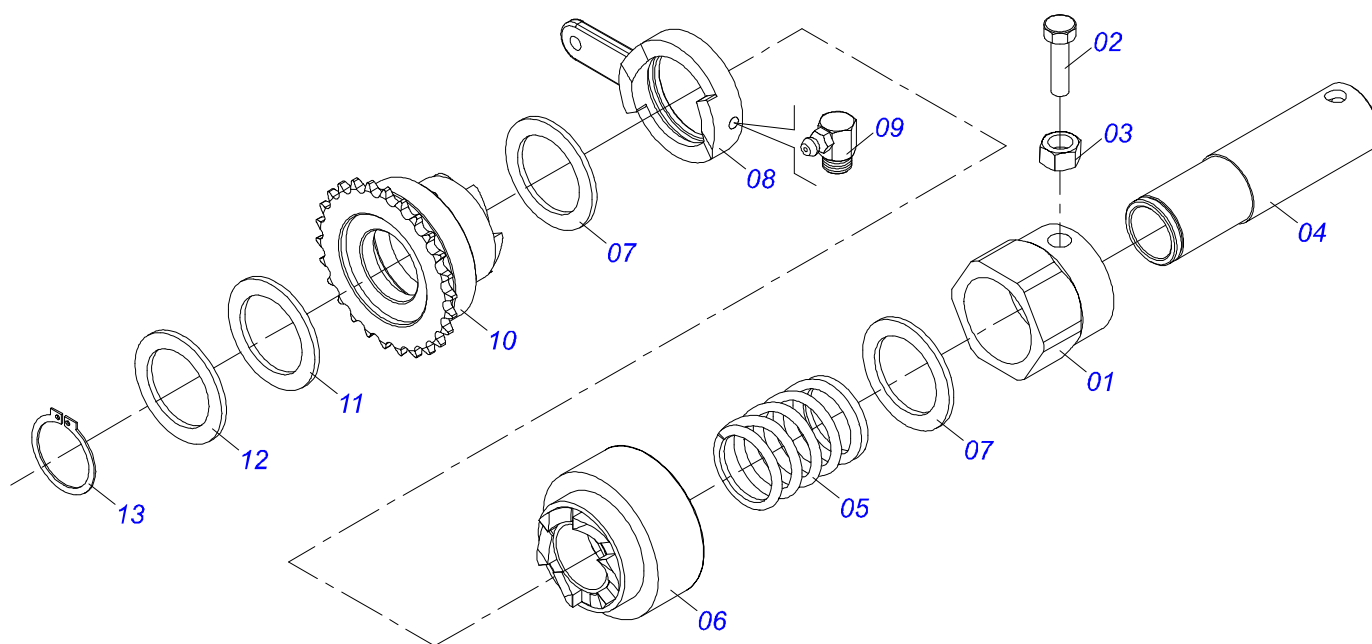

Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

LEFT GEAR BOX ASSY


0521043317

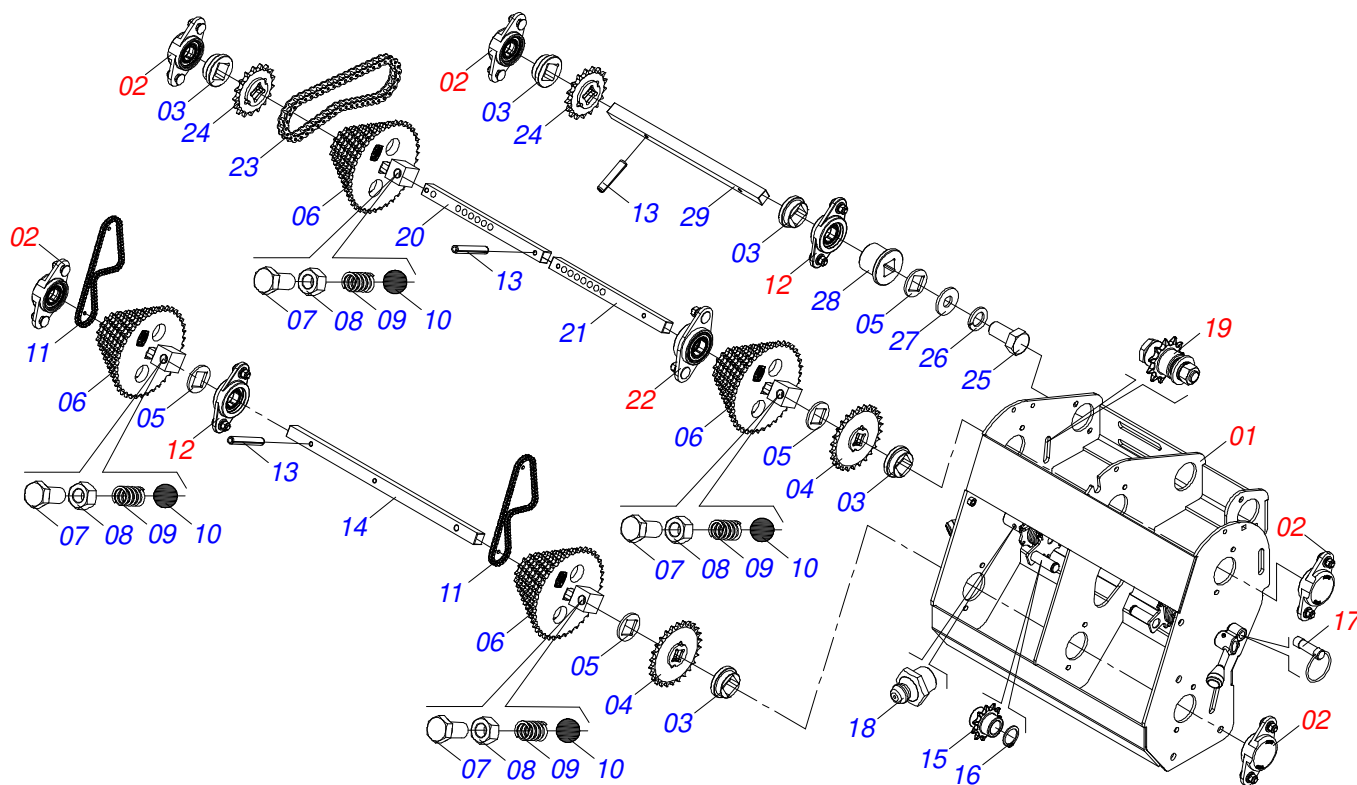


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	37	01
02	0511059266	CLOSED BEARING	27	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN SHAFT		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	29	02
13	0503010292	701164 6 X 40 SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	31	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	32	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	33	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8 SPRING WASHER		01
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

LH GEAR BOX


0501058213

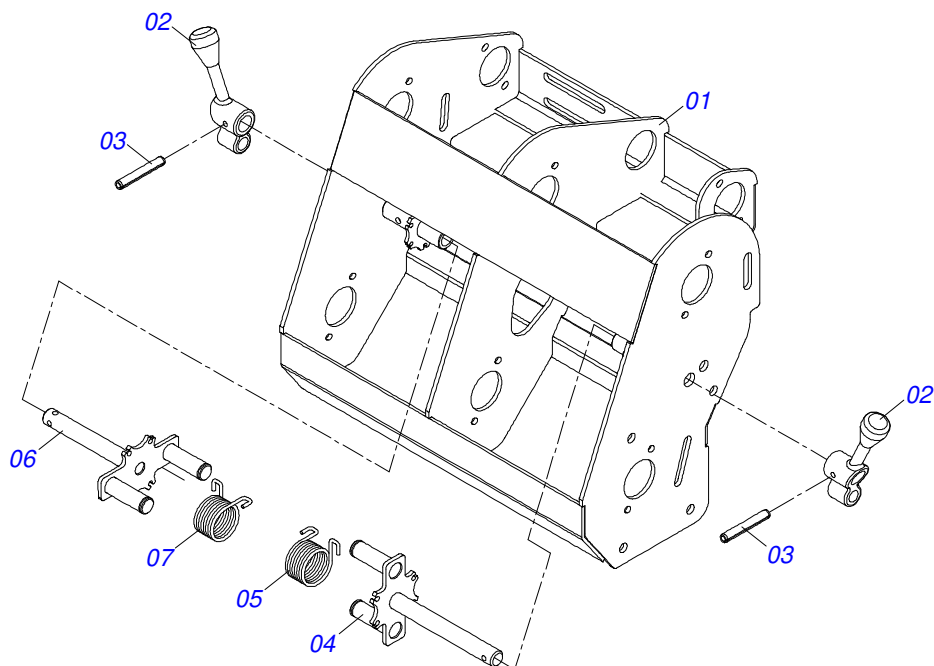


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TIGHTENER LEVER		02
03	0503010292	701164 6 X 40 SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING		01

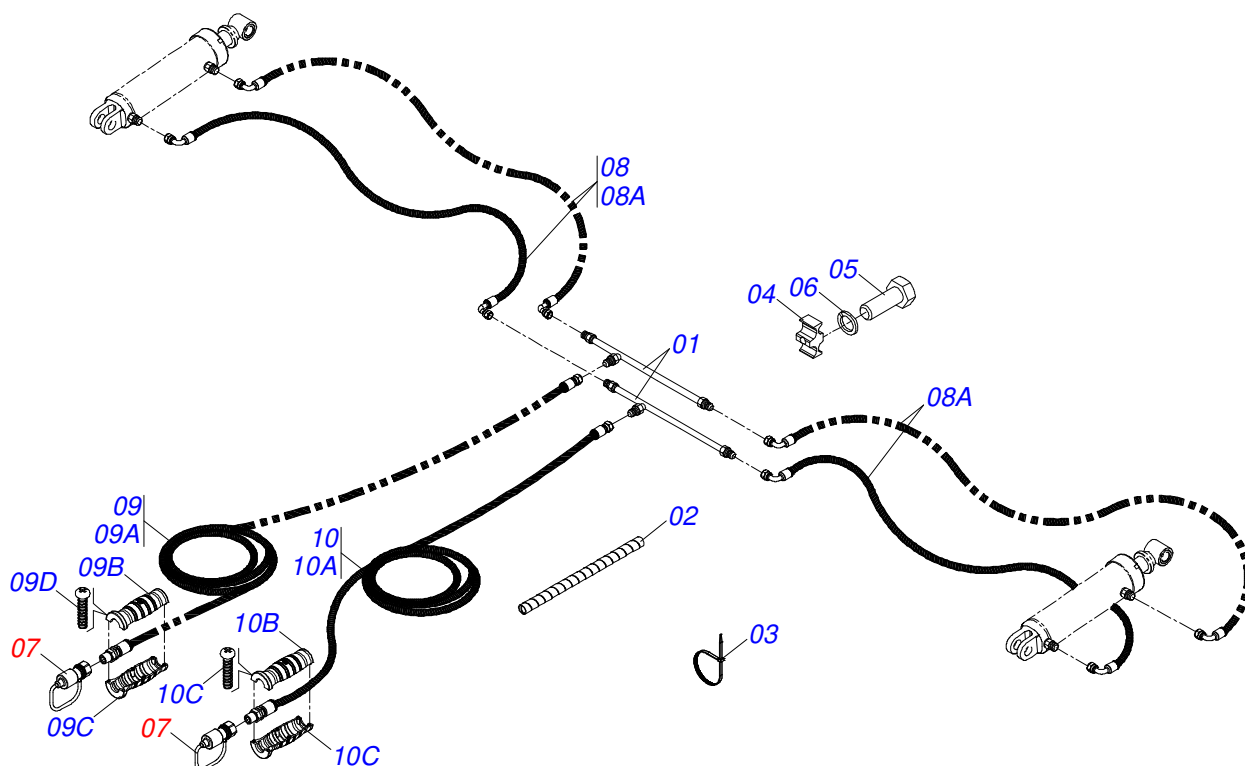

Item	Code	Description	See page	QT
01	0511063404	"T" OIL CONDUCTOR		02
02	0581010091	SPRING PROTECTION PLASTIC HOSE		01
03	0503013100	NYLON CLAMP		02
04	0502012702	BODY SUPPORT CLAMP		02
05	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
06	0503010180	7/16" SPRING WASHER		02
07	0501053834	MALE QUICK COUPLER	39	02
08	0511057068	HOSE KIT SYSTEM HYDRAULIC		01
08A	0501080449	3/8" X 1500 TC-TC HOSE		04
09	0521052334	3/8 X 4000 TR-TM HOSE BLACK / BLUE		01
09A	0501080361	3/8" X 157" TR-TM HOSE		01
09B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
09C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
09D	0503018952	PLASTIC BOLT		06
10	0521052333	3/8 X 4000 TR-TM HOSE BLACK / RED		01
10A	0501080361	3/8" X 157" TR-TM HOSE		01
10B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
10C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
10D	0503018952	PLASTIC BOLT		06

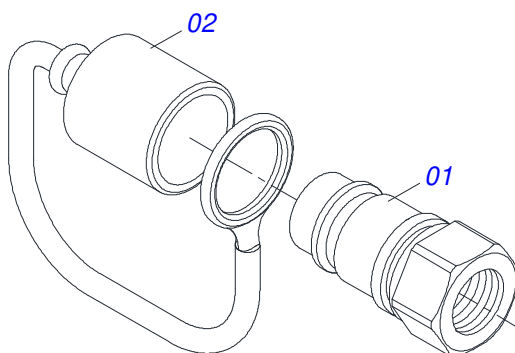

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

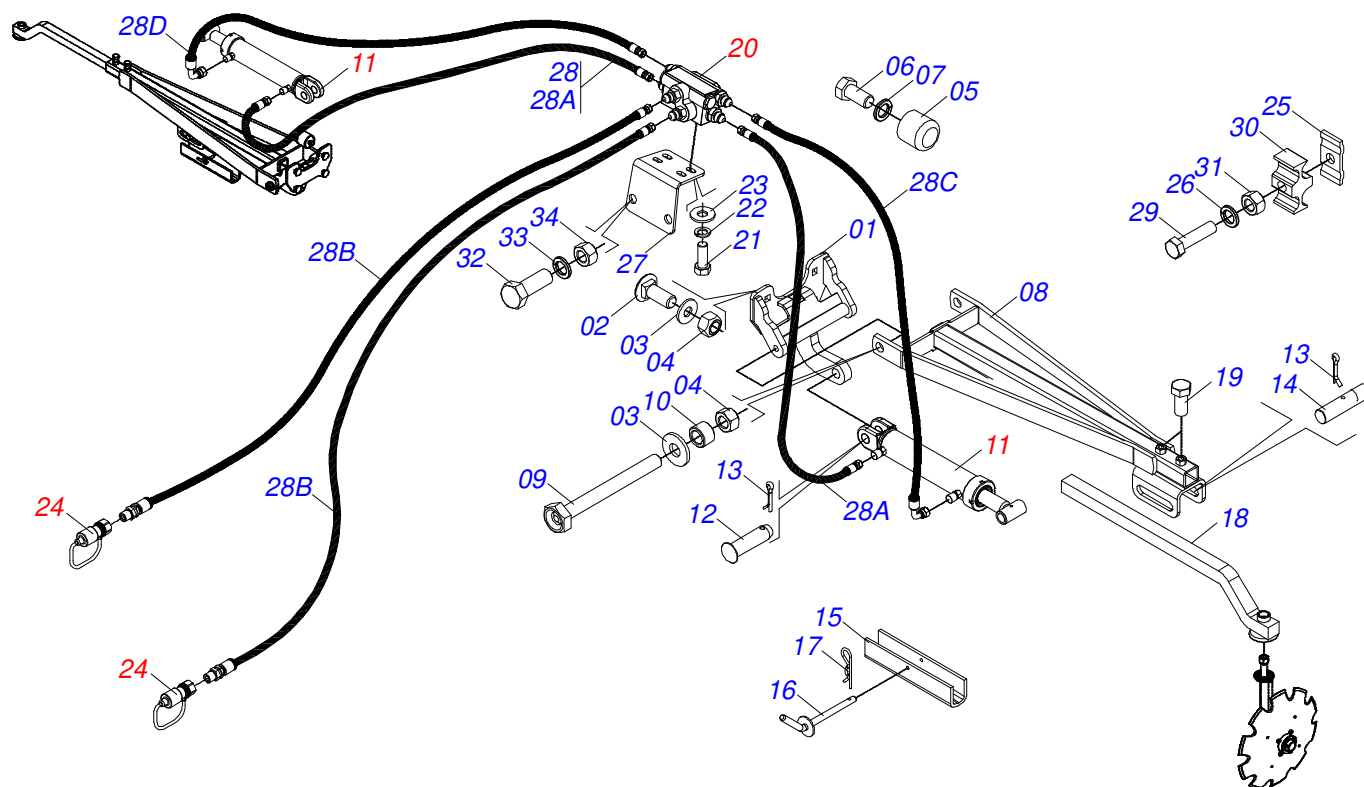


Item	Code	Description	See page	QT
01	0511069622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		08
03	0501012140	FLAT WASHER		12
04	0503012412	5/8" UNC SELF LOCKING NUT		10
05	0503011070	BEATER		02
06	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
07	0503010019	1/2" SPRING WASHER		02
08	0511061811	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0511058449	HYDRAULIC CYLINDER	41	02
12	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
13	0503010523	1/4" X 2" SPLIT PIN		04
14	0511015779	1" X 4.2" AXLE		02
15	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
16	0501068994	8,30 X 78 LOCK PIN		02
17	0503030168	HITCH PIN CLIP		02
18	0501066949	1235 TURNBUCKLE		02
19	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		04
20	0501054649	HBM SEQUENTIAL VALVE	42	01
21	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
22	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
23	0503010025	3/8 SPRING WASHER		02
24	0501053834	MALE QUICK COUPLER	39	02
25	0531011180	UPPER BODY CLIP		08
26	0503010180	7/16" SPRING WASHER		08
27	0511011311	VALVE SUPPORT		01
28	0511059271	HYDRAULIC MARKER HAND SET		01
28A	0501081731	3/8 X 3550 TR-TR HOSE		02
28B	0501081732	3/8" X 3750 TR-TR HOSE		02
28C	0521052286	HOSE 3/8 X 4000 TC-TM PURPLE / RED		01




Item	Code	Description	See page	QT
28D	0521052288	3/8 X 4000 TC-TM HOSE PURPLE / BLUE		01
29	0503011103	7/16" X 2-1/2" BOLT		08
30	0502012702	BODY SUPPORT CLAMP		08
31	0503010244	7/16" NUT		08
32	0503010232	5/8" X 1.3/4" BOLT		02
33	0503010027	5/8 SPRING WASHER		02
34	0503010013	5/8 NUT		02

HYDRAULIC CYLINDER

0511058449

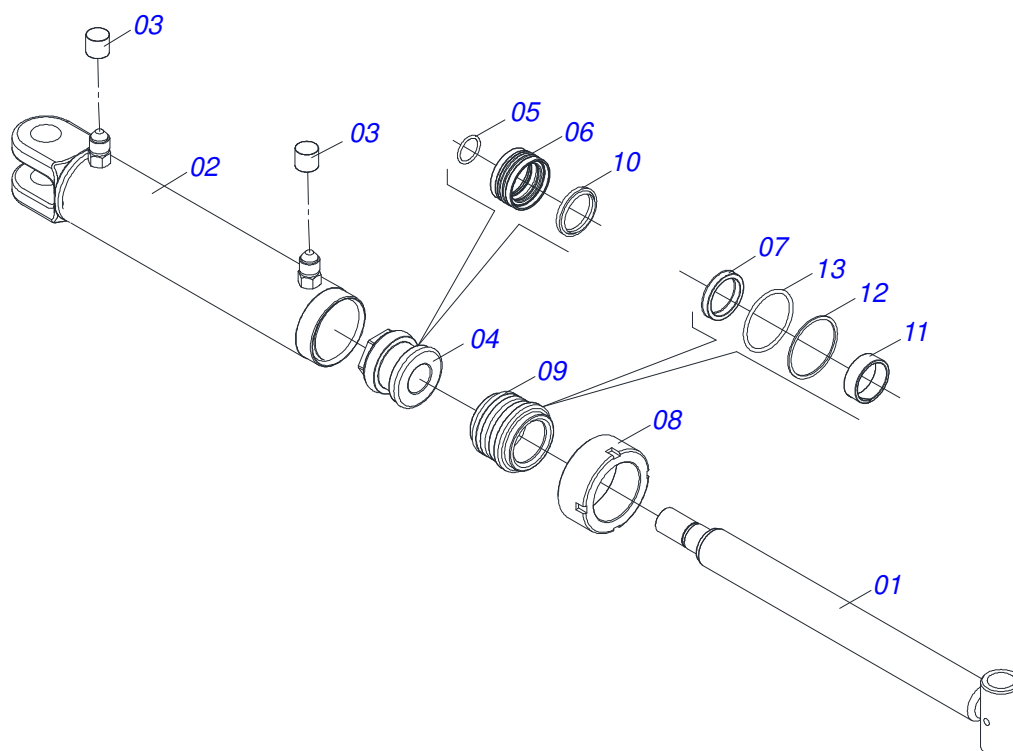


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	2-119 N 3006-9B O'RING		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

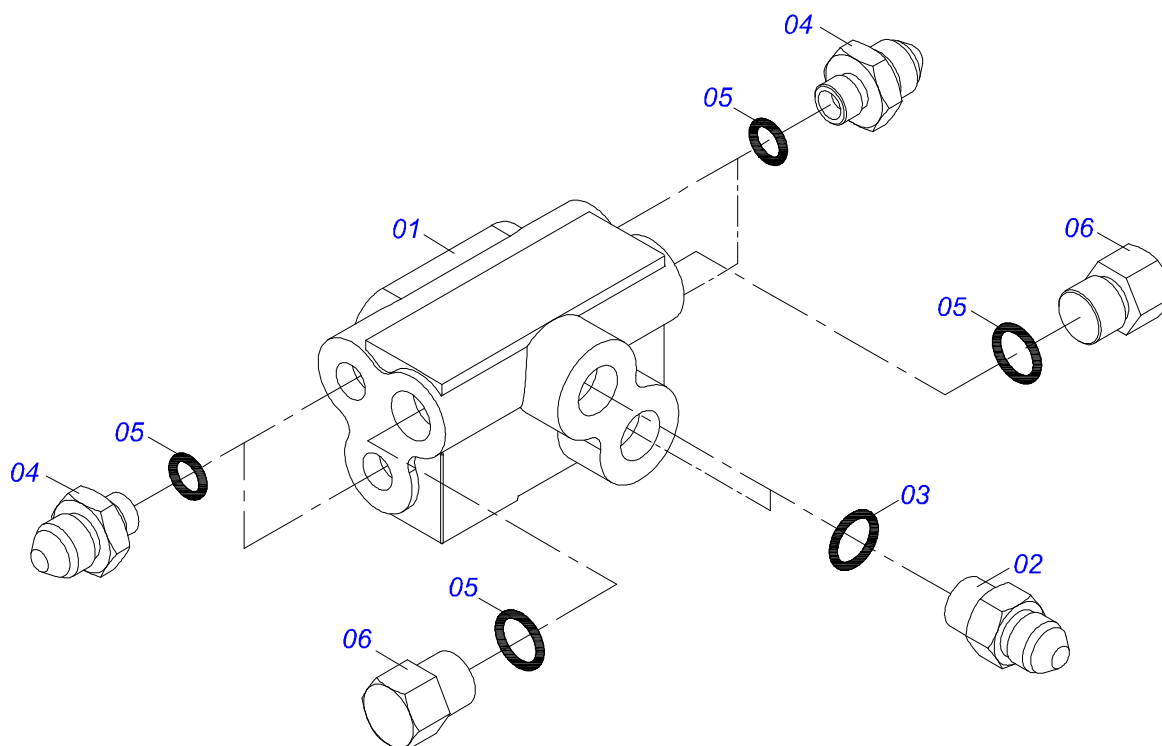

Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

ROW MARKER DISC ASSEMBLY


0501050633

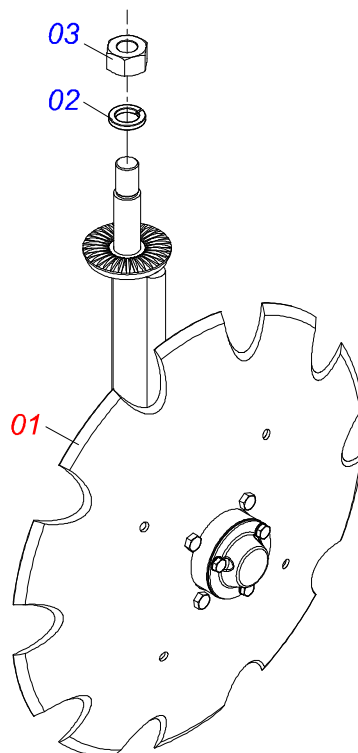


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC	44	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

ROW MARKER DISC


0511053904

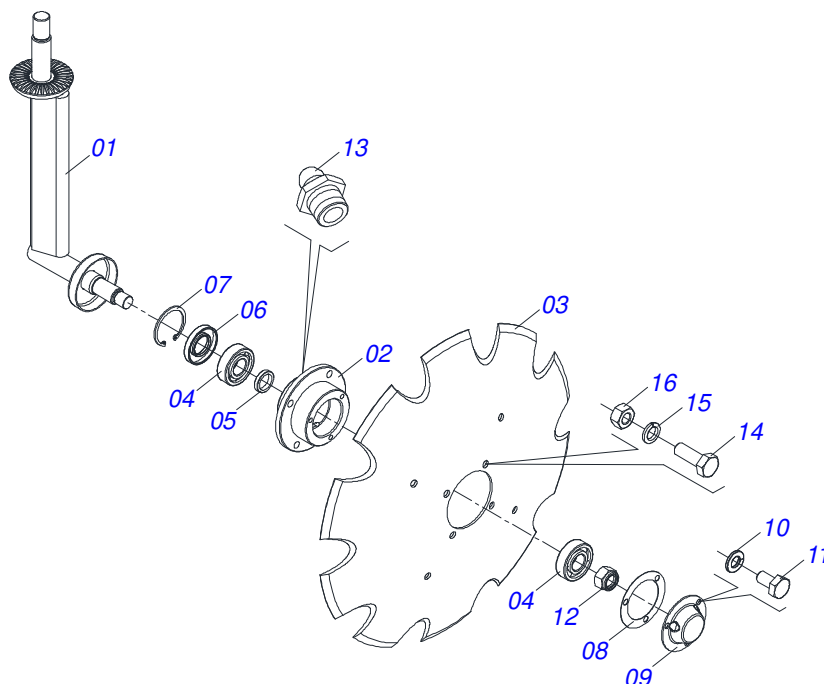


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9" X 2" X 0.02" JOINT		01
09	0521019178	PROTECTION LID		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4" UNF X 1/2" BOLT		03
12	0503010878	5/8" SELF ALIGNING NUT		01
13	0503010691	1/4" GREASE FITTING		01
14	0503010358	5/16" X 5/8" BOLT		04
15	0503011444	SPRING WASHER		04
16	0503010337	5/16" NUT		04

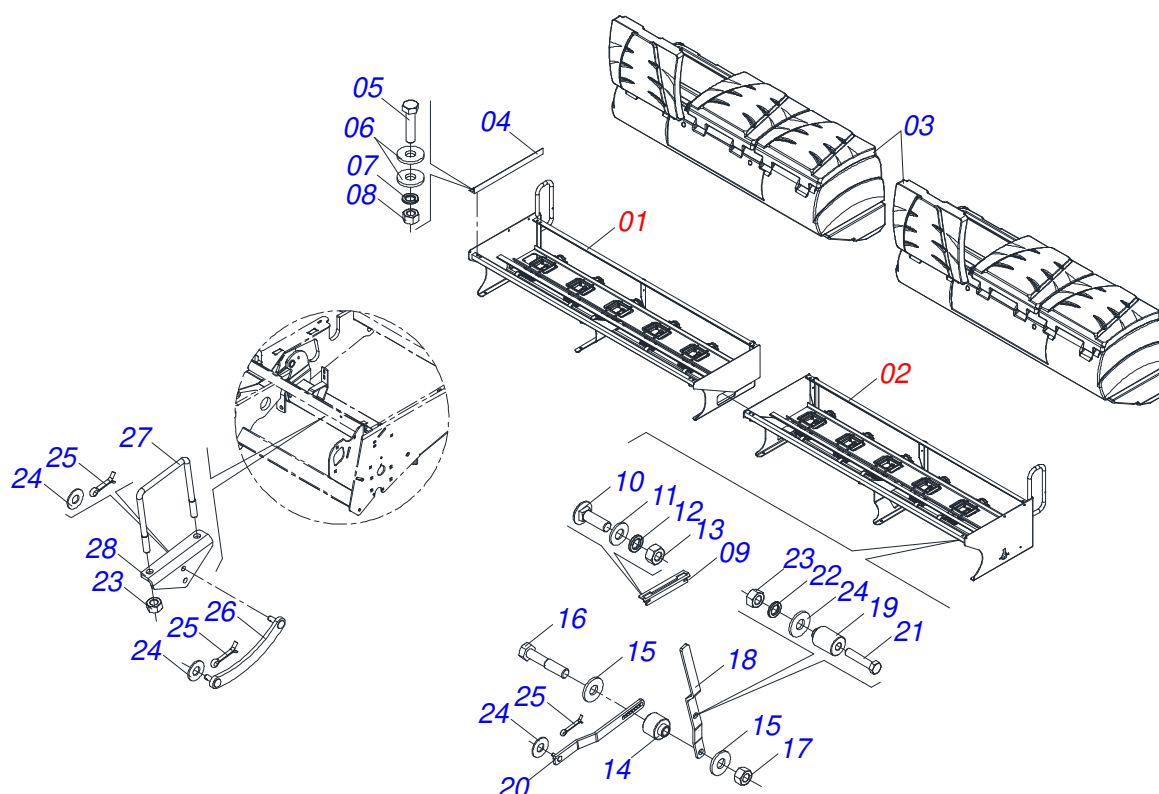


Item	Code	Description	See page	QT
01	0531056920	RIGHT HOPPER SUPPORT WITH FERTILIZER 46 METERING - 5345		01
02	0531056919	LEFT HOPPER SUPPORT WITH FERTILIZER 47 METERING - 5345		01
03	0503062169	ASSEMBLED FERTILIZER HOPPER		02
04	0521015267	L 1.1/2" X 1/4" X 26.6" WITH HOLE		04
05	0503010849	3/8" X 1-1/2" BOLT		20
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		40
07	0503010025	3/8 SPRING WASHER		20
08	0503010026	3/8" NUT		20
09	0551019156	GEAR BOX LEVER LOCK		02
10	0503011953	5/16" X 1" BOLT		04
11	0501010694	FLAT WASHER		04
12	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
13	0503010337	5/16" NUT		04
14	0551019168	SLEEVE		02
15	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06
16	0503010479	BOLT		02
17	0503011336	1/2" HEX SELF ADJUSTING NUT		06
18	0501215701	ARM/DISARM LEVER		02
19	0551019167	SLEEVE UNION		02
20	0531064712	INNER LEVER		02
21	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
22	0503010019	1/2" SPRING WASHER		02
23	0503010060	1/2 UNC G.5 ZN HEX NUT		02
24	0501013518	FLAT WASHER		06
25	0503010140	1/8" X 3/4" SPLIT PIN		06
26	0511069678	LH LOWER LEVER		02
27	0561016468	FASTENER		02
28	0551019159	LEVER FIXER BODY		02

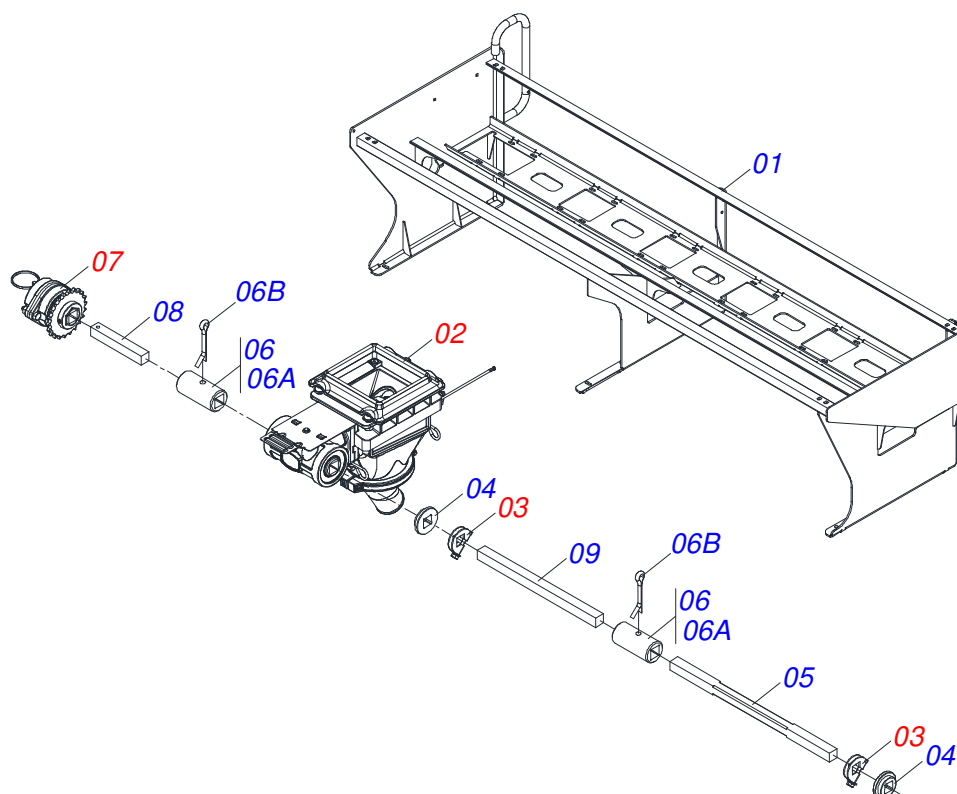

Item	Code	Description	See page	QT
01	0531064949	RIGHT HOPPER SUPPORT		01
02	0531055319	ALPHA II FERTILIZER METERING	48	06
03	0501053788	3/4" SQUARE AXLE FASTENER	51	05
04	0503031527	AGRICULTURAL BEARING		05
05	0501218487	3/4 X 390 AXLE		05
06	0531057908	SLEEVE 1/4 X 2		06
06A	0502013069	SLEEVE 21 X 38 X 50		01
06B	0503010010	1/4" X 2.1/2" SPLIT PIN		01
07	0531057911	22Z GEAR SIDE BEARING ASSEMBLY	52	01
08	0501218691	3/4 X 6,53/6,61 AXLE WITH HOLE		01
09	0501218858	3/4 X 355 AXLE		01

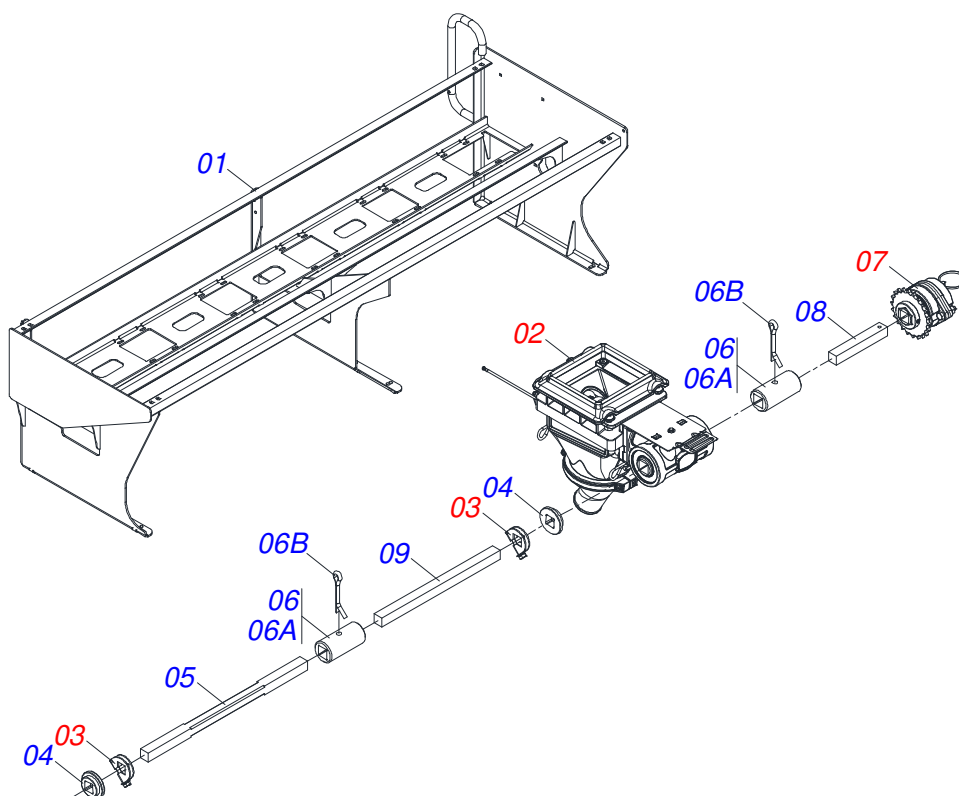


Item	Code	Description	See page	QT
01	0531064948	LEFT HOPPER SUPPORT		01
02	0531055319	ALPHA II FERTILIZER METERING	48	06
03	0501053788	3/4" SQUARE AXLE FASTENER	51	05
04	0503031527	AGRICULTURAL BEARING		05
05	0501218487	3/4 X 390 AXLE		05
06	0531057908	SLEEVE 1/4 X 2		06
06A	0502013069	SLEEVE 21 X 38 X 50		01
06B	0503010010	1/4" X 2.1/2" SPLIT PIN		01
07	0531057911	22Z GEAR SIDE BEARING ASSEMBLY	52	01
08	0501218691	3/4 X 6,53/6,61 AXLE WITH HOLE		01
09	0501218858	3/4 X 355 AXLE		01

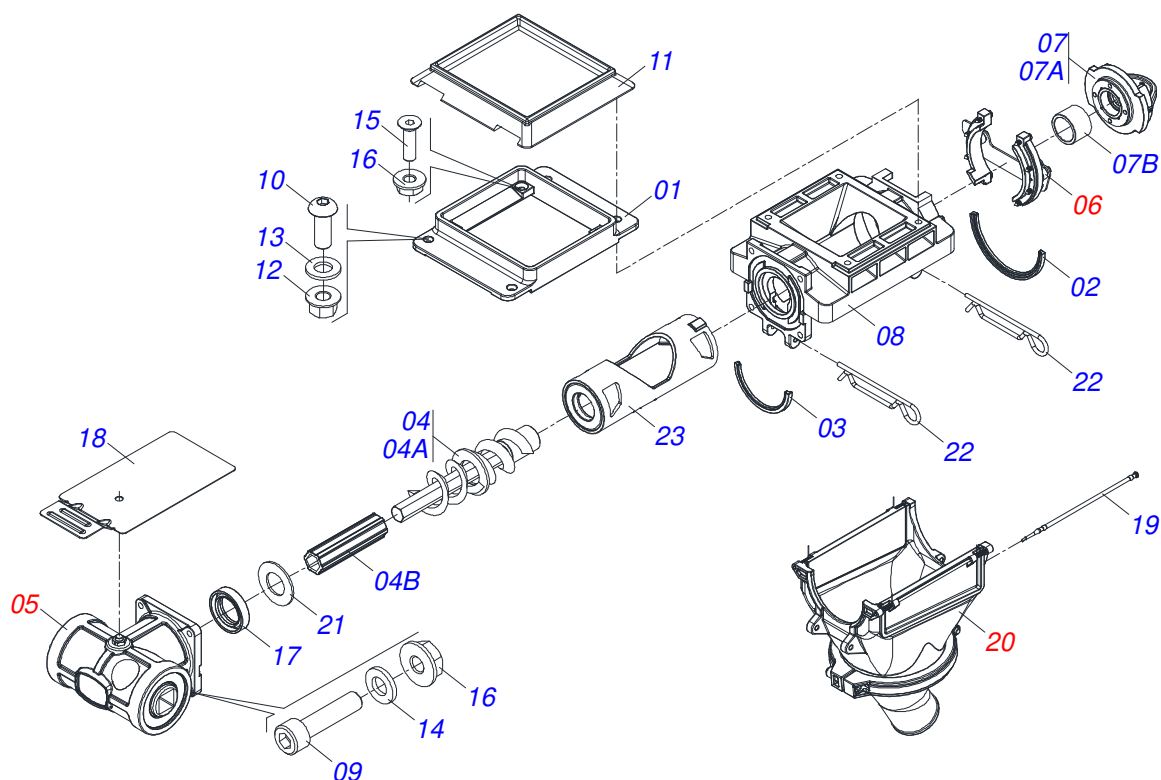


Item	Code	Description	See page	QT
01	0503035913	METERING BODY FIXING ADAPTER		01
02	0503035911	REAR COLLECTOR SEAL		01
03	0503035912	FRONT COLLECTOR SEAL		01
04	0531055518	WORM THREAD ASSEMBLED		01
04A	0531064265	WORM THREAD		01
04B	0503035859	SUPPORT SLEEVE		01
05	0531055863	ASSY TRANSMISSION HUB	49	01
06	0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	50	01
07	0501111134	LID WITH ALPHA FERTILIZER METERING GUIDE SLEEVE		01
07A	0503063799	LID WITH FERTILIZER METERING WASHER ALPHA		01
07B	0503035822	GUIDE SLEEVE SPRING CONDUCTOR		01
08	0501214337	FERTILIZER METERING BOX		01
09	0513011169	ALLEN SCREW 1/4 UNC X 1 CCSI STAINLESS STEEL		04
10	0513011172	ALLEN SCREW 3/8 UNC X 1 CASI STAINLESS STEEL		04
11	0503035931	FERTILIZER METERING SEAL		01
12	0513011173	NUT 3/8 UNC X 1		04
13	0513011174	FLAT WASHER 10.50 X 20 X 2.00 STAINLESS STEEL		05
14	0513011167	FLAT WASHER 6.4 X 12 X 1.60 STAINLESS STEEL		04
15	0513011170	ALLEN SCREW 1/4 UNC X 7/8 CCSI STAINLESS STEEL		04
16	0513011171	1/4 NC HEX NUT		08
17	0503036181	30 X 47 X 6.50 SEAL SUPPLEMENT		01
18	0501310211	FRONT LID		01
19	0503036177	LID CORD		01
20	0531059139	ASSY COLLECTOR		01
21	0501310274	FLAT WASHER 46.10 X 32 X 0.80		01
22	0503035797	FRONT COLLECTOR FIXER		02
23	0501111195	GRANULATED FERTILIZER COATING		01

ASSY TRANSMISSION HUB


0531055863

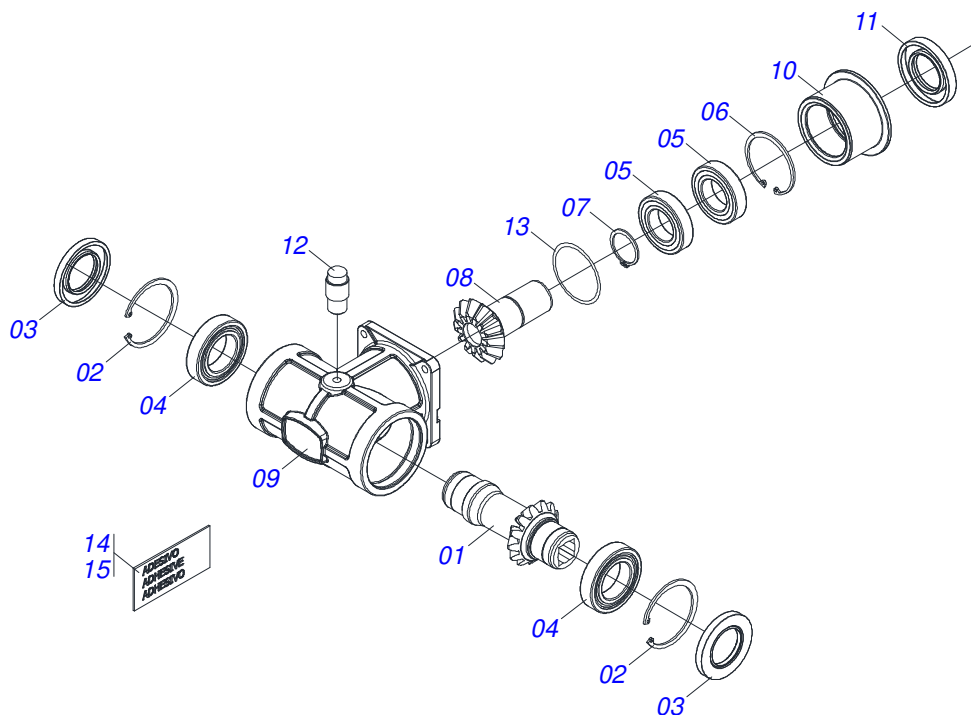


Item	Code	Description	See page	QT
01	0502013056	CONICAL PINION MOTOR 13Z ALPHA FERTILIZER METERING		01
02	0503011800	SEAL RING		02
03	0513010740	RETAINER 62 X 35 X 7 BRG 7159		02
04	0503016065	ROLLER BEARING		02
05	0503019373	6006 2RS1 NATIONAL BEARING		02
06	0503012858	502075 CLAMPING RING (FOR HOLE)		01
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01
08	0501111141	GEAR WITH ALPHA FERTILIZER METERING CAP		01
09	0501215105	METERING TRANSMISSION HUB		01
10	0501215104	TRANSMISSION HUB SLEEVE		01
11	0513011272	SEAL 7435-BRG 30 X 55 X 8.00MM		01
12	0501219613	FIXER BREATHER COVER		01
13	0513011248	RING RING 62.00 X 1.50		01
14	0503036071	TATU LOGO ADHESIVE LABEL 41.5 X 29		01
15	0503035316	LUBRICATED POINTS ADHESIVE LABEL		01

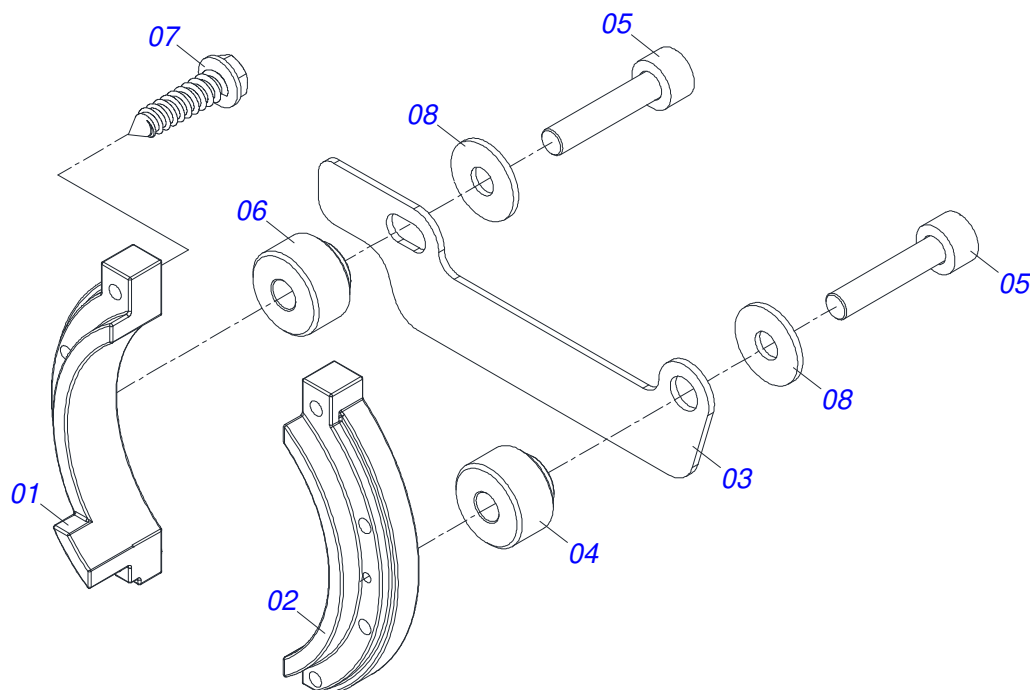


Item	Code	Description	See page	QT
01	0503035915	RIGHT GUIDE DOSING COVER		01
02	0503035916	LEFT GUIDE DISPENSER COVER		01
03	0501310245	ALPHA FERTILIZER DISPENSER COVER LATCH		01
04	0501310247	LEFT SAFETY LOCK SLEEVE		01
05	0513011249	ALLEN SCREW M4 X 20 CCSI STAINLESS STEEL		02
06	0501310246	RIGHT SAFETY LOCK SLEEVE		01
07	0513011507	FLANGED HEX SCREW AT 3.5 X 19 STAINLESS STEEL		08
08	0513011518	FLAT WASHER M4 STAINLESS STEEL AISI 304 4.3 X 12 X 1 MM		01

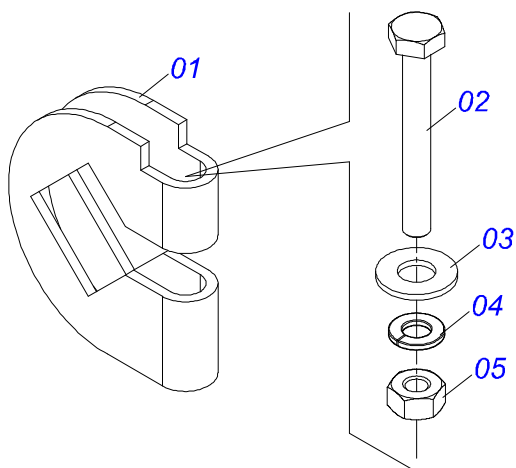


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

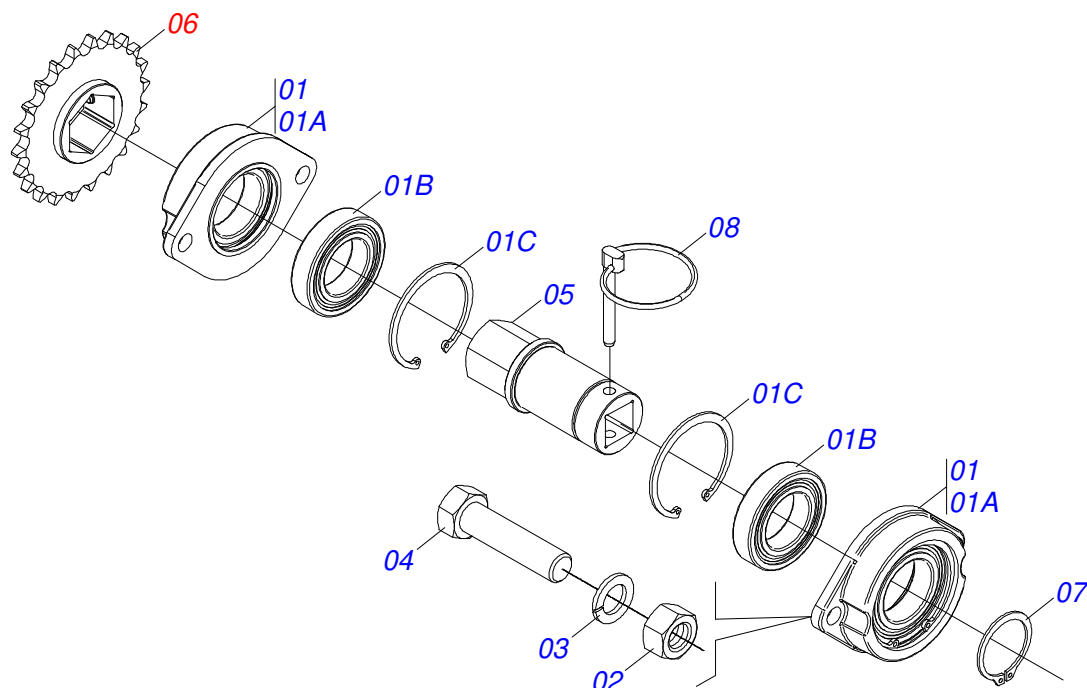


Item	Code	Description	See page	QT
01	0531057910	SIDE BEARING WITH BEARING 6007		02
01A	0502013070	SIDE FERTILIZER HOPPER SUPPORT BEARING		01
01B	0503016065	ROLLER BEARING		01
01C	0503011800	SEAL RING		01
02	0503010337	5/16" NUT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0502013067	SIDE BEARING AXLE FERTILIZER HOPPER SUPPORT		01
06	0531057901	GEAR	53	01
07	0503010845	501035 CLAMPING RING (FOR AXLE)		01
08	0503030119	LOCK PIN		01

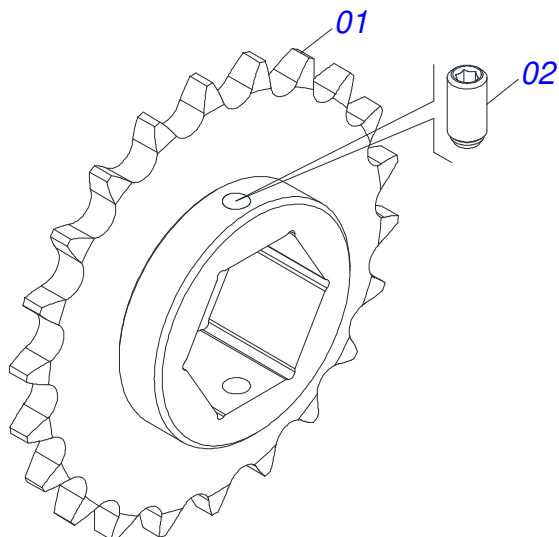


Item	Code	Description	See page	QT
01	0531065402	GEAR		01
02	0503013958	1/4" X 1" BOLT		02

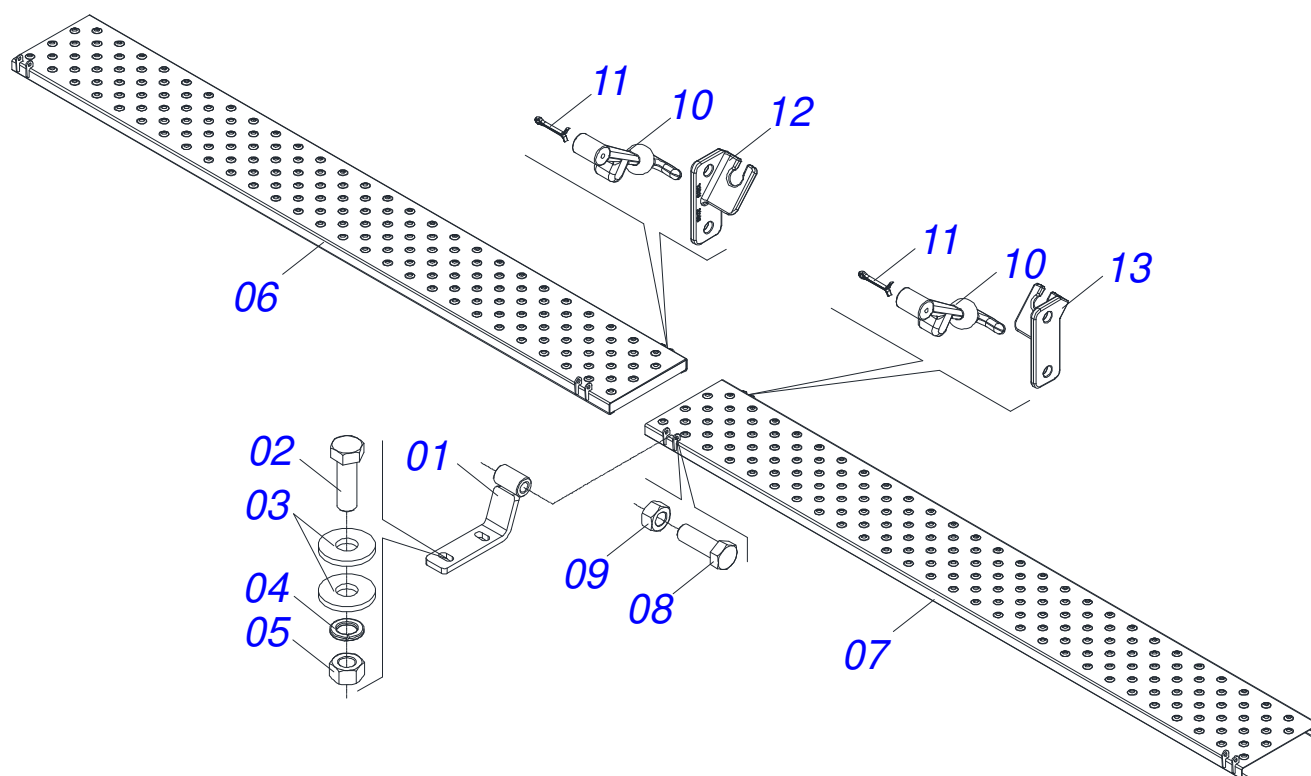


Item	Code	Description	See page	QT
01	0511069661	PLATFORM SUPPORT PIVOT		04
02	0503010849	3/8" X 1-1/2" BOLT		08
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
04	0503010025	3/8 SPRING WASHER		08
05	0503010026	3/8" NUT		08
06	0521062450	RIGHT PLATFORM		01
07	0521062451	LEFT PLATFORM		01
08	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		04
09	0503011336	1/2" HEX SELF ADJUSTING NUT		04
10	0503011333	COVER FIXER		02
11	0503010274	5/32" X 2" SPLIT PIN		02
12	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
13	0502012739	PLATFORM LEFT FIXER SUPPORT		01

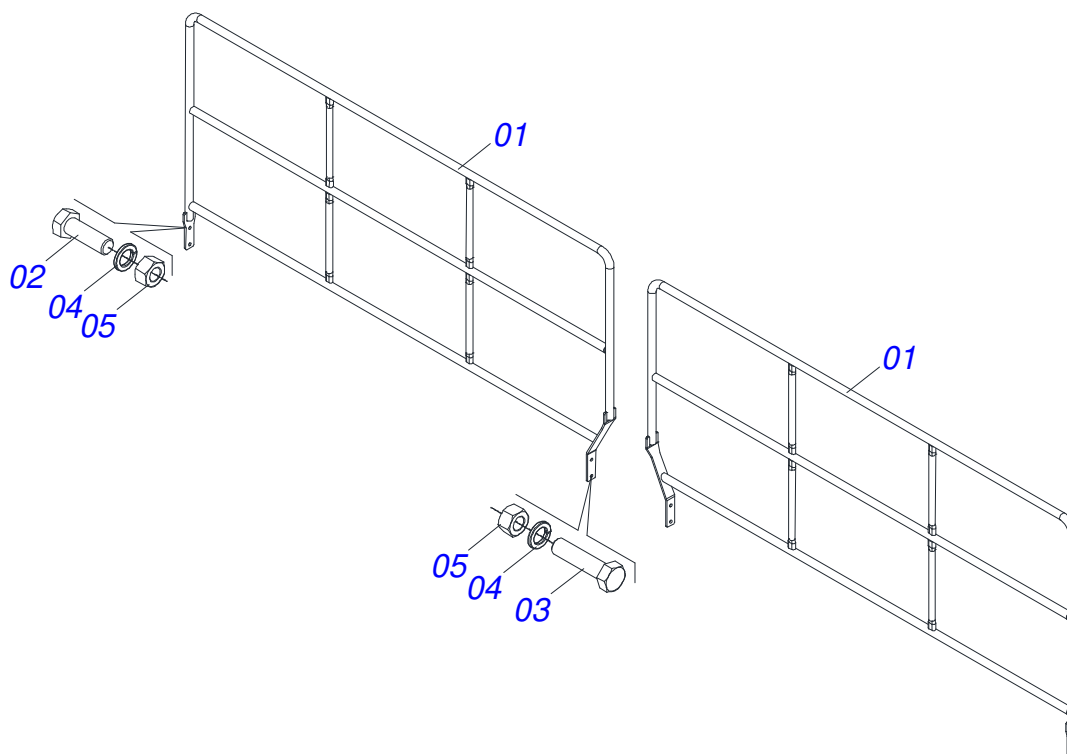


Item	Code	Description	See page	QT
01	0521062449	HANDRAIL		02
02	0503010395	1/2" X 1-1/4" BOLT		04
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
04	0503010019	1/2" SPRING WASHER		08
05	0503010060	1/2 UNC G.5 ZN HEX NUT		08

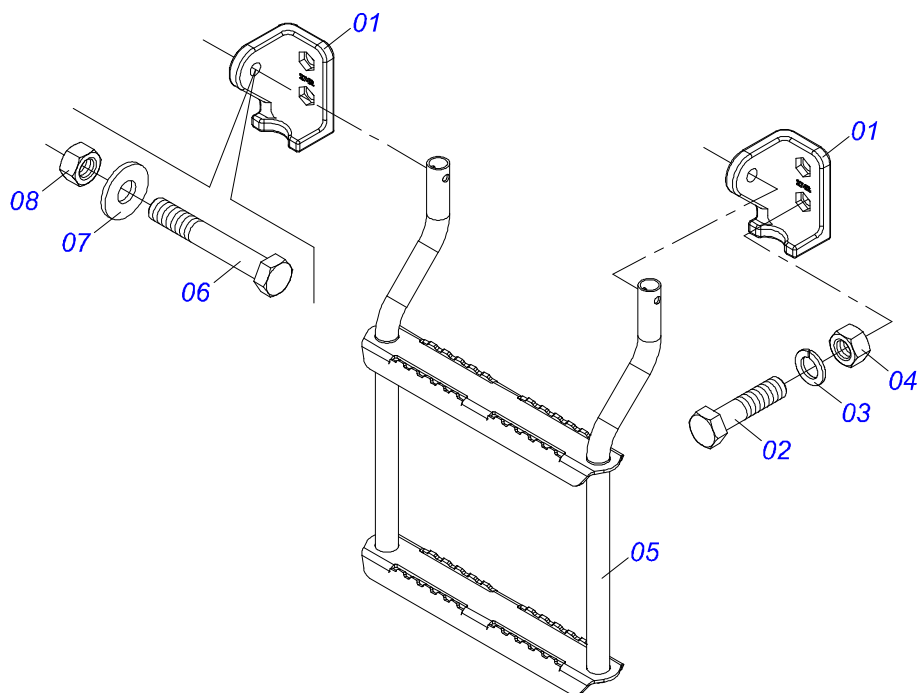


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8 SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER	02	
08	0503013357	3/8 SELF-ADJUSTING NUT	02	

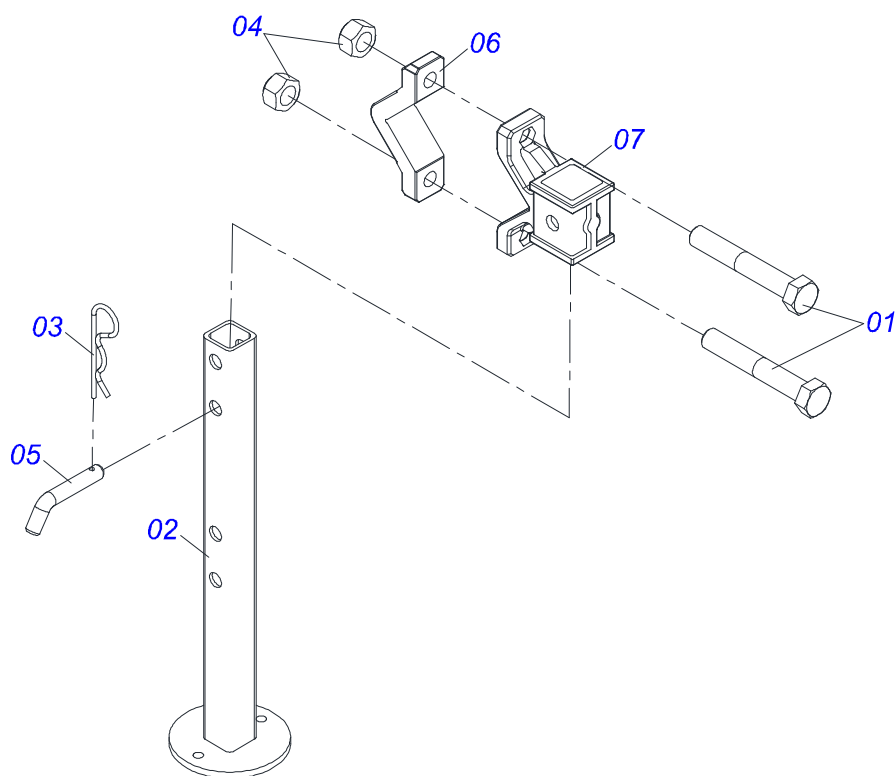


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HITCH PIN CLIP		01
04	0503012412	5/8" UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

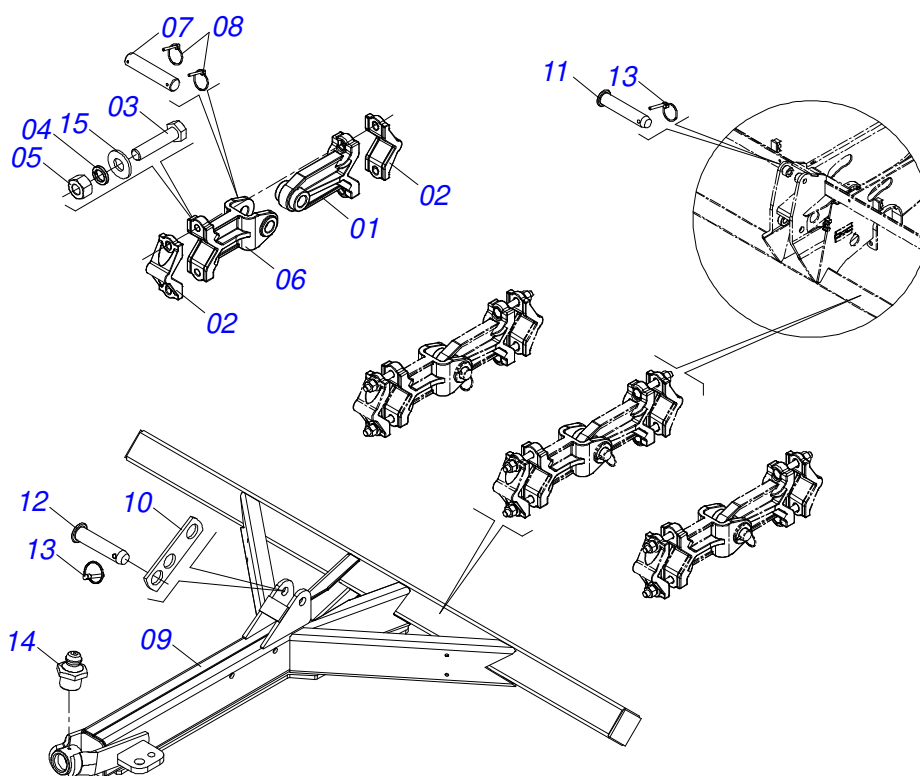

Item	Code	Description	See page	QT
01	1902012329	REAR SUPPORT FIXING DRAWBAR	04	
02	1902012330	FIXER SUPPORT ARTICULATED	08	
03	0503011084	3/4" X 5" BOLT	16	
04	0503010023	3/4" SPRING WASHER	16	
05	0503010014	3/4" HEX NUT	16	
06	1902012328	FIXED FRONT SUPPORT DRAWBAR	04	
07	0561014393	COUPLING SHAFT	04	
08	0503030119	LOCK PIN	08	
09	0511064808	DRAWBAR	01	
10	0561019087	DRAWBAR TRANSPORT LOCK	01	
11	0521010588	0.9" X 7.0" COUPLING SHAFT	01	
12	0521010578	COUPLING SHAFT	01	
13	0503030085	LOCK PIN	02	
14	0503010002	1800 GREASE FITTING	01	
15	0501010322	FLAT WASHER	16	

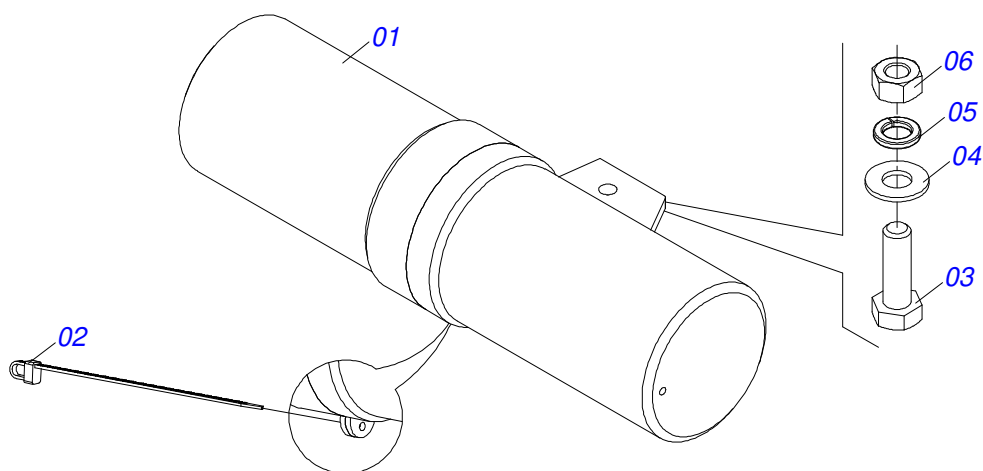


Item	Code	Description	See page	QT
001	0503060100	INSTRUCTIONS MANUAL CANISTER		01
002	0503010267	NYLON CLAMP		01
003	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
004	0501010694	FLAT WASHER		01
005	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
006	0503010337	5/16" NUT		01

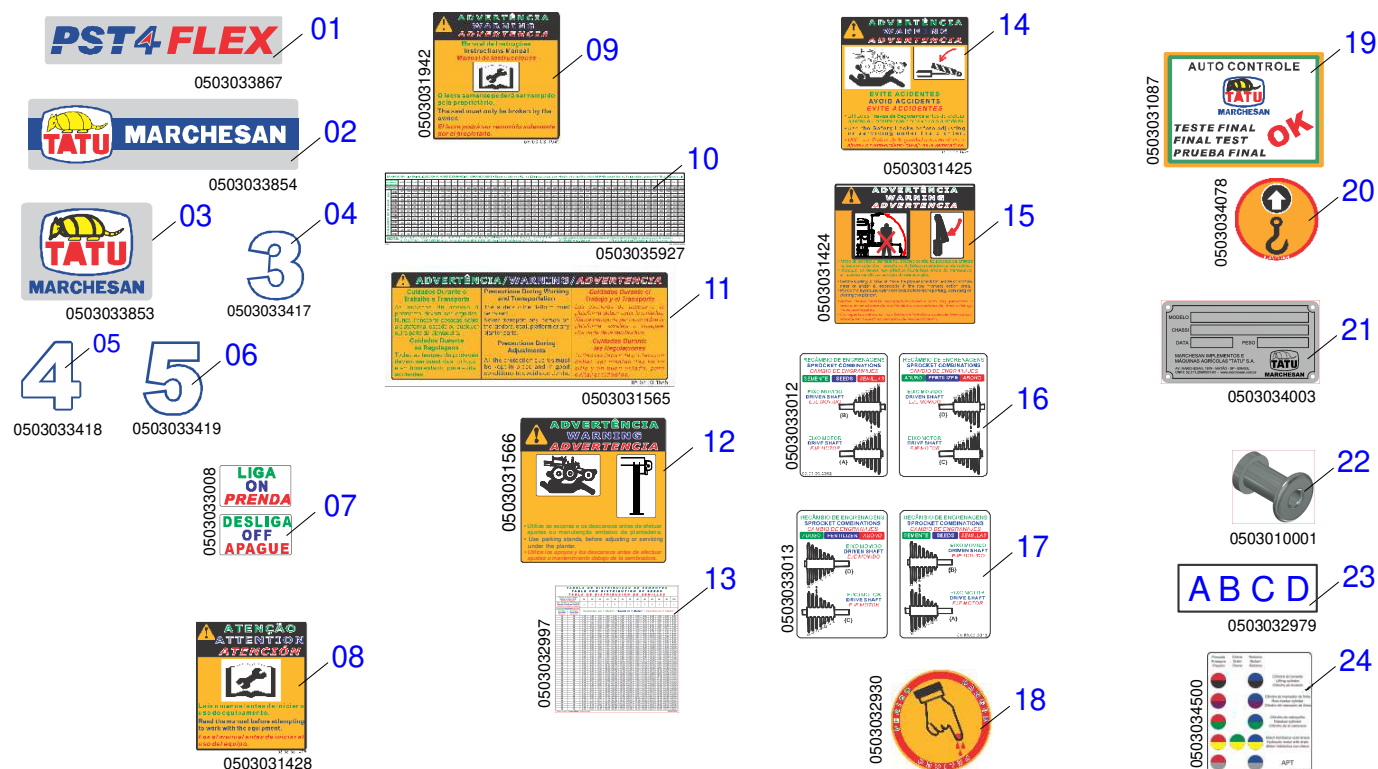


Item	Code	Description	See page	QT
01	0503033867	ADHESIVE LABEL		02
02	0503033854	ADHESIVE LABEL		02
03	0503033853	ADHESIVE LABEL		02
04	0503033417	ADHESIVE LABEL		02
05	0503033418	ADHESIVE LABEL 4 NUMBER FOR PLANTER		02
06	0503033419	ADHESIVE LABEL 5 NUMBER FOR PLANTING		04
07	0503033008	ADHESIVE LABEL		02
08	0503031428	READ MANUAL DECAL		01
09	0503031942	ADHESIVE LABEL		01
10	0503035927	ADHESIVE LABEL TABLE FERTILIZER P27		02
11	0503031565	ADHESIVE LABEL CARE		02
12	0503031566	ADHESIVE LABEL		02
13	0503032997	ADHESIVE LABEL SEED DISTRIBUTOR TABLE		02
14	0503031425	ADHESIVE LABEL ATTENTION		02
15	0503031424	ADHESIVE LABEL ATTENTION ROW HYDRAULIC MARKER		02
16	0503033012	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
17	0503033013	ADHESIVE LABEL RECAMBIO GEAR SEED / FERTILIZER LEFT		01
18	0503032930	ADHESIVE LABEL DANGER		06
19	0503031087	ADHESIVE LABEL		01
20	0503034078	LIFTING POINTS DECAL		03
21	0503034003	SERIAL NUMBER TAG 61 X 118		01
22	0503010001	3.2 X 5.5 RIVET		04
23	0503032979	ADHESIVE LABEL LETTERS A B C D		02
24	0503034500	ADHESIVE LABEL		01

HEX AXLE ASSEMBLY

0511054303

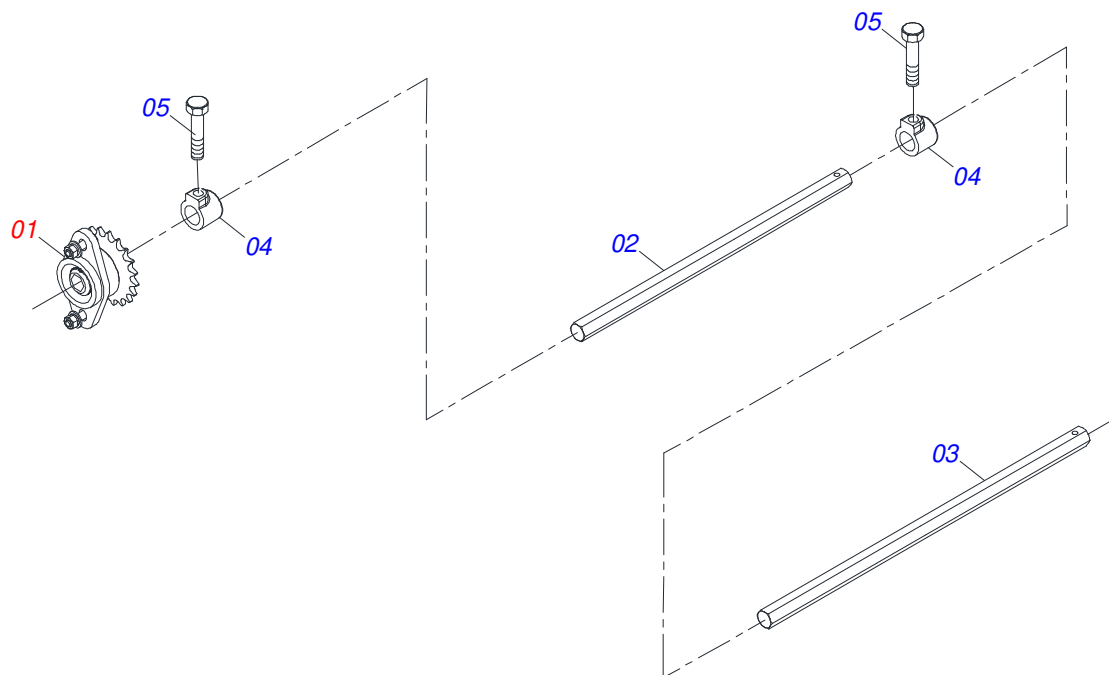


Item	Code	Description	See page	QT
01	0501053610	BEARING WITH 17Z GEAR INNER AXLE		02
02	0561019203	HEX AXLE 5/8 X 2525 LEFT		01
03	0561019202	HEX AXLE RIGHT		01
04	0511063123	BUSHING WITH NUT		04
05	0503010834	1/2 X 1 BOLT		04

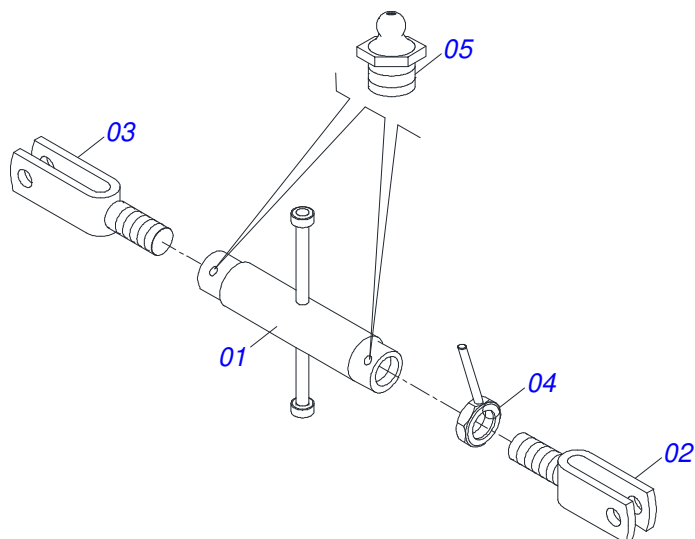


Item	Code	Description	See page	QT
01	0501069529	653 TURNBUCKLE		01
02	0511062887	RIGHT TURNBUCKLE		01
03	0511062888	LH TURNBUCKLE		01
04	0501061056	RH LOCKNUT WITH HANDLER		01
05	0503010002	1800 GREASE FITTING		02

HITCH ARTICULATED TRACTOR


0511054601

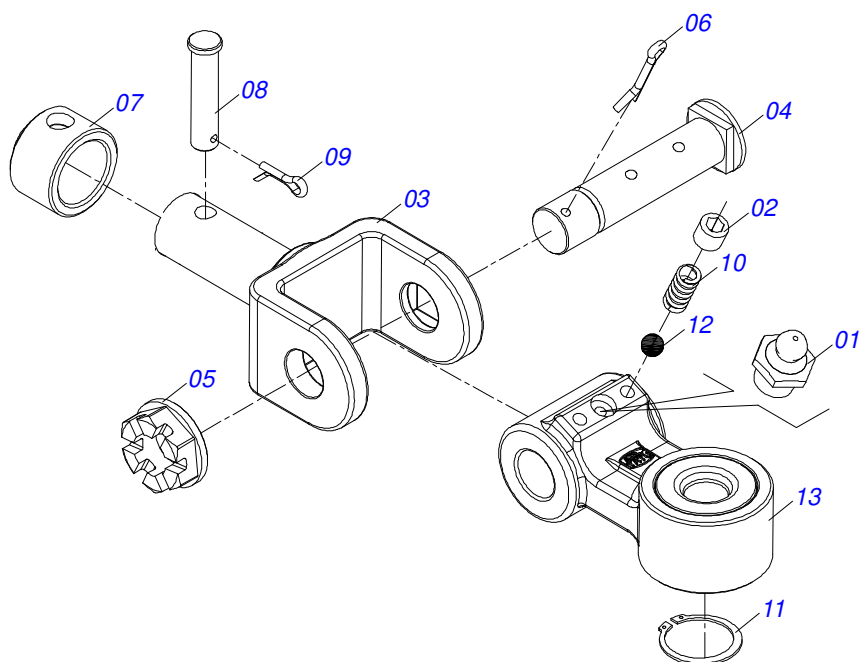


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0581019654	ASSY BOLT		01
05	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
06	0503010010	1/4" X 2.1/2" SPLIT PIN		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2" SPLIT PIN		01
10	0503033731	LEFT COMPRESSION SPRING		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

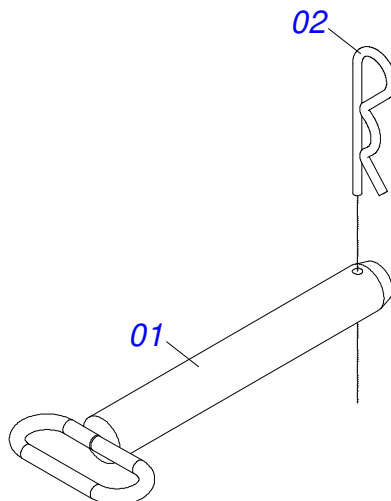


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

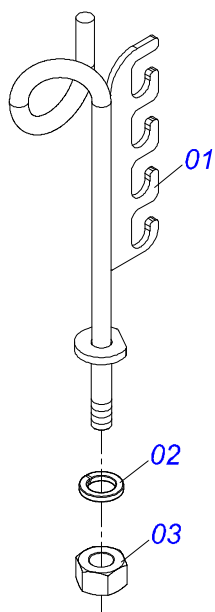

Item	Code	Description	See page	QT
01	0521065611	HOSE SUPPORT		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

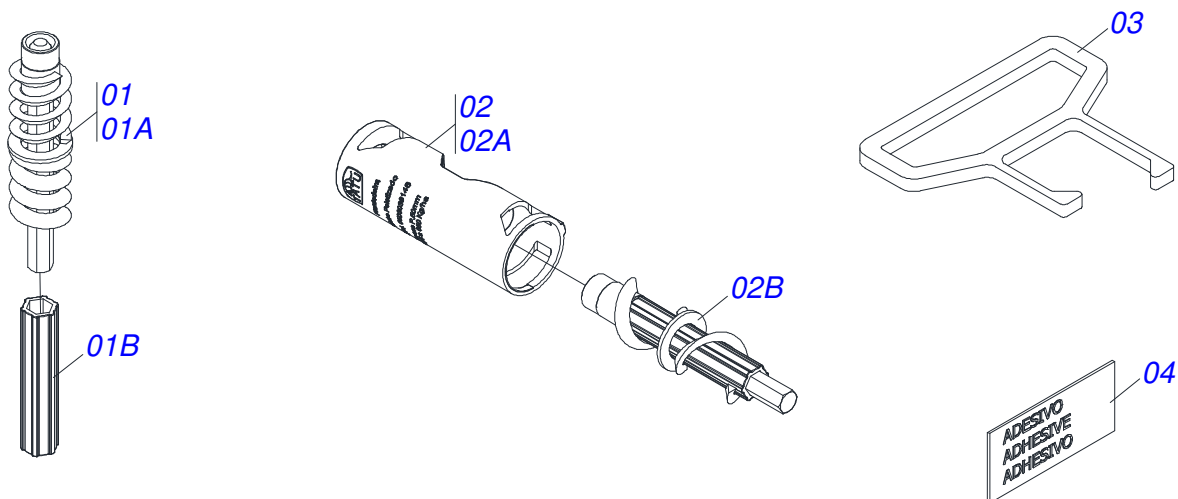


Item	Code	Description	See page	QT
01	0531058988	P.16 ENDLESS THREAD WITH COATING	11	
01A	0531065012	ALPHA FERTILIZER METERING P.16MM WORM THREAD	01	
01B	0503035859	SUPPORT SLEEVE	01	
02	0531058992	PELLETIZED FERTILIZER KIT P.50 125 TO 650 KG/HA ALPHA	11	
02A	0501111196	PELLETED FERTILIZER METERING COATING	01	
02B	0531058987	ENDLESS THREAD WITH AXLE COVERING	01	
03	0501214546	SPRING KEY	01	
04	0503035928	ADHESIVE LABEL FERTILIZER TABLE ALPHA P16.5	01	

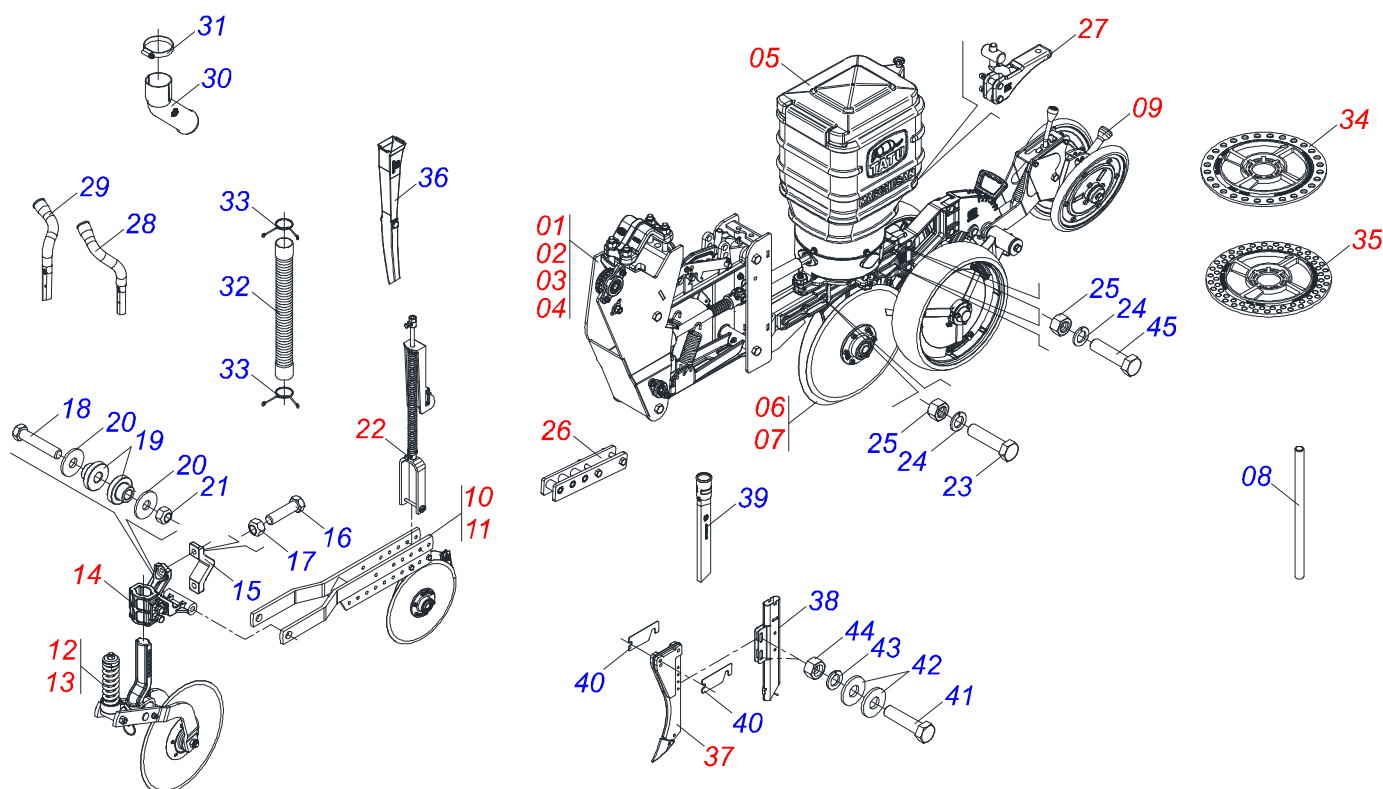

Item	Code	Description	See page	QT
01	0531055772	FRONT OF SHORT SEED ROW LEFT SIGMA V2	68	01
02	0531055769	FRONT OF LONG SEED ROW RIGHT SIGMA V2	69	01
03	0531055770	FRONT OF SHORT SEED ROW RIGHT SIGMA V2	70	01
04	0531055768	FRONT OF LONG SEED ROW LEFT	71	01
05	0531059347	SILO SEED CSI FRONT DRIVE SIGMA	82	01
06	0531059396	RIGHT REAR SEED LINE FRONT SIGMA QUICK FITTING	86	01
07	0531059395	REAR LEFT SEED LINE FRONT SIGMA QUICK FIXING	87	01
08	0531013600	PRESS ADJUSTMENT LEVER		01
09	0521046122	DEPTH SYSTEM / COMPACTOR ASSY	94	01
10	0511053250	SHORT ARM FERTILIZER ROW WITH LEFT DOUBLE DISC	104	01
11	0511053251	LONG ARM FERTILIZER ROW WITH RIGHT DOUBLE DISC	105	01
12	0511044563	20" COULTER BLADE ASSY FOR SHORT ROW	108	01
13	0511044585	20" COULTER BLADE ASSY FOR LONG ROW	109	01
14	0511058212	FERTILIZER ROW SUPPORT ASSY	112	01
15	0502010175	HITCH CLAMP		01
16	0501011543	5/8" X 4" BOLT		01
17	0503012412	5/8" UNC SELF LOCKING NUT		01
18	0501010066	3/4" X 9" BOLT		01
19	0521017831	SUPPORT SLEEVE SPACER		01
20	0511017232	FLAT WASHER		01
21	0503011255	3/4" LOCK NUT		01
22	0501058423	FERTILIZER ROD SPRING ROW	113	01
23	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
24	0503010019	1/2" SPRING WASHER		01
25	0503010060	1/2 UNC G.5 ZN HEX NUT		01
26	0521057957	FIXED ROD EXTENSION WITH FIXATION	119	01
27	0511052024	FAST CLOSING SET	114	01
28	0503030391	RIGHT FERTILIZER NOZZLE		01


Item	Code	Description	See page	QT
29	0503030392	LEFT FERTILIZER NOZZLE		01
30	0503031050	CURVED CONDUCTOR		01
31	0503010246	CLAMP		01
32	0503031145	2" X 2" X 20" HOSE		01
33	0503031076	2" HOSE CLAMP		01
34	0503063785	SIGMA V2 CORN DISC SET	115	01
35	0503063786	SIGMA V2 SOY DISC SET	116	01
36	0503035755	440 SEED NOZZLE		01
37	0501110231	SCARIFIER ROD WITH TIP	118	01
38	0521069127	BOTTOM NOZZLE FERTILIZER		01
39	0503030483	FERTILIZER SOCKET		01
40	0511017969	0.1" SPACING PLATE		01
41	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
42	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
43	0503010025	3/8 SPRING WASHER		01
44	0503010026	3/8" NUT		01
45	0503010905	1/2" X 2-1/4" BOLT		01

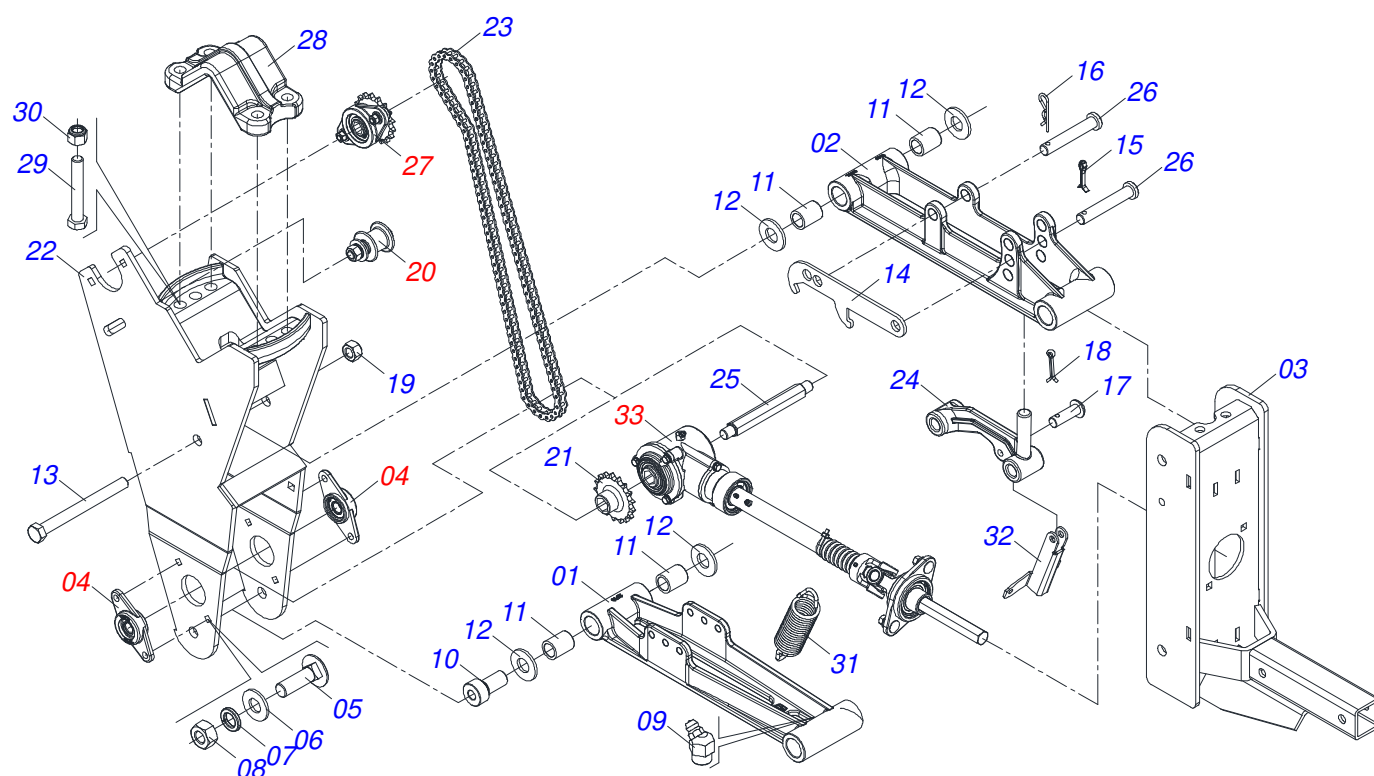

Item	Code	Description	See page	QT
01	0502012666	SEED ROW LOWER ARM		01
02	0502012350	SEED ROW UPPER ARM		01
03	0531064032	SEED ROW FRAME		01
04	0511054635	BEARING AXLE BODY	72	02
05	0503011953	5/16" X 1" BOLT		04
06	0501010694	FLAT WASHER		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04
09	0503010003	1845 GREASE FITTING		04
10	0561015858	SPACER LOWER SLEEVE		01
11	0531015151	0.6" X 1" X 2.4" SLEEVE		07
12	0531015184	FLAT WASHER		08
13	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
14	0561019032	SEED FERTIL ROW LOCK		01
15	0503010071	3/16" X 1" SPLIT PIN		01
16	0503030168	HITCH PIN CLIP		01
17	0521010773	0.37" X 1.18" COUPLING SHAFT		01
18	0503010140	1/8" X 3/4" SPLIT PIN		01
19	0503012412	5/8" UNC SELF LOCKING NUT		04
20	0511055260	SEED ROW CHAIN TENSIONER	73	01
21	0502012782	17Z GEAR WITH HEX HOLE		01
22	0521064651	LEFT SEED ROW SUPPORT FRONT		01
23	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
24	0502012568	UPPER ROCKER ARM		01
25	0561014904	TRANSMISSION AXLE FRAME ROW		01
26	0501011388	COUPLING SHAFT		02
27	0511050609	BEARING WITH 17Z GEAR ASSY	74	01
28	0502012789	FIXER SUPPORT FERTILIZER ROW		01
29	0503017857	BOLT 5/8 UNF 4		04
30	0503010811	5/8" UNF SELF ADJUSTING NUT		04
31	0503034580	TRACTION SPRING		02




Item	Code	Description	See page	QT
32	0581018487	FIXER UPPER SPRING		01
33	0531055203	TRANSMISSION WITH AXLE	76	01

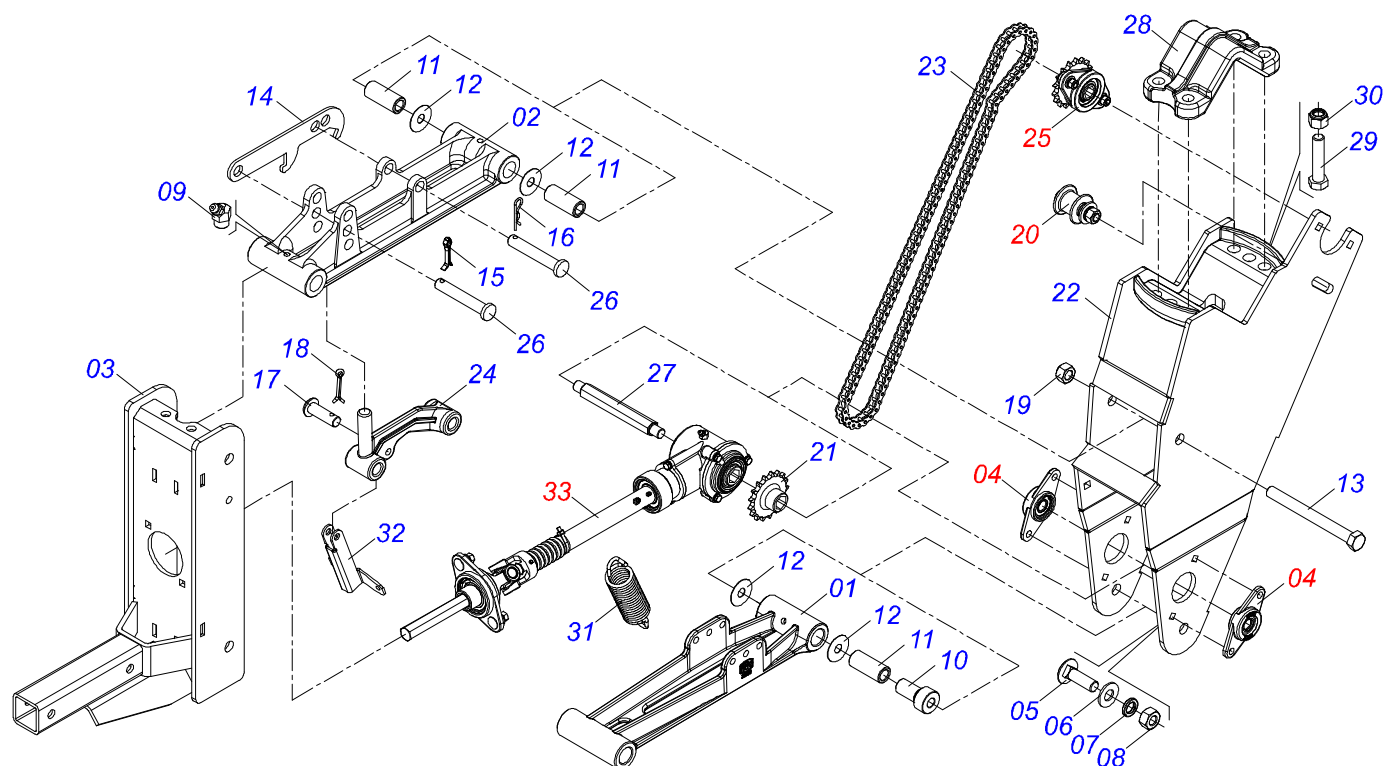

Item	Code	Description	See page	QT
01	0502012666	SEED ROW LOWER ARM		01
02	0502012350	SEED ROW UPPER ARM		01
03	0531064032	SEED ROW FRAME		01
04	0511054635	BEARING AXLE BODY	72	02
05	0503011953	5/16" X 1" BOLT		04
06	0501010694	FLAT WASHER		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04
09	0503010003	1845 GREASE FITTING		04
10	0561015858	SPACER LOWER SLEEVE		01
11	0531015151	0.6" X 1" X 2.4" SLEEVE		07
12	0531015184	FLAT WASHER		08
13	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
14	0561019032	SEED FERTIL ROW LOCK		01
15	0503010071	3/16" X 1" SPLIT PIN		01
16	0503030168	HITCH PIN CLIP		01
17	0521010773	0.37" X 1.18" COUPLING SHAFT		01
18	0503010140	1/8" X 3/4" SPLIT PIN		01
19	0503012412	5/8" UNC SELF LOCKING NUT		04
20	0511055260	SEED ROW CHAIN TENSIONER	73	01
21	0502012782	17Z GEAR WITH HEX HOLE		01
22	0521064652	RH SEED ROW SUPPORT FRONT		01
23	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
24	0502012568	UPPER ROCKER ARM		01
25	0511050609	BEARING WITH 17Z GEAR ASSY	74	01
26	0501011388	COUPLING SHAFT		02
27	0561014904	TRANSMISSION AXLE FRAME ROW		01
28	0502012789	FIXER SUPPORT FERTILIZER ROW		01
29	0503017857	BOLT 5/8 UNF 4		04
30	0503010811	5/8" UNF SELF ADJUSTING NUT		04
31	0503034580	TRACTION SPRING		02



Item	Code	Description	See page	QT
32	0581018487	FIXER UPPER SPRING		01
33	0531055203	TRANSMISSION WITH AXLE	76	01

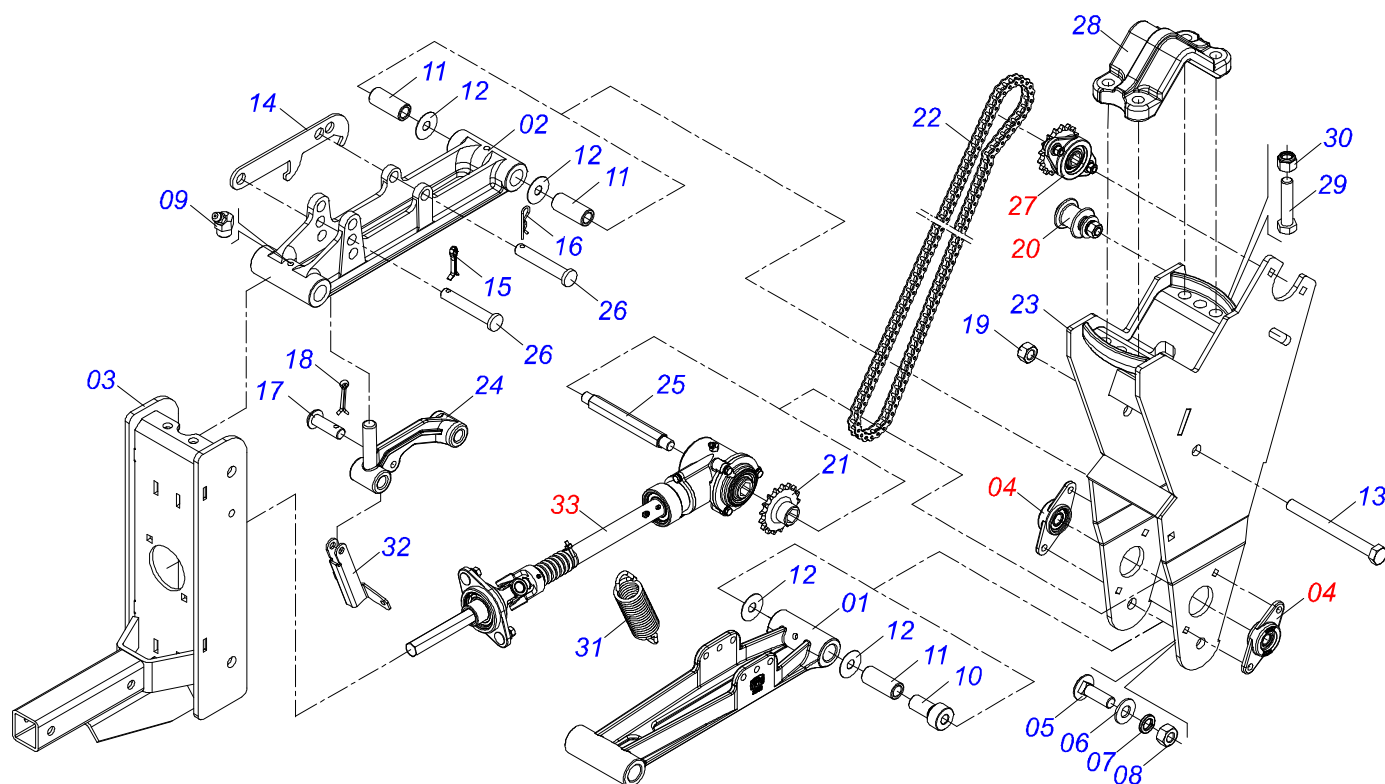


Item	Code	Description	See page	QT
01	0502012666	SEED ROW LOWER ARM		01
02	0502012350	SEED ROW UPPER ARM		01
03	0531064032	SEED ROW FRAME		01
04	0511054635	BEARING AXLE BODY	72	02
05	0503011953	5/16" X 1" BOLT		04
06	0501010694	FLAT WASHER		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04
09	0503010003	1845 GREASE FITTING		04
10	0561015858	SPACER LOWER SLEEVE		01
11	0531015151	0.6" X 1" X 2.4" SLEEVE		07
12	0531015184	FLAT WASHER		08
13	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
14	0561019032	SEED FERTIL ROW LOCK		01
15	0503010071	3/16" X 1" SPLIT PIN		01
16	0503030168	HITCH PIN CLIP		01
17	0521010773	0.37" X 1.18" COUPLING SHAFT		01
18	0503010140	1/8" X 3/4" SPLIT PIN		01
19	0503012412	5/8" UNC SELF LOCKING NUT		04
20	0511055260	SEED ROW CHAIN TENSIONER	73	01
21	0502012782	17Z GEAR WITH HEX HOLE		01
22	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
23	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
24	0502012568	UPPER ROCKER ARM		01
25	0561014904	TRANSMISSION AXLE FRAME ROW		01
26	0501011388	COUPLING SHAFT		02
27	0511050609	BEARING WITH 17Z GEAR ASSY	74	01
28	0502012789	FIXER SUPPORT FERTILIZER ROW		01
29	0503017857	BOLT 5/8 UNF 4		04
30	0503010811	5/8" UNF SELF ADJUSTING NUT		04
31	0503034580	TRACTION SPRING		02



PST4 FLEX - FRAME 5345 - CSI (FROM 05/2023)
FRONT OF SHORT SEED ROW RIGHT SIGMA V2


Page 70
0531055770

Item	Code	Description	See page	QT
32	0581018487	FIXER UPPER SPRING		01
33	0531055203	TRANSMISSION WITH AXLE	76	01

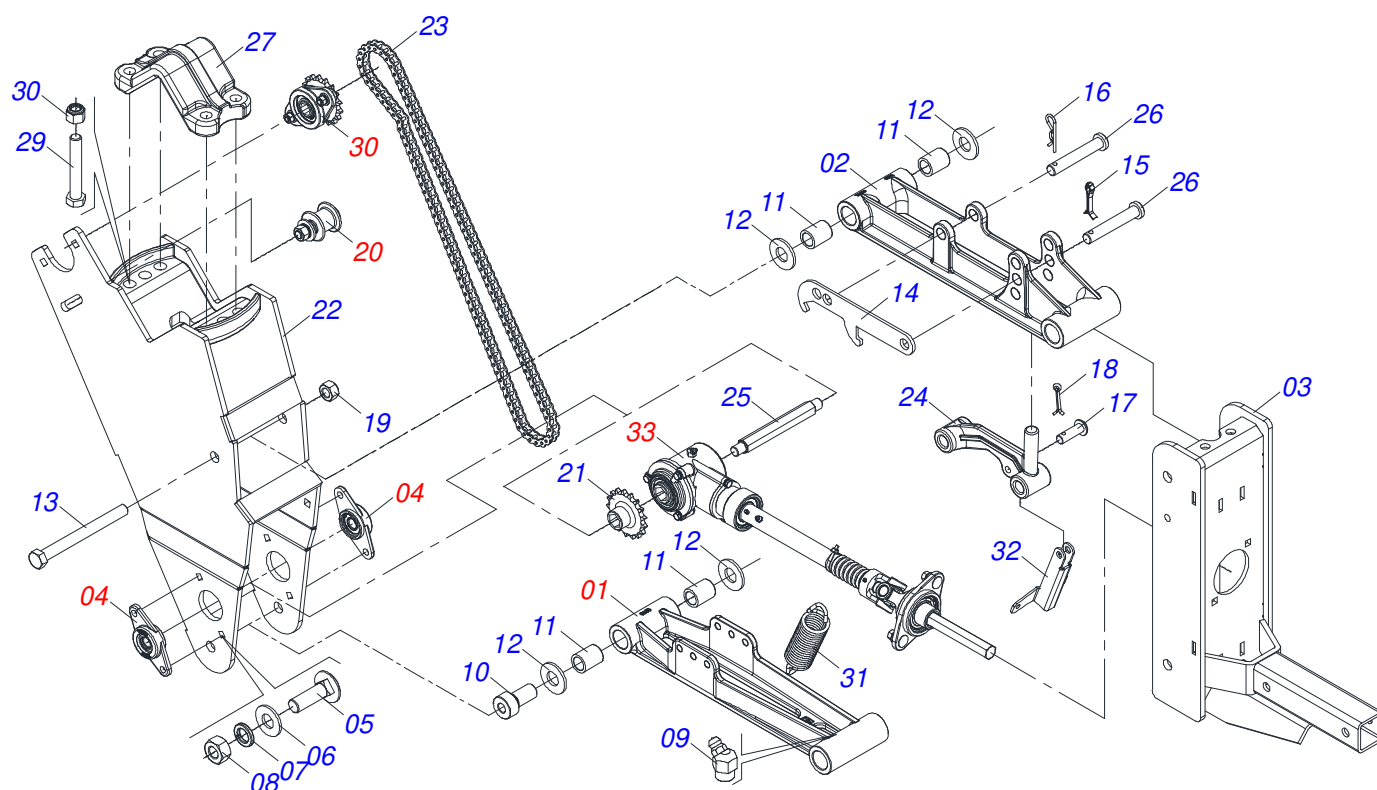


Item	Code	Description	See page	QT
01	0502012666	SEED ROW LOWER ARM		01
02	0502012350	SEED ROW UPPER ARM		01
03	0531064032	SEED ROW FRAME		01
04	0511054635	BEARING AXLE BODY	72	02
05	0503011953	5/16" X 1" BOLT		04
06	0501010694	FLAT WASHER		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04
09	0503010003	1845 GREASE FITTING		04
10	0561015858	SPACER LOWER SLEEVE		01
11	0531015151	0.6" X 1" X 2.4" SLEEVE		07
12	0531015184	FLAT WASHER		08
13	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
14	0561019032	SEED FERTIL ROW LOCK		01
15	0503010071	3/16" X 1" SPLIT PIN		01
16	0503030168	HITCH PIN CLIP		01
17	0521010773	0.37" X 1.18" COUPLING SHAFT		01
18	0503010140	1/8" X 3/4" SPLIT PIN		01
19	0503012412	5/8" UNC SELF LOCKING NUT		04
20	0511055260	SEED ROW CHAIN TENSIONER	73	01
21	0502012782	17Z GEAR WITH HEX HOLE		01
22	0521064650	LEFT SEED ROW SUPPORT FRONT		01
23	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
24	0502012568	UPPER ROCKER ARM		01
25	0561014904	TRANSMISSION AXLE FRAME ROW		01
26	0501011388	COUPLING SHAFT		02
27	0502012789	FIXER SUPPORT FERTILIZER ROW		01
28	0503017857	BOLT 5/8 UNF 4		04
29	0503010811	5/8" UNF SELF ADJUSTING NUT		04
30	0501052769	BEARING WITH 17Z GEAR	81	01
31	0503034580	TRACTION SPRING		02


Item	Code	Description	See page	QT
32	0581018487	FIXER UPPER SPRING		01
33	0531055203	TRANSMISSION WITH AXLE	76	01

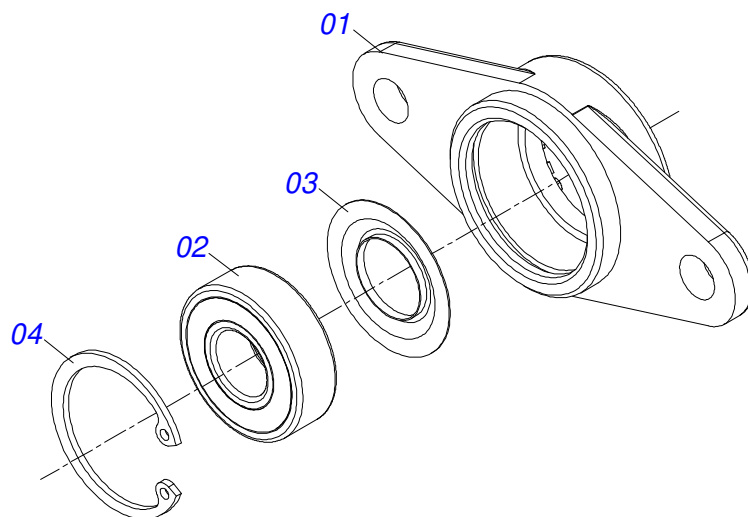

Item	Code	Description	See page	QT
01	0502012718	ROW BEARING		01
02	0503012882	BEARING		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

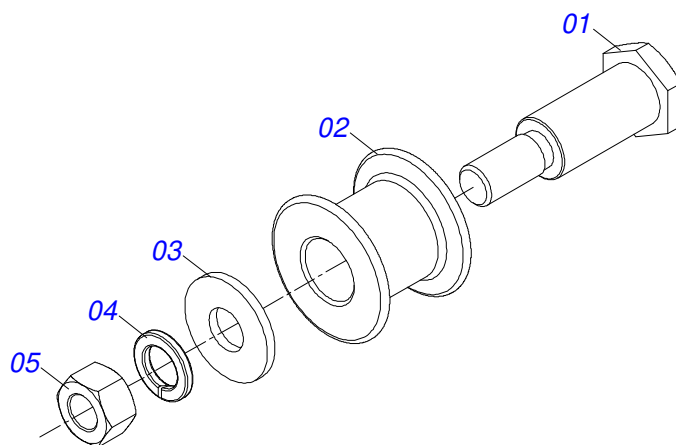


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

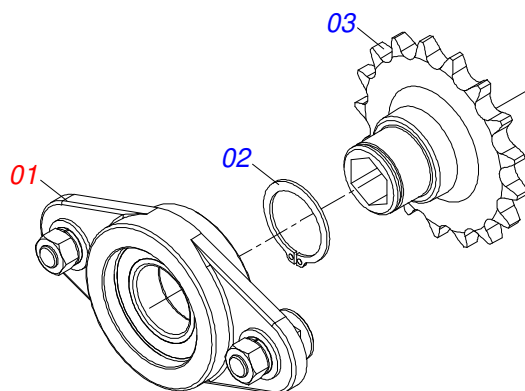


Item	Code	Description	See page	QT
01	0511050617	FRONT SEED ROW BEARING	75	01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		01
03	0502012819	17Z GEAR WITH HEX HOLE		01

FRONT SEED ROW BEARING


0511050617

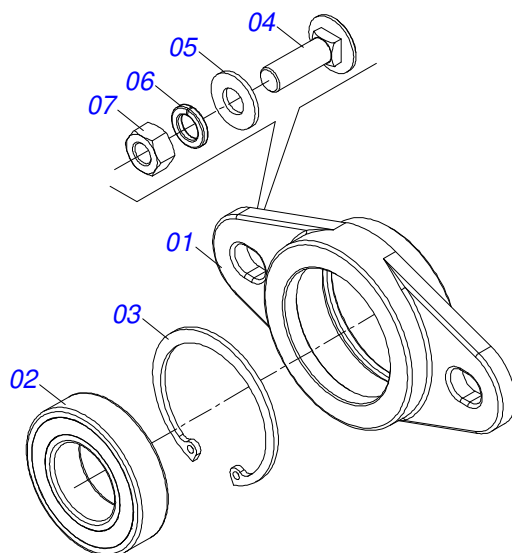


Item	Code	Description	See page	QT
01	0502011697	GEARBOX SUPPORT		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER		02
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02

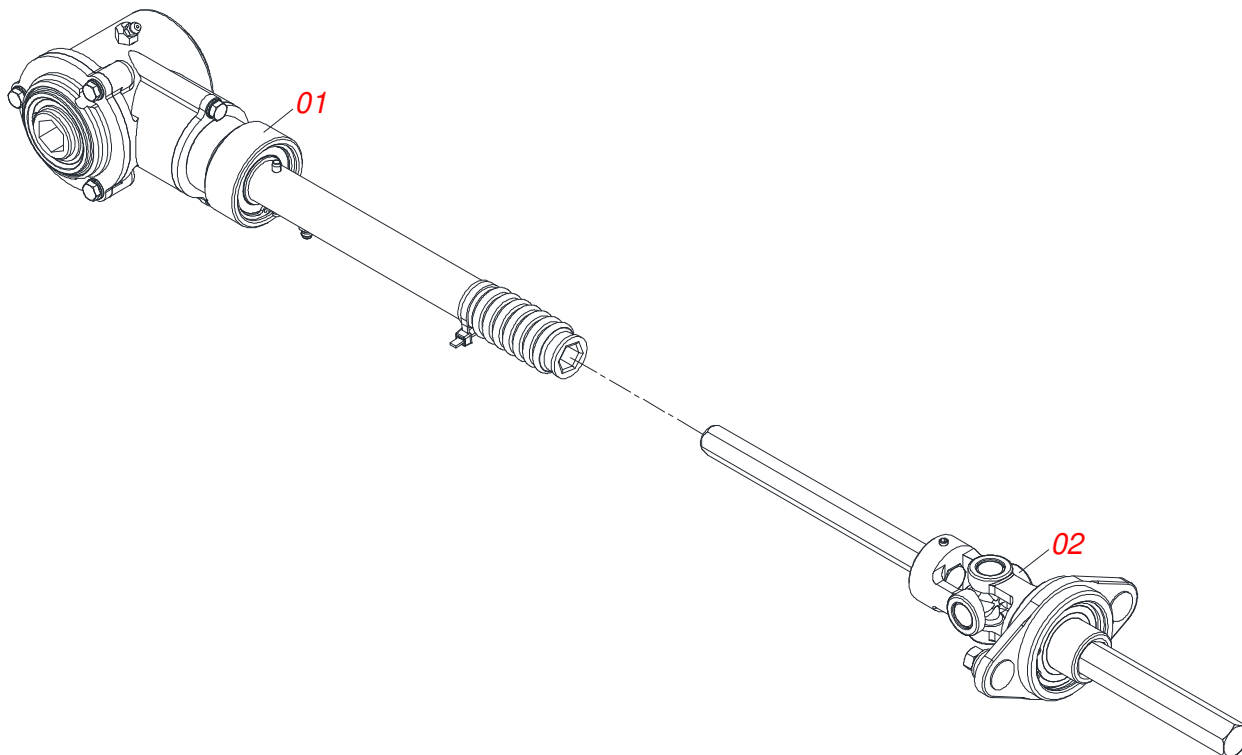

Item	Code	Description	See page	QT
01	0531055206	298 TRANSMISSION HUB	77	01
02	0531055205	BEARING WITH 168 AXLE	78	01

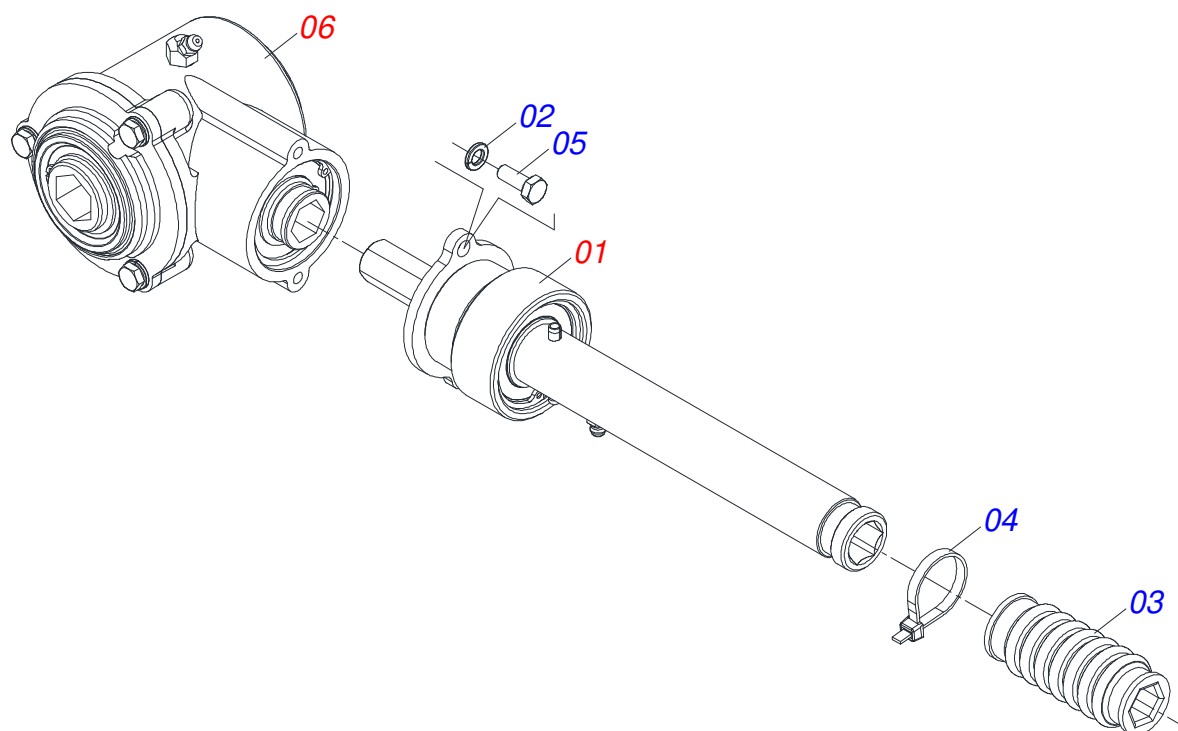


Item	Code	Description	See page	QT
01	0531055218	DRAGGER BEARING	79	01
02	0503015110	M06 SPRING WASHER		02
03	0503032984	HOOD HEX AXLE ROW		01
04	0503013100	NYLON CLAMP		01
05	0503011378	M6X1X16 C S 8.8 ZN BOLT		02
06	0521055223	SEED ROW TRANSMISSION HUB	80	01

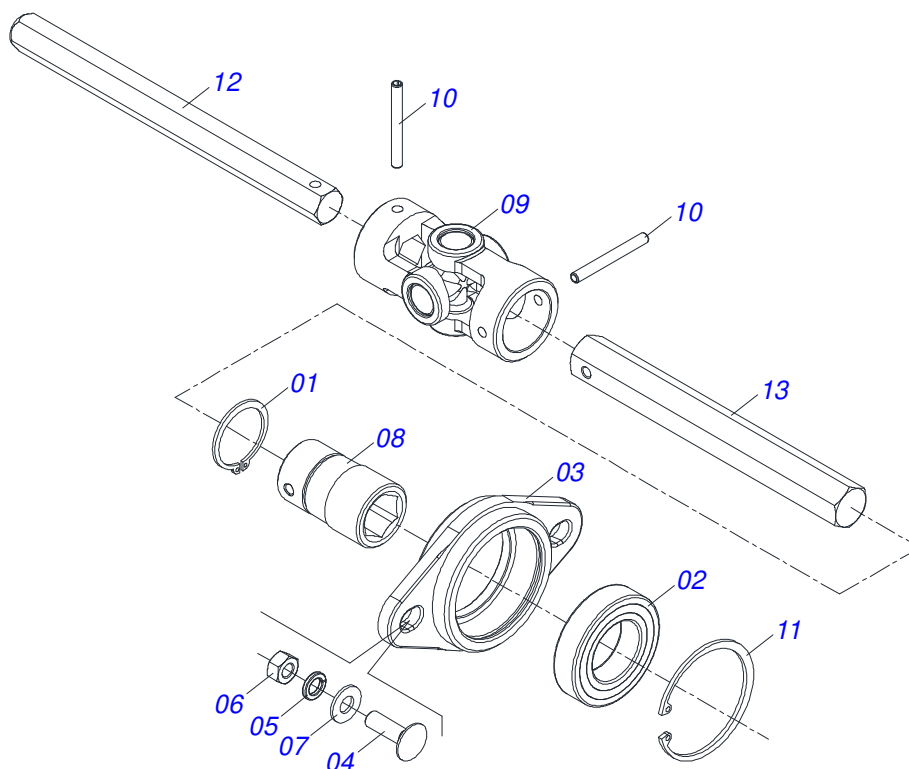


Item	Code	Description	See page	QT
01	0503010707	501030 CLAMPING RING (FOR AXLE)		01
02	0503012861	6006 2RS BALL BEARING		01
03	0502012030	HOUSING BEARING		01
04	0503011953	5/16" X 1" BOLT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02
07	0501010694	FLAT WASHER		02
08	0501214207	BEARING AXLE BODY		01
09	0501214208	HEXAGONAL UNIVERSAL JOINT		01
10	0503011855	0.2" X 1.8" SPRING PIN		02
11	0503012858	502075 CLAMPING RING (FOR HOLE)		01
12	0501214211	5/8 X 195 HEXAGONAL AXLE		01
13	0501214204	3/4 X 168 HEXAGONAL AXLE		01

DRAGGER BEARING


0531055218

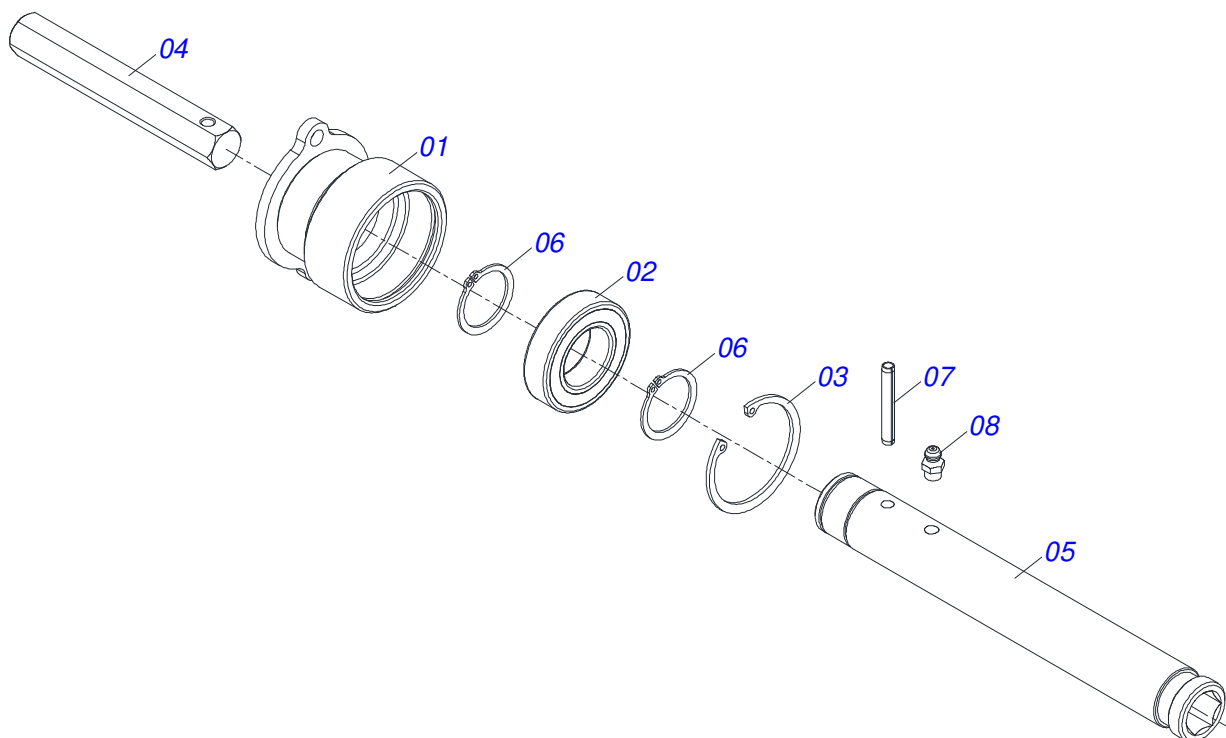


Item	Code	Description	See page	QT
01	0521063532	BEARING FOLLOWER ROW ASSY		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0501214210	110 DRAGGER AXLE		01
05	0501214209	200 DRAGGER AXLE		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		02
07	0503015356	SPRING PIN		01
08	0503010691	1/4" GREASE FITTING		01

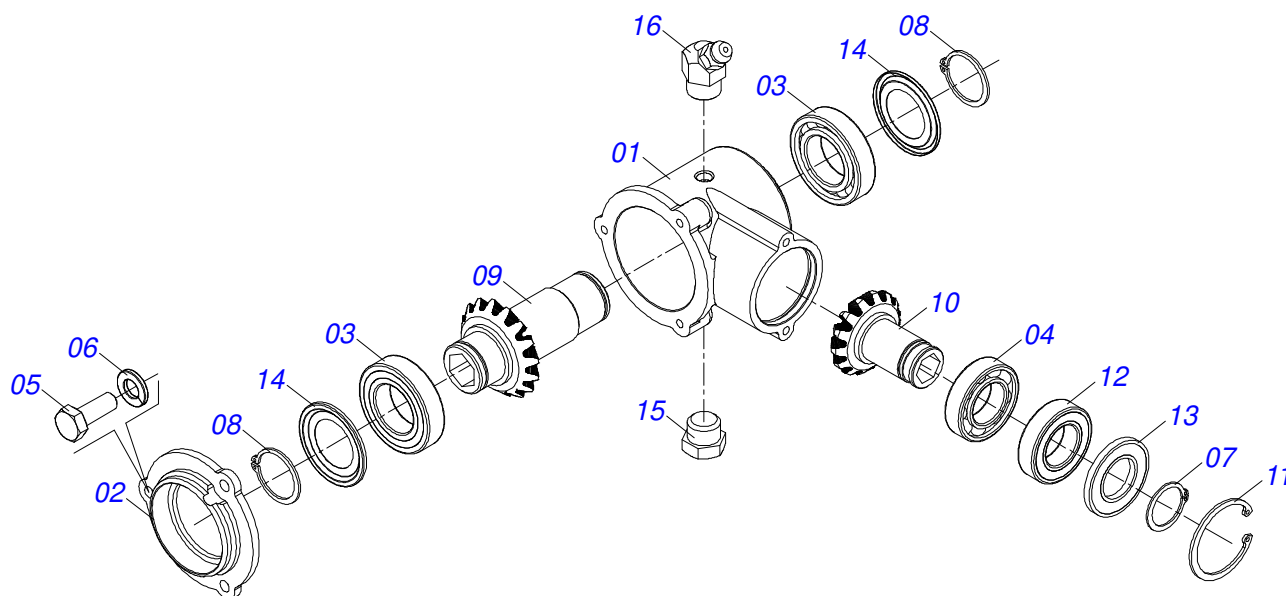


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503019361	BEARING 6006 RS1		02
04	0503019363	BEARING 6005		01
05	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
06	0503010143	1/4" SPRING WASHER		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503019362	BEARING 6005 RS1		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01

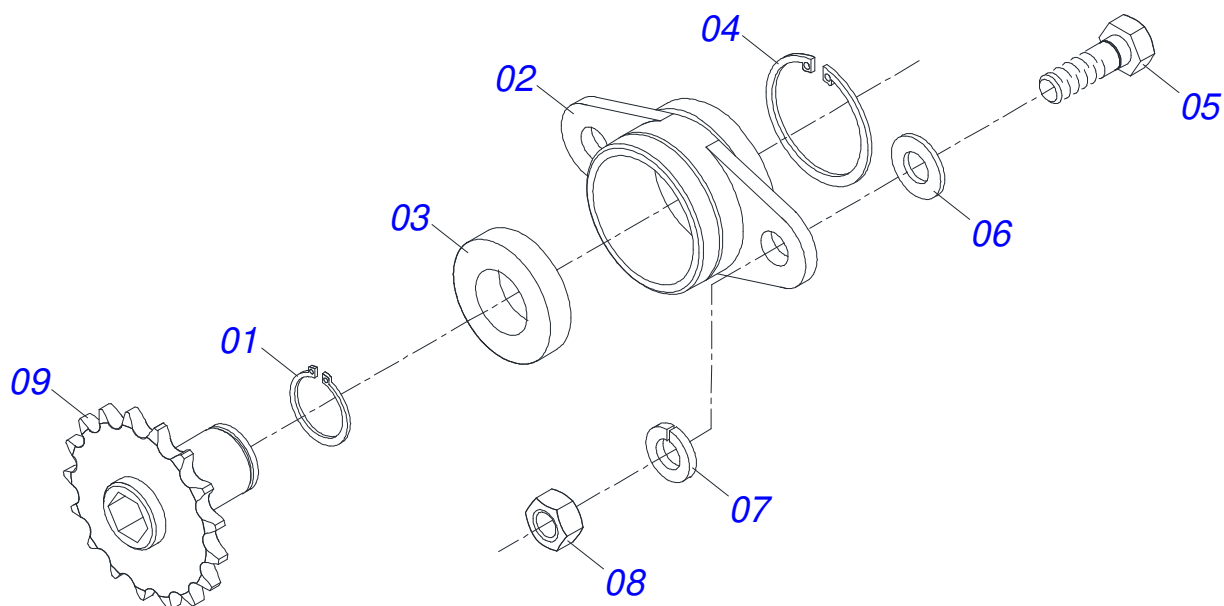

Item	Code	Description	See page	QT
01	0503010406	501025 CLAMPING RING (FOR AXLE)		01
02	0502011697	GEARBOX SUPPORT		01
03	0503011410	ROLLER BEARING		01
04	0503011105	SEAL RING		01
05	0503011953	5/16" X 1" BOLT		02
06	0501010694	FLAT WASHER		02
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
08	0503010337	5/16" NUT		02
09	0502012819	17Z GEAR WITH HEX HOLE		01

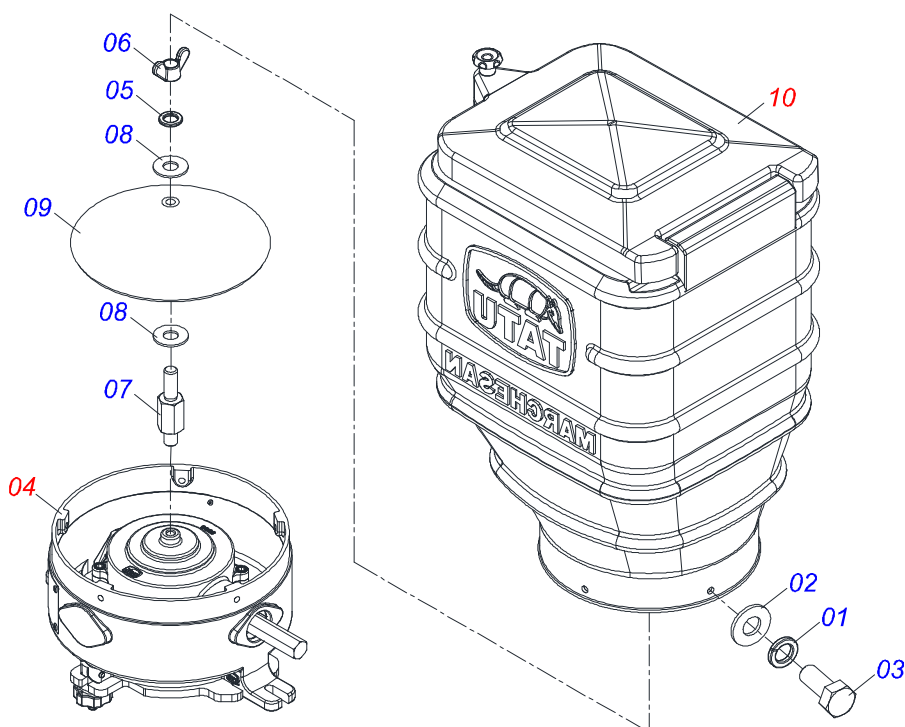


Item	Code	Description	See page	QT
01	0503012534	LOCK WASHER		05
02	0503012545	FLAT WASHER		05
03	0503014442	BOLT		05
04	0531059302	SEED SILO SUPPORT FRONT TRANSMISSION 83 FAST FIXING SIGMA		01
05	0503010025	3/8 SPRING WASHER		01
06	0503010209	3/8" UNC BUTTERFLY NUT		01
07	0501213674	DEFLECTOR FIXING AXLE		01
08	0501013518	FLAT WASHER		02
09	0503034131	DEFLECTOR		01
10	0503063752	SIGMA INDIVIDUAL SEED HOPPER	85	01

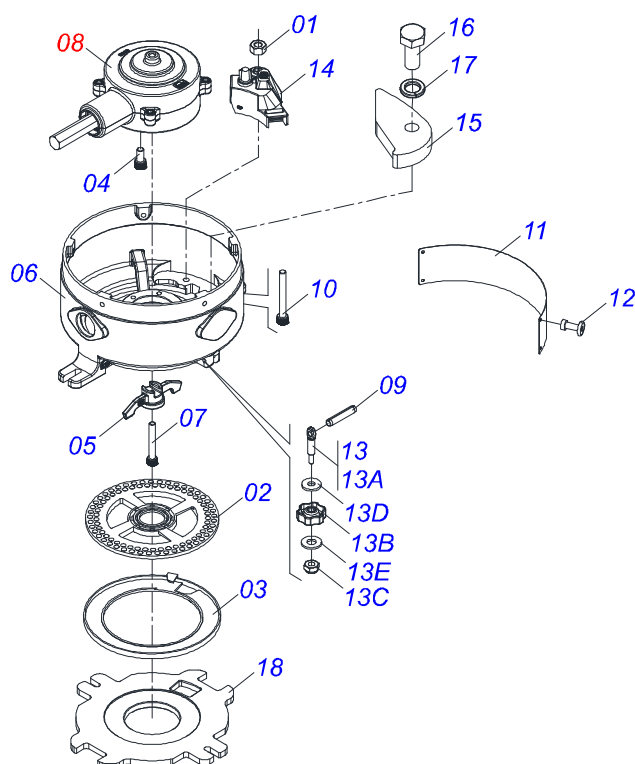


Item	Code	Description	See page	QT
01	0503010337	5/16" NUT		01
02	0513010140	SOCIDISCO SOY DISC 90 HOLES		01
03	0513010161	SOCIDISCO RING FOR SOY 0,8MM AZCSOJAR08-002461		01
04	0503017373	BOLT		06
05	0502013040	DISC DRAWER		01
06	0501310478	SIGMA FRONT TRANSMISSION SEED SILO SUPPORT QUICK FIXING		01
07	0513010671	5/6 UNC X 2 CCSI 12.9 BOLT		01
08	0531054795	FRONT TRANSMISSION ASSEMBLY	84	01
09	0503010585	0,24" X 1.18" SPRING PIN		02
10	0513010672	M6 X 1 X 25 CCSI 12.9 BOLT		01
11	0503035789	SIGMA ALUMINUM ADHESIVE LABEL		01
12	0503013356	RIVET POP 3,2 X 10,0		04
13	0531055215	FIXING SET		02
13A	0501214203	THREADED BODY		02
13B	0503035749	LOCKING KNOB		02
13C	0503015536	M6 X 1" SELF ADJUSTING NUT		02
13D	0511017303	FLAT WASHER		02
13E	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
14	0503063778	SOY SEED DISTRIBUTOR CAP		01
15	0501310293	BODY SUPPORT SIGMA V2 DRIVEBOX		01
16	0503013849	1/4" UNC X 3/4" BOLT		01
17	0503010143	1/4" SPRING WASHER		01
18	0502013080	LOWER TRACK DISC WITH QUICK CLOSING LEVER SUPPORT SIG V3		01

FRONT TRANSMISSION ASSEMBLY


0531054795

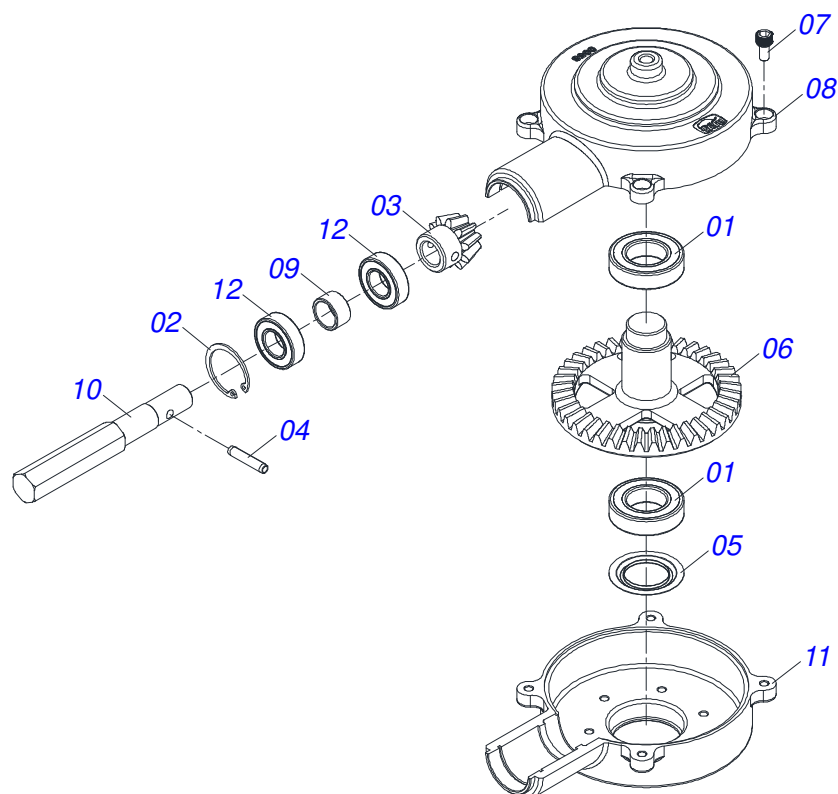


Item	Code	Description	See page	QT
01	0503019356	BEARING 6005 2RS1		02
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012930	CONICAL GEAR		01
04	0503010585	0,24" X 1.18" SPRING PIN		01
05	0503017022	RING		01
06	0501213588	40Z CONICAL CROWN LOWER TRANSMISSION		01
07	0503017373	BOLT		04
08	0502050058	UPPER TRANSMISSION BODY		01
09	0501213625	12 SPACER SLEEVE		01
10	0501213624	142 PINION AXLE		01
11	0501213586	LOWER BODY FRONT TRANSMISSION		01
12	0513010773	BEARING 6003 2RS1 NAC		02

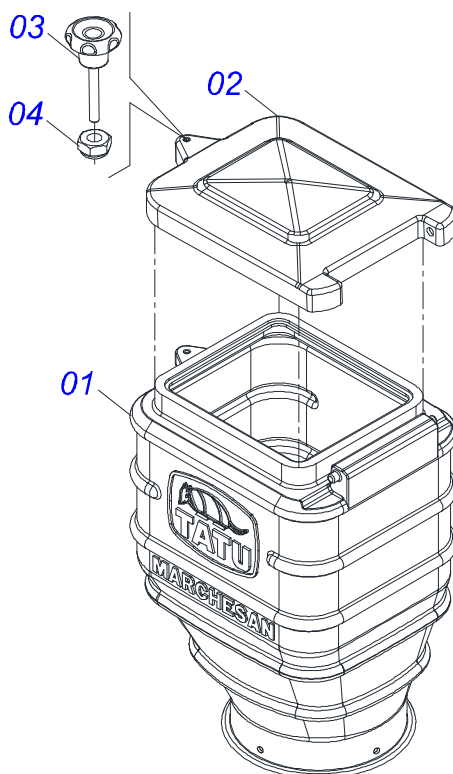


Item	Code	Description	See page	QT
01	0503035808			01
02	0503035629	SIGMA SEED BOX LID		01
03	0503035298	BAKELITE HANDLE WITH THREAD		01
04	0503015536	M6 X 1" SELF ADJUSTING NUT		01

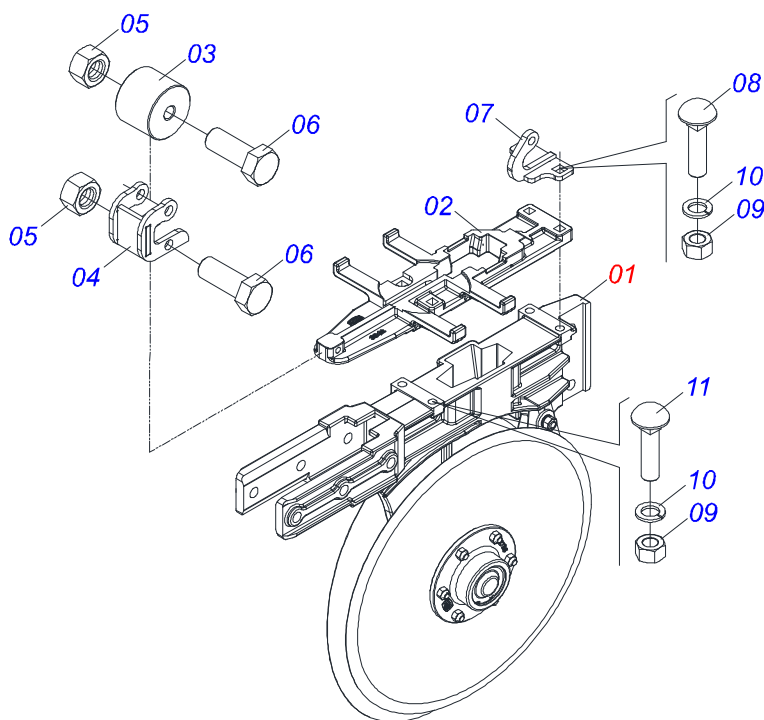


Item	Code	Description	See page	QT
01	0531058675	DDD SEED 15 X 15 RIGHT	88	01
02	0501310465	FIXING BASE SET WITH PIVOTATION		01
03	0501310470	SUPPORT PULLEY SYSTEM		01
04	0531065921	PULLEY FIXER		01
05	0503012880	1/4" UNC SELF ADJUSTING NUT		02
06	0503010733	1/4" X 1-3/4" BOLT		02
07	0531066017	QUICK LOCK FIXER		01
08	0503017813	3/8" X 2" BOLT		02
09	0503010026	3/8" NUT		04
10	0503010025	3/8 SPRING WASHER		04
11	0503015920	3/8" UNC X 1.3/4" BOLT		02

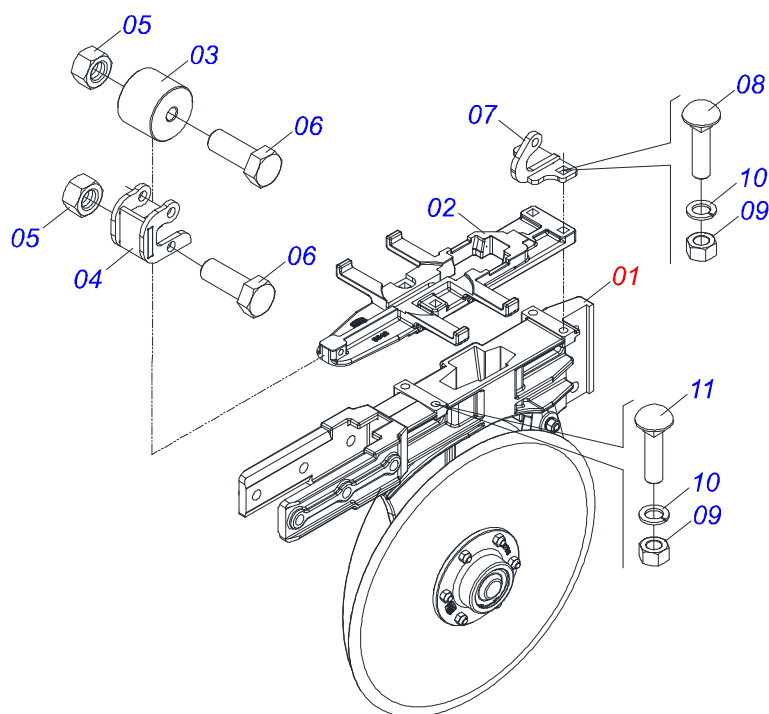


Item	Code	Description	See page	QT
01	0531058676	DDD SEED 15 X 15 LEFT	92	01
02	0501310465	FIXING BASE SET WITH PIVOTATION		01
03	0501310470	SUPPORT PULLEY SYSTEM		01
04	0531065921	PULLEY FIXER		01
05	0503012880	1/4" UNC SELF ADJUSTING NUT		02
06	0503010733	1/4" X 1-3/4" BOLT		02
07	0531066017	QUICK LOCK FIXER		01
08	0503017813	3/8" X 2" BOLT		02
09	0503010026	3/8" NUT		04
10	0503010025	3/8 SPRING WASHER		04
11	0503015920	3/8" UNC X 1.3/4" BOLT		02

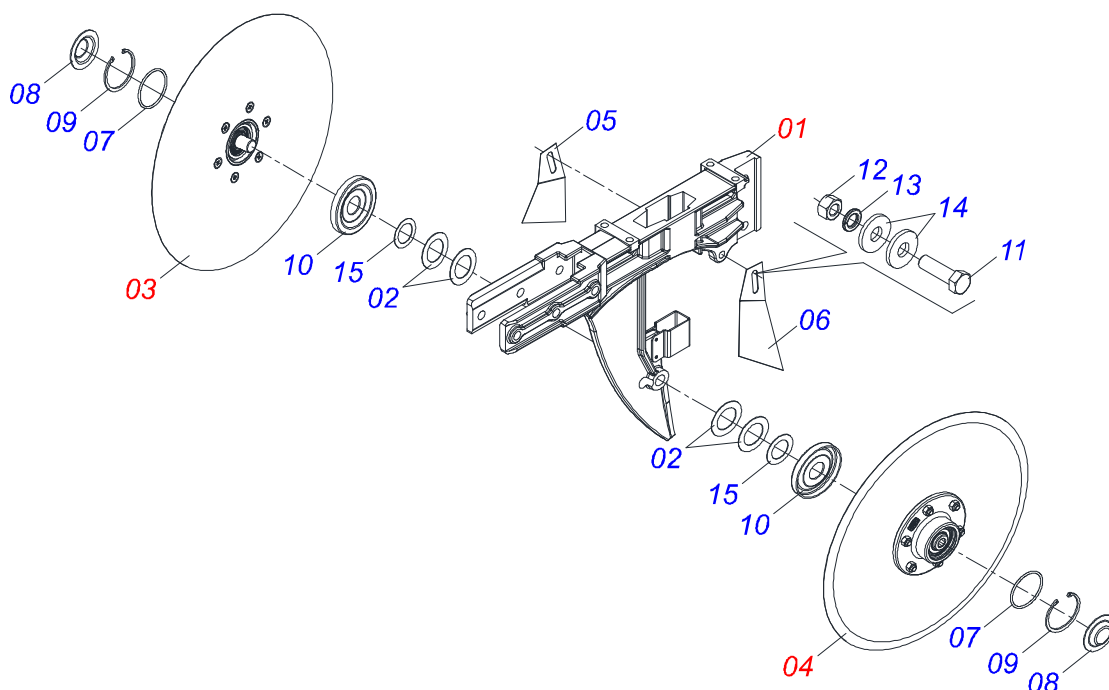


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT	89	01
02	0511015098	FLAT WASHER		04
03	0511053173	RIGHT LOW HUB WITH 15 DISC	90	01
04	0511053172	LEFT LOW HUB WITH 15 DISC	91	01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503014679	2-134 O'RING		02
08	0571011152	DOUBLE DISC CAP		02
09	0503015081	502052 CLAMPING RING (FOR AXLE)		02
10	0511011927	DUST CLOAK		02
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0503010026	3/8" NUT		01
13	0503010025	3/8 SPRING WASHER		01
14	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
15	0591014250	19 X 26 X 0,50 FLAT WASHER		02

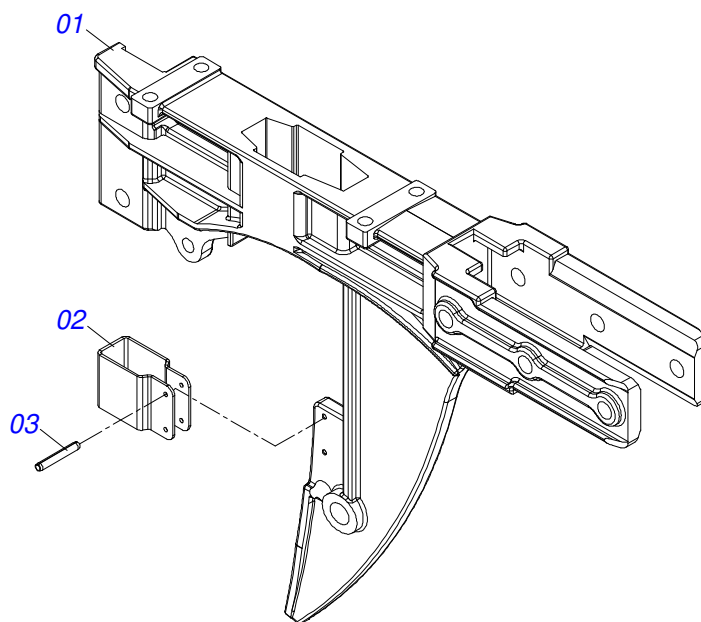


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

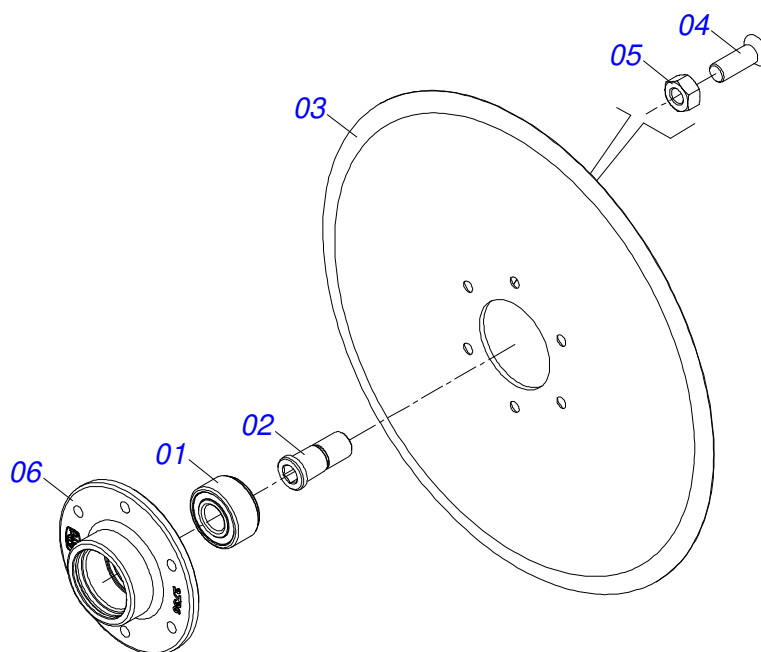


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011150	RIGHT DOUBLE DISC AXLE		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

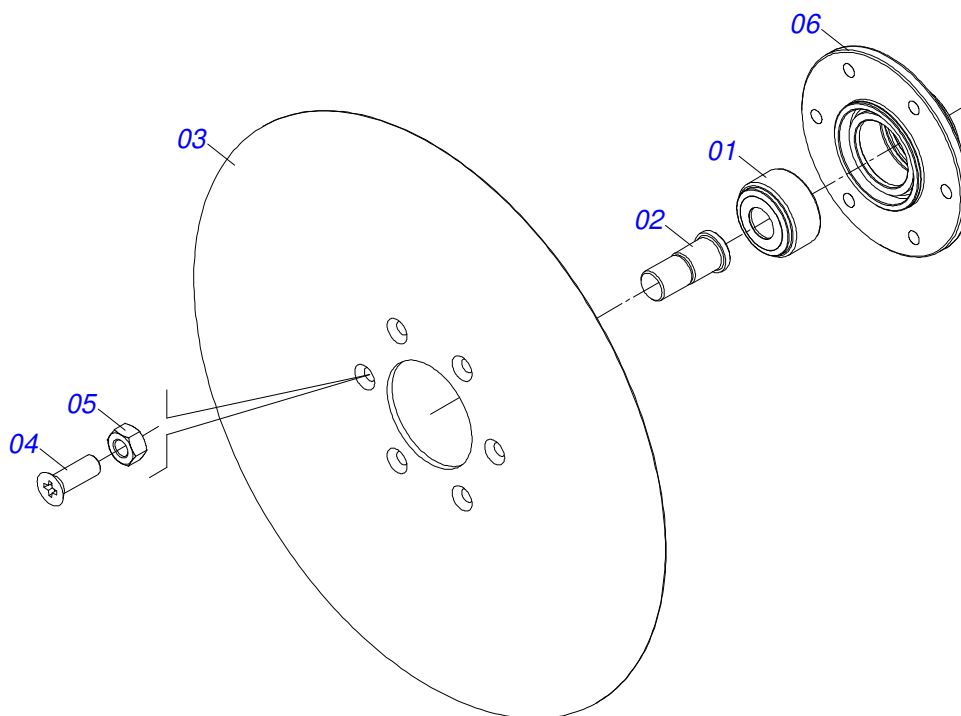


Item	Code	Description	See page	QT
01	0503063161	BEARING 5204 WITH SEALING RING		01
02	0571011151	LEFT DOUBLE DISC HUB		01
03	0603022042	13" X 0.12" PLAIN COULTER BLADE		01
04	0503010546	5/16" X 7/8" BOLT		06
05	0503010337	5/16" NUT		06
06	0502012736	HUB LOWER		01

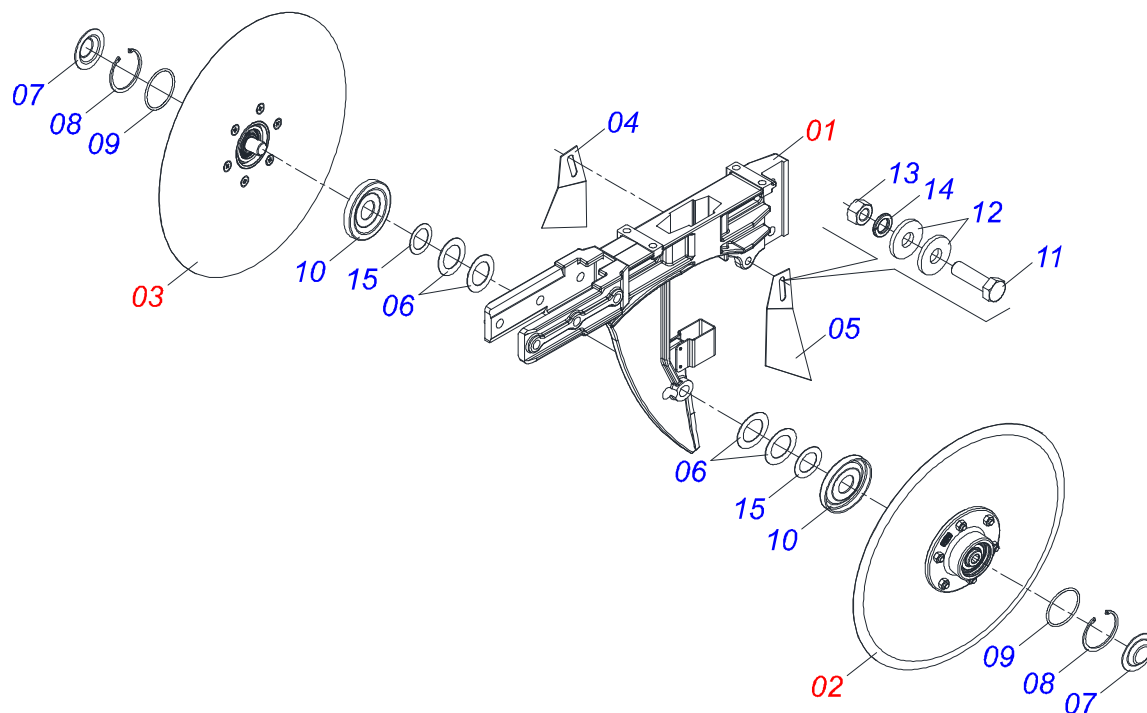


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE	93	01
02	0511053172	LEFT LOW HUB WITH 15 DISC	91	01
03	0511053173	RIGHT LOW HUB WITH 15 DISC	90	01
04	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
05	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0511015098	FLAT WASHER		04
07	0571011152	DOUBLE DISC CAP		02
08	0503015081	502052 CLAMPING RING (FOR AXLE)		02
09	0503014679	2-134 O'RING		02
10	0511011927	DUST CLOAK		02
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503010025	3/8 SPRING WASHER		01
15	0591014250	19 X 26 X 0,50 FLAT WASHER		02

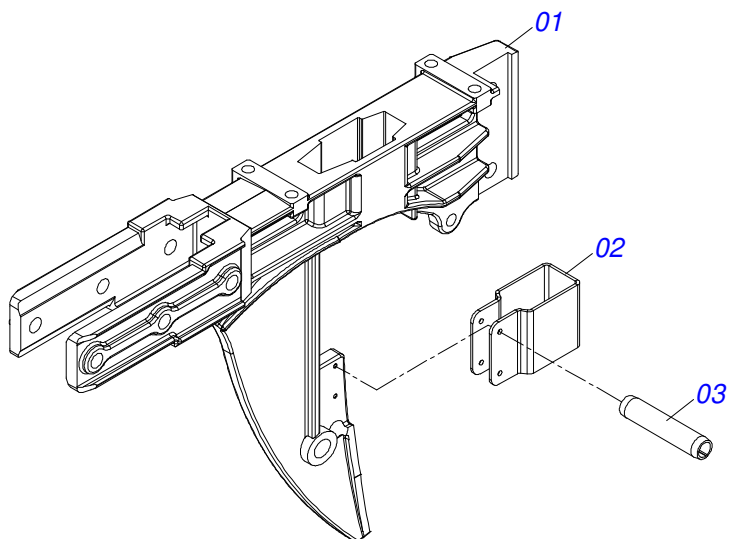


Item	Code	Description	See page	QT
01	0561015592	LEFT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

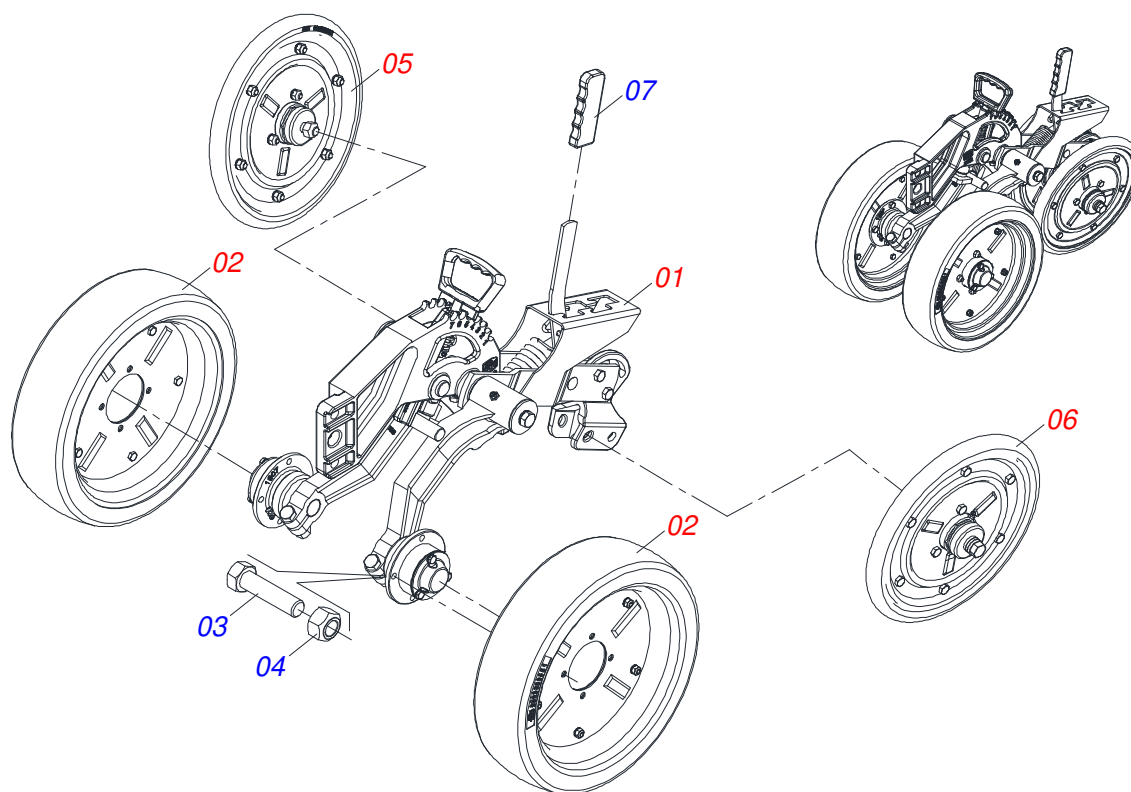

Item	Code	Description	See page	QT
01	0511058650	SEMI-MOUNTED DEPTH CONTROL	95	01
02	0501052538	DEPTH BAND WITH ARMS	100	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0511054333	COMPACT WHEEL RIGHT WITH BEARING	101	01
06	0511054334	COMPACT WHEEL LEFT WITH BEARING	103	01
07	0503033942	COMPACTOR WHEEL REGULATOR LID		01

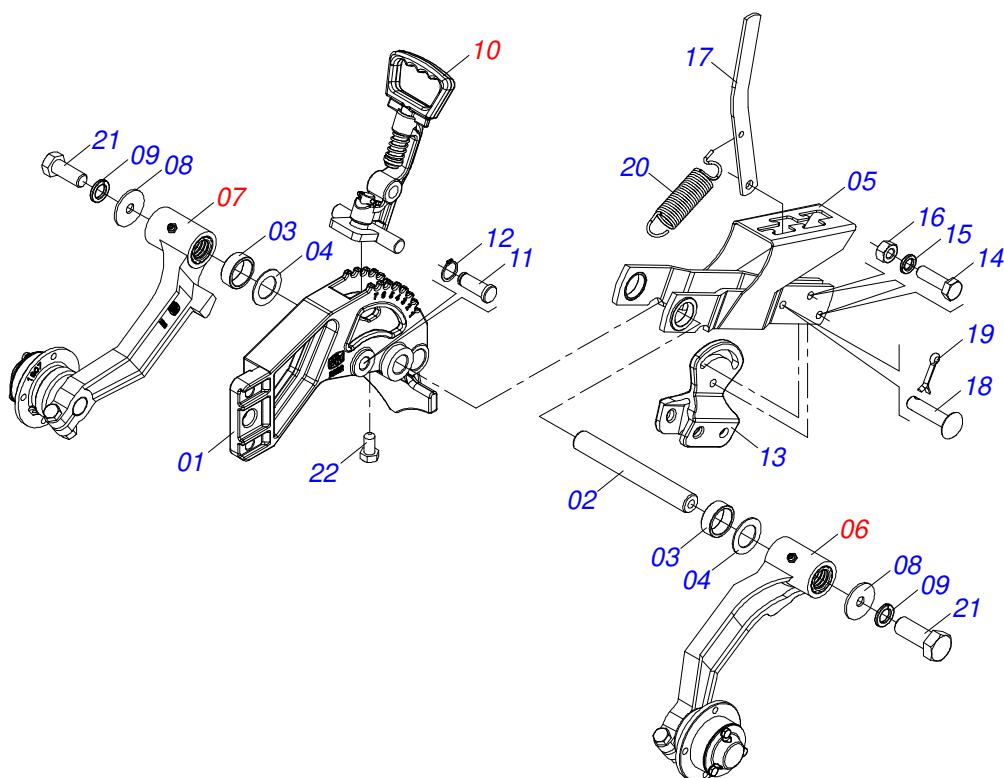


Item	Code	Description	See page	QT
01	0502012282	DEPTH CONTROL SUPPORT		01
02	0581011100	DEPTH WHEEL AXLE		01
03	0521010480	1" X 1.2" X 0.4" ARTICULAT SLEEVE		02
04	0511015346	FLAT WASHER		02
05	0521064073	REGULACION WHEEL COMPACTOR		01
06	0511058652	LEFT DEPTH WHEEL ARM WITH HUB	96	01
07	0511058651	RIGHT DEPTH WHEEL ARM WITH HUB	98	01
08	0571017749	FLAT WASHER		02
09	0503011440	SPRING WASHER		02
10	0501052297	DEPTH WHEELS REGULATOR ASSY	99	01
11	0521019093	0.6" X 2.7" PIVOT SHAFT		01
12	0503010581	RING		01
13	1902012116	PRESS WHEEL ADJUSTER		01
14	0503010849	3/8" X 1-1/2" BOLT		02
15	0503011443	3/8" SPRING WASHER		02
16	0503010026	3/8" NUT		02
17	0541016906	PRESS WHEELS REGULATOR BODY		01
18	0521010539	0.3" X 1.2" COUPLING SHAFT		01
19	0503010140	1/8" X 3/4" SPLIT PIN		01
20	0503030805	1.6" X 6" X 0.2 TRACTION SPRING		01
21	0503010311	1/2" X 1-1/4" BOLT		02
22	0503034377	3/8 UNC X 3/4 BOLT		01

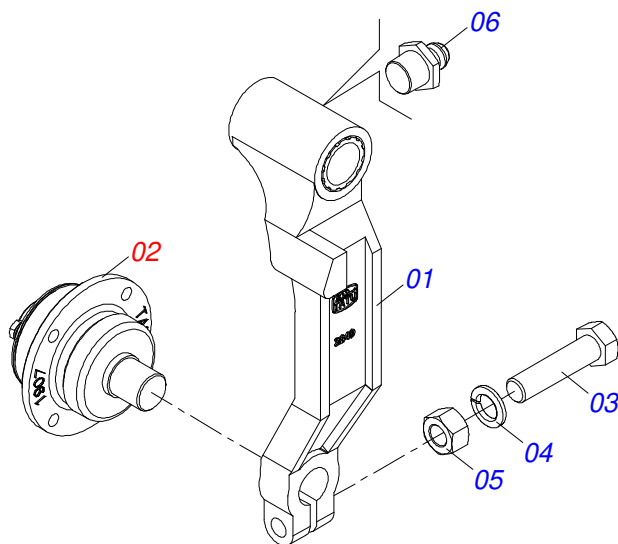


Item	Code	Description	See page	QT
01	0501110834	LH ARM		01
02	0501052627	ASSY DEPTH WHEEL HUB	97	01
03	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
04	0503011440	SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0503010002	1800 GREASE FITTING		01

ASSY DEPTH WHEEL HUB

0501052627

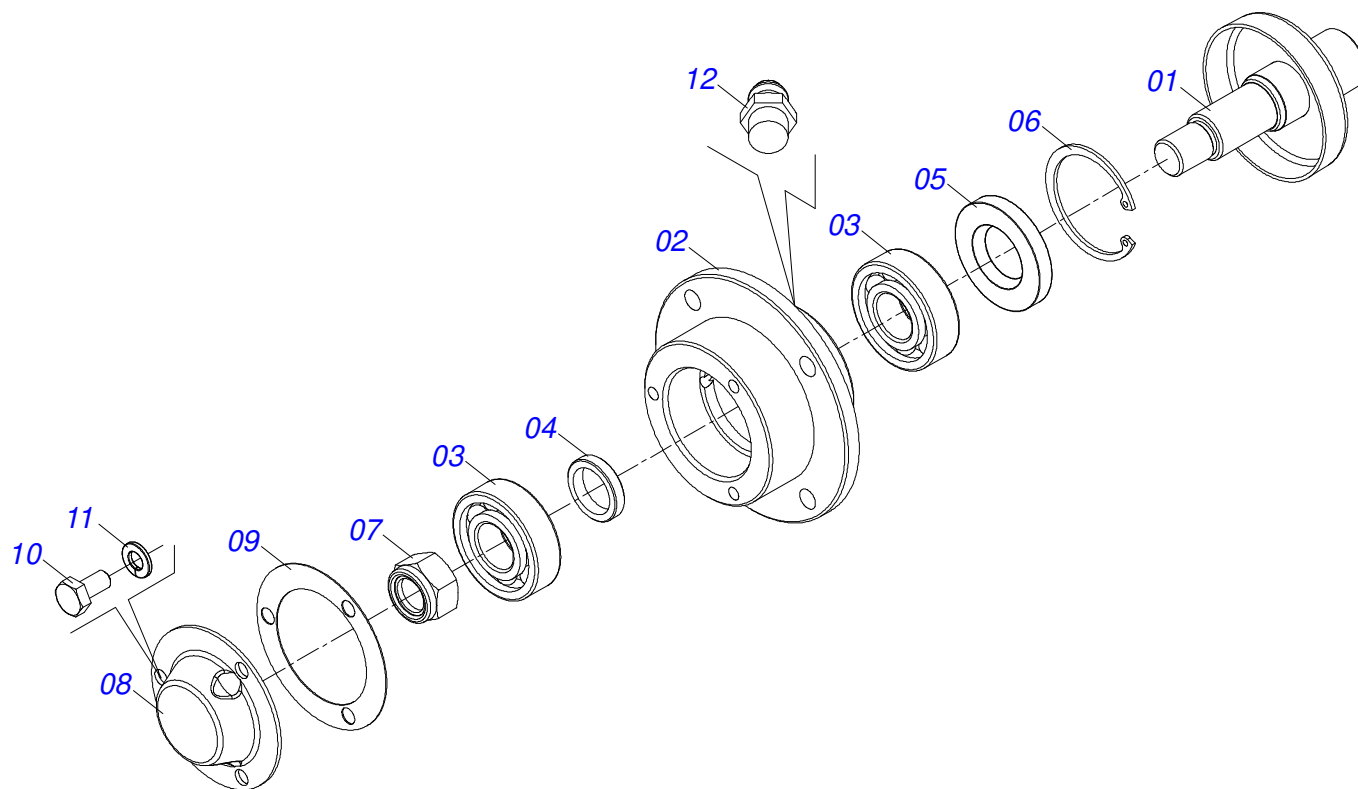


Item	Code	Description	See page	QT
01	0511060927	DEPTH CONTROL AXLE WITH DUST CLOAK		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0501013636	SPACING SLEEVE		01
05	0503010689	SEAL 00763-BR		01
06	0503011105	SEAL RING		01
07	0503010878	5/8" SELF ALIGNING NUT		01
08	0521019178	PROTECTION LID		01
09	0503030757	2.9" X 2" X 0.02" JOINT		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0503011441	SPRING WASHER		03
12	0503010691	1/4" GREASE FITTING		01

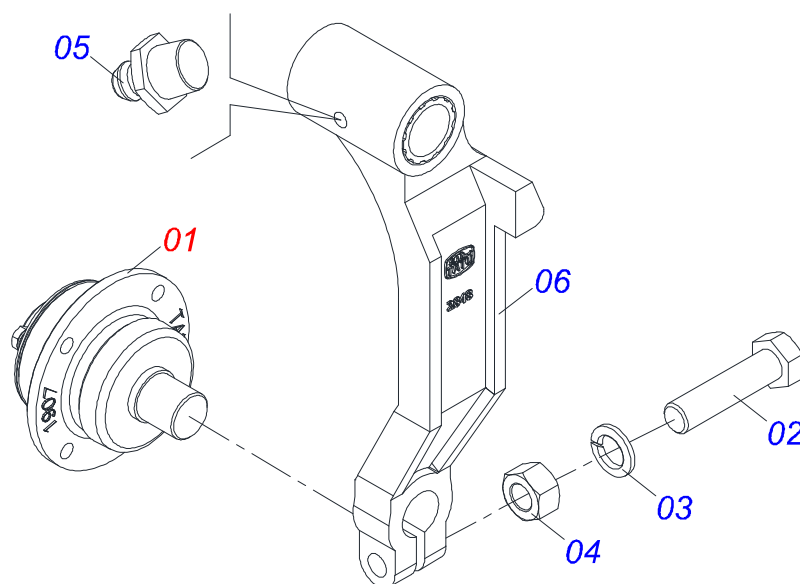


Item	Code	Description	See page	QT
01	0501052627	ASSY DEPTH WHEEL HUB	97	01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503011440	SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0503010002	1800 GREASE FITTING		01
06	0501110833	DEPTH CONTROL RIGHT ARM		01

DEPTH WHEELS REGULATOR ASSY


0501052297

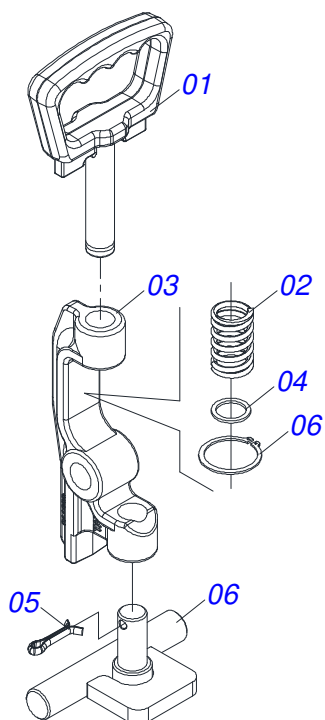


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	DEPTH CONTROL LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" SPLIT PIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

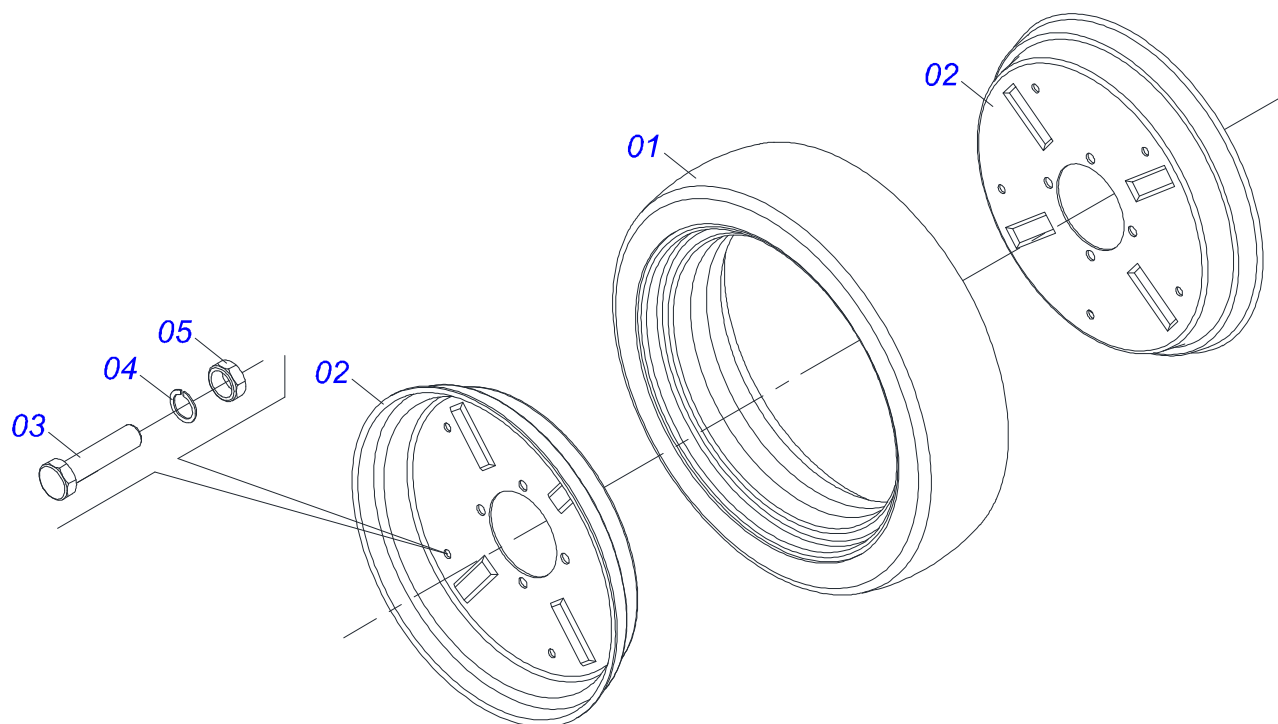


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

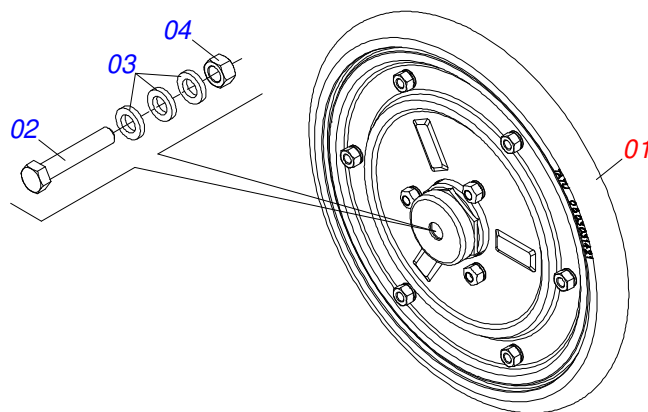


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	102	01
02	0503016449	1/2 X 4 BOLT		01
03	0521014508	FLAT WASHER		03
04	0503012136	NUT 1/2 NF		01

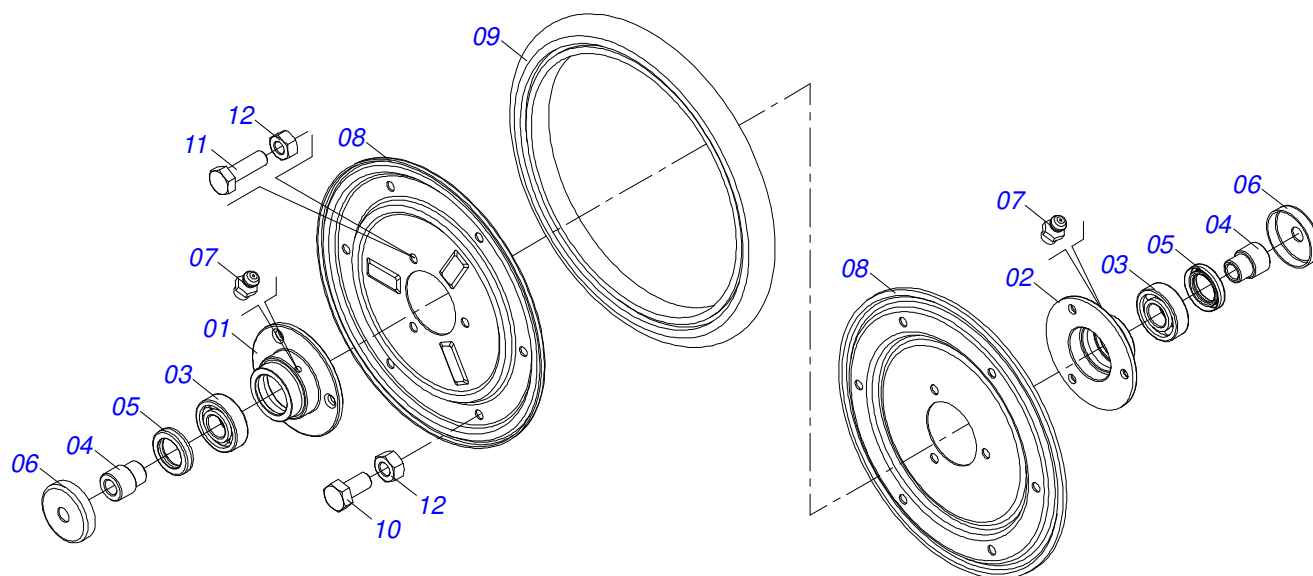


Item	Code	Description	See page	QT
01	0502011919	PRESS WHEEL HUB		01
02	0502011877	PRESS WHEEL HUB		01
03	0503010269	6204 BALL BEARING		02
04	0521018922	PRESS WHEEL PASSANG AXLE		02
05	0503012734	SEAL 01556 BR		02
06	0521018921	DUST CLOAK		02
07	0503010691	1/4" GREASE FITTING		01
08	0521018928	PRESS WHEEL RIM		02
09	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
10	0503010011	5/16" X 1/2" BOLT		06
11	0503010358	5/16" X 5/8" BOLT		03
12	0503013816	5/16" LOCKNUT		03

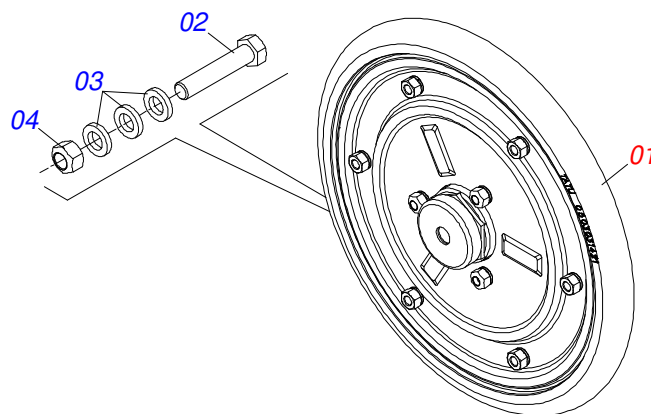


Item	Code	Description	See page	QT
01	0501052908	COMPACTOR WHEEL WITH BEARING	102	01
02	0503016863	BOLT 1/2 UNF X 4 CS R/ LEFT		01
03	0521014508	FLAT WASHER		03
04	0503016864	LH 1/2" LOCK NUT		01

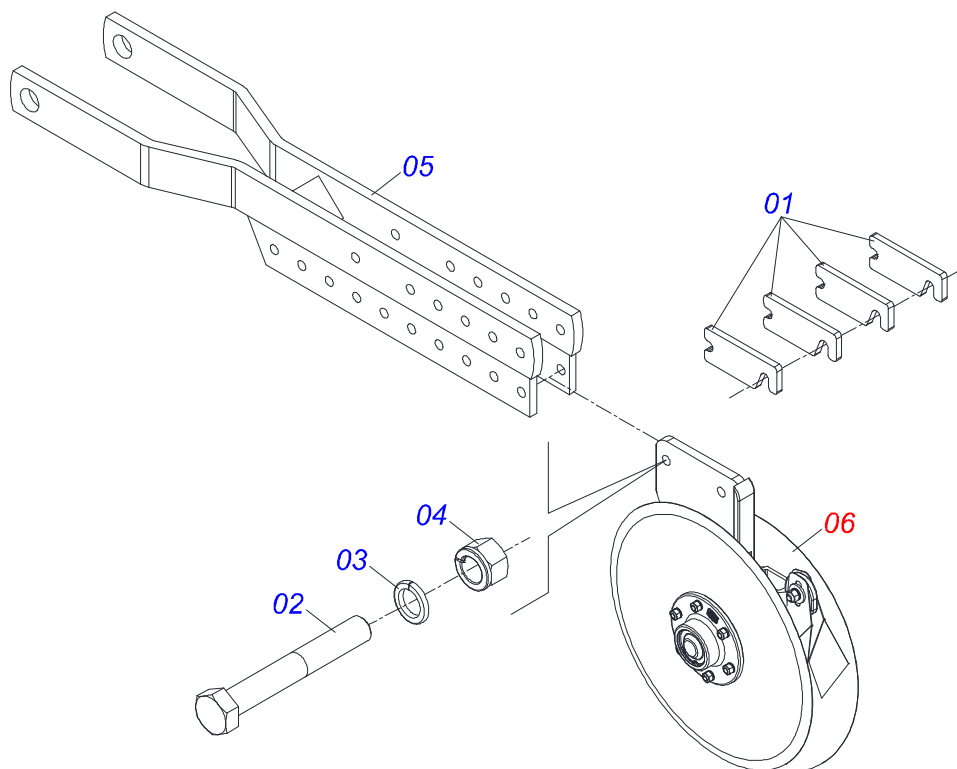


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0521061121	SHORT FERTILIZER ROW ARM		01
06	0511053209	DDD FERTILIZER 15 X 15 LEFT MINOR	106	01

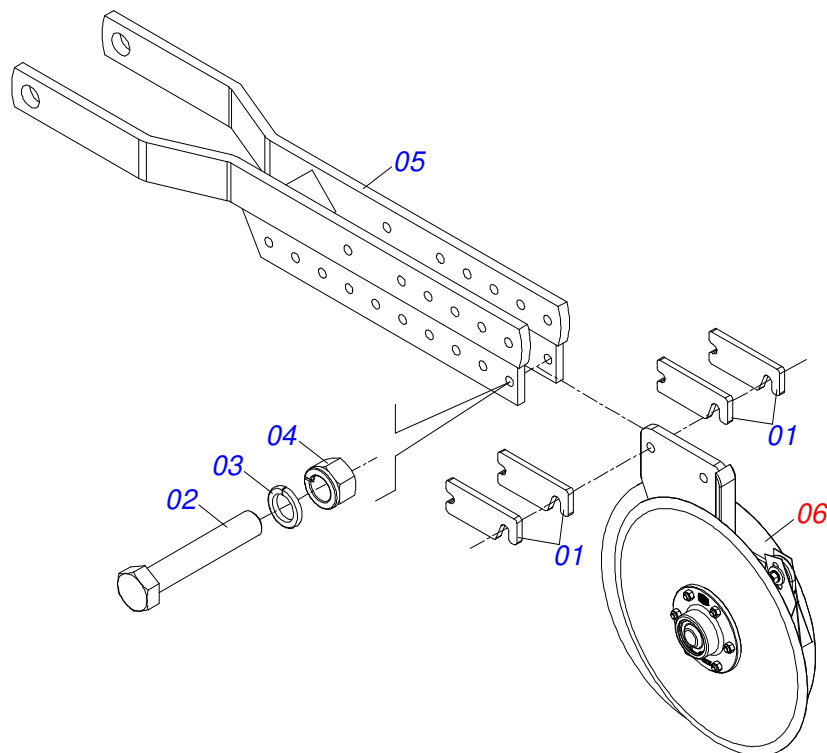


Item	Code	Description	See page	QT
01	0511018662	SPACING PLATE		04
02	0503010547	1/2" X 4" BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0521061153	FERTILIZER ROW LONG ARM		01
06	0511053208	DDD FERTILIZER 15 X 15 RIGHT MINOR	107	01

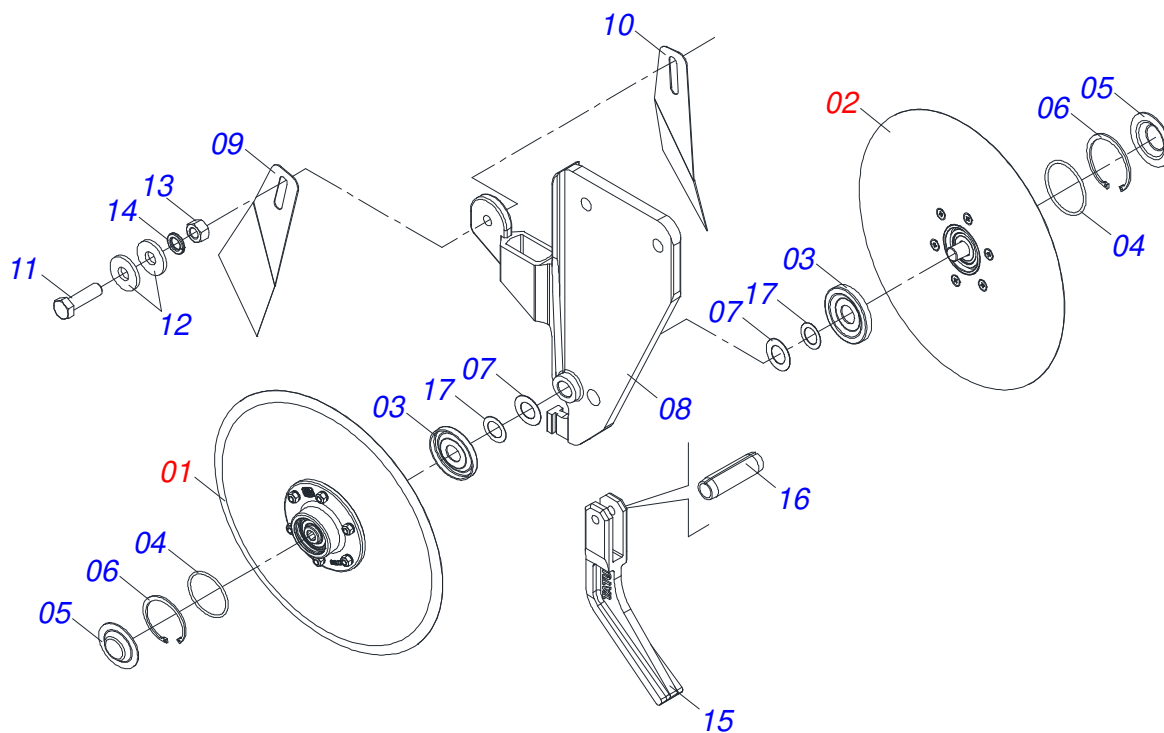


Item	Code	Description	See page	QT
01	0511053172	LEFT LOW HUB WITH 15 DISC	91	01
02	0511053173	RIGHT LOW HUB WITH 15 DISC	90	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
13	0503010026	3/8" NUT		01
14	0503010025	3/8 SPRING WASHER		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

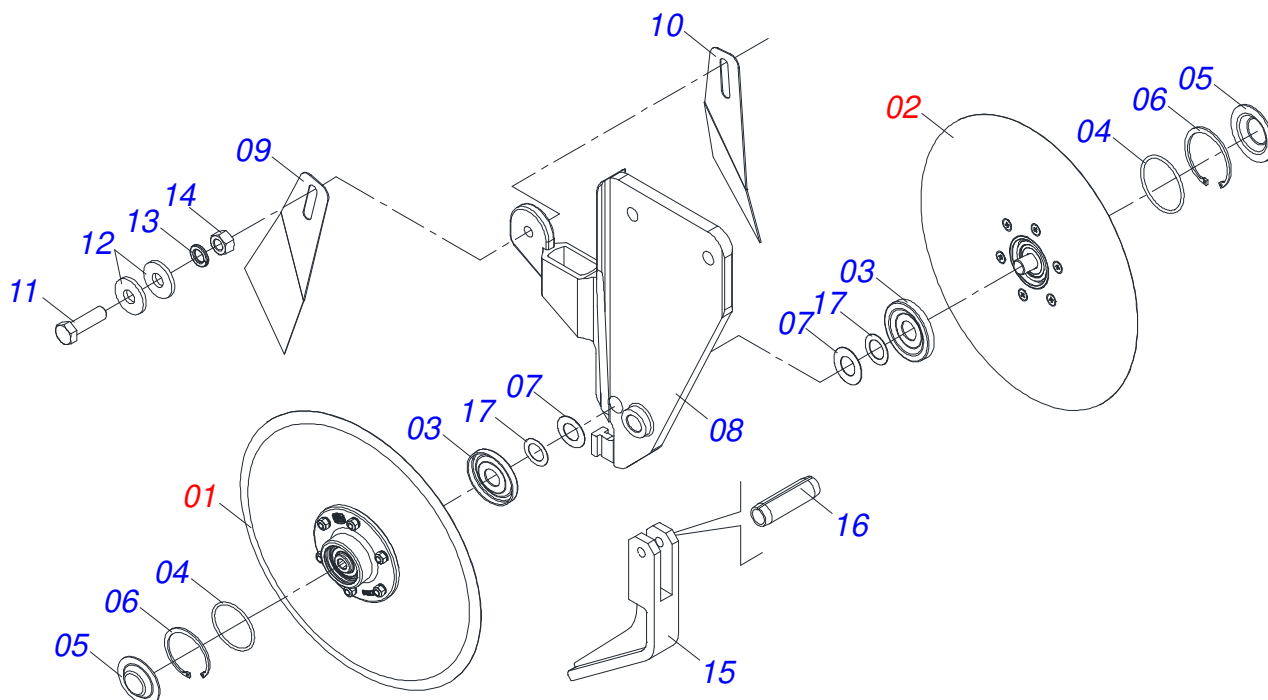


Item	Code	Description	See page	QT
01	0511053173	RIGHT LOW HUB WITH 15 DISC	90	01
02	0511053172	LEFT LOW HUB WITH 15 DISC	91	01
03	0511011927	DUST CLOAK		02
04	0503014679	2-134 O'RING		02
05	0571011152	DOUBLE DISC CAP		02
06	0503015081	502052 CLAMPING RING (FOR AXLE)		02
07	0511815098	FLAT WASHER		02
08	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
09	0501017542	LH DOUBLE DISC SCRAPER		01
10	0501017541	RIGHT DOUBLE DISC SCRAPER		01
11	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
12	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
13	0503010025	3/8 SPRING WASHER		01
14	0503010026	3/8" NUT		01
15	0502070062	SCRAPER		01
16	0503011402	0.2" X 0.8" SPRING PIN		01
17	0591014250	19 X 26 X 0,50 FLAT WASHER		02

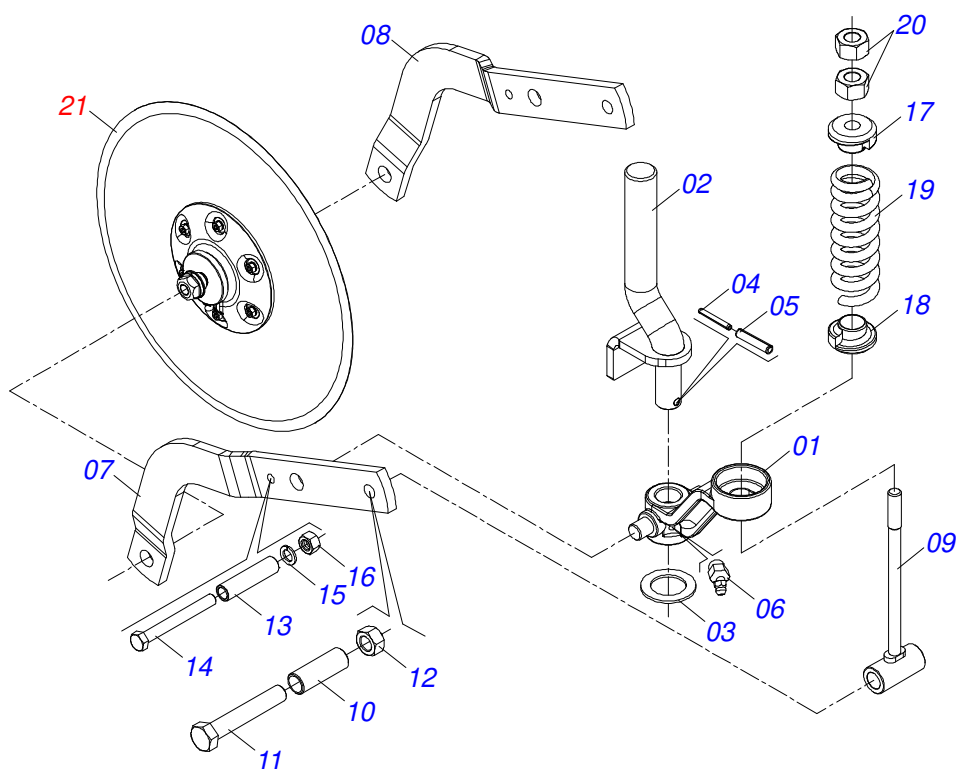

Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE		01
02	0511067045	SHORT WHIT BEATER BLADE DISC FIX AXLE		01
03	0541018684	FLAT WASHER		01
04	0503010756	0.2" X 2.4" SPRING PIN		01
05	0503010361	SPRING PIN		01
06	0503010003	1845 GREASE FITTING		01
07	0521014137	RIGHT ARM BLADE DISC		01
08	0521014138	SUPPORT ARM LEFT BALDE DISC		01
09	0501067323	SPRING REGULATOR		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0503011255	3/4" LOCK NUT		01
13	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
14	0503011411	1/2" X 5-1/2" BOLT		01
15	0503010019	1/2" SPRING WASHER		01
16	0503010060	1/2 UNC G.5 ZN HEX NUT		01
17	0502020393	SPRING UPPER SUPPORT		01
18	0502020394	SPRING SUPPORT		01
19	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
20	0503010014	3/4" HEX NUT		02
21	0521054680	20" DISC BLADE HUB	110	01

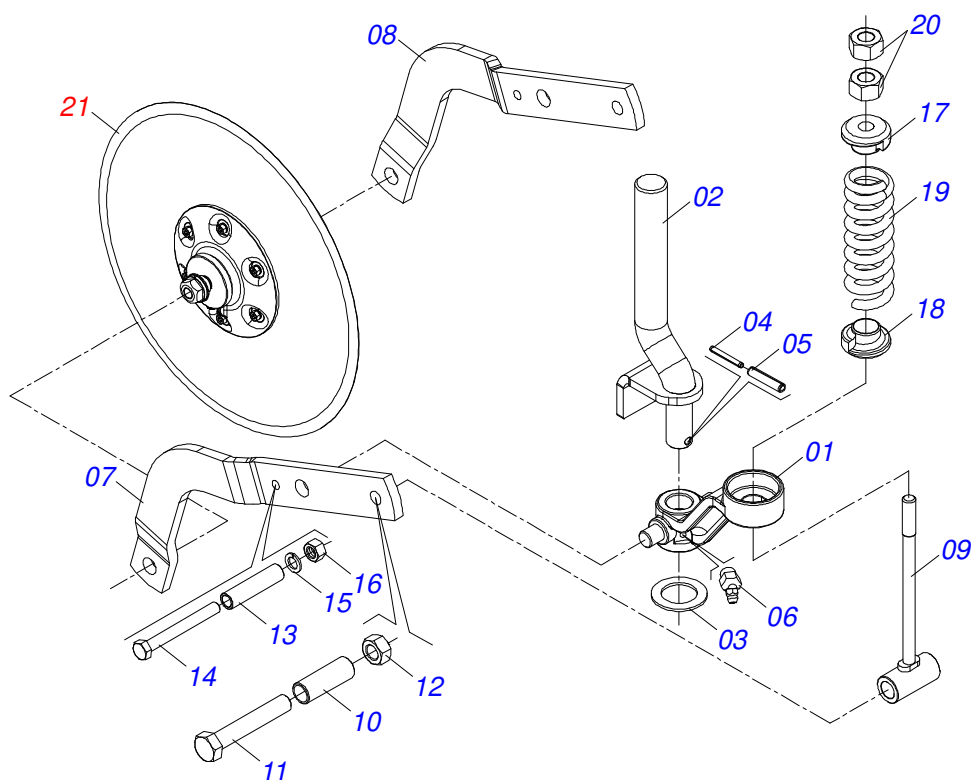


Item	Code	Description	See page	QT
01	0502012368	BLADE DISC SUPPORT AXLE		01
02	0511067044	LONG WHIT BEATER BLADE DISC FIX AXLE		01
03	0541018684	FLAT WASHER		01
04	0503010756	0.2" X 2.4" SPRING PIN		01
05	0503010361	SPRING PIN		01
06	0503010003	1845 GREASE FITTING		01
07	0521014137	RIGHT ARM BLADE DISC		01
08	0521014138	SUPPORT ARM LEFT BALDE DISC		01
09	0501067323	SPRING REGULATOR		01
10	0521010452	SLEEVE		01
11	0503013185	3/4" X 5-1/2" BOLT		01
12	0503011255	3/4" LOCK NUT		01
13	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
14	0503011411	1/2" X 5-1/2" BOLT		01
15	0503010019	1/2" SPRING WASHER		01
16	0503010060	1/2 UNC G.5 ZN HEX NUT		01
17	0502020393	SPRING UPPER SUPPORT		02
18	0502020394	SPRING SUPPORT		01
19	0503031341	2.7 X 8 X 0.5 COMPRESSION SPRING		01
20	0503010014	3/4" HEX NUT		02
21	0521054680	20" DISC BLADE HUB	110	01

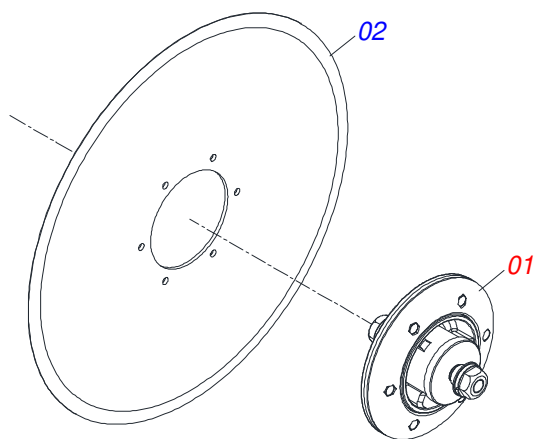


Item	Code	Description	See page	QT
01	0521054679	DISC BLADE HUB	111	01
02	0603027851	20" X 0.2" FLAT PLAIN DISC		01

DISC BLADE HUB


0521054679

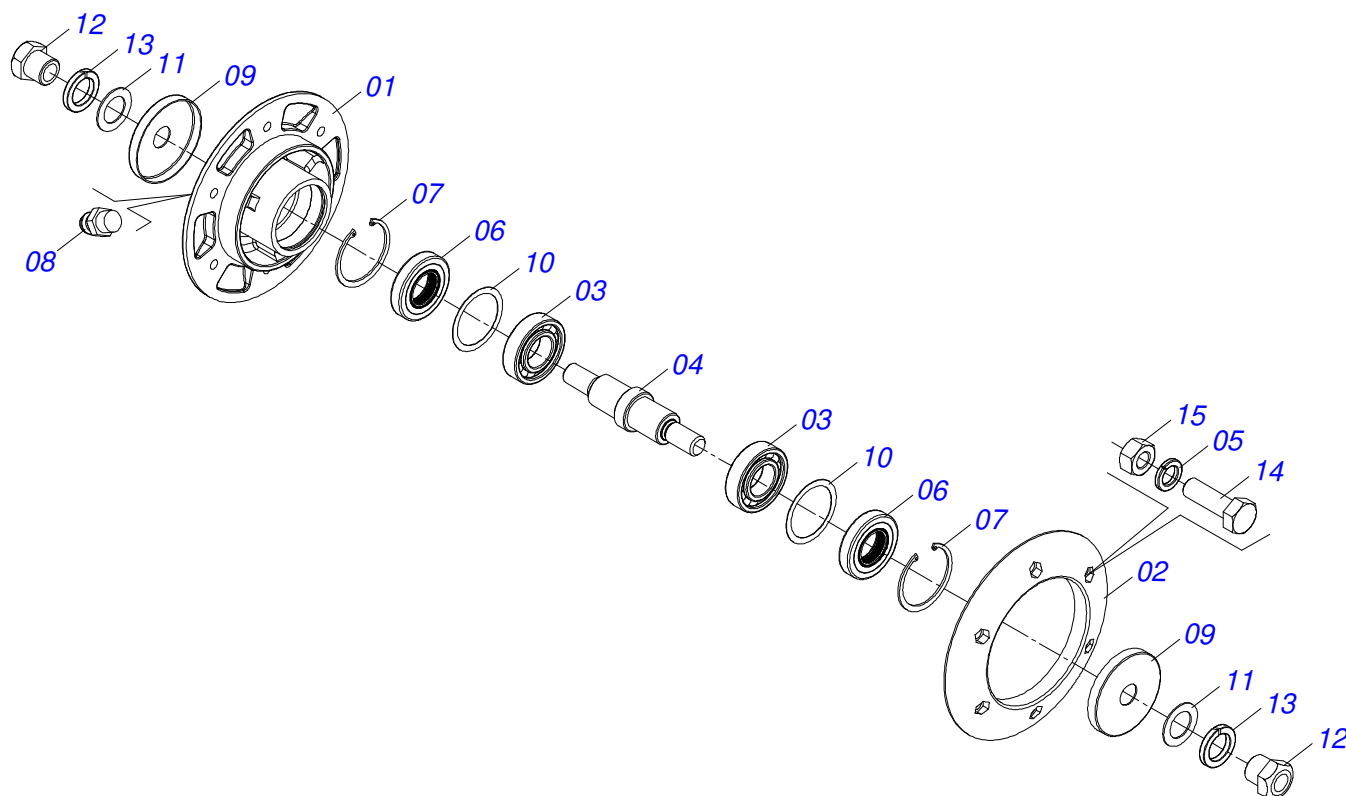


Item	Code	Description	See page	QT
01	0502011562	DISC BLADE HUB		01
02	0502020641	BLADE DISC FLANGE		01
03	0503010276	6206 BALL BEARING		02
04	0521013610	BLADE DISC HUB AXLE		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
06	0503012417	SEAL		02
07	0503011800	SEAL RING		02
08	0503010691	1/4" GREASE FITTING		01
09	0521015376	DUST CLOAK		02
10	0503030832	FLAT WASHER		02
11	0511015346	FLAT WASHER		02
12	0521013510	3/4" NUT		02
13	0503010012	1" SPRING WASHER		02
14	0503010371	5/16" X 1" BOLT		06
15	0503010337	5/16" NUT		06

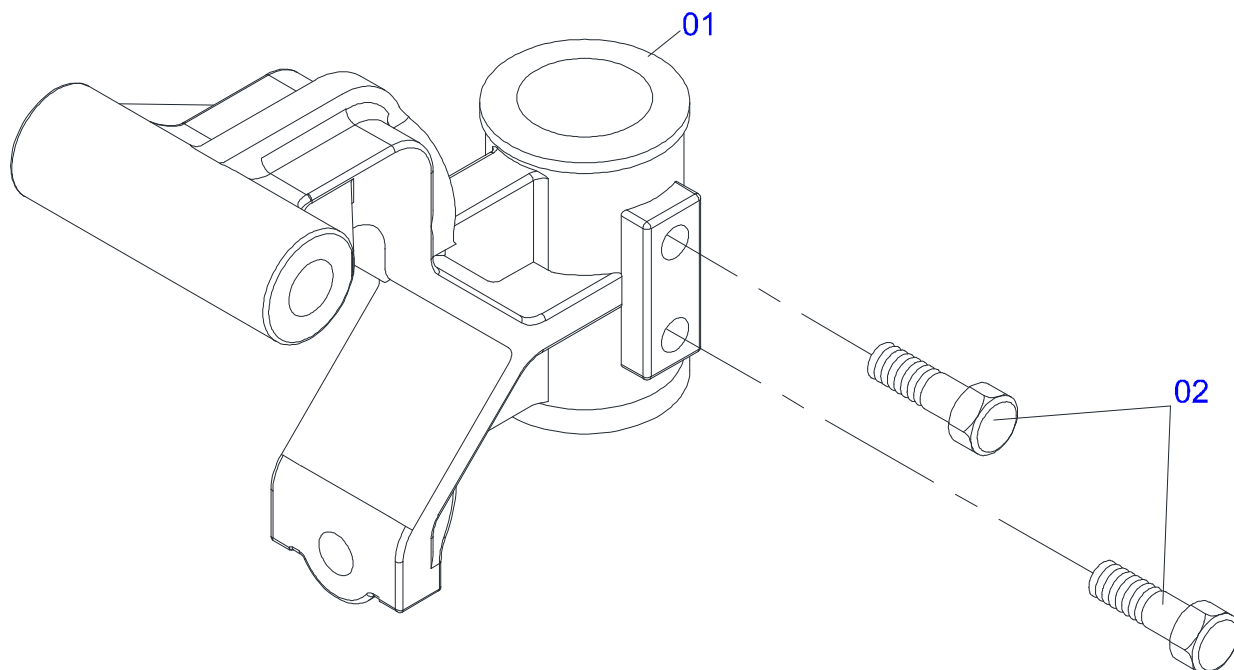


Item	Code	Description	See page	QT
01	0502011567	FERTILIZER ROW SUPPORT		01
02	0511016156	BOLT 5/8 UNC X1.1/2 CS PC G.5 ZN		02

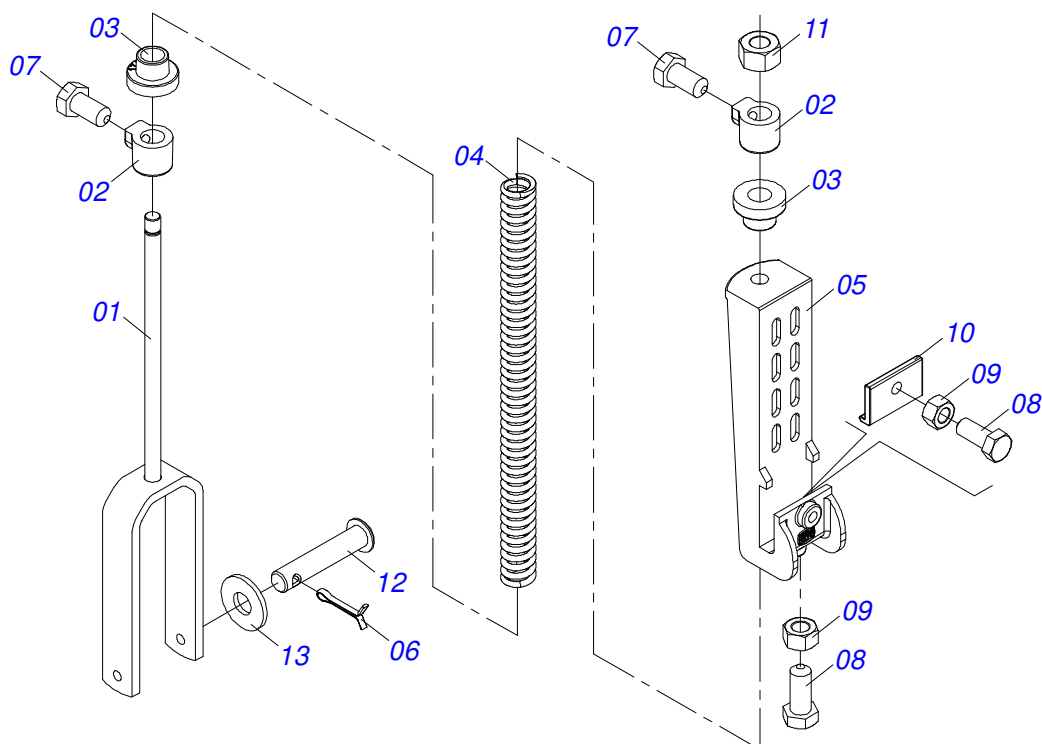

Item	Code	Description	See page	QT
01	0511069645	FERTILIZER SPRING ROD	01	
02	0502040534	SPRING GUIDE BUSHING LOCK	02	
03	0502012184	FERTILIZER SPRING GUIDE	02	
04	0503031910	1.7" X 22.8" X 0.3" SPRING	01	
05	0502012510	SPRING ROD SUPPORT	01	
06	0503010257	1/8" X 1" SPLIT PIN	01	
07	0501018535	1/2 X 1 BOLT	02	
08	0503030678	BOLT 1/2 UNC X 1.1/2 C50A G.5 ZN	02	
09	0503010060	1/2 UNC G.5 ZN HEX NUT	02	
10	1902010891	SPRING CHOCK SUPPORT VARON	01	
11	0503010014	3/4" HEX NUT	01	
12	0561014471	COUPLING SHAFT	01	
13	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN	01	

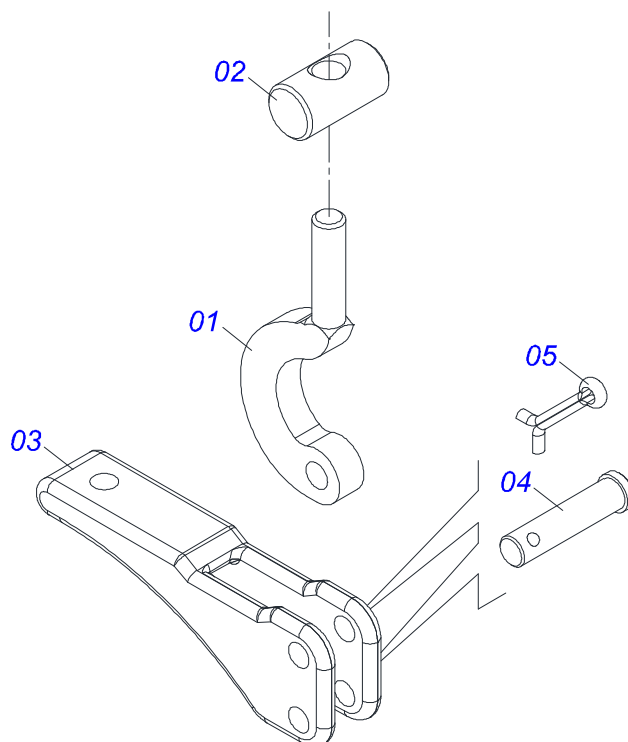


Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" SPLIT PIN		02

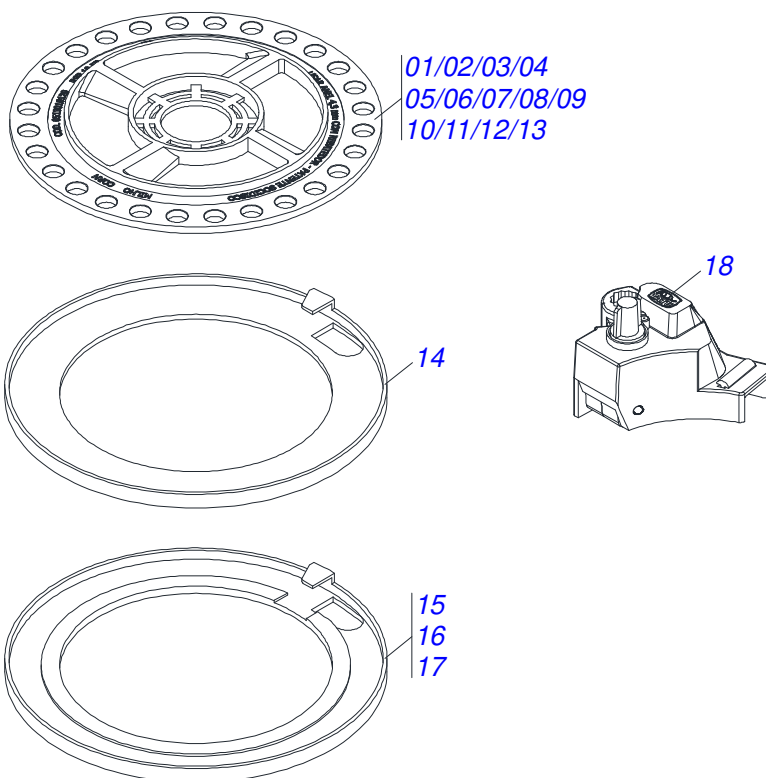


Item	Code	Description	See page	QT
01	0513010117	SOCIDISCO CORN DISC 28 HOLES 9,0 AMC9R-002130		01
02	0513010118	SOCIDISCO CORN DISC 28 HOLES 9,5 VLD9.5R-002115		01
03	0513010119	SOCIDISCO CORN DISC 28 HOLES 10 SAL10R-002619		01
04	0513010120	SOCIDISCO CORN DISC 28 HOLES 10,5 RSP10.5R-002133		01
05	0513010121	SOCIDISCO CORN DISC 28 HOLES 11 LRA11R-002134		01
06	0513010122	SOCIDISCO CORN DISC 28 HOLES 11,5 MAG11.5R-002620		01
07	0513010123	SOCIDISCO CORN DISC 28 HOLES 12 VDA12R-002621		01
08	0513010124	SOCIDISCO CORN DISC 28 HOLES 12,5 AMP12.5R-002131		01
09	0513010125	SOCIDISCO CORN DISC 28 HOLES 13 VMV13R-002132		01
10	0513010126	SOCIDISCO CORN DISC 28 HOLES 13,5 RXR13.5R-002136		01
11	0513010187	SOCIDISCO CORN DISC 28 HOLES 14,8 X 10 VM4-002581		01
12	0513010188	SOCIDISCO CORN DISC 28 HOLES 11 X 8 BR8.1-002589		01
13	0513010189	SOCIDISCO CORN DISC 28 HOLES 12,5 X 8,5 AZ8.2-002587		01
14	0513010164	SOCIDISCO FLAT RING FOR CORN AMFOSLISO-002127		01
15	0513010159	SOCIDISCO RING FOR CORN 0,8MM LRFOSSR08-002120		01
16	0513010160	SOCIDISCO RING FOR CORN 1,4MM VMFOSR1.4-002245		01
17	0513010163	SOCIDISCO RING FOR CORN 2,0MM VDFOSR2-002116		01




Item	Code	Description	See page	QT
18	0503063779	SOCIDISCO 2808 4Z CORN SEED DISTRIBUTOR CAP		01

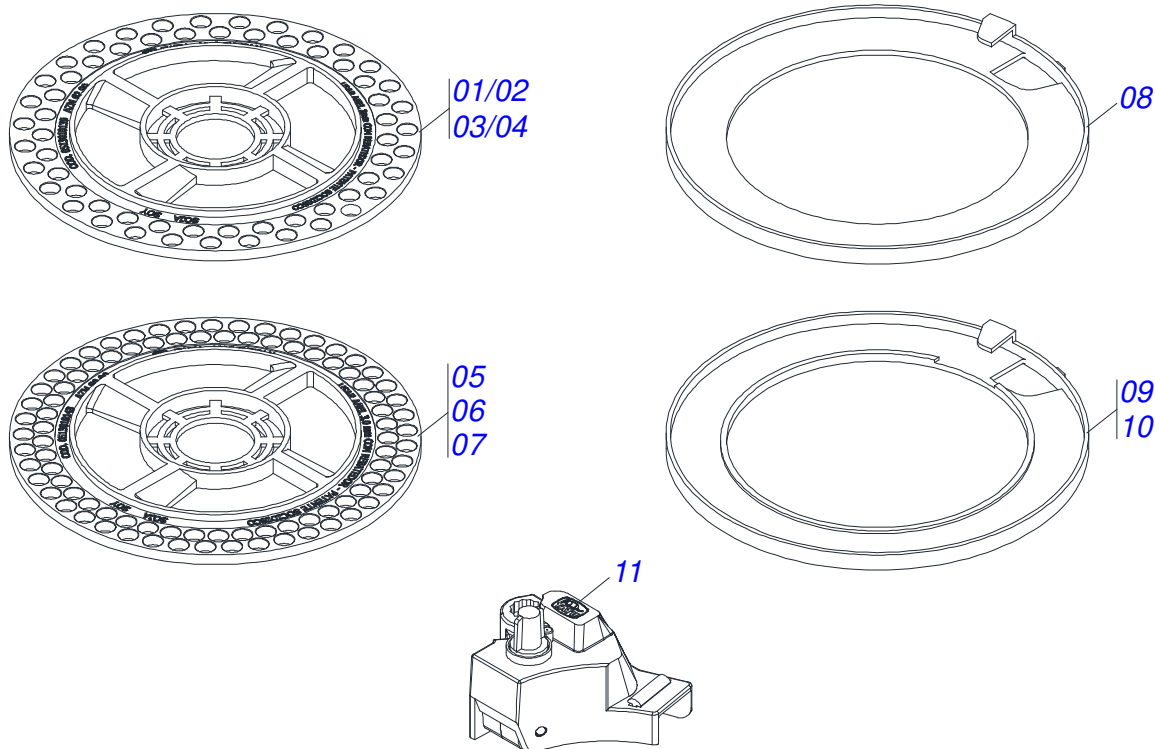


Item	Code	Description	See page	QT
01	0513010136	SOCIDISCO SOY DISC 62 HOLES 7,5 LRA62.75-002357	01	01
02	0513010137	SOCIDISCO SOY DISC 62 HOLES 8,0 RSP62.80-002358	01	01
03	0513010138	SOCIDISCO SOY DISC 62 HOLES 8,5 RXR62.85-002359	01	01
04	0513010139	SOCIDISCO SOY DISC 62 HOLES 9,0 AZM62.90-002360	01	01
05	0513010141	SOCIDISCO SOY DISC 90 HOLES 8,0 RSP90.80-002287	01	01
06	0513010142	SOCIDISCO SOY DISC 90 HOLES 8,5 RXR90.85-002317	01	01
07	0513010143	SOCIDISCO SOY DISC 90 HOLES 9,0 AZM90.90-002288	01	01
08	0513010158	SOCIDISCO FLAT RING FOR SOY AZMSOJALISO-002243	01	01
09	0513010161	SOCIDISCO RING FOR SOY 0,8MM AZCSOJAR08-002461	01	01
10	0513010162	SOCIDISCO RING FOR SOY 1,5MM RSPSOJASR1,5-002244	01	01
11	0503063780	SOCIDISCO 2810 4Z SOY/BEAN SEED DISTRIBUTOR CAP	01	01

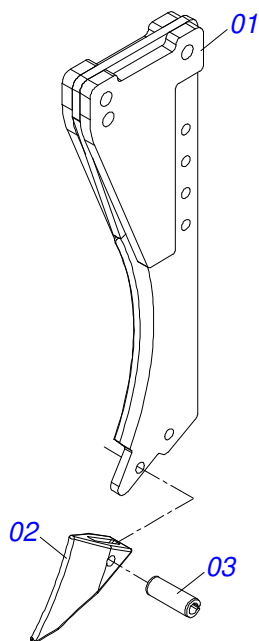

Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER ROD		01
02	1902070061	POINT SUBSOILER		01
03	0503011373	0.4" X 1.1" SPRING PIN		01

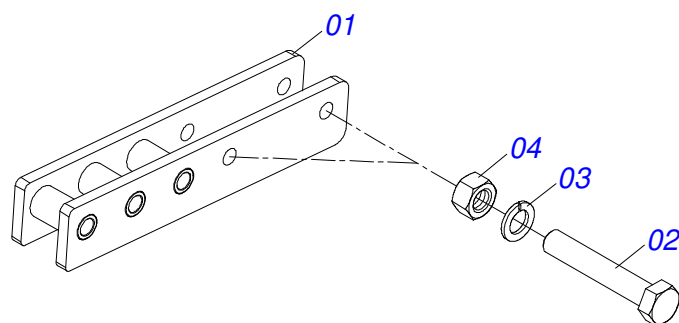

Item	Code	Description	See page	QT
01	0521068467	FIXED ROD EXTENSION		01
02	0503010479	BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02

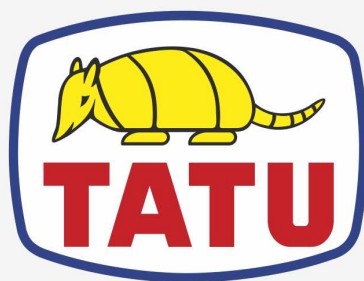

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

