

ROW CROP PLANTERS

COP TRIO 650 SUPREMA P.P MINI HOPPER - FRAME 8450 - CSC/APT (FROM 05/2023)

Code: 0501093693
Series: S-0419
Revision: 00
Revision Date: SETEMBRO/2023

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111420082	COP TRIO 650 SUP 8450/19E450 ESPECIAL S-0419

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.

INDEX

0909096904	FRAME ASSY	1
0541051962	FRAME WITH ARTICULATION 8450	2
0909098859	DRAWBAR ASSY - 5750/6350/6850/7655	3
0521045756	HYDRAULIC CYLINDER	4
0521050573	EXTENSOR 3RD POINT	5
0511057653	HYDRAULIC CYLINDER	6
0501053835	FEMALE QUICK COUPLER	7
0511057817	SUPPORT HOSE	8
0511055096	TRACTOR HITCH	9
0511053179	TRACTOR COUPLING SHAFT	10
0521050133	TURNBUCKLE SIDE 755/480	11
0521050196	TURNBUCKLE SIDE 1125/480	12
0521050574	EXTENSOR	13
0521057452	ASSY INTERMEDIATE DRAWBAR FIXATION SUPPORT	14
0501053834	MALE QUICK COUPLER	15
0541052005	RIGHT WHEEL ASSEMBLY WITHOUT TRANSMISSION	16
0541052000	LEFT WHEEL ASSEMBLY WITHOUT TRANSMISSION	17
0541052003	WHEEL SET WITHOUT TRANSMISSION	18
0521057818	WHEEL WITH TIRE 7.00 X 16 14L ASSY WITHOUT TRANSMISSION	19
0503063073	EE WHEEL WITH TIRE 7.00 X 16 14L ASSEMBLY	20
0521057819	ASSY WHEEL HUB WITHOUT TRANSMISSION	21
0541051942	44,45 X 85,72 X 202 X 384 HYDRAULIC CYLINDER	22
0541052025	HEX AXLE ASSEMBLY 8450	23
0541052018	BEARING WITH HEXA GOVE	24
0521055498	SEED TRANSMISSION DOUBLE BEARING	25
0521056144	INTERMEDIATE SEED TRANSMISSION	26
0541051999	8450 FERTILIZER HOPPER SET	27
0541051996	CENTRAL SUPPORT FERTILIZER SILO WITH DOSER	28
0541051997	RIGHT FERTILIZER SILO SUPPORT WITH DOSER	29
0541051998	LEFT FERTILIZER SILO SUPPORT	30
0501053788	3/4" SQUARE AXLE FASTENER	31
0531059144	FERTILIZER DOSER ALPHA II	32
0531055863	TRANSMISSION HUB ASSY	33
0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	34
0531059138	COMPLETE COLLECTOR	35
0531055273	ALPHA FERTILIZER METERING CLAMP	36
0531057978	SIDE BEARING WITH TRANSMISSION	37
0521056142	HANDRAIL ASSY 8450	38
0521057334	ASSY RIGHT HANDRAIL - 7655/8450	39
0521057333	ASSY LEFT HANDRAIL - 7655/8450	40
0521054516	PLATFORM ASSY 8450	41
0541052026	HYDRAULIC ASSEMBLY	42
0541052032	BLOCK VALVE SUPPORT	43
0541051984	FRONT ARTICULATOR	44
0541051983	HOSE SUPPORT ARTICULATOR	45
0541052272	HEAT EXCHANGER ASSEMBLY	46
0541052229	CONJUNTO DE TUBOS HIDRÁULICOS	47
0541052230	HEAT EXCHANGER ASSY	48
0541051909	OIL CONDUCTOR SIDE FASTENER	49
0541052228	CENTRAL HYDRAULIC PIPES ASSY	50
0541052250	OIL CONDUCTIVE FIXATOR	51
0541052227	HYDRAULIC PIPES SET RIGHT	52
0541052275	ASSY HOSE GAME	53
0541051980	BLOCK ASSY	54



MARCHESAN

INDEX


0541051981	COMMAND BLOCK	55
0541051982	TRIPLE ROTARY DIVIDER	56
0503064297	SWITCH ASSEMBLY	57
0541052035	CSC AIR DISTRIBUTOR ASSY	58
0521057177	ASSY ANTI CAVITATION VALVE	59
0541052007	RIGHT SIDE AIR DISTRIBUTOR	60
0541052006	LEFT SIDE AIR DISPENSER	61
0541052034	CENTER SEED SILO	62
0531051213	CENTRAL SEED BOX	63
0531051214	BOX FUND 17 DEPARTURES	64
0521045392	HYDRAULIC TURBINE WITH SCREEN	65
0501054983	HYDRAULIC MOTOR	66
0501054577	BLOCK COMMAND WITH NIPLES HYDRAULIC TURBINE	67
0521057188	ASSY SUPPORT AIR DUCT REAR	68
0521057462	CENTRAL REAR AIR CONDUCTOR 7655/8450	69
0521056987	FIXED ARTICULATOR SUPPORT	70
0521057187	MOUNTED REAR AIR DUCT SUPPORT	71
0521057346	FRONT / REAR SUPPORT	72
0521056083	MOUNTED CSC PLATFORM	73
0521056990	REAR SUPPORT HOSE ASSY	74
0521056989	ASSY CSC FIXED SUPPORT	75
0521056988	ASSY TURBINE REGULATOR BLOCK SUPPORT	76
0511059542	BLOCK COMMAND TURBINES	77
0521056986	FIXED SUPPORT ASSY CSC DRAIN	78
0521057315	ASSY SUPPORT TRANSPORT CSC	79
0541051253	SUCTION TURBINE	80
0541051254	COMPLETE PLM ENGINE	81
0521057919	ASSY CSC TURBINE PROTECTION	82
0521057917	RIGHT REAR AIR DUCT FIXING COMPLETE ASSY	83
0541052008	CENTRAL AIR DISTRIBUTOR	84
0521058023	NOZZLE Y ASSY	85
0511053356	LADDER ASSY	86
0511058191	REST ASSY	87
0511057803	ASSY PORT MANUAL INSTRUCCION	88
0541051565	LABELS SET	89
0511059494	TRACTION SPRING ASSY	90
0521057929	REAR HEADLIGHT ASSY 7655 A 8450	91
0521053672	LIGHTHOUSE ASSY	92
0521052792	MOUNTED REAR LIGHT	93
0541051878	ISO6 SET 6 CHANNELS	94
0521056496	MOTOR EMD 80 WITH BLOCK BLFP2618	95
0511056972	FILTER HYDAC	96
0521054490	FLOW DIVIDING VALVE ASSY	97
0541051947	MECHANICAL ASSEMBLY 6 CHANNELS FERTILIZER/SEED	98
0531050693	MODULE BOX	99
0511059348	APT ASSY MODULE BOX	100
0531050811	APT FILTER SUPPORT	101
0531055259	SUPPORT WITH LEFT ENGINE	102
0541051912	VALVE SUPPORT	103
0541051899	RIGHT FERTILIZER MOTOR SUPPORT	104
0541051900	CURRENT PROTECTION	105
0521056994	ASSY TOOL CHEST	106
0521056993	ASSY WATER RESERVOIR	107
0531059629	KIT WITH ALPHA COMPONENTS 19 LINES	108
0521057937	KIT HOSE / LABEL ASSY CSC 7655 A 8450	109



MARCHESAN


INDEX

0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	110
0909096905	SEED/FERTILIZER ROW ASSEMBLY	111
0541051967	FRONT SHORT LINE	112
0541051968	FRONT LONG LINE	113
0531050894	REAR WITH DDD RIGHT	114
0531050895	REAR WITH LEFT DDD	115
0521056640	PRECISION PLANTING CSC CABLE / TRANSMISSION ASSY	116
0521052131	VSET2 DISTRIBUTOR WITH CORN DISC WITHOUT PROTECTION	117
0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION	118
0541052088	REAR WITH RIGHT DDD SUPPORT	119
0521056635	RIGHT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	120
0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	121
0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	122
0521055864	FERTILIZER/SEED RIGHT HUB ASSY	123
0521055865	FERTILIZER/SEED LEFT HUB ASSY	124
0521056632	DEPTH CONTROL	125
0521056633	MOUNTED RIGHT ARM	126
0521055059	WHEEL RAYED ASSY SPA WITHOUT LUBRICATION	127
0521055073	ASSEMBLY DEPTH WHEEL HUB	128
0521056631	MOUNTED LEFT ARM	129
0521055093	BODY COMPACTOR	130
0521054990	LEFT COMPACTOR WHEEL	131
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	132
0521055017	RIGHT COMPACTOR WHEEL	133
0541052089	REAR WITH LEFT DDD BRACKET	134
0521056634	LEFT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	135
0531050164	BEARING ASSY	136
0511057159	TRANSMISSION HOPPER SEED ROW	137
0531050163	BEARING FOR LATERAL DEVIATION	138
0501057684	SIDE BEARING FRONT SUPPORT SEED ROW	139
0501053566	ROW SEED BEARING	140
0521056069	SEMI-ASSEMBLED SHORT FERTILIZER ROW	141
0521056066	SEMI-ASSEMBLED LONG FERTILIZER ROW	142
0521056070	DC 20 ASSY	143
0521053248	20" DISC BLADE HUB WITH CONICAL BEARING	144
0521053697	DISC BLADE HUB	145
0521056067	DDD RIGHT FERTILIZER WITH FIXATION	146
0521056068	DDD LEFT FERTILIZER WITH FIXATION	147
0521055868	RIGHT DUAL FERTILIZER DISC	148
0521055869	LEFT DUAL FERTILIZER DISC	149
0531052348	COMPLETE SUPPORT HOSE	150
0541051975	SHORT LINE TRANSMISSION	151
0541051976	LONG LINE TRANSMISSION	152
0541051977	SUPER LONG-LINE TRANSMISSION	153
0541051937	TRANSMISSION CASE	154
0541051974	TRANSMISSION CASE	155
0541051938	TRANSMISSION CASE	156
0541051939	TRANSMISSION CASE	157
0521056844	SCARIFIER ROD	158
0521053673	SCARIFIER ROD WITH NOZZLE	159
0521052549	CLAMP	160

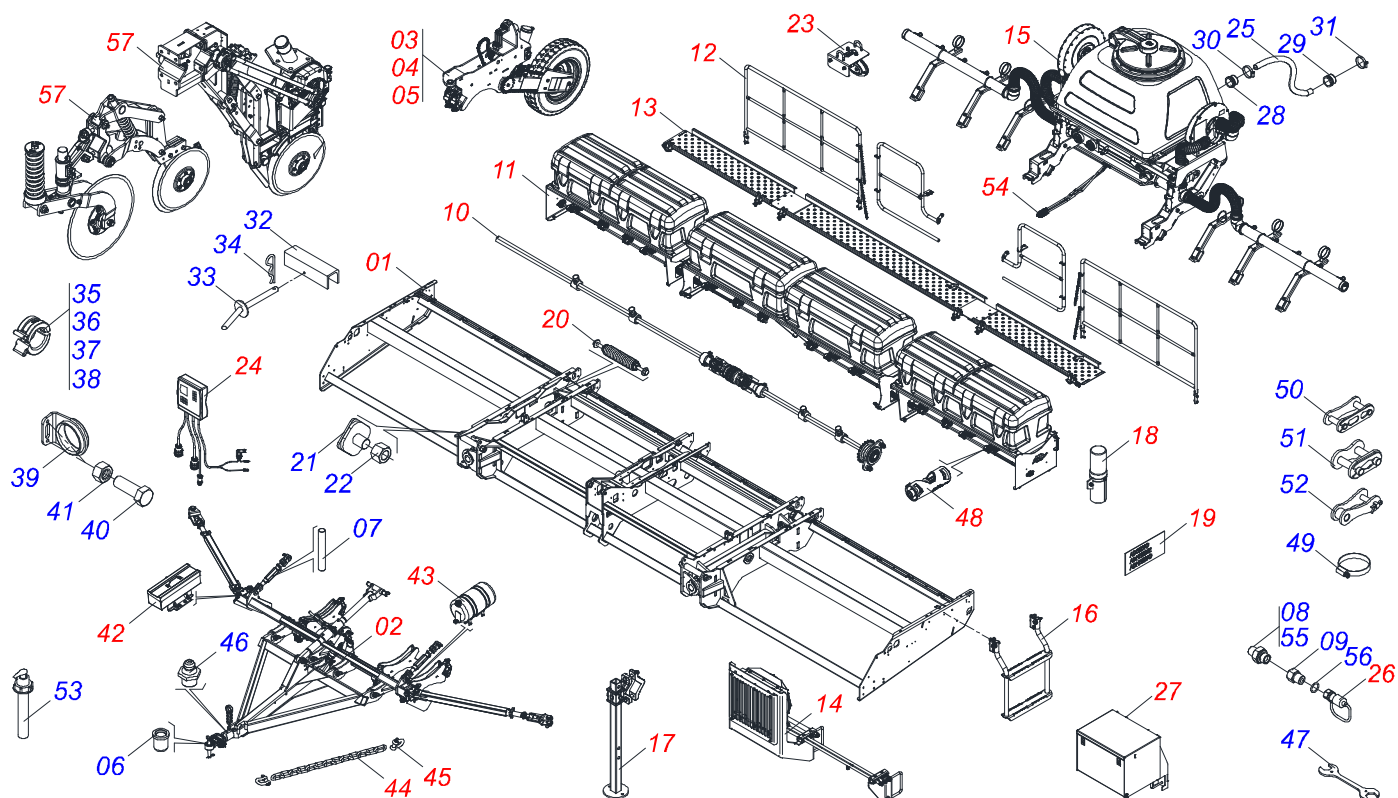


Item	Code	Description	See page	QT
01	0541051962	FRAME WITH ARTICULATION 8450	2	01
02	0909098859	DRAWBAR ASSY - 5750/6350/6850/7655	3	01
03	0541052005	RIGHT WHEEL ASSEMBLY WITHOUT TRANSMISSION	16	01
04	0541052000	LEFT WHEEL ASSEMBLY WITHOUT TRANSMISSION	17	01
05	0541052003	WHEEL SET WITHOUT TRANSMISSION	18	08
06	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01
07	0521018501	TURNBUCKLE LEVER		01
08	0581013729	NIPLE 1/2 NPT		01
09	0541010080	TERMINAL R.1 / 2 NPT		01
10	0541052025	HEX AXLE ASSEMBLY 8450	23	01
11	0541051999	8450 FERTILIZER HOPPER SET	27	01
12	0521056142	HANDRAIL ASSY 8450	38	01
13	0521054516	PLATFORM ASSY 8450	41	01
14	0541052026	HYDRAULIC ASSEMBLY	42	01
15	0541052035	CSC AIR DISTRIBUTOR ASSY	58	01
16	0511053356	LADDER ASSY	86	01
17	0511058191	REST ASSY	87	01
18	0511057803	ASSY PORT MANUAL INSTRUCCION	88	01
19	0541051565	LABELS SET	89	01
20	0511059494	TRACTION SPRING ASSY	90	10
21	0521064285	LOCK LOWER FRAME		04
22	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		04
23	0521057929	REAR HEADLIGHT ASSY 7655 A 8450	91	01
24	0541051878	ISO6 SET 6 CHANNELS	94	01
25	1164920015	BLACK SUCTION HOSE		51 mts
26	0501053834	MALE QUICK COUPLER	15	01
27	0541051947	MECHANICAL ASSEMBLY 6 CHANNELS FERTILIZER/SEED	98	01
28	0503034867	AIR DISTRIBUTOR PUMP		09
29	0503034345	DISPENSER COVER		09

Item	Code	Description	See page	QT
30	0503010243	CLAMP		09
31	0503010184	CLAMP		08
32	0521013022	TRANSPORT LOCK		10
33	0501068994	8,30 X 78 LOCK PIN		08
34	0503030168	HITCH PIN CLIP		08
35	0501047895	25 ROD STOP		10
36	0501047885	30 ROD STOP		10
37	0501047886	35 ROD STOP		10
38	0501047887	40 ROD STOP		10
39	0521066303	HOSE GUIDE		01
40	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		02
41	0503013816	5/16" LOCKNUT		02
42	0521056994	ASSY TOOL CHEST	106	01
43	0521056993	ASSY WATER RESERVOIR	107	01
44	0503014120	CHAIN		01
45	0503014321	CABLE STEEL SHACKLE		02
46	0503010002	1800 GREASE FITTING		01
47	0541015451	FIXED KEY 2.3/8 X 2.3/4		01
48	0531059629	KIT WITH ALPHA COMPONENTS 19 LINES	108	01
49	0503010246	CLAMP		17
50	0503011750	AMENDMENT WITH LOCK		06
51	0503011751	REDUCTION		06
52	0503010780	N-2050 AMENDMENT		06
53	0503019262	SOAP DISH VACUUM		01
54	0521057937	KIT HOSE / LABEL ASSY CSC 7655 A 8450	109	01
55	0571015343	NIPLE 1 / 2NPT X 3 / 4NPT		01
56	0503010045	O'RING		01
57	0909096905	SEED/FERTILIZER ROW ASSEMBLY	111	19

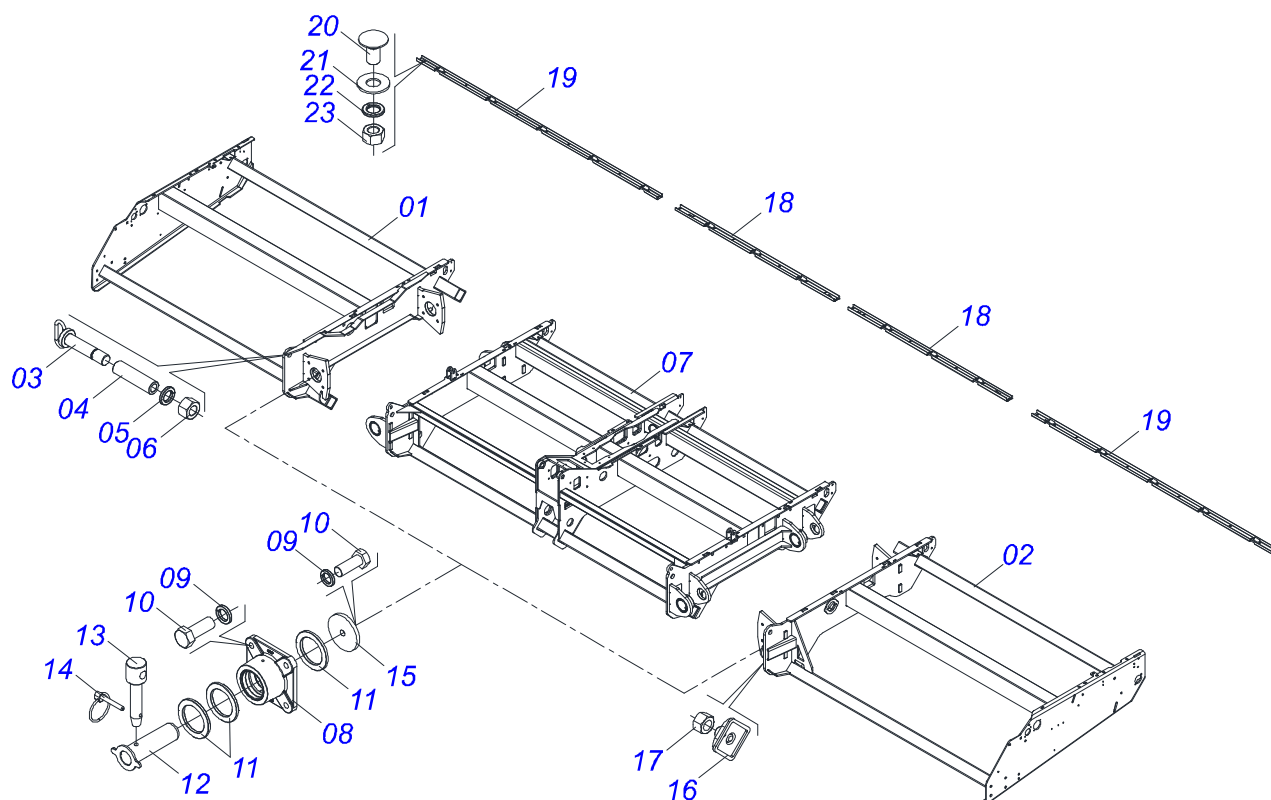


Item	Code	Description	See page	QT
01	0531060163	RIGHT SIDE FRAME 8450	01	
02	0531060164	LEFT SIDE FRAME 8450	01	
03	0521063003	LOCK PIN	02	
04	0571010969	LOCK SLEEVE FRAME	02	
05	0503013627	1.1/2 SPRING WASHER	02	
06	0501010110	1.1/2" NUT	02	
07	0531067099	CENTER FRAME	01	
08	0501110683	REAR HUB ARTICULATOR WITH SLEEVES	04	
09	0503011442	3/4" SPRING WASHER	20	
10	0501010098	3/4" UNC BOLT	20	
11	0571010094	SLEEVE FLANGE	12	
12	0521066298	ARTICULATOR	04	
13	0571013510	LOCK AXLE	04	
14	0503030085	LOCK PIN	04	
15	0571010095	FLAT WASHER	04	
16	0521064285	LOCK LOWER FRAME	04	
17	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN	04	
18	0591012305	CENTRAL GUTTER 24 X 50 X 1550	02	
19	0591012310	SIDE GUTTER 24 X 50 X 2350	02	
20	0503013029	3/8" X 3/4" BOLT	08	
21	0501013518	FLAT WASHER	08	
22	0503010025	3/8 SPRING WASHER	08	
23	0503010026	3/8" NUT	08	

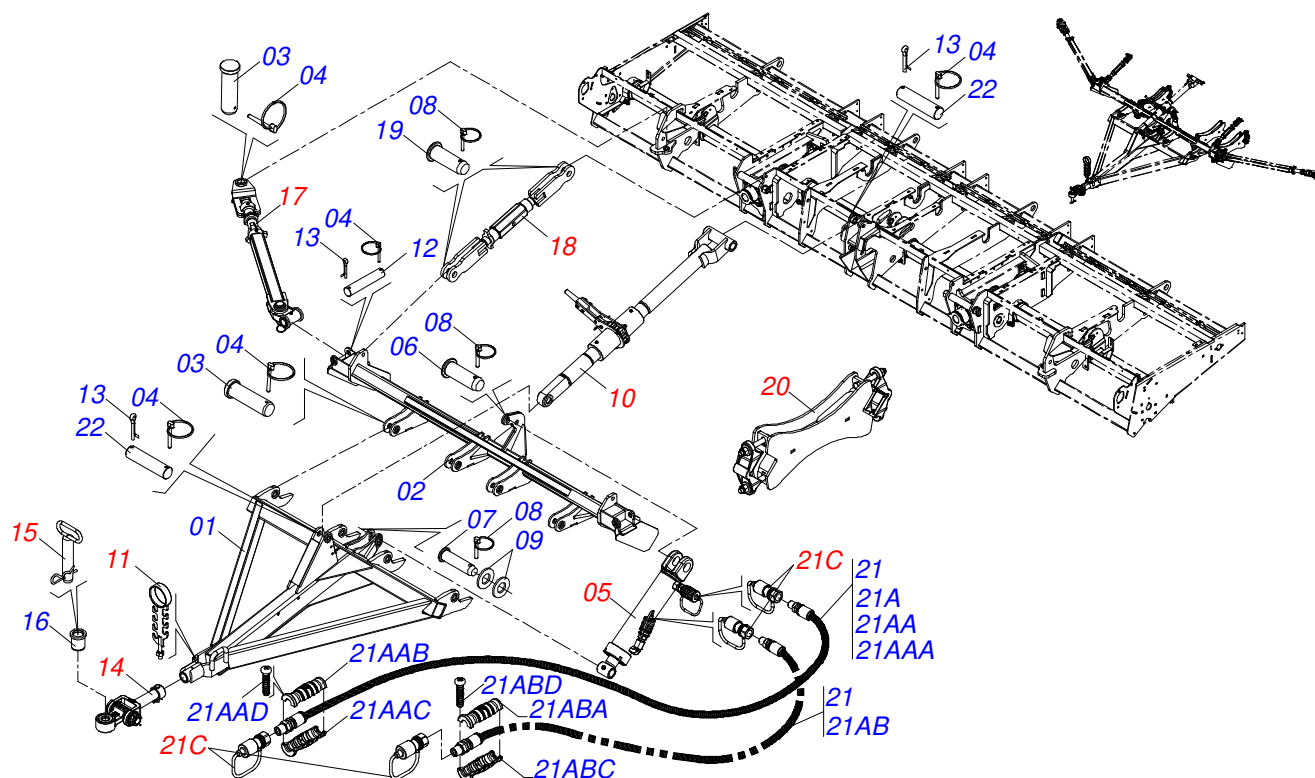


Item	Code	Description	See page	5750	6350	6850	7655
01	0521066289	5750/6350/6850 FRONT DRAWBAR		01	00	01	00
01.	0521067406	DRAWBAR ASSY 7655		00	00	00	01
02	0531060570	INTERMEDIATE HEADER 5750/6850		01	00	01	00
02.	0531060568	INTERMEDIATE DRAWBAR 7655/8450		00	00	00	01
02..	0531060569	INTERMEDIATE DRAWBAR 6350/7350		01	00	00	00
03	0571019949	JUNCTION SHAFT		06	06	06	06
04	0503030119	LOCK PIN		10	10	10	10
05	0521045756	HYDRAULIC CYLINDER	4	01	01	01	01
06	0521010779	31.75 X 95 COUPLING SHAFT		01	01	01	01
07	0521010581	0.9" X 4.9" COUPLING SHAFT		01	01	01	01
08	0503030085	LOCK PIN		06	06	06	06
09	0531016049	FLAT WASHER		02	02	02	02
10	0521050573	EXTENSOR 3RD POINT	5	01	01	01	01
11	0511057817	SUPPORT HOSE	8	01	01	01	01
12	0571019951	JUNCTION SHAFT		02	02	02	02
13	0503010523	1/4" X 2" SPLIT PIN		04	04	04	04
14	0511055096	TRACTOR HITCH	9	01	01	01	01
15	0511053179	TRACTOR COUPLING SHAFT	10	01	01	01	01
16	0501212237	HITCH SLEEVE ARTICULATED 85 X 35 MM		01	01	01	01
17	0521050133	TURNBUCKLE SIDE 755/480	11	02	02	02	02
17.	0521050196	TURNBUCKLE SIDE 1125/480	12	00	00	02	00
18	0521050574	EXTENSOR	13	02	02	02	02
19	0521010571	COUPLING SHAFT		04	04	04	04
20	0521057452	ASSY INTERMEDIATE DRAWBAR FIXATION SUPPORT	14	04	04	04	04
21	0521050693	ASSEMBLY SET HOSE CYLINDER FRONT HEAD		01	01	01	01
21A	0521050692	HOSE KIT CYLINDER HEAD FRONT		01	01	01	01
21AA	0521052310	HOSE 1/2 X 4500 TM-TM GREEN / RED		01	01	01	01
21AAA	0501081929	HOSE 1/2 X 4500 TM-TM		01	01	01	01
21AAB	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01	01	01	01
21AAC	0503034495	HYDRAULIC HOSE GRIP (RED)		01	01	01	01
21AAD	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06	06	06	06


Item	Code	Description	See page	5750	6350	6850	7655
21AB	0521052309	HOSE 1/2 X 4500 TM-TM GREEN / BLUE		01	01	01	01
21ABA	0501081929	HOSE 1/2 X 4500 TM-TM		01	01	01	01
21ABB	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01	01	01	01
21ABC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01	01	01	01
21ABD	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06	06	06	06
21C	0501053834	MALE QUICK COUPLER	15	04	04	04	04
22	0571019950	COUPLING SHAFT		02	02	02	02

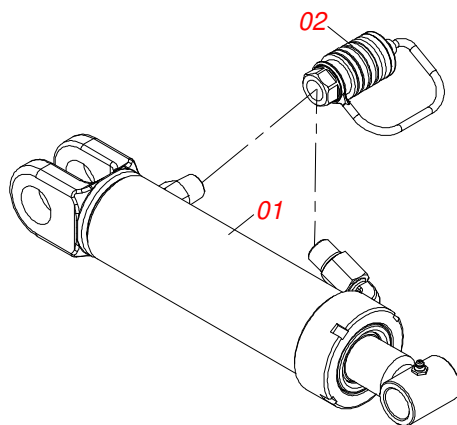


Item	Code	Description	See page	QT
01	0511057653	HYDRAULIC CYLINDER	6	01
02	0501053835	FEMALE QUICK COUPLER	7	02

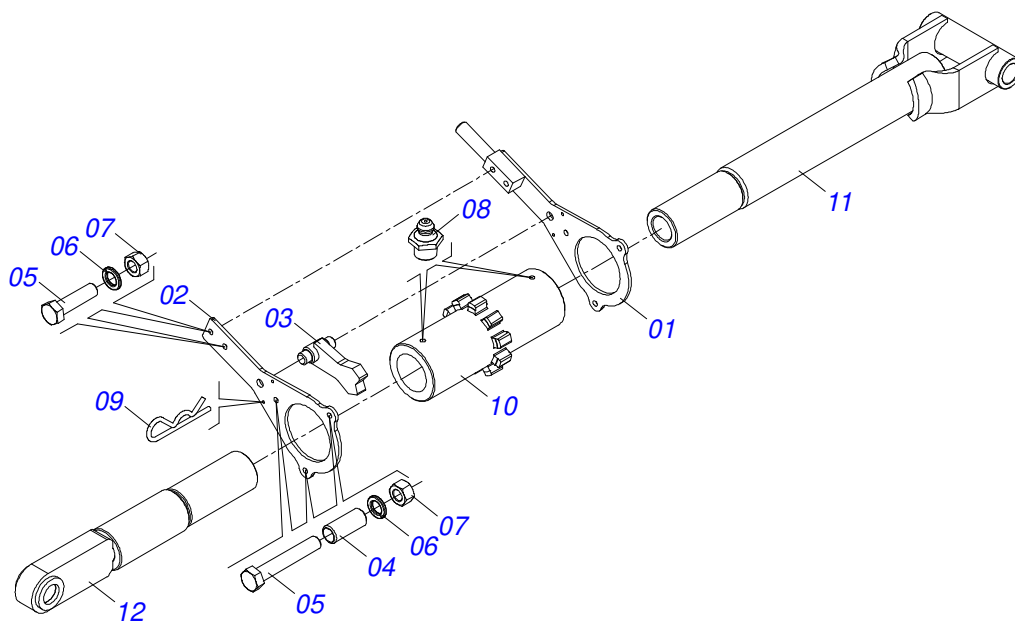


Item	Code	Description	See page	QT
01	0511061880	SIDE RIGHT RATCHET		01
02	0531010264	SIDE RATCHET		01
03	0511061881	RATCHET FOLLOWER		01
04	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
05	0503011179	3/8" X 2-1/4" BOLT		05
06	0503011443	3/8" SPRING WASHER		05
07	0503010026	3/8" NUT		05
08	0503010002	1800 GREASE FITTING		02
09	0503030012	HITCH PIN CLIP		01
10	0502012783	STABILIZER BODY GREATER		01
11	0521067623	FUSE 713 EXTENSION RIGHT 3RD POINT		01
12	0521067622	FUSE 470 EXTENSION LEFT 3RD POINT		01

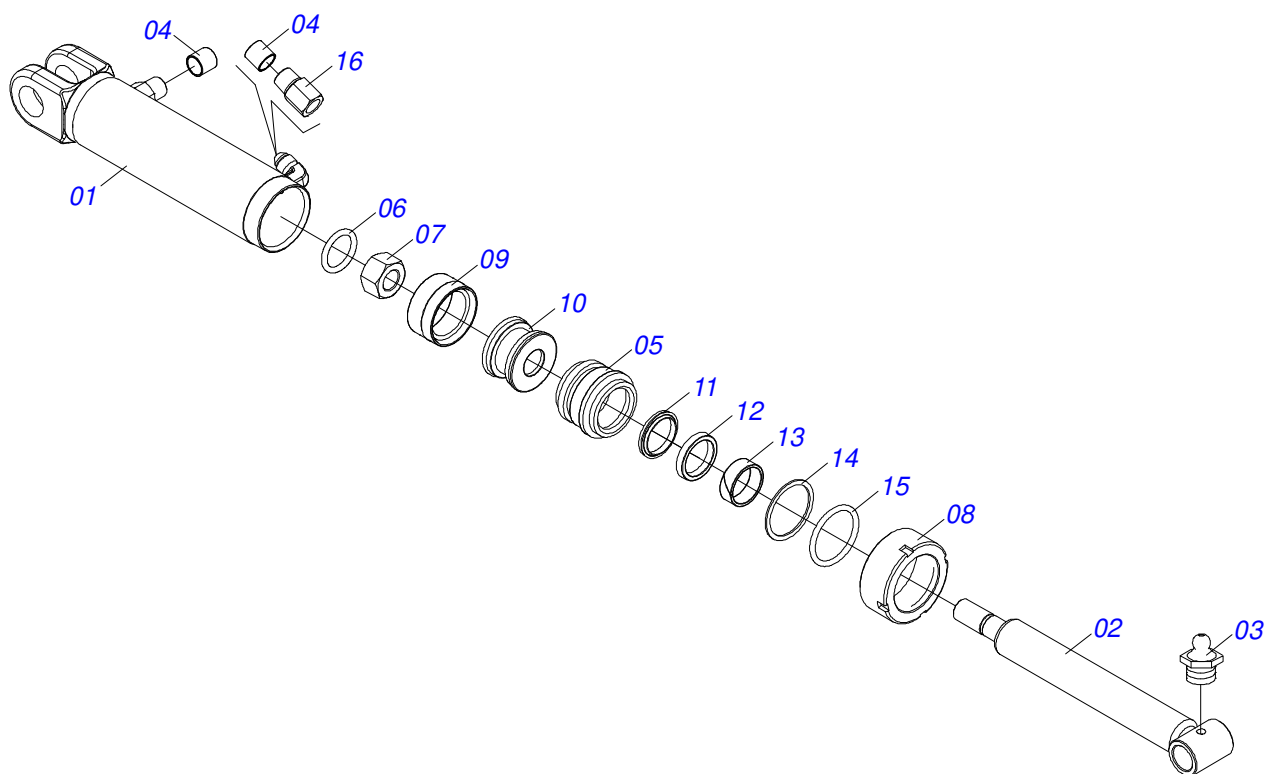


Item	Code	Description	See page	QT
01	0521066550	CASE		01
02	0521066551	EXTENSION DRAWBAR		01
03	0503010002	1800 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010669	EMBOLUS 63.50 X 40 USAP		01
06	0503018005	RING		01
07	0503010558	7/8" NUT		01
08	0502010471	63,50 MOBILE CAP		01
09	0503011058	8-330 BACK-UP RING		01
10	0571019866	RING SUPPORT		01
11	0503010163	D-1500 SCRAPER RING		01
12	0503018004	RING		01
13	0503010161	2-330 N 3006 9B O'RING		01
14	0503018003	GASKET		01
15	0503010605	O'RING		01
16	0581010652	JIC ADAPTER		01

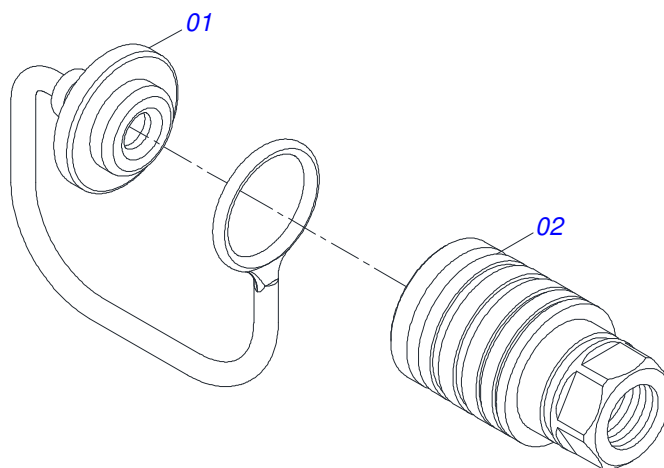


Item	Code	Description	See page	QT
01	0503011883	QUICK CONNECTION COVER		01
02	0503011628	FEMALE QUICK COUPLER		01

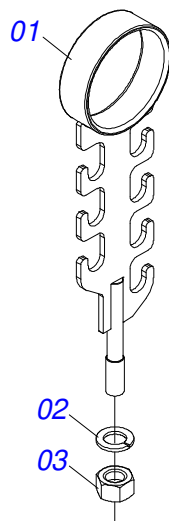


Item	Code	Description	See page	QT
01	0521066302	HOSE HOLDER		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" HEX NUT		01

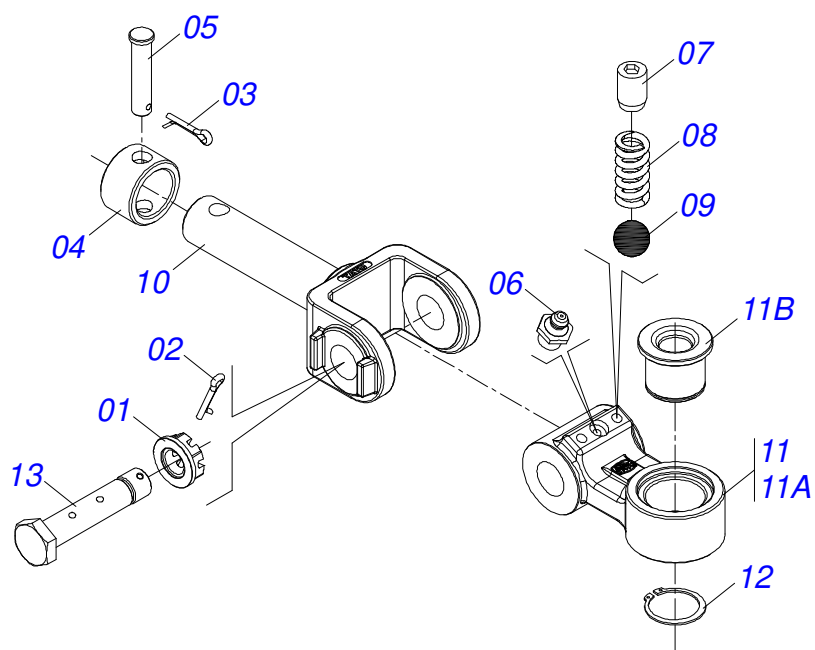


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" SPLIT PIN		01
03	0503010571	1/4" X 1.1/2" SPLIT PIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	LEFT COMPRESSION SPRING		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	SCREW ASSY		01

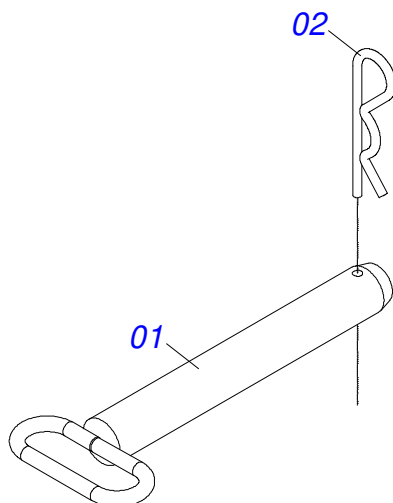


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

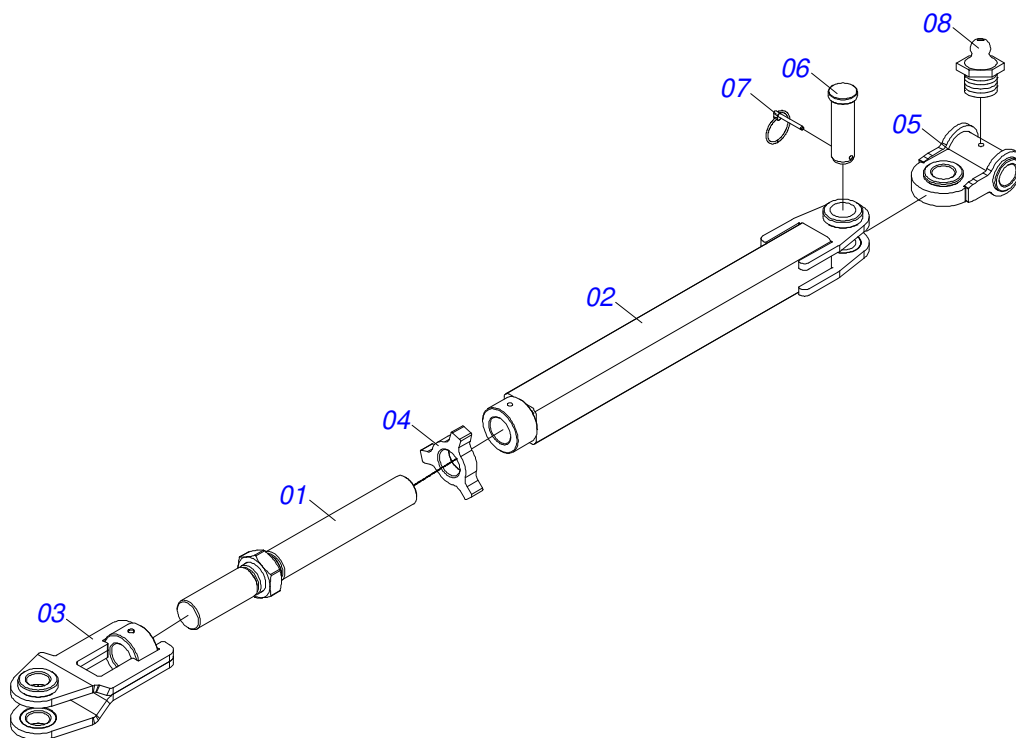


Item	Code	Description	See page	QT
01	0521065193	TURNBUCKLE AXLE		01
02	0521067392	FIXED BRACKET		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0521067393	EXTERNAL SIDE EAR		01
06	0571019949	JUNCTION SHAFT		01
07	0503030119	LOCK PIN		01
08	0503010002	1800 GREASE FITTING		03

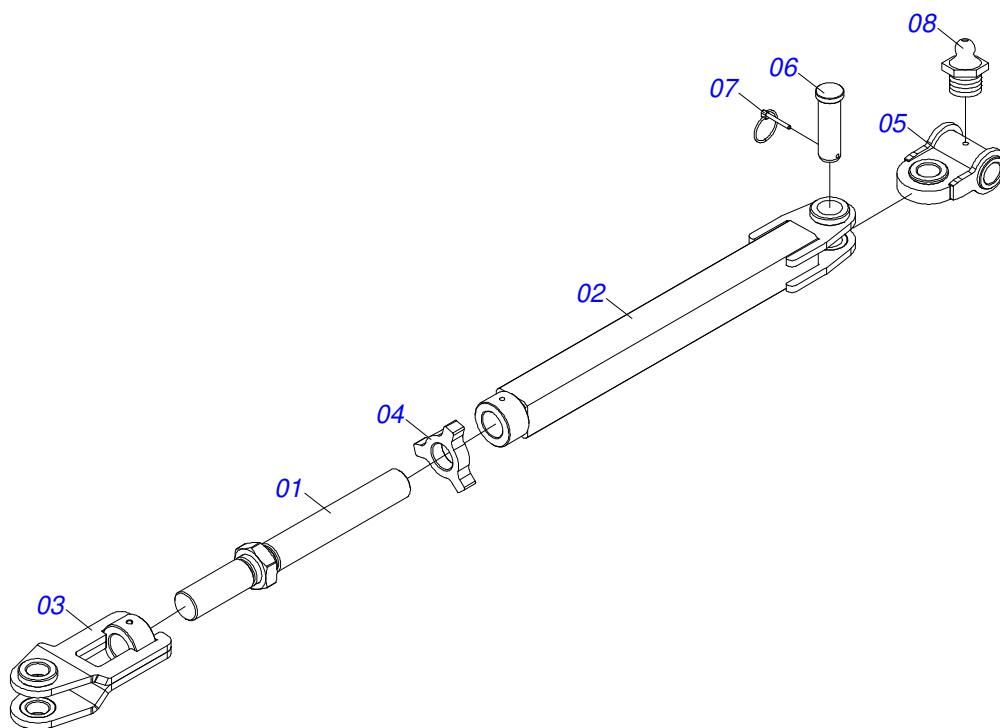


Item	Code	Description	See page	QT
01	0521065193	TURNBUCKLE AXLE		01
02	0521067451	FIXED TIP 1125 SIDE EXTENSION 7350		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0521067393	EXTERNAL SIDE EAR		01
06	0571019949	JUNCTION SHAFT		01
07	0503030119	LOCK PIN		01
08	0503010002	1800 GREASE FITTING		03

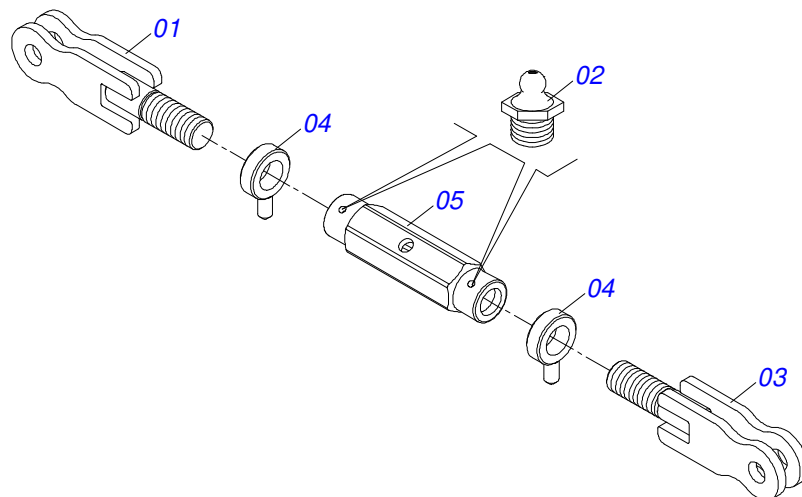


Item	Code	Description	See page	QT
01	0521066300	RIGHT TURNBUCKLE		01
02	0503010002	1800 GREASE FITTING		02
03	0521066301	LEFT TURNBUCKLE		01
04	0541018672	COUNTERNUT		01
05	0502011195	ADJUSTMENT NUT BODY		01

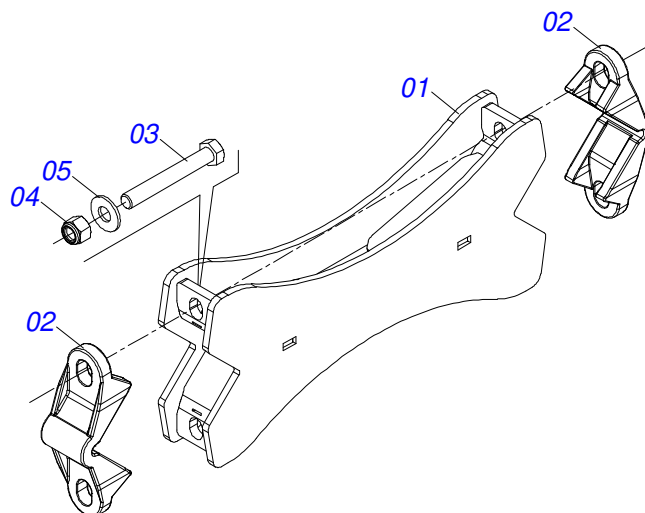

Item	Code	Description	See page	QT
01	0521067716	FIXER TUBE		01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
03	0503016485	BOLT 3/4		04
04	0503010152	3/4" SELF LOCKING NUT		04
05	0501010322	FLAT WASHER		04

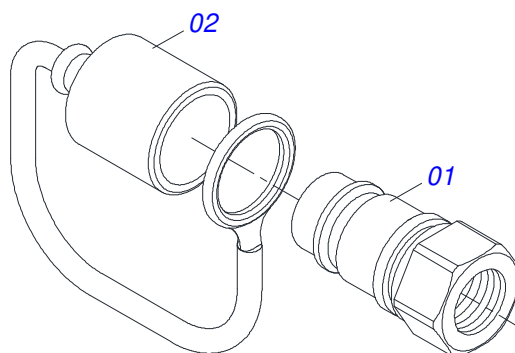

Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

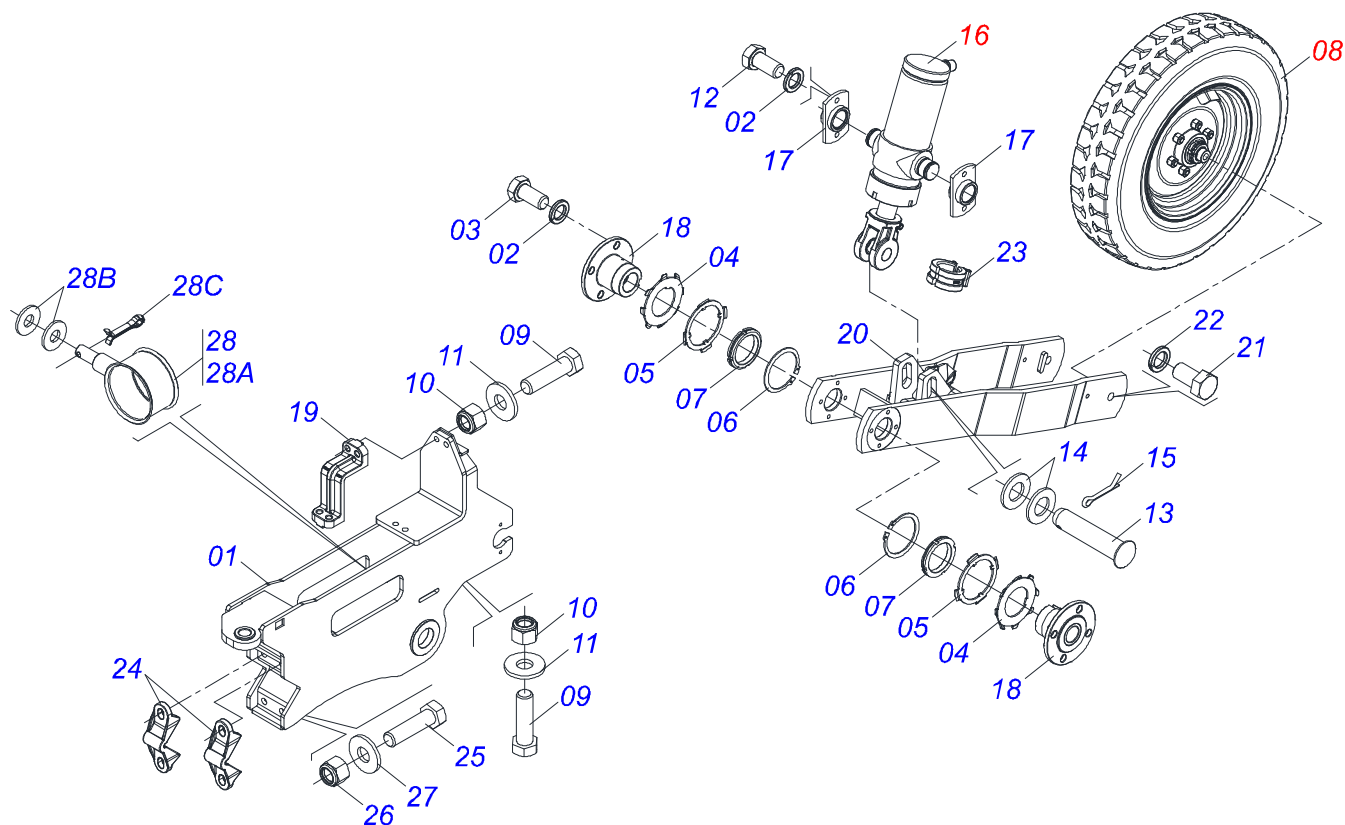


Item	Code	Description	See page	QT
01	0531064429	RIGHT WHEEL SUPPORT WITHOUT TRANSMISSION		01
02	0503010019	1/2" SPRING WASHER		12
03	0503013232	1/2" BOLT		08
04	0561013021	BEARING INNER LOCK		02
05	0561013022	BEARING EXTERNAL LOCK		02
06	0503010398	501082 CLAMPING RING (FOR AXLE)		02
07	0561013020	KM 12 NUT		02
08	0521057818	WHEEL WITH TIRE 7.00 X 16 14L ASSY WITHOUT TRANSMISSION	19	01
09	0503017857	BOLT 5/8 UNF 4		04
10	0503010811	5/8" UNF SELF ADJUSTING NUT		04
11	0501012140	FLAT WASHER		04
12	0503010834	1/2 X 1 BOLT		04
13	0521010546	1.2" X 5.7" COUPLING SHAFT		01
14	0501017779	32 X 60 X 4.75 FLAT WASHER		02
15	0503010523	1/4" X 2" SPLIT PIN		01
16	0541051942	44,45 X 85,72 X 202 X 384 HYDRAULIC CYLINDER	22	01
17	0501110968	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		02
18	0591010098	ARTICULATED BEARING WHEELED WITHOUT TRANSMISSION WITHOUT LUBRICATION		02
19	0502012720	WHEEL SUPPORT FIXER		01
20	0531060798	CENTRAL WHEEL FORK WITHOUT TRANSMISSION		01
21	0503012419	7/8" X 2-3/4" BOLT		02
22	0503010408	7/8" SPRING WASHER		02
23	0501047888	45 ROD STOP		02
24	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
25	0503016485	BOLT 3/4		04
26	0503010152	3/4" SELF LOCKING NUT		04
27	0501010322	FLAT WASHER		04

Item	Code	Description	See page	QT
28	0541052001	HOSE SUPPORT GUIDE SET		01
28A	0531067119	PP SEED HOSE GUIDE		01
28B	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
28C	0503010071	3/16" X 1" SPLIT PIN		01

LEFT WHEEL ASSEMBLY WITHOUT TRANSMISSION

0541052000

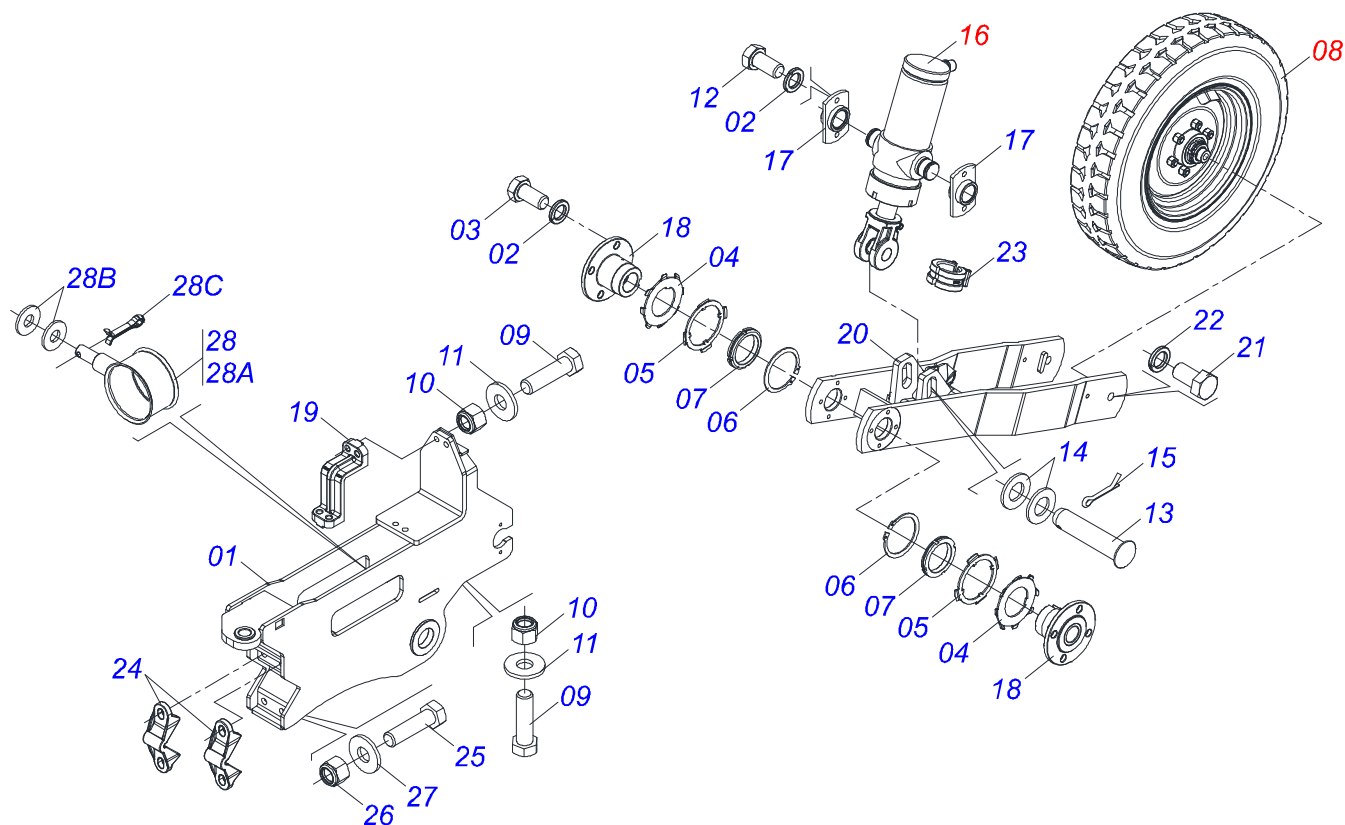


Item	Code	Description	See page	QT
01	0531064430	LEFT WHEEL SUPPORT WITHOUT TRANSMISSION	01	
02	0503010019	1/2" SPRING WASHER	12	
03	0503013232	1/2" BOLT	08	
04	0561013021	BEARING INNER LOCK	02	
05	0561013022	BEARING EXTERNAL LOCK	02	
06	0503010398	501082 CLAMPING RING (FOR AXLE)	02	
07	0561013020	KM 12 NUT	02	
08	0521057818	WHEEL WITH TIRE 7.00 X 16 14L ASSY WITHOUT TRANSMISSION	19	01
09	0503017857	BOLT 5/8 UNF 4	04	
10	0503010811	5/8" UNF SELF ADJUSTING NUT	04	
11	0501012140	FLAT WASHER	04	
12	0503010834	1/2 X 1 BOLT	04	
13	0521010546	1.2" X 5.7" COUPLING SHAFT	01	
14	0501017779	32 X 60 X 4.75 FLAT WASHER	02	
15	0503010523	1/4" X 2" SPLIT PIN	01	
16	0541051942	44,45 X 85,72 X 202 X 384 HYDRAULIC CYLINDER	22	01
17	0501110968	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION	02	
18	0591010098	ARTICULATED BEARING WHEELED WITHOUT TRANSMISSION WITHOUT LUBRICATION	02	
19	0502012720	WHEEL SUPPORT FIXER	01	
20	0531060798	CENTRAL WHEEL FORK WITHOUT TRANSMISSION	01	
21	0503012419	7/8" X 2-3/4" BOLT	02	
22	0503010408	7/8" SPRING WASHER	02	
23	0501047888	45 ROD STOP	02	
24	0502010584	CARRYING-WHEELS SUPPORT FIXER	02	
25	0503016485	BOLT 3/4	04	
26	0503010152	3/4" SELF LOCKING NUT	04	
27	0501010322	FLAT WASHER	04	
28	0541052001	HOSE SUPPORT GUIDE SET	01	



COP TRIO 650 SUPREMA P.P MINI HOPPER - FRAME 8450 -
LEFT WHEEL ASSEMBLY WITHOUT TRANSMISSION

Page 17
0541052000

Item	Code	Description	See page	QT
28A	0531067119	PP SEED HOSE GUIDE		01
28B	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
28C	0503010071	3/16" X 1" SPLIT PIN		01

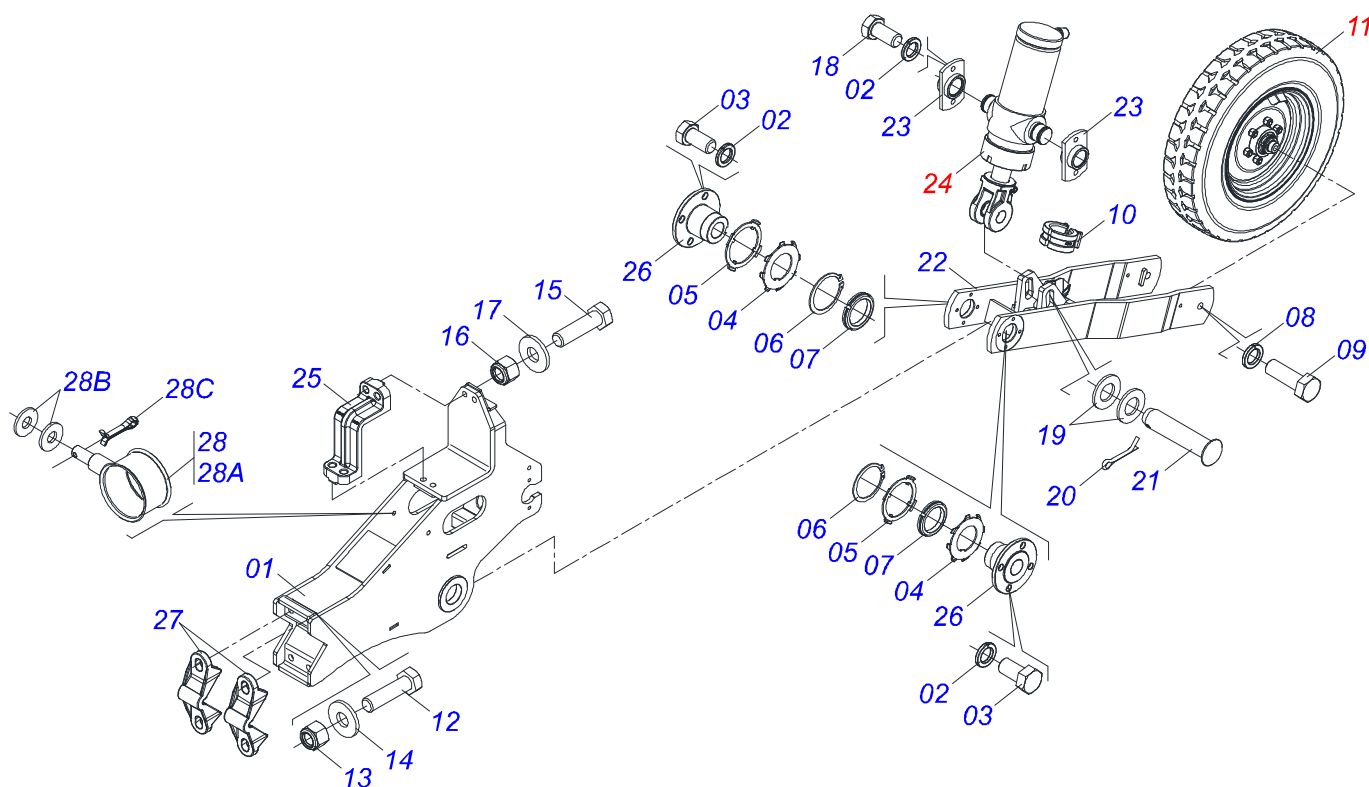


Item	Code	Description	See page	QT
01	0531060795	WHEEL SUPPORT	01	
02	0503010019	1/2" SPRING WASHER	13	
03	0503013232	1/2" BOLT	08	
04	0561013021	BEARING INNER LOCK	02	
05	0561013022	BEARING EXTERNAL LOCK	02	
06	0503010398	501082 CLAMPING RING (FOR AXLE)	02	
07	0561013020	KM 12 NUT	02	
08	0503010408	7/8" SPRING WASHER	02	
09	0503012419	7/8" X 2-3/4" BOLT	02	
10	0501047888	45 ROD STOP	02	
11	0521057818	WHEEL WITH TIRE 7.00 X 16 14L ASSY WITHOUT TRANSMISSION	01	
12	0503016485	BOLT 3/4	04	
13	0503010152	3/4" SELF LOCKING NUT	04	
14	0501010322	FLAT WASHER	04	
15	0503017857	BOLT 5/8 UNF 4	04	
16	0503010811	5/8" UNF SELF ADJUSTING NUT	04	
17	0501012140	FLAT WASHER	04	
18	0503010834	1/2 X 1 BOLT	05	
19	0501017779	32 X 60 X 4.75 FLAT WASHER	02	
20	0503010523	1/4" X 2" SPLIT PIN	01	
21	0521010546	1.2" X 5.7" COUPLING SHAFT	01	
22	0531060798	CENTRAL WHEEL FORK WITHOUT TRANSMISSION	01	
23	0501110968	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION	02	
24	0541051942	44,45 X 85,72 X 202 X 384 HYDRAULIC CYLINDER	22	01
25	0502010584	CARRYING-WHEELS SUPPORT FIXER	02	
26	0591010098	ARTICULATED BEARING WHEELED WITHOUT TRANSMISSION WITHOUT LUBRICATION	02	
27	0502012720	WHEEL SUPPORT FIXER	01	
28	0541052001	HOSE SUPPORT GUIDE SET	01	




**COP TRIO 650 SUPREMA P.P MINI HOPPER - FRAME 8450 -
WHEEL SET WITHOUT TRANSMISSION**

Page 18
0541052003

Item	Code	Description	See page	QT
28A	0531067119	PP SEED HOSE GUIDE		01
28B	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
28C	0503010071	3/16" X 1" SPLIT PIN		01

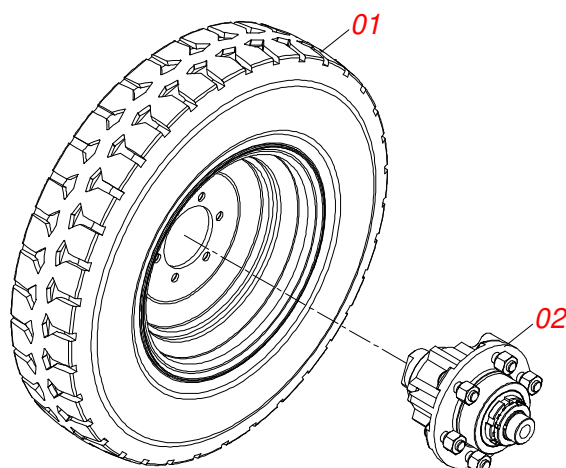


Item	Code	Description	See page	QT
01	0503063073	EE WHEEL WITH TIRE 7.00 X 16 14L ASSEMBLY	20	01
02	0521057819	ASSY WHEEL HUB WITHOUT TRANSMISSION	21	01

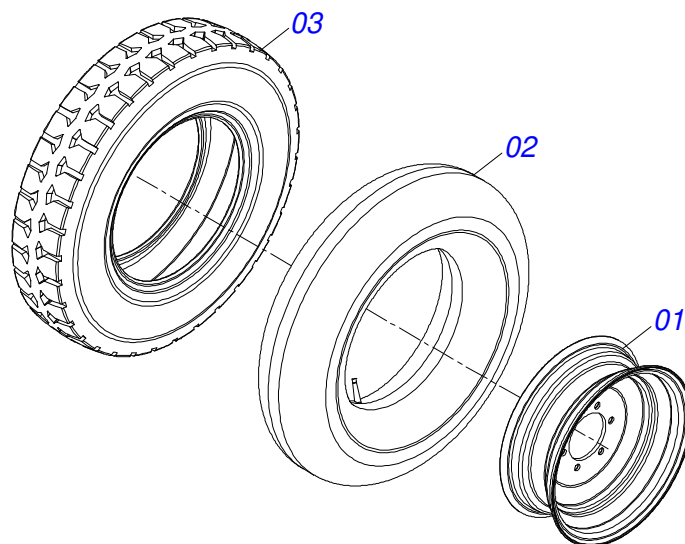


Item	Code	Description	See page	QT
01	0503016518	WHEEL		01
02	0503010033	7.50 X 16 INNER TIRE		01
03	0503019458	TIRE 7.00X16 14PR		01

ASSY WHEEL HUB WITHOUT TRANSMISSION


0521057819

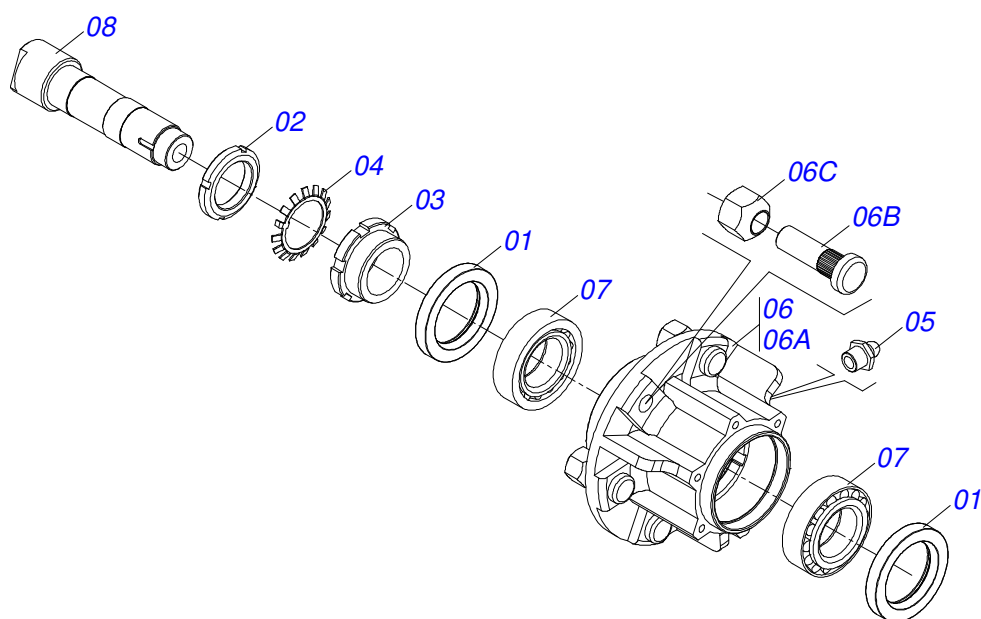


Item	Code	Description	See page	QT
01	0503010804	00547-B SEAL		02
02	0503010330	KM 9 LOCKNUT		01
03	0511015949	LOCK NUT		01
04	0503010329	LOCK WASHER		01
05	0503010002	1800 GREASE FITTING		01
06	0501110721	WHEEL HUB WITH SCREW / NUTS		01
06A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
06B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
06C	0503016516	5/8 UNF CONIC NUT		06
07	0503019364	25590/25523 ROLLER BEARING		02
08	0591013435	TRANSMISSION WHEEL AXLE		01

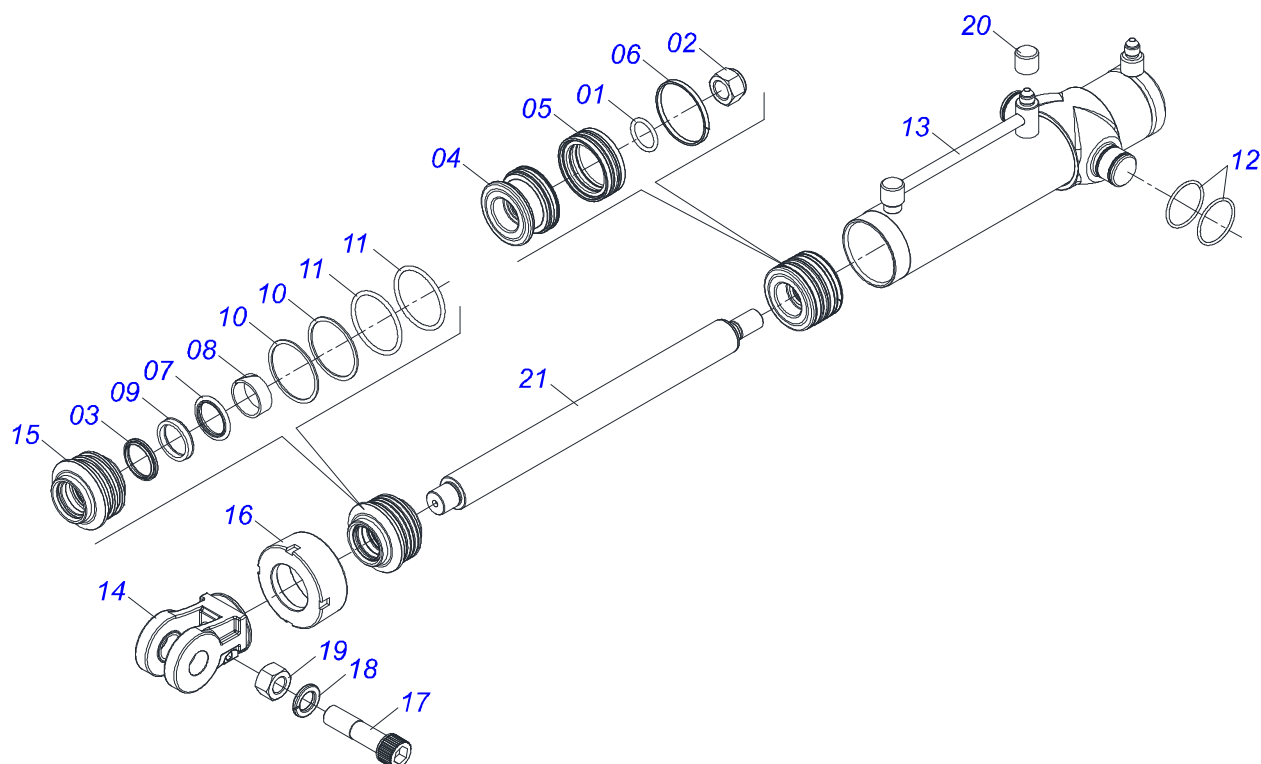


Item	Code	Description	See page	QT
01	0503010042	2-214 N 3006-9B O'RING		01
02	0503010063	1" SELF-ALIGNING NUT		01
03	0503010761	D-1750 SCRAPER RING		01
04	0571019710	1.7" X 3.4" PISTON		01
05	0503017935	RING		01
06	0503018144	RING		01
07	0503017936	RING		01
08	0503017938	RING GUIDE		01
09	0503017937	GASKET		01
10	0503017940	8-337 BACK-UP RING		02
11	0503017939	2-337 N 3006-9B O' RING		02
12	0503018045	2-130 (AGEL) O'RING		04
13	0531067085	CYLINDER BARREL		01
14	0511064408	FORK		01
15	0501315493	RING SUPPORT 44.45 X 85.72		01
16	0501315497	LIDE		01
17	0503011094	3/8" X 2" BOLT		01
18	0503010025	3/8 SPRING WASHER		01
19	0503010026	3/8" NUT		01
20	0503030385	CYLINDER PLUG N-002		02
21	0501315490	EXTENDER 44.45 X 358		01

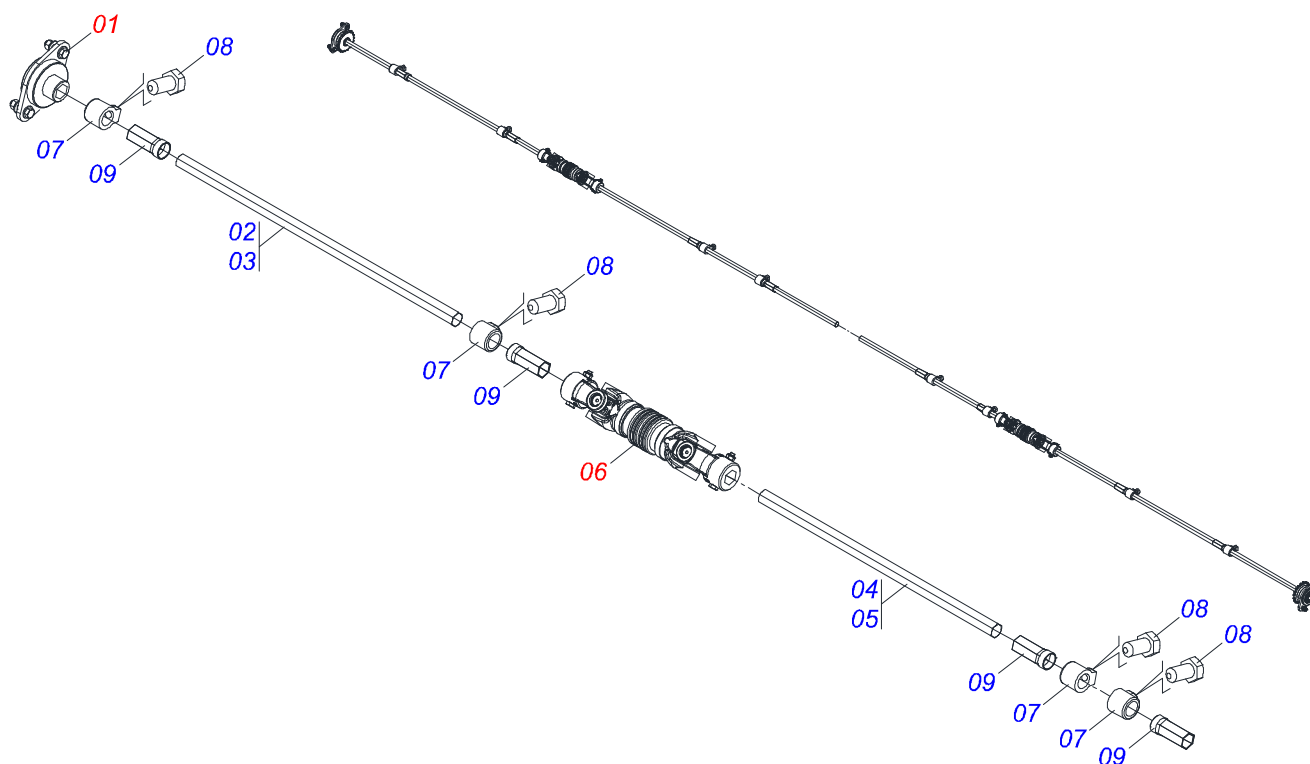


Item	Code	Description	See page	QT
01	0541052018	BEARING WITH HEXA GOVE	24	02
02	0591010724	HEX AXLE 3/4 X 2277		01
03	0591010722	HEX AXLE 3/4 X 2397		01
04	0591010721	HEX AXLE 3/4 X 1250		01
05	0591010723	HEX AXLE 3/4 X 1770		01
06	0521056144	INTERMEDIATE SEED TRANSMISSION	26	02
07	0511063123	BUSHING WITH NUT		08
08	0501018535	1/2 X 1 BOLT		08
09	0581015056	SLEEVE		08

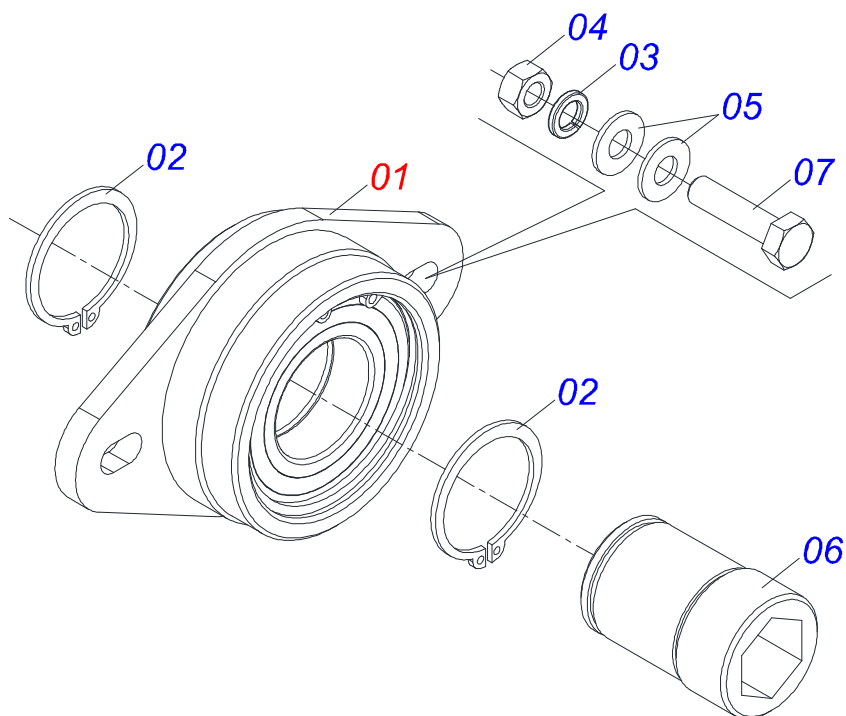


Item	Code	Description	See page	QT
01	0521055498	SEED TRANSMISSION DOUBLE BEARING	25	01
02	0503010707	501030 CLAMPING RING (FOR AXLE)		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	5/16" NUT		02
05	0501010694	FLAT WASHER		04
06	0591010686	19,80/20,00 X 48,5 HEX AXLE BODY		01
07	0503018441	5/16" X 1-1/4" BOLT		02

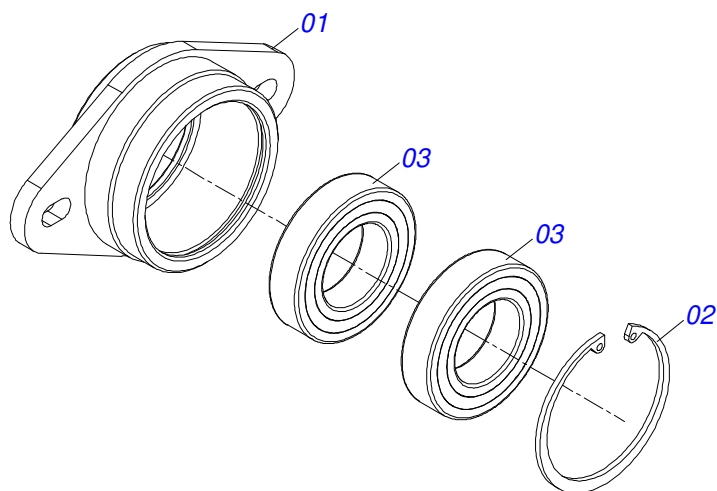


Item	Code	Description	See page	QT
01	0502012031	HOUSING BEARING		01
02	0503012858	502075 CLAMPING RING (FOR HOLE)		01
03	0503019373	6006 2RS1 NATIONAL BEARING		02

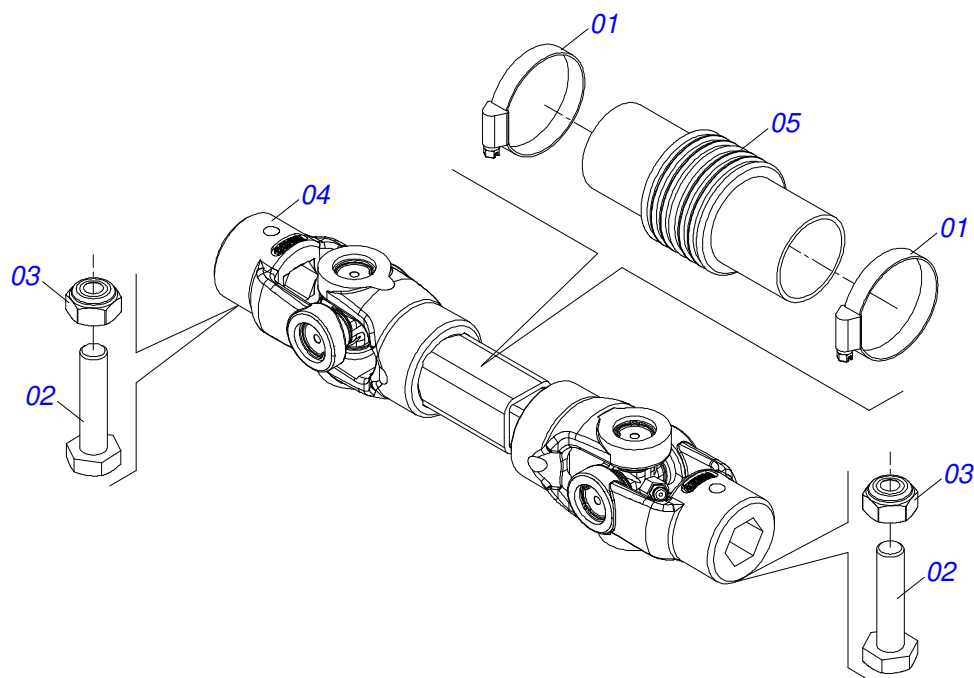


Item	Code	Description	See page	QT
01	0503010243	CLAMP		02
02	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
03	0503012880	1/4" UNC SELF ADJUSTING NUT		02
04	0503063012	SEED TRANSMISSION SHAFT HEX 3/4		01
05	0503034773	HOSE 1.1/2 X 1.1/2 X 120		01

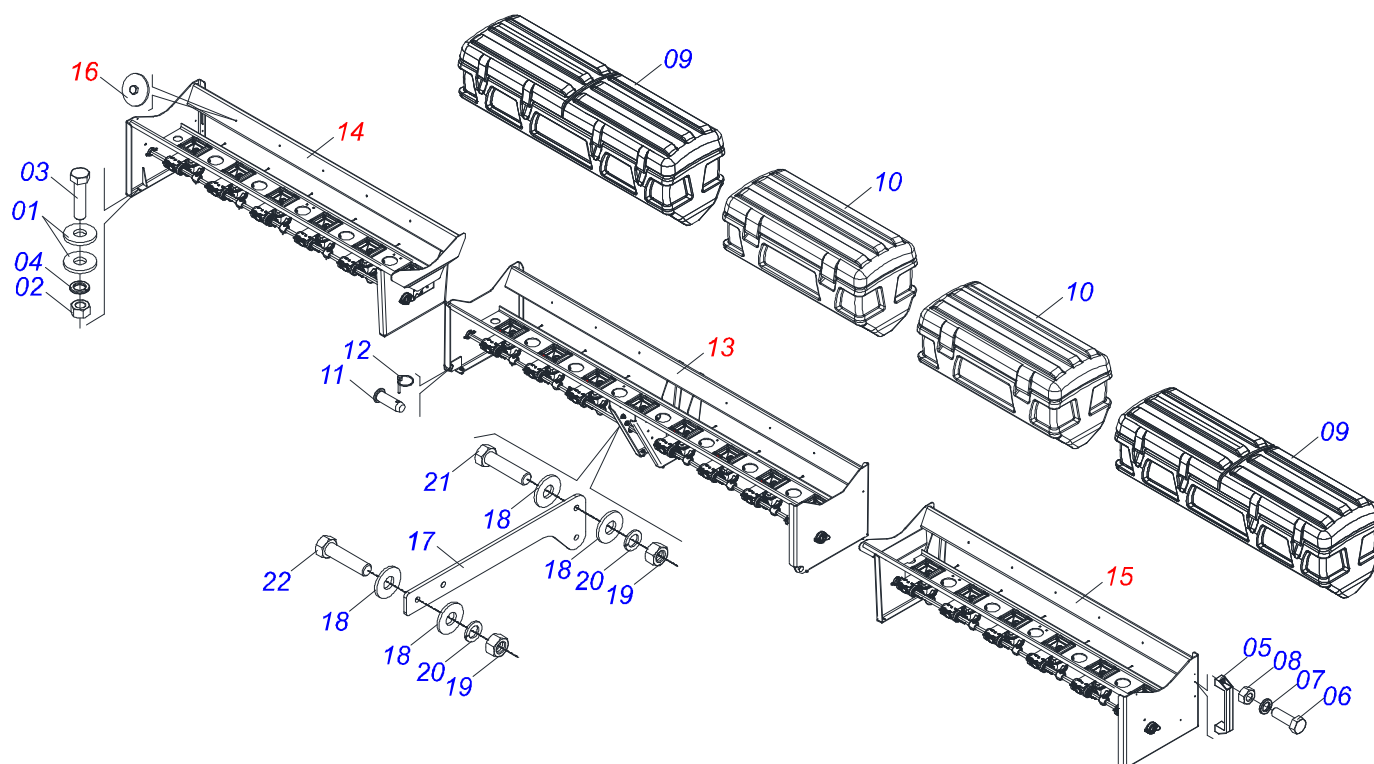

Item	Code	Description	See page	QT
01	0501010984	10,50 X 27 X 3,00 FLAT WASHER		32
02	0503010026	3/8" NUT		16
03	0503010849	3/8" X 1-1/2" BOLT		16
04	0503010025	3/8 SPRING WASHER		16
05	0503011957	NYLON HANDLE		02
06	0503010371	5/16" X 1" BOLT		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04
09	0503062589	FERTILIZER HOPPER MOUNTED		02
10	0503062362	FERTILIZER HOPPER		02
11	0521010572	0.9" X 2.9" COUPLING SHAFT		02
12	0503030085	LOCK PIN		02
13	0541051996	CENTRAL SUPPORT FERTILIZER SILO WITH 28 DOSER		01
14	0541051997	RIGHT FERTILIZER SILO SUPPORT WITH DOSER	29	01
15	0541051998	LEFT FERTILIZER SILO SUPPORT	30	01
16	0521051407	FERTILIZER HOPPER FIXER		32
17	0501315607	TRANSPORT LOCK		01
18	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
19	0503010060	1/2 UNC G.5 ZN HEX NUT		04
20	0503010019	1/2" SPRING WASHER		04
21	0501010063	1/2" X 1-1/2" BOLT		02
22	0501010077	1/2" X 2" BOLT		02

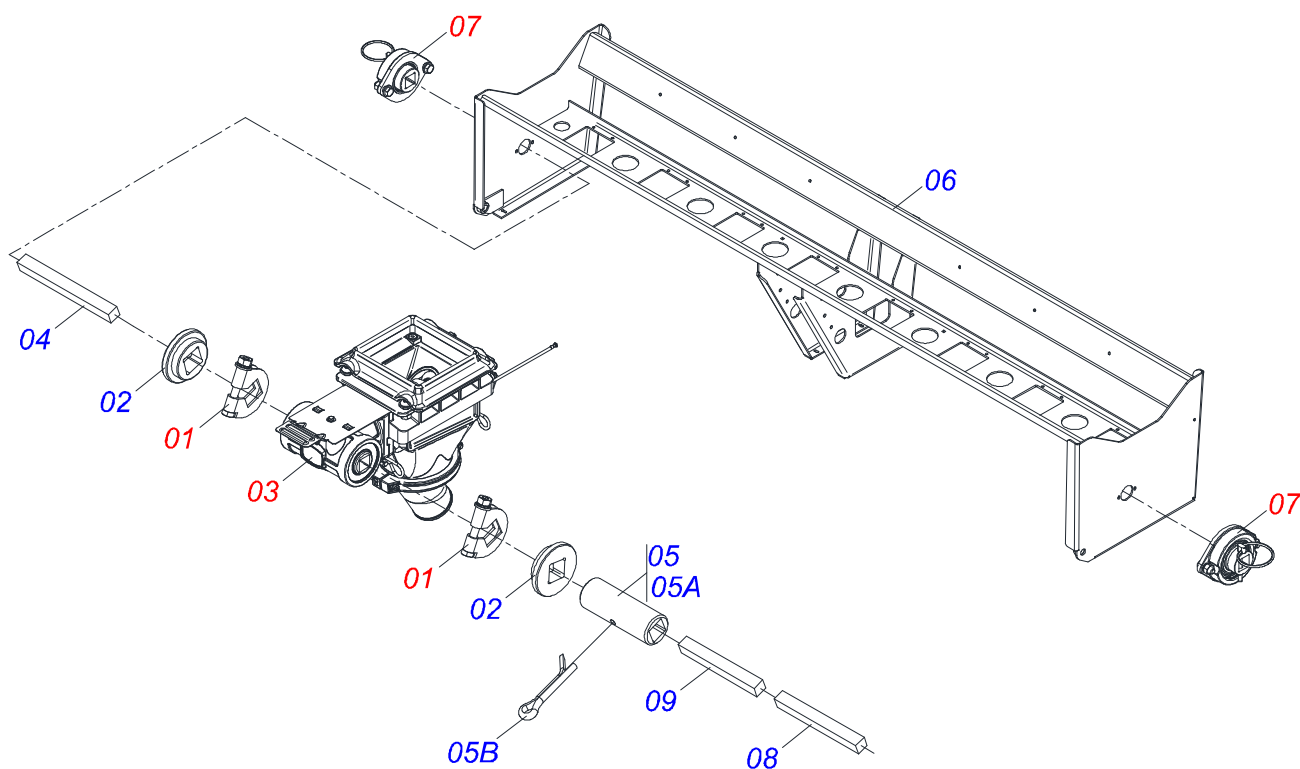


Item	Code	Description	See page	QT
01	0501053788	3/4" SQUARE AXLE FASTENER	31	04
02	0503031527	AGRICULTURAL BEARING		04
03	0531059144	FERTILIZER DOSER ALPHA II	32	08
04	0501310661	3/4" X 15,35"/15,27" AXLE		04
05	0531057908	SLEEVE 1/4 X 2		06
05A	0502013069	SLEEVE 21 X 38 X 50		01
05B	0503010010	1/4" X 2.1/2" SPLIT PIN		01
06	0531067116	CENTRAL SUPPORT FERTILIZER SILO		01
07	0531057978	SIDE BEARING WITH TRANSMISSION	37	02
08	0501315621	3/4 X 448/450 AXLE		02
09	0501314611	3/4 X 800 SQUARE AXIS		01

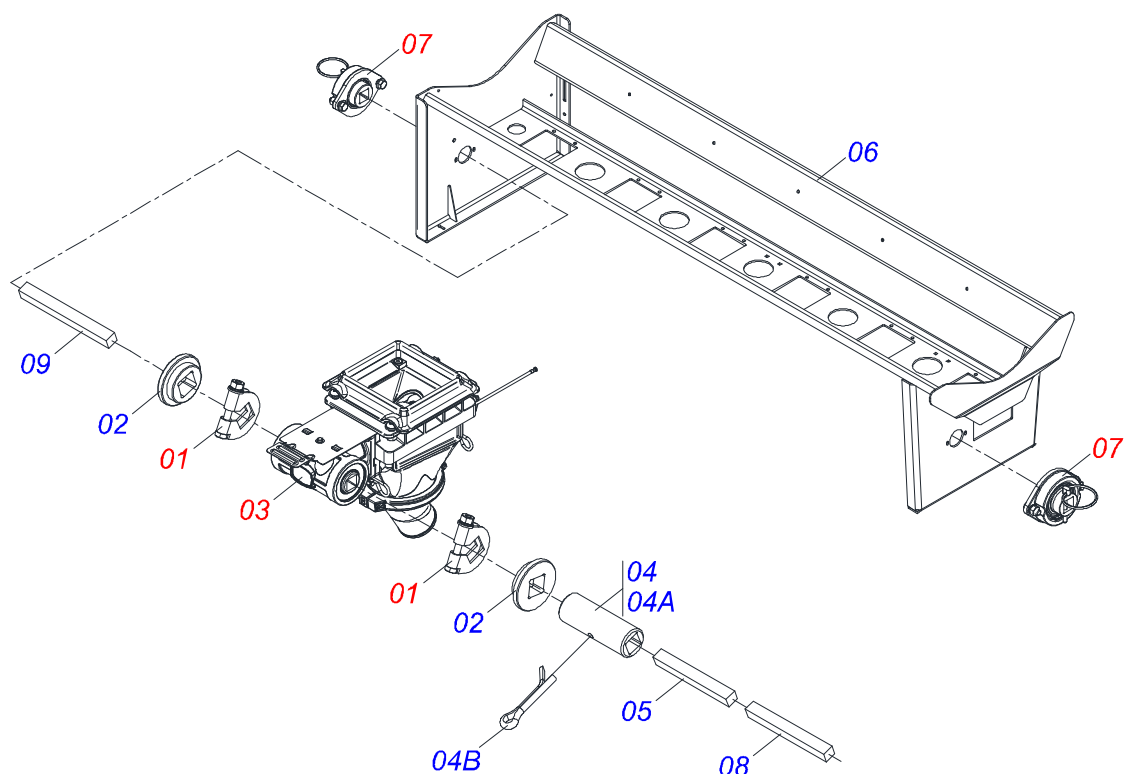


Item	Code	Description	See page	QT
01	0501053788	3/4" SQUARE AXLE FASTENER	31	03
02	0503031527	AGRICULTURAL BEARING		03
03	0531059144	FERTILIZER DOSER ALPHA II	32	06
04	0531057908	SLEEVE 1/4 X 2		04
04A	0502013069	SLEEVE 21 X 38 X 50		01
04B	0503010010	1/4" X 2.1/2" SPLIT PIN		01
05	0501310661	3/4" X 15,35"/15,27" AXLE		03
06	0531067117	FERTILIZER SILO RIGHT SUPPORT		01
07	0531057978	SIDE BEARING WITH TRANSMISSION	37	02
08	0501315627	3/4 X 743/745 AXIS		01
09	0501315629	3/4 X 463/465 AXIS		01

LEFT FERTILIZER SILO SUPPORT


0541051998

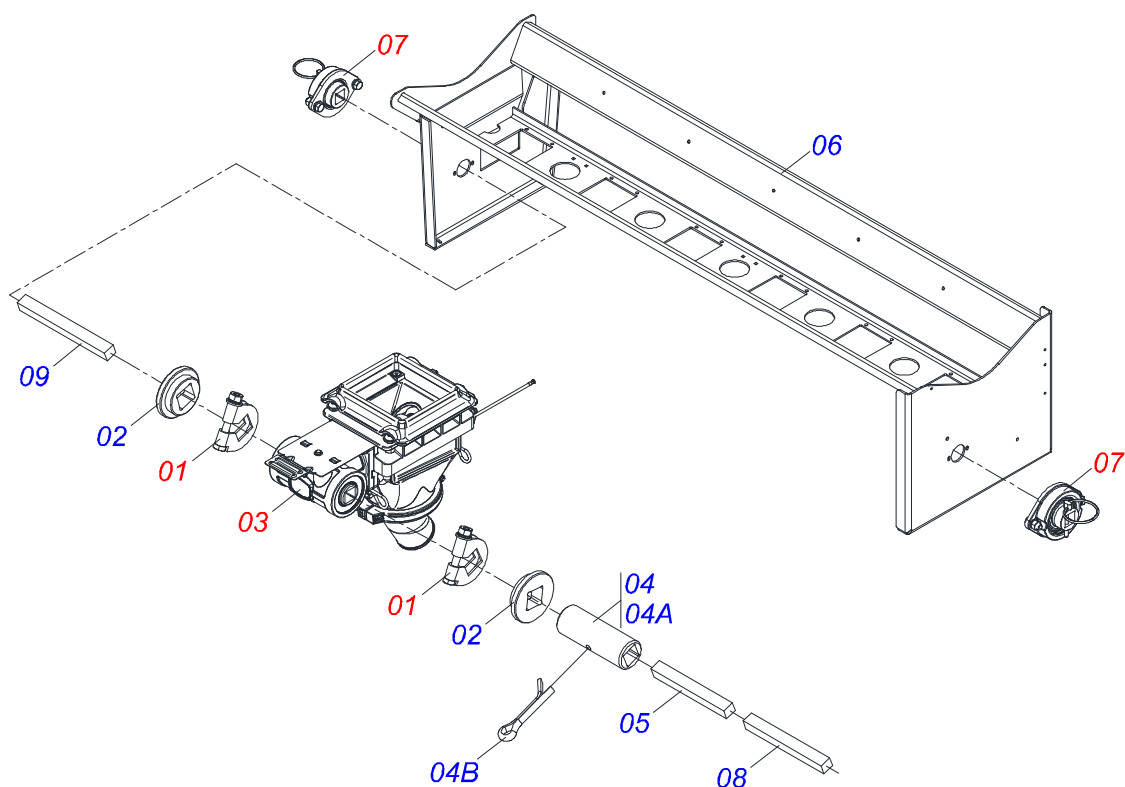

Item	Code	Description	See page	QT
01	0501053788	3/4" SQUARE AXLE FASTENER	31	02
02	0503031527	AGRICULTURAL BEARING		02
03	0531059144	FERTILIZER DOSER ALPHA II	32	06
04	0531057908	SLEEVE 1/4 X 2		04
04A	0502013069	SLEEVE 21 X 38 X 50		01
04B	0503010010	1/4" X 2.1/2" SPLIT PIN		01
05	0501310661	3/4" X 15,35"/15,27" AXLE		03
06	0531067118	FERTILIZER SILO LEFT SUPPORT		01
07	0531057978	SIDE BEARING WITH TRANSMISSION	37	02
08	0501315629	3/4 X 463/465 AXIS		01
09	0501315627	3/4 X 743/745 AXIS		01

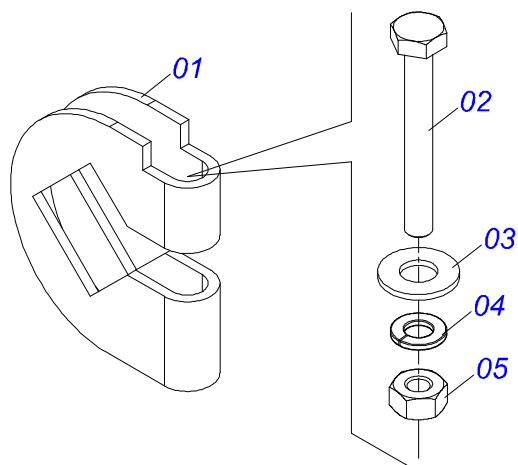

Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

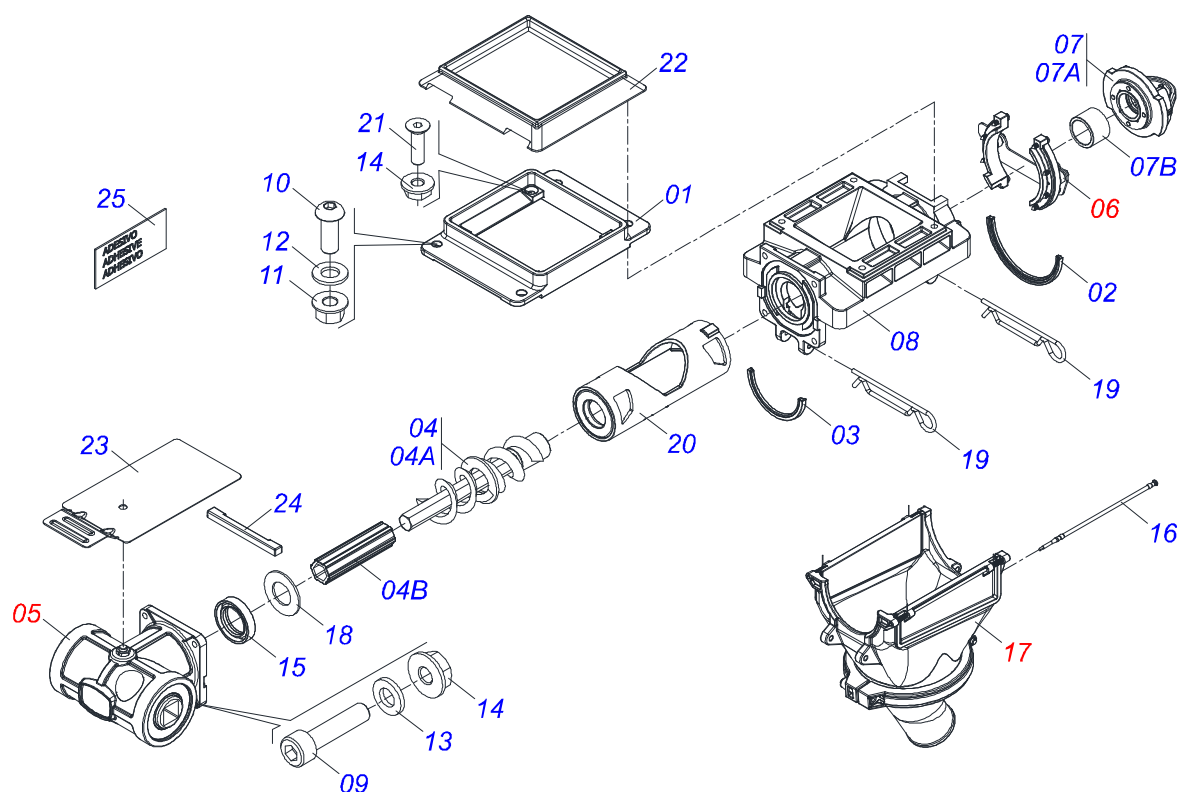


Item	Code	Description	See page	QT
01	0503035913	METERING BODY FIXING ADAPTER		01
02	0503035911	REAR COLLECTOR SEAL		01
03	0503035912	FRONT COLLECTOR SEAL		01
04	0531055518	WORM THREAD ASSEMBLED		01
04A	0531064265	WORM THREAD		01
04B	0503035859	SUPPORT SLEEVE		01
05	0531055863	TRANSMISSION HUB ASSY	33	01
06	0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	34	01
07	0501111134	LID WITH ALPHA FERTILIZER METERING GUIDE SLEEVE		01
07A	0503063799	LID WITH FERTILIZER METERING WASHER ALPHA		01
07B	0503035822	GUIDE SLEEVE SPRING CONDUCTOR		01
08	0501214337	FERTILIZER METERING BOX		01
09	0513011169	ALLEN SCREW 1/4 UNC X 1 CCSI STAINLESS STEEL		04
10	0513011172	ALLEN SCREW 3/8 UNC X 1 CASI STAINLESS STEEL		04
11	0513011173	NUT 3/8 UNC X 1		04
12	0513011174	FLAT WASHER 10.50 X 20 X 2.00 STAINLESS STEEL		05
13	0513011167	FLAT WASHER 6.4 X 12 X 1.60 STAINLESS STEEL		04
14	0513011171	1/4 NC HEX NUT		08
15	0503036181	30 X 47 X 6.50 SEAL SUPPLEMENT		01
16	0503036177	LID CORD		01
17	0531059138	COMPLETE COLLECTOR	35	01
18	0501310274	FLAT WASHER 46.10 X 32 X 0.80		01
19	0503035797	FRONT COLLECTOR FIXER		02
20	0501111195	GRANULATED FERTILIZER COATING		01
21	0513010692	ALLEN SCREW 1/4 UNC X 7/8 C FLAT SI INOX		04
22	0503036306	FERTILIZER DOSER SEAL		01
23	0501312601	FRONT COVER		01
24	0501312603	FRAME SEALING TAPE		01




**COP TRIO 650 SUPREMA P.P MINI HOPPER - FRAME 8450 -
FERTILIZER DOSER ALPHA II**

Page 32
0531059144


Item	Code	Description	See page	QT
25	0503036206			01

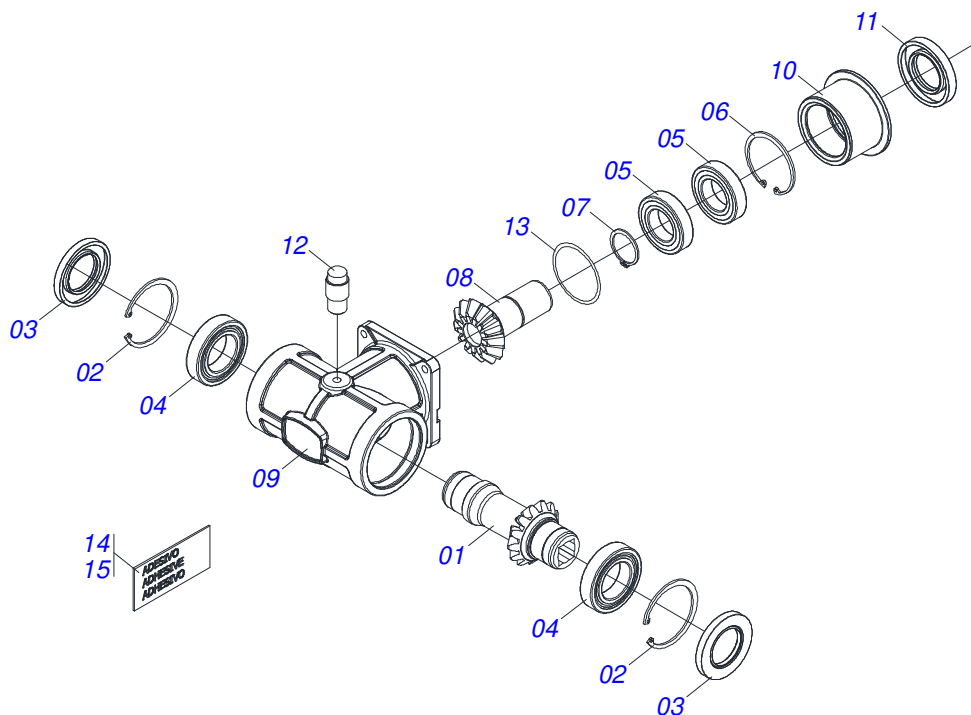


Item	Code	Description	See page	QT
01	0502013056	CONICAL PINION MOTOR 13Z ALPHA FERTILIZER METERING		01
02	0503011800	SEAL RING		02
03	0513010740	RETAINER 62 X 35 X 7 BRG 7159		02
04	0503016065	ROLLER BEARING		02
05	0503019373	6006 2RS1 NATIONAL BEARING		02
06	0503012858	502075 CLAMPING RING (FOR HOLE)		01
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01
08	0501111141	GEAR WITH ALPHA FERTILIZER METERING CAP		01
09	0501215105	METERING TRANSMISSION HUB		01
10	0501215104	TRANSMISSION HUB SLEEVE		01
11	0513011272	SEAL 7435-BRG 30 X 55 X 8.00MM		01
12	0501219613	FIXER BREATHER COVER		01
13	0513011248	RING RING 62.00 X 1.50		01
14	0503036071	TATU LOGO DECAL		01
15	0503035316	LUBRICATED POINTS DECAL		01

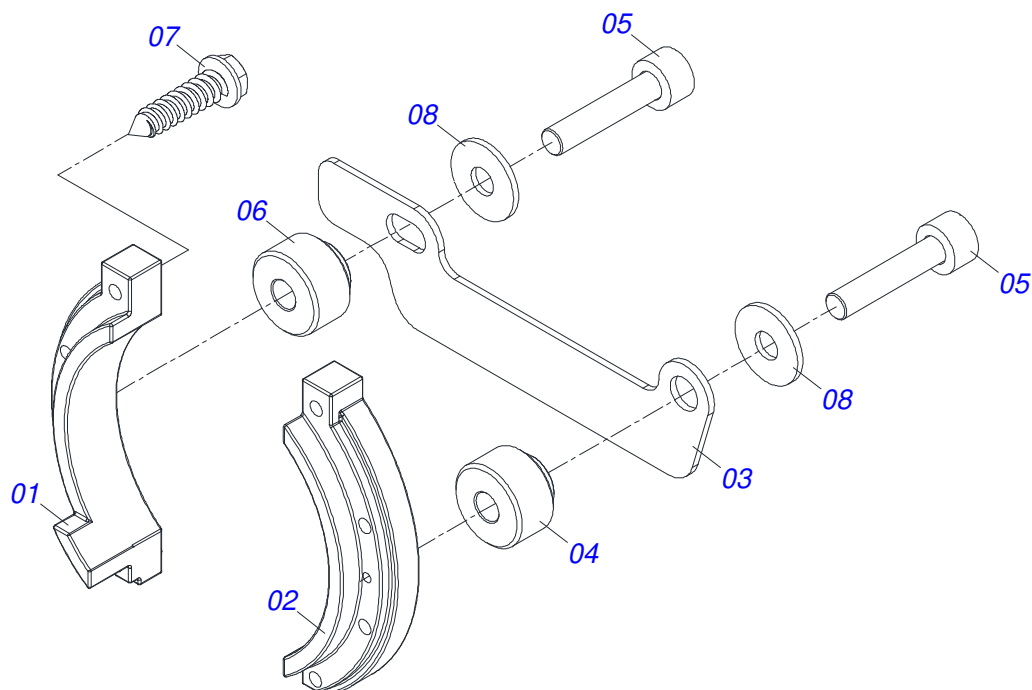


Item	Code	Description	See page	QT
01	0503035915	RIGHT FERTILIZER METERING LID GUIDE		01
02	0503035916	LEFT GUIDE DISPENSER COVER		01
03	0501310245	ALPHA FERTILIZER DISPENSER COVER LATCH		01
04	0501310247	LEFT SAFETY LOCK SLEEVE		01
05	0513011249	ALLEN SCREW M4 X 20 CCSI STAINLESS STEEL		02
06	0501310246	RIGHT SAFETY LOCK SLEEVE		01
07	0513011507	FLANGED HEX SCREW AT 3.5 X 19 STAINLESS STEEL		08
08	0513011518	FLAT WASHER M4 STAINLESS STEEL AISI 304 4.3 X 12 X 1 MM		01

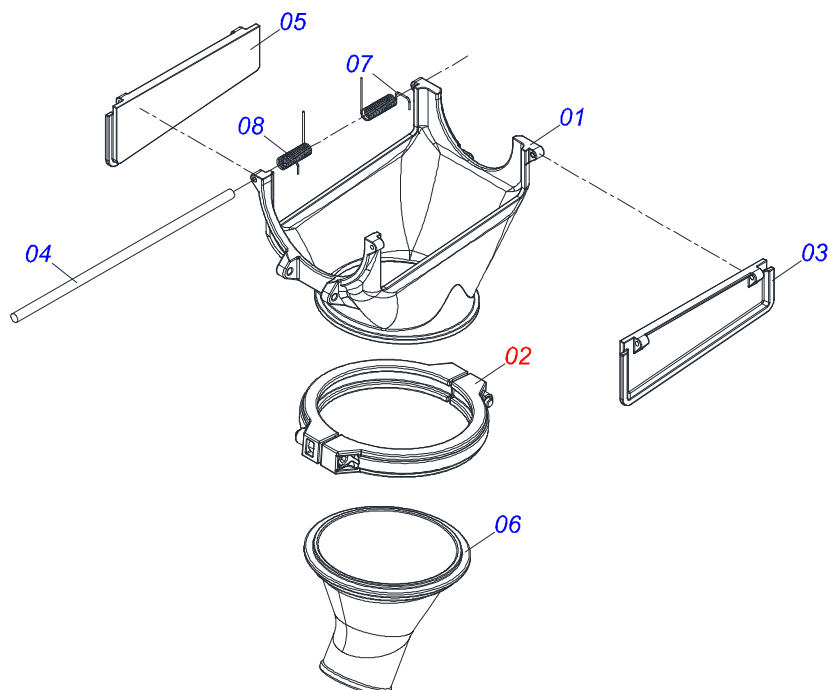


Item	Code	Description	See page	QT
01	0503036178	DISPENSER SIDE COVER COLLECTOR		01
02	0531055273	ALPHA FERTILIZER METERING CLAMP	36	01
03	0503036166	DISPENSER RIGHT SIDE COVER		01
04	0501219838	COLLECTOR SIDE LID AXLE		02
05	0503036167	DISPENSER LEFT SIDE COVER		01
06	0503036179	FERTILIZER DOSING NOZZLE		01
07	0503036202	LEFT TORSION SPRING SIDE COVER		02
08	0503036203	RIGHT TORSION SPRING DISPENSER SIDE COVER		02

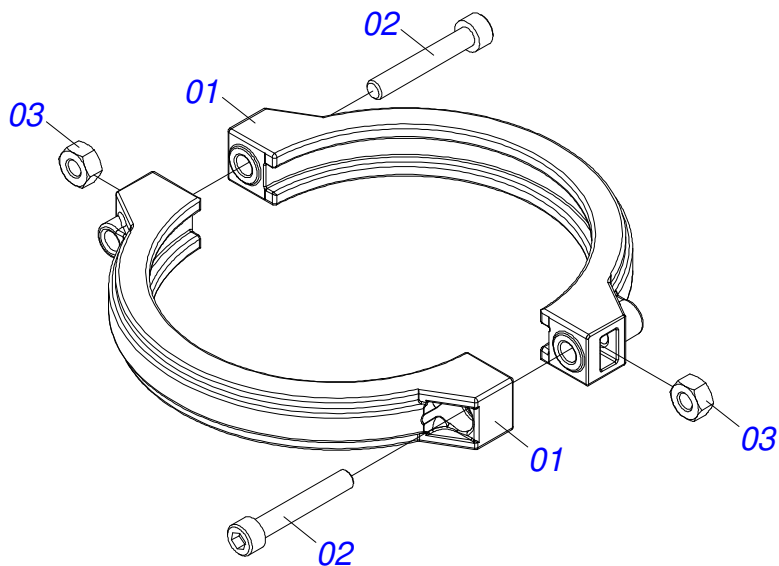


Item	Code	Description	See page	QT
01	0503035812	BODY CLAMP COLLECTOR FERTILIZER METERING ALPHA		02
02	0513010691	ALLEN SCREW 1/4 UNC X 1.1/2 CCSI INOX		02
03	0503012118	1/4" INOX NUT		02

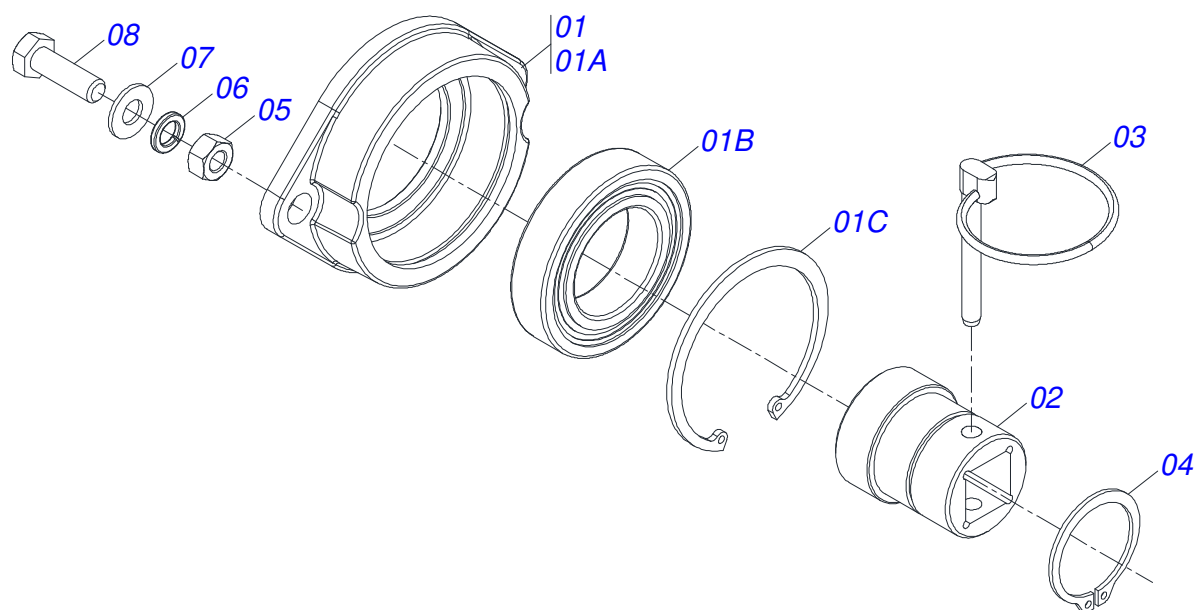


Item	Code	Description	See page	QT
01	0531057910	SIDE BEARING WITH BEARING 6007		01
01A	0502013070	SIDE FERTILIZER HOPPER SUPPORT BEARING		01
01B	0503016065	ROLLER BEARING		01
01C	0503011800	SEAL RING		01
02	0501218530	SIDE BEARING SHAFT BODY		01
03	0503030119	LOCK PIN		01
04	0503010845	501035 CLAMPING RING (FOR AXLE)		01
05	0503010337	5/16" NUT		02
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0501010694	FLAT WASHER		02
08	0503010371	5/16" X 1" BOLT		02

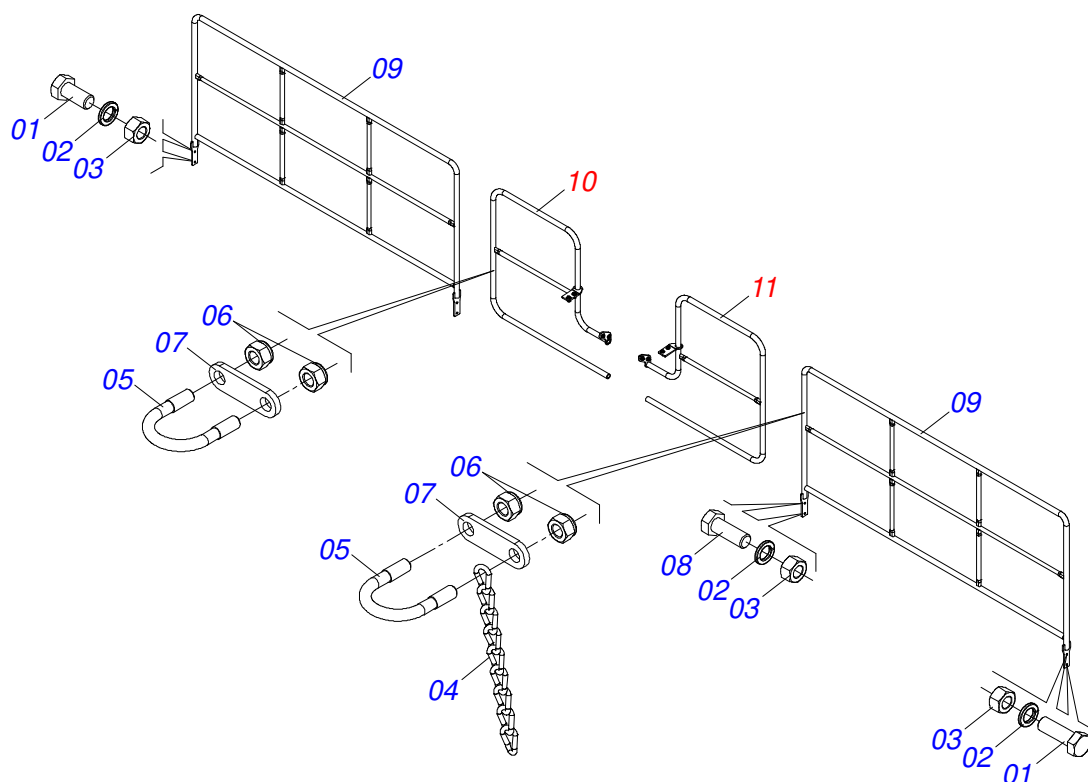


Item	Code	Description	See page	QT
01	0503011082	C1/2" X 1.3/4" SCREW		04
02	0503010019	1/2" SPRING WASHER		08
03	0503010060	1/2 UNC G.5 ZN HEX NUT		08
04	0503034094	22 TWISTED CHAIN		04
05	0551019884	45 X 50 X 3/8 FASTENER		08
06	0503013357	3/8 SELF-ADJUSTING NUT		16
07	0571017991	CHAIN FIXER HANDRAIL		08
08	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		04
09	0521067398	SIDE HANDRAIL		02
10	0521057334	ASSY RIGHT HANDRAIL - 7655/8450	39	01
11	0521057333	ASSY LEFT HANDRAIL - 7655/8450	40	01

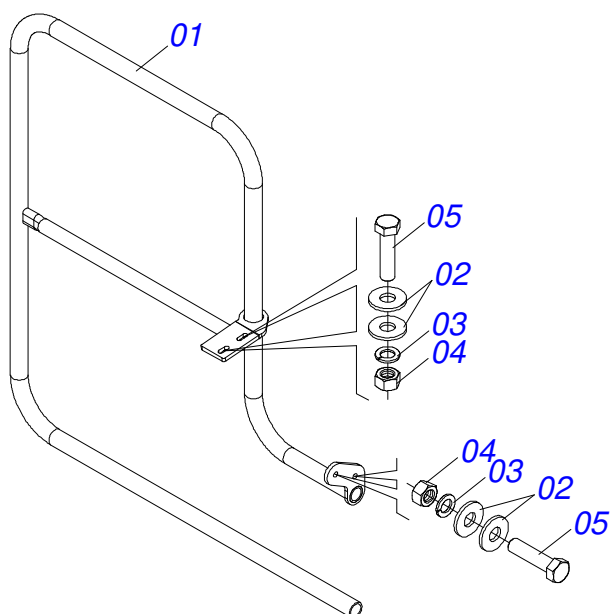


Item	Code	Description	See page	QT
01	0531060562	RIGHT CENTRAL CHAIN 7655/8450		01
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04

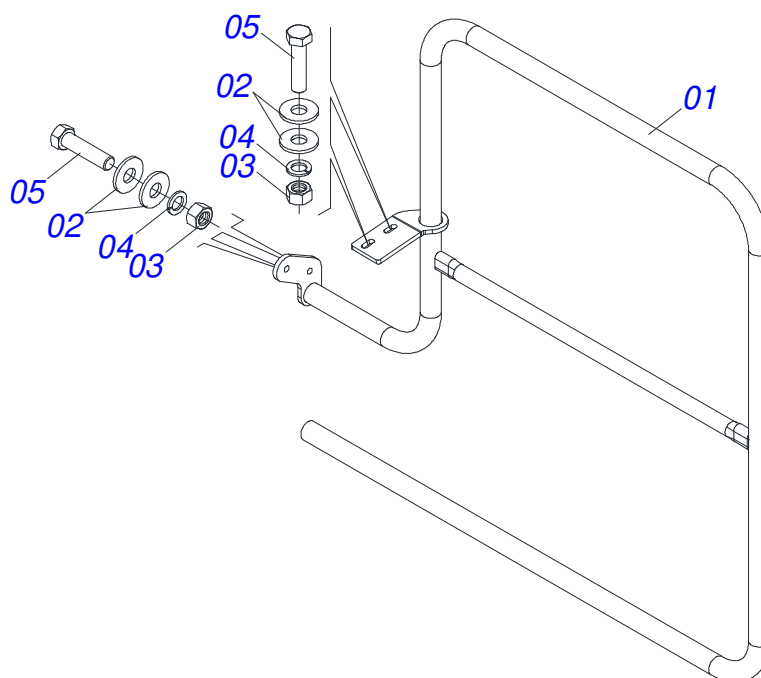


Item	Code	Description	See page	QT
01	0531060561	LEFT CENTRAL CHAIN 7655/8450		01
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
03	0503010026	3/8" NUT		04
04	0503010025	3/8 SPRING WASHER		04
05	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04

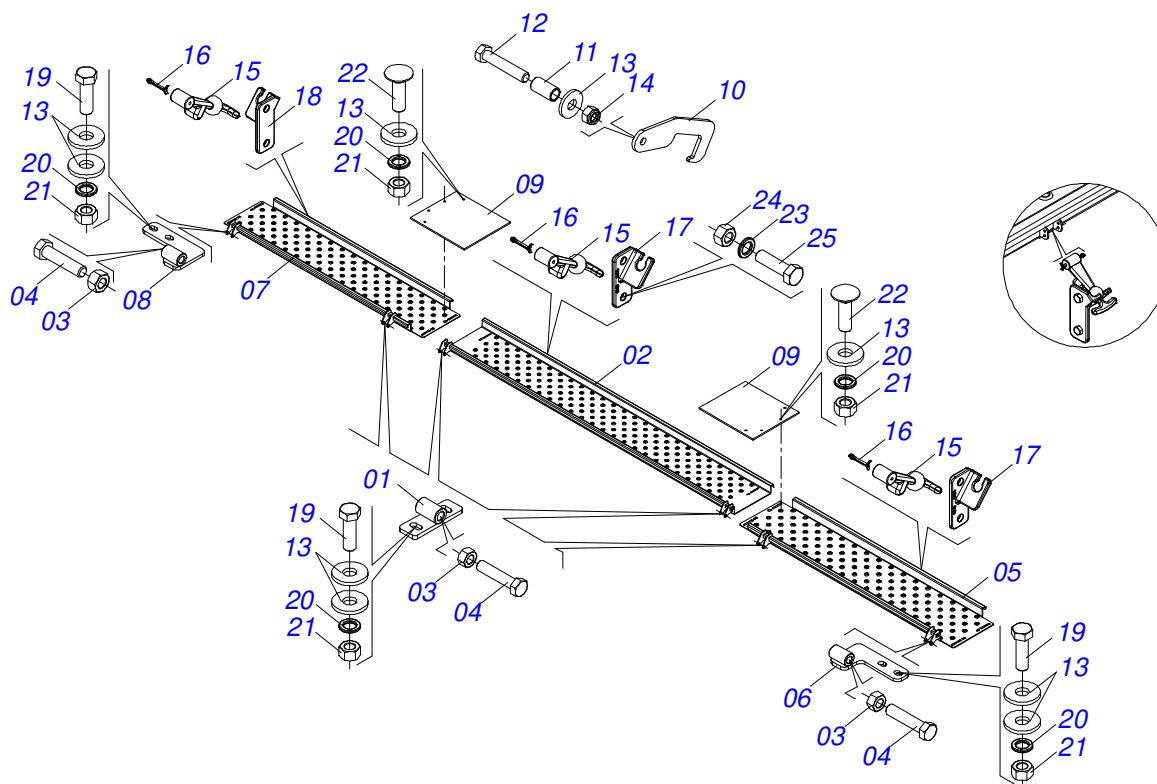


Item	Code	Description	See page	QT
01	0521067102	ARTICULATION CENTRAL PLATFORM		04
02	0531060020	CENTRAL PLATFORM 8450		01
03	0503011336	1/2" HEX SELF ADJUSTING NUT		06
04	0503010741	1/2" X 2-3/4" BOLT		06
05	0531060021	LEFT PLATFORM 8450		01
06	0521067104	LEFT SIDE ARTICULATION PLATFORM		01
07	0531060022	RIGHT PLATFORM 8450		01
08	0521067103	RIGHT SIDE ARTICULATION PLATFORM		01
09	0581012193	PLATFORM AMENDMENT PROTECTION		02
10	0551019115	LOCKING PLATFORM FIXATION		03
11	0571019831	X 0.2" SLEEVE		03
12	0501010096	3/8" X 2" BOLT		03
13	0501010984	10,50 X 27 X 3,00 FLAT WASHER		31
14	0503013357	3/8 SELF-ADJUSTING NUT		03
15	0503011333	COVER FIXER		03
16	0503010274	5/32" X 2" SPLIT PIN		03
17	1902012740	PLATFORM RIGHT FIXER SUPPORT		02
18	1902012739	PLATFORM LEFT FIXER SUPPORT		01
19	0503010849	3/8" X 1-1/2" BOLT		12
20	0503010025	3/8 SPRING WASHER		16
21	0503010026	3/8" NUT		16
22	0501010942	3/8" X 1-1/4" BOLT		04
23	0503010019	1/2" SPRING WASHER		02
24	0503010060	1/2 UNC G.5 ZN HEX NUT		02
25	0503011082	C1/2" X 1.3/4" SCREW		02

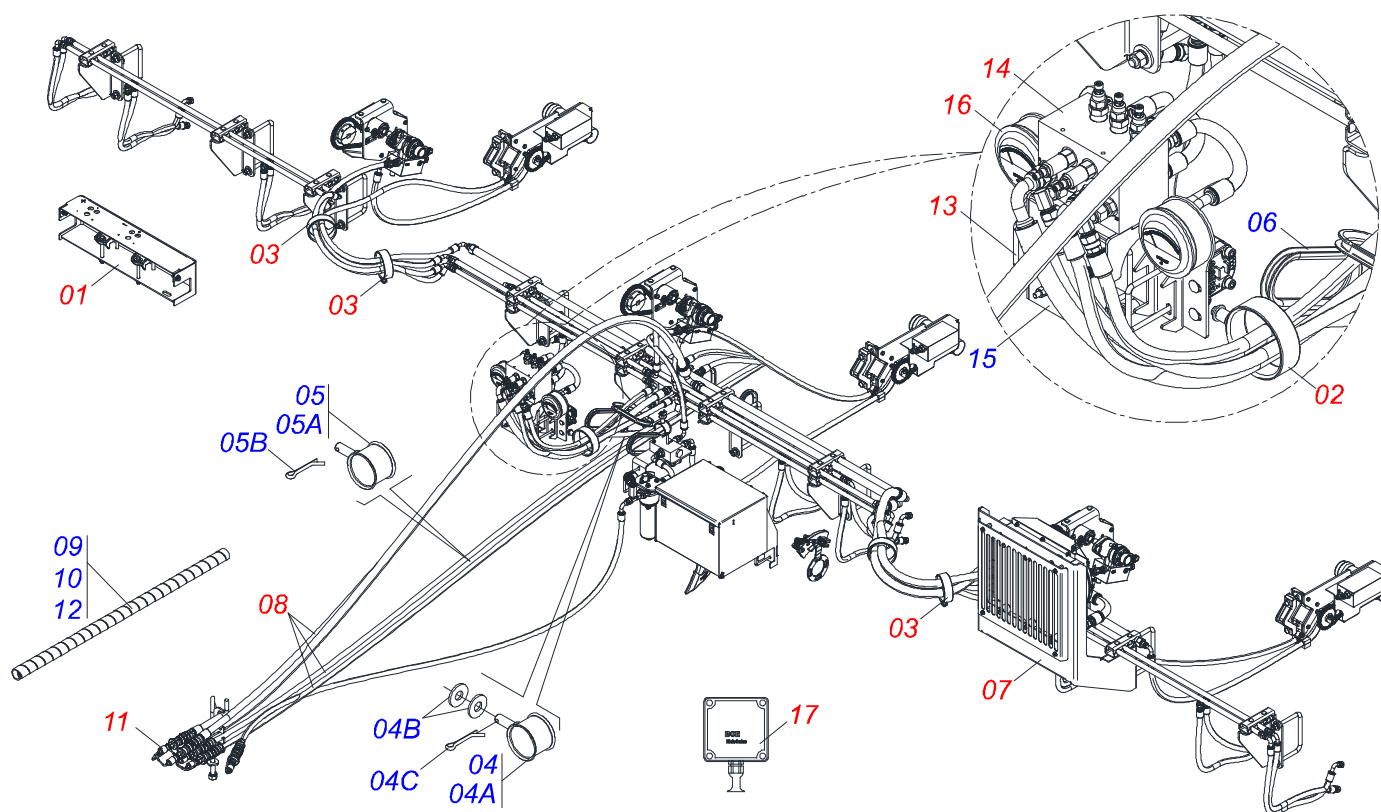


Item	Code	Description	See page	QT
01	0541052032	BLOCK VALVE SUPPORT	43	01
02	0541051984	FRONT ARTICULATOR	44	01
03	0541051983	HOSE SUPPORT ARTICULATOR	45	05
04	0541052001	HOSE SUPPORT GUIDE SET		02
04A	0531067119	PP SEED HOSE GUIDE		01
04B	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
04C	0503010071	3/16" X 1" SPLIT PIN		01
05	0531052953	TRANSMISSION CABLE GUIDE		02
05A	0531062742	CABLE GUIDE		01
05B	0503010071	3/16" X 1" SPLIT PIN		01
06	0503035505	HOSE PROTECTOR		05
07	0541052272	HEAT EXCHANGER ASSEMBLY	46	01
08	0541052275	ASSY HOSE GAME	53	01
09	0581010091	SPRING PROTECTION PLASTIC HOSE		01
10	0581012991	SPRING PROTECTION PLASTIC HOSE		01
11	0501053834	MALE QUICK COUPLER	15	02
12	0571017773	SPRING PROTECTION PLASTIC HOSE 3/4		01
13	0531067109	SUPPORT DIVIDER VALVE		01
14	0541051980	BLOCK ASSY	54	01
15	0531067108	COMMAND BLOCK SUPPORT		01
16	0541051982	TRIPLE ROTARY DIVIDER	56	01
17	0503064297	SWITCH ASSEMBLY	57	01

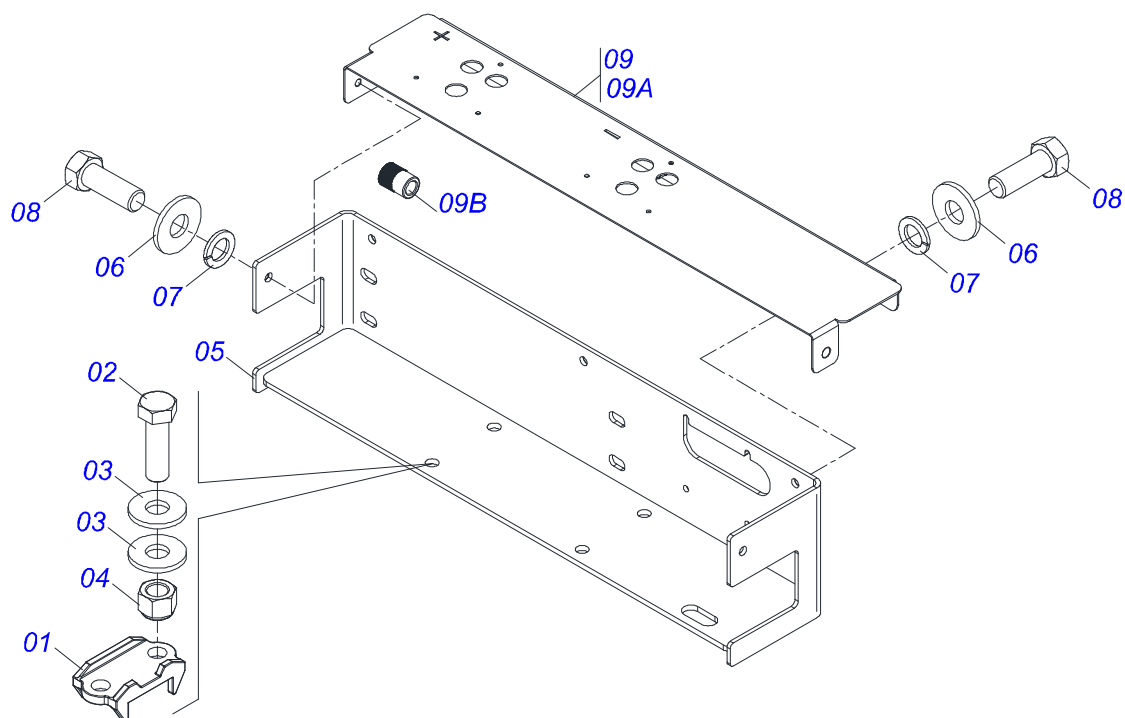


Item	Code	Description	See page	QT
01	0502011170	FIXER	02	
02	0503010384	1/2" X 5" BOLT	04	
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN	08	
04	0503010589	1/2" UNC SELF ADJUSTING NUT	04	
05	0531067124	TRIPLE BLOCK VALVE FIXING SUPPORT	01	
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER	05	
07	0503010025	3/8 SPRING WASHER	05	
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5	05	
09	0541052027	VACUUM METER FIXATION	01	
09A	0501315649	VACUUM METER FIXATION	01	
09B	0503019416	RIVET SCREW THREAD INTERNAL	05	

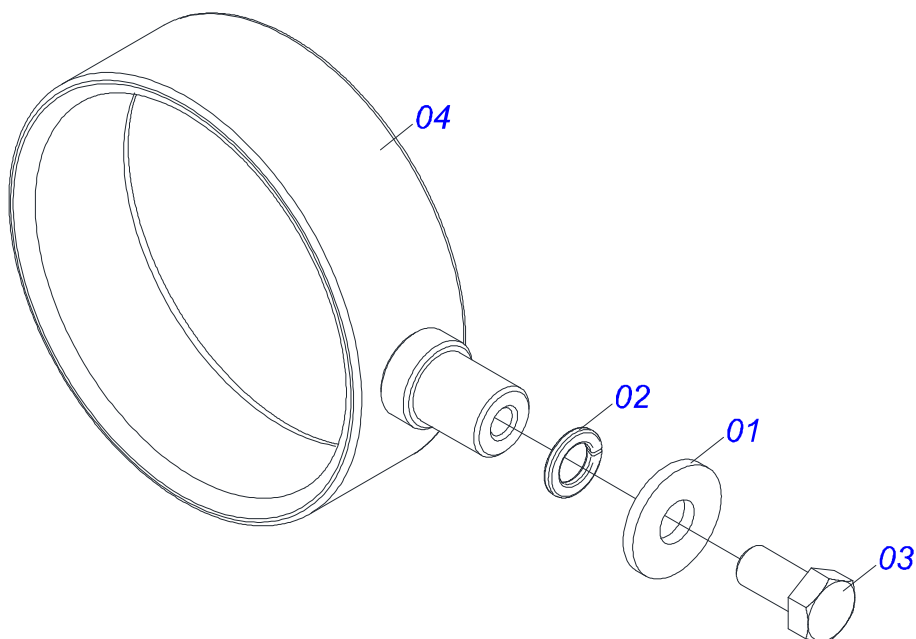


Item	Code	Description	See page	QT
01	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
02	0503010025	3/8 SPRING WASHER		01
03	0503010256	3/8" X 3/4" BOLT		01
04	0531067112	FRONT HOSE ARTICULATOR		01

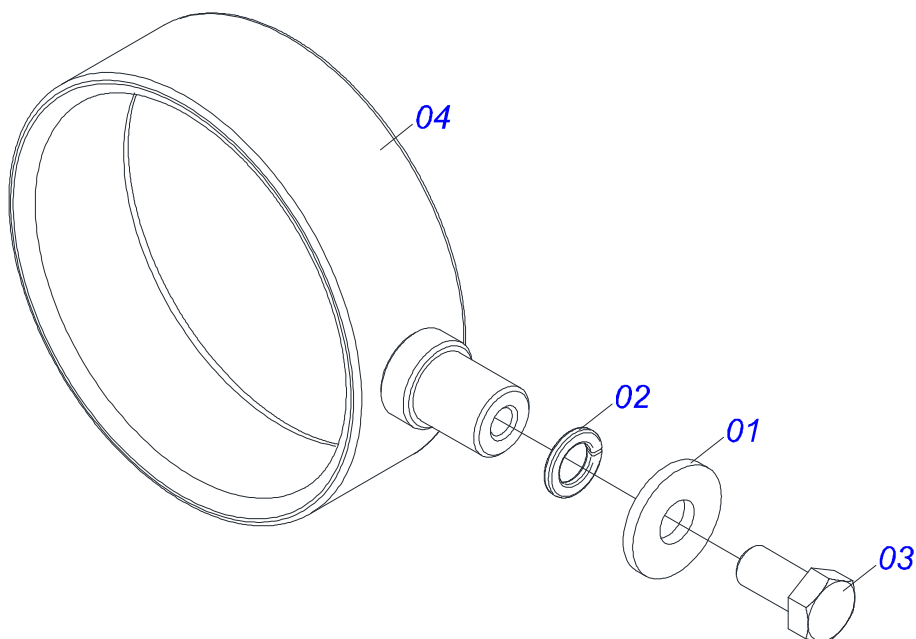

Item	Code	Description	See page	QT
01	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
02	0503010025	3/8 SPRING WASHER		01
03	0503010256	3/8" X 3/4" BOLT		01
04	0531067111	ARTICULATOR SUPPORT		01

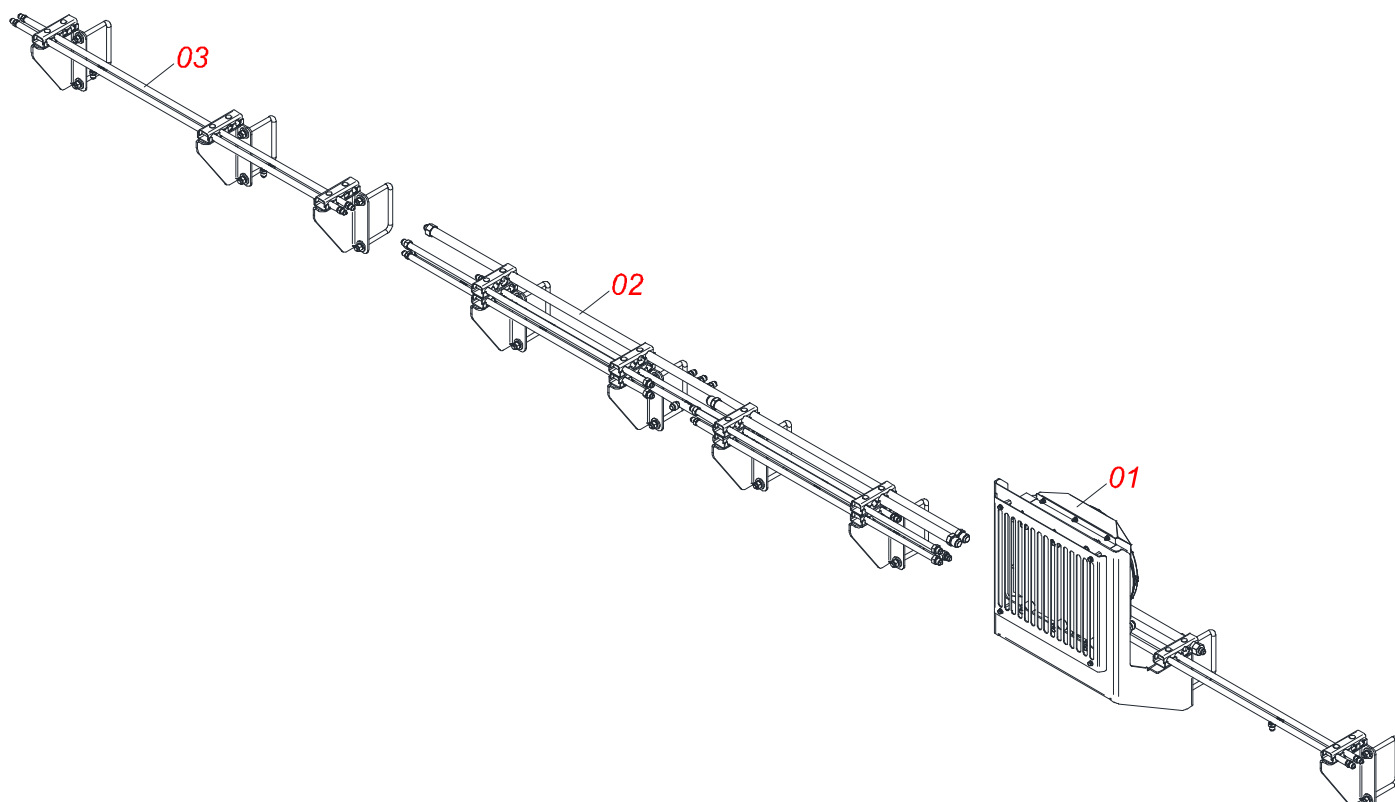


Item	Code	Description	See page	QT
01	0541052229	CONJUNTO DE TUBOS HIDRÁULICOS	47	01
02	0541052228	CENTRAL HYDRAULIC PIPES ASSY	50	01
03	0541052227	HYDRAULIC PIPES SET RIGHT	52	01

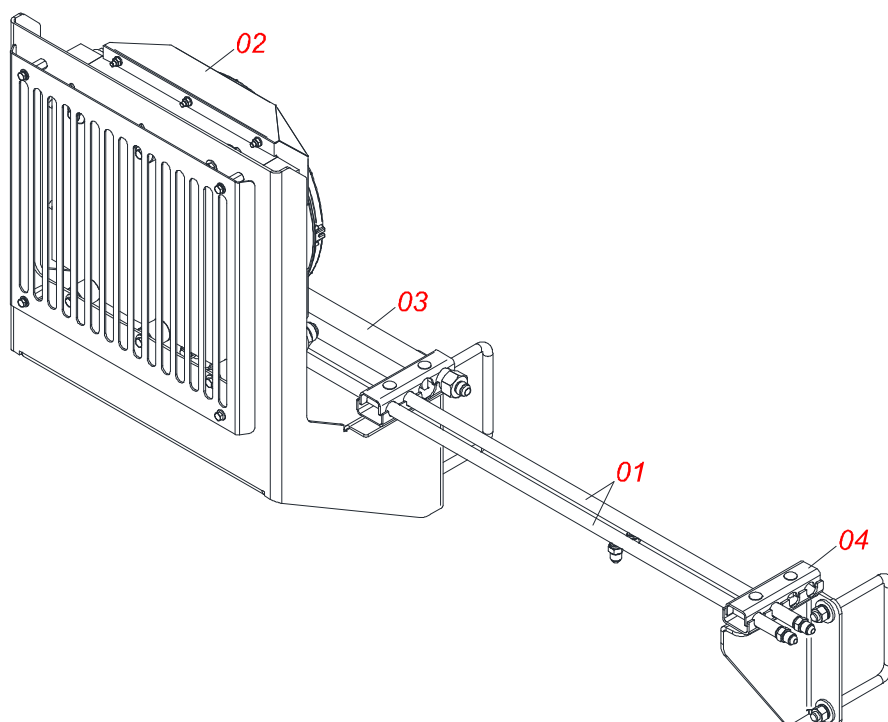


Item	Code	Description	See page	QT
01	0531067055	OIL DUCT 1672		02
02	0541052230	HEAT EXCHANGER ASSY	48	01
03	0531067230	OIL DUCT R.1.5/16 UN X 1250		01
04	0541051909	OIL CONDUCTOR SIDE FASTENER	49	01

HEAT EXCHANGER ASSY


0541052230

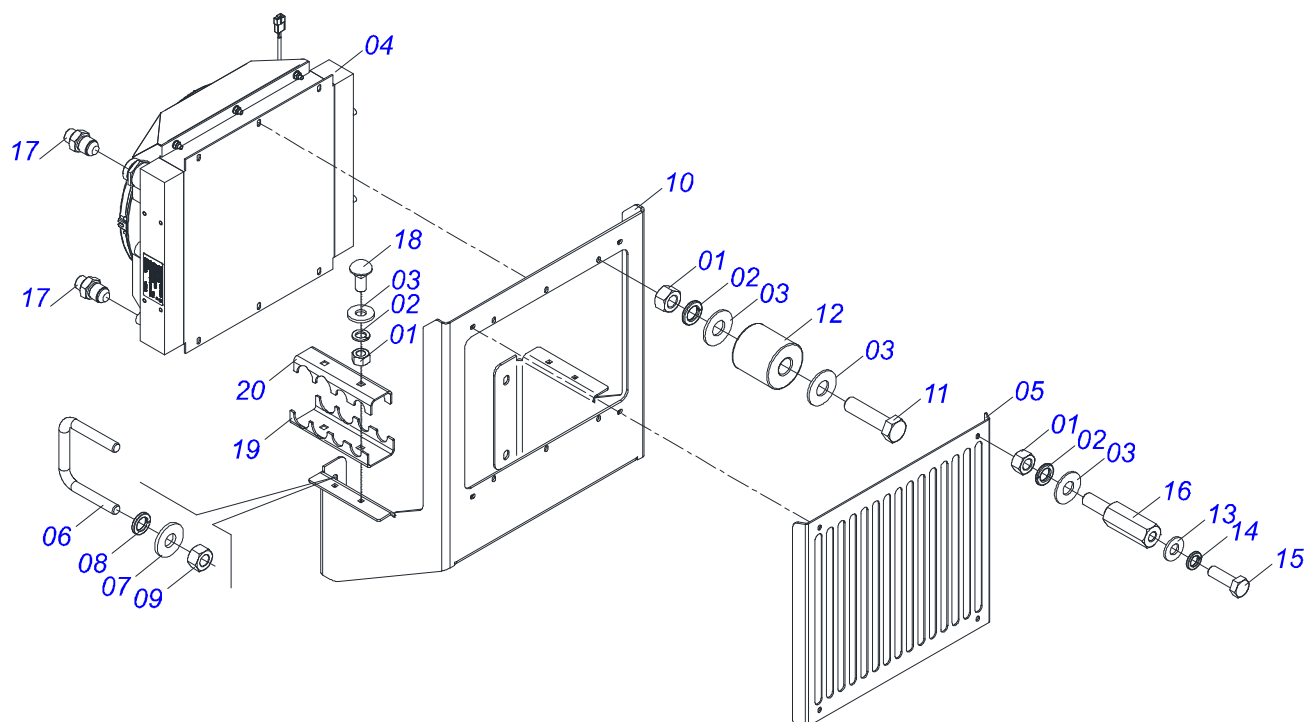


Item	Code	Description	See page	QT
01	0503010026	3/8" NUT	14	
02	0503010025	3/8 SPRING WASHER	14	
03	0501013518	FLAT WASHER	16	
04	0503063086	HEAT EXCHANGER	01	
05	0591012708	CANVAS RADIATOR PROTECTION	01	
06	0521010718	5/8" U BOLT	02	
07	0501012140	FLAT WASHER	04	
08	0503010027	5/8 SPRING WASHER	04	
09	0503010013	5/8 NUT	04	
10	0501315976	SUPPORT PLATE	01	
11	0503011268	3/8" X 2-1/2" BOLT	06	
12	0503019952	RUBBER BUSHING 14 X 40 X 40	06	
13	0501010694	FLAT WASHER	04	
14	0503010179	LOCK WASHER 5/16 ZN 1K01528	04	
15	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN	04	
16	0571016789	PRISONER 3/8 UNC X 5/16 UNC X 65	04	
17	0503063949	ADAPTER TERMINAL 1 BSP ORING X 1.5/16 UNF - JIC	02	
18	0501011778	3/8" X 2-1/2" BOLT	04	
19	0501316013	LOWER SUPPORT	02	
20	0501316012	SUPERIOR SUPPORT	02	

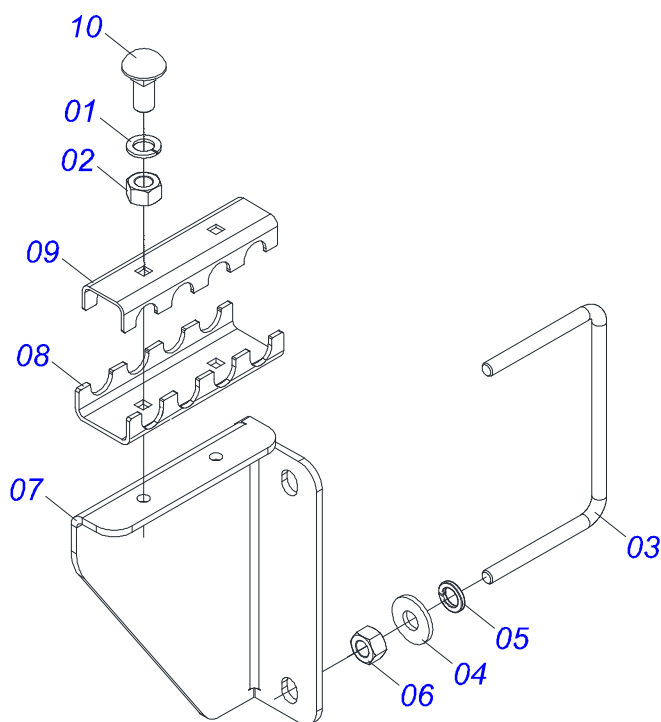


Item	Code	Description	See page	QT
01	0503010025	3/8 SPRING WASHER		02
02	0503010026	3/8" NUT		02
03	0521010718	5/8" U BOLT		01
04	0501012140	FLAT WASHER		02
05	0503010027	5/8 SPRING WASHER		02
06	0503010013	5/8 NUT		02
07	0501315333	OIL CONDUCTOR FIXING PLATE		01
08	0501315334	LOWER CLIP		01
09	0501315335	UPPER CLIP		01
10	0501011778	3/8" X 2-1/2" BOLT		02

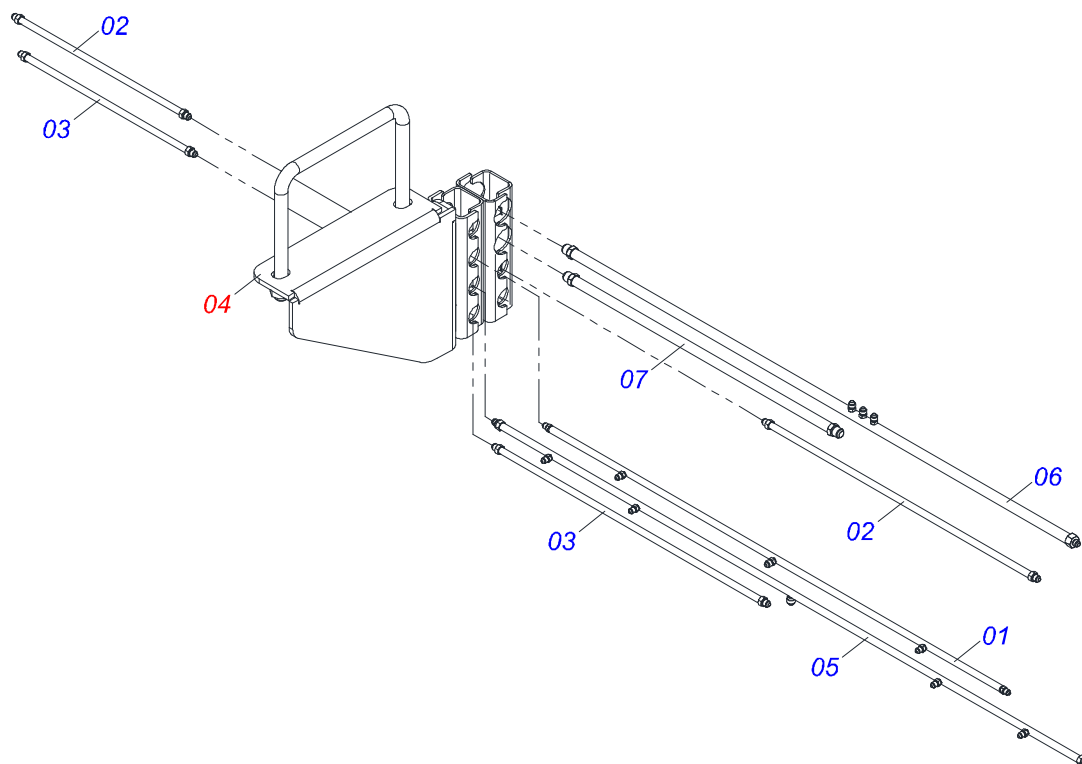



Item	Code	Description	See page	QT
01	0531067123	OIL DUCT		01
02	0521069157	OIL TUBE		02
03	0531067131	OIL DUCT 22 X 1248		02
04	0541052250	OIL CONDUCTIVE FIXATOR	51	04
05	0531067227	CYLINDER RETURN DUCT		01
06	0531067202	OIL RETURN DUCT TURBINES		01
07	0531065340	OIL DUCT R.1.5/16 UN X 1250		01

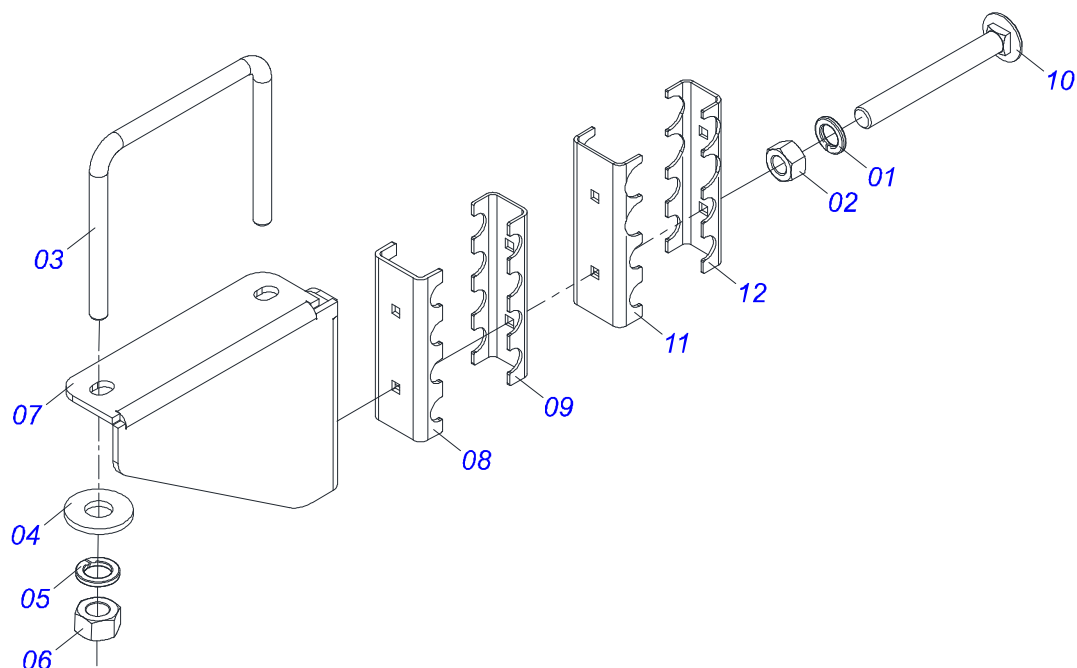

Item	Code	Description	See page	QT
01	0503010025	3/8 SPRING WASHER		02
02	0503010026	3/8" NUT		02
03	0521010718	5/8" U BOLT		01
04	0501012140	FLAT WASHER		02
05	0503010027	5/8 SPRING WASHER		02
06	0503010013	5/8 NUT		02
07	0501315333	OIL CONDUCTOR FIXING PLATE		01
08	0501315334	LOWER CLIP		01
09	0501315335	UPPER CLIP		01
10	0501011853	3/8" X 4-1/2" BOLT		02
11	0501316013	LOWER SUPPORT		01
12	0501316012	SUPERIOR SUPPORT		01

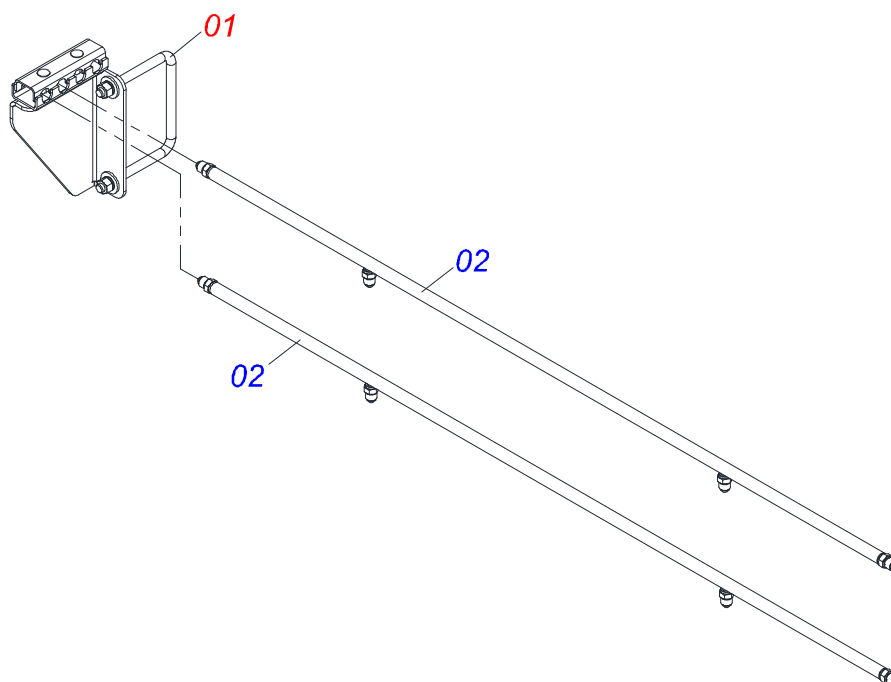

Item	Code	Description	See page	QT
01	0541051909	OIL CONDUCTOR SIDE FASTENER	49	03
02	0531067055	OIL DUCT 1672		02

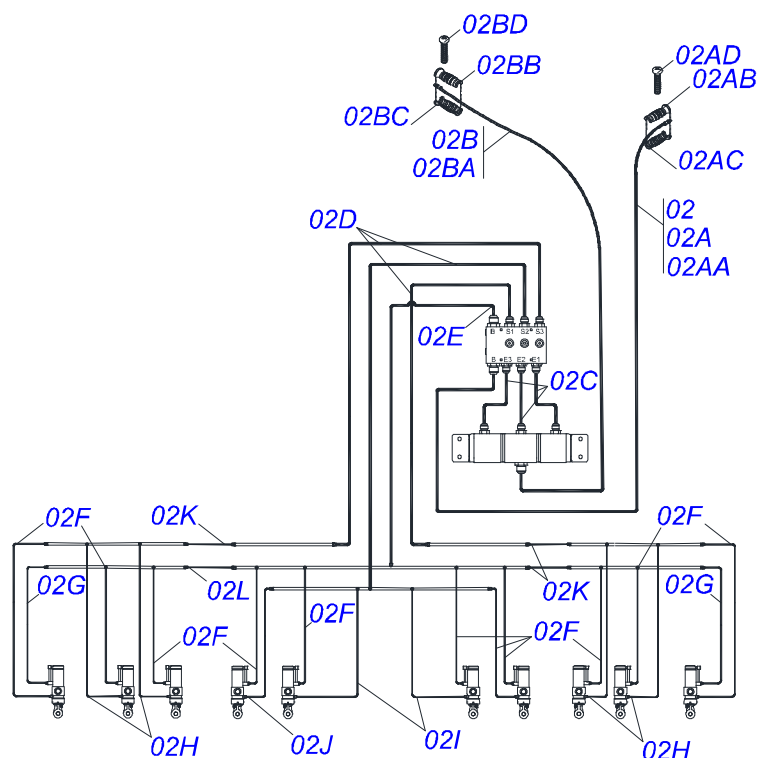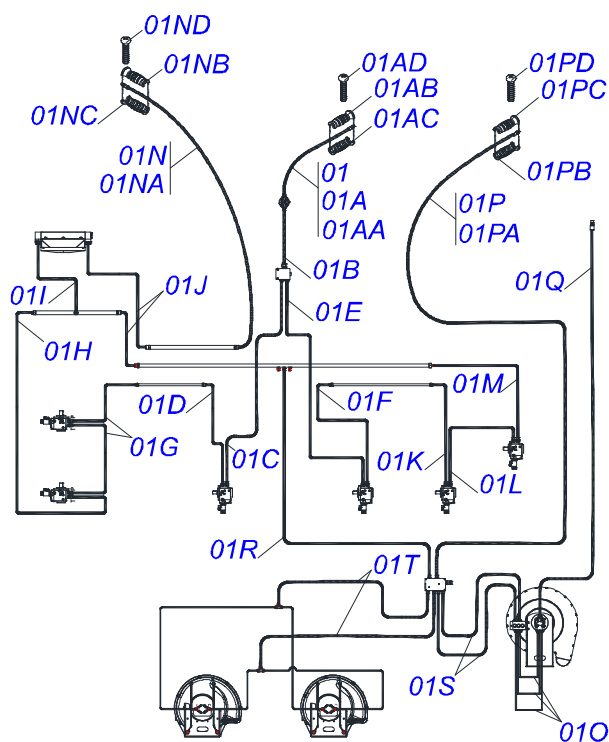


Item	Code	Description	See page	QT
01	0541052719	HOSE SET		01
01A	0521052519	1/2 X 4200 TC-TM GRAY/RED HOSE		01
01AA	0501081073	1/2 X 4200 TC-TM HOSE		01
01AB	0503034489	HYDRAULIC HOSE GAUNTLET (GRAY)		01
01AC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
01AD	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
01B	0501082255	1/2 X 200 TR-TC HOSE		01
01C	0501080282	1/2 X 1900 TR-TC HOSE		01
01D	0501080267	1/2 X 2100 TR-TC HOSE		01
01E	0501080030	1/2" X 53.15" TR-TC HOSE		01
01F	0501080013	1/2 X 850 TR-TC HOSE		01
01G	0501081510	1/2 X 1700 TR-TC HOSE		02
01H	0501081886	1/2 X 1600 TR-TC HOSE		01
01I	0501083182	1 X 350 TR-TC HOSE		01
01J	0501082405	1 X 1350 TC-TC HOSE		02
01K	0501080281	1/2 X 2600 TR-TC HOSE		01
01L	0501080058	1/2 X 1400 TR-TC HOSE		01
01M	0501080094	1/2 X 1800 TR-TC HOSE		01
01N	0521052523	1/2 X 7500 TC-TM YELLOW/BLUE HOSE		01
01NA	0501082026	1/2 X 7500 TC-TM HOSE		01
01NB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01NC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
01ND	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
01O	0501080635	3/8" X 19" TR-TR HOSE		03
01P	0521052522	1/2 X 7500 TC-TM YELLOW/RED HOSE		01
01PA	0501082026	1/2 X 7500 TC-TM HOSE		01
01PB	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
01PC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
01PD	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
01Q	0501080349	3/8" X 7500 TR-TM HOSE		01
01R	0501080272	1/2" X 106" TR-TC HOSE		01


ASSY HOSE GAME

0541052275


Item	Code	Description	See page	QT
01S	0501080134	1/2 X 1600 TC-TC HOSE		02
01T	0501080137	1/2 X 3000 TC-TC HOSE		02
02	0541052720	HOSE SET		01
02A	0541052038	3/4 X 4900 TC-TM BLACK/BLUE R.1/2NPT HOSE		01
02AA	0501083015	3/4 X 4900 TC - TM R.1/2NPT HOSE		01
02AB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
02AC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
02AD	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
02B	0541052274	3/4 X 4300 TC-TM BLACK/RED R.1/2NPT HOSE		01
02BA	0501083093	3/4 X 4300 TC-TM R.1/2NPT HOSE		01
02BB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
02BC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
02BD	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
02C	0501083090	1/2 X 350 TR-TC HOSE		03
02D	0501080093	1/2 X 1300 HOSE TR-TC		03
02E	0501080028	3/4 X 1200 TR-TC HOSE		01
02F	0501080124	3/8 X 900 TR-TC HOSE		11
02G	0501080931	3/8" X 39" TC-TC HOSE		02
02H	0501080045	3/8" X 850 TR-TR HOSE		04
02I	0501080221	3/8" X 25.6 TR-TR HOSE ASSY		02
02J	0501080413	3/8" X 27" TR-TC HOSE		01
02K	0501080301	3/8 X 1300 TC-TC HOSE		03
02L	0501080065	3/8" X 47" TC-TC HOSE		01

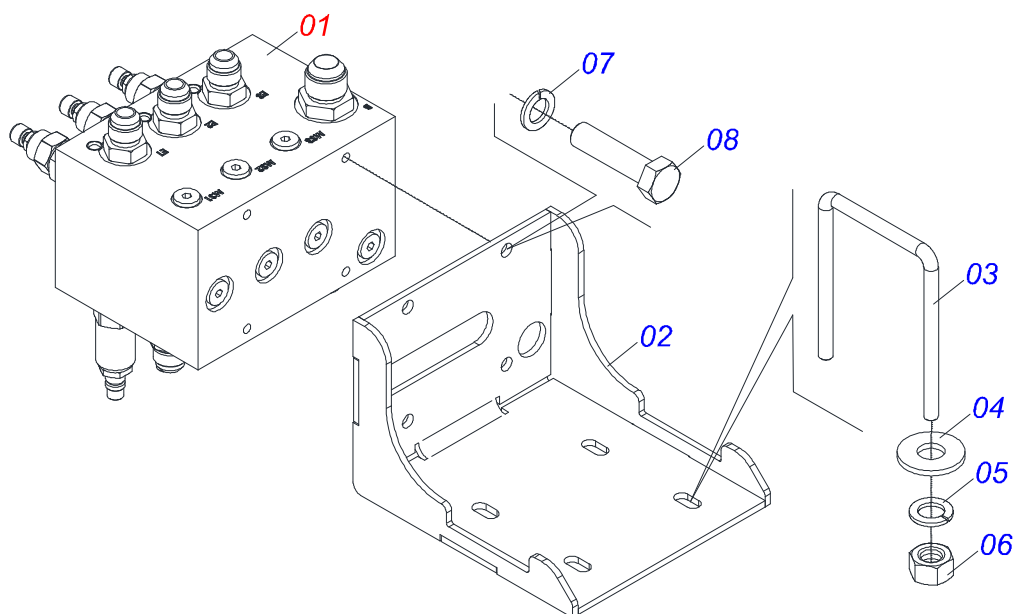


Item	Code	Description	See page	QT
01	0541051981	COMMAND BLOCK	55	01
02	0531067108	COMMAND BLOCK SUPPORT		01
03	0581019503	3/8" FASTENER		02
04	0503015135	FLAT WASHER 10 X 18 X 2		04
05	0503010025	3/8 SPRING WASHER		04
06	0503010026	3/8" NUT		04
07	0503014371	M8 SPRING WASHER		04
08	0503015114	BOLT		04

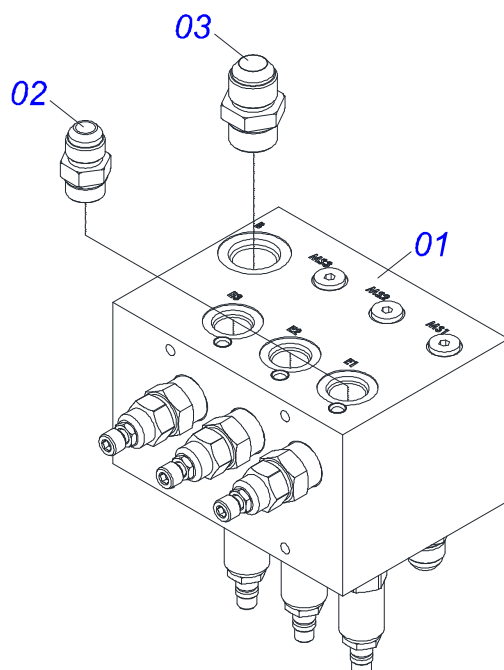


Item	Code	Description	See page	QT
01	0513010503	COMMAND BLOCK		01
02	0503063950	ADAPTER TERMINAL 7/8 UNF ORING X 7/8 UNF - JIC		06
03	0503063969	ADAPTER TERMINAL 1.1/16 UNF ORING X 1.1/16 UNF - JIC		02

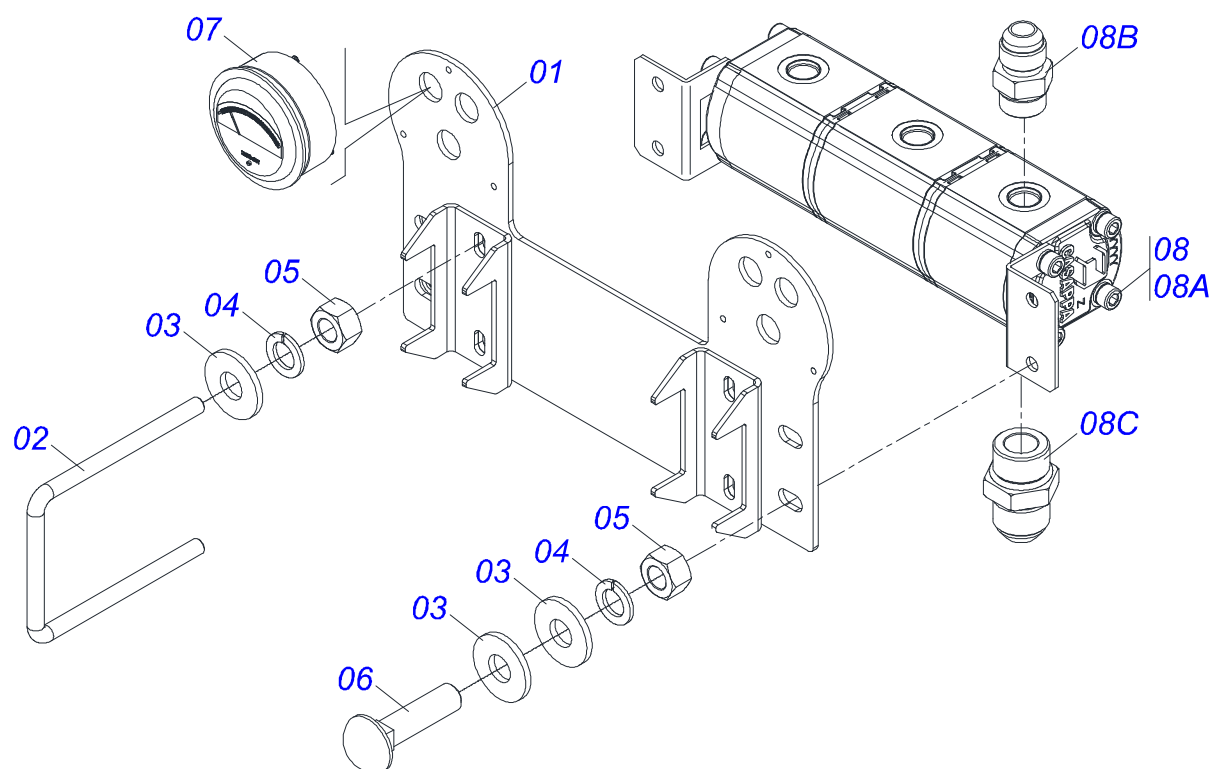


Item	Code	Description	See page	QT
01	0531067109	SUPPORT DIVIDER VALVE	01	
02	0581019503	3/8" FASTENER	02	
03	0503015135	FLAT WASHER 10 X 18 X 2	08	
04	0503010025	3/8 SPRING WASHER	08	
05	0503010026	3/8" NUT	08	
06	0501011643	3/8 X 1" BOLT	04	
07	0503013584	VACUUM GAUGE	02	
08	0541052059	TRIPLE HYDRAULIC ROTARY DIVIDER	01	
08A	0513012119	TRIPLE HYDRAULIC ROTARY DIVIDER	01	
08B	0503063950	ADAPTER TERMINAL 7/8 UNF ORING X 7/8 UNF - JIC	03	
08C	0503063969	ADAPTER TERMINAL 1.1/16 UNF ORING X 1.1/16 UNF - JIC	01	

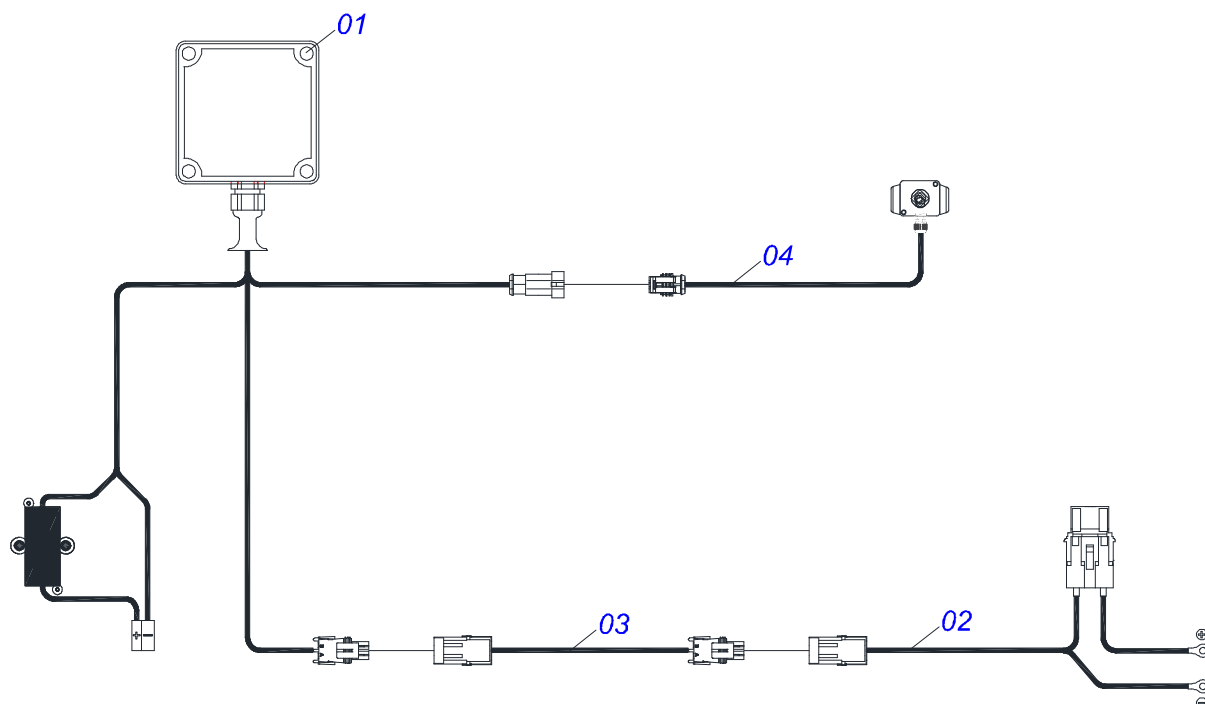


Item	Code	Description	See page	QT
01	0513012173	SHIFT PANEL		01
02	0513011204	TRACTOR POWER SWITCH CABLE 5463.5		01
03	0503062594	IMPLEMENT SWITCH CABLE (EXTENSION)		01
04	0513012172	HEAT EXCHANGER ACTUATOR		01

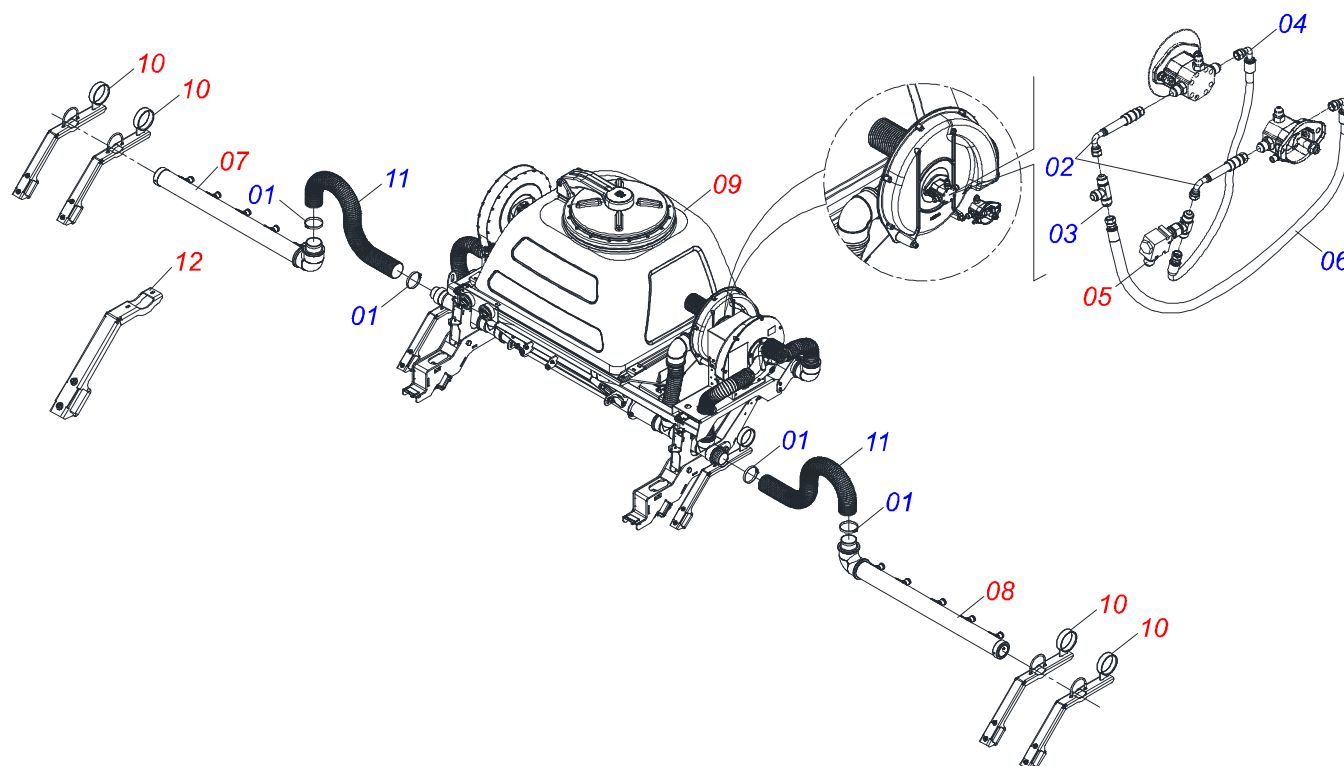


Item	Code	Description	See page	QT
01	0503011372	102 TO 121 CLAMP		04
02	0501082255	1/2 X 200 TR-TC HOSE		02
03	0503013493	T CONNECTION MALE		01
04	0501080113	1/2 X600 HOSE TR-TC		01
05	0521057177	ASSY ANTI CAVITATION VALVE	59	01
06	0501080113	1/2 X600 HOSE TR-TC		01
07	0541052007	RIGHT SIDE AIR DISTRIBUTOR	60	01
08	0541052006	LEFT SIDE AIR DISPENSER	61	01
09	0541052034	CENTER SEED SILO	62	01
10	0541052020	COMPLETE HOSE SUPPORT		06
11	0501082279	SPIRAL HOSE AIR 4 X 1300		02
12	0541052019	COMPLETE HOSE SUPPORT		02

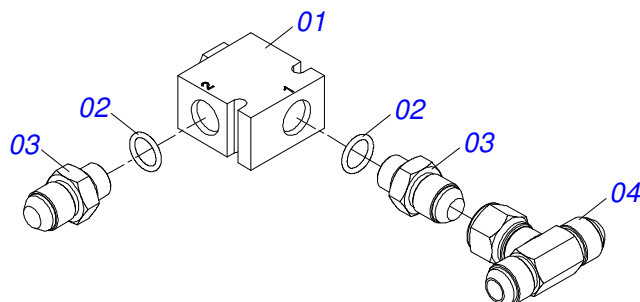


Item	Code	Description	See page	QT
01	0503015420	CV10208TN5 ANTI-CAVITATION VALVE		01
02	0503010190	2-114 N 3006-9B O'RING		02
03	0501011460	7/8 NF REDUCTION NIPPLE		02
04	0503013055	"T" ADAPTOR WITH GIRAT NUT		01

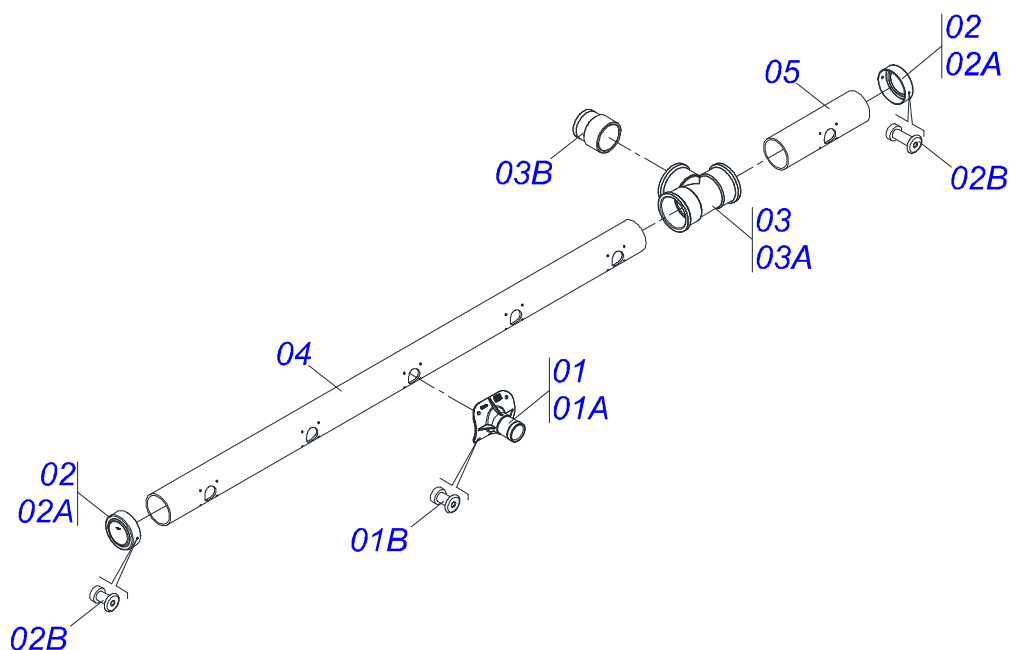

Item	Code	Description	See page	QT
01	0521056048	AIR DISTRIBUTOR NOZZLE 1.1 / 2 WITH RIVET	06	
01A	0503034812	SOCKET DISTRIBUTOR AR	06	
01B	0503012856	POP RIVET	24	
02	0521056049	AIR DISTRIBUTOR CAP WITH RIVET	02	
02A	0503034763	AIR DITRIBUTOR PUMP	02	
02B	0503015341	POP RIVET	04	
03	0511057036	AIR DISTRIBUTOR BOARD	01	
03A	0503012567	T-JOIN FOR TUBE 110	01	
03B	0581013890	AIR DISTRIBUTOR SOCKET	01	
04	0501315638	AIR CONDUCTOR BODY	01	
05	0591012145	AIR CONDUCTOR BODY	01	

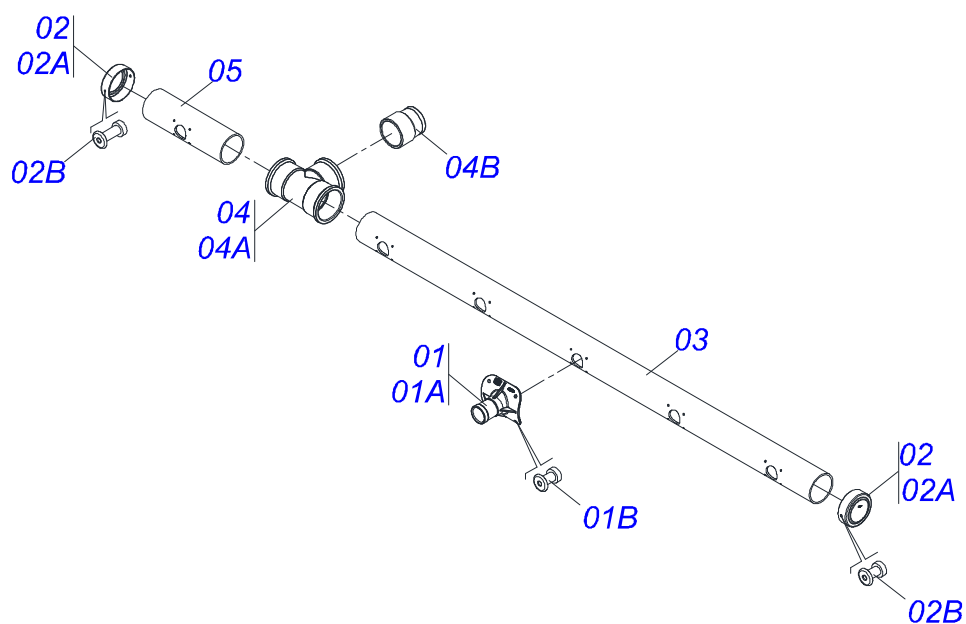


Item	Code	Description	See page	QT
01	0521056048	AIR DISTRIBUTOR NOZZLE 1.1 / 2 WITH RIVET		06
01A	0503034812	SOCKET DISTRIBUTOR AR		06
01B	0503012856	POP RIVET		24
02	0521056049	AIR DISTRIBUTOR CAP WITH RIVET		02
02A	0503034763	AIR DITRIBUTOR PUMP		02
02B	0503015341	POP RIVET		04
03	0501315638	AIR CONDUCTOR BODY		01
04	0511057036	AIR DISTRIBUTOR BOARD		01
04A	0503012567	T-JOIN FOR TUBE 110		01
04B	0581013890	AIR DISTRIBUTOR SOCKET		01
05	0591012145	AIR CONDUCTOR BODY		01

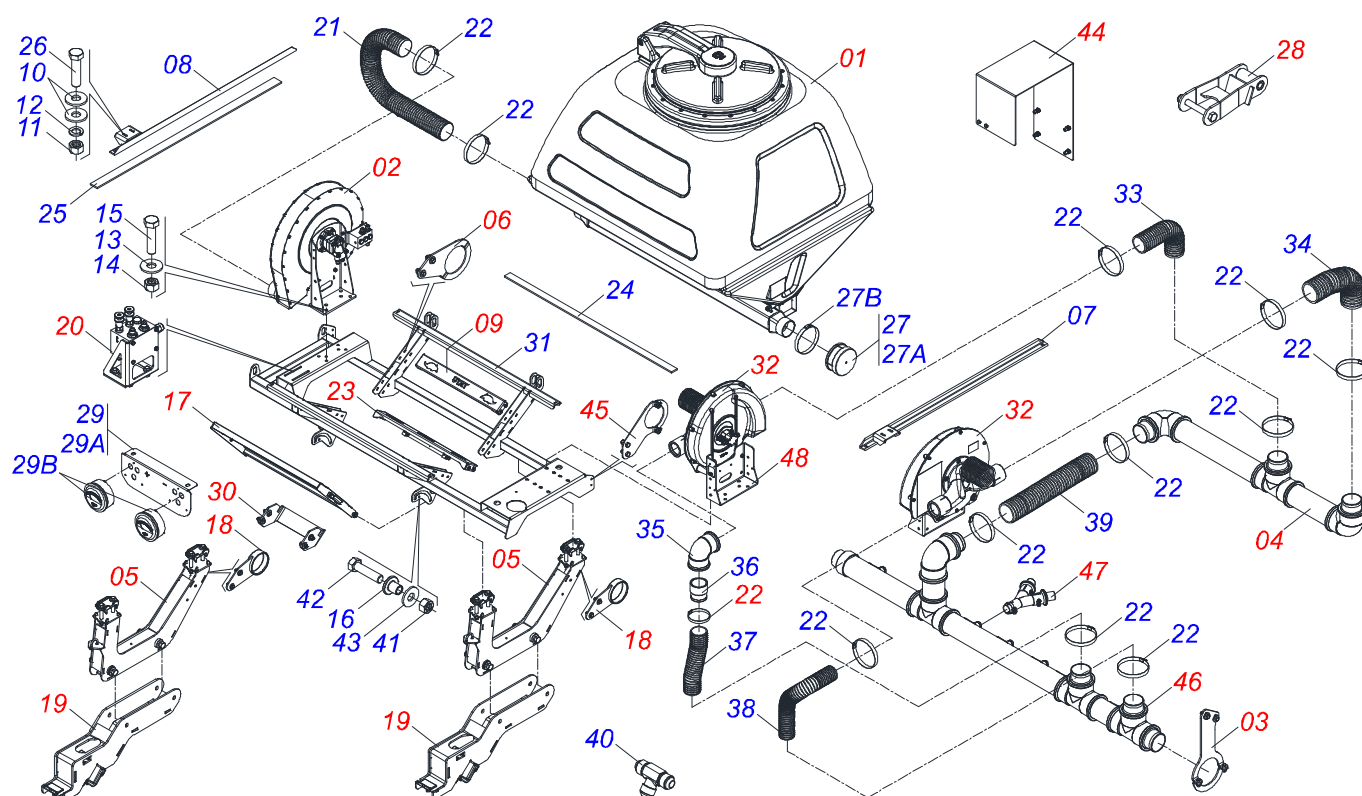


Item	Code	Description	See page	QT
01	0531051213	CENTRAL SEED BOX	63	01
02	0521045392	HYDRAULIC TURBINE WITH SCREEN	65	01
03	0521057188	ASSY SUPPORT AIR DUCT REAR	68	02
04	0521057462	CENTRAL REAR AIR CONDUCTOR 7655/8450	69	01
05	0521056987	FIXED ARTICULATOR SUPPORT	70	02
06	0521057187	MOUNTED REAR AIR DUCT SUPPORT	71	02
07	0531060402	FIXING LEFT		01
08	0531060401	RIGHT FIXATION		01
09	0521057346	FRONT / REAR SUPPORT	72	03
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
11	0503010026	3/8" NUT		04
12	0503010025	3/8 SPRING WASHER		04
13	0501012140	FLAT WASHER		12
14	0503010811	5/8" UNF SELF ADJUSTING NUT		12
15	0503013736	SCREW 5/8 UNF X 1.1/2 CS G.5 ZN		12
16	0591010677	PLATFORM SUPPORT SLEEVE		02
17	0521056083	MOUNTED CSC PLATFORM	73	01
18	0521056990	REAR SUPPORT HOSE ASSY	74	04
19	0521056989	ASSY CSC FIXED SUPPORT	75	02
20	0521056988	ASSY TURBINE REGULATOR BLOCK SUPPORT	76	01
21	0521018615	HOSE 4 X 1300		01
22	0503011372	102 TO 121 CLAMP		12
23	0521056986	FIXED SUPPORT ASSY CSC DRAIN	78	01
24	0591011787	FRONT REAR SUPPORT TAPE		02
25	0591011785	SIDE SUPPORT TAPE 1300		02
26	0503010849	3/8" X 1-1/2" BOLT		04
27	0521053176	COVER KAP		01
27A	0581017528	15 OUTPUT TUBE COVER		01
27B	0503011372	102 TO 121 CLAMP		01
28	0521057315	ASSY SUPPORT TRANSPORT CSC	79	02
29	0521057288	VACUUMETER FIXING SUPPORT		01


Item	Code	Description	See page	QT
29A	0531060817	VACUOMETER FIXING SUPPORT		01
29B	0503013584	VACUUM GAUGE		02
30	0521056985	ASSY CSC PLATFORM SUPPORT		01
31	0531060571	7655/8450 CENTRAL SEED HOPPER FIXED BASE		01
32	0541051253	SUCTION TURBINE	80	02
33	0501082273	SPIRAL HOSE AIR 4 X 500		01
34	0501082275	SPIRAL HOSE AR 4 X 900		01
35	0503017845	90 PVC KNEE		01
36	0581013890	AIR DISTRIBUTOR SOCKET		01
37	0501082273	SPIRAL HOSE AIR 4 X 500		01
38	0501082276	SPIRAL HOSE AIR 4 X 1000		01
39	0501082274	SPIRAL HOSE AIR 4 X 600		01
40	0503011271	3/4" UNF "T" CONNECTION T 3 SIDES		04
41	0503011336	1/2" HEX SELF ADJUSTING NUT		02
42	0503014735	SCREW 1/2 UNC X 2		02
43	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
44	0521057919	ASSY CSC TURBINE PROTECTION	82	01
45	0521057917	RIGHT REAR AIR DUCT FIXING COMPLETE ASSY	83	01
46	0541052008	CENTRAL AIR DISTRIBUTOR	84	01
47	0521058023	NOZZLE Y ASSY	85	02
48	0581012099	BODY SUPPORT TURBINE		02

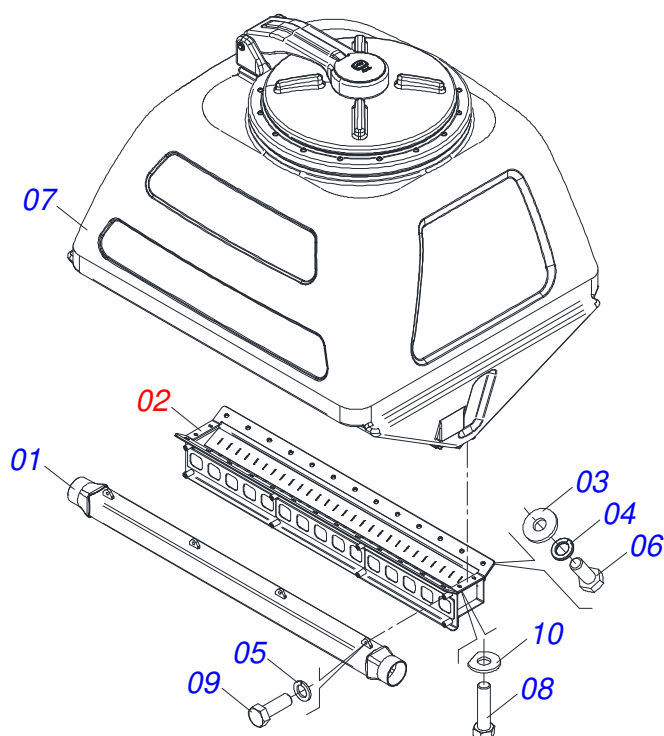


Item	Code	Description	See page	QT
01	0531062313	17-MOUTH AIR TUBE WITH FIXER		01
02	0531051214	BOX FUND 17 DEPARTURES	64	01
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		26
04	0503015075	M10 SPRING WASHER		26
05	0503010025	3/8 SPRING WASHER		08
06	0503010172	M10 X 1,5 X 25 BOLT		26
07	0503062687	SEED HOPPER		01
08	0503019284	M8 X BOLT		04
09	0503010849	3/8" X 1-1/2" BOLT		08
10	0581017922	WASHER		04

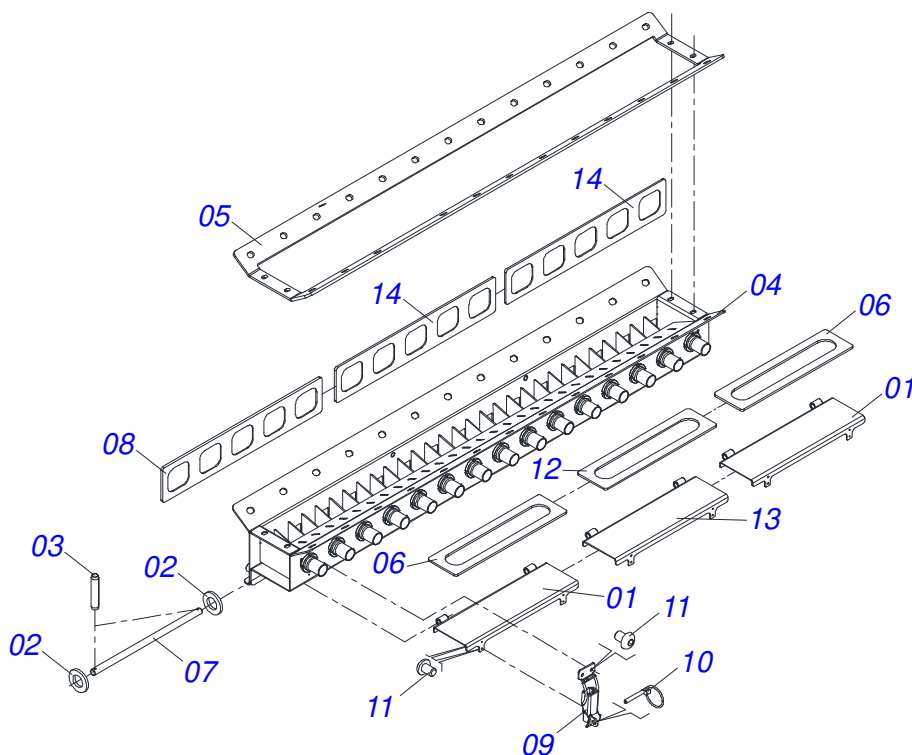


Item	Code	Description	See page	QT
01	0531062312	BOX FUND COVER		02
02	0503015135	FLAT WASHER 10 X 18 X 2		06
03	0503011823	0.1" X 0.6" SPRING PIN		06
04	0531062314	LOWER SYSTEM BOX 17 OUTPUTS		01
05	0503034571	SEALING		01
06	0503035462	COVER SEAL		02
07	0581017529	ROD 9,53		03
08	0503063393	AIR PIPE SEAL 5 OUTPUTS		01
09	0503034692	FAST LOCK ASSY		06
10	0503030085	LOCK PIN		06
11	0503019290	BOLT		24
12	0503035461	COVER SEAL 460		01
13	0531062311	BOX FUND COVER		01
14	0503063392	AIR PIPE SEAL 6 OUTPUTS		02

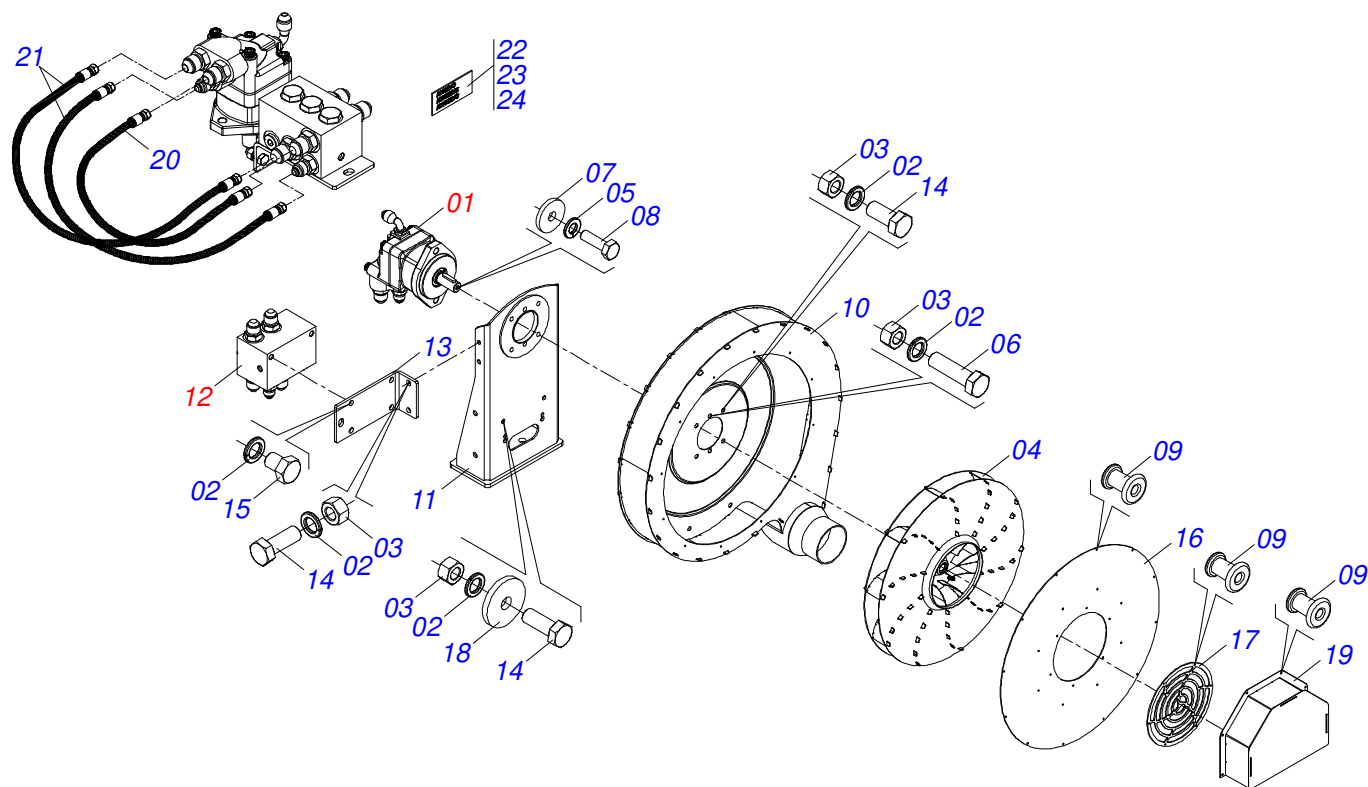


Item	Code	Description	See page	QT
01	0501054983	HYDRAULIC MOTOR	66	01
02	0503010025	3/8 SPRING WASHER		12
03	0503010026	3/8" NUT		10
04	0521044613	480 X 50 FAN (HIDRAULIC)		01
05	0503010143	1/4" SPRING WASHER		01
06	0503010849	3/8" X 1-1/2" BOLT		02
07	0531018764	FLAT WASHER		01
08	0503011104	M6 X 1" BOLT		01
09	0503012722	0.16" X 0.4" BLIND RIVET		24
10	0521065857	CARACOL MECHANICAL TURBINE S MEC		01
11	0521065858	TURBIN SUPPORT		01
12	0501054577	BLOCK COMMAND WITH NIPLES HYDRAULIC 67 TURBINE		01
13	0561010634	VALVE SUPPORT ASSY		01
14	0503010237	3/8" X 1" BOLT		08
15	0503010206	3/8 X 1/2 BOLT		02
16	0571018577	COVER SNAIL TURBINE		01
17	0571018578	TURBINE PROTECTIVE SCREEN		01
18	0541013274	LISA WASHER 10 X 38 X 4.75		02
19	0521069167	FRONT PROTECTION		01
20	0501080709	3/8" X 21.6" TR-TR HOSE		01
21	0501080091	1/2" X 550 TR-TR HOSE		02
22	0503031087	AUTO CONTROL APPROVED DECAL		01
23	0503031426	ADHESIVE LABEL ATTENTION TURBINE		01
24	0503033981	ADHESIVE LABEL		01

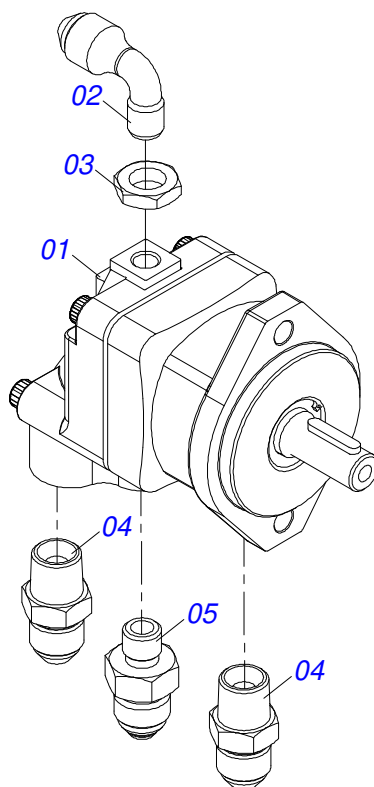


Item	Code	Description	See page	QT
01	0503012871	HYDRAULIC MOTOR		01
02	0531018770	R 3/4"UNF X R 1/4"BSP ELBOW		01
03	0561016941	3/4" NUT		01
04	0511014065	7/8" NF X R1/2NPT X 52 NIPPLE		02
05	0541011065	3/4"UNF X R1/4BSP19FPP X43.5 NIPPLE		01
06	3914103037	TEFLON		0,001RI

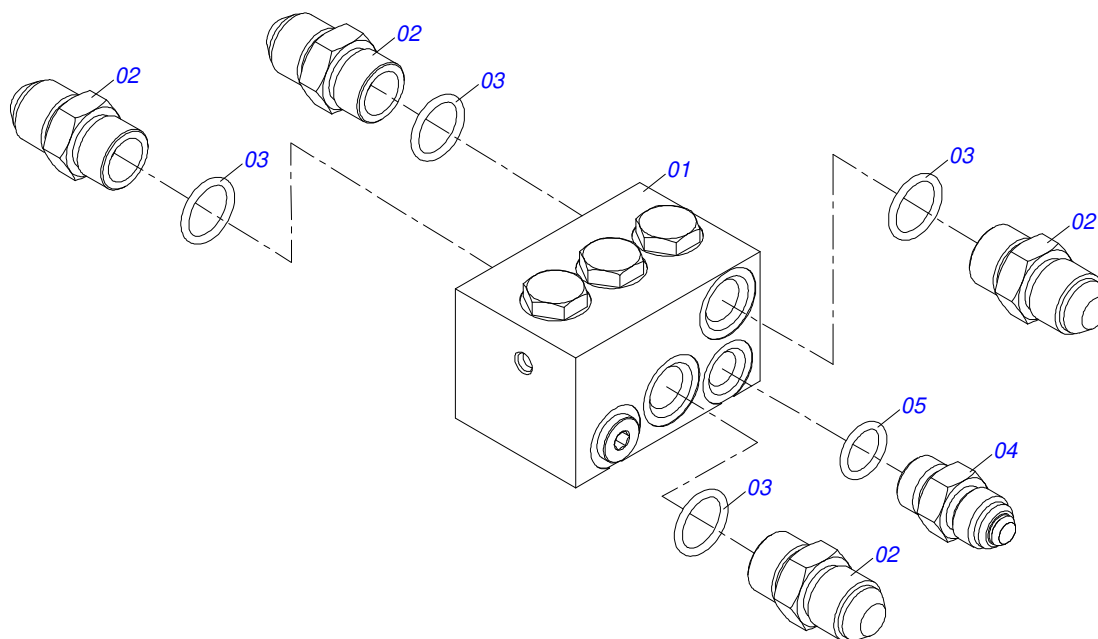


Item	Code	Description	See page	QT
01	0503012291	BLOCK COMMAND		01
02	0501010590	NIPPLE		04
03	0503010045	O'RING		04
04	0541011066	3/4" UNF X 43.5 NIPPLE		01
05	0503010190	2-114 N 3006-9B O'RING		01

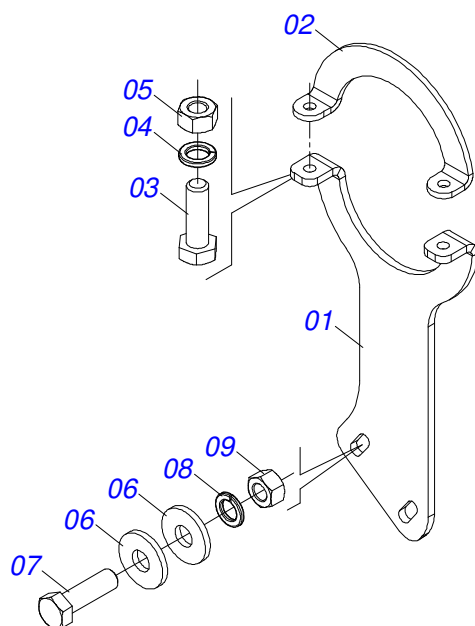


Item	Code	Description	See page	QT
01	0591012159	CENTRAL REAR AIR DUCT SUPPORT		01
02	0521014442	LOWER AIR DISTRIBUTOR SUPPORT		01
03	0503010371	5/16" X 1" BOLT		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
07	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
08	0503010025	3/8 SPRING WASHER		02
09	0503010026	3/8" NUT		02

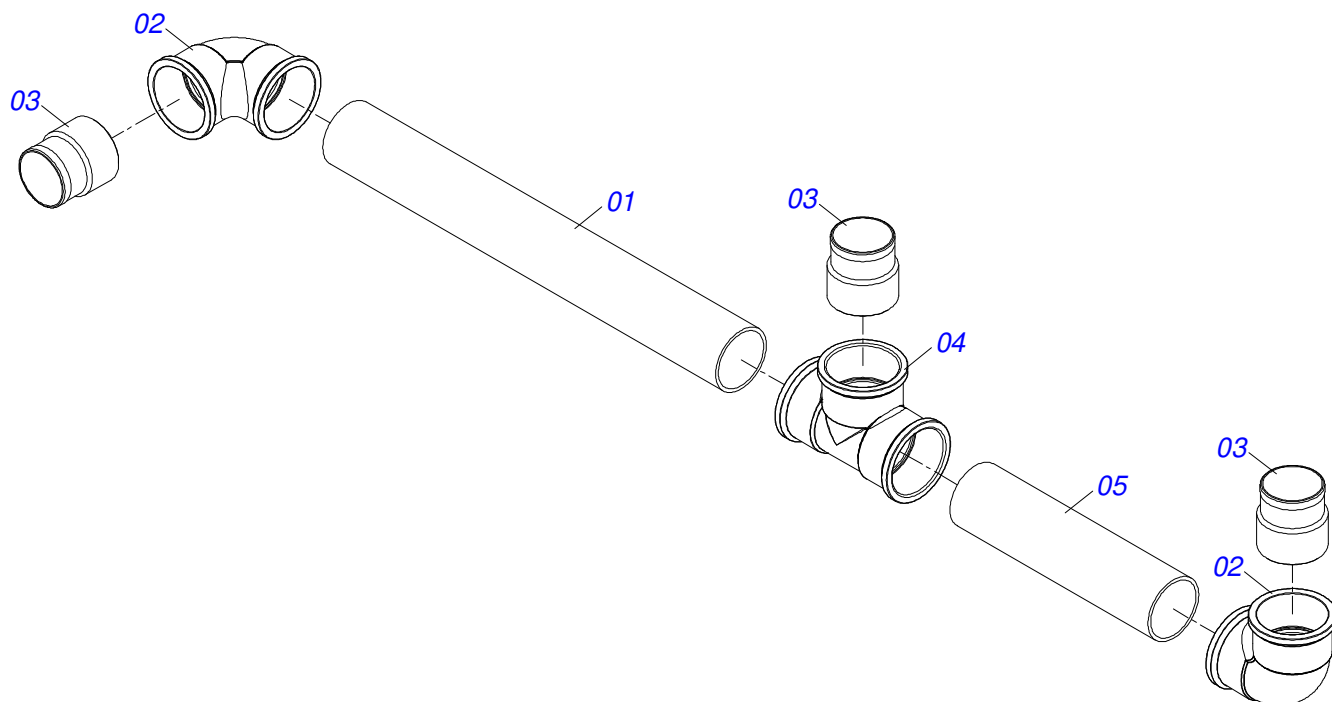


Item	Code	Description	See page	QT
01	0591010691	1650 REAR AIR CONDUCTOR BODY		01
02	0503017845	90 PVC KNEE		02
03	0581013890	AIR DISTRIBUTOR SOCKET		03
04	0503012567	T-JOIN FOR TUBE 110		01
05	0591013551	REAR AIR CONDUCTOR BODY 490		01

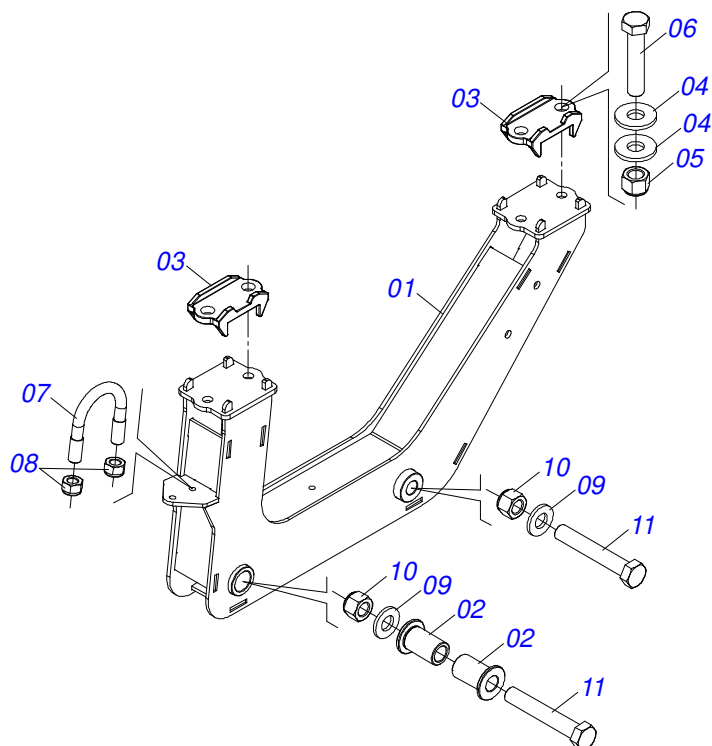


Item	Code	Description	See page	QT
01	0531060396	ARTICULED SUPPORT		01
02	0591011817	ARTICULATED SLEEVE SUPPORT		02
03	0502011170	FIXER		02
04	0501012140	FLAT WASHER		08
05	0503010811	5/8" UNF SELF ADJUSTING NUT		04
06	0503018814	SCREW 5/8 UNF X 5" G.5 CS ZN		04
07	0551019884	45 X 50 X 3/8 FASTENER		01
08	0503013357	3/8 SELF-ADJUSTING NUT		02
09	0501014251	FLAT WASHER		02
10	0503011125	SELF ADJUSTING 7/8" UNC NUT		02
11	0503011121	7/8" X 7" BOLT		02

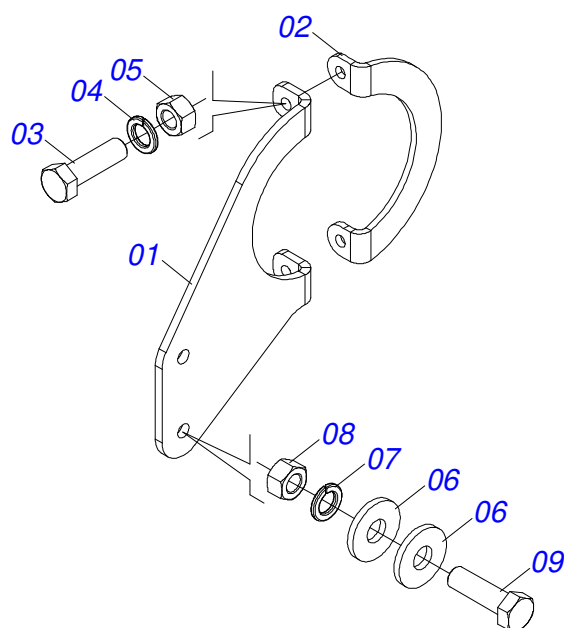


Item	Code	Description	See page	QT
01	0591012158	REAR AIR DUCT SUPPORT		01
02	0521014442	LOWER AIR DISTRIBUTOR SUPPORT		01
03	0503010371	5/16" X 1" BOLT		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
07	0503010025	3/8 SPRING WASHER		02
08	0503010026	3/8" NUT		02
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02

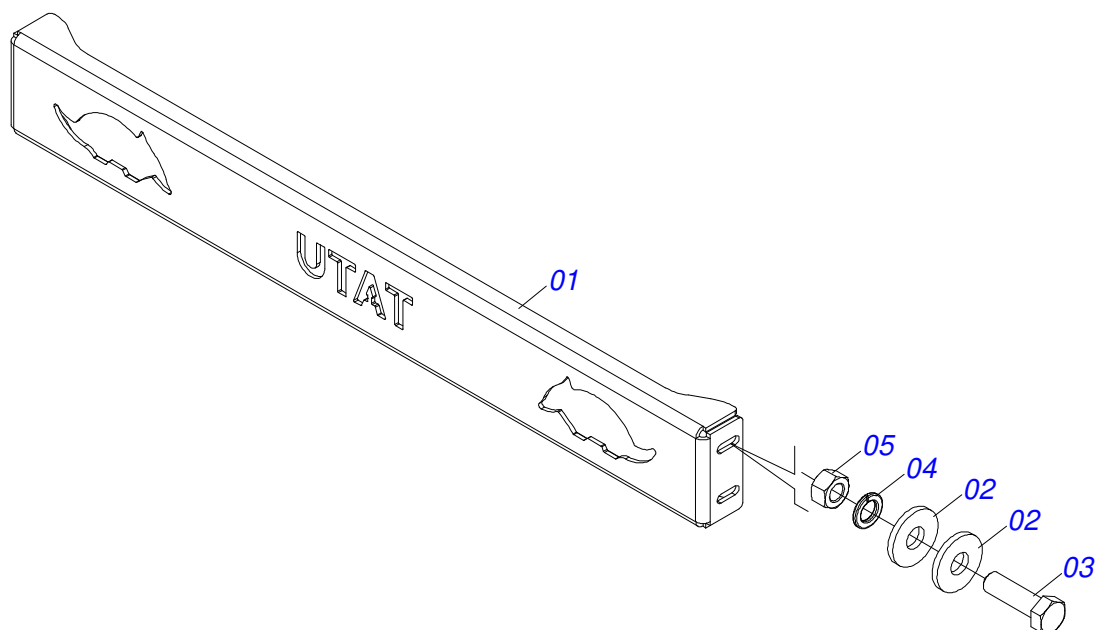


Item	Code	Description	See page	QT
01	0581012238	SEED HOPPER SUPPORT		01
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
03	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04

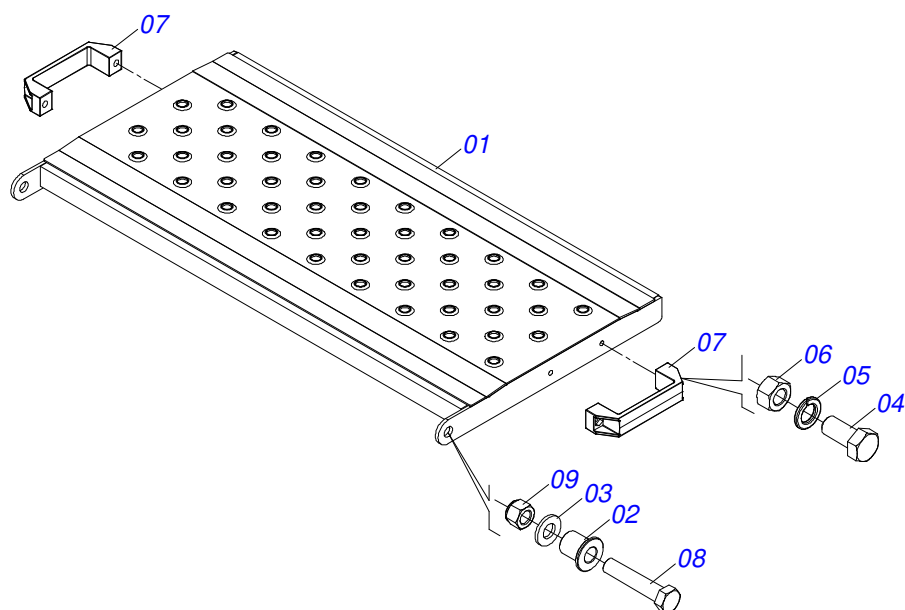


Item	Code	Description	See page	QT
01	0531060007	PLATFORM		01
02	0591010677	PLATFORM SUPPORT SLEEVE		02
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
04	0503010371	5/16" X 1" BOLT		04
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
06	0503010337	5/16" NUT		04
07	0503011907	NYLON HANDLE		02
08	0503011082	C1/2" X 1.3/4" SCREW		02
09	0503011336	1/2" HEX SELF ADJUSTING NUT		02

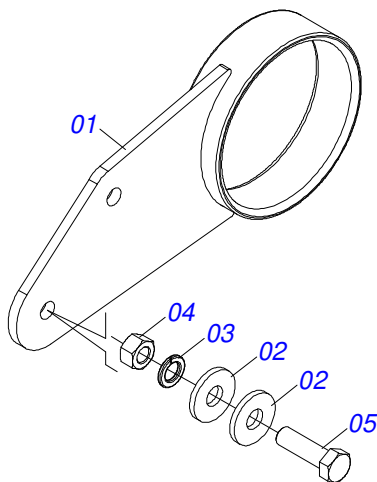


Item	Code	Description	See page	QT
01	0531060404	REAR SUPPORT HOSE		01
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02

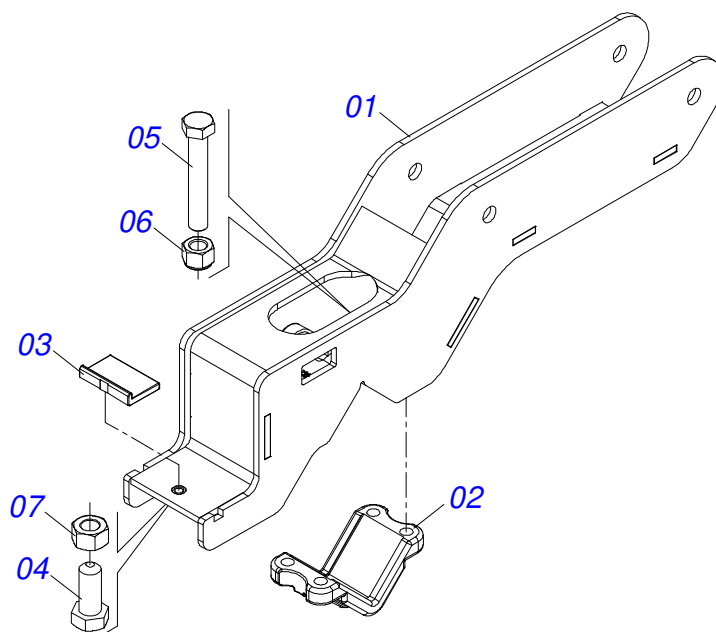


Item	Code	Description	See page	QT
01	0531060403	SUPPORT FIXING ARTICULATION		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0502010891	SPRING ROD SUPPORT CHOCK		01
04	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		01
05	0503017857	BOLT 5/8 UNF 4		04
06	0503010811	5/8" UNF SELF ADJUSTING NUT		04
07	0503010060	1/2 UNC G.5 ZN HEX NUT		01

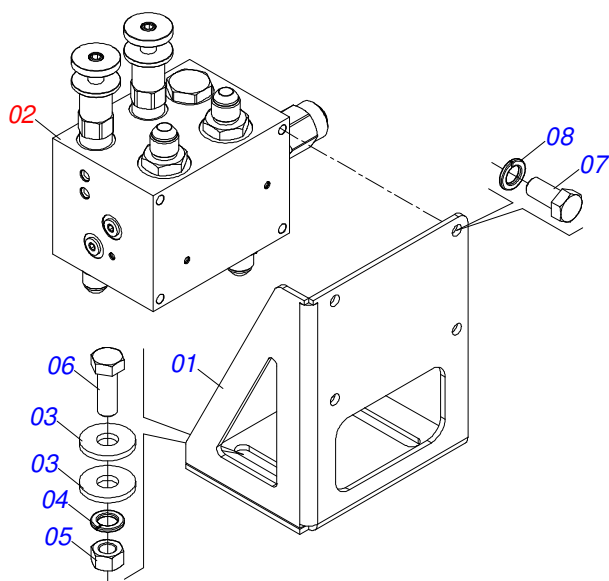


Item	Code	Description	See page	QT
01	0591012104	COMMAND BLOCK SUPPORT		01
02	0511059542	BLOCK COMMAND TURBINES	77	01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2 UNC G.5 ZN HEX NUT		04
06	0503014007	1/2" X 1-1/4" BOLT		04
07	0503015115	M8 X 1,25 X 12 BOLT		04
08	0503014371	M8 SPRING WASHER		04

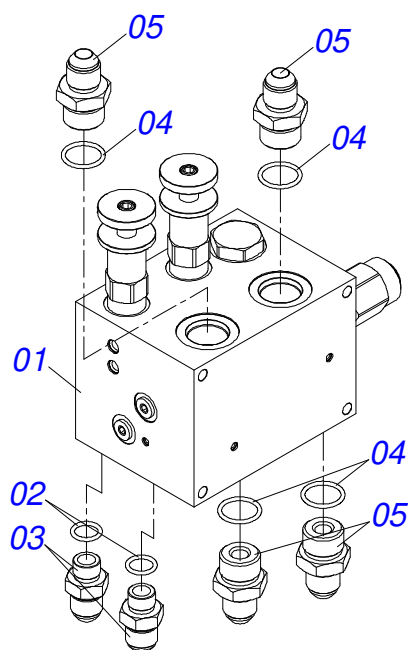

Item	Code	Description	See page	QT
01	0503018597	BLOCK COMMAND		01
02	0503010190	2-114 N 3006-9B O'RING		02
03	0501011460	7/8 NF REDUCTION NIPPLE		02
04	0503011109	2-119 N 3006-9B O'RING		04
05	0571013917	7/8"NF X 1.1/16 UNF NIPPLE		04

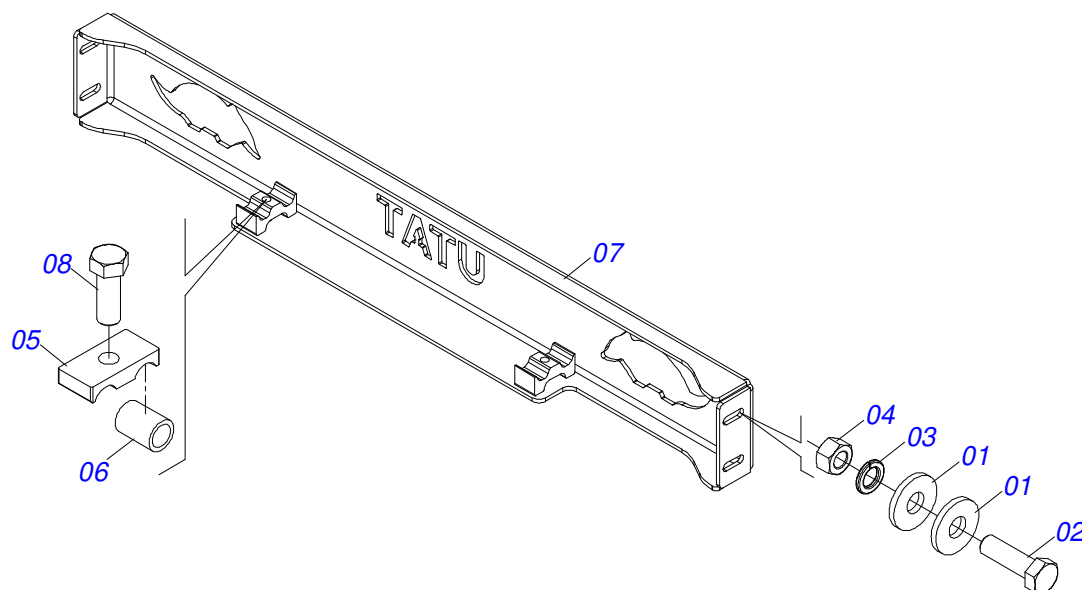


Item	Code	Description	See page	QT
01	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
02	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0502010477	HOSE CLAMP		02
06	0581018419	SUPPORT		02
07	0531060398	BODY SUPPORT SUPPORT FIXING DRAIN		01
08	0503011135	BOLT		02

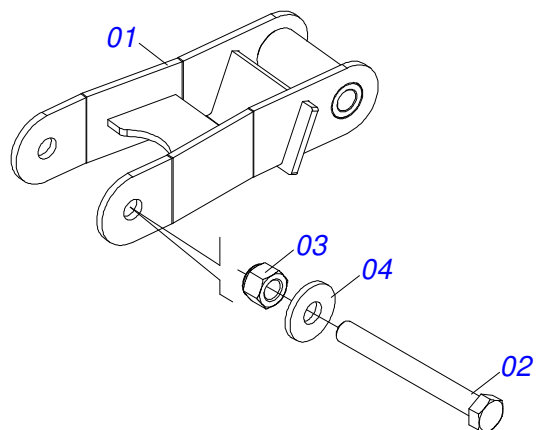


Item	Code	Description	See page	QT
01	0531060397	TRANSPORT SUPPORT		01
02	0503011121	7/8" X 7" BOLT		01
03	0503011125	SELF ADJUSTING 7/8" UNC NUT		01
04	0501014251	FLAT WASHER		01

SUCTION TURBINE


0541051253

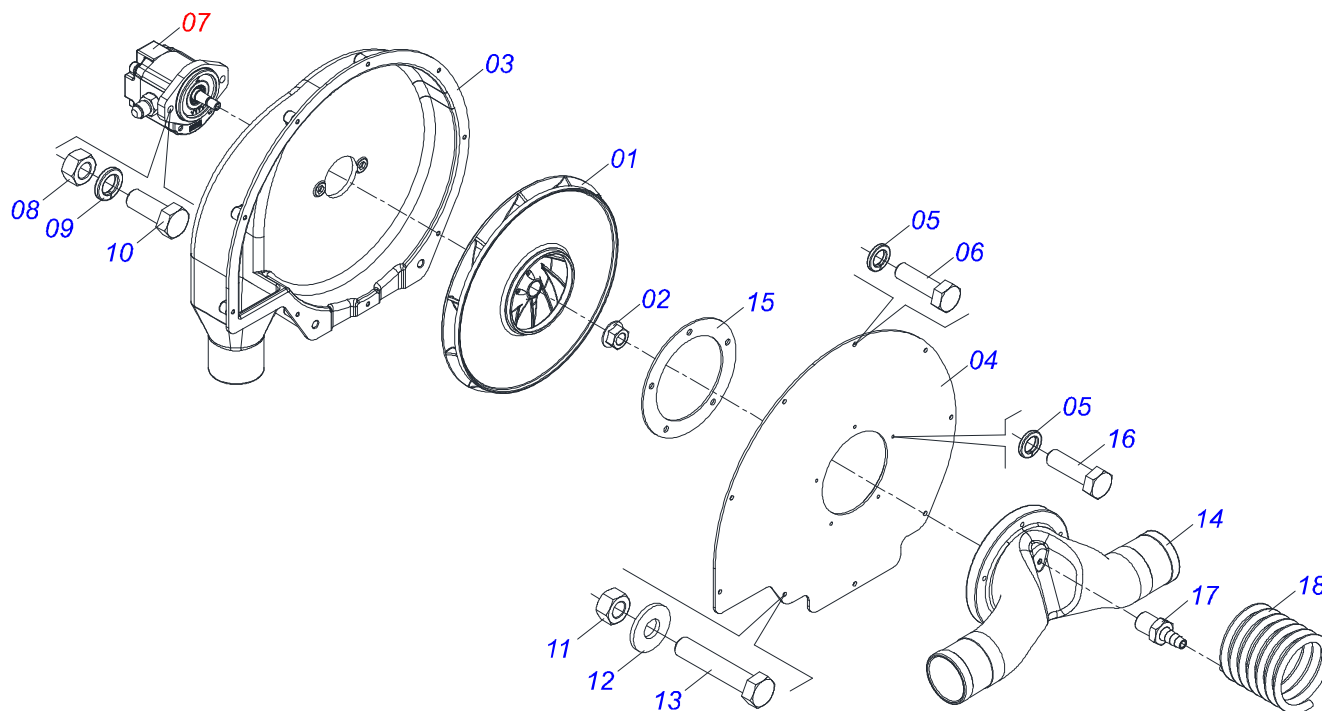


Item	Code	Description	See page	QT
01	0591018230	FAN 428		01
02	0513010047	1/2 NC HEXAGONAL FLANGED NUT		01
03	0591018228	TURBINE BOX		01
04	0531062277	TURBINE FRONT COVER		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		14
06	0503010358	5/16" X 5/8" BOLT		09
07	0541051254	COMPLETE PLM ENGINE	81	01
08	0503013357	3/8 SELF-ADJUSTING NUT		02
09	0503010025	3/8 SPRING WASHER		02
10	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
11	0503011336	1/2" HEX SELF ADJUSTING NUT		02
12	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
13	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
14	0503035455	HYDRAULIC TURBINE SUCTION DUCT		01
15	0503035611	SUCTION DUCT SEAL		01
16	0503010397	5/16" X 1-3/4" BOLT		05
17	0513010681	SPIKE CONNECTION 1/8 BSTP		01
18	0501213777	TECALON TUBE		01

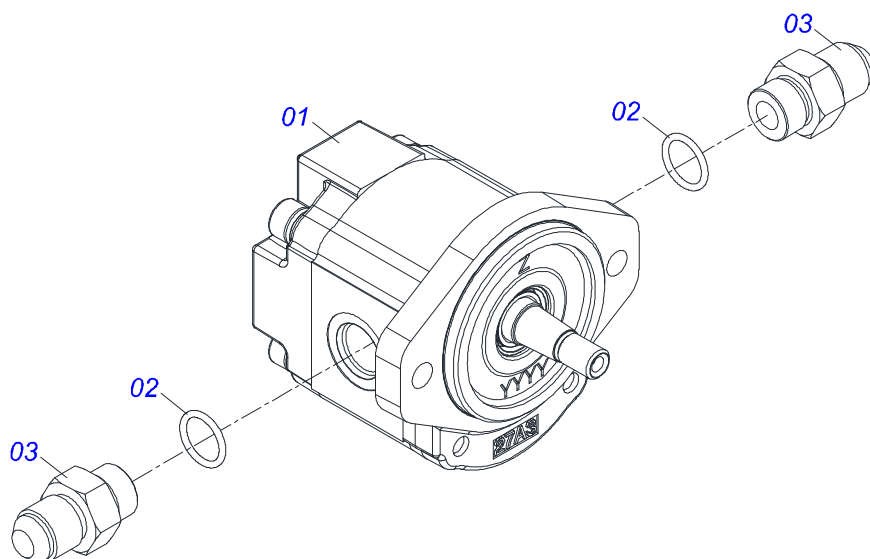


Item	Code	Description	See page	QT
01	0513010038	ENGINE		01
02	0503010045	O'RING		02
03	0591015515	NIPPLE FITTING		02

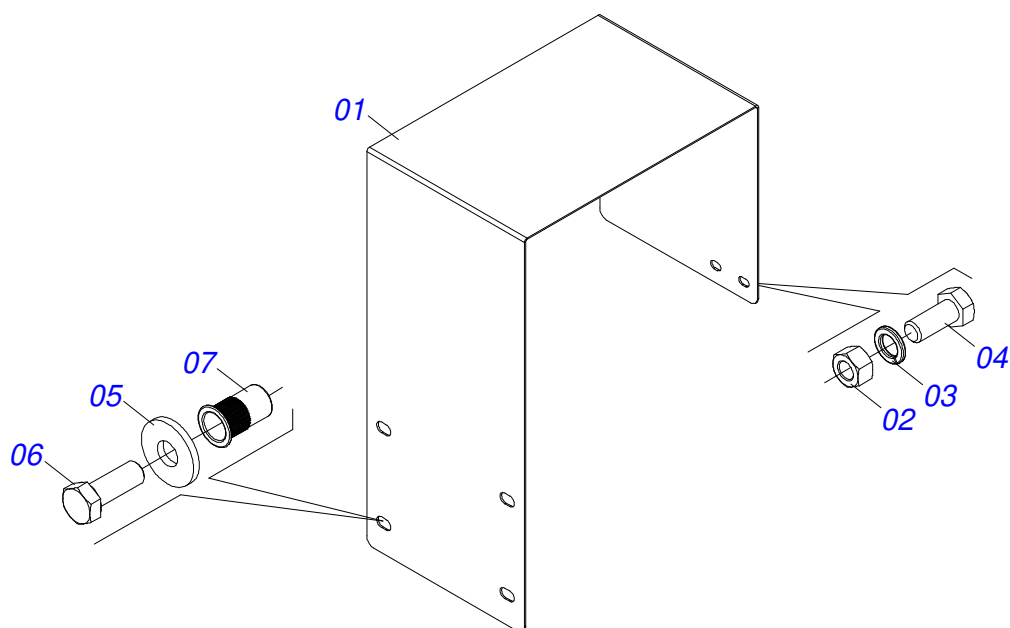


Item	Code	Description	See page	QT
01	0591013550	TURBINE MOTOR PROTECTION		01
02	0503010026	3/8" NUT		02
03	0503010025	3/8 SPRING WASHER		02
04	0503012456	3/8" X 7/8" BOLT		02
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
06	0503012560	3/8" X 1" BOLT		04
07	0503019413	THREAD SCREW INTERNAL		04

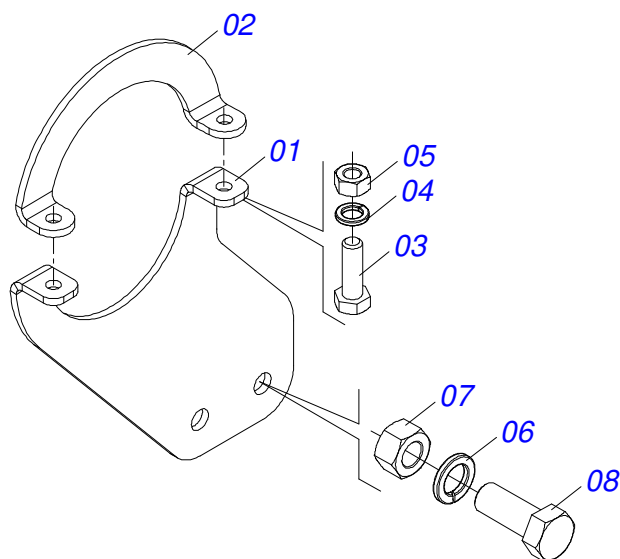


Item	Code	Description	See page	QT
01	0591013546	RIGHT REAR AIR DUCT SUPPORT BODY		01
02	0521014442	LOWER AIR DISTRIBUTOR SUPPORT		01
03	0503010371	5/16" X 1" BOLT		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010060	1/2 UNC G.5 ZN HEX NUT		02
08	0501010161	1/2" X 1.1/4" BOLT		02

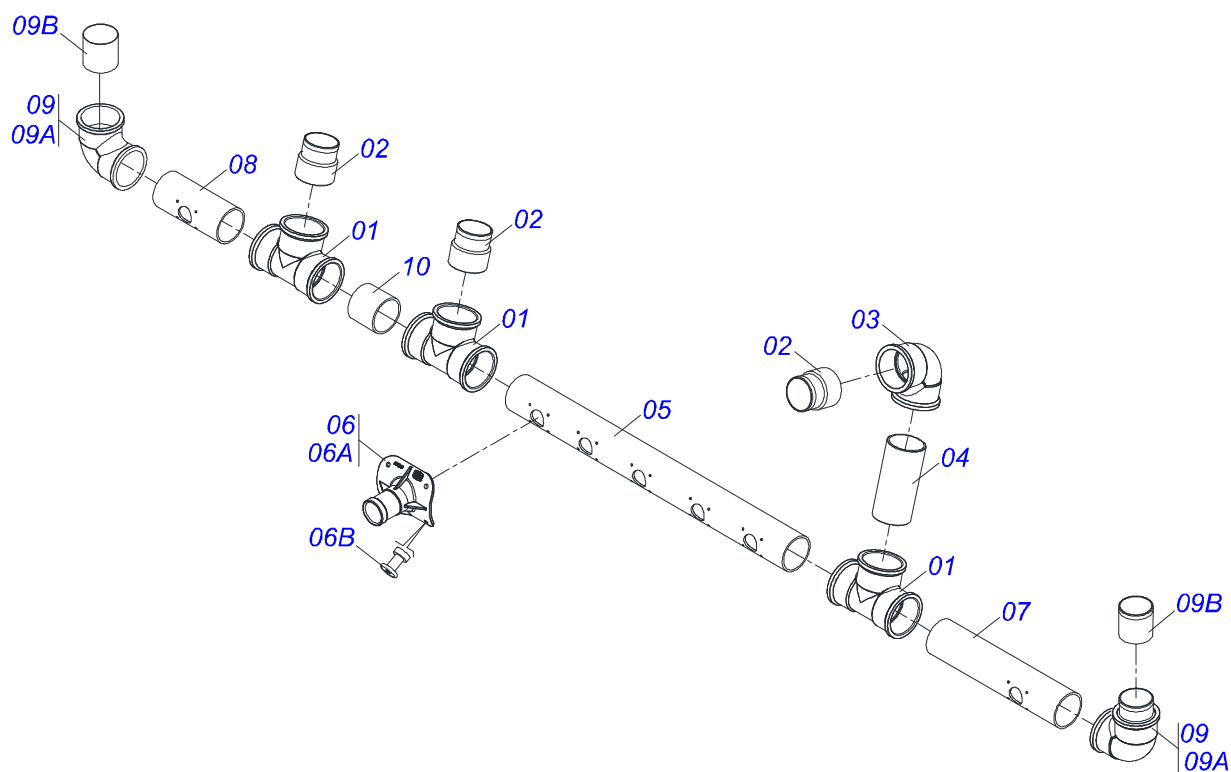


Item	Code	Description	See page	QT
01	0503012567	T-JOIN FOR TUBE 110		03
02	0581013890	AIR DISTRIBUTOR SOCKET		03
03	0503017845	90 PVC KNEE		01
04	0591012376	110 X 230 SLEEVE		01
05	0591010690	CONDUCTOR BODY AIR 5 MOUTH 1650 5 HOLES		01
06	0521056048	AIR DISTRIBUTOR NOZZLE 1.1 / 2 WITH RIVET		07
06A	0503034812	SOCKET DISTRIBUTOR AR		01
06B	0503012856	POP RIVET		04
07	0591012415	AR 500 DISTRIBUTOR BODY 7655/8450		01
08	0591012414	AR 400 DISTRIBUTOR BODY 7655/8450		01
09	0521050393	ASSY KNEE		02
09A	0503017845	90 PVC KNEE		01
09B	0581013890	AIR DISTRIBUTOR SOCKET		01
10	0501315639	GLOVE 110 X 150		01

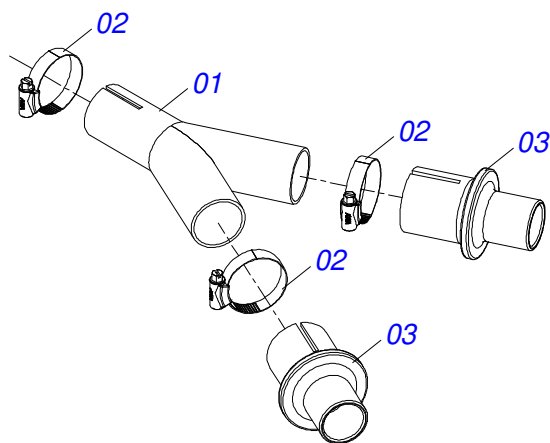


Item	Code	Description	See page	QT
01	0531060909	CSC SEED NOZZLE 7655/8450		01
02	0503010184	CLAMP		03
03	0591013769	NOZZLE HOSE FIXING SLEEVE		02

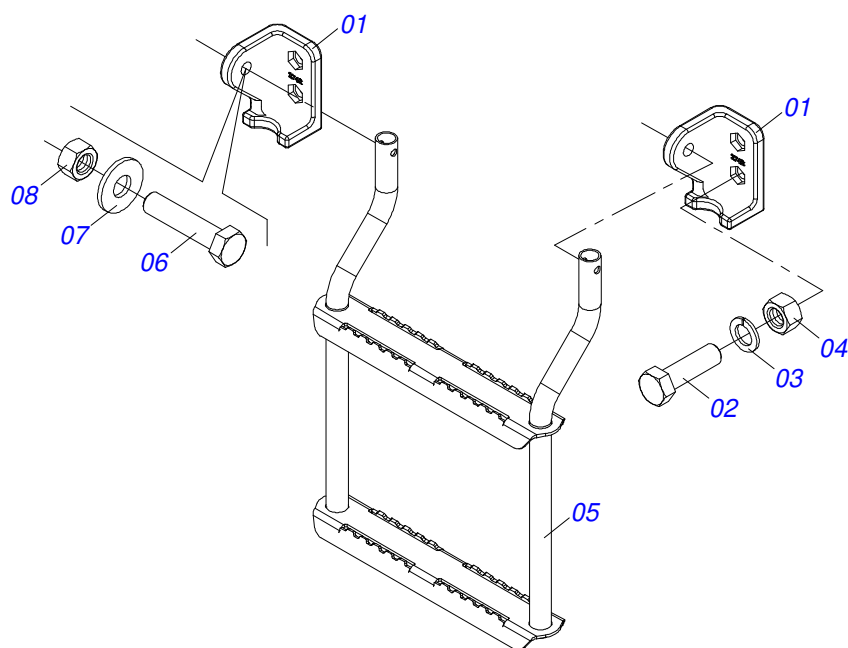

Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER		04
02	0503010237	3/8" X 1" BOLT		08
03	0503010025	3/8 SPRING WASHER		08
04	0503010026	3/8" NUT		08
05	0511069636	LADDER		02
06	0503011179	3/8" X 2-1/4" BOLT		04
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
08	0503013357	3/8 SELF-ADJUSTING NUT		04

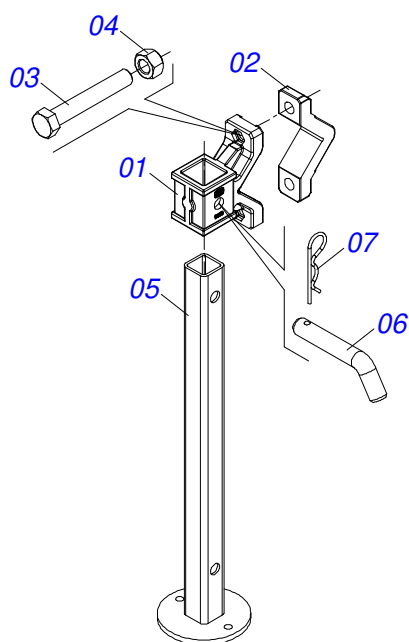

Item	Code	Description	See page	QT
01	0502011530	SUPPORT		02
02	0502010175	HITCH CLAMP		02
03	0501011543	5/8" X 4" BOLT		04
04	0503012412	5/8" UNC SELF LOCKING NUT		04
05	0501069951	PLOUGH SUPPORT		04
06	0501011075	PIN		02
07	0503030012	HITCH PIN CLIP		02

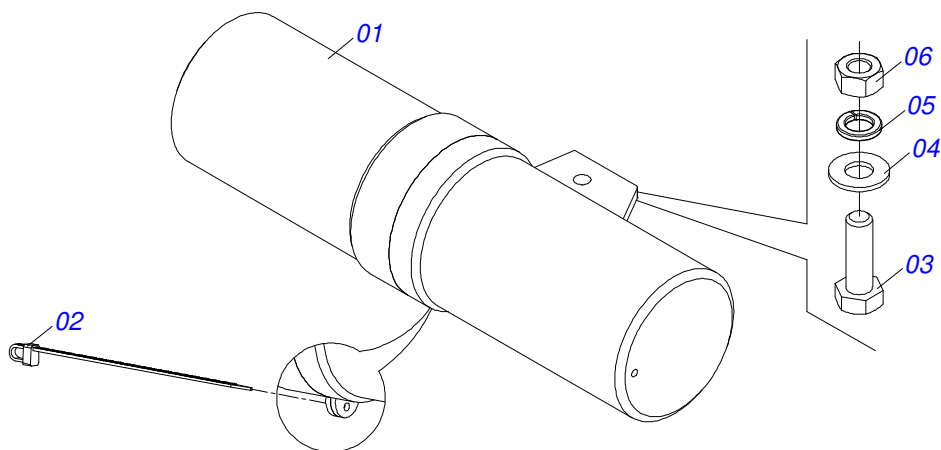

Item	Code	Description	See page	QT
01	0503060100	INSTRUCTIONS MANUAL CANISTER		01
02	0503010267	NYLON CLAMP		01
03	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
04	0501010694	FLAT WASHER		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
06	0503010337	5/16" NUT		01

LABELS SET

0541051565




Item	Code	Description	See page	QT
01	0503034968	ADHESIVE LABEL CSC 170 X 820	01	01
02	0503034969	ADHESIVE LABEL CSC 165 X 850	01	01
03	0503034970	LOGO TATU MARCHESAN (CSC) 155 X 1120	01	01
04	0503034971	ADHESIVE LABEL LOGO TATU MARCHESAN (CSC) 150 X 1130	01	01
05	0503034338	ADHESIVE LABEL	02	02
06	0503034983	LOGO TATU MARCHESAN ADHESIVE LABEL 190 X 613	04	04
07	0503031424	ATTENTION HYDRAULIC MARKER DECAL	02	02
08	0503031565	CAUTION TRANSPORTATION DECAL	02	02
09	0503032930	DANGER DECAL	06	06
10	0503031425	ATTENTION CARRYING-WHEEL LOCK DECAL	02	02
11	0503031428	READ MANUAL DECAL	01	01
12	0503031087	AUTO CONTROL APPROVED DECAL	01	01
13	0503031942	MANUAL SEAL DECAL	01	01
14	0503033422	NUMBER 8 DECAL	02	02
15	0503033418	NUMBER 4 DECAL	02	02
16	0503033419	NUMBER 5 DECAL	02	02
17	0503033414	NUMBER 0 DECAL	02	02
18	0503033676	WARNING LABEL ADHESIVE SEAL LOCK AXIS	04	04
19	0503034078	LIFTING POINTS DECAL	03	03
20	0503032949	ATTENTION 3 LANGUAGES DECAL	01	01
21	0503034500	GRIP COLORS (PLANTERS) DECAL	01	01
22	0521056998	ALUMINUM IDENTIFICATION LABEL WITH RIVET	01	01
22A	0503034003	61 X 118 SERIAL NUMBER TAG	01	01
22B	0503010001	3.2 X 5.5 RIVET	04	04
23	0503034967	ADHESIVE LABEL (190 X 720)	02	02
24	0503034984	ADHESIVE LABEL (190 X 613)	04	04
25	0503033764	ADHESIVE LABEL APT MARCHESAN LOWER	02	02
26	0503033765	ADHESIVE LABEL APT MARCHESAN LARGER	01	01
27	0503033021	ADHESIVE LABEL ISOBUS INSIDE 200MM	02	02


LABELS SET

0541051565


Item	Code	Description	See page	QT
28	0503033022	ADHESIVE LABEL ISOBUS INSIDE 400MM		02
29	0503033981	ADHESIVE LABEL		01

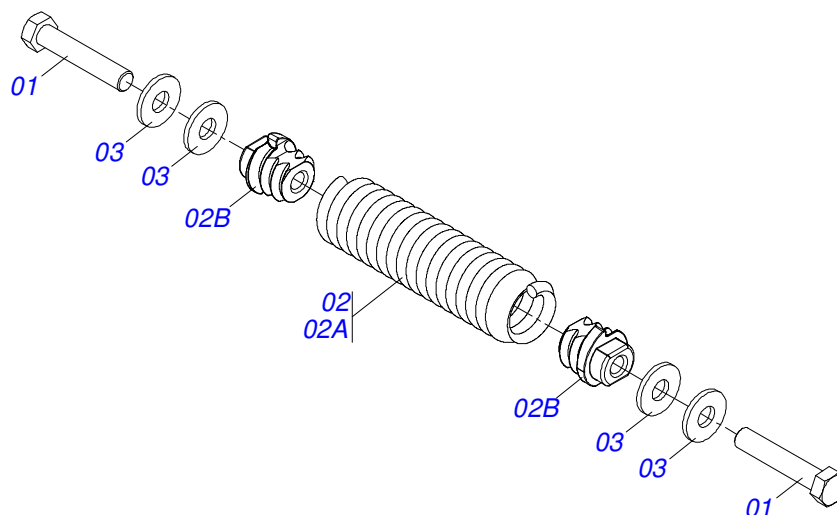


Item	Code	Description	See page	QT
01	0503013030	5/8" X 3.1/4" BOLT		02
02	0511050681	TRACTION SPRING		01
02A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
02B	0561016062	SPRING HITCH		02
03	0501012140	FLAT WASHER		04

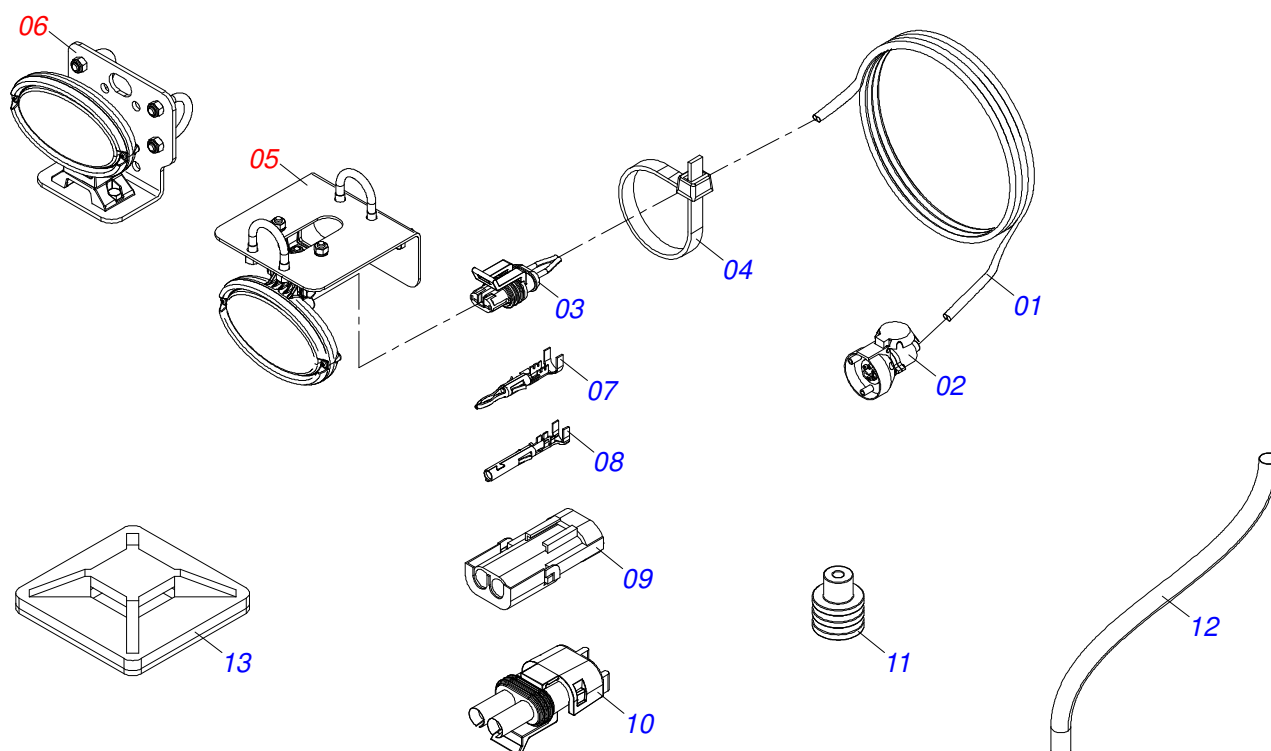


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		18
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		03
04	0503012903	T-80M CRAMP NYLON		50
05	0521053672	LIGHTHOUSE ASSY	92	02
06	0521052792	MOUNTED REAR LIGHT	93	01
07	0503015907	MALE TERMINAL		02
08	0503015908	FEMALE TERMINAL		02
09	0503015906	TWO-WAY MALE CONNECTOR		01
10	0503015905	TWO-WAY FEMALE MALE CONNECTOR		01
11	0503015911	CABLE SEAL		04
12	3505151602	TUBE		01
13	0503017702	FIXER		03

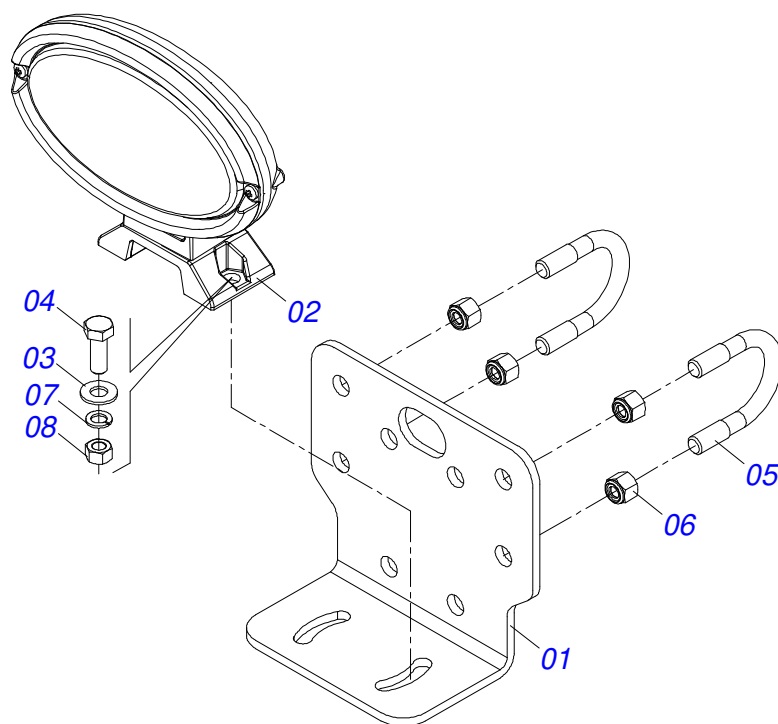


Item	Code	Description	See page	QT
01	0581015856	REDLIGHT SUPPORT		01
02	0503018738	HEADLIGHT		01
03	0501010694	FLAT WASHER		02
04	0503010358	5/16" X 5/8" BOLT		02
05	0551019884	45 X 50 X 3/8 FASTENER		02
06	0503013357	3/8 SELF-ADJUSTING NUT		04
07	0503010337	5/16" NUT		02
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		02

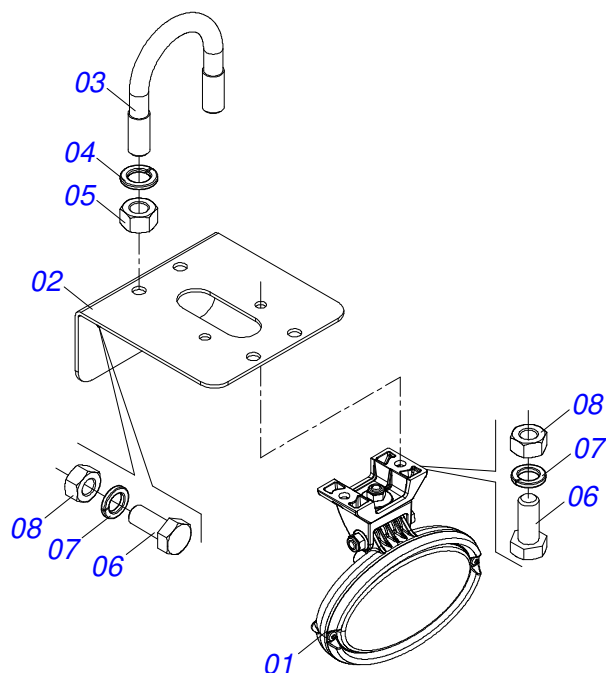


Item	Code	Description	See page	QT
01	0503018738	HEADLIGHT		01
02	0581016999	REAR LIGHT SUPPORT		01
03	0551019884	45 X 50 X 3/8 FASTENER		02
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04

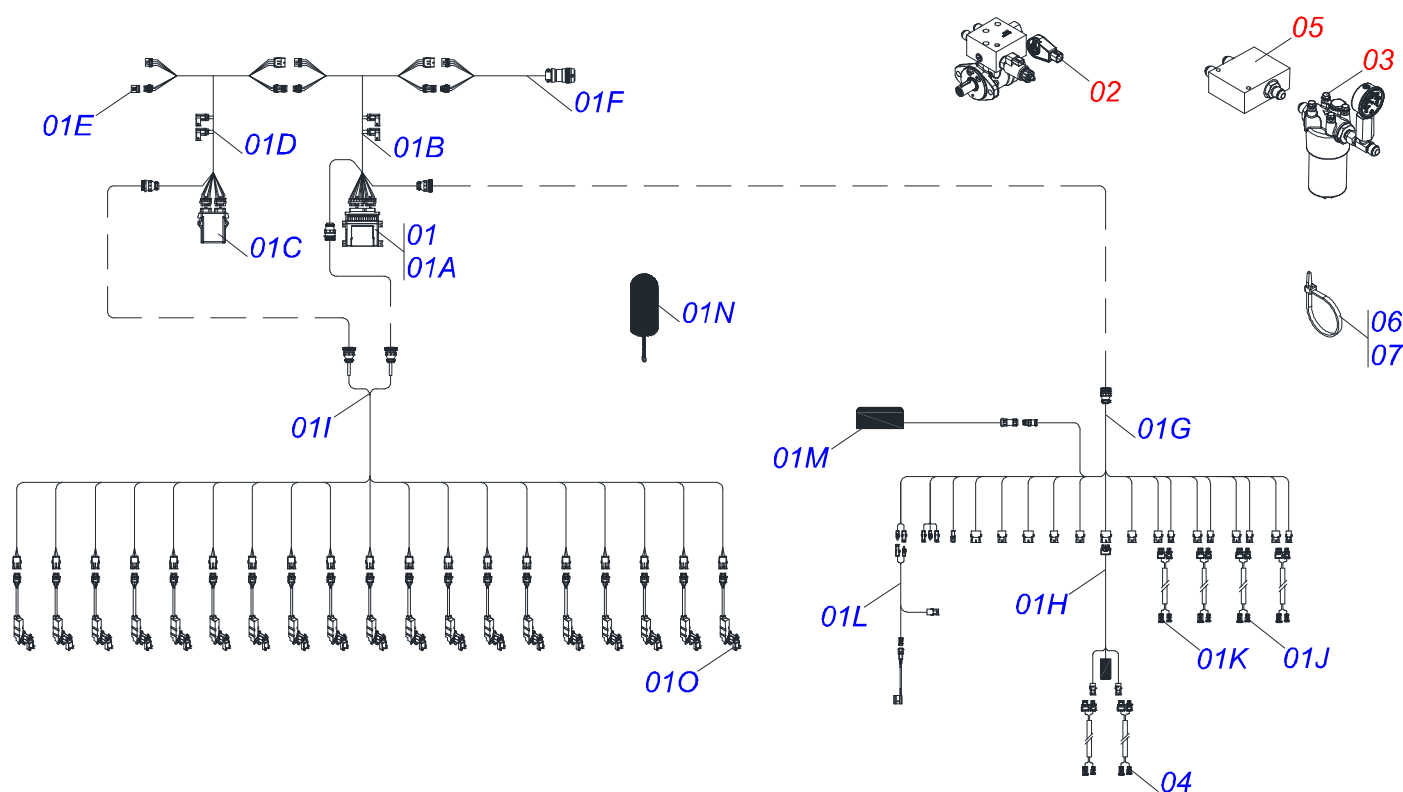


Item	Code	Description	See page	QT
01	0503064240	INTELLIAG ISO6 KIT		001
01A	0503019526	CONTROL MODULE ISO6 6CH ADV		001
01B	0503019384	CABLE CTRL MASTER MODULE		001
01C	0503019298	MODULATE BODY		001
01D	0503015210	WSMB ISOBUS 467981200 MODULE CABLE		001
01E	0503015071	CONNECTOR		001
01F	0503019685	CABLE ISO CONNECTION TRACTOR 8,0 MT 020011353		001
01G	0503019386	MODULES "C"		001
01H	0503019385	WHIP ELETTRIC		001
01I	0513012078	SIMPLE MONITORING CABLE		001
01J	0513010367	CABLE		004
01K	0513010421	EXTENSION CABLE EMD		002
01L	0513010023	EXTERNAL LIFTING CABLE		001
01M	0503017443	ANTENNA GPS PM 400		001
01N	0503017031	CLEANING BRUSH		001
01O	0503015218	SENSOR FOTOELE PM 400		019
02	0521056496	MOTOR EMD 80 WITH BLOCK BLFP2618	95	006
03	0511056972	FILTER HYDAC	96	001
04	0503019291	SUPPORT SENSOR		001
05	0521054490	FLOW DIVIDING VALVE ASSY	97	001
06	0503013100	NYLON CLAMP		100
07	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		300

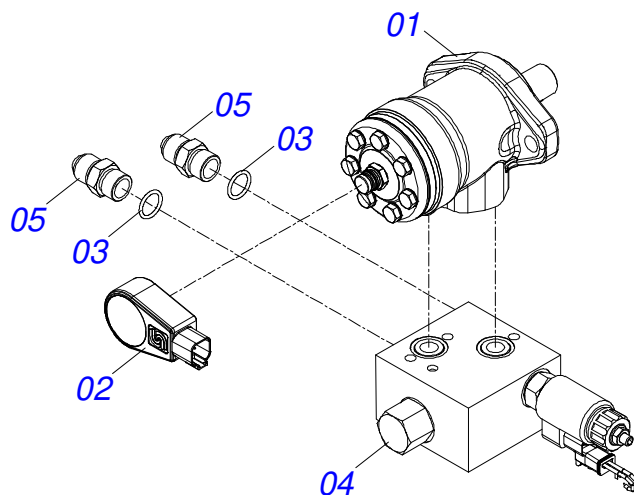


Item	Code	Description	See page	QT
01	0513010049	MOTOR OMP X 80 EMD - 11185907		01
02	0503018769	MOTOR SPEED SENSOR		01
03	0503010045	O'RING		02
04	0503019320	VALVE		01
05	0501010590	NIPPLE		02

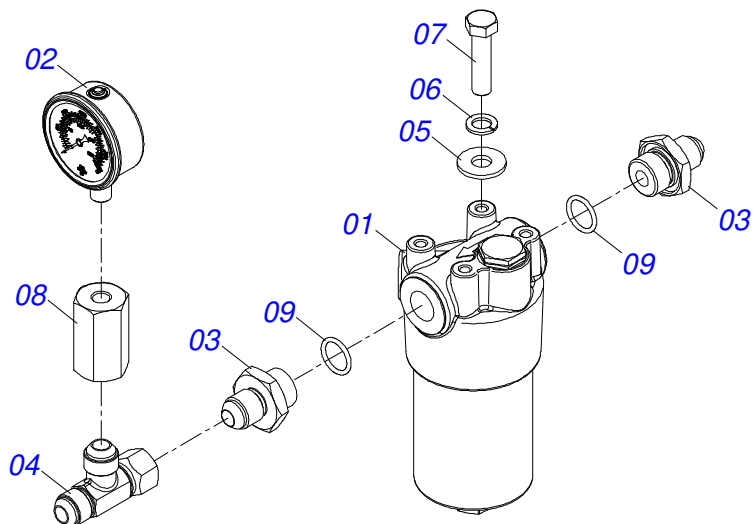


Item	Code	Description	See page	QT
01	0503063151	PRESSURE FILTER MFM HYDAC 1319024BR		01
02	0503016336	PRESSURE GAUGE		01
03	0581011416	7/8"NF UNF NIPPLE		02
04	0503012341	7/8" T ADAPTER		01
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
07	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
08	0571016236	HIDRAULIC ADAPTER		01
09	0503014724	2-215 N 3006-9B O'RING		02

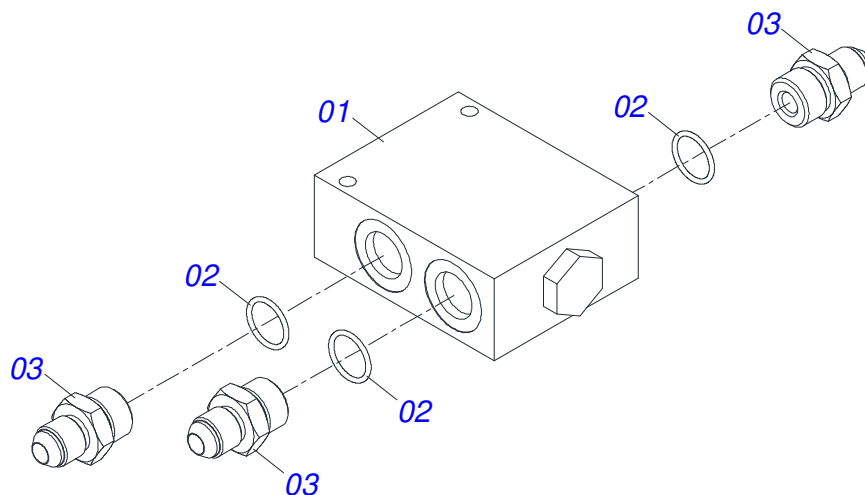


Item	Code	Description	See page	QT
01	0503016227	FLOW DIVIDING VALVE		01
02	0503013917	O`RING 2-224		03
03	0571013917	7/8\"NF X 1.1/16 UNF NIPPLE		03

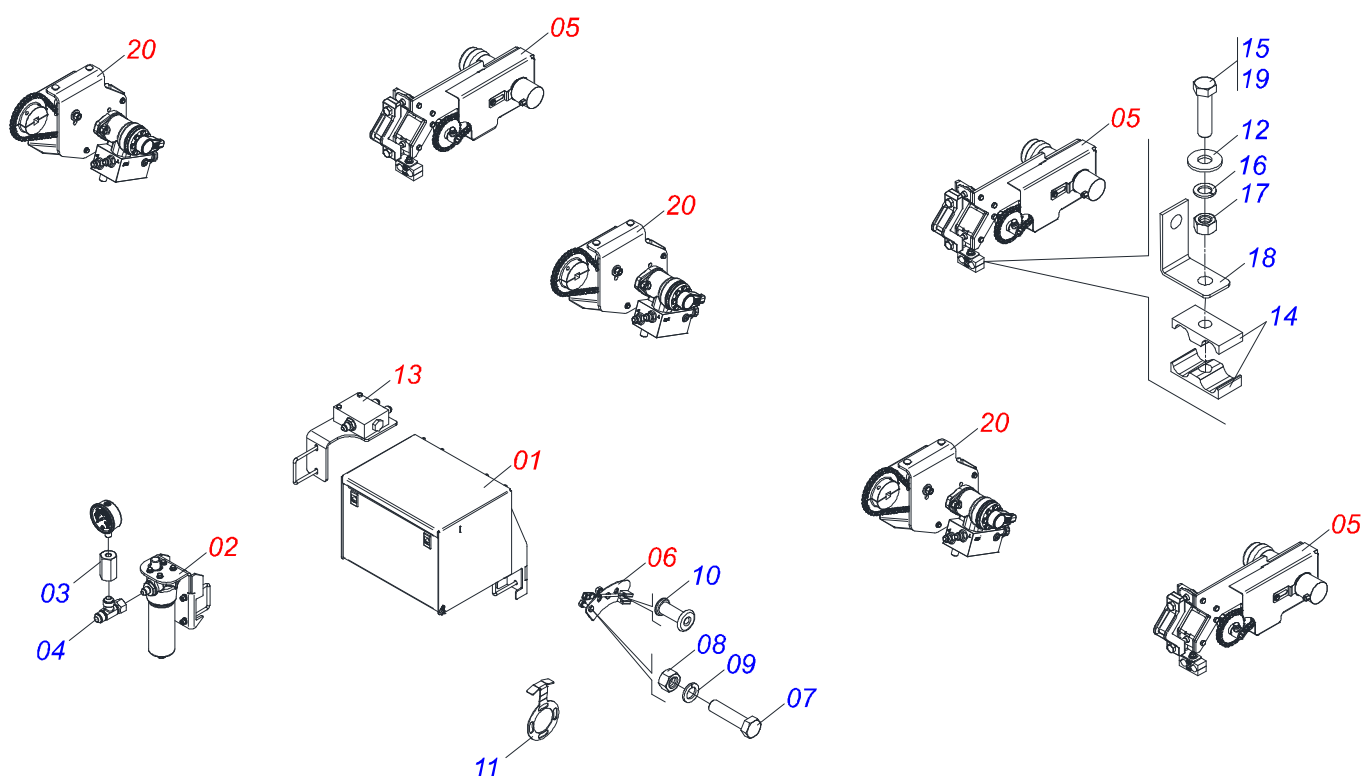


Item	Code	Description	See page	QT
01	0531050693	MODULE BOX	99	01
02	0531050811	APT FILTER SUPPORT	101	01
03	0571016236	HIDRAULIC ADAPTER		01
04	0503012341	7/8" T ADAPTER		01
05	0531055259	SUPPORT WITH LEFT ENGINE	102	03
06	0521069589	POSITION SENSOR SUPPORT		01
07	0503011135	BOLT		02
08	0503010244	7/16" NUT		02
09	0503010180	7/16" SPRING WASHER		02
10	0503013356	RIVET POP 3,2 X 10,0		01
11	0581018875	SENSOR DRIVER		01
12	0501013518	FLAT WASHER		03
13	0541051912	VALVE SUPPORT	103	01
14	0502012623	UPPER BODY HOSE CLAMP 3/4		06
15	0503011179	3/8" X 2-1/4" BOLT		03
16	0503010025	3/8 SPRING WASHER		06
17	0503010026	3/8" NUT		06
18	0501214233	SUPPORT HOSE GUIDE		03
19	0503010237	3/8" X 1" BOLT		03
20	0541051899	RIGHT FERTILIZER MOTOR SUPPORT	104	03

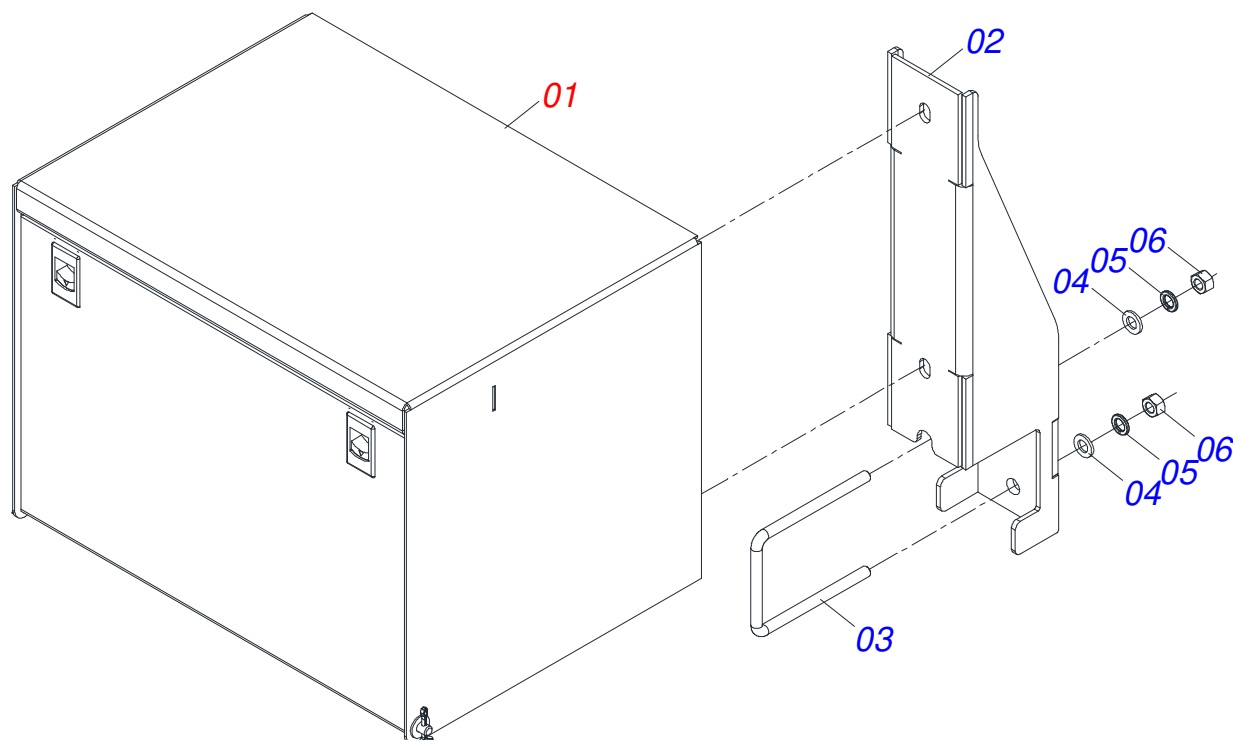


Item	Code	Description	See page	QT
01	0511059348	APT ASSY MODULE BOX	100	01
02	0521069584	BOX SUPPORT		02
03	0581019503	3/8" FASTENER		02
04	0503015135	FLAT WASHER 10 X 18 X 2		04
05	0503010025	3/8 SPRING WASHER		04
06	0503010026	3/8" NUT		04

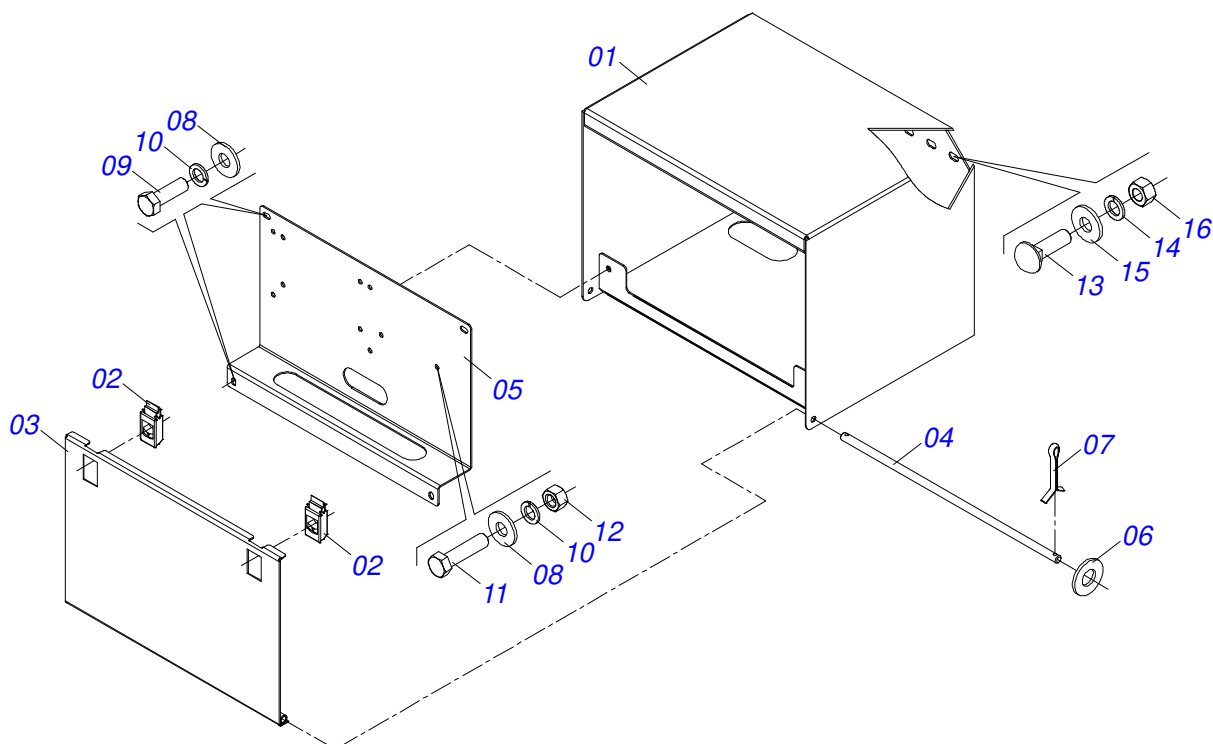


Item	Code	Description	See page	QT
01	0521066834	MODULE BOX		01
02	0503018171	FAST LOCK ASSY		02
03	0521066833	BOX COVER		01
04	0571012006	COVER PIVOT SHAFT		01
05	0571012005	SUPPORT GUIDE ASSY		01
06	0501010694	FLAT WASHER		03
07	0503010257	1/8" X 1" SPLIT PIN		02
08	0511017303	FLAT WASHER		10
09	0503010298	1/4" X 1/2" BOLT		04
10	0503010143	1/4" SPRING WASHER		10
11	0503010294	1/4" X 7/8" BOLT		06
12	0503010144	1/4" NUT		06
13	0501011643	3/8 X 1" BOLT		04
14	0503010025	3/8 SPRING WASHER		04
15	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
16	0503010026	3/8" NUT		04

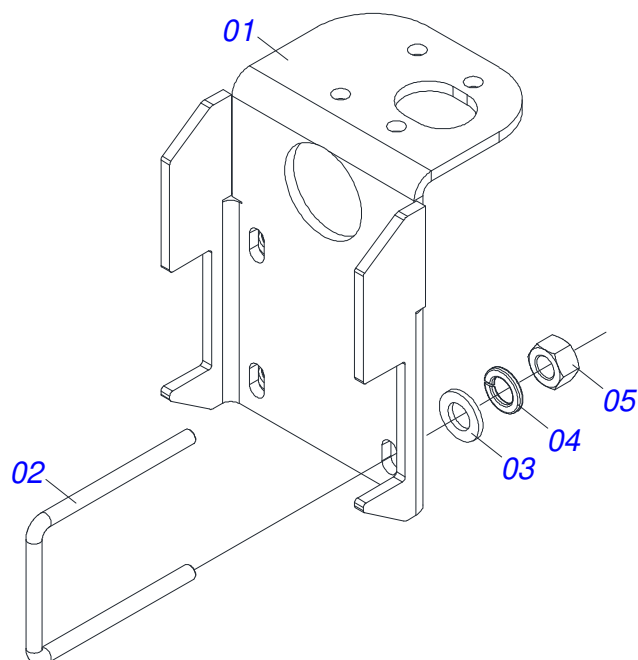


Item	Code	Description	See page	QT
01	0591017488	APT FILTER SUPPORT		01
02	0581019503	3/8" FASTENER		02
03	0503015135	FLAT WASHER 10 X 18 X 2		04
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04

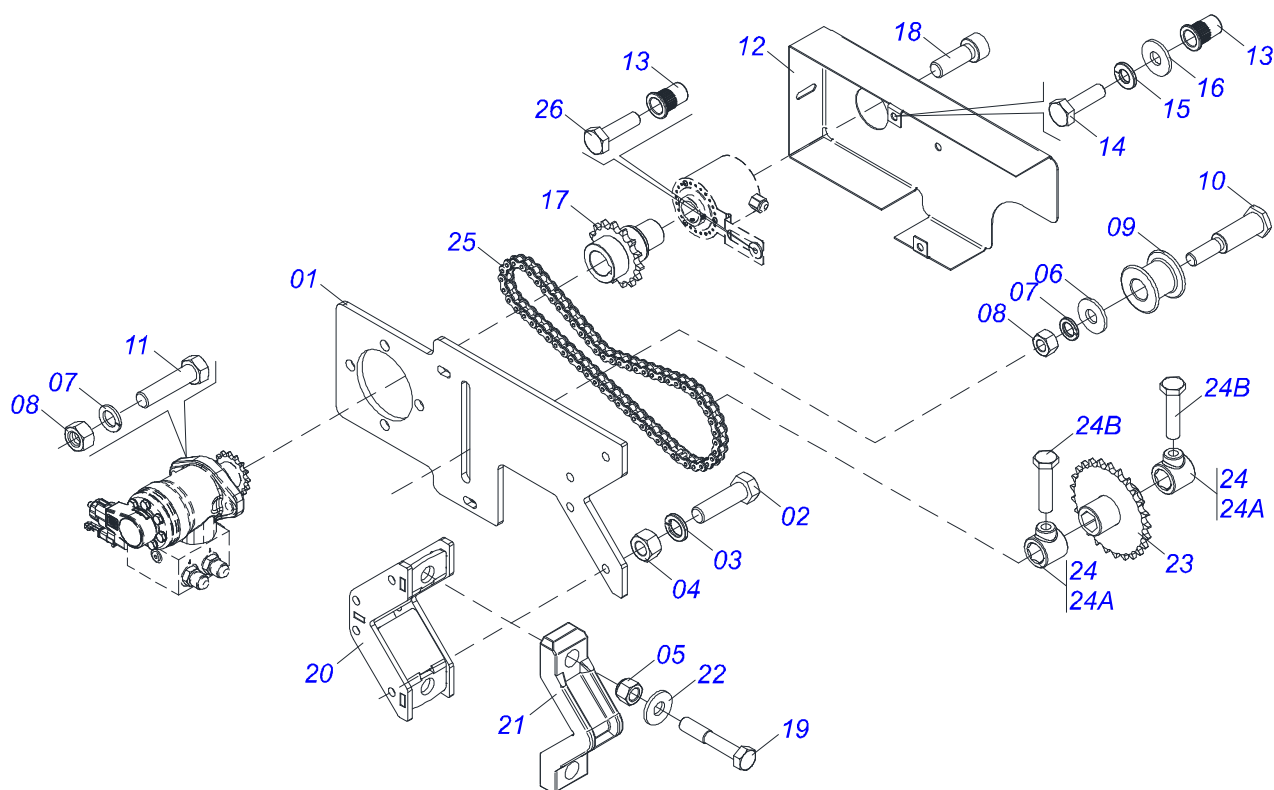


Item	Code	Description	See page	QT
01	0501214235	SEED MOTOR PLATE	01	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8 SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0503010811	5/8" UNF SELF ADJUSTING NUT	02	
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN	01	
07	0503010019	1/2" SPRING WASHER	03	
08	0503010060	1/2 UNC G.5 ZN HEX NUT	03	
09	0503030402	PULLEY	01	
10	0531019479	AXLE CHAIN GEAR	01	
11	0503010238	BOLT 1/2 UNC X 1.3/4 CS G.2 ZN	02	
12	0501214234	SEED MOTOR CAP	01	
13	0503019901	INTERNAL THREAD RIVET RM 1/4 P30S	03	
14	0503013813	1/4" UNC X 7/8" BOLT	02	
15	0503010143	1/4" SPRING WASHER	02	
16	0503010305	FLAT WASHER	02	
17	0501111116	MOTOR GEAR	01	
18	0503015162	M 8 X 1,25 X 20 BOLT	01	
19	0503017960	5/8" X 3-12" BOLT	02	
20	0531060590	HYDRAULIC MOTOR SUPPORT	01	
21	0502010175	HITCH CLAMP	01	
22	0501012140	FLAT WASHER	02	
23	0531063551	GEAR 25Z HEXAGONAL 20	01	
24	0511054314	TRANSMISSION AXLE LOCK SLEEVE	02	
24A	0502012699	TRANSMISSION HUB LOCK SLEEVE	02	
24B	0503010256	3/8" X 3/4" BOLT	02	
25	0503012142	40-1 CHAIN X 61 LINK + MENDING	01	
26	0503013849	1/4" UNC X 3/4" BOLT	01	

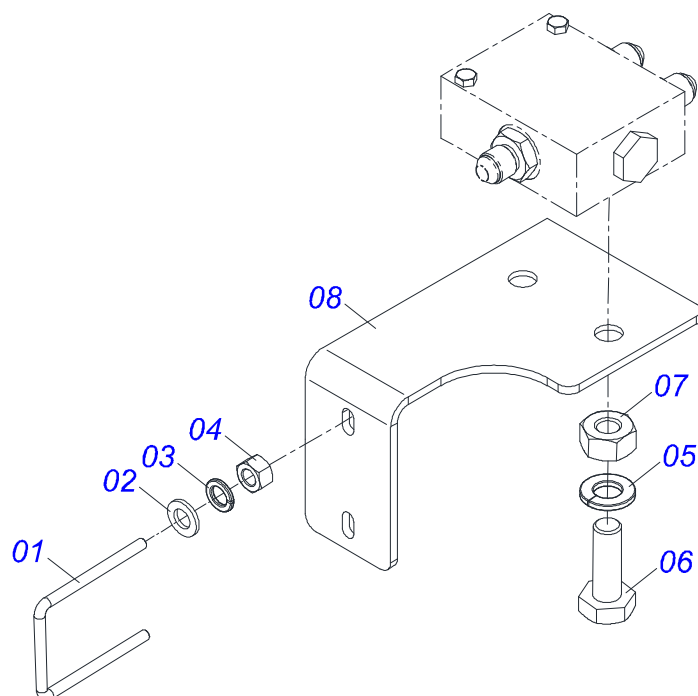


Item	Code	Description	See page	QT
01	0581019503	3/8" FASTENER		01
02	0503015135	FLAT WASHER 10 X 18 X 2		02
03	0503010025	3/8 SPRING WASHER		02
04	0503010026	3/8" NUT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503011053	5/16" X 3" C S 6.5 ZN BOLT		02
07	0503010337	5/16" NUT		02
08	0501315337			01

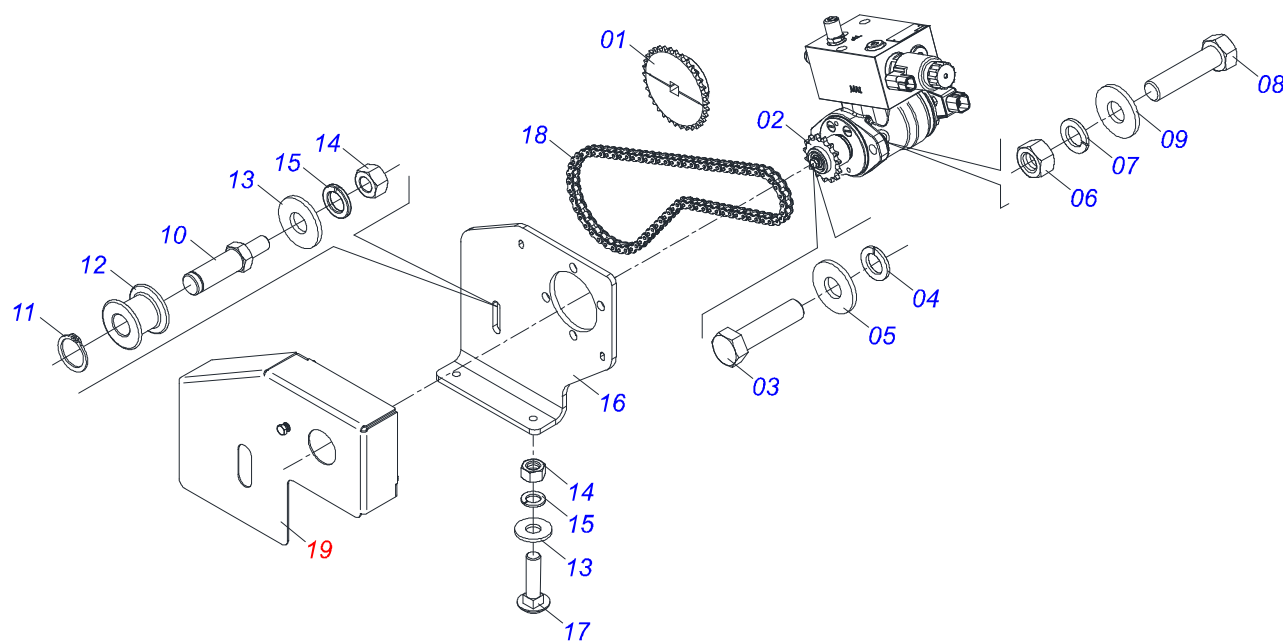


Item	Code	Description	See page	QT
01	0503062754	GEAR 34Z P.1/2 APT		01
02	0521069832	15Z GEAR		01
03	0503010282	1/4" X 3/4" BOLT		01
04	0503010143	1/4" SPRING WASHER		01
05	0561011665	FLAT WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		03
07	0503010019	1/2" SPRING WASHER		03
08	0503018701	SCREW 1/2 UNC X 1.3/4 CS G.5 ZN		02
09	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
10	0561013049	CHAIN TIGHTENER AXLE		01
11	0503010302	501019 SEAL RING		01
12	0503030402	PULLEY		01
13	0501013518	FLAT WASHER		02
14	0503010026	3/8" NUT		02
15	0503010025	3/8 SPRING WASHER		02
16	0501315324	ENGINE SUPPORT		01
17	0501010942	3/8" X 1-1/4" BOLT		02
18	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
19	0541051900	CURRENT PROTECTION	105	01

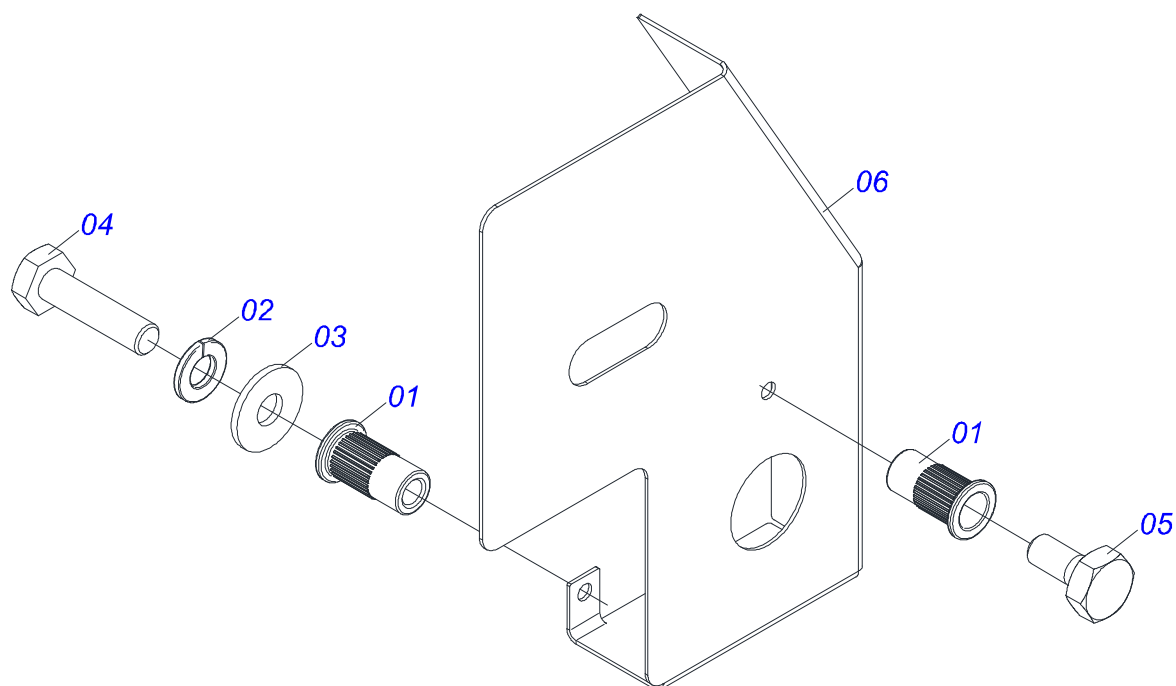


Item	Code	Description	See page	QT
01	0503019412	RIVET SCREW INTERNAL		03
02	0503010143	1/4" SPRING WASHER		02
03	0503010305	FLAT WASHER		02
04	0503010461	1/4" X 1" BOLT		02
05	0501212320	ENCODER LOCK SCREW		01
06	0501315323	CURRENT PROTECTION		01

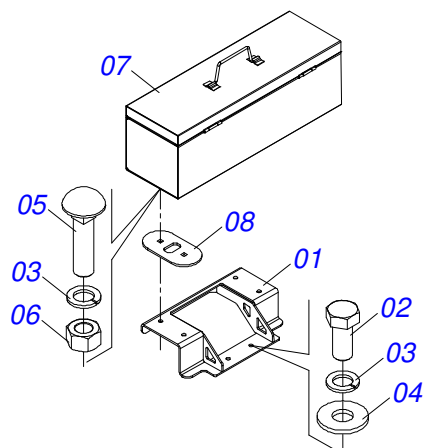


Item	Code	Description	See page	QT
01	0521068652	TOOLS BOX SUPPORT		01
02	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		02
03	0503010025	3/8 SPRING WASHER		06
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
05	0501011643	3/8 X 1"BOLT		04
06	0503010026	3/8" NUT		04
07	0503034772	BOX		01
08	0581017000	PLATE INTERMEDIARY		02

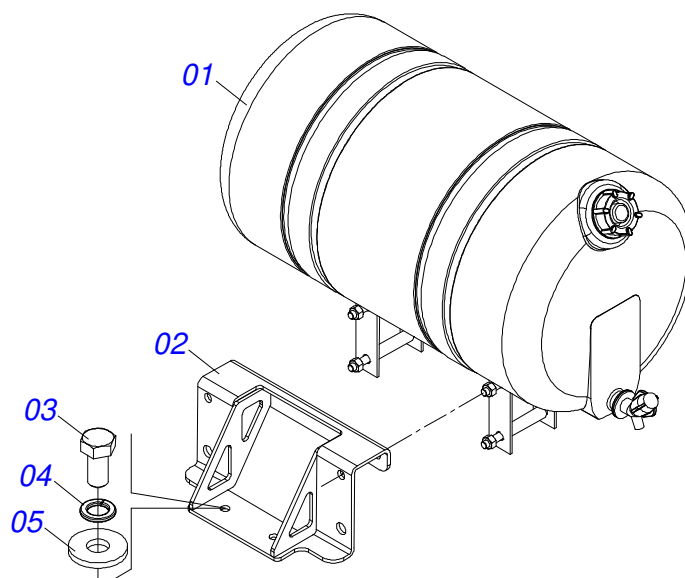


Item	Code	Description	See page	QT
01	0503014820	BLACK WATER RESERVOIR		01
02	0521068651	SUPPORT BOX		01
03	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		02
04	0503010025	3/8 SPRING WASHER		02
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02

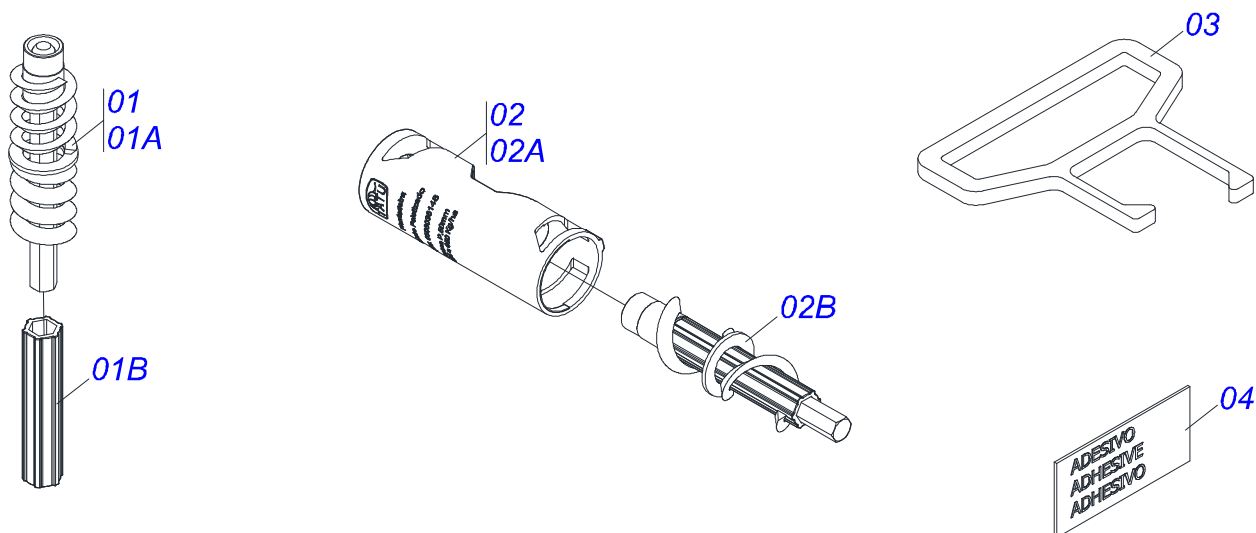


Item	Code	Description	See page	QT
01	0531058988	P.16 ENDLESS THREAD WITH COATING		19
01A	0531065012	ALPHA FERTILIZER METERING P.16MM WORM THREAD		01
01B	0503035859	SUPPORT SLEEVE		01
02	0531058992	PELLETIZED FERTILIZER KIT P.50 125 TO 650 KG/HA ALPHA		19
02A	0501111196	PELLETED FERTILIZER METERING COATING		01
02B	0531058987	ENDLESS THREAD WITH AXLE COVERING		01
03	0501214546	SPRING KEY		01
04	0503035928	ADHESIVE LABEL FERTILIZER TABLE ALPHA P16.5		01

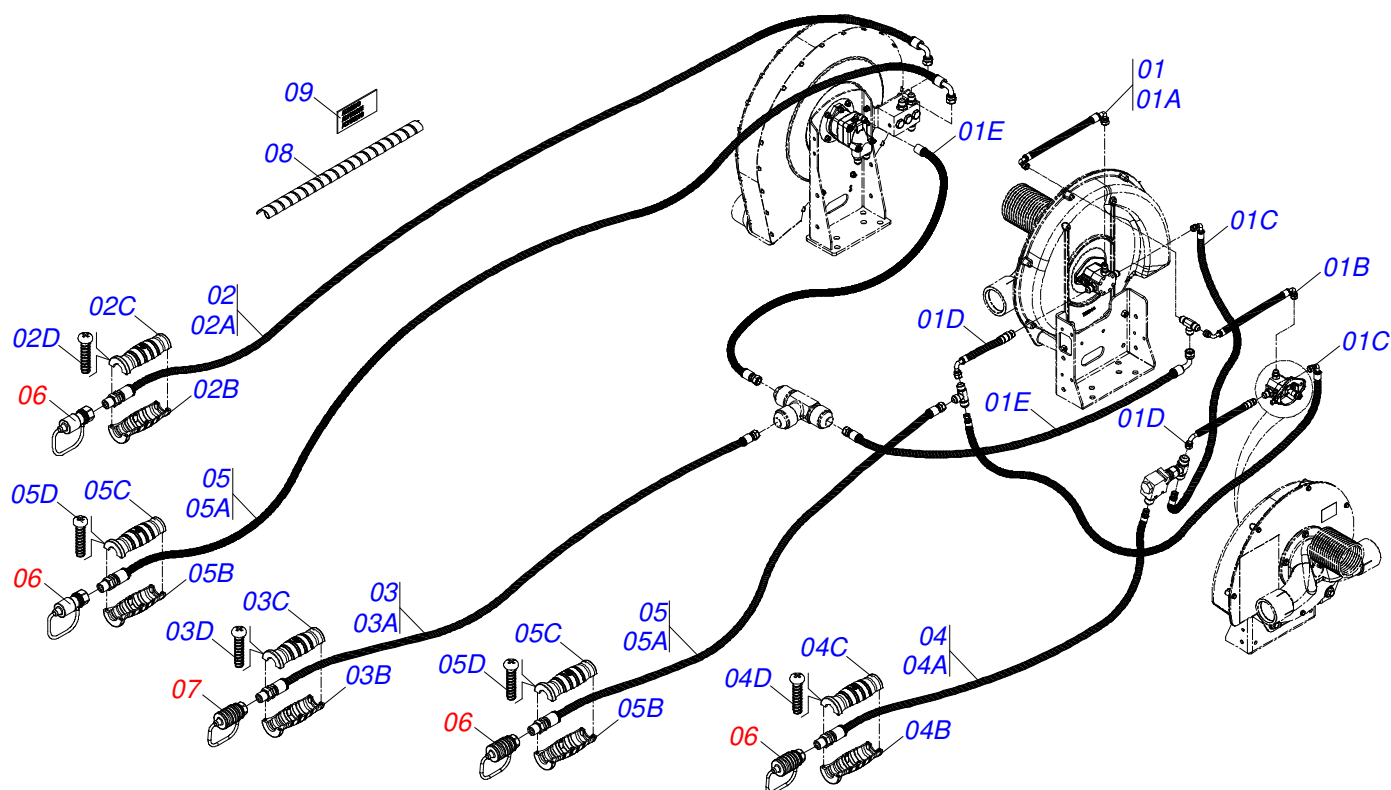

Item	Code	Description	See page	QT
01	0521057484	TURBINE HOSE KIT CSC 7655 A 8450		01
01A	0501082256	HOSE 3/8 X 200 TC-TC 90G RIGHT		01
01B	0501082257	HOSE 3/8 X 200 TC-TC 90G LEFT		01
01C	0501080113	1/2 X600 HOSE TR-TC		02
01D	0501082255	1/2 X 200 TR-TC HOSE		02
01E	0501080436	3/8" X 62" TR-TC HOSE		02
02	0521052523	1/2 X 7500 TC-TM YELLOW/BBLUE HOSE		01
02A	0501082026	1/2 X 7500 TC-TM HOSE		01
02B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
02C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
02D	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
03	0521057172	3/8 X 5500 TR-TM HOSE YELLOW / GREEN		01
03A	0501080205	3/8" X 216" TR-TM HOSE		01
03B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
03C	0503034497	HYDRAULIC HOSE GRIP (GREEN)		01
03D	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
04	0521057109	1/2 X 7000 TR-TM HOSE YELLOW / BLUE		01
04A	0501082007	HOSE 1/2 X 7000 TR-TM		01
04B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
04C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
04D	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
05	0521052534	HOSE 1/2 X 7012 TC-TM YELLOW / RED		02
05A	0501081247	HOSE 1/2 X 7012 TC-TM		01
05B	0503034493	HYDRAULIC HOSE DEPTH (YELLOW)		01
05C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
05D	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
06	0501053834	MALE QUICK COUPLER	15	04
07	0521050537	HITCH QUICK FEMALE WITH TURBINE HYDRAULIC DRAIN	110	01
08	0503014278	MP100 PLASTIC PROTECTION SPRING FOR 3/4 HOSE		12
09	0503033981	ADHESIVE LABEL		01

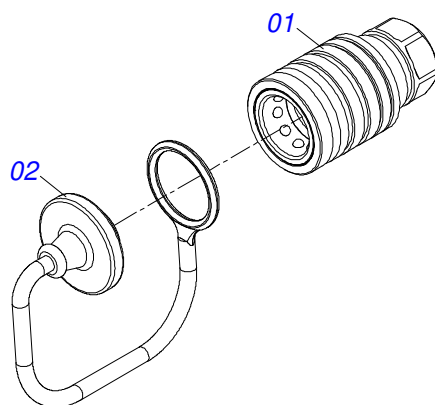


Item	Code	Description	See page	QT
01	0503018799	QUICK COUPLING		01
02	0503011883	QUICK CONNECTION COVER		01

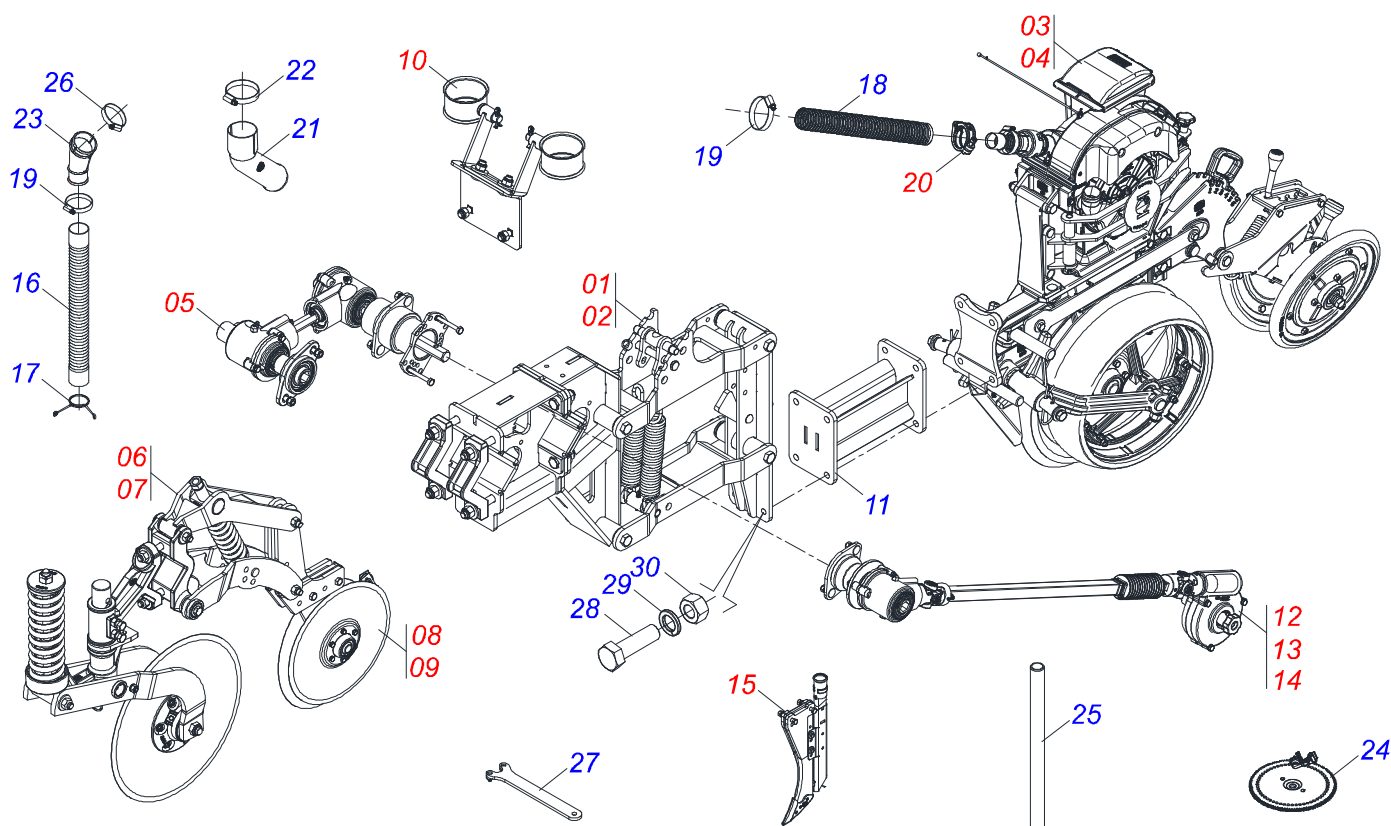


Item	Code	Description	See page	QT
01	0541051967	FRONT SHORT LINE	112	01
02	0541051968	FRONT LONG LINE	113	01
03	0531050894	REAR WITH DDD RIGHT	114	01
04	0531050895	REAR WITH LEFT DDD	115	01
05	0531050164	BEARING ASSY	136	01
06	0521056069	SEMI-ASSEMBLED SHORT FERTILIZER ROW	141	01
07	0521056066	SEMI-ASSEMBLED LONG FERTILIZER ROW	142	01
08	0521056067	DDD RIGHT FERTILIZER WITH FIXATION	146	01
09	0521056068	DDD LEFT FERTILIZER WITH FIXATION	147	01
10	0531052348	COMPLETE SUPPORT HOSE	150	01
11	0531060405	EXTENSION		01
12	0541051975	SHORT LINE TRANSMISSION	151	01
13	0541051976	LONG LINE TRANSMISSION	152	01
14	0541051977	SUPER LONG-LINE TRANSMISSION	153	01
15	0521056844	SCARIFIER ROD	158	01
16	0503036220	HOSE 60 X 50 X 500		01
16.	0503036193	HOSE 60 X 50 X 420		01
17	0503031076	2" HOSE CLAMP		01
18	0501082283	SEED CONDUCTOR 1.1 / 2 X 1600		01
19	0503019869	CLAMP		01
20	0521052549	CLAMP	160	01
21	0503031050	CURVED CONDUCTOR		01
22	0503010246	CLAMP		01
23	0503036268	CURVED CONDUCT		01
24	0503062763	CONVERSION ASSY FOR DISTRIBUTOR SOY / BEANS		01
25	0531061786	SEED ROW PRESSURE REGULATING LEVER		01
26	0513012079	CLAMP		01
27	0521068982	DISC BLADE HUB KEY		01
28	0503010905	1/2" X 2-1/4" BOLT		01
29	0503010019	1/2" SPRING WASHER		01
30	0503010060	1/2 UNC G.5 ZN HEX NUT		01

FRONT SHORT LINE


0541051967

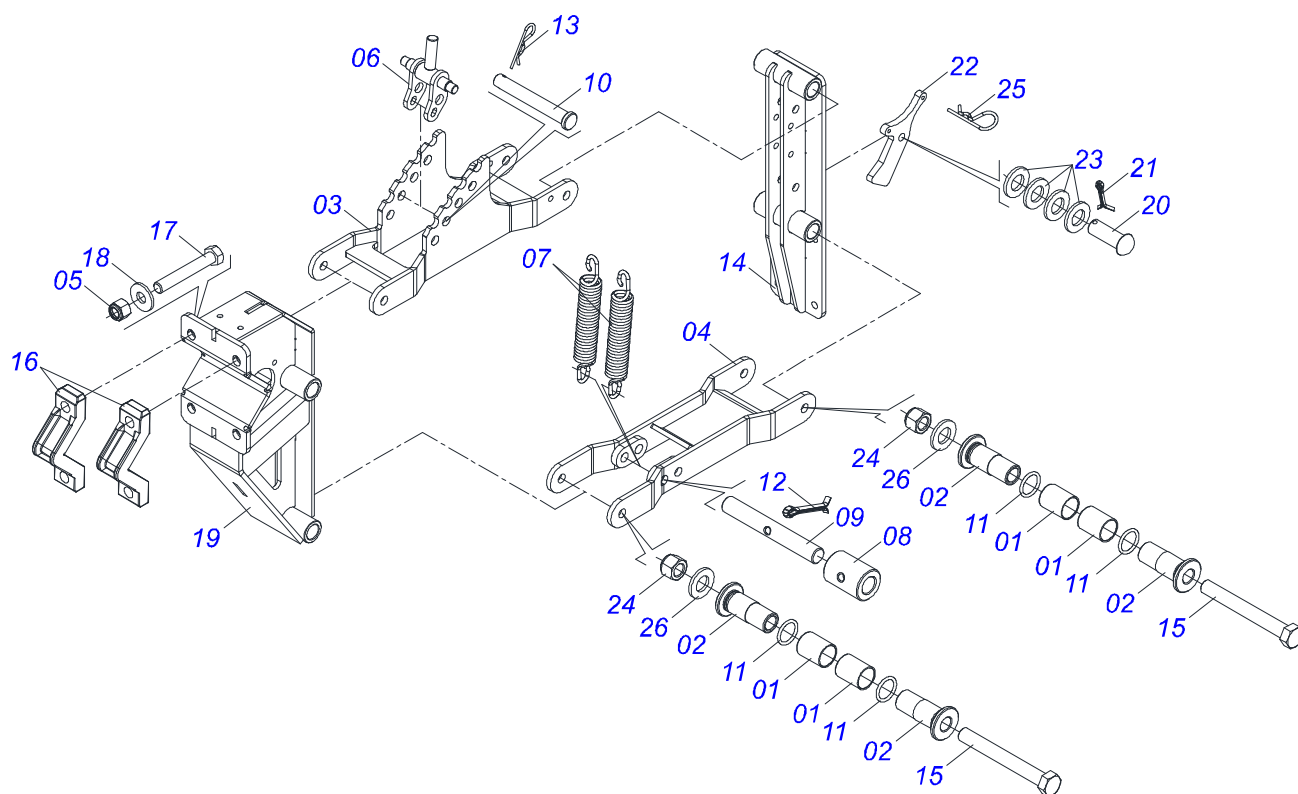


Item	Code	Description	See page	QT
01	0503019273	AUTO LUBRICANT SLEEVE	08	
02	0591011316	SEED ROW SUPPORT SLEEVE	08	
03	0531060069	TOP ARM	01	
04	0531062744	FRONT LOWER ARM SHORT SEED ROW	01	
05	0503010811	5/8" UNF SELF ADJUSTING NUT	04	
06	0531060077	PRESSURE REGULATOR	01	
07	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING	02	
08	0591010915	SPRING REGULATOR	01	
09	0591010914	LOWER AXLE	01	
10	0591011315	SPRING AXLE	01	
11	0503010045	O'RING	08	
12	0503010131	3/16" X 1.1/2" SPLIT PIN	01	
13	0503030168	HITCH PIN CLIP	01	
14	0531060068	REAR ROW	01	
15	0503019295	SCREW 5/8 UNF X 7 CS RP G.5 ZN	04	
16	0502010175	HITCH CLAMP	02	
17	0503017857	BOLT 5/8 UNF 4	04	
18	0501012140	FLAT WASHER	04	
19	0531060073	FRONT ROW SUPPORT	01	
20	0521010542	COUPLING SHAFT	01	
21	0503010300	5/32" X 1" SPLIT PIN	01	
22	0591010913	TRANSPORT BUMPER	01	
23	0501010301	FLAT WASHER	04	
24	0503010878	5/8" SELF ALIGNING NUT	04	
25	0503030012	HITCH PIN CLIP	01	
26	0571016296	FLAT WASHER	04	

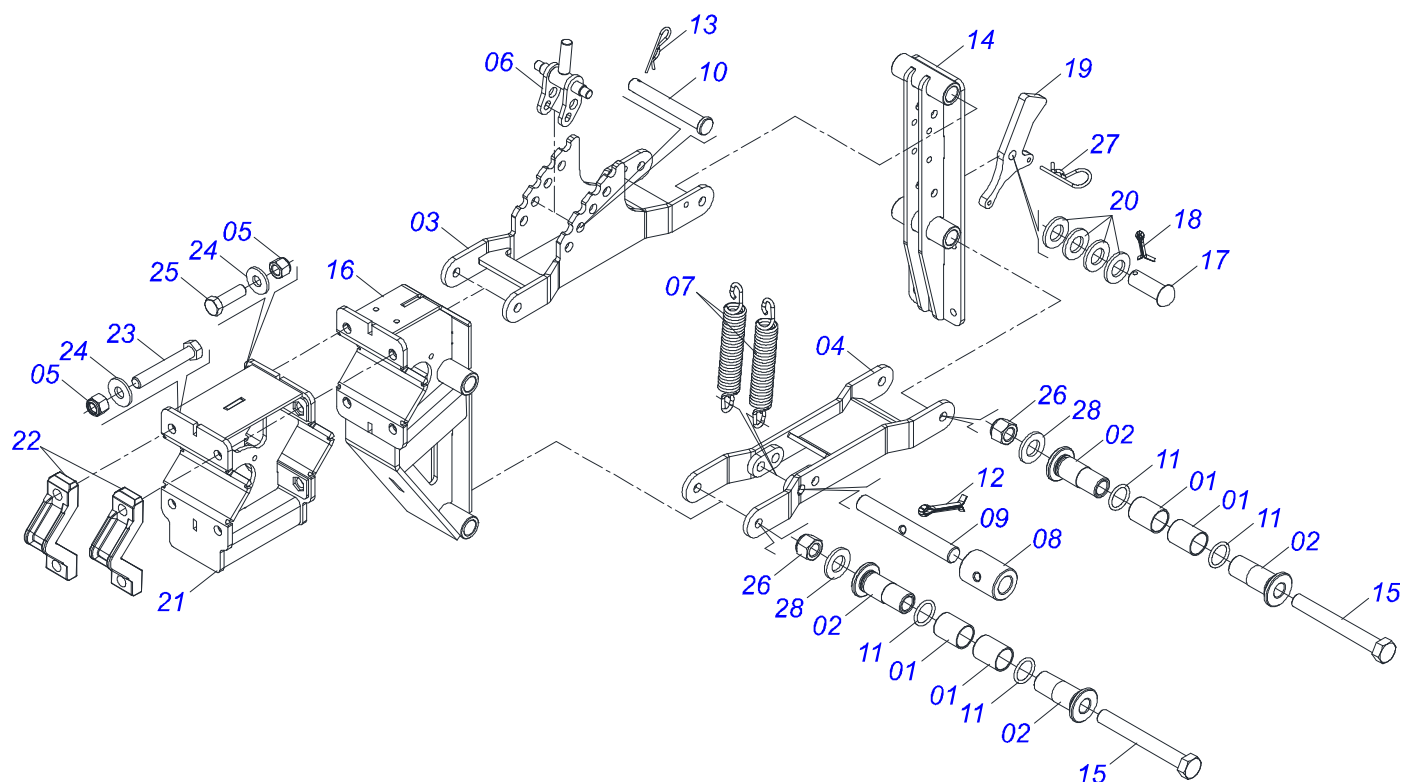


Item	Code	Description	See page	QT
01	0503019273	AUTO LUBRICANT SLEEVE	08	
02	0591011316	SEED ROW SUPPORT SLEEVE	08	
03	0531060069	TOP ARM	01	
04	0531062744	FRONT LOWER ARM SHORT SEED ROW	01	
05	0503010811	5/8" UNF SELF ADJUSTING NUT	08	
06	0531060077	PRESSURE REGULATOR	01	
07	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING	02	
08	0591010915	SPRING REGULATOR	01	
09	0591010914	LOWER AXLE	01	
10	0591011315	SPRING AXLE	01	
11	0503010045	O'RING	08	
12	0503010131	3/16" X 1.1/2" SPLIT PIN	01	
13	0503030168	HITCH PIN CLIP	01	
14	0531060068	REAR ROW	01	
15	0503019295	SCREW 5/8 UNF X 7 CS RP G.5 ZN	04	
16	0531060073	FRONT ROW SUPPORT	01	
17	0521010542	COUPLING SHAFT	01	
18	0503010300	5/32" X 1" SPLIT PIN	01	
19	0591010913	TRANSPORT BUMPER	01	
20	0501010301	FLAT WASHER	04	
21	0531060072	EXTENDER	01	
22	0502010175	HITCH CLAMP	02	
23	0503017857	BOLT 5/8 UNF 4	04	
24	0501012140	FLAT WASHER	08	
25	0503012798	5/8" X 2" BOLT	04	
26	0503010878	5/8" SELF ALIGNING NUT	04	
27	0503030012	HITCH PIN CLIP	01	
28	0571016296	FLAT WASHER	04	

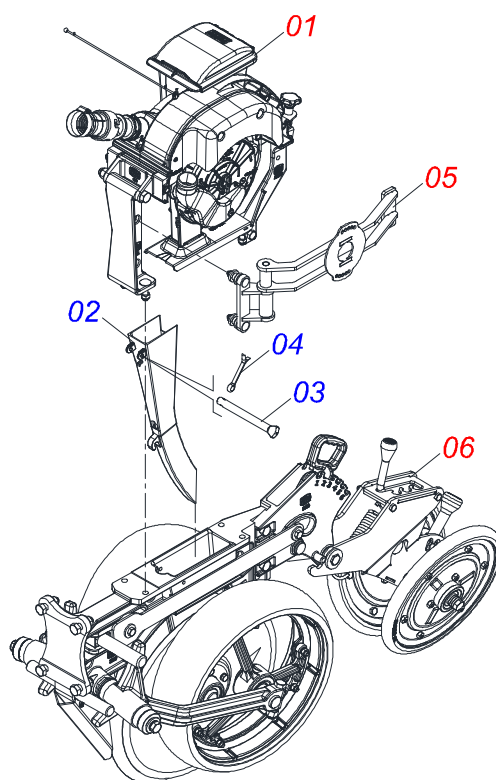


Item	Code	Description	See page	QT
01	0521056640	PRECISION PLANTING CSC CABLE / 116	116	01
02	0503062403	TUBE SEED P.P		01
03	0571017895	PIN FIXER CONDUCTOR P.P		01
04	0503010140	1/8" X 3/4" SPLIT PIN		01
05	0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION	118	01
06	0541052088	REAR WITH RIGHT DDD SUPPORT	119	01

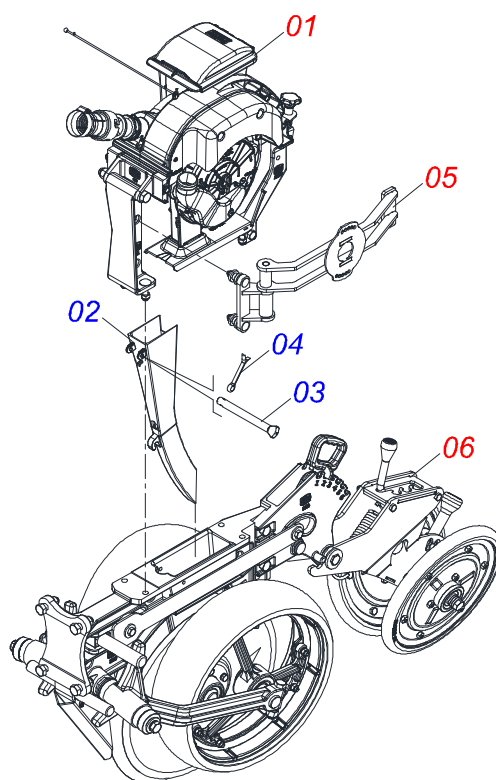


Item	Code	Description	See page	QT
01	0521056640	PRECISION PLANTING CSC CABLE / 116	116	01
02	0503062403	TUBE SEED P.P		01
03	0571017895	PIN FIXER CONDUCTOR P.P		01
04	0503010140	1/8" X 3/4" SPLIT PIN		01
05	0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION	118	01
06	0541052089	REAR WITH LEFT DDD BRACKET	134	01

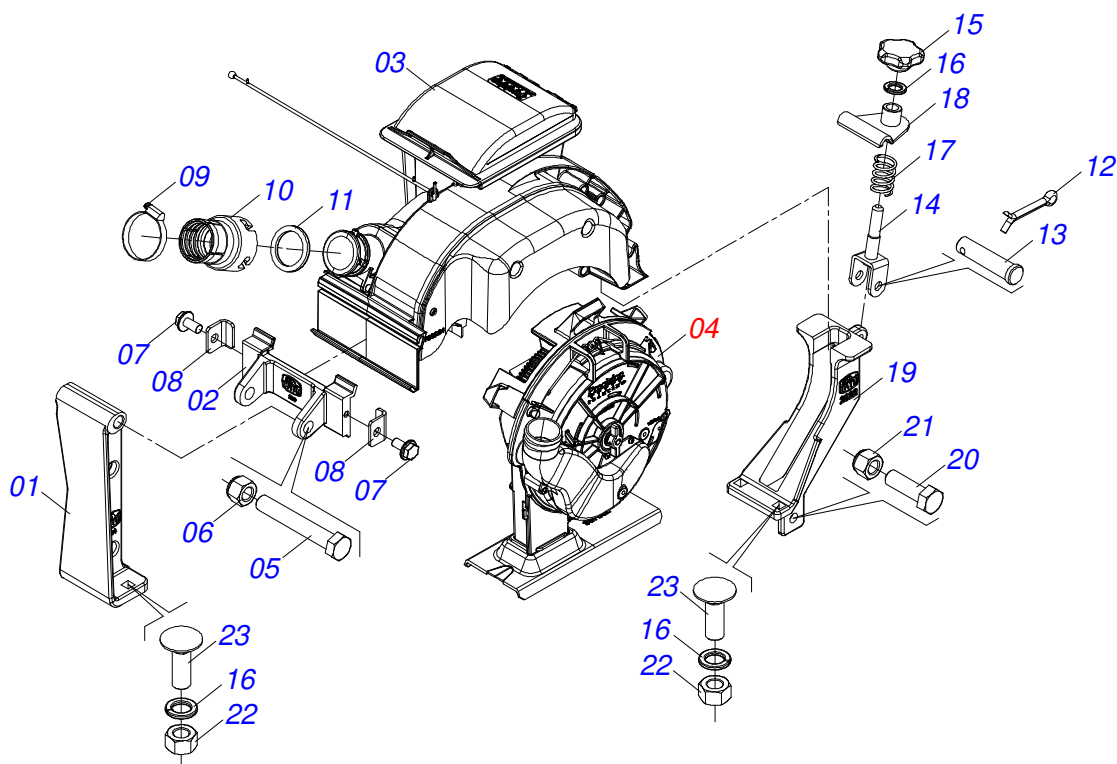


Item	Code	Description	See page	QT
01	0502012924	PRECISION PLANTING SUPPORT		01
02	0502012800	SUPPORT ARTICULATION PNEUMATIC		01
03	0503062406	SEED HOPPER		01
04	0521052131	VSET2 DISTRIBUTOR WITH CORN DISC WITHOUT 117 PROTECTION		01
05	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01
07	0503810009	BOLT		02
08	0571018649	SUPPORT FIXER		02
09	0503010243	CLAMP		01
10	0581017816	TERMINAL		01
11	0503034204	SEALING		01
12	0503010140	1/8" X 3/4" SPLIT PIN		01
13	0571014024	FAST BOLT GUIDE AXLE		01
14	0503034824	FIXATIVE		01
15	0503010293	CLAMP KNOB		01
16	0503010025	3/8 SPRING WASHER		05
17	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
18	0501110894	FIXER		01
19	0502012922	FIXING SUPPORT		01
20	0503011404	BOLT		01
21	0503013357	3/8 SELF-ADJUSTING NUT		01
22	0503010026	3/8" NUT		04
23	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04

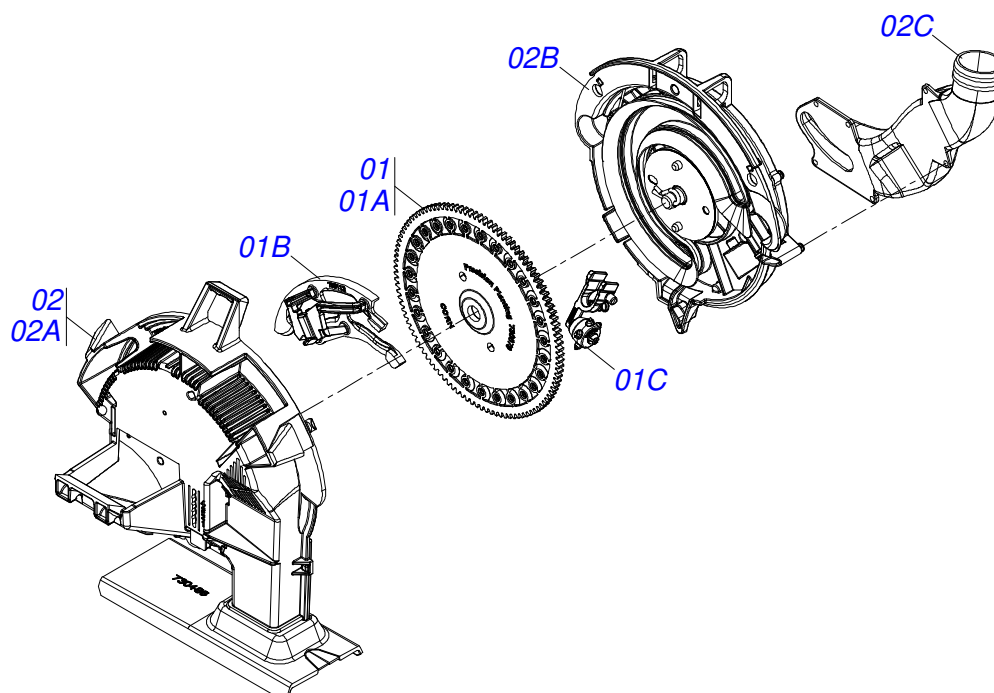

Item	Code	Description	See page	QT
01	0503062417	KIT CORN DISTRIBUTION		01
01A	0503018160	CORN PLASTIC DISC		01
01B	0503062472	SELECTOR SEED CORN		01
01C	0503062474	EJECTOR CORN SEED SET		01
02	0503062405	SEED DISTRIBUTOR		01
02A	0503062567	FIXED BASE SEEDS DISTRIBUTOR		01
02B	0503062974	MOBILE BASE WITHOUT SNORKEL		01
02C	0503062973	SNORKEL ASSY PP768718		01

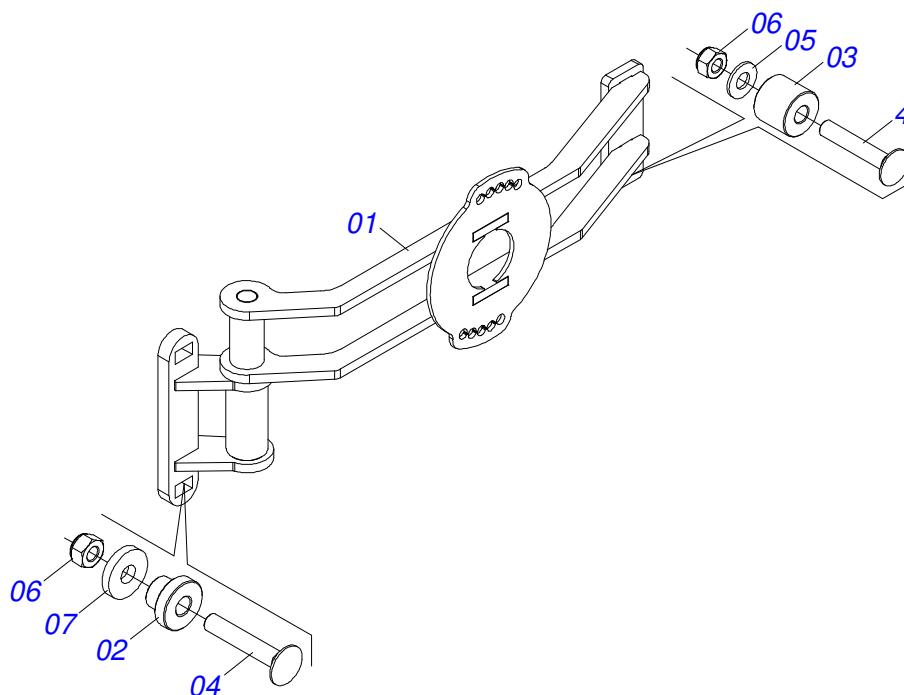

Item	Code	Description	See page	QT
01	0521068129	ENCAPSULATED CHAIN FIXATION SUPPORT		01
02	0591015755	CHAIN SUPPORT SLEEVE		02
03	0591016332	SUPPORT REAR SLEEVE		01
04	0501011753	5/16" X 1-3/4" BOLT		03
05	0501010694	FLAT WASHER		01
06	0503019657	HEX LOCK NUT WITH NYLON 5/16		03
07	0591016334	FLAT WASHER 8,50 X 23 X 4,00		02

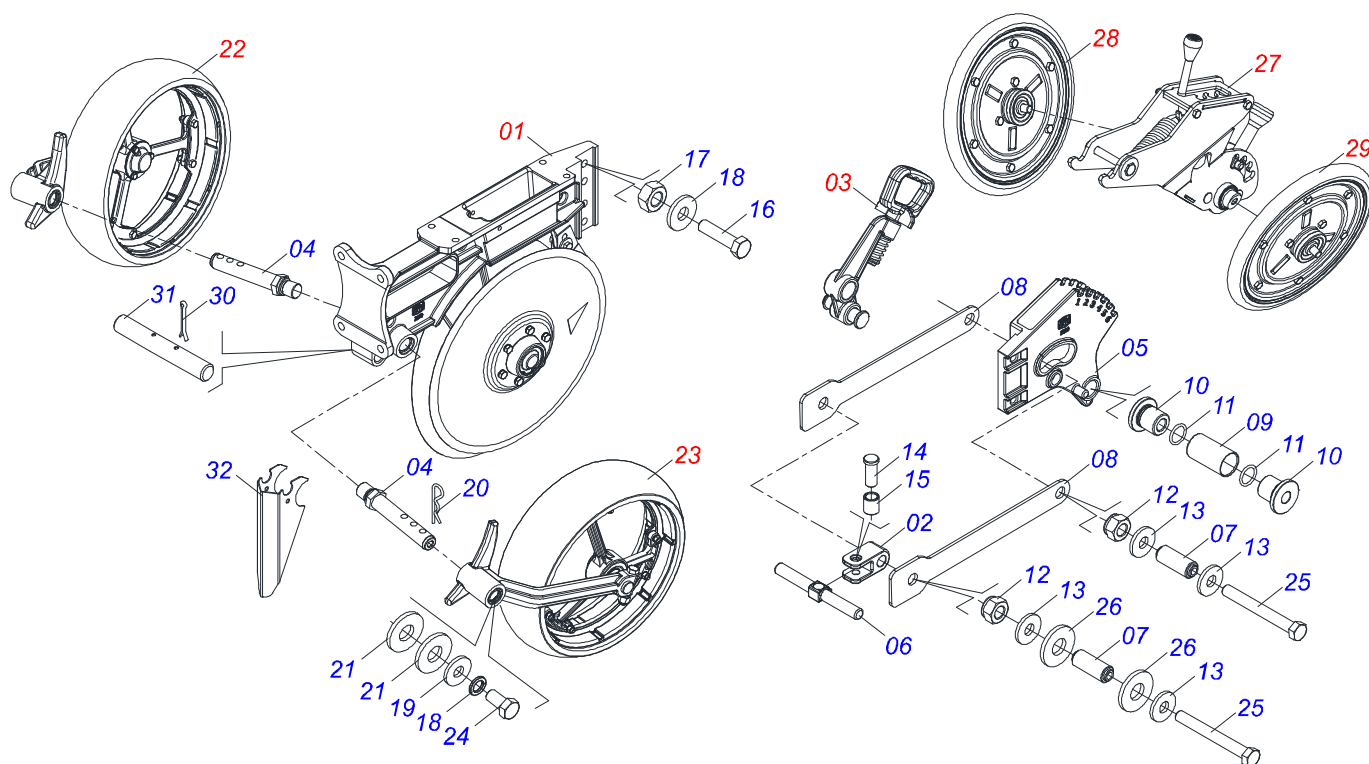


Item	Code	Description	See page	QT
01	0521056635	RIGHT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	120	01
02	0502012923	BEATER		01
03	0521056632	DEPTH CONTROL	125	01
04	0591011323	AXLE ARTICULATION WHEEL DEPTH		02
05	0502012920	SUPPORT ADJUSTING		01
06	0502012611	DEPTH CONTROL AXLE		01
07	0591011309	ADJUSTMENT BUSHING		02
08	0591011310	ADJUSTMENT BAR		02
09	0503019275	SLEEVE LUBRICATION SYSTEM		01
10	0581019473	ARTICULATED SLEEVE		02
11	0503010045	O'RING		02
12	0503013357	3/8 SELF-ADJUSTING NUT		02
13	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
14	0591011326	LOCK PIN		01
15	0571015326	ARTICULATION SLEEVE HANDLE		01
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2 UNC G.5 ZN HEX NUT		02
18	0503010019	1/2" SPRING WASHER		04
19	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
20	0503030012	HITCH PIN CLIP		02
21	0501011445	FLAT WASHER		04
22	0521056633	MOUNTED RIGHT ARM	126	01
23	0521056631	MOUNTED LEFT ARM	129	01
24	0503012556	1/2" X 1" BOLT		02
25	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		02
26	0591011306	ADJUSTMENT LOCK		02
27	0521055093	BODY COMPACTOR	130	01
28	0521054990	LEFT COMPACTOR WHEEL	131	01
29	0521055017	RIGHT COMPACTOR WHEEL	133	01
30	0503010131	3/16" X 1.1/2" SPLIT PIN		02
31	0591016900	BEATING AXLE		01




COP TRIO 650 SUPREMA P.P MINI HOPPER - FRAME 8450 -
REAR WITH RIGHT DDD SUPPORT

Page 119
0541052088


Item	Code	Description	See page	QT
32	0591016988	SPICER PROTECTOR		01

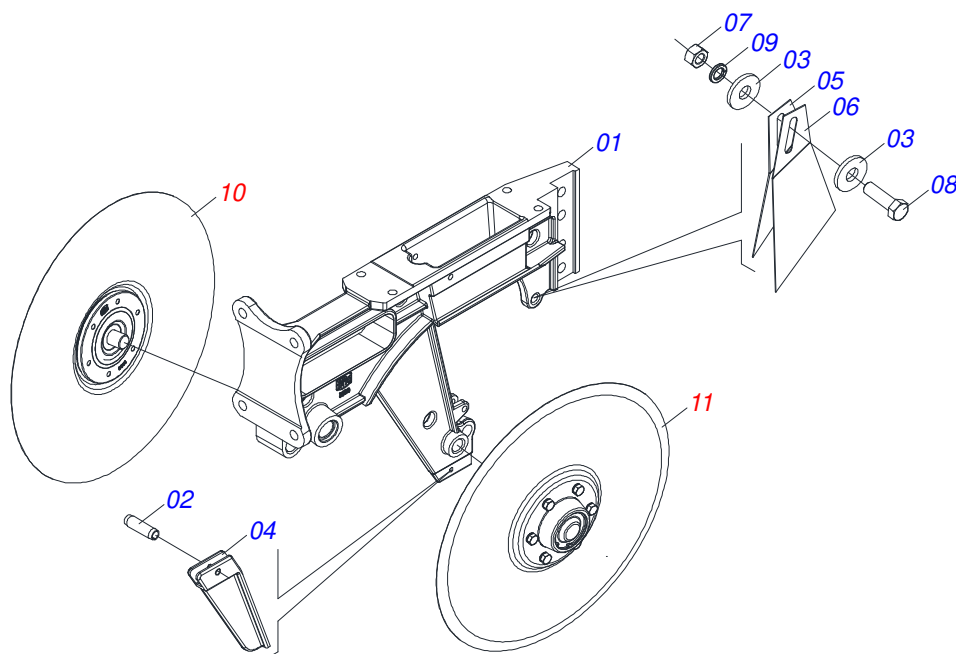


Item	Code	Description	See page	QT
01	0502012929	BODY RIGHT		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 121 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 122 FERTILIZER / SEED		01

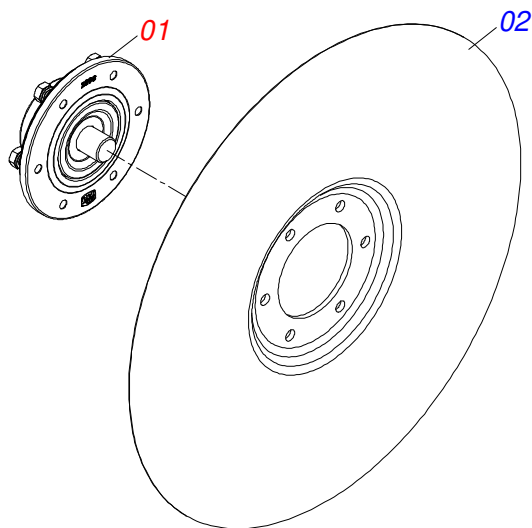


Item	Code	Description	See page	QT
01	0521055864	FERTILIZER/SEED RIGHT HUB ASSY	123	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

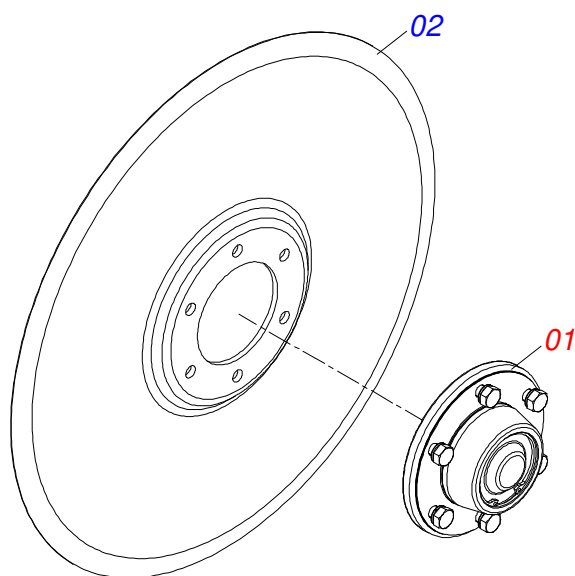


Item	Code	Description	See page	QT
01	0521055865	FERTILIZER/SEED LEFT HUB ASSY	124	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

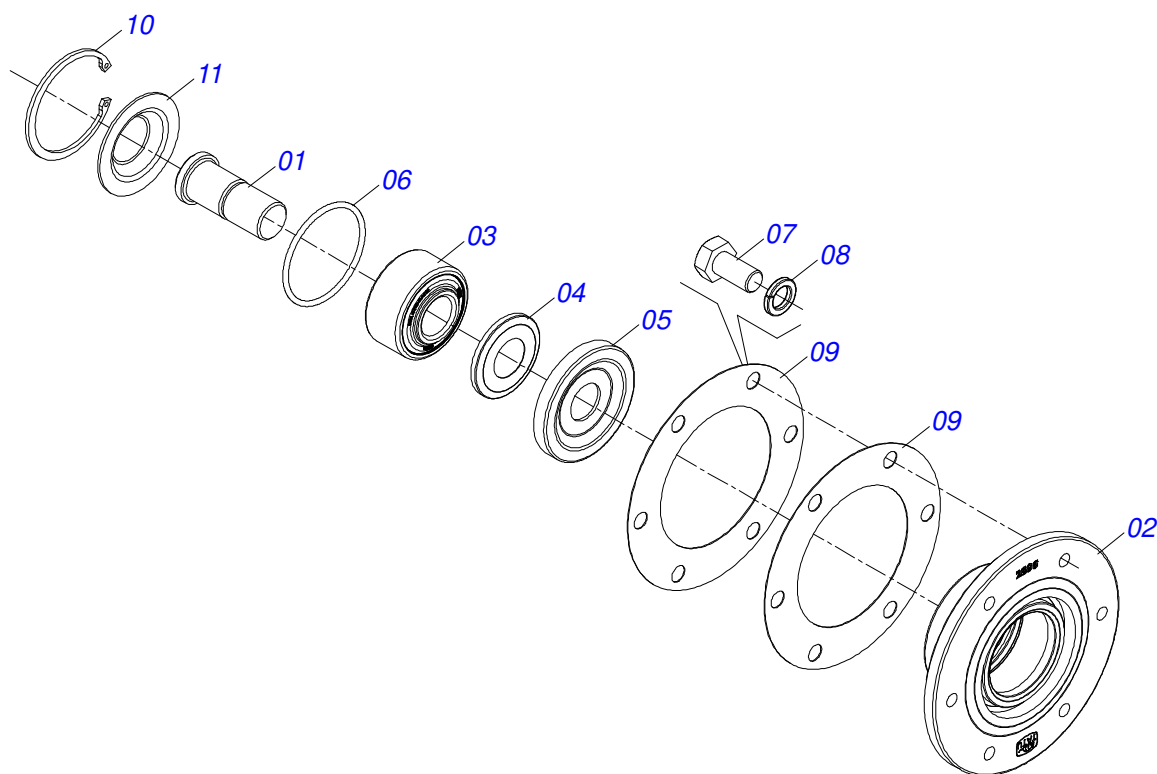


Item	Code	Description	See page	QT
01	0571011150	RIGHT DOUBLE DISC AXLE		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

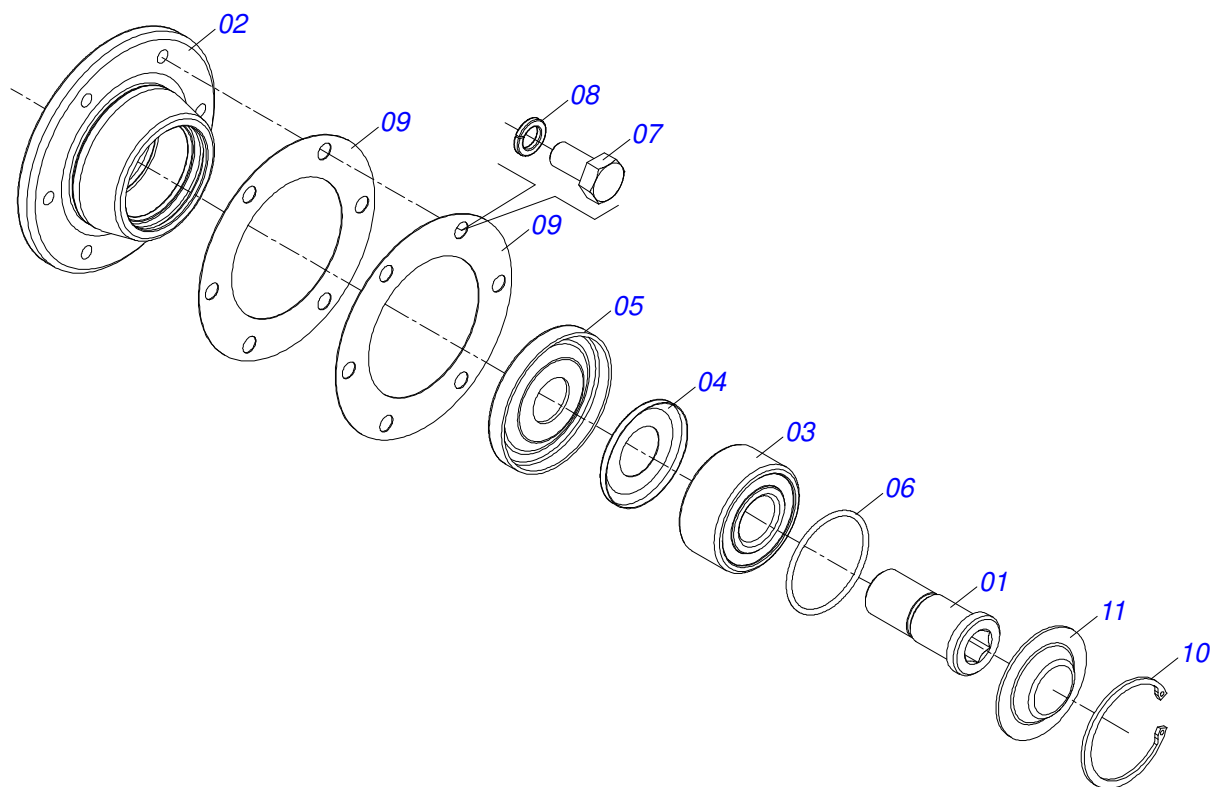


Item	Code	Description	See page	QT
01	0571011151	LEFT DOUBLE DISC HUB		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

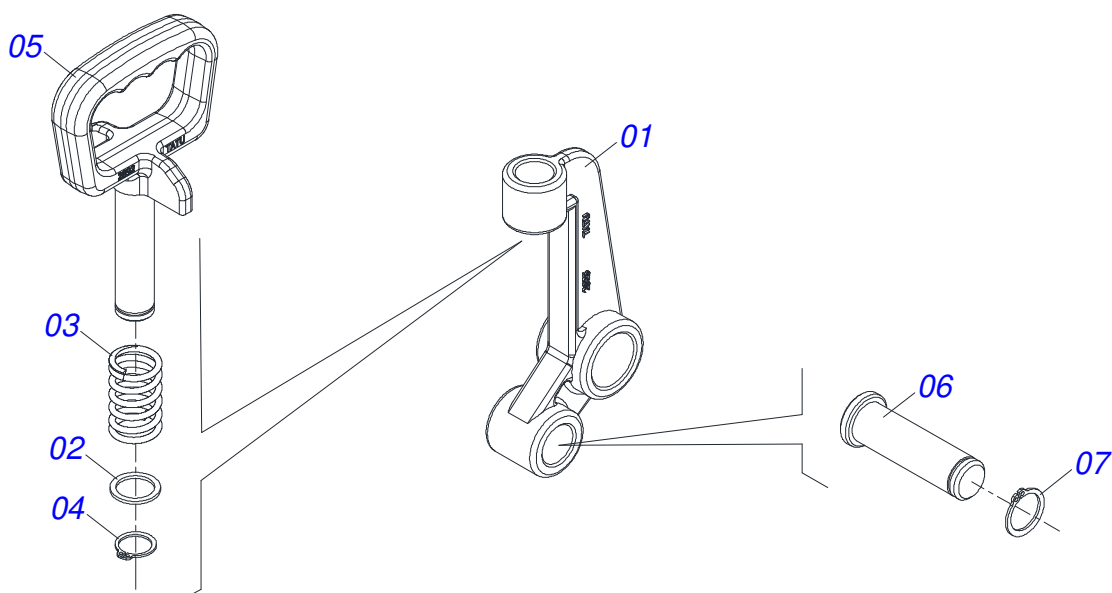

Item	Code	Description	See page	QT
01	0502012925	ADJUSTMENT BODY		01
02	0511015976	FLAT WASHER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0503010581	RING		01
05	0502012892	DEPTH CONTROL HANDLE		01
06	0581019526	ARTICULATED AXLE LEVER DEPTH		01
07	0503010302	501019 SEAL RING		01

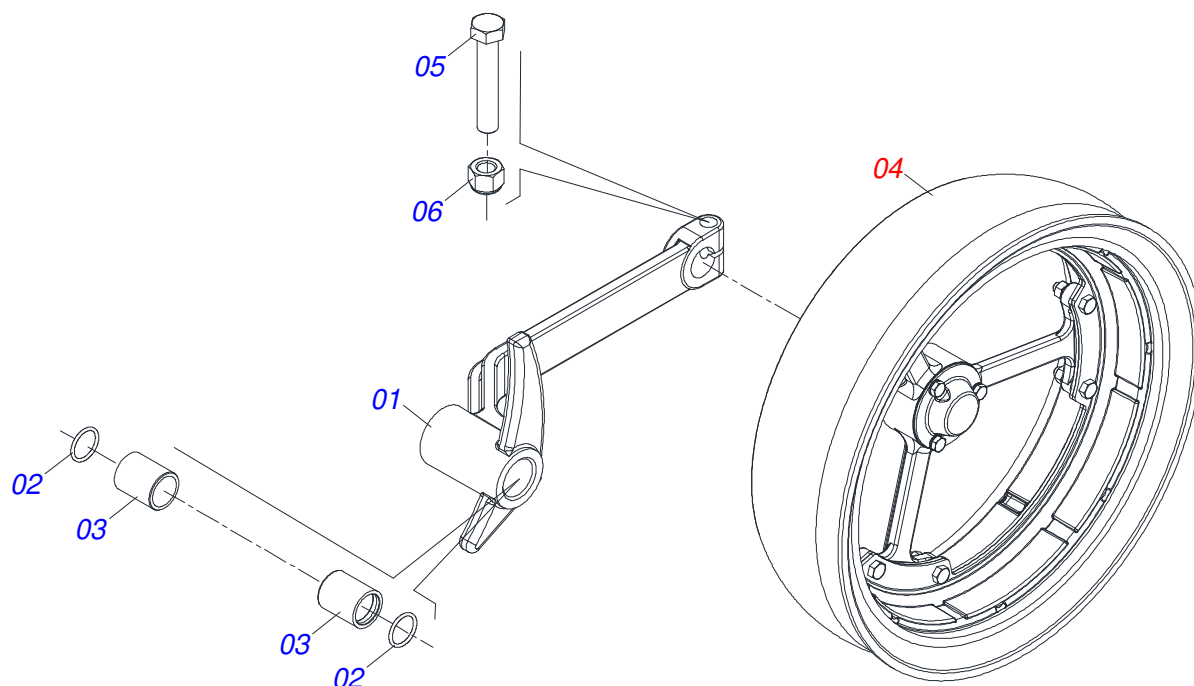


Item	Code	Description	See page	QT
01	0502012926	RIGHT ARM		01
02	0503011109	2-119 N 3006-9B O'RING		02
03	0581019514	LUBRICANT SLEEVE		02
04	0521055059	WHEEL RAYED ASSY SPA WITHOUT 127 LUBRICATION		01
05	0503010741	1/2" X 2-3/4" BOLT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01

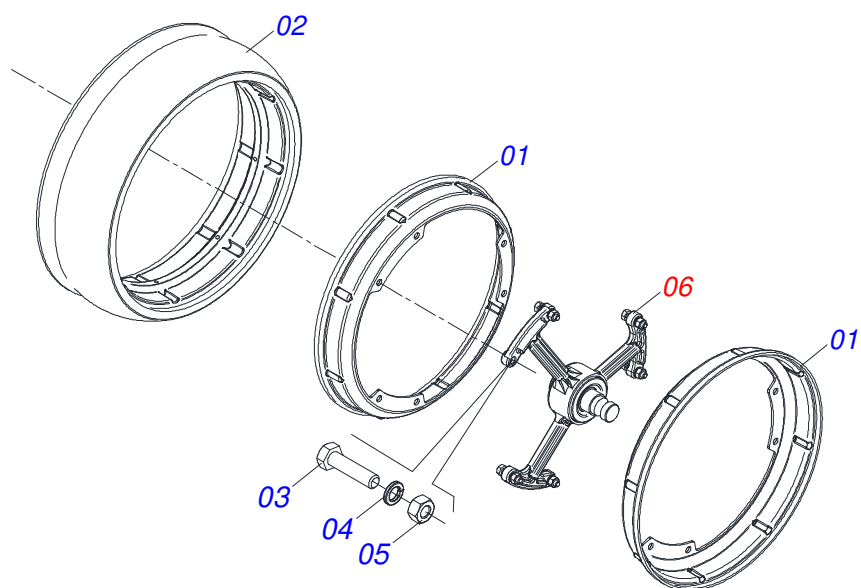


Item	Code	Description	See page	QT
01	0551019904	PRESS WHEEL RIM		02
02	0503030891	RUBBER BAND		01
03	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
05	0503010337	5/16" NUT		06
06	0521055073	ASSEMBLY DEPTH WHEEL HUB	128	01

ASSEMBLY DEPTH WHEEL HUB


0521055073

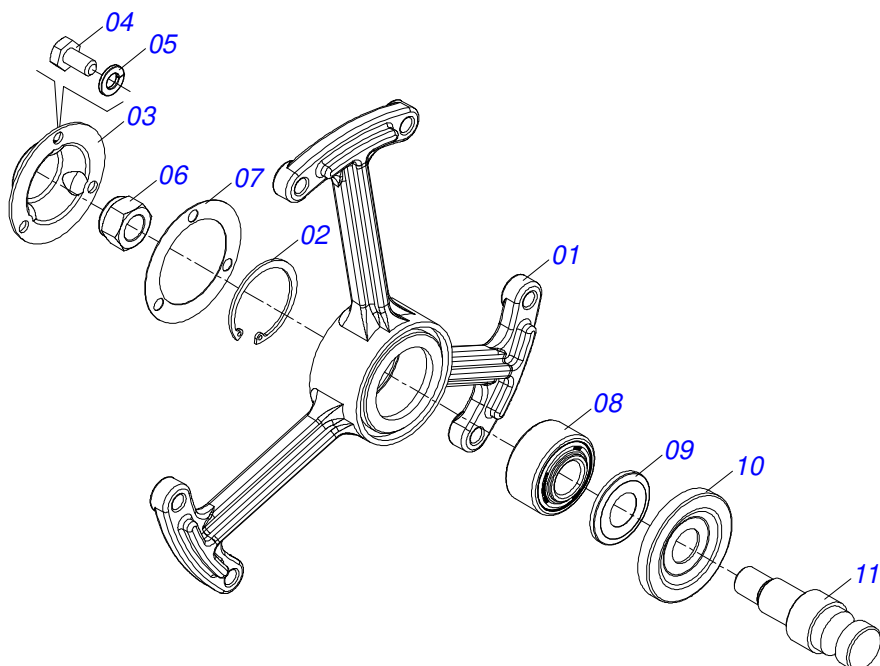


Item	Code	Description	See page	QT
01	0581019528	WHEEL DEPTH SPA HUB WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503010878	5/8" SELF ALIGNING NUT		01
07	0503030757	2.9" X 2" X 0.02" JOINT		01
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019168	DUST CLOAK		01
11	0581019529	DEPTH REGULATOR SHAFT		01

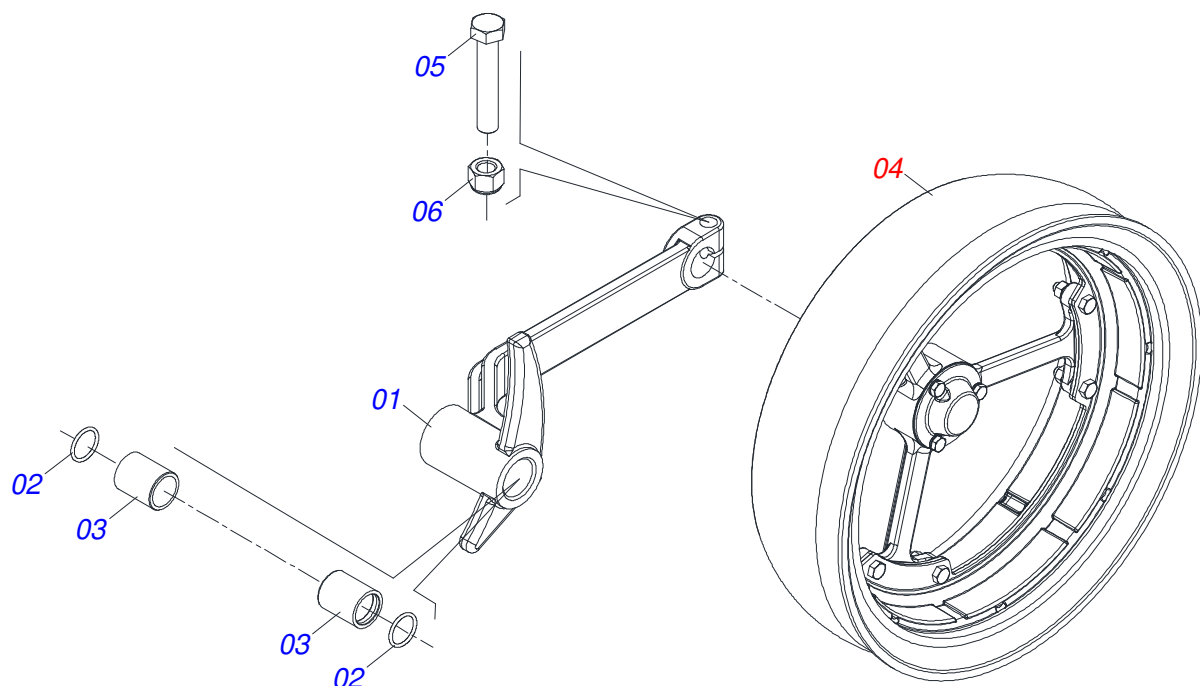


Item	Code	Description	See page	QT
01	0502012927	LEFT ARM		01
02	0503011109	2-119 N 3006-9B O'RING		02
03	0581019514	LUBRICANT SLEEVE		02
04	0521055059	WHEEL RAYED ASSY SPA WITHOUT 127 LUBRICATION		01
05	0503010741	1/2" X 2-3/4" BOLT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01

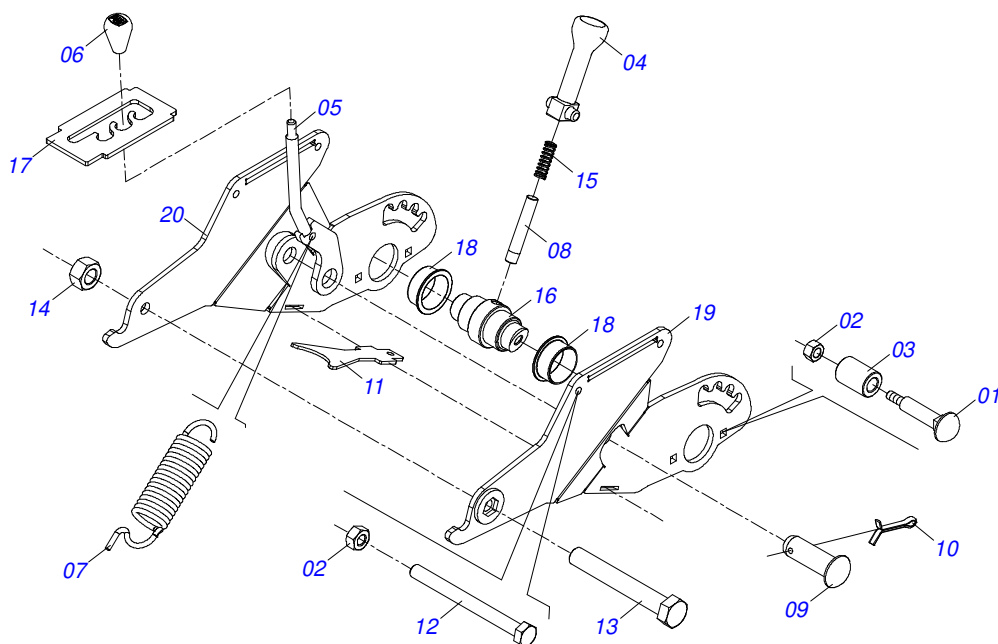


Item	Code	Description	See page	QT
01	0501011753	5/16" X 1-3/4" BOLT	02	
02	0503013816	5/16" LOCKNUT	04	
03	0581015855	SLEEVE	02	
04	0502012877	PRESS WHEEL ADJUSTMENT LEVER	01	
05	0521068661	LEVER	01	
06	0503030878	LEVER CRANK	01	
07	0503031393	1.57" X 5.98" X 0.2" TRACTION SPRING	01	
08	0581019520	AXIS	01	
09	0571812442	COUPLING SHAFT	01	
10	0503010257	1/8" X 1" SPLIT PIN	01	
11	0581019511	COVER	01	
12	0503010848	5/16" X 3.1/2" BOLT	02	
13	0503010752	1/2" X 3.1/2" BOLT	01	
14	0503011336	1/2" HEX SELF ADJUSTING NUT	01	
15	0503030190	0.5" X 1.6" X 0.05" SPRING	01	
16	0581019510	AXIS	01	
17	0581019512	PLATE TOP	01	
18	0503019351	LUBRICANT SLEEVE	02	
19	0521069591	LEFT SIDE	01	
20	0581019548	RIGHT SIDE BODY	01	

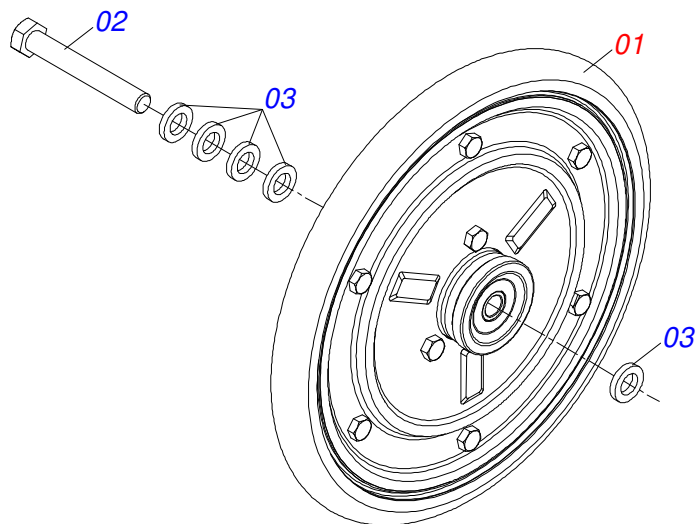


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	132	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

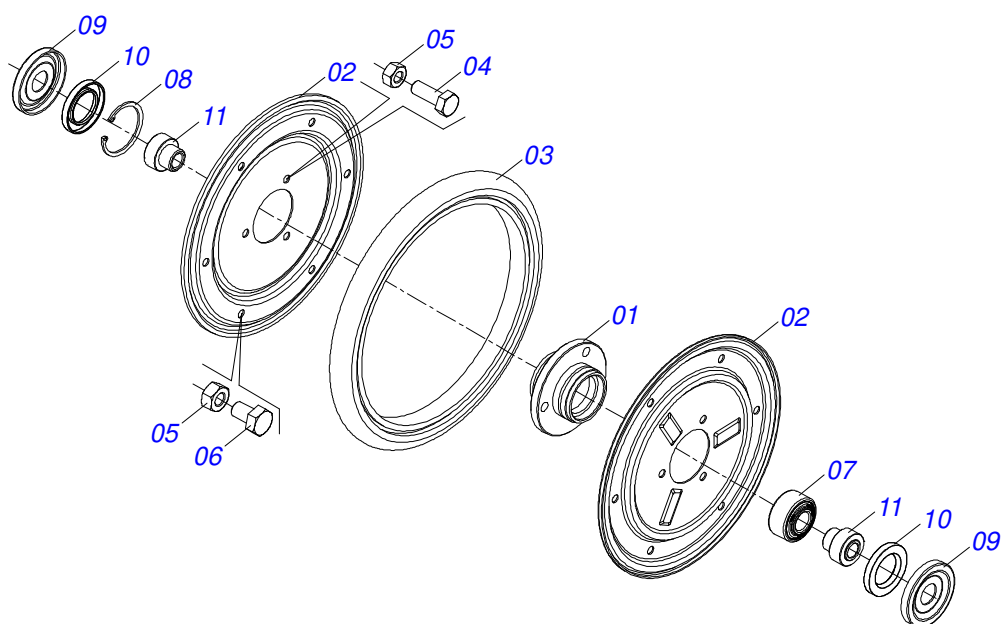

Item	Code	Description	See page	QT
01	0502012894	WHEEL HUB		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

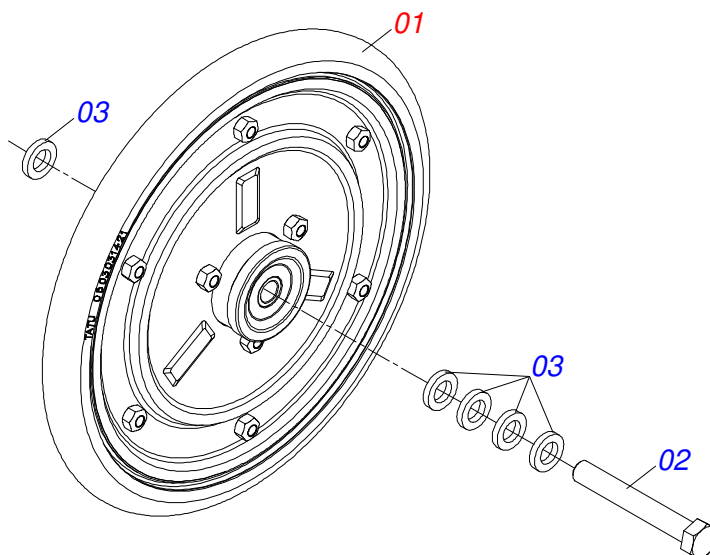

Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	132	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

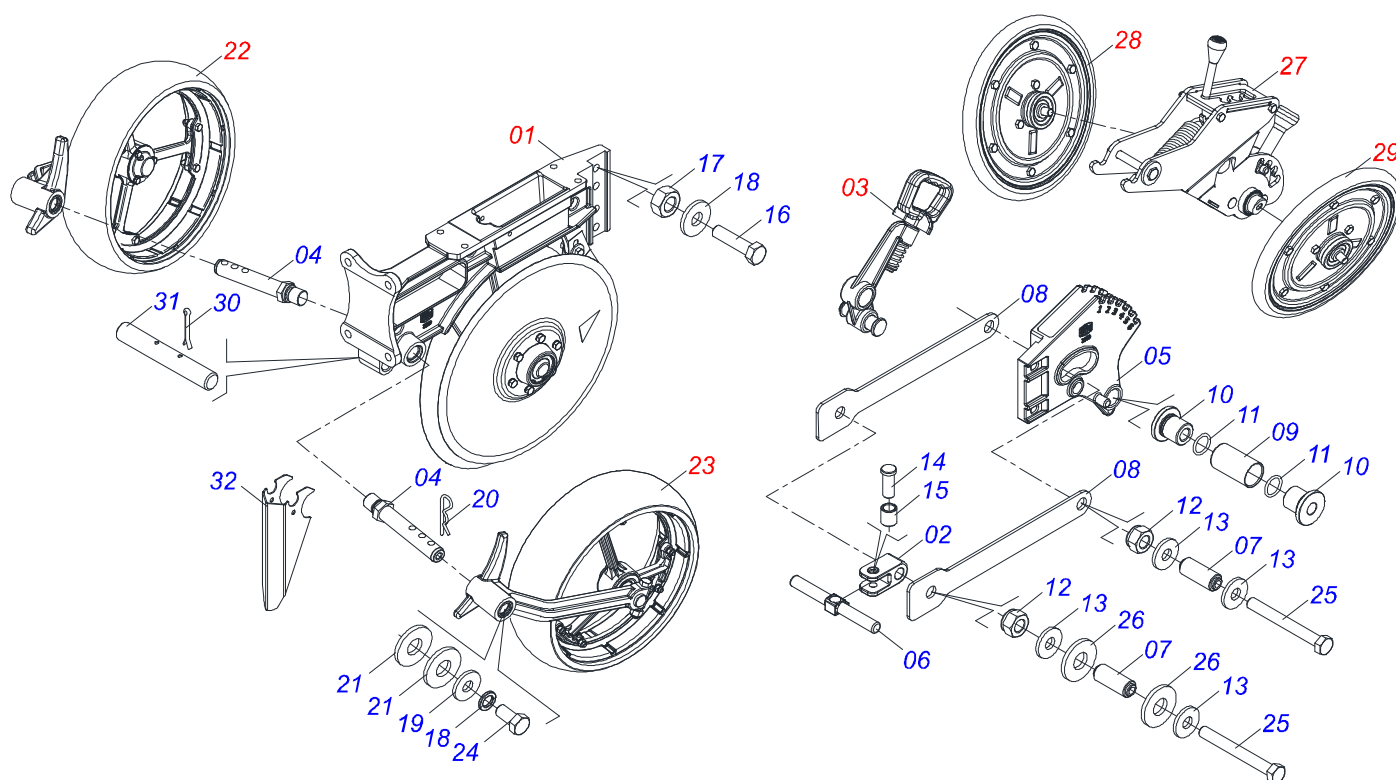


Item	Code	Description	See page	QT
01	0521056634	LEFT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	135	01
02	0502012923	BEATER		01
03	0521056632	DEPTH CONTROL	125	01
04	0591011323	AXLE ARTICULATION WHEEL DEPTH		02
05	0502012920	SUPPORT ADJUSTING		01
06	0502012611	DEPTH CONTROL AXLE		01
07	0591011309	ADJUSTMENT BUSHING		02
08	0591011310	ADJUSTMENT BAR		02
09	0503019275	SLEEVE LUBRICATION SYSTEM		01
10	0581019473	ARTICULATED SLEEVE		02
11	0503010045	O'RING		02
12	0503013357	3/8 SELF-ADJUSTING NUT		02
13	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
14	0591011326	LOCK PIN		01
15	0571015326	ARTICULATION SLEEVE HANDLE		01
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2 UNC G.5 ZN HEX NUT		02
18	0503010019	1/2" SPRING WASHER		04
19	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
20	0503030012	HITCH PIN CLIP		02
21	0501011445	FLAT WASHER		04
22	0521056633	MOUNTED RIGHT ARM	126	01
23	0521056631	MOUNTED LEFT ARM	129	01
24	0503012556	1/2" X 1" BOLT		02
25	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		02
26	0591011306	ADJUSTMENT LOCK		02
27	0521055093	BODY COMPACTOR	130	01
28	0521054990	LEFT COMPACTOR WHEEL	131	01
29	0521055017	RIGHT COMPACTOR WHEEL	133	01
30	0503010131	3/16" X 1.1/2" SPLIT PIN		02
31	0591016900	BEATING AXLE		01




**COP TRIO 650 SUPREMA P.P MINI HOPPER - FRAME 8450 -
REAR WITH LEFT DDD BRACKET**

Page 134
0541052089


Item	Code	Description	See page	QT
32	0591016988	SPICER PROTECTOR		01

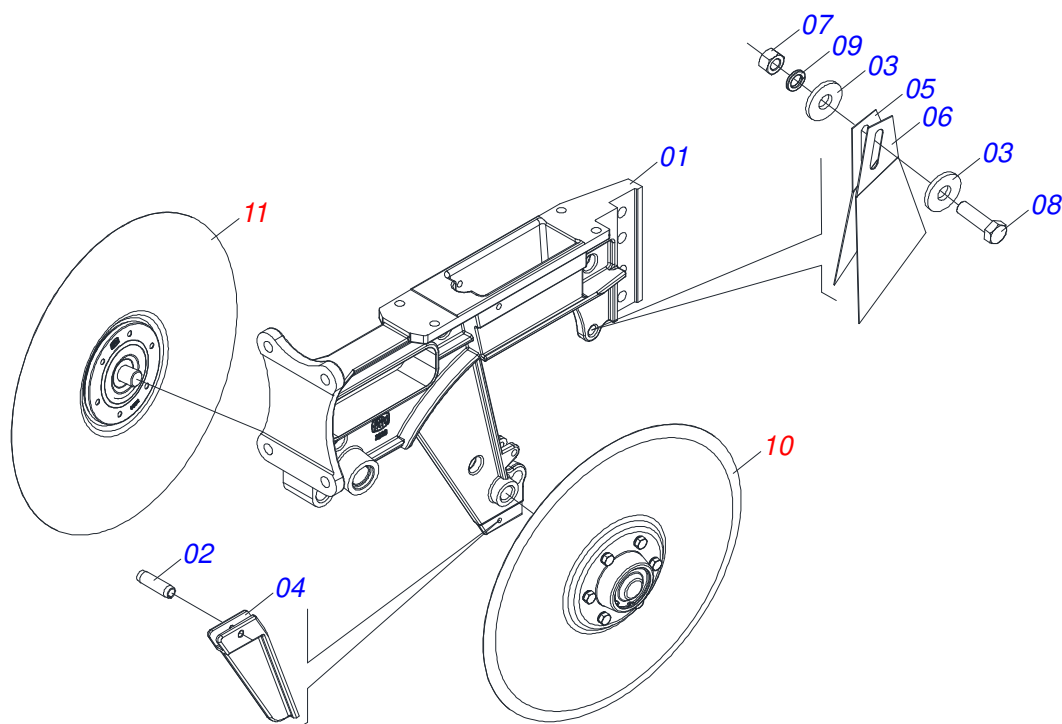


Item	Code	Description	See page	QT
01	0502012928	LEFT EXTENSOR		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 122 FERTILIZER / SEED		01
11	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 121 FERTILIZER / SEED		01

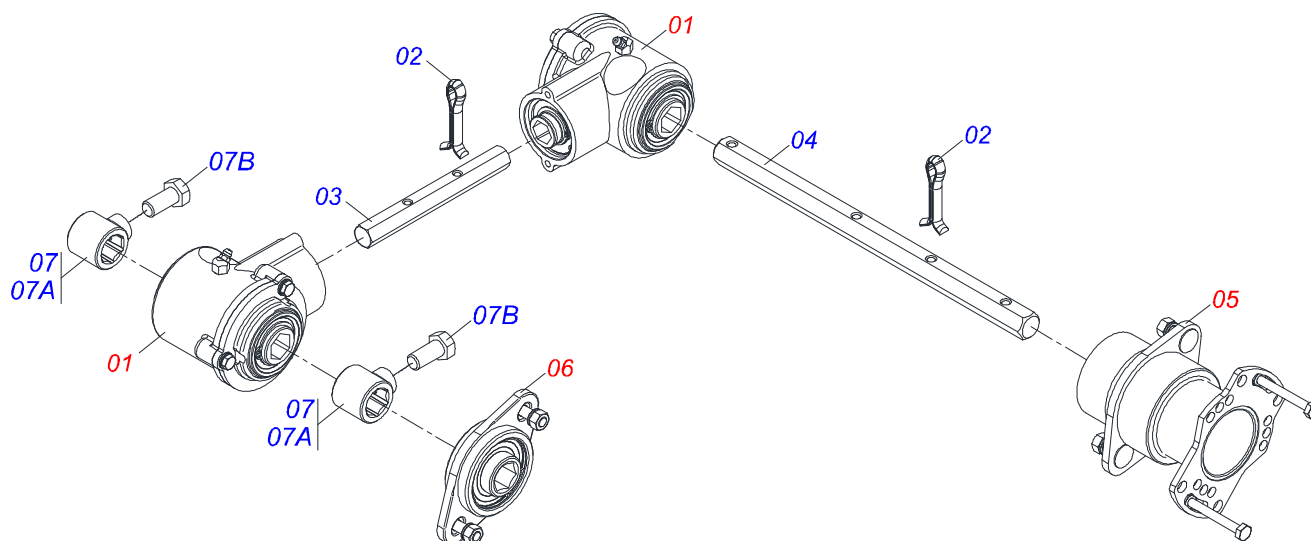


Item	Code	Description	See page	QT
01	0511057159	TRANSMISSION HOPPER SEED ROW	137	02
02	0503010071	3/16" X 1" SPLIT PIN		04
03	0591011768	HEX AXLE 5/8 X 140		01
04	0591011320	HEX AXLE 3/4 X 310		01
05	0531050163	BEARING FOR LATERAL DEVIATION	138	01
06	0501057684	SIDE BEARING FRONT SUPPORT SEED ROW	139	01
07	0511054314	TRANSMISSION AXLE LOCK SLEEVE		02
07A	0502012699	TRANSMISSION HUB LOCK SLEEVE		01
07B	0503010256	3/8" X 3/4" BOLT		01

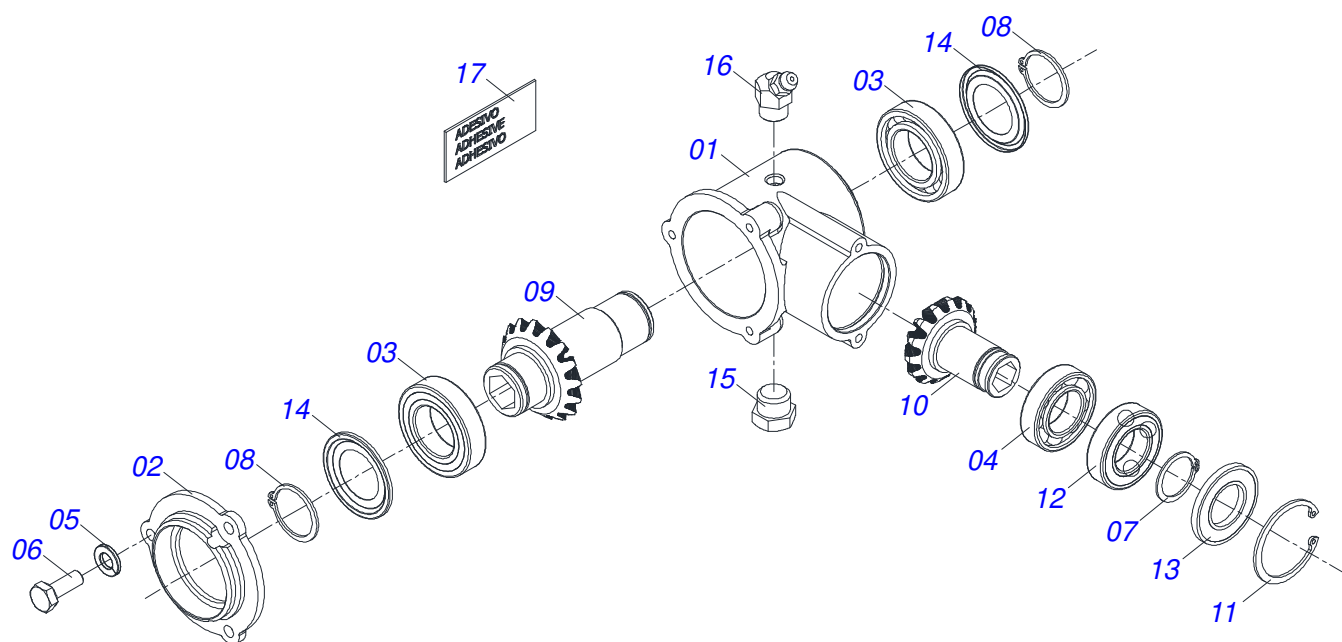


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6 X 1 X 16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01
17	0503035316	LUBRICATED POINTS DECAL		01

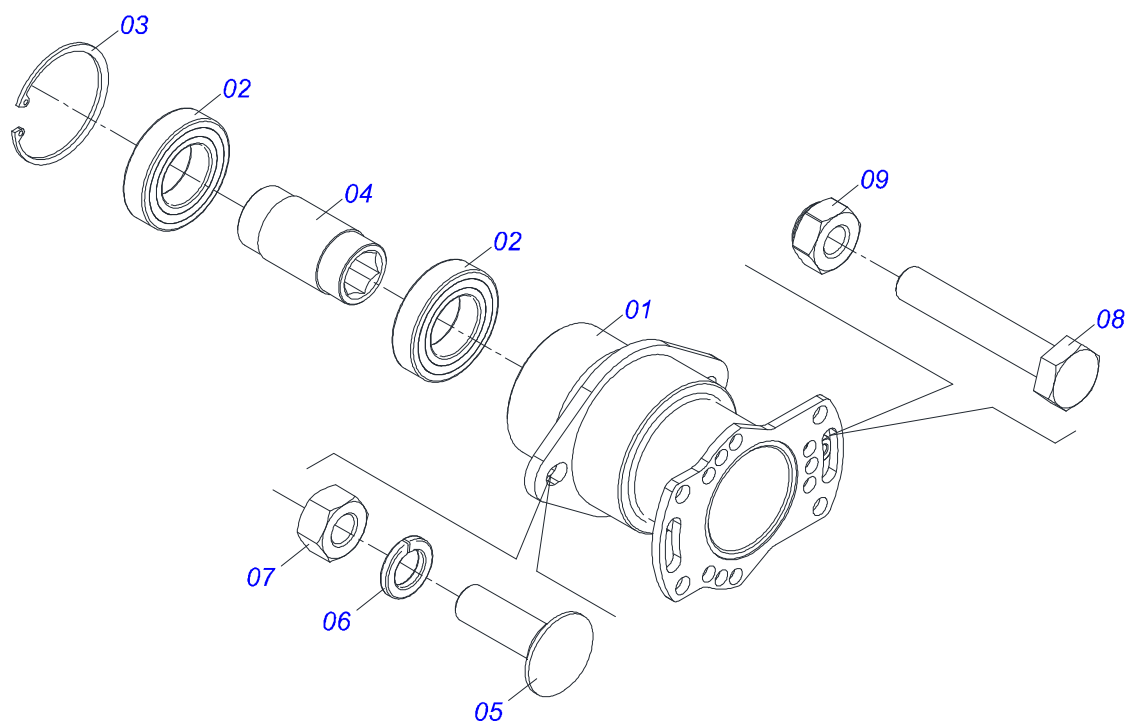


Item	Code	Description	See page	QT
01	0531061767	BEARING BODY		01
02	0503012861	6006 2RS BALL BEARING		02
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01
04	0591016481	BEARING INTERNAL AXLE		01
05	0503011953	5/16" X 1" BOLT		02
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
07	0503010337	5/16" NUT		02
08	0503011194	BOLT 1/4 UNC X 2.1/2 CS G.2 ZN		02
09	0503012880	1/4" UNC SELF ADJUSTING NUT		02

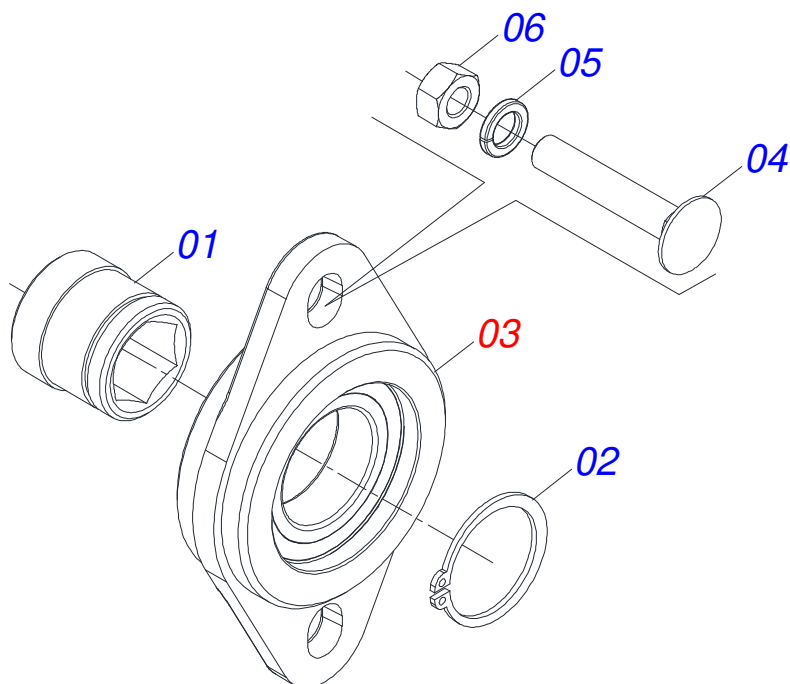


Item	Code	Description	See page	QT
01	0551015804	BEARING AXLE BODY		01
02	0503010707	501030 CLAMPING RING (FOR AXLE)		01
03	0501053566	ROW SEED BEARING	140	01
04	0503011953	5/16" X 1" BOLT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

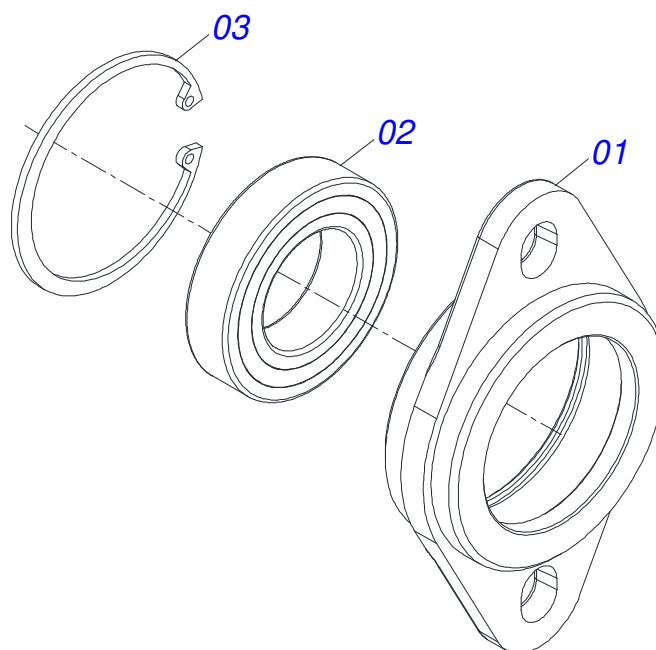

Item	Code	Description	See page	QT
01	0502012030	HOUSING BEARING		01
02	0503012861	6006 2RS BALL BEARING		01
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01

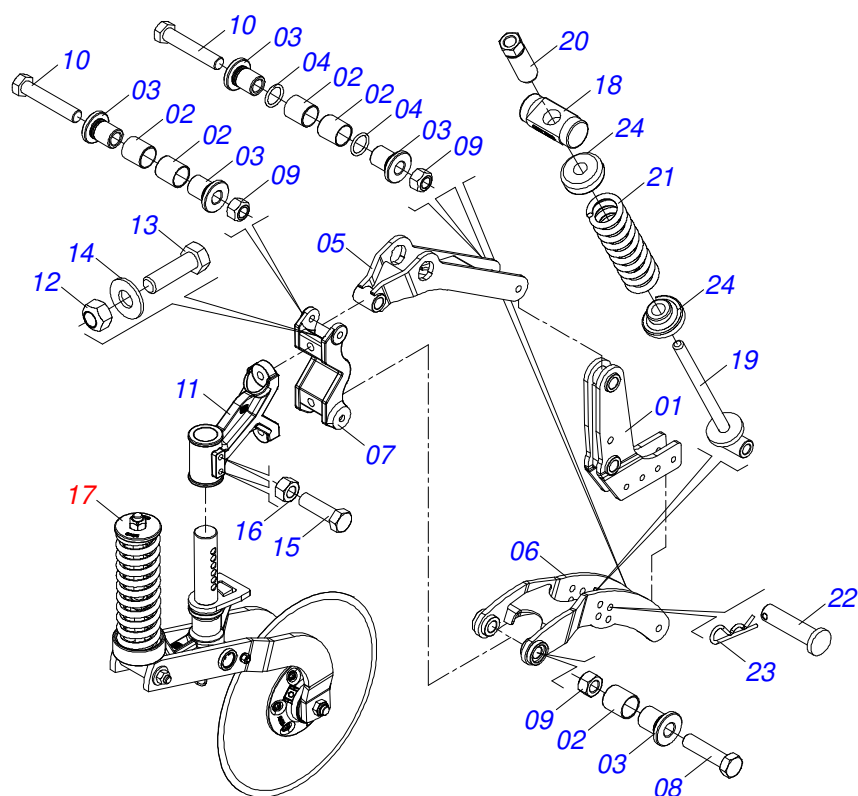


Item	Code	Description	See page	QT
01	0531060002	FERTILIZER ROW REAR SUPPORT		01
02	0503019405	SLEEVE		08
03	0591010640	ARM SPACER SLEEVE WITHOUT LUBRICATION		08
04	0503010045	O'RING		04
05	0531060001	TOP SUPPORT FERTILIZER ROW		01
06	0521069998	LOWER SUPPORT FERTILIZER ROW		01
07	0591010629	SHORT FERTILIZER ROW SUPPORT		01
08	0503010233	5/8" X 2-1/2" BOLT		02
09	0503012412	5/8" UNC SELF LOCKING NUT		05
10	0501010452	5/8" X 5" BOLT		03
11	0502012727	BLADE DISC SUPPORT		01
12	0503011255	3/4" LOCK NUT		02
13	0503011328	3/4" X 4" BOLT		02
14	0501010322	FLAT WASHER		02
15	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
16	0503010013	5/8 NUT		02
17	0521056070	DC 20 ASSY	143	01
18	0521011158	SPRING LOCKNUT		01
19	0521062073	SPRING GUIDE		01
20	0521018575	REGULATOR SPINDLE 100		01
21	0503031450	2.7" X 9.2" X 0.03" SPRING		01
22	0521016057	JUNCTION AXIS		01
23	0503030168	HITCH PIN CLIP		01
24	0502020393	SPRING UPPER SUPPORT		02

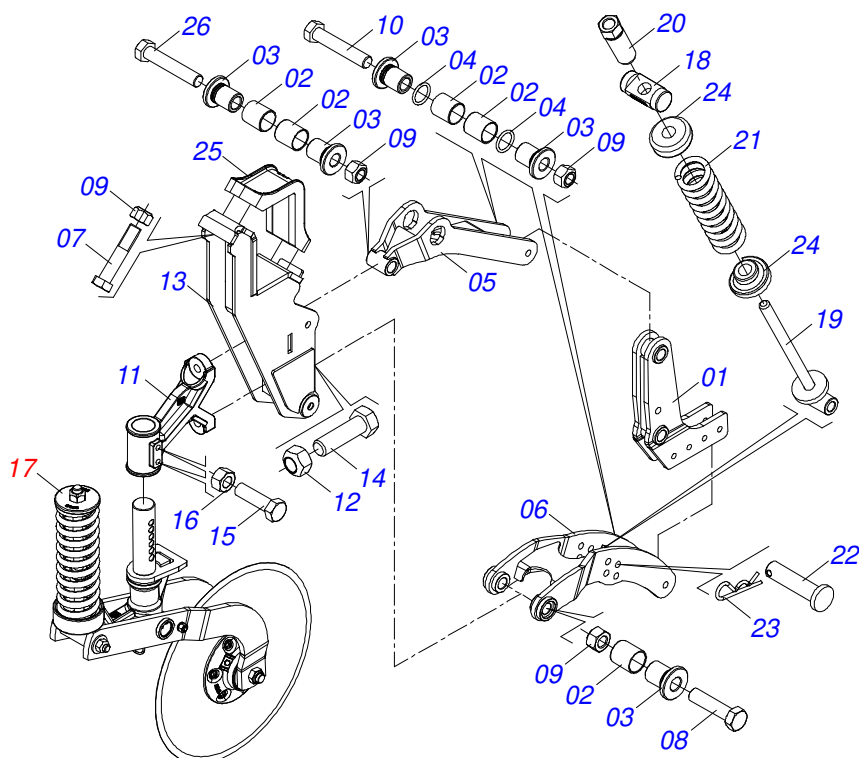


Item	Code	Description	See page	QT
01	0531060002	FERTILIZER ROW REAR SUPPORT		01
02	0503019405	SLEEVE		08
03	0591010640	ARM SPACER SLEEVE WITHOUT LUBRICATION		08
04	0503010045	O'RING		04
05	0531060001	TOP SUPPORT FERTILIZER ROW		01
06	0521069998	LOWER SUPPORT FERTILIZER ROW		01
07	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		04
08	0503010233	5/8" X 2-1/2" BOLT		02
09	0503012412	5/8" UNC SELF LOCKING NUT		09
10	0501010452	5/8" X 5" BOLT		02
11	0502012727	BLADE DISC SUPPORT		01
12	0503011255	3/4" LOCK NUT		02
13	0521069993	LONG FERTILIZER ROW SUPPORT		01
14	0501010125	3/4" X 2-1/2" BOLT		02
15	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
16	0503010013	5/8 NUT		02
17	0521056070	DC 20 ASSY	143	01
18	0521011158	SPRING LOCKNUT		01
19	0521062073	SPRING GUIDE		01
20	0521018575	REGULATOR SPINDLE 100		01
21	0503031450	2.7" X 9.2" X 0.03" SPRING		01
22	0521016057	JUNCTION AXIS		01
23	0503030168	HITCH PIN CLIP		01
24	0502020393	SPRING UPPER SUPPORT		02
25	0502012724	FERTILIZER ROW FIXER		01
26	0501010163	5/8" X 4-1/2" BOLT		01

DC 20 ASSY

0521056070

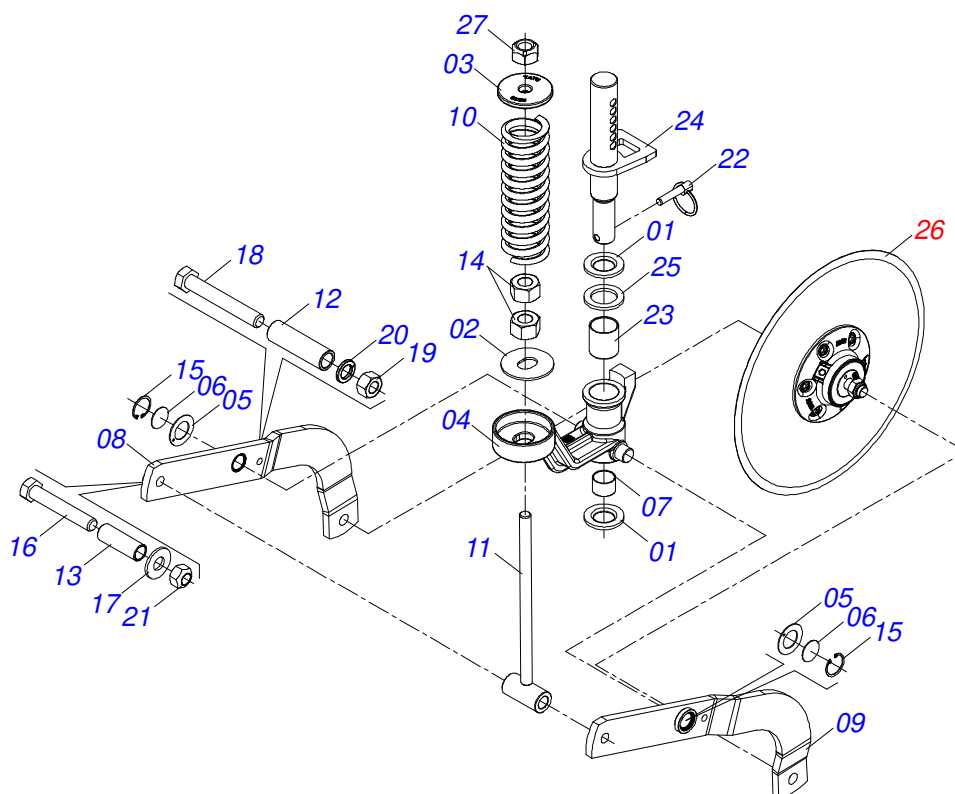


Item	Code	Description	See page	QT
01	0571019034	FLANGE WASHER AXLE		02
02	0571019032	SUPPORT WASHER		01
03	0502012813	FLANGE WASHER SPRING		01
04	0591010619	DC SPRING SUPPORT		01
05	0503019274	WASHER		02
06	0581017628	LID		02
07	0503019277	SLEEVE LUBRICATION SYSTEM		01
08	0501110964	RIGHT ARM WITH SLEEVE		01
09	0501110965	LEFT ARM WITH SLEEVE		01
10	0503034709	COMPRESSION SPRING 100 X 315 X 15.87		01
11	0521069996	ROD SPRING FERTILIZER		01
12	0591010624	SUPPORT ARM SLEEVE		01
13	0591010625	19,50 X 25 X 91,50/91,30 SLEEVE		01
14	0503010417	7/8" NUT		02
15	0503010390	SEAL RING		02
16	0503011198	C3/4" X 6" SCREW		01
17	0501010322	FLAT WASHER		01
18	0503011411	1/2" X 5-1/2" BOLT		01
19	0503010060	1/2 UNC G.5 ZN HEX NUT		01
20	0503010019	1/2" SPRING WASHER		01
21	0503011255	3/4" LOCK NUT		01
22	0503030430	7/16 X 2" PIN LOCK		01
23	0503019271	SELF LUBRICATING BUSHING		01
24	0521069997	DC FIXING AXIS WITH LIMITER		01
25	0591010628	SHAFT THRUST WASHER		01
26	0521053248	20" DISC BLADE HUB WITH CONICAL BEARING	144	01
27	0503011254	7/8" HEX SELF ADJUSTING NUT		01

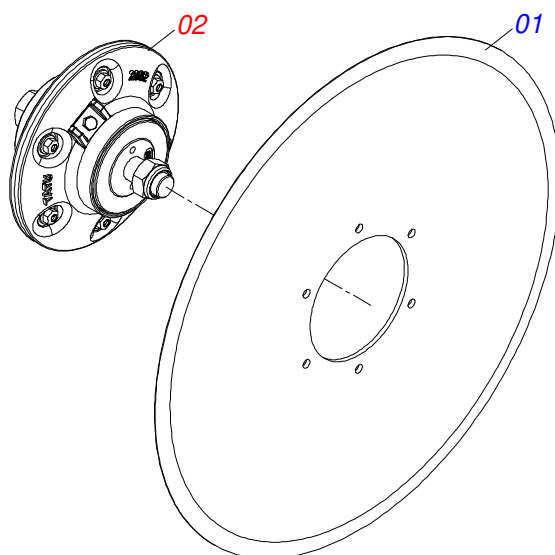


Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521053697	DISC BLADE HUB	145	01

DISC BLADE HUB


0521053697

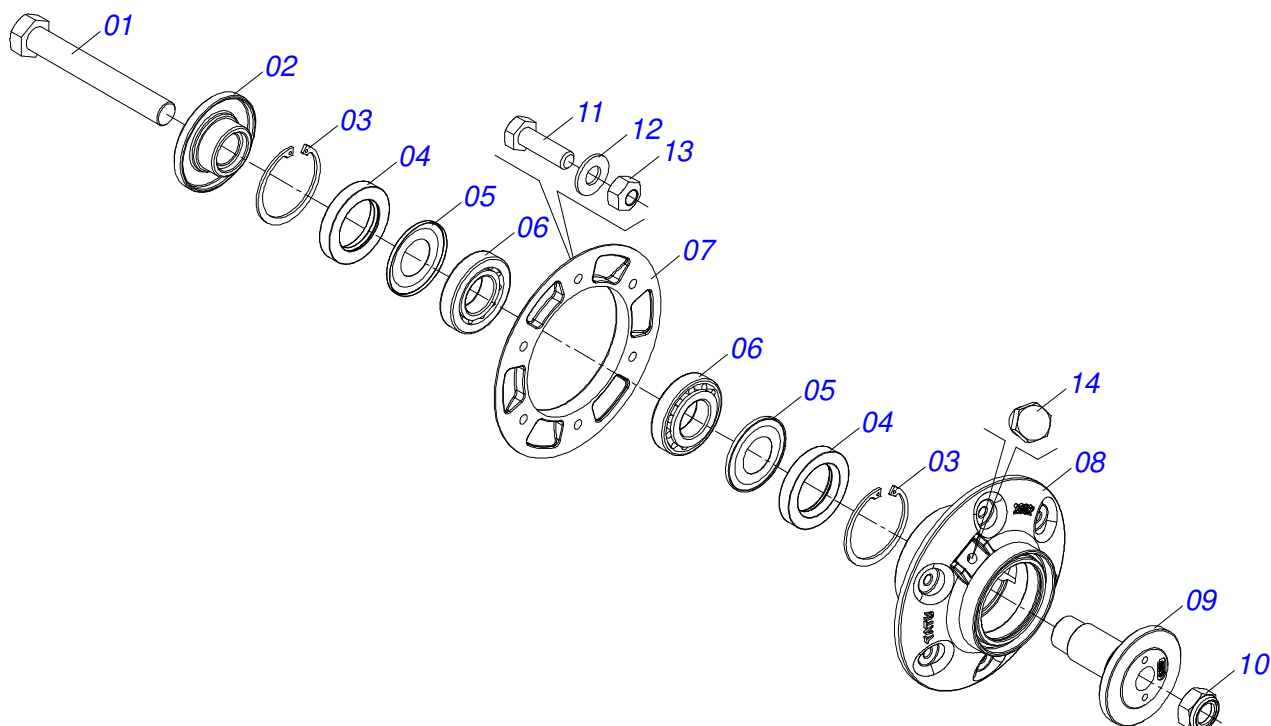


Item	Code	Description	See page	QT
01	0503019283	SCREW 7/8 UNF X 6.1/4		01
02	0502040872	REGULATORY NUT		01
03	0503010370	502072 CLAMPING RING (FOR AXLE)		02
04	0503010590	00674-B SEAL		02
05	0503019285	RING		02
06	0503012170	30207 ROLLER BEARING		02
07	0502020641	BLADE DISC FLANGE		01
08	0502012862	DISC BLADE HUB		01
09	0502040873	DISC BLADE AXLE		01
10	0503017755	NUT		01
11	0503018825	5/16 UNC UNC BOLT		06
12	0501010694	FLAT WASHER		06
13	0503013816	5/16" LOCKNUT		06
14	0511017907	1/8" BSPT X 6 PLUG		02

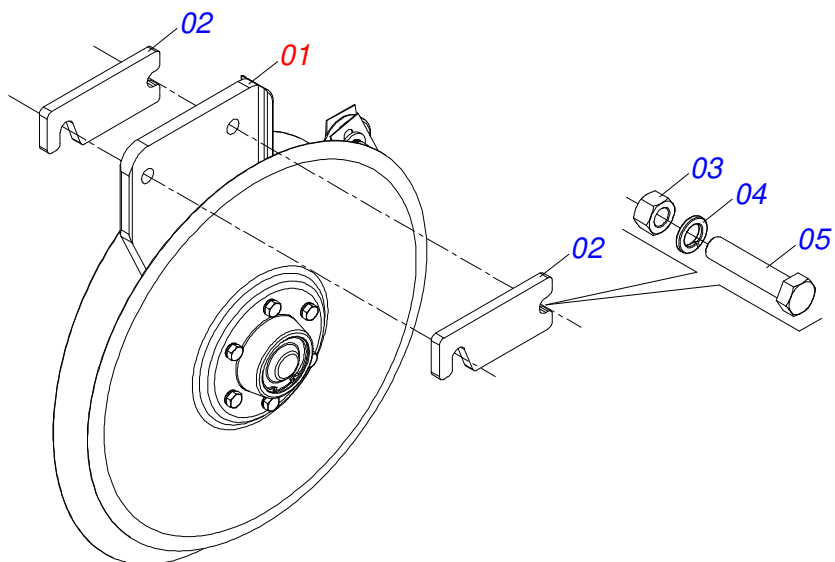


Item	Code	Description	See page	QT
01	0521055868	RIGHT DUAL FERTILIZER DISC	148	01
02	0511018662	SPACING PLATE		02
03	0503010060	1/2 UNC G.5 ZN HEX NUT		02
04	0503010019	1/2" SPRING WASHER		02
05	0503010479	BOLT		02

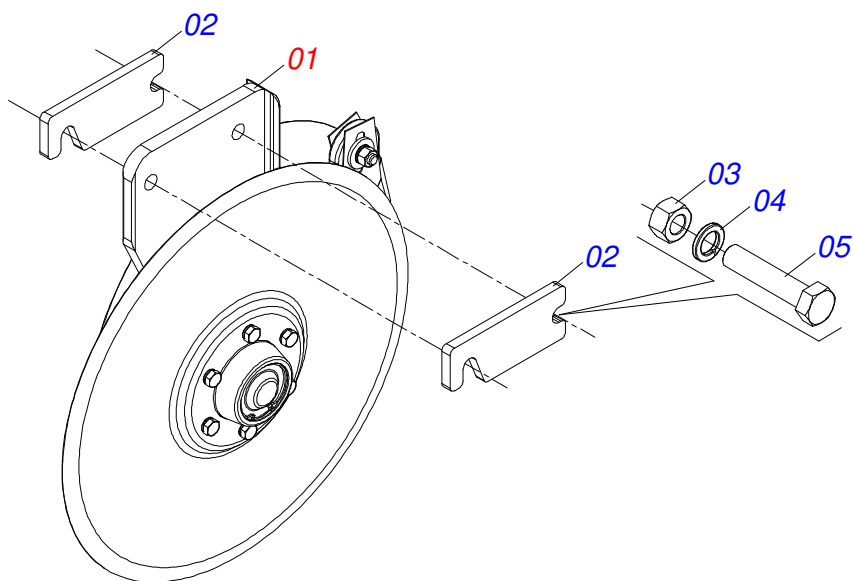


Item	Code	Description	See page	QT
01	0521055869	LEFT DUAL FERTILIZER DISC	149	01
02	0511018662	SPACING PLATE		02
03	0503010060	1/2 UNC G.5 ZN HEX NUT		02
04	0503010019	1/2" SPRING WASHER		02
05	0503010479	BOLT		02

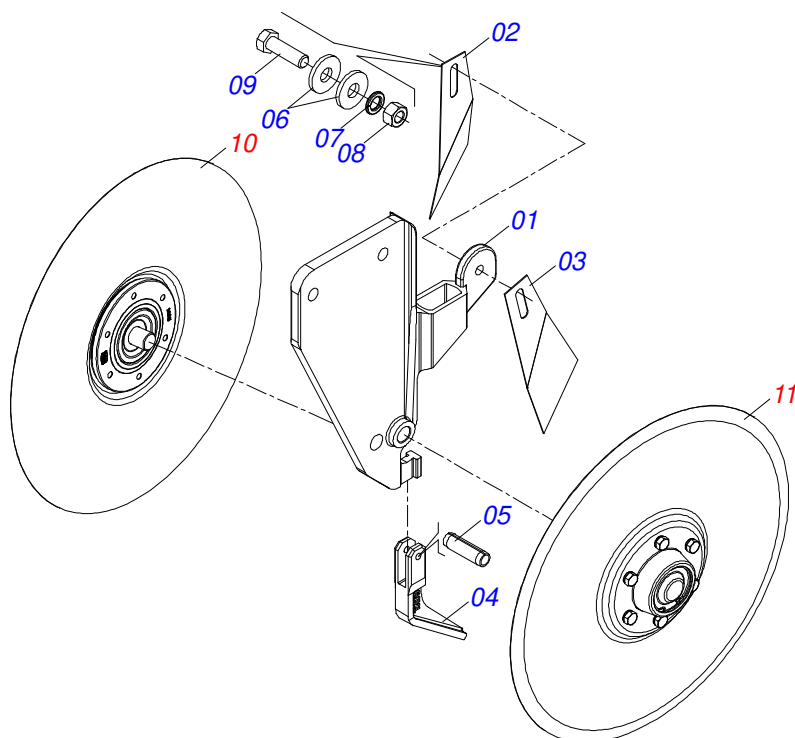


Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503010025	3/8 SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 121 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 122 FERTILIZER / SEED		01

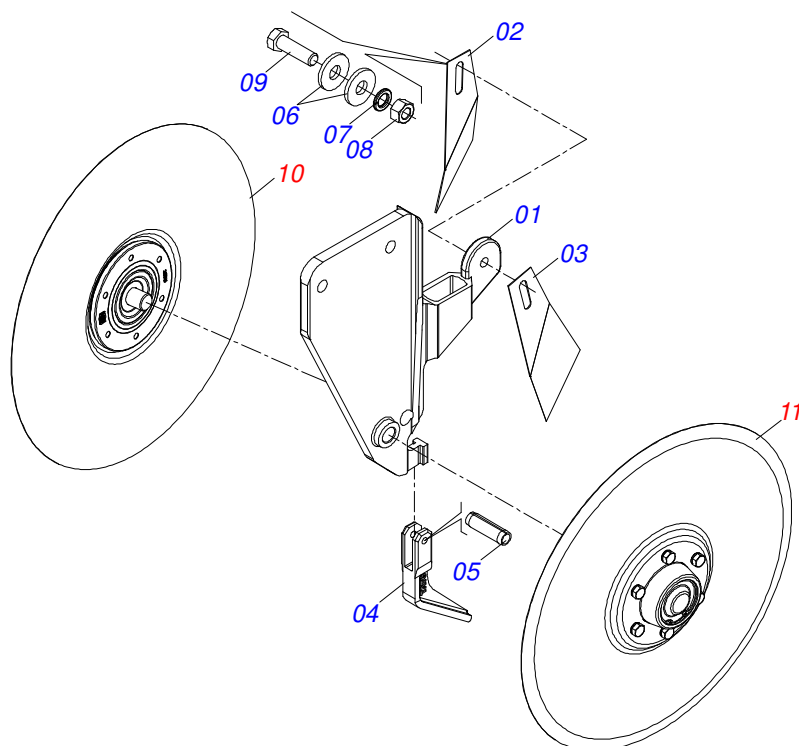


Item	Code	Description	See page	QT
01	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503010025	3/8 SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 121 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 122 FERTILIZER / SEED		01

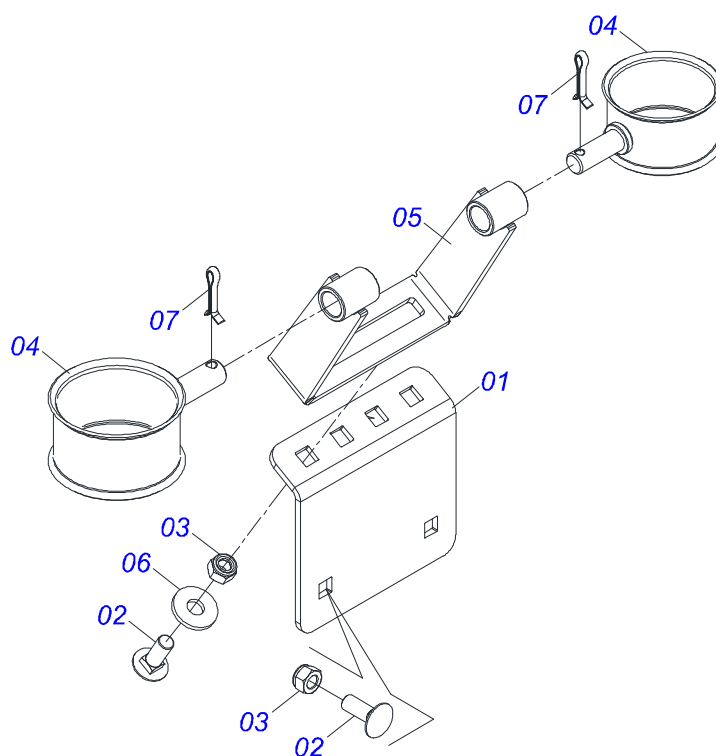


Item	Code	Description	See page	QT
01	0501210006	ASSY ARTICULATED CONDUCTOR SUPPORT		01
02	0501011643	3/8 X 1"BOLT		04
03	0503013357	3/8 SELF-ADJUSTING NUT		04
04	0531062741	SEED HOSE GUIDE		02
05	0531062743	GUIDE SUPPORT		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503010071	3/16" X 1" SPLIT PIN		02

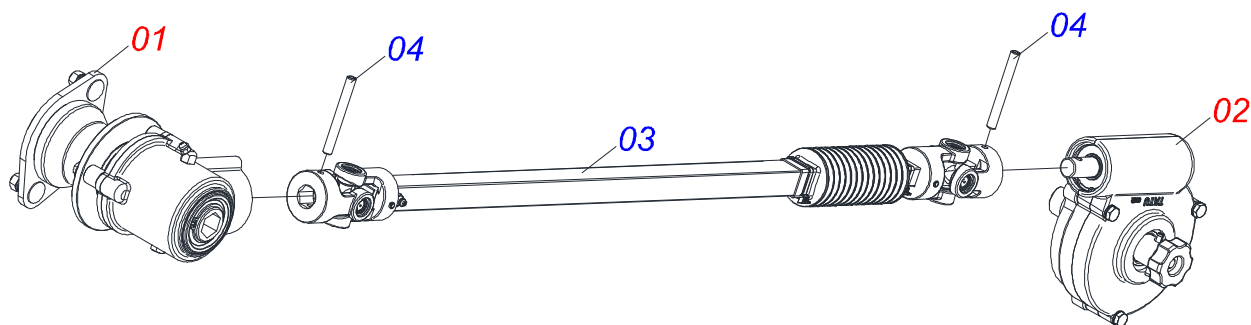


Item	Code	Description	See page	QT
01	0541051937	TRANSMISSION CASE	154	01
02	0541051974	TRANSMISSION CASE	155	01
03	0503064250	CARDAN		01
04	0503011855	0.2" X 1.8" SPRING PIN		02

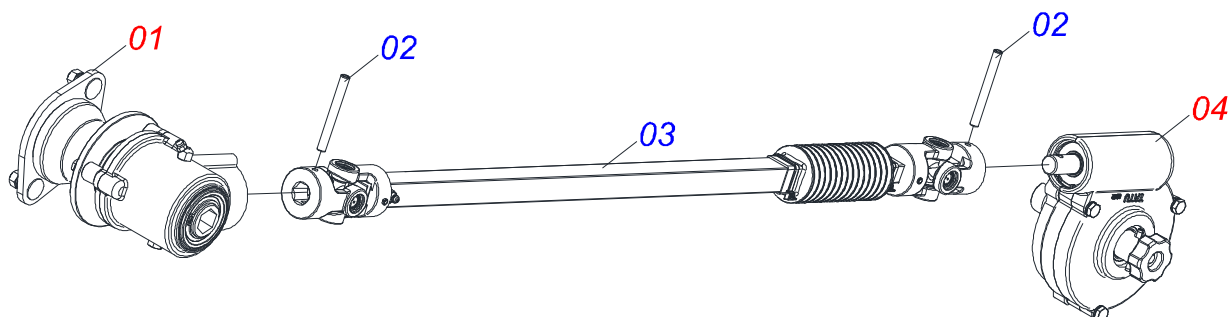

Item	Code	Description	See page	QT
01	0541051974	TRANSMISSION CASE	155	01
02	0503011855	0.2" X 1.8" SPRING PIN		02
03	0503064248	CARDAN 16XQ15,9XQ22X827		01
04	0541051938	TRANSMISSION CASE	156	01

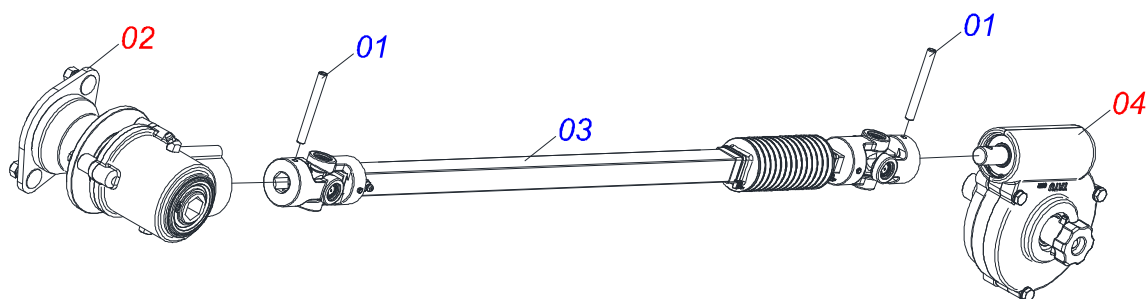


Item	Code	Description	See page	QT
01	0503011855	0.2" X 1.8" SPRING PIN		02
02	0541051938	TRANSMISSION CASE	156	01
03	0503064252	CARDAN 16,00 X Q 15,90 X Q 22 X 1057		01
04	0541051973	GEARBOX		01

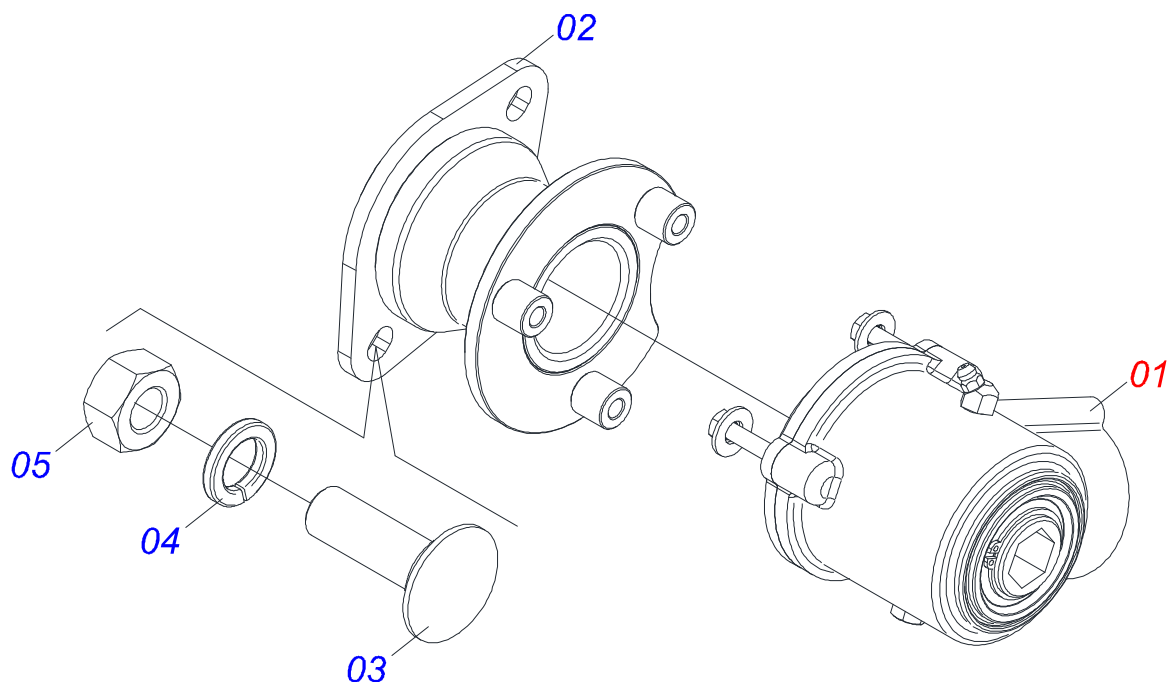


Item	Code	Description	See page	QT
01	0541051939	TRANSMISSION CASE	157	01
02	0531067076	TRANSMISSION CASE FLANGE		01
03	0503011953	5/16" X 1" BOLT		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

TRANSMISSION CASE

0541051974

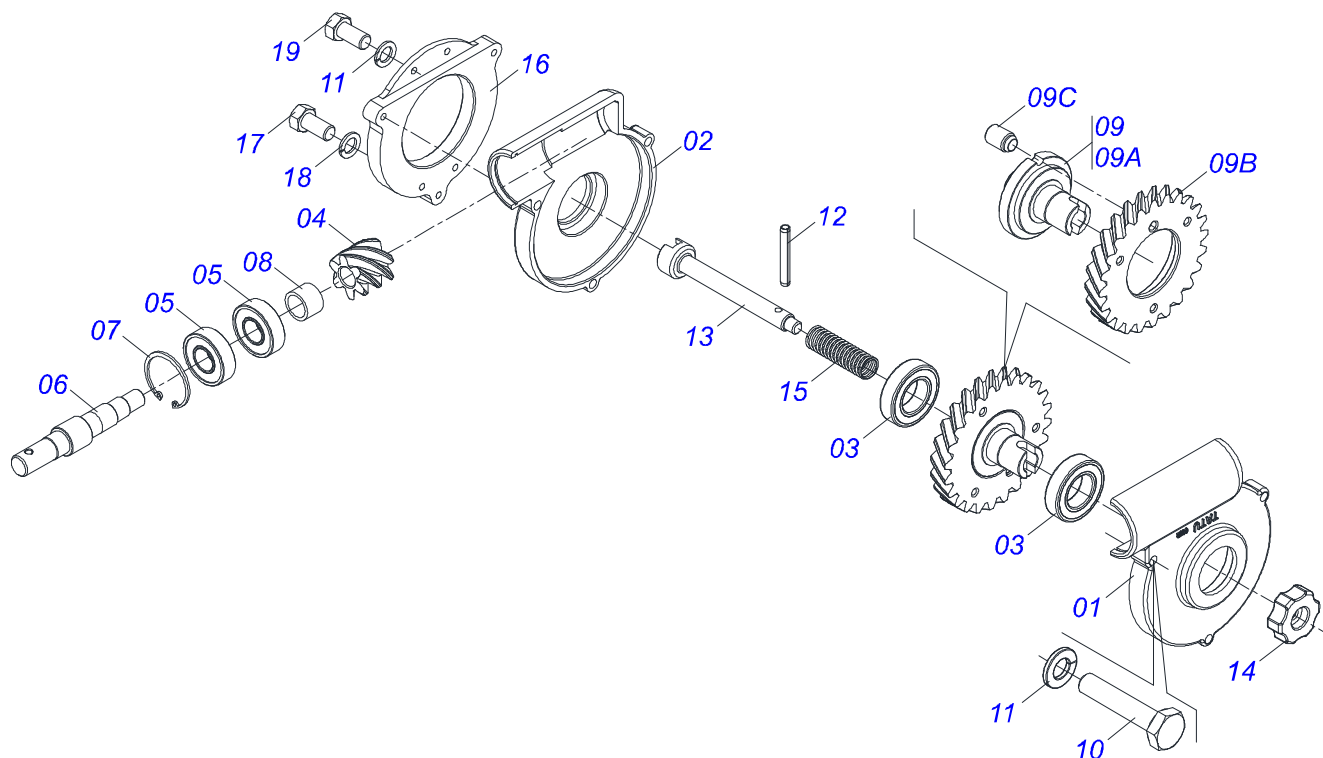


Item	Code	Description	See page	QT
01	0502050052	LEFT SIDE TRANSMISSION HOPPER PP	01	
02	0502050053	RIGHT SIDE TRANSMISSION HOPPER PP	01	
03	0503011410	ROLLER BEARING	02	
04	0503033976	GEAR 6Z PNEUMATIC 2014	01	
05	0503011182	6203 ROLLER BEARING	02	
06	0571016187	PINION AXLE 6Z PNEUMATIC	01	
07	0503011184	502040 CLAMPING RING (FOR AXLE)	01	
08	0571017655	FIXER SLEEVE	01	
09	0511057504	JOIN GEAR	01	
09A	0571017898	BODY GEAR TRANSMISSION	01	
09B	0503033975	24Z GEAR PNEUMATIC	01	
09C	0503011769	M8 X 0.5" BOLT	01	
10	0503010733	1/4" X 1-3/4" BOLT	03	
11	0503010143	1/4" SPRING WASHER	05	
12	0503015356	SPRING PIN	01	
13	0501311462	PIN DRAG 126	01	
14	0503035749	LOCKING KNOB	01	
15	0503036278	SPRING COMPRESSION	01	
16	0501315590	GEARBOX FLANGE	01	
17	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN	02	
18	0503015110	M06 SPRING WASHER	02	
19	0503013758	1/4" X 1-1/2" BOLT	02	

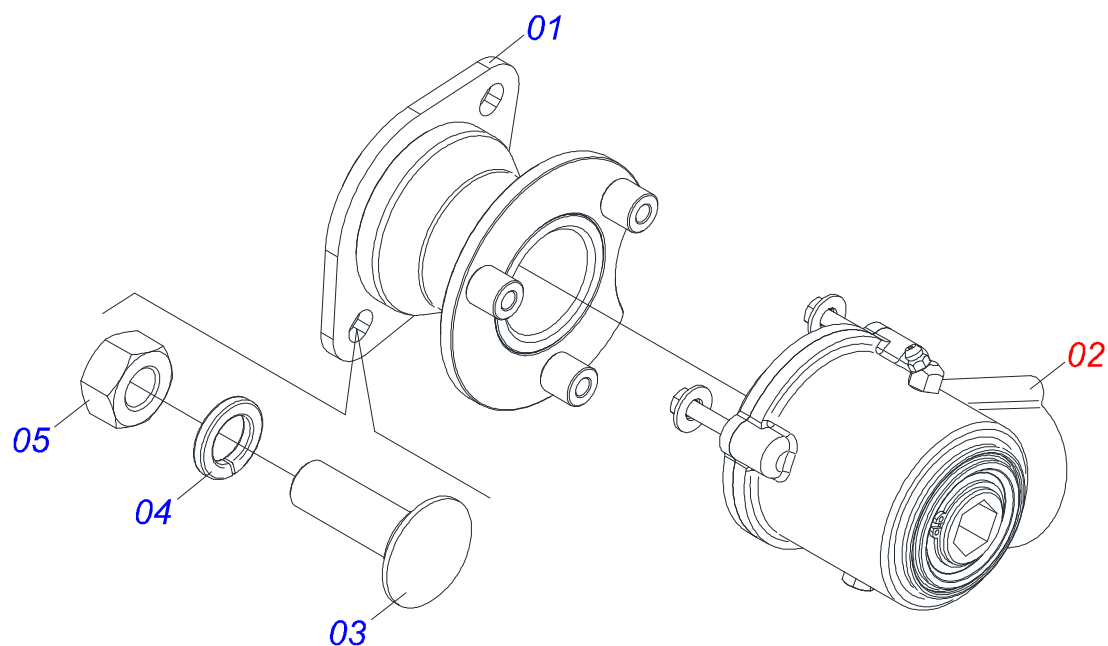


Item	Code	Description	See page	QT
01	0531067080	GEARBOX FLANGE		01
02	0541051939	TRANSMISSION CASE	157	01
03	0503011953	5/16" X 1" BOLT		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

TRANSMISSION CASE


0541051939

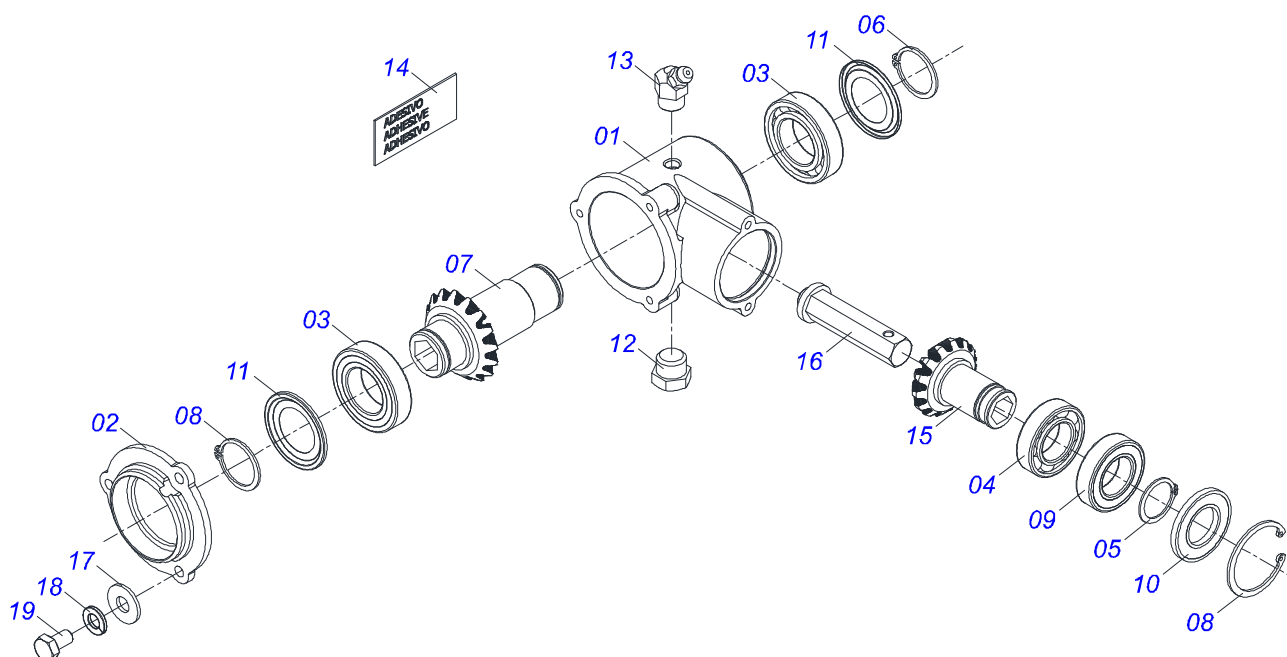


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503010707	501030 CLAMPING RING (FOR AXLE)		02
07	0502040856	CONICAL GEAR		01
08	0503011105	SEAL RING		01
09	0503011409	6005 Z BALL BEARING		01
10	0503017008	SEAL RING		01
11	0503017007	SEAL RING		02
12	0511017907	1/8" BSPT X 6 PLUG		01
13	0503010003	1845 GREASE FITTING		01
14	0503035316	LUBRICATED POINTS DECAL		01
15	0501311461	CONIC GEAR 14 TEETH		01
16	0531066150	WELDED DRIVE AXLE		01
17	0501010694	FLAT WASHER		03
18	0503010143	1/4" SPRING WASHER		03
19	0503011813	M6 X 1.2" BOLT		03

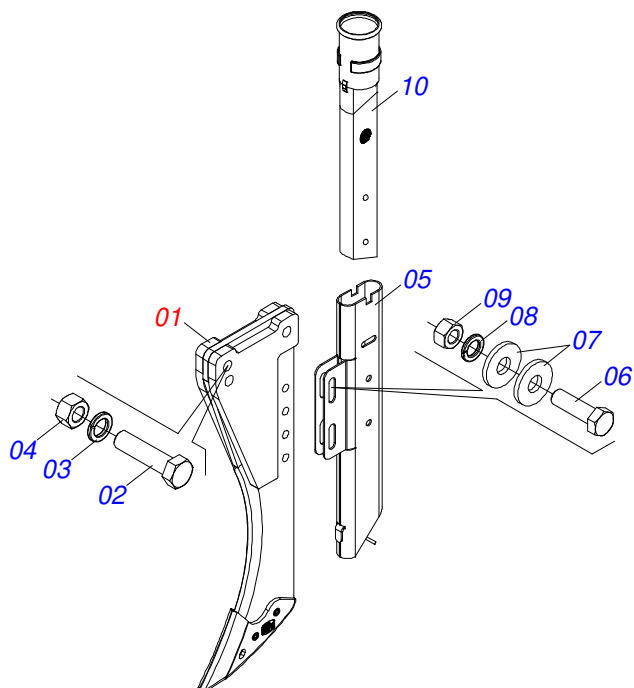


Item	Code	Description	See page	QT
01	0521053673	SCARIFIER ROD WITH NOZZLE	159	01
02	0503010479	BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0521069127	BOTTOM NOZZLE FERTILIZER		01
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
08	0503010025	3/8 SPRING WASHER		02
09	0503010026	3/8" NUT		02
10	0503030483	FERTILIZER SOCKET		01

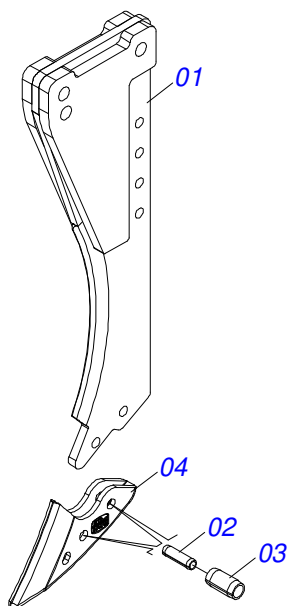

Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER ROD		01
02	0503011402	0.2" X 0.8" SPRING PIN		02
03	0503016853	SPRING PIN		02
04	0502040869	FIXED ROD BEARING		01

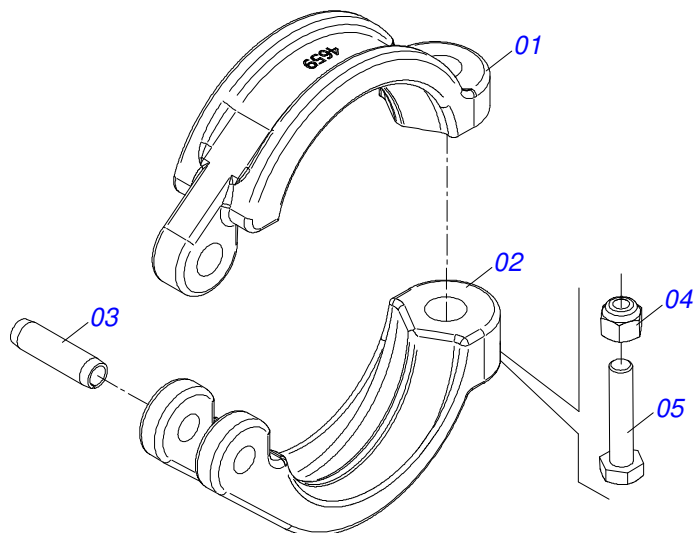

Item	Code	Description	See page	QT
01	0503034660	CLAMP LOWER		01
02	0503034659	CLAMP UPPER		01
03	0503010686	0.2" X 0.7" SPRING PIN		01
04	0503011776	M6 SELF ADJUSTINGNUT		01
05	0503011813	M6 X 1.2" BOLT		01

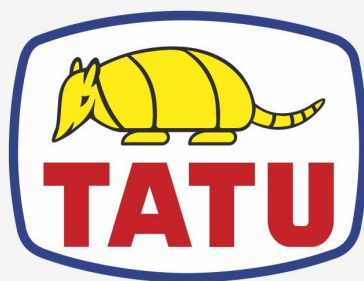

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

