

ROW CROP PLANTERS

**PST PLUS FLEX CA SUPREMA P.P - FRAME 4395 -
CSU - TQ
PST PLUS FLEX CA SUPREMA P.P - CHASSI 4395 -
CSU - TQ**

Code: 0501093866
Series: S-0116
Revision: 00
Revision Date: MARCH/2024

PARTS CATALOGUE



MARCHESAN



PRODUCTS

Code	Working Width	Description
0111390110		PST PLUS FLEX CA SUP PP 4395/9E500 ESPECIAL S-0116
0111390113		PST PLUS FLEX CA SUP PP 4395/9E500 ESPECIAL S-0116

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX

0909097120	ASSY FRAME	1
0541052279	WHEEL AXIS FRAME - 4395	2
0511057333	DRAWBAR ASSEMBLY - 3495/4045/4395/4845/5345/5745	3
0511058656	CYLINDER SET - 4845/5345/5745	4
0521054233	50,8 X 101,6 X 240,5 X 507,5 HYDRAULIC CYLINDER	5
0541052308	WITH TIRE TRANSMISSION WHEEL 7,50 X 16 X 16L	6
0501058240	WHEEL FASTENER WITH TENSIONER	7
0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	8
0501058244	WHEEL FIXED CHAIN TENSIONER	9
0501058242	WHEEL MOBILE CHAIN TENSIONER	10
0501058239	WHEEL CHAIN TENSIONER BEARING	11
0541052311	SUPPORT WHEEL COMPLETE	12
0501058241	WHEEL SUPPORT CHAIN TENSIONER	13
0541052314	EI WHEEL WITH 7.50 X R16/16L TIRE ASSY	14
0541052317	WHEEL EI WITH TIRE 7,50 X R16/16L PR TORNEL TXL PLUS	15
0521053187	WHEEL AND TIRE ASSY	16
0541052612	TRANSMISSION ASSY	17
0501052560	MOTOR AXLE SIGNAL	18
0511051434	TRANSMISSION ACTUATOR	19
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	20
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	21
0541050875	SIDE BEARING SET	22
0511057265	TRANSMISSION CHAIN TENSIONER	23
0521056103	BEARING WITH GEAR 20Z HEX SHAFT 3/4	24
0521055217	LOWER CURRENT STRETCH	25
0531057910	SIDE BEARING WITH BEARING 6007	26
0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	27
0541051920	LEFT GEAR SET TMC	28
0541051923	RIGHT REPLACEMENT ASSY	29
0521055498	SEED TRANSMISSION DOUBLE BEARING	30
0541051921	LEFT REPLACEMENT	31
0541051924	ENGRANAJE DERECHO	32
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	33
0501056271	GEARBOX CLOSED BEARING	34
0501048790	AXLE WITH RING	35
0501056443	GEAR HOUSING BEARING	36
0511057258	TENSIONER WITH GEAR	37
0511054363	CHAIN TENSIONER	38
0501056444	ROLLER BEARING	39
0541052608	HEX SHAFT ASSEMBLY WITH GEARBOX	40
0541050079	SEED ROW UPPER TRANSMISSION GEAR BOX	41
0541051928	SUPPORT WITH LEFT TRANSMISSION BOX	42
0541050061	UPPER GEARBOX	43
0541052276	ASSY SILO FERTILIZER	44
0541052277	SILO SUPPORT RIGHT	45
0541052278	SILO SUPPORT LEFT	46
0531055319	ALPHA II FERTILIZER METERING	47
0501053788	3/4" SQUARE AXLE FASTENER	48
0541052291	SIDE BEARING SET	49
0531057911	22Z GEAR SIDE BEARING ASSEMBLY	50
0531055863	TRANSMISSION HUB ASSY	51
0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	52
0531059139	COLLECTOR ASSY	53
0531055273	ALPHA FERTILIZER METERING CLAMP	54
0511057329	HYDRAULIC SYSTEM ASSEMBLY - 4845/5345/5745	55
0501053834	MALE QUICK COUPLER	56
0511057355	SEMI-ASSEMBLED HYDRAULIC MARKER - 4395	57
0511058449	HYDRAULIC CYLINDER	58
0501054649	HBM SEQUENTIAL VALVE	59



MARCHESAN

INDEX


0511058119	VALVE SUPPORT ASSEMBLY	60
0541052282	HANDRAILING ASSY 4395	61
0511059383	INTERNAL HANDRAILING FIXER	62
0511057358	PLATFORM ASSEMBLY - 4395	63
0511056536	LADDER ASSEMBLY	64
0541052898	DRAWBAR JACK ASSY	65
0531057462	DECAL	66
0531056823	SUPPORT 3200	67
0541050448	MONITORING SET PLANTING	68
0541052609	TURBINE ASSY	69
0531050772	RIGHT CLAMP 4	70
0541052281	AIR CONDUCTOR 09 NOZZLES	71
0521052549	CLAMP	72
0541050798	HOSE GUIDE ASSEMBLY	73
0531051111	TURBINA SUCCAO TATU	74
0531050972	COMPLETE PLM ENGINE	75
0541052611	ASSY CSU 4395	76
0521056677	SUPPORT CSU 1 BOX 10 MOUTH	77
0531050237	3" RIGHT SEED CONDUCTOR FIXER	78
0531054470	3" X 400 SEED NOZZLE WITH FIXING	79
0541052610	MANUAL STORAGE TUBE ASSY	80
0511059322	LIFTING SUPPORT ASSEMBLY	81
0511059323	SUPPORT PLATFORM TRANSPORT	82
0501050633	ROW MARKER DISC ASSEMBLY	83
0511053904	ROW MARKER DISC	84
0511057270	DRAWBAR EXTENDER	85
0511054601	HITCH ARTICULATED TRACTOR	86
0511053179	TRACTOR COUPLING SHAFT	87
0511057817	SUPPORT HOSE	88
0531059619	ALPHA COMPONENTS KIT - 09 ROWS	89
0909097121	SEED/FERTILIZER ROW ASSY	90
0541052285	FRONT SHORT SEED ROW	91
0541052286	FRONT LONG SEED LINE	92
0541050737	SHORT FERTILIZER ROW	93
0541052319	ROW LONG FERTILIZER	94
0541052224	SHORT FERTILIZER ROW	95
0541052830	ROW LONG FERTILIZER	96
0541050740	22" DISC BLADE ASSY	97
0541050741	22" DISC HUB	98
0541050742	SUPPORT SPRING GUIDE	99
0521057680	DISC CUTTING BOX	100
0541052225	22" WAVY COULTER DISC BLADE ASSY	101
0541052226	22" WAVY COULTER DISC HUB	102
0521054769	LEFT DDD FERTILIZER WITH SUPPORT	103
0521054768	RIGHT DDD FERTILIZER WITH SUPPORT	104
0521055869	LEFT DUAL FERTILIZER DISC	105
0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	106
0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	107
0521055864	FERTILIZER/SEED RIGHT HUB ASSY	108
0521055865	FERTILIZER/SEED LEFT HUB ASSY	109
0521055868	RIGHT DUAL FERTILIZER DISC	110
0531052159	LEFT IRON COVERING WHEEL	111
0531052160	RIGHT IRON COVERING WHEEL	112
0501056288	RIGHT IRON COVERING WHEEL	113
0501053186	RIGHT IRON PRESS WHEEL ASSY	114
0501056289	LEFT IRON COVERING WHEEL	115
0541052328	RIGHT REAR SPI	116
0541052327	REAR LEFT	117
0531050536	REAR RIGHT SPI TIRE WITHOUT FLAP	118

INDEX

0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION		119
0521056956	PRECISION PLANTING CSU CABLE/TRANSMISSION ASSY		120
0541050062	P.P. TRANSMISSION GEAR BOX RIGHT		121
0521056632	DEPTH CONTROL		122
0521056635	RIGHT ASSY DDD INTEGRATED DEPTH SYSTEM SPI		123
0521055093	BODY COMPACTOR		124
0521055017	RIGHT COMPACTOR WHEEL		125
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION		126
0521054990	LEFT COMPACTOR WHEEL		127
0531050538	MOUNTED LEFT ARM		128
0521055056	SPOKED WHEEL ASSY		129
0521055073	ASSEMBLY DEPTH WHEEL HUB		130
0531050539	MOUNTED LEFT ARM		131
0531050537	REAR SPI LEFT TIRE WITHOUT TAB		132
0521053946	SCARING ROD		133
0521057957	FIXED ROD EXTENSION WITH FIXATION		134
0503064041	CARDAN T.S 16,00 X Q 15,90 X Q 22 X 697		135

ASSY FRAME

0909097120

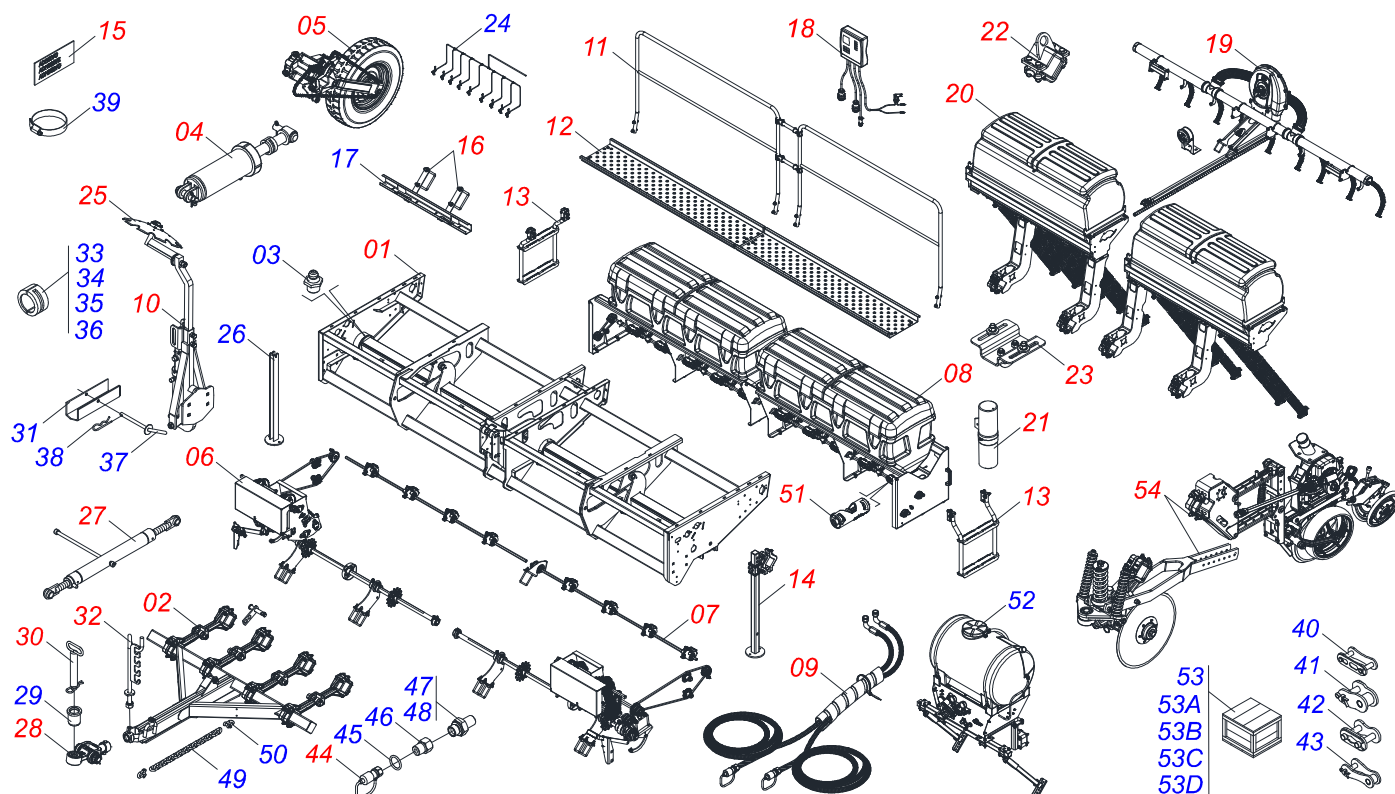


Item	Code	Description	See page	QT
01	0541052279	WHEEL AXIS FRAME - 4395	2	01
02	0511057333	DRAWBAR ASSEMBLY	- 3	01
03	0503010003	1845 GREASE FITTING		06
04	0511058656	CYLINDER SET - 4845/5345/5745	4	01
05	0541052308	WITH TIRE TRANSMISSION WHEEL 7,50 X 16 X 6 16L		04
06	0541052612	TRANSMISSION ASSY	17	01
07	0541052608	HEX SHAFT ASSEMBLY WITH GEARBOX	40	01
08	0541052276	ASSY SILO FERTILIZER	44	01
09	0511057329	HYDRAULIC SYSTEM ASSEMBLY - 4845/5345/5745	55	01
10	0511057355	SEMI-ASSEMBLED HYDRAULIC MARKER - 4395	57	01
11	0541052282	HANDRAILING ASSY 4395	61	01
12	0511057358	PLATFORM ASSEMBLY - 4395	63	01
13	0511056536	LADDER ASSEMBLY	64	02
14	0541052898	DRAWBAR JACK ASSY	65	02
15	0531057462	DECAL	66	01
16	0531056823	SUPPORT 3200	67	08
17	0501316825	SUPPORT 55 X 50 X 800		04
18	0541050448	MONITORING SET PLANTING	68	01
19	0541052609	TURBINE ASSY	69	01
20	0541052611	ASSY CSU 4395	76	01
21	0541052610	MANUAL STORAGE TUBE ASSY	80	01
22	0511059322	LIFTING SUPPORT ASSEMBLY	81	02
23	0511059323	SUPPORT PLATFORM TRANSPORT	82	04
24	0503063745	LINE APPLICATION KIT NEM PROINOC 9L DRS-4105		01
25	0501050633	ROW MARKER DISC ASSEMBLY	83	02
26	0501065677	BRACKET		02
27	0511057270	DRAWBAR EXTENDER	85	01
28	0511054601	HITCH ARTICULATED TRACTOR	86	01
29	0571014769	SLEEVE HITCH ARTICULATION 1.1/2		01


ASSY FRAME

0909097120


Item	Code	Description	See page	QT
30	0511053179	TRACTOR COUPLING SHAFT	87	01
31	0521013022	TRANSPORT LOCK		01
32	0511057817	SUPPORT HOSE	88	01
33	0501047895	25 ROD STOP		01
34	0501047885	30 ROD STOP		01
35	0501047886	35 ROD STOP		01
36	0501047887	40 ROD STOP		01
37	0501068994	8,30 X 78 LOCK PIN		01
38	0503030168	HITCH PIN CLIP		01
39	0503010246	CLAMP		09
40	0503010780	N-2050 AMENDMENT		02
41	0503010951	REDUCTION		04
42	0503011750	AMENDMENT WITH LOCK		06
43	0503011751	REDUCTION 40-1		06
44	0501053834	MALE QUICK COUPLER	56	01
45	0503010045	O'RING		01
46	0541010080	TERMINAL R.1 / 2 NPT		01
47	0571015343	NIPLE 1 / 2NPT X 3 / 4NPT		01
48	0581013729	NIPLE 1/2 NPT		01
49	0503014120	CHAIN		01
50	0503014321	CABLE STEEL SHACKLE		02
51	0531059619	ALPHA COMPONENTS KIT - 09 ROWS	89	01
52	0503063924	SPRAY KIT PROINOC - 2688		01
53	0521029775	CAJA CON KIT MIXER 20 LITERS		01
53A	0501100089	WOOD BOX		01
53B	0503063858	MIXER KIT 20 LITERS CONICAL BOTTOM DE-3352		01
53C	0503063743	PH METER PORTABLE DIGITAL DRS-2425		01
53D	0511034819	PLASTIC COVER WITH INSTRUCTIONS MANUAL INOCULATING TANK		01
54		SEED/FERTILIZER ROW ASSY	90	

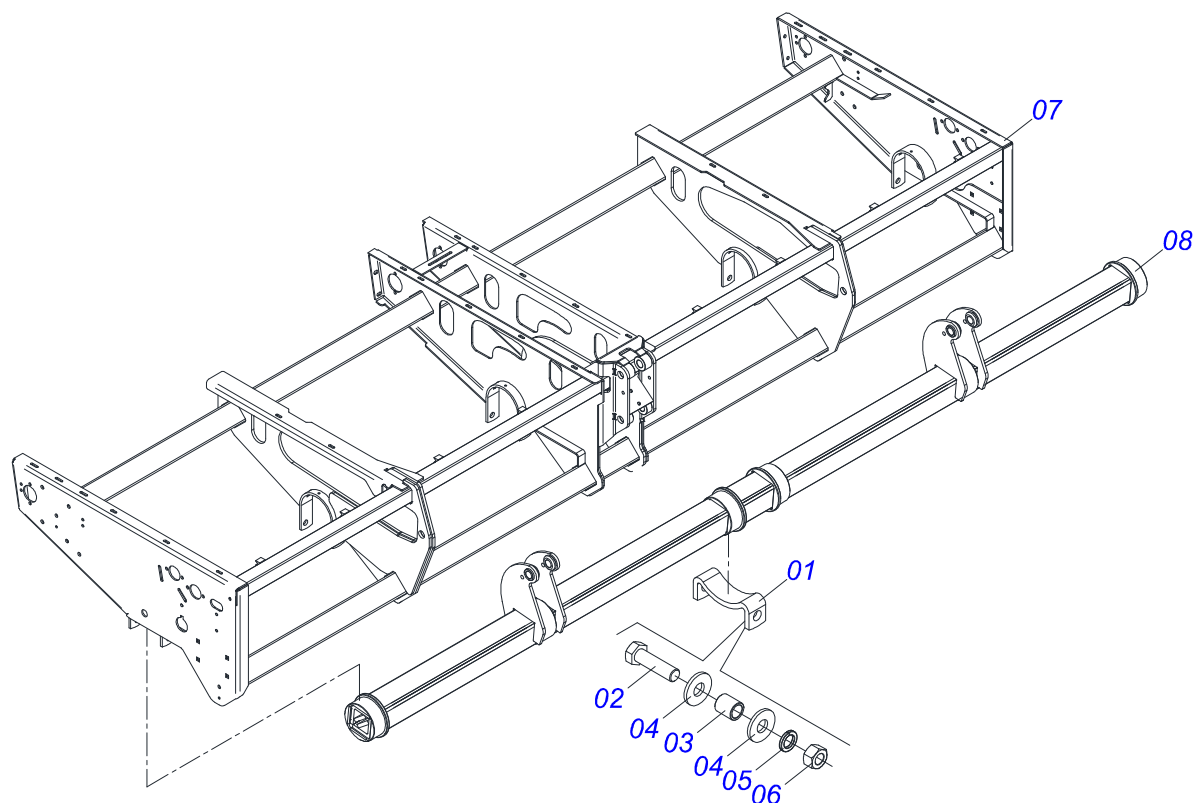


Item	Code	Description	See page	QT
01	0521013199	LOWER BEARING SEMI		06
02	0503010899	5/8 UNC X 2.1/4 BOLT		12
03	0531013922	0.6" X 0.8" X 1" SLEEVE		08
04	0501012140	FLAT WASHER 16,50 X 40 X 4,00 ZN		24
05	0503011445	SPRING WASHER		12
06	0503010013	5/8 UNC G.5 ZN HEX NUT		12
07	0531067247	FRAME 4395		01
08	0531067248	AXLE JOINT ROTATED		01

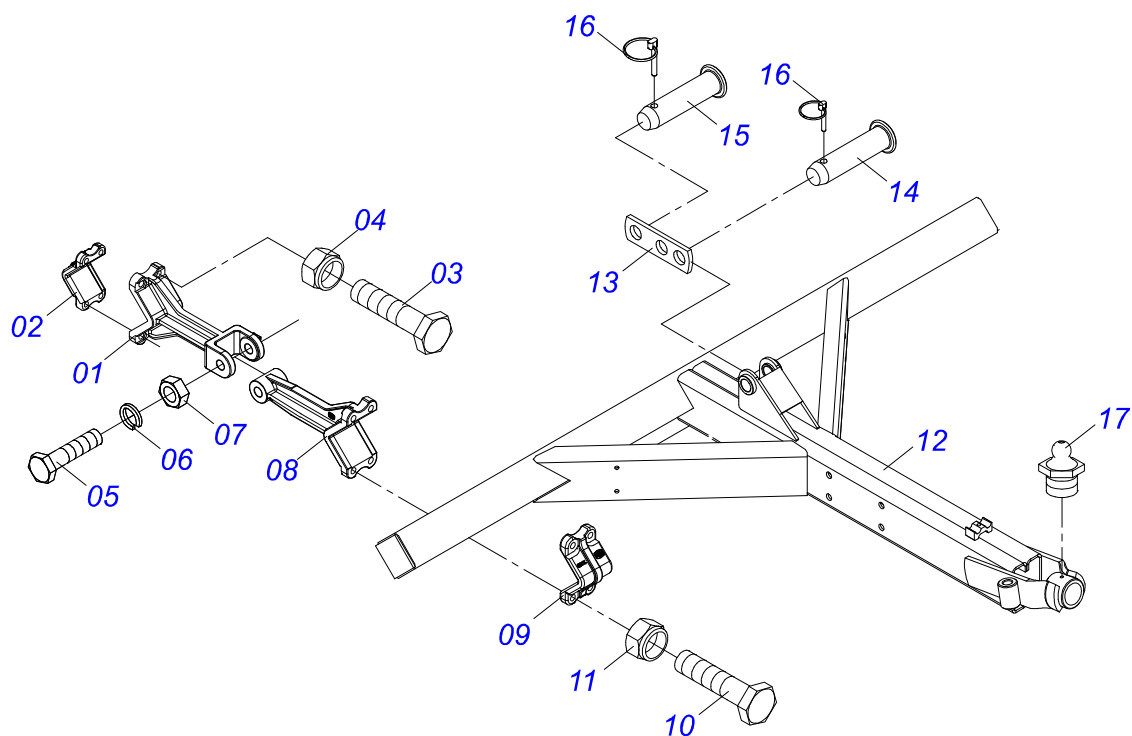


Item	Code	Description	See page	QT
01	0502012806	SUPPORT REAR FIXER DRAWBAR		04
02	0502012789	FIXER SUPPORT FERTILIZER ROW		04
03	0503017960	5/8" X 3-12" BOLT		16
04	0503010811	5/8" UNF SELF ADJUSTING NUT		16
05	0501010191	1" X 6" BOLT		04
06	0503010012	1" SPRING WASHER		04
07	0501010059	1.5/8 NUT		04
08	0502012805	SUPPORT FRONT FIXER DRAWBAR		04
09	0502012789	FIXER SUPPORT FERTILIZER ROW		04
10	0503017960	5/8" X 3-12" BOLT		16
11	0503010811	5/8" UNF SELF ADJUSTING NUT		16
12	0521065958	DRAWBAR		01
13	0561019087	DRAWBAR TRANSPORT LOCK		01
14	0551014099	COUPLING SHAFT 31,75 X 185		01
15	0521010544	1.2" X 4.9" COUPLING SHAFT		01
16	0503030085	LOCK PIN		02
17	0503010002	1800 GREASE FITTING		01

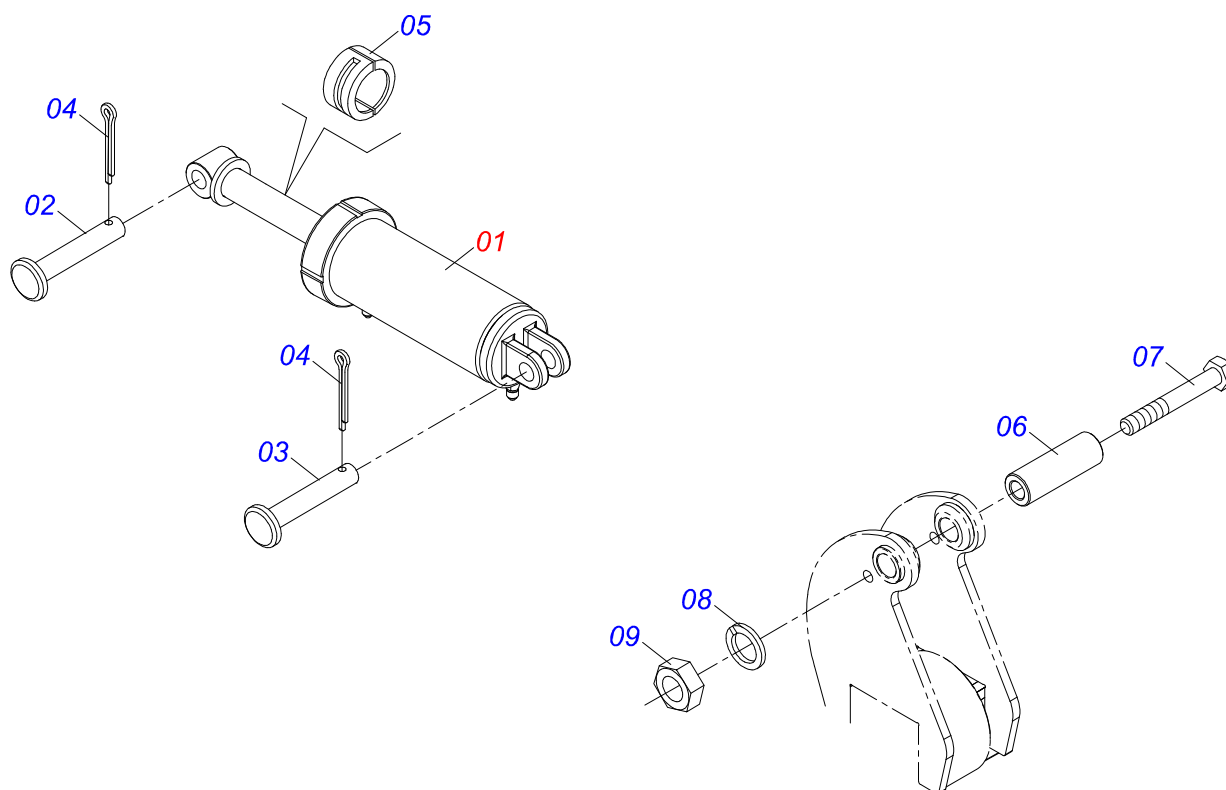


Item	Code	Description	See page	QT
01	0521054233	50,8 X 101,6 X 240,5 X 507,5 HYDRAULIC CYLINDER	5	02
02	0521012538	1.2" X 3.5" COUPLING SHAFT		02
03	0521010547	1.2" X 6.5" COUPLING SHAFT		02
04	0503010523	1/4" X 2" SPLIT PIN		04
05	0501047888	45 ROD STOP		02
06	0571019384	SPACING SLEEVE 16,30 X 30 X 104		02
07	0501013867	BOLT 5/8" UNC X 6 CS G.5 ZN		02
08	0503010027	5/8 SPRING WASHER		02
09	0503010013	5/8 UNC G.5 ZN HEX NUT		02

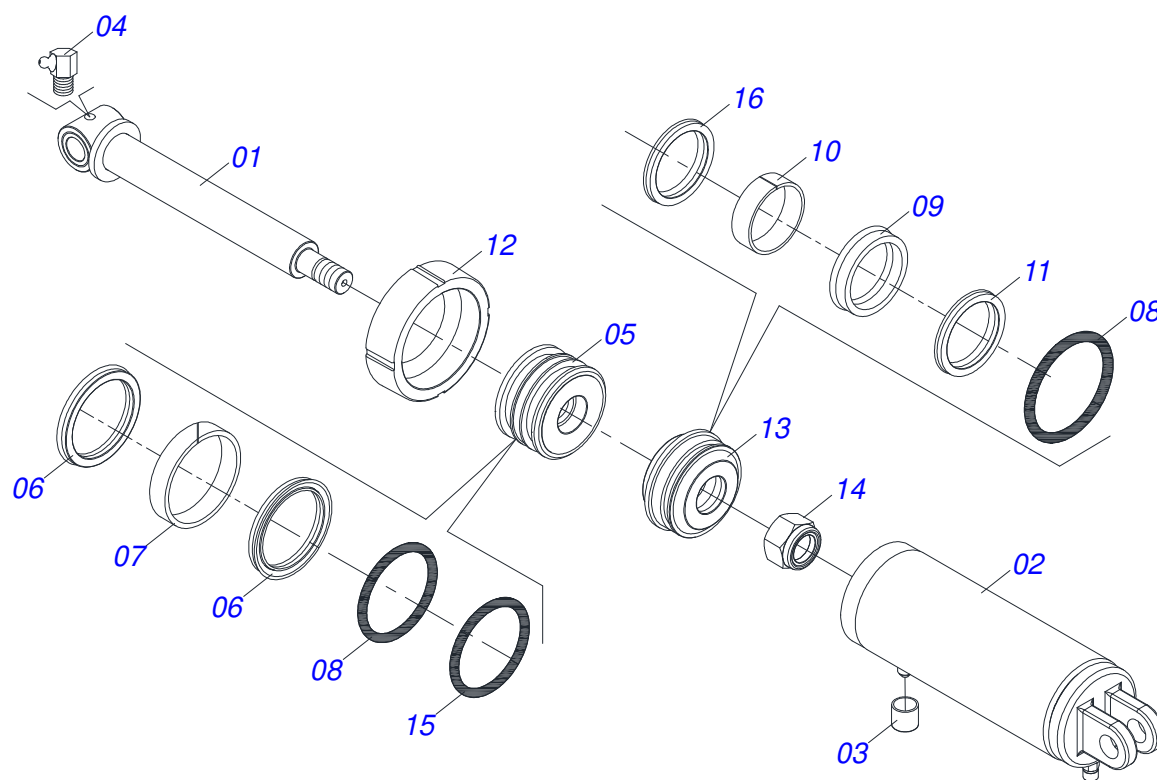


Item	Code	Description	See page	QT
01	0521069306	50.8 X 337.5 EXTENSION WITH 32.5 BUSHING		01
02	0521069305	101,6 X 438,5 TUBE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0503010004	1890 GREASE FITTING		01
05	0502012821	2" X 4" RING SUPPORT		01
06	0503011061	8-342 BACK-UP RING		02
07	0503018024	RING BS OD050805200171D-BR		01
08	0503010338	2-342 N 3006-9B O'RING		02
09	0503018026	GASKET 1870-2000-375 B POLYMAX		01
10	0503018025	RING GUIDE W2-2250-750		01
11	0503010039	D-2000 SCRAPER RING		01
12	0502012822	END CAP 4"		01
13	0502012842	50,80 X 101,60 PISTON		01
14	0503010817	SELF LOCKING NUT 1.1/4 UNF ALTA G.5 ZN		01
15	0503018029	O'RING 2-217 N 3006 90B		01
16	0503015633	SELEMASTER SEALING		01
17	0511034644	50,8 X 101,6 HYDRAULIC CYLINDER SPARE SET		01

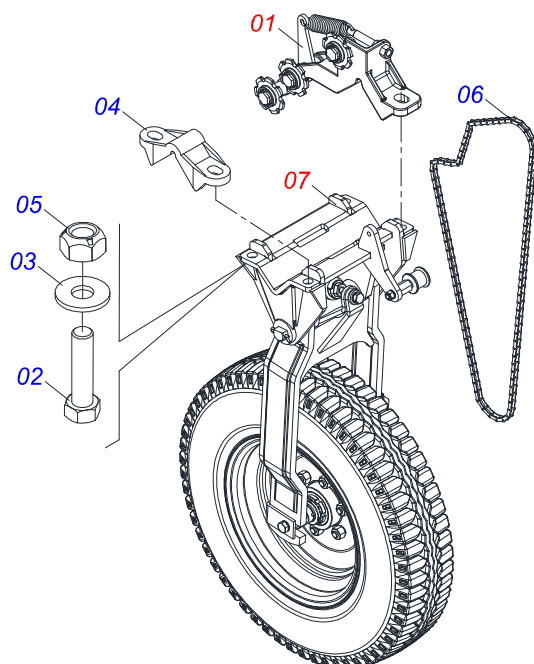


Item	Code	Description	See page	QT
01	0501058240	WHEEL FASTENER WITH TENSIONER	7	01
02	0503011119	7/8" X 6" BOLT		04
03	0501014251	FLAT WASHER		04
04	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
05	0503011254	7/8" HEX SELF ADJUSTING NUT		04
06	0503012766	2050 CHAIN X 85 LINK + MENDING		01
07	0541052311	SUPPORT WHEEL COMPLETE	12	01

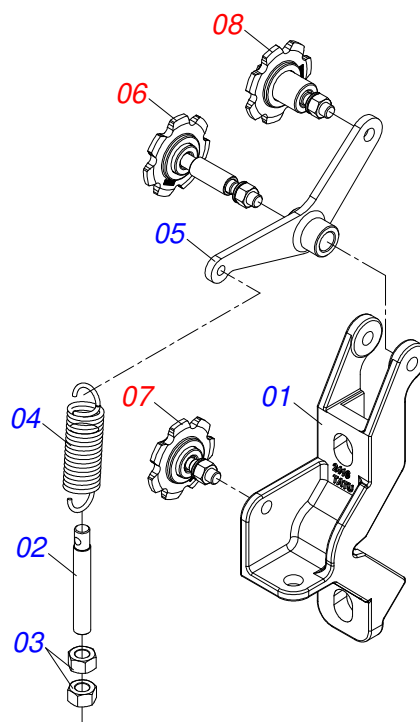


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8 UNC G.5 ZN HEX NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0501058243	INTERMEDIATE WHEEL CHAIN TENSIONER	8	01
07	0501058244	WHEEL FIXED CHAIN TENSIONER	9	01
08	0501058242	WHEEL MOBILE CHAIN TENSIONER	10	01

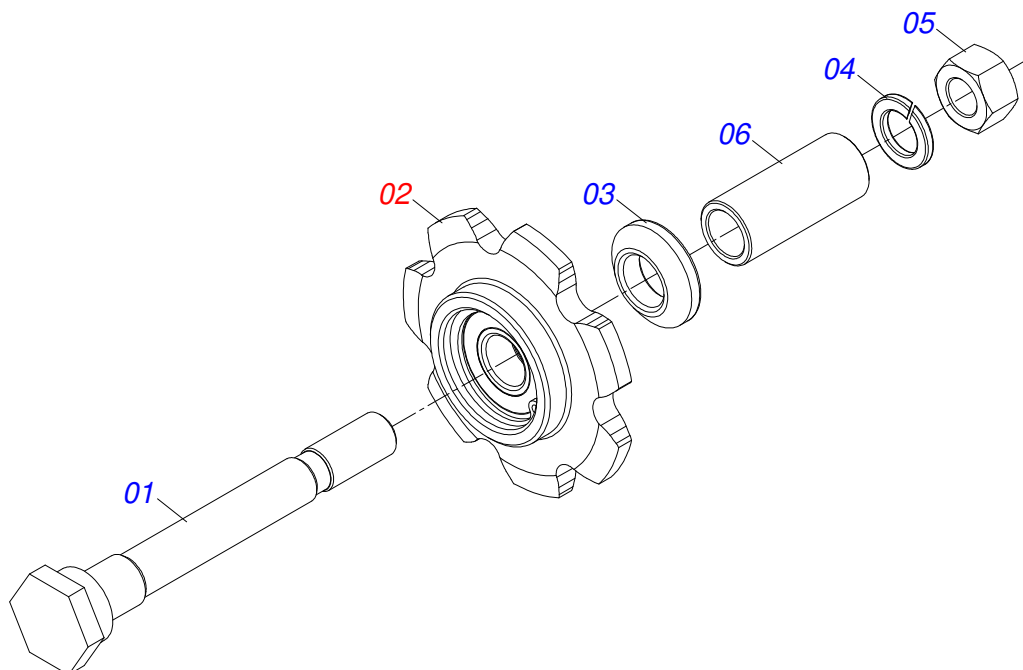


Item	Code	Description	See page	QT
01	0551018245	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	11	01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01
06	0551018239	SLEEVE 19 X 13,50 X 45		01

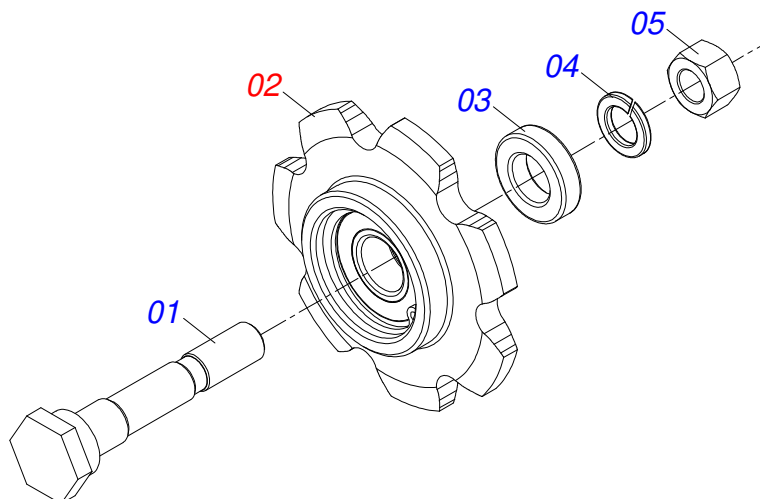

Item	Code	Description	See page	QT
01	0551018252	LOWER SHAFT		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	11	01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

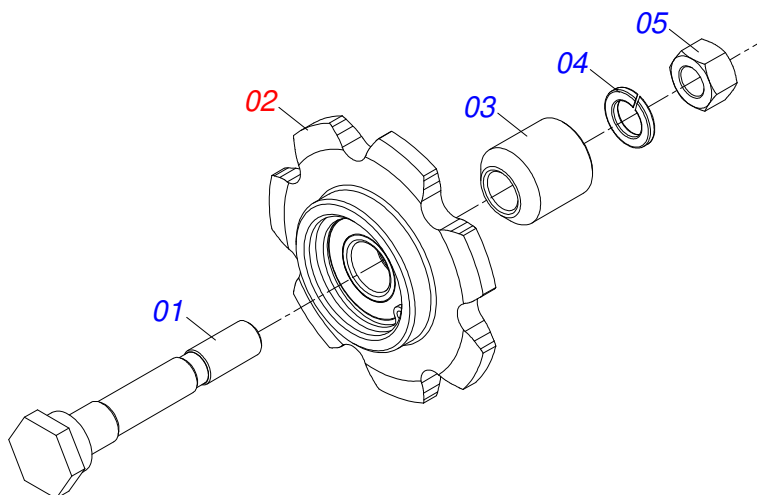


Item	Code	Description	See page	QT
01	0551018244	CHAIN TENSIONER AXLE		01
02	0501058239	WHEEL CHAIN TENSIONER BEARING	11	01
03	0591017923	15,30 X 30 X 32 SLEEVE		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

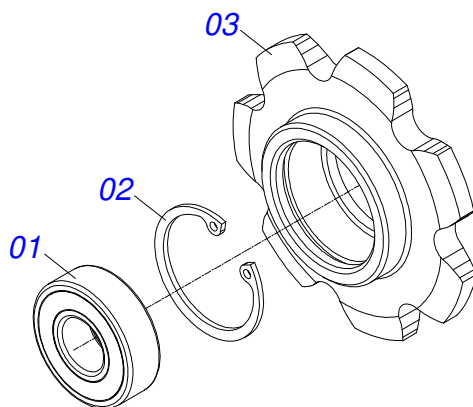


Item	Code	Description	See page	QT
01	0503012882	BEARING		01
02	0503011945	503050 CLAMPING RING (FOR AXLE)		01
03	0502012853	GEAR		01

SUPPORT WHEEL COMPLETE


0541052311

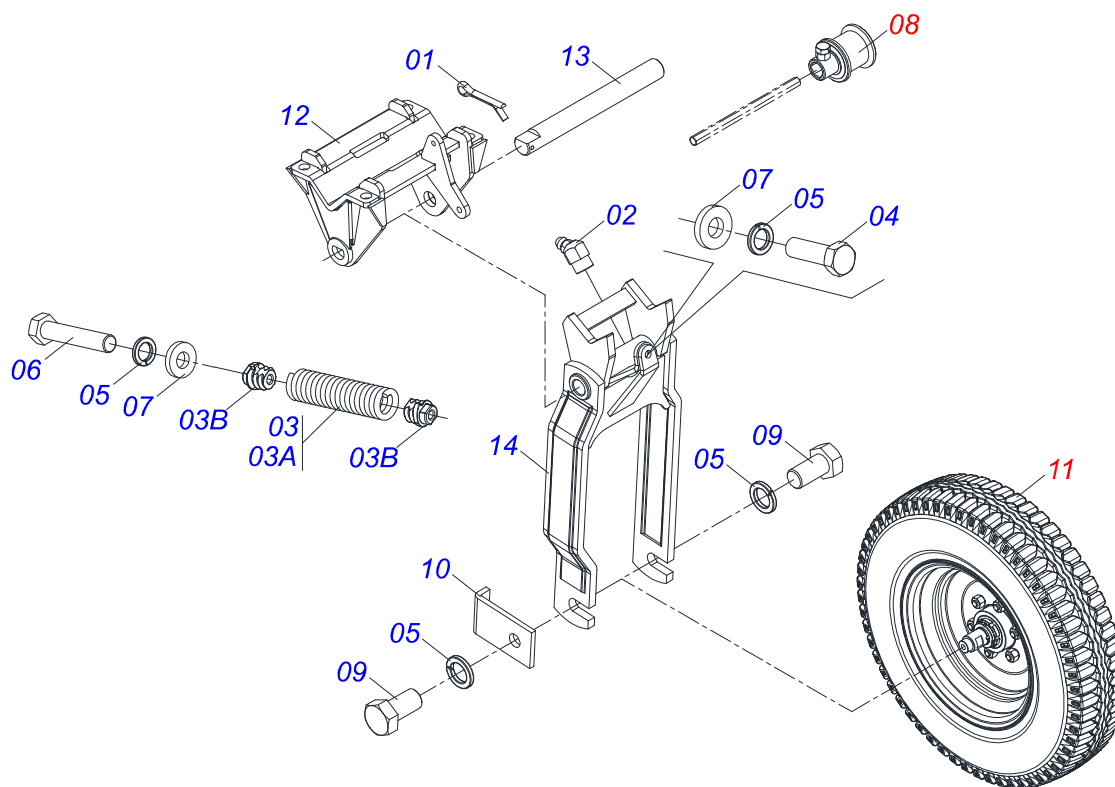


Item	Code	Description	See page	QT
01	0503010523	1/4" X 2" SPLIT PIN		01
02	0503010003	1845 GREASE FITTING		01
03	0511050681	TRACTION SPRING		01
03A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
03B	0561016062	SPRING HITCH		02
04	0501010100	BOLT 5/8" UNC X 2 CS G.5 ZN		01
05	0503010027	5/8 SPRING WASHER		04
06	0503013030	5/8" X 3.1/4" BOLT		01
07	0551017715	FLAT WASHER		02
08	0501058241	WHEEL SUPPORT CHAIN TENSIONER	13	01
09	0503011167	M16 X 2 X 30 BOLT		02
10	0591010589	BODY LOCK WHEEL		02
11	0541052314	EI WHEEL WITH 7.50 X R16/16L TIRE ASSY	14	01
12	0521068853	CARRYING-WHEEL SUPPORT		01
13	0581017543	CARRYING-WHEEL ARM AXLE		01
14	0531067271	WHEEL ARM TIRE		01

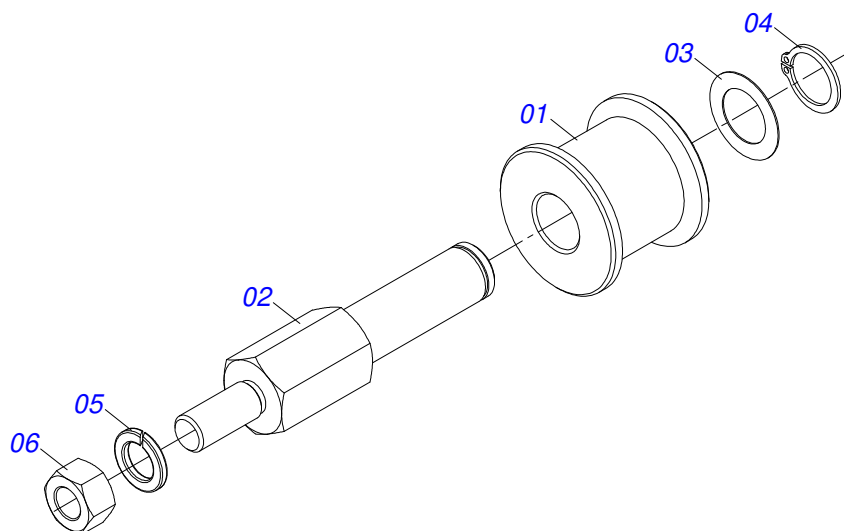


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

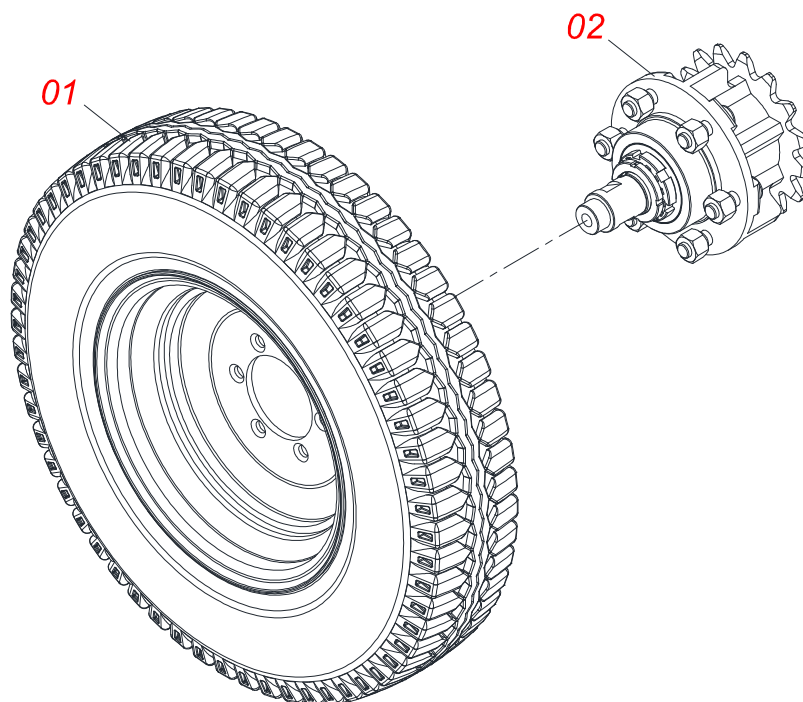

Item	Code	Description	See page	QT
01	0541052317	WHEEL EI WITH TIRE 7,50 X R16/16L PR TORNEL TXL PLUS	15	01
02	0521053187	WHEEL AND TIRE ASSY	16	01

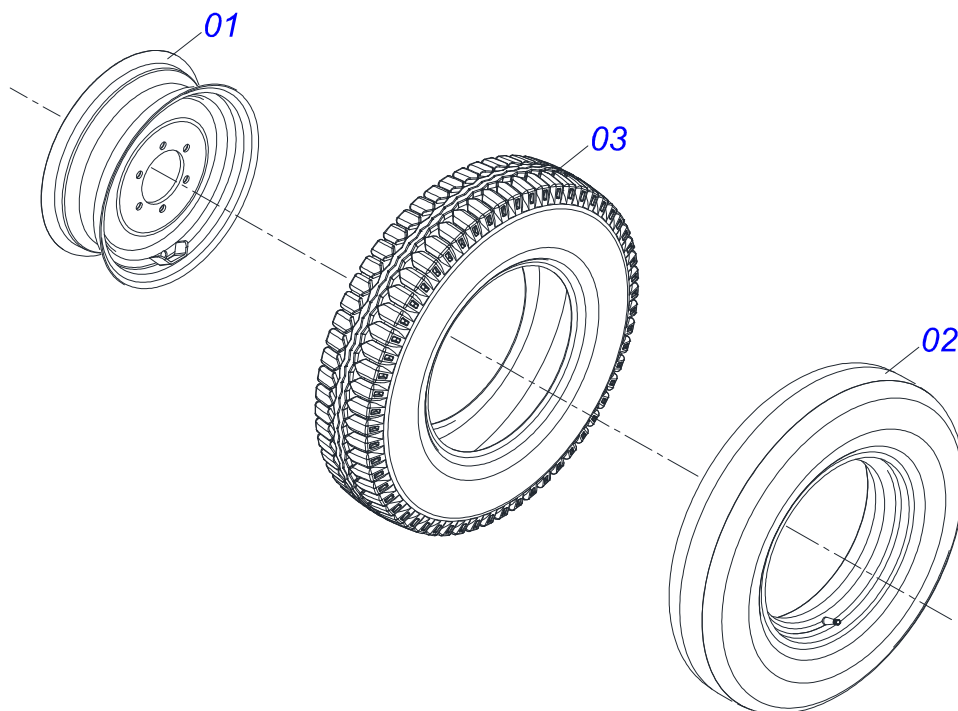


Item	Code	Description	See page	QT
01	0503016517	WHEEL EI		01
02	0503010033	7.50 X 16 INNER TIRE		01
03	0503019623			01

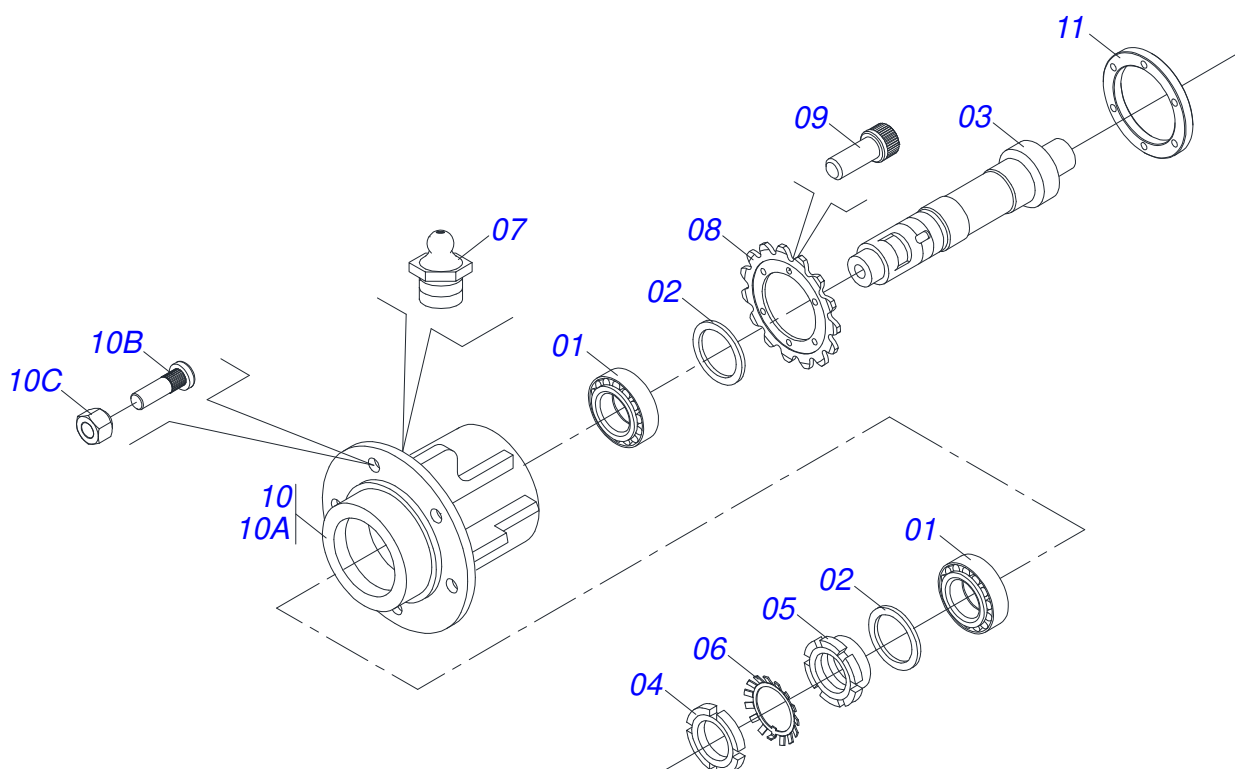

Item	Code	Description	See page	QT
001	0503010328	25590/25523 ROLLER BEARING		02
002	0503010804	00547-B SEAL		02
003	0581017546	TRANSMISSION CARRYING-WHEEL AXLE		01
004	0503010330	KM 9 LOCKNUT		01
005	0511015949	LOCK NUT		01
006	0503010329	LOCK WASHER		01
007	0503010002	1800 GREASE FITTING		01
008	0502011339	15Z GEAR P 1.25"		01
009	0503011363	5/16" X 1-1/4" BOLT		06
010	0501110721	WHEEL HUB WITH SCREW / NUTS		01
010A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
010B	0501010186	WHEEL BOLT 5/8"UNF X 2.1/8CR		06
010C	0503016516	5/8 UNF CONIC NUT		06
011	0581017547	SUPPORT WASHER		01

TRANSMISSION ASSY

0541052612

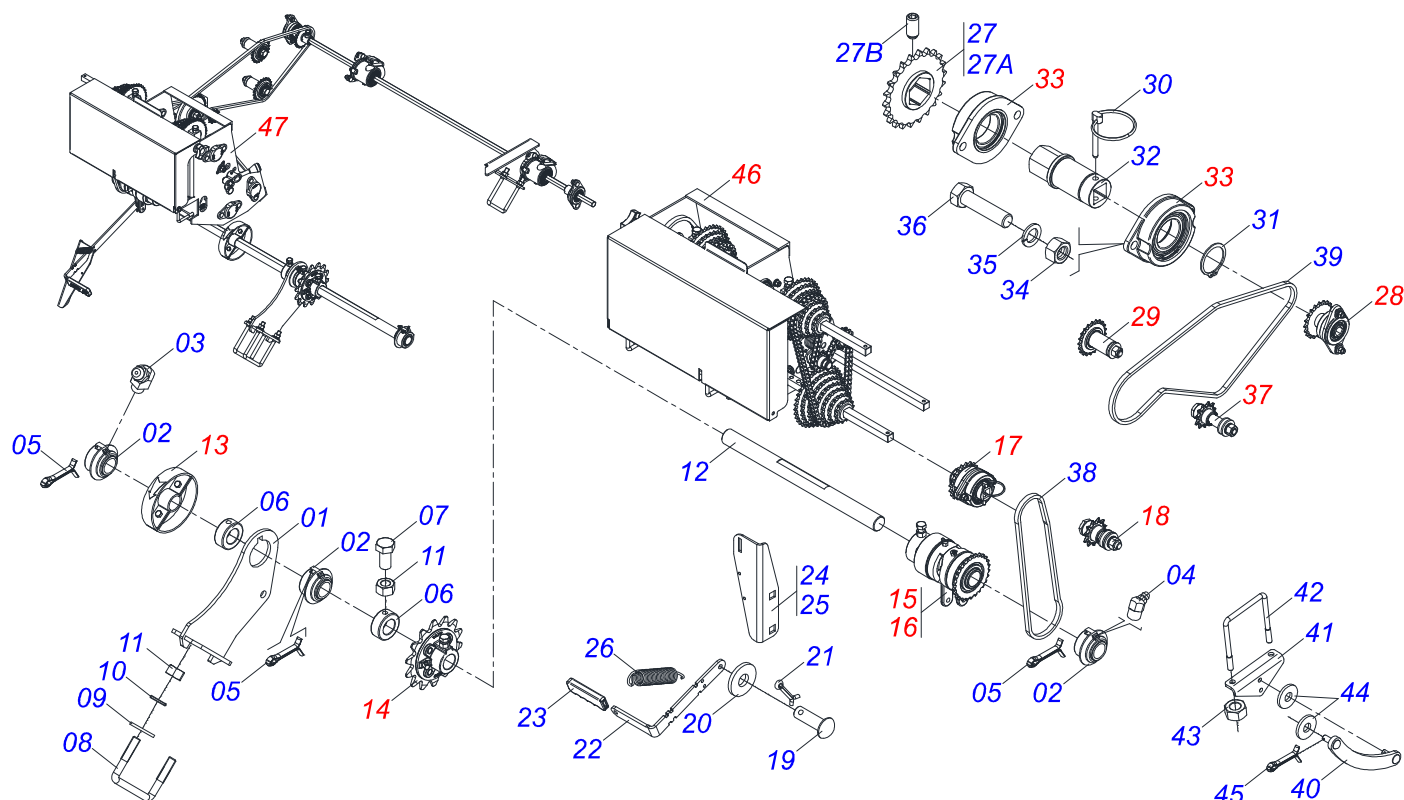


Item	Code	Description	See page	QT
01	0521065954	SUPPORT BEARING AXLE MOTOR		04
02	0501110639	BEARING		08
03	0503011099	GREASE FITTING		04
04	0503010003	1845 GREASE FITTING		04
05	0503010300	5/32" X 1" SPLIT PIN		08
06	0511015961	LOCK BUSHING		08
07	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		08
08	0521014021	1/2" X 4.5" X 5.4" FASTENER		08
09	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		16
10	0503010019	1/2" SPRING WASHER		16
11	0503010060	1/2 UNC G.5 ZN HEX NUT		16
12	0571018907	AXLE MOTOR 2125		02
13	0501052560	MOTOR AXLE SIGNAL	18	02
14	0511051434	TRANSMISSION ACTUATOR	19	04
15	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	20	01
16	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	21	01
17	0541050875	SIDE BEARING SET	22	02
18	0511057265	TRANSMISSION CHAIN TENSIONER	23	02
19	0521010773	0.37" X 1.18" COUPLING SHAFT		02
20	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
21	0503010140	1/8" X 3/4" SPLIT PIN		02
22	0571018846	DISASSEMBLE LEVER		02
23	0503033942	COMPACTOR WHEEL REGULATOR LID		02
24	0571018844	SUPPORT RIGHT DISASSEMBLE LEVER		01
25	0571018845	SUPPORT LEFT DISASSEMBLE LEVER		01
26	0503030093	TRACTION SPRING		02
27	0541052289	GEAR 26Z WITH FASTENER		02
27A	0531067255	GEAR 26Z INTERNAL HEX		01
27B	0503013958	1/4" X 1" BOLT		02
28	0521056103	BEARING WITH GEAR 20Z HEX SHAFT 3/4	24	02
29	0521055217	LOWER CURRENT STRETCH	25	04
30	0503030119	LOCK PIN		02


TRANSMISSION ASSY

0541052612

Item	Code	Description	See page	QT
31	0503010845	501035 CLAMPING RING (FOR AXLE)		02
32	0502013067	SIDE BEARING AXLE FERTILIZER HOPPER SUPPORT		02
33	0531057910	SIDE BEARING WITH BEARING 6007	26	04
34	0503010337	NUT 5/16 UNC G.5 ZN		04
35	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
36	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
37	0501052810	TRANSMISSION CHAIN TENSIONER ASSEMBLY	27	02
38	0503014911	40-1 X 63 CHAIN LINK + MENDING		02
39	0503013256	40-1 X CHAINX 165 LINK + MENDING + REDECTION		02
40	0531062318	LEFT/RIGHT LOWER LEVER		02
41	0551019159	LEVER FIXER BODY		02
42	0561016468	FASTENER		02
43	0503011336	1/2" HEX SELF ADJUSTING NUT		04
44	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
45	0503010140	1/8" X 3/4" SPLIT PIN		04
46	0541051920	LEFT GEAR SET TMC	28	01
47	0541051923	RIGHT REPLACEMENT ASSY	29	01

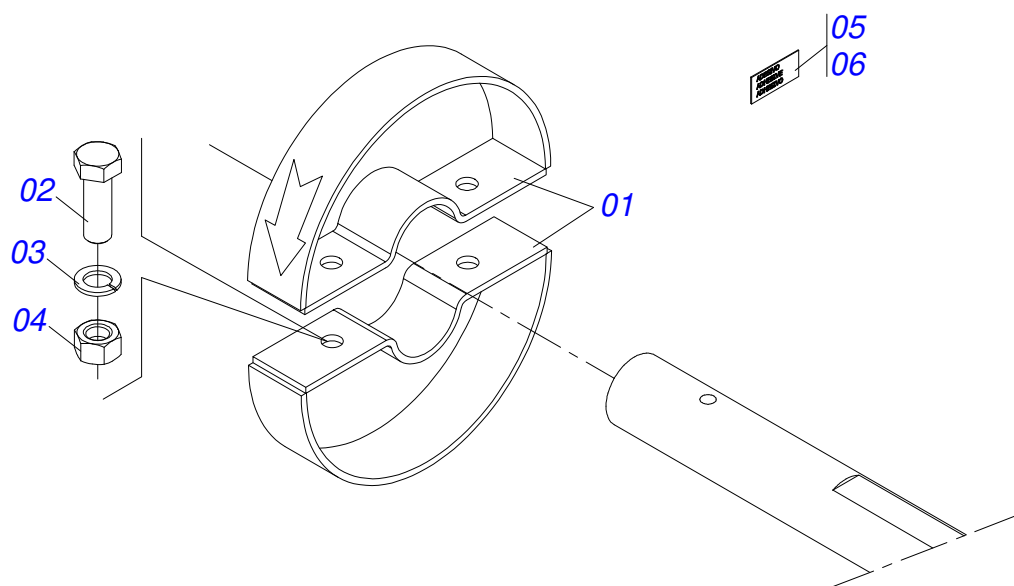


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010337	NUT 5/16 UNC G.5 ZN		02
05	0503031584	ORANGE SIGNAL ARROW DECAL		01
06	0503031585	SILVER SIGNAL ARROW DECAL		01

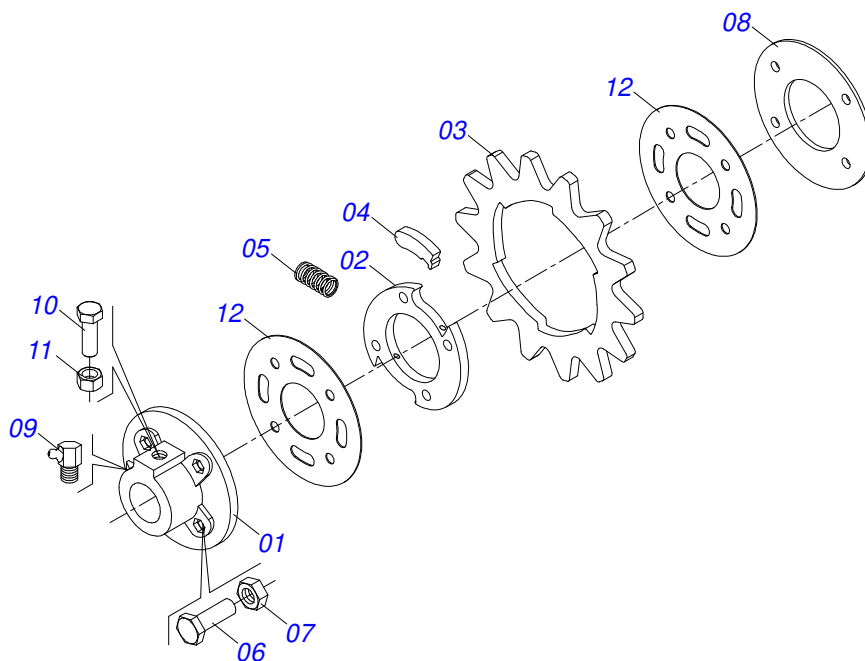

Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2 UNC G.5 ZN HEX NUT		01
12	0571010763	FLANGE WASHER		02

RIGHT SIDE TRANSMISSION ACTUATOR


0511047069

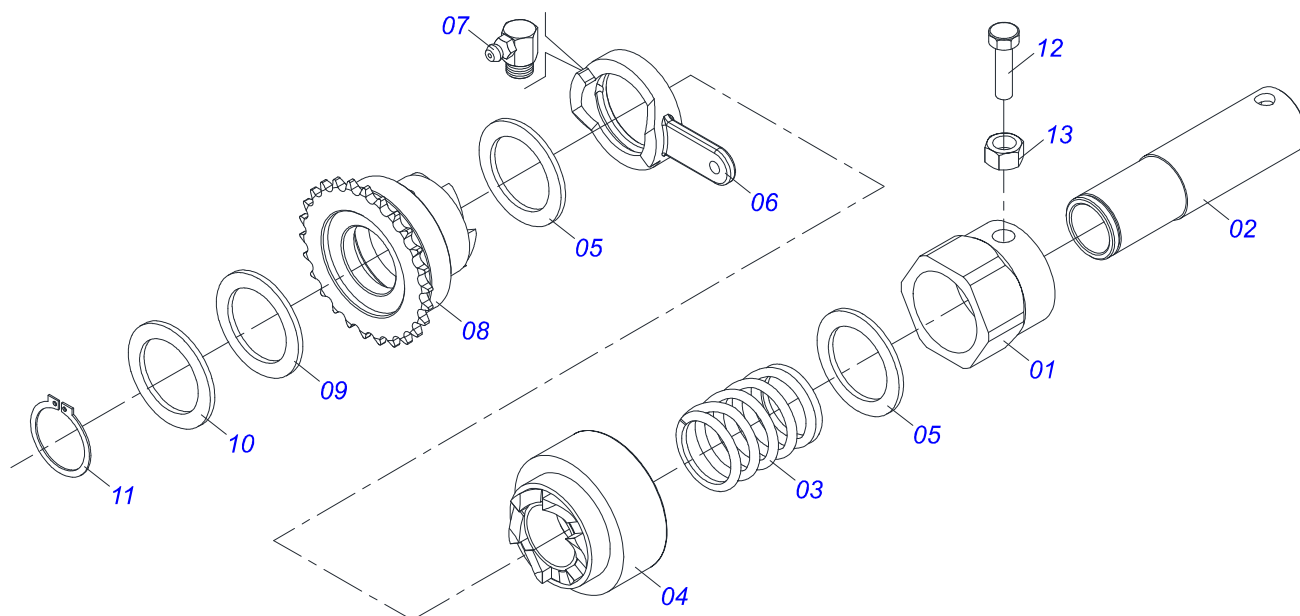

Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0521017590	GUIDE AXLE		01
03	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
04	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
05	0501019734	FLAT WASHER		02
06	0502010710	RIGHT CAM, SMALLER		02
07	0503010003	1845 GREASE FITTING		02
08	0502012539	26Z P12,7 GEAR		01
09	0501019735	FLAT WASHER		01
10	0521017593	FLAT WASHER		01
11	0503010542	501045 CLAMPING RING (FOR AXLE)		01
12	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
13	0503010060	1/2 UNC G.5 ZN HEX NUT		01

LEFT SIDE TRANSMISSION ACTUATOR


0511047070

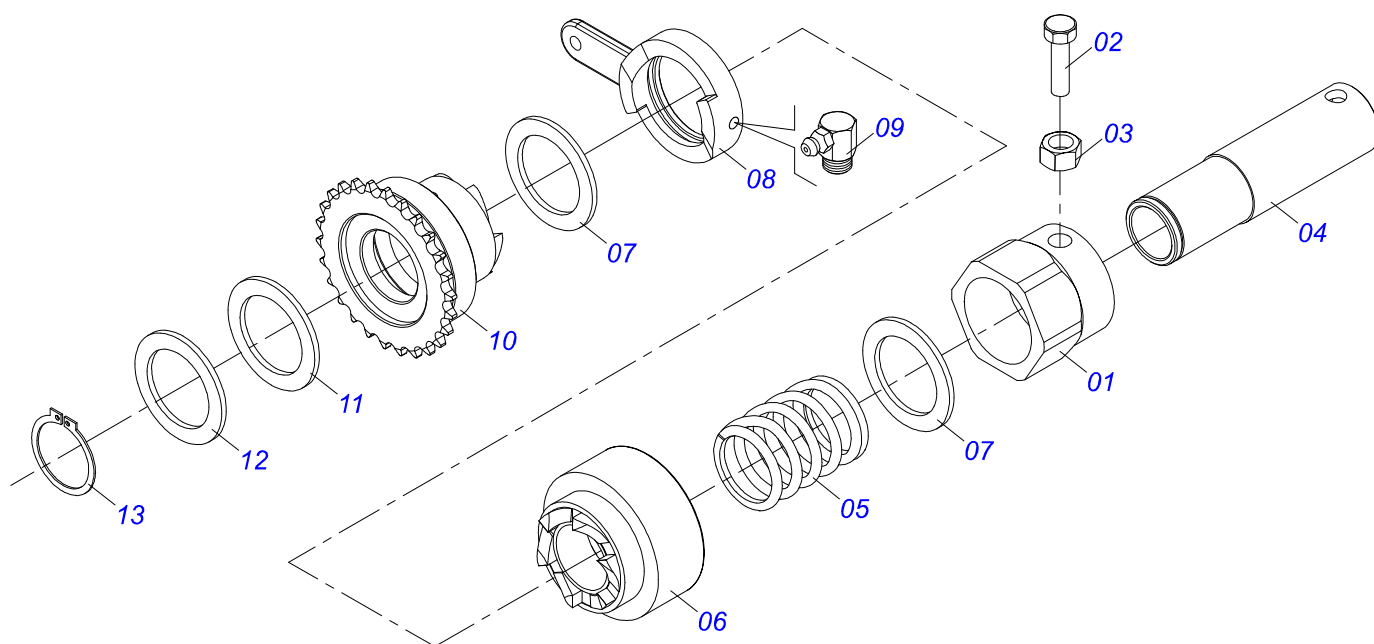


Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2 UNC G.5 ZN HEX NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

SIDE BEARING SET


0541050875

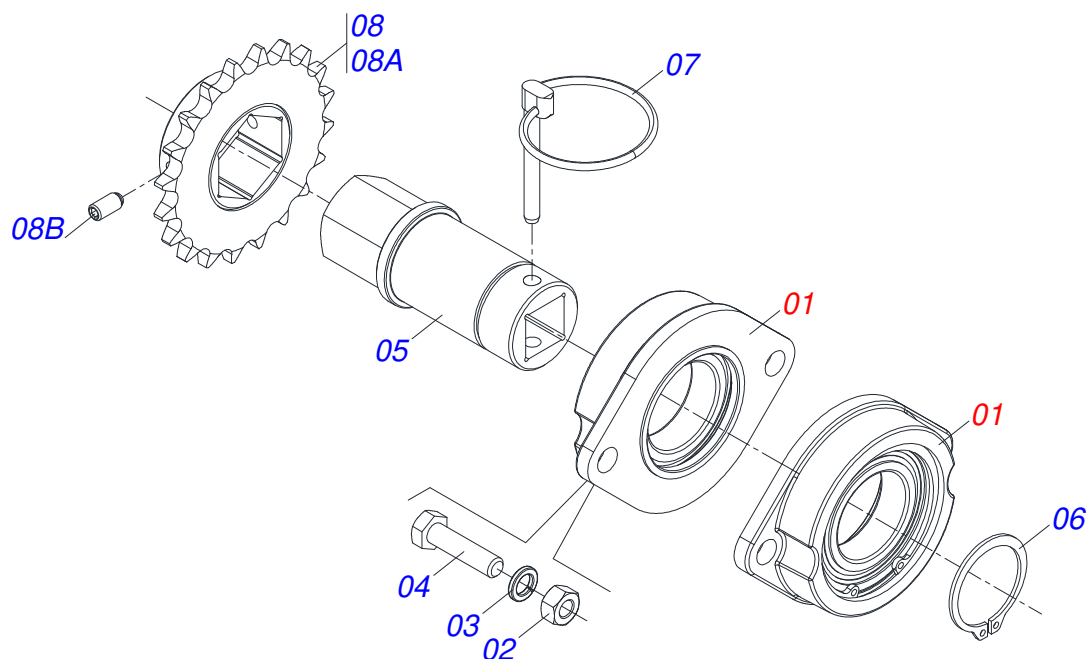


Item	Code	Description	See page	QT
01	0531057910	SIDE BEARING WITH BEARING 6007	26	02
02	0503010337	NUT 5/16 UNC G.5 ZN		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0502013067	SIDE BEARING AXLE FERTILIZER HOPPER SUPPORT		01
06	0503010845	501035 CLAMPING RING (FOR AXLE)		01
07	0503030119	LOCK PIN		01
08	0541050876	20Z GEAR ASSY		01
08A	0531066542	20Z GEAR		01
08B	0503013958	1/4\" X 1\" BOLT		02

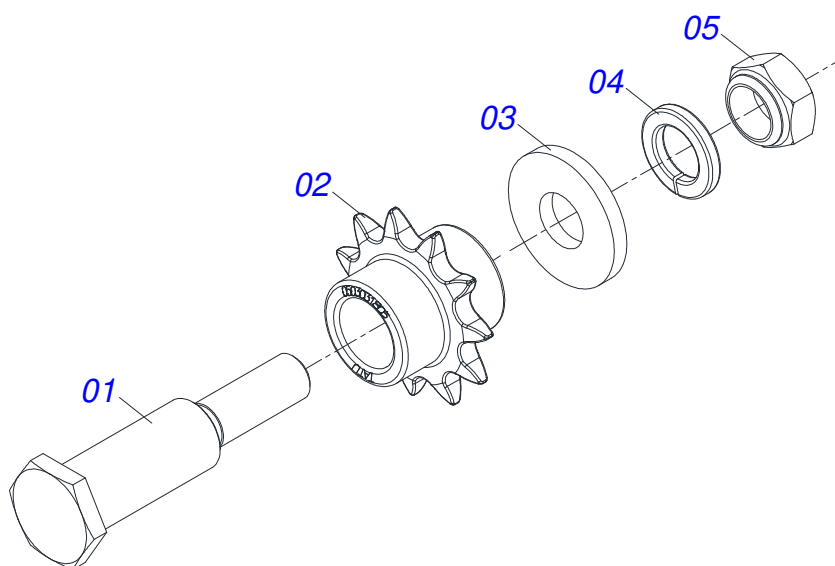


Item	Code	Description	See page	QT
01	0531019479	AXLE CHAIN GEAR		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		03
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

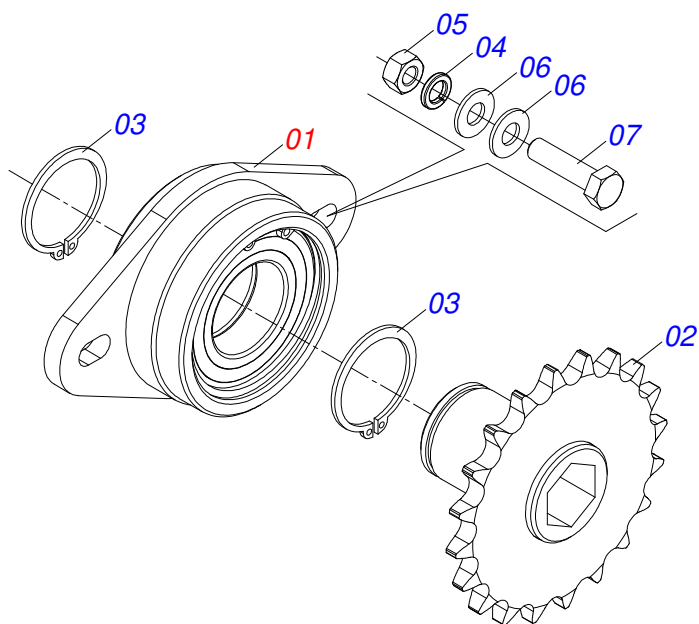


Item	Code	Description	See page	QT
01	0521055498	SEED TRANSMISSION DOUBLE BEARING	30	01
02	0531060014	GEAR 20Z X 48.50 HEX HOLE 20		01
03	0503010707	501030 CLAMPING RING (FOR AXLE)		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	NUT 5/16 UNC G.5 ZN		02
06	0501010694	FLAT WASHER 32,50 X 75 X 4,75		04
07	0503018441	5/16" X 1-1/4" BOLT		02

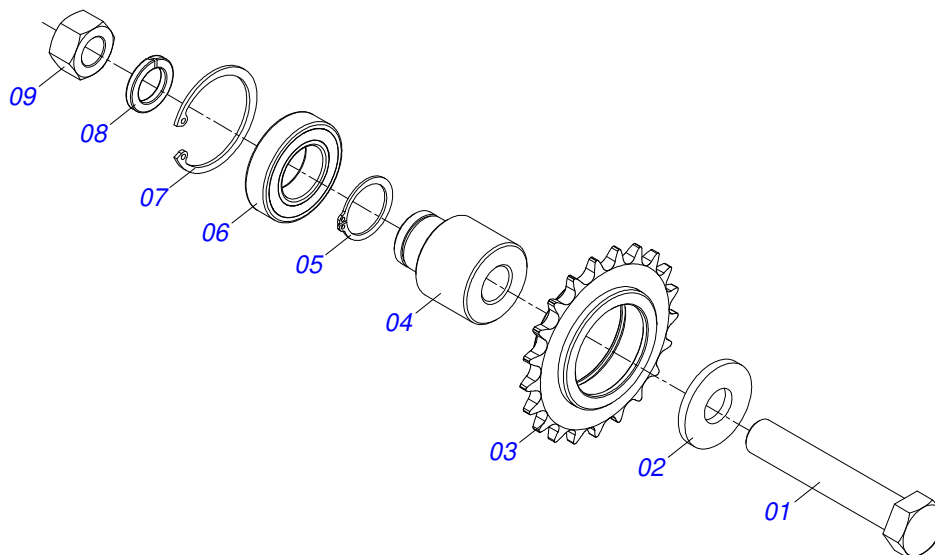


Item	Code	Description	See page	QT
01	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
02	0501012140	FLAT WASHER 16,50 X 40 X 4,00 ZN		01
03	0521069698	GEAR 21Z P 1/2		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503019356	BEARING 6005 2RS1		01
07	0503011105	SEAL RING		01
08	0503010027	5/8 SPRING WASHER		01
09	0503010013	5/8 UNC G.5 ZN HEX NUT		01

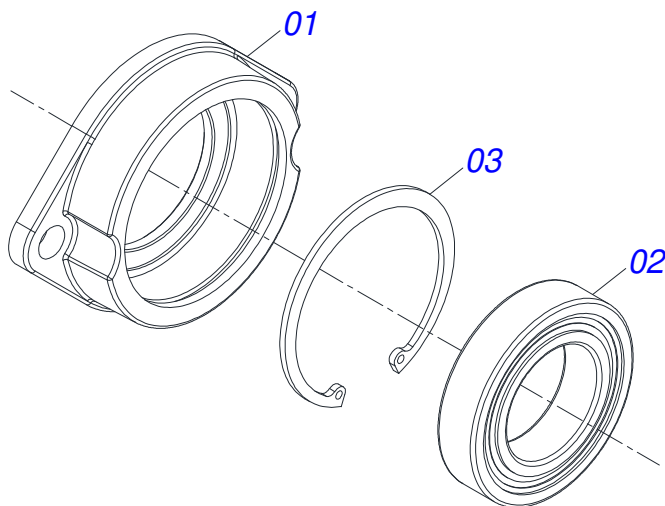


Item	Code	Description	See page	QT
01	0502013070	SIDE FERTILIZER HOPPER SUPPORT BEARING		01
02	0503016065	ROLLER BEARING		01
03	0503011800	SEAL RING		01

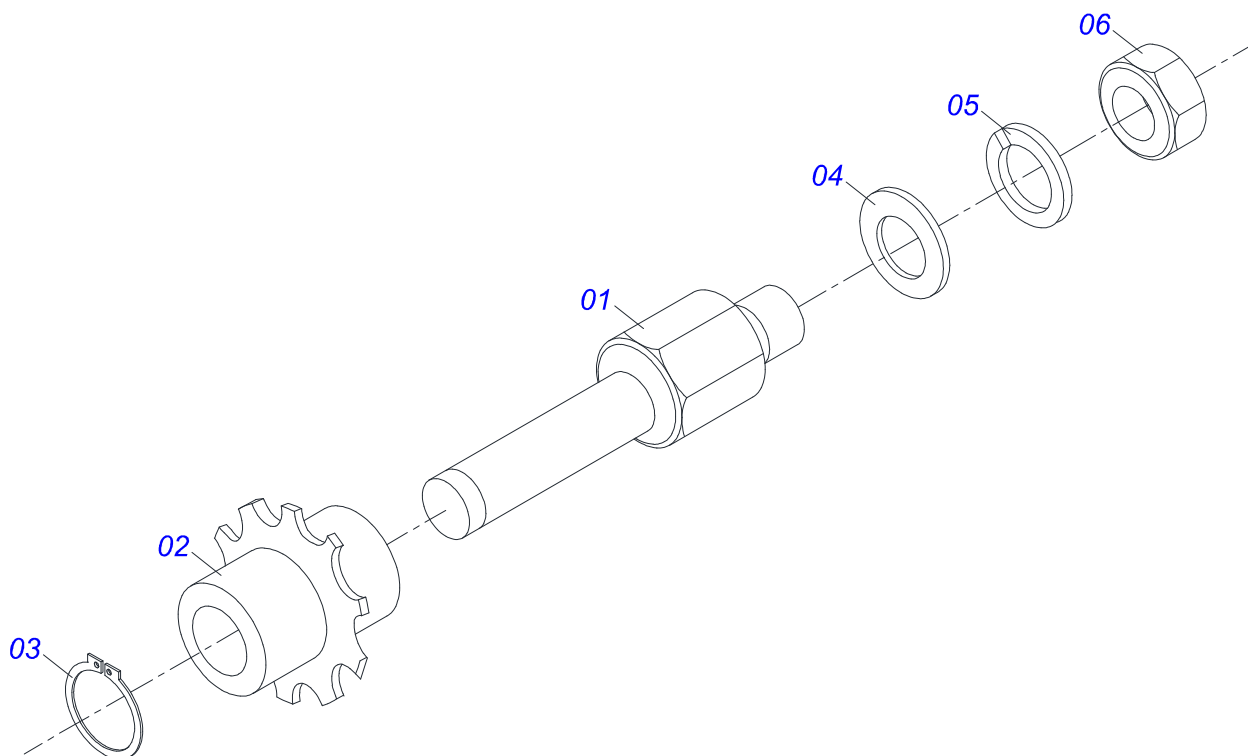


Item	Code	Description	See page	QT
01	0541011713	TENSIONER CHAIN LOWER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2 UNC G.5 ZN HEX NUT		01

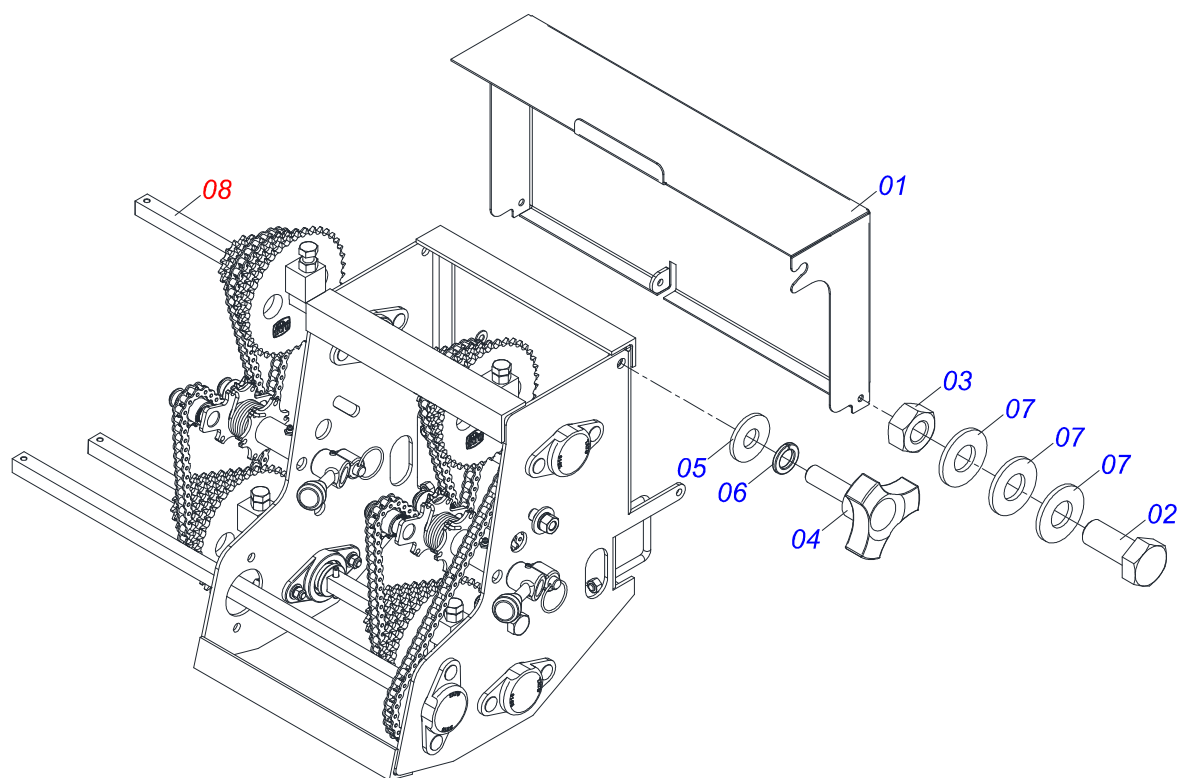

Item	Code	Description	See page	QT
01	0521065956	LEFT GEARBOX LID		01
02	0503010240	BOLT		02
03	0503013816	5/16" LOCKNUT		02
04	0503033682	KNOB 3P K3 60A M12 X 40		01
05	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
06	0503010019	1/2" SPRING WASHER		01
07	0501010694	FLAT WASHER 32,50 X 75 X 4,75		06
08	0541051921	LEFT REPLACEMENT	31	01

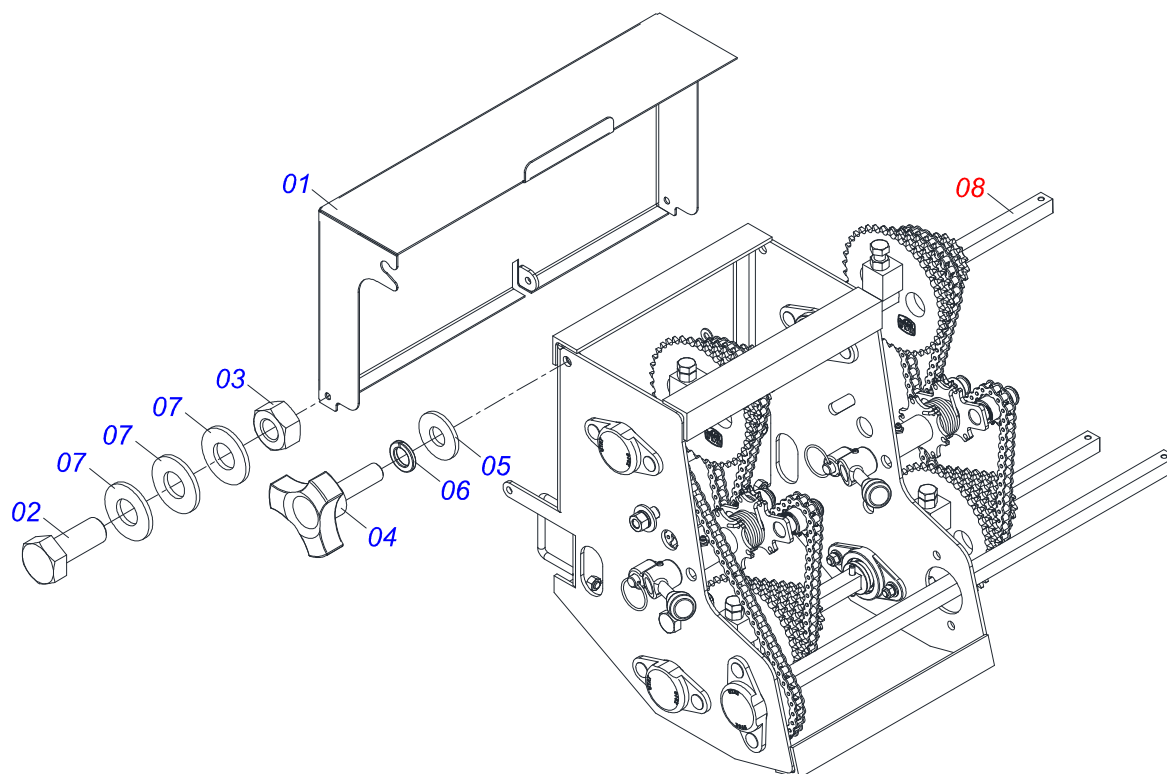


Item	Code	Description	See page	QT
01	0521065955	RIGHT GEARBOX LID		01
02	0503010240	BOLT		02
03	0503013816	5/16" LOCKNUT		02
04	0503033682	KNOB 3P K3 60A M12 X 40		01
05	0501010694	FLAT WASHER 32,50 X 75 X 4,75		06
06	0503010019	1/2" SPRING WASHER		01
07	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01
08	0541051924	ENGRANAJE DERECHO	32	01

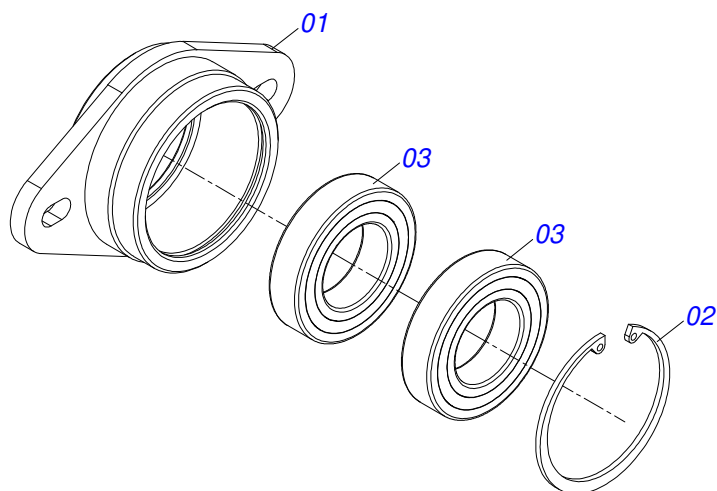

Item	Code	Description	See page	QT
01	0502012031	HOUSING BEARING		01
02	0503012858	502075 CLAMPING RING (FOR HOLE)		01
03	0503019373	6006 2RS1 NATIONAL BEARING		02

LEFT REPLACEMENT

0541051921

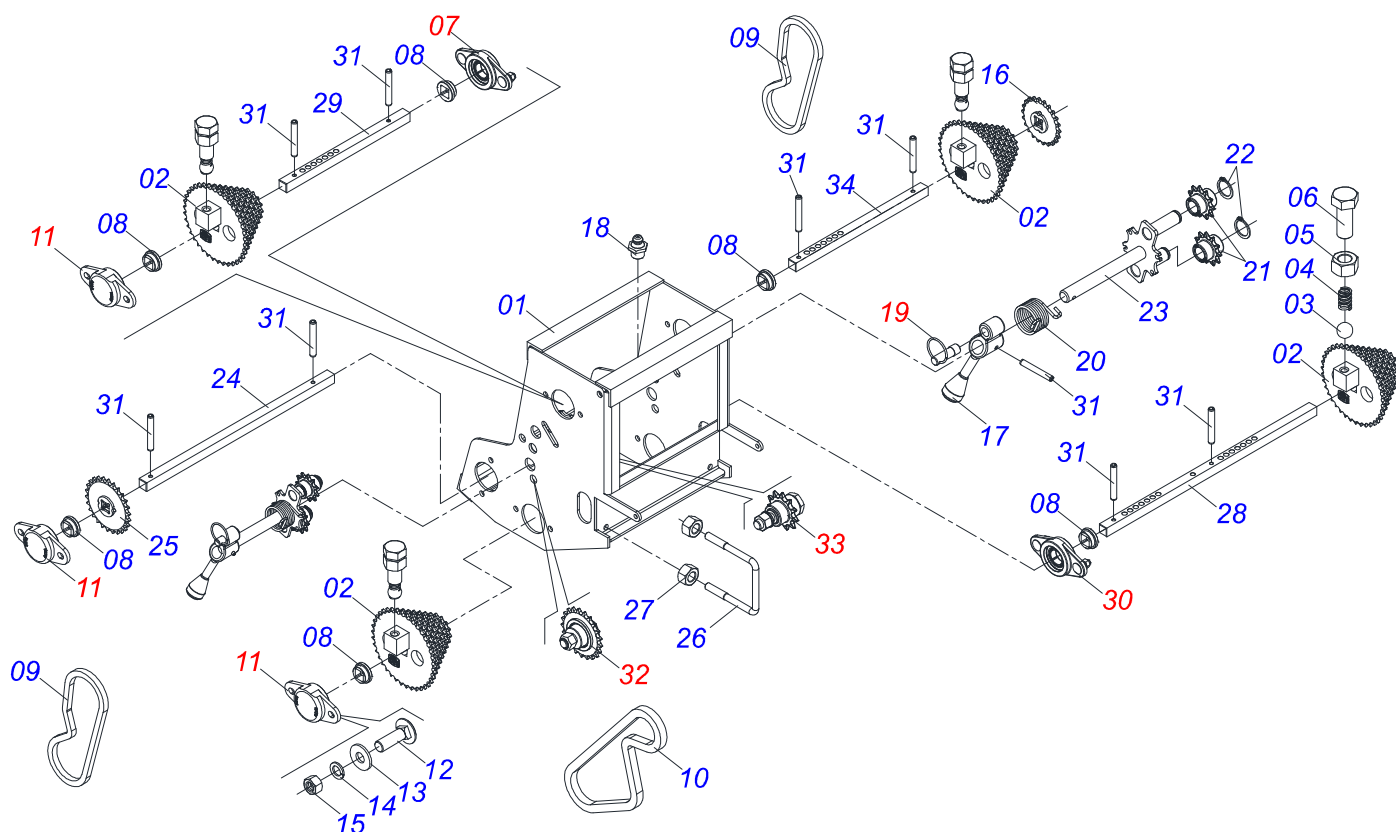


Item	Code	Description	See page	QT
01	0521065940	LEFT GEAR BOX		01
02	0511060396	DRIVE/DRIVEN SHAFT		04
03	0503012389	1/2 BALL		04
04	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
05	0503010060	1/2 UNC G.5 ZN HEX NUT		04
06	0503010395	1/2" X 1-1/4" BOLT		04
07	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	33	01
08	0503030303	SUPPORT WASHER		06
09	0503012204	40-1 CHAIN X 82 LINK + RED		02
10	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
11	0501056271	GEARBOX CLOSED BEARING	34	03
12	0503011953	5/16" X 1" BOLT		06
13	0501010694	FLAT WASHER 32,50 X 75 X 4,75		06
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
15	0503010337	NUT 5/16 UNC G.5 ZN		06
16	0511061759	22Z P12,70 FQ 3/4" GEAR		01
17	0502011758	REAR TIGHTENER LEVER		02
18	0503010002	1800 GREASE FITTING		02
19	0501048790	AXLE WITH RING	35	02
20	0503031367	SPRING		02
21	0503031805	11Z 1/2" GEAR		04
22	0503010302	501019 SEAL RING		04
23	0511061794	CHAIN TENSIONER		02
24	0501313214	INTERMEDIATE AXLE		01
25	0511067501	26Z GEAR		01
26	0521010683	3/8 UNC FASTENER		02
27	0503010026	3/8" NUT		04
28	0501313213	DRIVE SHAFT		01
29	0571018900	SEED DRIVEN AXLE		01
30	0501056443	GEAR HOUSING BEARING	36	01
31	0503010292	701164 6 X 40 SPRING PIN		08
32	0511057258	TENSIONER WITH GEAR	37	01

LEFT REPLACEMENT


0541051921

Item	Code	Description	See page	QT
33	0511054363	CHAIN TENSIONER	38	01
34	0501313212	DRIVEN AXIS		01

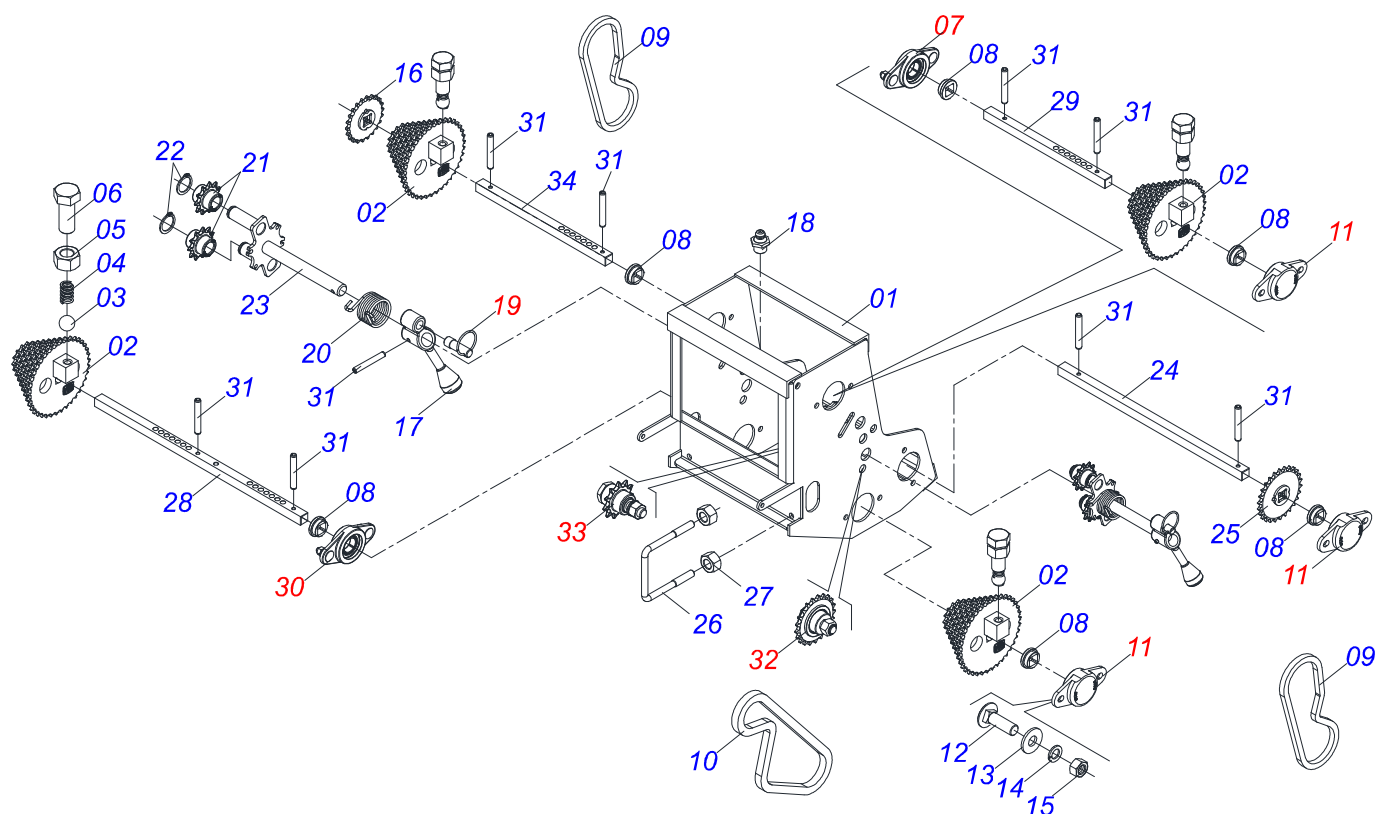


Item	Code	Description	See page	QT
01	0521065939	RIGHT GEAR BOX		01
02	0511060396	DRIVE/DRIVEN SHAFT		04
03	0503012389	1/2 BALL		04
04	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
05	0503010060	1/2 UNC G.5 ZN HEX NUT		04
06	0503010395	1/2" X 1-1/4" BOLT		04
07	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	33	01
08	0503030303	SUPPORT WASHER		06
09	0503012204	40-1 CHAIN X 82 LINK + RED		02
10	0503012143	78 CHAIN X 40-1 LINK + REDUCTION		01
11	0501056271	GEARBOX CLOSED BEARING	34	03
12	0503011953	5/16" X 1" BOLT		06
13	0501010694	FLAT WASHER 32,50 X 75 X 4,75		06
14	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
15	0503010337	NUT 5/16 UNC G.5 ZN		06
16	0511061759	22Z P12,70 FQ 3/4" GEAR		01
17	0502011758	REAR TIGHTENER LEVER		02
18	0503010004	1890 GREASE FITTING		02
19	0501048790	AXLE WITH RING	35	02
20	0503031366	RIGHT TWISTED SPRING		02
21	0503031805	11Z 1/2" GEAR		04
22	0503010302	501019 SEAL RING		04
23	0511061794	CHAIN TENSIONER		02
24	0501313214	INTERMEDIATE AXLE		01
25	0511067501	26Z GEAR		01
26	0521010683	3/8 UNC FASTENER		02
27	0503010026	3/8" NUT		04
28	0501313213	DRIVE SHAFT		01
29	0571018900	SEED DRIVEN AXLE		01
30	0501056443	GEAR HOUSING BEARING	36	01
31	0503010292	701164 6 X 40 SPRING PIN		08
32	0511057258	TENSIONER WITH GEAR	37	01


Item	Code	Description	See page	QT
33	0511054363	CHAIN TENSIONER	38	01
34	0501313212	DRIVEN AXIS		01

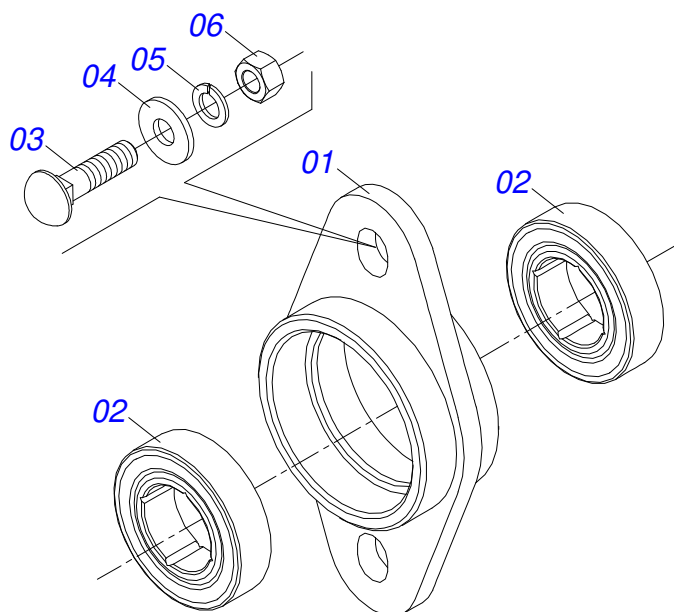


Item	Code	Description	See page	QT
01	0502011978	CENTRAL BEARING GEARBOX		01
02	0503013462	6005 2RS1 ROLLER BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER 32,50 X 75 X 4,75		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	NUT 5/16 UNC G.5 ZN		02

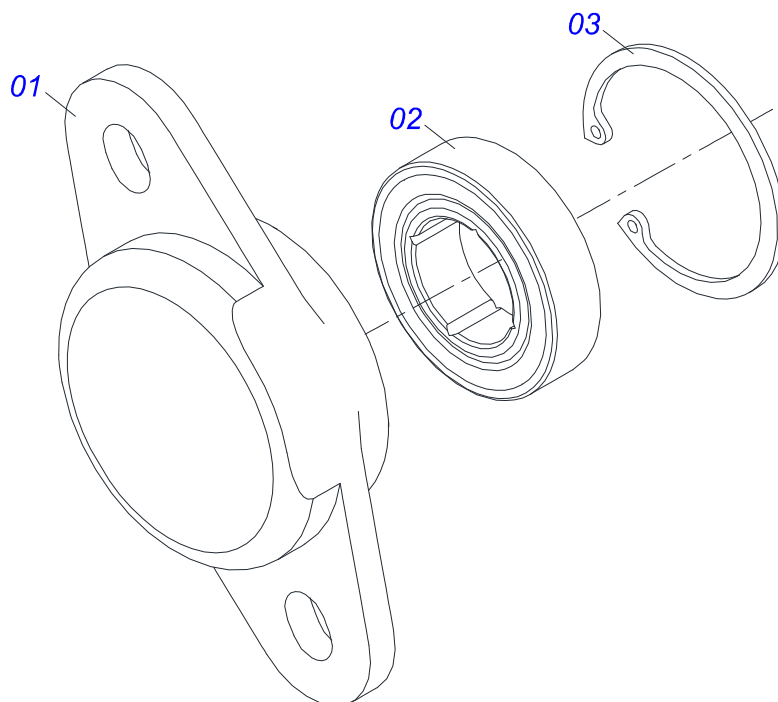


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	6005 2RS1 ROLLER BEARING		01
03	0503011105	SEAL RING		01

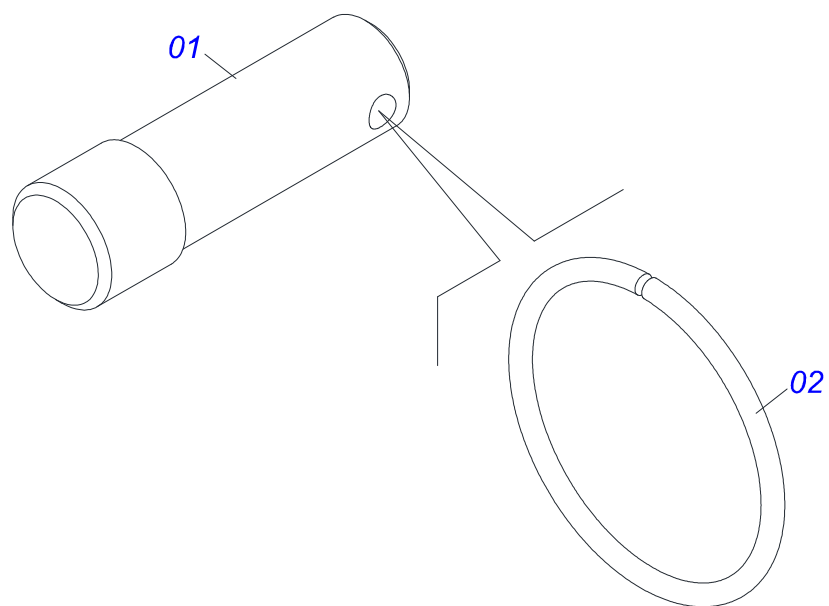


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

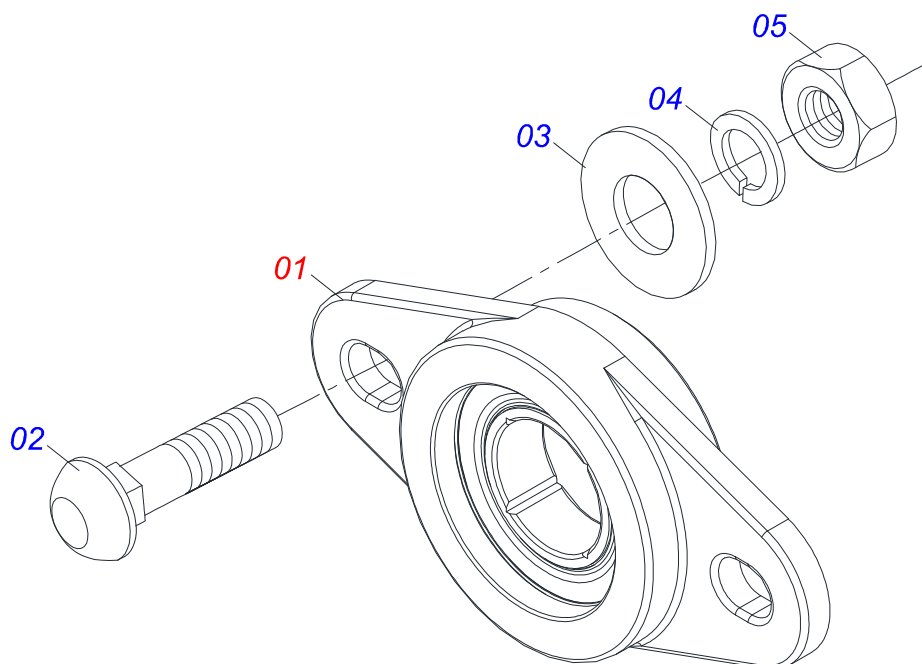


Item	Code	Description	See page	QT
01	0501056444	ROLLER BEARING	39	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER 32,50 X 75 X 4,75		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	NUT 5/16 UNC G.5 ZN		02

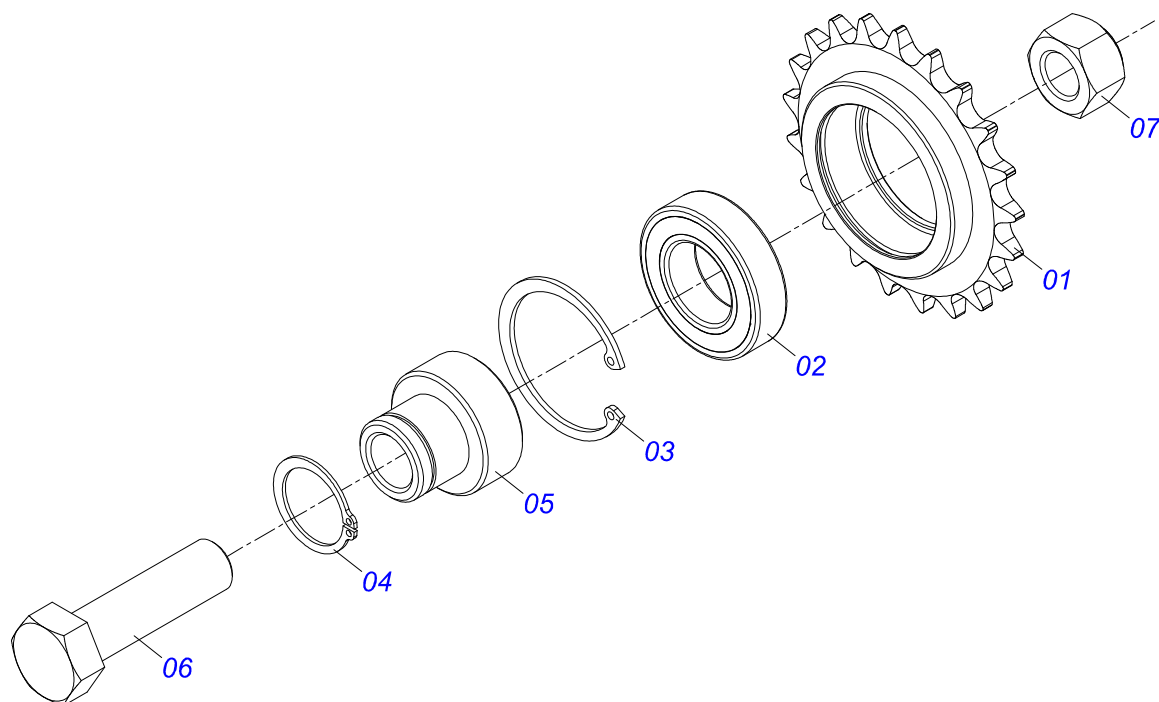


Item	Code	Description	See page	QT
01	0511062169	21Z P 1/2" GEAR		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0503010406	501025 CLAMPING RING (FOR AXLE)		01
05	0571019207	DEVIATION AXLE GEAR BOX		01
06	0503010899	5/8 UNC X 2.1/4 BOLT		01
07	0503012412	5/8" UNC SELF LOCKING NUT		01

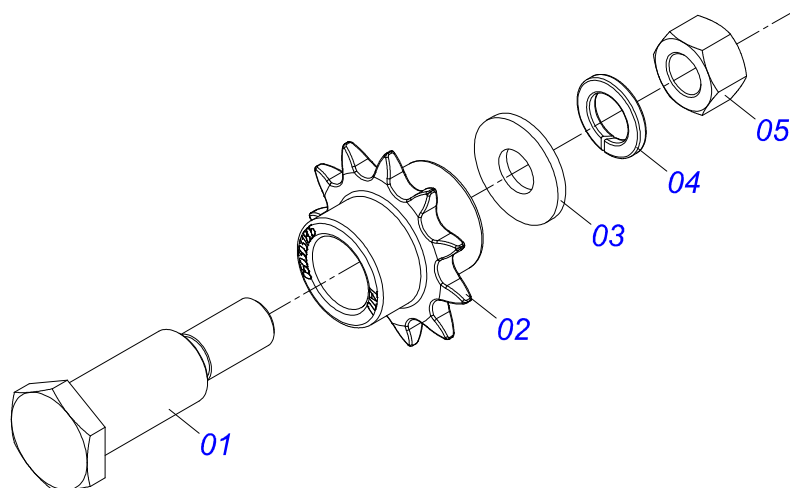


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2 UNC G.5 ZN HEX NUT		01

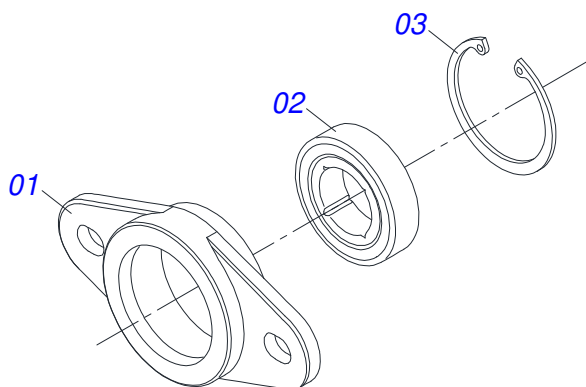


Item	Code	Description	See page	QT
01	0502011697	GEARBOX SUPPORT		01
02	0503013462	6005 2RS1 ROLLER BEARING		01
03	0503011105	SEAL RING		01

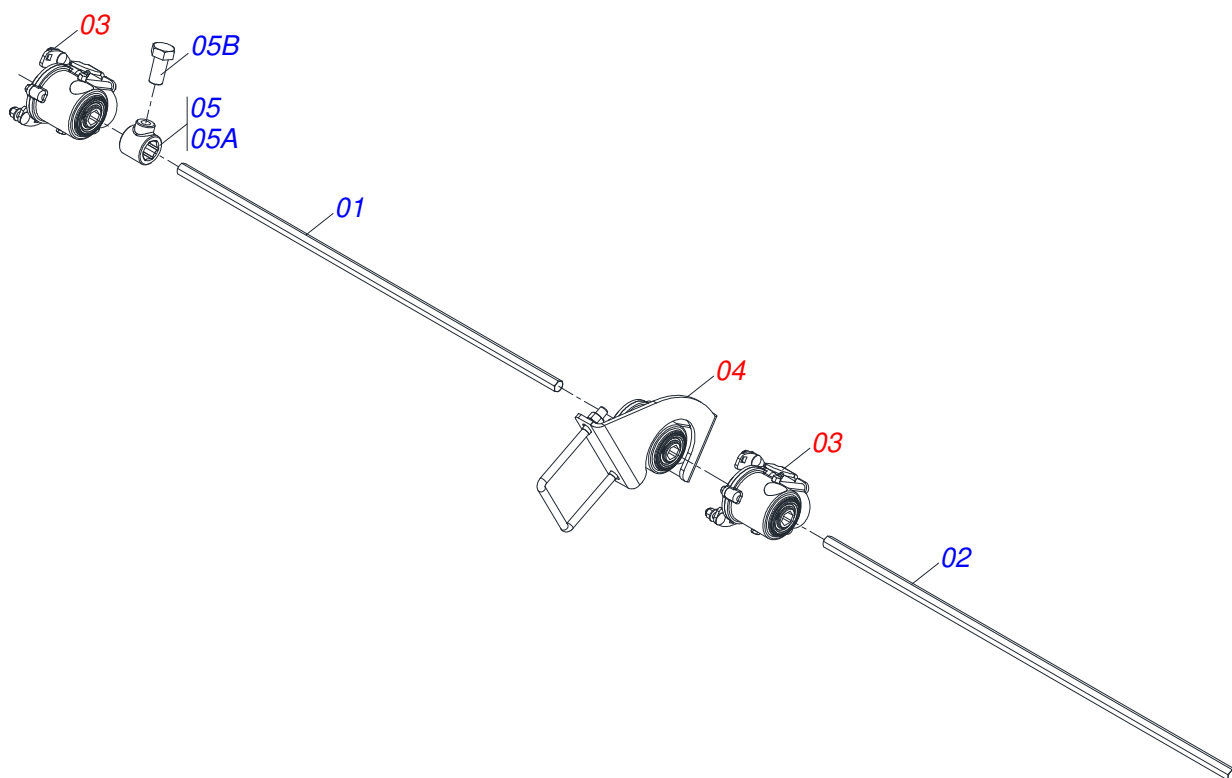

Item	Code	Description	See page	QT
01	0571018916	3/4 X 2080 AXLE HEX		01
02	0571018917	3/4 X 2265 AXLE HEX		01
03	0541050079	SEED ROW UPPER TRANSMISSION GEAR BOX	41	08
04	0541051928	SUPPORT WITH LEFT TRANSMISSION BOX	42	01
05	0511054314	TRANSMISSION AXLE LOCK SLEEVE		04
05A	0502012699	TRANSMISSION CASE LOCK SLEEVE		01
05B	0503010256	3/8" X 3/4" BOLT		01

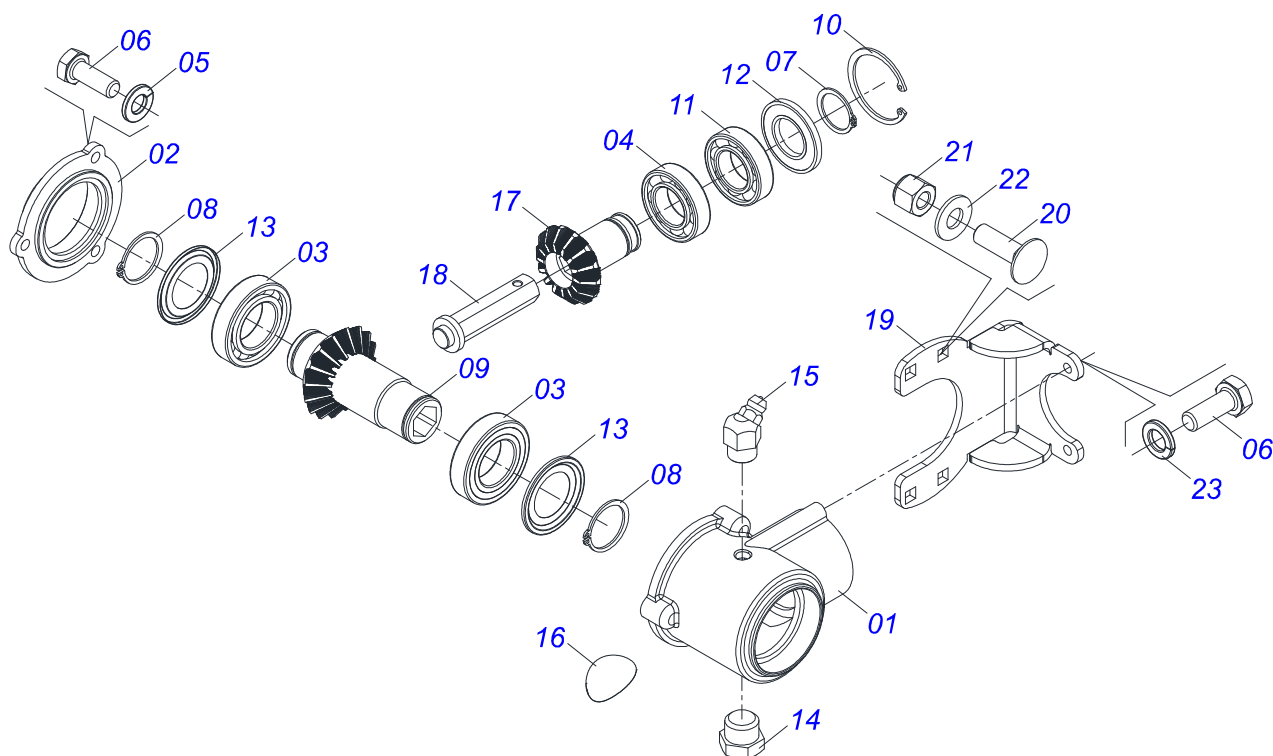


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB	01	
02	0502012464	HOPPER TRANSMISSION LID	01	
03	0503016995	6006 BALL BEARING	02	
04	0503015895	6005 Z BALL BEARING	01	
05	0503010143	1/4" SPRING WASHER	03	
06	0503011378	M6 X 1 X 16 C S 8.8 ZN BOLT	05	
07	0503010406	501025 CLAMPING RING (FOR AXLE)	01	
08	0503010707	501030 CLAMPING RING (FOR AXLE)	02	
09	0502040856	CONICAL GEAR	01	
10	0503011105	SEAL RING	01	
11	0503011409	6005 Z BALL BEARING	01	
12	0503017008	SEAL RING	01	
13	0503017007	SEAL RING	02	
14	0511017907	1/8" BSPT X 6 PLUG	01	
15	0503010003	1845 GREASE FITTING	01	
16	0503035316	LUBRICATED POINTS DECAL	01	
17	0501311461	CONIC GEAR 14 TEETH	01	
18	0531066150	WELDED DRIVE AXLE	01	
19	0501311524	FIXER BOX TRANSMISSION	01	
20	0503011953	5/16" X 1" BOLT	02	
21	0503013759	NUT	02	
22	0501010694	FLAT WASHER 32,50 X 75 X 4,75	02	
23	0503015110	M06 SPRING WASHER	02	

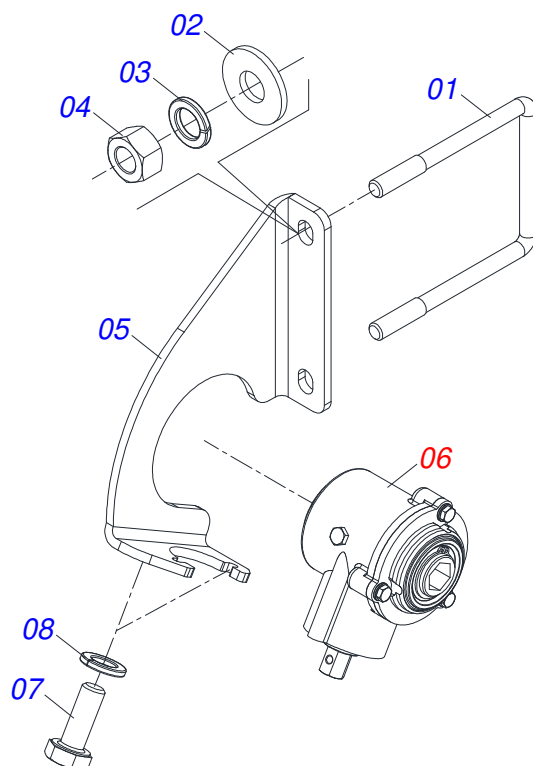


Item	Code	Description	See page	QT
01	0521014021	1/2" X 4.5" X 5.4" FASTENER		01
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0501315401	SUPPORT BOX LEFT TRANSMISSION		01
06	0541050061	UPPER GEARBOX	43	01
07	0503011378	M6 X 1 X 16 C S 8.8 ZN BOLT		02
08	0503015110	M06 SPRING WASHER		02

UPPER GEARBOX


0541050061

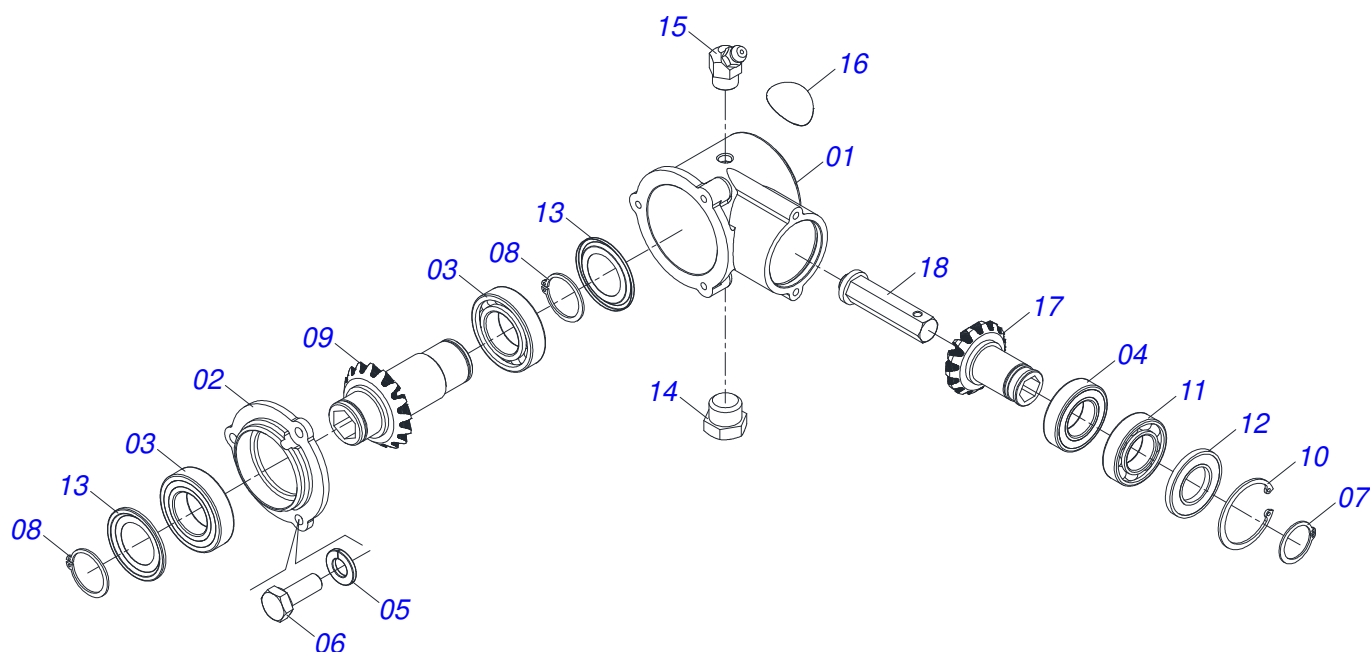

Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6 X 1 X 16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0503011105	SEAL RING		01
11	0503011409	6005 Z BALL BEARING		01
12	0503017008	SEAL RING		01
13	0503017007	SEAL RING		02
14	0511017907	1/8" BSPT X 6 PLUG		01
15	0503010003	1845 GREASE FITTING		01
16	0503035316	LUBRICATED POINTS DECAL		01
17	0501311461	CONIC GEAR 14 TEETH		01
18	0531066150	WELDED DRIVE AXLE		01

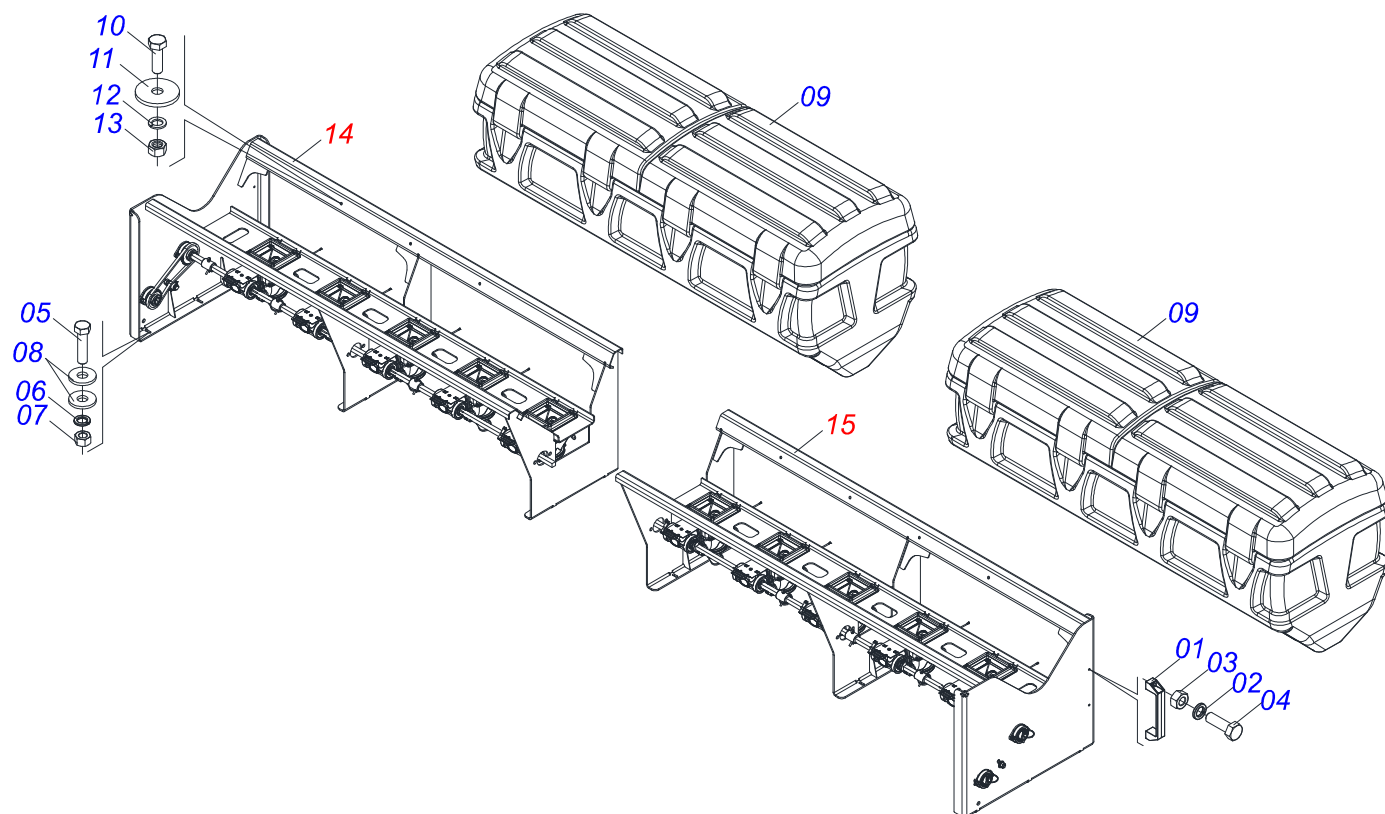


Item	Code	Description	See page	QT
01	0503011957	NYLON HANDLE		02
02	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
03	0503010337	NUT 5/16 UNC G.5 ZN		04
04	0503018441	5/16" X 1-1/4" BOLT		04
05	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		14
06	0503010025	3/8 SPRING WASHER		14
07	0503010026	3/8" NUT		14
08	0501010984	10,50 X 27 X 3,00 FLAT WASHER		28
09	0503062391	FERTILIZER HOPPER		02
10	0503013751	3/8 UNC X 1.1/4 BOLT		16
11	0571019051	FIXER HOPPER WASHER		16
12	0503012535	3/8" SPRING WASHER		16
13	0503012531	3/8" INOX NUT		16
14	0541052277	SILO SUPPORT RIGHT	45	01
15	0541052278	SILO SUPPORT LEFT	46	01

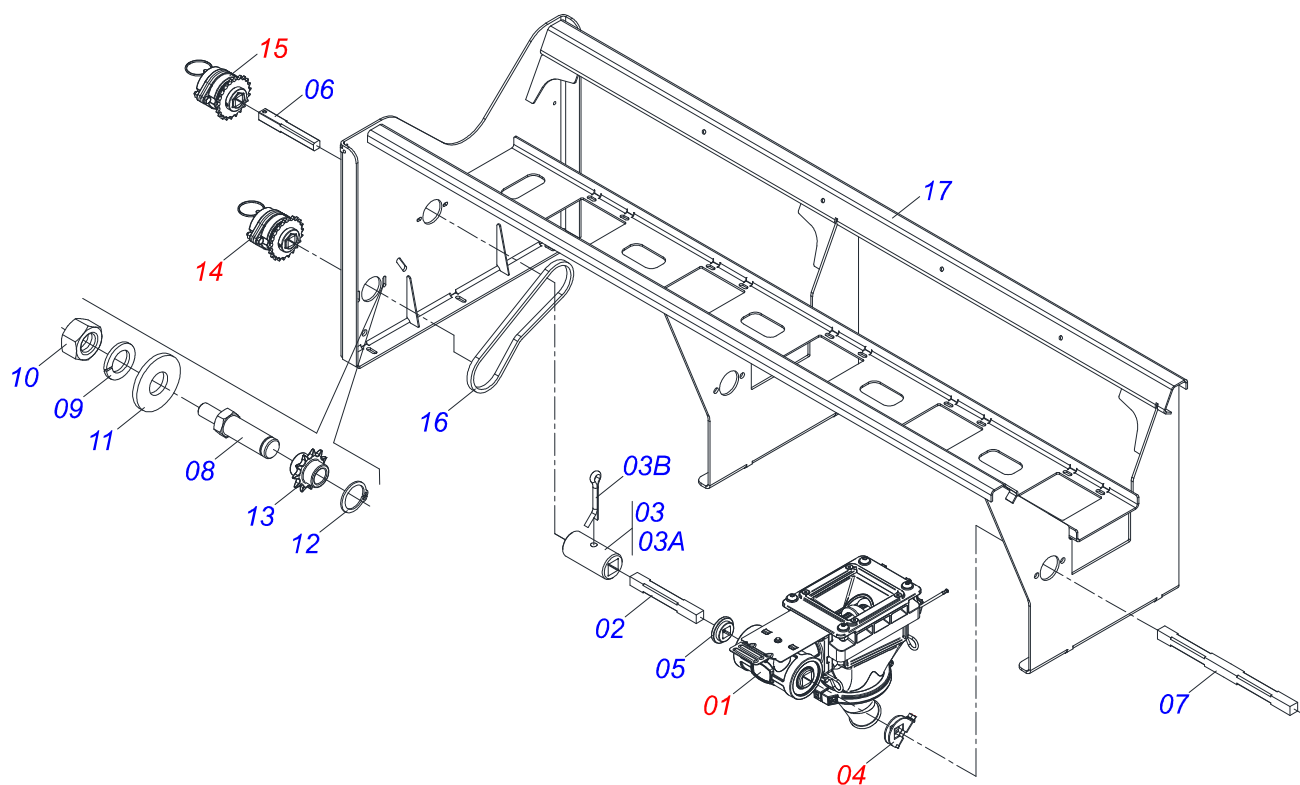


Item	Code	Description	See page	QT
01	0531055319	ALPHA II FERTILIZER METERING	47	05
02	0501218487	3/4 X 390 AXLE		03
03	0531057908	SLEEVE 1/4 X 2		04
03A	0502013069	SLEEVE 21 X 38 X 50		01
03B	0503010010	SPLIT PIN 1/4" X 2.1/2"		01
04	0501053788	3/4" SQUARE AXLE FASTENER	48	01
05	0503030303	SUPPORT WASHER		01
06	0501218689	AXLE 3/4 X 190 WITH HOLE		01
07	0501218577	3/4 X 790 AXLE WITH RELIEF		01
08	0561013049	CHAIN TIGHTENER AXLE		01
09	0503010019	1/2" SPRING WASHER		01
10	0503010060	1/2 UNC G.5 ZN HEX NUT		01
11	0501013519	FLAT WASHER		01
12	0503010302	501019 SEAL RING		01
13	0503031805	11Z 1/2" GEAR		01
14	0541052291	SIDE BEARING SET	49	01
15	0531057911	22Z GEAR SIDE BEARING ASSEMBLY	50	01
16	0503012706	40-1 CHAIN X 47 LINK + MENDING		01
17	0531067246	FERTILIZER SILO SUPPORT 4395 RIGHT		01

SILO SUPPORT LEFT


0541052278

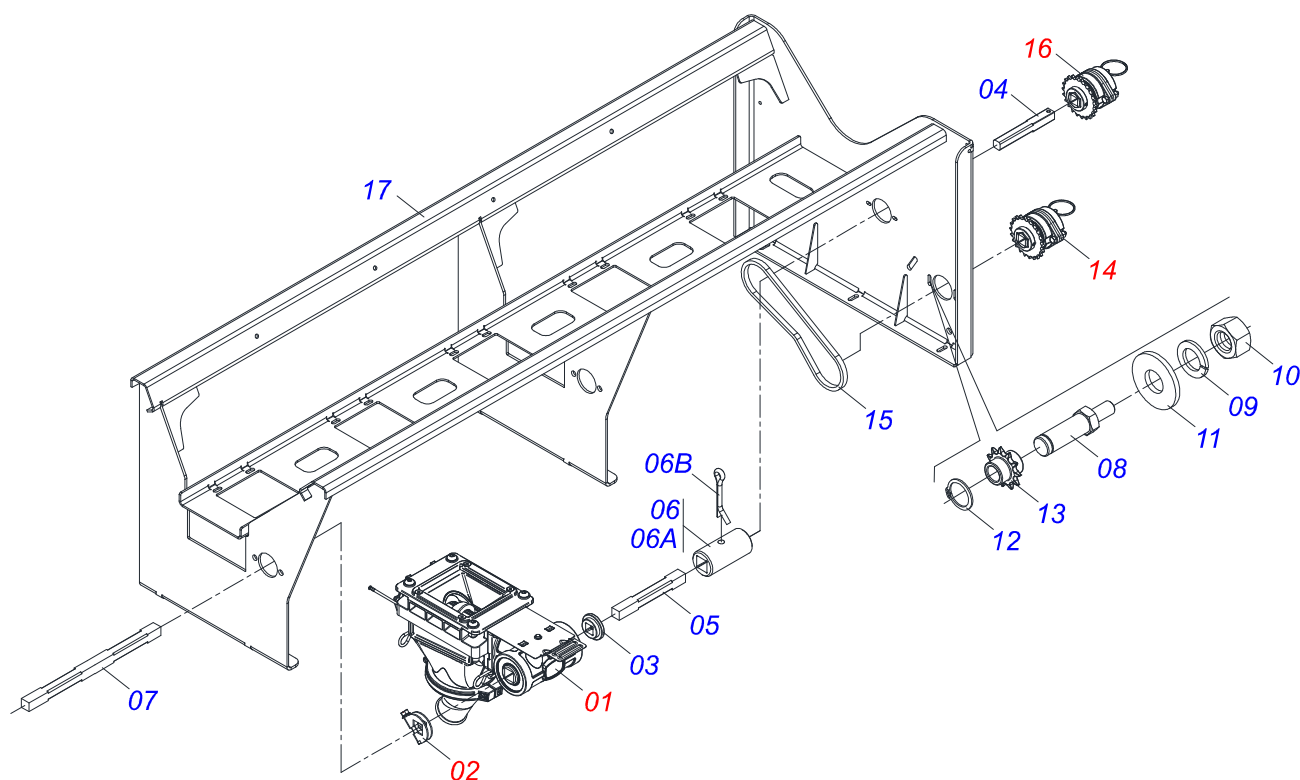


Item	Code	Description	See page	QT
01	0531055319	ALPHA II FERTILIZER METERING	47	05
02	0501053788	3/4" SQUARE AXLE FASTENER	48	06
03	0503030303	SUPPORT WASHER		06
04	0501218689	AXLE 3/4 X 190 WITH HOLE		01
05	0501218487	3/4 X 390 AXLE		03
06	0531057908	SLEEVE 1/4 X 2		04
06A	0502013069	SLEEVE 21 X 38 X 50		01
06B	0503010010	SPLIT PIN 1/4" X 2.1/2"		01
07	0501218577	3/4 X 790 AXLE WITH RELIEF		01
08	0561013049	CHAIN TIGHTENER AXLE		01
09	0503010019	1/2" SPRING WASHER		01
10	0503010060	1/2 UNC G.5 ZN HEX NUT		01
11	0501013519	FLAT WASHER		01
12	0503010302	501019 SEAL RING		01
13	0503031805	11Z 1/2" GEAR		01
14	0541052291	SIDE BEARING SET	49	01
15	0503012706	40-1 CHAIN X 47 LINK + MENDING		01
16	0531057911	22Z GEAR SIDE BEARING ASSEMBLY	50	01
17	0531067245	FERTILIZER SILO SUPPORT 4395 LEFT		01

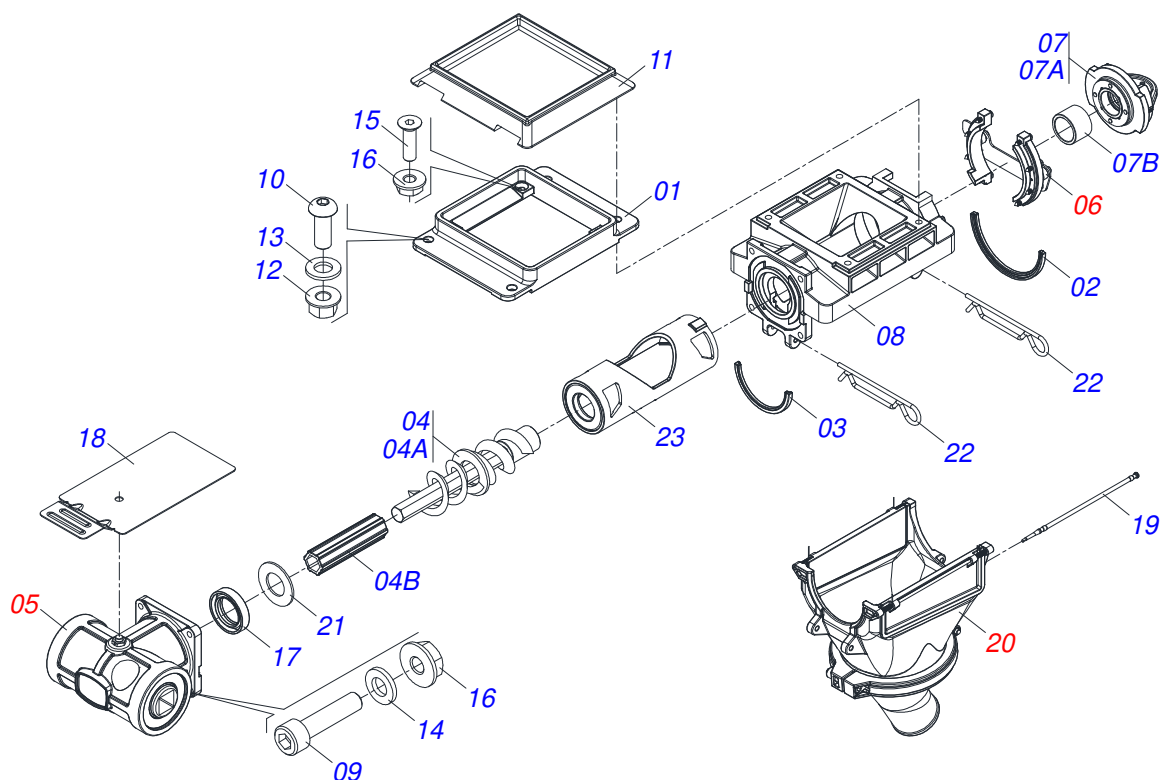


Item	Code	Description	See page	QT
01	0503035913	METERING BODY FIXING ADAPTER		01
02	0503035911	REAR COLLECTOR SEAL		01
03	0503035912	FRONT COLLECTOR SEAL		01
04	0531055518	WORM THREAD ASSEMBLED		01
04A	0531064265	WORM THREAD		01
04B	0503035859	SUPPORT SLEEVE		01
05	0531055863	TRANSMISSION HUB ASSY	51	01
06	0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	52	01
07	0501111134	LID WITH ALPHA FERTILIZER METERING GUIDE SLEEVE		01
07A	0503063799	LID WITH FERTILIZER METERING WASHER ALPHA		01
07B	0503035822	GUIDE SLEEVE SPRING CONDUCTOR		01
08	0501214337	FERTILIZER METERING BOX		01
09	0513011169	ALLEN SCREW 1/4 UNC X 1 CCSI STAINLESS STEEL		04
10	0513011172	ALLEN SCREW 3/8 UNC X 1 CASI STAINLESS STEEL		04
11	0503035931	FERTILIZER METERING SEAL		01
12	0513011173	NUT 3/8 UNC X 1		04
13	0513011174	FLAT WASHER 10.50 X 20 X 2.00 STAINLESS STEEL		05
14	0513011167	FLAT WASHER 6.4 X 12 X 1.60 STAINLESS STEEL		04
15	0513010692	ALLEN SCREW 1/4 UNC X 7/8 C FLAT SI INOX		04
16	0513011171	1/4 NC HEX NUT		08
17	0503036181	30 X 47 X 6.50 SEAL SUPPLEMENT		01
18	0501312601	FRONT COVER		01
19	0503036177	LID CORD		01
20	0531059139	COLLECTOR ASSY	53	01
21	0501310274	FLAT WASHER 46.10 X 32 X 0.80		01
22	0503035797	FRONT COLLECTOR FIXER		02
23	0501111195	GRANULATED FERTILIZER COATING		01

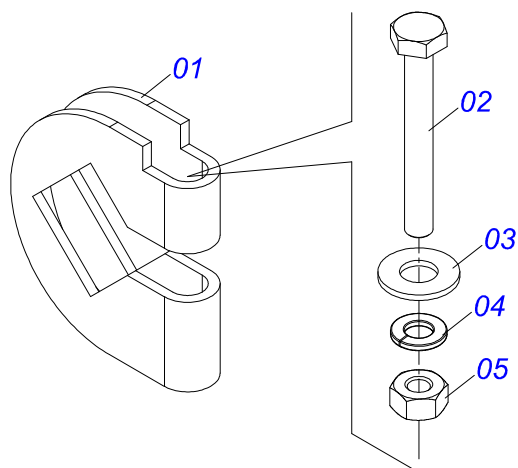


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

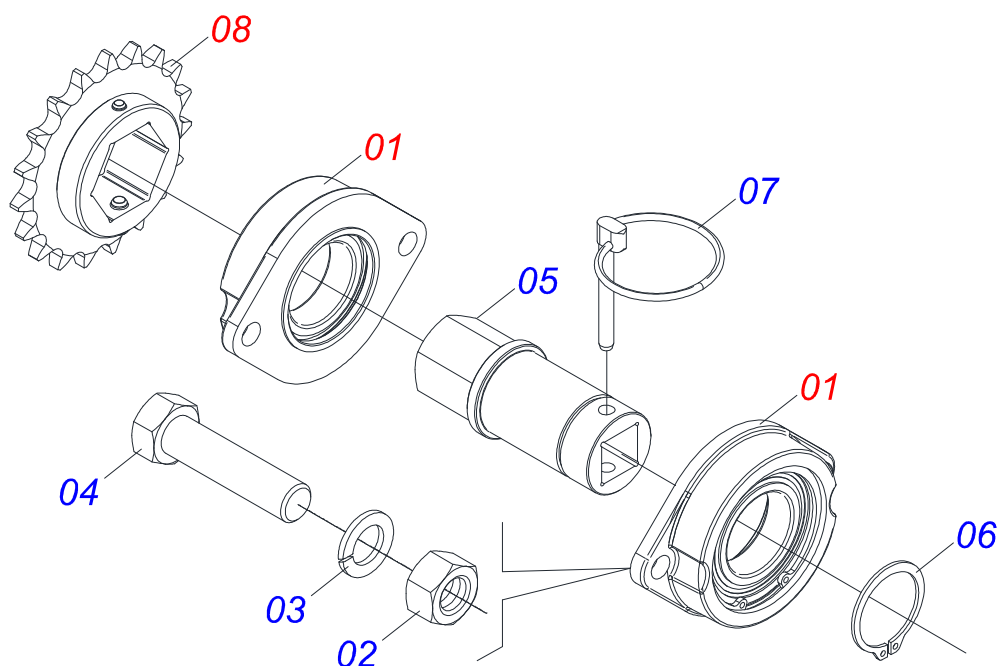


Item	Code	Description	See page	QT
01	0531057910	SIDE BEARING WITH BEARING 6007	26	02
02	0503010337	NUT 5/16 UNC G.5 ZN		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0502013067	SIDE BEARING AXLE FERTILIZER HOPPER SUPPORT		01
06	0503010845	501035 CLAMPING RING (FOR AXLE)		01
07	0503030119	LOCK PIN		01
08	0541052293	GEAR 19Z WITH FIXATION		01

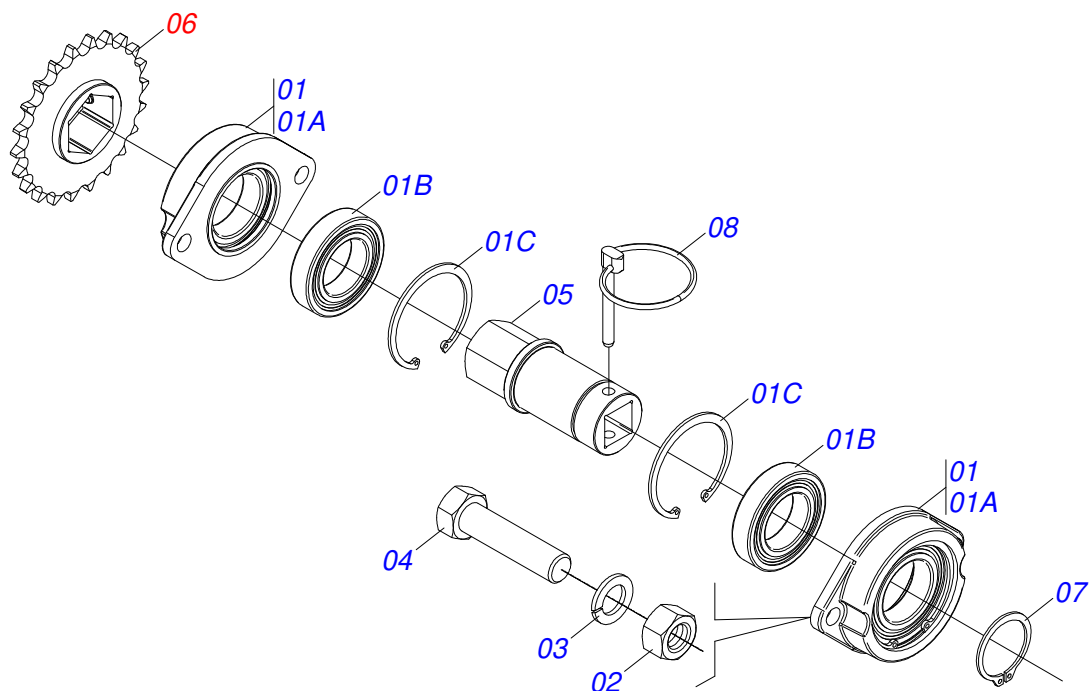

Item	Code	Description	See page	QT
01	0531057910	SIDE BEARING WITH BEARING 6007	26	02
01A	0502013070	SIDE FERTILIZER HOPPER SUPPORT BEARING		01
01B	0503016065	ROLLER BEARING		01
01C	0503011800	SEAL RING		01
02	0503010337	NUT 5/16 UNC G.5 ZN		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02
05	0502013067	SIDE BEARING AXLE FERTILIZER HOPPER SUPPORT		01
06	0531057901	GEAR		01
07	0503010845	501035 CLAMPING RING (FOR AXLE)		01
08	0503030119	LOCK PIN		01

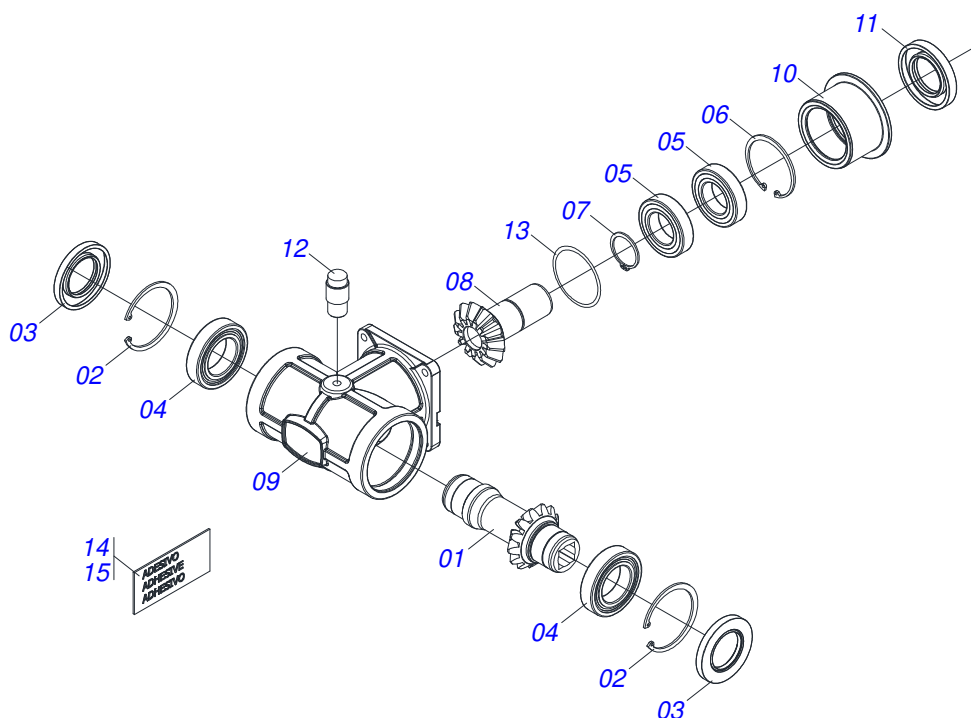


Item	Code	Description	See page	QT
01	0502013056	CONICAL PINION MOTOR 13Z ALPHA FERTILIZER METERING		01
02	0503011800	SEAL RING		02
03	0513010740	RETAINER 62 X 35 X 7 BRG 7159		02
04	0503016065	ROLLER BEARING		02
05	0503019373	6006 2RS1 NATIONAL BEARING		02
06	0503012858	502075 CLAMPING RING (FOR HOLE)		01
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01
08	0501111141	GEAR WITH ALPHA FERTILIZER METERING CAP		01
09	0501215105	METERING TRANSMISSION HUB		01
10	0501215104	TRANSMISSION HUB SLEEVE		01
11	0513011272	SEAL 7435-BRG 30 X 55 X 8.00MM		01
12	0501219613	FIXER BREATHER COVER		01
13	0513011248	RING RING 62.00 X 1.50		01
14	0503036071	TATU LOGO DECAL		01
15	0503035316	LUBRICATED POINTS DECAL		01

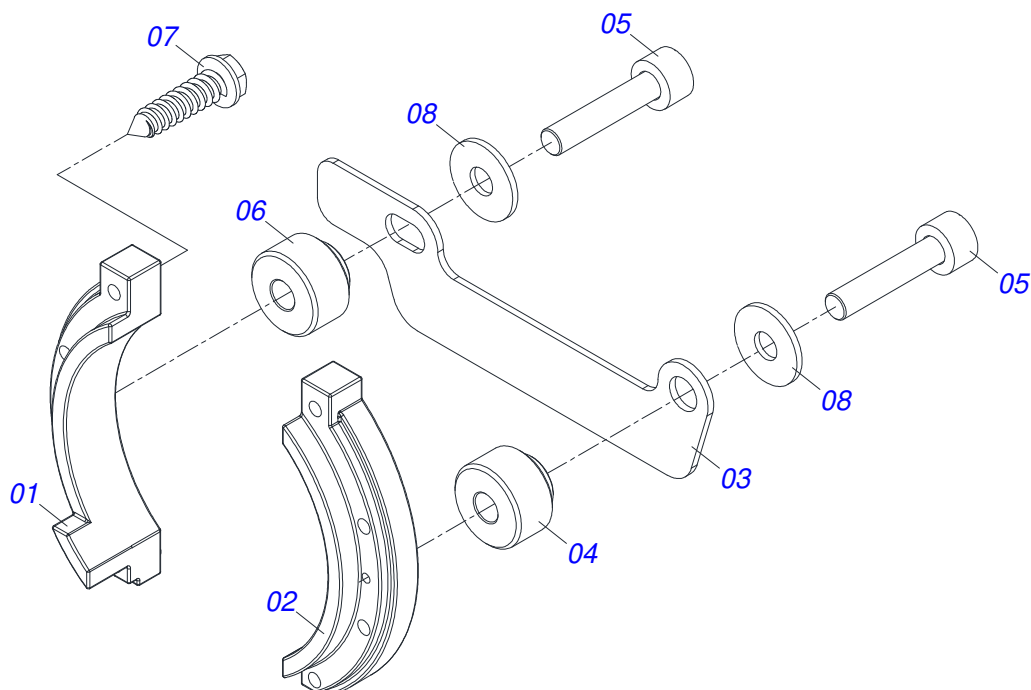


Item	Code	Description	See page	QT
01	0503035915	RIGHT FERTILIZER METERING LID GUIDE		01
02	0503035916	LEFT GUIDE DISPENSER COVER		01
03	0501310245	ALPHA FERTILIZER DISPENSER COVER LATCH		01
04	0501310247	LEFT SAFETY LOCK SLEEVE		01
05	0513011249	ALLEN SCREW M4 X 20 CCSI STAINLESS STEEL		02
06	0501310246	RIGHT SAFETY LOCK SLEEVE		01
07	0513011507	FLANGED HEX SCREW AT 3.5 X 19 STAINLESS STEEL		08
08	0513011518	FLAT WASHER M4 STAINLESS STEEL AISI 304 4.3 X 12 X 1 MM		01

COLLECTOR ASSY


0531059139

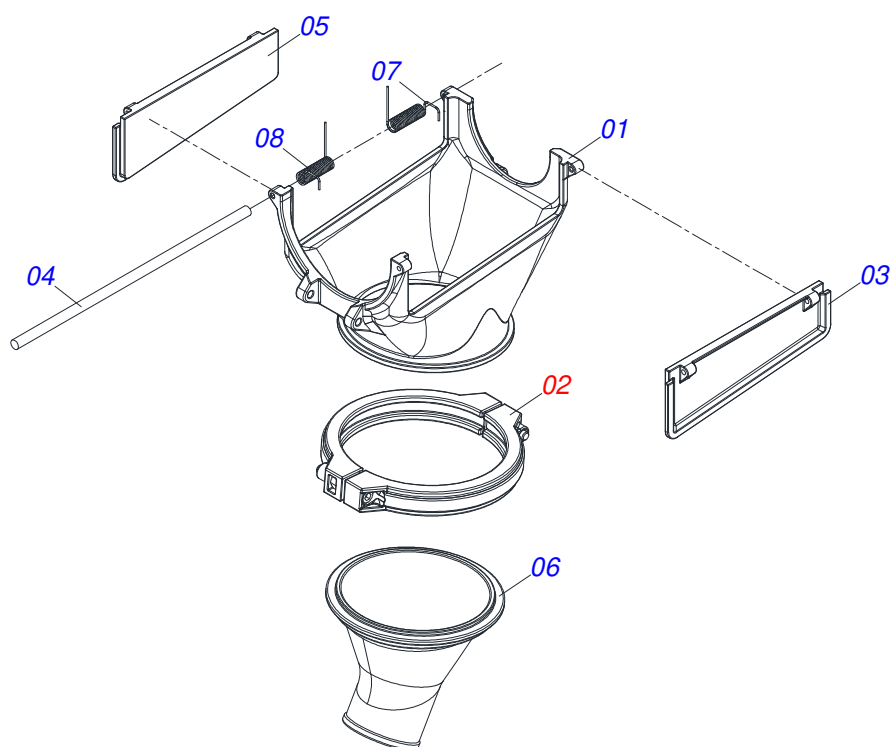


Item	Code	Description	See page	QT
01	0503036178	DISPENSER SIDE COVER COLLECTOR		01
02	0531055273	ALPHA FERTILIZER METERING CLAMP	54	01
03	0503036166	DISPENSER RIGHT SIDE COVER		01
04	0501219838	COLLECTOR SIDE LID AXLE		02
05	0503036167	DISPENSER LEFT SIDE COVER		01
06	0503036180	ALPHA FERTILIZER DOSING NOZZLE 50MM		01
07	0503036203	RIGHT TORSION SPRING DISPENSER SIDE COVER		02
08	0503036202	LEFT TORSION SPRING SIDE COVER		02

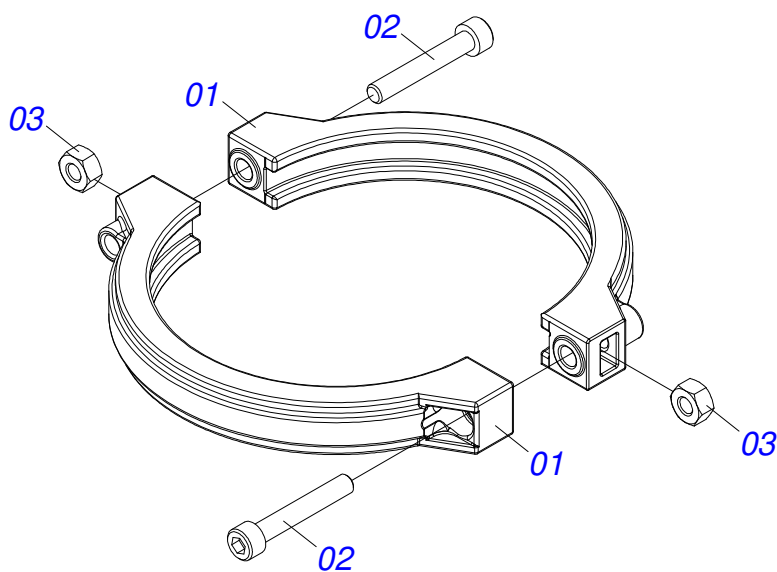


Item	Code	Description	See page	QT
01	0503035812	BODY CLAMP COLLECTOR FERTILIZER METERING ALPHA		02
02	0513010691	ALLEN SCREW 1/4 UNC X 1.1/2 CCSI INOX		02
03	0503012118	1/4" INOX NUT		02

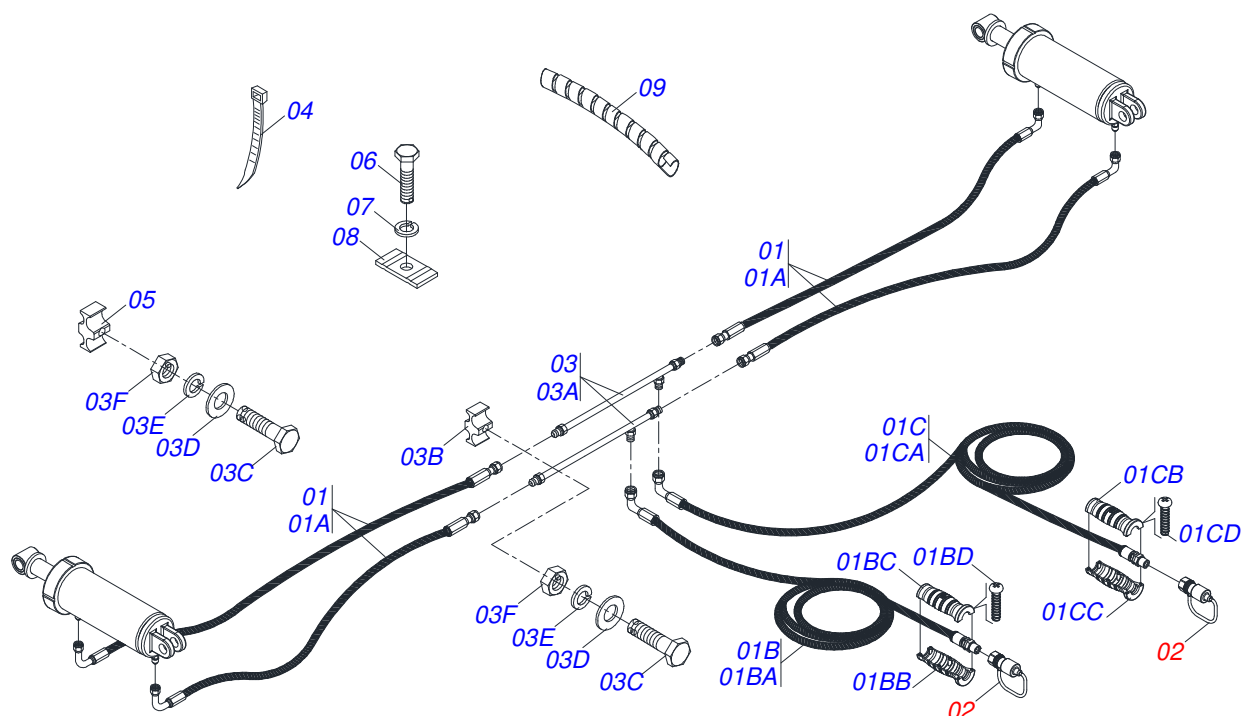

Item	Code	Description	See page	QT
01	0511057335	HOSE KIT HYDRAULIC		01
01A	0501080025	3/8" X 55,11" TR-TC HOSE		04
01B	0521052285	TC-TM HOSE ASSY		01
01BA	0501080422	3/8" X 157" TC-TM HOSE		01
01BB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
01BC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
01BD	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
01C	0521052330	3/8" X 157.50" TC-TM BLACK/BLUE HOSE		01
01CA	0501080422	3/8" X 157" TC-TM HOSE		01
01CB	0503034492	HYDRAULIC HOSE GRIP (BLACK)		01
01CC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
01CD	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
02	0501053834	MALE QUICK COUPLER	56	02
03	0511058120	KIT VALVE SUPPORT		01
03A	0521066354	OIL DISTRIBUTOR BODY		02
03B	0502010477	HOSE CLAMP		04
03C	0503011268	3/8" X 2-1/2" BOLT		02
03D	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
03E	0503010025	3/8 SPRING WASHER		02
03F	0503010026	3/8" NUT		02
04	0503013100	NYLON CLAMP 4,8 X 1,3 X 200 MM		02
05	0502012702	BODY SUPPORT CLAMP		04
06	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
07	0503010180	7/16" SPRING WASHER		04
08	0531011180	UPPER BODY CLIP		04
09	0571017774	SPRING PROTECTION QUICK HOSE		01

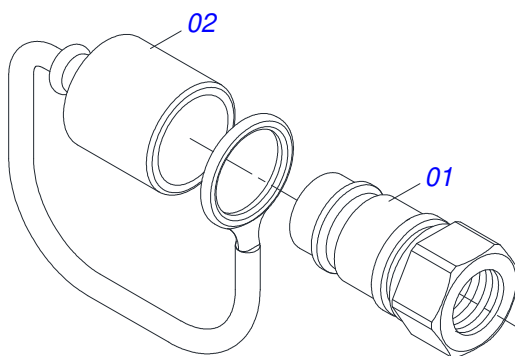


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

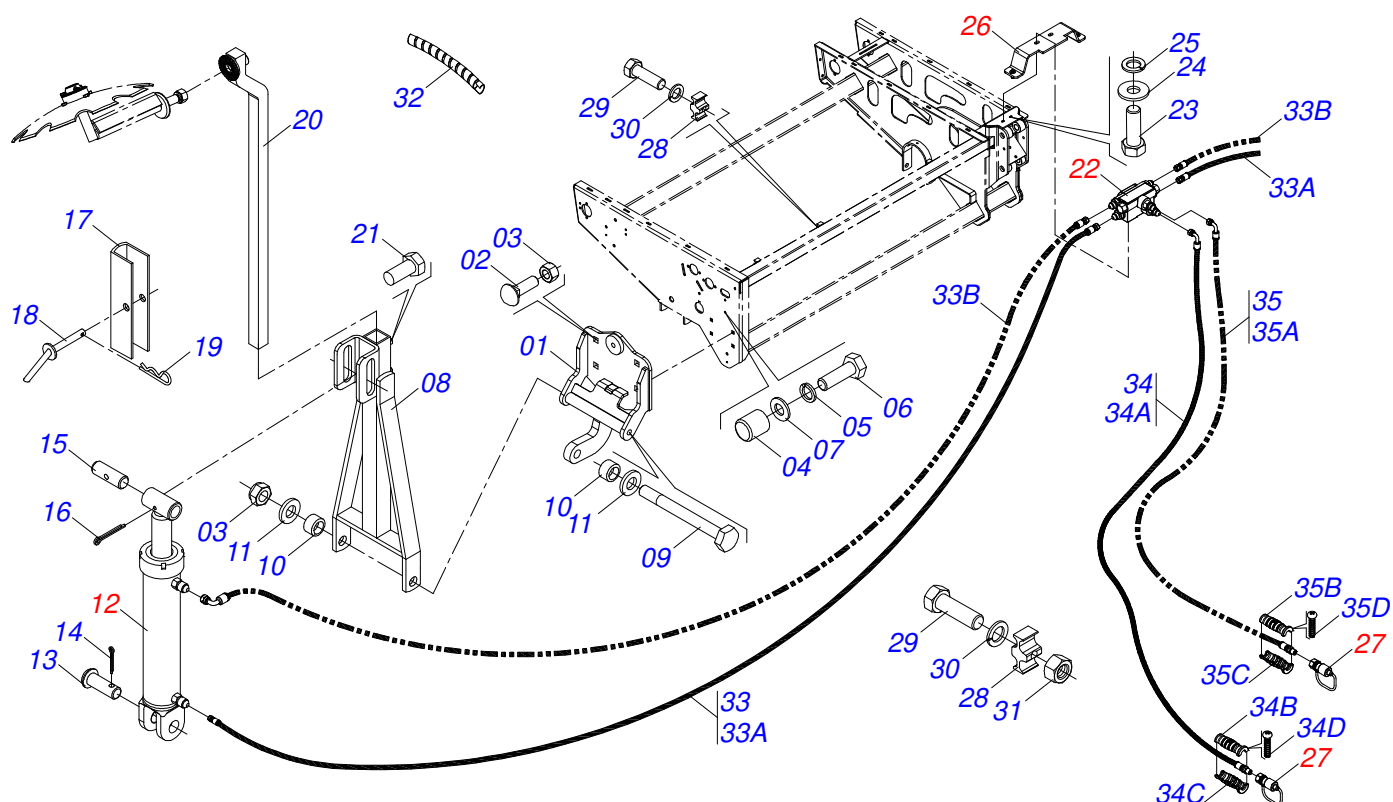


Item	Code	Description	See page	QT
01	0521066622	ROW MARKER ARM SUPPORT		02
02	0503012699	BOLT 5/8NC X 2 CAPQ G.5 ZN 1K20548		04
03	0503012412	5/8" UNC SELF LOCKING NUT		04
04	0503011070	BEATER		02
05	0503010019	1/2" SPRING WASHER		02
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
07	0551019213	FLAT WASHER		02
08	0501069470	ROW MARKER ARM		02
09	0521061655	BOLT 5/8 UNC X 320 MM		02
10	0521010479	SLEEVE ARTICULATION		04
11	0501012140	FLAT WASHER 16,50 X 40 X 4,00 ZN		04
12	0511058449	HYDRAULIC CYLINDER	58	02
13	0521010575	C0.9" X 3.3" COUPLING SHAFT		02
14	0503010523	1/4" X 2" SPLIT PIN		02
15	0511015779	1" X 4.2" AXLE		02
16	0503010523	1/4" X 2" SPLIT PIN		02
17	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
18	0501068994	8,30 X 78 LOCK PIN		02
19	0503030168	HITCH PIN CLIP		02
20	0501069643	890 TURNBUCKLE		02
21	0503011854	5/8" X 1-1/4" BOLT		04
22	0501054649	HBM SEQUENTIAL VALVE	59	01
23	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
24	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
25	0503010025	3/8 SPRING WASHER		02
26	0511058119	VALVE SUPPORT ASSEMBLY	60	01
27	0501053834	MALE QUICK COUPLER	56	02
28	0502012702	BODY SUPPORT CLAMP		08
29	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		08
30	0503010180	7/16" SPRING WASHER		08
31	0503010244	7/16" NUT		02
32	0571014419	PLASTIC PROTECTION SPRING HOSE 3/4 X 700MM		04


Item	Code	Description	See page	QT
33	0511057354	HYDRAULIC MARKER HOSE KIT - 4395		01
33A	0501081728	HOSE 3/8 X 3100 TR-TR		02
33B	0501080515	3/8" X 133" TR-TC HOSE		02
34	0521052849	3/8 X 4200 TC-TM PURPLE/RED HOSE		01
34A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
34B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
34C	0503034495	HYDRAULIC HOSE GRIP (RED)		01
34D	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06
35	0521052850	3/8 X 4200 TC-TM PURPLE/BLUE HOSE		01
35A	0501080878	3/8 X 4200 TC-TM HOSE ASSY		01
35B	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
35C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
35D	0503018952	PH 2,5 X 10 ZB PLASTIC BOLT		06

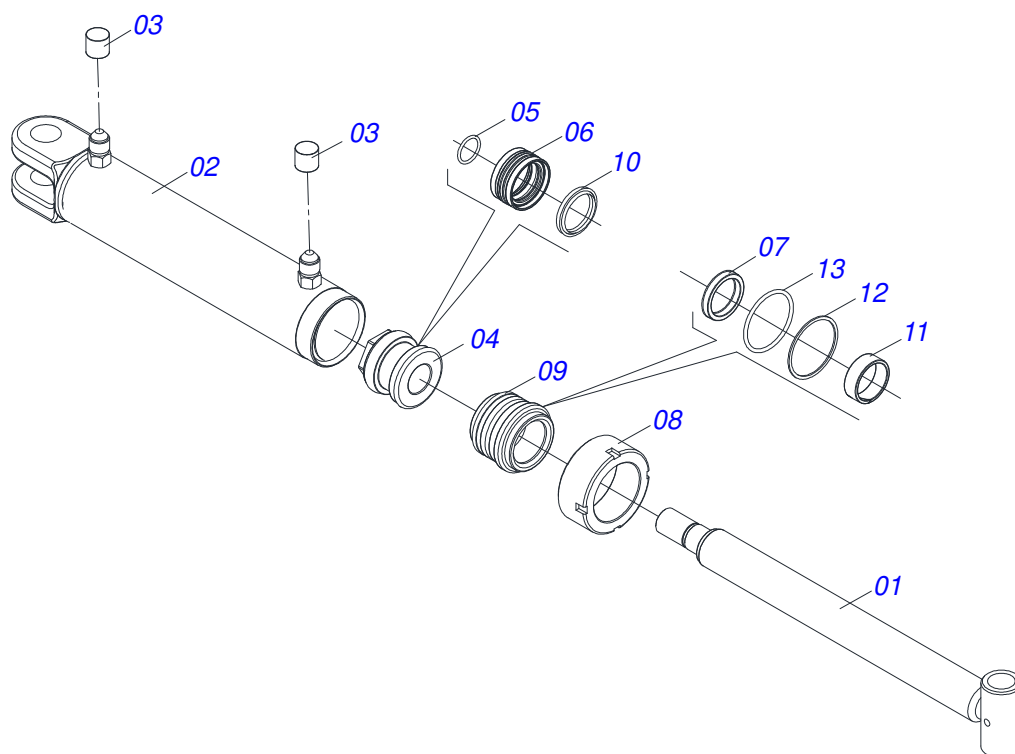


Item	Code	Description	See page	QT
01	0521066635	TURNBUCKLE		01
02	0511062810	2.5" X 15"CYLINDER CASE		01
03	0503030385	CYLINDER PLUG N-002		02
04	0502012837	PISTON		01
05	0503011109	O'RING 2-119 N 3006 9B		01
06	0503018005	RING		01
07	0503018003	GASKET		01
08	0502010471	63,50 MOBILE CAP		01
09	0581010668	RING SUPPORT		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018004	RING		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0511032280	REPAIR KIT ASSY (0511058413)		01

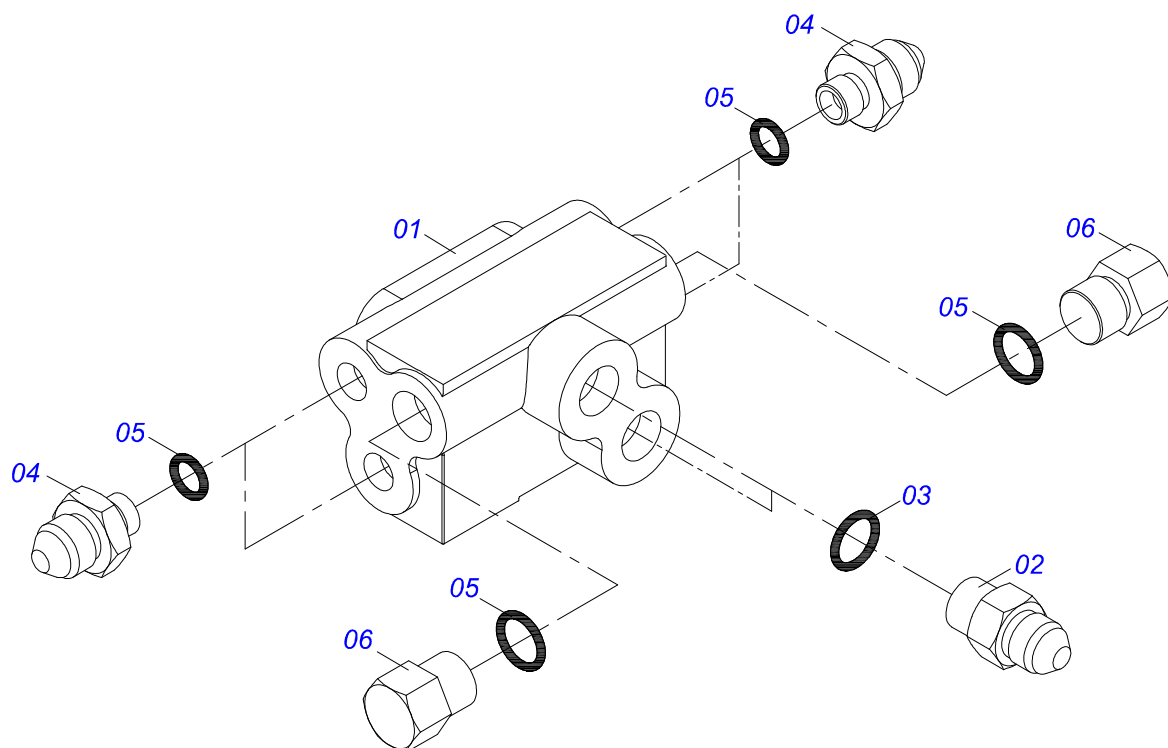


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	NIPLE 3/4" NF X 3/4" NF HEX. 7/8" X 44		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

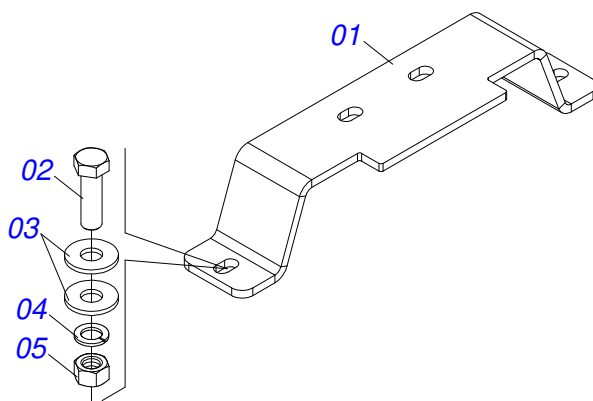


Item	Code	Description	See page	QT
01	0581010011	VALVE FIXING SUPPORT		01
02	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
04	0503010025	3/8 SPRING WASHER		02
05	0503010026	3/8" NUT		02

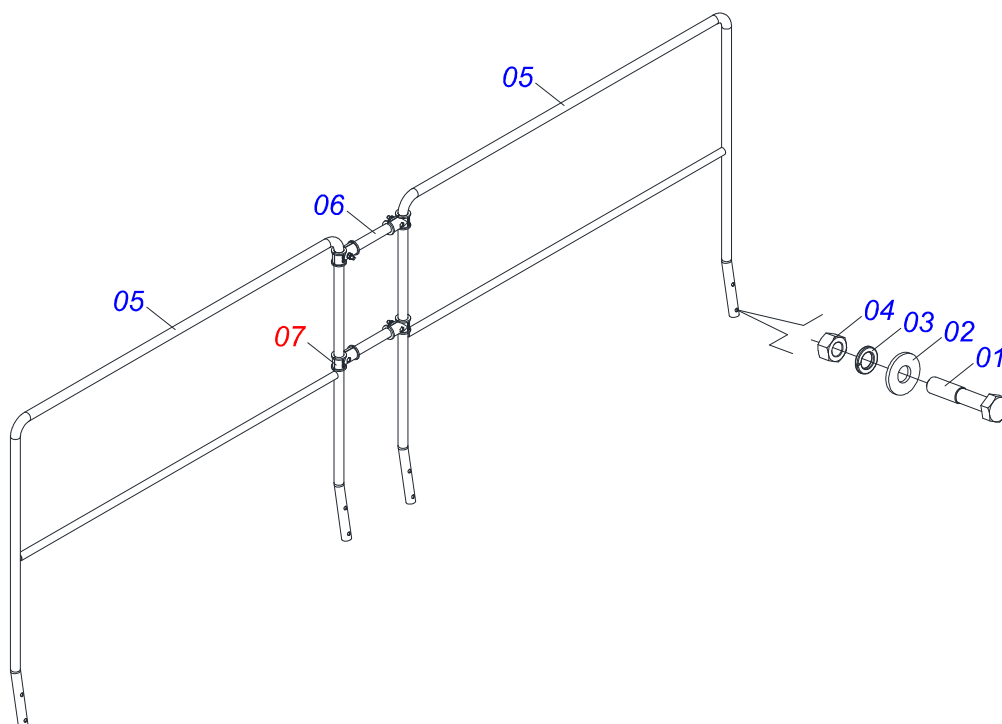


Item	Code	Description	See page	QT
01	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		08
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		08
03	0503010019	1/2" SPRING WASHER		08
04	0503010060	1/2 UNC G.5 ZN HEX NUT		08
05	0531067252	HANDRAILING FRAME 4395		02
06	0581012916	INTERMEDIATE TUBE		02
07	0511059383	INTERNAL HANDRAILING FIXER	62	04

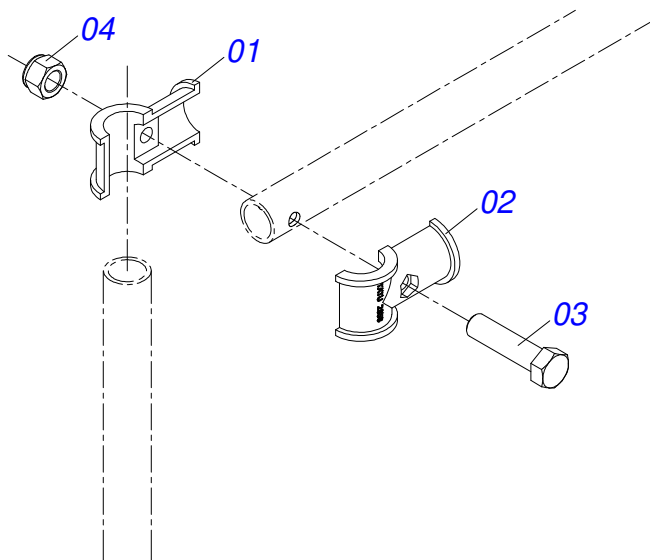


Item	Code	Description	See page	QT
01	0502012857	EXTERNAL FIXER HANDRAIL		01
02	0502012858	INTERNAL FIXER HANDRAIL		01
03	0503019083	7/16 UNC X 2.1/4 C S R P G.5 ZN BOLT		01
04	0503015490	SELF-LOCKING NUT 7/16		01

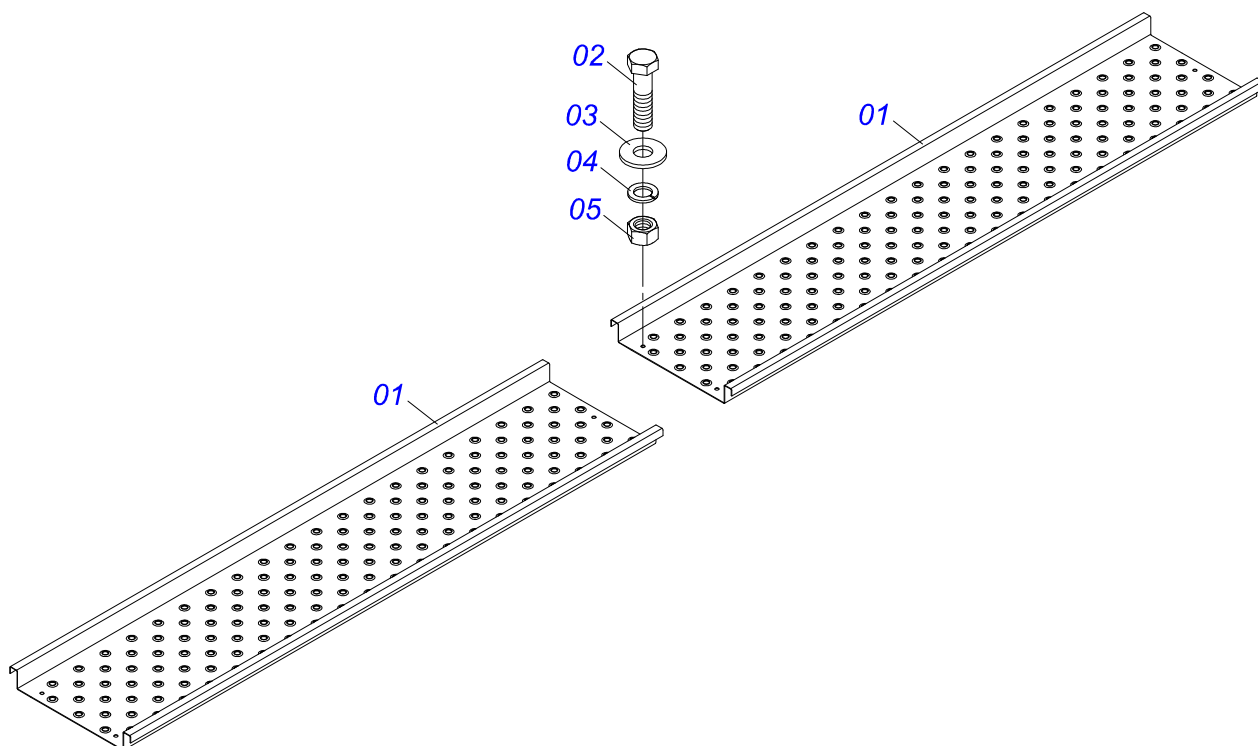


Item	Code	Description	See page	QT
01	0571018867	PLATFORM - 4395		02
02	0503010237	3/8" X 1" BOLT		08
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		16
04	0503010025	3/8 SPRING WASHER		08
05	0503010026	3/8" NUT		08

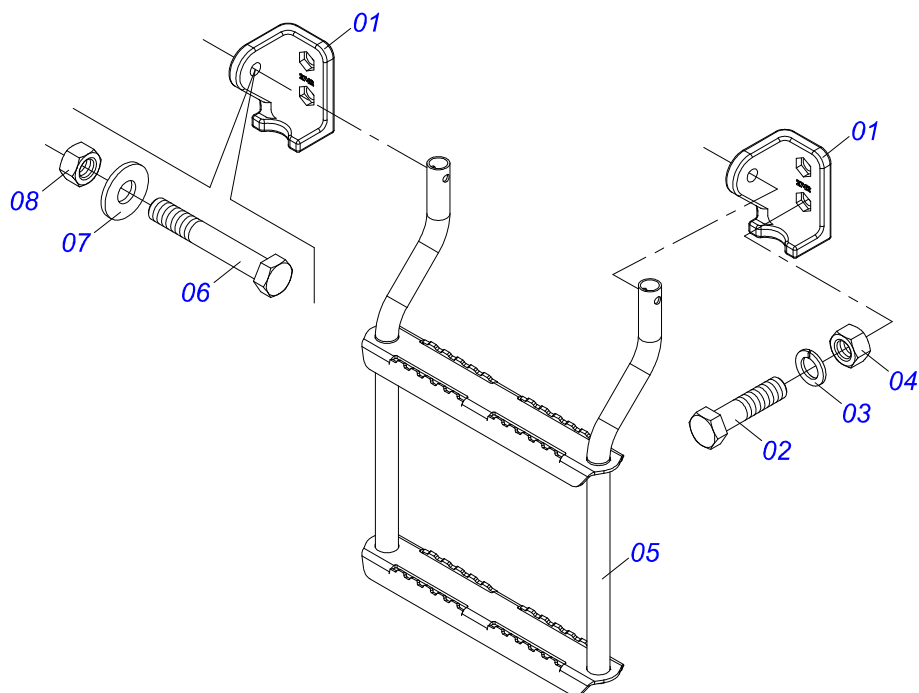


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER		02
02	0503010237	3/8" X 1" BOLT		04
03	0503010025	3/8 SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0511069636	LADDER		01
06	0503011179	3/8" X 2-1/4" BOLT		02
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
08	0503013357	3/8 SELF-ADJUSTING NUT		02

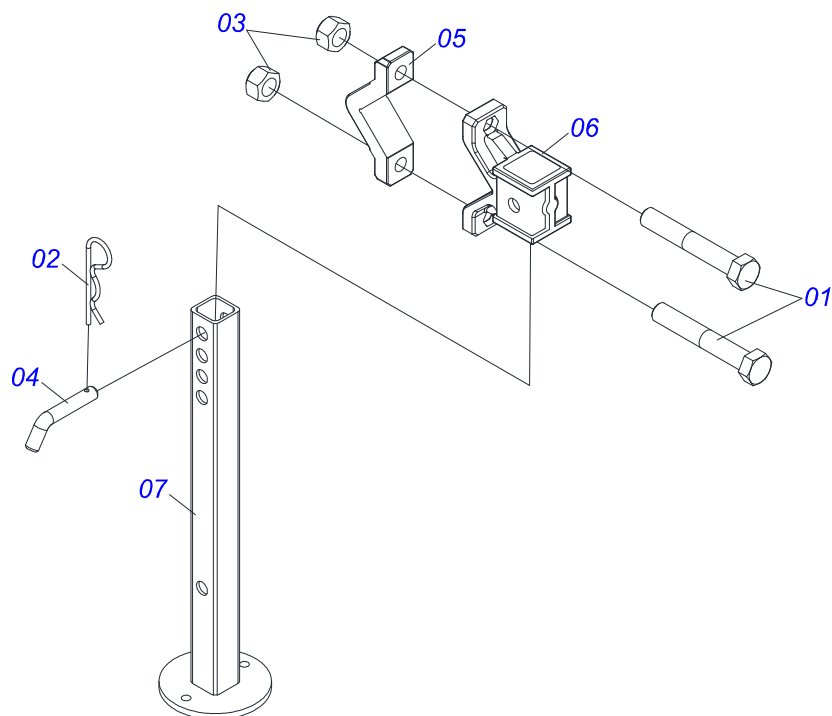


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0503030012	HITCH PIN CLIP		01
03	0503012412	5/8" UNC SELF LOCKING NUT		02
04	0501011075	PIN		01
05	0502010175	HITCH CLAMP		01
06	0502011530	SUPPORT		01
07	0521067869	PLOUGH SUPPORT		01

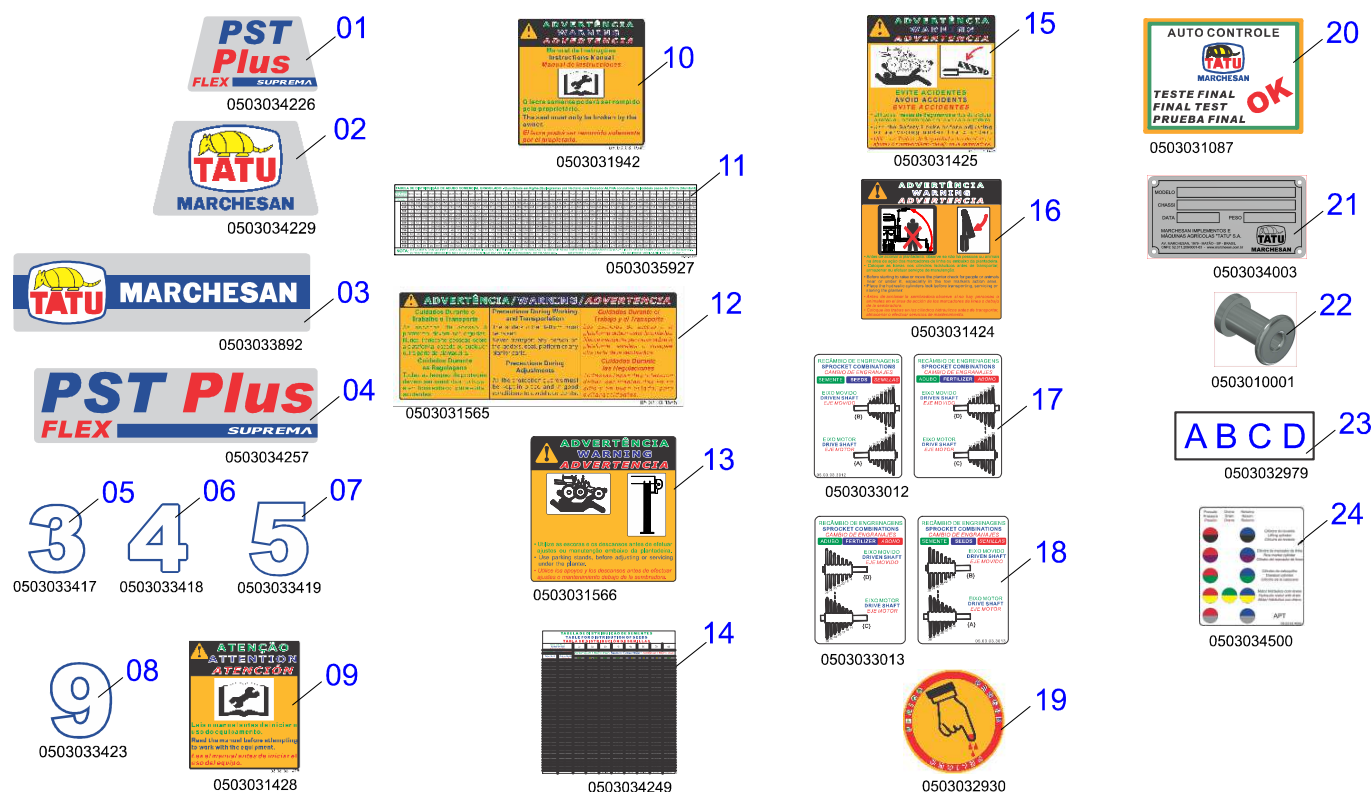

Item	Code	Description	See page	QT
01	0503034226	LABEL ADHESIVE	02	
02	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 NOZZLES)	02	
03	0503033892	TATU LOGO DECAL	01	
04	0503034257	PST PLUS FLEX SUPREMA LOGO DECAL	01	
05	0503033417	NUMBER 3 DECAL	02	
06	0503033418	NUMBER 4 DECAL	02	
07	0503033419	NUMBER 5 DECAL	02	
08	0503033423	NUMBER 9 DECAL	02	
09	0503031428	READ MANUAL DECAL	01	
10	0503031942	MANUAL SEAL DECAL	01	
11	0503035927	P27 FERTILIZER TABLE DECAL	02	
12	0503031565	CAUTION TRANSPORTATION DECAL	02	
13	0503031566	ATTENTION JACK DECAL	02	
14	0503034249	PLANTERS TABLE DECAL	02	
15	0503031425	ATTENTION CARRYING-WHEEL LOCK DECAL	02	
16	0503031424	ATTENTION HYDRAULIC MARKER DECAL	02	
17	0503033012	RIGHT GEAR BOX SEED/FERTILIZER DECAL	01	
18	0503033013	LEFT GEAR BOX SEED/FERTILIZER DECAL	01	
19	0503032930	DANGER DECAL	05	
20	0503031087	AUTO CONTROL APPROVED DECAL	01	
21	0503034003	61 X 118 SERIAL NUMBER TAG	01	
22	0503010001	RIVET 3,2 X 5,5	04	
23	0503032979	LETTERS A B C D DECAL	02	
24	0503034500	GRIP COLORS (PLANTERS) DECAL	01	

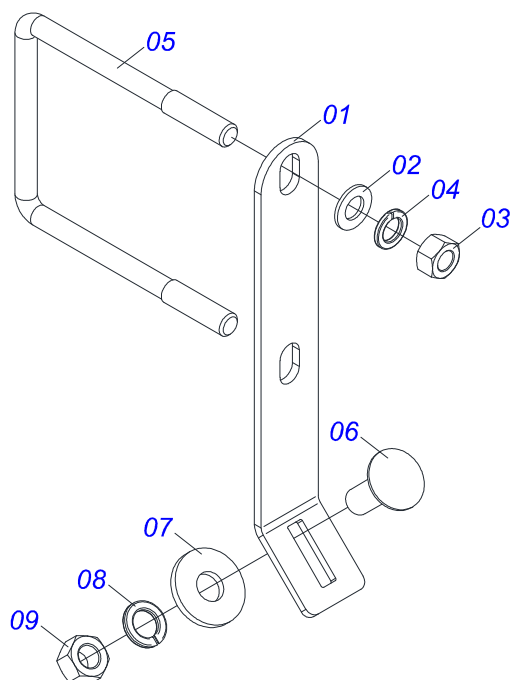


Item	Code	Description	See page	QT
01	0501216825	SUPPORT		01
02	0503011828	FLAT WASHER 13 X 24 X 2,00 ZN		02
03	0503010060	1/2 UNC G.5 ZN HEX NUT		02
04	0503010019	1/2" SPRING WASHER		02
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		01
06	0501011643	3/8 X 1"BOLT		01
07	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
08	0503010025	3/8 SPRING WASHER		01
09	0503010026	3/8" NUT		01

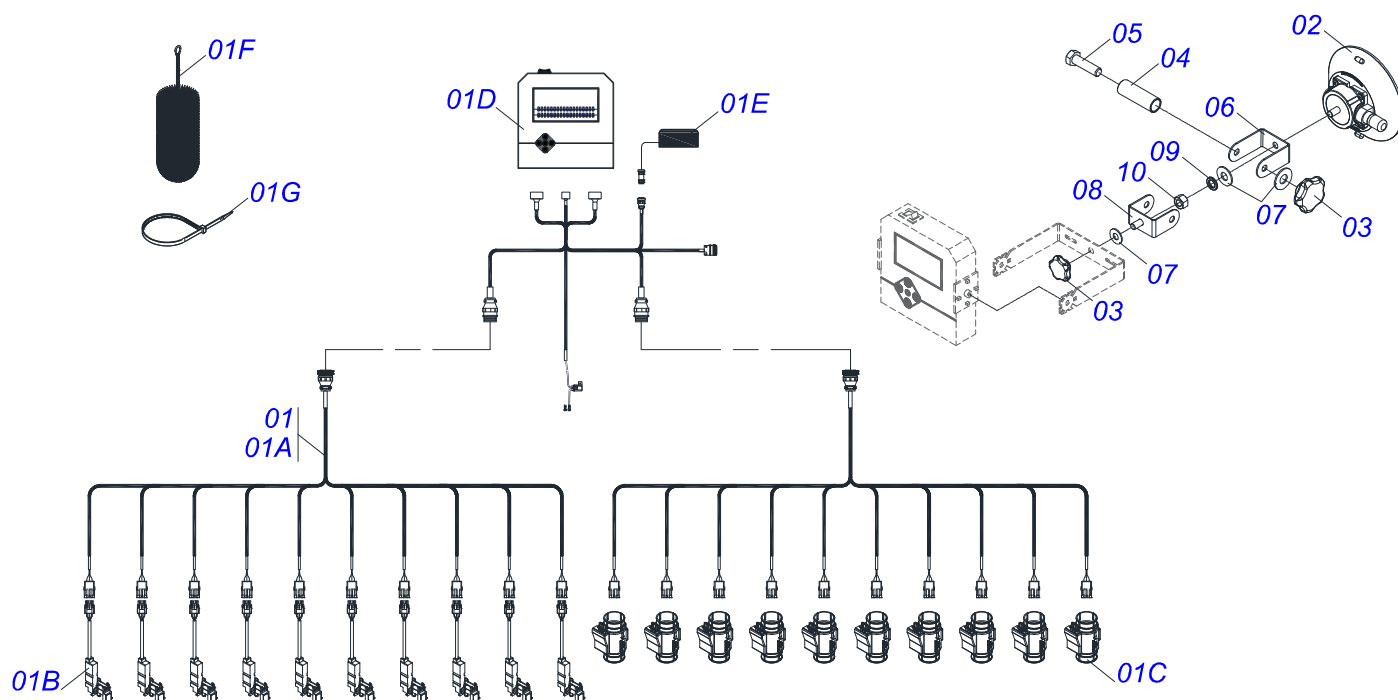

Item	Code	Description	See page	QT
01	0503064145	MONITORING KIT SEED/FERTILIZER 10 LINES		01
01A	0503019725	CABLE		02
01B	0503019100	ISOBUS PHOTOELECTRIC SENSOR		10
01C	0503018932	FLOW FERTILIZER SENSOR		10
01D	0503019719	PLANTING MONITOR MP36		01
01E	0503017443	ANTENNA GPS PM 400		01
01F	0503017031	CLEAN BRUSH		01
01G	0503019720	NYLON CLAMP		02
02	0503016234	FIXING VACUUM TRIMBLE 91357-AG		01
03	0503010293	CLAMP KNOB		02
04	0591016146	0.63" X 0.51" X 1.89" SLEEVE		01
05	0503011141	3/8" X 2-3/4" BOLT		01
06	0531061651	LARGER U SUPPORT		01
07	0501013518	FLAT WASHER		03
08	0531061652	SMALLER U SUPPORT		01
09	0503010025	3/8 SPRING WASHER		01
10	0503010026	3/8" NUT		01

TURBINE ASSY


0541052609

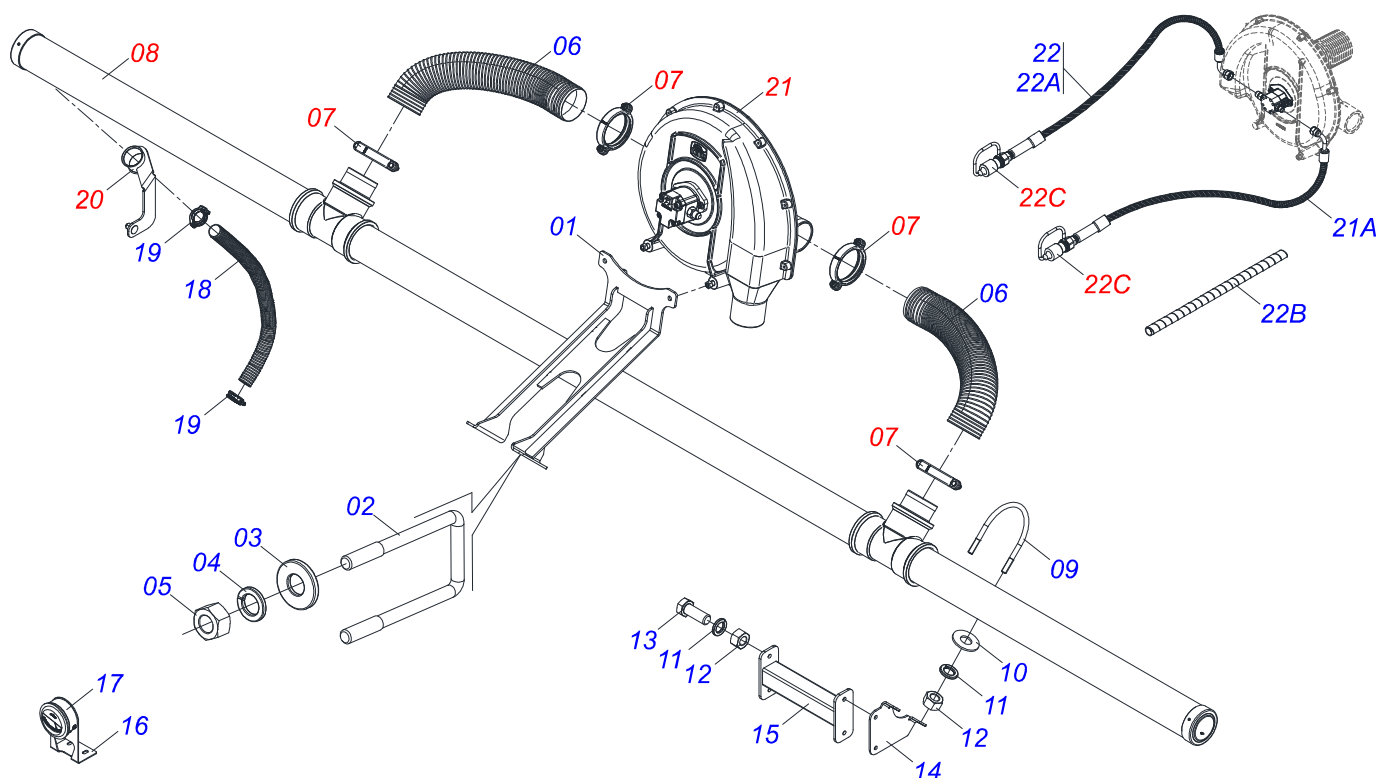


Item	Code	Description	See page	QT
01	0531067250	TURBINE FIXING SUPPORT		01
02	0521014021	1/2" X 4.5" X 5.4" FASTENER		02
03	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
04	0503010019	1/2" SPRING WASHER		04
05	0503010060	1/2 UNC G.5 ZN HEX NUT		04
06	0581012166	HOSE		02
07	0531050772	RIGHT CLAMP 4	70	04
08	0541052281	AIR CONDUCTOR 09 NOZZLES	71	01
09	0571019403	STAPLE FIXER		04
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
11	0503010025	3/8 SPRING WASHER		20
12	0503010026	3/8" NUT		20
13	0503010237	3/8" X 1" BOLT		12
14	0501313176	AIR DUCT FIXING SUPPORT		04
15	0521068698	AIR CONDUCTOR FIXING SUPPORT		02
16	0571019552	SUPPORT VACUUM		01
17	0503013584	VACUUM GAUGE		01
18	0571019764	AIR CONDUCTOR 1.1 / 2 X 1600		09
19	0521052549	CLAMP	72	18
20	0541050798	HOSE GUIDE ASSEMBLY	73	09
21	0531051111	TURBINA SUCCAO TATU	74	01
22	0541050807	TURBINE HOSE GAME MTH		01
22A	0501081810	HOSE 1/2 X 6200 TC-TM		02
22B	0581012991	SPRING PROTECTION PLASTIC HOSE		01
22C	0501053834	MALE QUICK COUPLER	56	02

RIGHT CLAMP 4

0531050772

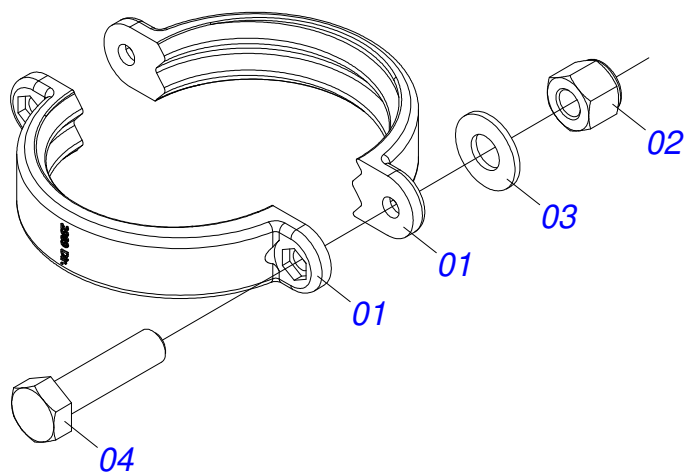


Item	Code	Description	See page	QT
01	0502012989	CLAMP BODY 4 RIGHT		02
02	0503013759	NUT		02
03	0501010694	FLAT WASHER 32,50 X 75 X 4,75		02
04	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		02

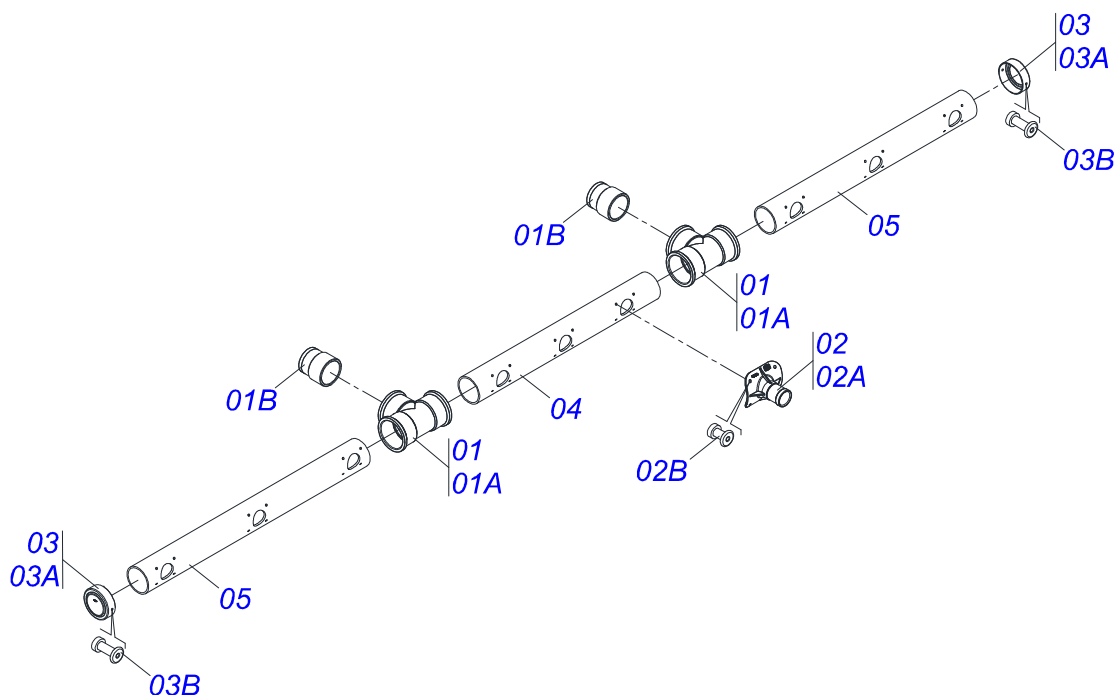


Item	Code	Description	See page	QT
01	0511057036	AIR DISTRIBUTOR BOARD		02
01A	0503012567	T-JOIN FOR TUBE 110		01
01B	0581013890	AIR DISTRIBUTOR SOCKET		01
02	0521056048	AIR DISTRIBUTOR NOZZLE 1.1 / 2 WITH RIVET		09
02A	0503034812	SOCKET DISTRIBUTOR AR		01
02B	0503012856	POP RIVET		04
03	0521056049	AIR DISTRIBUTOR CAP WITH RIVET		02
03A	0503034763	AIR DISTRIBUTOR PUMP		01
03B	0503015341	POP RIVET		02
04	0501316112	AIR CONDUCTOR BODY 03 NOZZLES		01
05	0591010921	AIR CONDUCTOR BODY 03 NOZZLES		02

CLAMP


0521052549

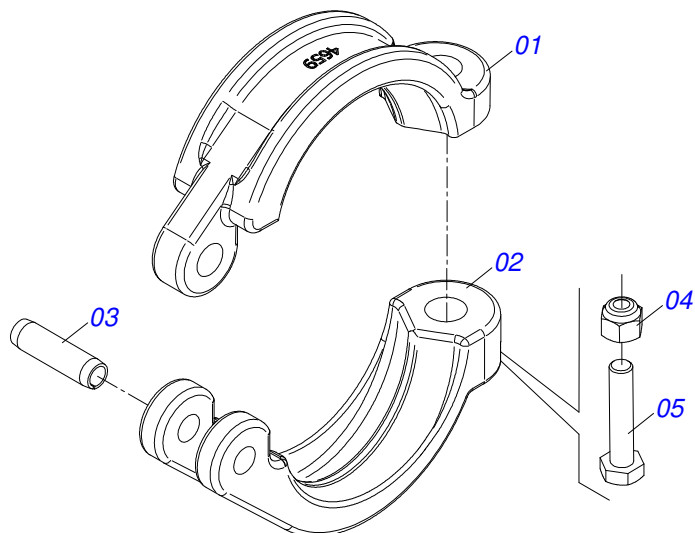


Item	Code	Description	See page	QT
01	0503034660	CLAMP LOWER		01
02	0503034659	CLAMP UPPER		01
03	0503010686	0.2" X 0.7" SPRING PIN		01
04	0503011776	SELF-LOCKING HEX NUT		01
05	0503011813	M6 X 1.2" BOLT		01

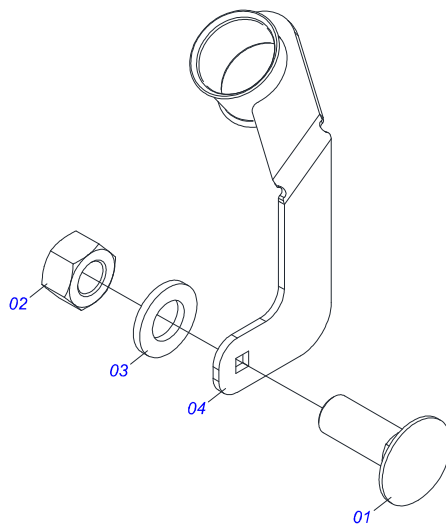


Item	Code	Description	See page	QT
01	0501011643	3/8 X 1" BOLT		01
02	0503010026	3/8" NUT		01
03	0503015135	FLAT WASHER 10 X 18 X 2		01
04	0531066517	HOSE GUIDE		01

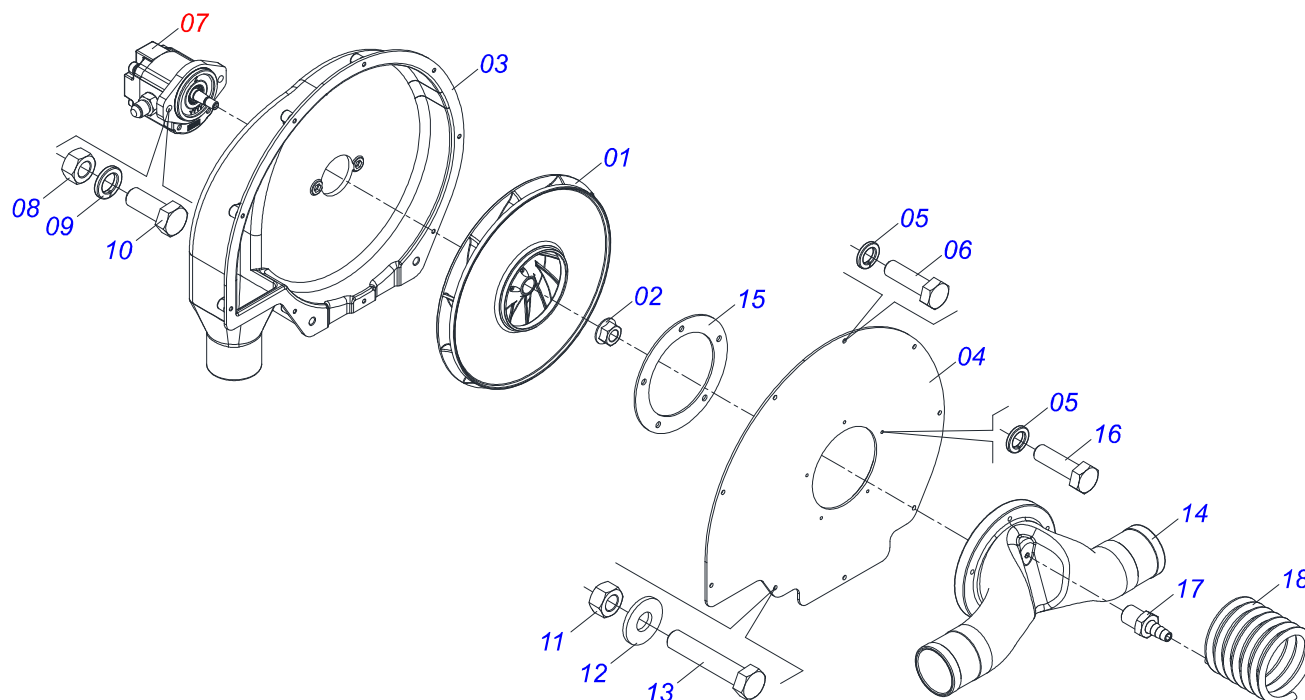


Item	Code	Description	See page	QT
01	0591018230	FAN 428		01
02	0513010047	1/2 NC HEXAGONAL FLANGED NUT		01
03	0591018228	TURBINE BOX		01
04	0531062277	TURBINE FRONT COVER		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		14
06	0503010358	5/16" X 5/8" BOLT		09
07	0531050972	COMPLETE PLM ENGINE	75	01
08	0503013357	3/8 SELF-ADJUSTING NUT		02
09	0503010025	3/8 SPRING WASHER		02
10	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
11	0503011336	1/2" HEX SELF ADJUSTING NUT		02
12	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
13	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
14	0503035455	HYDRAULIC TURBINE SUCTION DUCT		01
15	0503035611	SUCTION DUCT SEAL		01
16	0503010397	5/16" X 1-3/4" BOLT		05
17	0513010681	SPIKE CONNECTION 1/8 BSTP		01
18	0501213777	TECALON TUBE		01

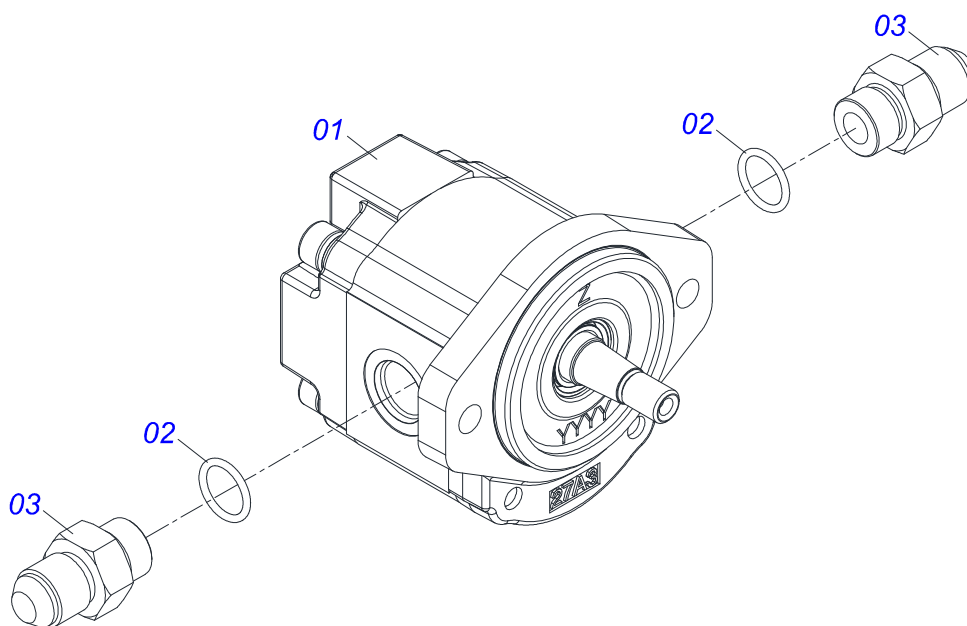


Item	Code	Description	See page	QT
01	0513010038	ENGINE		01
02	0503010045	O'RING		02
03	0521010935	7/8 UNF NIPLE X M22 X 1,5 X 52		02

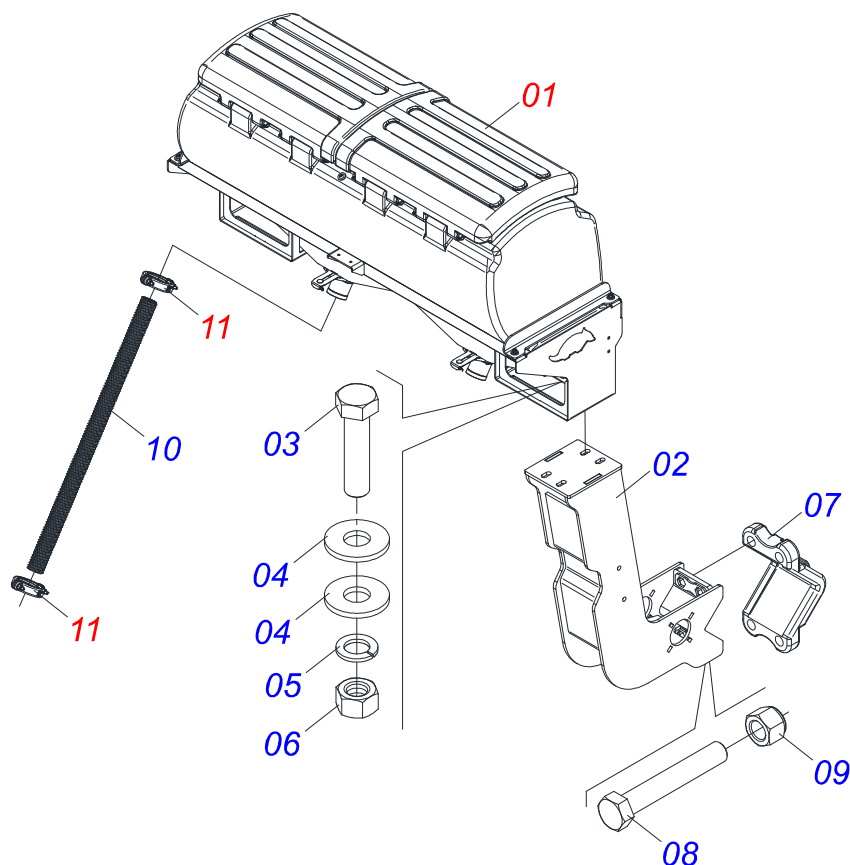


Item	Code	Description	See page	QT
01	0521056677	SUPPORT CSU 1 BOX 10 MOUTH	77	02
02	0531066515	TOWER SUPPORT SUPPORT		04
03	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		16
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		32
05	0503010025	3/8 SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0502012789	FIXER SUPPORT FERTILIZER ROW		04
08	0503017857	BOLT 5/8 UNF 4		16
09	0503010811	5/8" UNF SELF ADJUSTING NUT		16
10	0531059865	RIGHT SEED CONDUCTOR WITH PROTECTION		09
11	0531050237	3" RIGHT SEED CONDUCTOR FIXER	78	18

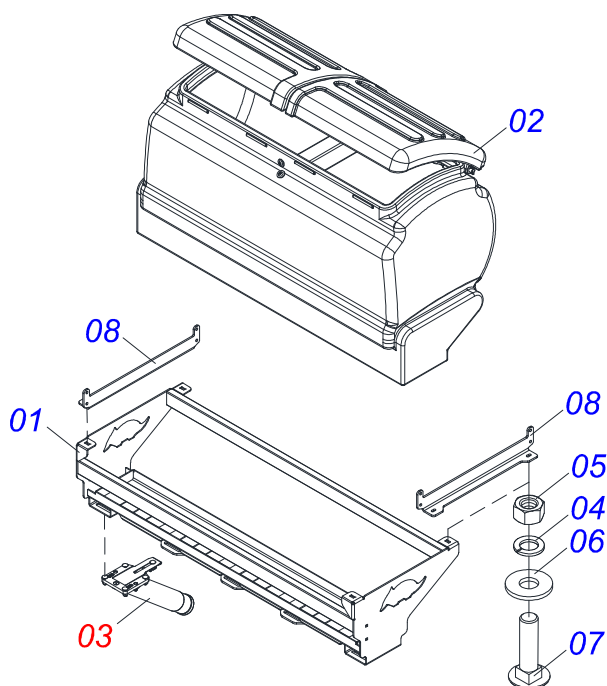


Item	Code	Description	See page	QT
01	0531060258	SUPPORT CSU 10/5 MOUTH		01
02	0503062587	FERTILIZER HOPPER ASSY		01
03	0531054470	3" X 400 SEED NOZZLE WITH FIXING	79	05
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
07	0501011643	3/8 X 1"BOLT		04
08	0591011361	SEED SILO FIXING BODY		02

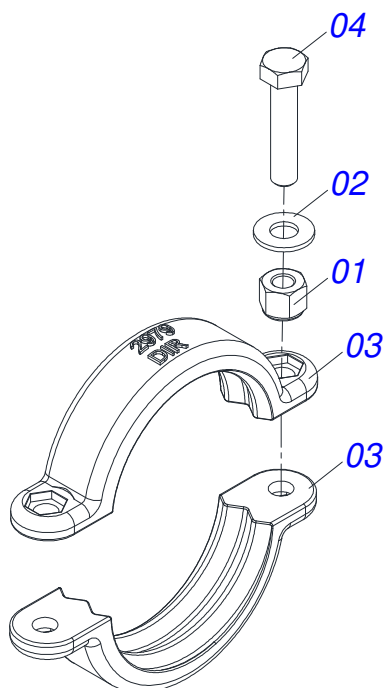


Item	Code	Description	See page	QT
01	0503013759	NUT		02
02	0501010694	FLAT WASHER 32,50 X 75 X 4,75		02
03	0502012979	CLAMP 3 RIGHT CSU		02
04	0503010421	5/16" X 1-1/2" BOLT		02

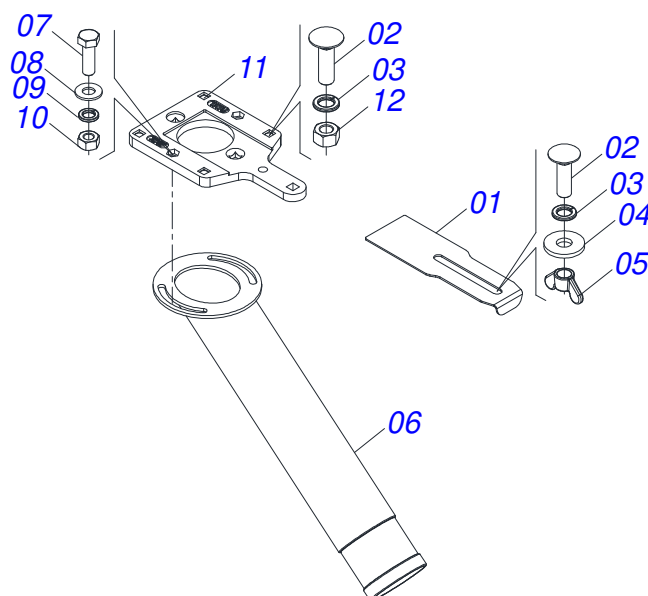


Item	Code	Description	See page	QT
01	0571015779	ARTICULATION NOZZLE SUPPORT LID	01	
02	0501010942	3/8" X 1-1/4" BOLT	05	
03	0503010025	3/8 SPRING WASHER	05	
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER	01	
05	0503010209	3/8" UNC BUTTERFLY NUT	01	
06	0531063447	CONDUCTOR	01	
07	0503010371	5/16" X 1" BOLT	02	
08	0501010694	FLAT WASHER 32,50 X 75 X 4,75	02	
09	0503010179	LOCK WASHER 5/16 ZN 1K01528	02	
10	0503010337	NUT 5/16 UNC G.5 ZN	02	
11	0502012767	SEED NOZZLE FIXER SUPPORT	01	
12	0503010026	3/8" NUT	04	

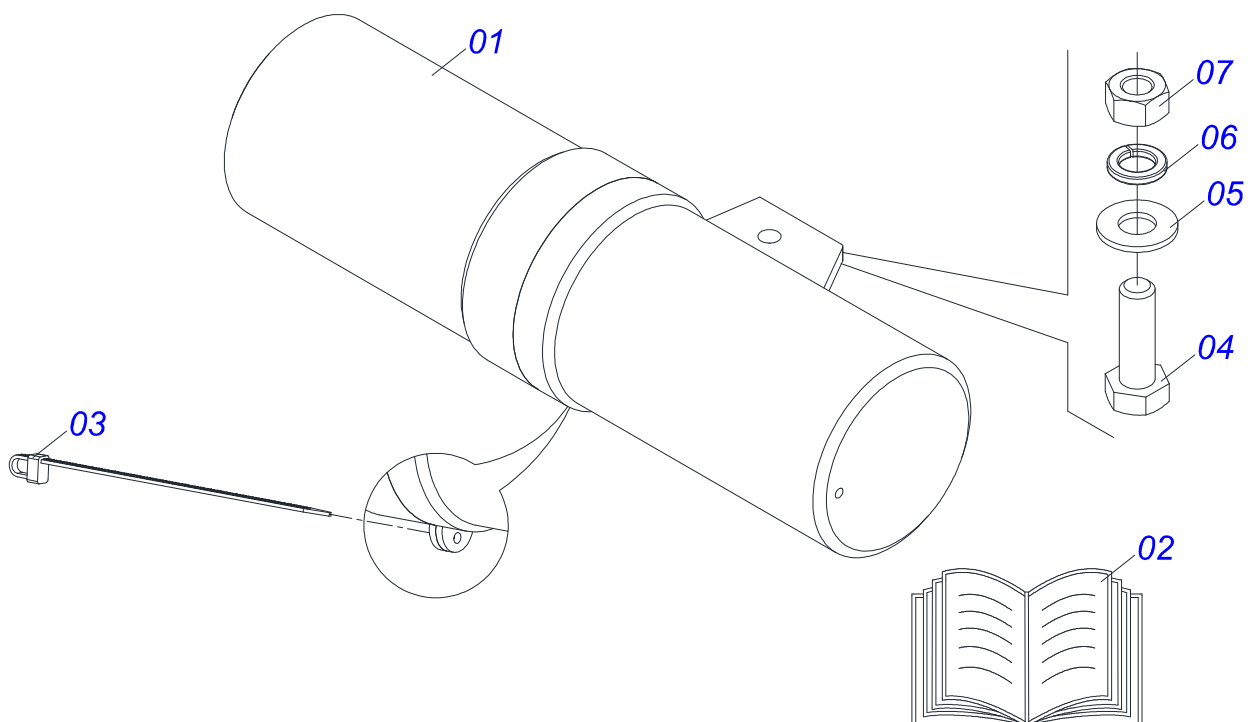

Item	Code	Description	See page	QT
01	0503060100	SUPPORT INSTRUCTION MANUAL		01
02	0511034814	MANUAL STORAGE TUBE ASSY		01
03	0503010267	NYLON CLAMP 3,60 X 1,3 X 155 MM		01
04	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
05	0501010694	FLAT WASHER 32,50 X 75 X 4,75		01
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
07	0503010337	NUT 5/16 UNC G.5 ZN		01

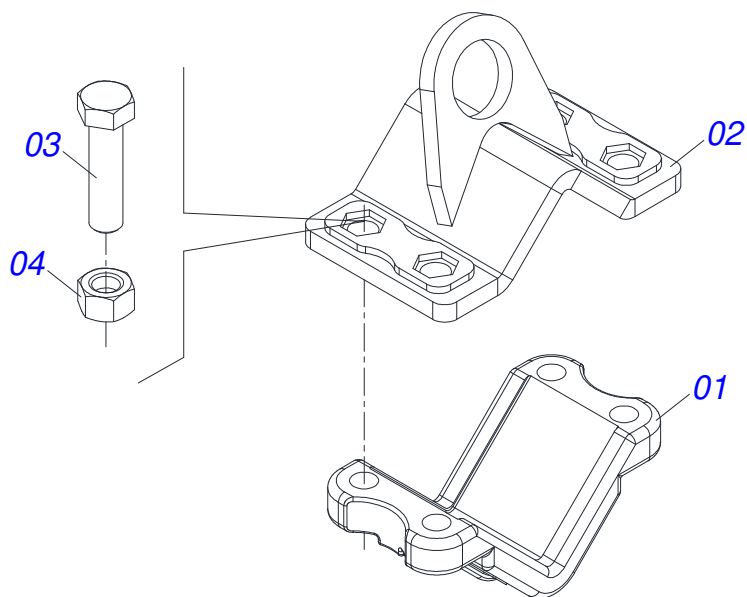


Item	Code	Description	See page	QT
01	0502012789	FIXER SUPPORT FERTILIZER ROW		01
02	0521067033	FRAME LIFTING SUPPORT		01
03	0503017960	5/8" X 3-12" BOLT		04
04	0503010811	5/8" UNF SELF ADJUSTING NUT		04

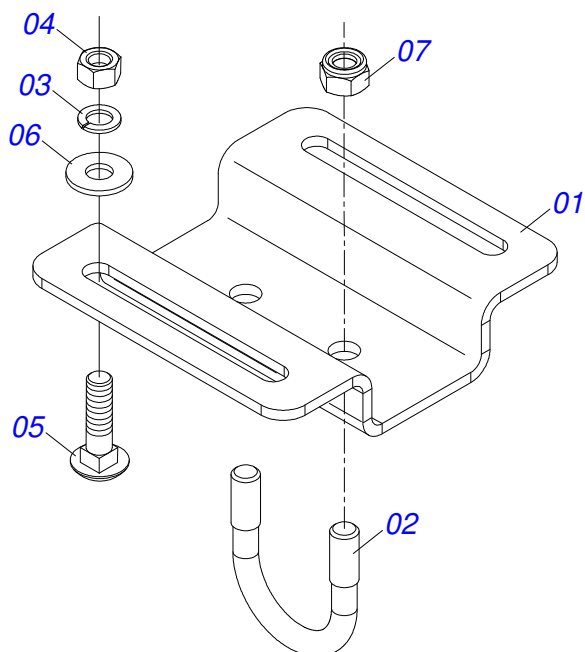

Item	Code	Description	See page	QT
01	0581011989	SIDE BODY FIXER PLATFORM		01
02	0551019884	45 X 50 X 3/8 FASTENER		01
03	0503010025	3/8 SPRING WASHER		02
04	0503010026	3/8" NUT		02
05	0501011643	3/8 X 1"BOLT		02
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503013357	3/8 SELF-ADJUSTING NUT		02

ROW MARKER DISC ASSEMBLY


0501050633

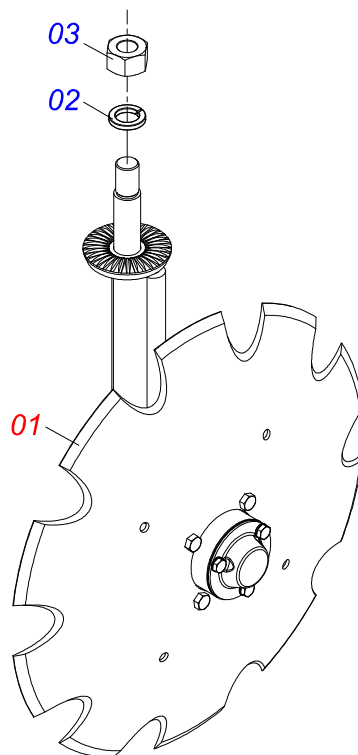


Item	Code	Description	See page	QT
01	0511053904	ROW MARKER DISC	84	01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" ZN G.5 (HEAVY) UNC HEX NUT		01

ROW MARKER DISC


0511053904

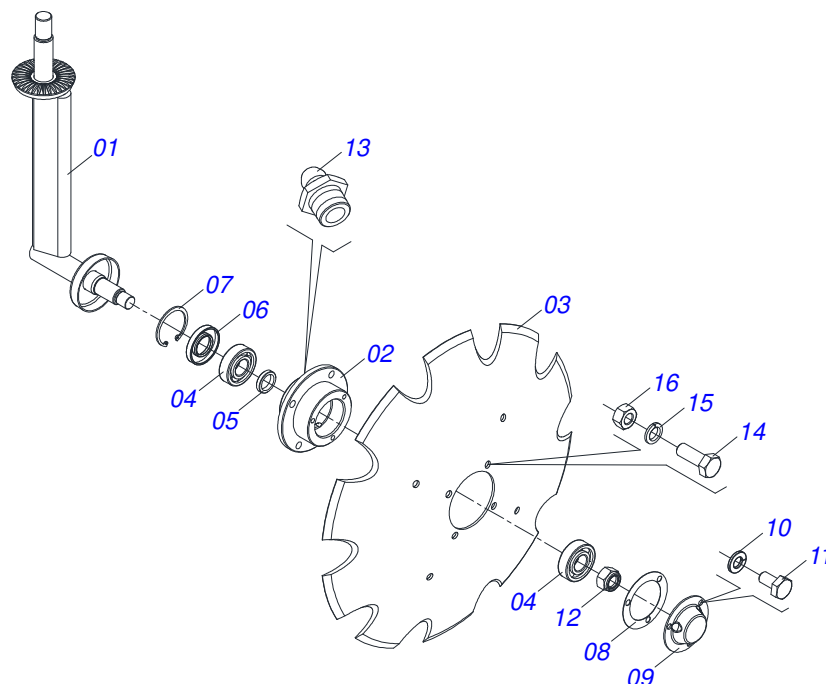


Item	Code	Description	See page	QT
01	0501066800	ROW MARKER DISC AXLE ASSY		01
02	0502011907	DEPTH CONTROL WHEEL HUB		01
03	0602023110	DR16X3 NOTCHED DISC BLADE		01
04	0503010269	6204 BALL BEARING		02
05	0501013636	SPACING SLEEVE		01
06	0503010689	SEAL 00763-BR		01
07	0503011105	SEAL RING		01
08	0503030757	2.9\" X 2\" X 0.02\" JOINT		01
09	0521019178	PROTECTION LID		01
10	0503011441	SPRING WASHER		03
11	0503014729	1/4\" UNF X 1/2\" BOLT		03
12	0503010878	5/8\" SELF ALIGNING NUT		01
13	0503010691	1/4\" GREASE FITTING		01
14	0503010358	5/16\" X 5/8\" BOLT		04
15	0503011444	SPRING WASHER 5/16\"		04
16	0503010337	NUT 5/16 UNC G.5 ZN		04

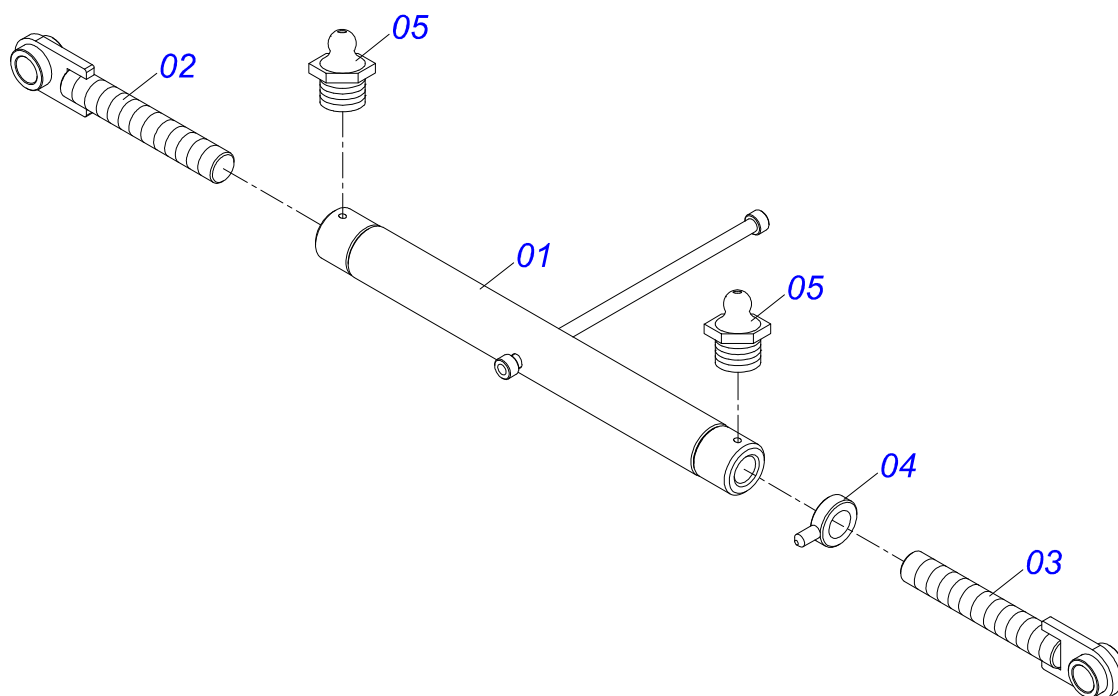


Item	Code	Description	See page	QT
01	0501069529	653 TURNBUCKLE		01
02	0521065959	JACK R.1.1/2 UNC RIGHT X 240		01
03	0521065960	JACK R.1.1/2 UNC LEFT X 240		01
04	0501061056	1.1/2" RIGHT LOCK-NUT		01
05	0503010002	1800 GREASE FITTING		02

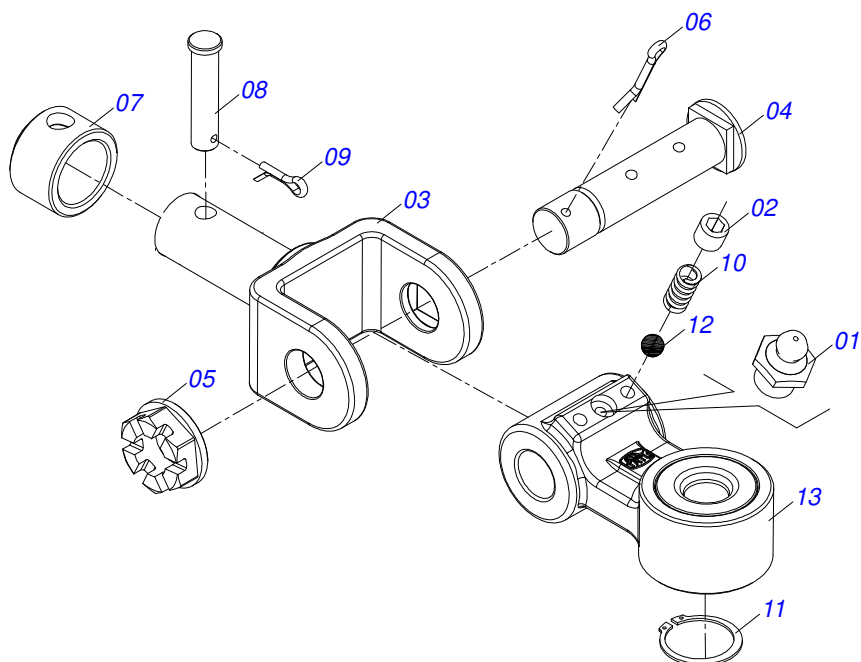


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		01
02	0503016482	BOLT		02
03	0502040846	U TRACTOR HITCH		01
04	0581019654	SCREW ASSY		01
05	0501011301	1.1/2" UNC 6FPP 2.5/16" NUT		01
06	0503010010	SPLIT PIN 1/4" X 2.1/2"		01
07	0521010681	BUSHING COUPLING BODY		01
08	0521010639	COUPLING SHAFT		01
09	0503010571	1/4" X 1.1/2" SPLIT PIN		01
10	0503033731	LEFT COMPRESSION SPRING		02
11	0503010396	501060 CLAMPING RING (FOR AXLE)		01
12	0503011331	3/8 BALL		02
13	0501110778	TRACTOR HITCH		01

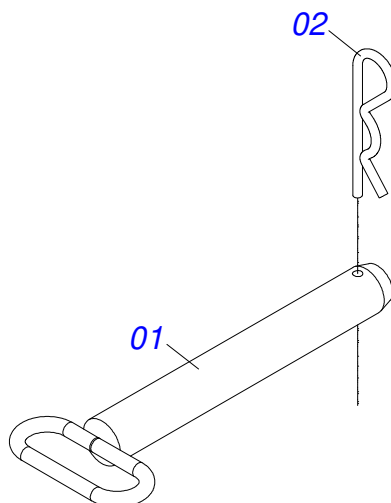


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

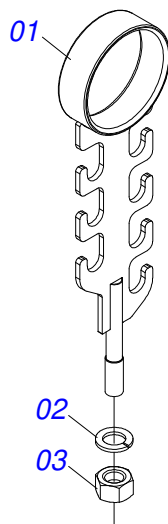

Item	Code	Description	See page	QT
01	0521066302	HOSE HOLDER		01
02	0503010023	3/4" SPRING WASHER		01
03	0503010014	3/4" ZN G.5 (HEAVY) UNC HEX NUT		01

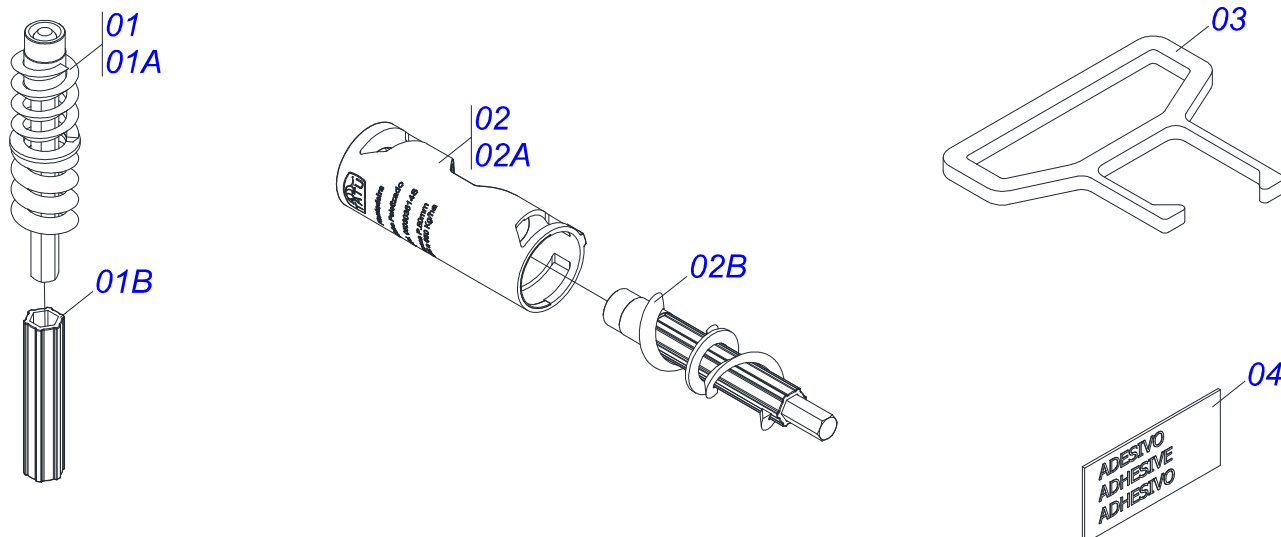


Item	Code	Description	See page	QT
01	0531058988	P.16 ENDLESS THREAD WITH COATING		09
01A	0531065012	ALPHA FERTILIZER METERING P.16MM WORM THREAD		01
01B	0503035859	SUPPORT SLEEVE		01
02	0531058992	PELLETIZED FERTILIZER KIT P.50 125 TO 650 KG/HA ALPHA		09
02A	0501111196	PELLETED FERTILIZER METERING COATING		01
02B	0531058987	ENDLESS THREAD WITH AXLE COVERING		01
03	0501214546	SPRING KEY		01
04	0503035928	ADHESIVE LABEL FERTILIZER TABLE ALPHA P16.5		01

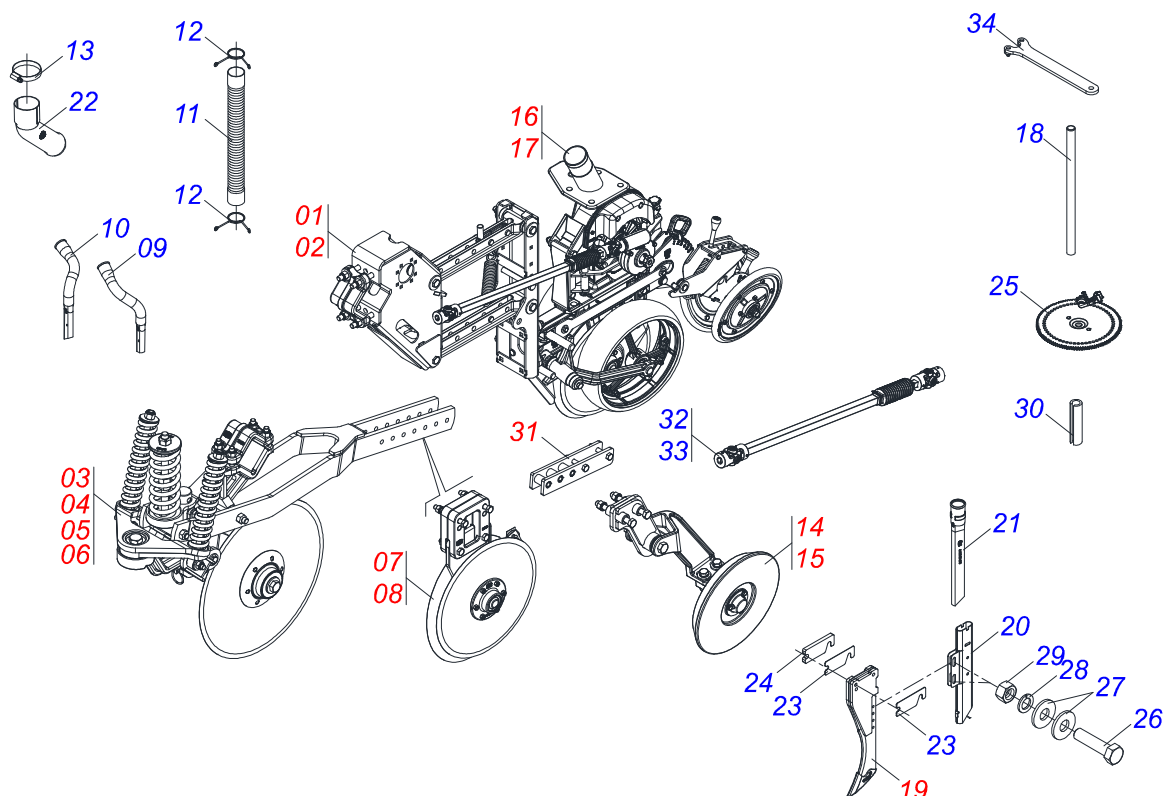

Item	Code	Description	See page	QT
01	0541052285	FRONT SHORT SEED ROW	91	01
02	0541052286	FRONT LONG SEED LINE	92	01
03	0541050737	SHORT FERTILIZER ROW	93	01
04	0541052319	ROW LONG FERTILIZER	94	01
05	0541052224	SHORT FERTILIZER ROW	95	01
06	0541052830	ROW LONG FERTILIZER	96	01
07	0521054769	LEFT DDD FERTILIZER WITH SUPPORT	103	01
08	0521054768	RIGHT DDD FERTILIZER WITH SUPPORT	104	01
09	0503030391	RIGHT FERTILIZER NOZZLE		01
10	0503030392	LEFT FERTILIZER NOZZLE		01
11	0503036154	HOSE 2 X 2 X 505		01
12	0503031076	2" HOSE CLAMP		01
13	0503010246	CLAMP		01
14	0531052159	LEFT IRON COVERING WHEEL	111	01
15	0531052160	RIGHT IRON COVERING WHEEL	112	01
16	0541052328	RIGHT REAR SPI	116	01
17	0541052327	REAR LEFT	117	01
18	0531013600	PRESS ADJUSTMENT LEVER		01
19	0521053946	SCARING ROD	133	01
20	0521069127	BOTTOM NOZZLE FERTILIZER		01
21	0503030483	FERTILIZER SOCKET		01
22	0503031050	CURVED CONDUCTOR		01
23	0511017969	0.1" SPACING PLATE		01
24	0511018662	SPACING PLATE		01
25	0503062763	CONVERSION ASSY FOR DISTRIBUTOR SOY / BEANS		01
26	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
27	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
28	0503010025	3/8 SPRING WASHER		01
29	0503010026	3/8" NUT		01
30	0503011855	0.2" X 1.8" SPRING PIN		01
31	0521057957	FIXED ROD EXTENSION WITH FIXATION	134	01


Item	Code	Description	See page	QT
32	0503064041	CARDAN T.S 16,00 X Q 15,90 X Q 22 X 697	135	01
33	0503064248	CARDAN 16XQ15,9XQ22X827		01
34	0521068982	DISC BLADE HUB KEY		01

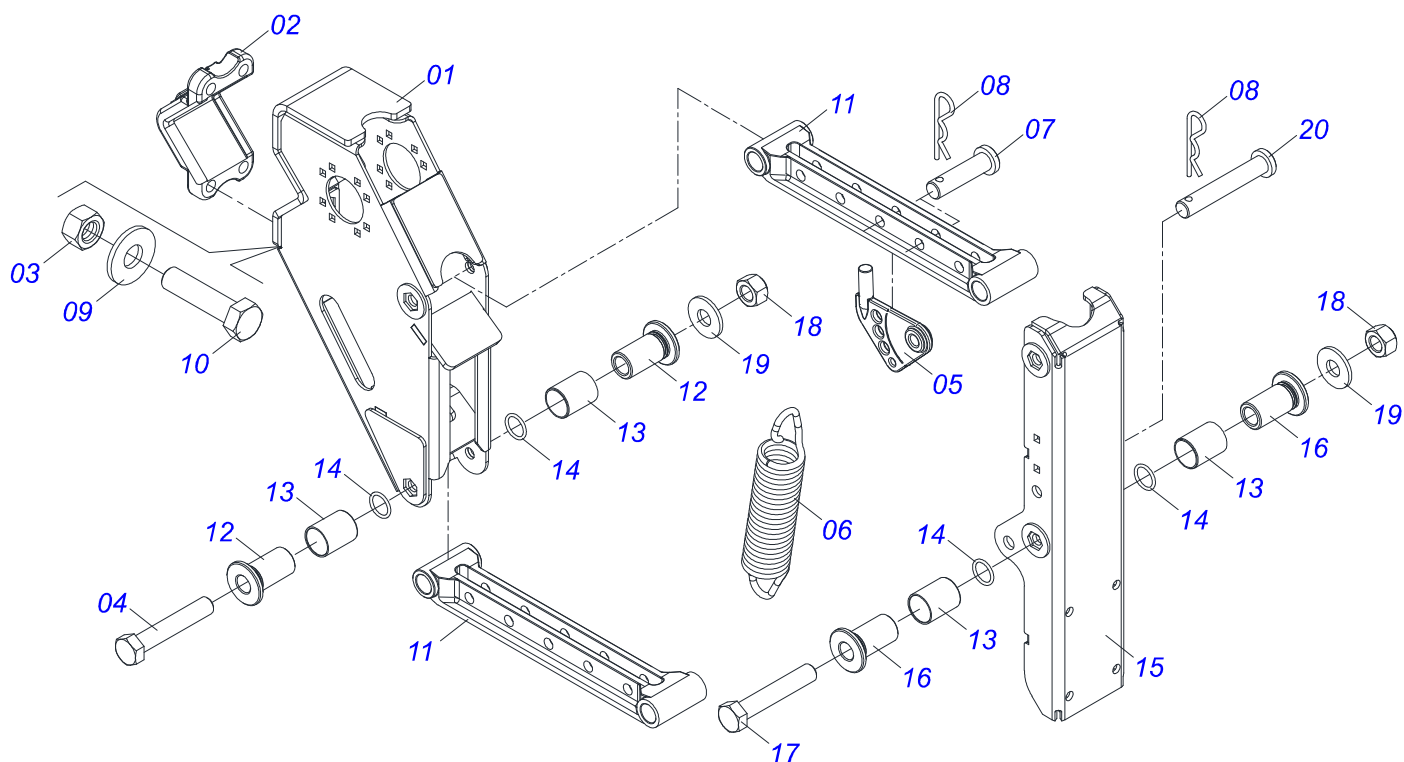

Item	Code	Description	See page	QT
01	0531067538	FRONT CHASSIS SEED ROW	01	
02	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
03	0503010811	5/8" UNF SELF ADJUSTING NUT	04	
04	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN	02	
05	0502012812	SEED ROW ADJUSTMENT LEVER ASSY	01	
06	0503034198	SPRING TRACTION 40 X 198 X 5,5	01	
07	0571018883	PIN FIXER SPRING	03	
08	0503030168	HITCH PIN CLIP	04	
09	0501012140	FLAT WASHER 16,50 X 40 X 4,00 ZN	04	
10	0503017857	BOLT 5/8 UNF 4	04	
11	0591011156	PIVOT ARM SEED ROW	02	
12	0591011157	SPACER LOWER SLEEVE	04	
13	0503019273	AUTO LUBRICANT SLEEVE	08	
14	0503010045	O'RING	08	
15	0531061528	REAR SUPPORT ROW	01	
16	0591012829	SPACER LOWER SLEEVE	04	
17	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN	02	
18	0503013389	5/8" SELF LOCKING NUT	04	
19	0591011409	FLAT WASHER 16,5 X 35 X 3,00	04	
20	0591012828	LOCK PIN ROW ARTICULAT	01	

FRONT LONG SEED LINE


0541052286

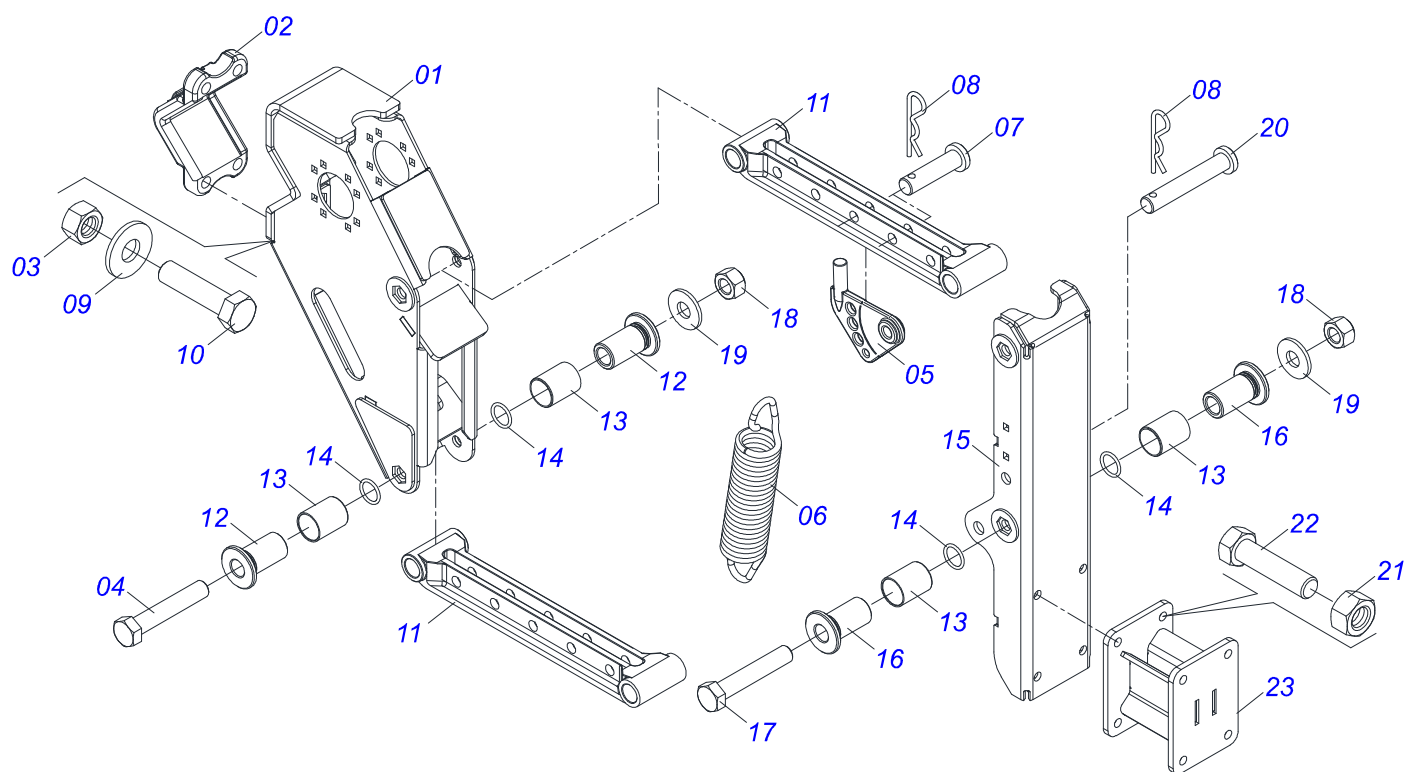


Item	Code	Description	See page	QT
01	0531067538	FRONT CHASSIS SEED ROW		01
02	0502012789	FIXER SUPPORT FERTILIZER ROW		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		02
05	0502012812	SEED ROW ADJUSTMENT LEVER ASSY		01
06	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
07	0571018883	PIN FIXER SPRING		03
08	0503030168	HITCH PIN CLIP		04
09	0501012140	FLAT WASHER 16,50 X 40 X 4,00 ZN		04
10	0503017857	BOLT 5/8 UNF 4		04
11	0591011156	PIVOT ARM SEED ROW		02
12	0591011157	SPACER LOWER SLEEVE		04
13	0503019273	AUTO LUBRICANT SLEEVE		08
14	0503010045	O'RING		08
15	0531061528	REAR SUPPORT ROW		01
16	0591012829	SPACER LOWER SLEEVE		04
17	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		02
18	0503013389	5/8" SELF LOCKING NUT		04
19	0591011409	FLAT WASHER 16,5 X 35 X 3,00		04
20	0591012828	LOCK PIN ROW ARTICULAT		01
21	0503012136	NUT 1/2 NF		04
22	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
23	0531061136	EXTENSION		01

SHORT FERTILIZER ROW

0541050737

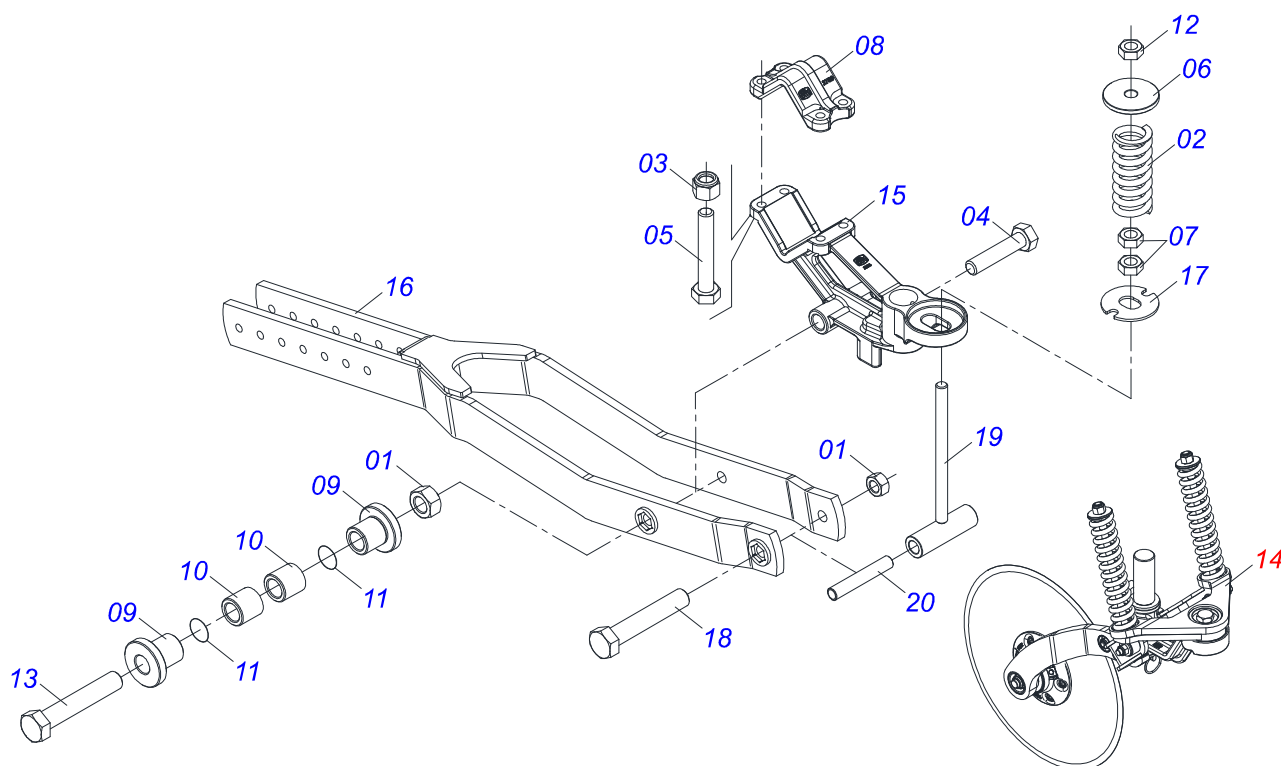


Item	Code	Description	See page	QT
01	0503011255	3/4" LOCK NUT		02
02	0503034320	COMPRESSION SPRING		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0503011854	5/8" X 1-1/4" BOLT		02
05	0503017960	5/8" X 3-12" BOLT		04
06	0502012813	FLANGE WASHER SPRING		01
07	0503010417	7/8" NUT		02
08	0502012789	FIXER SUPPORT FERTILIZER ROW		01
09	0591011147	SLEEVE ARM ROW		02
10	0503019278	LUBRICANT SLEEVE		02
11	0503011109	O'RING 2-119 N 3006 9B		02
12	0503011254	7/8" HEX SELF ADJUSTING NUT		01
13	0521010066	3/4" X 8.12" BOLT		01
14	0541050740	22" DISC BLADE ASSY	97	01
15	0591011145	FERTILIZER ROW SUPPORT		01
16	0531066467	FERTILIZER ROW ARM		01
17	0571019032	SUPPORT WASHER		01
18	0501010164	3/4" X 7 BOLT		01
19	0531066466	SPRING REGULATOR		01
20	0501312988	SLEEVE		01

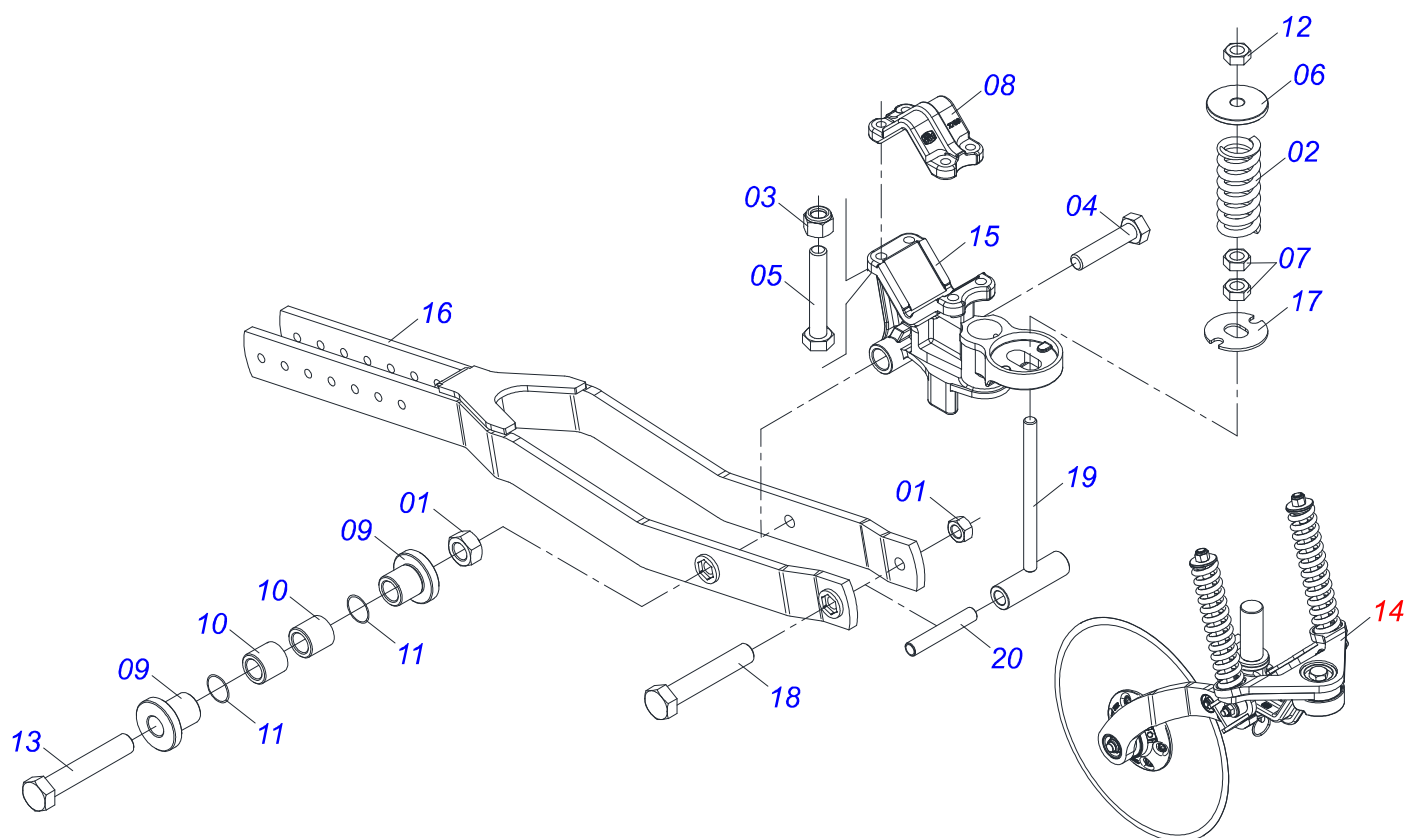


Item	Code	Description	See page	QT
01	0503011255	3/4" LOCK NUT		02
02	0503034320	COMPRESSION SPRING		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0503011854	5/8" X 1-1/4" BOLT		02
05	0503017960	5/8" X 3-12" BOLT		04
06	0502012813	FLANGE WASHER SPRING		01
07	0503010417	7/8" NUT		02
08	0502012789	FIXER SUPPORT FERTILIZER ROW		01
09	0591011147	SLEEVE ARM ROW		02
10	0503019278	LUBRICANT SLEEVE		02
11	0503011109	O'RING 2-119 N 3006 9B		02
12	0503011254	7/8" HEX SELF ADJUSTING NUT		01
13	0521010066	3/4" X 8.12" BOLT		01
14	0541050740	22" DISC BLADE ASSY	97	01
15	0502013119	FERTILIZER LONG LINE SUPPORT		01
16	0531066467	FERTILIZER ROW ARM		01
17	0571019032	SUPPORT WASHER		01
18	0501010164	3/4" X 7 BOLT		01
19	0531066466	SPRING REGULATOR		01
20	0501312988	SLEEVE		01

SHORT FERTILIZER ROW


0541052224

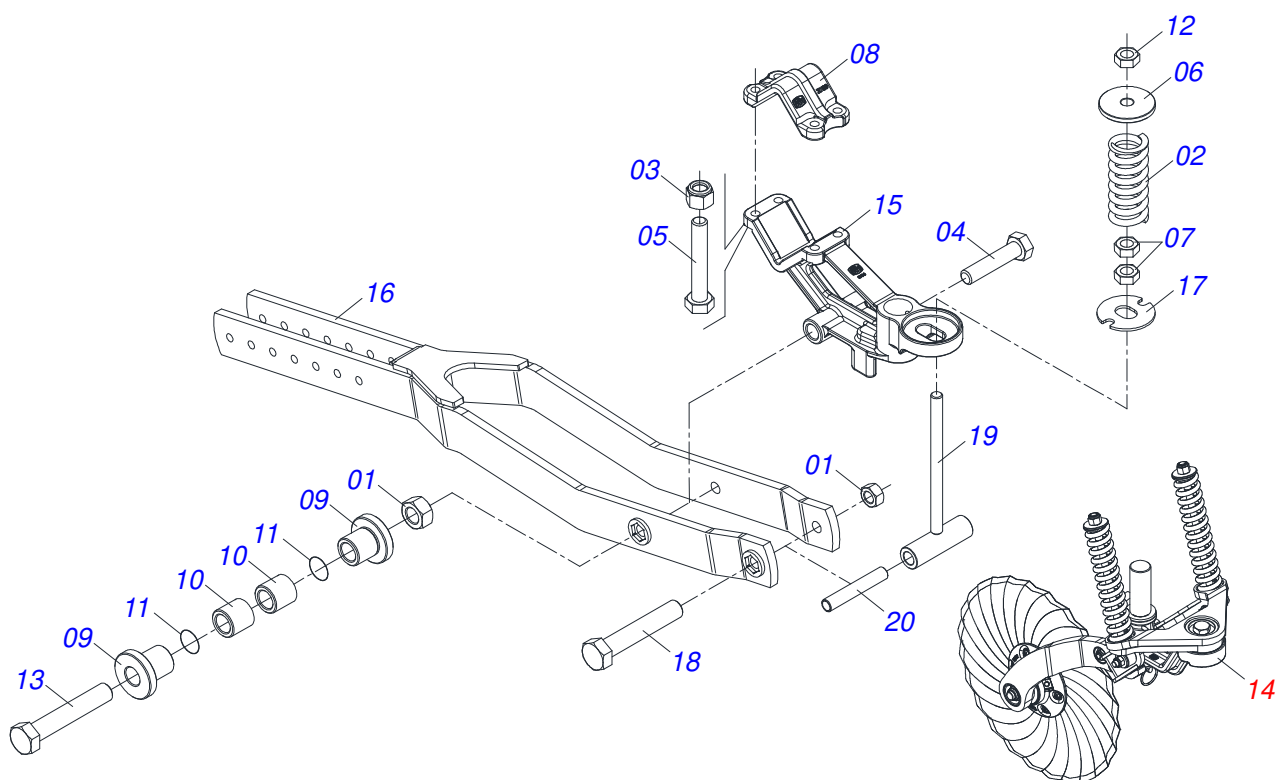


Item	Code	Description	See page	QT
01	0503011255	3/4" LOCK NUT		02
02	0503034320	COMPRESSION SPRING		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0503011854	5/8" X 1-1/4" BOLT		02
05	0503017960	5/8" X 3-12" BOLT		04
06	0502012813	FLANGE WASHER SPRING		01
07	0503010417	7/8" NUT		02
08	0502012789	FIXER SUPPORT FERTILIZER ROW		01
09	0591011147	SLEEVE ARM ROW		02
10	0503019278	LUBRICANT SLEEVE		02
11	0503011109	O'RING 2-119 N 3006 9B		02
12	0503011254	7/8" HEX SELF ADJUSTING NUT		01
13	0521010066	3/4" X 8.12" BOLT		01
14	0541052225	22" WAVY COULTER DISC BLADE ASSY	101	01
15	0591011145	FERTILIZER ROW SUPPORT		01
16	0531066467	FERTILIZER ROW ARM		01
17	0571019032	SUPPORT WASHER		01
18	0501010164	3/4" X 7 BOLT		01
19	0531066466	SPRING REGULATOR		01
20	0501312988	SLEEVE		01

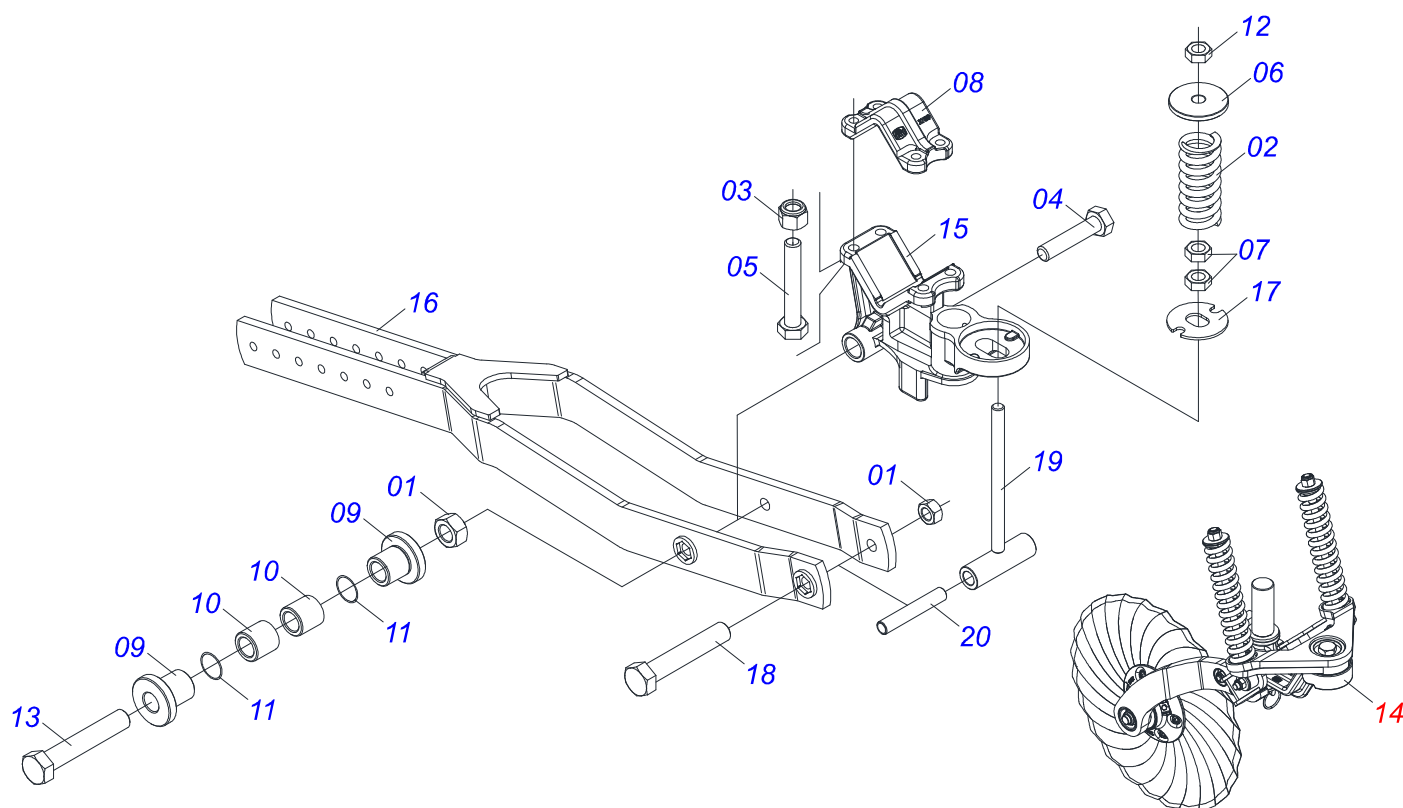


Item	Code	Description	See page	QT
01	0503011255	3/4" LOCK NUT		02
02	0503034320	COMPRESSION SPRING		01
03	0503010811	5/8" UNF SELF ADJUSTING NUT		04
04	0503011854	5/8" X 1-1/4" BOLT		02
05	0503017960	5/8" X 3-12" BOLT		04
06	0502012813	FLANGE WASHER SPRING		01
07	0503010417	7/8" NUT		02
08	0502012789	FIXER SUPPORT FERTILIZER ROW		01
09	0591011147	SLEEVE ARM ROW		02
10	0503019278	LUBRICANT SLEEVE		02
11	0503011109	O'RING 2-119 N 3006 9B		02
12	0503011254	7/8" HEX SELF ADJUSTING NUT		01
13	0521010066	3/4" X 8.12" BOLT		01
14	0541052225	22" WAVY COULTER DISC BLADE ASSY	101	01
15	0502013119	FERTILIZER LONG LINE SUPPORT		01
16	0531066467	FERTILIZER ROW ARM		01
17	0571019032	SUPPORT WASHER		01
18	0501010164	3/4" X 7 BOLT		01
19	0531066466	SPRING REGULATOR		01
20	0501312988	SLEEVE		01

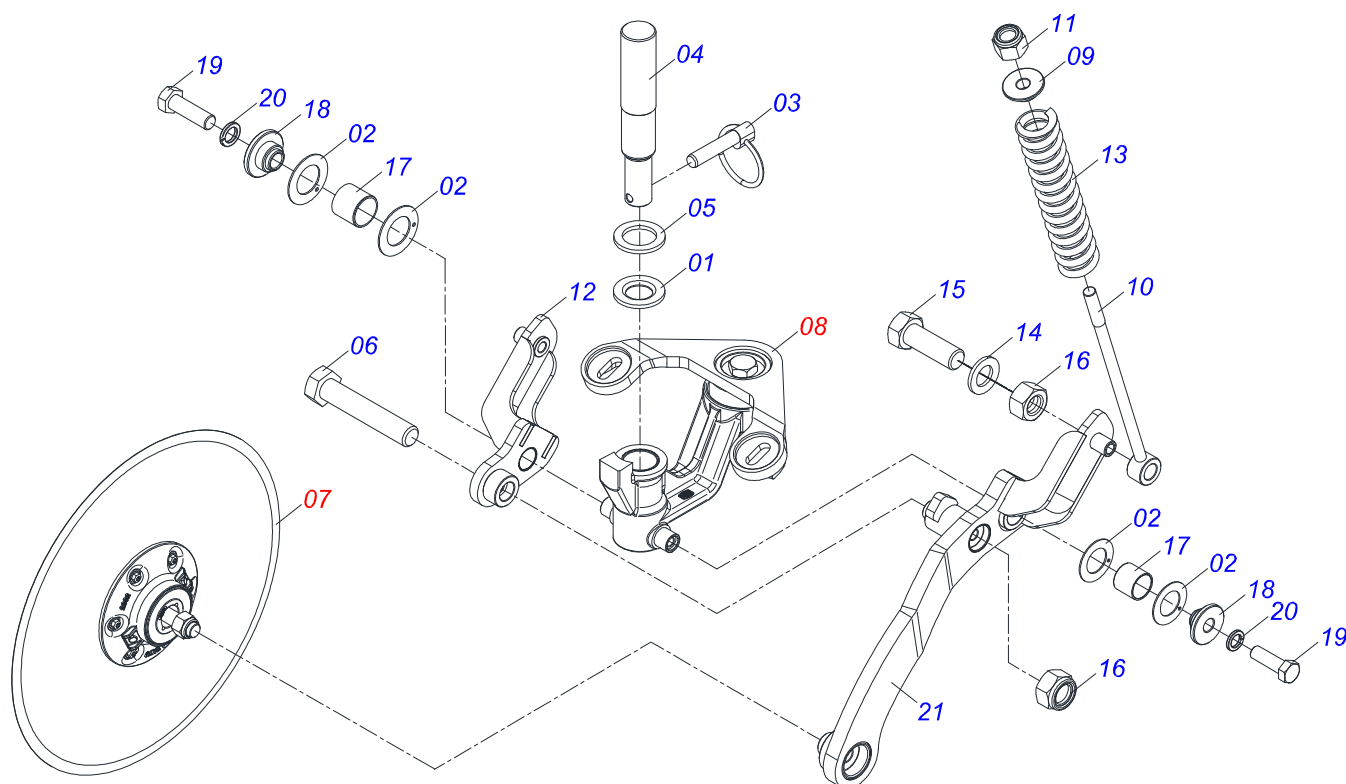


Item	Code	Description	See page	QT
01	0571019034	FLANGE WASHER AXLE		01
02	0503019274	WASHER		04
03	0503030430	7/16 X 2" PIN LOCK		01
04	0591011144	FIXATION AXLE		01
05	0591010628	SHAFT THRUST WASHER		01
06	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		01
07	0541050741	22" DISC HUB	98	01
08	0541050742	SUPPORT SPRING GUIDE	99	01
09	0551015883	SPRING GUIDES SLEEVE		02
10	0521068189	SPRING REGULACION		02
11	0503011075	3/4 UNC LOCK NUT		02
12	0531066471	ARM GUIDE DC 22		01
13	0503031575	COMPRESSION SPRING		02
14	0501012140	FLAT WASHER 16,50 X 40 X 4,00 ZN		02
15	0503010806	5/8" X 3" BOLT		02
16	0503010878	5/8" SELF ALIGNING NUT		03
17	0503019341	LUBRICANT SLEEVE		02
18	0501312998	ARM LOCK GUIDE SLEEVE		02
19	0503011243	5/8" X 2" BOLT		02
20	0503010027	5/8 SPRING WASHER		02
21	0531066470	ARM DC 22		01

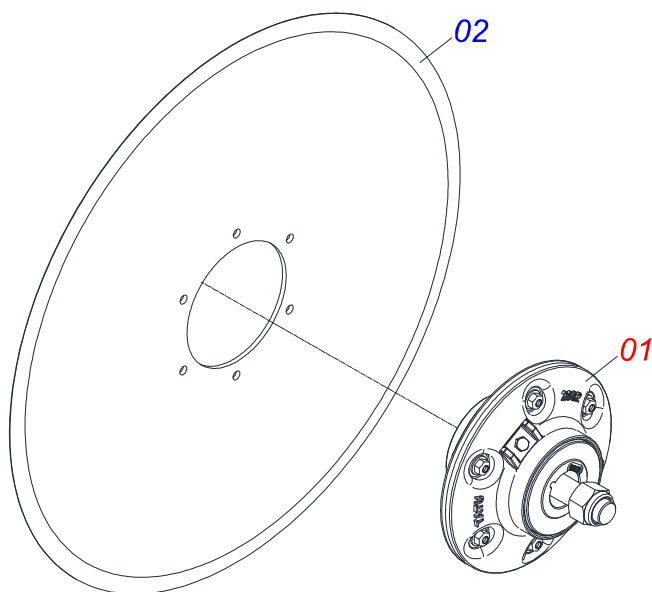

Item	Code	Description	See page	QT
01	0521057680	DISC CUTTING BOX	100	01
02	0603029523	22" X 0.2" FLAT PLAIN DISC		01

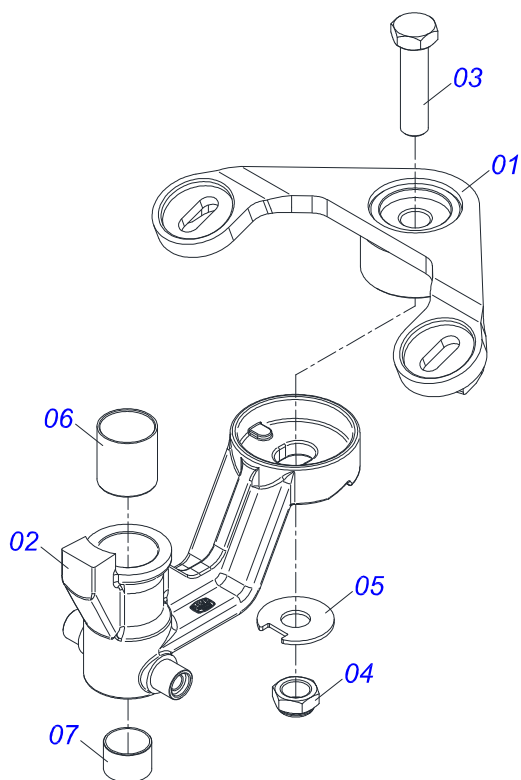


Item	Code	Description	See page	QT
01	0531066469	DOUBLE SPRING GUIDE SUPPORT		01
02	0501313000	SPRING SUPPORT		01
03	0503012660	1" X 4" BOLT		01
04	0503014182	SELF-ADJUSTING NUT		01
05	0501312999	LOWER WASHER		01
06	0503019271	SELF LUBRICATING BUSHING		01
07	0503019277	SLEEVE LUBRICATION SYSTEM		01

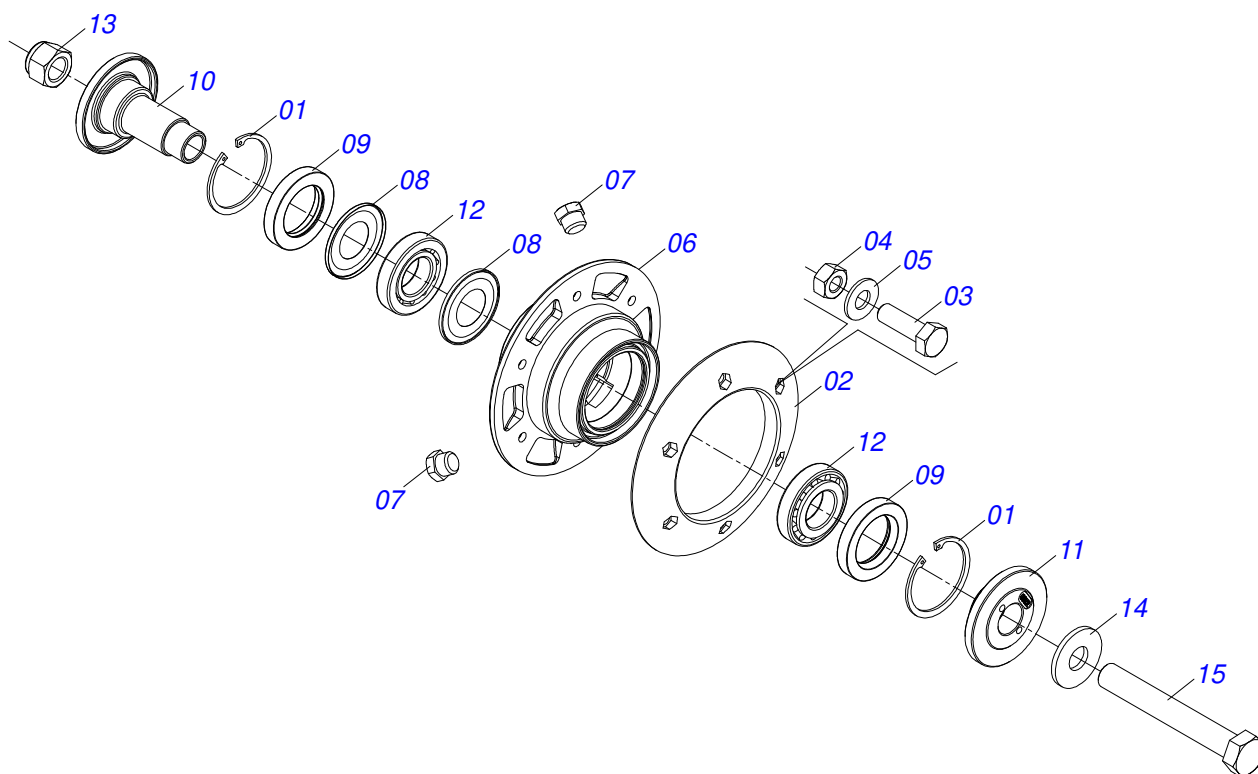


Item	Code	Description	See page	QT
01	0503010370	502072 CLAMPING RING (FOR AXLE)	02	
02	0502020641	BLADE DISC FLANGE	01	
03	0503018825	5/16 UNC UNC BOLT	06	
04	0503013816	5/16" LOCKNUT	06	
05	0501010694	FLAT WASHER 32,50 X 75 X 4,75	06	
06	0502012862	DISC BLADE HUB	01	
07	0511017907	1/8" BSPT X 6 PLUG	02	
08	0503019285	RING	02	
09	0503010590	00674-B SEAL	02	
10	0591012836	CUTTING DISC AXLE	01	
11	0502040872	REGULATORY NUT	01	
12	0503012170	30207 ROLLER BEARING	02	
13	0503010812	7/8" UNF SELF LOCKING NUT	01	
14	0501010067	22.5 X 56 X 4.75 FLAT WASHER	01	
15	0503019283	SCREW 7/8 UNF X 6.1/4	01	

22" WAVY COULTER DISC BLADE ASSY


0541052225

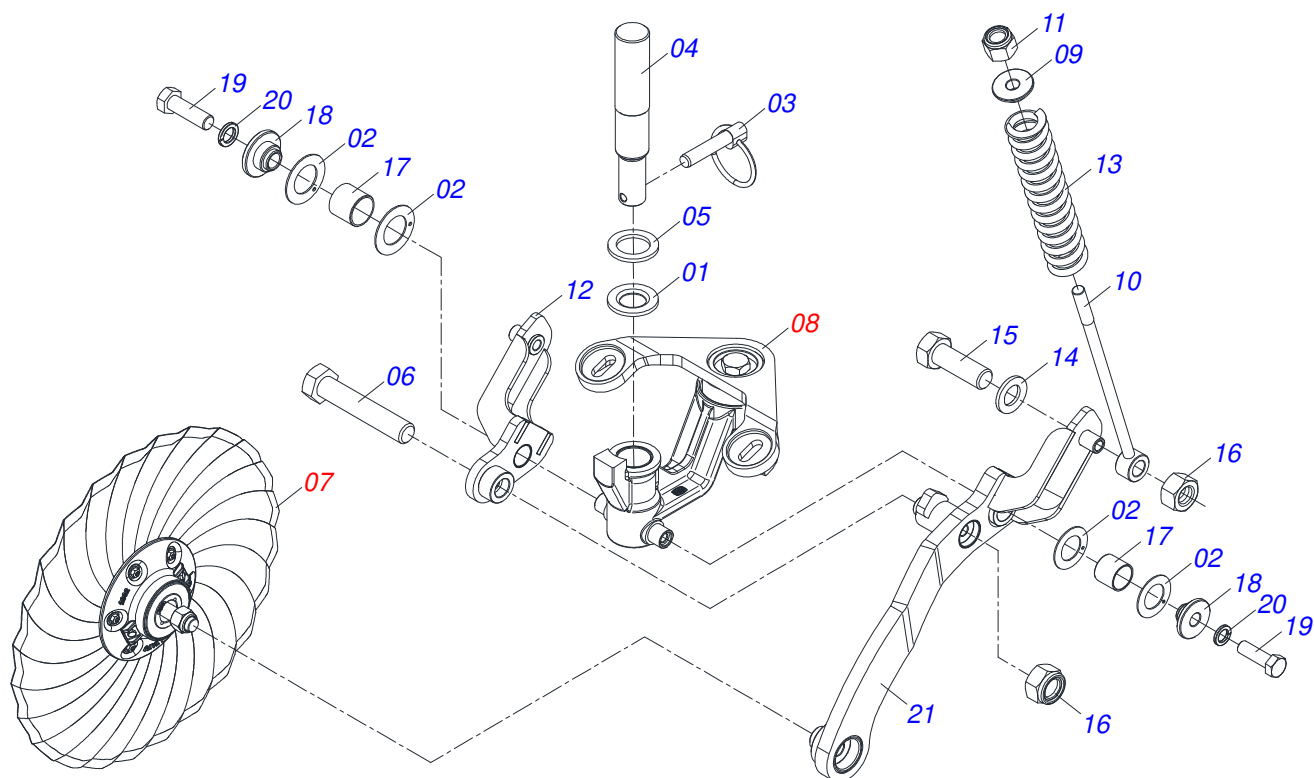


Item	Code	Description	See page	QT
01	0571019034	FLANGE WASHER AXLE		01
02	0503019274	WASHER		04
03	0503030430	7/16 X 2" PIN LOCK		01
04	0591011144	FIXATION AXLE		01
05	0591010628	SHAFT THRUST WASHER		01
06	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		01
07	0541052226	22" WAVY COULTER DISC HUB	102	01
08	0541050742	SUPPORT SPRING GUIDE	99	01
09	0551015883	SPRING GUIDES SLEEVE		02
10	0521068189	SPRING REGULACION		02
11	0503011075	3/4 UNC LOCK NUT		02
12	0531066471	ARM GUIDE DC 22		01
13	0503031575	COMPRESSION SPRING		02
14	0501012140	FLAT WASHER 16,50 X 40 X 4,00 ZN		02
15	0503010806	5/8" X 3" BOLT		02
16	0503010878	5/8" SELF ALIGNING NUT		03
17	0503019341	LUBRICANT SLEEVE		02
18	0501312998	ARM LOCK GUIDE SLEEVE		02
19	0503011243	5/8" X 2" BOLT		02
20	0503010027	5/8 SPRING WASHER		02
21	0531066470	ARM DC 22		01

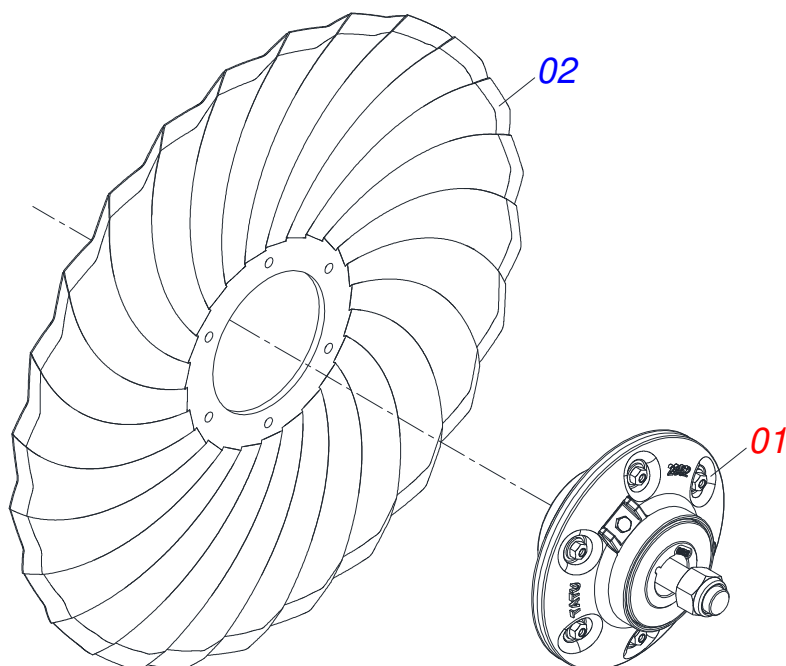

Item	Code	Description	See page	QT
01	0521057680	DISC CUTTING BOX	100	01
02	0607027008	22" WAVY COULTER DISC		01

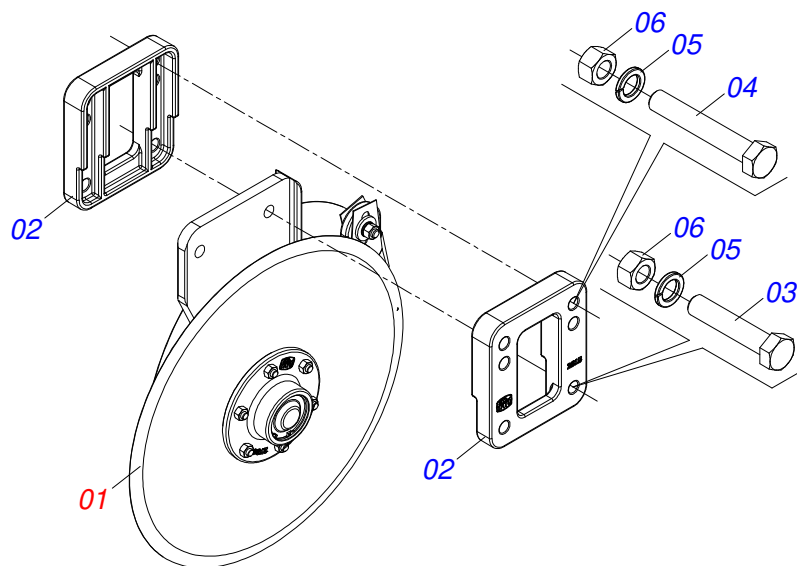


Item	Code	Description	See page	QT
01	0521055869	LEFT DUAL FERTILIZER DISC	105	01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2 UNC G.5 ZN HEX NUT		04

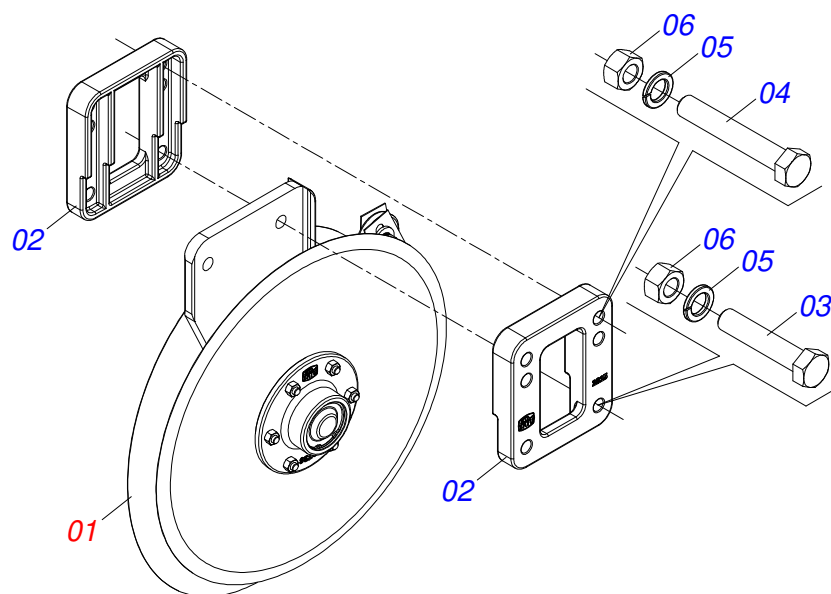


Item	Code	Description	See page	QT
01	0521055868	RIGHT DUAL FERTILIZER DISC	110	01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2 UNC G.5 ZN HEX NUT		04

LEFT DUAL FERTILIZER DISC


0521055869

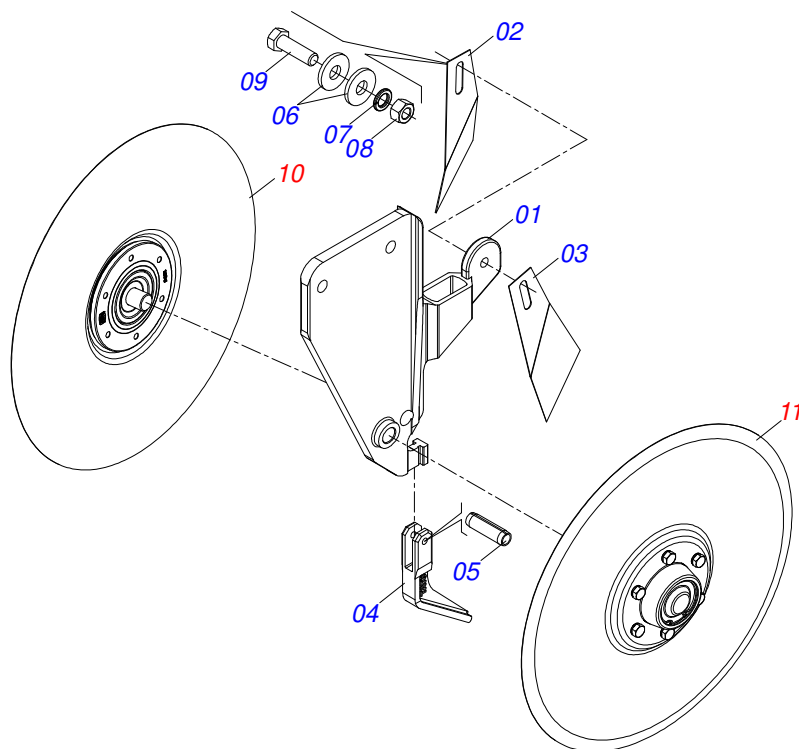


Item	Code	Description	See page	QT
01	0502011161	SUPPORT DDD 15 X 15 LEFT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503010025	3/8 SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 106 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 107 FERTILIZER / SEED		01

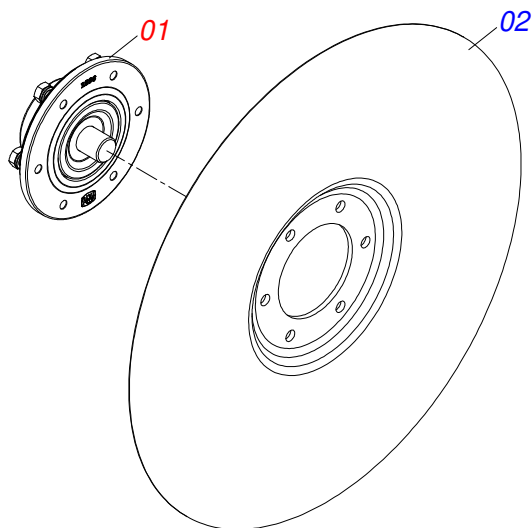


Item	Code	Description	See page	QT
01	0521055864	FERTILIZER/SEED RIGHT HUB ASSY	108	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

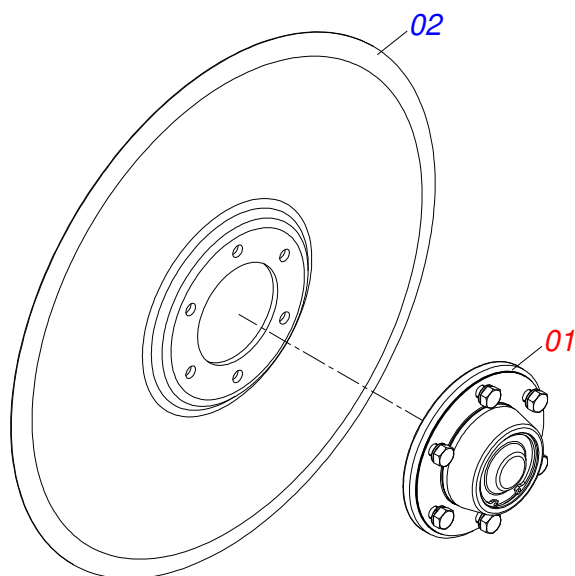


Item	Code	Description	See page	QT
01	0521055865	FERTILIZER/SEED LEFT HUB ASSY	109	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

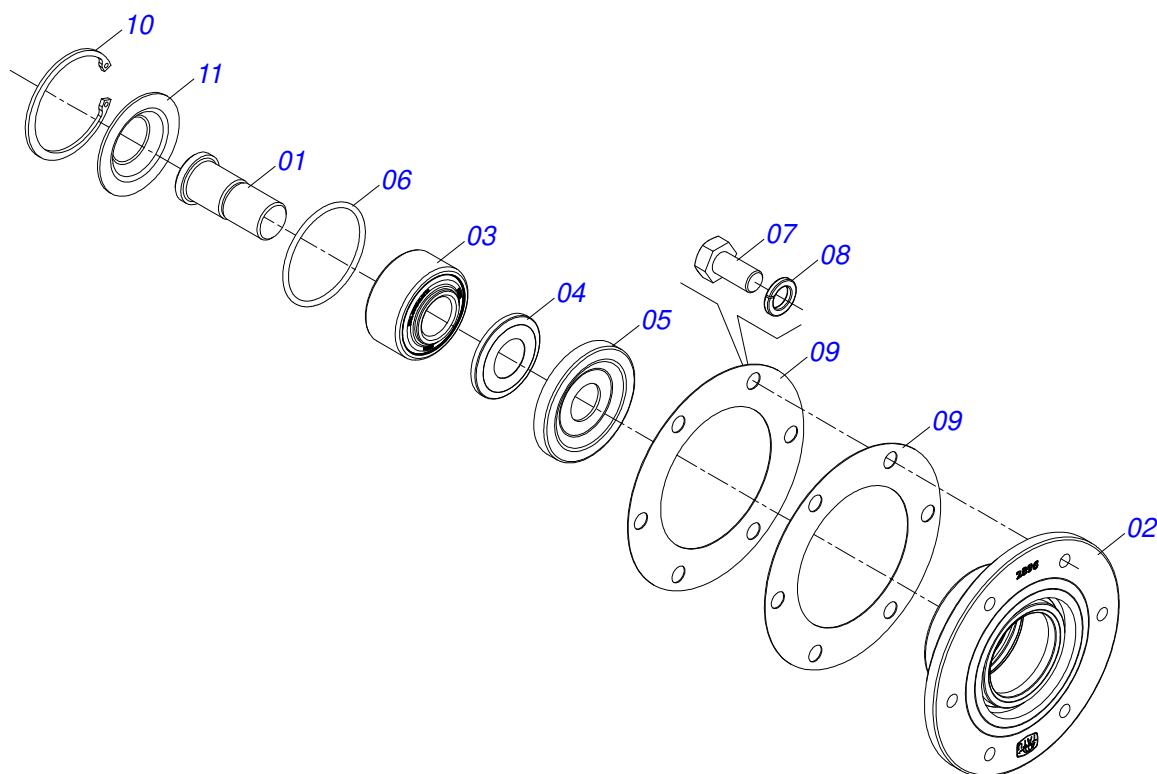

Item	Code	Description	See page	QT
01	0571011150	RIGHT DOUBLE DISC AXLE		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

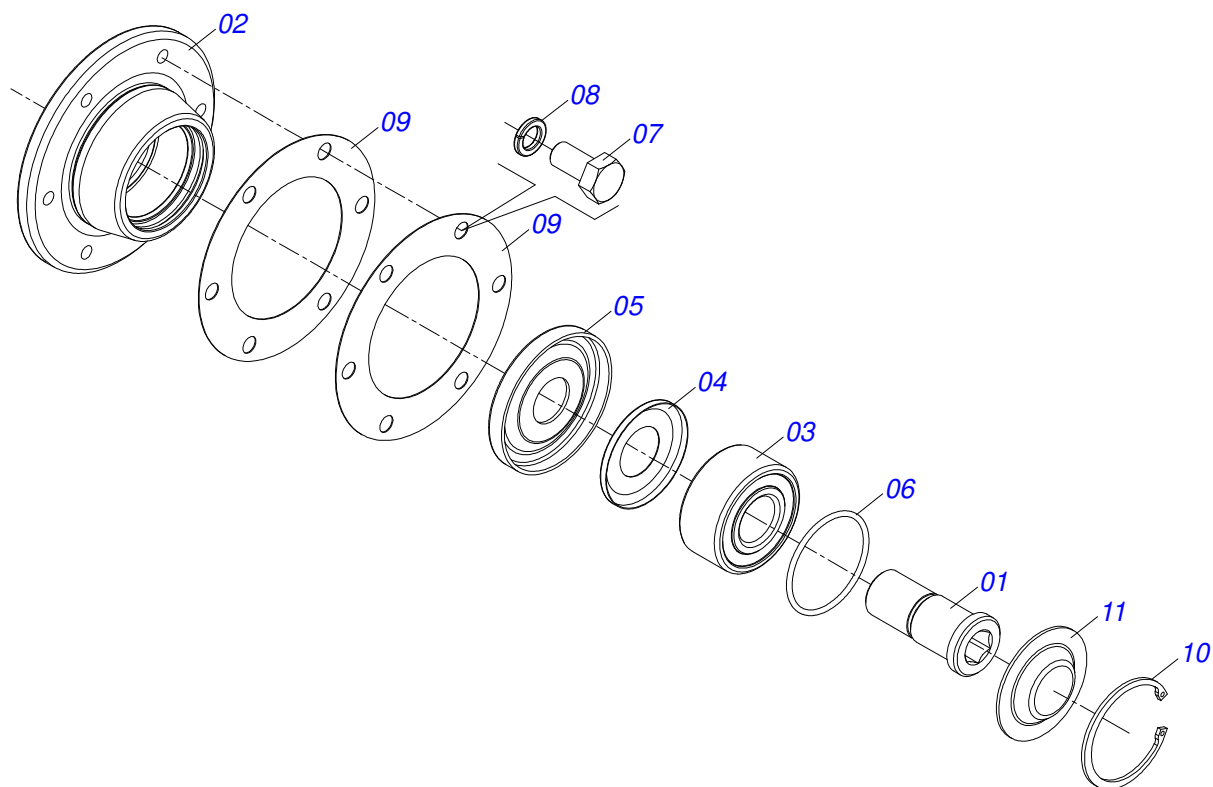


Item	Code	Description	See page	QT
01	0571011151	LEFT DOUBLE DISC HUB		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

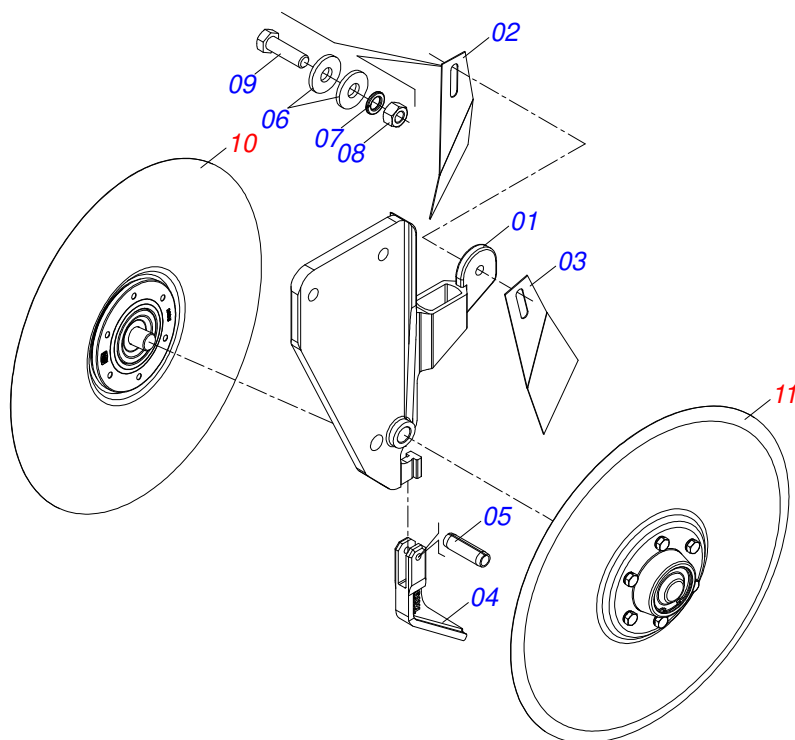


Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503010025	3/8 SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 106 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 107 FERTILIZER / SEED		01

LEFT IRON COVERING WHEEL


0531052159

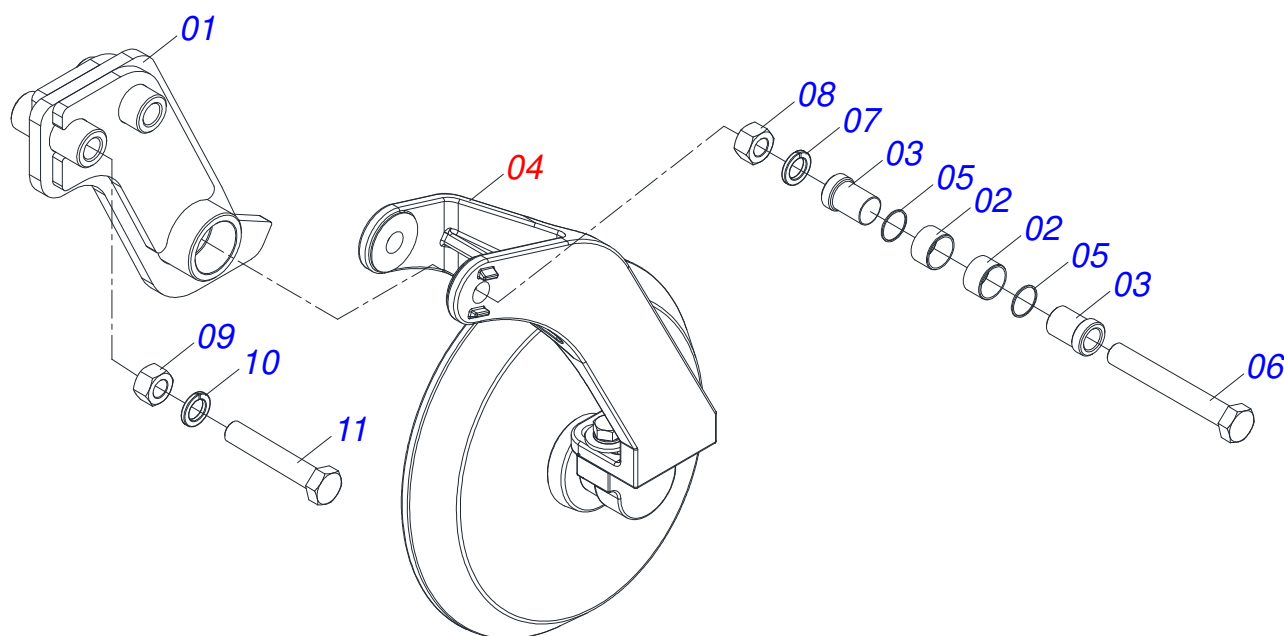


Item	Code	Description	See page	QT
01	0531062676	LEFT SUPPORT ARM WHEEL COVERING IRON PEANUTS		01
02	0503019272	LUBRICANT SLEEVE		02
03	0591016234	SIDE GUIDE SLEEVE		02
04	0501056288	RIGHT IRON COVERING WHEEL	113	01
05	0503010410	RING		02
06	0501010163	5/8" X 4-1/2" BOLT		01
07	0503010027	5/8 SPRING WASHER		01
08	0503010013	5/8 UNC G.5 ZN HEX NUT		01
09	0503010060	1/2 UNC G.5 ZN HEX NUT		02
10	0503010019	1/2" SPRING WASHER		02
11	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02

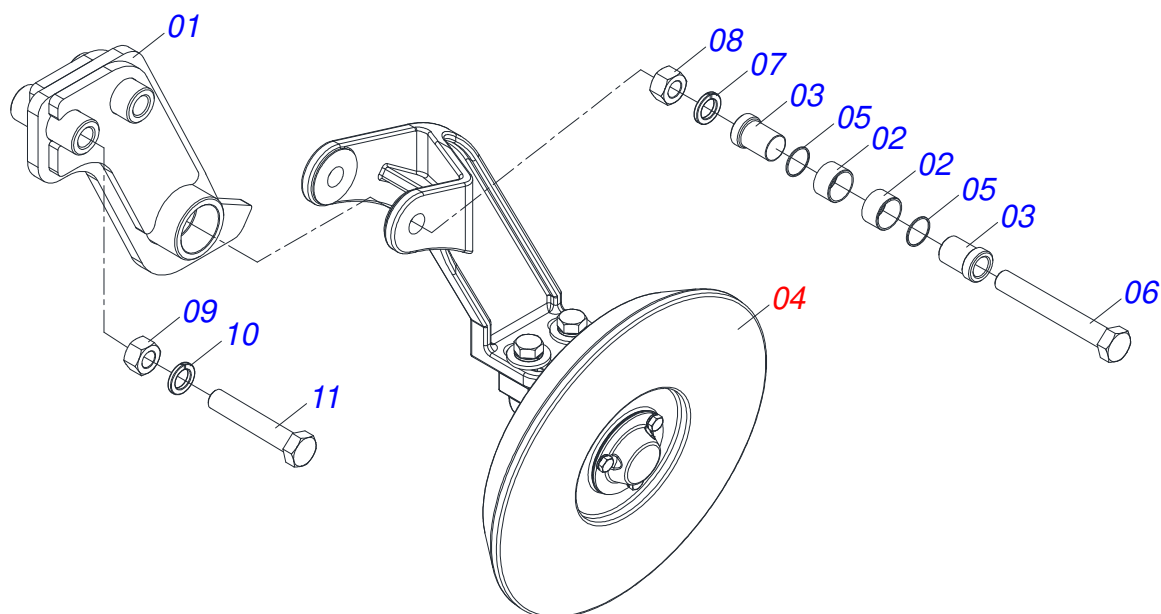


Item	Code	Description	See page	QT
01	0531062676	LEFT SUPPORT ARM WHEEL COVERING IRON PEANUTS		01
02	0503019272	LUBRICANT SLEEVE		02
03	0591016234	SIDE GUIDE SLEEVE		02
04	0501056289	LEFT IRON COVERING WHEEL	115	01
05	0503010410	RING		02
06	0501010163	5/8" X 4-1/2" BOLT		01
07	0503010027	5/8 SPRING WASHER		01
08	0503010013	5/8 UNC G.5 ZN HEX NUT		01
09	0503010060	1/2 UNC G.5 ZN HEX NUT		02
10	0503010019	1/2" SPRING WASHER		02
11	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02

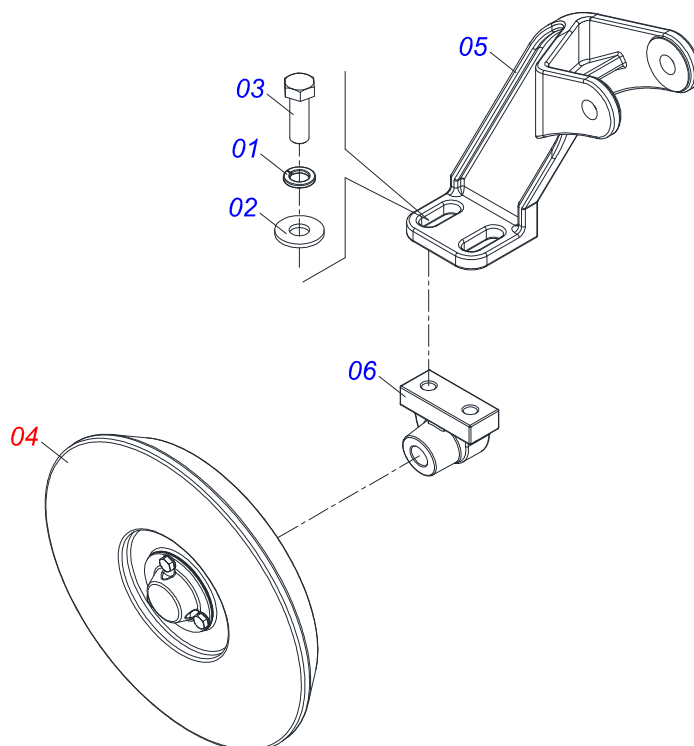

Item	Code	Description	See page	QT
01	0503011440	SPRING WASHER		02
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
03	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
04	0501053186	RIGHT IRON PRESS WHEEL ASSY	114	01
05	0502012348	RIGHT WHEEL ARM		01
06	0502011155	RIGHT FIXER WHEEL		01

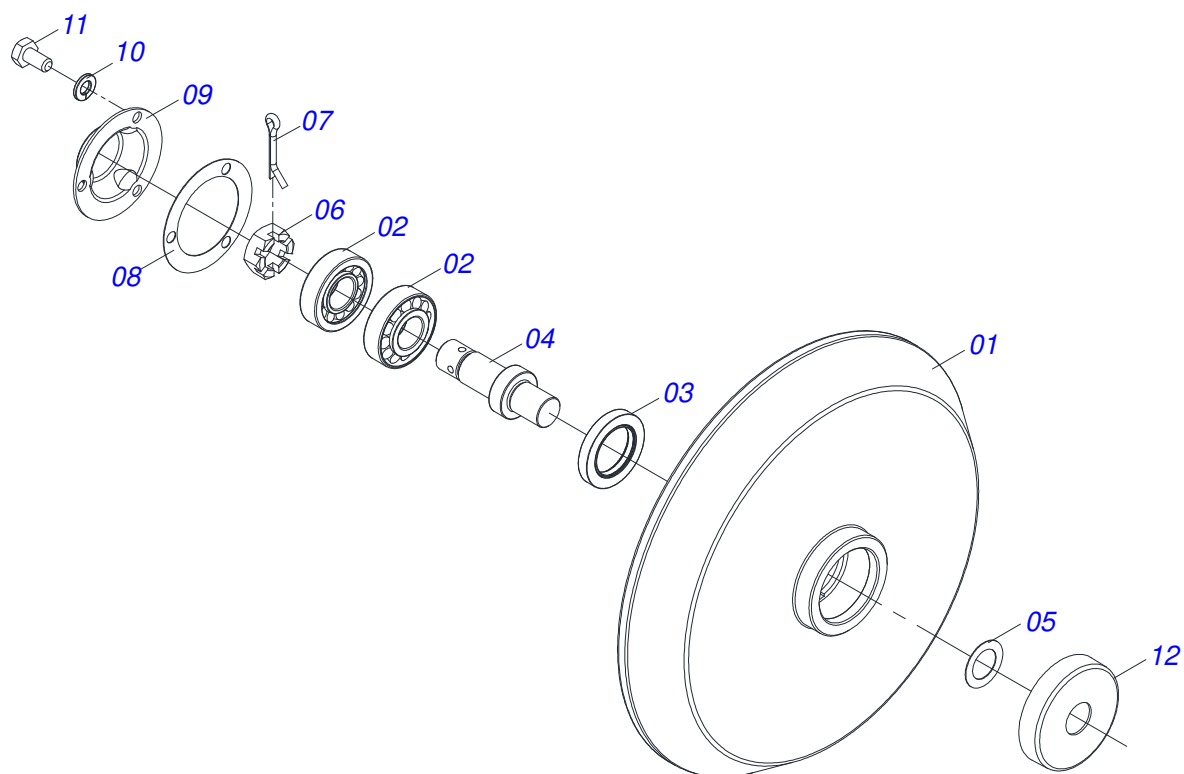


Item	Code	Description	See page	QT
01	0502011970	IRON PRESS WHEEL		01
02	0503010598	30204 BALL BEARING		02
03	0503011112	SEAL 02376-BRG		01
04	0521019154	RIGHT SHAFT DOUBLE DISC HUB		01
05	0511015098	FLAT WASHER		01
06	0503030282	3/4\" CASTLE NUT		01
07	0503010257	1/8\" X 1\" SPLIT PIN		01
08	0503030757	2.9\" X 2\" X 0.02\" JOINT		01
09	0521019178	PROTECTION LID		01
10	0503011441	SPRING WASHER		03
11	0503013758	1/4\" X 1-1/2\" BOLT		03
12	0511016896	DUST CLOAK		01

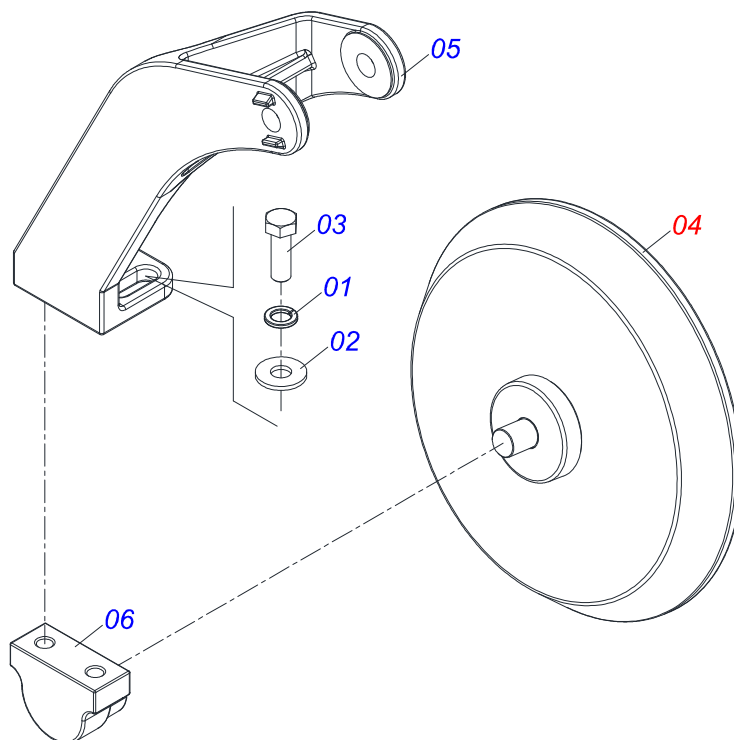

Item	Code	Description	See page	QT
01	0503011440	SPRING WASHER		02
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
03	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
04	0501053186	RIGHT IRON PRESS WHEEL ASSY	114	01
05	0502012349	LEFT WHEEL ARM STEEL		01
06	0502011156	LEFT FIXER WHEEL		01

RIGHT REAR SPI


0541052328

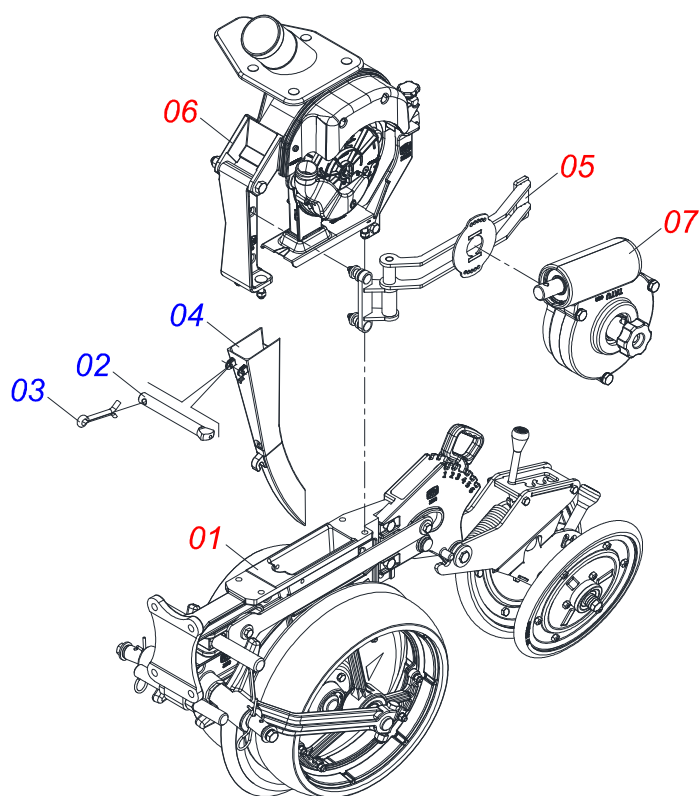


Item	Code	Description	See page	QT
01	0531050536	REAR RIGHT SPI TIRE WITHOUT FLAP	118	01
02	0571017895	PIN FIXER CONDUCTOR P.P		01
03	0503010140	1/8" X 3/4" SPLIT PIN		01
04	0503062403	TUBE SEED P.P		01
05	0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION	119	01
06	0521056956	PRECISION PLANTING CABLE/TRANSMISSION ASSY	CSU 120	01
07	0541050062	P.P. TRANSMISSION GEAR BOX RIGHT	121	01

REAR LEFT

0541052327

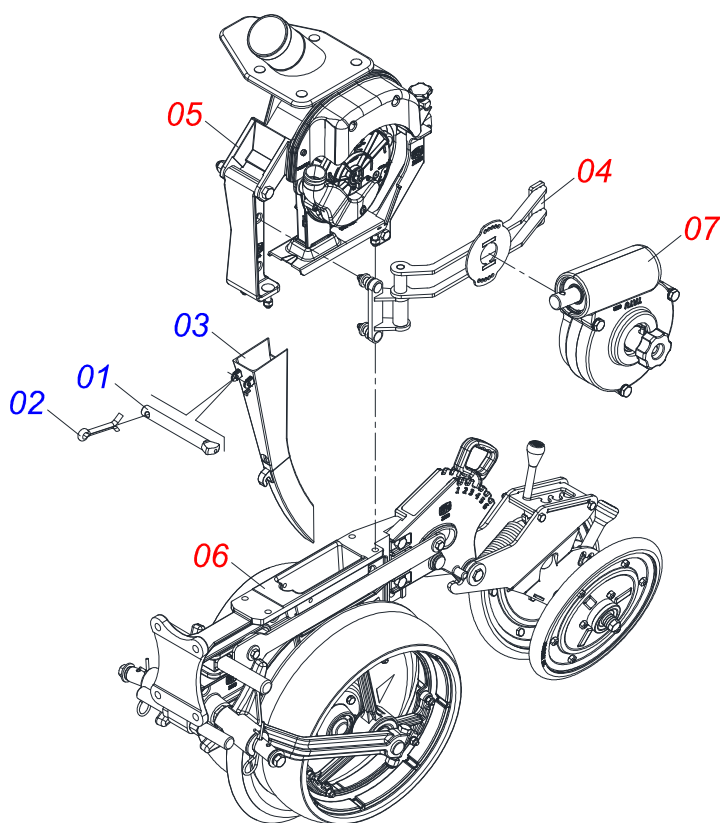


Item	Code	Description	See page	QT
01	0571017895	PIN FIXER CONDUCTOR P.P		01
02	0503010140	1/8" X 3/4" SPLIT PIN		01
03	0503062403	TUBE SEED P.P		01
04	0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION	119	01
05	0521056956	PRECISION PLANTING CABLE/TRANSMISSION ASSY	CSU 120	01
06	0531050537	REAR SPI LEFT TIRE WITHOUT TAB	132	01
07	0541050062	P.P. TRANSMISSION GEAR BOX RIGHT	121	01

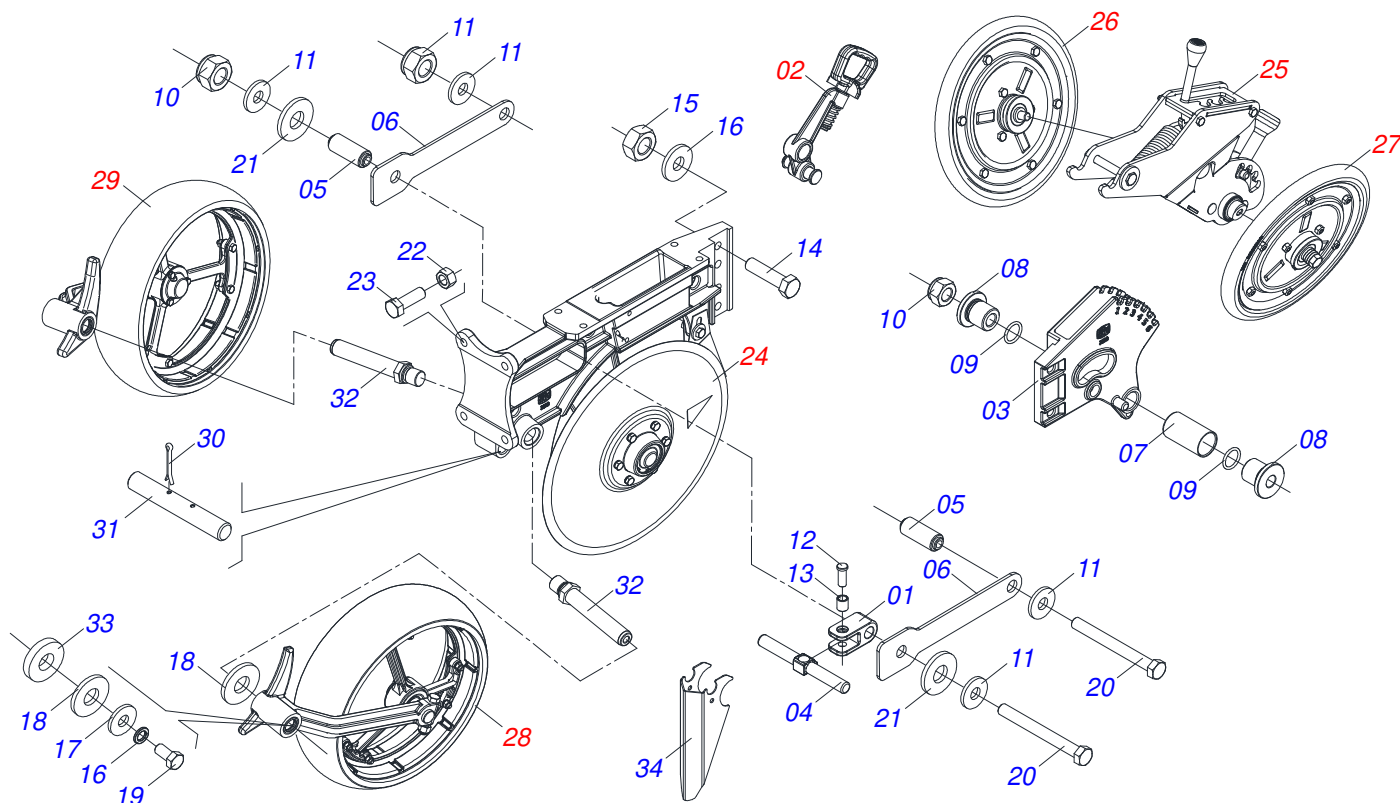


Item	Code	Description	See page	QT
01	0502012923	BEATER		01
02	0521056632	DEPTH CONTROL	122	01
03	0502012920	SUPPORT ADJUSTING		01
04	0502012611	DEPTH CONTROL AXLE		01
05	0591011309	ADJUSTMENT BUSHING		02
06	0591011310	ADJUSTMENT BAR		02
07	0503019275	SLEEVE LUBRICATION SYSTEM		01
08	0581019473	ARTICULATED SLEEVE		02
09	0503010045	O'RING		02
10	0503013357	3/8 SELF-ADJUSTING NUT		02
11	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
12	0591011326	LOCK PIN		01
13	0571015326	ARTICULATION SLEEVE HANDLE		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
15	0503010060	1/2 UNC G.5 ZN HEX NUT		02
16	0503010019	1/2" SPRING WASHER		04
17	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
18	0501011445	FLAT WASHER		04
19	0503012556	1/2" X 1" BOLT		02
20	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		02
21	0591011306	ADJUSTMENT LOCK		02
22	0503012136	NUT 1/2 NF		04
23	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
24	0521056635	RIGHT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	123	01
25	0521055093	BODY COMPACTOR	124	01
26	0521055017	RIGHT COMPACTOR WHEEL	125	01
27	0521054990	LEFT COMPACTOR WHEEL	127	01
28	0531050538	MOUNTED LEFT ARM	128	01
29	0531050539	MOUNTED LEFT ARM	131	01
30	0503010131	3/16" X 1.1/2" SPLIT PIN		02
31	0591016900	BEATING AXLE		01


Item	Code	Description	See page	QT
32	0591016905	DEPTH WHEEL JOINT AXLE		02
33	0591016907	SPACER SLEEVE		06
34	0591016988	SPICER PROTECTOR		01

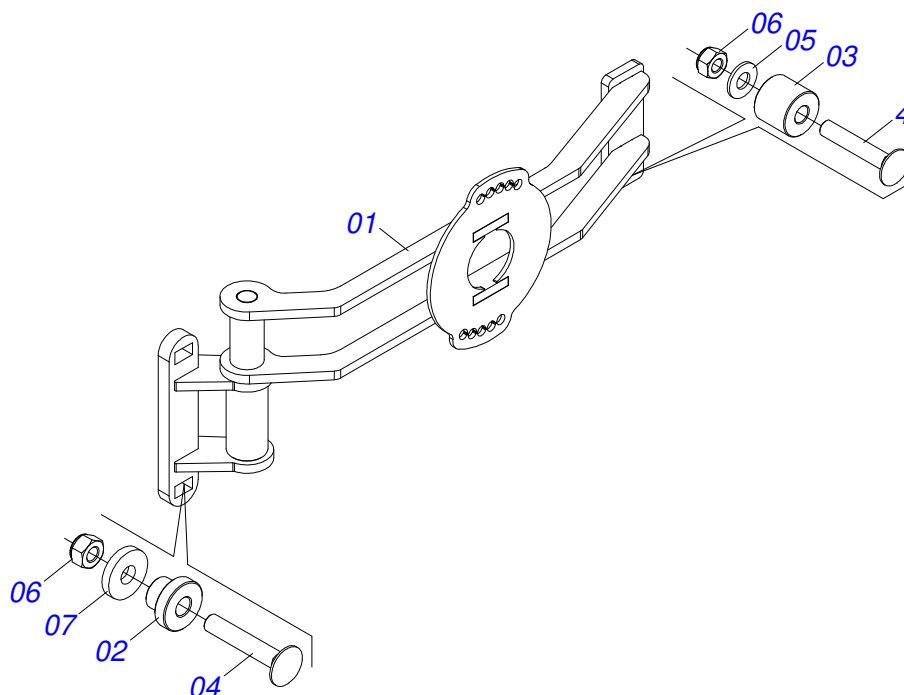

Item	Code	Description	See page	QT
01	0521068129	ENCAPSULATED CHAIN FIXATION SUPPORT		01
02	0591015755	CHAIN SUPPORT SLEEVE		02
03	0591016332	SUPPORT REAR SLEEVE		01
04	0501011753	5/16" X 1-3/4" BOLT		03
05	0501010694	FLAT WASHER 32,50 X 75 X 4,75		01
06	0503019657	HEX LOCK NUT WITH NYLON 5/16		03
07	0591016334	FLAT WASHER 8,50 X 23 X 4,00		02

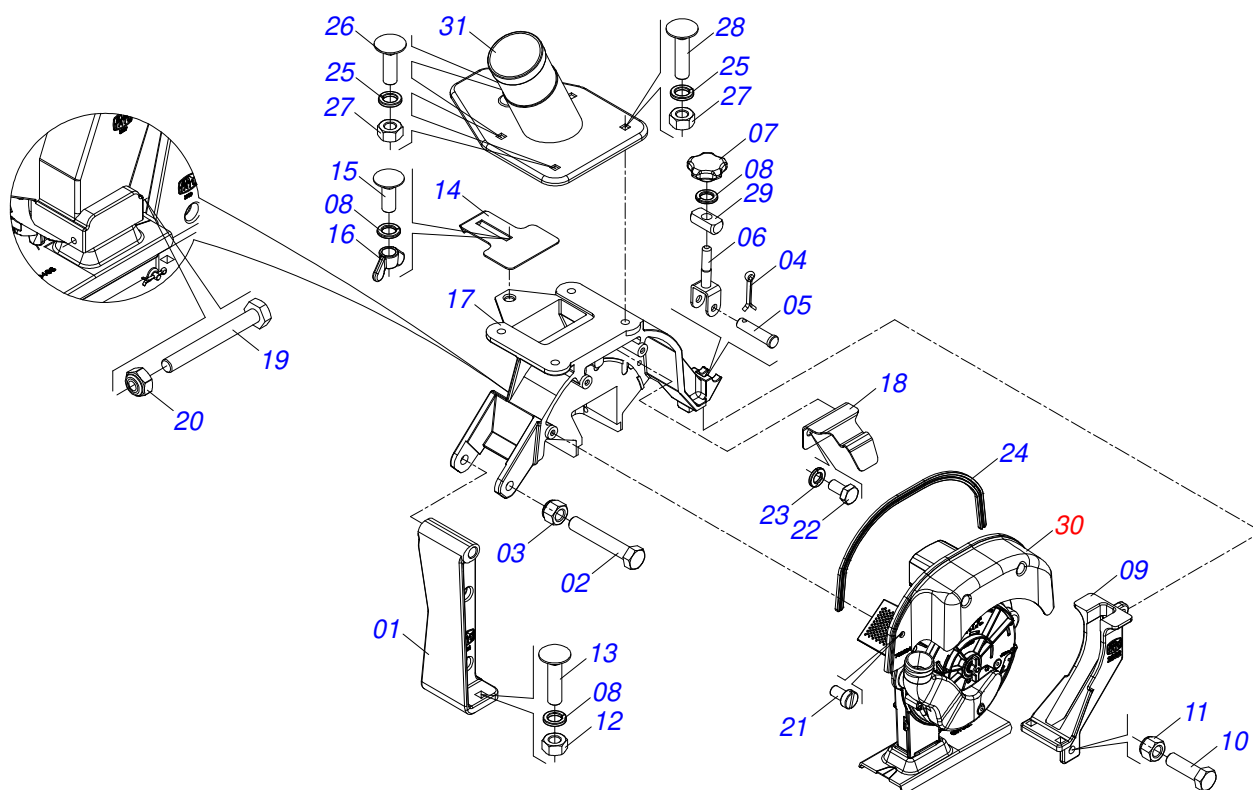


Item	Code	Description	See page	QT
01	0502012924	PRECISION PLANTING SUPPORT		01
02	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
03	0503010589	1/2" UNC SELF ADJUSTING NUT		01
04	0503010140	1/8" X 3/4" SPLIT PIN		01
05	0571014024	FAST BOLT GUIDE AXLE		01
06	0503034824	FIXATIVE		01
07	0503010293	CLAMP KNOB		01
08	0503010025	3/8 SPRING WASHER		06
09	0502012922	FIXING SUPPORT		01
10	0503011404	BOLT		01
11	0503013357	3/8 SELF-ADJUSTING NUT		01
12	0503010026	3/8" NUT		04
13	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04
14	0571019491	SLUICE PNEUMATIC		01
15	0501011643	3/8 X 1" BOLT		01
16	0503010209	3/8" UNC BUTTERFLY NUT		01
17	0502012807	SUPPORT HOPPER PRECISION PLANTING		01
18	0571019489	CLAMP PRECISION PLANTING		01
19	0503012721	1/4" X 4" BOLT		01
20	0503012880	1/4" UNC SELF ADJUSTING NUT		01
21	0503818139	BOLT		03
22	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		02
23	0503015110	M06 SPRING WASHER		02
24	0503037390	PACKING FOR PLANTING		01
25	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
26	0503011953	5/16" X 1" BOLT		03
27	0503010337	NUT 5/16 UNC G.5 ZN		04
28	0503012163	5/16" X 1-1/2" BOLT		01
29	0581011226	FIXER CLOSING P. PLANTING CONTROL CPRA		01
30	0511057491	P.P SEED ASSY SEED DISTRIBUTOR WITH CORN DISC		01
31	0521066707	FEEDER		01

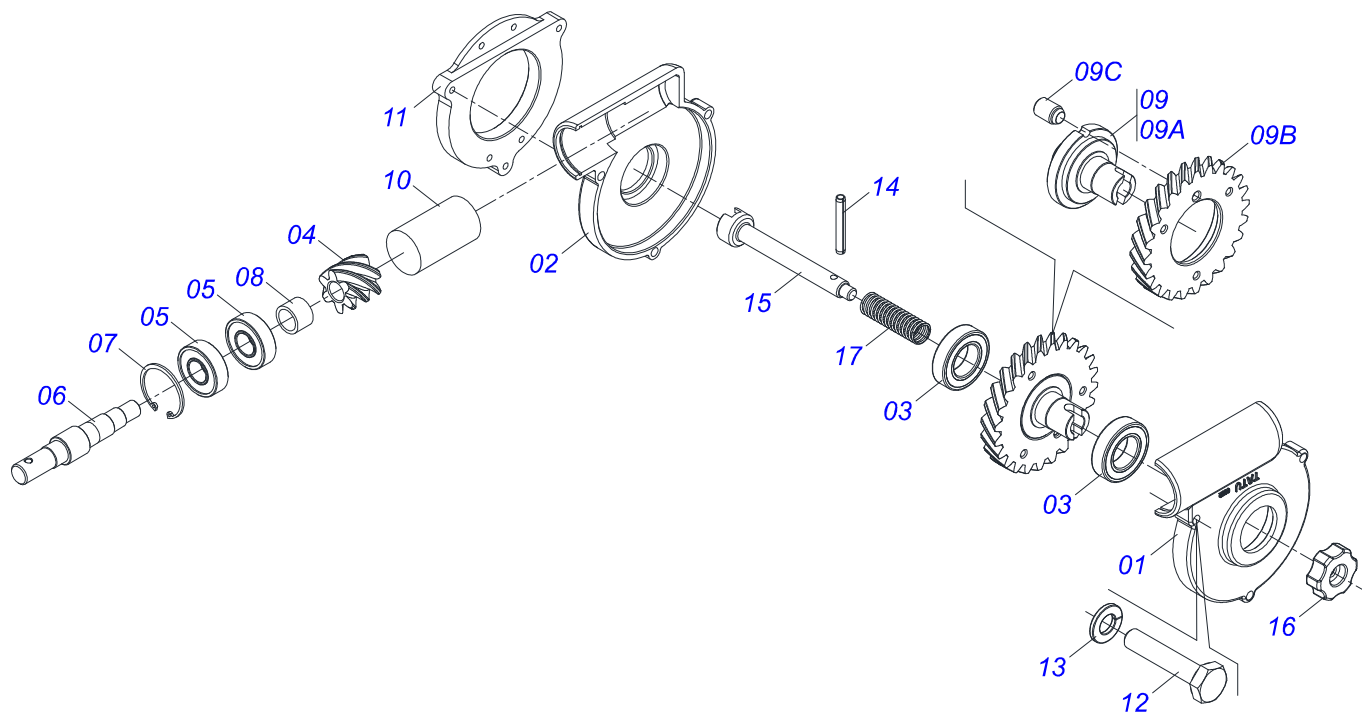


Item	Code	Description	See page	QT
01	0502050052	LEFT SIDE TRANSMISSION HOPPER PP		01
02	0502050053	RIGHT SIDE TRANSMISSION HOPPER PP		01
03	0503011410	ROLLER BEARING		02
04	0503033976	GEAR 6Z PNEUMATIC 2014		01
05	0503011182	6203 ROLLER BEARING		02
06	0571016187	PINION AXLE 6Z PNEUMATIC		01
07	0503011184	502040 CLAMPING RING (FOR AXLE)		01
08	0571017655	FIXER SLEEVE		01
09	0511057504	JOIN GEAR		01
09A	0571017898	BODY GEAR TRANSMISSION		01
09B	0503033975	24Z GEAR PNEUMATIC		01
09C	0503011769	M8 X 0.5" BOLT		01
10	3402510052	GREASE		01
11	0501311464	GEARBOX FLANGE		01
12	0503010733	1/4" X 1-3/4" BOLT		03
13	0503010143	1/4" SPRING WASHER		03
14	0503015356	SPRING PIN		01
15	0501311462	PIN DRAG 126		01
16	0503035749	LOCKING KNOB		01
17	0503036278	SPRING COMPRESSION		01

DEPTH CONTROL


0521056632

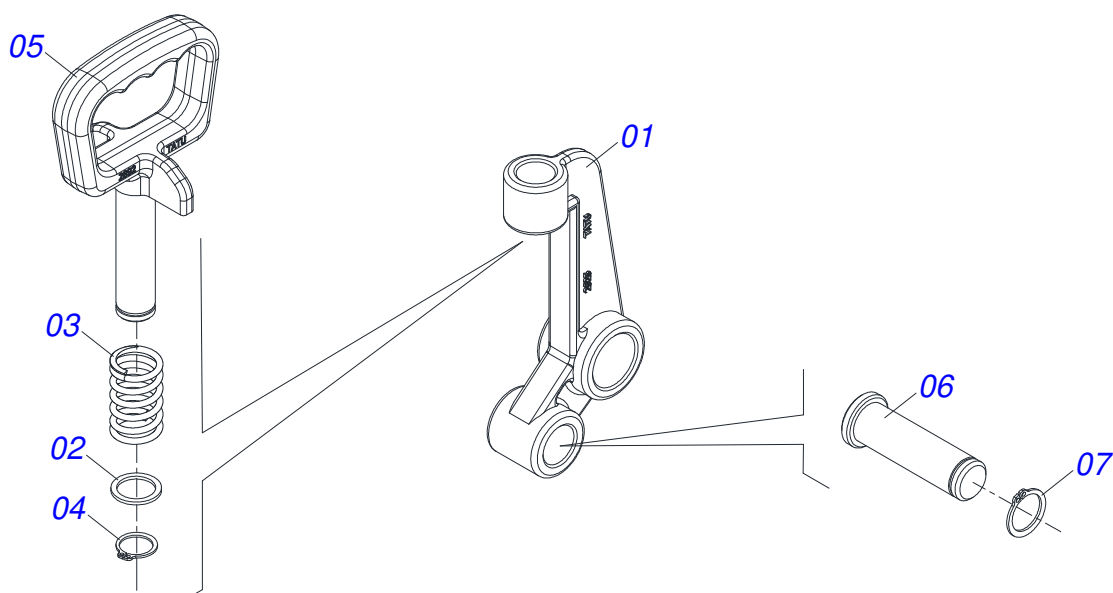


Item	Code	Description	See page	QT
01	0502012925	ADJUSTMENT BODY		01
02	0511015976	FLAT WASHER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0503010581	RING		01
05	0502012892	DEPTH CONTROL HANDLE		01
06	0581019526	ARTICULATED AXLE LEVER DEPTH		01
07	0503010302	501019 SEAL RING		01

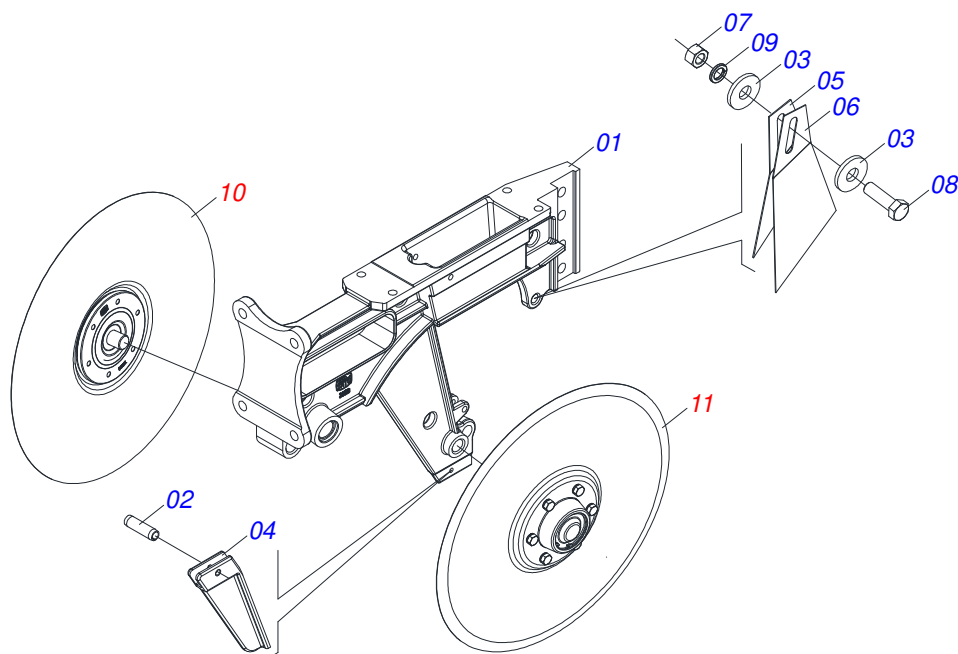


Item	Code	Description	See page	QT
01	0502012929	BODY RIGHT		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 106 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 107 FERTILIZER / SEED		01

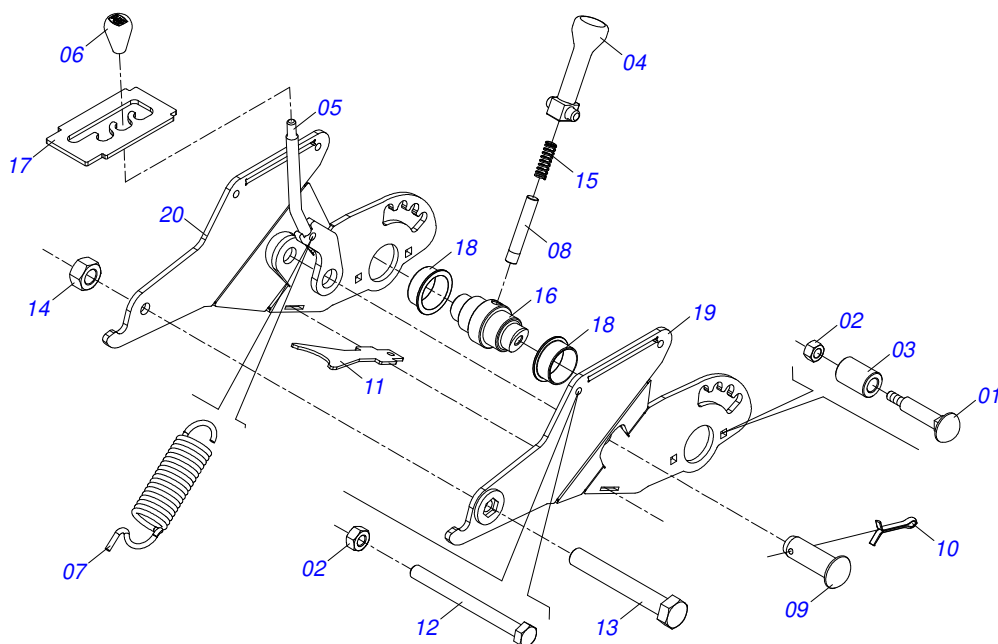


Item	Code	Description	See page	QT
01	0501011753	5/16" X 1-3/4" BOLT	02	
02	0503013816	5/16" LOCKNUT	04	
03	0581015855	SLEEVE	02	
04	0502012877	PRESS WHEEL ADJUSTMENT LEVER	01	
05	0521068661	LEVER	01	
06	0503030878	LEVER CRANK	01	
07	0503031393	1.57" X 5.98" X 0.2" TRACTION SPRING	01	
08	0581019520	AXIS	01	
09	0571812442	COUPLING SHAFT	01	
10	0503010257	1/8" X 1" SPLIT PIN	01	
11	0581019511	COVER	01	
12	0503010848	5/16" X 3.1/2" BOLT	02	
13	0503010752	1/2" X 3.1/2" BOLT	01	
14	0503011336	1/2" HEX SELF ADJUSTING NUT	01	
15	0503030190	0.5" X 1.6" X 0.05" SPRING	01	
16	0581019510	AXIS	01	
17	0581019512	PLATE TOP	01	
18	0503019351	LUBRICANT SLEEVE	02	
19	0521069591	LEFT SIDE	01	
20	0581019548	RIGHT SIDE BODY	01	

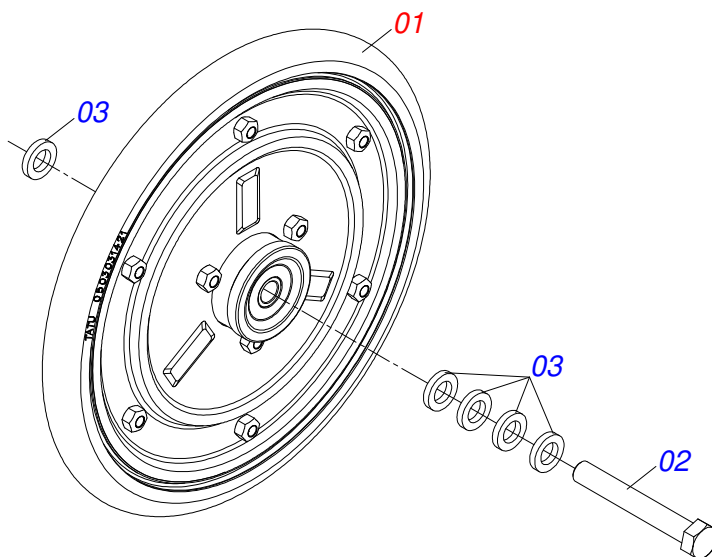

Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	126	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

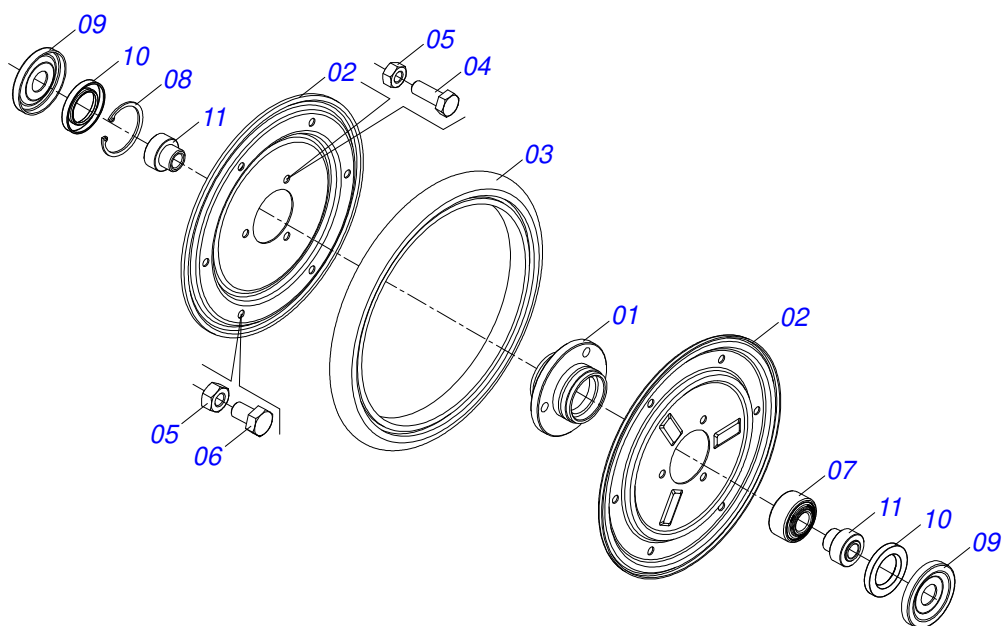


Item	Code	Description	See page	QT
01	0502012894	WHEEL HUB		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

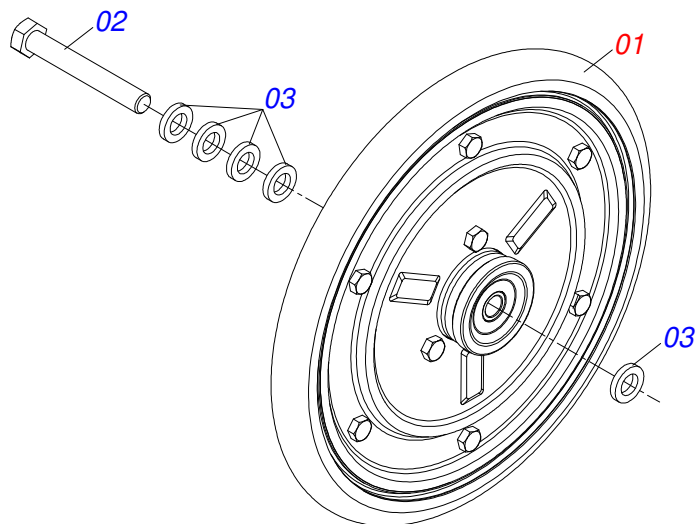


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	126	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

MOUNTED LEFT ARM


0531050538

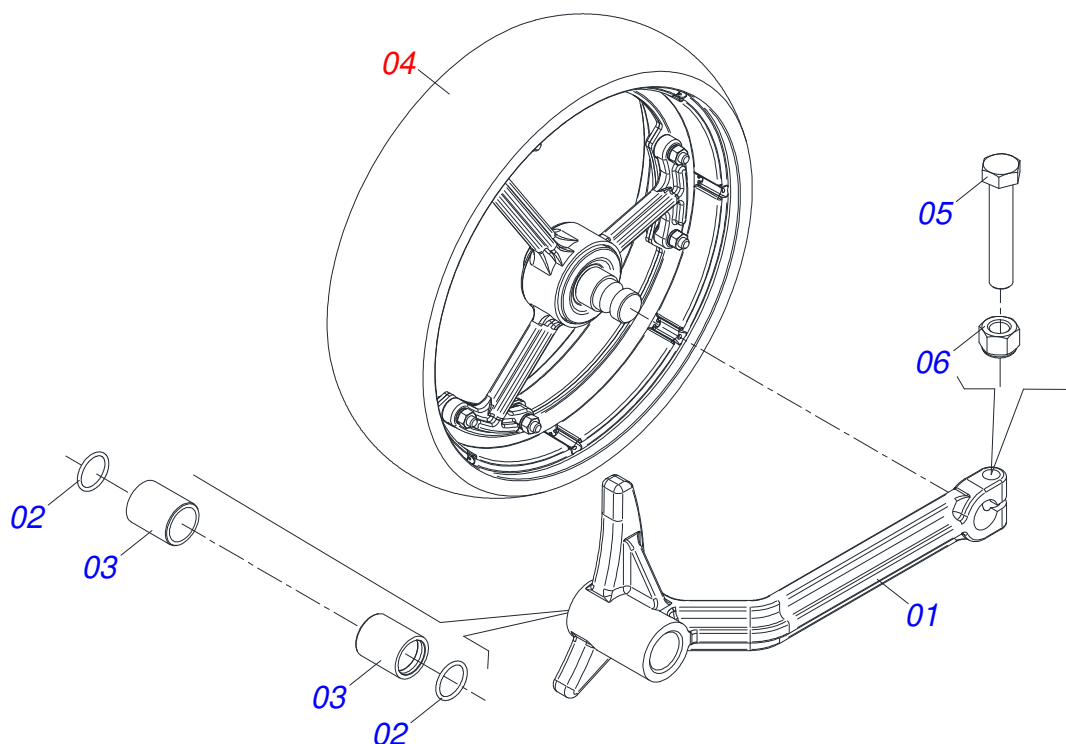


Item	Code	Description	See page	QT
01	0502012927	LEFT ARM		01
02	0503011109	O'RING 2-119 N 3006 9B		02
03	0581019514	LUBRICANT SLEEVE		02
04	0521055056	SPOKED WHEEL ASSY	129	01
05	0503010741	1/2" X 2-3/4" BOLT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01

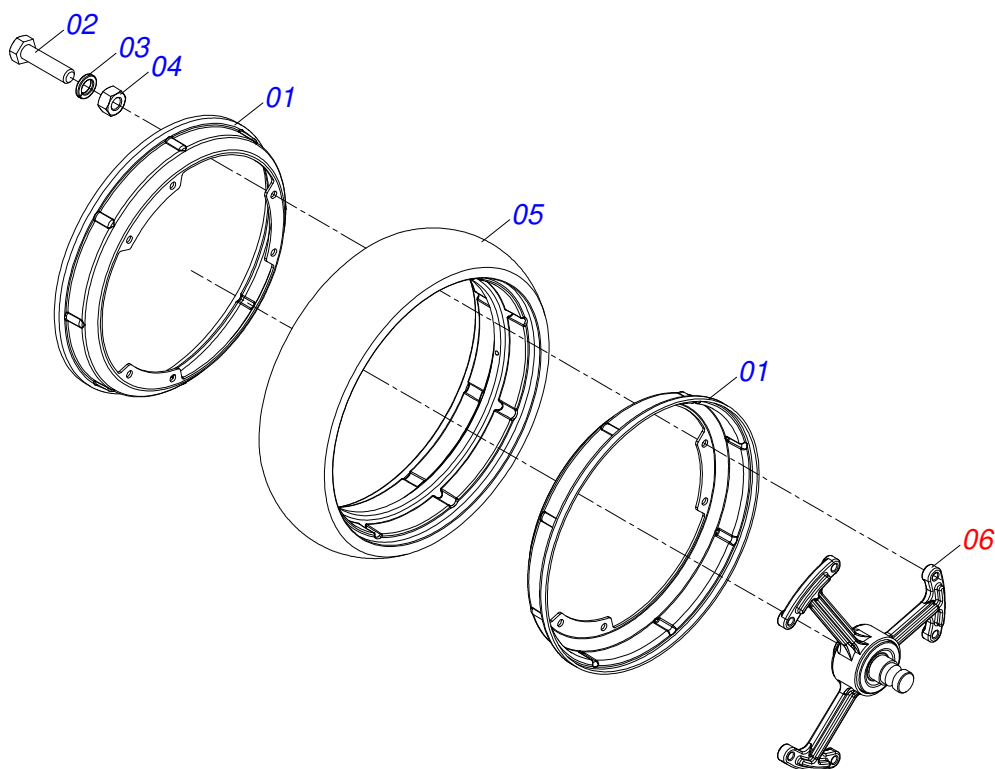


Item	Code	Description	See page	QT
01	0551019904	PRESS WHEEL RIM		02
02	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
04	0503010337	NUT 5/16 UNC G.5 ZN		06
05	0503032970	RUBBER BAND		01
06	0521055073	ASSEMBLY DEPTH WHEEL HUB	130	01

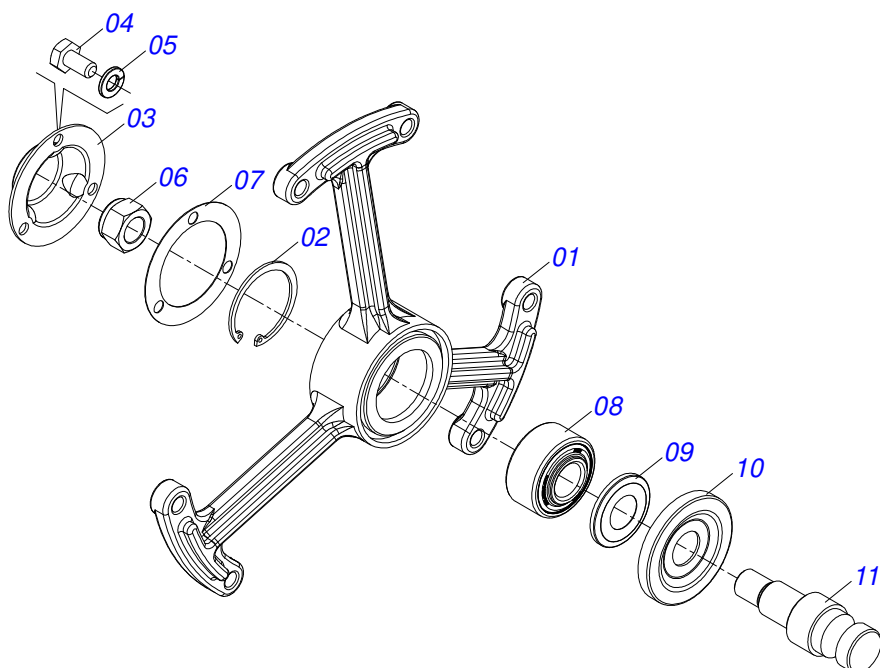

Item	Code	Description	See page	QT
01	0581019528	WHEEL DEPTH SPA HUB WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503010878	5/8" SELF ALIGNING NUT		01
07	0503030757	2.9" X 2" X 0.02" JOINT		01
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019168	DUST CLOAK		01
11	0581019529	DEPTH REGULATOR SHAFT		01

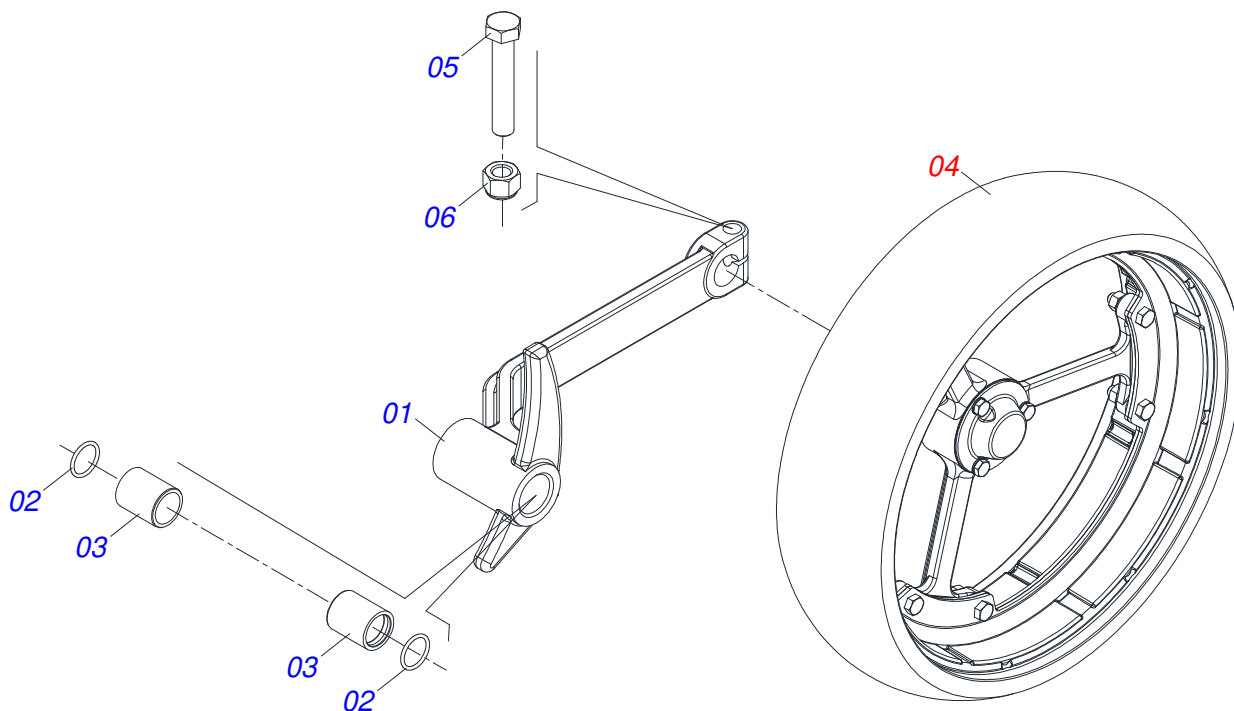

Item	Code	Description	See page	QT
01	0502012926	RIGHT ARM		01
02	0503011109	O'RING 2-119 N 3006 9B		02
03	0581019514	LUBRICANT SLEEVE		02
04	0521055056	SPOKED WHEEL ASSY	129	01
05	0503010741	1/2" X 2-3/4" BOLT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01

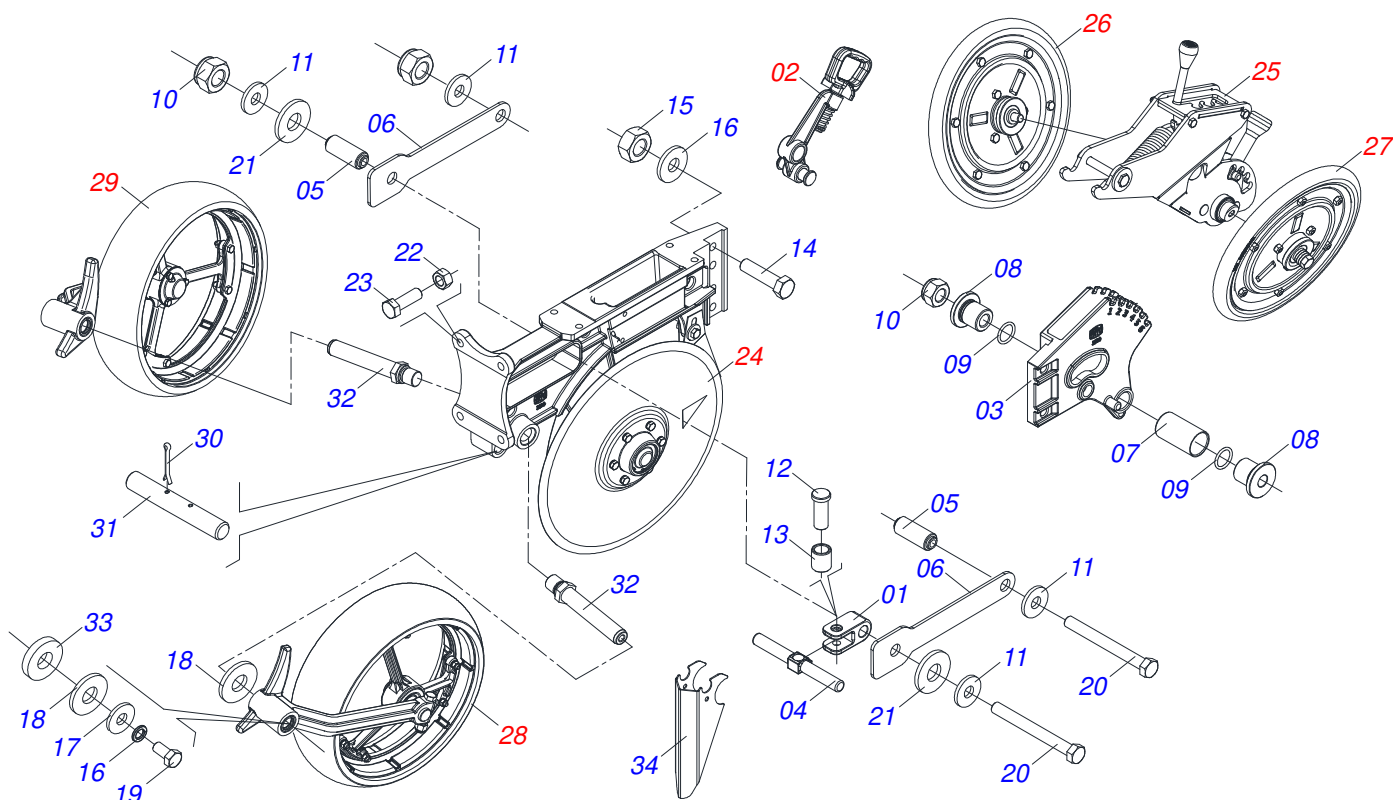


Item	Code	Description	See page	QT
01	0502012923	BEATER		01
02	0521056632	DEPTH CONTROL	122	01
03	0502012920	SUPPORT ADJUSTING		01
04	0502012611	DEPTH CONTROL AXLE		01
05	0591011309	ADJUSTMENT BUSHING		02
06	0591011310	ADJUSTMENT BAR		02
07	0503019275	SLEEVE LUBRICATION SYSTEM		01
08	0581019473	ARTICULATED SLEEVE		02
09	0503010045	O'RING		02
10	0503013357	3/8 SELF-ADJUSTING NUT		02
11	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
12	0591011326	LOCK PIN		01
13	0571015326	ARTICULATION SLEEVE HANDLE		01
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
15	0503010060	1/2 UNC G.5 ZN HEX NUT		02
16	0503010019	1/2" SPRING WASHER		04
17	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
18	0501011445	FLAT WASHER		04
19	0503012556	1/2" X 1" BOLT		02
20	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		02
21	0591011306	ADJUSTMENT LOCK		02
22	0503012136	NUT 1/2 NF		04
23	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
24	0521056634	LEFT ASSY DDD INTEGRATED DEPTH SYSTEM SPI		01
25	0521055093	BODY COMPACTOR	124	01
26	0521055017	RIGHT COMPACTOR WHEEL	125	01
27	0521054990	LEFT COMPACTOR WHEEL	127	01
28	0531050538	MOUNTED LEFT ARM	128	01
29	0531050539	MOUNTED LEFT ARM	131	01
30	0503010131	3/16" X 1.1/2" SPLIT PIN		02
31	0591016900	BEATING AXLE		01


Item	Code	Description	See page	QT
32	0591016905	DEPTH WHEEL JOINT AXLE		02
33	0591016907	SPACER SLEEVE		06
34	0591016988	SPICER PROTECTOR		01

SCARING ROD


0521053946

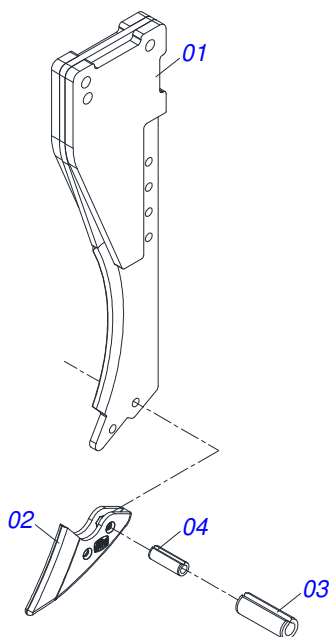


Item	Code	Description	See page	QT
01	0521065998	SCARIFIER SPINDLE		01
02	0502070085	FIXED ROD BEARING		01
03	0513010288	ELASTIC PIN 701211 10 X 24		02
04	0513010289	ELASTIC PIN 701211 10 X 24		02

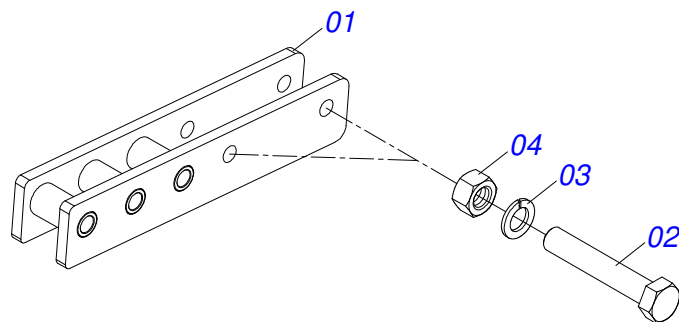

Item	Code	Description	See page	QT
01	0521068467	FIXED ROD EXTENSION		01
02	0503010479	BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02

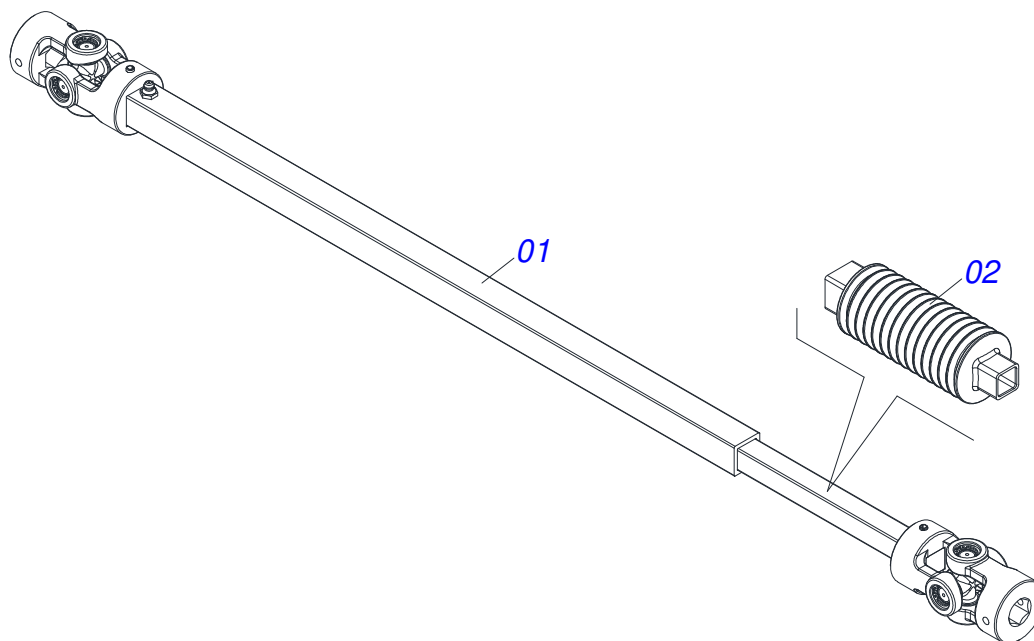

Item	Code	Description	See page	QT
01	0503064136	CARDAN TS 16,00 X Q 15,90 X Q 22 X 697		01
02	0503034480	CARDAN COIF		01

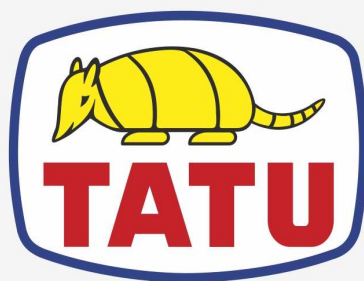

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

