

ROW CROP PLANTERS

PST TRIO FLEX - FRAME

**8160/8460/8960/9460/9960/10985 - CSU
(FROM 04/2022)**

Code: 0501098983

Series: S-0119

Revision: 00

Date Revision: MAIO/2022

PARTS CATALOGUE



MARCHESAN

PRODUCTS



Code	Description
0111260417	PST TRIO FLEX 10985/22E500 CI MH DC20 CSU S-0119
0111260421	PST TRIO FLEX 10985/24E450 CI MH DC20 CSU S-0119
0111260373	PST TRIO FLEX 8160/15E550 CI MH DC20 CSU S-0119
0111260377	PST TRIO FLEX 8460/17E500 CI MH DC20 CSU S-0119
0111260458	PST TRIO FLEX 8460/17E500 ESPECIAL S-0119
0111260381	PST TRIO FLEX 8460/18E450 CI MH DC20 CSU S-0119
0111260385	PST TRIO FLEX 8960/18E500 CI MH DC20 CSU S-0119
0111260493	PST TRIO FLEX 8960/18E500 D DC20 CSU S-0119
0111260389	PST TRIO FLEX 8960/19E450 CI MH DC20 CSU S-0119
0111260393	PST TRIO FLEX 9460/19E500 CI MH DC20 CSU S-0119
0111260466	PST TRIO FLEX 9460/19E500 D/HDA MH DC20 CSU S-0119
0111260397	PST TRIO FLEX 9460/20E450 CI MH DC20 CSU S-0119
0111260401	PST TRIO FLEX 9960/20E500 CI MH DC20 CSU S-0119
0111260539	PST TRIO FLEX 9960/20E500 ESPECIAL S-0119
0111260405	PST TRIO FLEX 9960/21E450 CI MH DC20 CSU S-0119

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the consumer. The photos are only illustrative.

INDEX

0909096214	ASSY FRAME	1
0511059576	FRAME WITH SHAFT	2
0511053766	RIGHT FRAME WITH WHEELED AXLE 7960/8160	3
0511053767	LEFT FRAME WITH WHEELED AXLE 7960/8160	4
0511059288	CENTRAL FRAME WITH WHEELED AXLE 5750/6850/7860/8160	5
0511056311	ARTICULATION FRAME 8460	6
0511056312	RIGHT FRAME WITH WHEELED AXLE 8460	7
0511056313	LEFT FRAME WITH WHEELED AXLE 8460	8
0511053190	CENTRAL FRAME WITH WHEELED AXLE 6450/7285/7450/8460	9
0521052760	ARTICULATED FRAME 8960	10
0521052758	FRAME RIGHT WITH AXIS 8960/9460	11
0521052761	FRAME CENTRAL WITH AXIS 8960/9960	12
0521052759	LEFT FRAME WITH AXIS 8960/9460	13
0521052763	ARTICULATED FRAME 9460	14
0521052762	FRAME CENTRAL WITH AXIS 9460/10460	15
0521052765	ARTICULATED FRAME 9960	16
0521052767	RIGHT FRAME WITH WHEELED AXLE 9960/10460	17
0521052766	LEFT FRAME WITH WHEELED AXLE 9960/10460	18
0521052769	ARTICULATED FRAME 10985	19
0521052770	RIGHT FRAME WITH WHEELED AXLE 10985	20
0521052187	FRAME CENTRAL WITH AXIS WHEEL 10985	21
0521052774	LEFT FRAME WITH AXIS WHEEL 10985	22
0511059232	ASSEMBLY SPRING TRACTION	23
0521055229	WHEELED WITH 655 DRIFT SPRING WITH TRANSMISSION	24
0521058402	WHEELED WITH 655 DRIFT SPRING WITH TRANSMISSION	25
0521055241	WHEELED WITH 655 DRIFT SPRING WITHOUT TRANSMISSION	26
0521058404	WHEELED WITH 655 DRIFT SPRING WITHOUT TRANSMISSION	27
0521055231	655 WHEELED SUPPORT WITH TRANSMISSION	28
0521058401	655 WHEELED SUPPORT WITH TRANSMISSION	29
0521058403	655 WHEELED BRACKET WITHOUT TRANSMISSION	30
0521055243	655 WHEELED BRACKET WITHOUT TRANSMISSION	31
0501058241	WHEEL SUPPORT CHAIN TENSIONER	32
0521055232	WHEEL WITH PNEU	33
0521055239	WHEEL WITH TIRE WITHOUT TRANSMISSION	34
0503062159	WHEEL WITH TIRE	35
0521055233	WHEELED TRANSMISSION WITHOUT TIRE	36
0521055244	WHEEL WITHOUT TRANSMISSION WITHOUT TIRE	37
0521055234	WHEELED FASTENER	38
0521055236	INTERMEDIARY CURRENT STRETCHER	39
0521055237	WHEEL FIXED CURRENT STRETCHER	40
0521055235	WHEEL MOBILE CURRENT STRETCHER	41
0909095212	HEADER FULL ASSEMBLY - FRAME 8160/8460	42
0909095213	HEADER FULL ASSEMBLY - FRAME 8960/9460/9960/10985	43
0511055096	TRACTOR HITCH	44
0511053179	TRACTOR COUPLING SHAFT	45
0521051614	TURNBUCKLE SIDE UPPER	46
0521050574	EXTENSOR	47
0521050133	TURNBUCKLE SIDE 755/480	48
0521050681	LATERAL EXTENSOR 1250/480	49
0511059237	3 POINT TURNBUCKLE	50
0521045756	HYDRAULIC CYLINDER	51
0511057653	HYDRAULIC CYLINDER	52
0521052860	HYDRAULIC SYSTEM ASSEMBLY 8160/8460	53



MARCHESAN

INDEX

0521052895	HYDRAULIC SYSTEM ASSEMBLY 8960/9960	54
0521052913	HYDRAULIC SYSTEM ASSEMBLY 9460/10460	55
0521052953	HYDRAULIC SYSTEM ASSEMBLY 10985	56
0511059290	VALVE ASSEMBLY	57
0501053835	FEMALE QUICK COUPLER	58
0501053834	MALE QUICK COUPLER	59
0521052751	ASSY SILO FERTILIZER 8160	60
0521052704	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 8160	61
0521052713	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 8160	62
0521052735	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 8160	63
0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	64
0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65
0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66
0501053788	3/4 SQUARE AXLE FASTENER	67
0521052744	ASSY SILO FERTILIZER 8460	68
0521052709	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 8460/8960/9460	69
0521052718	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 8460/8960/9460	70
0521051607	SUPPORT SILO CENTRAL FERTILIZER 6450/7285/7450/8460	71
0521050194	SUPPORT RIGHT SQUARE AXLE SILO FERTILIZER	72
0521050195	SILO FERTILIZER LEFT SQUARE AXLE	73
0521052740	SILO FERTILIZER ASSEMBLY 8960	74
0521052731	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 8960	75
0521052741	SILO FERTILIZER ASSEMBLY 9460	76
0521052728	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 9460	77
0521052747	SILO FERTILIZER ASSEMBLY 9960	78
0521052708	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 9960/10460	79
0521052717	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 9960/10460	80
0521052727	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 9960	81
0521052749	SILO FERTILIZER ASSEMBLY 10985	82
0521052706	SUPPORT SILO RIGHT FERTILIZER WITH DISTRIBUTOR 10985	83
0521052715	SILO SUPPORT LEFT FERTILIZER WITH DISTRIBUTOR 10985	84
0521052723	SUPPORT SILO CENTRAL FERTILIZER WITH DISTRIBUTOR 10985	85
0511058836	ASSEMBLY TRANSMISSION 7960/8160/8460	86
0511058885	TRANSMISSION ASSEMBLY 8960	87
0521050216	TRANSMISSION ASSEMBLY 9460	88
0511058850	TRANSMISSION ASSEMBLY 9960/10460	89
0521051048	TRANSMISSION ASSEMBLY 10985	90
0501052560	MOTOR AXLE SIGNAL	91
0511051434	TRANSMISSION ACTUATOR	92
0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	93
0511047070	LEFT SIDE TRANSMISSION ACTUATOR	94
0521043316	RIGHT GEAR BOX ASSY	95
0521043317	LEFT GEAR BOX ASSY	96
0501058212	SEMI MOUNTED RIGHT CHANGE	97
0501058213	LH GEAR BOX	98
0511059266	CLOSED BEARING	99
0501056271	GEARBOX CLOSED BEARING	100
0501056443	GEAR HOUSING BEARING	101



MARCHESAN

INDEX

0501056444	BEARING WITH ROLLING	102
0501048790	AXLE WITH RING	103
0501054655	CHAIN TENSIONER ASSY	104
0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	105
0511059261	CHAIN TENSIONER	106
0521055217	LOWER CURRENT STRETCH	107
0501058254	UPPER SEED CHAIN TENSIONER	108
0521055216	BEARING WITH GEAR	109
0521055218	BEARING GEAR WITH DOUBLE	110
0521055214	BEARING GEAR WITH	111
0521055215	DOUBLE TRANSMISSION BEARING	112
0521052673	PLATFORM ASSEMBLY 8160	113
0521052676	PLATFORM ASSEMBLY 8460	114
0521052677	PLATFORM ASSEMBLY 8960	115
0521052678	PLATFORM ASSEMBLY 9460	116
0521052679	PLATFORM ASSEMBLY 9960	117
0521052681	PLATFORM ASSEMBLY 10985	118
0511059571	HANDLE ASSEMBLY 8160	119
0511058282	HANDLE ASSEMBLY 8460	120
0511058889	HANDLE ASSEMBLY 8960	121
0521050213	HANDLE ASSEMBLY 9460	122
0511058845	HANDLE ASSEMBLY 9960	123
0521051058	HANDLE ASSEMBLY 10985	124
0511054971	JACK ASSEMBLY	125
0511056536	LADDER ASSEMBLY	126
0521052886	8160 DOUBLE ARTICULATED HYDRAULIC MARKER	127
0511057889	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8460	128
0511056250	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8960	129
0511056158	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 9460	130
0521052002	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 9960	131
0521051379	DOUBLE ARTICULATED HYDRAULIC MARKER	132
0501054649	HBM SEQUENTIAL VALVE	133
0511058431	HYDRAULIC CYLINDER	134
0521052887	AXIS TRANSMISSION SEED ASSY 8160	135
0521052863	AXIS TRANSMISSION SEED ASSY 8460	136
0521052898	AXIS TRANSMISSION SEED ASSY 8960	137
0521052909	AXIS TRANSMISSION SEED ASSY 9460	138
0521052921	AXIS TRANSMISSION SEED ASSY 9960	139
0521052958	AXIS TRANSMISSION SEED ASSY 10985	140
0511059233	INTERMEDIATE TRANSMISSION	141
0503062206	CARDAN TERMINAL	142
0521052844	REAR LIGHT ASSEMBLY 7860/7960/8160/8460	143
0521052899	REAR LIGHT ASSEMBLY 8960/9460	144
0521052923	REAR LIGHT ASSEMBLY 9960	145
0521052960	REAR LIGHT ASSEMBLY 10985	146
0521052792	MOUNTED REAR LIGHT	147
0521052796	CYLINDER ASSEMBLY 5750/6850/7860/7960/8460	148
0521052797	CYLINDER ASSEMBLY 8960/9460/9960/10460/10985	149
0511058406	HYDRAULIC CYLINDER	150
0521052696	ASSEMBLY CSU C3 SEMI MOUNTED 8160	151
0521052697	ASSEMBLY CSU C3 3 BOXES 8160	152
0511057690	3" ARTICULATED SEED CONDUCTOR	153
0521052687	RH SUPPORT TOWER SILO	154
0521051931	LH SUPPORT TOWER SILO	155
0511058398	ASSEMBLY CSU C3 SEMI MOUNTED 7860/8460	156



MARCHESAN

INDEX

0511058397	ASSEMBLY CSU C3 3BOX 7B WITH 17 C 7860	157
0521051927	TOWER SUPPORT HOPPER	158
0511058577	ASSEMBLY CSU C3 SEMI MOUNTED 8960	159
0511058578	ASSEMBLY CSU C3 - 2BOXES 7/6 - 2 BOXES 5/3	160
0521052694	ASSEMBLY CSU C3 SEMI MOUNTED 8960/9460	161
0521052695	ASSEMBLY CSU C3 2BOXES 7/6-1BOX 5/3-1BOX 5/4 9460	162
0521052692	ASSEMBLY CSU C3 SEMI MOUNTED 9960	163
0521052693	ASSEMBLY CSU C3 2BOXES 5/4 - 2BOXES 5/3 - 1BOX 7/6 9960	164
0521051929	SIDE FIXED TOWER LEFT SILO SUPPORT WITH SCREW	165
0521051928	FIXED TOWER SIDE RIGHT SILO SUPPORT WITH SCREW	166
0521051062	ASSEMBLY CSU C3 SEMI MOUNTED 10985	167
0521051061	ASSEMBLY CSU C3 - 2BOXES 5/3 - 4BOXES 5/4 10985	168
0521025447	BOX WITH HYDRAULIC MARKER COMPONENTS	169
0521024105	BOX WITH HYDRAULIC MARKER COMPONENTS	170
0909096215	SEED LINE/FERTILIZER ASSEMBLY	171
0521053227	FRONT LEFT SHORT SEED ROW	172
0521055213	LINE BEARING SEED	173
0511055260	SEED ROW CHAIN TENSIONER	174
0521055226	BEARING WITH AXLE JOINT	175
0501059326	UNIVERSAL JOINT AXLE	176
0521055219	BEARING WITH GEAR 17Z HEX 5/8	177
0521055220	BEARING FRONT LINE SEED	178
0521053230	FRONT RIGHT SHORT SEED ROW	179
0521055223	SEED LINE TRANSMISSION BOX	180
0521053228	FRONT LEFT LONG SEED ROW	181
0521053229	FRONT RIGHT LONG SEED ROW	182
0521054737	FRONT SEMI-ASSEMBLED LONG LEFT SEED ROW	183
0521054736	FRONT SEMI-ASSEMBLED OF LONG RIGHT SEED LINE	184
0511059333	SEMI-ASSEMBLED MECHANICAL FRAME	185
0511059334	BEARING WITH LONG FRONT AXLE	186
0511058143	UNIVERSAL JOINT AXLE	187
0521055227	BEARING SHAFT HEX	188
0501059363	5/8" HEX AXLE BEARING	189
0521054771	LEFT REAR SEED ROW	190
0521054818	BASE 5/8 FIXATION WITHOUT ASSY LUBRICATION	191
0521055871	LEFT DOUBLE DISC SEED 15 X 15	192
0511052302	LH SUPPORT DDD GUIDE	193
0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	194
0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	195
0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	196
0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	197
0521054770	RIGHT REAR SEED ROW	198
0521055870	RIGHT DOUBLE DISC SEED 15 X 15	199
0511052301	SUPPORT DDD 15 RIGHT	200
0521054984	DEPTH/COMPACTOR SYSTEM - SPT	201
0521054986	DEPTH CONTROL SEMI MOUNTED WITHOUT LUBRICATION	202
0501052297	DEPTH WHEELS REGULATOR ASSY	203
0521054987	LEFT ARM WITH HUB WITHOUT LUBRICATION	204
0521055016	CUBE DEPTH CONTROL WITHOUT LUBRICATION	205
0521055033	SEMI-ASSEMBLED COMPACTOR BODY	206
0521054988	RIGHT ARM WITH HUB WITHOUT LUBRICATION	207
0501052538	DEPTH BAND WITH ARMS	208
0521054990	LEFT COMPACTOR WHEEL	209
0521055017	RIGHT COMPACTOR WHEEL	210
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	211




MARCHESAN

INDEX

0521055069	SPACRRA COMPACTOR WHEEL SYSTEM WITHOUT LUBRICATION	212
0521055070	DEEP WHEEL SYSTEM WITH NO SPACRRA ABA	213
0501059228	ADJUSTMENT LEVER	214
0521055076	LEFT ARM WITH WHEEL WITHOUT LUBRICATION	215
0521055056	WHEEL RAYED ASSY BAND	216
0521055073	ASSEMBLY DEPTH WHEEL BOX	217
0521055077	RIGHT ARM WITH WITHOUT LUBRICATION	218
0521055093	BODY COMPACTOR	219
0521055053	DEPTH/COMPACTOR SYSTEM - SPCRR	220
0521055065	ASSY DEPTH / COMPACTOR	221
0501056769	DEPTH WHEELS REGULATOR ASSY	222
0521055054	LEFT ARM WITH SLEEVE	223
0521055066	RIGHT ARM WITH GLOVE	224
0521055068	RAYED WHEEL CENTER CLOSED	225
0521055055	BOX WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	226
0521054811	FERTILIZER SHORT LINE	227
0521053231	DPL 20 SHORT LINE WITHOUT LUBRICATION CONICAL BEARING	228
0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	229
0521053697	CUTTING DISK BOX	230
0521054812	LONG FERTILIZER LINE	231
0521053232	DPL 20 LONG LINE WITHOUT LUBRICATION CONICAL BEARING	232
0521054769	LEFT DDD FERTILIZER WITH SUPPORT	233
0521055869	LEFT DUAL FERTILIZER DISC	234
0521054768	RIGHT DDD FERTILIZER WITH SUPPORT	235
0521055868	RIGHT DUAL FERTILIZER DISC	236
0521059094	SIGMA SOY SINGLE SEED SYSTEM	237
0531051514	SIGMA SOY SEED SYSTEM	238
0511057289	ASSY SEED DEFLECTOR	239
0511052024	FAST CLOSING SET	240
0521053946	SCARING ROD	241
0521053947	AUTOMATIC DISARMING ROD	242
0521053951	STEM	243
0521053932	ROD WITH BEAK 0869	244
0521057957	FIXED ROD EXTENSION WITH FIXATION	245

ASSY FRAME

0909096214

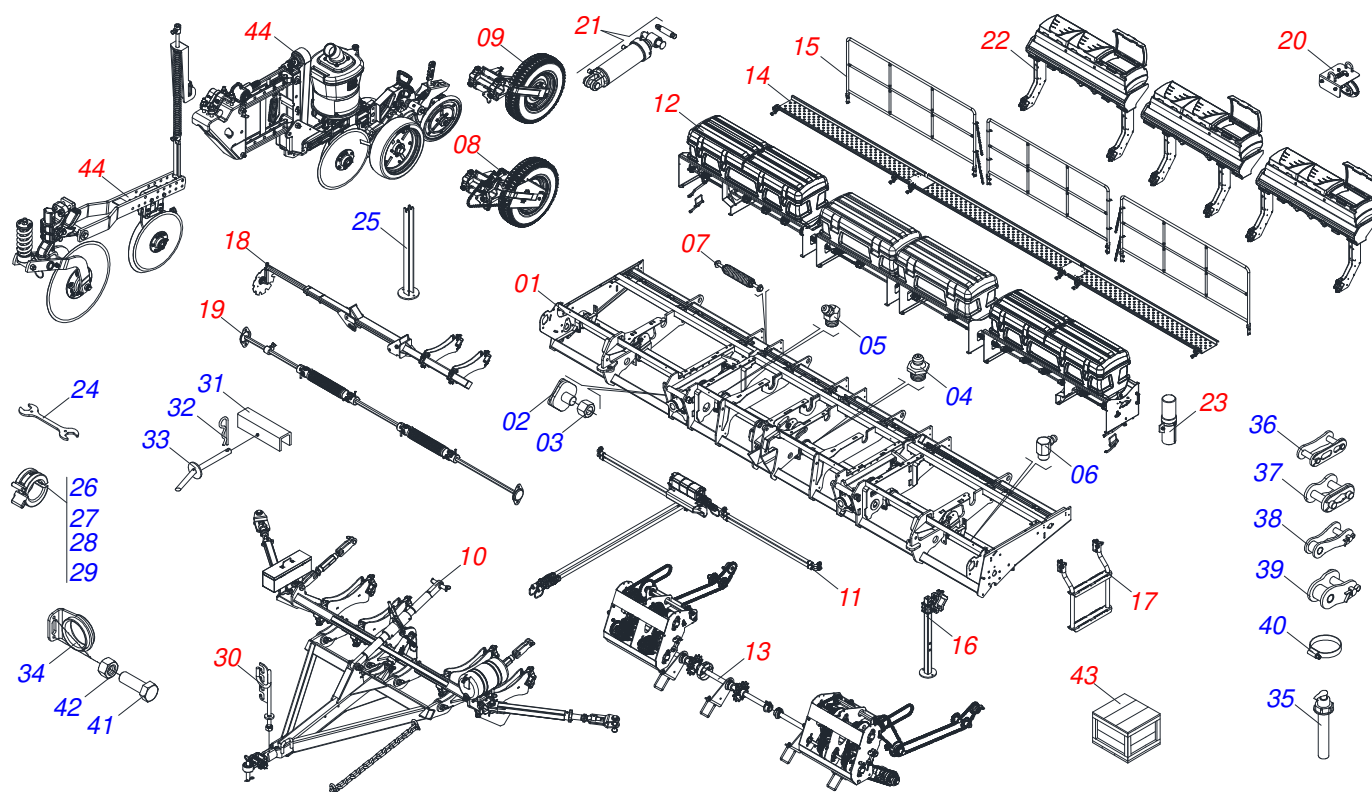

Item	Code	Description	See page	8160	8460	8960	9460	9960	10985
01	0511059576	FRAME WITH SHAFT	2	001	000	000	000	000	000
01.	0511056311	ARTICULATION FRAME 8460	6	000	001	000	000	000	000
01..	0521052760	ARTICULATED FRAME 8960	10	000	000	001	000	000	000
01...	0521052763	ARTICULATED FRAME 9460	14	000	000	000	001	000	000
01....	0521052765	ARTICULATED FRAME 9960	16	000	000	000	000	001	000
01.....	0521052769	ARTICULATED FRAME 10985	19	000	000	000	000	000	001
02	0521064285	LOCK LOWER FRAME		002	002	002	002	002	002
03	0501010116	HEX NUT 1.5/8 7 FPP 2.3/8 ZN		002	002	002	002	002	002
04	0503010002	1800 GREASE FITTING		002	002	002	002	002	002
05	0503010003	1845 GREASE FITTING		008	008	008	008	008	008
06	0503010004	1890 GREASE FITTING		002	002	002	002	002	002
07	0511059232	ASSEMBLY SPRING TRACTION	23	002	002	002	002	002	002
08	0521055229	WHEELED WITH 655 DRIFT SPRING WITH TRANSMISSION	24	004	004	004	004	004	004
08.	0521058402	WHEELED WITH 655 DRIFT SPRING WITH TRANSMISSION	25	000	000	001	000	000	000
09	0521055241	WHEELED WITH 655 DRIFT SPRING WITHOUT TRANSMISSION	26	002	002	002	002	004	004
09.	0521058404	WHEELED WITH 655 DRIFT SPRING WITHOUT TRANSMISSION	27	000	000	001	000	000	000
10	0909095212	HEADER FULL ASSEMBLY - FRAME 8160/8460	42	001	001	000	000	000	000
10.	0909095213	HEADER FULL ASSEMBLY - FRAME 8960/9460/9960/10985	43	000	000	001	001	001	001
11	0521052860	HYDRAULIC SYSTEM ASSEMBLY 8160/8460	53	001	001	000	000	000	000
11.	0521052895	HYDRAULIC SYSTEM ASSEMBLY 8960/9960	54	000	000	001	000	001	000
11..	0521052913	HYDRAULIC SYSTEM ASSEMBLY 9460/10460	55	000	000	000	001	000	000
11...	0521052953	HYDRAULIC SYSTEM ASSEMBLY 10985	56	000	000	000	000	000	001
12	0521052751	ASSY SILO FERTILIZER 8160	60	001	000	000	000	000	000
12.	0521052744	ASSY SILO FERTILIZER 8460	68	000	001	000	000	000	000
12..	0521052740	SILO FERTILIZER ASSEMBLY 8960	74	000	000	001	000	000	000
12...	0521052741	SILO FERTILIZER ASSEMBLY 9460	76	000	000	000	001	000	000
12....	0521052747	SILO FERTILIZER ASSEMBLY 9960	78	000	000	000	000	001	000

ASSY FRAME

0909096214

Item	Code	Description	See page	8160	8460	8960	9460	9960	10985
12.....	0521052749	SILO FERTILIZER ASSEMBLY 10985	82	000	000	000	000	000	001
13	0511058836	ASSEMBLY TRANSMISSION 7960/8160/8460	86	001	001	000	000	000	000
13.	0511058885	TRANSMISSION ASSEMBLY 8960	87	000	000	001	000	000	000
13..	0521050216	TRANSMISSION ASSEMBLY 9460	88	000	000	000	001	000	000
13...	0511058850	TRANSMISSION ASSEMBLY 9960/10460	89	000	000	000	000	001	000
13....	0521051048	TRANSMISSION ASSEMBLY 10985	90	000	000	000	000	000	001
14	0521052673	PLATFORM ASSEMBLY 8160	113	001	000	000	000	000	000
14.	0521052676	PLATFORM ASSEMBLY 8460	114	000	001	000	000	000	000
14..	0521052677	PLATFORM ASSEMBLY 8960	115	000	000	001	000	000	000
14...	0521052678	PLATFORM ASSEMBLY 9460	116	000	000	000	001	000	000
14....	0521052679	PLATFORM ASSEMBLY 9960	117	000	000	000	000	001	000
14.....	0521052681	PLATFORM ASSEMBLY 10985	118	000	000	000	000	000	001
15	0511059571	HANDLE ASSEMBLY 8160	119	001	000	000	000	000	000
15.	0511058282	HANDLE ASSEMBLY 8460	120	000	001	000	000	000	000
15..	0511058889	HANDLE ASSEMBLY 8960	121	000	000	001	000	000	000
15...	0521050213	HANDLE ASSEMBLY 9460	122	000	000	000	001	000	000
15....	0511058845	HANDLE ASSEMBLY 9960	123	000	000	000	000	001	000
15.....	0521051058	HANDLE ASSEMBLY 10985	124	000	000	000	000	000	001
16	0511054971	JACK ASSEMBLY	125	002	002	002	002	002	002
17	0511056536	LADDER ASSEMBLY	126	002	002	002	002	002	002
18	0521052886	8160 DOUBLE ARTICULATED HYDRAULIC MARKER	127	001	000	000	000	000	000
18.	0511057889	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8460	128	000	001	000	000	000	000
18..	0511056250	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 8960	129	000	000	001	000	000	000
18...	0511056158	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 9460	130	000	000	000	001	000	000
18....	0521052002	ASSY MARKER HYDRAULIC ARTICULATED DOUBLE 9960	131	000	000	000	000	001	000
18.....	0521051379	DOUBLE ARTICULATED HYDRAULIC MARKER	132	000	000	000	000	000	001
19	0521052887	AXIS TRANSMISSION SEED ASSY 8160	135	001	000	000	000	000	000
19.	0521052863	AXIS TRANSMISSION SEED ASSY 8460	136	000	001	000	000	000	000
19..	0521052898	AXIS TRANSMISSION SEED ASSY 8960	137	000	000	001	000	000	000
19...	0521052909	AXIS TRANSMISSION SEED ASSY 9460	138	000	000	000	001	000	000
19....	0521052921	AXIS TRANSMISSION SEED ASSY 9960	139	000	000	000	000	001	000
19.....	0521052858	AXIS TRANSMISSION SEED ASSY 7860		000	000	000	000	000	001
20	0521052844	REAR LIGHT ASSEMBLY 7860/7960/8160/8460	143	001	001	000	000	000	000
20.	0521052899	REAR LIGHT ASSEMBLY 8960/9460	144	000	000	001	001	000	000
20..	0521052923	REAR LIGHT ASSEMBLY 9960	145	000	000	000	000	001	000
20...	0521052960	REAR LIGHT ASSEMBLY 10985	146	000	000	000	000	000	001
21	0521052796	CYLINDER ASSEMBLY 5750/6850/7860/7960/8460	148	001	001	001	001	001	001
21.	0521052797	CYLINDER ASSEMBLY 8960/9460/9960/10460/10985	149	000	000	001	000	000	000
22	0521052696	ASSEMBLY CSU C3 SEMI MOUNTED 8160	151	001	000	000	000	000	000
22.	0511058398	ASSEMBLY CSU C3 SEMI MOUNTED 7860/8460	156	000	001	000	000	000	000
22..	0511058577	ASSEMBLY CSU C3 SEMI MOUNTED 8960	159	000	000	001	000	000	000
22...	0521052694	ASSEMBLY CSU C3 SEMI MOUNTED 8960/9460	161	000	000	000	001	000	000
22....	0521052692	ASSEMBLY CSU C3 SEMI MOUNTED 9960	163	000	000	000	000	001	000
22.....	0521051062	ASSEMBLY CSU C3 SEMI MOUNTED 10985	167	000	000	000	000	000	001
23	0521052810	ASSY MANUAL DOOR		001	001	001	001	001	001
24	0541015451	FIXED KEY 2.3/8 X 2.3/4		001	001	001	001	001	001
25	0501065677	STRUT		002	002	002	002	002	002
26	0501047895	ROD STOP		003	003	003	003	003	003
27	0501047885	ROD STOP		003	003	003	003	003	003
28	0501047886	ROD STOP		003	003	003	003	003	003
29	0501047887	ROD STOP		003	003	003	003	003	003
30	0511056736	HOSE SUPPORT		001	001	001	001	001	001
31	0521013022	TRANSPORT LOCK		003	003	003	003	003	003
32	0503030168	HITCH PIN CLIP		003	003	003	003	003	003
33	0501068994	0.3" X 3.1" LOCK PIN		003	003	003	003	003	003
34	0521066304	HOSE GUIDE		001	001	001	001	001	001




ASSY FRAME

0909096214


Item	Code	Description	See page	8160	8460	8960	9460	9960	10985
35	0503019262	SOAP DISH VACUUM		001	001	001	001	001	001
36	0503010780	N-2050 AMENDMENT		002	002	002	002	002	002
37	0503011750	AMENDMENT WITH LOCK		006	006	006	006	006	006
38	0503011751	REDUCTION		006	006	006	006	006	006
39	0503010951	REDUCTION		004	004	004	004	004	004
40	0503010246	CLAMP		015	017	018	020	020	022
41	0503011762	SCREW 5/16UNC X 1.1/4 CAPQ G.2 ZN		002	002	002	002	002	002
42	0503013816	5/16" LOCKNUT		002	002	002	002	002	002
43	0521025447	BOX WITH HYDRAULIC MARKER COMPONENTS	169	001	001	001	000	000	000
43.	0521024105	BOX WITH HYDRAULIC MARKER COMPONENTS	170	000	000	000	001	001	001
44	0909096215	SEED LINE/FERTILIZER ASSEMBLY	171	001	001	001	001	001	001

FRAME WITH SHAFT


0511059576

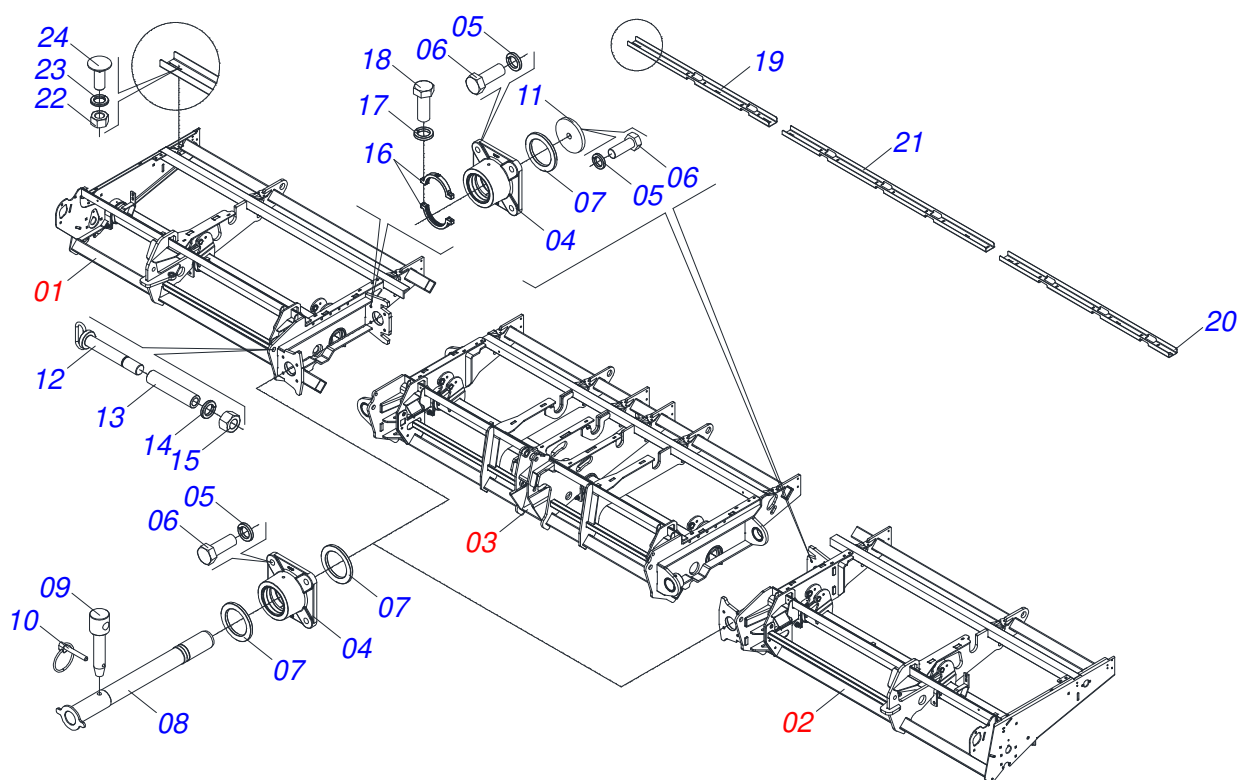


Item	Code	Description	See page	QT
01	0511053766	RIGHT FRAME WITH WHEELED AXLE 7960/8160	3	01
02	0511053767	LEFT FRAME WITH WHEELED AXLE 7960/8160	4	01
03	0511059288	CENTRAL FRAME WITH WHEELED AXLE 5750/6850/7860/8160	5	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0521063003	LOCK PIN		02
13	0571010969	LOCK SLEEVE FRAME		02
14	0503013627	1.1/2 SPRING WASHER		02
15	0501010110	1.1/2" NUT		02
16	0502012698	CLAMP		04
17	0503011444	SPRING WASHER		04
18	0503010365	NUT		04
19	0581018026	CENTRAL GUTTER		02
20	0581015857	GUTTER 24 X 50 X 1080		02
21	0581018027	1570 CENTRAL GUTTER		02
22	0503010026	3/8" NUT		14
23	0503010025	3/8" SPRING WASHER		14
24	0501011643	3/8 X 1" BOLT		14

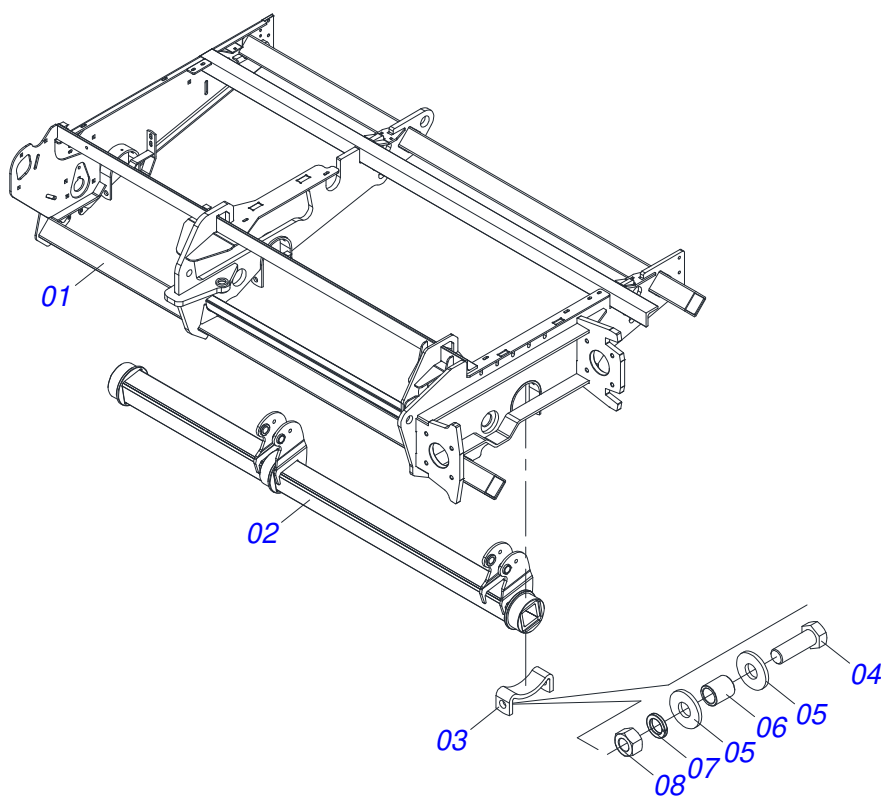

Item	Code	Description	See page	QT
01	0521064287	FRAME BRACKET		01
02	0521064284	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

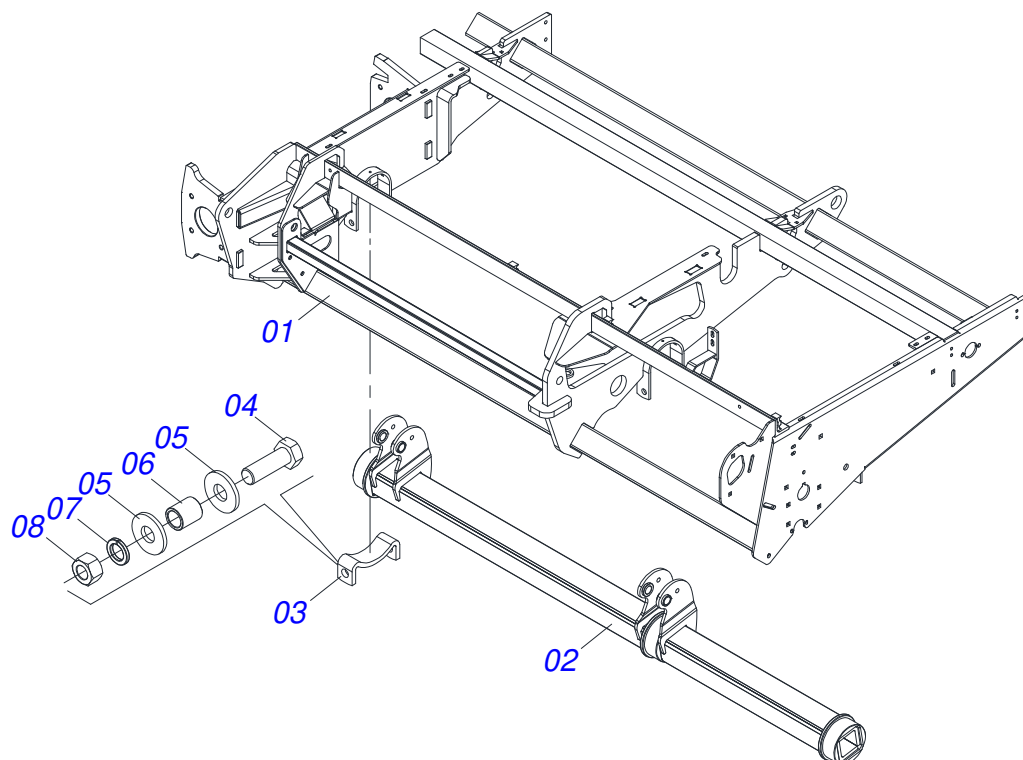


Item	Code	Description	See page	QT
01	0521064286	FRAME BRACKET		01
02	0521064283	CARRYING-WHEELS PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

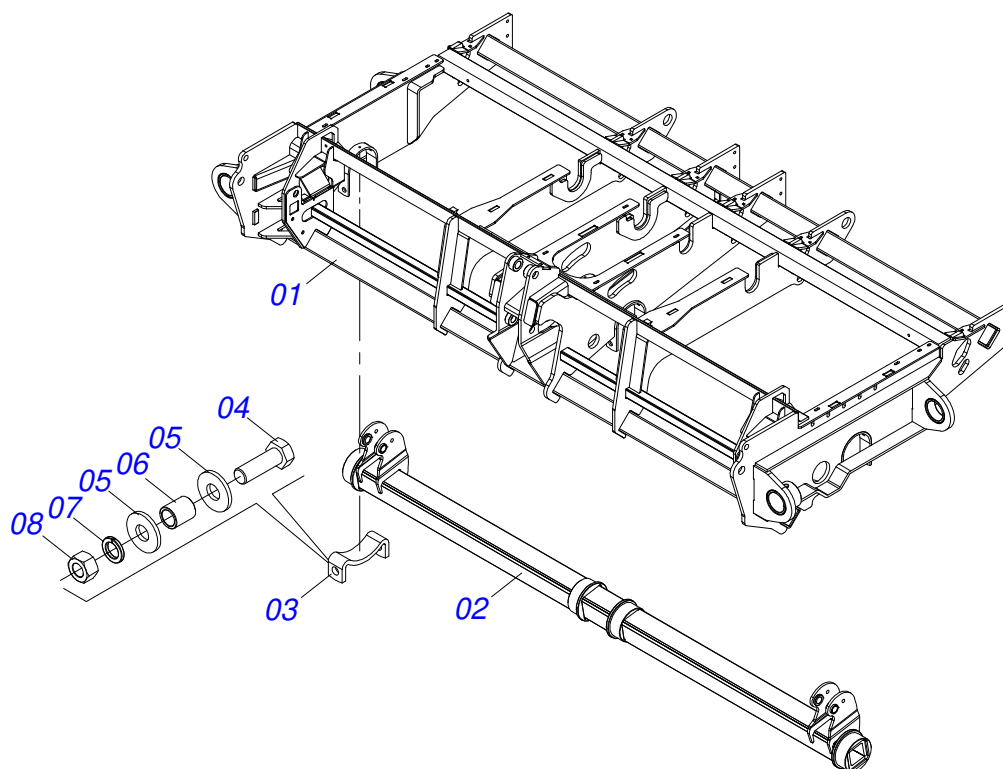


Item	Code	Description	See page	QT
01	0521066916	CENTRAL CHASSIS		01
02	0521013199	LOWER BEARING SEMI		04
03	0503010899	5/8" X 2-1/4" BOLT		08
04	0501012140	FLAT WASHER		16
05	0531013922	0.6" X 0.8" X 1" SLEEVE		08
06	0503011445	SPRING WASHER		08
07	0503010013	5/8" NUT		08
08	0521063878	ARTICLE AXLE ROLLED		01

ARTICULATION FRAME 8460


0511056311

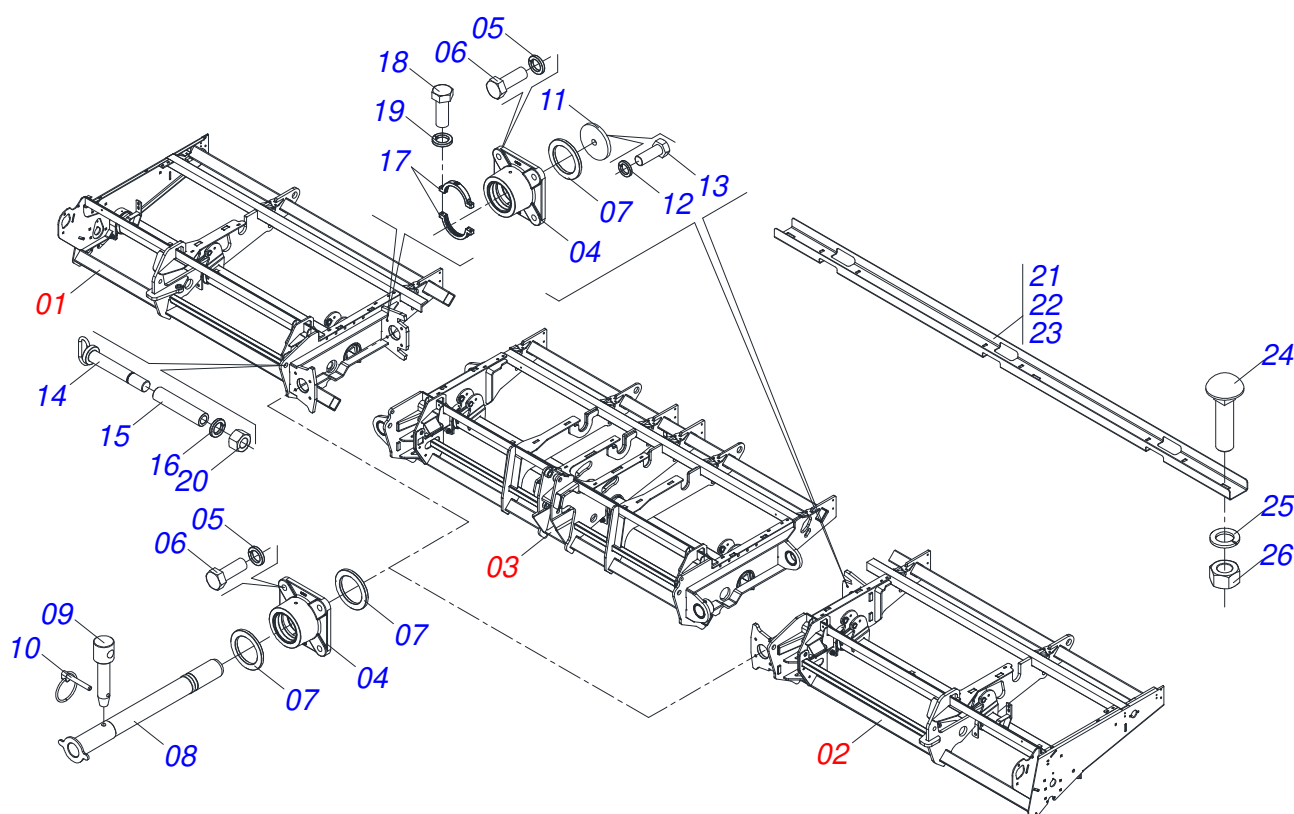


Item	Code	Description	See page	QT
01	0511056312	RIGHT FRAME WITH WHEELED AXLE 8460	7	01
02	0511056313	LEFT FRAME WITH WHEELED AXLE 8460	8	01
03	0511053190	CENTRAL FRAME WITH WHEELED AXLE 8460	9	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
05	0503011442	3/4" SPRING WASHER		16
06	0501010098	3/4" UNC BOLT		16
07	0571010094	SLEEVE FLANGE		06
08	0521063912	PIVOT SHAFT		02
09	0571013510	LOCK AXLE		02
10	0503030085	LOCK PIN		02
11	0571010095	FLAT WASHER		02
12	0503011442	3/4" SPRING WASHER		02
13	0501010098	3/4" UNC BOLT		02
14	0521063003	LOCK PIN		02
15	0571010969	LOCK SLEEVE FRAME		02
16	0503013627	1.1/2 SPRING WASHER		02
17	0502012698	CLAMP		04
18	0503010365	NUT		04
19	0503011444	SPRING WASHER		04
20	0501010110	1.1/2" NUT		02
21	0581017979	GUTTER		02
22	0581017935	GUTTER		02
23	0581018018	TROUGH 24 X 50 X 1255		02
24	0501011643	3/8 X 1" BOLT		12
25	0503010025	3/8" SPRING WASHER		12
26	0503010026	3/8" NUT		12

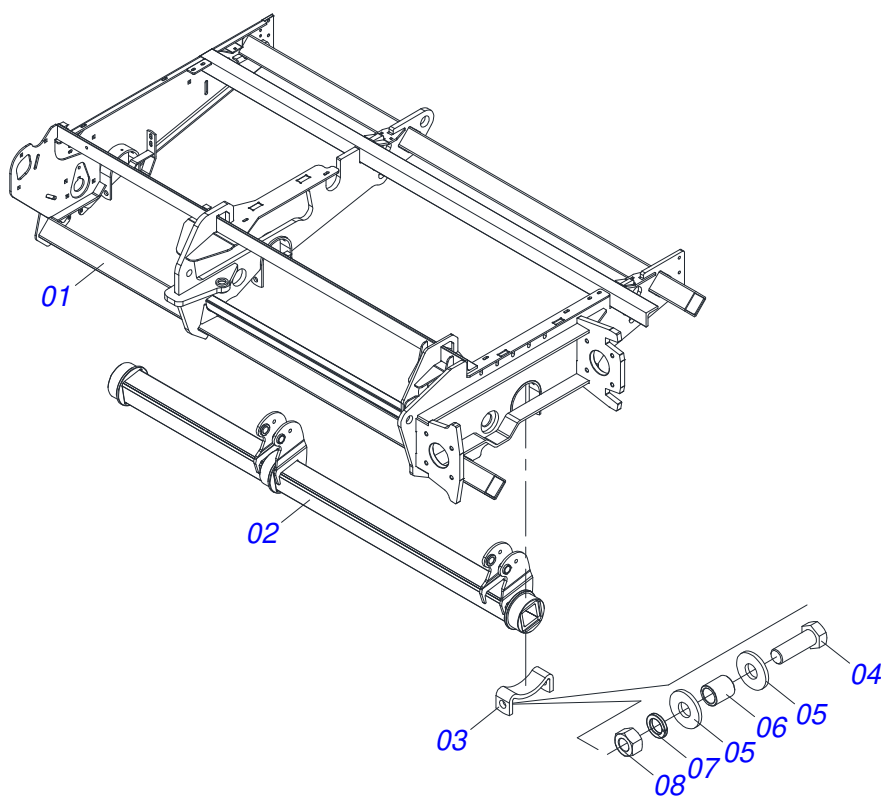


Item	Code	Description	See page	QT
01	0521065394	RIGHT CHASSIS		01
02	0521065222	SIDE ROD JOINT AXLE		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

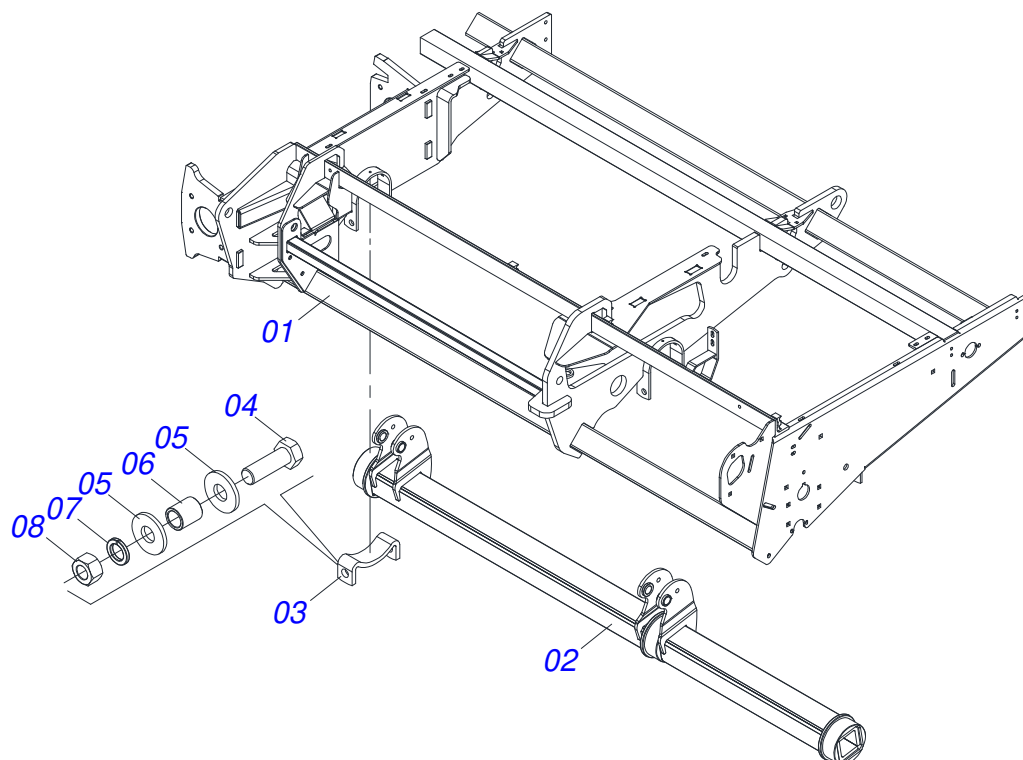


Item	Code	Description	See page	QT
01	0521065395	LEFT CHASSIS		01
02	0521065223	SHAFT SHAFT SHAFT SIDE SHAFT		01
03	0521013199	LOWER BEARING SEMI		03
04	0503010899	5/8" X 2-1/4" BOLT		06
05	0501012140	FLAT WASHER		12
06	0531013922	0.6" X 0.8" X 1" SLEEVE		06
07	0503011445	SPRING WASHER		06
08	0503010013	5/8" NUT		06

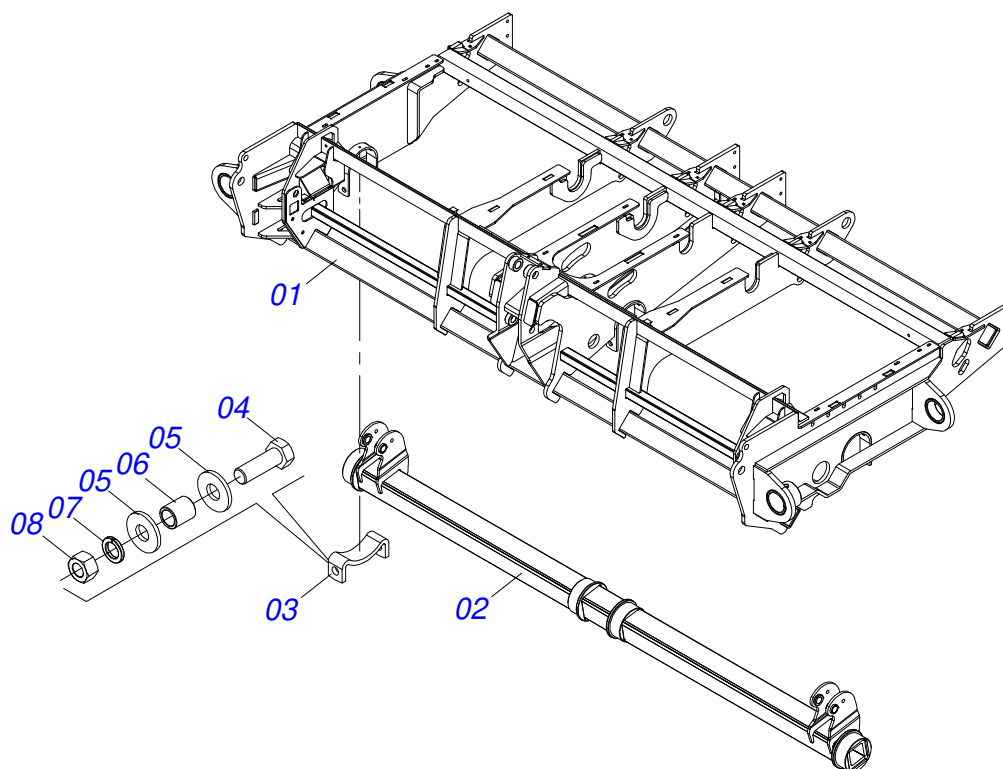


Item	Code	Description	See page	QT
01	0521064011	CENTRAL FRAME PST TRIO 15		01
02	0521064022	CENTRAL ARTICLES AXLE ROLLED		01
03	0521013199	LOWER BEARING SEMI		04
04	0503010899	5/8" X 2-1/4" BOLT		08
05	0501012140	FLAT WASHER		16
06	0531013922	0.6" X 0.8" X 1" SLEEVE		08
07	0503011445	SPRING WASHER		08
08	0503010013	5/8" NUT		08

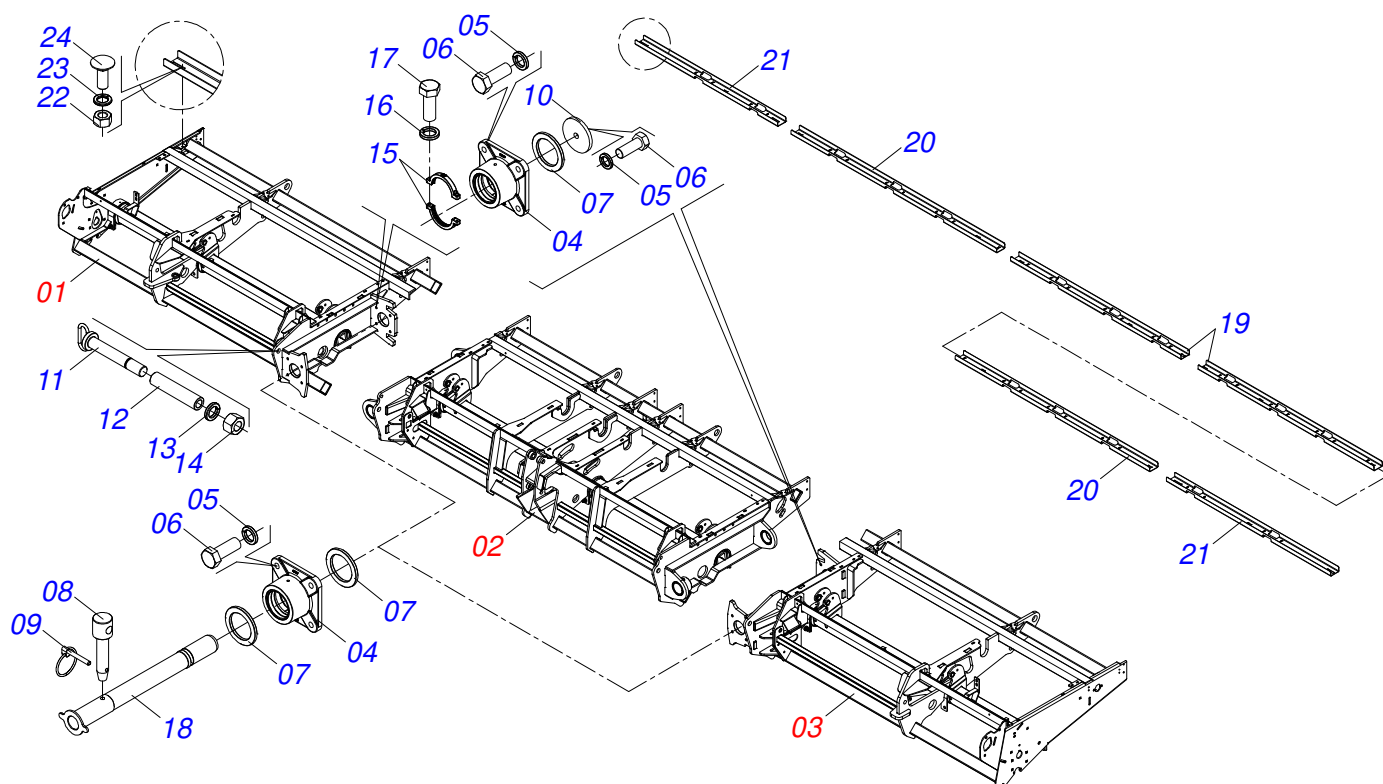


Item	Code	Description	See page	QT
01	0521052758	FRAME RIGHT WITH AXIS 8960/9460	11	01
02	0521052761	FRAME CENTRAL WITH AXIS 8960/9960	12	01
03	0521052759	LEFT FRAME WITH AXIS 8960/9460	13	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0571013510	LOCK AXLE		02
09	0503030085	LOCK PIN		02
10	0571010095	FLAT WASHER		02
11	0521063003	LOCK PIN		02
12	0571010969	LOCK SLEEVE FRAME		02
13	0503013627	1.1/2 SPRING WASHER		02
14	0501010110	1.1/2" NUT		02
15	0502012698	CLAMP		04
16	0503011444	SPRING WASHER		04
17	0503010365	NUT		04
18	0521064842	PIVOT SHAFT		02
19	0581017979	GUTTER		02
20	0581017935	GUTTER		02
21	0581018025	TROUGH 24 X 50 X 1500		02
22	0503010026	3/8" NUT		14
23	0503010025	3/8" SPRING WASHER		14
24	0501011643	3/8 X 1" BOLT		14

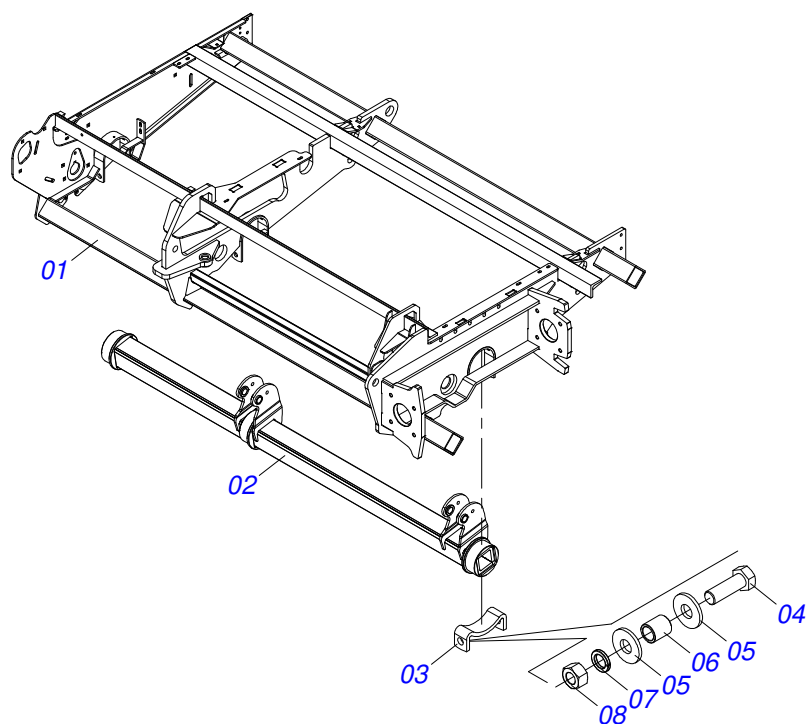


Item	Code	Description	See page	QT
01	0521068631	RIGHT FRAME		01
02	0521068629	ARTICLES AXLE RIGHT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8" X 2-1/4" BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8" NUT		04

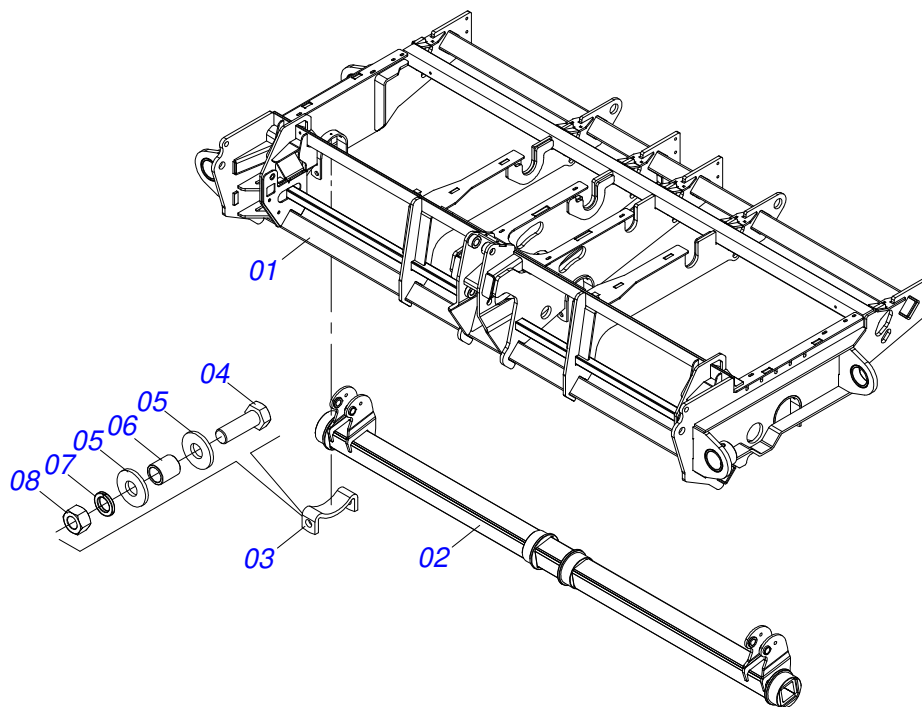


Item	Code	Description	See page	QT
01	0521068633	FRAME CENTRAL		01
02	0521068634	ARTICULATED AXLE		01
03	0521013199	LOWER BEARING SEMI		04
04	0503010899	5/8" X 2-1/4" BOLT		08
05	0501012140	FLAT WASHER		16
06	0531013922	0.6" X 0.8" X 1" SLEEVE		08
07	0503011445	SPRING WASHER		08
08	0503010013	5/8" NUT		08

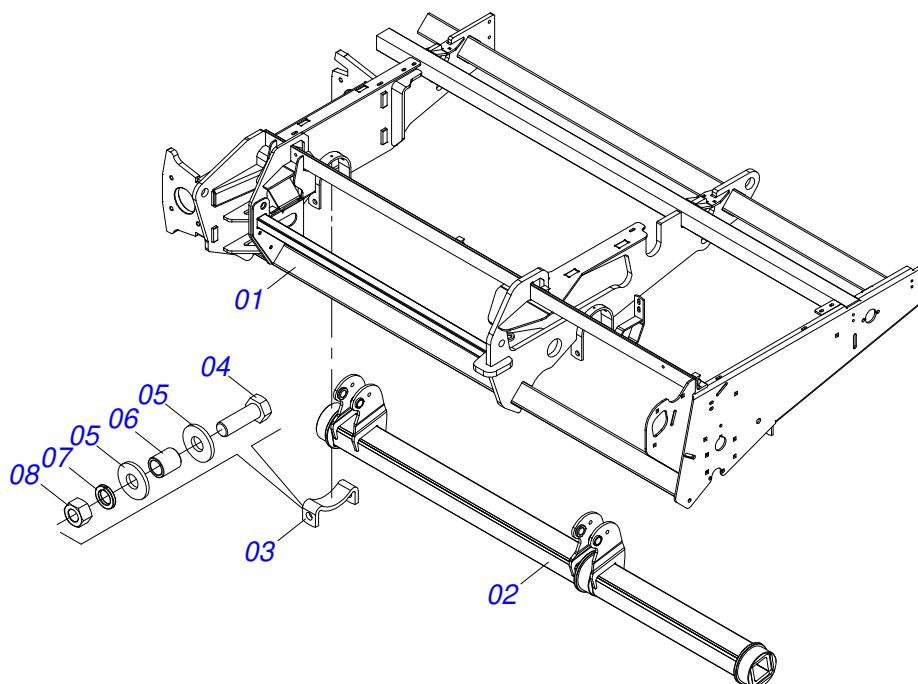


Item	Code	Description	See page	QT
01	0521068632	LEFT FRAME		01
02	0521068630	ARTICLES AXLE LEFT ROLLED		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8" X 2-1/4" BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8" NUT		04

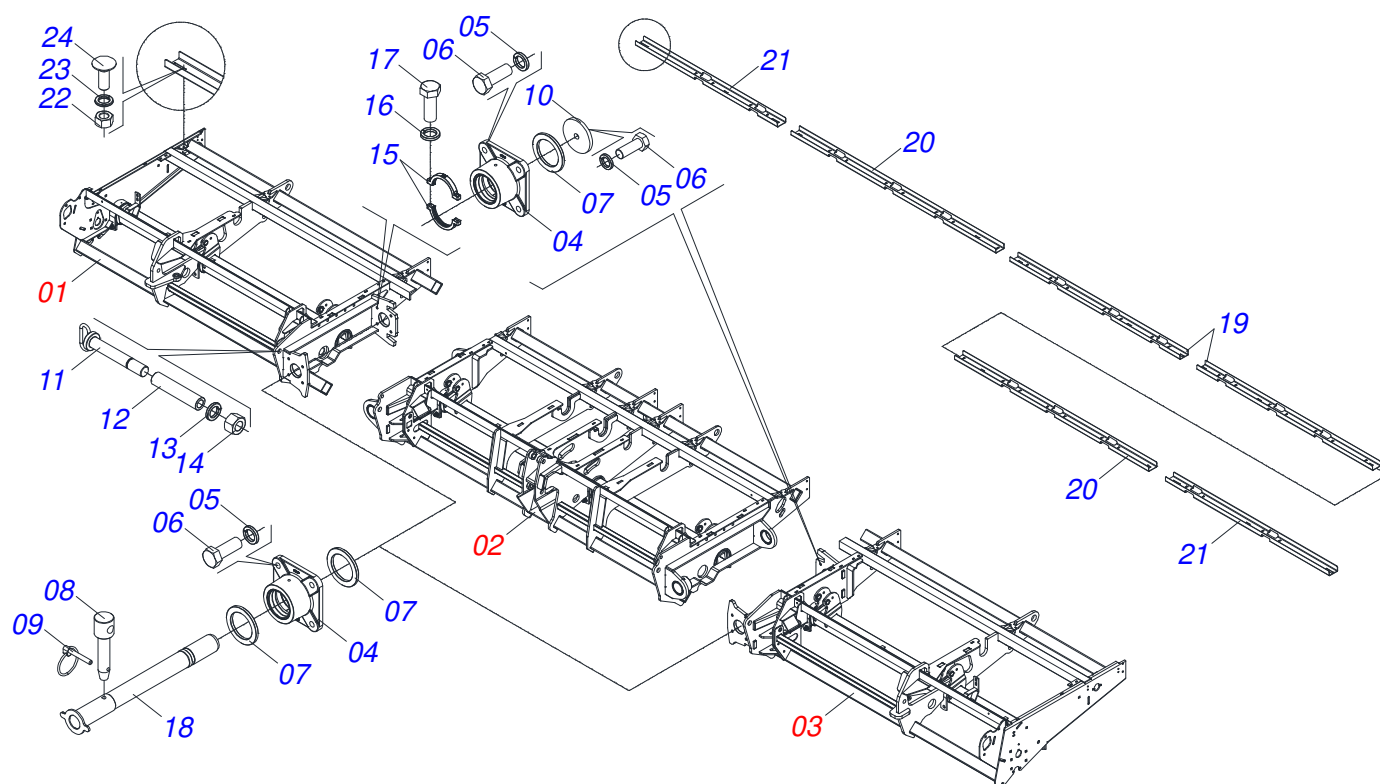


Item	Code	Description	See page	QT
01	0521052758	FRAME RIGHT WITH AXIS 8960/9460	11	01
02	0521052762	FRAME CENTRAL WITH AXIS 9460/10460	15	01
03	0521052759	LEFT FRAME WITH AXIS 8960/9460	13	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0571013510	LOCK AXLE		02
09	0503030085	LOCK PIN		02
10	0571010095	FLAT WASHER		02
11	0521063003	LOCK PIN		02
12	0571010969	LOCK SLEEVE FRAME		02
13	0503013627	1.1/2 SPRING WASHER		02
14	0501010110	1.1/2" NUT		02
15	0502012698	CLAMP		04
16	0503011444	SPRING WASHER		04
17	0503010365	NUT		04
18	0521064842	PIVOT SHAFT		02
19	0581017979	GUTTER		02
20	0581017935	GUTTER		02
21	0581017978	CENTRAL TRACK		02
22	0503010026	3/8" NUT		14
23	0503010025	3/8" SPRING WASHER		14
24	0501011643	3/8 X 1" BOLT		14

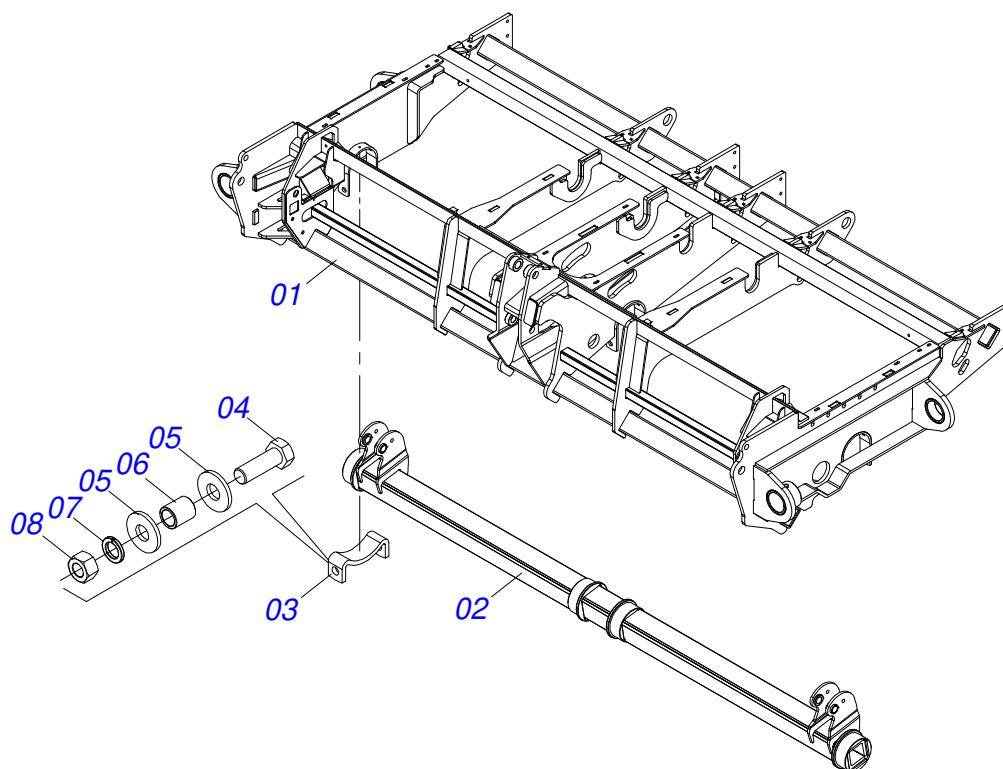


Item	Code	Description	See page	QT
01	0521068635	CENTRAL CHASSIS		01
02	0521068637	ARTICLE AXLE ROLLED		01
03	0521013199	LOWER BEARING SEMI		04
04	0503010899	5/8" X 2-1/4" BOLT		08
05	0501012140	FLAT WASHER		16
06	0531013922	0.6" X 0.8" X 1" SLEEVE		08
07	0503011445	SPRING WASHER		08
08	0503010013	5/8" NUT		08

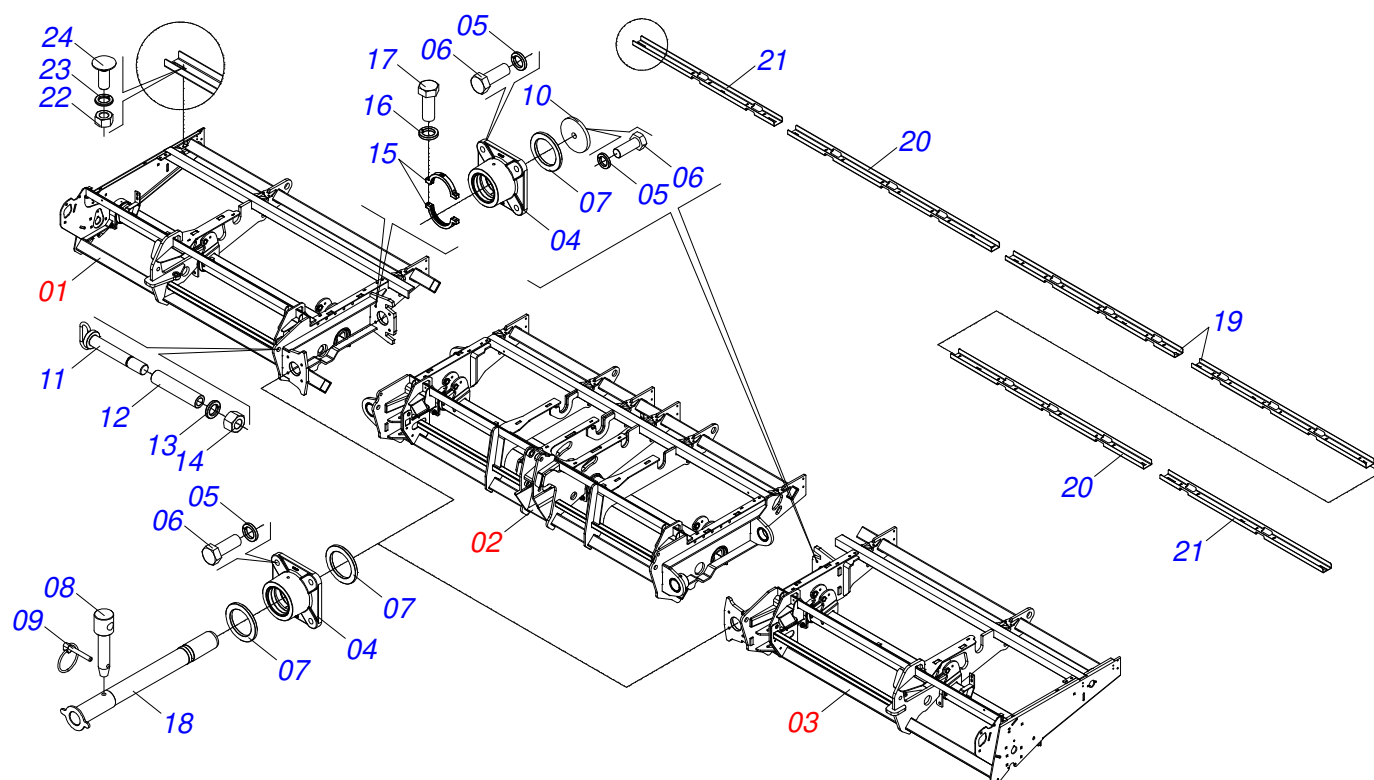


Item	Code	Description	See page	QT
01	0521052767	RIGHT FRAME WITH WHEELED AXLE 9960/10460	17	01
02	0521052761	FRAME CENTRAL WITH AXIS 8960/9960	12	01
03	0521052766	LEFT FRAME WITH WHEELED AXLE 9960/10460	18	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0571013510	LOCK AXLE		02
09	0503030085	LOCK PIN		02
10	0571010095	FLAT WASHER		02
11	0521063003	LOCK PIN		02
12	0571010969	LOCK SLEEVE FRAME		02
13	0503013627	1.1/2 SPRING WASHER		02
14	0501010110	1.1/2" NUT		02
15	0502012698	CLAMP		04
16	0503011444	SPRING WASHER		04
17	0503010365	NUT		04
18	0521064842	PIVOT SHAFT		02
19	0581017935	GUTTER		02
20	0581017750	1576 GUTTER		02
21	0581017933	155 GUTTER		02
22	0503010026	3/8" NUT		12
23	0503010025	3/8" SPRING WASHER		12
24	0501011643	3/8 X 1" BOLT		12

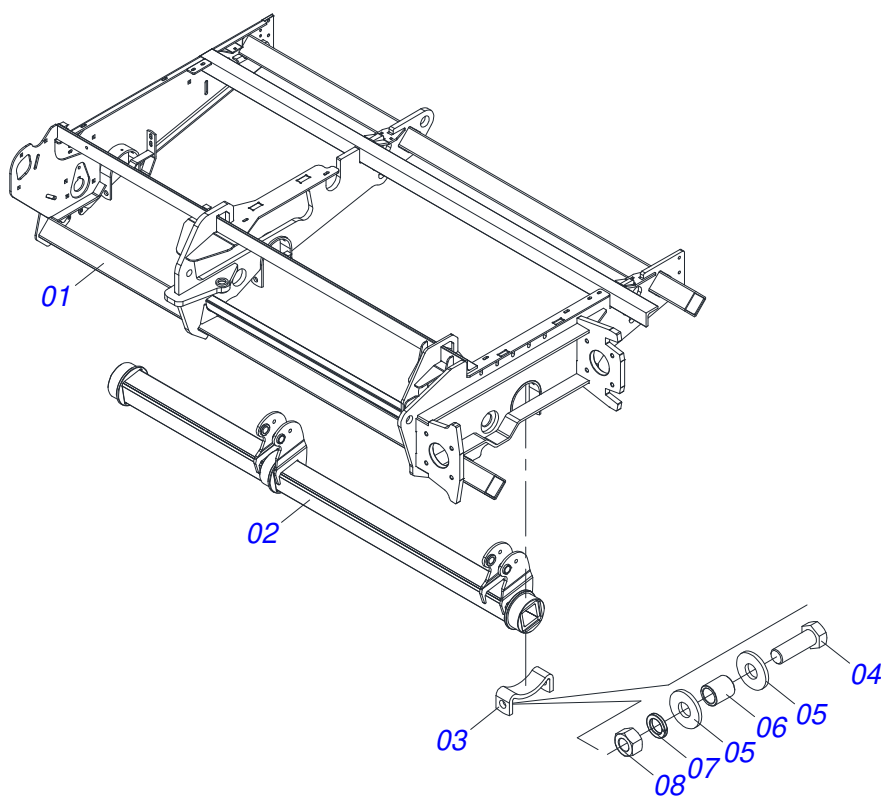


Item	Code	Description	See page	QT
01	0521068641	21 E 500 RH FRAME		01
02	0521068642	RH PIVOT SHAFT		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8" X 2-1/4" BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8" NUT		04

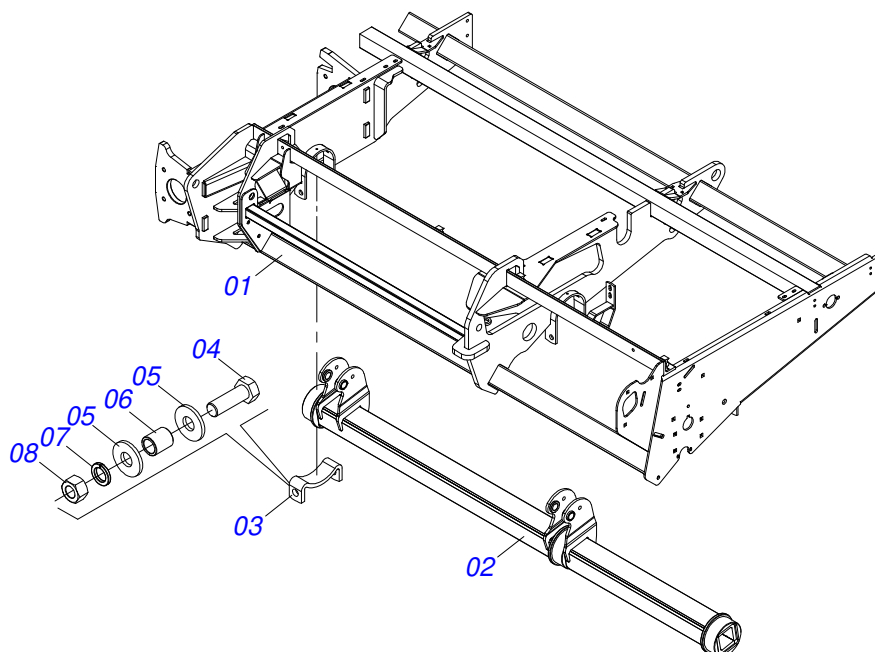


Item	Code	Description	See page	QT
01	0521068639	LEFT FRAME		01
02	0521068640	LH PIVOT SHAFT WHEEL		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8" X 2-1/4" BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8" NUT		04

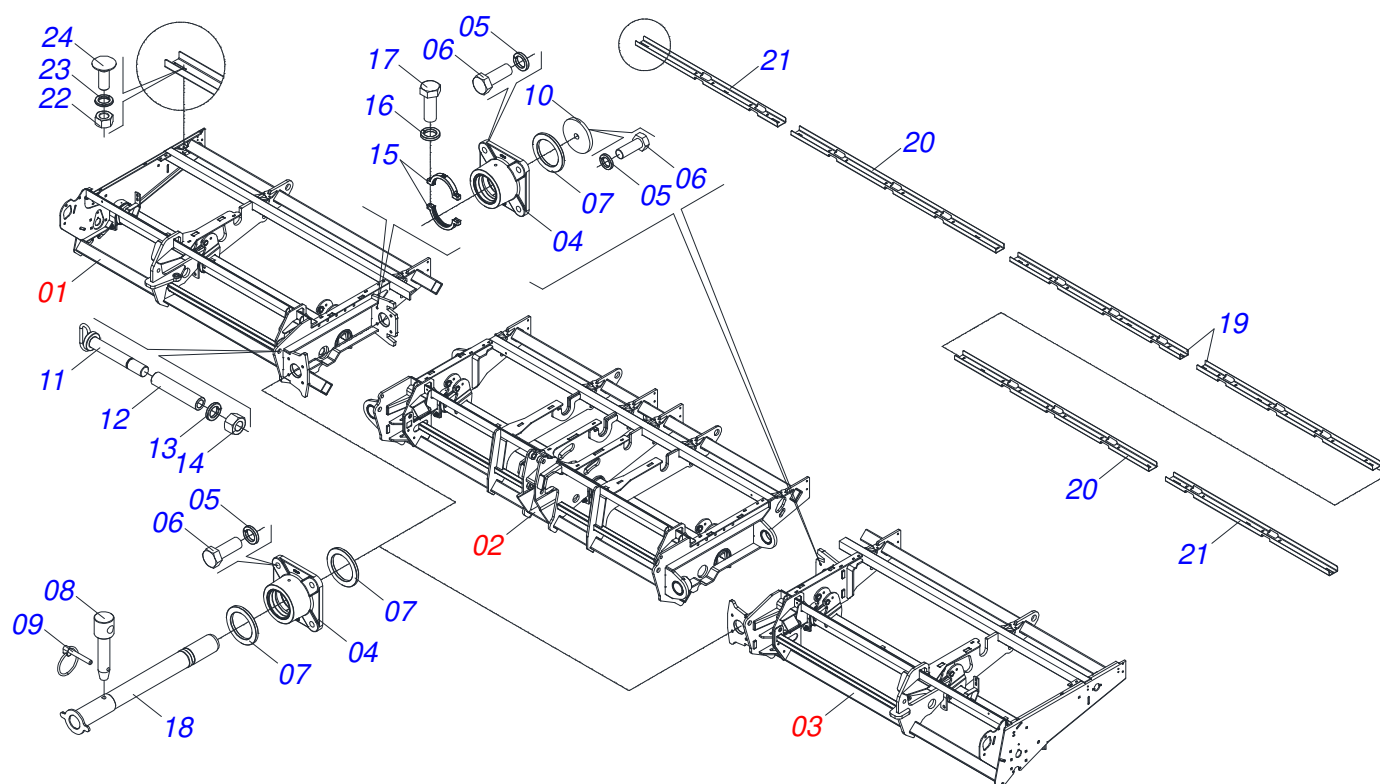


Item	Code	Description	See page	QT
01	0521052770	RIGHT FRAME WITH WHEELED AXLE 10985	20	01
02	0521052187	FRAME CENTRAL WITH AXIS WHEEL 10985	21	01
03	0521052774	LEFT FRAME WITH AXIS WHEEL 10985	22	01
04	0501110683	REAR HUB OF ARTICULATOR WITH GLOVES		04
05	0503011442	3/4" SPRING WASHER		18
06	0501010098	3/4" UNC BOLT		18
07	0571010094	SLEEVE FLANGE		06
08	0571013510	LOCK AXLE		02
09	0503030085	LOCK PIN		02
10	0571010095	FLAT WASHER		02
11	0521063003	LOCK PIN		02
12	0571010969	LOCK SLEEVE FRAME		02
13	0503013627	1.1/2 SPRING WASHER		02
14	0501010110	1.1/2" NUT		02
15	0502012698	CLAMP		04
16	0503011444	SPRING WASHER		04
17	0503010365	NUT		04
18	0521064842	PIVOT SHAFT		02
19	0581018005	1465 GUTTER		02
20	0581017978	CENTRAL TRACK		02
21	0581017758	TROUGH 24 X 50 X 1900 6850		02
22	0503010026	3/8" NUT		16
23	0503010025	3/8" SPRING WASHER		16
24	0501011643	3/8 X 1" BOLT		16

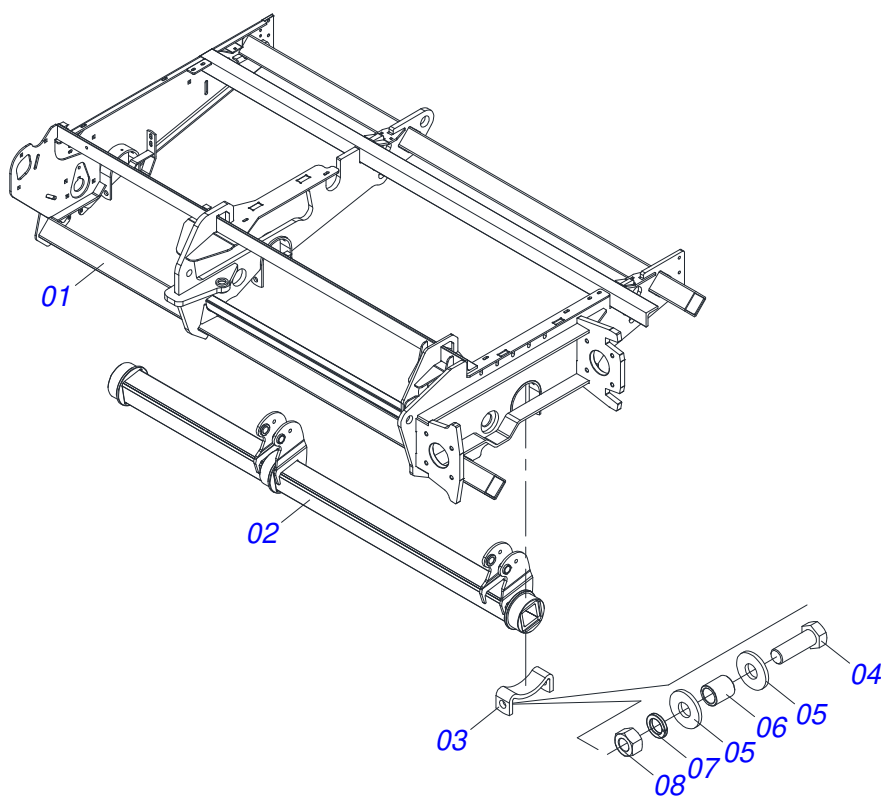


Item	Code	Description	See page	QT
01	0521068643	22E500/ 24E500 RH FRAME		01
02	0521068646	RH PIVOT SHAFT SIDE WHEEL SET		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8" X 2-1/4" BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8" NUT		04

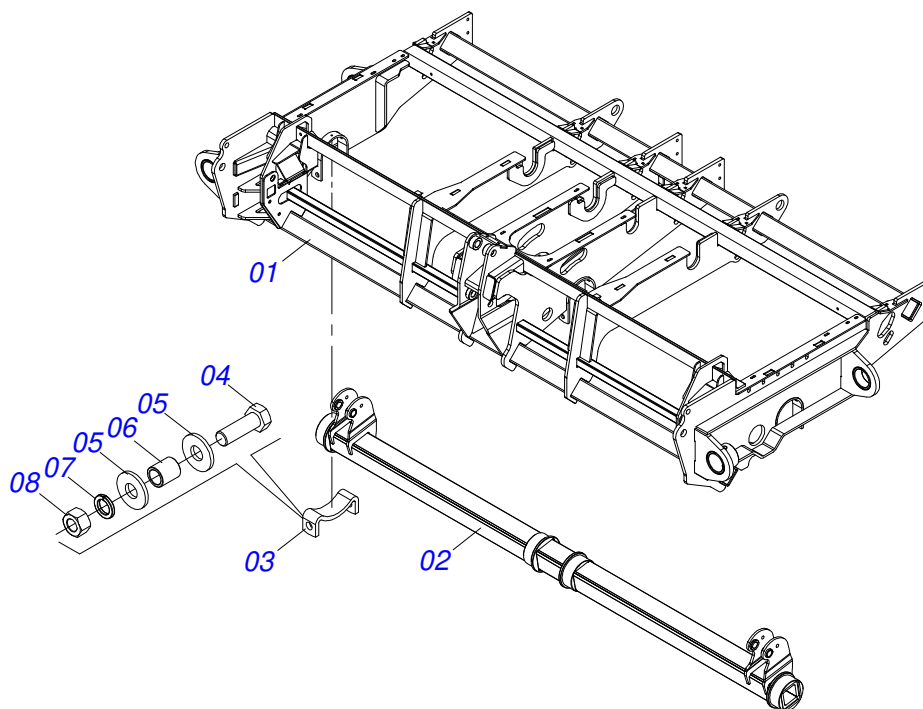


Item	Code	Description	See page	QT
01	0521068381	CENTRAL FRAME		01
02	0521068382	CARRYING-WHEELS PIVOT AXLE		01
03	0521013199	LOWER BEARING SEMI		06
04	0503010899	5/8" X 2-1/4" BOLT		12
05	0501012140	FLAT WASHER		24
06	0531013922	0.6" X 0.8" X 1" SLEEVE		08
07	0503011445	SPRING WASHER		12
08	0503010013	5/8" NUT		12

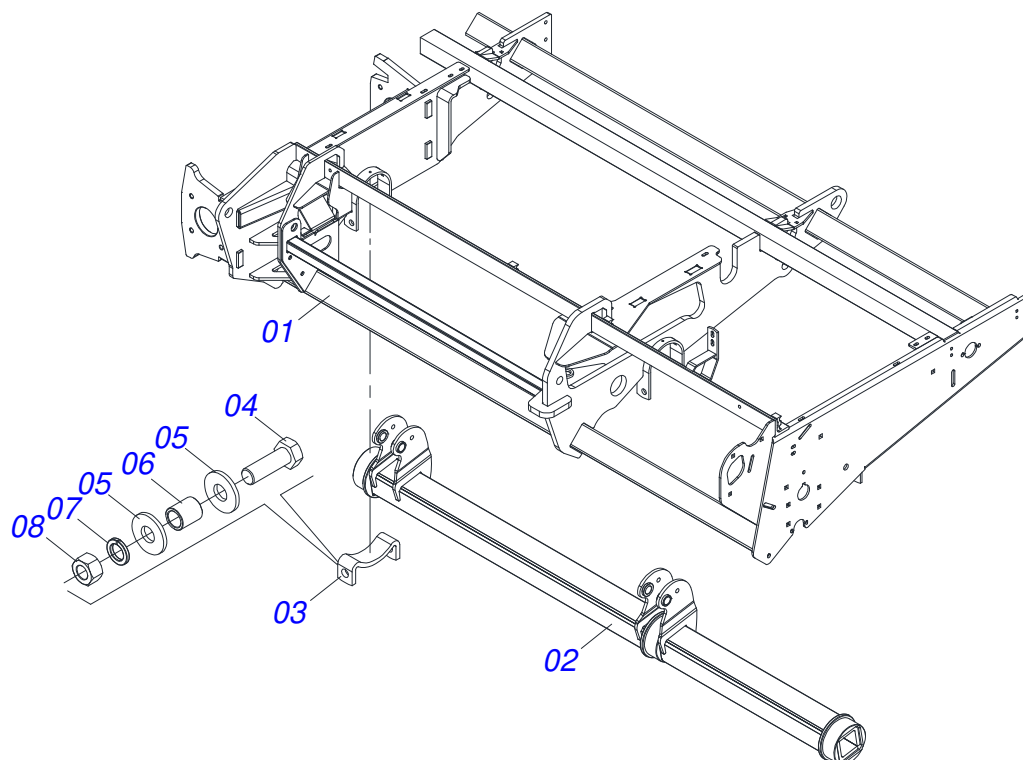


Item	Code	Description	See page	QT
01	0521068645	22 E 500 / 24 E 450 LEFT FRAME		01
02	0521068644	ARTICULATED LEFT AXLE SIDE WHEEL 10985		01
03	0521013199	LOWER BEARING SEMI		02
04	0503010899	5/8" X 2-1/4" BOLT		04
05	0501012140	FLAT WASHER		08
06	0531013922	0.6" X 0.8" X 1" SLEEVE		04
07	0503011445	SPRING WASHER		04
08	0503010013	5/8" NUT		04

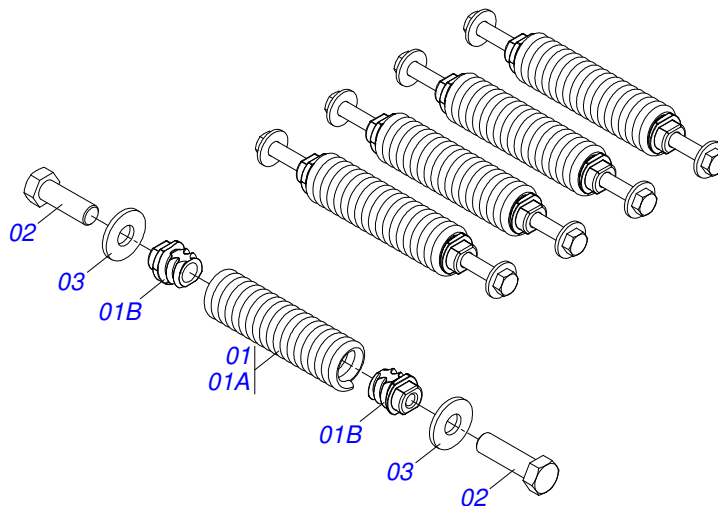


Item	Code	Description	See page	QT
01	0511050681	TRACTION SPRING		05
01A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
01B	0561016062	SPRING HITCH		02
02	0503013030	5/8" X 3.1/4" BOLT		10
03	0501012140	FLAT WASHER		10

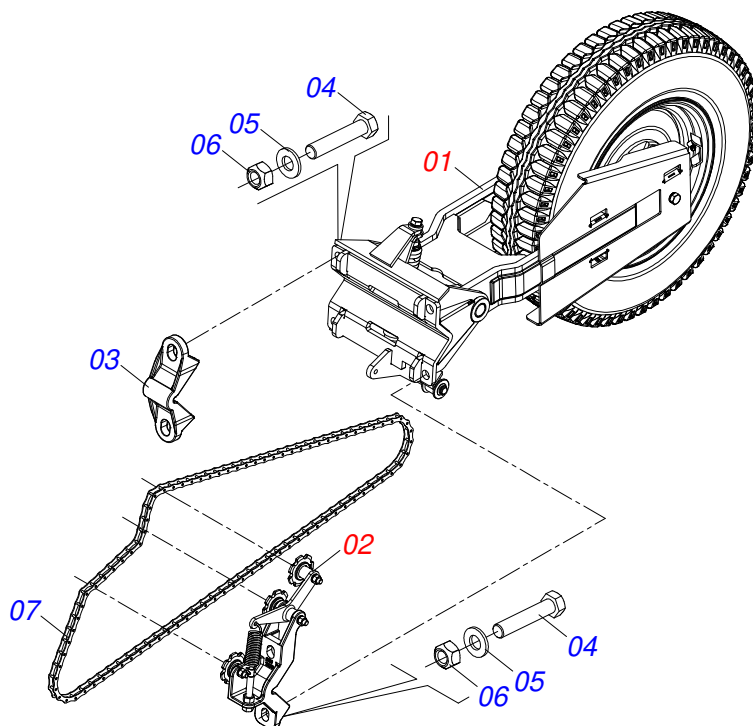


Item	Code	Description	See page	QT
01	0521055231	655 WHEELED SUPPORT WITH TRANSMISSION	28	01
02	0521055234	WHEELED FASTENER	38	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

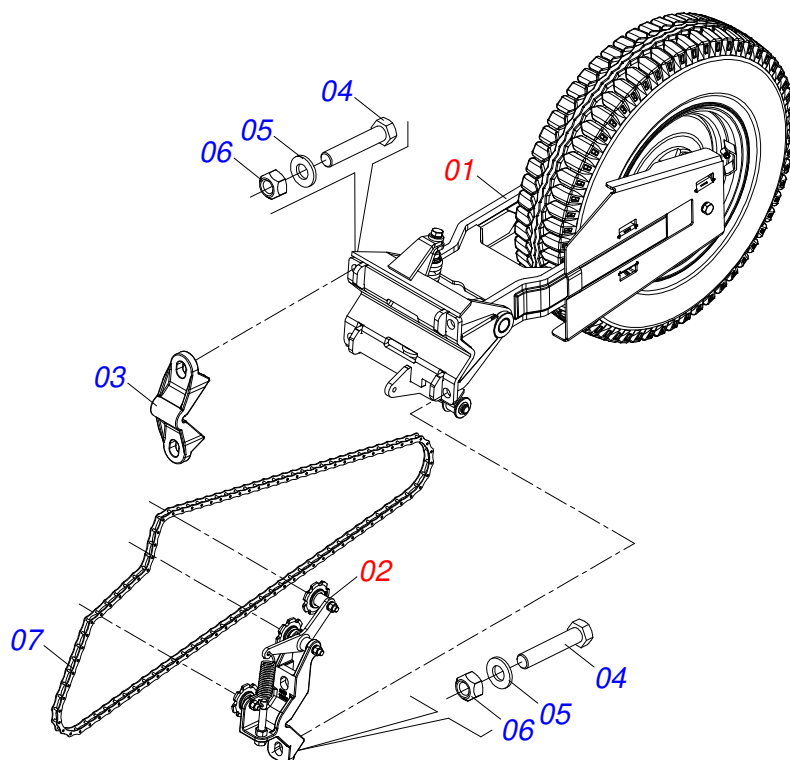


Item	Code	Description	See page	QT
01	0521058401	655 WHEELED SUPPORT WITH TRANSMISSION	29	01
02	0521055234	WHEELED FASTENER	38	01
03	0502010584	CARRYING-WHEELS SUPPORT FIXER		01
04	0503011119	7/8" X 6" BOLT		04
05	0501014251	FLAT WASHER		04
06	0503011254	7/8" HEX SELF ADJUSTING NUT		04
07	0503012766	2050 CHAIN X 85 LINK + MENDING		01

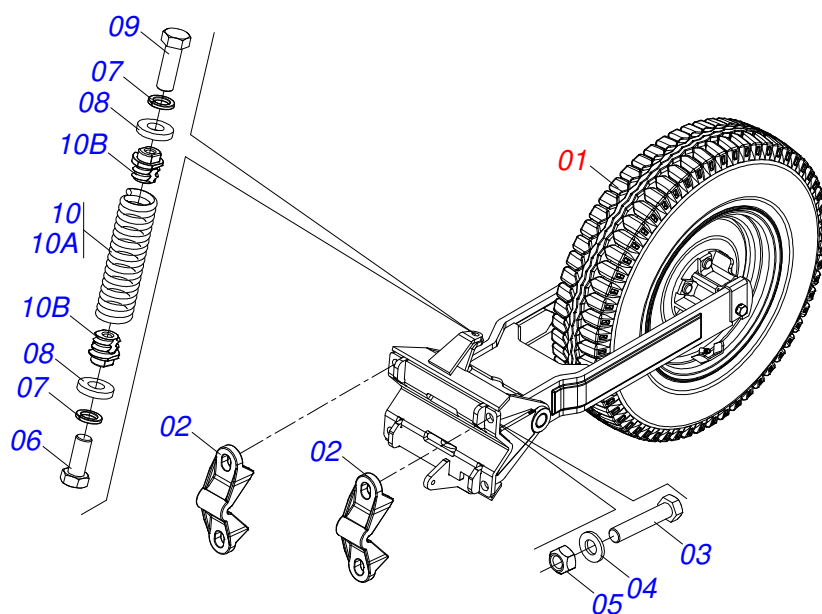


Item	Code	Description	See page	QT
01	0521055243	655 WHEELED BRACKET WITHOUT TRANSMISSION	31	01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
03	0503011119	7/8" X 6" BOLT		04
04	0501014251	FLAT WASHER		04
05	0503011254	7/8" HEX SELF ADJUSTING NUT		04
06	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
07	0503010027	5/8" SPRING WASHER		02
08	0551017715	FLAT WASHER		02
09	0503013030	5/8" X 3.1/4" BOLT		01
10	0511050681	TRACTION SPRING		01
10A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
10B	0561016062	SPRING HITCH		02

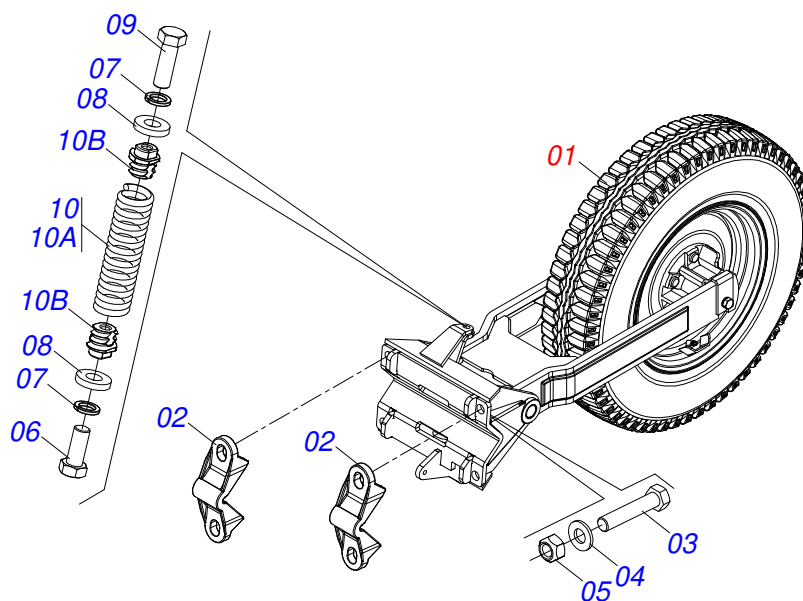


Item	Code	Description	See page	QT
01	0521058403	655 WHEELED BRACKET WITHOUT TRANSMISSION	30	01
02	0502010584	CARRYING-WHEELS SUPPORT FIXER		02
03	0503011119	7/8" X 6" BOLT		04
04	0501014251	FLAT WASHER		04
05	0503011254	7/8" HEX SELF ADJUSTING NUT		04
06	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
07	0503010027	5/8" SPRING WASHER		02
08	0551017715	FLAT WASHER		02
09	0503013030	5/8" X 3.1/4" BOLT		01
10	0511050681	TRACTION SPRING		01
10A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
10B	0561016062	SPRING HITCH		02

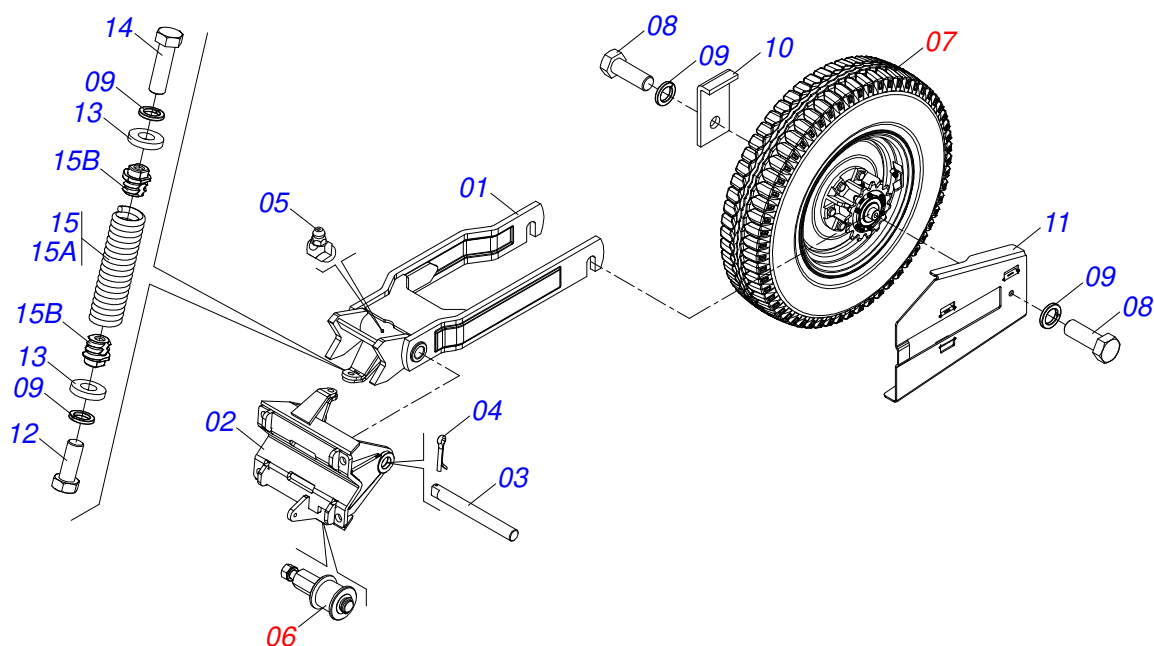


Item	Code	Description	See page	QT
01	0521061566	CARRYING WHEEL ARM TRACTION		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" COTTERPIN		01
05	0503010003	1845 GREASE FITTING		01
06	0501058241	WHEEL SUPPORT CHAIN TENSIONER	32	01
07	0521055232	WHEEL WITH PNEU	33	01
08	0503018981	BOLT		02
09	0503010027	5/8" SPRING WASHER		04
10	0521012190	AXLE LOCK		01
11	0581011124	WHEELED COVER		01
12	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
13	0551017715	FLAT WASHER		02
14	0503013030	5/8" X 3.1/4" BOLT		01
15	0511050681	TRACTION SPRING		01
15A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
15B	0561016062	SPRING HITCH		02

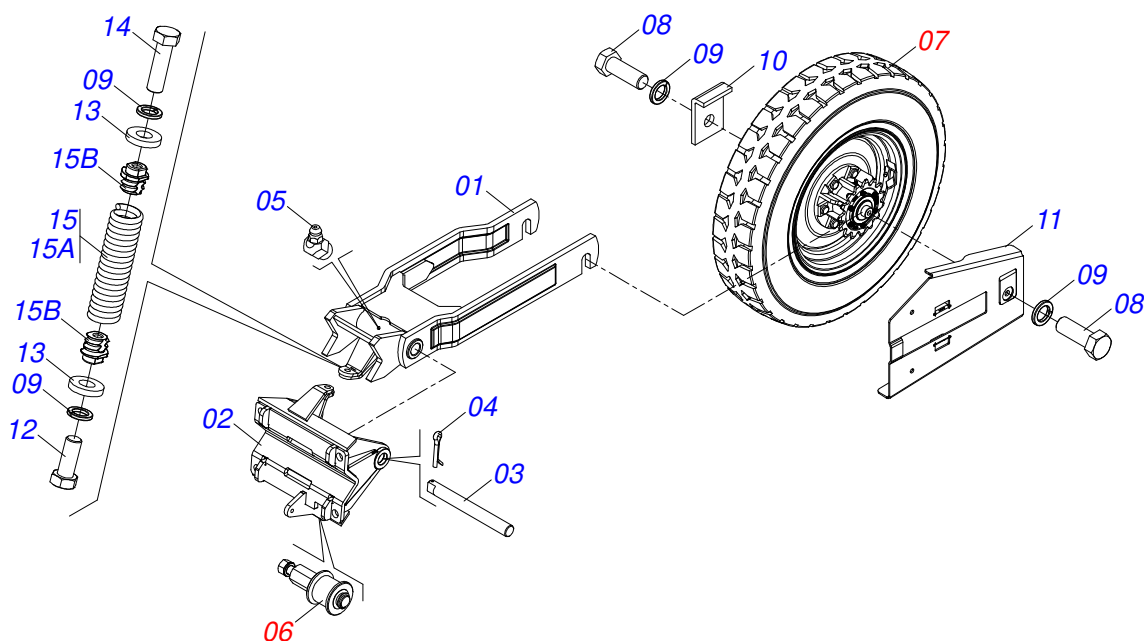


Item	Code	Description	See page	QT
01	0531062422	WHEEL ARM		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" COTTERPIN		01
05	0503010003	1845 GREASE FITTING		01
06	0501058241	WHEEL SUPPORT CHAIN TENSIONER	32	01
07	0521058393	WHEEL WITH PNEU 7.00X16 14L PR TT WITH TRANSMISSION		01
08	0503018981	BOLT		02
09	0503010027	5/8" SPRING WASHER		04
10	0591010589	BODY LOCK WHEEL		01
11	0521069983	WHEEL COVER		01
12	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		01
13	0551017715	FLAT WASHER		02
14	0503013030	5/8" X 3.1/4" BOLT		01
15	0511050681	TRACTION SPRING		01
15A	0503031681	2.1" X 7.78" EXTENSION SPRING		01
15B	0561016062	SPRING HITCH		02

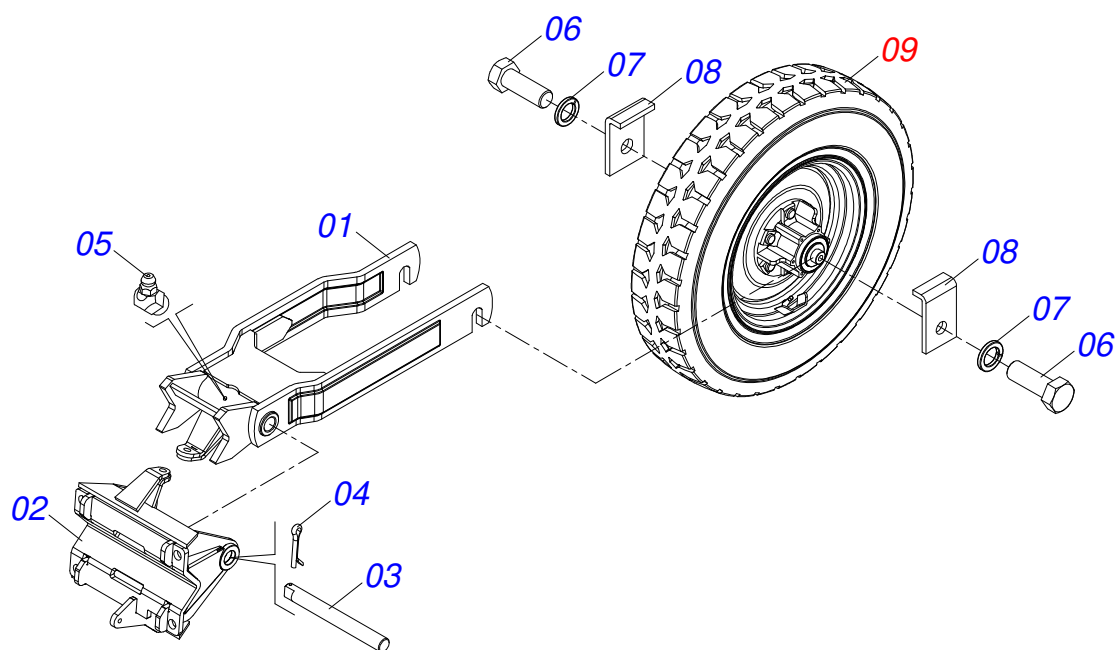


Item	Code	Description	See page	QT
01	0531062422	WHEEL ARM		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" COTTERPIN		01
05	0503010003	1845 GREASE FITTING		01
06	0503018981	BOLT		02
07	0503010027	5/8" SPRING WASHER		02
08	0591010589	BODY LOCK WHEEL		02
09	0521058394	WHEEL WITH PNEUME		01

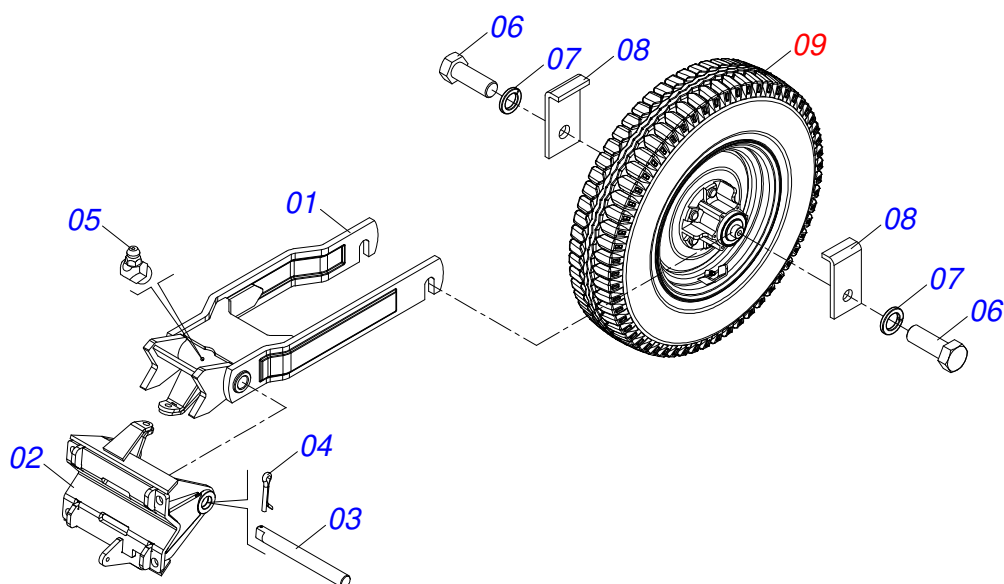


Item	Code	Description	See page	QT
01	0521061566	CARRYING WHEEL ARM TRACTION		01
02	0521061567	CARRYING WHEEL SPRING TRACTION SUPPORT		01
03	0531016887	CARRYING WHEEL AXLE ARM		01
04	0503010523	1/4" X 2" COTTERPIN		01
05	0503010003	1845 GREASE FITTING		01
06	0503018981	BOLT		02
07	0503010027	5/8" SPRING WASHER		02
08	0521012190	AXLE LOCK		02
09	0521055239	WHEEL WITH TIRE WITHOUT TRANSMISSION	34	01

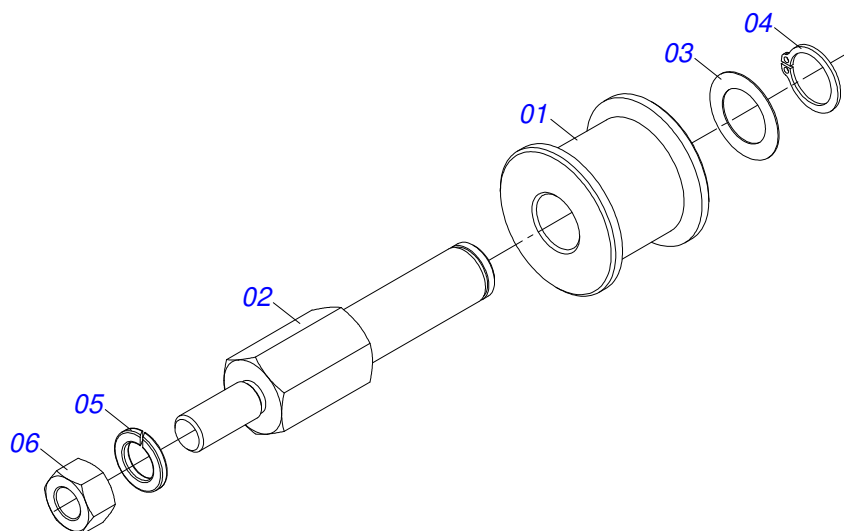


Item	Code	Description	See page	QT
01	0541016454	PULLEY		01
02	0521018933	FERT CHAIN TENSIONER AXLE		01
03	0511015098	FLAT WASHER		01
04	0503010302	501019 SEAL RING		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

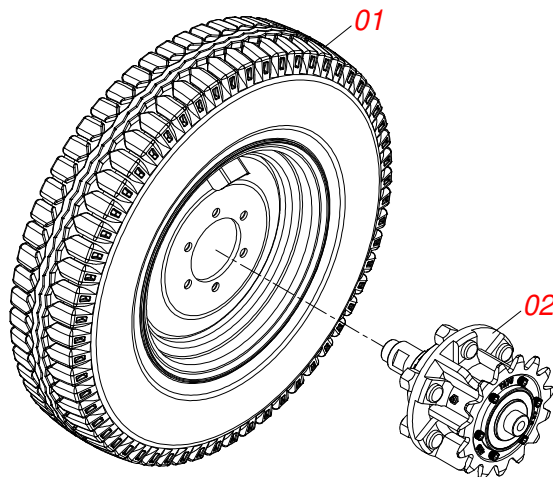


Item	Code	Description	See page	QT
01	0503062159	WHEEL WITH TIRE	35	01
02	0521055233	WHEELED TRANSMISSION WITHOUT TIRE	36	01

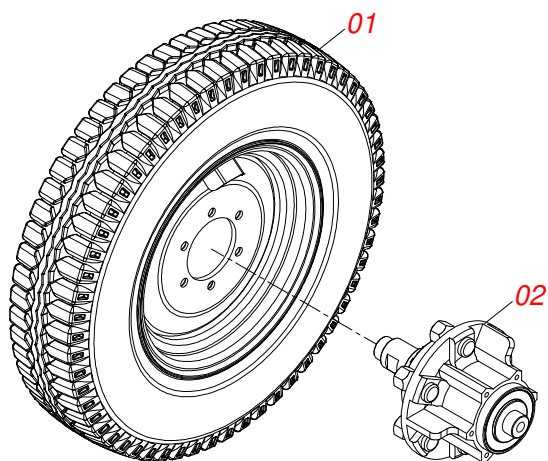


Item	Code	Description	See page	QT
01	0503062159	WHEEL WITH TIRE	35	01
02	0521055244	WHEEL WITHOUT TRANSMISSION WITHOUT TIRE	37	01

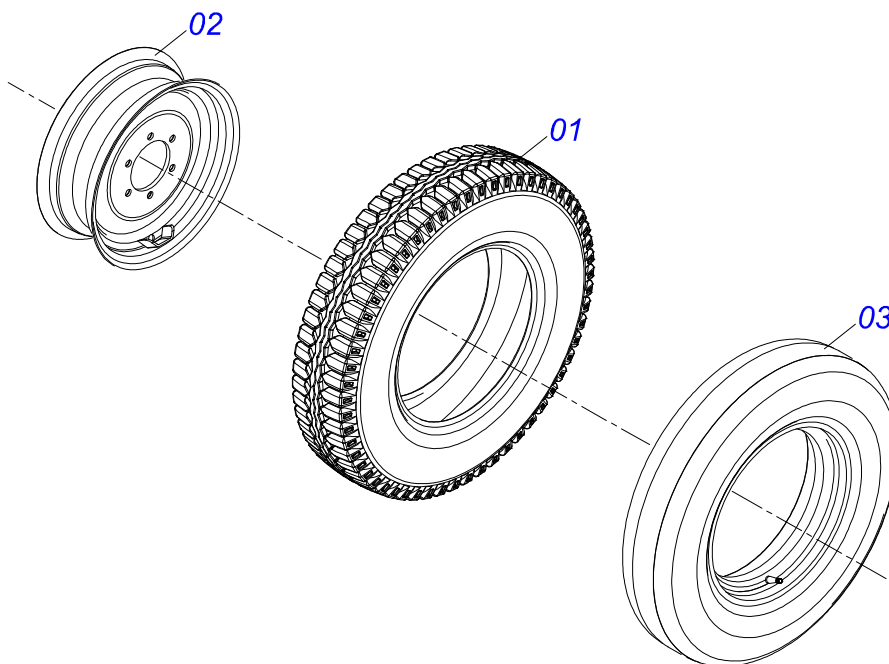

Item	Code	Description	See page	QT
01	0503012113	PLY TIRE		01
02	0503016517	WHEEL EI		01
03	0503010033	7.50 X 16 INNER TIRE		01

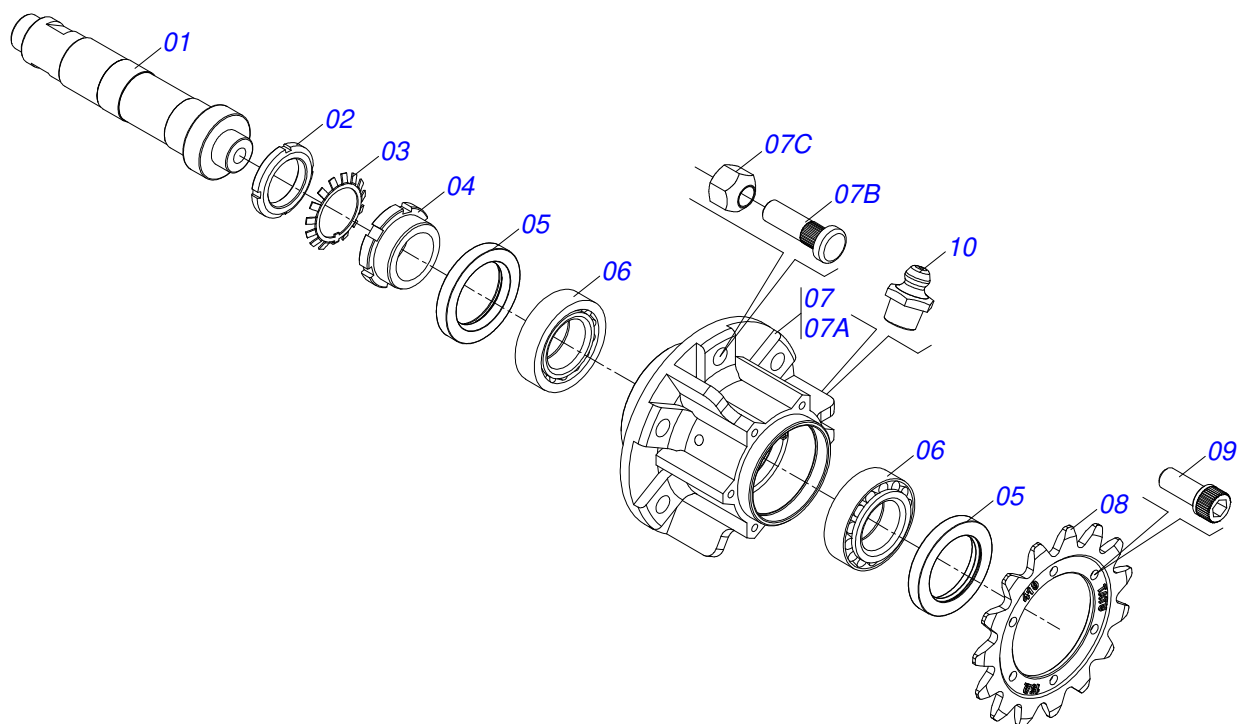


Item	Code	Description	See page	QT
01	0521012185	TRANSM AXLE CARRYING-WHEEL	01	
02	0503010330	KM 9 LOCKNUT	01	
03	0503010329	LOCK WASHER	01	
04	0511015949	LOCK NUT	01	
05	0503010804	00547-B SEAL	02	
06	0503019364	BEARING 25590/25523	02	
07	0501110721	WHEEL HUB WITH SCREW / NUTS	01	
07A	0571012990	CARRYING WHEEL HUB TRANSMISSION	01	
07B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR	06	
07C	0503016516	5/8 UNF CONIC NUT	06	
08	0502011339	15Z GEAR P 1.25"	01	
09	0503012550	5/16" X 3/4" BOLT	06	
10	0503010002	1800 GREASE FITTING	01	

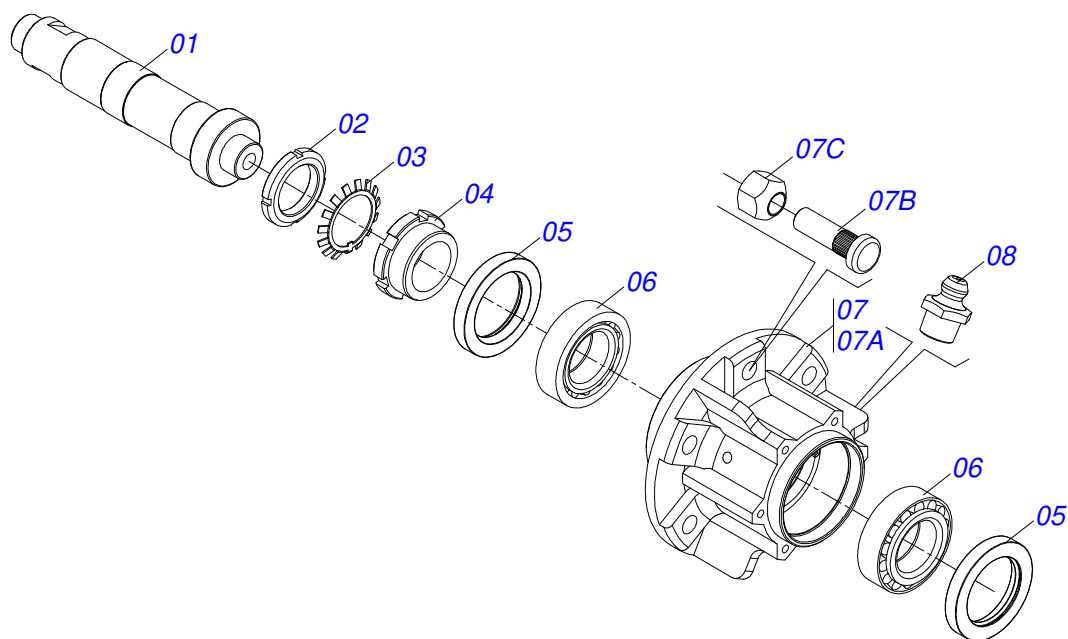


Item	Code	Description	See page	QT
01	0521012185	TRANSM AXLE CARRYING-WHEEL		01
02	0503010330	KM 9 LOCKNUT		01
03	0503010329	LOCK WASHER		01
04	0511015949	LOCK NUT		01
05	0503010804	00547-B SEAL		02
06	0503019364	BEARING 25590/25523		02
07	0501110721	WHEEL HUB WITH SCREW / NUTS		01
07A	0571012990	CARRYING WHEEL HUB TRANSMISSION		01
07B	0501010186	WHEEL SCREW 5/8UNF X 2.1/8CR		06
07C	0503016516	5/8 UNF CONIC NUT		06
08	0503010002	1800 GREASE FITTING		01

WHEELED FASTENER


0521055234

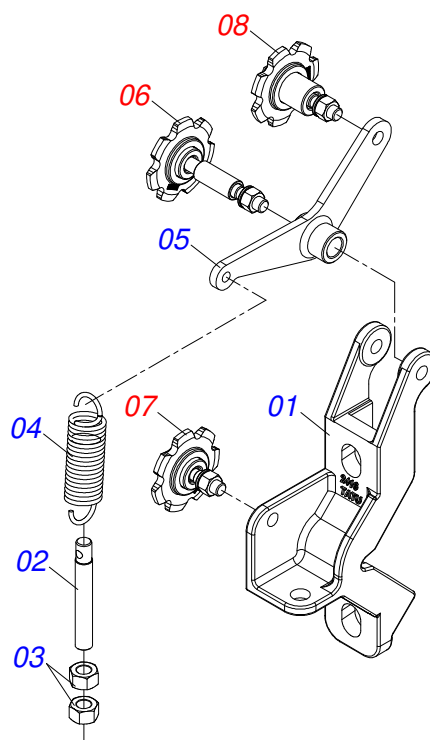


Item	Code	Description	See page	QT
01	0502012416	CARRYING-WHEELS SUPPORT FIXER		01
02	0501013491	5/8" TENSIONER SPRING		01
03	0503010013	5/8" NUT		02
04	0503030099	1.3" X 4.9" 0.2" TRACTION SPRING		01
05	0511069417	REAR TENSIONER		01
06	0521055236	INTERMEDIARY CURRENT STRETCHER	39	01
07	0521055237	WHEEL FIXED CURRENT STRETCHER	40	01
08	0521055235	WHEEL MOBILE CURRENT STRETCHER	41	01

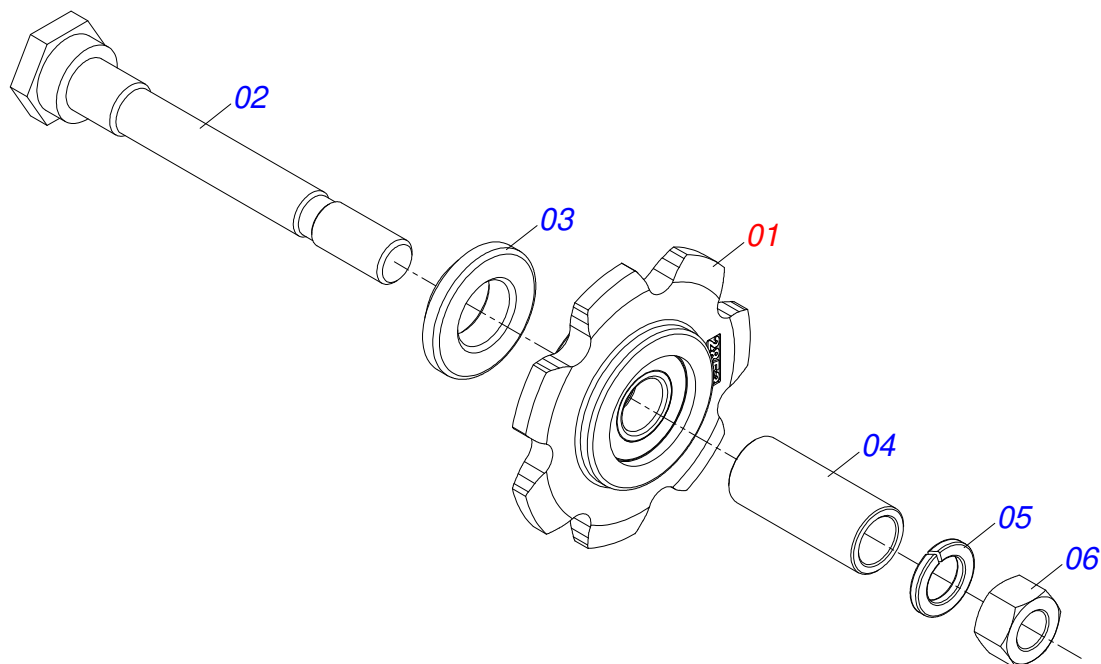


Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN		01
02	0551018245	CHAIN TENSIONER AXLE		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0551018239	SLEEVE 19 X 13,50 X 45		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

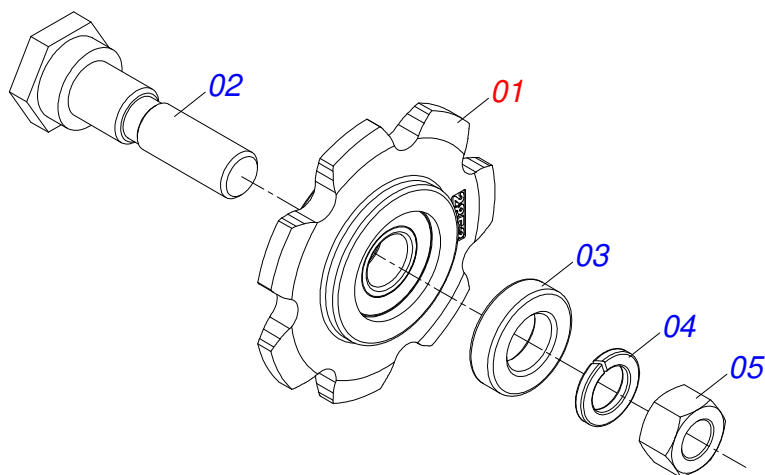

Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN		01
02	0551018252	CHAIN TIGHTENER AXLE		01
03	0551018241	SLEEVE 16,30 X 30 X 8		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

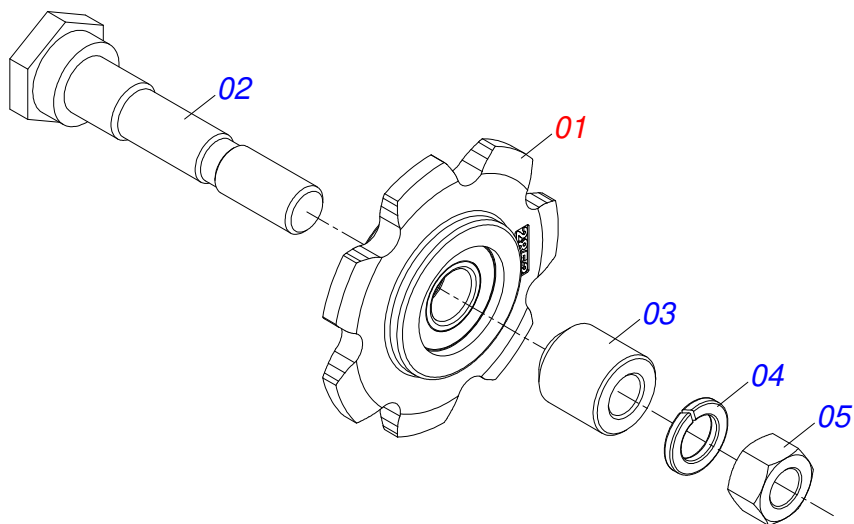


Item	Code	Description	See page	QT
01	0521055238	BEARING TENSIONER CHAIN		01
02	0551018244	CHAIN UPPER AXLE		01
03	0591017923	GLOVE 15.30 X 30 X 32		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

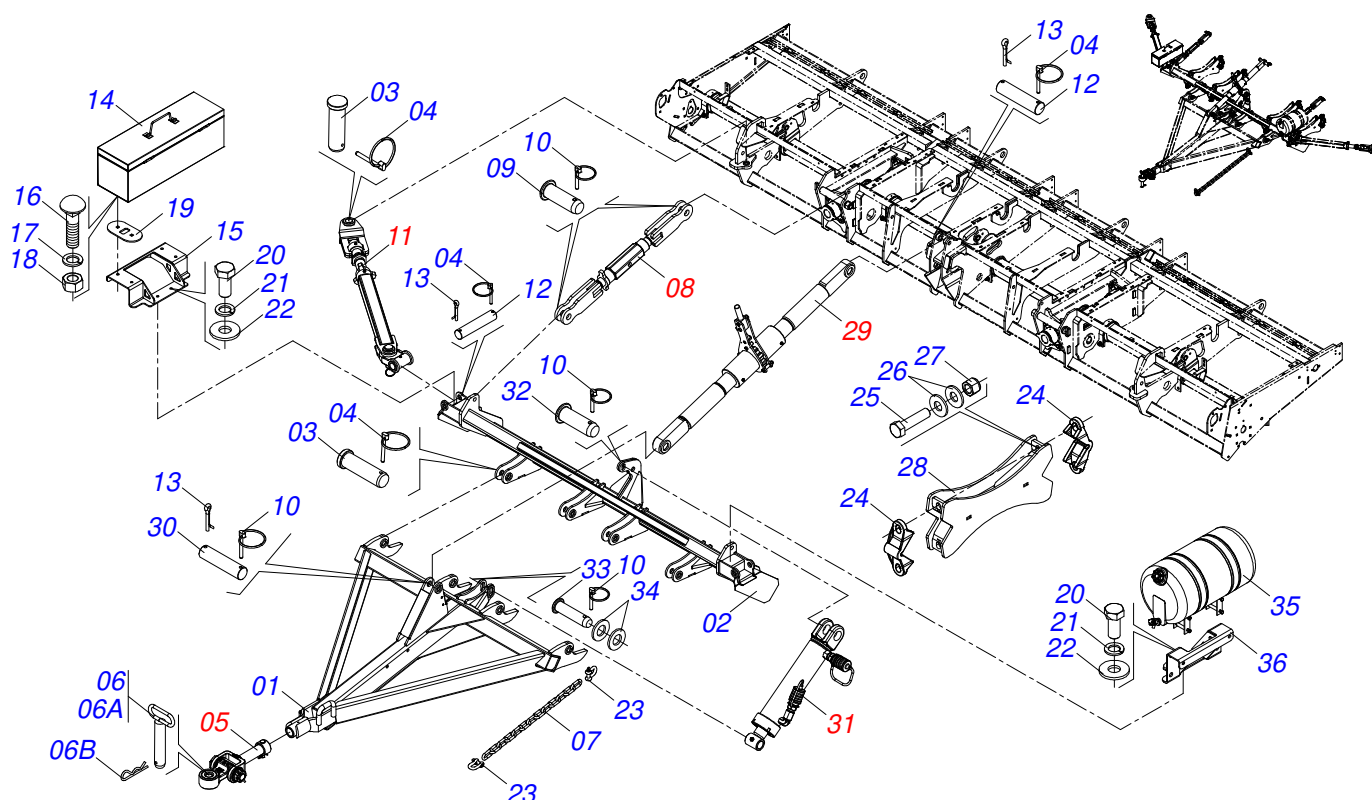

Item	Code	Description	See page	8160	8460
01	0521066289	FRONT HEADER 5750/6350/6850		001	001
02	0521066290	INTERMEDIATE HEAD 5750/6850/7860/8160		001	000
02.	0521067075	INTERMEDIATE HEAD 6450/7285/7350/7450/8460		000	001
03	0571019949	JUNCTION SHAFT		006	006
04	0503030119	LOCK PIN		010	010
05	0511055096	TRACTOR HITCH	44	001	001
06	0511053179	TRACTOR COUPLING SHAFT	45	001	001
06A	0521064036	TRACTOR HITCH AXLE		001	001
06B	0503030012	HITCH PIN CLIP		001	001
07	0503014120	CHAIN		001	001
08	0521051614	TURNBUCKLE SIDE UPPER	46	002	002
09	0521010571	COUPLING SHAFT		004	004
10	0503030085	LOCK PIN		006	006
11	0521050133	TURNBUCKLE SIDE 755/480	48	002	002
12	0571019951	JUNCTION SHAFT		003	003
13	0503010523	1/4" X 2" COTTERPIN		004	004
14	0503034772	BOX		001	001
15	0521068652	TOOLS BOX SUPPORT		001	001
16	0501011643	3/8 X 1" BOLT		004	004
17	0503010025	3/8" SPRING WASHER		004	004
18	0503010026	3/8" NUT		004	004
19	0581017000	PLATE INTERMEDIARY		002	002
20	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		004	004
21	0503010025	3/8" SPRING WASHER		004	004
22	0501010984	FLAT WASHER		004	004
23	0503014321	CABLE STEEL SHACKLE		002	002
24	0502010584	CARRYING-WHEELS SUPPORT FIXER		008	008
25	0503016485	BOLT 3/4		016	016
26	0501010322	FLAT WASHER		032	032
27	0503010152	3/4" SELF LOCKING NUT		016	016
28	0521067716	FIXER TUBE		004	004

Item	Code	Description	See page	8160	8460
29	0511059237	3 POINT TURNBUCKLE	50	001	001
30	0571019950	COUPLING SHAFT		001	001
31	0521045756	HYDRAULIC CYLINDER	51	001	001
32	0521010779	31.75 X 95 COUPLING SHAFT		001	001
33	0521010581	0.9" X 4.9" COUPLING SHAFT		001	001
34	0531016049	FLAT WASHER		002	002
35	0503014820	BLACK WATER RESERVOIR		001	001
36	0521068651	SUPPORT BOX		001	001

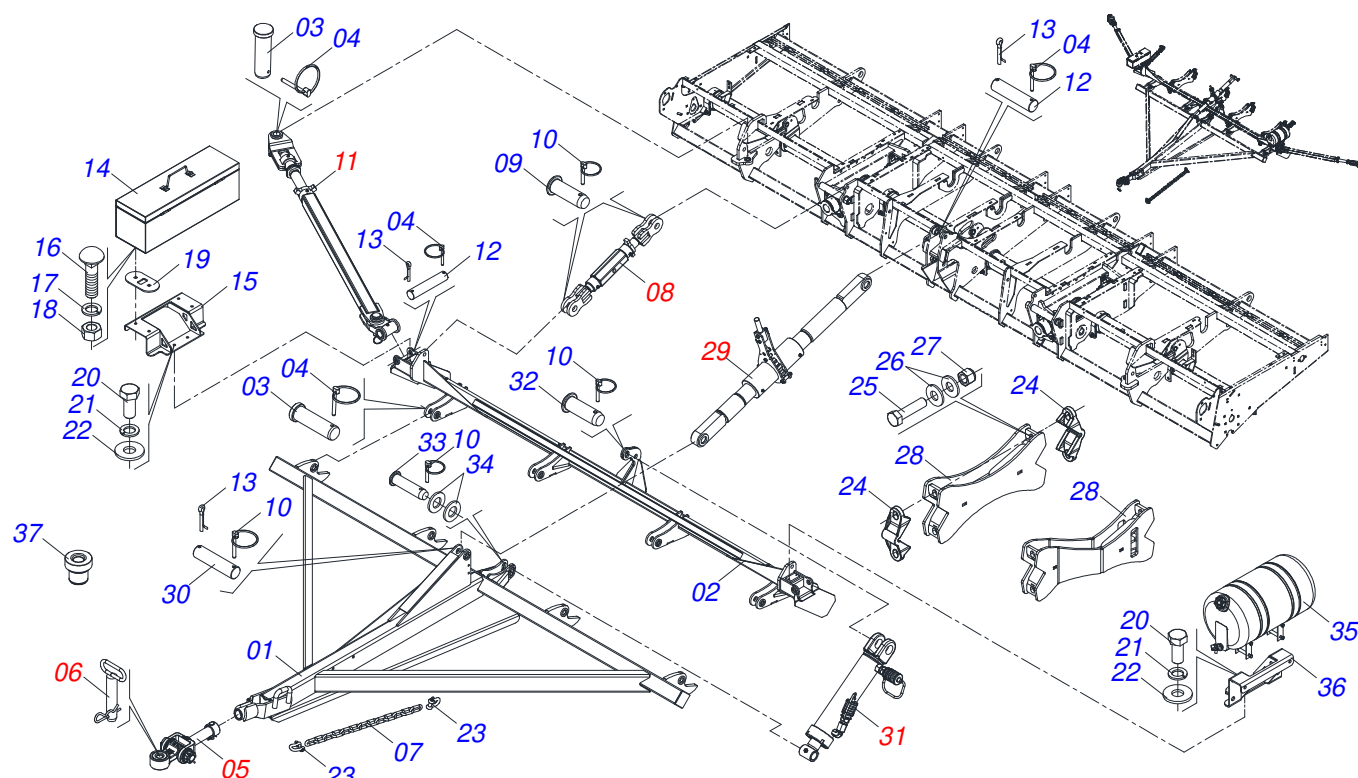


Item	Code	Description	See page	8960	9460	9960	10985
01	0521068119	FRONT HEADER 8960/9960		001	000	001	000
01.	0521067838	FRONT HEADER 9460/10460/10985		000	001	000	001
02	0521068118	INTERMEDIATE HEAD 8960/9960		001	000	001	000
02.	0521067839	INTERMEDIATE HEAD 9460/10460/10985		000	001	000	001
03	0571019949	JUNCTION SHAFT		006	006	006	006
04	0503030119	LOCK PIN		010	010	010	010
05	0511055096	TRACTOR HITCH	44	001	001	001	001
06	0511053179	TRACTOR COUPLING SHAFT	45	001	001	001	001
07	0503014120	CHAIN		001	001	001	001
08	0521050574	EXTENSOR	47	002	002	002	002
09	0521010571	COUPLING SHAFT		004	004	004	004
10	0503030085	LOCK PIN		006	006	006	006
11	0521050681	LATERAL EXTENSOR 1250/480	49	002	002	002	002
12	0571019951	JUNCTION SHAFT		003	003	003	003
13	0503010523	1/4" X 2" COTTERPIN		004	004	004	004
14	0503034772	BOX		001	001	001	001
15	0521068652	TOOLS BOX SUPPORT		001	001	001	001
16	0501011643	3/8 X 1" BOLT		004	004	004	004
17	0503010025	3/8" SPRING WASHER		004	004	004	004
18	0503010026	3/8" NUT		004	004	004	004
19	0581017000	PLATE INTERMEDIARY		002	002	002	002
20	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		004	004	004	004
21	0503010025	3/8" SPRING WASHER		004	004	004	004
22	0501010984	FLAT WASHER		004	004	004	004
23	0503014321	CABLE STEEL SHACKLE		002	002	002	002
24	0502010584	CARRYING-WHEELS SUPPORT FIXER		008	008	008	008
25	0503016485	BOLT 3/4		016	016	016	016
26	0501010322	FLAT WASHER		032	032	032	032
27	0503010152	3/4" SELF LOCKING NUT		016	016	016	016
28	0521067716	FIXER TUBE		002	004	002	004
28.	0521068136	FIXER INTERMEDIATE HEAD		002	000	002	000


Item	Code	Description	See page	8960	9460	9960	10985
29	0511059237	3 POINT TURNBUCKLE	50	001	001	001	001
30	0571019950	COUPLING SHAFT		001	001	001	001
31	0521045756	HYDRAULIC CYLINDER	51	001	001	001	001
32	0521010779	31.75 X 95 COUPLING SHAFT		001	001	001	001
33	0521010581	0.9" X 4.9" COUPLING SHAFT		001	001	001	001
34	0531016049	FLAT WASHER		002	002	002	002
35	0503014820	BLACK WATER RESERVOIR		001	001	001	001
36	0521068651	SUPPORT BOX		001	001	001	001
37	0501212237	HITCH GLOVE ARTICULATED 85 X 35 MM		001	001	001	001

TRACTOR HITCH


0511055096

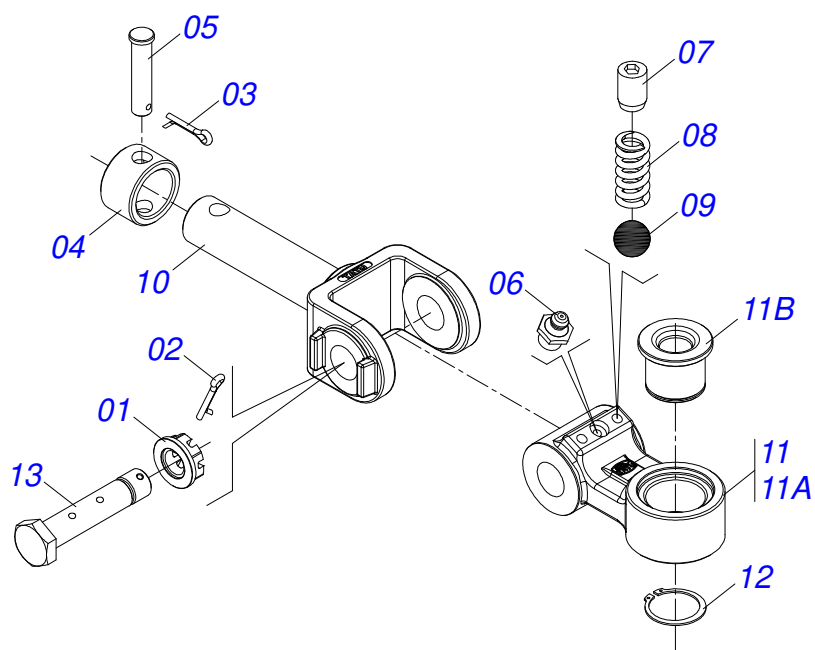


Item	Code	Description	See page	QT
01	0501011301	1.1/2 UNC 6FPP 2.5/16 NUT		01
02	0503010010	1/4" X 2.1/2" COTTERPIN		01
03	0503010571	1/4" X 1.1/2 COTTERPIN		01
04	0521010681	BUSHING COUPLING BODY		01
05	0521010639	COUPLING SHAFT		01
06	0503010002	1800 GREASE FITTING		01
07	0503016482	BOLT		02
08	0503033731	COMPRESSION SPRING LEFT		02
09	0503011331	3/8 BALL		02
10	0502040850	U TRACTOR COUPLING		01
11	0501110778	TRACTOR HITCH		01
11A	0502040853	HITCH JOINT		01
11B	0571014744	SLEEVE HITCH ARTICULATION 1.1/4		01
12	0503010396	501060 CLAMPING RING (FOR AXLE)		01
13	0581019654	ASSY BOLT		01

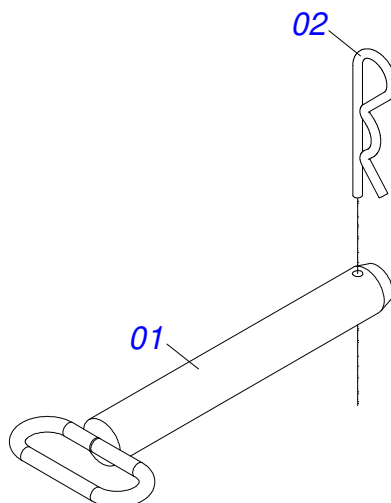


Item	Code	Description	See page	QT
01	0521064036	TRACTOR HITCH AXLE		01
02	0503030012	HITCH PIN CLIP		01

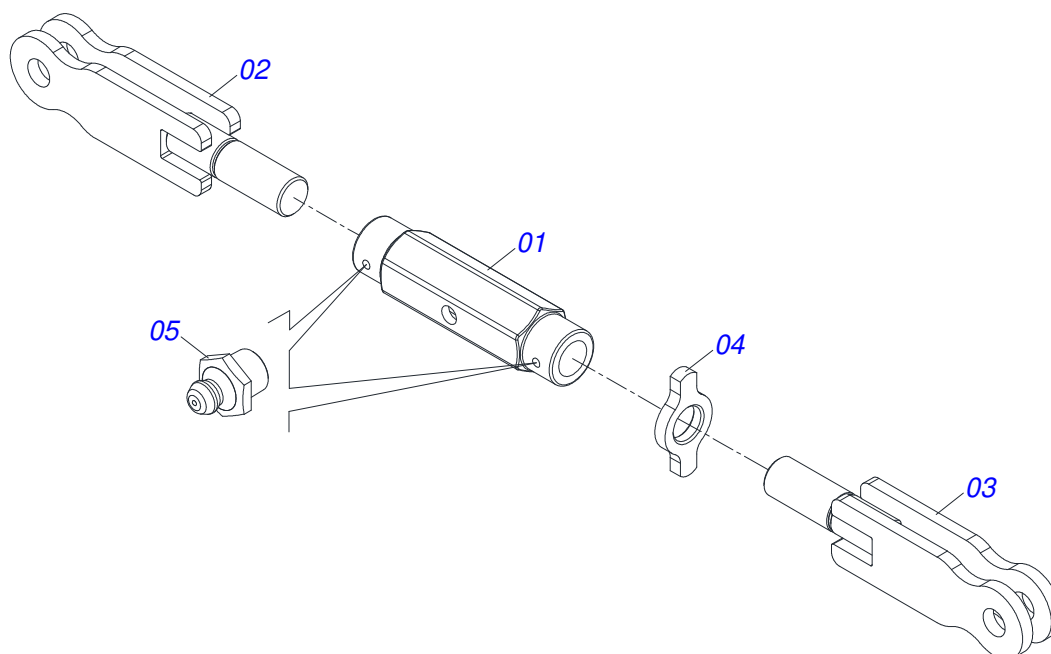


Item	Code	Description	See page	QT
01	0502011195	ADJUSTMENT NUT BODY		01
02	0521068096	EXTENSOR R.1.1 / 2 UNC RIGHT		01
03	0521068095	EXTENSOR R.1.1/2 UNC LEFT		01
04	0541018672	COUNTERNUT		01
05	0503010002	1800 GREASE FITTING		02

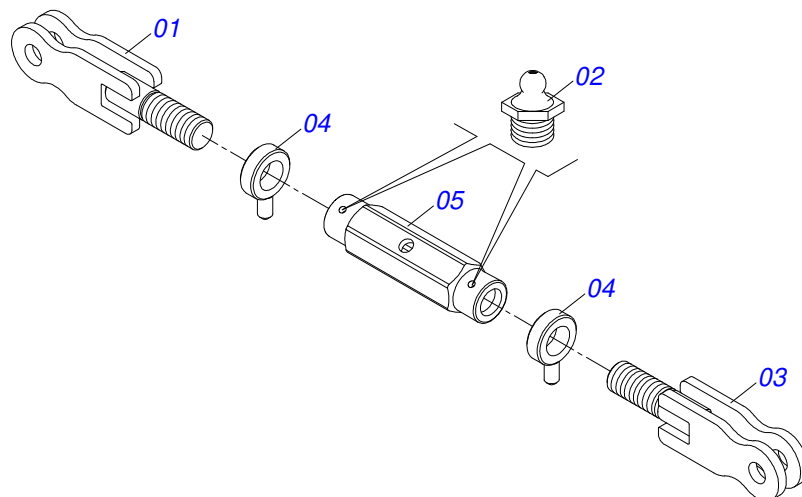

Item	Code	Description	See page	QT
01	0521066300	RIGHT TURNBUCKLE		01
02	0503010002	1800 GREASE FITTING		02
03	0521066301	LEFT TURNBUCKLE		01
04	0541018672	COUNTERNUT		01
05	0502011195	ADJUSTMENT NUT BODY		01

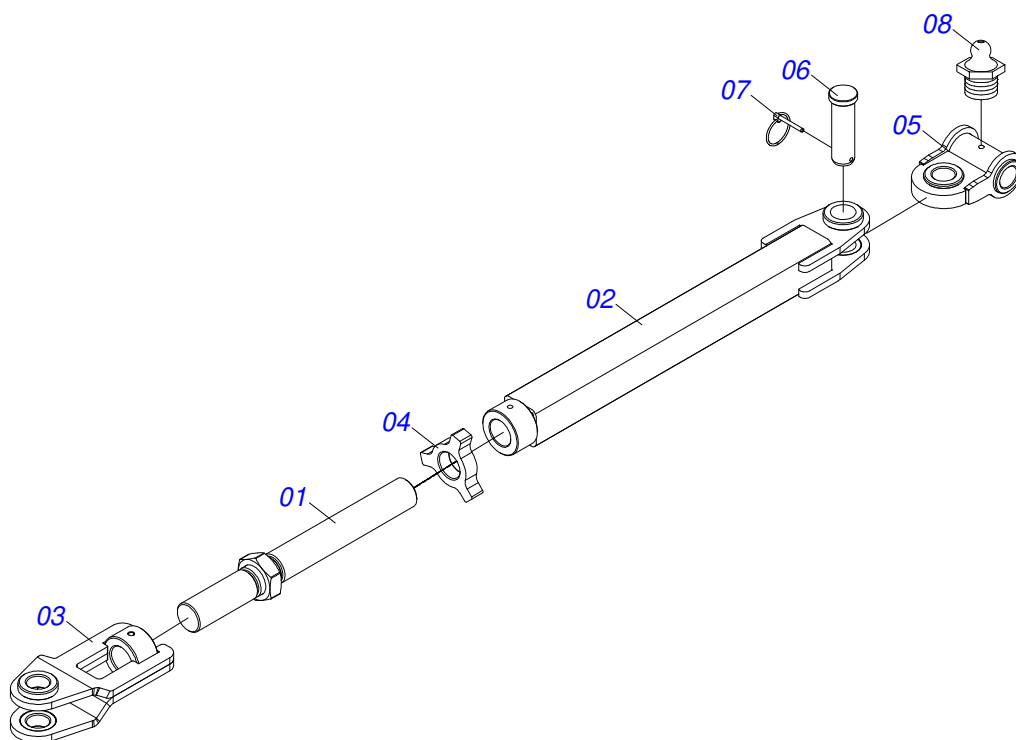


Item	Code	Description	See page	QT
01	0521065193	TURNBUCKLE AXLE		01
02	0521067392	FIXED BRACKET		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0521067393	EXTERNAL SIDE EAR		01
06	0571019949	JUNCTION SHAFT		01
07	0503030119	LOCK PIN		01
08	0503010002	1800 GREASE FITTING		03

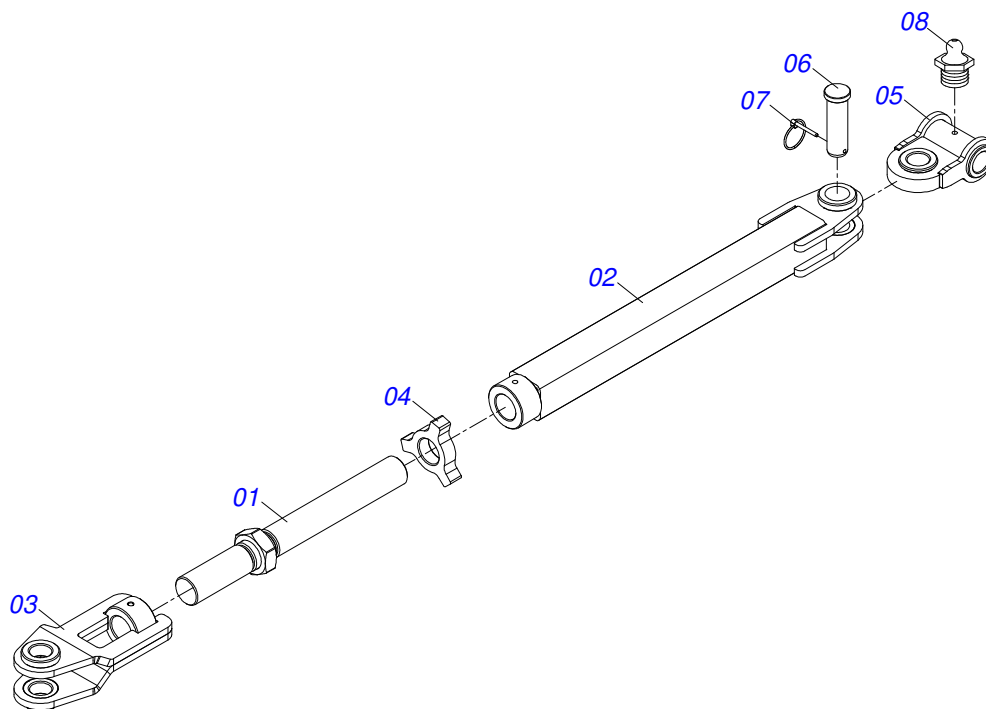


Item	Code	Description	See page	QT
01	0521065193	TURNBUCLE AXLE		01
02	0521067661	1250 SIDE EXTENSION FIXED TIP		01
03	0521066338	EXTERNAL ROTATING BRIDGE		01
04	0561019879	LOCK ATTACHMENT BAR		01
05	0521067393	EXTERNAL SIDE EAR		01
06	0571019949	JUNCTION SHAFT		01
07	0503030119	LOCK PIN		01
08	0503010002	1800 GREASE FITTING		03

3 POINT TURNBUCKLE


0511059237

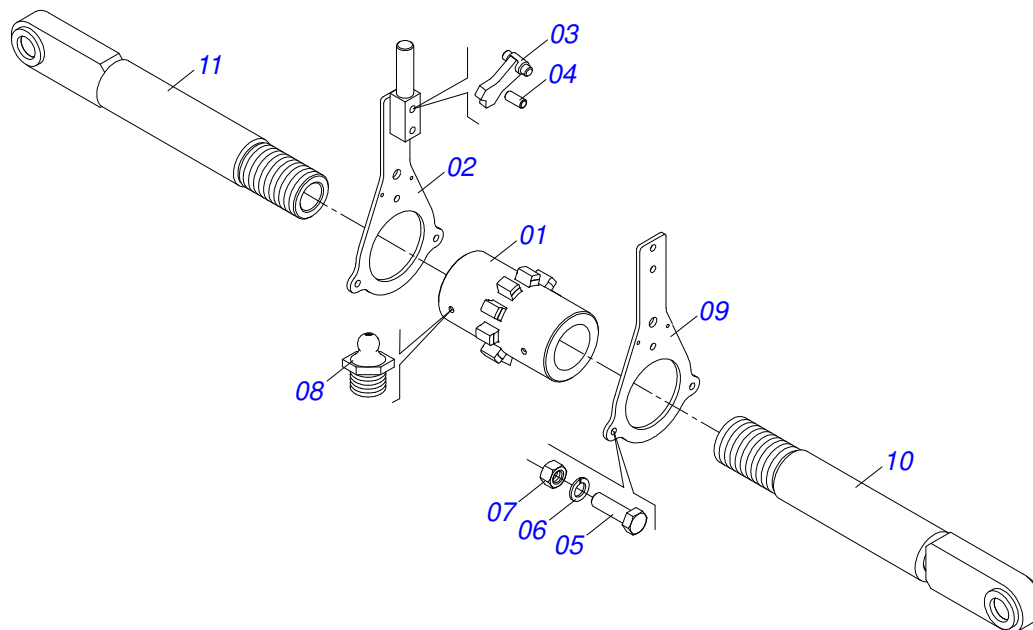


Item	Code	Description	See page	QT
01	0502012783	STABILIZER BODY GREATER		01
02	0511061880	SIDE RIGHT RATCHET		01
03	0511061881	RATCHET FOLLOWER		01
04	0521018920	0.4" X 0.5" X 0.2" SLEEVE		03
05	0503011179	3/8" X 2-1/4" BOLT		05
06	0503010025	3/8" SPRING WASHER		05
07	0503010026	3/8" NUT		05
08	0503010002	1800 GREASE FITTING		02
09	0531010264	SIDE RATCHET		01
10	0521066919	3-POINT EXTENSOR RIGHT FUSE		01
11	0521066337	LEFT EXTENSOR 3 SPIKE		01

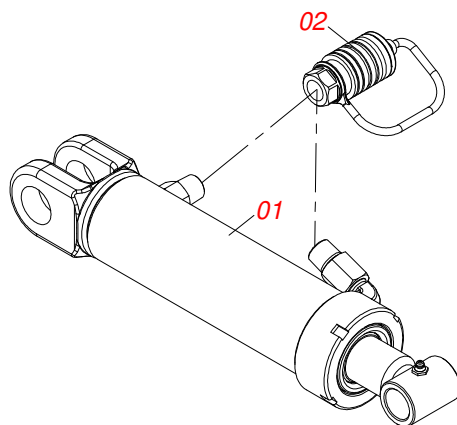

Item	Code	Description	See page	QT
01	0511057653	HYDRAULIC CYLINDER	52	01
02	0501053835	FEMALE QUICK COUPLER	58	02

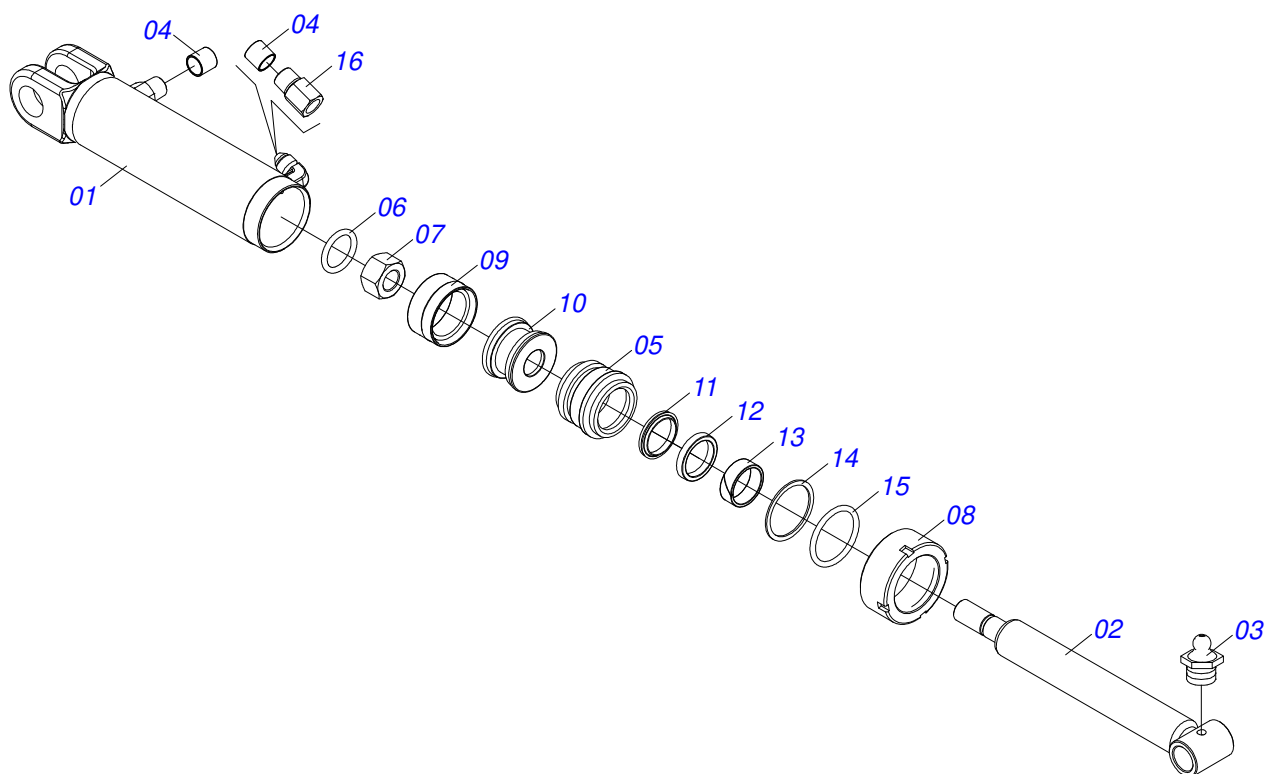


Item	Code	Description	See page	QT
01	0521066550	CASE		01
02	0521066551	EXTENSION DRAWBAR		01
03	0503010002	1800 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010669	EMBOLUS 63.50 X 40 USAP		01
06	0503018005	RING		01
07	0503010558	7/8" NUT		01
08	0502010471	MOBILE COVER		01
09	0503011058	8-330 BACK-UP RING		01
10	0571019866	RING SUPPORT		01
11	0503010163	D-1500 SCRAPER RING		01
12	0503018004	RING		01
13	0503010161	2-330 N 3006 9B O'RING		01
14	0503018003	GASKET		01
15	0503010605	O'RING		01
16	0581010652	JIC ADAPTER		01

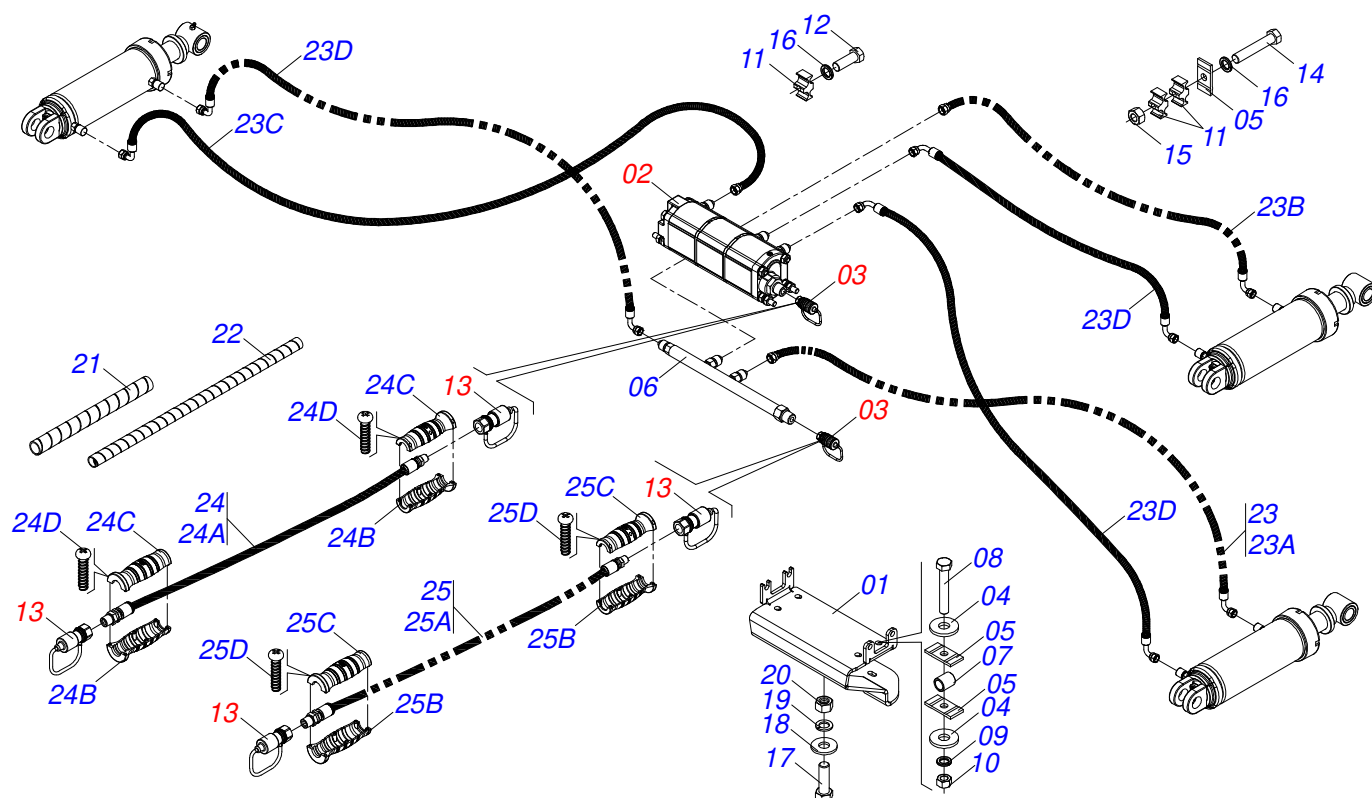


Item	Code	Description	See page	QT
01	0571013472	FIXER BODY VALVE		01
02	0511059290	VALVE ASSEMBLY	57	01
03	0501053835	FEMALE QUICK COUPLER	58	02
04	0501010984	FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		04
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8" SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0502012702	BODY SUPPORT CLAMP		12
12	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		04
13	0501053834	MALE QUICK COUPLER	59	04
14	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
15	0503010244	7/16" NUT		04
16	0503010180	7/16" SPRING WASHER		08
17	0503010920	1/2" X 1.1/2" BOLT		02
18	0511017302	FLAT WASHER		02
19	0503010019	1/2" SPRING WASHER		02
20	0503010060	1/2" NUT		02
21	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
22	0571017774	SPRING PROTECTION QUICK HOSE		01
23	0511059418	HYDRAULIC SYSTEM HOSE ASSEMBLY		01
23A	0501080406	3/8" X 23" TR-TC HOSE		01
23B	0501080150	3/8 X 800 TR-TC HOSE		01
23C	0501080392	3/8 X 3300 TR-TC HOSE		01
23D	0501080442	3/8" X 130" TC-TC HOSE ASSY		03
24	0521052484	HOSE 1/2 X 4122 TM-TM BLACK / RED		01
24A	0501080881	HOSE		01
24B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
24C	0503034495	HYDRAULIC HOSE GRIP (RED)		02

Item	Code	Description	See page	QT
24D	0503018952	PLASTIC BOLT		12
25	0521052485	HOSE 1/2 X 4122 TM-TM BLACK / BLUE		01
25A	0501080881	HOSE		01
25B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
25C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02
25D	0503018952	PLASTIC BOLT		12

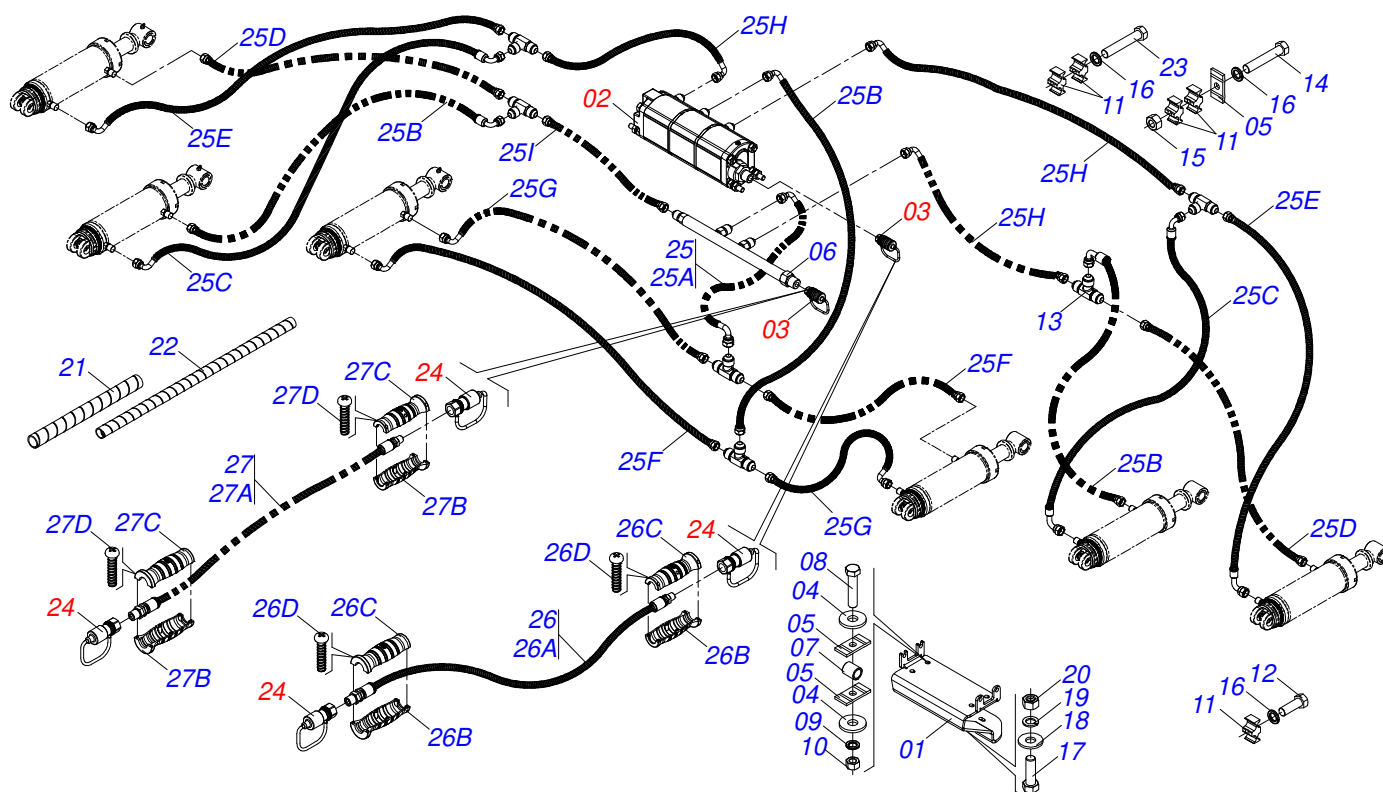


Item	Code	Description	See page	QT
01	0571013472	FIXER BODY VALVE		01
02	0511059290	VALVE ASSEMBLY	57	01
03	0501053835	FEMALE QUICK COUPLER	58	02
04	0501010984	FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		08
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8" SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0502012702	BODY SUPPORT CLAMP		14
12	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
13	0503011271	3/4" UNF "T" CONNECTION T 3 SIDES		06
14	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
15	0503010244	7/16" NUT		04
16	0503010180	7/16" SPRING WASHER		08
17	0503010920	1/2" X 1.1/2" BOLT		02
18	0511017302	FLAT WASHER		02
19	0503010019	1/2" SPRING WASHER		02
20	0503010060	1/2" NUT		02
21	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
22	0571017774	SPRING PROTECTION QUICK HOSE		01
23	0503010851	7/16" X 3.1/2" BOLT		02
24	0501053834	MALE QUICK COUPLER	59	04
25	0521052894	HYDRAULIC SYSTEM HOSE ASSEMBLY		01
25A	0501082077	TR-TM HOSE ASSY		01
25B	0501080445	TR-TM HOSE ASSY		03
25C	0501080199	3/8" X 13.4" TC-TC HOSE ASSY		02
25D	0501080373	TR-TR HOSE ASSY		02
25E	0501080302	TR-TC HOSE ASSY		02
25F	0501080025	3/8 X 1400 TR-TC HOSE		02

Item	Code	Description	See page	QT
25G	0501080056	3/8" X 1700 TR-TC HOSE ASSY		02
25H	0501081607	HOSE 3/8 X 2450 TC-TR		03
25I	0501080452	3/8" X 98" TR-TR HOSE		01
26	0521052663	HOSE 1/2 X 5500 TM-TM BLACK / RED		01
26A	0501081359	1/2 X 5500 TM-TM HOSE ASSY		01
26B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
26C	0503034495	HYDRAULIC HOSE GRIP (RED)		02
26D	0503018952	PLASTIC BOLT		12
27	0521052664	HOSE 1/2 X 5500 TM-TM BLACK / BLUE		01
27A	0501081359	1/2 X 5500 TM-TM HOSE ASSY		01
27B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
27C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02
27D	0503018952	PLASTIC BOLT		12

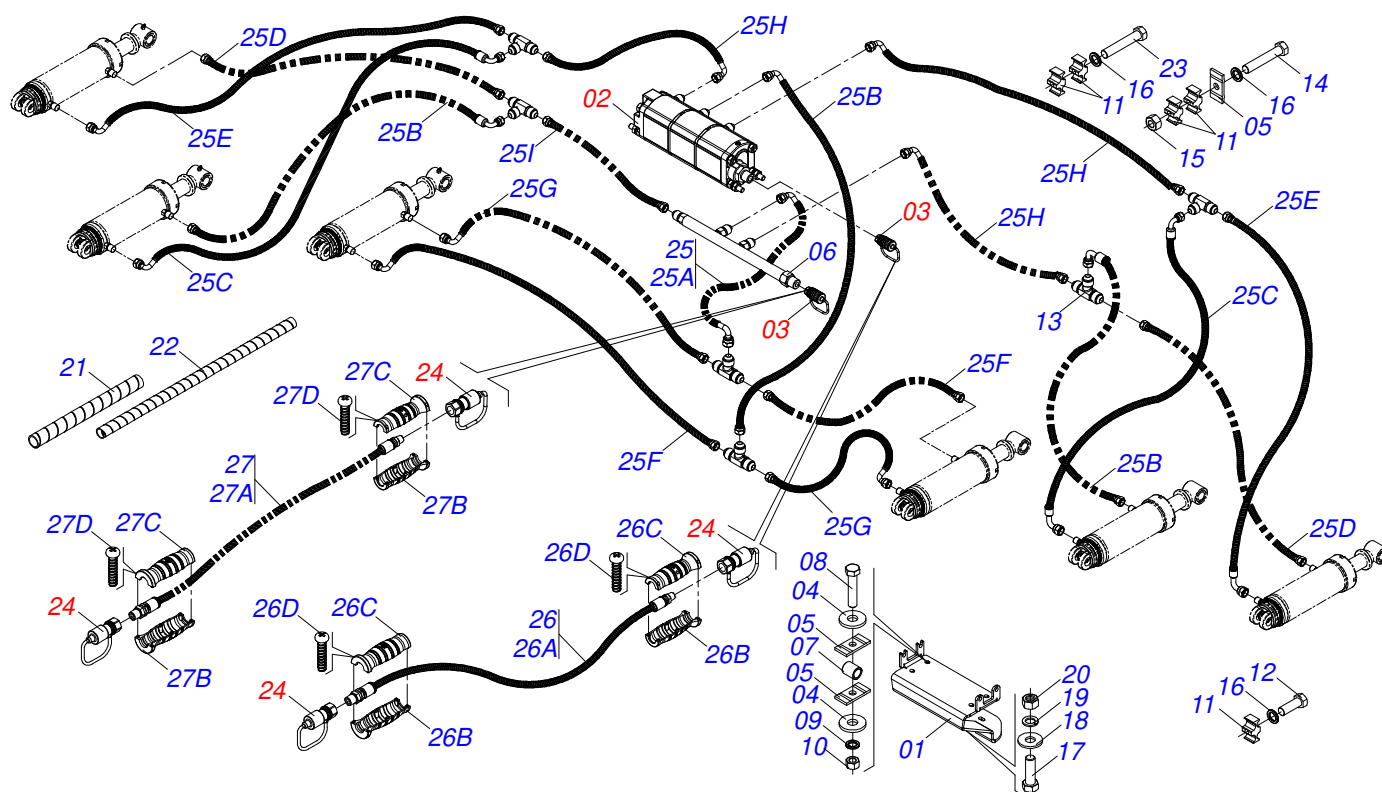


Item	Code	Description	See page	QT
01	0571013472	FIXER BODY VALVE		01
02	0511059290	VALVE ASSEMBLY	57	01
03	0501053835	FEMALE QUICK COUPLER	58	02
04	0501010984	FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		08
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8" SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0502012702	BODY SUPPORT CLAMP		14
12	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
13	0503011271	3/4" UNF "T" CONNECTION T 3 SIDES		06
14	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
15	0503010244	7/16" NUT		04
16	0503010180	7/16" SPRING WASHER		08
17	0503010920	1/2" X 1.1/2" BOLT		02
18	0511017302	FLAT WASHER		02
19	0503010019	1/2" SPRING WASHER		02
20	0503010060	1/2" NUT		02
21	0571011806	SPRING PROTECTION PLASTIC HOSE 3/4 X 600MM		02
22	0571017774	SPRING PROTECTION QUICK HOSE		01
23	0503010851	7/16" X 3.1/2" BOLT		02
24	0501053834	MALE QUICK COUPLER	59	04
25	0521052878	HOSE KIT SYSTEM HYDRAULIC		01
25A	0501082077	TR-TM HOSE ASSY		01
25B	0501080445	TR-TM HOSE ASSY		03
25C	0501080199	3/8" X 13.4" TC-TC HOSE ASSY		02
25D	0501080373	TR-TR HOSE ASSY		02
25E	0501080302	TR-TC HOSE ASSY		02
25F	0501081796	3/8" X 1650 TR-TC HOSE		02

Item	Code	Description	See page	QT
25G	0501080212	3/8 X 1930 TR-TC HOSE ASSY		02
25H	0501080401	3/8" X 106" TR-TC HOSE		03
25I	0501080296	3/8" X 106" TR-TR HOSE		01
26	0521052663	HOSE 1/2 X 5500 TM-TM BLACK / RED		01
26A	0501081359	1/2 X 5500 TM-TM HOSE ASSY		01
26B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
26C	0503034495	HYDRAULIC HOSE GRIP (RED)		02
26D	0503018952	PLASTIC BOLT		12
27	0521052664	HOSE 1/2 X 5500 TM-TM BLACK / BLUE		01
27A	0501081359	1/2 X 5500 TM-TM HOSE ASSY		01
27B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
27C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02
27D	0503018952	PLASTIC BOLT		12

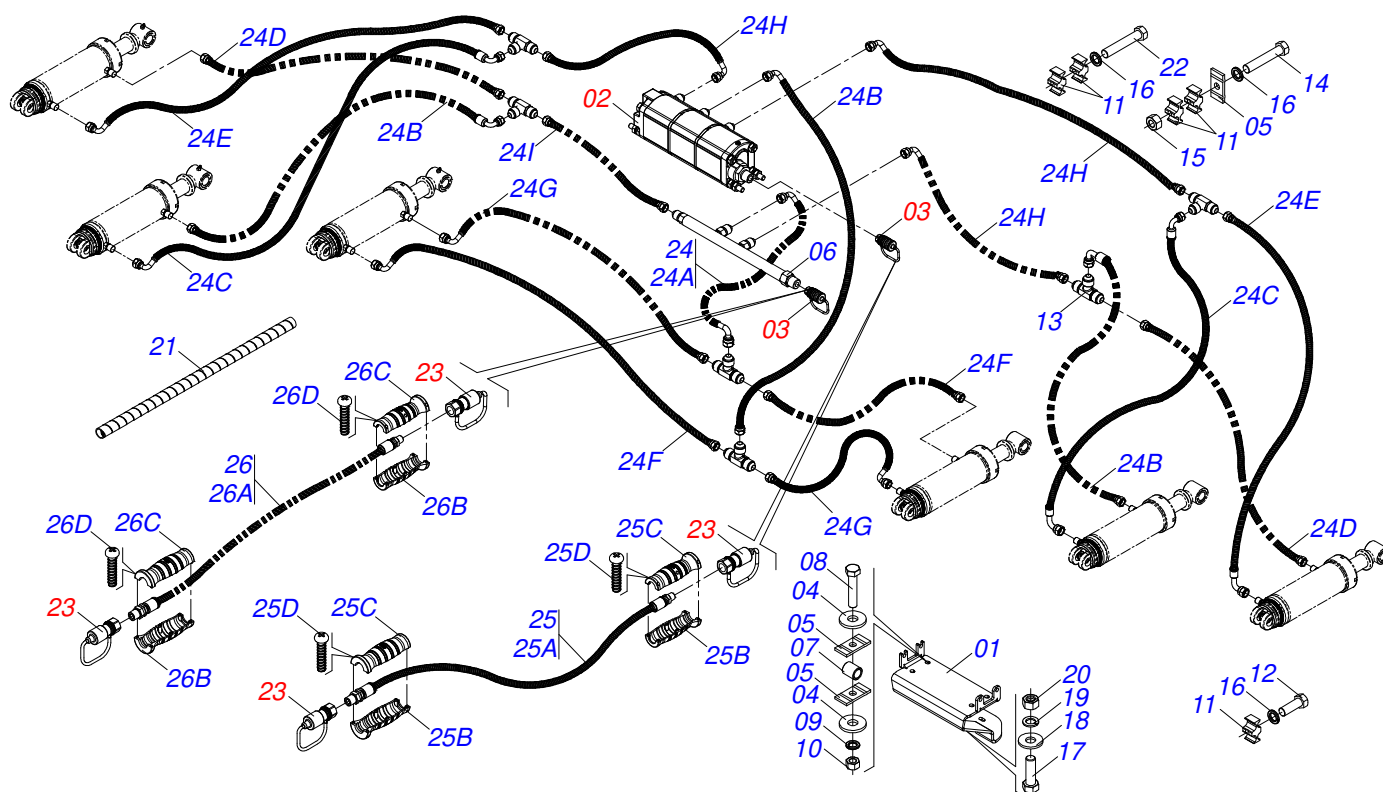


Item	Code	Description	See page	QT
01	0571013472	FIXER BODY VALVE		01
02	0511059290	VALVE ASSEMBLY	57	01
03	0501053835	FEMALE QUICK COUPLER	58	02
04	0501010984	FLAT WASHER		04
05	0531011180	UPPER BODY CLIP		08
06	0521066564	DUCT SEAL OIL		01
07	0531013922	0.6" X 0.8" X 1" SLEEVE		02
08	0503011179	3/8" X 2-1/4" BOLT		02
09	0503010025	3/8" SPRING WASHER		02
10	0503010026	3/8" NUT		02
11	0502012702	BODY SUPPORT CLAMP		14
12	0503012555	SCREW 7/16 UNC X 2 CS RT G.7 ZN		02
13	0503011271	3/4" UNF "T" CONNECTION T 3 SIDES		06
14	0503010723	7/16UNC X 4 C SG.5 ZN1K19920 BOLT		04
15	0503010244	7/16" NUT		04
16	0503010180	7/16" SPRING WASHER		08
17	0503010920	1/2" X 1.1/2" BOLT		02
18	0511017302	FLAT WASHER		02
19	0503010019	1/2" SPRING WASHER		02
20	0503010060	1/2" NUT		02
21	0571017774	SPRING PROTECTION QUICK HOSE		01
22	0503010851	7/16" X 3.1/2" BOLT		02
23	0501053834	MALE QUICK COUPLER	59	04
24	0521052951	HYDRAULIC CIRCUIT ASSEMBLY		01
24A	0501082077	TR-TM HOSE ASSY		01
24B	0501080445	TR-TM HOSE ASSY		03
24C	0501080199	3/8" X 13.4" TC-TC HOSE ASSY		02
24D	0501080221	3/8" X 25.6 TR-TR HOSE ASSY		02
24E	0501080328	3/8" X 29" TR-TC HOSE		02
24F	0501080150	3/8 X 800 TR-TC HOSE		02
24G	0501080485	3/8 X 1100 TR-TC HOSE		02


Item	Code	Description	See page	QT
24H	0501081718	HOSE		03
24I	0501081731	3/8 X 3550 TR-TR HOSE		01
25	0521052663	HOSE 1/2 X 5500 TM-TM BLACK / RED		01
25A	0501081359	1/2 X 5500 TM-TM HOSE ASSY		01
25B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
25C	0503034495	HYDRAULIC HOSE GRIP (RED)		02
25D	0503018952	PLASTIC BOLT		12
26	0521052664	HOSE 1/2 X 5500 TM-TM BLACK / BLUE		01
26A	0501081359	1/2 X 5500 TM-TM HOSE ASSY		01
26B	0503034492	HYDRAULIC HOSE GRIP (BLACK)		02
26C	0503034494	HYDRAULIC HOSE GRIP (BLUE)		02
26D	0503018952	PLASTIC BOLT		12

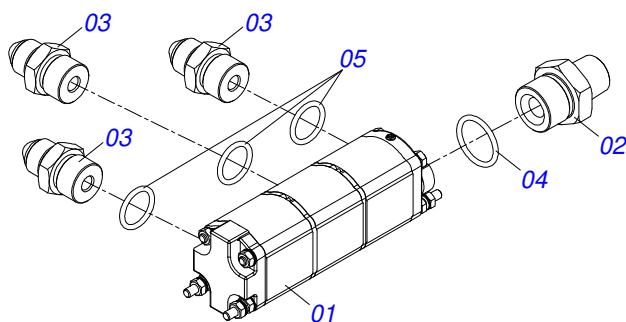


Item	Code	Description	See page	QT
01	0503016524	DIVIDER VALVE		01
02	0581011593	NIPPLE R.1.1/16 UN		01
03	0511010111	7/8" NIPPLE		03
04	0503011109	2-119 N 3006-9B O'RING		01
05	0503010045	O'RING		03

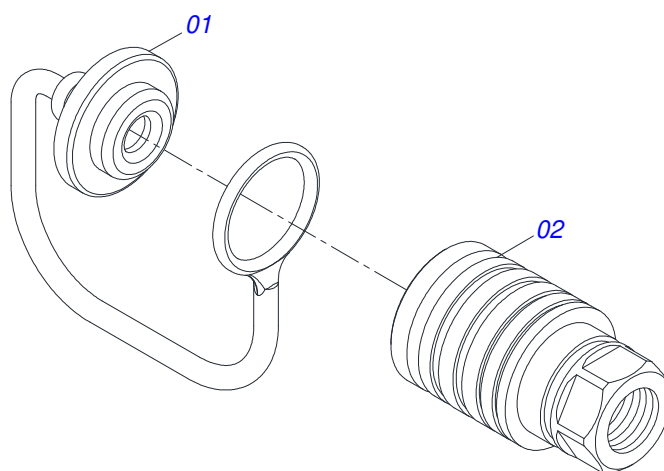

Item	Code	Description	See page	QT
01	0503011883	QUICK CONNECTION COVER		01
02	0503011628	FEMALE QUICK COUPLER		01

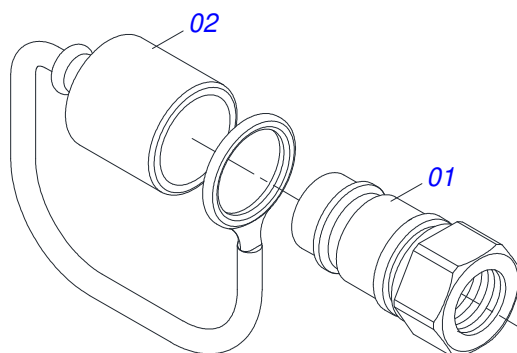


Item	Code	Description	See page	QT
01	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
02	0503011882	MALE QUICK COUPLER CAP		01

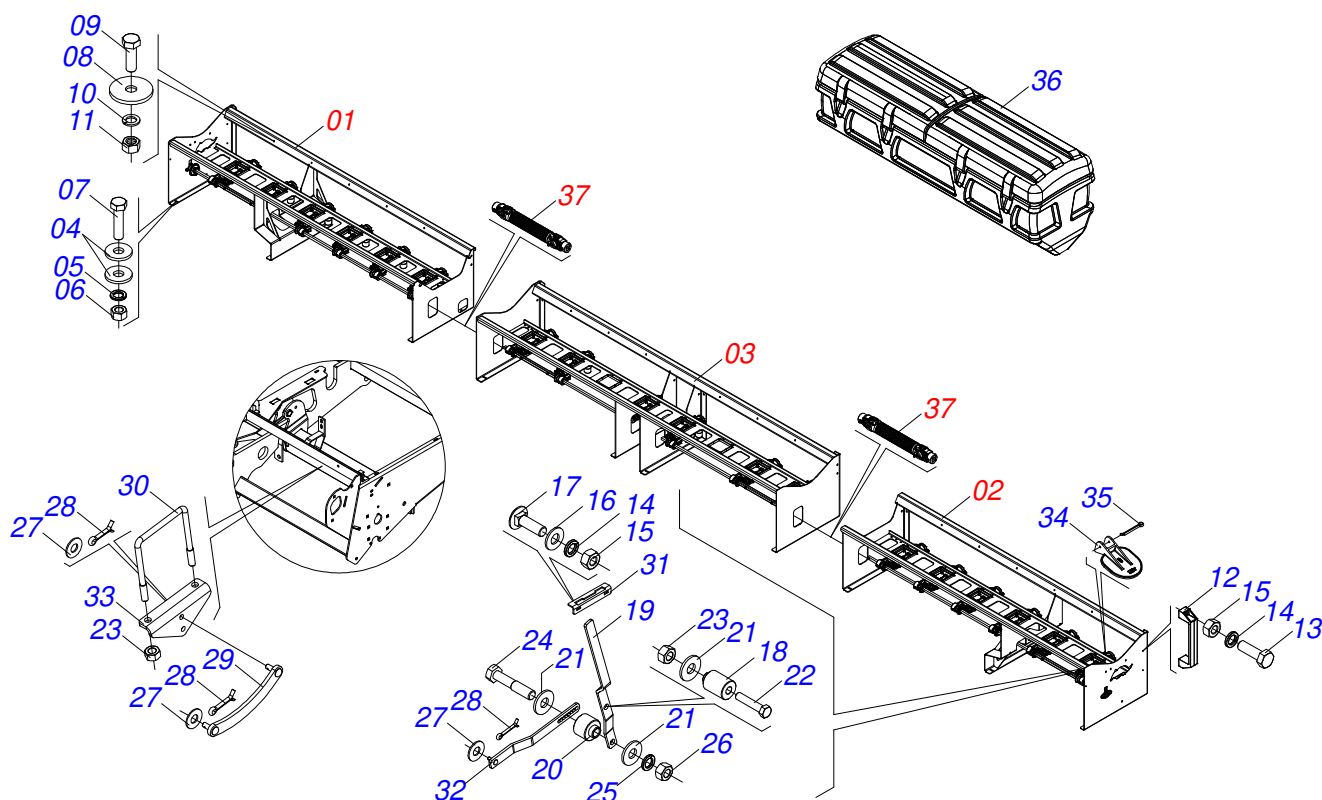


Item	Code	Description	See page	QT
01	0521052704	SUPPORT SILO RIGHT FERTILIZER WITH 61 DISTRIBUTOR 8160	61	01
02	0521052713	SILO SUPPORT LEFT FERTILIZER WITH 62 DISTRIBUTOR 8160	62	01
03	0521052735	SUPPORT SILO CENTRAL FERTILIZER WITH 63 DISTRIBUTOR 8160	63	01
04	0501010984	FLAT WASHER		40
05	0503010025	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0571019051	FIXER BOX WASHER		30
09	0503013751	3/8 UNC X 1.1/4 BOLT		30
10	0503012535	3/8" SPRING WASHER		30
11	0503012531	3/8" INOX NUT		30
12	0503011957	NYLON LUG		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0551019168	SLEEVE		02
19	0551019160	LEVER		02
20	0551019167	SLEEVE UNION		02
21	0511017302	FLAT WASHER		06
22	0503010479	BOLT		02
23	0503011336	1/2" HEX SELF ADJUSTING NUT		06
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		02
26	0503010060	1/2" NUT		02
27	0501013518	FLAT WASHER		06
28	0503010140	1/8" X 3/4" COTTERPIN		06
29	0511069678	LH LOWER LEVER		02


Item	Code	Description	See page	QT
30	0561016468	FASTENER		02
31	0581012605	GEAR BOX LEVER LOCK		02
32	0521061741	INNTER LEVER		02
33	0551019159	LEVER FIXER BODY		02
34	0503034396	FERTILIZER SIDE COVER		15
35	0503010362	1/8" X 1.1/4" COTTERPIN		15
36	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED		03
37	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	64	02

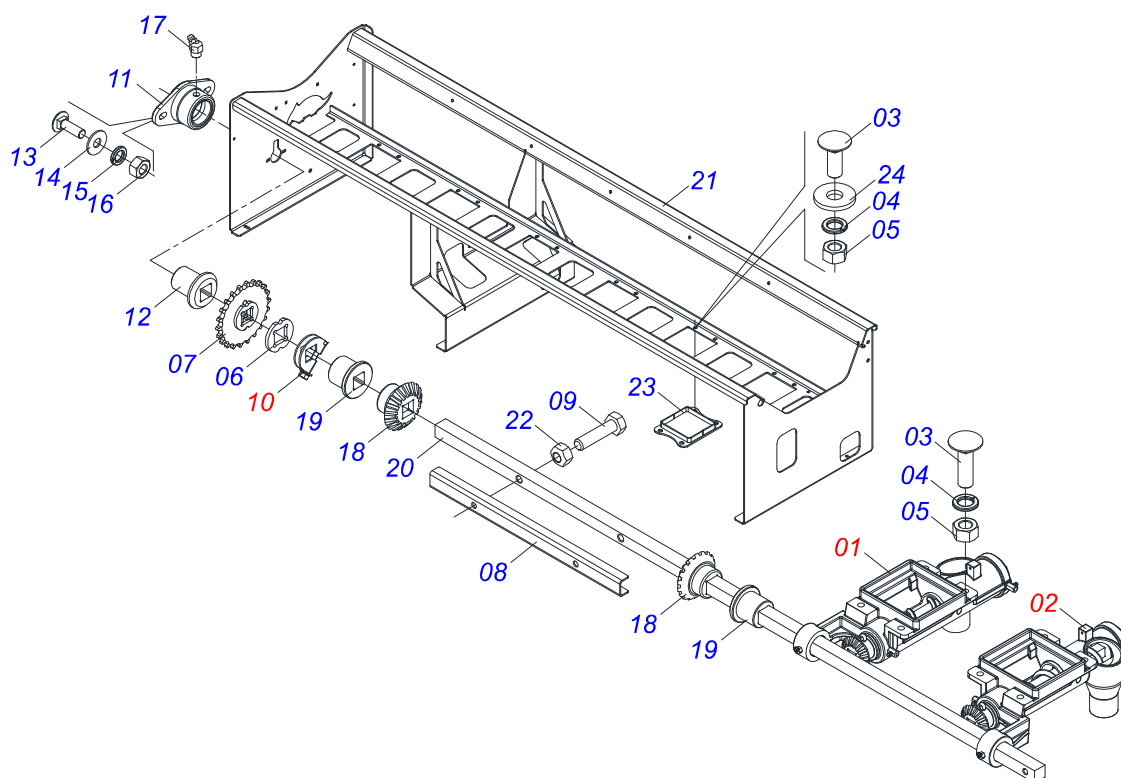


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	03
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	02
03	0501010942	3/8" X 1-1/4" BOLT		24
04	0503010025	3/8" SPRING WASHER		24
05	0503010026	3/8" NUT		24
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	NUT		02
10	0501053788	3/4 SQUARE AXLE FASTENER	67	01
11	0501110392	SILO SUPPORT BEARING		01
12	0521012485	GEAR BOX BEARING AGRICUTURAL		01
13	0503011953	5/16" X 1" BOLT		02
14	0521011039	FLAT WASHER		02
15	0503010179	LOCK WASHER		02
16	0503010337	5/16" NUT		02
17	0503010003	1845 GREASE FITTING		01
18	1902010685	18Z CONICAL GEAR		05
19	0503030275	AGRICULTURAL BEARING		05
20	0581016969	SQUARE AXLE 3/4 X 2485		01
21	0521068604	SUPPORT RIGHT SILO FERTILIZER		01
22	0503013816	5/16" LOCKNUT		02
23	0511062163	FERTILIZER BEAM LOWER COVER		01
24	0501810984	FLAT WASHER		04

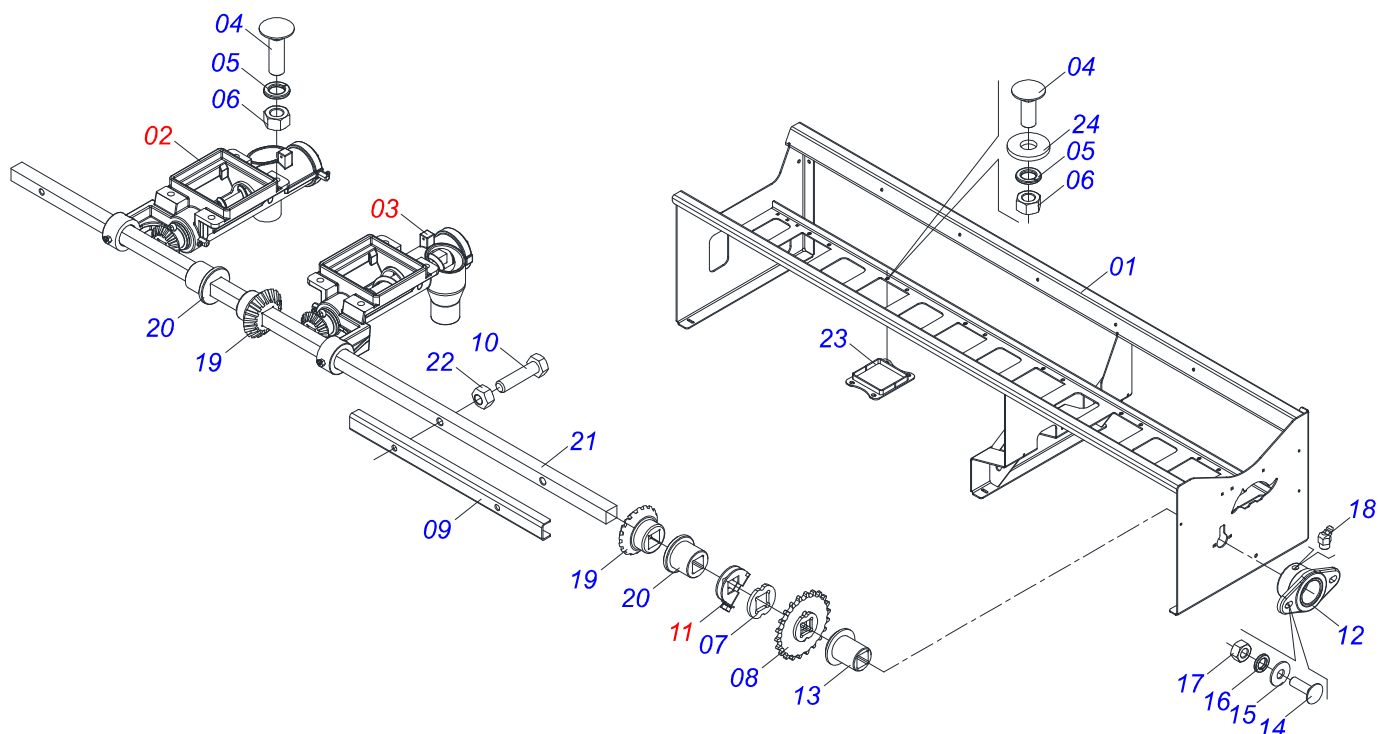

Item	Code	Description	See page	QT
01	0521068614	LEFT SILO FERTILIZER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	02
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	03
04	0501010942	3/8" X 1-1/4" BOLT		24
05	0503010025	3/8" SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	NUT		02
11	0501053788	3/4 SQUARE AXLE FASTENER	67	01
12	0501110392	SILO SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0521011039	FLAT WASHER		02
16	0503010179	LOCK WASHER		02
17	0503010337	5/16" NUT		02
18	0503010003	1845 GREASE FITTING		01
19	1902010685	18Z CONICAL GEAR		05
20	0503030275	AGRICULTURAL BEARING		05
21	0581016969	SQUARE AXLE 3/4 X 2485		01
22	0503013816	5/16" LOCKNUT		02
23	0511062163	FERTILIZER BEAM LOWER COVER		01
24	0501810984	FLAT WASHER		04

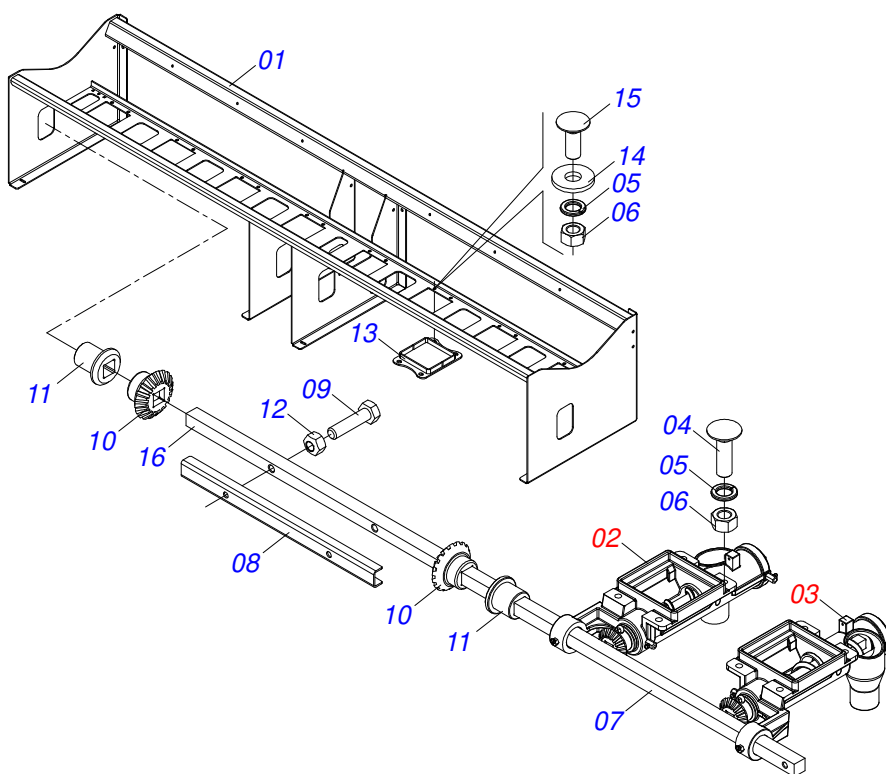


Item	Code	Description	See page	QT
01	0521068616	LH FERTILIZER BOX SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	03
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	02
04	0501010942	3/8" X 1-1/4" BOLT		24
05	0503010025	3/8" SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0581016951	3/4" X 687 SQUARE SHAFT		01
08	0571019828	LOCK AXLE		02
09	0503010365	NUT		04
10	1902010685	18Z CONICAL GEAR		05
11	0503030275	AGRICULTURAL BEARING		05
12	0503013816	5/16" LOCKNUT		04
13	0511062163	FERTILIZER BEAM LOWER COVER		01
14	0501010984	FLAT WASHER		04
15	0501011643	3/8 X 1"BOLT		04
16	0581016952	3/4" X 1012 SQUARE SHAFT 15 E 550		01

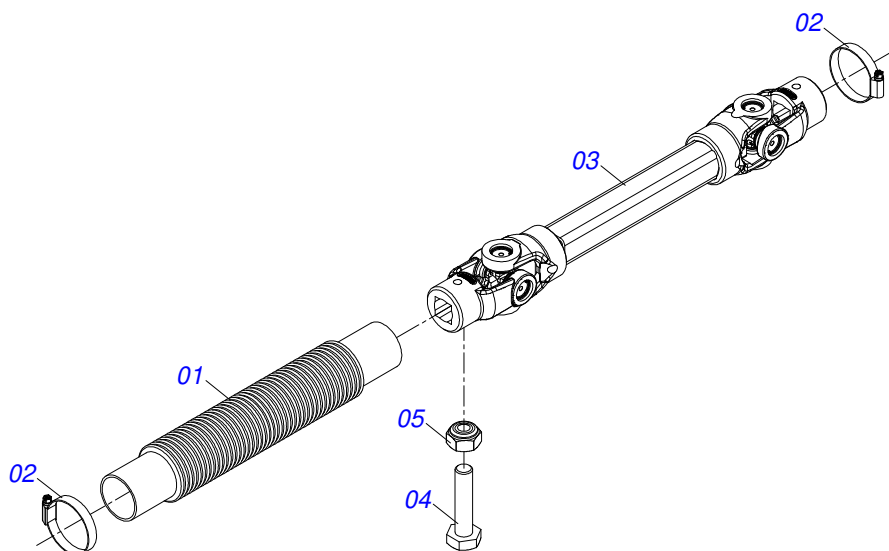

Item	Code	Description	See page	QT
01	0503030331	1.2" X 1.2" X 12.2" HOSE		01
02	0503010243	CLAMP		02
03	0503062755	TRANSMISSION AXLE		01
04	0503014491	SCREW 1/4 UNC X 2 CS G.5 ZN		02
05	0503012880	1/4" UNC SELF ADJUSTING NUT		02

RIGHT SIDE FERTILIZER DISTRIBUTOR


0511051535

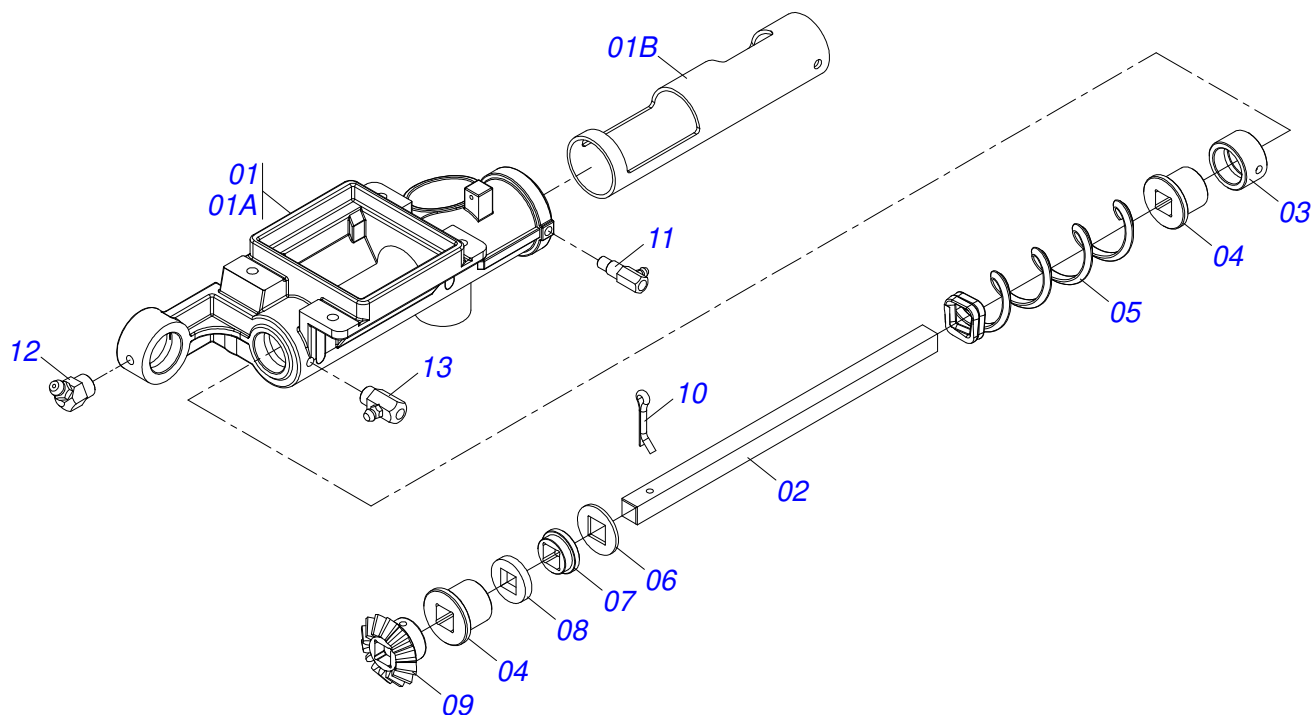

Item	Code	Description	See page	QT
01	0501110676	SIDE FERTILIZER DISTRIBUTOR		01
01A	0502012688	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010542	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031165	LEFT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

LEFT SIDE FERTILIZER DISTRIBUTOR


0511051558

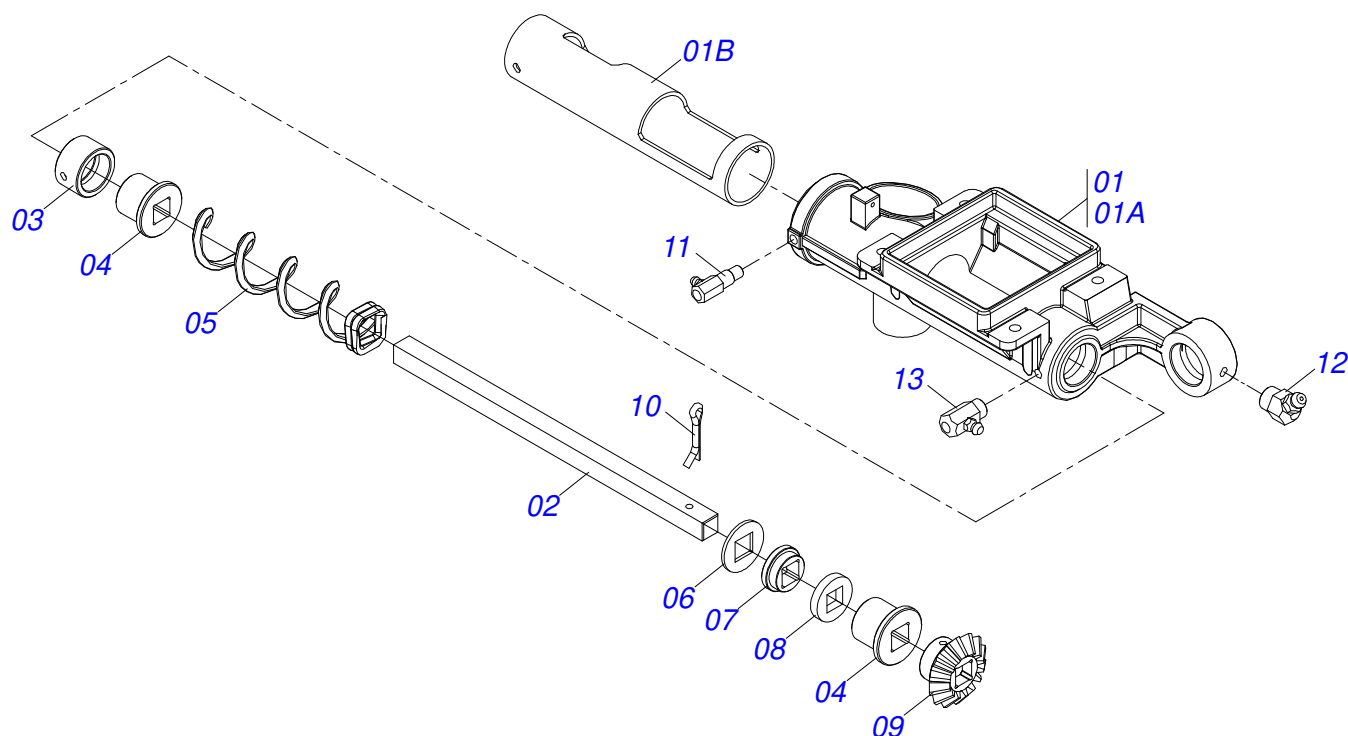


Item	Code	Description	See page	QT
01	0501110682	DISTRIBUTOR FERTILIZER WITH LEFT SIDE OUTLET		01
01A	0502012700	SIDE FERTILIZER DISTRIBUTOR		01
01B	0571010560	FERTILIZER DISTRIBUTOR TUBE		01
02	0501019851	DISTRIBUTOR FERTILIZER AXLE		01
03	0521010309	SLEEVE INTER		01
04	0503030275	AGRICULTURAL BEARING		02
05	0503031164	RIGHT HELICOID CONDUCTOR		01
06	0501010637	FLAT WASHER		01
07	0503030303	SUPPORT WASHER		01
08	0501013774	GREASE SEAL		01
09	0591017505	GEAR		01
10	0503010523	1/4" X 2" COTTERPIN		01
11	0503011962	GREASE FITTING		01
12	0503010003	1845 GREASE FITTING		01
13	0503012826	CREASE FITTING		01

3/4 SQUARE AXLE FASTENER

0501053788

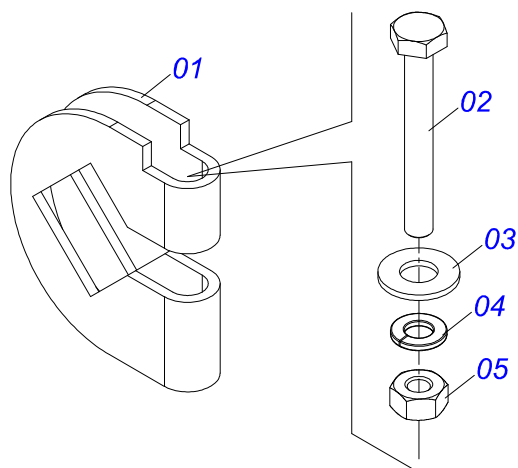

Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

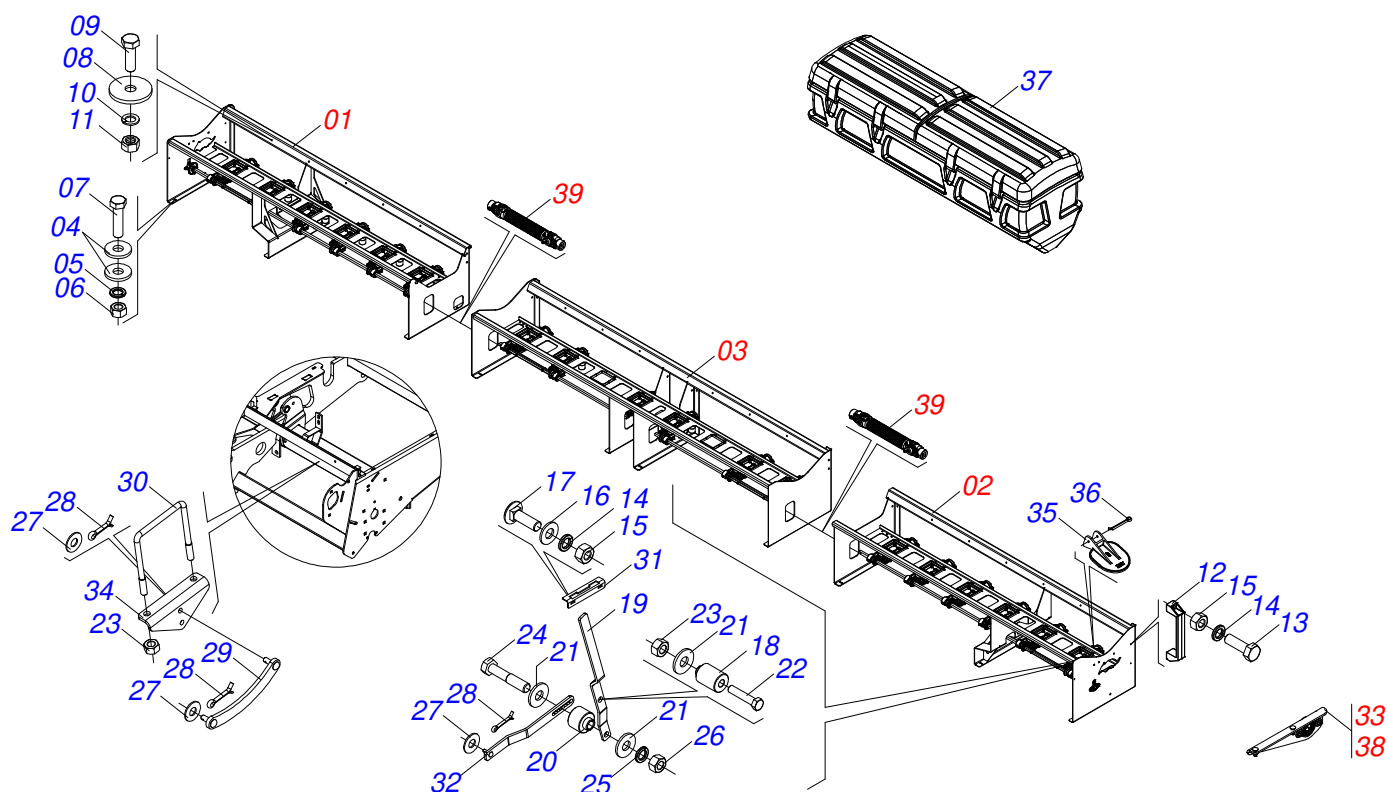


Item	Code	Description	See page	QT
01	0521052709	SUPPORT SILO RIGHT FERTILIZER WITH 69 DISTRIBUTOR 8460/8960/9460	01	01
02	0521052718	SILO SUPPORT LEFT FERTILIZER WITH 70 DISTRIBUTOR 8460/8960/9460	01	01
03	0521051607	SUPPORT SILO CENTRAL FERTILIZER 71 6450/7285/7450/8460	01	01
04	0501010984	FLAT WASHER		40
05	0503010025	3/8" SPRING WASHER		04
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0571019051	FIXER BOX WASHER		28
09	0503013751	3/8 UNC X 1.1/4 BOLT		28
10	0503012535	3/8" SPRING WASHER		28
11	0503012531	3/8" INOX NUT		28
12	0503011957	NYLON LUG		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0551019168	SLEEVE		02
19	0551019160	LEVER		02
20	0551019167	SLEEVE UNION		02
21	0511017302	FLAT WASHER		06
22	0503010479	BOLT		02
23	0503011336	1/2" HEX SELF ADJUSTING NUT		06
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		02
26	0503010060	1/2" NUT		02
27	0501013518	FLAT WASHER		06
28	0503010140	1/8" X 3/4" COTTERPIN		06
29	0511069678	LH LOWER LEVER		02




ASSY SILO FERTILIZER 8460

0521052744


Item	Code	Description	See page	QT
30	0561016468	FASTENER		02
31	0581012605	GEAR BOX LEVER LOCK		02
32	0521061741	INNTER LEVER		02
33	0521050194	SUPPORT RIGHT SQUARE AXLE SILO FERTILIZER	72	01
34	0551019159	LEVER FIXER BODY		02
35	0503034396	FERTILIZER SIDE COVER		17
36	0503010362	1/8" X 1.1/4" COTTERPIN		17
37	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED		03
38	0521050195	SILO FERTILIZER LEFT SQUARE AXLE	73	01
39	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	64	02

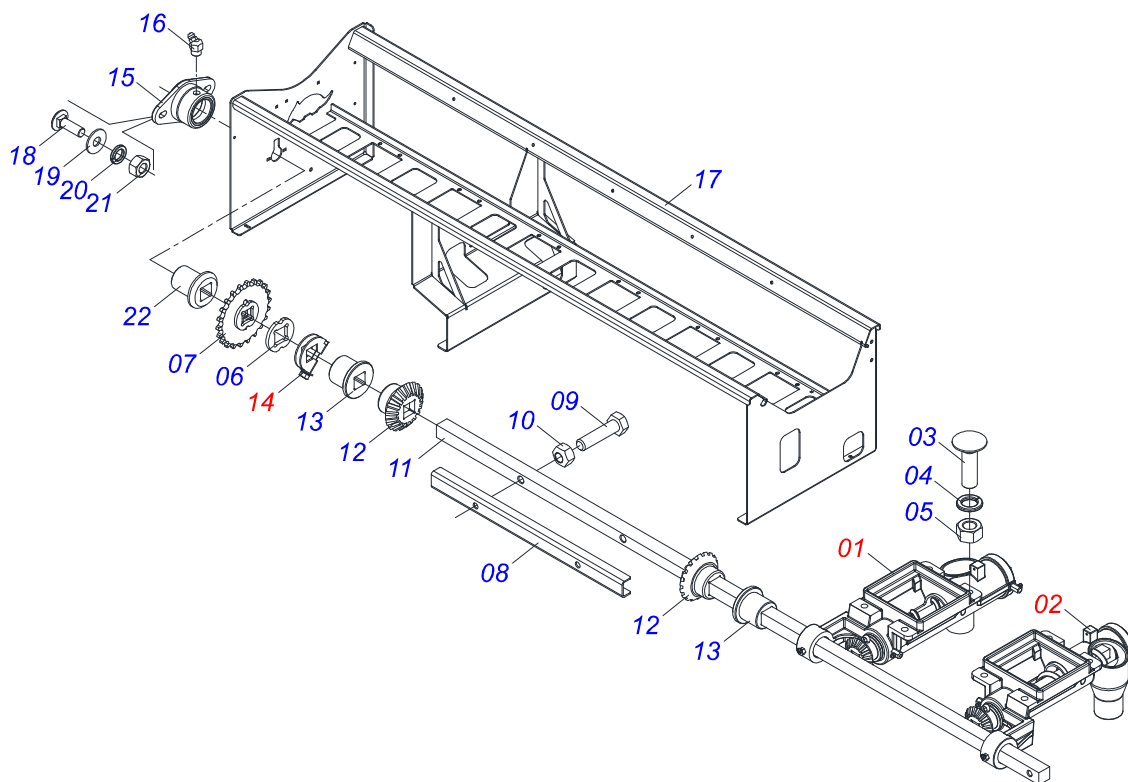


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	01
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	05
03	0501010942	3/8" X 1-1/4" BOLT		24
04	0503010025	3/8" SPRING WASHER		24
05	0503010026	3/8" NUT		24
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	NUT		02
10	0503013816	5/16" LOCKNUT		02
11	0581016967	SQUARE SHAFT		01
12	1902010685	18Z CONICAL GEAR		06
13	0503030275	AGRICULTURAL BEARING		06
14	0501053788	3/4 SQUARE AXLE FASTENER	67	01
15	0501110392	SILO SUPPORT BEARING		01
16	0503010003	1845 GREASE FITTING		01
17	0521068602	SUPPORT RIGHT SILO FERTILIZER WITH DISTRIBUTOR		01
18	0503011953	5/16" X 1" BOLT		02
19	0521011039	FLAT WASHER		02
20	0503010179	LOCK WASHER		02
21	0503010337	5/16" NUT		02
22	0521012485	GEAR BOX BEARING AGRICUTURAL		01

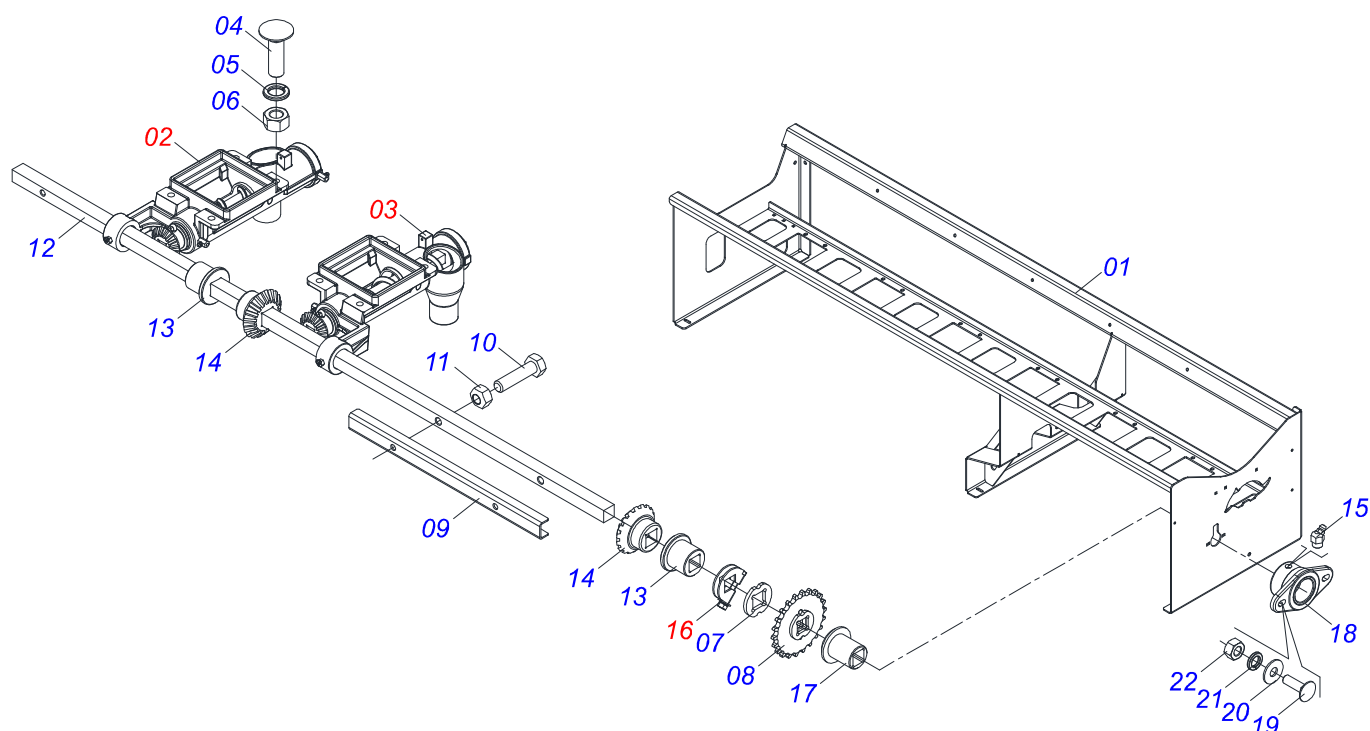


Item	Code	Description	See page	QT
01	0521068612	SILO FERTILIZER SUPPORT WITH DISTRIBUTOR		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	05
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	01
04	0501010942	3/8" X 1-1/4" BOLT		24
05	0503010025	3/8" SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	NUT		02
11	0503010337	5/16" NUT		02
12	0581016967	SQUARE SHAFT		01
13	0503030275	AGRICULTURAL BEARING		06
14	1902010685	18Z CONICAL GEAR		06
15	0503010003	1845 GREASE FITTING		01
16	0501053788	3/4 SQUARE AXLE FASTENER	67	01
17	0521012485	GEAR BOX BEARING AGRICUTURAL		01
18	0501110392	SILO SUPPORT BEARING		01
19	0503011953	5/16" X 1" BOLT		02
20	0521011039	FLAT WASHER		02
21	0503010179	LOCK WASHER		02
22	0503013816	5/16" LOCKNUT		02

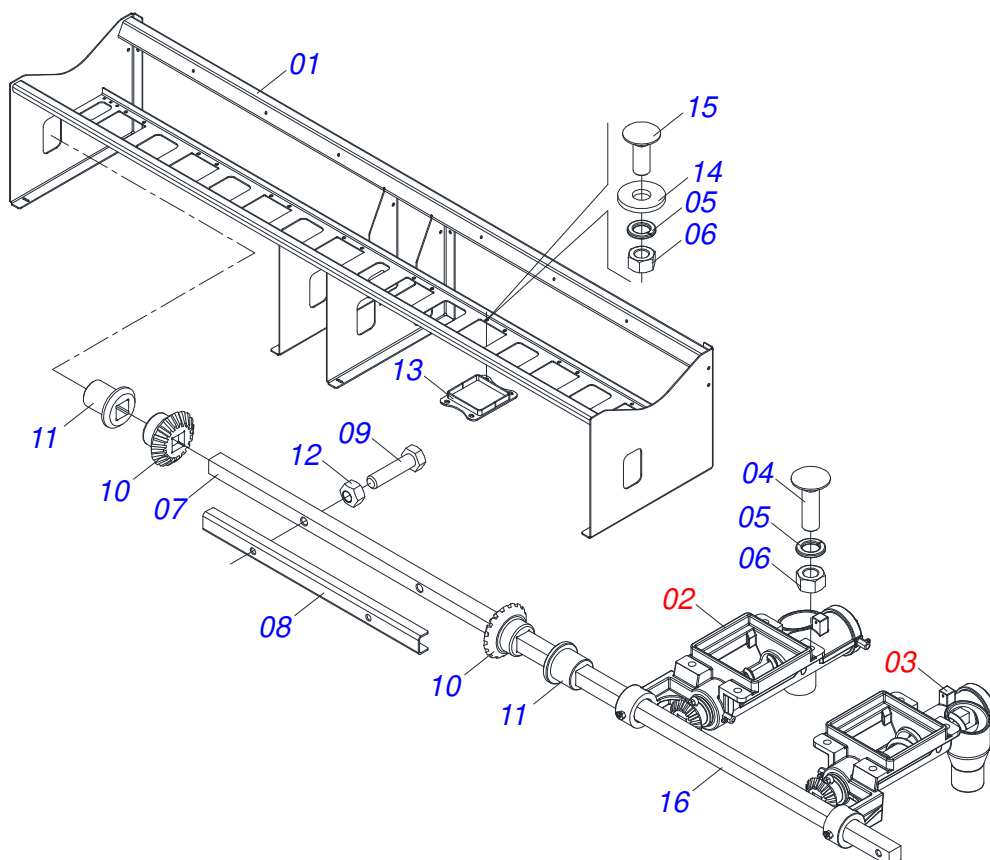


Item	Code	Description	See page	QT
01	0521068089	SUPPORT CENTRAL SILO FERTILIZER		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	03
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	02
04	0501010942	3/8" X 1-1/4" BOLT		20
05	0503011443	3/8" SPRING WASHER		24
06	0503010026	3/8" NUT		24
07	0581016973	SQUARE AXLE 3/4 X 790		01
08	0571019828	LOCK AXLE		02
09	0503010365	NUT		04
10	1902010685	18Z CONICAL GEAR		05
11	0503030275	AGRICULTURAL BEARING		05
12	0503013816	5/16" LOCKNUT		04
13	0511062163	FERTILIZER BEAM LOWER COVER		01
14	0501010984	FLAT WASHER		04
15	0501011643	3/8 X 1" BOLT		04
16	0581016950	SQUARE AXLE 3/4 X 1115		01

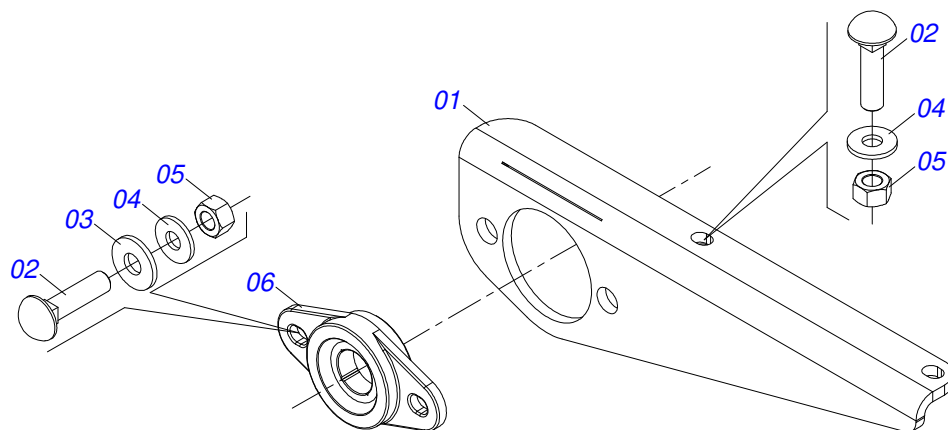

Item	Code	Description	See page	QT
01	0581013322	BEARING RIGHT SUPPORT		01
02	0503011953	5/16" X 1" BOLT		04
03	0501010984	FLAT WASHER		02
04	0501010694	FLAT WASHER		04
05	0503013816	5/16" LOCKNUT		04
06	0501056444	BEARING WITH ROLLING	102	01

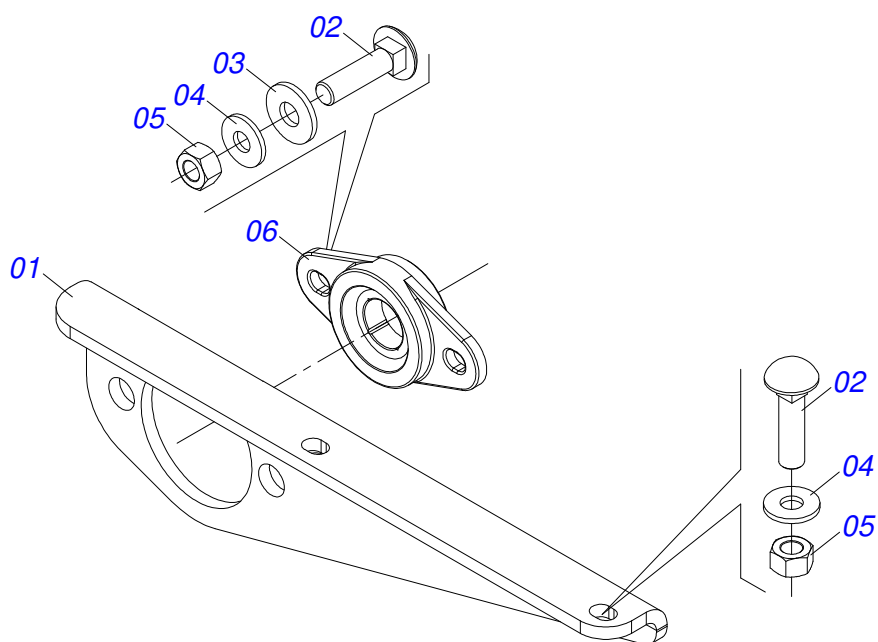

Item	Code	Description	See page	QT
01	0581013324	BEARING LEFT SUPPORT		01
02	0503011953	5/16" X 1" BOLT		04
03	0501010984	FLAT WASHER		02
04	0501010694	FLAT WASHER		04
05	0503013816	5/16" LOCKNUT		04
06	0501056444	BEARING WITH ROLLING	102	01

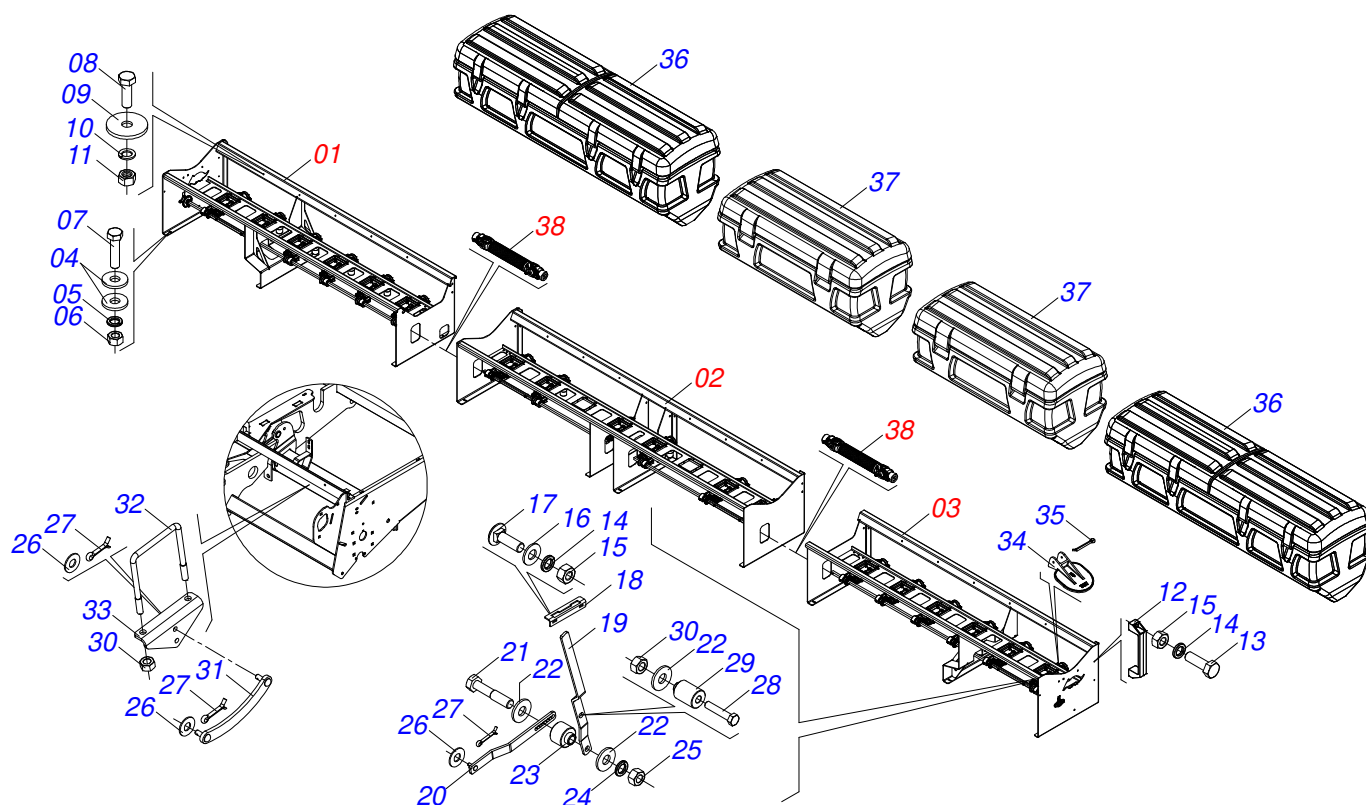


Item	Code	Description	See page	QT
01	0521052709	SUPPORT SILO RIGHT FERTILIZER WITH 69 DISTRIBUTOR 8460/8960/9460	69	01
02	0521052731	SUPPORT SILO CENTRAL FERTILIZER WITH 75 DISTRIBUTOR 8960	75	01
03	0521052718	SILO SUPPORT LEFT FERTILIZER WITH 70 DISTRIBUTOR 8460/8960/9460	70	01
04	0501010984	FLAT WASHER		40
05	0503010025	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0503013751	3/8 UNC X 1.1/4 BOLT		32
09	0571019051	FIXER BOX WASHER		32
10	0503012535	3/8" SPRING WASHER		32
11	0503012531	3/8" INOX NUT		32
12	0503011957	NYLON LUG		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0581012605	GEAR BOX LEVER LOCK		02
19	0551019160	LEVER		02
20	0521061741	INNTER LEVER		02
21	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
22	0511017302	FLAT WASHER		06
23	0551019167	SLEEVE UNION		02
24	0503010019	1/2" SPRING WASHER		02
25	0503010060	1/2" NUT		02
26	0501013518	FLAT WASHER		06
27	0503010140	1/8" X 3/4" COTTERPIN		06
28	0503010479	BOLT		02
29	0551019168	SLEEVE		02


SILO FERTILIZER ASSEMBLY 8960

0521052740

Item	Code	Description	See page	QT
30	0503011336	1/2" HEX SELF ADJUSTING NUT		06
31	0511069678	LH LOWER LEVER		02
32	0561016468	FASTENER		02
33	0551019159	LEVER FIXER BODY		02
34	0503034396	FERTILIZER SIDE COVER		18
35	0503010362	1/8" X 1.1/4" COTTERPIN		18
36	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED		02
37	0503062362	FERTILIZER BOX		02
38	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	64	02

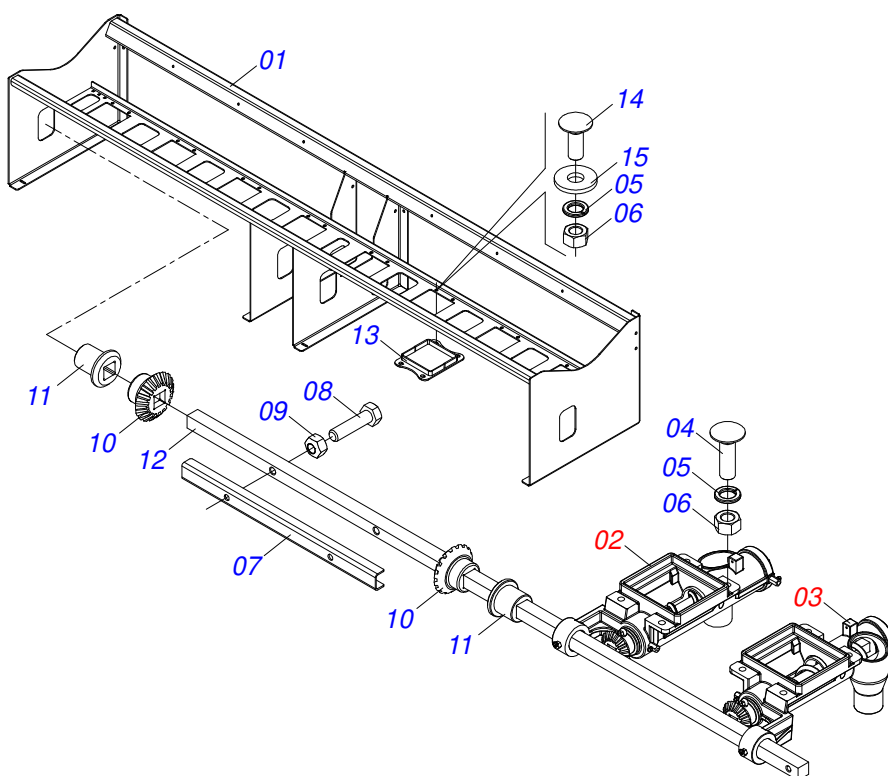

Item	Code	Description	See page	QT
01	0521068620	SUPPORT CENTRAL SILO FERTILIZER		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	03
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	03
04	0501010942	3/8" X 1-1/4" BOLT		24
05	0503011443	3/8" SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0571019828	LOCK AXLE		02
08	0503010365	NUT		04
09	0503013816	5/16" LOCKNUT		04
10	1902010685	18Z CONICAL GEAR		06
11	0503030275	AGRICULTURAL BEARING		06
12	0581016966	AXIS Q 3/4 X 1371		02
13	0511062163	FERTILIZER BEAM LOWER COVER		02
14	0501011643	3/8 X 1"BOLT		08
15	0501010984	FLAT WASHER		08

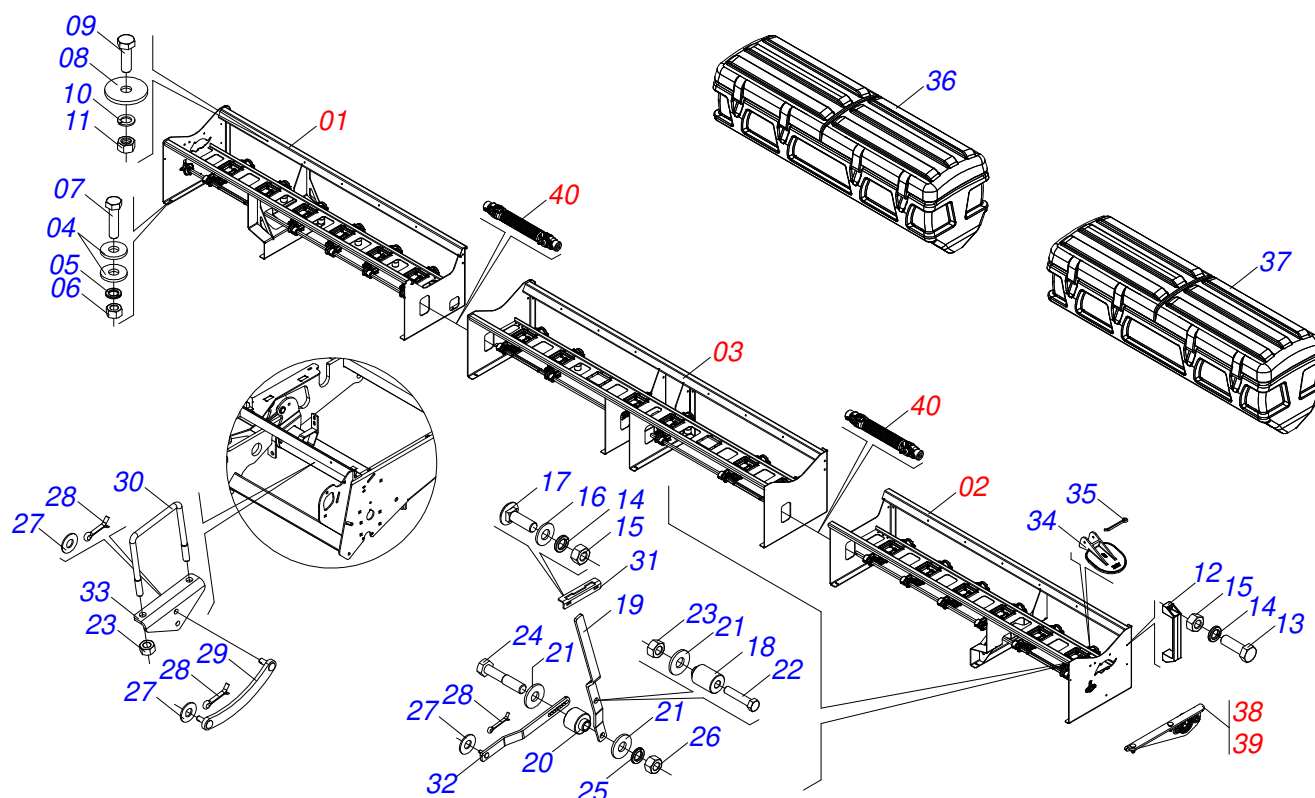


Item	Code	Description	See page	QT
01	0521052718	SILO SUPPORT LEFT FERTILIZER WITH 70 DISTRIBUTOR 8460/8960/9460	70	01
02	0521052709	SUPPORT SILO RIGHT FERTILIZER WITH 69 DISTRIBUTOR 8460/8960/9460	69	01
03	0521052728	SUPPORT SILO CENTRAL FERTILIZER WITH 77 DISTRIBUTOR 9460	77	01
04	0501010984	FLAT WASHER		40
05	0503010025	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0571019051	FIXER BOX WASHER		32
09	0503013751	3/8 UNC X 1.1/4 BOLT		32
10	0503012535	3/8" SPRING WASHER		32
11	0503012531	3/8" INOX NUT		32
12	0503011957	NYLON LUG		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0551019168	SLEEVE		02
19	0551019160	LEVER		02
20	0551019167	SLEEVE UNION		02
21	0511017302	FLAT WASHER		06
22	0503010479	BOLT		02
23	0503011336	1/2" HEX SELF ADJUSTING NUT		06
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		02
26	0503010060	1/2" NUT		02
27	0501013518	FLAT WASHER		06
28	0503010140	1/8" X 3/4" COTTERPIN		06
29	0511069678	LH LOWER LEVER		02


SILO FERTILIZER ASSEMBLY 9460

0521052741

Item	Code	Description	See page	QT
30	0561016468	FASTENER		02
31	0581012605	GEAR BOX LEVER LOCK		02
32	0521061741	INNTER LEVER		02
33	0551019159	LEVER FIXER BODY		02
34	0503034396	FERTILIZER SIDE COVER		19
35	0503010362	1/8" X 1.1/4" COTTERPIN		19
36	0503062589	SILO FERTILIZER 6 MOUTHS MOUNTED		02
37	0503062362	FERTILIZER BOX		02
38	0521050194	SUPPORT RIGHT SQUARE AXLE SILO FERTILIZER	72	01
39	0521050195	SILO FERTILIZER LEFT SQUARE AXLE	73	01
40	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	64	02

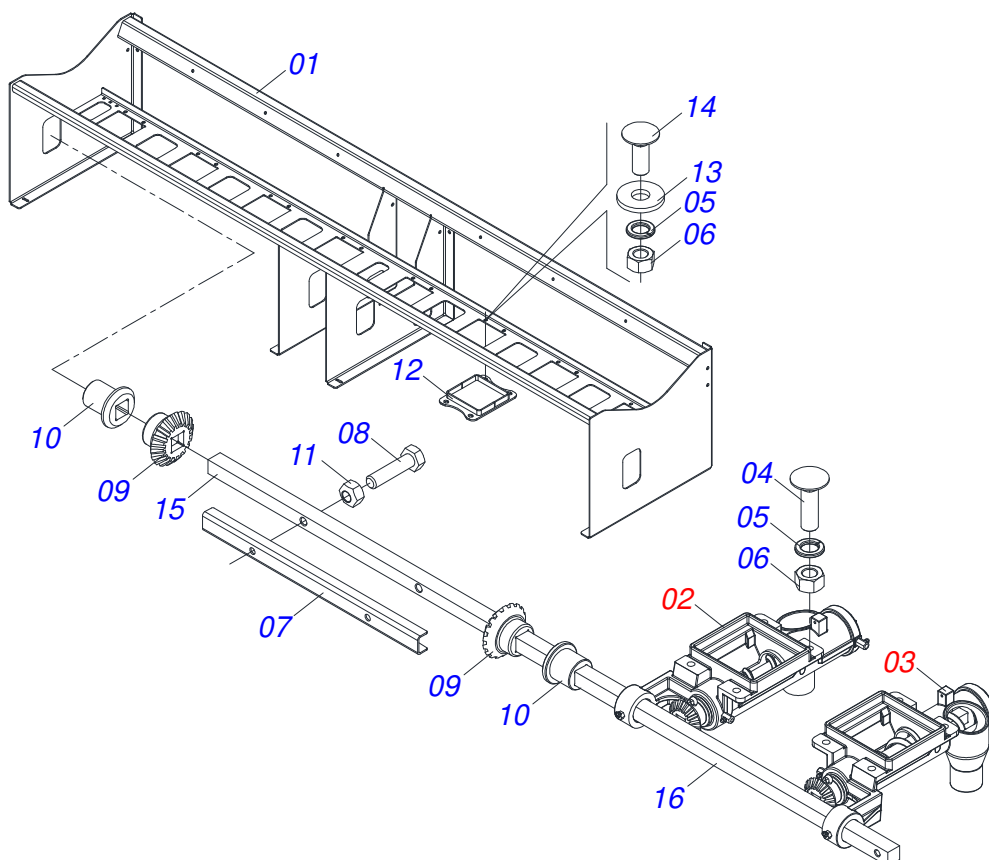

Item	Code	Description	See page	QT
01	0521068619	LR SEED SILO CENTRAL SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	04
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	03
04	0501010942	3/8" X 1-1/4" BOLT		28
05	0503011443	3/8" SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0571019828	LOCK AXLE		02
08	0503010365	NUT		04
09	1902010685	18Z CONICAL GEAR		07
10	0503030275	AGRICULTURAL BEARING		07
11	0503013816	5/16" LOCKNUT		04
12	0511062163	FERTILIZER BEAM LOWER COVER		01
13	0501010984	FLAT WASHER		04
14	0501011643	3/8 X 1" BOLT		04
15	0581016963	SQUARE SHAFT		01
16	0581016964	3/4" X 1320 SQUARE SHAFT 19 E 500		01

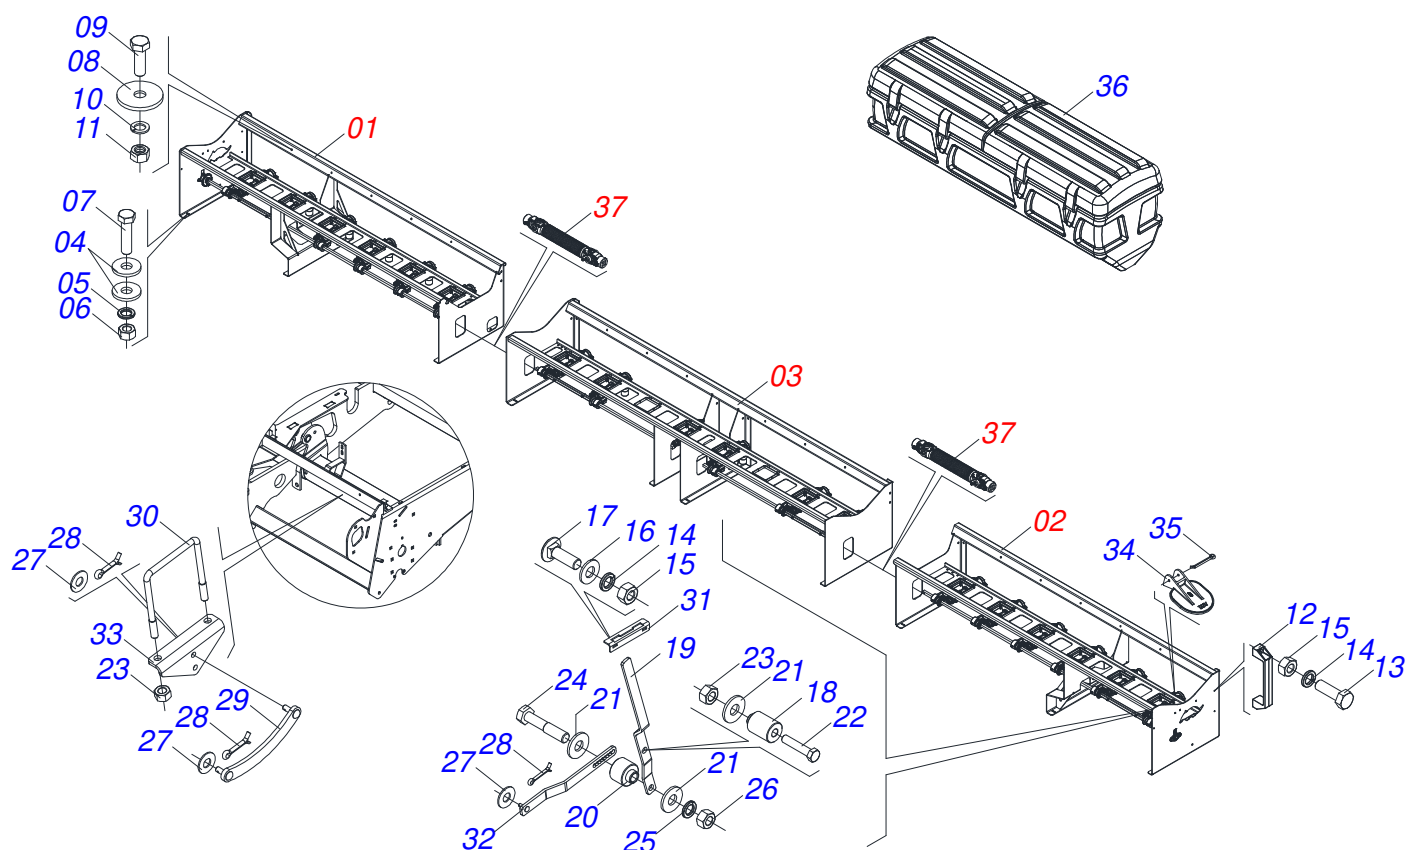


Item	Code	Description	See page	QT
01	0521052708	SUPPORT SILO RIGHT FERTILIZER WITH 79 DISTRIBUTOR 9960/10460	01	01
02	0521052717	SILO SUPPORT LEFT FERTILIZER WITH 80 DISTRIBUTOR 9960/10460	01	01
03	0521052727	SUPPORT SILO CENTRAL FERTILIZER WITH 81 DISTRIBUTOR 9960	01	01
04	0501010984	FLAT WASHER		40
05	0503010025	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0571019051	FIXER BOX WASHER		36
09	0503013751	3/8 UNC X 1.1/4 BOLT		36
10	0503012535	3/8" SPRING WASHER		36
11	0503012531	3/8" INOX NUT		36
12	0503011957	NYLON LUG		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0551019168	SLEEVE		02
19	0551019160	LEVER		02
20	0551019167	SLEEVE UNION		02
21	0511017302	FLAT WASHER		06
22	0503010479	BOLT		02
23	0503011336	1/2" HEX SELF ADJUSTING NUT		06
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		02
26	0503010060	1/2" NUT		02
27	0501013518	FLAT WASHER		06
28	0503010140	1/8" X 3/4" COTTERPIN		06
29	0511069678	LH LOWER LEVER		02


SILO FERTILIZER ASSEMBLY 9960

0521052747


Item	Code	Description	See page	QT
30	0561016468	FASTENER		02
31	0581012605	GEAR BOX LEVER LOCK		02
32	0521061741	INNTER LEVER		02
33	0551019159	LEVER FIXER BODY		02
34	0503034396	FERTILIZER SIDE COVER		20
35	0503010362	1/8" X 1.1/4" COTTERPIN		20
36	0503062362	FERTILIZER BOX		06
37	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	64	02

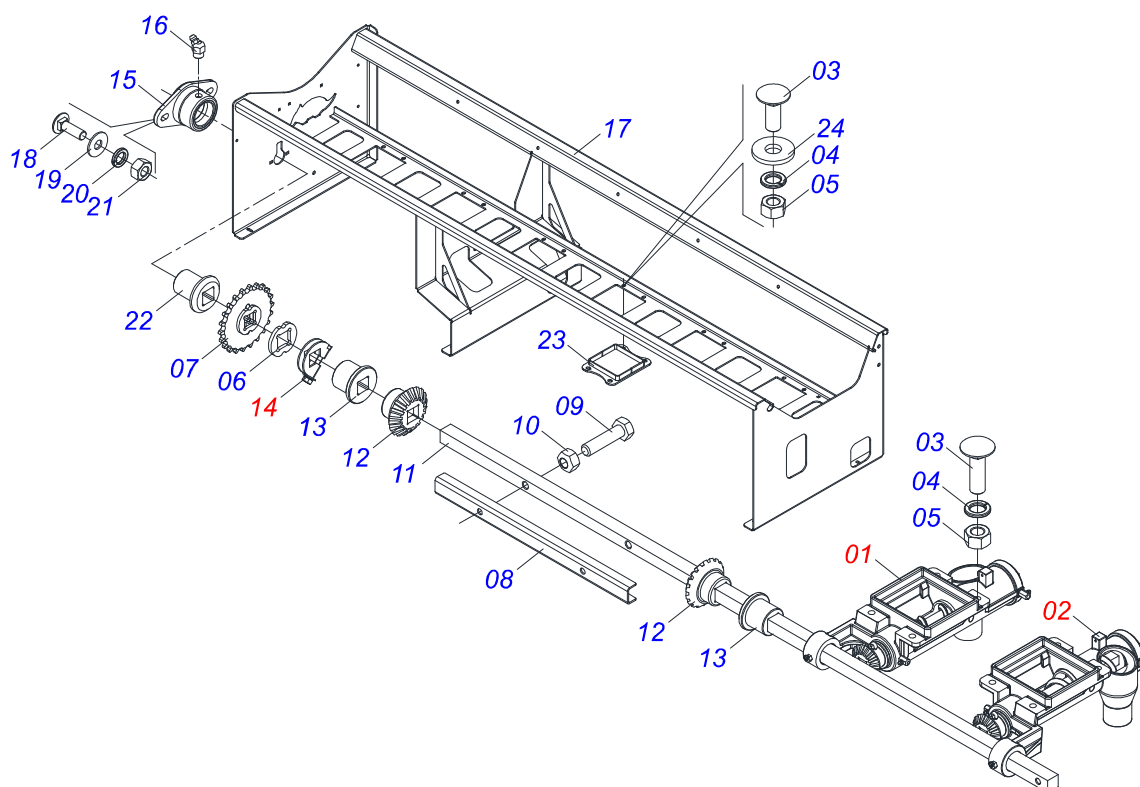


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	03
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	04
03	0501010942	3/8" X 1-1/4" BOLT		32
04	0503010025	3/8" SPRING WASHER		32
05	0503010026	3/8" NUT		32
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	NUT		02
10	0503013816	5/16" LOCKNUT		02
11	0581016961	SQUARE SHAFT		01
12	1902010685	18Z CONICAL GEAR		07
13	0503030275	AGRICULTURAL BEARING		07
14	0501053788	3/4 SQUARE AXLE FASTENER	67	01
15	0501110392	SILO SUPPORT BEARING		01
16	0503010003	1845 GREASE FITTING		01
17	0521068601	20 E 500 RH FERTILIZER BEAM SUPPORT		01
18	0503011953	5/16" X 1" BOLT		02
19	0521011039	FLAT WASHER		02
20	0503010179	LOCK WASHER		02
21	0503010337	5/16" NUT		02
22	0521012485	GEAR BOX BEARING AGRICUTURAL		01
23	0511062163	FERTILIZER BEAM LOWER COVER		01
24	0501810984	FLAT WASHER		04

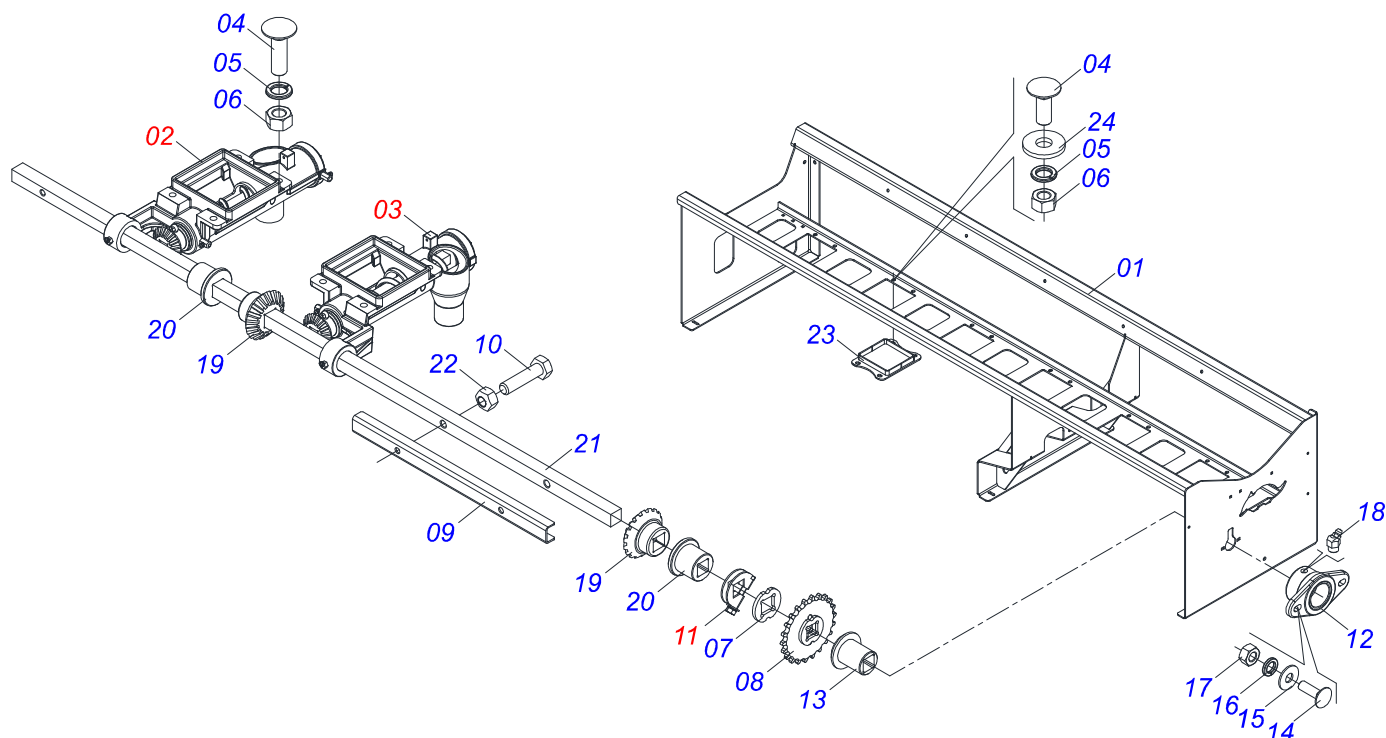

Item	Code	Description	See page	QT
01	0521068611	LEFT SILO FERTILIZER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	04
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	03
04	0501010942	3/8" X 1-1/4" BOLT		32
05	0503010025	3/8" SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	NUT		02
11	0501053788	3/4 SQUARE AXLE FASTENER	67	01
12	0501110392	SILO SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0521011039	FLAT WASHER		02
16	0503010179	LOCK WASHER		02
17	0503010337	5/16" NUT		02
18	0503010003	1845 GREASE FITTING		01
19	1902010685	18Z CONICAL GEAR		07
20	0503030275	AGRICULTURAL BEARING		07
21	0581016961	SQUARE SHAFT		01
22	0503013816	5/16" LOCKNUT		02
23	0511062163	FERTILIZER BEAM LOWER COVER		01
24	0501010984	FLAT WASHER		04

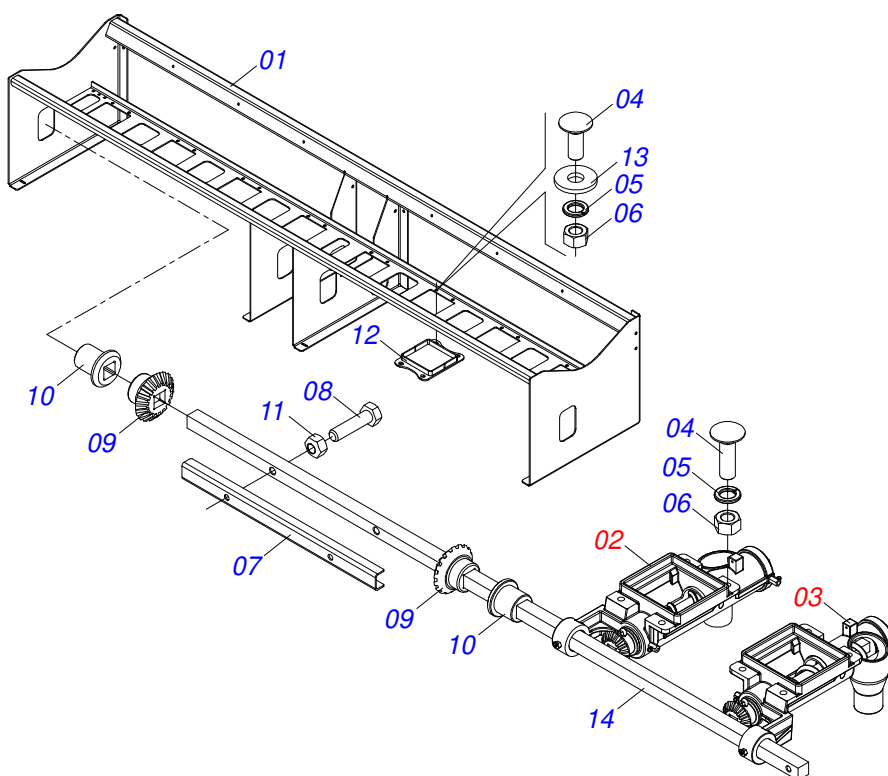


Item	Code	Description	See page	QT
01	0521068618	CENTRAL FERTILIZER BOX SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	03
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	03
04	0501010942	3/8" X 1-1/4" BOLT		32
05	0503010025	3/8" SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0571019828	LOCK AXLE		02
08	0503010365	NUT		04
09	1902010685	18Z CONICAL GEAR		06
10	0503030275	AGRICULTURAL BEARING		06
11	0503013816	5/16" LOCKNUT		04
12	0511062163	FERTILIZER BEAM LOWER COVER		02
13	0501010984	FLAT WASHER		08
14	0581016962	3/4" X 1392 SQUARE SHAFT 20 E 500		02

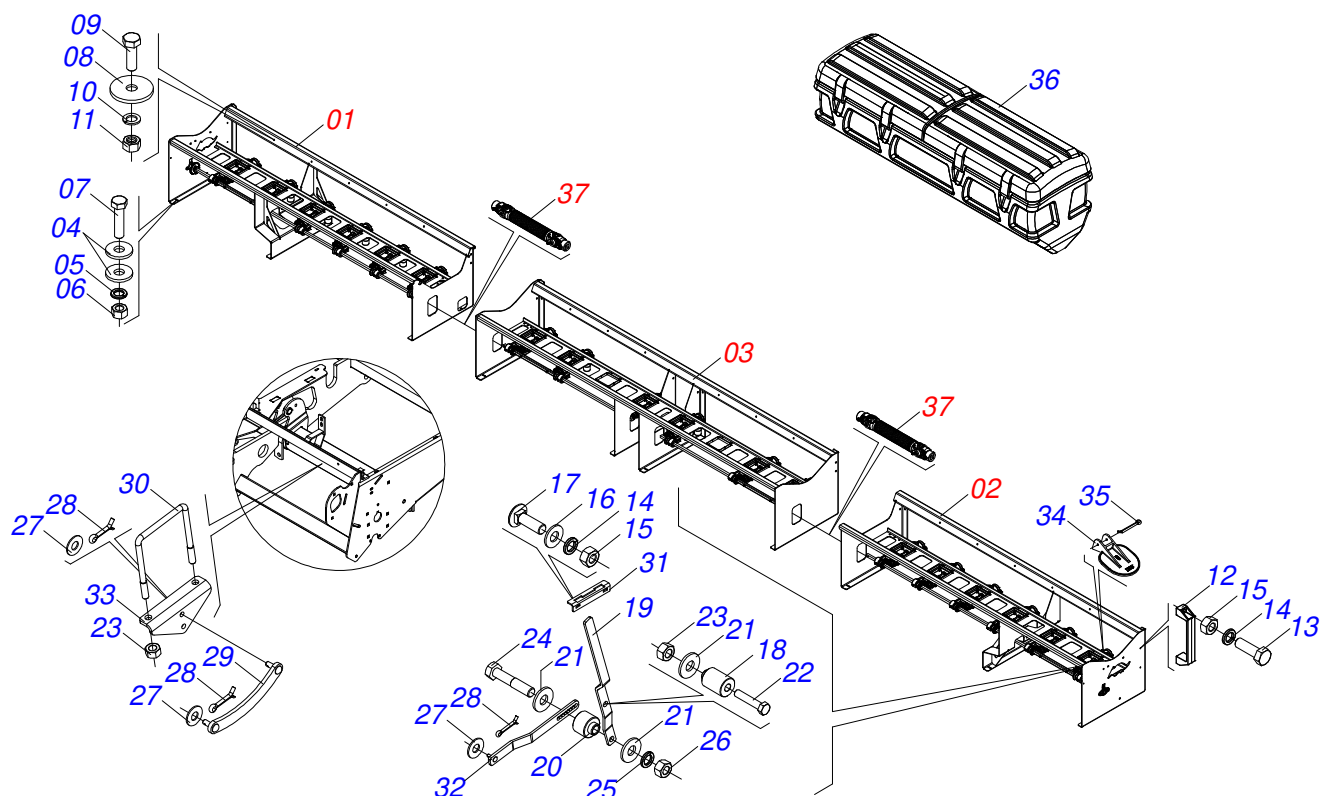


Item	Code	Description	See page	QT
01	0521052706	SUPPORT SILO RIGHT FERTILIZER WITH 83 DISTRIBUTOR 10985	01	01
02	0521052715	SILO SUPPORT LEFT FERTILIZER WITH 84 DISTRIBUTOR 10985	01	01
03	0521052723	SUPPORT SILO CENTRAL FERTILIZER WITH 85 DISTRIBUTOR 10985	01	01
04	0501010984	FLAT WASHER		40
05	0503010025	3/8" SPRING WASHER		20
06	0503010026	3/8" NUT		20
07	0503010849	3/8" X 1-1/2" BOLT		20
08	0571019051	FIXER BOX WASHER		36
09	0503013751	3/8 UNC X 1.1/4 BOLT		36
10	0503012535	3/8" SPRING WASHER		36
11	0503012531	3/8" INOX NUT		36
12	0503011957	NYLON LUG		02
13	0503010371	5/16" X 1" BOLT		04
14	0503010179	LOCK WASHER		08
15	0503010337	5/16" NUT		08
16	0501010694	FLAT WASHER		04
17	0503011953	5/16" X 1" BOLT		04
18	0551019168	SLEEVE		02
19	0551019160	LEVER		02
20	0551019167	SLEEVE UNION		02
21	0511017302	FLAT WASHER		06
22	0503010479	BOLT		02
23	0503011336	1/2" HEX SELF ADJUSTING NUT		06
24	0503011172	BOLT 1/2 UNC X 2.1/2 C S G.5 ZN		02
25	0503010019	1/2" SPRING WASHER		02
26	0503010060	1/2" NUT		02
27	0501013518	FLAT WASHER		06
28	0503010140	1/8" X 3/4" COTTERPIN		06
29	0511069678	LH LOWER LEVER		02


Item	Code	Description	See page	QT
30	0561016468	FASTENER		02
31	0581012605	GEAR BOX LEVER LOCK		02
32	0521061741	INNTER LEVER		02
33	0551019159	LEVER FIXER BODY		02
34	0503034396	FERTILIZER SIDE COVER		22
35	0503010362	1/8" X 1.1/4" COTTERPIN		22
36	0503062362	FERTILIZER BOX		06
37	0521052736	INTERMEDIATE TRANSMISSION OF FERTILIZER	64	02

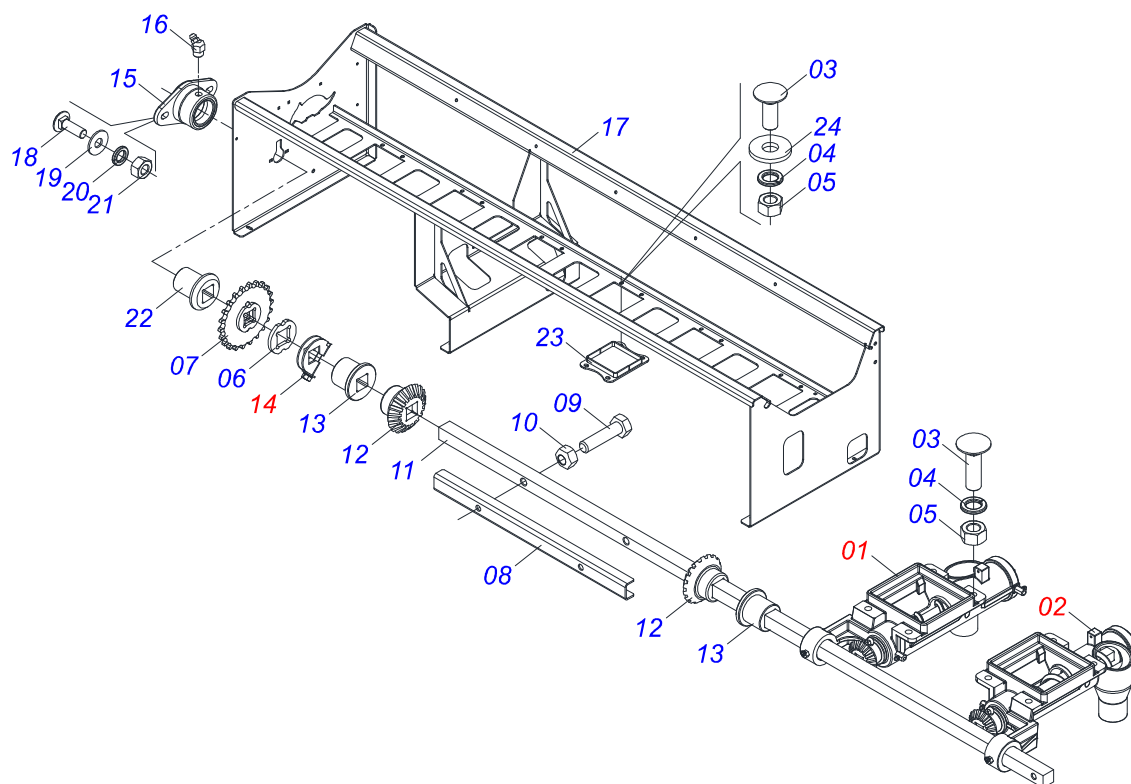


Item	Code	Description	See page	QT
01	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	03
02	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	04
03	0501010942	3/8" X 1-1/4" BOLT		32
04	0503010025	3/8" SPRING WASHER		32
05	0503010026	3/8" NUT		32
06	0521014167	CONE LOCK		01
07	0511061759	22Z P12,70 FQ 3/4" GEAR		01
08	0571019828	LOCK AXLE		01
09	0503010365	NUT		02
10	0503013816	5/16" LOCKNUT		02
11	0581016954	3/4 X 3293 SQUARE SHAFT		01
12	1902010685	18Z CONICAL GEAR		07
13	0503030275	AGRICULTURAL BEARING		07
14	0501053788	3/4 SQUARE AXLE FASTENER	67	01
15	0501110392	SILO SUPPORT BEARING		01
16	0503010003	1845 GREASE FITTING		01
17	0521068599	22 E 500 RH FERTILIZER BEAM SUPPORT PST TRIO/FLEX		01
18	0503011953	5/16" X 1" BOLT		02
19	0521011039	FLAT WASHER		02
20	0503010179	LOCK WASHER		02
21	0503010337	5/16" NUT		02
22	0521012485	GEAR BOX BEARING AGRICUTURAL		01
23	0511062163	FERTILIZER BEAM LOWER COVER		01
24	0501810984	FLAT WASHER		04

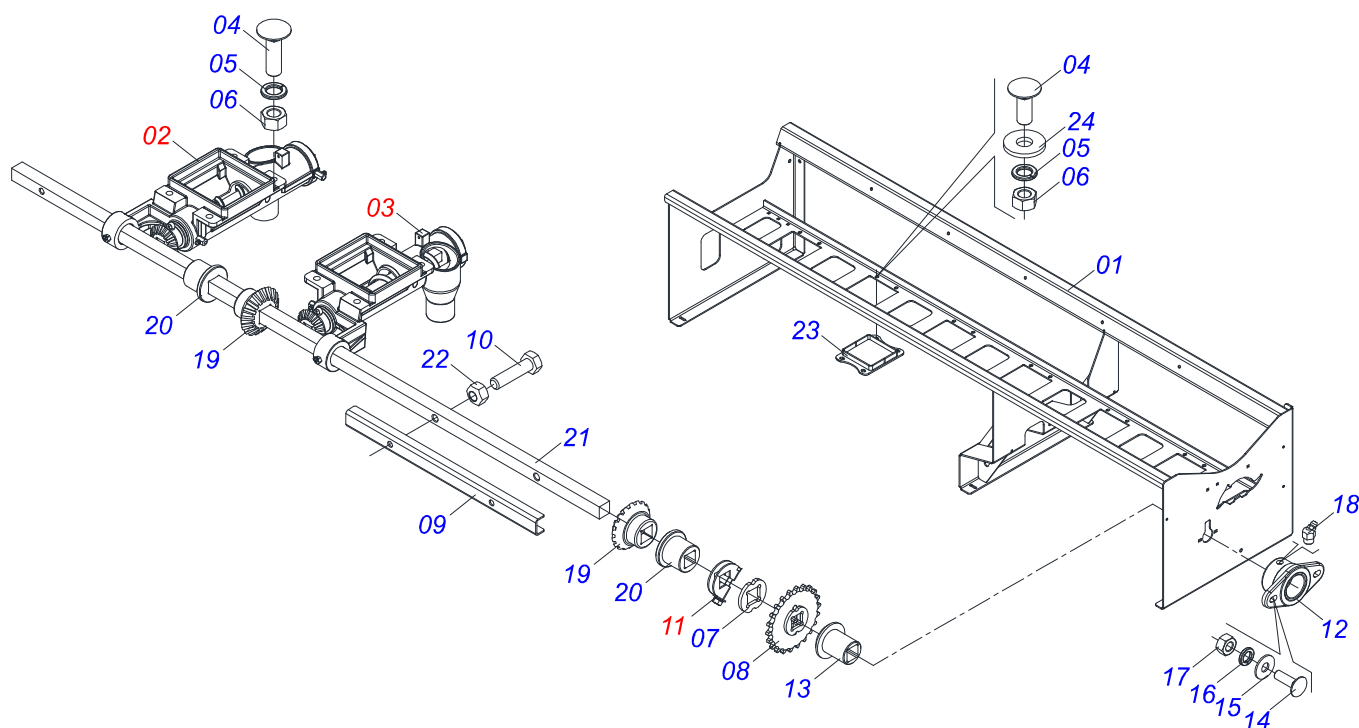

Item	Code	Description	See page	QT
01	0521068609	LH SILO FERTILIZER SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	04
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	03
04	0501010942	3/8" X 1-1/4" BOLT		32
05	0503010025	3/8" SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0521014167	CONE LOCK		01
08	0511061759	22Z P12,70 FQ 3/4" GEAR		01
09	0571019828	LOCK AXLE		01
10	0503010365	NUT		02
11	0501053788	3/4 SQUARE AXLE FASTENER	67	01
12	0501110392	SILO SUPPORT BEARING		01
13	0521012485	GEAR BOX BEARING AGRICUTURAL		01
14	0503011953	5/16" X 1" BOLT		02
15	0521011039	FLAT WASHER		02
16	0503010179	LOCK WASHER		02
17	0503010337	5/16" NUT		02
18	0503010003	1845 GREASE FITTING		01
19	1902010685	18Z CONICAL GEAR		07
20	0503030275	AGRICULTURAL BEARING		07
21	0581016954	3/4 X 3293 SQUARE SHAFT		01
22	0503013816	5/16" LOCKNUT		02
23	0511062163	FERTILIZER BEAM LOWER COVER		01
24	0501010984	FLAT WASHER		04

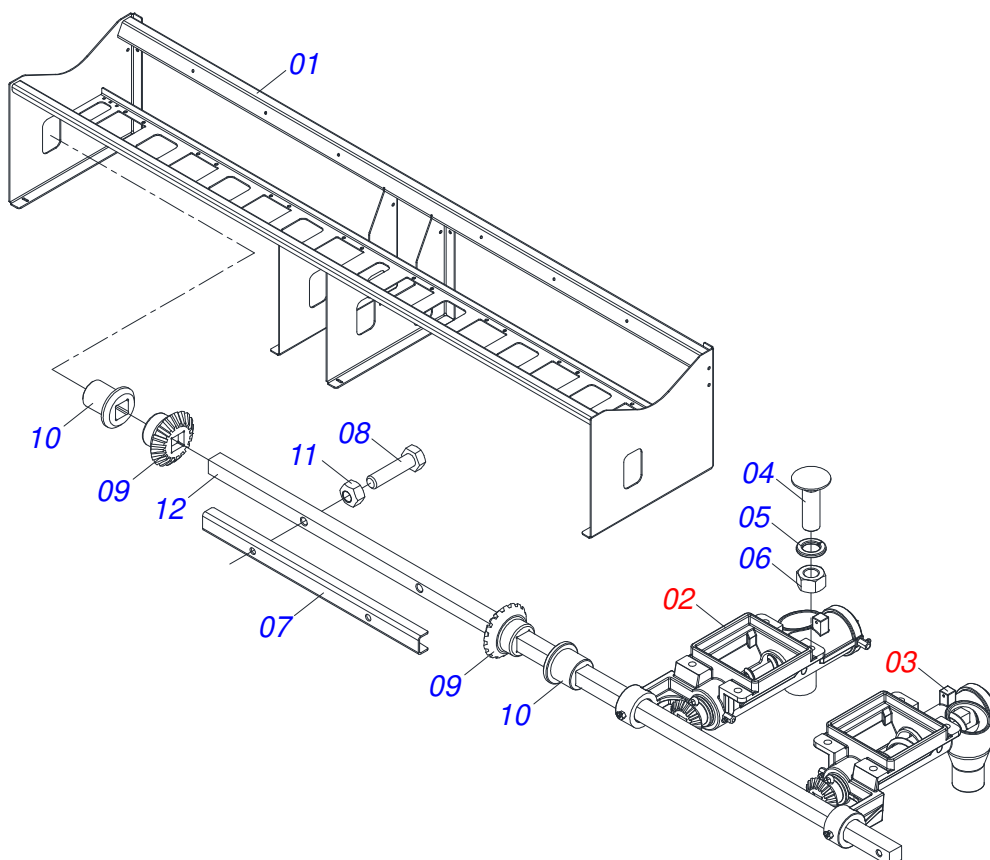


Item	Code	Description	See page	QT
01	0521068617	CENTRAL FERTILIZER BOX SUPPORT		01
02	0511051535	RIGHT SIDE FERTILIZER DISTRIBUTOR	65	04
03	0511051558	LEFT SIDE FERTILIZER DISTRIBUTOR	66	04
04	0501010942	3/8" X 1-1/4" BOLT		32
05	0503011443	3/8" SPRING WASHER		32
06	0503010026	3/8" NUT		32
07	0571019828	LOCK AXLE		02
08	0503010365	NUT		04
09	1902010685	18Z CONICAL GEAR		08
10	0503030275	AGRICULTURAL BEARING		08
11	0503013816	5/16" LOCKNUT		04
12	0581016955	3/4" X 1506 SQUARE SHAFT		02

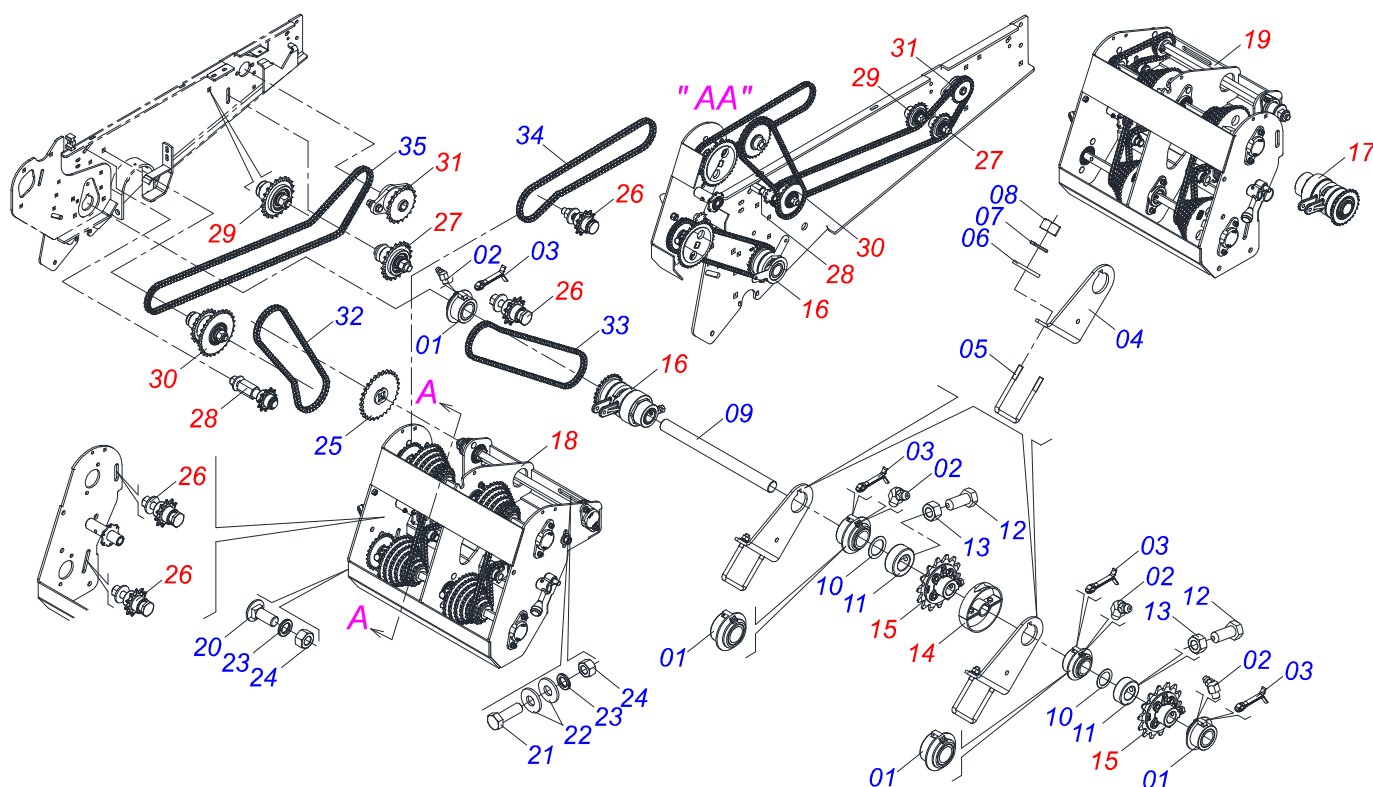


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2" NUT		08
09	0571014442	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0501052560	MOTOR AXLE SIGNAL	91	02
15	0511051434	TRANSMISSION ACTUATOR	92	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	93	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	94	01
18	0521043316	RIGHT GEAR BOX ASSY	95	01
19	0521043317	LEFT GEAR BOX ASSY	96	01
20	0501011600	1/2" X 1-1/4" BOLT		06
21	0503010920	1/2" X 1.1/2" BOLT		04
22	0511017302	FLAT WASHER		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2" NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	106	04
27	0521055217	LOWER CURRENT STRETCH	107	02
28	0501058254	UPPER SEED CHAIN TENSIONER	108	02
29	0521055216	BEARING WITH GEAR	109	02
30	0521055218	BEARING GEAR WITH DOUBLE	110	02
31	0521055214	BEARING GEAR WITH	111	02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

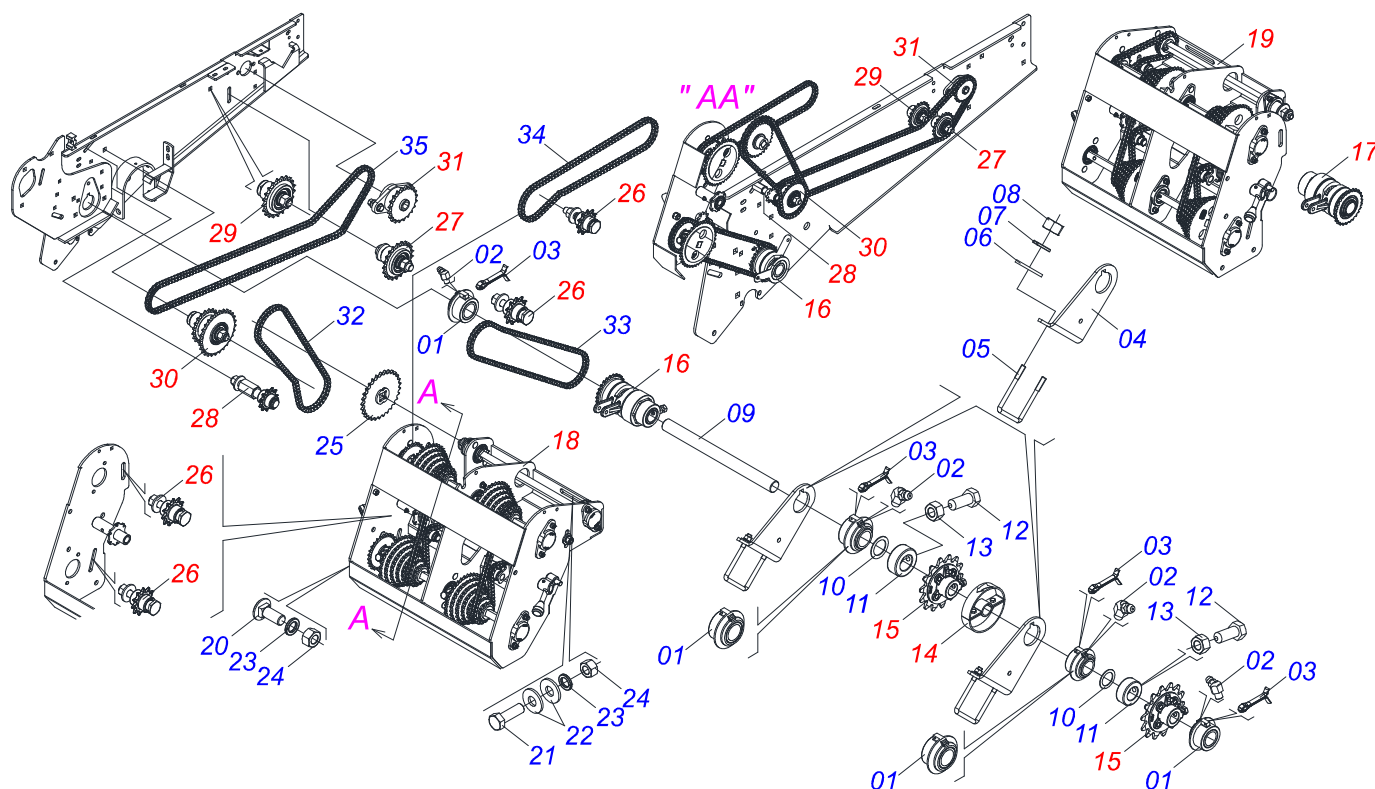


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2" NUT		08
09	0571014442	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0501052560	MOTOR AXLE SIGNAL	91	02
15	0511051434	TRANSMISSION ACTUATOR	92	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	93	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	94	01
18	0521043316	RIGHT GEAR BOX ASSY	95	01
19	0521043317	LEFT GEAR BOX ASSY	96	01
20	0501011600	1/2" X 1-1/4" BOLT		06
21	0503010920	1/2" X 1.1/2" BOLT		04
22	0511017302	FLAT WASHER		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2" NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	106	04
27	0521055217	LOWER CURRENT STRETCH	107	02
28	0501058254	UPPER SEED CHAIN TENSIONER	108	02
29	0521055216	BEARING WITH GEAR	109	02
30	0521055218	BEARING GEAR WITH DOUBLE	110	02
31	0521055214	BEARING GEAR WITH	111	02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

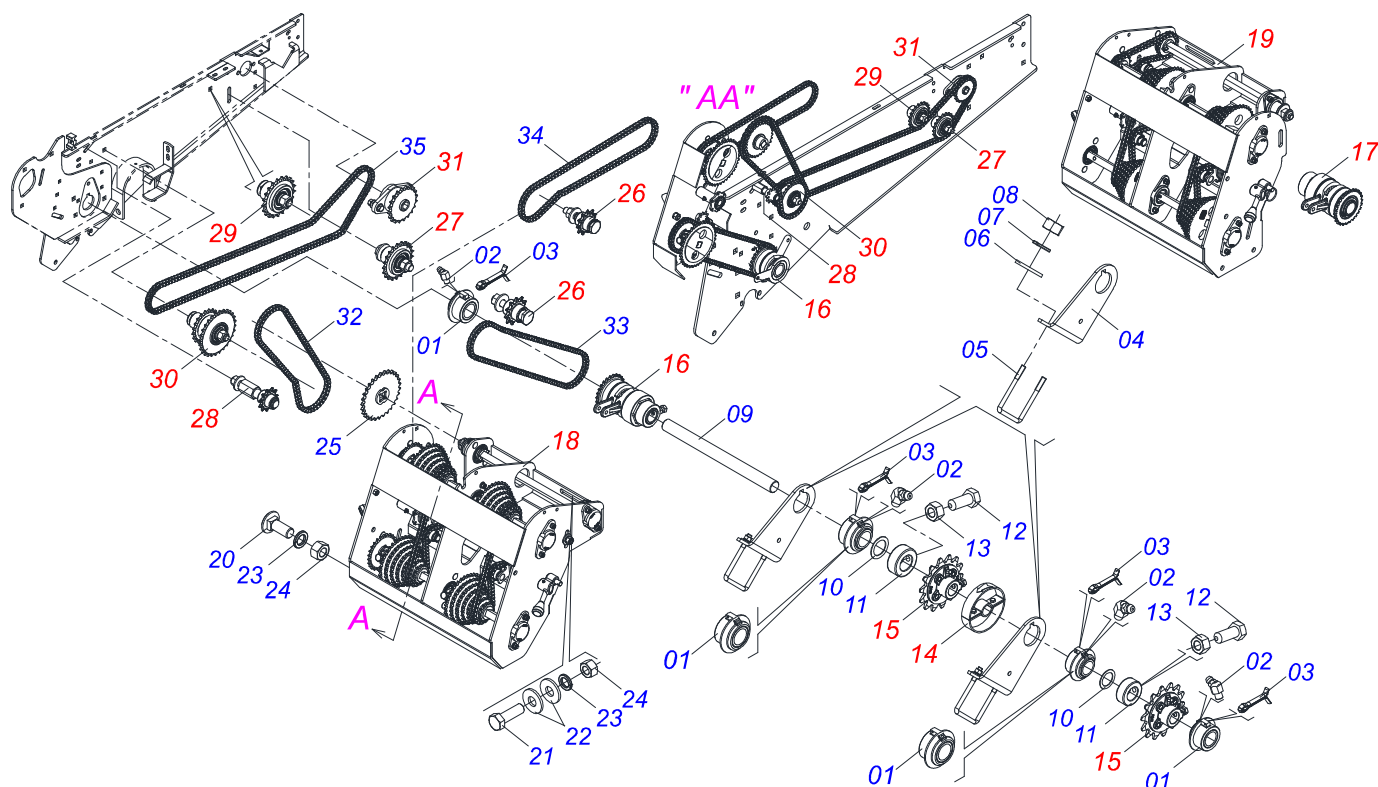


Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2" NUT		08
09	0571014442	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0501052560	MOTOR AXLE SIGNAL	91	02
15	0511051434	TRANSMISSION ACTUATOR	92	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	93	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	94	01
18	0521043316	RIGHT GEAR BOX ASSY	95	01
19	0521043317	LEFT GEAR BOX ASSY	96	01
20	0501010243	1/2" X 1-1/2" BOLT		06
21	0503010920	1/2" X 1.1/2" BOLT		04
22	0511017302	FLAT WASHER		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2" NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	106	04
27	0521055217	LOWER CURRENT STRETCH	107	02
28	0501058254	UPPER SEED CHAIN TENSIONER	108	02
29	0521055216	BEARING WITH GEAR	109	02
30	0521055218	BEARING GEAR WITH DOUBLE	110	02
31	0521055214	BEARING GEAR WITH	111	02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

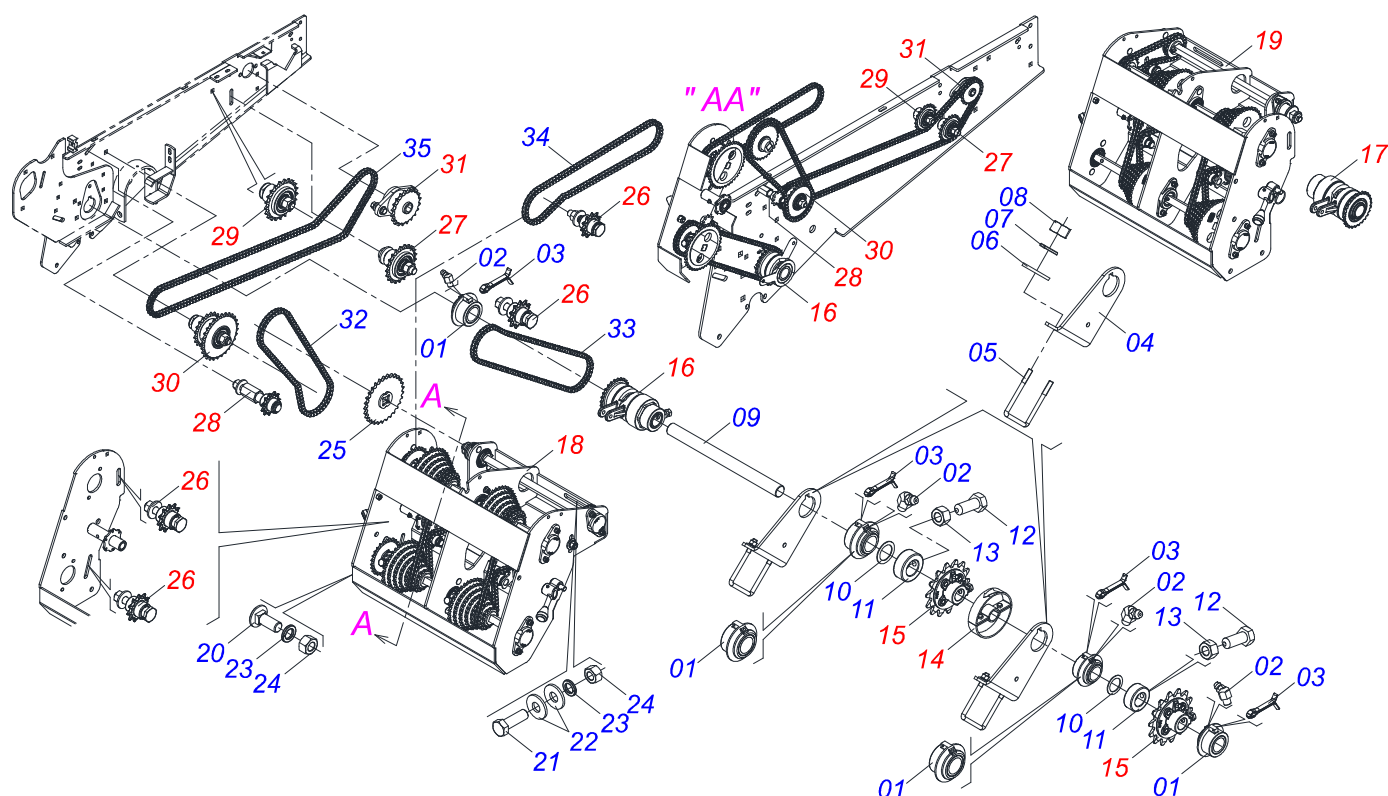

Item	Code	Description	See page	QT
01	0501110639	BEARING		08
02	0503011099	GREASE FITTING		08
03	0503010300	5/32" X 1" COTTERPIN		08
04	0551019114	MOTOR BEARING AXLE SUPPORT		04
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		04
06	0511017302	FLAT WASHER		08
07	0503010019	1/2" SPRING WASHER		08
08	0503010060	1/2" NUT		08
09	0571017078	MOTOR SHAFT		02
10	0501018466	FLAT WASHER		04
11	0511015961	LOCK BUSHING		04
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		04
13	0503010060	1/2" NUT		04
14	0501052560	MOTOR AXLE SIGNAL	91	02
15	0511051434	TRANSMISSION ACTUATOR	92	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	93	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	94	01
18	0521043316	RIGHT GEAR BOX ASSY	95	01
19	0521043317	LEFT GEAR BOX ASSY	96	01
20	0501010243	1/2" X 1-1/2" BOLT		06
21	0503010920	1/2" X 1.1/2" BOLT		04
22	0511017302	FLAT WASHER		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2" NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	106	04
27	0521055217	LOWER CURRENT STRETCH	107	02
28	0501058254	UPPER SEED CHAIN TENSIONER	108	02
29	0521055216	BEARING WITH GEAR	109	02
30	0521055218	BEARING GEAR WITH DOUBLE	110	02
31	0521055214	BEARING GEAR WITH	111	02

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

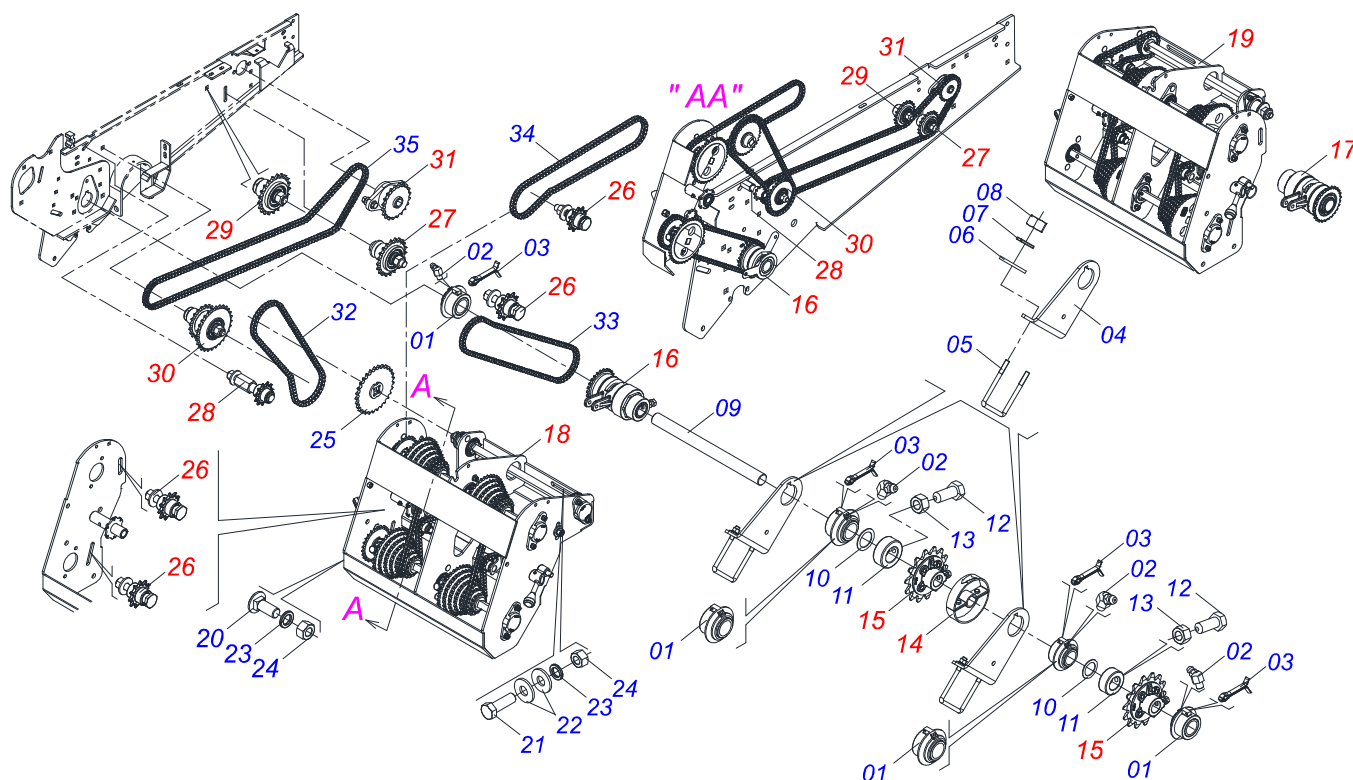


Item	Code	Description	See page	QT
01	0501110639	BEARING		10
02	0503011099	GREASE FITTING		10
03	0503010300	5/32" X 1" COTTERPIN		10
04	0551019114	MOTOR BEARING AXLE SUPPORT		06
05	0521014021	1/2" X 4.5" X 5.4" FASTENER		06
06	0511017302	FLAT WASHER		12
07	0503010019	1/2" SPRING WASHER		12
08	0503010060	1/2" NUT		12
09	0581014383	3387 MOTOR SHAFT PST TRIO/F 22 E 450/15 E 760		02
10	0501018466	FLAT WASHER		06
11	0511015961	LOCK BUSHING		06
12	0503030679	BOLT 1/2 UNC X 1.1/4 CSPC G.5 ZN		06
13	0503010060	1/2" NUT		06
14	0501052560	MOTOR AXLE SIGNAL	91	02
15	0511051434	TRANSMISSION ACTUATOR	92	04
16	0511047069	RIGHT SIDE TRANSMISSION ACTUATOR	93	01
17	0511047070	LEFT SIDE TRANSMISSION ACTUATOR	94	01
18	0521043316	RIGHT GEAR BOX ASSY	95	01
19	0521043317	LEFT GEAR BOX ASSY	96	01
20	0501010243	1/2" X 1-1/2" BOLT		06
21	0503010920	1/2" X 1.1/2" BOLT		04
22	0511017302	FLAT WASHER		08
23	0503010019	1/2" SPRING WASHER		10
24	0503010060	1/2" NUT		10
25	0521064448	GEAR		02
26	0511059261	CHAIN TENSIONER	106	04
27	0521055217	LOWER CURRENT STRETCH	107	02
28	0501058254	UPPER SEED CHAIN TENSIONER	108	02
29	0521055216	BEARING WITH GEAR	109	02
30	0521055218	BEARING GEAR WITH DOUBLE	110	02
31	0521055214	BEARING GEAR WITH	111	02


TRANSMISSION ASSEMBLY 10985

0521051048

Item	Code	Description	See page	QT
32	0503012204	40-1 CHAIN X 82 LINK + RED		02
33	0503012707	40-1 CHAIN X 96 LINK + REDUCTION		02
34	0503013215	40-1 CHAIN X 89 LINK + MENDING		02
35	0503014907	40-1 X 151 CHAIN LINK + MENDING		02

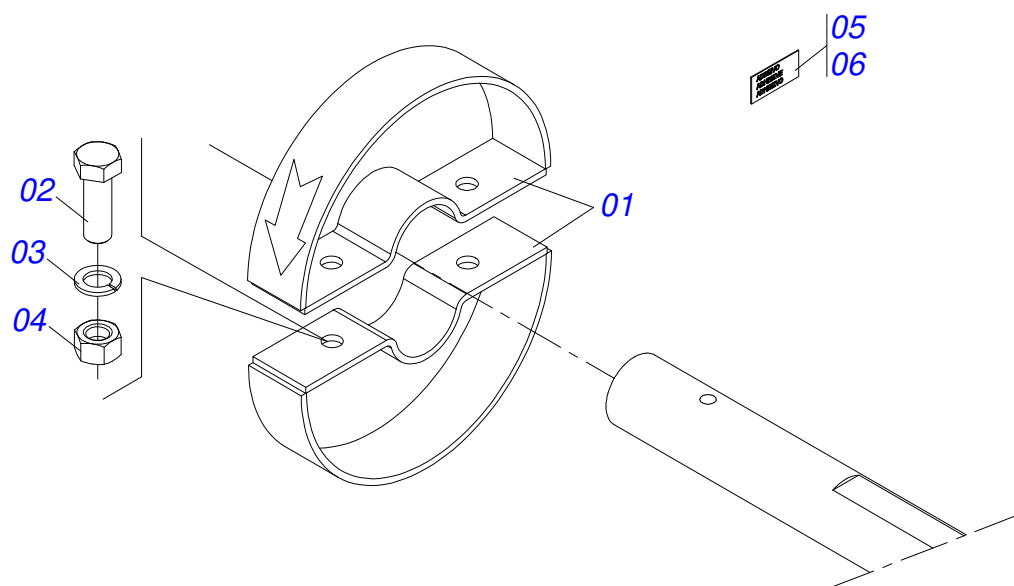


Item	Code	Description	See page	QT
01	0503031825	AXLE MOTOR SLOW-MOVING		02
02	0503010240	BOLT		02
03	0503010179	LOCK WASHER		02
04	0503010337	5/16" NUT		02
05	0503031584	ADHESIVE LABEL		01
06	0503031585	ADHESIVE LABEL		01

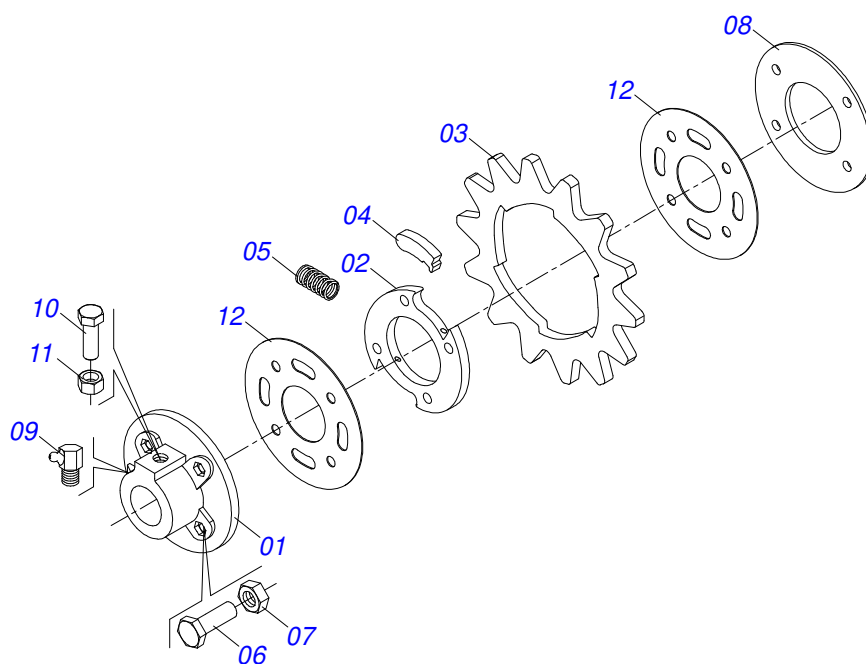

Item	Code	Description	See page	QT
01	0502012696	RIGHT RATCHET HANDLE BODY		01
02	0571010151	GRAGGER RATCHET BODY		01
03	0561019923	RATCHET PULLER GEAR		01
04	0551019100	LOCK RATCHET		02
05	0503030051	0.2" X 1" X 0.1" COMPRESSION SPRING		02
06	0503010365	NUT		04
07	0503013816	5/16" LOCKNUT		04
08	0571010164	SEAT SIDE OF RATCHET		01
09	0503010004	1890 GREASE FITTING		01
10	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
11	0503010060	1/2" NUT		01
12	0571010763	FLANGE WASHER		02

RIGHT SIDE TRANSMISSION ACTUATOR


0511047069

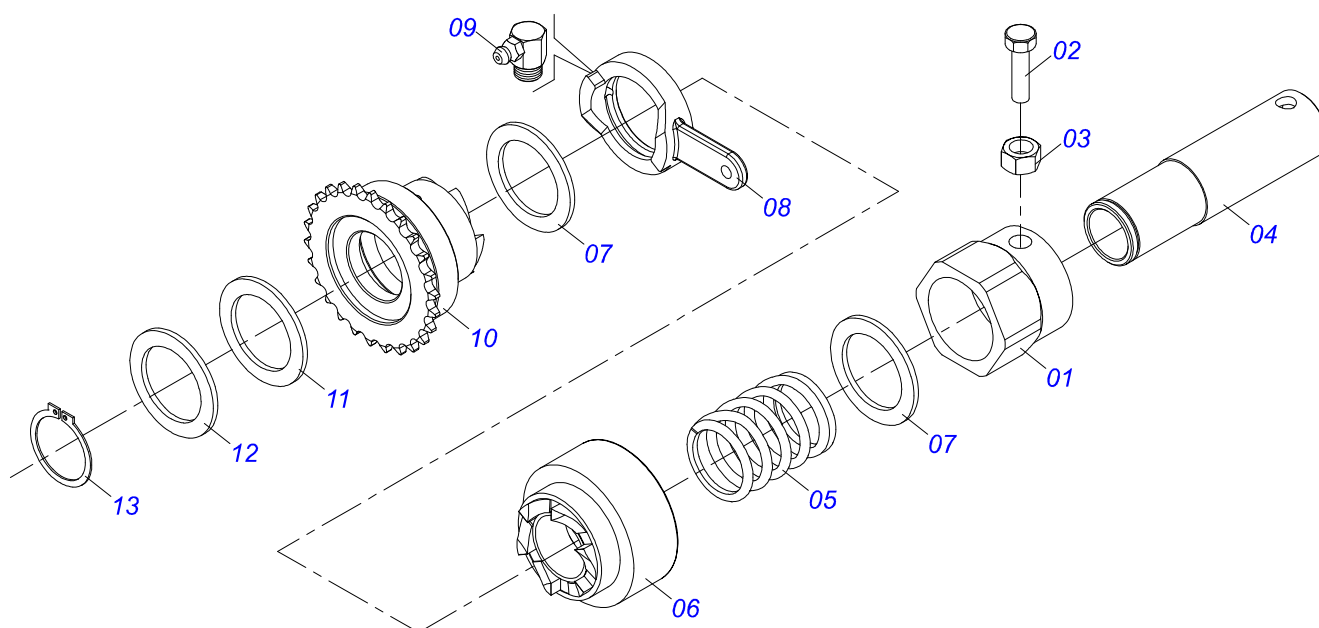

Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502012009	DRIVING AXLE RIGHT FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010710	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012539	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

LEFT SIDE TRANSMISSION ACTUATOR


0511047070

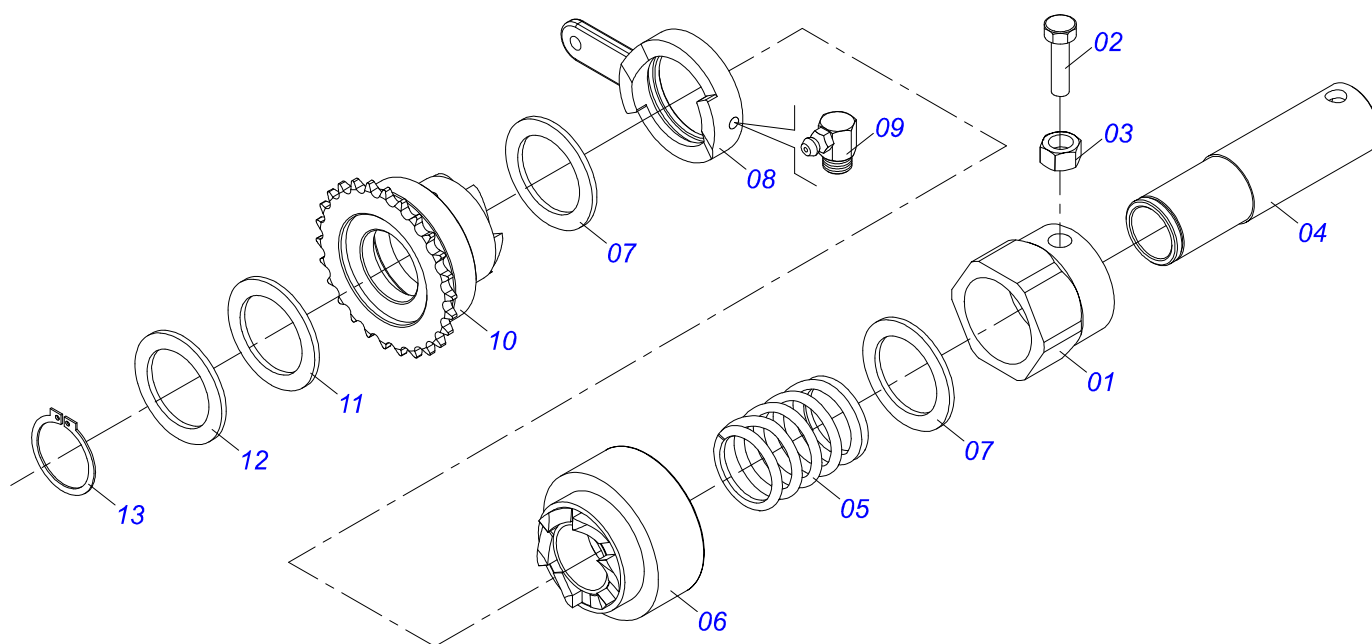

Item	Code	Description	See page	QT
01	0502011996	SLEEVE FIXER		01
02	0503030678	BOLT 1/2 UNC X 1.1/2 CSPC G.5 ZN		01
03	0503010060	1/2" NUT		01
04	0521017590	GUIDE AXLE		01
05	0503030553	2.3"X 2.5"X 0.2"COMPRESSION SPRING		01
06	0502011995	LH DRIVING AXLE FOLLOWER		01
07	0501019734	FLAT WASHER		02
08	0502010720	RIGHT CAM, SMALLER		02
09	0503010003	1845 GREASE FITTING		02
10	0502012540	26Z P12,7 GEAR		01
11	0501019735	FLAT WASHER		01
12	0521017593	FLAT WASHER		01
13	0503010542	501045 CLAMPING RING (FOR AXLE)		01

RIGHT GEAR BOX ASSY


0521043316

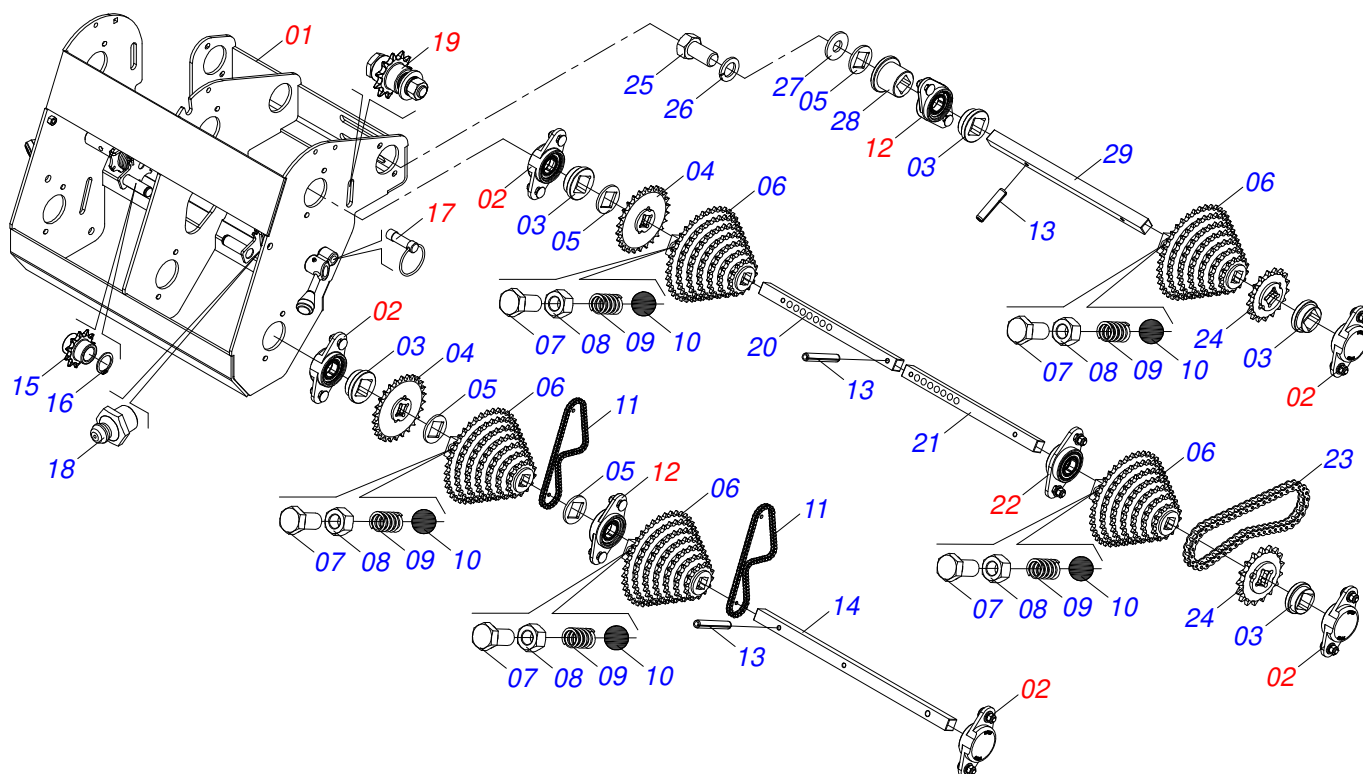


Item	Code	Description	See page	QT
01	0501058212	SEMI MOUNTED RIGHT CHANGE	97	01
02	0511059266	CLOSED BEARING	99	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN AXLE CONE		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2" NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	101	02
13	0503010292	0.2" X 1.6" SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	103	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	104	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	105	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8" SPRING WASHER		01
27	0501010984	FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

LEFT GEAR BOX ASSY


0521043317

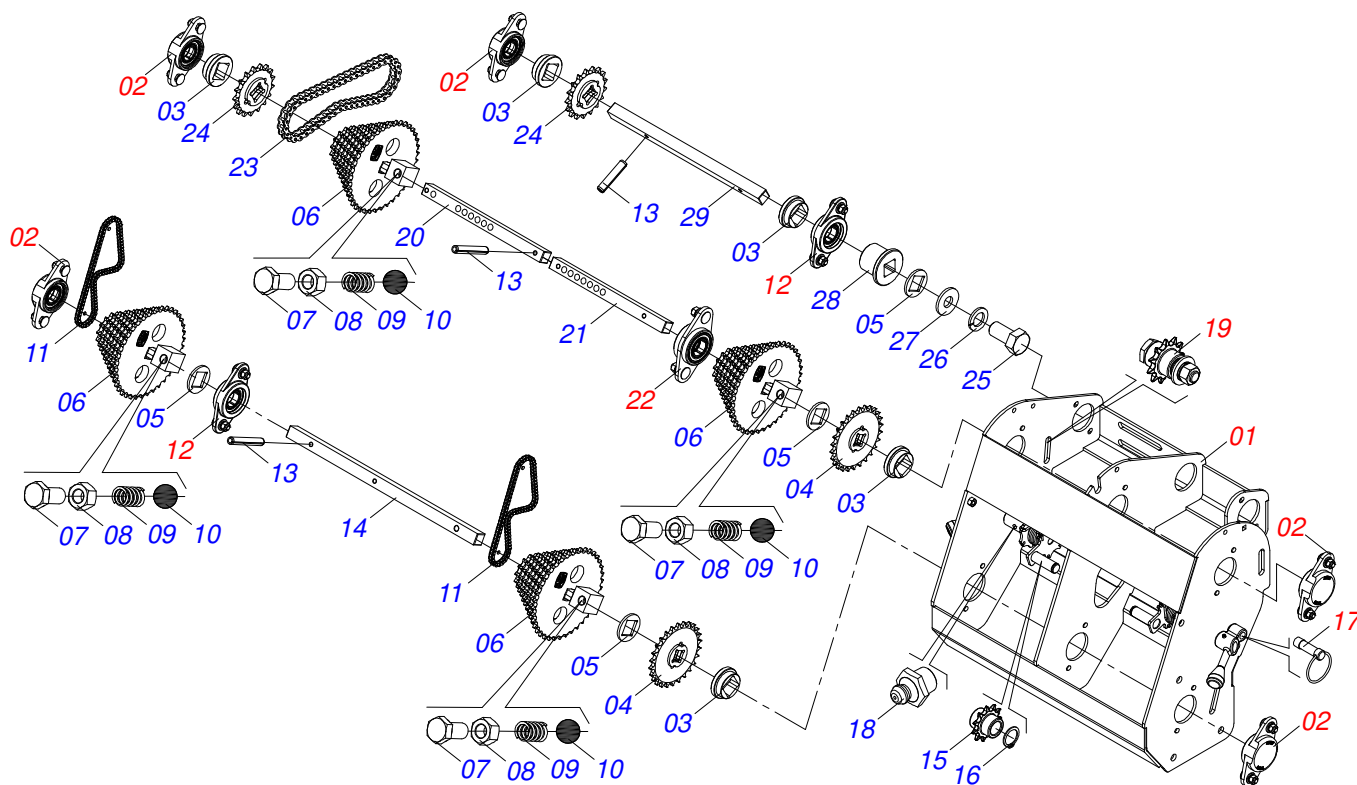


Item	Code	Description	See page	QT
01	0501058213	LH GEAR BOX	98	01
02	0511059266	CLOSED BEARING	99	05
03	0503030303	SUPPORT WASHER		05
04	0511067501	26Z GEAR		02
05	0521018630	1.4" X SQUARE 0.8" WASHER		04
06	0511060396	DRIVE/DRIVEN AXLE CONE		04
07	0503010834	1/2 X 1 BOLT		04
08	0503010060	1/2" NUT		04
09	0503031512	0.4" X 0.1" X 2" X 0.6" SPRING		04
10	0503012389	1/2 BALL		04
11	0503012204	40-1 CHAIN X 82 LINK + RED		02
12	0501056443	GEAR HOUSING BEARING	101	02
13	0503010292	0.2" X 1.6" SPRING PIN		08
14	0551018209	DRIVING AXLE		01
15	0503031805	11Z 1/2" GEAR		04
16	0503010302	501019 SEAL RING		04
17	0501048790	AXLE WITH RING	103	02
18	0503010002	1800 GREASE FITTING		02
19	0501054655	CHAIN TENSIONER ASSY	104	01
20	0521018259	DRIVEN AXLE		01
21	0551018210	DRIVEN AXLE		01
22	0501056447	CENTRAL DOUBLE GEAR HOUSING BEARING	105	01
23	0503012713	40-1 CHAIN X 45 LINK + MEN		01
24	0511061830	17Z P 0.5" GEAR SQUARE HOL		02
25	0503010256	3/8" X 3/4" BOLT		01
26	0503010025	3/8" SPRING WASHER		01
27	0501010984	FLAT WASHER		01
28	0503030275	AGRICULTURAL BEARING		01
29	0551018211	INTERM SHAFT		01

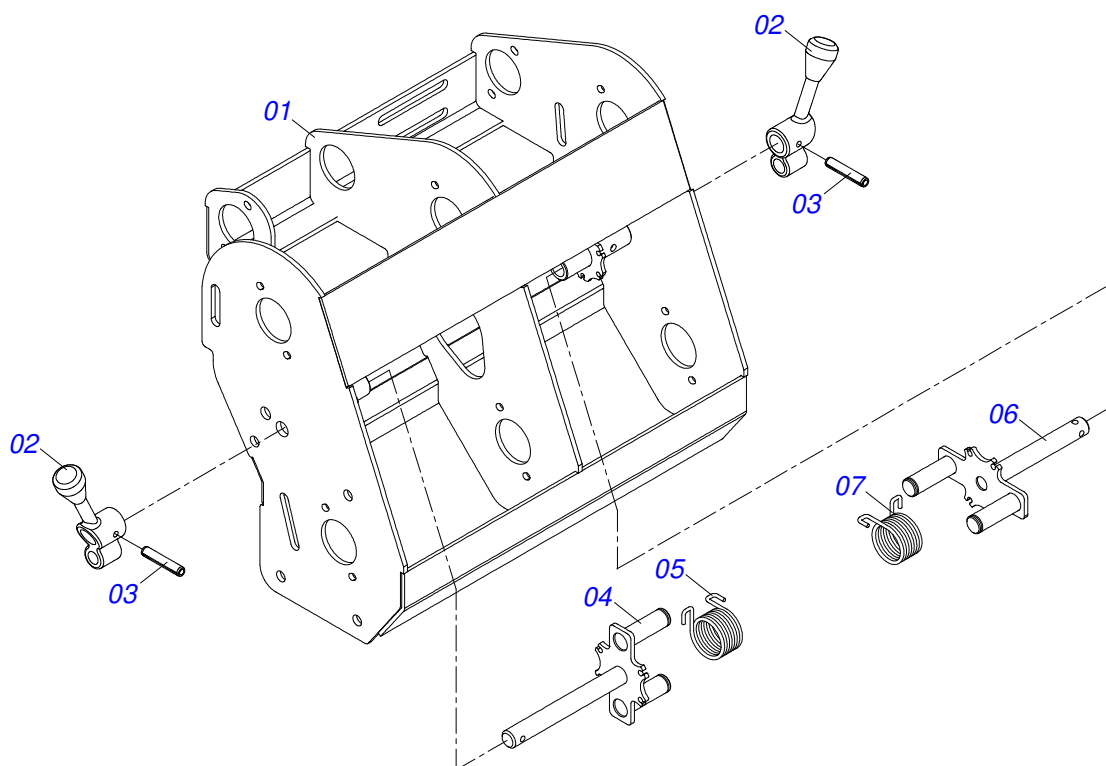

Item	Code	Description	See page	QT
01	0511069565	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

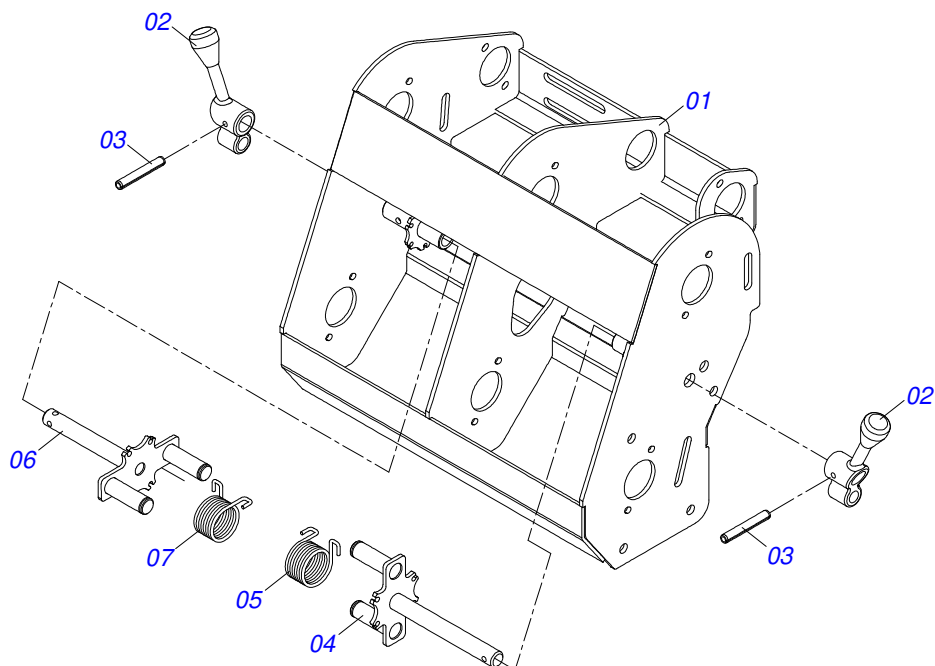


Item	Code	Description	See page	QT
01	0511069566	LEFT GEAR BOX		01
02	0502011758	REAR TENSIONER LEVER		02
03	0503010292	0.2" X 1.6" SPRING PIN		02
04	0511061794	CHAIN TENSIONER		01
05	0503031367	SPRING		01
06	0511060392	CHAIN TENSIONER		01
07	0503031366	RIGHT TWISTED SPRING RECAMBIO		01

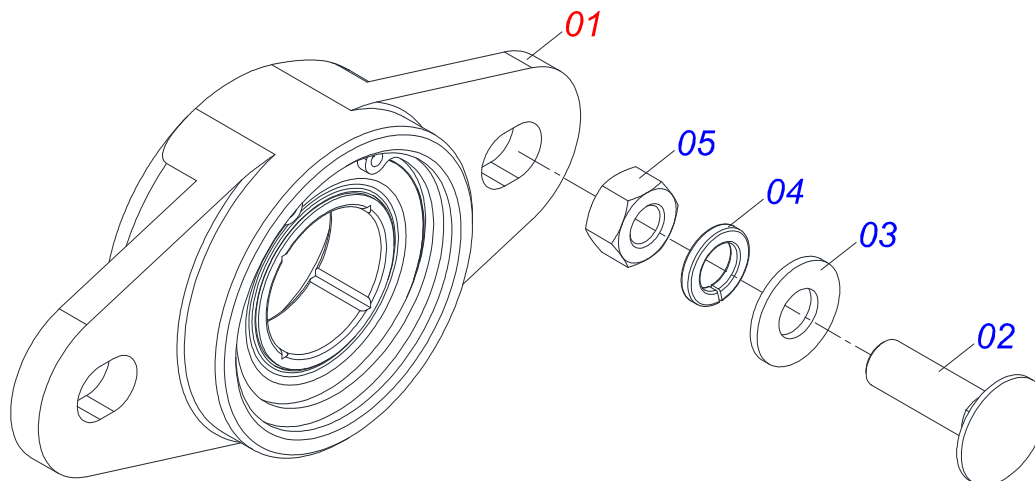


Item	Code	Description	See page	QT
01	0501056271	GEARBOX CLOSED BEARING	100	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

GEARBOX CLOSED BEARING


0501056271

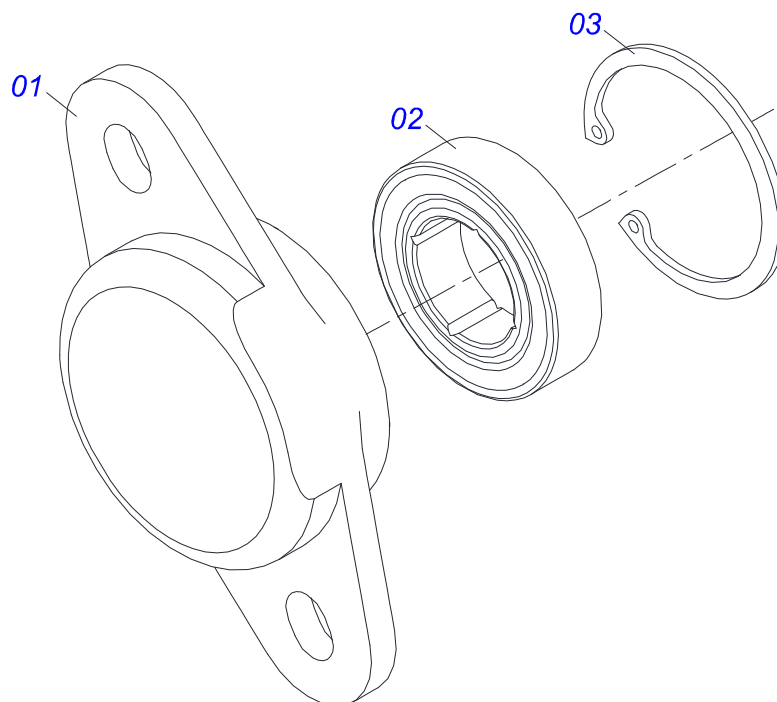


Item	Code	Description	See page	QT
01	0502012310	GEAR BOX CLOSE BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

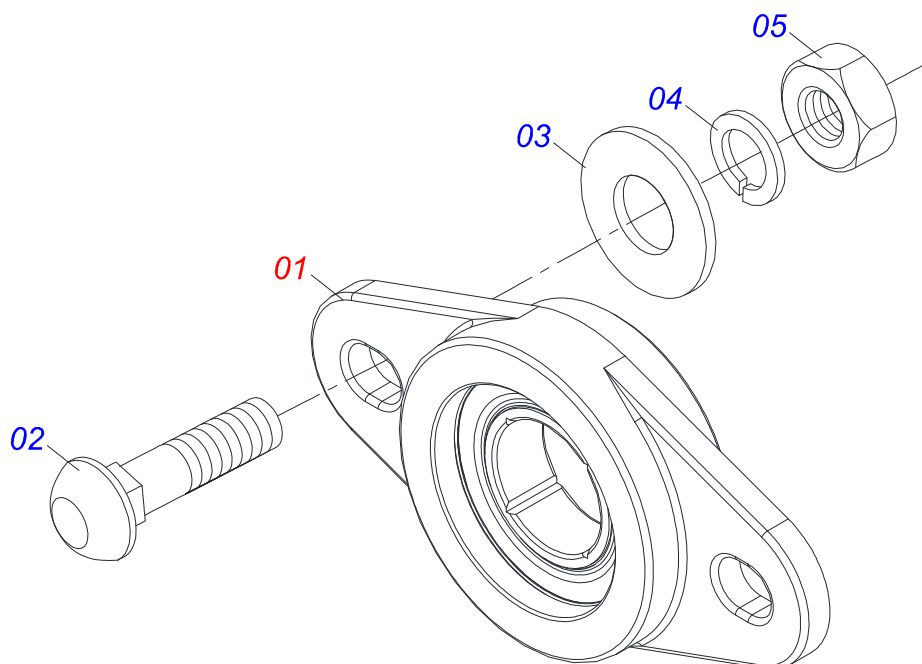

Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLING	102	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

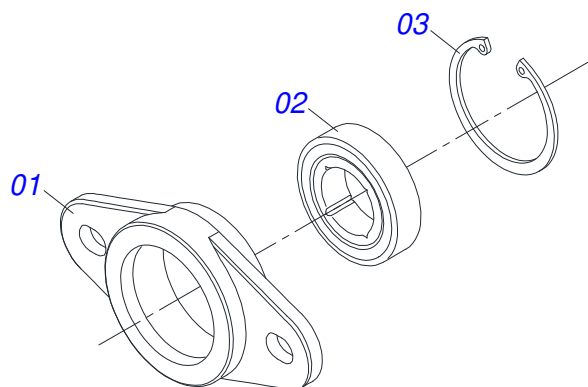


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

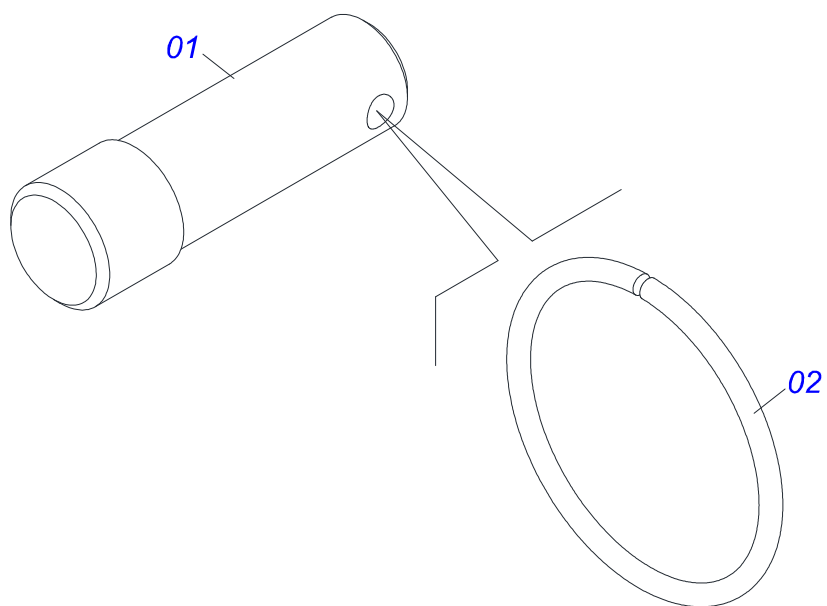


Item	Code	Description	See page	QT
01	0521012476	GEAR BOX LEVER AXLE		01
02	0503031369	LINK		01

CHAIN TENSIONER ASSY


0501054655

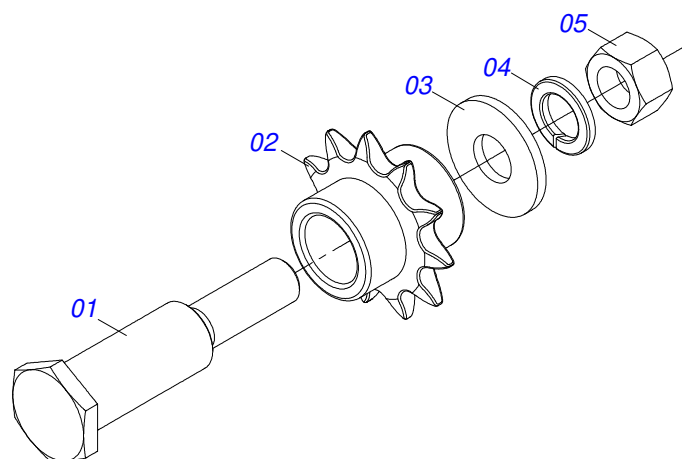


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503031805	11Z 1/2" GEAR		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

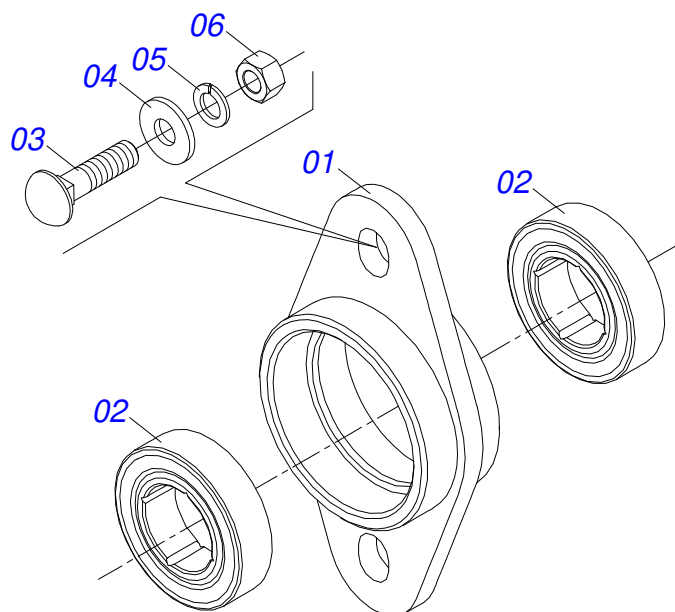


Item	Code	Description	See page	QT
01	0502011978	HOUSING CENTRAL BEARING		01
02	0503013462	BEARING WITH BALL BEARING		02
03	0503011953	5/16" X 1" BOLT		02
04	0501010694	FLAT WASHER		02
05	0503010179	LOCK WASHER		02
06	0503010337	5/16" NUT		02

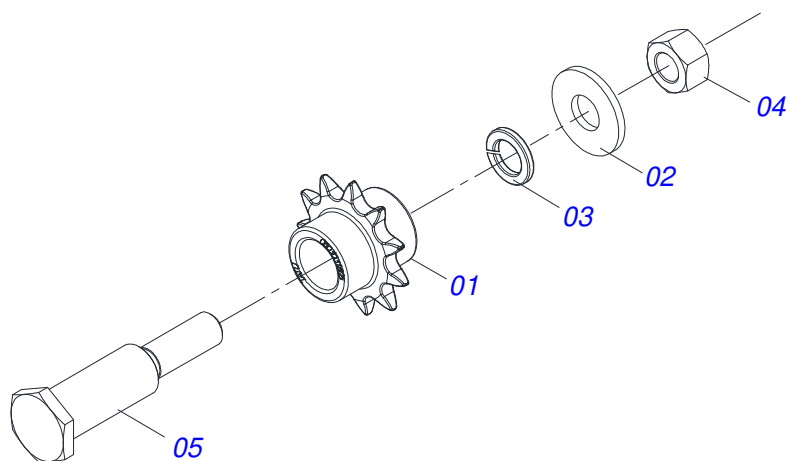


Item	Code	Description	See page	QT
01	0503031805	1 1/2" GEAR		01
02	0511017302	FLAT WASHER		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0531019479	AXLE CHAIN GEAR		01

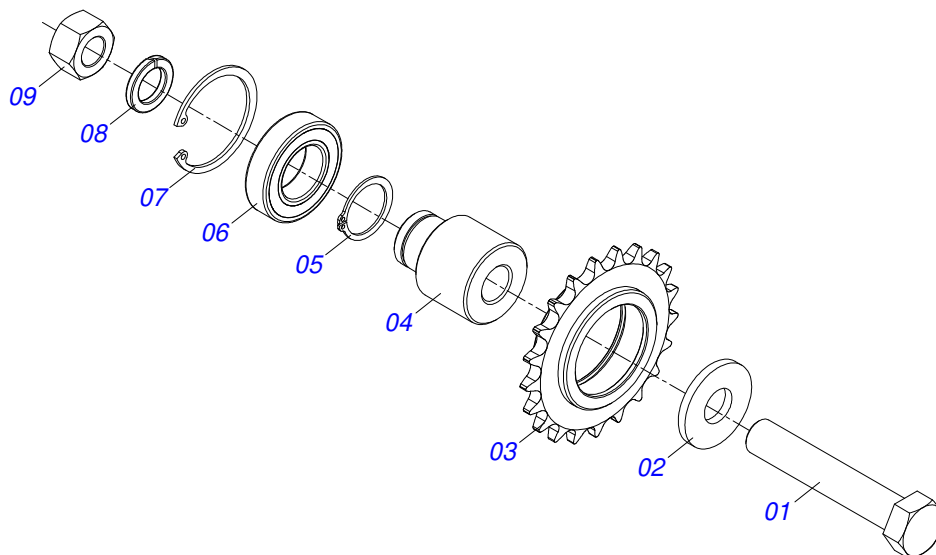


Item	Code	Description	See page	QT
01	0503010762	SCREW 5/8 UNC X 3.1/2 CS G.5 ZN		01
02	0501012140	FLAT WASHER		01
03	0521069698	GEAR 21Z P 1/2		01
04	0531017086	50 AXLETIGHTENER		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503019356	BEARING 6005 2RS1		01
07	0503011105	SEAL RING		01
08	0503010027	5/8" SPRING WASHER		01
09	0503010013	5/8" NUT		01

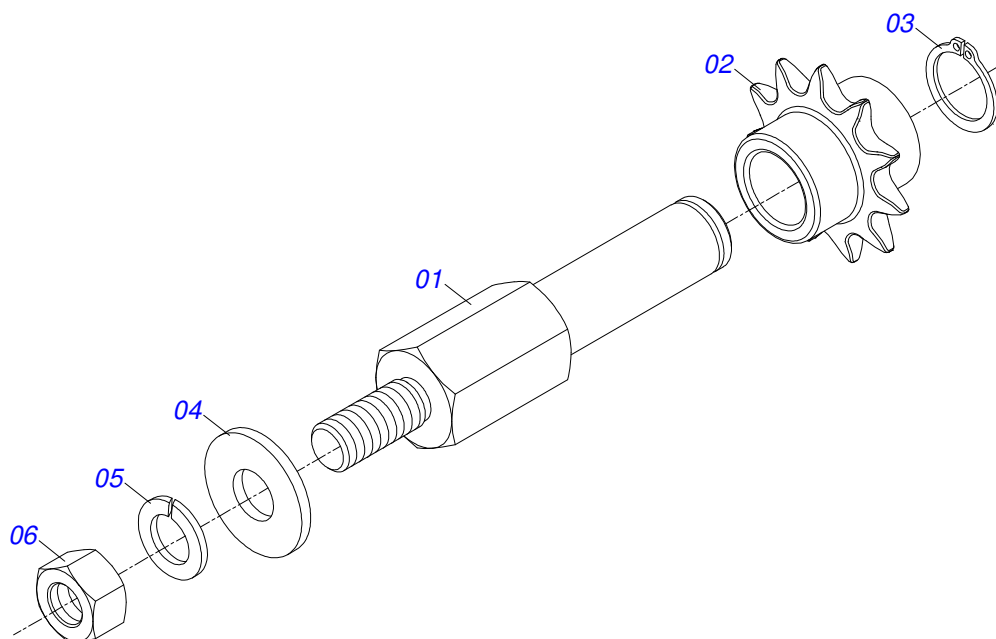

Item	Code	Description	See page	QT
01	0521018933	FERT CHAIN TENSIONER AXLE		01
02	0503031805	11Z 1/2" GEAR		01
03	0503010302	501019 SEAL RING		01
04	0511017302	FLAT WASHER		01
05	0503010019	1/2" SPRING WASHER		01
06	0503010060	1/2" NUT		01

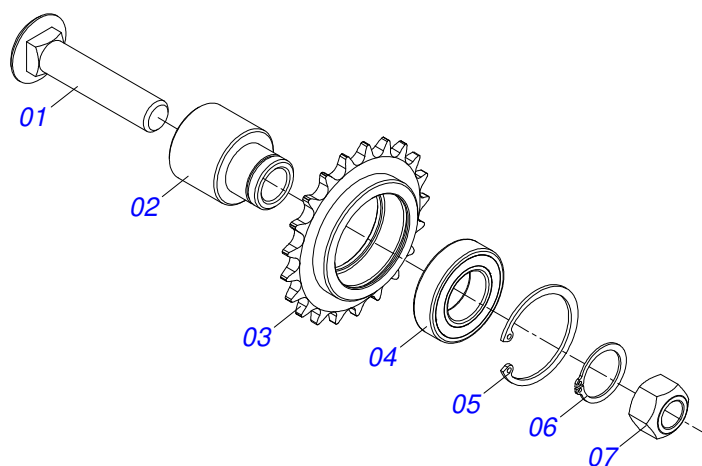


Item	Code	Description	See page	QT
01	0501011234	5/8" X 3" BOLT		01
02	0531017086	50 AXLETIGHTENER		01
03	0521069698	GEAR 21Z P 1/2		01
04	0503019356	BEARING 6005 2RS1		01
05	0503011105	SEAL RING		01
06	0503010406	501025 CLAMPING RING (FOR AXLE)		01
07	0503012412	5/8 UNC SELF LOCKING NUT		01

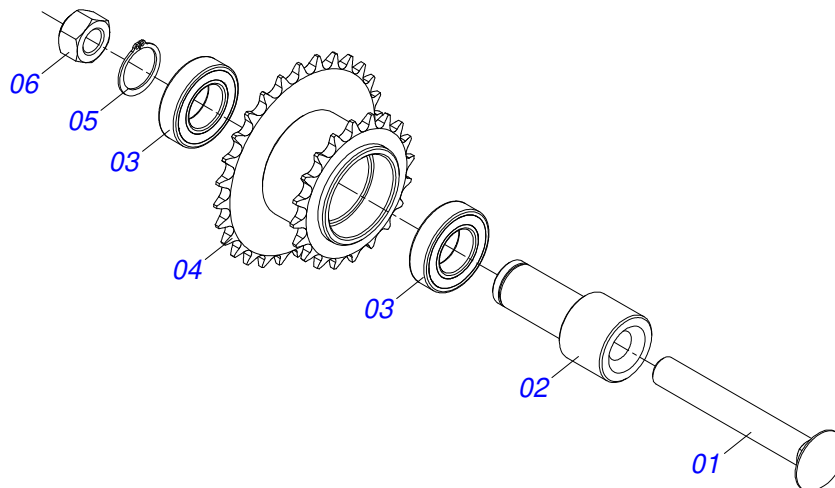


Item	Code	Description	See page	QT
01	0503016460	5/8" X 4.1/2" BOLT		01
02	0551019175	DOUBLE GEAR AXLE		01
03	0503019356	BEARING 6005 2RS1		02
04	0511069680	20Z X 28Z DOBLE GEAR		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		01
06	0503012412	5/8 UNC SELF LOCKING NUT		01

BEARING GEAR WITH


0521055214

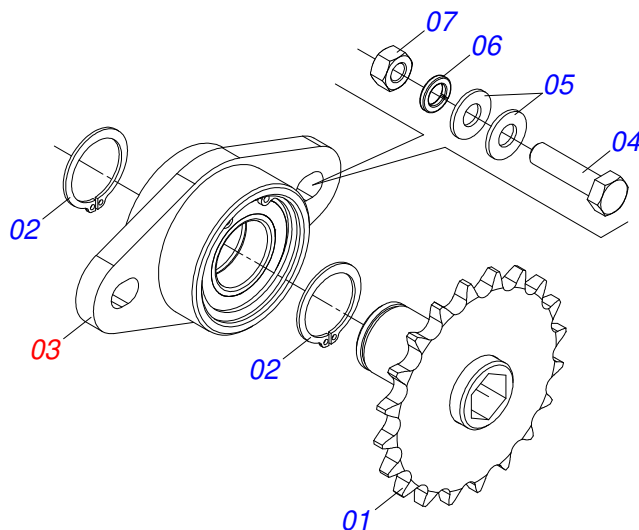


Item	Code	Description	See page	QT
01	0511063106	20Z AXLE BEARING DOBLE		01
02	0503010406	501025 CLAMPING RING (FOR AXLE)		02
03	0521055215	DOUBLE TRANSMISSION BEARING	112	01
04	0503010365	NUT		02
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

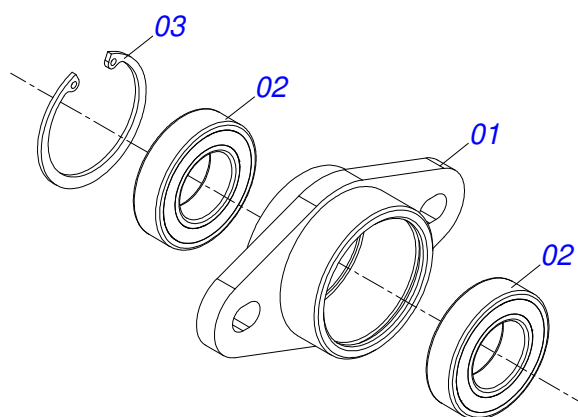


Item	Code	Description	See page	QT
01	0502011987	DOUBLE HOUSING BEARING		01
02	0503019356	BEARING 6005 2RS1		02
03	0503011105	SEAL RING		01

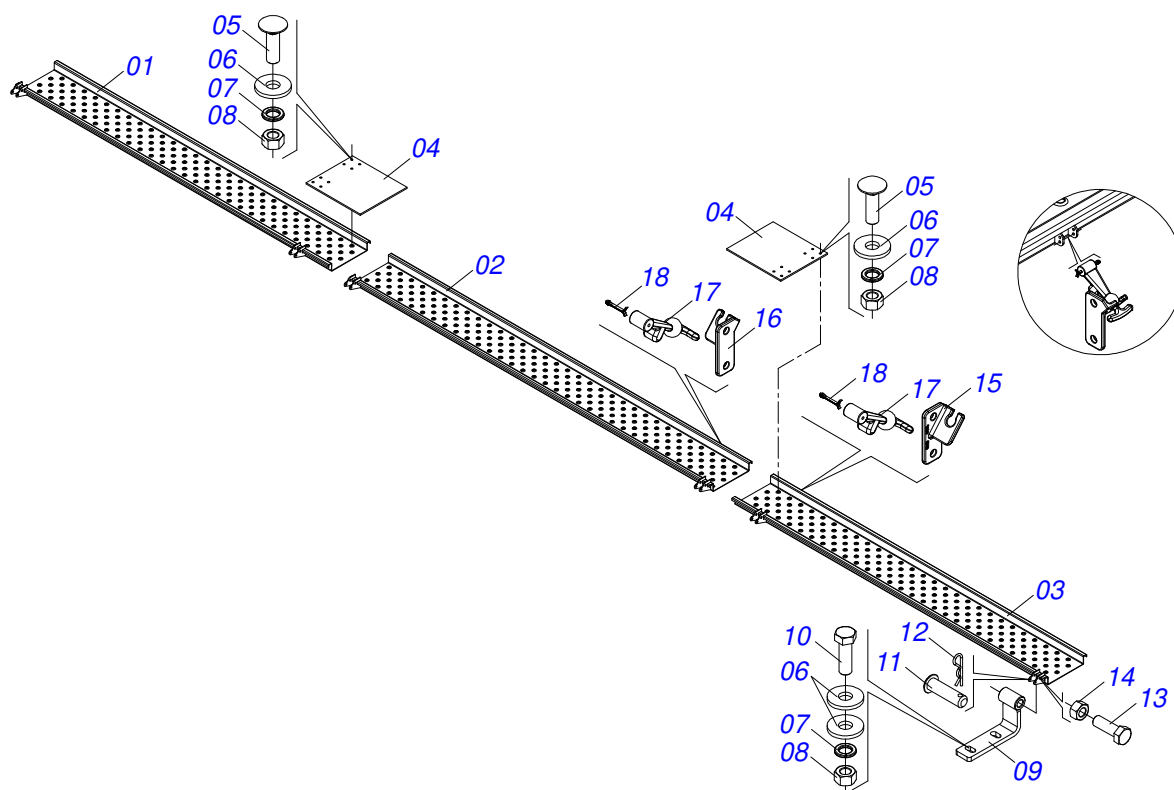


Item	Code	Description	See page	QT
01	0521068579	RIGHT PLATFORM		01
02	0521068597	CENTRAL PLATFORM		01
03	0521068587	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	FLAT WASHER		28
07	0503010025	3/8" SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

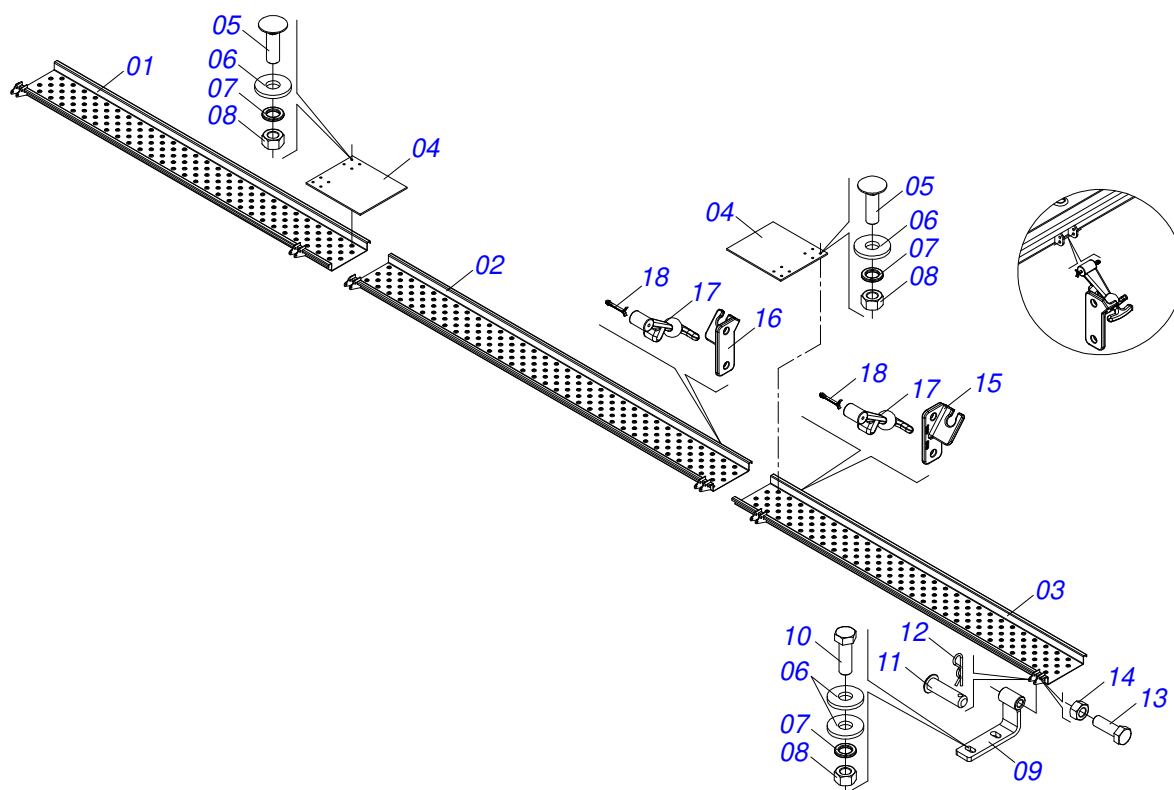


Item	Code	Description	See page	QT
01	0521068579	RIGHT PLATFORM		01
02	0521068596	CENTRAL PLATFORM		01
03	0521068587	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	FLAT WASHER		28
07	0503010025	3/8" SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

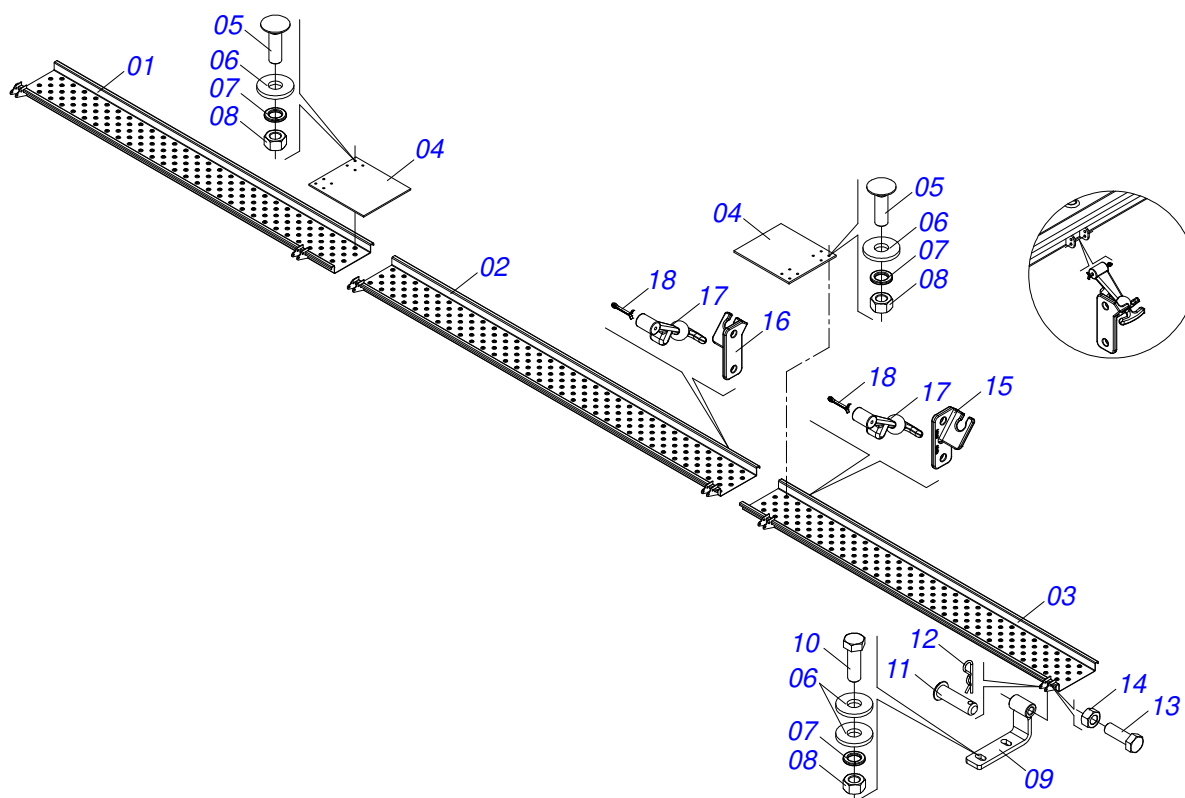


Item	Code	Description	See page	QT
01	0521068579	RIGHT PLATFORM	01	
02	0521068594	CENTRAL PLATFORM	01	
03	0521068587	LEFT PLATFORM	01	
04	0581015863	PLATFORM ENHANCEMENT PROTECTION	02	
05	0501010942	3/8" X 1-1/4" BOLT	04	
06	0501010984	FLAT WASHER	28	
07	0503010025	3/8" SPRING WASHER	16	
08	0503010026	3/8" NUT	16	
09	0521068316	JOINT SUPPORT	06	
10	0503010849	3/8" X 1-1/2" BOLT	12	
11	0521010549	COUPLING SHAFT	06	
12	0503030168	HITCH PIN CLIP	06	
13	0503010741	1/2" X 2-3/4" BOLT	06	
14	0503011336	1/2" HEX SELF ADJUSTING NUT	06	
15	0502012740	PLATFORM RIGHT FIXER SUPPORT	01	
16	0502012739	PLATFORM LEFT FIXER SUPPORT	02	
17	0503011333	COVER FIXER	03	
18	0503010274	5/32"X 2" COTTERPIN	03	

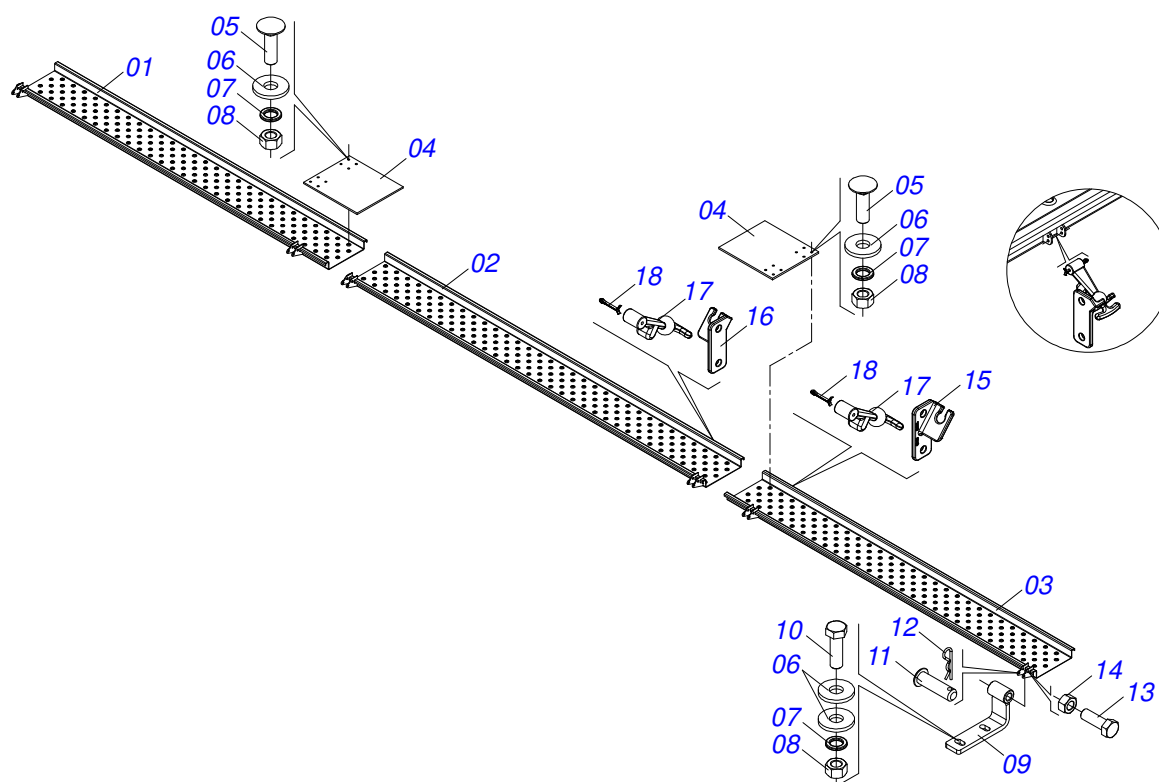


Item	Code	Description	See page	QT
01	0521068579	RIGHT PLATFORM		01
02	0521068313	PLATFORM CENTER		01
03	0521068587	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	FLAT WASHER		28
07	0503010025	3/8" SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

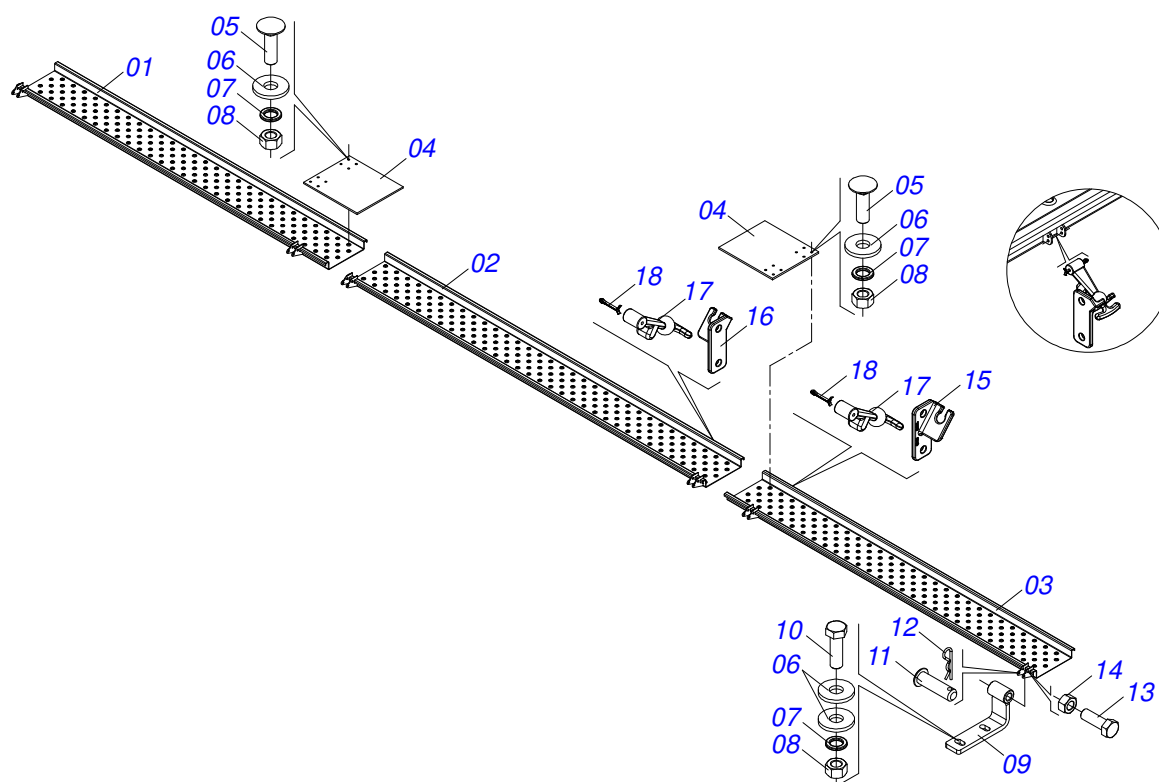


Item	Code	Description	See page	QT
01	0521068315	RIGHT PLATFORM		01
02	0521068594	CENTRAL PLATFORM		01
03	0521068314	LEFT PLATFORM		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	FLAT WASHER		28
07	0503010025	3/8" SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

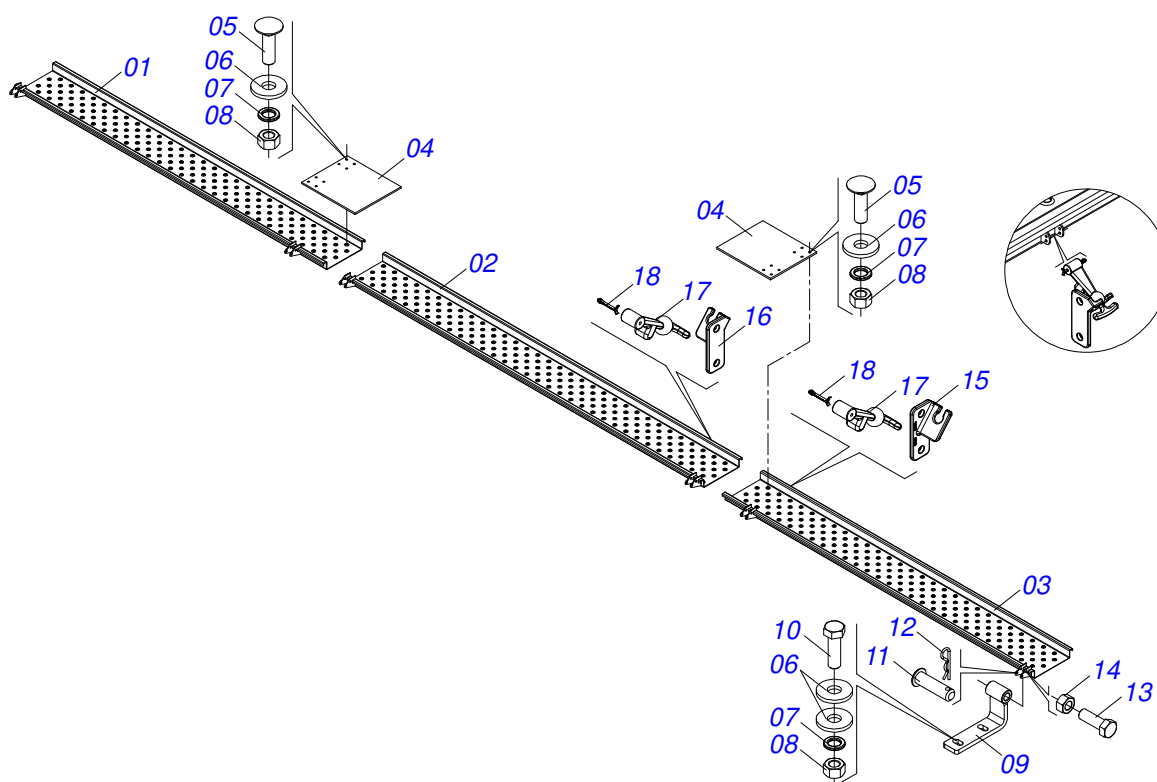


Item	Code	Description	See page	QT
01	0521068582	22 E 500 RH PLATFORM ASSY PST TRIO/FLEX		01
02	0521068313	PLATFORM CENTER		01
03	0521068590	LEFT PLATFORM 22 E 500		01
04	0581015863	PLATFORM ENHANCEMENT PROTECTION		02
05	0501010942	3/8" X 1-1/4" BOLT		04
06	0501010984	FLAT WASHER		28
07	0503010025	3/8" SPRING WASHER		16
08	0503010026	3/8" NUT		16
09	0521068316	JOINT SUPPORT		06
10	0503010849	3/8" X 1-1/2" BOLT		12
11	0521010549	COUPLING SHAFT		06
12	0503030168	HITCH PIN CLIP		06
13	0503010741	1/2" X 2-3/4" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0502012740	PLATFORM RIGHT FIXER SUPPORT		01
16	0502012739	PLATFORM LEFT FIXER SUPPORT		02
17	0503011333	COVER FIXER		03
18	0503010274	5/32"X 2" COTTERPIN		03

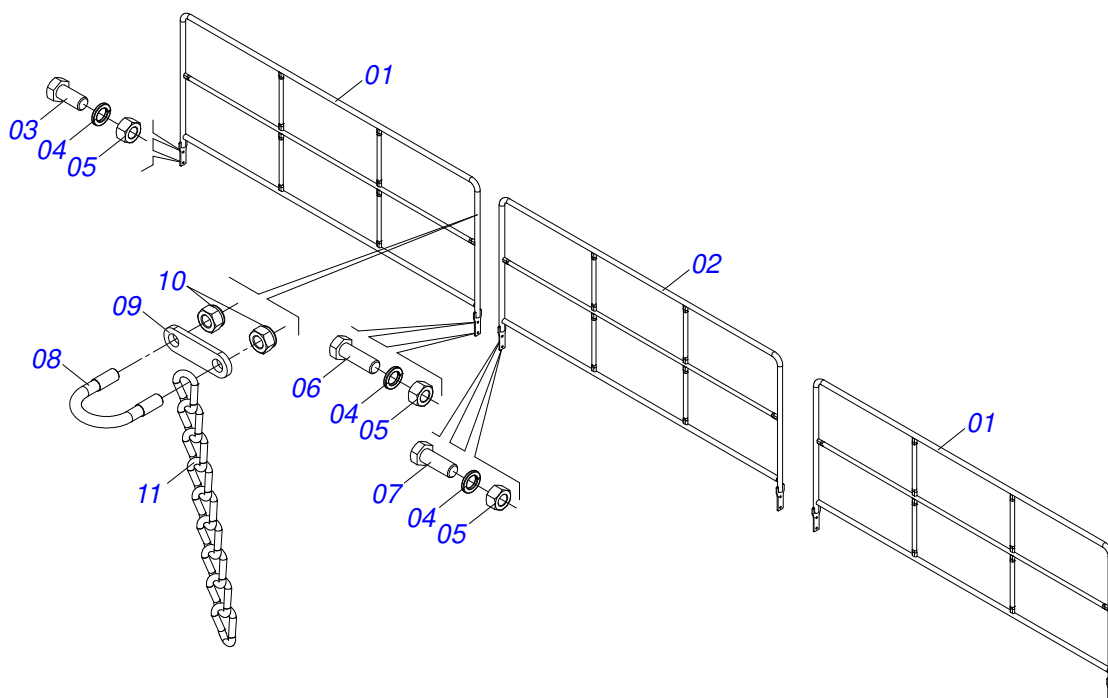


Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL		02
02	0521063875	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2" NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8" SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

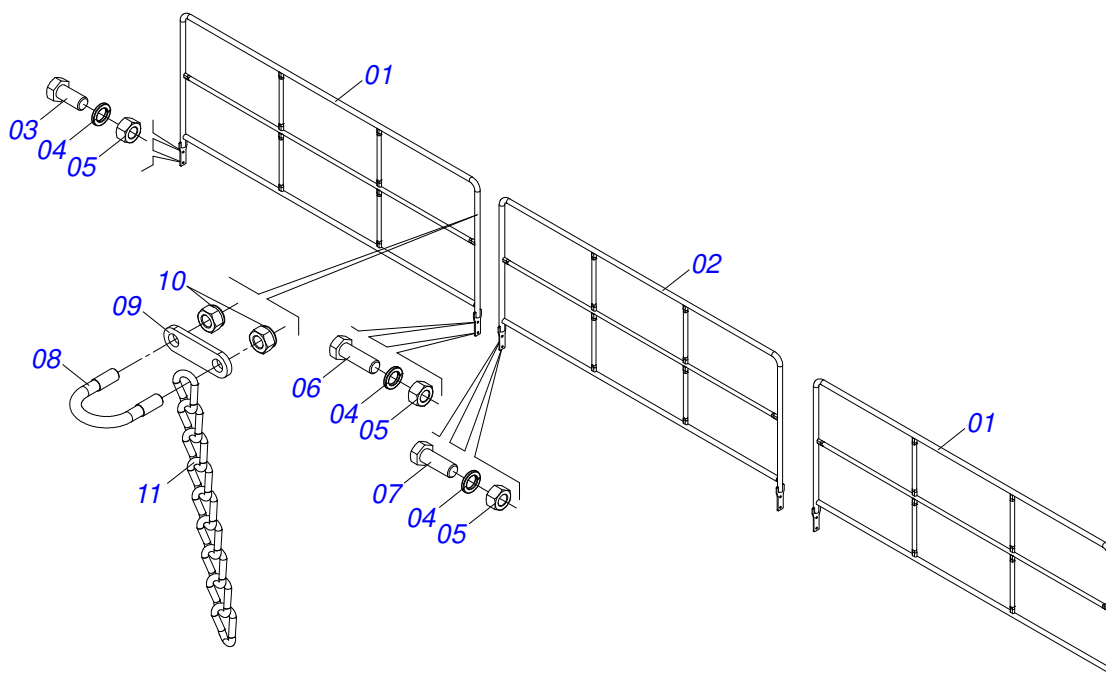


Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL		02
02	0521064018	CENTRAL HANDRAIL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2" NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8" SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

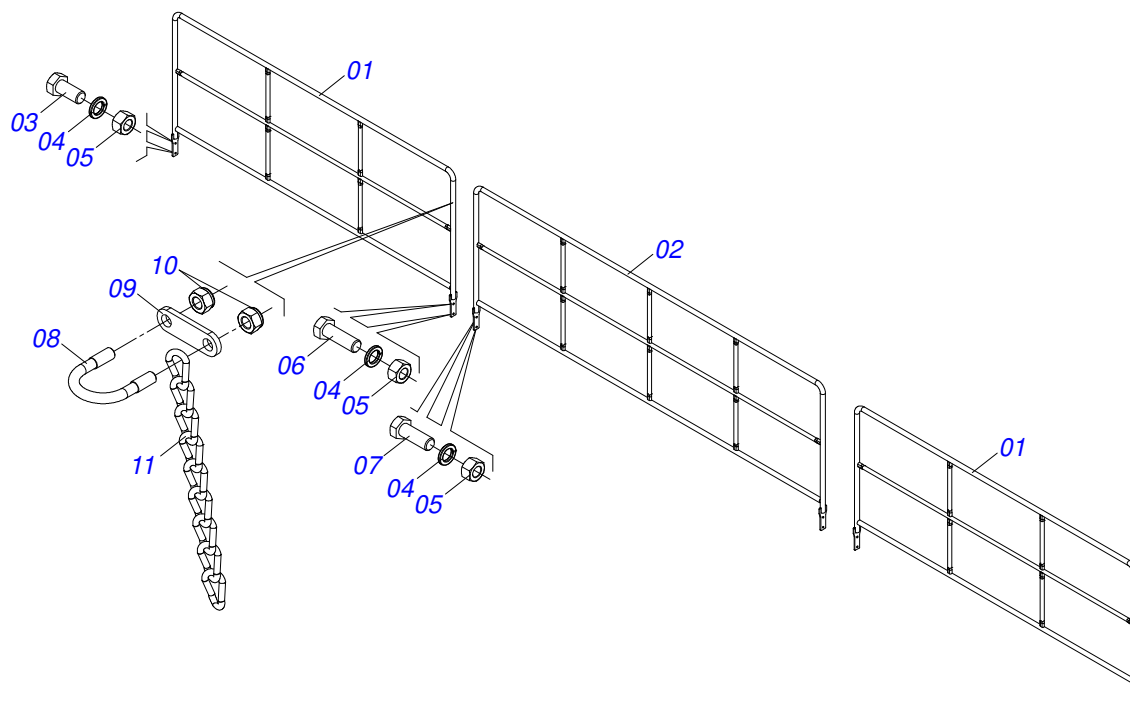


Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL		02
02	0521065205	HANDRAIL CENTRAL		01
03	0503010395	1/2" X 1-1/4" BOLT		04
04	0503010019	1/2" SPRING WASHER		12
05	0503010060	1/2" NUT		12
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		06
07	0503011082	C1/2" X 1.3/4" SCREW		02
08	0551019884	45 X 50 X 3/8 FASTENER		08
09	0571017991	CHAIN FIXER HANDRAIL		08
10	0503013357	3/8" SELF-ADJUSTING NUT		16
11	0503034094	22 TWISTED CHAIN		04

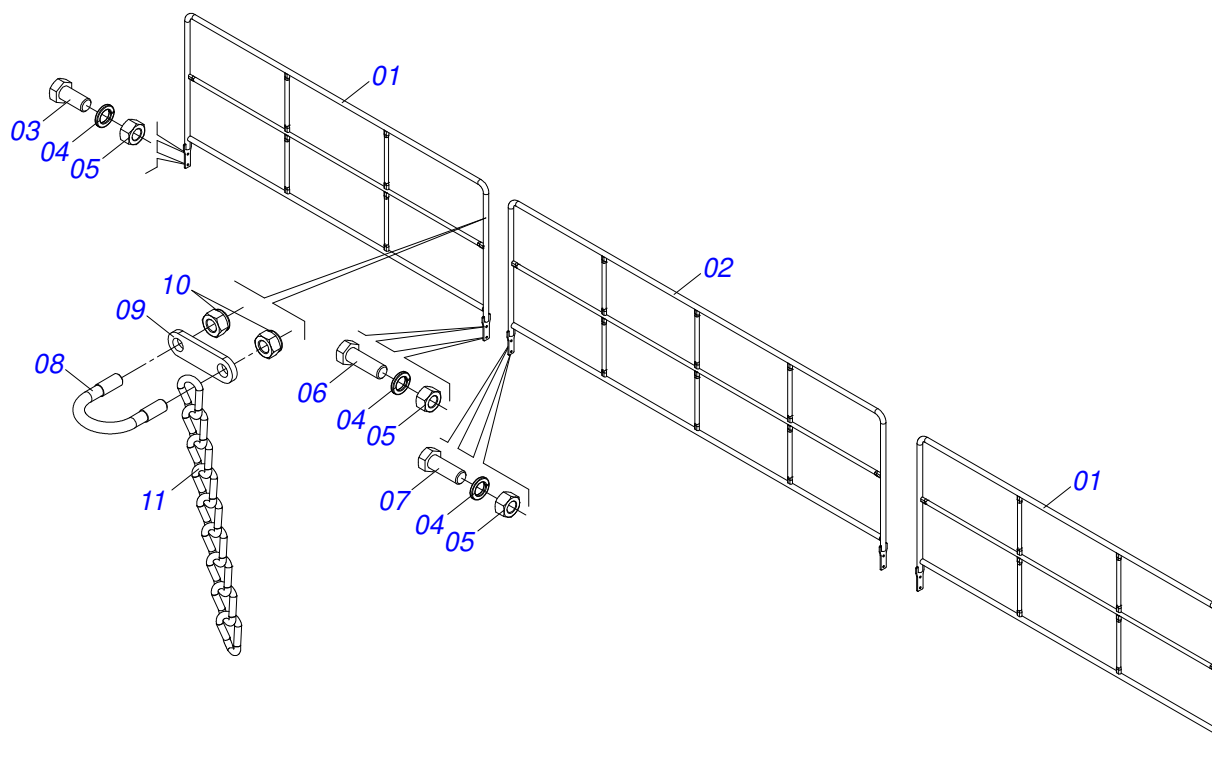

Item	Code	Description	See page	QT
01	0521064280	SIDE HANDRAIL	02	
02	0521064843	CENTRAL HANDRAIL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2" NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8" SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

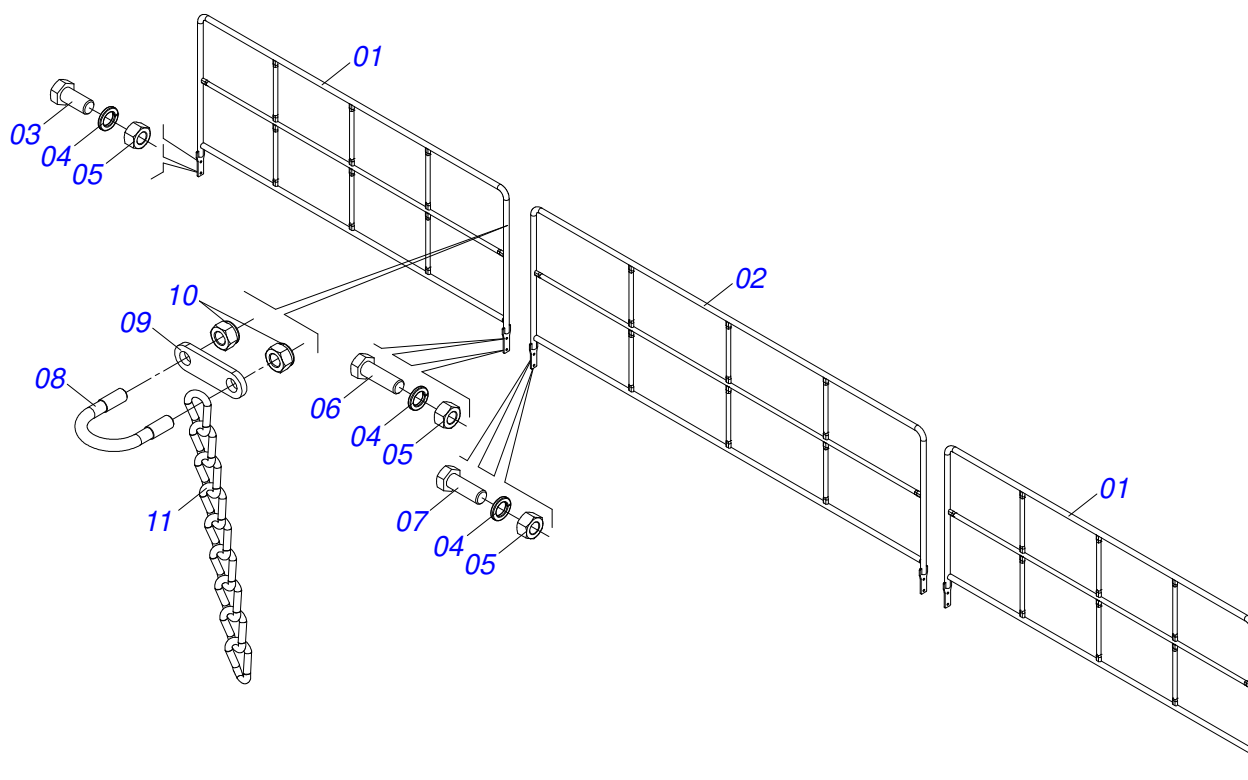


Item	Code	Description	See page	QT
01	0521064844	SIDE HANDRAIL	02	
02	0521065205	HANDRAIL CENTRAL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2" NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8" SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

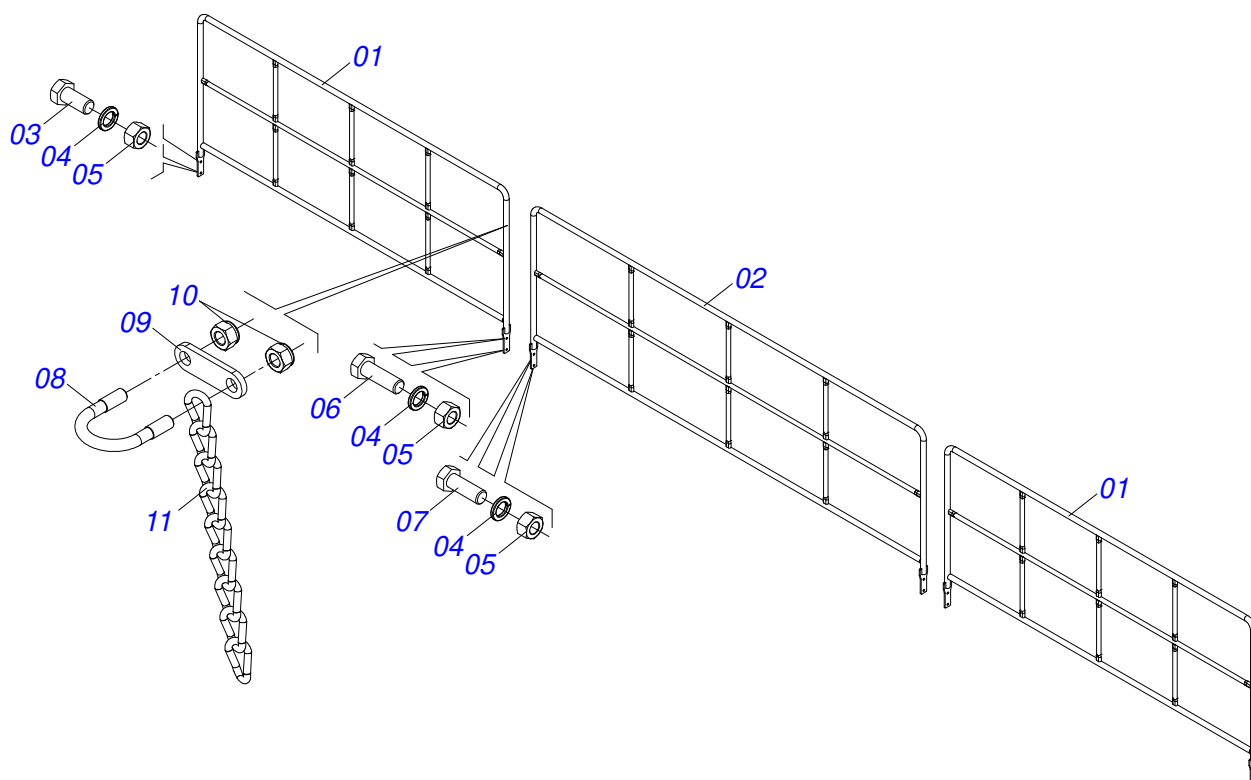


Item	Code	Description	See page	QT
01	0521067842	22 E 450 /15 E 760 SIDE HARDWARE	02	
02	0521064843	CENTRAL HANDRAIL	01	
03	0503010395	1/2" X 1-1/4" BOLT	04	
04	0503010019	1/2" SPRING WASHER	12	
05	0503010060	1/2" NUT	12	
06	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	06	
07	0503011082	C1/2" X 1.3/4" SCREW	02	
08	0551019884	45 X 50 X 3/8 FASTENER	08	
09	0571017991	CHAIN FIXER HANDRAIL	08	
10	0503013357	3/8" SELF-ADJUSTING NUT	16	
11	0503034094	22 TWISTED CHAIN	04	

JACK ASSEMBLY

0511054971

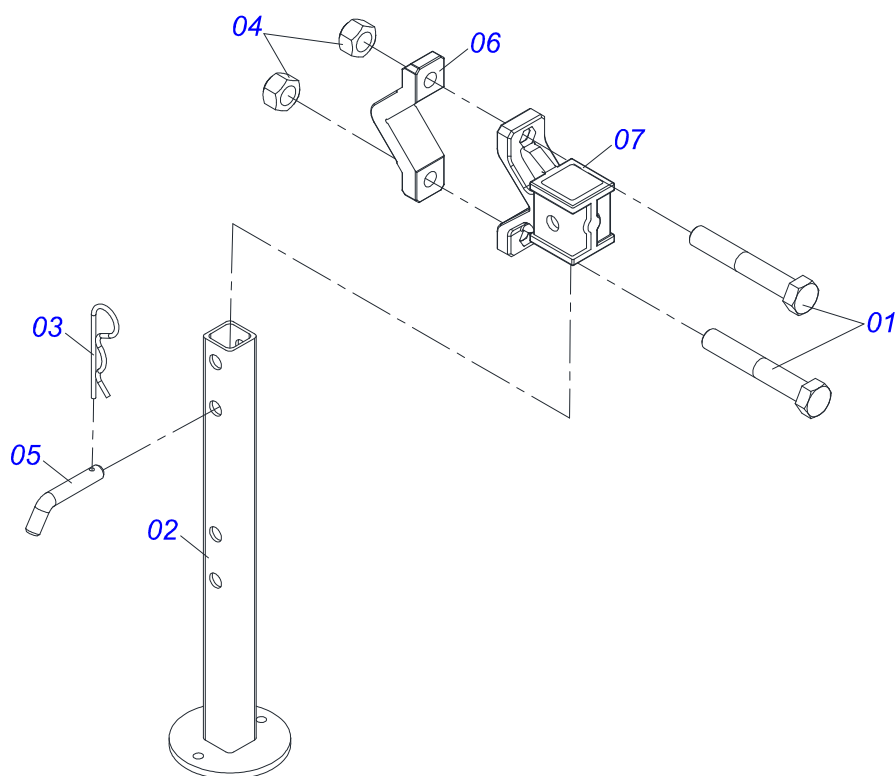


Item	Code	Description	See page	QT
01	0501011543	5/8" X 4" BOLT		02
02	0511061835	PLOUGH SUPPORT		01
03	0503030012	HITCH PIN CLIP		01
04	0503012412	5/8 UNC SELF LOCKING NUT		02
05	0501011075	PIN		01
06	0502010175	HITCH CLAMP		01
07	0502011530	SUPPORT		01

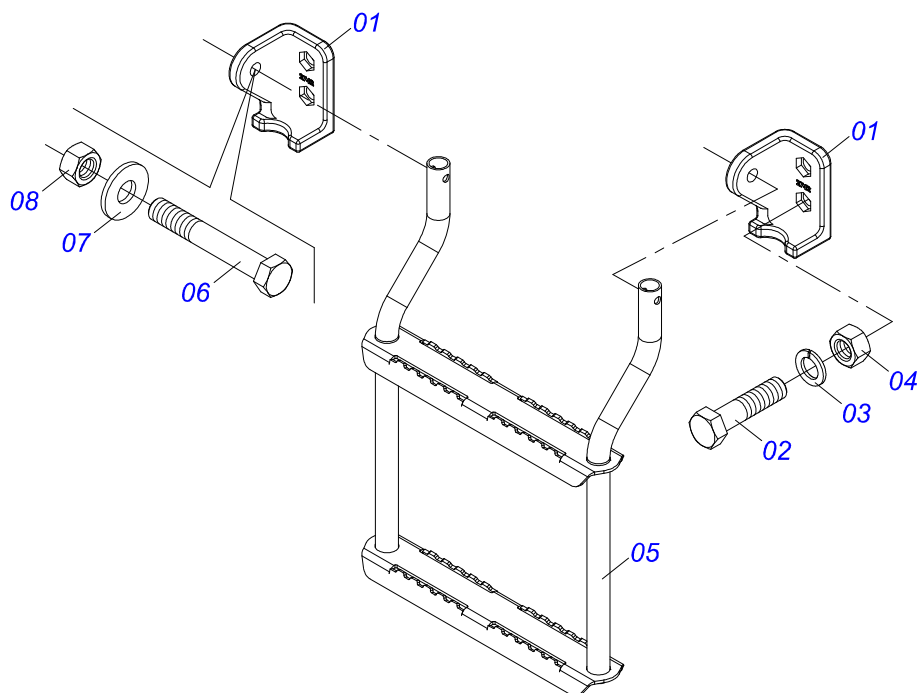


Item	Code	Description	See page	QT
01	0502012742	FIXER SUPPORT LADDER	02	
02	0503010237	3/8" X 1" BOLT	04	
03	0503010025	3/8" SPRING WASHER	04	
04	0503010026	3/8" NUT	04	
05	0511069636	LADDER	01	
06	0503011179	3/8" X 2-1/4" BOLT	02	
07	0501010984	FLAT WASHER	02	
08	0503013357	3/8" SELF-ADJUSTING NUT	02	

8160 DOUBLE ARTICULATED HYDRAULIC MARKER


0521052886

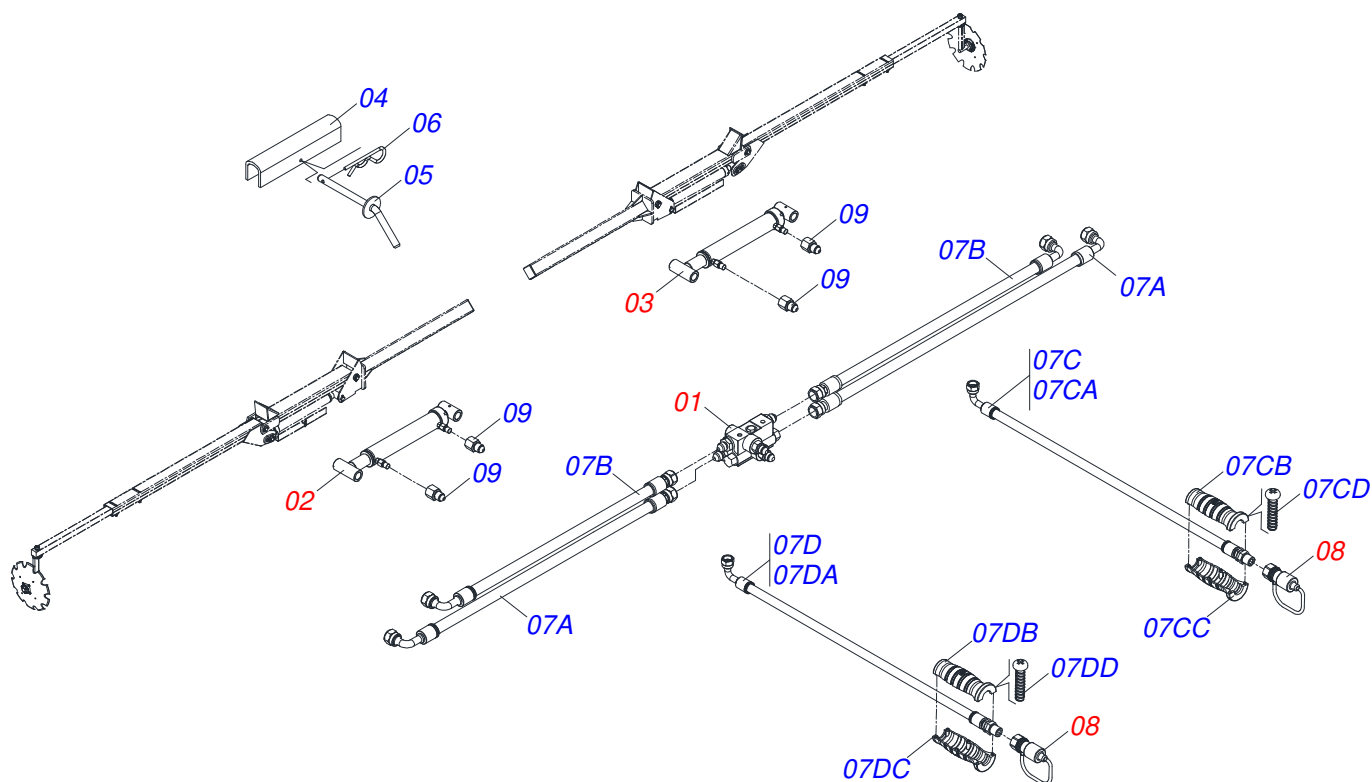


Item	Code	Description	See page	QT
01	0501054649	HBM SEQUENTIAL VALVE	133	01
02	0511058431	HYDRAULIC CYLINDER	134	01
03	0511058431	HYDRAULIC CYLINDER	134	01
04	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
05	0501068994	0.3" X 3.1" LOCK PIN		02
06	0503030168	HITCH PIN CLIP		02
07	0521052885	15/55 DOUBLE ARTICULATED HYDRAULIC MARKER		01
07A	0501081953	3/8 X 4940 TR-TC HOSE		02
07B	0501082037	HOSE 3/8 X 5150 TR-TC		02
07C	0521052512	HOSE 3/8 X 5200 TC-TM PURPLE / RED		01
07CA	0501081980	HOSE 3/8 X 5200 TC-TM		01
07CB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
07CC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
07CD	0503018952	PLASTIC BOLT		06
07D	0521052513	HOSE 3/8 X 5200 TC-TM PURPLE / BLUE		01
07DA	0501081980	HOSE 3/8 X 5200 TC-TM		01
07DB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
07DC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
07DD	0503018952	PLASTIC BOLT		06
08	0501053834	MALE QUICK COUPLER	59	02
09	0511018012	HIDRAULIC ADAPTER		04

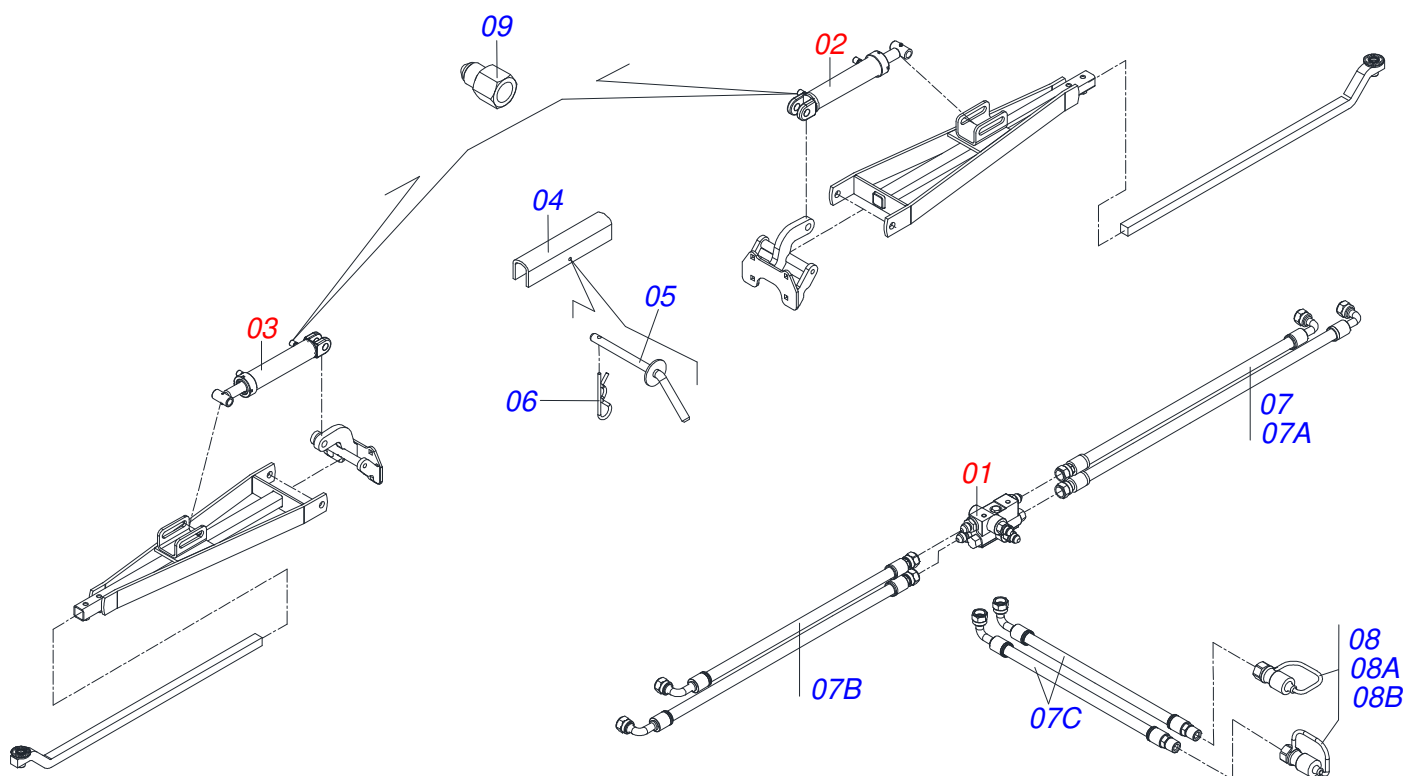


Item	Code	Description	See page	QT
01	0501054649	HBM SEQUENTIAL VALVE	133	01
02	0511058431	HYDRAULIC CYLINDER	134	01
03	0511058431	HYDRAULIC CYLINDER	134	01
04	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
05	0501068994	0.3" X 3.1" LOCK PIN		02
06	0503030168	HITCH PIN CLIP		02
07	0511057890	17 E 500 HYDRAULIC MARKER HOSE ASSEMBLY		01
07A	0501080383	3/8" X 197" TC-TM HOSE		02
07B	0501081748	HOSE		02
07C	0501081981	HOSES		02
08	0501053834	MALE QUICK COUPLER	59	02
08A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
08B	0503011882	MALE QUICK COUPLER CAP		01
09	0511018012	HIDRAULIC ADAPTER		04

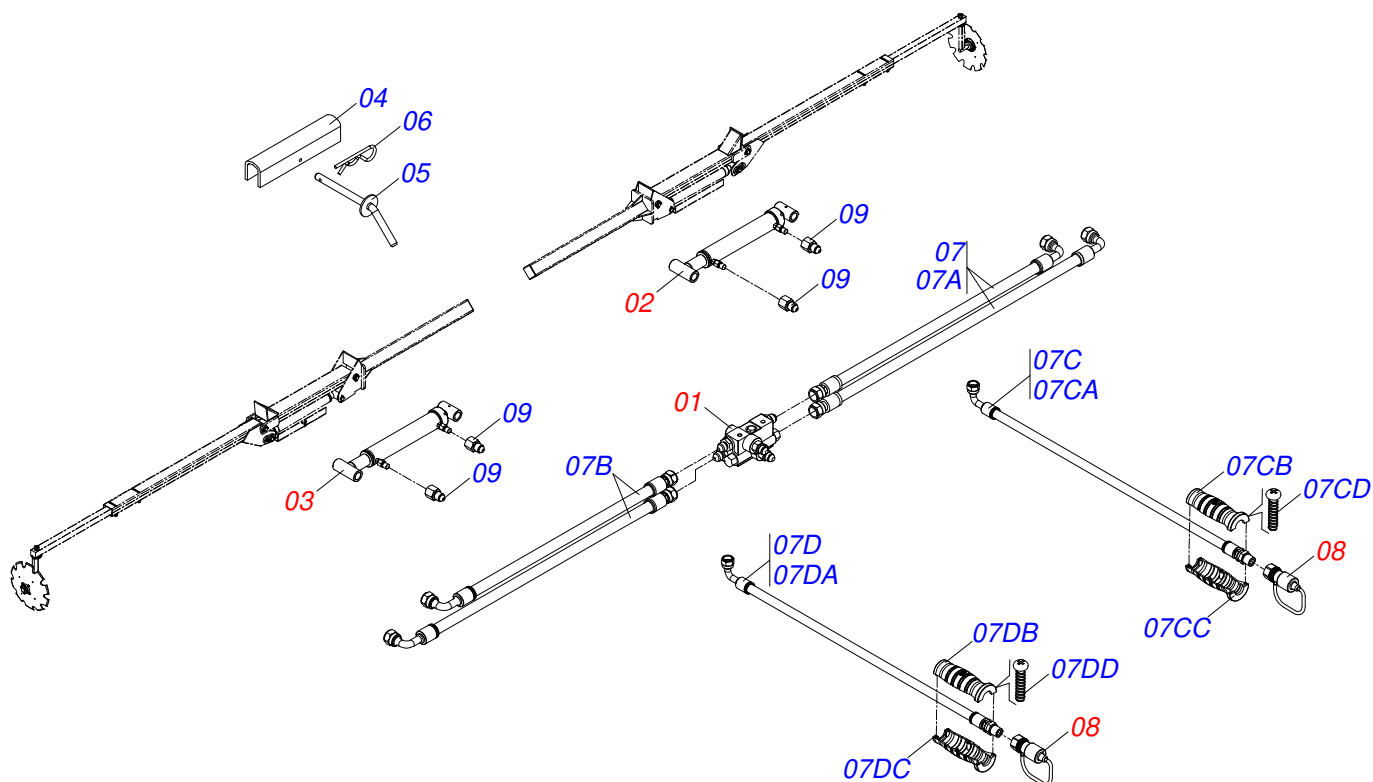


Item	Code	Description	See page	QT
01	0501054649	HBM SEQUENTIAL VALVE	133	01
02	0511058431	HYDRAULIC CYLINDER	134	01
03	0511058431	HYDRAULIC CYLINDER	134	01
04	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
05	0501068994	0.3" X 3.1" LOCK PIN		02
06	0503030168	HITCH PIN CLIP		02
07	0511057739	HYDRAULIC MARKER HAND SET		01
07A	0501081981	HOSES		02
07B	0501081982	HOSE		02
07C	0521052512	HOSE 3/8 X 5200 TC-TM PURPLE / RED		01
07CA	0501081980	HOSE 3/8 X 5200 TC-TM		01
07CB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
07CC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
07CD	0503018952	PLASTIC BOLT		06
07D	0521052513	HOSE 3/8 X 5200 TC-TM PURPLE / BLUE		01
07DA	0501081980	HOSE 3/8 X 5200 TC-TM		01
07DB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
07DC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
07DD	0503018952	PLASTIC BOLT		06
08	0501053834	MALE QUICK COUPLER	59	02
09	0511018012	HIDRAULIC ADAPTER		04

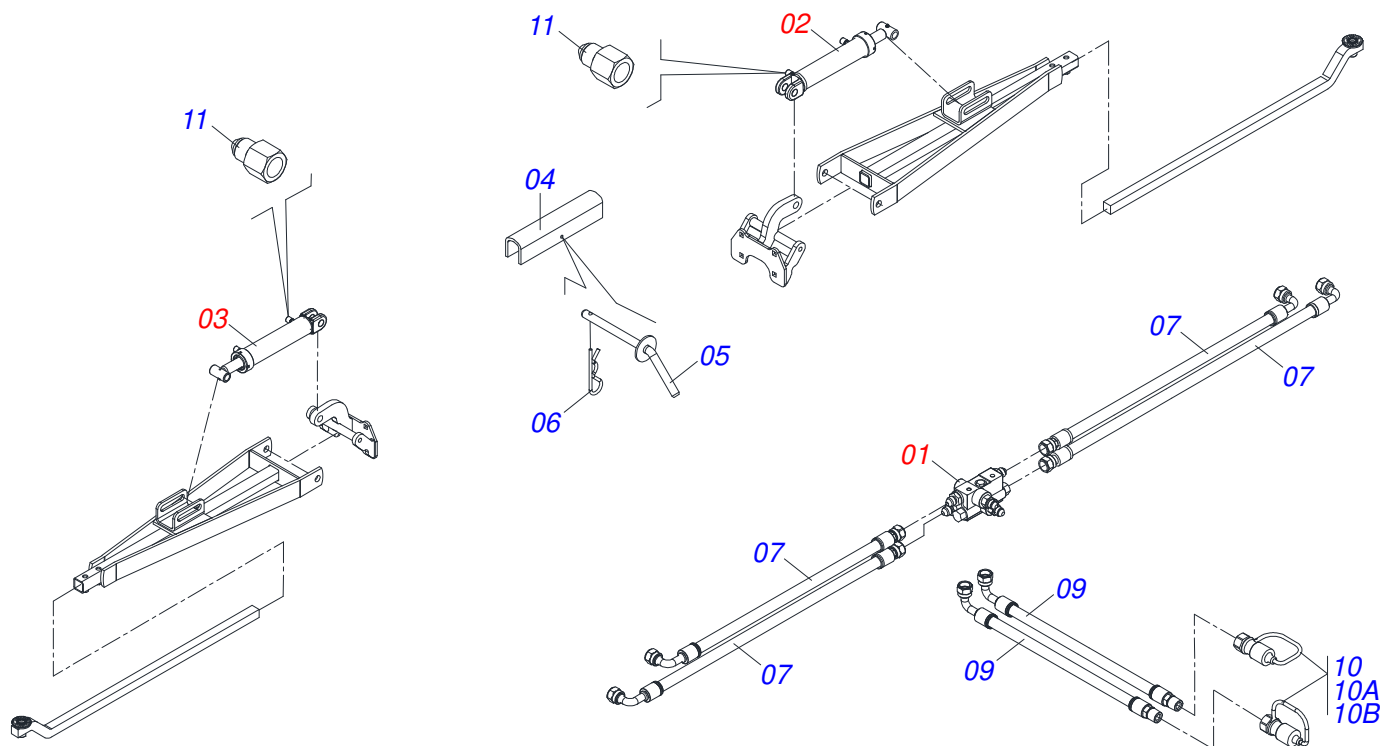


Item	Code	Description	See page	QT
001	0501054649	HBM SEQUENTIAL VALVE	133	01
002	0511058431	HYDRAULIC CYLINDER	134	01
003	0511058431	HYDRAULIC CYLINDER	134	01
004	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
005	0501068994	0.3" X 3.1" LOCK PIN		02
006	0503030168	HITCH PIN CLIP		02
007	0501081980	HOSE 3/8 X 5200 TC-TM		02
008	0501081255	TR-TC HOSE ASSY		02
009	0501080744	3/8" X 248" TR-TC HOSE ASSY		02
010	0501053834	MALE QUICK COUPLER	59	02
010A	0503011627	MALE QUICK COUPLER AGR 1/2 NPT		01
010B	0503011882	MALE QUICK COUPLER CAP		01
011	0511018012	HIDRAULIC ADAPTER		04

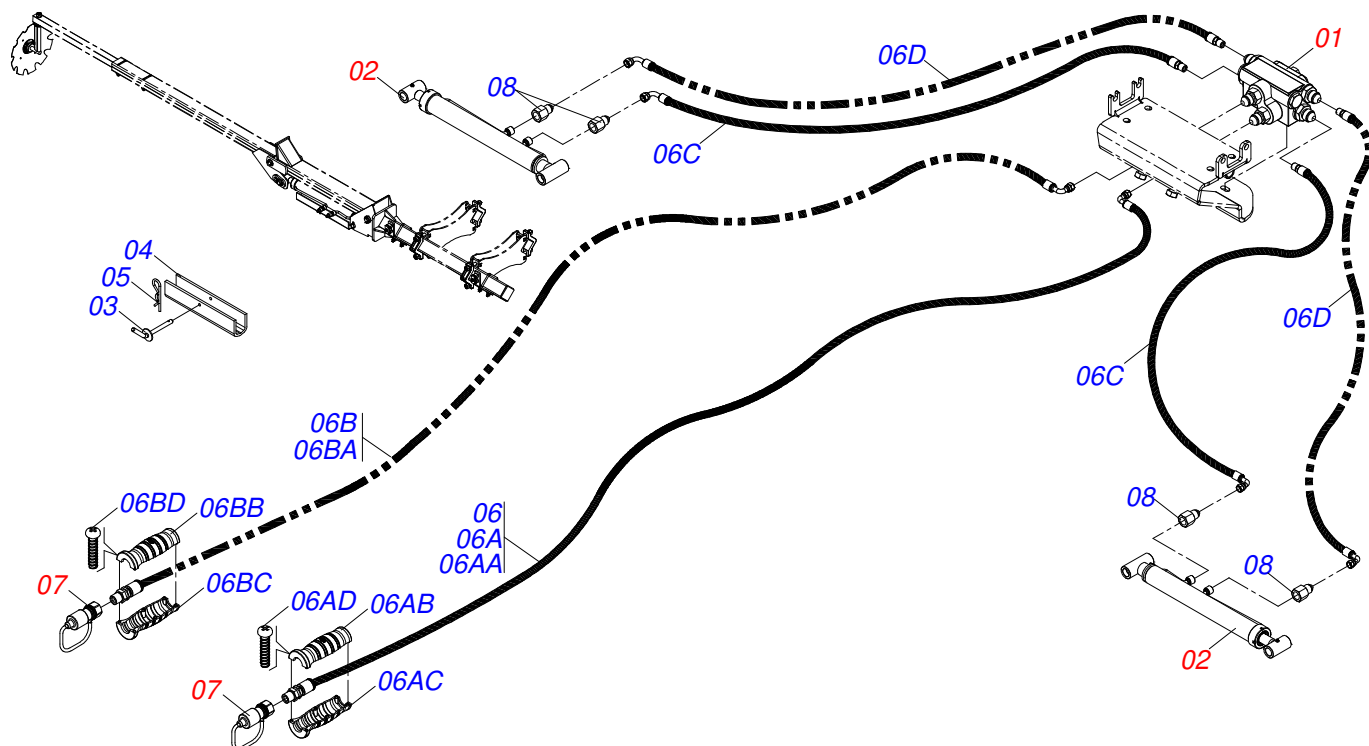


Item	Code	Description	See page	QT
01	0501054649	HBM SEQUENTIAL VALVE	133	01
02	0511058431	HYDRAULIC CYLINDER	134	02
03	0501068994	0.3" X 3.1" LOCK PIN		02
04	0511015573	2.07" X 1.6" TRANSPORT LOCK		02
05	0503030168	HITCH PIN CLIP		02
06	0521050879	HYDRAULIC MARKER HOSE ASSY		01
06A	0521052512	HOSE 3/8 X 5200 TC-TM PURPLE / RED		01
06AA	0501081980	HOSE 3/8 X 5200 TC-TM		01
06AB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
06AC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
06AD	0503018952	PLASTIC BOLT		06
06B	0521052513	HOSE 3/8 X 5200 TC-TM PURPLE / BLUE		01
06BA	0501081980	HOSE 3/8 X 5200 TC-TM		01
06BB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
06BC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
06BD	0503018952	PLASTIC BOLT		06
06C	0501080744	3/8" X 248" TR-TC HOSE ASSY		02
06D	0501081447	3/8 X 6600 TC-TR HOSE		02
07	0501053834	MALE QUICK COUPLER	59	02
08	0511018012	HIDRAULIC ADAPTER		04

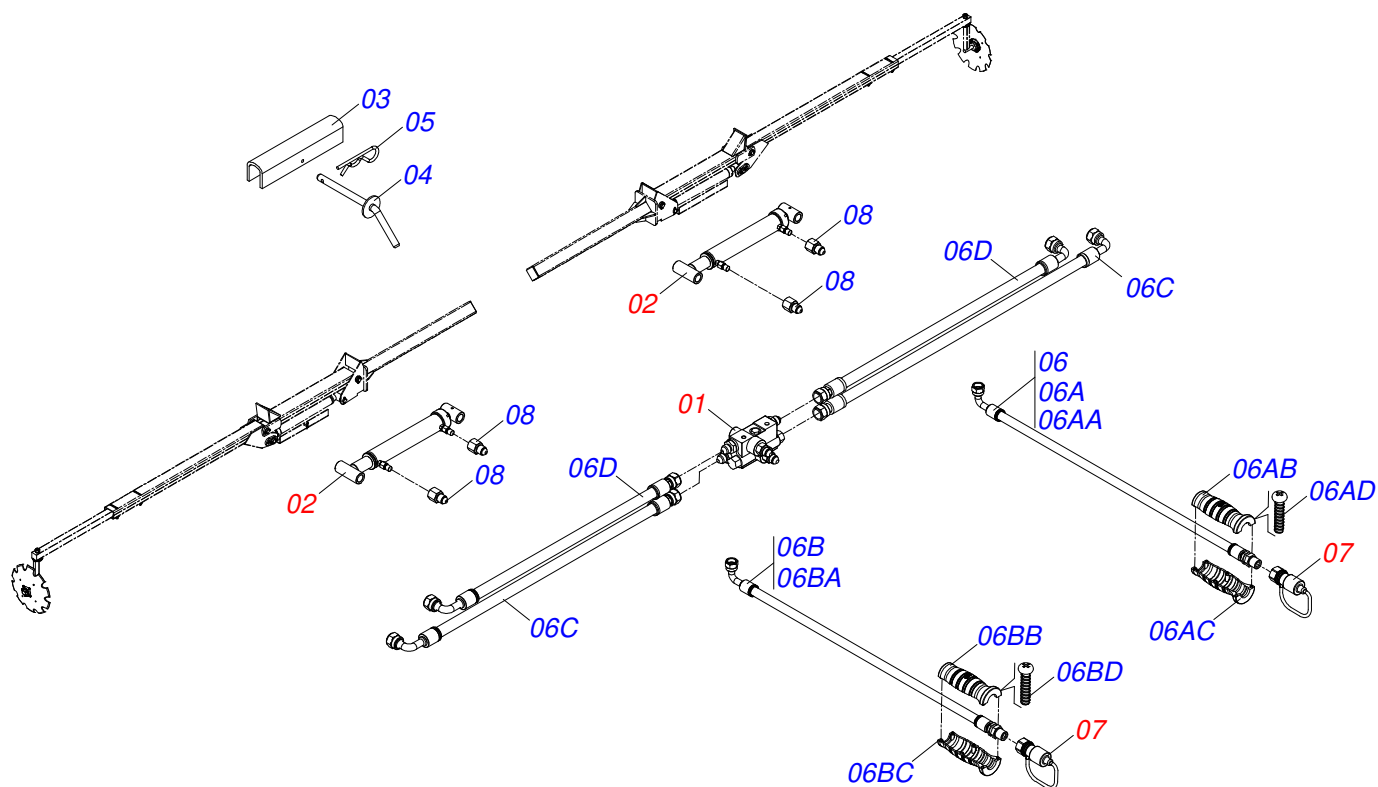


Item	Code	Description	See page	QT
01	0501054649	HBM SEQUENTIAL VALVE	133	01
02	0511058553	HYDRAULIC CYLINDER		02
03	0511017592	11.8" X 1.6" TRANSPORT LOCK		02
04	0501068994	0.3" X 3.1" LOCK PIN		02
05	0503030168	HITCH PIN CLIP		02
06	0521051377	15 / 450 DOUBLE ARTICULATED HYDRAULIC MARKER		01
06A	0521052512	HOSE 3/8 X 5200 TC-TM PURPLE / RED		01
06AA	0501081980	HOSE 3/8 X 5200 TC-TM		01
06AB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
06AC	0503034495	HYDRAULIC HOSE GRIP (RED)		01
06AD	0503018952	PLASTIC BOLT		06
06B	0521052513	HOSE 3/8 X 5200 TC-TM PURPLE / BLUE		01
06BA	0501081980	HOSE 3/8 X 5200 TC-TM		01
06BB	0503034491	HYDRAULIC HOSE GRIP (PURPLE)		01
06BC	0503034494	HYDRAULIC HOSE GRIP (BLUE)		01
06BD	0503018952	PLASTIC BOLT		06
06C	0501082135	3/8 X 7900 TR-TC HOSE		02
06D	0501082136	3/8 X 8100 TR-TC HOSE		02
07	0501053834	MALE QUICK COUPLER	59	02
08	0511018012	HIDRAULIC ADAPTER		04

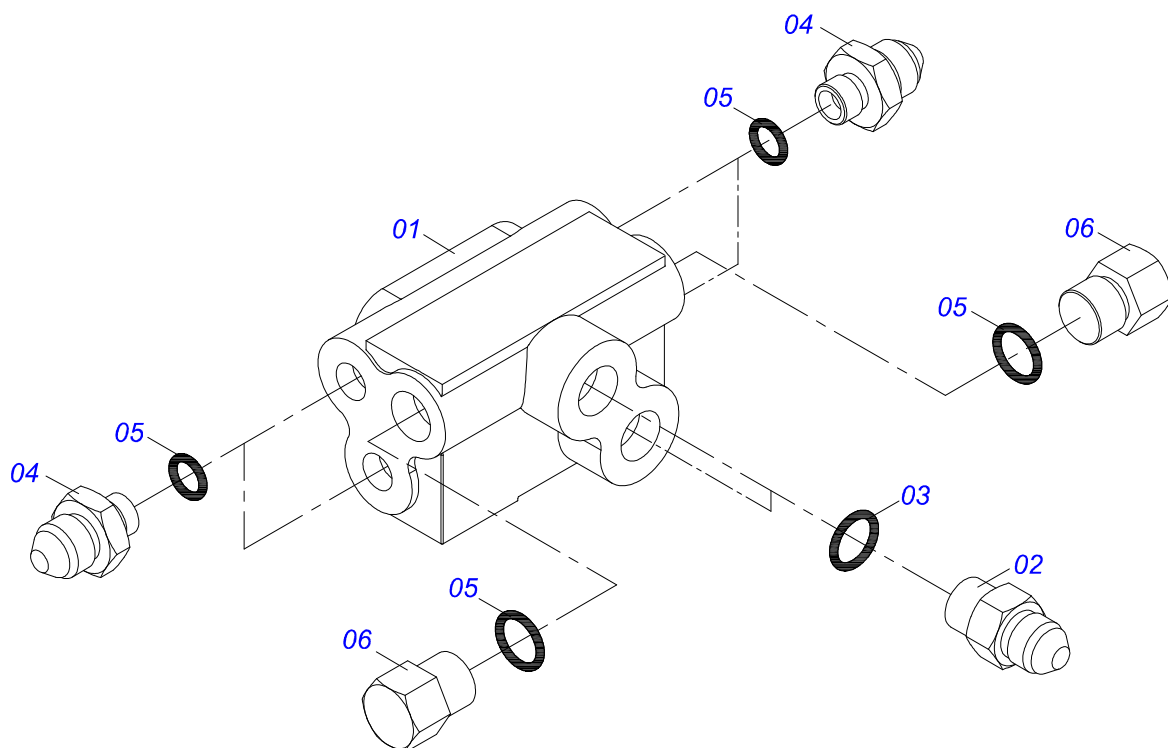


Item	Code	Description	See page	QT
01	0503060132	VDFS-002 T SEQUENCCEL VALVE		01
02	0501010617	3/4" NIPPLE		02
03	0503010190	2-114 N 3006-9B O'RING		02
04	0501012109	3/4" X 9/16" NIPPLE FITTING		04
05	0503011036	2-111 N 3006-9B O'RING		06
06	0531019339	9/16" UNF X 12 PUMP		02

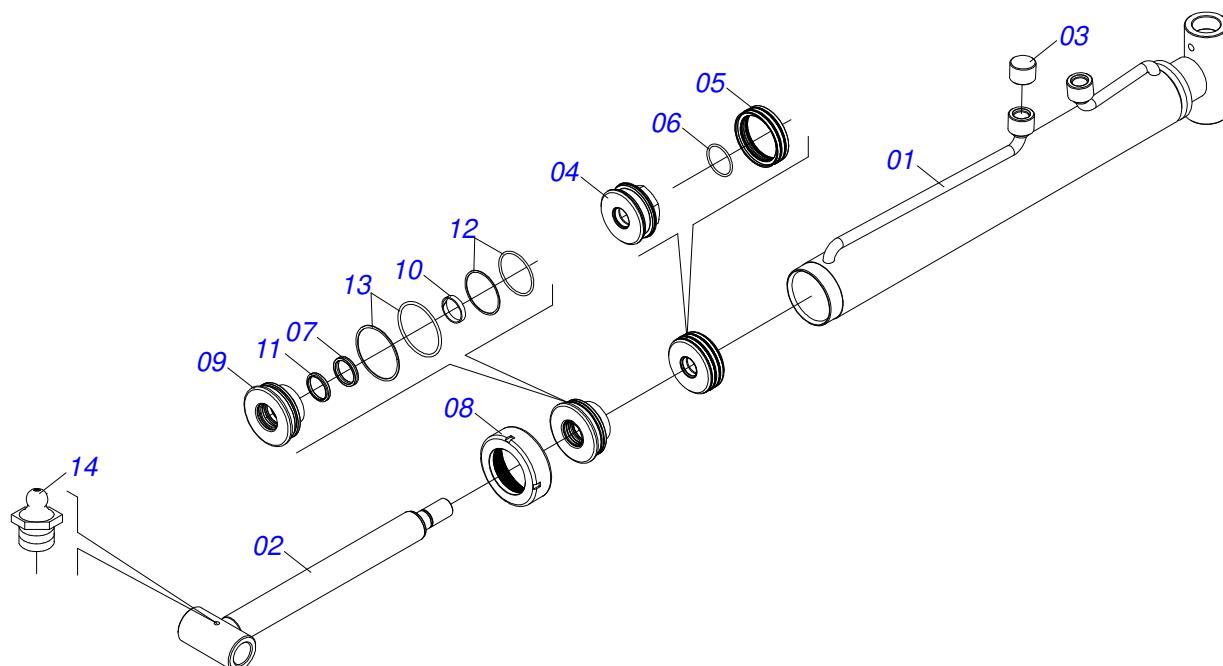


Item	Code	Description	See page	QT
01	0501067700	2.5" X 25" CYLINDER CASE		01
02	0521066632	EXTENDER		01
03	0503030384	CON PLUG N-001		02
04	0502012837	PISTON		01
05	0503018005	RING		01
06	0503011109	2-119 N 3006-9B O'RING		01
07	0503010163	D-1500 SCRAPER RING		01
08	0502010471	MOBILE COVER		01
09	0581010668	RING SUPPORT		01
10	0503018004	RING		01
11	0503018003	GASKET		01
12	0503018163	BACK-UP RING		02
13	0503018162	O'RING		02
14	0503010002	1800 GREASE FITTING		02
15	0511032280	ASSY REPAIR KIT 38,10 X 63,50 (0511058413)		01

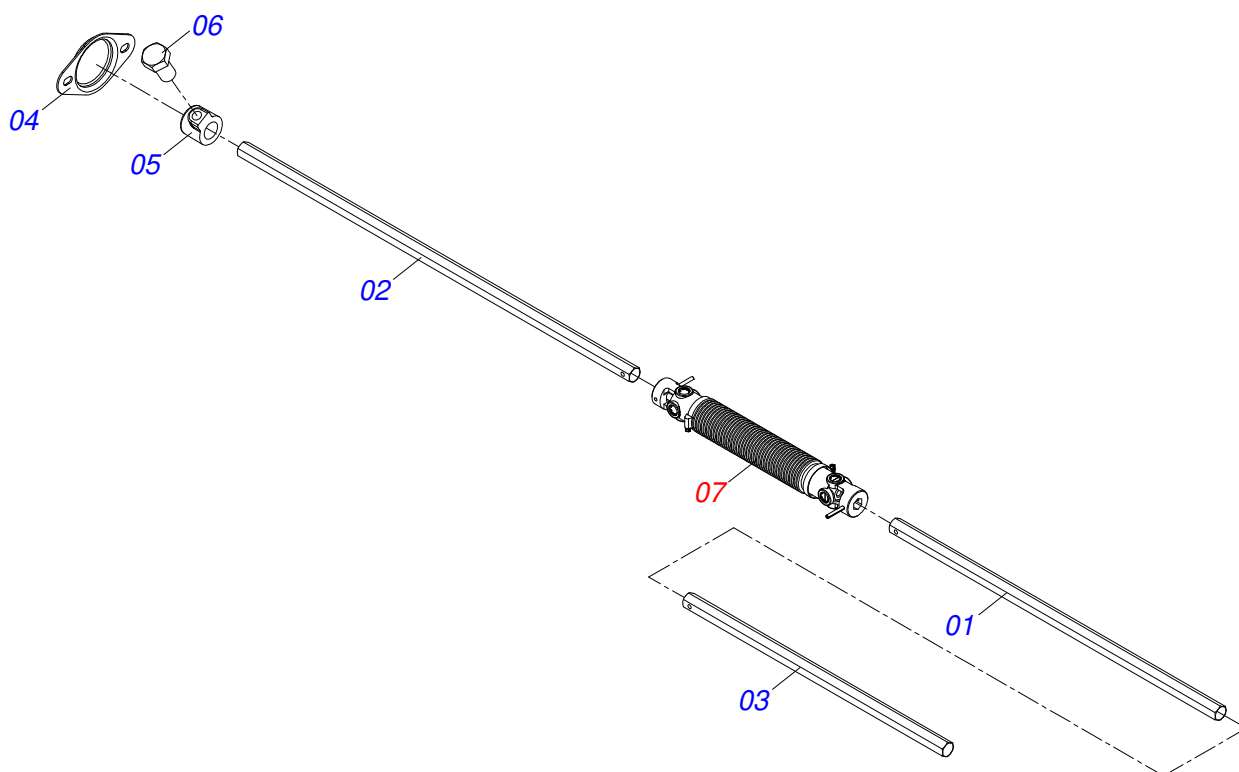


Item	Code	Description	See page	QT
01	0571013724	5/8 X 1250 HEX AXLE		01
02	0581015231	2475 - 15 E500 5/8" X 60.4" HEX AXLE		02
03	0571013726	5/8 X 800 HEX AXLE		01
04	0561014215	BEARING COVER LOWER ROW FRAME		02
05	0502040534	SPRING GUIDE BUSHING LOCK		08
06	0501018535	1/2 X 1 BOLT		08
07	0511059233	INTERMEDIATE TRANSMISSION	141	02

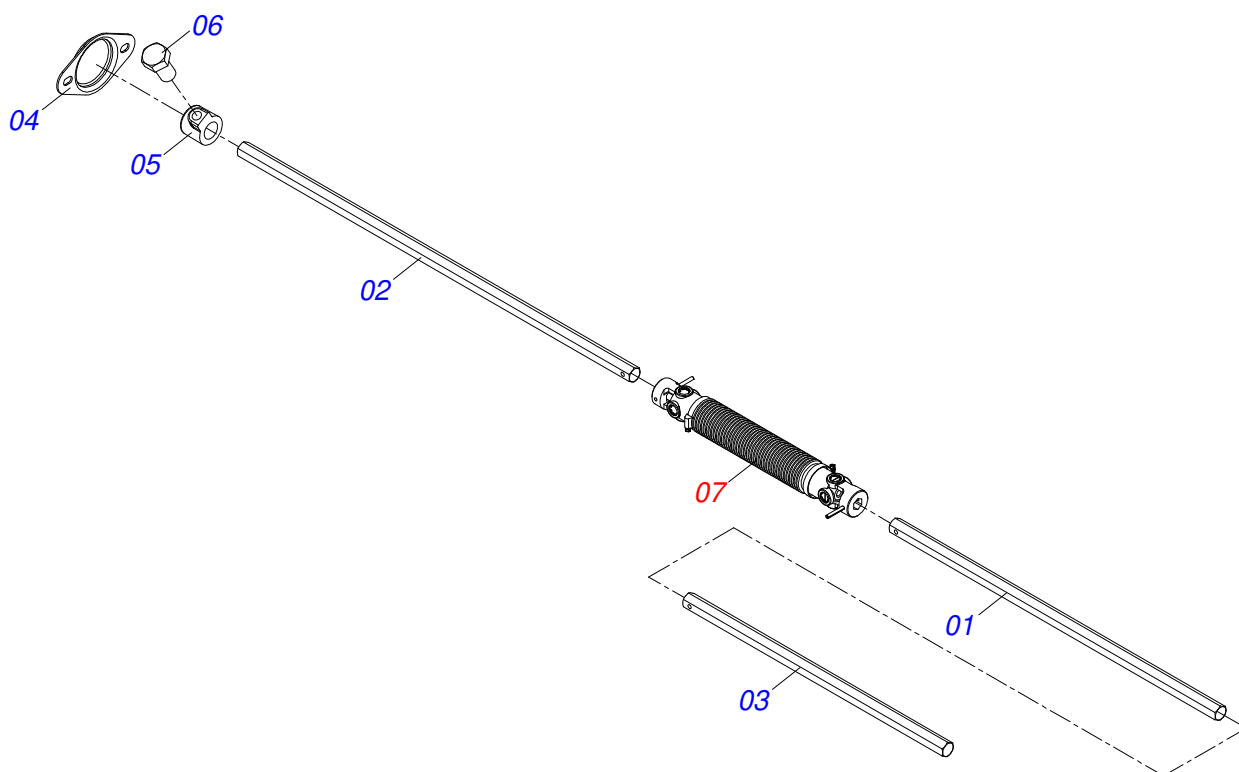


Item	Code	Description	See page	QT
01	0571013470	5/8 X 1100 HEX AXLE		01
02	0581015232	2735 - 17 E 500 5/8" X 60.4" HEX AXLE		02
03	0581012154	HEX 5/8 X AXIS 755		01
04	0561014215	BEARING COVER LOWER ROW FRAME		02
05	0502040534	SPRING GUIDE BUSHING LOCK		08
06	0501018535	1/2 X 1 BOLT		08
07	0511059233	INTERMEDIATE TRANSMISSION	141	02

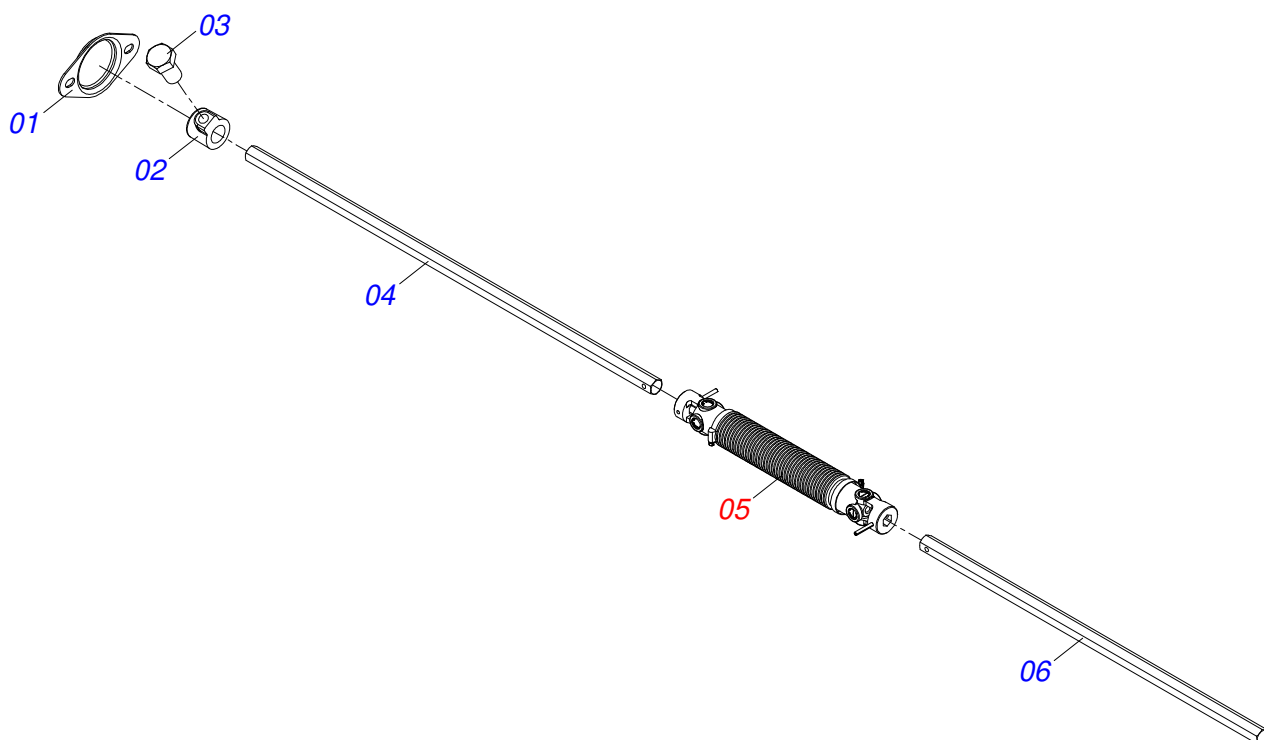


Item	Code	Description	See page	QT
01	0561014215	BEARING COVER LOWER ROW FRAME		02
02	0502040534	SPRING GUIDE BUSHING LOCK		08
03	0501018535	1/2 X 1 BOLT		08
04	0571014914	SHAFT AXLE		02
05	0511059233	INTERMEDIATE TRANSMISSION	141	02
06	0571013724	5/8 X 1250 HEX AXLE		02

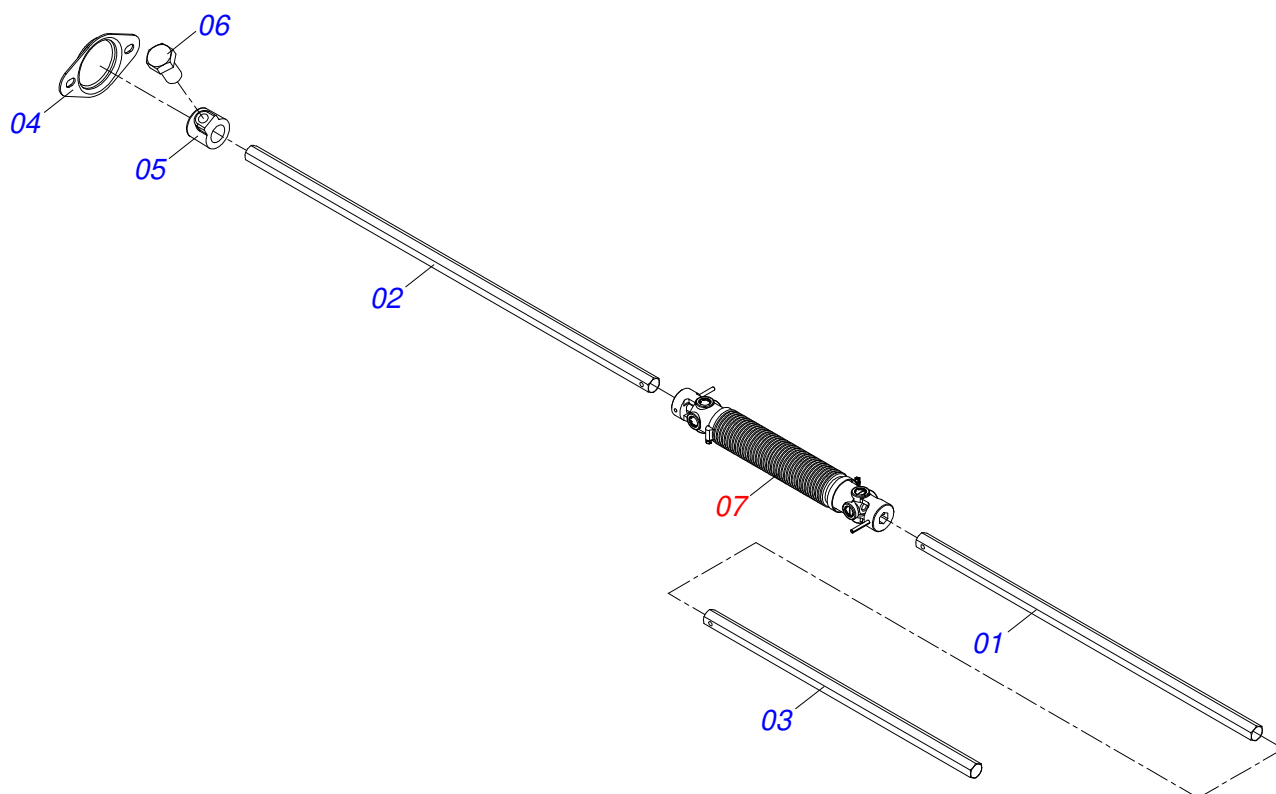


Item	Code	Description	See page	QT
01	0571015984	5/8 HEX AXLE		01
02	0571014914	SHAFT AXLE		02
03	0571013724	5/8 X 1250 HEX AXLE		01
04	0561014215	BEARING COVER LOWER ROW FRAME		02
05	0502040534	SPRING GUIDE BUSHING LOCK		08
06	0501018535	1/2 X 1 BOLT		08
07	0511059233	INTERMEDIATE TRANSMISSION	141	02

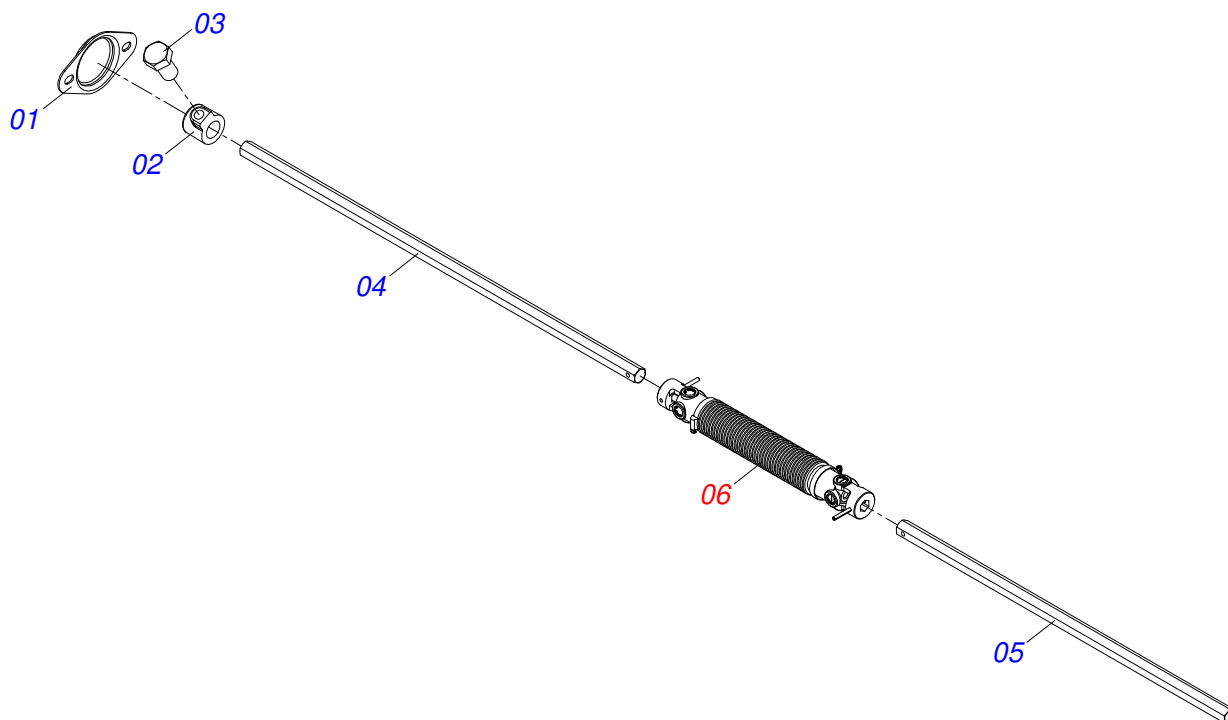

Item	Code	Description	See page	QT
01	0561014215	BEARING COVER LOWER ROW FRAME		02
02	0502040534	SPRING GUIDE BUSHING LOCK		08
03	0501018535	1/2 X 1 BOLT		08
04	0581013848	HEX AXIS 5/8 X 3220		02
05	0571013724	5/8 X 1250 HEX AXLE		02
06	0511059233	INTERMEDIATE TRANSMISSION	141	02

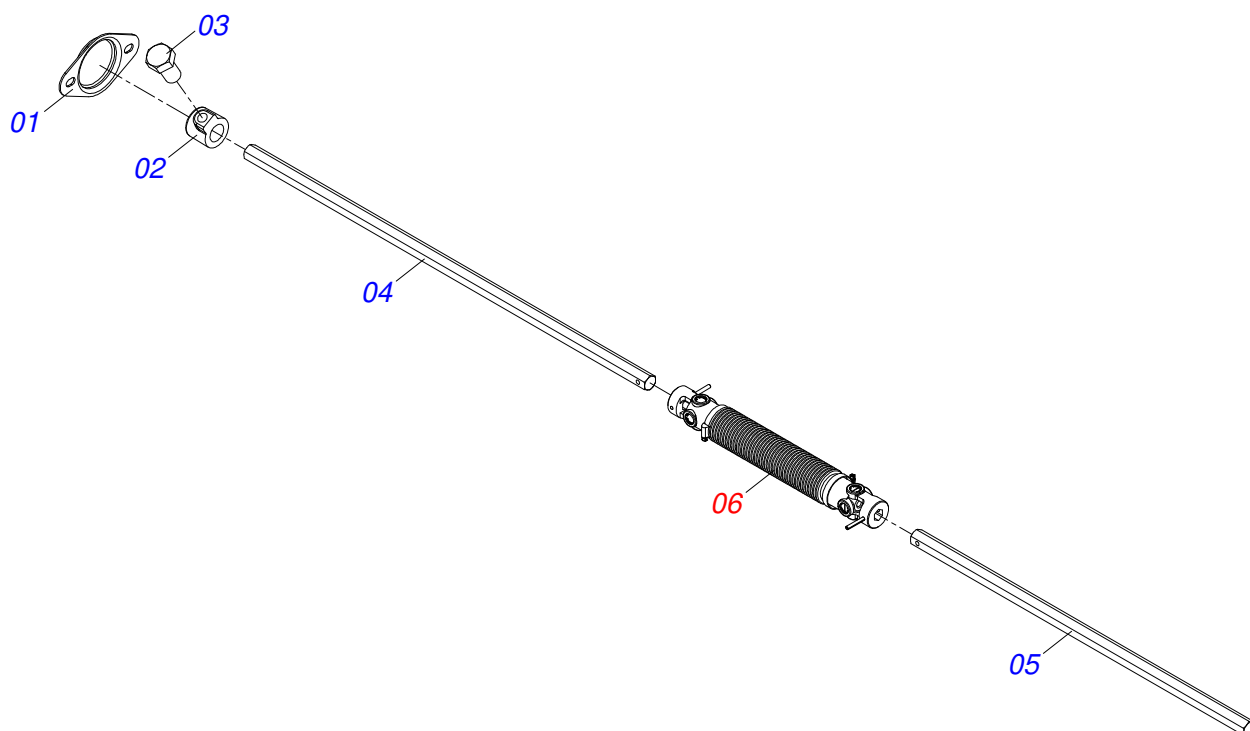


Item	Code	Description	See page	QT
01	0561014215	BEARING COVER LOWER ROW FRAME		02
02	0502040534	SPRING GUIDE BUSHING LOCK		08
03	0501018535	1/2 X 1 BOLT		08
04	0581014744	HEX AXIS 5/8 X 3235		02
05	0581014215	5/8" X HEX AXLE		02
06	0511059233	INTERMEDIATE TRANSMISSION	141	02

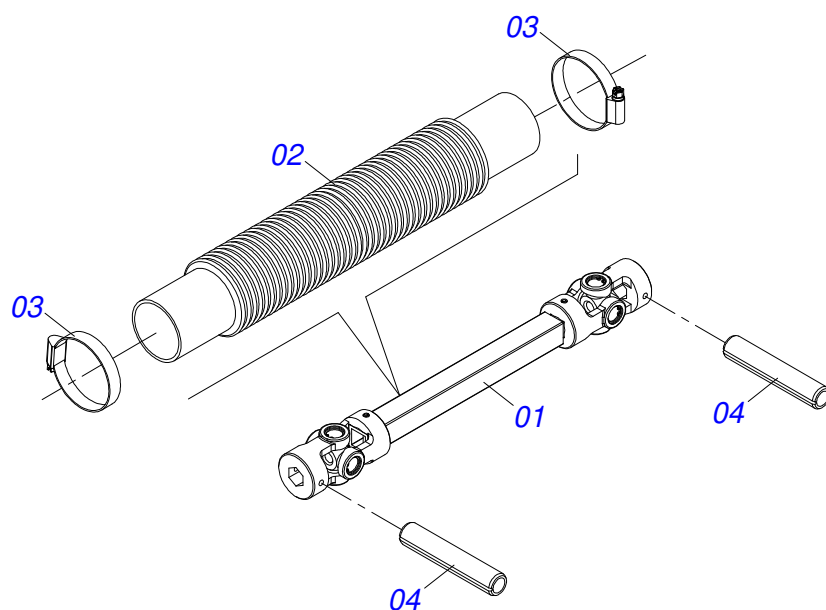


Item	Code	Description	See page	QT
01	0503062206	CARDAN TERMINAL	142	01
02	0503030331	1.2" X 1.2" X 12.2" HOSE		01
03	0503010243	CLAMP		02
04	0503011855	0.2" X 1.8" SPRING PIN		02

CARDAN TERMINAL


0503062206

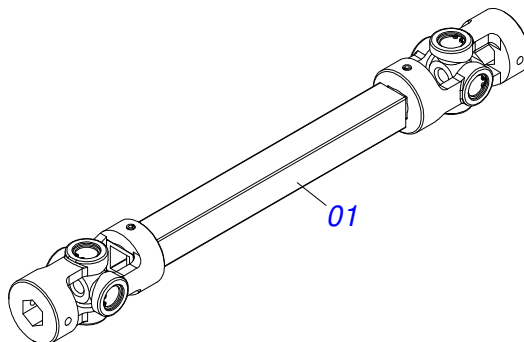


Item	Code	Description	See page	QT
01	0503062206	CARDAN TERMINAL	142	01

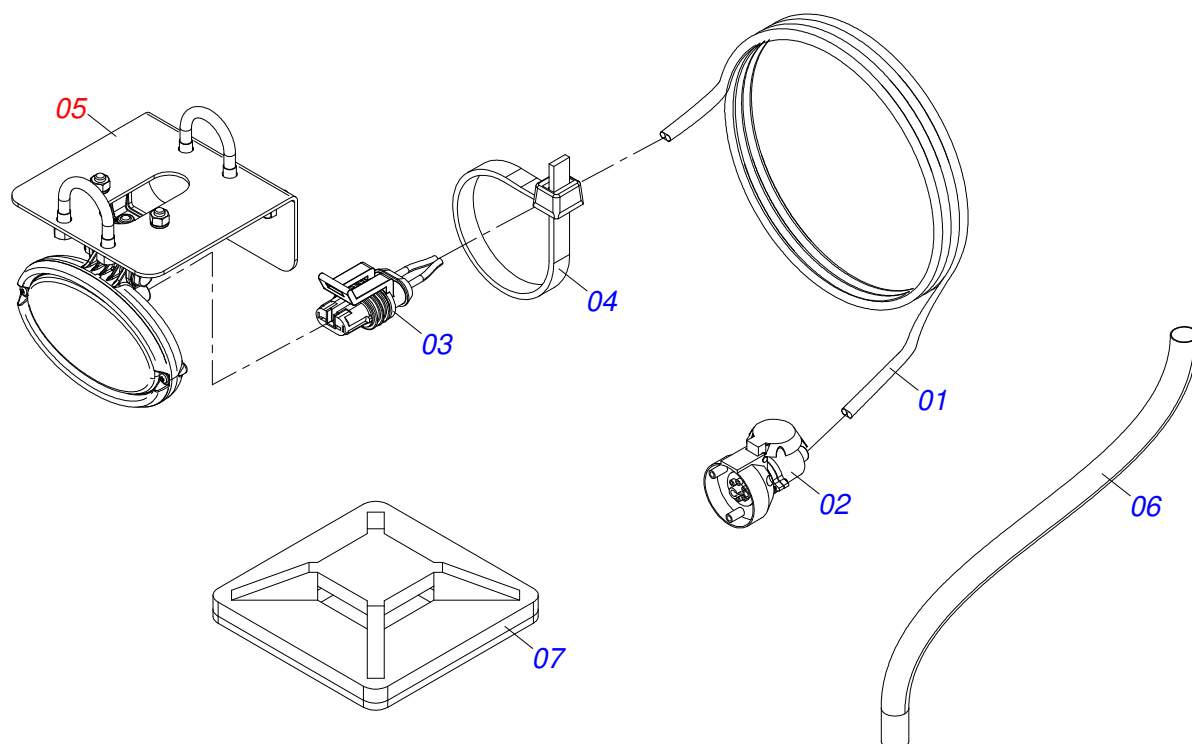


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		17
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		03
04	0503012903	T-80M CRAMP NYLON		50
05	0521052792	MOUNTED REAR LIGHT	147	03
06	3505151602	TUBE		0,3mt
07	0503017702	FIXER		15

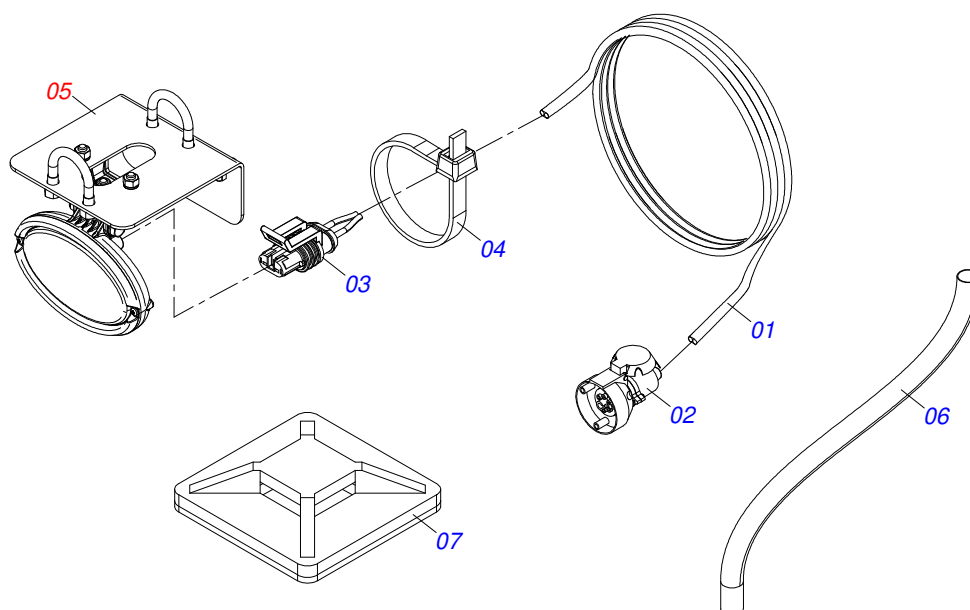

Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		21
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		04
04	0503012903	T-80M CRAMP NYLON		60
05	0521052792	MOUNTED REAR LIGHT	147	04
06	3505151602	TUBE		0,4mt
07	0503017702	FIXER		20

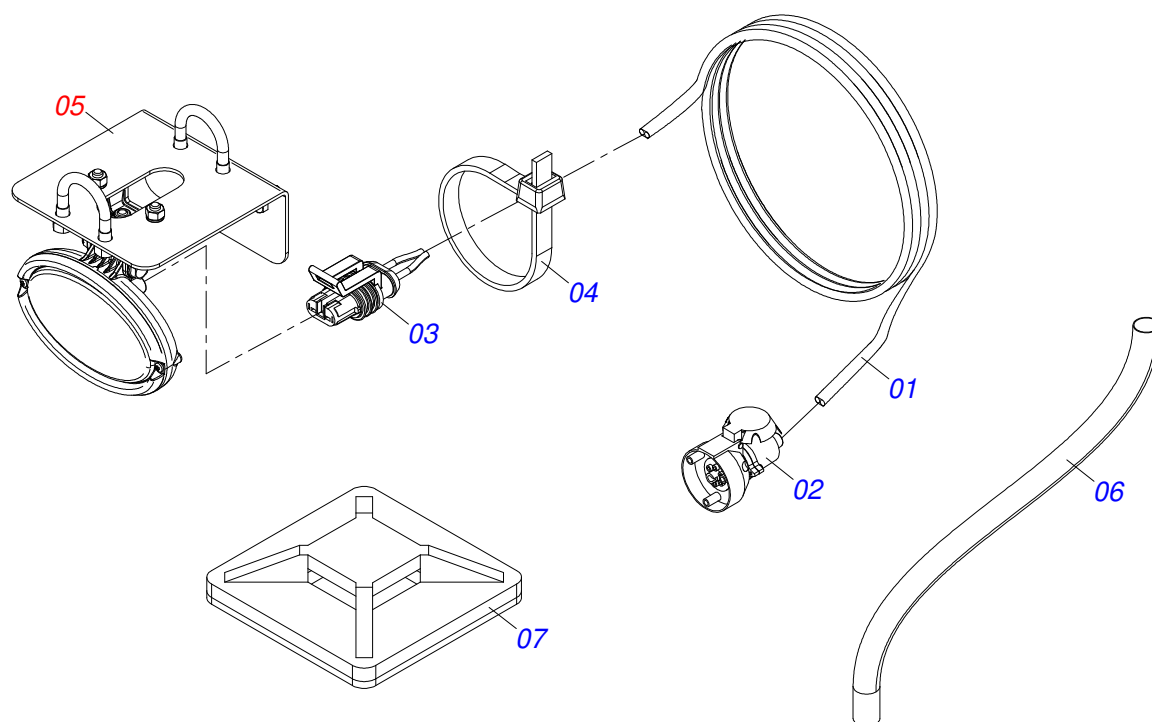


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		22
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		05
04	0503012903	T-80M CRAMP NYLON		70
05	0521052792	MOUNTED REAR LIGHT	147	05
06	3505151602	TUBE		0,5mt
07	0503017702	FIXER		25

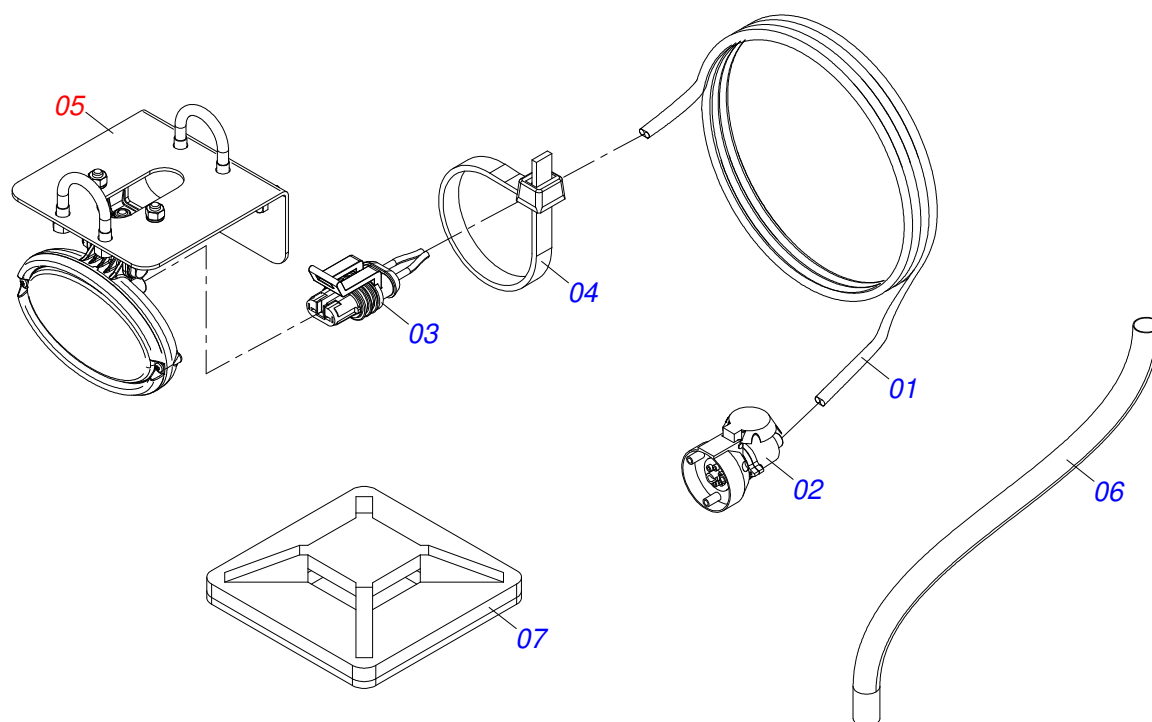


Item	Code	Description	See page	QT
01	0503014745	2 X 2,5 MM ELECTRIC CABLE		26
02	0503013151	ELECTRIC CONNECTION		01
03	0503015482	CONNECTOR		06
04	0503012903	T-80M CRAMP NYLON		80
05	0521052792	MOUNTED REAR LIGHT	147	06
06	3505151602	TUBE		0,6mt
07	0503017702	FIXER		30

MOUNTED REAR LIGHT


0521052792

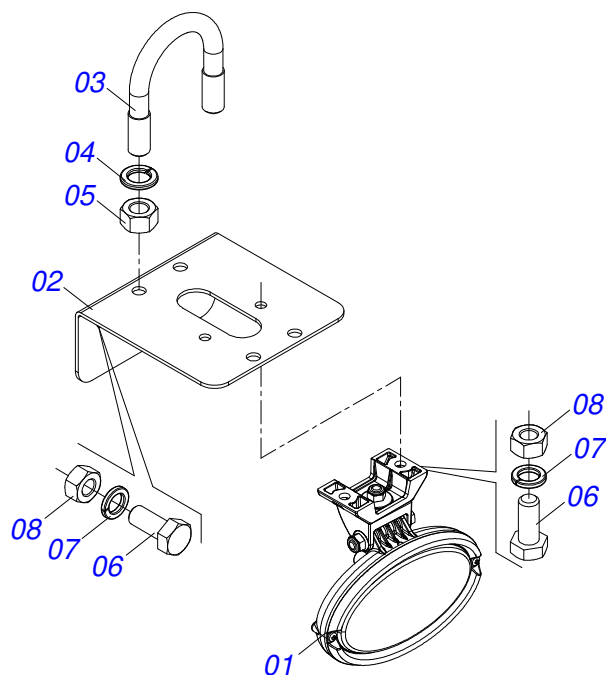


Item	Code	Description	See page	QT
01	0503018738	LIGHTHOUSE		01
02	0581016999	REAR LIGHT SUPPORT		01
03	0551019884	45 X 50 X 3/8 FASTENER		02
04	0503010025	3/8" SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
07	0503010179	LOCK WASHER		04
08	0503010337	5/16" NUT		04

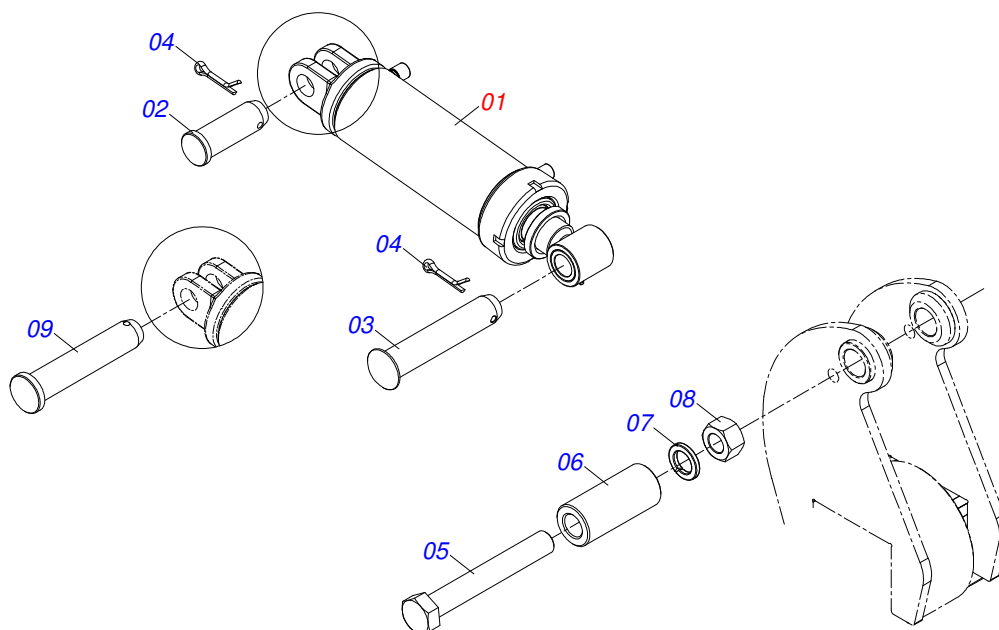


Item	Code	Description	See page	QT
01	0511058406	HYDRAULIC CYLINDER	150	03
02	0521012538	1.2" X 3.5" COUPLING SHAFT		02
03	0521015501	COUPLING SHAFT		03
04	0503010523	1/4" X 2" COTTERPIN		06
05	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		03
06	0531012565	SLEEVE 16,3X 30 X 88		03
07	0503010027	5/8" SPRING WASHER		03
08	0503010013	5/8" NUT		03
09	0551014099	COUPLING SHAFT 31,75 X 185		01

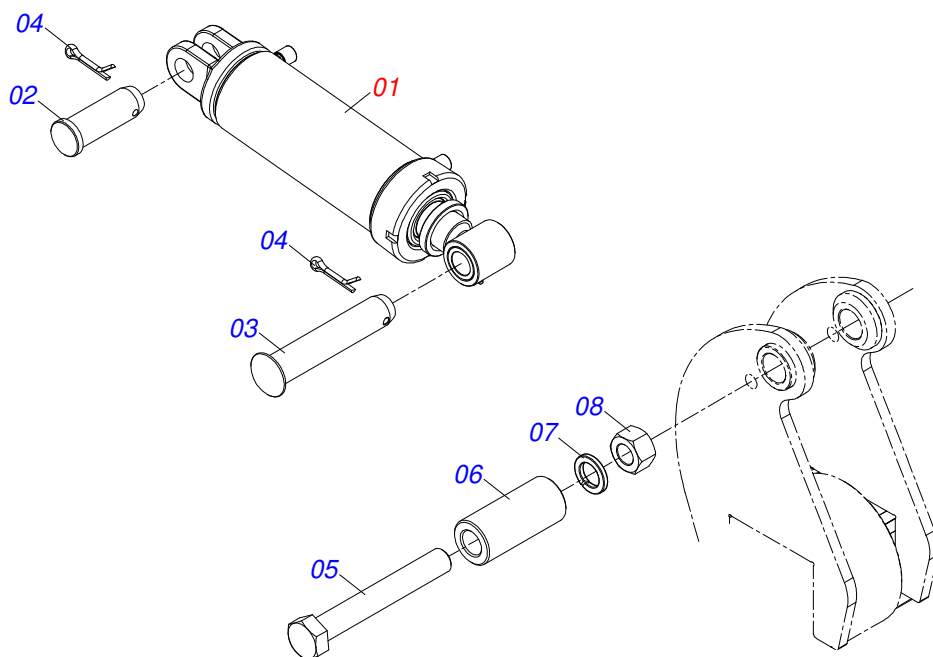


Item	Code	Description	See page	QT
01	0511058406	HYDRAULIC CYLINDER	150	06
02	0521012538	1.2" X 3.5" COUPLING SHAFT		06
03	0521015501	COUPLING SHAFT		06
04	0503010523	1/4" X 2" COTTERPIN		12
05	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		06
06	0531012565	SLEEVE 16,3X 30 X 88		06
07	0503010027	5/8" SPRING WASHER		06
08	0503010013	5/8" NUT		06

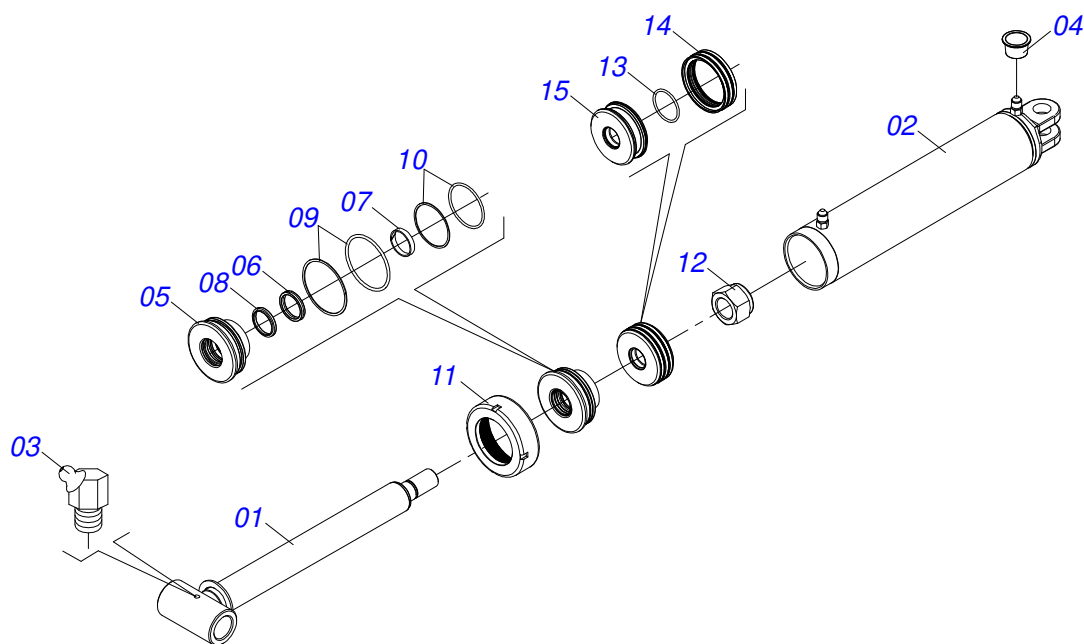


Item	Code	Description	See page	QT
01	0511064053	SLEEVE 2" X 14" TURNBUCLE		01
02	0511064052	4" X 12.1" CYLINDER CASE		01
03	0503010003	1845 GREASE FITTING		01
04	0503030385	CYLINDER PLUG N-002		02
05	0581010678	50,80 X 101 RING SUPPORT		01
06	0503015636	SCRAPER SEAL		01
07	0503018025	RING GUIDE		01
08	0503018026	1870-2000-375 B GASKET		01
09	0503010338	2-342 N 3006-9B O-RING		02
10	0503011061	8-342 BACK-UP RING		02
11	0502012822	101.60 END CAP		01
12	0503010817	1.1/4" SELF LOCKING NUT		01
13	0503010345	2-218 N 3006-9B O-RING		01
14	0503015633	SELEMASTER SEALING		01
15	0502012842	50,80 X 101,60 PISTON		01
16	0511032511	ASSY CYLINDER REPAIR KIT 50.8X101.6		01

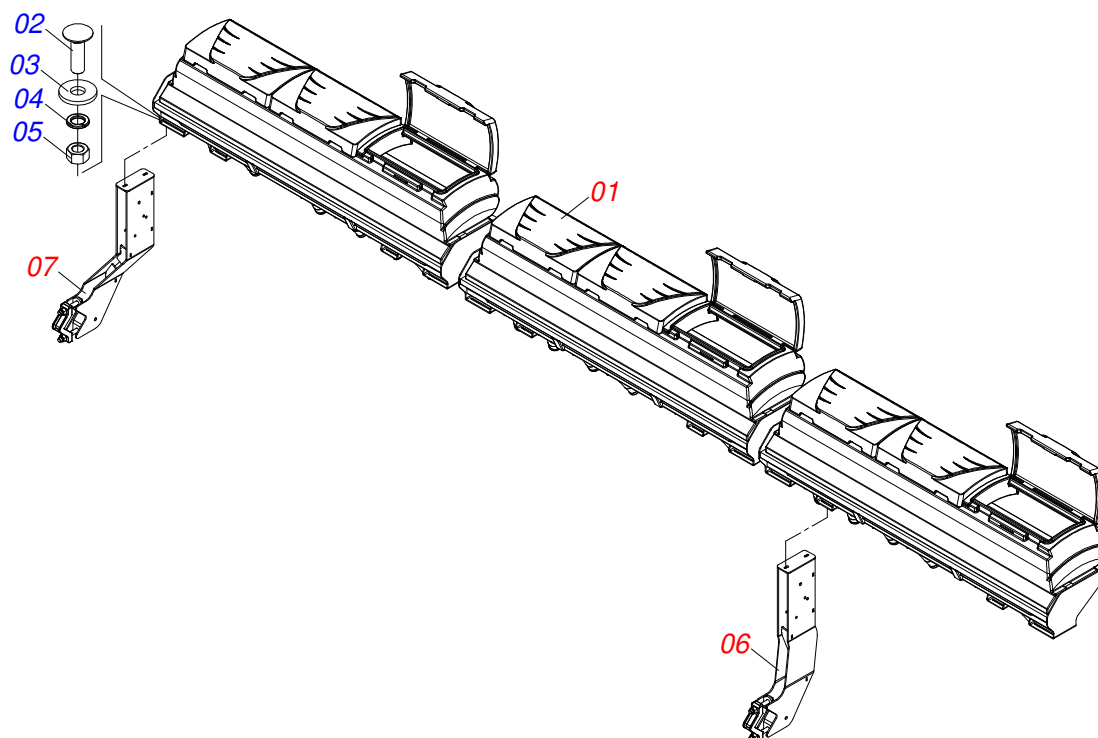


Item	Code	Description	See page	QT
01	0521052697	ASSEMBLY CSU C3 3 BOXES 8160	152	01
02	0501010942	3/8" X 1-1/4" BOLT		12
03	0501010984	FLAT WASHER		12
04	0503010025	3/8" SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0521052687	RH SUPPORT TOWER SILO	154	03
07	0521051931	LH SUPPORT TOWER SILO	155	03

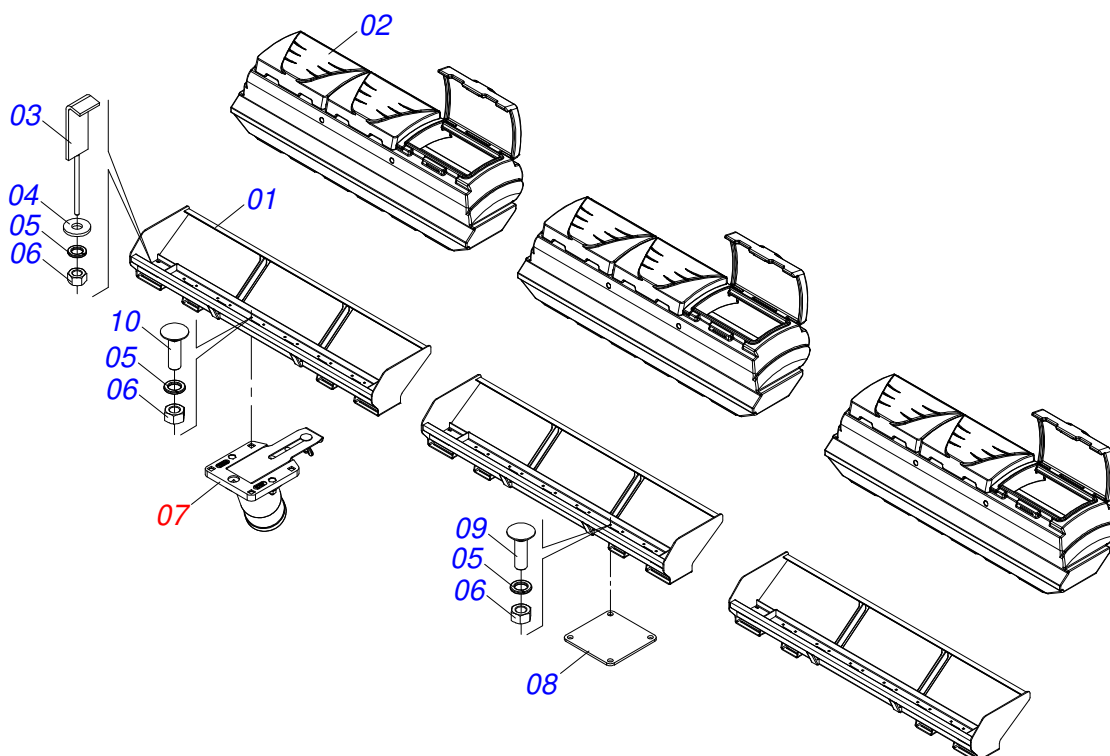


Item	Code	Description	See page	QT
01	0521064874	07 MOUTHS SUPPORT BOX SEED ONLY		03
02	0503062165	HOPPER FERTILIZER 07 MOUTHS FRONT		03
03	0521063401	SEED BOX ONLY FIXING LOCK		06
04	0501010984	FLAT WASHER		06
05	0503010025	3/8" SPRING WASHER		90
06	0503010026	3/8" NUT		90
07	0511057690	3" ARTICULATED SEED CONDUCTOR	153	15
08	0571015773	SUPPORT SEED		06
09	0501011643	3/8 X 1"BOLT		24
10	0501010942	3/8" X 1-1/4" BOLT		60

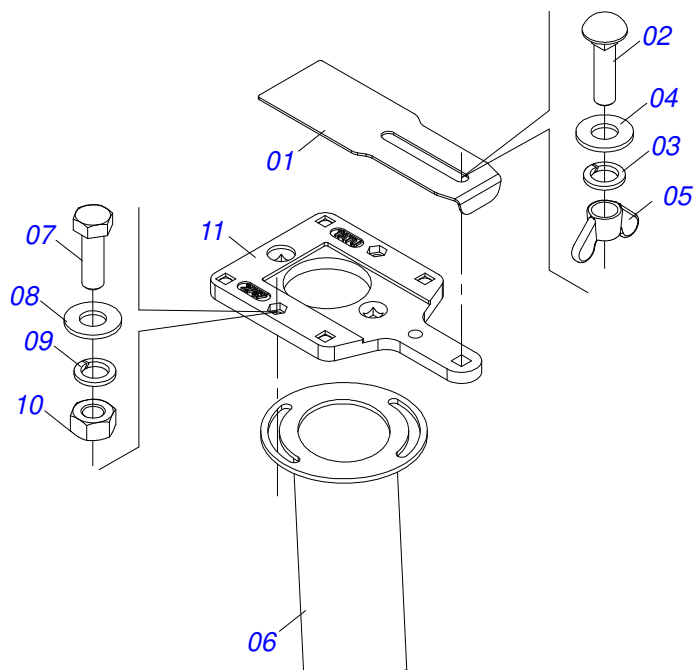


Item	Code	Description	See page	QT
01	0571015779	COVER SUPPORT CONDUCTOR ARTICULATION	01	
02	0501010942	3/8" X 1-1/4" BOLT	01	
03	0503010025	3/8" SPRING WASHER	01	
04	0501010984	FLAT WASHER	01	
05	0503010209	3/8" UNC BUTTERFLY NUT	01	
06	0521066332	CONDUCTOR WITH FLANGE	01	
07	0503010371	5/16" X 1" BOLT	02	
08	0501010694	FLAT WASHER	02	
09	0503010179	LOCK WASHER	02	
10	0503010337	5/16" NUT	02	
11	0502012767	FIXER CONDUCTOR SEED CSU SUPPORT	01	

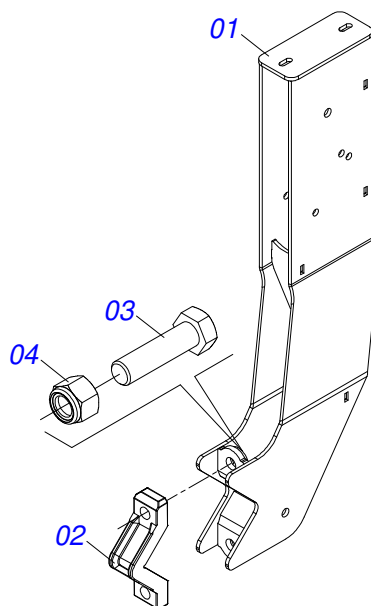


Item	Code	Description	See page	QT
01	0521066206	RH SUPPORT TOWER SILO		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

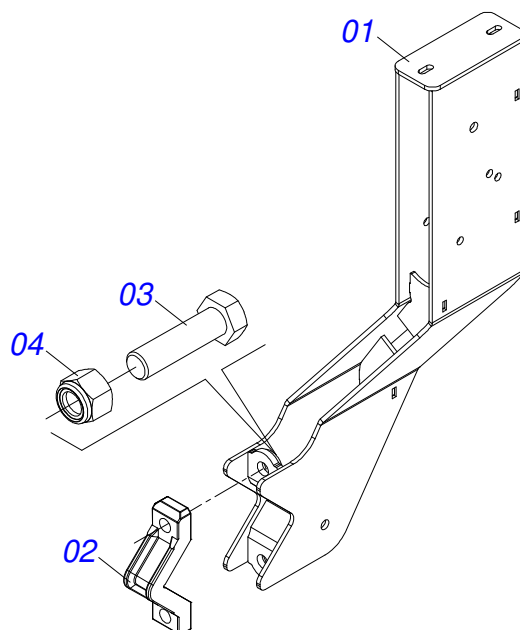


Item	Code	Description	See page	QT
01	0521066207	LH SUPPORT TOWER SILO		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

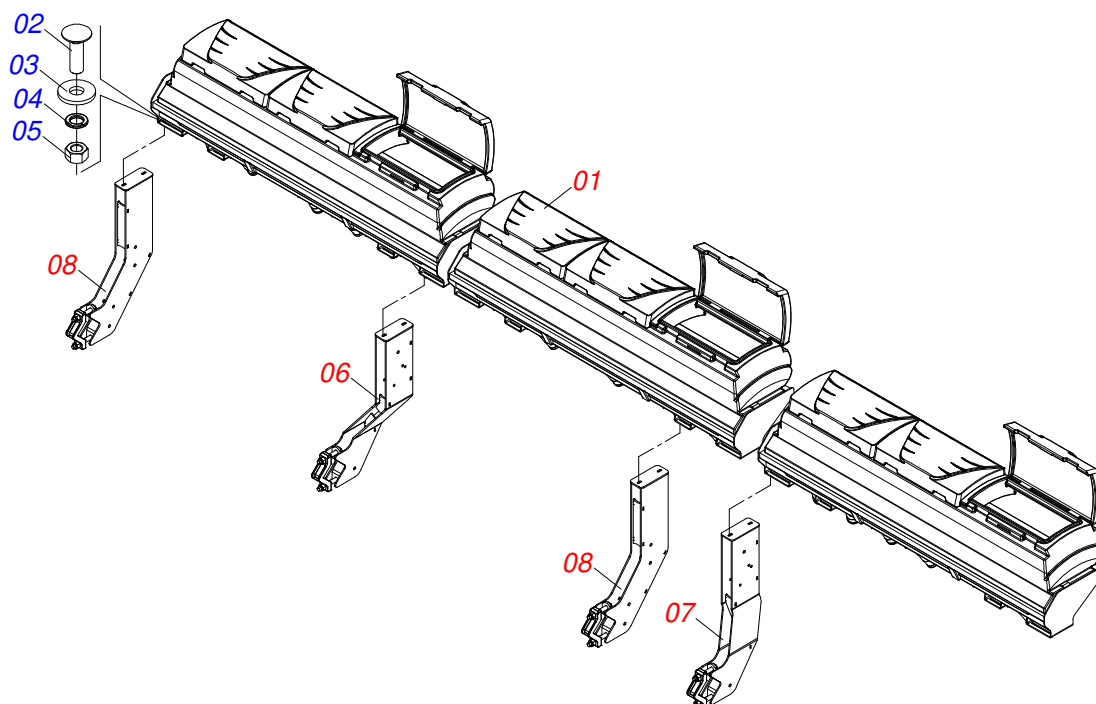


Item	Code	Description	See page	QT
01	0511058397	ASSEMBLY CSU C3 3BOX 7B WITH 17 C 7860	157	01
02	0501010942	3/8" X 1-1/4" BOLT		12
03	0501010984	FLAT WASHER		12
04	0503010025	3/8" SPRING WASHER		12
05	0503010026	3/8" NUT		12
06	0521051931	LH SUPPORT TOWER SILO	155	01
07	0521052687	RH SUPPORT TOWER SILO	154	01
08	0521051927	TOWER SUPPORT HOPPER	158	04

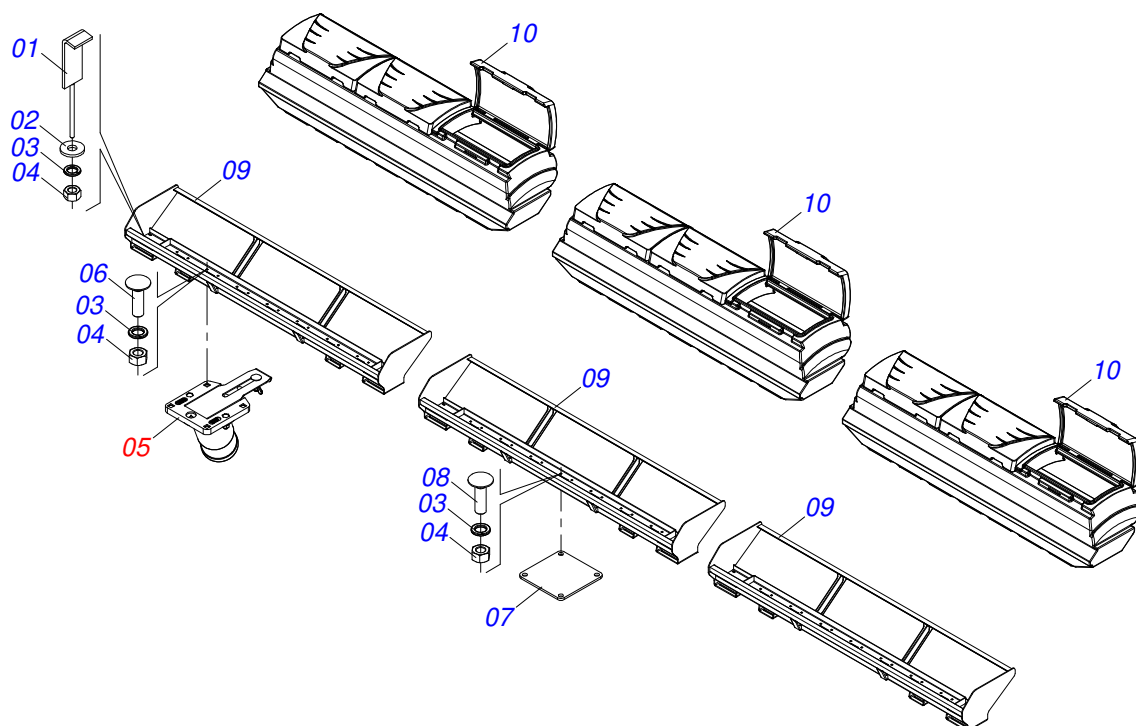


Item	Code	Description	See page	QT
01	0521063401	SEED BOX ONLY FIXING LOCK		06
02	0501010984	FLAT WASHER		06
03	0503010025	3/8" SPRING WASHER		90
04	0503010026	3/8" NUT		90
05	0511057690	3" ARTICULATED SEED CONDUCTOR	153	17
06	0501010942	3/8" X 1-1/4" BOLT		68
07	0571015773	SUPPORT SEED		04
08	0501011643	3/8 X 1"BOLT		16
09	0521064874	07 MOUTHS SUPPORT BOX SEED ONLY		03
10	0503062165	HOPPER FERTILIZER 07 MOUTHS FRONT		03

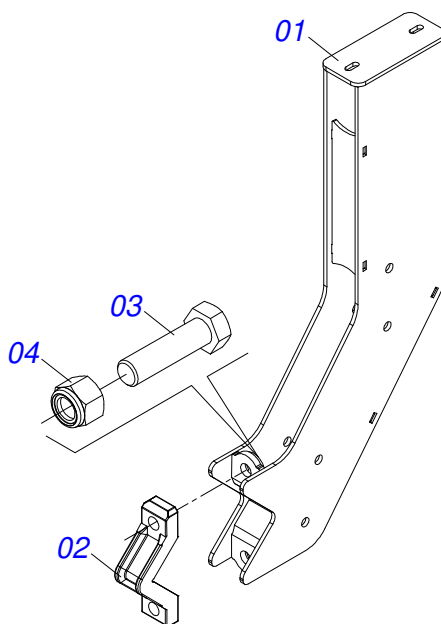


Item	Code	Description	See page	QT
01	0521066208	SUPPORT TOWER SILO		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

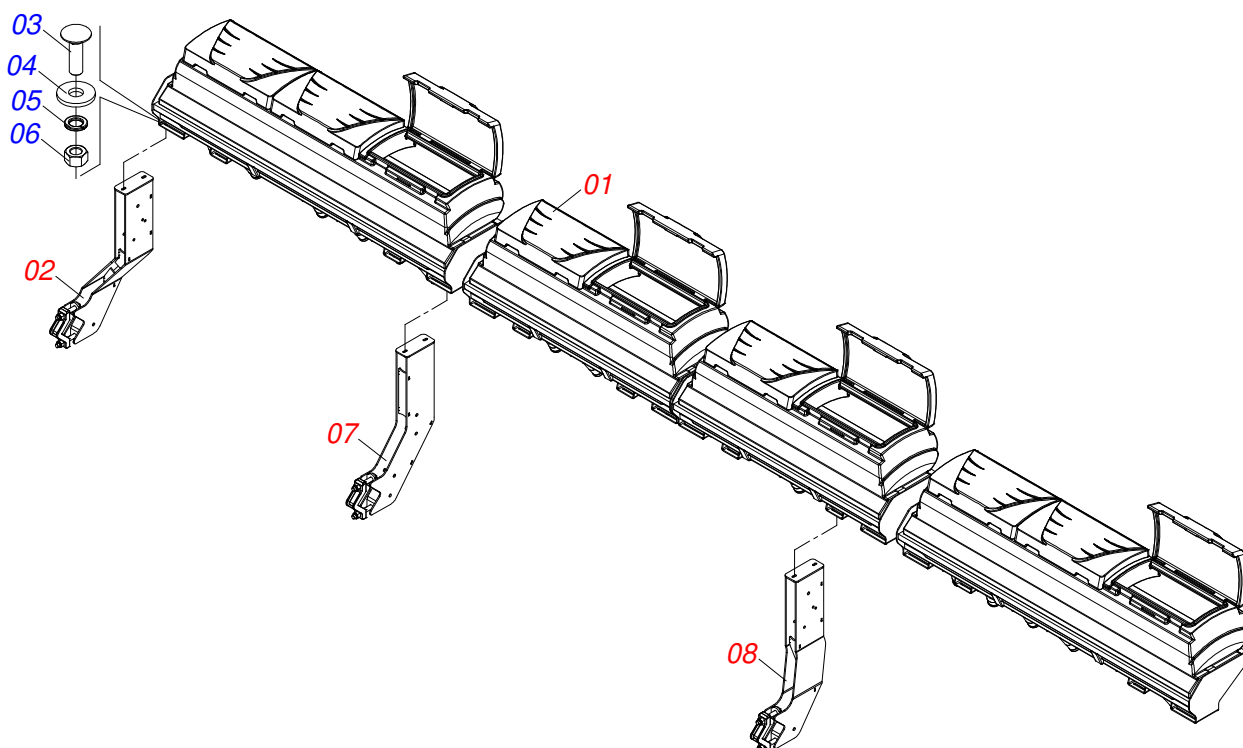


Item	Code	Description	See page	QT
01	0511058578	ASSEMBLY CSU C3 - 2BOXES 7/6 - 2 BOXES 5/3	160	01
02	0521051931	LH SUPPORT TOWER SILO	155	02
03	0501010942	3/8" X 1-1/4" BOLT		16
04	0501010984	FLAT WASHER		16
05	0503010025	3/8" SPRING WASHER		16
06	0503010026	3/8" NUT		16
07	0521051927	TOWER SUPPORT HOPPER	158	04
08	0521052687	RH SUPPORT TOWER SILO	154	02

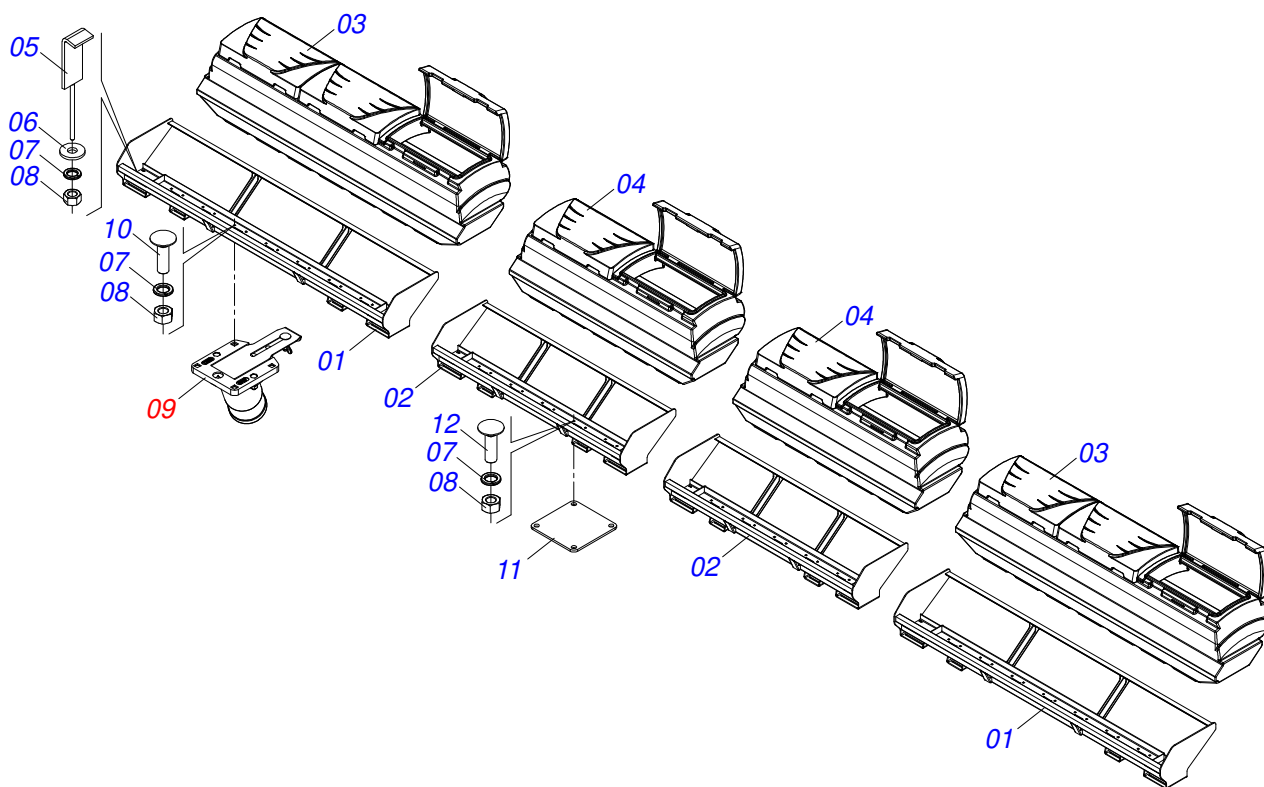


Item	Code	Description	See page	QT
01	0521064874	07 MOUTHS SUPPORT BOX SEED ONLY		02
02	0521064748	05 MOUTHS CSU SUPPORT		02
03	0503062165	HOPPER FERTILIZER 07 MOUTHS FRONT		02
04	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED		02
05	0521063401	SEED BOX ONLY FIXING LOCK		09
06	0501010984	FLAT WASHER		09
07	0503010025	3/8" SPRING WASHER		105
08	0503010026	3/8" NUT		105
09	0511057690	3" ARTICULATED SEED CONDUCTOR	153	18
10	0501010942	3/8" X 1-1/4" BOLT		72
11	0571015773	SUPPORT SEED		06
12	0501011643	3/8 X 1"BOLT		24

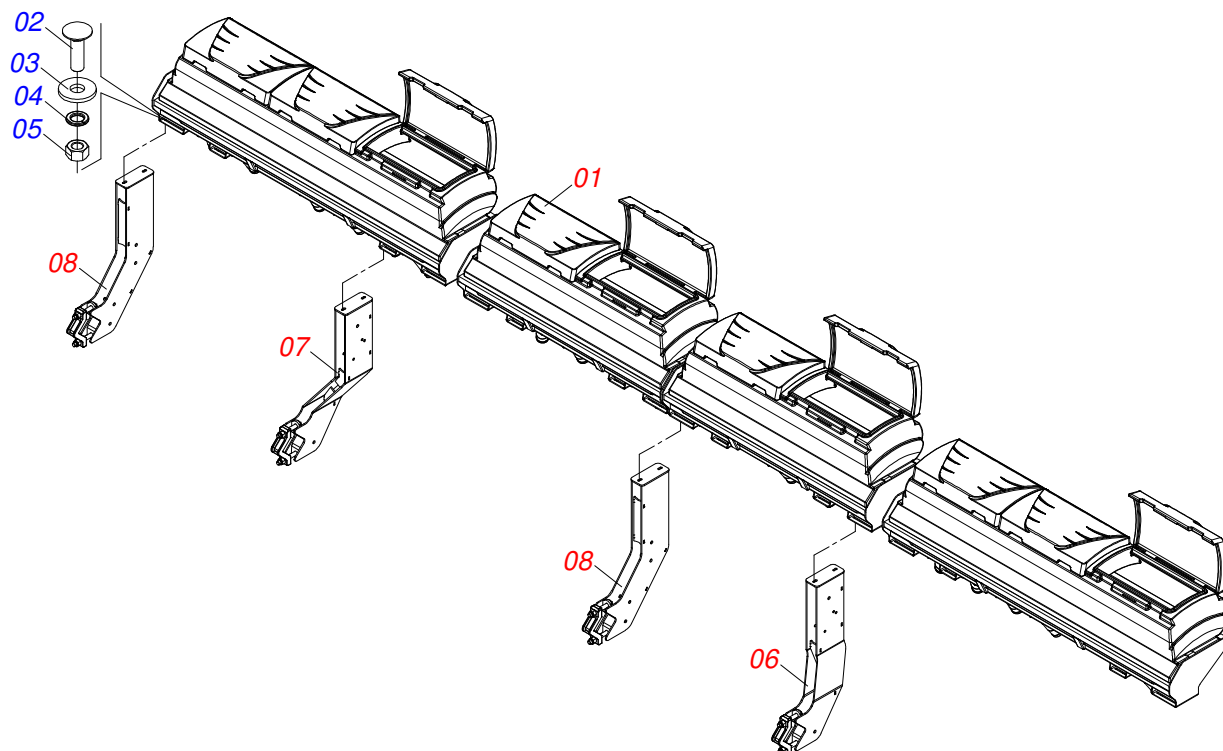


Item	Code	Description	See page	QT
01	0521052695	ASSEMBLY CSU C3 2BOXES 7/6-1BOX 5/3-1BOX 162		01
02	0501010942	3/8" X 1-1/4" BOLT		16
03	0501010984	FLAT WASHER		16
04	0503010025	3/8" SPRING WASHER		16
05	0503010026	3/8" NUT		16
06	0521052687	RH SUPPORT TOWER SILO	154	03
07	0521051931	LH SUPPORT TOWER SILO	155	03
08	0521051927	TOWER SUPPORT HOPPER	158	02

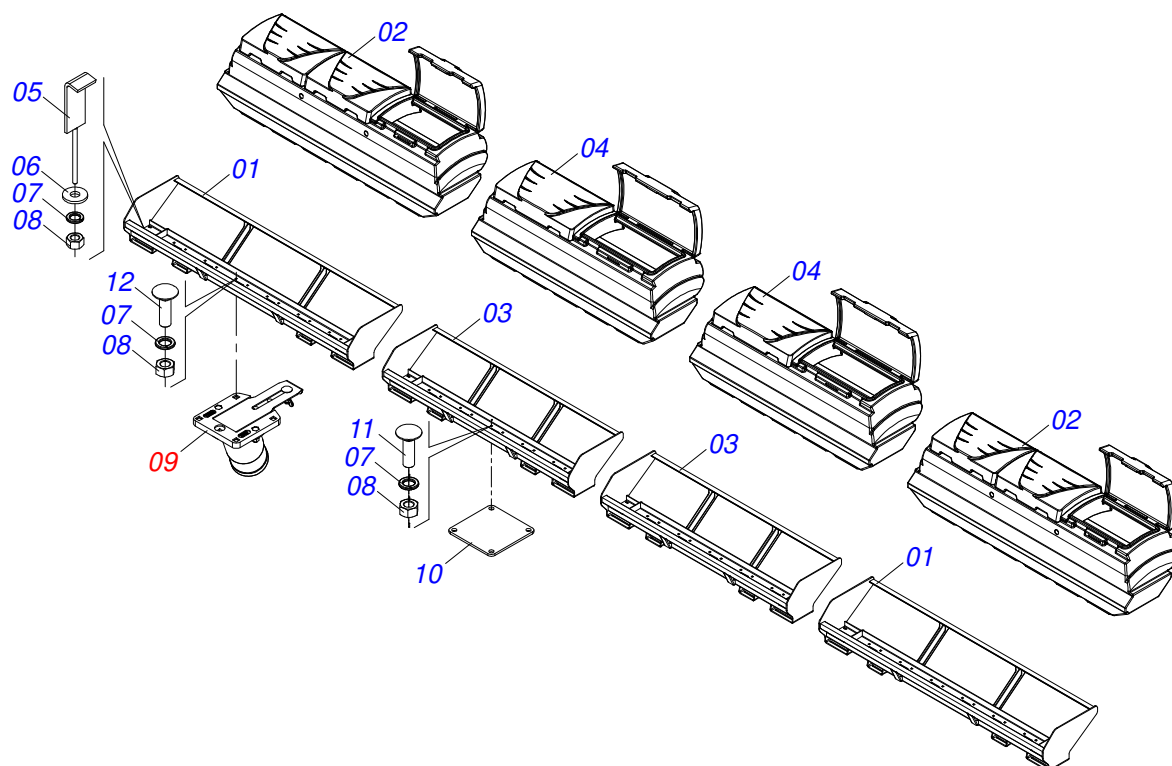


Item	Code	Description	See page	QT
01	0521064874	07 MOUTHS SUPPORT BOX SEED ONLY		02
02	0503062165	HOPPER FERTILIZER 07 MOUTHS FRONT		02
03	0521064748	05 MOUTHS CSU SUPPORT		02
04	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED		02
05	0521063401	SEED BOX ONLY FIXING LOCK		09
06	0501010984	FLAT WASHER		09
07	0503010025	3/8" SPRING WASHER		105
08	0503010026	3/8" NUT		105
09	0511057690	3" ARTICULATED SEED CONDUCTOR	153	19
10	0571015773	SUPPORT SEED		05
11	0501011643	3/8 X 1" BOLT		20
12	0501010942	3/8" X 1-1/4" BOLT		76

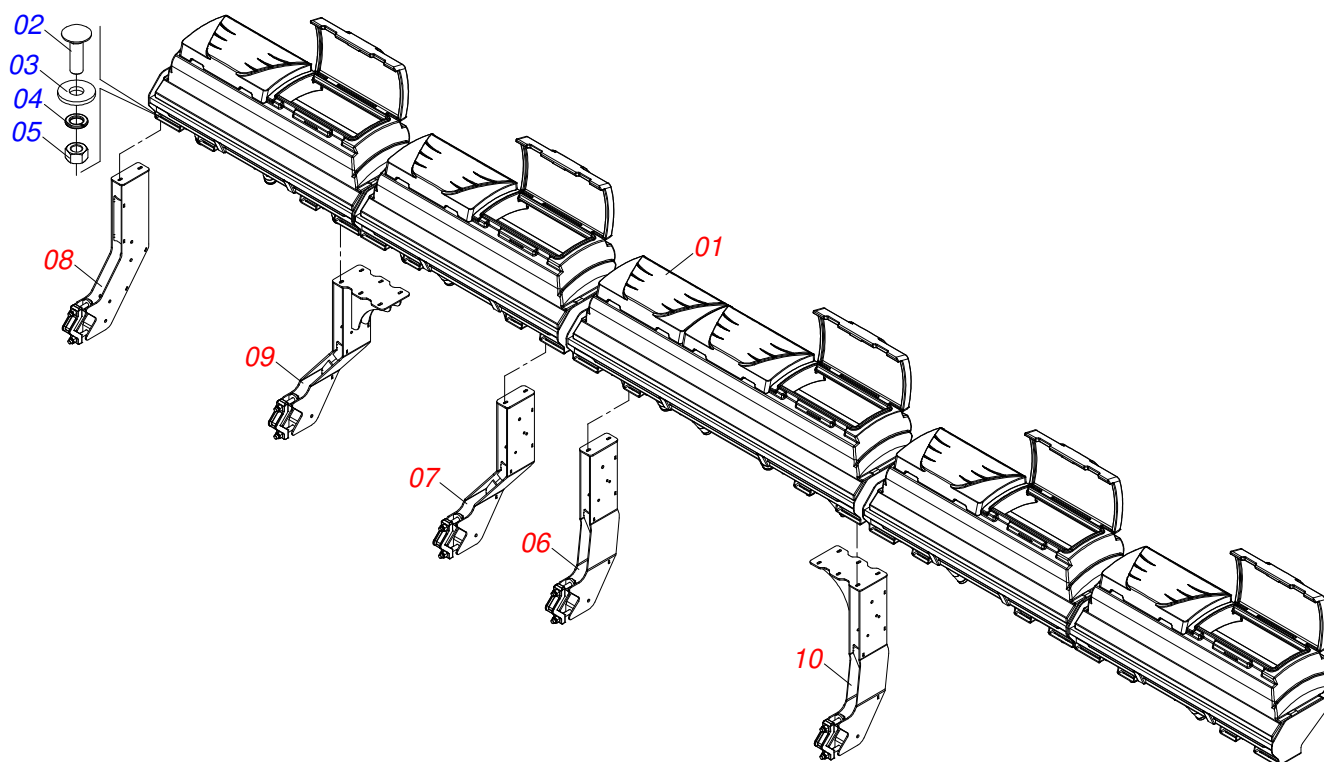


Item	Code	Description	See page	QT
01	0521052693	ASSEMBLY CSU C3 2BOXES 5/4 - 2BOXES 5/3 - 164 1BOX 7/6 9960		01
02	0501010942	3/8" X 1-1/4" BOLT		20
03	0501010984	FLAT WASHER		20
04	0503010025	3/8" SPRING WASHER		20
05	0503010026	3/8" NUT		20
06	0521052687	RH SUPPORT TOWER SILO	154	01
07	0521051931	LH SUPPORT TOWER SILO	155	01
08	0521051927	TOWER SUPPORT HOPPER	158	04
09	0521051929	SIDE FIXED TOWER LEFT SILO SUPPORT WITH SCREW	165	01
10	0521051928	FIXED TOWER SIDE RIGHT SILO SUPPORT WITH SCREW	166	01

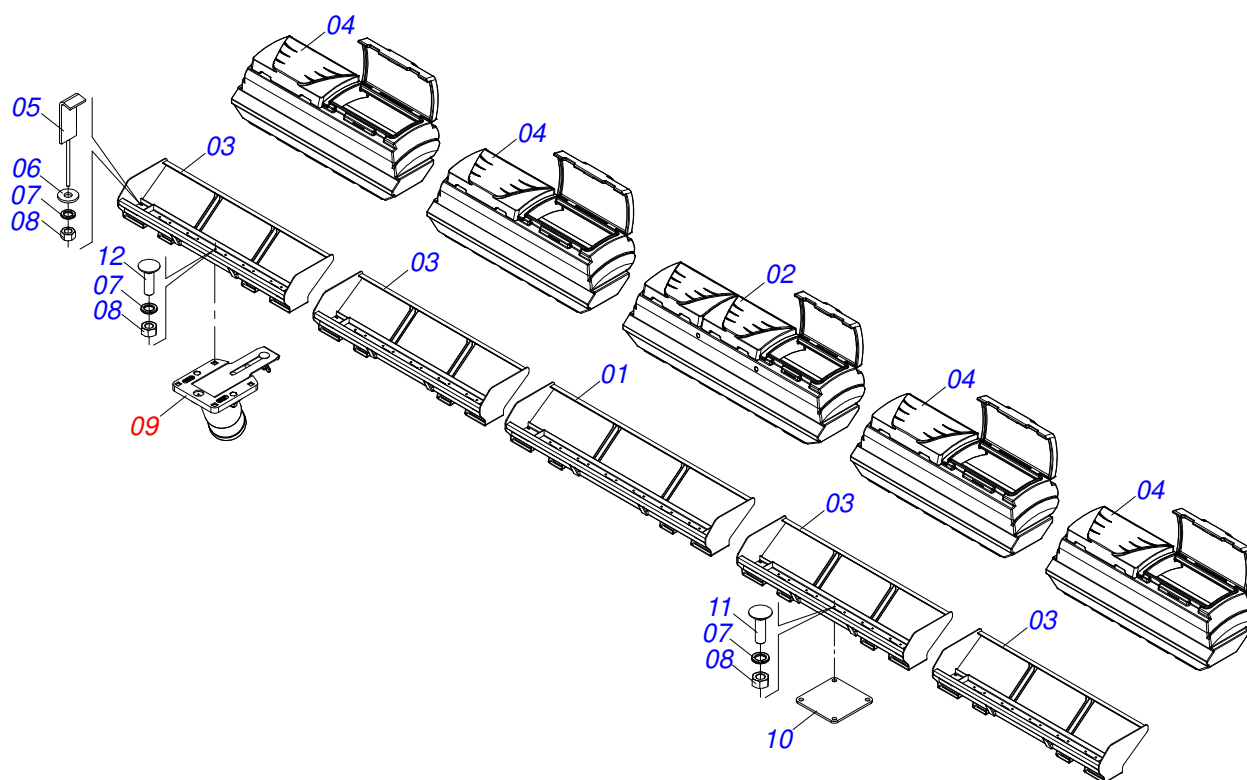


Item	Code	Description	See page	QT
01	0521064874	07 MOUTHS SUPPORT BOX SEED ONLY		01
02	0503062165	HOPPER FERTILIZER 07 MOUTHS FRONT		01
03	0521064748	05 MOUTHS CSU SUPPORT		04
04	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED		04
05	0521063401	SEED BOX ONLY FIXING LOCK		10
06	0501010984	FLAT WASHER		10
07	0503010025	3/8" SPRING WASHER		118
08	0503010026	3/8" NUT		118
09	0511057690	3" ARTICULATED SEED CONDUCTOR	153	20
10	0571015773	SUPPORT SEED		07
11	0501011643	3/8 X 1" BOLT		28
12	0501010942	3/8" X 1-1/4" BOLT		80

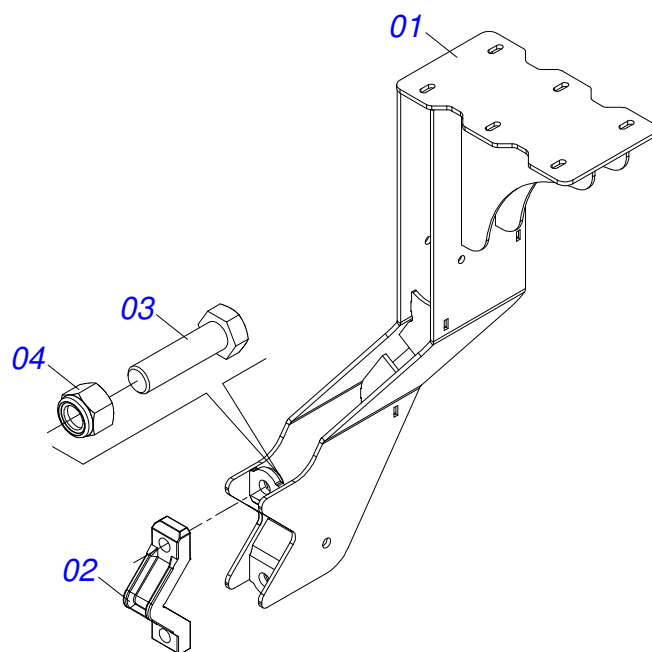


Item	Code	Description	See page	QT
01	0521066205	TOWER SUPPORT LEFT SIDE FIXER SILO		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

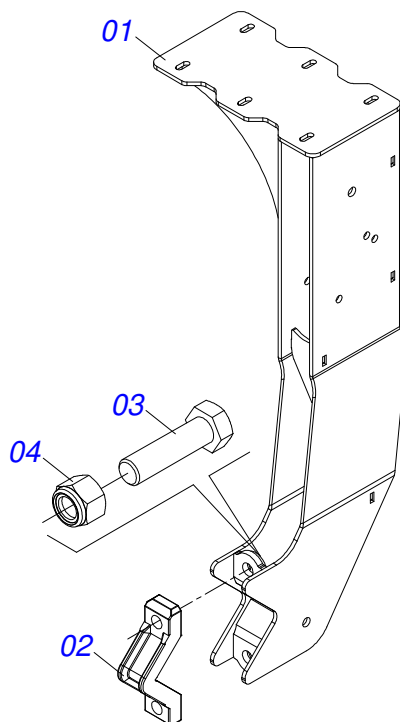


Item	Code	Description	See page	QT
01	0521066204	TOWER SUPPORT LEFT SIDE FIXER SILO		01
02	0502010175	HITCH CLAMP		01
03	0503011084	3/4" X 5" BOLT		02
04	0503011075	3/4" UNC NUT		02

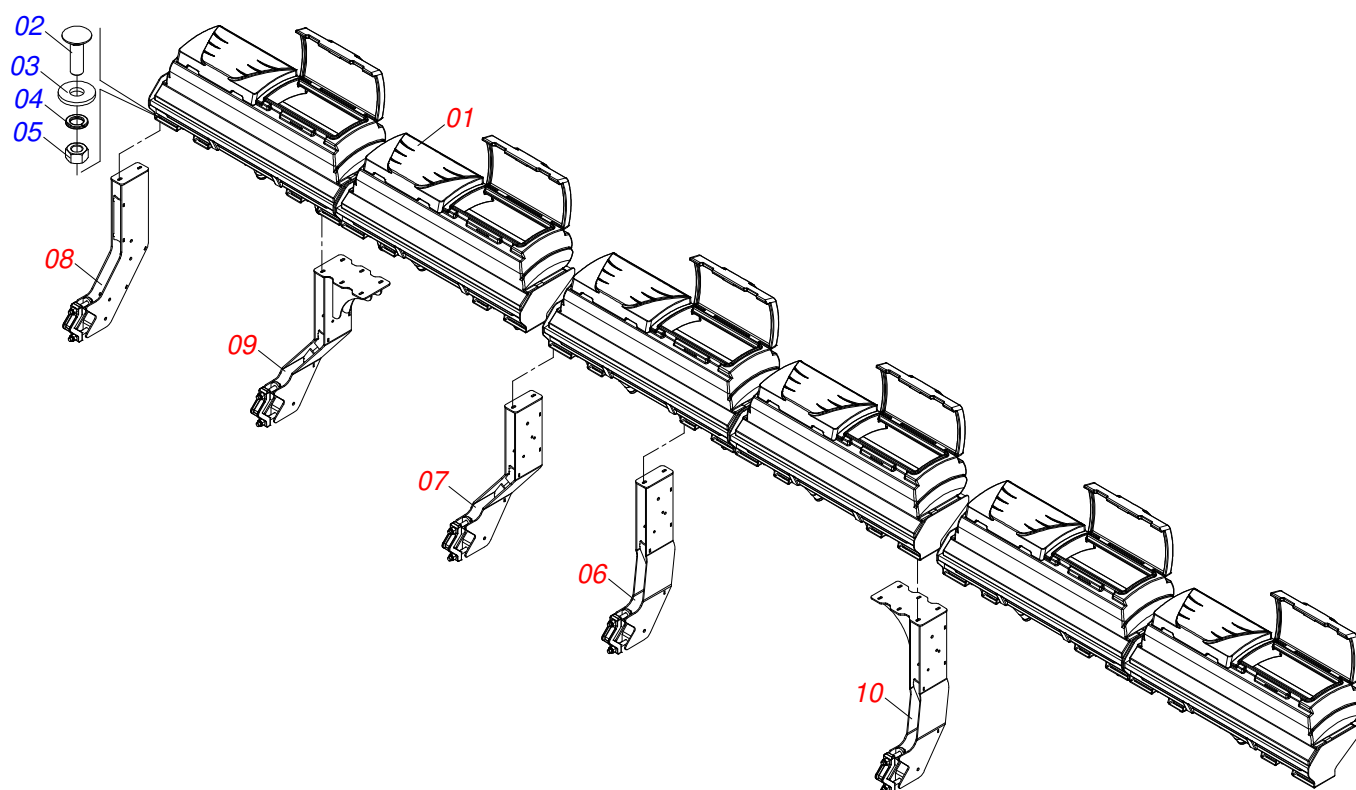


Item	Code	Description	See page	QT
01	0521051061	ASSEMBLY CSU C3 - 2BOXES 5/3 - 4BOXES 5/4 10985	168	01
02	0501010942	3/8" X 1-1/4" BOLT		24
03	0501010984	FLAT WASHER		24
04	0503010025	3/8" SPRING WASHER		24
05	0503010026	3/8" NUT		24
06	0521052687	RH SUPPORT TOWER SILO	154	02
07	0521051931	LH SUPPORT TOWER SILO	155	02
08	0521051927	TOWER SUPPORT HOPPER	158	04
09	0521051929	SIDE FIXED TOWER LEFT SILO SUPPORT WITH SCREW	165	01
10	0521051928	FIXED TOWER SIDE RIGHT SILO SUPPORT WITH SCREW	166	01

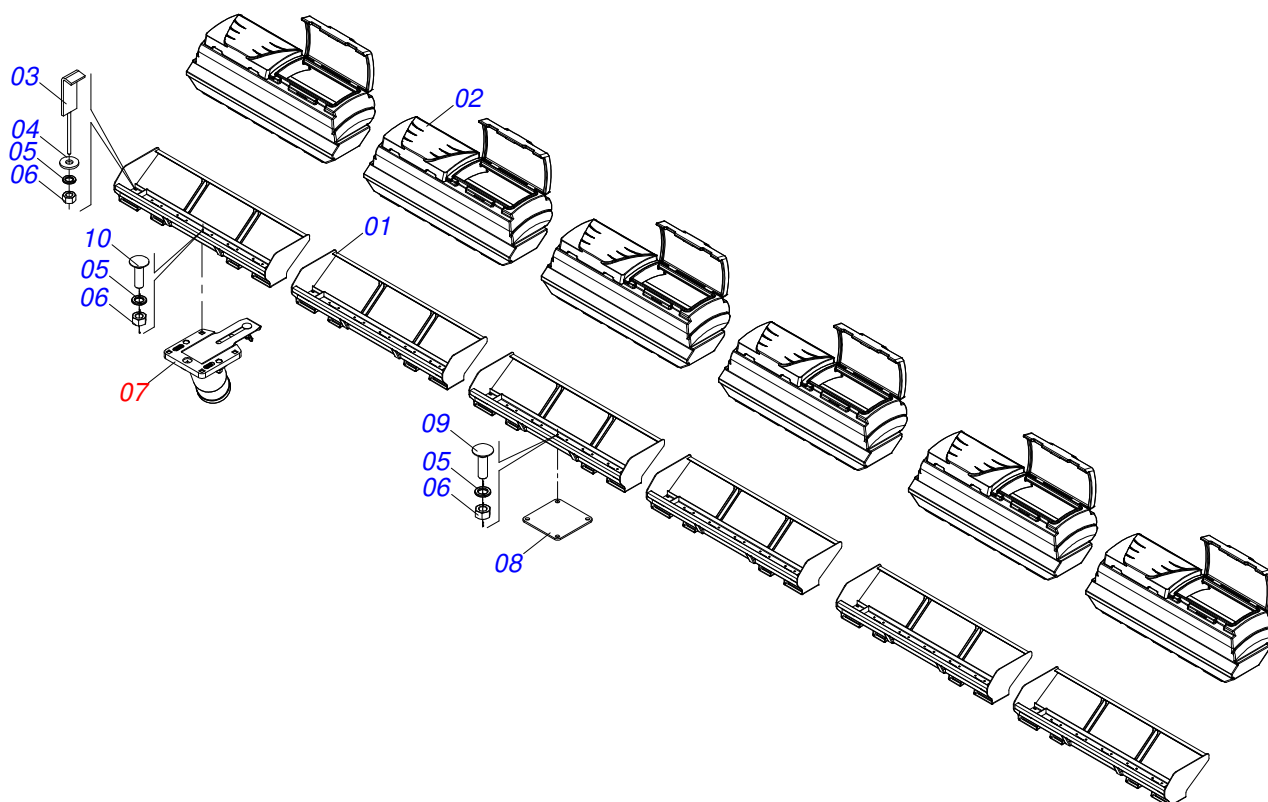


Item	Code	Description	See page	QT
01	0521064748	05 MOUTHS CSU SUPPORT		06
02	0503061987	SILO FERTILIZER 05 MOUTHS FRONT MOUNTED		06
03	0521063401	SEED BOX ONLY FIXING LOCK		12
04	0501010984	FLAT WASHER		12
05	0503010025	3/8" SPRING WASHER		132
06	0503010026	3/8" NUT		132
07	0511057690	3" ARTICULATED SEED CONDUCTOR	153	22
08	0571015773	SUPPORT SEED		08
09	0501011643	3/8 X 1"BOLT		32
10	0501010942	3/8" X 1-1/4" BOLT		88

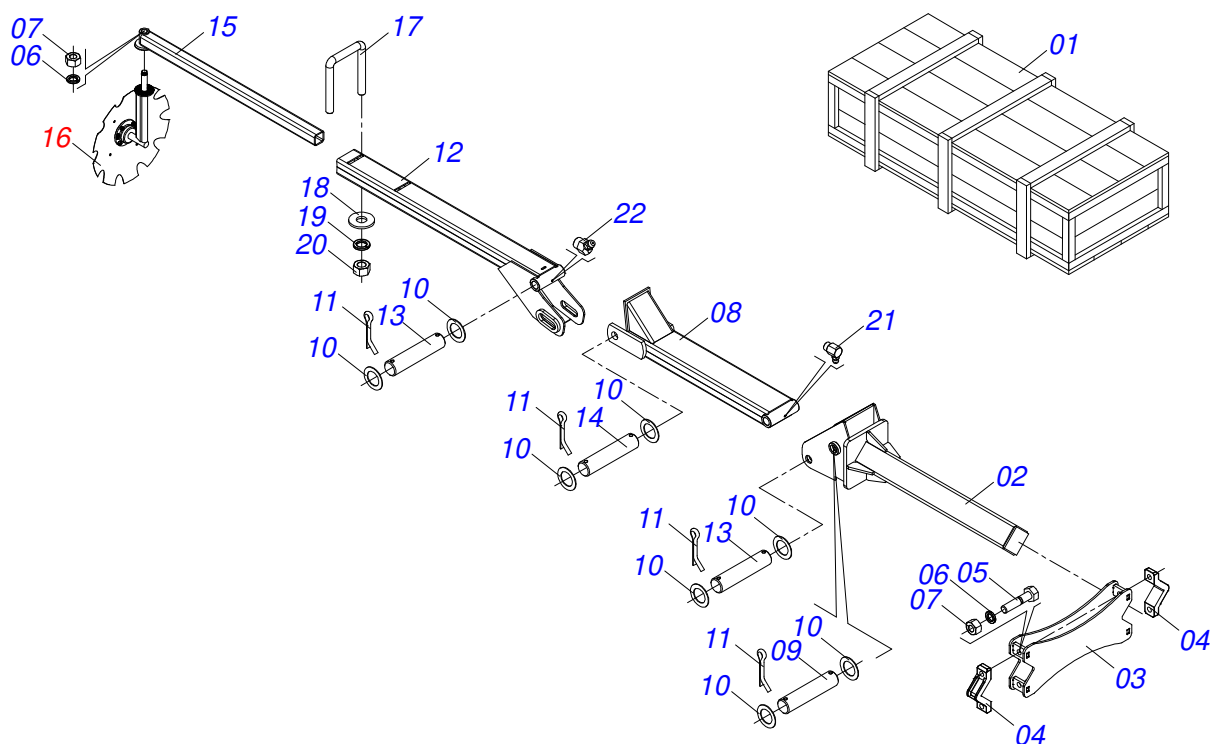

Item	Code	Description	See page	QT
01	0501100045	WOODEN BOX	01	
02	0511061022	ROW MARKER SUPPORT	02	
03	0511066119	MARKER SUPP FIXER FASTENER	04	
04	0502010175	HITCH CLAMP	08	
05	0501010216	3/4" X 4-1/2" BOLT	16	
06	0503010023	3/4" SPRING WASHER	16	
07	0503010014	3/4" NUT	16	
08	0511060013	ROW MARKER ARM	02	
09	0521013347	1.1/4" X 8.4" AXLE	02	
10	0501019435	32 X 50 X 1.5 FLAT WASHER	16	
11	0503010523	1/4" X 2" COTTERPIN	16	
12	0511060014	ROW MARKER ARM	02	
13	0521011142	1.1/4" X 7.5" AXLE	04	
14	0521011141	1.1/4" X 6.5" AXLE	02	
15	0521061790	1750 TURNBUCKLE	02	
16	0521055204	ROW MARKER DISC	02	
17	0521012324	1/2" X 3.2"X 2.54" FASTENER	04	
18	0511017302	FLAT WASHER	08	
19	0503010019	1/2" SPRING WASHER	08	
20	0503010060	1/2" NUT	08	
21	0503010004	1890 GREASE FITTING	02	
22	0503010003	1845 GREASE FITTING	02	

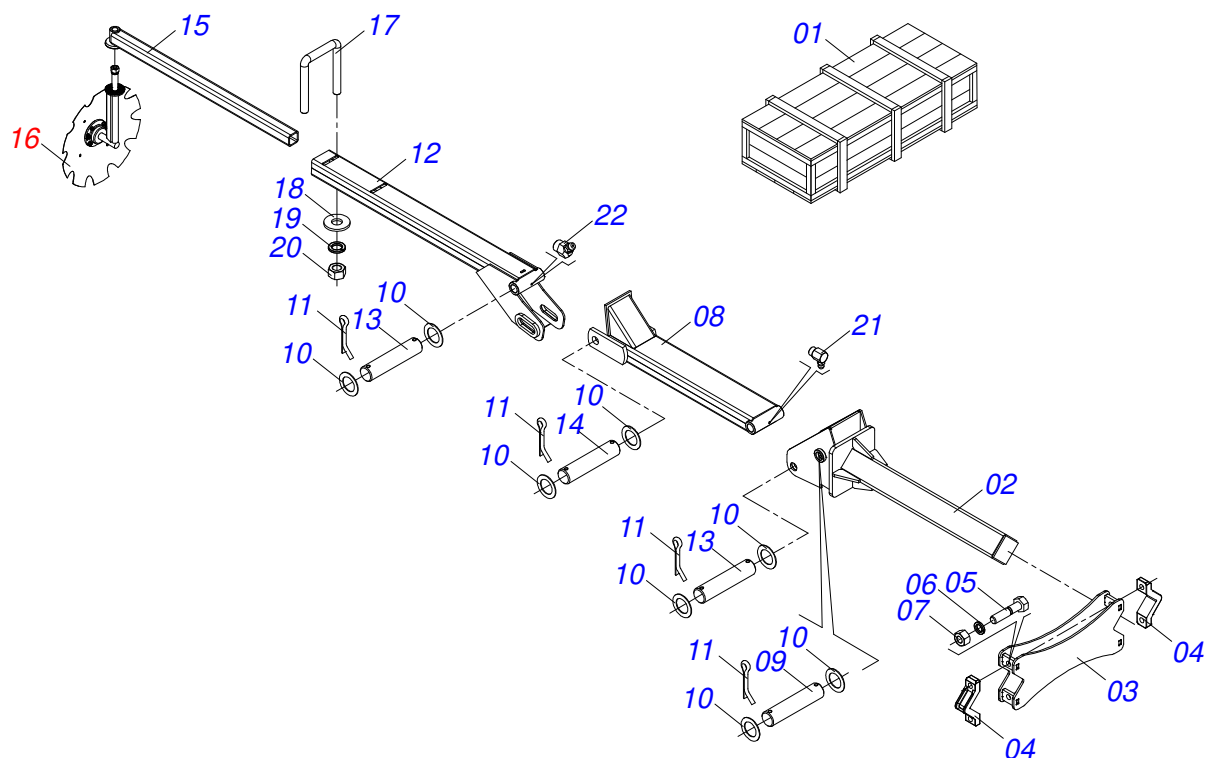


Item	Code	Description	See page	QT
01	0501100045	WOODEN BOX	01	
02	0511061022	ROW MARKER SUPPORT	02	
03	0511066119	MARKER SUPP FIXER FASTENER	04	
04	0502010175	HITCH CLAMP	08	
05	0501010216	3/4" X 4-1/2" BOLT	16	
06	0503010023	3/4" SPRING WASHER	16	
07	0503010014	3/4" NUT	16	
08	0511060013	ROW MARKER ARM	02	
09	0521013347	1.1/4" X 8.4" AXLE	02	
10	0501019435	32 X 50 X 1.5 FLAT WASHER	16	
11	0503010523	1/4" X 2" COTTERPIN	16	
12	0511060014	ROW MARKER ARM	02	
13	0521011142	1.1/4" X 7.5" AXLE	04	
14	0521011141	1.1/4" X 6.5" AXLE	02	
15	0521064307	EXTENSOR 2400 DOUBLE HEAD	02	
16	0521055204	ROW MARKER DISC	02	
17	0521012324	1/2" X 3.2" X 2.54" FASTENER	04	
18	0511017302	FLAT WASHER	08	
19	0503010019	1/2" SPRING WASHER	08	
20	0503010060	1/2" NUT	08	
21	0503010004	1890 GREASE FITTING	02	
22	0503010003	1845 GREASE FITTING	02	

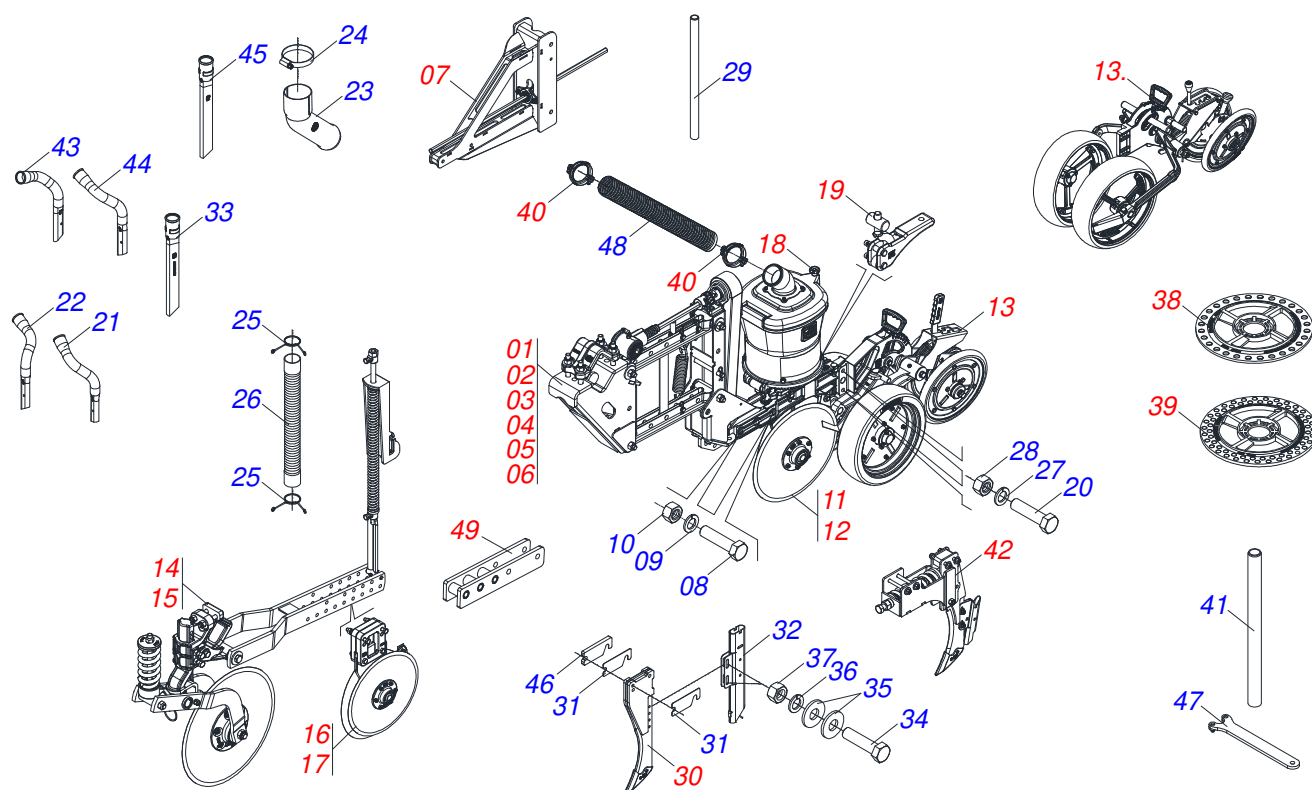

Item	Code	Description	See page	QT
01	0521053227	FRONT LEFT SHORT SEED ROW	172	01
02	0521053230	FRONT RIGHT SHORT SEED ROW	179	01
03	0521053228	FRONT LEFT LONG SEED ROW	181	01
04	0521053229	FRONT RIGHT LONG SEED ROW	182	01
05	0521054737	FRONT SEMI-ASSEMBLED LONG LEFT SEED ROW	183	01
06	0521054736	FRONT SEMI-ASSEMBLED OF LONG RIGHT SEED LINE	184	01
07	0511059333	SEMI-ASSEMBLED MECHANICAL FRAME	185	01
08	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
09	0503010019	1/2" SPRING WASHER		01
10	0503010060	1/2" NUT		01
11	0521054771	LEFT REAR SEED ROW	190	01
12	0521054770	RIGHT REAR SEED ROW	198	01
13	0521054984	DEPTH/COMPACTOR SYSTEM - SPT	201	01
13.	0521055069	SPACRRA COMPACTOR WHEEL SYSTEM WITHOUT LUBRICATION	212	01
13..	0521055053	DEPTH/COMPACTOR SYSTEM - SPCRR	220	01
14	0521054811	FERTILIZER SHORT LINE	227	01
15	0521054812	LONG FERTILIZER LINE	231	01
16	0521054769	LEFT DDD FERTILIZER WITH SUPPORT	233	01
17	0521054768	RIGHT DDD FERTILIZER WITH SUPPORT	235	01
18	0521059094	SIGMA SOY SINGLE SEED SYSTEM	237	01
19	0511052024	FAST CLOSING SET	240	01
20	0503010905	1/2" X 2-1/4" BOLT		01
21	0503030391	RIGHT FERTILIZER NOZZLE		01
22	0503030392	LEFT FERTILIZER NOZZLE		01
23	0503031050	CURVED CONDUCTOR		01
24	0503010246	CLAMP		01
25	0503031076	2" HOSE CLAMP		01
26	0503031145	2" X 2" X 20" HOSE		01
27	0503010019	1/2" SPRING WASHER		01
28	0503010060	1/2" NUT		01

Item	Code	Description	See page	QT
29	0531013600	PRESS ADJUSTMENT LEVER		01
30	0521053946	SCARING ROD	241	01
31	0511017969	0.1" SPACING PLATE		01
32	0521069127	BOTTOM NOZZLE FERTILIZER		01
33	0503030483	FERTILIZER SOCKET		01
34	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
35	0501010984	FLAT WASHER		01
36	0503010025	3/8" SPRING WASHER		01
37	0503010026	3/8" NUT		01
38	0503063647	SIGMA CORN DISC SET		01
39	0503063648	SIGMA SOY DISC SET		01
40	0521050525	FIXER FERTILIZER CONDUCTOR		01
41	0521018501	TURNBUCKLE LEVER		01
42	0521053947	AUTOMATIC DISARMING ROD	242	01
43	0581010082	FERTILIZER SOCKET RIGHT		01
44	0581010083	FERTILIZER SOCKET LEFT		01
45	0503030520	SEED SOCKET		01
46	0511018662	SPACING PLATE		01
47	0521068982	KEY CASH DISC CUTTING		01
48	0571011730	SEED CONDUCTOR 3" X 1500		01
49	0521057957	FIXED ROD EXTENSION WITH FIXATION	245	01

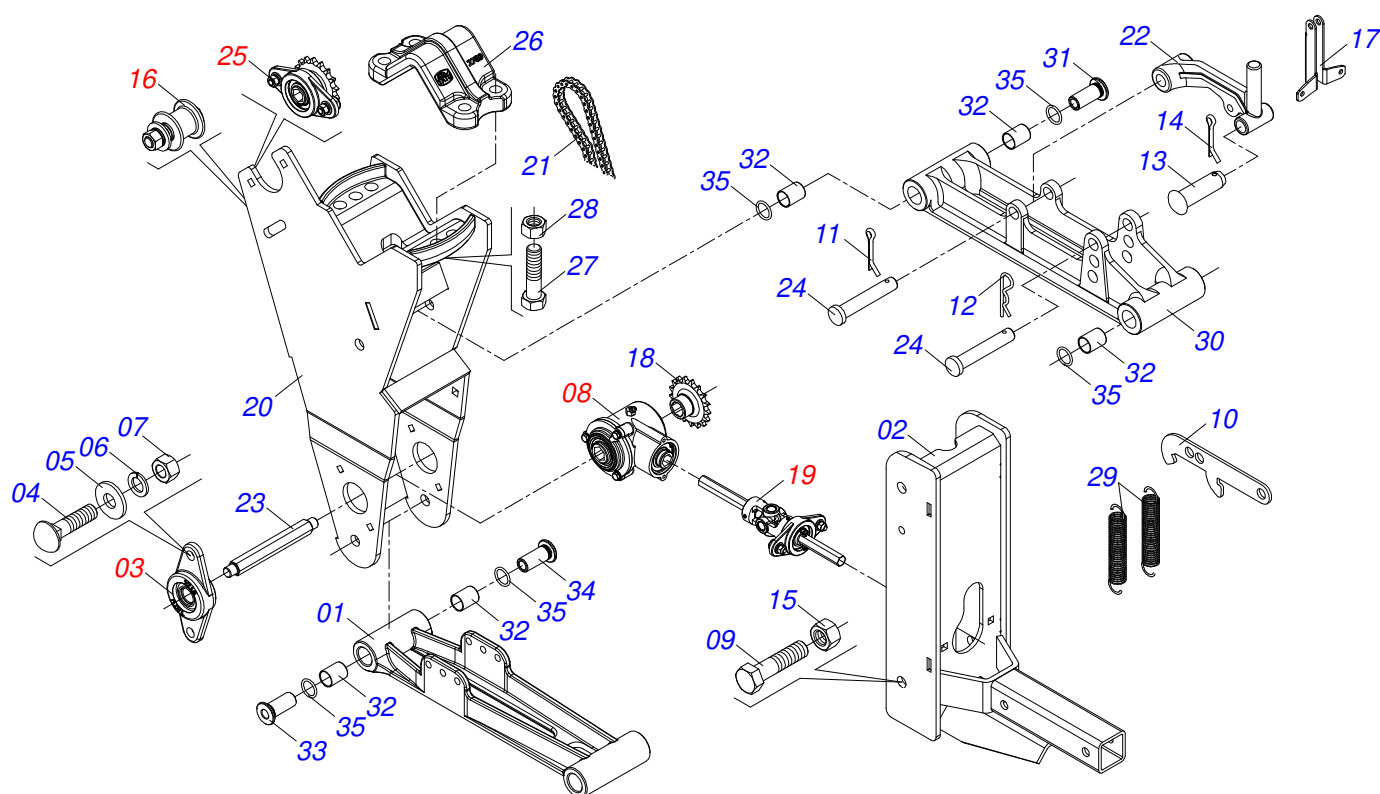


Item	Code	Description	See page	QT
01	0502012910	SEED LINE LOWER ARM WITHOUT LUBRICATION		01
02	0521061427	SHORT SEED ROW FRAME		01
03	0521055213	LINE BEARING SEED	173	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	180	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	174	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	175	01
20	0521064651	LEFT SEED ROW SUPPORT FRONT		01
21	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	177	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED LINE		01
31	0581017624	SPACING SLEEVE		06




FRONT LEFT SHORT SEED ROW

0521053227


Item	Code	Description	See page	QT
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

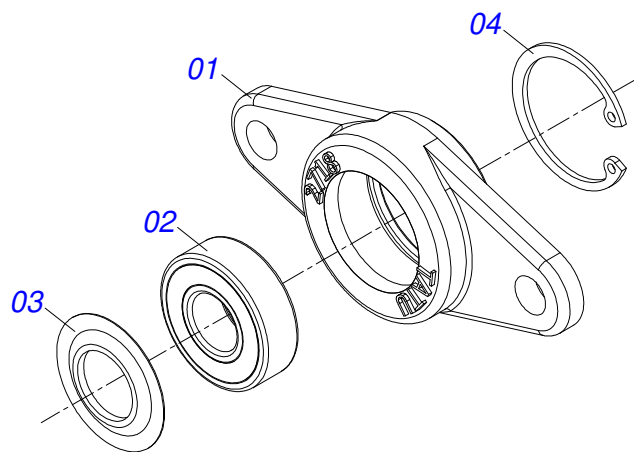


Item	Code	Description	See page	QT
01	0502012718	BEARIN BODY		01
02	0503019355	BEARING 6202 2RS1		01
03	0503017011	SEAL RING		01
04	0503011945	503050 CLAMPING RING (FOR AXLE)		01

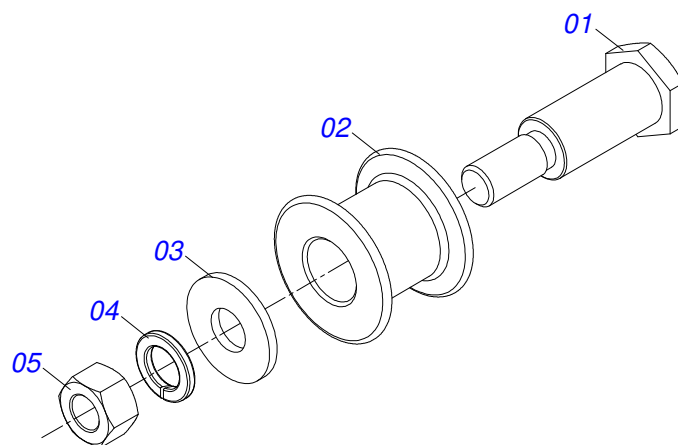


Item	Code	Description	See page	QT
01	0531019398	AXLE TENSIONER CHAIN GEAR BOX		01
02	0503030402	PULLEY		01
03	0511017302	FLAT WASHER		01
04	0503010019	1/2" SPRING WASHER		01
05	0503010060	1/2" NUT		01

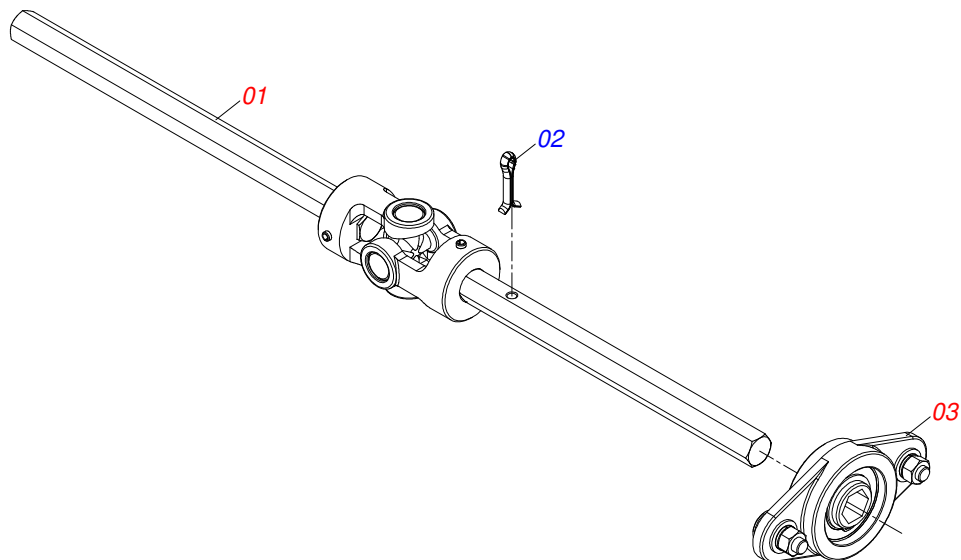


Item	Code	Description	See page	QT
01	0501059326	UNIVERSAL JOINT AXLE	176	01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0521055227	BEARING SHAFT HEX	188	01

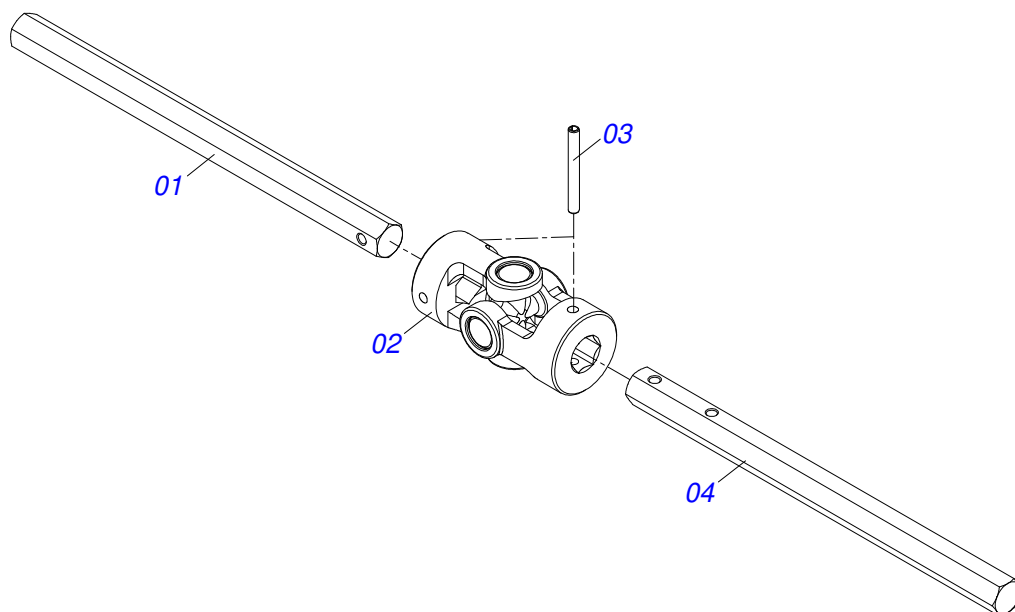


Item	Code	Description	See page	QT
01	0561016322	5/8" HEX AXLE		01
02	0501056296	UNIVERSAL JOINT		01
03	0503011855	0.2" X 1.8" SPRING PIN		02
04	0561014794	350 AXLE HEX		01

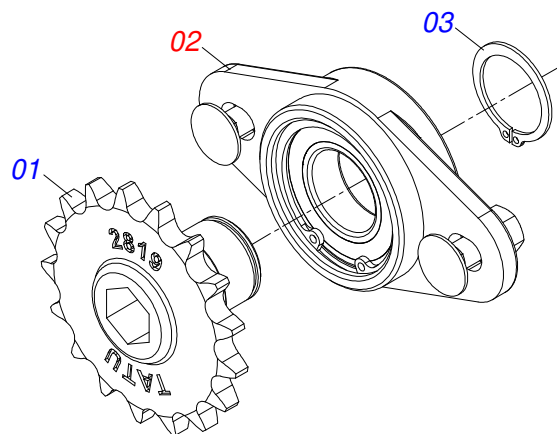

Item	Code	Description	See page	QT
01	0502012819	17Z GEAR WITH HEX HOLE		01
02	0521055220	BEARING FRONT LINE SEED	178	01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		01

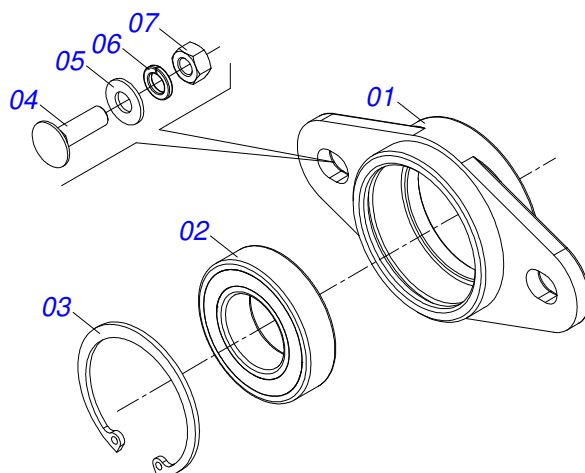

Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503019356	BEARING 6005 2RS1		01
03	0503011105	SEAL RING		01
04	0503011953	5/16" X 1" BOLT		02
05	0501010694	FLAT WASHER		02
06	0503010179	LOCK WASHER		02
07	0503010337	5/16" NUT		02

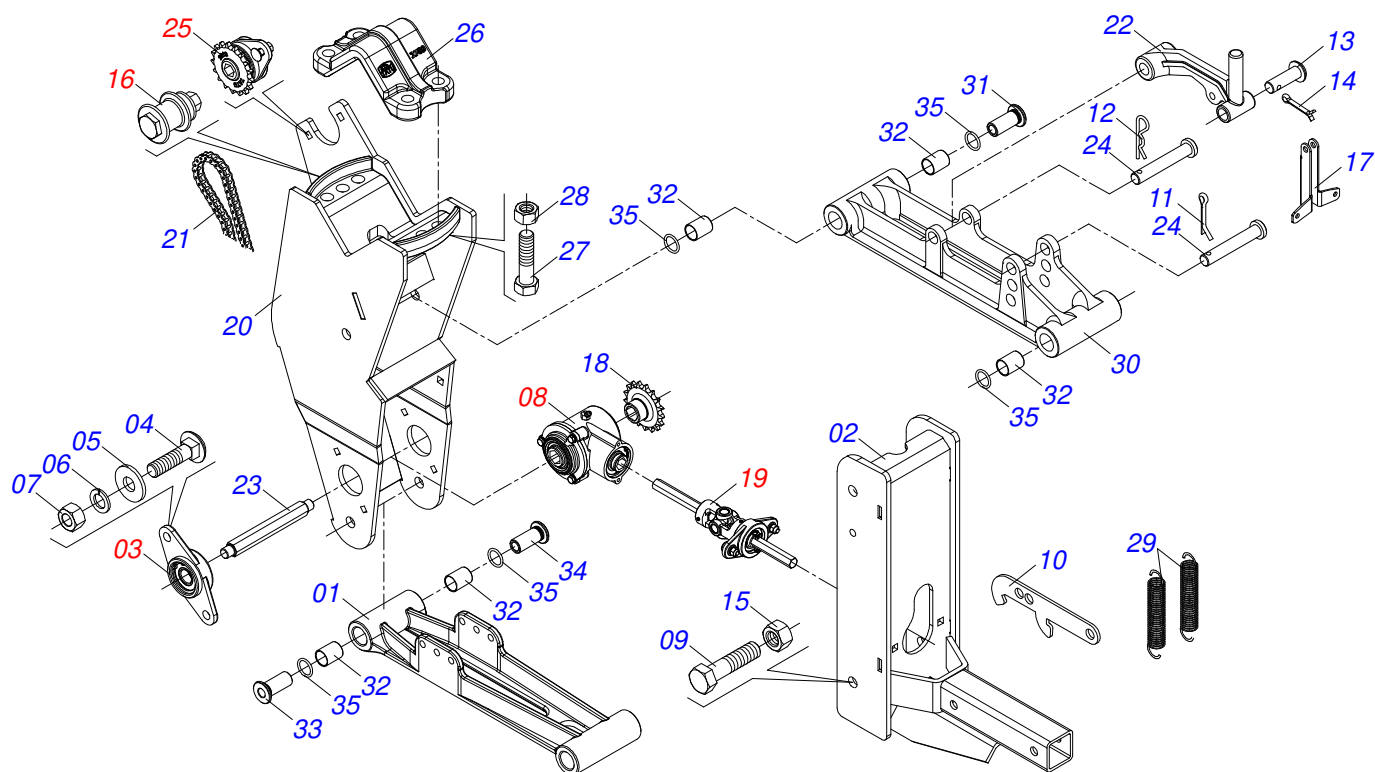


Item	Code	Description	See page	QT
01	0502012910	SEED LINE LOWER ARM WITHOUT LUBRICATION		01
02	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
03	0521055213	LINE BEARING SEED	173	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	180	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	174	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	175	01
20	0521064653	RIGTH SEED ROW SUPPORT FRONT		01
21	0503016014	40-1 CHAIN X 92 LINK + REDUCTION		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	177	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED LINE		01
31	0581017624	SPACING SLEEVE		06




FRONT RIGHT SHORT SEED ROW

0521053230

Item	Code	Description	See page	QT
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

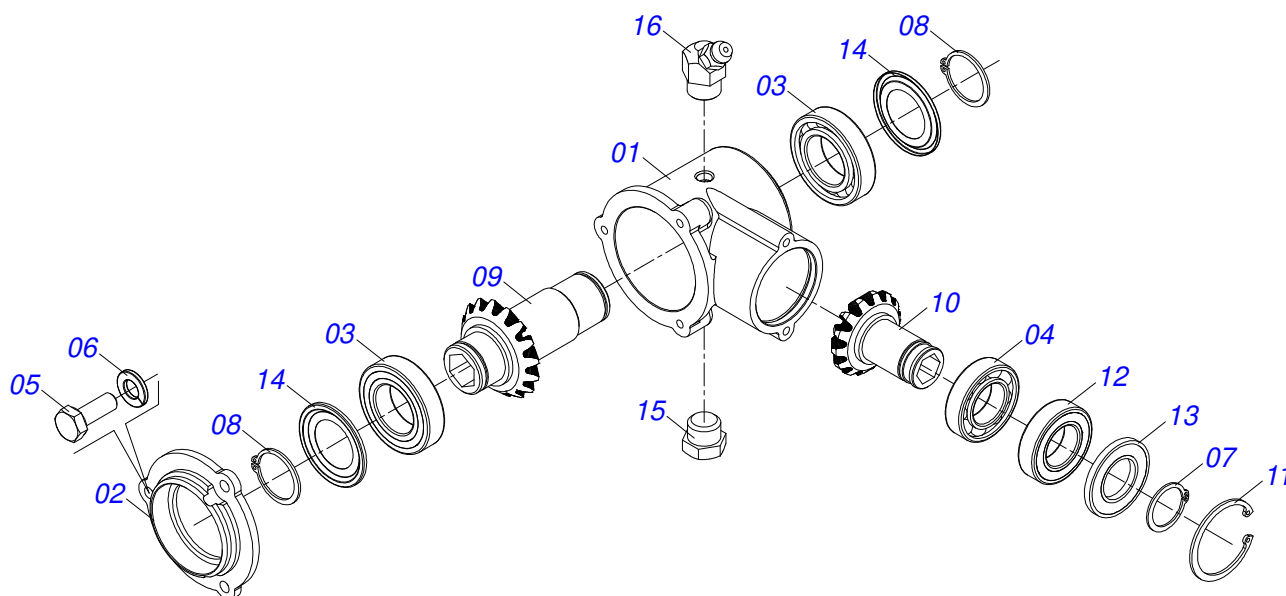

Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	BOX TRANSMISSION COVER		01
03	0503019361	BEARING 6006 RS1		02
04	0503019363	BEARING 6005		01
05	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
06	0503010143	1/4" SPRING WASHER		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503019362	BEARING 6005 RS1		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01

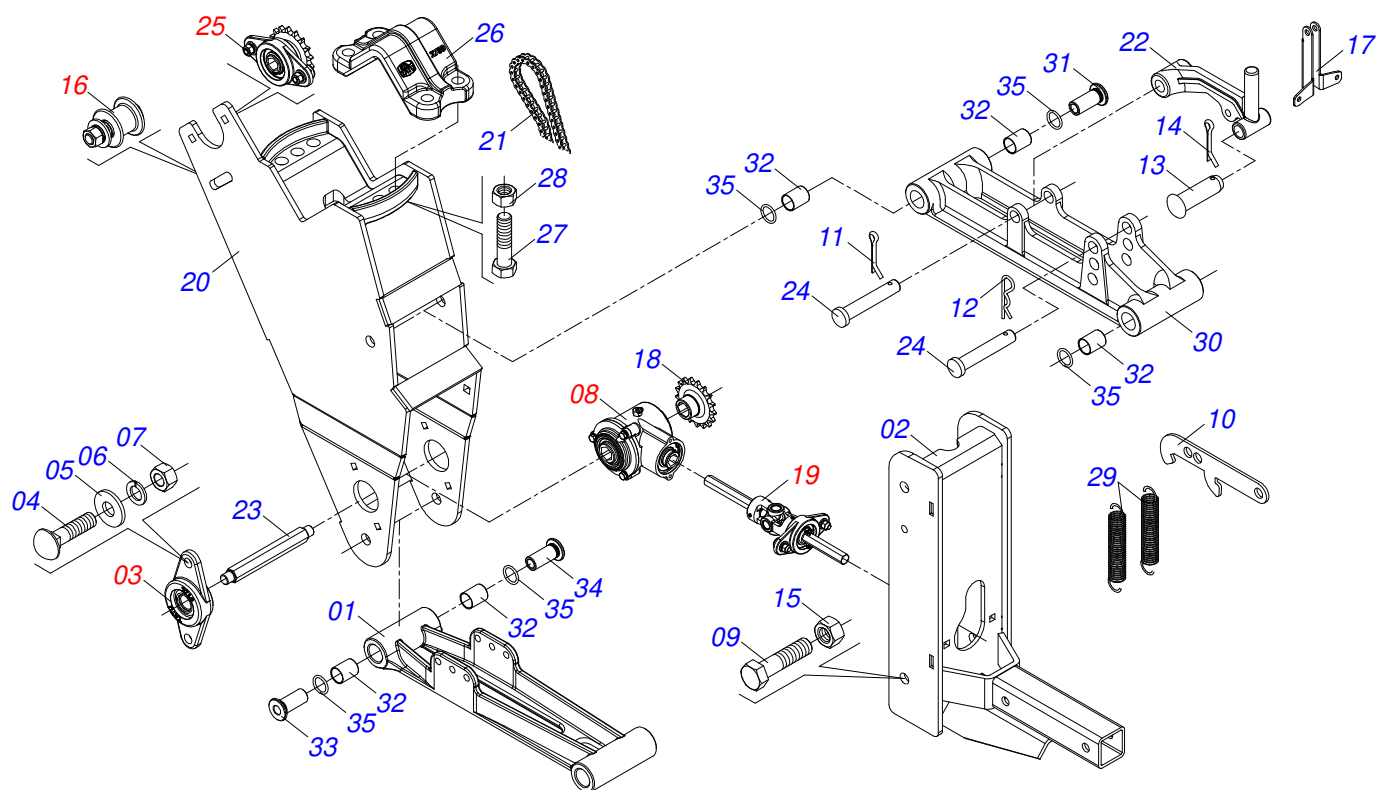


Item	Code	Description	See page	QT
01	0502012910	SEED LINE LOWER ARM WITHOUT LUBRICATION		01
02	0521061427	SHORT SEED ROW FRAME		01
03	0521055213	LINE BEARING SEED	173	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	180	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	174	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	175	01
20	0521064650	LEFT SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	177	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED LINE		01
31	0581017624	SPACING SLEEVE		06



FRONT LEFT LONG SEED ROW

0521053228

Item	Code	Description	See page	QT
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

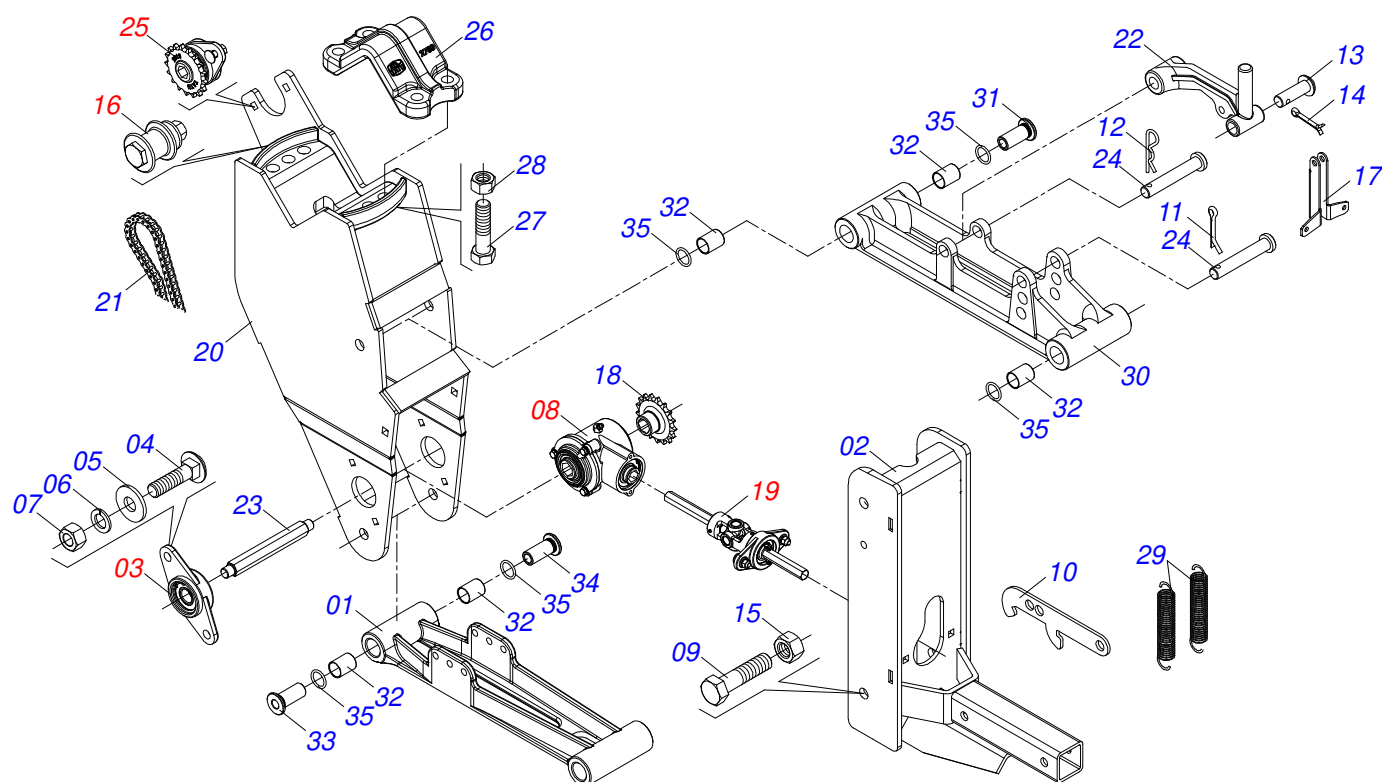


Item	Code	Description	See page	QT
01	0502012910	SEED LINE LOWER ARM WITHOUT LUBRICATION		01
02	0521061427	SHORT SEED ROW FRAME		01
03	0521055213	LINE BEARING SEED	173	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	180	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	174	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0521055226	BEARING WITH AXLE JOINT	175	01
20	0521064652	RH SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	177	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED LINE		01
31	0581017624	SPACING SLEEVE		06



FRONT RIGHT LONG SEED ROW

0521053229


Item	Code	Description	See page	QT
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01
34	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
35	0503010045	O'RING		08

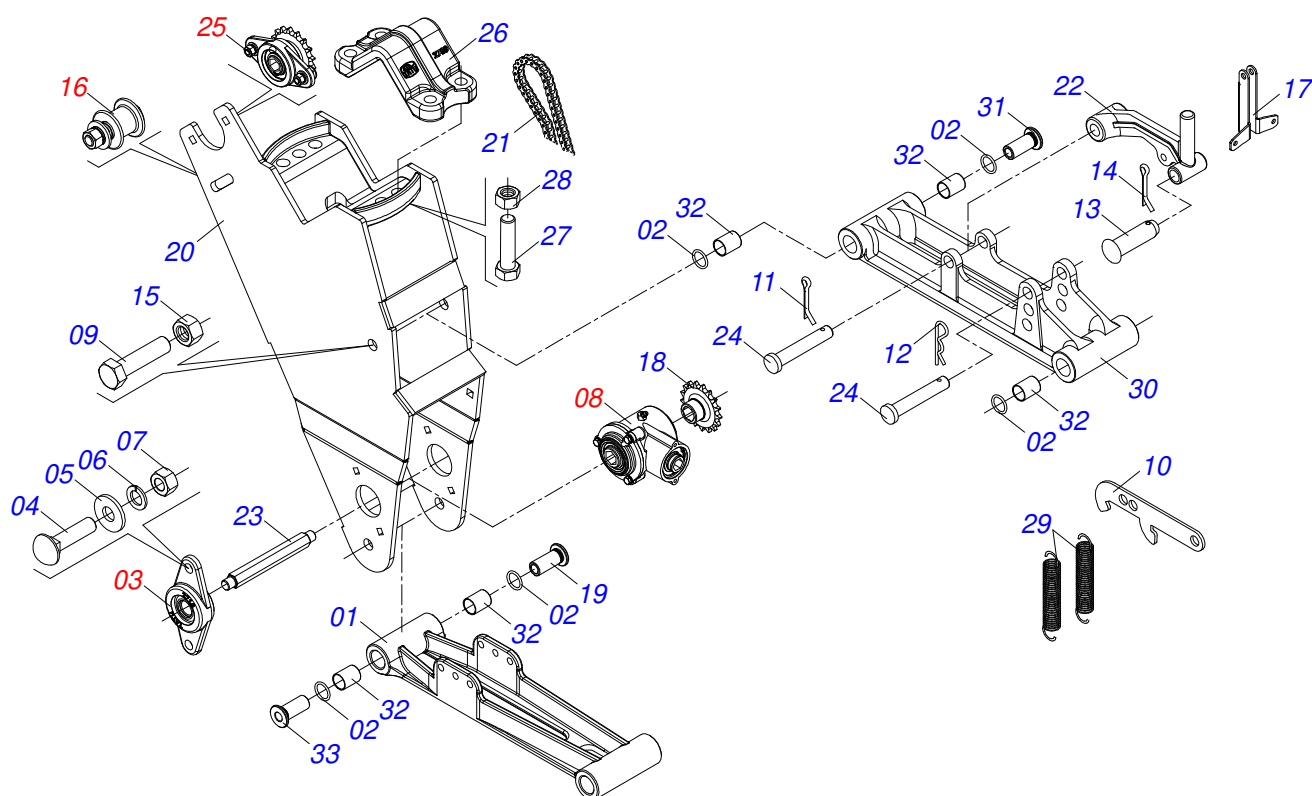

Item	Code	Description	See page	QT
01	0502012910	SEED LINE LOWER ARM WITHOUT LUBRICATION		01
02	0503010045	O'RING		08
03	0521055213	LINE BEARING SEED	173	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	180	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	174	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
20	0521064650	LEFT SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	177	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED LINE		01
31	0581017624	SPACING SLEEVE		06



Item	Code	Description	See page	QT
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01

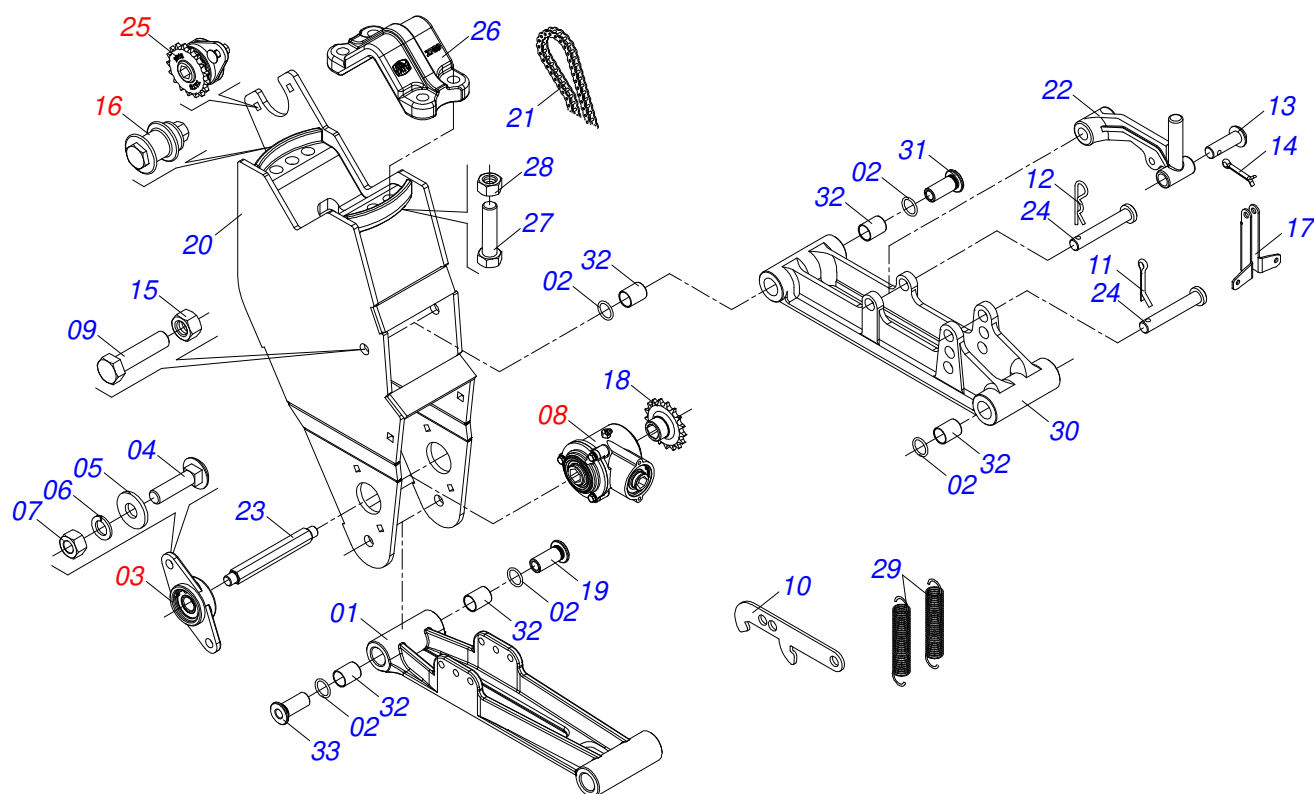


Item	Code	Description	See page	QT
01	0502012910	SEED LINE LOWER ARM WITHOUT LUBRICATION		01
02	0503010045	O'RING		08
03	0521055213	LINE BEARING SEED	173	02
04	0503011953	5/16" X 1" BOLT		04
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER		04
07	0503010337	5/16" NUT		04
08	0521055223	SEED LINE TRANSMISSION BOX	180	01
09	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
10	0561019032	SEED FERTIL ROW LOCK		01
11	0503010071	3/16" X 1" COTTERPIN		01
12	0503030168	HITCH PIN CLIP		01
13	0521010773	0.37" X 1.18" COUPLING SHAFT		01
14	0503010140	1/8" X 3/4" COTTERPIN		01
15	0503012412	5/8 UNC SELF LOCKING NUT		04
16	0511055260	SEED ROW CHAIN TENSIONER	174	01
17	0581018487	FIXER UPPER SPRING		01
18	0502012782	17Z GEAR WITH HEX HOLE		01
19	0581017625	SMALLER SPACE GLOVE LOWER ARM WITHOUT LUBRICATION		01
20	0521064652	RH SEED ROW SUPPORT FRONT		01
21	0503012717	40-1 CHAIN X 101 LINK + MENDING		01
22	0502012568	UPPER ROCKER ARM		01
23	0561014904	TRANSMISSION AXLE FRAME LINE		01
24	0501011388	COUPLING SHAFT		02
25	0521055219	BEARING WITH GEAR 17Z HEX 5/8	177	01
26	0502012789	FIXER SUPPORT FERTILIZER ROW		01
27	0503017857	BOLT 5/8 UNF 4		04
28	0503010811	5/8" UNF SELF ADJUSTING NUT		04
29	0503034580	TRACTION SPRING		02
30	0502012911	TOP ARM SEED LINE		01
31	0581017624	SPACING SLEEVE		06




PST TRIO FLEX - FRAME 8160/8460/8960/9460/9960/10985 -
FRONT SEMI-ASSEMBLED OF LONG RIGHT SEED LINE

Page 184
0521054736


Item	Code	Description	See page	QT
32	0503019273	SLEEVE		08
33	0581017626	SPACER		01

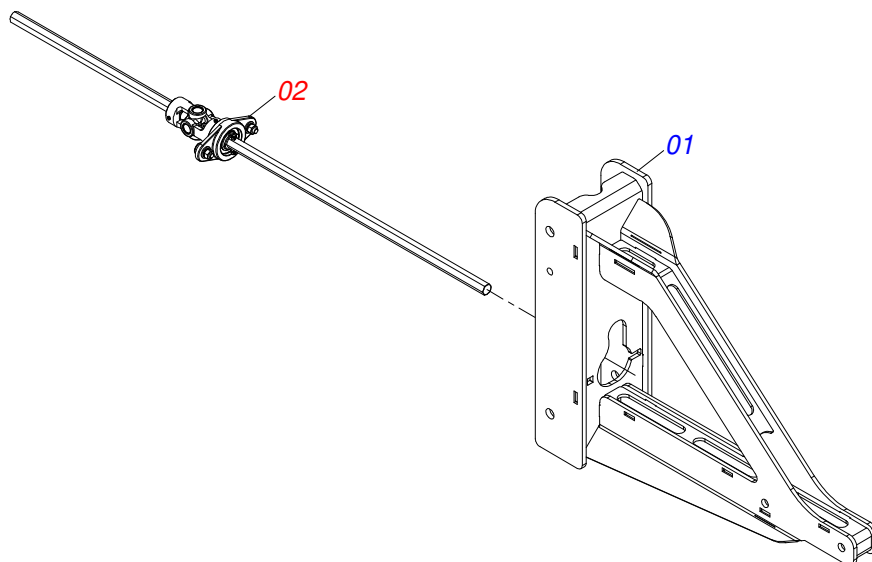


Item	Code	Description	See page	QT
01	0521066496	FRAME MECHANICAL CENTRAL SEED LINE		01
02	0511059334	BEARING WITH LONG FRONT AXLE	186	01

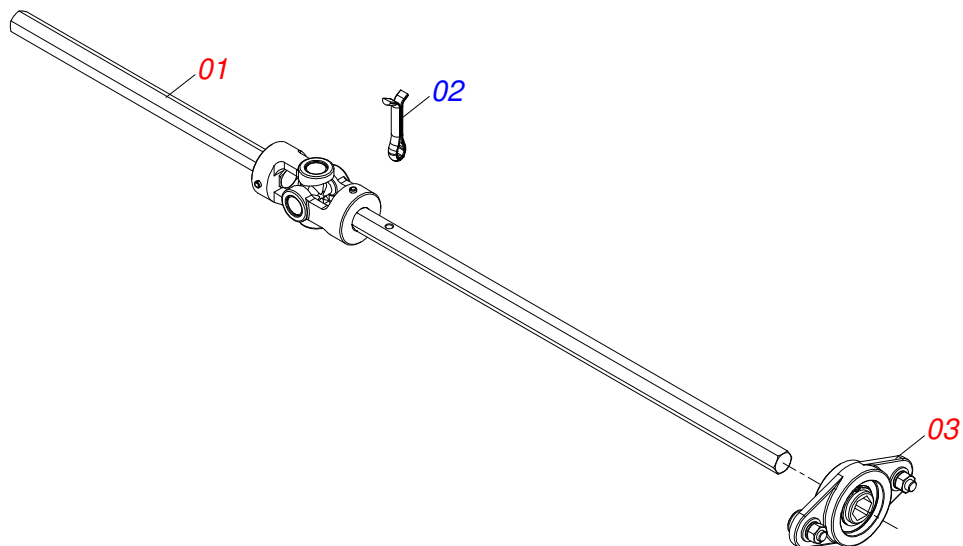


Item	Code	Description	See page	QT
01	0511058143	UNIVERSAL JOINT AXLE	187	01
02	0503010071	3/16" X 1" COTTERPIN		01
03	0521055227	BEARING SHAFT HEX	188	01

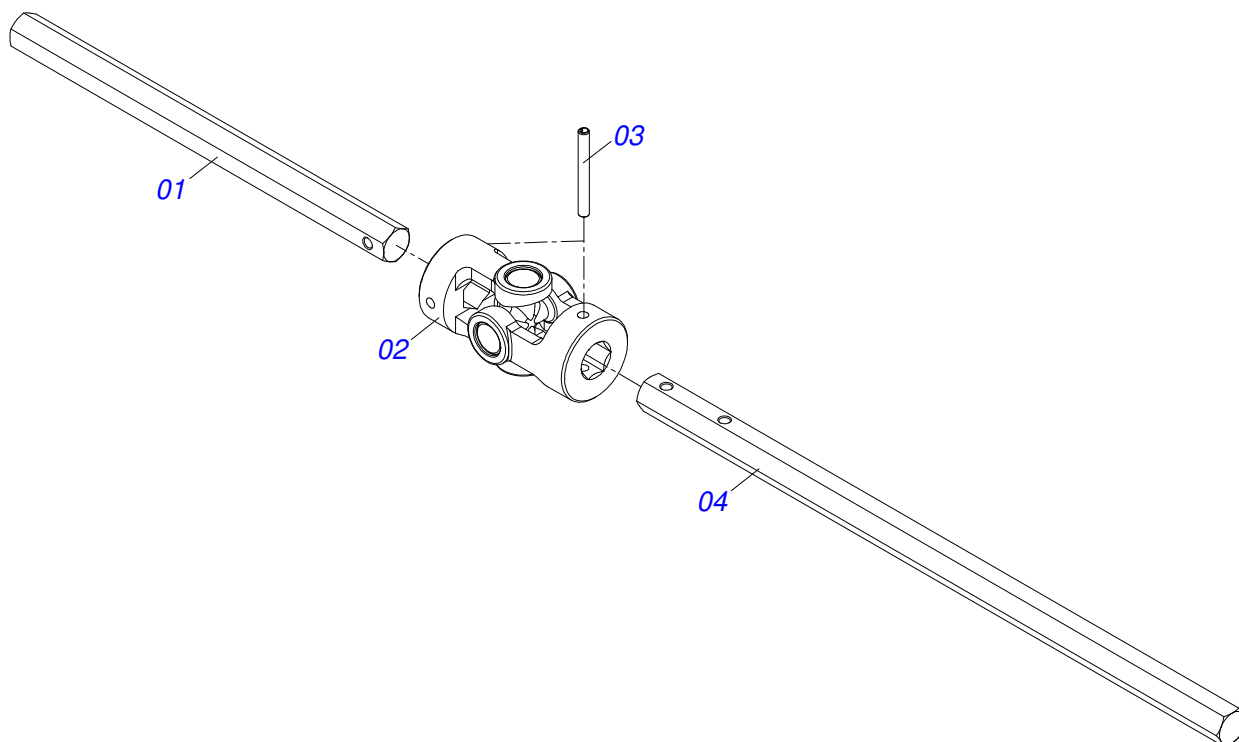

Item	Code	Description	See page	QT
01	0561014794	350 AXLE HEX		01
02	0501056296	UNIVERSAL JOINT		01
03	0503011855	0.2" X 1.8" SPRING PIN		02
04	0581010483	HEX AXLE		01

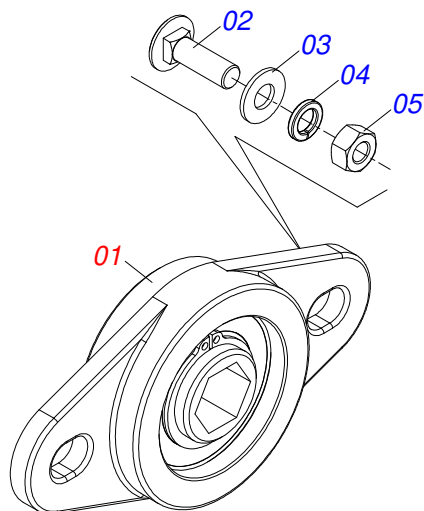


Item	Code	Description	See page	QT
01	0501059363	5/8" HEX AXLE BEARING	189	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER		02
05	0503010337	5/16" NUT		02

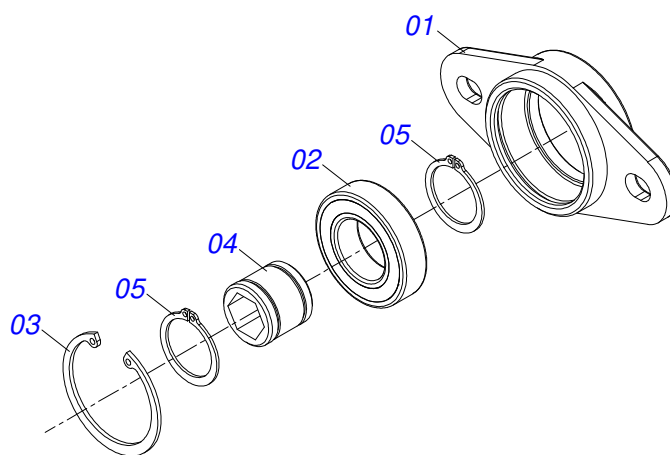


Item	Code	Description	See page	QT
01	0502011697	BEARING OF THE GEAR BOX		01
02	0503011410	ROLLER BEARING		01
03	0503011105	SEAL RING		01
04	0561014911	AXLE SLEVE GUIDES HEX		01
05	0503010406	501025 CLAMPING RING (FOR AXLE)		02

LEFT REAR SEED ROW


0521054771

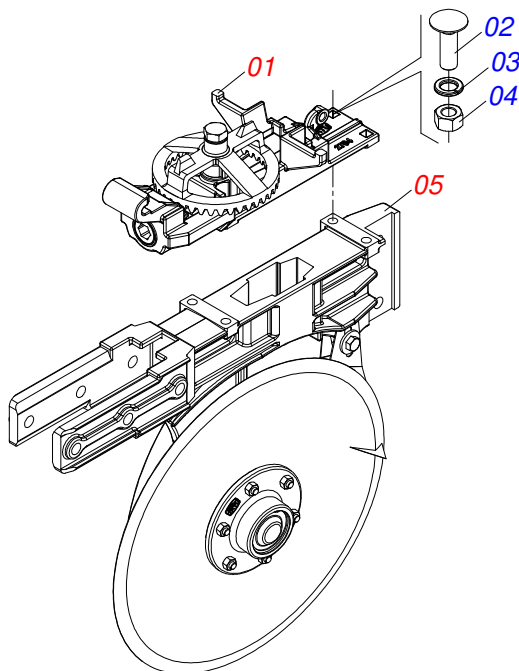


Item	Code	Description	See page	QT
01	0521054818	BASE 5/8 FIXATION WITHOUT ASSY LUBRICATION	191	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0521055871	LEFT DOUBLE DISC SEED 15 X 15	192	01

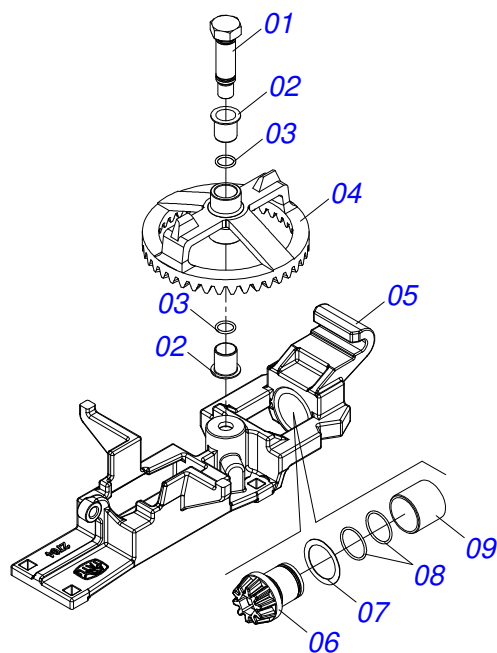


Item	Code	Description	See page	QT
01	0581019201	CROWN SHAFT		01
02	0503019340	LUBRICANT GLOVE		02
03	0503011030	2-014 N 3006-9B O'RING		02
04	0581019200	CONICA 40Z GEAR		01
05	0581019199	FIXED BASE		01
06	0581019202	PINHAO CONICO 10Z X 5/8		01
07	0501013354	FLAT WASHER		01
08	0503010410	RING		02
09	0503019341	LUBRICANT GLOVE		01

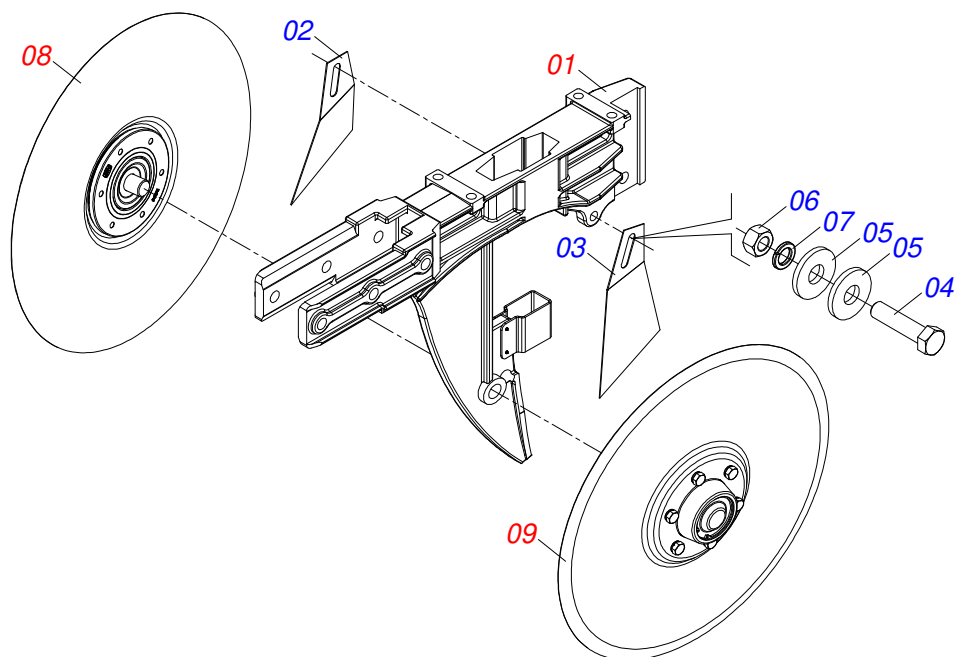


Item	Code	Description	See page	QT
01	0511052302	LH SUPPORT DDD GUIDE	193	01
02	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
03	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
05	0501010984	FLAT WASHER		02
06	0503010026	3/8" NUT		01
07	0503010025	3/8" SPRING WASHER		01
08	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 194 FERTILIZER / SEED		01
09	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 196 FERTILIZER / SEED		01

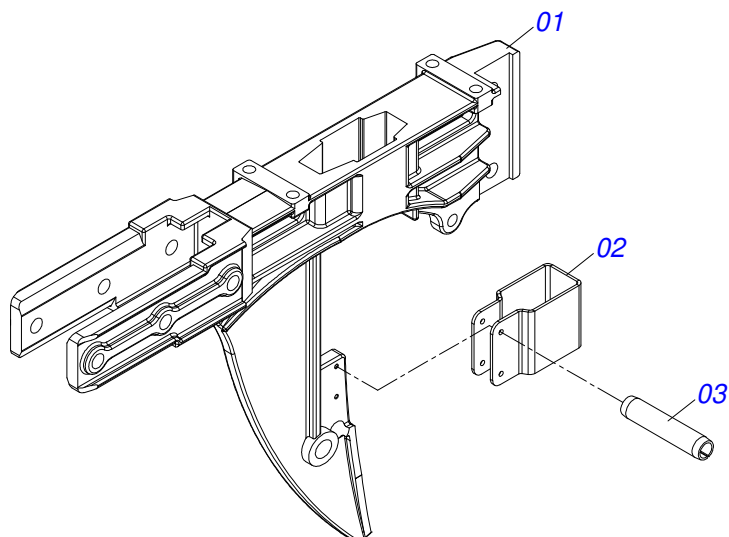


Item	Code	Description	See page	QT
01	0561015592	LEFT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

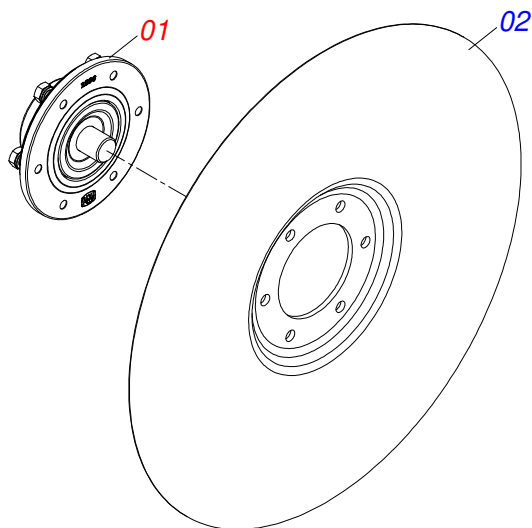


Item	Code	Description	See page	QT
01	0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	195	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

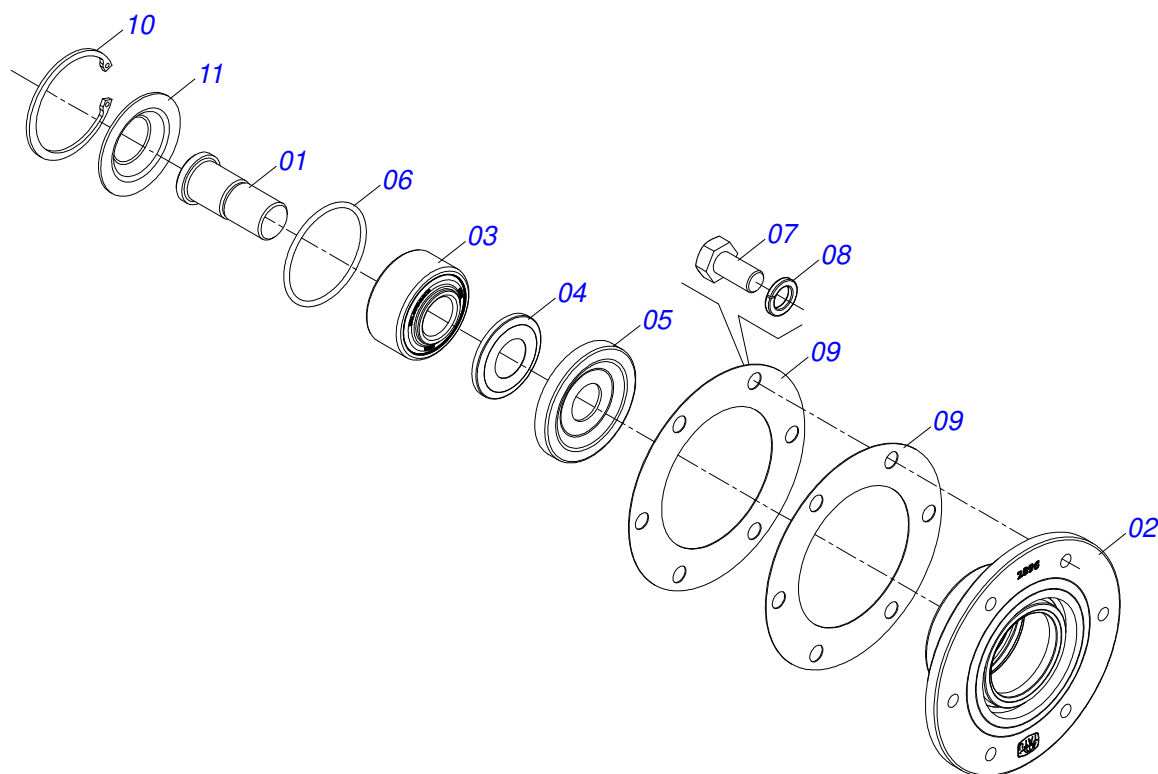


Item	Code	Description	See page	QT
01	0571011150	RIGHT DOUB DISC - HUB		01
02	0502012896	LOW CUBE FERTILIZER / SEED BOX		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

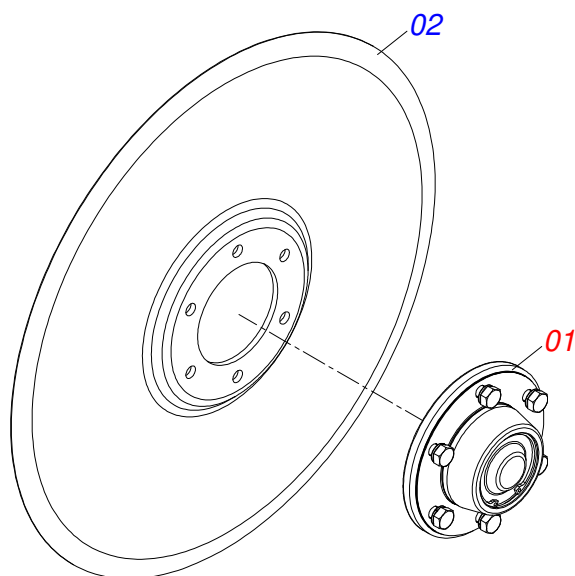


Item	Code	Description	See page	QT
01	0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	197	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

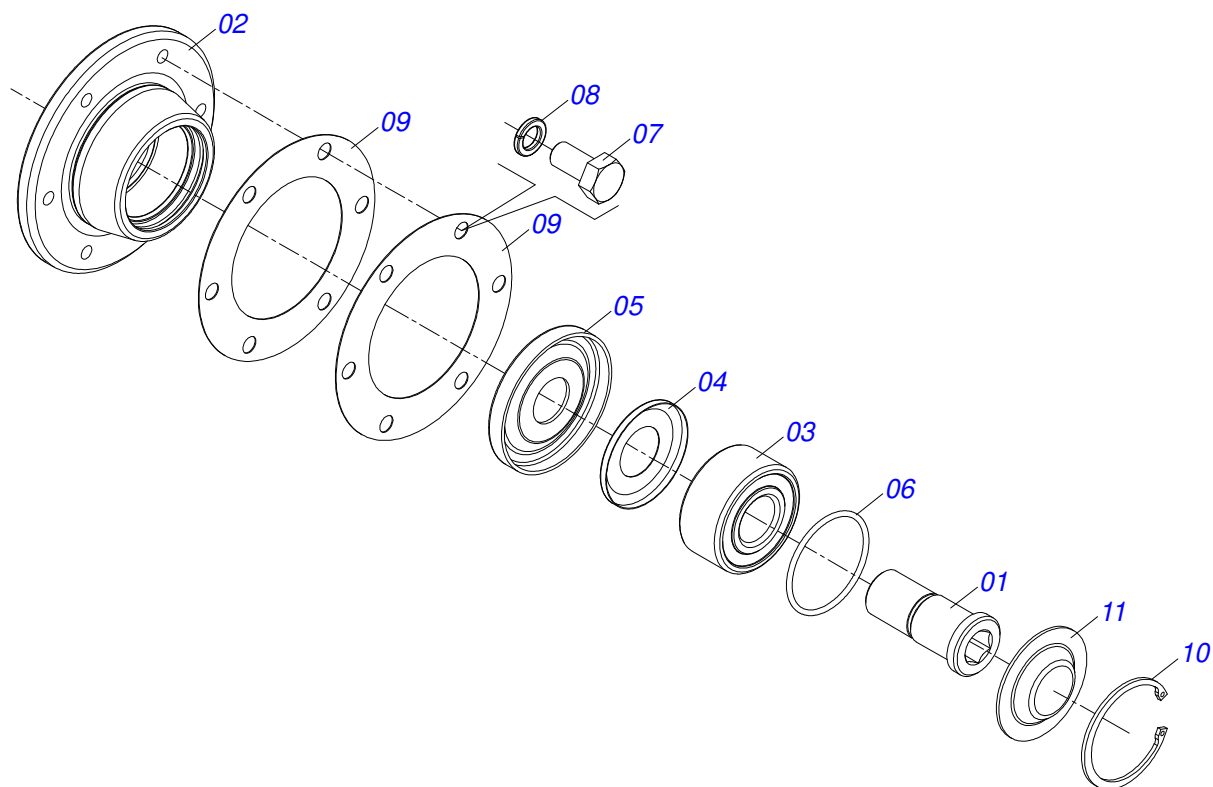


Item	Code	Description	See page	QT
01	0571011151	LEFT DOUBLE DISC HUB		01
02	0502012896	LOW CUBE FERTILIZER / SEED BOX		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

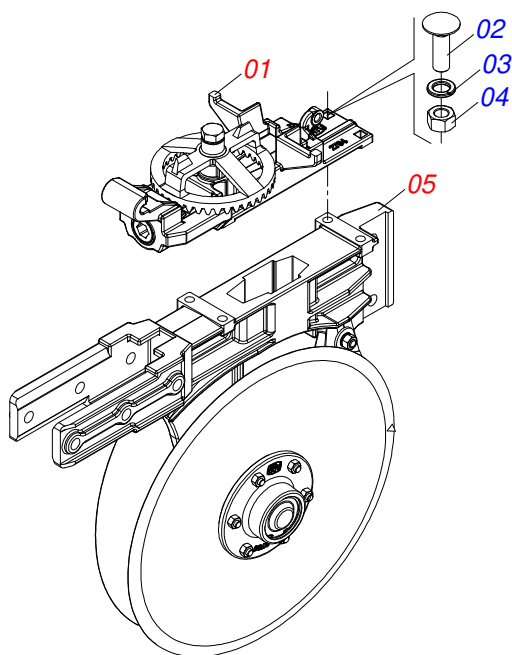


Item	Code	Description	See page	QT
01	0521054818	BASE 5/8 FIXATION WITHOUT ASSY LUBRICATION	191	01
02	0503015920	3/8" UNC X 1.3/4" BOLT		04
03	0503010025	3/8" SPRING WASHER		04
04	0503010026	3/8" NUT		04
05	0521055870	RIGHT DOUBLE DISC SEED 15 X 15	199	01

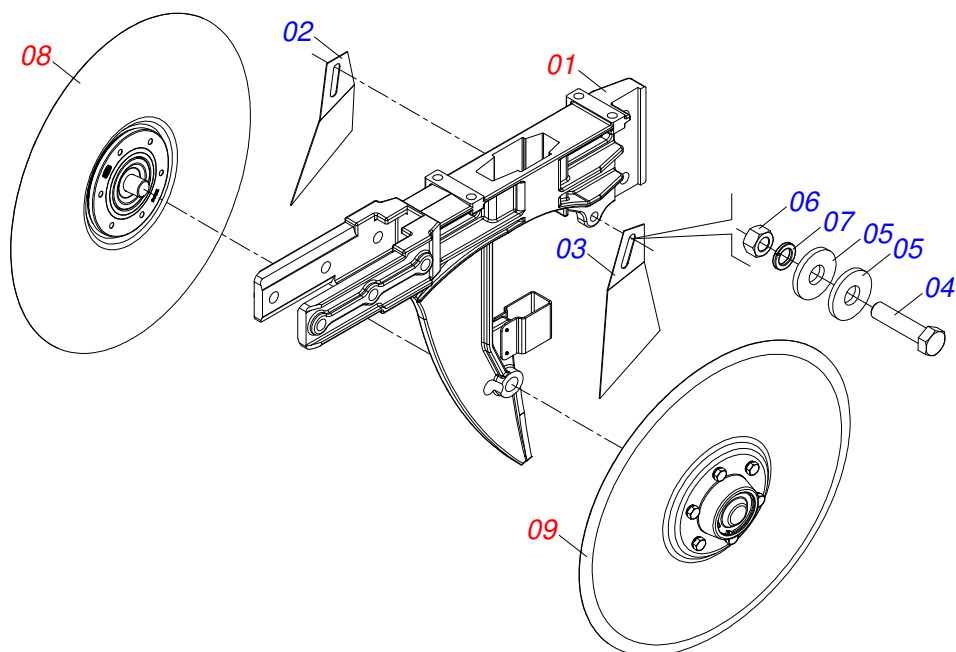


Item	Code	Description	See page	QT
01	0511052301	SUPPORT DDD 15 RIGHT	200	01
02	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
03	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
04	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
05	0501010984	FLAT WASHER		02
06	0503010026	3/8" NUT		01
07	0503010025	3/8" SPRING WASHER		01
08	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 194 FERTILIZER / SEED		01
09	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 196 FERTILIZER / SEED		01

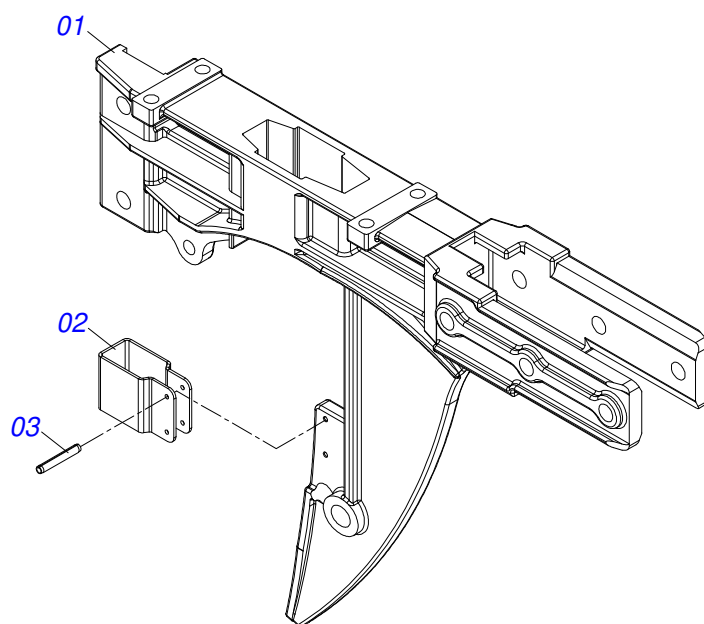


Item	Code	Description	See page	QT
01	0561015591	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0571012491	SOCKET SEED GUIDE		01
03	0503010838	0.1" X 0.8" SPRING PIN		02

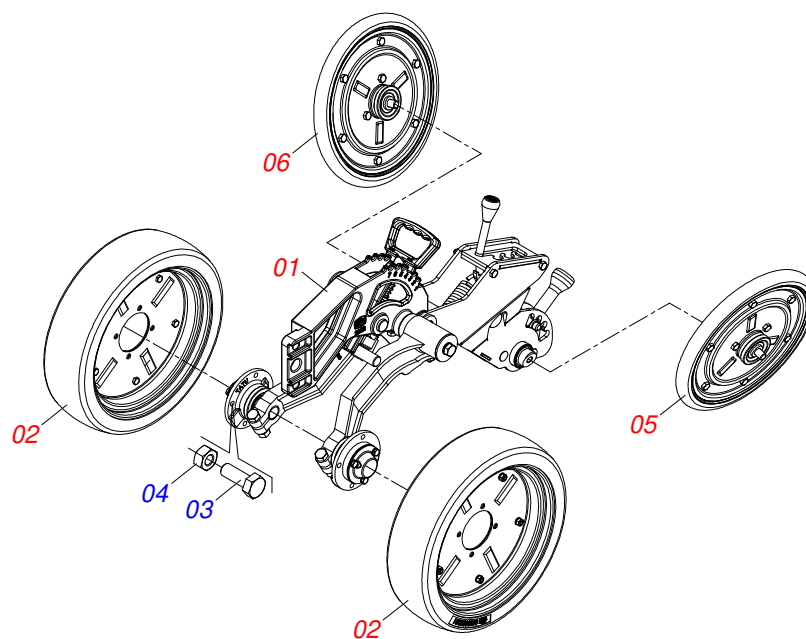


Item	Code	Description	See page	QT
01	0521054986	DEPTH CONTROL SEMI MOUNTED WITHOUT LUBRICATION	202	01
02	0501052538	DEPTH BAND WITH ARMS	208	02
03	0503010358	5/16" X 5/8" BOLT		08
04	0503013816	5/16" LOCKNUT		08
05	0521054990	LEFT COMPACTOR WHEEL	209	01
06	0521055017	RIGHT COMPACTOR WHEEL	210	01

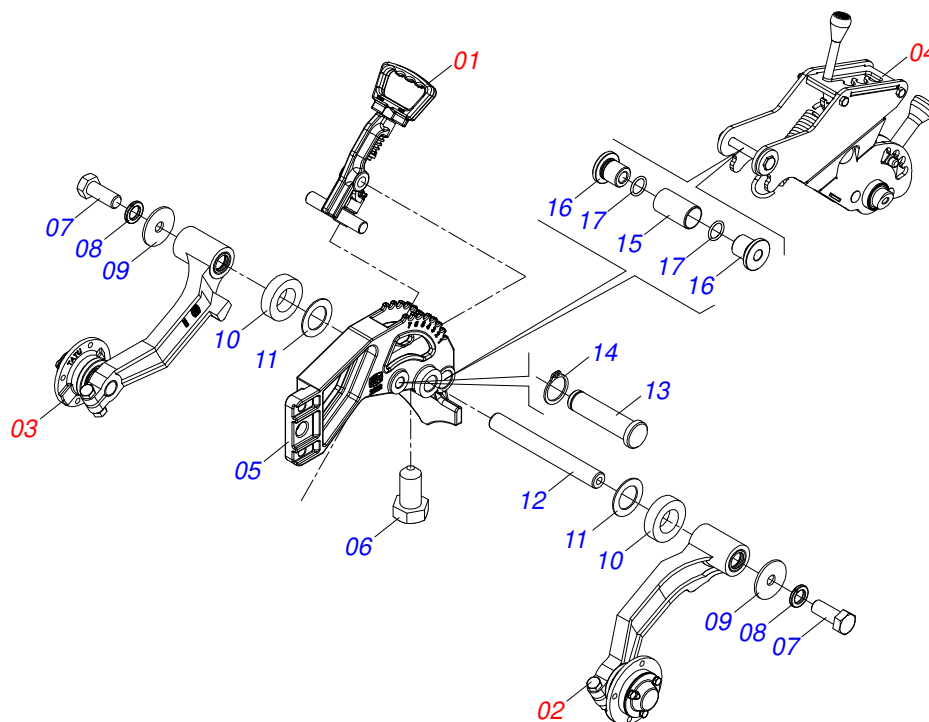


Item	Code	Description	See page	QT
01	0501052297	DEPTH WHEELS REGULATOR ASSY	203	01
02	0521054987	LEFT ARM WITH HUB WITHOUT LUBRIFICATION	204	01
03	0521054988	RIGHT ARM WITH HUB WITHOUT LUBRIFICATION	207	01
04	0521055033	SEMI-ASSEMBLED COMPACTOR BODY	206	01
05	0502012282	DEPTH CONTROL SUPPORT		01
06	0503034377	SCREW 3/8 UNC X 3/4		01
07	0503010311	1/2" X 1-1/4" BOLT		02
08	0503010019	1/2" SPRING WASHER		02
09	0571017749	FLAT WASHER		02
10	0571015974	WASHER		02
11	0511015346	FLAT WASHER		02
12	0581011100	DEPTH WHEEL AXLE		01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010581	RING		01
15	0503019275	SLEEVE LUBRICATION SYSTEM		01
16	0581019473	ARTICULATED GLOVE		02
17	0503010045	O'RING		02

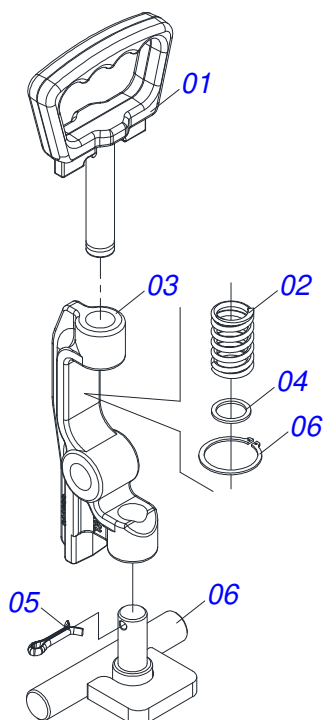


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	SEED SIST CONTROL DEPTH LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

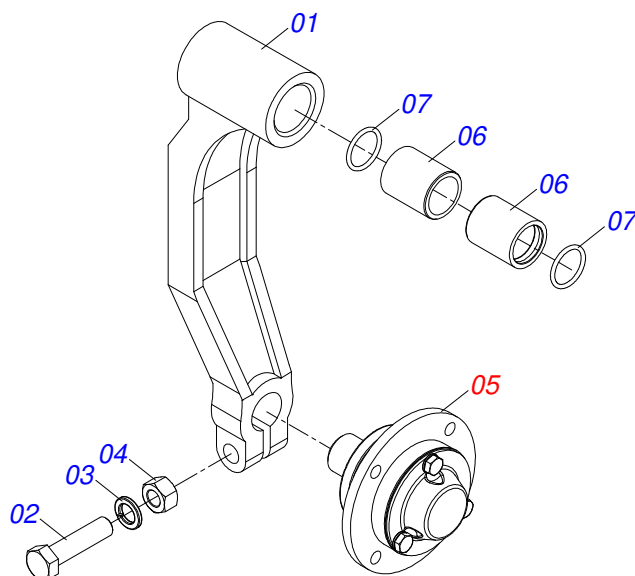


Item	Code	Description	See page	QT
01	0581019472	LEFT ARM WHEEL CONTROL DEPTH		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0521055016	CUBE DEPTH CONTROL WITHOUT LUBRICATION	205	01
06	0581019514	LUBRICANT GLOVE		02
07	0503011109	2-119 N 3006-9B O'RING		02

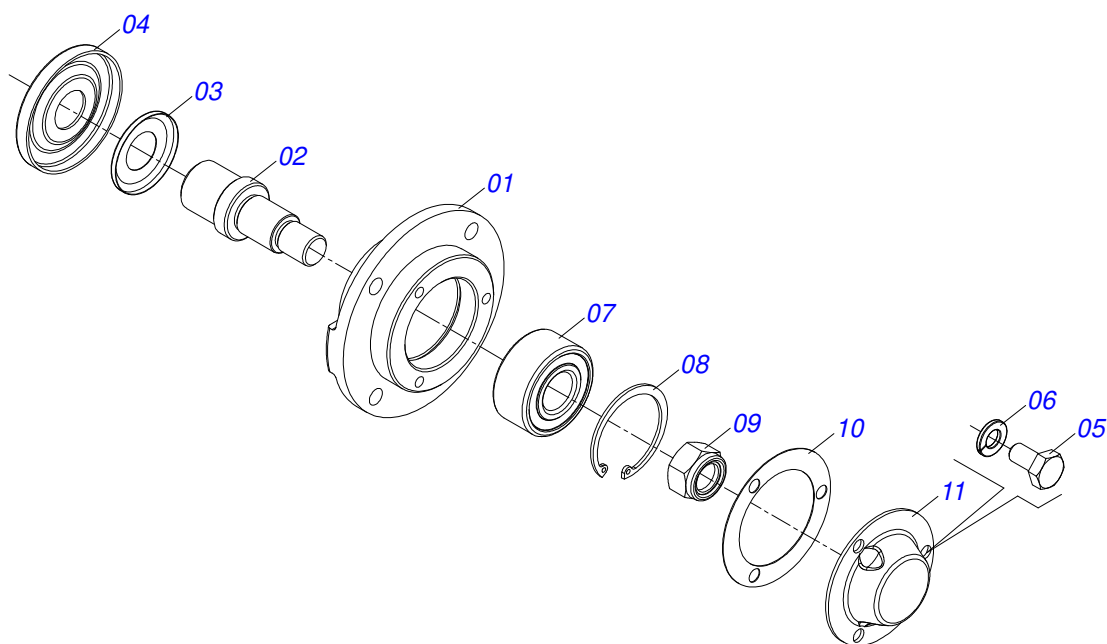


Item	Code	Description	See page	QT
01	0581019513	DEPTH WHEEL BOX		01
02	0581019515	AXIS		01
03	0503034055	CLAMPING RING		01
04	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01
05	0503013758	1/4" X 1-1/2" BOLT		03
06	0503010143	1/4" SPRING WASHER		03
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0503010878	5/8" SELF ALIGNING NUT		01
10	0503030757	2.9" X 2" X 0.02" JOINT		01
11	0521019178	COVER DEPTH		01

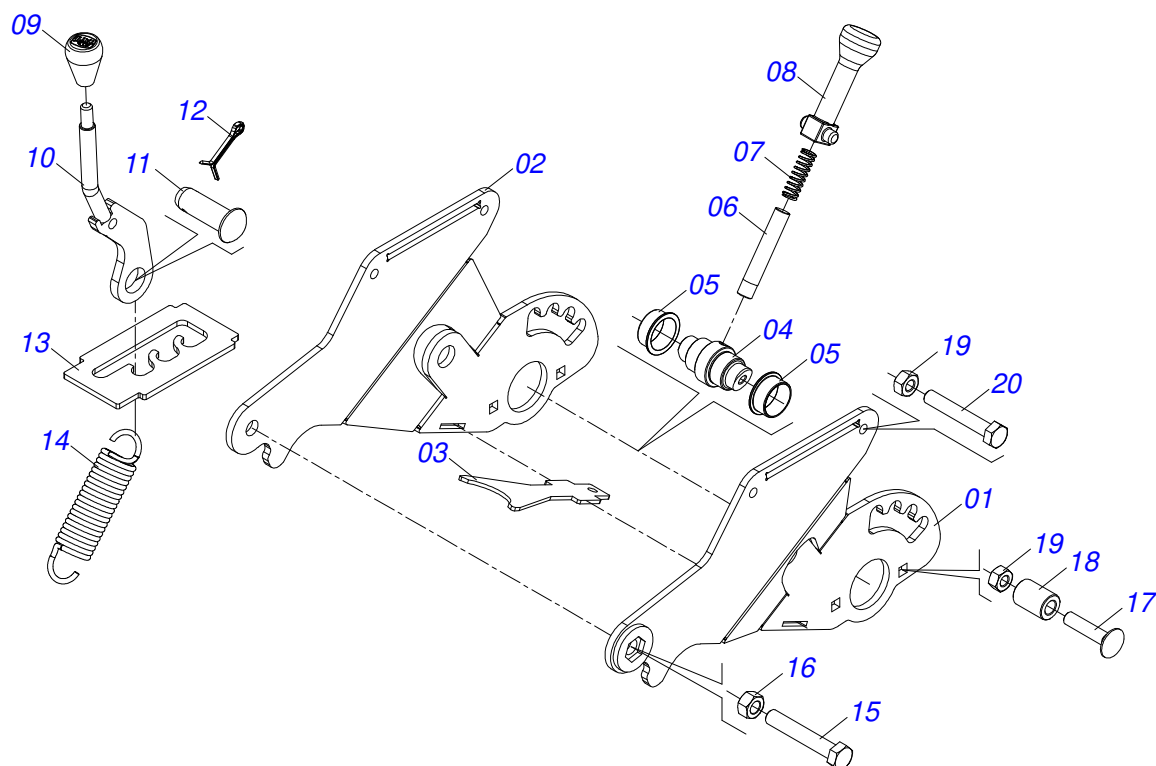

Item	Code	Description	See page	QT
01	0521069585	LEFT SIDE		01
02	0581019475	RIGHT SIDE BODY		01
03	0581019511	COVER		01
04	0581019510	AXIS		01
05	0503019351	LUBRICANT GLOVE		02
06	0581019520	AXIS		01
07	0503030190	0.5" X 1.6" X 0.05" SPRING		01
08	0502012877	PRESS WHEEL ADJUSTMENT LEVER		01
09	0503030878	LEVER CRANK		01
10	0521068661	LEVER		01
11	0571012442	COUPLING SHAFT		01
12	0503010257	1/8" X 1" COTTERPIN		01
13	0581019512	PLATE TOP		01
14	0503034817	SPRING		01
15	0503010752	1/2" X 3.1/2" BOLT		01
16	0503011336	1/2" HEX SELF ADJUSTING NUT		01
17	0501011753	5/16" X 1-3/4" BOLT		02
18	0581015855	SLEEVE		02
19	0503013816	5/16" LOCKNUT		04
20	0503010848	5/16" X 3.1/2" BOLT		02

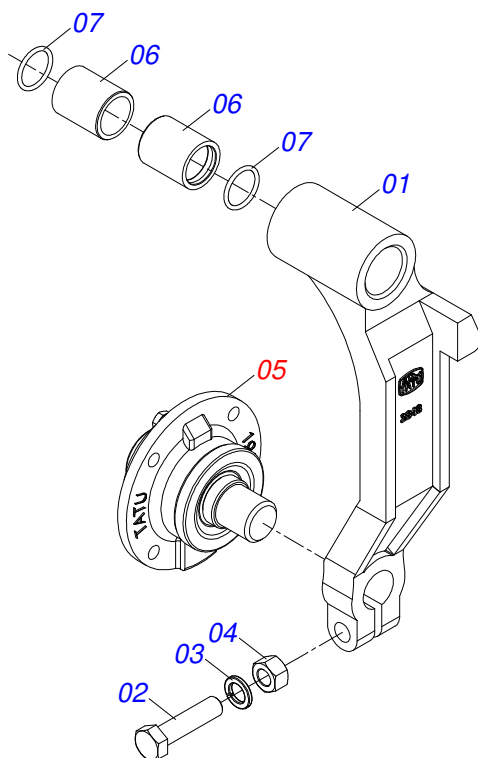


Item	Code	Description	See page	QT
01	0581019527	RIGHT ARM WHEEL CONTROL DEPTH		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2" NUT		01
05	0521055016	CUBE DEPTH CONTROL WITHOUT LUBRICATION	205	01
06	0581019514	LUBRICANT GLOVE		02
07	0503011109	2-119 N 3006-9B O'RING		02

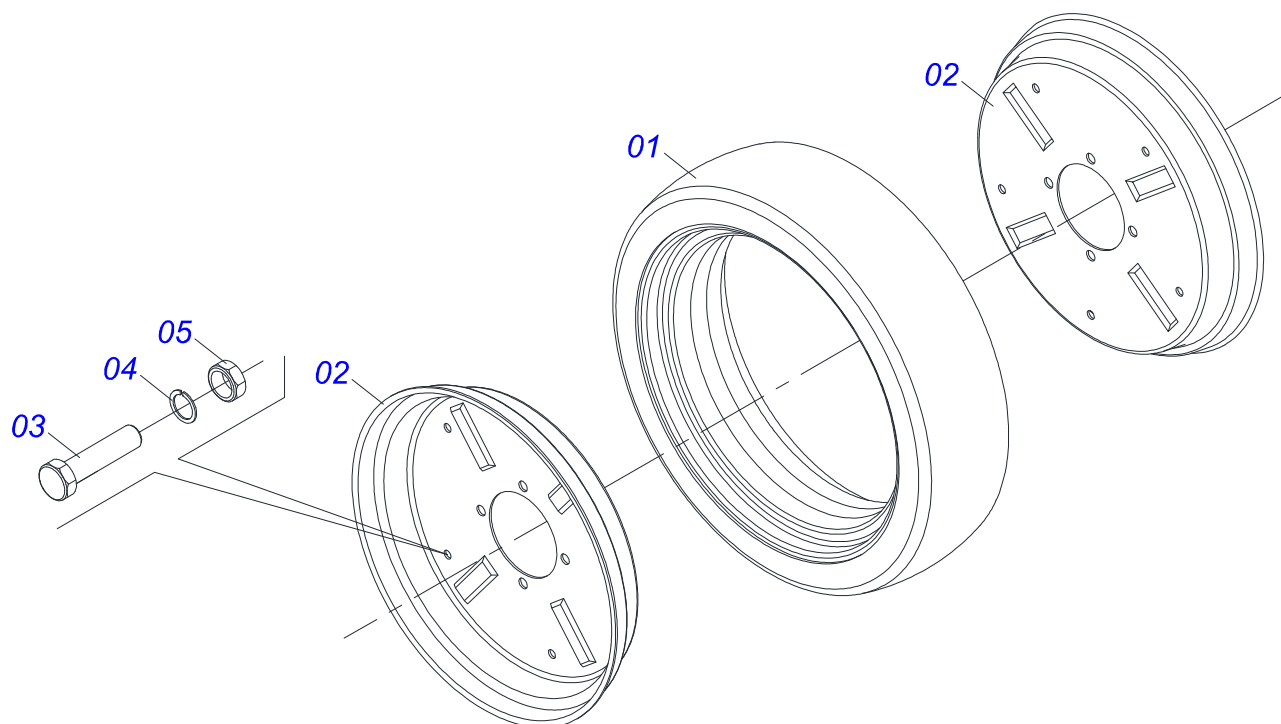


Item	Code	Description	See page	QT
01	0503030551	DEPTH CONTROL WHEEL RUBBER BAND		01
02	0521010832	RIM FLANGE		02
03	0503010298	1/4" X 1/2" BOLT		05
04	0503010143	1/4" SPRING WASHER		05
05	0503010144	1/4" NUT		05

LEFT COMPACTOR WHEEL


0521054990

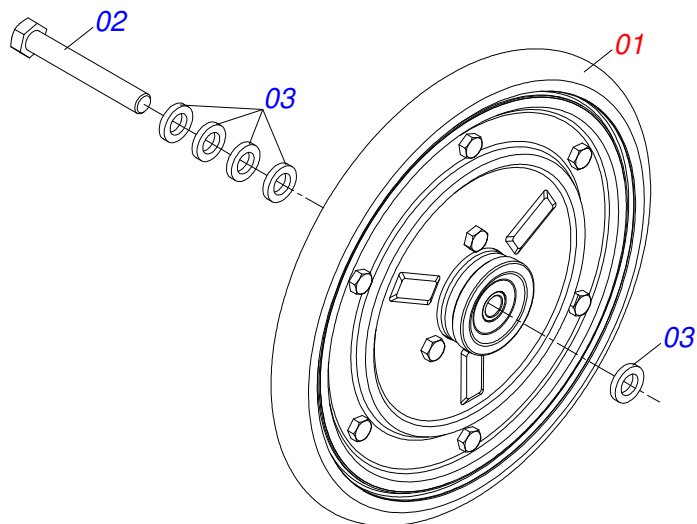


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	211	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

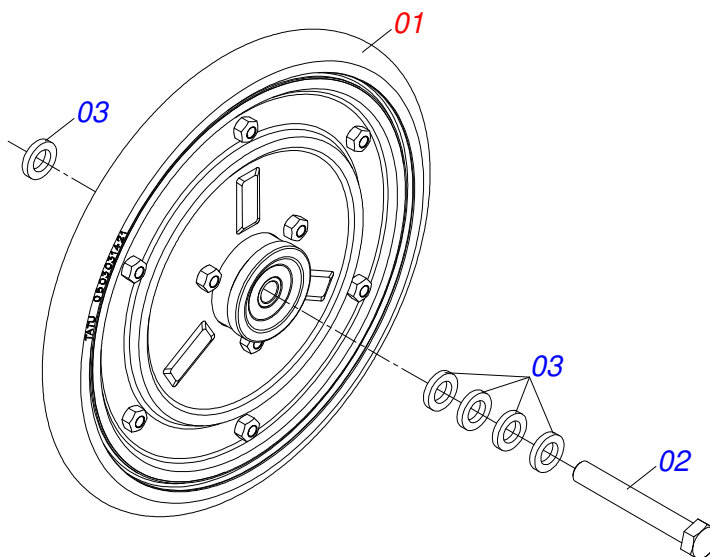


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	211	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

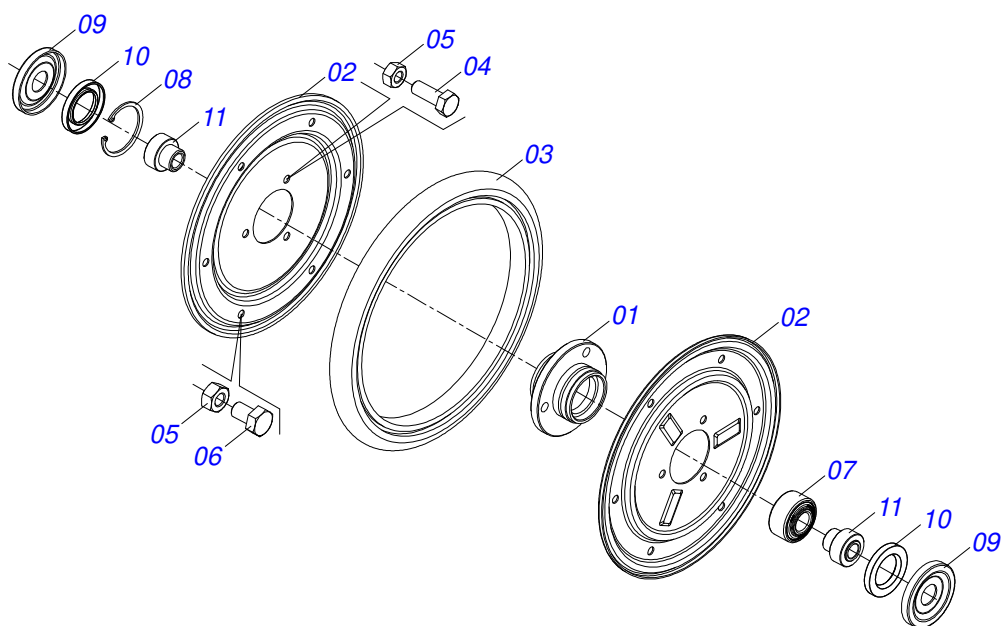

Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

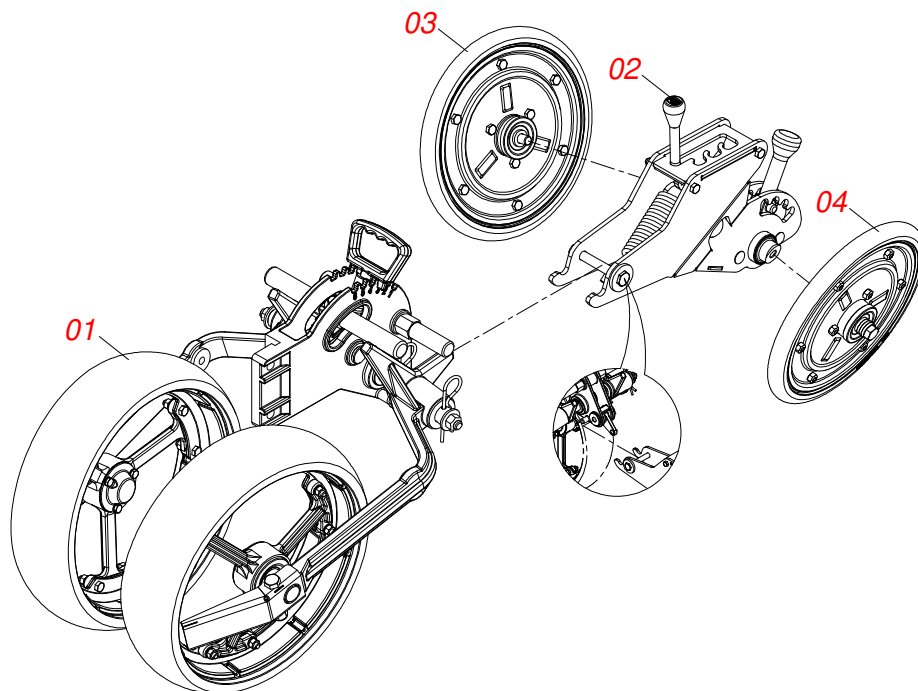


Item	Code	Description	See page	QT
01	0521055070	DEEP WHEEL SYSTEM WITH NO SPACRRA ABA	213	01
02	0521055093	BODY COMPACTOR	219	01
03	0521055017	RIGHT COMPACTOR WHEEL	210	01
04	0521054990	LEFT COMPACTOR WHEEL	209	01

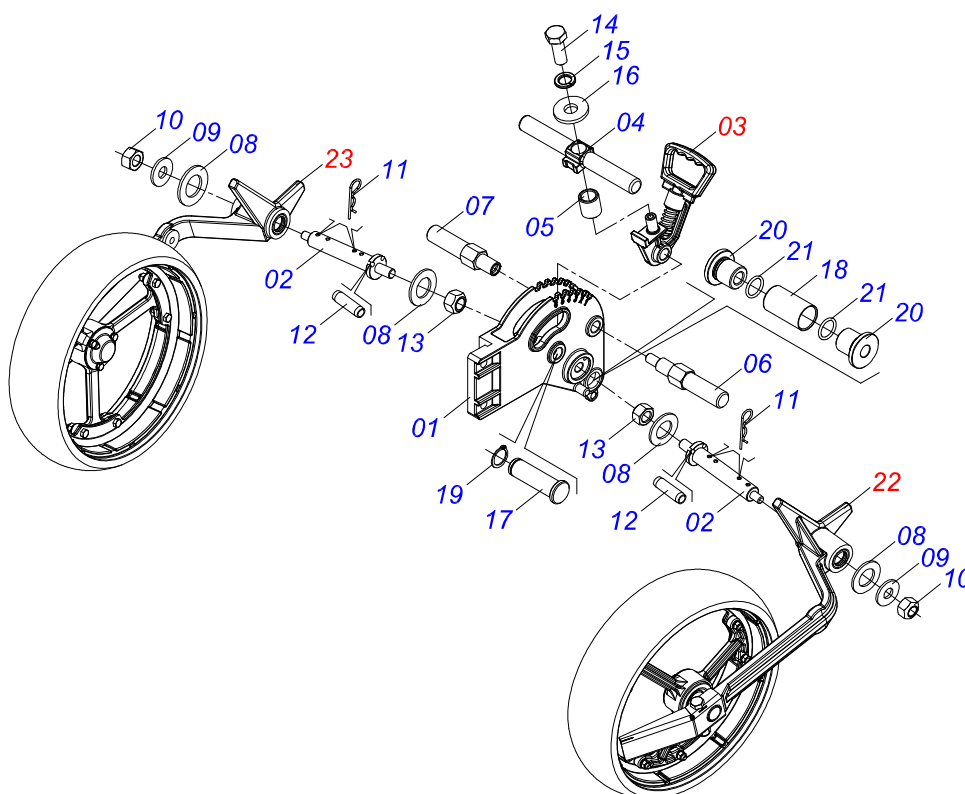


Item	Code	Description	See page	QT
01	0581019532	DEPTH CONTROL SUPPORT		01
02	0581019531	ARTICULATED AXLE WHEEL DEPTH		02
03	0501059228	ADJUSTMENT LEVER	214	01
04	0502012611	DEPTH CONTROL AXLE		01
05	0571015326	ARTICULATION SLEEVE HANDLE		01
06	0581017075	LARGER AXLE		01
07	0581017076	SMALLER AXLE		01
08	0501011445	FLAT WASHER		04
09	0511017302	FLAT WASHER		02
10	0503011336	1/2" HEX SELF ADJUSTING NUT		02
11	0503030012	HITCH PIN CLIP		04
12	0503011402	0.2" X 0.8" SPRING PIN		02
13	0503012795	5/8" HEX SELF ADJUSTING NUT		02
14	0503010237	3/8" X 1" BOLT		01
15	0503010025	3/8" SPRING WASHER		01
16	0501010984	FLAT WASHER		01
17	0581019526	ARTICULATED AXLE LEVER DEPTH		01
18	0503019275	SLEEVE LUBRICATION SYSTEM		01
19	0503010302	501019 SEAL RING		01
20	0581019473	ARTICULATED GLOVE		02
21	0503010045	O'RING		02
22	0521055076	LEFT ARM WITH WHEEL WITHOUT LUBRICATION	215	01
23	0521055077	RIGHT ARM WITH WITHOUT LUBRICATION	218	01

ADJUSTMENT LEVER


0501059228

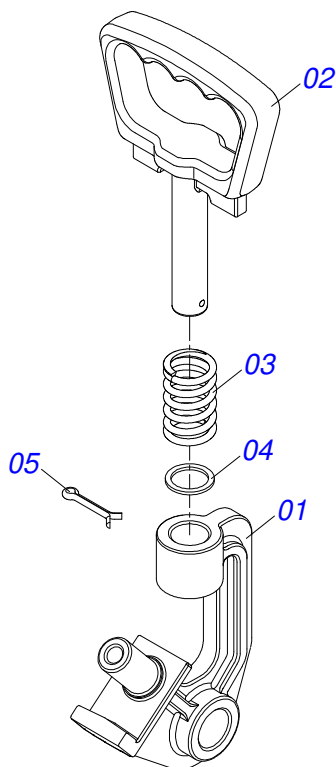


Item	Code	Description	See page	QT
01	0502012603	ADJUSTMENT LEVER		01
02	0502011689	1/8" DEPTH CONTROL LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0511015976	FLAT WASHER		01
05	0503010140	1/8" X 3/4" COTTERPIN		01

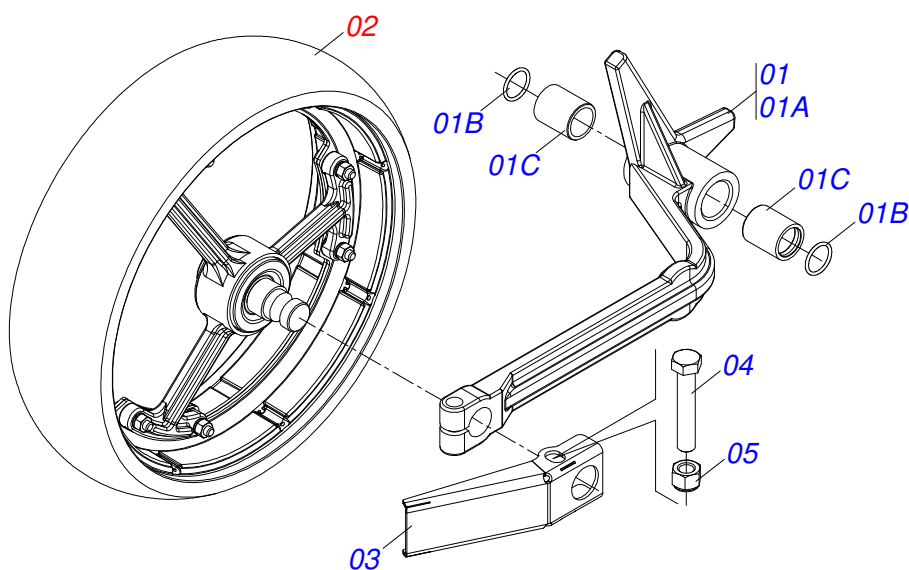


Item	Code	Description	See page	QT
01	0521055058	LEFT ARM		01
01A	0581019525	LEFT ARM WHEEL DEPTH		01
01B	0503011109	2-119 N 3006-9B O'RING		02
01C	0581019514	LUBRICANT GLOVE		02
02	0521055056	WHEEL RAYED ASSY BAND	216	01
03	0581018815	SET DEVIATION		01
04	0503010741	1/2" X 2-3/4" BOLT		01
05	0503010589	1/2" UNC SELF ADJUSTING NUT		01

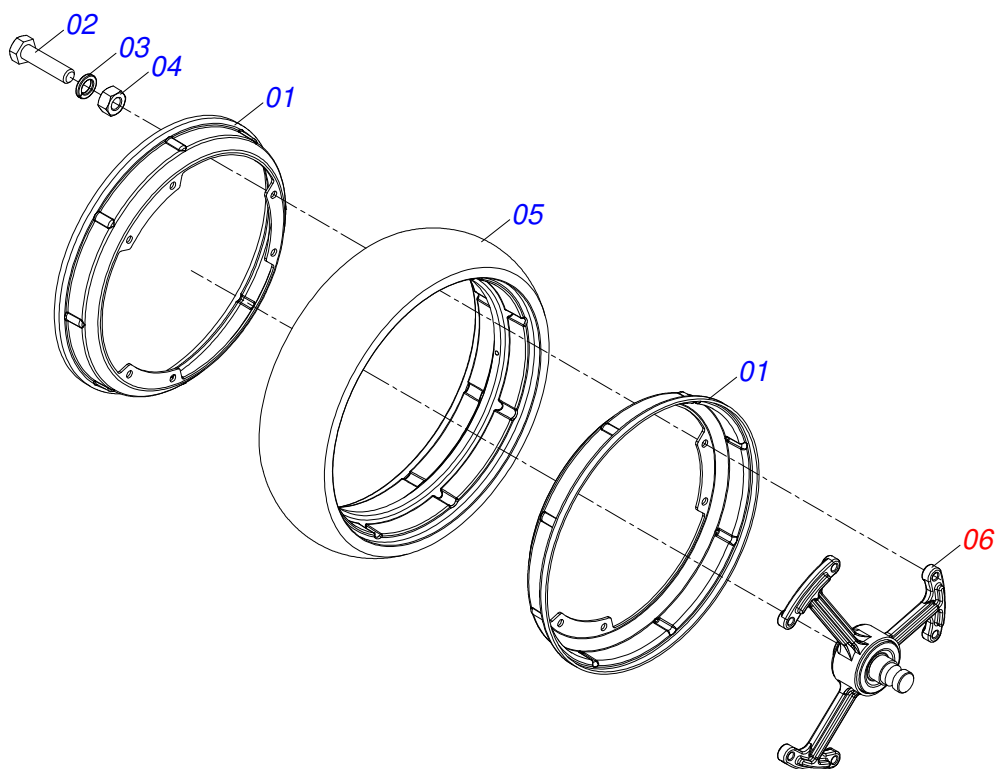


Item	Code	Description	See page	QT
01	0551019904	PRESS WHEEL RIM		02
02	0503010365	NUT		06
03	0503010179	LOCK WASHER		06
04	0503010337	5/16" NUT		06
05	0503032970	RUBBER BAND		01
06	0521055073	ASSEMBLY DEPTH WHEEL BOX	217	01

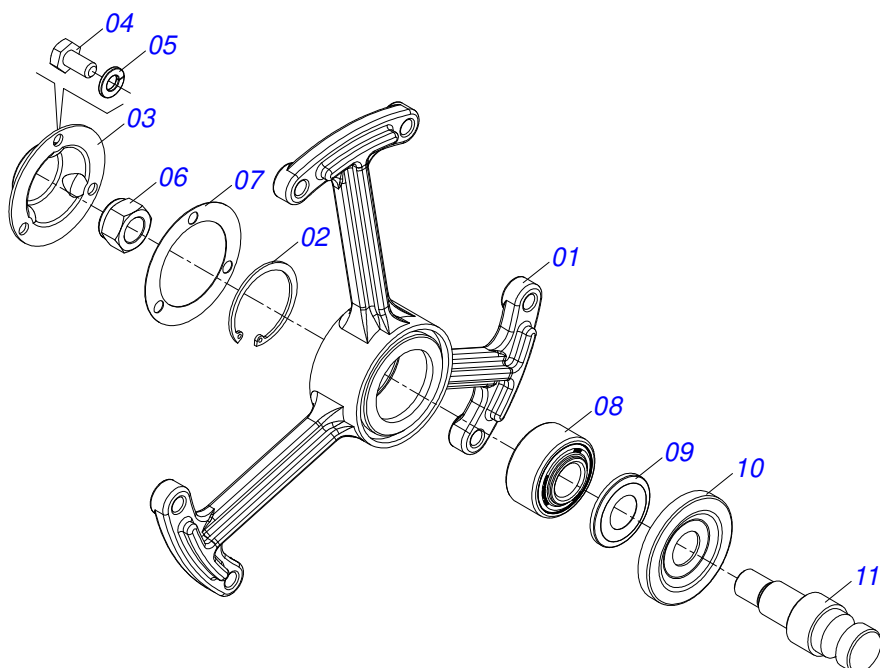


Item	Code	Description	See page	QT
01	0581019528	BOX WHEEL DEPTH SPA WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	COVER DEPTH		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503010878	5/8" SELF ALIGNING NUT		01
07	0503030757	2.9" X 2" X 0.02" JOINT		01
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01
11	0581019529	DEPTH REGULATOR SHAFT		01

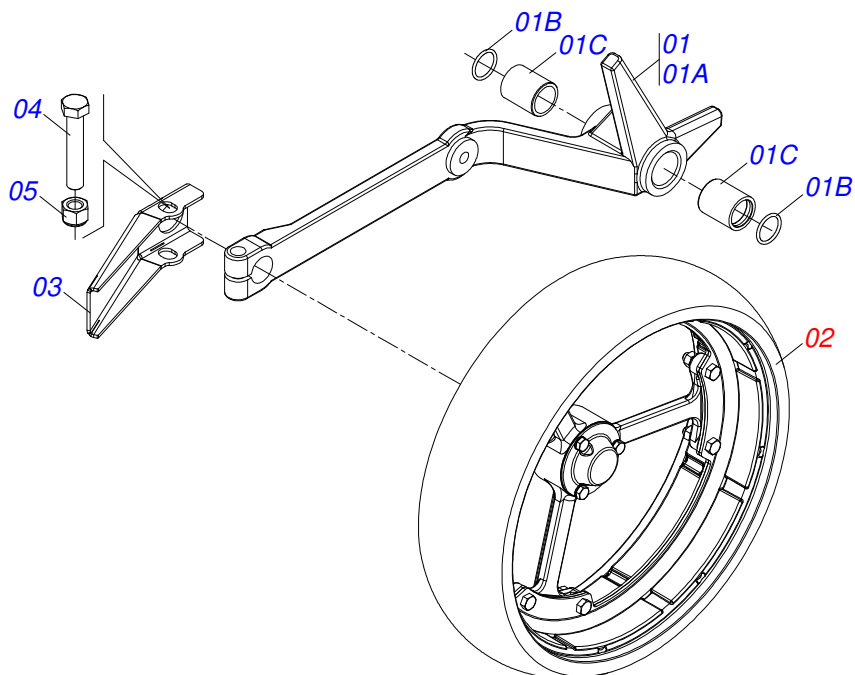


Item	Code	Description	See page	QT
01	0521055074	RIGHT ARM WITH O-RING		01
01A	0581019530	RIGHT ARM ROD DEPTH SPA NO LUBRICATION		01
01B	0503011109	2-119 N 3006-9B O'RING		02
01C	0581019514	LUBRICANT GLOVE		02
02	0521055056	WHEEL RAYED ASSY BAND	216	01
03	0581018815	SET DEVIATION		01
04	0503010741	1/2" X 2-3/4" BOLT		01
05	0503010589	1/2" UNC SELF ADJUSTING NUT		01

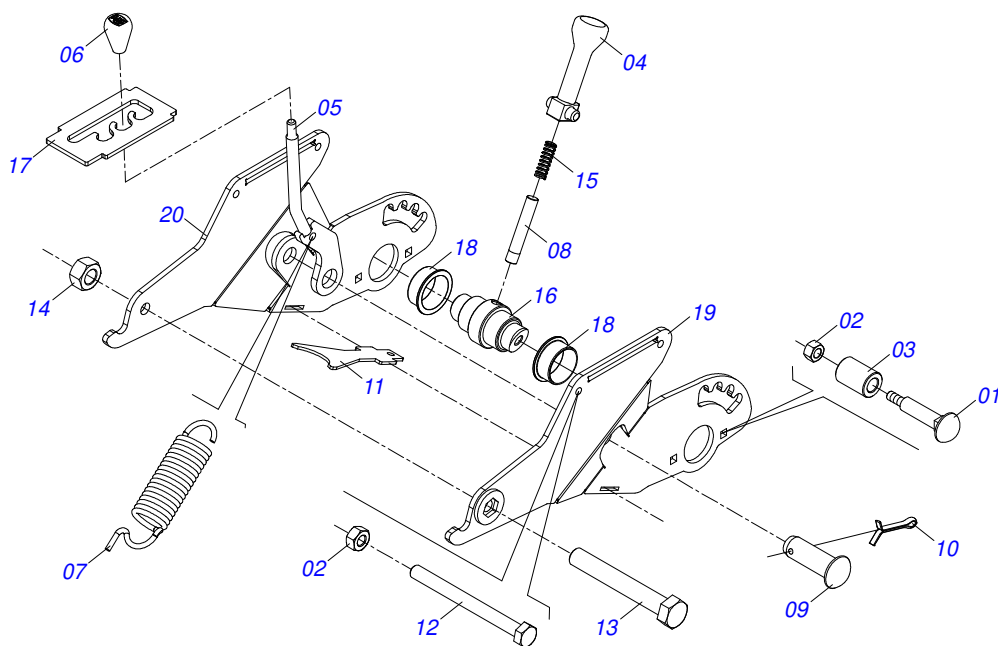


Item	Code	Description	See page	QT
01	0501011753	5/16" X 1-3/4" BOLT	02	
02	0503013816	5/16" LOCKNUT	04	
03	0581015855	SLEEVE	02	
04	0502012877	PRESS WHEEL ADJUSTMENT LEVER	01	
05	0521068661	LEVER	01	
06	0503030878	LEVER CRANK	01	
07	0503031393	1.57" X 5.98" X 0.2" TRACTION SPRING	01	
08	0581019520	AXIS	01	
09	0571812442	COUPLING SHAFT	01	
10	0503010257	1/8" X 1" COTTERPIN	01	
11	0581019511	COVER	01	
12	0503010848	5/16" X 3.1/2" BOLT	02	
13	0503010752	1/2" X 3.1/2" BOLT	01	
14	0503011336	1/2" HEX SELF ADJUSTING NUT	01	
15	0503030190	0.5" X 1.6" X 0.05" SPRING	01	
16	0581019510	AXIS	01	
17	0581019512	PLATE TOP	01	
18	0503019351	LUBRICANT GLOVE	02	
19	0521069591	LEFT SIDE	01	
20	0581019548	RIGHT SIDE BODY	01	

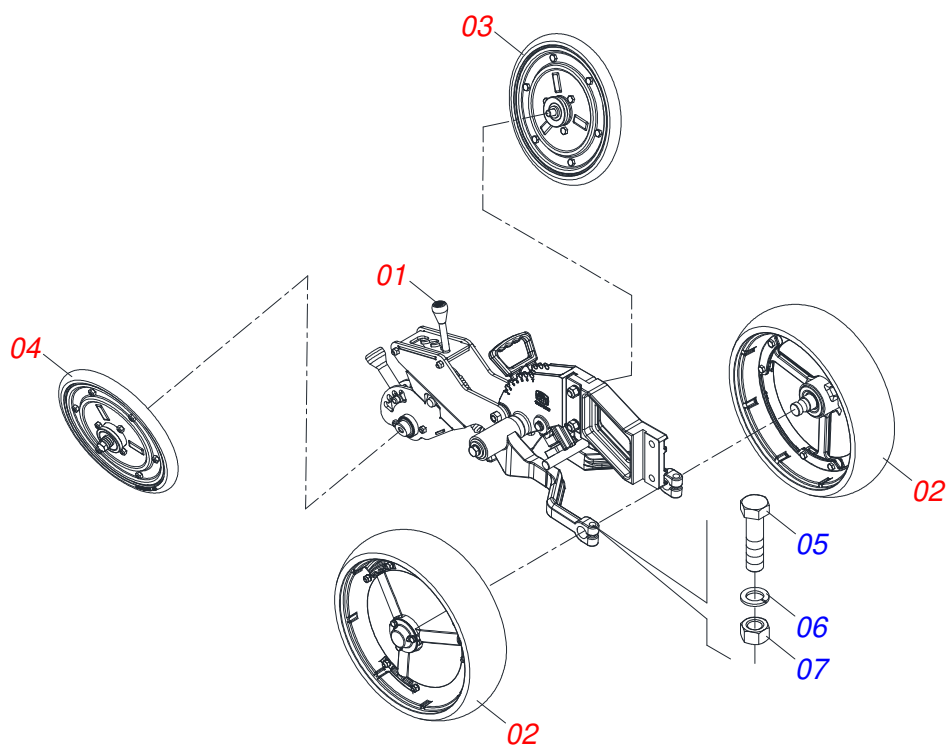


Item	Code	Description	See page	QT
01	0521055065	ASSY DEPTH / COMPACTOR	221	01
02	0521055068	RAYED WHEEL CENTER CLOSED	225	02
03	0521054990	LEFT COMPACTOR WHEEL	209	01
04	0521055017	RIGHT COMPACTOR WHEEL	210	01
05	0503016453	1/2" X 2.1/2 BOLT		02
06	0503010019	1/2" SPRING WASHER		02
07	0503010028	1/2" NUT		02

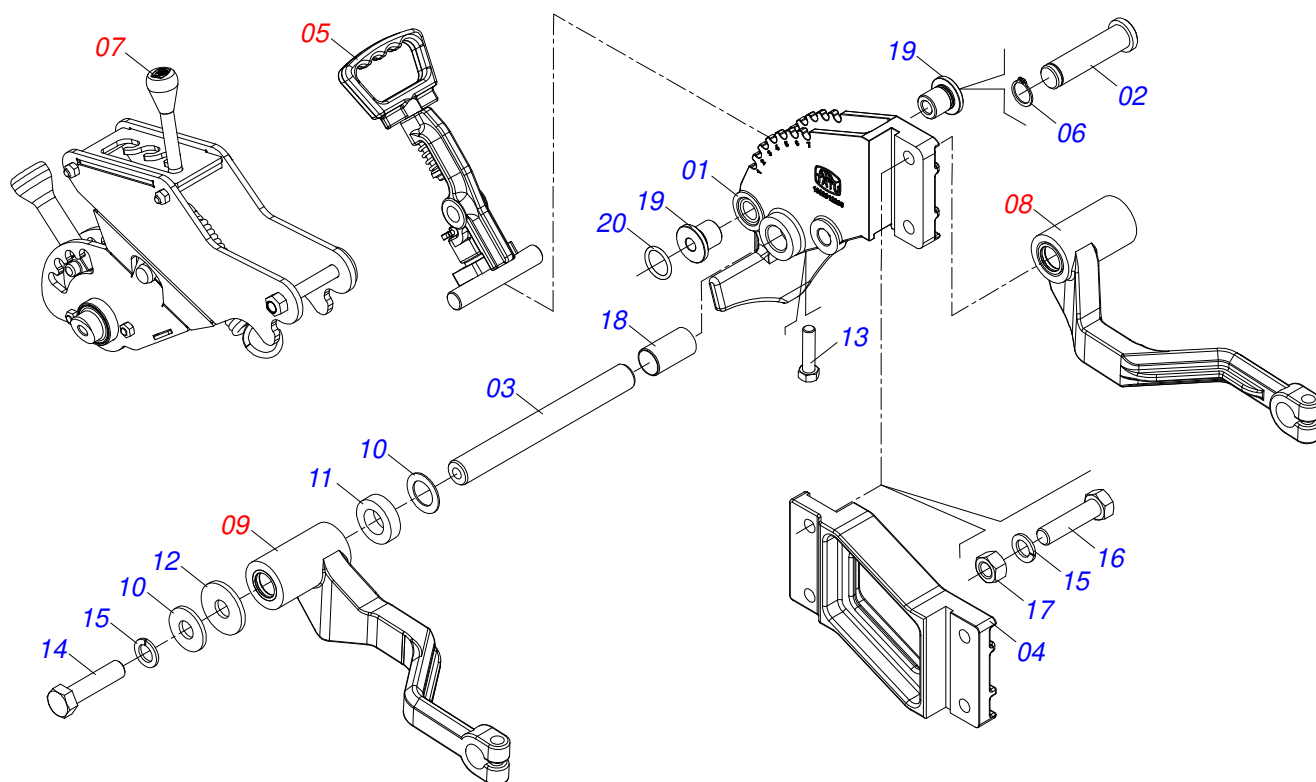


Item	Code	Description	See page	QT
01	0502012283	DEPTH CONTROL SUPPORT		01
02	0521019093	0.6" X 2.7" PIVOT SHAFT		01
03	0571013054	DEPTH CONTROL WHEEL AXLE		01
04	0502012663	EXTENSION		01
05	0501056769	DEPTH WHEELS REGULATOR ASSY	222	01
06	0503019398	AXLE RETAINER RING		01
07	0521055033	SEMI-ASSEMBLED COMPACTOR BODY	206	01
08	0521055054	LEFT ARM WITH SLEEVE	223	01
09	0521055066	RIGHT ARM WITH GLOVE	224	01
10	0511015346	FLAT WASHER		04
11	0571015974	WASHER		02
12	0511017302	FLAT WASHER		02
13	0503010256	3/8" X 3/4" BOLT		01
14	0503010311	1/2" X 1-1/4" BOLT		02
15	0503010019	1/2" SPRING WASHER		04
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0503010060	1/2" NUT		02
18	0503019275	SLEEVE LUBRICATION SYSTEM		01
19	0581019473	ARTICULATED GLOVE		02
20	0503010045	O'RING		02

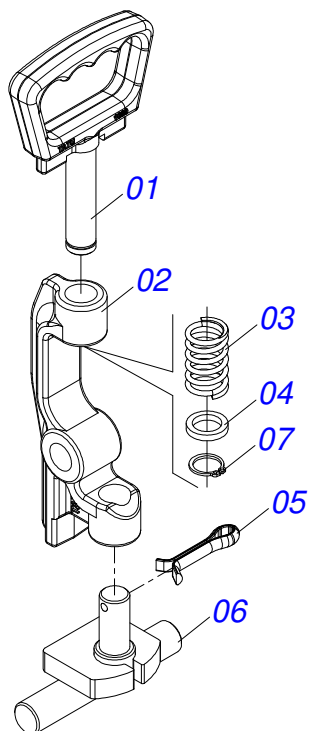


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0502011688	SEED SIST CONTROL DEPTH LEVER		01
03	0503030975	0.9" X 1.5" X 0.1" SPRING		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511065582	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

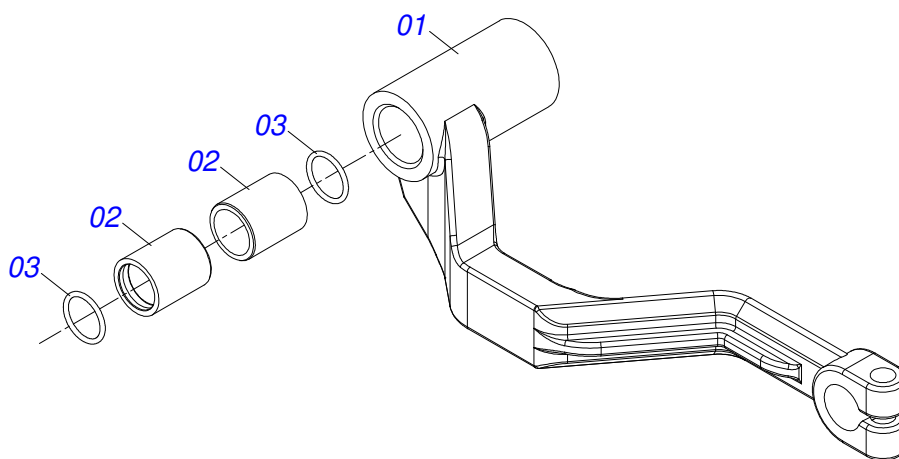


Item	Code	Description	See page	QT
01	0581019523	LEFT ARM WHEEL DEPTH		01
02	0581019514	LUBRICANT GLOVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

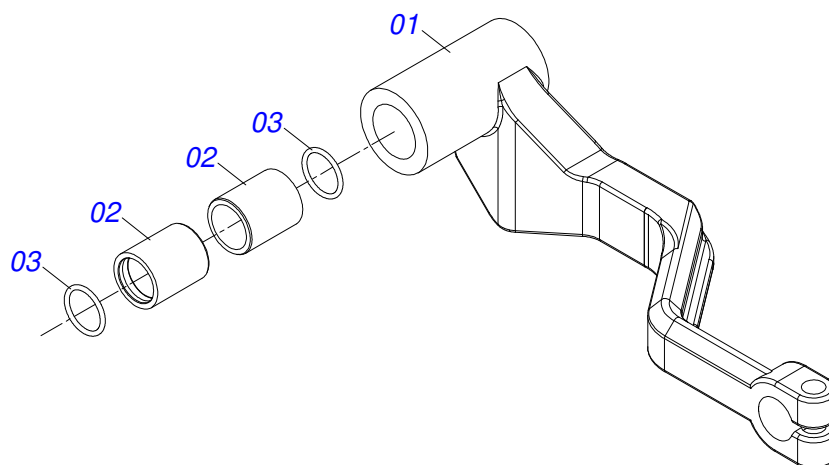


Item	Code	Description	See page	QT
01	0581019524	RIGHT ARM DEPTH		01
02	0581019514	LUBRICANT GLOVE		02
03	0503011109	2-119 N 3006-9B O'RING		02

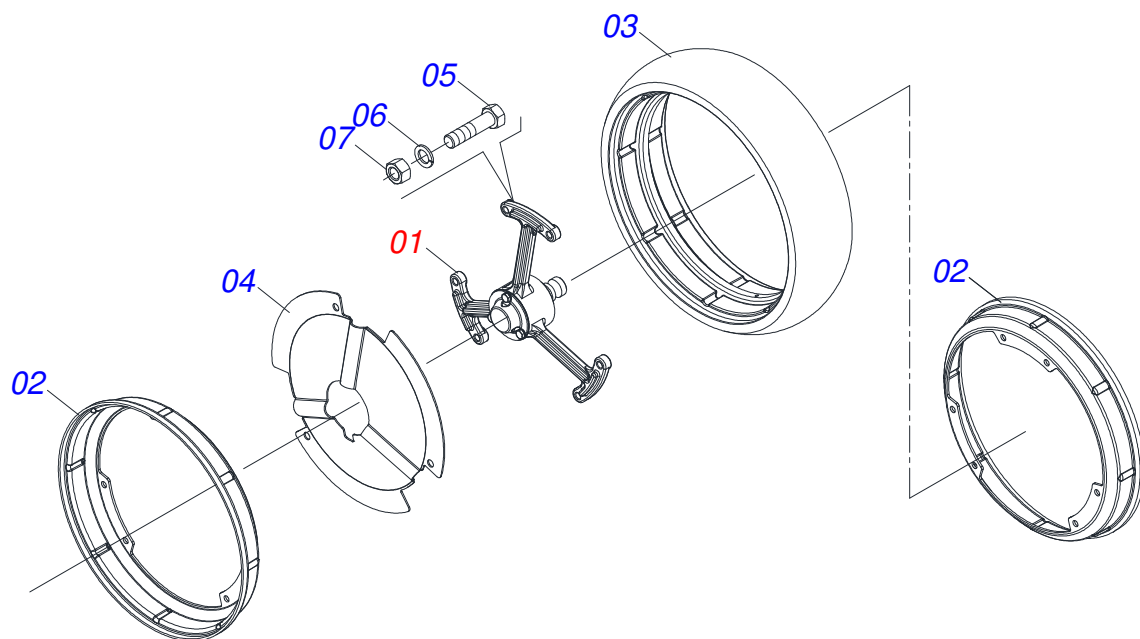


Item	Code	Description	See page	QT
01	0521055055	BOX WHEEL DEPTH COMPLETE WITHOUT LUBRICATION	226	01
02	0551019904	PRESS WHEEL RIM		02
03	0503032970	RUBBER BAND		01
04	0561016889	STRIPED CAP WHEEL DEPTH		01
05	0503010365	NUT		06
06	0503010179	LOCK WASHER		06
07	0503010337	5/16" NUT		06

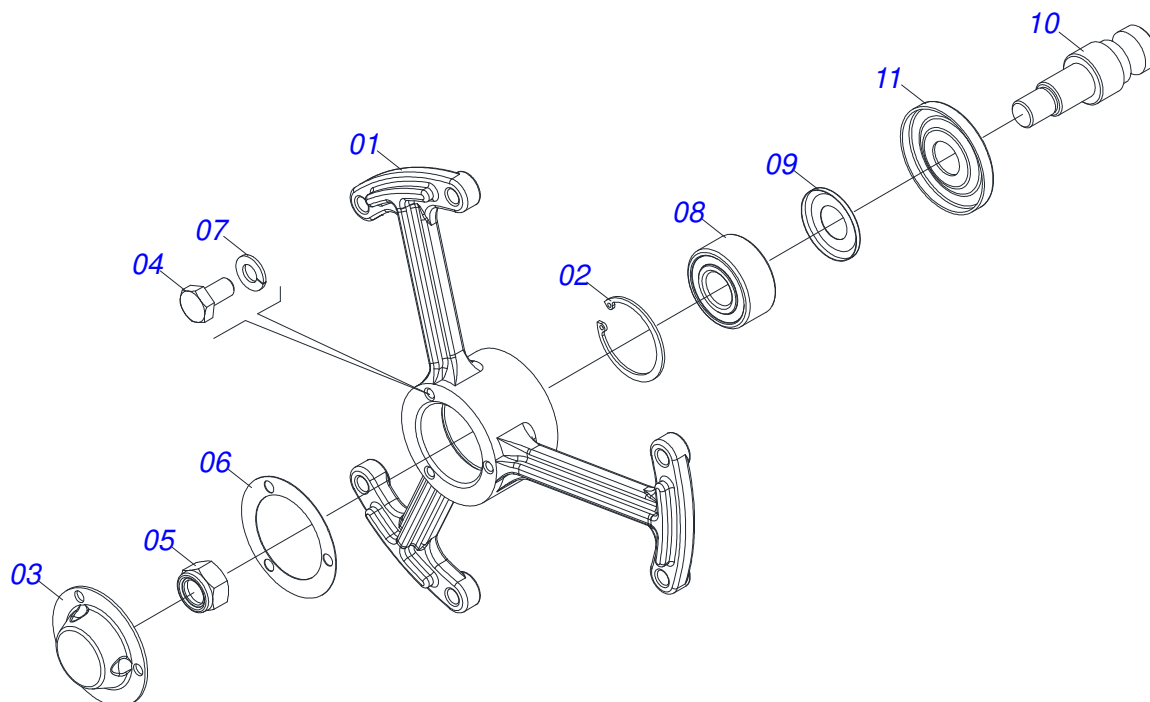


Item	Code	Description	See page	QT
01	0581019522	CASE WHEEL DEPTH WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	COVER DEPTH		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010878	5/8" SELF ALIGNING NUT		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0503010143	1/4" SPRING WASHER		03
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019529	DEPTH REGULATOR SHAFT		01
11	0581019168	POWDER DOOR Ø63,50 X 20,2 X 7,50		01

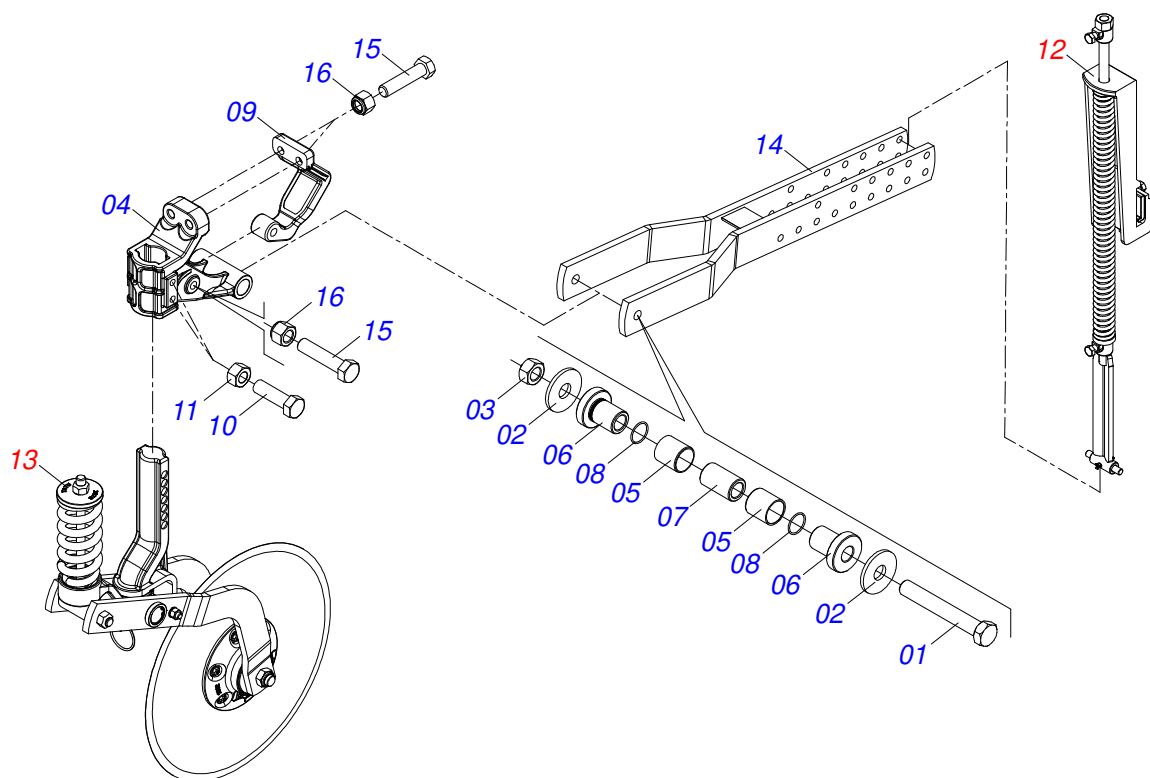

Item	Code	Description	See page	QT
01	0501010066	3/4" X 9" BOLT		01
02	0511017232	FLAT WASHER		02
03	0503011255	3/4" LOCK NUT		01
04	0502012873	SUPPORT DC LINE FERTILIZER		01
05	0503019278	LUBRICANT GLOVE		02
06	0581019195	SIDE GUIDE GLOVE		02
07	0581019196	CENTRAL GUIDE GLOVE		01
08	0503010410	RING		02
09	0502012876	CLAMP		01
10	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN		02
11	0503010013	5/8" NUT		02
12	0521054906	SPRING ASSY FERTILIZER		01
13	0521053231	DPL 20 SHORT LINE WITHOUT LUBRICATION 228 CONICAL BEARING		01
14	0521066231	SHORT FERTILIZER LINE ARM		01
15	0503017857	BOLT 5/8 UNF 4		03
16	0503010811	5/8" UNF SELF ADJUSTING NUT		03

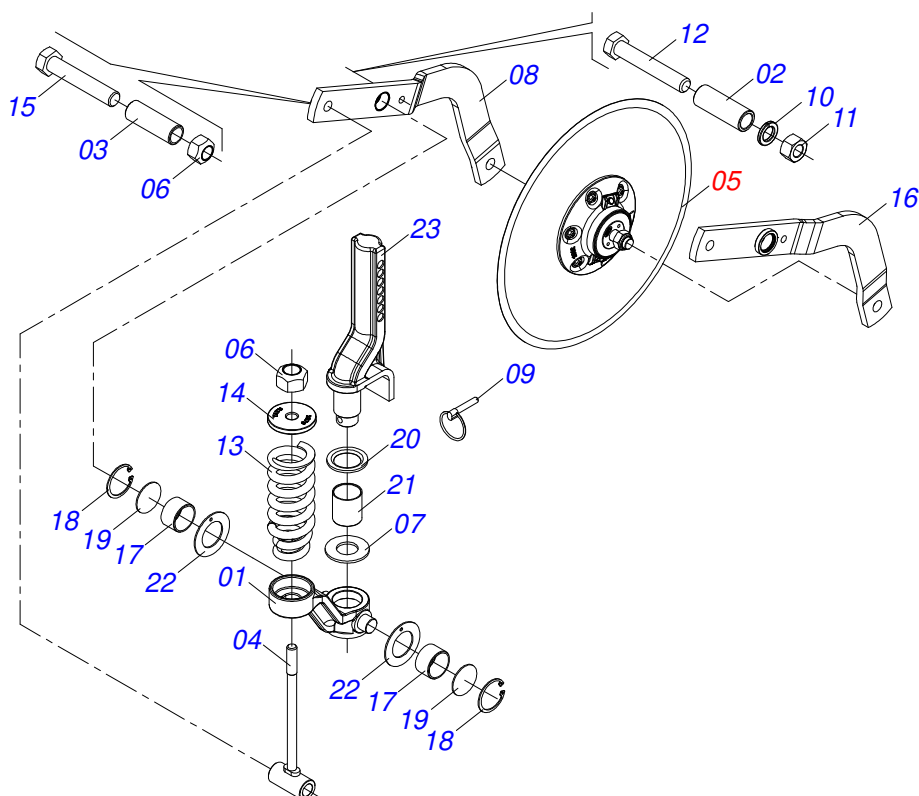


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT WITHOUT LUBRICATION		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	229	01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	WASHER BRACKET AXIS DC PST		01
08	0521068887	DC RIGHT ARM WITH GLOVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2" NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH GLOVE		01
17	0503019272	LUBRICANT GLOVE		02
18	0503010390	SEAL RING		02
19	0581017628	COVER		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012825	SHAFT FIXING SHAFT CUT LINE SHORT		01

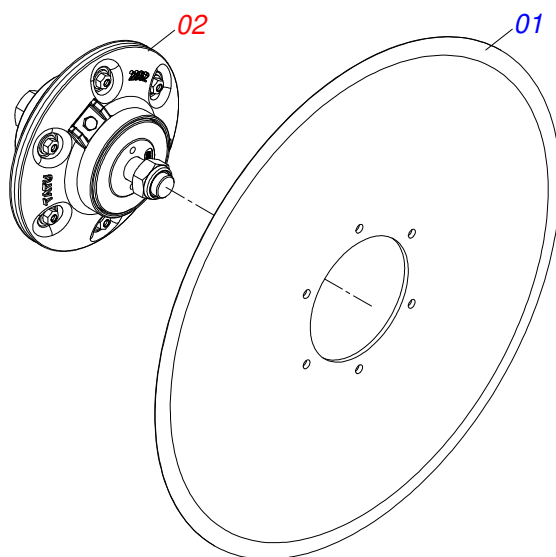


Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521053697	CUTTING DISK BOX	230	01

CUTTING DISK BOX


0521053697

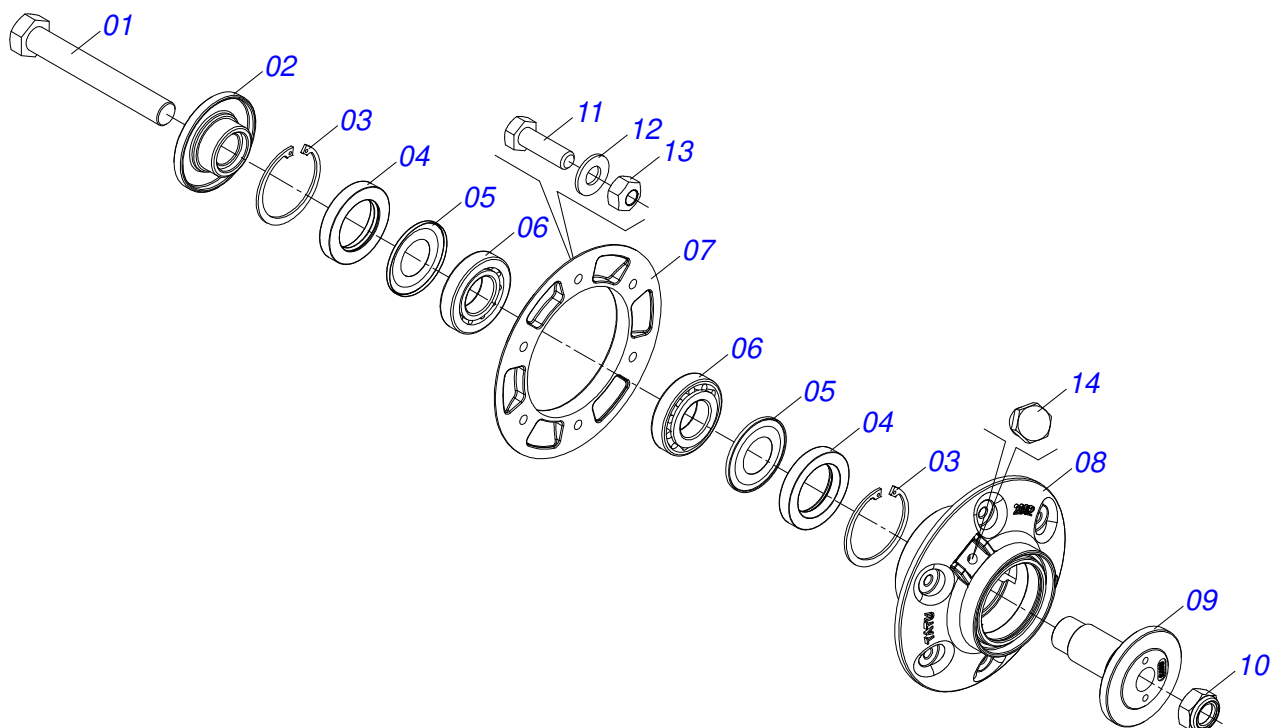


Item	Code	Description	See page	QT
01	0503019283	SCREW 7/8 UNF X 6.1/4		01
02	0502040872	REGULATORY NUT		01
03	0503010370	502072 CLAMPING RING (FOR AXLE)		02
04	0503010590	00674-B SEAL		02
05	0503019285	RING		02
06	0503012170	30207 ROLLER BEARING		02
07	0502020641	BLADE DISC FLANGE		01
08	0502012862	CUTTING DISK BOX		01
09	0502040873	CUTTING DISC AXLE		01
10	0503017755	NUT		01
11	0503018825	5/16 UNC UNC BOLT		06
12	0501010694	FLAT WASHER		06
13	0503013816	5/16" LOCKNUT		06
14	0511017907	1/8" BSPT X 6 PLUG		02

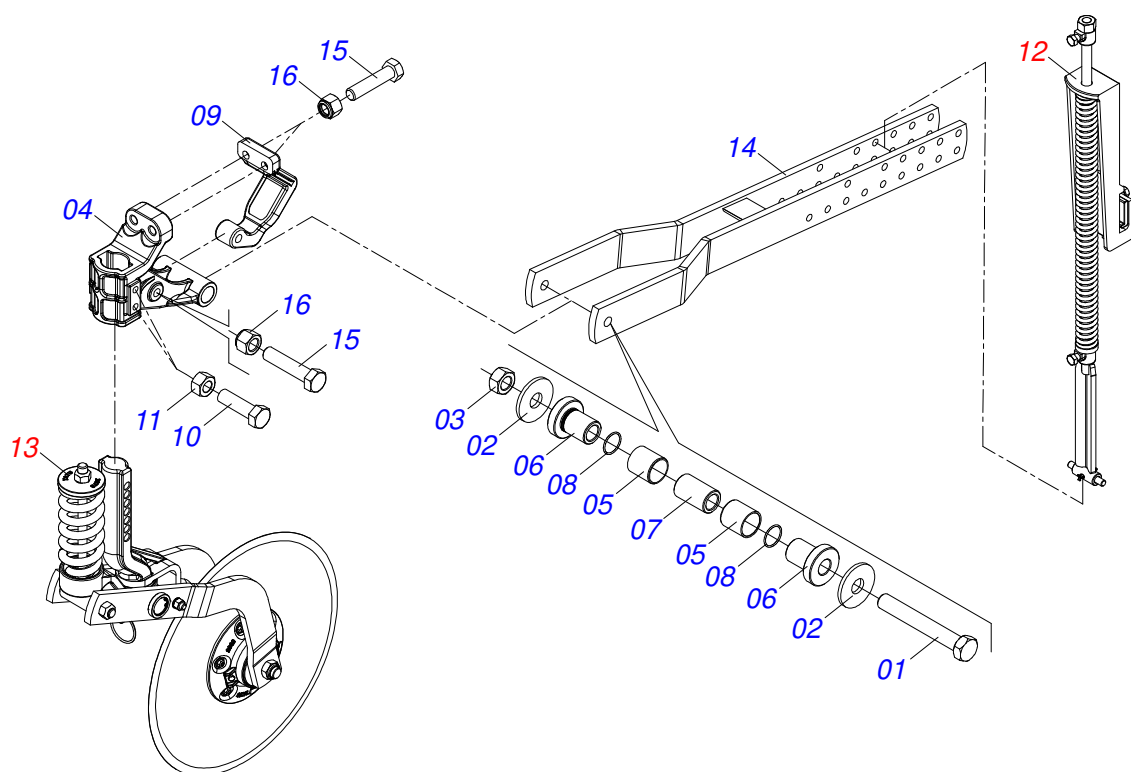

Item	Code	Description	See page	QT
01	0501010066	3/4" X 9" BOLT	01	
02	0511017232	FLAT WASHER	02	
03	0503011255	3/4" LOCK NUT	01	
04	0502012873	SUPPORT DC LINE FERTILIZER	01	
05	0503019278	LUBRICANT GLOVE	02	
06	0581019195	SIDE GUIDE GLOVE	02	
07	0581019196	CENTRAL GUIDE GLOVE	01	
08	0503010410	RING	02	
09	0502012876	CLAMP	01	
10	0503019116	BOLT 5/8 UNC X 2.1/4 C S RT PC G.5 ZN	02	
11	0503010013	5/8" NUT	02	
12	0521054906	SPRING ASSY FERTILIZER	01	
13	0521053232	DPL 20 LONG LINE WITHOUT LUBRICATION 232 CONICAL BEARING	01	
14	0521066230	LONG FERTILIZER LINE ARM	01	
15	0503017857	BOLT 5/8 UNF 4	03	
16	0503010811	5/8" UNF SELF ADJUSTING NUT	03	

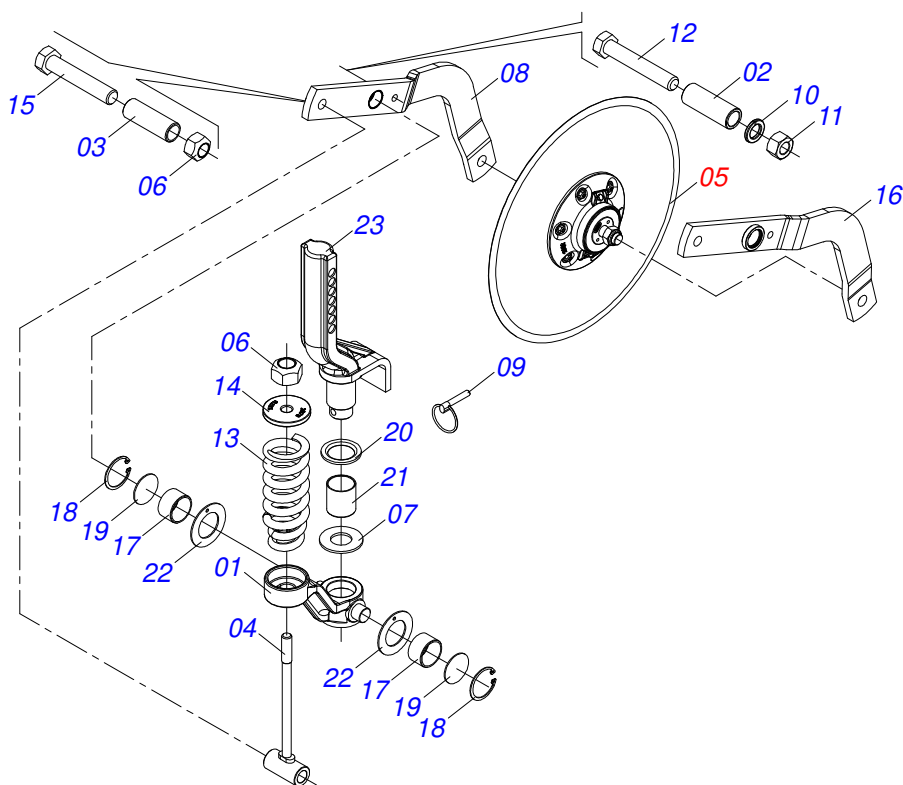


Item	Code	Description	See page	QT
01	0581017651	DISC LUBRICATION SUPPORT WITHOUT LUBRICATION		01
02	0571010188	13,50 X 19 X 86,30/86 SLEEVE		01
03	0521010452	SLEEVE		01
04	0501067323	SPRING REGULATOR		01
05	0521053248	CUTTING DISK BOX 20 CONICAL ROLLING	229	01
06	0503011255	3/4" LOCK NUT		02
07	0581011111	WASHER BRACKET AXIS DC PST		01
08	0521068887	DC RIGHT ARM WITH GLOVE		01
09	0503034319	LOCK PIN		01
10	0503010019	1/2" SPRING WASHER		01
11	0503010060	1/2" NUT		01
12	0503011411	1/2" X 5-1/2" BOLT		01
13	0503034498	SPRING		01
14	0502012878	WASHER		01
15	0503013185	3/4" X 5-1/2" BOLT		01
16	0521068892	LEFT DC ARM WITH GLOVE		01
17	0503019272	LUBRICANT GLOVE		02
18	0503010390	SEAL RING		02
19	0581017628	COVER		02
20	0581017652	WASHER		01
21	0503019271	SELF LUBRICATING BUSHING		01
22	0503019274	WASHER		02
23	0502012824	FIXING SHAFT DISC CUT LINE		01

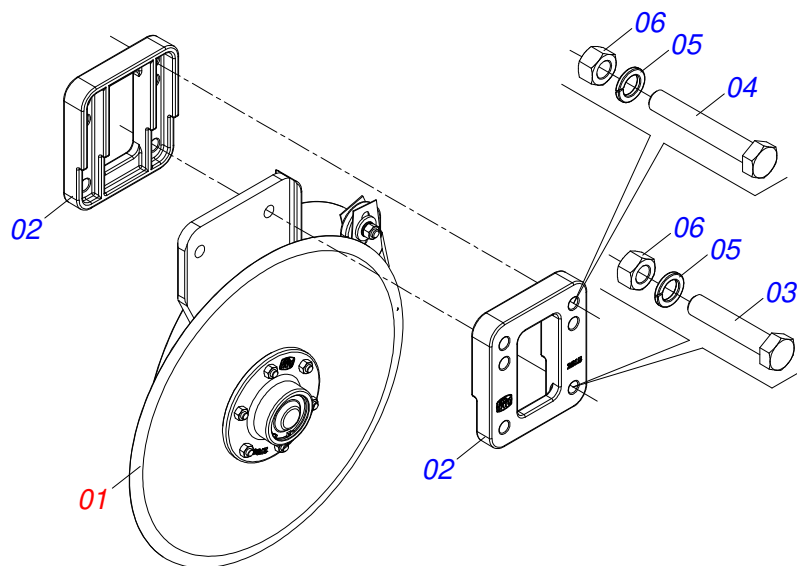


Item	Code	Description	See page	QT
01	0521055869	LEFT DUAL FERTILIZER DISC	234	01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2" NUT		04

LEFT DUAL FERTILIZER DISC

0521055869

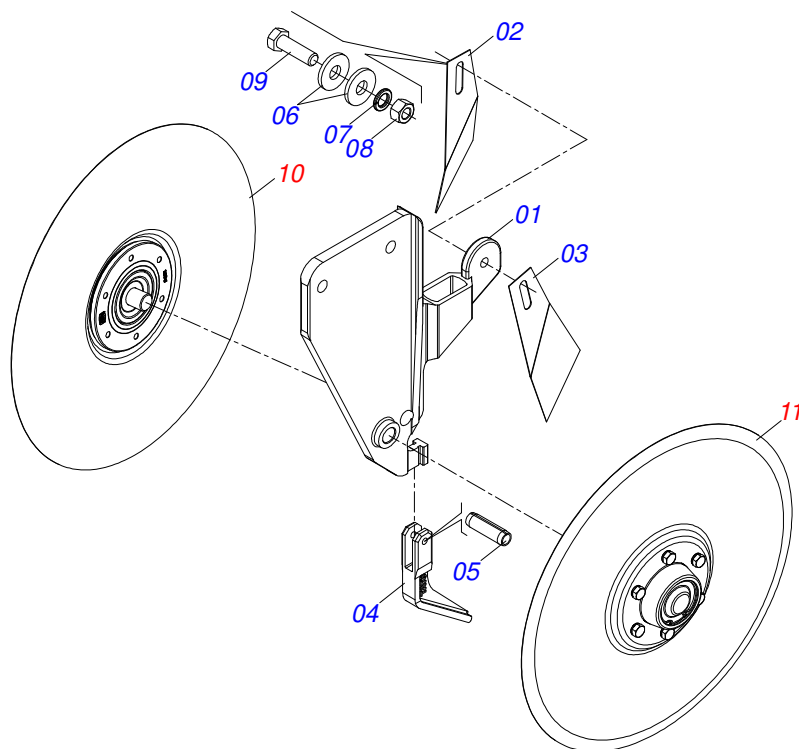


Item	Code	Description	See page	QT
01	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	FLAT WASHER		02
07	0503010025	3/8" SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 194 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 196 FERTILIZER / SEED		01

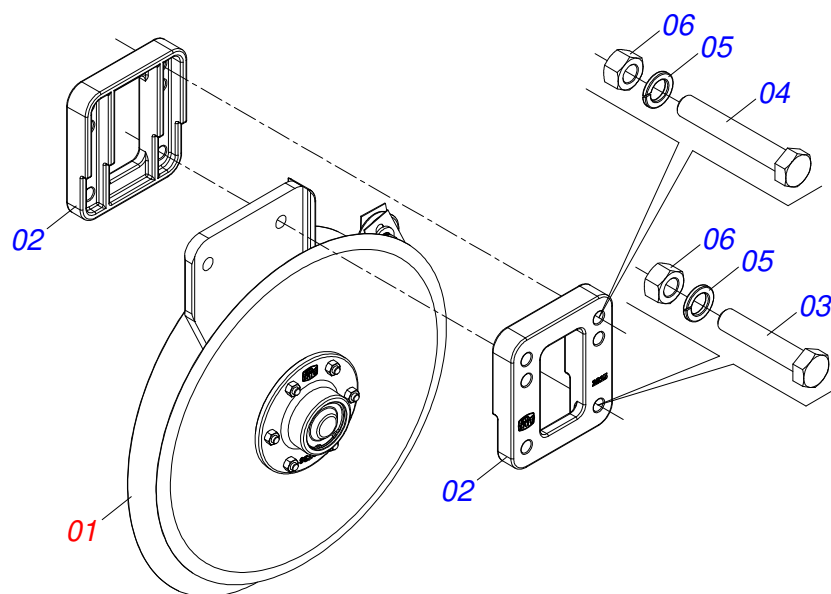


Item	Code	Description	See page	QT
01	0521055868	RIGHT DUAL FERTILIZER DISC	236	01
02	0502012815	DOUBLE-DISC SPACING PLATE		02
03	0503010479	BOLT		02
04	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
05	0503010019	1/2" SPRING WASHER		04
06	0503010060	1/2" NUT		04

RIGHT DUAL FERTILIZER DISC


0521055868

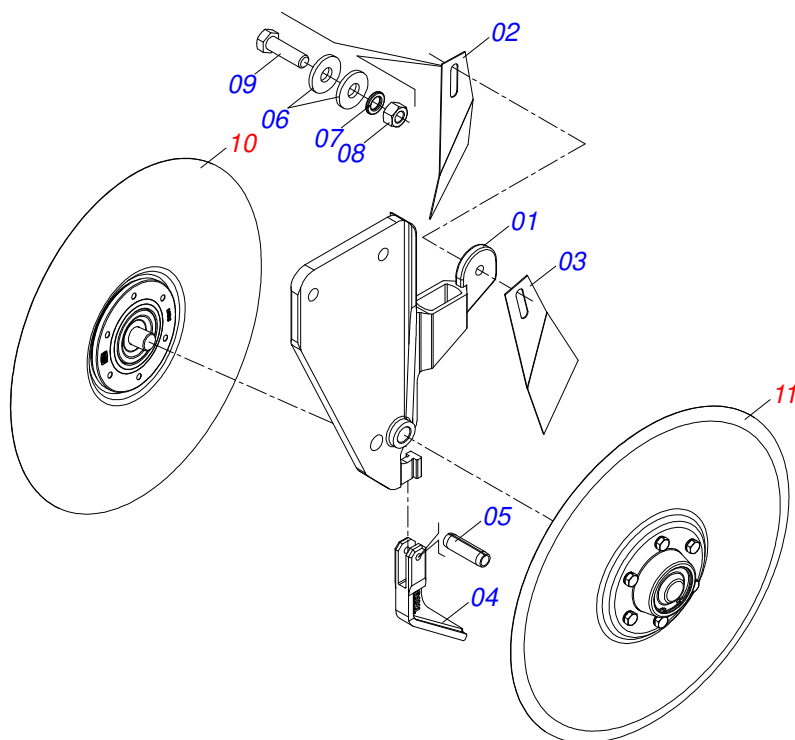

Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	FLAT WASHER		02
07	0503010025	3/8" SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 194 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 196 FERTILIZER / SEED		01

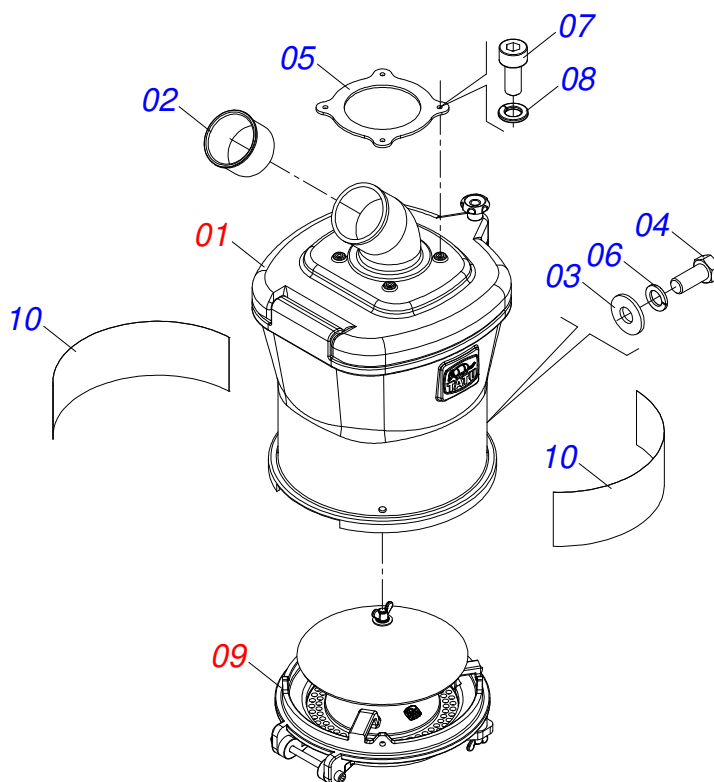


Item	Code	Description	See page	QT
01	0503063223	SEMI-ASSEMBLED SINGLE SIGMA SEED BOX		01
02	0581014295	FIXING GLOVE		01
03	0503012545	FLAT WASHER		04
04	0503014442	BOLT		04
05	0591015106	SEED NOZZLE FIXING FLANGE		01
06	0513010192	LOCK WASHER		04
07	0513010191	BOLT		04
08	0503012534	LOCK WASHER		04
09	0531051514	SIGMA SOY SEED SYSTEM	238	01
10	0503035691	ADHESIVE LABEL		02

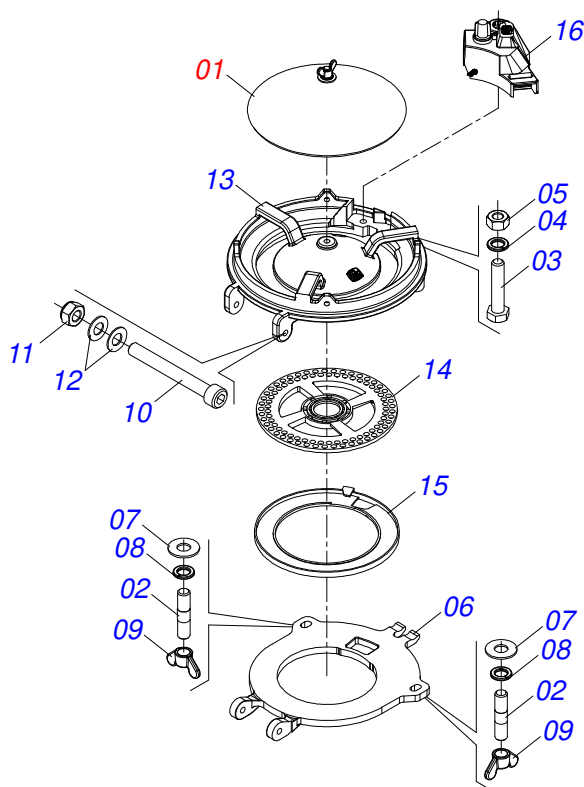


Item	Code	Description	See page	QT
01	0511057289	ASSY SEED DEFLECTOR	239	01
02	0503030083	3/8" X 3/8" X 1.6" STUD		02
03	0503010675	5/16" X 2.1/4" BOLT		01
04	0503010179	LOCK WASHER		01
05	0503010337	5/16" NUT		01
06	0502012974	LOWER SEED DISK TRACK		01
07	0501013518	FLAT WASHER		02
08	0503010025	3/8" SPRING WASHER		02
09	0503010209	3/8" UNC BUTTERFLY NUT		02
10	0503016282	ALLEN BOLT		01
11	0503019913	SELF-LOCKING NUT W/ NYLON M8 X 1.25 C.8 ZN		01
12	0503035299	PLATE SPRING 16 X 8.2 X 0.90		02
13	0591018706	SEED BOX SUPPORT		01
14	0513010140	SOYA DISK SOCIDISC 90 HOLES		01
15	0513010161	SOCIDISCO RING FOR SOY 0,8MM AZCSOJAR08-002461		01
16	0503063405	SOY SEED DISTRIBUTOR BOX		01

ASSY SEED DEFLECTOR

0511057289

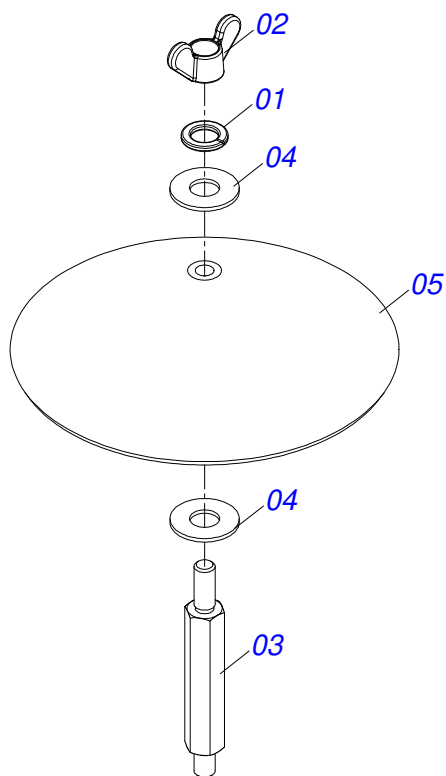


Item	Code	Description	See page	QT
01	0503010025	3/8" SPRING WASHER		01
02	0503010209	3/8" UNC BUTTERFLY NUT		01
03	0571018536	HEX PRISONER		01
04	0501013518	FLAT WASHER		02
05	0503034131	DEFLECTOR		01

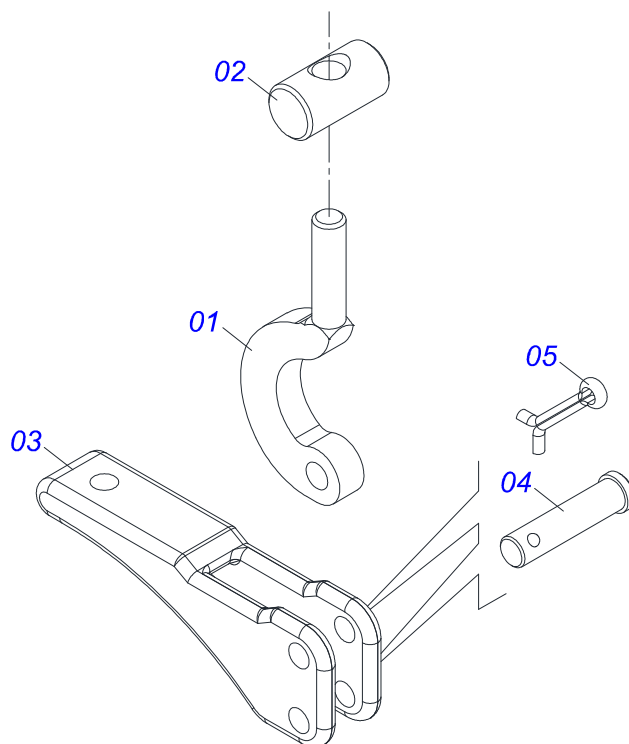

Item	Code	Description	See page	QT
01	0571011803	PRISONER CLOSE FAST		01
02	0571011804	FAST BOLT ADJUSTMENT		01
03	0502012744	SPEED LOCK LEVER ASSY		01
04	0571014024	FAST BOLT GUIDE AXLE		02
05	0503010140	1/8" X 3/4" COTTERPIN		02

SCARING ROD


0521053946

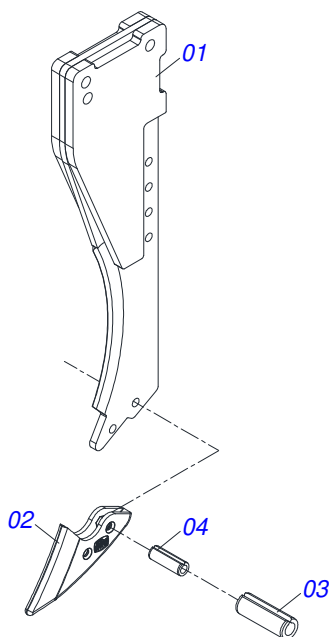


Item	Code	Description	See page	QT
01	0521065998	SCARIFIER SPINDLE		01
02	0502070085	FIXED ROD BEARING		01
03	0513010288	ELASTIC PIN 701211 10 X 24		02
04	0513010289	ELASTIC PIN 701211 10 X 24		02

AUTOMATIC DISARMING ROD


0521053947

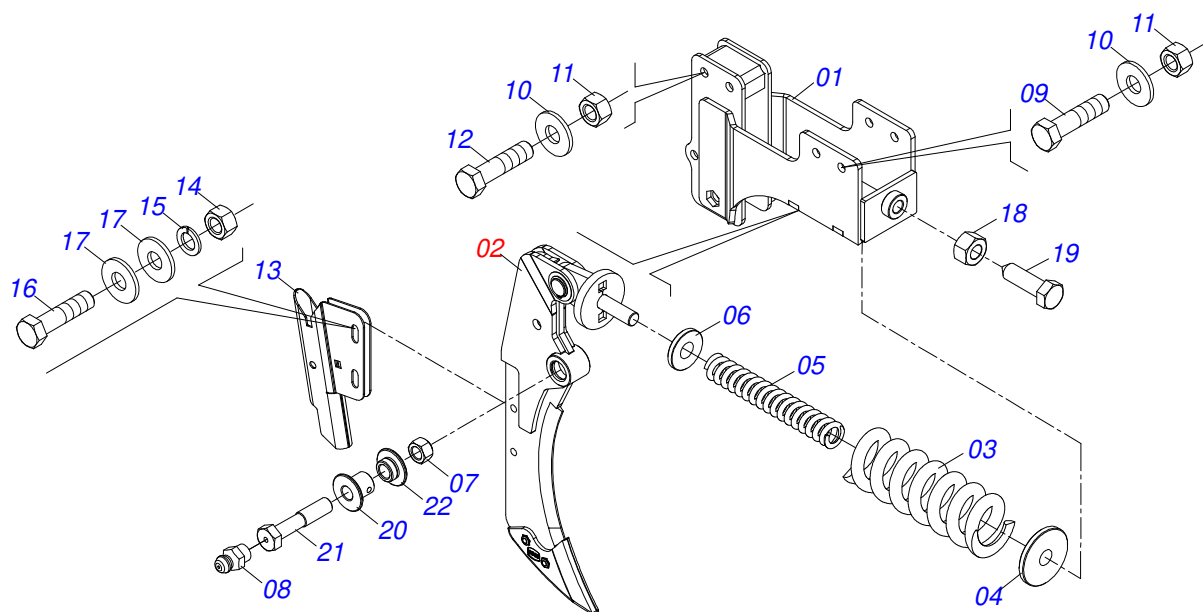


Item	Code	Description	See page	QT
01	0521068567	BOX SPRING		01
02	0521053951	STEM	243	01
03	0503034106	80 X 230 X 16,50 HDA COMPRESSION SPRING		01
04	0581012094	SUPPORT WASHER		01
05	0503033624	35 X 215 X 7,14 COMPRES SPRING		01
06	0571019462	SUPPORT GUIDE PRING		01
07	0503012795	5/8" HEX SELF ADJUSTING NUT		01
08	0503010691	1/4" GREASE FITTING		01
09	0503010384	1/2" X 5" BOLT		02
10	0511017302	FLAT WASHER		04
11	0503011336	1/2" HEX SELF ADJUSTING NUT		04
12	0503017874	BOLT 1/2 UNC		02
13	0571018541	BODY SOCKET FERTILIZER		01
14	0503010026	3/8" NUT		02
15	0503010025	3/8" SPRING WASHER		02
16	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
17	0501010984	FLAT WASHER		04
18	0503010417	7/8" NUT		01
19	0503017058	HEX 7/8 UNC X 3 CSRT PC G.5 ZN		01
20	0581012084	ARTICULATED GLOVE		01
21	0581012082	SCREW		01
22	0581012081	GLOVE		01

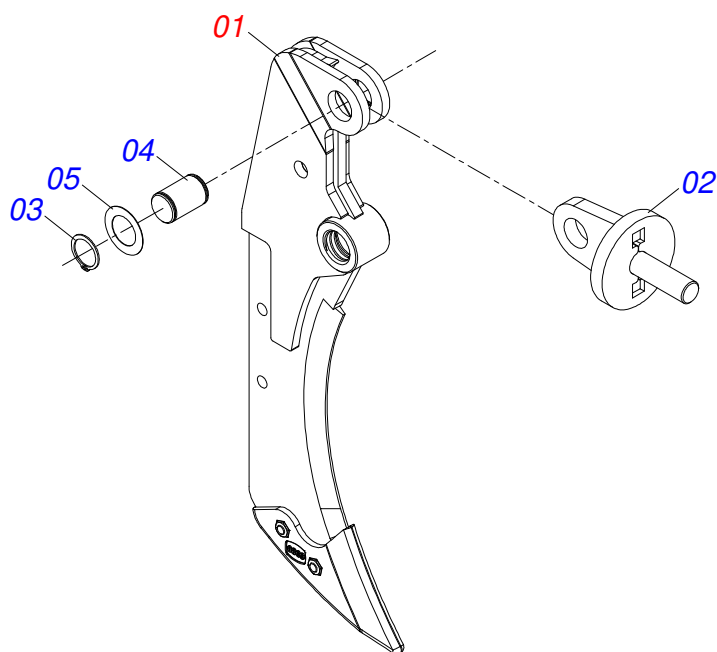


Item	Code	Description	See page	QT
01	0521053932	ROD WITH BEAK 0869	244	01
02	0521067065	FLANGE WASHER SPRING		01
03	0503010406	501025 CLAMPING RING (FOR AXLE)		02
04	0581012092	AXLE FIXER		01
05	0521015818	FLAT WASHER		02

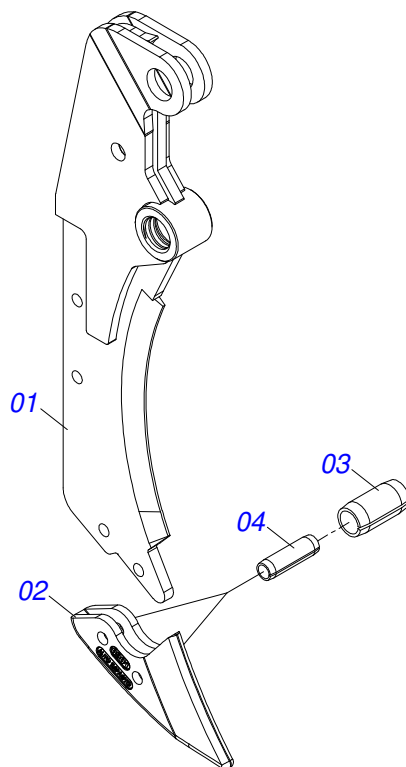

Item	Code	Description	See page	QT
01	0521067523	STEM WITHOUT BEAK DISARM		01
02	0502040901	FIXED ROD NOZZLE		01
03	0503016853	SPRING PIN		02
04	0503011402	0.2" X 0.8" SPRING PIN		02

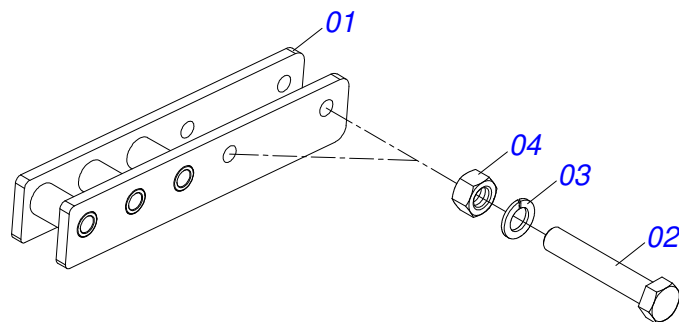

Item	Code	Description	See page	QT
01	0521068467	FIXED ROD EXTENSION		01
02	0503010479	BOLT		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2" NUT		02

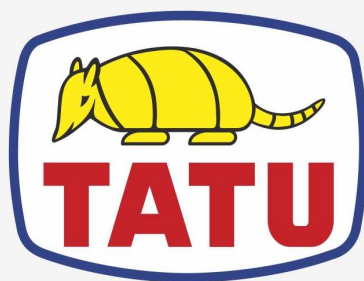

MARCHESAN

Technical Publications | Elaboration and Revision

LORENA ROCHA ALVES

www.marchesan.com.br

